

Parts Catalogue

Model : T754SC



TYM www.tym.co.kr
TONGYANG MOOLSAN CO., LTD.

 
Important tips of Parts Catalogue

We thank you for your purchasing our product, manufactured under strict quality control, by gathering plenty of experiences and new technology, designed for a comfort and pleasant work.

1. Part Composition

This catalogue deals with engine and chassis.

Detailed classifications are listed in the following page.

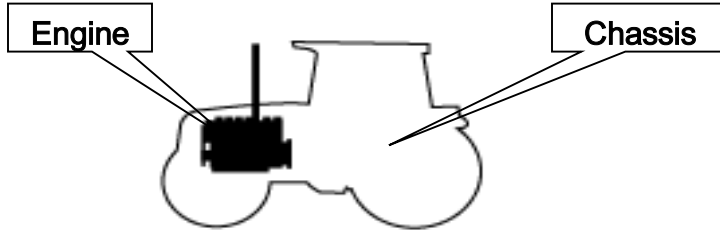

2. For locating parts easily, Please Note:

If you know the assembly where the part is used.

- Refer to the relevant figure from the identifying group symbol illustration,
- Locate the relevant chapter
- Refer to the particular chapter desired.

3. For ordering parts

To obtain spare parts please contact your nearest dealer and give him the details listed below.

- ① Tractor Model : Tractor T653
- ② Tractor Serial Number : W050000
- ③ Part Number : 16001032000
- ④ Description : Air cleaner assembly
- ⑤ Quantity required: 1



4. For ordering PARTS CATALOGUE

This is Priced item and one is to order the same on part No. 1996 950 001 0

This supersedes all our editions.

Note) When replacing parts, please use original spare parts to be sure of the performance and the longer life of the product

※ The information in this catalogue may at any time be modified without a prior notice for the improvement of performance, please consult our spare parts dept. for the detailed inquiry.

5. How to use parts catalogue

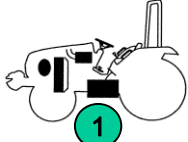 
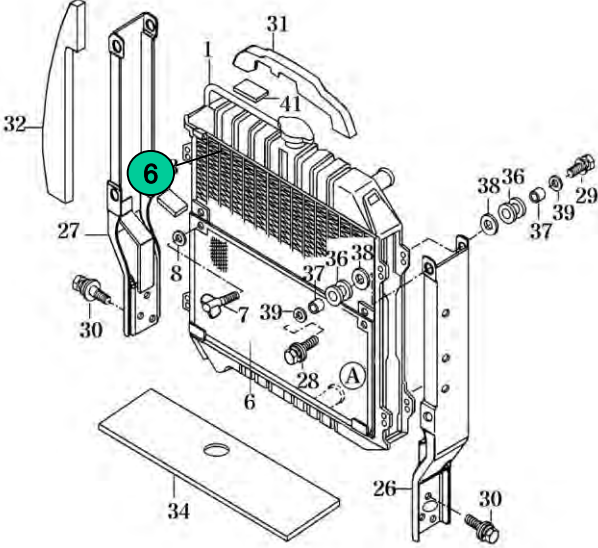 
FIG 021 2	3 RADIATOR	P1 4	Year 5 2016	
				
NOTE	13			

FIG 021		RADIATOR				P1	Year	
2	3	4	5	2016				
KEY NO	PART NO	PART NAME	SPEC	QTY	REPAIR	E/G SERIAL NO	REMARKS	
023 001	14571042001	RADIATOR SET		1				
023 002	14571042101	RADIATOR SET		1				
023 003	14571042171	SHROUD		1				
023 006	14571042011HB	NET COMP						
023 007	V271042012	BOLT, WING	M6X12					
NOTE		13						

- ① Group Indication : Indicate the relevant location of the part with a symbol illustration.
- ② Figure Number: Indicate the relevant section of the machine with a figure number.
- ③ Section Name : Indicate the section name of the machine
- ④ Section Page : Page number of the section in this catalogue.
- ⑤ Date : Show the Year of the section made or updated

⑥ Key number : Indicating number of each parts in the illustration.

⑦ Part Number : Unique part number maintained in our system

The part number starting with V or M means it is TYM s standard part

The alphabet at the end of part number means the status of material or the color of paint

Legend : M:Machining, DG:Dark Gray, BR:Bright Red, SW:Summer White,
PB:Pure Black, GB:Glossy Black, SR:Super Red, MS:Metallic Silver
DD:Heat proof Black, TY: Tangerine Yellow etc.

⑧ Description : Description of a part, Abbreviation means as follows.

- Indicate the mixture condition of a part

ASSY : Assembly with a mixture of several parts, so can be broke up retaining their original form

COMP : Assembly with a mixture of several parts, but can not be broke up retaining their original form

SUB : mean the same as ASSY but used in lower level in aid.

SET : Part consist of ASSY, COMP, and part(s) as a group

- Indicate the location of a part

LH: Left, RH: Right, FR: Front, RR: Rear, UPR: Upper, LOW: Lower

⑨ Type : Type of the standard items like bolt or nut

⑩ Quantity : Total quantity of the part referred to in the page.

Symbol below indicate options. So, show the quantity of each option.

Note) AR means as requested quantity.

⑪ Repair Parts consumption frequency class: indicate the level of a part in aid of stocking spares, anticipating the service requirements.

A :Fast moving part(frequently required)

B :Medium moving part (sometimes required)

C :Slow moving part(rarely required)

⑫ Modification :

 
Year/Month~ : From which the change starts

~ Year/Month : To which the part installed


⑬ Notes : explain some reference data

⑭ Remark : indicate reference data or abbreviation in the content.


ENGINEERING GROUP INDEX

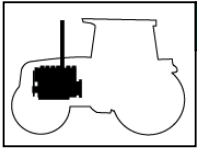


1 ENGINE

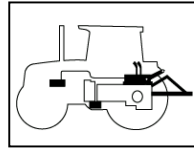 


6 HYDRAULICS & 3-POINT LINK

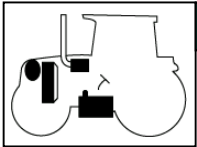 


2 ENGINE ACCESSORIES & CONTROL

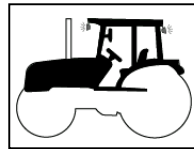 


7 SHEET METAL & CABIN

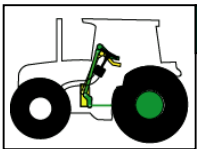 


3 CLUTCH, BRAKE, STEERING

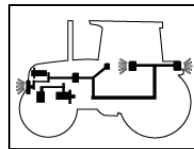 


8 ELECTRICALS & HARNESS

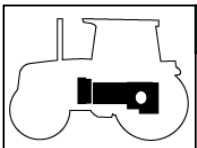 

4 TRANSMISSION & REAR AXLE

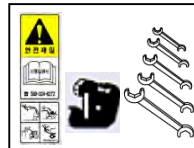 

9 WEIGHT, LABEL, TOOLS

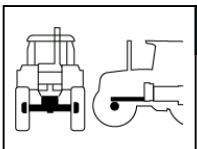 

5 FRONT AXLE, SUPPORTER & DRIVE SHAFT

067 020	12305180020
077 036	12403160020
036 005	13022250030
037 010	13022250131
041 005	13022250232
046 002	13022250333

10 NUMERICAL INDEX

CONTENTS

ENGINE

1 ENGINE

FIG 01 0512 4184, 0512 4259, 0512 4281, 0512 4051-----	04
FIG 02 0512 4368-----	06
FIG 05 0512 4036, 0512 4130, 0512 4238, 0512 4321-----	08
FIG 06 0512 4003-----	10
FIG 07 0512 4005-----	12
FIG 08 0512 4312, 0512 4050, 0512 4246-----	14
FIG 09 0512 4044, 0512 4320, 0512 4406-----	16
FIG 10 0512 4284-----	18
FIG 11 0512 4004, 0512 4045, 0512 4046-----	20
FIG 14 0512 4027-----	22
FIG 15 0512 4120, 0506 4400, 0512 4000-----	24
FIG 16 0512 4261-----	26
FIG 17 0512 4052-----	28
FIG 19 0512 4047-----	30
FIG 20 0512 4224-----	32
FIG 21 0512 4009, 0512 4008, 0512 4299-----	34
FIG 22 0512 4345, 0512 4392-----	36
FIG 27 0511 8909-----	38
FIG 37 0512 4331-----	40
FIG 38 0512 4055-----	42
FIG 41 0512 4143, 0512 4058, 0512 4097, 0512 4257-----	44
FIG 43 0512 4384-----	46
FIG 44 0512 4062, 0512 4256, 0512 4393, 0512 4400-----	48
FIG 48 0511 7723, 0512 4011, 0512 4098, 0512 4127, 0512 4292-----	50
FIG 48 0512 4128, 0512 4293, 0512 4334, 0512 4338, 0512 4343-----	52
FIG 51 0512 4060, 0512 4104, 0512 4300, 0512 4329-----	54
FIG 63 0512 4010-----	56
FIG 83 0512 4176, 0512 4180, 0512 4251, 0512 4337, 0512 4339, 0512 4340, 0512 4344-----	58
FIG 90 0512 4355-----	60

CHASSIS

2 ENGINE ACCESSORIES & CONTROL

FIG 201 AIR CLEANER-----	66
FIG 202 RADIATOR-----	68
FIG 203 MUFFLER & EXHAUST PIPE -----	70
FIG 204 FUEL TANK-----	72
FIG 205 FUEL FILTER & FUEL PUMP-----	74
FIG 206 OIL COOLER-----	76

3 CLUTCH,BRAKE,STEERING

FIG 301 CLUTCH-----	82
FIG 302 CLUTCH PEDAL-----	84
FIG 303 BRAKE PEDAL & LINK -----	88
FIG 304 FRONT WHEEL -----	90
FIG 305 REAR WHEEL-----	92
FIG 306 POWER STEERING WHEEL-----	94
FIG 307 POWER STEERING VALVE-----	96
FIG 308 POWER STEERING CYLINDER-----	98
FIG 309 HAND BRAKE & BRAKE-----	100

4 TRANSMISSION & REAR AXLE

FIG 401 CASE , RR TRANSMISSION-----	106
FIG 402 SUB CHANGE GEARS-----	108
FIG 403 REAR DIFFERENTIAL GEARS-----	110
FIG 404 P.T.O CHANGE GEARS-----	112

FIG 405 P.T.O CHANGE SHIFTER-----	114
FIG 406 HOUSING , RR AXLE-----	116
FIG 407 P.T.O DRIVE SHAFT-----	118
FIG 408 CREEP CHANGE-----	120
FIG 409 INPUT & COUNTER GEARS-----	122
FIG 410 CHANGE GEARS-----	124
FIG 411 REVERSE GEARS-----	126
FIG 412 MAIN CHANGE LEVER-----	128
FIG 413 SUB CHANGE LEVER-----	130
FIG 414 TRANSMISSION MID CASE-----	132
FIG 415 SUB CHANGE SHIFTER-----	134
FIG 416 4WD CHANGE LEVER-----	136
FIG 417 TRANSMISSION FRONT CASE-----	138

5 FRONT AXLE

FIG 501 FRONT AXLE SUPPORT-----	144
FIG 502 FRONT DRIVE SHAFT-----	146
FIG 503 FRONT AXLE HOUSING-----	148
FIG 504 FRONT DIFFERENTIAL GEARS-----	150
FIG 505 FRONT GEAR CASE (1)-----	152
FIG 506 FRONT GEAR CASE (2)-----	154
FIG 507 FRONT GEAR CASE (3)-----	156

6 HYDRAULICS & 3-POINT LINK

FIG 601 CYLINDER CASE-----	162
FIG 602 LIFT ARM-----	164
FIG 602A LIFT ARM(EUA)-----	166
FIG 603 CYLINDER-----	168
FIG 604 POSITION LINK-----	170
FIG 605 CONTROL VALVE-----	172
FIG 606 DRAFT LINK-----	174
FIG 607 POSITION & DRAFT LEVER-----	176
FIG 608 EXTERIOR HYD. VALVE-----	178
FIG 608A EXTERIOR HYD. VALVE(EUA)-----	180

FIG 609 HYDRAULIC PIPE-----	182
FIG 610 JOYSTICK -----	184
FIG 611 HITCH & 3-P LINK-----	186
FIG 611A HITCH & 3-P LINK(EU,EUA)-----	190
FIG 612 LOWER LINK & LIFT ROD-----	194
FIG 613 HYDRAULIC HOSE-----	196

7

SHEET METAL & CABIN

FIG 701 HOOD -----	202
FIG 702 FRONT FRAME -----	204
FIG 703 SIDE SUPPORT & FRAME HOOD-----	206
FIG 704 LEVER COVER & STEP-----	210
FIG 705 FRONT & REAR MOUNTING-----	212
FIG 706 SEAT & MAT -----	214
FIG 709 DOOR-----	216
FIG 710 FRONT GLASS-----	220
FIG 711 SIDE GLASS-----	222
FIG 712 REAR GLASS -----	224
FIG 713 SUB FENDER & COVER-----	226
FIG 714 MIRROR -----	228
FIG 715 HEATER & AIR-CON -----	230
FIG 716 FENDER COVER -----	234
FIG 717 ROOF -----	236
FIG 718 CABIN INTERIOR -----	238

8

ELECTRICALS & HARNESS

FIG 801 BATTERY & MOUNTING-----	244
FIG 802 HARNESS-----	246
FIG 803 LIGHT & BACK LAMP-----	248
FIG 804 INSTRUMENT PANEL-----	250
FIG 805 ELECTRIC SYSTEM (1)-----	252
FIG 806 ELECTRIC SYSTEM (2)-----	254

9 WEIGHT,LABEL,TOOLS

FIG 901 TOOL & ACCESSORY-----	260
FIG 902 WEIGHT-----	262
FIG 903 LABEL-----	264

10 NUMERICAL INDEX

ENGINE-----	271
CHASSIS-----	274

ENGINE

1 ENGINE

FIG 01 0512 4184, 0512 4259, 0512 4281, 0512 4051-----	04
FIG 02 0512 4368-----	06
FIG 05 0512 4036, 0512 4130, 0512 4238, 0512 4321-----	08
FIG 06 0512 4003-----	10
FIG 07 0512 4005-----	12
FIG 08 0512 4312, 0512 4050, 0512 4246-----	14
FIG 09 0512 4044, 0512 4320, 0512 4406-----	16
FIG 10 0512 4284-----	18
FIG 11 0512 4004, 0512 4045, 0512 4046-----	20
FIG 14 0512 4027-----	22
FIG 15 0512 4120, 0506 4400, 0512 4000-----	24
FIG 16 0512 4261-----	26
FIG 17 0512 4052-----	28
FIG 19 0512 4047-----	30
FIG 20 0512 4224-----	32
FIG 21 0512 4009, 0512 4008, 0512 4299-----	34
FIG 22 0512 4345, 0512 4392-----	36
FIG 27 0511 8909-----	38
FIG 37 0512 4331-----	40
FIG 38 0512 4055-----	42
FIG 41 0512 4143, 0512 4058, 0512 4097, 0512 4257-----	44
FIG 43 0512 4384-----	46
FIG 44 0512 4062, 0512 4256, 0512 4393, 0512 4400-----	48
FIG 48 0511 7723, 0512 4011, 0512 4098, 0512 4127, 0512 4292-----	50
FIG 48 0512 4128, 0512 4293, 0512 4334, 0512 4338, 0512 4343-----	52
FIG 51 0512 4060, 0512 4104, 0512 4300, 0512 4329-----	54
FIG 63 0512 4010-----	56
FIG 83 0512 4176, 0512 4180, 0512 4251, 0512 4337, 0512 4339, 0512 4340, 0512 4344-----	58
FIG 90 0512 4355-----	60

2 ENGINE ACCESSORIES & CONTROL

FIG 201 AIR CLEANER-----	66
FIG 202 RADIATOR-----	68
FIG 203 MUFFLER & EXHAUST PIPE -----	70
FIG 204 FUEL TANK-----	72
FIG 205 FUEL FILTER & FUEL PUMP-----	74
FIG 206 OIL COOLER-----	76

3 CLUTCH,BRAKE,STEERING

FIG 301 CLUTCH-----	82
FIG 302 CLUTCH PEDAL-----	84
FIG 303 BRAKE PEDAL & LINK -----	88
FIG 304 FRONT WHEEL -----	90
FIG 305 REAR WHEEL-----	92
FIG 306 POWER STEERING WHEEL-----	94
FIG 307 POWER STEERING VALVE-----	96
FIG 308 POWER STEERING CYLINDER-----	98
FIG 309 HAND BRAKE & BRAKE-----	100

4

TRANSMISSION & REAR AXLE

FIG 401 CASE , RR TRANSMISSION-----	106
FIG 402 SUB CHANGE GEARS-----	108
FIG 403 REAR DIFFERENTIAL GEARS-----	110
FIG 404 P.T.O CHANGE GEARS-----	112
FIG 405 P.T.O CHANGE SHIFTER-----	114
FIG 406 HOUSING , RR AXLE-----	116
FIG 407 P.T.O DRIVE SHAFT-----	118
FIG 408 CREEP CHANGE-----	120
FIG 409 INPUT & COUNTER GEARS-----	122
FIG 410 CHANGE GEARS-----	124
FIG 411 REVERSE GEARS-----	126
FIG 412 MAIN CHANGE LEVER-----	128
FIG 413 SUB CHANGE LEVER-----	130
FIG 414 TRANSMISSION MID CASE-----	132
FIG 415 SUB CHANGE SHIFTER-----	134
FIG 416 4WD CHANGE LEVER-----	136
FIG 417 TRANSMISSION FRONT CASE-----	138

5 FRONT AXLE

FIG 501 FRONT AXLE SUPPORT-----	144
FIG 502 FRONT DRIVE SHAFT-----	146
FIG 503 FRONT AXLE HOUSING-----	148
FIG 504 FRONT DIFFERENTIAL GEARS-----	150
FIG 505 FRONT GEAR CASE (1)-----	152
FIG 506 FRONT GEAR CASE (2)-----	154
FIG 507 FRONT GEAR CASE (3)-----	156

6 HYDRAULICS & 3-POINT LINK

FIG 601 CYLINDER CASE-----	162
FIG 602 LIFT ARM-----	164
FIG 602A LIFT ARM(EUA)-----	166
FIG 603 CYLINDER-----	168
FIG 604 POSITION LINK-----	170
FIG 605 CONTROL VALVE-----	172
FIG 606 DRAFT LINK-----	174
FIG 607 POSITION & DRAFT LEVER-----	176
FIG 608 EXTERIOR HYD. VALVE-----	178
FIG 608A EXTERIOR HYD. VALVE(EUA)-----	180
FIG 609 HYDRAULIC PIPE-----	182
FIG 610 JOYSTICK -----	184
FIG 611 HITCH & 3-P LINK-----	186
FIG 611A HITCH & 3-P LINK(EU,EUA)-----	190
FIG 612 LOWER LINK & LIFT ROD-----	194
FIG 613 HYDRAULIC HOSE-----	196

7

SHEET METAL & CABIN

FIG 701 HOOD	202
FIG 702 FRONT FRAME	204
FIG 703 SIDE SUPPORT & FRAME HOOD.....	206
FIG 704 LEVER COVER & STEP.....	210
FIG 705 FRONT & REAR MOUNTING.....	212
FIG 706 SEAT & MAT	214
FIG 709 DOOR.....	216
FIG 710 FRONT GLASS.....	220
FIG 711 SIDE GLASS.....	222
FIG 712 REAR GLASS	224
FIG 713 SUB FENDER & COVER.....	226
FIG 714 MIRROR	228
FIG 715 HEATER & AIR-CON	230
FIG 716 FENDER COVER	234
FIG 717 ROOF	236
FIG 718 CABIN INTERIOR	238

8

ELECTRICALS & HARNESS

FIG 801 BATTERY & MOUNTING-----	244
FIG 802 HARNESS-----	246
FIG 803 LIGHT & BACK LAMP-----	248
FIG 804 INSTRUMENT PANEL-----	250
FIG 805 ELECTRIC SYSTEM (1)-----	252
FIG 806 ELECTRIC SYSTEM (2)-----	254

9

WEIGHT,LABEL,TOOLS

FIG 901 TOOL & ACCESSORY-----	260
FIG 902 WEIGHT-----	262
FIG 903 LABEL-----	264

ENGINE	271
CHASSIS	274

FIG 00

T754

<https://truckmanualshub.com/>

SERVICE

Year

2016



KURBELGEHÄUSE
CRANKCASE
CARTER
BLOQUE DE CILINDR.

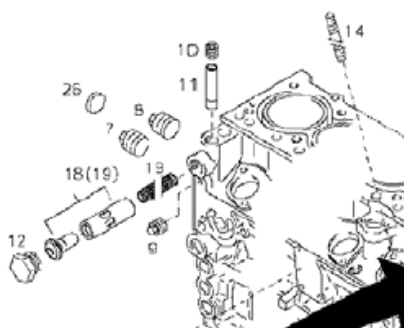 


BILD FIG.	TN / PN	MGE QTY	DEUTSCH	ENGLISH	FRANCAIS
1	0417 8910	1	KURBELGEHÄUSE	ENGINE BLOCK	BLOQ_MOTEUR
2	0417 8155	2	LAGERBUCHSE	BEARING BUSH	BAGUE
3	0417 8154	3	LAGERBUCHSE	BEARING BUSH	BAGUE
4	0210 8055	2	FÜHRUNGSHÜLSE	GUIDE SLEEVE	DOUILLE DE GUIDAGE
5	0417 8711	1	VERSCHLUSSCHRAUBE	SCREW PLUG	BOUCHON FILETÉ

Lfd.Nr./Ser.No. No ct/No. corr	Stk./Qty. Qté/Cant.	Teilenummer/Part number No de piece/No. de pieza
1.	2	0417 8155
2.	3	0417 8154
3.	1	0210 8055

CASQUILLO COJINETE	(A)961 FM M. ABGASOPT. KOLBEN
CASQUILLO COJINETE	
CASQUILLO GUIA	
TAPON ROSCADO	

NOTE

FIG 01

T754

<https://trucksmanualshub.com/>
 0512 4184
 0512 4259
 0512 4281
 0512 4051

P1

 
Year

2016




01 - 0512 4051

PRESSURESTAT

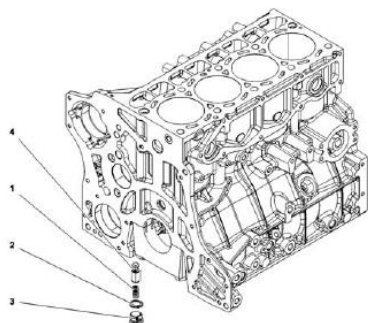


01 - 0512 4259

 DIPSTICK

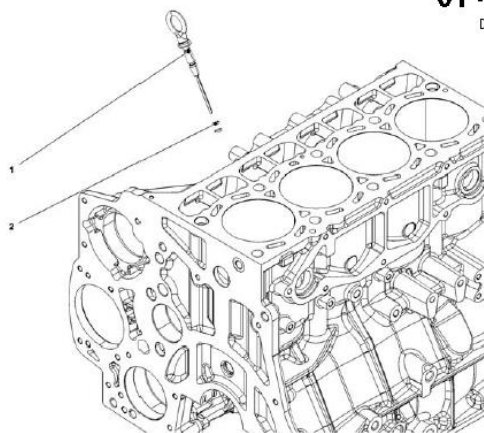


01 - 0512 4184

 FILLER CAP

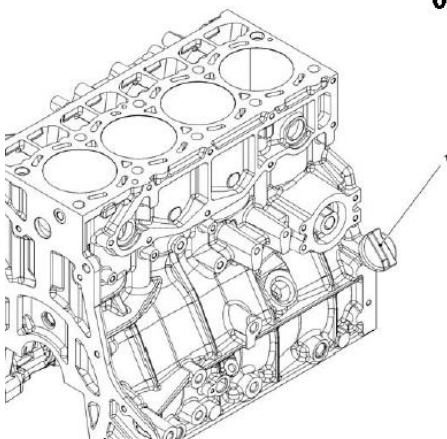

01 - 0512 4281

 CRANKCASE

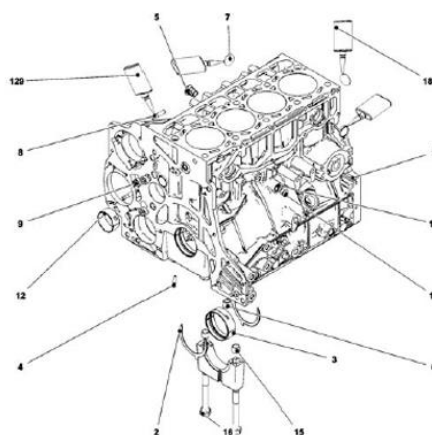

NOTE


FIG 02

0512 4368

P1

Year

 
2016

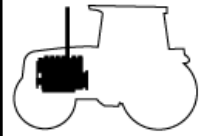

T754

02 - 0512 4368

 OIL PAN

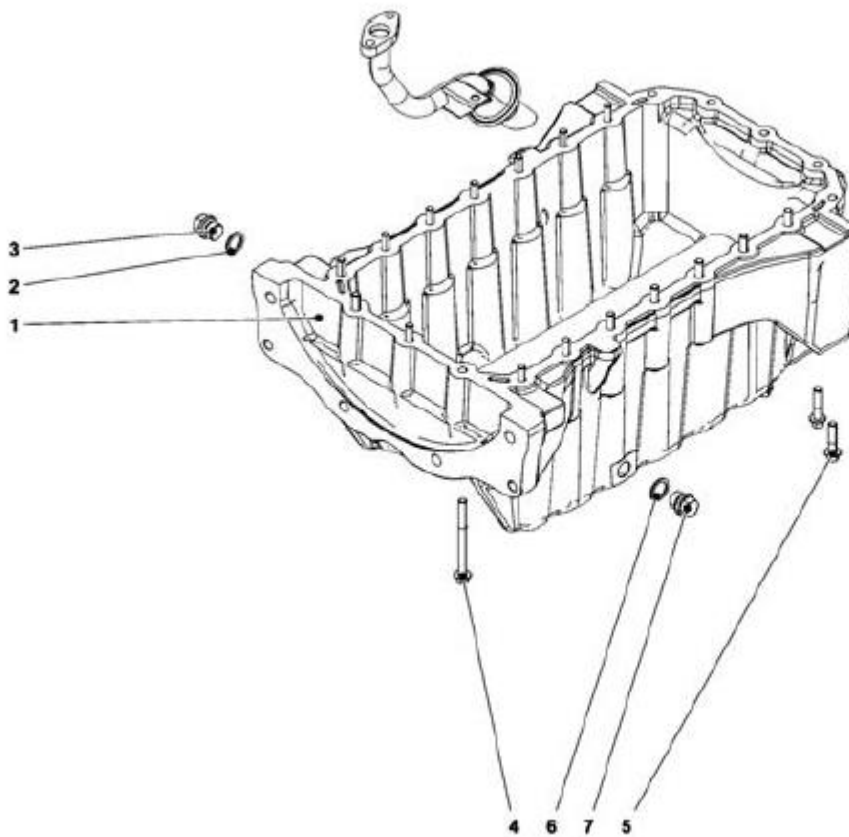

NOTE

FIG 05

 
T754

0512 4036
0512 4130
0512 4238
0512 4321

P1


Year

2016

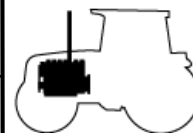


05 - 0512 4036

 FASTENINGS

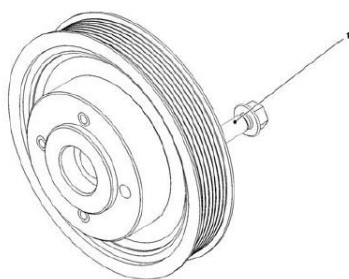


05 - 0512 4238

 CRANKSHAFT

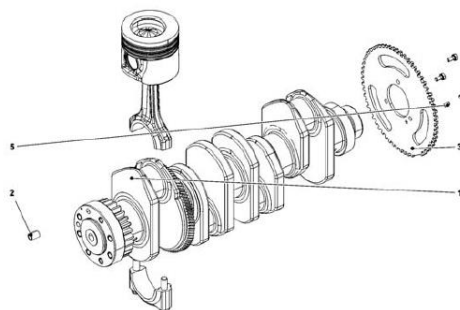


05 - 0512 4130

 CRANKSHAFT ACCESS.

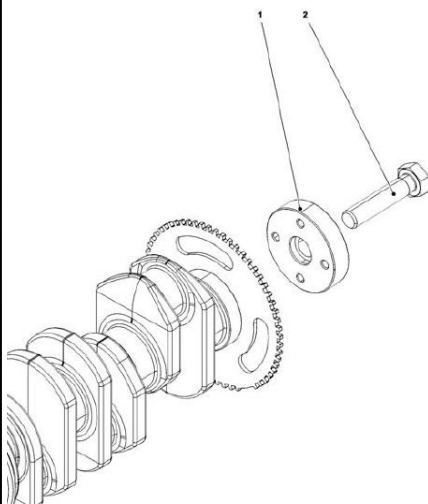

05 - 0512 4321

 DYNAMIC BALANCER

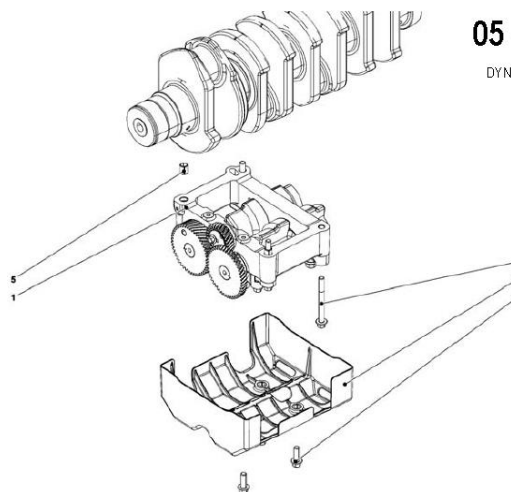

NOTE

FIG 06

0512 4003

P1

Year

 
2016



T754

06 - 0512 4003

CONNECTING ROD

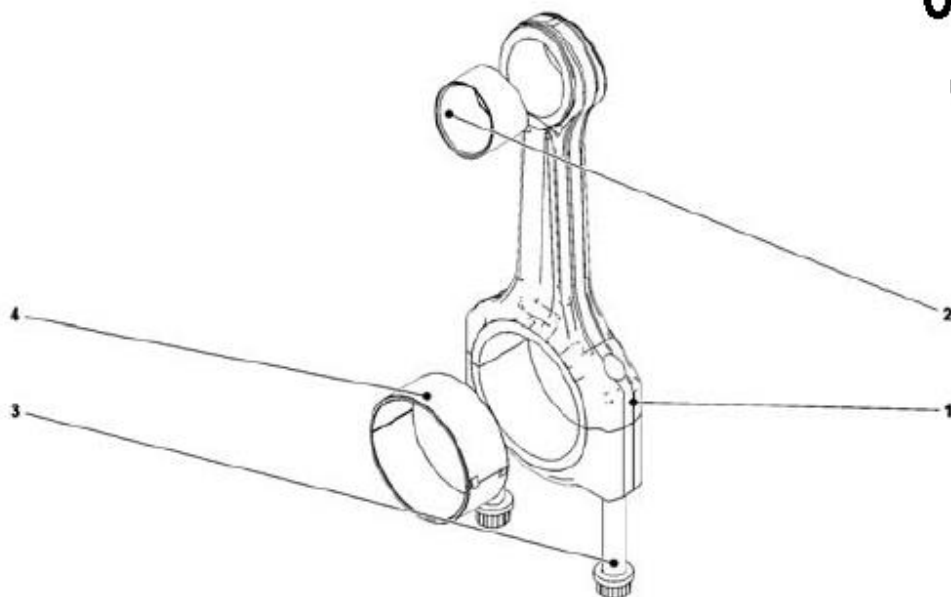

NOTE

FIG 07

 
 
T754

0512 4005

P1

Year

2016

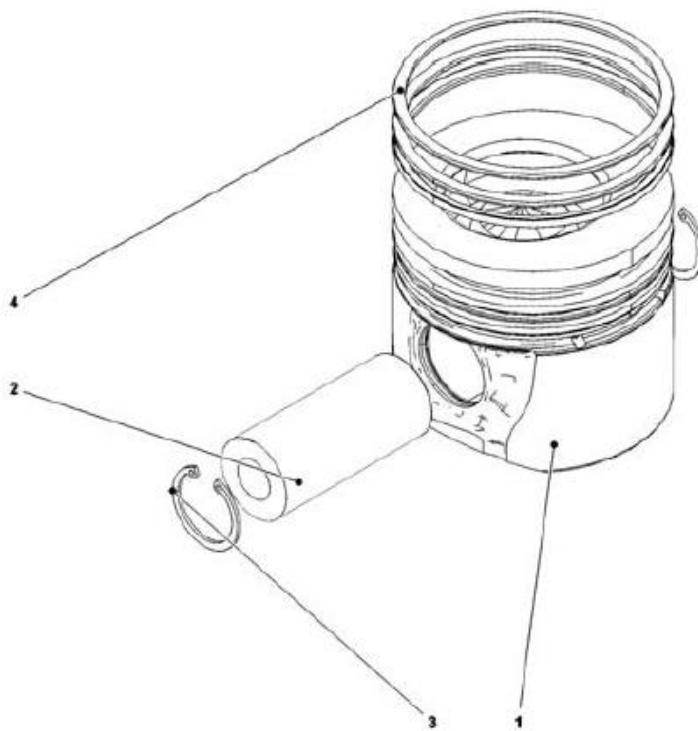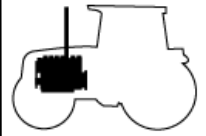

07 - 0512 4005

PISTON

NOTE

FIG 08

 
T754

<https://truckmanualshub.com/>
0512 4312
0512 4050
0512 4246

P1


Year

2016

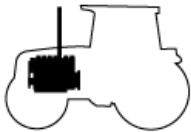


08 - 0512 4050

 FASTENINGS

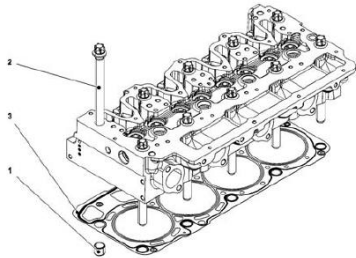


08 - 0512 4312

 CYLINDER HEAD

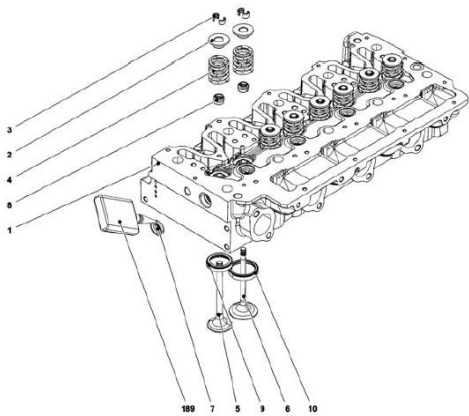


08 - 0512 4246

 VALVE MECHAN COVER

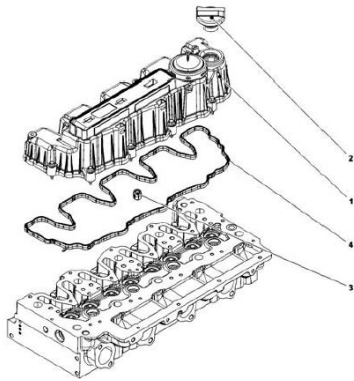

08 - 0512 4312

 CYLINDER HEAD

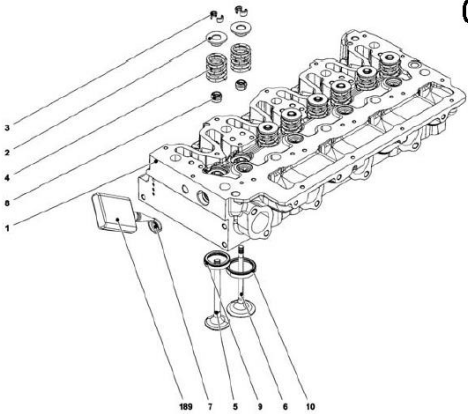

NOTE

FIG 09

 
 
T754

<https://truckmanualshub.com/>
0512 4044
0512 4320
0512 4406

P1


Year

2016

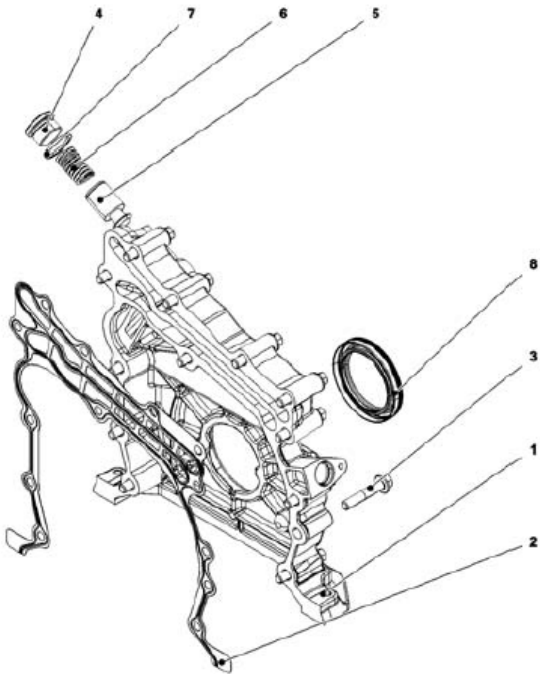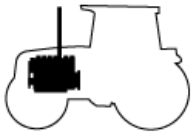

09 - 0512 4044

 FRONT COVER

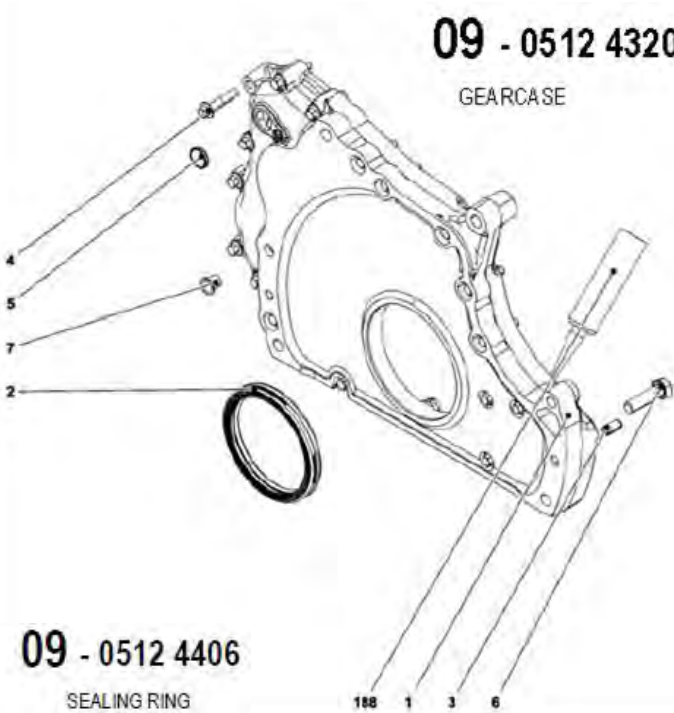


09 - 0512 4320

GEARCASE

09 - 0512 4406

 SEALING RING

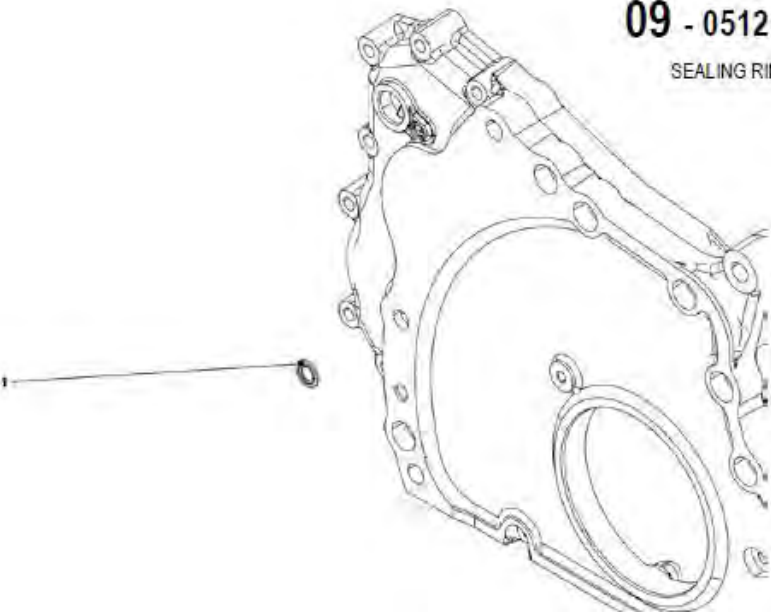

NOTE


FIG 10

0512 4284


P1

Year

 2016

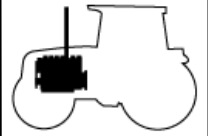


T754

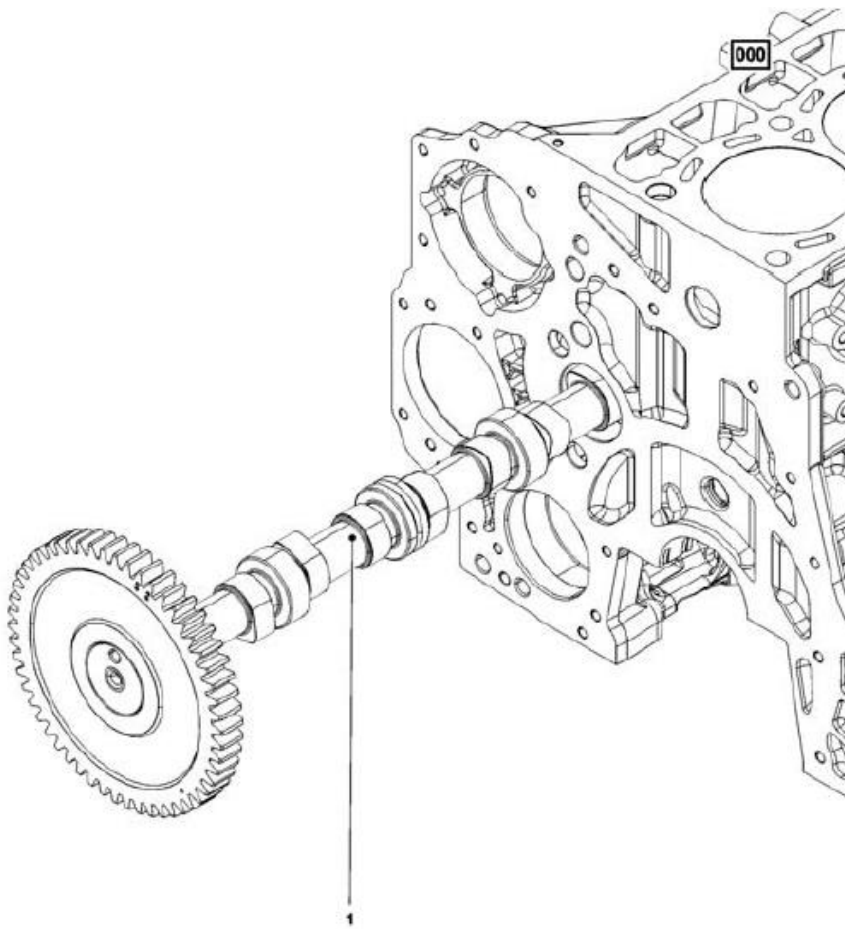 


10 - 0512 4284

CAMSHAFT

 
NOTE

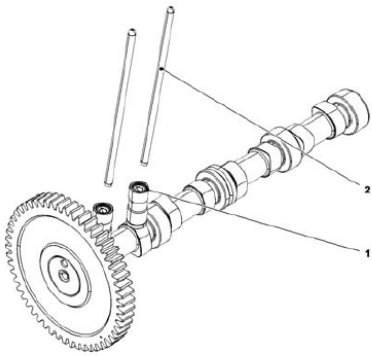

11 - 0512 4004
VALVE DRIVE

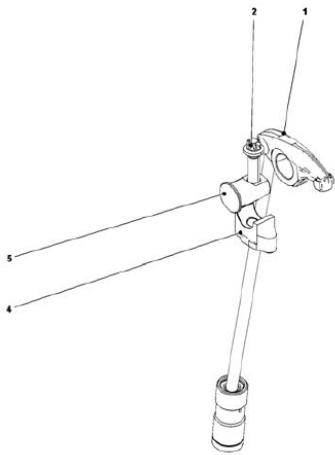 

11 - 0512 4046
ROCKER ARM INLET

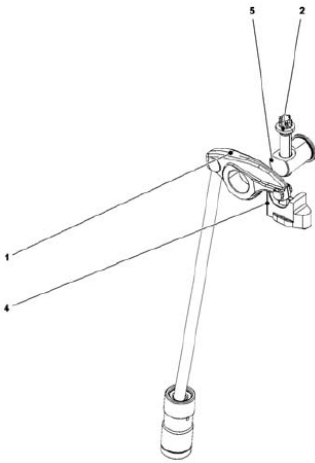 

11 - 0512 4045
ROCKER ARM OUTLET

FIG 14

 
 
T754

0512 4027

P1

Year

2016

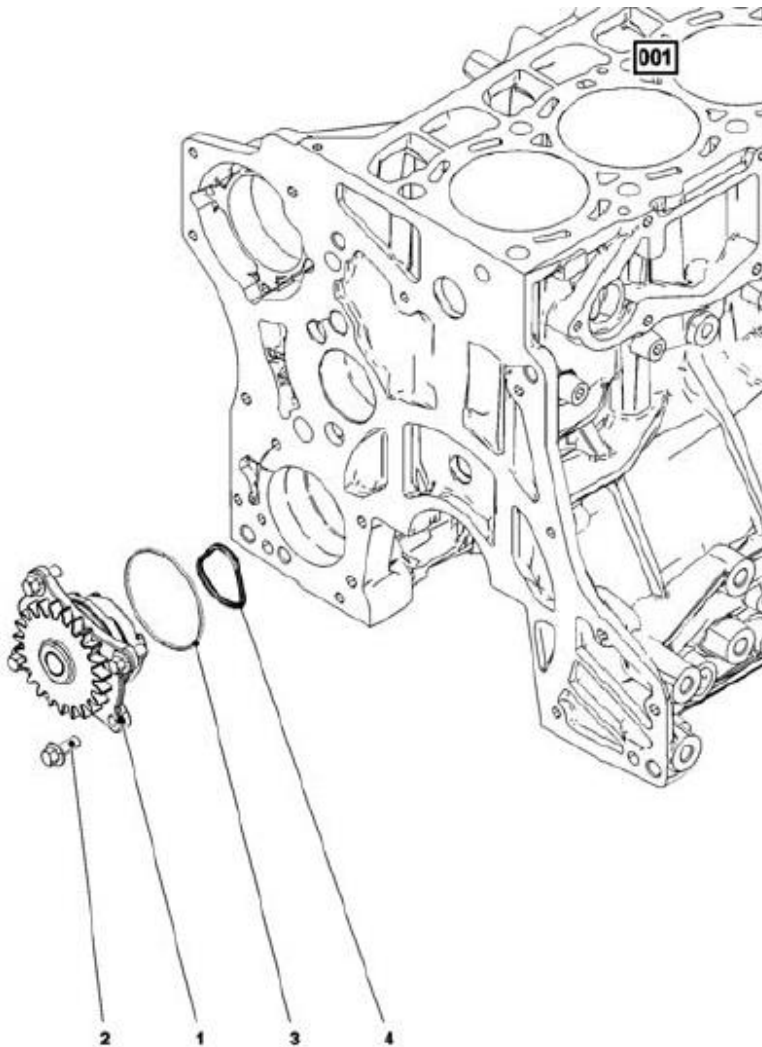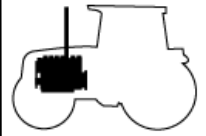

14 - 0512 4027

LUBRICAT. OIL PUMP

NOTE

FIG 15

 
 
 
T754

<https://truckmanualshub.com/>
0512 4120
0506 4400
0512 4000


P1

Year


2016

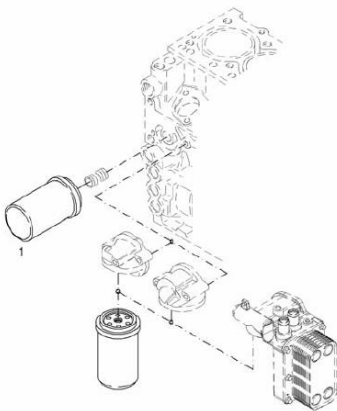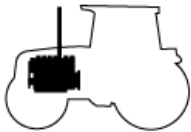

15 - 0506 4400
LUBRIC. OIL FILTER

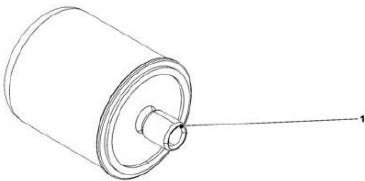 

15 - 0512 4120
OIL FILTER ASSY

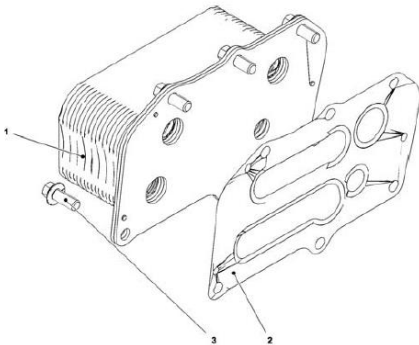 

15 - 0512 4000
OIL COOLER

NOTE

FIG 16

0512 4261

P1

Year

 
2016



T754

16 - 0512 4261

OIL SUCTION PIPE

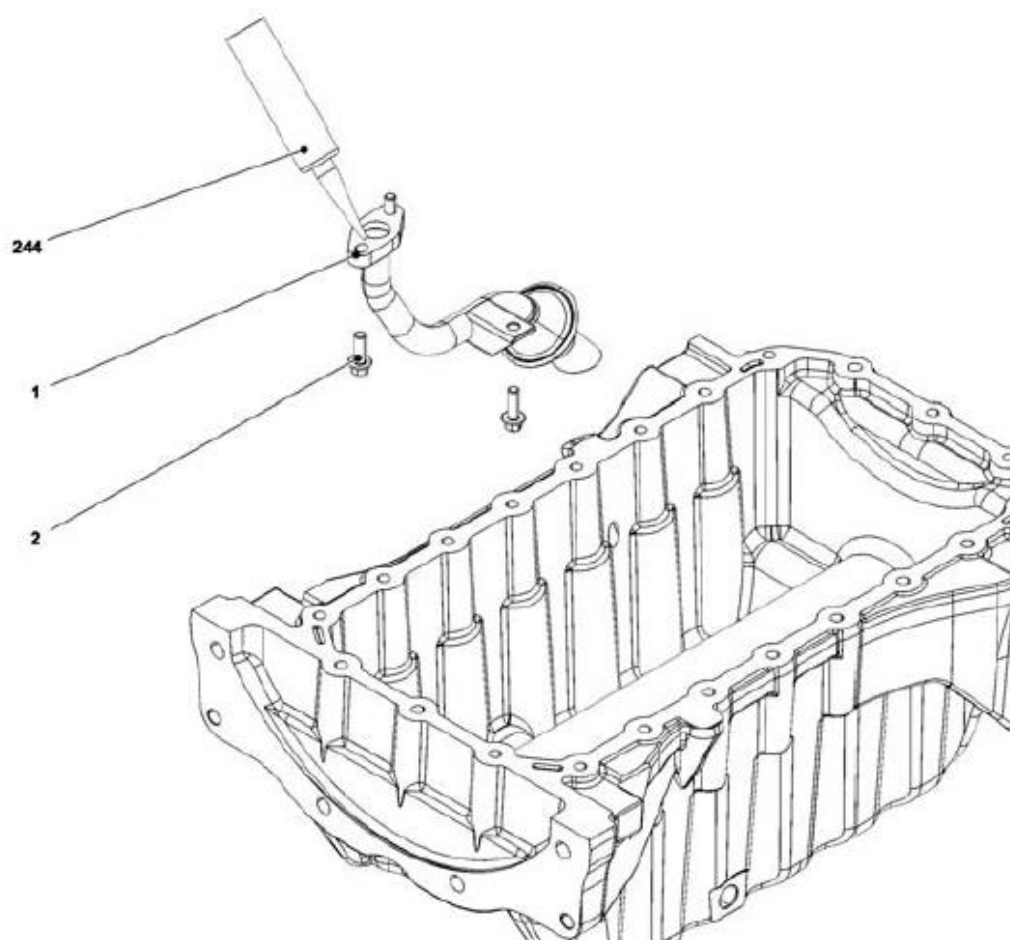

NOTE

FIG 17

T754

0512 4052

P1

 
Year

2016



17 - 0512 4052

HIGH-PRESSURE PUMP

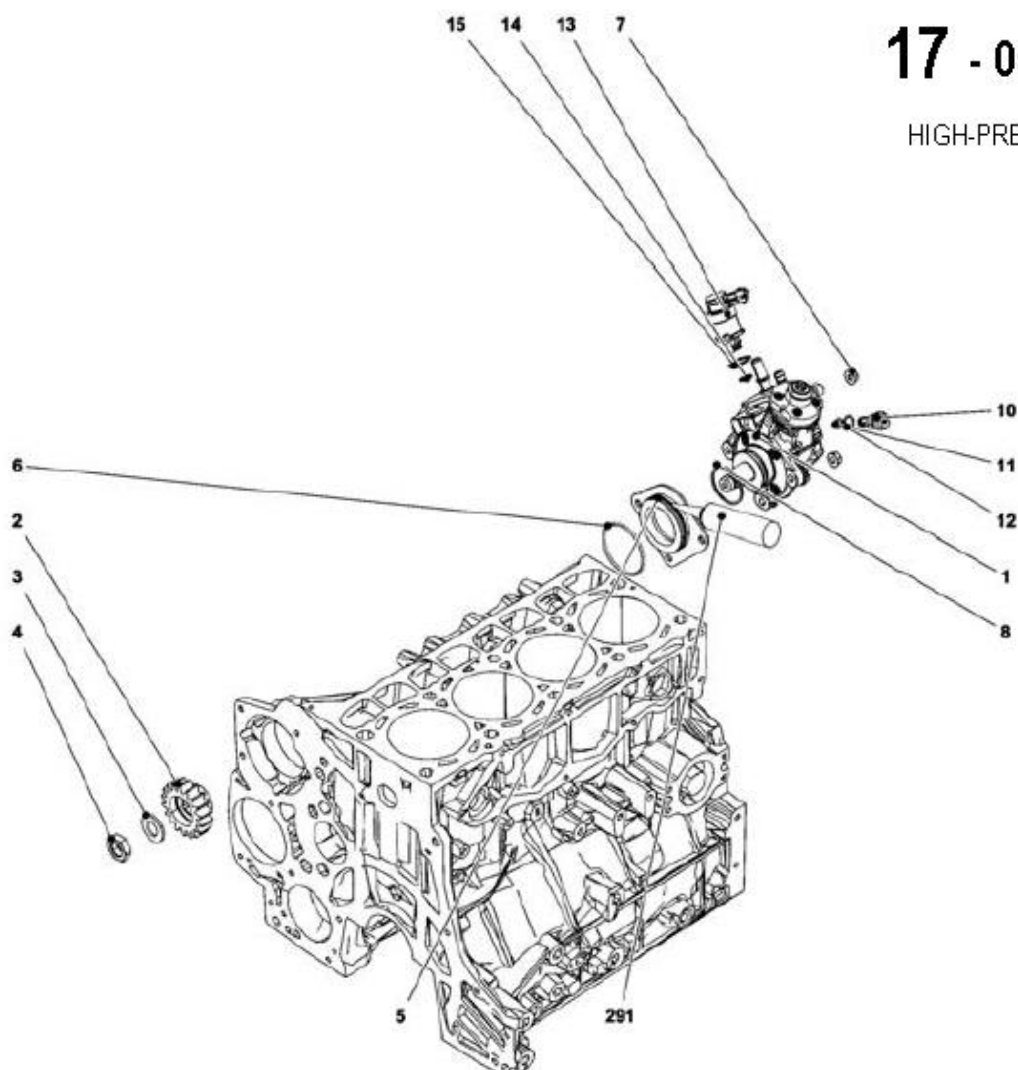

NOTE

FIG 19

0512 4047

 
P1

Year

2016



T754

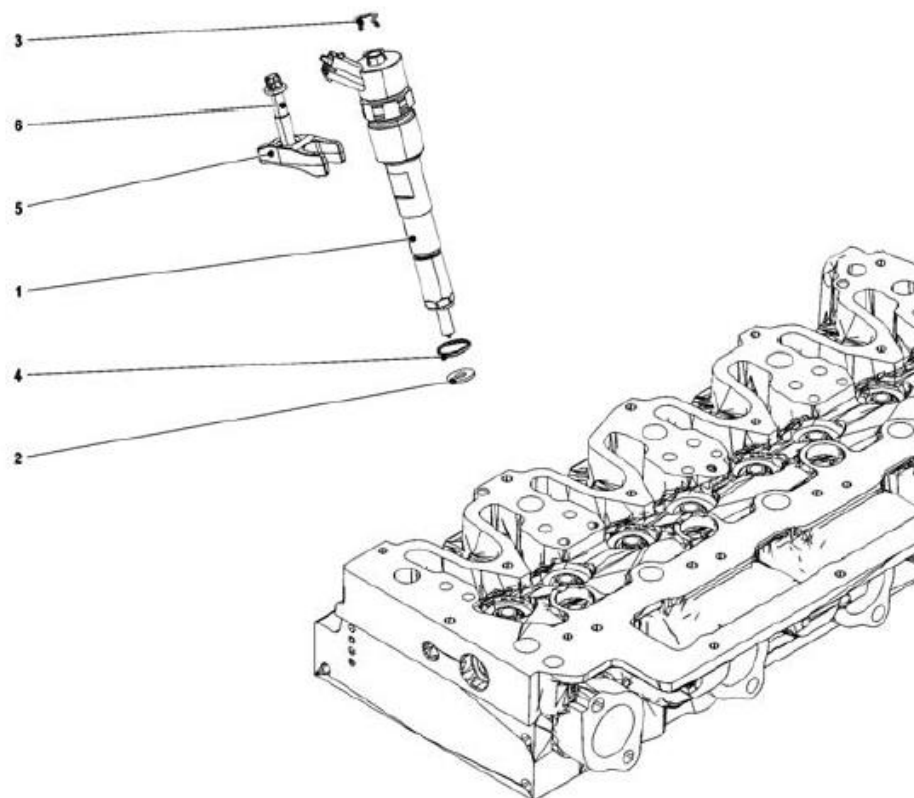

19 - 0512 4047

FUEL INJECTOR

NOTE


 
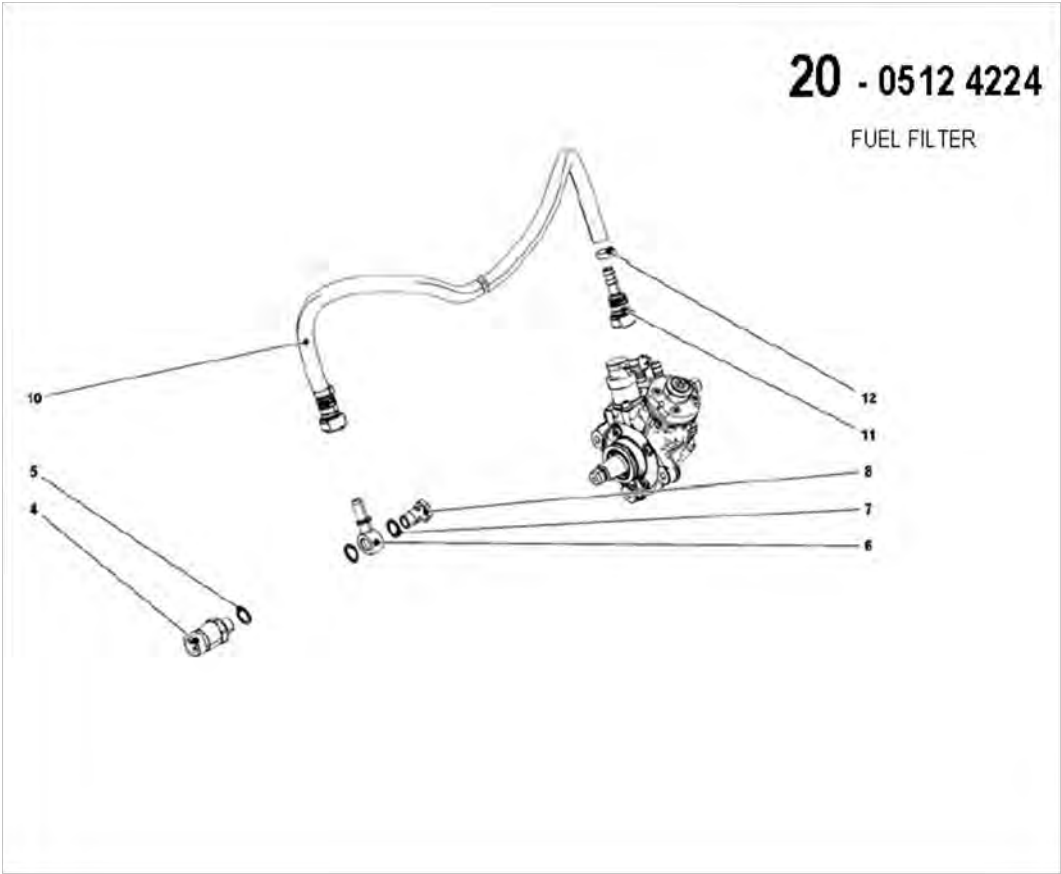 


FIG 21 T754	https://truckmanualshub.com/ 0512 4009 0512 4008 0512 4299	P1	Year 2016	
-----------------------------------	---	---------------	---------------------------------	--

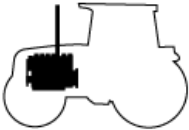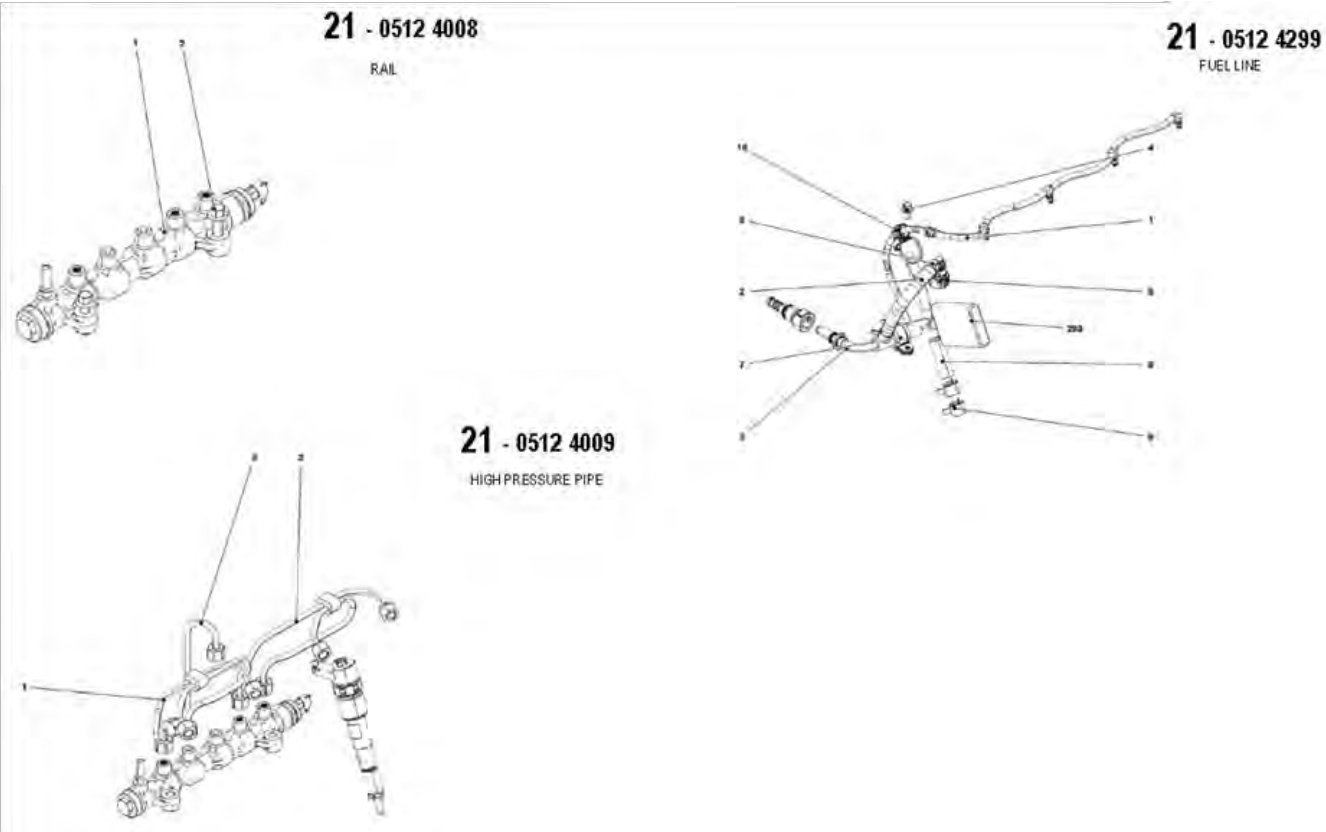 

NOTE	
------	--

FIG 22

 
T754

0512 4345
0512 4392

P1

Year

2016

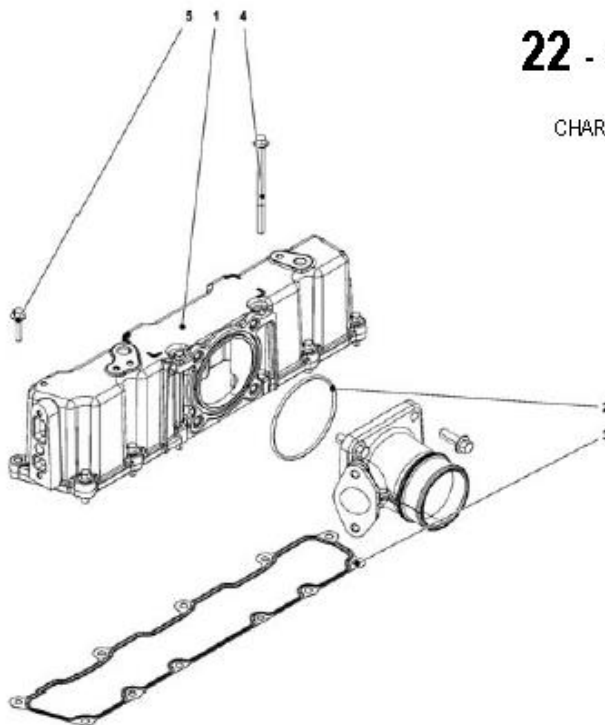


22 - 0512 4345

CHARGE AIR PIPE

22 - 0512 4392

 CHARGE AIR ELBOW

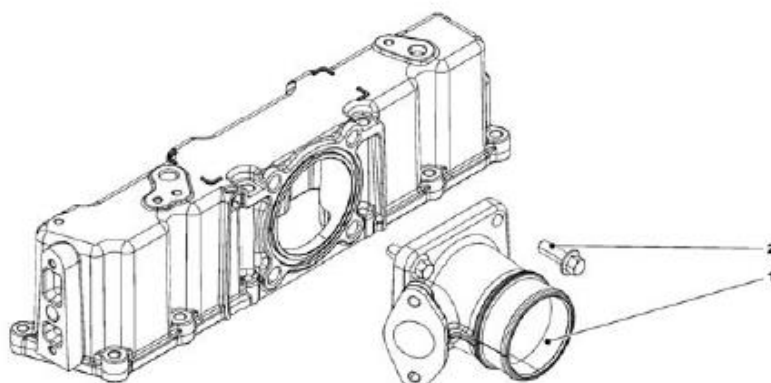

NOTE


FIG 27

0511 8909


P1

Year

 2016

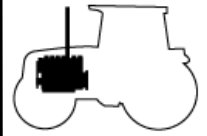

T754

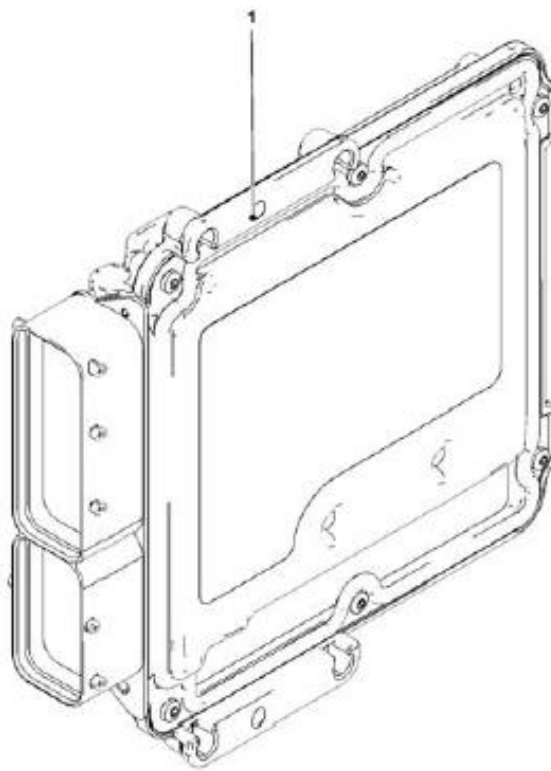 

27 - 0511 8909

CONTROL UNIT

NOTE

FIG 37

 
T754

0512 4331

P1


Year

2016

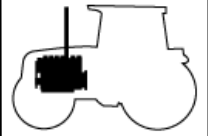


37 - 0512 4331

 COOLANT PUMP

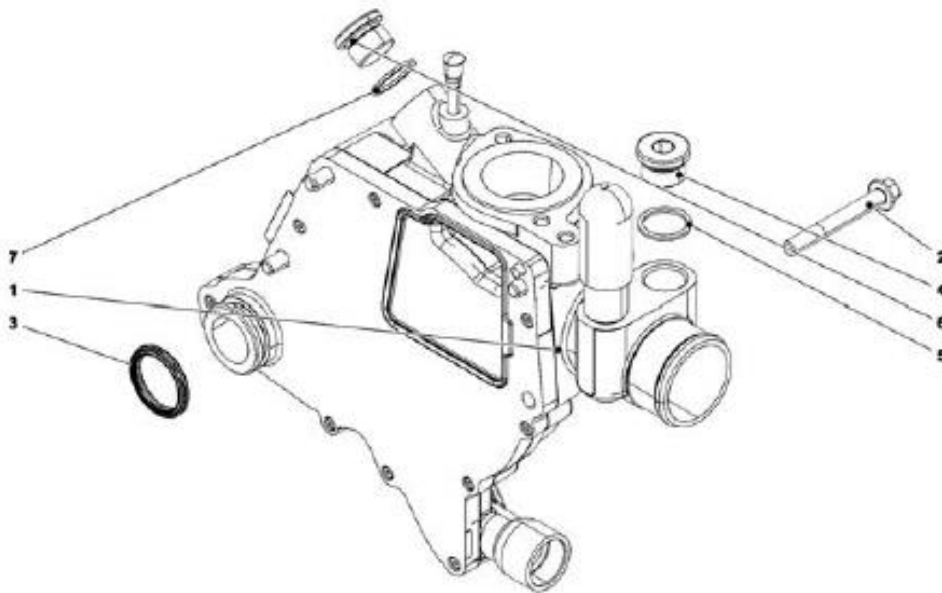

NOTE

 38 - 0512 4055
THERMOSTAT

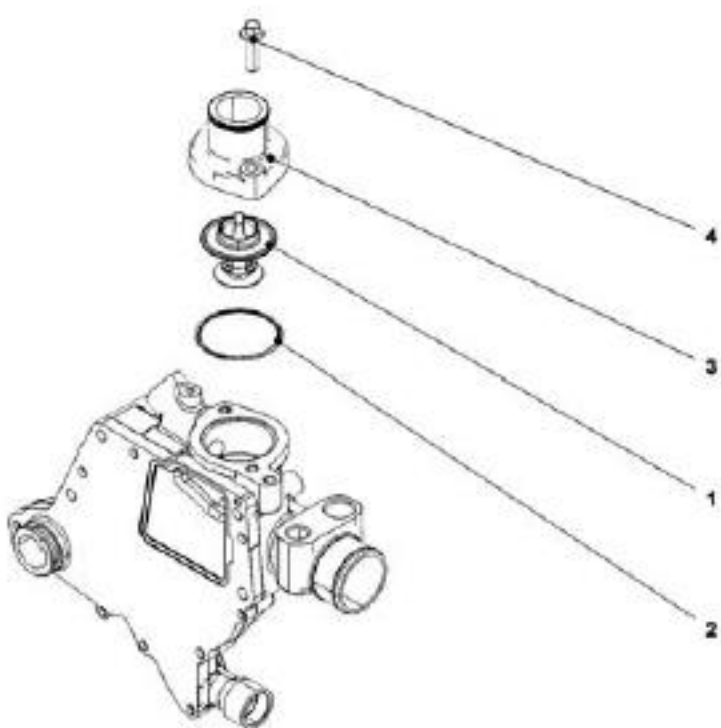

NOTE

FIG 41

 
 
T754

0512 4143
0512 4058
0512 4097
0512 4257

P1


Year

2016

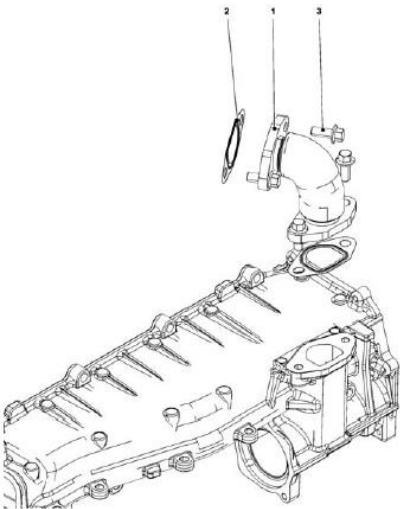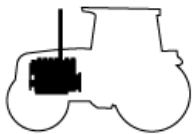


41 - 0512 4058

 PIPE/LINE/LEAD

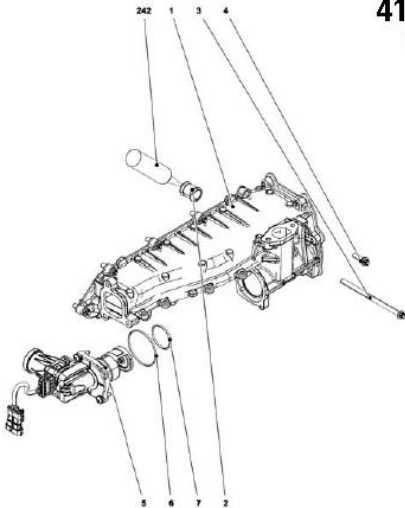


41 - 0512 4143

 EGR-MODULE

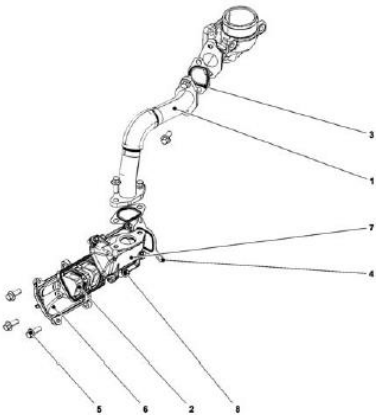

41 - 0512 4097

 PIPE/LINE/LEAD

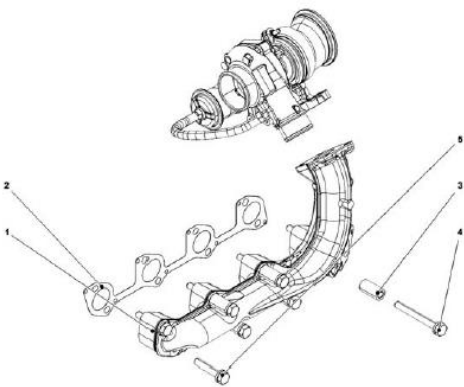

41 - 0512 4257

EXHAUST MANIFOLD

NOTE


FIG 43

0512 4384

P1

Year

 
2016

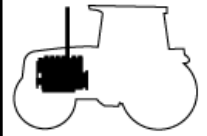

T754

43 - 0512 4384

 LUBRICAT. OIL LINE

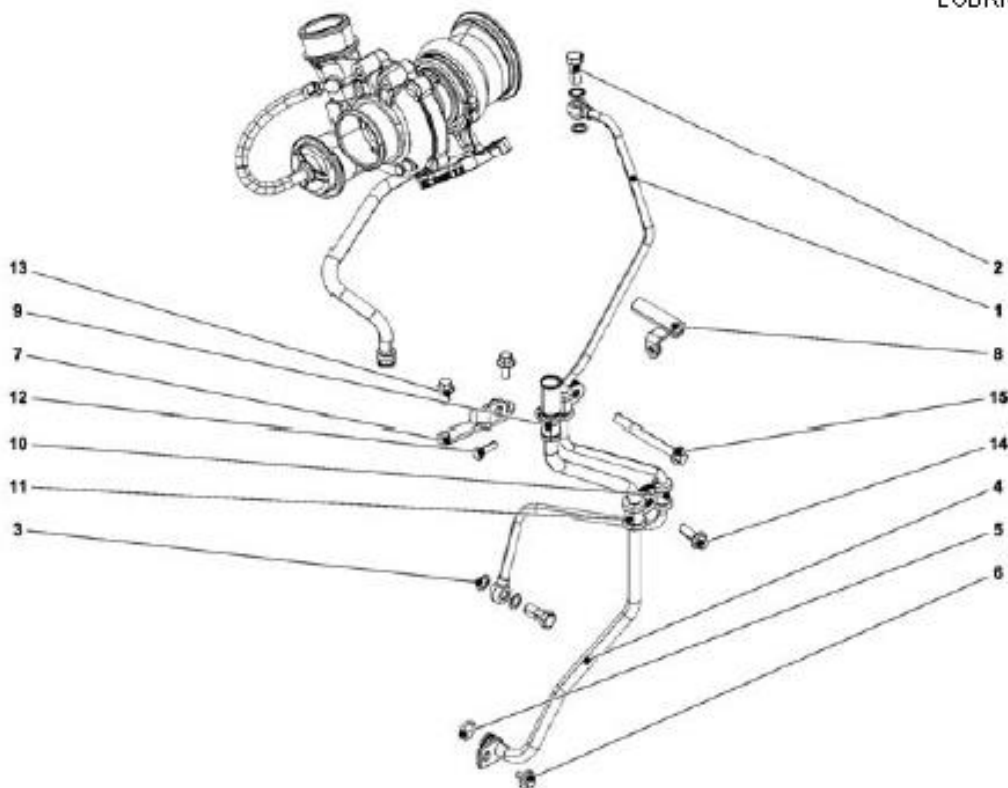

NOTE

FIG 44

 
T754

<https://www.manualshub.com/>
0512 4062
0512 4256
0512 4393
0512 4400


P1

Year


2016

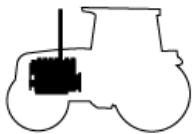


44 - 0512 4062
GENERATOR

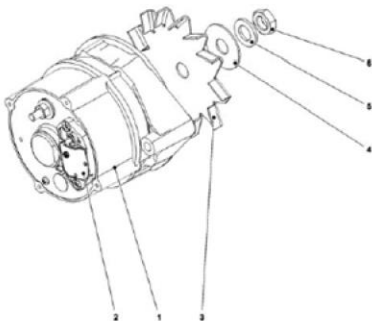 


44 - 0512 4393
ACCESSORIES

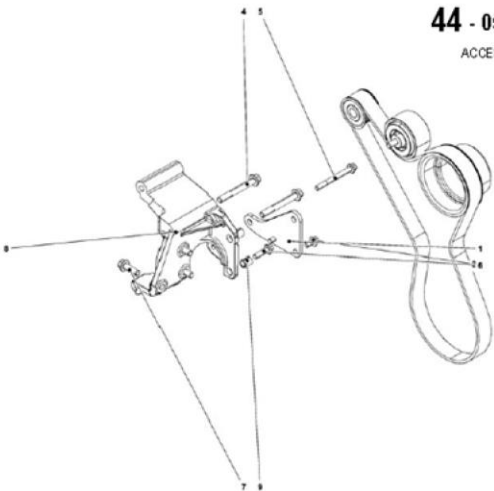 


44 - 0512 4256
STARTER

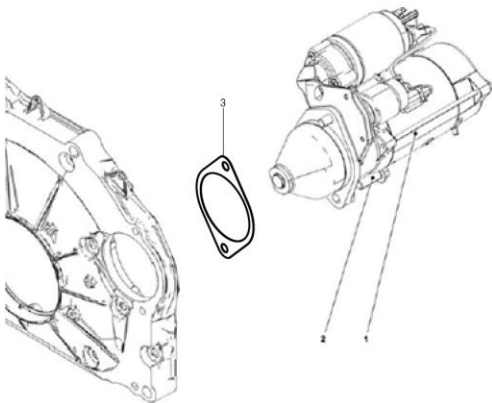 


44 - 0512 4400
BELT DRIVE

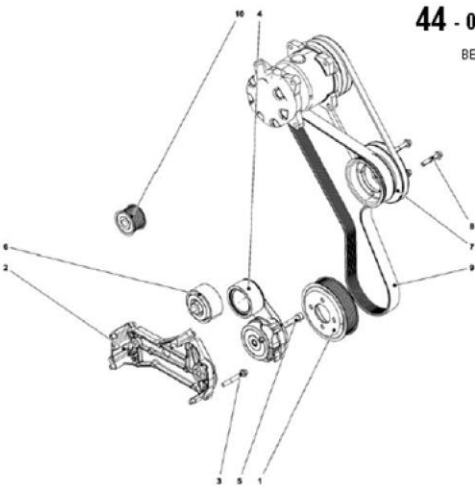 

NOTE

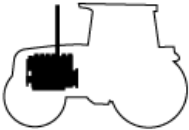 FIG 48 T754	https://truckmanualshub.com/ 0511 7723 0512 4011 0512 4098 0512 4127 0512 4292	P1	Year	
			2016	

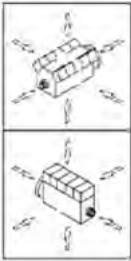 


48 - 0511 7723

ATTACHMENT PLUG



48 - 0512 4011

 CABLE HARNESS

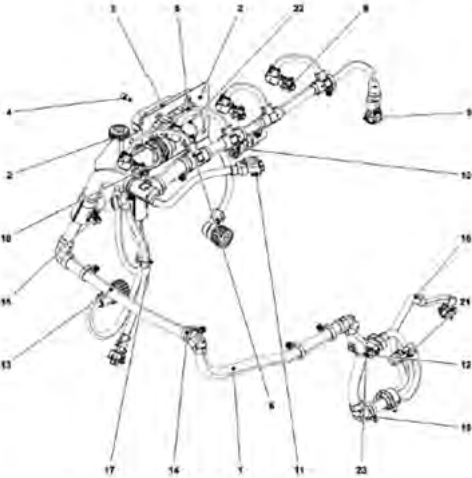


48 - 0512 4292

CABLE HARNESS



48 - 0512 4098

 PLUG-IN CONNECTOR

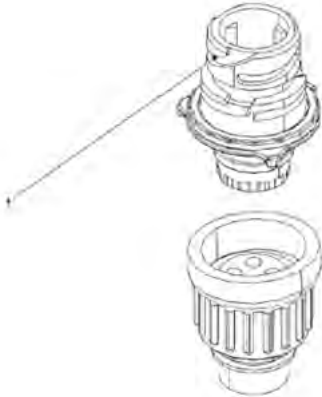

48 - 0512 4127

PLUG-IN CONNECTOR

NOTE	
-----------------	--

FIG 48

 
T754

<https://truckmanualshub.com/>
0512 4128 0512 4293
0512 4334 0512 4338
0512 4343

P1


Year

2016

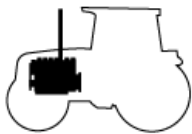


48 - 0512 4128

 PLUG-IN CONNECTOR

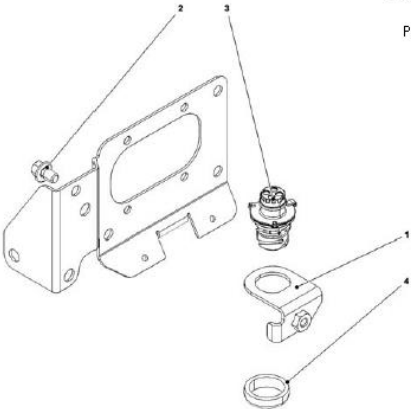


48 - 0512 4293

 CONNECTING PIPE

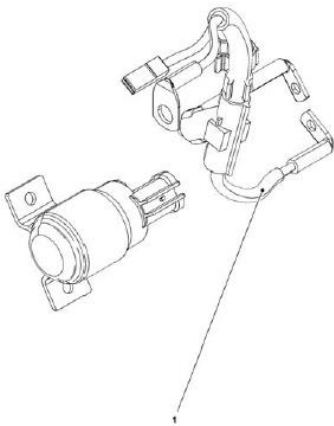


48 - 0512 4338

 FASTENINGS

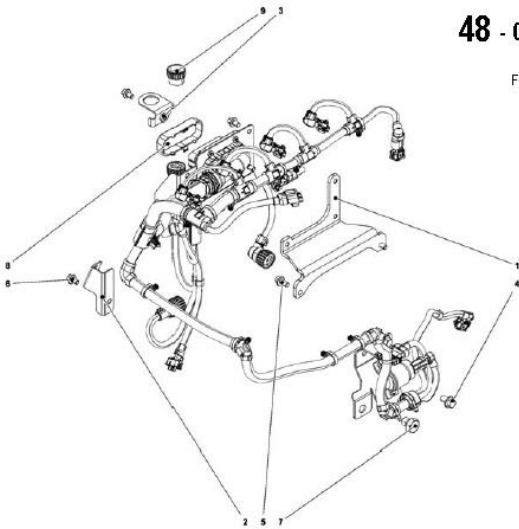


48 - 0512 4334

 RELAY

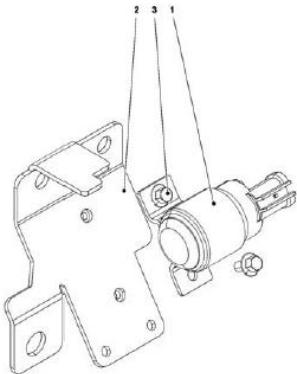



48 - 0512 4343

 PROTECTING CAP

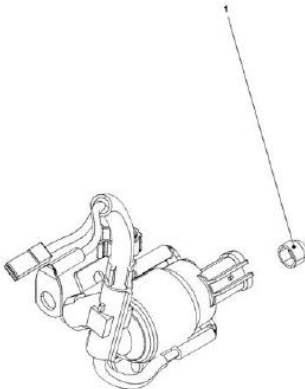


NOTE

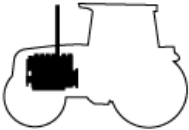 
FIG 51 T754	https://truckmanualshub.com/ 0512 4060 0512 4104 0512 4300 0512 4329	P1	Year 2016	
-----------------------------------	--	---------------	---------------------------------	--

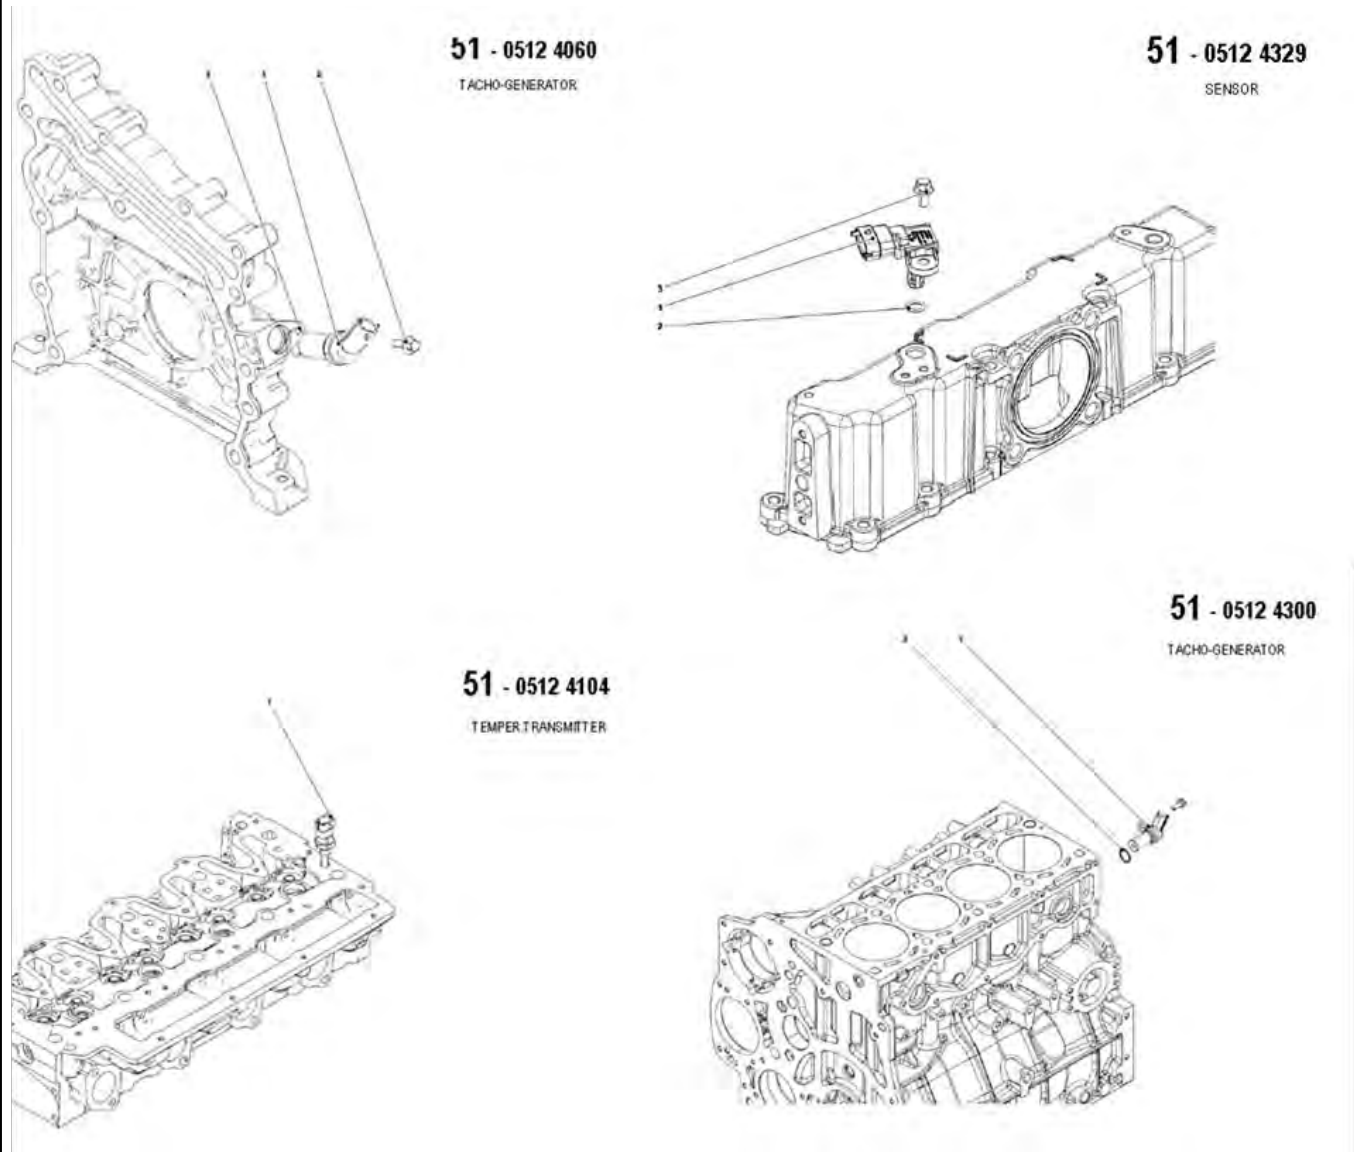 

NOTE	
------	--

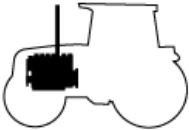 FIG 63 T754	https://truckmanualshub.com/ 0512 4010	P1	Year 2016	
-----------------------------------	---	---------------	---------------------------------	--

 63 - 0512 4010
GLOW PLUG

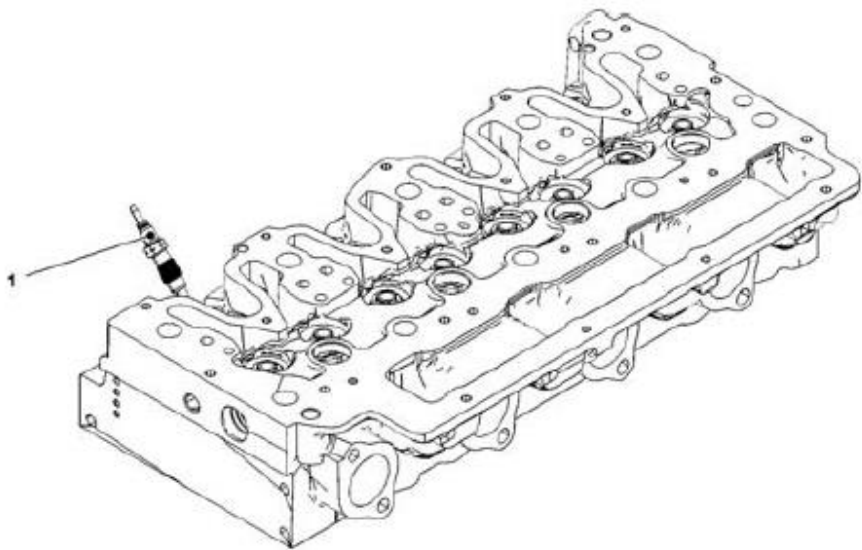

NOTE	
-----------------	--

FIG 83

 
 
T754

0512 4176 <https://muckmanparts.com/> 0512 4180
0512 4251 0512 4337
0512 4339 0512 4340
0512 4344

P1

Year

2016

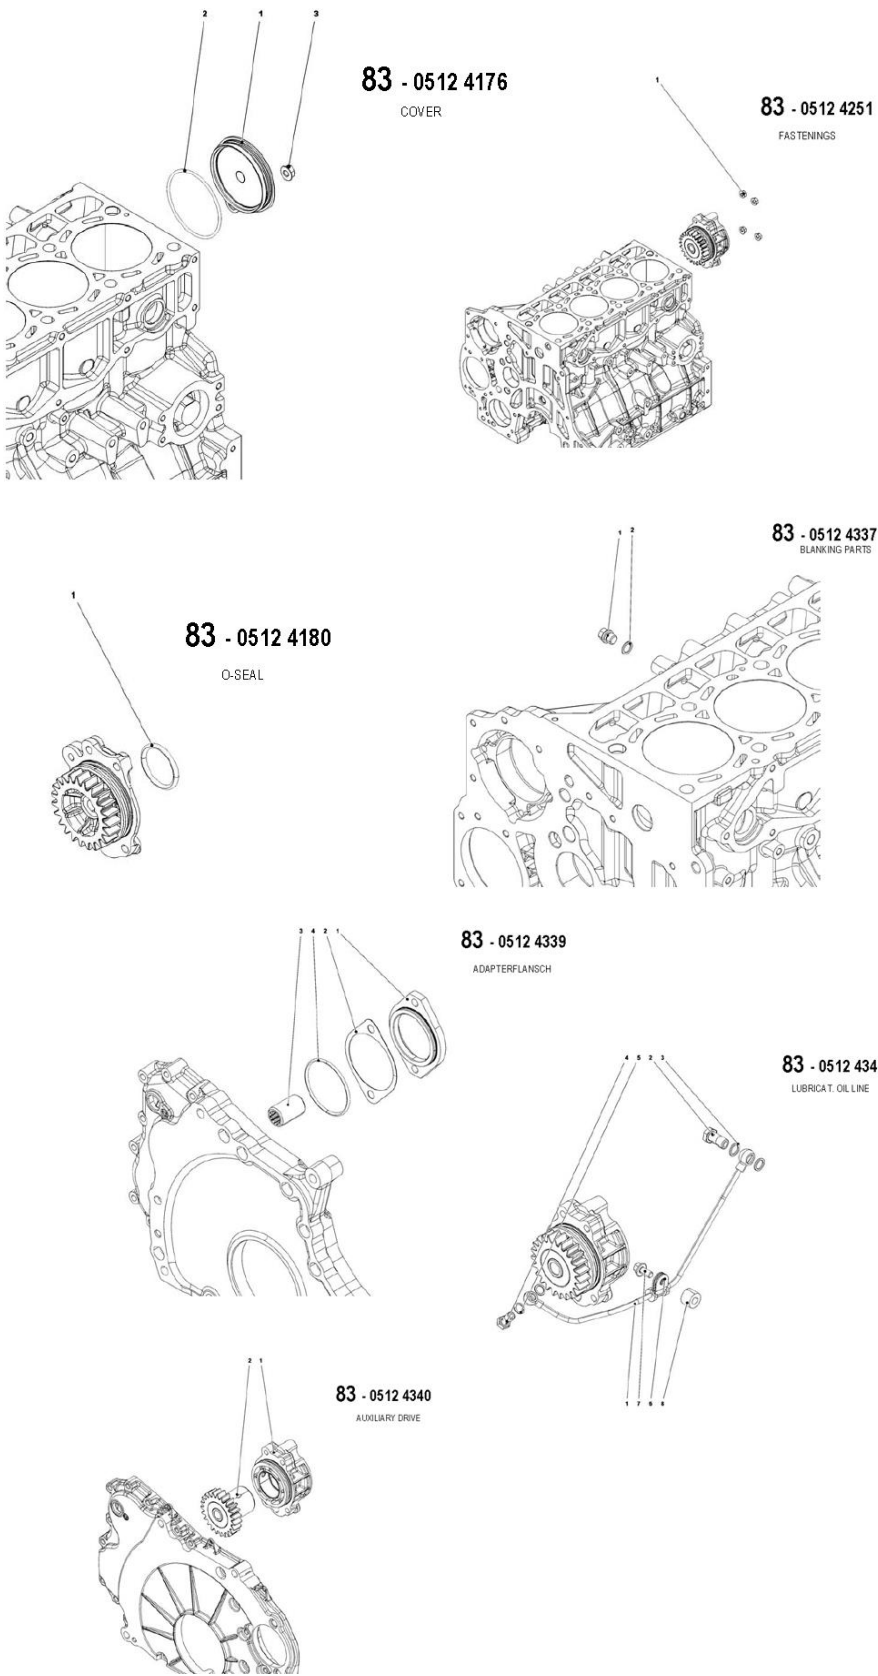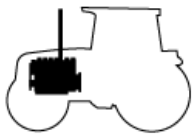

NOTE

FIG 90

 
 
T754

0512 4355

P1

Year

2016

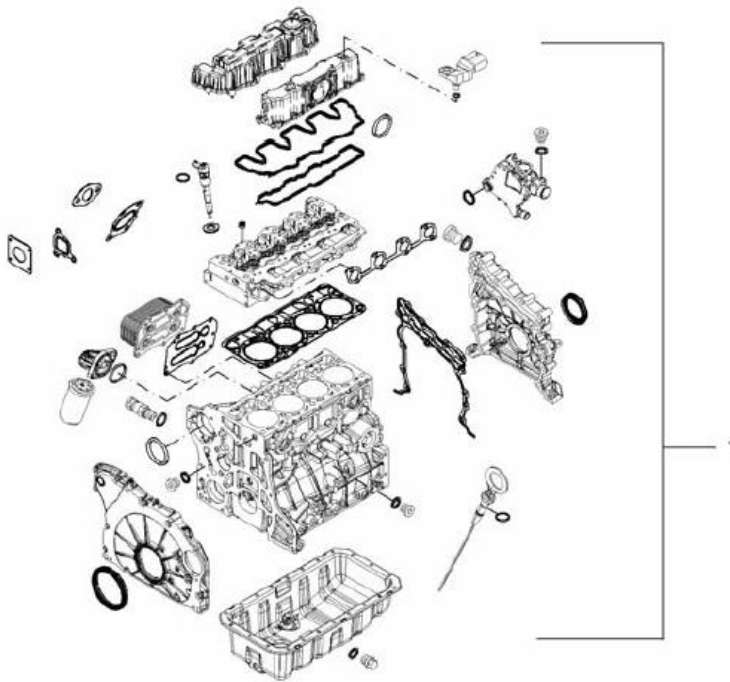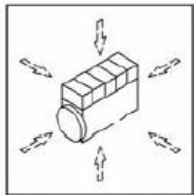

90 - 0512 4355

GASKET SET

NOTE


FIG 201

AIR CLEANER


P1

Year

 2016

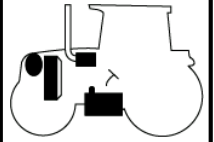

T754SC

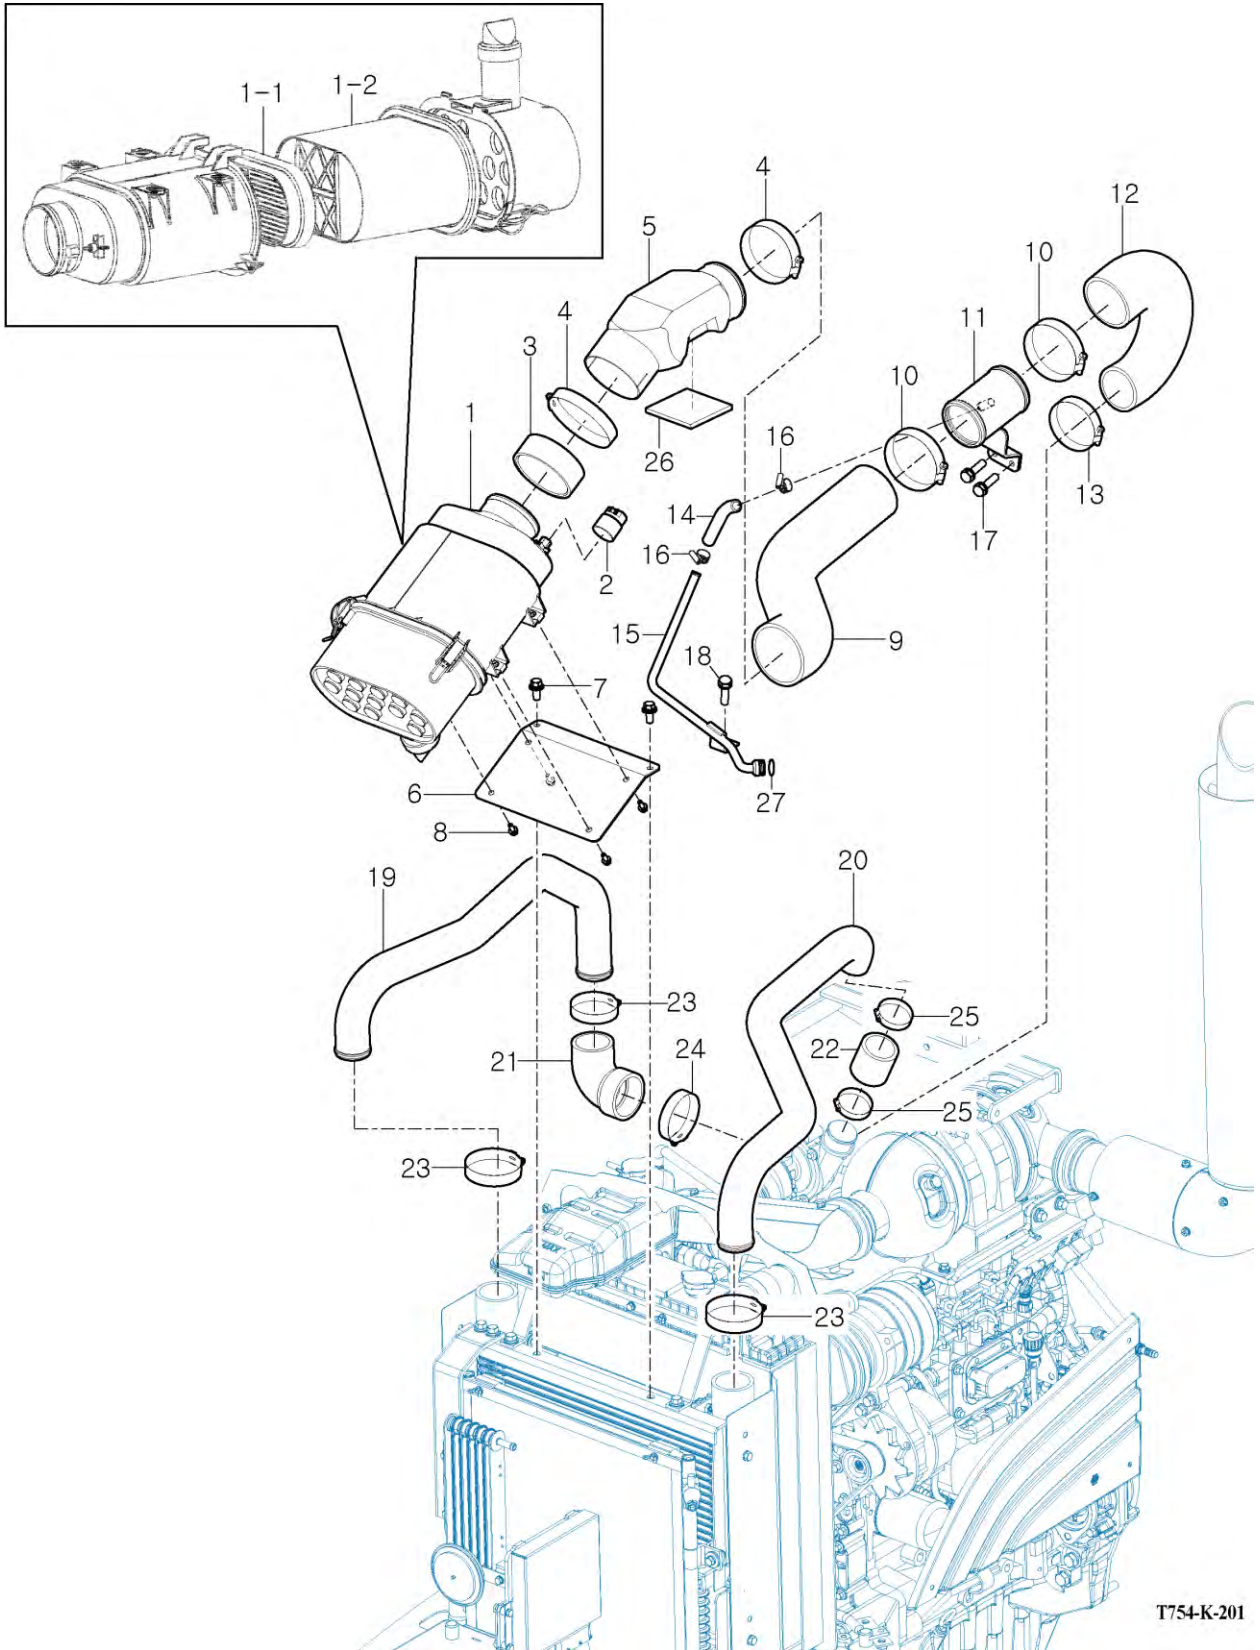 

T754-K-201

NOTE


FIG 202

RADIATOR


P1

Year

 2016

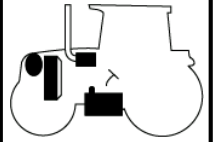

T754SC

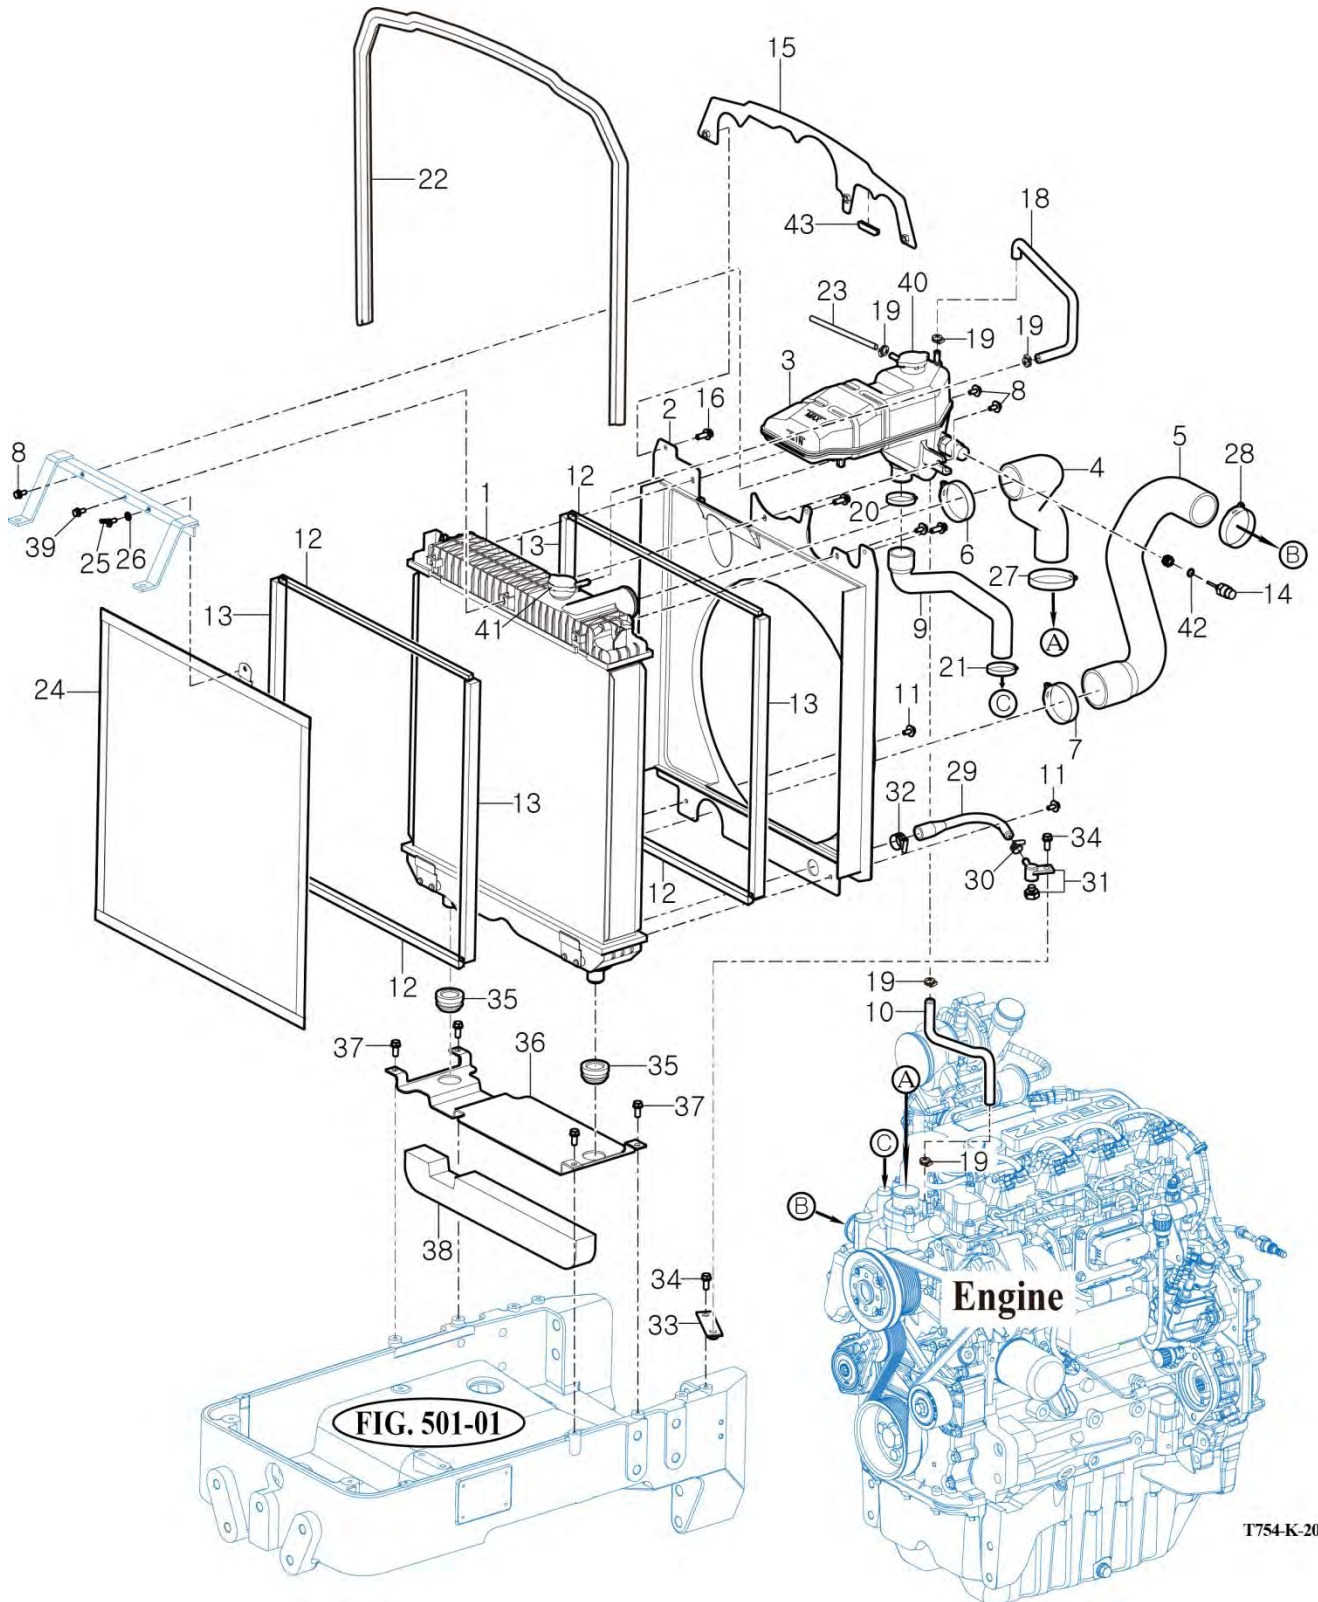 

T754-K-202

NOTE

FIG 203

 
 
T754SC

MUFFLER & EXHAUST PIPE

P1

Year

2016

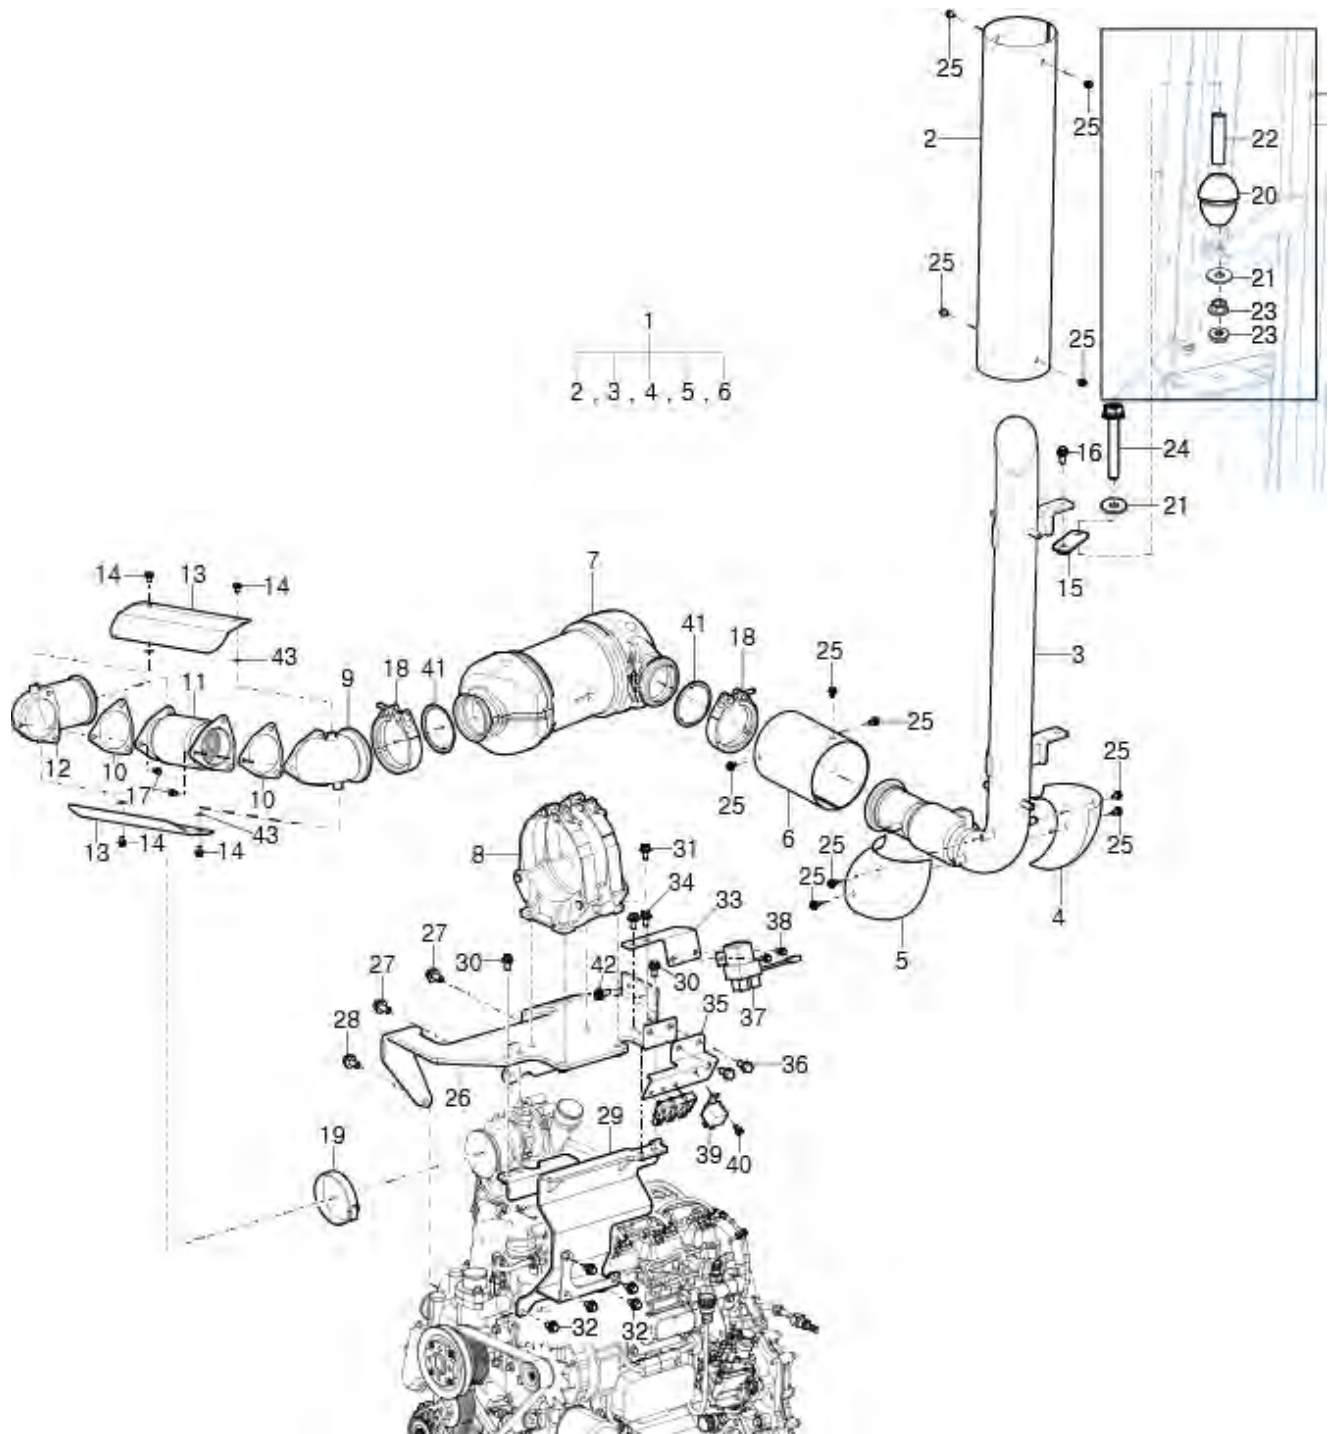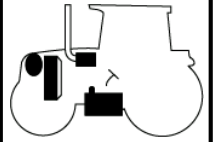

NOTE


FIG 204

FUEL TANK


P1

Year

 2016

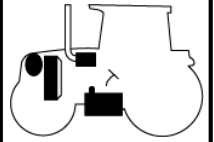

T754SC

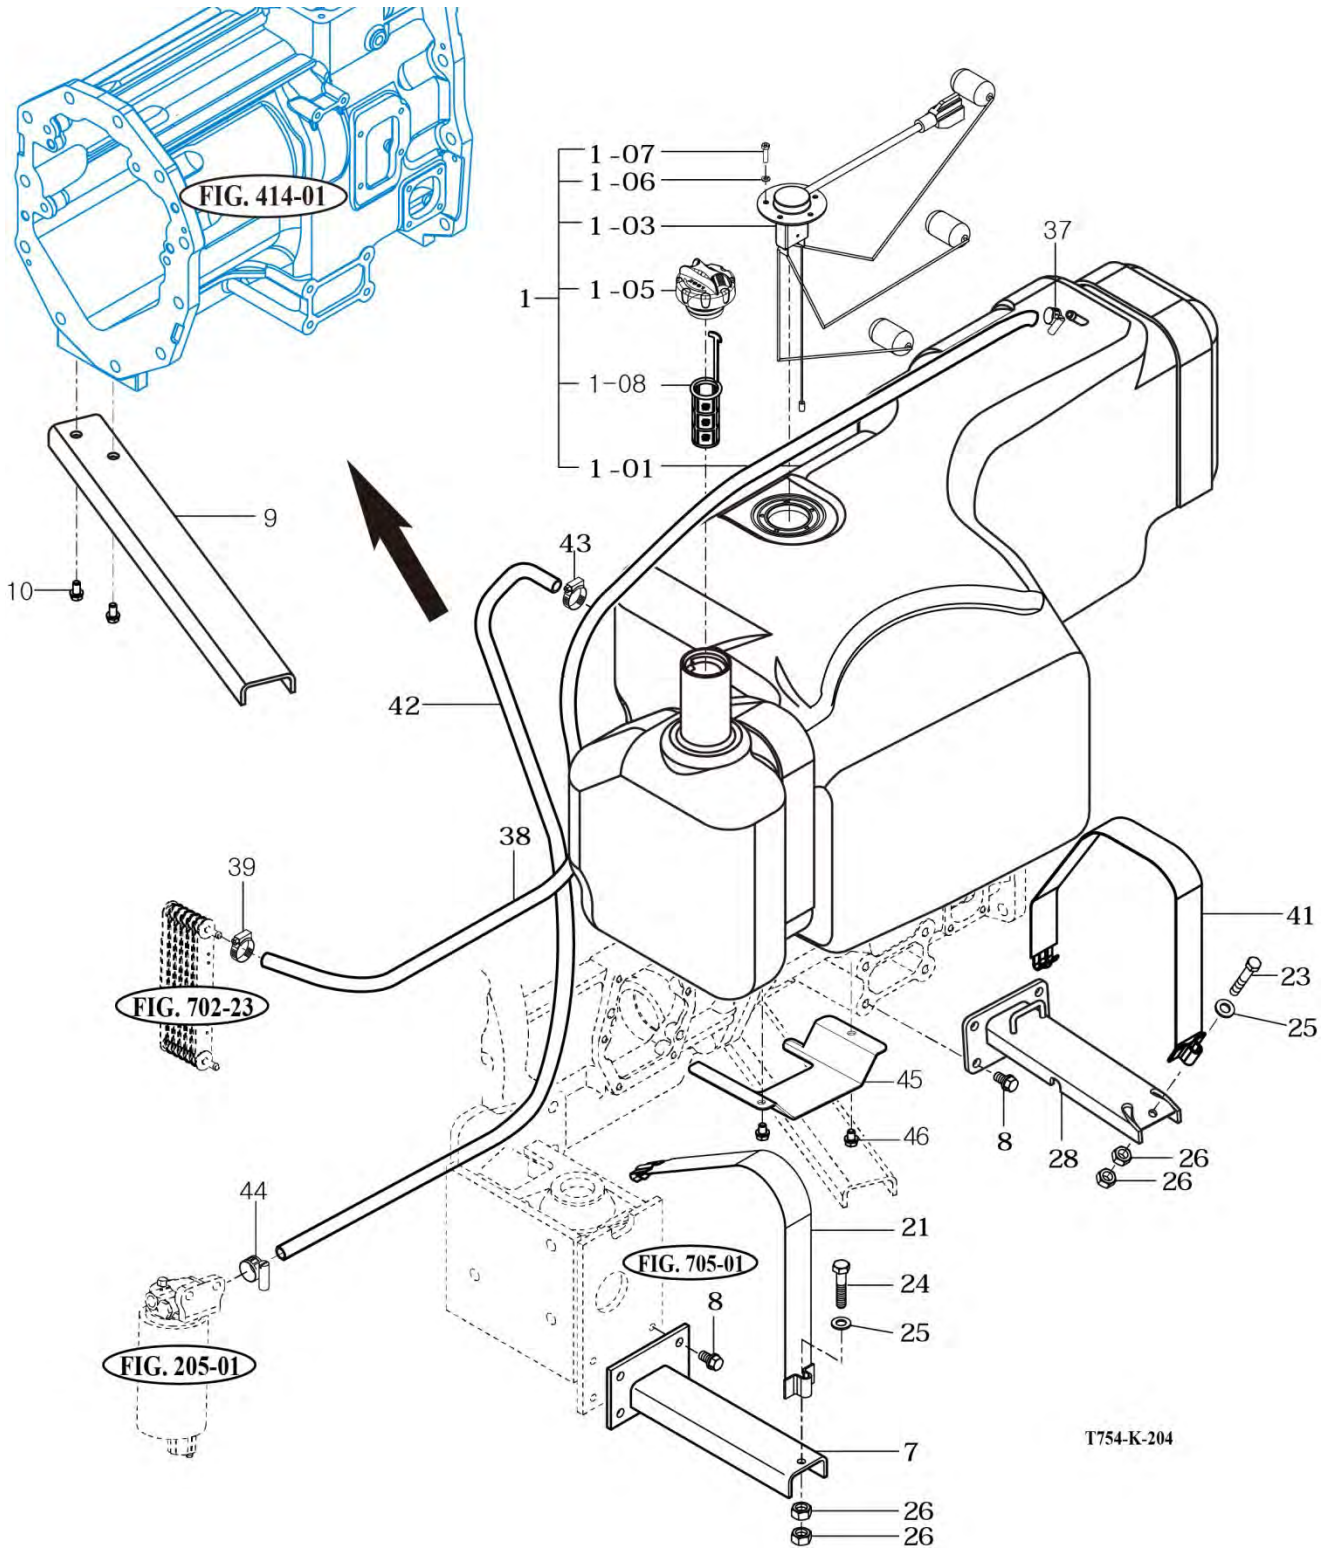 

T754-K-204

NOTE


FIG 205

FUEL FILTER & FUEL PUMP


P1

Year

 2016

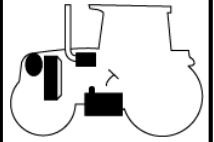

T754SC

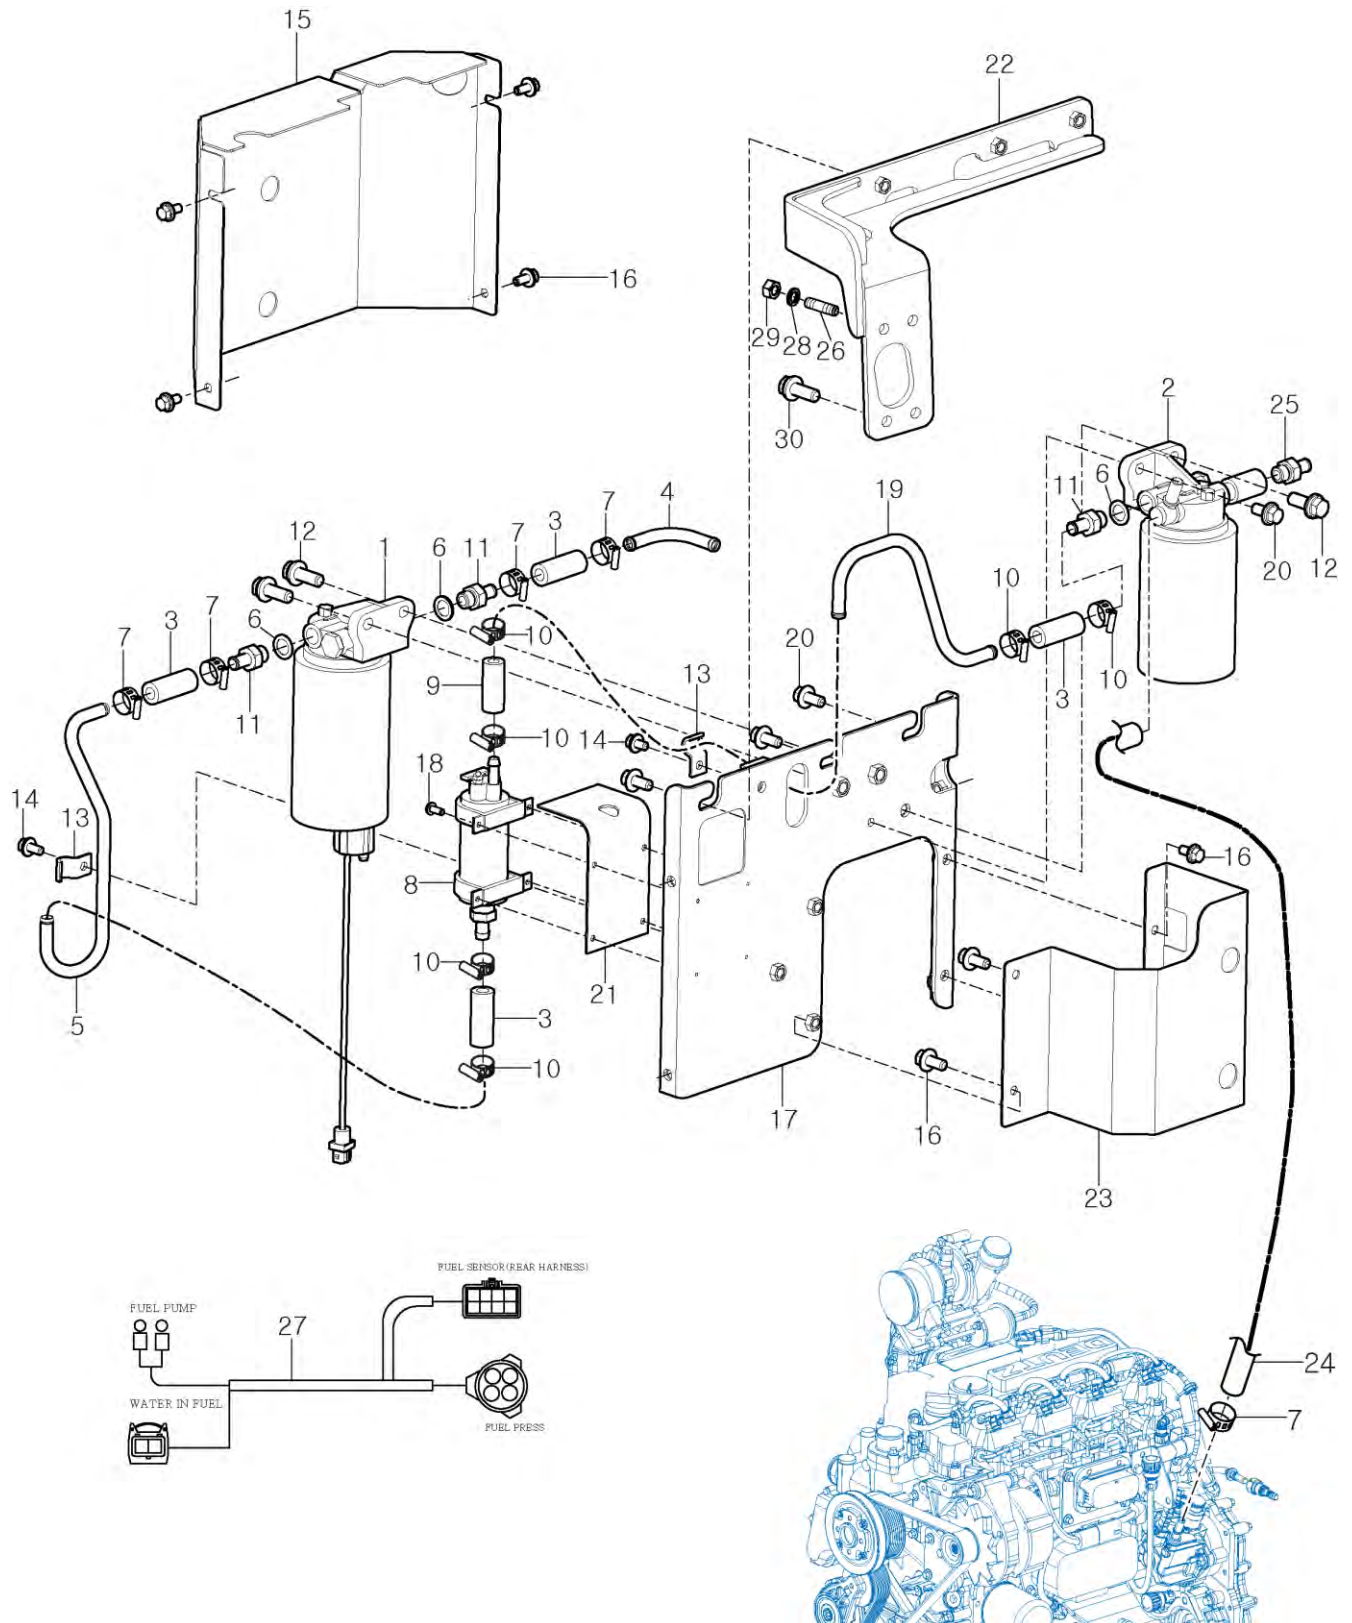 

NOTE


FIG 206

OIL COOLER



P1

Year

 2016

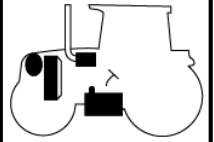

T754SC

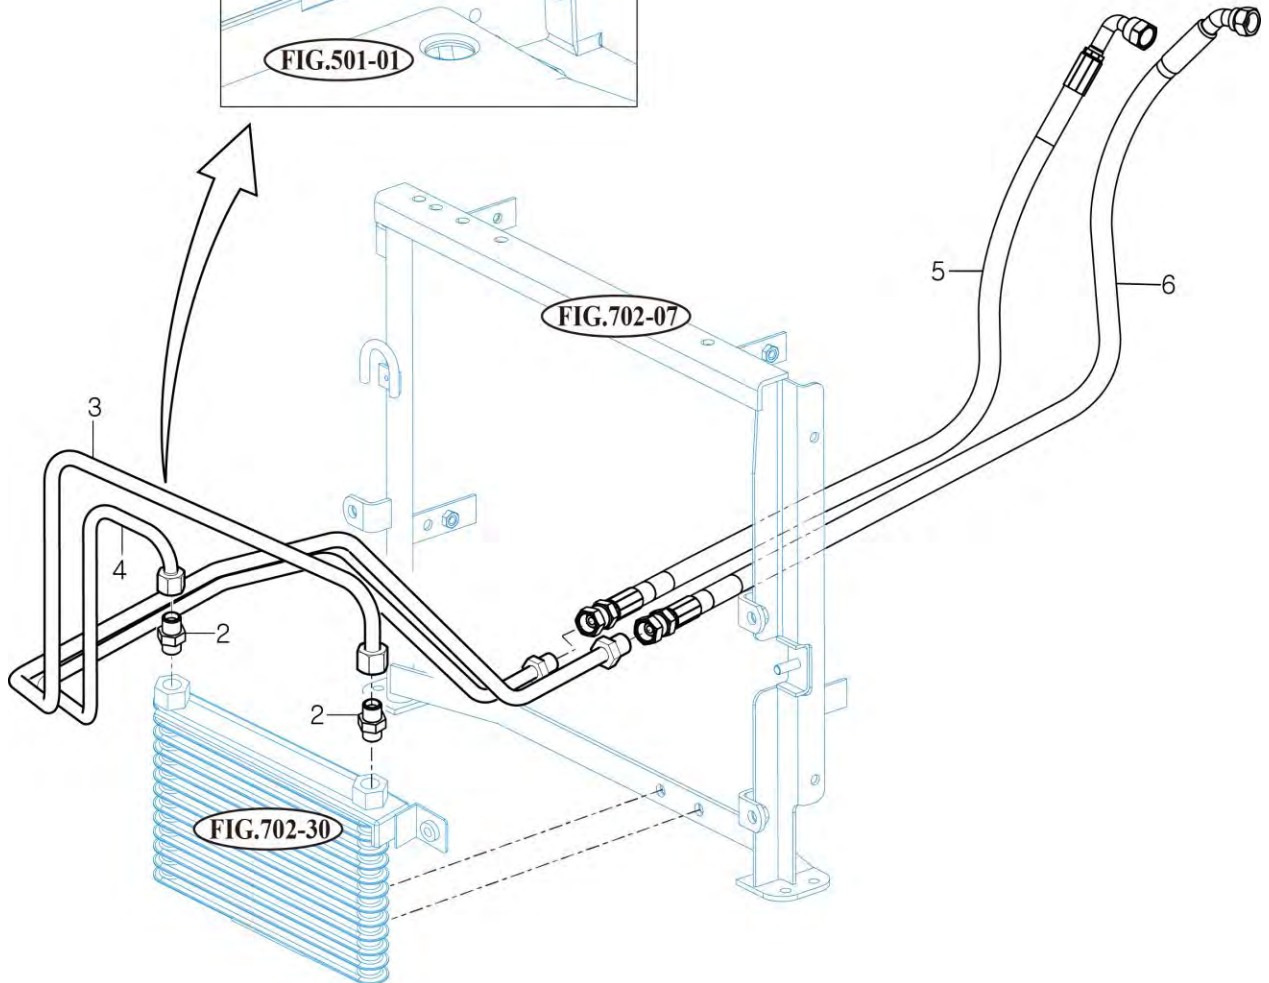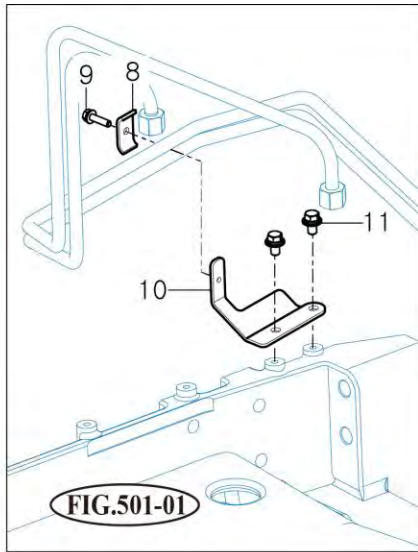  

X750QP-K-207

NOTE


FIG 301

CLUTCH


P1

Year

 2016

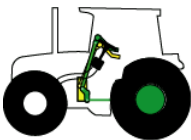

T754SC

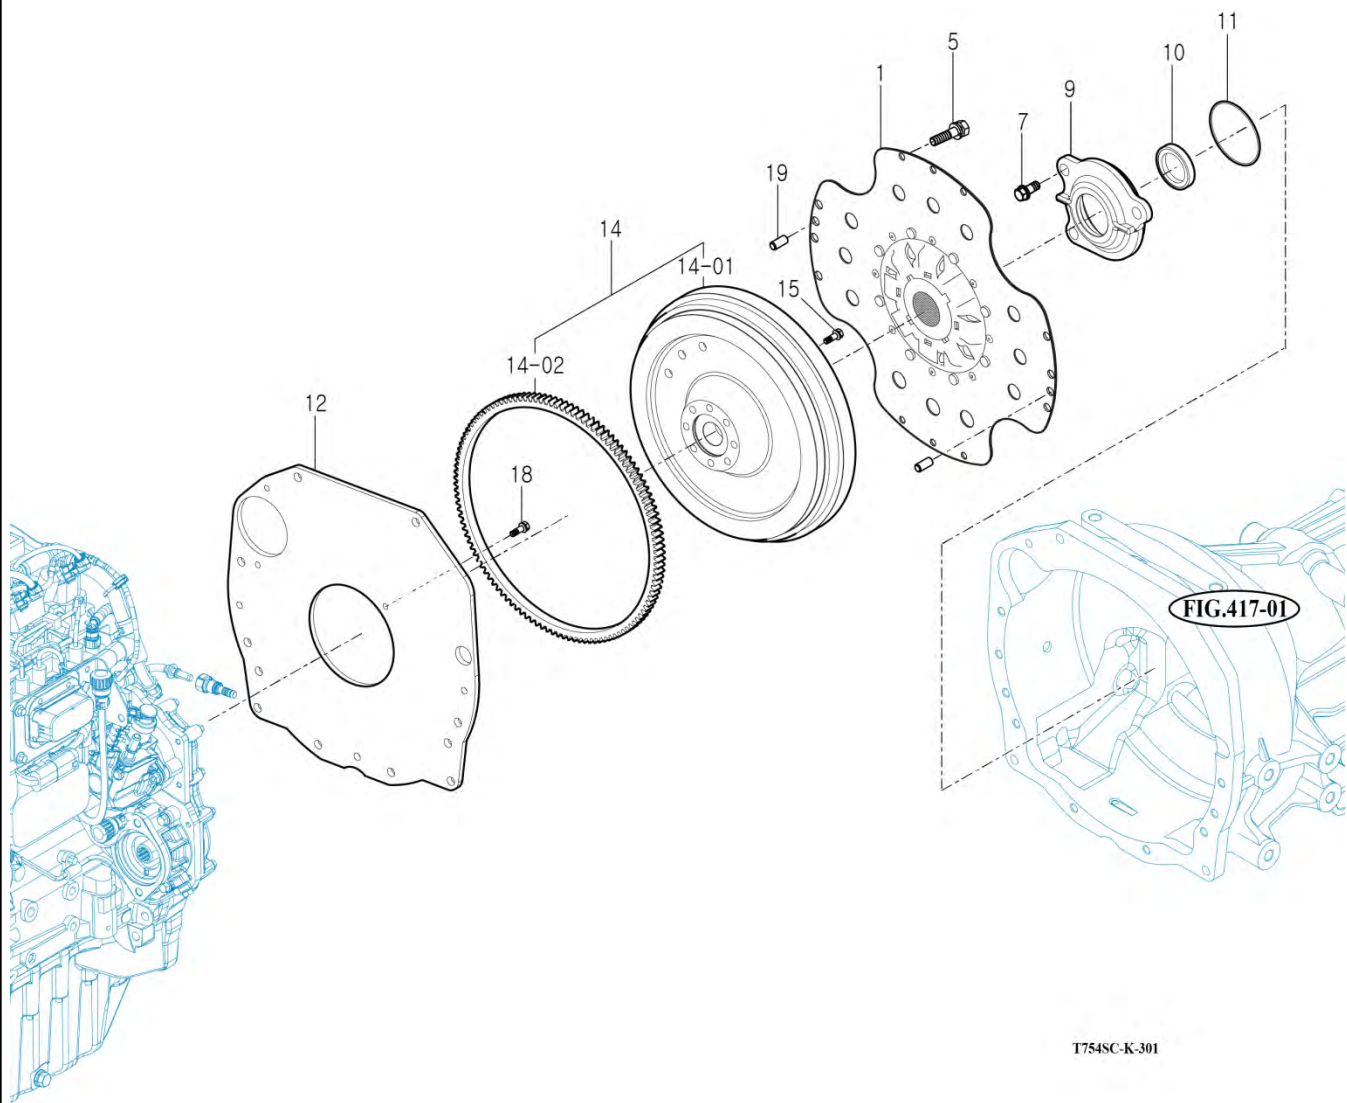 

T754SC-K-301

NOTE


FIG 302

CLUTCH PEDAL


P1

Year

 2016

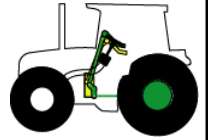

T754SC

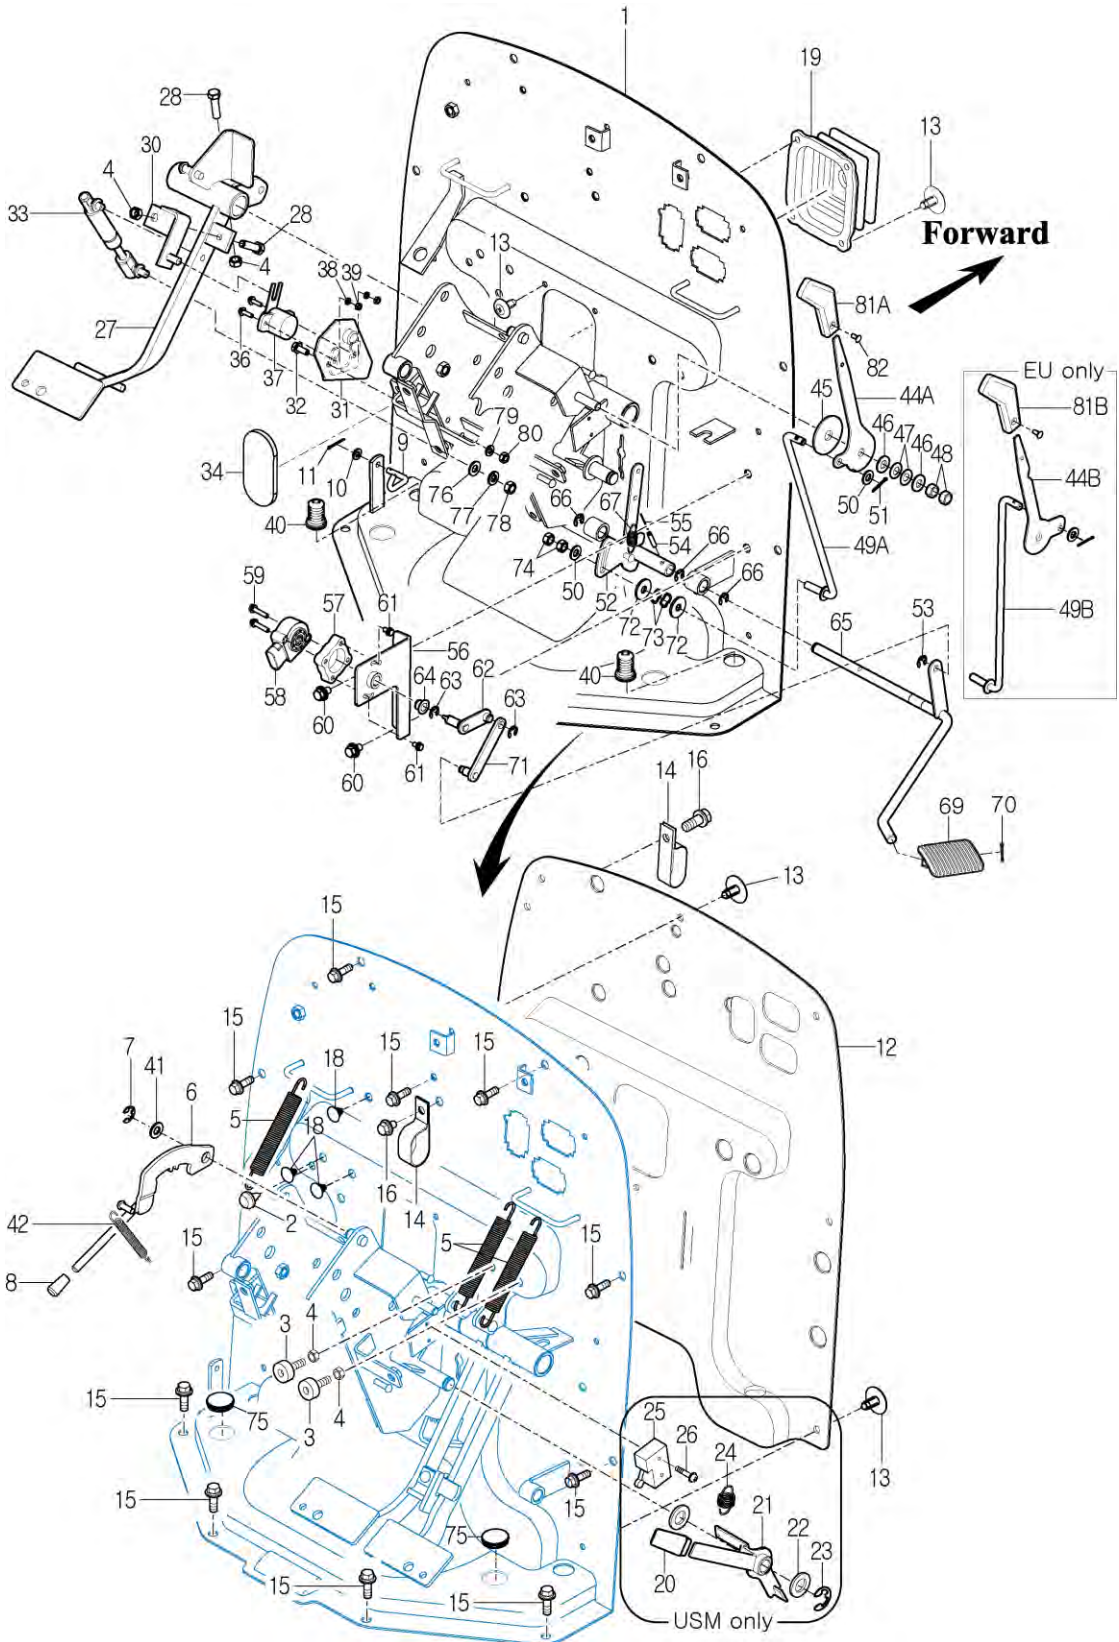 

NOTE


FIG 302

CLUTCH PEDAL


P2

Year

 2016

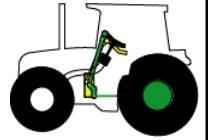

T754SC

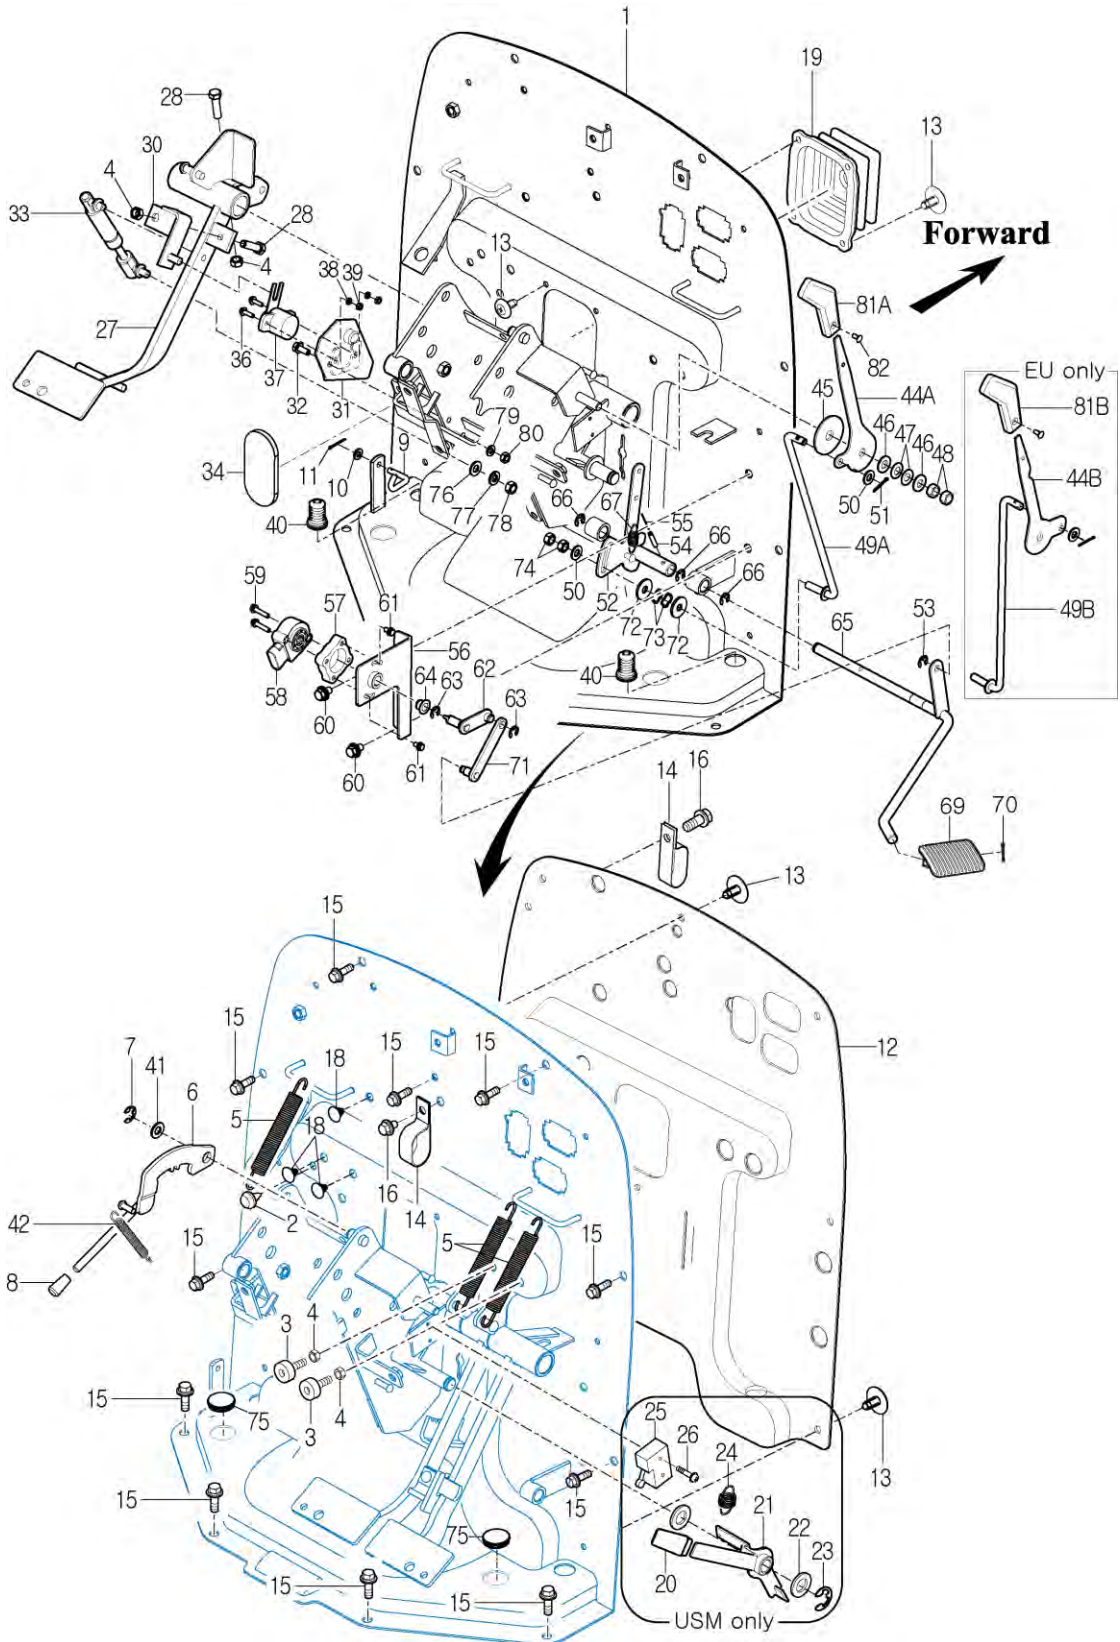 

NOTE

FIG 304

 
 
T754SC

FRONT WHEEL

P1

Year

2016

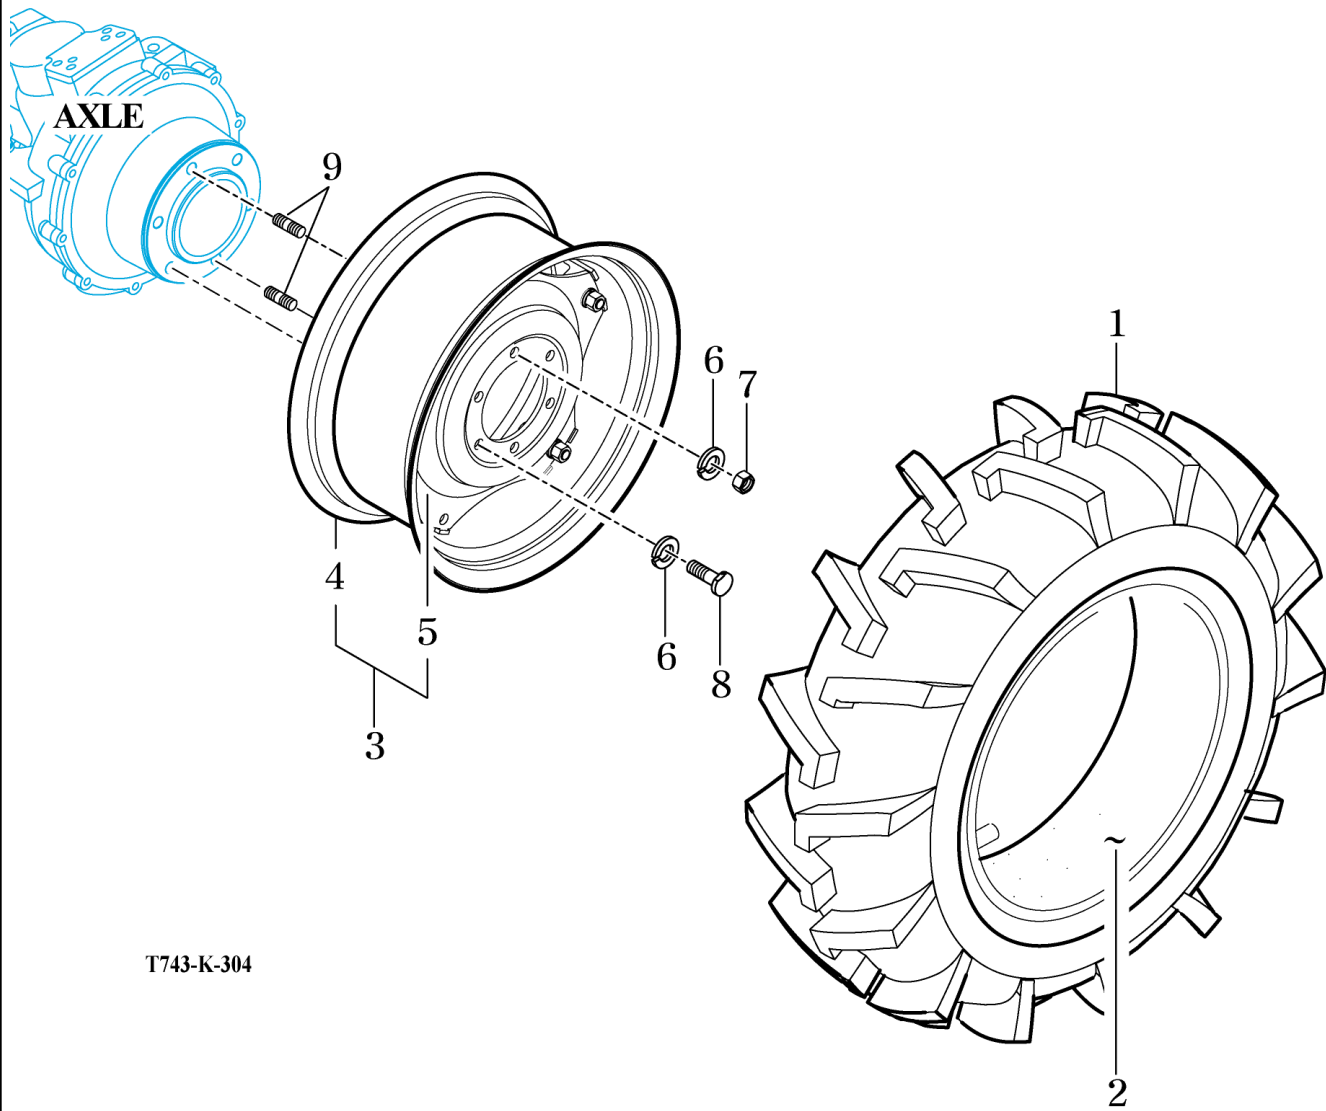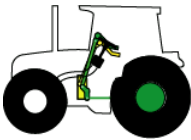

T743-K-304

NOTE


FIG 305

REAR WHEEL


P1

Year

 2016

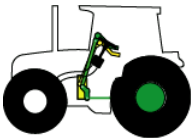

T754SC

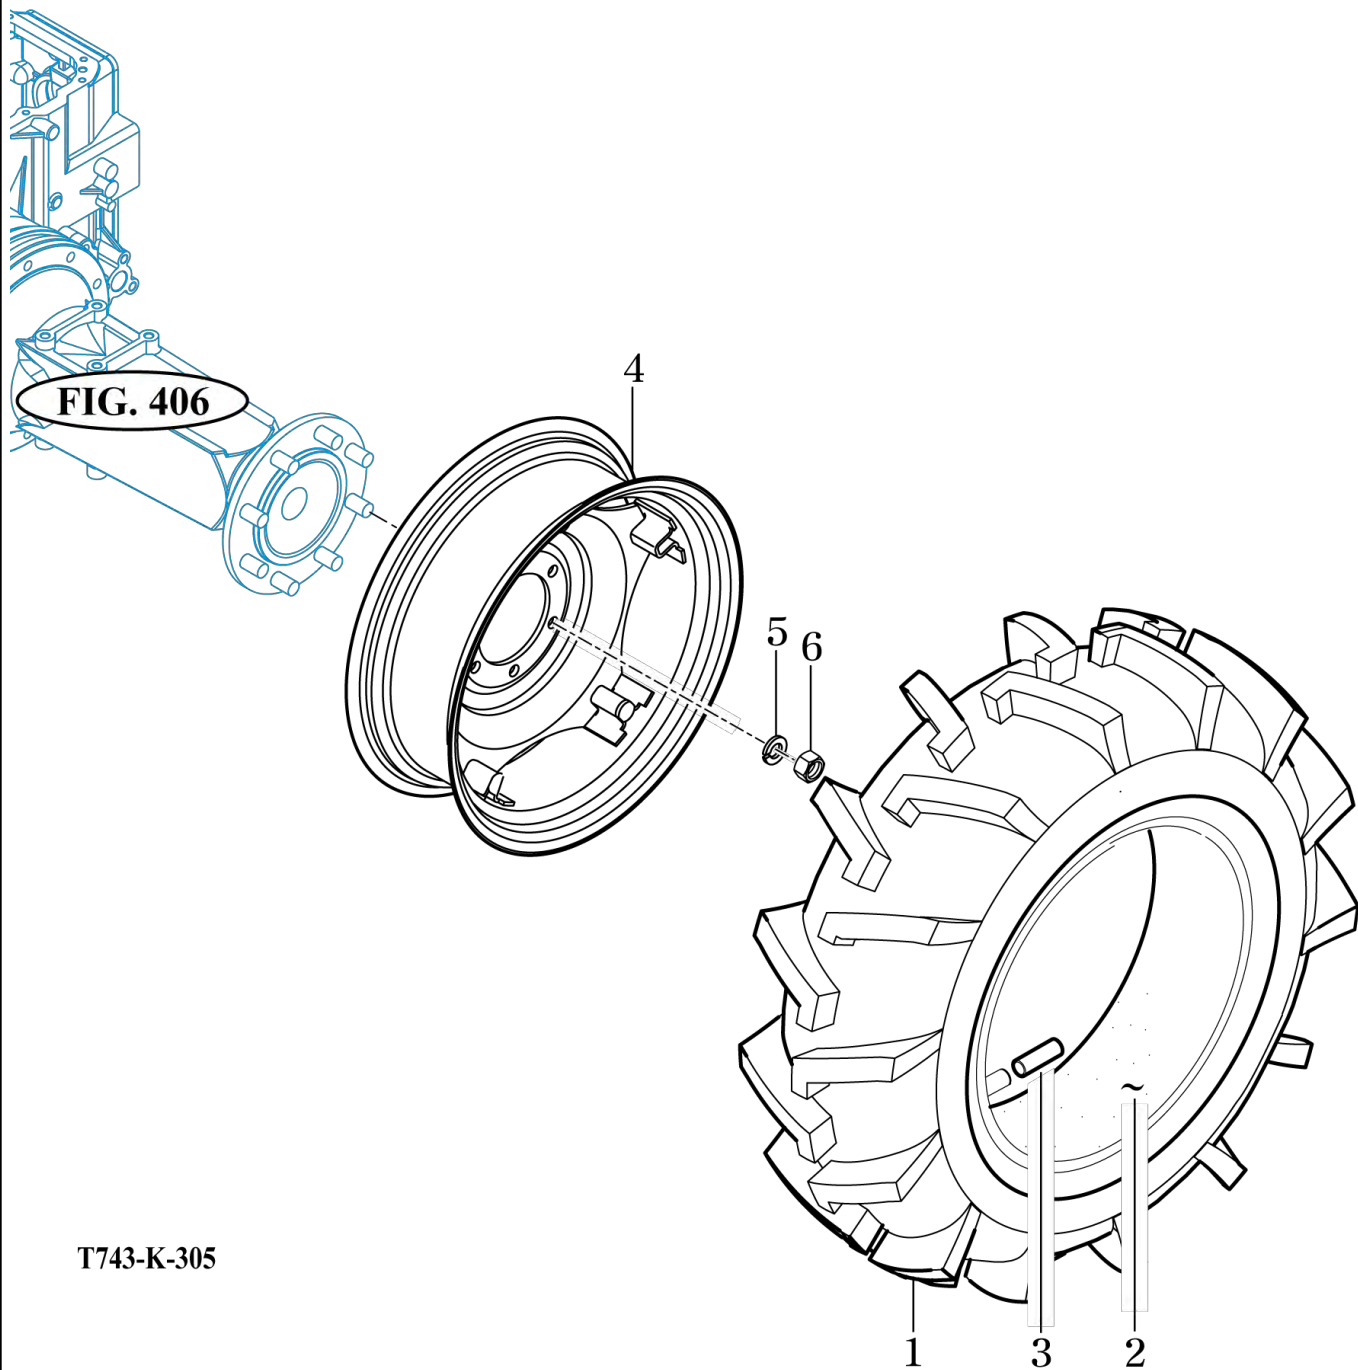 

T743-K-305

NOTE


FIG 306

POWER STEERING WHEEL


P1

Year

 2016

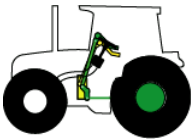

T754SC

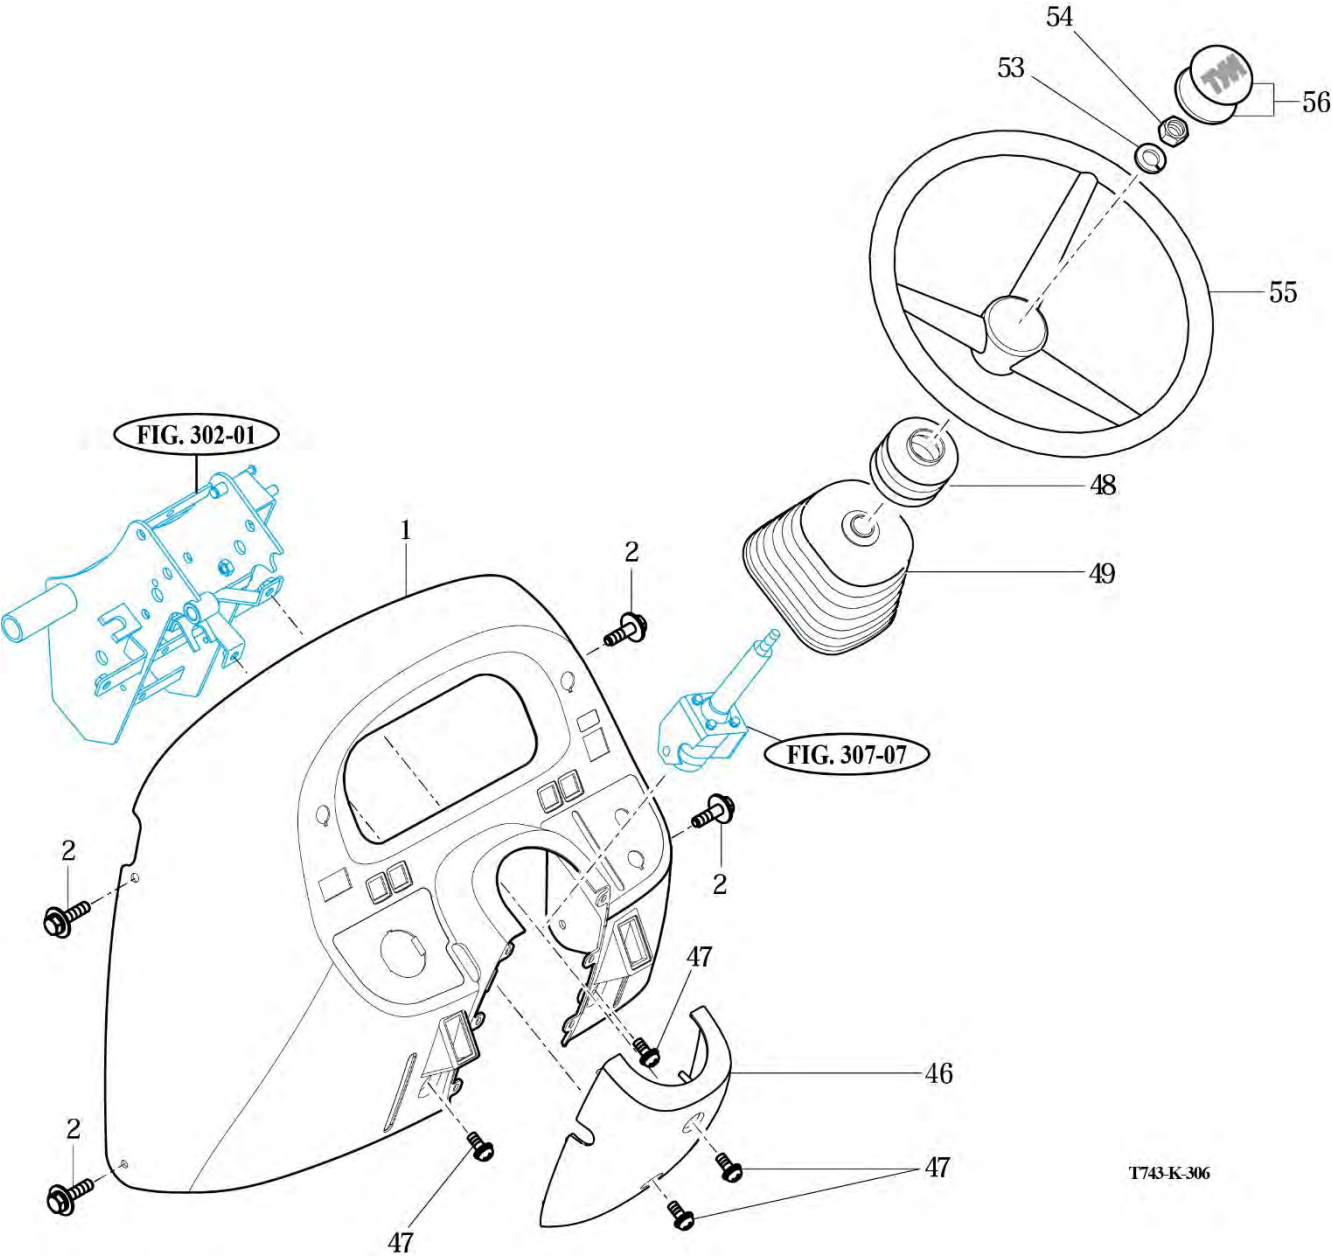 

T743-K-306

NOTE


FIG 308

POWER STEERING CYLINDER



P1

Year

 2016

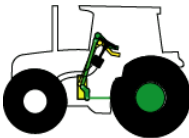

T754SC

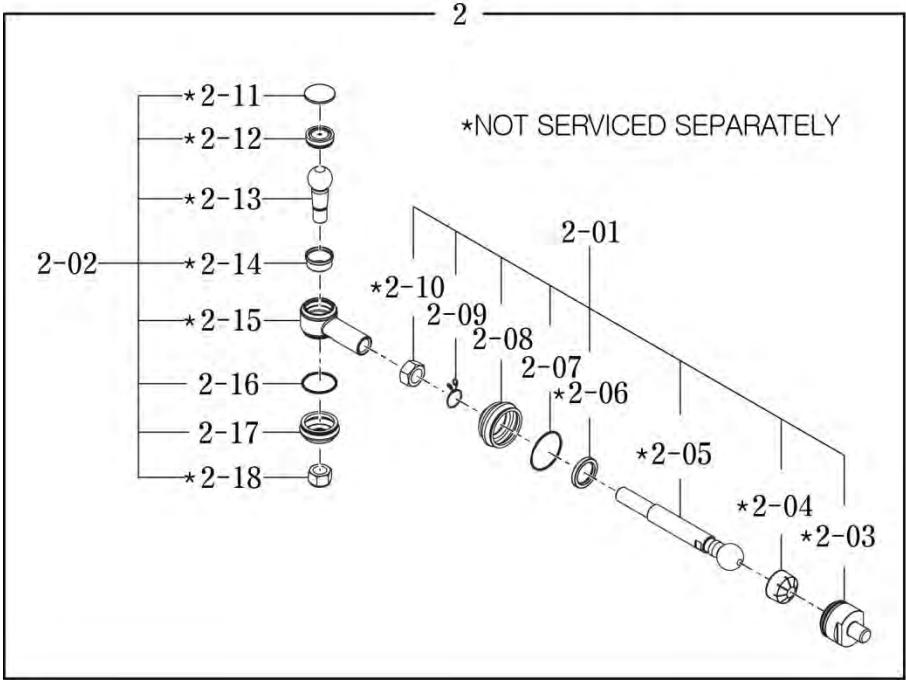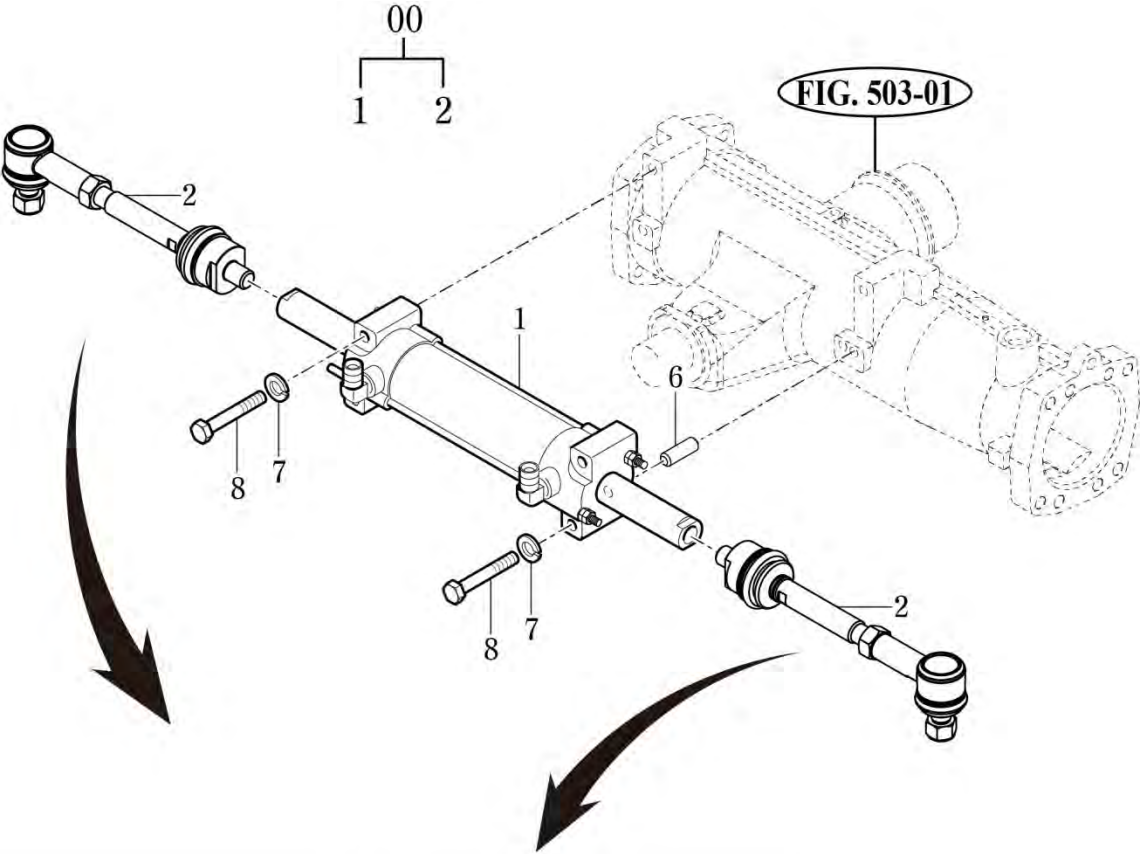  

TX553/653/703-K-309

NOTE


FIG 401

CASE , RR TRANSMISSION


P1

Year

 2016

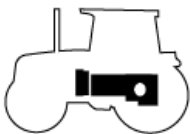

T754SC

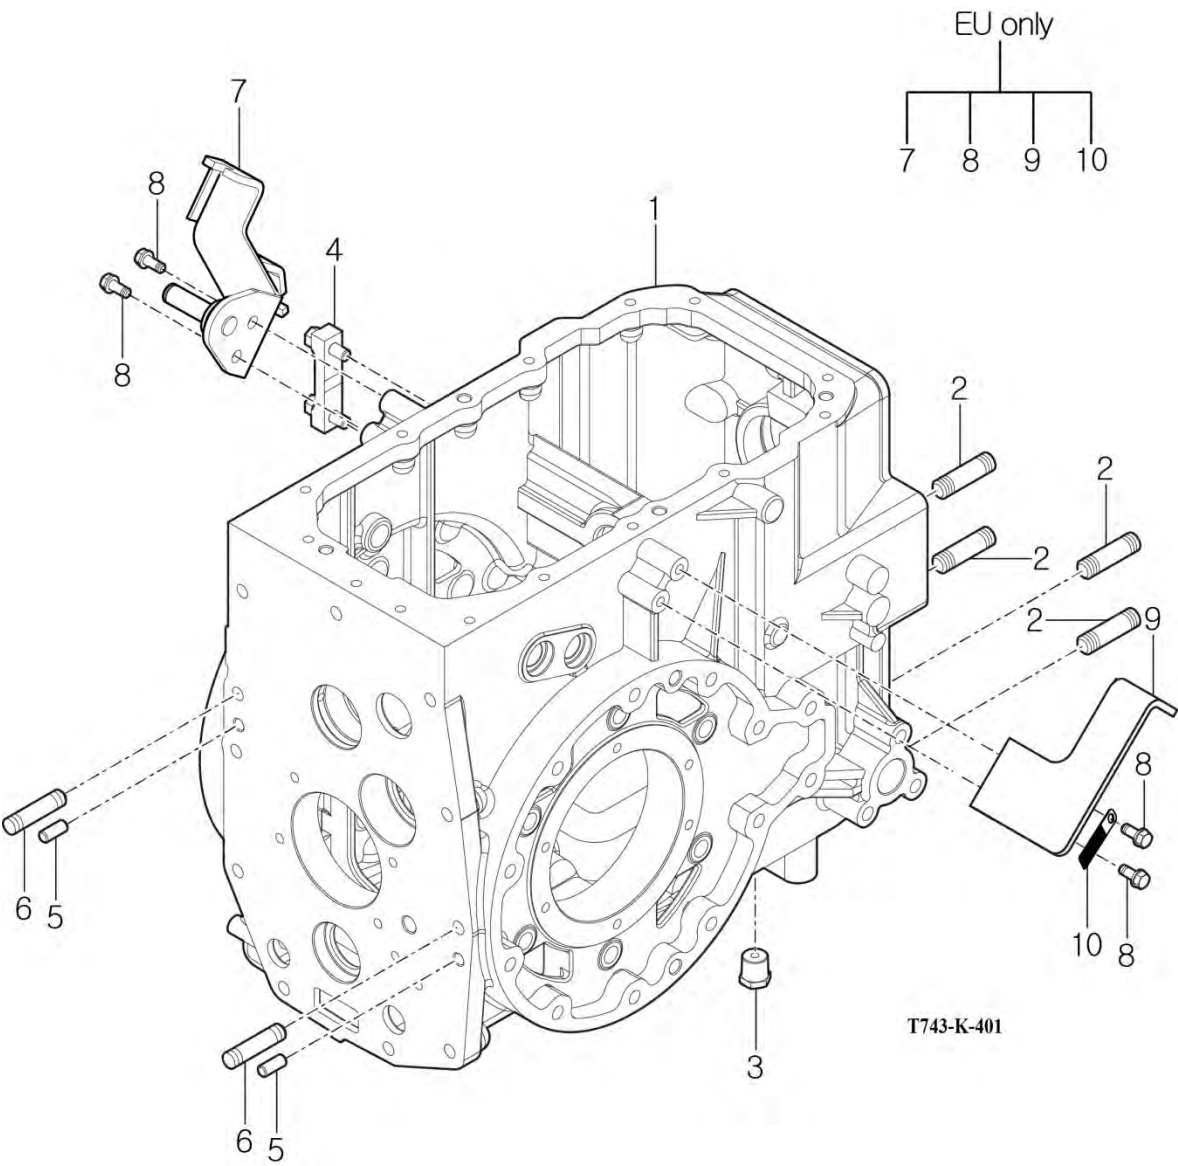 

NOTE


FIG 403

REAR DIFFERENTIAL GEARS


P1

Year

 2016

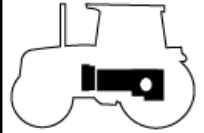

T754SC

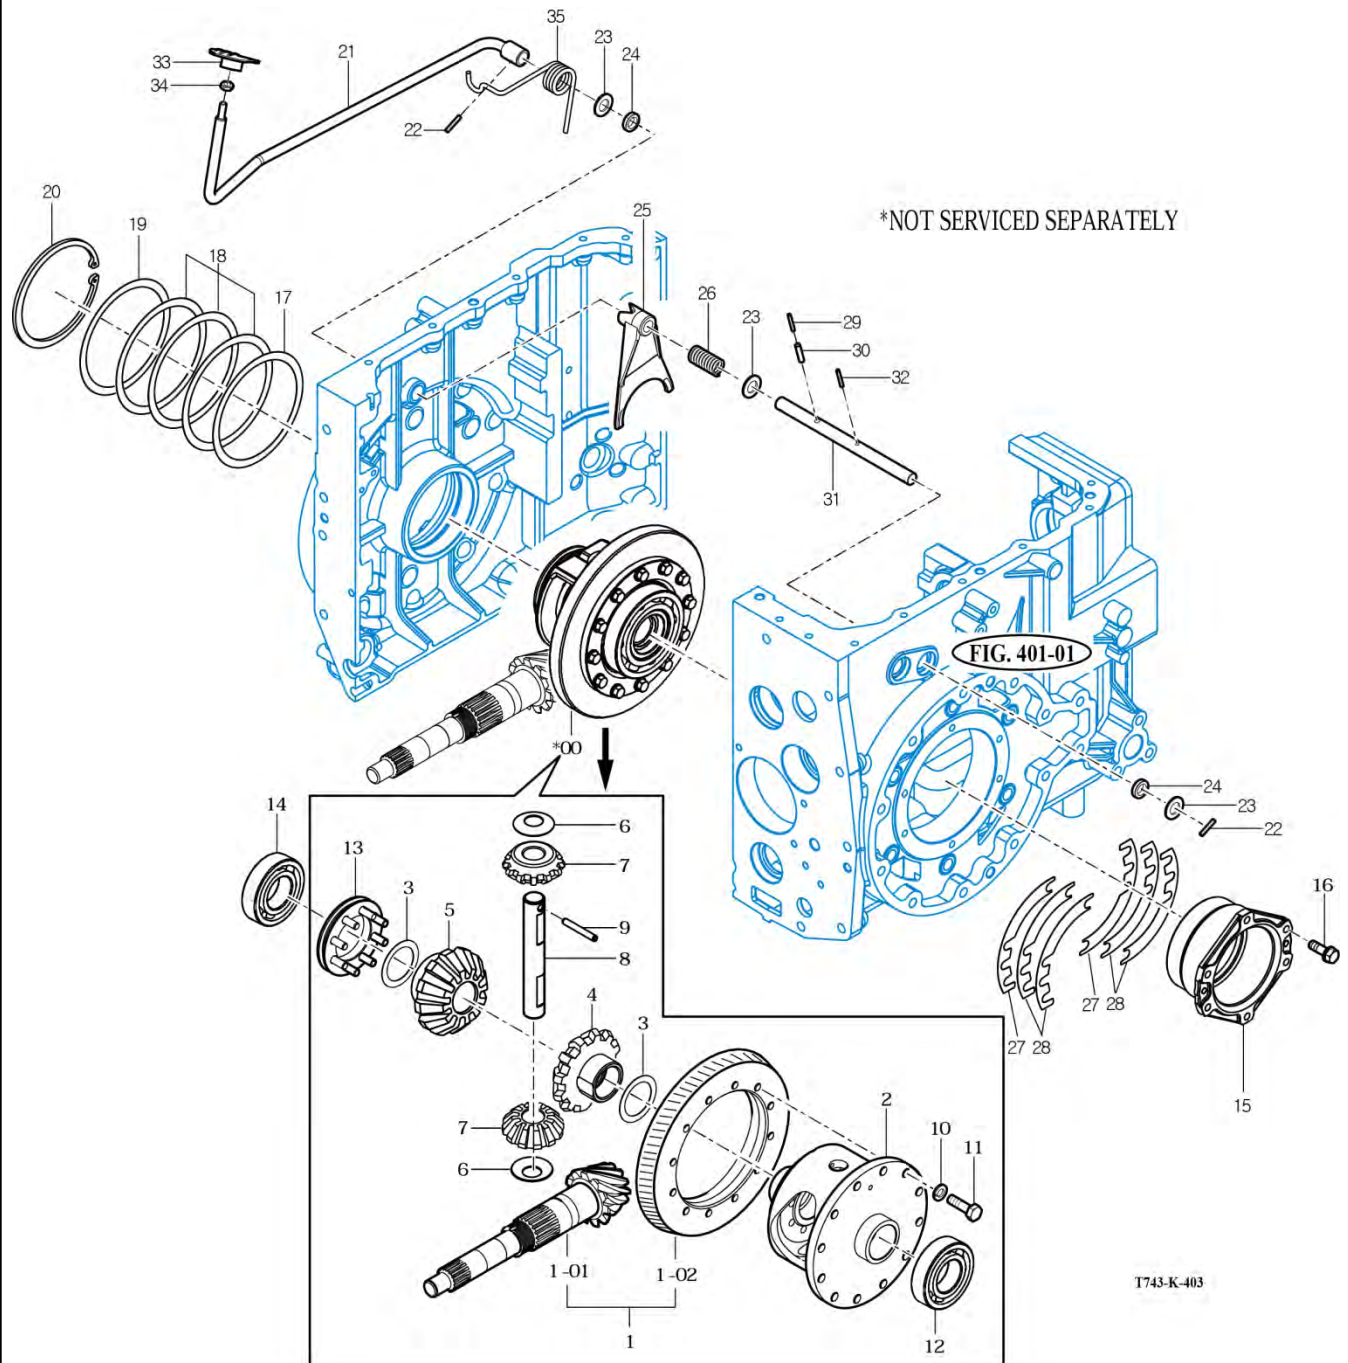 

NOTE


FIG 404

P.T.O CHANGE GEARS


P1

Year

 2016

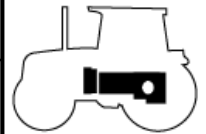

T754SC

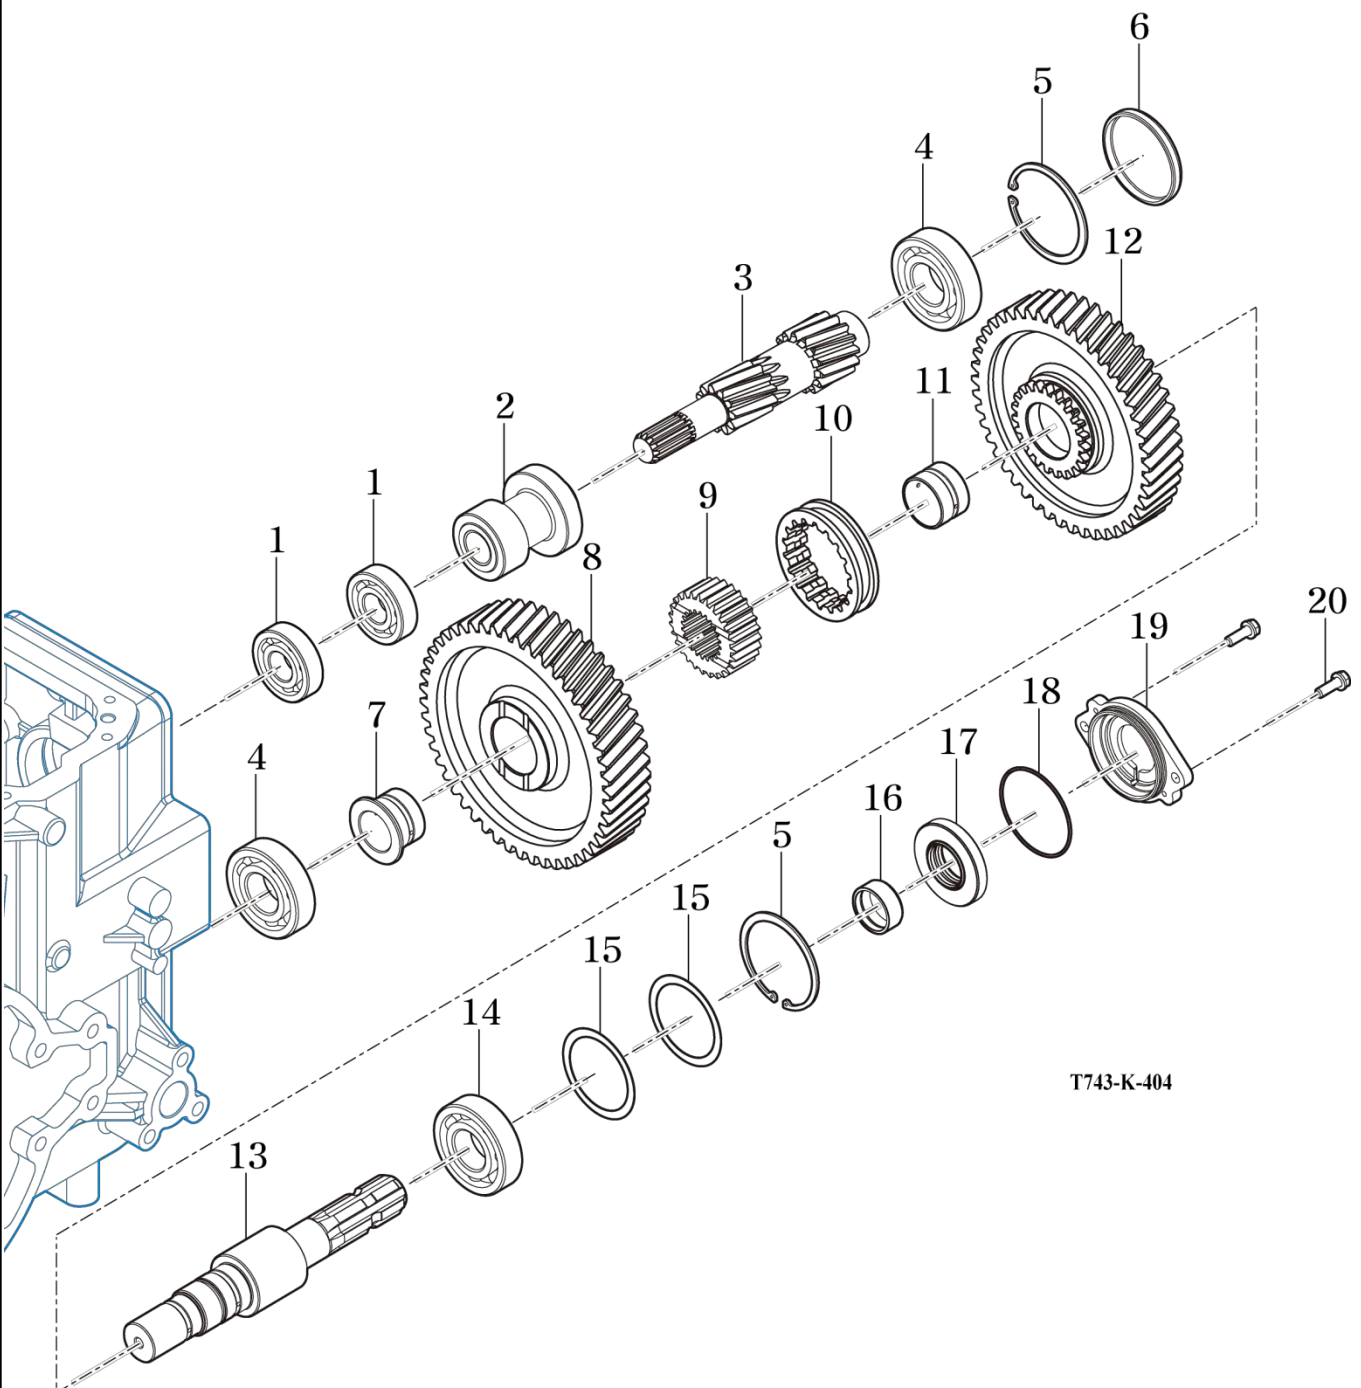 

NOTE


FIG 405

P.T.O CHANGE SHIFTER


P1

Year

 2016

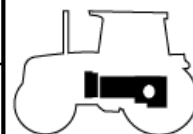

T754SC

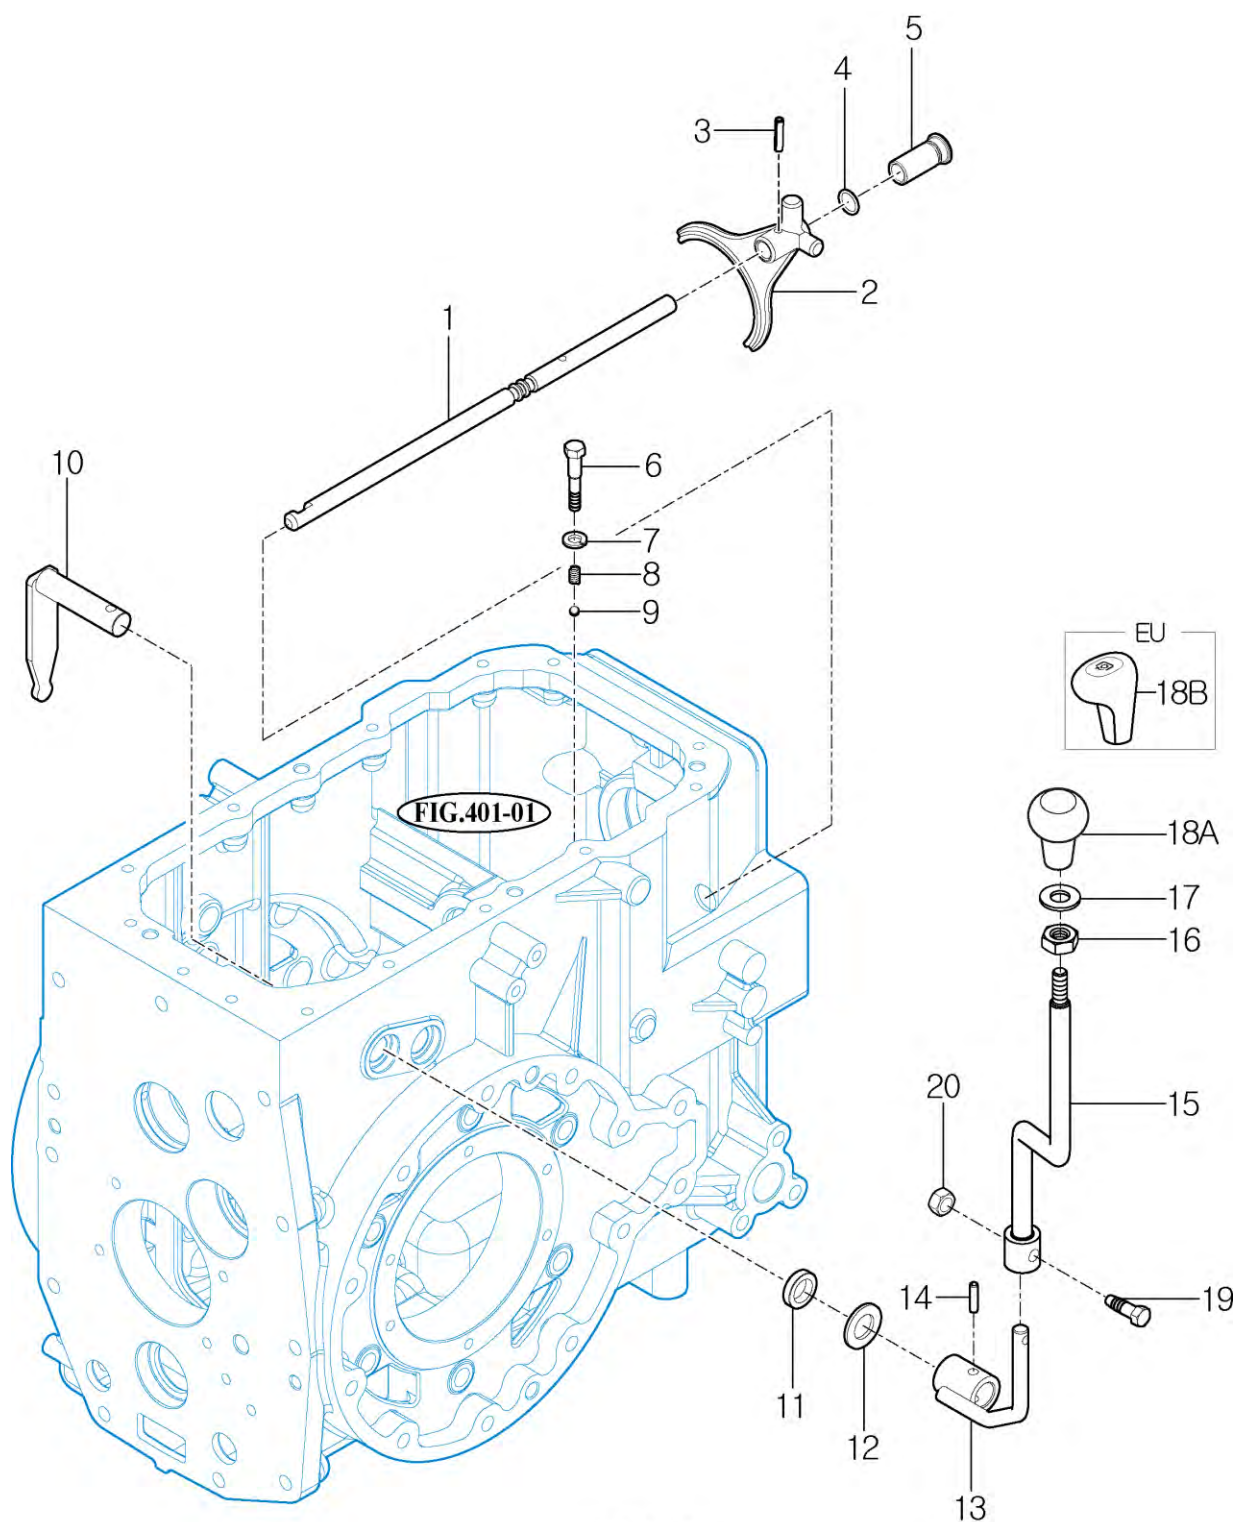 

T754-K-405

NOTE


FIG 406

HOUSING , RR AXLE


P1

Year

 2016

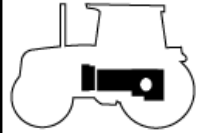

T754SC

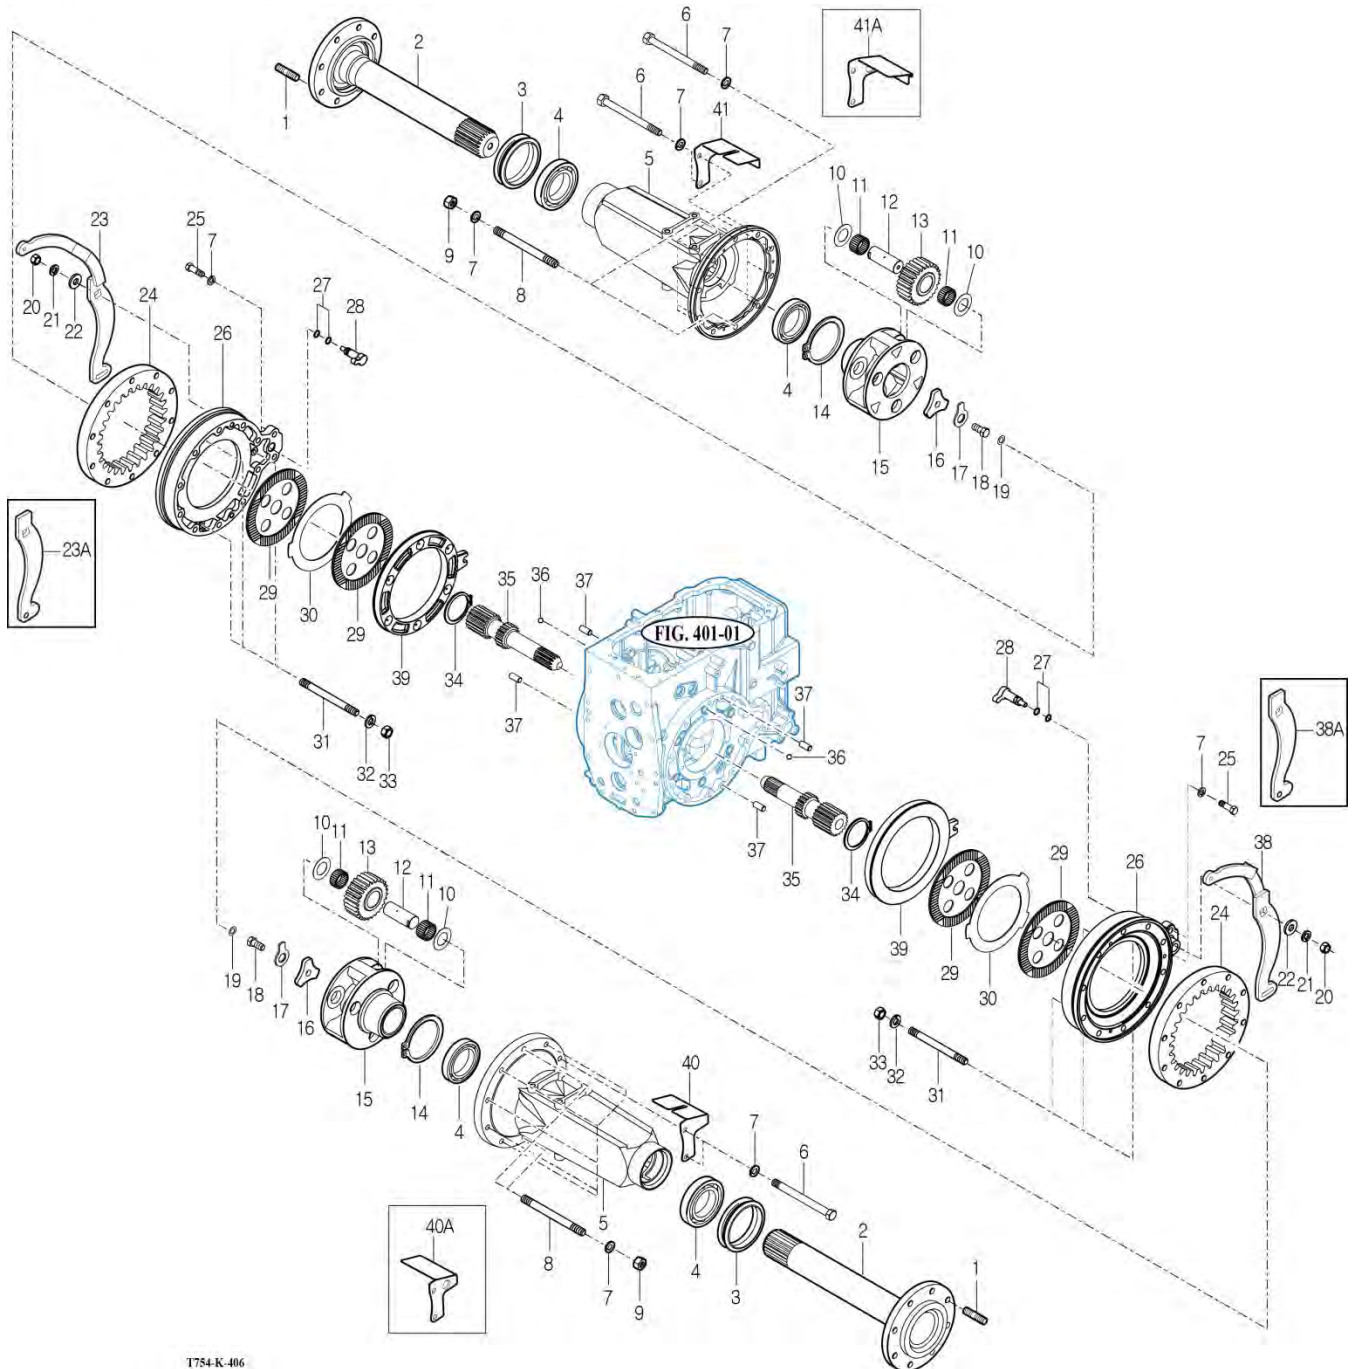 

T754-K-406

NOTE


FIG 407

P.T.O DRIVE SHAFT


P1

Year

 2016

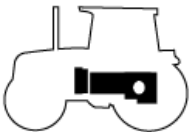

T754SC

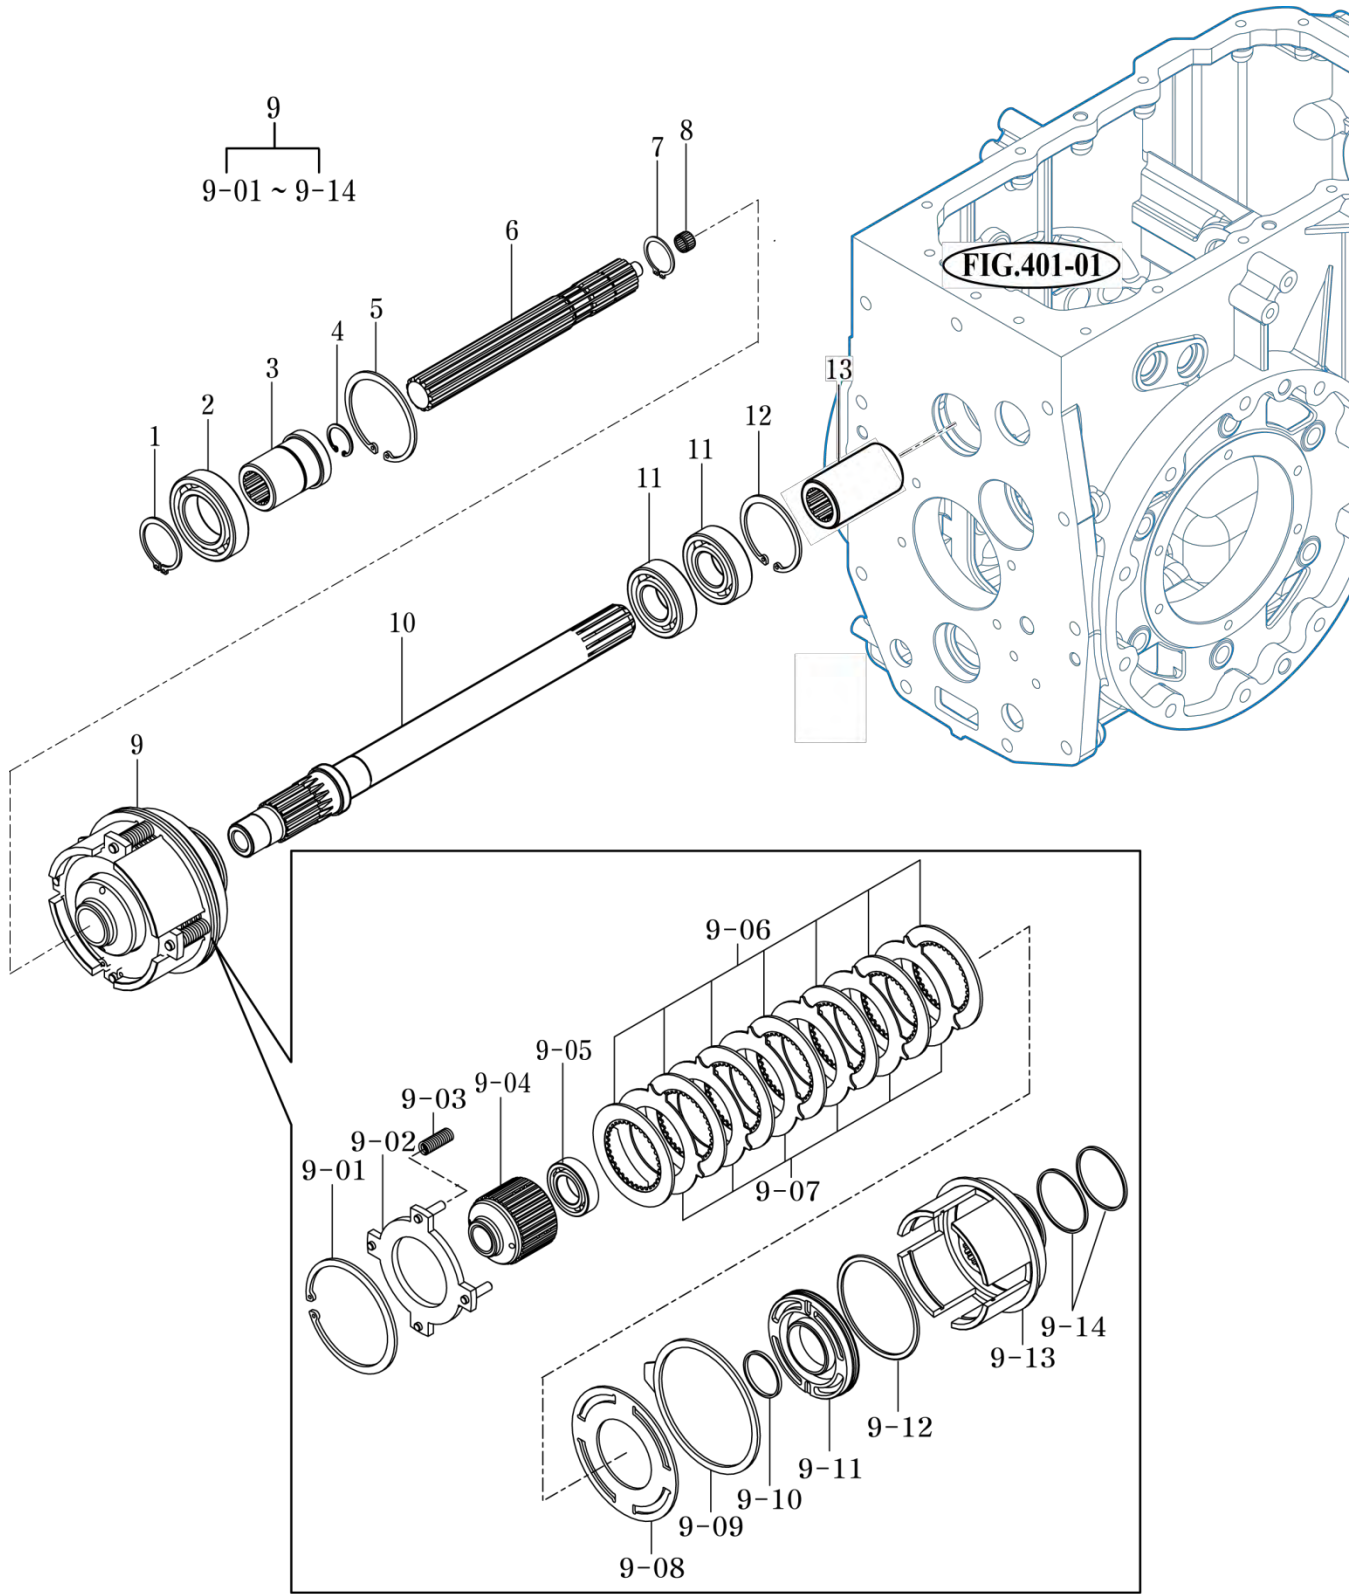 

T743-K-407

NOTE

FIG 408

 
 
T754SC

CREEP CHANGE

P1

Year

2016

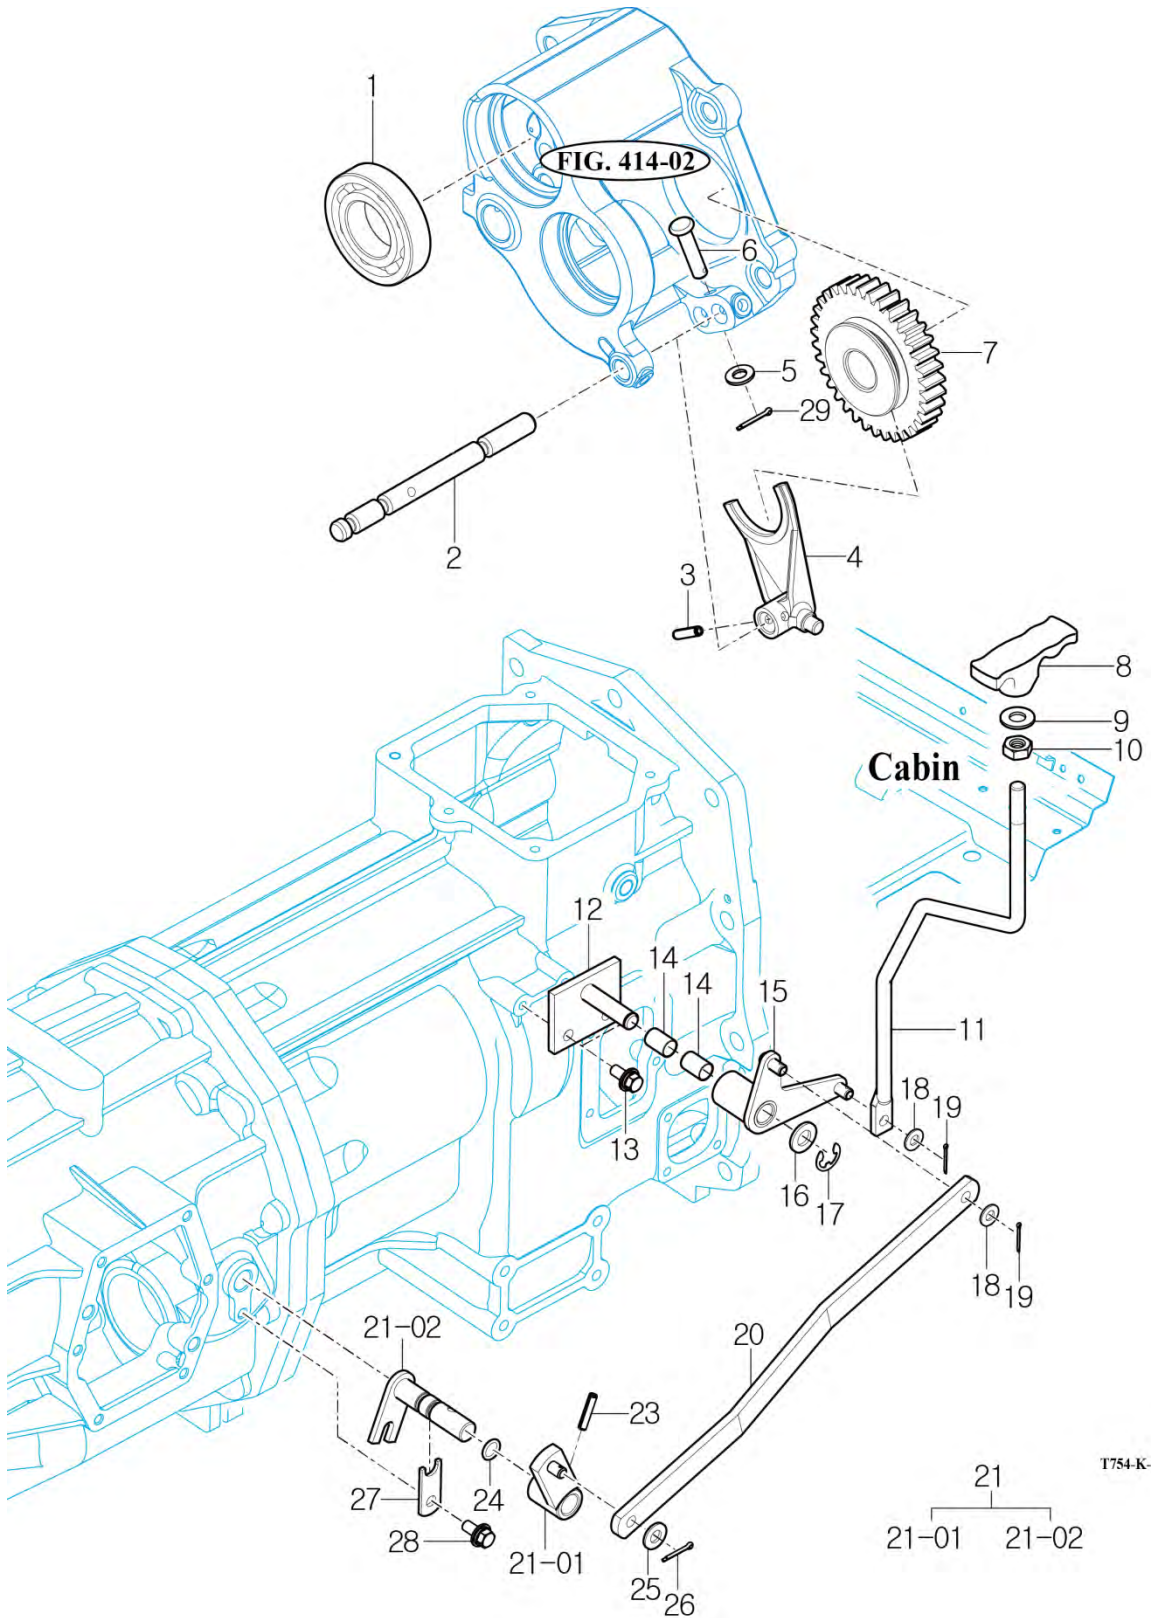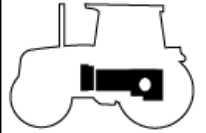

NOTE

FIG 409

 
 
T754SC

INPUT & COUNTER GEARS

P1

Year

2016

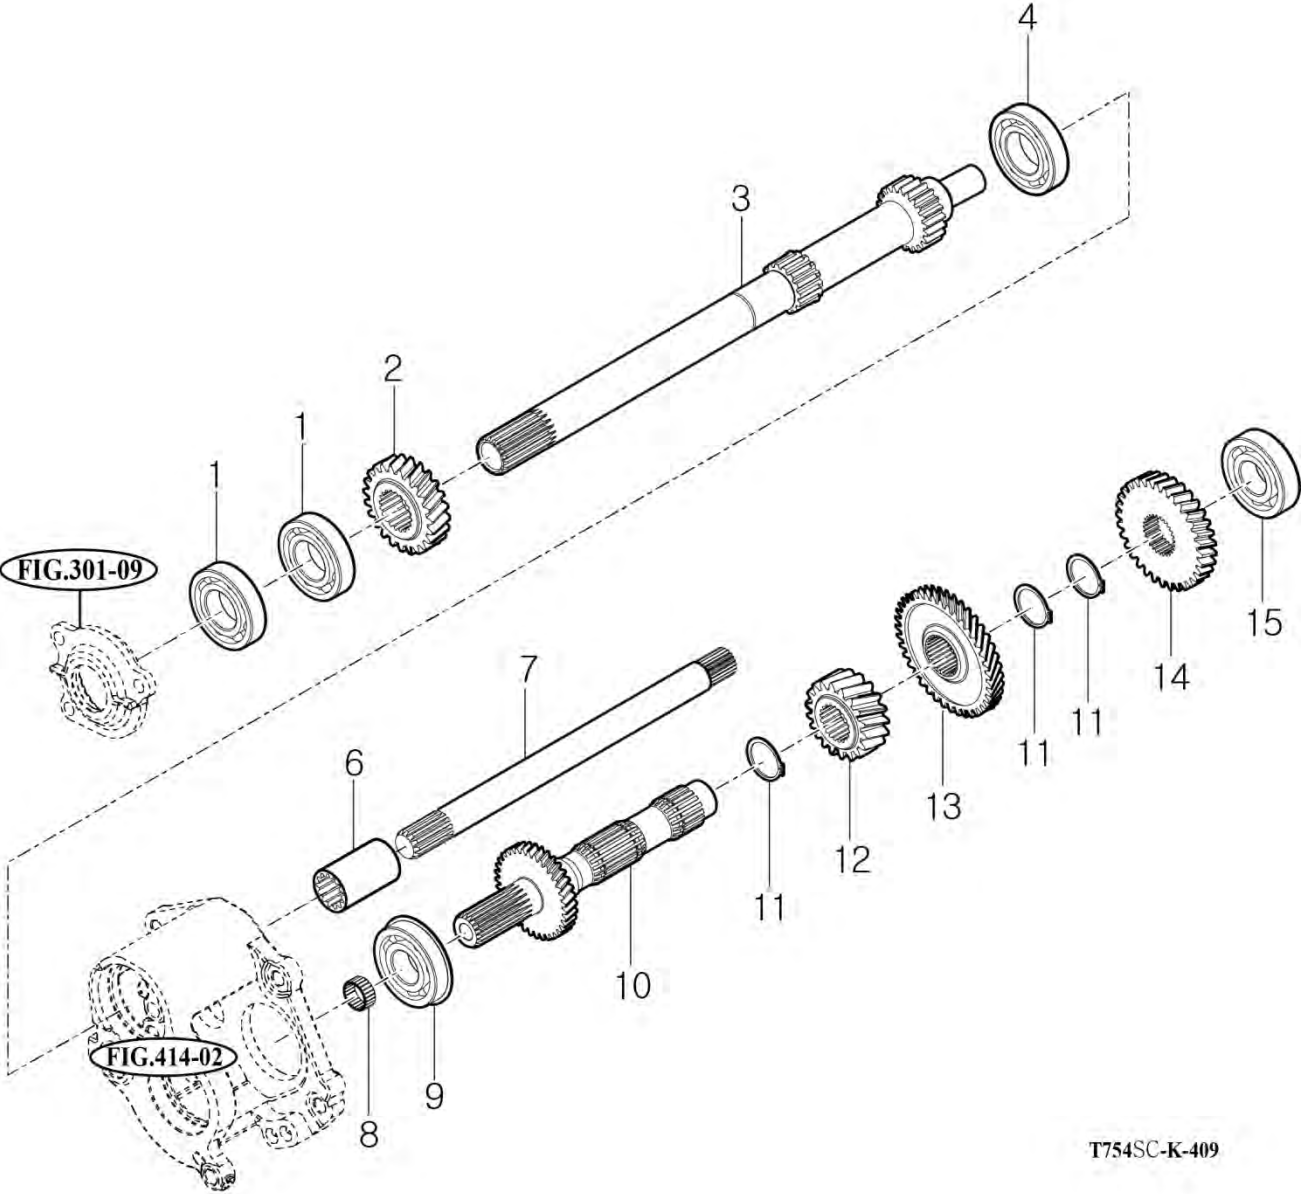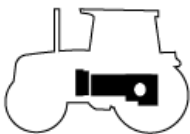

T754SC-K-409

NOTE


FIG 410

CHANGE GEARS


P1

Year

 2016

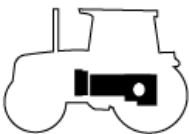

T754SC

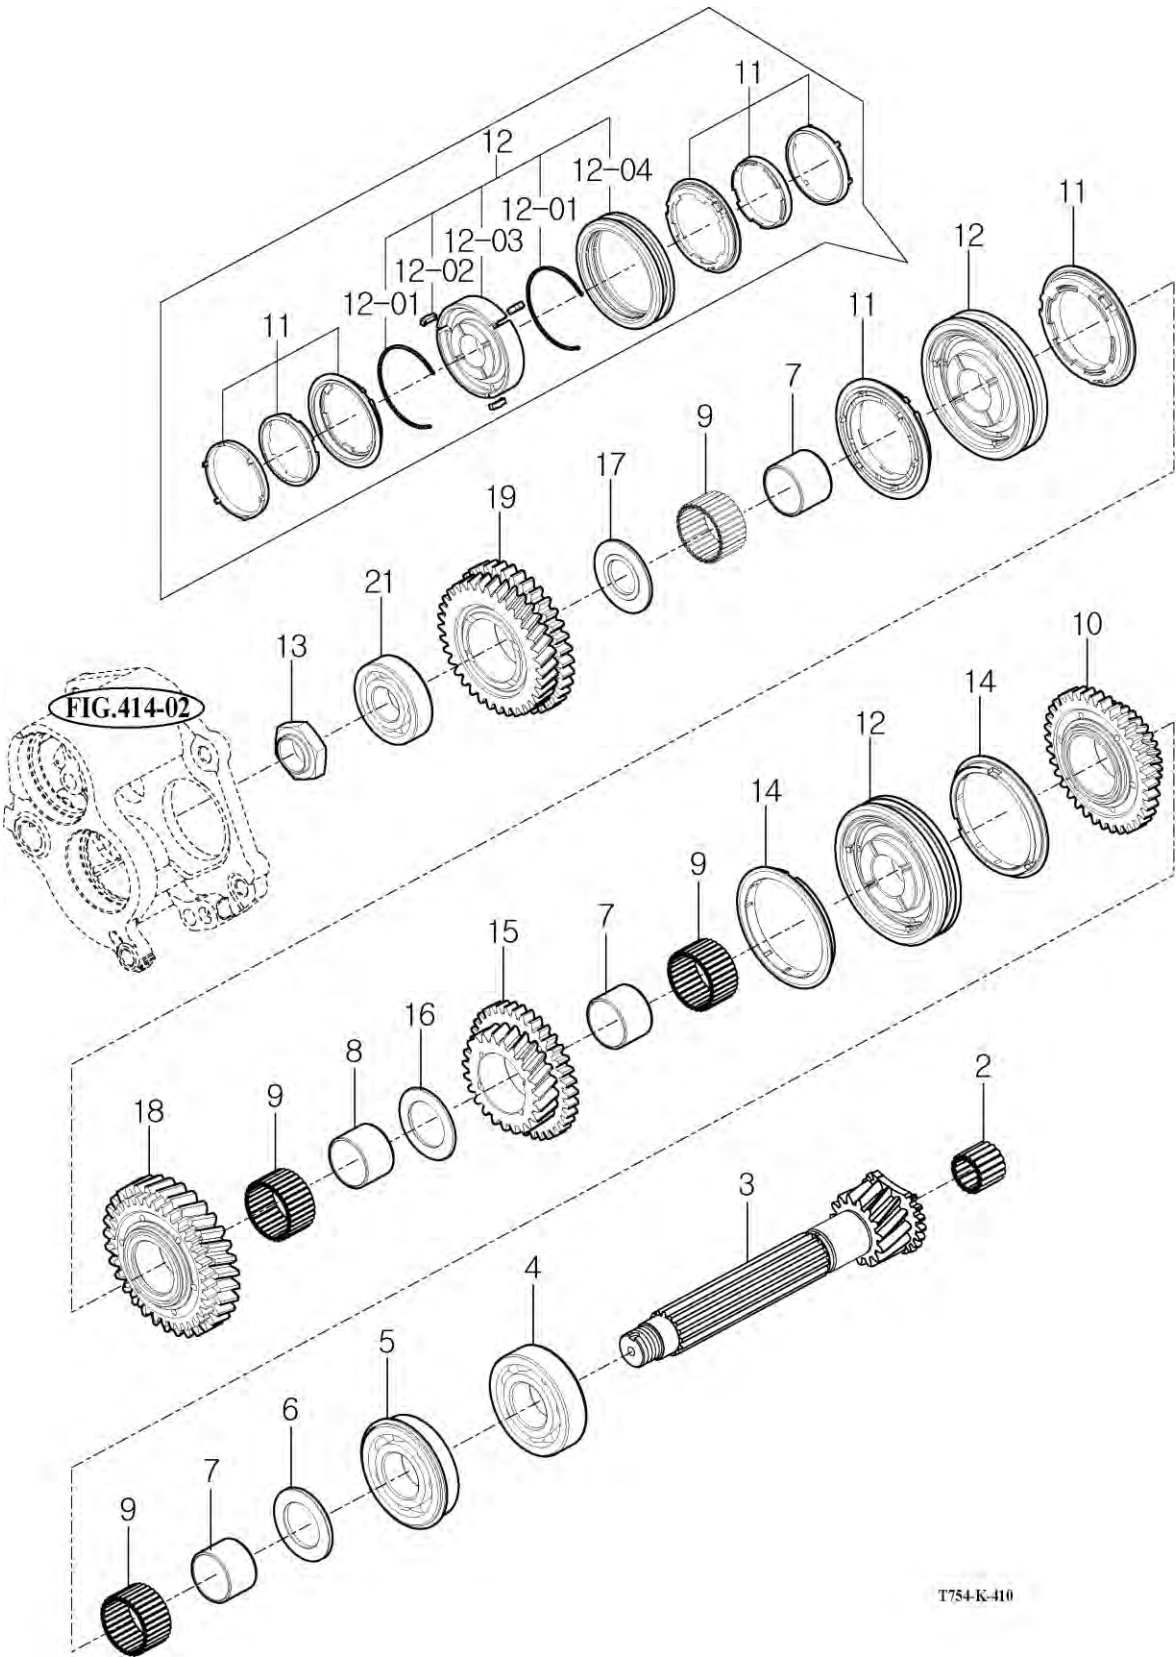 

T754-K-410

NOTE


FIG 411

REVERSE GEARS


P1

Year

 2016

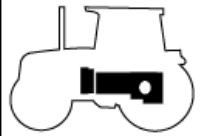

T754SC

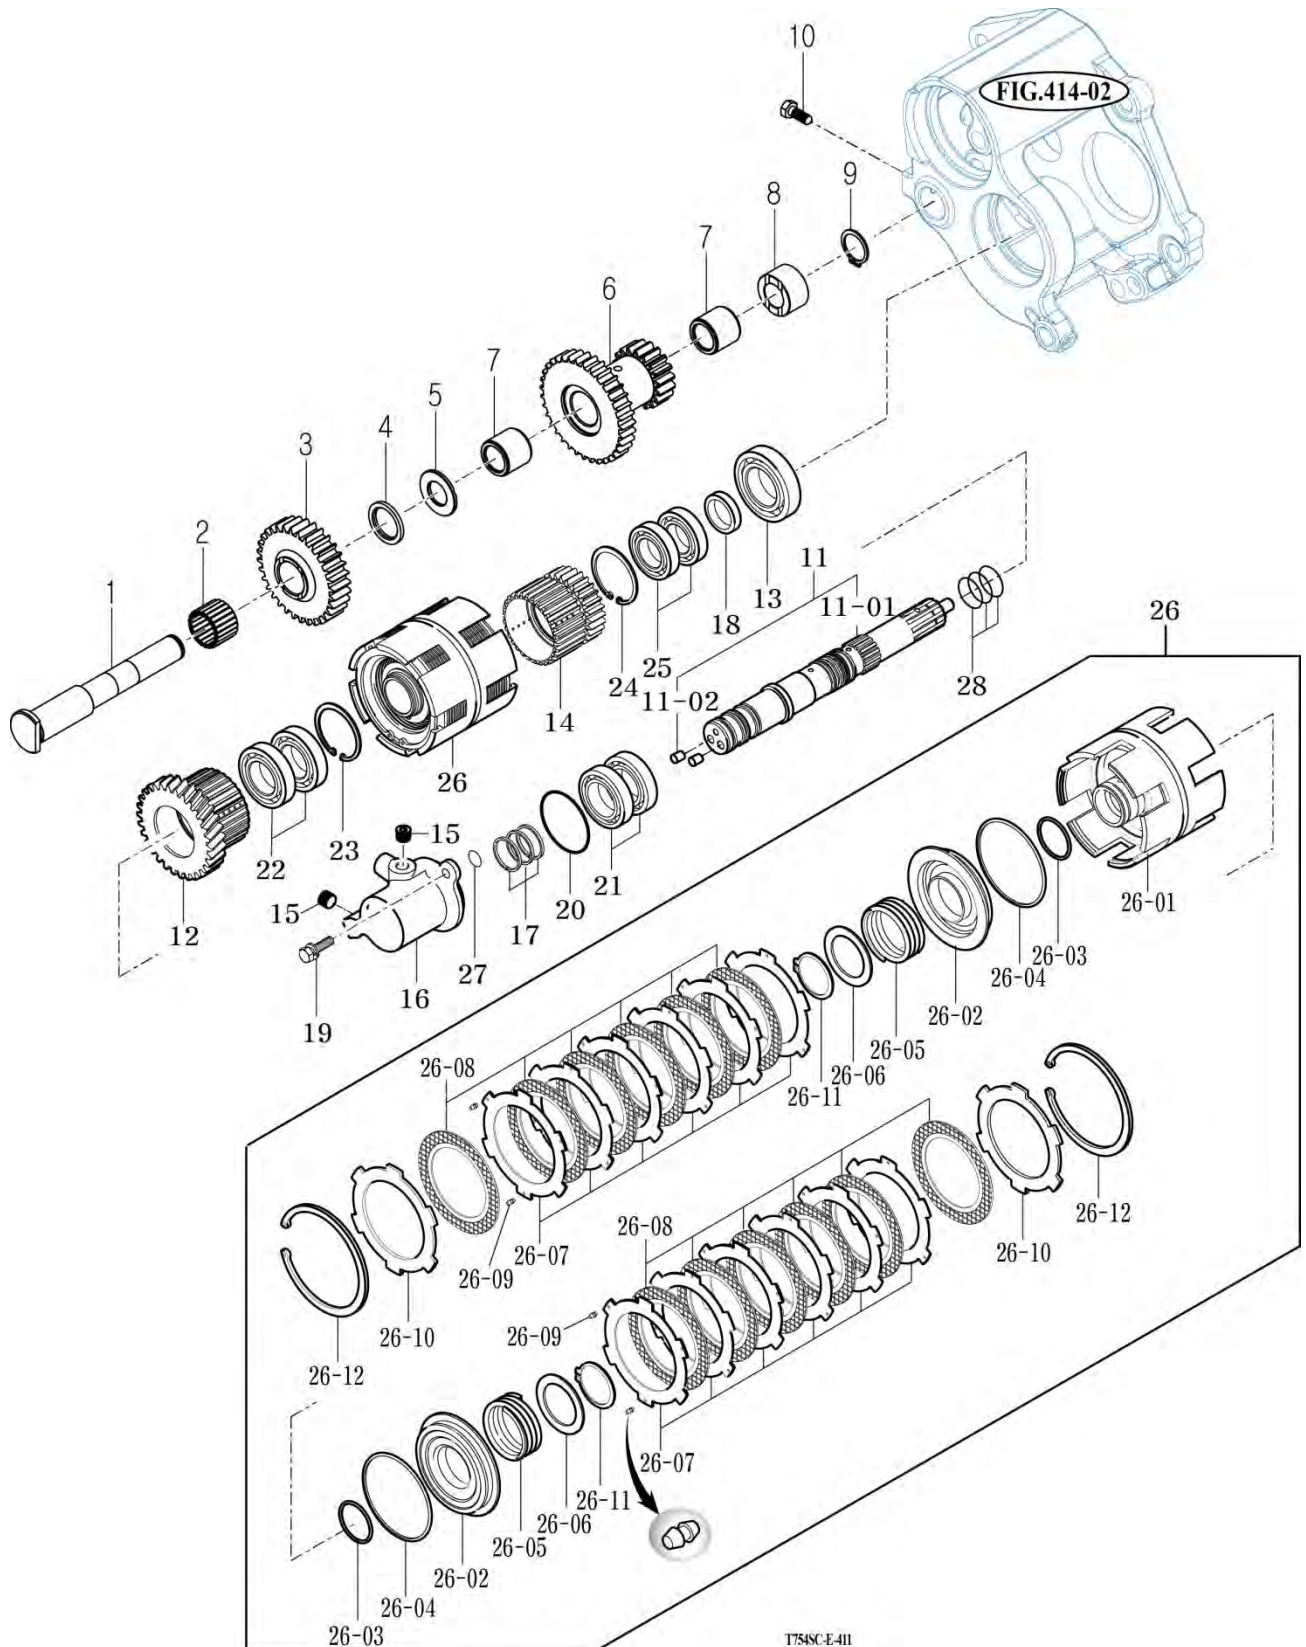 

NOTE


FIG 412

MAIN CHANGE LEVER


P1

Year

 2016

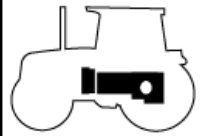

T754SC

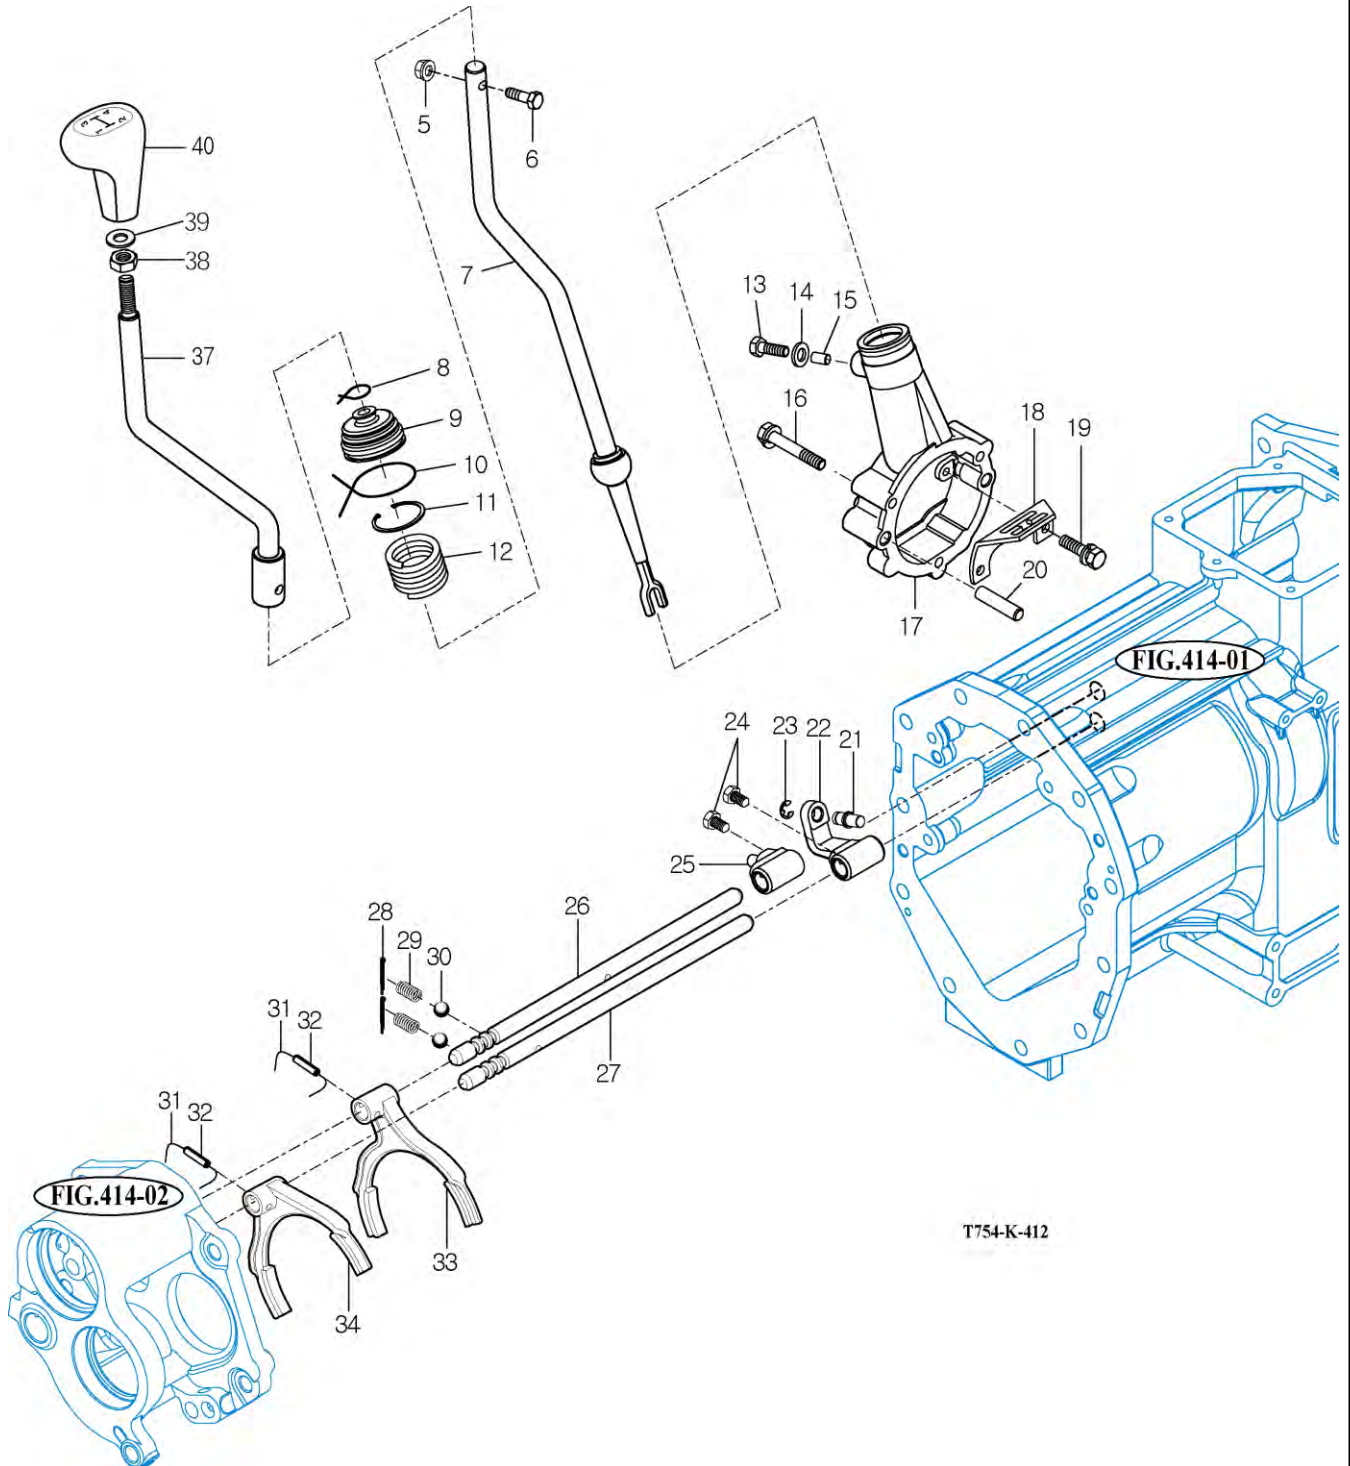 

NOTE

FIG 413

 
 
T754SC

SUB CHANGE LEVER

P1

Year

2016

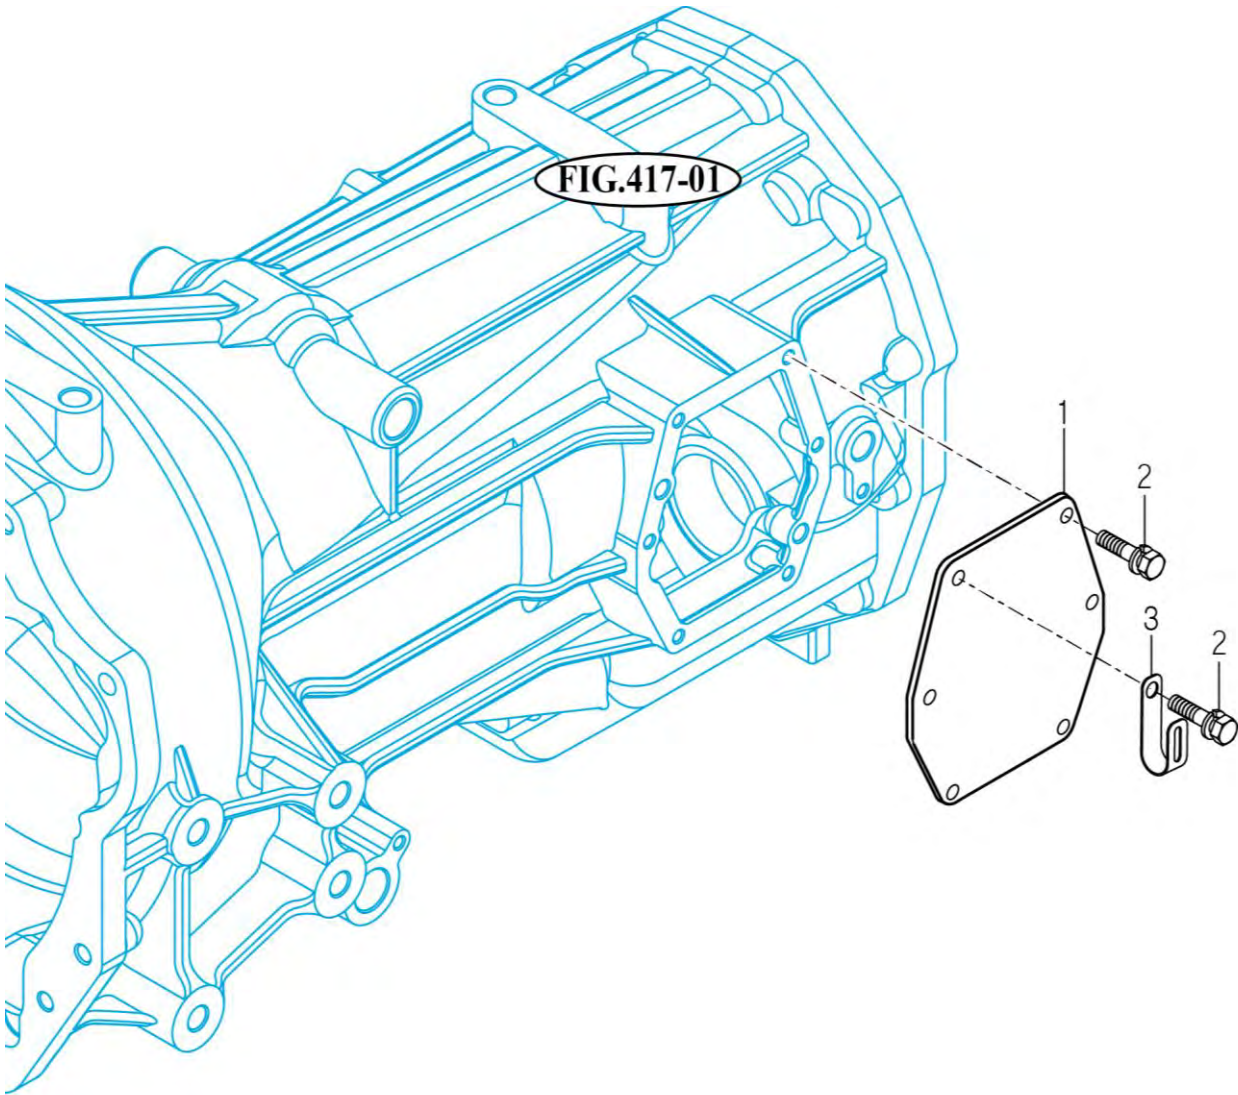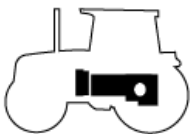

NOTE


FIG 414

TRANSMISSION MID CASE


Year

2016

 P1

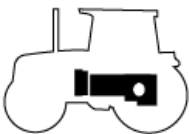

T754SC

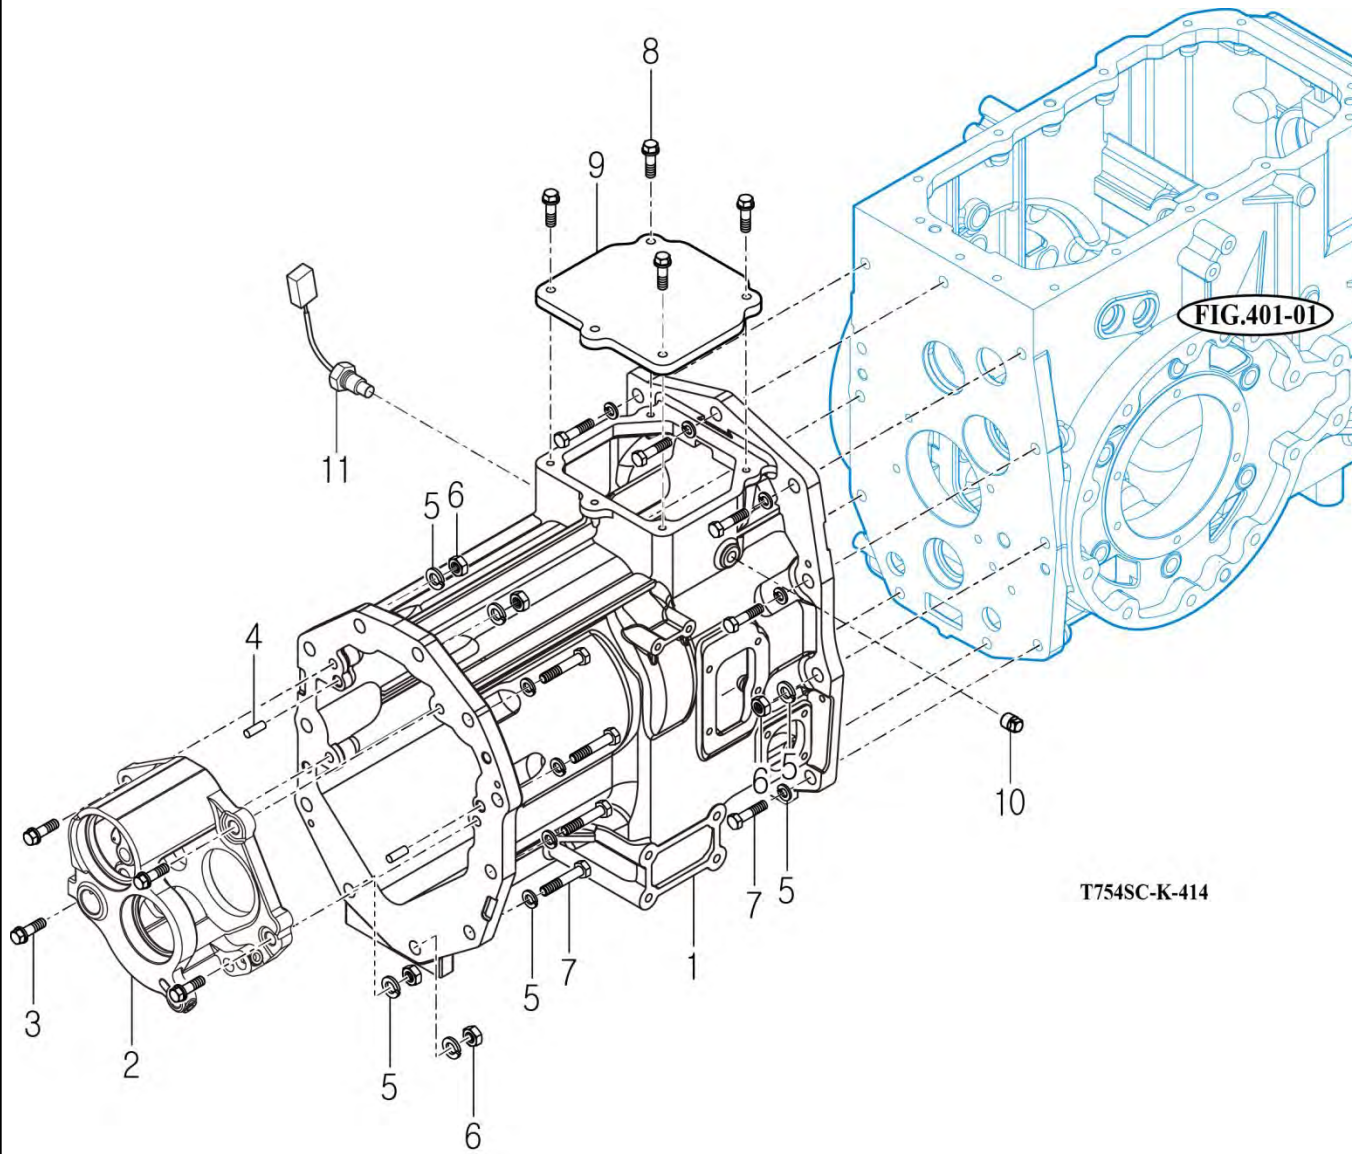 

T754SC-K-414

NOTE


FIG 415

SUB CHANGE SHIFTER


P1

Year

 2016

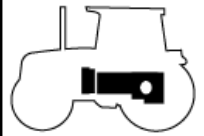

T754SC

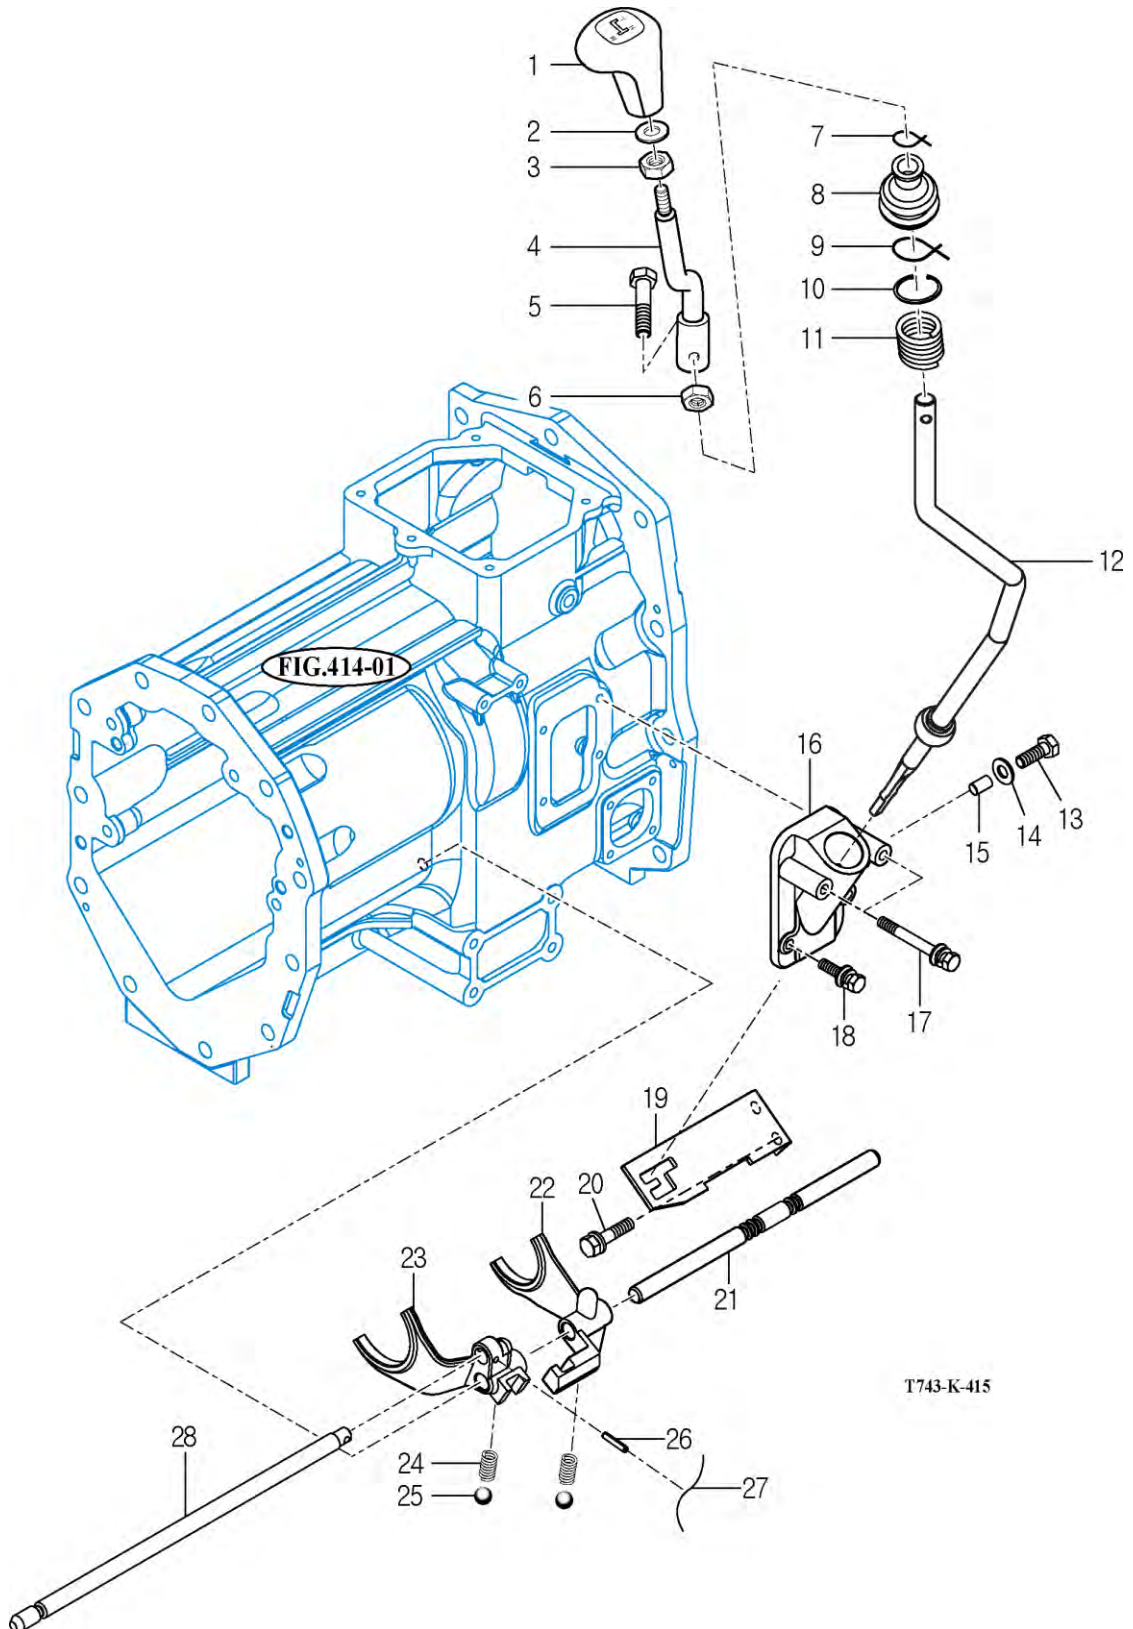 

NOTE


FIG 416

4WD CHANGE LEVER


P1

Year

 2016

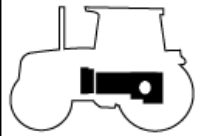

T754SC

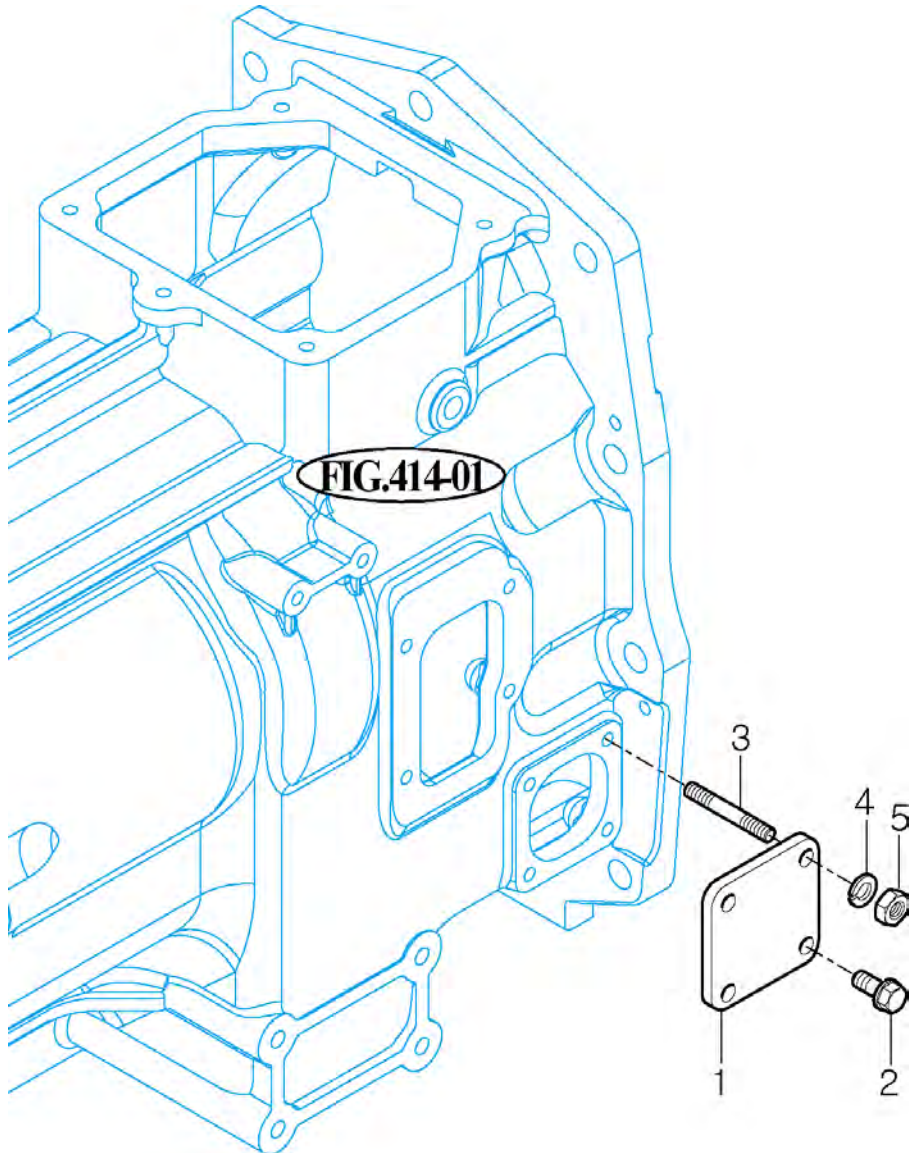 

T754SC-K-416

NOTE

FIG 417

 
 
T754SC

TRANSMISSION FRONT CASE

P1

Year

2016

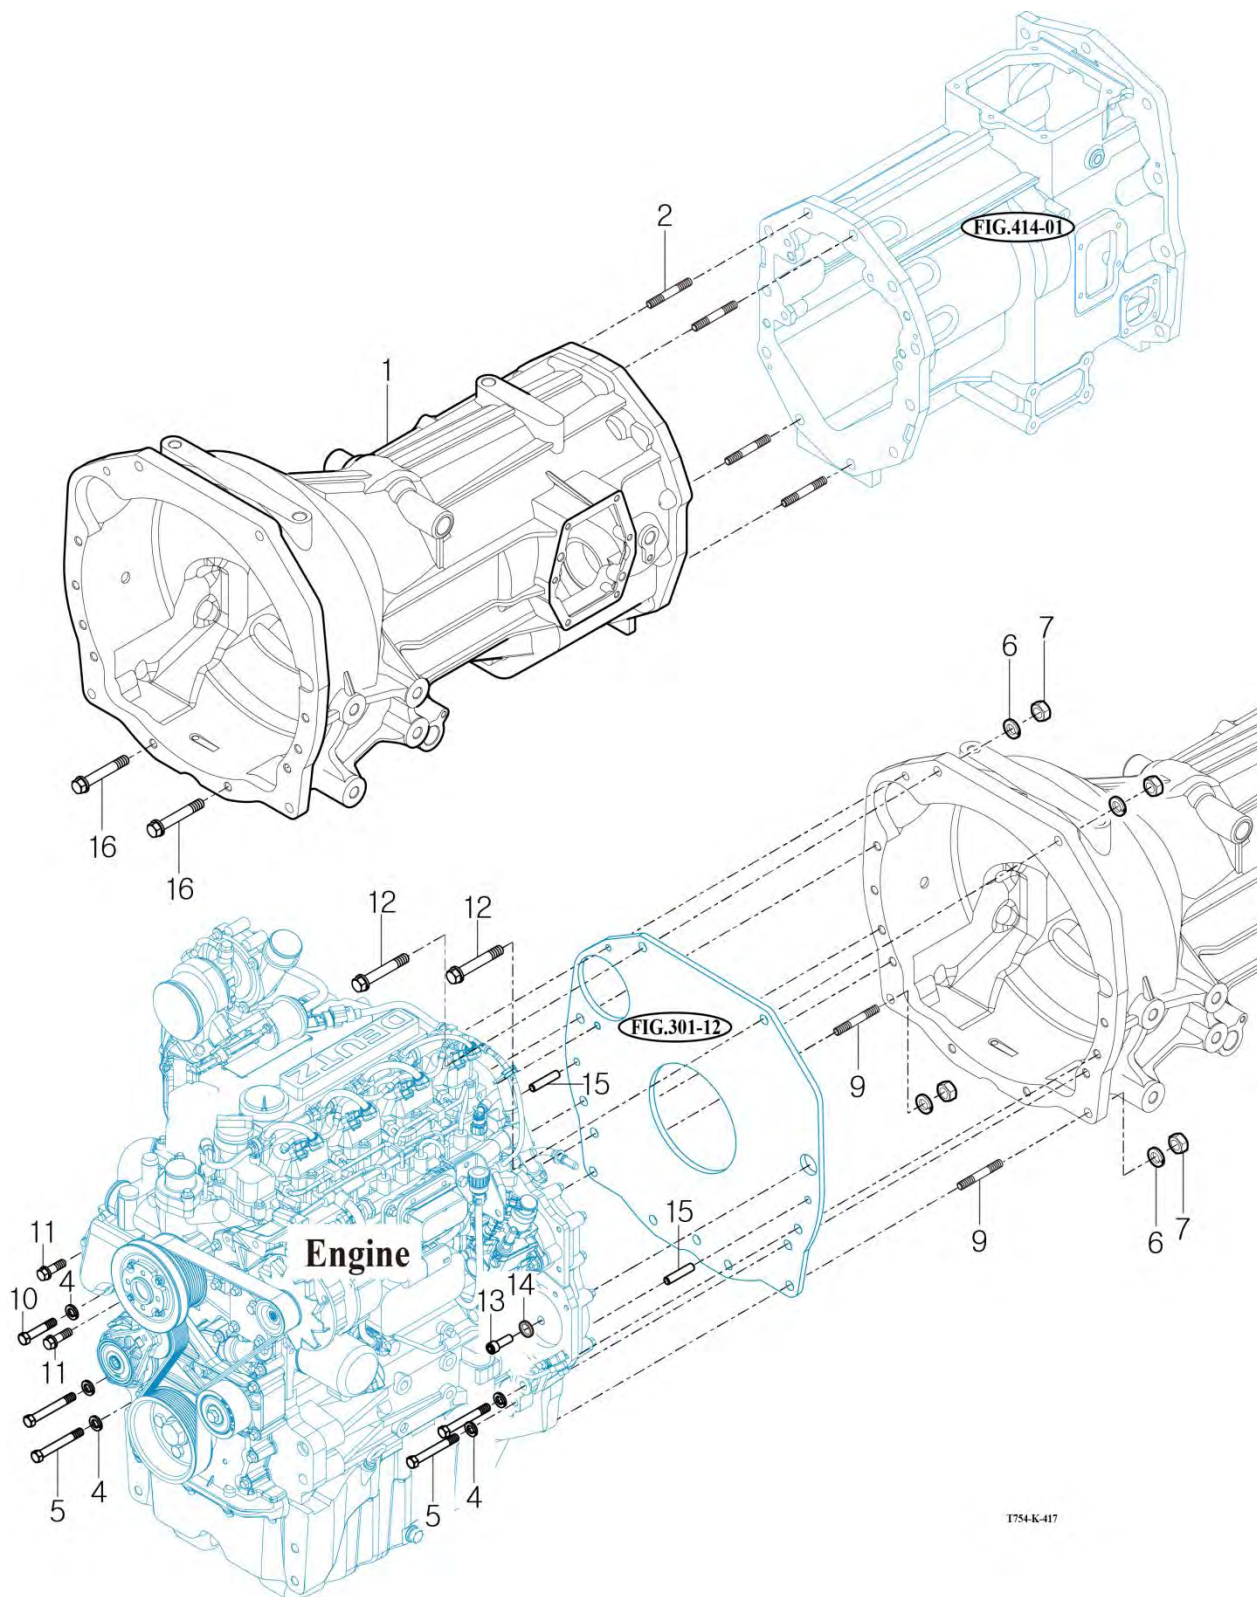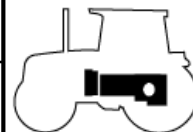

NOTE


FIG 418

DRIVE GEARS(US)


P1

Year

 2016

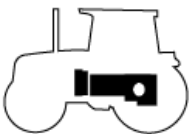

T754SC

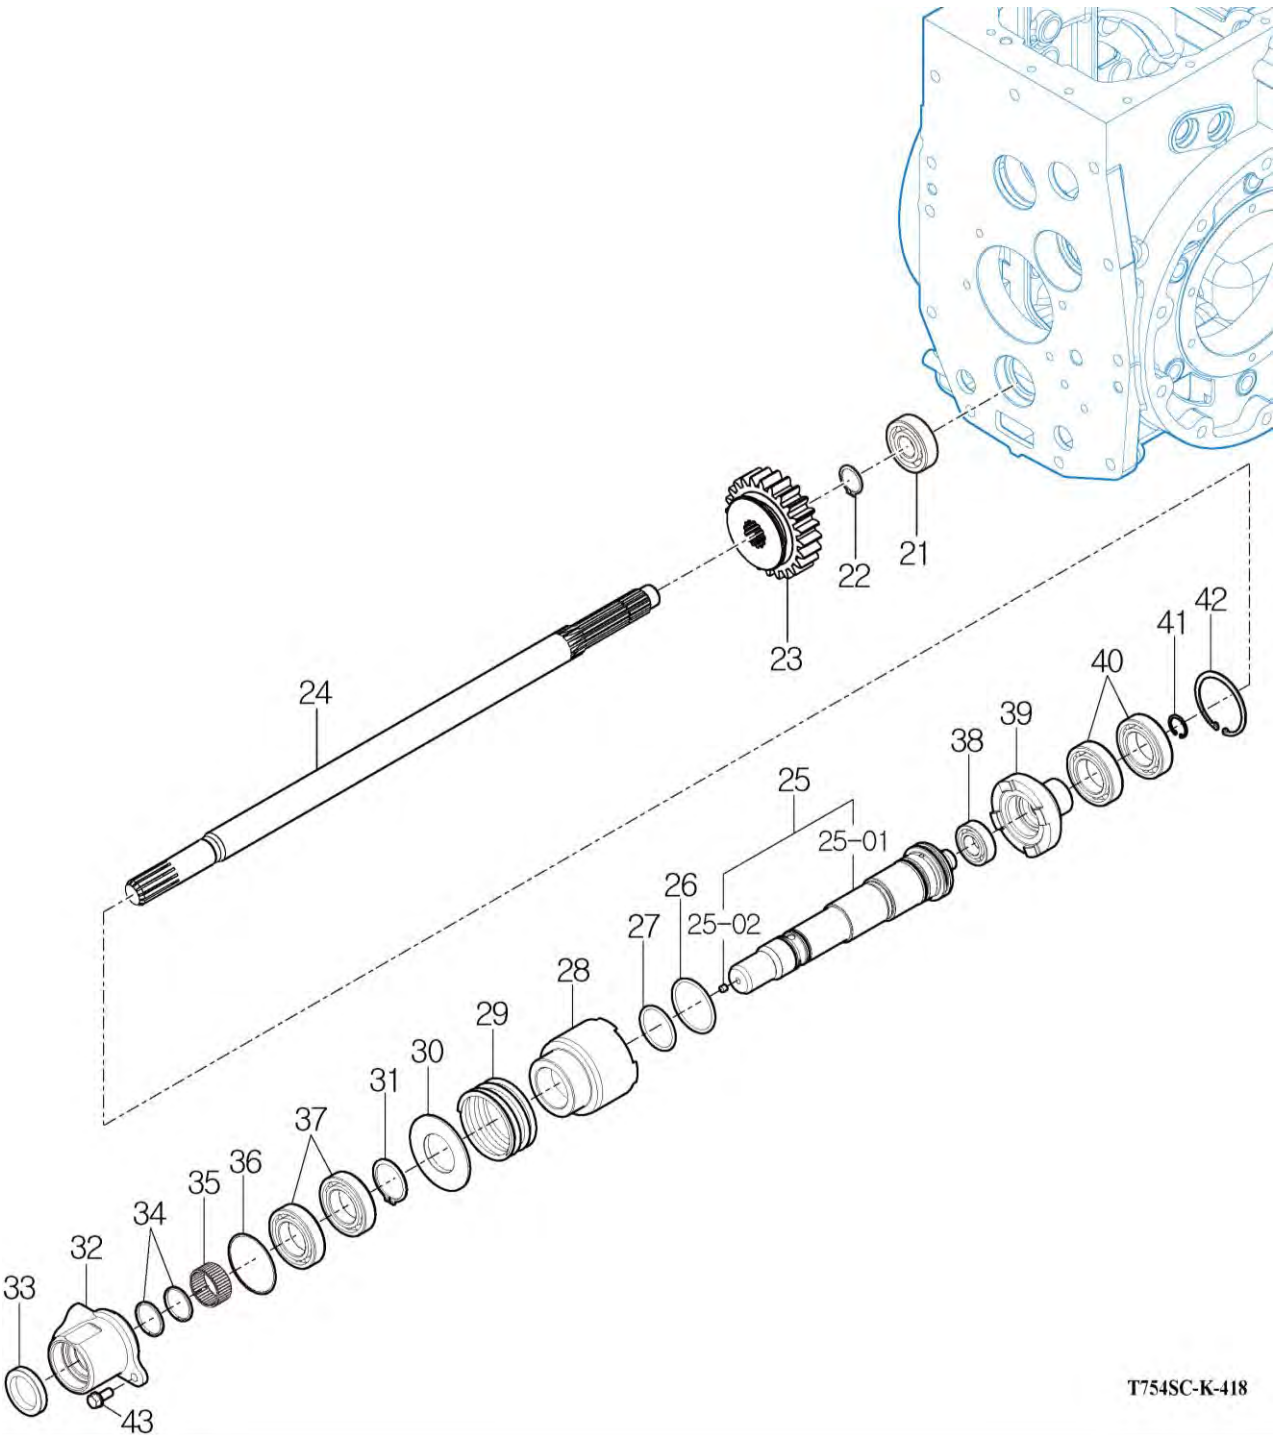 

T754SC-K-418

NOTE


FIG 418

DRIVE GEARS(EU)


P1

Year

 2016

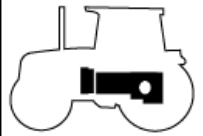

T754SC

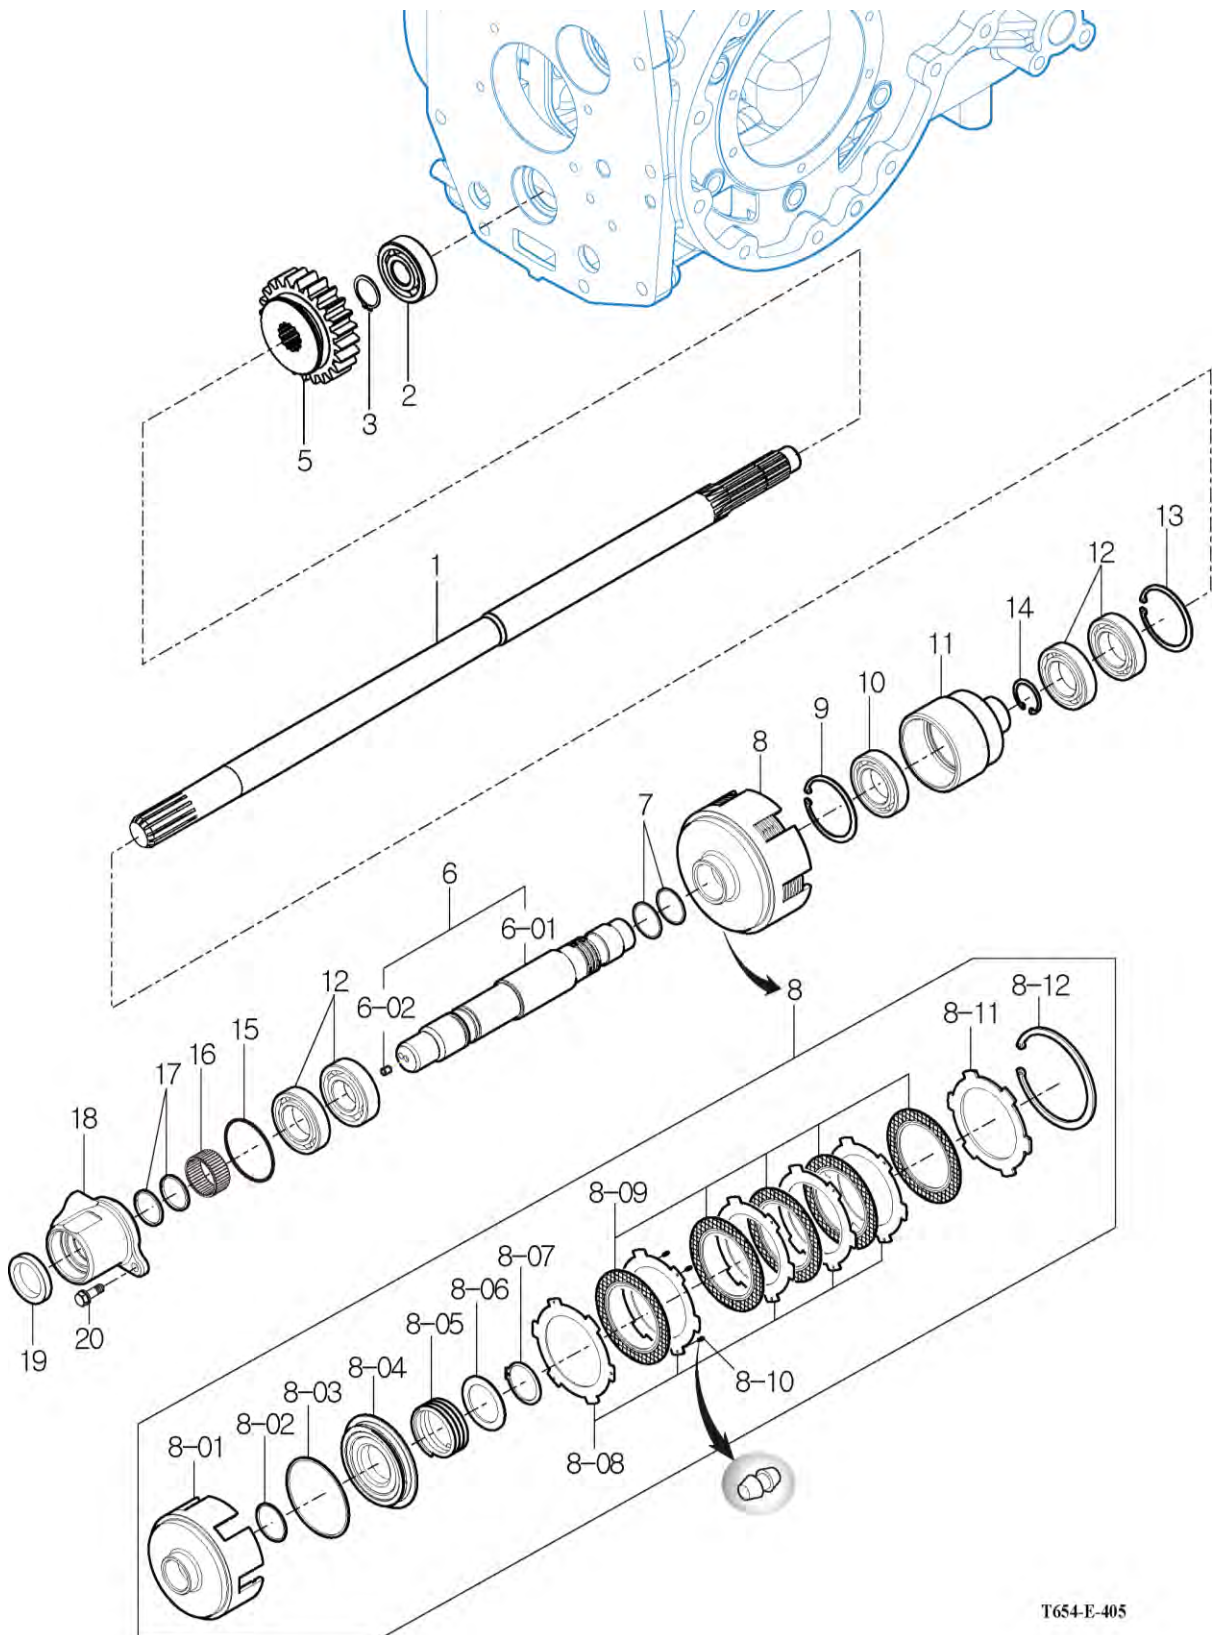 

T654-E-405

NOTE


FIG 501

FRONT AXLE SUPPORT


P1

Year

 2016

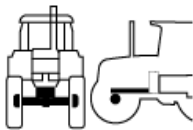

T754SC

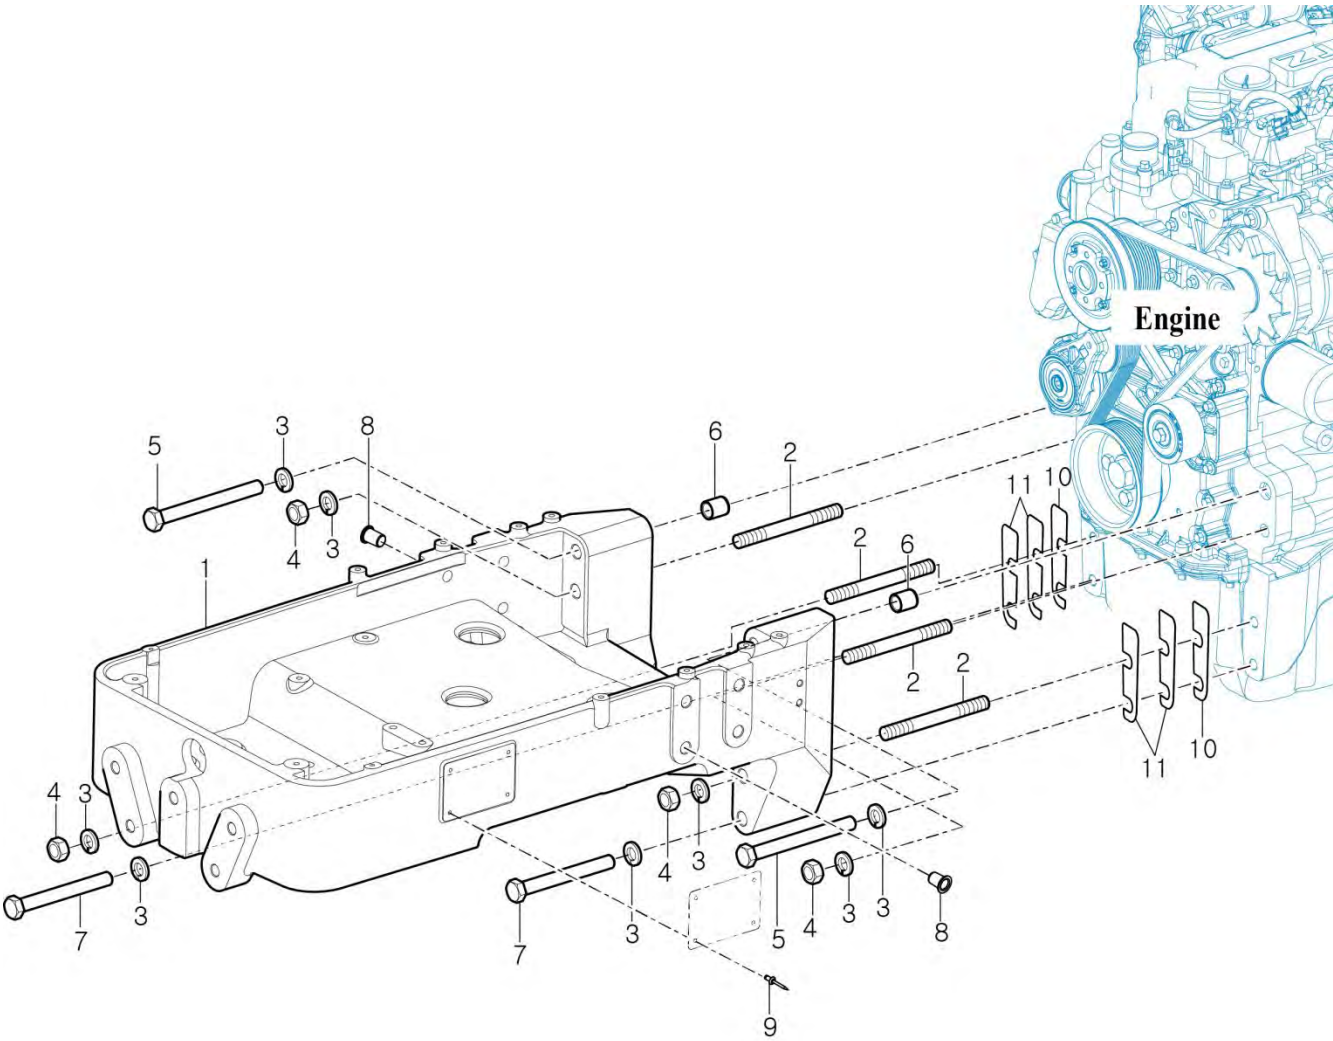 

T754-K-501

NOTE


FIG 502

FRONT DRIVE SHAFT


P1

Year

 2016

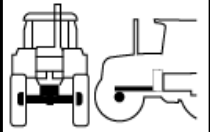

T754SC

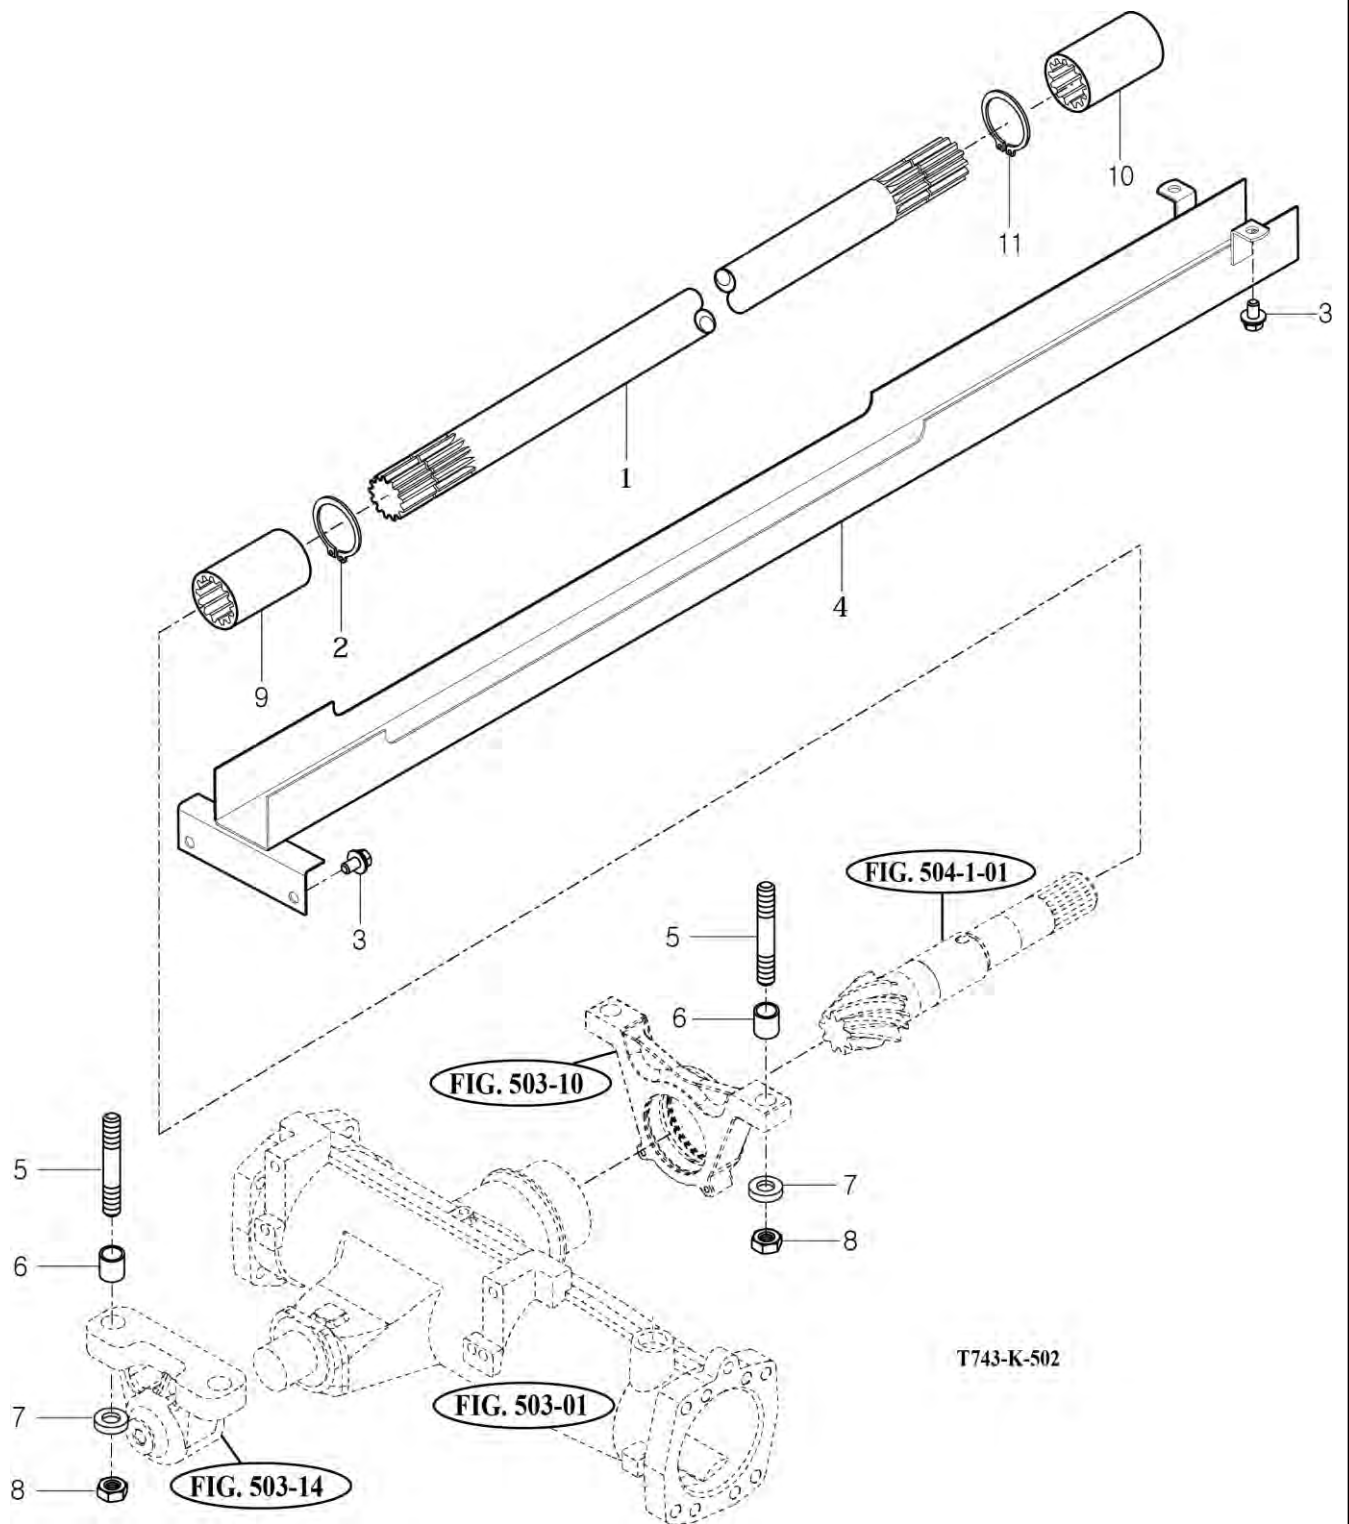 

NOTE


FIG 503

FRONT AXLE HOUSING


P1

Year

 2016

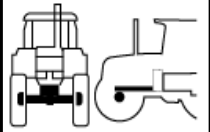

T754SC

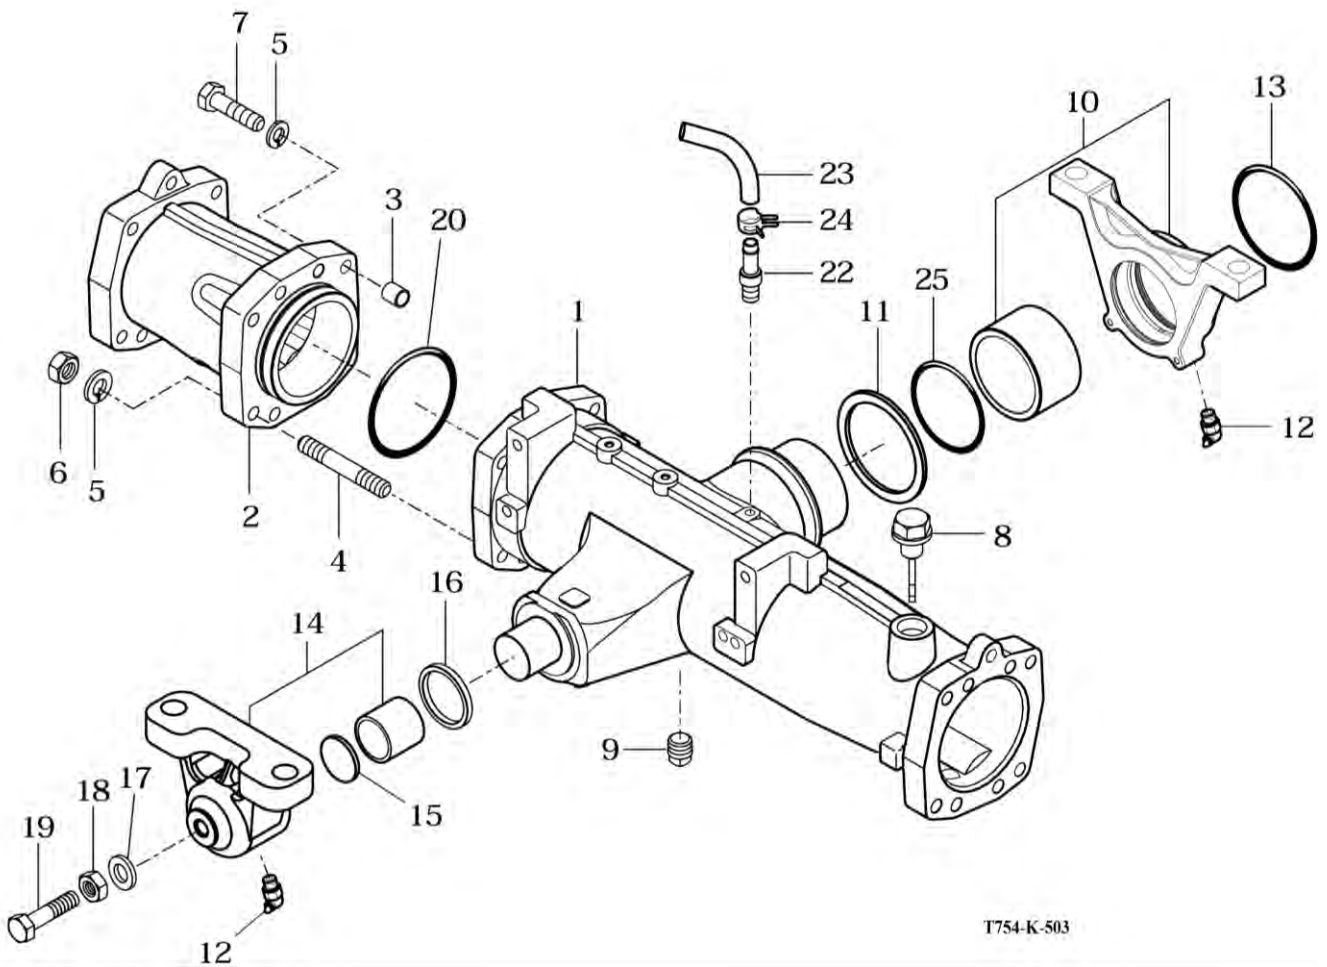 

T754-K-503

NOTE


FIG 504

FRONT DIFFERENTIAL GEARS


P1

Year

 2016

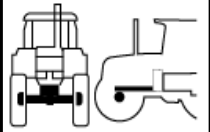

T754SC

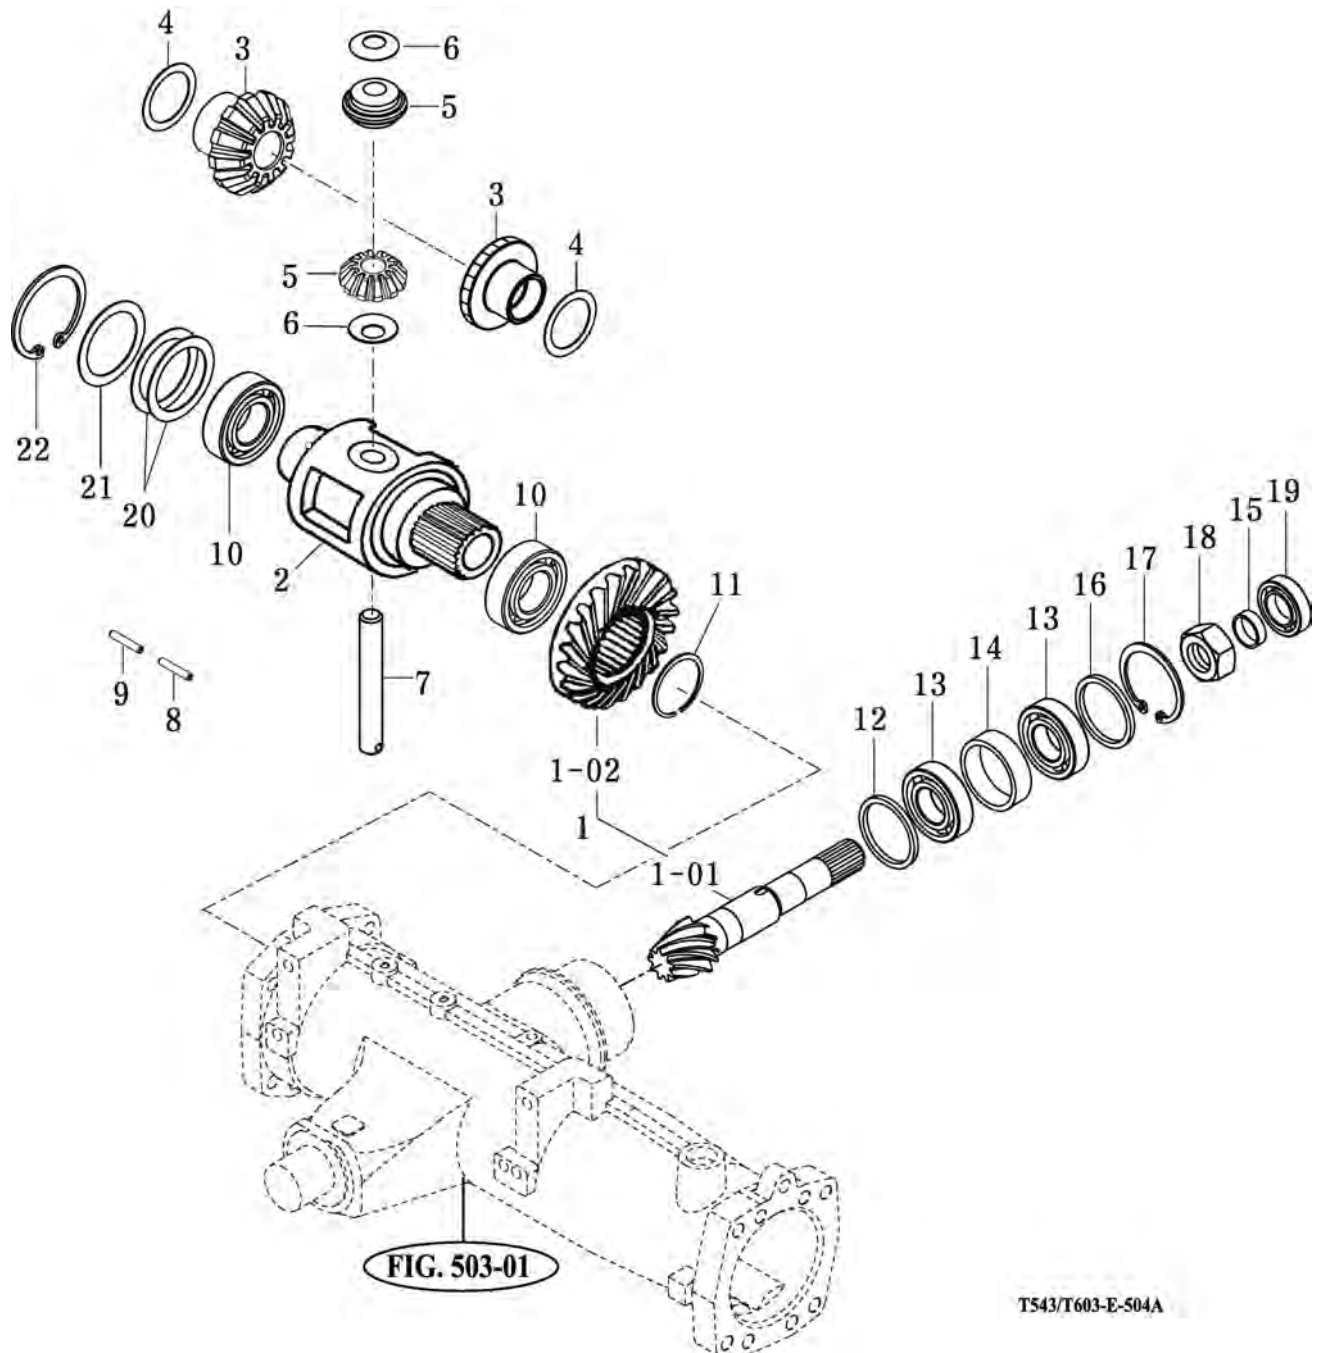 

NOTE


FIG 505

FRONT GEAR CASE (1)


P1

Year

 2016

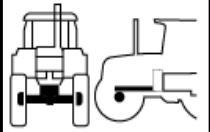

T754SC

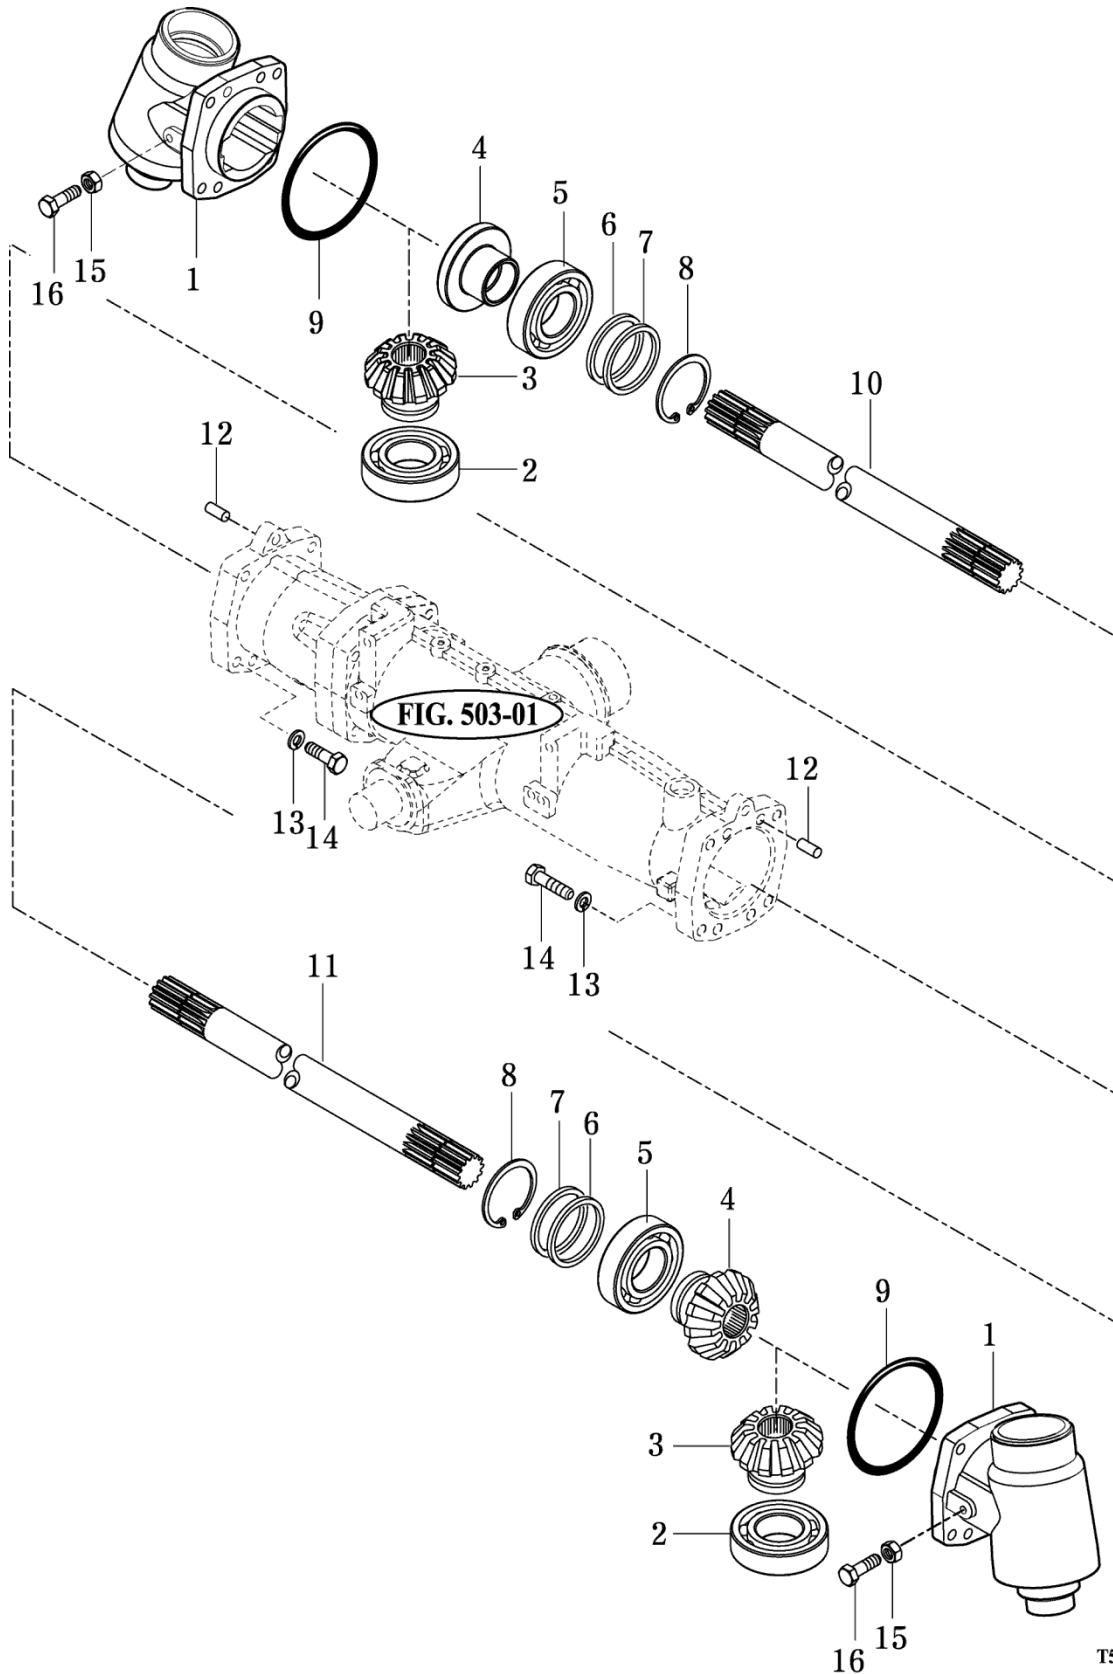 

T543/T603-E-505A

NOTE


FIG 506

FRONT GEAR CASE (2)


P1

Year

 2016

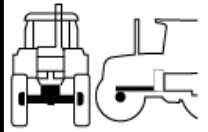

T754SC

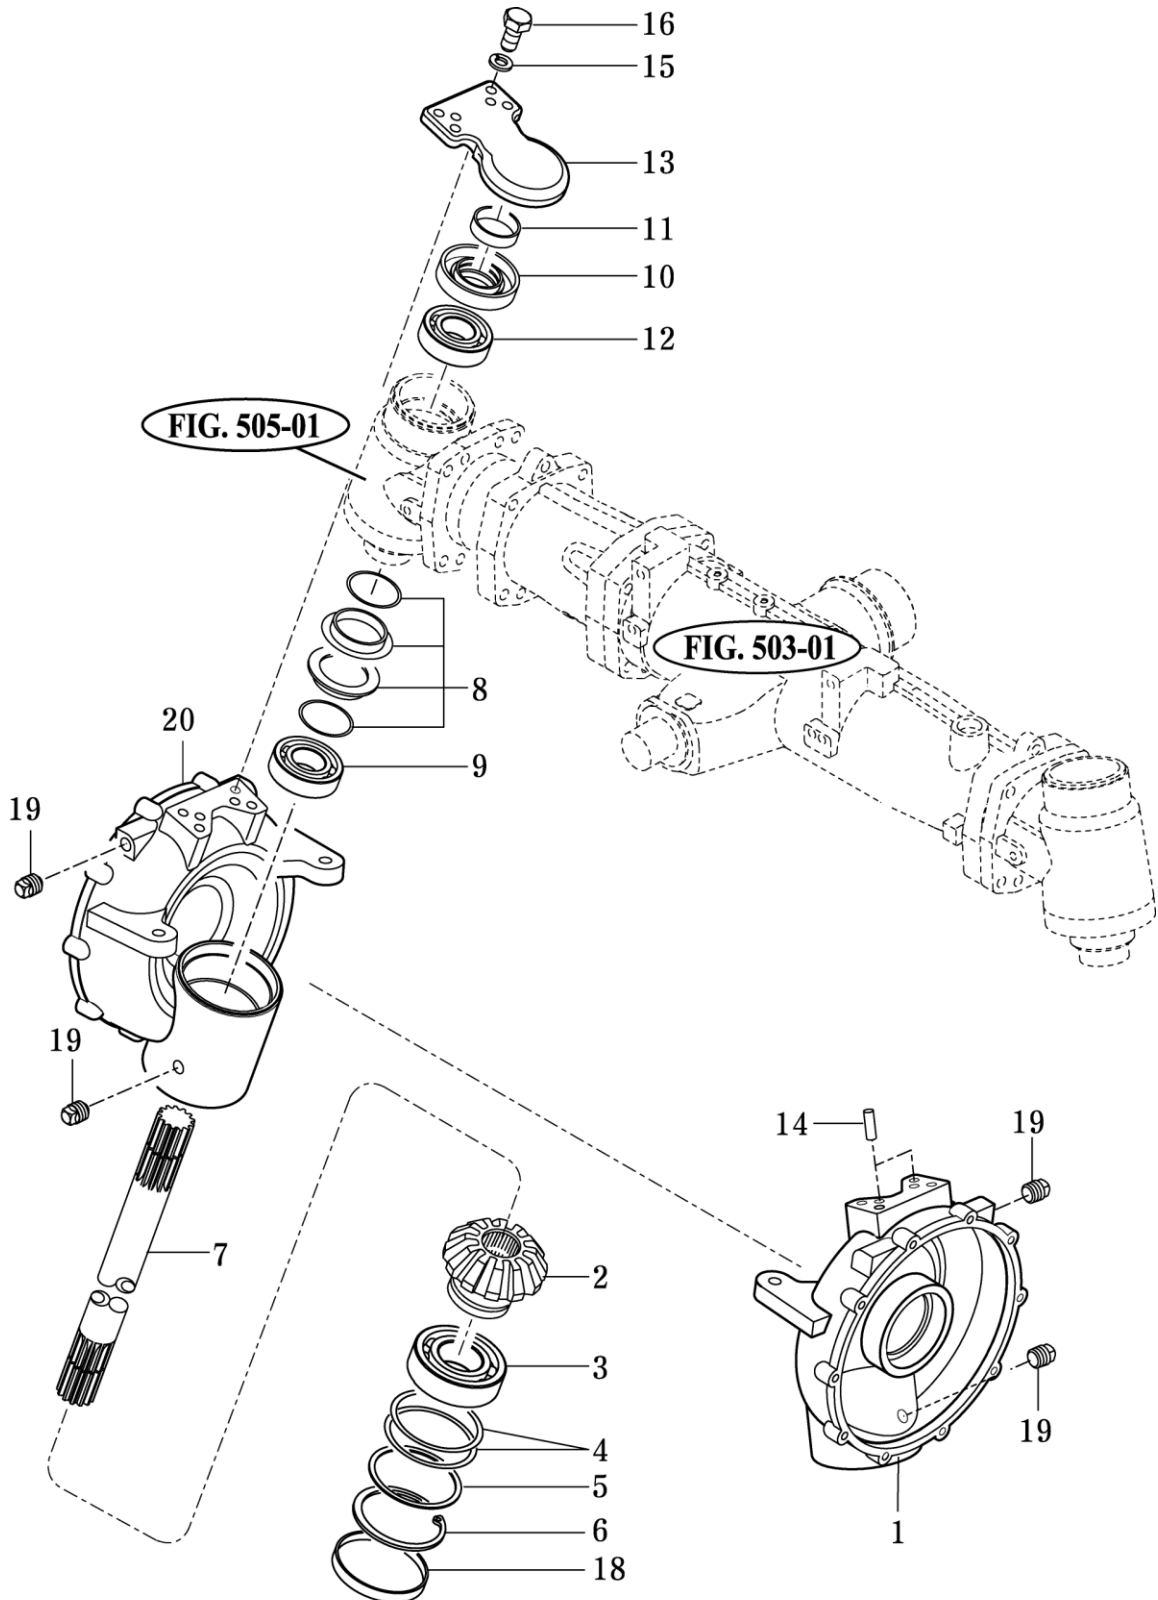 

T543/T603-E-506A

NOTE


FIG 507

FRONT GEAR CASE (3)


P1

Year

 2016

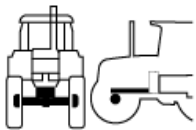

T754SC

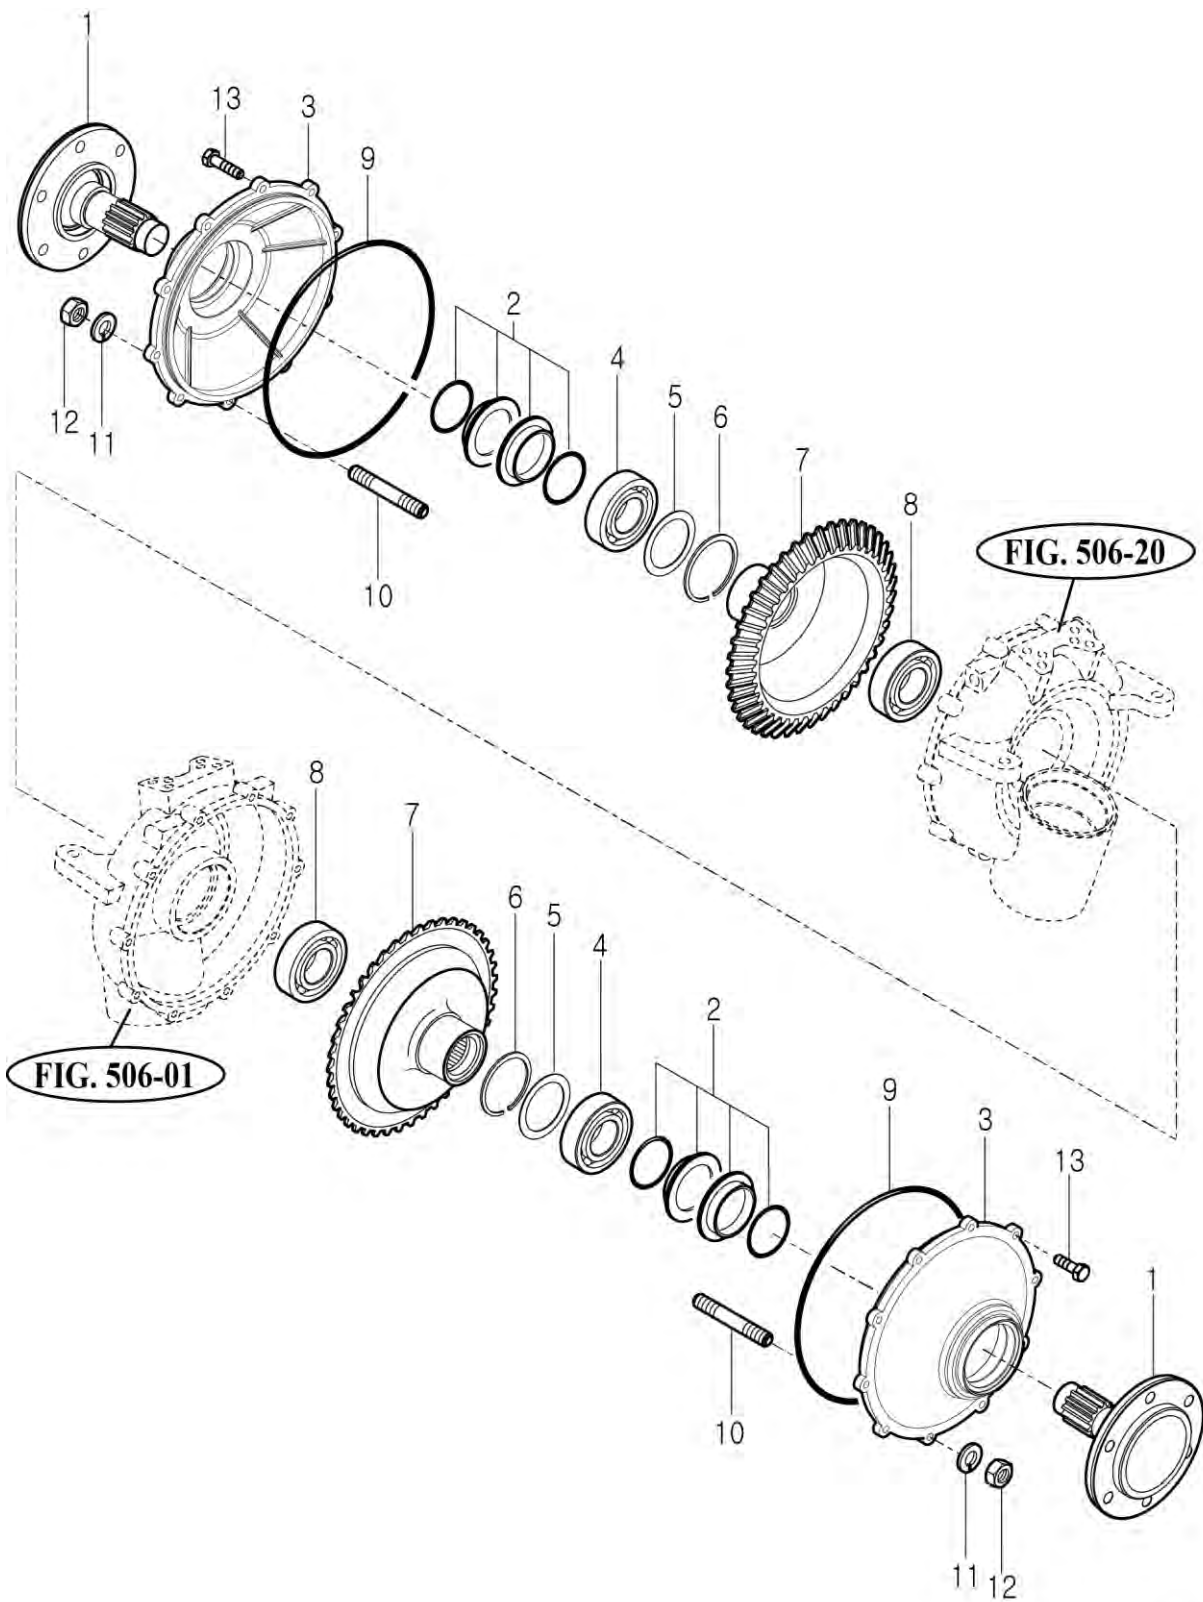 

T754-E-507

NOTE

FIG 601

CYLINDER CASE

T754SC

P1

Year

2016

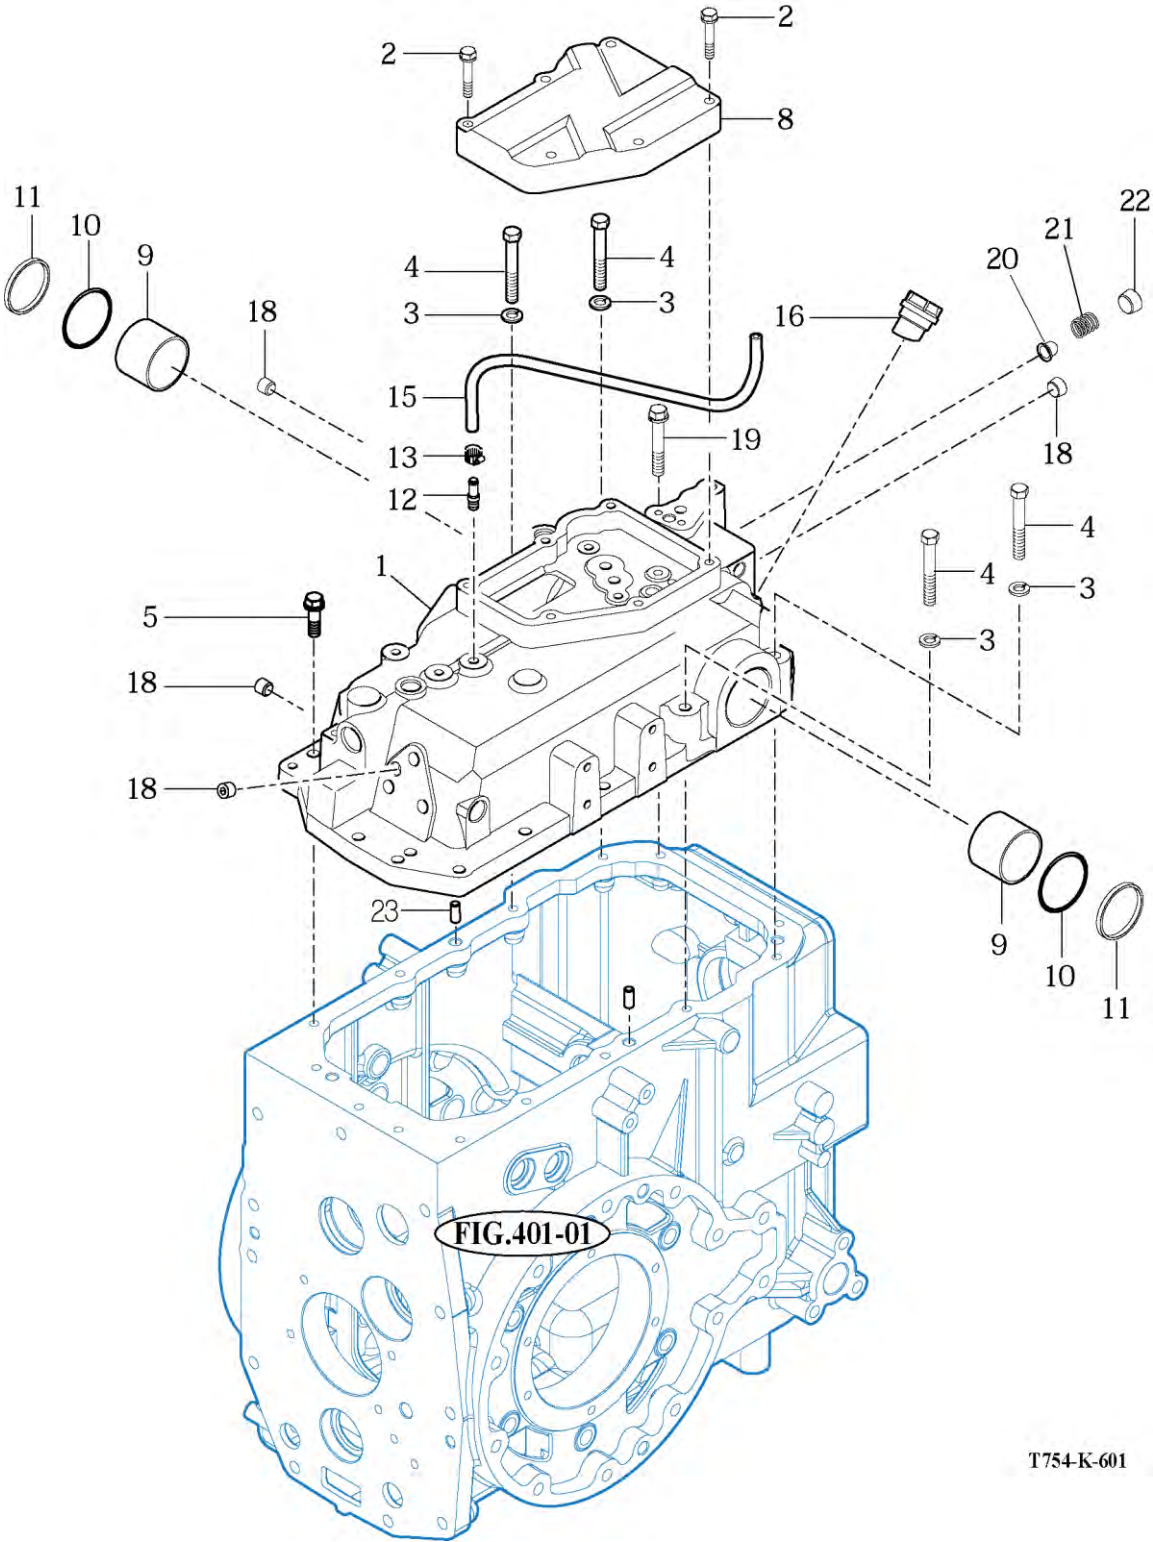 
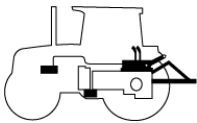 


FIG.401-01

T754-K-601

NOTE


FIG 602

LIFT ARM


P1

Year

 2016

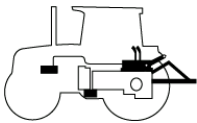


T754SC

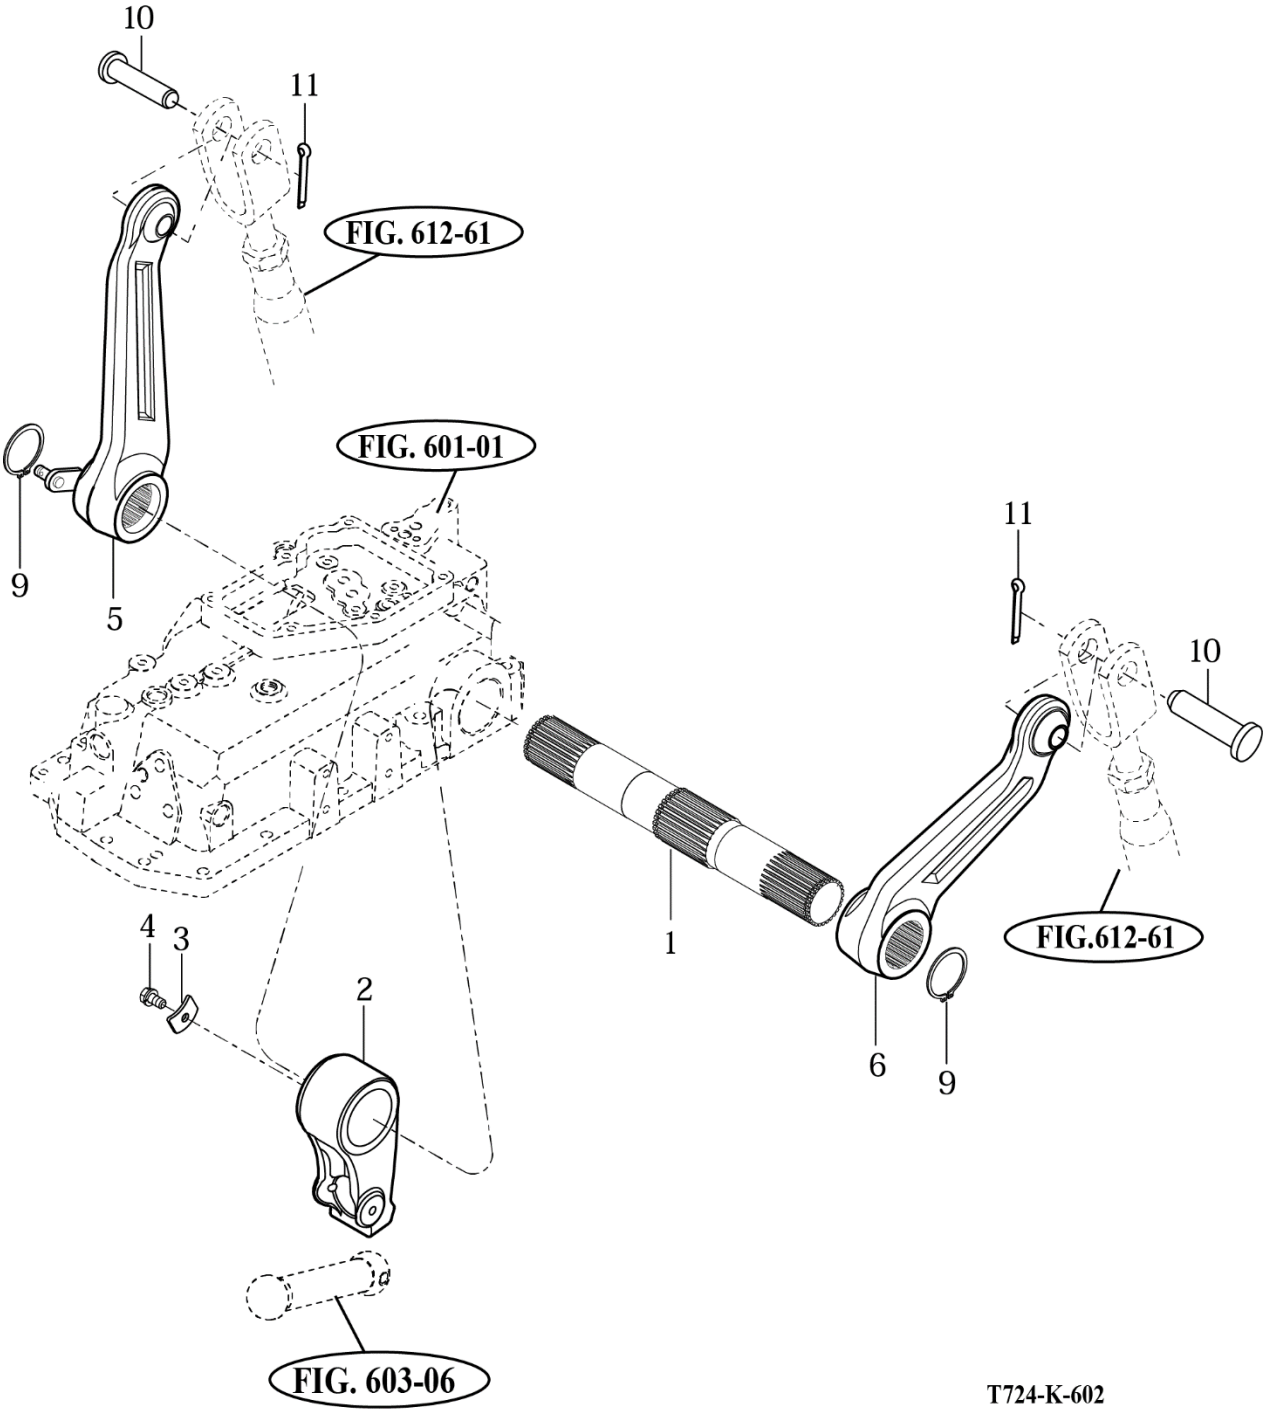 


T724-K-602

 NOTE

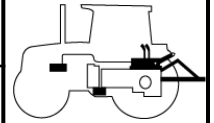

LIFT ARM (EUA)

 P1



NOTE	
------	--


FIG 603

CYLINDER


P1

Year

 2016

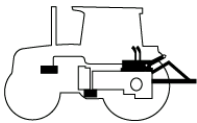

T754SC

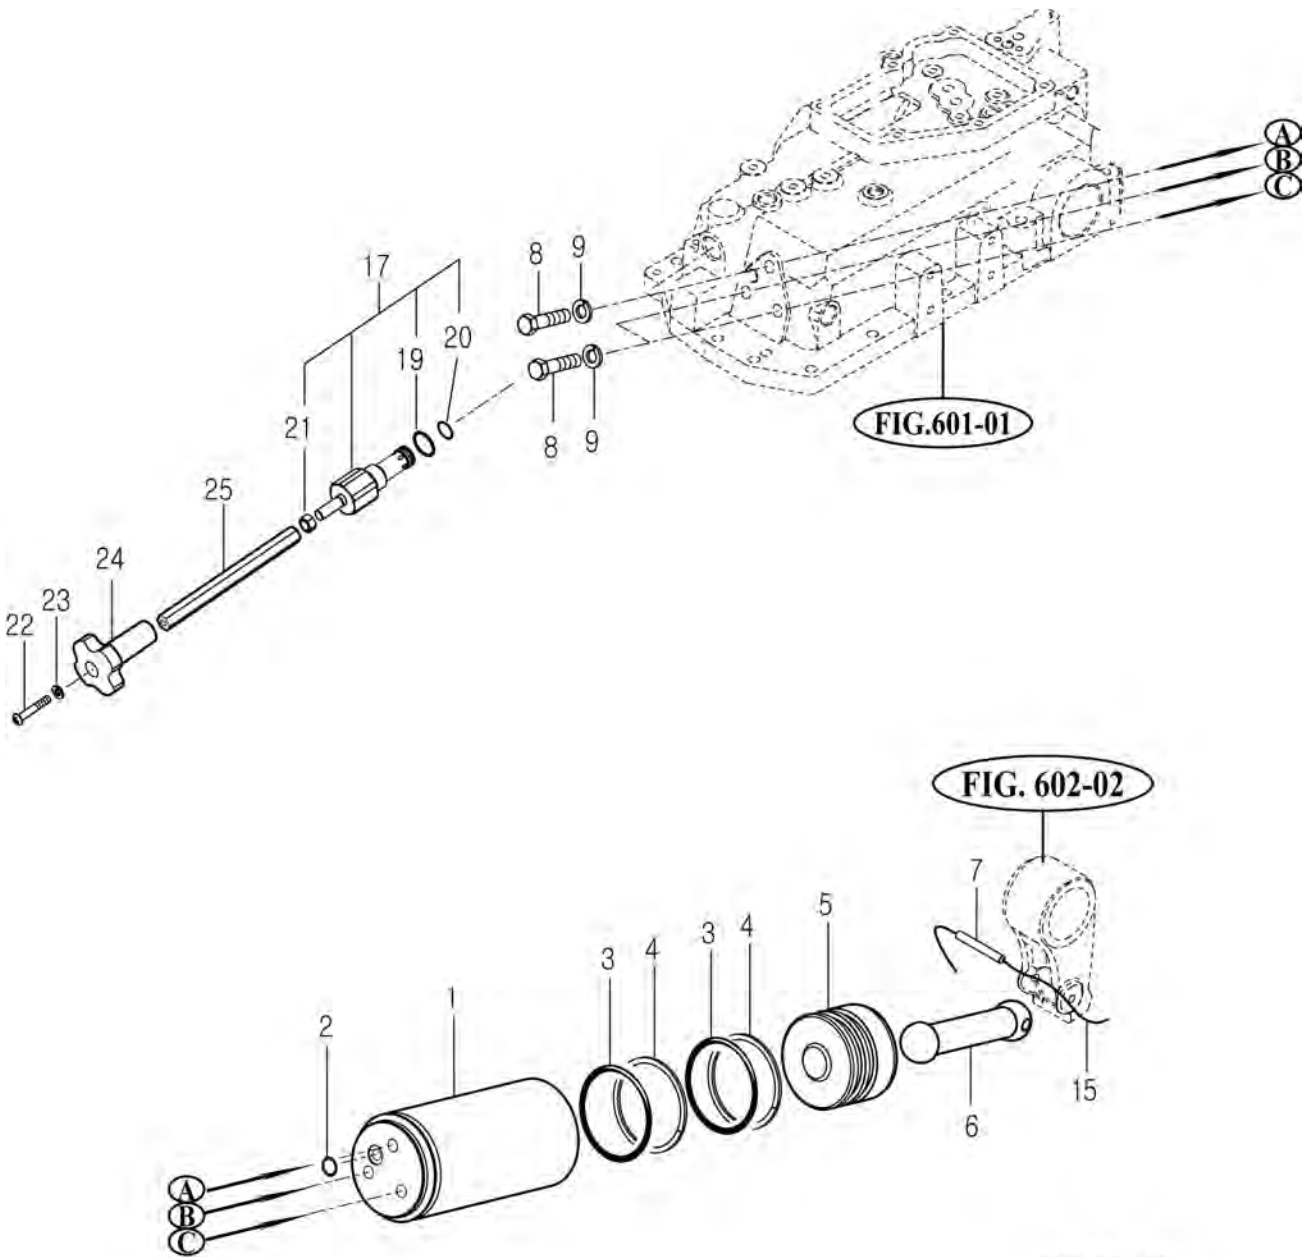 

T543/T603-E-603A

NOTE


FIG 604

POSITION LINK


P1

Year

 2016

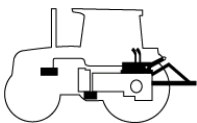

T754SC

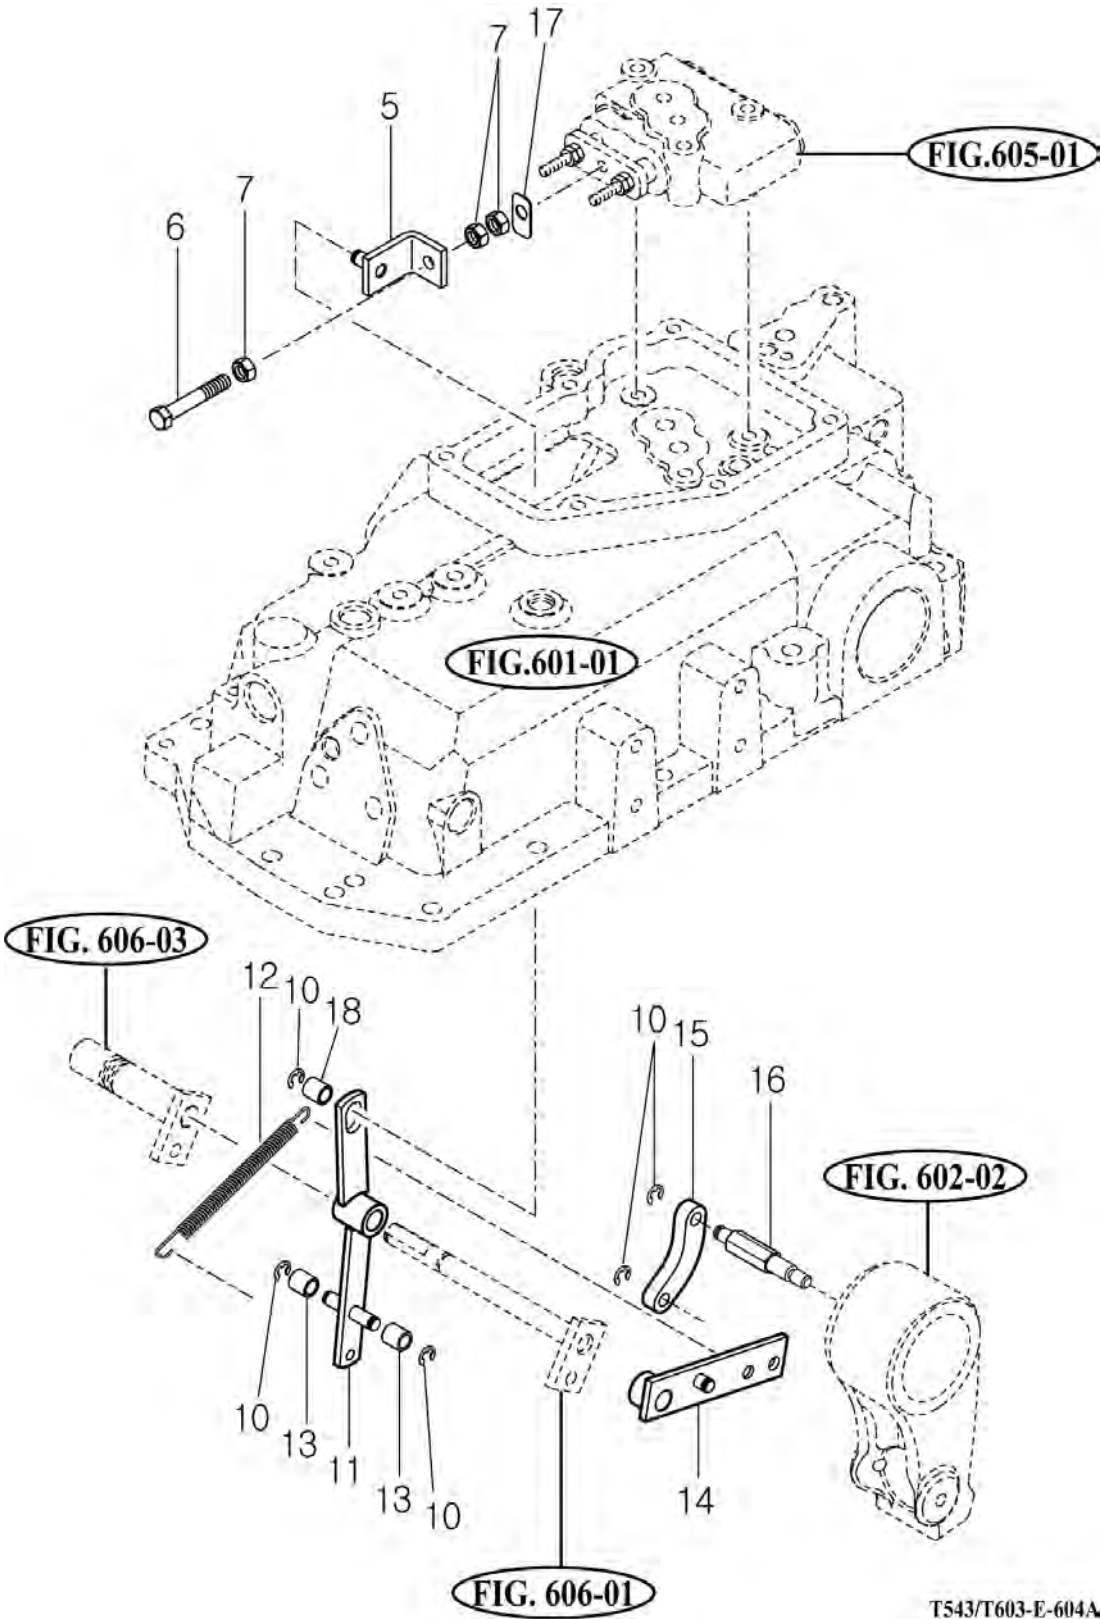 

T543/T603-E-604A

NOTE


FIG 605

CONTROL VALVE


P1

Year

 2016

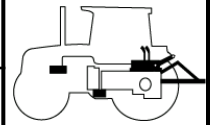

T754SC

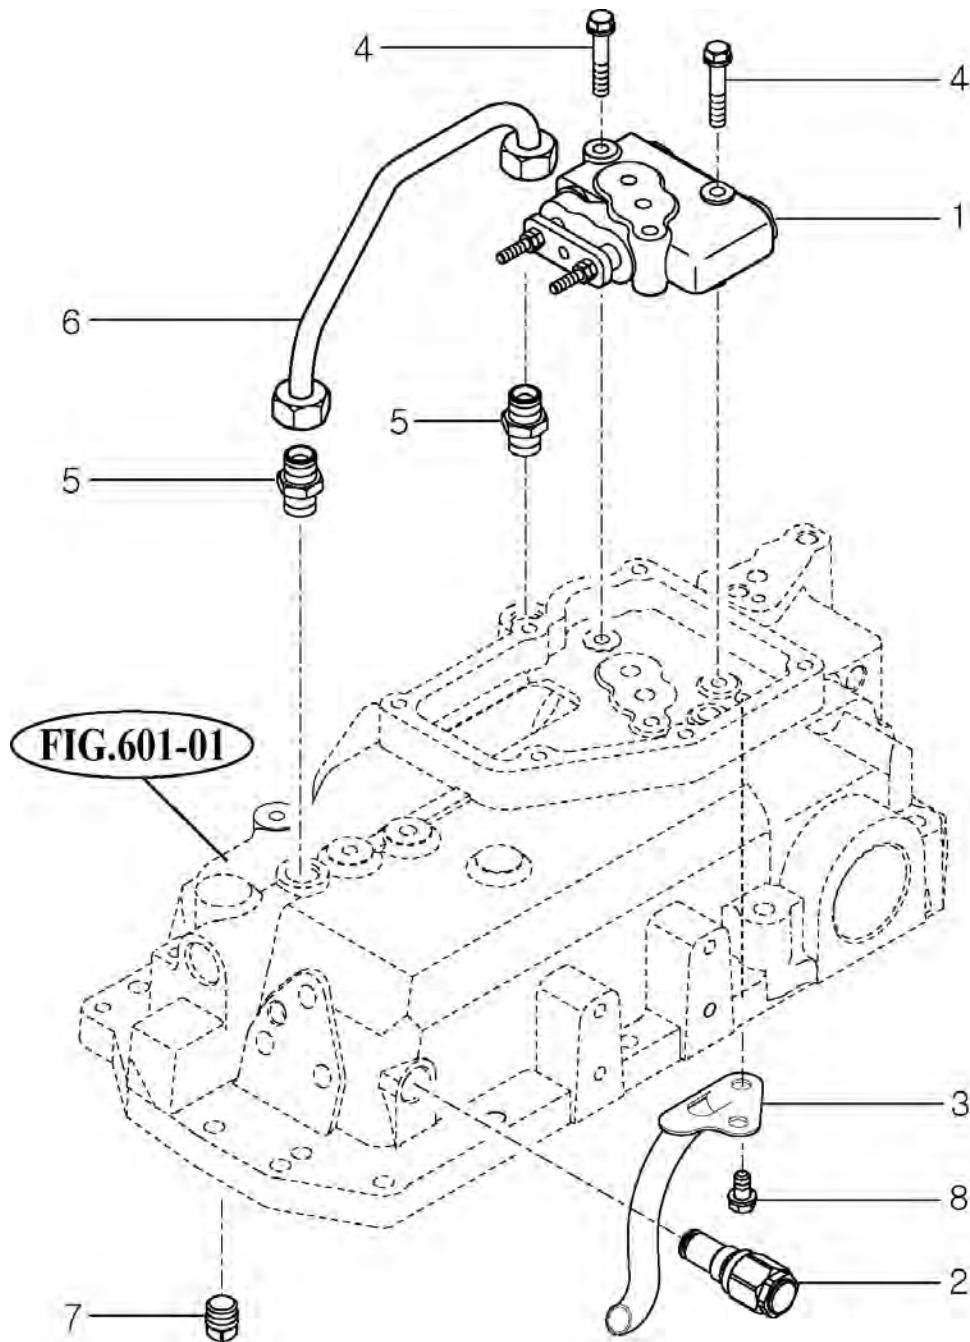 

T754-E-605

NOTE


FIG 606

DRAFT LINK

P1

Year

 2016

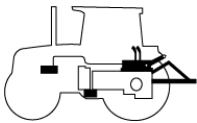

T754SC

FIG. 607-16


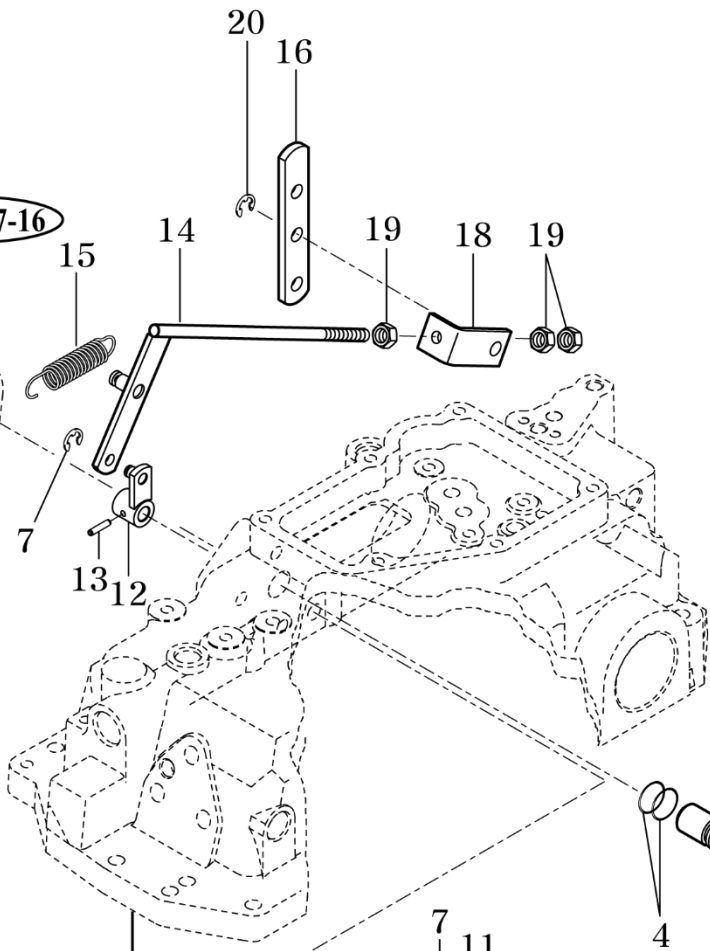 


FIG. 601-01

FIG. 604-11

 FIG. 604-14

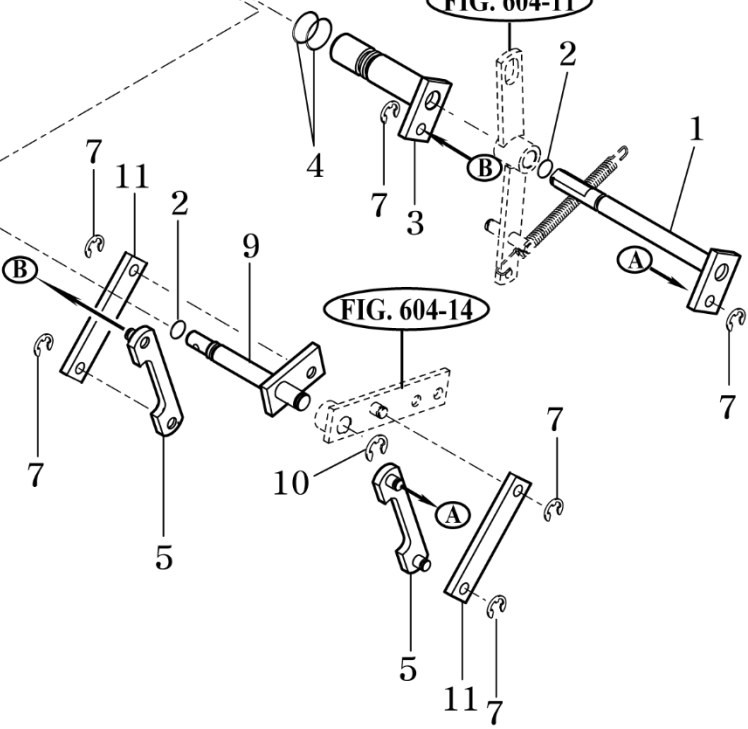

T724-K-606

NOTE

FIG 607

 
 
POSITION & DRAFT LEVER

T754SC

P1

Year

2016

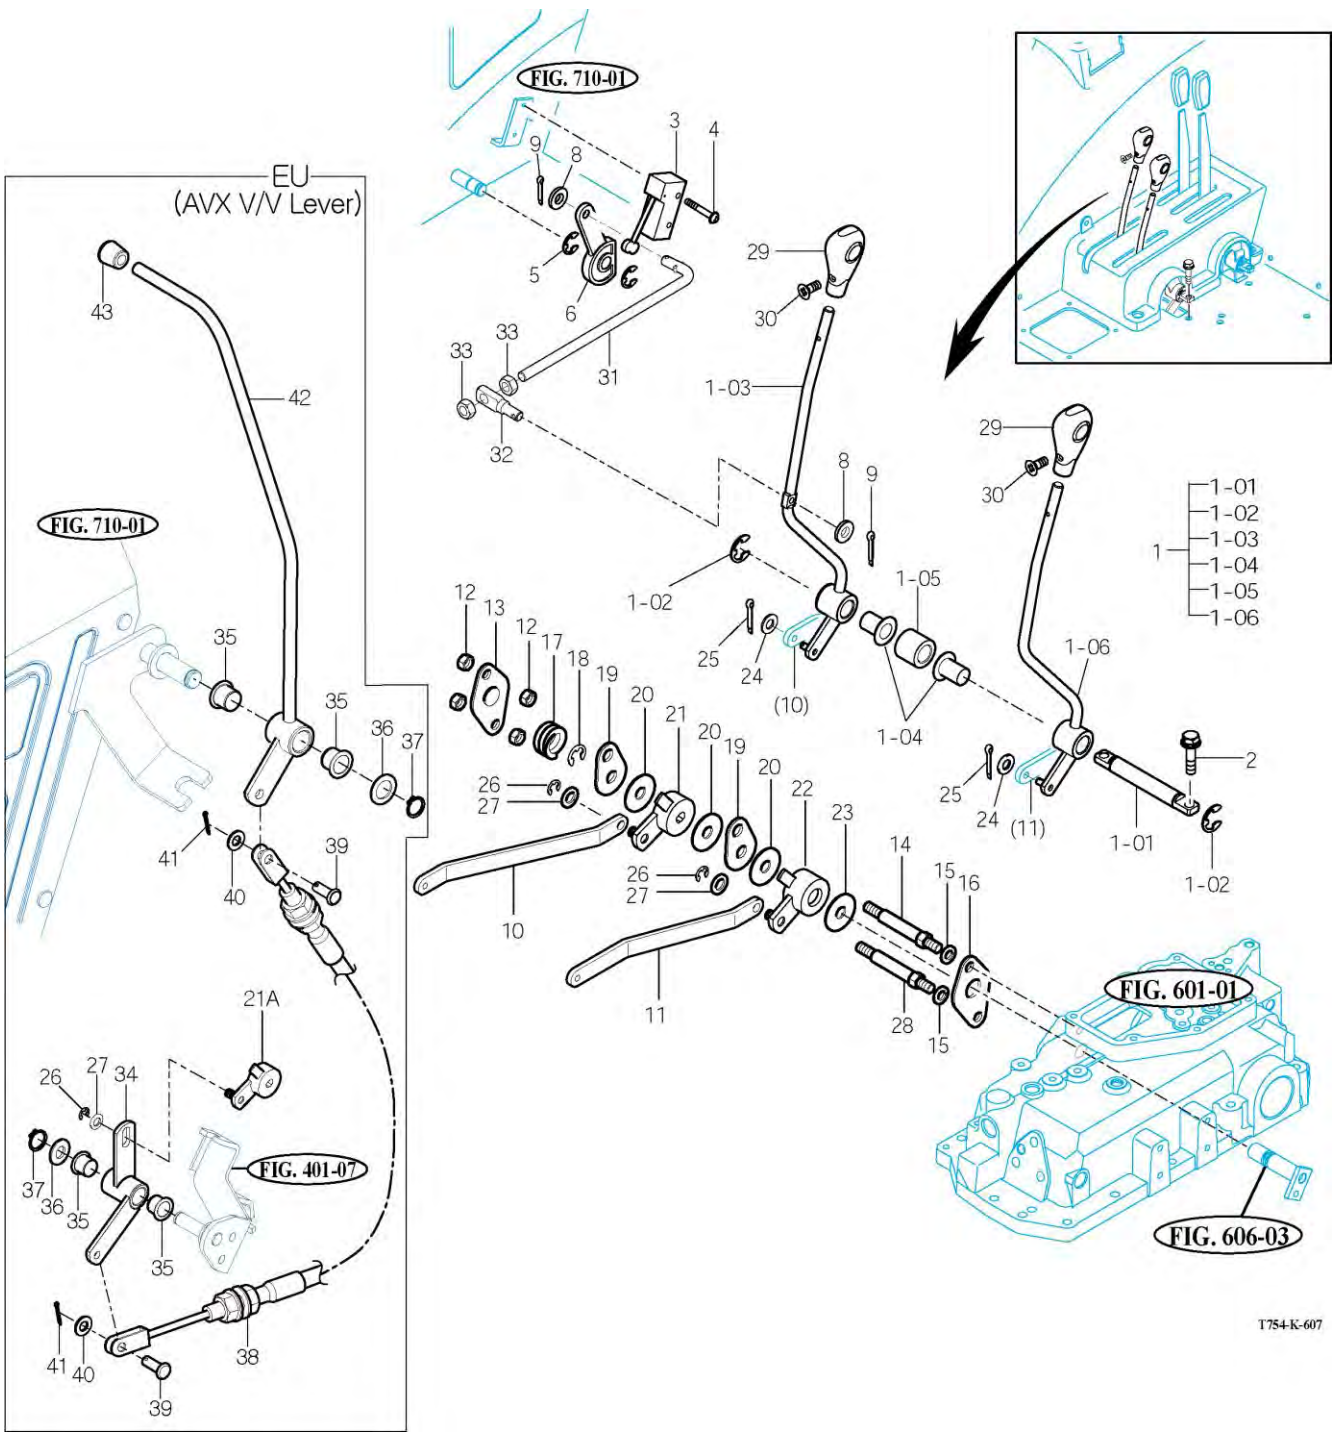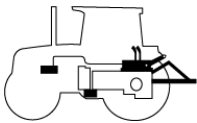

T754-K-607

NOTE


FIG 608

EXTERIOR HYD.VALVE



P1

Year

 2016

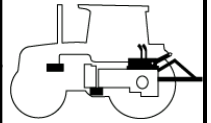

T754SC

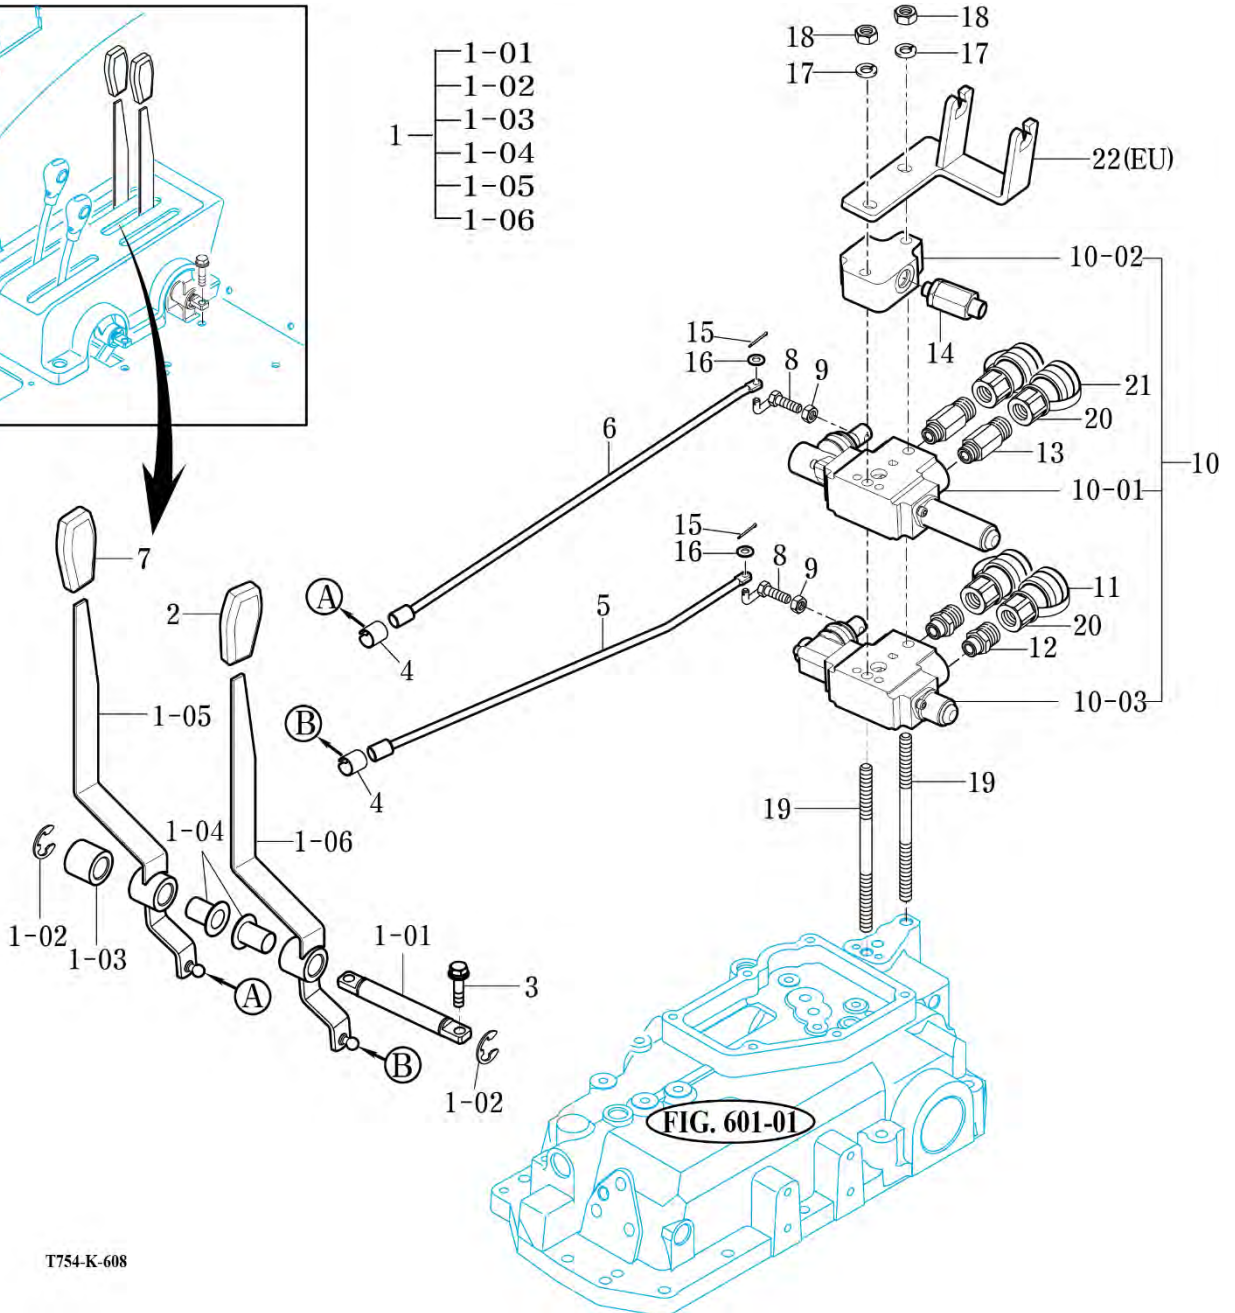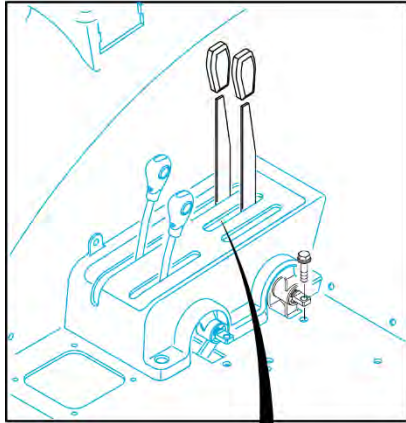  

T754-K-608

NOTE

FIG 608A

 
 
 
EXTERIOR HYD.VALVE (EUA)

T754SC

P1

Year

2016

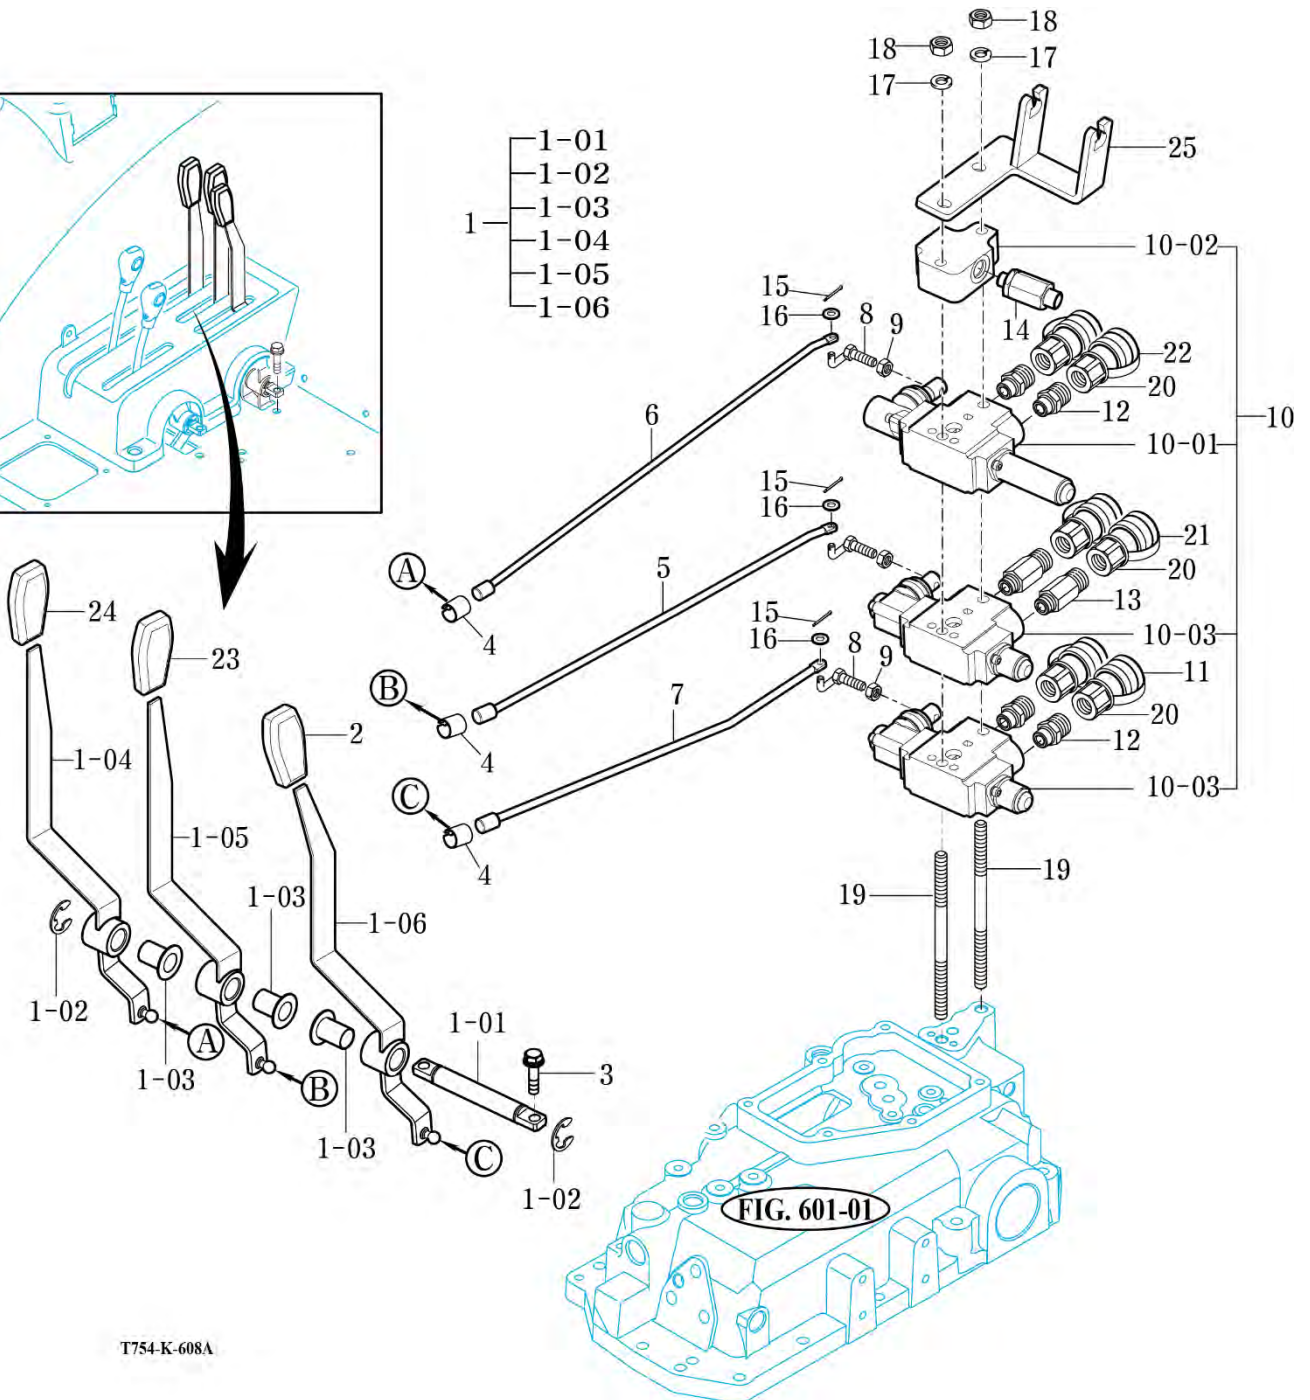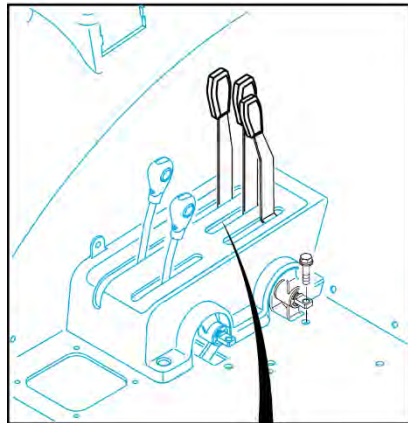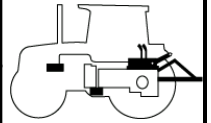

T754-K-608A

NOTE



FIG 609

HYDRAULIC PIPE

P1

Year

  2016

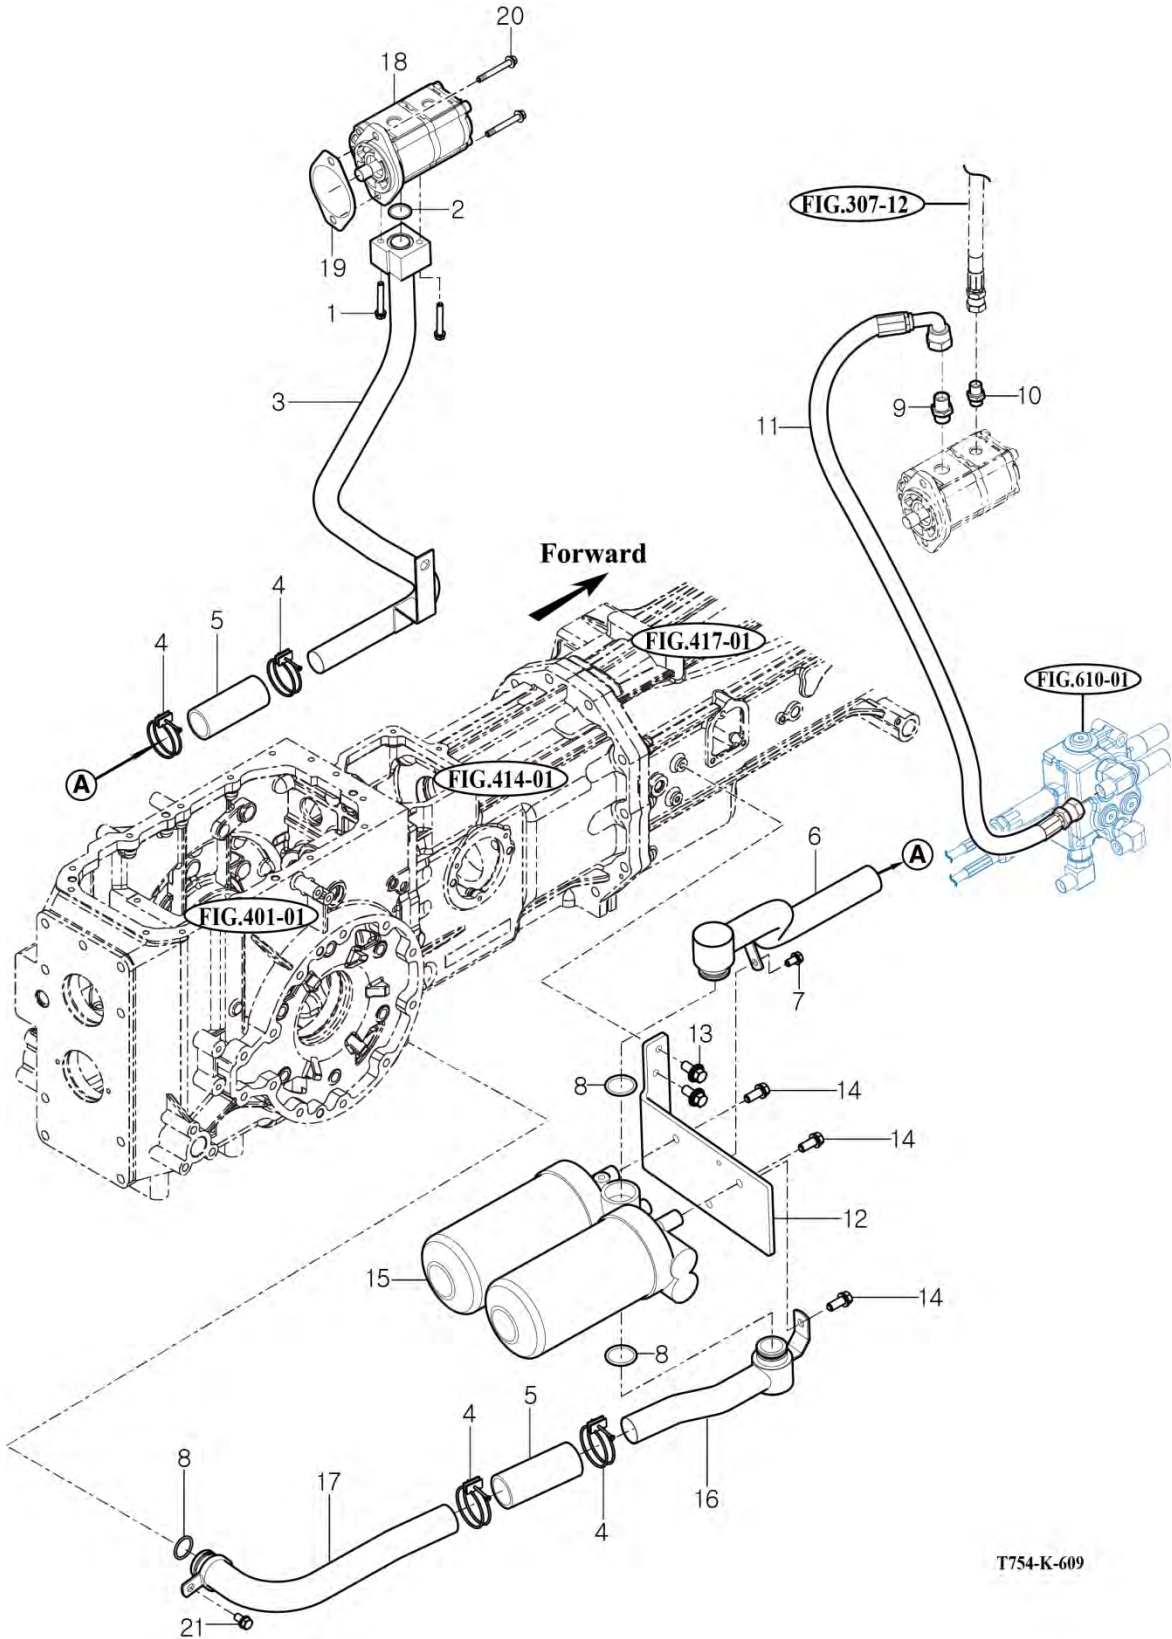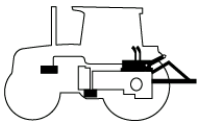

T754-K-609

NOTE


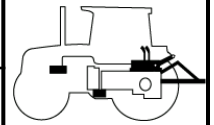 


FIG 610

T754SC

 P1

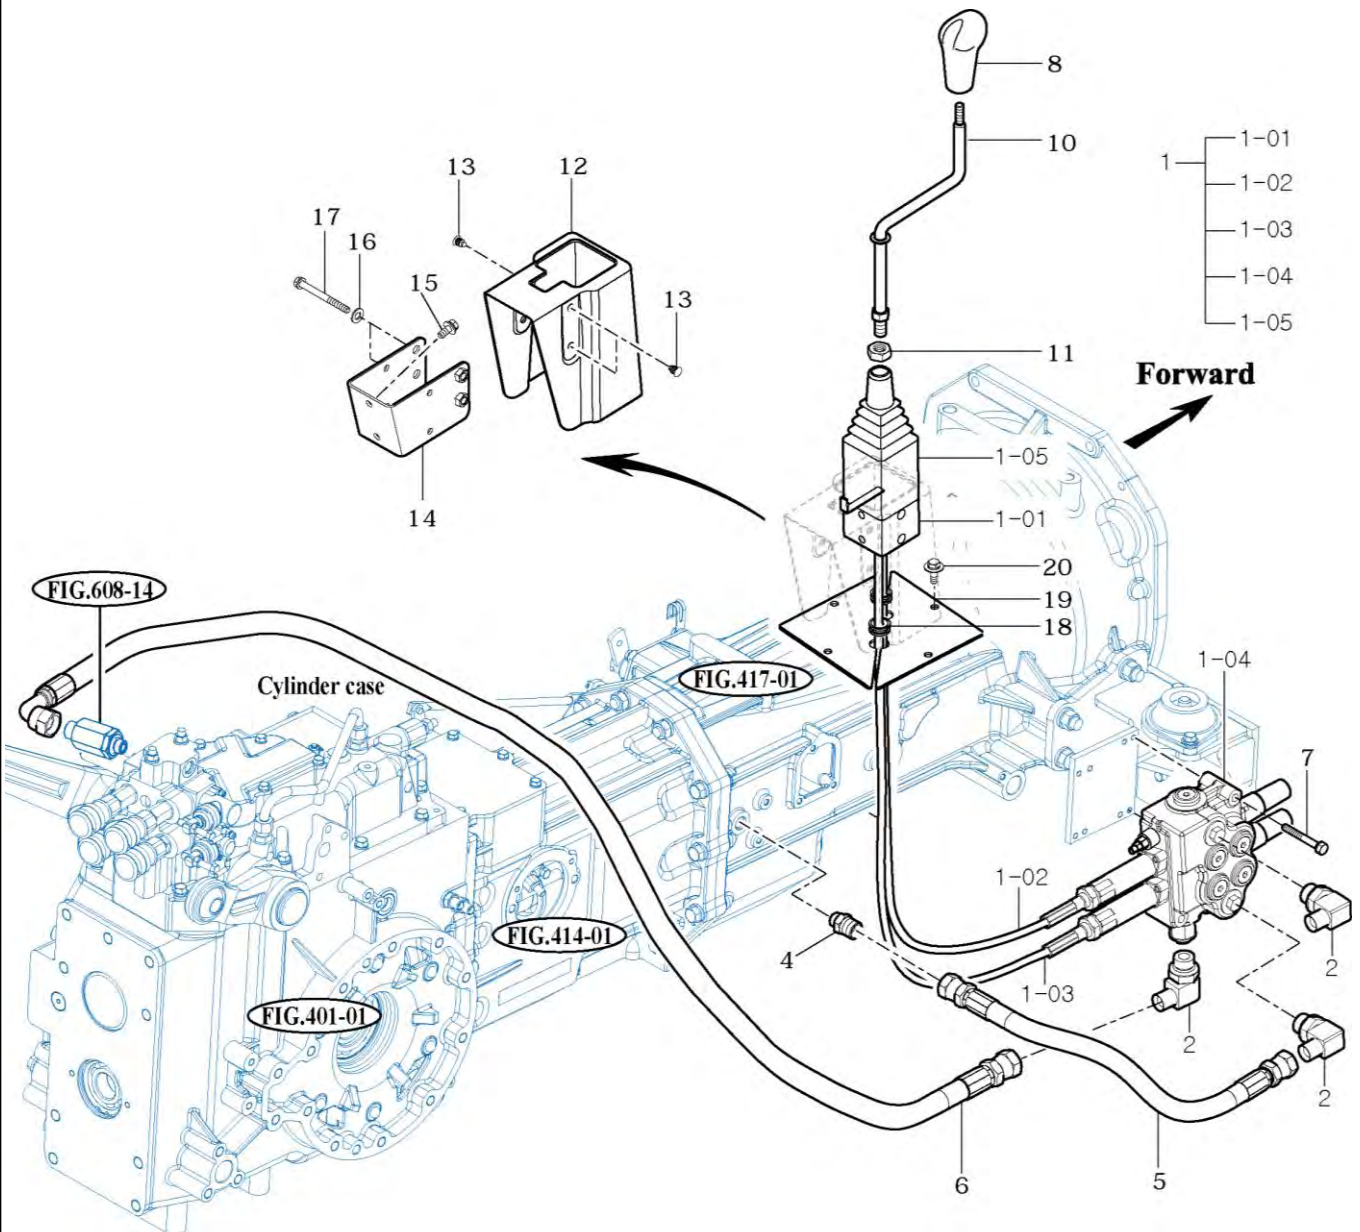

T754-K-610

NOTE

FIG 611

 
 
HITCH & 3-POINT LINK

T754SC

P1

Year

2016

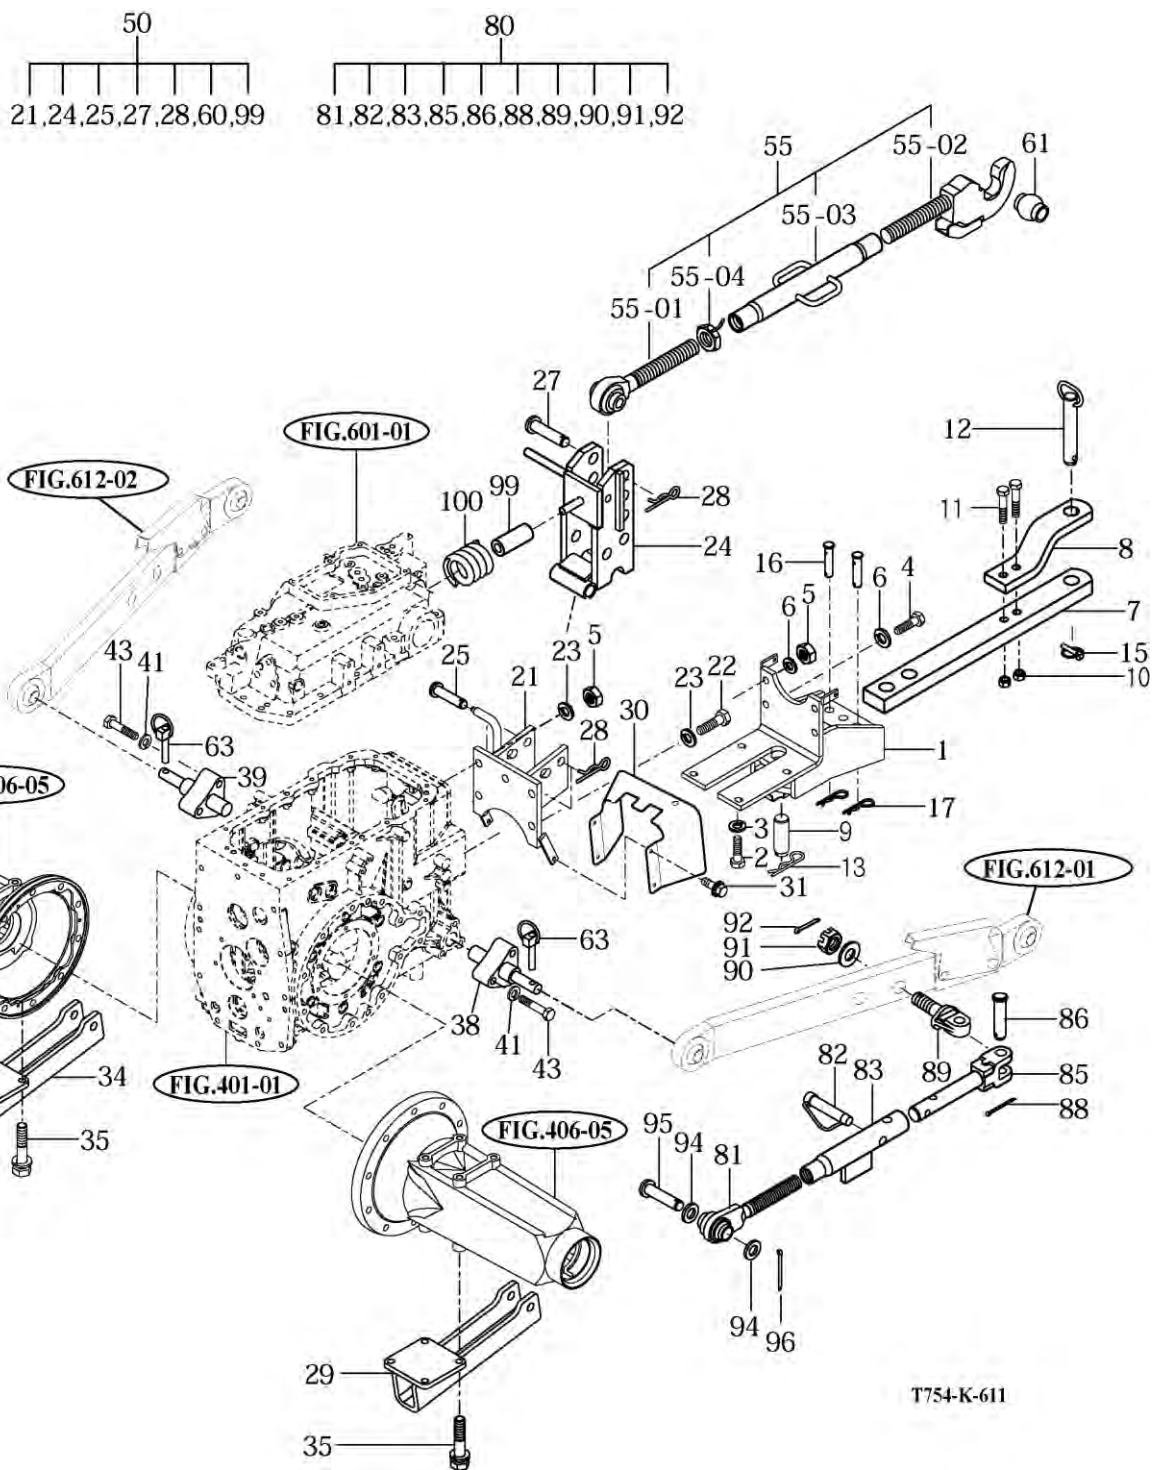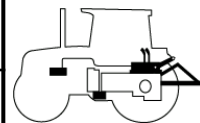

T754-K-611

NOTE

FIG 611

 
 
T754SC

HITCH & 3-POINT LINK

P2

Year

2016

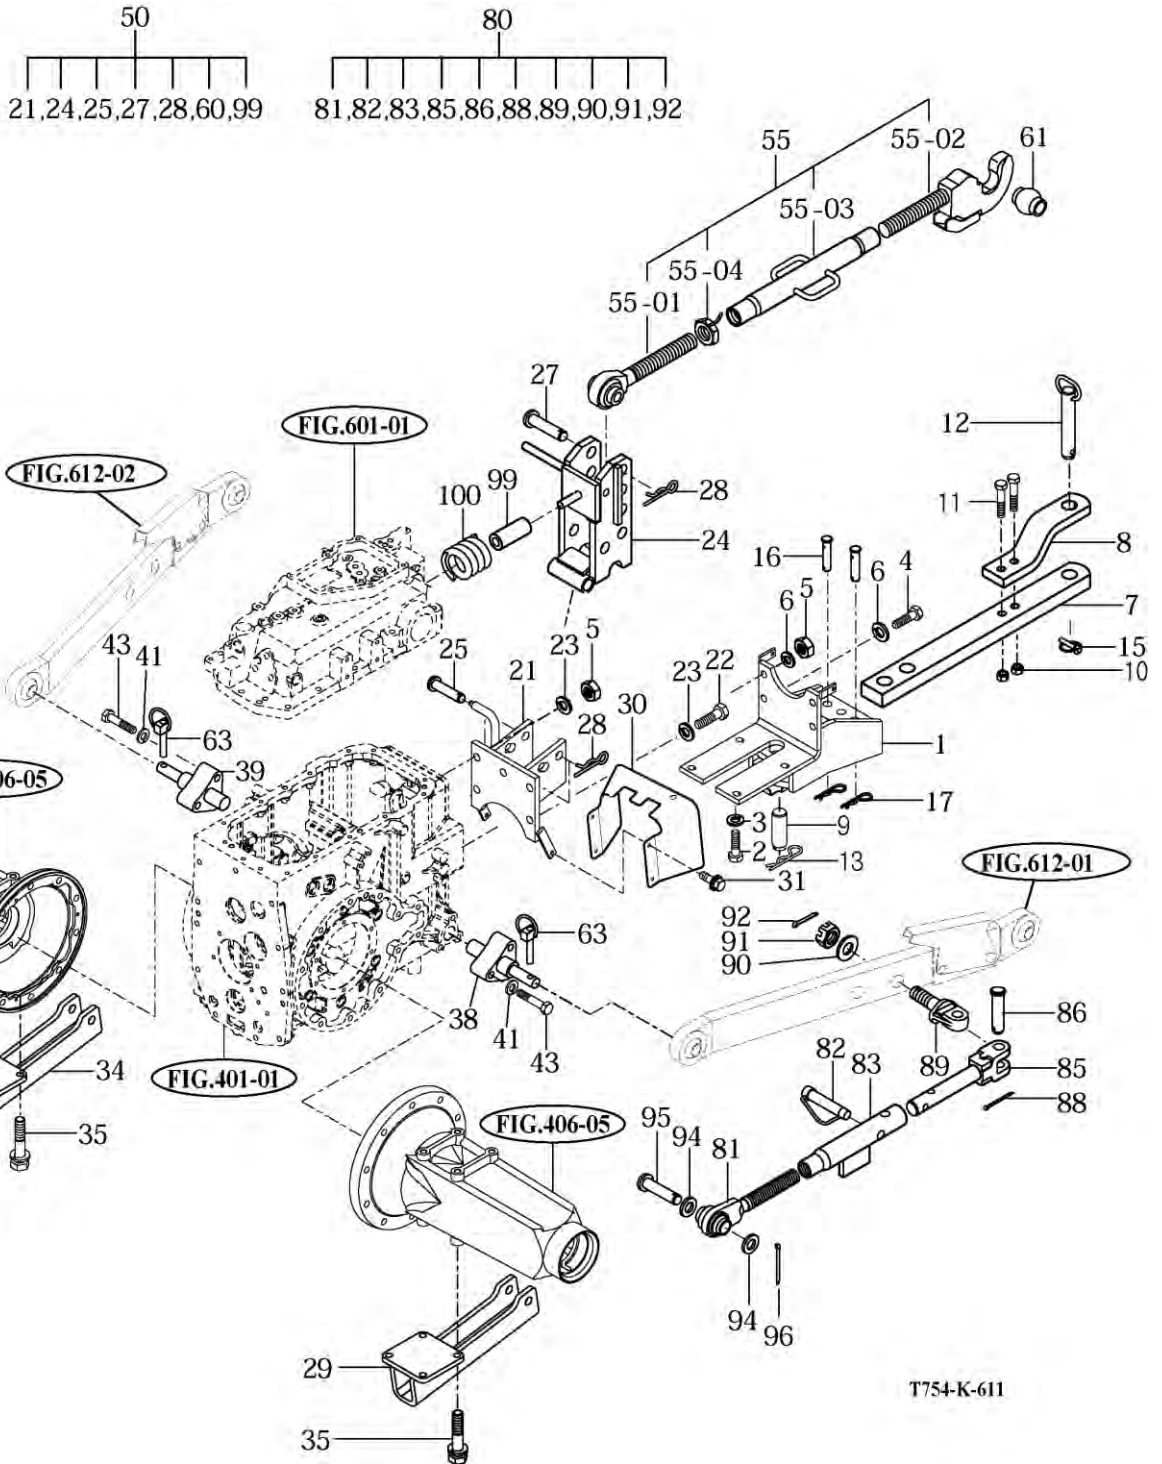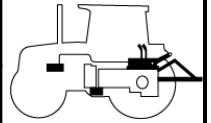

NOTE

FIG 611A

 
 
HITCH & 3-POINT LINK (EU,EUA)

T754SC

P1

Year

2016

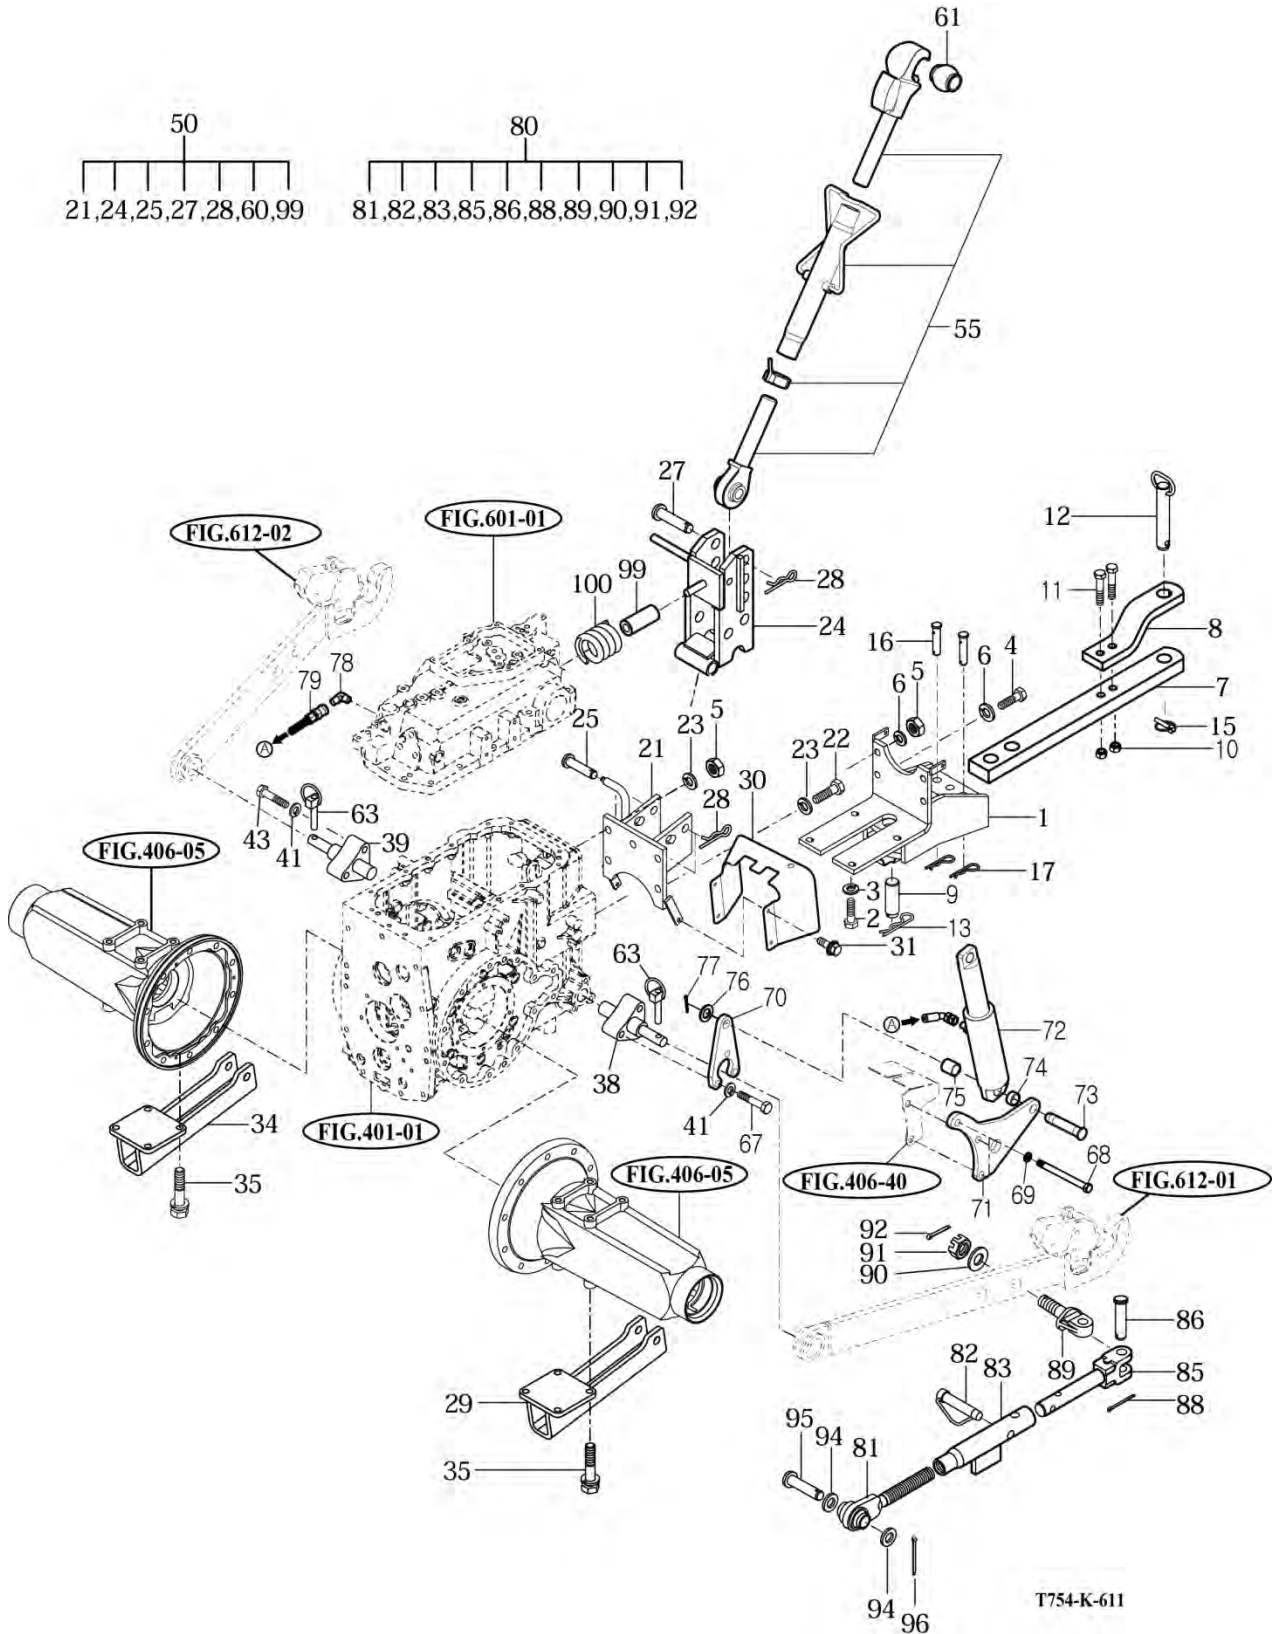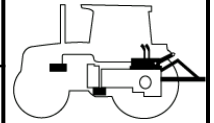

NOTE

FIG 611A

 
 
HITCH & 3-POINT LINK (EU,EUA)

T754SC

P2

Year

2016

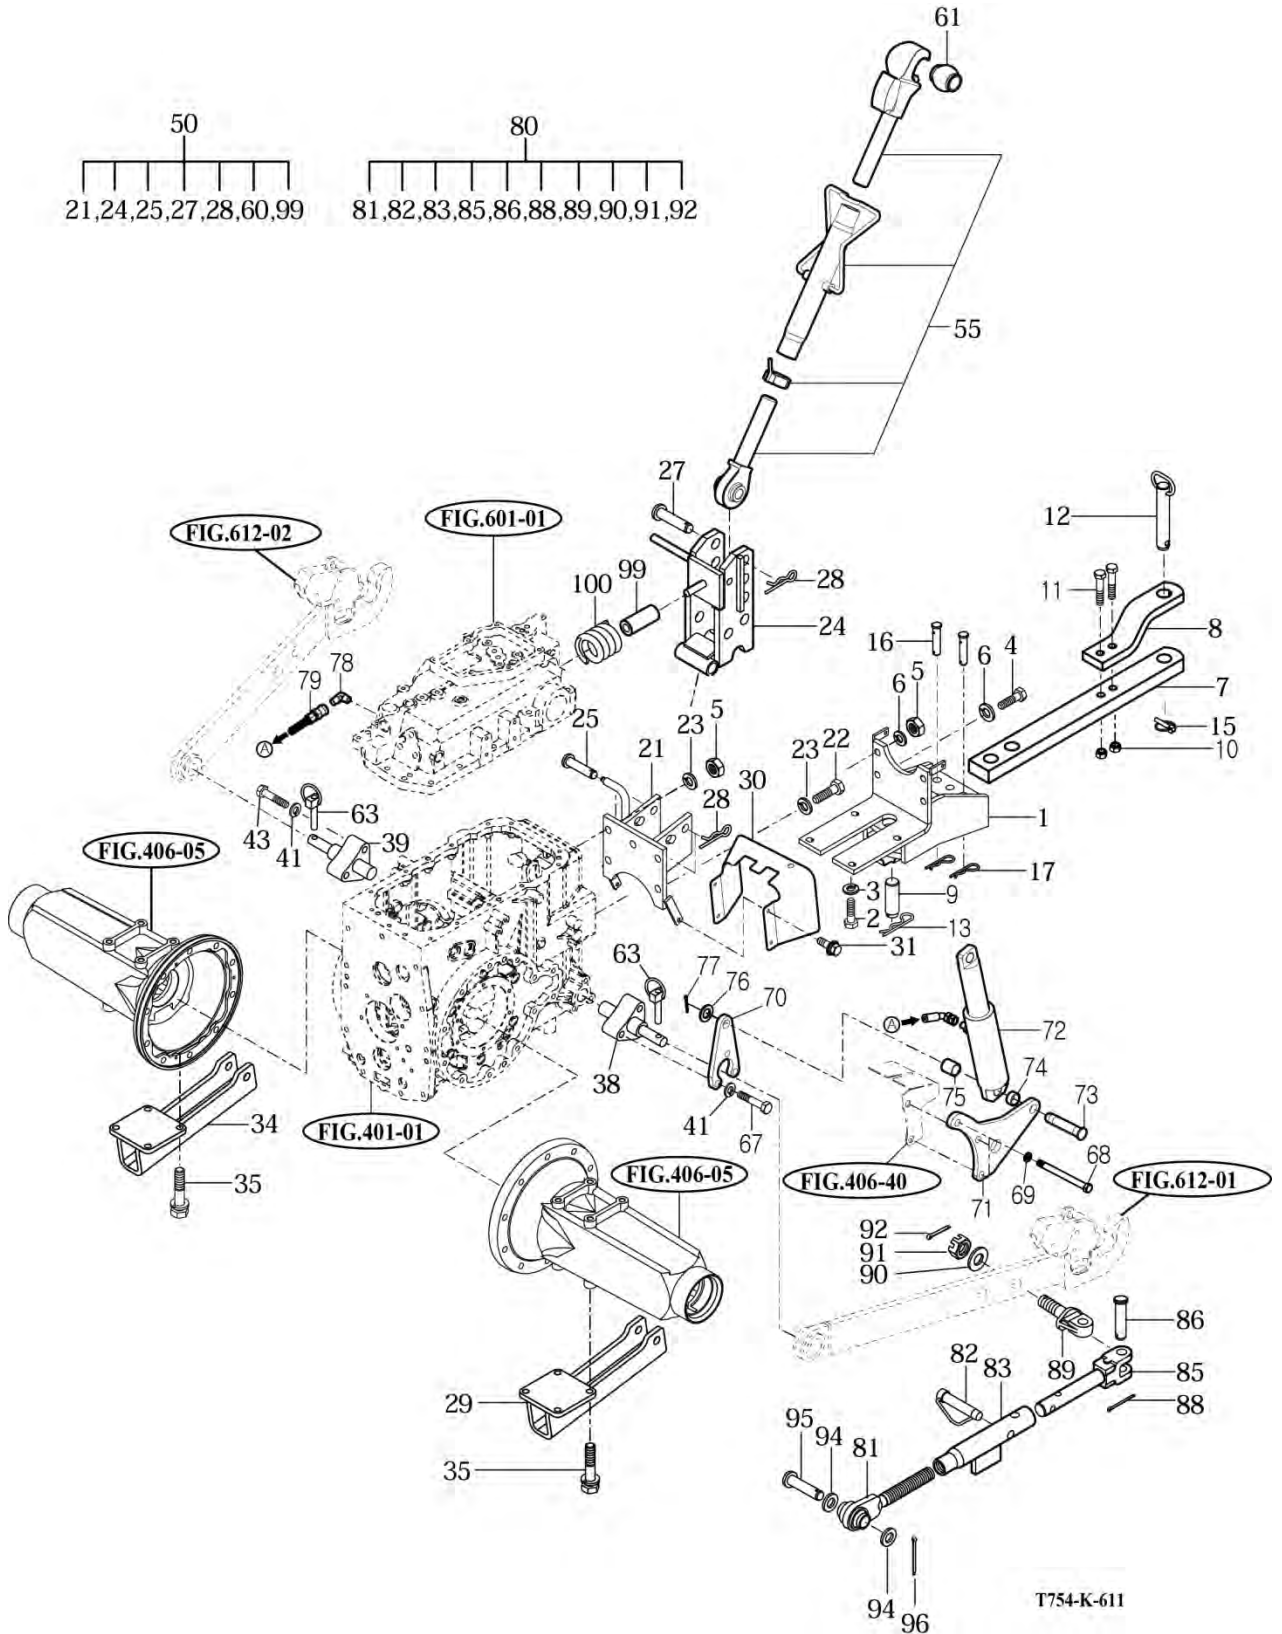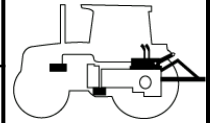

NOTE

FIG 612

 
 
LOWER LINK & LIFT ROD

T754SC

P1

Year

2016

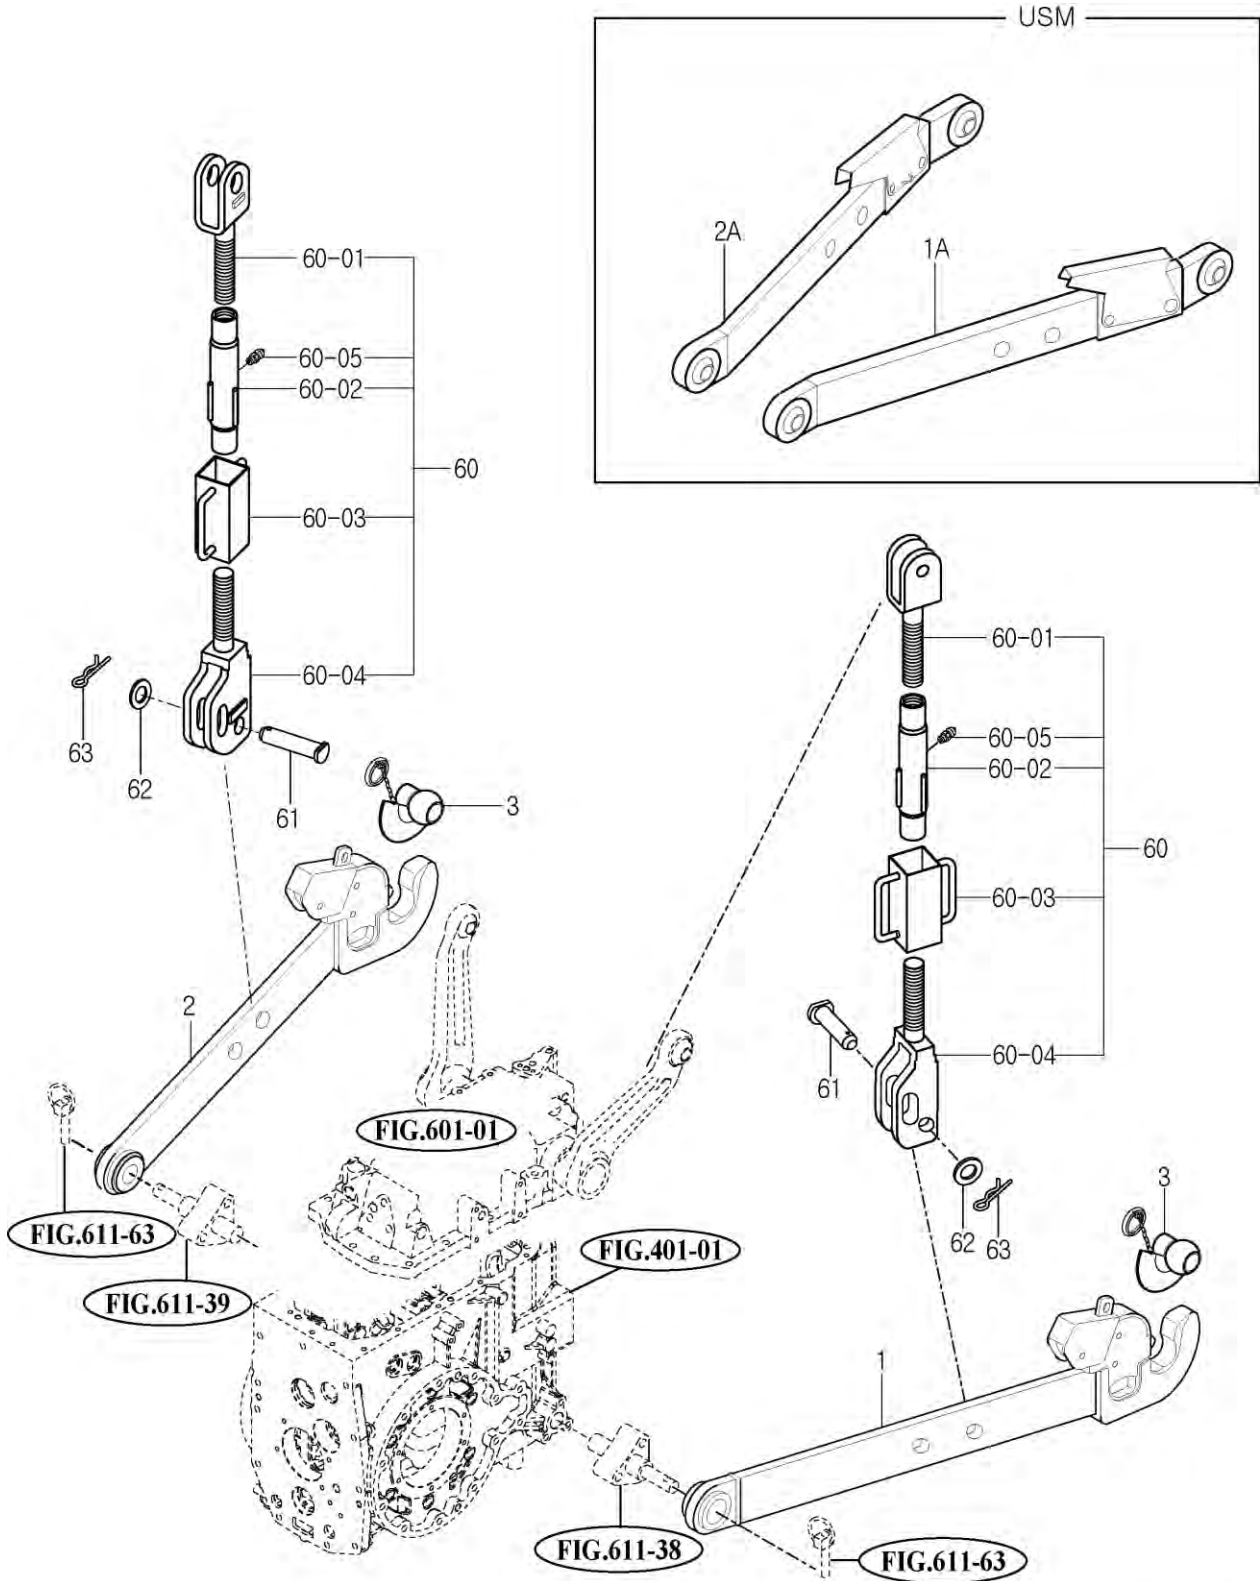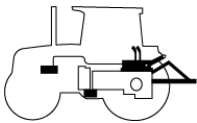

T754-K-612

NOTE

FIG 613

 
 
HYDRAULIC HOSE

T754SC

P1

Year

2016

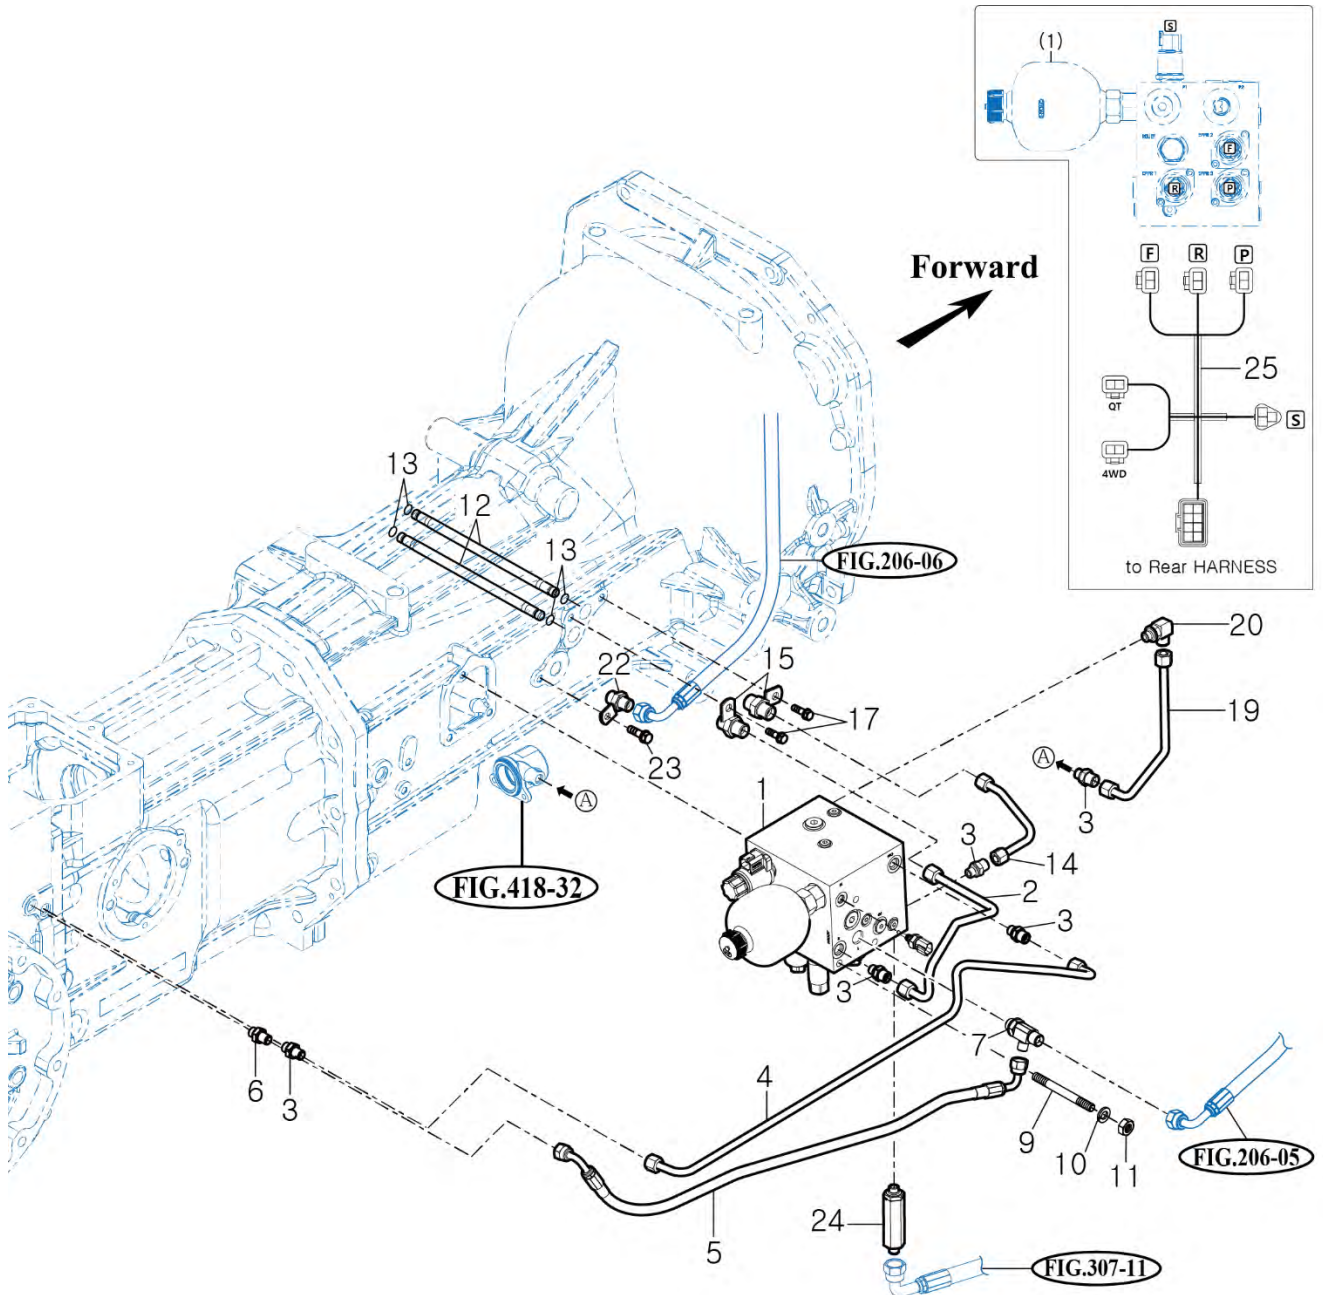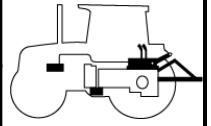

T754SC-K-613

NOTE


FIG 701

HOOD


P1

Year

 2016

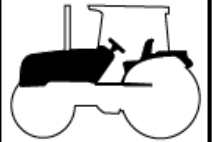

T754SC

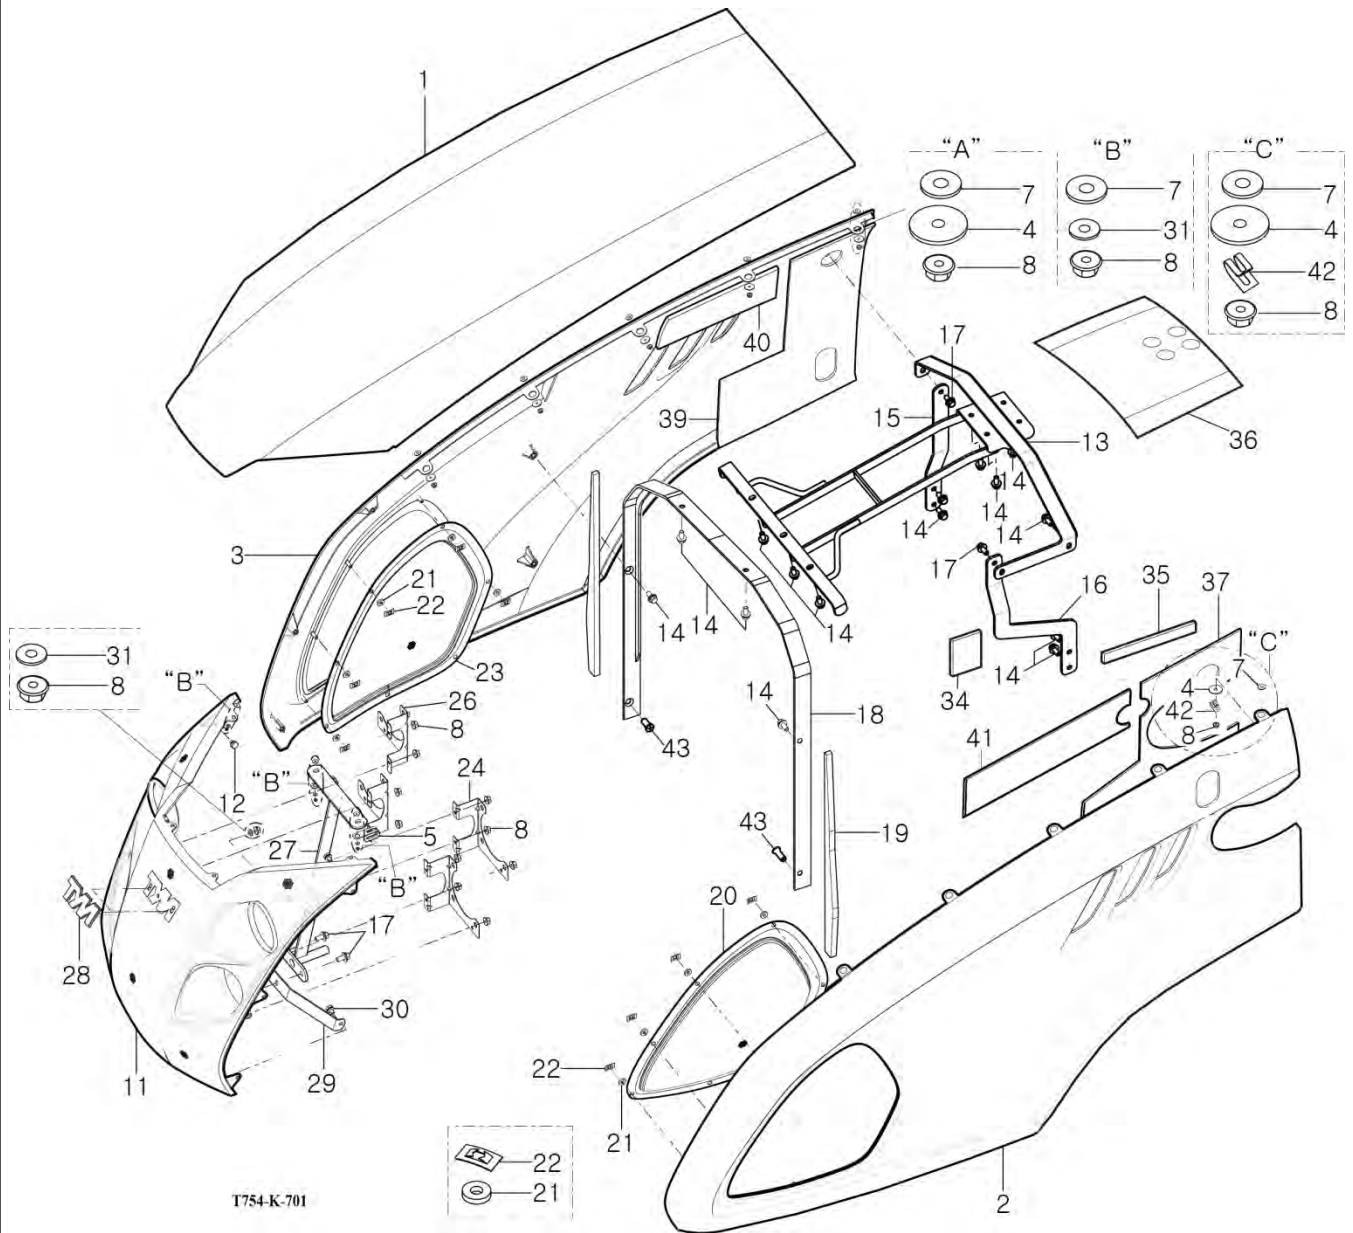 

NOTE


FIG 702

FRONT FRAME


P1

Year

 2016

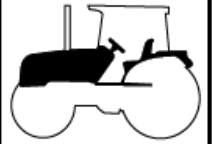

T754SC

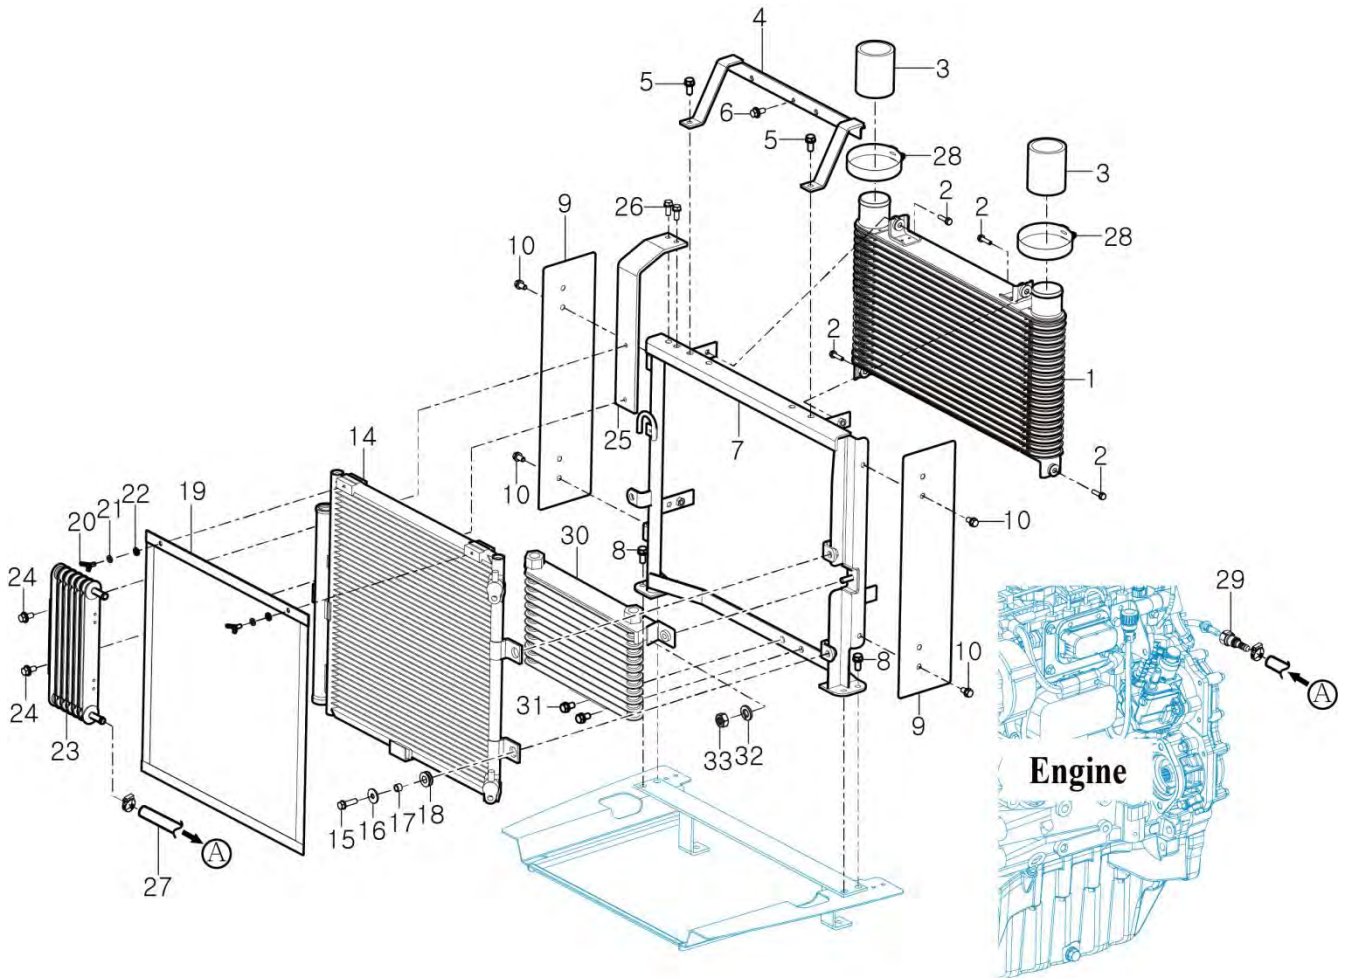 

T754-K-702

NOTE


FIG 703

SIDE SUPPORT & FRAME HOOD


P1

Year

 2016

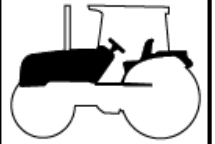

T754SC

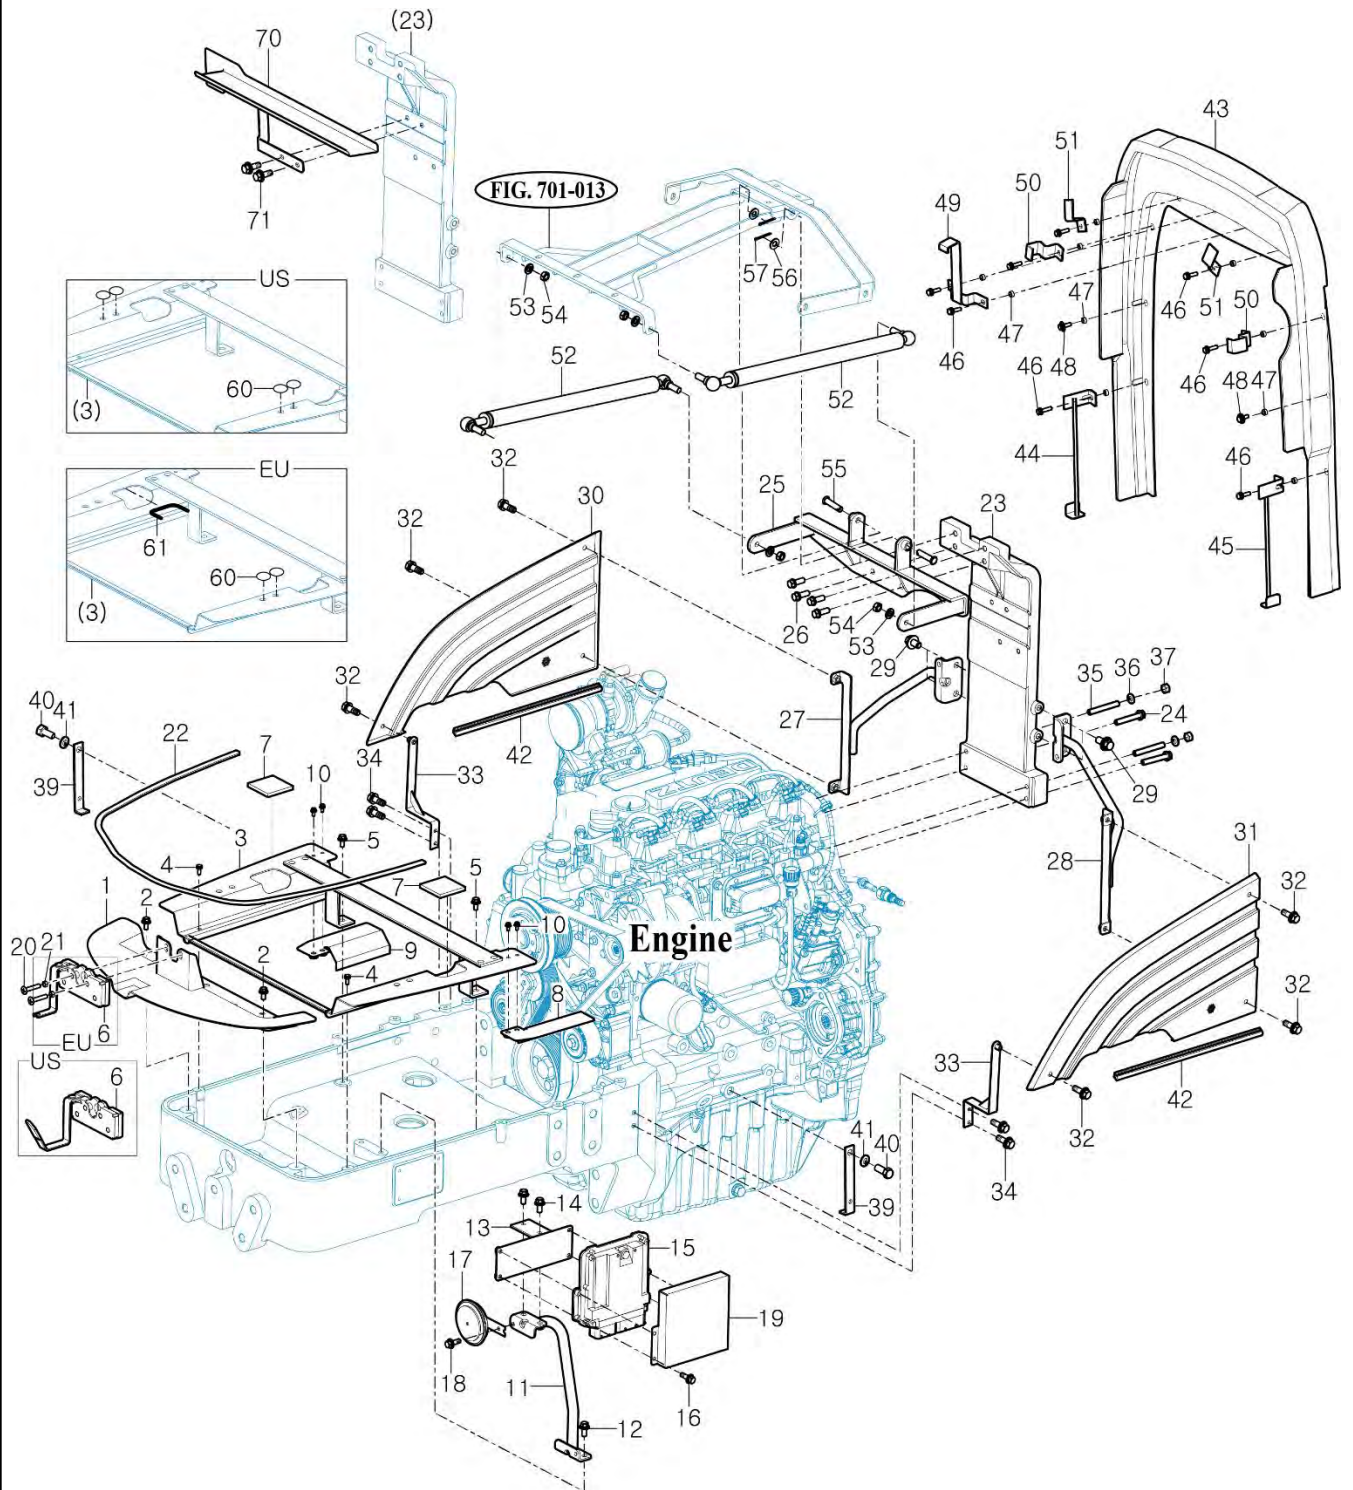 

1754-K-703

NOTE


FIG 703

SIDE SUPPORT & FRAME HOOD


P2

Year

 2016

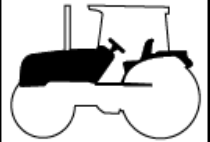

T754SC

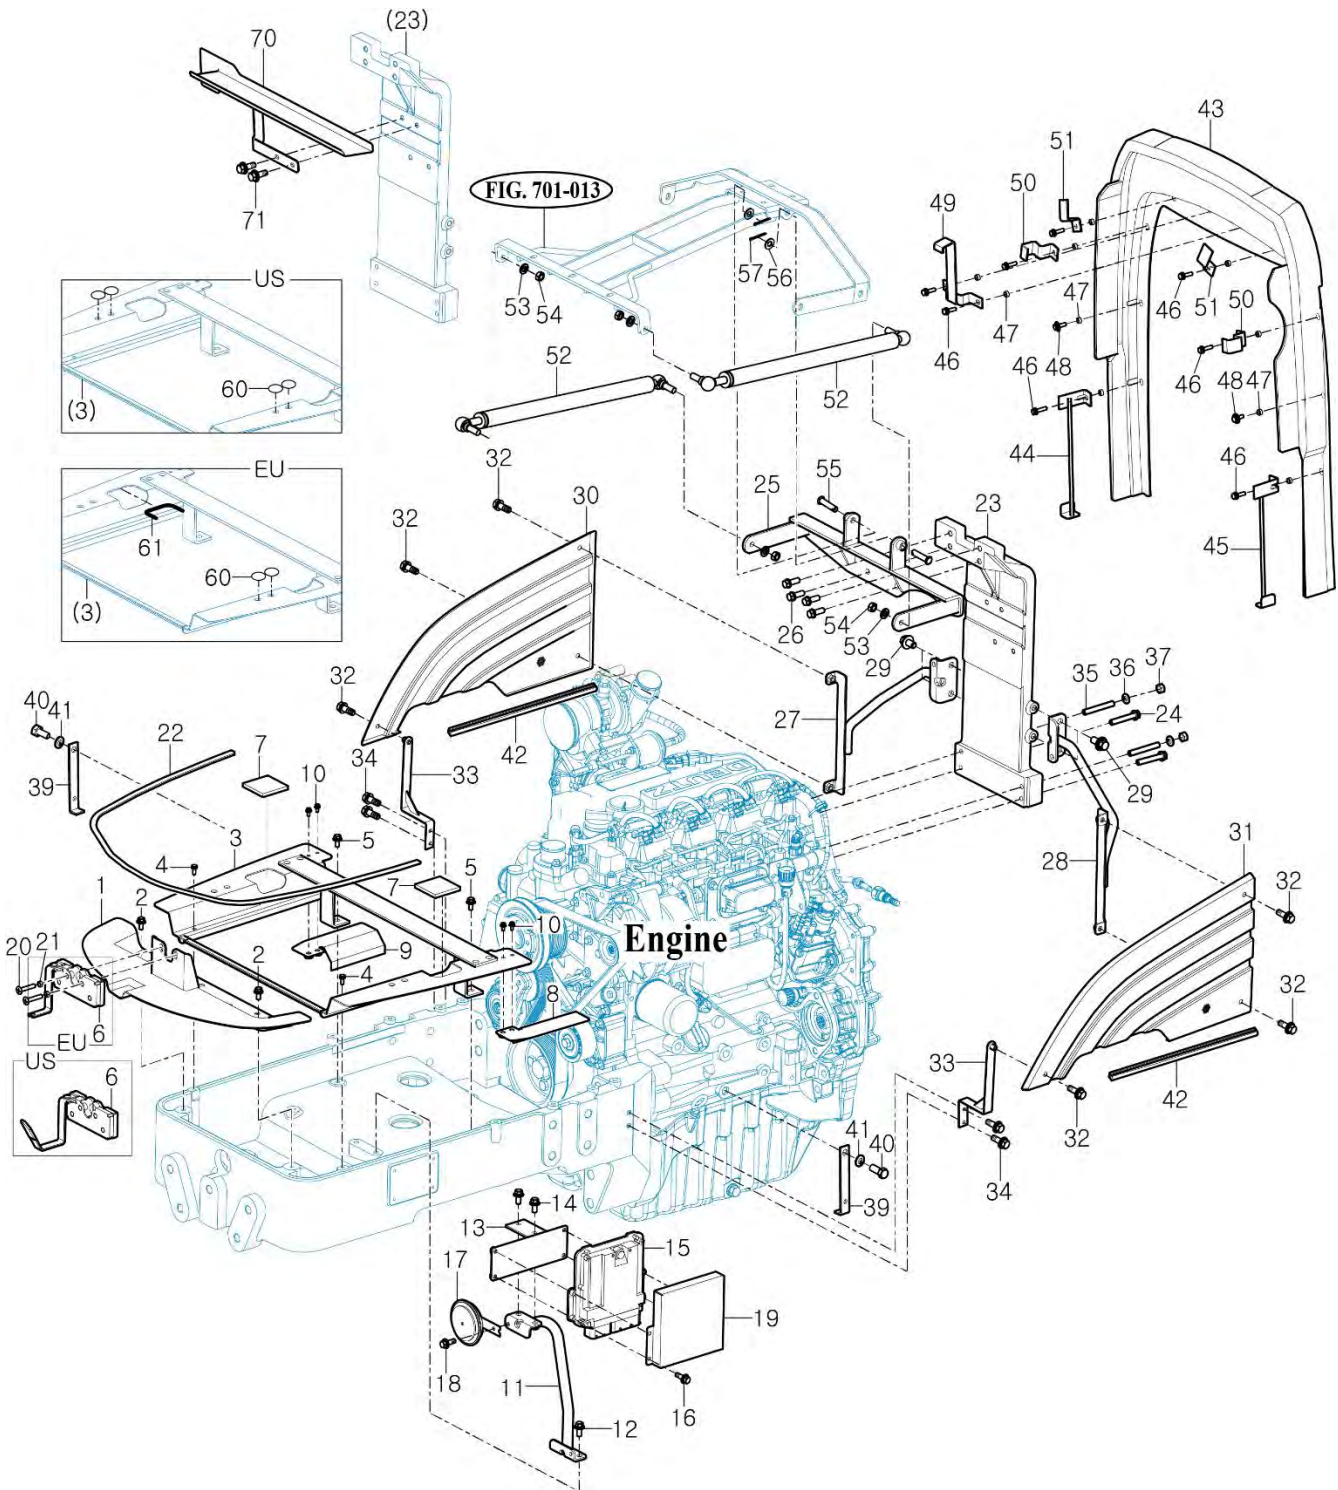 

1754-K-703

NOTE

FIG 704

 
T754SC

LEVER COVER & STEP

P1

Year

2016

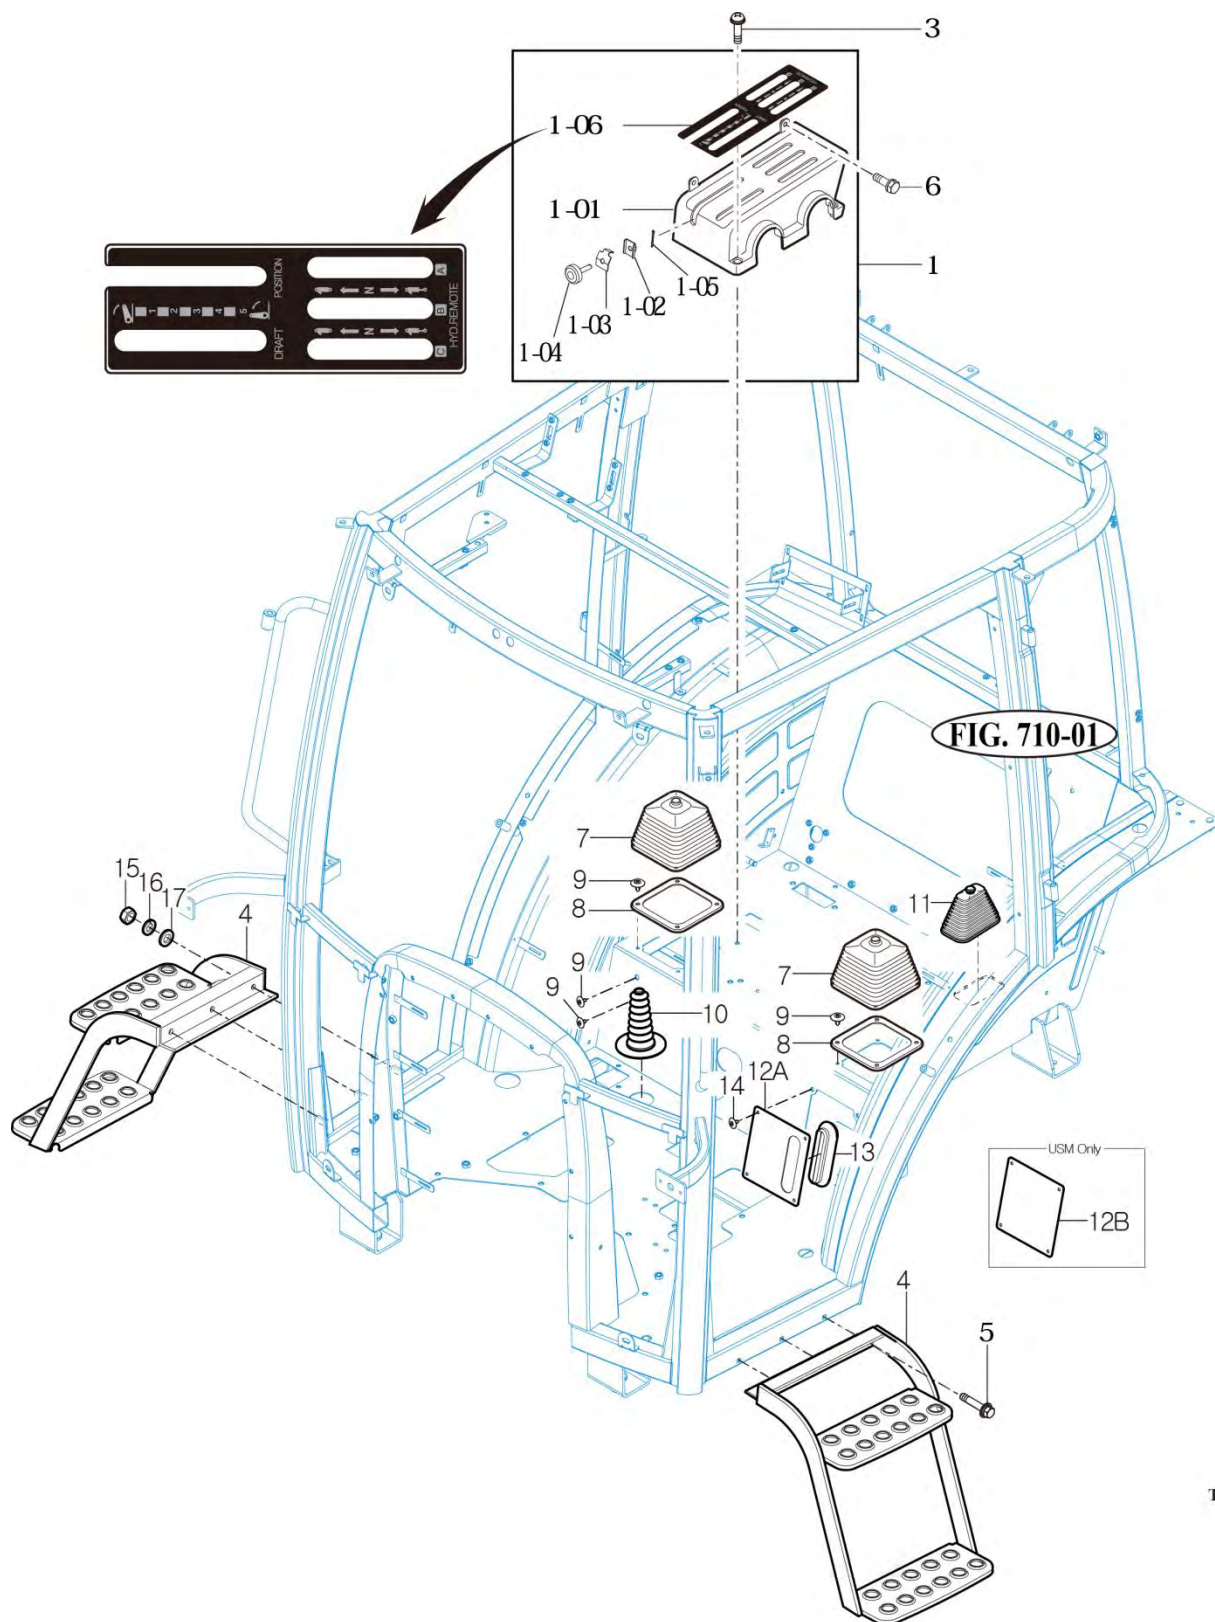

T743-K-704

NOTE


FIG 705

FRONT & REAR MOUNTING


P1

Year

 2016

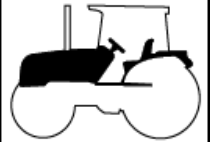

T754SC

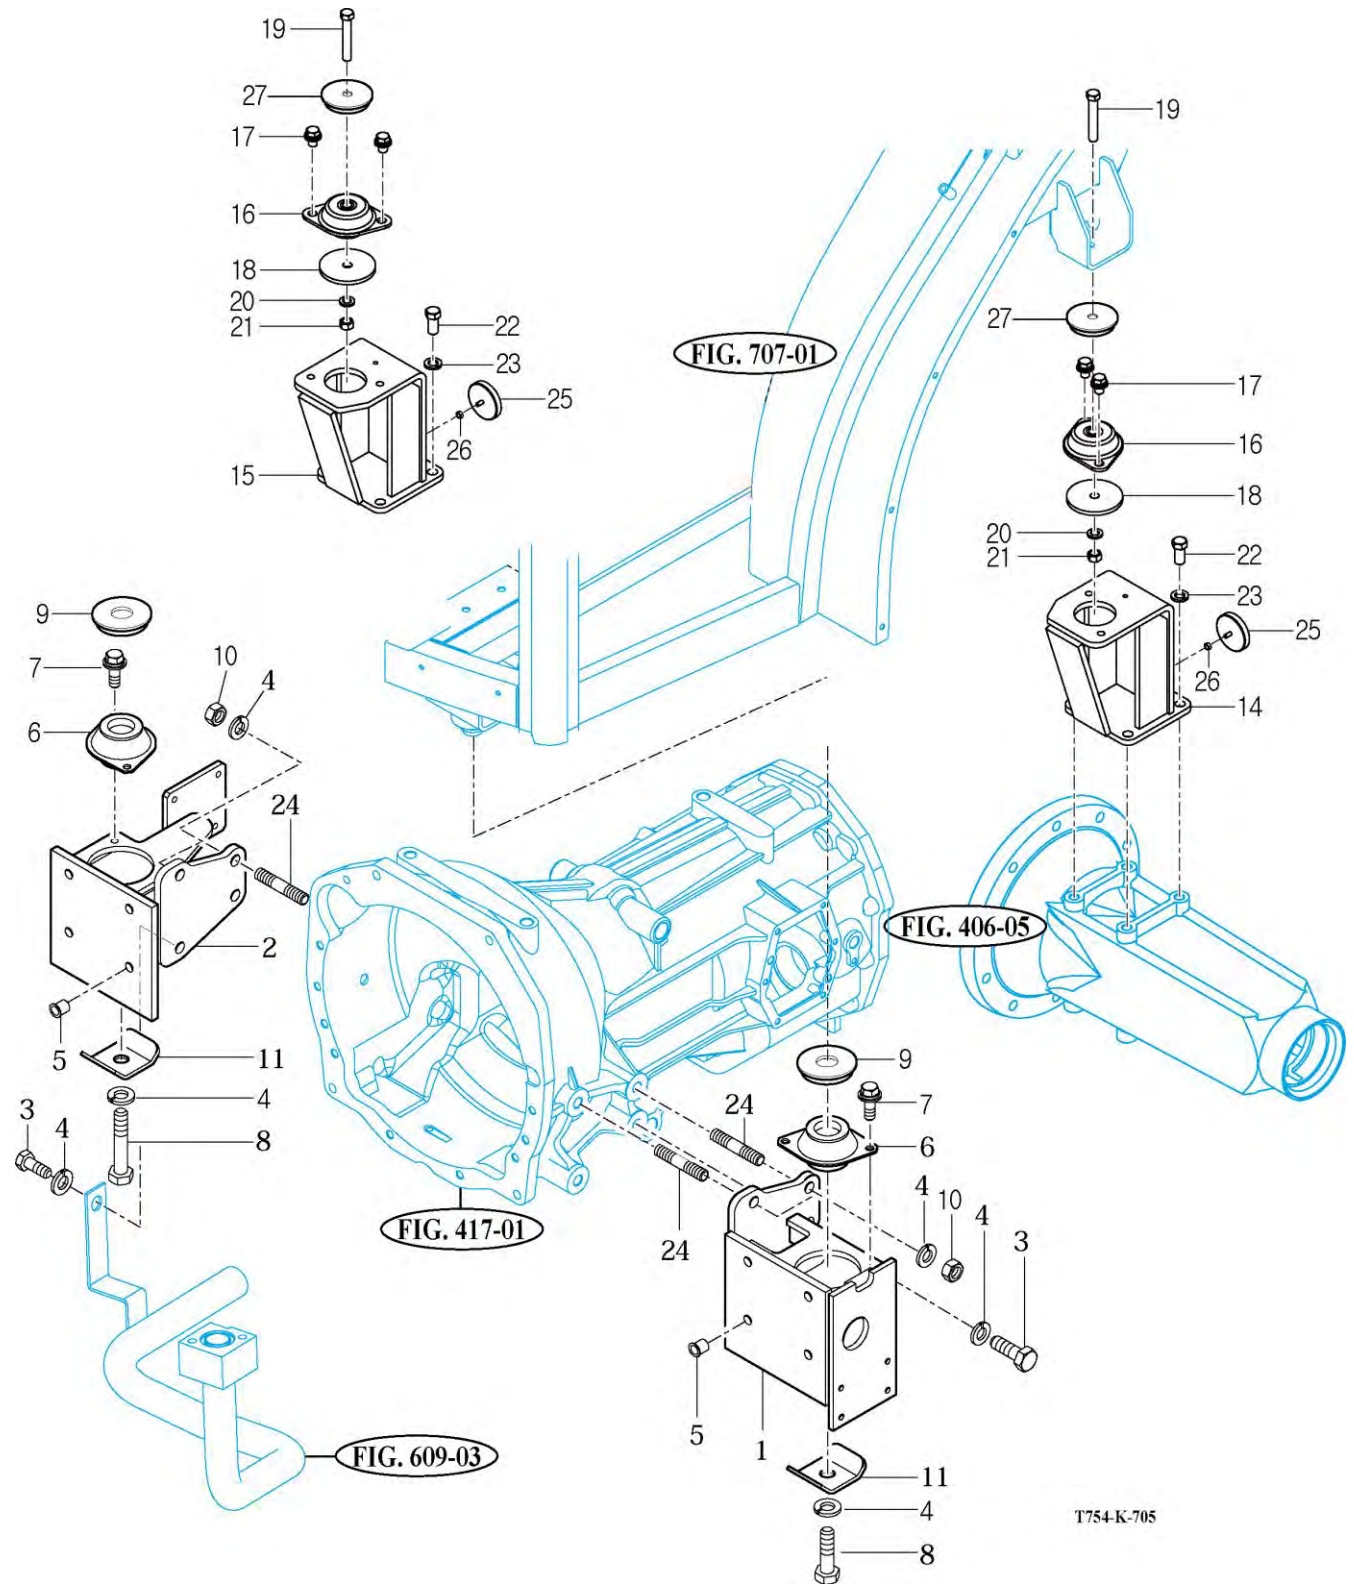 

NOTE


FIG 706

SEAT & MAT


P1

Year

 2016

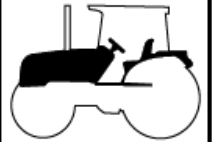

T754SC

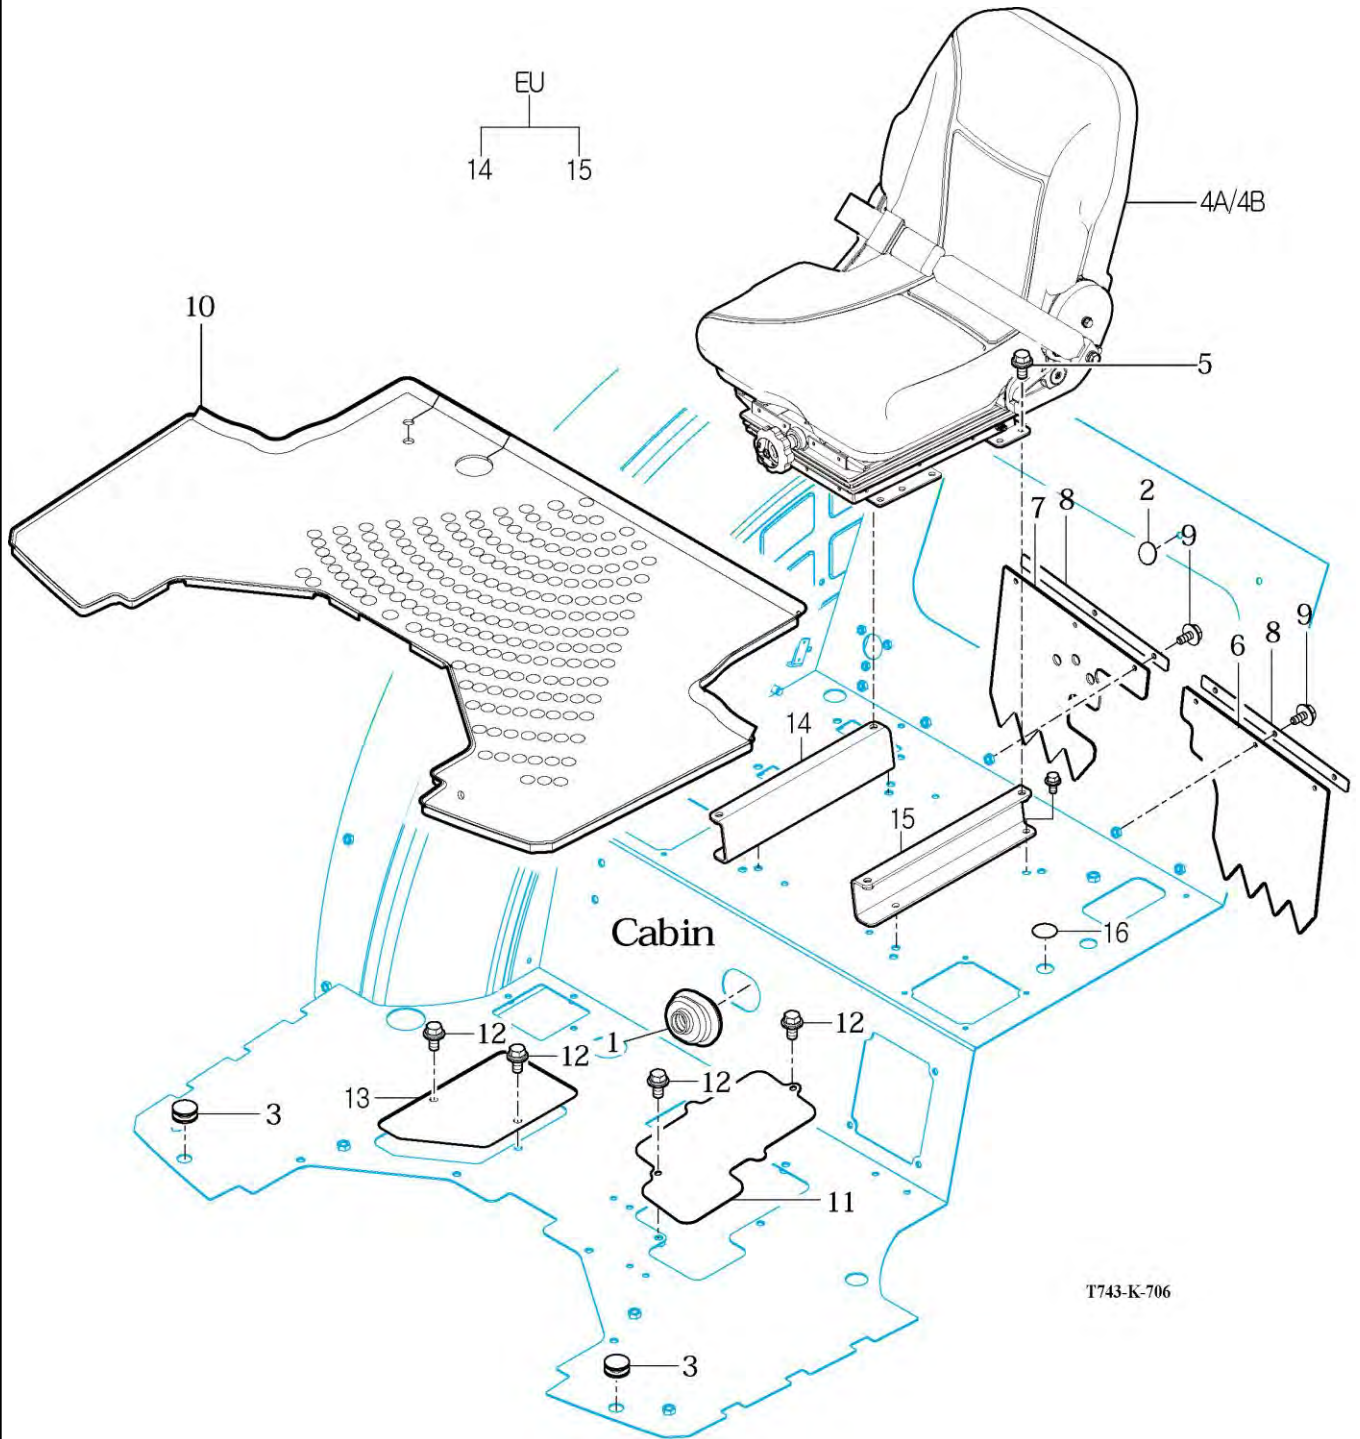 

NOTE


FIG 709

DOOR


P1

Year

 2016

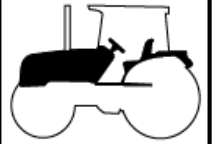

T754SC

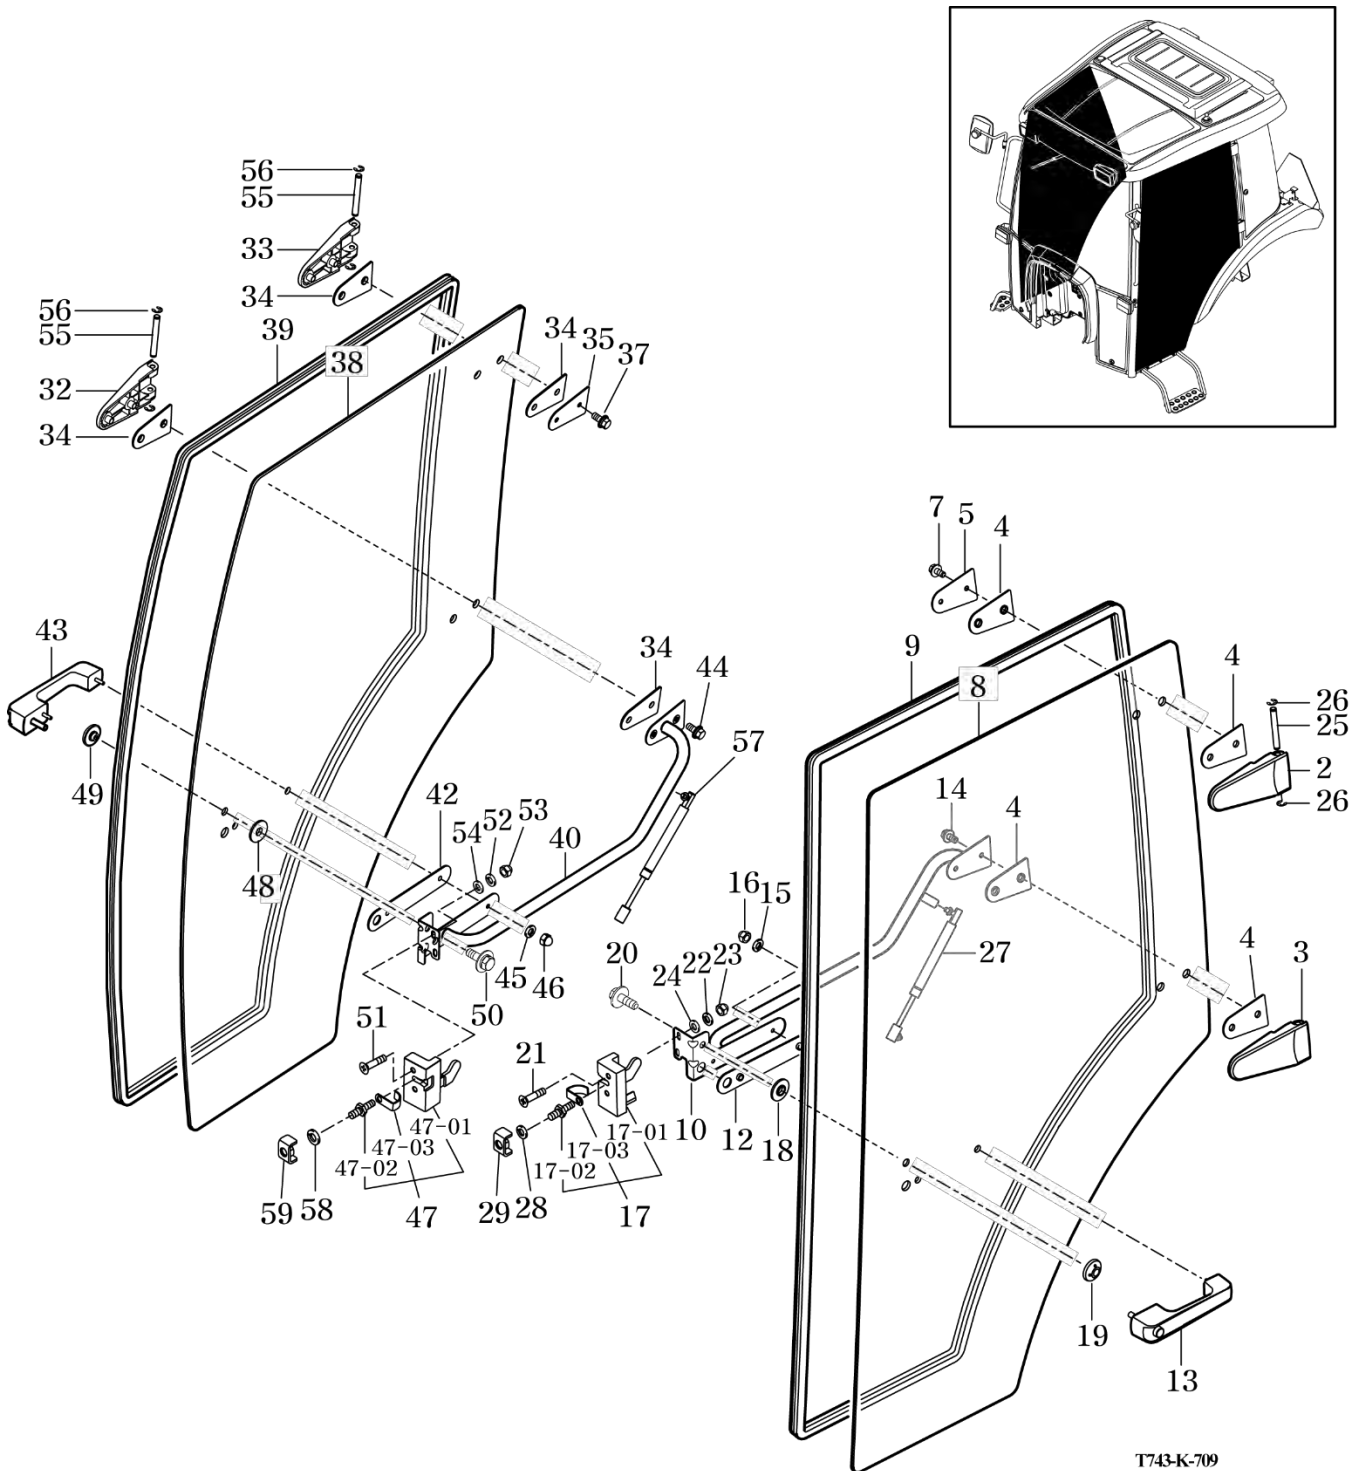 

NOTE


FIG 709

DOOR


P2

Year

 2016

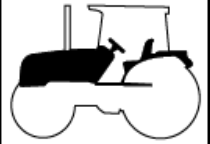

T754SC

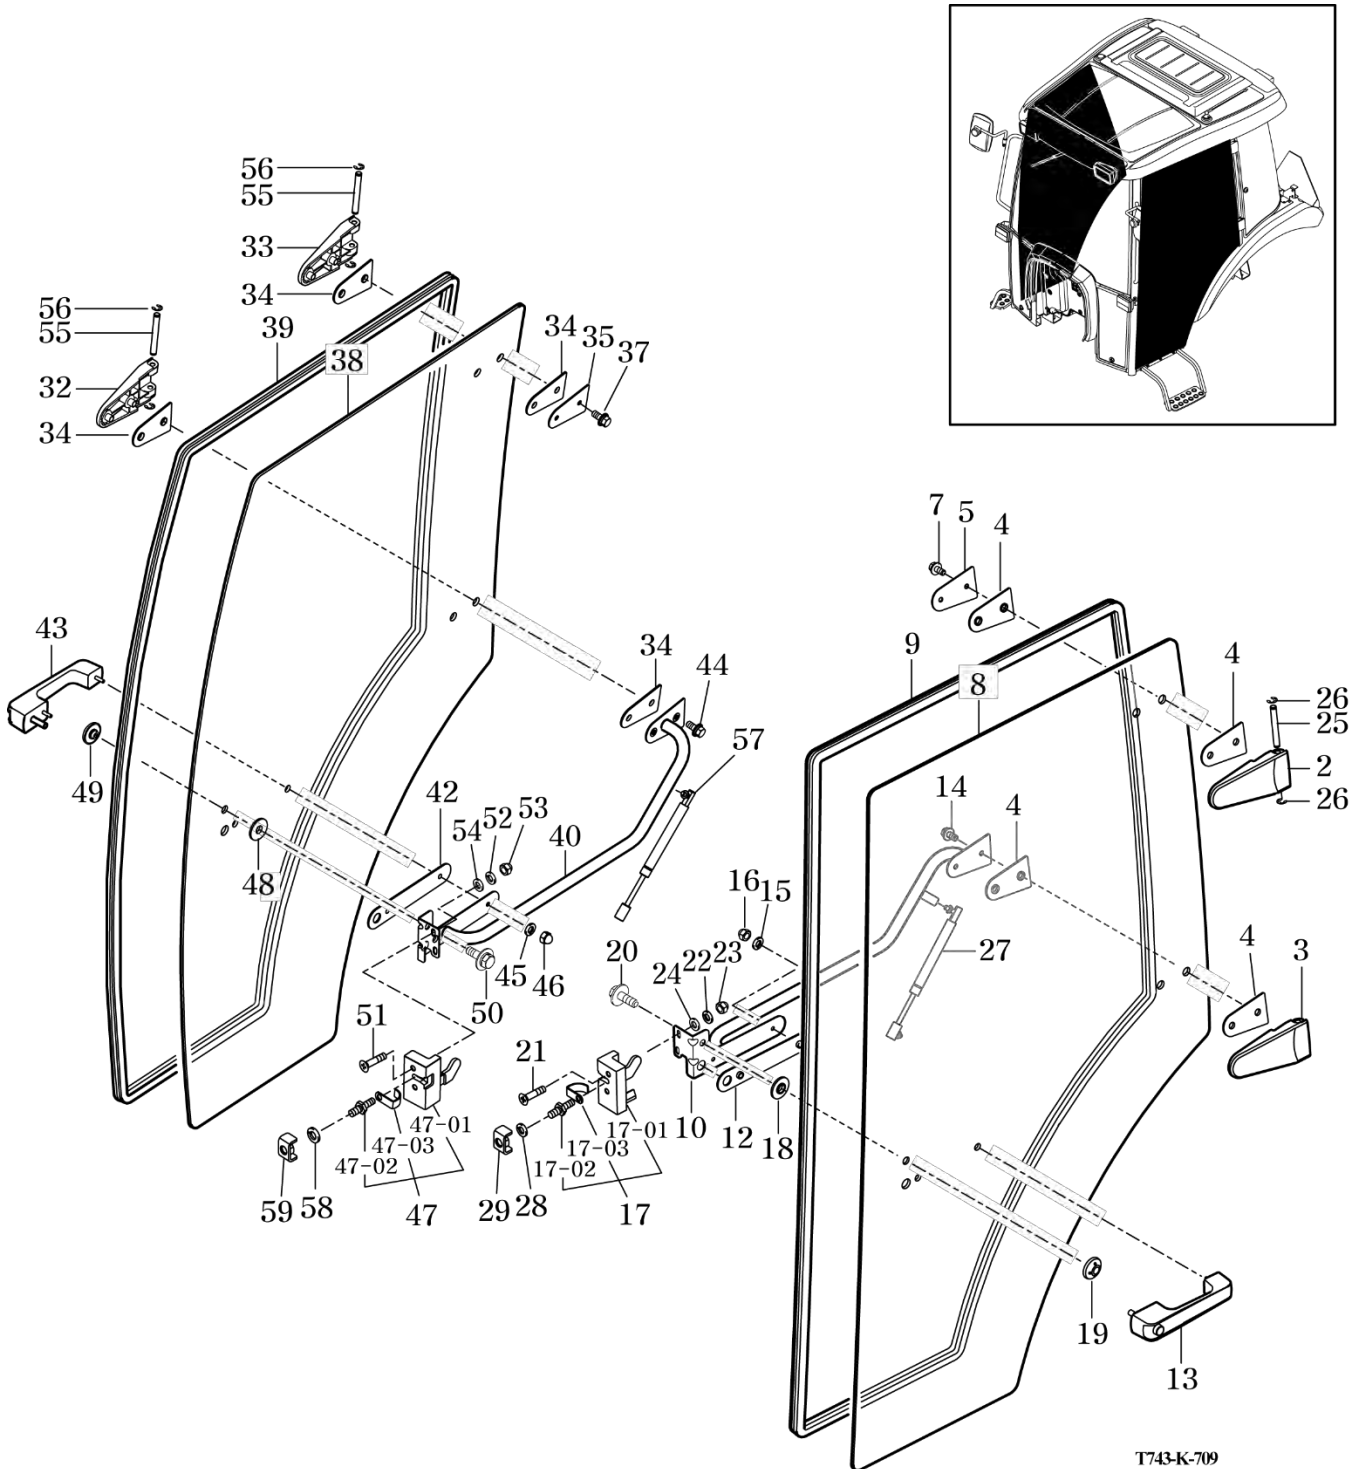 

NOTE




FIG 710

FRONT GLASS

P1

Year

   2016

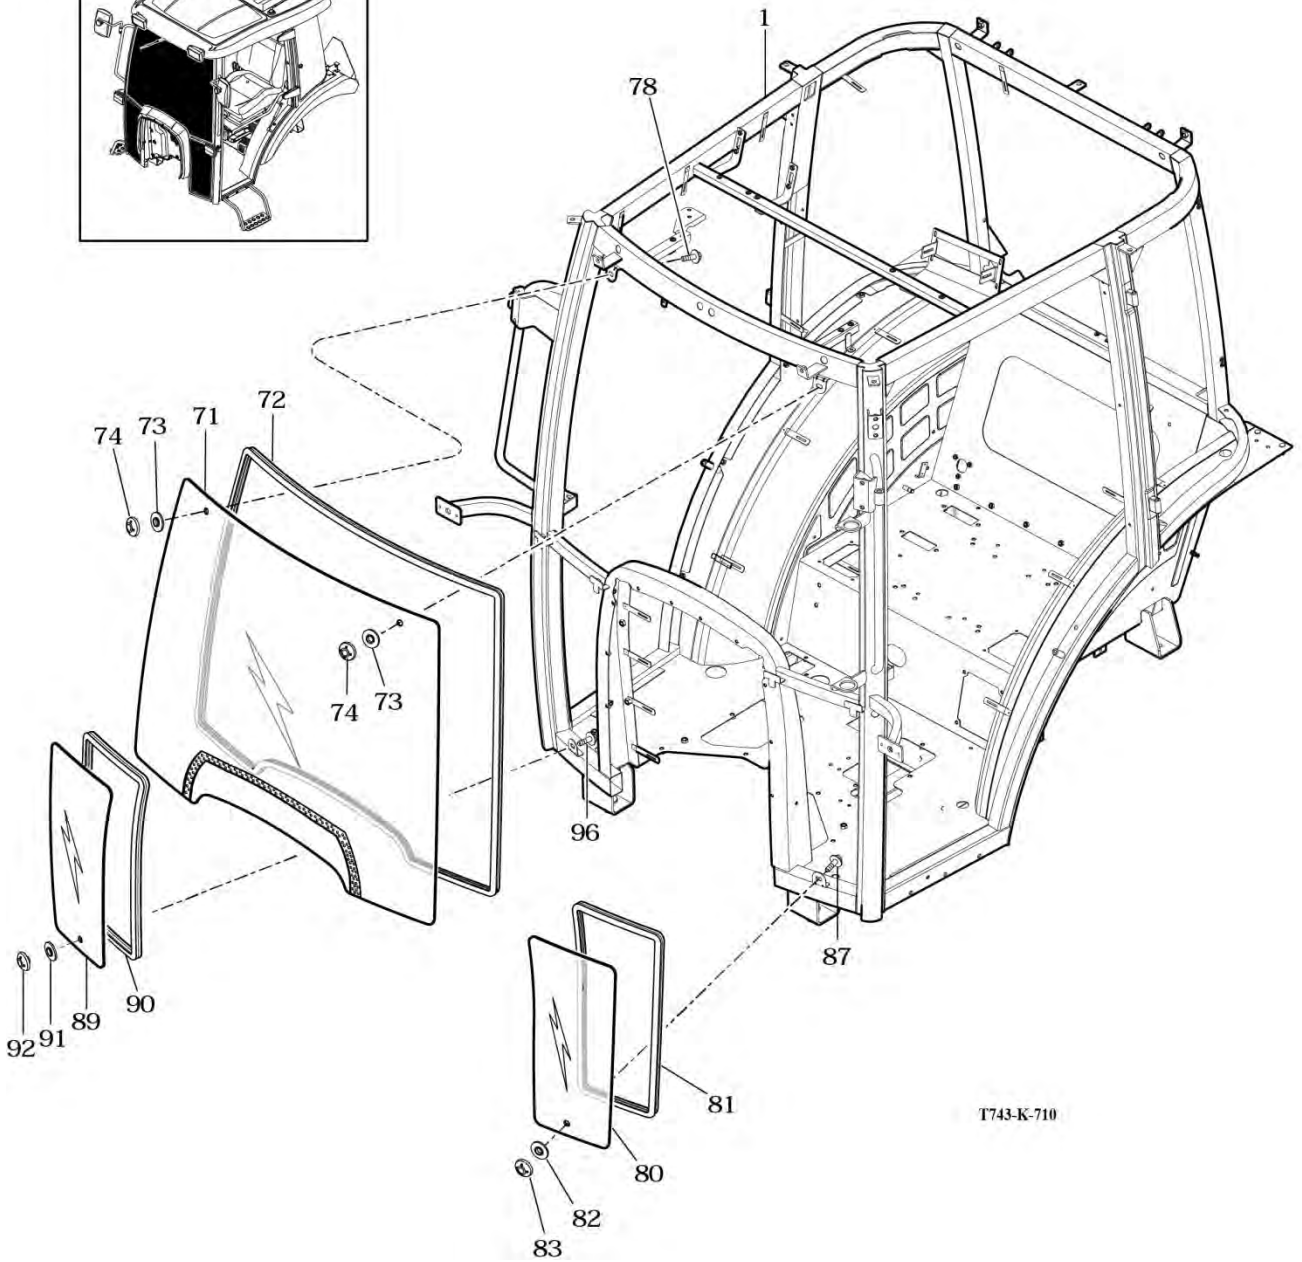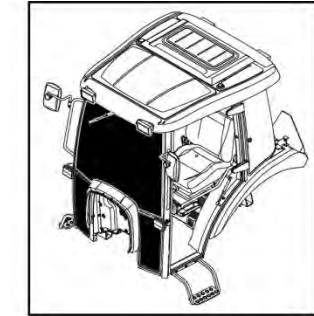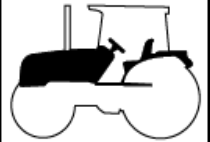

T743-K-710

NOTE


FIG 711

SIDE GLASS


P1

Year

 2016

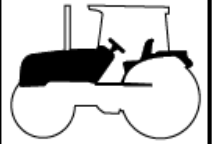

T754SC

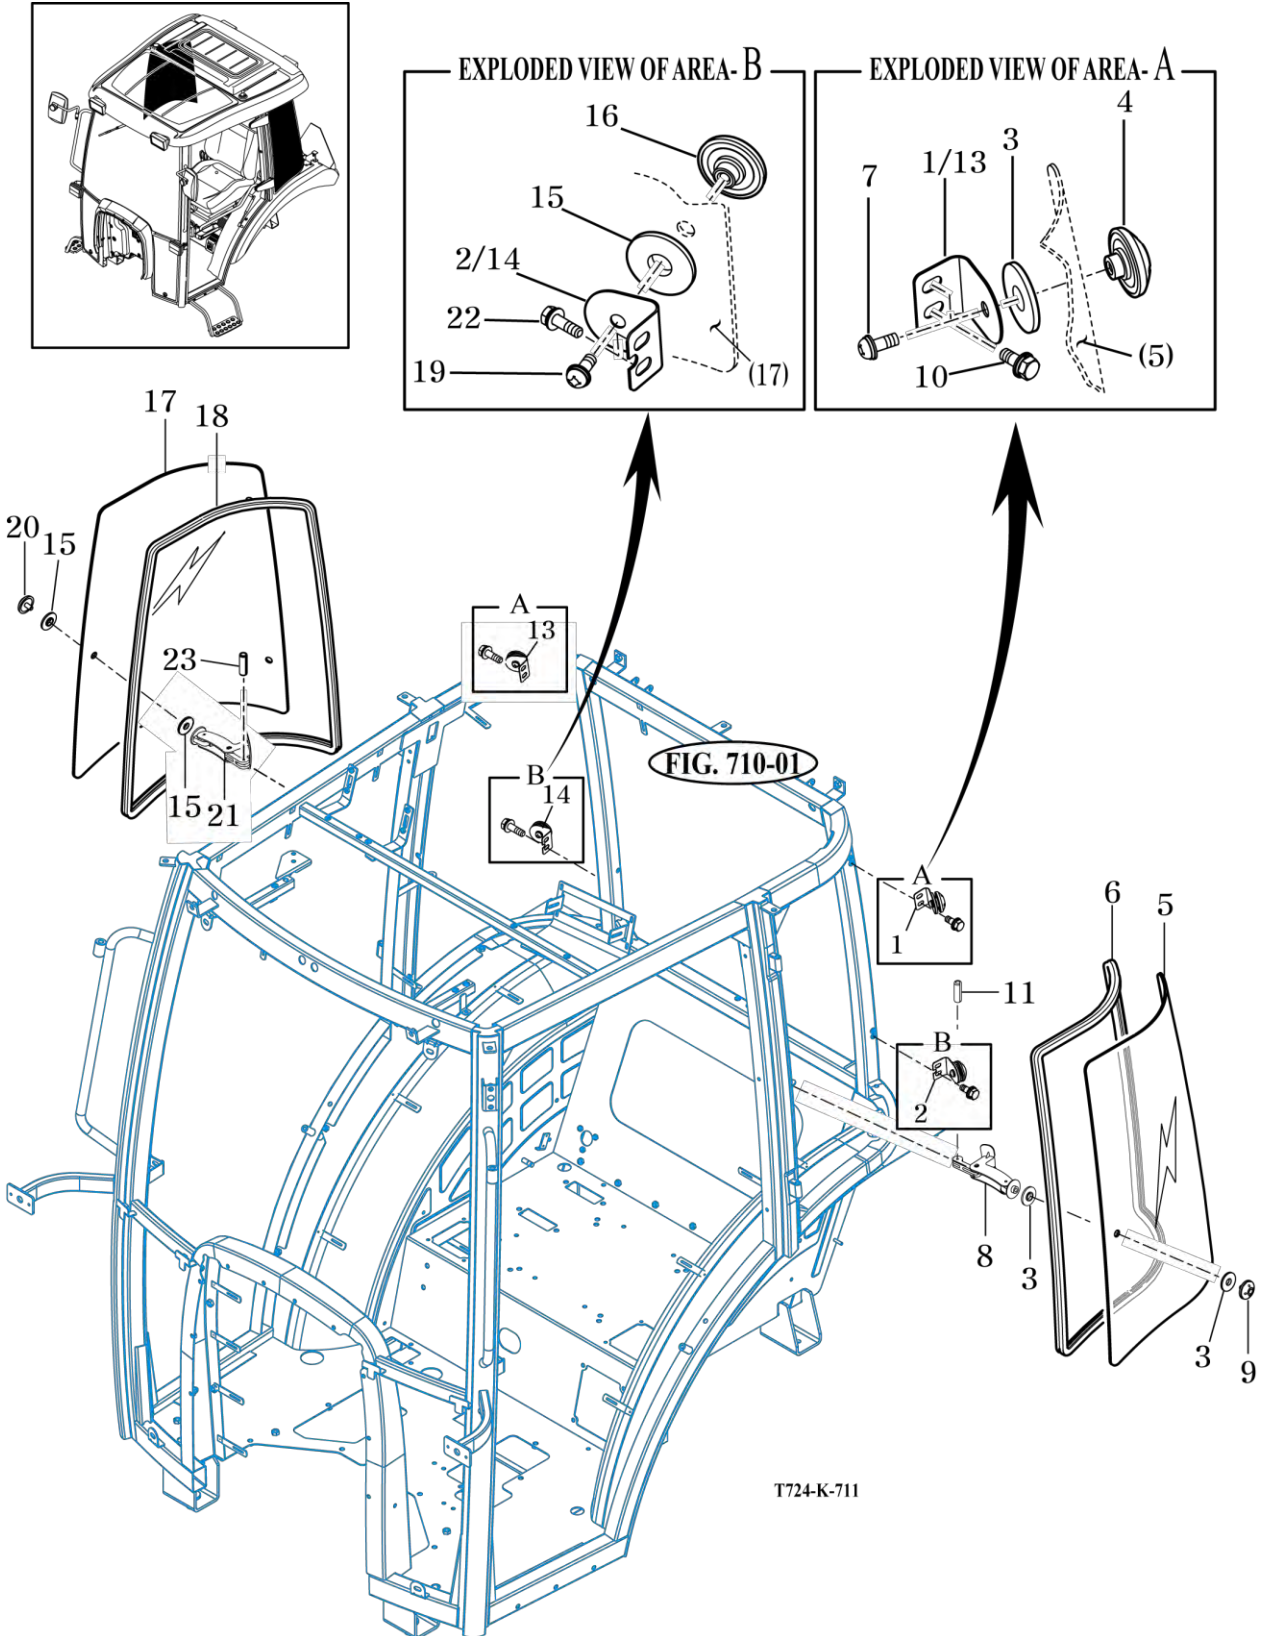 

NOTE


FIG 712

REAR GLASS



P1

Year

 2016

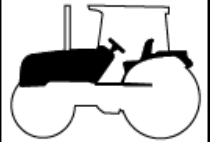

T754SC

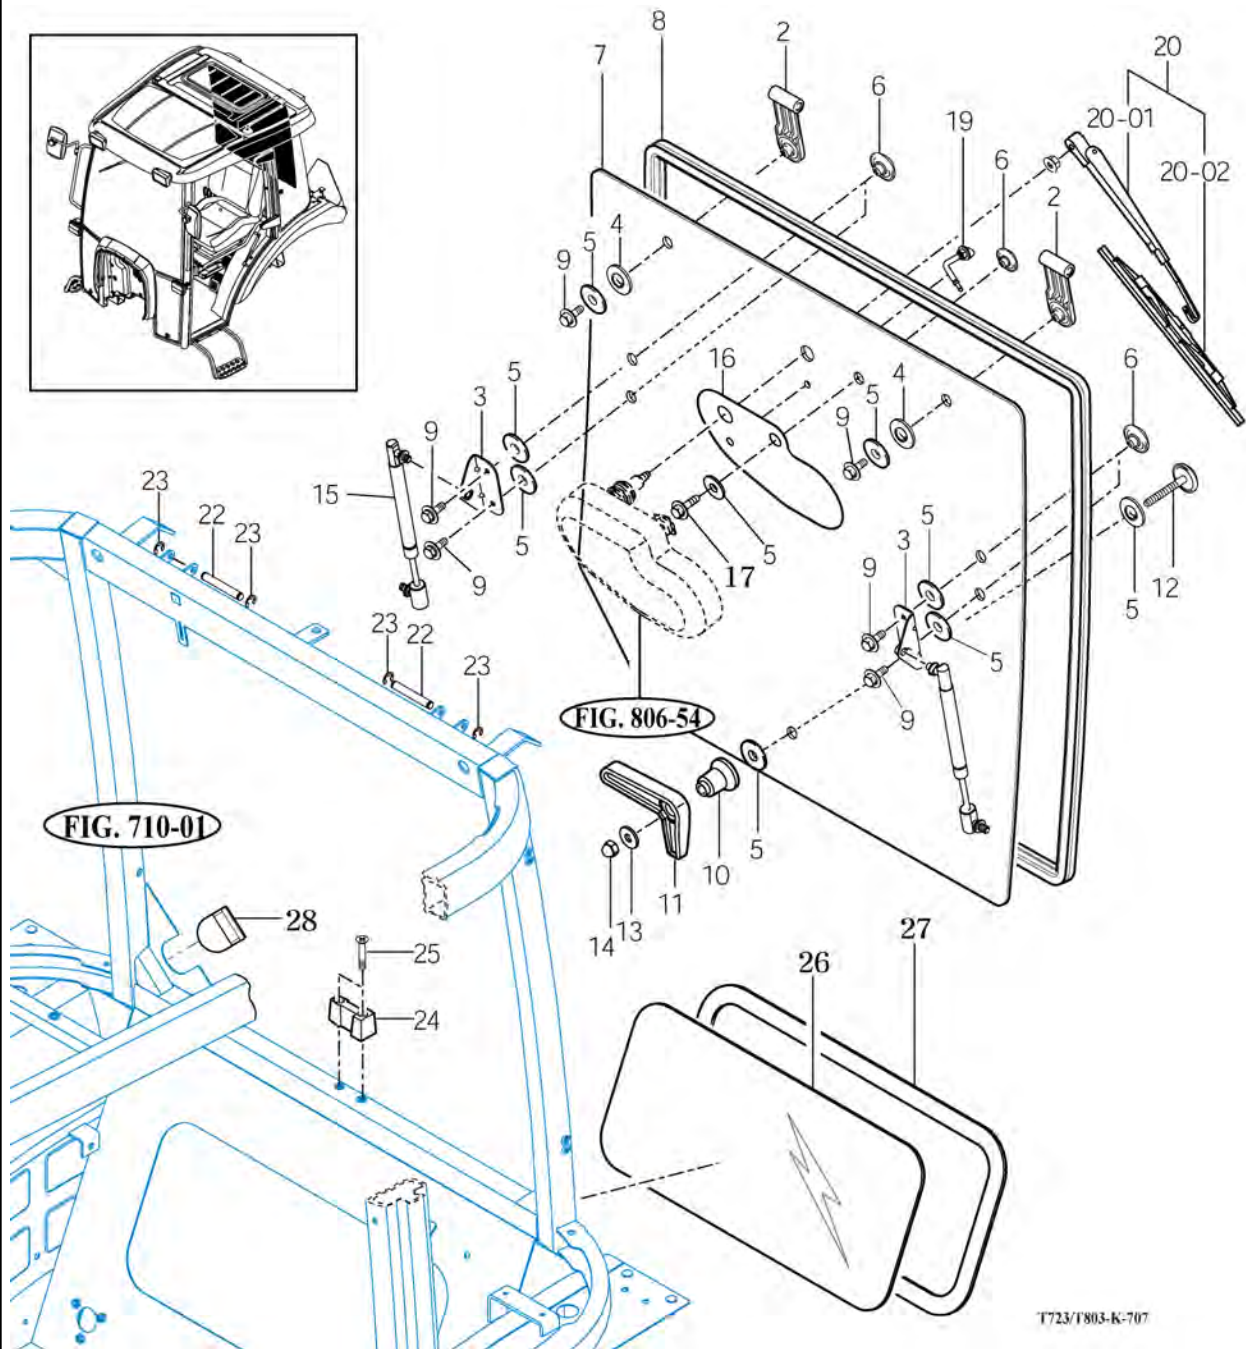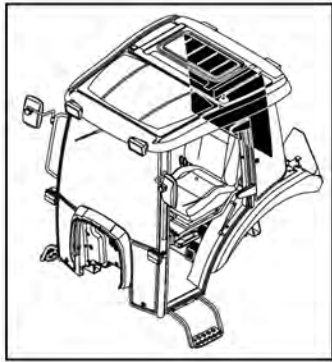  

T723/T803-K-707

NOTE


FIG 713

SUB FENDER & COVER


P1

Year

 2016

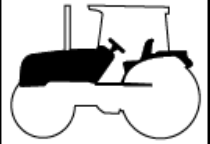

T754SC

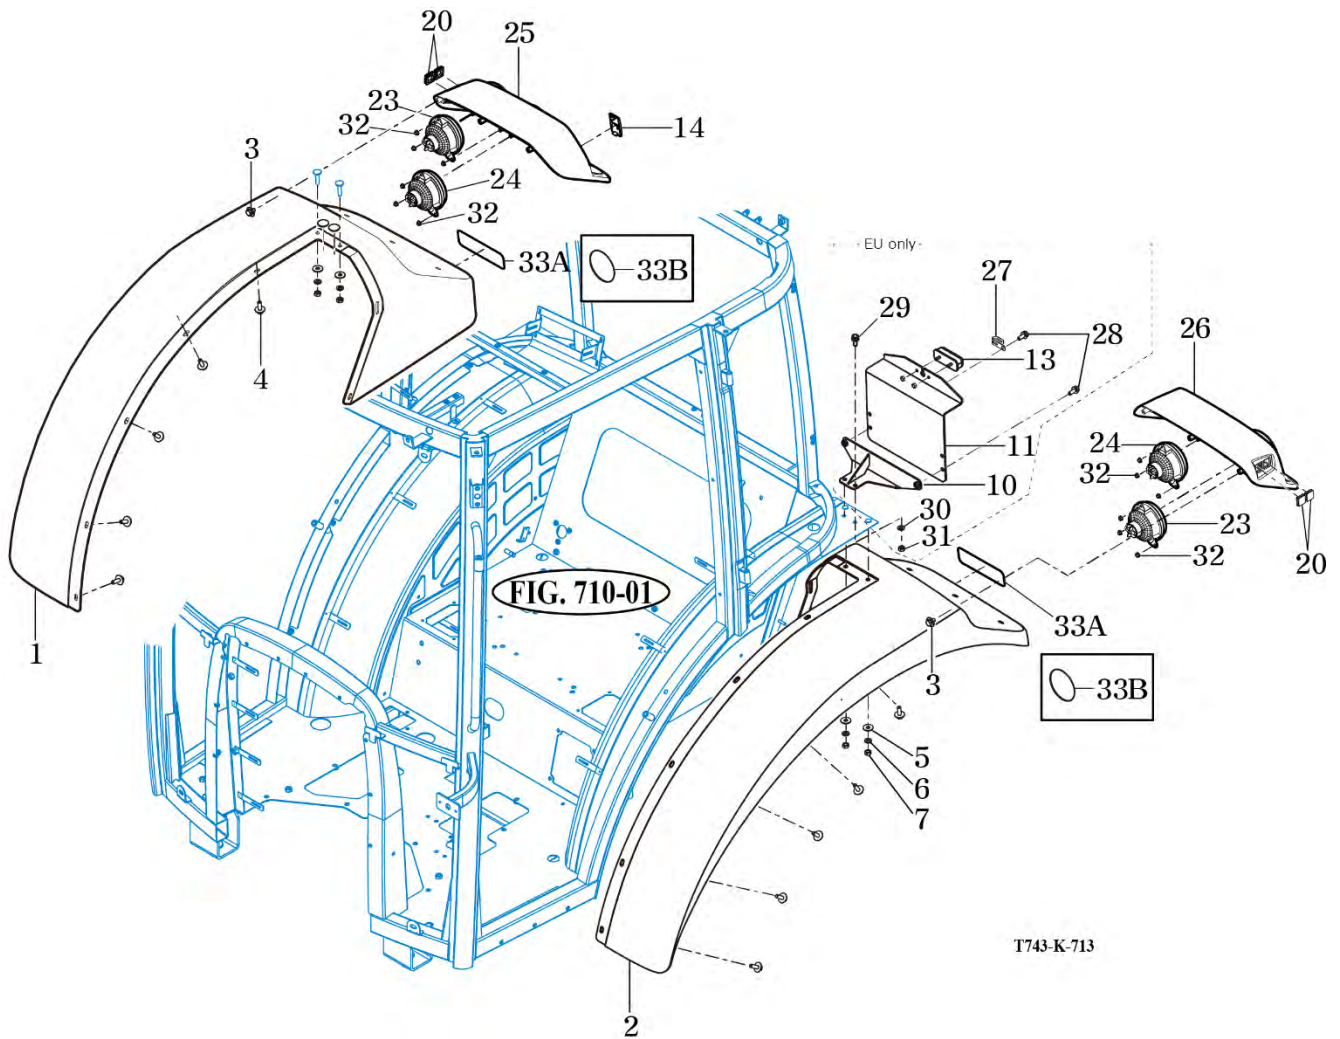 

T743-K-713

NOTE


FIG 714

MIRROR

P1

Year

 2016

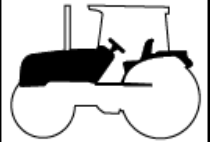

T754SC


 
 
 
 
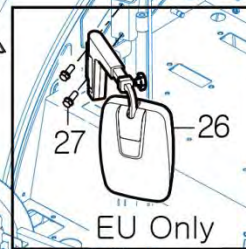 


FIG. 710-01

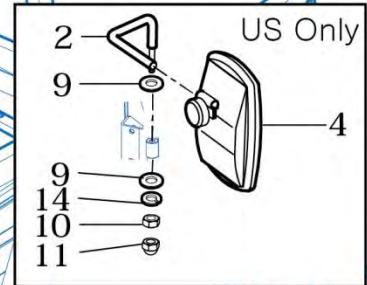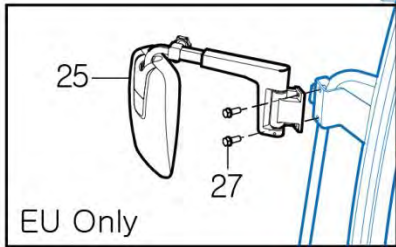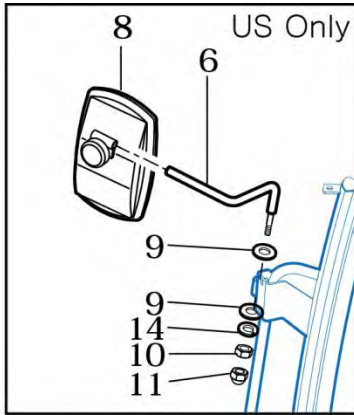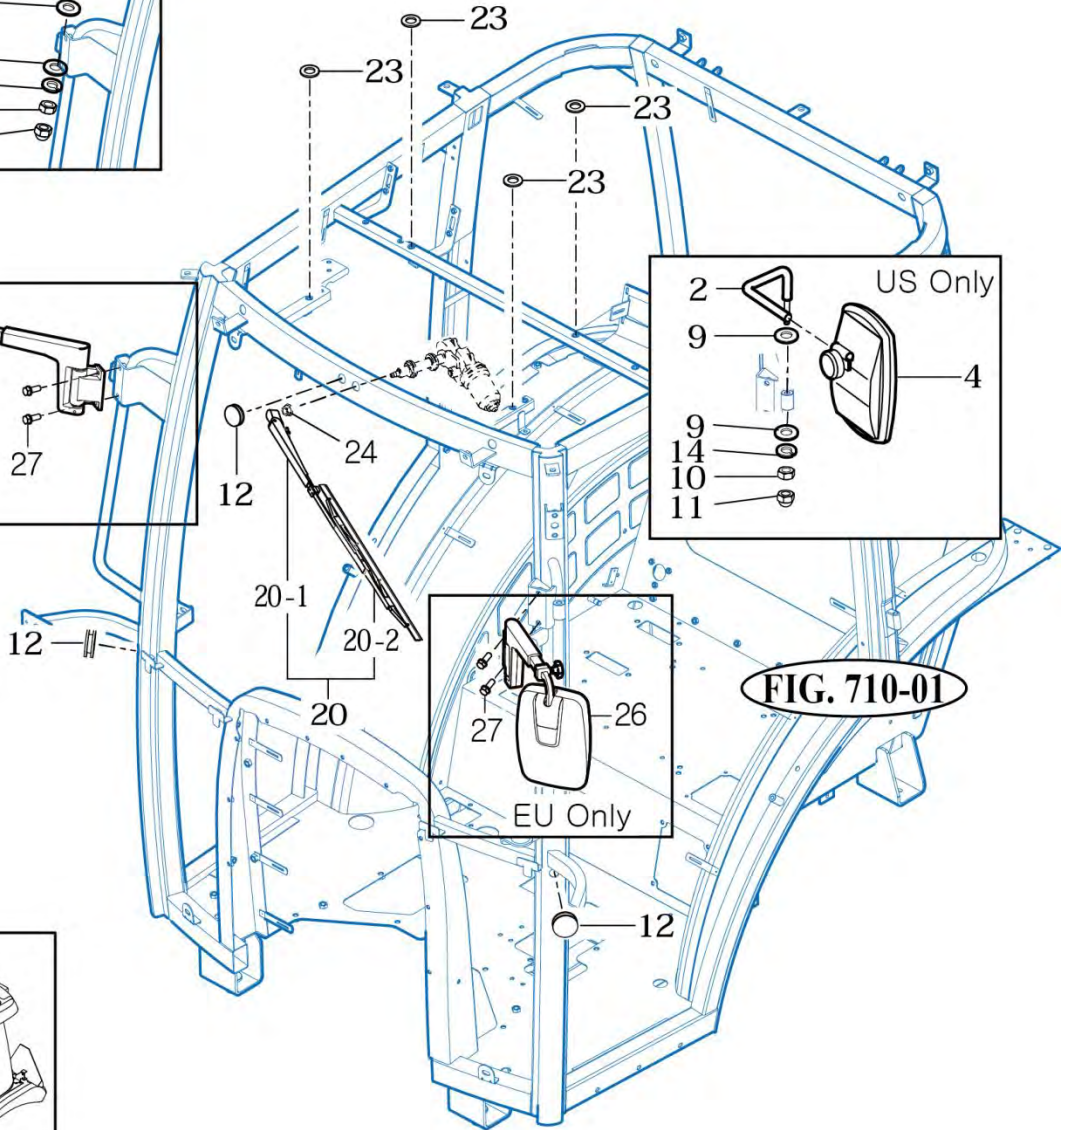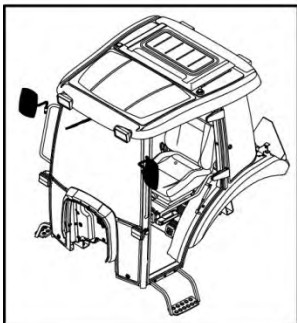 

NOTE

T743-K-714


FIG 715

HEATER & AIR-CON


P1

Year

 2016

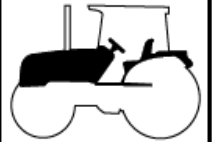

T754SC

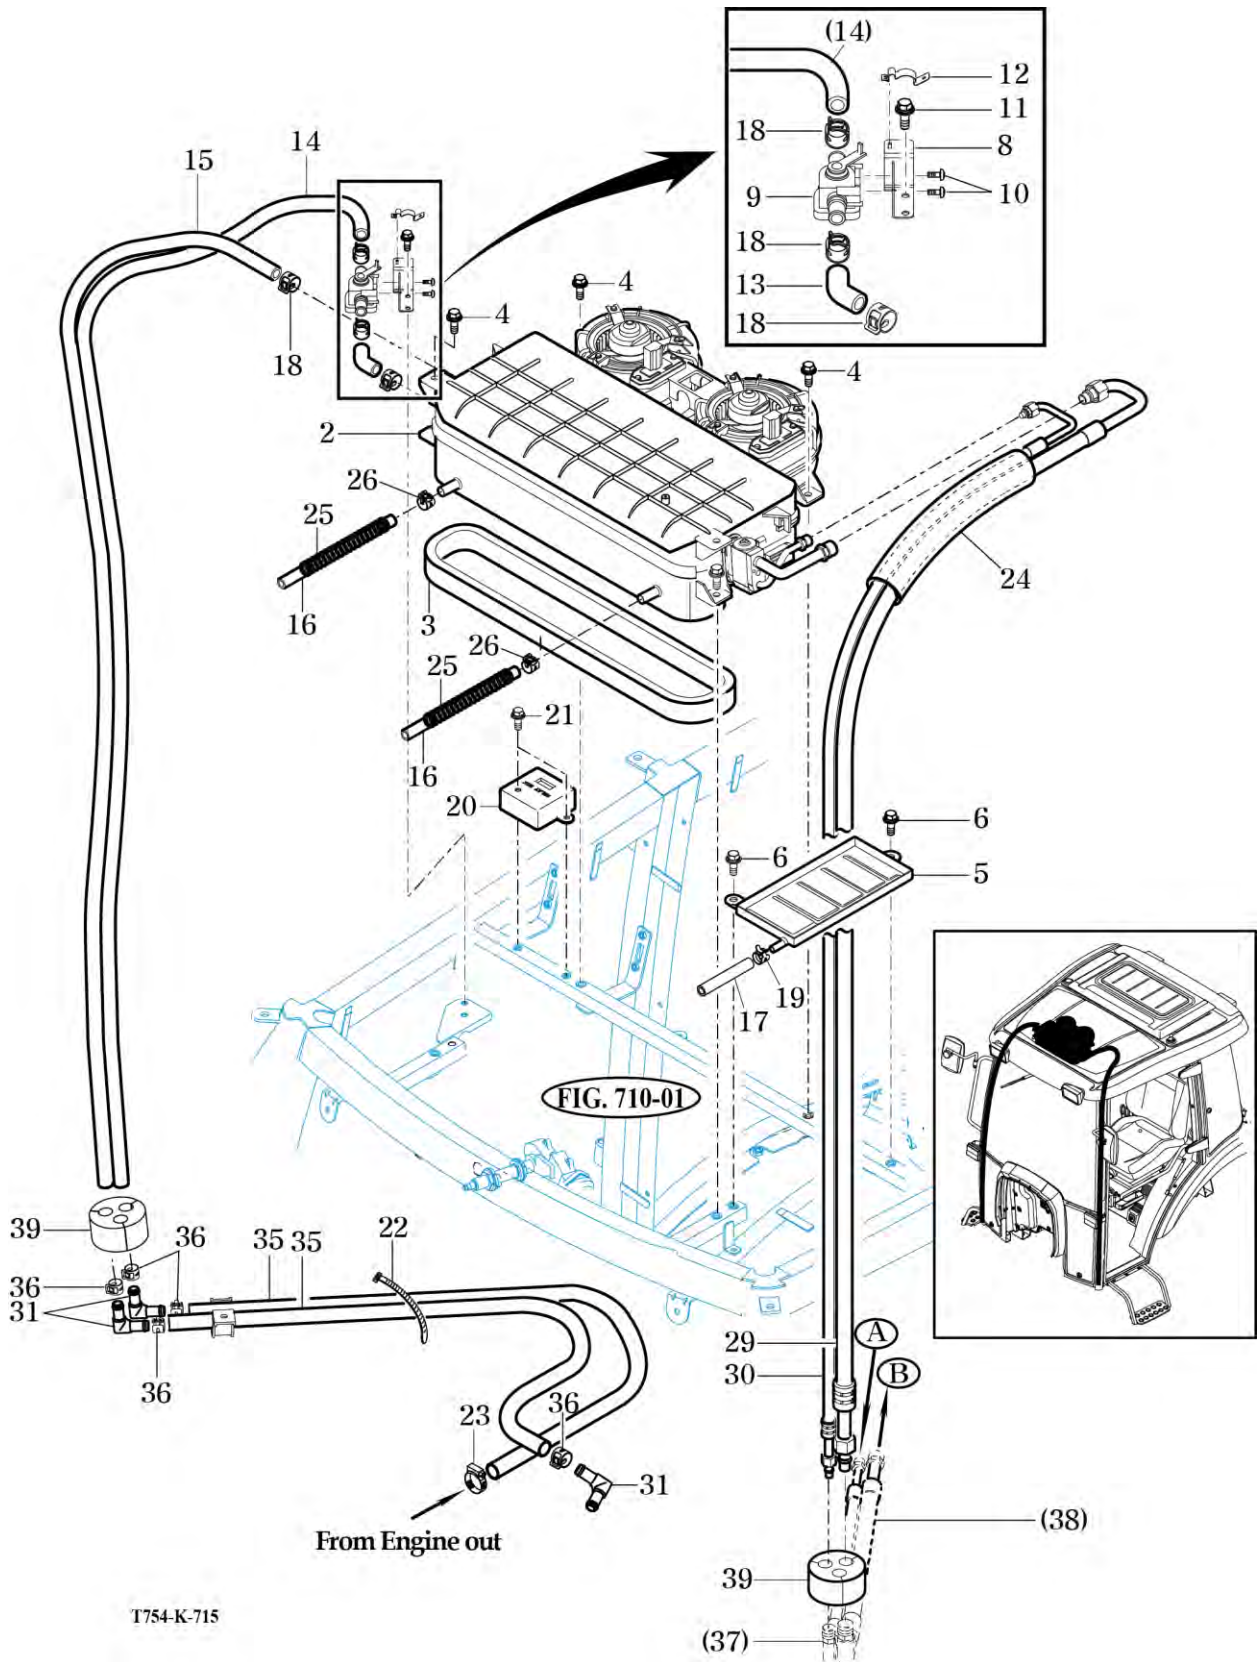 

T754-K-715

NOTE

FIG 715

 
 
T754SC

HEATER & AIR-CON

P2

Year

2016

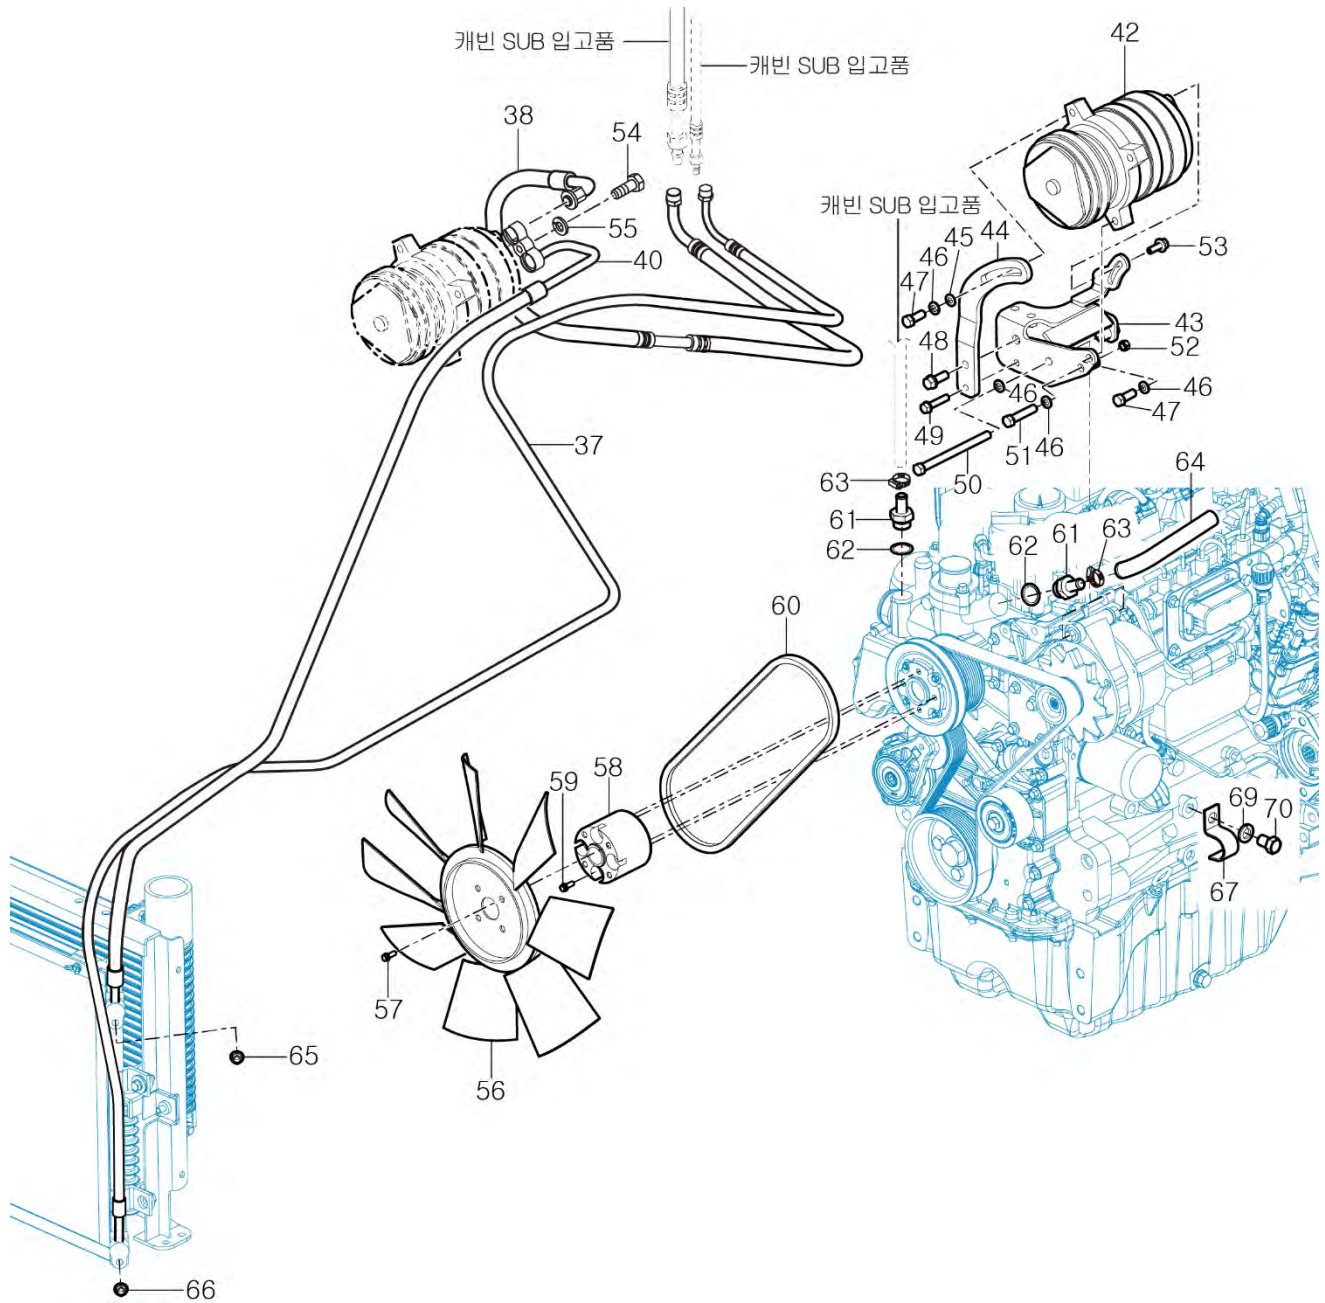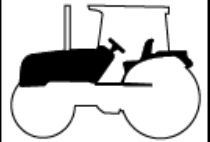

NOTE

FIG 716

 
 
T754SC

FENDER COVER

P1

Year

2016

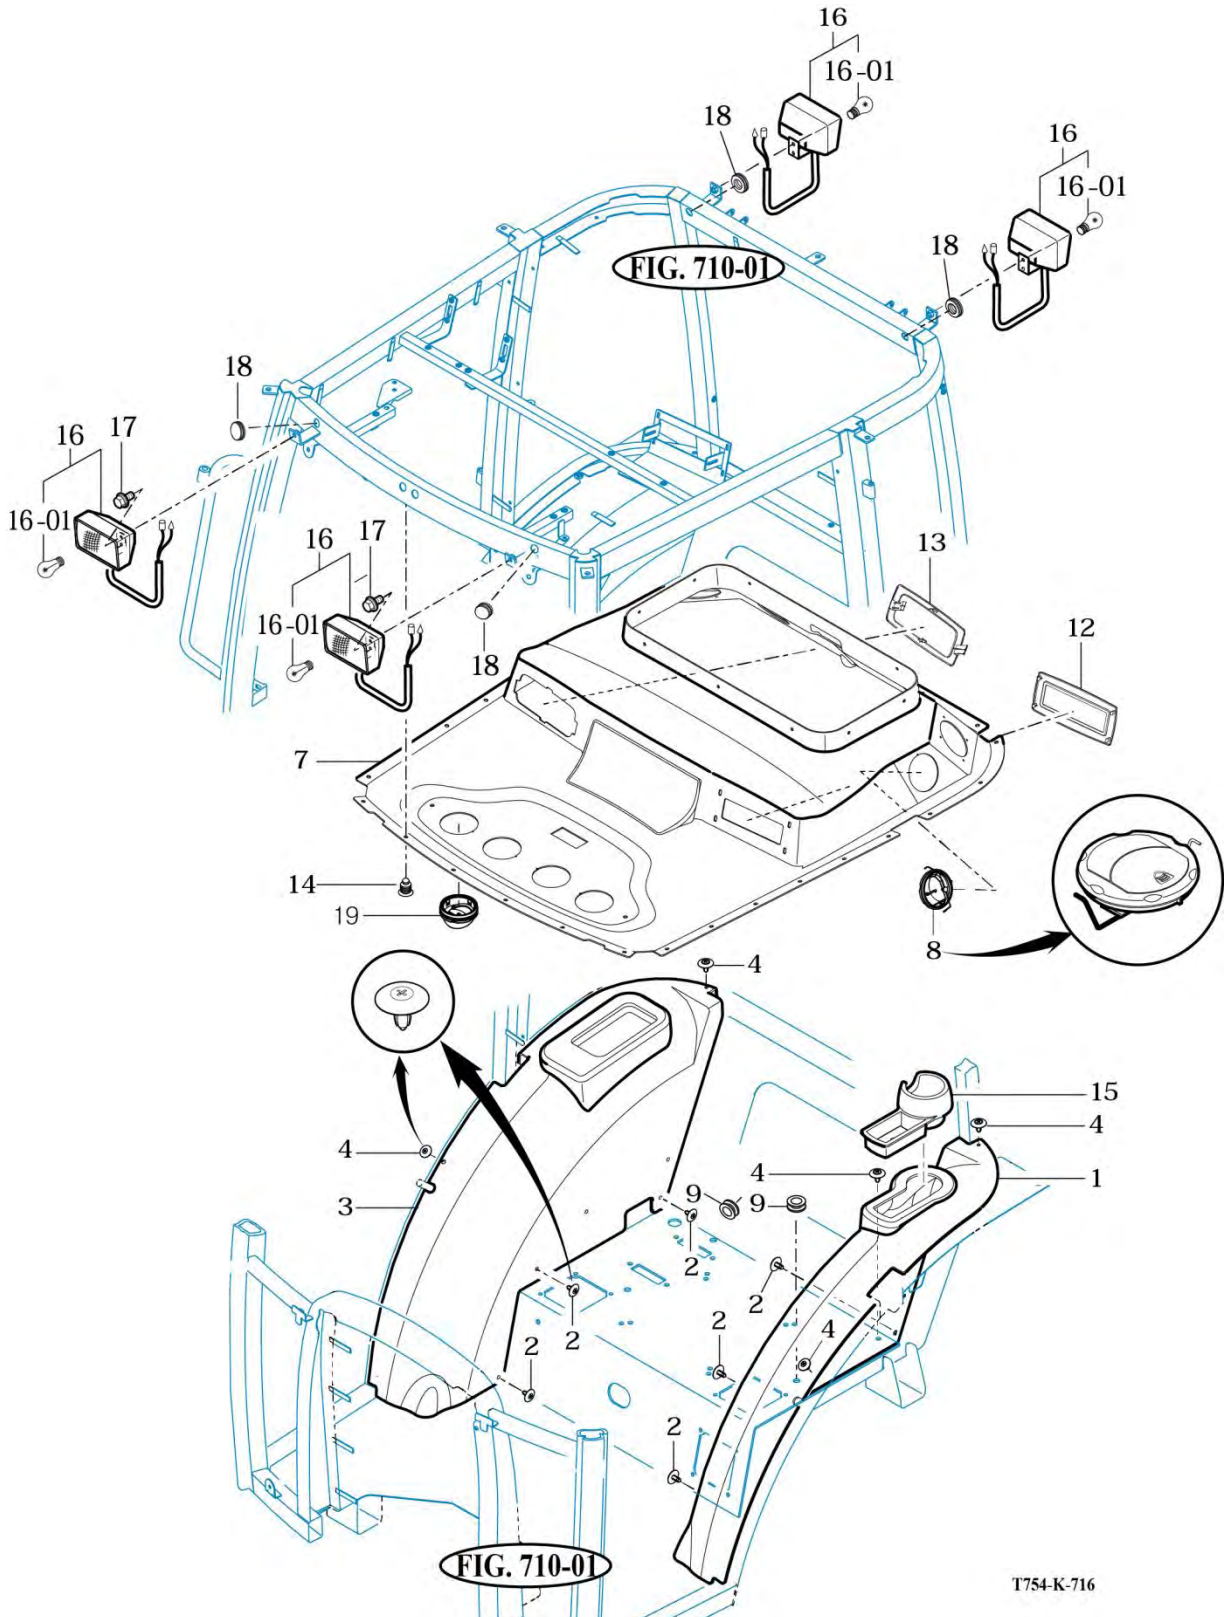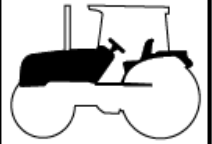

T754-K-716

NOTE


FIG 717

ROOF


P1

Year

 2016

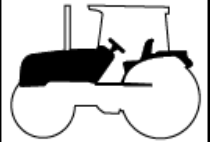

T754SC

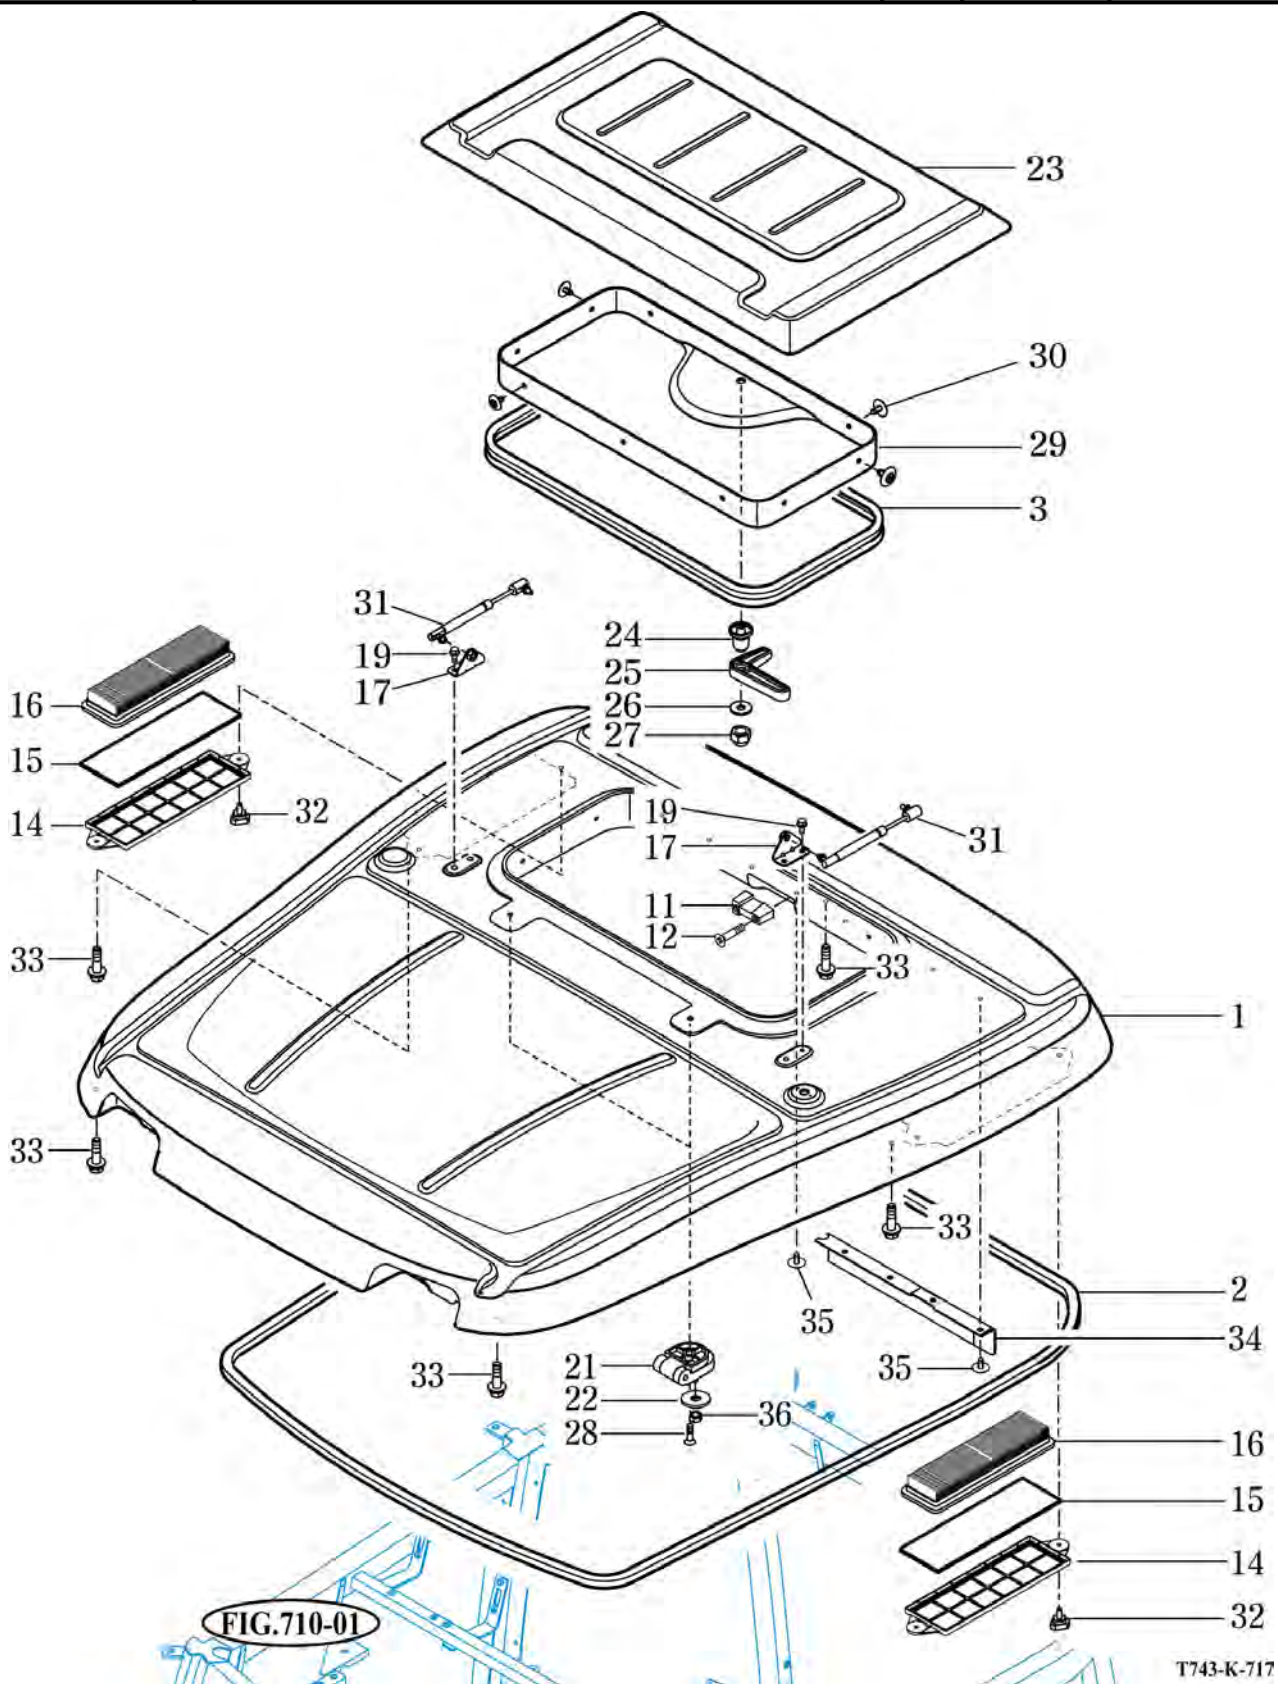 

T743-K-717

NOTE


FIG 718

CABIN INTERIOR


P1

Year

 2016

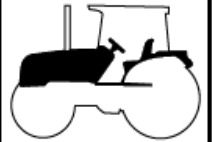

T754SC

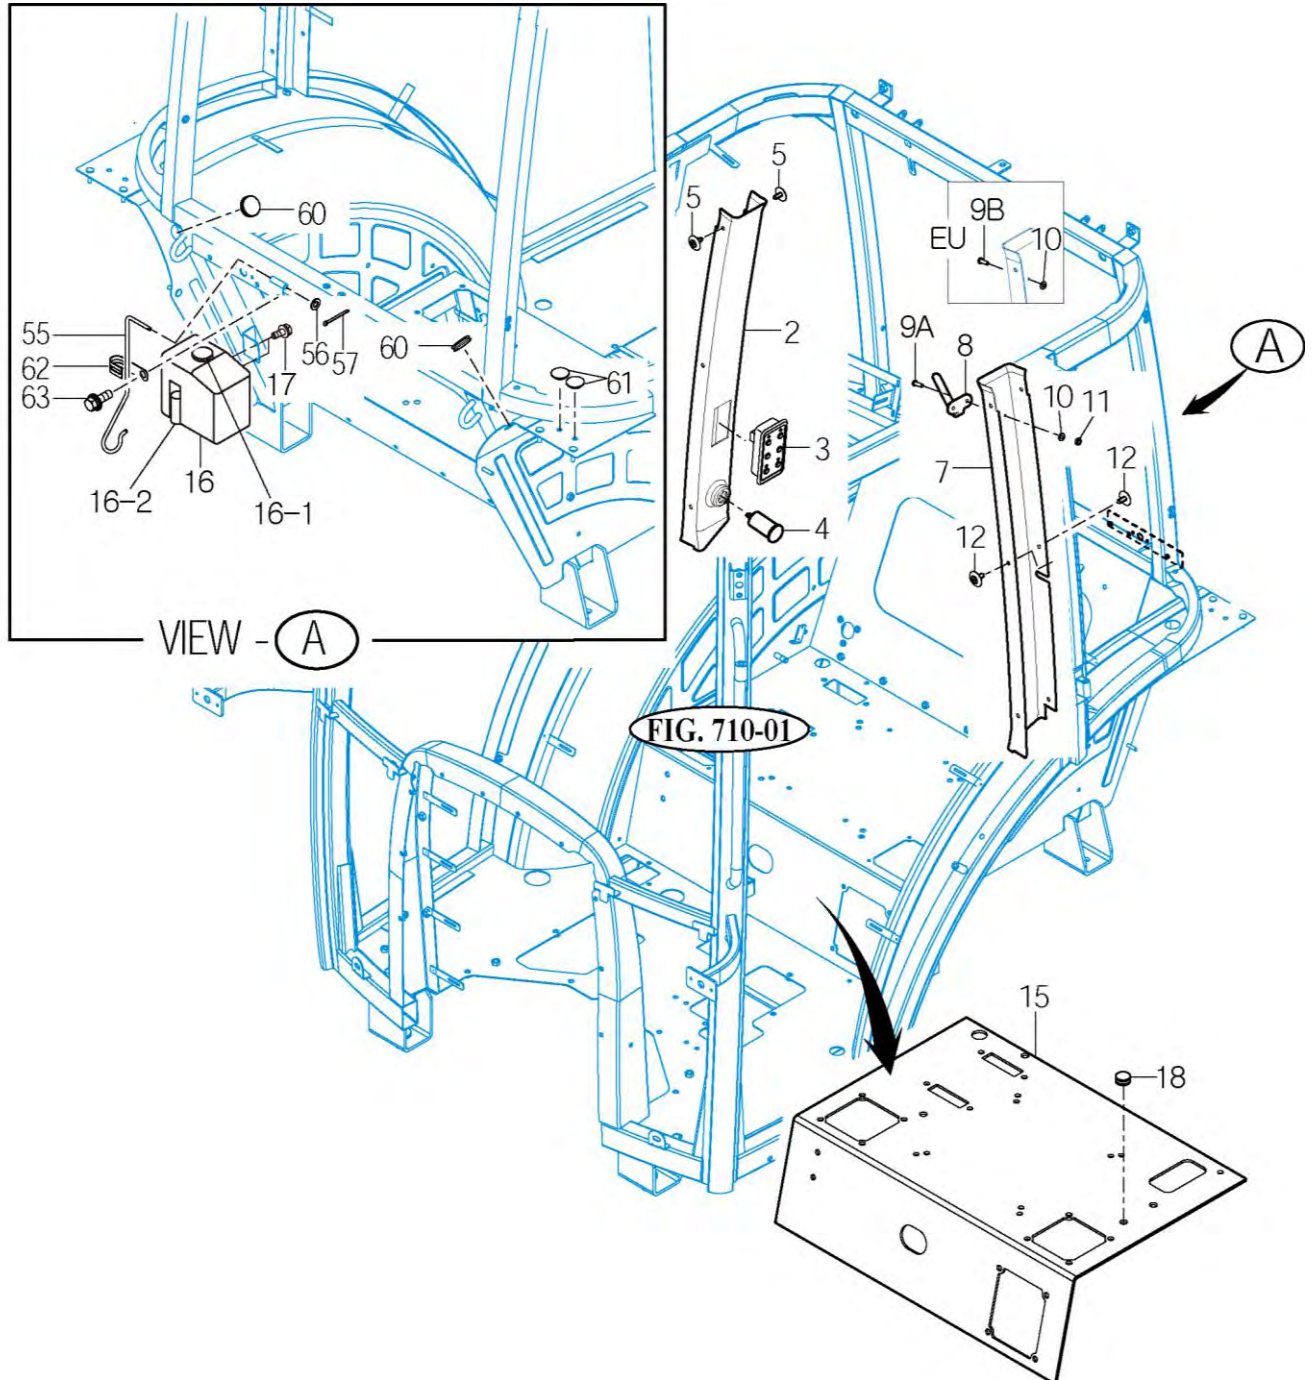 

T724-K-718

NOTE


FIG 801

BATTERY & MOUNTING


P1

Year

 2016

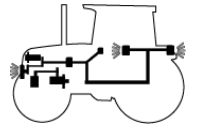

T754SC

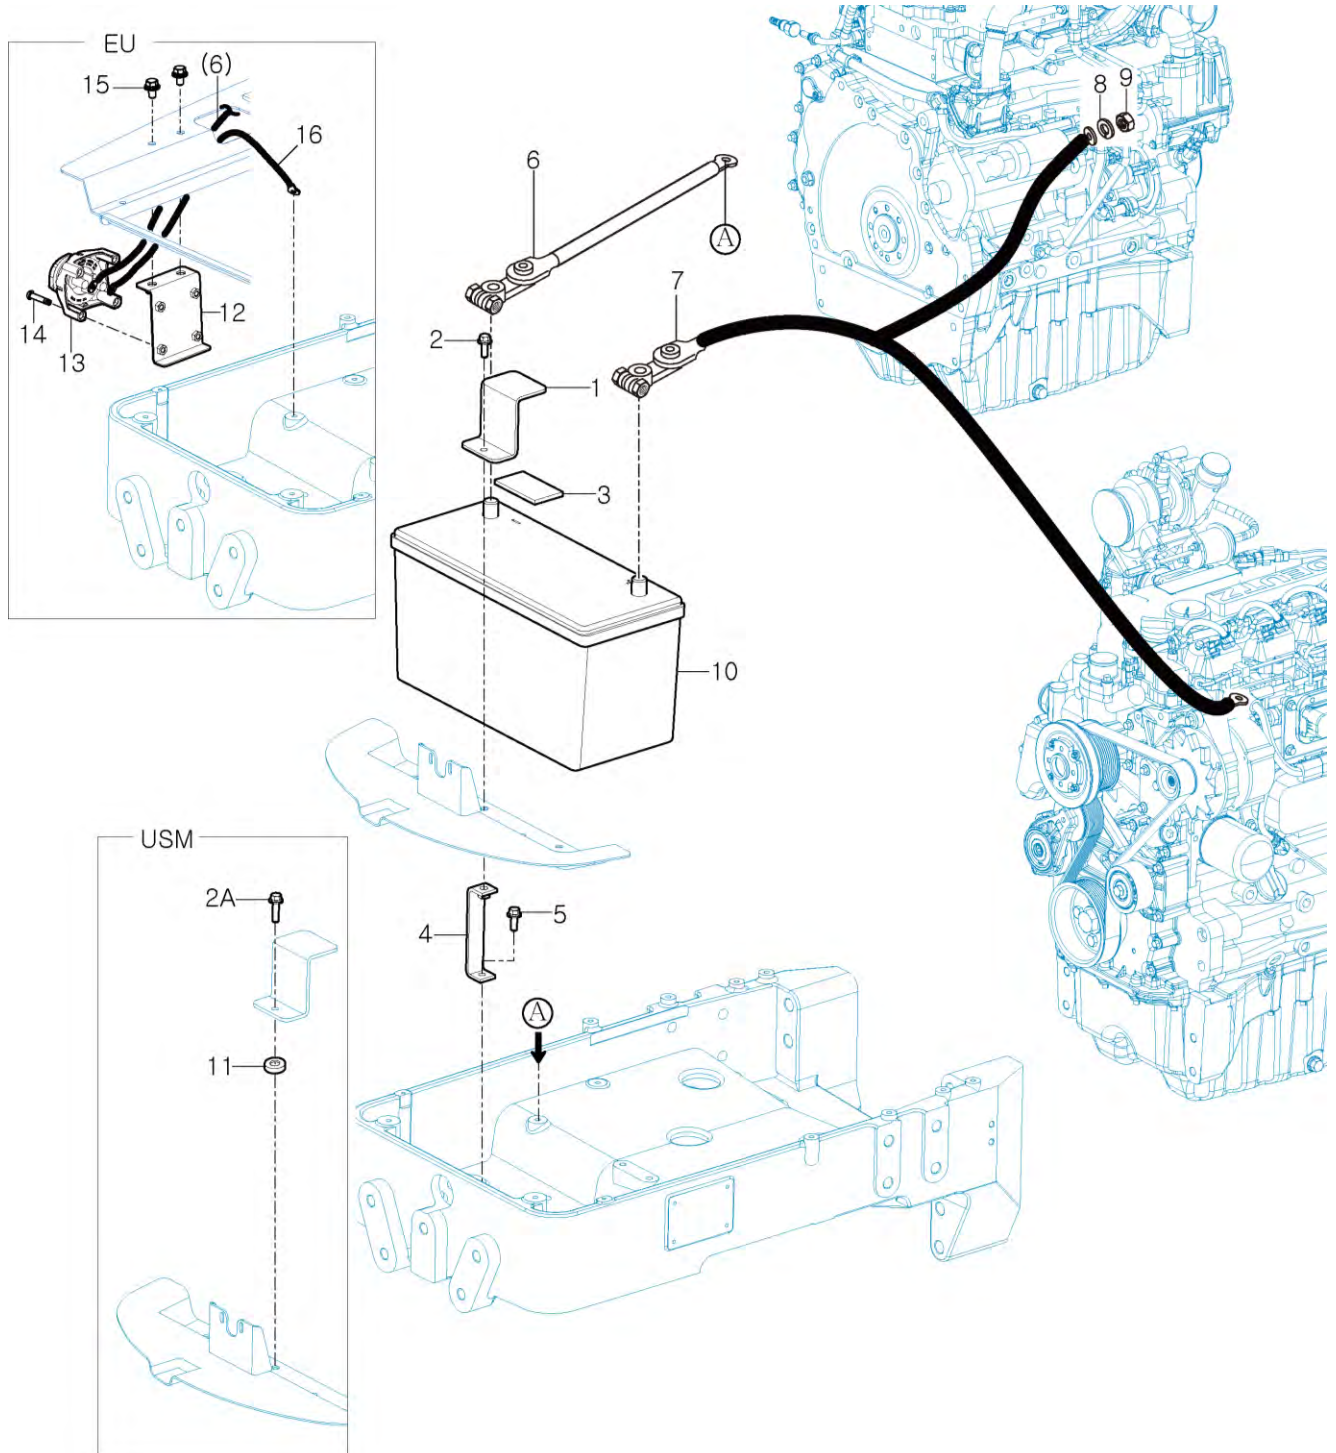 

NOTE


FIG 802

HARNESS


P1

Year

 2016

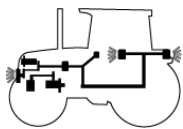

T754SC

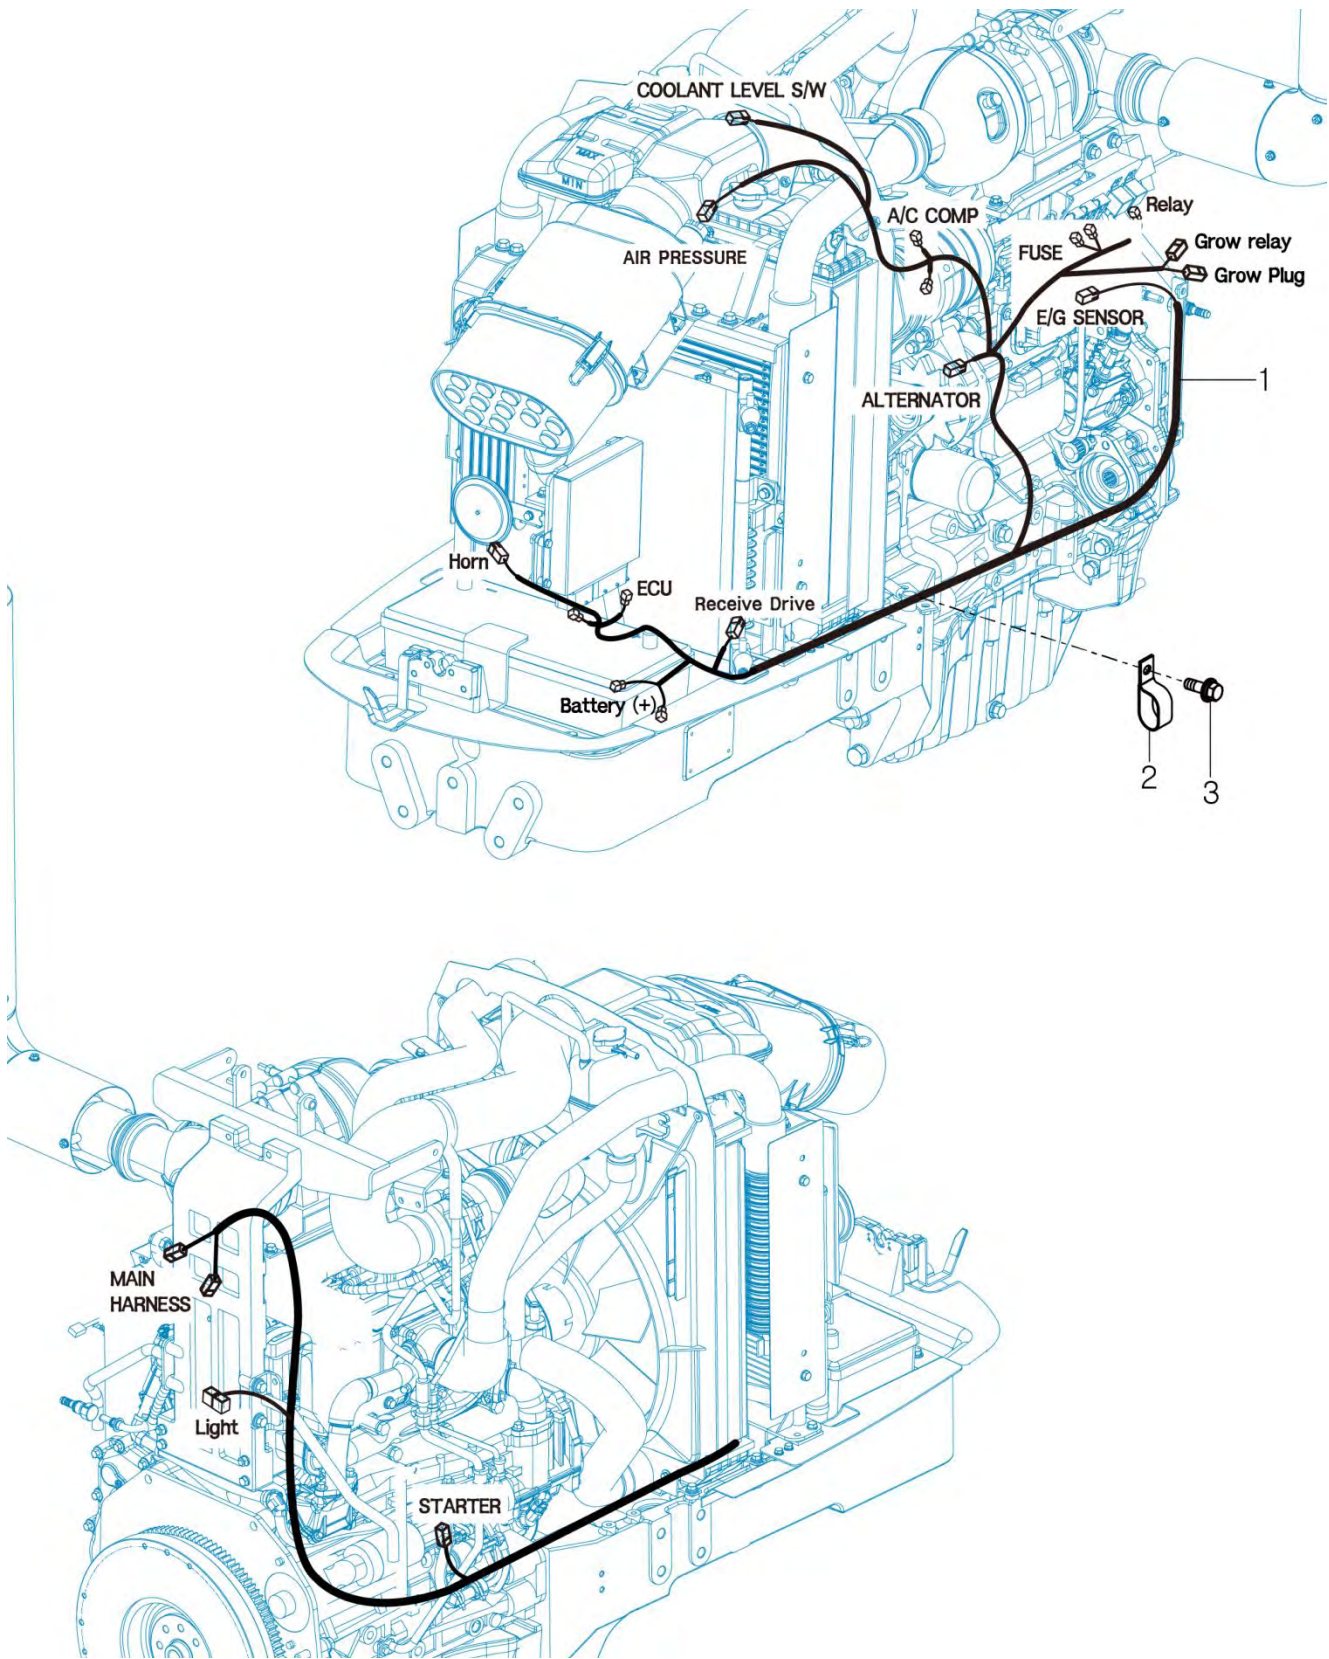 

NOTE


FIG 803

LIGHT & BACK LAMP


P1

Year

 2016

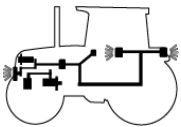

T754SC

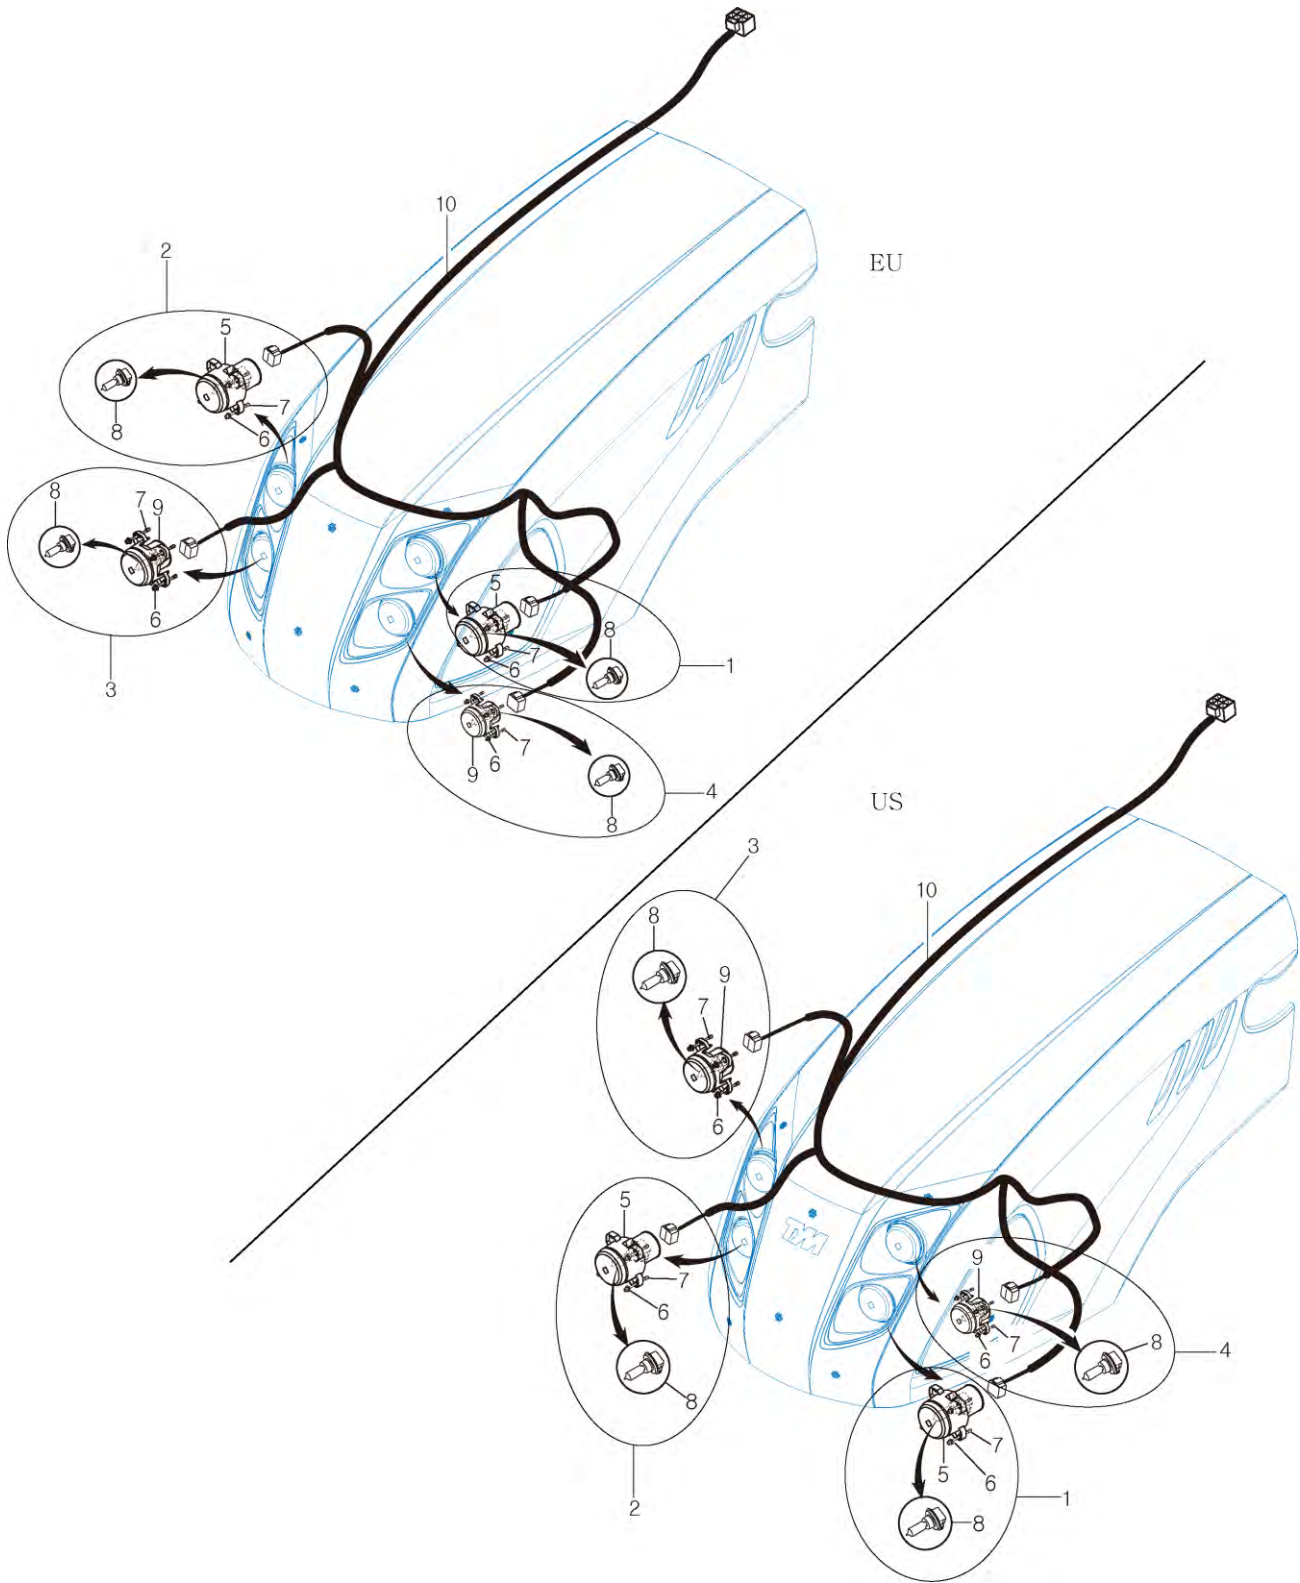 

NOTE


FIG 804

INSTRUMENT PANEL


P1

Year

 2016

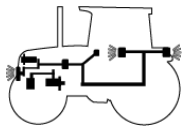

T754SC

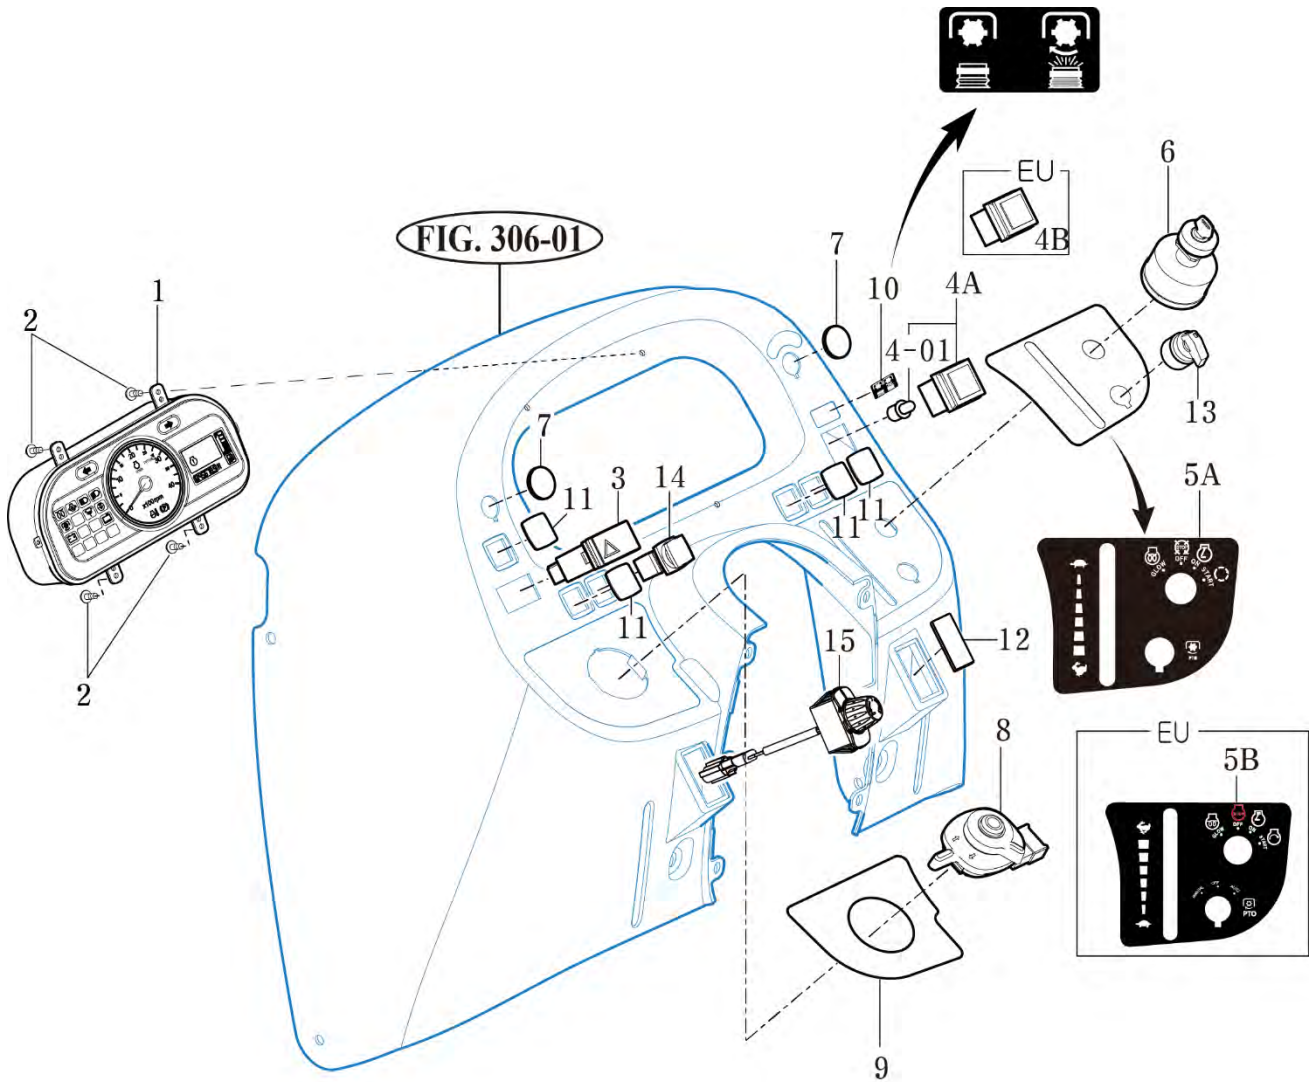 

T754-K-804

NOTE


FIG 805

ELECTRIC SYSTEM (1)


P1

Year

 2016

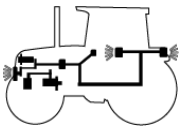


T754SC

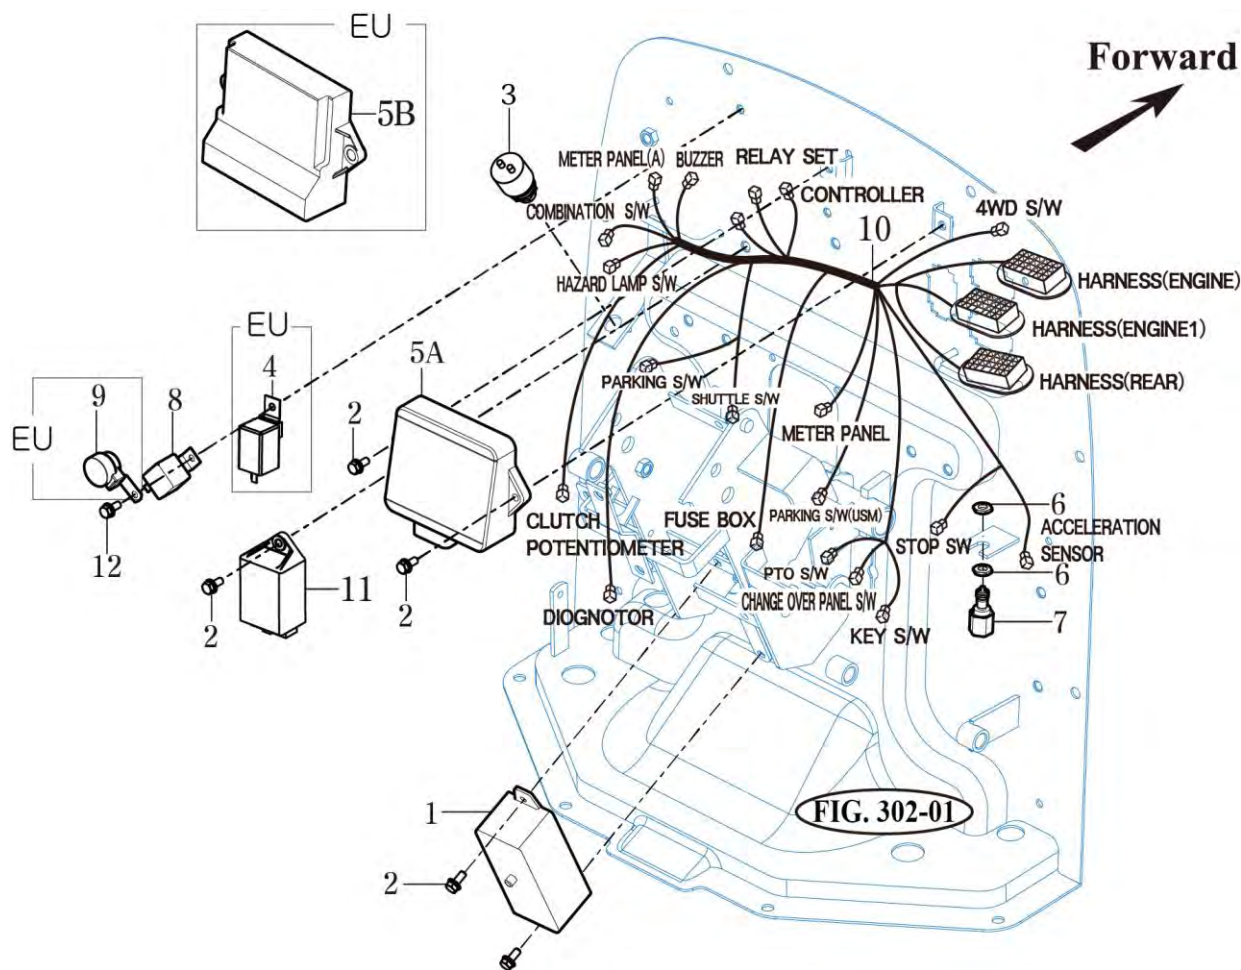 

T754SC-K-805

 NOTE

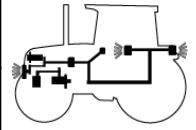

T754SC-K-805


FIG 901

TOOL & ACCESSORY


P1

Year

 2016

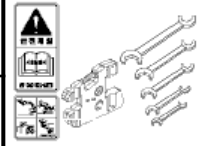

T754SC

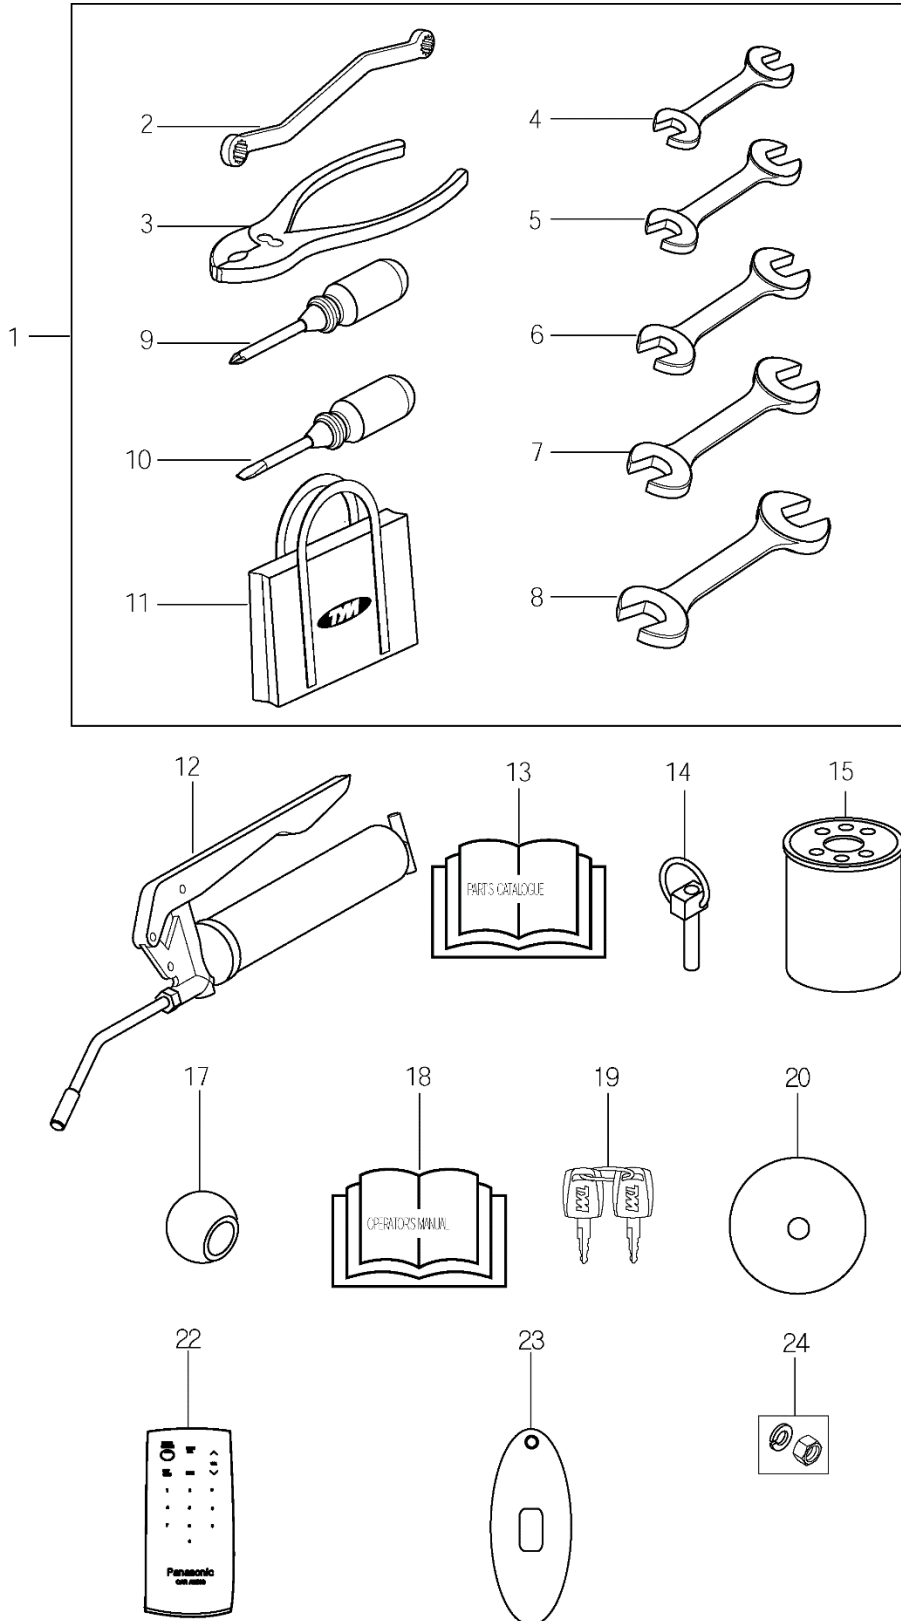 

T754-E-901

NOTE


FIG 903

LABEL

P1

Year

 2016

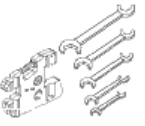

T754SC

Inner/Outer air Ventilation

- When grills of rear and both sides are opened, inner air will ventilate in.
- For effective use, open it when operate heater or air conditioner and close when ventilate fresh air.

1220-904-122-1

18

25

Power Shuttle

34

T754

51

⚠ DANGER

Do not ride except operator.

1220-910-016-0

6

⚠ CAUTION

Do not touch while the system is hot. It cause serious burns.

1220-910-024-0

33

T754

MODEL	
TYPE	
ENGINE	
SERIAL NO.	
MANUFACTURER: TONG YANG MOOLSAN CO.,LTD	
ADDRESS : 320WONG-100KONGWANG-100KONGWANG	
TEL : 82-2-3014-2000	

32B

TONGYANGMOOLSAN CO.,LTD.

VIN Number

EU Type-Approval Number

Category

A-1	kg	A-2	kg
B-1	kg	kg	kg
B-2	kg	kg	kg
B-3	kg	kg	kg
B-4	kg	kg	kg
B-5	kg	kg	kg

1220-910-006-0

32A

⚠ WARNING

Do not refuel the tractor while smoking or near naked flame or sparks, always stop engine before refueling tractors.

1220-910-006-0

17



93

⚠ WARNING

Do not remove radiator cap while engine is hot. Hot steam will injure you.

1220-910-015-0

24

⚠ CAUTION

Keep hands and clothing away from rotating fan and belts to prevent serious injury.

1220-910-012-0

23

52

BONNET LATCH OPEN

1220-910-022-0

94

NOTE


FIG 903

LABEL

P2

Year

 2016

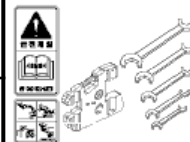



T754SC

SPEED TABLES

APPLICATION	TRENCH PLANTER	POST-15125	PAVING	DRIVE																																																																																																	
SPEED (MPH)	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
CRUISE (RPM)																																																																																																					
MAIN SHIFTS																																																																																																					
DOE SHIFTS																																																																																																					
CRUISE																																																																																																					

* Don't work the traction, escape marsh heavy work at creep on.
 * The data reported in this publication are also subject to variation and consequently are not.

  1801-901-002-0

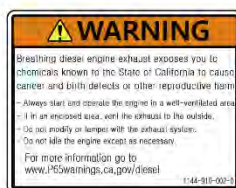

NOTE