

October 18, 1946

EXHIBIT "D"

## Repair Parts List

for


COCKSHUTT PLOW COMPANY, Limited

*W. C. Shannon*

Secretary

# COCKSHUTT "30" TRACTOR

Standard and Row Crop

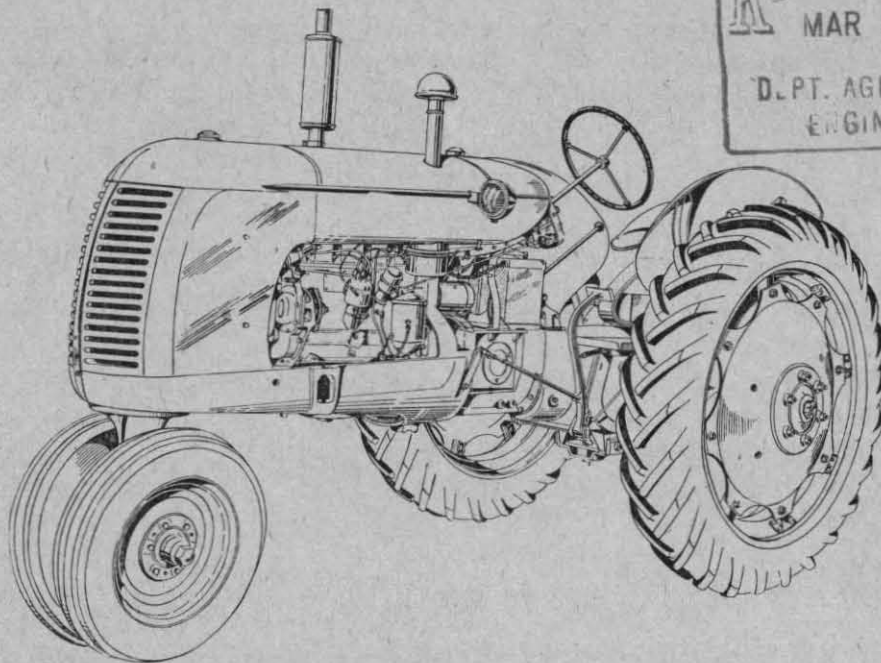

# COCKSHUTT

## PLOW COMPANY LIMITED

TRURO • MONTREAL  
SMITHS FALLS

BRANTFORD  
CANADA

WINNIPEG • REGINA • SASKATOON  
CALGARY • EDMONTON

**NOTE THE FOLLOWING EXPLANATIONS**

1. Under the serial number column appears (1-) indicating the part used on that serial number tractor and up.
  2. Under the serial number column appears (-1) indicating the part used **UP TO AN INCLUDING THAT SERIAL NUMBER.**
  3. "O" appearing in the part number (ex. TO-7541) denotes the part is an assembly.
  4. "W" appearing after part number (ex. TO-8332W) denotes the part is a welded construction and will be supplied only as listed.
- 

Always remember when ordering parts, give number of part with any prefix and suffix, give full description, serial number. Always use only our number, by using cross reference list on pages 23, 24, 25 and 26. **NEVER ORDER FROM ILLUSTRATION. CHECK NUMBER WITH DESCRIPTION.**

---

**WHY YOU SHOULD GIVE THE ENGINE SERIAL NUMBER OF THE TRACTOR.**

Tractor serial number—**Stamped on the Left side of tractor frame, or on Left side of cylinder block.**

If the particular part you are ordering has been changed at any time, unless you give the serial number there is danger of our shipping you the wrong part. For your protection, **always give the serial number of tractor and engine serial number.**

---

**RIGHT AND LEFT**

Right and left is determined by looking toward the radiator from the operator's seat.

---

This Company reserves the right to make changes in the construction of its products when such changes are deemed an improvement or refinement. Without incurring obligation to add them to any tractor already sold.

## Repair Parts List for Cockshutt "30" Tractor

Page 3

### I N D E X

|                                                                                          | Plate No. | Page No.     |
|------------------------------------------------------------------------------------------|-----------|--------------|
| AIR CLEANER .....                                                                        | A-38      | 8            |
| BATTERY .....                                                                            | A-37      | 6            |
| Battery box .....                                                                        | B-39      | 11           |
| Ground wire .....                                                                        | B-38      | 8            |
| Starter cable .....                                                                      | B-38      | 8            |
| BELT PULLEY .....                                                                        | A-41      | 14           |
| Belt pulley throw out lever .....                                                        | A-41      | 14           |
| BOLTS, NUTS, CAP SCREWS, LOCKWASHERS                                                     |           | 27 to 33     |
| Are listed on Pages from 27 to 33<br>inclusive, except those that carry<br>part numbers. |           |              |
| BRAKES .....                                                                             | A-39      | 10           |
| Brake housing .....                                                                      | A-39      | 10           |
| Brake lining .....                                                                       | A-39      | 10           |
| Brake gasket .....                                                                       | A-39      | 10           |
| Brake toggle .....                                                                       | A-39      | 10           |
| Brake drum .....                                                                         | A-39      | 10           |
| Brake pedals .....                                                                       | B-39      | 11           |
| Brake pedal lock .....                                                                   | A-37      | 6            |
| CARBURETOR .....                                                                         | B-37      | 7            |
| CLUTCH ENGINE .....                                                                      | A-44      | 18           |
| Clutch release shaft arm .....                                                           | A-44      | 18           |
| Clutch lining .....                                                                      | A-44      | 18           |
| Clutch pedal .....                                                                       | A-39      | 10           |
| COIL .....                                                                               | A-38      | 8            |
| Wire, coil to distributor .....                                                          | A-38      | 8            |
| Wire, ammeter to ignition .....                                                          | A-38      | 8            |
| CRANK STARTING .....                                                                     | B-41      | 15           |
| CREEPER GEAR .....                                                                       | A-45      | 20           |
| Creeper gear case .....                                                                  | A-45      | 20           |
| Creeper gears .....                                                                      | A-45      | 20           |
| Creeper gear shift lever .....                                                           | A-45      | 20           |
| CROSS REFERENCE — Manufacturing number to part number .....                              |           | 23 to 26     |
| DIFFERENTIAL .....                                                                       | A-39      | Inclusive 10 |
| Differential pinion .....                                                                | A-39      | 10           |
| Differential bearing .....                                                               | A-39      | 10           |
| DISTRIBUTOR .....                                                                        | A-38      | 8            |
| ENGINE .....                                                                             | B-41      | 15           |
| Air cleaner connections .....                                                            | A-42      | 16           |
| Breather cap .....                                                                       | B-42      | 17           |
| Cam .....                                                                                | B-42      | 17           |
| Cam gear driver on crankshaft .....                                                      | B-42      | 17           |
| Cam gear on crankshaft .....                                                             | A-42      | 16           |
| Carburetor gasket .....                                                                  | B-41      | 15           |
| Cooling outlet .....                                                                     | A-43      | 22           |
| Crank case .....                                                                         | A-42      | 16           |
| Crank case pan .....                                                                     | A-42      | 16           |
| Crankshaft .....                                                                         | A-42      | 16           |
| Cylinder block .....                                                                     | A-43      | 22           |
| Cylinder head gasket .....                                                               | A-42      | 16           |
| Cylinder head studs .....                                                                | A-42      | 16           |
| Dip stick .....                                                                          | A-42      | 16           |
| Engine replacement kit .....                                                             | B-40      | 13           |
| Exhaust gasket .....                                                                     | B-41      | 15           |
| Exhaust pipe .....                                                                       | B-41      | 15           |
| Fan belt .....                                                                           | B-41      | 15           |

## I N D E X — Continued

|                                                          | Plate No.  | Page No. |
|----------------------------------------------------------|------------|----------|
| Fan blade .....                                          | B-41       | 15       |
| Fan pulley on crankshaft .....                           | A-42       | 16       |
| Felt for clutch cover .....                              | A-41       | 14       |
| Flywheel .....                                           | B-42       | 17       |
| Flywheel housing .....                                   | B-42       | 17       |
| Front support .....                                      | A-43       | 22       |
| Gasket, exhaust manifold .....                           | B-42       | 17       |
| Gasoline line .....                                      | A-41       | 14       |
| Gear case cover .....                                    | A-43       | 22       |
| Governor .....                                           | A-43       | 22       |
| Governor spring .....                                    | A-43       | 22       |
| Governor hand control rod .....                          | A-38       | 8        |
| Governor bracket .....                                   | A-38       | 8        |
| Intake and exhaust manifold .....                        | B-42       | 17       |
| Main bearings .....                                      | A-42       | 16       |
| Muffler .....                                            | B-37       | 7        |
| Oil pump .....                                           | A-42       | 16       |
| Rocker arm .....                                         | B-42       | 17       |
| Sleeves .....                                            | A-42       | 16       |
| Valves .....                                             | A-42       | 16       |
| Valve cover .....                                        | A-42       | 16       |
| Valve push rods .....                                    | B-42       | 17       |
| Valve springs .....                                      | A-42       | 16       |
| Water pump .....                                         | A-43       | 22       |
| <b>FENDERS (Under optional equipment, page 53)</b> ..... | B-39       | 11       |
| <b>FLOORBOARDS</b> .....                                 | A-39, B-39 | 10 & 11  |
| <b>FRONT AXLE STANDARD TRACTOR</b> .....                 | B-41       | 15       |
| Bearing for front wheels .....                           | A-38       | 8        |
| Bushings, bronze .....                                   | B-41       | 15       |
| Dust disc .....                                          | B-41       | 15       |
| Pivot post .....                                         | B-41       | 15       |
| Spindle bolts on king pin .....                          | B-41       | 15       |
| Tie rods .....                                           | B-41       | 15       |
| <b>FRONT AXLE ROW CROP</b> .....                         | A-38       | 8        |
| Bearings for front wheels .....                          | A-38       | 8        |
| Pedestal .....                                           | A-38       | 8        |
| <b>FRONT WHEELS</b> .....                                | A-38       | 8        |
| Bearings .....                                           | A-38       | 8        |
| Bolts .....                                              | A-38       | 8        |
| Hub .....                                                | A-38       | 8        |
| Tires .....                                              | A-38       | 8        |
| <b>GENERATOR</b> .....                                   | A-37       | 6        |
| <b>HITCH</b> .....                                       | A-39, B-39 | 10 & 11  |
| <b>HEAD LAMPS</b> .....                                  | B-40       | 13       |
| Bolt for rim .....                                       | B-40       | 13       |
| Bulb .....                                               | B-40       | 13       |
| Lens .....                                               | B-40       | 13       |
| Rim .....                                                | B-40       | 13       |
| Shell and reflector .....                                | B-40       | 13       |
| <b>INSTRUMENT PANEL</b> .....                            | B-39       | 11       |
| Amperes gauge .....                                      | B-39       | 11       |
| Dash light bulb .....                                    | B-39       | 11       |
| Key .....                                                | B-39       | 11       |
| Oil pressure gauge .....                                 | B-39       | 11       |
| Starter control .....                                    | B-39       | 11       |
| Temperature gauge .....                                  | B-39       | 11       |
| Wire harness .....                                       | B-39       | 11       |

**I N D E X — Continued**

|                                           | Plate No. | Page No. |
|-------------------------------------------|-----------|----------|
| <b>LIVE POWER TAKE-OFF</b> .....          | B-44      | 19       |
| Clutch .....                              | B-44      | 19       |
| Front section .....                       | A-44      | 18       |
| Rear section .....                        | B-44      | 19       |
| <b>OIL FILTER</b> .....                   | B-38      | 9        |
| <b>RADIATOR</b> .....                     | B-41      | 15       |
| Hose clamps .....                         | B-41      | 15       |
| Hose connections .....                    | B-41      | 15       |
| Lower connections .....                   | B-41      | 15       |
| Upper connections .....                   | B-41      | 15       |
| <b>RADIATOR GRILL</b> .....               | A-37      | 6        |
| <b>REAR AXLE</b> .....                    | B-39      | 11       |
| Rear axle bearing outer .....             | B-39      | 11       |
| Rear axle bearing inner .....             | A-39      | 10       |
| Rear axle bearing nut .....               | B-39      | 11       |
| Rear axle main gear .....                 | A-39      | 10       |
| Rear axle housing left .....              | A-39      | 10       |
| Rear axle housing right .....             | B-39      | 11       |
| <b>REAR LIGHT BRACKET</b> .....           | A-40      | 12       |
| <b>REAR WHEELS</b> .....                  | B-39      | 11       |
| Disc .....                                | B-39      | 11       |
| Hub bolts .....                           | B-39      | 11       |
| Hub bolt nuts .....                       | B-39      | 11       |
| Rear wheel hub .....                      | B-39      | 11       |
| Tires .....                               | A-38      | 8        |
| <b>RUBBER STRIPS UNDER GAS TANK</b> ..... | A-40      | 12       |
| <b>STARTER</b> .....                      | B-38      | 8        |
| <b>SEAT</b> .....                         | A-40      | 12       |
| <b>SEAT SUPPORT</b> .....                 | A-40      | 12       |
| <b>SEDIMENT BOWL</b> .....                | A-37      | 6        |
| <b>SOCKET WRENCH</b> .....                | B-37      | 7        |
| <b>STEER WHEEL</b> .....                  | A-40      | 12       |
| <b>STEER WHEEL SHAFT</b> .....            | A-40      | 12       |
| <b>STEER WHEEL BEARING BRACKET</b> .....  | A-40      | 12       |
| <b>STANDARD POWER TAKE-OFF</b> .....      | B-44      | 19       |
| <b>STEERING GEAR</b> .....                | B-40      | 13       |
| Universal joint .....                     | B-40      | 13       |
| <b>THROTTLE LEVER</b> .....               | A-41      | 14       |
| <b>TOOL BOX</b> .....                     | B-39      | 11       |
| <b>TRANSMISSION SHIFT</b> .....           | B-45      | 21       |
| Transmission cover .....                  | A-39      | 10       |
| Transmission gears .....                  | B-45      | 21       |
| Transmission forks .....                  | B-45      | 21       |
| Transmission shaft .....                  | B-45      | 21       |
| Transmission tower .....                  | B-45      | 21       |
| Transmission case .....                   | B-45      | 21       |
| <b>WHEEL WEIGHTS</b> .....                | B-39      | 11       |

# Repair Parts List for Cockshutt "30" Tractor

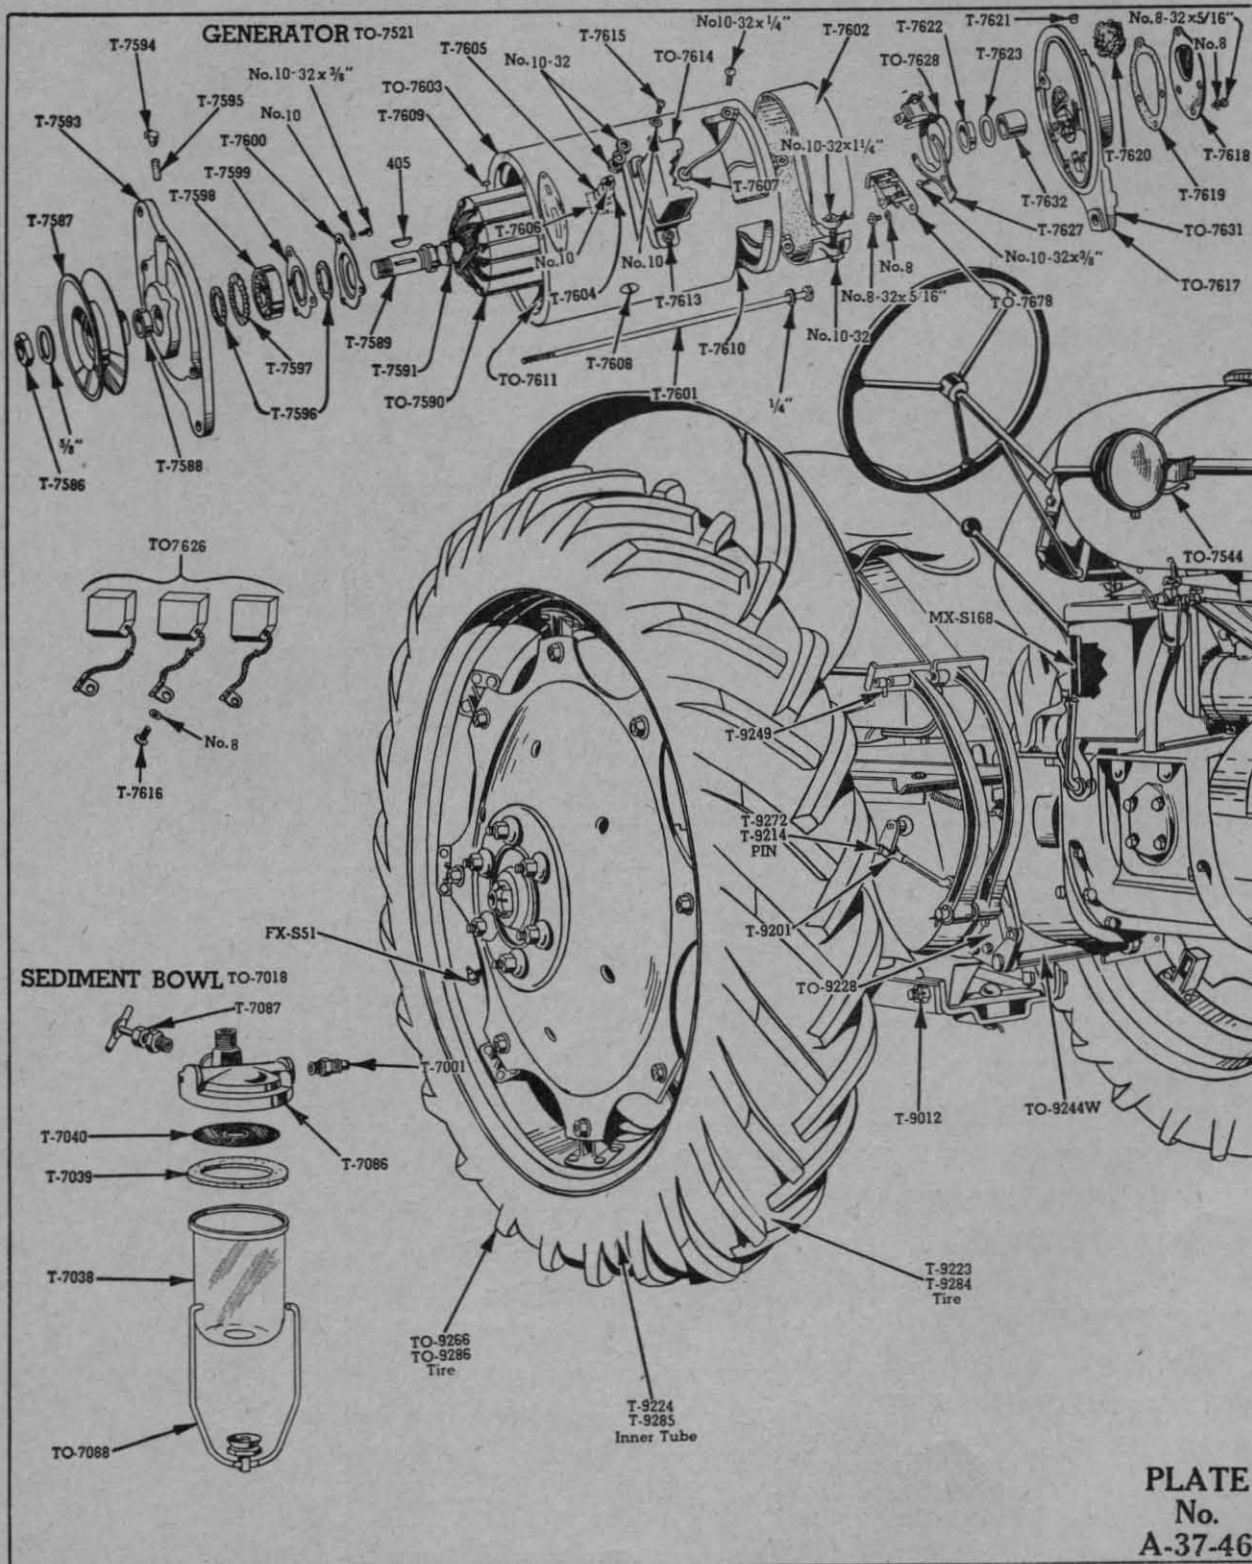


PLATE  
No.  
A-37-46

NOTE — Never order from Illustrations alone, always look up printed list

# Repair Parts List for Cockshutt "30" Tractor

Page 7




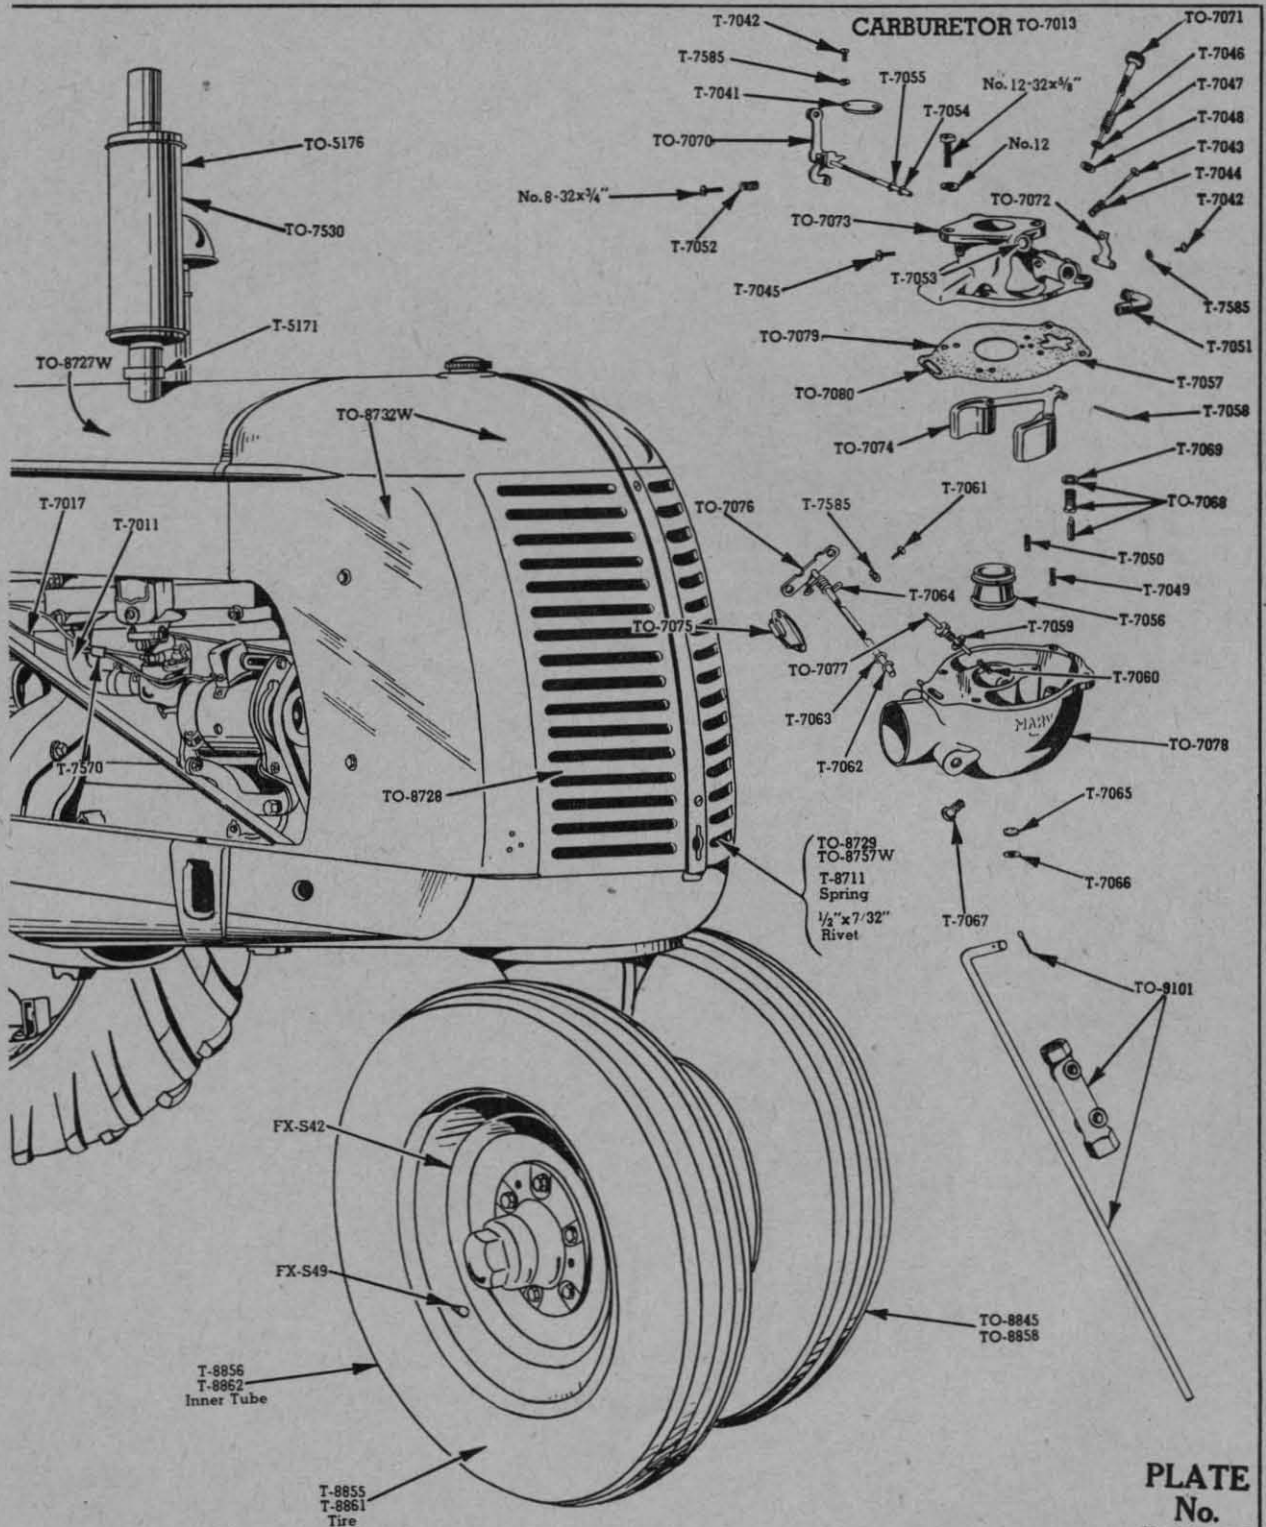


PLATE  
No.  
B-37-46

  
NOTE — Never order from Illustrations alone, always look up printed list





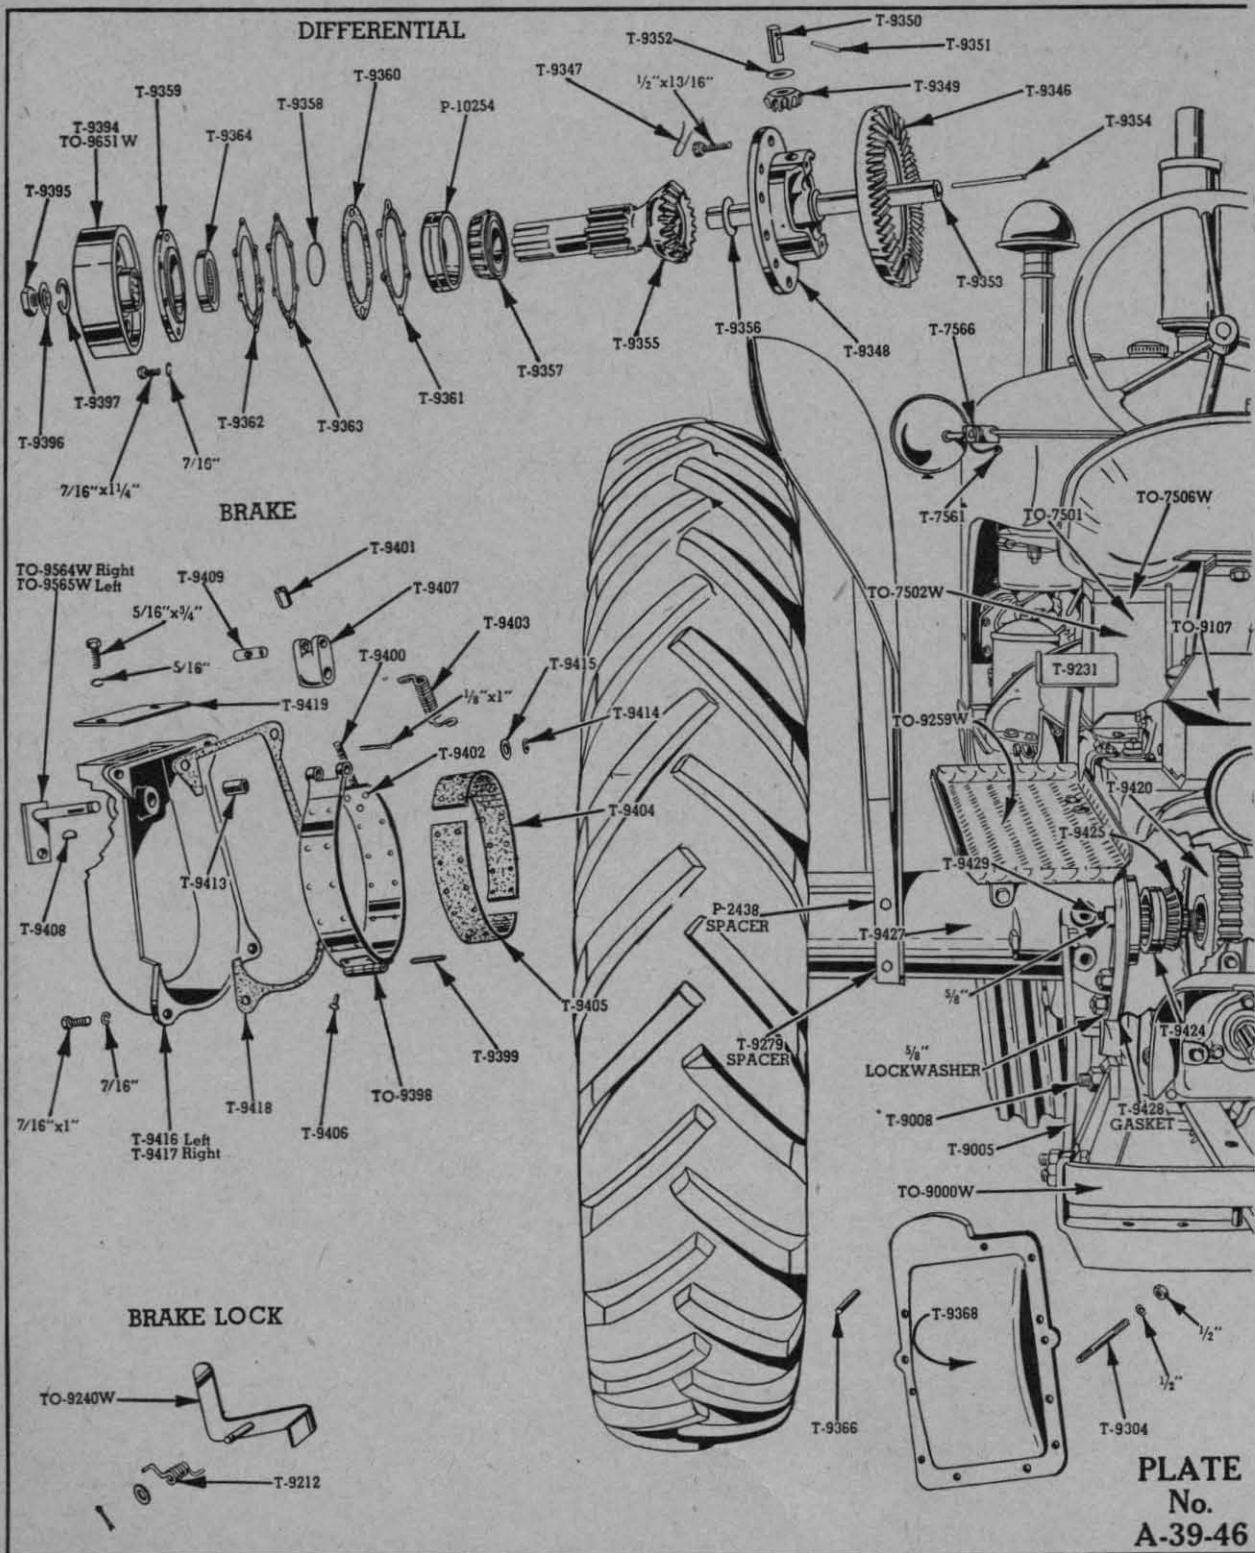

 NOTE — Never order from Illustrations alone, always look up printed list



**NOTE —** Never order from Illustrations alone, always look up printed list



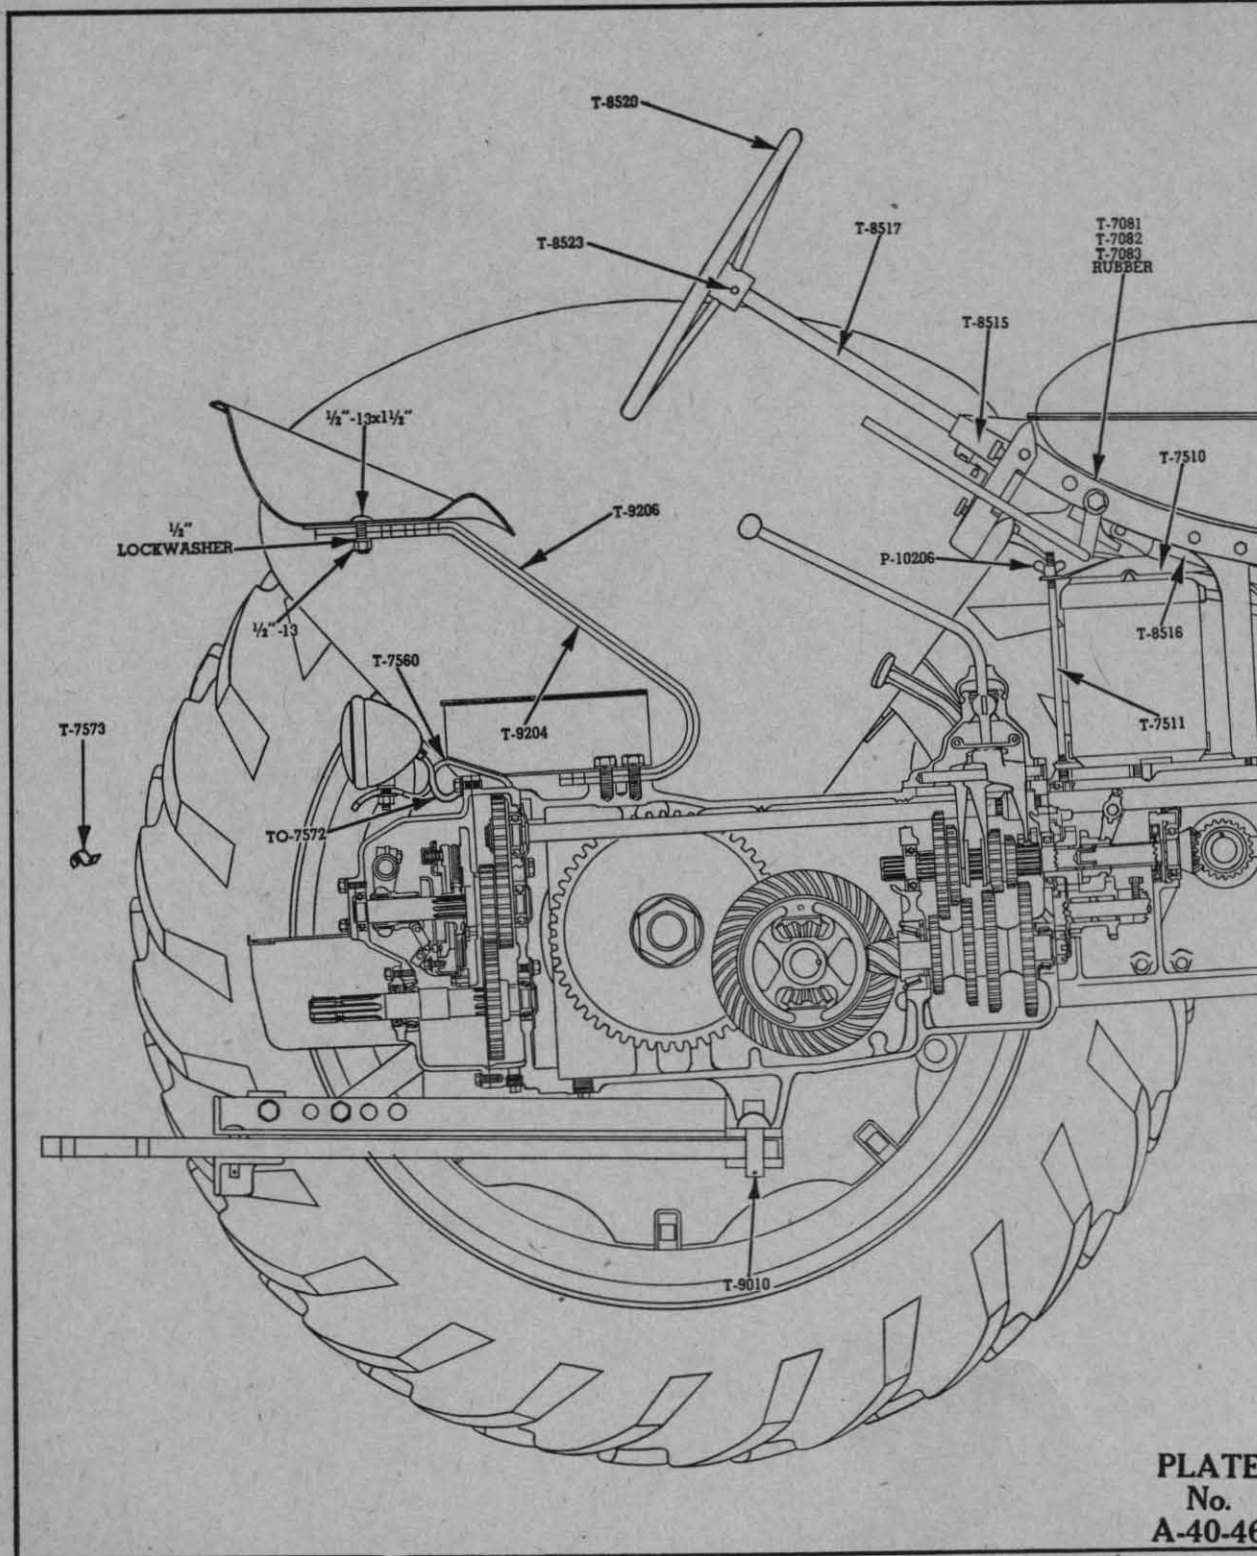


PLATE  
No.  
A-40-46

 NOTE — Never order from Illustrations alone, always look up printed list



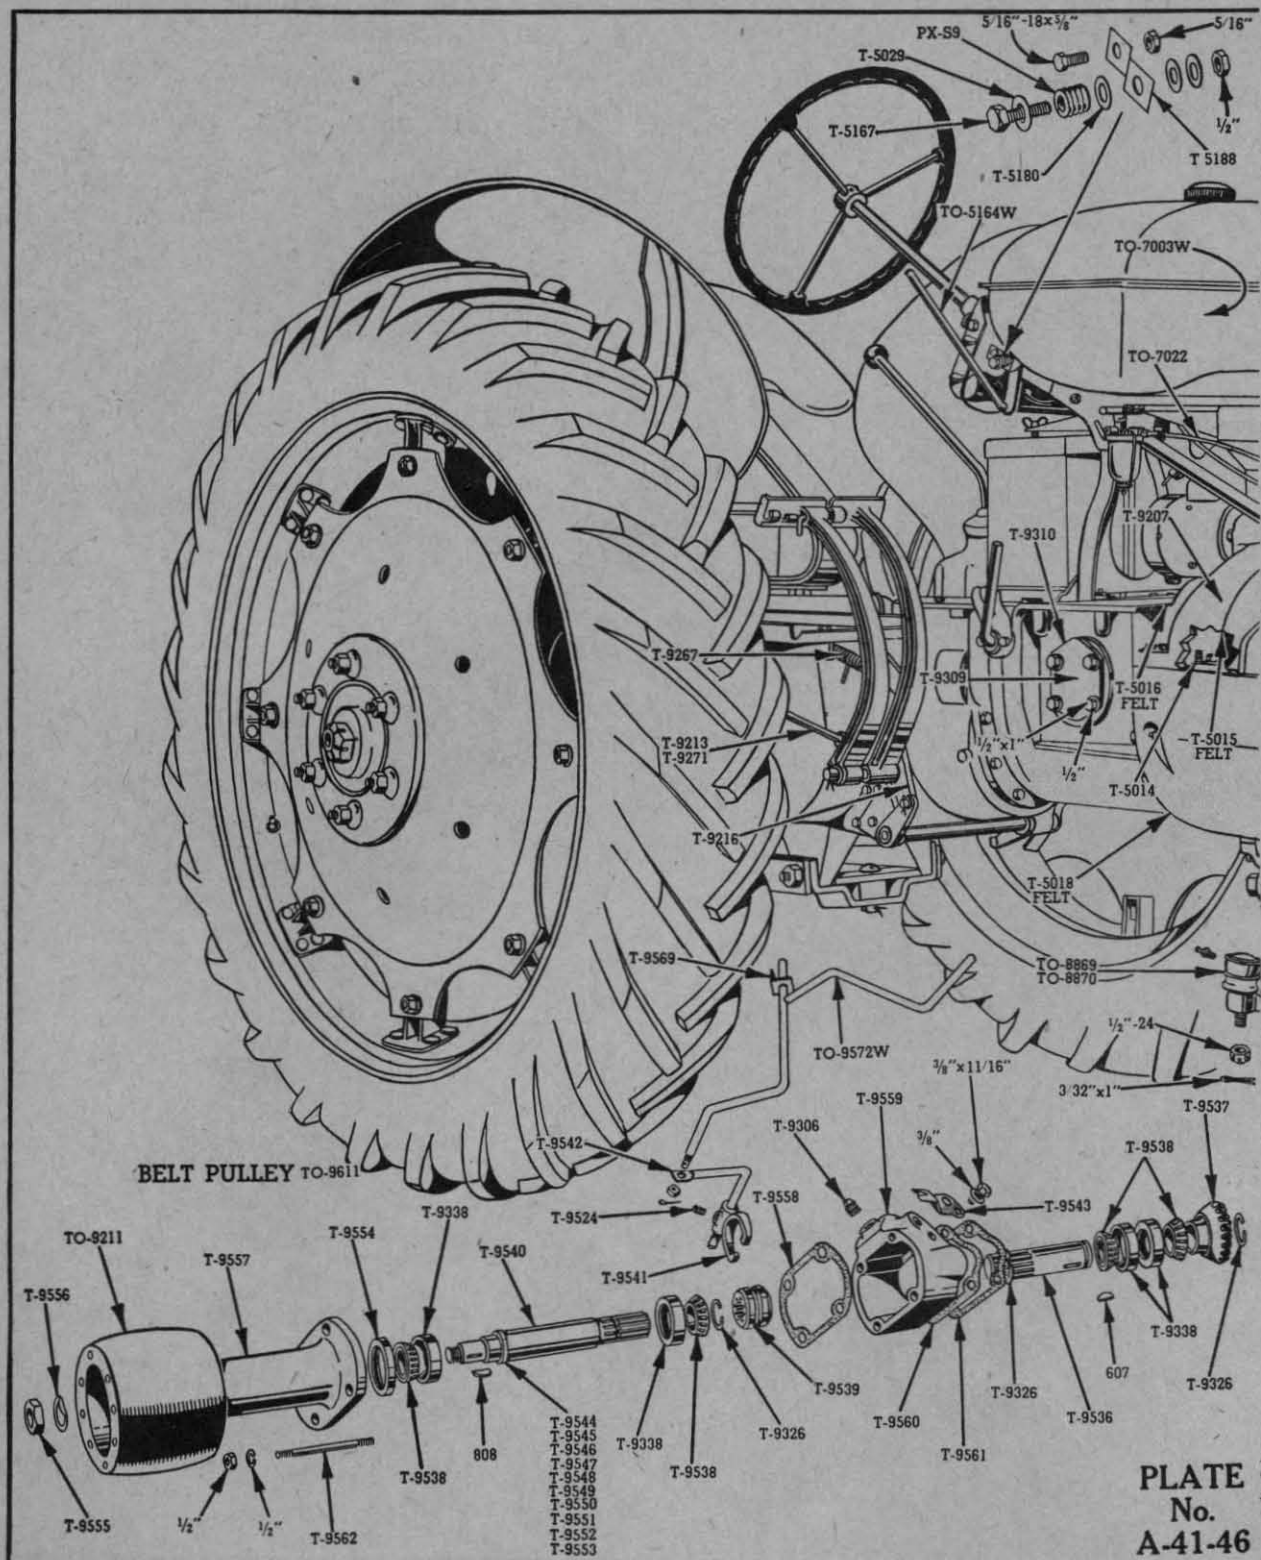

NOTE — Never order from Illustrations alone, always look up printed list

# Repair Parts List for Cockshutt "30" Tractor

Page 15


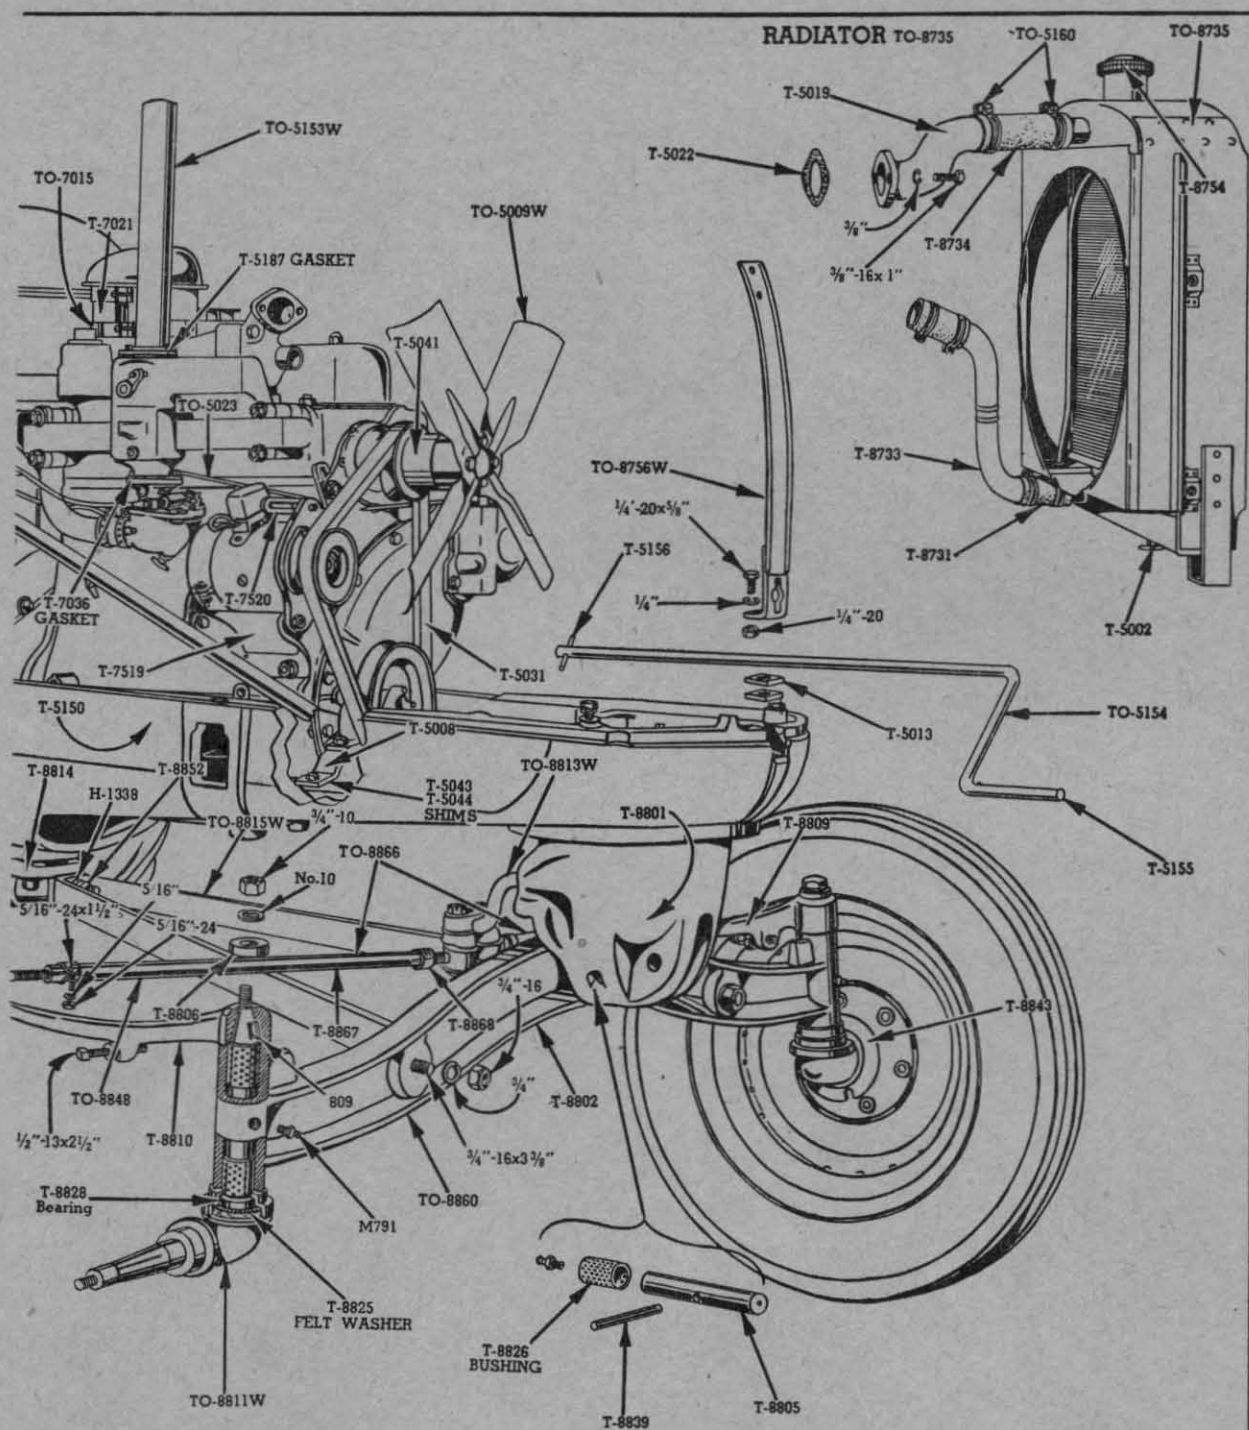


PLATE  
No.  
B-41-46

NOTE — Never order from Illustrations alone, always look up printed list

## Repair Parts List for Cockshutt "30" Tractor

## CYLINDER HEAD AND VALVES

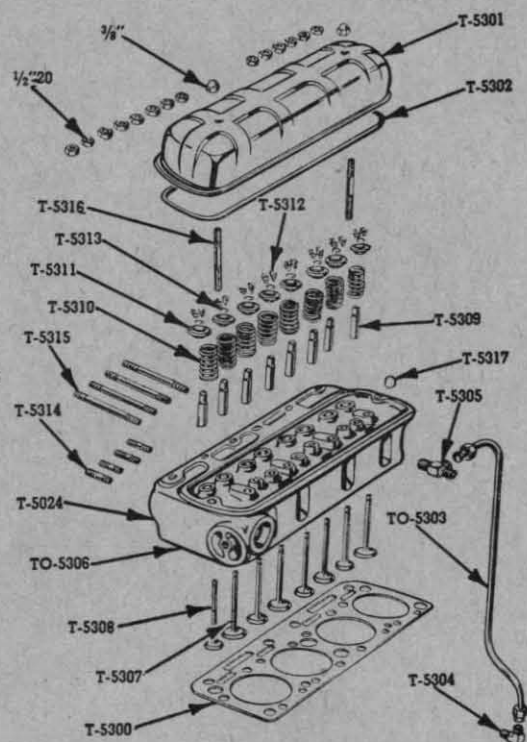

## CRANKSHAFT

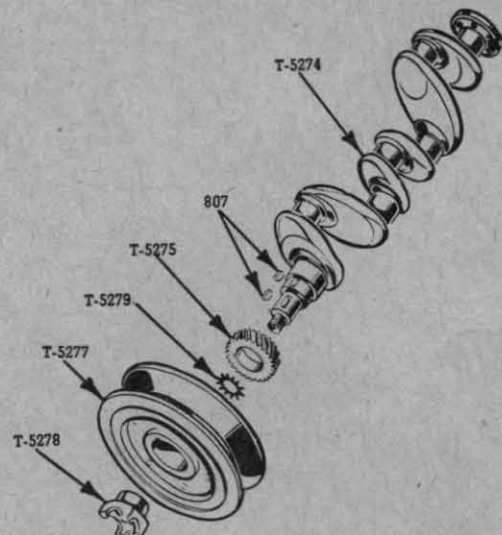



PLATE  
No.  
A-42-46

**NOTE —** Never order from Illustrations alone, always look up printed list


# Repair Parts List for Cockshutt "30" Tractor

Page 17


## VALVE OPERATING MECHANISM

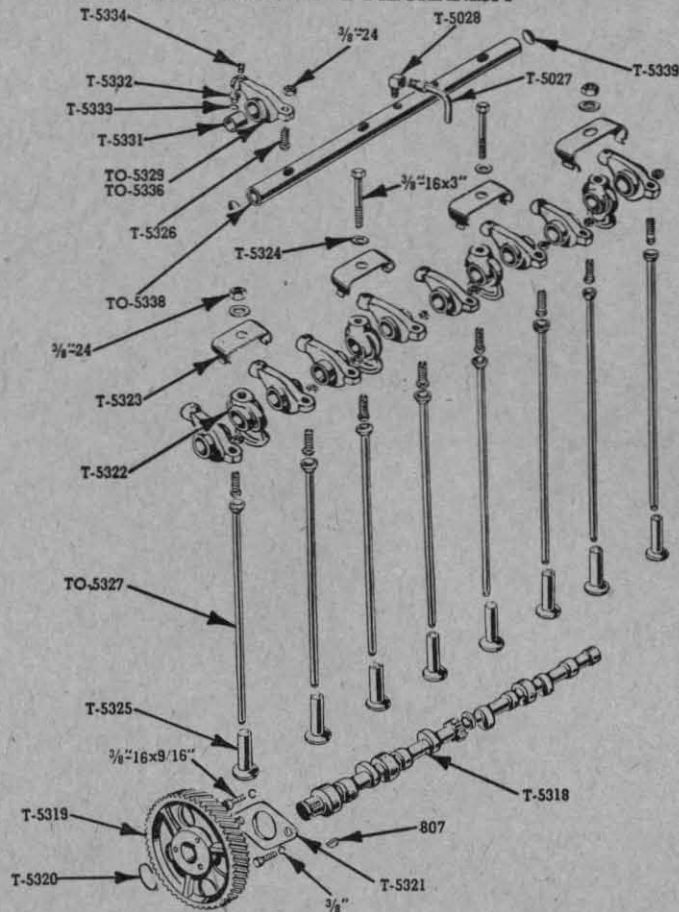


## PISTON AND CONNECTING ROD

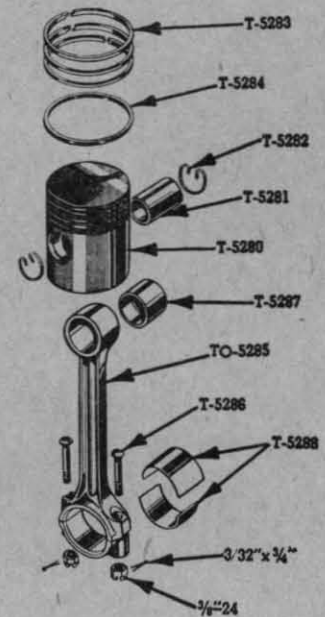

## FLYWHEEL AND HOUSING

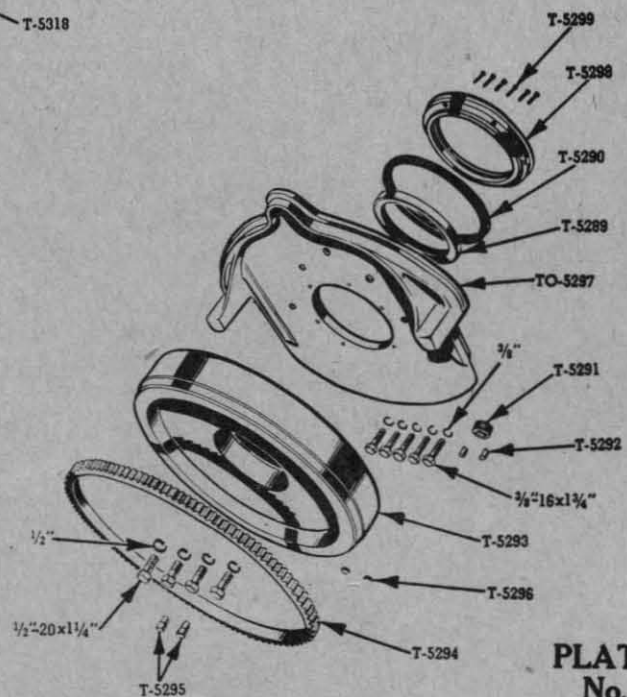


## AIR INTAKE AND EXHAUST MANIFOLD

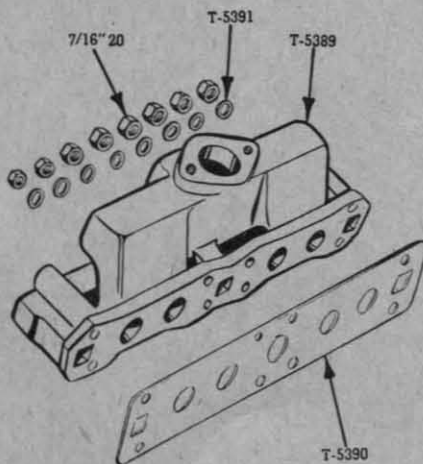

**PLATE  
No.  
B-42-46**

**NOTE — Never order from Illustrations alone, always look up printed list**

LIVE POWER TAKE-OFF

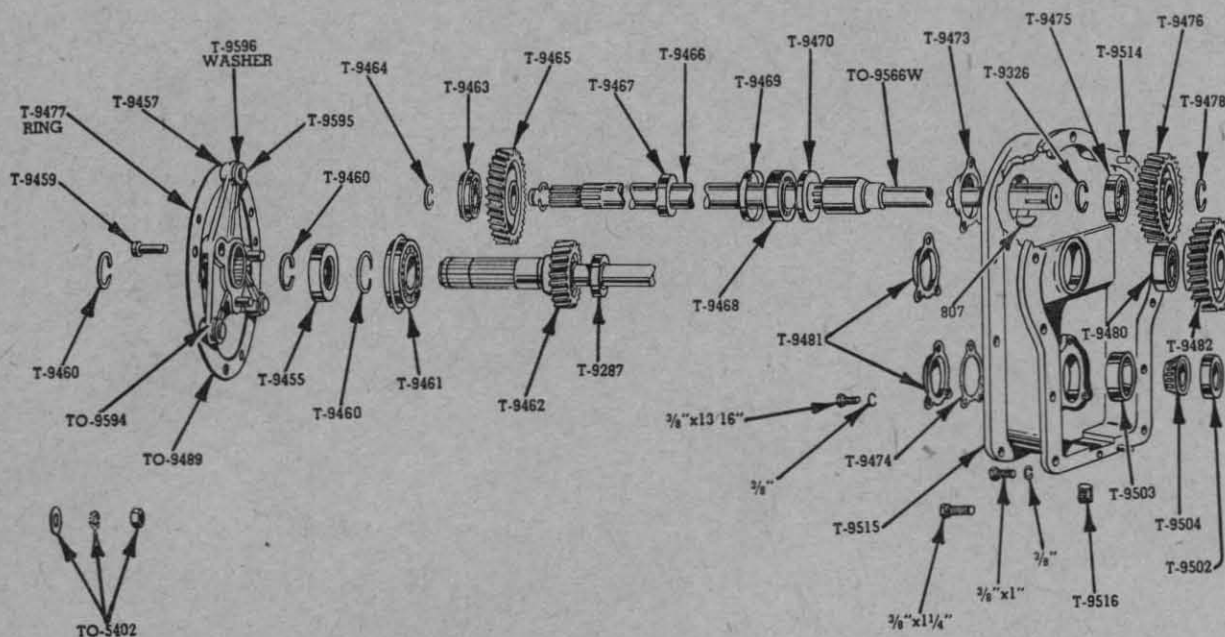

CLUTCH  
TO-5061



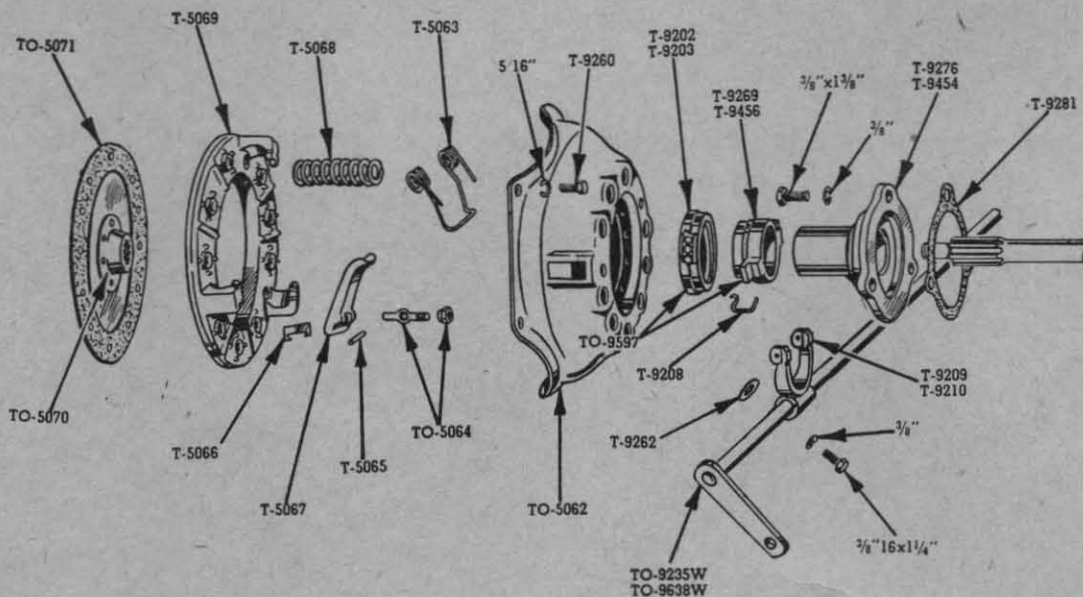


PLATE  
No.  
A-44-46

 NOTE — Never order from Illustrations alone, always look up printed list




NOTE — Never order from Illustrations alone, always look up printed list

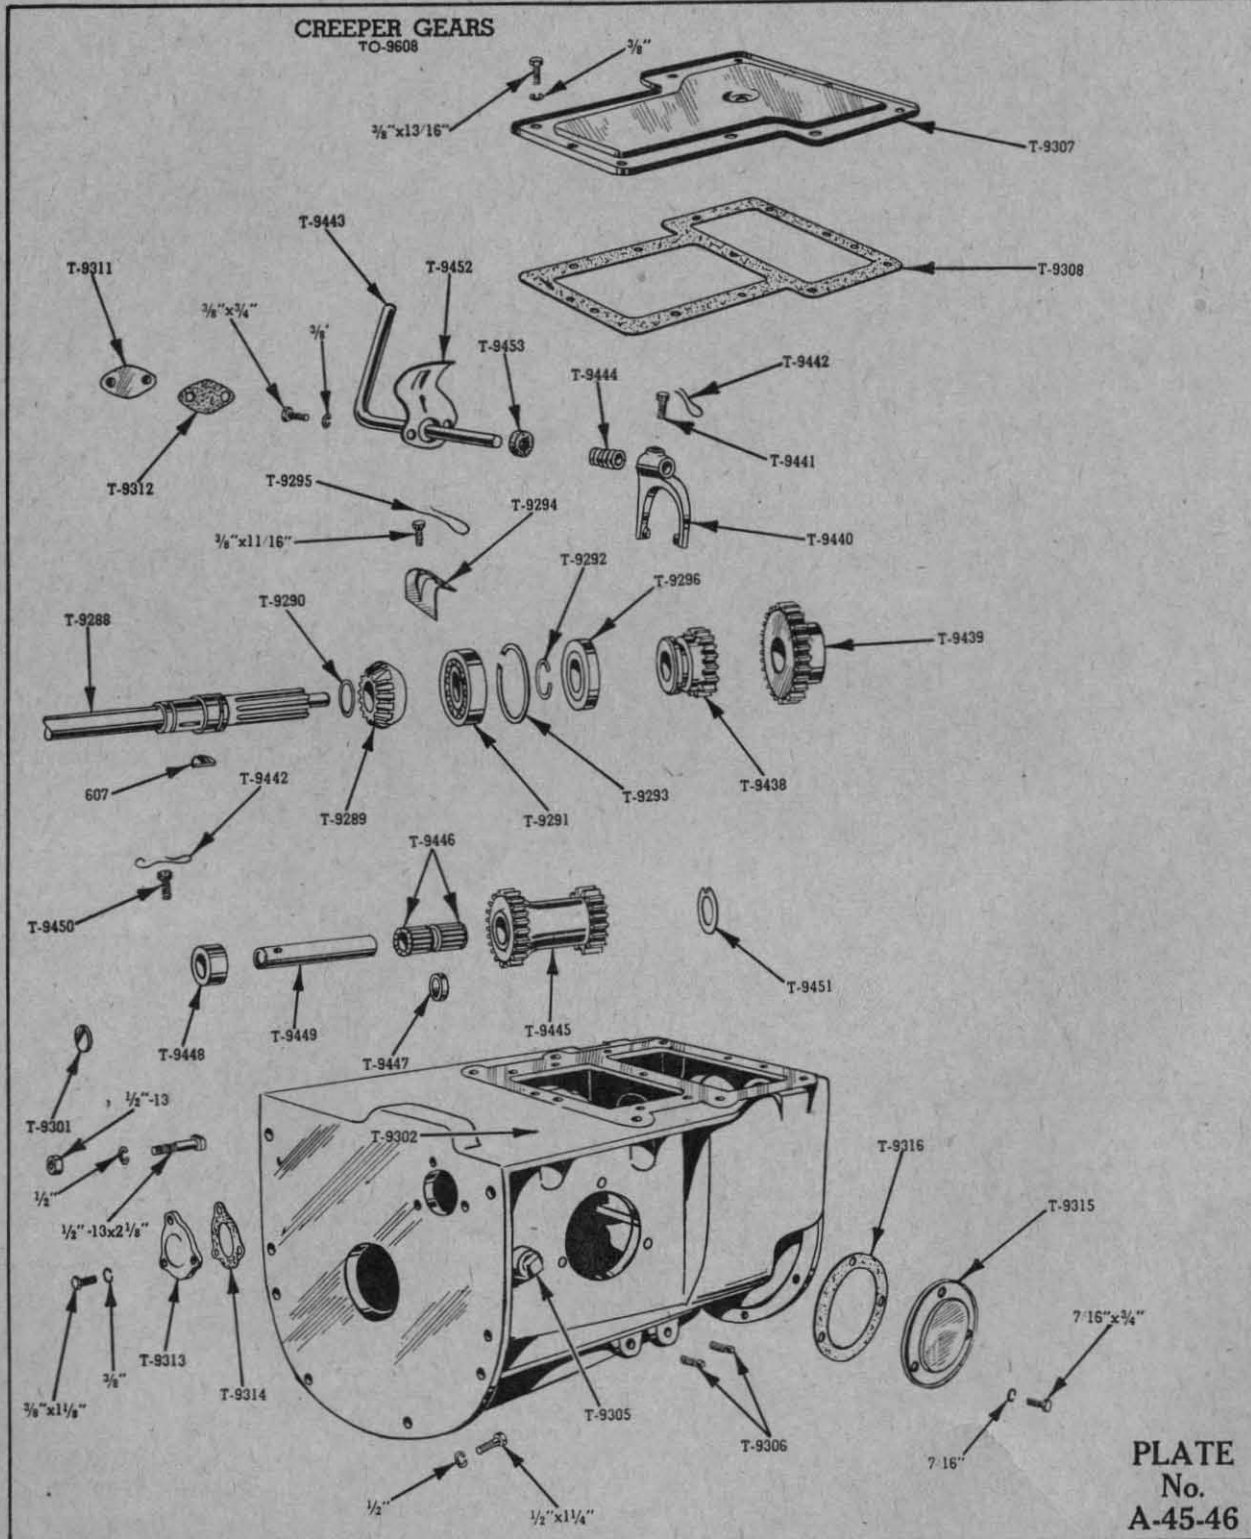

NOTE — Never order from Illustrations alone, always look up printed list

# Repair Parts List for Cockshutt "30" Tractor


Page 21

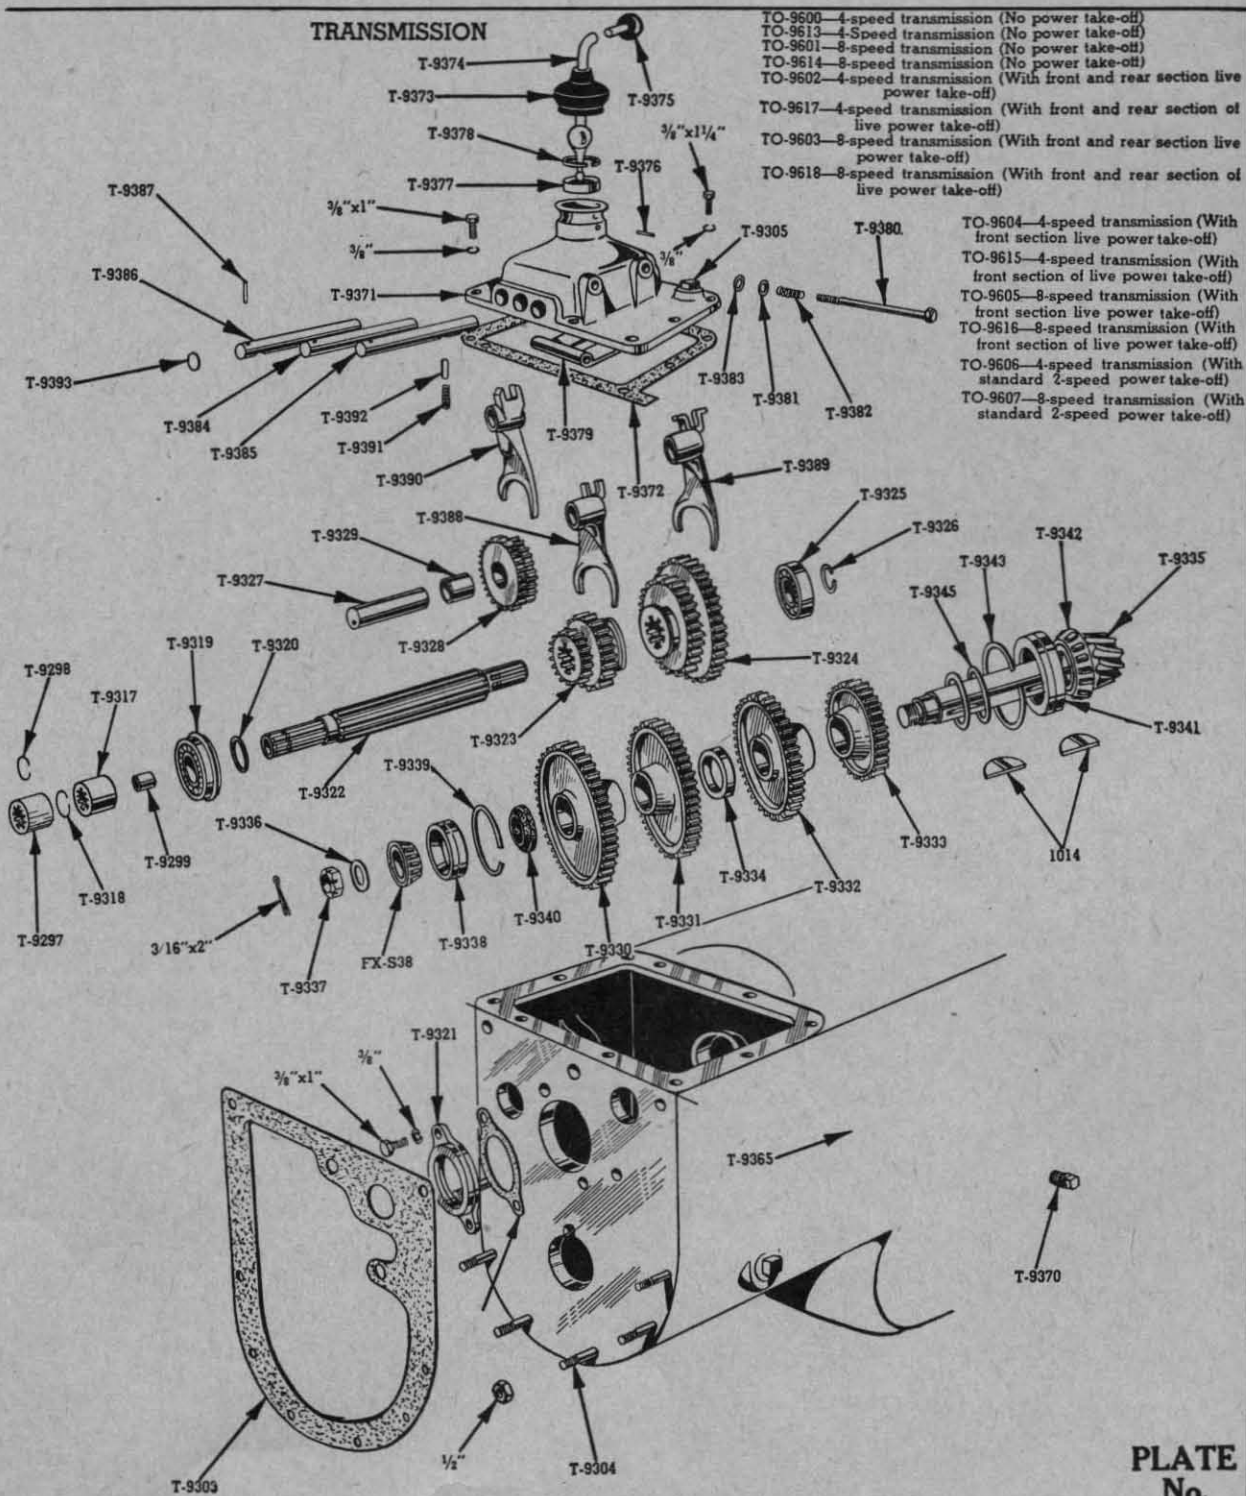

**PLATE  
No.  
B-45-46**

**NOTE — Never order from Illustrations alone, always look up printed list**

## COOLING SYSTEM AND WATER PUMP

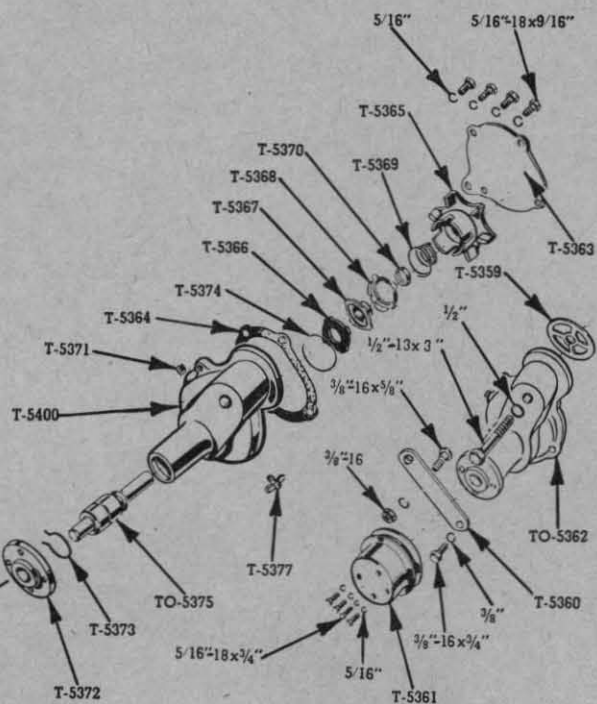

## GEAR COVER AND FRONT SUPPORT

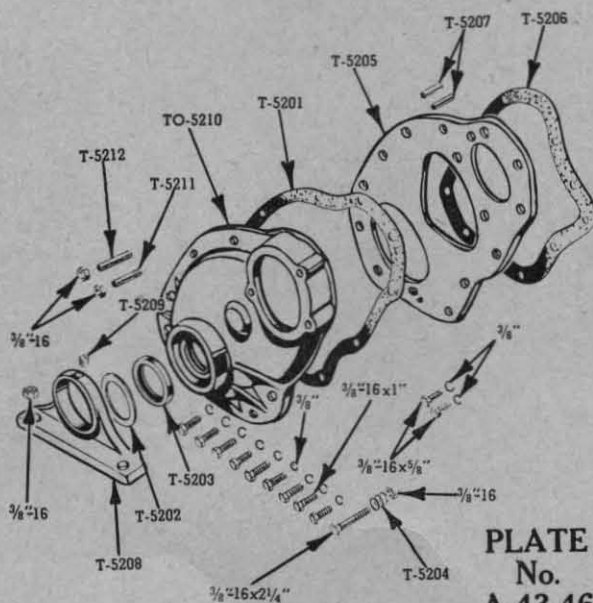


PLATE  
No.  
A-43-46

**NOTE —** Never order from Illustrations alone, always look up printed list

# CROSS REFERENCE MANUFACTURING NUMBERS TO PART NUMBERS

| Mfg. No. | Part No. | Mfg. No. | Part No. | Mfg. No. | Part No. | Mfg. No.       | Part No. |
|----------|----------|----------|----------|----------|----------|----------------|----------|
| 021123   | T-8534   | 3721     | T-5063   | 117612   | T-5339   | 49-264         | T-7060   |
| 029047   | T-8546   | 3813     | T-5393   | 118831   | T-5371   | 55-230         | T-7053   |
| 032084   | T-8545   | 3920     | P-10254  | 137421   | T-5028   | 55-231         | T-7055   |
| 032085   | T-8528   | 3943     | T-5272   | 141236   | T-5292   | 55-243         | T-7063   |
| 033036   | T-8541   | 3979     | T-9357   | 141244   | T-5207   | 69-5           | T-7051   |
| 033037   | T-8542   | 4187     | T-5069   | 142309   | T-7576   | 78-299         | T-7047   |
| 033042   | T-8543   | 4308     | T-5068   | 172332   | T-5299   | 95-40          | T-7065   |
| 033072   | T-8531   | 4386     | T-5067   | 178685   | T-5305   | 99-7           | T-7067   |
| 033073   | T-8532   | 7506     | T-9325   | 251367   | T-5204   | 179-35         | T-7066   |
| 033074   | T-8533   | 10621    | T-5077   | 251877   | T-5302   | 227-1088       | TO-7073  |
| 063993   | TO-8564  | 10937    | TO-5070  | 400005   | T-8539   | 233-536        | TO-7068  |
| 071004   | T-8527   | 11144    | TO-5064  | 400014   | T-8538   | 286-785        | TO-7080  |
| 387      | T-9425   | 11385    | T-5270   | 400020   | T-8537   | 41468-2        | T-7086   |
| 626      | T-9578   | 11645    | TO-5062  | 401108   | T-8547   | 8843-14-3/16   | T-8536   |
| 929      | T-9588   | 14276    | T-9338   | 402093   | T-8530   | 8844-14-3/16   | T-8563   |
| 937      | T-9583   | 15520    | T-9503   | 475114   | T-8548   | 2-x-1674-1     | T-7030   |
| 939      | T-9581   | 15578    | T-9504   | 502566   | TO-8256  | 3-X-146        | T-9527   |
| 941      | T-9577   | 25854    | T-7040   | 924188   | T-7577   | 4-B-153        | T-5000   |
| 942      | T-9589   | 25857    | T-7039   | 924639   | T-7575   | 4-X-517        | T-9429   |
| 945      | T-9580   | 25858    | T-7038   | 925514   | TO-7514  | 4-X-797        | T-9304   |
| 946      | T-9579   | 25904    | T-7087   | 5932150  | T-7574   | 4-X-870        | T-9436   |
| 949      | TO-9592  | 39543    | TO-7088  | 10-2992  | TO-7013  | 4-X-873        | T-9562   |
| 981      | T-5061   | 43206    | T-9475   | 10-3056  | TO-7078  | 5-X-349        | T-9498   |
| 1022     | T-8549   | 43208    | T-9461   | 13-957   | TO-7070  | 5-X-394        | T-9358   |
| 1130     | T-9582   | 43304    | T-9463   | 14-169   | T-7041   | 5-X-399        | T-9453   |
| 1193     | T-5294   | 46150    | T-9342   | 16-4     | T-7069   | 14-M N-7       | T-8868   |
| 1264     | T-9573   | 46368    | T-9341   | 16-80    | T-7057   | 14-X-58        | T-9433   |
| 1342     | T-9585   | 47507    | T-9319   | 16-449   | T-7059   | 15-A-91        | T-7042   |
| 1344     | T-9587   | 93420    | T-9446   | 16-491   | T-7048   | 15-A-92        | T-7061   |
| 1346     | TO-9586  | 103647   | T-5273   | 16-592   | T-7079   | 16-R T-151     | T-8867   |
| 1347     | T-9593   | 103688   | T-5217   | 24-262   | T-7052   | 16-S V-183-A-1 | TO-8870  |
| 1360     | T-5211   | 103866   | T-5269   | 24-30    | T-7044   | 16-S V-184-A-1 | TO-8869  |
| 1410     | T-9574   | 103869   | T-5345   | 24-489   | T-7046   | 16-T-188       | TO-8848  |
| 1450     | T-9575   | 103883   | T-5209   | 24-501   | TO-7072  | 16-X-83        | T-9673   |
| 1544     | T-9584   | 103890   | T-5296   | 26-730   | TO-7076  | 16-X-87        | T-9408   |
| 1575     | TO-9591  | 103894   | T-5267   | 27-539   | TO-7075  | 16-X-88        | T-9672   |
| 1576     | TO-9590  | 103895   | T-5317   | 30-600   | TO-7074  | 16-X-91        | T-9354   |
| 1595     | TO-7018  | 105451   | T-5318   | 32-27    | T-7058   | 17-X-132       | T-9487   |
| 2204     | T-5282   | 106263   | T-5324   | 43-33    | T-7043   | 17-X-137       | T-9595   |
| 2827     | T-9576   | 106749   | T-5331   | 43-554   | TO-7071  | 24-A-128       | T-7064   |
| 3205     | T-9490   | 106751   | T-5223   | 44-38    | T-7054   | 26-X-52        | T-9524   |
| 3206     | T-9468   | 111991   | T-5354   | 44-39    | T-7062   | 26-X-54        | T-9441   |
| 3207     | T-9291   | 112139   | T-5276   | 46-448   | T-7056   | 1229-C-1017    | T-9596   |
| 3305     | T-9480   | 113185   | T-5270   | 47-589   | TO-7077  | 1229-F-422     | T-9383   |
| 3695     | T-5066   | 113186   | T-5291   | 49-165   | T-7049   | 1805-S-201     | T-9430   |
| 3696     | T-5065   | 114981   | T-5377   | 49-178   | T-7050   | 1805-W-75      | T-9497   |
|          |          |          |          |          |          | 1825-H-112     | T-9329   |

### CROSS REFERENCE MANUFACTURING NUMBERS TO PART NUMBERS

| Mfg.<br>No. | Part<br>No. | Mfg.<br>No. | Part<br>No. | Mfg.<br>No. | Part<br>No. | Mfg.<br>No. | Part<br>No. |
|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|
| 1825-J-114  | T-9413      | 1850-F-58   | T-9300      | 2808-D-498  | T-9474      | 2858-S-45   | T-9525      |
| 1825-P-146  | T-9676      | 1850-H-60   | T-9301      | 2808-E-499  | T-9312      | 3802-X-596  | T-9421      |
| 1825-Z-130  | T-9485      | 1854-C-107  | T-9414      | 2808-F-500  | T-9308      | 3835-L-272  | T-9343      |
| 1827-B-80   | T-9337      | 1854-D-108  | T-9378      | 2808-G-423  | T-9310      | 3855-H-86   | T-9368      |
| 1827-H-138  | T-9422      | 1854-G-137  | T-9519      | 2808-H-424  | T-9372      | 3855-K-88   | T-9315      |
| 1827-K-141  | T-9555      | 1854-L-90   | T-9339      | 2808-M-455  | T-9428      | 3855-N-92   | T-9481      |
| 1827-K-167  | T-9395      | 1854-N-118  | T-9293      | 2808-N-456  | T-9418      | 3855-P-94   | T-9473      |
| 1827-Y-103  | T-9401      | 1854-P-120  | T-9343      | 2808-U-489  | T-9316      | 3855-Q-95   | T-9311      |
| 1828-A-53   | T-9202      | 1854-Q-121  | T-9318      | 2808-W-491  | T-9492      | 3855-R-96   | T-9307      |
| 1828-X-50   | T-9203      | 1854-R-122  | T-9292      | 2808-X-492  | T-9369      | 3855-V-74   | T-9309      |
| 1829-A-495  | T-9423      | 1854-S-123  | T-9478      | 2808-X-518  | T-9558      | 3855-X-76   | T-9419      |
| 1829-D-498  | T-9356      | 1854-T-124  | T-9460      | 2808-Y-493  | T-9513      | 3866-G-449  | T-9313      |
| 1829-E-499  | T-9483      | 1854-U-125  | T-9464      | 2808-Z-494  | T-9507      | 3866-J-452  | T-9491      |
| 1829-F-500  | T-9451      | 1854-V-126  | T-9298      | 2808-Z-520  | T-9530      | 3866-K-453  | T-9506      |
| 1829-G-267  | T-9415      | 1854-W-101  | T-9326      | 2833-E-31   | T-9349      | 3866-L-454  | T-9454      |
| 1829-G-449  | T-9352      | 1854-W-127  | T-9501      | 2840-M-143  | T-9405      | 3866-M-455  | T-9276      |
| 1829-G-501  | T-9448      | 1854-X-102  | T-9290      | 2840-P-146  | T-9404      | 3866-N-456  | T-9359      |
| 1829-G-527  | T-9345      | 1874-R-44   | T-9486      | 2843-A-131  | T-9384      | 3866-Z-468  | T-9529      |
| 1829-H-502  | T-9495      | 1874-S-45   | T-9297      | 2843-B-132  | T-9385      | 3870-K-63   | T-9435      |
| 1829-J-478  | T-9396      | 1898-R-70   | T-9392      | 2843-C-133  | T-9386      | 3870-N-66   | T-9645      |
| 1829-M-507  | T-9397      | 1905-S-201  | T-9430      | 2847-A-391  | T-9469      | 3875-A-209  | T-9534      |
| 1829-R-460  | T-9340      | 2803-G-761  | T-9560      | 2847-B-392  | T-9470      | 3875-D-212  | T-9669      |
| 1829-T-462  | T-9556      | 2803-H-762  | T-9561      | 2847-F-344  | T-9375      | 3875-H-190  | T-9302      |
| 1829-U-463  | T-9320      | 2803-H-866  | T-9508      | 2847-K-11   | T-9407      | 3875-L-194  | T-9365      |
| 1829-V-100  | T-9336      | 2803-J-868  | T-9509      | 2847-L-12   | T-9400      | 3875-N-196  | T-9512      |
| 1829-V-464  | T-9381      | 2803-K-869  | T-9510      | 2847-L-402  | T-9373      | 3875-Q-199  | T-9515      |
| 1829-V-490  | T-9432      | 2803-L-714  | T-9361      | 2847-R-330  | T-9379      | 3880-B-418  | T-9531      |
| 1829-W-257  | T-9528      | 2803-L-1130 | T-9544      | 2847-R-382  | T-9294      | 3880-C-393  | T-9322      |
| 1829-Y-467  | T-9377      | 2803-M-715  | T-9362      | 2847-U-411  | T-9542      | 3880-G-397  | T-9479      |
| 1844-G-241  | T-9502      | 2803-M-1131 | T-9545      | 2847-V-386  | T-9496      | 3880-H-398  | T-9499      |
| 1844-H-242  | T-9447      | 2803-N-716  | T-9363      | 2847-V-412  | T-9546      | 3880-J-400  | T-9466      |
| 1844-J-244  | T-9317      | 2803-N-1132 | T-9546      | 2847-W-387  | T-9443      | 3880-K-401  | T-9288      |
| 1844-K-245  | T-9563      | 2803-P-1134 | T-9547      | 2847-Y-389  | T-9452      | 3880-M-403  | T-9449      |
| 1844-N-248  | T-9533      | 2803-Q-1135 | T-9548      | 2847-Z-390  | T-9321      | 3880-R-408  | T-9353      |
| 1845-Q-121  | T-9318      | 2803-R-1136 | T-9549      | 2848-A-105  | T-9539      | 3880-V-412  | T-9540      |
| 1846-B-158  | T-9366      | 2803-S-1137 | T-9550      | 2849-C-133  | T-9388      | 3880-W-413  | T-9536      |
| 1846-D-4    | T-9409      | 2803-T-202  | T-9025      | 2849-D-134  | T-9389      | 3880-X-440  | T-9676      |
| 1846-D-186  | T-9459      | 2803-T-1138 | T-9551      | 2849-E-135  | T-9390      | 3887-W-75   | T-9427      |
| 1846-E-57   | T-9399      | 2803-U-203  | T-9026      | 2849-F-136  | T-9493      | 3887-Y-77   | T-9426      |
| 1846-E-161  | T-9351      | 2803-U-1139 | T-9552      | 2849-G-137  | T-9449      | 3889-E-187  | T-9289      |
| 1846-K-115  | T-9387      | 2803-V-204  | T-9027      | 2849-K-141  | T-9541      | 3889-F-188  | T-9537      |
| 1846-L-168  | T-9350      | 2803-V-1140 | T-9553      | 2849-L-142  | T-9253      | 3889-H-190  | T-9346      |
| 1846-R-148  | T-9380      | 2803-W-205  | T-9028      | 2858-B-2    | T-9403      | 3890-G-267  | T-9335      |
| 1846-S-149  | T-9376      | 2808-A-495  | T-9303      | 2858-C-107  | T-9391      | 3891-X-648  | T-9355      |
| 1846-Z-78   | T-9514      | 2808-B-418  | T-9360      | 2858-C-133  | T-9334      | 3892-D-914  | T-9476      |
| 1847-Q-43   | T-9472      | 2808-B-496  | T-9314      | 2858-F-110  | T-9382      | 3892-F-916  | T-9432      |
|             |             | 2808-C-497  | T-9281      | 2858-M-117  | T-9444      | 3892-K-921  | T-9500      |

# CROSS REFERENCE

## MANUFACTURING NUMBERS TO PART NUMBERS

| Mfg. No.      | Part No. | Mfg. No.     | Part No. | Mfg. No. | Part No. | Mfg. No.  | Part No. |
|---------------|----------|--------------|----------|----------|----------|-----------|----------|
| 3892-M-793    | T-9323   | A-1805-R-200 | T-9505   | B-267    | T-5349   | B-1113    | T-5352   |
| 3892-M-923    | T-9462   | A-1805-Y-103 | T-9554   | B-268    | T-5356   | B-1161    | T-5388   |
| 3892-N-976    | T-9520   | A-3892-H-918 | T-9484   | B-270    | T-5340   | B-1165    | T-5322   |
| 3892-P-796    | T-9324   | A-3897-T-592 | T-9511   | B-271    | T-5341   | B-1166    | TO-5327  |
| 3892-P-900    | T-9420   | A3897-X-596  | TO-9597  | B-281    | T-5307   | B-1169    | TO-5335  |
| 3892-P-978    | T-9532   | A-3897-Z-598 | TO-9489  | B-300    | T-5295   | B-1173    | TO-5328  |
| 3892-Q-927    | T-9465   | AP 6081      | T-5386   | B-301    | T-5256   | B-1177    | T-5332   |
| 3892-R-798    | T-9328   | B-101        | T-5275   | B-306    | T-5279   | B-1178    | T-5333   |
| 3892-S-929    | T-9445   | B-126        | T-5205   | B-307    | T-5203   | B-1190    | T-5387   |
| 3892-T-800    | T-9330   | B-127        | T-5206   | B-308    | T-5202   | B-1211    | T-5331   |
| 3892-T-904    | T-9439   | B-137        | T-5281   | B-309    | T-5358   | B-1252    | TO-5303  |
| 3892-V-802    | T-9331   | B-140        | TO-5235  | B-310    | T-5352   | B-1264    | TO-5329  |
| 3892-V-906    | T-9438   | B-143        | T-5236   | B-313    | T-5320   | B-1265    | TO-5336  |
| 3892-W-803    | T-9332   | B-144        | T-5288   | B-314    | T-5316   | B-1267    | T-5280   |
| 3892-Y-805    | T-9333   | B-145        | T-5287   | B-315    | T-5257   | B-1267-P- | TO-5403  |
| 3897-A-651    | T-9535   | B-155        | T-5259   | B-316    | T-5258   | B-1273    | T-5216   |
| 3897-F-630    | T-9557   | B-156        | T-5260   | B-319    | T-5346   | B-1415    | T-5271   |
| 3897-G-631    | T-9559   | B-157        | T-5261   | B-325    | T-5394   | B-1434    | T-5218   |
| 3897-M-663    | T-9457   | B-158        | T-5321   | B-327    | T-5266   | B-1446    | T-5390   |
| 3897-N-664    | T-9477   | B-161        | T-5308   | B-328    | T-5314   | B-1698    | T-5347   |
| 3897-R-434    | T-9374   | B-162        | T-5310   | B-332    | T-5392   | B-1776    | T-5404   |
| 3897-R-590    | T-9488   | B-166        | T-5309   | B-354    | T-5380   | B-1864    | T-5246   |
| 3897-S-617    | T-9394   | B-171        | T-5331   | B-504    | T-5289   | B-1865    | T-5264   |
| 3897-T-618    | T-9371   | B-176        | T-5223   | B-535    | T-5313   | B-1875    | T-5326   |
| 3897-V-516    | T-9417   | B-187        | T-5201   | B-582    | T-5298   | B-1998    | T-5263   |
| 3897-W-517    | T-9416   | B-230        | T-5248   | B-586    | T-5278   | B-1999    | T-5262   |
| 3897-X-596    | T-9456   | B-231        | T-5249   | B-590    | TO-5362  | B-2070    | T-5319   |
| 3897-Y-597    | T-9269   | B-232        | T-5250   | B-663    | T-5372   | B-2073    | T-5247   |
| 3905-F-32     | T-9434   | B-241        | T-5400   | B-664    | T-5361   | B-2076    | T-5245   |
| 3905-J-36     | T-9647   | B-242        | T-5363   | B-786    | T-5212   | B-2097    | T-5274   |
| 382-A         | T-9424   | B-243        | T-5364   | B-824    | T-5283   | B-2098    | T-5265   |
| 14119-A       | T-9538   | B-244        | T-5359   | B-826    | T-5284   | B-2116    | T-5389   |
| 14137-A       | FX-S38   | B-245        | T-5365   | B-836    | T-5208   | B-2128    | TO-5254  |
| 159-J         | TO-7018  | B-246        | TO-5375  | B-839    | T-5255   | B-2180    | TO-5224  |
| 47605-LY1C    | T-9518   | B-248        | T-5366   | B-877    | T-5300   | B-2195    | T-5293   |
| A-2428        | TO-5230  | B-250        | T-5367   | B-885    | T-5290   | B-2204    | T-5282   |
| A-2729        | TO-5231  | B-251        | T-5368   | B-1011   | TO-5338  | B-2218    | TO-5297  |
| A-3218        | TO-5244  | B-252        | T-5369   | B-1013   | T-5318   | B-2221    | T-5243   |
| A-5334        | TO-7034  | B-253        | T-5370   | B-1022   | TO-5306  | B-2234    | T-5221   |
| A-2-3832-N-14 | TO-9398  | B-254        | T-5374   | B-1022-A | T-5024   | B-2242    | T-5342   |
| A-1205-D-368  | T-9467   | B-257        | T-5360   | B-1033   | T-5361   | B-2272    | TO-5213  |
| A-1805-D-4    | T-9364   | B-260        | TO-5348  | B-1034   | T-5302   | B-2273    | T-5222   |
| A-1805-G-85   | T-9287   | B-261        | T-5399   | B-1041   | T-5315   | B-2274    | T-5215   |
| A-3897-M-663  | TO-9594  | B-262        | T-5357   | B-1051   | T-5381   | B-2275    | TO-5220  |
| A-1805-N-196  | T-9431   | B-263        | T-5350   | B-1055   | T-5343   | B-2276    | T-5214   |
| A-1805-P-198  | T-9296   | B-264        | T-5355   | B-1057   | T-5344   | B-2278    | T-5376   |
| A-1805-Q-199  | T-9455   | B-265        | T-5353   | B-1104   | T-5383   | B-2326    | TO-5219  |

# CROSS REFERENCE MANUFACTURING NUMBERS TO PART NUMBERS

| Mfg.<br>No. | Part<br>No. | Mfg.<br>No.   | Part<br>No. | Mfg.<br>No. | Part<br>No. | Mfg.<br>No. | Part<br>No. |
|-------------|-------------|---------------|-------------|-------------|-------------|-------------|-------------|
| B-2395      | T-5277      | GBW-30-E      | T-7618      | IGS-104     | T-7684      | MBA-24      | T-7672      |
| B-2408      | T-5027      | GBW-34        | T-7604      | IGS-1020    | TO-7693     | MBA-31      | T-7673      |
| B-2597      | TO-5225     | GBW-67        | T-7606      | IGS-2053-RB | TO-7701     | MBA-32      | T-7674      |
| B-2632      | TO-5232     | GBW-69        | T-7619      | IGT-70      | T-7689      | MPS-357     | TO-9619     |
| B-2684      | TO-5040     | GBW-72        | T-7622      | IGW-3139    | T-7699      | P-16        | T-9306      |
| B-4532      | TO-5210     | GBW-73        | T-7623      | JE-84       | T-5391      | P-28        | T-9516      |
| CB-4014     | TO-7614     | GBW-1024-L-S  | T-7602      | K-15-1002-B | T-5047      | P-112       | T-9305      |
| DE-145      | T-5382      | GCIJ-51       | T-7627      | K-15-1004   | T-5052      | P116        | T-9677      |
| DE-5476     | T-5223      | GCIJ-1014     | TO-7648     | K-15-1005   | T-5057      | P-212       | T-9370      |
| DE-50299    | T-5406      | GCIJ-1023-R   | TO-7678     | K-15-1010   | T-5048      | P-2690      | T-7084      |
| DE-51688    | T-5385      | GCIJ-1087-E   | TO-7631     | K-15-1014   | TO-5055W    | P-2706      | TO-7033     |
| DE-55118    | T-5311      | GCIJ-2006-F   | TO-7590     | K-15-1021   | T-5065      | P-2903      | T-7032      |
| DE-56080    | T-5312      | GCIJ-2012-S   | TO-7626     | K-110-B     | T-5045      | P-2949      | T-7085      |
| EB-99       | TO-7666     | GCIJ-2087-D   | TO-7617     | K-55-P      | T-5053      | P-7344      | TO-7031W    |
| EB-108      | T-7670      | GCY-25        | T-7605      | K-111       | T-5195      | PS-1274     | TO-7664     |
| EB-7805     | T-7667      | GEO-1005-H    | T-7611      | K-157       | T-5010      | PW-212      | T-9393      |
| EB-7806     | T-7668      | GEO-2082      | TO-7603     | K-365       | T-5050      | PX-55       | T-7615      |
| EB-7807     | T-7669      | GFE-37        | T-7607      | K-418       | T-5058      | R-333½      | T-9406      |
| EB-8503     | T-7671      | H-11602       | T-5373      | K-487       | T-5054      | R-6370      | TO-8735     |
| EO-8657     | TO-7521     | IAD-7         | T-7711      | K-70401     | T-5049      | S-168-D     | T-9450      |
| EW-200      | T-7676      | IAD-8         | T-7710      | KT-15-B     | TO-5011     | S-169-D     | T-9494      |
| G-4070      | T-5233      | IAD-10        | T-7709      | LW-166      | T-9295      | S-5067-A    | T-9402      |
| G-8878      | T-5226      | IAD-1004      | T-7697      | LW-168      | TO-9442     | SK-15136    |             |
| G-9046      | T-5234      | IAD-1100-RE-1 | T-7688      | LW-1630     | T-9347      | SK-15143    |             |
| G-9431      | T-5236      | IAD-2001      | TO-7707     | MA-265      | T-5384      | SP-854      | T-7587      |
| G-9595      | T-5237      | IAD-2004      | TO-7696     | MN-21       | T-7609      | SW-213      | T-7681      |
| G-9820-2    | T-5238      | IAD-2015      | TO-7695     | MU-54       | T-7633      | SW-2916-B   | TO-7677     |
| G-9848      | T-5227      | IG-90         | T-7680      | MW-20-A     | T-7641      | TOR-B-912X  | T-9299      |
| G-9897      | T-5235      | IG-94         | T-7692      | MZ-170      | T-7675      | W-48-X-4    | T-7001      |
| G-13504     | T-8754      | IG-579-A      | T-7714      | MZ-197      | T-7649      | W-27021     | TO-8524     |
| GG-164      | T-9576      | IG-636-AS     | TO-7704     | MAB-30      | T-7654      | W-264000    | T-8535      |
| GK-20       | T-7061      | IG-644        | T-7679      | MAB-35      | T-7640      | W-265000    | T-8550      |
| GK-38       | T-7644      | IG-676        | T-7698      | MAB-85      | T-7646      | W-266000    | T-8540      |
| GR-32       | T-7589      | IG-680        | T-7686      | MAB-88      | T-7665      | W-269000    | T-8551      |
| GV-104      | T-7588      | IG-816-C      | T-7683      | MAB-1024-R  | T-7642      | X-74        | T-5239      |
| GAL-44      | T-7610      | IG-1324-C     | TO-7694     | MAB-2040    | TO-7662     | X-328       | T-5240      |
| GAM-34      | T-7597      | IG-1657-R     | T-7691      | MAK-61      | T-7637      | X-441       | T-7598      |
| GAM-110-S   | T-9593      | IG-4070       | TO-7523     | MAK-80      | T-7645      | X-490       | T-7713      |
| GAM-110-B   | TO-7592     | IGH-28        | T-7687      | MAW-12      | T-7650      | X-1021      | T-5396      |
| GAR-63      | T-7600      | IGL-8         | T-7712      | MAW-13      | T-7651      | X-1270      | T-7613      |
| GAR-64      | T-7599      | IGL-9         | T-7708      | MAW-2012-S  | TO-7652     | X-1287      | T-5228      |
| GAR-73      | T-7620      | IGP-34        | T-7595      | MAW-2105    | TO-7639     | X-1300      | T-5229      |
| GAR-98-A    | T-7621      | IGP-3028-FS   | TO-7700     | MAX-3059-E  | TO-7634     | X-1552      | T-5241      |
| GAR-171     | T-7591      | IGS-21        | T-7682      | MAX-3159    | T-7643      | X-1580      | T-9437      |
| GBF-79      | T-7632      | IGS-99        | T-7685      | MAX-4081    | T-7549      | X-1904      | T-5242      |
| GBM-21      | T-7586      |               |             | MBA-21      | T-7647      | X-2878      | T-7690      |
|             |             |               |             | MBA-22      | T-7648      | X-2961      | T-7594      |

## Repair Parts List for Cockshutt "30" Tractor

Page 27

| Part No.                               | DESCRIPTION                                                       | No. Std. | Req'd. RC | Serial No. | Plate No. |
|----------------------------------------|-------------------------------------------------------------------|----------|-----------|------------|-----------|
| <b>AIR CLEANER</b>                     |                                                                   |          |           |            |           |
| 1/4"-20                                | Nut on wing bolt.....                                             | 1        | 1         | 1-         | A-38      |
| 3/8"-16 x 1"                           | Bolt, air cleaner to support.....                                 | 2        | 2         | 1-         | A-38      |
| 3/8"-16                                | Nut, air cleaner to support.....                                  | 2        | 2         | 1-         | A-38      |
| 3/8"                                   | Lockwasher, air cleaner to support.....                           | 2        | 2         | 1-         | A-38      |
| <b>AIR INTAKE AND EXHAUST MANIFOLD</b> |                                                                   |          |           |            |           |
| 7/16"-20                               | Hexagon nut on exhaust and intake manifold stud.....              | 8        | 8         | 1-         | B-42      |
| 3/8"-16 x 3/4"                         | Capscrew, exhaust flange to exhaust manifold.....                 | 2        | 2         | 1-         | .....     |
| 3/16"-18 x 1"                          | Capscrew, carburetor to intake manifold.....                      | 2        | 2         | 1-         | .....     |
| <b>BELT PULLEY DRIVE</b>               |                                                                   |          |           |            |           |
| 3/8" x 1 1/16"                         | Capscrew, shift lever to quadrant.....                            | 1        | 1         | 1-         | A-61      |
| 3/8"                                   | Lockwasher to capscrew, shift lever to quadrant.....              | 1        | 1         | 1-         | A-41      |
| 1/2" N.C.                              | Hexagon nut on stud, carrier to case.....                         | 4        | 4         | 1-         | A-41      |
| 1/2"                                   | Lockwasher on stud, carrier to case.....                          | 4        | 4         | 1-         | A-41      |
| <b>BRAKES</b>                          |                                                                   |          |           |            |           |
| 1/8" x 1"                              | Nut, brake band adjusting end.....                                | 2        | 2         | 1-         | A-39      |
| 7/16" x 1"                             | Capscrew, brake to case.....                                      | 8        | 8         | 1-         | A-39      |
| 7/16"                                  | Lockwasher on capscrew, brake cover to case.....                  | 8        | 8         | 1-         | A-39      |
| 3/16" x 3/4"                           | Capscrew, brake adjusting hole cover.....                         | 4        | 4         | 1-         | A-39      |
| 3/16"                                  | Lockwasher on capscrew, brake adjusting hole cover.....           | 4        | 4         | 1-         | A-39      |
| <b>CHASSIS</b>                         |                                                                   |          |           |            |           |
| 1/2"-13x1 3/4"                         | Bolt, front engine mount to engine.....                           | 2        | 2         | 1-         | .....     |
| 1/2"-13                                | Nut, front engine mount to engine.....                            | 2        | 2         | 1-         | .....     |
| 1/2"                                   | Lockwasher, front engine mount to engine.....                     | 2        | 2         | 1-         | .....     |
| 1/2"-13x2 1/2"                         | Bolt, front engine mount to frame.....                            | 2        | 2         | 1-         | .....     |
| 1/2"-13                                | Nut, front engine mount to engine.....                            | 2        | 2         | 1-         | .....     |
| 1/2"                                   | Lockwasher, front engine mount to frame.....                      | 2        | 2         | 1-         | .....     |
| 1/2"-13x1 1/2"                         | Capscrew, pedestal to frame.....                                  | 8        | 8         | 1-         | .....     |
| 1/2"                                   | Lockwasher, pedestal to frame.....                                | 8        | 8         | 1-         | .....     |
| 1/2"-13x1 1/2"                         | Capscrew, intermediate case to frame.....                         | 6        | 6         | 1-         | .....     |
| 1/2"                                   | Lockwasher, intermediate case to frame.....                       | 6        | 6         | 1-         | .....     |
| <b>CLUTCH SHAFT CASE</b>               |                                                                   |          |           |            |           |
| 3/8" x 1 1/16"                         | Capscrew for retainer clutch shaft rear bearing.....              | 2        | 2         | 1-         | A-45      |
| 3/8" x 1 3/16"                         | Capscrew, clutch shaft case inspection cover.....                 | 11       | 11        | 1-         | A-45      |
| 3/8"                                   | Lockwasher on capscrew, clutch shaft case inspection cover.....   | 11       | 11        | 1-         | A-45      |
| 1/2" x 1"                              | Capscrew, pulley drive opening to case.....                       | 4        | 4         | 1-         | A-41      |
| 1/2"                                   | Lockwasher on capscrew, pulley drive opening cover to case.....   | 4        | 4         | 1-         | A-41      |
| 7/16" x 3/4"                           | Capscrew on cover, left hand clutch shaft case.....               | 3        | 3         | 1-         | A-45      |
| 7/16"                                  | Lockwasher on capscrew on cover, left hand clutch shaft case..... | 3        | 3         | 1-         | A-45      |
| 3/8" x 3/4"                            | Capscrew on cover creeper shift shaft hole.....                   | 2        | 2         | 1-         | A-45      |
| 3/8"                                   | Lockwashers on capscrew for cover creeper shift shaft hole.....   | 2        | 2         | 1-         | A-45      |
| 3/8" x 1 1/8"                          | Capscrew on cap clutch shaft case forward.....                    | 3        | 3         | 1-         | A-45      |
| 3/8"                                   | Lockwasher on capscrew, cap, clutch shaft case forward.....       | 3        | 3         | 1-         | A-45      |
| 1/2"                                   | Hexagon nut, on stud clutch shaft case to transmission case.....  | 6        | 6         | 1-         | B-45      |
| 1/2" x 1 1/4"                          | Capscrew, clutch shaft case to transmission case.....             | 2        | 2         | 1-         | A-45      |
| 1/2"                                   | Lockwasher on capscrew clutch shaft to transmission case.....     | 8        | 8         | 1-         | A-45      |
| 3/8" x 1 3/8"                          | Capscrew on clutch shaft cap to case.....                         | 3        | 3         | 1-         | A-44      |
| 3/8"                                   | Lockwashers on capscrews for cap clutch shaft to case.....        | 3        | 3         | 1-         | A-44      |

| Part No.                     | DESCRIPTION                                                 | No. Std. | Req'd. RC | Serial No. | Plate No. |
|------------------------------|-------------------------------------------------------------|----------|-----------|------------|-----------|
| COIL                         |                                                             |          |           |            |           |
| 1/4"-20x1"                   | Bolt, coil support, bracket to end.....                     | 1        | 1         | 1-         | .....     |
| 1/4"-20                      | Nut, coil support, bracket to end.....                      | 1        | 1         | 1-         | .....     |
| 1/4"                         | Lockwasher, coil support, bracket to end.....               | 1        | 1         | 1-         | .....     |
| COOLING SYSTEM               |                                                             |          |           |            |           |
| 3/8"                         | Lockwasher, thermostat housing capscrow.....                | 2        | 2         | 1-         | A-43      |
| 3/8"-16x2 1/2"               | Capscrew, thermostat housing.....                           | 2        | 2         | 1-         | A-43      |
| 5/16"-18x1 1/8"              | Capscrew, thermostat bypass line.....                       | 2        | 2         | 1-         | A-43      |
| 5/16"                        | Lockwasher on capscrow for bypass line.....                 | 2        | 2         | 1-         | A-43      |
| 5/16"-18                     | Hexagon nut on capscrow bypass line.....                    | 2        | 2         | 1-         | A-43      |
| 1/2"-13x3 1/4"               | Capscrews, water inlet pipe.....                            | 1        | 1         | 1-         | A-43      |
| 1/2"                         | Flat washer on capscrow, water inlet pipe.....              | 1        | 1         | 1-         | A-43      |
| 5/16"                        | Lockwasher, water pump cover capscrow.....                  | 4        | 4         | 1-         | A-43      |
| 5/16"-18x3/16"               | Capscrew, water pump cover.....                             | 4        | 4         | 1-         | A-43      |
| 1/2"-13x3"                   | Capscrew, water pump to cylinder head.....                  | 1        | 1         | 1-         | A-43      |
| 1/2"                         | Flat washer for capscrow pump to cylinder head.....         | 1        | 1         | 1-         | A-43      |
| 3/8"-16x5/8"                 | Carriage bolt, support link.....                            | 1        | 1         | 1-         | A-43      |
| 3/8"-16                      | Hexagon nut, carriage bolt support link.....                | 1        | 1         | 1-         | A-43      |
| 3/8"-16x3/4"                 | Capscrew at bottom of support link.....                     | 1        | 1         | 1-         | A-43      |
| 3/8"                         | Lockwasher on capscrow at bottom of support link.....       | 1        | 1         | 1-         | A-43      |
| 5/16"-18x3/4"                | Capscrew, water pump pulley.....                            | 4        | 4         | 1-         | A-43      |
| 5/16"                        | Lockwasher for capscrow on water pump pulley.....           | 4        | 4         | 1-         | A-43      |
| CYLINDER BLOCK AND CRANKCASE |                                                             |          |           |            |           |
| 5/16"-18x1 1/2"              | Capscrew for distributor support.....                       | 1        | 1         | 1-         | A-42      |
| 5/16"                        | Lockwasher on capscrow for distributor support.....         | 1        | 1         | 1-         | A-42      |
| 5/16"-24                     | Nut, pad cover.....                                         | 2        | 2         | 1-         | A-42      |
| 5/16"                        | Lockwasher on stud for pad cover.....                       | 2        | 2         | 1-         | A-42      |
| 3/8"-24                      | Nut, oil pressure regulator.....                            | 1        | 1         | 1-         | A-42      |
| CYLINDER HEAD AND VALVES     |                                                             |          |           |            |           |
| 3/8"                         | Acorn nut, cylinder head cover.....                         | 2        | 2         | 1-         | A-42      |
| 1/2"-20                      | Nut, cylinder head stud.....                                | 14       | 14        | 1-         | A-42      |
| DIFFERENTIAL                 |                                                             |          |           |            |           |
| 1/2"x1 13/16"                | Capscrew, bevel gear drive to differential case.....        | 12       | 12        | 1-         | A-39      |
| 1/16"x1 1/4"                 | Capscrew, differential bearing cap.....                     | 12       | 12        | 1-         | A-39      |
| 1/16"                        | Lockwasher on capscrow for differential bearing cap.....    | 12       | 12        | 1-         | A-39      |
| 1/2"                         | Lockwasher on stud, rear transmission case cover.....       | 10       | 10        | 1-         | A-39      |
| 1/2"                         | N.C. hexagon nut on stud, rear transmission case cover..... | 10       | 10        | 1-         | A-39      |
| FAN                          |                                                             |          |           |            |           |
| 5/16"-18x2 1/4"              | Capscrew fan assembly to motor.....                         | 4        | 4         | 1-         | A-43      |
| 5/16"                        | Lockwasher fan assembly to motor.....                       | 4        | 4         | 1-         | A-43      |
| 5/16"-18x1"                  | Bolt, fan belt tension bar to generator.....                | 1        | 1         | 1-         | .....     |
| 5/16"-18                     | Nut, fan belt tension bar to generator.....                 | 1        | 1         | 1-         | .....     |
| 5/16"                        | Lockwasher, fan belt tension bar to generator.....          | 1        | 1         | 1-         | .....     |
| FENDERS                      |                                                             |          |           |            |           |
| 5/8"-11x1"                   | Capscrew, fender to transmission.....                       | 4        | 4         | 1-         | .....     |
| 5/8"-11x1 3/4"               | Capscrew, fender to transmission.....                       | 4        | 4         | 1-         | .....     |
| 5/8"                         | Lockwasher, fender to transmission.....                     | 8        | 8         | 1-         | .....     |

## Repair Parts List for Cockshutt "30" Tractor

Page 29

| Part No.                     | DESCRIPTION                                                           | No. Std. | Req'd. RC | Serial No. | Plate No. |
|------------------------------|-----------------------------------------------------------------------|----------|-----------|------------|-----------|
| FLYWHEEL AND HOUSINGS        |                                                                       |          |           |            |           |
| 1/2"-20x1 1/4"               | Capscrew, flywheel housing.....                                       | 4        | 4         | 1-         | B-42      |
| 1/2"                         | Lockwasher on flywheel housing capscrew.....                          | 4        | 4         | 1-         | B-42      |
| 3/8"-16x1 3/4"               | Capscrew, flywheel housing plate.....                                 | 5        | 5         | 1-         | B-42      |
| 3/8"                         | Lockwasher on flywheel housing plate capscrews.....                   | 5        | 5         | 1-         | B-42      |
| FRONT AXLE                   |                                                                       |          |           |            |           |
| 3/32" x 1"                   | Cotter pin in tie rods, front axle.....                               | 4        | ....      | 1-         | A-41      |
| 5/16"-24                     | Nut hexagon for bolt, tie rod clamp, front axle.....                  | 4        | ....      | 1-         | B-41      |
| 5/16"                        | Lockwasher, for bolt tie rod clamp, front axle.....                   | 4        | ....      | 1-         | B-41      |
| 1/4"-24                      | Nut, slotted, left and right hand steering socket.....                | 2        | ....      | 1-         | A-41      |
| 5/16"-24x1 1/2"              | Bolt, hexagon head, tie rod clamp, front axle (check TO-8848).....    | 4        | ....      | 1-         | B-41      |
| 1/2"-13x2 1/2"               | Adjusting set screw kingpin, steering arm.....                        | 2        | ....      | 1-         | B-41      |
| GAS TANK AND SUPPORT         |                                                                       |          |           |            |           |
| 3/8"-16x1"                   | Carriage bolt, gas tank to gas tank support.....                      | 3        | 3         | 1-         | .....     |
| 3/8"-16                      | Nut, gas tank to gas tank support.....                                | 3        | 3         | 1-         | .....     |
| 3/8"                         | Lockwasher, gas tank to gas tank support.....                         | 3        | 3         | 1-         | .....     |
| 3/8"-16x3 1/4"               | Bolt, rear channel to gas tank support.....                           | 4        | 4         | 1-         | .....     |
| 3/8"-16                      | Nut, rear channel to gas tank support.....                            | 4        | 4         | 1-         | .....     |
| 3/8"                         | Lockwasher, rear channel to gas tank support.....                     | 4        | 4         | 1-         | .....     |
| 1/2"-13x1"                   | Capscrew, rear gas tank support to intermediate case.....             | 2        | 2         | 1-         | .....     |
| 1/2"                         | Lockwasher, rear gas tank support to intermediate case.....           | 2        | 2         | 1-         | .....     |
| GEAR COVER AND FRONT SUPPORT |                                                                       |          |           |            |           |
| 3/8"-16                      | Nut, gear cover stud.....                                             | 2        | 2         | 1-         | A-43      |
| 3/8"-16                      | Nut, front support bracket.....                                       | 1        | 1         | 1-         | A-43      |
| 3/8"-16x2 1/4"               | Capscrew, gear cover.....                                             | 1        | 1         | 1-         | A-43      |
| 3/8"-16x1"                   | Capscrew, gear cover.....                                             | 9        | 9         | 1-         | A-43      |
| 3/8"                         | Lockwashers on capscrews for gear cover.....                          | 9        | 9         | 1-         | A-43      |
| 3/8"-24                      | Nut on long capscrew, gear cover.....                                 | 1        | 1         | 1-         | A-43      |
| 3/8"-16x5/8"                 | Capscrew, front cylinder plate.....                                   | 2        | 2         | 1-         | A-63      |
| 3/8"                         | Lockwasher on capscrew for front cylinder plate.....                  | 2        | 2         | 1-         | A-43      |
| GENERATOR                    |                                                                       |          |           |            |           |
| 5/8"                         | Lockwasher, armature shaft nut, driving head on generator.....        | 1        | 1         | 1-         | A-37      |
| 1/4"                         | Lockwasher, screw, frame to heads on generator.....                   | 2        | 2         | 1-         | A-37      |
| 1/2"-13x7/8"                 | Capscrew, generator mount to engine.....                              | 2        | 2         | 1-         | .....     |
| 1/2"                         | Lockwasher, generator mount to engine.....                            | 2        | 2         | 1-         | .....     |
| 5/16"-18x1"                  | Capscrew, generator to generator mount.....                           | 2        | 2         | 1-         | .....     |
| 5/16"-18                     | Nut, generator to generator mount.....                                | 2        | 2         | 1-         | .....     |
| 5/16"                        | Lockwasher, generator to generator mount.....                         | 2        | 2         | 1-         | .....     |
| GOVERNOR                     |                                                                       |          |           |            |           |
| 5/16"-18x1 1/4"              | Capscrew, drilled head for governor control adjusting screw stop..... | 1        | 1         | 1-         | A-38      |
| 3/8"-16x3 3/8"               | Capscrew, governor.....                                               | 2        | 2         | 1-         | A-43      |
| 3/8"                         | Lockwasher on capscrew for governor.....                              | 2        | 2         | 1-         | A-43      |
| 3/8"-16                      | Hexagon nut for capscrew on governor.....                             | 2        | 2         | 1-         | A-43      |
| 5/16"-18x5/8"                | Capscrew, governor control arm to engine.....                         | 2        | 2         | 1-         | .....     |
| 5/16"                        | Lockwasher, governor control arm to engine.....                       | 2        | 2         | 1-         | .....     |
| INSTRUMENT PANEL             |                                                                       |          |           |            |           |
| 3/8"-16x1"                   | Capscrew, instrument panel to steering column casting.....            | 4        | 4         | 1-         | .....     |
| 3/8"                         | Lockwasher, instrument panel to steering column casting.....          | 4        | 4         | 1-         | .....     |

| Part No.               | DESCRIPTION                                                                               | No. Req'd. |    | Serial | Plate |
|------------------------|-------------------------------------------------------------------------------------------|------------|----|--------|-------|
|                        |                                                                                           | Std.       | RC | No.    | No.   |
| LIVE POWER TAKE-OFF    |                                                                                           |            |    |        |       |
| Rear and Front Section |                                                                                           |            |    |        |       |
| 3/8"x13/16"            | Capscrew, drive shaft bearing cover.....                                                  | 3          | 3  | 1-     | A-44  |
| 3/8"                   | Lockwasher on capscrew, drive shaft bearing cover.....                                    | 3          | 3  | 1-     | A-44  |
| 3/8"x13/16"            | Capscrew, intermediate bearing shaft cover.....                                           | 3          | 3  | 1-     | B-44  |
| 3/8"                   | Lockwasher on capscrew, intermediate bearing shaft cover.....                             | 3          | 3  | 1-     | B-44  |
| 5/16"-18x1 1/8"        | Capscrew, clutch to mounting plate.....                                                   | 6          | 6  | 1-     | B-44  |
| 5/16"                  | Lockwasher on capscrew clutch to mounting plate.....                                      | 6          | 6  | 1-     | B-44  |
| 3/8"x1 1/4"            | Capscrew, intermediate shaft, rear bearing cap.....                                       | 3          | 3  | 1-     | B-44  |
| 3/8"                   | Lockwasher on capscrew, intermediate shaft, rear bearing cap.....                         | 3          | 3  | 1-     | B-44  |
| 3/8"x13/16"            | Capscrew, driven shaft, front bearing cover.....                                          | 3          | 3  | 1-     | A-44  |
| 3/8"                   | Lockwasher on capscrew, driven shaft front bearing cover.....                             | 3          | 3  | 1-     | A-44  |
| 3/8"x1 1/4"            | Capscrew, driven shaft rear cap.....                                                      | 3          | 3  | 1-     | B-44  |
| 3/8"                   | Lockwasher on capscrew, driven shaft rear cap.....                                        | 3          | 3  | 1-     | B-44  |
| 3/8"x7/8"              | Capscrew, driver shaft shield, and standard power take-off.....                           | 3          | 3  | 1-     | B-29  |
| 3/8"                   | Lockwasher on capscrew, driven shaft shield, and standard power take-off.....             | 3          | 3  | 1-     | B-29  |
| 3/8"x1 1/4"            | Capscrew, case to adapter.....                                                            | 11         | 11 | 1-     | A-44  |
| 3/8"x1"                | Capscrew, case to adapter.....                                                            | 1          | 1  | 1-     | A-44  |
| 1/4"-28x3/4"           | Capscrew, bracket and spacer assembly to pressure plate (check TO-9598).....              | 3          | 3  | 1-     | B-44  |
| 1/4"                   | Lockwasher on capscrew bracket and spacer assembly to pressure plate (check TO-9598)..... | 3          | 3  | 1-     | B-44  |
| 3/32"x1 1/2"           | Cotter pin through link pin (check TO-9598).....                                          | 6          | 6  | 1-     | B-44  |
| OIL FILTER             |                                                                                           |            |    |        |       |
| 3/8"-16x5/8"           | Capscrew, oil filter to rear engine mount.....                                            | 2          | 2  | 1-     | ..... |
| 3/8"                   | Lockwasher, oil filter to rear engine mount.....                                          | 2          | 2  | 1-     | ..... |
| OIL PUMP               |                                                                                           |            |    |        |       |
| 3/8"-16x7/8"           | Capscrew for oil pan.....                                                                 | 14         | 14 | 1-     | A-42  |
| 3/8"                   | Lockwasher on capscrew for oil pan.....                                                   | 14         | 14 | 1-     | A-42  |
| 1/4"-20x5/8"           | Capscrew for oil pump cover.....                                                          | 6          | 6  | 1-     | A-42  |
| 1/4"                   | Lockwasher on capscrew for oil pump cover.....                                            | 6          | 6  | 1-     | A-42  |
| 3/8"-16x1 1/4"         | Capscrew for oil pump.....                                                                | 2          | 2  | 1-     | A-42  |
| 3/8"                   | Lockwasher on capscrew for oil pump.....                                                  | 2          | 2  | 1-     | A-42  |
| PISTON                 |                                                                                           |            |    |        |       |
| 3/32"x3/4"             | Cotter pin, connecting rod bolt nut.....                                                  | 8          | 8  | 1-     | B-42  |
| 3/8"-24                | Nut connecting rod bolt.....                                                              | 8          | 8  | 1-     | B-42  |
| RADIUS ROD             |                                                                                           |            |    |        |       |
| 3/4"-16x3 3/8"         | Bolt, radius rod to front axle.....                                                       | 1          | 1  | 1-     | B-41  |
| 3/4"-16                | Nut, radius rod to front axle.....                                                        | 1          | 1  | 1-     | B-41  |
| 3/4"                   | Lockwasher, radius rod to front axle.....                                                 | 1          | 1  | 1-     | B-41  |
| 3/8"-11x2 1/4"         | Capscrew, radius rod, anchor to frame.....                                                | 3          | 3  | 1-     | ..... |
| RADIATOR GRILL         |                                                                                           |            |    |        |       |
| 1/8"x7/32"             | Rivet, for spring, radiator grill.....                                                    | 4          | 4  | 1-     | B-37  |
| 1/4"-20x5/8"           | Bolt, grill reinforcement to frame.....                                                   | 1          | 1  | 1-     | B-41  |
| 1/4"-20                | Nut, grill reinforcement to frame.....                                                    | 1          | 1  | 1-     | B-41  |
| 1/4"                   | Lockwasher, grill reinforcement to frame.....                                             | 1          | 1  | 1-     | B-41  |
| 1/4"-20x3/4"           | Bolt, hood to grill.....                                                                  | 4          | 4  | 1-     | ..... |
| 1/4"-20                | Nut, hood to grill.....                                                                   | 4          | 4  | 1-     | ..... |
| 1/4"                   | Lockwasher, hood to grill.....                                                            | 4          | 4  | 1-     | ..... |
| 5/16"-18x3/4"          | Capscrew, grill to radiator.....                                                          | 4          | 4  | 1-     | ..... |

## Repair Parts List for Cockshutt "30" Tractor

Page 31

| Part No.                                      | DESCRIPTION                                                                 | No. Req'd. |      | Serial No. | Plate No. |
|-----------------------------------------------|-----------------------------------------------------------------------------|------------|------|------------|-----------|
|                                               |                                                                             | Std.       | RC   |            |           |
| $\frac{5}{16}$ " x $\frac{3}{4}$ " x 16 gauge | Flat washer, grill to radiator.....                                         | 4          | 4    | 1-         | .....     |
| $\frac{1}{2}$ "-13x1"                         | Capscrew, radiator grill to frame.....                                      | 4          | 4    | 1-         | .....     |
| $\frac{1}{2}$ "-13x1 $\frac{1}{4}$ "          | Capscrew, radiator grill to frame.....                                      | 1          | 1    | 1-         | .....     |
| $\frac{1}{2}$ "                               | Lockwasher, radiator grill to frame.....                                    | 5          | 5    | 1-         | .....     |
| $\frac{1}{2}$ "                               | Flat washer, radiator grill to frame.....                                   | 4          | 4    | 1-         | .....     |
| <b>ROSS STEERING GEAR</b>                     |                                                                             |            |      |            |           |
| $\frac{3}{8}$ "                               | Lockwasher, capscrew in steering gear adjusting pad.....                    | 2          | 2    | 1-         | B-40      |
| $\frac{3}{8}$ "-24x1"                         | Capscrew, housing end cover on steering gear.....                           | 4          | 4    | 1-         | B-40      |
| $\frac{3}{8}$ "                               | Lockwasher, capscrew housing end cover on steering gear.....                | 4          | 4    | 1-         | B-40      |
| $\frac{5}{16}$ " x $\frac{9}{16}$ "           | Capscrew, housing top cover on steering gear.....                           | 5          | 5    | 1-         | B-40      |
| $\frac{5}{16}$ "                              | Lockwasher on capscrew housing top cover on steering gear.....              | 5          | 5    | 1-         | B-40      |
| <b>SEAT SUPPORT</b>                           |                                                                             |            |      |            |           |
| $\frac{1}{2}$ "-13                            | Nut, hexagon.....                                                           | 1          | 1    | 1-         | A-40      |
| $\frac{1}{2}$ "-13x1 $\frac{1}{2}$ "          | Carriage bolt, seat to support.....                                         | 1          | 1    | 1-         | A-40      |
| $\frac{1}{2}$ "                               | Lockwasher, bolt seat to support.....                                       | 1          | 1    | 1-         | A-40      |
| <b>STANDARD POWER TAKE-OFF</b>                |                                                                             |            |      |            |           |
| $\frac{3}{8}$ "                               | Lockwasher on capscrew, case to adapter.....                                | 12         | 12   | 1-         | A-44      |
| $\frac{3}{8}$ " x $\frac{3}{4}$ "             | Capscrew, drive shaft bearing cap.....                                      | 2          | 2    | 1-         | B-44      |
| $\frac{3}{8}$ " x 1"                          | Capscrew, drive shaft bearing cap.....                                      | 1          | 1    | 1-         | B-44      |
| $\frac{3}{8}$ "                               | Lockwasher on capscrew, drive shaft bearing cap.....                        | 3          | 3    | 1-         | B-44      |
| <b>STARTING MOTOR</b>                         |                                                                             |            |      |            |           |
| $\frac{1}{4}$ "                               | Lockwasher, bolt, frame to heads.....                                       | 2          | 2    | 1-         | B-38      |
| No. 10-32x1 $\frac{1}{4}$ "                   | Round head screw, cover band.....                                           | 1          | 1    | 1-         | B-38      |
| No. 10-32                                     | Nut, square, cover band screw.....                                          | 1          | 1    | 1-         | B-38      |
| $\frac{5}{16}$ "-24                           | Nut, hexagon, terminal stud on starter.....                                 | 1          | 1    | 1-         | B-38      |
| No. 10-32x $\frac{1}{2}$ "                    | Screw, round head, switch contact.....                                      | 1          | 1    | 1-         | B-38      |
| $\frac{1}{16}$ " x $\frac{1}{2}$ "            | Cotter pin, in switch lever pin on starter.....                             | 1          | 1    | 1-         | B-38      |
| $\frac{5}{16}$ "-18                           | Jam nut on starter control rod.....                                         | 1          | 1    | 1-         | B-39      |
| <b>SPINDLE</b>                                |                                                                             |            |      |            |           |
| $\frac{3}{4}$ "-10                            | Nut, top of spindle king pin.....                                           | 2          | .... | 1-         | B-41      |
| $\frac{3}{4}$ "                               | Washer, top of spindle king pin.....                                        | 2          | .... | 1-         | B-41      |
| <b>TRANSMISSION AND CASE</b>                  |                                                                             |            |      |            |           |
| $\frac{3}{8}$ " x 1"                          | Capscrew, front bearing retainer main transmission shaft.....               | 2          | 2    | 1-         | B-45      |
| $\frac{3}{8}$ "                               | Lockwasher on capscrew, front bearing retainer main transmission shaft..... | 2          | 2    | 1-         | B-45      |
| $\frac{3}{16}$ " x 2"                         | Cotter pin through nut on bével pinion shaft.....                           | 1          | 1    | 1-         | B-45      |
| $\frac{3}{8}$ " x 1"                          | Capscrew, tower to transmission case.....                                   | 7          | 7    | 1-         | B-45      |
| $\frac{3}{8}$ "                               | Lockwasher on capscrew, tower to transmission case.....                     | 7          | 7    | 1-         | B-45      |
| $\frac{3}{8}$ " x 1 $\frac{1}{4}$ "           | Capscrew, tower to transmission case.....                                   | 2          | 2    | 1-         | B-45      |
| <b>TRANSMISSION FINAL DRIVE</b>               |                                                                             |            |      |            |           |
| $\frac{5}{8}$ "                               | S.A.E. nut, housing end to case.....                                        | 14         | 14   | 1-         | A-39      |
| $\frac{5}{8}$ "                               | Lockwasher, nut, housing end to case.....                                   | 14         | 14   | 1-         | A-39      |
| $\frac{3}{16}$ " x 2 $\frac{3}{4}$ "          | Cotter pin for nut, outer axle drive shaft.....                             | 2          | 2    | 1-         | B-39      |
| <b>VALVE OPERATING MECHANISM</b>              |                                                                             |            |      |            |           |
| $\frac{3}{8}$ "-24                            | Hexagon lock-nut, rocker arm adjusting screw.....                           | 8          | 8    | 1-         | B-42      |
| $\frac{3}{8}$ "-24                            | Nut for rocker arm bracket capscrew.....                                    | 2          | 2    | 1-         | B-42      |
| $\frac{3}{8}$ "-16x3"                         | Capscrew, rocker arm bracket.....                                           | 2          | 2    | 1-         | B-42      |
| $\frac{3}{8}$ "-16x $\frac{9}{16}$ "          | Capscrew, camshaft thrust plate.....                                        | 2          | 2    | 1-         | B-42      |
| $\frac{3}{8}$ "                               | Lockwasher on capscrew for camshaft thrust plate.....                       | 2          | 2    | 1-         | B-42      |

| Part No.                    | DESCRIPTION                                                                      | No. Std. | Req'd. RC | Serial No. | Plate No. |
|-----------------------------|----------------------------------------------------------------------------------|----------|-----------|------------|-----------|
| <b>WATER OUTLET</b>         |                                                                                  |          |           |            |           |
| $\frac{3}{8}$ "-16x1"       | Capscrew, water outlet to engine.....                                            | 1        | 1         | 1-         | B-41      |
| $\frac{3}{8}$ "             | Lockwasher, water outlet to engine.....                                          | 1        | 1         | 1-         | B-41      |
| <b>No. 6 WASHER PLAIN</b>   |                                                                                  |          |           |            |           |
| No. 6                       | Spring clip on distributor.....                                                  | 1        | 1         | 1-         | A-38      |
| <b>No. 6 LOCKWASHER</b>     |                                                                                  |          |           |            |           |
| No. 6                       | Spring clip on distributor.....                                                  | 1        | 1         | 1-         | A-38      |
|                             | Condenser mounting on distributor.....                                           | 1        | 1         | 1-         | A-38      |
|                             | Connector screw on distributor.....                                              | 1        | 1         | 1-         | A-38      |
| <b>No. 6 SCREW</b>          |                                                                                  |          |           |            |           |
| No. 6-32x $\frac{5}{16}$ "  | Round head spring clip on distributor.....                                       | 1        | 1         | 1-         | A-38      |
| No. 6-32x $\frac{5}{32}$ "  | Screw—condenser mounting fillister head on distributor.....                      | 1        | 1         | 1-         | A-38      |
| No. 6-32x $\frac{3}{16}$ "  | Connector to plate on distributor.....                                           | 1        | 1         | 1-         | A-38      |
| <b>No. 8 WASHER PLAIN</b>   |                                                                                  |          |           |            |           |
| No. 8                       | Contact set screw on distributor.....                                            | 1        | 1         | 1-         | A-38      |
| <b>No. 8 LOCKWASHER</b>     |                                                                                  |          |           |            |           |
| No. 8                       | Lockwasher commutator end cover screw on generator.....                          | 4        | 4         | 1-         | A-37      |
| No. 8                       | Lockwasher brush holder screw on generator.....                                  | 2        | 2         | 1-         | A-37      |
| No. 8                       | Brush lead screw on generator.....                                               | 3        | 3         | 1-         | A-37      |
| <b>No. 8 SCREW</b>          |                                                                                  |          |           |            |           |
| No. 8-32x $\frac{5}{16}$ "  | Round head brush screw on generator.....                                         | 2        | 2         | 1-         | A-37      |
| No. 8-32x $\frac{3}{4}$ "   | Fillister head screw in carburetor shaft stop in throttle body on generator..... | 1        | 1         | 1-         | A-37      |
| No. 8-32x $\frac{3}{16}$ "  | Screw fillister head—contact set on distributor.....                             | 1        | 1         | 1-         | A-38      |
| No. 8-32x $\frac{5}{16}$ "  | Commutator head cover to generator.....                                          | 4        | 4         | 1-         | A-37      |
| No. 8-32x $\frac{5}{16}$ "  | Inner and outer head light shell.....                                            | 6        | 6         | 1-         | B-40      |
| No. 8-32x $\frac{5}{8}$ "   | Clamp to shell on head lights.....                                               | 3        | 3         | 1-         | B-40      |
| <b>No. 10 WASHER PLAIN</b>  |                                                                                  |          |           |            |           |
| No. 10                      | Field terminal on generator.....                                                 | 2        | 2         | 1-         | A-37      |
| No. 10                      | Terminal stud on distributor.....                                                | 1        | 1         | 1-         | A-38      |
| No. 10                      | Switch contact screw on starter.....                                             | 1        | 1         | 1-         | B-38      |
| <b>No. 10 LOCKWASHER</b>    |                                                                                  |          |           |            |           |
| No. 10                      | Field terminal on generator.....                                                 | 2        | 2         | 1-         | A-37      |
| No. 10                      | Armature terminal screw on generator.....                                        | 1        | 1         | 1-         | A-37      |
| No. 10                      | Terminal stud on distributor.....                                                | 2        | 2         | 1-         | A-38      |
| No. 10                      | Switch contact on starter.....                                                   | 1        | 1         | 1-         | B-38      |
| No. 10                      | On screw felt washer retainer on generator.....                                  | 3        | 3         | 1-         | A-37      |
| <b>No. 10 SCREW</b>         |                                                                                  |          |           |            |           |
| No. 10-32x1 $\frac{1}{4}$ " | Cover hand on generator.....                                                     | 1        | 1         | 1-         | A-37      |
| No. 10-32x $\frac{3}{8}$ "  | Relay mounting screw round head on generator.....                                | 2        | 2         | 1-         | A-37      |
| No. 10-32x $\frac{3}{8}$ "  | In retainer for felt washer on generator.....                                    | 3        | 3         | 1-         | A-37      |
| No. 10-32x $\frac{3}{8}$ "  | Retaining spring on generator.....                                               | 1        | 1         | 1-         | A-37      |
| No. 10-32x $\frac{1}{4}$ "  | Battery terminal.....                                                            | 1        | 1         | 1-         | A-37      |
| No. 10-32x $\frac{1}{2}$ "  | Switch contact on starter.....                                                   | 1        | 1         | 1-         | B-38      |
| No. 10-32x1 $\frac{1}{4}$ " | Cover band screw on starter.....                                                 | 1        | 1         | 1-         | B-38      |
| No. 10-32x $\frac{5}{16}$ " | Mounting switch to frame on starter.....                                         | 1        | 1         | 1-         | B-38      |
| No. 10-32x $\frac{3}{16}$ " | Ground brush on starter.....                                                     | 1        | 1         | 1-         | B-38      |
| No. 10-24x $\frac{3}{4}$ "  | Spring clamp on steering gear.....                                               | 1        | 1         | 1-         | B-40      |

## Repair Parts List for Cockshutt "30" Tractor

Page 33

| Part No.                   | DESCRIPTION                                                                                                                                                                                     | No. Std. | Req'd. RC | Serial No. | Plate No.    |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|-----------|------------|--------------|
| <b>No. 10 NUTS</b>         |                                                                                                                                                                                                 |          |           |            |              |
| No. 10-32                  | Square head—cover band on generator.....                                                                                                                                                        | 2        | 2         | 1-         | A-37         |
| No. 10-32                  | Field terminal on generator.....                                                                                                                                                                | 2        | 2         | 1-         | A-37         |
| No. 10-32                  | Terminal stud on distributor.....                                                                                                                                                               | 2        | 2         | 1-         | A-38         |
| No. 10-32                  | Cover band on starter.....                                                                                                                                                                      | 1        | 1         | 1-         | B-38         |
| No. 10-32                  | Jam nut, for choke control rod.....                                                                                                                                                             | 1        | 1         | 1-         | B-39         |
| <b>No. 12 SCREW</b>        |                                                                                                                                                                                                 |          |           |            |              |
| No. 12-24x $\frac{5}{8}$ " | Throttle body to bowl.....                                                                                                                                                                      | 4        | 4         | 1-         | B-37         |
| <b>No. 12 LOCKWASHER</b>   |                                                                                                                                                                                                 |          |           |            |              |
| No. 12                     | On screw throttle body to bowl.....                                                                                                                                                             | 4        | 4         | 1-         | B-37         |
| <b>WOODRUFF KEYS</b>       |                                                                                                                                                                                                 |          |           |            |              |
| 404                        | In driven gear oil pump.....                                                                                                                                                                    | 1        | 1         | 1-         | A-42         |
| 404                        | In drive gear oil pump.....                                                                                                                                                                     | 1        | 1         | 1-         | A-42         |
| 405                        | Pulley to armature shaft on generator.....                                                                                                                                                      | 1        | 1         | 1-         | A-37         |
| 505                        | Arm shaft bendix driving head on starter.....                                                                                                                                                   | 1        | 1         | 1-         | B-38         |
| 606                        | Hydraulic pump drive gear.....                                                                                                                                                                  | 1        | 1         | 1-         | A-43         |
| 607                        | In drive gear on belt drive (order T-9672).....                                                                                                                                                 | 1        | 1         | 1-         | A-41         |
| 607                        | In shaft belt pulley driven gear.....                                                                                                                                                           | 1        | 1         | 1-         | A-45         |
| 608                        | In reverse gear shaft.....                                                                                                                                                                      | 1        | 1         | 1-         | .....        |
| 807                        | For input gear live power take-off (order T-9673).....                                                                                                                                          | 1        | 1         | 1-         | A-44         |
| 807                        | For crankshaft gear.....                                                                                                                                                                        | 1        | 1         | 1-         | A-42         |
| 807                        | Fan drive pulley.....                                                                                                                                                                           | 1        | 1         | 1-         | A-42         |
| 807                        | Camshaft gear.....                                                                                                                                                                              | 1        | 1         | 1-         | B-42         |
| 808                        | Key on belt pulley to outer shaft (size $\frac{1}{4}$ x 1") (order T-9675).....                                                                                                                 | 1        | 1         | 1-         | A-41         |
| 809                        | Key, top of king bolt.....                                                                                                                                                                      | 1        | .....     | 1-         | B-41         |
| 1014                       | Low and high range driven gears in standard power take-off (order T-9674).....                                                                                                                  | 1        | 1         | 1-         | B-44         |
| 1014                       | Driven gear to pinion drive shaft in transmission (order T-9674).....                                                                                                                           | 2        | 2         | 1-         | B-45         |
| FX-S38                     | Cone—1 required rear bearing driving shaft on live power take-off; 2 required on front and rear shaft, standard power take-off; 1 required in bevel pinion shaft front (Timken No. 14137A)..... | 4        | 4         | 1-         | B-44<br>B-45 |
| FX-S42                     | Front wheel.....                                                                                                                                                                                | 2        | 2         | 1-         | B-37         |
| FX-S49                     | Valve cap (check TO-8845, TO-8858, TO-9266, TO-9286).....                                                                                                                                       | 4        | 4         | 1-         | B-37         |
| FX-S51                     | Valve collar for rear tires (check TO-9266, TO-9286).....                                                                                                                                       | 4        | 4         | 1-         | A-37         |
| H-1388                     | Washer between radius rod and anchor, size $\frac{15}{16}$ " x $2\frac{1}{4}$ ".....                                                                                                            | 2        | 2         | 1-         | B-41         |
| M-791                      | Grease fitting, $\frac{1}{8}$ " pipe thread.....                                                                                                                                                | 13       | 6         | 1-         | B-41<br>A-38 |
| M-1616W                    | 3" Seat assembly.....                                                                                                                                                                           | 1        | 1         | 1-         | B-39         |
| MX-S168                    | Battery.....                                                                                                                                                                                    | 1        | 1         | 1-         | A-37         |
| MX-S171                    | Ammeter.....                                                                                                                                                                                    | 1        | 1         | 1-         | B-39         |
| MX-S173                    | Oil gauge.....                                                                                                                                                                                  | 1        | 1         | 1-         | B-39         |
| MX-S204                    | Ignition switch.....                                                                                                                                                                            | 1        | 1         | 1-         | B-39         |
| P-651                      | Pin in rear draw bar of hitch frame (size $\frac{1}{2}$ " x $2\frac{1}{2}$ " ).....                                                                                                             | 2        | 2         | 1-         | B-39         |
| P-2438                     | Spacer for fender support.....                                                                                                                                                                  | 4        | 4         | 1-         | A-39         |
| P-6771                     | Drilled rivet in governor clevis on hand lever (size $\frac{1}{4}$ " x $1\frac{5}{16}$ " ).....                                                                                                 | 1        | 1         | 1-         | B-38         |
| P-7936                     | Alemites in universal joints, $\frac{1}{8}$ " pipe thread.....                                                                                                                                  | 2        | 2         | 1-         | B-40         |
| P-10206                    | Wing nut from intermediate case to battery box clamp (size $\frac{3}{8}$ " x 16).....                                                                                                           | 1        | 1         | 1-         | A-40         |
| P-10254                    | Cup for final drive pinion bearing.....                                                                                                                                                         | 2        | 2         | 1-         | A-39         |
| PX-S9                      | Governor control hand lever spring.....                                                                                                                                                         | 1        | 1         | 1-         | A-41         |
| T-5001                     | Spark plugs (Champion No. J-5).....                                                                                                                                                             | 4        | 4         | 1-         | A-38         |
| T-5002                     | Radiator and engine block drain cock.....                                                                                                                                                       | 2        | 2         | 1-         | A-42<br>B-41 |
| T-5006                     | Retaining ring for spline shaft.....                                                                                                                                                            | 1        | 1         | 1-         | A-38         |

| Part No. | DESCRIPTION                                                                     | No. Req'd. |      | Serial No. | Plate No. |
|----------|---------------------------------------------------------------------------------|------------|------|------------|-----------|
|          |                                                                                 | Std.       | RC   |            |           |
| T-5008   | Front motor support bracket.....                                                | 1          | 1    | 1-         | B-41      |
| T-5013   | Spacer between frame and crank support (size 1½" x ¾" x 1¼").....               | 1          | 1    | 1-         | B-41      |
| T-5014   | Dowels in rear motor mount (size 5/8" x 29/16").....                            | 2          | 2    | 1-         | A-41      |
| T-5015   | Felt strip, clutch cover and frame (size 3/16" x 5/8" x 28½").....              | 1          | 1    | 1-         | A-41      |
| T-5016   | Felt strip, clutch cover and motor mount (size 3/16" x 5/8" x 19½").....        | 1          | 1    | 1-         | A-41      |
| T-5018   | Felt strip between main frame and engine mount (size ½" x ½" x 30").....        | 1          | 1    | 1-         | A-41      |
| T-5019   | Water outlet from thermostat casting to top radiator hose.....                  | 1          | 1    | 1-         | B-41      |
| T-5022   | Gasket, water outlet to radiator.....                                           | 1          | 1    | 1-         | B-41      |
| T-5024   | Cylinder head.....                                                              | 1          | 1    | 1-         | A-42      |
| T-5027   | Valve rocker arm oil pipe.....                                                  | 1          | 1    | 1-         | B-42      |
| T-5028   | Elbow for valve rocker arm oil pipe.....                                        | 1          | 1    | 1-         | B-42      |
| T-5029   | Washer, 9/16" x 1⅜, one each right and left governor control lever.....         | 2          | 2    | 1-         | A-41      |
| T-5031   | Fan belt (Goodyear).....                                                        | 1          | 1    | 1-         | B-41      |
| T-5041   | Spacer between fan and motor (3¼" x 2⅛").....                                   | 1          | 1    | 1-         | B-41      |
| T-5042   | Special bolts, transmission to frame (½" x 2⅛" hexagon).....                    | 2          | 2    | 1-         | A-45      |
| T-5043   | Shim (.010") under front motor support.....                                     | Var.       | Var. | 1-         | B-41      |
| T-5044   | Shim (.005") under front motor support.....                                     | Var.       | Var. | 1-         | B-41      |
| T-5045   | Clamping tee screw for oil filter (check TO-5011).....                          | 1          | 1    | 1-         | B-38      |
| T-5047   | Cover for oil filter (check TO-5046).....                                       | 1          | 1    | 1-         | B-38      |
| T-5048   | Gasket for tee screw for oil filter (check TO-5046).....                        | 1          | 1    | 1-         | B-38      |
| T-5049   | Gasket for cover for oil filter (check TO-5046).....                            | 1          | 1    | 1-         | B-38      |
| T-5052   | Spring cartridge supports in oil filter.....                                    | 1          | 1    | -253       | B-38      |
| T-5053   | Cartridge for oil filter.....                                                   | 1          | 1    | 1-         | B-38      |
| T-5054   | Drain plug at bottom of oil filter.....                                         | 1          | 1    | 1-         | B-38      |
| T-5063   | Anti-rattle spring in clutch (check TO-5061).....                               | 3          | 3    | 1-         | A-44      |
| T-5065   | Pin in eye bolt in engine clutch (check TO-5061).....                           | 3          | 3    | 1-         | A-44      |
| T-5066   | Strut for release lever in engine clutch (check TO-5061).....                   | 3          | 3    | 1-         | A-44      |
| T-5067   | Release lever in engine clutch (check TO-5061).....                             | 3          | 3    | 1-         | A-44      |
| T-5068   | Spring cover to pressure plate in engine clutch (check TO-5061).....            | 9          | 9    | 1-         | A-44      |
| T-5069   | Pressure plate for engine clutch (check TO-5061).....                           | 1          | 1    | 1-         | A-44      |
| T-5076   | Inverted male elbow.....                                                        | 3          | 3    | 1-         | B-38      |
| T-5150   | Front part of frame.....                                                        | 1          | 1    | 1-         | B-41      |
| T-5155   | Crank handle (check TO-5154).....                                               | 1          | 1    | 1-         | B-41      |
| T-5156   | Locking pin for crank handle (check TO-5154).....                               | 1          | 1    | 1-         | B-41      |
| T-5167   | Right hand pivot bolt on hand lever for governor (½"x2¼") (13 USS threads) .... | 1          | 1    | 1-         | A-41      |
| T-5168   | Left hand pivot bolt on hand lever for governor (½"x1¼") (13 USS threads).....  | 1          | 1    | 1-         | B-38      |
| T-5170   | Adjustable yoke on governor.....                                                | 1          | 1    | 1-         | B-38      |
| T-5171   | Clamp for muffler (check TO-5176).....                                          | 1          | 1    | 1-         | B-37      |
| T-5173   | Support for swivel arm on governor.....                                         | 1          | 1    | 1-         | A-38      |
| T-5177   | Cap screw, governor swivel arm, 3/8"-16x1½".....                                | 1          | 1    | 1-         | A-38      |
| T-5178   | Front swivel arm on governor.....                                               | 1          | 1    | 1-         | A-38      |
| T-5180   | Governor control spring spacer (3/8"x1½").....                                  | 1          | 1    | 1-         | A-41      |
| T-5181   | Spacer on pivot arm for governor (7/8"x9/16").....                              | 1          | 1    | 1-         | A-38      |
| T-5187   | Exhaust manifold gasket.....                                                    | 1          | 1    | 1-         | B-41      |
| T-5188   | Governor control spacer bracket (1¼"x2¼").....                                  | 1          | 1    | 1-         | B-41      |
| T-5191   | Stop for governor control bracket (5/16"-18x1¼").....                           | 1          | 1    | 1-         | A-38      |
| T-5192   | Linkage rod guide bracket on left side of engine.....                           | 1          | 1    | 1-         | A-38      |
| T-5193   | Governor control linkage rod.....                                               | 1          | 1    | 1-         | B-38      |
| T-5195   | Support cartage (replaces T-5052).....                                          | 1          | 1    | 253-       | B-38      |
| T-5201   | Front cam gear gasket cover.....                                                | 1          | 1    | 1-         | A-43      |
| T-5202   | Felt washer for cam gear cover.....                                             | 1          | 1    | 1-         | A-43      |
| T-5203   | Oil seal in cam gear cover.....                                                 | 1          | 1    | 1-         | A-43      |
| T-5204   | Flat washer in cam gear cover.....                                              | 3          | 3    | 1-         | A-43      |
| T-5205   | Front cylinder plate.....                                                       | 1          | 1    | 1-         | A-43      |
| T-5206   | Front cylinder plate gasket.....                                                | 1          | 1    | 1-         | A-43      |

# Repair Parts List for Cockshutt "30" Tractor

Page 35

| Part No. | DESCRIPTION                                              | No. Req'd. |    | Serial No. | Plate No.    |
|----------|----------------------------------------------------------|------------|----|------------|--------------|
|          |                                                          | Std.       | RC |            |              |
| T-5207   | Front cylinder plate dowel pins.....                     | 2          | 2  | 1-         | A-43         |
| T-5208   | Lower front support bracket.....                         | 1          | 1  | 1-         | A-43         |
| T-5209   | Slotted pipe plug, 1/8".....                             | 2          | 2  | 1-         | A-42<br>A-43 |
| T-5211   | Stud for magneto adaptor (check TO-5210).....            | 1          | 1  | 1-         | A-43         |
| T-5212   | Stud for governor (check TO-5210).....                   | 1          | 1  | 1-         | A-43         |
| T-5214   | Hydraulic pump adaptor.....                              | 1          | 1  | 1-         | A-43         |
| T-5215   | Hydraulic pump drive shaft bushing.....                  | 1          | 1  | 1-         | A-43         |
| T-5216   | Hydraulic pump thrust washer.....                        | 1          | 1  | 1-         | A-43         |
| T-5217   | Hydraulic pump dowel pin.....                            | 1          | 1  | 1-         | A-43         |
| T-5218   | Gasket between governor and engine block.....            | 1          | 1  | 1-         | A-43         |
| T-5221   | Drive gear for hydraulic pump.....                       | 1          | 1  | 1-         | A-43         |
| T-5222   | Drive shaft for hydraulic pump.....                      | 1          | 1  | 1-         | A-43         |
| T-5226   | Pin in governor weights.....                             | 2          | 2  | 1-         | A-43         |
| T-5227   | Thrust sleeve for governor weights.....                  | 1          | 1  | 1-         | A-43         |
| T-5228   | Locking wire for governor weight pins.....               | 2          | 2  | 1-         | A-43         |
| T-5229   | Ball bearing for governor weight shaft (No. X-1300)..... | 1          | 1  | 1-         | A-43         |
| T-5233   | Governor adjusting eye bolt screw (check TO-5332).....   | 1          | 1  | 1-         | A-43         |
| T-5234   | Governor body (check TO-5232).....                       | 1          | 1  | 1-         | A-43         |
| T-5236   | Rocker shaft (check TO-5232).....                        | 1          | 1  | 1-         | A-43         |
| T-5237   | Plug for rocker shaft (check TO-5232).....               | 1          | 1  | 1-         | A-43         |
| T-5243   | Governor spring.....                                     | 1          | 1  | 1-         | A-43         |
| T-5245   | Front main bearing shell.....                            | 2          | 2  | 1-         | A-42         |
| T-5246   | Rear main bearing shell.....                             | 2          | 2  | 1-         | A-42         |
| T-5247   | Centre engine main bearing shell.....                    | 2          | 2  | 1-         | A-42         |
| T-5248   | Regulator for oil pressure piston.....                   | 1          | 1  | 1-         | A-42         |
| T-5249   | Regulator oil pressure spring.....                       | 1          | 1  | 1-         | A-42         |
| T-5250   | Screw for oil pressure regulator.....                    | 1          | 1  | 1-         | A-42         |
| T-5251   | Gasket for oil pressure regulator.....                   | 1          | 1  | 1-         | A-42         |
| T-5253   | Lock wire.....                                           | 3          | 3  | 1-         | A-42         |
| T-5255   | Sleeve (check TO-5254).....                              | 4          | 4  | 1-         | A-42         |
| T-5256   | Packing ring for sleeve (check TO-5254).....             | 8          | 8  | 1-         | A-42         |
| T-5257   | Cylinder head stud (short) (check TO-5254).....          | 10         | 10 | 1-         | A-42         |
| T-5258   | Cylinder head stud (long) (check TO-5254).....           | 4          | 4  | 1-         | A-42         |
| T-5259   | Front camshaft bearing (check TO-5254).....              | 1          | 1  | 1-         | A-42         |
| T-5260   | Centre camshaft bearing (check TO-5254).....             | 2          | 2  | 1-         | A-42         |
| T-5261   | Rear camshaft bearing (check TO-5254).....               | 1          | 1  | 1-         | A-42         |
| T-5262   | Front main bearing cap (check TO-5254).....              | 1          | 1  | 1-         | A-42         |
| T-5263   | Centre main bearing cap (check TO-5254).....             | 1          | 1  | 1-         | A-42         |
| T-5264   | Rear main bearing cap (check TO-5254).....               | 1          | 1  | 1-         | A-42         |
| T-5265   | Dowel pins for main bearing caps (check TO-5254).....    | 6          | 6  | 1-         | A-42         |
| T-5266   | Cap screw for main bearing caps.....                     | 6          | 6  | 1-         | A-42         |
| T-5267   | Expansion plug, 1" (check TO-5254).....                  | 1          | 1  | 1-         | A-42         |
| T-5268   | Expansion plug, 1 1/2" (check TO-5254).....              | 1          | 1  | 1-         | A-42         |
| T-5269   | Squire head pipe plug, 1/4" (check TO-5254).....         | 1          | 1  | 1-         | A-42         |
| T-5270   | Castellated pipe plug, 3/8" (check TO-5254).....         | 2          | 2  | 1-         | A-42         |
| T-5271   | Stud for fuel pump (check TO-5254).....                  | 2          | 2  | 1-         | A-42         |
| T-5272   | Stud for gear cover (check TO-5254).....                 | 1          | 1  | 1-         | A-42         |
| T-5273   | Radiator drain cock.....                                 | 1          | 1  | 1-         | A-42         |
| T-5274   | Crankshaft.....                                          | 1          | 1  | 1-         | A-42         |
| T-5275   | Cam and valve drive gear on crankshaft.....              | 1          | 1  | 1-         | A-42         |
| T-5277   | Fan drive pulley on front end crankshaft.....            | 1          | 1  | 1-         | A-42         |
| T-5278   | Jaw for starting crank on end of crankshaft.....         | 1          | 1  | 1-         | A-42         |
| T-5279   | Washer for starting crank jaw.....                       | 1          | 1  | 1-         | A-42         |
| T-5280   | Standard piston.....                                     | 4          | 4  | 1-         | B-42         |

| Part No. | DESCRIPTION                                                      | No. Req'd. |    | Serial No. | Plate No. |
|----------|------------------------------------------------------------------|------------|----|------------|-----------|
|          |                                                                  | Std.       | RC |            |           |
| T-5281   | Standard piston pin.....                                         | 4          | 4  | 1-         | B-42      |
| T-5282   | Retaining washer for end of piston pins.....                     | 8          | 8  | 1-         | B-42      |
| T-5283   | Standard piston ring for 1st, 2nd and 3rd groove.....            | 12         | 12 | 1-         | B-42      |
| T-5284   | Oil ring for standard piston.....                                | 4          | 4  | 1-         | B-42      |
| T-5286   | Connecting rod bolts (check TO-5285).....                        | 8          | 8  | 1-         | B-42      |
| T-5287   | Piston pin bushing in connecting rod (check TO-5285).....        | 4          | 4  | 1-         | B-42      |
| T-5288   | Connecting rod bearings shell (check TO-5285).....               | 8          | 8  | 1-         | B-42      |
| T-5289   | Oil seal flywheel housing plate (low speed) (check TO-5297)..... | 1          | 1  | 1-         | B-42      |
| T-5290   | Oil seal flywheel housing plate (outer) (check TO-5297).....     | 1          | 1  | 1-         | B-42      |
| T-5291   | Pipe plug in flywheel housing plate, 3/4" countersunk.....       | 1          | 1  | 1-         | B-42      |
| T-5292   | Flywheel housing plate dowel pins.....                           | 2          | 2  | 1-         | B-42      |
| T-5293   | Flywheel.....                                                    | 1          | 1  | 1-         | B-42      |
| T-5294   | Flywheel ring gear.....                                          | 1          | 1  | 1-         | B-42      |
| T-5295   | Flywheel dowel pins.....                                         | 2          | 2  | 1-         | B-42      |
| T-5296   | Flywheel expansion plug, 1/2".....                               | 2          | 2  | 1-         | B-42      |
| T-5298   | Oil seal retainer in flywheel housing (check TO-5297).....       | 1          | 1  | 1-         | B-42      |
| T-5299   | Oil seal retainer screws (check TO-5297).....                    | 6          | 6  | 1-         | B-42      |
| T-5300   | Cylinder head gasket.....                                        | 1          | 1  | 1-         | A-42      |
| T-5301   | Cylinder head cover.....                                         | 1          | 1  | 1-         | A-42      |
| T-5302   | Cylinder head cover gasket.....                                  | 1          | 1  | 1-         | A-42      |
| T-5304   | Elbow on cylinder head oil line.....                             | 1          | 1  | 1-         | A-42      |
| T-5305   | Tee on cylinder head oil line.....                               | 1          | 1  | 1-         | A-42      |
| T-5307   | Standard intake valve (check TO-5306).....                       | 4          | 4  | 1-         | A-42      |
| T-5308   | Standard exhaust valve (check TO-5306).....                      | 4          | 4  | 1-         | A-42      |
| T-5309   | Valve guide (check TO-5306).....                                 | 8          | 8  | 1-         | A-42      |
| T-5310   | Valve spring (check TO-5306).....                                | 8          | 8  | 1-         | A-42      |
| T-5311   | Valve spring retainer (check TO-5306).....                       | 8          | 8  | 1-         | A-42      |
| T-5312   | Lock valve spring retainer (check TO-5306).....                  | 8          | 8  | 1-         | A-42      |
| T-5313   | Valve spring snap ring (check TO-5306).....                      | 8          | 8  | 1-         | A-42      |
| T-5314   | Manifold stud (short) (check TO-5306).....                       | 4          | 4  | 1-         | A-42      |
| T-5215   | Manifold stud (long) (check TO-5306).....                        | 4          | 4  | 1-         | A-42      |
| T-5316   | Rocker arm stud (check TO-5306).....                             | 2          | 2  | 1-         | A-42      |
| T-5317   | Expansion plug, 1 1/4" (check TO-5306).....                      | 1          | 1  | 1-         | A-42      |
| T-5318   | Camshaft.....                                                    | 1          | 1  | 1-         | B-42      |
| T-5319   | Camshaft gear.....                                               | 1          | 1  | 1-         | B-42      |
| T-5320   | Camshaft gear retainer.....                                      | 1          | 1  | 1-         | B-42      |
| T-5321   | Camshaft thrust plate.....                                       | 1          | 1  | 1-         | B-42      |
| T-5322   | Rocker arm bracket.....                                          | 4          | 4  | 1-         | B-42      |
| T-5323   | Rocker arm bracket spring clip.....                              | 4          | 4  | 1-         | B-42      |
| T-5324   | Washer on rocker arm bracket cap screw.....                      | 2          | 2  | 1-         | B-42      |
| T-5325   | Valve lifter.....                                                | 8          | 8  | 1-         | B-42      |
| T-5326   | Adjusting screw on rocker arm (check TO-5329 and TO-5326).....   | 8          | 8  | 1-         | B-42      |
| T-5331   | Rocker arm bushing (check TO-5336 and TO-5329).....              | 8          | 8  | 1-         | B-42      |
| T-5332   | Rocker arm ball (check TO-5336 and TO-5329).....                 | 8          | 8  | 1-         | B-42      |
| T-5333   | Rocker arm ball retainer (check TO-5336 and TO-5329).....        | 8          | 8  | 1-         | B-42      |
| T-5334   | Rocker arm oil wick (check TO-5336 and TO-5329).....             | 8          | 8  | 1-         | B-42      |
| T-5339   | Expansion plug for rocker arm shaft (check TO-5338).....         | 2          | 2  | 1-         | B-42      |
| T-5340   | Oil pump strainer.....                                           | 1          | 1  | 1-         | A-42      |
| T-5341   | Oil pump strainer bale wire.....                                 | 1          | 1  | 1-         | A-42      |
| T-5342   | Oil gauge dip stick.....                                         | 1          | 1  | 1-         | A-42      |
| T-5343   | Oil pan.....                                                     | 1          | 1  | 1-         | A-42      |
| T-5344   | Oil pan gasket.....                                              | 2          | 2  | 1-         | A-42      |
| T-5345   | Oil pan drain plug.....                                          | 1          | 1  | 1-         | A-42      |
| T-5346   | Oil filler and breather cap.....                                 | 1          | 1  | 1-         | A-42      |
| T-5347   | Oil pan breather.....                                            | 1          | 1  | 1-         | A-42      |

## Repair Parts List for Cockshutt "30" Tractor

Page 37

| Part No. | DESCRIPTION                                                                  | No. Req'd. |    | Serial No. | Plate No. |
|----------|------------------------------------------------------------------------------|------------|----|------------|-----------|
|          |                                                                              | Std.       | RC |            |           |
| T-5349   | Oil pump drive shaft.....                                                    | 1          | 1  | 1-         | A-42      |
| T-5350   | Oil pump drive gear.....                                                     | 1          | 1  | 1-         | A-42      |
| T-5352   | Retaining ring for oil pump drive gear.....                                  | 1          | 1  | 1-         | A-42      |
| T-5353   | Oil pump driven gear.....                                                    | 1          | 1  | 1-         | A-42      |
| T-5354   | Pin in oil pump driven gear.....                                             | 1          | 1  | 1-         | A-42      |
| T-5355   | Idler gear in oil pump.....                                                  | 1          | 1  | 1-         | A-42      |
| T-5356   | Idler shaft bearing in oil pump.....                                         | 1          | 1  | 1-         | A-42      |
| T-5357   | Oil pump cover.....                                                          | 1          | 1  | 1-         | A-42      |
| T-5358   | Oil pump oil seal.....                                                       | 1          | 1  | 1-         | A-42      |
| T-5359   | Water pump gasket.....                                                       | 1          | 1  | 1-         | A-43      |
| T-5360   | Water pump support link.....                                                 | 1          | 1  | 1-         | A-43      |
| T-5361   | Water pump pulley.....                                                       | 1          | 1  | 1-         | A-43      |
| T-5363   | Water pump cover.....                                                        | 1          | 1  | 1-         | A-43      |
| T-5364   | Water pump cover gasket.....                                                 | 1          | 1  | 1-         | A-43      |
| T-5365   | Water pump impeller cover.....                                               | 1          | 1  | 1-         | A-43      |
| T-5366   | Washer for water pump seal.....                                              | 1          | 1  | 1-         | A-43      |
| T-5367   | Flexible seal for water pump.....                                            | 1          | 1  | 1-         | A-43      |
| T-5368   | Guide for water pump spring.....                                             | 1          | 1  | 1-         | A-43      |
| T-5369   | Water pump spring.....                                                       | 1          | 1  | 1-         | A-43      |
| T-5370   | Ring for water pump seal.....                                                | 1          | 1  | 1-         | A-43      |
| T-5371   | Water pump pipe plug.....                                                    | 1          | 1  | 1-         | A-43      |
| T-5372   | Water pump pulley hub.....                                                   | 1          | 1  | 1-         | A-43      |
| T-5373   | Water pump bearing wire snap ring, outer.....                                | 1          | 1  | 1-         | A-43      |
| T-5374   | Water pump bearing wire snap ring, inner.....                                | 1          | 1  | 1-         | A-43      |
| T-5376   | Gasket, hydraulic pump adapter.....                                          | 1          | 1  | 1-         | A-43      |
| T-5377   | Water pump drain cock.....                                                   | 1          | 1  | 1-         | A-43      |
| T-5378   | Water inlet pipe.....                                                        | 1          | 1  | 1-         | A-43      |
| T-5379   | Water inlet pipe gasket.....                                                 | 1          | 1  | 1-         | A-43      |
| T-5380   | Thermostat.....                                                              | 1          | 1  | 1-         | A-43      |
| T-5381   | Thermostat housing.....                                                      | 1          | 1  | 1-         | A-43      |
| T-5382   | Thermostat housing gasket.....                                               | 1          | 1  | 1-         | A-43      |
| T-5383   | Water pump bypass pipe line.....                                             | 1          | 1  | 1-         | A-43      |
| T-5384   | Water pump bypass pipe line gasket.....                                      | 1          | 1  | 1-         | A-43      |
| T-5385   | Water pump bypass line hose.....                                             | 1          | 1  | 1-         | A-43      |
| T-5386   | Water pump bypass line hose clamp.....                                       | 2          | 2  | 1-         | A-43      |
| T-5387   | Water pump outlet casting.....                                               | 1          | 1  | 1-         | A-43      |
| T-5388   | Water pump outlet pipe gasket.....                                           | 1          | 1  | 1-         | A-43      |
| T-5389   | Exhaust and intake manifold.....                                             | 1          | 1  | 1-         | B-42      |
| T-5390   | Exhaust and intake manifold gasket.....                                      | 1          | 1  | 1-         | B-42      |
| T-5391   | Exhaust and intake manifold washer.....                                      | 8          | 8  | 1-         | B-42      |
| T-5392   | Cover for fuel pump connecting below distributor.....                        | 1          | 1  | 1-         | A-42      |
| T-5393   | Gasket for fuel pump cover.....                                              | 1          | 1  | 1-         | A-42      |
| T-5394   | Support for distributor.....                                                 | 1          | 1  | 1-         | A-42      |
| T-5396   | Nuts on governor adjusting eye bolts screw.....                              | 2          | 2  | 1-         | A-43      |
| T-5397   | Adapter cover governor hydraulic attachment (check TO-5401).....             | 1          | 1  | 1-         | A-38      |
| T-5398   | Gasket for adapter cover, governor hydraulic attachment (check TO-5401)..... | 1          | 1  | 1-         | A-38      |
| T-5399   | Oil pump body.....                                                           | 1          | 1  | 1-         | A-42      |
| T-5400   | Water pump body.....                                                         | 1          | 1  | 1-         | A-43      |
| T-5404   | Oil seal for distributor support.....                                        | 1          | 1  | 1-         | A-42      |
| T-6001   | Decal "Safety First" on transmission.....                                    | 1          | 1  | 1-         | .....     |
| T-6002   | Decal "Safety First" on fender.....                                          | 1          | 1  | 1-         | .....     |
| T-6003   | Decal important.....                                                         | 1          | 1  | 1-         | .....     |
| T-6004   | Decal "Drain Rad".....                                                       | 1          | 1  | 1-         | .....     |
| T-6005   | Decal drain.....                                                             | 1          | 1  | 1-         | .....     |
| T-7001   | Connector, top of sediment bowl.....                                         | 1          | 1  | 1-         | A-37      |

| Part No. | DESCRIPTION                                                                                          | No. Req'd. |    | Serial No. | Plate No. |
|----------|------------------------------------------------------------------------------------------------------|------------|----|------------|-----------|
|          |                                                                                                      | Std.       | RC |            |           |
| T-7010   | Support for air cleaner (check TO-7024).....                                                         | 1          | 1  | 1-         | A-38      |
| T-7011   | Air cleaner tube.....                                                                                | 1          | 1  | 1-         | B-37      |
| T-7017   | Choke control rod ( $\frac{3}{16}$ " x $4\frac{1}{4}$ ").....                                        | 1          | 1  | 1-         | B-37      |
| T-7021   | Top air cleaner hose ( $1\frac{3}{4}$ " x $2\frac{1}{2}$ ").....                                     | 1          | 1  | 1-         | B-41      |
| T-7023   | Choke control rod knob.....                                                                          | 1          | 1  | 1-         | B-39      |
| T-7030   | Cap for air cleaner assembly (check TO-7029).....                                                    | 1          | 1  | 1-         | A-38      |
| T-7032   | Bottom oil cup for air cleaner (check TO-7029).....                                                  | 1          | 1  | 1-         | A-38      |
| T-7036   | Gasket for carburetor to manifold.....                                                               | 1          | 1  | 1-         | B-41      |
| T-7038   | Glass bowl for sediment bowl.....                                                                    | 1          | 1  | 1-         | A-37      |
| T-7039   | Gasket for sediment bowl.....                                                                        | 1          | 1  | 1-         | A-37      |
| T-7040   | Screen for sediment bowl.....                                                                        | 1          | 1  | 1-         | A-37      |
| T-7041   | Throttle butterfly in carburetor.....                                                                | 1          | 1  | 1-         | B-37      |
| T-7042   | Screw—2 required butterfly to shaft, 2 required high-speed ratchet spring.....                       | 4          | 4  | 1-         | B-37      |
| T-7043   | Idle adjusting needle in throttle carburetor body.....                                               | 1          | 1  | 1-         | B-37      |
| T-7044   | Spring for idler adjusting needle in throttle carburetor body.....                                   | 1          | 1  | 1-         | B-37      |
| T-7045   | Filler screw in throttle body of carburetor.....                                                     | 1          | 1  | 1-         | B-37      |
| T-7046   | Spring for high-speed needle in throttle carburetor body.....                                        | 1          | 1  | 1-         | B-37      |
| T-7047   | Washer at bottom of spring on high-speed needle in throttle carburetor body.....                     | 1          | 1  | 1-         | B-37      |
| T-7048   | Gasket under washer and spring on high-speed needle in throttle carburetor body.....                 | 1          | 1  | 1-         | B-37      |
| T-7049   | Jet for idler needle in throttle carburetor body.....                                                | 1          | 1  | 1-         | B-37      |
| T-7050   | Jet for high-speed in throttle carburetor body.....                                                  | 1          | 1  | 1-         | B-37      |
| T-7051   | Elbow for attaching gas line throttle carburetor body.....                                           | 1          | 1  | 1-         | B-37      |
| T-7052   | Spring for throttle stop adjusting screw.....                                                        | 1          | 1  | 1-         | B-37      |
| T-7053   | Cup washer end of throttle shaft.....                                                                | 1          | 1  | 1-         | B-37      |
| T-7054   | Packing for throttle shaft in throttle carburetor body.....                                          | 1          | 1  | 1-         | B-37      |
| T-7055   | Retainer washer for packing in throttle shaft in throttle carburetor body.....                       | 1          | 1  | 1-         | B-37      |
| T-7058   | Venture $\frac{1}{2}$ " diameter, throat throttle, carburetor body and bowl.....                     | 1          | 1  | 1-         | B-37      |
| T-7057   | Gasket between throttle carburetor body and bowl.....                                                | 1          | 1  | 1-         | B-37      |
| T-7058   | Shaft for float in carburetor bowl.....                                                              | 1          | 1  | 1-         | B-37      |
| T-7059   | Gasket for main nozzle in carburetor bowl.....                                                       | 1          | 1  | 1-         | B-37      |
| T-7060   | Jet for main nozzle in carburetor bowl.....                                                          | 1          | 1  | 1-         | B-37      |
| T-7061   | Screws, choker shaft to butterfly in carburetor bowl.....                                            | 2          | 2  | 1-         | B-37      |
| T-7062   | Packing in choker shaft in carburetor bowl.....                                                      | 1          | 1  | 1-         | B-37      |
| T-7063   | Retainer washer for packing choker shaft in carburetor bowl.....                                     | 1          | 1  | 1-         | B-37      |
| T-7064   | Spring on choker shaft carburetor bowl.....                                                          | 1          | 1  | 1-         | B-37      |
| T-7065   | Strainer bottom of bowl carburetor.....                                                              | 1          | 1  | 1-         | B-37      |
| T-7066   | Expansion plug bottom of carburetor bowl for strainer.....                                           | 1          | 1  | 1-         | B-37      |
| T-7067   | Drain plug in carburetor bowl.....                                                                   | 1          | 1  | 1-         | B-37      |
| T-7069   | Gasket for float valve seat in throttle carburetor body.....                                         | 1          | 1  | 1-         | B-37      |
| T-7081   | Cross centre rubber pad under gas tank ( $1\frac{3}{4}$ " x $\frac{1}{4}$ " x $3\frac{1}{4}$ ")..... | 1          | 1  | 1-         | A-40      |
| T-7082   | Front rubber pad under gas tank ( $1\frac{3}{4}$ " x $\frac{1}{4}$ " x $15\frac{3}{4}$ ").....       | 1          | 1  | 1-         | A-40      |
| T-7083   | Side rubber pad under gas tank ( $1\frac{3}{4}$ " x $\frac{1}{4}$ " x 18").....                      | 2          | 2  | 1-         | A-40      |
| T-7084   | Wing bolt on clamp air cleaner.....                                                                  | 1          | 1  | 1-         | A-38      |
| T-7085   | Washer on wing bolt on clamp, air cleaner.....                                                       | 1          | 1  | 1-         | A-38      |
| T-7086   | Top of sediment bowl.....                                                                            | 1          | 1  | 1-         | A-37      |
| T-7087   | Shut-off valve, sediment bowl.....                                                                   | 1          | 1  | 1-         | A-37      |
| T-7510   | Cover clamp for battery box.....                                                                     | 1          | 1  | 1-         | A-40      |
| T-7511   | Cover clamp rod for battery box.....                                                                 | 1          | 1  | 1-         | A-40      |
| T-7519   | Generator mounting bracket.....                                                                      | 1          | 1  | 1-         | B-41      |
| T-7520   | Fan and generator tension bar.....                                                                   | 1          | 1  | 1-         | B-41      |
| T-7525   | Protector caps for distributor wires.....                                                            | 5          | 5  | 1-         | A-38      |
| T-7532   | Coil bracket support.....                                                                            | 1          | 1  | 1-         | A-38      |
| T-7533   | Starter control rod.....                                                                             | 1          | 1  | 1-         | A-38      |
| T-7536   | Starter cable to battery (negative).....                                                             | 1          | 1  | 1-         | B-38      |
| T-7537   | Battery ground strap (positive).....                                                                 | 1          | 1  | 1-         | B-38      |

# Repair Parts List for Cockshutt "30" Tractor

Page 39

| Part No. | DESCRIPTION                                                                                                                                    | No. Std. | Req'd. RC | Serial No. | Plate No.      |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------|----------|-----------|------------|----------------|
| T-7547   | Dash lamp bulb (check TO-7563).....                                                                                                            | 1        | 1         | 1-         | B-39           |
| T-7557   | Starter control rod knob.....                                                                                                                  | 1        | 1         | 1-         | B-39           |
| T-7560   | Tail light bracket (check TO-7563).....                                                                                                        | 1        | 1         | 1-         | B-40           |
| T-7561   | Grommets for head light wires.....                                                                                                             | 2        | 2         | 1-         | A-39           |
| T-7566   | Collar for head light bracket (check TO-7563).....                                                                                             | 3        | 3         | 1-         | A-39           |
| T-7570   | Clip for wiring.....                                                                                                                           | 1        | 1         | 1-         | B-37           |
| T-7571   | Retaining spring, wires to air tube.....                                                                                                       | 2        | 2         | 1-         | .....          |
| T-7572   | Wire, tail light to switch.....                                                                                                                | 1        | 1         | 1-         | A-40           |
| T-7573   | Tail light wire clip.....                                                                                                                      | 1        | 1         | 1-         | A-40           |
| T-7574   | Lens for head lamp assembly (check TO-7514).....                                                                                               | 3        | 3         | 1-         | B-40           |
| T-7575   | Rubber ring for lens to reflector (check TO-7514).....                                                                                         | 3        | 3         | 1-         | B-40           |
| T-7576   | Bulb for head lamp (check TO-7514).....                                                                                                        | 3        | 3         | 1-         | B-40           |
| T-7577   | Rim clamp for lens to shell (check TO-7514).....                                                                                               | 3        | 3         | 1-         | B-40           |
| T-7585   | Lockwasher—2 required throttle butterfly to shaft, 2 required chocker butterfly to shaft, 2 required for ratchet spring high-speed needle..... | 6        | 6         | 1-         | B-37           |
| T-7586   | Nut—armature shaft, at drive end head of generator.....                                                                                        | 1        | 1         | 1-         | A-37           |
| T-7587   | Pulley for generator.....                                                                                                                      | 1        | 1         | 1-         | A-37           |
| T-7588   | Spacer—arm shaft at drive end head on generator.....                                                                                           | 1        | 1         | 1-         | A-37           |
| T-7589   | Retainer—felt washer in drive end head on generator.....                                                                                       | 1        | 1         | 1-         | A-37           |
| T-7591   | Snap ring—arm shaft, at drive end head on generator.....                                                                                       | 1        | 1         | 1-         | A-37           |
| T-7593   | Head—drive end on generator.....                                                                                                               | 1        | 1         | 1-         | A-37           |
| T-7594   | Oiler—drive end head on generator.....                                                                                                         | 1        | 1         | 1-         | A-37           |
| T-7595   | Felt oiler—1 required head drive end, 1 required commutator end on generator.....                                                              | 2        | 2         | 1-         | A-37           |
| T-7596   | Washer—in head on generator (felt).....                                                                                                        | 2        | 2         | 1-         | A-37           |
| T-7597   | Retainer—felt washer, outer on generator.....                                                                                                  | 1        | 1         | 1-         | A-37           |
| T-7598   | Bearing—arm, shaft to head on generator.....                                                                                                   | 1        | 1         | 1-         | A-37           |
| T-7599   | Retainer—bearing on generator.....                                                                                                             | 1        | 1         | 1-         | A-37           |
| T-7600   | Retainer—felt washer, inner on generator.....                                                                                                  | 1        | 1         | 1-         | A-37           |
| T-7601   | Screw—frame to heads on generator.....                                                                                                         | 2        | 2         | 1-         | A-37           |
| T-7602   | Band—cover for frame on generator.....                                                                                                         | 1        | 1         | 1-         | A-37           |
| T-7604   | Washer—insulation, field terminal on generator.....                                                                                            | 1        | 1         | 1-         | A-37           |
| T-7605   | Bushing—insulation, field terminal on generator.....                                                                                           | 1        | 1         | 1-         | A-37           |
| T-7606   | Insulation—inner, field terminal on generator.....                                                                                             | 1        | 1         | 1-         | A-37           |
| T-7607   | Bushing—insulation, coil lead to relay cut-out on generator.....                                                                               | 1        | 1         | 1-         | A-37           |
| T-7608   | Screw—pole shoe on generator.....                                                                                                              | 2        | 2         | 1-         | A-37           |
| T-7609   | Pin—dowel, frame on generator.....                                                                                                             | 2        | 2         | 1-         | A-37           |
| T-7610   | Insulation—inner field connection on generator.....                                                                                            | 1        | 1         | 1-         | A-37           |
| T-7613   | Washer—2 required mounting switch to screw on generator, 2 required on relay cut-out on starter.....                                           | 4        | 4         | 1-         | { A-37<br>A-38 |
| T-7615   | Screw—armature, terminal on generator.....                                                                                                     | 1        | 1         | 1-         | A-37           |
| T-7616   | Screw—brush lead on generator, No. 8, 32 x 3/16".....                                                                                          | 3        | 3         | 1-         | A-37           |
| T-7618   | Cover commutator end on generator.....                                                                                                         | 1        | 1         | 1-         | A-37           |
| T-7619   | Gasket commutator end cover.....                                                                                                               | 1        | 1         | 1-         | A-37           |
| T-7620   | Wick—armature shaft to wick packing on generator.....                                                                                          | 1        | 1         | 1-         | A-37           |
| T-7621   | Cover—wick, end head on generator.....                                                                                                         | 1        | 1         | 1-         | A-37           |
| T-7622   | Oil guard—inside end head on generator.....                                                                                                    | 1        | 1         | 1-         | A-37           |
| T-7623   | Gasket—oil guard on generator.....                                                                                                             | 1        | 1         | 1-         | A-37           |
| T-7627   | Spring retaining clamp—third brush plate on generator.....                                                                                     | 1        | 1         | 1-         | A-37           |
| T-7632   | Bearing—hole for arm shaft on generator bronze.....                                                                                            | 1        | 1         | 1-         | A-37           |
| T-7633   | Fuse for light switch on generator.....                                                                                                        | 1        | 1         | 1-         | B-39           |
| T-7637   | Washer—at commutator head end on starter.....                                                                                                  | 1        | 1         | 1-         | B-38           |
| T-7638   | Washer—arm thrust, commutator head and intermediate on starter.....                                                                            | 2        | 2         | 1-         | B-38           |
| T-7641   | Bolt—frame to heads on starter.....                                                                                                            | 2        | 2         | 1-         | B-38           |
| T-7642   | Band—cover, frame on starter.....                                                                                                              | 1        | 1         | 1-         | B-38           |

| Part No. | DESCRIPTION                                                                                                        | No. Req'd. | Serial | Plate   |
|----------|--------------------------------------------------------------------------------------------------------------------|------------|--------|---------|
|          |                                                                                                                    | Std.       | RC No. | No.     |
| T-7644   | Screw—pole shoe on starter.....                                                                                    | 4          | 4      | 1- B-38 |
| T-7645   | Washer—insulation, terminal stud on starter.....                                                                   | 1          | 1      | 1- B-38 |
| T-7646   | Bushing—insulation, terminal stud on starter.....                                                                  | 1          | 1      | 1- B-38 |
| T-7647   | Insulation block—terminal stud to starter switch.....                                                              | 1          | 1      | 1- B-38 |
| T-7648   | Switch contact—lower terminal, stud to starter switch on starter.....                                              | 1          | 1      | 1- B-38 |
| T-7649   | Insulation—on switch contact to starter.....                                                                       | 1          | 1      | 1- B-38 |
| T-7654   | Insulation—field connector on starter.....                                                                         | 1          | 1      | 1- B-38 |
| T-7663   | Bronze bushing—1 required intermediate bearing thrust washer, 1 required pinion housing end, on starter.....       | 2          | 2      | 1- B-38 |
| T-7665   | Pin—dowel, housing assembly on starter.....                                                                        | 1          | 1      | 1- B-38 |
| T-7667   | Spring—drive bendix on starter.....                                                                                | 1          | 1      | 1- B-38 |
| T-7668   | Screw—spring to driving head on starter.....                                                                       | 1          | 1      | 1- B-38 |
| T-7669   | Screw—spring to shaft on starter.....                                                                              | 1          | 1      | 1- B-38 |
| T-7670   | Lockwasher—spring screws on starter.....                                                                           | 2          | 2      | 1- B-38 |
| T-7671   | Head—driving on starter.....                                                                                       | 1          | 1      | 1- B-38 |
| T-7672   | Gasket—switch assembly to contact on starter.....                                                                  | 1          | 1      | 1- B-38 |
| T-7673   | Gasket—switch assembly to frame, on starter.....                                                                   | 1          | 1      | 1- B-38 |
| T-7674   | Lever—switch on starter.....                                                                                       | 1          | 1      | 1- B-38 |
| T-7675   | Pin—switch lever on starter.....                                                                                   | 1          | 1      | 1- B-38 |
| T-7676   | Washer—plain, switch lever pin on starter.....                                                                     | 1          | 1      | 1- B-38 |
| T-7679   | Coupling drive—drive shaft lower on distributor.....                                                               | 1          | 1      | 1- A-38 |
| T-7680   | Washer—thrust, drive shaft lower on distributor.....                                                               | 1          | 1      | 1- A-38 |
| T-7681   | Rivet—coupling to drive shaft on distributor.....                                                                  | 1          | 1      | 1- A-38 |
| T-7682   | Pointer—advance arm on distributor.....                                                                            | 1          | 1      | 1- A-38 |
| T-7683   | Washer—thrust, advance arm on distributor.....                                                                     | 1          | 1      | 1- A-38 |
| T-7687   | Wick—felt, cam sleeve on distributor.....                                                                          | 1          | 1      | 1- A-38 |
| T-7689   | Spring—anti-rattle, on distributor advance arm.....                                                                | 1          | 1      | 1- A-38 |
| T-7690   | Screw and lockwasher breaker plate mounting on distributor (sold only as a unit).....                              | 2          | 2      | 1- A-38 |
| T-7691   | Rotor on distributor.....                                                                                          | 1          | 1      | 1- A-38 |
| T-7698   | Clip—spring, contact arm on distributor.....                                                                       | 1          | 1      | 1- A-38 |
| T-7699   | Condenser—breaker plate on distributor.....                                                                        | 1          | 1      | 1- A-38 |
| T-7708   | Washer—insulation, terminal stud on distributor.....                                                               | 1          | 1      | 1- A-38 |
| T-7709   | Bushing—terminal stud on distributor.....                                                                          | 1          | 1      | 1- A-38 |
| T-7710   | Insulation—inner, terminal stud on distributor.....                                                                | 1          | 1      | 1- A-38 |
| T-7711   | Connector—terminal stud on distributor.....                                                                        | 1          | 1      | 1- A-38 |
| T-7712   | Stud—terminal on distributor.....                                                                                  | 1          | 1      | 1- A-38 |
| T-7713   | Oiler—base on distributor.....                                                                                     | 1          | 1      | 1- A-38 |
| T-7714   | Bearing—bronze on distributor.....                                                                                 | 2          | 2      | 1- A-38 |
| T-8501   | Universal joints on steering shaft.....                                                                            | 2          | 2      | 1- B-40 |
| T-8502   | Locking pin universal joints to steering shaft.....                                                                | 4          | 4      | 1- B-40 |
| T-8515   | Top steering column casting.....                                                                                   | 1          | 1      | 1- A-40 |
| T-8516   | Lower steering column shaft.....                                                                                   | 1          | 1      | 1- A-40 |
| T-8517   | Upper steering column shaft.....                                                                                   | 1          | 1      | 1- A-40 |
| T-8520   | Steering wheel.....                                                                                                | 1          | 1      | 1- A-40 |
| T-8523   | Pin, steering wheel to shaft.....                                                                                  | 1          | 1      | 1- A-40 |
| T-8525   | Adapter nut, heat gauge to motor.....                                                                              | 1          | 1      | 1- B-39 |
| T-8527   | Bronze bushing in steering gear housing (check TO-8526).....                                                       | 1          | 1      | 1- B-40 |
| T-8528   | Oil seal in steering gear housing (check TO-8524).....                                                             | 1          | 1      | 1- B-40 |
| T-8529   | Expansion plug in steering gear housing (check TO-8526).....                                                       | 1          | 1      | 1- B-40 |
| T-8531   | Shim in steering gear for adjusting pad .003 (check TO-8524).....                                                  | Var.       | Var.   | 1- B-40 |
| T-8532   | Shim in steering gear for adjusting pad .007 (check TO-8524).....                                                  | Var.       | Var.   | 1- B-40 |
| T-8533   | Shim in steering gear for adjusting pad .010 (check TO-8524).....                                                  | Var.       | Var.   | 1- B-40 |
| T-8534   | Capscrew in steering gear for adjusting pad ( $\frac{3}{8}$ "-24x $\frac{3}{4}$ "), thin head (check TO-8524)..... | 2          | 2      | 1- B-40 |
| T-8536   | Camshaft on steering gear.....                                                                                     | 1          | 1      | 1- B-40 |

## Repair Parts List for Cockshutt "30" Tractor

Page 41

| Part No. | DESCRIPTION                                                                                                         | No. Req'd. |      | Serial No. | Plate No. |
|----------|---------------------------------------------------------------------------------------------------------------------|------------|------|------------|-----------|
|          |                                                                                                                     | Std.       | RC   |            |           |
| T-8537   | Ball cup for cam bearing in steering gear (check TO-8563).....                                                      | 2          | 2    | 1-         | B-40      |
| T-8538   | Steel balls for can bearing (check TO-8563).....                                                                    | 28         | 28   | 1-         | B-40      |
| T-8539   | Snap ring for cam bearing (check TO-8563).....                                                                      | 2          | 2    | 1-         | B-40      |
| T-8540   | Cover at rear of housing for steering gear (check TO-8524).....                                                     | 1          | 1    | 1-         | B-40      |
| T-8541   | Shim for cover at rear of housing for steering gear .003 (check TO-8524).....                                       | Var.       | Var. | 1-         | B-40      |
| T-8542   | Shim for cover at rear of housing for steering gear .010 (check TO-8524).....                                       | Var.       | Var. | 1-         | B-40      |
| T-8543   | Shim for cover at rear of housing for steering gear .002 (check TO-8524).....                                       | Var.       | Var. | 1-         | B-40      |
| T-8544   | Gasket between frame and front axle pedestal.....                                                                   | 1          | 1    | 1-         | B-40      |
| T-8545   | Cork oil seal for cam shaft on steering gear (check TO-8564).....                                                   | 1          | 1    | 1-         | B-40      |
| T-8546   | Cover for oil seal on steering gear (check TO-8564).....                                                            | 1          | 1    | 1-         | B-40      |
| T-8547   | Spring for cam shaft for cup cork washer on steering gear (check TO-8564).....                                      | 1          | 1    | 1-         | B-40      |
| T-8548   | Clamp for cam shaft spring on steering gear (check TO-8564).....                                                    | 1          | 1    | 1-         | B-40      |
| T-8549   | Everlock lockwasher for cam shaft clamp on steering gear (check TO-8564).....                                       | 1          | 1    | 1-         | B-40      |
| T-8550   | Cover for housing top on steering gear.....                                                                         | 1          | 1    | 1-         | B-40      |
| T-8551   | Gasket for housing top cover on steering gear.....                                                                  | 1          | 1    | 1-         | B-40      |
| T-8552   | Plug on top of oil filler housing on steering gear ( $\frac{3}{8}$ "-18 standard pipe plug)<br>(check TO-8524)..... | 1          | 1    | 1-         | B-40      |
| T-8711   | Right hand front grille spring (check TO-8728 and TO-8729).....                                                     | 4          | 4    | 1-         | B-37      |
| T-8715   | Locking bolt for rear hood ( $\frac{5}{16}$ "x $3\frac{1}{2}$ ").....                                               | 4          | 4    | 1-         | B-40      |
| T-8718   | Baffle plate under grille.....                                                                                      | 1          | 1    | 1-         | B-40      |
| T-8731   | Water outlet hose on radiator ( $1\frac{1}{2}$ " x $5\frac{1}{2}$ " 3-ply).....                                     | 1          | 1    | 1-         | B-41      |
| T-8733   | Water pipe, radiator to engine.....                                                                                 | 1          | 1    | 1-         | B-41      |
| T-8734   | Water inlet hose connections ( $1\frac{1}{2}$ " x $2\frac{1}{4}$ " 3-ply).....                                      | 3          | 3    | 1-         | B-41      |
| T-8754   | Cap for radiator.....                                                                                               | 1          | 1    | 1-         | B-41      |
| T-8801   | Pedestal for front axle.....                                                                                        | 1          | .... | 1-         | B-41      |
| T-8802   | Front axle, less bushing (check TO-8860).....                                                                       | 1          | .... | 1-         | B-41      |
| T-8803   | Thrust washer on upright shaft to front axle ( $3$ " x $\frac{3}{16}$ " x $1\frac{5}{8}$ ").....                    | ....       | 1    | 1-         | A-38      |
| T-8804   | Felt washer on upright shaft to front axle.....                                                                     | ....       | 1    | 1-         | A-38      |
| T-8805   | Axle hinge pin on front axle to pedestal ( $1\frac{1}{16}$ " x $6$ ").....                                          | 1          | .... | 1-         | B-41      |
| T-8806   | Spindle post washer on front axle ( $\frac{25}{32}$ " x $1\frac{3}{4}$ " x $1\frac{1}{32}$ ").....                  | 2          | .... | 1-         | B-41      |
| T-8809   | Left hand steering post arm on front axle.....                                                                      | 1          | .... | 1-         | B-41      |
| T-8810   | Right hand steering post arm on front axle.....                                                                     | 1          | .... | 1-         | B-41      |
| T-8814   | Radius rod anchor under motor frame.....                                                                            | 1          | .... | 1-         | B-41      |
| T-8816   | Pedestal for front axle (check TO-8859).....                                                                        | ....       | 1    | 1-         | A-38      |
| T-8817   | Front axle.....                                                                                                     | ....       | 1    | 1-         | A-38      |
| T-8818   | Upright shaft to front axle ( $1\frac{13}{16}$ " dia.).....                                                         | ....       | 1    | 1-         | A-38      |
| T-8819   | Key at bottom of upright shaft to front axle ( $\frac{5}{16}$ " sq. $1\frac{7}{8}$ " long).....                     | ....       | 1    | 1-         | A-38      |
| T-8825   | Felt washer for spindle post.....                                                                                   | 2          | .... | 1-         | B-41      |
| T-8826   | Bushing—1 required centre axle pivot post, 4 required for king pins.....                                            | 5          | .... | 1-         | B-41      |
| T-8827   | Oil seal in front wheel hub.....                                                                                    | 2          | 2    | 1-         | A-38      |
| T-8828   | Bottom bearing on spindle of front wheels (Timken No. T-139).....                                                   | 2          | .... | 1-         | B-41      |
| T-8829   | Hub bolts for front wheels ( $\frac{1}{2}$ " 20 x $\frac{7}{8}$ ").....                                             | 12         | 12   | 1-         | A-38      |
| T-8830   | Hub for front wheels.....                                                                                           | 2          | 2    | 1-         | A-38      |
| T-8831   | Hub cap for front wheels.....                                                                                       | 2          | 2    | 1-         | A-38      |
| T-8832   | Washer on hub of front wheels.....                                                                                  | 2          | 2    | 1-         | A-38      |
| T-8834   | Outer bearing cup in front wheel (Timken No. 2788).....                                                             | 2          | 2    | 1-         | A-38      |
| T-8835   | Outer bearing cone for front wheel (Timken No. 2788).....                                                           | 2          | 2    | 1-         | A-38      |
| T-8837   | Inner bearing cup for front wheels (Timken No. 15250).....                                                          | 2          | 2    | 1-         | A-38      |
| T-8838   | Inner bearing cone in front wheels (Timken No. 15118).....                                                          | 2          | 2    | 1-         | A-38      |
| T-8839   | Locking pin, hinge pin to pedestal.....                                                                             | 1          | .... | 1-         | B-41      |
| T-8843   | Front wheel bearing cover.....                                                                                      | 2          | .... | 1-         | B-41      |
| T-8844   | Felt washer in front wheel hub.....                                                                                 | 2          | 2    | 1-         | A-38      |
| T-8846   | Bushing for pedestal for front axle (check TO-8859).....                                                            | ....       | 1    | 1-         | A-38      |
| T-8851   | Locking pin for post to front axle.....                                                                             | ....       | 1    | 1-         | A-38      |
| T-8852   | Castle nut on radius rod bolt under engine frame ( $\frac{7}{8}$ "-9).....                                          | 1          | .... | 1-         | B-41      |

## Repair Parts List for Cockshutt "30" Tractor

| Part No. | DESCRIPTION                                                                           | No. Req'd. |      | Serial No. | Plate No. |
|----------|---------------------------------------------------------------------------------------|------------|------|------------|-----------|
|          |                                                                                       | Std.       | RC   |            |           |
| T-8855   | Front tire (Goodyear 550 x 16) (check TO-8845).....                                   | 2          | 2    | 1-         | B-37      |
| T-8856   | Front inner tube with valve (Goodyear 550 x 16) (check TO-8845).....                  | 2          | 2    | 1-         | B-37      |
| T-8857   | Outer nut for front wheel axle.....                                                   | 2          | 2    | 1-         | A-38      |
| T-8861   | Front tires (Crest 550 x 16) (check TO-8858).....                                     | 2          | 2    | 1-         | B-37      |
| T-8862   | Front inner tubes with valve (Crest 550 x 16) (check TO-8858).....                    | 2          | 2    | 1-         | B-37      |
| T-8867   | Tie rod tube for steering rod (check TO-8848).....                                    | 2          | 1    | 1-         | B-41      |
| T-8868   | Clamp for tie rod tube for steering rod, less bolts (check TO-8848).....              | 4          | 1    | 1-         | B-41      |
| T-9005   | Left hand brace to hitch.....                                                         | 1          | 1    | 1-         | A-39      |
| T-9006   | Draw bar for hitch.....                                                               | 1          | 1    | 1-         | B-39      |
| T-9007   | Bottom end piece for hitch.....                                                       | 1          | 1    | 1-         | B-39      |
| T-9008   | Forward carrier bolts (3/4"-10x3").....                                               | 2          | 2    | 1-         | A-39      |
| T-9010   | Pin in front end of hitch (1"x2 5/8").....                                            | 1          | 1    | 1-         | A-40      |
| T-9012   | Castle nut for front bolts on hitch (3/4"-10).....                                    | 2          | 2    | 1-         | A-37      |
| T-9013   | Right hand brace for hitch.....                                                       | 1          | 1    | 1-         | B-39      |
| T-9025   | Shim, intermediate shaft rear bearing live power take-off, .021 inches.....           | Var.       | Var. | 1-         | B-44      |
| T-9026   | Shim, intermediate shaft rear bearing live power take-off, .026 inches.....           | Var.       | Var. | 1-         | B-44      |
| T-9027   | Shim, intermediate shaft rear bearing on live power take-off, .030 inches.....        | Var.       | Var. | 1-         | B-44      |
| T-9028   | Shim, intermediate shaft rear bearing on live power take-off, .034 inches.....        | Var.       | Var. | 1-         | B-44      |
| T-9201   | Brake rod clevis.....                                                                 | 2          | 2    | -1600      | A-37      |
| T-9202   | Bearing for clutch release (standard power take-off only).....                        | 1          | 1    | 1-         | A-44      |
| T-9203   | Bearing for clutch release on live power take-off, front section (check TO-9597)..... | 1          | 1    | 1-         | A-44      |
| T-9204   | Outer seat support.....                                                               | 1          | 1    | 1-         | A-40      |
| T-9205   | Pilot bearing for clutch screw (Departure No. 7604).....                              | 1          | 1    | 1-         | B-40      |
| T-9206   | Inner seat support.....                                                               | 1          | 1    | 1-         | A-40      |
| T-9207   | Clutch cover plate.....                                                               | 1          | 1    | 1-         | A-41      |
| T-9208   | Clutch carrier spring.....                                                            | 1          | 1    | 1-         | A-44      |
| T-9209   | Clutch release fork (not for live power take-off).....                                | 1          | 1    | 1-         | A-44      |
| T-9210   | Clutch release fork (for live power take-off).....                                    | 1          | 1    | 1-         | A-44      |
| T-9212   | Brake lock lift spring.....                                                           | 1          | 1    | 1-         | A-39      |
| T-9213   | Left hand pull rod for brakes.....                                                    | 1          | 1    | 1-         | A-41      |
| T-9214   | Pin clevis to brake arm.....                                                          | 2          | 2    | -1600      | A-37      |
| T-9215   | Brake arm locking pin.....                                                            | 1          | 1    | 1-         | A-....    |
| T-9216   | Brake rod.....                                                                        | 1          | 1    | 1-         | A-41      |
| T-9217   | Clutch release rod.....                                                               | 1          | 1    | 1-         | B-38      |
| T-9219   | Clevis pin on clutch release rod (3/8"x1 5/32").....                                  | 1          | 1    | 10,001-    | B-38      |
| T-9220   | Disc for rear wheel.....                                                              | 2          | 2    | -2000      | B-38      |
| T-9222   | Nuts (5/8"-11) for rear rim bolts and weights (check TO-9280, TO-9282, TO-9283).....  | 20         | 20   | -2000      | B-39      |
| T-9223   | Rear tire (Goodyear 10 x 38) (check TO-9266).....                                     | 2          | 2    | 1-         | A-37      |
| T-9224   | Rear inner tube with valve (Goodyear 10 x 38) (check TO-9266).....                    | 2          | 2    | 1-         | A-37      |
| T-9225   | Left hand brake lever.....                                                            | 1          | 1    | 1-         | B-38      |
| T-9227   | Left hand brake linkage.....                                                          | 1          | 1    | 1-         | B-38      |
| T-9231   | Clutch pedal.....                                                                     | 1          | 1    | 1-         | A-39      |
| T-9232   | Left hand brake pedal.....                                                            | 1          | 1    | 1-         | B-39      |
| T-9233   | Right hand brake pedal.....                                                           | 1          | 1    | 1-         | B-39      |
| T-9238   | Left hand carrier plate.....                                                          | 1          | 1    | 1-         | B-38      |
| T-9247   | Bolts for rim and clamp to rear disc wheel (5/8"-11x2").....                          | 16         | 16   | 1-         | B-39      |
| T-9248   | Clevis on clutch rod.....                                                             | 1          | 1    | 10,000-    | B-38      |
| T-9249   | Locking pin for brake pedals.....                                                     | 1          | 1    | 1-         | A-37      |
| T-9260   | Cap screws for clutch (5/16" - 18 x 5/8").....                                        | 6          | 6    | 1-         | A-44      |
| T-9262   | Key for clutch release shaft (1 dia. x 3/8").....                                     | 1          | 1    | 1-         | A-44      |
| T-9265   | Locking nut for rear wheel bolts (3/4"-16).....                                       | 12         | 12   | 1-         | B-39      |
| T-9267   | Brake pedal retracing springs.....                                                    | 3          | 3    | 1-         | A-41      |
| T-9269   | Carrier clutch release (standard power take-off).....                                 | 1          | 1    | 1-         | A-44      |

## Repair Parts List for Cockshutt "30" Tractor

Page 43

| Part No. | DESCRIPTION                                                                                                                                                                | No. Req'd. |    | Serial No. | Plate No.            |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|----|------------|----------------------|
|          |                                                                                                                                                                            | Std.       | RC |            |                      |
| T-9271   | Brake pull rod and pull arm ( $\frac{1}{16}$ " x $1\frac{3}{8}$ ")                                                                                                         | 1          | 1  | 1601-      | A-41                 |
| T-9272   | Clevis to brake arm                                                                                                                                                        | 2          | 2  | 1601-      | A-37                 |
| T-9276   | Front cap of clutch shaft (standard power take-off)                                                                                                                        | 1          | 1  | 1-         | A-44                 |
| T-9277   | Bolts for wheel weight assembly (check TO-9282)                                                                                                                            | 2          | 2  | 1-         | B-39                 |
| T-9278   | Bolts for wheel weight assembly (check TO-9283)                                                                                                                            | 2          | 2  | 1-         | B-39                 |
| T-9279   | Spacer for fender support                                                                                                                                                  | 4          | 4  | 1-         | A-39                 |
| T-9281   | Gasket clutch shaft cap to case                                                                                                                                            | 1          | 1  | 1-         | A-44                 |
| T-9284   | Rear tires (Crest 10 x 38) (check TO-9286)                                                                                                                                 | 2          | 2  | 1-         | A-37                 |
| T-9285   | Rear inner tube with valve (Crest 10 x 38) (check TO-9286)                                                                                                                 | 2          | 2  | 1-         | A-37                 |
| T-9287   | Front oil seal clutch shaft                                                                                                                                                | 1          | 1  | 1-         | A-44                 |
| T-9288   | Clutch shaft                                                                                                                                                               | 1          | 1  | 1-         | A-45                 |
| T-9289   | Bevel gear for pulley drive                                                                                                                                                | 1          | 1  | 1-         | A-45                 |
| T-9290   | Snap ring for pulley drive gear                                                                                                                                            | 1          | 1  | 1-         | A-45                 |
| T-9291   | Bearing for rear clutch shaft                                                                                                                                              | 1          | 1  | 1-         | A-45                 |
| T-9292   | Rear bearing snap ring on clutch shaft                                                                                                                                     | 1          | 1  | 1-         | A-45                 |
| T-9293   | Rear bearing snap ring on clutch shaft                                                                                                                                     | 1          | 1  | 1-         | A-45                 |
| T-9294   | Rear bearing retainer clutch shaft                                                                                                                                         | 1          | 1  | 1-         | A-45                 |
| T-9295   | Lock wire for bearing return cap screws                                                                                                                                    | 1          | 1  | 1-         | A-45                 |
| T-9296   | Rear bearing oil seal clutch shaft                                                                                                                                         | 1          | 1  | 1-         | A-45                 |
| T-9297   | Sleeve of clutch shaft to main shaft (4-speed only)                                                                                                                        | 1          | 1  | 1-         | A-45                 |
| T-9298   | Snap ring on clutch and main shaft sleeve (4-speed only)                                                                                                                   | 1          | 1  | 1-         | B-45                 |
| T-9299   | Bearing on clutch shaft pilot                                                                                                                                              | 1          | 1  | 1-         | B-45                 |
| T-9300   | Standard power take-off only, closure;<br>Standard power take-off internal shaft hole                                                                                      | 1          | 1  | 1-         | .....                |
| T-9301   | Plug on creeper idler gear shaft (4-speed only)                                                                                                                            | 1          | 1  | 1-         | A-45                 |
| T-9302   | Case on clutch shaft                                                                                                                                                       | 1          | 1  | 1-         | A-45                 |
| T-9303   | Gasket on clutch shaft case to transmission case                                                                                                                           | 1          | 1  | 1-         | B-45                 |
| T-9304   | Stud—6 required to clutch shaft transmission case, 10 required near cover to<br>transmission case                                                                          | 16         | 16 | 1-         | A-39<br>B-45         |
| T-9305   | Plug, oil filler—1 required live power take-off case, 1 required transmission case,<br>1 required clutch shaft case                                                        | 3          | 3  | 1-         | B-44<br>B-45<br>A-45 |
| T-9306   | Drain plug—1 required intermediate housing, 1 required front pulley housing,<br>1 required inner carrier belt pulley housing                                               | 3          | 3  | 1-         | A-41<br>A-45         |
| T-9307   | Cover on clutch shaft case inspection                                                                                                                                      | 1          | 1  | 1-         | A-45                 |
| T-9308   | Gasket on clutch shaft case inspection                                                                                                                                     | 1          | 1  | 1-         | A-45                 |
| T-9309   | Cover for pulley drive opening                                                                                                                                             | 1          | 1  | 1-         | A-41                 |
| T-9310   | Gasket on pulley drive opening                                                                                                                                             | 1          | 1  | 1-         | A-41                 |
| T-9311   | Cover for creeper shift shaft hole (4-speed only)                                                                                                                          | 1          | 1  | 1-         | A-45                 |
| T-9312   | Gasket for creeper shift shaft hole (4-speed only)                                                                                                                         | 1          | 1  | 1-         | A-45                 |
| T-9313   | Cap on clutch shaft case forward                                                                                                                                           | 1          | 1  | 1-         | A-45                 |
| T-9314   | Gasket on clutch shaft case forward                                                                                                                                        | 1          | 1  | 1-         | A-45                 |
| T-9315   | Cover on left hand clutch shaft case                                                                                                                                       | 1          | 1  | 1-         | A-45                 |
| T-9316   | Gasket on left hand clutch shaft case                                                                                                                                      | 1          | 1  | 1-         | A-45                 |
| T-9317   | Spacer on front bearing of main transmission shaft (4-speed only)                                                                                                          | 1          | 1  | 1-         | B-45                 |
| T-9318   | Snap ring—1 required on rear driven clutch shaft live power take-off, 1 required<br>front side of creeper driven gear or on spacer collar when creeper<br>gear is not used | 2          | 2  | 1-         | B-45<br>B-44         |
| T-9319   | Bearing for front shaft                                                                                                                                                    | 1          | 1  | 1-         | B-45                 |
| T-9320   | Washer for front bearing spacing                                                                                                                                           | 1          | 1  | 1-         | B-45                 |
| T-9321   | Retainer front bearing spacing                                                                                                                                             | 1          | 1  | 1-         | B-45                 |
| T-9322   | Shaft transmission main drive                                                                                                                                              | 1          | 1  | 1-         | B-45                 |
| T-9323   | Drive sliding gear, 1st and 2nd speed (17- and 22-tooth)                                                                                                                   | 1          | 1  | 1-         | B-45                 |
| T-9324   | Drive sliding gear, 3rd and 4th speed (27- and 38-tooth)                                                                                                                   | 1          | 1  | 1-         | B-45                 |
| T-9325   | Bearing main shaft, rear                                                                                                                                                   | 1          | 1  | 1-         | B-45                 |

| Part No. | DESCRIPTION                                                                                                                                                                                                                       | No. Std. | Req'd. RC | Serial No. | Plate No.            |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|-----------|------------|----------------------|
| T-9326   | Snap ring, right and left end of short shaft and left end of long shaft, on belt pulley drive, 1 required on rear shaft live power take-off.....                                                                                  | 4        | 4         | 1-         | B-45<br>A-41<br>A-44 |
| T-9327   | Shaft reverse gear (order T-9676).....                                                                                                                                                                                            | 1        | 1         | 1-         | B-45                 |
| T-9328   | Gear reverse sliding, 20- and 25-tooth.....                                                                                                                                                                                       | 1        | 1         | 1-         | B-45                 |
| T-9329   | Bushing, reverse sliding gear.....                                                                                                                                                                                                | 1        | 1         | 1-         | B-45                 |
| T-9330   | Gear, 1st speed drive (48-tooth).....                                                                                                                                                                                             | 1        | 1         | 1-         | B-45                 |
| T-9331   | Gear, 2nd speed drive (43-tooth).....                                                                                                                                                                                             | 1        | 1         | 1-         | B-45                 |
| T-9332   | 38-tooth gear—1 required in transmission, 1 required in standard power take-off...                                                                                                                                                | 2        | 2         | 1-         | B-44<br>B-45         |
| T-9333   | Gear, 4th speed drive (27-tooth).....                                                                                                                                                                                             | 1        | 1         | 1-         | B-45                 |
| T-9334   | Spacer, 2nd and 3rd speed driven gears.....                                                                                                                                                                                       | 1        | 1         | 1-         | B-45                 |
| T-9335   | Pinion bevel drive (6-tooth).....                                                                                                                                                                                                 | 1        | 1         | 1-         | B-45                 |
| T-9336   | Washer bevel pinion shaft front.....                                                                                                                                                                                              | 1        | 1         | 1-         | B-45                 |
| T-9337   | Nut front bevel pinion shaft.....                                                                                                                                                                                                 | 1        | 1         | 1-         | B-45                 |
| T-9338   | Cup—1 required rear driven shaft live power take-off, 2 required on front and rear driven shaft on standard power take-off, 4 required on belt pulley drive shaft, 1 required on bevel pinion shaft front (Timken No. 14276)..... | 8        | 8         | 1-         | A-41<br>B-44<br>B-45 |
| T-9339   | Snap ring—1 required on front bearing bevel pin in transmission, 1 required front bearing driven shaft standard power take-off.....                                                                                               | 2        | 2         | 1-         | B-44<br>B-45         |
| T-9340   | Washer front bearing bevel pinion shaft.....                                                                                                                                                                                      | 1        | 1         | 1-         | B-45                 |
| T-9341   | Cup, rear bearing bevel pinion shaft (Timken No. 46368).....                                                                                                                                                                      | 1        | 1         | 1-         | B-45                 |
| T-9342   | Cone, rear bearing bevel pinion shaft (Timken No. 46150).....                                                                                                                                                                     | 1        | 1         | 1-         | B-45                 |
| T-9343   | Snap ring, rear bearing bevel pinion shaft.....                                                                                                                                                                                   | 1        | 1         | 1-         | B-45                 |
| T-9345   | Washer, rear bearing bevel pinion shaft.....                                                                                                                                                                                      | 1        | 1         | 1-         | B-45                 |
| T-9346   | Gear, bevel drive (40-tooth).....                                                                                                                                                                                                 | 1        | 1         | 1-         | A-39                 |
| T-9347   | Lock wire cap screws in differential.....                                                                                                                                                                                         | 1        | 1         | 1-         | A-39                 |
| T-9348   | Differential case.....                                                                                                                                                                                                            | 1        | 1         | 1-         | A-39                 |
| T-9349   | Pinion for differential.....                                                                                                                                                                                                      | 2        | 2         | 1-         | A-39                 |
| T-9350   | Pin for differential pinion.....                                                                                                                                                                                                  | 2        | 2         | 1-         | A-39                 |
| T-9351   | Pin differential pinion pin lock.....                                                                                                                                                                                             | 2        | 2         | 1-         | A-39                 |
| T-9352   | Washer, differential pinion thrust.....                                                                                                                                                                                           | 2        | 2         | 1-         | A-39                 |
| T-9353   | Shaft final drive pinion and differential support.....                                                                                                                                                                            | 1        | 1         | 1-         | A-39                 |
| T-9354   | Pin differential support shaft.....                                                                                                                                                                                               | 1        | 1         | 1-         | A-39                 |
| T-9355   | Pinion, final drive and differential side gear (10-tooth).....                                                                                                                                                                    | 2        | 2         | 1-         | A-39                 |
| T-9356   | Washer, differential side gear thrust.....                                                                                                                                                                                        | 2        | 2         | 1-         | A-39                 |
| T-9357   | Cone, final drive pinion bearing (Timken No. 3979).....                                                                                                                                                                           | 2        | 2         | 1-         | A-39                 |
| T-9358   | Oil packing for differential bearing.....                                                                                                                                                                                         | 2        | 2         | 1-         | A-39                 |
| T-9359   | Cap, differential bearing.....                                                                                                                                                                                                    | 2        | 2         | 1-         | A-39                 |
| T-9360   | Gasket, differential bearing cap.....                                                                                                                                                                                             | 2        | 2         | 1-         | A-39                 |
| T-9361   | Shim, differential bearing cap .003.....                                                                                                                                                                                          | 2        | 2         | 1-         | A-39                 |
| T-9362   | Shim, differential bearing cap .005.....                                                                                                                                                                                          | 4        | 4         | 1-         | A-39                 |
| T-9363   | Shim, differential bearing cap .010.....                                                                                                                                                                                          | 6        | 6         | 1-         | A-39                 |
| T-9364   | Oil seal differential bearing cap.....                                                                                                                                                                                            | 2        | 2         | 1-         | A-39                 |
| T-9365   | Case transmission.....                                                                                                                                                                                                            | 1        | 1         | -1600      | B-45                 |
| T-9366   | Dowel pin, rear cover to transmission case.....                                                                                                                                                                                   | 2        | 2         | 1-         | A-39                 |
| T-9368   | Cover transmission case, rear (less rear section of power take-off).....                                                                                                                                                          | 1        | 1         | 1-         | A-39                 |
| T-9369   | Gasket, transmission case, rear cover standard and live power take-off.....                                                                                                                                                       | 1        | 1         | 1-         | B-44                 |
| T-9370   | Plug, transmission case drain.....                                                                                                                                                                                                | 1        | 1         | 1-         | B-45                 |
| T-9371   | Tower transmission gear shift.....                                                                                                                                                                                                | 1        | 1         | 1-         | B-45                 |
| T-9372   | Gasket, tower to case.....                                                                                                                                                                                                        | 1        | 1         | 1-         | B-45                 |
| T-9373   | Boot, gear shift lever.....                                                                                                                                                                                                       | 1        | 1         | 1-         | B-45                 |
| T-9374   | Gear shift lever.....                                                                                                                                                                                                             | 1        | 1         | 1-         | B-45                 |
| T-9375   | Knob, gear shift lever.....                                                                                                                                                                                                       | 1        | 1         | 1-         | B-45                 |
| T-9376   | Pin, gear shift lever.....                                                                                                                                                                                                        | 1        | 1         | 1-         | B-45                 |

## Repair Parts List for Cockshutt "30" Tractor

Page 45

| Part No. | DESCRIPTION                                                                                         | No. Req'd. |    | Serial No. | Plate No. |
|----------|-----------------------------------------------------------------------------------------------------|------------|----|------------|-----------|
|          |                                                                                                     | Std.       | RC |            |           |
| T-9377   | Washer, gear shift lever thrust.....                                                                | 1          | 1  | 1-         | B-45      |
| T-9378   | Snap ring, lever thrust washer.....                                                                 | 1          | 1  | 1-         | B-45      |
| T-9379   | Plate, transmission shift interlock.....                                                            | 1          | 1  | 1-         | B-45      |
| T-9380   | Pin, transmission shift interlock.....                                                              | 2          | 2  | 1-         | B-45      |
| T-9381   | Washer, transmission shift.....                                                                     | 2          | 2  | 1-         | B-45      |
| T-9382   | Spring, transmission shift.....                                                                     | 2          | 2  | 1-         | B-45      |
| T-9383   | Lockwasher in transmission shift.....                                                               | 2          | 2  | 1-         | B-45      |
| T-9384   | Shaft (1st and 2nd) in transmission shift.....                                                      | 1          | 1  | 1-         | B-45      |
| T-9385   | Shaft (3rd and 4th) in transmission shift.....                                                      | 1          | 1  | 1-         | B-45      |
| T-9386   | Shaft (reverse) in transmission.....                                                                | 1          | 1  | 1-         | B-45      |
| T-9387   | Pin, lock, in transmission shift.....                                                               | 3          | 3  | 1-         | B-45      |
| T-9388   | Fork (1st and 2nd) in transmission shift.....                                                       | 1          | 1  | 1-         | B-45      |
| T-9389   | Fork (3rd and 4th) in transmission shift.....                                                       | 1          | 1  | 1-         | B-45      |
| T-9390   | Fork (reverse) in transmission shift.....                                                           | 1          | 1  | 1-         | B-45      |
| T-9391   | Spring fork, lock in transmission shift.....                                                        | 3          | 3  | 1-         | B-45      |
| T-9392   | Ball—3 required transmission for lock, 1 required gear shift fork lock standard power take-off..... | 4          | 4  | 1-         | B-45      |
| T-9393   | Plug, shift shaft hole transmission shaft.....                                                      | 3          | 3  | 1-         | B-45      |
| T-9394   | Brake drum.....                                                                                     | 2          | 2  | -1600      | A-39      |
| T-9395   | Nut, brake drum.....                                                                                | 2          | 2  | 1-         | A-39      |
| T-9396   | Washer, brake drum nut.....                                                                         | 2          | 2  | 1-         | A-39      |
| T-9397   | Lockwasher, brake drum nut.....                                                                     | 2          | 2  | 1-         | A-39      |
| T-9399   | Pin, brake band hinge.....                                                                          | 2          | 2  | 1-         | A-39      |
| T-9400   | End brake adjusting.....                                                                            | 2          | 2  | 1-         | A-39      |
| T-9401   | Nut, brake band adjusting.....                                                                      | 2          | 2  | 1-         | A-39      |
| T-9402   | Rivet, adjusting end to brake band.....                                                             | 6          | 6  | 1-         | A-39      |
| T-9403   | Spring, brake band return.....                                                                      | 2          | 2  | 1-         | A-39      |
| T-9404   | Lining, brake band.....                                                                             | 2          | 2  | 1-         | A-39      |
| T-9405   | Lining, brake band.....                                                                             | 2          | 2  | 1-         | A-39      |
| T-9406   | Rivet, brake lining.....                                                                            | 32         | 32 | 1-         | A-39      |
| T-9407   | Toggle, brake band.....                                                                             | 2          | 2  | 1-         | A-39      |
| T-9408   | Key, brake band toggle.....                                                                         | 2          | 2  | 1-         | A-39      |
| T-9409   | Pin, brake band toggle.....                                                                         | 2          | 2  | 1-         | A-39      |
| T-9413   | Bushing, brake shaft.....                                                                           | 2          | 2  | 1-         | A-39      |
| T-9414   | Snap ring, brake shaft.....                                                                         | 2          | 2  | 1-         | A-39      |
| T-9415   | Washer, brake shaft.....                                                                            | 2          | 2  | 1-         | A-39      |
| T-9416   | Left hand brake cover.....                                                                          | 1          | 1  | 1-         | A-39      |
| T-9417   | Right hand brake cover.....                                                                         | 1          | 1  | 1-         | A-39      |
| T-9418   | Gasket brake cover to case.....                                                                     | 2          | 2  | 1-         | A-39      |
| T-9419   | Brake, adjusting hole cover.....                                                                    | 2          | 2  | 1-         | A-39      |
| T-9420   | Gear, transmission final drive.....                                                                 | 2          | 2  | 1-         | A-39      |
| T-9421   | Shaft, transmission axle final drive.....                                                           | 2          | 2  | 1-         | B-39      |
| T-9422   | Nut, transmission inner axle final drive shaft.....                                                 | 2          | 2  | 1-         | B-39      |
| T-9423   | Lockwasher, transmission inner axle final drive shaft.....                                          | 2          | 2  | 1-         | B-39      |
| T-9424   | Cup, transmission axle drive shaft bearing (Timken 382-A).....                                      | 4          | 4  | 1-         | A-39      |
| T-9425   | Cone, transmission axle drive shaft bearing (Timken 387).....                                       | 4          | 4  | 1-         | B-39      |
| T-9426   | Right hand housing end for final drive axle.....                                                    | 1          | 1  | 1-         | A-39      |
| T-9427   | Left hand housing end for final drive axle.....                                                     | 1          | 1  | 1-         | A-39      |
| T-9428   | Gasket final drive housing end to case.....                                                         | 2          | 2  | 1-         | A-39      |
| T-9429   | Stud, final drive housing end to case.....                                                          | 14         | 14 | 1-         | A-39      |
| T-9430   | Ring seal, axle drive shaft.....                                                                    | 2          | 2  | 1-         | B-39      |
| T-9431   | Oil seal axle drive shaft.....                                                                      | 2          | 2  | 1-         | B-39      |
| T-9432   | Washer, outer axle drive shaft.....                                                                 | 2          | 2  | 1-         | B-39      |

| Part No. | DESCRIPTION                                                                                                                                                                                  | No. Req'd. |    | Serial No. | Plate No.    |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|----|------------|--------------|
|          |                                                                                                                                                                                              | Std.       | RC |            |              |
| T-9433   | Nut, outer axle drive shaft.....                                                                                                                                                             | 2          | 2  | 1-         | B-39         |
| T-9434   | Slinger inside of flange hub.....                                                                                                                                                            | 2          | 2  | -2000      | B-39         |
| T-9435   | Flange hub, axle drive shaft.....                                                                                                                                                            | 2          | 2  | 1-         | B-39         |
| T-9436   | Wheel stud ( $\frac{3}{4}$ "-16x3 $\frac{1}{8}$ ").....                                                                                                                                      | 12         | 12 | 1-         | B-39         |
| T-9438   | 8-speed only, gear creeper drive sliding, 17-tooth.....                                                                                                                                      | 1          | 1  | 1-         | A-45         |
| T-9439   | 8-speed only, gear creeper driven, 22-tooth.....                                                                                                                                             | 1          | 1  | 1-         | A-45         |
| T-9440   | 8-speed only, fork creeper drive gear shift.....                                                                                                                                             | 1          | 1  | 1-         | A-45         |
| T-9441   | 8-speed only, screw fork lock on creeper gear.....                                                                                                                                           | 1          | 1  | 1-         | A-45         |
| T-9442   | Lock wire—1 required on cap screw fork lock on live power take-off, 1 required on cap screw fork lock on creeper gear, 1 required on cap screw gear shift shaft creeper gear shaft lock..... | 3          | 3  | 1-         | A-45<br>B-44 |
| T-9443   | 8-speed only, lever, creeper drive gear shift.....                                                                                                                                           | 1          | 1  | 1-         | A-45         |
| T-9444   | 8-speed only, spring, gear shift lever on creeper gear.....                                                                                                                                  | 1          | 1  | 1-         | A-45         |
| T-9445   | 8-speed only, gear creeper idler, 21- and 16-tooth.....                                                                                                                                      | 1          | 1  | 1-         | A-45         |
| T-9446   | 8-speed only, Hyatt bearing creeper idler gear.....                                                                                                                                          | 2          | 2  | 1-         | A-45         |
| T-9447   | 8-speed only, Hyatt bearing spacer creeper idler bearing.....                                                                                                                                | 1          | 1  | 1-         | A-45         |
| T-9448   | 8-speed only, washer creeper idler gear thrust.....                                                                                                                                          | 1          | 1  | 1-         | A-45         |
| T-9449   | 8-speed only, shaft creeper idler gear.....                                                                                                                                                  | 1          | 1  | 1-         | A-45         |
| T-9450   | 8-speed only, set screw creeper idler gear shaft lock.....                                                                                                                                   | 1          | 1  | 1-         | A-45         |
| T-9451   | 8-speed only, washer creeper idler gear.....                                                                                                                                                 | 1          | 1  | 1-         | A-45         |
| T-9452   | 8-speed only, quadrant shift lever on creeper gear.....                                                                                                                                      | 1          | 1  | 1-         | A-45         |
| T-9453   | 8-speed only, felt for shift lever on creeper gear.....                                                                                                                                      | 1          | 1  | 1-         | A-45         |
| T-9454   | Cap, front clutch shaft live power take-off.....                                                                                                                                             | 1          | 1  | 1-         | A-44         |
| T-9455   | Oil seal, front drive gear clutch shaft on live power take-off.....                                                                                                                          | 1          | 1  | 1-         | A-44         |
| T-9456   | Carrier, clutch release on live power take-off (check TO-9597).....                                                                                                                          | 1          | 1  | 1-         | A-44         |
| T-9457   | Spider power take-off (check TO-9594).....                                                                                                                                                   | 1          | 1  | 1-         | A-44         |
| T-9459   | Pin drive spider plate on live power take-off.....                                                                                                                                           | 3          | 3  | 1-         | A-44         |
| T-9460   | Snap ring—2 required on spider drive, 1 required on front drive gear bearing.....                                                                                                            | 3          | 3  | 1-         | A-44         |
| T-9461   | Bearing front drive gear on live power take-off.....                                                                                                                                         | 1          | 1  | 1-         | A-44         |
| T-9462   | Gear clutch shaft on front live power take-off drive (17-tooth).....                                                                                                                         | 1          | 1  | 1-         | A-44         |
| T-9463   | Bearing forward on live power take-off front drive shaft.....                                                                                                                                | 1          | 1  | 1-         | A-44         |
| T-9464   | Snap ring, front drive shaft bearing on live power take-off.....                                                                                                                             | 1          | 1  | 1-         | A-44         |
| T-9465   | Gear, front drive shaft on live power take-off.....                                                                                                                                          | 1          | 1  | 1-         | A-44         |
| T-9466   | Front drive shaft on live power take-off shaft.....                                                                                                                                          | 1          | 1  | 1-         | A-44         |
| T-9467   | Oil seal, front drive shaft intermediate on live power take-off.....                                                                                                                         | 1          | 1  | 1-         | A-44         |
| T-9468   | Bearing, front drive shaft rear on live power take-off.....                                                                                                                                  | 1          | 1  | 1-         | A-44         |
| T-9469   | Oil deflector, front drive shaft bearing on live power take-off.....                                                                                                                         | 1          | 1  | 1-         | A-44         |
| T-9470   | Oil retainer on front drive shaft bearing of live power take-off.....                                                                                                                        | 1          | 1  | 1-         | A-44         |
| T-9473   | Front cover for drive shaft bearing on live power take-off.....                                                                                                                              | 1          | 1  | 1-         | A-44         |
| T-9474   | Front gasket for driven intermediate and shaft bearing cover on live power take-off.....                                                                                                     | 3          | 3  | 1-         | A-44         |
| T-9475   | Ball bearing drive shaft, rear, on live power take-off (No. 43206).....                                                                                                                      | 1          | 1  | 1-         | A-44         |
| T-9476   | Rear live power take-off input gear.....                                                                                                                                                     | 1          | 1  | ...        | A-44         |
| T-9477   | Spider ring, front section live power take-off (check TO-9594).....                                                                                                                          | 1          | 1  | 1-         | A-44         |
| T-9478   | Snap ring, rear input gear on live power take-off.....                                                                                                                                       | 1          | 1  | 1-         | A-44         |
| T-9479   | Shaft intermediate on live power take-off.....                                                                                                                                               | 1          | 1  | 1-         | B-44         |
| T-9480   | Front ball bearing, intermediate shaft on live power take-off.....                                                                                                                           | 1          | 1  | 1-         | A-44         |
| T-9481   | Front cover for intermediate and driven shaft bearing on live power take-off.....                                                                                                            | 2          | 2  | 1-         | A-44         |
| T-9482   | Gear, intermediate drive on live power take-off.....                                                                                                                                         | 1          | 1  | 1-         | A-44         |
| T-9483   | Washer, intermediate driven gear on live power take-off.....                                                                                                                                 | 2          | 2  | 1-         | B-44         |
| T-9484   | Gear, intermediate drive on live power take-off.....                                                                                                                                         | 1          | 1  | 1-         | B-44         |
| T-9485   | Bushing, intermediate drive gear on live power take-off.....                                                                                                                                 | 1          | 1  | 1-         | B-44         |
| T-9486   | Sleeve, intermediate drive gear on live power take-off.....                                                                                                                                  | 1          | 1  | 1-         | B-44         |
| T-9487   | Rivet, intermediate drive gear on live power take-off.....                                                                                                                                   | 6          | 6  | 1-         | B-44         |
| T-9488   | Plate clutch mounting on live power take-off.....                                                                                                                                            | 1          | 1  | 1-         | B-44         |

## Repair Parts List for Cockshutt "30" Tractor

Page 47

| Part No. | DESCRIPTION                                                                                                                                      | No. Req'd. |      | Serial | Plate |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------|------------|------|--------|-------|
|          |                                                                                                                                                  | Std.       | RC   |        |       |
| T-9490   | Bearing, intermediate rear shaft clutch live power take-off (check TO-9489) (Ball bearing No. 3205).....                                         | 1          | 1    | 1-     | B-44  |
| T-9491   | Cap, rear bearing intermediate shaft for clutch on live power take-off (check TO-9489).....                                                      | 1          | 1    | 1-     | B-44  |
| T-9492   | Gasket, intermediate shaft rear bearing cap on clutch live power take-off (check TO-9489).....                                                   | 1          | 1    | 1-     | B-44  |
| T-9493   | Fork shift live power take-off.....                                                                                                              | 1          | 1    | 1-     | B-44  |
| T-9494   | Screw in intermediate drive gear shift fork live power take-off.....                                                                             | 1          | 1    | 1-     | B-44  |
| T-9495   | Washer, intermediate drive gear shift fork in rear section of live power take-off.....                                                           | 1          | 1    | 1-     | B-44  |
| T-9496   | Intermediate lever driven gear shift fork rear section of live power take-off.....                                                               | 1          | 1    | 1-     | B-44  |
| T-9497   | Intermediate retainer on drive gear shift shaft—1 required on rear section of live power take-off, 1 required on standard power take-off.....    | 2          | 2    | 1-     | B-44  |
| T-9498   | Intermediate felt washer on drive gear shift shaft—1 required on rear section of live power take-off, 1 required on standard power take-off..... | 2          | 2    | 1-     | B-44  |
| T-9499   | Shaft driven rear section of live power take-off.....                                                                                            | 1          | 1    | 1-     | B-44  |
| T-9500   | Driven gear for rear section of live power take-off.....                                                                                         | 1          | 1    | 1-     | B-44  |
| T-9501   | Snap ring for driven gear rear section of live power take-off.....                                                                               | 1          | 1    | 1-     | B-44  |
| T-9502   | Spacer driven gear rear section of live power take-off.....                                                                                      | 1          | 1    | 1-     | A-44  |
| T-9503   | Cup, driven shaft front bearing of live power take-off (Timken No. 15520).....                                                                   | 1          | 1    | 1-     | A-44  |
| T-9504   | Cone, driven shaft front bearing for live power take-off (Timken No. 15578).....                                                                 | 1          | 1    | 1-     | A-44  |
| T-9505   | Oil seal—1 required rear bearing on driven shaft live power take-off, 1 required rear standard power take-off.....                               | 2          | 2    | 1-     | B-44  |
| T-9506   | Cap, driven shaft rear bearing on live and standard power take-off.....                                                                          | 1          | 1    | 1-     | B-44  |
| T-9507   | Gasket, driven shaft rear bearing cap on live and standard power take-off.....                                                                   | 2          | 2    | 1-     | B-44  |
| T-9508   | Shim, driven shaft rear bearing cap .003 on live and standard power take-off.....                                                                | Var.       | Var. | 1-     | B-44  |
| T-9509   | Shim, driven shaft rear bearing cap .005 on live and standard power take-off.....                                                                | Var.       | Var. | 1-     | B-44  |
| T-9510   | Shim, driven shaft rear bearing cap .010 on live and standard power take-off.....                                                                | Var.       | Var. | 1-     | B-44  |
| T-9511   | Shield, driven shaft live power take-off.....                                                                                                    | 1          | 1    | 1-     | B-39  |
| T-9512   | Case for live power take-off.....                                                                                                                | 1          | 1    | 1-     | B-44  |
| T-9513   | Gasket, live power take-off case to adapter.....                                                                                                 | 1          | 1    | 1-     | B-44  |
| T-9514   | Dowel pins, live power take-off case to adapter.....                                                                                             | 2          | 2    | 1-     | A-44  |
| T-9515   | Adapter, intermediate case, live power take-off.....                                                                                             | 1          | 1    | 1-     | A-44  |
| T-9516   | Oil drain plug, live power take-off case.....                                                                                                    | 1          | 1    | 1-     | A-44  |
| T-9518   | Bearing on standard power take-off drive.....                                                                                                    | 1          | 1    | 1-     | B-44  |
| T-9519   | Snap ring, drive shaft bearing standard power take-off.....                                                                                      | 1          | 1    | 1-     | B-44  |
| T-9520   | Gear sliding drive (16- and 23-tooth) on standard power take-off.....                                                                            | 1          | 1    | 1-     | B-44  |
| T-9523   | Fork drive gear shift on standard power take-off.....                                                                                            | 1          | 1    | 1-     | B-44  |
| T-9524   | Fork lock screw—1 required in shift fork on belt pulley drive, 1 required in shift fork standard power take-off.....                             | 2          | 2    | 1-     | B-44  |
| T-9525   | Spring, drive gear shift fork lock standard power take-off.....                                                                                  | 1          | 1    | 1-     | B-44  |
| T-9527   | Screw, drive gear shift fork lock standard power take-off.....                                                                                   | 1          | 1    | 1-     | B-44  |
| T-9528   | Lockwasher for shift fork lock screws standard power take-off.....                                                                               | 1          | 1    | 1-     | B-44  |
| T-9529   | Cap, drive shaft bearing standard power take-off.....                                                                                            | 1          | 1    | 1-     | B-44  |
| T-9530   | Gasket, drive shaft bearing cap standard power take-off.....                                                                                     | 1          | 1    | 1-     | B-44  |
| T-9531   | Standard power take-off driven shaft.....                                                                                                        | 1          | 1    | 1-     | B-44  |
| T-9532   | Low range driven gear, 45-tooth, standard power take-off gear.....                                                                               | 1          | 1    | 1-     | B-44  |
| T-9533   | Spacer, low and high range driven gears, standard power take-off.....                                                                            | 1          | 1    | 1-     | B-44  |
| T-9534   | Standard power take-off case.....                                                                                                                | 1          | 1    | 1-     | B-44  |
| T-9535   | Shield, driven shaft on standard power take-off.....                                                                                             | 1          | 1    | 1-     | B-39  |
| T-9536   | Short inner drive spline shaft for pulley drive.....                                                                                             | 1          | 1    | 1-     | A-41  |
| T-9537   | Driven pinion on belt pulley drive.....                                                                                                          | 1          | 1    | 1-     | A-41  |
| T-9538   | Cone for bearing on inner and outer shafts belt pulley drive.....                                                                                | 4          | 4    | 1-     | A-41  |
| T-9539   | Sliding clutch collar on end of outer shaft.....                                                                                                 | 1          | 1    | 1-     | A-41  |
| T-9540   | Long outer spline shaft for pulley drive.....                                                                                                    | 1          | 1    | 1-     | A-41  |
| T-9541   | Shifter fork for sliding clutch on pulley drive.....                                                                                             | 1          | 1    | 1-     | A-41  |

| Part No. | DESCRIPTION                                                                                                                               | No. Req'd. |       | Serial No. | Plate No. |
|----------|-------------------------------------------------------------------------------------------------------------------------------------------|------------|-------|------------|-----------|
|          |                                                                                                                                           | Std.       | RC    |            |           |
| T-9542   | Shifter fork lock lever on belt pulley drive.....                                                                                         | 1          | 1     | 1-         | A-41      |
| T-9543   | Quadrant shift lever on belt pulley drive.....                                                                                            | 1          | 1     | 1-         | A-41      |
| T-9544   | Shim, bearing spacer .121 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9545   | Shim, bearing spacer .126 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9546   | Shim, bearing spacer .131 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9547   | Shim, bearing spacer .136 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9548   | Shim, bearing spacer .141 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9549   | Shim, bearing spacer .146 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9550   | Shim, bearing spacer .151 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9551   | Shim, bearing spacer .156 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9552   | Shim, bearing spacer .161 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9553   | Shim, bearing spacer .166 on belt pulley drive.....                                                                                       | Var.       | Var.  | 1-         | A-41      |
| T-9554   | Oil seal, pulley shaft bearing outer on belt pulley drive.....                                                                            | 1          | 1     | 1-         | A-41      |
| T-9555   | Nut, outer end on belt pulley shaft.....                                                                                                  | 1          | 1     | 1-         | A-41      |
| T-9556   | Lockwasher on belt pulley shaft nut.....                                                                                                  | 1          | 1     | 1-         | A-41      |
| T-9557   | Outer housing carrier on belt pulley drive.....                                                                                           | 1          | 1     | 1-         | A-41      |
| T-9558   | Gasket between inner to outer housing carrier.....                                                                                        | 1          | 1     | 1-         | A-41      |
| T-9559   | Carrier belt, pulley housing, inner.....                                                                                                  | 1          | 1     | 1-         | A-41      |
| T-9560   | Shim between inner carrier housing to case .003 on belt pulley drive.....                                                                 | Var.       | Var.  | 1-         | A-41      |
| T-9561   | Shim between inner carrier housing to case .010 on belt pulley drive.....                                                                 | Var.       | Var.  | 1-         | A-41      |
| T-9562   | Stud from carrier housing to case on belt pulley drive.....                                                                               | 4          | 4     | 1-         | A-41      |
| T-9569   | Bracket, pulley shift lever.....                                                                                                          | 1          | 1     | 1-         | A-41      |
| T-9573   | Pressure plate, live power take-off clutch (check TO-9598).....                                                                           | 1          | 1     | 1-         | B-44      |
| T-9574   | Pressure spring, live power take-off clutch (check TO-9598).....                                                                          | 9          | 9     | 1-         | B-44      |
| T-9575   | Pressure spring cup, live power take-off clutch.....                                                                                      | 9          | 9     | 1-         | B-44      |
| T-9576   | Washer—9 required pressure spring cup, 3 required return spring live power take-off clutch (check TO-9598).....                           | 12         | 12    | 1-         | B-44      |
| T-9577   | Spacer block, bracket to pressure plate, live power take-off clutch (check TO-9598).....                                                  | 3          | 3     | 1-         | B-44      |
| T-9578   | Return spring, bracket spacer to pressure plate, live power take-off clutch (check TO-9598).....                                          | 3          | 3     | 1-         | B-44      |
| T-9579   | Link, release sleeve to bracket, live power take off clutch (check TO-9598).....                                                          | 6          | 6     | 1-         | B-44      |
| T-9580   | Pin, through link release sleeve, live power take-off clutch (check TO-9598).....                                                         | 6          | 6     | 1-         | B-44      |
| T-9581   | Lever, release sleeve to bracket, live power take-off clutch (check TO-9598).....                                                         | 3          | 3     | 1-         | B-44      |
| T-9582   | Pin, through roller in release sleeve, live power take-off clutch (check TO-9598).....                                                    | 3          | 3     | 1-         | B-44      |
| T-9583   | Roller in release sleeve link, live power take-off clutch (check TO-9598).....                                                            | 3          | 3     | 1-         | B-44      |
| T-9584   | Hub, for facing disc, live power take-off clutch.....                                                                                     | 1          | 1     | 1-         | B-44      |
| T-9585   | Plate for clutch and disc assembly, live power take-off clutch.....                                                                       | 1          | 1     | 1-         | B-44      |
| T-9593   | Clutch facing on live power take-off.....                                                                                                 | 2          | 2     | 1-         | B-44      |
| T-9595   | Rivet, spider ring, front section live power take-off (check TO-9594).....                                                                | 3          | 3     | 1-         | A-44      |
| T-9596   | Washer, spider ring, front section live power take-off (check TO-9594).....                                                               | 3          | 3     | 1-         | A-44      |
| T-9640   | Clevis on clutch rod.....                                                                                                                 | 1          | 1     | -10,000    | B-38      |
| T-9641   | Clevis pin in clutch rod, $\frac{3}{16}$ " x $1\frac{1}{2}$ ".....                                                                        | 1          | 1     | -10,000    | B-38      |
| T-9645   | Flange hub, axle drive shaft.....                                                                                                         | 2          | 2     | 2001-      | .....     |
| T-9647   | Slinger inside of flange hub.....                                                                                                         | 2          | 2     | 2001-      | .....     |
| T-9669   | Case, transmission.....                                                                                                                   | 1          | 1     | 1600-      | .....     |
| T-9672   | Key in pulley drive gear (for plate number, see 607 in A-41).....                                                                         | 1          | 1     | 1-         | .....     |
| T-9673   | Key for input gear live power take-off (for plate number, see 807 in A-44).....                                                           | 1          | 1     | 1-         | .....     |
| T-9674   | Key driven gear to pinion shaft in transmission and in low and high range driven gears (for plate number, see 1014 in B-44 and B-45)..... | 3          | 3     | 1-         | .....     |
| T-9675   | Key pulley shaft, outer (for plate number, see No. 808 in A-41).....                                                                      | 1          | 1     | 1-         | .....     |
| T-9676   | Reverse gear shaft (see T-9327 for plate number).....                                                                                     | 1          | 1     | 1-         | .....     |
| T-9677   | Plug, in tower.....                                                                                                                       | 1          | 1     | 1-         | .....     |
| T-9679   | Bushing differential pinion.....                                                                                                          | 2          | 2     | 1-         | .....     |
| TO-2000  | Standard tractor assembly.....                                                                                                            | 1          | ..... | .....      | .....     |
| TO-2500  | Row crop tractor assembly.....                                                                                                            | .....      | 1     | .....      | .....     |

## Repair Parts List for Cockshutt "30" Tractor

Page 49

| Part No. | DESCRIPTION                                                                                                                                                                                                                                                                                   | No. Req'd. |    | Serial No. | Plate No. |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|----|------------|-----------|
|          |                                                                                                                                                                                                                                                                                               | Std.       | RC |            |           |
| TO-5000  | Engine assembly—one TO-5219 governor, one TO-5348 oil pump, one TO-5262 water pump, one TO-5380 thermostat.....                                                                                                                                                                               | 1          | 1  | 1-         | A-43      |
| TO-5009  | Fan blade assembly.....                                                                                                                                                                                                                                                                       | 1          | 1  | 1-         | B-41      |
| TO-5011  | Oil filter assembly—one TO-5046, one TO-5055W.....                                                                                                                                                                                                                                            | 1          | 1  | 1-         | B-38      |
| TO-5021  | Oil gauge assembly.....                                                                                                                                                                                                                                                                       | 1          | 1  | 2001-      | B-39      |
| TO-5023  | Link, governor arm to throttle.....                                                                                                                                                                                                                                                           | 1          | 1  | 1-         | B-41      |
| TO-5030  | Oil line, gauge assembly.....                                                                                                                                                                                                                                                                 | 1          | 1  | -2000      | B-39      |
| TO-5032  | Oil line to oil filter assembly.....                                                                                                                                                                                                                                                          | 1          | 1  | 1-         | A-38      |
| TO-5033  | Oil line, return to crankcase assembly.....                                                                                                                                                                                                                                                   | 1          | 1  | 1-         | A-38      |
| TO-5034  | Oil line to gauge assembly.....                                                                                                                                                                                                                                                               | 1          | 1  | 2001-      | B-39      |
| TO-5040  | Piston replacement kit—one T-5280, one T-5281, two T-5282, three T-5283, one T-5284, one T-5255, two T-5256.....                                                                                                                                                                              | 1          | 1  | 1-         | B-40      |
| TO-5046  | Cover for oil filter assembly—one T-5047, one 5048, one T-5049, one T-5050 (check TO-5046).....                                                                                                                                                                                               | 1          | 1  | 1-         | B-38      |
| TO-5055W | Oil filter shell assembly.....                                                                                                                                                                                                                                                                | 1          | 1  | 1-         | B-38      |
| TO-5061  | Engine clutch assembly (Borg and Beck No. 901).....                                                                                                                                                                                                                                           | 1          | 1  | 1-         | A-44      |
| TO-5062  | Engine clutch cover and stud (check TO-5061).....                                                                                                                                                                                                                                             | 1          | 1  | 1-         | A-44      |
| TO-5064  | Engine clutch eye bolt and nut assembly (check TO-5061).....                                                                                                                                                                                                                                  | 3          | 3  | 1-         | A-44      |
| TO-5070  | Engine driven clutch plate, hub, facing—one TO-5071 (check TO-5061).....                                                                                                                                                                                                                      | 1          | 1  | 1-         | A-44      |
| TO-5071  | Engine clutch, facing package containing 2 facings and 12 rivets (check TO-5070).....                                                                                                                                                                                                         | 1          | 1  | 1-         | A-44      |
| TO-5153W | Exhaust tube.....                                                                                                                                                                                                                                                                             | 1          | 1  | 1-         | B-41      |
| TO-5154  | Starting crank assembly—one T-5155, one T-5156.....                                                                                                                                                                                                                                           | 1          | 1  | 1-         | B-41      |
| TO-5160  | Hose, clamp assembly, size 1 7/8".....                                                                                                                                                                                                                                                        | 8          | 8  | 1-         | B-41      |
| TO-5161  | Engine clutch (Borg and Beck type 9-A-7)—one T-5063, one T-5065, one T-5066, one T-5067, one T-5068, one T-5069, one T-5071, one TO-5062, one TO-5064, one TO-5070.....                                                                                                                       | 1          | 1  | 1-         | A-44      |
| TO-5164W | Hand lever for governor control.....                                                                                                                                                                                                                                                          | 1          | 1  | 1-         | A-41      |
| TO-5176  | Muffler assembly—one TO-7530, one T-5171.....                                                                                                                                                                                                                                                 | 1          | 1  | 1-         | B-37      |
| TO-5189W | Front control bracket for governor.....                                                                                                                                                                                                                                                       | 1          | 1  | 1-         | A-38      |
| TO-5210  | Gear cover assembly—one T-5211, one T-5212.....                                                                                                                                                                                                                                               | 1          | 1  | 1-         | A-43      |
| TO-5213  | Hydraulic pump adapter assembly—one T-5214, one T-5215, one T-5216, one T-5217, one T-5243, one T-5376.....                                                                                                                                                                                   | 1          | 1  | 1-         | A-43      |
| TO-5219  | Governor assembly.....                                                                                                                                                                                                                                                                        | 1          | 1  | 1-         | A-43      |
| TO-5220  | Governor drive shaft and gear assembly—one T-5221, one T-5222 (check TO-5219).....                                                                                                                                                                                                            | 1          | 1  | 1-         | A-43      |
| TO-5225  | Governor weights and shaft—one T-5226, one T-5227, one T-5228, one T-5229 (check TO-5219).....                                                                                                                                                                                                | 1          | 1  | 1-         | A-43      |
| TO-5232  | Governor body—one T-5234, one T-5233, one T-5396, one T-5236, one T-5237, one T-5238, one T-5239, one T-5240, one T-5241, one T-5243, one T-5242.....                                                                                                                                         | 1          | 1  | 1-         | A-43      |
| TO-5254  | Cylinder block and crankcase assembly—one T-5209, four T-5255, eight T-5256, ten T-5257, four T-5258, one T-5259, two T-5260, one T-5261, one T-5262, one T-5263, one T-5264, six T-5265, six T-5266, one T-5267, one T-5268, one T-5269, two T-5270, two T-5271, one T-5272, one T-5273..... | 1          | 1  | 1-         | A-42      |
| TO-5285  | Connecting rod assembly—two T-5286, one T-5287, two T-5288, two 3/32"x3/4" cotter pins, two 5/8"-24 nuts, and one connecting rod. (Connecting rod is not sold separate).....                                                                                                                  | 4          | 4  | 1-         | B-42      |
| TO-5297  | Flywheel housing plate assembly—one T-5289, one T-5290, one T-5298, one T-5299 (sold only as a unit).....                                                                                                                                                                                     | 1          | 1  | 1-         | B-42      |
| TO-5303  | Valve lubricating oil line (sold only as a unit).....                                                                                                                                                                                                                                         | 1          | 1  | 1-         | A-42      |
| TO-5306  | Cylinder head assembly—one T-5307, one T-5308, eight T-5309, eight T-5310, eight T-5311, eight pair T-5312, eight T-5313, four T-5314, four T-5315, two T-5316, one T-5317.....                                                                                                               | 1          | 1  | 1-         | A-42      |
| TO-5327  | Engine push rod valve assembly.....                                                                                                                                                                                                                                                           | 1          | 1  | 1-         | B-42      |
| TO-5329  | Rocker arm sub assembly offset to front.....                                                                                                                                                                                                                                                  | 4          | 4  | 1-         | B-42      |
| TO-5336  | Rocker arm sub assembly offset to rear.....                                                                                                                                                                                                                                                   | 4          | 4  | 1-         | B-42      |

| Part No. | DESCRIPTION                                                                                                                                                                                                                                                                    | No. Req'd. |    | Serial No. | Plate No. |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|----|------------|-----------|
|          |                                                                                                                                                                                                                                                                                | Std.       | RC |            |           |
| TO-5338  | Rocker arm shaft assembly—two T-5339.....                                                                                                                                                                                                                                      | 1          | 1  | 1-         | B-42      |
| TO-5348  | Oil pump assembly.....                                                                                                                                                                                                                                                         | 1          | 1  | 1-         | A-42      |
| TO-5362  | Water pump assembly.....                                                                                                                                                                                                                                                       | 1          | 1  | 1-         | A-43      |
| TO-5375  | Water pump integral shaft and bearing (sold only as a unit).....                                                                                                                                                                                                               | 1          | 1  | 1-         | A-43      |
| TO-5401  | Hydraulic attachment cover parts assembly—one T-5397, one T-5398.....                                                                                                                                                                                                          | 1          | 1  | 1-         | A-38      |
| TO-5402  | Adapter ring washers assembly.....                                                                                                                                                                                                                                             | 1          | 1  | 1-         | A-44      |
| TO-7003W | Gas tank.....                                                                                                                                                                                                                                                                  | 1          | 1  | 1-         | A-41      |
| TO-7013  | Carburetor (Marvel Schebler 10-2992 Model TXS-264).....                                                                                                                                                                                                                        | 1          | 1  | 1-         | B-37      |
| TO-7015  | Hose clamp for air cleaner outlet hose (2½" dia.).....                                                                                                                                                                                                                         | 2          | 2  | 1-         | B-41      |
| TO-7018  | Sediment bowl assembly.....                                                                                                                                                                                                                                                    | 1          | 1  | 1-         | A-37      |
| TO-7022  | Gas line.....                                                                                                                                                                                                                                                                  | 1          | 1  | 1-         | A-41      |
| TO-7029  | Air cleaner assembly, with cap (Donaldson Model A-5451)— one TO-7031.....                                                                                                                                                                                                      | 1          | 1  | 1-         | A-38      |
| TO-7031W | Air cleaner body assembly (check TO-7029).....                                                                                                                                                                                                                                 | 1          | 1  | 1-         | A-38      |
| TO-7033  | Clamp assembly, oil cup to body on air cleaner.....                                                                                                                                                                                                                            | 1          | 1  | 1-         | A-38      |
| TO-7068  | Float valve seat and gasket on carburetor.....                                                                                                                                                                                                                                 | 1          | 1  | 1-         | B-37      |
| TO-7070  | Throttle shaft, stop and lever on carburetor.....                                                                                                                                                                                                                              | 1          | 1  | 1-         | B-37      |
| TO-7071  | High speed needle on carburetor.....                                                                                                                                                                                                                                           | 1          | 1  | 1-         | B-37      |
| TO-7072  | Ratchet adjusting spring for high speed needle on carburetor.....                                                                                                                                                                                                              | 1          | 1  | 1-         | B-37      |
| TO-7073  | Carburetor throttle body.....                                                                                                                                                                                                                                                  | 1          | 1  | 1-         | B-37      |
| TO-7074  | Float in carburetor.....                                                                                                                                                                                                                                                       | 1          | 1  | 1-         | B-37      |
| TO-7075  | Butterfly for choke shaft on carburetor.....                                                                                                                                                                                                                                   | 1          | 1  | 1-         | B-37      |
| TO-7076  | Choke shaft and lever on carburetor.....                                                                                                                                                                                                                                       | 1          | 1  | 1-         | B-37      |
| TO-7077  | Main nozzle in carburetor bowl.....                                                                                                                                                                                                                                            | 1          | 1  | 1-         | B-37      |
| TO-7078  | Carburetor bowl.....                                                                                                                                                                                                                                                           | 1          | 1  | 1-         | B-37      |
| TO-7079  | Gasket repair kit for carburetor—one T-7048, one T-7057, one T-7059, one T-7069. If complete repair kit is required, check TO-7080.....                                                                                                                                        | 1          | 1  | 1-         | B-37      |
| TO-7080  | Package repair kit for carburetor—one T-7042, one T-7043, one T-7044, one T-7049, one T-7050, one T-7053, one T-7054, one T-7055, one T-7058, one T-7060, two T-7061, one T-7062, one T-7063, one T-7064, one TO-7068, one TO-7070, one TO-7071, one TO-7077, one TO-7079..... | 1          | 1  | 1-         | B-37      |
| TO-7088  | Bale nut, stud and washer assembly, sediment bowl.....                                                                                                                                                                                                                         | 1          | 1  | 1-         | A-37      |
| TO-7501  | Battery box assembly.....                                                                                                                                                                                                                                                      | 1          | 1  | 1-         | A-39      |
| TO-7502W | Battery box base assembly (check TO-7501).....                                                                                                                                                                                                                                 | 1          | 1  | 1-         | A-39      |
| TO-7506W | Battery box top assembly (check TO-7501).....                                                                                                                                                                                                                                  | 1          | 1  | 1-         | A-39      |
| TO-7514  | Head and tail lights—one T-7574, one T-7575, one T-7576, one T-7577, one TO-7553, one No. 8-32 x 5/8" button head screw, two No. 8-12 x 5/16" screw (check TO-7563).....                                                                                                       | 3          | 3  | 1-         | B-40      |
| TO-7521  | Generator assembly (Auto-Lite No. EO-8657).....                                                                                                                                                                                                                                | 1          | 1  | 1-         | A-37      |
| TO-7522  | Distributor assembly (Auto-Lite No. EO-8641).....                                                                                                                                                                                                                              | 1          | 1  | 1-         | A-38      |
| TO-7523  | Coil assembly (Auto-Lite No. IG-4070, 6-volt).....                                                                                                                                                                                                                             | 1          | 1  | 1-         | A-38      |
| TO-7524  | Head light switch.....                                                                                                                                                                                                                                                         | 1          | 1  | 1-         | B-39      |
| TO-7528  | No. 2 and 3 spark plug wire (sold only as a complete unit).....                                                                                                                                                                                                                | 2          | 2  | 1-         | A-38      |
| TO-7529  | No. 1 and 4 spark plug wire (sold only as a complete unit).....                                                                                                                                                                                                                | 2          | 2  | 1-         | A-38      |
| TO-7530  | Muffler (check TO-5176).....                                                                                                                                                                                                                                                   | 1          | 1  | 1-         | B-37      |
| TO-7531  | High tension wire coil to distributor (TOP) (sold only as a complete unit).....                                                                                                                                                                                                | 1          | 1  | 1-         | A-38      |
| TO-7540  | Assembled wire from ammeter to switch.....                                                                                                                                                                                                                                     | 1          | 1  | 1-         | B-39      |
| TO-7541  | Wire from coil to distributor (side).....                                                                                                                                                                                                                                      | 1          | 1  | 1-         | A-38      |
| TO-7543  | Wire ammeter to ignition coil.....                                                                                                                                                                                                                                             | 1          | 1  | 1-         | A-38      |
| TO-7544  | Right and left hand head light wires.....                                                                                                                                                                                                                                      | 1          | 1  | 1-         | A-37      |
| TO-7546  | Dash lamp assembly.....                                                                                                                                                                                                                                                        | 1          | 1  | 1-         | B-39      |
| TO-7549  | Starting motor assembly No. MAX-4081.....                                                                                                                                                                                                                                      | 1          | 1  | 1-         | B-38      |
| TO-7553  | Shell and reflector light assembly.....                                                                                                                                                                                                                                        | 3          | 3  | 1-         | B-40      |
| TO-7569  | Ignition harness assembly (sold only as a unit).....                                                                                                                                                                                                                           | 1          | 1  | 1-         | B-39      |
| TO-7572  | Wire, tail light to switch.....                                                                                                                                                                                                                                                | 1          | 1  | 1-         | A-40      |
| TO-7590  | Armature assembly on generator (check TO-7521).....                                                                                                                                                                                                                            | 1          | 1  | 1-         | A-37      |

## Repair Parts List for Cockshutt "30" Tractor

Page 51

| Part No. | DESCRIPTION                                                                                                                                   | No. Req'd. |       | Serial No. | Plate No. |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------|------------|-------|------------|-----------|
|          |                                                                                                                                               | Std.       | RC    |            |           |
| TO-7603  | Frame and field assembly on generator (check TO-7521).....                                                                                    | 1          | 1     | 1-         | A-37      |
| TO-7611  | Coil assembly field complete for generator (sold only as a unit).....                                                                         | 1          | 1     | 1-         | A-37      |
| TO-7614  | Relay cut-out on generator.....                                                                                                               | 1          | 1     | 1-         | A-37      |
| TO-7617  | Head assembly commutator on generator.....                                                                                                    | 1          | 1     | 1-         | A-37      |
| TO-7626  | Brush set two main brushes, one third brush (sold only as a unit).....                                                                        | 1          | 1     | 1-         | A-37      |
| TO-7628  | Plate, spring and arm, third brush assembly (sold only as a unit).....                                                                        | 1          | 1     | 1-         | A-37      |
| TO-7631  | Head assembly, partial commutator end for generator.....                                                                                      | 1          | 1     | 1-         | A-37      |
| TO-7634  | Head assembly, commutator end for starter (check TO-7549).....                                                                                | 1          | 1     | 1-         | B-38      |
| TO-7639  | Armature assembly for starter (check TO-7549).....                                                                                            | 1          | 1     | 1-         | B-38      |
| TO-7643  | Frame and field assembly on starter.....                                                                                                      | 1          | 1     | 1-         | B-38      |
| TO-7652  | Brush set on starter two field coil brushes, two ground brushes (sold only as a unit).....                                                    | 1          | 1     | 1-         | B-38      |
| TO-7653  | Coil and terminal stud assembly on starter (check TO-7643).....                                                                               | 1          | 1     | 1-         | B-38      |
| TO-7662  | Thrust spacer and intermediate bearing assembly on starter (check TO-7549).....                                                               | 1          | 1     | 1-         | B-38      |
| TO-7664  | Housing assembly pinion end to starter (check TO-7549).....                                                                                   | 1          | 1     | 1-         | B-38      |
| TO-7666  | Bendix drive assembly on starter—one T-7667, one T-7668, one T-7669, two T-7670, one T-7671 (check TO-7549).....                              | 1          | 1     | 1-         | B-38      |
| TO-7677  | Switch assembly on starter (check TO-7549).....                                                                                               | 1          | 1     | 1-         | B-38      |
| TO-7678  | Holder, spring and arm assemblies grounded main brush for distributor (sold only as a unit).....                                              | 2          | 2     | 1-         | A-37      |
| TO-7693  | Arm assembly advance (check TO-7522).....                                                                                                     | 1          | 1     | 1-         | A-38      |
| TO-7694  | Cap assembly on distributor (check TO-7522).....                                                                                              | 1          | 1     | 1-         | A-38      |
| TO-7695  | Plate assembly seal on distributor (check TO-7522).....                                                                                       | 1          | 1     | 1-         | A-38      |
| TO-7696  | Plate assembly breaker on distributor (check TO-7522).....                                                                                    | 1          | 1     | 1-         | A-38      |
| TO-7700  | Contact set assembly breaker on distributor.....                                                                                              | 1          | 1     | 1-         | A-38      |
| TO-7701  | Shaft and governor assembly on distributor (check TO-7522).....                                                                               | 1          | 1     | 1-         | A-38      |
| TO-7704  | Spring set governor weight on distributor.....                                                                                                | 1          | 1     | 1-         | A-38      |
| TO-7707  | Base assembly on distributor (check TO-7522).....                                                                                             | 1          | 1     | 1-         | A-38      |
| TO-8503W | Rear upright gas tank support.....                                                                                                            | 1          | 1     | 1-         | B-38      |
| TO-8506W | Gas tank channel support and gusset assembly.....                                                                                             | 1          | 1     | 1-         | B-38      |
| TO-8509W | Instrument panel assembly.....                                                                                                                | 1          | 1     | 1-         | B-39      |
| TO-8524  | Steering gear assembly—one TO-8526, one TO-8563, one TO-8564.....                                                                             | 1          | 1     | 1-         | B-40      |
| TO-8526  | Steering gear housing assembly—one T-8527, one T-8529, (check TO-8524).....                                                                   | 1          | 1     | 1-         | B-40      |
| TO-8530  | Adjusting pad assembly for lever shaft.....                                                                                                   | 1          | 1     | 1-         | B-40      |
| TO-8535  | Lever shaft assembly (with 4 studs .043544).....                                                                                              | 1          | 1     | 1-         | B-40      |
| TO-8560  | Heat gauge, tube, clamp and nut assembly.....                                                                                                 | 1          | 1     | 1-         | B-39      |
| TO-8563  | Cam and shaft in steering gear (check TO-8524).....                                                                                           | 1          | 1     | 1-         | B-40      |
| TO-8564  | Housing end cover all seal unit and steering gear—one T-8545, one T-8546, one T-8547, one T-8548, one T-8549, one No. 10-24 x 3/4" screw..... | 1          | 1     | 1-         | B-40      |
| TO-8727W | Removable grill top over motor.....                                                                                                           | 1          | 1     | 1-         | B-37      |
| TO-8728  | Right hand front grill and screw assembly—one T-8758W, two T-8711, two 1/8" x 1/32" wagon box head rivets.....                                | 1          | 1     | 1-         | B-37      |
| TO-8729  | Left hand front grill and screw assembly—one T-8757W, two T-8711, two 1/8" x 1/32" wagon box head rivets.....                                 | 1          | 1     | 1-         | B-37      |
| TO-8732W | Front hood assembly.....                                                                                                                      | 2          | 2     | 1-         | B-37      |
| TO-8735  | Radiator assembly.....                                                                                                                        | 1          | 1     | 1-         | B-41      |
| TO-8756W | Grill reinforced bracket and nut, carriage assembly.....                                                                                      | 1          | 1     | 1-         | B-41      |
| TO-8757W | Left hand grill assembly (check TO-8729).....                                                                                                 | 1          | 1     | 1-         | B-37      |
| TO-8758W | Right hand grill assembly (check TO-8728).....                                                                                                | 1          | 1     | 1-         | B-37      |
| TO-8811W | Spindle and post assembly.....                                                                                                                | 2          | ..... | 1-         | B-41      |
| TO-8813W | Steering gear spline and pitman assembly.....                                                                                                 | 1          | ..... | 1-         | B-41      |
| TO-8815W | Radius rod assembly.....                                                                                                                      | 2          | ..... | 1-         | B-41      |
| TO-8845  | Front tire and tube assembly (Goodyear)—one FX-S49, one T-8855, one T-8856..                                                                  | 2          | 2     | 1-         | B-37      |
| TO-8848  | Tie rod tube assembly—one T-8867, two 8868, two 5/16"-24 x 1 1/2" bolt, two 5/16"-24 hexagon nut, two 3/16" lockwashers.....                  | 2          | ..... | 1-         | B-41      |

| Part No. | DESCRIPTION                                                                                                                                                                                                                                                                                                                                                                                              | No. Req'd. |      | Serial No. | Plate No. |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|------|------------|-----------|
|          |                                                                                                                                                                                                                                                                                                                                                                                                          | Std.       | RC   |            |           |
| TO-8858  | Front tire and tube assembly (Crest)—one FX-S49, one T-8861, one T-8862.....                                                                                                                                                                                                                                                                                                                             | 2          | 2    | 1-         | B-37      |
| TO-8859  | Pedestal and bushing assembly— one T-8816, one T-8846.....                                                                                                                                                                                                                                                                                                                                               | 1          | .... | 1-         | A-38      |
| TO-8860  | Front axle and bushing assembly— one T-8802, one T-8826.....                                                                                                                                                                                                                                                                                                                                             | 1          | .... | 1-         | B-41      |
| TO-8866  | Tie rod, complete with cotter pins—one TO-8869, one TO-8870, one TO-8848,<br>two $\frac{3}{8}$ " x 1" cotter pins.....                                                                                                                                                                                                                                                                                   | 2          | .... | 1-         | B-41      |
| TO-8869  | Left hand steering socket, including $\frac{1}{2}$ " slotted nut.....                                                                                                                                                                                                                                                                                                                                    | 2          | .... | 1-         | A-41      |
| TO-8870  | Right hand steering socket, including $\frac{1}{2}$ " slotted nut.....                                                                                                                                                                                                                                                                                                                                   | 2          | .... | 1-         | A-41      |
| TO-9000W | Hitch frame assembly.....                                                                                                                                                                                                                                                                                                                                                                                | 1          | 1    | 1-         | A-39      |
| TO-9101  | Socket hub, wrench, rear wheels, handle and cotter pin.....                                                                                                                                                                                                                                                                                                                                              | 1          | 1    | 1-         | B-37      |
| TO-9107  | Tool box assembly.....                                                                                                                                                                                                                                                                                                                                                                                   | 1          | 1    | 1-         | A-39      |
| TO-9221  | Rims and clamp for rear wheels.....                                                                                                                                                                                                                                                                                                                                                                      | 2          | 2    | -2000      | B-38      |
| TO-9228W | Brake pedal, carrier assembly.....                                                                                                                                                                                                                                                                                                                                                                       | 1          | 1    | 1-         | A-37      |
| TO-9235W | Clutch release shaft and arm assembly.....                                                                                                                                                                                                                                                                                                                                                               | 1          | 1    | 3000-      | A-44      |
| TO-9240W | Brake, lock assembly arm and pin.....                                                                                                                                                                                                                                                                                                                                                                    | 1          | 1    | 1-         | A-39      |
| TO-9244W | Brake, cross shaft and lever.....                                                                                                                                                                                                                                                                                                                                                                        | 1          | 1    | 1-         | A-37      |
| TO-9250W | Right hand floor board assembly.....                                                                                                                                                                                                                                                                                                                                                                     | 1          | 1    | 1-         | B-39      |
| TO-9254W | Fender assembly. (When ordering, be sure to order TO-9268 to complete fenders).....                                                                                                                                                                                                                                                                                                                      | 2          | 2    | 1-         | B-39      |
| TO-9259W | Left hand floor board assembly.....                                                                                                                                                                                                                                                                                                                                                                      | 1          | 1    | 1-         | A-39      |
| TO-9266  | Rear tire and tube assembly (Goodyear).....                                                                                                                                                                                                                                                                                                                                                              | 2          | 2    | 1-         | A-39      |
| TO-9268  | Bag of cap screws for fender assembly. (When ordering, be sure to order<br>TO-9254W).....                                                                                                                                                                                                                                                                                                                | 1          | 1    | 1-         | A-39      |
| TO-9282  | Wheel weights assembly. (This includes one wheel weight per wheel and bolts).....                                                                                                                                                                                                                                                                                                                        | 2          | 2    | -2000      | B-39      |
| TO-9283  | Wheel weights assembly. (This includes two wheel weights per wheel and bolts).....                                                                                                                                                                                                                                                                                                                       | 2          | 2    | -2000      | B-39      |
| TO-9286  | Rear tire and tube assembly (Crest).....                                                                                                                                                                                                                                                                                                                                                                 | 2          | 2    | 1-         | A-37      |
| TO-9398  | Brake band and lining assembly.....                                                                                                                                                                                                                                                                                                                                                                      | 2          | 2    | 1-         | A-39      |
| TO-9489  | Clutch for live power take-off—one TO-9598, one T-9318, one T-9490, one T-9491,<br>one T-9492, six $\frac{5}{16}$ "-18 x $1\frac{1}{8}$ " cap screws, six $\frac{5}{16}$ " lockwashers.....                                                                                                                                                                                                              | 1          | 1    | 1-         | A-44      |
| TO-9564W | Right hand shaft and lever assembly on brake.....                                                                                                                                                                                                                                                                                                                                                        | 1          | 1    | 1-         | A-39      |
| TO-9565W | Left hand shaft and lever assembly on brake.....                                                                                                                                                                                                                                                                                                                                                         | 1          | 1    | 1-         | A-39      |
| TO-9566W | Rear shaft and collar assembly on live power take-off.....                                                                                                                                                                                                                                                                                                                                               | 1          | 1    | 1-         | A-44      |
| TO-9567W | Shaft and collar assembly on standard power take-off.....                                                                                                                                                                                                                                                                                                                                                | 1          | 1    | 1-         | B-44      |
| TO-9568W | Shaft and lever assembly on standard power take-off.....                                                                                                                                                                                                                                                                                                                                                 | 1          | 1    | 1-         | B-44      |
| TO-9572W | Pulley shifter lever assembly.....                                                                                                                                                                                                                                                                                                                                                                       | 1          | 1    | 1-         | A-41      |
| TO-9586  | Release sleeve and yoke assembly for live power take-off clutch (sold only as a<br>unit).....                                                                                                                                                                                                                                                                                                            | 1          | 1    | 1-         | B-44      |
| TO-9590  | Release sleeve assembly, live power take-off clutch (sold only as a unit).....                                                                                                                                                                                                                                                                                                                           | 1          | 1    | 1-         | B-44      |
| TO-9591  | Bracket and spacer assembly, live power take-off clutch (sold only as a unit).....                                                                                                                                                                                                                                                                                                                       | 1          | 1    | 1-         | B-44      |
| TO-9592  | Pressure ring assembly, live power take-off (sold only as a unit).....                                                                                                                                                                                                                                                                                                                                   | 1          | 1    | 1-         | B-44      |
| TO-9594  | Spider and ring assembly on live power take-off—one T-9457, one T-9477,<br>one T-9595, one T-9596.....                                                                                                                                                                                                                                                                                                   | 1          | 1    | 1-         | A-44      |
| TO-9597  | Carrier clutch release and bearing assembly on live power take-off—one T-9456,<br>one T-9203.....                                                                                                                                                                                                                                                                                                        | 1          | 1    | 1-         | A-44      |
| TO-9598  | Clutch assembly, less hub, facing and plate, live power take-off—one T-9573, nine<br>T-9574, nine T-9575, twelve T-9576, three T-9577, three T-9578, six T-9579, six<br>T-9580, six T-9581, three T-9582, three T-9583, one T-9584, three $\frac{1}{4}$ "-28 x $\frac{3}{4}$ "<br>cap screws, six $\frac{3}{32}$ " x $\frac{1}{2}$ " cotter pins, three $\frac{1}{4}$ " lockwashers (check TO-9489)..... | 1          | 1    | 1-         | B-44      |
| TO-9600  | 4-speed transmission (no power take-off).....                                                                                                                                                                                                                                                                                                                                                            | 1          | 1    | -1600      | B-45      |
| TO-9601  | 8-speed transmission (no power take-off).....                                                                                                                                                                                                                                                                                                                                                            | 1          | 1    | -1600      | B-45      |
| TO-9602  | 4-speed transmission with front and rear section live power take-off.....                                                                                                                                                                                                                                                                                                                                | 1          | 1    | -1600      | B-45      |
| TO-9603  | 8-speed transmission with front and rear section live power take-off.....                                                                                                                                                                                                                                                                                                                                | 1          | 1    | -1600      | B-45      |
| TO-9604  | 4-speed transmission with front section live power take-off.....                                                                                                                                                                                                                                                                                                                                         | 1          | 1    | -1600      | B-45      |
| TO-9605  | 8-speed transmission (equipped for live power take-off).....                                                                                                                                                                                                                                                                                                                                             | 1          | 1    | -1600      | B-45      |
| TO-9606  | 4-speed transmission (with standard 2-speed power take-off).....                                                                                                                                                                                                                                                                                                                                         | 1          | 1    | 1-         | B-45      |
| TO-9607  | 8-speed transmission (with standard 2-speed power take-off).....                                                                                                                                                                                                                                                                                                                                         | 1          | 1    | 1-         | B-45      |
| TO-9613  | 4-speed transmission (no power take-off).....                                                                                                                                                                                                                                                                                                                                                            | 1          | 1    | 1601-      | B-45      |

## Repair Parts List for Cockshutt "30" Tractor

Page 53

| Part No. | DESCRIPTION                                                                                                                                        | No. Req'd. |    | Serial No. | Plate No. |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------|------------|----|------------|-----------|
|          |                                                                                                                                                    | Std.       | RC |            |           |
| TO-9614  | 8-speed transmission (no power take-off).....                                                                                                      | 1          | 1  | 1601-      | B-45      |
| TO-9615  | 4-speed transmission (with front section of live power take-off).....                                                                              | 1          | 1  | 1601-      | B-45      |
| TO-9616  | 8-speed transmission (with front section of live power take-off).....                                                                              | 1          | 1  | 1601-      | B-45      |
| TO-9617  | 4-speed transmission (with front and rear section of live power take-off).....                                                                     | 1          | 1  | 1601-      | B-45      |
| TO-9618  | 8-speed transmission (with front and rear section of live power take-off).....                                                                     | 1          | 1  | 1601-      | B-45      |
| TO-9619  | Lining and rivet kit for brake band (for repair only).....                                                                                         | 1          | 1  | 1-         |           |
| TO-9638W | Clutch release shaft and lever.....                                                                                                                | 1          | 1  | -3000      | A-44      |
| TO-9649  | Wheel weights assembly (this includes one weight per wheel and four bolts $\frac{3}{4}$ " -<br>16 x $2\frac{1}{2}$ ", with nuts and washers).....  | 1          | 1  | 2001-      | B-39      |
| TO-9650  | Wheel weights assembly (this includes two weights per wheel and four bolts $\frac{3}{4}$ " -<br>16 x $4\frac{1}{4}$ ", with nuts and washers)..... | 1          | 1  | 2001-      | B-39      |
| TO-9651W | Brake drum assembly.....                                                                                                                           | 1          | 1  | 1600-      | A-39      |

## OPTIONAL EQUIPMENT

|          |                                                                                                                                                     |   |   |       |      |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------|---|---|-------|------|
| TO-5176  | Muffler assembly— one T-7530, one T-5171.....                                                                                                       | 1 | 1 | 1-    | B-37 |
| TO-7563  | Head, tail and dash light bundle.....                                                                                                               | 1 | 1 | 1-    | B-40 |
| TO-8845  | Front tire and tube assembly (Goodyear)—1 FX-S49, 1 T-8855, 1 T-8856.....                                                                           | 2 | 2 | 1-    | B-37 |
| TO-8858  | Front tire and tube assembly (Crest)—1 FX-S49, 1 T-8861, 1 T-8862.....                                                                              | 2 | 2 | 1-    | B-37 |
| TO-9211  | Belt pulley.....                                                                                                                                    | 1 | 1 | 1-    | A-41 |
| TO-9254W | Fender assembly (when ordering, be sure to order TO-9268, bag of cap screws for<br>fenders).....                                                    | 2 | 2 | 1-    | B-39 |
| TO-9266  | Rear tire and tube assembly (Goodyear).....                                                                                                         | 2 | 2 | 1-    | A-37 |
| TO-9268  | Bag of cap screws for fender assembly (when ordering, be sure to order TO-9254W).....                                                               | 1 | 1 | 1-    | B-39 |
| TO-9282  | Wheel weight assembly (this includes only one weight per wheel with bolts).....                                                                     | 2 | 2 | -2000 | B-39 |
| TO-9283  | Wheel weight assembly (this includes two weights per wheel with bolts).....                                                                         | 2 | 2 | -2000 | B-39 |
| TO-9286  | Rear tire and tube assembly (Crest).....                                                                                                            | 2 | 2 | 1-    | A-37 |
| TO-9608  | Creeper gear kit, to make 4-speed transmission into 8-speed transmission.....                                                                       | 1 | 1 | 1-    | A-45 |
| TO-9609  | Rear section live power take-off assembly.....                                                                                                      | 1 | 1 | 1-    | B-44 |
| TO-9610  | Standard 2-speed power take-off.....                                                                                                                | 1 | 1 | 1-    | B-44 |
| TO-9611  | Belt pulley drive assembly (with DE clutch).....                                                                                                    | 1 | 1 | 1-    | A-41 |
| TO-9649  | Wheel weights assembly (this includes one weight per wheel and four bolts, $\frac{3}{4}$ " -<br>16 x $2\frac{1}{2}$ ", with nuts and washers).....  | 1 | 1 | 2001- | B-39 |
| TO-9650  | Wheel weights assembly (this includes two weights per wheel and four bolts, $\frac{3}{4}$ " -<br>16 x $4\frac{1}{4}$ ", with nuts and washers)..... | 1 | 1 | 2001- | B-39 |

**Always insist on genuine Cockshutt repair  
parts: For better fit and greater durability.**

