

New Holland Boomer™ 1000 & T1000 Series Sub-compact Tractor Specifications



Boomer 1020 Boomer 1025 T1010 T1030

MODEL

ENGINE

Gross engine hp (kW)
PTO hp (kW)
Rated speed, rpm
Cylinders
Displacement, cu. in. (L)
Fuel capacity, gal. (L)

Boomer 1020/T1010

20 (14.9)
15.5 (11.6)
3000
3
58.2 (.95)
7.1 (26.9)

Boomer 1025/T1030

26 (19.4)
19.7 (14.7)
3000
3
69.0 (1.1)
7.1 (26.9)

TRANSMISSIONS

Hydrostatic transmission
Min/Max forward speed
with R4 tires, mph (k/hr)

2-speed
0-10.3 (16.6)

2-speed
0-10.3 (16.6)

BRAKES

Location
Type

.....Single LH side
.....Wet disc

POWER TAKE OFF (PTO)

Rear
Mid

540
2200

540
2200

HYDRAULICS

Pump type
System type
Pump capacity, gpm (lpm)*
Implement flow, gpm (lpm)
Steering priority flow, gpm (lpm)
3-point hitch lift capacity,
24 in. behind the lift balls, lb. (kg)
3 point hitch control
*@ rated speed

Gear
.....Open center
5.6 (21.2)
3.75 (14.20)
1.85 (7.0)
700 (318)
.....Self centering valve

AXLE OPTIONS

FWD
Sensitrak™ Auto FWD

Standard
NA

Standard
Optional

DIMENSIONS (with R4 tires)

Overall length with 3-point hitch,
in. (mm)
Overall width (minimum), in. (mm)
Wheelbase, in. (mm)
Height to top of ROPS, in. (mm)
Ground clearance
Shipping weight w/R4 tires, lbs. (kg)

96.3 (2445)
46.4 (1180)
55.1 (1400)
72.4 (1840)
7.3 (185)
1455 (660)

96.3 (2445)
46.4 (1180)
55.1 (1400)
72.4 (1840)
7.3 (185)
1455 (660)

TIRE OPTIONS

Turf Tires
Front
Rear
Industrial Tires
Front
Rear

.....18x8.5-8, 4 PR (R3) Turf
.....26x12-12, 4 PR (R3) Turf
.....18x8.5-8, 4 Pr (R4) Ind
.....26x12-12, 4PR (R4) Ind

STANDARD EQUIPMENT:

- Toolbox
- Cup holder
- Foldable ROPS
- 12 Volt accessory power outlet

OPTIONAL EQUIPMENT:

FRONT ATTACHMENTS

- Loader
- Quick-attach snow blower
- Quick-attach rotary broom
- Quick-attach front blade

MID-MOUNT ATTACHMENTS

- 60" mid-mount mower
- Grass catcher

REAR ATTACHMENTS

- Finishing mowers
- Rotary tiller
- Ballast box

Visit our Web site at www.newholland.com/na. Or, call toll-free **866-NEW-HLND (866-639-4563)**.

Design, materials and/or specifications are subject to change without notice and without liability therefor. Specifications are applicable to units sold in Canada, the United States, its territories and possessions, and may vary outside these areas.



Safety begins with a thorough understanding of the equipment. Always make sure you and your operators read the Operator's Manual before using the equipment. Pay close attention to all safety and operating decals and never operate machinery without all shields, protective devices and structures in place.