



Rotary tedder

KW 11.22/10

 
(from serial no.: 889 360)

Order no.: 150 000 314 01 en





Table of Contents

	EC Declaration of Conformity	
We Maschinenfabrik Bernard Krone GmbH Heinrich-Krone-Str. 10, D-48480 Spelle hereby declare as manufacturer of the product named below, on our sole responsibility, that the Machine: KRONE rotary tedder Type / Types: KW 11.22/10 to which this declaration refers is in compliance with the relevant provisions of EC Directive 2006/42/EC (Machinery) . The signing Managing Director is authorised to compile the technical documents. Spelle, Germany, 01.04.2013  _____ Dr.-Ing. Josef Horstmann (Managing Director, Design and Development)		
Year of manufacture:		Mach. no.:

**1 Table of Contents**

1	Table of Contents	3
2	Foreword	6
3	To this Document	7
3.1	Validity	7
3.2	Identifying Symbols in the Operating Instructions	7
3.3	Direction Information	7
3.4	Means of representation	8
4	Safety	9
4.1	Purpose of Use	9
4.2	Intended use	9
4.3	Service life of the machine	9
4.4	Basic safety instructions	9
4.4.1	Importance of the operating instructions	9
4.4.2	Personnel qualification	10
4.4.3	Children in danger	10
4.4.4	Coupling	10
4.4.5	Structural changes to the machine	10
4.4.6	Additional equipment and spare parts	11
4.4.7	Workstations and passengers	11
4.4.8	Operational safety: Technically perfect condition	11
4.4.9	Danger zones	13
4.4.10	Keeping safety devices functional	15
4.4.11	Personal protective equipment	15
4.4.12	Safety signs on the machine	15
4.4.13	Traffic safety	16
4.4.14	Parking the machine safely	16
4.4.15	Consumables	16
4.4.16	Sources of danger on the machine	17
4.4.17	Dangers associated with certain activities: Work on the machine	18
4.4.18	Dangers associated with certain activities: Working on wheels and tyres	19
4.4.19	Behaviour in hazardous situations and when accidents occur	19
4.5	Safety routines	20
4.5.1	Stopping and securing the machine	20
4.5.2	Supporting lifted machine and machine parts securely	20
4.5.3	Coupling the machine safely	21
4.5.4	Uncoupling the machine safely	21
4.5.5	Preparing the machine for repair, maintenance and adjustment work	22
4.5.6	Starting the machine safely	22
4.6	Safety stickers on the machine	24
4.6.1	Position and meaning of the safety stickers on the machine	24
4.6.2	Re-Ordering the Adhesive Safety and Information Labels	26
4.6.3	Affixing the Adhesive Safety and Information Labels	26
4.6.4	Contact	26
5	Machine Description	27
5.1	Machine overview	27
5.2	Identification Plate	28



Table of Contents

5.3	Information Required for Questions and Orders	28
5.3.1	Contact.....	28
5.4	Overload protection	29
6	Technical Data of the Machine.....	30
6.1	Technical data	30
6.2	Consumables	32
6.2.1	Filling Quantities and Lubrication Designations for Gearboxes	32
6.3	Tyres	32
7	Control and Display Elements	33
8	Commissioning.....	34
8.1	General.....	34
8.2	First installation	34
8.3	Preparations on the rotary tedder	35
8.4	Overload protection	35
8.4.1	Removing the preserving wax from the tines.....	35
8.5	Connect the machine to the tractor	36
8.6	PTO shaft	36
8.6.1	Length adjustment.....	36
9	Start-up.....	37
9.1	Preparations on tractor.....	38
9.1.1	Adjusting the lower suspension arms	38
9.2	Connect the machine to the tractor	39
9.3	Install the PTO shaft.....	40
9.3.1	Connecting the hydraulic lines	42
10	Driving and Transport.....	43
10.1	Preparations for road travel.....	44
10.2	Reducing transport width	45
10.3	Travelling on an incline	45
10.4	Switching off the machine	46
11	Operation.....	48
11.1	Moving the machine into the working position	49
11.2	Working height of the tine rotors	51
11.3	Moving the machine into the transport position	52
11.4	Using the Machine for Work.....	53
12	Settings	54
12.1	Spreading angle setting of the rotors	55
12.2	Spread limiter	57
12.3	Stabiliser.....	57
12.4	Setting of tines.....	58
12.5	Setting for the pendulum area of the bars.....	58
12.5.1	Adjusting the bar hinge point inside to the intermediate bar.....	59
12.5.2	Exchanging the wheels	60
13	Maintenance.....	61
13.1	Spare Parts	61
13.2	Maintenance table	62
13.3	Deviating Tightening Torques MA (Nm).....	63
13.4	Tightening torques.....	64



Table of Contents

13.4.1	Metric Thread Screws with Control Thread	64
13.4.2	Metric Thread Screws with Fine Thread	65
13.4.3	Metric Thread Screws with Countersunk Head and Hexagonal Socket	65
14	Maintenance – lubrication chart	66
15	Maintenance – lubrication chart	66
15.1	Lubrication Points on the Universal Shafts	66
15.2	Lubrication Chart	67
16	Maintenance - hydraulic system	69
16.1.1	Hydraulic circuit diagram	70
17	Maintenance - Gearbox	71
18	Special equipment	73
18.1	Tine loss safeguard	73
18.2	Jockey wheel front	74
18.3	Night Raking Gearbox	76
18.4	Installation of the lighting system	79
18.5	Anti-wrap guard plate tyres	81
18.6	Spare wheel with support	81
18.7	Mounting Longer Lower Suspension Arms	82
19	Placing in Storage	83
19.1	Special Safety Instructions	83
19.2	At the End of the Harvest Season	84
19.3	Before the Start of the New Season	85
19.4	Special Safety Instructions	85
20	Disposal of the machine	86
20.1	Disposal of the machine	86
21	Index	87

Foreword

2 Foreword

Dear Customer!

By purchasing your rotary tedder , you have acquired a quality product from KRONE.

We are grateful for the confidence you have invested in us in buying this machine.

To be able to use the rotary tedder optimally, please read these operating instructions thoroughly before you start using the machine.

The contents of this manual are laid out in such a way that you should be able to perform any task by following the instructions step by step. It contains extensive notes and information about maintenance, how to use the machine safely, secure working methods, special precautionary measures and available accessories. This information and these instructions are essential, important and useful for the operational safety, reliability and durability of the rotary tedder.



Note

In the operating instructions which follow, the rotary tedder will also be referred to as the "machine".

Please note:

The operating instructions are part of your machine.

Only operate this machine after you have been trained to do so and according to these instructions.

It is essential to observe the safety instructions!

It is also necessary to observe the relevant accident prevention regulations and other generally recognised regulations concerning safety, occupational health and road traffic.

All information, illustrations and technical data in these operating instructions correspond to the latest state at the time of publication.

We reserve the right to make design changes at any time and without notification of reasons.

Should you for any reason not be able to use these operating instructions either wholly or partially, you can receive a replacement set of operating instructions for your machine by quoting the number supplied overleaf.

We hope that you will be satisfied with your KRONE machine.

Maschinenfabrik Bernard Krone GmbH

Spelle

3 To this Document

3.1 Validity

These operating instructions apply to rotary tedders of the series:
KW 10.02/10

3.2 Identifying Symbols in the Operating Instructions

The safety instructions contained in this manual which could result in personal injury if not followed are identified by the general danger sign:

Danger!



DANGER!**Type and source of the hazard!**

Effect: Danger to life or serious injuries.

- Measures for hazard prevention

Warning !



WARNING!**Type and source of the hazard!**

Effect: Injuries, serious material damage.

- Measures for hazard prevention

Caution!



CAUTION!**Type and source of the hazard!**

Effect: Property damage

- Measures for risk prevention.

General function instructions are indicated as follows:

Note!



Note - Type and source of the note

Effect: Economic advantage of the machine

- Actions to be taken

Instructions which are attached to the machine need to be followed and kept fully legible.

3.3 Direction Information

Direction information in these operating instructions such as front, rear, right and left always applies in direction of travel.

To this Document

3.4 Means of representation

In these operating instructions, the following means of representation are used:

Action steps

One point (●) indicates an action step you have to perform, as for example:

- Set the left outside mirror.

Sequence of actions

Several points (●) in front of a sequence of actions characterize a sequence of actions you have to perform step by step, as for example:

- Loosen counter nut.
- Mount screw.
- Tighten counter nut.

Enumeration

Bullet points (-) characterize enumerations such as, for example:

- Brakes
- Steering
- Lighting



4 Safety

4.1 Purpose of Use

The rotary tedder is used for tedding, raking and swath spreading of cut crop stalks.

4.2 Intended use

The rotary tedder is built exclusively for customary use in agricultural work (intended use).

Unauthorised modifications to the machine may have a negative effect on the machine characteristics or safe and reliable use of the machine or may interfere with proper operation. Unauthorised modifications shall therefore release the manufacturer of any liability for consequential damage.

4.3 Service life of the machine

- The service life of this machine strongly depends on proper use and maintenance as well as the operating conditions.
- Permanent operational readiness as well as long service life of the machine can be achieved by observing the instructions and notes of these operating instructions.
- After each season of use, the machine must be checked thoroughly for wear and other damage.
- Damaged and worn parts must be replaced before placing the machine into service again.
- After the machine has been used for five years, carry out full technical inspection of the machine. According to the results of this inspection, a decision concerning the possibility of reuse of the machine should be taken.
- Theoretically, the service life of this machine is unlimited as all worn or damaged parts can be replaced.

4.4 Basic safety instructions

Non-compliance with the safety instructions and warnings

Non-compliance with the safety instructions and warnings may result in injuries and damage to the environment and property.

4.4.1 Importance of the operating instructions

The operating instructions are an important document and a part of the machine. They are intended for the user and contain information relevant to safety.

Only the procedures indicated in the operating instructions are reliable. If the operating instructions are not followed, people may be seriously injured or killed.

- Before using the machine for the first time, read and follow all the "Basic safety instructions" in the chapter Safety.
- Before working, also read and observe the respective sections in the operating instructions.
- Retain the operating instructions and ensure that they are always available.
- Hand over the operating instructions to subsequent users.

Safety

4.4.2 Personnel qualification

If the machine is not used properly, people may be seriously injured or killed. To avoid accidents, each person who works with the machine must satisfy the following minimum requirements:

- He is physically capable of controlling the machine.
- He can work safely with the machine in accordance with these operating instructions.
- He understands the method of operation of the machine within the scope of his work and can identify and avoid the dangers associated with the work.
- He has read the operating instructions and can implement the information in the operating instructions accordingly.
- He is familiar with driving vehicles safely.
- For road travel he has adequate knowledge of the highway code and has the stipulated driving licence.

4.4.3 Children in danger

Children cannot assess danger and behave unpredictably.
As a result, children are especially at risk.

- Keep children away from the machine.
- Keep children away from consumables.
- Especially before starting up and moving the machine, ensure that there are no children in the danger zone.

4.4.4 Coupling

If the tractor and the machine are not correctly connected, there is a risk of causing serious accidents.

- When connecting front attachments or trailers, follow all operating instructions:
 - The operating instructions for the tractor
 - The operating instructions for the machine
 - The operating instructions for the universal shaft
- Follow the coupling instructions, see chapter on starting up "Connect the machine to the tractor".
- Note the modified driving behaviour of the combination.

4.4.5 Structural changes to the machine

Structural changes and enhancements may impair the functionality and operational safety of the machine. As a result, people may be seriously injured or killed.

- Have structural changes and enhancements performed by an authorised service centre only.

4.4.6 Additional equipment and spare parts

Additional equipment and spare parts, which do not comply with the requirements of the manufacturer, may impair the operational safety of the machine and cause accidents.

- To ensure operational safety, use original or standard parts which comply with the requirements of the manufacturer. If in doubt, have parts verified by the dealer or manufacturer.

4.4.7 Workstations and passengers

Control of the moving machine

The moving machine requires the driver to react quickly at any time. Otherwise, the machine may move in an uncontrolled manner and seriously injure or kill people.

- Start the engine from the driver's seat only.
- Never leave the driver's seat while the machine is moving.
- Never climb in or out of the machine while it is moving.

Passengers

Passengers may be seriously injured by the machine or fall off the machine and get run over. Ejected objects may strike and injure passengers.

- Never let people ride on the machine.

4.4.8 Operational safety: Technically perfect condition

Operation only when the machine has been started up correctly

If the machine is not started up correctly according to these operating instructions, the operational safety of the machine is not ensured. As a result, accidents may occur and people may be seriously injured or killed.

- Do not use the machine unless it has been started up correctly, see chapter Start-up.

Technically perfect condition of the machine

Improper maintenance and adjustment may affect the operational safety of the machine and cause accidents. As a result, people may be seriously injured or killed.

- Perform all maintenance and adjustment work according to the chapters Maintenance and Adjustment.
- Before performing any maintenance or adjustment work, shut down and safeguard the machine, see chapter Safety "Shutting down and safeguarding the machine".

Safety

Danger resulting from damage to the machine

Damage to the machine may impair the operational safety of the machine and cause accidents. As a result, people may be seriously injured or killed. The following parts of the machine are particularly important for safety:

- Steering
- Safety devices
- Connecting devices
- Lighting
- Hydraulic system
- Tyres
- Universal shaft

If there are doubts about the operational safety of the machine, for example due to leaking consumables, visible damage or an unexpected change to the driving behaviour:

- Shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine".
- Immediately eliminate potential causes of damage, for example heavy soiling, or tighten slack screws.
- If possible, repair the damage according to these operating instructions.
- In the case of damage which may affect operational safety and cannot be repaired according to these operating instructions: Have damage repaired by a qualified service centre.

Technical limit values

If the technical limit values of the machine are not observed, the machine may be damaged. As a result, accidents may occur and people may be seriously injured or killed. To ensure safety, the following technical limit values must be observed:

- Permitted gross weight
- Maximum speed.
- Observe limit values, see chapter Description of machine, "Technical data".

4.4.9 Danger zones

Danger zones on the tractor and the machine

The area around the tractor and the machine is a danger zone.

There are the following hazards in this danger zone:

- The tractor and the machine may start moving or rolling away and run over people.
- If the power lifter is unintentionally actuated, the machine may make hazardous movements.
- Defective or insecurely attached electrical cables may cause fatal electric shocks.
- Defective or insecurely attached hydraulic or pneumatic lines may become detached and flail around. Hydraulic oil may escape under high pressure and cause serious injuries to the skin or face.
- Clothing may become caught and wrapped around an exposed PTO shaft or a damaged or incorrectly installed universal shaft.
- When the drive is switched on, machine parts may rotate or swivel.
- Hydraulically raised machine parts may descend unnoticed and slowly.

If the danger zone is not observed, people may be seriously injured or killed.

- Keep people away from the danger zone of the tractor and the machine.
- Do not switch on the drives and engine until there is nobody in the danger zone.

The safety clearance is:

- 30 metres in front of the machine while in operation.
- 5 metres in front of the machine when at a standstill.
- 3 metres on either side of the machine.
- 5 metres behind the machine.
- Before working in front of and behind the tractor and in the danger zone of the machine: Shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine". This also applies to brief inspection work. Many serious accidents in front of and behind the tractor and the machine occur due to negligence and running machines.
- Consider the information in all relevant operating instructions.
 - The operating instructions for the tractor
 - The operating instructions for the machine
 - The operating instructions for the universal shaft

Safety

Danger zone between tractor and machine

People standing between the tractor and machine may be seriously injured or killed if the tractor rolls away or by machine movements:

- Before starting all work between the tractor and machine: • Shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine". This also applies to brief inspection work. Many serious accidents occur due to negligence and running machines.
- If the power lifter has to be actuated, keep all people away from the area of movement of the power lifter.

Danger zone when drive switched on

When the drive is switched on, there is a danger to life from rotating and swivelling machine parts. There must be nobody in the danger zone of the machine.

- Before starting the machine, direct all people out of the danger zone of the machine.
- If a hazardous situation arises, switch off drives and diesel engine immediately.

Danger zone of the P.T.O. shaft

People may be caught, pulled in and seriously injured by the PTO shaft and the driven components.

Before engaging the PTO shaft:

- Make sure that all safety devices are fitted and in the protection position.
- Ensure that the selected speed and direction of rotation of the PTO shaft match the permitted speed and direction of rotation of the machine.
- Ensure that nobody is in the danger zone of the PTO shaft or the universal shaft.
- If the angles are too large, switch off the PTO shaft. The machine may be damaged. Parts may be flung out and cause injury to persons.
- If the PTO shaft is not required, switch off the PTO shaft.

Danger zone universal shaft

People may become caught by the universal shaft, pulled in and seriously injured.

- Ensure that the universal shaft guards are attached and functional.
- Ensure that nobody is in the danger zone of the PTO shaft or the universal shaft.
- Provide the section tube and universal shaft guards with adequate cover.
- Allow the universal shaft locks to engage.
- Attach the chains to prevent the universal shaft guards from rotating with the shaft.
- Follow the operating instructions for the universal shaft.

Danger zone due to coasting machine parts

When the drives have been switched off, the following machine parts will coast:

- Universal shaft
- Rotor

When machine parts are coasting, people may be seriously injured or killed.

Shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine".

- Do not touch machine parts until they have come to a standstill.

4.4.10 Keeping safety devices functional

If safety devices are missing or damaged, people may be seriously injured or killed by moving machine parts.

- Replace damaged safety devices.
- Re-install all removed safety devices and all other parts and move them into protective position before starting up the machine.
- If it is doubtful whether all safety devices have been correctly installed and are functional, have a service centre check them.

4.4.11 Personal protective equipment

The wearing of personal protective equipment is an important safety measure. Missing or unsuitable personal protective equipment increases health risks and injuries.

Personal protective equipment is for example:

- Work gloves
- Safety boots
- Protective clothing
- Breathing protection
- Hearing protection
- Face and eye protection
- Specify and provide personal protective equipment for the particular job.
- Use only personal protective equipment which is in proper condition and offers effective protection.
- Adjust personal protective equipment to the person, for example the size.

Wear suitable clothing

Loose clothing increases the risk of it becoming caught or wrapped around rotating parts and of it becoming caught on protruding parts. As a result, people may be seriously injured or killed.

- Wear tight-fitting clothing.
- Never wear rings, chains or other items of jewellery.
- Cover long hair with a hairnet.
- Wear sturdy shoes or protective work boots.

4.4.12 Safety signs on the machine

Safety stickers on the machine warn of hazards in danger areas and are an important component of the safety equipment of the machine. Missing safety stickers increase the risk of serious and fatal injuries.

- Clean dirty safety stickers.
- After cleaning, always check that safety stickers are complete and legible.
- Immediately replace missing, damaged and unrecognisable safety stickers.
- Provide spare parts with the designated safety stickers.

Description, explanation and order numbers of the safety stickers, see chapter Safety, "Safety stickers on the machine".

Safety

4.4.13 Traffic safety

Dangers when driving on roads and in fields

The mounted or attached work machine changes the handling characteristics of the tractor. The handling characteristics also depend on the operational state and on the ground. If the driver does not consider changed handling characteristics, he may cause accidents.

- Observe procedures for driving on roads and in fields, see chapter "Driving and transportation".

Prepare the machine for road travel

If the machine is not prepared properly for road travel, serious accidents may occur with traffic.

- Before travelling on the road, always prepare the machine for road travel, see chapter Driving and transportation, "Preparations for road travel".

Danger of overturning

The machine may overturn when driving on slopes. As a result, accidents may occur and people may be seriously injured or killed. The risk of overturning depends on many factors.

- Observe procedures for driving, see chapter Driving and transportation.

4.4.14 Parking the machine safely

The parked machine may overturn. People may be crushed and killed.

- Park the machine on a stable and even surface.
- Before adjusting, repairing, servicing or cleaning the machine, ensure that it is securely positioned. If in doubt, support the machine.
- In the chapter Driving and transportation note the section "Parking the machine".

Unattended parking

Adults and playing children are at risk from an inadequately secured and unattended parked machine.

- Before switching off the machine: Shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine".

4.4.15 Consumables

Unsuitable consumables

Consumables which do not comply with the requirements of the manufacturer, may impair the operational safety of the machine and cause accidents.

- Use only consumables which comply with the requirements.

For the requirements of fuels, see chapter Description of machine, "Consumables".

Protection of the environment and disposal

Consumables such as diesel fuel, brake fluid, antifreeze and lubricants may damage the environment and the health of people.

- Do not release consumables into the environment.
- Absorb leaked consumables with an absorbent material or with sand, place in a liquid-tight labelled container and dispose of according to the official regulations.



4.4.16 Sources of danger on the machine

Noise may damage your health

When working continuously with the machine, health may be damaged, such as hardness of hearing, deafness or tinnitus. When the machine is used at high speed, the noise level also increases.

- Before starting up the combination of tractor and machine, estimate the risk caused by noise. Depending on the ambient conditions, working hours and the working and operating conditions of the machine, specify and use suitable hearing protection. In doing so, consider the sound pressure level, see chapter Description of machine, "Technical Data".
- Specify rules for the use of hearing protection and for the working time.
- During operation, keep the windows and doors of the cabin closed.
- Remove the hearing protection when travelling on the road.

Liquids under pressure

The following liquids are under high pressure:

- Hydraulic oil

Liquids under high pressure may penetrate the body through the skin and cause serious injuries.

- If a damaged pressure system is suspected, immediately contact a qualified service centre.
- Never search for leaks with bare hands. Even a pin-sized hole may cause serious injuries.
- Keep body and face away from leaks.
- If liquids penetrate the body, immediately consult a doctor. The liquid must be removed from the body as quickly as possible. Danger of infection!

Hot liquids

Risk of burns and scalding from hot liquids!

- When draining hot consumables, wear protective gloves.
- If required, leave liquids and machine parts to cool down before performing repair, maintenance and cleaning work.

Toxic exhaust gases

Exhaust gases may seriously damage your health or be fatal.

- While the engine is running, provide adequate ventilation to prevent prolonged exposure to exhaust gases.
- Do not leave the engine running in a closed room unless there is a suitable exhaust gas extraction system.

Safety

4.4.17 Dangers associated with certain activities: Work on the machine

Work on the machine only when it has been shut down

If the machine has not been shut down and safeguarded, parts may move unintentionally or the machine may start moving. As a result, people may be seriously injured or killed.

- Before performing any work on the machine, such as making adjustments, cleaning, preparing for road travel, preparing for work, servicing or rectifying malfunctions, shut down and safeguard the machine, see chapter Safety "Shutting down and safeguarding the machine".

Maintenance and repair work

Incorrect maintenance and repair work will endanger operational safety. As a result, accidents may occur and people may be seriously injured or killed.

- Only perform work which is described in these operating instructions. Before performing any work, shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine".
- All other maintenance and repair work may be performed by a qualified service centre only.

Raised machine and machine parts

The raised machine may accidentally drop, roll away or overturn and crush or kill people.

- Do not stand under the raised machine. First put the machine down.
- Before performing any work under the machine, securely support the machine, see chapter Safety "Securely supporting the raised machine and machine parts".
- Before performing any work on or under raised machine parts, lower the machine parts or secure them mechanically with rigid safety supports or with a hydraulic shut-off device to prevent them from dropping.

Danger associated with welding work

Improper welding work will endanger the operational safety of the machine. As a result, accidents may occur and people may be seriously injured or killed.

- Before performing welding work on the machine, obtain the consent of KRONE customer service and, if required, identify alternatives.
- Have welding work performed by experienced technicians only.

4.4.18 Dangers associated with certain activities: Working on wheels and tyres

Fitting/removing wheels and tyres

Improper fitting or removal will endanger operational safety. As a result, accidents may occur and people may be seriously injured or killed.

The fitting of wheels and tyres requires adequate knowledge and approved tools.

- If there is a lack of knowledge, have the wheels and tyres fitted by the KRONE dealer or by a qualified tyre service.
- When fitting tyres on the wheel rims, never exceed the maximum permitted pressure specified by the tyre manufacturers, otherwise the tyre or even the wheel rim may explode.
- When fitting the wheels, tighten the wheel nuts to the stipulated torque, see chapter Maintenance "Tyres".

4.4.19 Behaviour in hazardous situations and when accidents occur

Neglected or incorrect procedures in hazardous situations may obstruct or prevent the rescue of people in danger. Difficult rescue conditions will impair the chances of helping and healing the injured.

- In principle: Switch off the machine.
- Gain an overview of the hazardous situation and identify the cause of the hazard.
- Safeguard the accident location.
- Rescue people from the danger zone.
- Withdraw from the danger zone and do not enter again.
- Alert rescue teams and, if possible, fetch help.
- Take immediate life-saving measures.

Safety

4.5 Safety routines

4.5.1 Stopping and securing the machine



WARNING!

Crush hazard due to movement of the machine or machine parts!

If the machine has not been shut down, the machine or machine parts may move unintentionally. As a result, people may be seriously injured or killed.

- Before leaving the machine: Shut down and secure the machine.

To park the machine securely:

- Park the machine on a stable and even surface.
- Switch off the drives and wait until coasting parts have come to a standstill.
- Switch off the tractor engine, remove the ignition key and take it with you.
- Use the parking brakes to secure the machine and tractor from rolling away.

4.5.2 Supporting lifted machine and machine parts securely



WARNING!

Risk of injury due to movement of the machine or machine parts

If the machine is not supported securely, the machine or machine parts may roll, fall or drop. As a result, people may be seriously injured or killed.

- Before working on or under raised components: Securely support machine or machine parts.

To securely support the machine or machine parts:

- Shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine".
- Before performing any work on or under raised machine parts, lower the machine parts or secure them mechanically with rigid safety supports (e.g. support stand, crane) or with a hydraulic shut-off device (e.g. stop cock) to prevent them from dropping.
- Never support the machine or machine parts with materials which can buckle.
- Never support the machine or machine parts with hollow blocks or bricks. Hollow blocks or bricks may break under continuous load.
- Never work under the machine or machine parts which are held up by a car jack.

4.5.3 Coupling the machine safely

**WARNING!****Risk of injury while hitching the machine**

While hitching the machine to the tractor, the machine or machine parts may move unintentionally. As a result, people may be seriously injured or killed.

- Follow the correct steps while hitching the machine.
- While hitching the machine to the tractor, never stand between the tractor and the machine.
- Depressurise the tractor hydraulics.
- Shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine".
- Connect the hydraulic hose lines only if the hydraulic systems of the tractor and machine are depressurised.
- Connect and secure the universal shaft.
- Connect the lighting cable.
- Connect the power cable.

4.5.4 Uncoupling the machine safely

**WARNING!****Risk of injury while unhitching the machine**

While unhitching the machine, the machine or machine parts may move unintentionally. As a result, people may be seriously injured or killed.

- Follow the correct steps below while unhitching the machine:
- Shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine".
- Lower the parking support.
- Depressurise the tractor hydraulics.
- Disconnect the hydraulic hose lines only if the hydraulic systems of the tractor and machine are depressurised.
- Disconnect the lighting cable from the tractor.
- Disconnect the universal shaft and place it on the holder provided.
- While unhitching the machine from the tractor, never stand between the tractor and the machine.

Safety

4.5.5 Preparing the machine for repair, maintenance and adjustment work



WARNING!

Risk of injury during repair, maintenance and adjustment work on the machine.

If the machine has not been shut down, the machine or machine parts may move unintentionally. As a result, people may be seriously injured or killed.

If the machine is not supported securely, the machine or machine parts may roll, fall or drop. As a result, people may be seriously injured or killed.

- Before starting repair, maintenance and adjustment work, perform the following steps:

- Shut down and safeguard the machine, see chapter Safety, "Shutting down and safeguarding the machine".
- The raised machine or machine parts must be securely supported, see chapter Safety "Securely supporting the raised machine and machine parts".

4.5.6 Starting the machine safely



WARNING!

Risk of injury while starting up the machine

If the machine has not been safely placed in operation, the machine or machine parts may move unintentionally. As a result, people may be seriously injured or killed.

- Make certain before starting up the machine that the following requirements are met:

- The hydraulic lines are connected.
- The universal shaft is connected and secured.
- The lighting system is connected.
- The safety chain is in place (not provided in all countries).
- All safety equipment is in place, is proper condition, and in the protective position.
- The PTO speed of 540 rpm is not exceeded.
- The universal shaft recommended by the manufacturer is being used.
- The hoses, cables and ropes are laid so that they do not scrape, come under tension or become jammed or come in contact with other parts (such as the tractor tyres).
- The machine parts of the tractor do not come in contact with the machine parts of the machine (especially when cornering).
- There are no persons in the machine danger zone.




This page has been left blank deliberately!!

Safety

4.6 Safety stickers on the machine

4.6.1 Position and meaning of the safety stickers on the machine


The rotary tedder is equipped with all safety devices (protective devices). However, it is not possible to eliminate all potential hazards on this machine as this would impair its full functional capability. Hazard warnings are attached to the machine in the relevant areas to warn against any dangers. The safety instructions are provided in the form of so-called warning pictograms. Important information on the position of these safety signs and what they mean is given below!

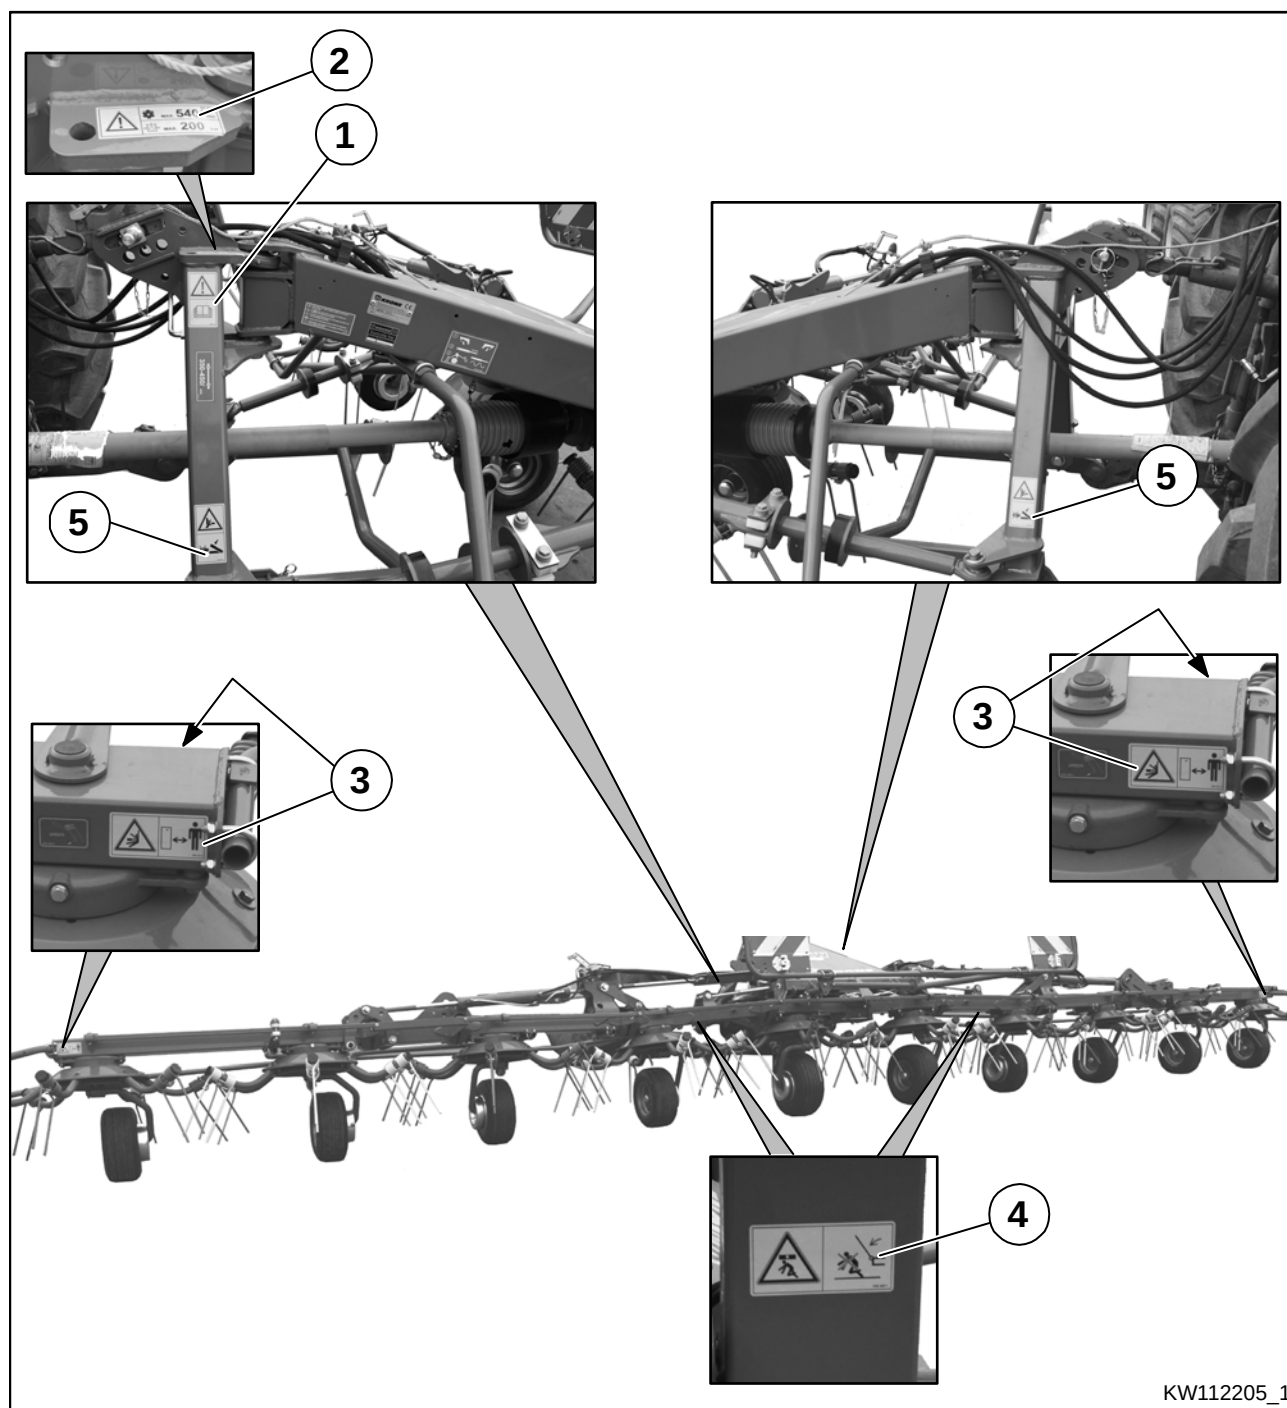

 
KW112205_1

Fig. 1


1) Order no. 939 471 1 (1x)

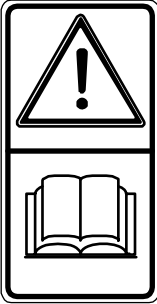	Danger due to incorrect operation and lack of knowledge Incorrect operation and lack of knowledge of the machine as well as incorrect behaviour in hazardous situations is risking the life of the operator and third parties. Before starting up the machine, read and follow the operating instructions and safety instructions.
---	---

2) Order no. 939 100 4 (1x)

	Danger if the maximum permitted PTO speed or the maximum permitted operating pressure is exceeded. If the maximum permitted PTO speed is exceed, parts of the machine may be destroyed or forcibly ejected. If the maximum permitted operating pressure is exceeded, hydraulic parts may be damaged. As a result, people may be receive serious or life threatening injuries. - Observe the permitted PTO speed. - Observe the permitted operating pressure.
---	--


3) Order No. 939 472 2 (4x)

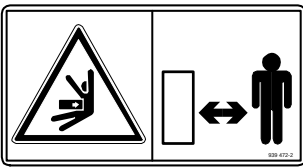	Danger due to impact Risk of death due to swivelling movements of the machine. - Ensure that there is nobody in the swivel range of the machine. - Maintain distance from moving machine parts.
---	---

4) Order no. 939 469 1 (2x)

	Danger due to impacts or crushing Danger to life from machine parts folding down or lowering. - Ensure that there is nobody in the swivel range of the machine parts. - Maintain distance from moving machine parts.
---	--

5) Order no. 942 196 1 (2x)

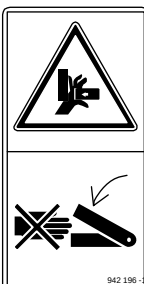	Danger due to crushing or shearing Risk of injury due to crushing or shearing points on moving machine parts. While parts are moving, never reach into areas where there is a risk of being crushed.
---	---

Safety

4.6.2 Re-Ordering the Adhesive Safety and Information Labels



Note

Every adhesive safety and information label is assigned an order number and can be ordered directly from the manufacturer or from an authorized dealer (see Section "Contact").

4.6.3 Affixing the Adhesive Safety and Information Labels



Note - Affixing an adhesive label

Effect: Adhesion of the label

- The surface for affixing the adhesive label must be clean and free of dirt, oil and grease.
-


4.6.4 Contact

Maschinenfabrik Bernard Krone GmbH
Heinrich-Krone-Strasse 10
D-48480 Spelle (Germany)

Telephone: + 49 (0) 59 77/935-0 (Head Office)
Fax.: + 49 (0) 59 77/935-339 (Head Office)
Fax.: + 49 (0) 59 77/935-239 (Spare parts - domestic)
Fax.: + 49 (0) 59 77/935-359 (Spare parts - export)
Email: info.ldm@krone.de

5 Machine Description

5.1 Machine overview

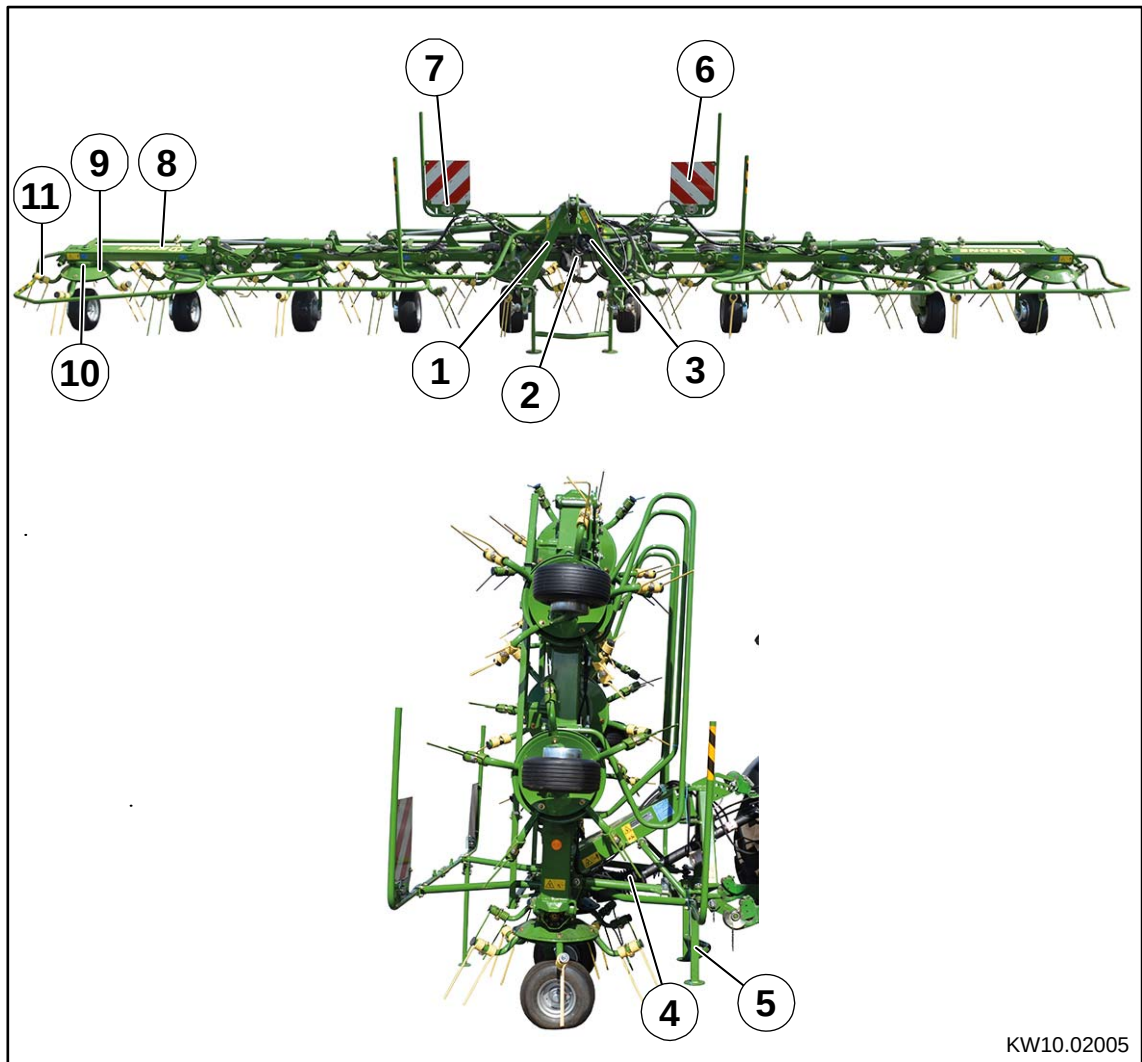

KW10.02005

Fig. 2

1)	Three-point linkage	2)	Universal shaft bracket	3)	Universally-jointed drive shaft
4)	Overload protection	5)	Parking support	6)	Warning panel
7)	Lighting equipment (optional)	8)	Outrigger arm	9)	Rotor
10)	Rotor gearbox	11)	Tine arm with tine		

Machine Description

5.2 Identification Plate

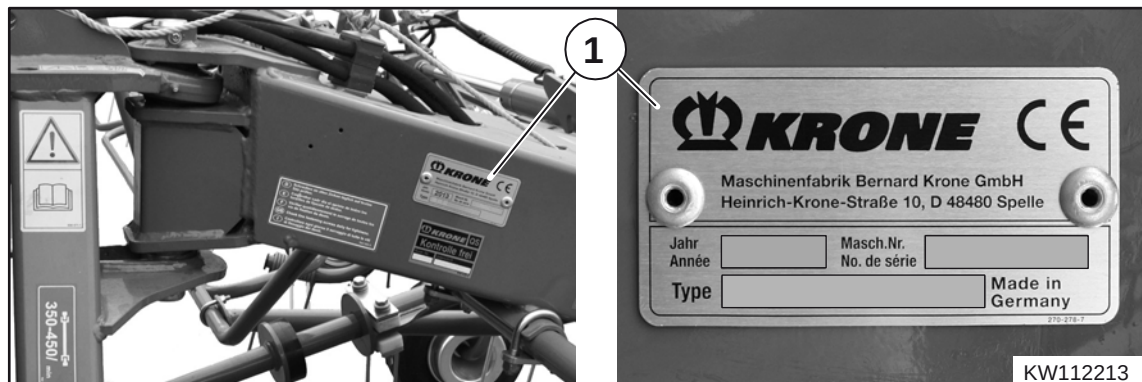


Fig. 3

The machine data are located on the type plate (1).

5.3 Information Required for Questions and Orders

Type	
Year of manufacture	
Vehicle ID number	



Note

The entire identification plate represents a legal document and should not be altered or rendered illegible!

When asking questions concerning the machine or ordering spare parts, be sure to provide type designation, vehicle ID number and the year of manufacture : To ensure that these data are always available, we recommend that you enter them in the fields above.



Note

Authentic KRONE spare parts and accessories authorised by the manufacturer help to ensure safety. The use of spare parts, accessories and other devices which are not manufactured, tested or approved by KRONE will result in the revoking of the liability for damages resulting thereof.

5.3.1 Contact

Maschinenfabrik Bernard Krone GmbH
Heinrich-Krone-Strasse 10
D-48480 Spelle (Germany)

Telephone: + 49 (0) 59 77/935-0 (Head Office)
Fax.: + 49 (0) 59 77/935-339 (Head Office)
Fax.: + 49 (0) 59 77/935-239 (Spare parts - domestic)
Fax.: + 49 (0) 59 77/935-359 (Spare parts - export)
Email: info.idm@krone.de

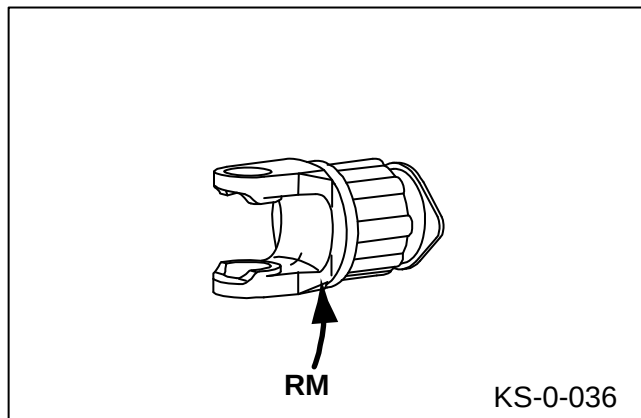
5.4 Overload protection

Fig. 4

The PTO shaft is equipped with an overload coupling. Overload couplings protect the tractor and device against damage. The setting of the overload coupling must not be changed. Therefore the warranty will be voided if the set torque on the overload coupling is manipulated or changed.

If overload occurs, the torque is restricted and transferred by pulsation during the slip phase.

Technical Data of the Machine

6 Technical Data of the Machine

6.1 Technical data

All information, illustrations and technical data in these operating instructions correspond to the latest state at the time of publication. We reserve the right to make design changes at any time and without notification of reasons.

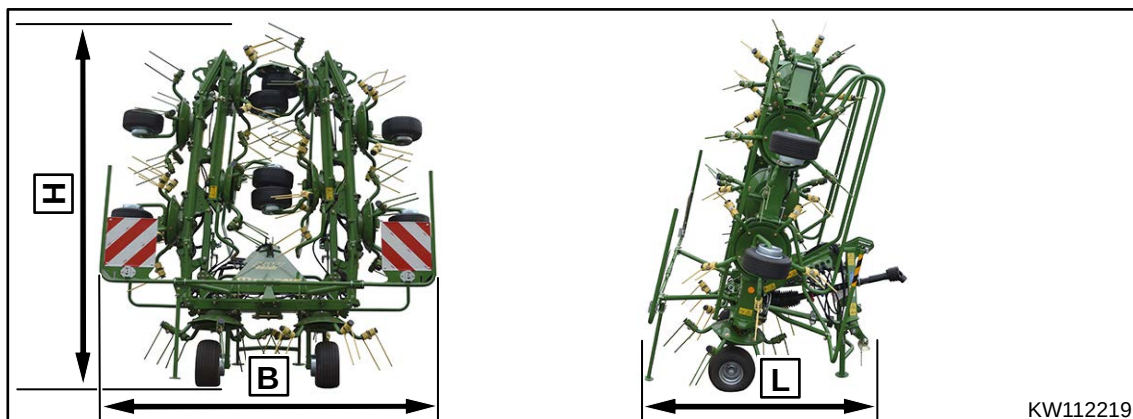


Fig. 5

Dimensions in transport position	mm
Height	4,000
Length	2,300
Width	2,980

Dimensions in working position	mm
Width	10,950

Weights	kg
Dead weight	1,510

Power	ha/h
Surface	11



Technical Data of the Machine

Minimum requirement for the tractor	
Power consumption	66/90 kW/HP
PTO speed	max. 540 rpm
Lighting voltage	12 volts – 7-pin plug
Max. operating pressure of the hydraulic system	200 bar
Hydraulic connections	2 x double-acting control units
Max. permissible transport speed	40 km/h
Lower link	Height and side can be fixed in place

Machine equipment (series)	
Lower link hitch	Cat. II
Number of rotors	10
Number of tine arms per rotor	6
Universal shaft	With overload protection
Spreading angle adjustment	13° - 19°

Machine equipment (optional)	
Spare tyre with support	16 x 6.50-8
Spare tyre with support	18 x 8.50-8
Lighting equipment	
Night swathing gearbox	
Anti-wrap guard sheet	
Guide wheel	

Airborne Sound Emission	
Equivalent continuous pneumatic level recorder	less than 70 d B(A)

Technical Data of the Machine

6.2 Consumables

6.2.1 Filling Quantities and Lubrication Designations for Gearboxes

Machine component	Filling quantity	Specification	Initial filling ex works
Rotor gearbox	0.2 l	Fluid gear grease GFO 35	RENOLIT SO – GFO 35
Main gearbox	1.0 l	SAE 90	Violin ML 4 SAE 90
Grease nipple	as required	Mobilgrease XHP 222	RENOLIT CX-TOM 15



Biological consumables on request.

6.3 Tyres

Tyres	Tyre identification	Tyre pressure [bar]
Single axle running wheels	16 x 6.50-8	1.7
Inside single axle running wheels	18 x 8.50-8	2.0

7 Control and Display Elements

The following table shows the functions on the machine

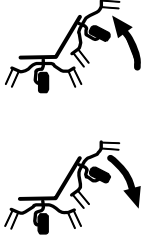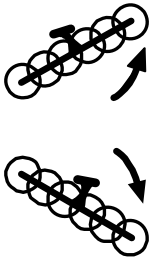Control	Function
Double-action control unit (red 1+/red 1-) 	Raising/lowering external rotors - Pressure (red 1+): Raise external rotors - Pressure (red 1-): Lower external rotors
Double-action control unit (blue 2+/blue 2-) 	Clear border spreading system on left/on right - Pressure (blue 2+): Clear border spreading system on left - Pressure (blue 2-): Clear border spreading system on right

Commissioning

8 Commissioning



WARNING!

Risk of accident or damage to the machine due to an incorrect initial operation!

Only an authorized service technician is permitted to carry out the initial operation.



WARNING!

If the basic safety instructions are not followed, people may be seriously injured or killed.

- To avoid accidents, the basic safety instructions in the chapter Safety must have been read and followed, see chapter Safety "Basic safety instructions".



WARNING!

If the safety routines are not adhered to, people may be seriously injured or killed.

- To avoid accidents, the safety routines in the chapter Safety must be read and followed, see chapter Safety "Safety routines".



WARNING!

Risk of injury due to the unsecured machine rolling away!

If the machine is not secured against rolling away when it has been switched off, there is a risk of people being injured by the machine rolling away in an uncontrolled manner.

- Secure the machine against rolling away with wheel chocks.



Danger! - Handling characteristic not guaranteed

Effect: Danger to life, injuries or damage to the machine

Attaching implements at the front and rear must not result in exceeding the max. permissible weight, the permissible axle loads, or the carrying capacities of the tractor tyres. Even with a fitted rear-mounted accessory unit, the front axle must always be loaded with a minimum 20% service weight of the tractor. Make sure before starting to move that these requirements have been met.

8.1 General

Prior to attaching or detaching devices to or from the 3-point suspension, move the loading equipment to a position that excludes inadvertent lifting or lowering!

Use extreme caution when attaching or detaching implements onto or from the tractor!

In the vicinity of the 3-point linkage, there is risk of injury due to crushing and shearing points!

8.2 First installation

The document "Assembly Instructions" describes how to install the device for the first time.

8.3 Preparations on the rotary tedder

8.4 Overload protection

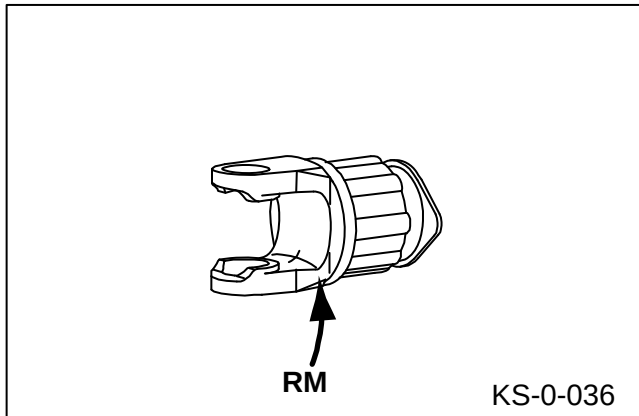


Fig. 6



Note

To avoid premature wear on the overload coupling, the PTO shaft must be turned off immediately when the overload coupling engages.



Note

Compare the applicable RM torque value on the overload coupling with the value specified in the following table. If these values do not match, please contact your Krone dealer.

Type	Torque (RM)
KW 11.22/10	1200 Nm

8.4.1 Removing the preserving wax from the tines

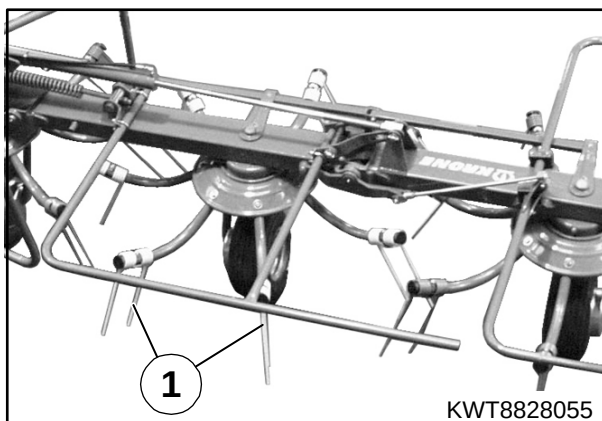


Fig. 7



Note

The preserving wax on the tines leads to a clumping of the cut crop stalks on the tines and results therefore in disturbances of the process flow.

Removing the preserving wax:

- Remove the preserving wax with a steam cleaner from all tines (1) before initial operation.

Commissioning

8.5 Connect the machine to the tractor

- See section "Start-up".

8.6 PTO shaft

8.6.1 Length adjustment



Caution! - Changing the tractor

Effect: Damage to the machine

When using the machine for the first time and whenever changing the tractor Check PTO shaft for the correct length. If the length of the PTO shaft does not match the tractor, always observe the chapter entitled "Adjusting the length of the PTO shaft".



Caution! - Material Damages

- Do not lift the machine until the length of the PTO shaft has been adjusted!

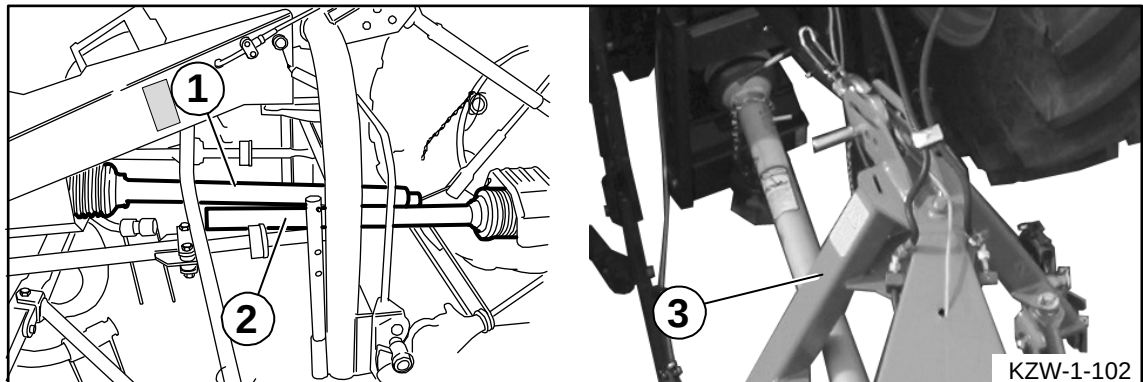


Fig. 8



Note

The universal shaft can reach the shortest operating position either with tightest turning or when lifting the machine.

The length of the universal shaft (1) must be adjusted:

- Disassemble the universal shaft
- Install each half (1) and (2) on the tractor and machine side respectively
- Position machine in the shortest universal shaft position setting. To do this, turn the headstock all the way (3) and adjust the lower suspension arms of the tractor in a way that both universal shaft connections are set on the same height
- Shorten special section tubes and guard tubes to an extent that the universal shaft can move freely in the shortest operating position
- For additional operating instructions refer to the operating instructions of the universal shaft manufacturer

9

Start-up



WARNING!

If the basic safety instructions are not followed, people may be seriously injured or killed.

- To avoid accidents, the basic safety instructions in the chapter Safety must have been read and followed, see chapter Safety "Basic safety instructions".



WARNING!

If the safety routines are not adhered to, people may be seriously injured or killed.

- To avoid accidents, the safety routines in the chapter Safety must be read and followed, see chapter Safety "Safety routines".

Check prior to start-up to ensure that:

- The length of the universal shaft is adjusted, see section "Universal shaft" in Start-up.

Start-up

9.1 Preparations on tractor

9.1.1 Adjusting the lower suspension arms

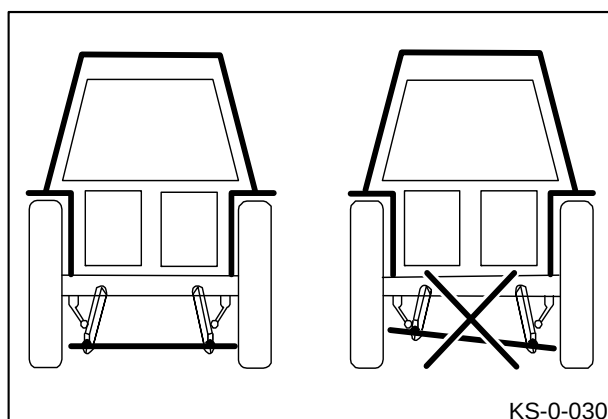


Fig. 9

The machine is fitted with a Cat. II centering pivot for the three-point hydraulic system.



Note

The tractor lower suspension arms must always be installed so that the lifting points of the lower suspension arms are all at the same distance from the ground. In order to prevent swivelling of the machine during transport or operation, the lower suspension arms must be secured by limiting chains or bars.

9.2
Connect the machine to the tractor

CAUTION! – Collision with the trailer coupling

Effect: Damage to the tractor or machine

Depending on the type of tractor, the top link of the tractor and/or the universal shaft of the machine could collide with the trailer coupling.

- To prevent damage, it may be necessary to detach the trailer coupling. For further information refer to the tractor manufacturer's operating instructions.


Note

In the following description, one assumes that the machine (after final assembly) is in the transport position.

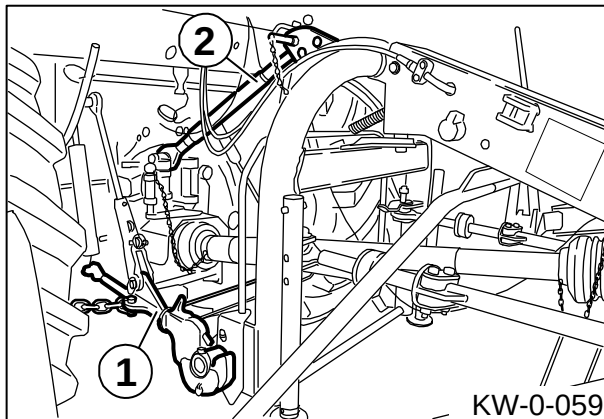


Fig. 10

- Connect machine to lower link (1) and top link (2)
- In order to prevent swivelling of the machine to the side, the lower links must be secured by limiting chains or bars

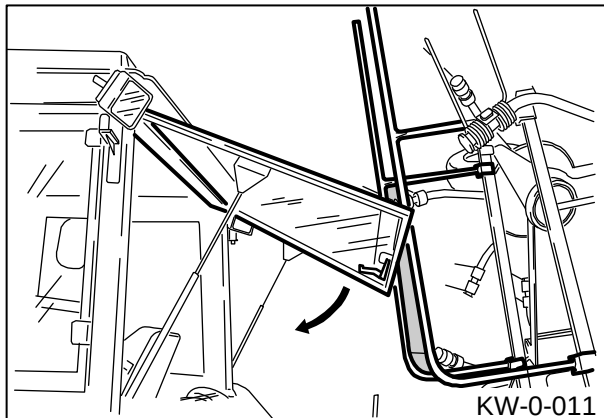


Fig. 11


Note

Before raising the rear hydraulics make certain the rear window of the tractor cab is closed. Otherwise the rear window could be damaged by the protective frames of the machine.


Note

The lowering throttle must adjust the lowering speed of the rear hydraulics so that the running gear of the machine comes to rest slowly on the ground.

Start-up

9.3 Install the PTO shaft



Danger! - Rotating PTO shaft

Effect: Danger to life or serious injuries

- Install or detach the PTO shaft only with the engine switched off and the ignition key removed.
- Secure the tractor against rolling.
- Make sure that the PTO shaft is coupled properly (the lock of the PTO shaft must have snapped in).
- Make sure that the protective devices are attached properly.
- Never use a PTO shaft, the protective devices of which have not been attached.
- Replace damaged protective devices immediately
- Attach the safety chain of the PTO shaft so that the guard tube does not rotate simultaneously with the PTO shaft.



Danger! - Observe drive speed

Effect: Danger to life or serious injuries

- This machine is driven at a maximum PTO speed of 540 rpm.



Note

When mounting the universal shaft, make sure that the overload protection system will be installed on the side of the machine.

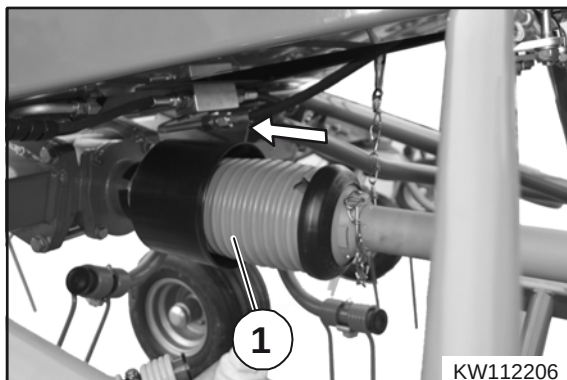


Fig. 12

Install the universal shaft on machine side:

- Slide the universal shaft (1) with overload coupling on the P.T.O. shaft of the machine. The fuse must engage in this process.

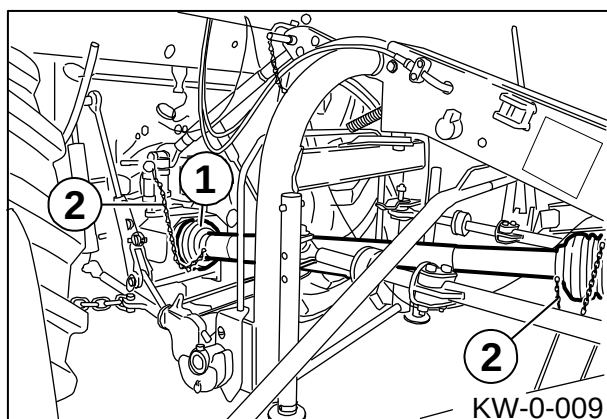


Fig. 13

Install the universal shaft on tractor side:

- Slide the universal shaft onto the P.T.O. shaft of the tractor. In doing this, ensure that the sliding pin is securely engaged
- Secure the guard tubes (1) against turning with a chains (2)

Start-up

9.3.1 Connecting the hydraulic lines



WARNING! - If the hydraulic hoses are interchanged when connecting them to the hydraulic system of the tractor, the functions will be interchanged as well.

Effect: Injuries, serious damage to the machine

- Identify the hydraulic connections.
- Always ensure correct connection between the machine and the tractor.
- When connecting and removing the hydraulic hoses to and from the tractor hydraulics take care that the hydraulics are pressureless both on the tractor side and the machine side.



Caution! - Soiling of the hydraulic system

Effect: Damages to the machine

- When connecting the quick couplings, ensure that these are clean and dry.
- Note chafing areas or points of contact.

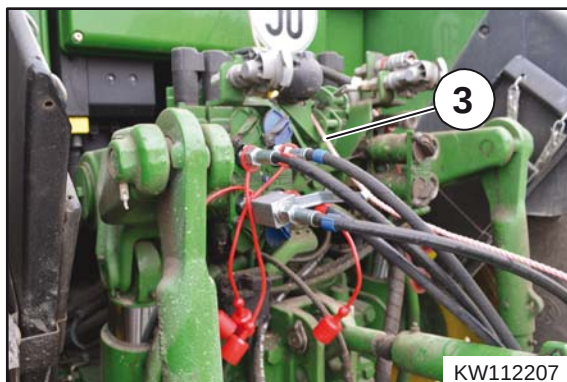


Fig. 14



Note

When engaging the hydraulic hose, the hydraulic control unit must be in float position or in position "Lower".



Note

Connect hydraulic hoses correctly.

- The hydraulic hoses are marked with numbers and coloured dust caps.
- Set the single-action control units of the tractor to float position.
- Turn off the tractor and secure it against the possibility of rolling back.
- Connect the hydraulic lines (red 1+ / red 1-) of the machine to a double-action control unit of the tractor.
- Connect the hydraulic couplings (blue 2+ / blue 2-) of the machine to a double-action control unit of the tractor.



Note

For further information about connecting the hydraulic lines, refer to the tractor operating instructions.

10**Driving and Transport****WARNING!**

If the basic safety instructions are not followed, people may be seriously injured or killed.

- To avoid accidents, the basic safety instructions in the chapter Safety must have been read and followed, see chapter Safety "Basic safety instructions".

**WARNING!**

If the safety routines are not adhered to, people may be seriously injured or killed.

- To avoid accidents, the safety routines in the chapter Safety must be read and followed, see chapter Safety "Safety routines".

**WARNING!**

There is a risk of accidents if the control valves on the tractor are not locked.

If the control valves are not locked, machine components may be activated unintentionally. This can result in serious accidents.

- To prevent functions being triggered accidentally, the control valves on the tractor must be switched to neutral and locked during road transport journeys.

**WARNING!**



Danger when cornering with a machine hitched

When cornering, the hitched machine swings out further than the tractor. This can lead to accidents.

- Take the greater swivel range into account.
- When turning, take account of people, oncoming traffic and obstacles.

Driving and Transport

10.1 Preparations for road travel

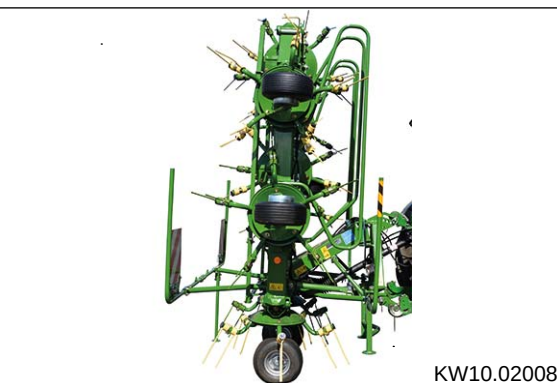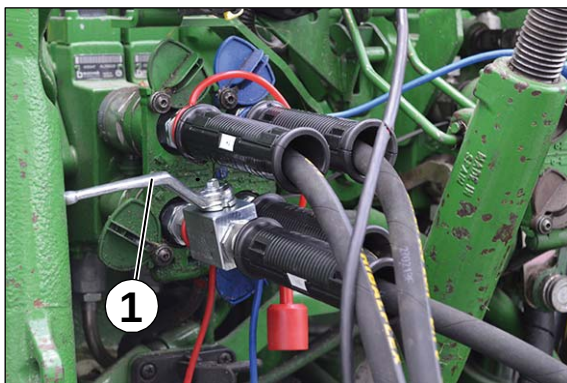

KW10.02008

Fig. 15

Before road travel, make certain that

- the machine is fully and correctly hitched, refer to chapter “Start-up”.
- the PTO shaft is turned off and the rotors have come to a complete stop.
- the machine is in the transport position, refer to chapter Operation “Moving Machine into Transport Position”.
- all hydraulic control units are in neutral position.
- the stop cock (1) is closed.
- the transport width is reduced, refer to chapter Driving and Transport „Reducing the Transport Width“.
- the lighting system is working, for the “Lighting” version.

10.2 Reducing transport width



Fig. 16

For reducing the transport width (< 3 m):

- Swivel the impeller (3) of the second rotor from the inside into transport position to the front.
- Secure with bolt (1) and cotter pin (2).

10.3 Travelling on an incline

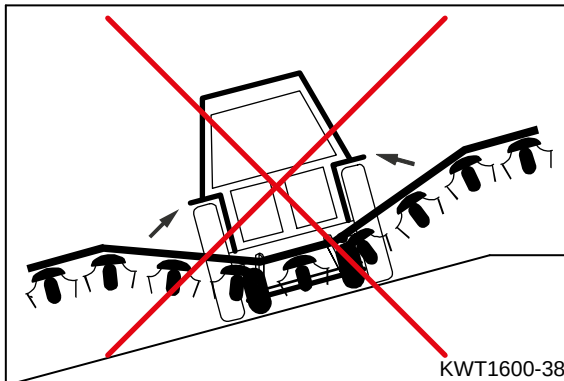


Fig. 17

- Never move the outrigger arms from working position to transport position or from transport position to working position as long as the machine is positioned transversely to incline.

Driving and Transport

10.4 Switching off the machine



WARNING!

Risk of injury due to the unsecured machine rolling away!

If the machine is not secured against rolling away when it has been switched off, there is a risk of people being injured by the machine rolling away in an uncontrolled manner.

- Secure the machine against rolling away with wheel chocks.

Parking support front

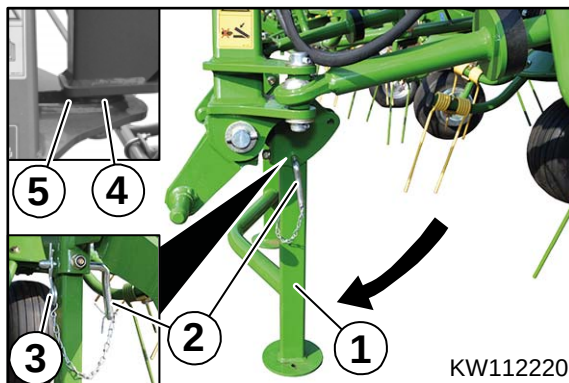


Fig. 18

- Pull spring cotter pin (3) and bolt (2), swivel front parking support (1) down and lock with bolt and spring cotter pin in this position. Make sure that the roll of the carrying bar (4) is located in the rear part of the U-channel (5) of the three-point hitch.

Parking support back

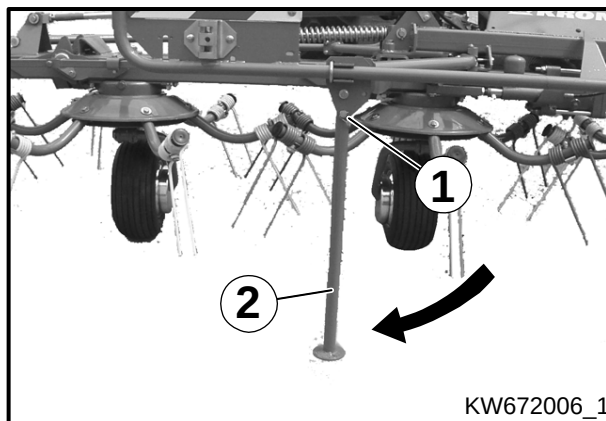


Fig. 19

Prerequisite:

- The machine is in the working position, see "Moving the machine into the working position" in the Operation chapter.
- Swivel rear parking support (2) down and secure with linch pin (1).



Note

The retaining chains of the guard tubes must under no circumstances be used to hang the universal shaft.

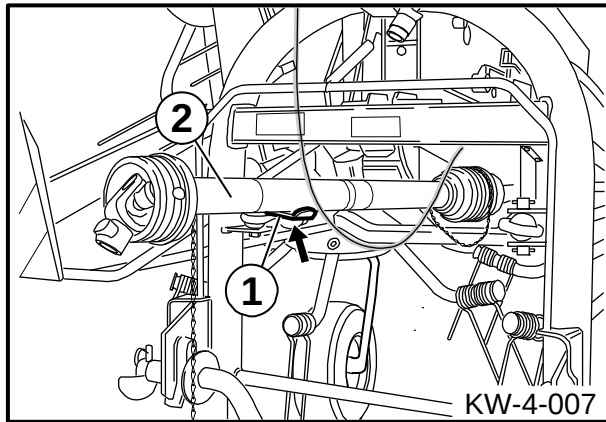


Fig. 20

- Loosen retaining chain, pull out the universal shaft (2) and place it onto the universal shaft bracket (1)
- Disconnect the hydraulic hose from the tractor and set the dust cap in place
- Uncouple the machine from the tractor

Operation

11 Operation



WARNING!

If the basic safety instructions are not followed, people may be seriously injured or killed.

- To avoid accidents, the basic safety instructions in the chapter Safety must have been read and followed, see chapter Safety "Basic safety instructions".



WARNING!

If the safety routines are not adhered to, people may be seriously injured or killed.

- To avoid accidents, the safety routines in the chapter Safety must be read and followed, see chapter Safety "Safety routines".



CAUTION! - Do not drive in reverse when using the machine for work.

Effect: Damage to the machine.

The machine is designed to travel forwards. Never reverse while the machine is in switched on and in working position. Lift rotors first.

11.1 Moving the machine into the working position

- Shut down and safeguard the machine, see chapter Safety -> Safety routines, "Shutting down and safeguarding the machine".

**Danger! – Lowering the machine into working position**

Danger to life, injuries or damage to the machine.

- Lower the machine only when you are absolutely sure that neither persons, animals nor objects are in the swivel range of the machine.
- Switch the PTO on only when the machine is in working position, the collapsible tine arms are swivelled into the working position and the hoop guards are turned downwards.

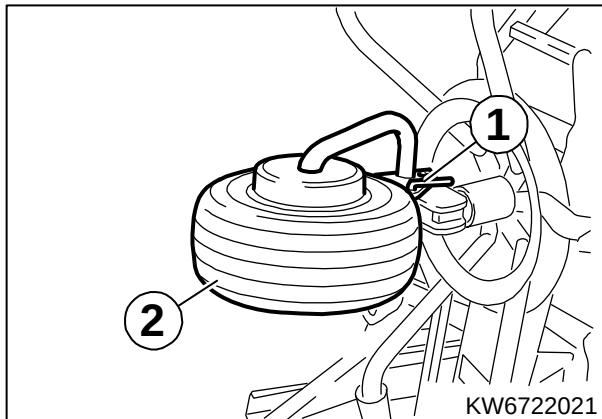


Fig. 21

- Swivel impeller (2) of the second rotor from the inside into working position.
- Secure with bolt (1) and cotter pin.

**Note**

Mind the position of the single wheels (refer to chapter "Spreading Angle Setting of the Rotors") when swivelling into working position.

Operation

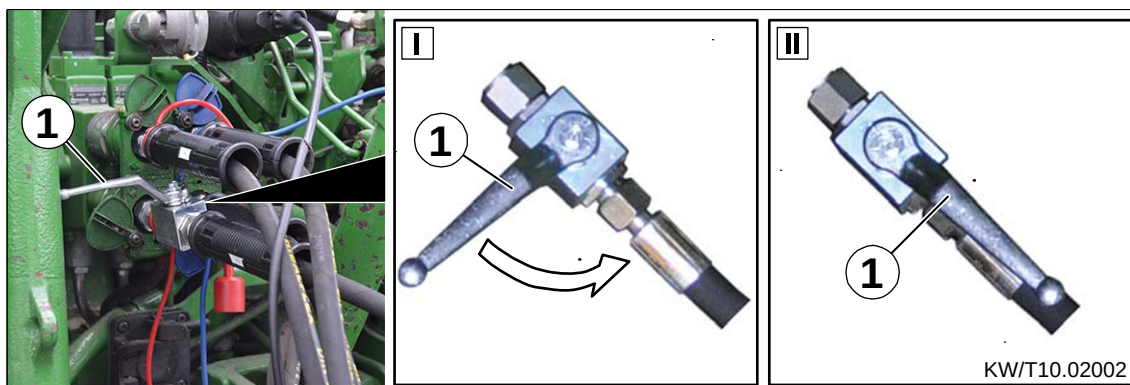


Fig. 22

I) closed

II) open

- Open the hydraulic stop cock (1) (position II).
- To move the machine into the working position, activate the double-acting control unit (red 1-).



Note

Only as soon as the spread limiter is in central position, the safety valve will be opened in order to bring the machine from transport to working position and vice versa.



Note

Leave the control valve in the "float position" when using the machine for work (see also information label 27 003 766 0 on the machine).

11.2 Working height of the tine rotors

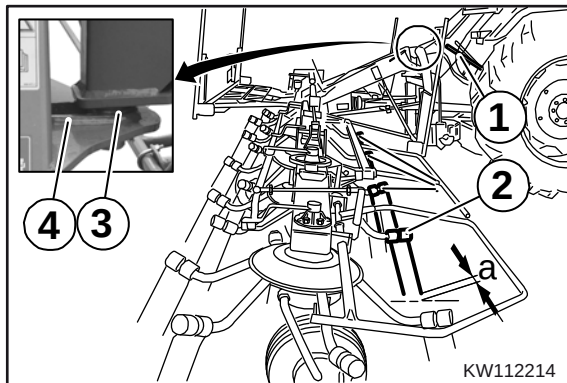


Fig. 23

The working height of the tine rotors is set on the top link (1).

- Move the machine into the working position on level and firm ground.
- Set the rear hydraulics to the float position.
- Shorten or extend the top link until the distance "a" from the front tines (2) to the ground is approx. 2 cm.

The roller (3) on the carrying bar at the rear must rest in the channel section (4) of the three-point linkage.

This setting is a basic setting. In practice, the height setting of the tines must be adjusted to the surrounding conditions.



Note

If the spreading angle is adjusted, the working height adjustment of the tine rotors must be checked and re-adjusted.

Operation

11.3 Moving the machine into the transport position



WARNING!

If the machine is operated while in the transport position, persons may become caught and seriously injured!

- Never operate the machine while in the transport position.



Note

Only as soon as the spread limiter is in central position, the safety valve will be opened in order to bring the machine from transport to working position and vice versa.

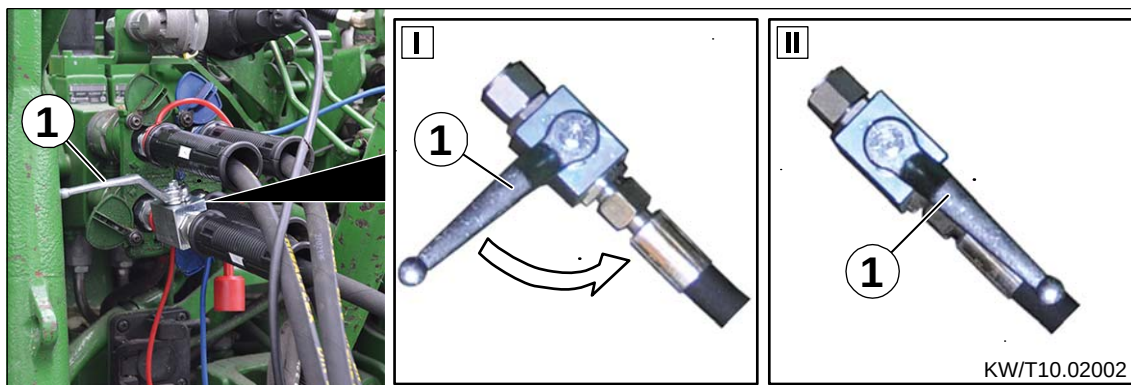


Fig. 24

I) closed

II) open

- Open the hydraulic stop cock (1) (position II).
- To move the machine into the transport position, activate the double-acting control unit (red 1+).
- Close the hydraulic stop cocks (position I).

11.4 Using the Machine for Work

Wide spreading (tedding)

If possible, take the swathes in between the rotors.

If the forage is heavy drive with higher speed and not so high travelling speed (4 - 6 km/h) (steeper spreading angle).

Raking

The dryer the forage the smaller the P.T.O. speed to be chosen in order to avoid damages to the forage.

Travelling speed (6 to 8 km/h) must be adapted to the condition of the forage.

With wet forage choose the speed and the travelling speed like the one when spreading (flat spreading angle).



Note

These data are standards and must be adapted to the circumstances in practice.

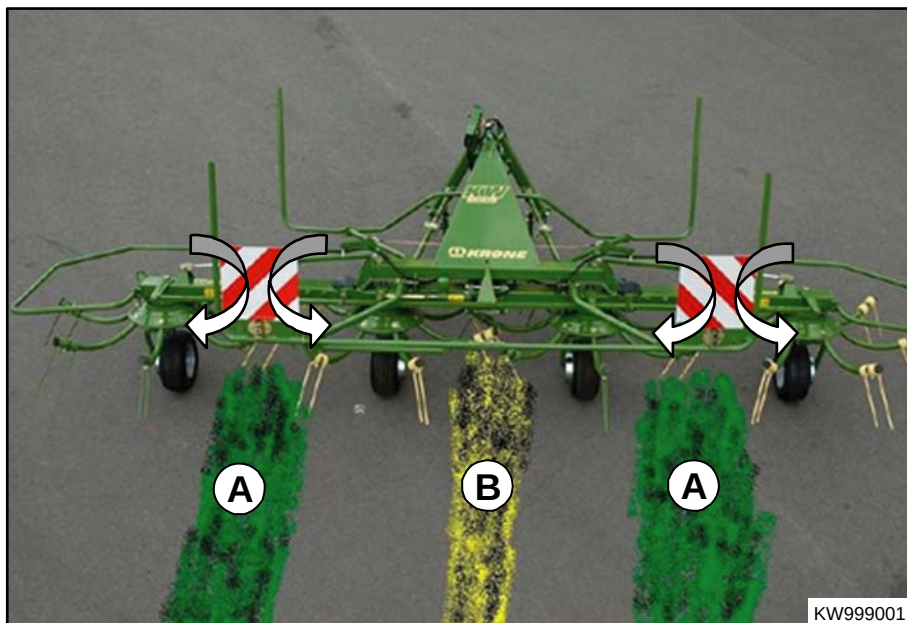


Fig. 25

Target setting for quick drying

An even spread pattern is the target of such a work process with the tedder. In the process the forage is supposed to lie in an even carpet behind the tedder.

In case swaths are forming during raking the speed should be at:

- Forming of swaths between tines turning to the back (A): increase the speed
- Forming of swaths between tines turning to the front (B): decrease the speed



Note

With occurring pile formation during raking the travelling speed must be reduced.

Settings

12

Settings



WARNING!

If the basic safety instructions are not followed, people may be seriously injured or killed.

- To avoid accidents, the basic safety instructions in the chapter Safety must have been read and followed, see chapter Safety "Basic safety instructions".



WARNING!

If the safety routines are not adhered to, people may be seriously injured or killed.

- To avoid accidents, the safety routines in the chapter Safety must be read and followed, see chapter Safety "Safety routines".



WARNING! - Working in the area of the rotor tines!

Injuries to eyes due to rotors tines.

- Wear protective goggles when working in the vicinity of the rotor tines.

12.1
Spreading angle setting of the rotors

Note

- The setting of the spreading angle of the rotor tines must be adapted to the conditions of the surface and the material
- It takes place on the running wheels of the machine

Prerequisite:

- The machine is in the working position with slightly raised rotor bars (<20 cm) and the stop cocks are closed.

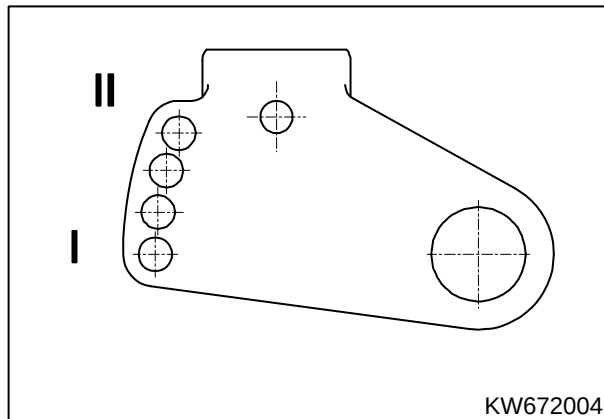


Fig. 26


Note

- The setting of the spreading angle of the rotor tines must be adapted to the conditions of the surface and the material
- It takes place on the running wheels of the machine

Taken as a basis for the spreading angle setting:
Flattest spreading angle II:

- big scattering width
- short crop
- wide lying crop
- forage less than 40% moisture content

Steepest spreading angle I:

- high discharge distance
- long crop
- better spreading effect with swaths
- wilted silage
- forage more than 40% moisture content

Settings

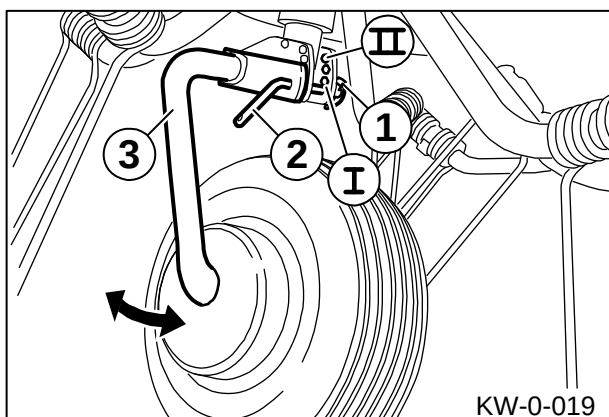


Fig. 27

Setting:

1. Remove cotter pin (1) and pull out bolt (2)
2. Bring wheel support (3) into chosen position between position I and position II
3. Push bolt in again and secure it with the cotter pin

Bolt in direction I = steep spreading angle
Bolt in direction II = flat spreading angle

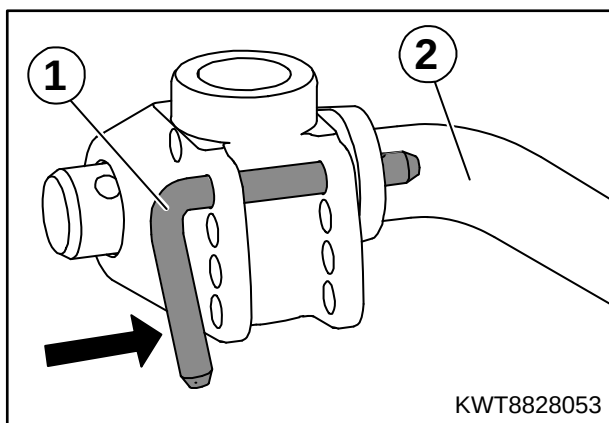


Fig. 28



Note

The outer bolt (1) must always be inserted from the axle block towards the wheel arm (2).

12.2

Spread limiter

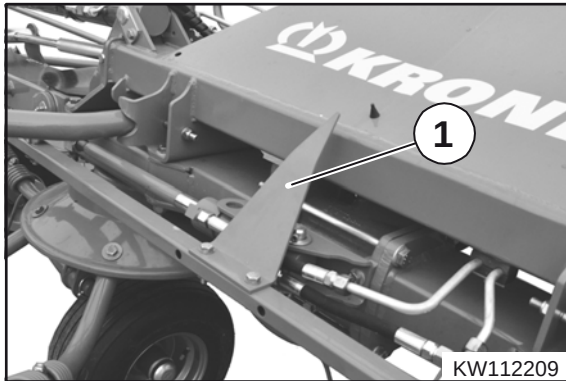


Fig. 29

- Activate the double action control valve on the tractor to adjust the border spreading system.

The pointer (1) shows the setting of the chassis running wheels.



Note

To keep the load on the running wheels as low as possible, avoid cornering too tightly when spread limiter is set.

12.3

Stabiliser

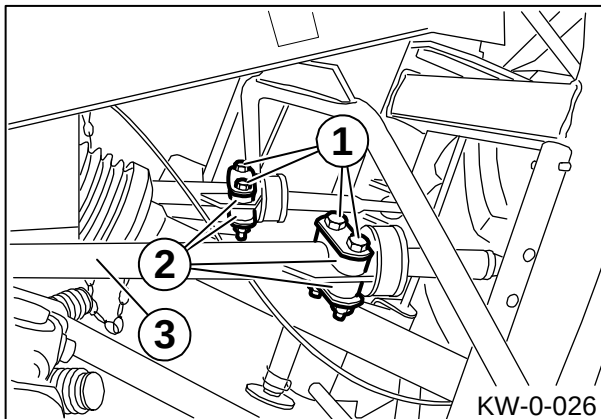


Fig. 30

Fish tailing of the machine on bumpy underground can happen to machines with large working width. This effect can be suppressed by a stronger pre-tensioning of the stabilisers.

Pre-tensioning the stabilisers:

- Tighten the screws (1) of the friction plates (2) on the tubes of the stabilisers (3) more firmly



Note

Do not excessively pre-tension the friction plates so that the stabilisers do not block!

Settings

12.4 Setting of tines

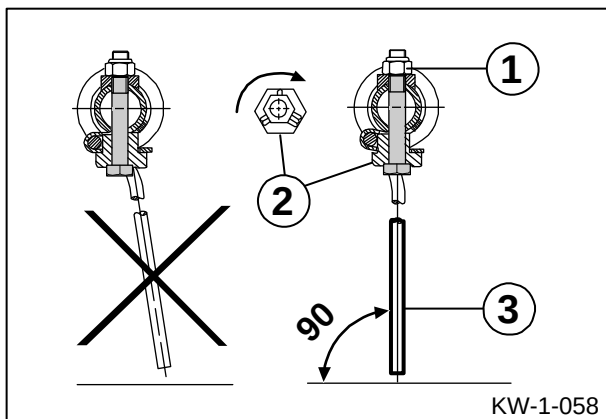


Fig. 31

The tines (3) must be aligned vertically to the surface. The setting of the tines can be changed by turning the eccentrics.

For setting:

- Unscrew fastening screw (1)
- Turn eccentrics (2) one level further
- Tighten the fastening screw to 95 Nm

12.5 Setting for the pendulum area of the bars

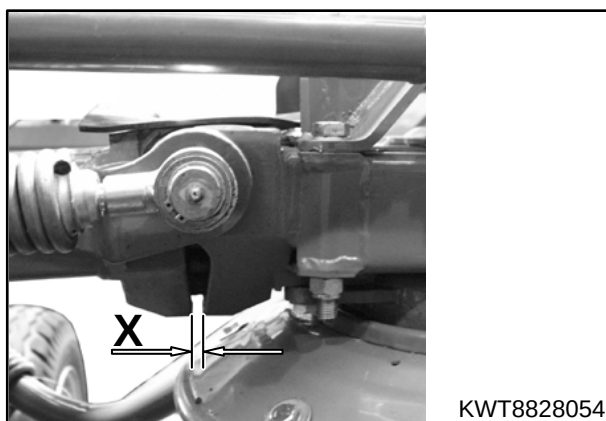


Fig. 32

The "X" dimension on the hinge points of the bar can be used to adjust the headland position of the rotor. The bars are pre-adjusted ex works to a dimension of "X= 8 mm".



Note

The smaller the dimension "X" on the hinge points of the bars, the greater the pendulum area of the bars downward.

12.5.1 Adjusting the bar hinge point inside to the intermediate bar

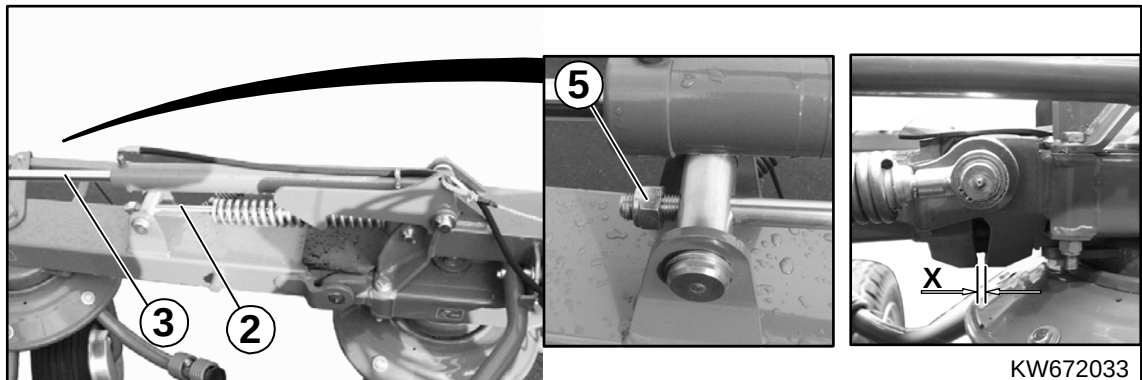


Fig. 33



Note

- Shorten linkage (2) => distance dimension "X" becomes greater => pendulum area of the bars is reduced
- Lengthen linkage (2) => dimension "X" becomes smaller => pendulum area between the bars is increased

- Lower the rotors
- Use the rear hydraulics to raise the machine and support it on the carrying bar

Release the tension on the linkage (2):

- Use the control valve on the tractor to draw in the piston rod of the hydraulic cylinder (3) somewhat
- Use the nut (5) to shorten or lengthen the linkage (2)



CAUTION! - distance dimension "X" undershot

Effect: Material damages

- Distance "X" must not be less than 1 mm

Settings

12.5.2 Exchanging the wheels

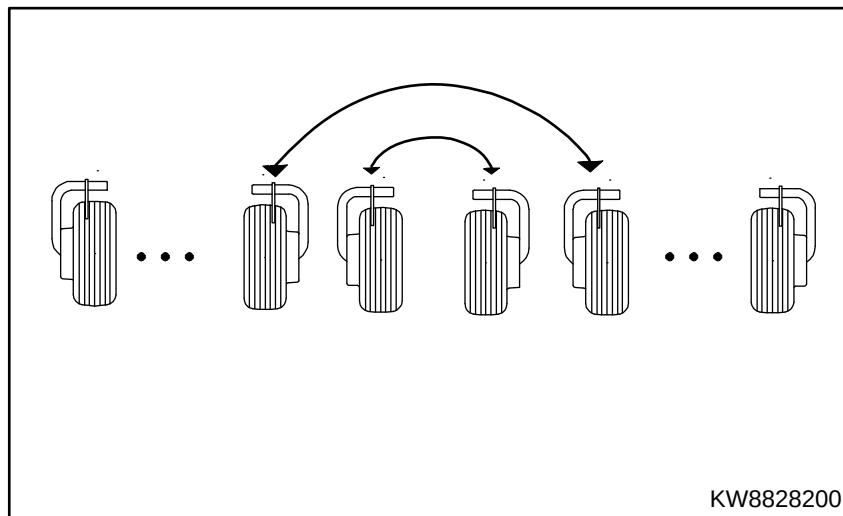


Fig. 34

If forage is deposited on the wheel arms, the inside wheels should be replaced as shown in the illustration.

13 Maintenance



WARNING!

If the basic safety instructions are not followed, people may be seriously injured or killed.

- To avoid accidents, the basic safety instructions in the chapter Safety must have been read and followed, see chapter Safety "Basic safety instructions".



WARNING!

If the safety routines are not adhered to, people may be seriously injured or killed.

- To avoid accidents, the safety routines in the chapter Safety must be read and followed, see chapter Safety "Safety routines".

13.1 Spare Parts



Warning! - Using non-approved spare parts.

Effect: Danger to life, serious injuries or loss of warranty claims as well as exclusion of liability

- Use only authentic KRONE spare parts and accessories authorised by the manufacturer. The use of spare parts, accessories or additional equipment not manufactured, tested or approved by KRONE will exclude any liability for consequential damage.



Note

To ensure problem-free operation of the machine and to reduce wear and tear, specific maintenance and upkeep intervals must be observed. These include cleaning, greasing, lubricating and oiling parts and components.

Maintenance

13.2 Maintenance table

Maintenance Work	Maintenance Interval					
	Once after 10 hours	Before the beginning of the season	Every 10 hours but at least 1x daily	Once after 50 hours	Every 50 hours	After 1000 ha
Rotor Gear						
Maintenance-free (permanently lubricated with grease)						
Main Gearbox						
Oil level check		X				
Oil change						X
Tyres						
Check tyres for cuts and breaks visually		X				
Check the tyre pressure	X	X			X	
Wheel nuts	X				X	
Tightening Screws / Nuts						
All screws	X	X			X	
Screws on the tines	X	X			X	

13.3 Deviating Tightening Torques M_A (Nm)



Note

For all other screw connections on the machine, refer to chapter Maintenance "Tightening Torques".

Screws/Nuts	M_A (Nm)
Tines (3)	95
U bar (1) on the guards	15
Control linkage (2)	20

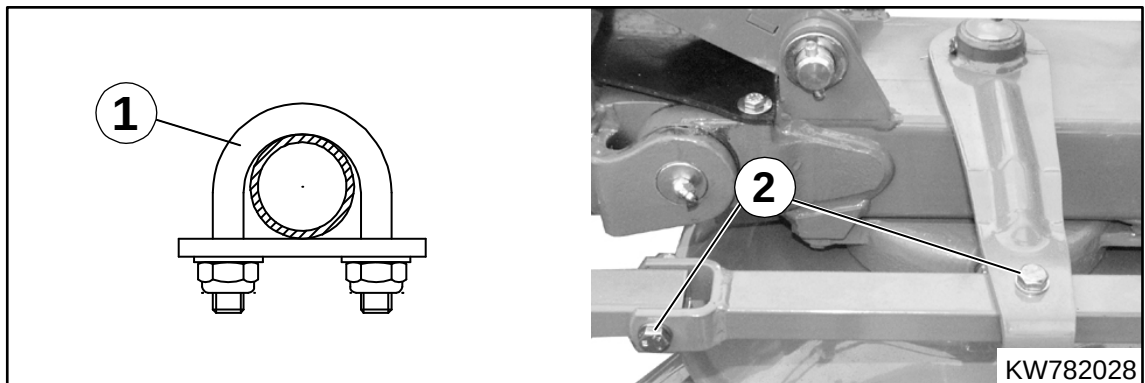


Fig. 35

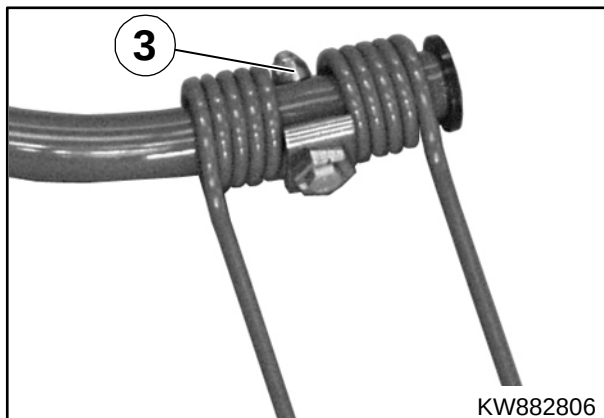


Fig. 36

Maintenance

13.4 Tightening torques

13.4.1 Metric Thread Screws with Control Thread



NOTICE


The table does not apply to countersunk screws with hexagonal socket in case the countersunk screw is tightened via hexagonal socket.

Tightening torque in Nm (unless otherwise stated)

A	Stability class			
	5.6	8.8	10.9	12.9
	Tightening torque (Nm)			
M4		3.0	4.4	5.1
M5		5.9	8.7	10
M6		10	15	18
M8		25	36	43
M10	29	49	72	84
M12	42	85	125	145
M14		135	200	235
M16		210	310	365
M20		425	610	710
M22		571	832	972
M24		730	1050	1220
M27		1100	1550	1800
M30		1450	2100	2450

A = thread size

(stability class can be seen on screw head)

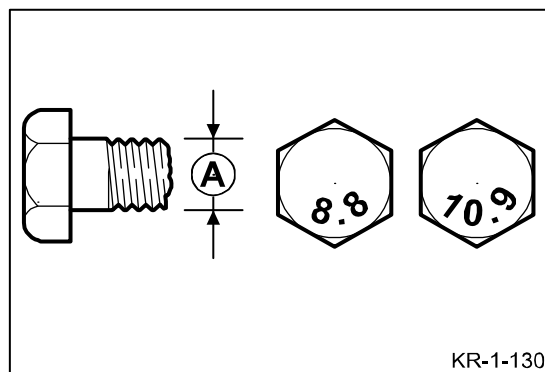


13.4.2 Metric Thread Screws with Fine Thread

Tightening torque in Nm (unless otherwise stated)

A	Stability class			
	5.6	8.8	10.9	12.9
	Tightening torque (Nm)			
M12 x 1.5:		88	130	152
M14 x 1.5		145	213	249
M16 x 1.5		222	327	382
M18 x 1.5		368	525	614
M20 x 1.5		465	662	775
M24 x 2		787	1121	1312
M27 x 2		1148	1635	1914
M30 x 1.5		800	2100	2650

A = thread size

(stability class can be seen on screw head)

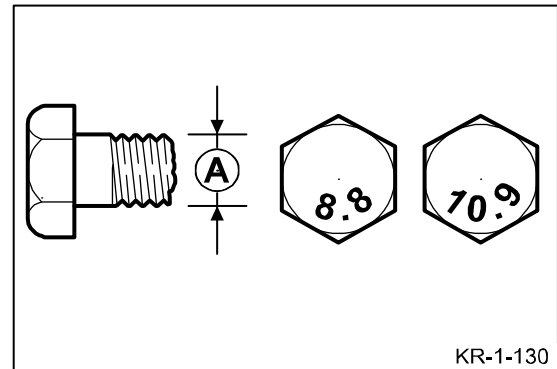
13.4.3 Metric Thread Screws with Countersunk Head and Hexagonal Socket

NOTICE


The table applies only to countersunk screws with hexagonal socket and metric thread which are tightened via hexagonal socket.

Tightening torque in Nm (unless otherwise stated)

A	Stability class			
	5.6	8.8	10.9	12.9
	Tightening torque (Nm)			
M4		2.5	3.5	4.1
M5		4.7	7	8
M6		8	12	15
M8		20	29	35
M10	23	39	58	67
M12	34	68	100	116
M14		108	160	188
M16		168	248	292
M20		340	488	568

A = thread size

(stability class can be seen on screw head)

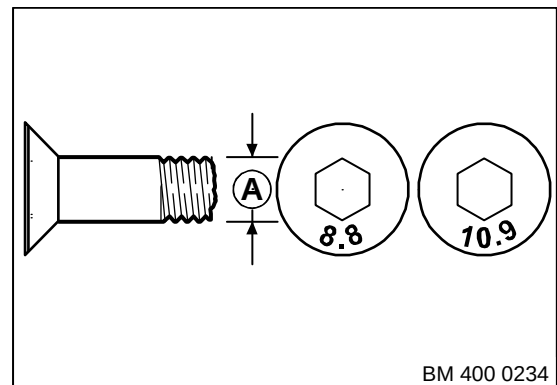

Maintenance – lubrication chart

14 Maintenance – lubrication chart

15 Maintenance – lubrication chart



WARNING!

If the basic safety instructions are not followed, people may be seriously injured or killed.

- To avoid accidents, the basic safety instructions in the chapter Safety must have been read and followed, see chapter Safety "Basic safety instructions".



WARNING!

If the safety routines are not adhered to, people may be seriously injured or killed.

- To avoid accidents, the safety routines in the chapter Safety must be read and followed, see chapter Safety "Safety routines".

Prerequisite:

- The machine is in the working position, see "Moving the machine into the working position" in the Operation chapter.
- Shut down and safeguard the machine, see chapter Safety -> Safety routines, "Shutting down and safeguarding the machine".

15.1 Lubrication Points on the Universal Shafts

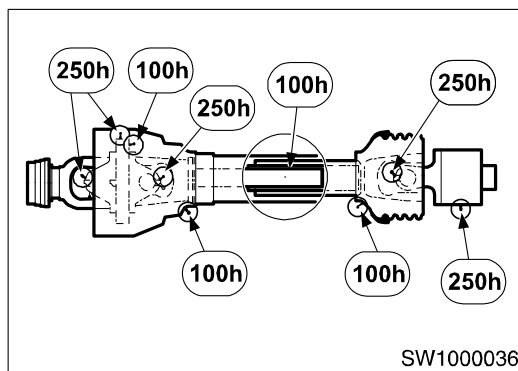


Figure 37

Lubricate the PTO shafts at the intervals indicated in the drawing with a multi-purpose grease. Follow the operating instructions of the PTO shaft manufacturer.



15.2

Lubrication Chart



Note

To make the illustration easier to read, the greasing points have only been shown on one side of the machine. The greasing same points are present on the other side of the machine (mirror-image).

Maintenance – lubrication chart

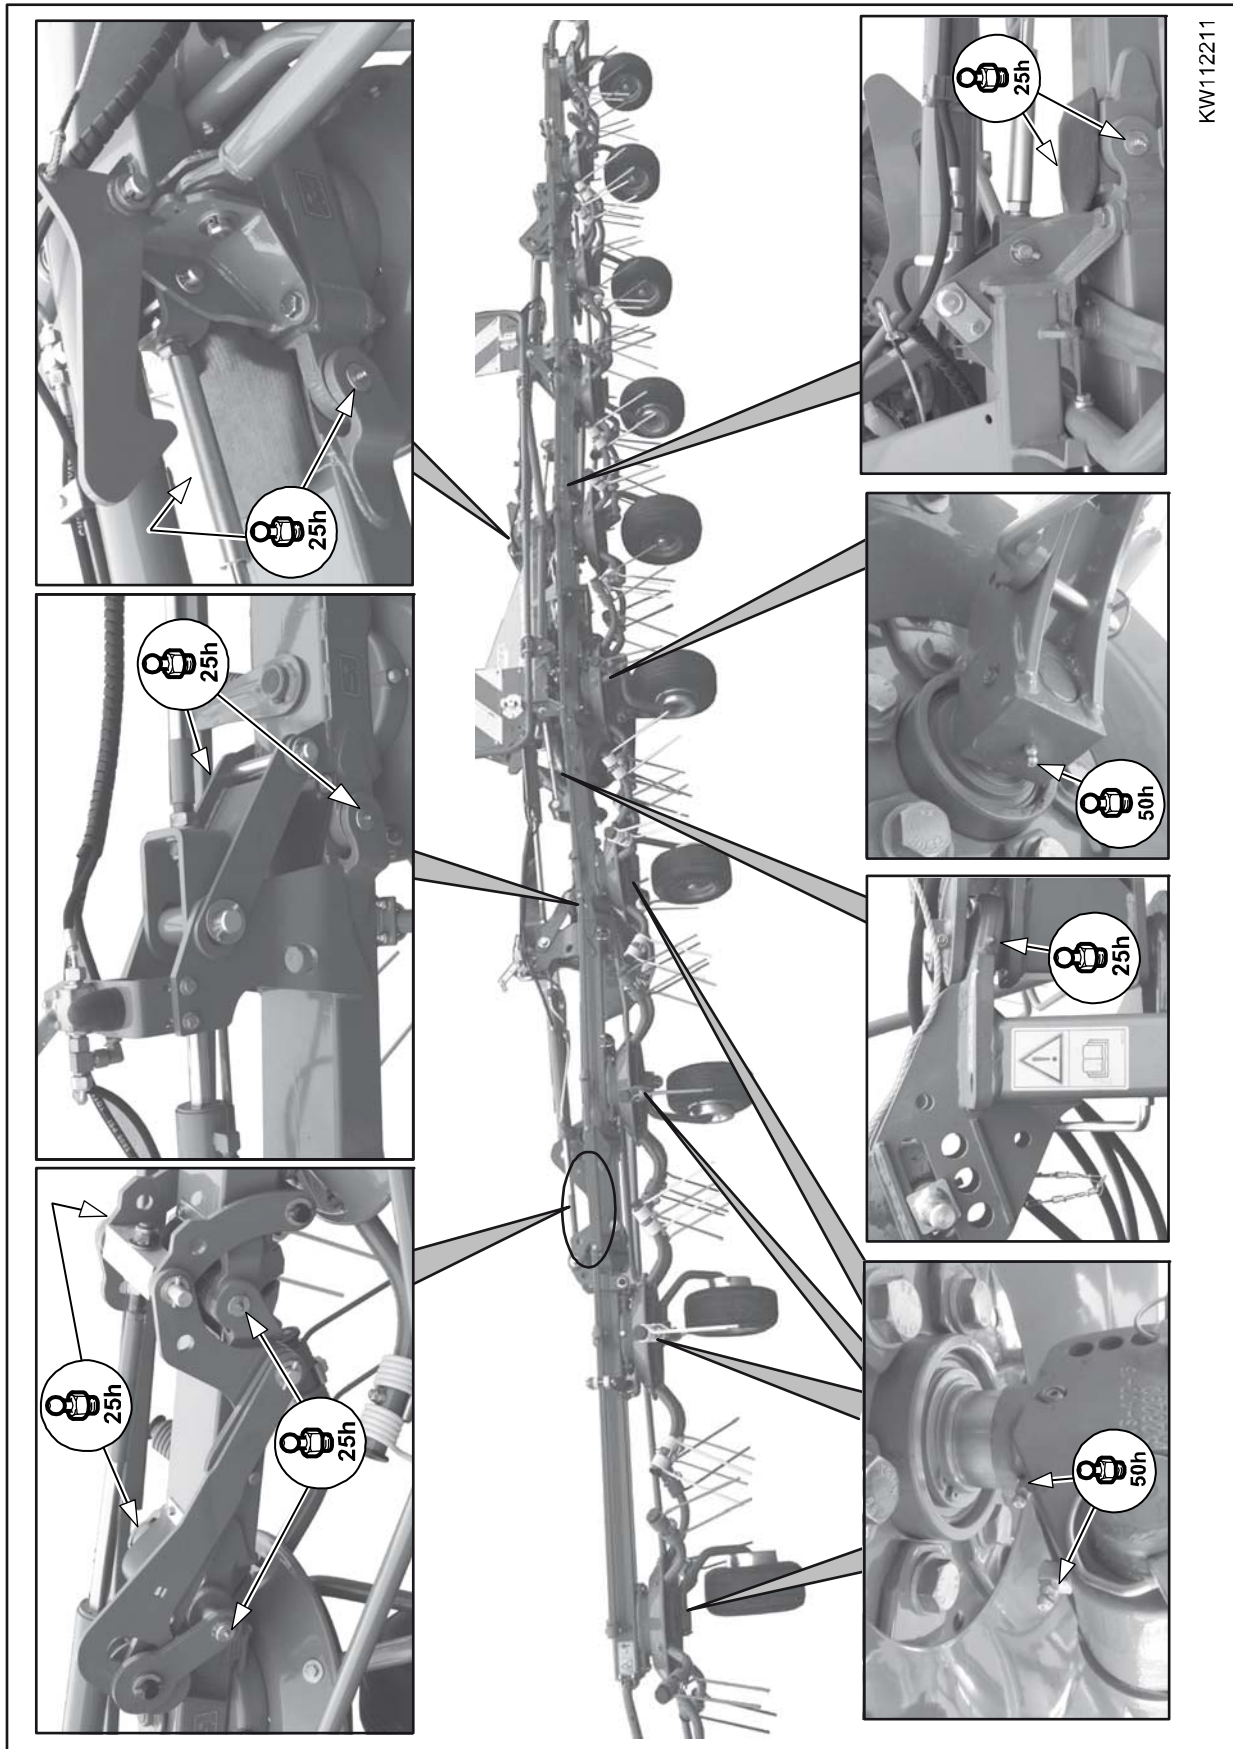


Fig. 38

16

Maintenance - hydraulic system



WARNING!

Risk of injury as a result of incorrect handling of liquids under high pressure.

Effect: Escaping high-pressure liquids can penetrate the skin and cause serious injury.

Repair work on the hydraulic system may only be performed by authorised KRONE professional workshops.

- Depressurise the system before disconnecting lines.
- When searching for leaks, use suitable aids and wear protective goggles.
- High-pressure liquid that is escaping from a small opening is virtually invisible. Therefore, you should use a piece of cardboard or something similar when searching for leaks. Protect your hands and body.
- If liquid penetrates the skin, consult a doctor immediately. The liquid must be removed from the body as quickly as possible. Danger of infection! Physicians who are not familiar with this area must consult appropriate information from a competent medical source.
- Check hydraulic hoses regularly and replace if there are any signs of damage or ageing! The replacement lines must comply with the requirements of the device manufacturer.
- Ensure that all line connections are tight before the pressure in the system builds up again.



WARNING! – Hydraulic hose lines are subject to ageing

Effect: Danger to life or serious injuries

The characteristics of the lines change depending on pressure, heat load and the effect of UV rays.

The date of manufacture appears on the hydraulic hoses. This way the age can be ascertained quickly.

By law the hydraulic lines must be replaced after six years.

Use original spare parts when replacing hydraulic hoses!

Maintenance - hydraulic system

16.1.1 Hydraulic circuit diagram

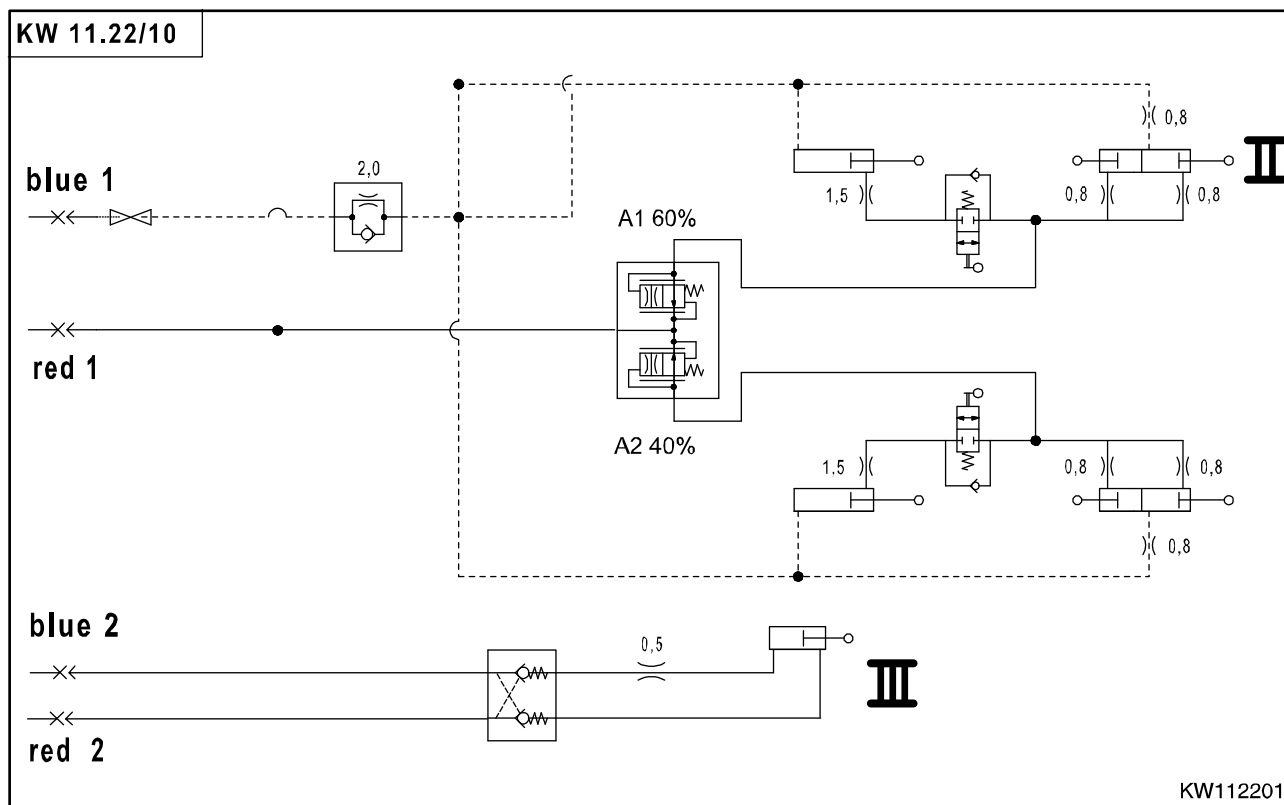


Fig. 39

- I Hydraulic cylinder for chassis
- I Hydraulic cylinder for external rotors
- III Hydraulic cylinder for border spreading system

17 Maintenance - Gearbox



WARNING!

If the basic safety instructions are not followed, people may be seriously injured or killed.

- To avoid accidents, the basic safety instructions in the chapter Safety must have been read and followed, see chapter Safety "Basic safety instructions".



WARNING!

If the safety routines are not adhered to, people may be seriously injured or killed.

- To avoid accidents, the safety routines in the chapter Safety must be read and followed, see chapter Safety "Safety routines".

Interval for oil level check and oil change: refer to chapter Maintenance "Maintenance Table"

Oil quality / quantity: see "Consumables" in the Description of the machine section.

Used oil disposal: see chapter Safety "Consumables"

Prerequisite:

- The machine is in the working position, see "Moving the machine into the working position" in the Operation chapter.
- Prepare the machine for servicing, repair, maintenance and adjustment work, see section Safety -> Safety routines "Preparing the machine for servicing, repair, maintenance and adjustment work".

Maintenance - Gearbox

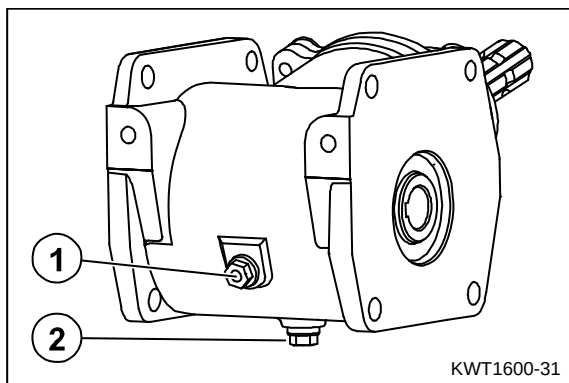


Fig. 40

1) Inspection screw

2) Oil drain plug

Oil level check:

- Screw out inspection screw.
- Oil level up to control hole.

If the oil reaches the control hole:

- Screw in the inspection screw and tighten it securely.

If the oil does not reach the control hole:

- Top up oil via control hole until the control hole is reached.
- Screw in the inspection screw and tighten it securely.

Oil change:

Collect escaping oil in a suitable container.

- Screw out oil drain plug and drain the oil.
- Screw out inspection screw.
- Screw in oil drain plug and tighten it securely.
- Top up new oil via control hole until the control hole is reached.
- Screw in the inspection screw and tighten it securely.

18 Special equipment



WARNING!

When performing repair, maintenance or cleaning work on the machine, or in case of technical intervention, drive elements may start moving. Thus there is a risk of serious injuries or death.

- Switch off tractor engine, remove the ignition key and carry it with you.
- Secure the tractor against accidental start-up and against rolling.
- Wait until all machine parts have come to a complete stop and have been cooled down completely.

18.1 Tine loss safeguard

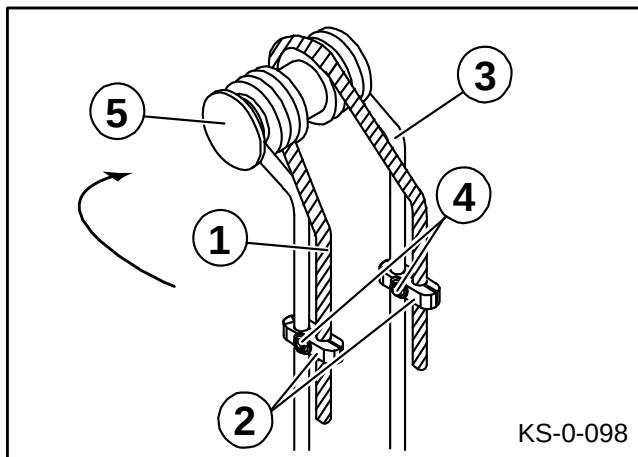


Figure 41

Mounting the tine loss safeguard

The tine loss safeguard for the double coil spring tines consists of:

- a cable
- two cable clamps
- two coach bolts, washers and lock nuts each

Secure the cable (1) with the cable clamps (2) onto the rotor tines (3).



Note

The cable must be located behind the rotor tine in relation to the direction of rotation. The nuts (4) of the cable clamps must face outwards.

Spare tine loss safeguards Order No. : 153 479 0

Special equipment

18.2 Jockey wheel front

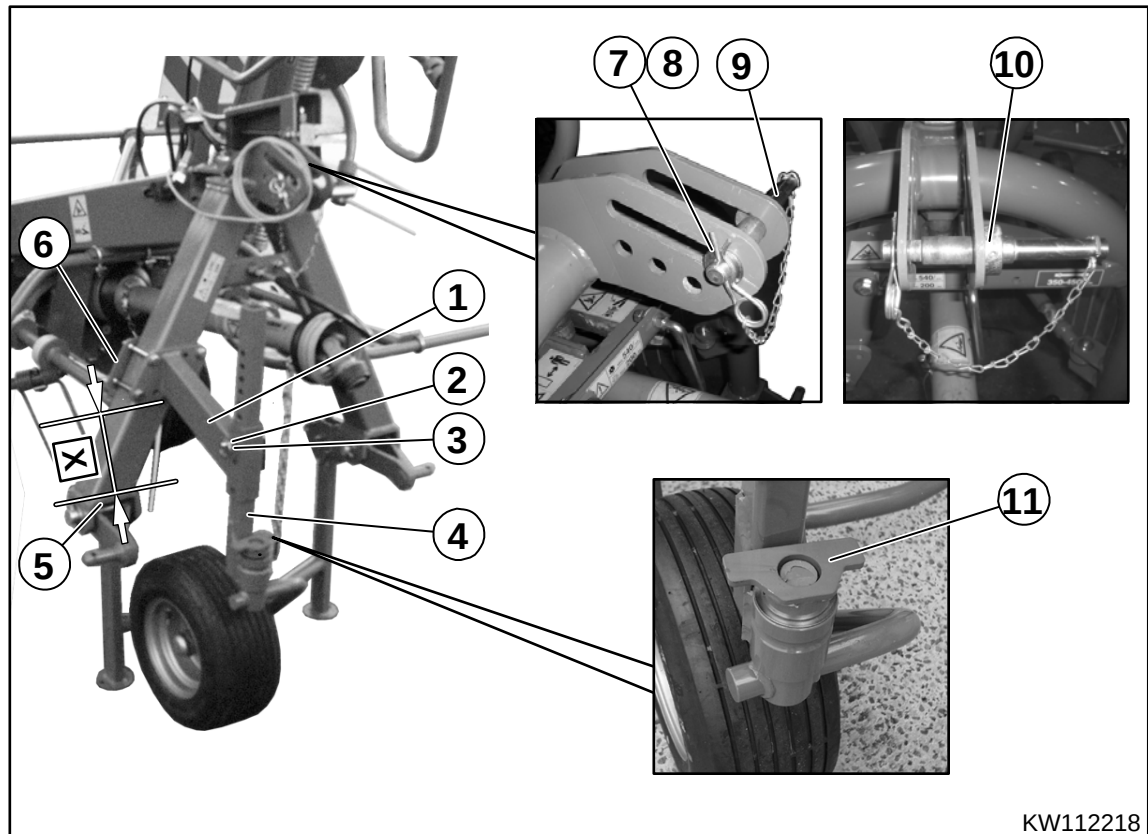


Fig. 42

Mounting guide wheel

- Always insert the guide wheel (4) so that it is **trailing**.
- Mount guide wheel support (1) with flange plate (6), screws, discs and nuts on the three-point hitch. Make sure that the distance between flange plate and plate for stabilization tubes (5) is **X = 140 mm**.



Note

Check the position of the stop (11) before assembling the guide wheel.
The stop must be positioned as in the figure, turn stop, if necessary.

- Insert guide wheel (4) into guide wheel support (1) and secure with bolt (2) and spring cotter pin (3).
- Mount clamping ring (10) so that the bolt (9) can be mounted with disc (7) and spring cotter pin (8). Secure clamping ring (10) with threaded pin.
- Mount top link with bolt (9) in the oblong hole of the top link plates and secure with disc (7) and spring cotter pin (8).



Adjusting the working height

- In order to set the working height, replug the guide wheel (4) in the guide wheel support (1).



Note

The bolt on the top suspension arm must be located in the centre of the oblong hole in the upper link plates.



CAUTION! - Road transport with movable top link

Effect: Machine damages

- Always use the rigid top link during road transport. The assembly is carried out as described above.



CAUTION! – Machine is parked on jockey wheel

Effect: Machine damages

- Never park the machine on the jockey wheel. Always use the front parking support to lower the machine



DANGER! – The machine may tip over!

Effect: Danger to life, serious injuries or serious damage to the machine.

- When in the transport position, the machine must always be placed on the parking support. Otherwise, its stability cannot be guaranteed.



Warning! - Do not drive in reverse when using the machine for work.

Effect: Damage to the machine.

The machine is designed to travel forwards. Never reverse while the machine is in operation and in working position. Lift the machine first.

Special equipment

18.3 Night Raking Gearbox

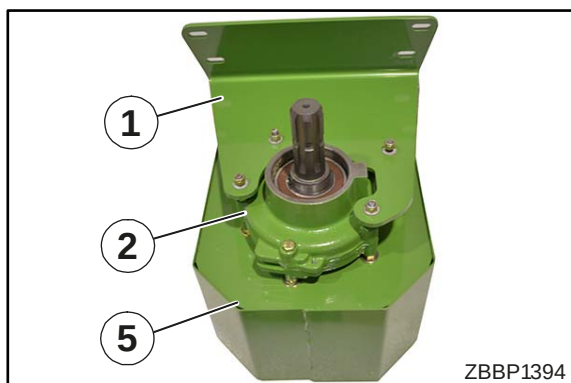


Fig. 43

- Mount the support (1) on the night raking gearbox (2).
Make certain the correct support is used; refer to Machine Overview in chapter “Scope of the Accessories Kit”.
- Mount the universal shaft guard (5) on the night raking gearbox (2).

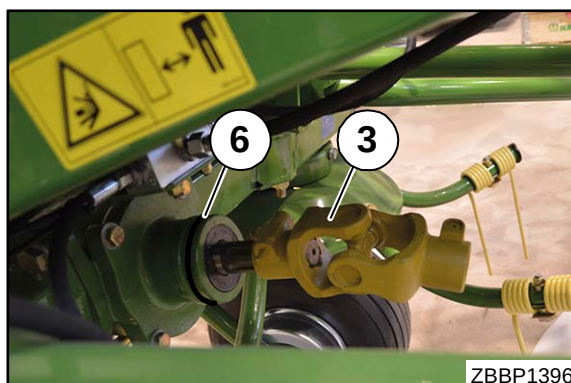


Fig. 44

- Mount O-ring seal (6).
- Slide the universal joint (3) until the fuse engages.

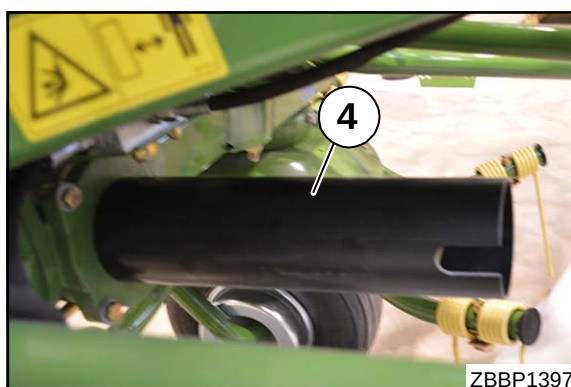


Fig. 45

- Slide on the tube (4).

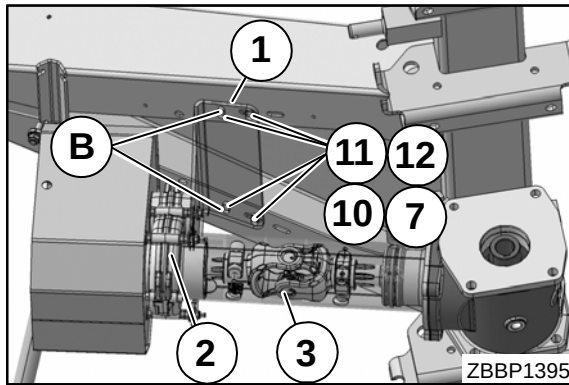


Fig. 46

- Drill two bore holes (B), Ø 12 mm, into the carrying bar.
- Slide the night raking gearbox (2) into the universal joint (3) until the fuse engages.
- Mount support (1) with coach bolts (10), links (7), discs (11) and locknuts (12).

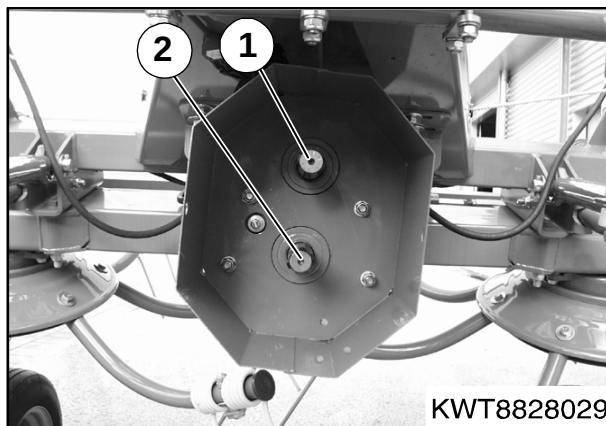


Fig. 47

- The lower P.T.O. shaft end (2) is designed for spreading or tedding
- To lay night swaths, push the universal shaft onto the P.T.O. shaft end (1)



CAUTION! – Free P.T.O. shaft end without protective cap!

Effect: Soiling of the P.T.O. shaft end, machine damages.

- The free P.T.O. shaft end must always be equipped with a protective cap

Special equipment

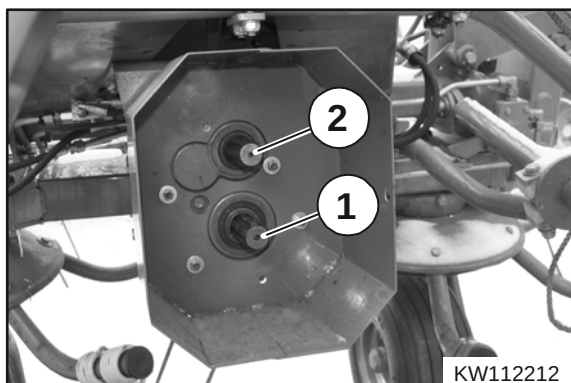


Fig. 48

- The lower P.T.O. shaft end (2) is designed for spreading or tedding
- To lay night swaths, push the universal shaft onto the P.T.O. shaft end (1)



CAUTION! – Free P.T.O. shaft end without protective cap!

Effect: Soiling of the P.T.O. shaft end, machine damages.

- The free P.T.O. shaft end must always be equipped with a protective cap
-



Note

Before lifting the machine, switch off the cardan shaft to prevent material damage!

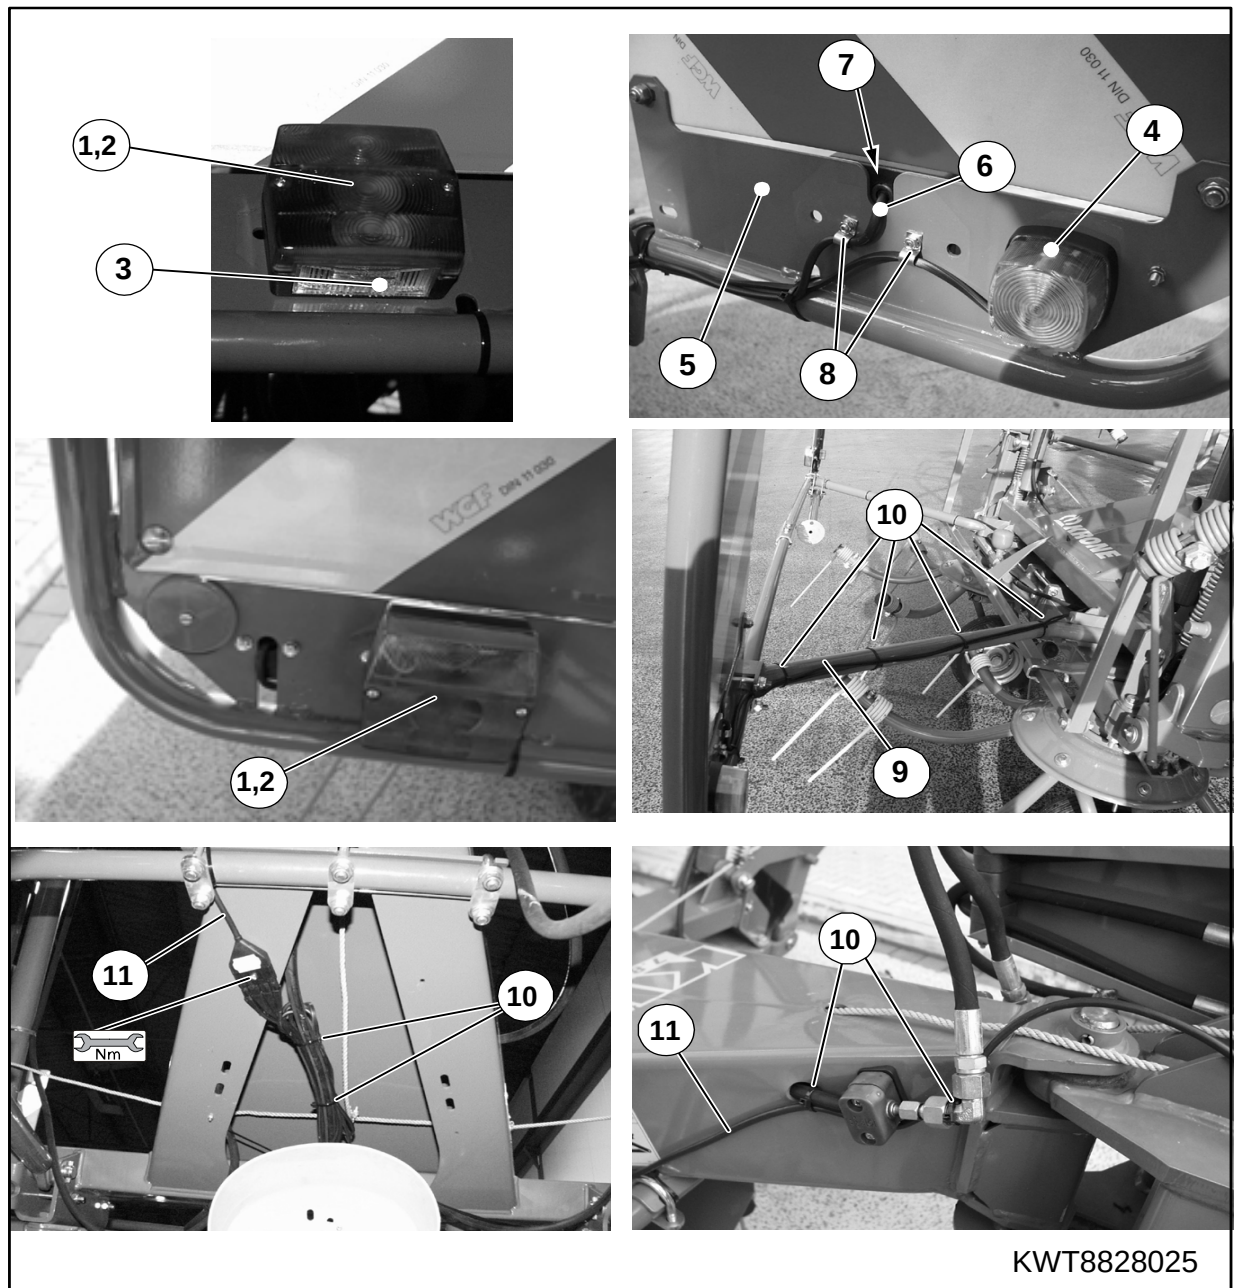
18.4 Installation of the lighting system


Fig. 49

Special equipment



Note

The following feature distinguishes the left and right three-chamber lights (1,2):

- The left three-chamber light has a white (transparent) cover (3)
 - The right three-chamber light has a black cover (3)
-
- Attach the side lights (4) to the warning panel supports (5) (right and left side of the machine)
 - Lead the electrical cable (6) for the three-chamber light (1,2) from behind through the slot (7) in the warning panel support (5) (right and left side of the machine)
 - Mount the three-chamber light (1,2) onto the warning panel support (5)
 - Fasten the electrical cable of the three-chamber light and clearance lamp onto the warning panel support (5) with the cable clips (8)
 - Neatly lay the electrical cables for the lighting system along the protective frame (9) up to below the carrying bar and fasten it in place with cable ties (10)
 - Connect the electrical cable for the lighting system under the carrying bar with the intermediate cable (11)
 - Screw the intermediate cable (11) onto the carrying bar
 - Lay the intermediate cable (11) up to the three-point block and fasten it with cable ties (10)
 - Check functionality of the lighting

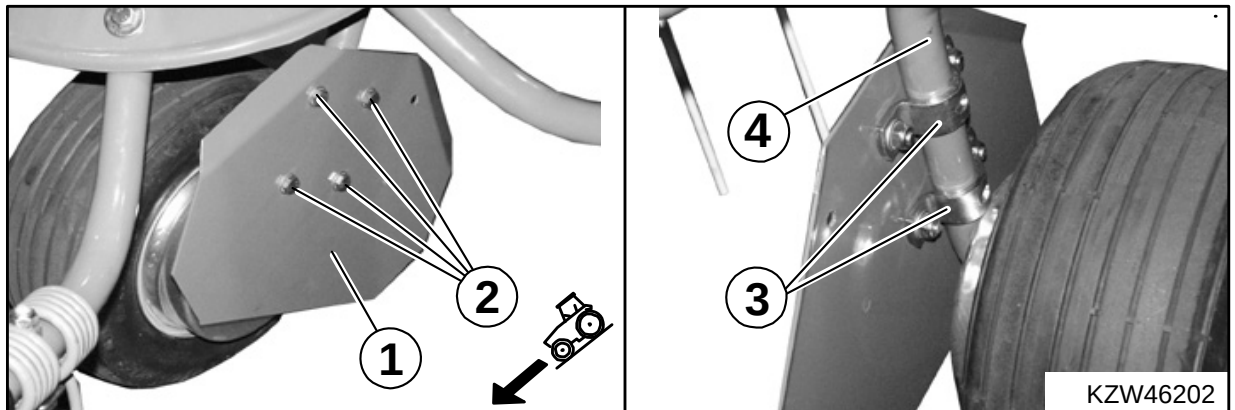
18.5 Anti-wrap guard plate tyres


Fig. 50

Mounting anti-wrap guard sheet (1):

- Do not mount the anti-wrap guard sheets on the outer four wheels.
- Fix the anti-wrap guard sheet (1) with clamps (3), screws (2), nuts and discs on the wheel arms (4).

Number of anti-wrap guard sheets:

Type	Number
KW 11.22/10	6

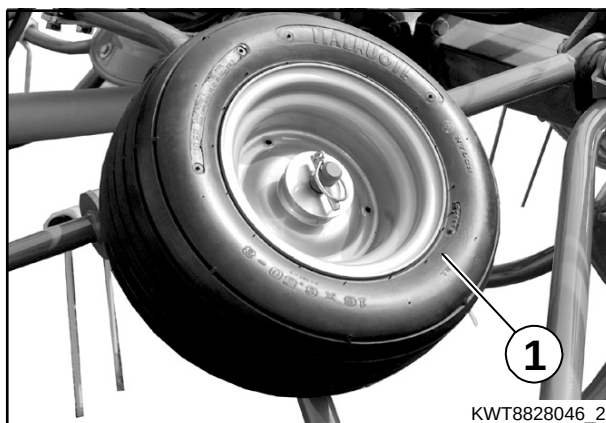
18.6 Spare wheel with support


Fig. 51

The spare wheel (1) can be installed at different points on the machine with the supplied support.

The spare wheel is deliverable in tyre sizes:

16/6.50 - 8

18/8.50 - 8

Special equipment

18.7 Mounting Longer Lower Suspension Arms



Note

Longer lower suspension arms (3) are needed when the tractor is equipped with wide tyres or short lower suspension arms.

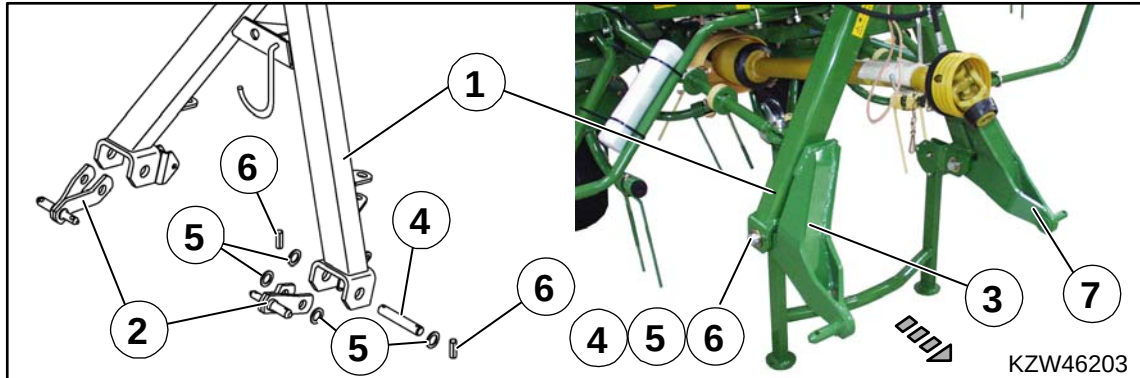


Fig. 52

1. Remove the standard lower suspension arm (2) from the three-point block (1) (right/left):
 - Drive the two clamping sleeves (6) out of the bolt (4) and remove the bolt (4).
 - Remove the standard lower suspension arm (2) and all the washers (5).



Note

Keep the standard lower suspension arms for possible reuse.

1. Mount the longer lower suspension arms (3) and (7) (right/left) on the three-point block (1):
 - Fasten the lower suspension arm (3) onto the right side of the three-point block (1) with bolts (4) and washers (5).
 - Fasten the lower suspension arm (7) onto the left side of the three-point block (1) with bolts (4) and washers (5).
 - Secure each bolt (4) with two clamping sleeves (6).

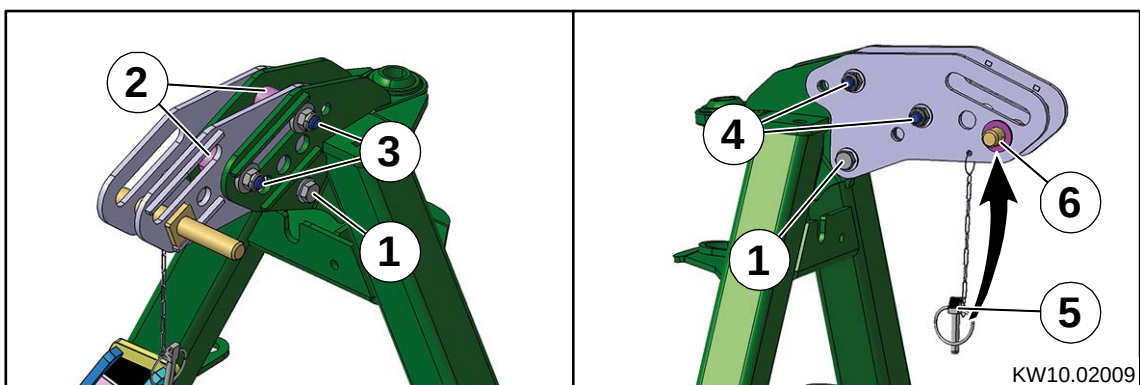


Fig. 53

- Mount top link plate and plate right using hexagon head screws, detent edged washers and locknuts (1).
- Mount threaded bolts (2).
- Secure threaded bolts in direction of travel left using detent edged washer and hexagonal nut (3) and in direction of travel right using disc and hexagonal nut (4).
- Mount knotted-link chain with linch pin (5) on top link.
- Slide top link bolt (6) through the plates and secure with disc and linch pin.

19 Placing in Storage

19.1 Special Safety Instructions



WARNING! - When performing repair, maintenance or cleaning work on the machine, or in the case of technical intervention, drive elements may start moving.

Effect: Danger to life, injuries or damage to the machine.

- Switch off engine, remove the ignition key and carry it with you.
- Secure machine and tractor against rolling.
- Turn off PTO shaft.
- After the repair, maintenance, cleaning work or technical modifications are completed, mount all protective covers and safety devices properly again.
- Avoid skin contact with oils, greases, cleaning agents and solvents.
- In the event of injuries or burns due to oils, cleaning agents or solvents, contact a physician immediately.
- All other safety instructions must also be followed to avoid injuries and accidents.

Placing in Storage

19.2 At the End of the Harvest Season

Before placing the machine in winter storage, clean the outside thoroughly. If you use a high-pressure cleaner to do this Do not keep a stream of water directed at bearing points. After cleaning is completed, lubricate all lubrication points. Do not wipe off any grease that comes out of bearing points. The hardened grease will provide additional protection against moisture.

Check all movable components such as deflector rollers, joints, tension rollers, etc. to make certain they move easily. If necessary remove, clean, grease and remount. If necessary, replace with new parts.

Use only original KRONE replacement parts.

Disassemble the PTO shaft. Lubricate the inner tubes and the guard tube with grease. Grease the lubrication points on the cross joint and grease the bearing rings of the guard tube.

Repair places with damaged paint and preserve all bare metal places thoroughly with rust protection agent.

Park the machine in a dry location, but not in the vicinity of artificial fertilisers or livestock buildings. Repair places with damaged paint and preserve all bare metal places thoroughly with rust protection agent.



Caution!

The machine should only be placed on blocks with a suitable vehicle lifting device. Make certain that the machine is stable and safe when it is on blocks.

To provide relief for the tyres, set the machine on blocks. Protect the tyres against external influences such as oil, grease, direct sunlight , etc.

Perform the necessary repair tasks during the time immediately after the harvest season. Draw up a list of all replacement parts you will need. This will make it easier for your KRONE dealer to process your orders and you will be certain that your machine will be ready for use at the beginning of the next season.



19.3 Before the Start of the New Season

19.4 Special Safety Instructions



WARNING! - When performing repair, maintenance or cleaning work on the machine, or in the case of technical intervention, drive elements may start moving.

Effect: Danger to life, injuries or damage to the machine.

- Switch off engine, remove the ignition key and carry it with you.
 - Secure machine and tractor against rolling.
 - Turn off PTO shaft.
 - After the repair, maintenance, cleaning work or technical modifications are completed, mount all protective covers and safety devices properly again.
 - Avoid skin contact with oils, greases, cleaning agents and solvents.
 - In the event of injuries or burns due to oils, cleaning agents or solvents, contact a physician immediately.
 - All other safety instructions must also be followed to avoid injuries and accidents.
-
- Before the beginning of the season check the settings of the transport interlocks on the right and left and adjust if necessary (see "Setting of Transport Interlocks" in the Settings section).
 - Lubricate the machine thoroughly. Remove any condensation water which may have collected in the bearings.
 - Check oil level in the gearbox(es) and top up if necessary.
 - Check hydraulic hoses and lines for leaks and replace them where necessary.
 - Check the air pressure in the tyres and refill if necessary.
 - Check all screws to make certain they are tight or retighten them if necessary.
 - Check all electrical connection cables and the lighting. Repair or replace it if necessary.
 - Check all settings on the machine and correct if necessary.
 - Re-read the operating instructions thoroughly.



Note

Use vegetable oils and greases.

Disposal of the machine

20 Disposal of the machine

20.1 Disposal of the machine

After the service life of the machine has expired, the individual components of the machine must be disposed of properly. The applicable country-specific, current waste disposal guidelines and the legal laws must be observed.

Metal parts

All metal parts must be brought to a metal recycling centre.

The components must be freed from operating fluids and lubricants (gear oil, oil from hydraulic system, ...) before being scrapped.

The operating fluids and lubricants must be brought separately to an environmentally friendly disposal point or recycling centre.

Operating fluids and lubricants

Operating fluids and lubricants (diesel fuel, coolant, gear oil, oil from hydraulic system, ...) must be brought to a disposal point for waste oil.

Synthetic materials

All synthetic materials must be brought to a recycling centre for synthetic materials.

Rubber

Rubber parts (hoses, tyres, ...) must be brought to a rubber recycling centre.

Electronic scrap

Electronic parts must be brought to a disposal point for electronic scrap.



21 Index

A

Additional equipment and spare parts	11
Adjusting the bar hinge point inside to the intermediate bar	59
Adjusting the lower suspension arms	38
Affixing the Adhesive Safety and Information Labels	26
Anti-wrap guard plate tyres	81
At the End of the Harvest Season	84

B

Basic safety instructions	9
Before the Start of the New Season	85
Behaviour in hazardous situations and when accidents occur	19

C

Children in danger	10
Commissioning	34
Connect the machine to the tractor	36, 39
Connecting the hydraulic lines	42
Consumables	16, 32
Contact	26, 28
Control and Display Elements	33
Coupling the machine safely	21

D

Danger zones	13
Dangers associated with certain activities	
Work on the machine	18
Working on wheels and tyres	19
Deviating torque	63
Direction Information	7
Disposal of the machine	86
Driving and Transport	43

E

Exchanging the wheels	60
-----------------------------	----

F

Filling Quantities and Lubrication Designations for Gearboxes	32
First installation	34

H

Hydraulic circuit diagram	70
---------------------------------	----

I

Identification Plate	28
Identifying Symbols in the Operating Instructions	7
Importance of the operating instructions	9

Information Required for Questions and Orders	28
Install the PTO shaft	40
Installation of the lighting system	79
Intended use	9

J

Jockey wheel front	74
--------------------------	----

K

Keeping safety devices functional	15
---	----

L

Lubrication Chart	67
Lubrication Points on the Universal Shafts	66

M

Machine overview	27
Maintenance	61
Maintenance - hydraulic system	69
Maintenance – lubrication chart	66
Maintenance table	62
Means of representation	8
Metric Thread Screws with Control Thread	64
Metric Thread Screws with Countersunk Head and Hexagonal Socket	65
Metric Thread Screws with Fine Thread	65
Mounting Longer Lower Suspension Arms	82

N

Night Raking Gearbox	76
----------------------------	----

O

Operation	48
Operational safety: Technically perfect condition	11
Overload protection	29, 35

P

Parking support front	46
Parking support rear	46
Parking the machine safely	16
Personal protective equipment	15
Personnel qualification	10
Placing in Storage	83
Position and meaning of the safety stickers on the machine	24
Preparations for road travel	44
Preparing the machine for repair, maintenance and adjustment work	22
PTO shaft	36
Purpose of Use	9



R	
Raking.....	53
Reducing transport width.....	45
Removing the preserving wax from the tines	35
Re-Ordering the Adhesive Safety and Information Labels	26
S	
Safety.....	9
Safety routines.....	20
Safety signs on the machine	15
Safety stickers on the machine.....	24
Service life of the machine	9
Setting for the pendulum area of the bars	58
Setting of the tines.....	58
Settings.....	54
Sources of danger on the machine.....	17
Spare Parts.....	61
Spare wheel with support	81
Special equipment	73
Spread limiter.....	57
Spreading angle setting of the rotors.....	55
Stabiliser	57
Starting the machine safely	22
Start-up	37
Stopping and securing the machine	20
Structural changes to the machine	10
Supporting lifted machine and machine parts securely.....	20
Switching off the machine	46
T	
Target setting for quick drying	53
Technical data.....	30
Technical Data of the Machine	30
Tightening torques	64
Tine loss safeguard.....	73
Torque table.....	35
Traffic safety	16
Transport position	52
Travelling on an incline	45
Tyres	32
U	
Uncoupling the machine safely.....	21
Using the Machine for Work	53
V	
Validity	7
W	
Wide spreading (tedding).....	53
Working height of the tine rotors.....	51
Working position	49
Workstations and passengers	11



THE POWER OF GREEN

Maschinenfabrik Bernard Krone GmbH

Heinrich-Krone-Straße 10, D-48480 Spelle
Postfach 11 63, D-48478 Spelle

Phone +49 (0) 59 77/935-0
Fax +49 (0) 59 77/935-339
Internet: <http://www.krone.de>
eMail: info.ldm@krone.de