



INSTALLATION INSTRUCTIONS

JACOBSEN® *AR3 / TR3 - Work Lamp Kit LMAC163*

For:

Series: EK - Engine type: Kubota D1105-TE

Product code: AR30001

Series: EJ - Engine type: Kubota D1105-E

Product code: TR30001



WARNING: If incorrectly used this machine can cause severe injury. Those who use and maintain this machine should be trained in its proper use, warned of its dangers and should read the entire manual before attempting to set up, operate, adjust or service the machine.



English



	CONTENTS	PAGE
1	CONTENTS	1
2	SAFETY INSTRUCTIONS	2 - 3
2.1	OPERATING INSTRUCTIONS	2
2.2	SAFETY SIGNS	2
2.3	STARTING THE ENGINE	2
2.4	DRIVING THE MACHINE	2
2.5	TRANSPORTING	2
2.6	LEAVING THE DRIVING POSITION	2
2.7	SLOPES	2
2.8	BLOCKED CUTTING CYLINDERS	3
2.9	ADJUSTMENTS, LUBRICATION & MAINTENANCE	3
3	INSTALLATION INSTRUCTIONS	4
4	APPENDIX	6
5	PARTS LIST	8
6	NOTES	10



This safety symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of injury, carefully read the message that follows, and inform other operators.

2.1 OPERATING INSTRUCTIONS

- Ensure that the instructions in this book are read and fully understood.
- No person should be allowed to operate this machine unless they are fully acquainted with all the controls and the safety procedures.
- Never allow children or people unfamiliar with these instructions to use this machine. Local regulations may restrict the age of the operator.

2.2 SAFETY SIGNS

- It is essential all safety labels are kept legible, if they are missing or illegible they must be replaced. If any part of the machine is replaced and it originally carried a safety label, a new label must be affixed to the replacement part. New safety labels are obtainable from Ransomes dealers.

2.3 STARTING THE ENGINE

- Before starting the engine check that the brakes are applied, drives are in neutral, guards are in position and intact, and bystanders are clear of the machine.
- Do not run the engine in a building without adequate ventilation.

2.4 DRIVING THE MACHINE

- Before moving the machine, check to ensure that all parts are in good working order, paying particular attention to brakes, tyres, steering and the security of cutting blades.
- Replace faulty silencers, mow only in daylight or good artificial light
- Always observe the Highway Code both on and off the roads. Keep alert and aware at all times. Watch out for traffic when crossing or near roadways.
- Stop the blades rotating before crossing surfaces other than grass.
- Remember that some people are deaf or blind and that children and animals can be unpredictable.
- Keep travelling speeds low enough for an emergency stop to be effective and safe at

- all times, in any conditions.
- Remove or avoid obstructions in the area to be cut, thus reducing the possibility of injury to yourself and/or bystanders.
- When reversing, take special care to ensure that the area behind is clear of obstructions and/or bystanders. DO NOT carry passengers.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
- When the machine is to be parked, stored or left unattended, lower the cutting means unless the transport locks are being used.
- While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.
- Check the grass catcher frequently for wear or deterioration. After striking a foreign object inspect the lawnmower for damage and make repairs before restarting and operating the equipment.
- If the machine starts to vibrate abnormally, check immediately.

2.5 TRANSPORTING

- Ensure that the cutting units are securely fastened in the transport position. Do not transport with cutting mechanism rotating.
- Drive the machine with due consideration of road and surface conditions, inclines and local undulations.

2.6 LEAVING THE DRIVING POSITION

- Park the machine on level ground.
- Before leaving the driving position, stop the engine and make sure all moving parts are stationary. Apply brakes and disengage all drives. Remove the starter key.

2.7 SLOPES

TAKE EXTRA CARE WHEN WORKING ON SLOPES

- Local undulations and sinkage will change the general slope. Avoid ground conditions which can cause the machine to slide.
- Keep machine speeds low on slopes and during tight turns.
- Remember there is no such thing as a "safe" slope.
- Travel on grass slopes requires particular care.

**2.8 BLOCKED CUTTING CYLINDERS**

- Stop the engine and make sure all moving parts are stationary.
- Apply brakes and disengage all drives.
- Release blockages with care. Keep all parts of the body away from the cutting edge. Beware of energy in the drive which can cause rotation when the blockage is released.
- Keep other people away from the cutting units as rotation of one cylinder can cause the others to rotate.

2.9 ADJUSTMENTS, LUBRICATION AND MAINTENANCE

- Stop the engine and make sure all moving parts are stationary.
- Apply brakes and disengage all drives.
- Read all the appropriate servicing instructions.
- Use only the replacement parts supplied by the original manufacturer.
- When adjusting the cutting cylinders take care not to get hands and feet trapped when rotating cylinders.
- Make sure that other people are not touching any cutting units, as rotation of one cylinder can cause the others to rotate.
- To reduce the fire hazard, keep the engine, silencer and battery compartments free of grass, leaves or excessive grease.
- Replace worn or damaged parts for safety.
- When working underneath lifted parts or machines, make sure adequate support is provided.
- Do not dismantle the machine without releasing or restraining forces which can cause parts to move suddenly.

DANGER - Indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

WARNING - Indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

CAUTION - Indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury and property damage. It may also be used to alert against unsafe practices.

 


- 3.1** Make sure that the machine is parked on flat, level ground, with the cutting units down in the cutting position with the parking brake on, ignition off & the key removed from the ignition. Disconnect Battery.

- 3.2** Review Operator Platform to ensure that worklamp holes are present. Use drawing in Appendix for clarification. Should slots/holes not be present (Early produced machines only), modify Operator Platform to suit drawing in appendix.



- 3.3** Cut away Anti slip material to allow Worklamp pre set connector to pass through platform.

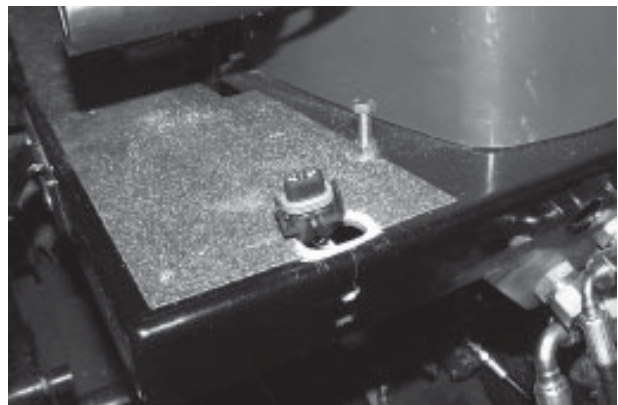

- 3.4** Mount Worklamps 4122840 onto front of Operators Platform. Tighten hardware to ensure correct position and angle of worklamp. Connect Harness to Work Lamp.

 




- 3.5** Remove blanking plug from Instrument Panel. Unscrew Instrument panel from machine




- 3.6** Fit Worklamp switch 4135848, into Instrument panel and connect the pre set connection plug situated on the Instrument harness to the switch. Re-attach Instrument panel to machine.

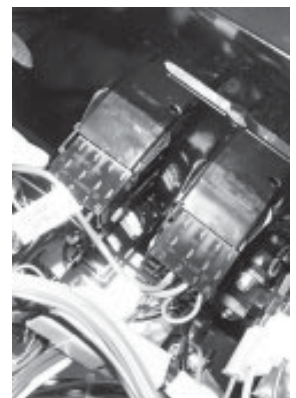

- 3.7** Re-connect Battery and Test.



 
MODIFICATIONS TO OPERATORS PLATFORM
(EARLY MACHINES ONLY)

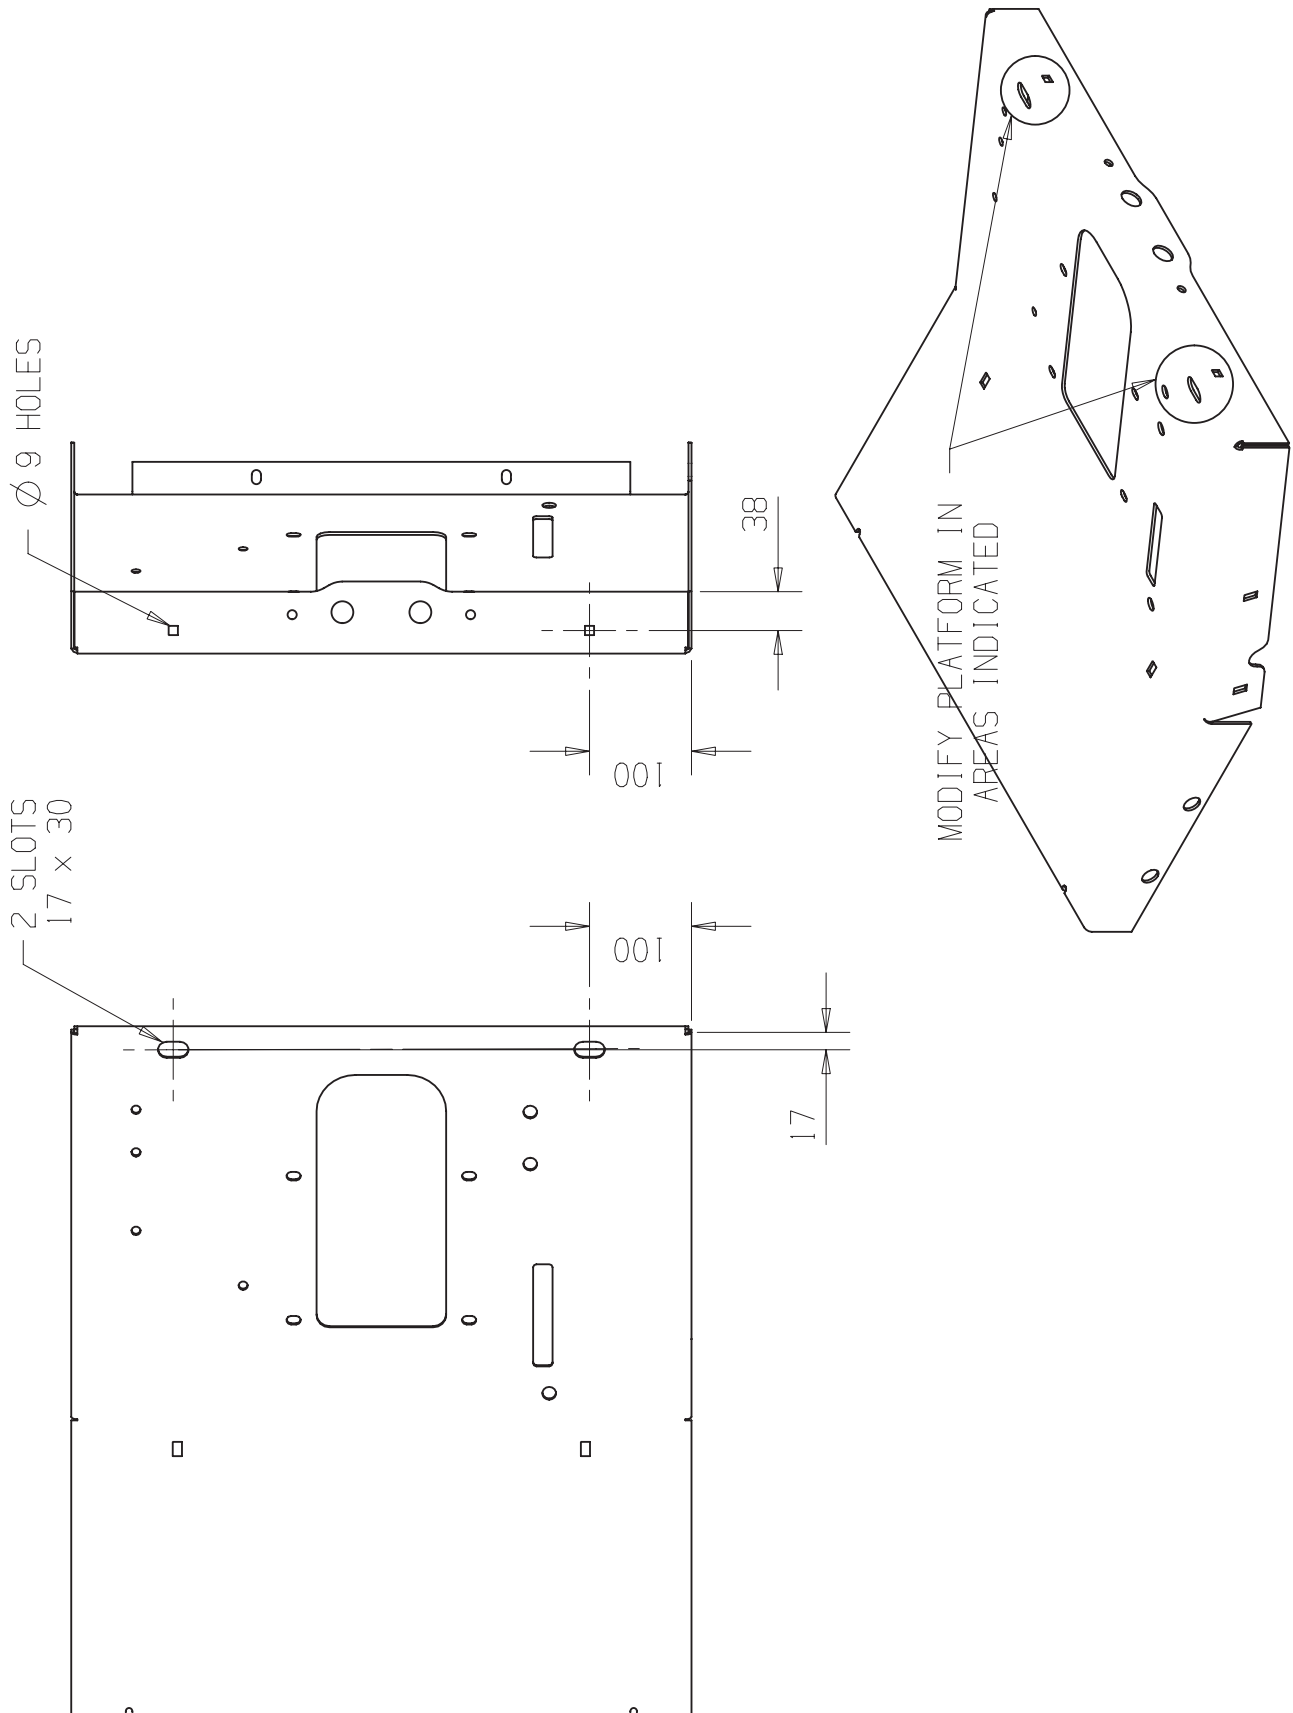





LMAC163

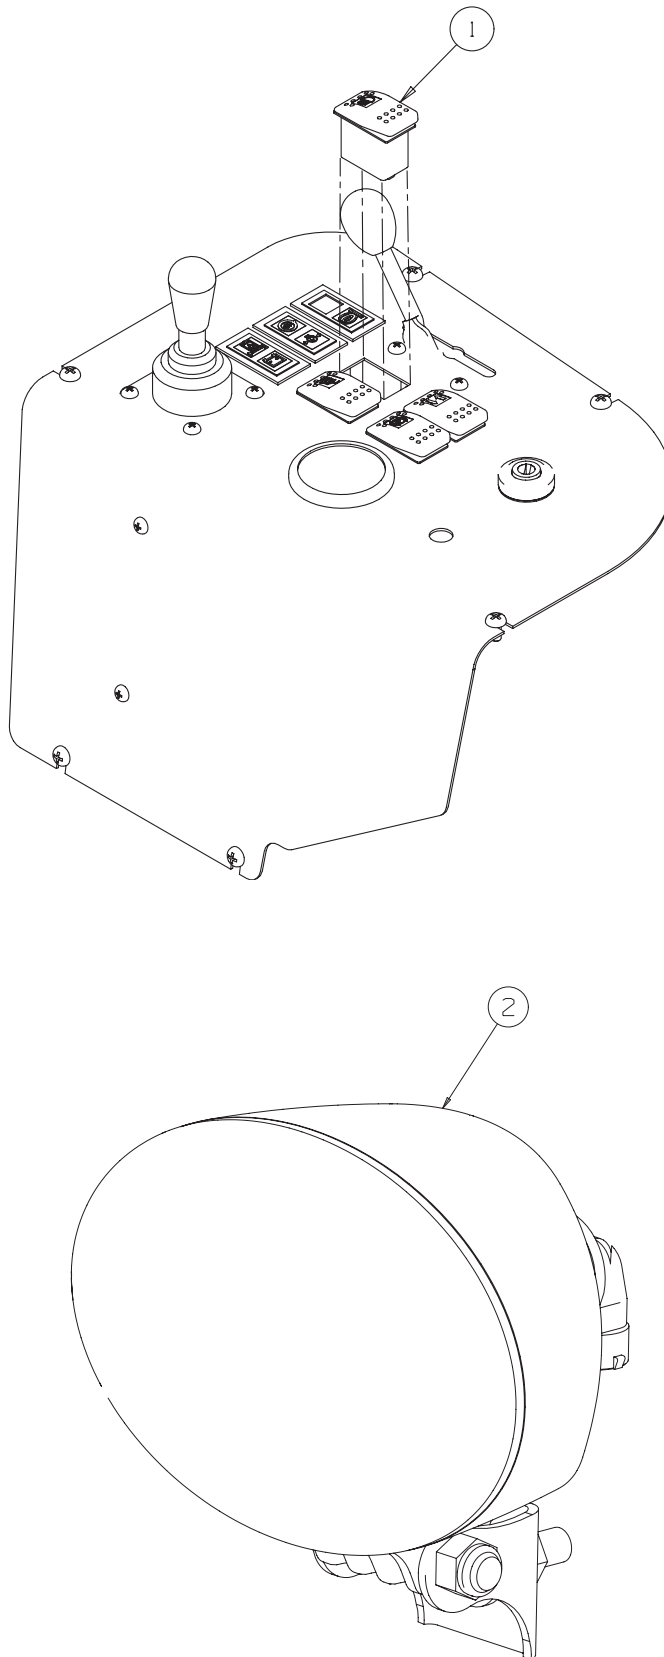 

5 PARTS LIST**JACOBSEN AR3 / TR3****WORK LAMP FITTING INSTRUCTIONS****LMAC163**

ITEM	PART No	DESCRIPTION	QTY	REMARKS
1	4135848	Work lamp Switch	1	
2	4122840	Worklamp	2	
*	4123183	Bulb, 886, 12.8v	A/R	



NOTES



World Class Quality, Performance and Support

Equipment from Ransomes Jacobsen Limited is built to exacting standards ensured by ISO 9001 registration at all our manufacturing locations. A worldwide dealer network and factory-trained technicians backed by Ransomes Jacobsen Parts Xpress provide reliable, high-quality product support.



BOB-CAT BUNTON CUSHMAN JACOBSSEN RANSOMES RYAN E-Z-GO

Ransomes Jacobsen Limited
Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG
English Company Registration No. 1070731
www.ransomesjacobsen.com