


Date	Group	No.	Release	Page
5.08	284	102	08	1(20)

MID 128 Engine control unit, fault codes

MID 128 Engine control unit, fault codes

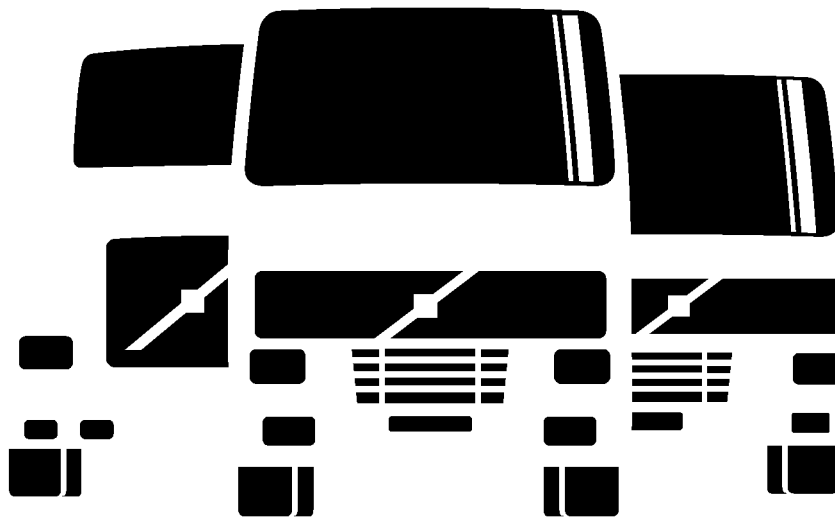

T0009739

Contents

- "MID 128 Engine control unit, fault codes" page 2
- "Engine control unit, check" page 9
- "SCRT, fault tracing" page 19

MID 128 Engine control unit, fault codes

Note: More information about fault codes is available in Guided Diagnostics

Fault code	Function	FMI	Fault
PID26	Fan speed	3	Signal not available Short-circuit+, signal cable Short-circuit-, signal cable Open-circuit, signal cable Open-circuit, earth cable
		8	Interference in the signal cable.
PID45	Pre-heater relay	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
PID84	Vehicle speed	9	Signal absent from VECU (MID144)
PID85	Cruise control status	9	Signal absent from CC
PID91	Pedal message	9	Signal absent from VECU (MID144)
PID94	Fuel pressure	1	Pressure critically low
		3	Short-circuit+ Signal cable Open-circuit Earth cable
		5	Open-circuit, 5V supply cable Short-circuit-, signal cable Open-circuit, signal cable
		7	Low pressure
PID97	Water in the fuel sensor	3	Short-circuit+, signal cable
		4	Short-circuit-, signal cable
PID98	Oil level	1	Below the range
		4	Short-circuit-, positive side
		5	Short-circuit+, positive side Open-circuit, positive side Open-circuit, negative side
PID100	Oil pressure	1	Below the range
		3	Short-circuit+, signal cable Open-circuit, earth cable
		5	Open-circuit, 5V supply cable Short-circuit-, signal cable Open-circuit, signal cable
PID 102	Charge pressure	0	Below the range
		2	Incorrect
		3	Short-circuit+, signal cable Open-circuit, earth cable
		5	Open-circuit, 5V supply cable Short-circuit-, signal cable Open-circuit, signal cable
PID105	Charge air temperature	2	Incorrect
		4	Short-circuit-, signal cable

Volvo Truck Corporation
Service Bulletin

Date	Group	No.	Release	Page
5.08	284	102	08	3(20)

Fault code	Function	FMI	Fault
		5	Short-circuit+, signal cable Open-circuit
		10	Stuck
PID107	Air filter indicator	0	Critically above the range
		3	Short-circuit+, signal cable
		4	Short-circuit-, signal cable
		5	Open-circuit
PID108	Ambient pressure	2	Within range
		3	Short-circuit+, signal cable
		4	Short-circuit-, signal cable
PID110	Coolant temperature	0	Critically above the range
		4	Short-circuit-, signal cable
		5	Short-circuit+, signal cable Open-circuit
PID111	Coolant level	1	Below the range Short-circuit-, signal cable
		3	Short-circuit+, signal cable
		5	Open-circuit
PID153	Crankcase pressure	0	Above range
		2	Within range
		3	Short-circuit+, signal cable Open-circuit, earth cable
		5	Open-circuit, 5V supply cable Short-circuit-, signal cable Open-circuit, signal cable
PID158	Battery voltage	4	TOO LOW
		3	TOO HIGH
PID171	Ambient air temperature	9	Signal absent from IC (MID140)
PID173	Exhaust temperature	4	Short-circuit-
		5	Short-circuit+ Open-circuit
PID175	Oil temperature	0	Above range
		4	Short-circuit-, signal cable
		5	Short-circuit+, signal cable Open-circuit
PID190	Engine rpm	0	Above range
PID224	Immobilizer	2	Incorrect data from IMMO (MID163)
		12	No response from IMMO (MID163)
PID228	Calibration factor (K)	11	Signal absent from VECU (MID144)
PID245	Total mileage	9	Signal absent from IC (MID140)
PID251	Time data failed	9	Exceeded time limit
PID252	Date data failed	9	Exceeded time limit
SID 1/2/3/4/5/6	Injector 1/2/3/4/5/6	3	Short-circuit+, low side

Volvo Truck Corporation
Service Bulletin

Date	Group	No.	Release	Page
5.08	284	102	08	4(20)

Fault code	Function	FMI	Fault
		5	Short-circuit+
			Short-circuit-
			Open-circuit, high side
			Short-circuit-, low side
		7	Clock calibration
		12	Low holding current, injector
		14	Special instructions
SID18	Water in the fuel sensor	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
SID21	CAM speed sensor	2	Phase error
		3	Signal absent from camshaft sensor (Short-circuit+, short-circuit-, open-circuit)
		8	Interference in the signal cable.
SID22	Crankcase speed sensor	2	Intermittent or weak signal
		3	Signal absent from crankcase sensor (Short-circuit+, short-circuit-, open-circuit)
		8	Interference in the signal cable.
SID32	Waste gate	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
		7	Stuck closed
SID33	Engine cooling fan control	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
SID39	Starter motor output	0	Starter motor overheat
		3	Short-circuit+
		5	Open-circuit
		7	Gearbox not in neutral
		10	Gear synchronisation
		14	Power take-off engaged
SID70	Pre-heating sensor 1	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
SID78	Fuel evacuation pump	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
SID211	5V supply 2	3	Above range
		4	Below the range
SID230	Buffered IVS	3	Short-circuit+
		5	Short-circuit-
			Open-circuit

Volvo Truck Corporation
Service Bulletin

Date	Group	No.	Release	Page
5.08	284	102	08	5(20)

Fault code	Function	FMI	Fault
SID231	CAN1 J1939 communications link	2	Short-circuit+ Short-circuit- or open-circuit on one or other of the cables
SID232	5V supply 1	3	Above range
		4	Below the range
SID240	Program memory	2	Checksum fault
		7	Development SW
		11	Cell test position
SID253	Data memory	2	Checksum fault
		12	Checksum fault supplier
		14	Checksum fault on E2
SID254	RAM/Watchdog	3	RAM addressing failed.
		8	WD reset of CPU does not work.
		12	Write to RAM does not work
PPID55	Electronic control unit, temperature	4	Short-circuit-, signal cable
		5	Short-circuit+, signal cable Open-circuit
PPID109	Throttle disc EPG	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
PPID122	VCB	1	Below the range
		3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
PPID123	ON/OFF EPG	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
PPID124	EPG/ Wastegate PWM	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
PPID270	NOx sensor Set by MID233 SCRT	2	Within range
		3	Short-circuit NOx signal
		5	Open-circuit, NOx signal
		9	Abnormal update
		12	Incorrect value
		13	Range control
		14	Signal absent from sensor due to Vbatt.
PPID273	AdBlue pressure Set by MID233 SCRT	1	Leakage
		2	Within range
		4	Short-circuit to earth

Volvo Truck Corporation
Service Bulletin

Date Group No. Release Page
5.08 **284** **102** **08** 6(20)

Fault code	Function	FMI	Fault
		5	Open-circuit
		7	Build up failed
		13	Electrical fault
		14	Heating failed
PPID274	AdBlue tank temperature Set by MID233 SCRT	1	Temperature too low
		4	Short-circuit to earth
		5	Open-circuit
PPID275	AdBlue filter temperature Set by MID233 SCRT	0	Temperature too high
		1	Temperature too low, electrical heating not possible
		2	Outside operating range
		4	Short-circuit to earth
		5	Open-circuit
PPID278	AdBlue level Set by MID233 SCRT	1	Level low, coolant capacity limited
		3	Short-circuit high
		5	Open-circuit Short-circuit low
		13	Sensor voltage supply outside range
		14	Level low, stop dosing
PPID385	AdBlue ECU voltage Set by MID233 SCRT	3	TOO HIGH
		4	TOO LOW
		12	Internal supply fault
		14	Internal supply critical fault
PPID386	Exhaust temperature sensor upstream of SCR cat. Set by MID233 SCRT	2	Incorrect Stuck
		4	Short-circuit to earth
		5	Open-circuit
PPID387	Exhaust temperature sensor Set by MID233 SCRT	2	Incorrect Stuck
		4	Short-circuit to earth
		5	Open-circuit
PPID435	Effective torque	0	Above range
		1	Below the range
PSID40	Inadequate reagent quality	1	Critically too low
		14	TOO LOW
PSID41	Reagent consumption	1	Critically too low
		14	TOO LOW

Volvo Truck Corporation
Service Bulletin

Date	Group	No.	Release	Page
5.08	284	102	08	7(20)

Fault code	Function	FMI	Fault
PSID42	Interrupted dosage activity	14	No dosing
PSID45	High NoX level	0	Above limit value, critical fault
		14	Above limit value
PSID75	AdBlue tank heating valve Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
PSID77	AdBlue ECU EEPROM Set by MID233 SCRT	3	ECU internal supply high
		4	ECU internal supply low
		12	Checksum, communication or write
PSID82	AdBlue internal filter heater Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
PSID84	AdBlue hose heater (BACKFLOW OUTLET) Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
PSID85	AdBlue ECU main relay Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
		6	Shut-off too late
PSID87	AdBlue pump motor speed Set by MID233 SCRT	0	Above speed
		1	Below speed
		10	No signal from pump
PSID89	AdBlue dosage valve Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
		7	Valve or hose blocked
		10	Valve stuck
		14	Frozen too many times
PSID90	SCR system capacity Set by MID233 SCRT	1	Dosage fault
		11	Underlying cause not known
		14	Major functional fault
PSID91	AdBlue consumption Set by MID233 SCRT	0	Level change in tank too great
		1	Level change in tank too small
PSID98	Charge pressure system	0	TOO HIGH

Volvo Truck Corporation
Service Bulletin

Date 5.08 Group **284** No. **102** Release **08** Page 8(20)

Fault code	Function	FMI	Fault
		1	TOO LOW
PSID101	Control valve for AdBlue cooling Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
		7	Mechanical problem
PSID102	AdBlue hose heater (INLET) Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
PSID103	AdBlue hose heater (BACKFLOW INLET) Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
PSID104	AdBlue hose heater (OUTLET) Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
PSID105	AdBlue directional valve Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
		7	Mechanical problem
PSID106	AdBlue system Set by MID233 SCRT	7	Mechanical problem
		12	Faulty component
PSID107	AdBlue external filter heater Set by MID233 SCRT	3	Short-circuit to battery
		4	Short-circuit to earth
		5	Open-circuit
PSID115	Empty reagent tank	1	TOO LOW
PSID161	VIN check 1	12	Defective device
PSID162	VIN check 2	2	Unreliable data
PSID201	CAN1 J1939 communication pause	9	No contact with VECU (MID144)
PSID202	CAN1 J1939 communication pause	9	No contact with ECU (MID140)
PSID205	CAN1 J1939 communication pause	9	No contact with TECU (MID130)
PSID229	CAN parameters from UDS Set by MID233 SCRT	9	Pause
		11	Underlying cause not known
PSID232	CAN2 J1939 communications link	2	Short circuit Short-circuit- or open-circuit on one or other of the cables.

28108-3


Engine control unit, check

Step 1: Checking the system.

Conditions:

- Adapter 9990014 and breakout box 9998699 connected **between** the control unit and the cable harness.
- Control unit connected
- Ignition key in **drive position**
- Engine switched off
- Measurement position **voltage DC** with multimeter 9812519.
- U_{bat} = Battery voltage
- $>$ = More than
- $<$ = Less than
- $\approx$ = Approximately equal to

Note: If the values in general do not agree, check the common earth terminals EA11, EB18, EB58, EB59, EB61 and EA57.

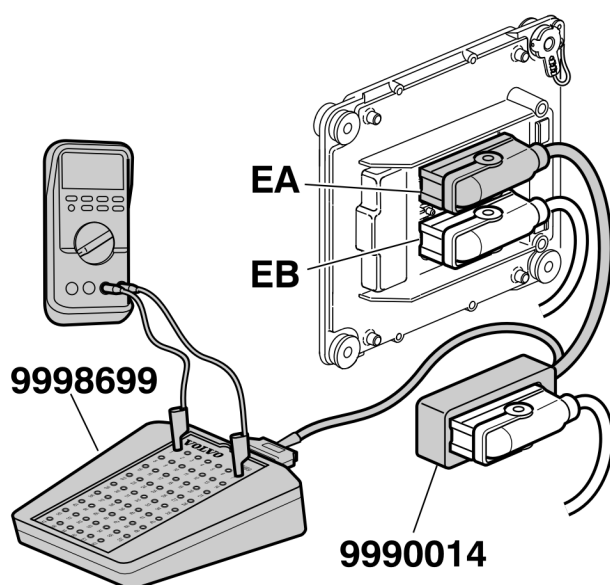


Conne- ction	Signal type	Measurement points	Expected value	Note.
EA3 (D13, D9B)	Drain valve, primary filter	EA3 - EA57	$\approx 0.8 * U_{bat}$ (inactive) ≈ 0 V (active)	
EA3 (D16)	Fuel pump	EA3 - EA57	$\approx 0.8 * U_{bat}$ (inactive) ≈ 0 V (active)	
EA7	Supply to sensor (5 V)	EA7 - EA57	4.80 - 5.15 V	
EA21	EGR pressure	EA21 - EA11	0.5 V	
EA22	Charge pressure sensor, signal	EA22 - EA11	1.1±0.7 V	(at sea level)
EA30	EGR temperature sensor, signal	EA30 - EA11	≈ 4.9 V (+20°C)	

Volvo Truck Corporation
Service Bulletin

Date	Group	No.	Release	Page
5.08	284	102	08	10(20)

Connec- tion	Signal type	Measurement points	Expected value	Note.
EA31	Oil temperature sensor, signal	EA31 - EA11	$\approx 3.0 \text{ V (+20}^{\circ}\text{C)}$ $\approx 0.4 \text{ V (+100}^{\circ}\text{C)}$	
EA35	Fan speed sensor	EA35 - EA39	0 – 5 V	Spin the fan by hand. The value should oscillate between 0 - 5 V.

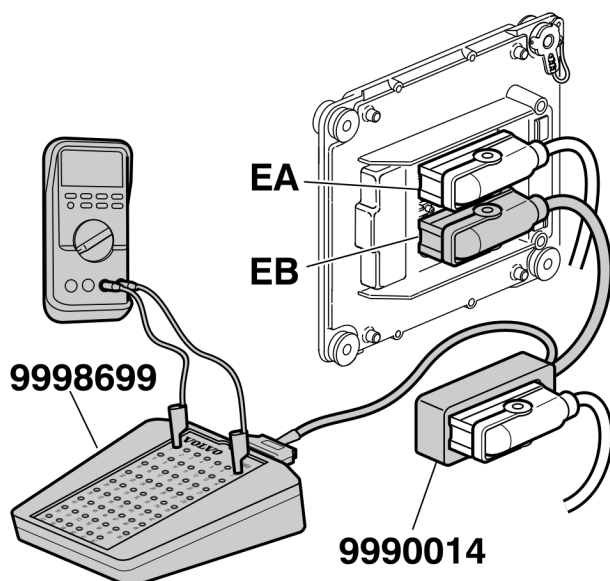

Conne- ction	Signal type	Measurement points	Expected value	Note.
EB11	Oil pressure sensor, signal	EB11 - EB18	≈ 0.5 V (with engine shut-off)	
EB15	Buffered idle switch	EB15 - EB59	< 4 V (inactive) > 8 V (active, i.e. with depressed accelerator)	
EB16	Fuel pressure sensor, signal	EB16 - EB18	≈ 0.5 V (with engine shut-off)	
EB17	Supply to sensor (5 V)	EB17 - EB18	≈ 5 V	
EB23	Coolant level sensor, signal	EB23 - EB10	≈ 0.9 * U _{bat} (open) ≈ 0 V (closed)	Normally "open" with the starter key in drive position.
EB24	EGR position 1	EB24 - EB18	≈ 0.2 - 0.8 V (valve closed)	
EB25	Pre-heater relay	EB25 - EB59	U _{bat} (open) 0 V (closed)	
EB27	Coolant temperature sensor, signal	EB27 - EB18	≈ 3.0 V (+20°C) ≈ 0.6 V (+85°C)	
EB28	Crankcase pressure sensor	EB28 - EB18	2.9±0.6 V (at sea level)	Engine stationary
EB30	VCB	EB30 - EB61	U _{bat} (inactive) 0 V (active)	Normally "inactive" with the ignition key in drive position.
EB33 Note: Only (D16E)	Drain valve, primary filter	EB33 - EB61	U _{bat} (inactive) 0 V (active)	
EB38	EPG	EB38 - EB59	≈ U _{bat} (inactive) ≈ 0 V (active)	Normally "inactive" with the ignition key in drive position.
EB49	Fan control	EB49 - EB59	≈ U _{bat} (inactive) ≈ 0 V (active)	The fan is engaged when the fan coupling relay is inactive. The fan is off when the fan coupling relay is active.

Volvo Truck Corporation
Service Bulletin


Date	Group	No.	Release	Page
5.08	284	102	08	12(20)

EB50	Waste gate	EB50–EB59	$\approx U_{\text{bat}}$ (inactive) $\approx 0 \text{ V}$ (active)	Normally “inactive” with the ignition key in drive position.
EB51	SAE J1939 (CAN high)	EB51 - EB61	2.5 - 4.0 V	
EB55	SAE J1939 (CAN low)	EB55 - EB61	0 - 2.5 V	
EB57	Power supply, control unit	EB57 - EB59	U_{bat}	
EB60	Power supply, control unit	EB60 - EB61	U_{bat}	

Step 2: Function check (Cable harness and circuit)

Conditions:

- Adapter 9990014 and breakout box 9998699 connected to the cable harness.
- Control unit disconnected
- Ignition key in **stop position**
- Measurement position **resistance** with multimeter 9812519.

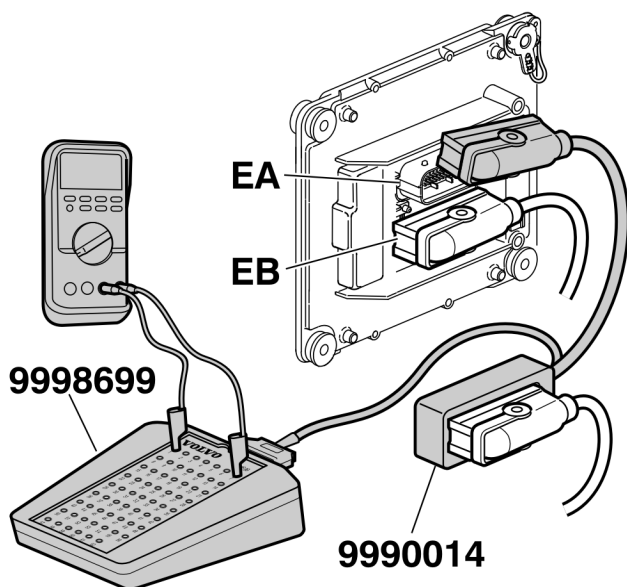


Conne- ction	Signal type	Measurement points	Expected value	Note.
EA3	Fuel pump	EA3 - EA57	$> 10\Omega$	
EA12	Unit injector cylinder 2 (injector)	EA12 - EA62	$0.9 - 5.2 \Omega (20^{\circ}\text{C})$ $1.5 - 5.8 \Omega (100^{\circ}\text{C})$	
EA16	Unit injector cylinder 2 (return valve)	EA16 - EA59	$1.1 - 5.8 \Omega (20^{\circ}\text{C})$ $1.9 - 6.2\Omega (100^{\circ}\text{C})$	
EA20	Unit injector cylinder 1 (needle control valve)	EA20 - EA62	$0.9 - 5.2 \Omega (20^{\circ}\text{C})$ $1.5 - 5.8 \Omega (100^{\circ}\text{C})$	
EA24	Unit injector cylinder 1 (spill valve)	EA24 - EA59	$1.1 - 5.8 \Omega (20^{\circ}\text{C})$ $1.9 - 6.2\Omega (100^{\circ}\text{C})$	
EA28	Unit injector cylinder 3 (injector)	EA28 - EA62	$0.9 - 5.2 \Omega (20^{\circ}\text{C})$ $1.5 - 5.8 \Omega (100^{\circ}\text{C})$	
EA30	EGR temperature sensor	EA30 - EA11	$30 - 45\text{k}\Omega$	
EA31	Oil temperature sensor, signal	EA31 - EA11	$\approx 1.9 \text{ k}\Omega (+20^{\circ}\text{C})$ $\approx 100 \Omega (+100^{\circ}\text{C})$	
EA32	Unit injector cylinder 3 (return valve)	EA32 - EA59	$1.1 - 5.8 \Omega (20^{\circ}\text{C})$ $1.9 - 6.2\Omega (100^{\circ}\text{C})$	
EA36	Unit injector cylinder 6 (injector)	EA36 - EA61	$0.9 - 5.2 \Omega (20^{\circ}\text{C})$ $1.5 - 5.8 \Omega (100^{\circ}\text{C})$	
EA37	Tachometer sensor, flywheel, +	EA37 - EA38	$775 - 945 \Omega$	
EA40	Unit injector cylinder 6 (return valve)	EA40 - EA60	$1.1 - 5.8 \Omega (20^{\circ}\text{C})$ $1.9 - 6.2\Omega (100^{\circ}\text{C})$	
EA41	Tachometer turbo	EA41 - EA42	$0.8 - 1 \text{ k}\Omega$	

Volvo Truck Corporation
Service Bulletin

Date	Group	No.	Release	Page
5.08	284	102	08	14(20)


EA44	Unit injector cylinder 5 (injector)	EA44 - EA61	0.9 - 5.2 Ω (20 $^{\circ}$ C) 1.5 - 5.8 Ω (100 $^{\circ}$ C)	
EA45	Camshaft sensor, +	EA45 - EA46	775 - 945 Ω	
EA47	Charge air temperature sensor, signal	EA47 - EA11	$\approx$ 2.4k Ω (+20 $^{\circ}$ C) $\approx$ 1.1k Ω (+40 $^{\circ}$ C)	
EA48	Unit injector cylinder 5 (return valve)	EA48 - EA60	1.1 - 5.8 Ω (20 $^{\circ}$ C) 1.9- 6.2 Ω (100 $^{\circ}$ C)	
EA52	Unit injector cylinder 4 (injector)	EA52 - EA61	0.9 - 5.2 Ω (20 $^{\circ}$ C) 1.5 - 5.8 Ω (100 $^{\circ}$ C)	
EA56	Unit injector cylinder 4 (return valve)	EA56 - EA60	1.1 - 5.8 Ω (20 $^{\circ}$ C) 1.9- 6.2 Ω (100 $^{\circ}$ C)	

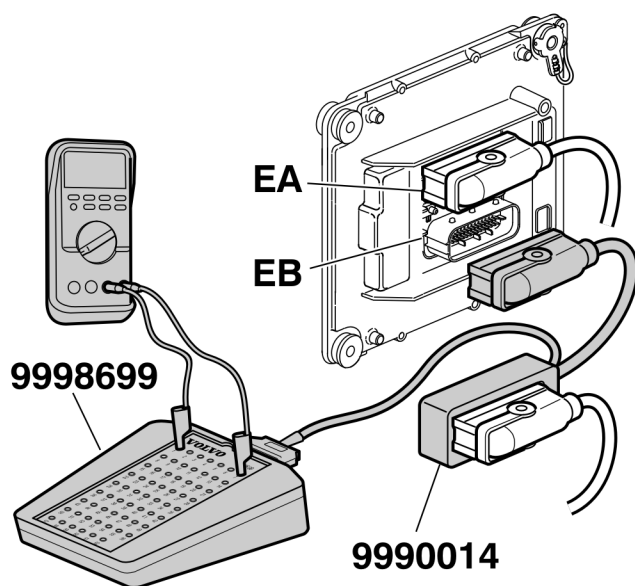

Conne- ction	Signal type	Measurement points	Expected value	Note.
EB3	Oil level sensor	EB3 - EB4	11.7 - 12.9 Ω ($\approx$ +22 $^{\circ}$ C)	
EB13	EGR valve 1, engine	EB13 - EB9	1 - 10 Ω	
EB23	Coolant level sensor, signal	EB23 - EB10	> 100 k Ω (open) normal level < 5.0 Ω (closed) low level	
EB27	Coolant temperature sensor, signal	EB27 - EB18	1.9 k Ω (20 $^{\circ}$ C) 160 Ω (185 $^{\circ}$ C)	
EB49	Fan control	EB49 - EB57	< 50 Ω	

Conditions:

- Adapter 9990014 and breakout box 9998699 connected **between** the control unit and the cable harness.
- Control unit connected
- Ignition key in **stop position**
- Measurement position **resistance** with multimeter 9812519.

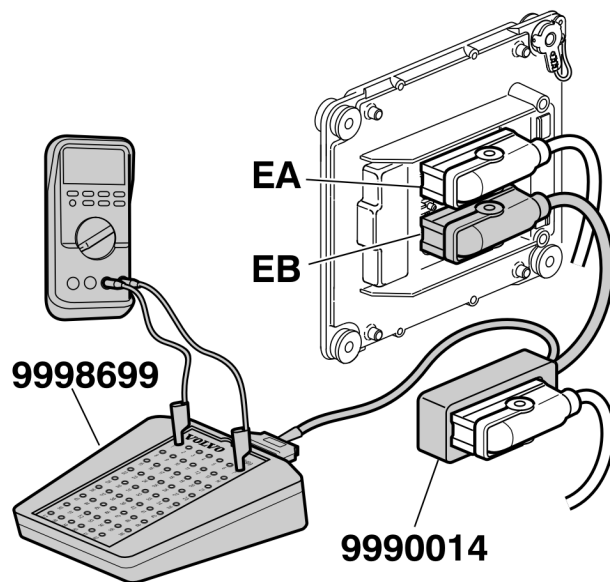


Connec- tion	Signal type	Measurement points	Expected value	Note.
EB51	SAE J1939	EB51 - EB55	60 Ω	When there is no terminal resistor 120 Ω (or when the contact EA is disconnected)

Step 3: Function check (engine control unit)

Conditions:

- Control unit connected
- Measurement via the data link connector

DC no. = Connection in data link connector


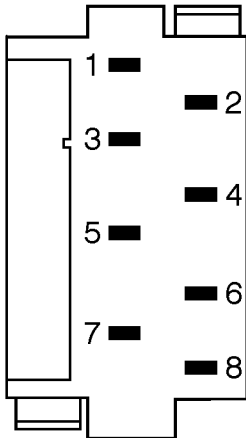


Connec- tion	Signal type	Measurement points	Expected value	Note.
DC3	SAE J1587/1708	DC3 - DC2	0 - 5 V	

Conditions:

- Adapter 9990014 and breakout box 9998699 connected to cable harness **EA**
- Control unit connector EA disconnected
- Ignition key in **stop position**
- Measurement position **resistance** with multimeter 9812519.

DC no. = Connection in data link connector

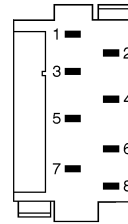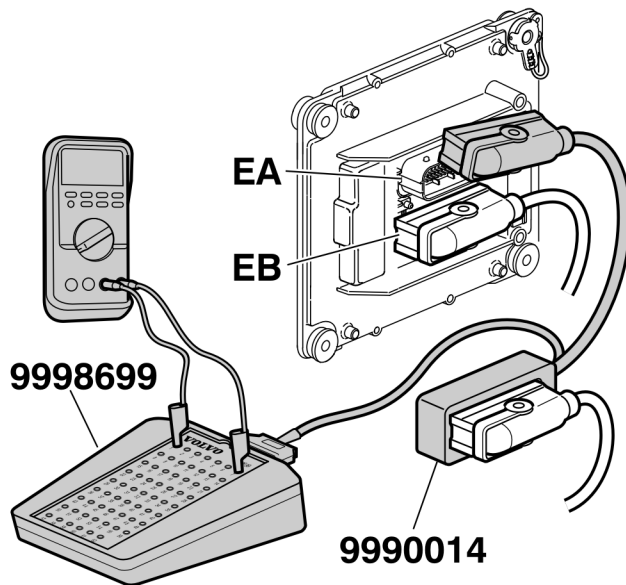


Conne- ction	Signal type	Measurement points	Expected value	Note.
EA33	SAE J1587-/1708 (CAN high)	EA33 - DC3	0 - 5 Ω	
EA34	SAE J1587-/1708 (CAN low)	EA33 - DC2	0 - 5 Ω	

Conditions:

- Adapter 9990014 and breakout box 9998699 connected to cable harness **EB**
- Control unit connector EB disconnected
- Ignition key in **stop position**
- Measurement position **resistance** with multimeter 9812519.

DC no. = Connection in data link connector

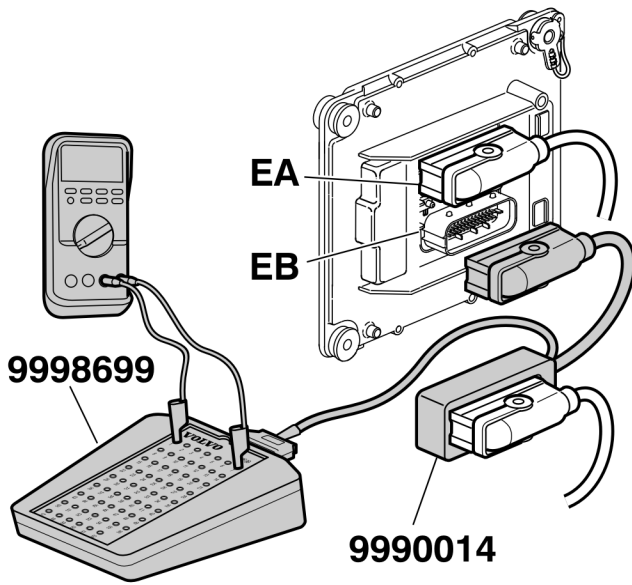


Conne- ction	Signal type	Measurement points	Expected value	Note.
EB51	SAE J1939 (CAN high)/1939 (CAN low)	EB51 - EB55	120 Ω	

SCRT, fault tracing

Step 1: Checking the system.

Conditions:

- Adapter 88890052 and breakout box 9998699 connected **between** the control unit and the cable harness.
- Control unit connected
- Ignition key in **drive position**
- Engine switched off
- Measurement position **voltage DC** with multimeter 9812519.
- U_{bat} = Battery voltage
- $>$ = More than
- $<$ = Less than
- $\approx$ = Approximately equal to

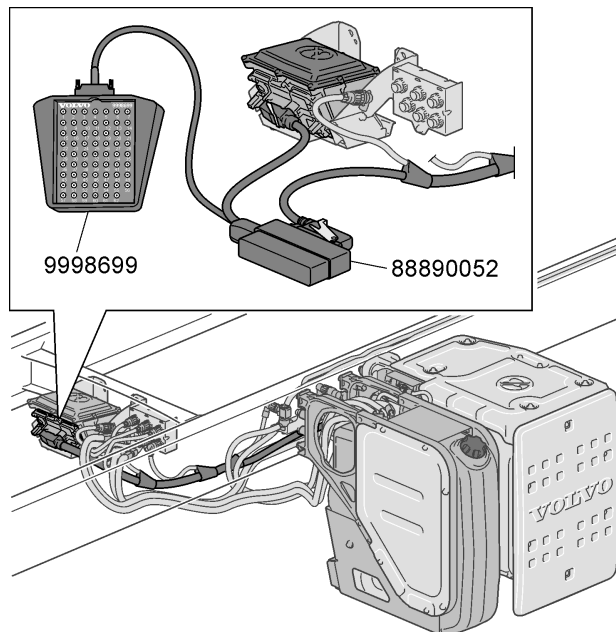


Connection	Signal type	Measurement points	Expected value
A6	Tank level sensor/temperature sensor supply	A6 - A17	4.75-5.25 V
A8	Catalytic converter temperature sensor, upstream, signal	A8 - A19	$\approx 0.9 \text{ V (} 25^{\circ}\text{C)}$ $\approx 1.5 \text{ V (} 300^{\circ}\text{C)}$
A10	Catalytic converter temperature sensor, downstream, signal	A10 - A11	$\approx 0.9 \text{ V (} 25^{\circ}\text{C)}$ $\approx 1.5 \text{ V (} 300^{\circ}\text{C)}$
A18	Tank level sensor, signal	A18 - A17	0.30-4.75 V
A12	Supply voltage from F10 (DR signal)	A:12 - A:22	Ubatt
A33	Supply voltage from F94	A:33 - A:22	Ubatt
A32	Supply voltage from F94	A:32 - A:22	Ubatt
A31	SAE J1939-7 (CAN high)	A:31 - A:22	2.5-4.0 V
A30	SAE J1939-7 (CAN low)	A:30 - A:22	0-2.5 V

Step 2: Function check (Cable harness and circuit)

Conditions:

- Adapter 88890052 and breakout box 9998699 connected **to** the cable harness.
- Control unit disconnected
- Ignition key in **stop position**
- Measurement position **resistance** with multimeter 9812519.

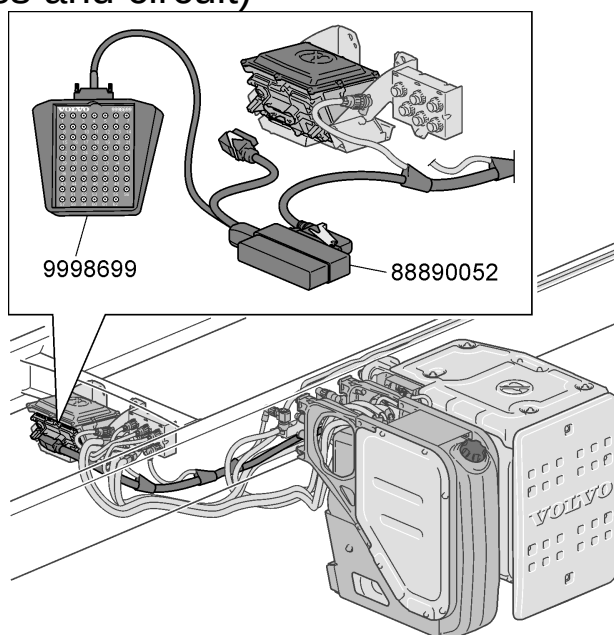

Connection	Signal type	Measurement points	Expected value
A7	Tank temperature sensor, signal	A7 - A17	≈ 15.0 kΩ (0°C) ≈ 4.7 kΩ (25°C)
A8	Exhaust temperature sensor, upstream, signal	A8 - A19	≈ 220 Ω (25°C) ≈ 350 Ω (200°C)
A10	Exhaust temperature sensor, downstream, signal	A10 - A11	≈ 220 Ω (25°C) ≈ 350 Ω (200°C)
A21	Earth	A21 - Earth	≈ 0 Ω
A22	Earth	A22 - Earth	≈ 0 Ω
A31	SAE J1939-7 (CAN high)	A31 - A30	120 Ω
A13	Tank heating valve	A13 - A35	40 -55 Ω
A24	Dosing valve	A24 - A25	1.5 -5.0 Ω
	Filter heater		Not possible to measure
A14	Hose heater 1	A14 - A34	10 -15 Ω
A4	Hose heater 2	A4 - A34	8 -15 Ω
A2	Hose heater 3	A2 - A35	8 -13 Ω
A1	Hose heater 4	A1 - A35	11 -15 Ω
A3	External filter heater	A3 - A35	30 -70 Ω