

INSTALLATION INSTRUCTIONS FOR RX SERIES REMOTE HYDRAULIC VALVE KIT

1. PACKING LIST & ACTUAL IMAGE
2. GENERAL SAFETY INFORMATION
3. INSTALLATION INSTRUCTION

D.D KIT#.

A: T5245-A04000123
(1-2, DETENT/FLOATING)

B: T5210-A04000123
(2-3, DETENT/FLOATING)

U.S.A KIT#.

A: RXA108
(1-2, DETENT/FLOATING)

B: RXA109
(2-3, DETENT/FLOATING)



KIOTI TRACTOR DIVISION / DAEDONG-USA, Inc.
6300 Kioti Dr. Wendell, NC 27591
Toll Free: **1877-GO-KIOTI**
Tel: 1-919-374-5100 Fax: 1-919-374-5001
<http://www.kioti.com>


DAEDONG KIOTI EUROPE B.V
Koerilenstraat 2, 3199LR, Maasvlakte-Rotterdam The Netherlands
Tel: +31 (0)181 35 30 25
<http://www.kioti.eu>



SERVICE SUPPORT DIVISION / DAEDONG INDUSTRIAL Co., Ltd.
35, Nongongjungang-ro 34-gil Nongong-eup, Dalseong-gun, Daegu, KOREA 42984
Tel: 82-53-610-3350 Fax: 82-53-610-3359
<http://www.daedong.co.kr>

1. PACKING LIST & ACTUAL IMAGE

NO.	Part No.	Description	Q'TY		Remark
			A	B	
1	T5210-34501	DETENT FLOATIBG VALVE	1	1	
2	TF14-0104A	COUPLER, QUICK-PF1/2	2	2	
3	TF14-0123A	CAP, COUPLER SOCKET-1/2	2	-	
	TF14-0124A		-	2	
4	E6200-91092	BOLT, WASHER	2	-	
	T5210-30081		-	2	
5	T5210-65661	LEVER, DOUBLE ACTING	1	1	
6	T4810-66721	WASHER	1	1	
7	T4682-65291	WASHER	1	1	
8	05515-51600	PIN, SNAP	1	1	
9	T5210-65613	CABLE 1, DOUBLE ACTING	1	1	
10	05122-50616	PIN, JOINT	1	1	
11	T4930-66751	WASHER	2	2	
12	05515-50600	PIN, SNAP	2	2	
13	T2610-24461	GRIP, HI-LOW SHIFT	1	1	
14	T4710-65672	JABARA, DOUBLE ACTING	1	-	
	T4750-65672		-	1	
15	05122-50618	PIN, JOINT	1	1	

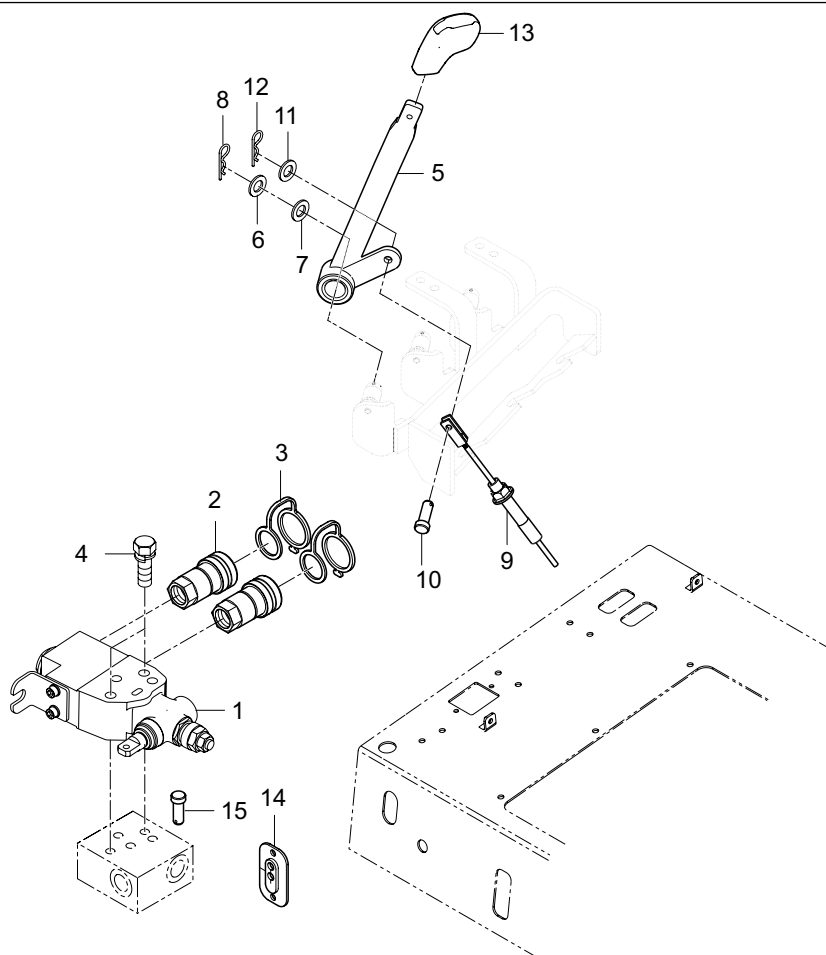

U89S916A

2. GENERAL SAFETY INFORMATION



This symbol means ATTENTION! YOUR SAFETY IS INVOLVED.
The message that follows the symbol contains important information about safety. Carefully read the message.

BEFORE SERVICING AND REPAIRING

1. Read all safety instruction in this manual and be aware of safety decal locations on your machine.
2. Thoroughly clean your work area and the machine.
3. Make sure the machine is on firm and level ground and that the parking brake is set.
4. Lower the implement to the ground.
5. Stop the engine and remove the key.
6. Disconnect the negative battery cable.
7. Place a "DO NOT OPERATE" tag in the operator station.

WORKING SAFETY

1. Do not operate or service the machine while under the influence of alcohol, medications, or other substances.
2. Never wear loose fitting clothing and always use safety equipment appropriate to the job.
3. Never use improvised tools, parts or procedures. Use only recommended tools appropriate to the work.
4. Extra care should be taken to work safely when servicing is done by two or more persons.
5. Always support the machine with safety stands rated for the weight of the machine. Never work under a machine that is supported solely with a jack.
6. Do not touch any rotating or hot parts while the engine is running.
7. Escaping fluid (hydraulic oil) under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or fuel lines. Tighten all connections before applying pressure.

DISPOSE OF FLUIDS PROPERLY


1. Observe relevant environmental protection regulations when disposing of oil. NEVER pour fluids onto the ground, down a drain, or into any body of water.

3. INSTALLATION INSTRUCTION


1. Park the vehicle on firm and level ground. Then, engage the parking brake and stop the engine.



2. Insert a flat bladed screwdriver through the gap of the interior fender upper cover (1) on the right side from the seat to pry open the cover. Then, disconnect the switch connectors.

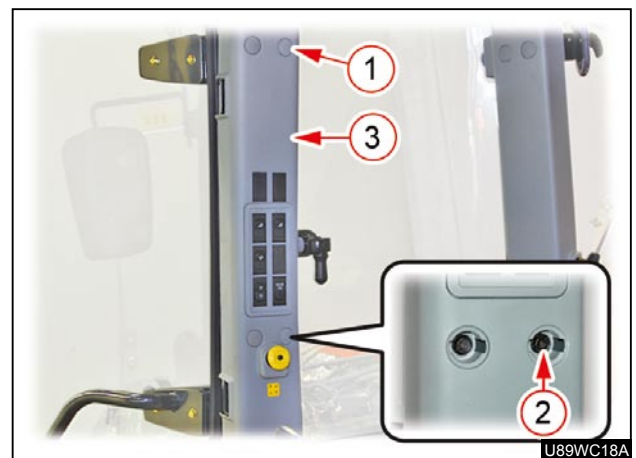



3. Remove the front and rear pillar cover caps (1), unscrew the mounting bolts (2) and disconnect the switch connectors. Also, remove the pillar cover (3).

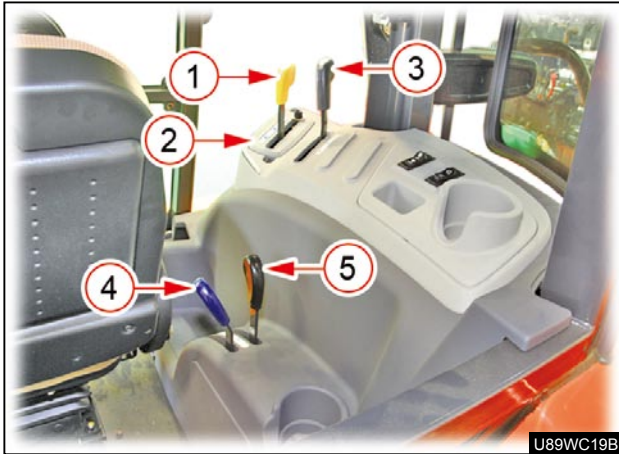


4. Remove the PTO shift lever grip (1) and cover (2) and pull out the double acting lever grip (3), draft control lever grip (4) and position control lever grip (5). Then, unscrew all the internal fender mounting bolts.





5. Remove the interior fender by pulling it upward.

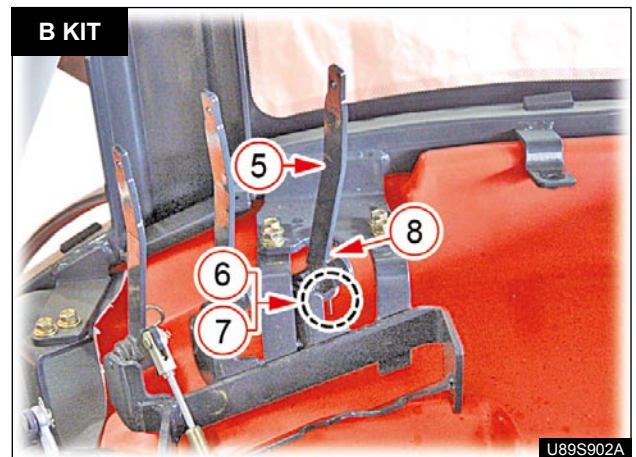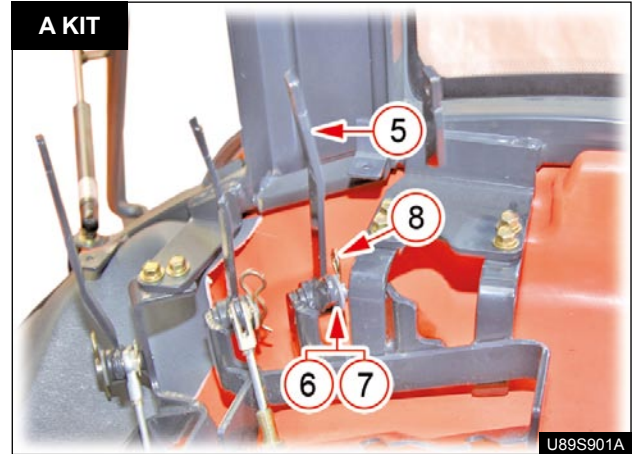

6. Insert the double acting lever (5) into the bracket shaft section, fit the rubber washer (7) and washer (6), and fix it with the snap pin (8).

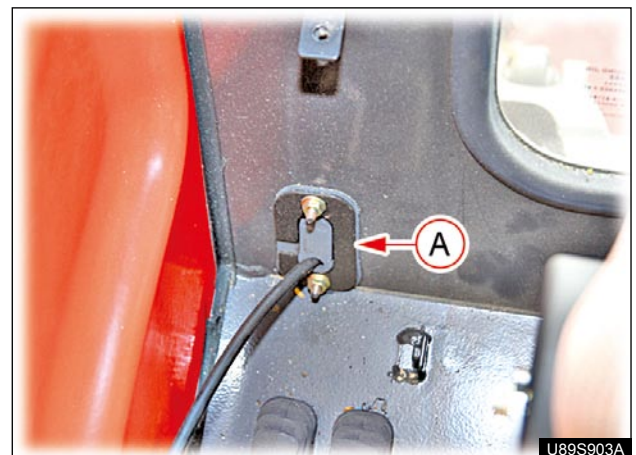


7. Remove the double acting bellows (A).

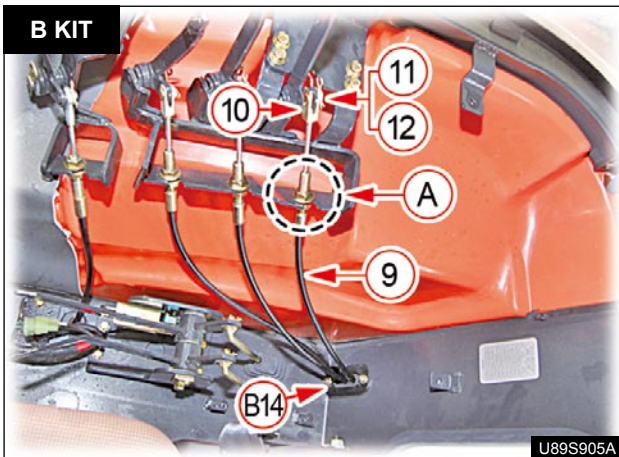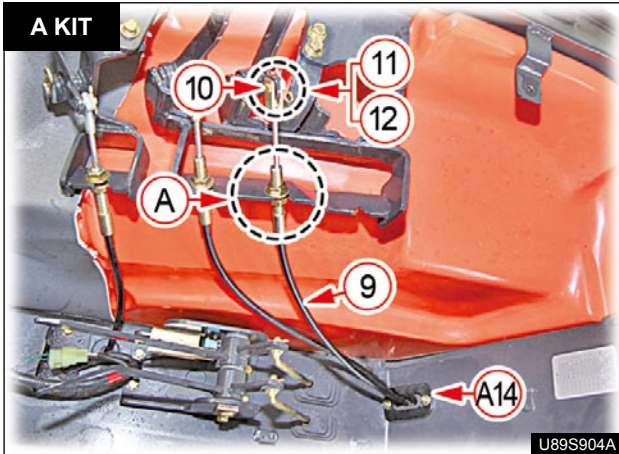


8. Pull out one end of the double acting cable (9) through the hole on the double acting bellows, insert the double acting cable into the double acting lever, fit the head pin (10) and washer (11), and fix it with the snap pin (12).
Fix the cable to the bracket (section A) and tighten the double acting bellows (A14 & B14).



REMARKS

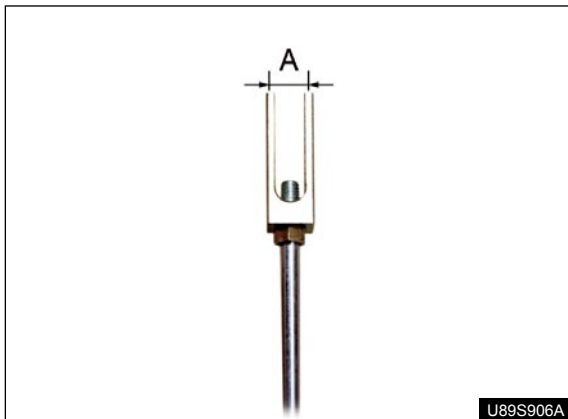



- Make sure that the wide portion of the section A of the double acting cable is installed to the double acting valve side.

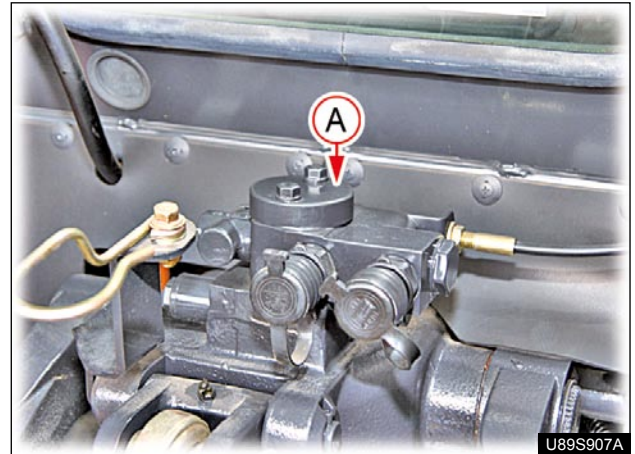


9. Remove the double acting valve cover (A) from the body.

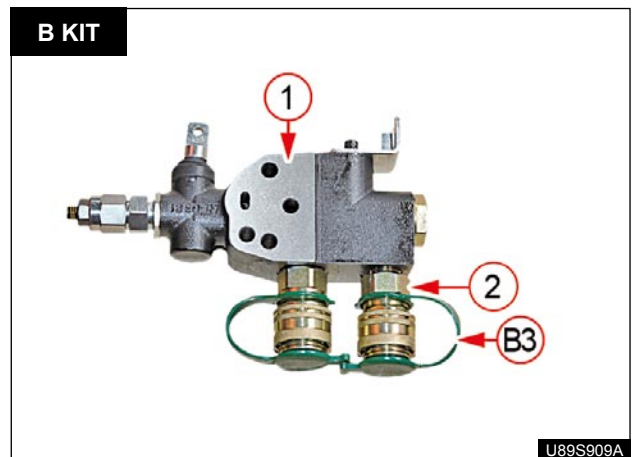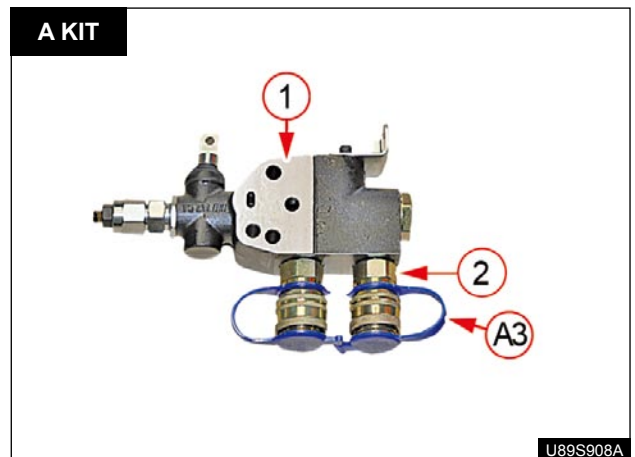



10. Unscrew the plug from the double acting valve (1) and install the socket coupler (2) and socket coupler plugs (A3 & B3).

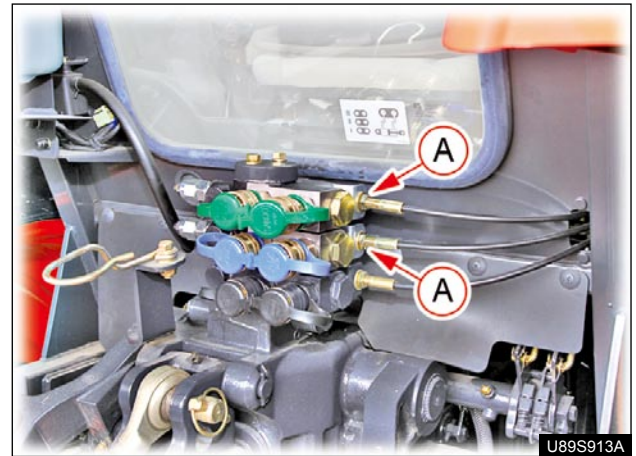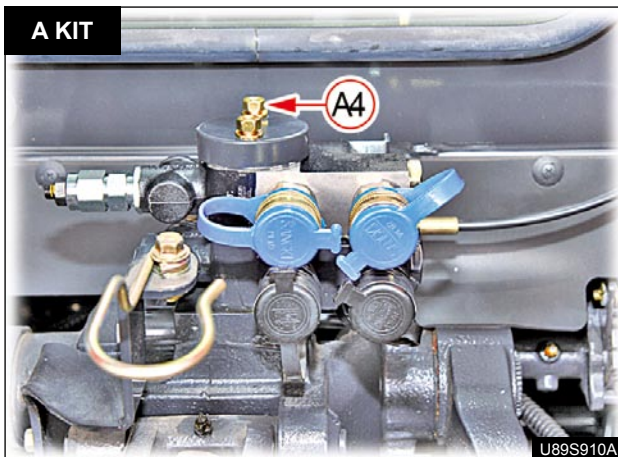

13. Adjust the double acting lever and fix the cable adjusting nut (A).

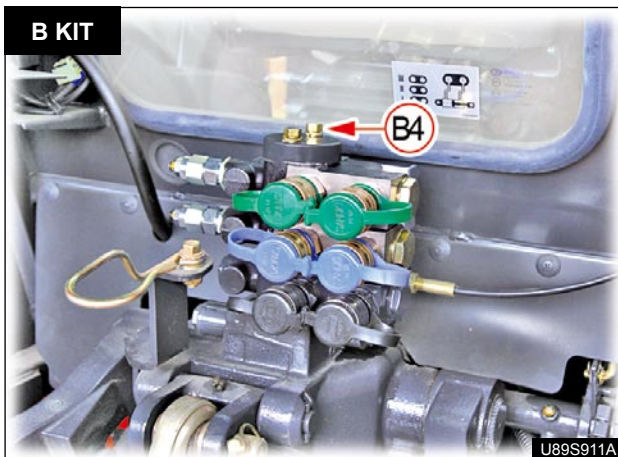

11. Install the double acting valve assembly, which were assembled in the Step 10 above, with the bolts (A4 and B5).

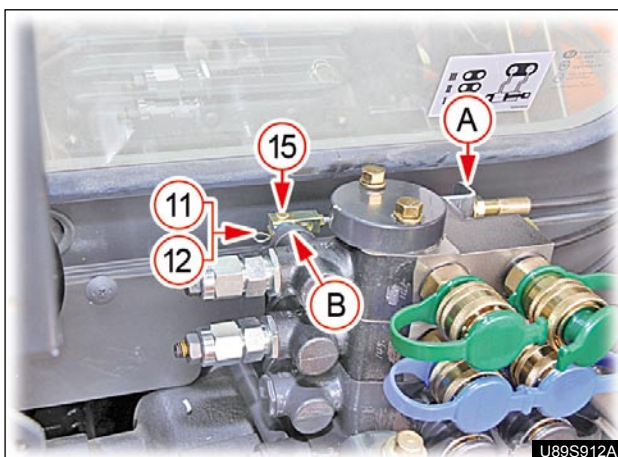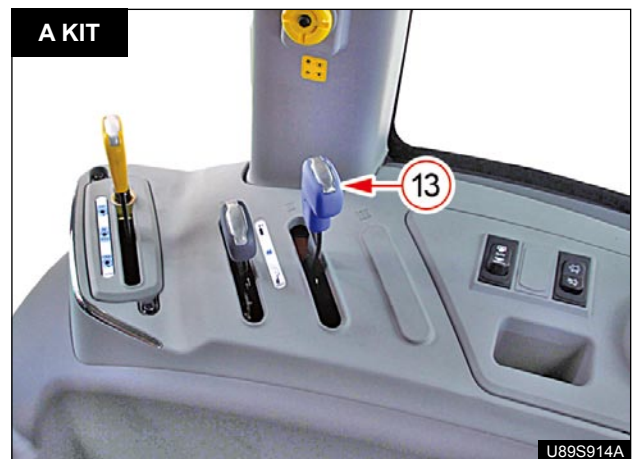

12. Fit the double acting cable to the bracket (A) and tighten it loosely. Then, install the end of the cable to the double acting valve shaft (B) with the head pin (15), washer (11) and snap pin (12).



14. Perform assembly in order from the Step 5 to 2.

15. Install the handle (13).