

Parts Catalogue

T474NH



 
Important tips of Parts Catalogue

We thank you for your purchasing our product, manufactured under strict quality control, by gathering plenty of experiences and new technology, designed for a comfort and pleasant work.

1. Part Composition

This catalogue deals with engine and chassis.

Detailed classifications are listed in the following page.

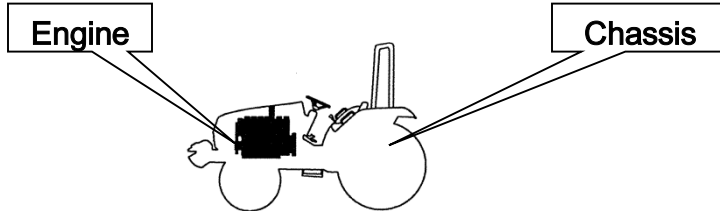

2. For locating parts easily, Please Note:

 
A. If you know the assembly where the part is used.

- Refer to the relevant figure from the identifying group symbol illustration,
- Locate the relevant chapter
- Refer to the particular chapter desired.

3. For ordering parts

To obtain spare parts please contact your nearest dealer and give him the details listed below.

- ① Tractor Model : Tractor
- ② Tractor Serial Number : W050000
- ③ Part Number : 16001032000
- ④ Description : Air cleaner assembly
- ⑤ Quantity required: 1

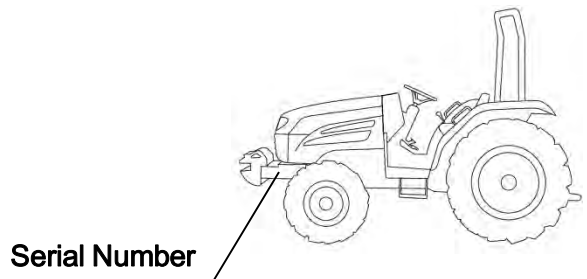

4. For ordering PARTS CATALOGUE

This is Priced item and one is to order the same on part No. 13219400020

This supersedes all our editions.

Note) When replacing parts, please use original spare parts to be sure of the performance and the longer life of the product

※ The information in this catalogue may at any time be modified without a prior notice for the improvement of performance, please consult our spare parts dept. for the detailed inquiry.

5. How to use parts catalogue

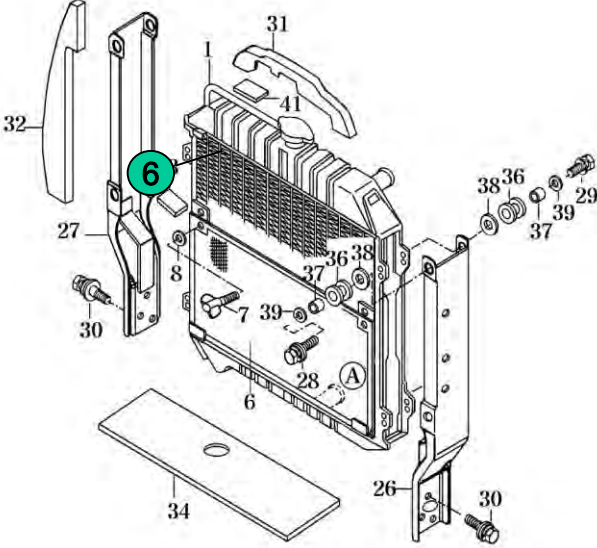 
FIG 021 ②	③	RADIATOR	P1 ④	Year ⑤ 2014	①
					
NOTE	⑬				

FIG 021 2		3 RADIATOR			P1 4	Year 5 2014	1 	
KEY NO	PART NO	PART NAME	SPEC	QTY	REPAIR	E/G SERIAL NO	REMARKS	
023 001	14571042001	RADIATOR SET		1				
023 002	14571042101	RADIATOR SET		1				
023 003	14571042171	SHROUD		1				
6 023 006	7 1457104201HB	NET COMP 8		9	10	11	12	14
023 007	V271042012	BOLT, WING	M6X12					
NOTE		13						

- ① Group Indication : Indicate the relevant location of the part with a symbol illustration.
- ② Figure Number: Indicate the relevant section of the machine with a figure number.
- ③ Section Name : Indicate the section name of the machine
- ④ Section Page : Page number of the section in this catalogue.
- ⑤ Date : Show the Year of the section made or updated

⑥ Key number : Indicating number of each parts in the illustration.

⑦ Part Number : Unique part number maintained in our system

The part number starting with V or M means it is TYM s standard part

The alphabet at the end of part number means the status of material or the color of paint

Legend : M:Machining, DG:Dark Gray, BR:Bright Red, SW:Summer White,
PB:Pure Black, GB:Glossy Black, SR:Super Red, MS:Metallic Silver
DD:Heat proof Black, TY: Tangerine Yellow etc.

⑧ Description : Description of a part, Abbreviation means as follows.

- Indicate the mixture condition of a part

ASSY : Assembly with a mixture of several parts, so can be broke up retaining their original form

COMP : Assembly with a mixture of several parts, but can not be broke up retaining their original form

SUB : mean the same as ASSY but used in lower level in aid.

SET : Part consist of ASSY, COMP, and part(s) as a group

- Indicate the location of a part

LH: Left, RH: Right, FR: Front, RR: Rear, UPR: Upper, LOW: Lower

⑨ Type : Type of the standard items like bolt or nut

⑩ Quantity : Total quantity of the part referred to in the page.

Symbol below indicate options. So, show the quantity of each option.

Note) AR means as requested quantity.

⑪ Repair Parts consumption frequency class: indicate the level of a part in aid of stocking spares, anticipating the service requirements.

A :Fast moving part(frequently required)

B :Medium moving part (sometimes required)

C :Slow moving part(rarely required)

⑫ Modification :

 
Year/Month~ : From which the change starts

~ Year/Month : To which the part installed


⑬ Notes : explain some reference data

⑭ Remark : indicate reference data or abbreviation in the content.


ENGINEERING GROUP INDEX

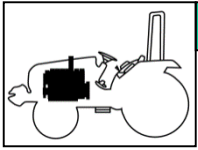


1 ENGINE

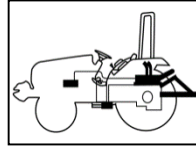 


6 HYDRAULICS & 3-POINT LINK

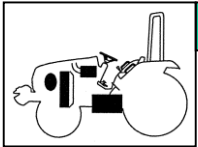 


2 ENGINE ACCESSORIES & CONTROL

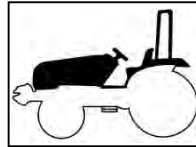 


7 SHEET METAL & ROPS

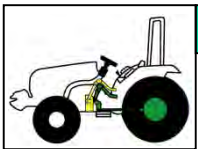 


3 CLUTCH, BRAKE, STEERING

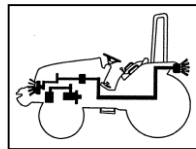 


8 ELECTRICALS & HARNESS

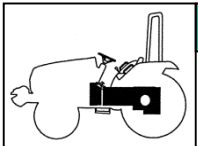 

4 TRANSMISSION & REAR AXLE

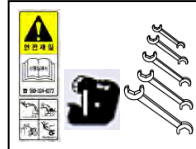 

9 WEIGHT, LABEL, TOOLS

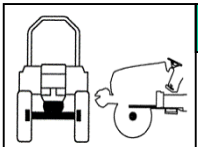 

5 FRONT AXLE, SUPPORTER & DRIVE SHAFT

067 020	12305180020
077 036	12403160020
036 005	13022250030
037 010	13022250131
041 005	13022250232
046 002	13022250333

10 NUMERICAL INDEX

CONTENTS

ENGINE

1 ENGINE

FIG 101 CYLINDER BLOCK	04
FIG 102 OILJET ASS'Y OPTION	06
FIG 103 CRANK SHAFT	08
FIG 104 PISTON	10
FIG 105 CYLINDER HEAD	12
FIG 106 ROCKER LEVER	14
FIG 107 HEAD COVER	16
FIG 108 GEAR CASE	18
FIG 109 IDLE GEAR	20
FIG 110 CAM SHAFT	22
FIG 111 OIL PUMP	24
FIG 112 HYD. PUMP DRIVE	26
FIG 113 2ND BALANCE	28
FIG 114 OIL PAN	30
FIG 115 INTAKE MANIFOLD	32
FIG 116 EXHAUST MANIFOLD	34
FIG 117 DPF SUPPORT OPTION	36
FIG 118 TURBOCHARGER PLUMBING OPTION	38
FIG 119 BREATHER	40
FIG 120 FUEL INJECTION PUMP	42
FIG 121 FUEL INJECTION VALVE	44
FIG 122 FUEL PIPE ASS'Y	46
FIG 123 OIL FILTER	48
FIG 124 OIL COOLER	50
FIG 125 OIL GAUGUE	52
FIG 126 OIL FILLER CAP	54
FIG 127 COOLING WATER PUMP	56
FIG 128 CRANK SHAFT PULLEY	58
FIG 129 V-PULLEY	60
FIG 130 COOLING FAN	62
FIG 131 FLYWHEEL HOUSING	64

FIG 132 FLYWHEEL	66
FIG 133 GLOW PLUG ASS'Y OPTION	68
FIG 134 STARTING MOTOR	70
FIG 135 FUEL FILTER BRACKET ASSoY	72
FIG 136 ALTERNATOR	74
FIG 137 V-BELT	76
FIG 138 FUEL FILTER	78
FIG 139 DPF SUPPORT	80
FIG 140 DATAPLATE	82
FIG 141 NAME PLATE, STARTING MOTOR	84
FIG 142 DPF ASSoY	86
FIG 143 LIFT ASSoY	88

CHASSIS

2 ENGINE ACCESSORIES & CONTROL

FIG 201 AIR CLEANER-----	94
FIG 202 RADIATOR-----	96
FIG 203 MUFFLER-----	98
FIG 204 FUEL TANK & FILTER-----	100
FIG 205 OIL COOLER-----	102

3 CLUTCH,BRAKE,STEERING

FIG 302 FLYWHEEL & CLUTCH-----	108
FIG 303 BRAKE PEDAL-----	110
FIG 304 BRAKE-----	112
FIG 306 FRONT WHEEL MOUNTING-----	114
FIG 307 REAR WHEEL MOUNTING-----	116
FIG 308 STEERING WHEEL-----	118
FIG 309 STEERING VALVE & PARKING-----	120
FIG 310 STEERING CYLINDER-----	122

4 TRANSMISSION & REAR AXLE

FIG 401 TRANSMISSION FRONT CASE-----	128
FIG 402 HST-----	130
FIG 403 MID CASE-----	132
FIG 404 4WD DRIVE GEAR-----	134
FIG 405 INPUT GEAR-----	136
FIG 406 SUB CHANGE GEARS-----	138
FIG 407 PINION GEARS-----	140

FIG 408 P.T.O DRIVE SHAFT-----	142
FIG 409 P.T.O CHANGE GEARS-----	144
FIG 410 DIFF LOCK-----	146
FIG 411 TRANSMISSION REAR CASE-----	148
FIG 412 REAR AXLE HOUSINGS (1)-----	150
FIG 413 REAR AXLE HOUSINGS (2)-----	152
FIG 415 SUB CHANGE LEVER-----	154
FIG 416 FORWARD & REVERSE CONTROL LINKAGE-----	156
FIG 418 4WD CHANGE LEVER-----	158

5 FRONT AXLE

FIG 501 FRONT AXLE BRACKET-----	164
FIG 502 FRONT DIFFERENTIAL GEARS & SHAFT-----	166
FIG 503 FRONT AXLE HOUSING-----	168
FIG 504 FRONT GEAR CASE (1)-----	170
FIG 505 FRONT GEAR CASE (2)-----	172

6 HYDRAULICS & 3-POINT LINK

FIG 601 GEAR PUMP-----	178
FIG 602 CYLINDER CASE-----	180
FIG 603 LIFT ARM-----	182
FIG 604 CYLINDER-----	184
FIG 605 POSITION LINK (1)-----	186
FIG 606 POSITION LINK (2)-----	188
FIG 607 CONTROL VALVE-----	190
FIG 608 POSITION LEVER-----	192
FIG 609 HYDRAULIC PIPE (1)-----	194
FIG 610 HYDRAULIC PIPE (2)-----	198
FIG 611 EXTERIOR HYD.VALVE-----	200

FIG 612 3-POINT LINK-----	202
FIG 613 HITCH & COVER-----	204
FIG 614 EXTERIOR POSITION LEVER-----	206

7

SHEET METAL & R.O.P.S

FIG 701 HOOD FRAME-----	212
FIG 702 HOOD-----	214
FIG 703 EXTENSION COVER-----	216
FIG 704 FENDER & REAR FRAME-----	218
FIG 705 DASH PANEL-----	220
FIG 706 FLOOR PANEL-----	222
FIG 707 SEAT-----	224
FIG 708 FRONT & REAR MOUNTING-----	226
FIG 709 ROPS-----	228

8

ELECTRICALS & HARNESS

FIG 801 BATTERY & MOUNTING-----	234
FIG 802 LAMP-----	236
FIG 803 INSTRUMENT PANEL-----	238
FIG 804 ELECTRIC SYSTEM-----	240
FIG 805 HARNESS -----	242

9

WEIGHT,LABEL,TOOLS

FIG 901 TOOL & ACCESSORY-----	248
FIG 902 LABEL-----	250
FIG 903 OPTION-----	254
FIG 904 EXTERIOR HYD. VALVE (4PORT KIT-OPTION)-----	254-1
FIG 905 WEIGHT (AUZ ONLY)-----	254-2

10

NUMERICAL INDEX

ENGINE-----	259
CHASSIS-----	262

ENGINE

1 ENGINE

FIG 101 CYLINDER BLOCK	04
FIG 102 OILJET ASS'Y OPTION	06
FIG 103 CRANK SHAFT	08
FIG 104 PISTON	10
FIG 105 CYLINDER HEAD	12
FIG 106 ROCKER LEVER	14
FIG 107 HEAD COVER	16
FIG 108 GEAR CASE	18
FIG 109 IDLE GEAR	20
FIG 110 CAM SHAFT	22
FIG 111 OIL PUMP	24
FIG 112 HYD. PUMP DRIVE	26
FIG 113 2ND BALANCE	28
FIG 114 OIL PAN	30
FIG 115 INTAKE MANIFOLD	32
FIG 116 EXHAUST MANIFOLD	34
FIG 117 DPF SUPPORT OPTION	36
FIG 118 TURBOCHARGER PLUMBING OPTION	38
FIG 119 BREATHER	40
FIG 120 FUEL INJECTION PUMP	42
FIG 121 FUEL INJECTION VALVE	44
FIG 122 FUEL PIPE ASS'Y	46
FIG 123 OIL FILTER	48
FIG 124 OIL COOLER	50
FIG 125 OIL GAUGUE	52
FIG 126 OIL FILLER CAP	54
FIG 127 COOLING WATER PUMP	56
FIG 128 CRANK SHAFT PULLEY	58
FIG 129 V-PULLEY	60
FIG 130 COOLING FAN	62
FIG 131 FLYWHEEL HOUSING	64

FIG 132 FLYWHEEL	66
FIG 133 GLOW PLUG ASS'Y OPTION	68
FIG 134 STARTING MOTOR	70
FIG 135 FUEL FILTER BRACKET ASSoY	72
FIG 136 ALTERNATOR	74
FIG 137 V-BELT	76
FIG 138 FUEL FILTER	78
FIG 139 DPF SUPPORT	80
FIG 140 DATAPLATE	82
FIG 141 NAME PLATE, STARTING MOTOR	84
FIG 142 DPF ASSoY	86
FIG 143 LIFT ASSoY	88

CHASSIS

2 ENGINE ACCESSORIES & CONTROL

FIG 201 AIR CLEANER-----	94
FIG 202 RADIATOR-----	96
FIG 203 MUFFLER-----	98
FIG 204 FUEL TANK & FILTER-----	100
FIG 205 OIL COOLER-----	102

3 CLUTCH,BRAKE,STEERING

FIG 302 FLYWHEEL & CLUTCH-----	108
FIG 303 BRAKE PEDAL-----	110
FIG 304 BRAKE-----	112
FIG 306 FRONT WHEEL MOUNTING-----	114
FIG 307 REAR WHEEL MOUNTING-----	116
FIG 308 STEERING WHEEL-----	118
FIG 309 STEERING VALVE & PARKING-----	120
FIG 310 STEERING CYLINDER-----	122

4

TRANSMISSION & REAR AXLE

FIG 401 TRANSMISSION FRONT CASE-----	128
FIG 402 HST-----	130
FIG 403 MID CASE-----	132
FIG 404 4WD DRIVE GEAR-----	134
FIG 405 INPUT GEAR-----	136
FIG 406 SUB CHANGE GEARS-----	138
FIG 407 PINION GEARS-----	140
FIG 408 P.T.O DRIVE SHAFT-----	142
FIG 409 P.T.O CHANGE GEARS-----	144
FIG 410 DIFF LOCK-----	146
FIG 411 TRANSMISSION REAR CASE-----	148
FIG 412 REAR AXLE HOUSINGS (1)-----	150
FIG 413 REAR AXLE HOUSINGS (2)-----	152
FIG 415 SUB CHANGE LEVER-----	154
FIG 416 FORWARD & REVERSE CONTROL LINKAGE-----	156
FIG 418 4WD CHANGE LEVER-----	158

5 FRONT AXLE

FIG 501 FRONT AXLE BRACKET-----	164
FIG 502 FRONT DIFFERENTIAL GEARS & SHAFT-----	166
FIG 503 FRONT AXLE HOUSING-----	168
FIG 504 FRONT GEAR CASE (1)-----	170
FIG 505 FRONT GEAR CASE (2)-----	172

6 HYDRAULICS & 3-POINT LINK

FIG 601 GEAR PUMP-----	178
FIG 602 CYLINDER CASE-----	180
FIG 603 LIFT ARM-----	182
FIG 604 CYLINDER-----	184
FIG 605 POSITION LINK (1)-----	186
FIG 606 POSITION LINK (2)-----	188
FIG 607 CONTROL VALVE-----	190
FIG 608 POSITION LEVER-----	192
FIG 609 HYDRAULIC PIPE (1)-----	194
FIG 610 HYDRAULIC PIPE (2)-----	198
FIG 611 EXTERIOR HYD.VALVE-----	200
FIG 612 3-POINT LINK-----	202
FIG 613 HITCH & COVER-----	204
FIG 614 EXTERIOR POSITION LEVER-----	206

7

SHEET METAL & R.O.P.S

FIG 701 HOOD FRAME-----	212
FIG 702 HOOD-----	214
FIG 703 EXTENSION COVER-----	216
FIG 704 FENDER & REAR FRAME-----	218
FIG 705 DASH PANEL-----	220
FIG 706 FLOOR PANEL-----	222
FIG 707 SEAT-----	224
FIG 708 FRONT & REAR MOUNTING-----	226
FIG 709 ROPS-----	228

8

ELECTRICALS & HARNESS

FIG 801 BATTERY & MOUNTING-----	234
FIG 802 LAMP-----	236
FIG 803 INSTRUMENT PANEL-----	238
FIG 804 ELECTRIC SYSTEM-----	240
FIG 805 HARNESS -----	242

9

WEIGHT,LABEL,TOOLS

FIG 901 TOOL & ACCESSORY-----	248
FIG 902 LABEL-----	250
FIG 903 OPTION-----	254
FIG 904 EXTERIOR HYD. VALVE (4PORT KIT-OPTION)-----	254-1
FIG 905 WEIGHT (AUZ ONLY)-----	254-2

ENGINE-----	259
CHASSIS-----	262

FIG 101

 
 
T474NH

CYLINDER BLOCK

P1

YEAR

2018

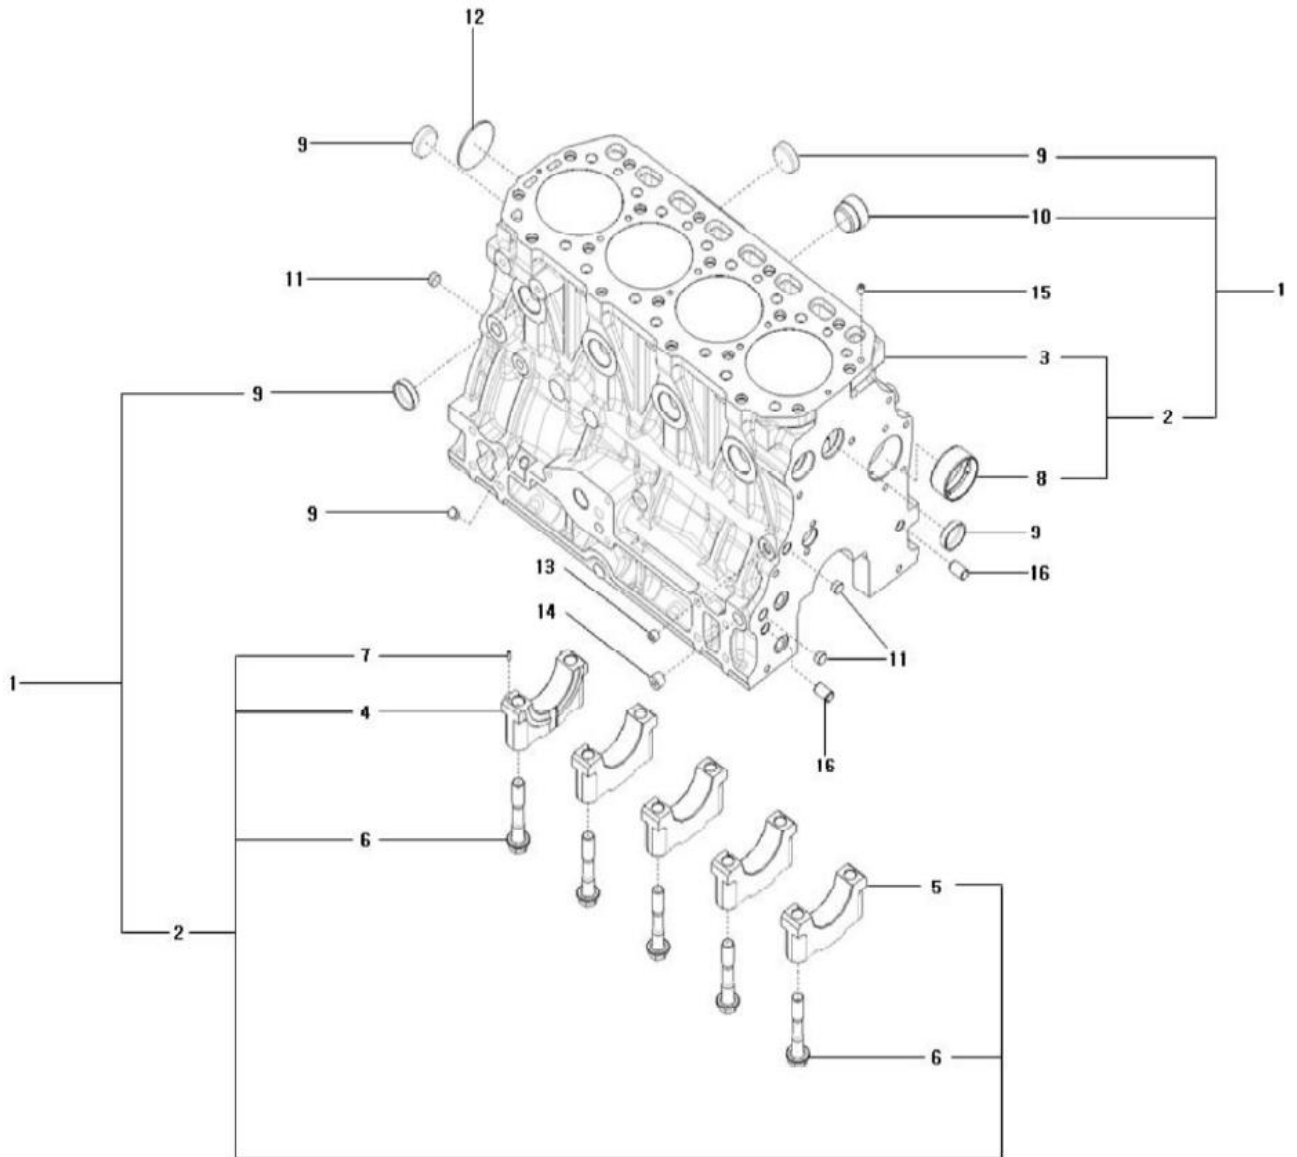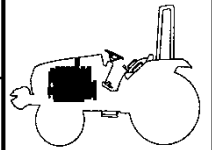

NOTE


FIG 102 T474NH	https://truckmanualshub.com/ OILJET ASS'Y OPTION	P1	YEAR 2018	
-------------------------------------	--	-----------	-------------------------	---

FIG 102 T474NH	https://truckmanualshub.com/ OILJET ASS'Y OPTION	P1	YEAR 2018	
-------------------------------------	--	-----------	-------------------------	---

FIG 102 T474NH	https://truckmanualshub.com/ OILJET ASS'Y OPTION	P1	YEAR 2018	
-------------------------------------	--	-----------	-------------------------	---

FIG 102 T474NH	https://truckmanualshub.com/ OILJET ASS'Y OPTION	P1	YEAR 2018	
-------------------------------------	--	-----------	-------------------------	---

FIG 102 T474NH	https://truckmanualshub.com/ OILJET ASS'Y OPTION	P1	YEAR 2018	
-------------------------------------	--	-----------	-------------------------	---

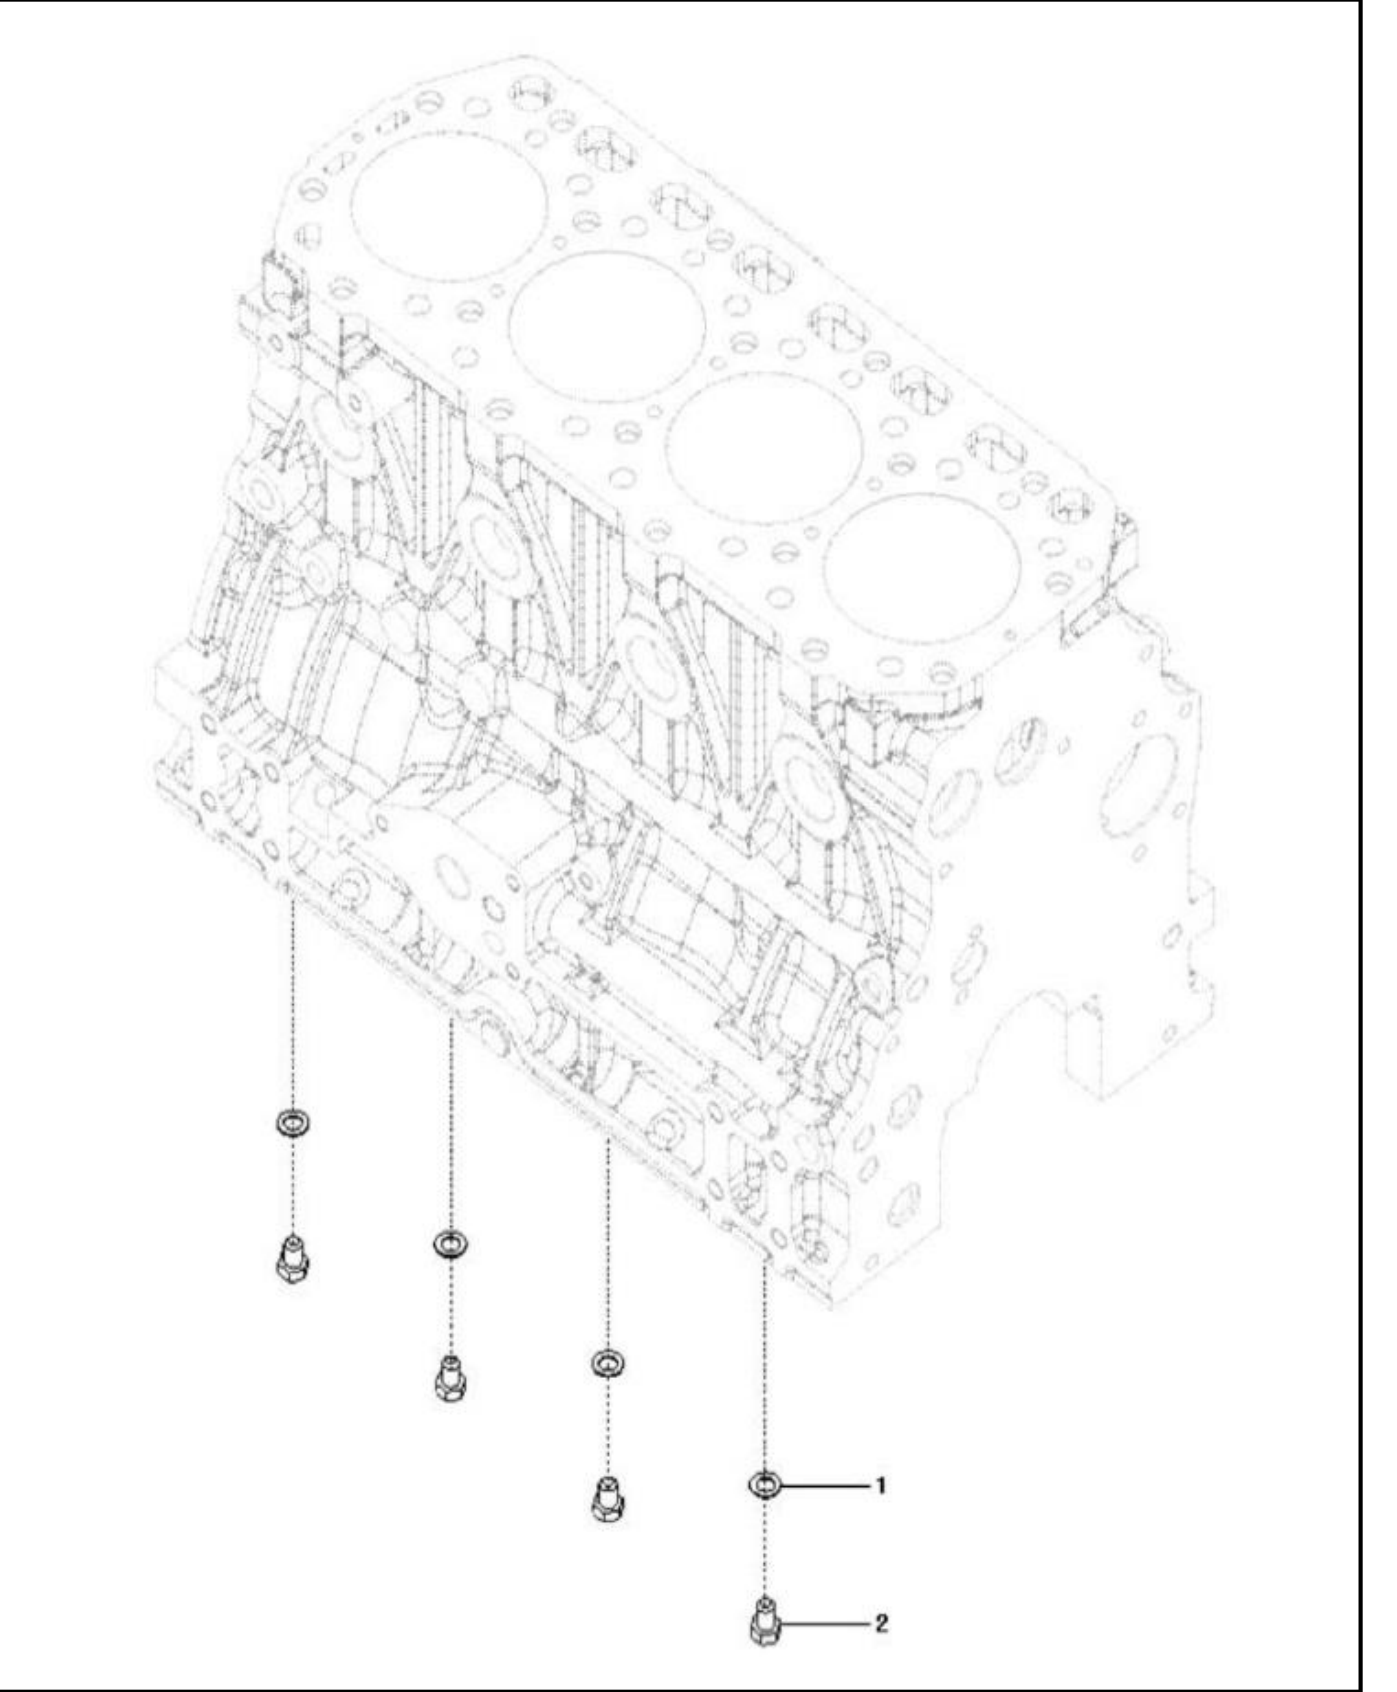 

NOTE	
------	--


FIG 103

CRANK SHAFT


P1

YEAR

 2018

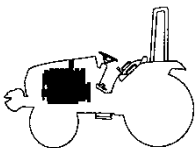

T474NH

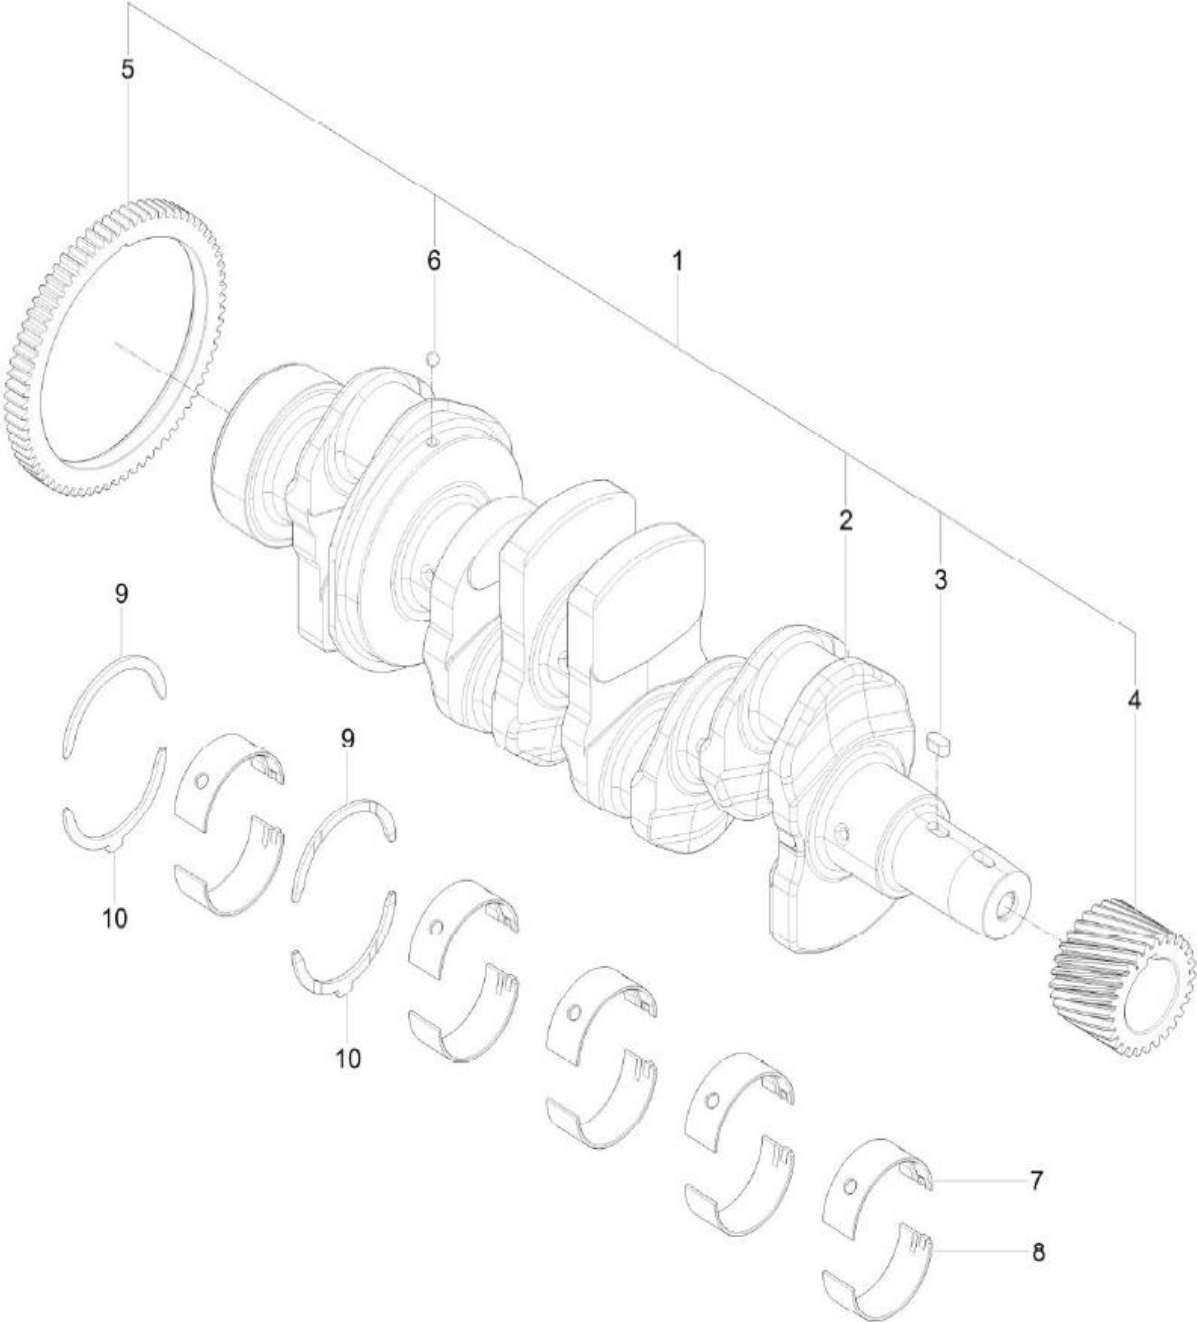 

NOTE


FIG 104

PISTON


P1

YEAR

 2018

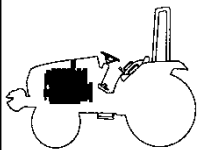

T474NH

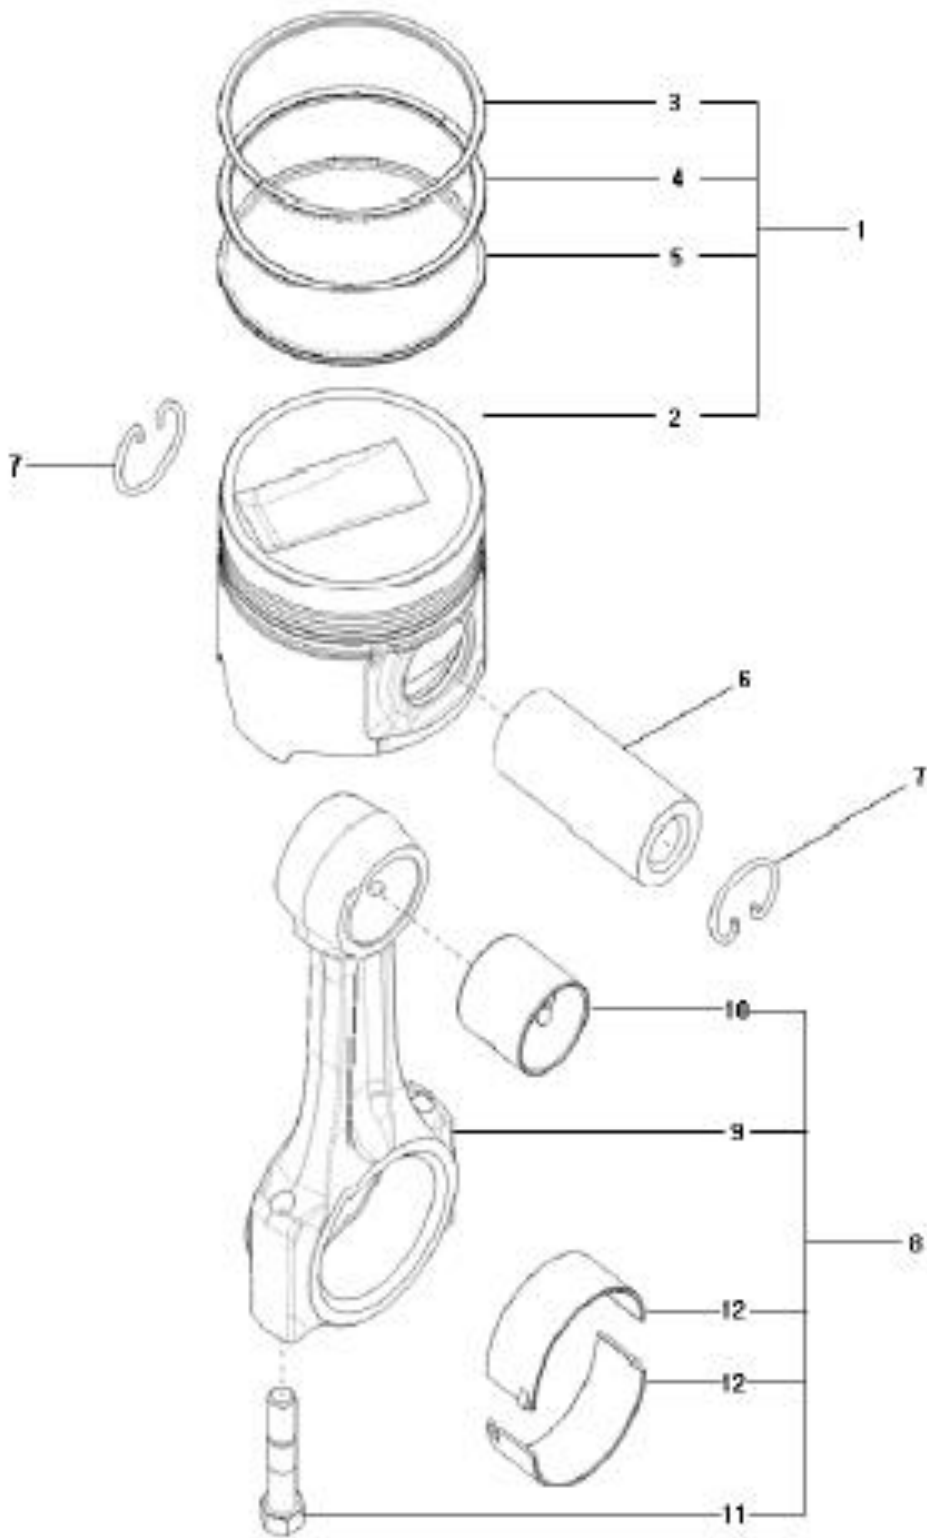 

NOTE


FIG 105

CYLINDER HEAD


P1

YEAR

 2018

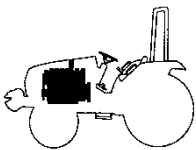

T474NH

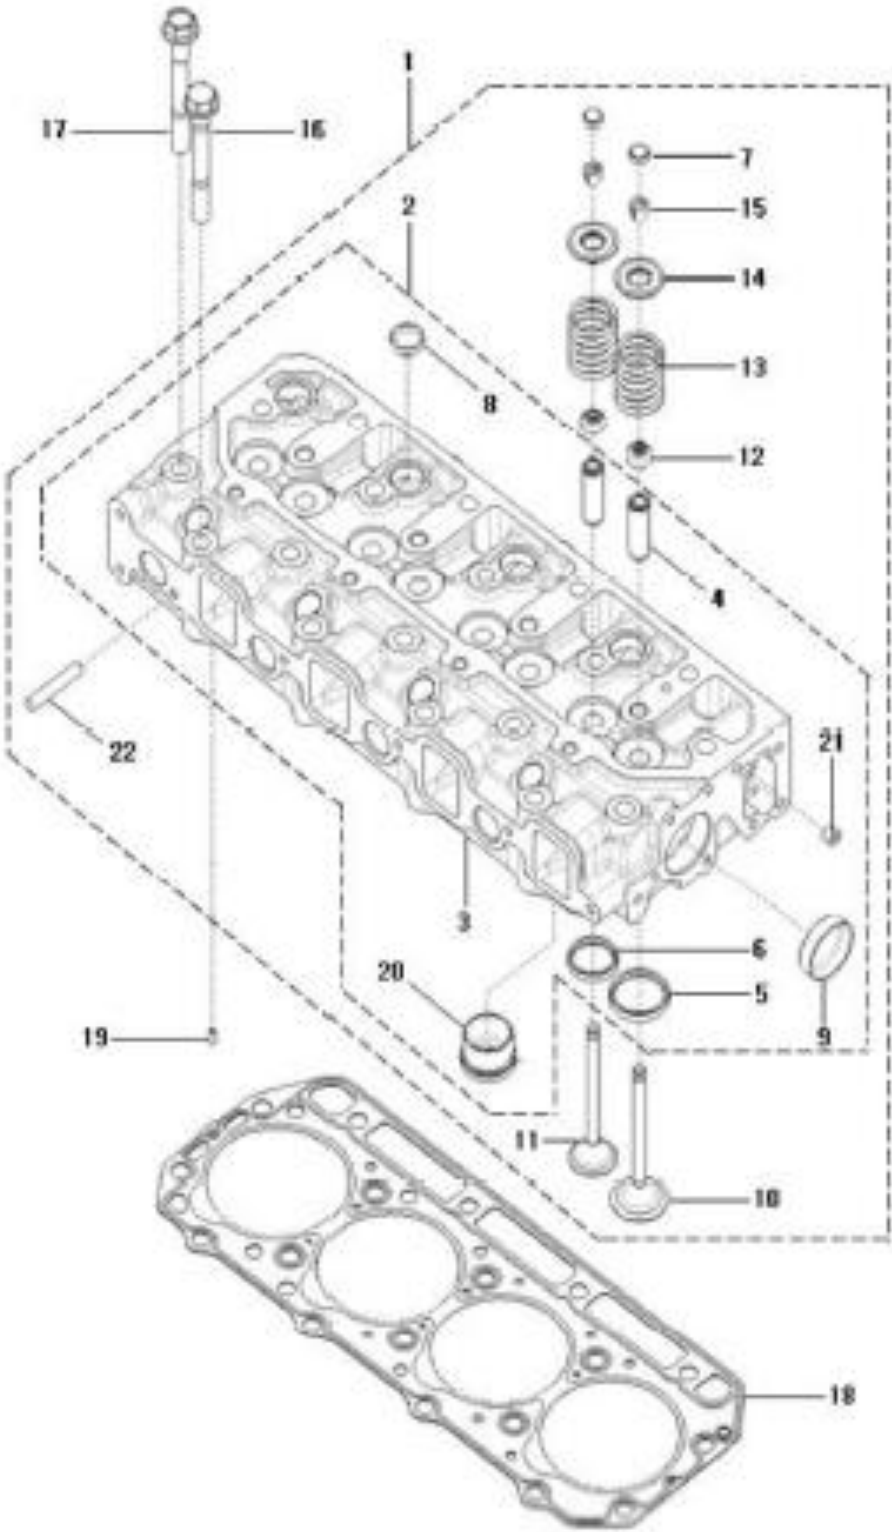 

NOTE


FIG 106

ROCKER LEVER


P1

YEAR

 2018

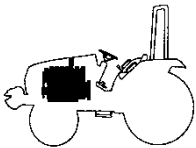

T474NH

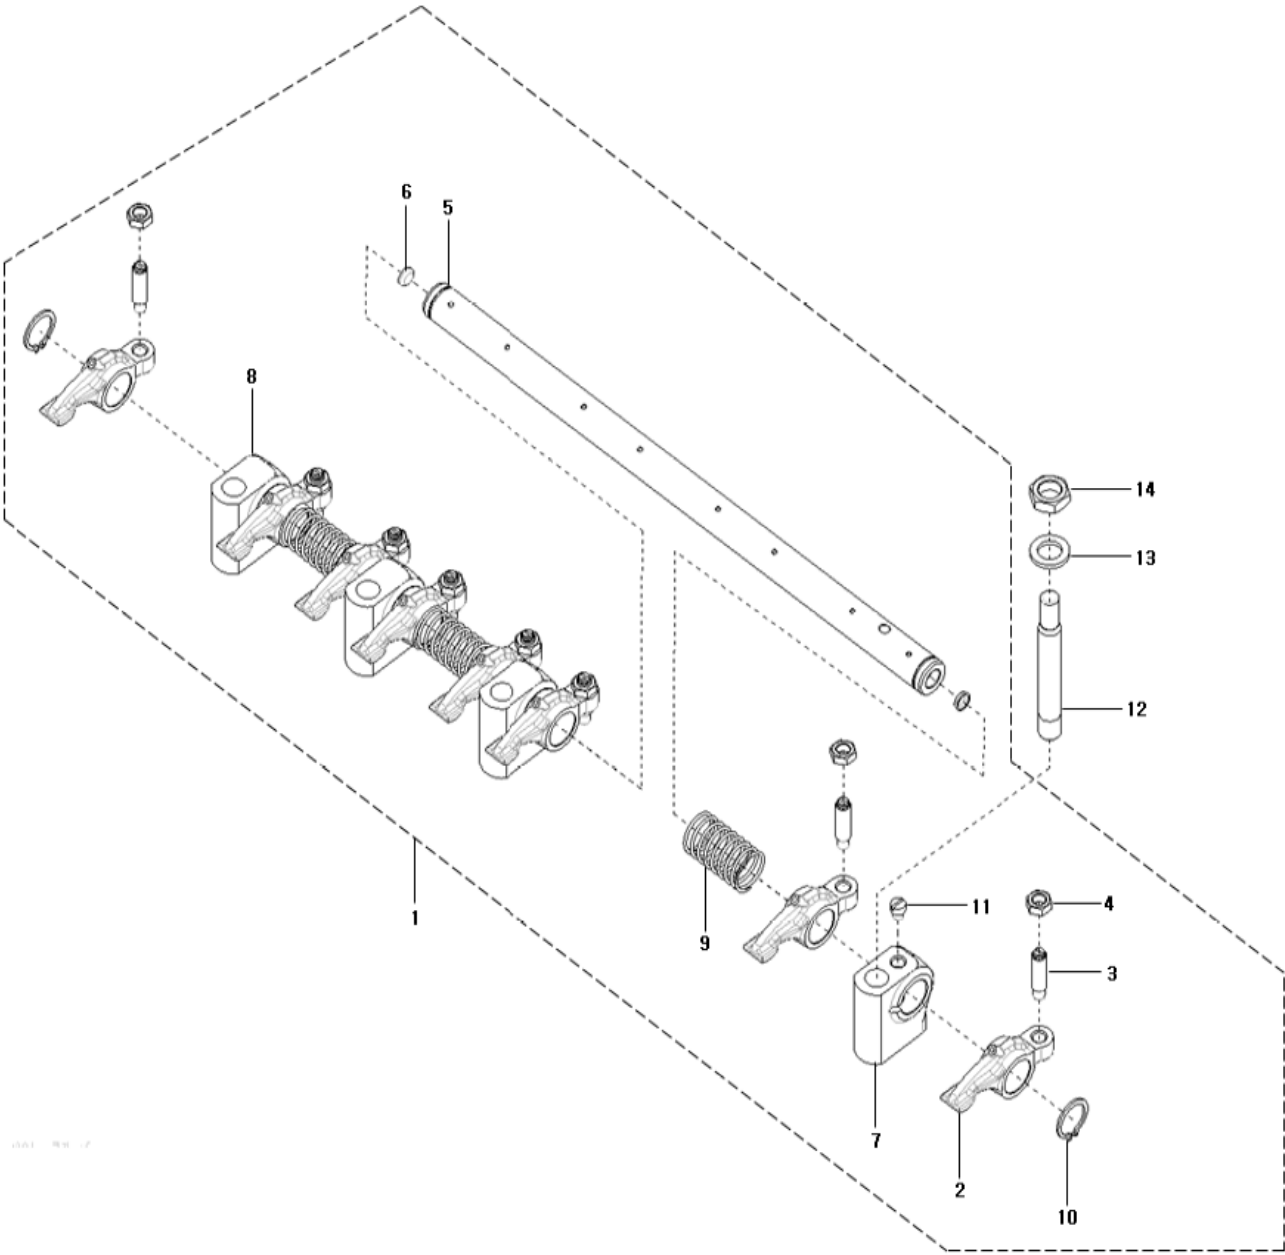 

NOTE


FIG 107

HEAD COVER


P1

YEAR

 2018

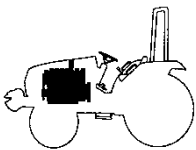

T474NH

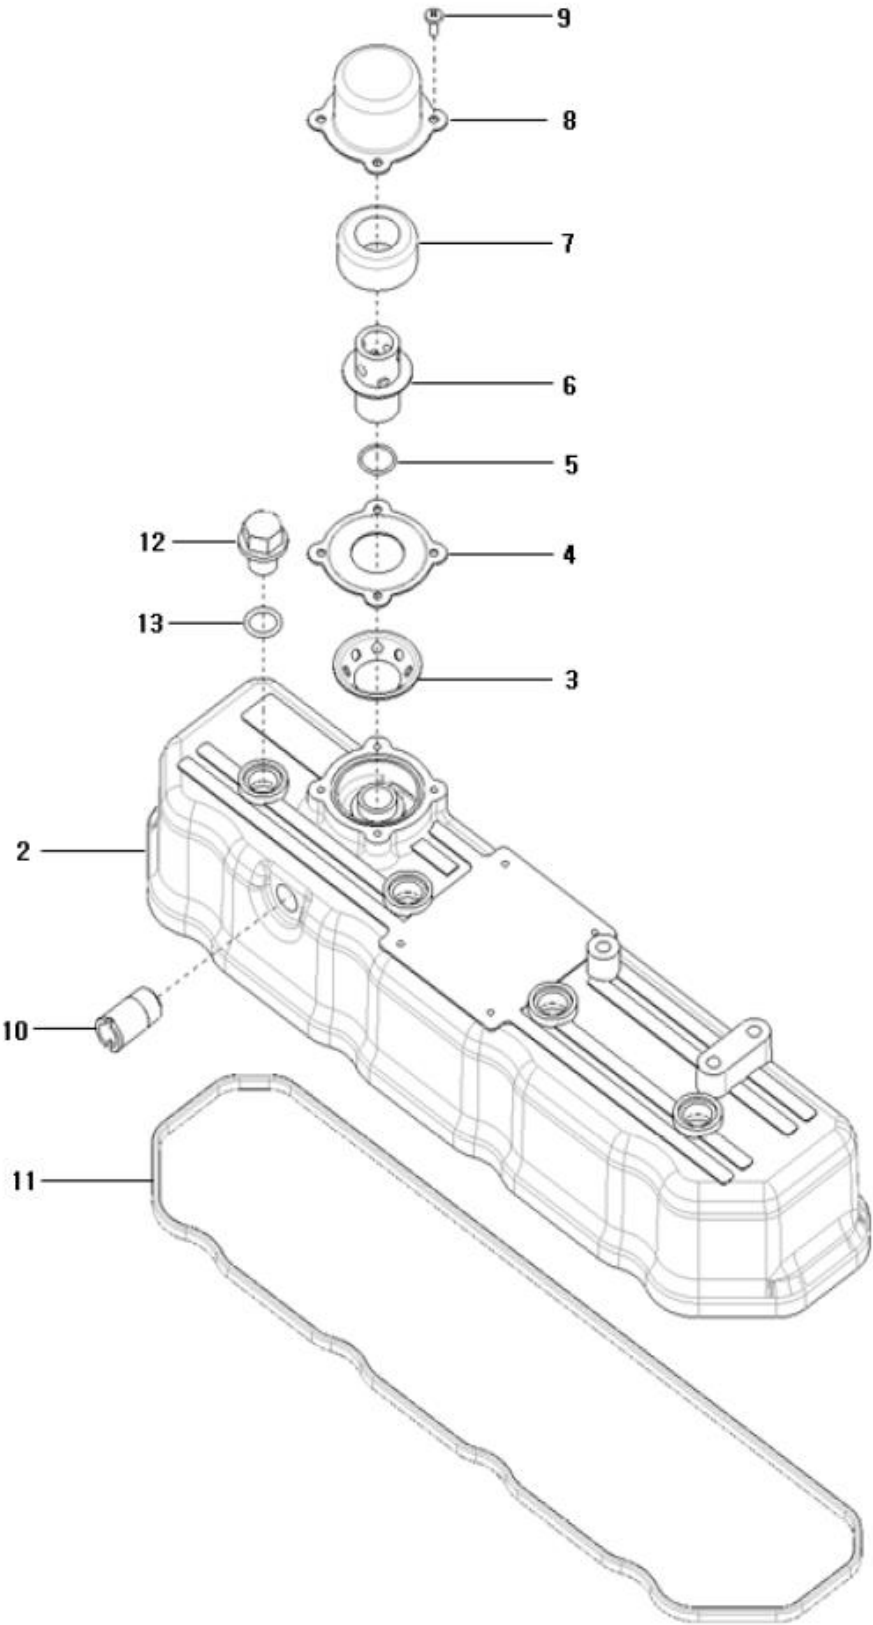 

NOTE


FIG 108

GEAR CASE


P1

YEAR

 2018

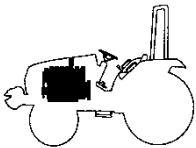

T474NH

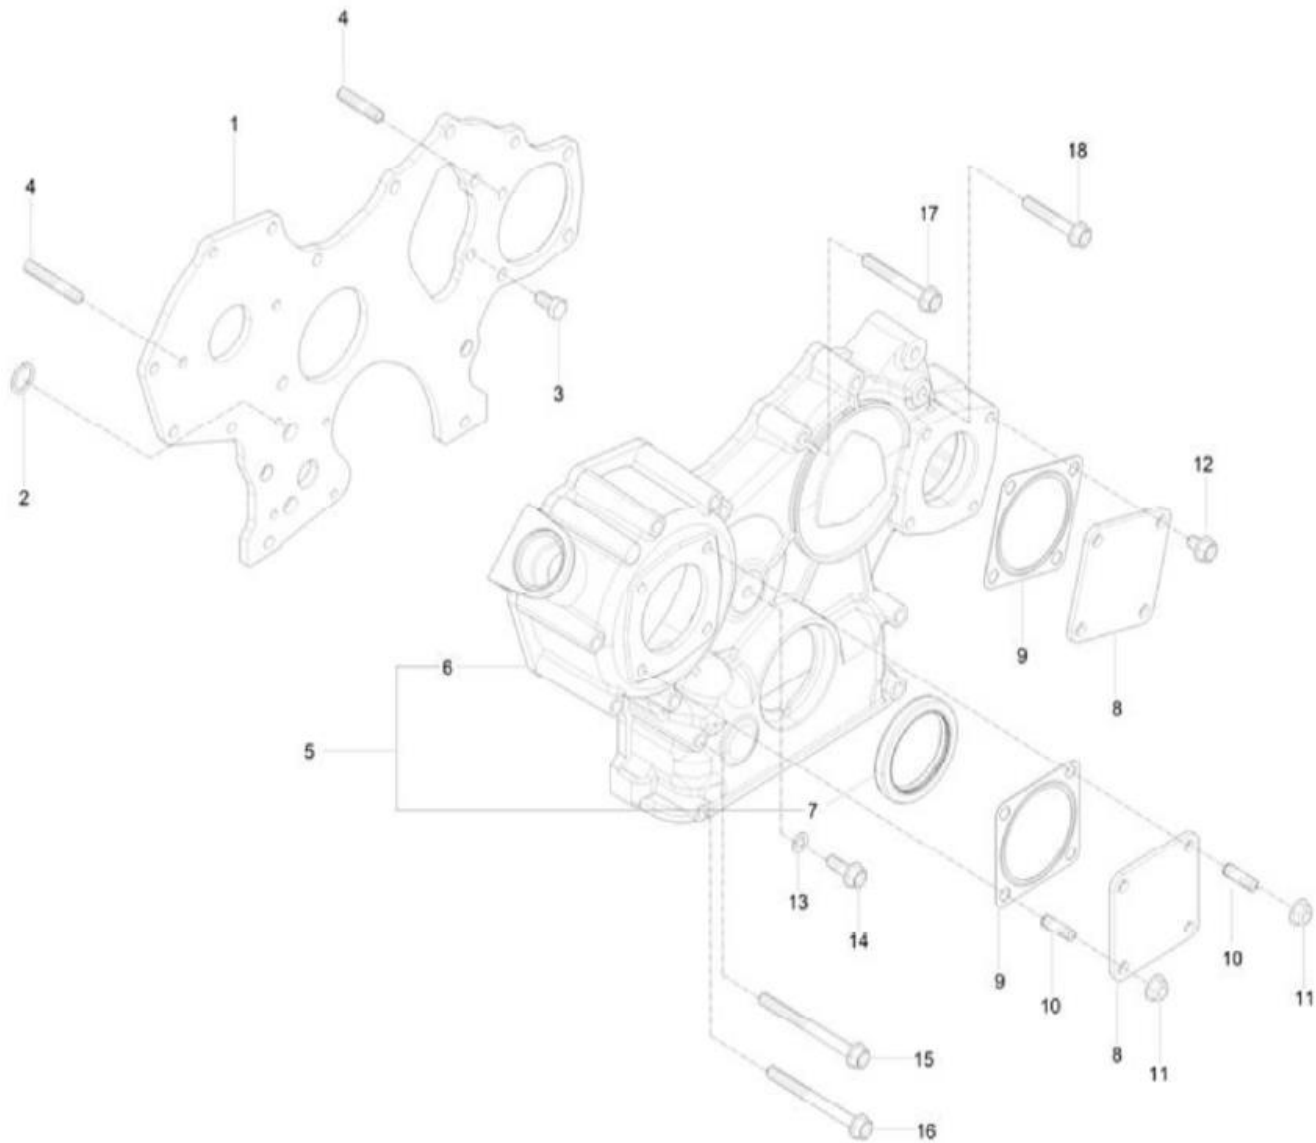 

NOTE

20


FIG 110

CAM SHAFT


P1

YEAR

 2018

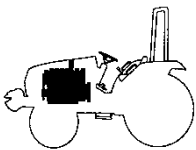

T474NH

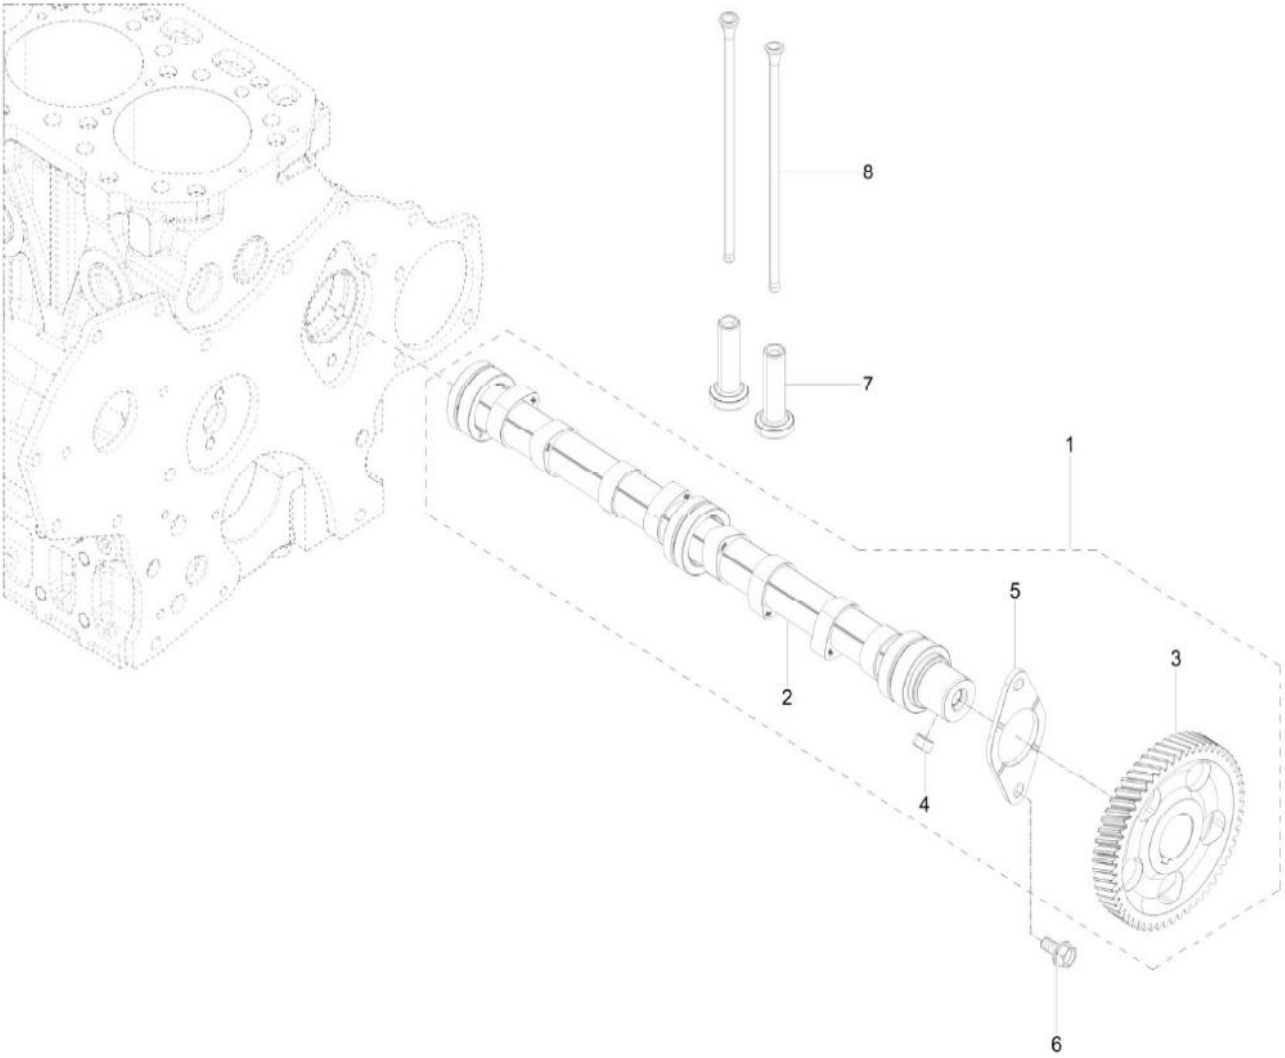 

NOTE


FIG 111

OIL PUMP


P1

YEAR

 2018

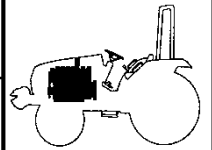

T474NH

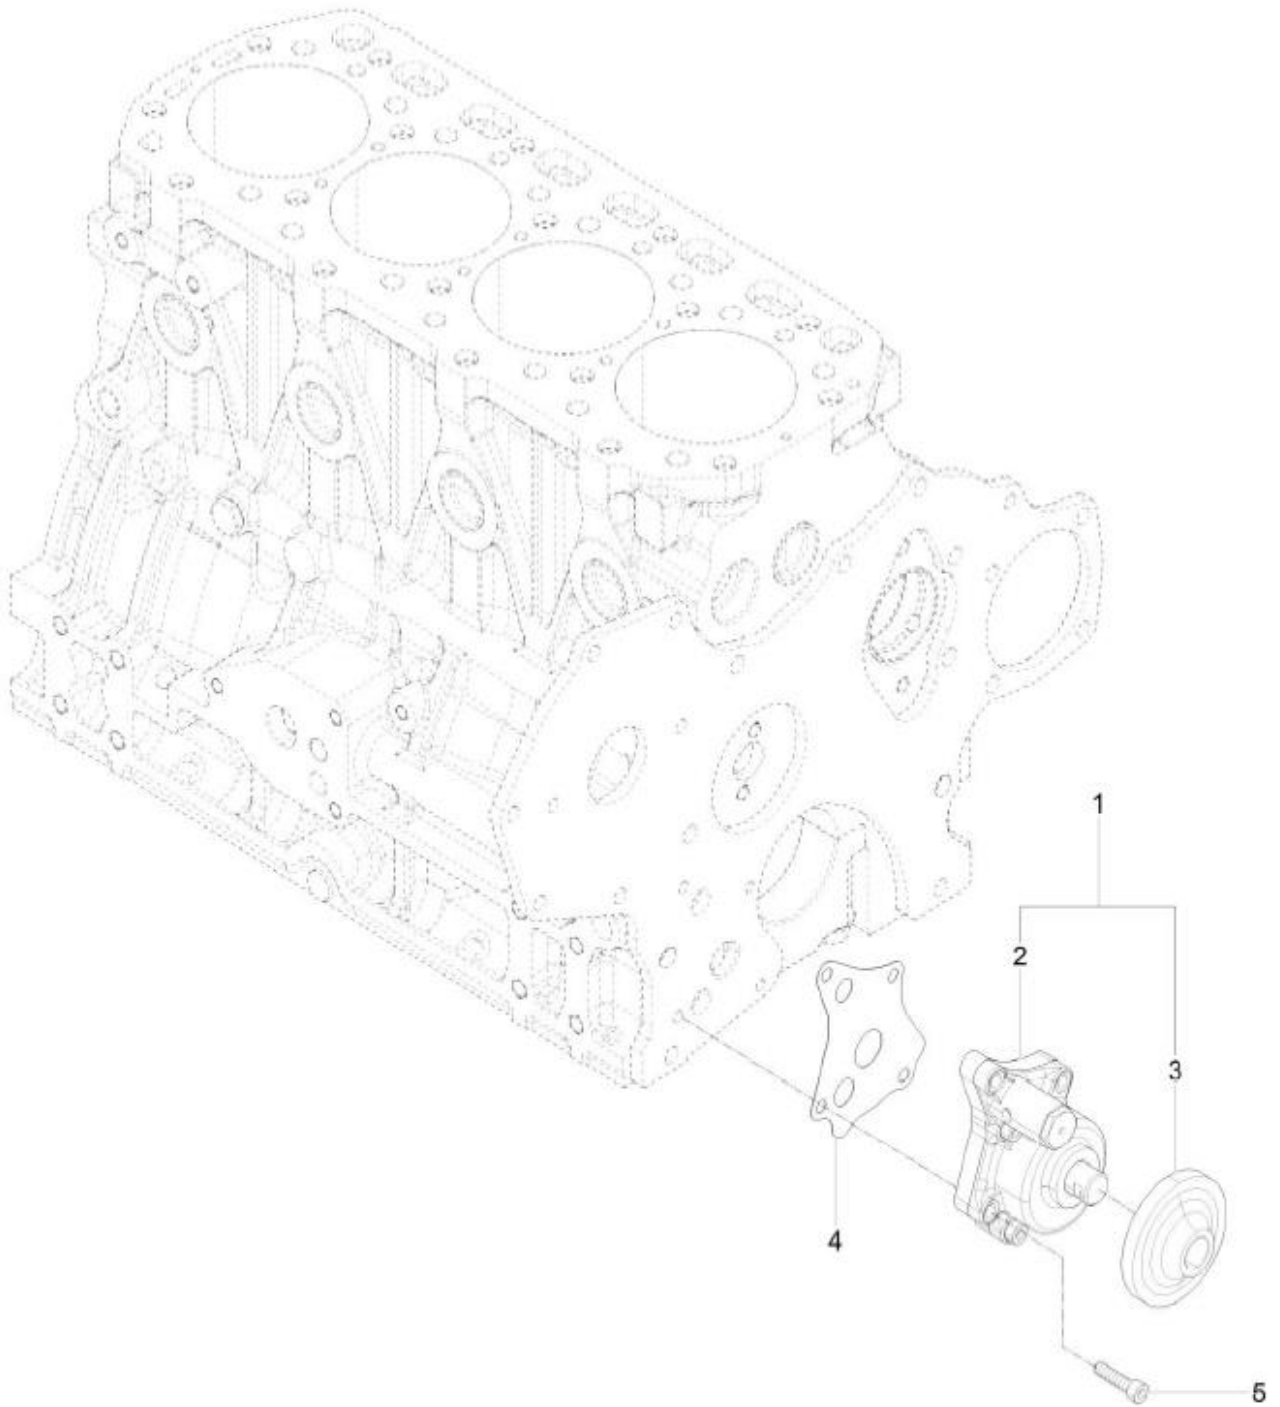 

NOTE


FIG 112

HYD. PUMP DRIVE


P1

YEAR

 2018

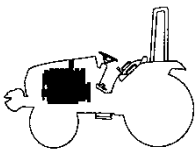

T474NH

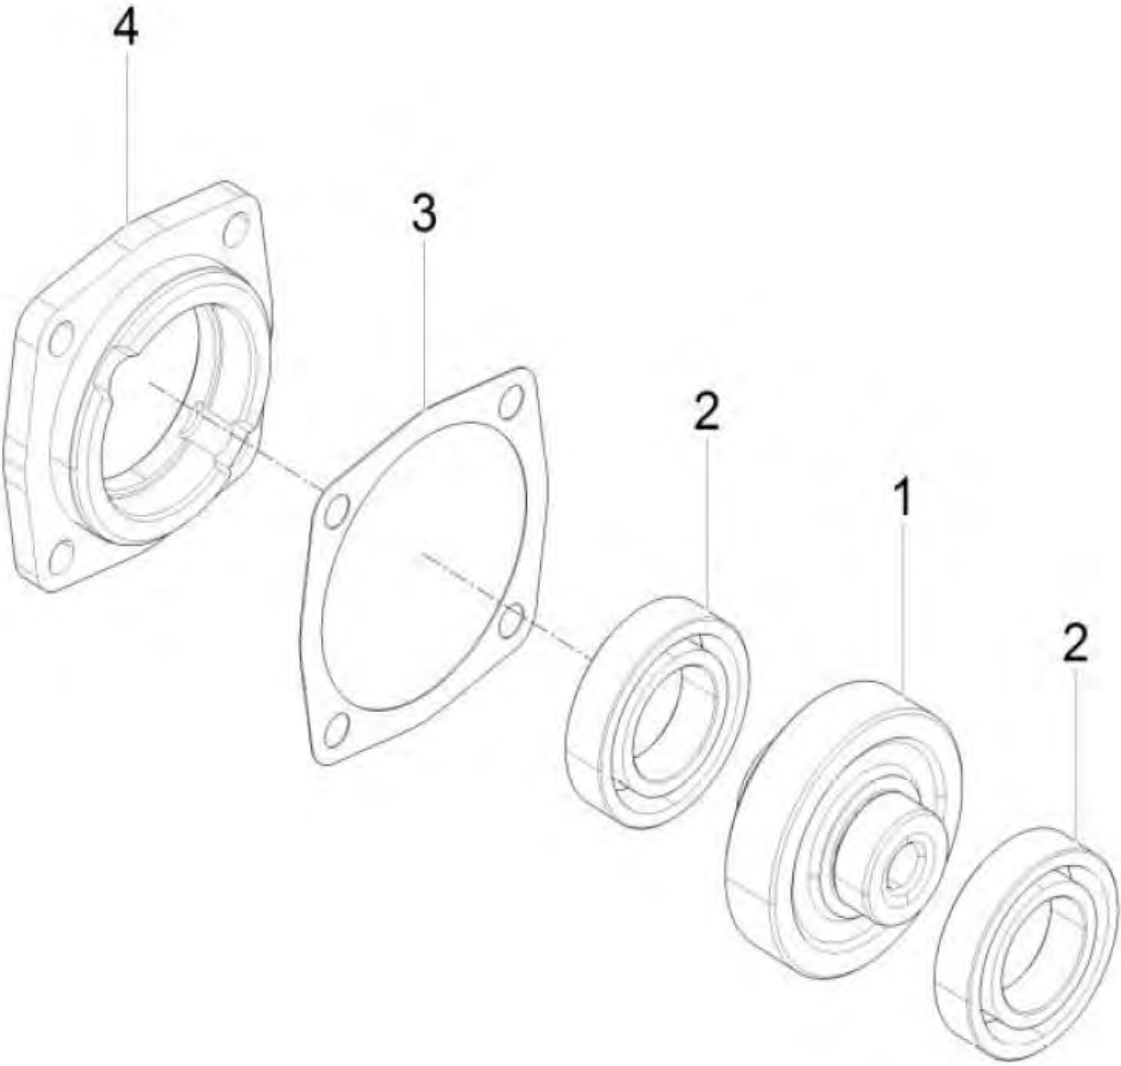 

NOTE


FIG 113

2ND BALANCE


P1

YEAR

 2018

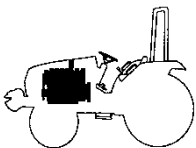

T474NH

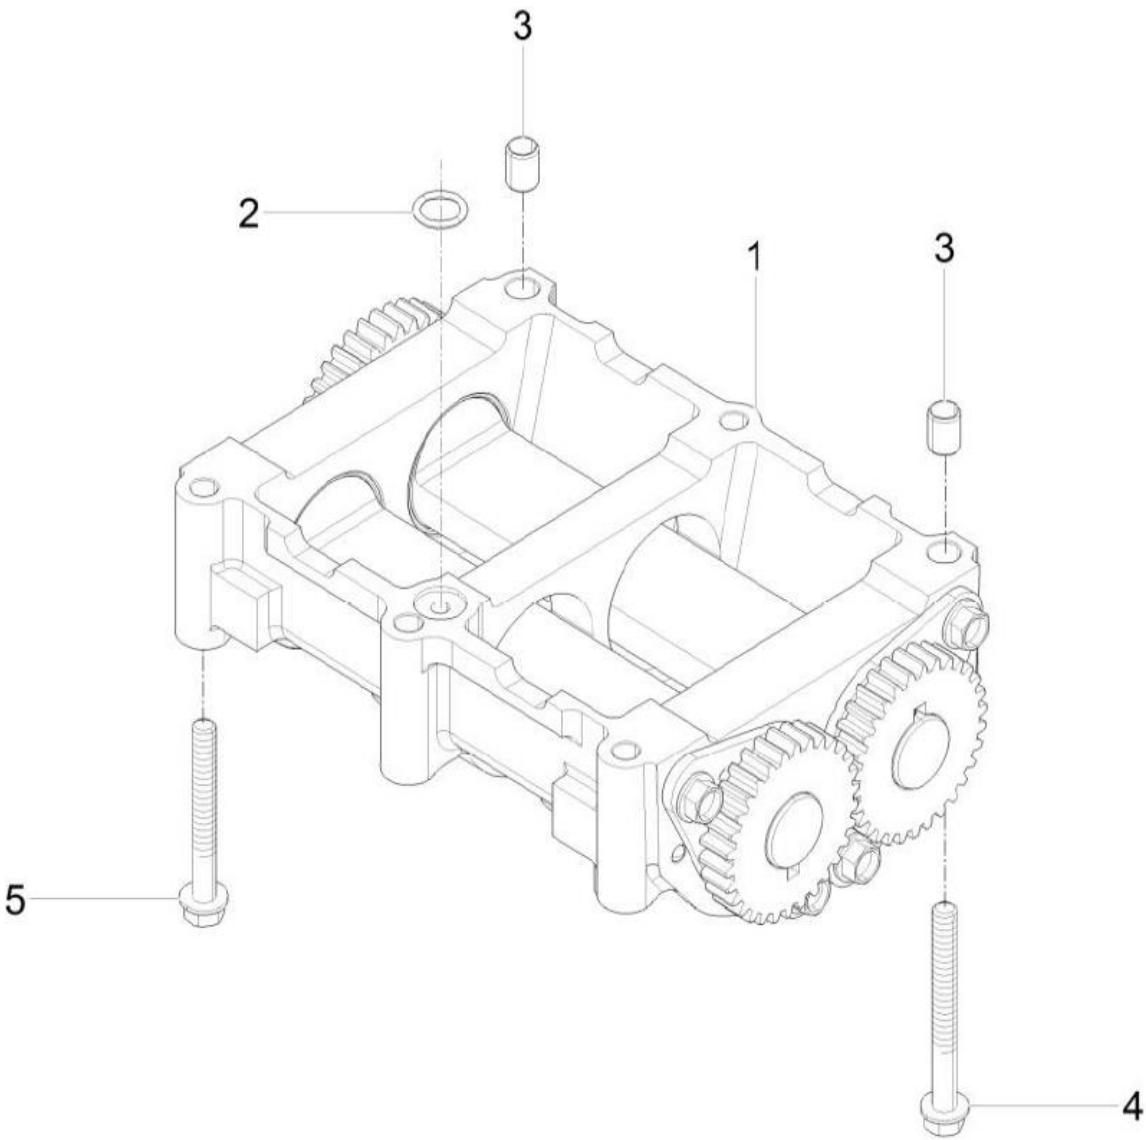 

NOTE


FIG 114

OIL PAN


P1

YEAR

 2018

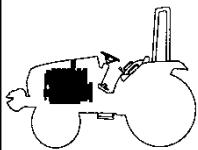

T474NH

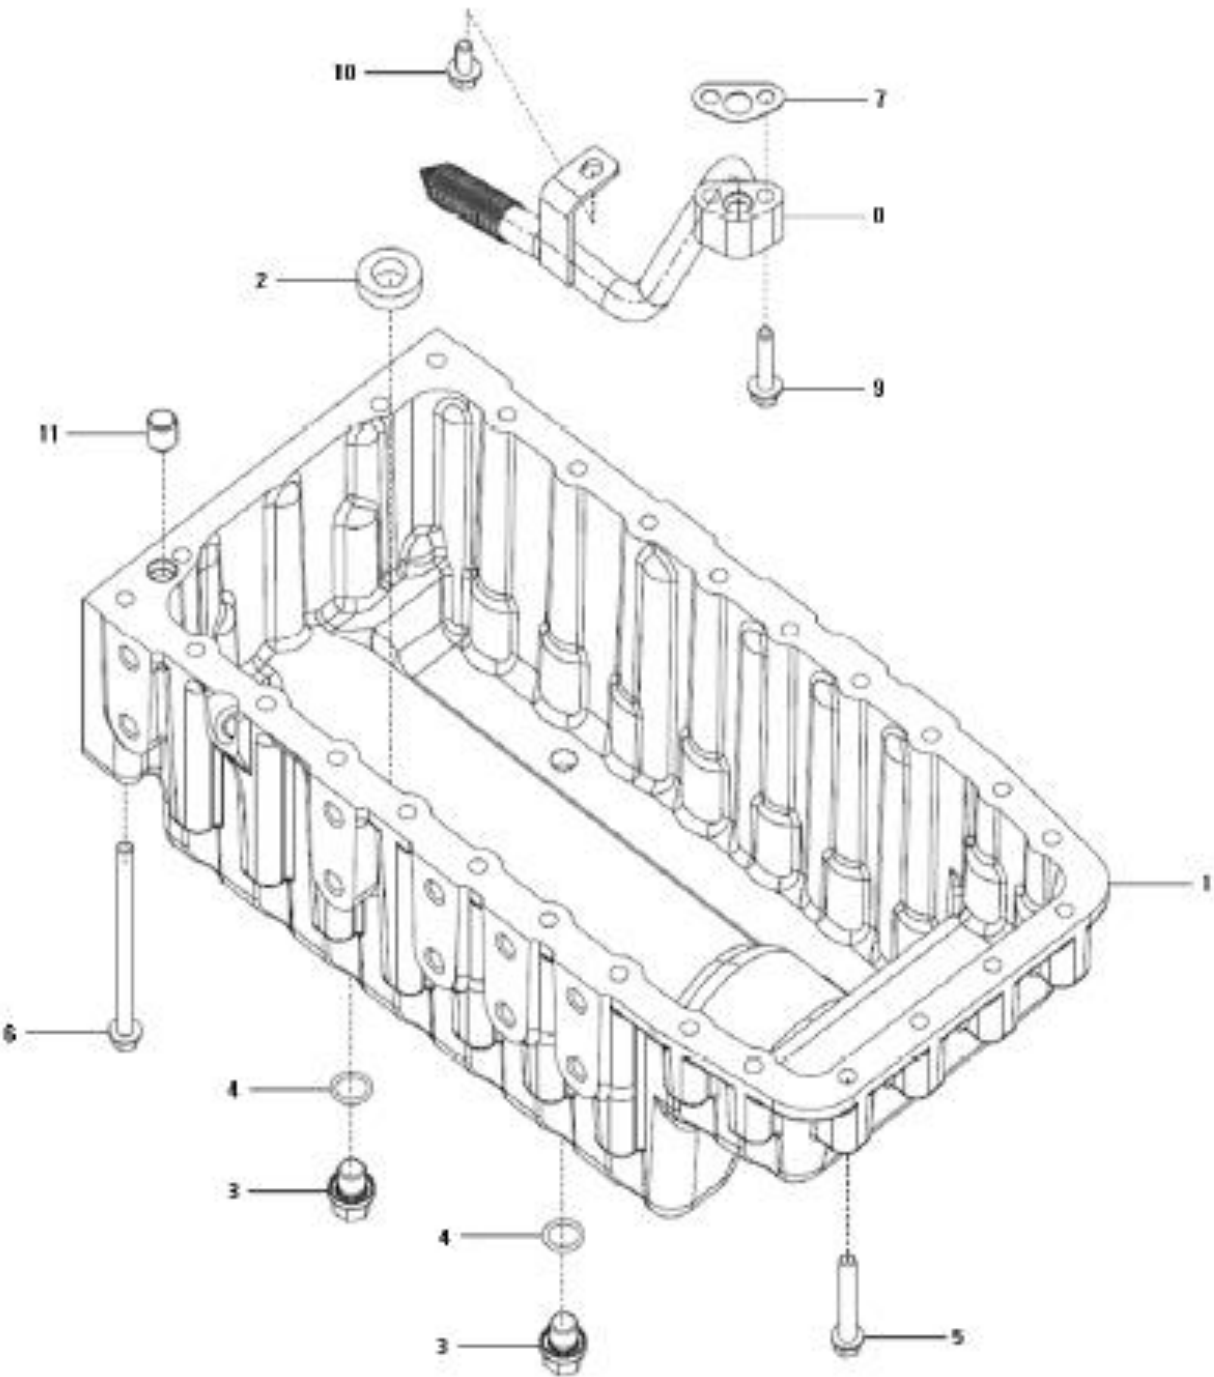 

NOTE


FIG 115

INTAKE MANIFOLD


P1

YEAR

 2018

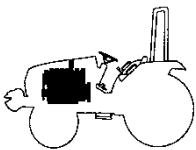

T474NH

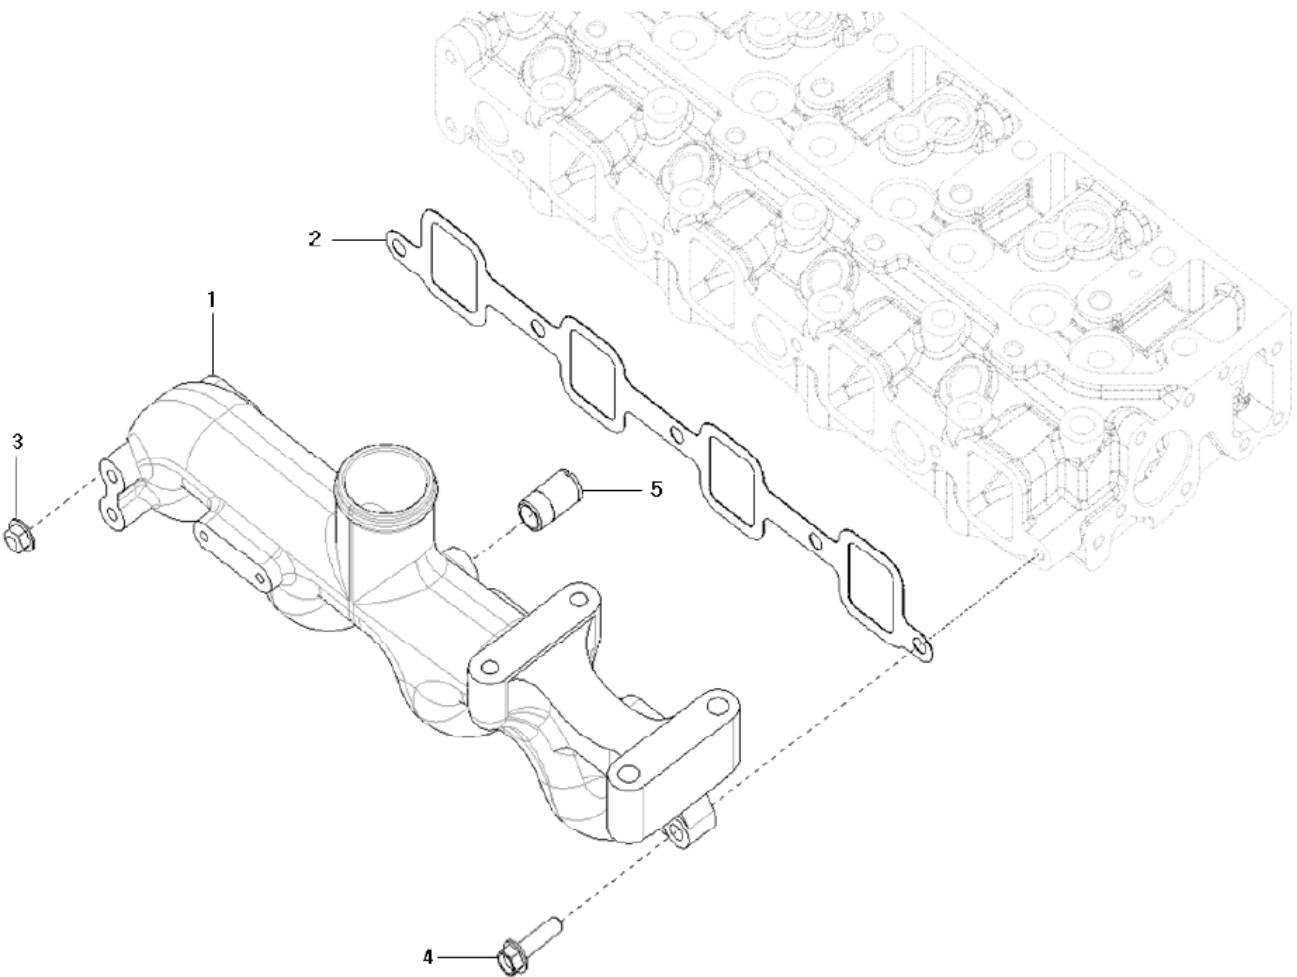 

NOTE


FIG 116

EXHAUST MANIFOLD


P1

YEAR

 2018

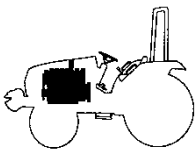

T474NH

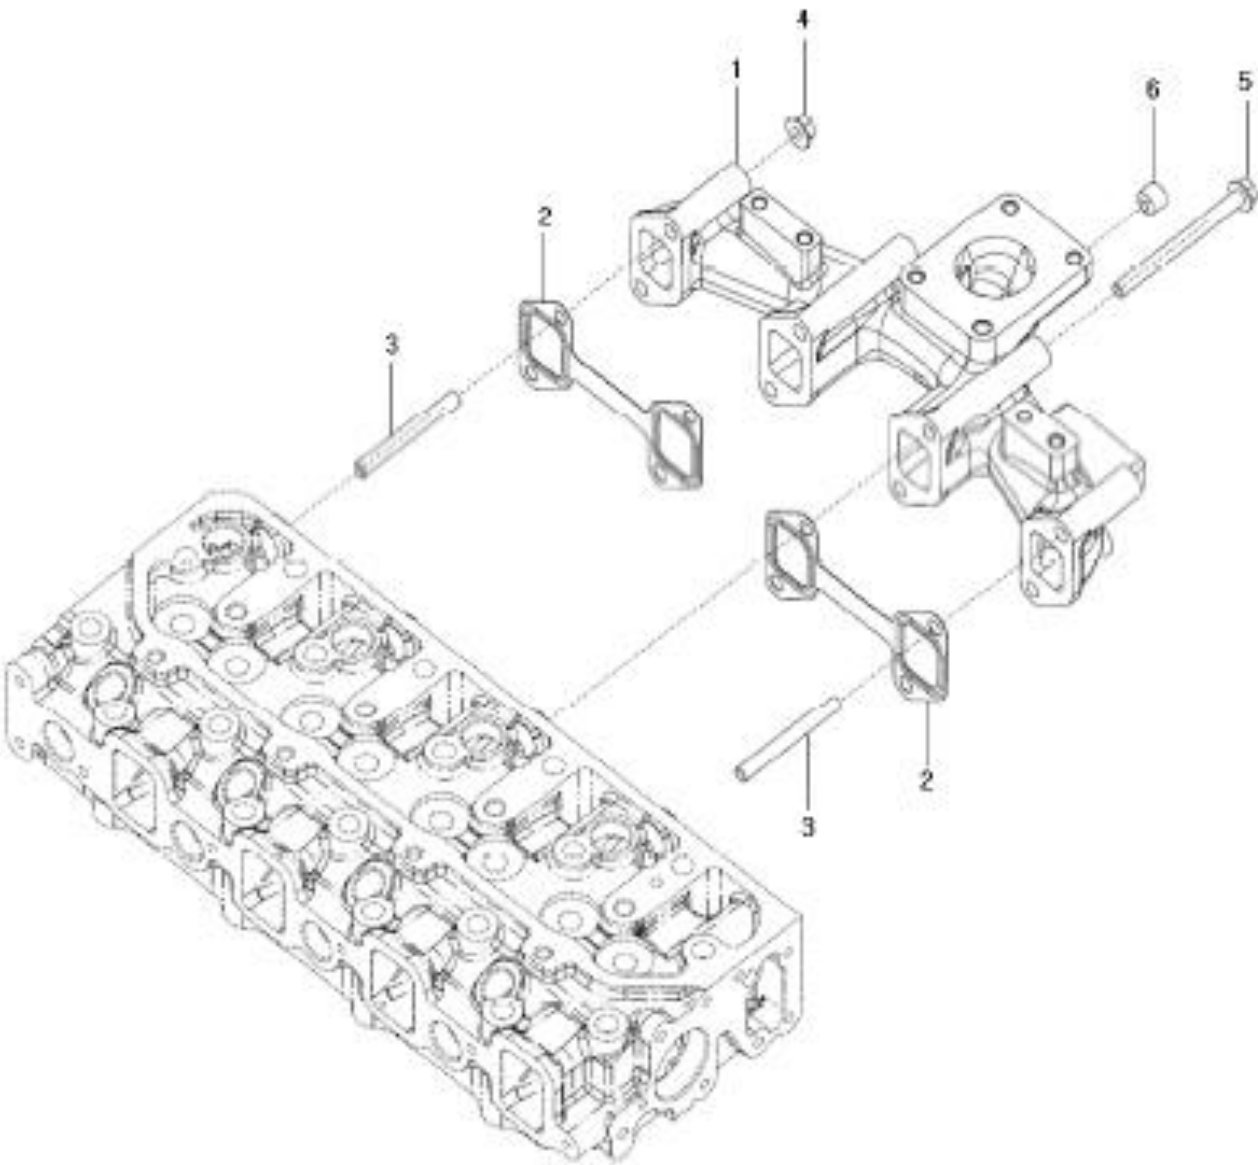 

NOTE


FIG 117

DPF SUPPORT OPTION


P1

YEAR

 2018

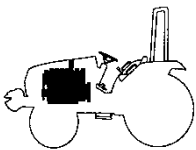

T474NH

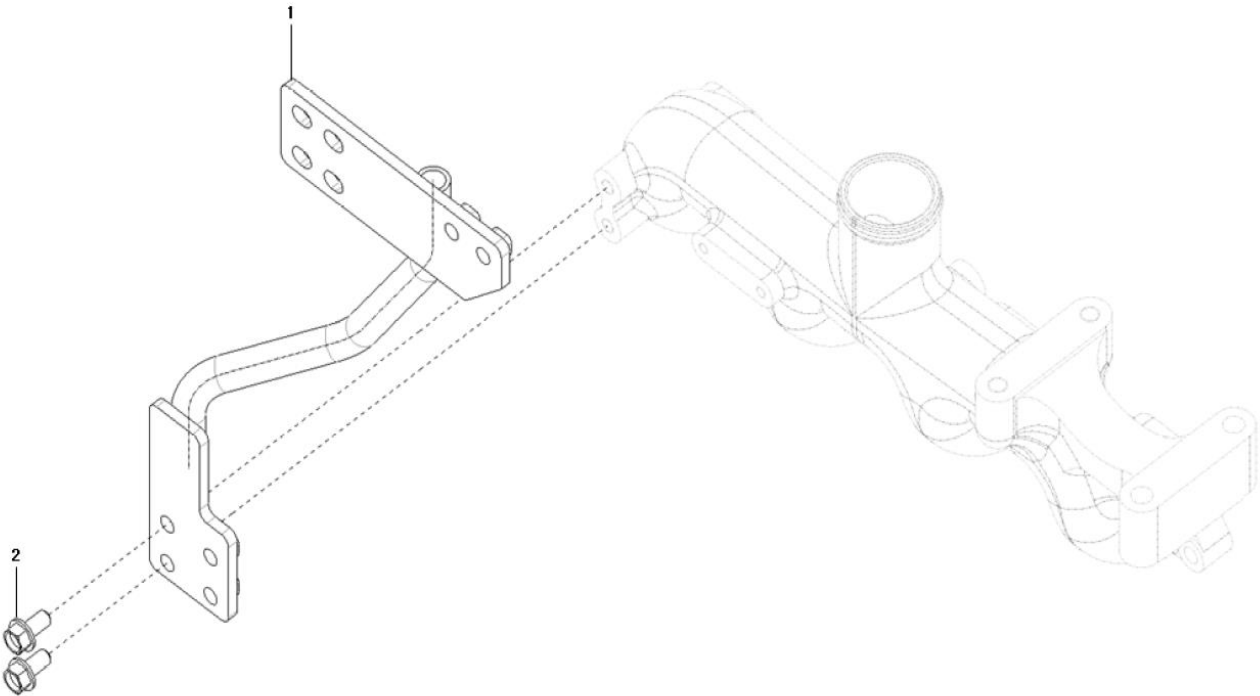 

NOTE


FIG 118

TURBOCHARGER PLUMBING OPTION


P1

YEAR

 2018

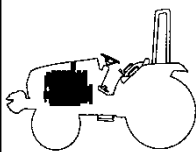

T474NH

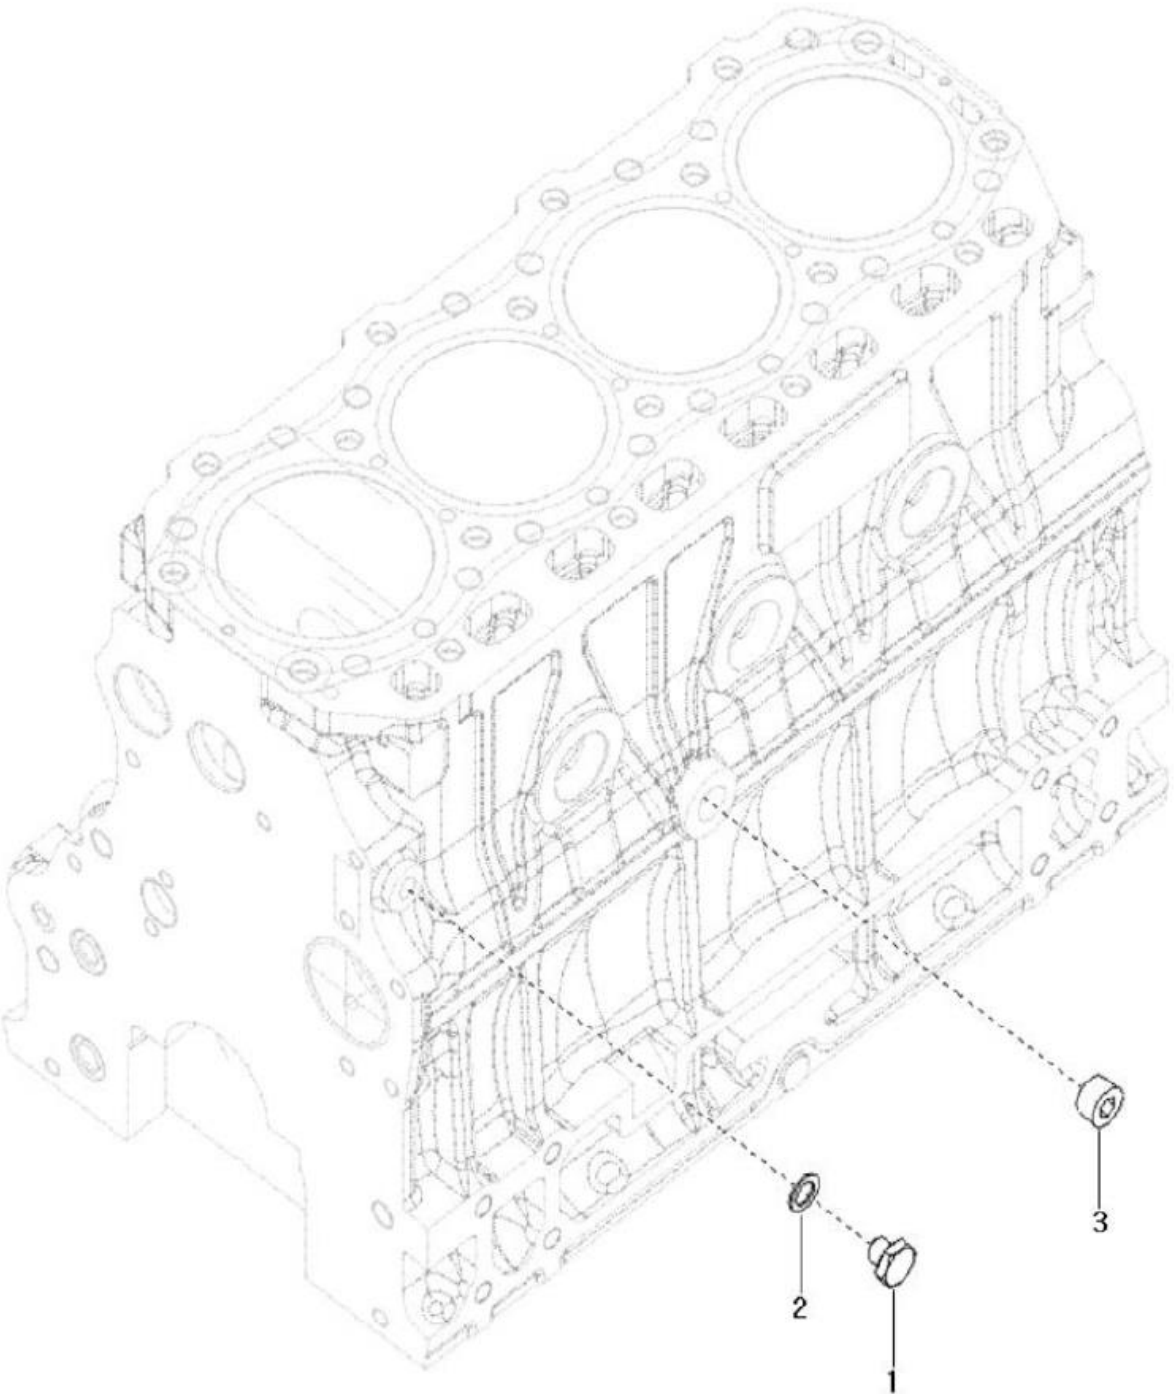 

NOTE


FIG 119

BREATHER


P1

YEAR

 2018

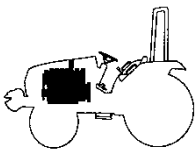

T474NH

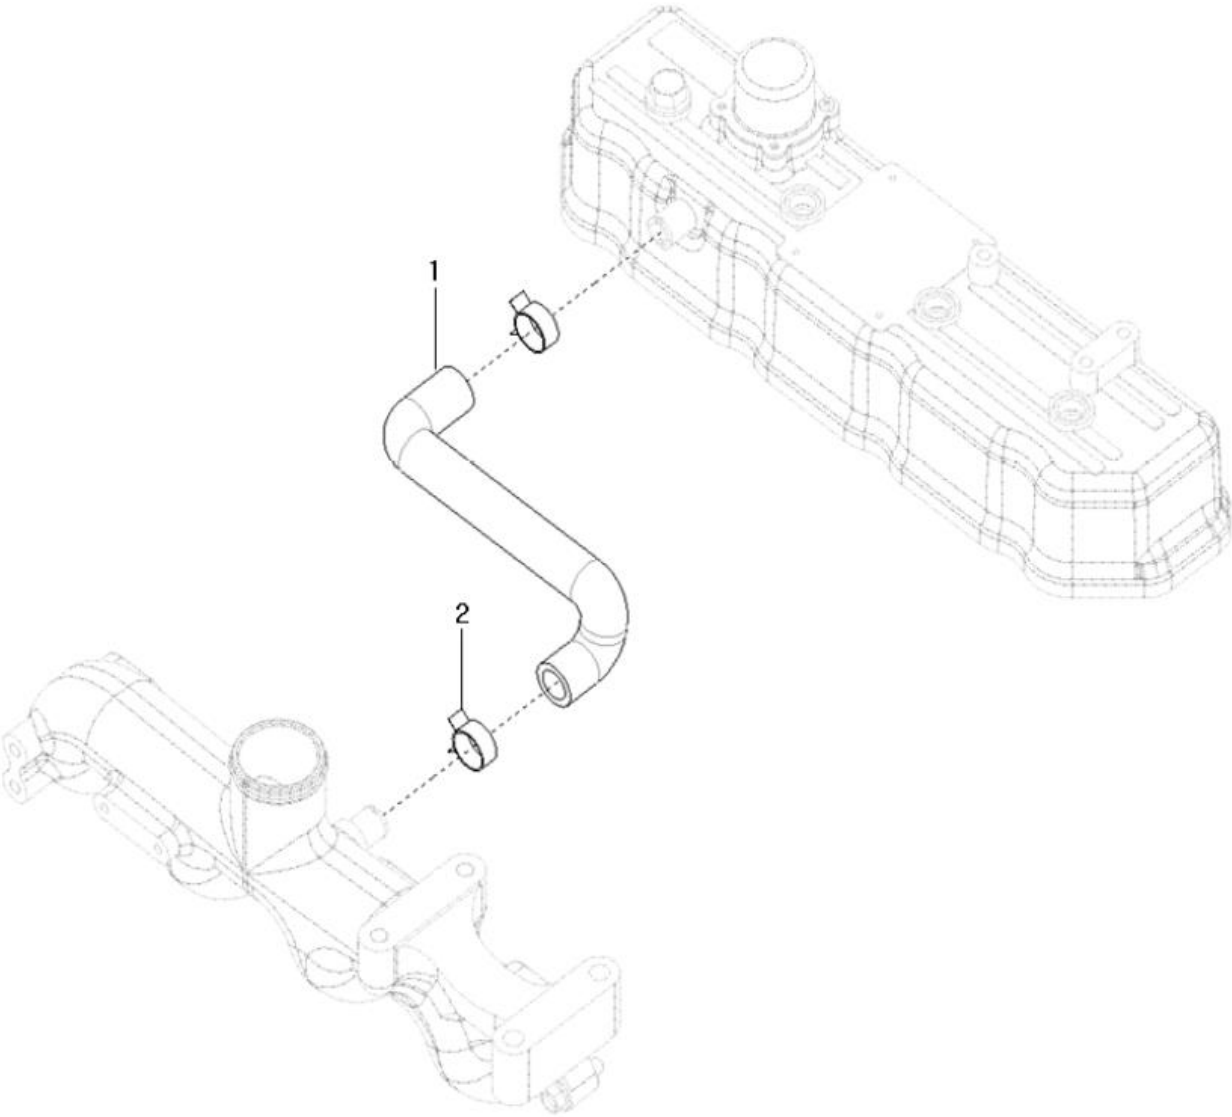 

NOTE



FIG 120

FUEL INJECTION PUMP

P1

YEAR

  2018

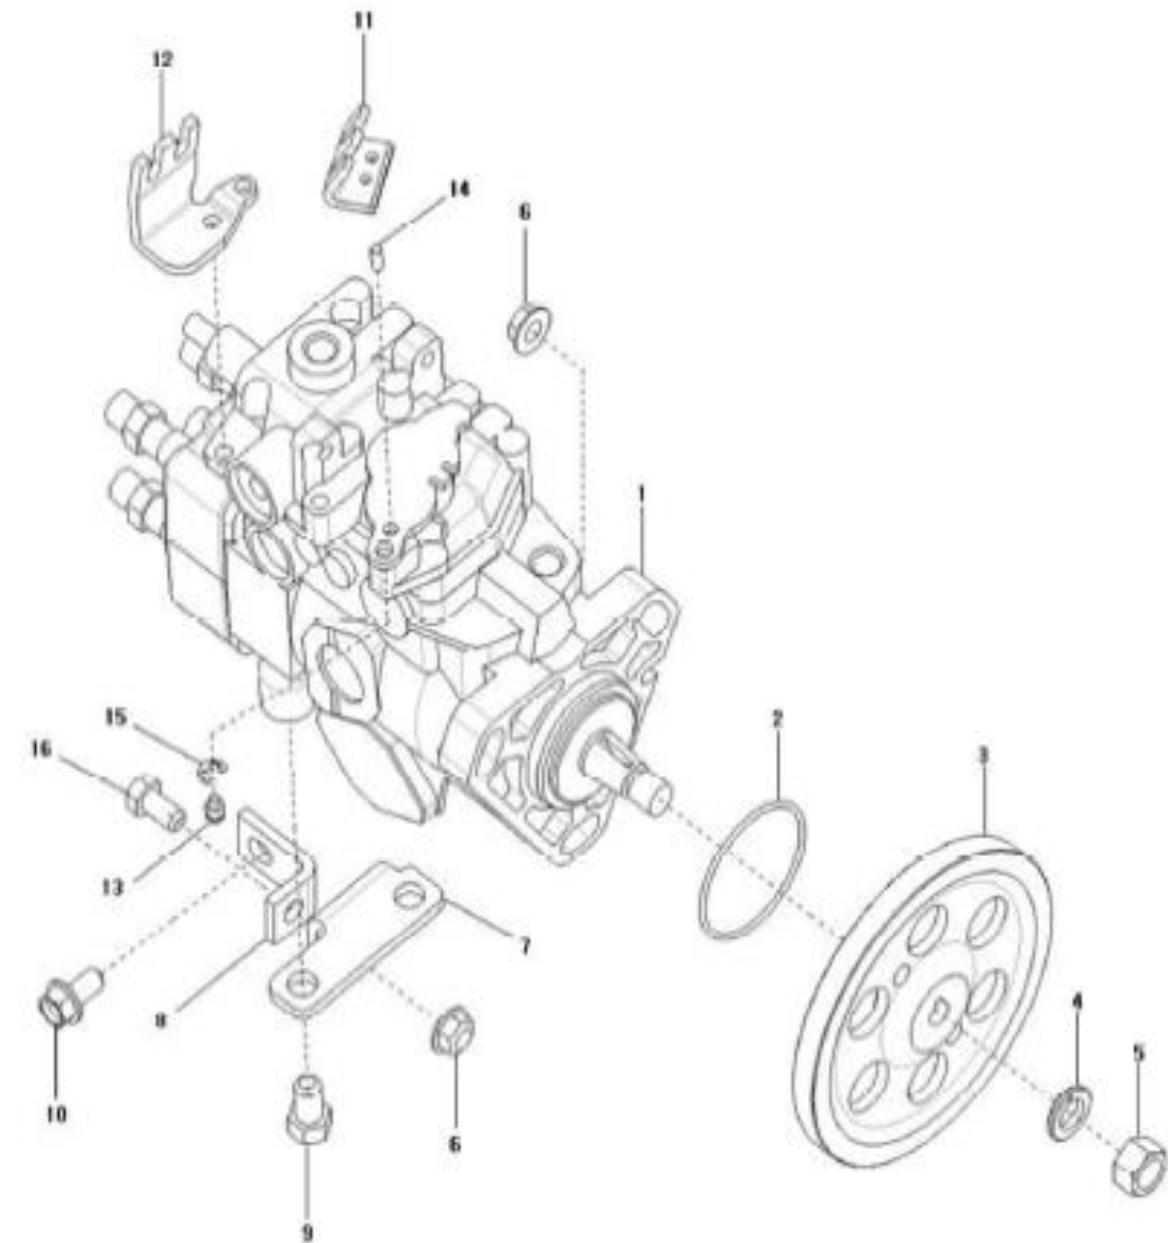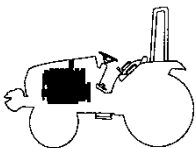

NOTE


FIG 121

FUEL INJECTION VALVE


P1

YEAR

 2018

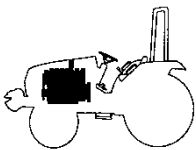

T474NH

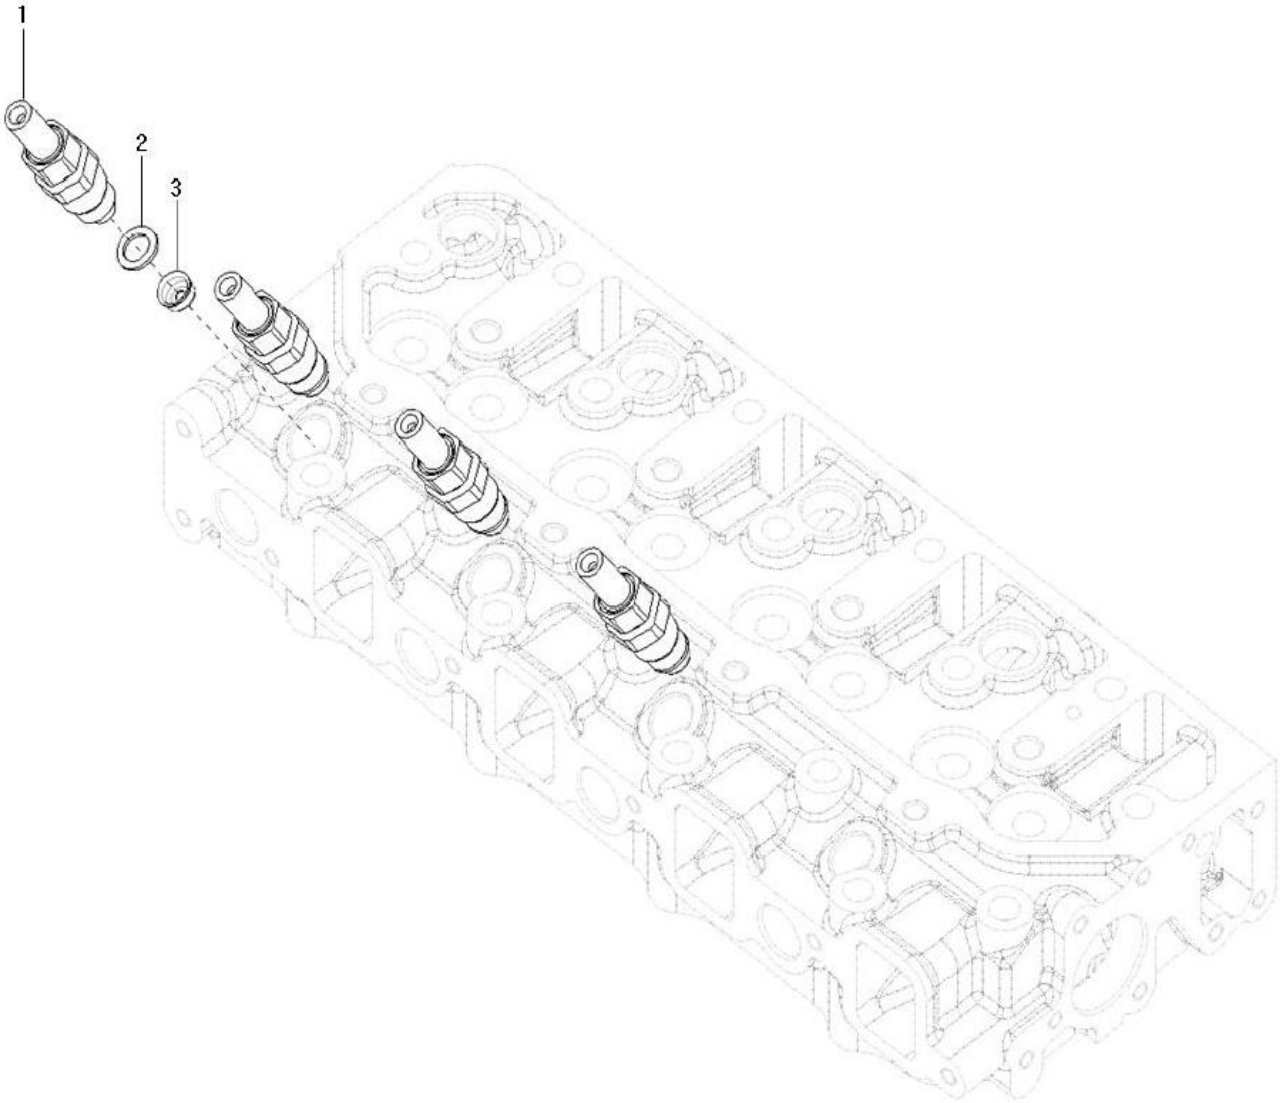 

NOTE


FIG 122

FUEL PIPE ASS'Y


P1

YEAR

 2018

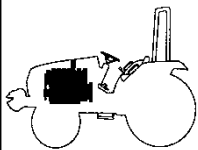

T474NH

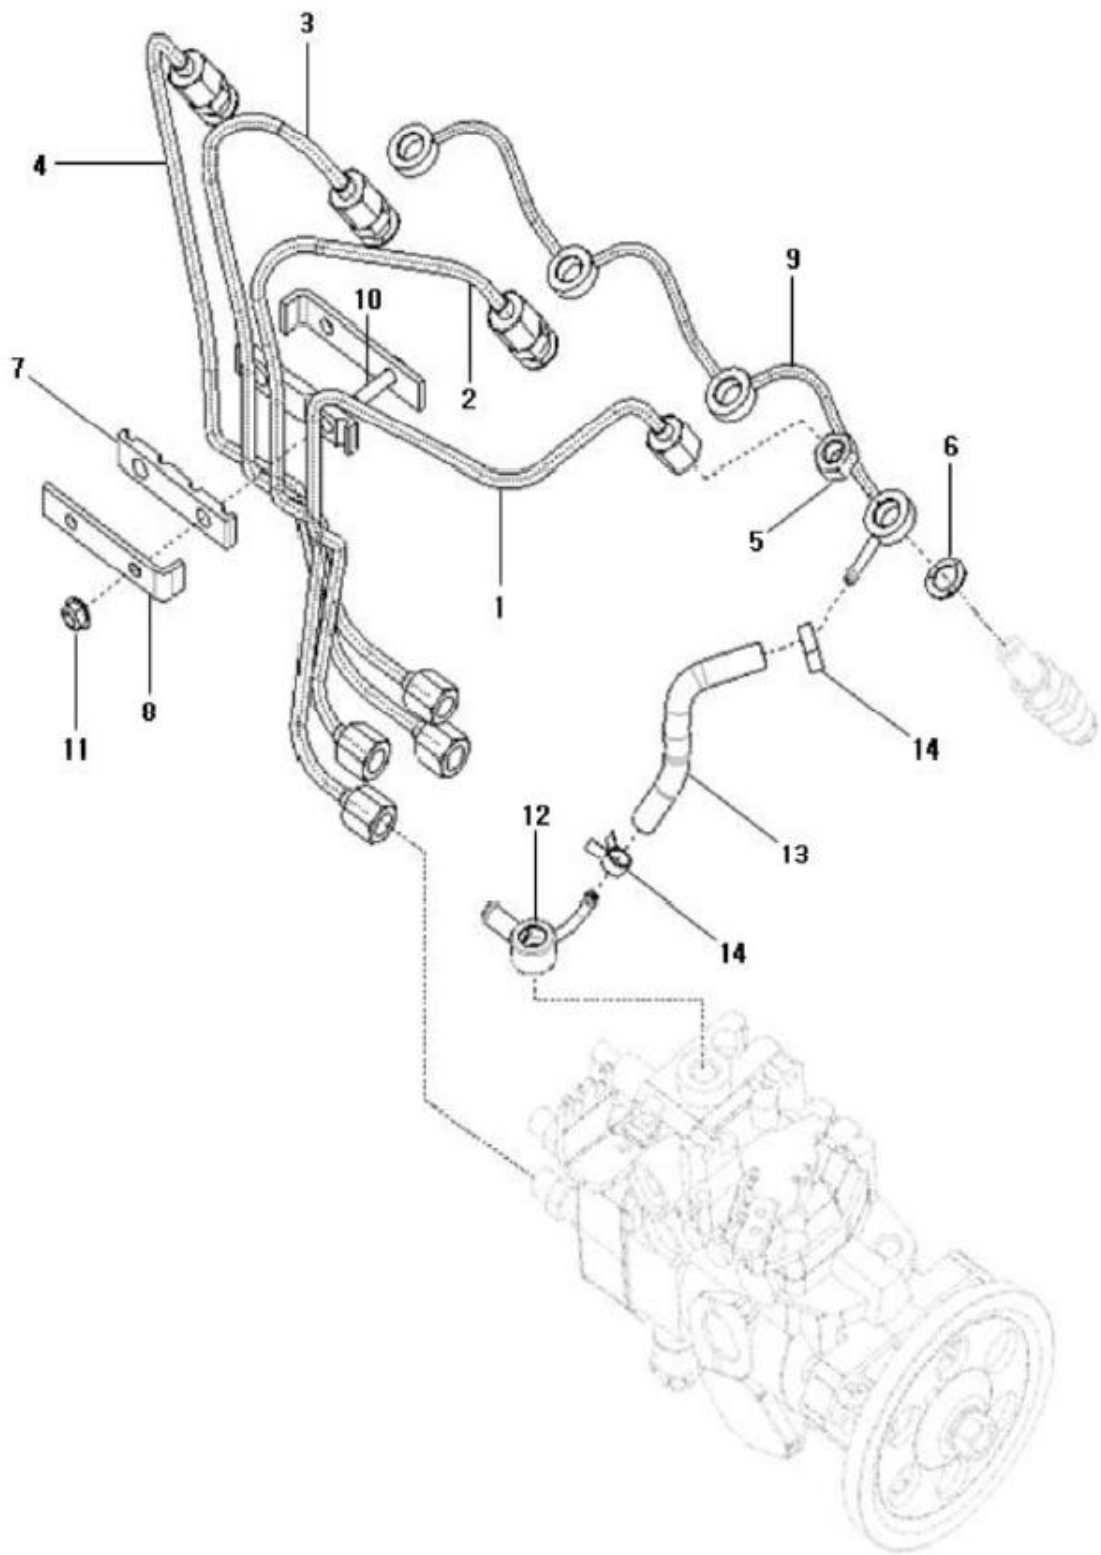 

NOTE

FIG 123

 
 
T474NH

OIL FILTER

P1

YEAR

2018

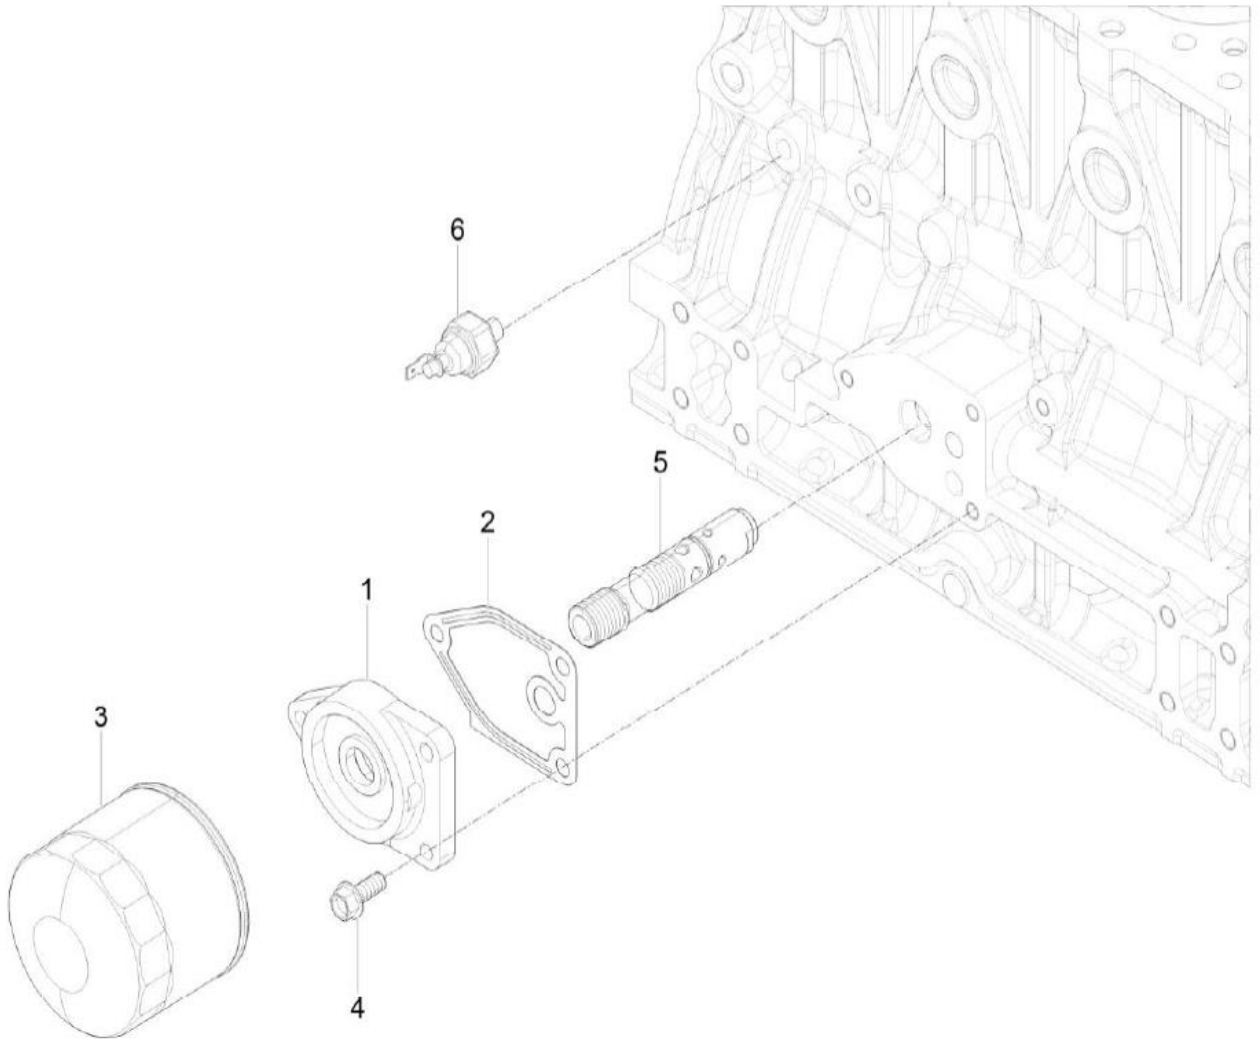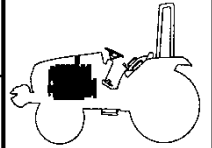

NOTE


FIG 124

OIL COOLER


P1

YEAR

 2018

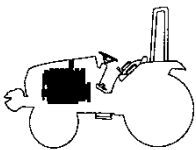

T474NH

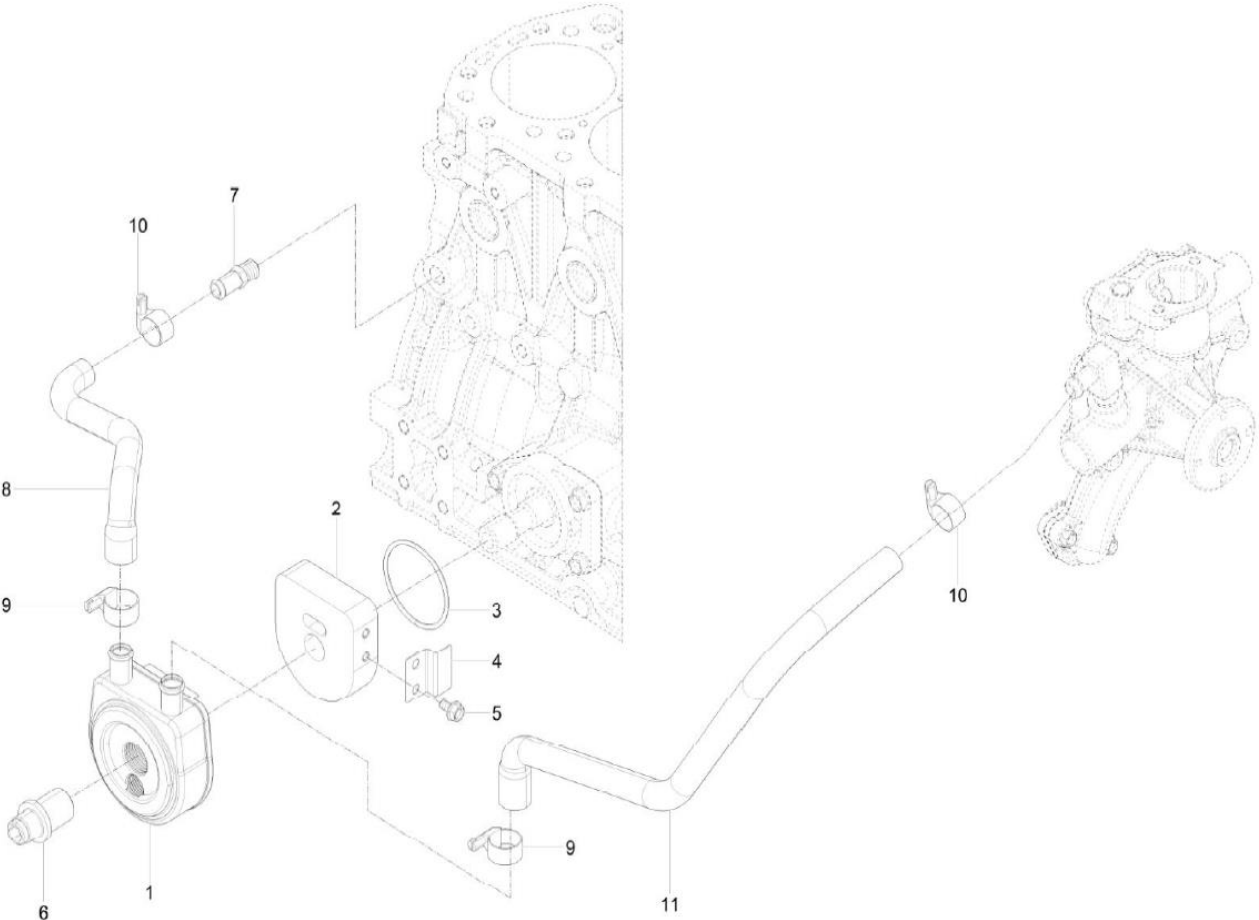 

NOTE



FIG 125

OIL GAUGUE

P1

YEAR

  2018

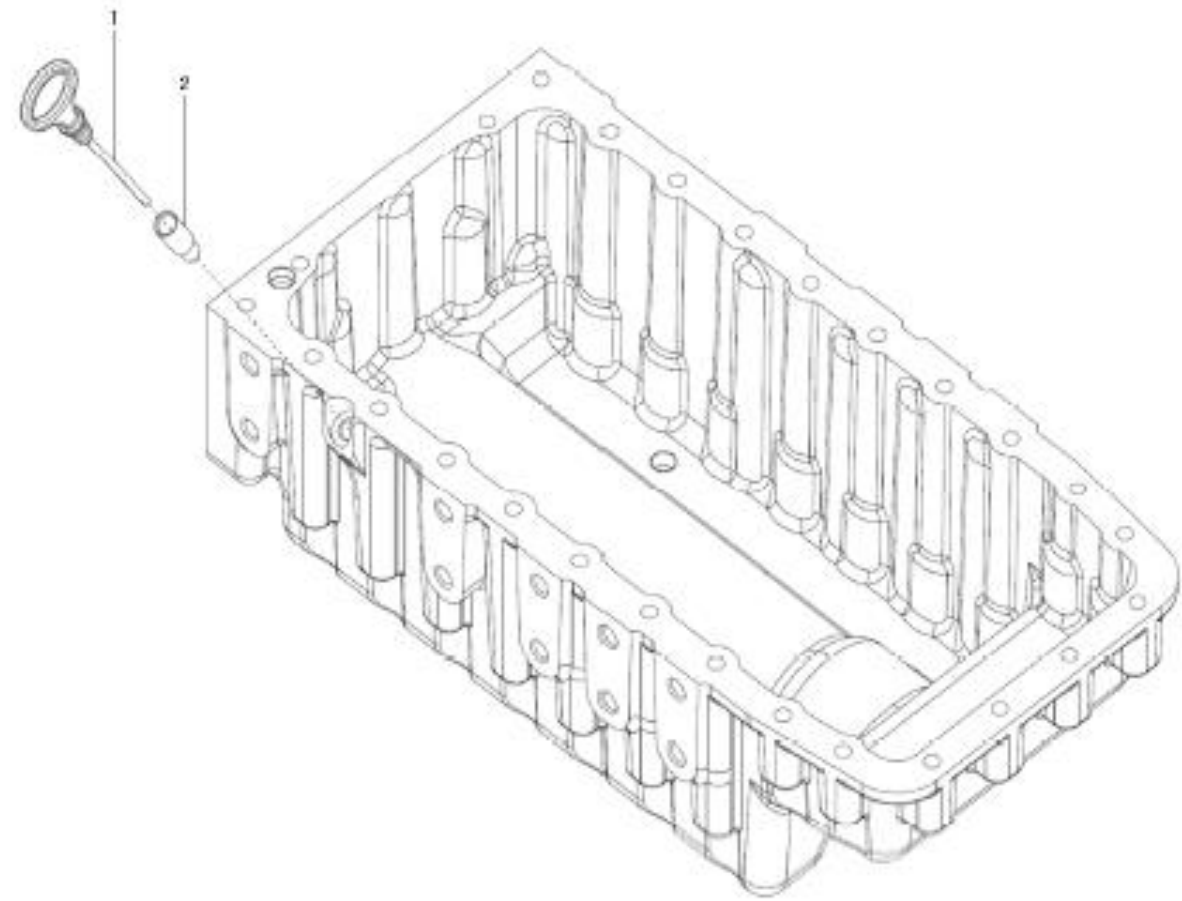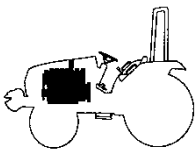

NOTE


FIG 126

OIL FILLER CAP


P1

YEAR

 2018

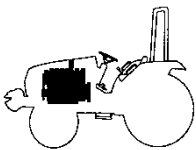

T474NH

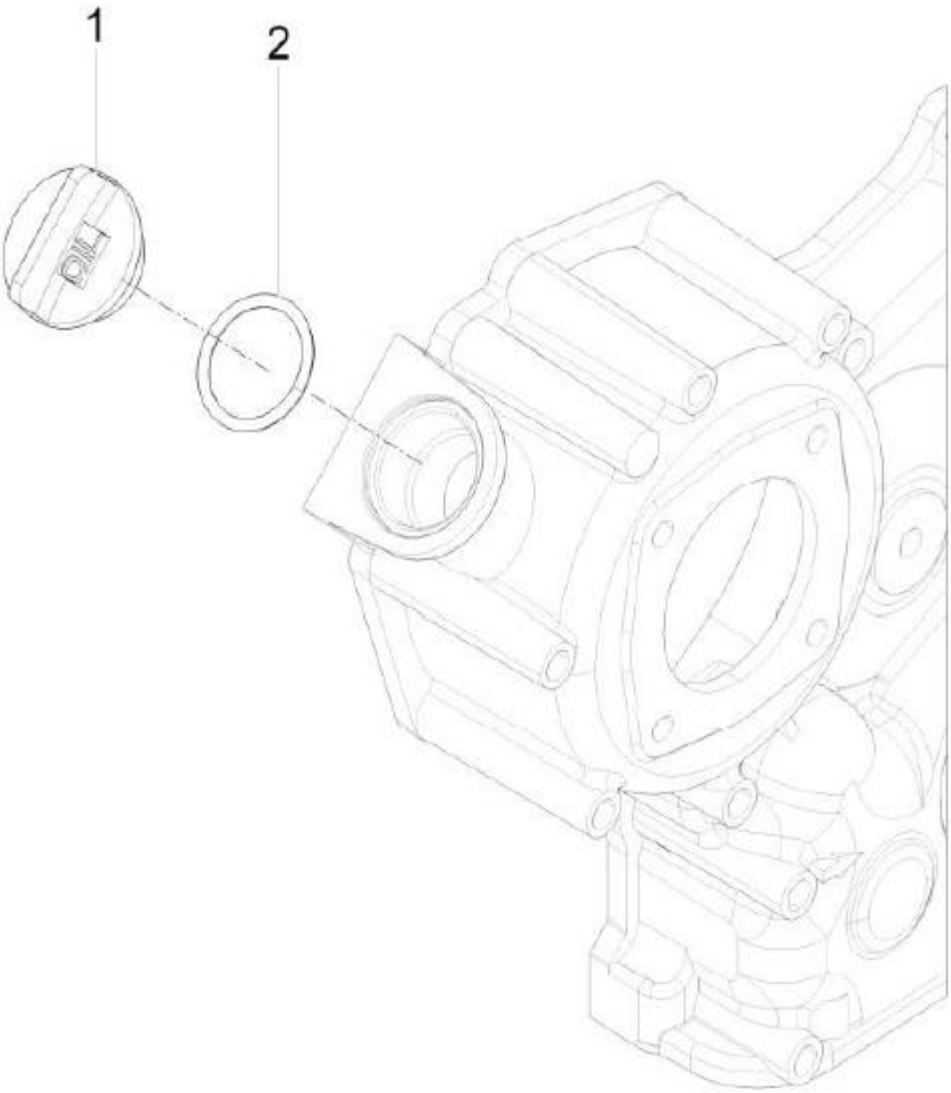 

NOTE


FIG 127

COOLING WATER PUMP



P1

YEAR

 2018

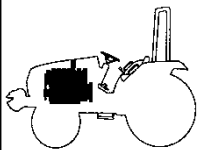

T474NH

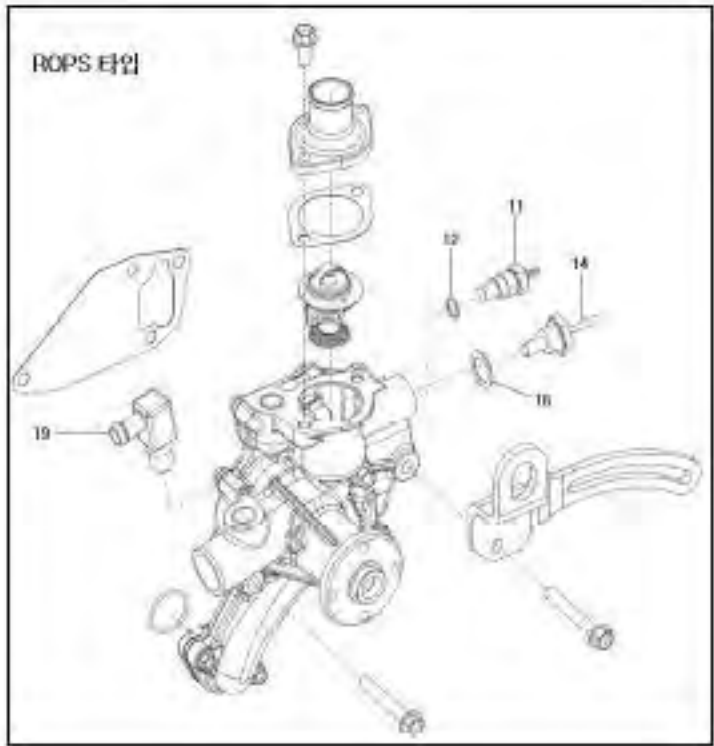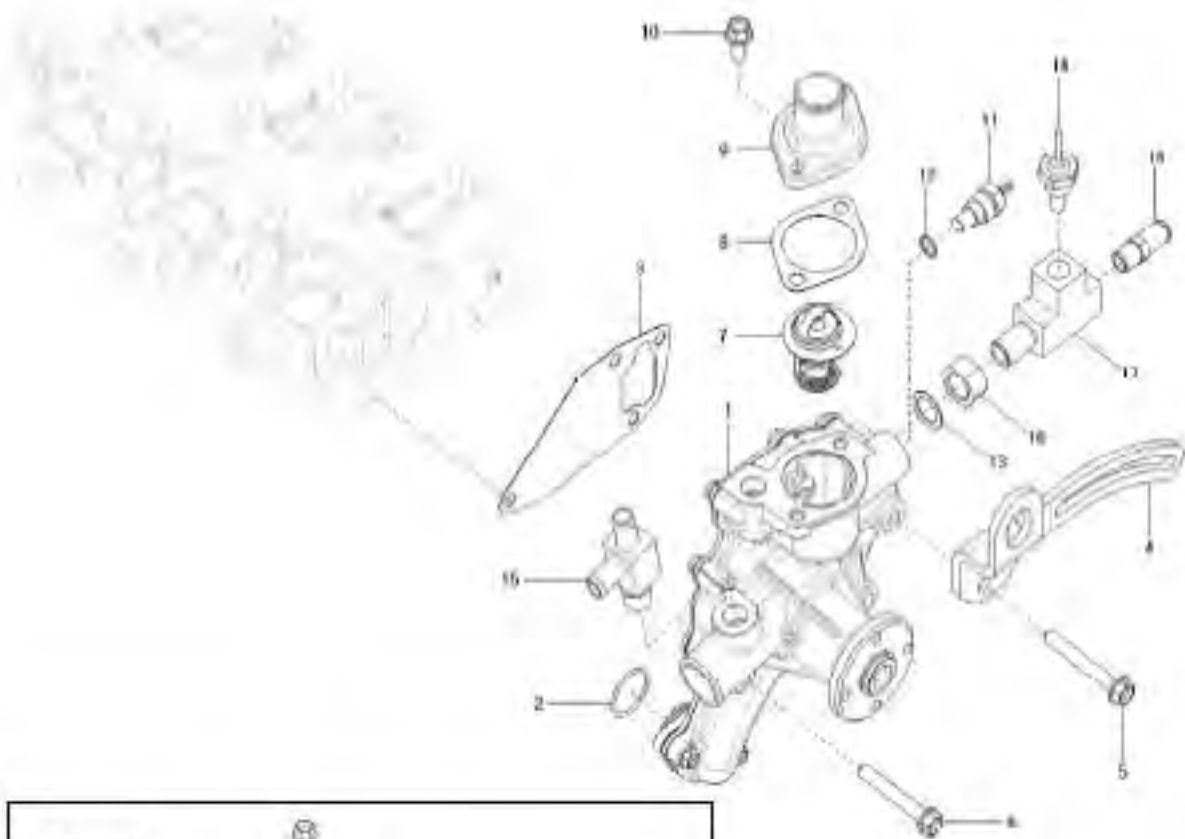  

NOTE


FIG 128

CRANK SHAFT PULLEY


P1

YEAR

 2018

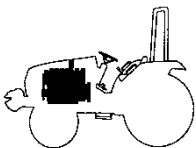

T474NH

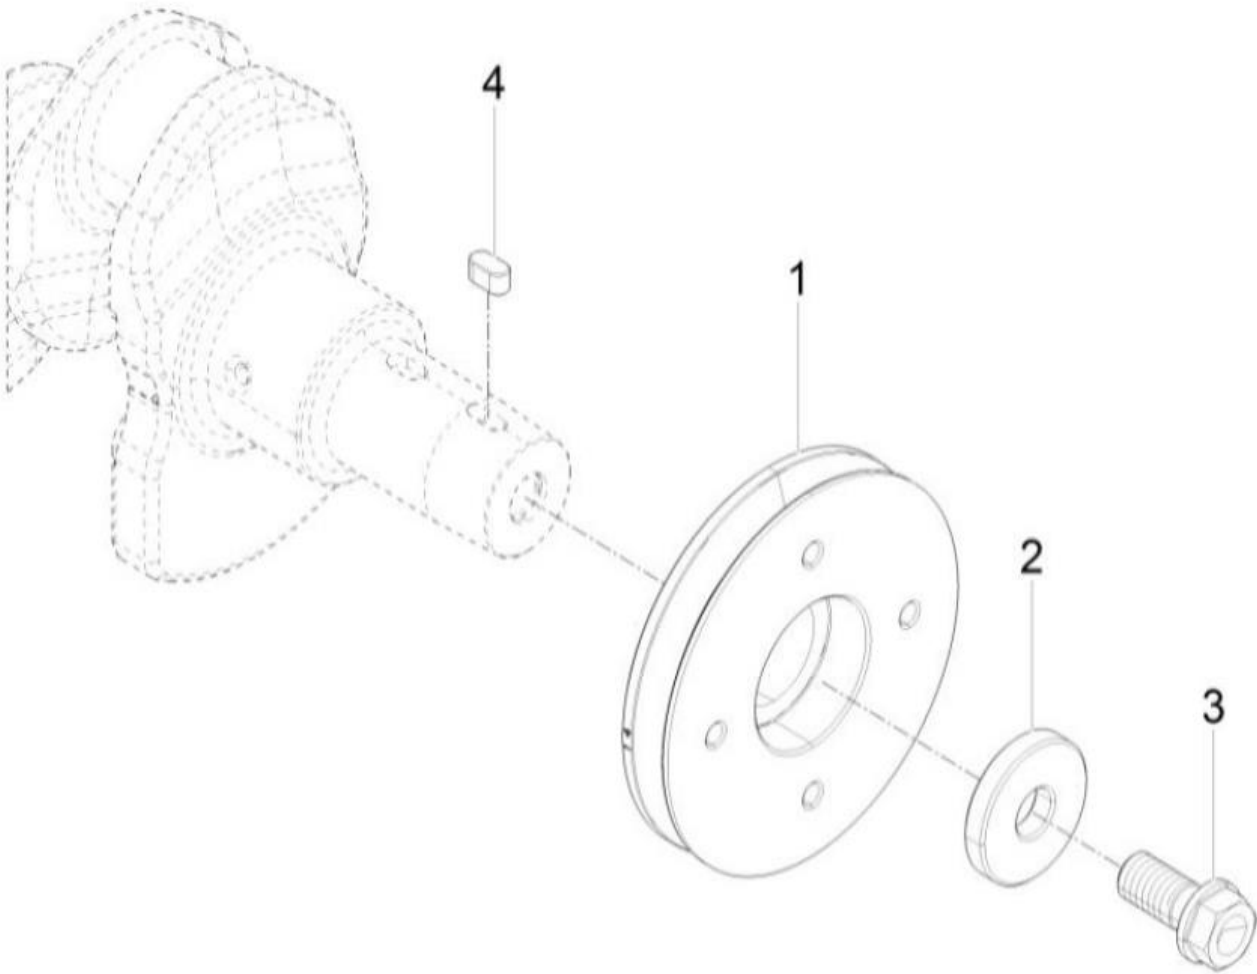 

NOTE


FIG 129

V-PULLEY


P1

YEAR

 2018

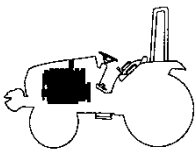

T474NH

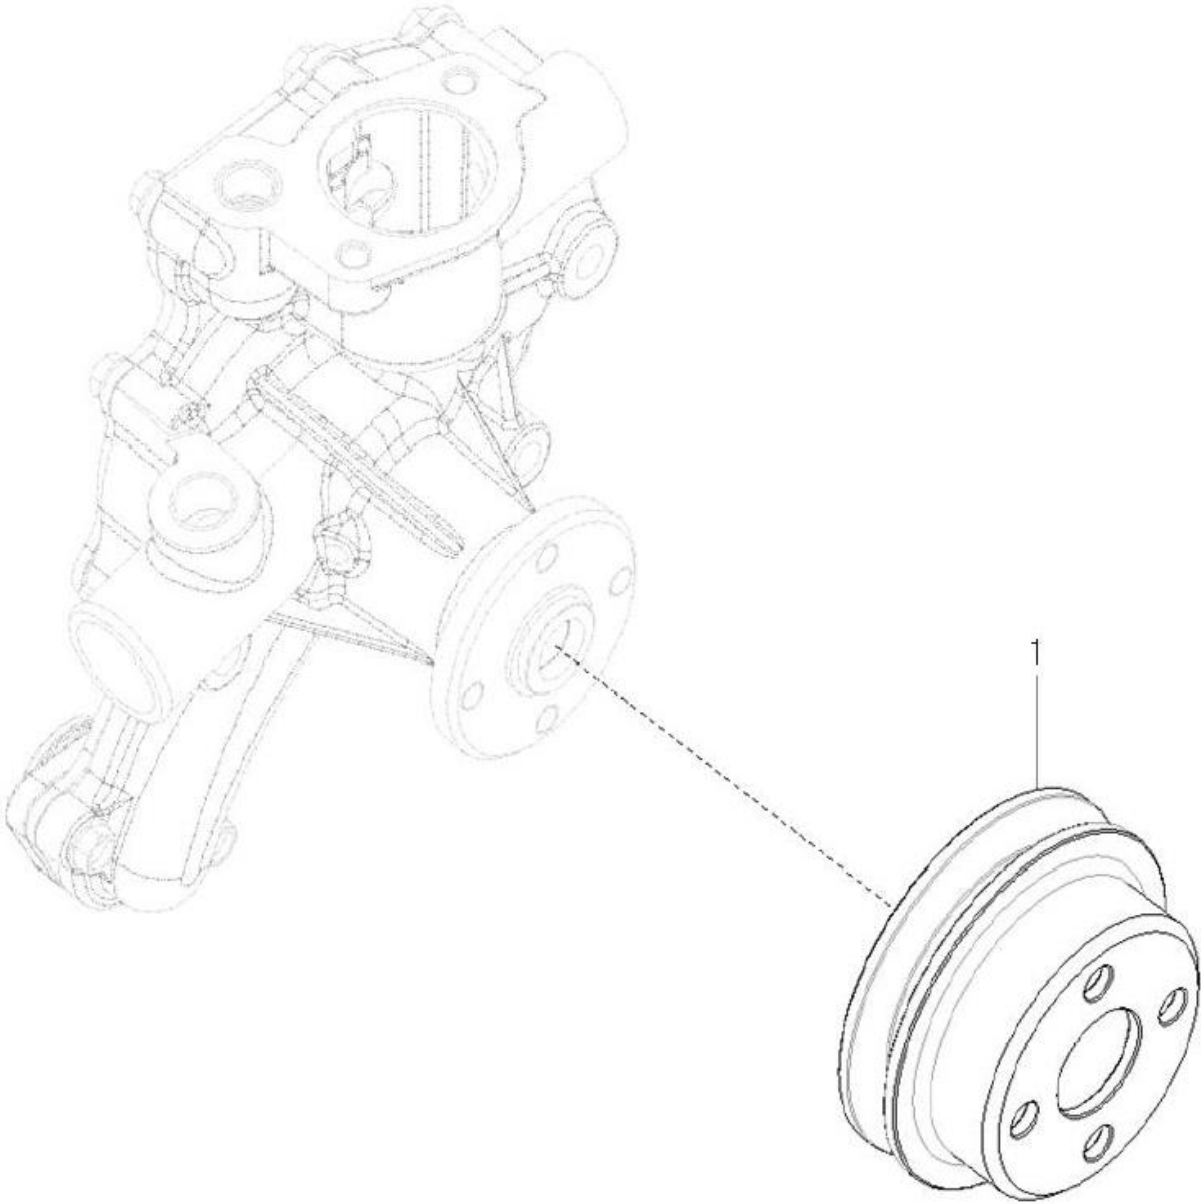 

NOTE


FIG 130

COOLING FAN


P1

YEAR

 2018

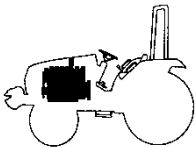

T474NH

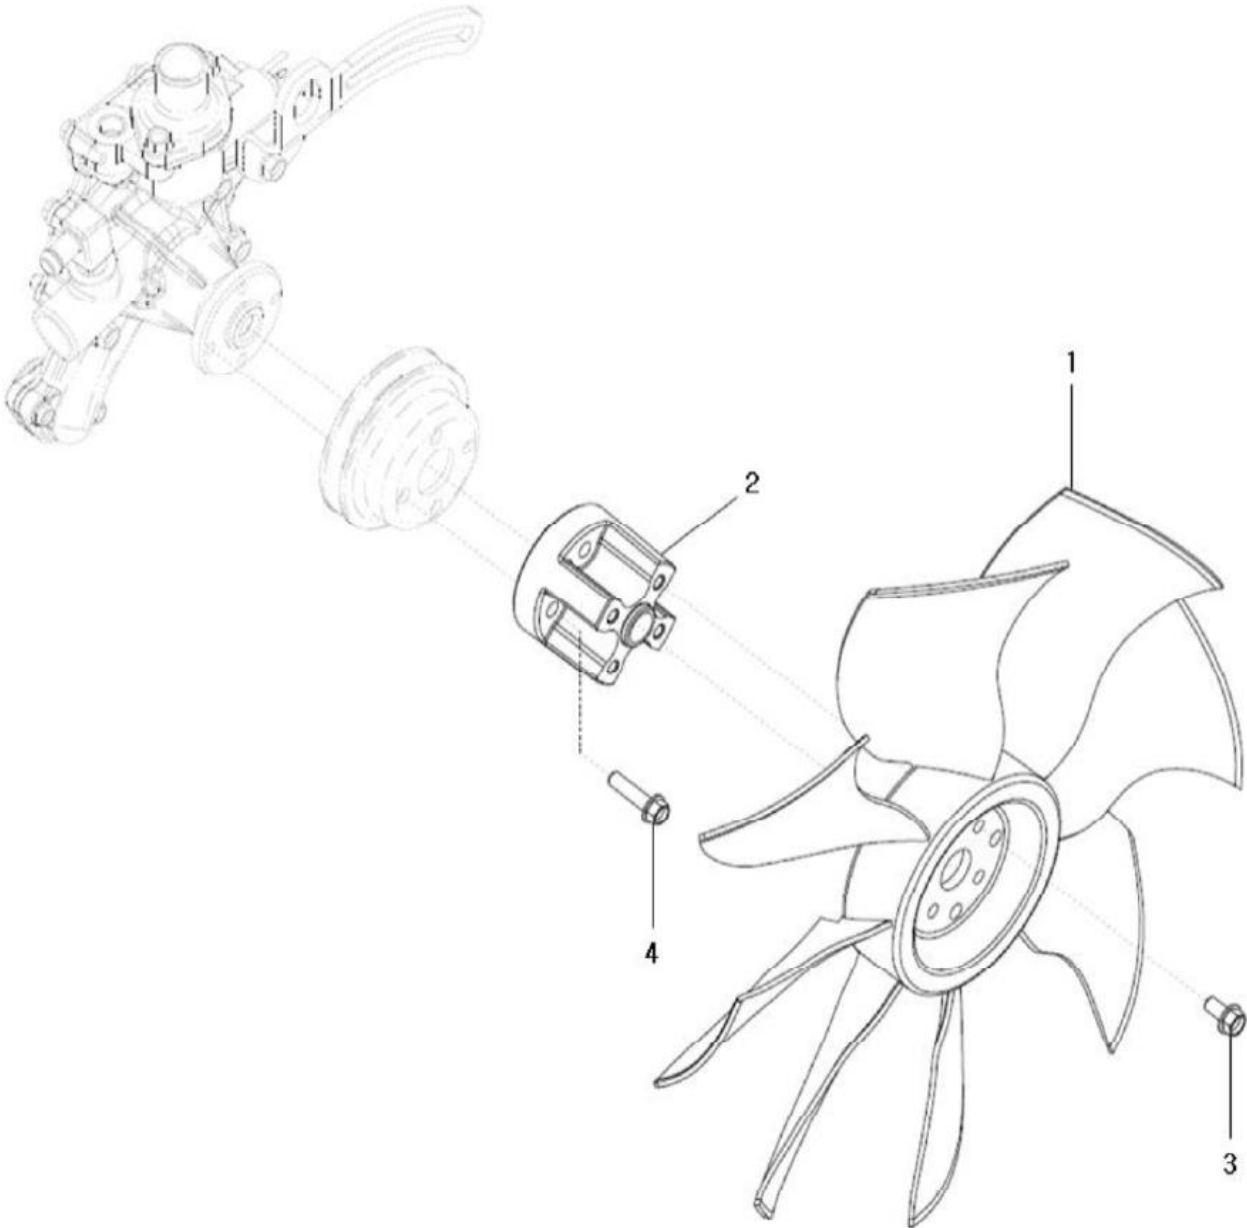 

NOTE



FIG 131

FLYWHEEL HOUSING

P1

YEAR

  2018

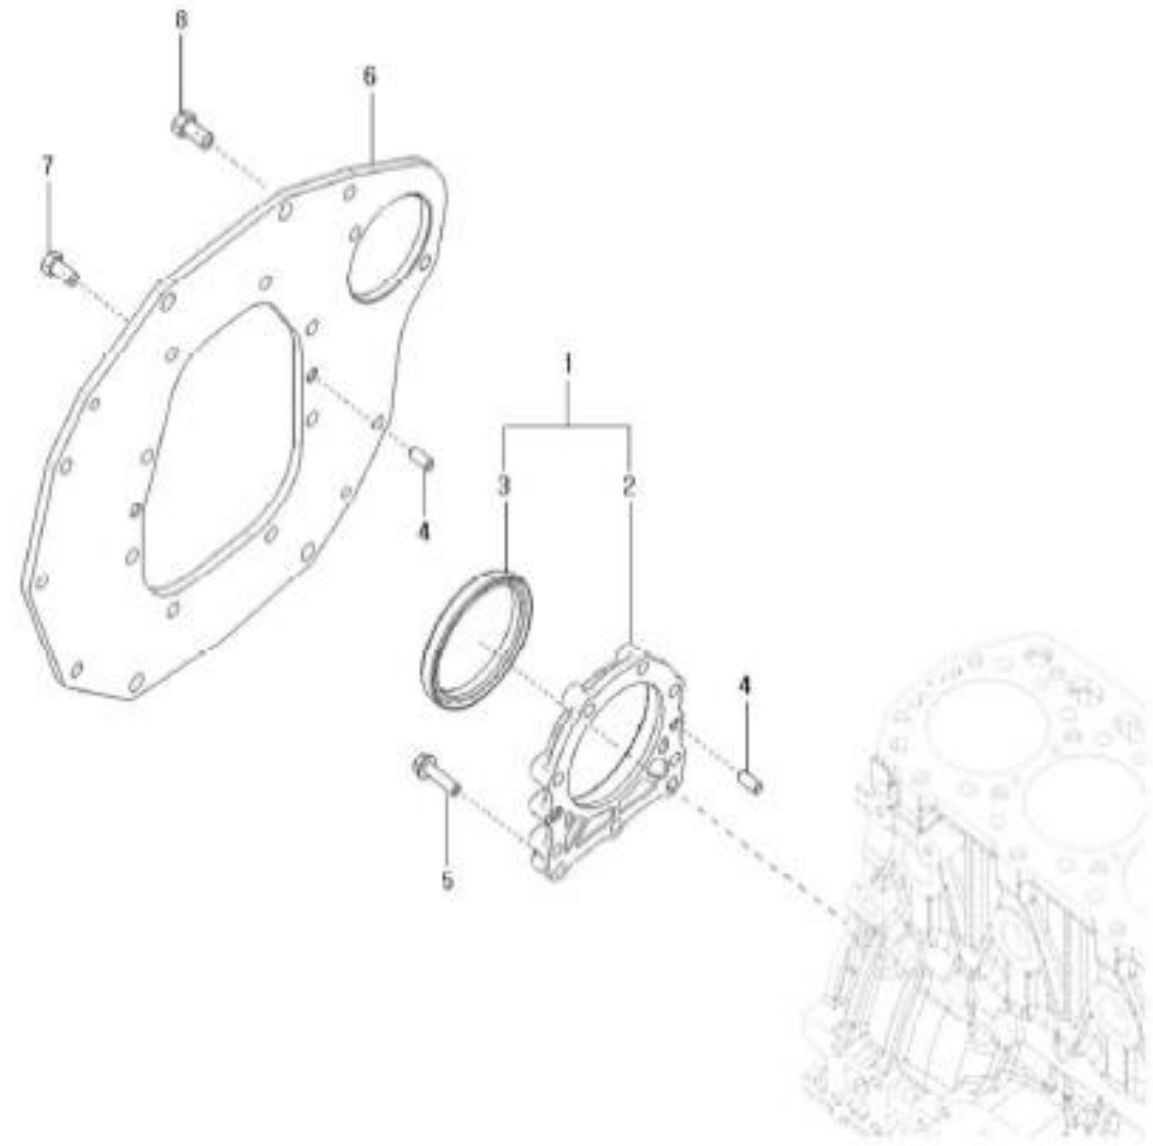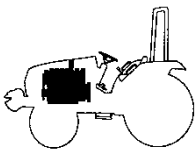

NOTE


FIG 132

FLYWHEEL


P1

YEAR

 2018

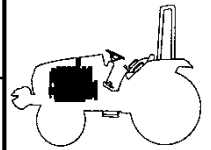

T474NH

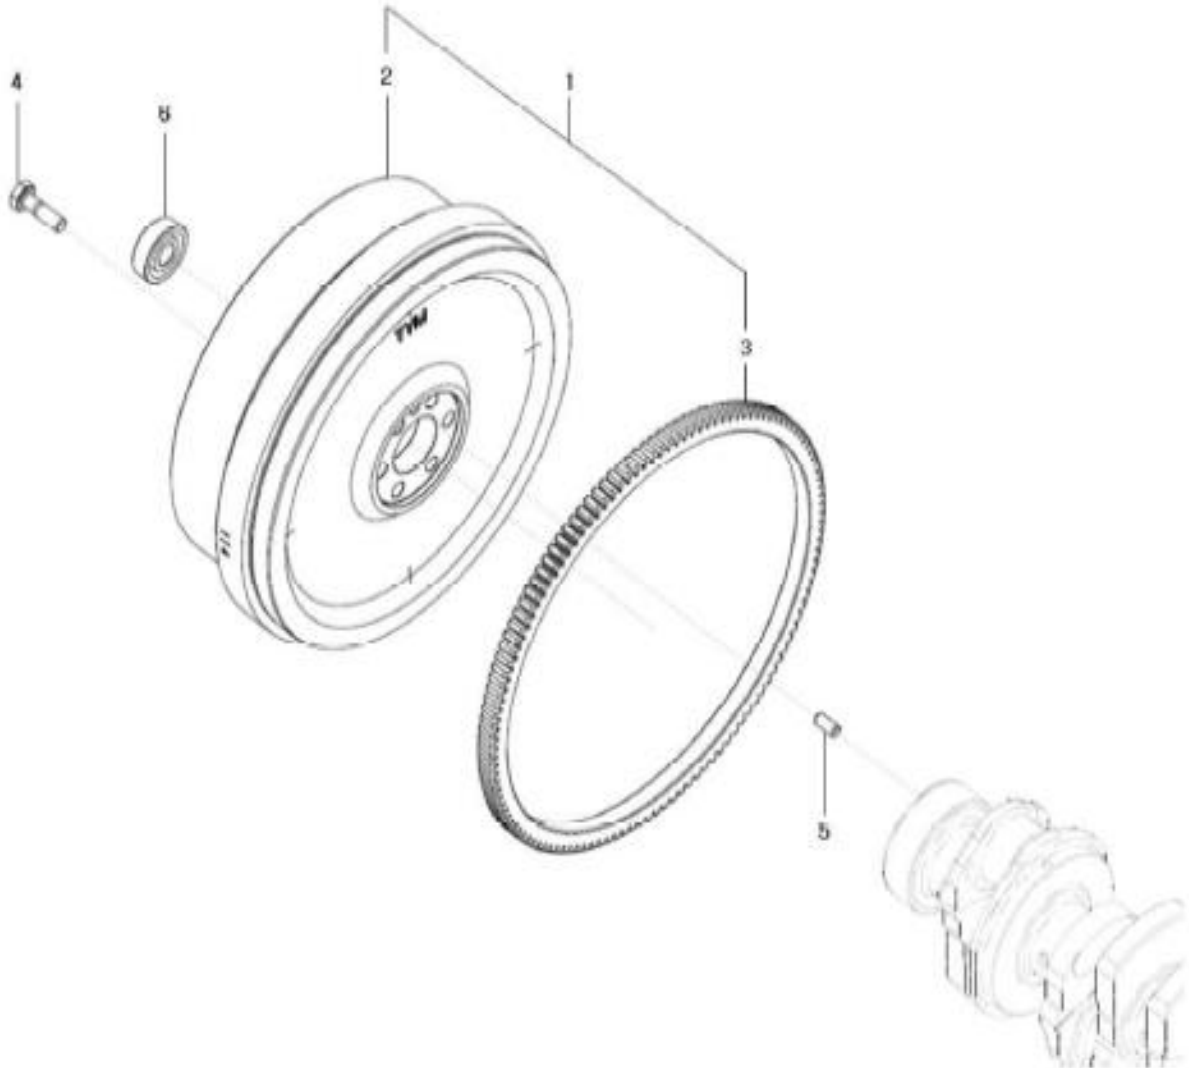 

NOTE


FIG 133

GLOW PLUG ASS'Y OPTION


P1

YEAR

 2018

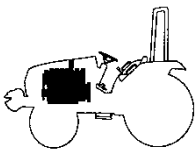

T474NH

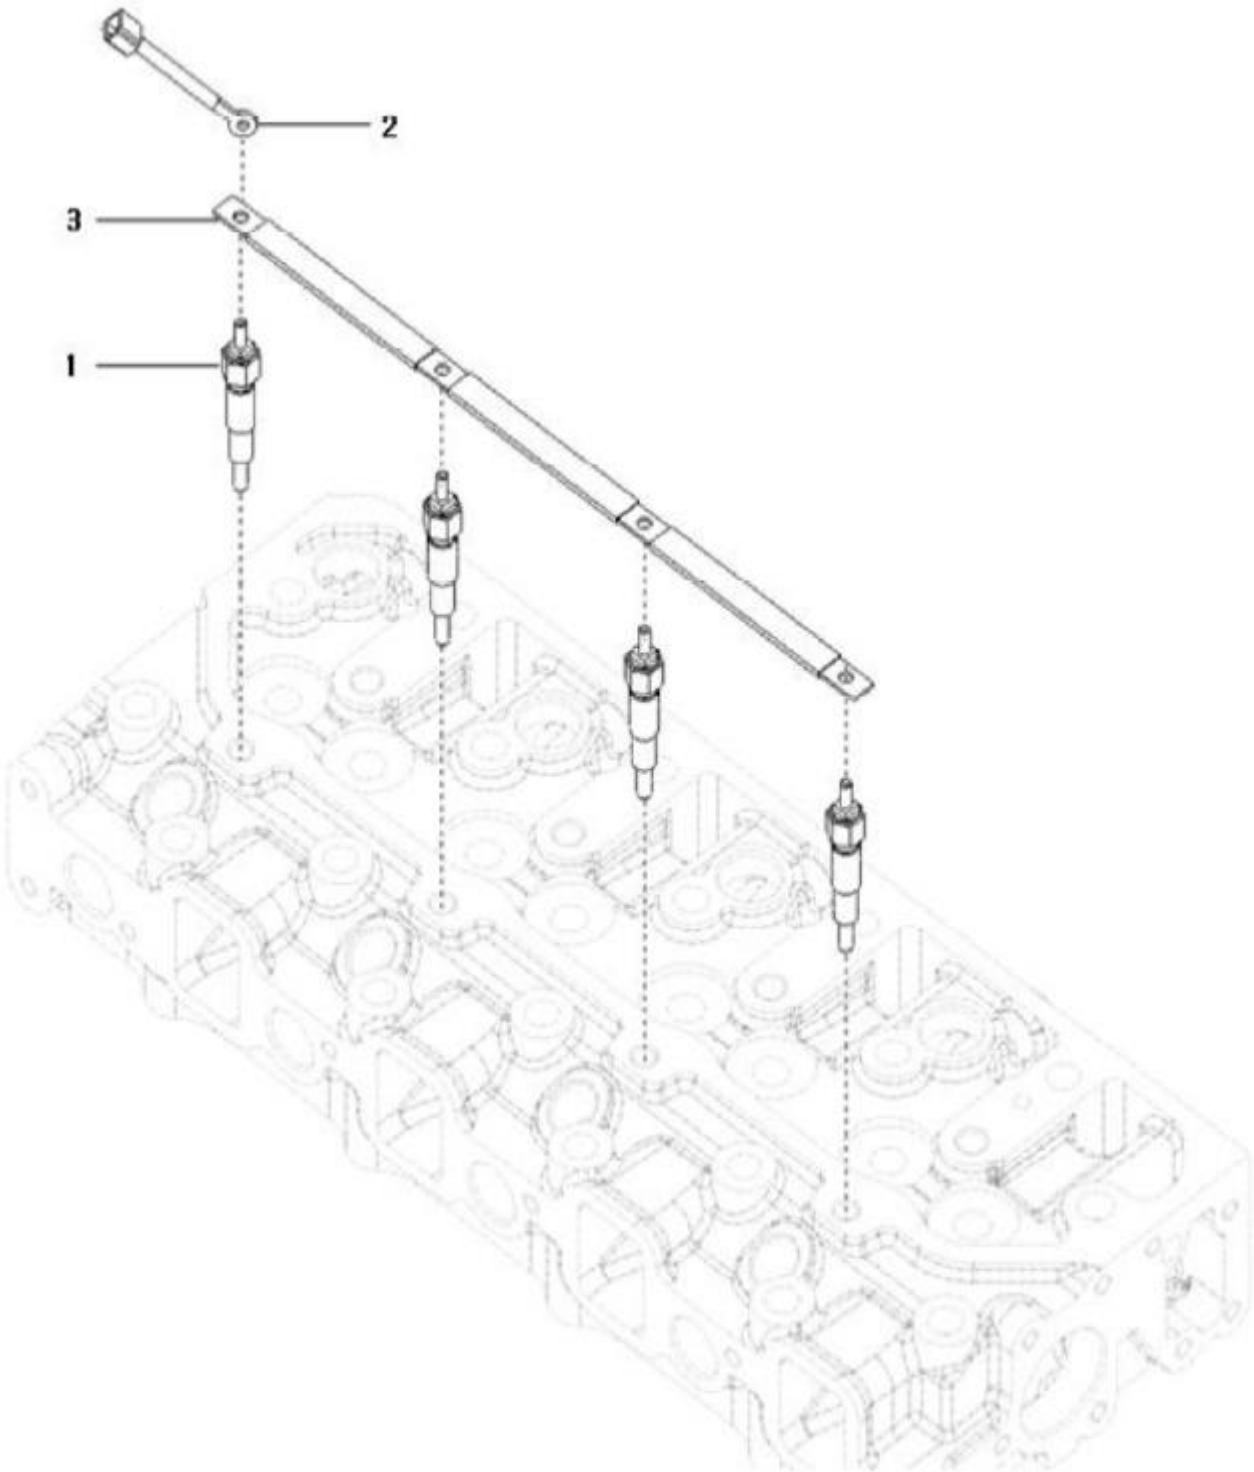 

NOTE


FIG 134

STARTING MOTOR


P1

YEAR

 2018

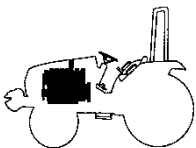

T474NH

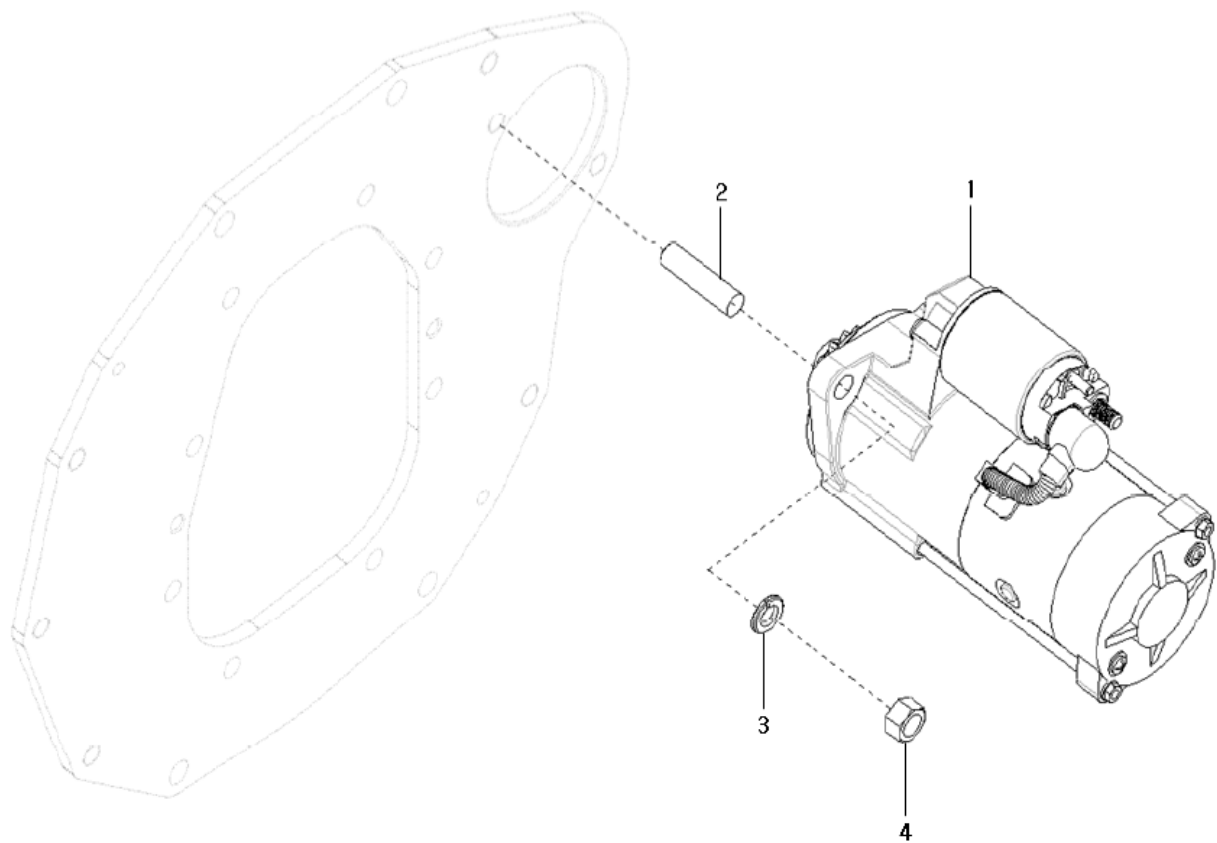 

NOTE


FIG 135

FUEL FILTER BRACKET ASS'Y


P1

YEAR

 2018

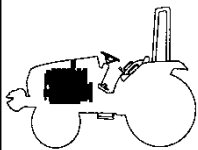

T474NH

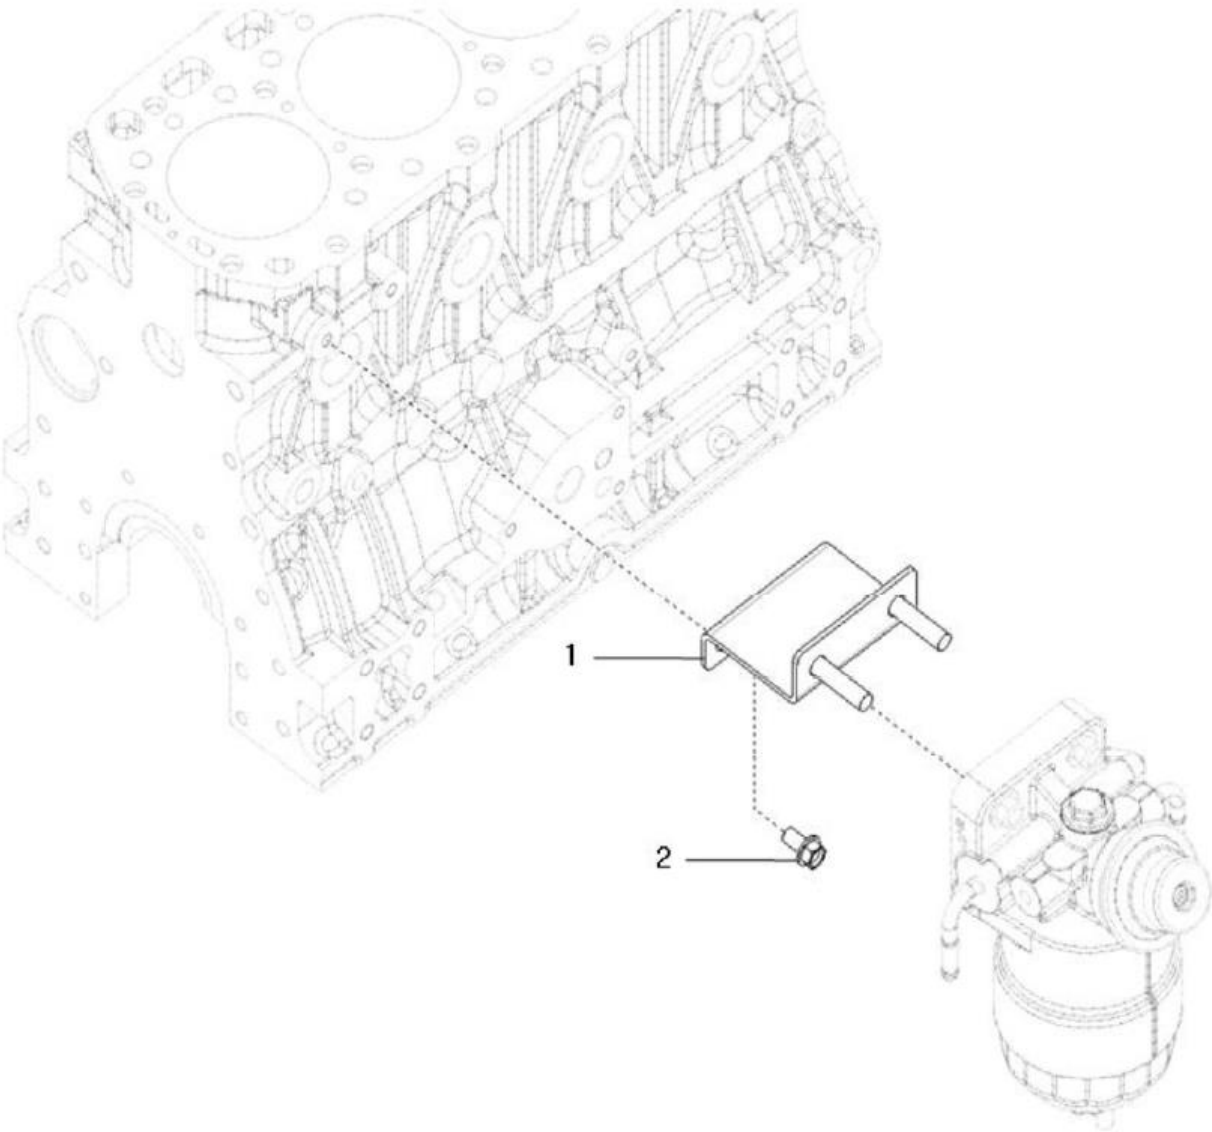 

NOTE


FIG 136

ALTERNATOR


P1

YEAR

 2018

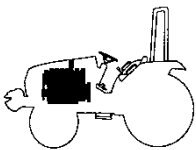

T474NH

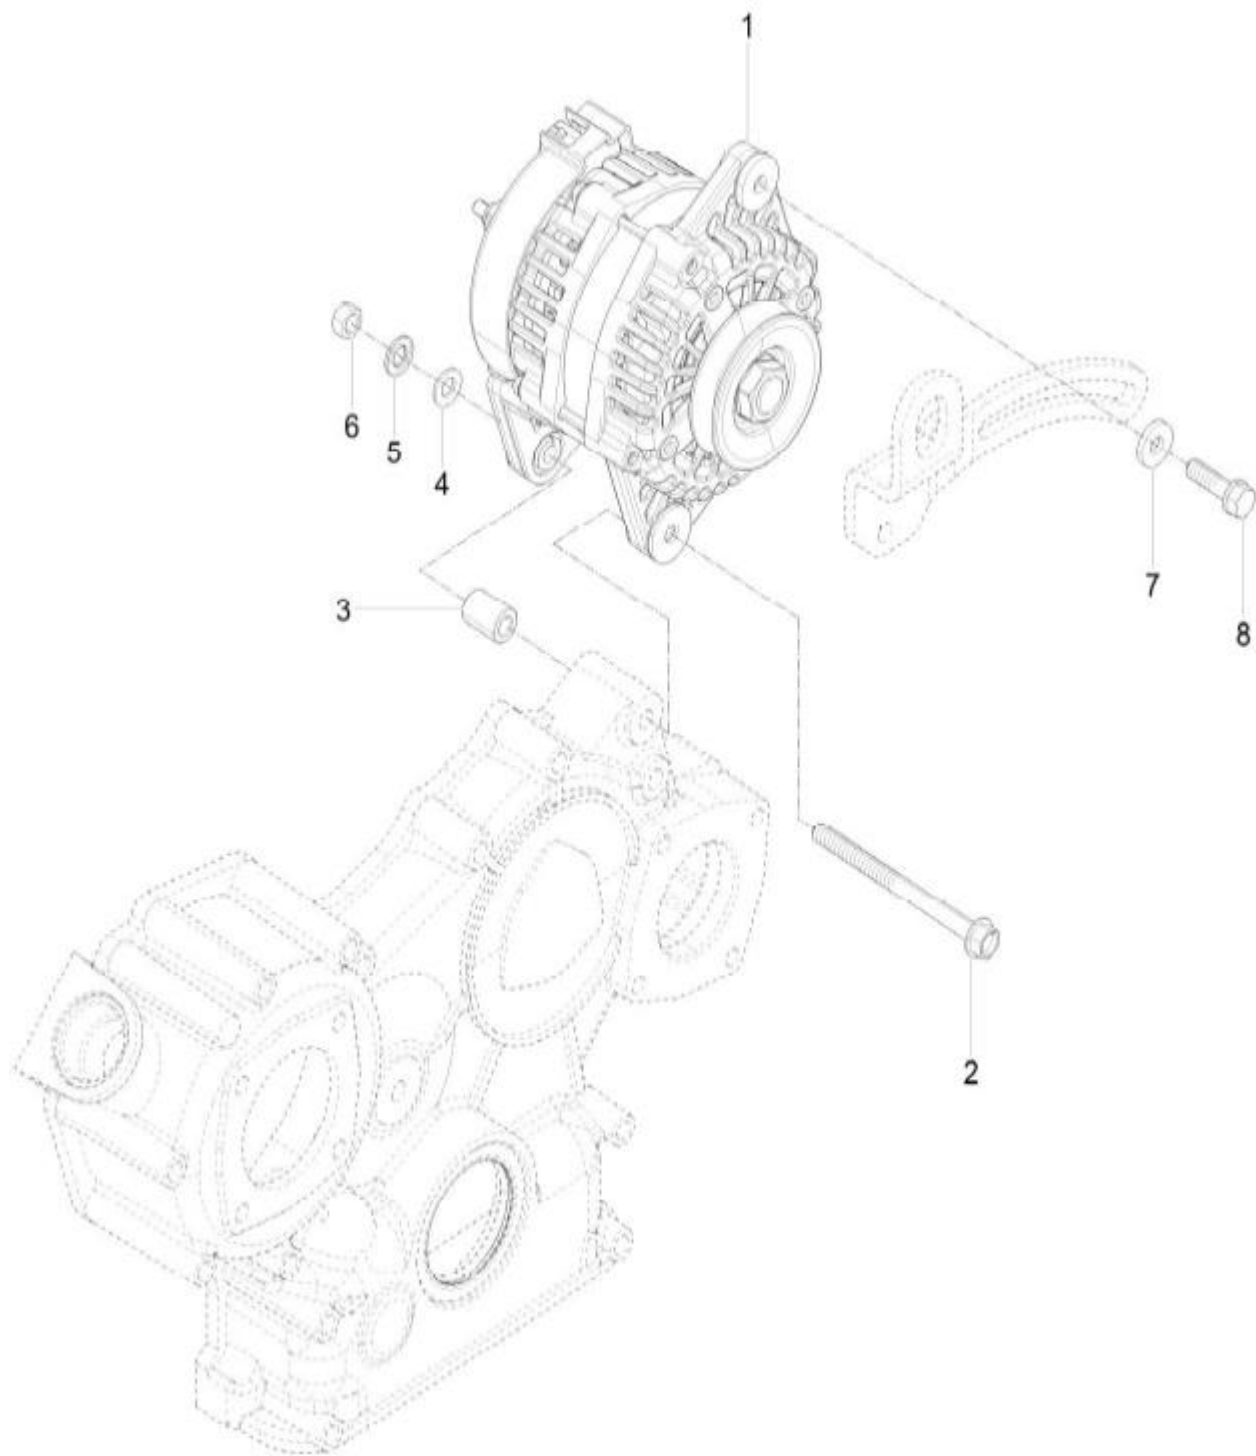 

NOTE


FIG 137

V-BELT


P1

YEAR

 2018

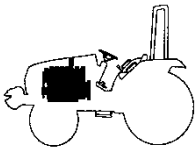

T474NH

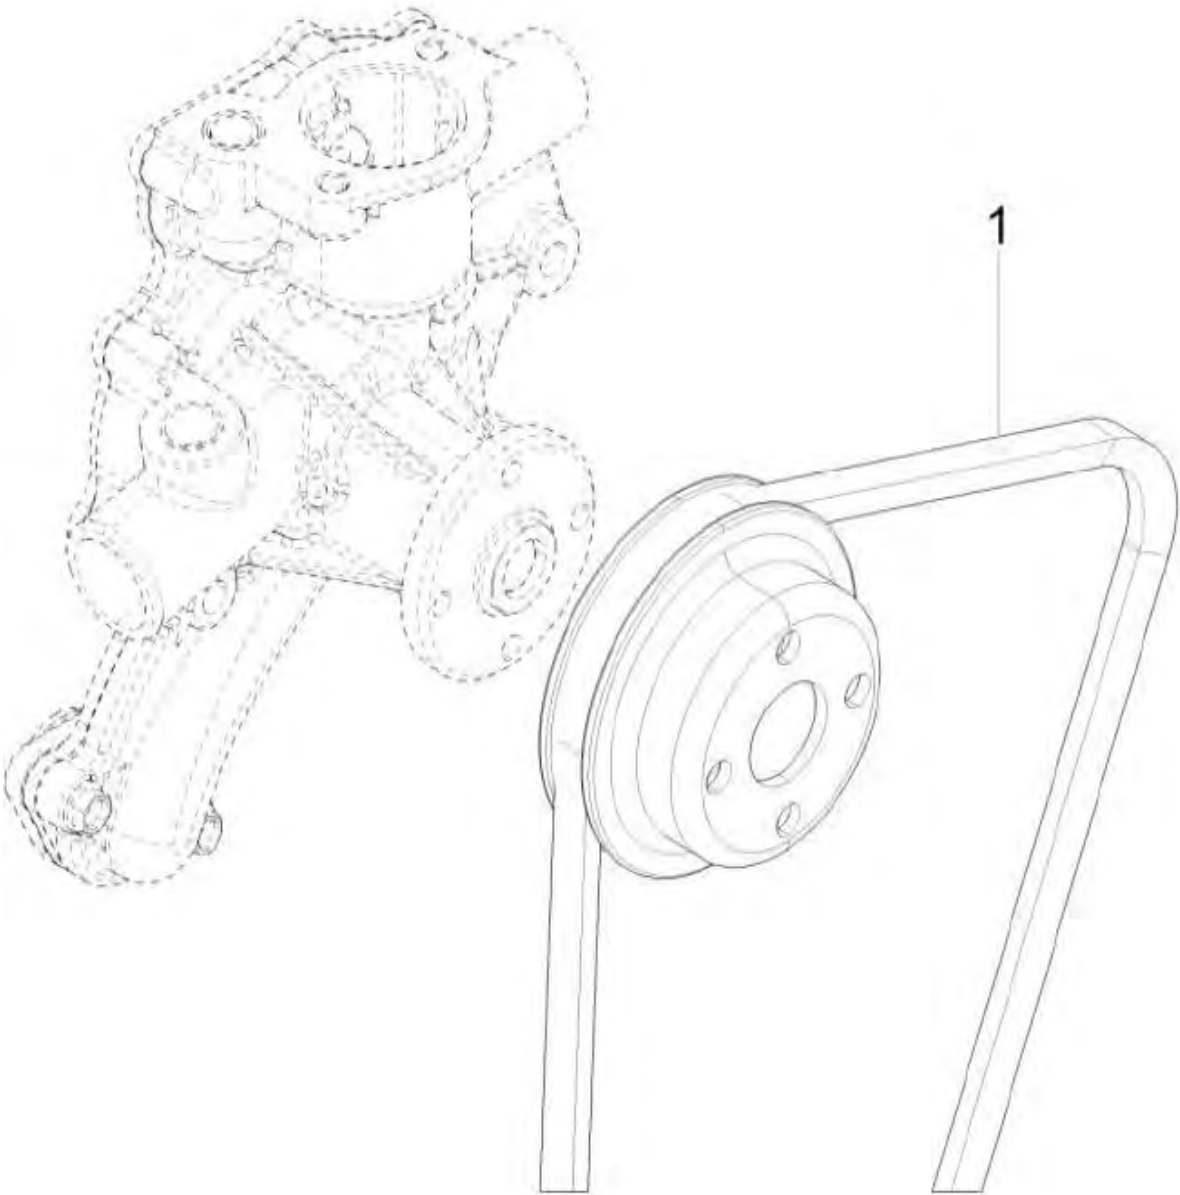 

NOTE


FIG 138

FUEL FILTER


P1

YEAR

 2018

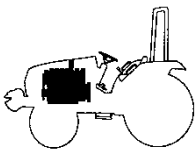

T474NH

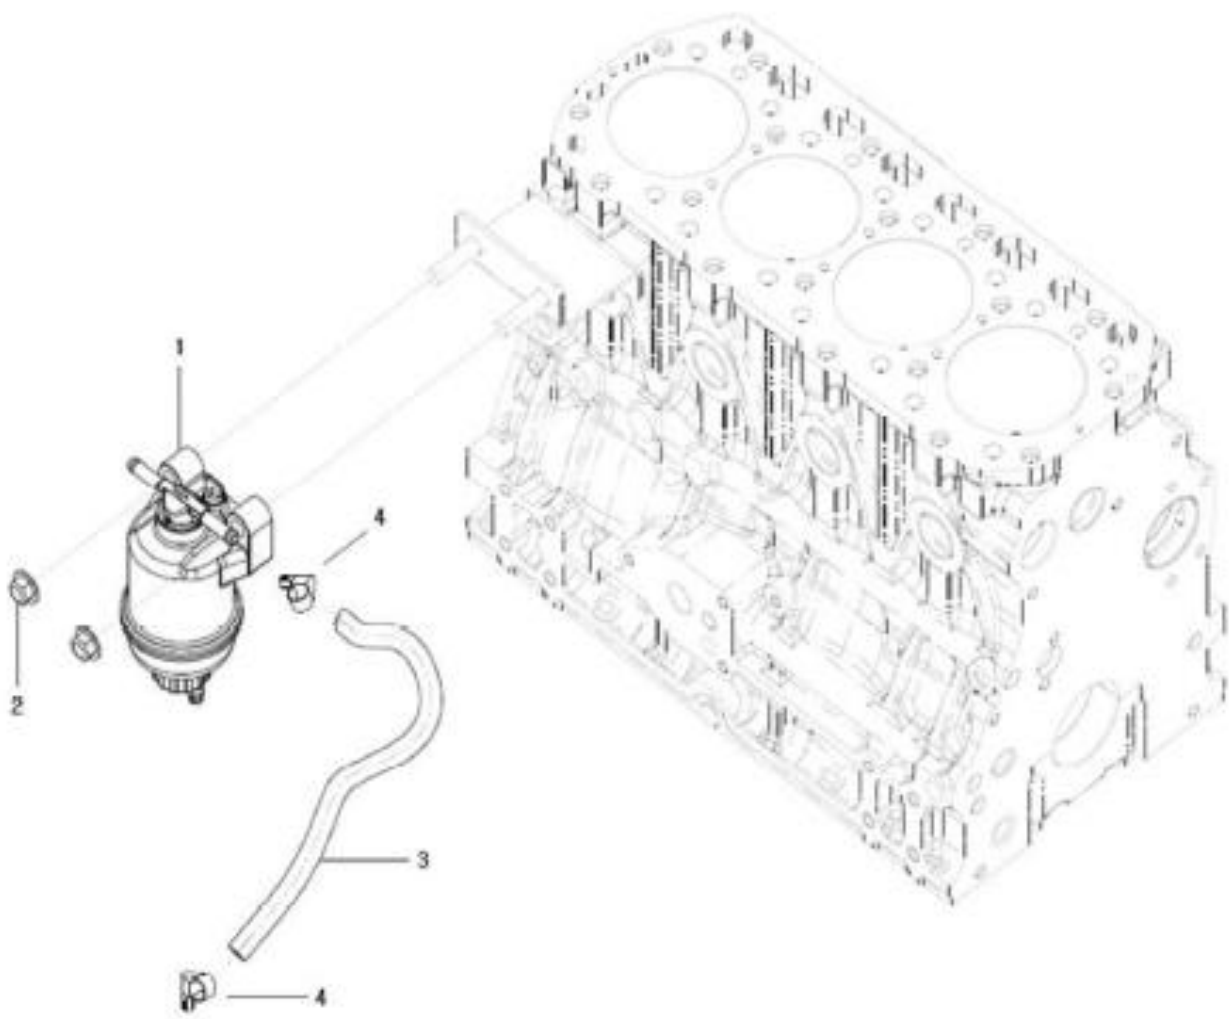 

NOTE


FIG 139

DPF SUPPORT


P1

YEAR

 2018

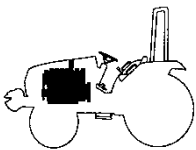

T474NH

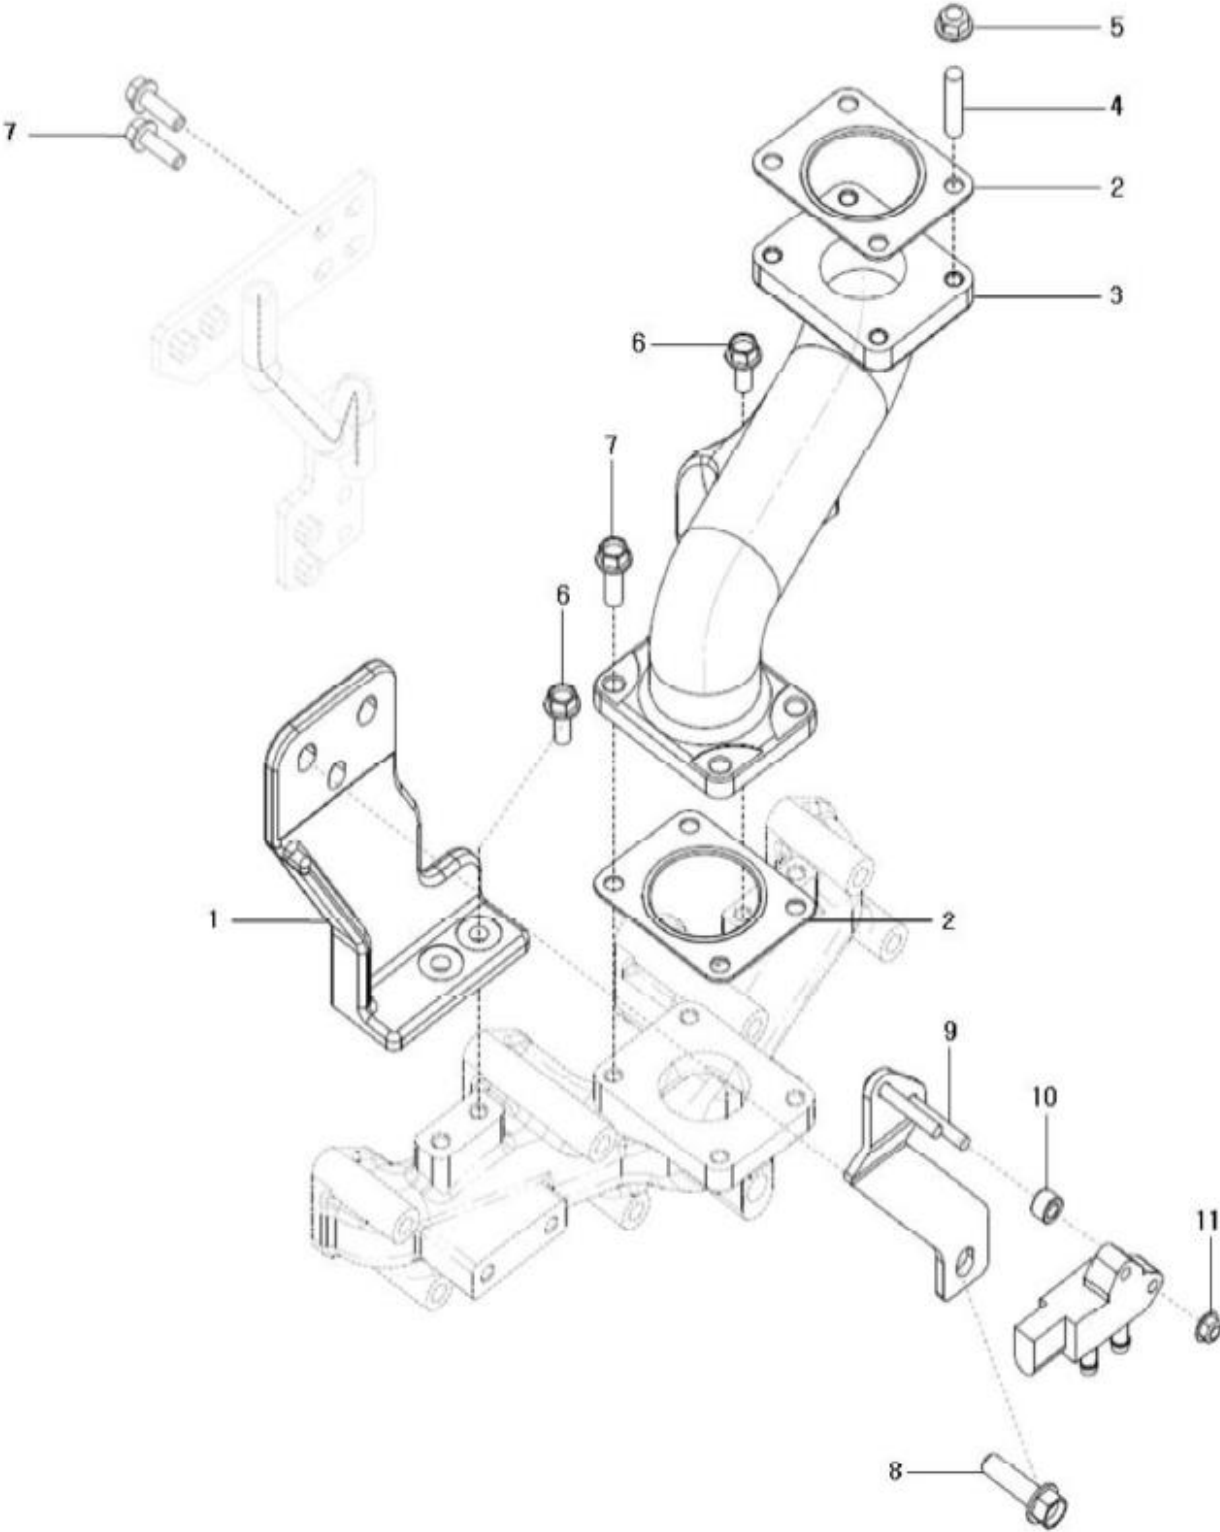 

NOTE



FIG 140

DATAPLATE

P1

YEAR

  2018

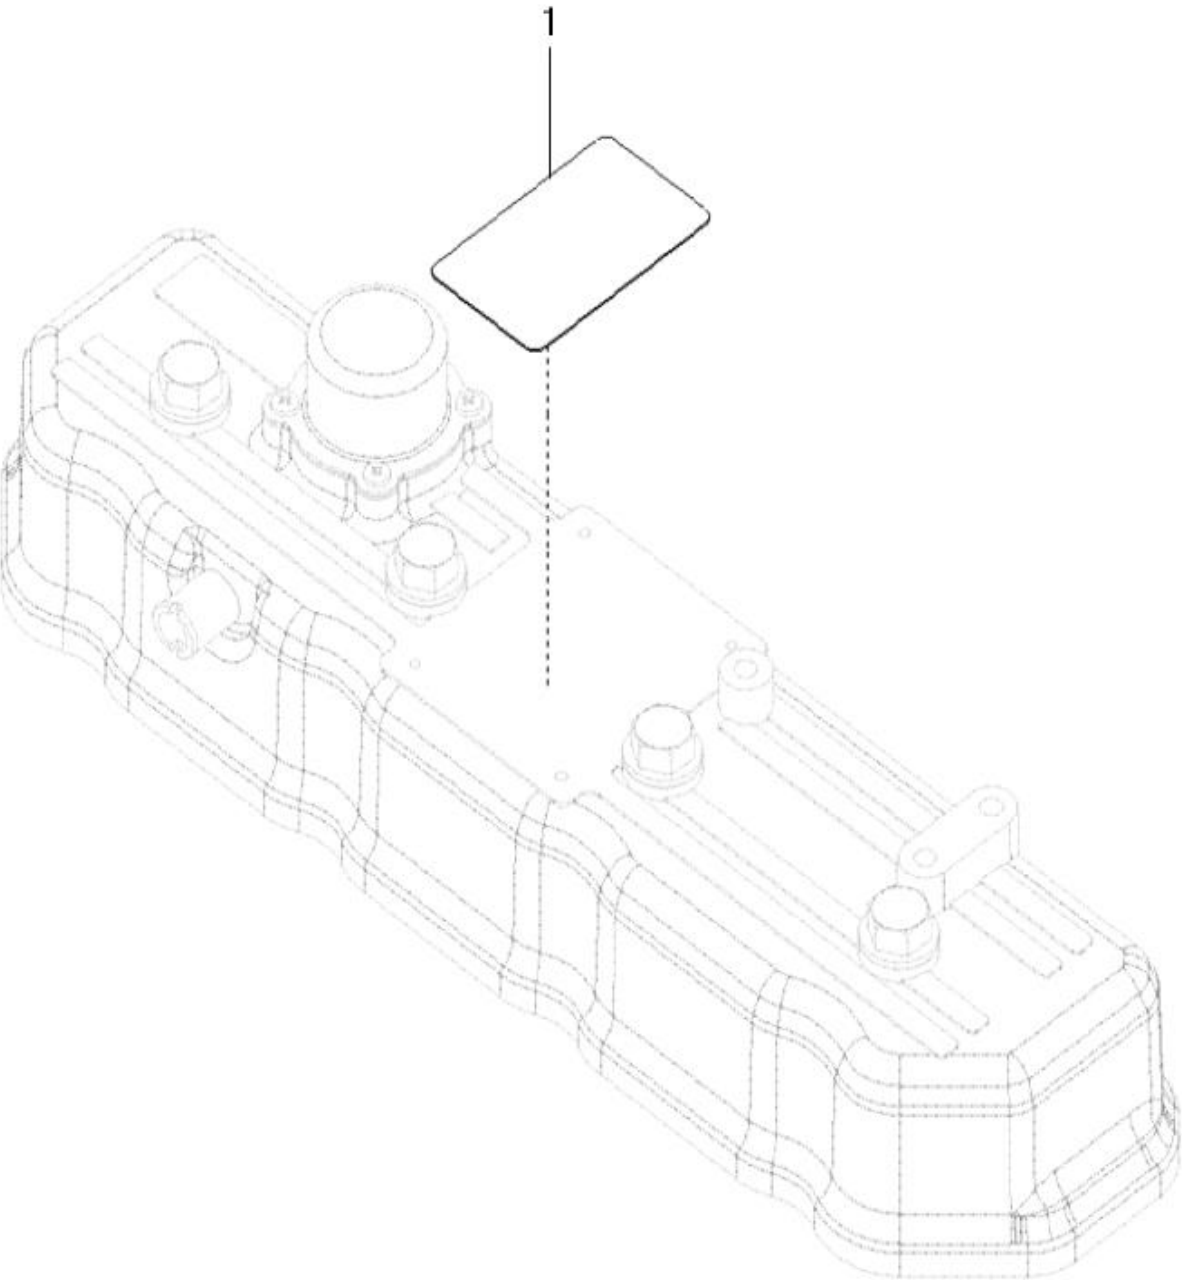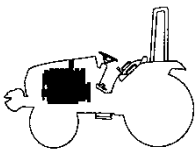

NOTE



FIG 141

NAME PLATE, STARTING MOTOR

P1

YEAR

  2018

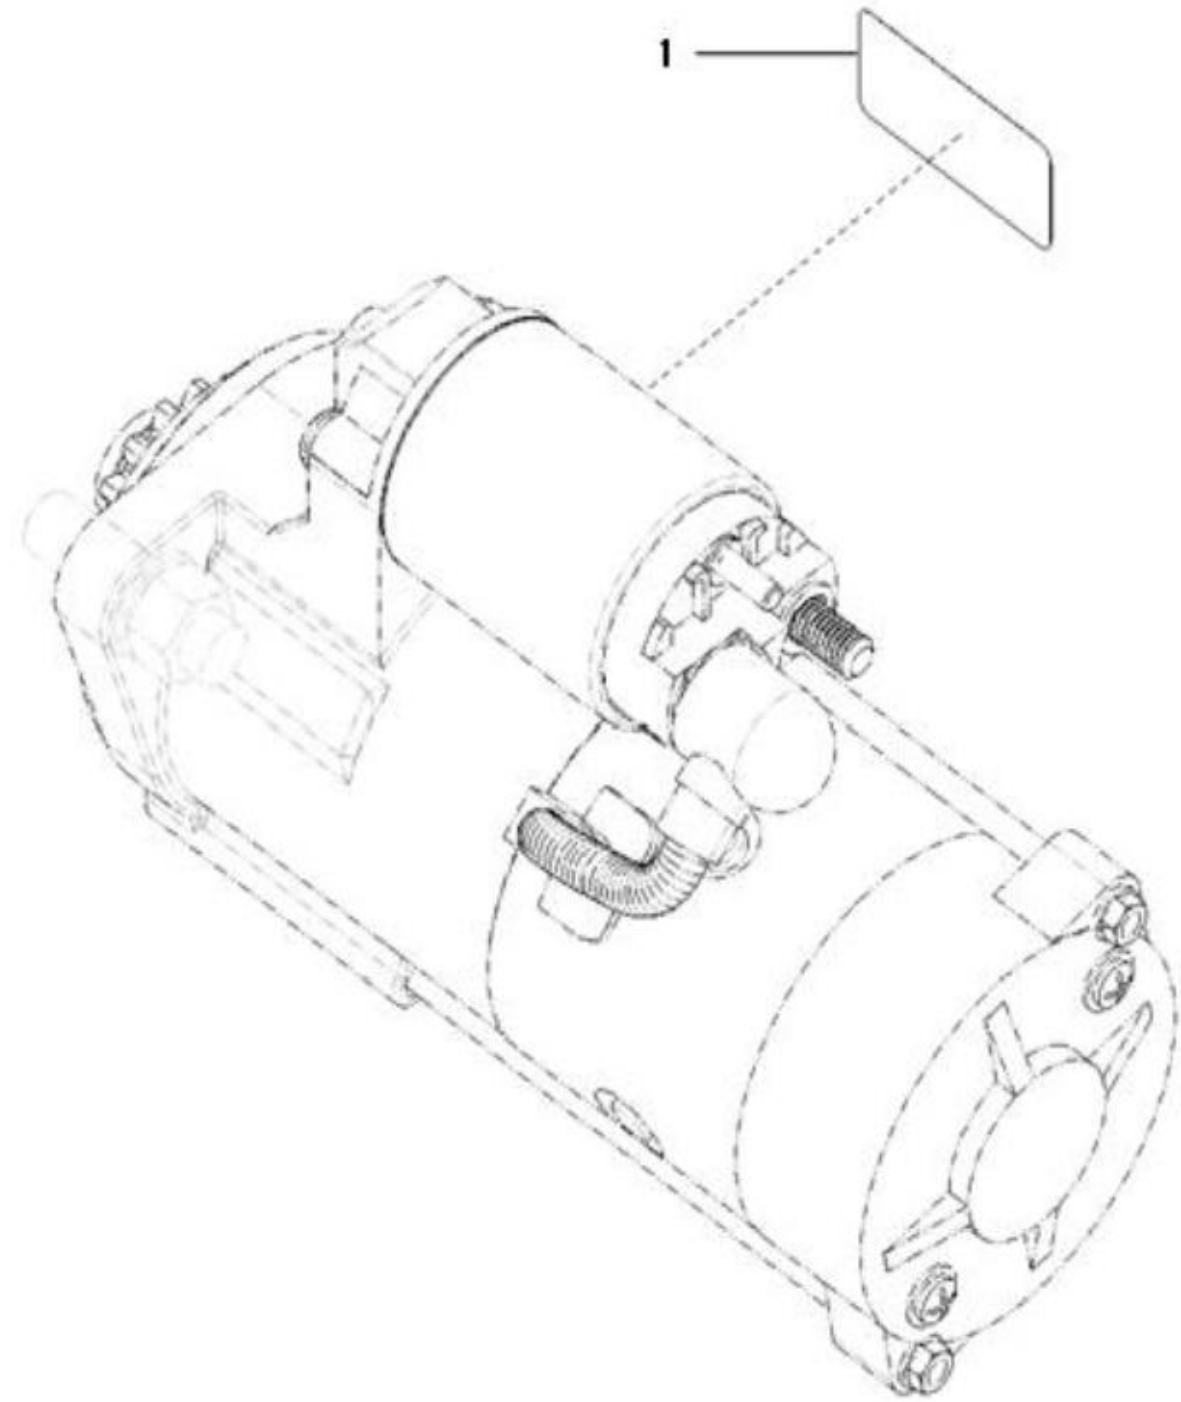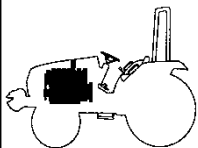

NOTE


FIG 142

DPF ASS'Y


P1

YEAR

 2018

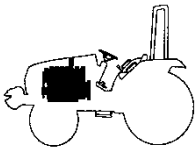

T474NH

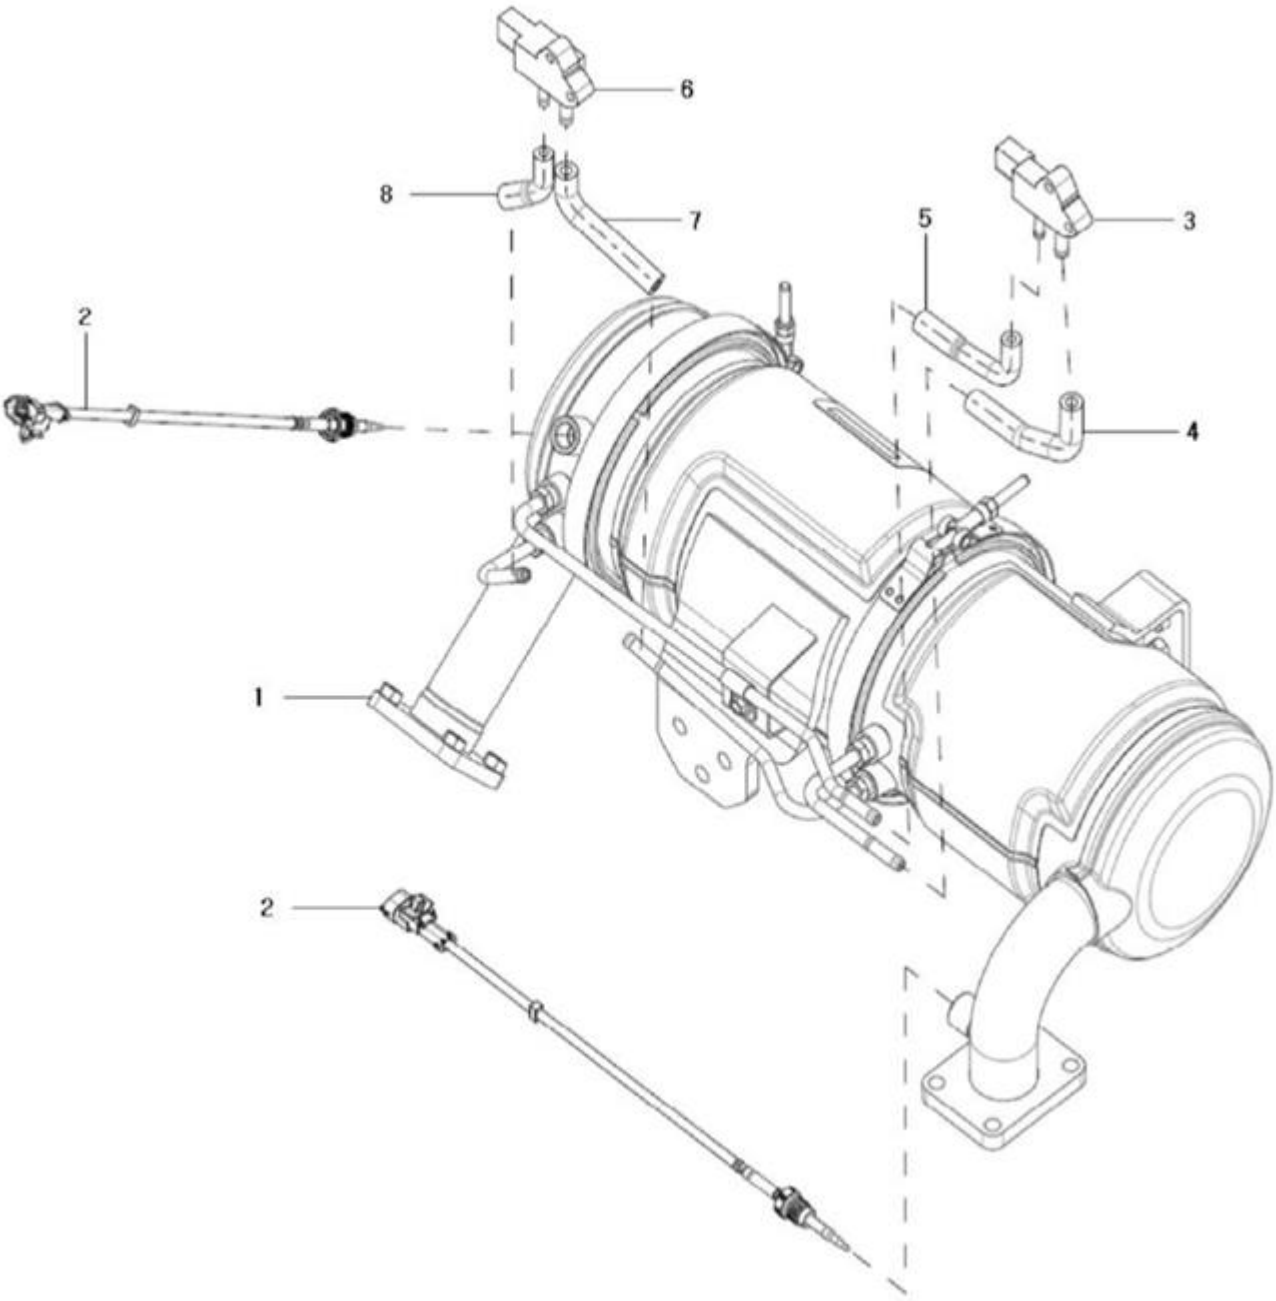 

NOTE


FIG 143

LIFT ASS'Y


P1

YEAR

 2018

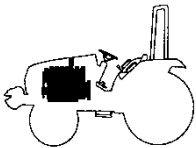

T474NH

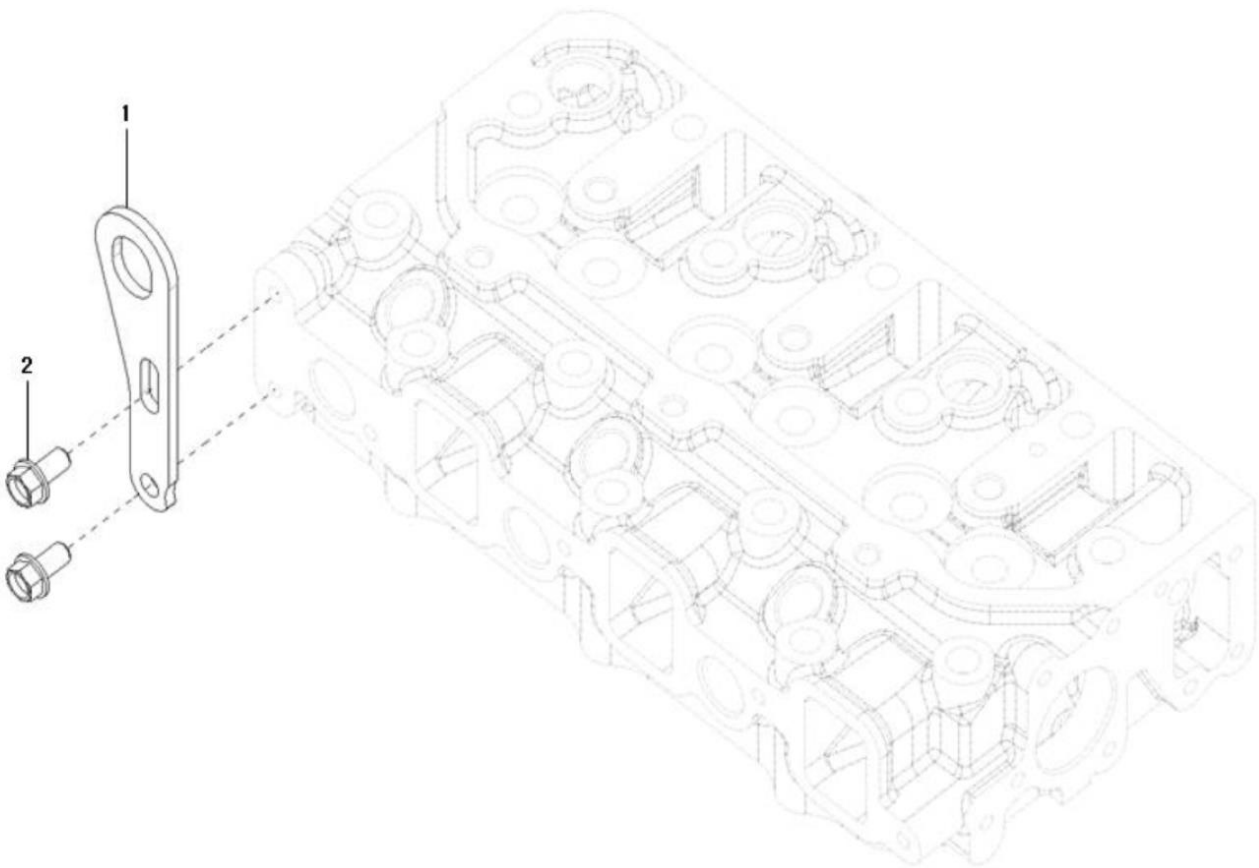 

NOTE



FIG 201

AIR CLEANER

P1

YEAR

  2018

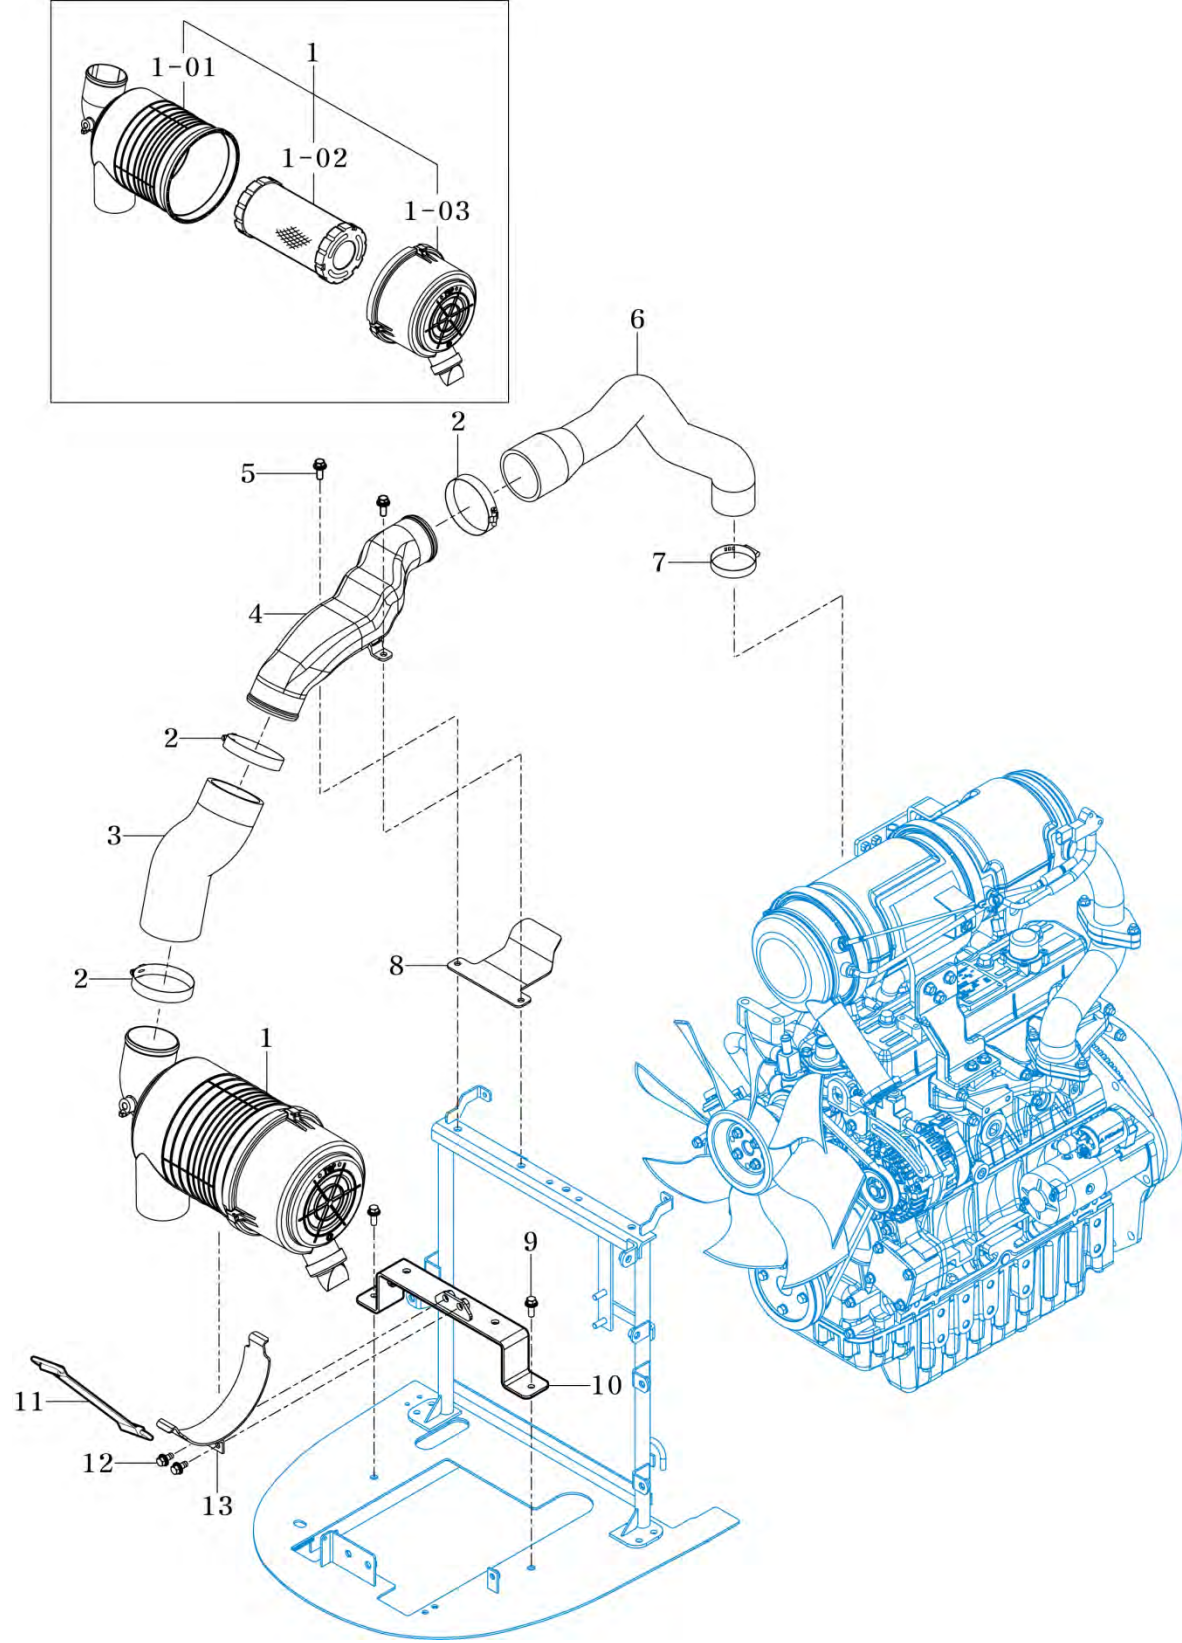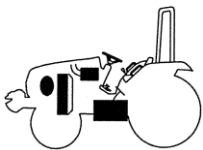

NOTE



FIG 202

RADIATOR

P1

YEAR

  2018

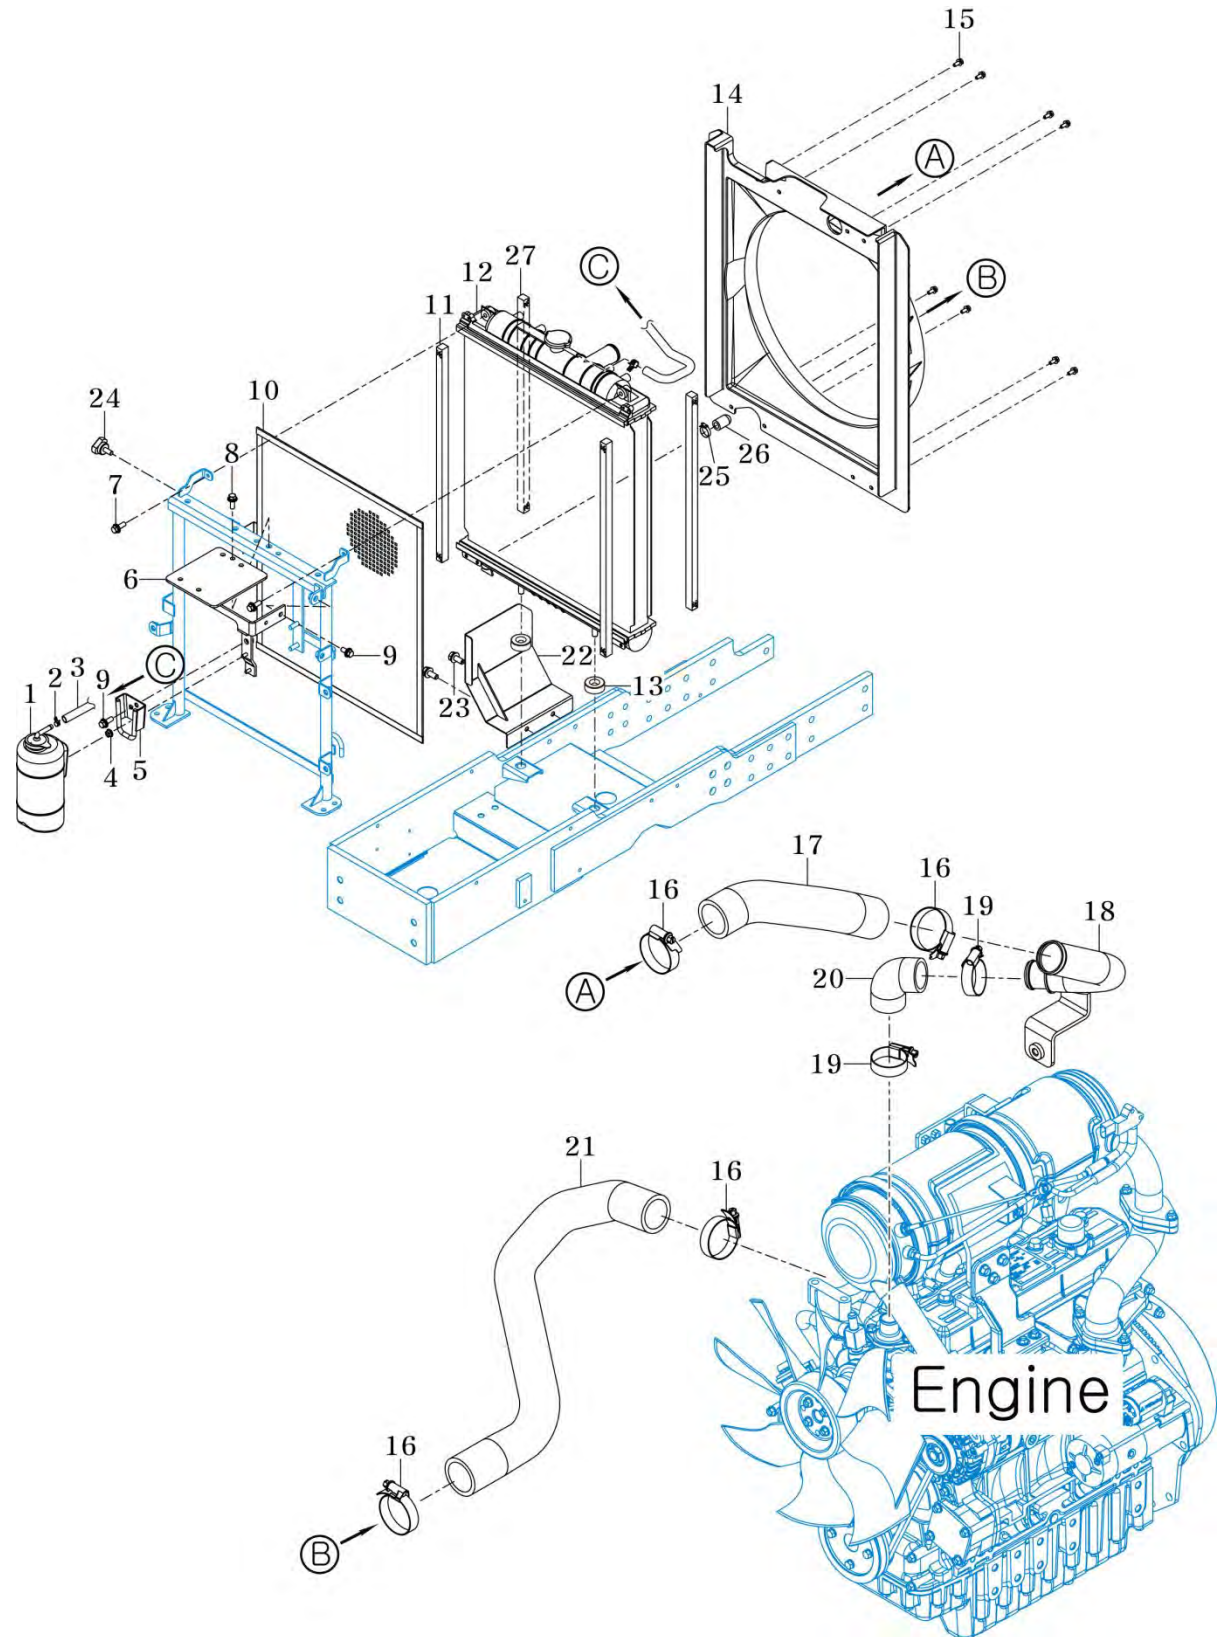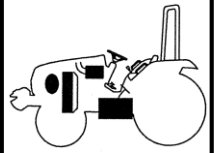

NOTE



FIG 203
T474NH

MUFFLER

P1

YEAR

  2018

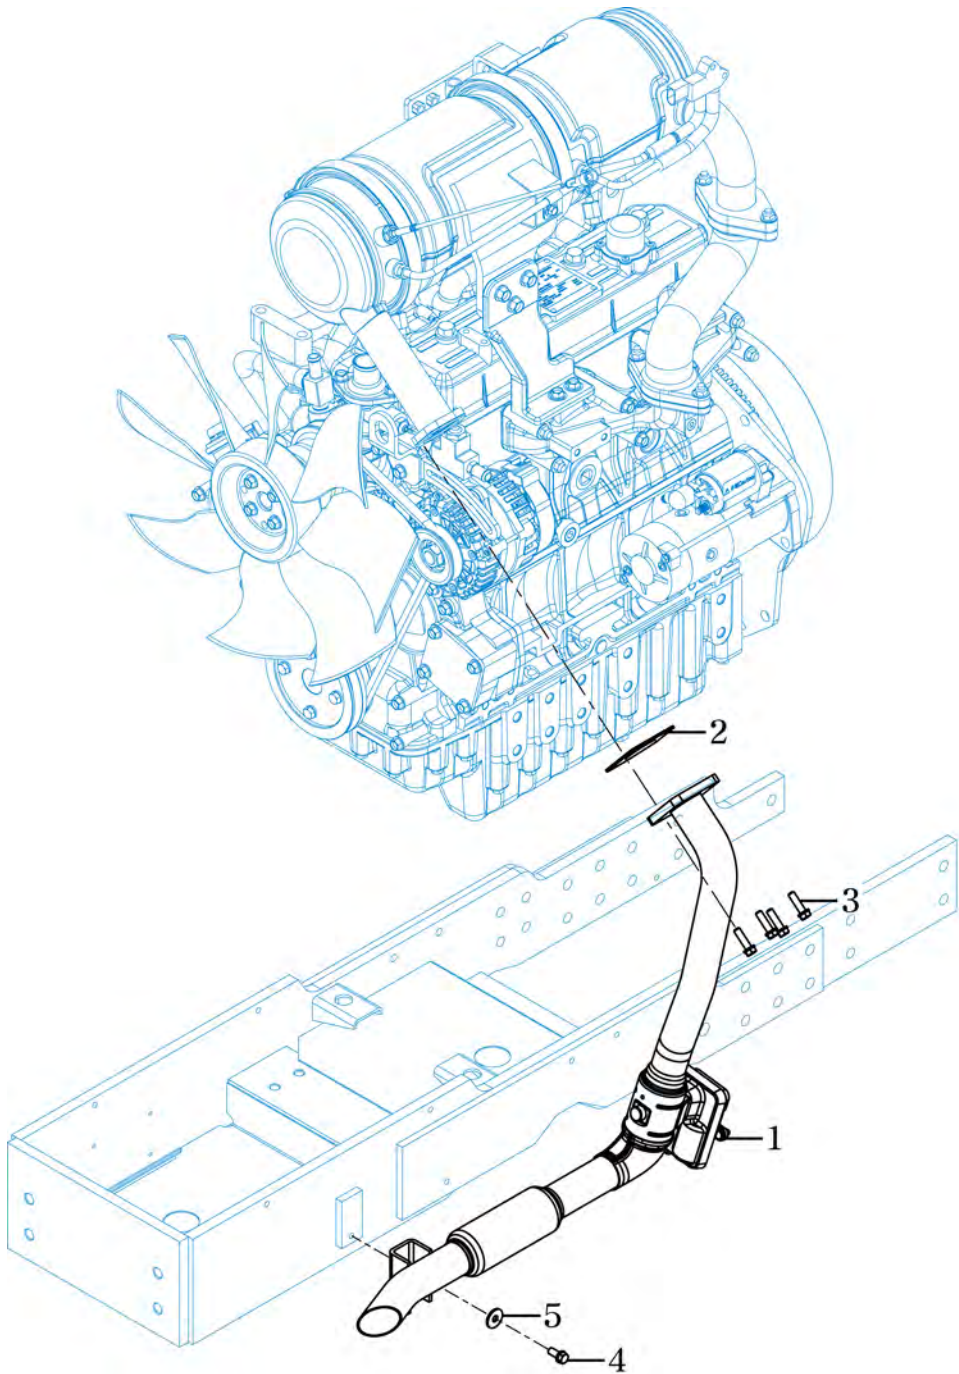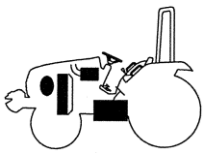

T474-U-203

NOTE

FIG 204

 
 
T474NH

FUEL TANK & FILTER

P1

YEAR

2018

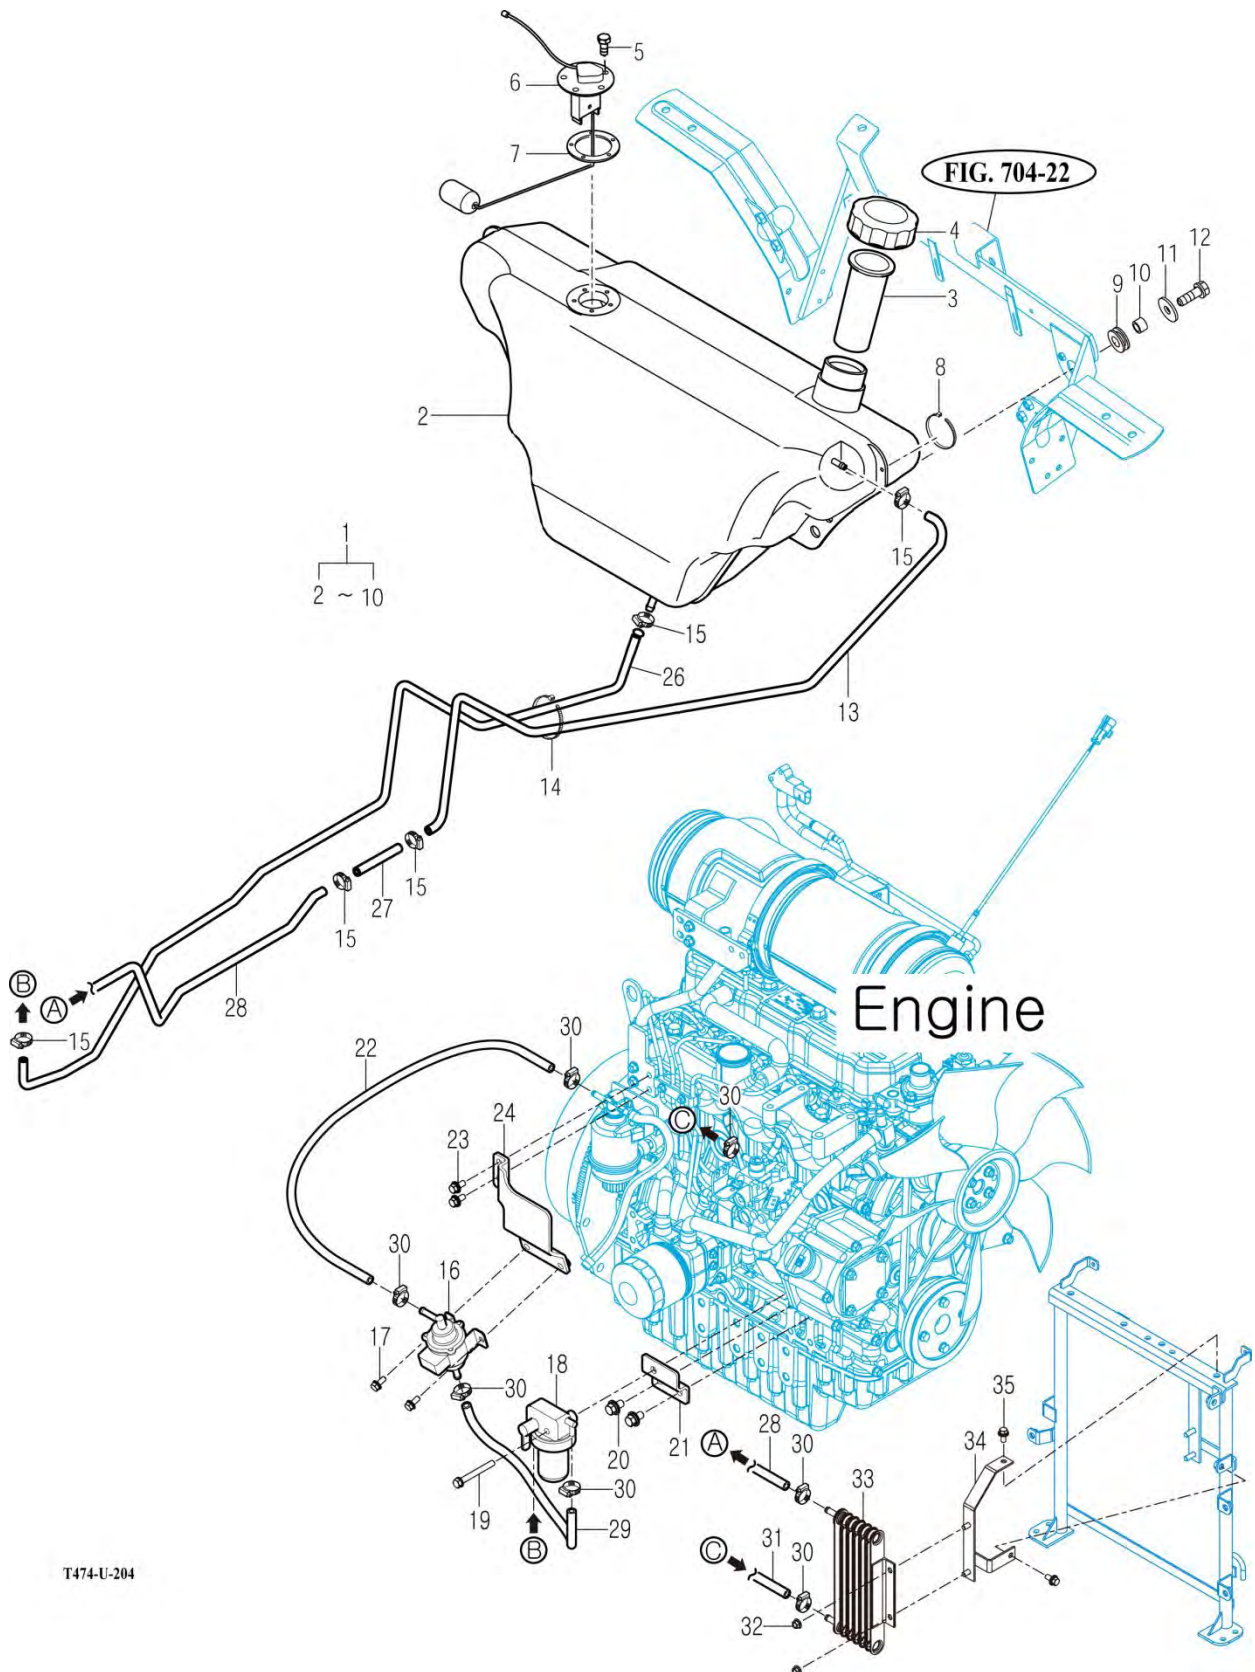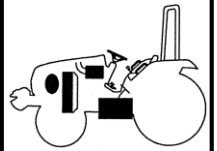

NOTE

FIG 205
T474NH

OIL COOLER

P1

YEAR
2018

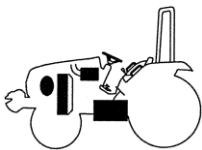 


FIG. 701-01

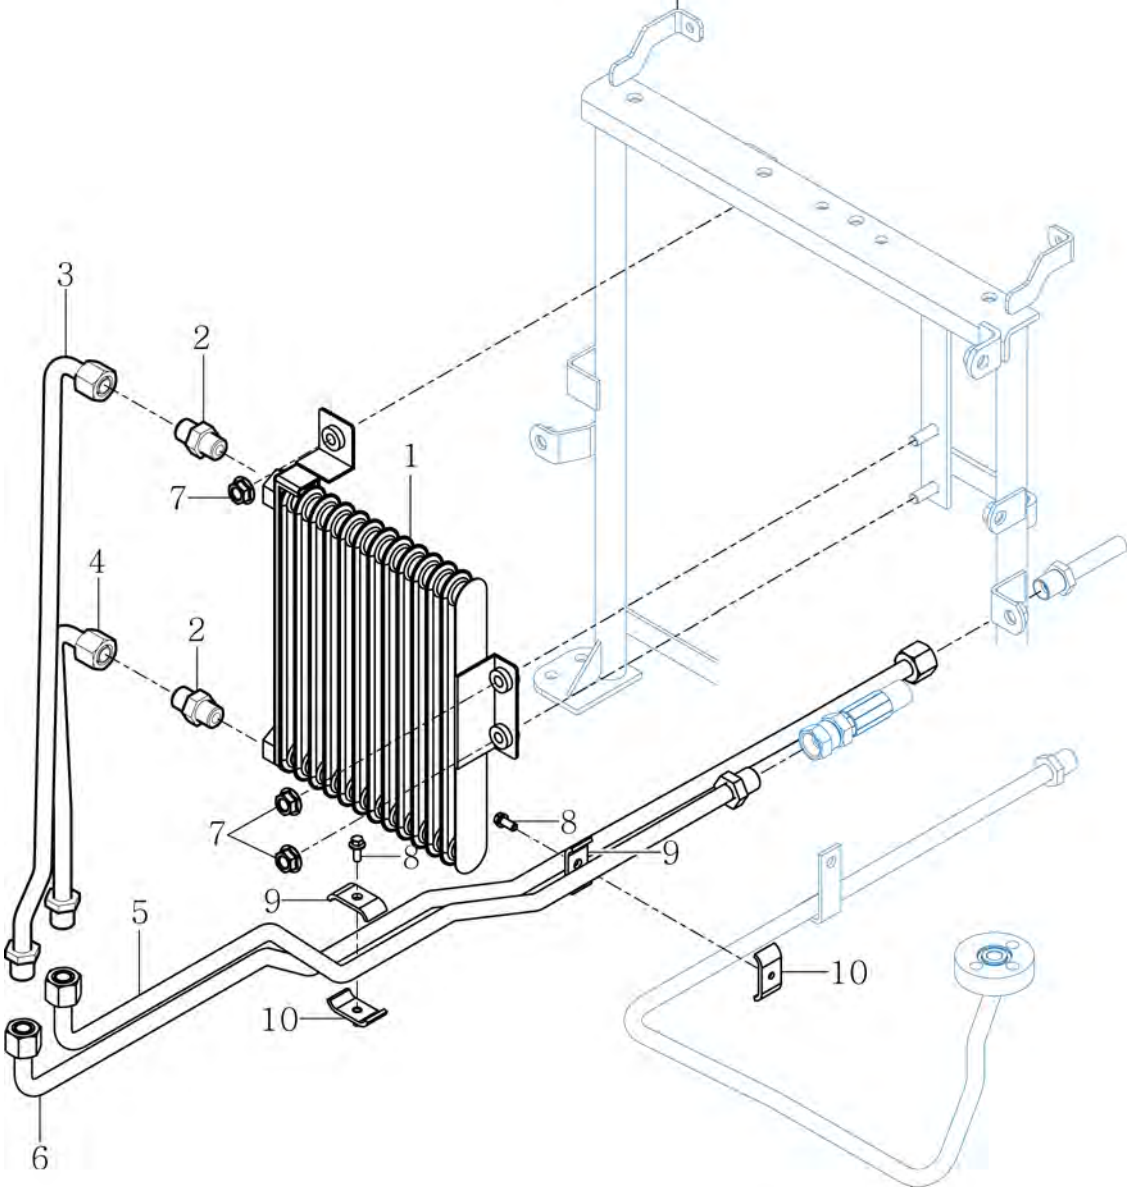 


FIG. 610-11

NOTE



FIG 302
T474NH

FLYWHEEL & CLUTCH

P1

YEAR

  2018

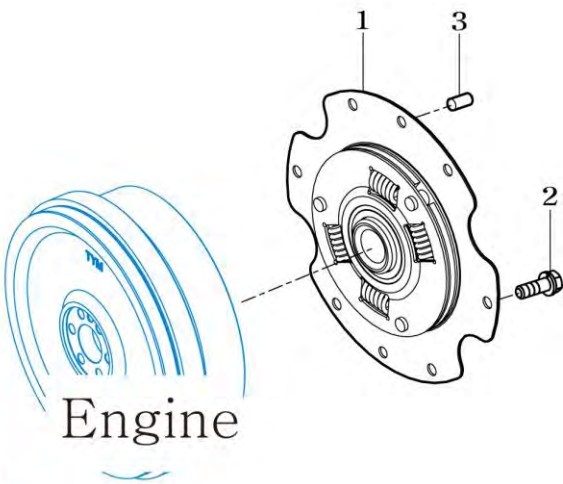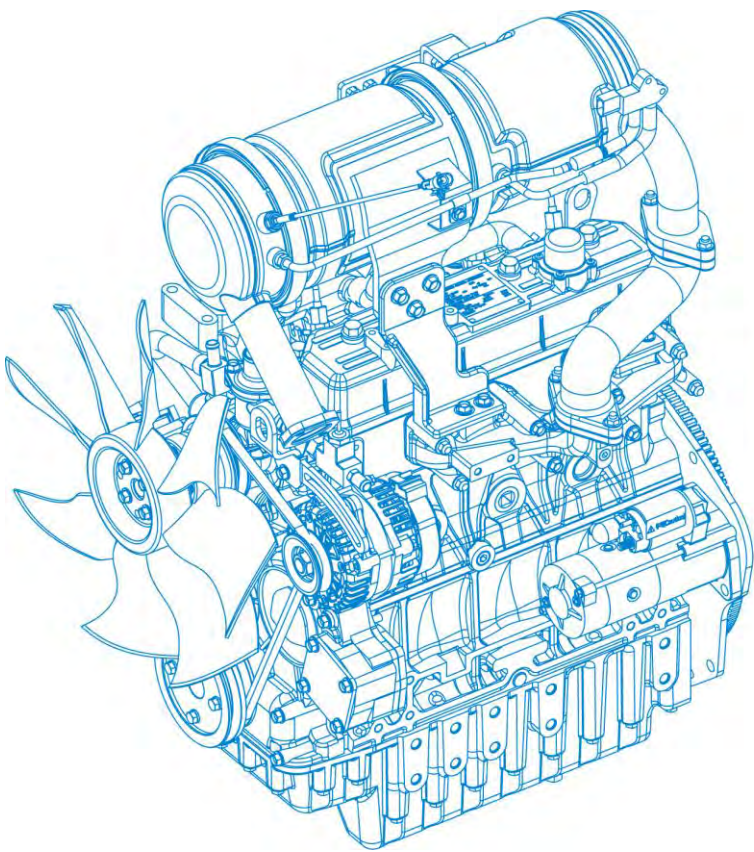

T474-U-302

NOTE


FIG 303

BRAKE PEDAL


P1

YEAR

 2018

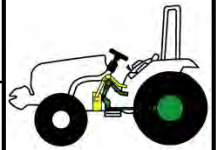

T474NH

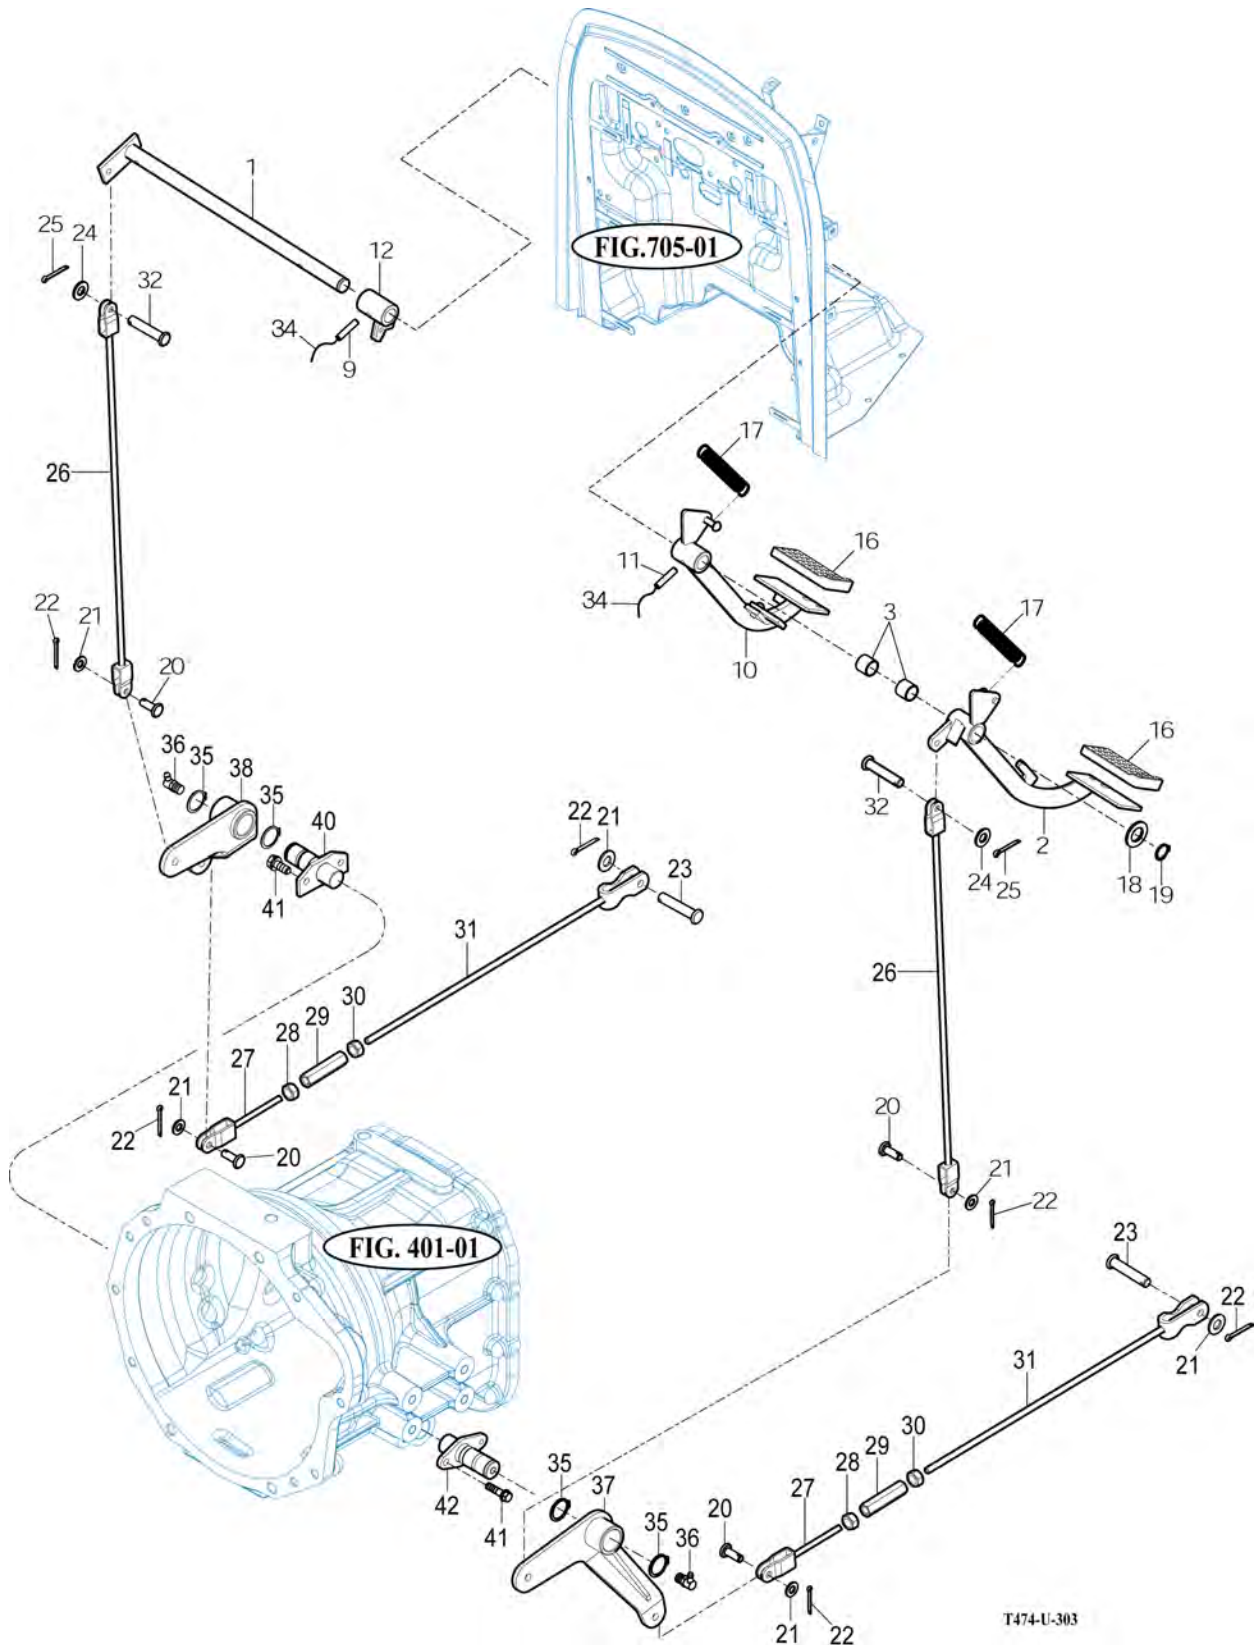 

NOTE

FIG 304

 
T474NH

BRAKE

P1

YEAR

2018

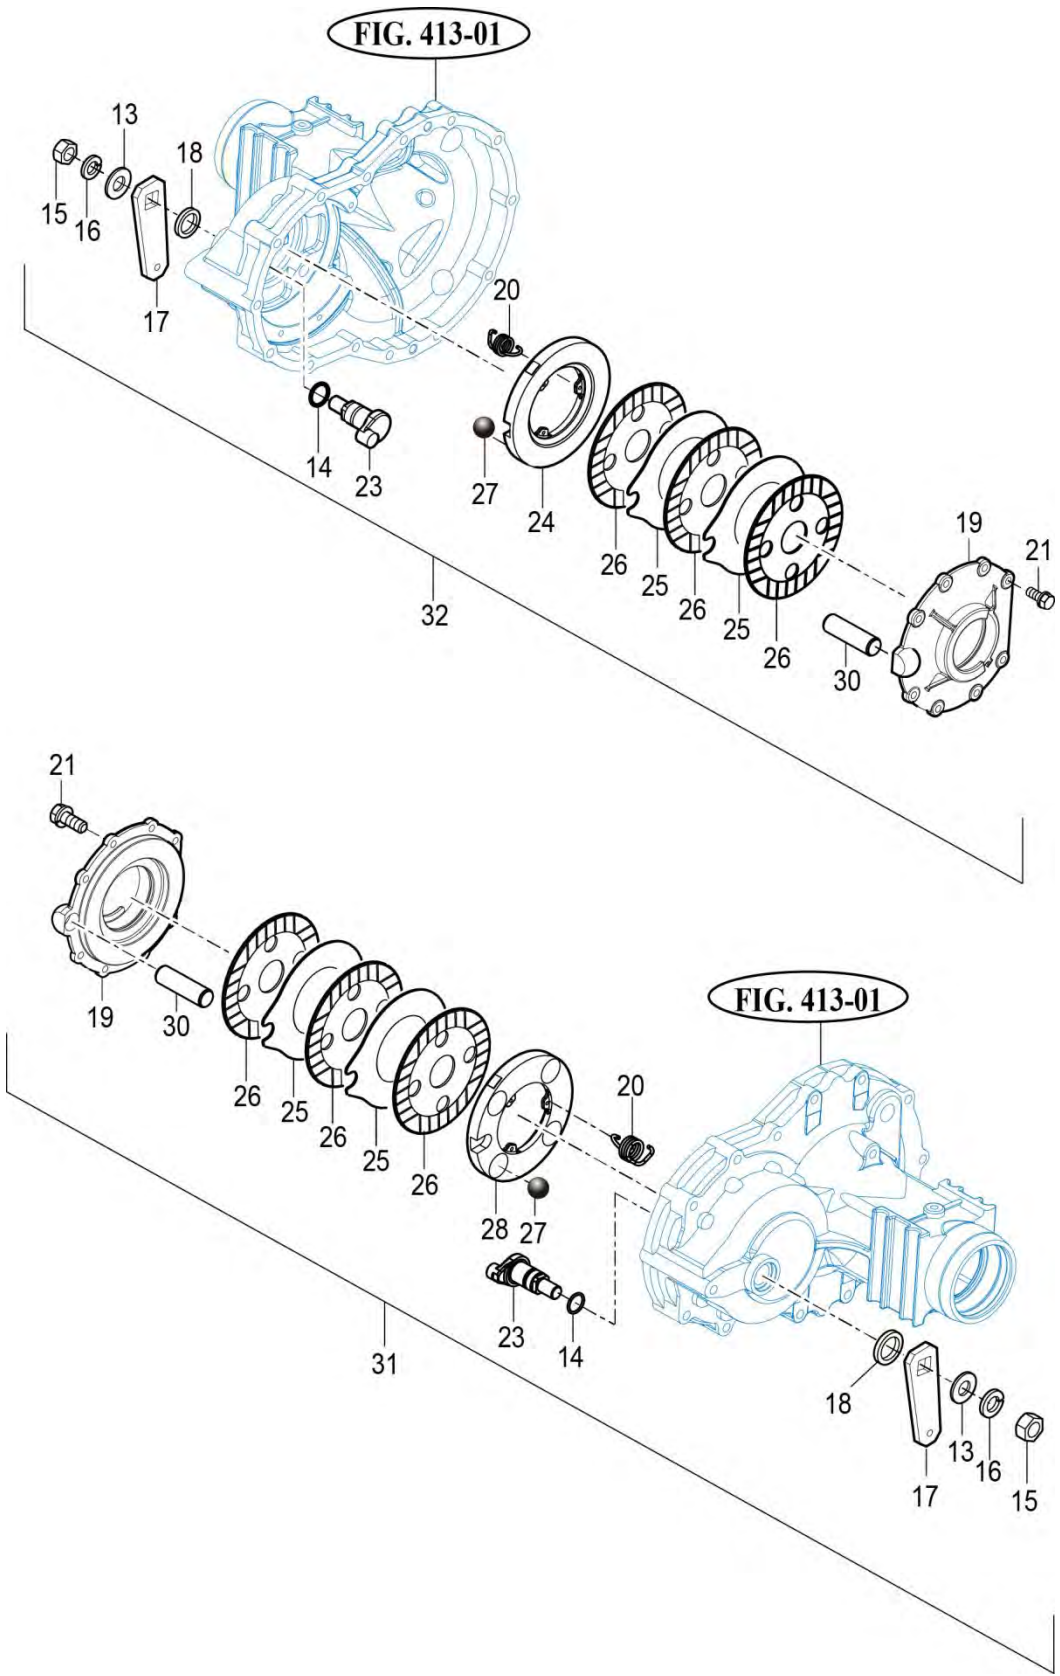

NOTE

FIG 306

FRONT WHEEL MOUNTING

P1


YEAR

2018



T474NH

 FIG. 505-20

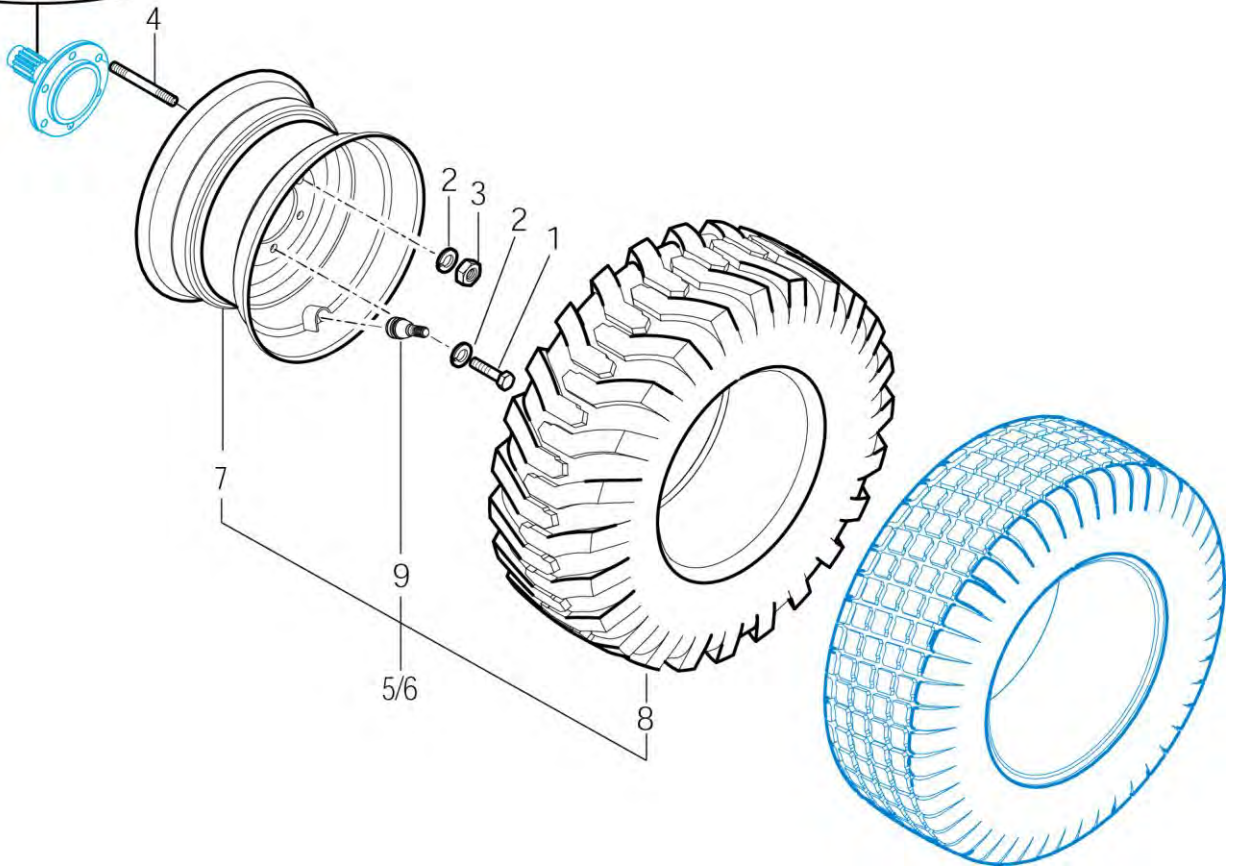

NOTE


FIG 307
T474NH

REAR WHEEL MOUNTING

P1

YEAR

 2018

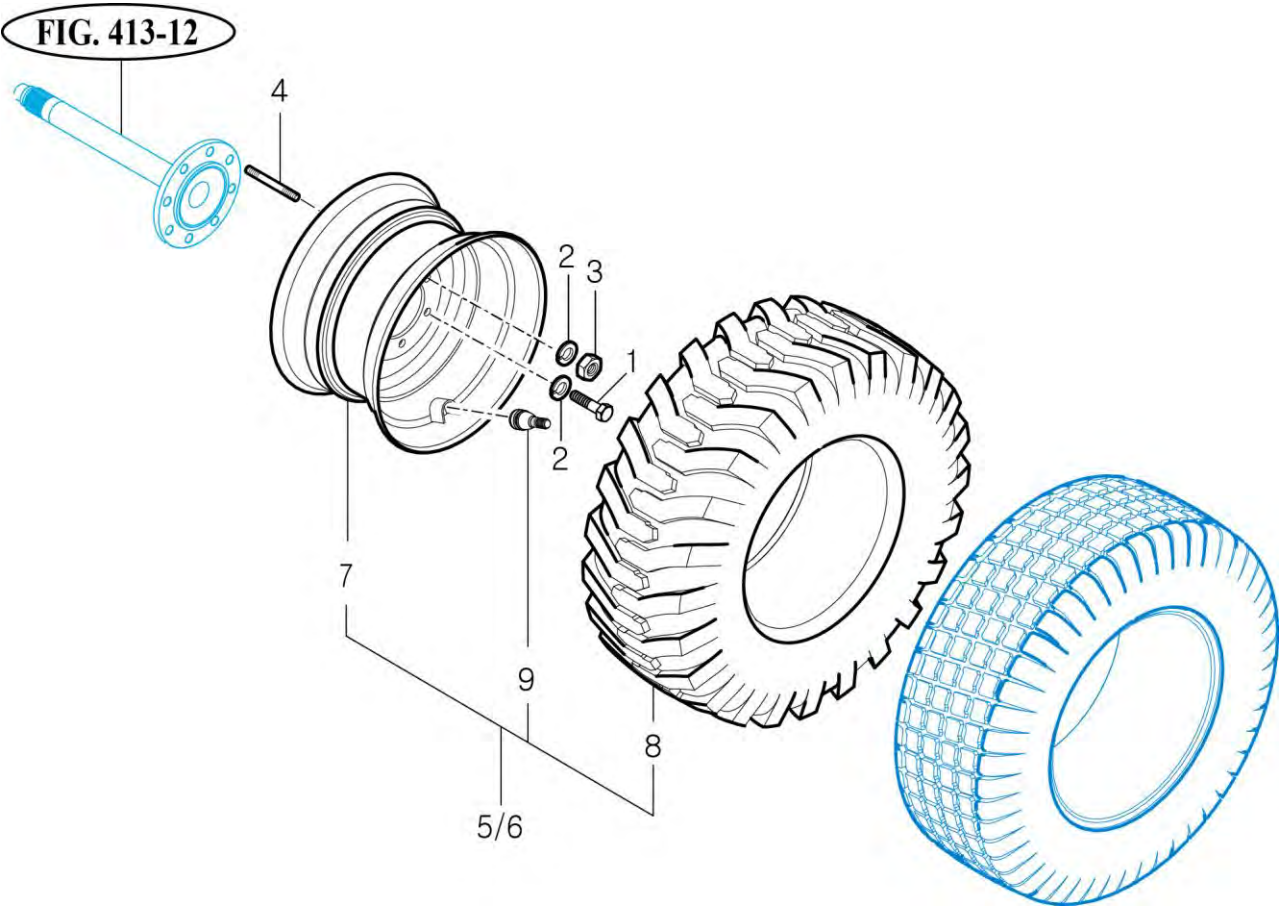

NOTE


FIG 308
T474NH

STEERING WHEEL

P1

YEAR

 2018

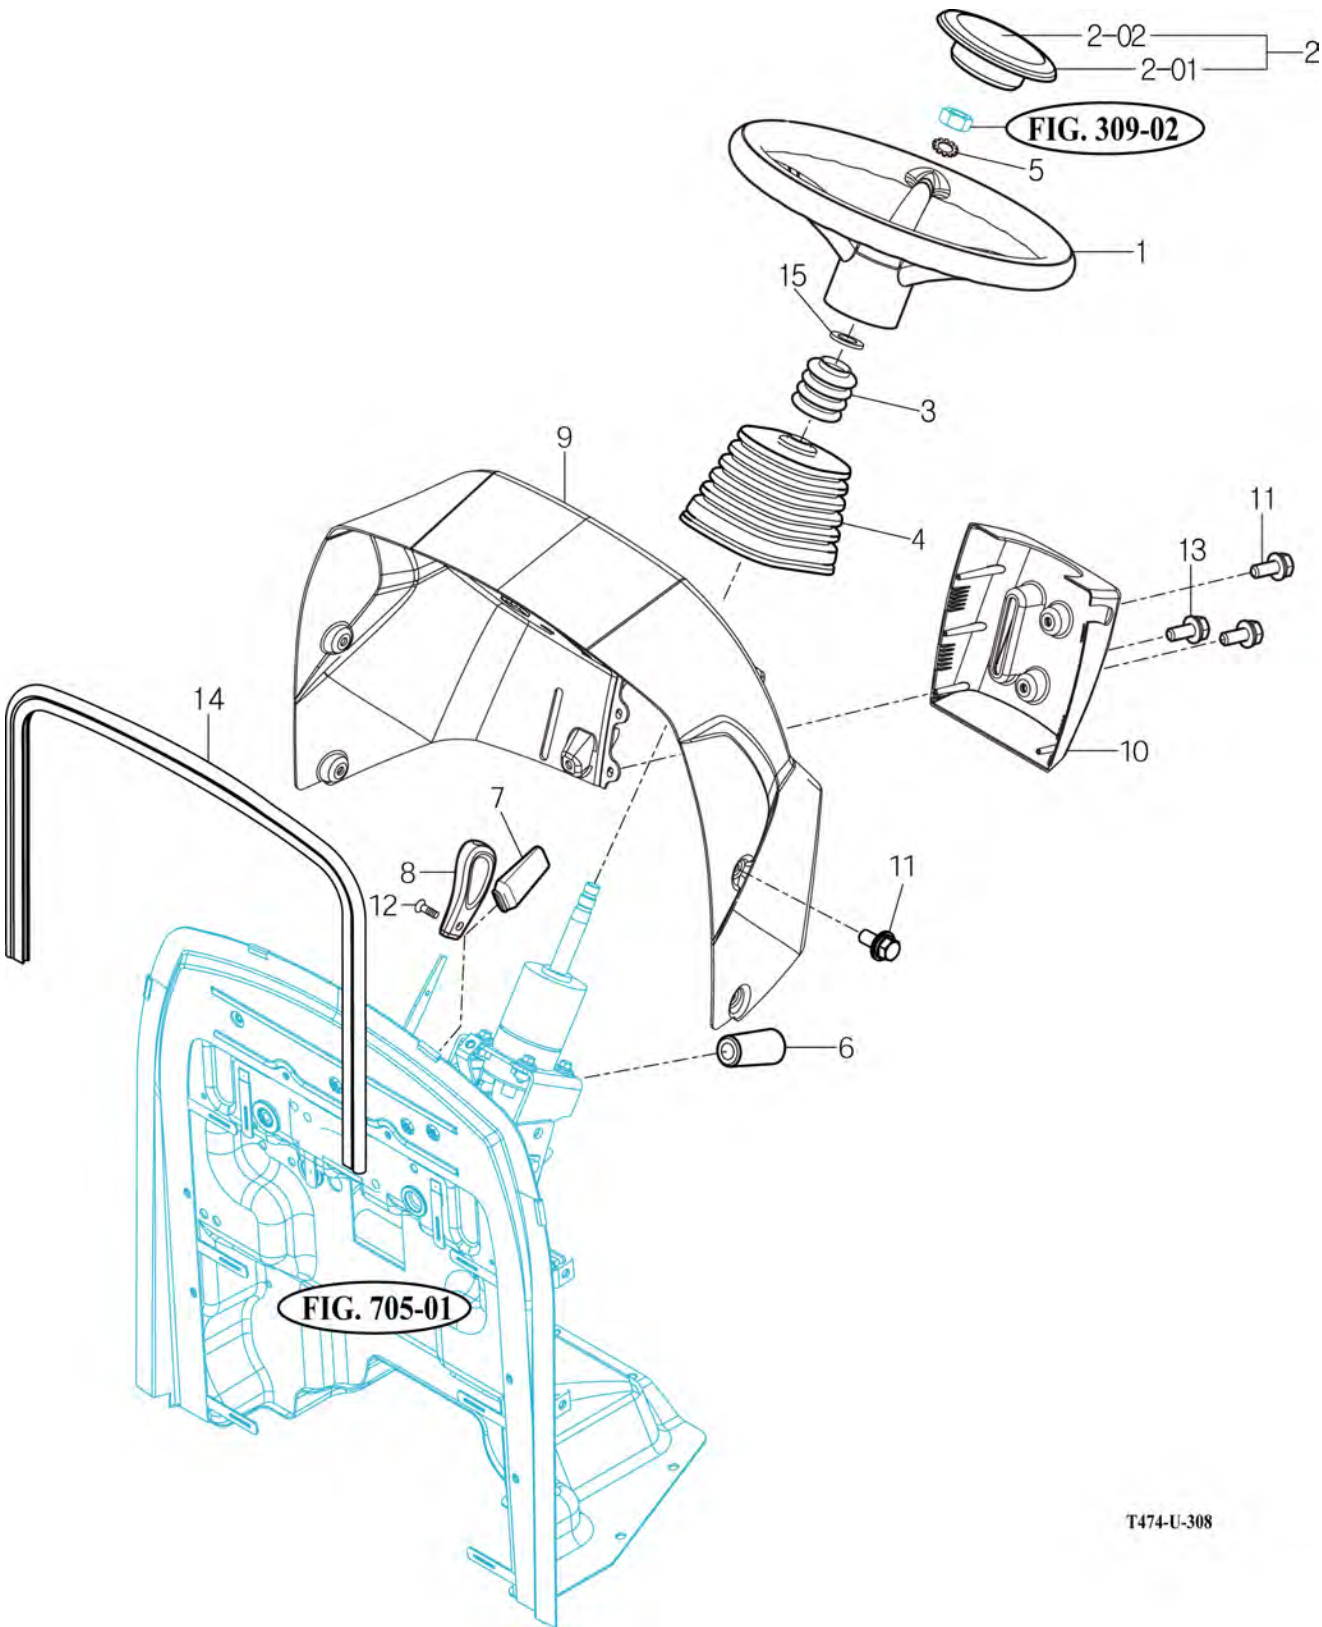

T474-U-308

NOTE

FIG 309

 
T474NH

STEERING VALVE & PARKING

P1

YEAR


2018

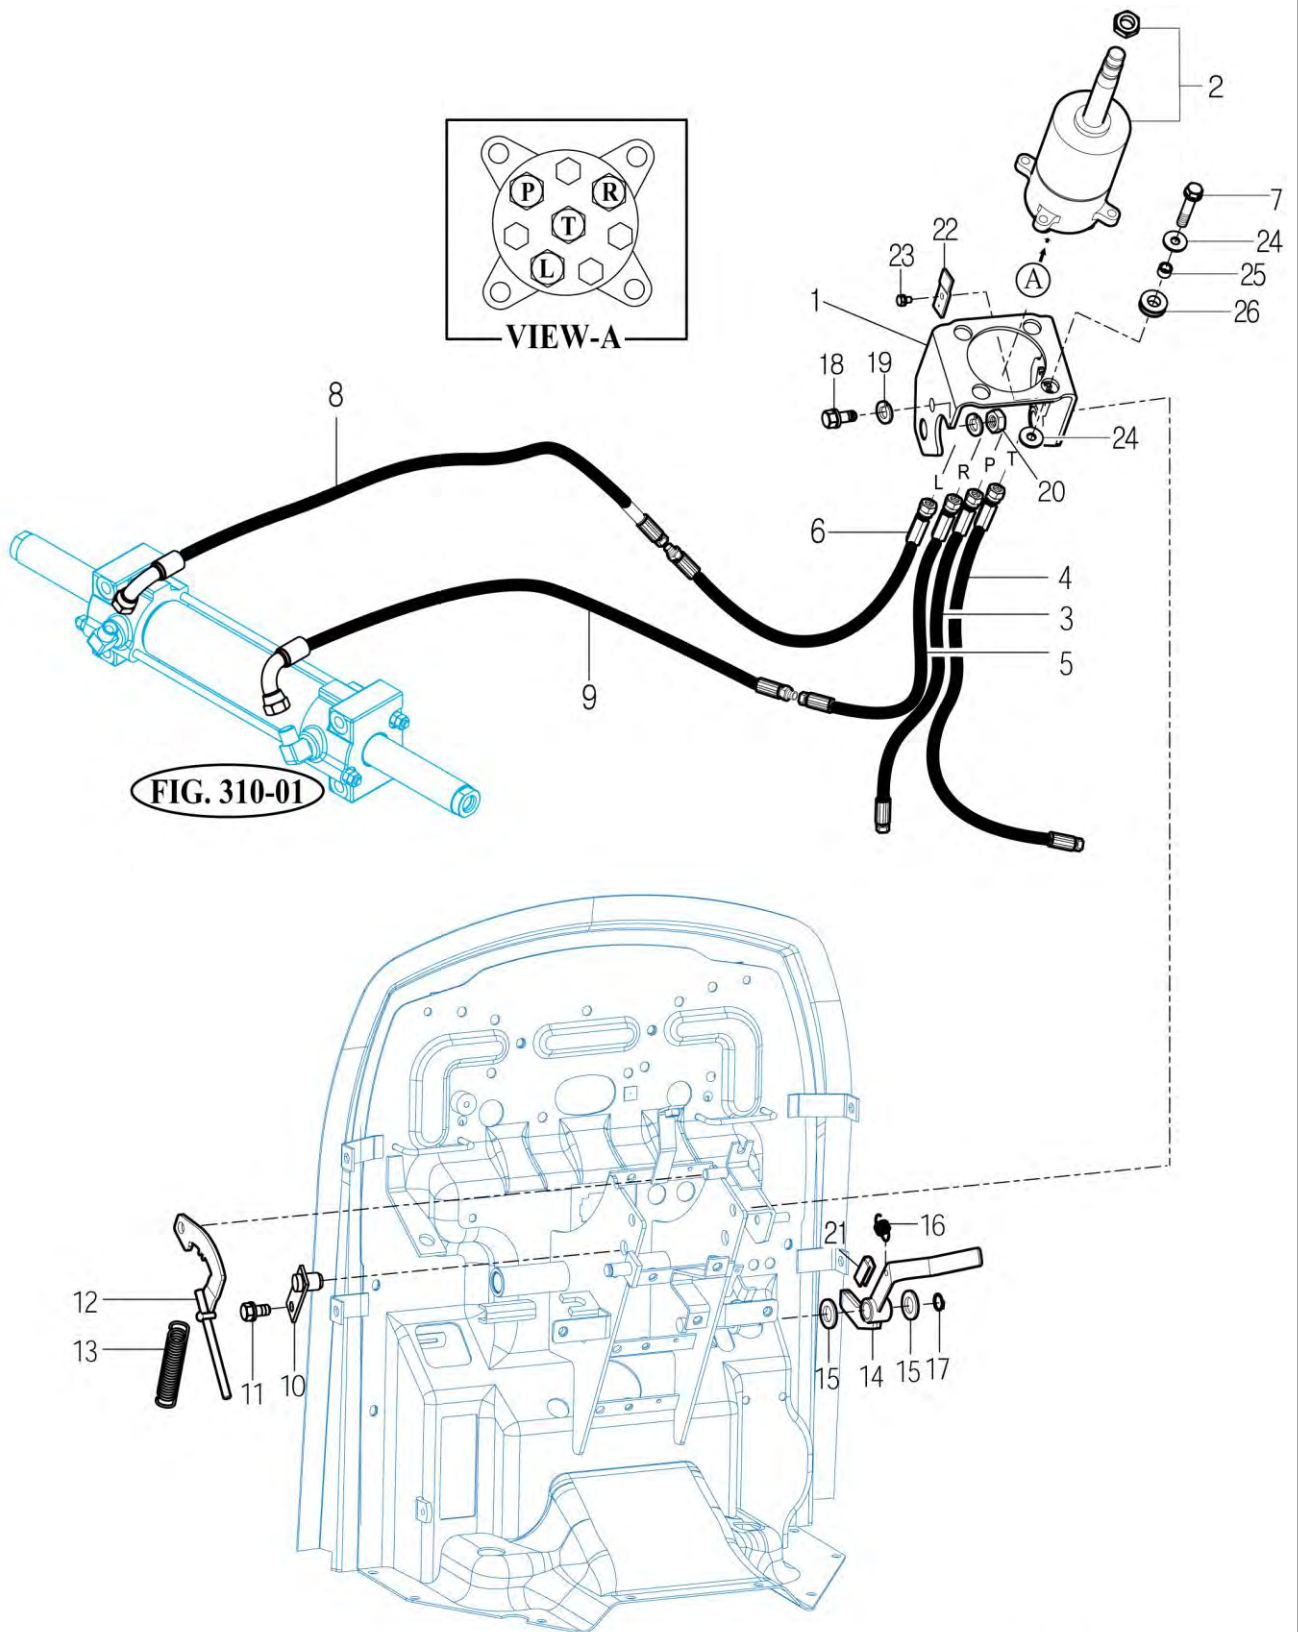

T474-U-309

NOTE

 T474NH

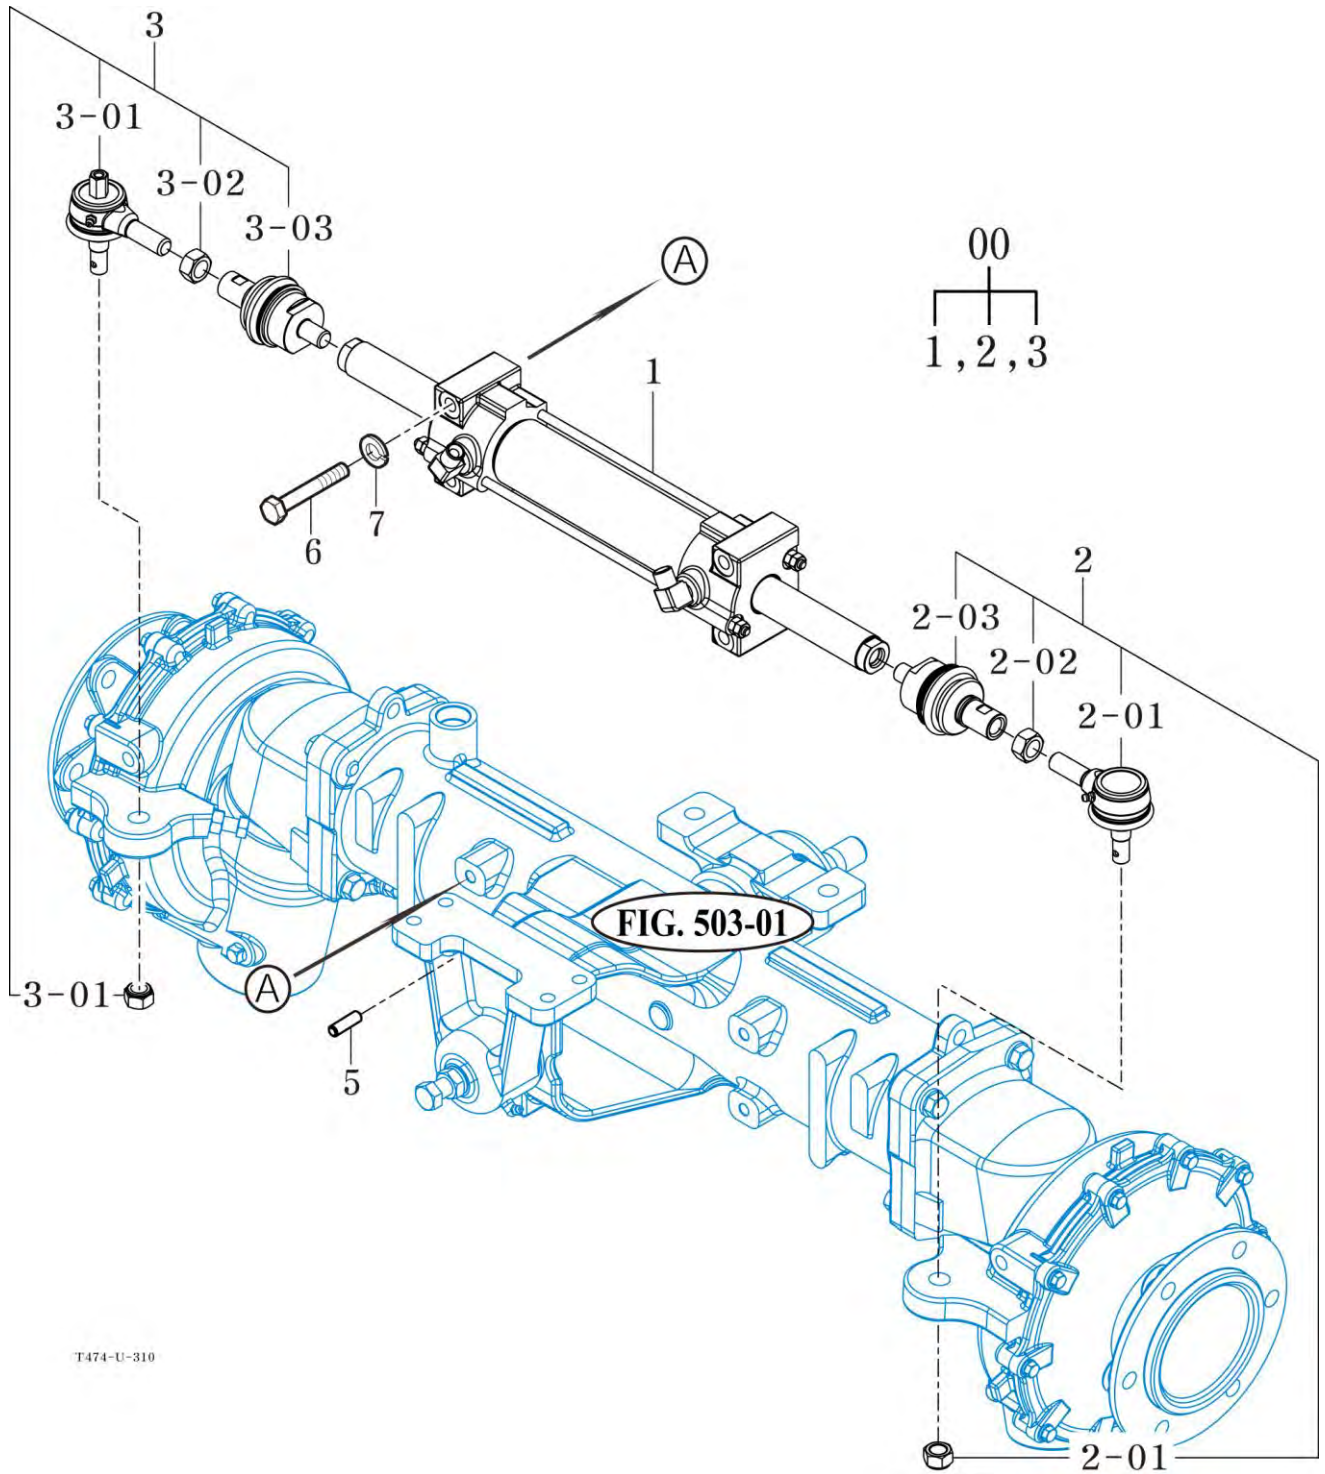

T474-U-310

NOTE


FIG 401

TRANSMISSION FRONT CASE


P1

YEAR

 2018

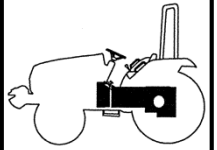

T474NH

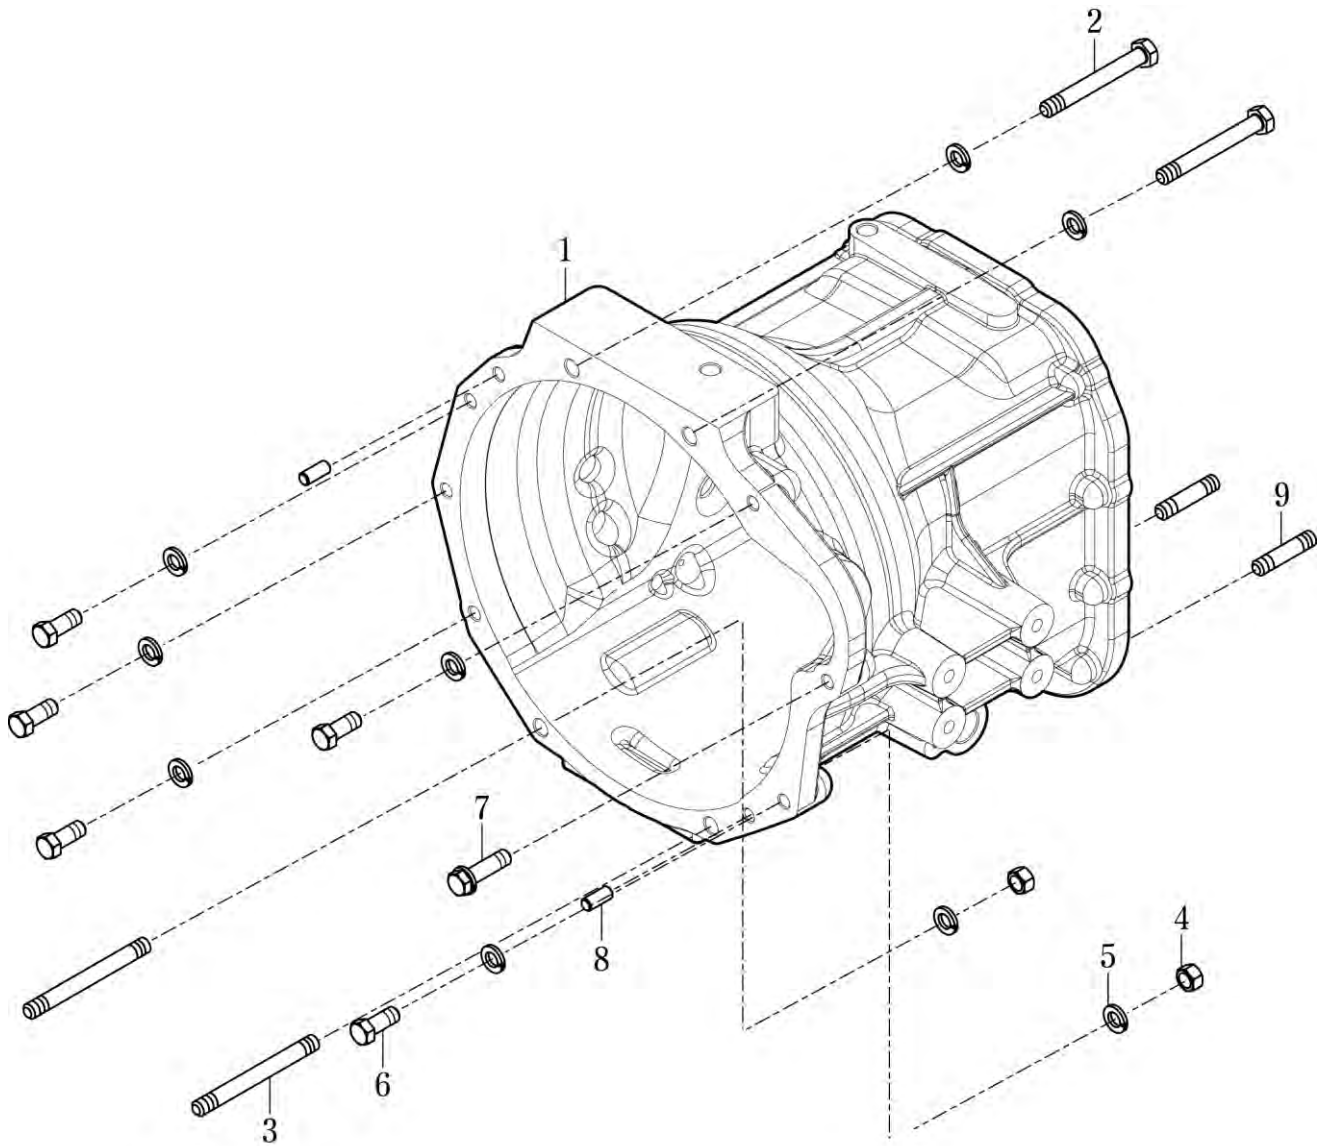 

T474-E-401

NOTE


FIG 402

HST


P1

YEAR

 2018

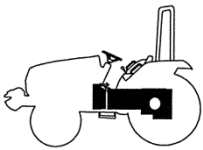

T474NH

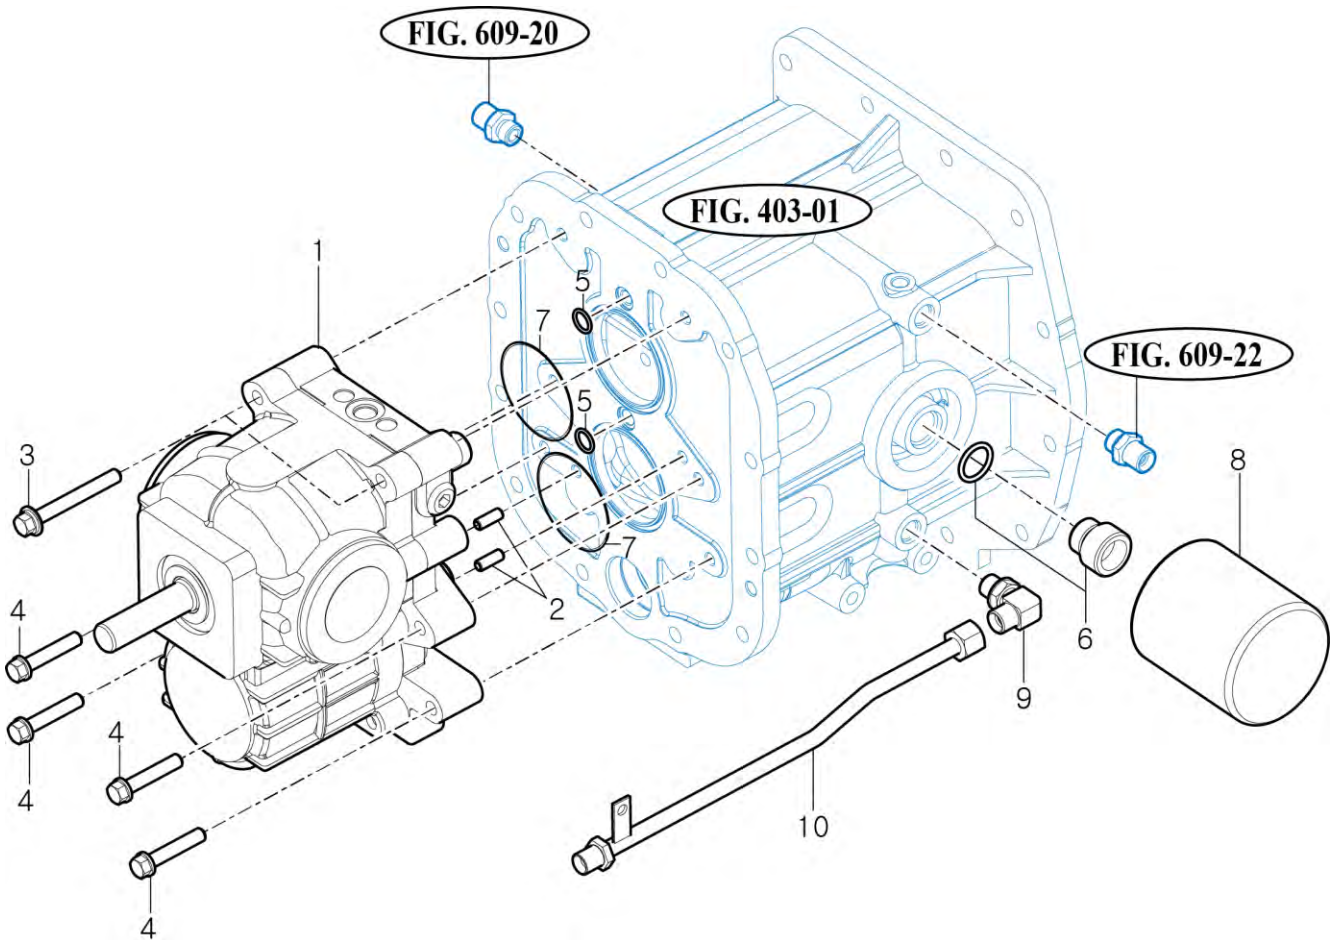 

NOTE



FIG 403

MID CASE

P1

YEAR

  2018

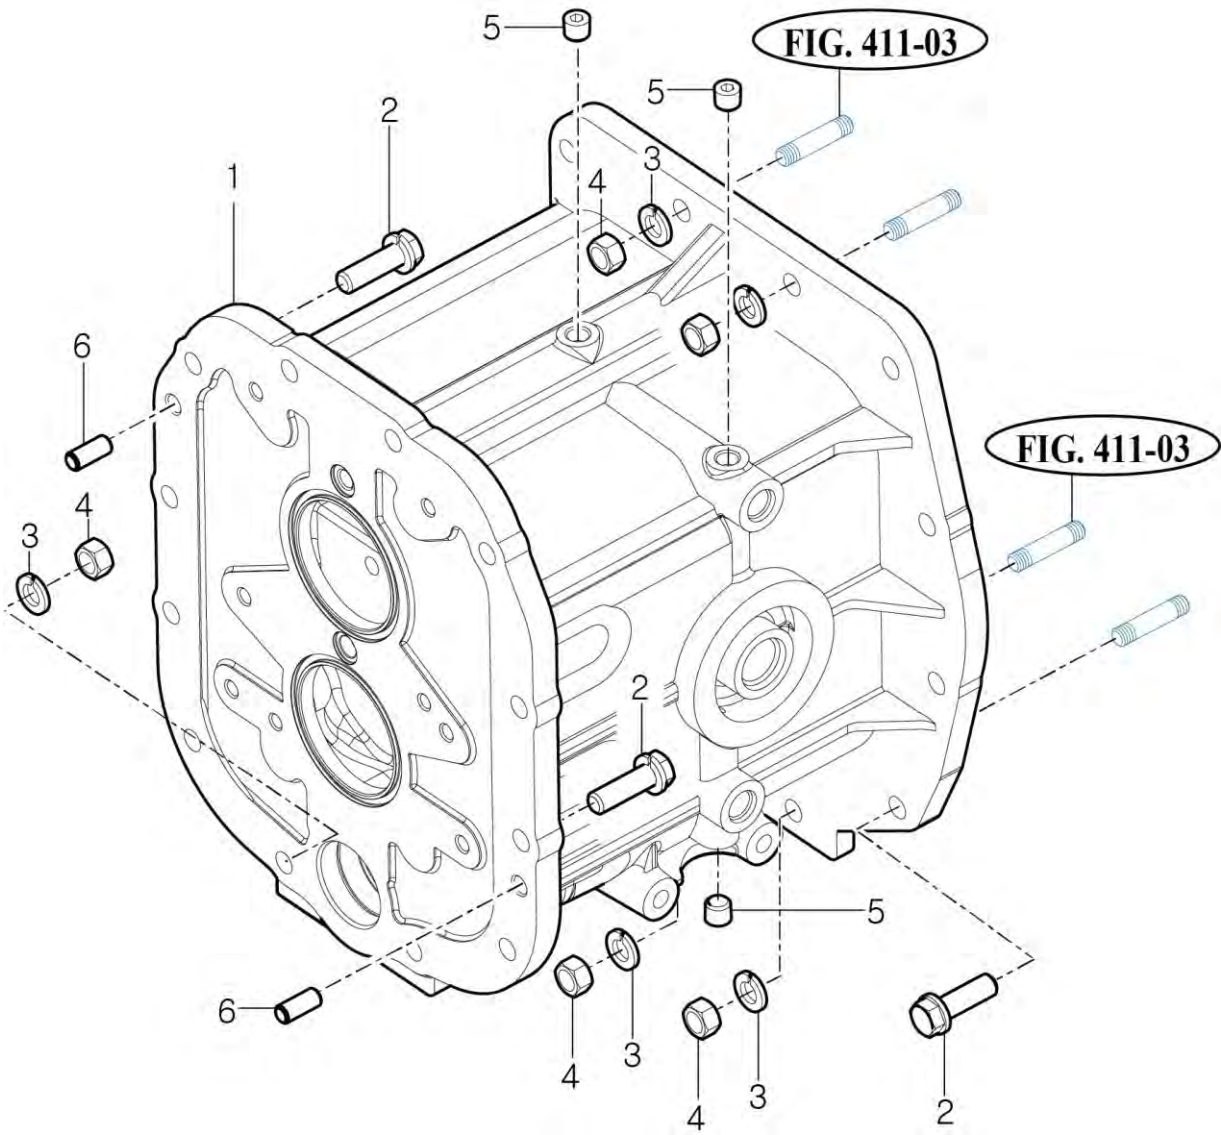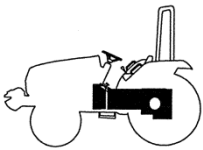

NOTE


FIG 404

4WD DRIVE GEAR


P1

YEAR

 2018

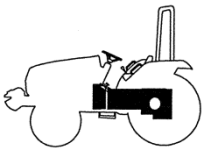

T474NH

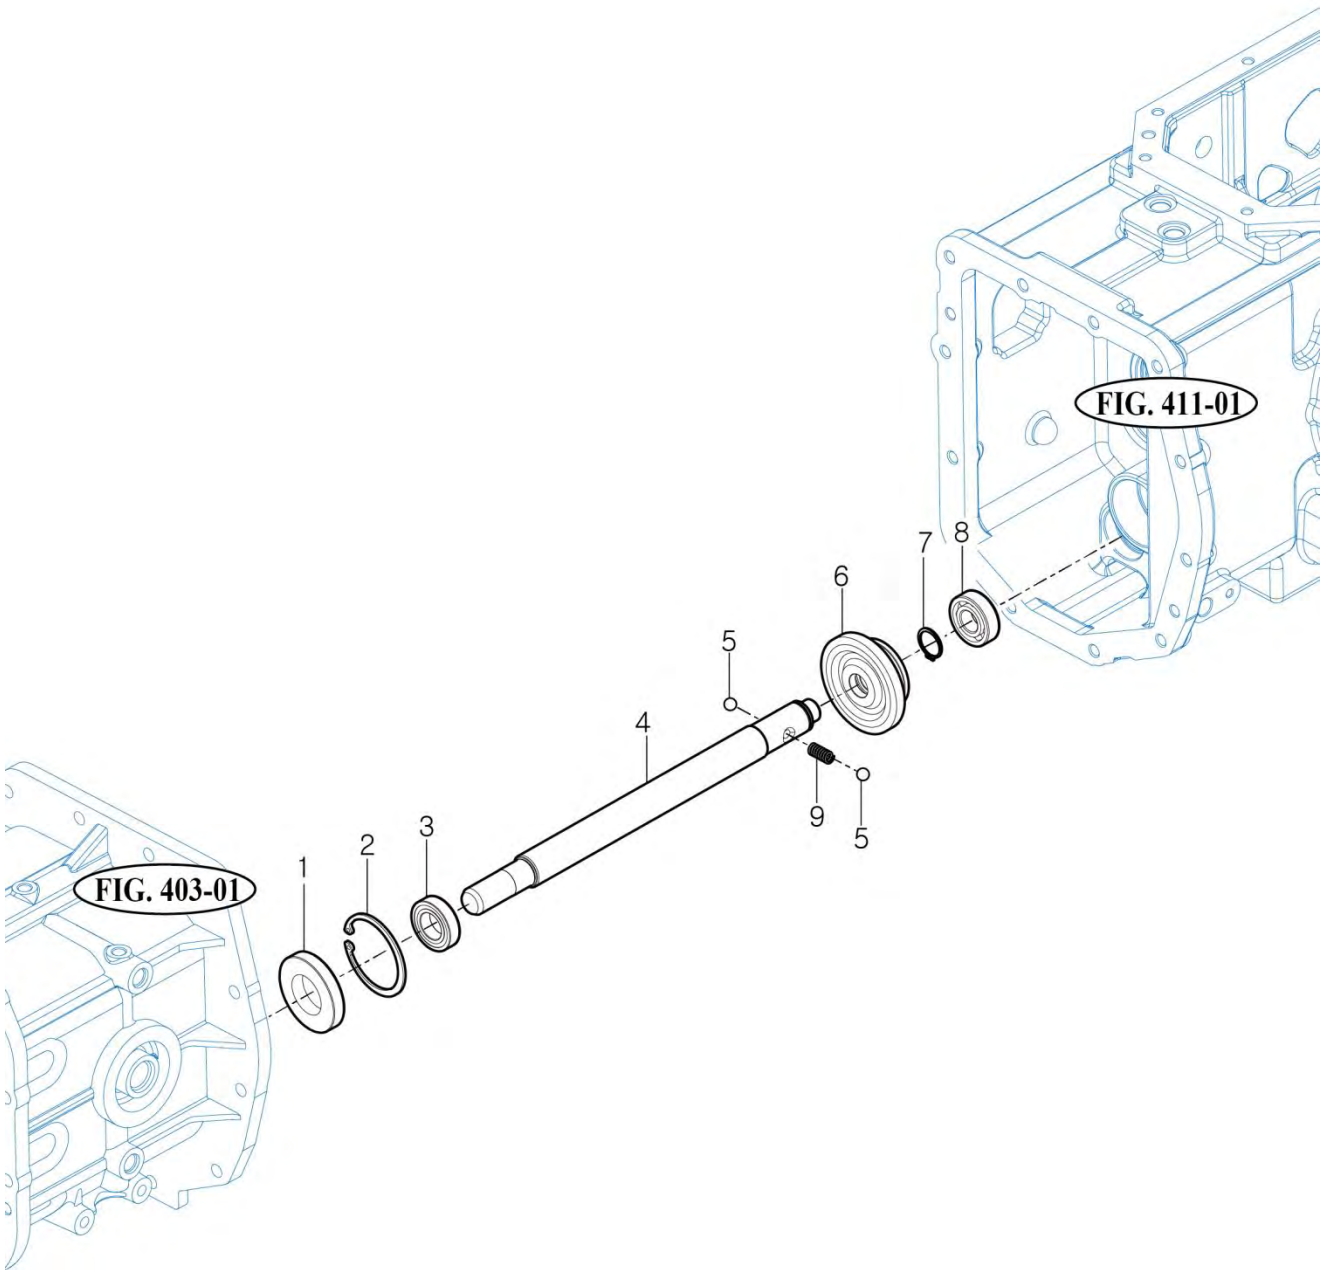 

NOTE


FIG 405

INPUT GEAR


P1

YEAR

 2018

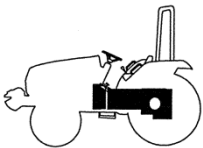

T474NH

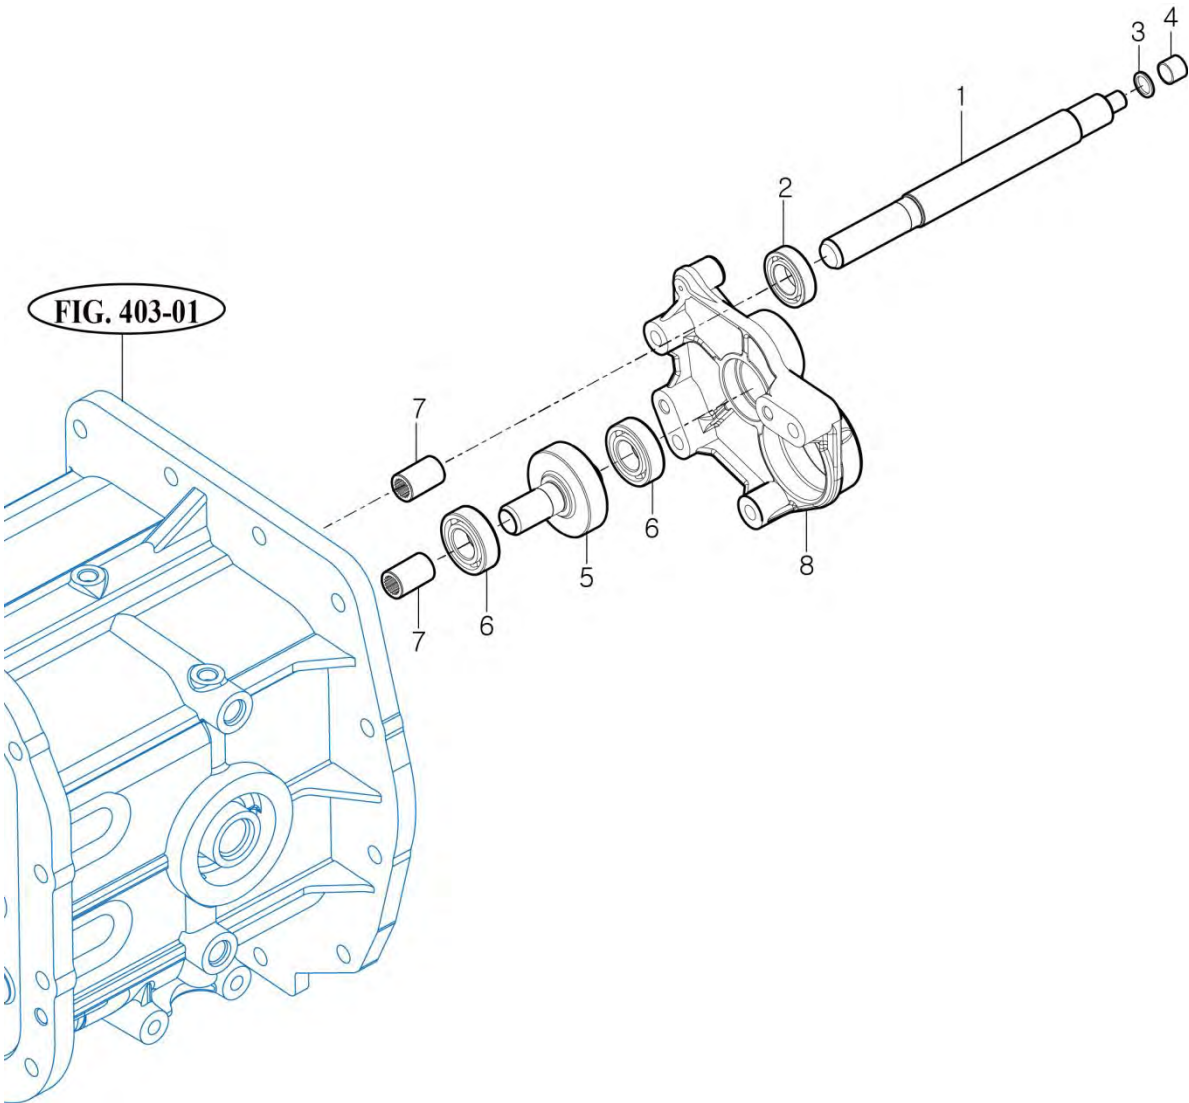 

NOTE

FIG 406

 
 
T474NH

SUB CHANGE GEARS

P1

YEAR

2018

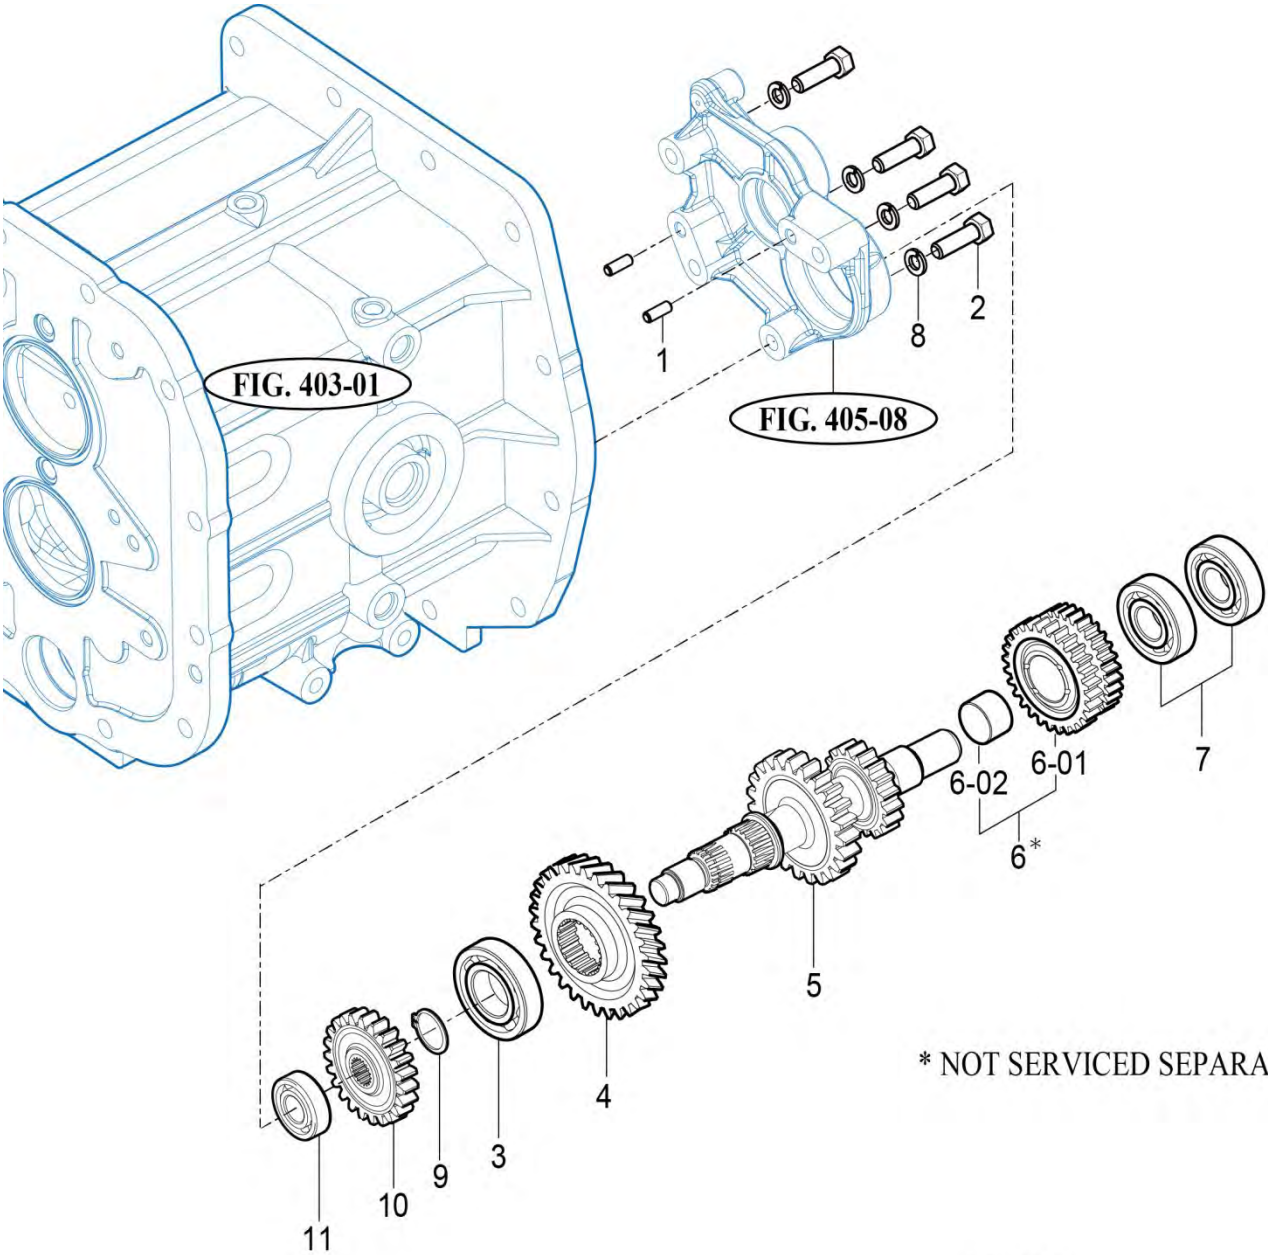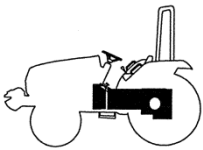

2538NH-E-406

NOTE



FIG 407

PINION GEARS

P1

YEAR

  2018

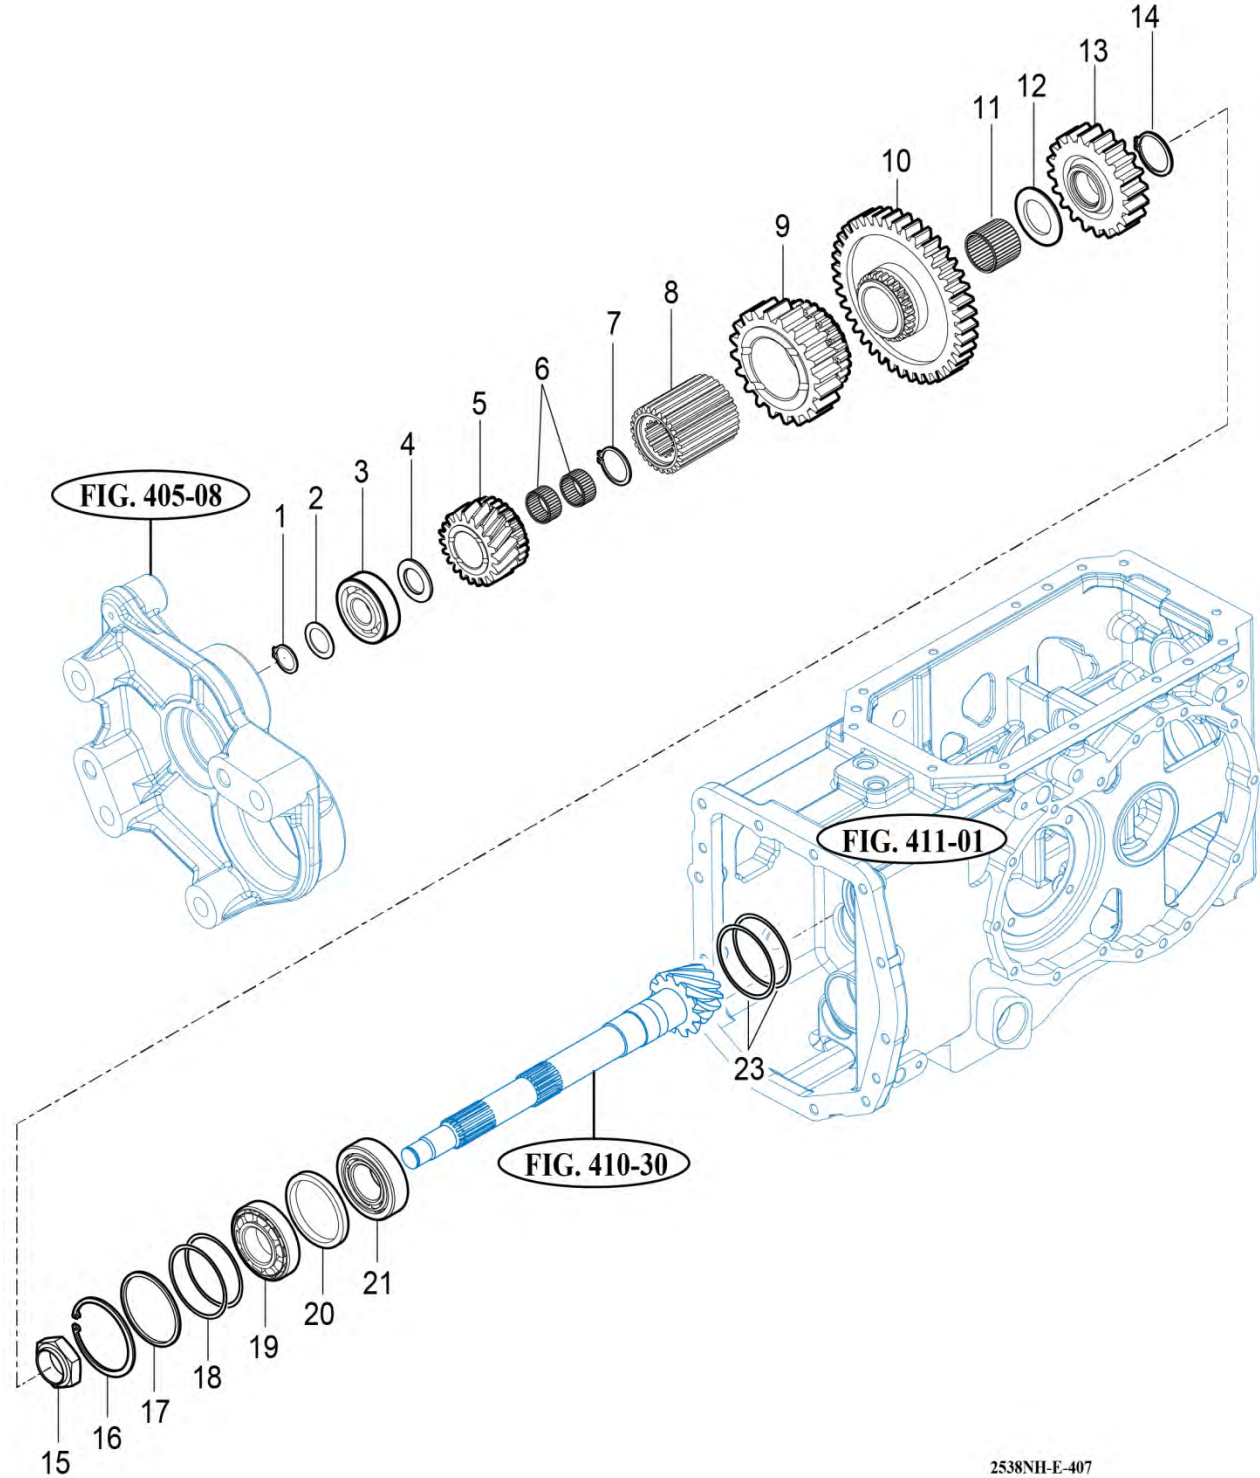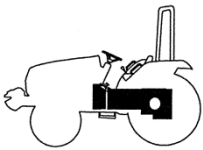

2538NH-E-407

NOTE


FIG 409

P.T.O. CHANGE GEARS


P1

YEAR

 2018

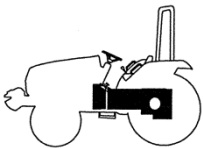

T474NH

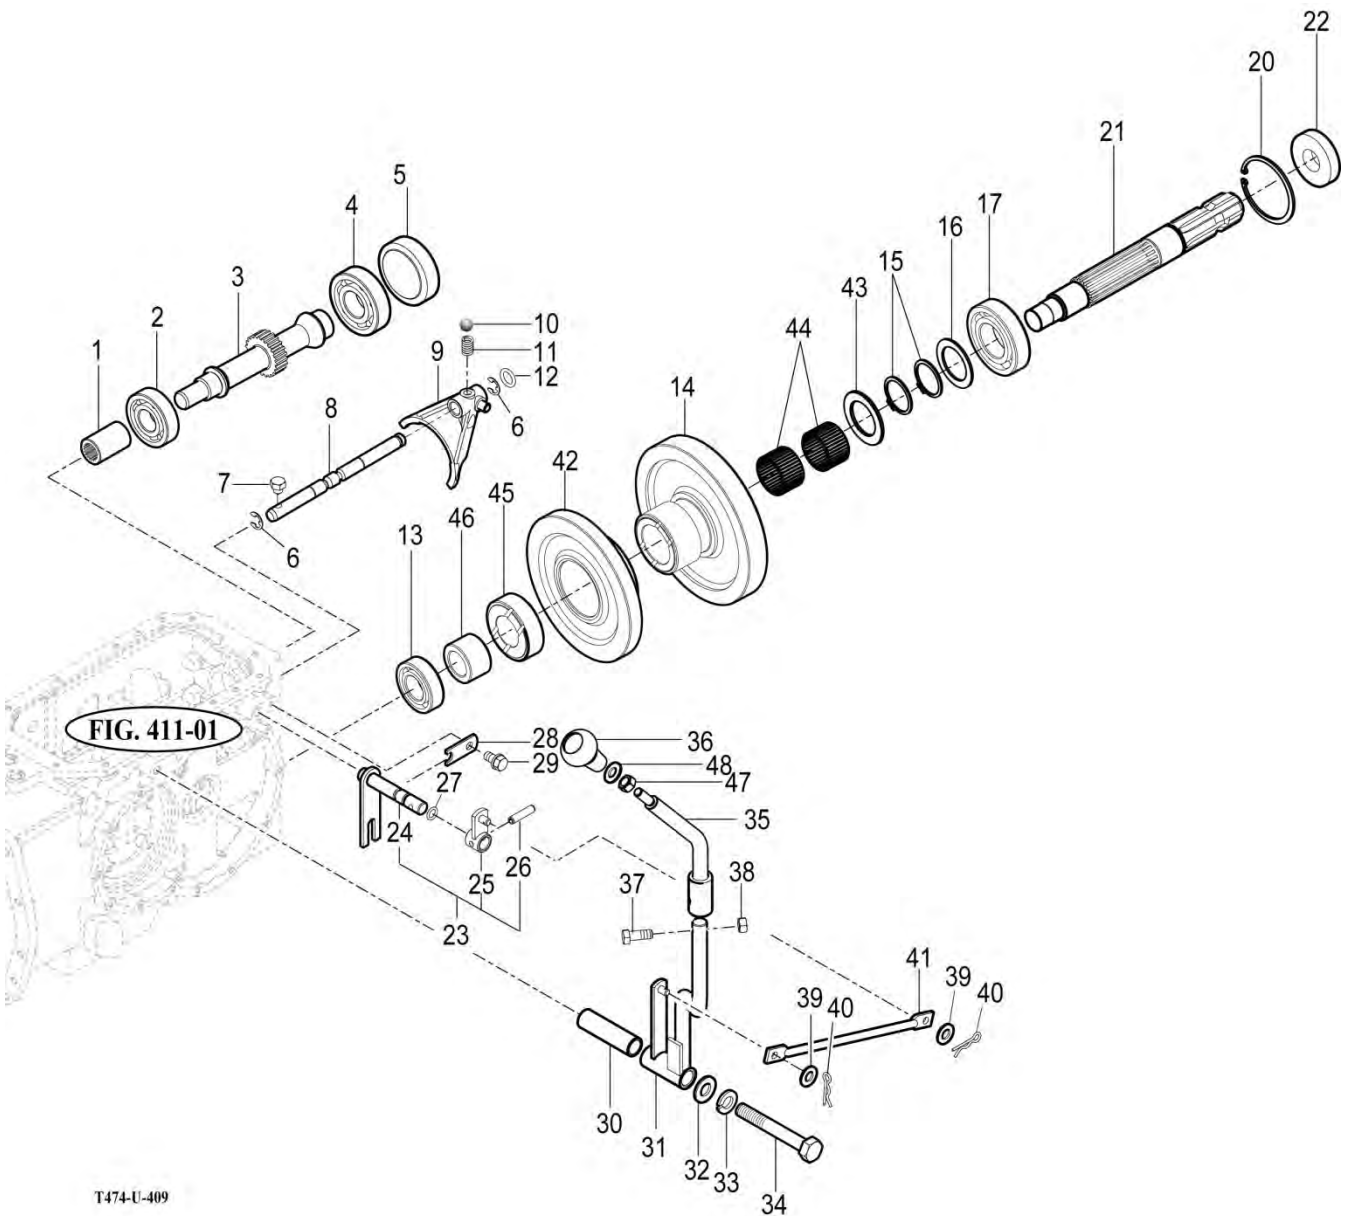 

NOTE

FIG 410

 
 
T474NH

DIFF LOCK

P1

YEAR

2018

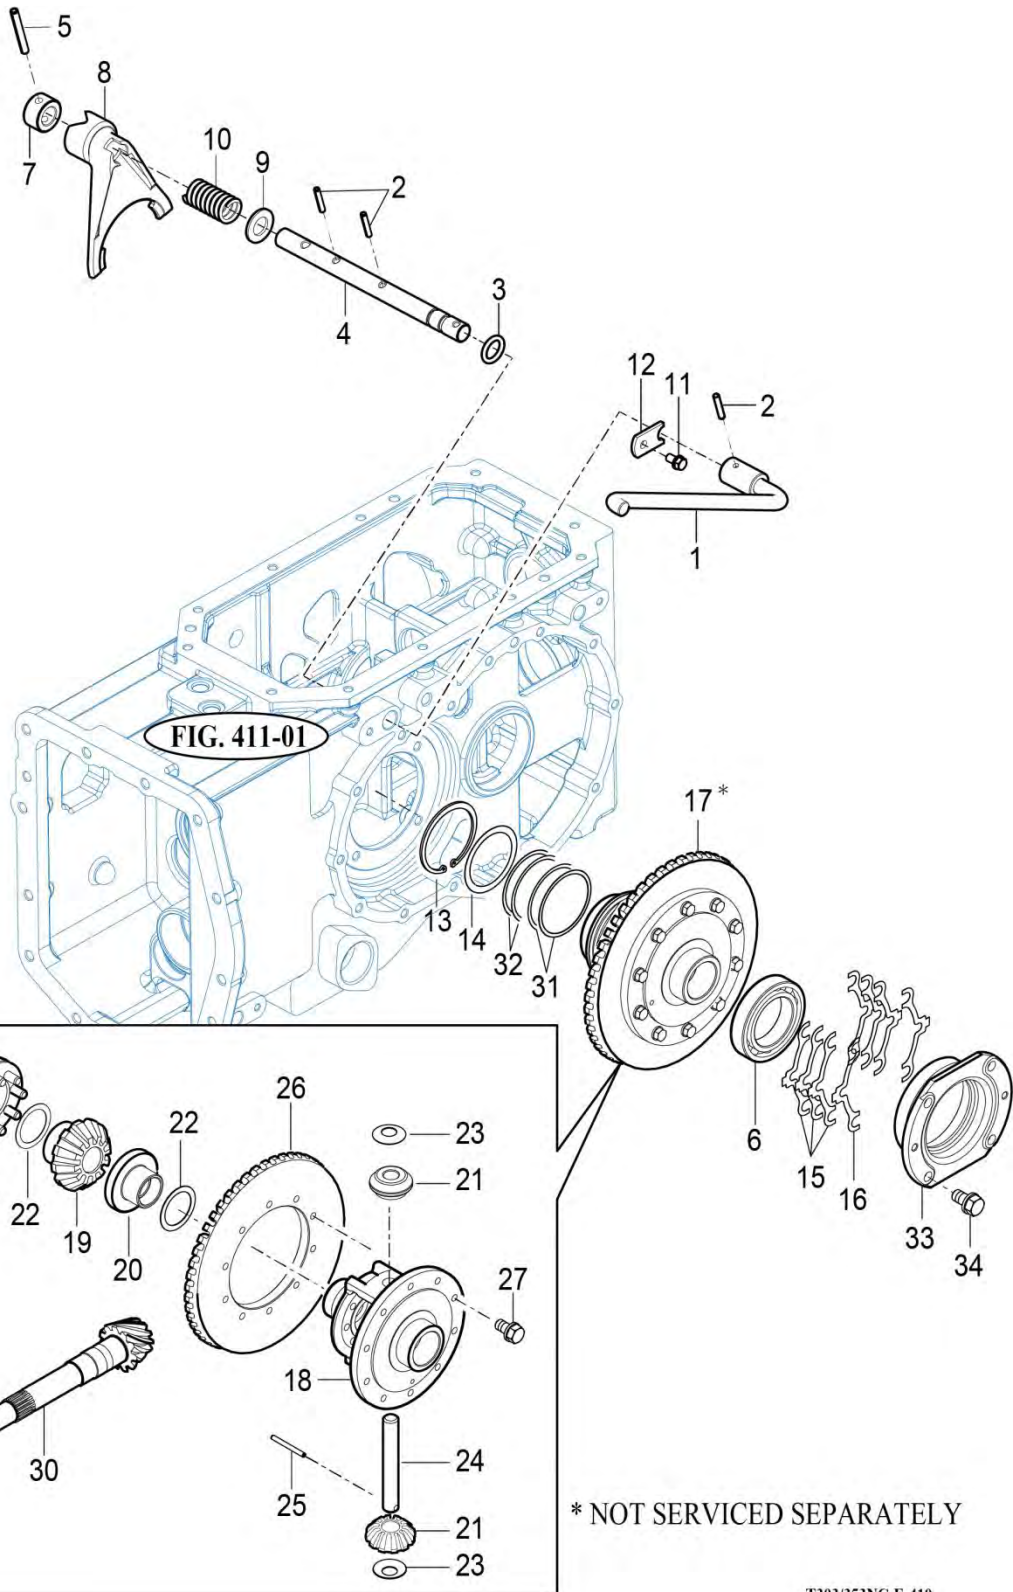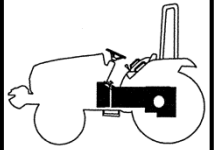

* NOT SERVICED SEPARATELY

T303/353NC-E-410

NOTE

FIG 411

 
 
T474NH

TRANSMISSION REAR CASE

P1

YEAR

2018

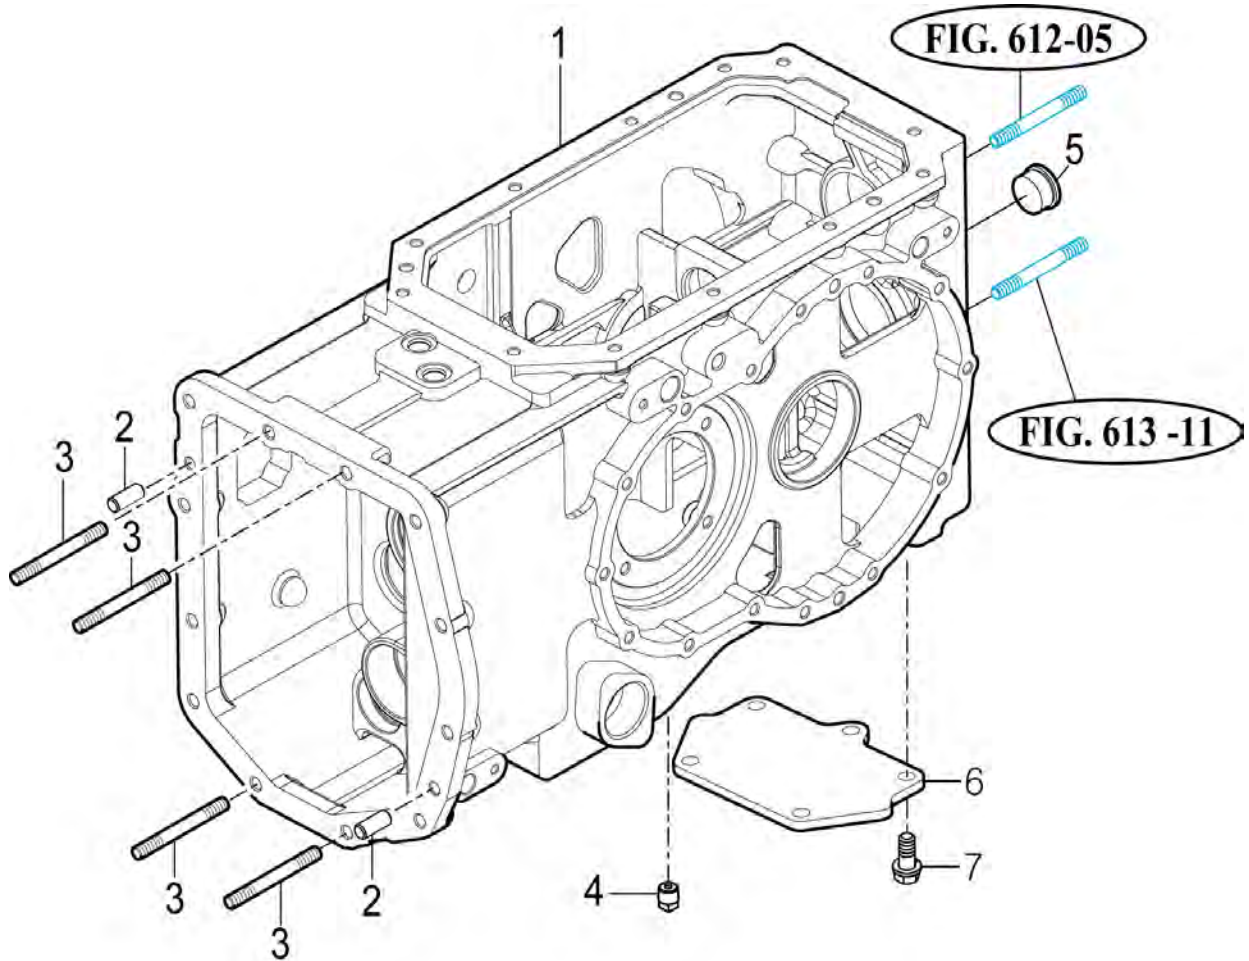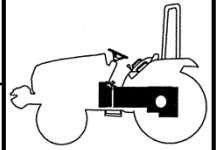

T474-U-411

NOTE


FIG 412

REAR AXLE HOUSINGS (1)


P1

YEAR

 2018

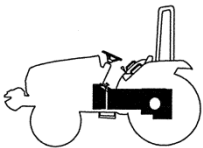

T474NH

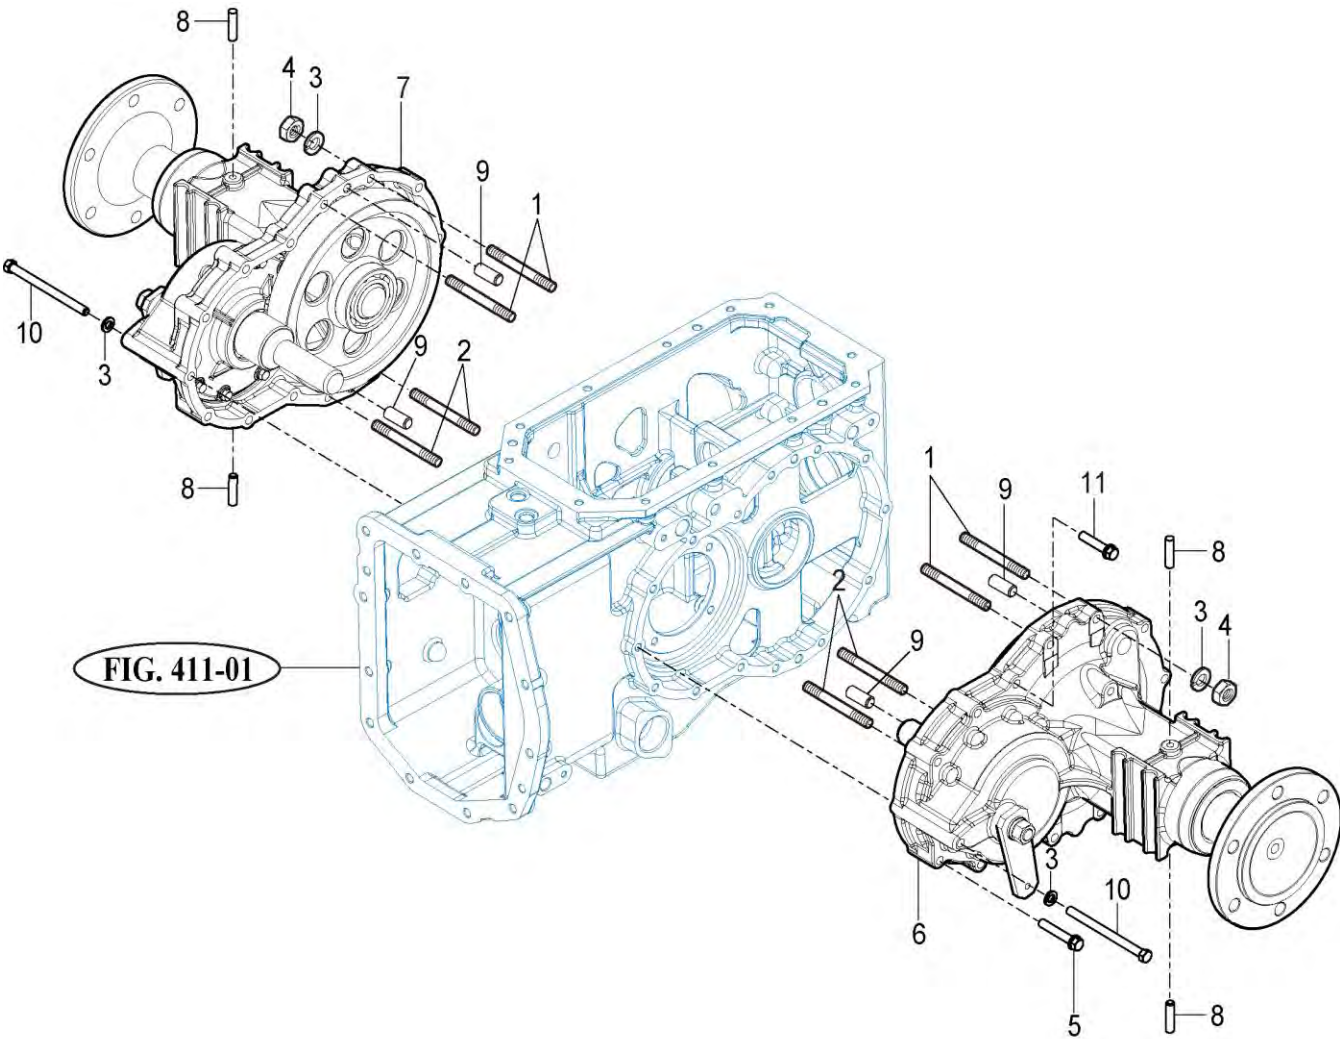 

2538NH-E-412

NOTE


FIG 413

REAR AXLE HOUSINGS (2)

P1


YEAR

 2018

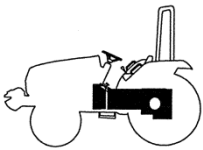

T474NH

 FIG. 307-04

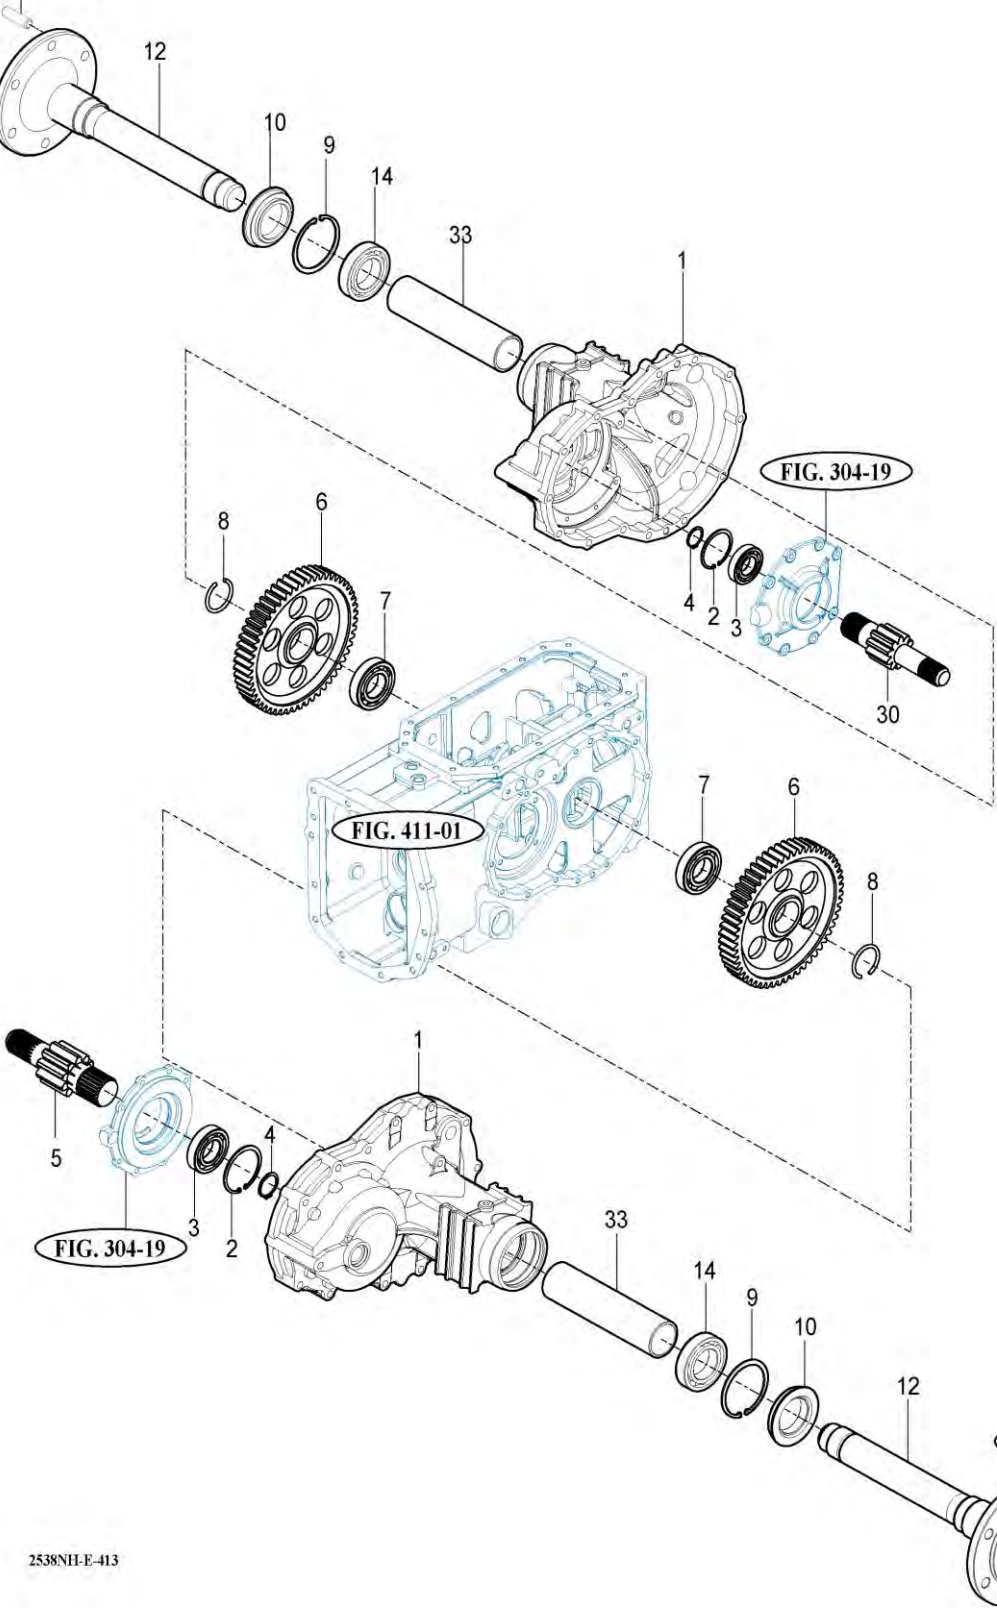

2538NH-E-413

NOTE

FIG 416

 
 
T474NH

FORWARD & REVERSE CONTROL LINKAGE

P1

YEAR

2018

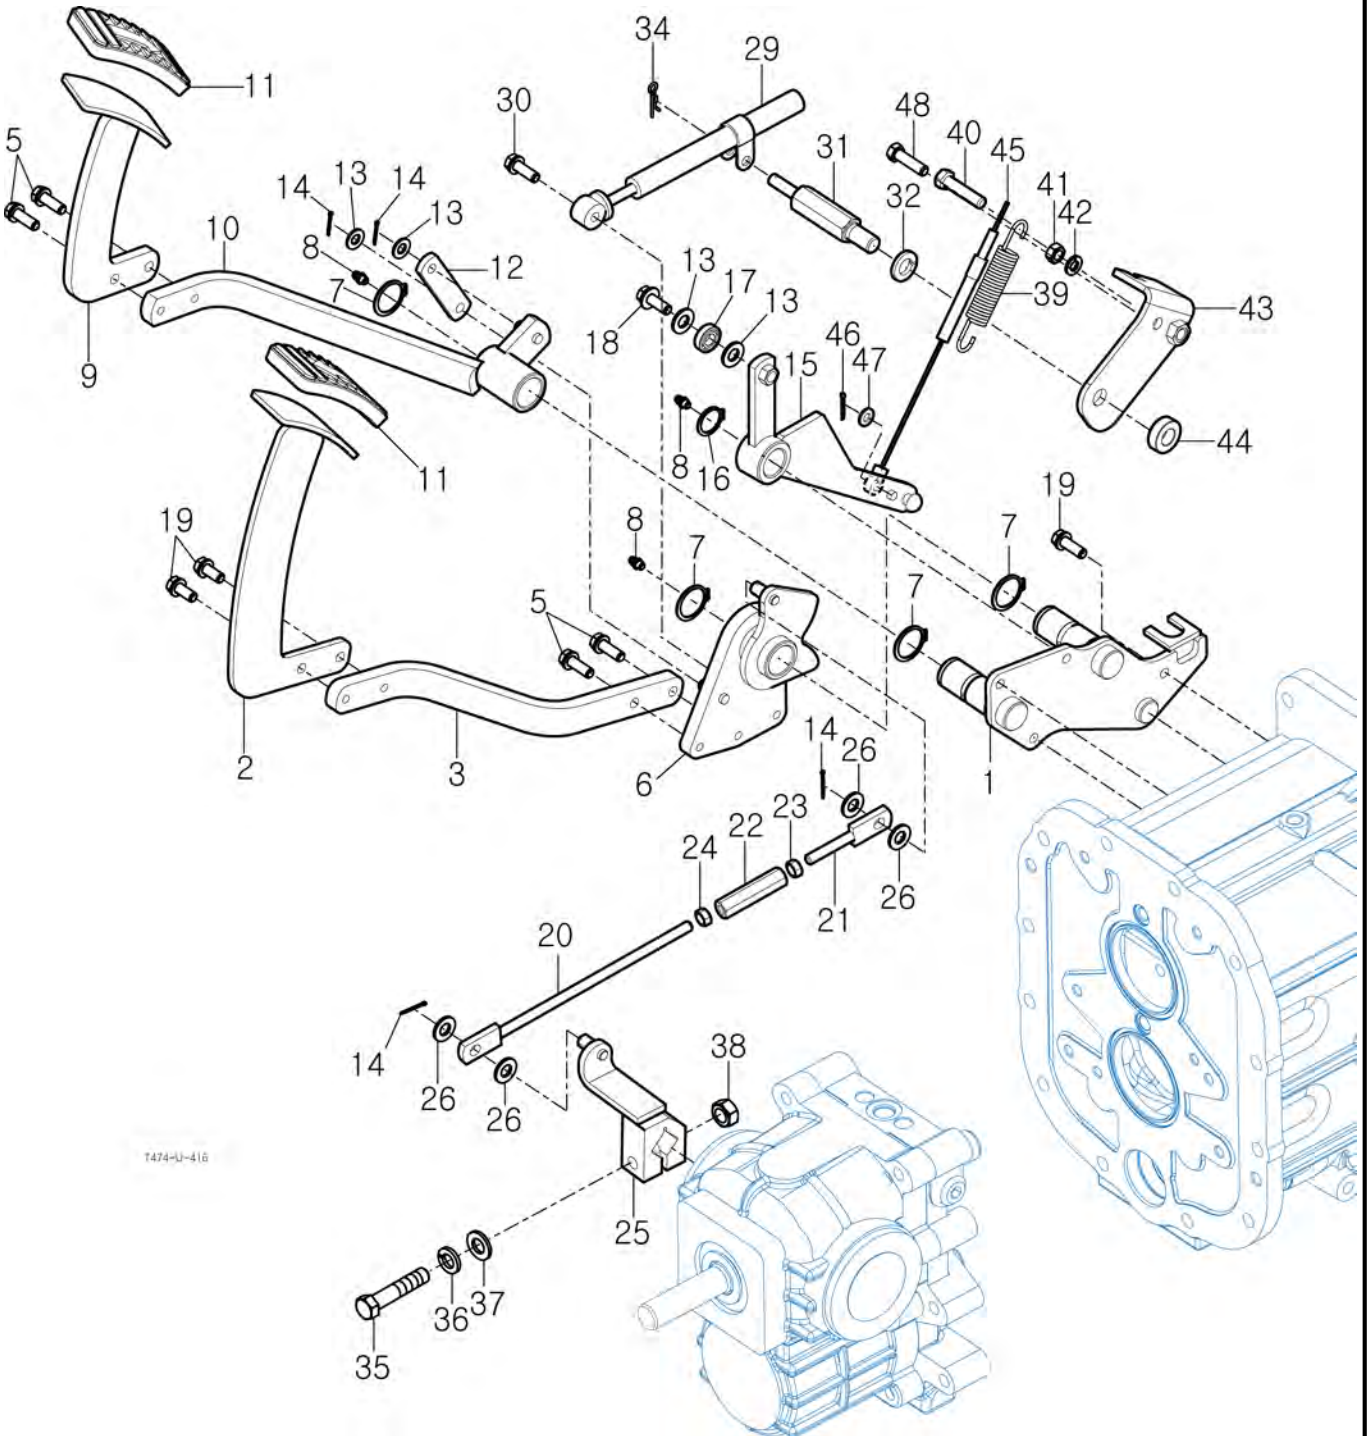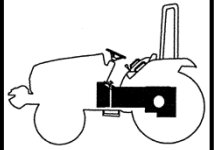

T474-U-416

NOTE


FIG 418

4WD CHANGE LEVER


P1

YEAR

 2018

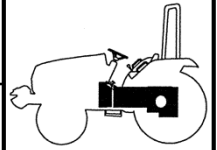

T474NH

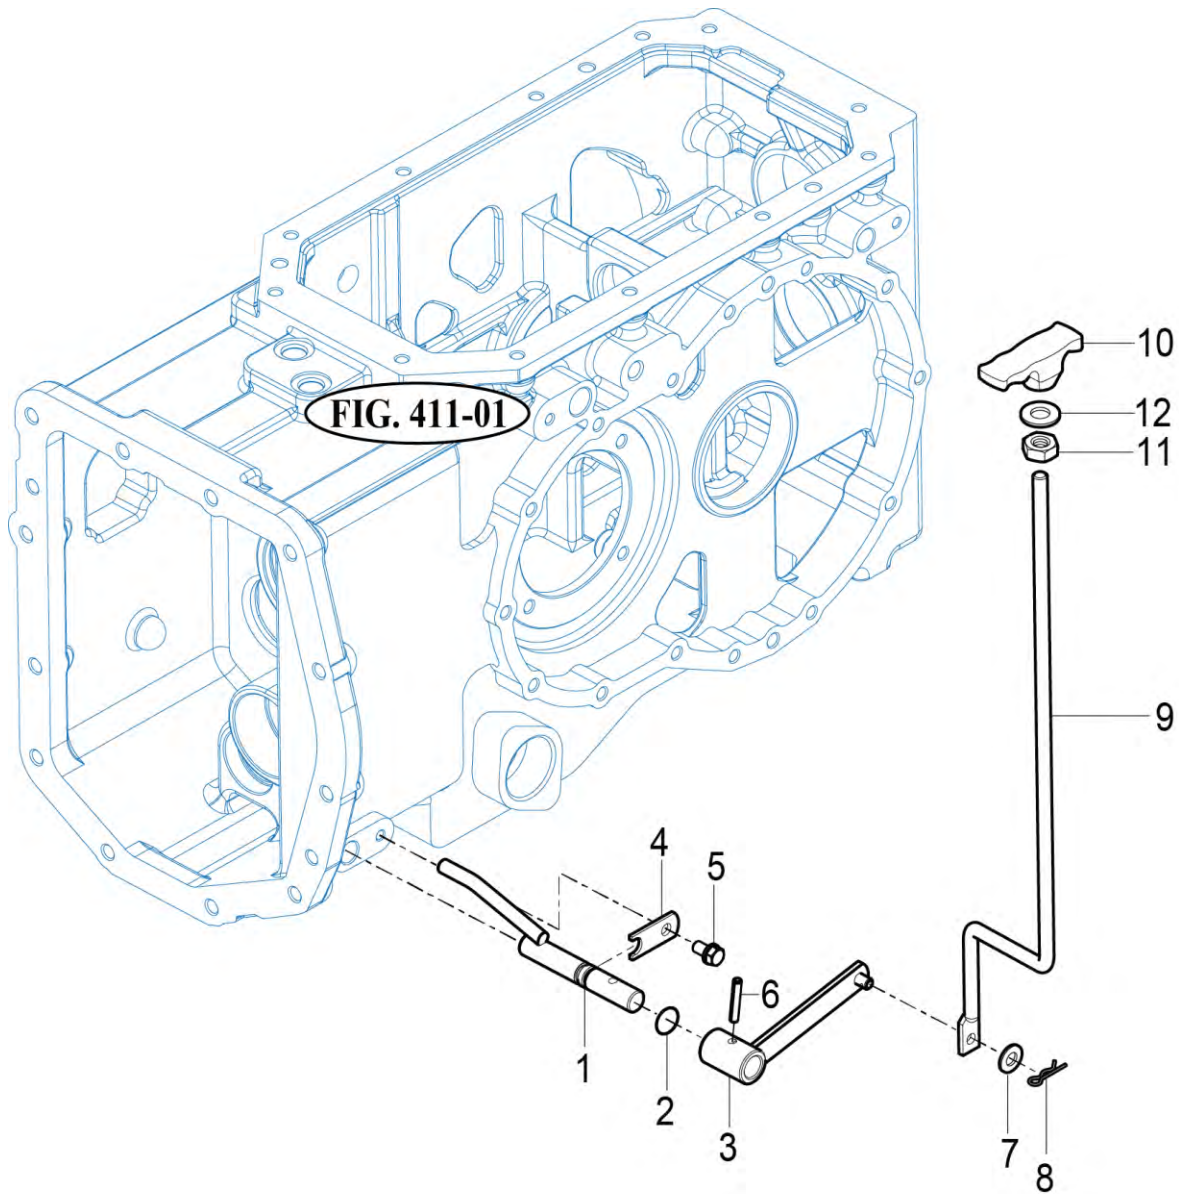 

2538NH-K-418

NOTE

FIG 501

 
 
T474NH

FRONT AXLE BRACKET

P1

YEAR

2018

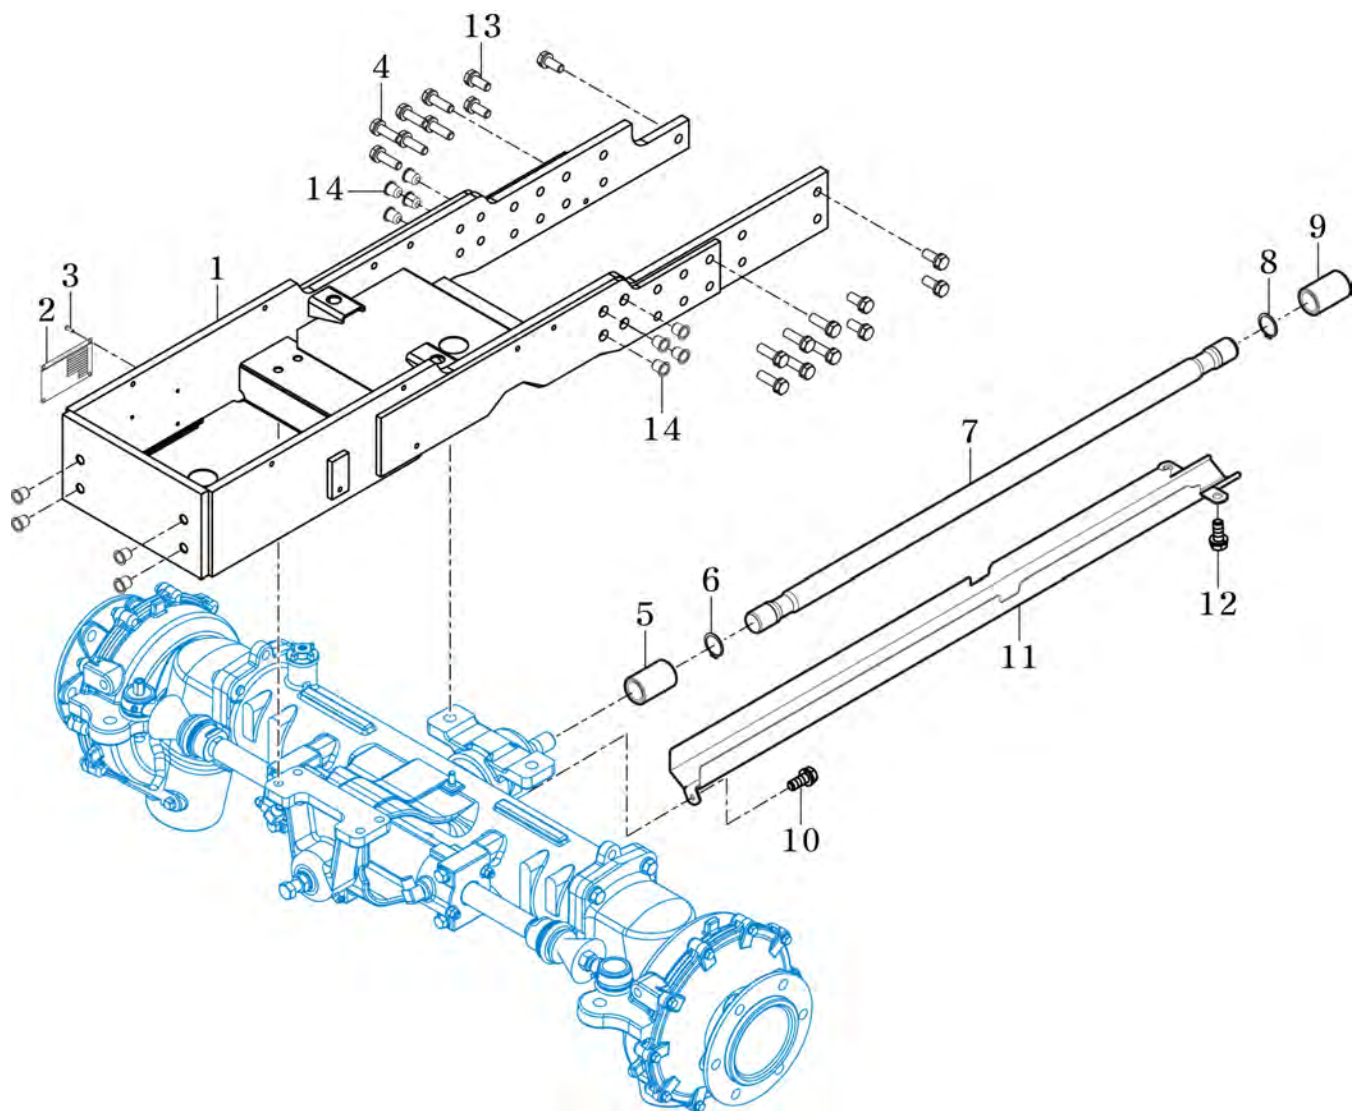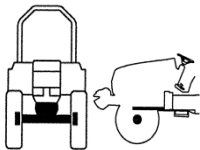

NOTE


FIG 502
T474NH

FRONT DIFF. GEARS & SHAFT


P1

YEAR

 2018

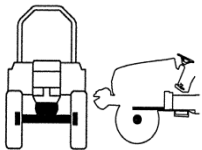

* NOT SERVICED SEPARATELY

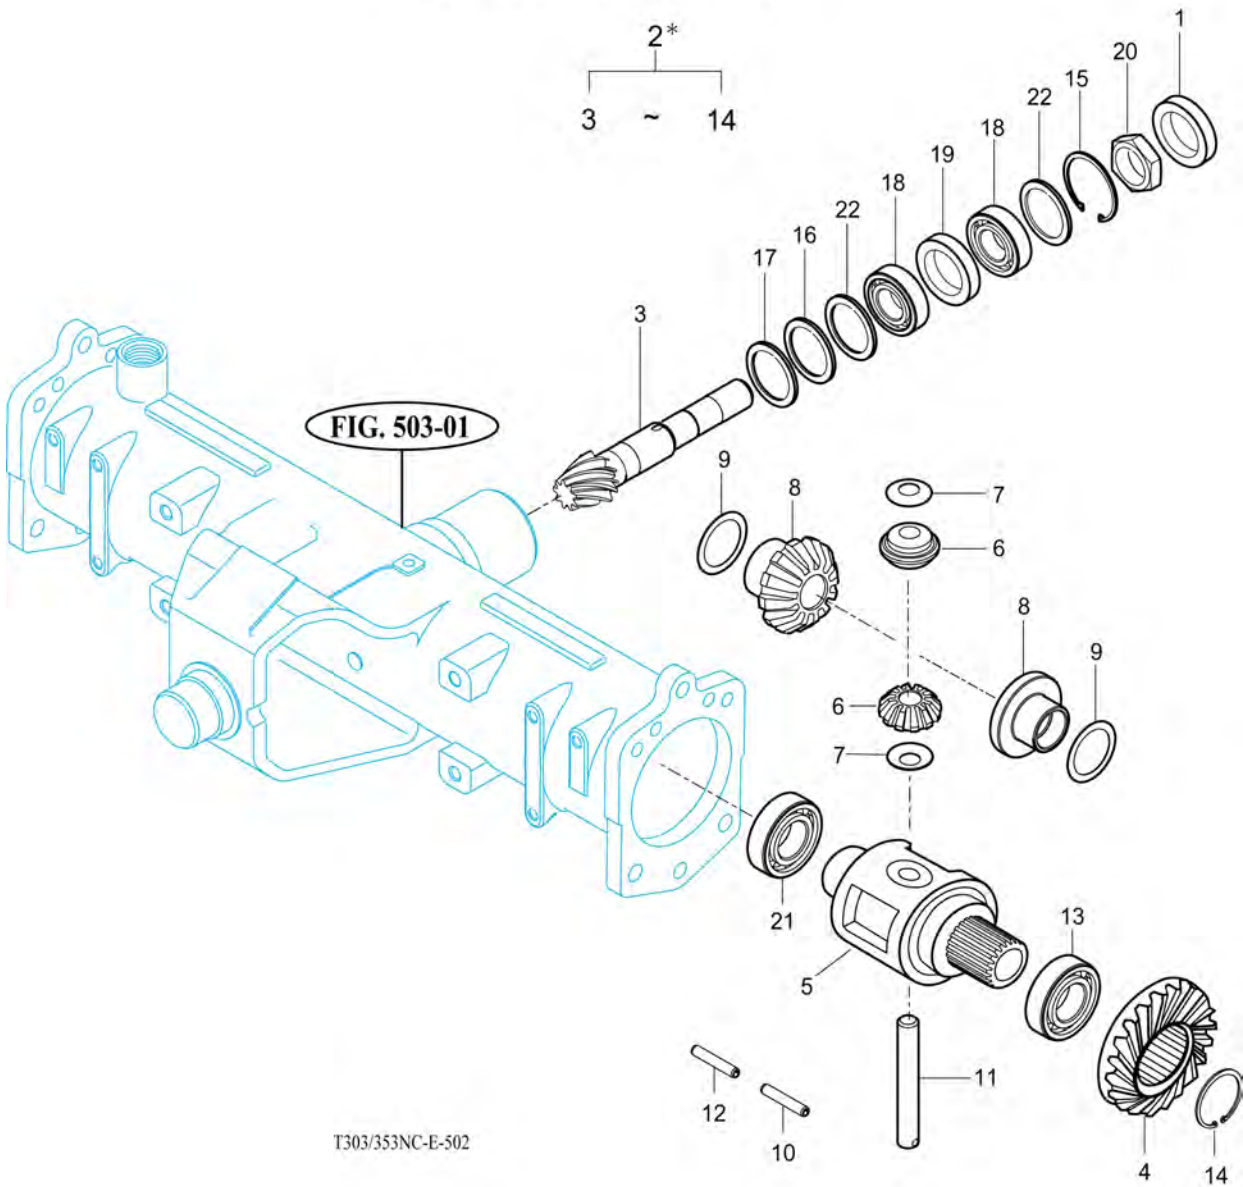 

NOTE

FIG 503

 
 
T474NH

FRONT AXLE HOUSING

P1

YEAR

2018

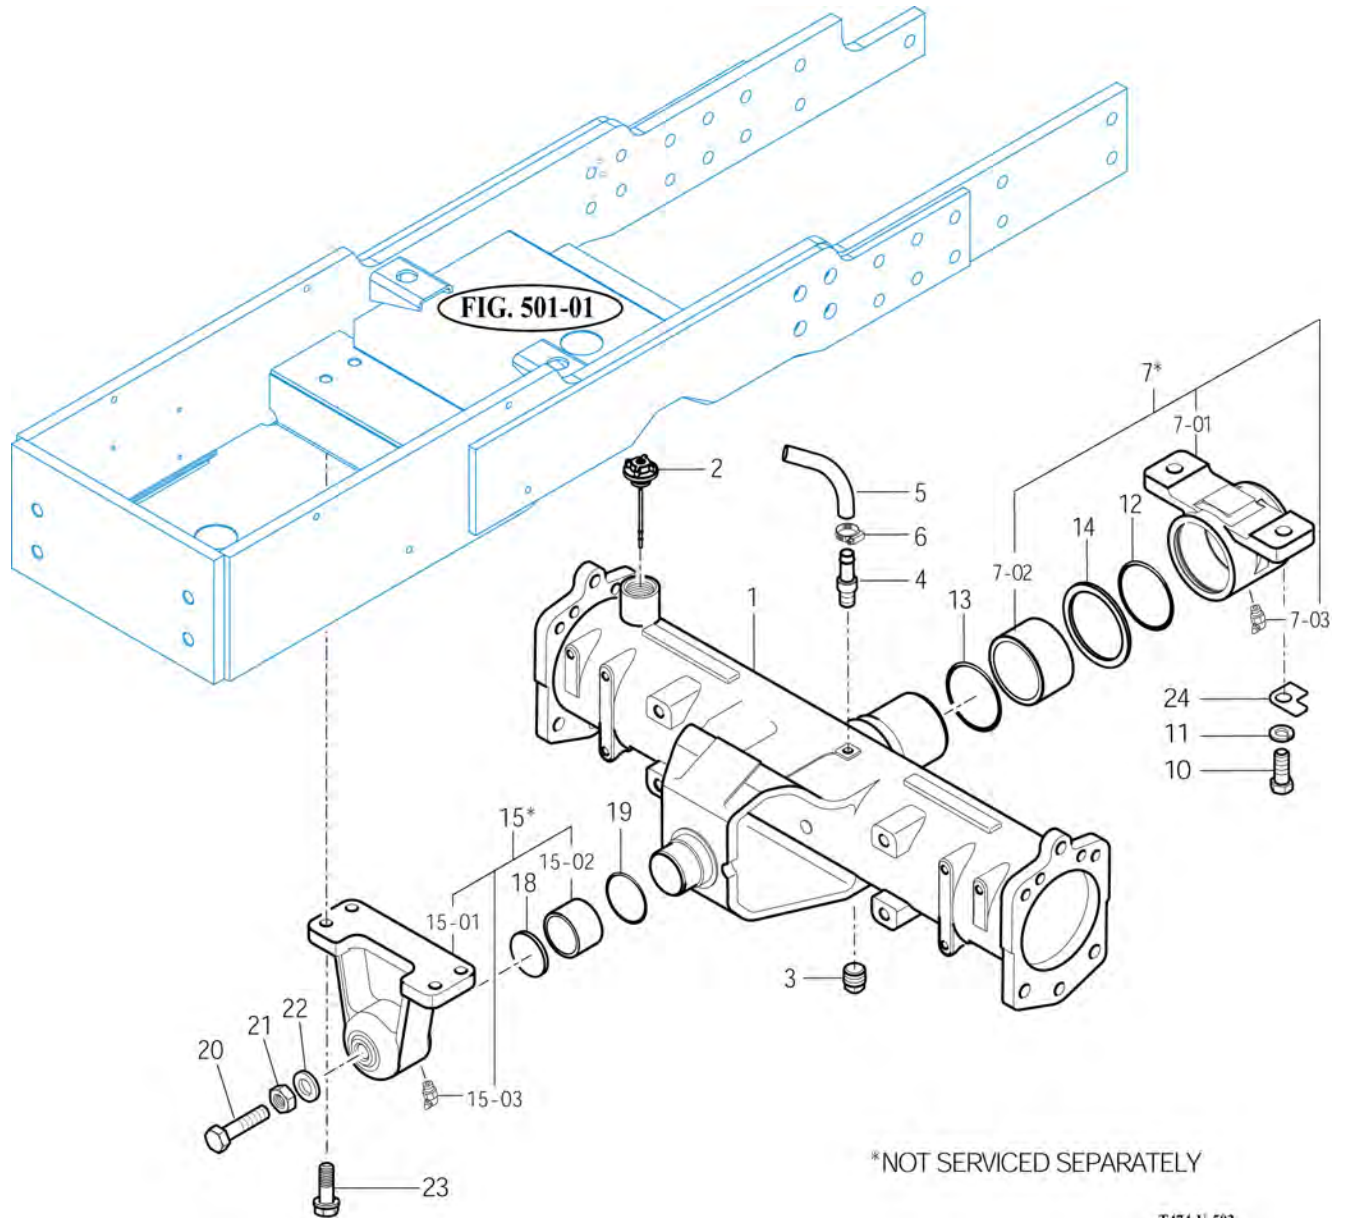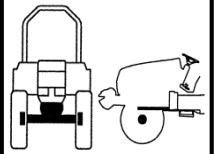

T474-U-503

NOTE



FIG 504
T474NH

FRONT GEAR CASE (1)

P1

YEAR

  2018

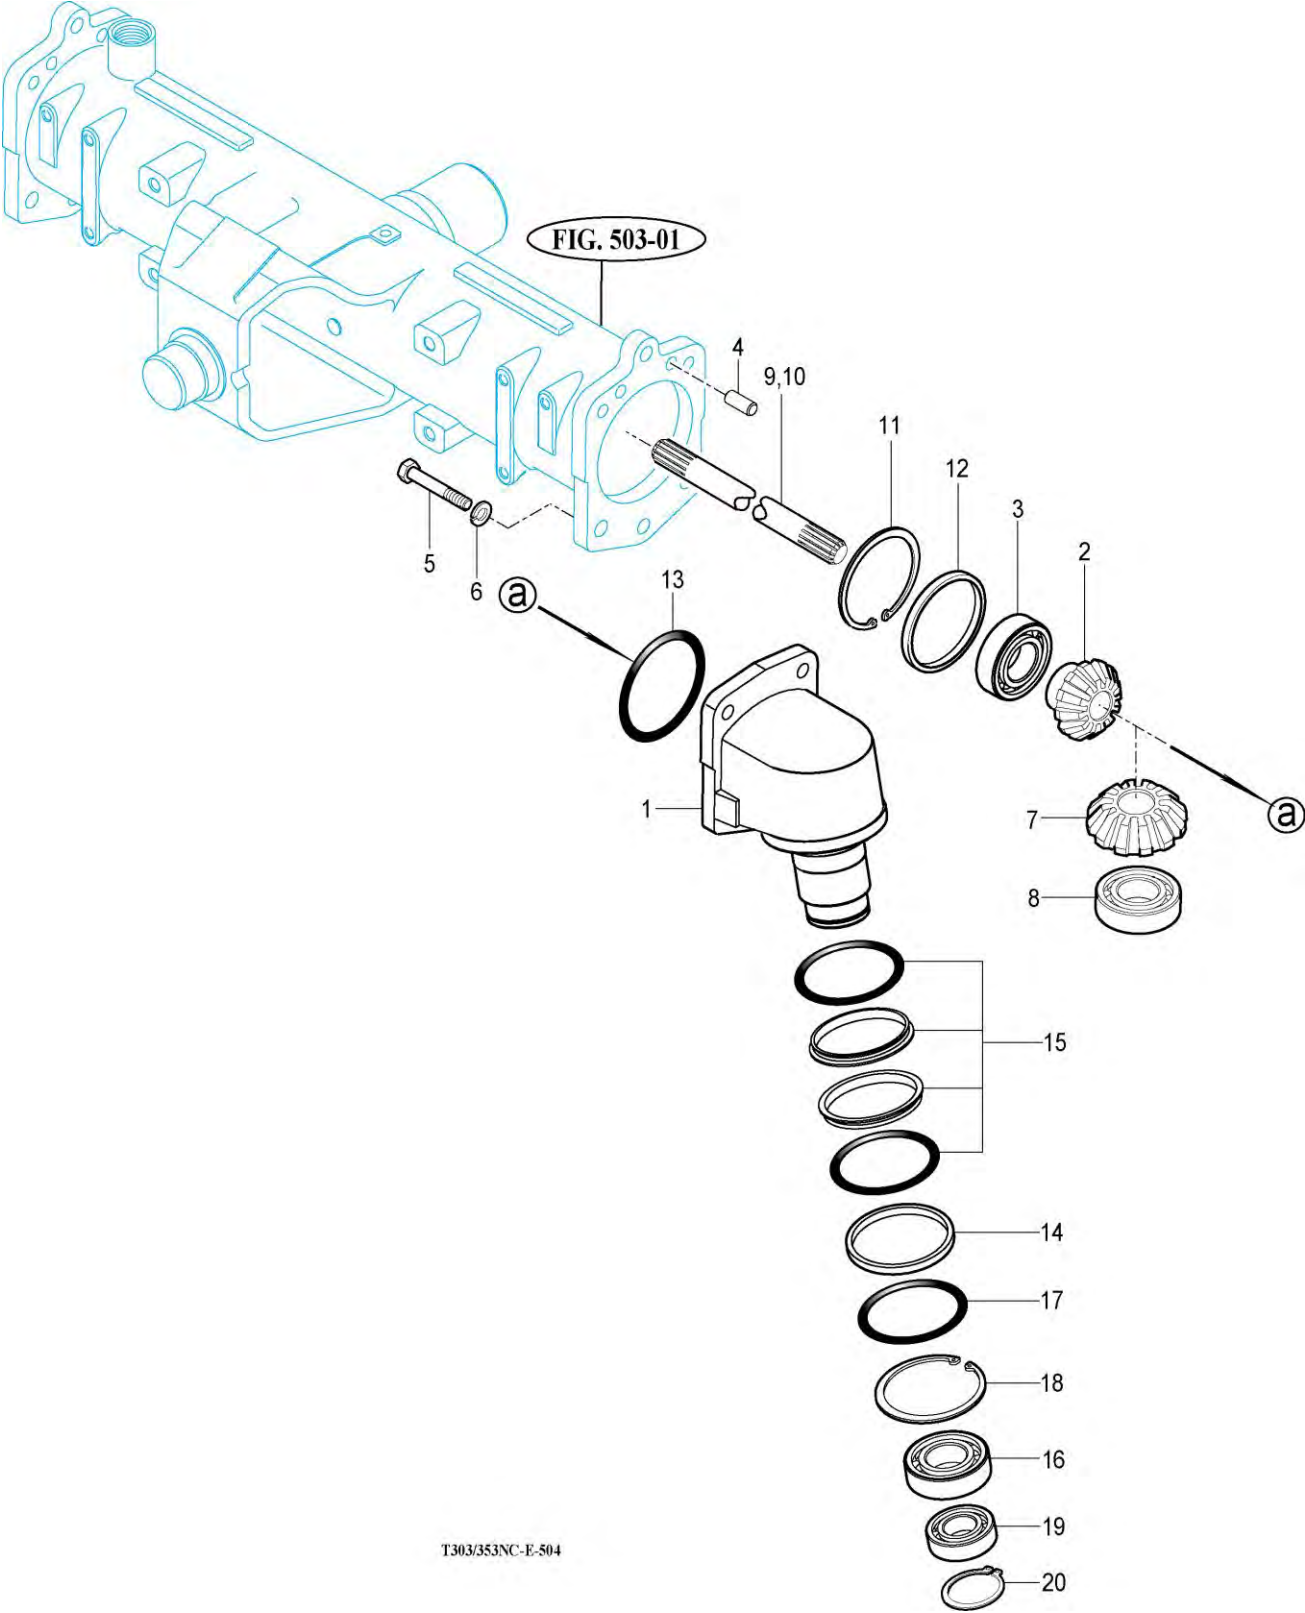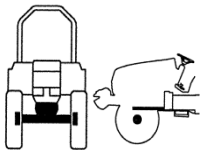

T303/353NC-E-504

NOTE



FIG 505
T474NH

FRONT GEAR CASE (2)

P1

YEAR

  2018

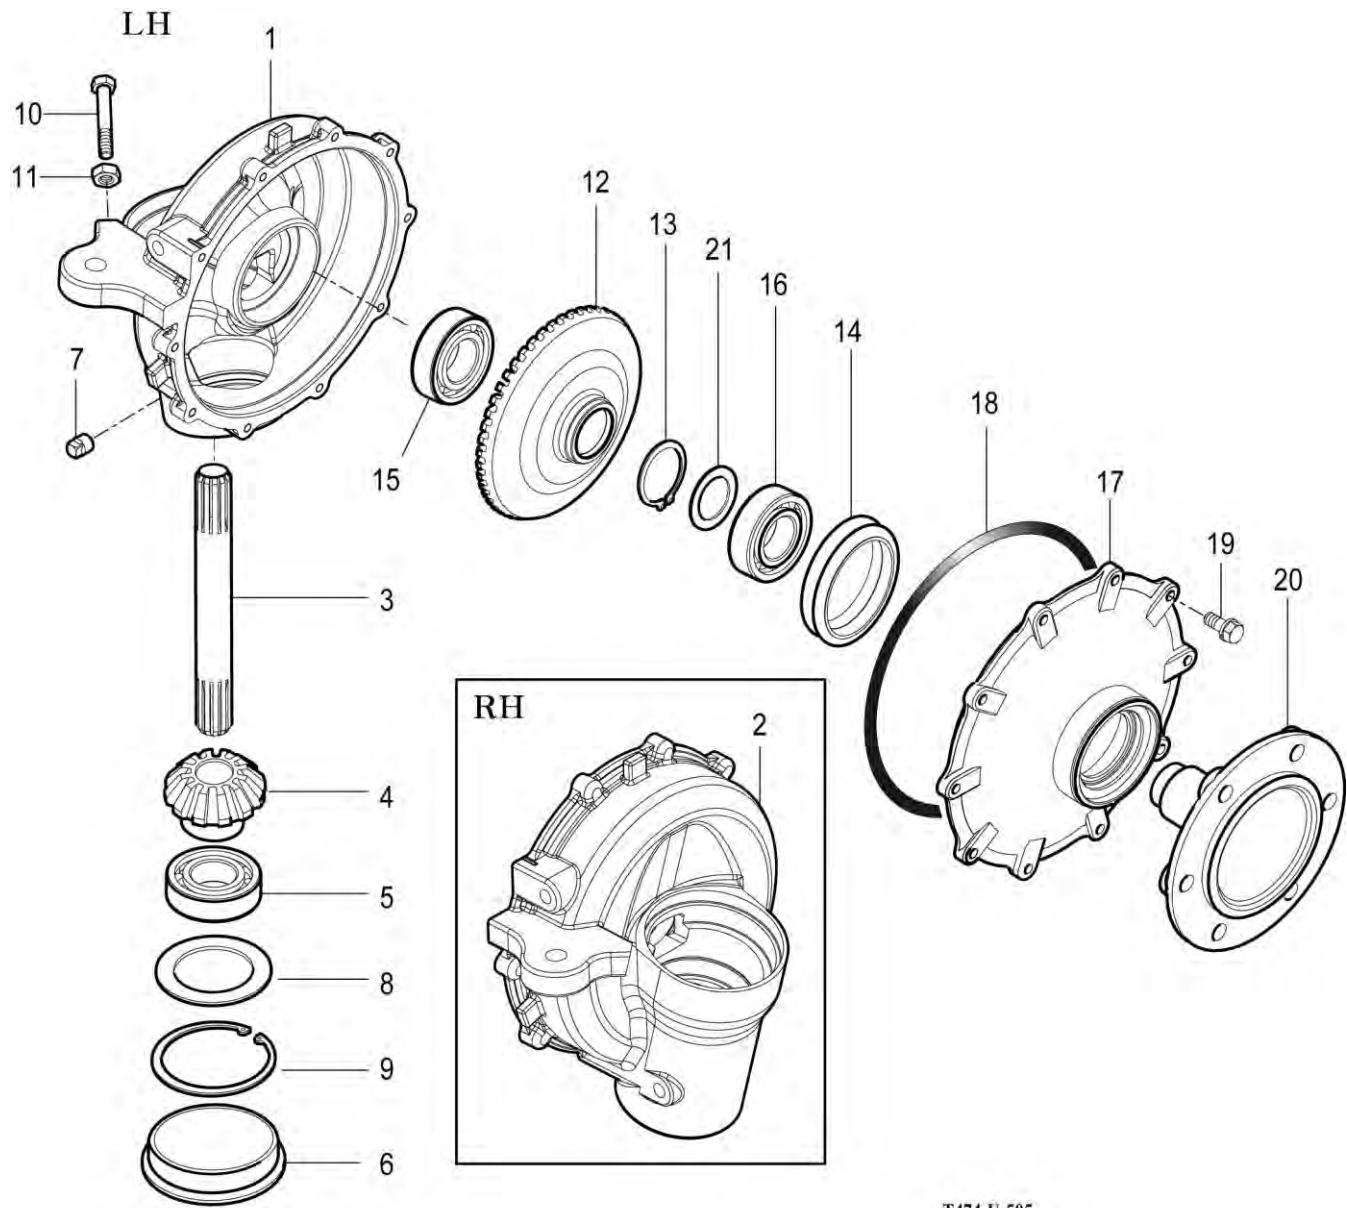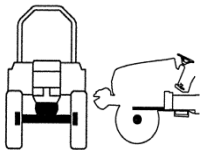

NOTE	
------	--


FIG 601

GEAR PUMP


P1

YEAR

 2018

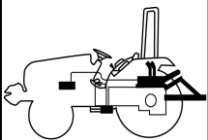

T474NH

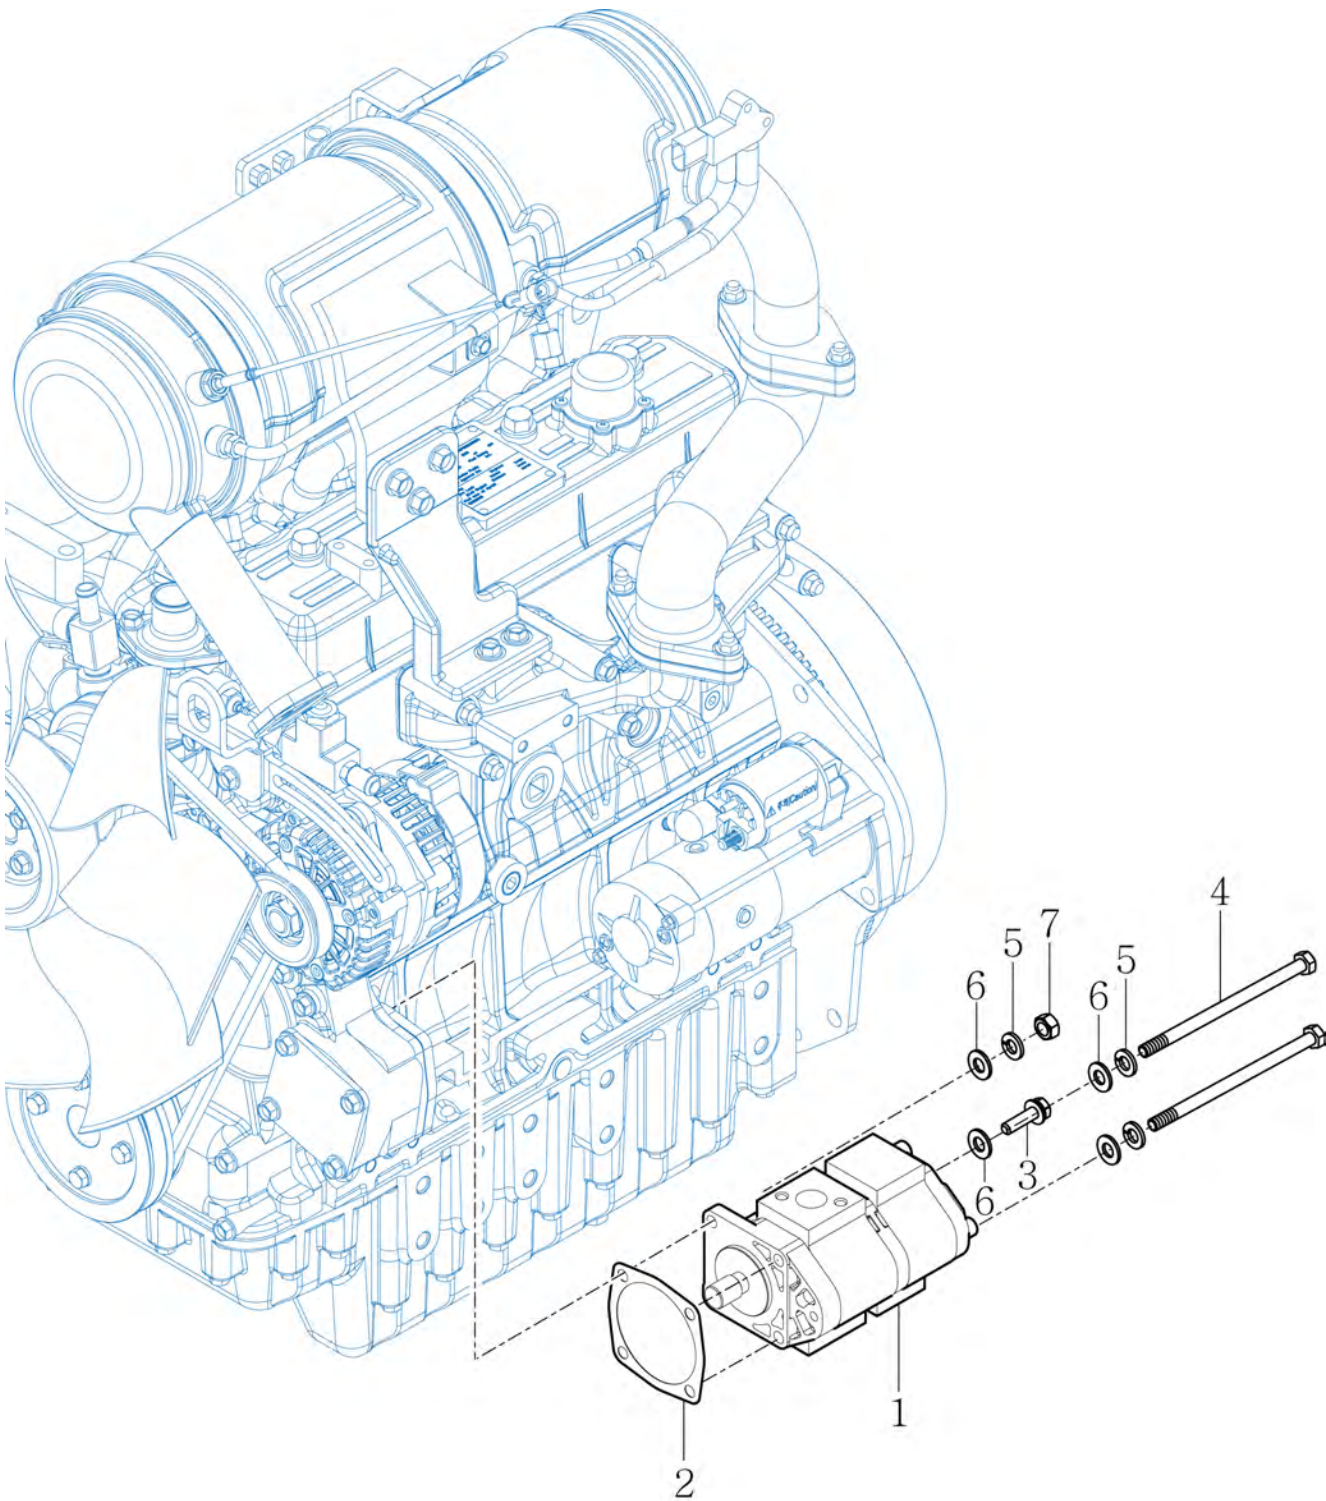 

NOTE



FIG 602
T474NH

CYLINDER CASE

P1

YEAR

  2018

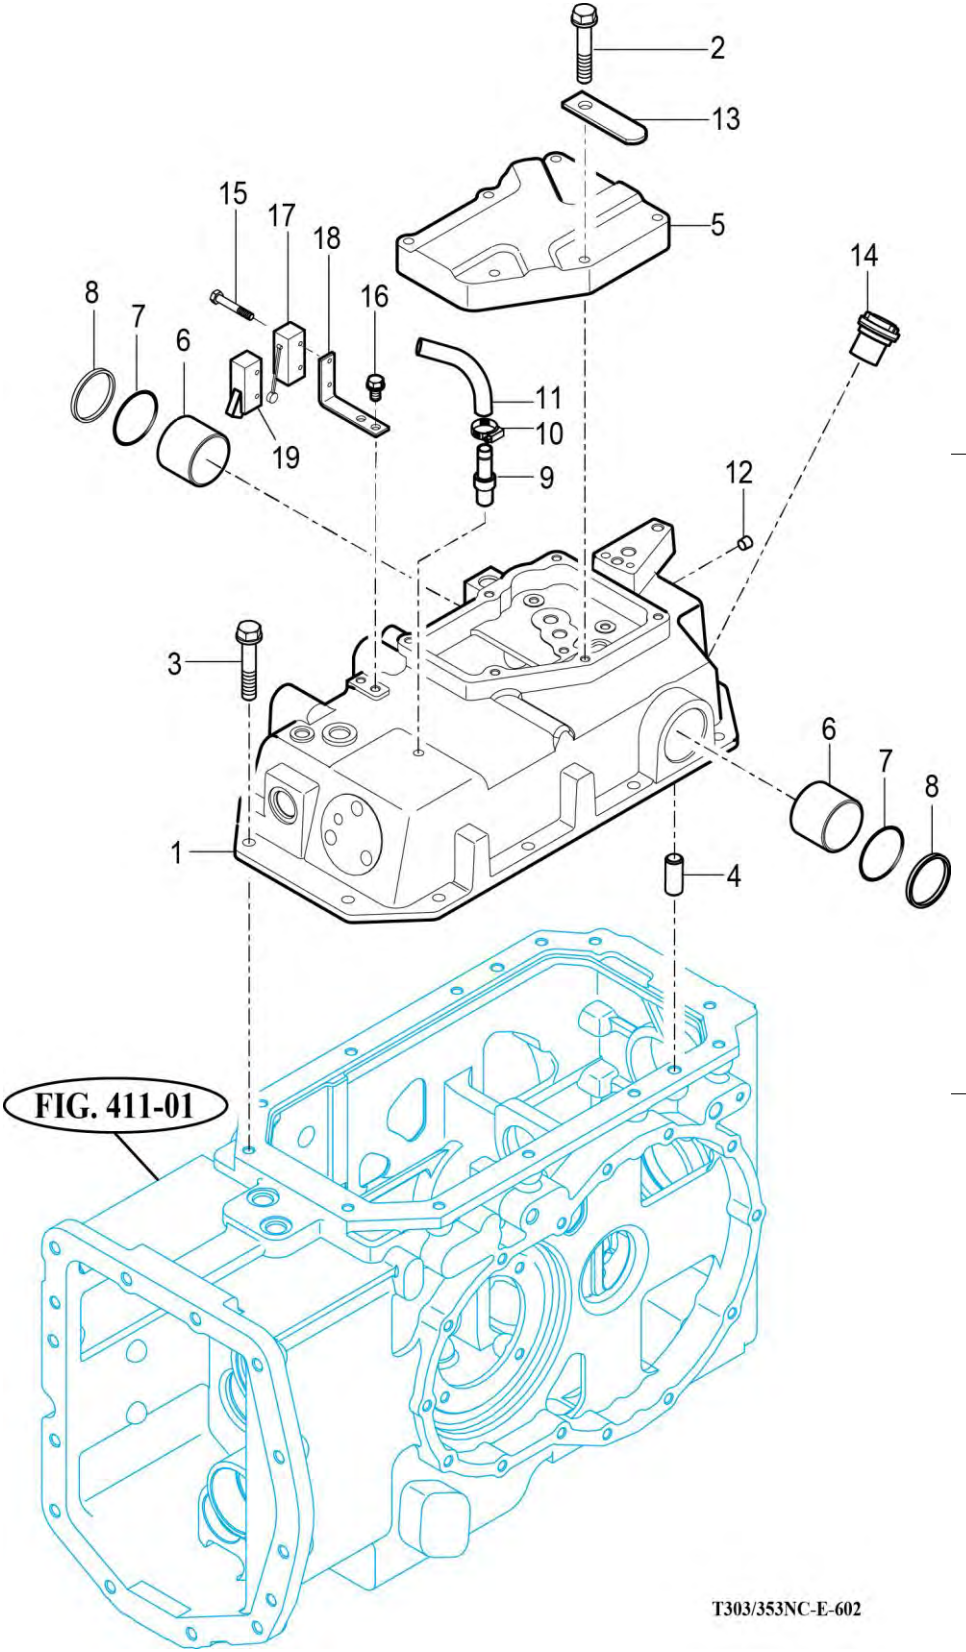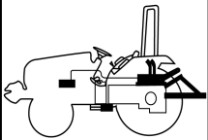

NOTE

FIG 603

 
 
T474NH

LIFT ARM

P1

YEAR

2018

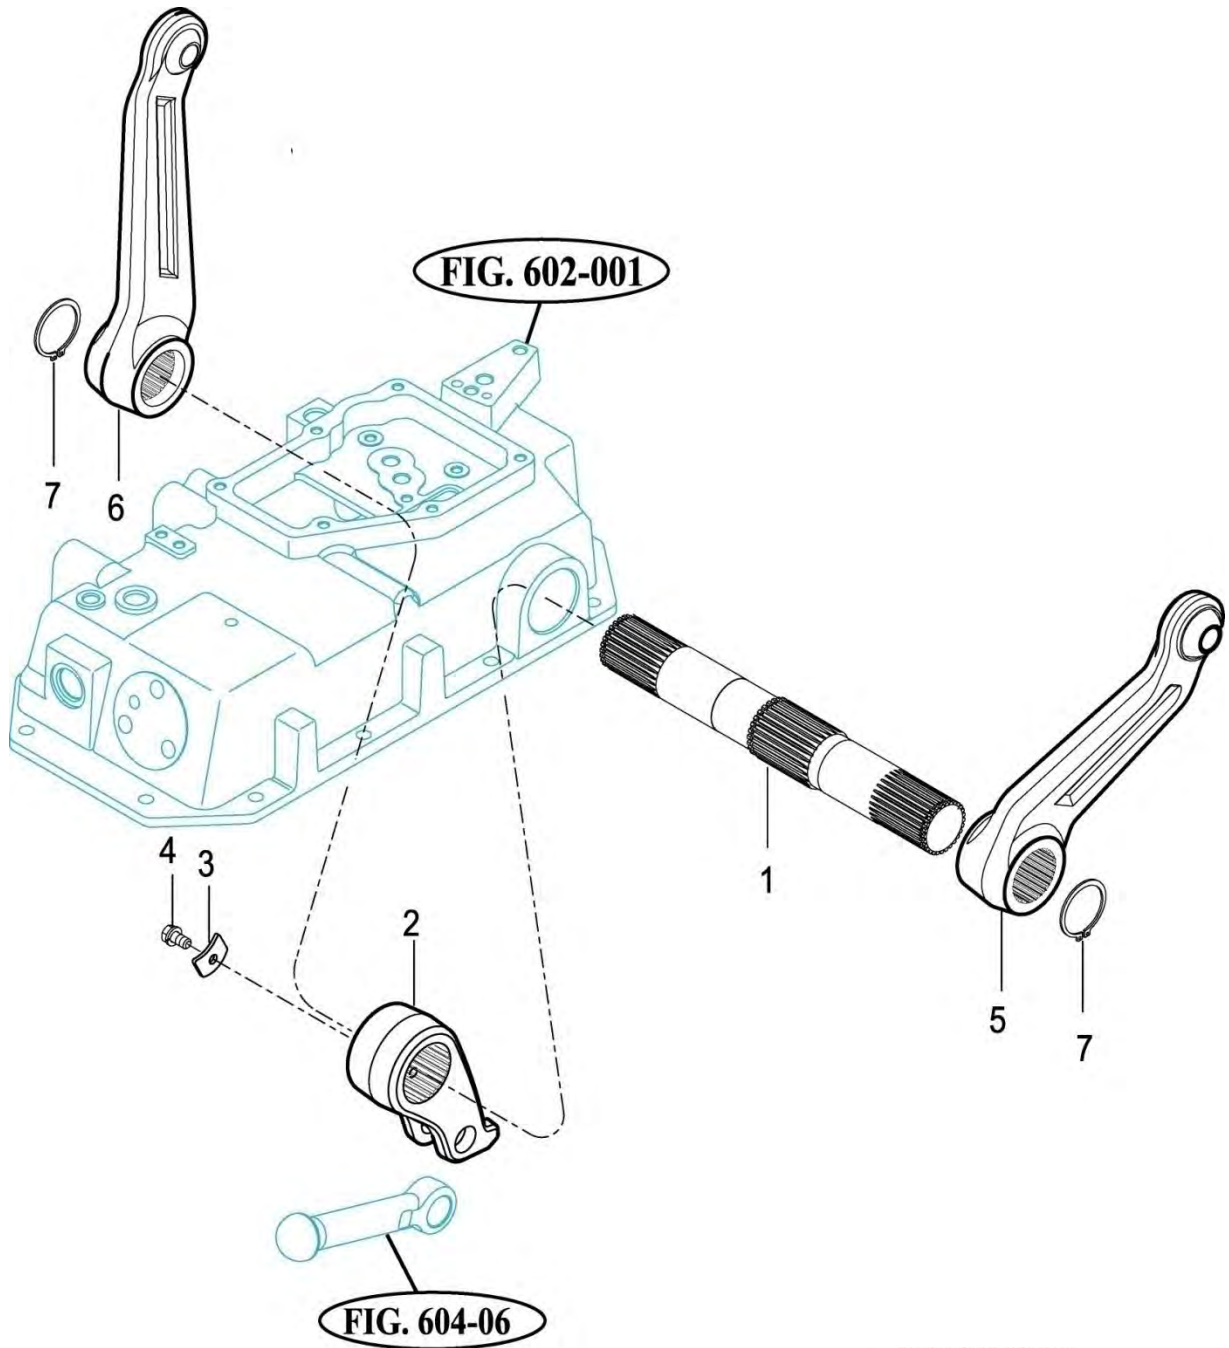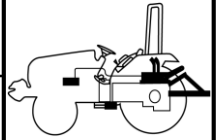

T303/353NC-E-603

NOTE



FIG 604
T474NH

CYLINDER

P1

YEAR

  2018

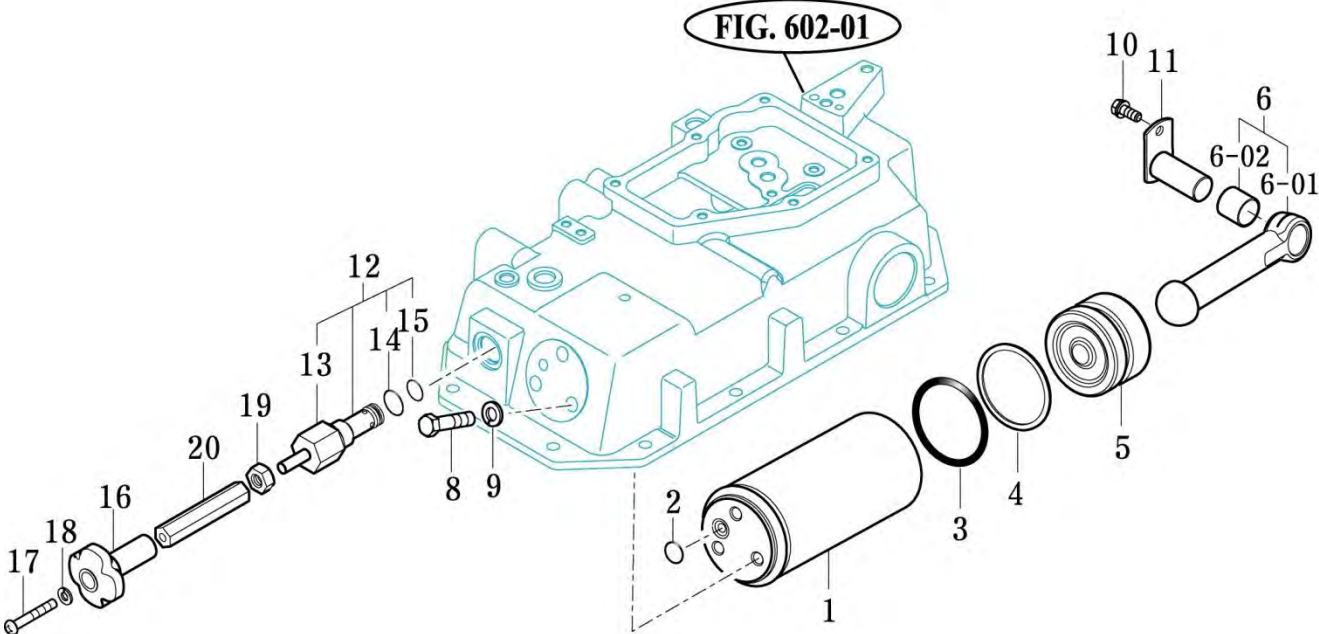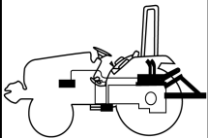

T303/353NC-E-604

NOTE



FIG 605
T474NH

POSITION LINK (1)

P1

YEAR

  2018

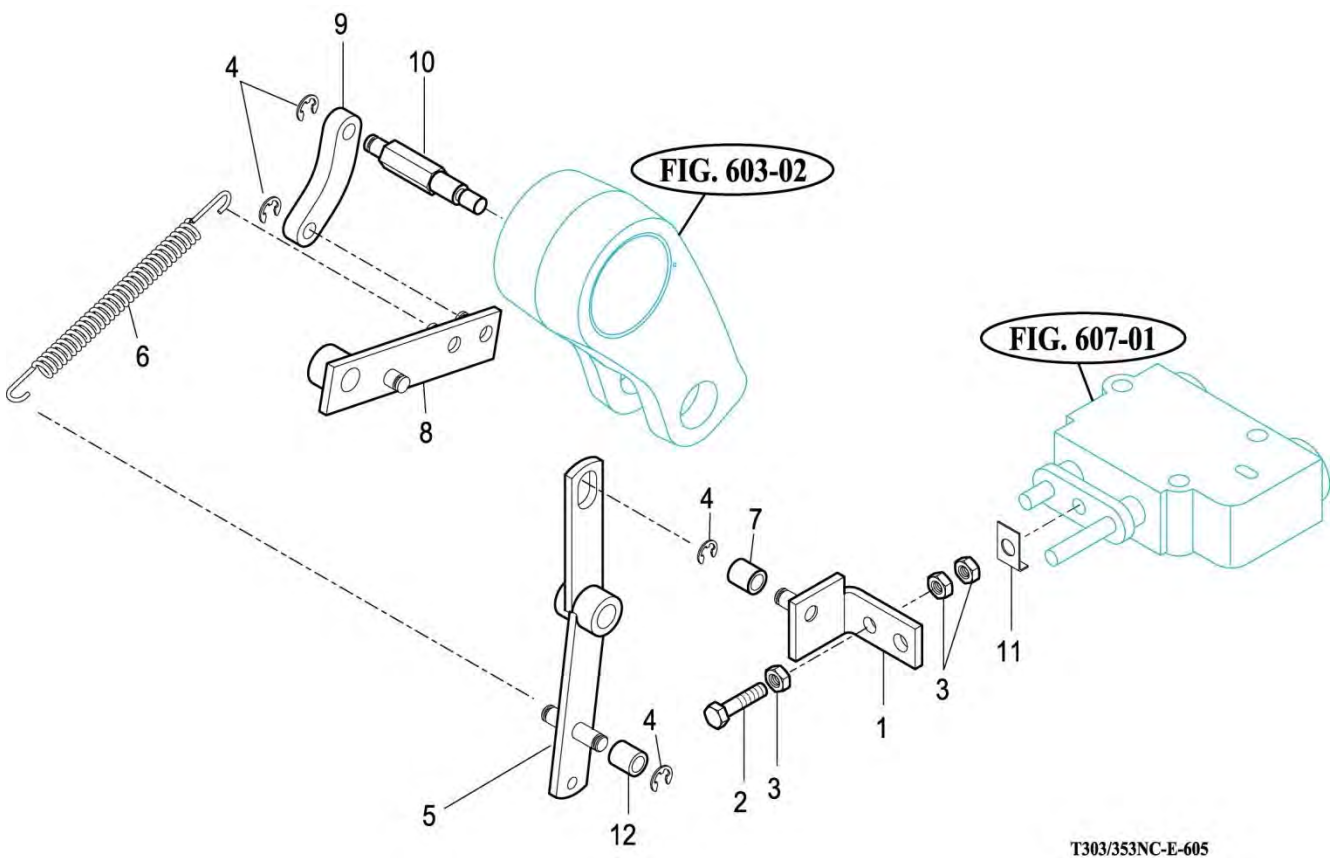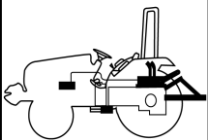

T303/353NC-E-605

NOTE



FIG 606
T474NH

POSITION LINK (2)

P1

YEAR

  2018

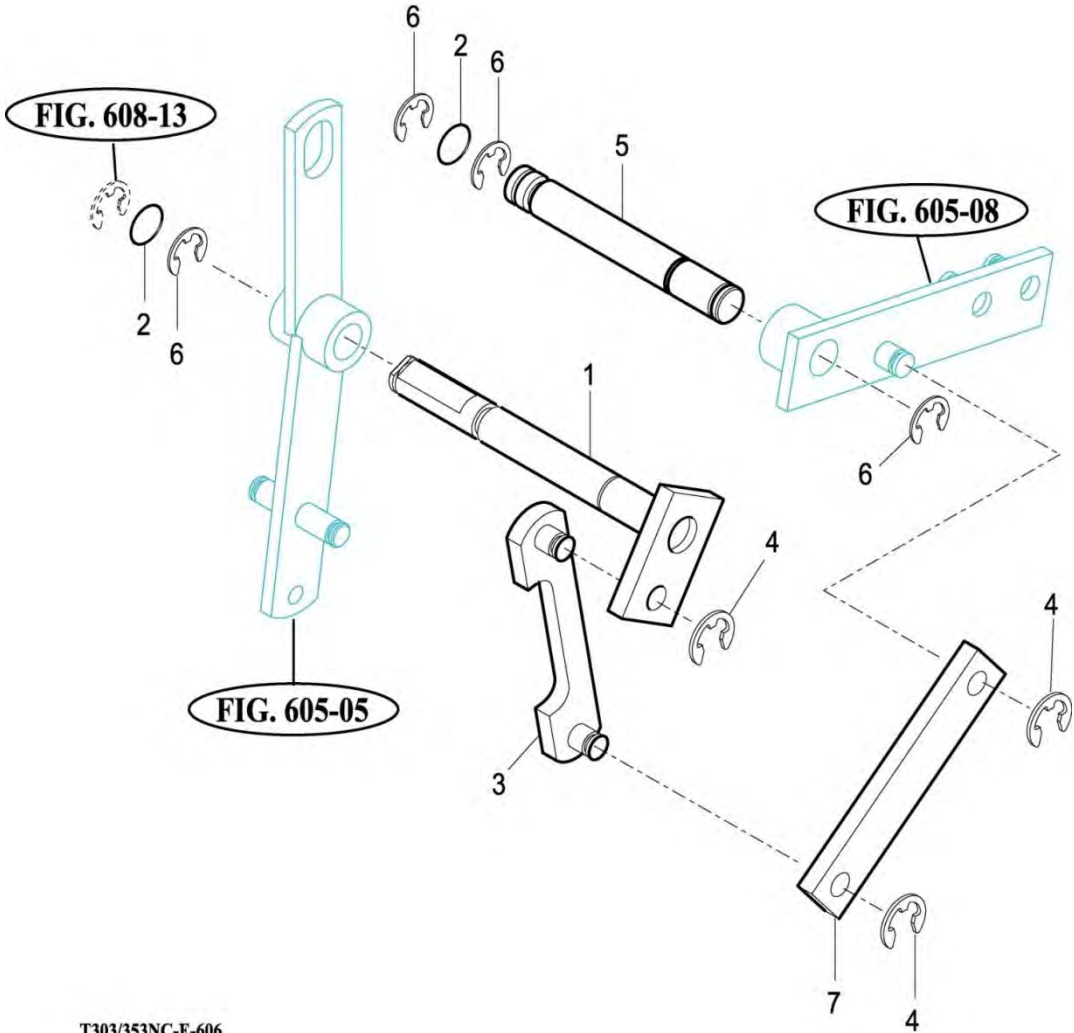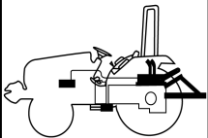

T303/353NC-E-606

NOTE



FIG 607
T474NH

CONTROL VALVE

P1

YEAR

  2018

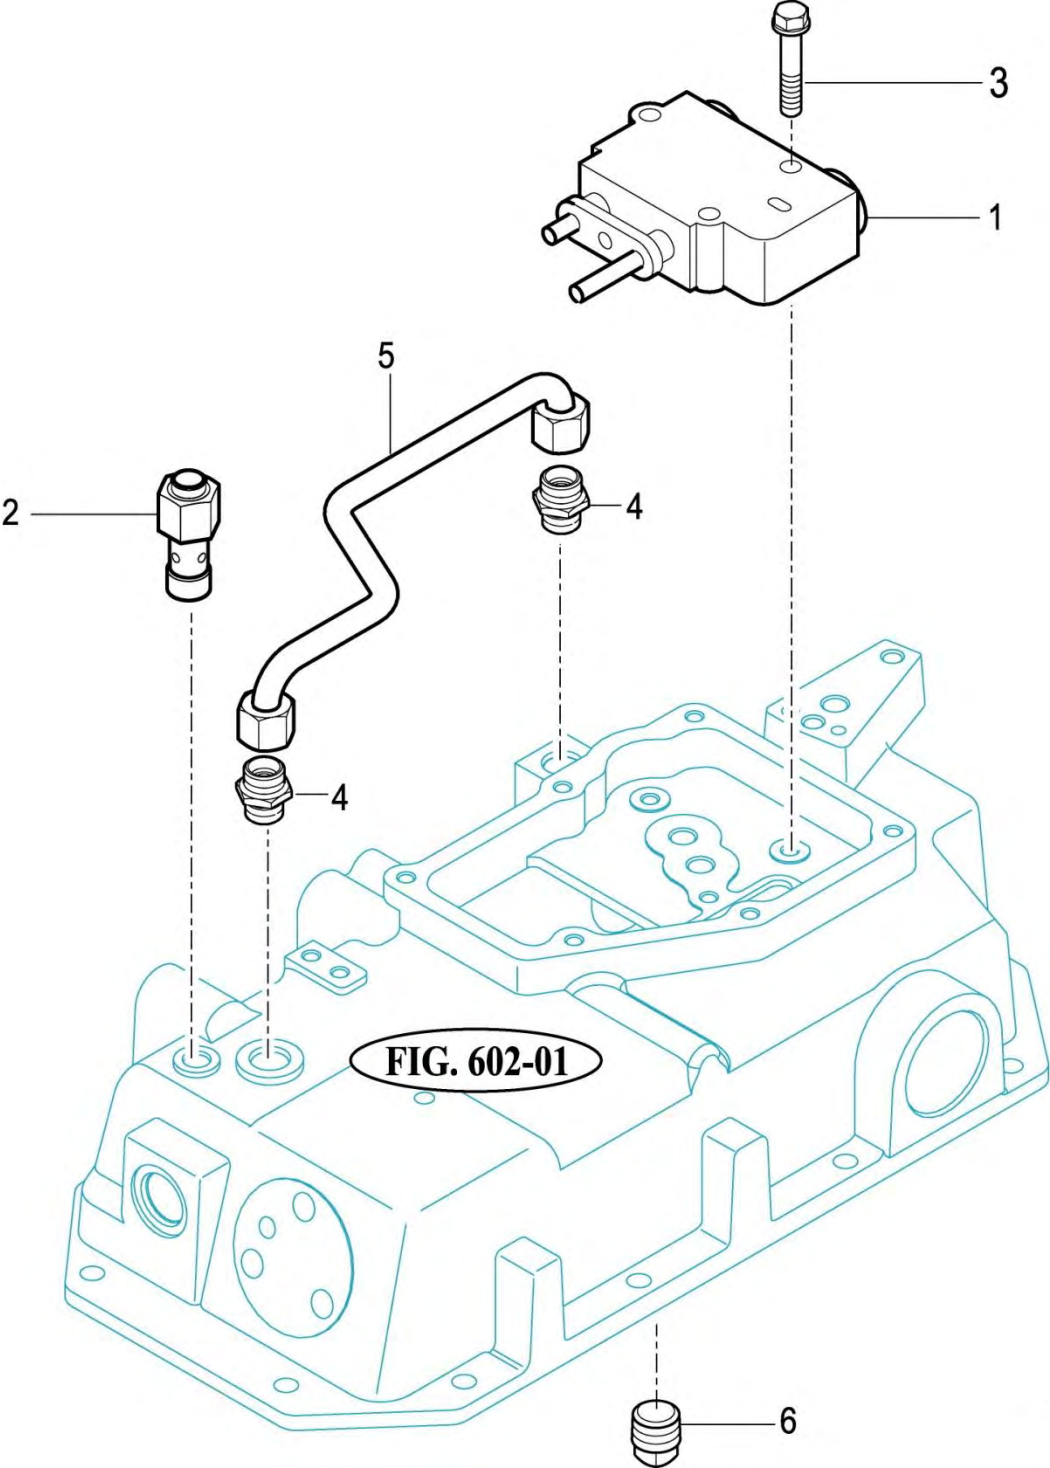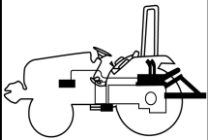

T303/353NC-E-607

NOTE

FIG 609

 
 
T474NH

HYDRAULIC PIPE (1)

P1

YEAR

2018

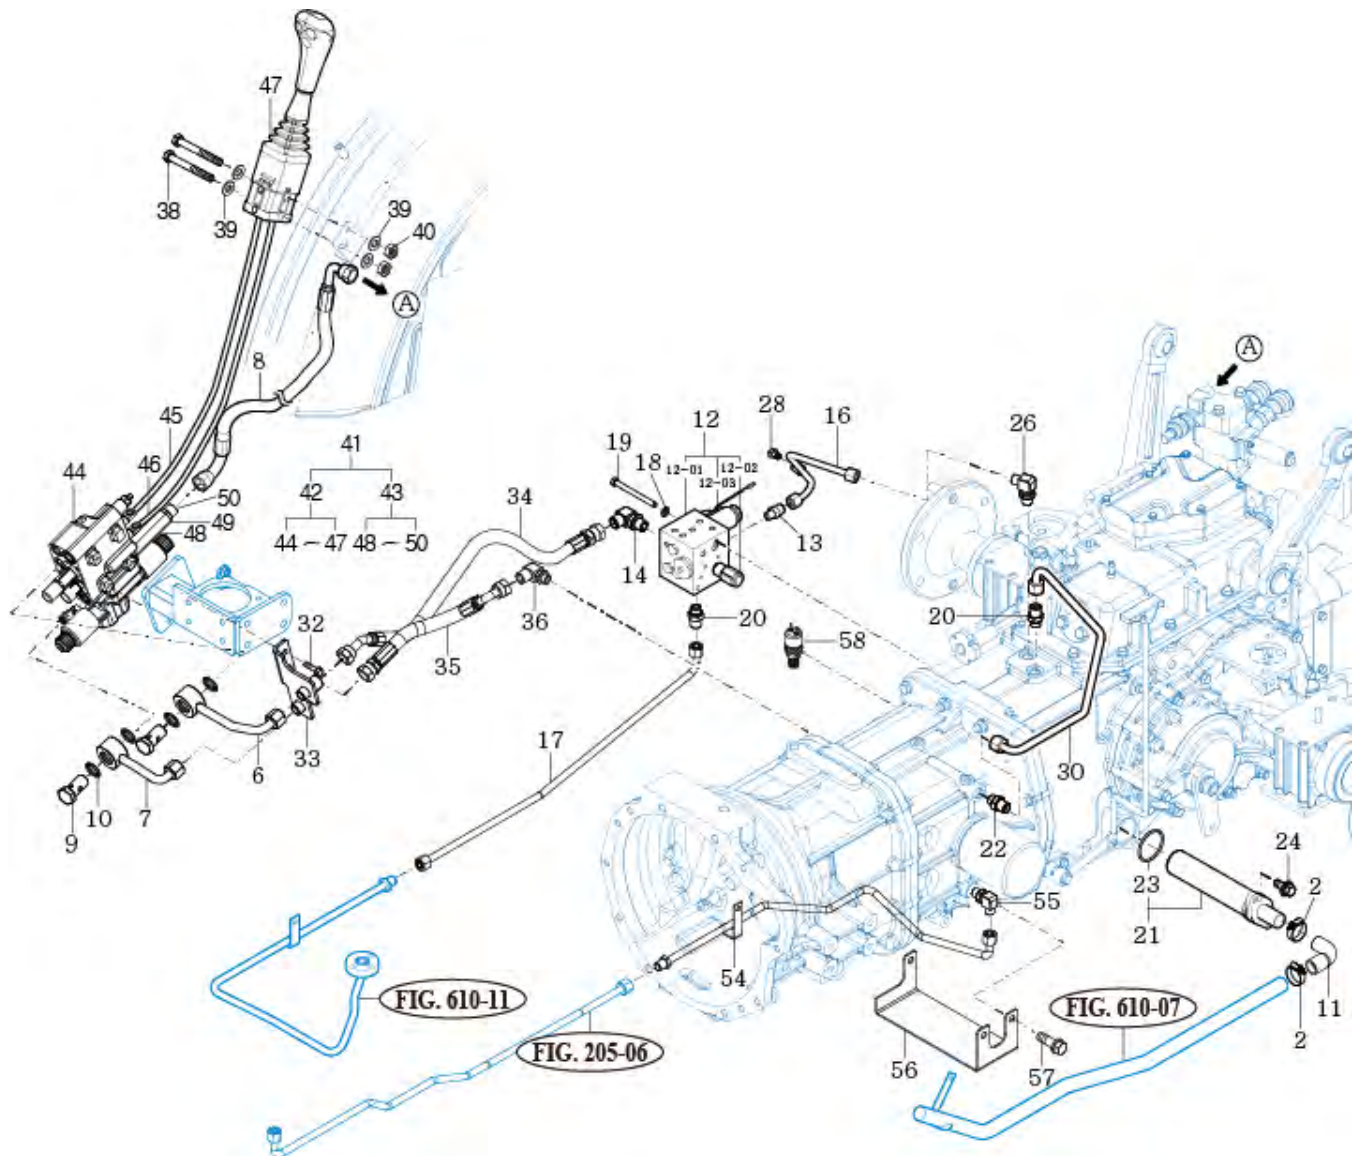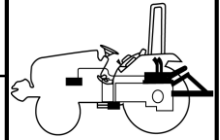

NOTE


FIG 609

HYDRAULIC PIPE (1)


P2

YEAR


 
2018

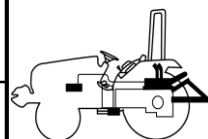

T474NH

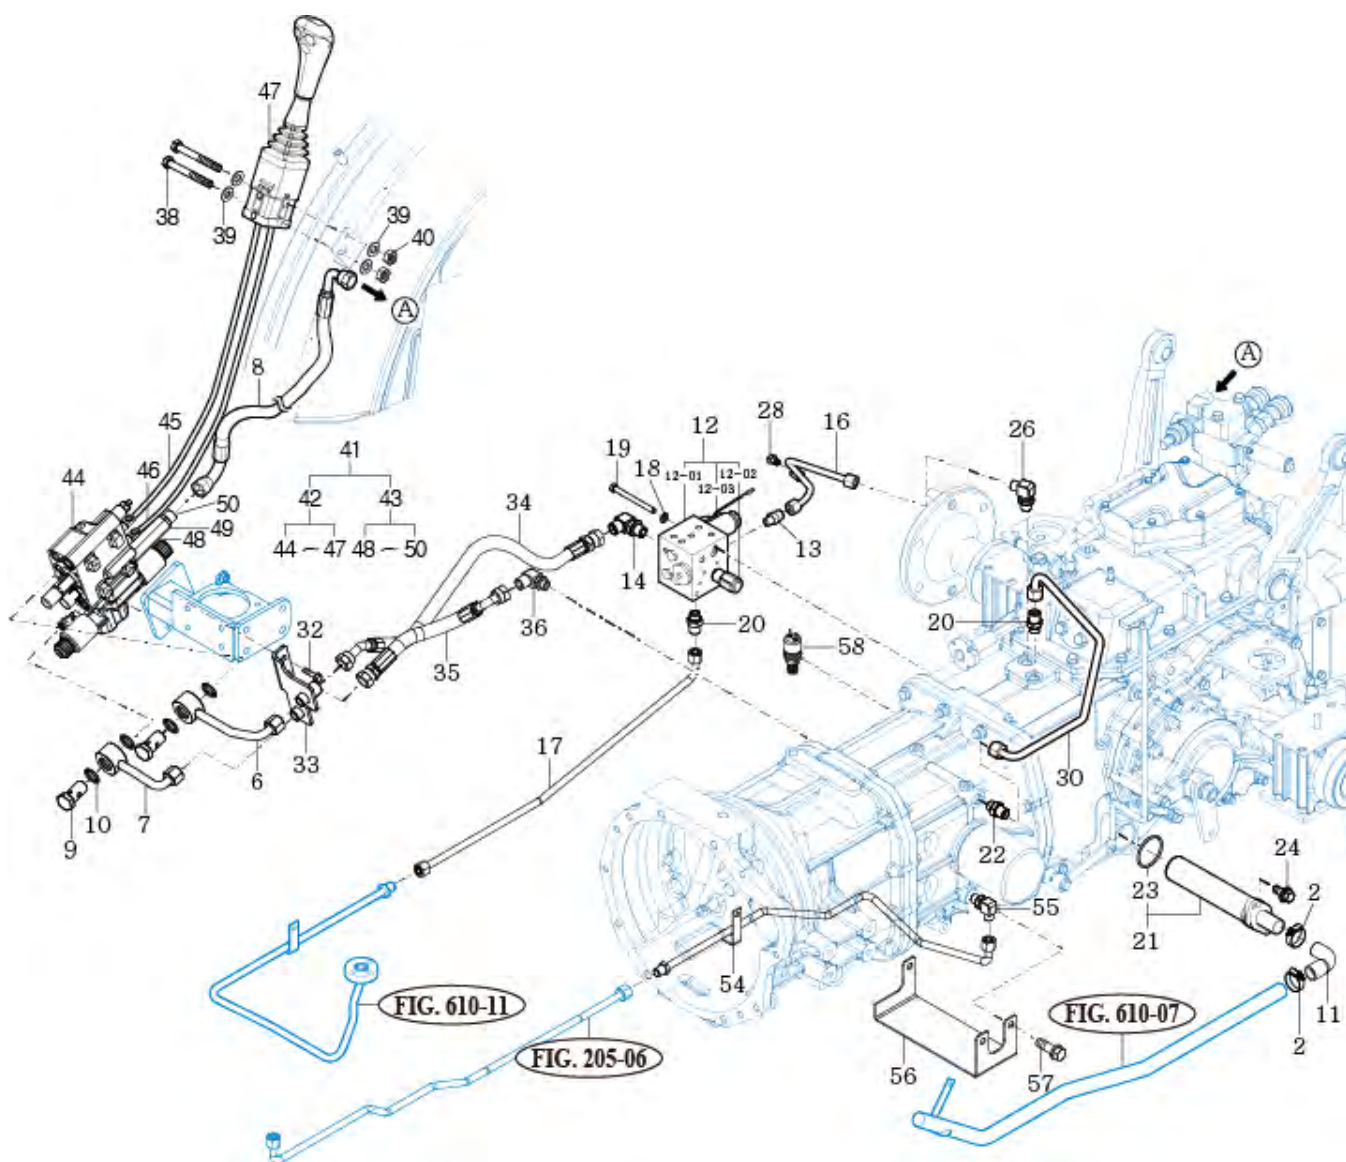 

NOTE

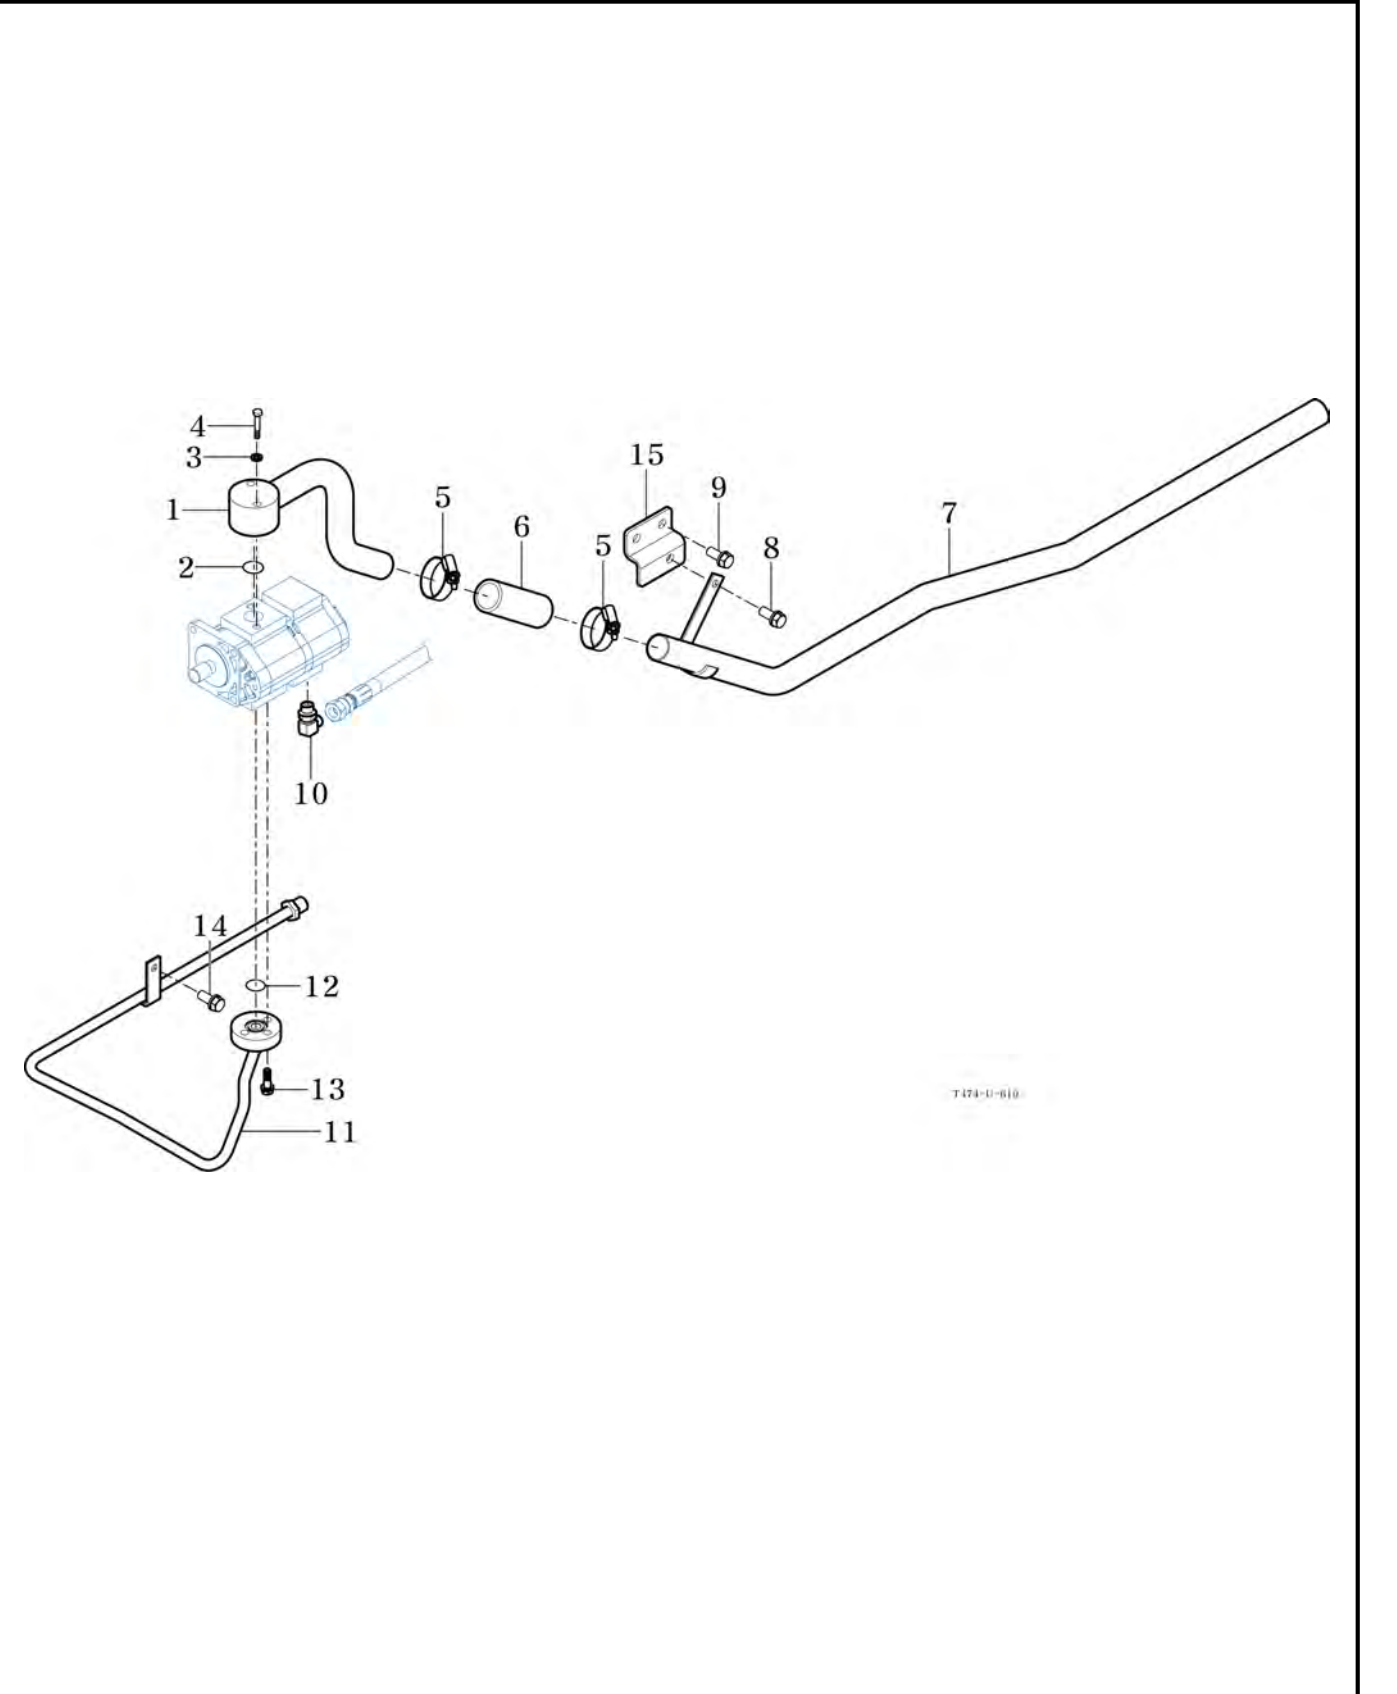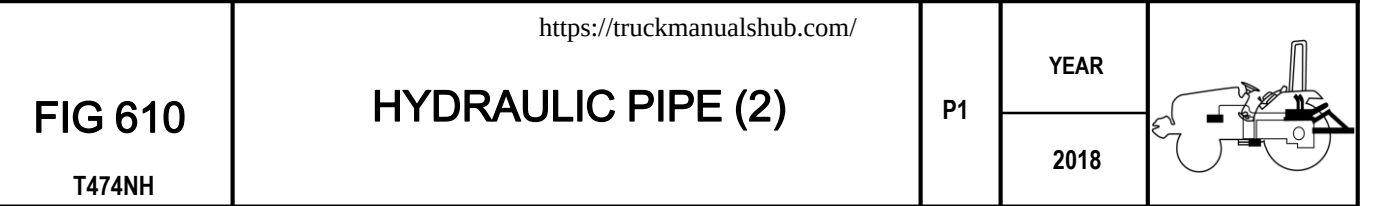  

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or actuator. The components are numbered 1 through 15:

- 1**: Main cylindrical housing or pump body.
- 2**: O-ring or seal.
- 3**: Small pin or screw.
- 4**: Small pin or screw.
- 5**: Two different types of clamps or fasteners.
- 6**: Cylindrical component, possibly a piston or seal.
- 7**: Long, curved arm or lever.
- 8**: Small pin or screw.
- 9**: Small pin or screw.
- 10**: Small pin or screw.
- 11**: U-shaped bracket or base.
- 12**: O-ring or seal.
- 13**: Small pin or screw.
- 14**: Small pin or screw.
- 15**: Small pin or screw.

The diagram shows the assembly sequence and relative positions of these parts. A dashed line indicates the alignment of the main body (1) with the base (11) and the arm (7). The arm (7) is shown in a bent position, suggesting it can move. The clamps (5) are used to secure the arm to the main body. The O-rings (2, 12) are used to seal the joints. The pins and screws (3, 4, 8, 9, 10, 13, 14, 15) are used to secure the various components together.

--


FIG 611

EXTERIOR HYD. VALVE


P1

YEAR

 2018

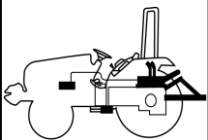

T474NH

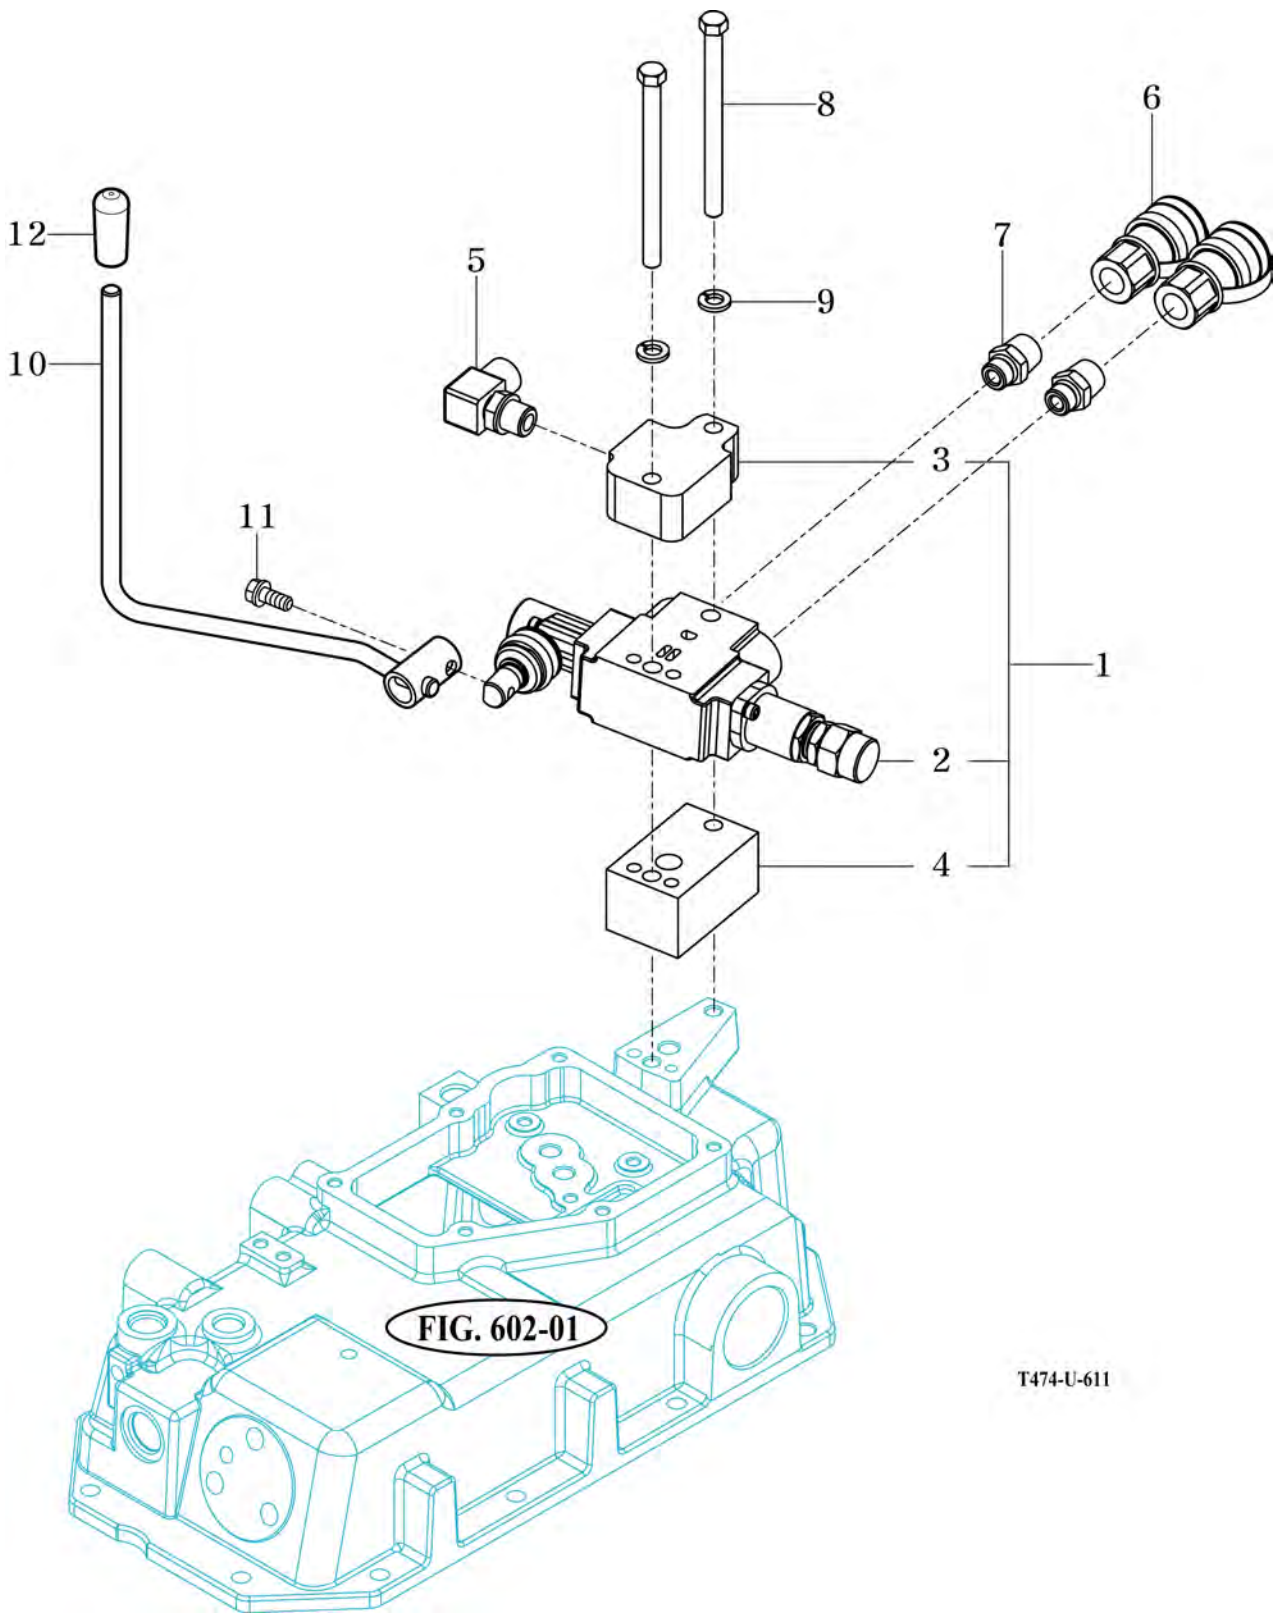 

T474-U-611

NOTE

FIG 612

 
 
T474NH

3-POINT LINK

P1

YEAR

2018

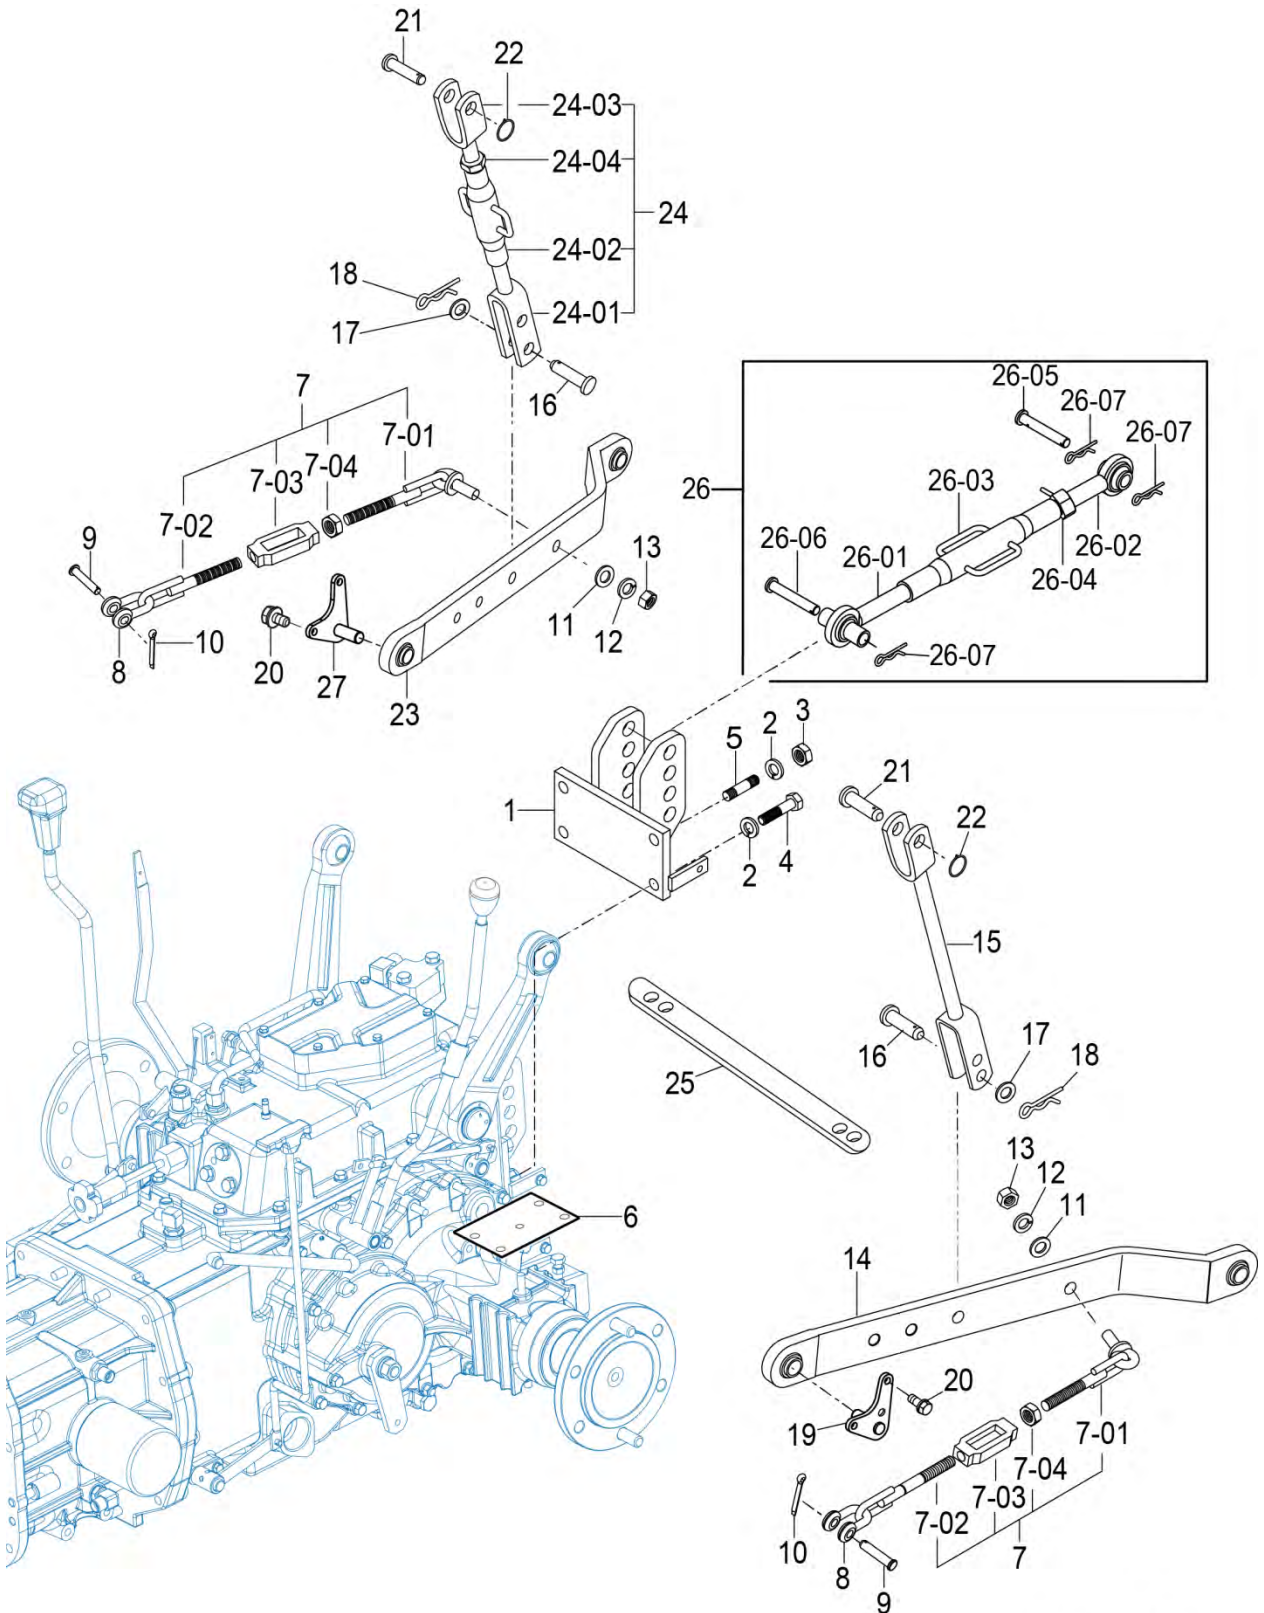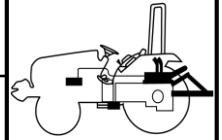

2538NH-K-612

NOTE

FIG 613
T474NH

HITCH & COVER

P1

YEAR

2018


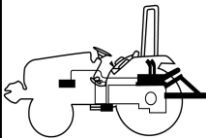 


FIG. 612-01

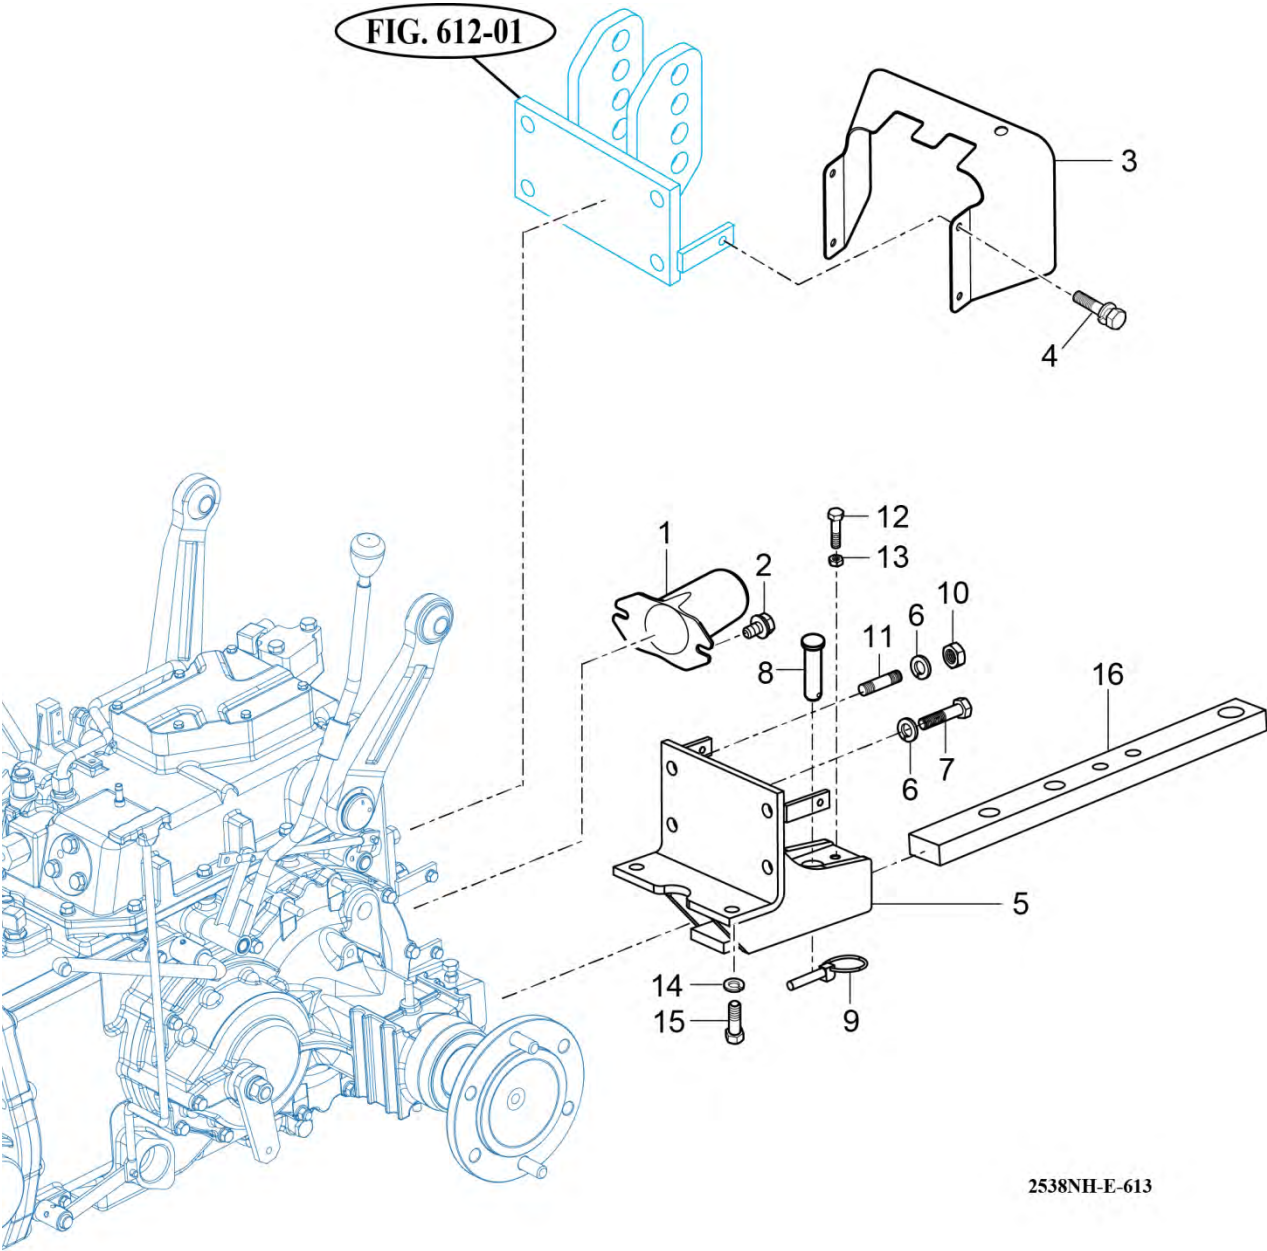 

2538NH-E-613

NOTE


FIG 614

EXTERIOR POSITION LEVER

P1

YEAR

 2018

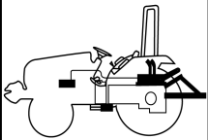

T474NH

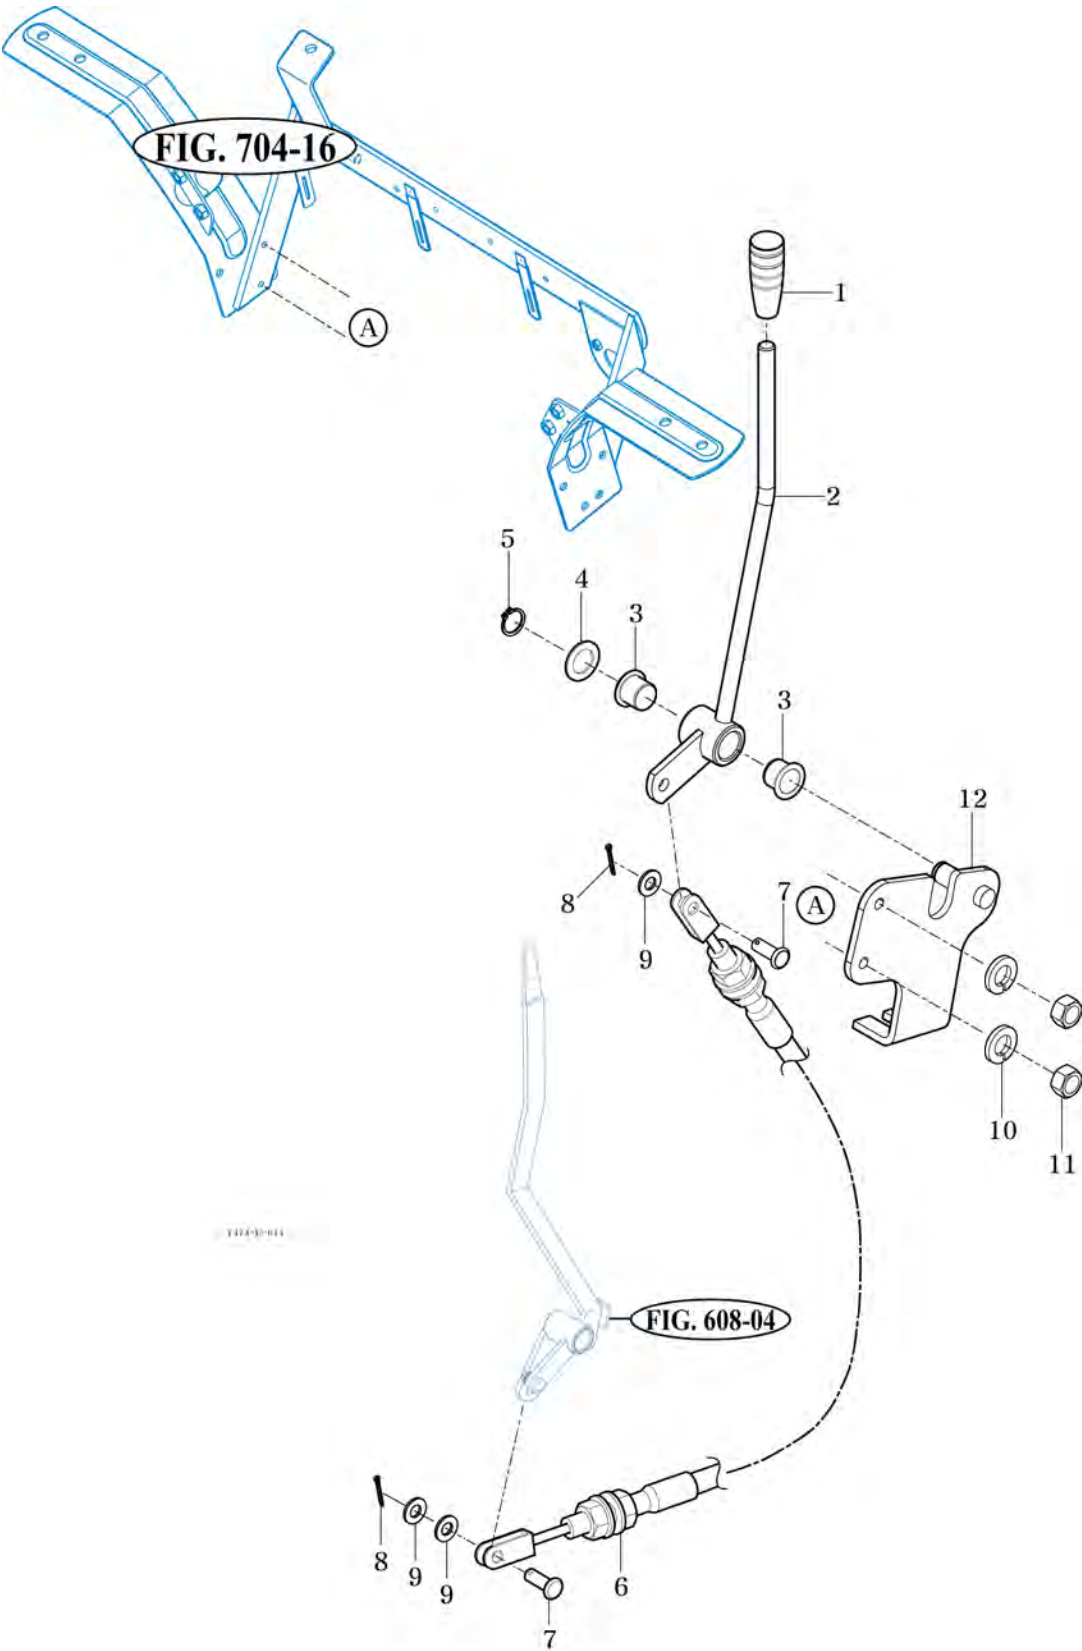 



FIG 701

HOOD FRAME


P1

YEAR

 2018

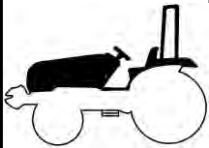

T474NH

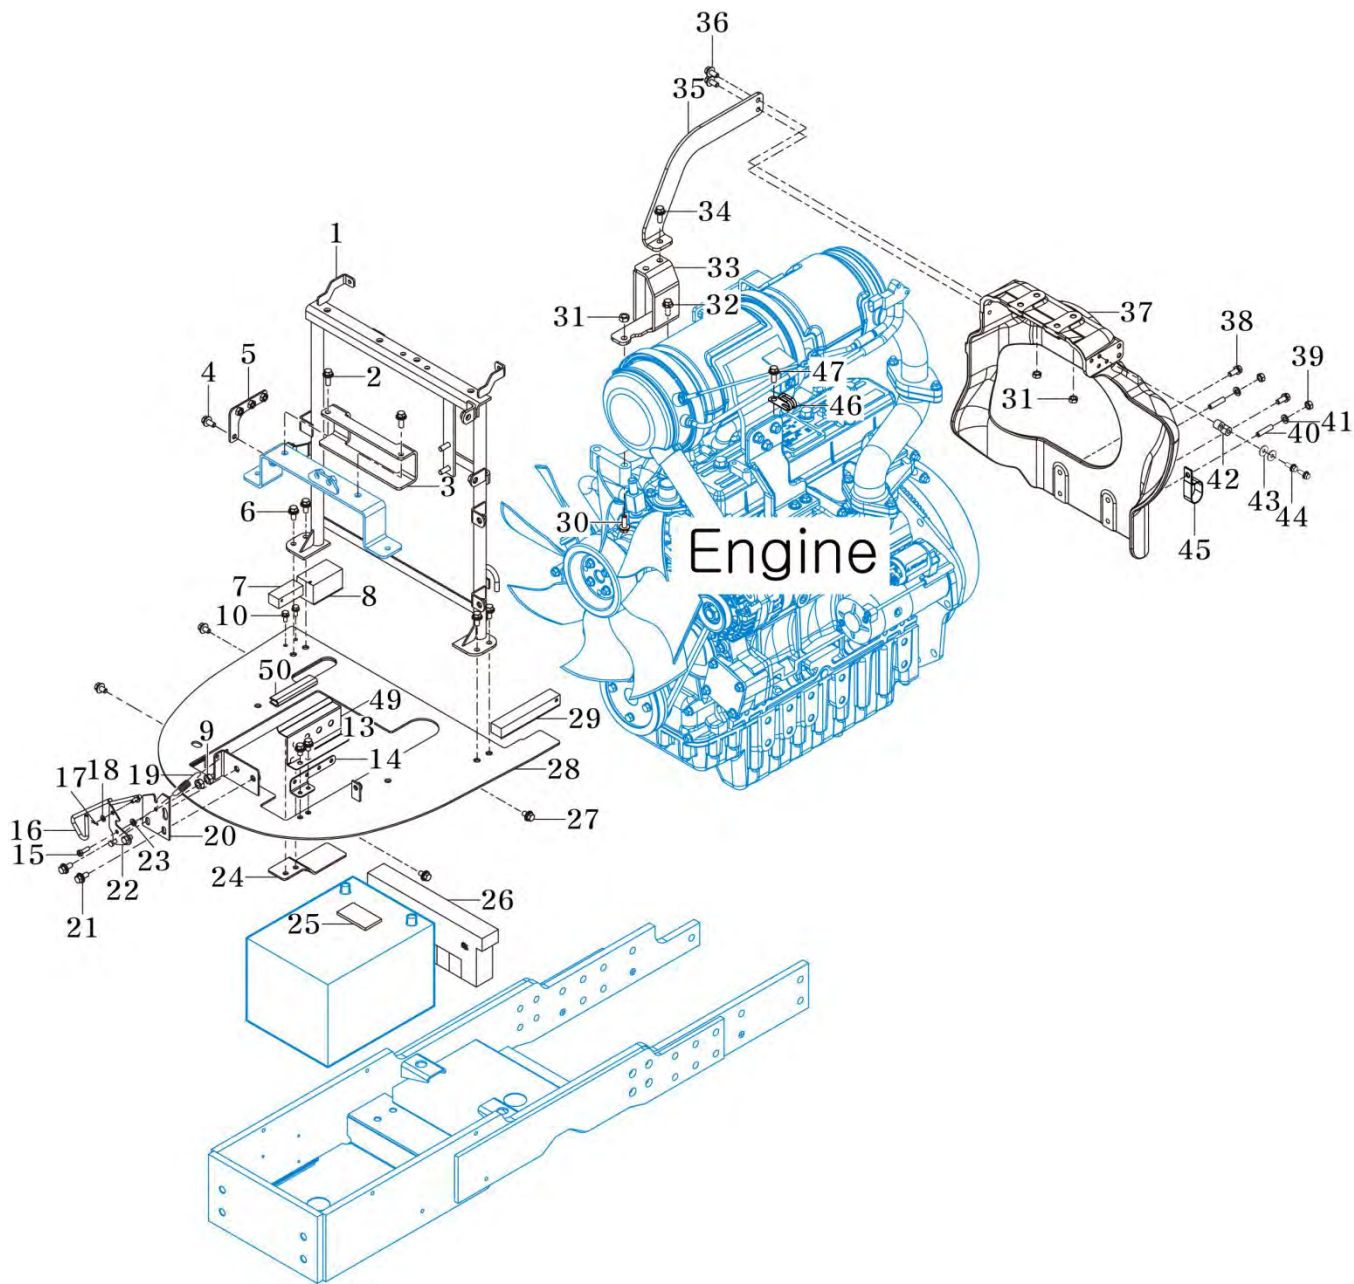 

NOTE


FIG 702

HOOD


P1

YEAR

 2018

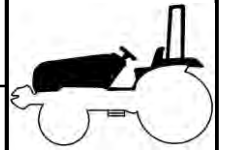

T474NH

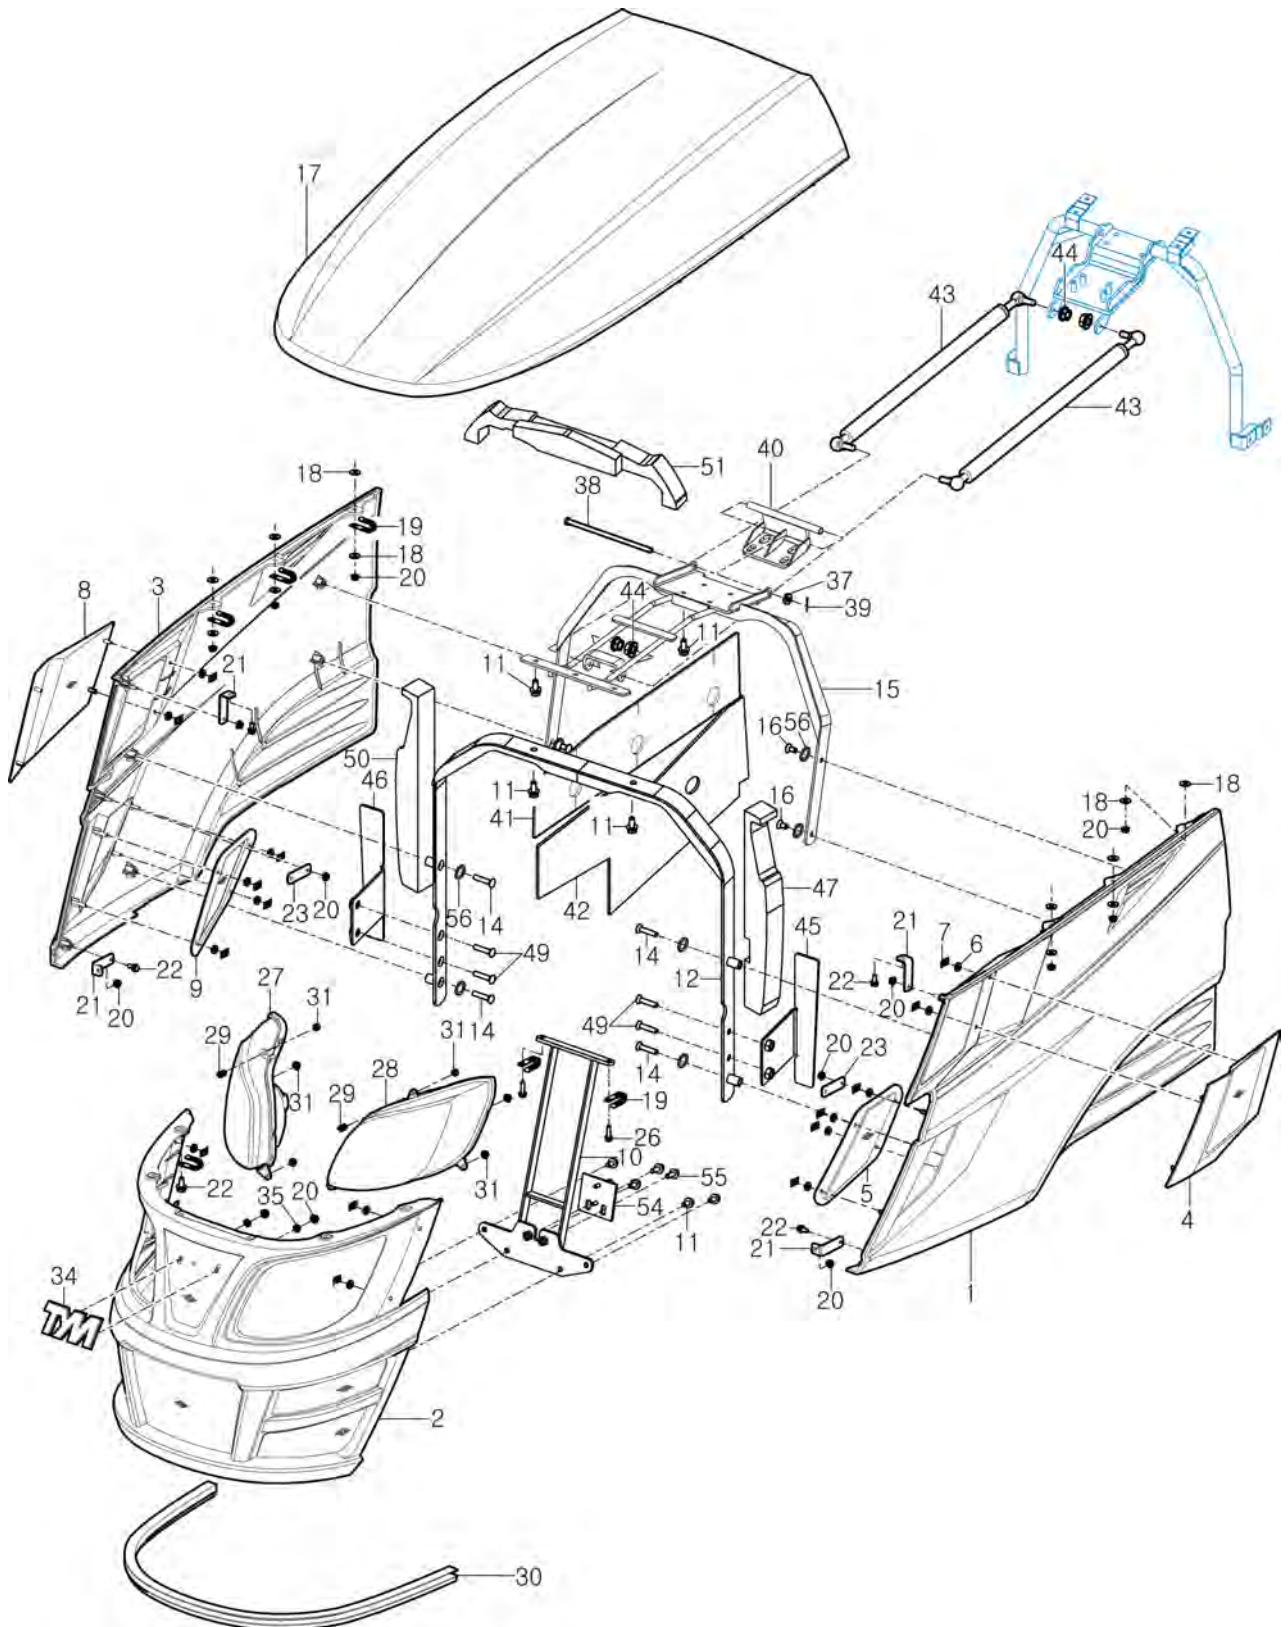 

NOTE

FIG 703

 
 
T474NH

EXTENSION COVER

P1

YEAR

2018

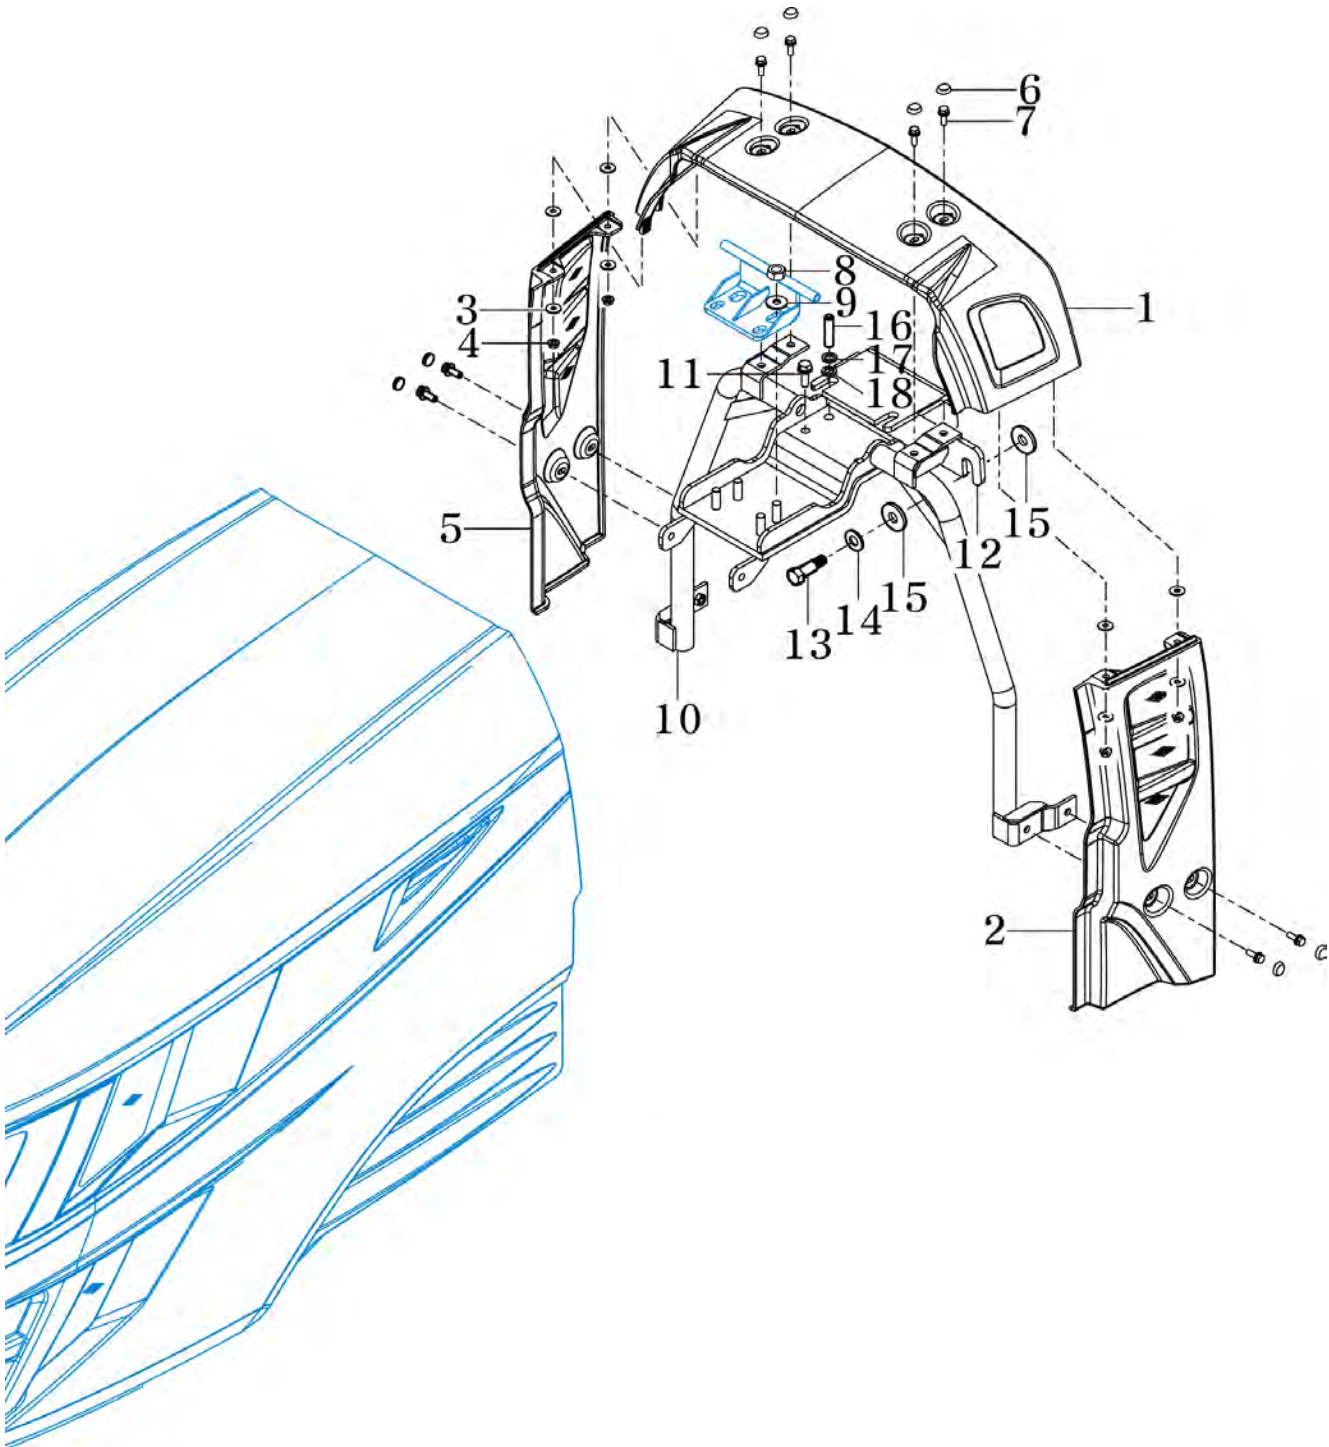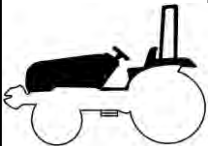

NOTE

FIG 704

 
 
T474NH

FENDER & REAR FRAME

P1

YEAR

2018

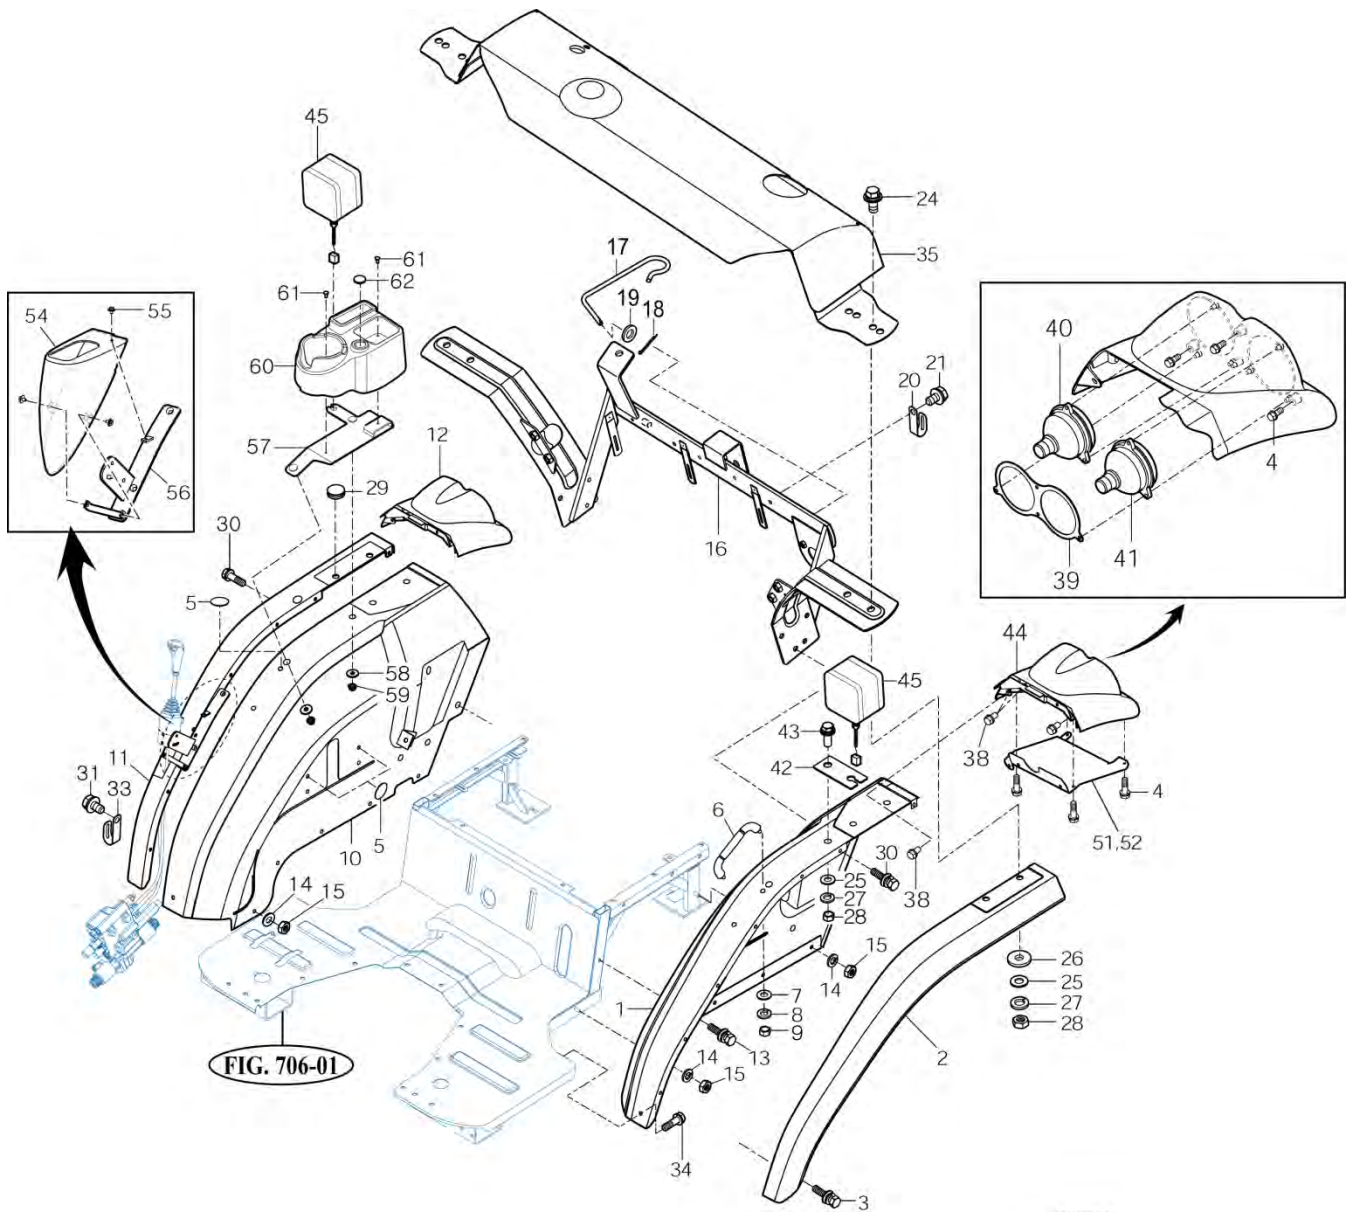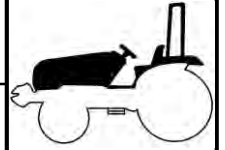

NOTE

FIG 705

 
 
T474NH

DASHPANEL

P1

YEAR

2018

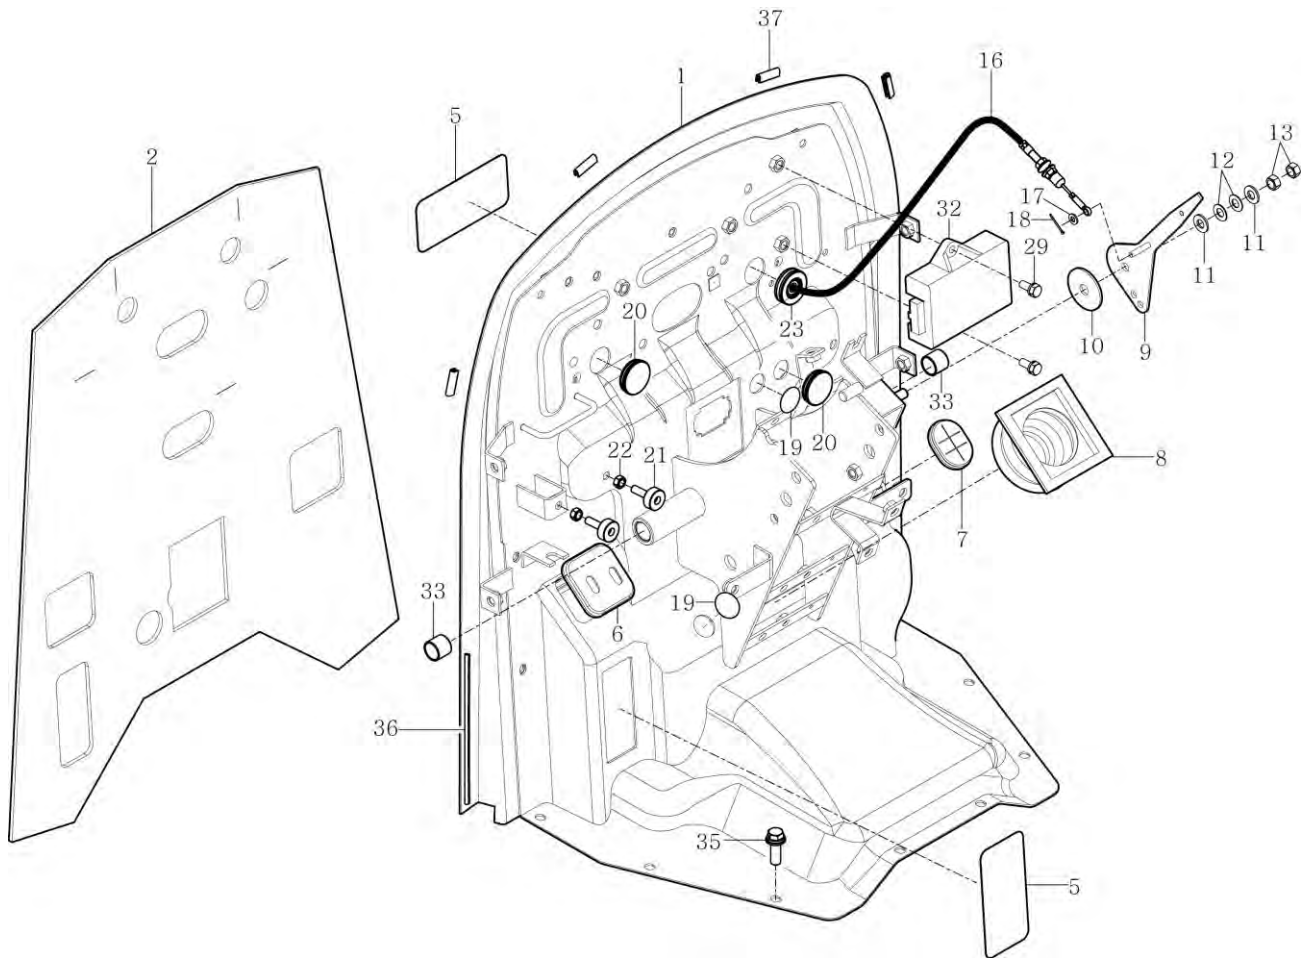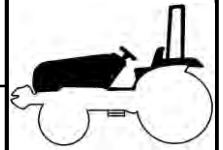

NOTE


FIG 706

FLOOR PANEL


P1

YEAR

 2018

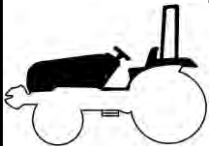

T474NH

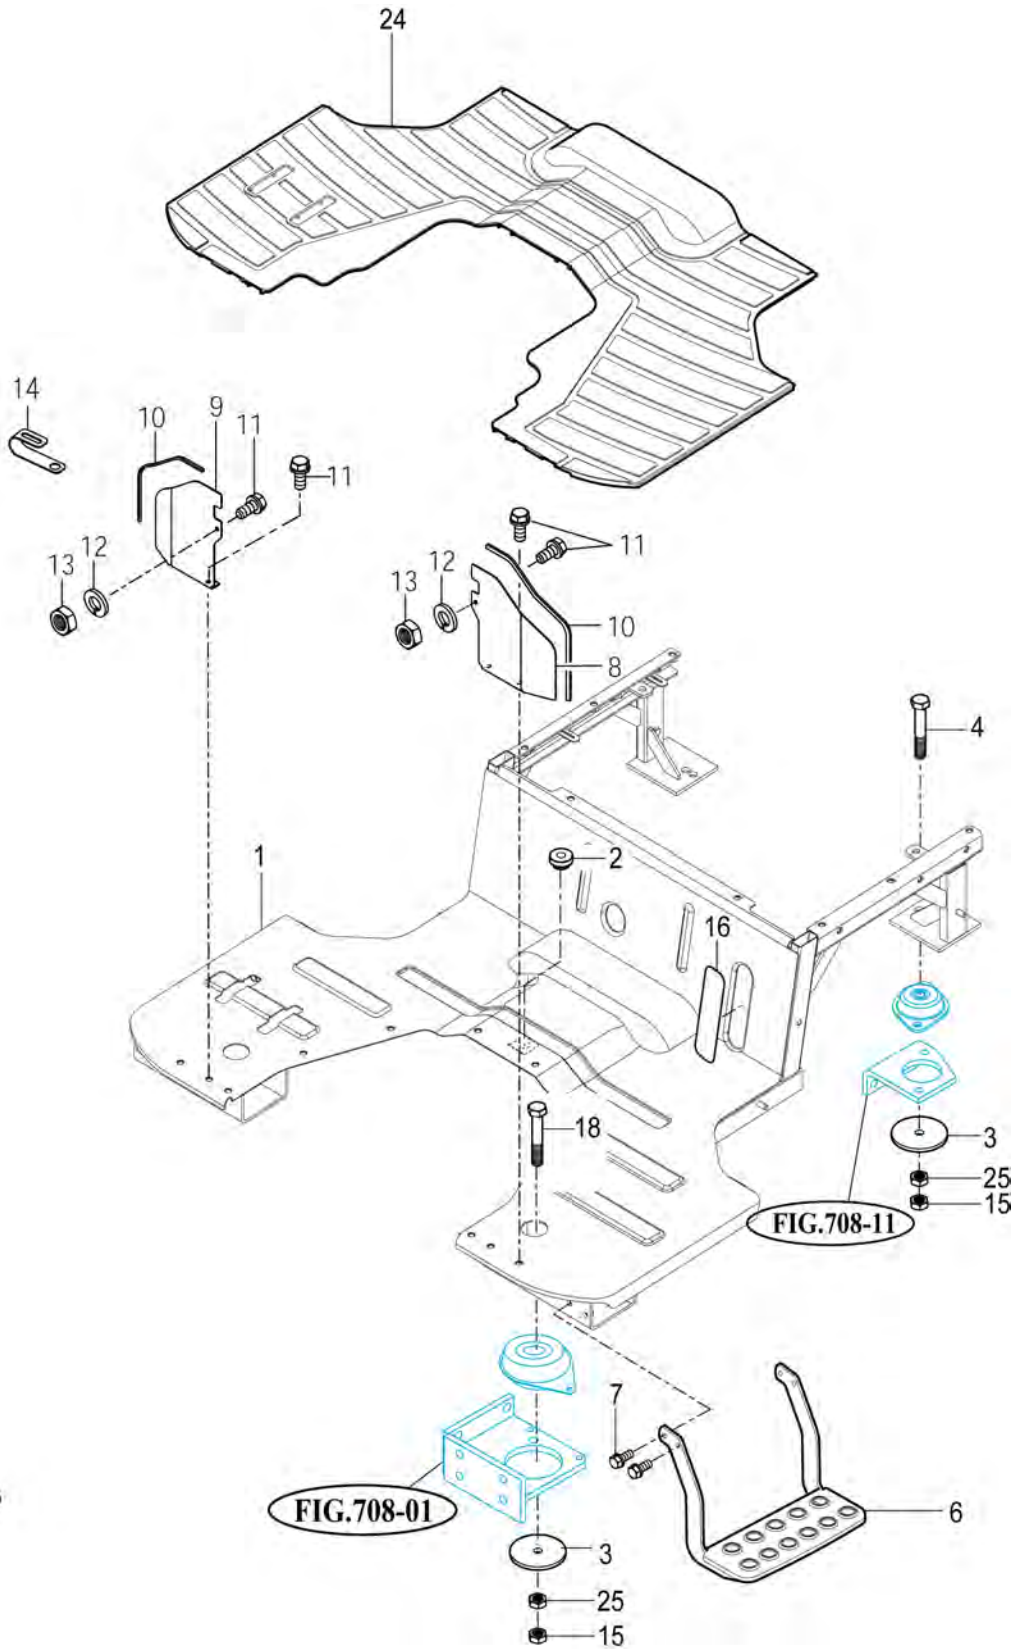 

T474-U-706

NOTE

FIG 707

 
 
T474NH

SEAT

P1

YEAR

2018

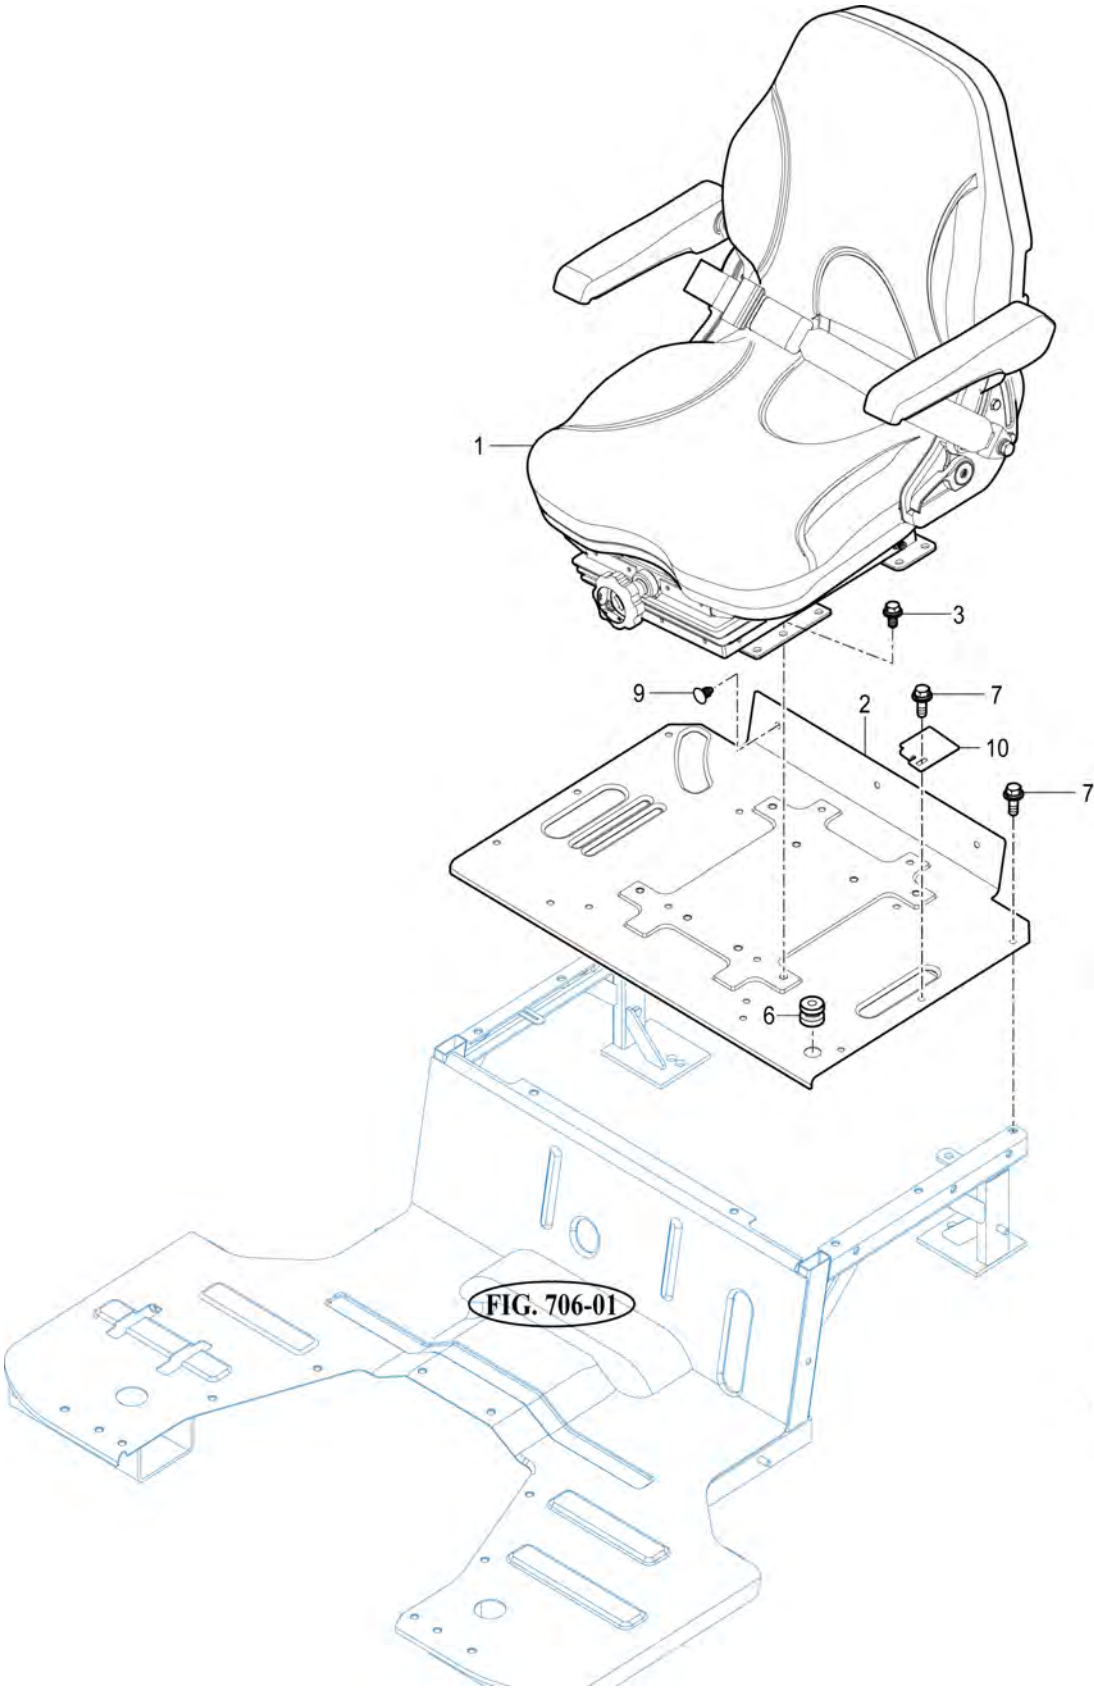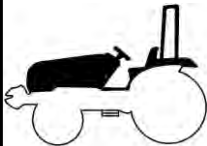

NOTE


FIG 708

FRONT & REAR MOUNTING


P1

YEAR

 2018

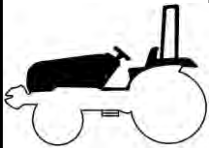

T474NH

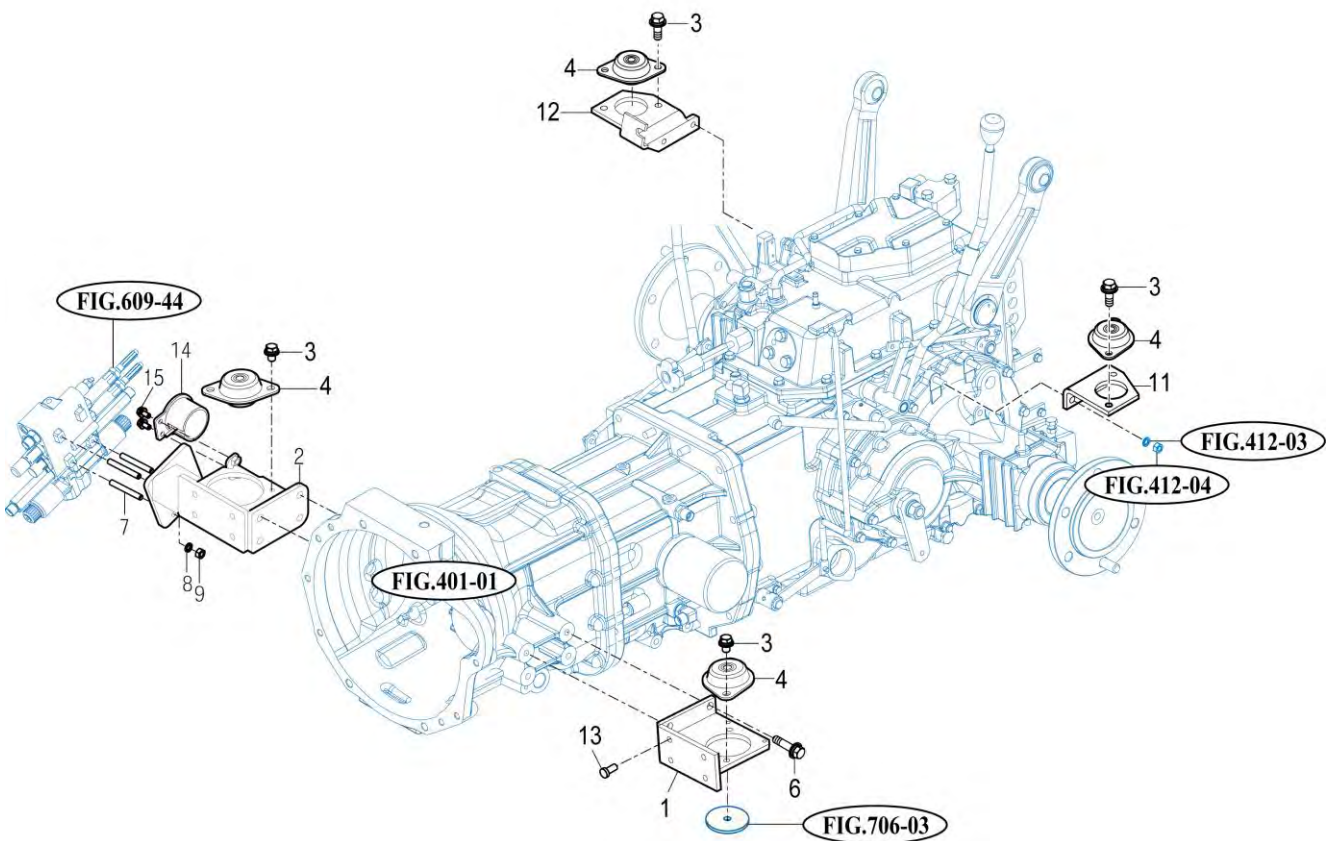 

T474-U-708

NOTE

FIG 709

 
 
T474NH

ROPS

P1

YEAR

2018

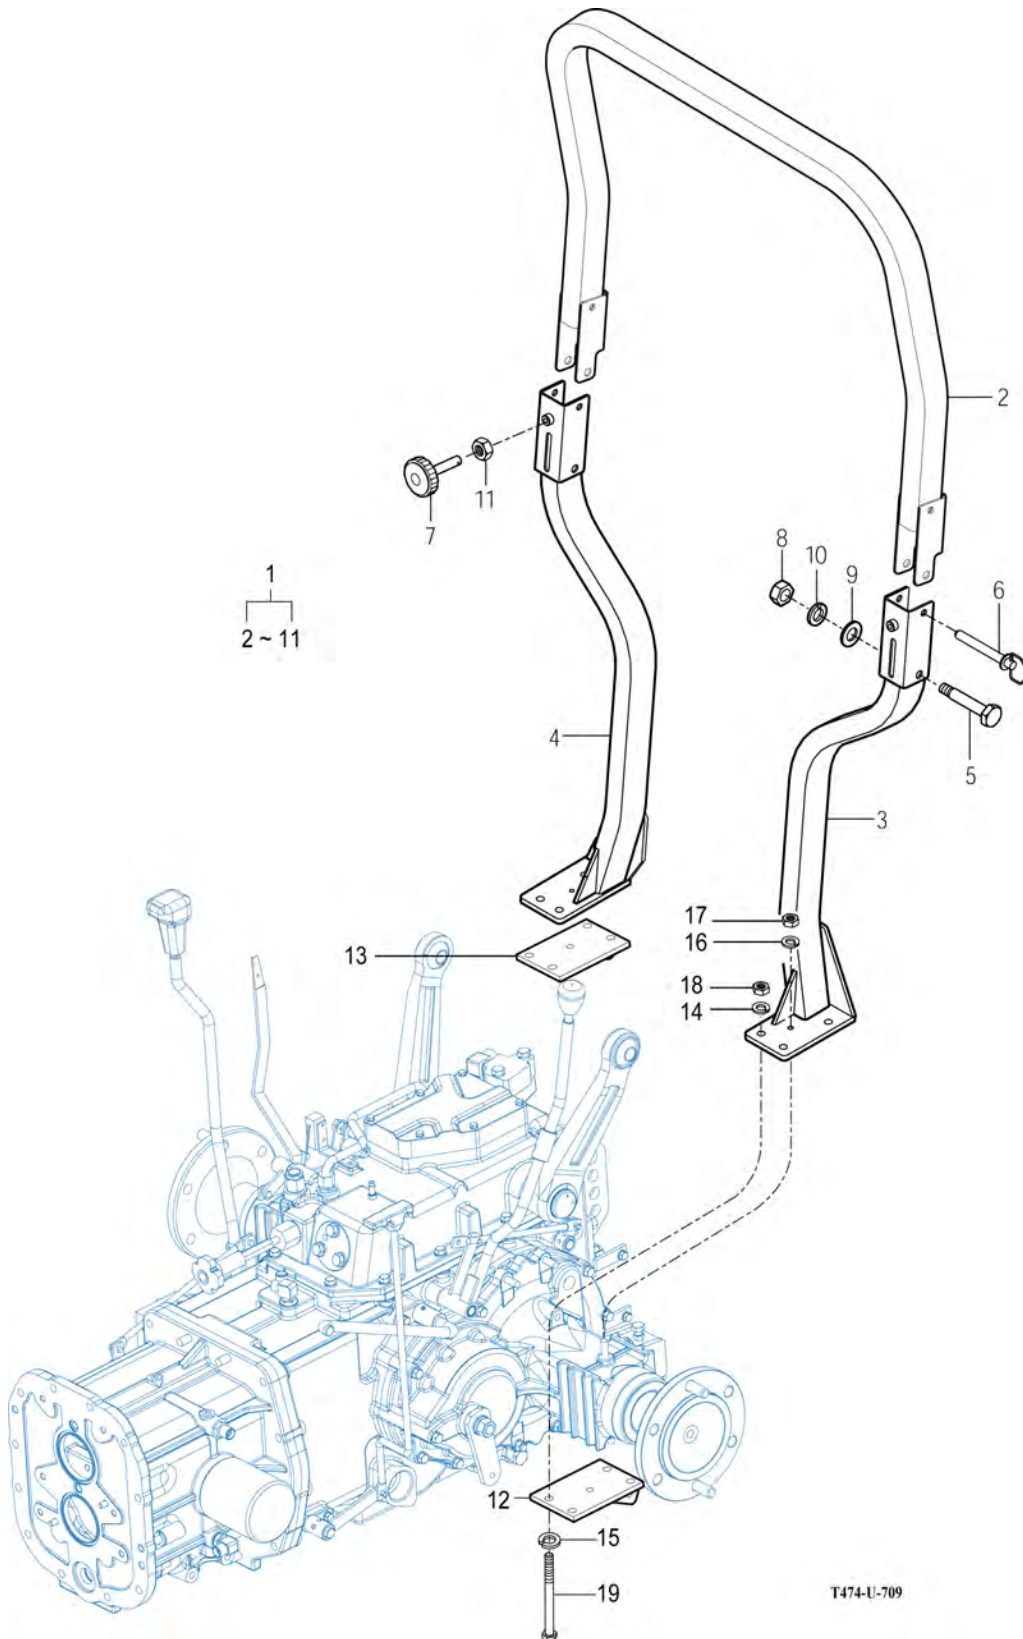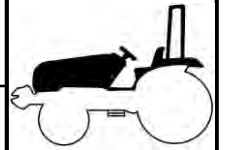

T474-U-709

NOTE

FIG 801

 
 
T474NH

BATTERY & MOUNTING

P1

YEAR

2018

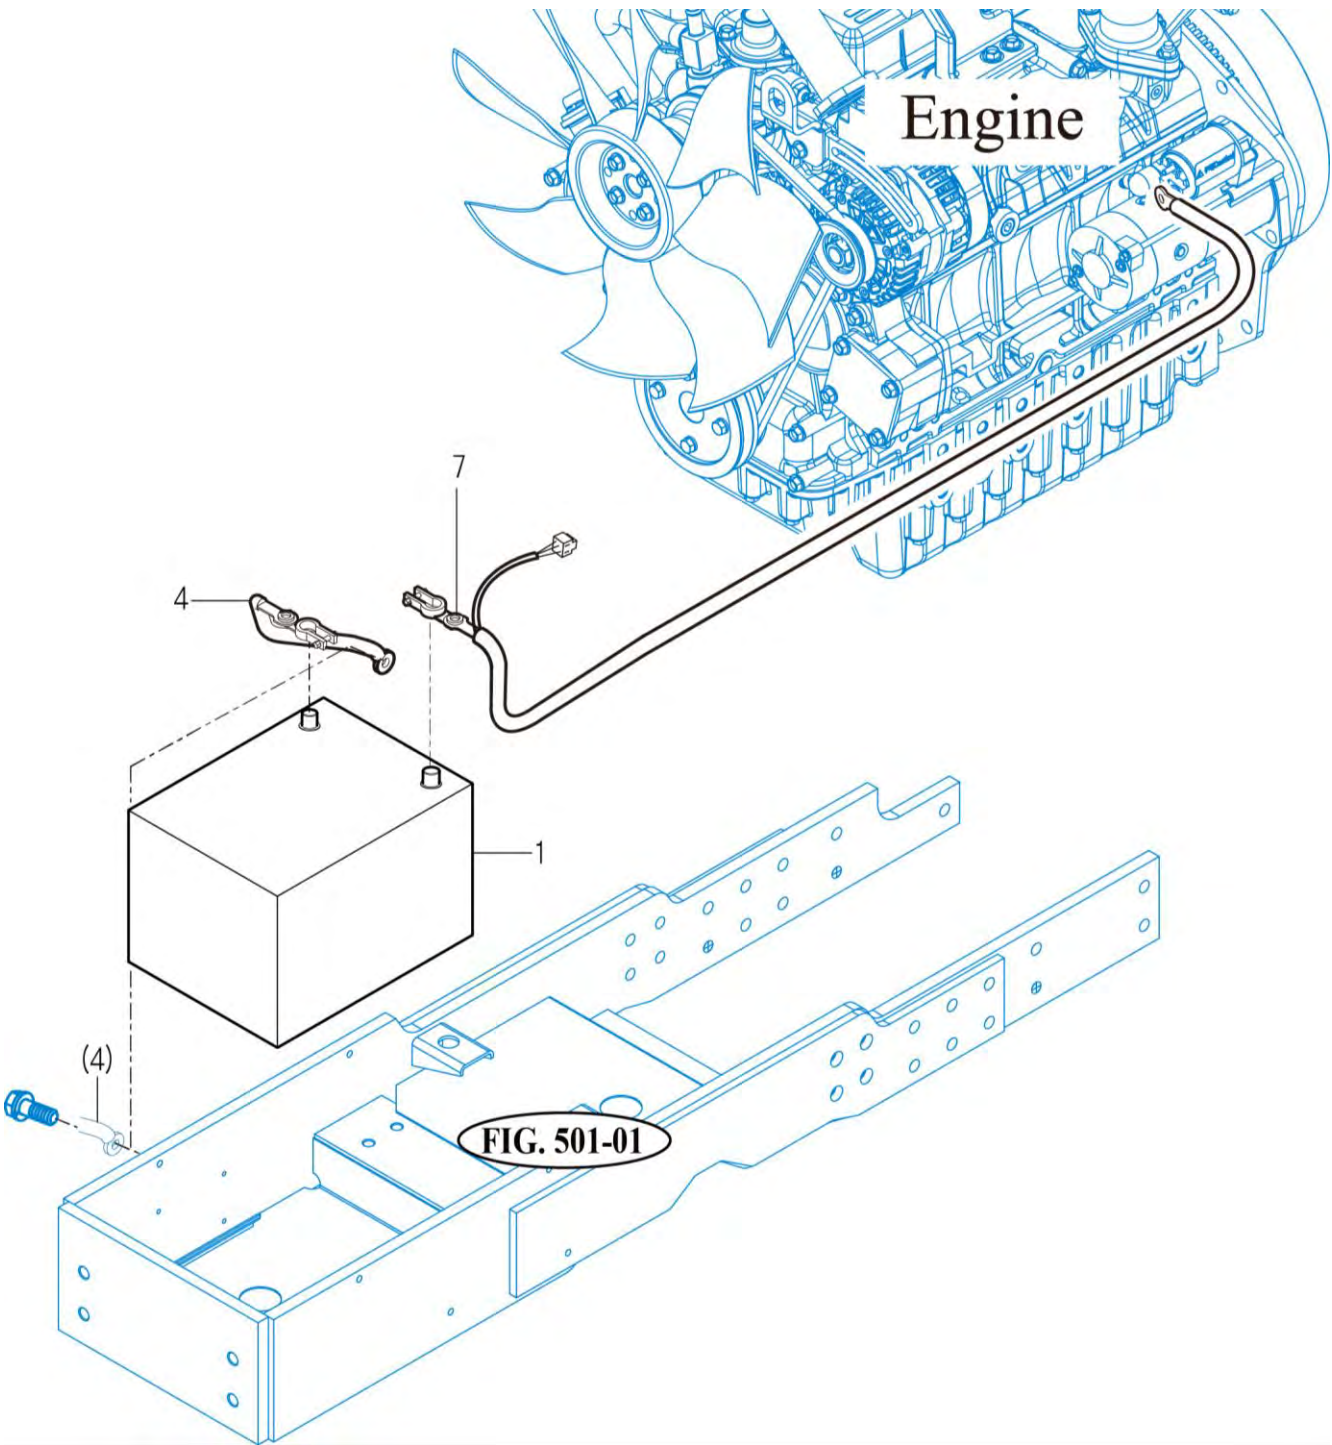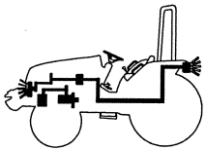

NOTE

LAMP

P1

YEAR

2018


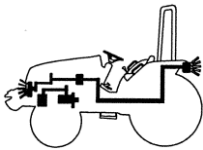 


FIG 802

 T474NH

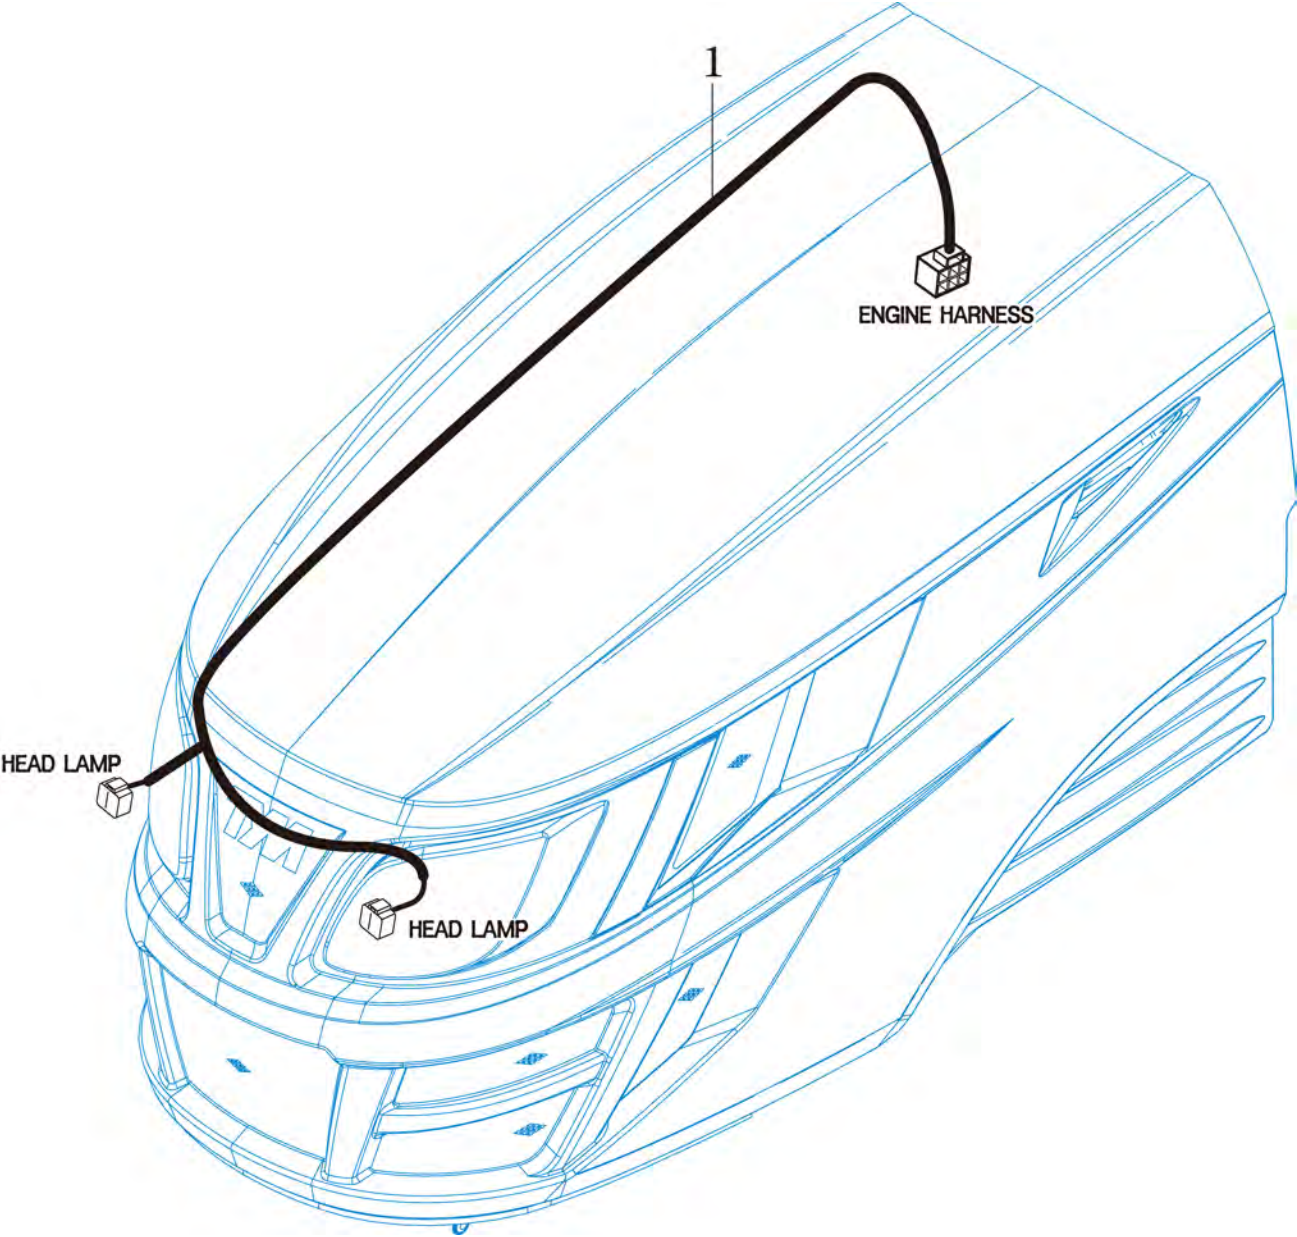

NOTE

FIG 803

 
 
T474NH

INSTRUMENT PANEL

P1

YEAR

2018

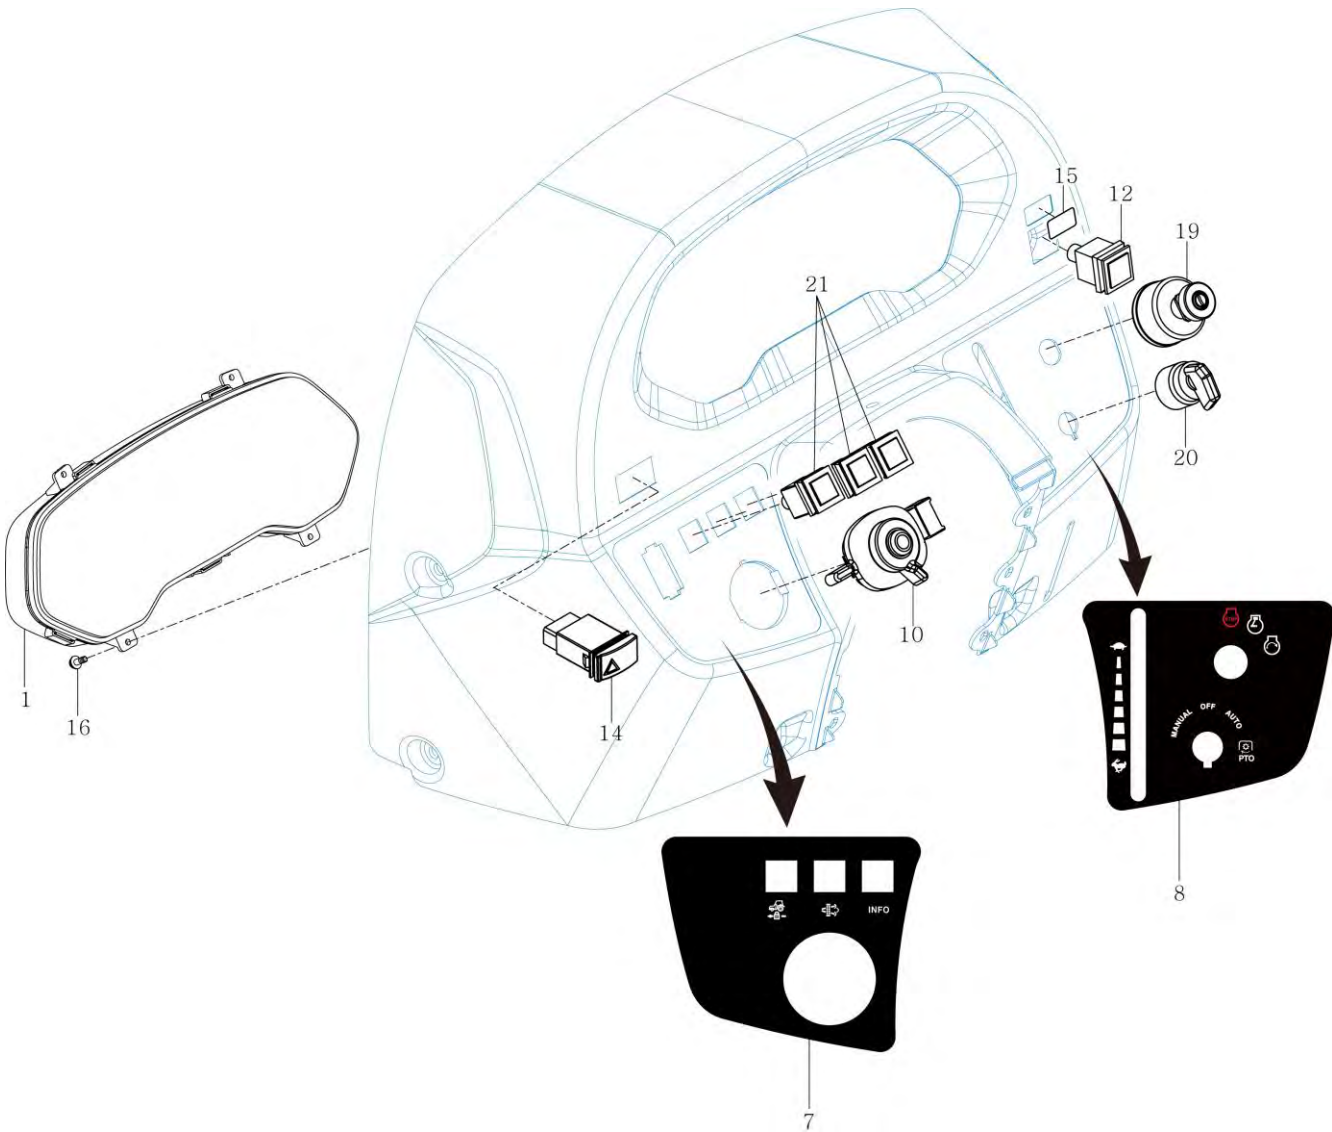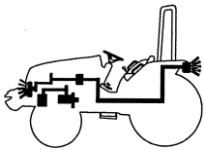

NOTE




FIG 804
T474NH

ELECTRIC SYSTEM

P1

YEAR

   2018

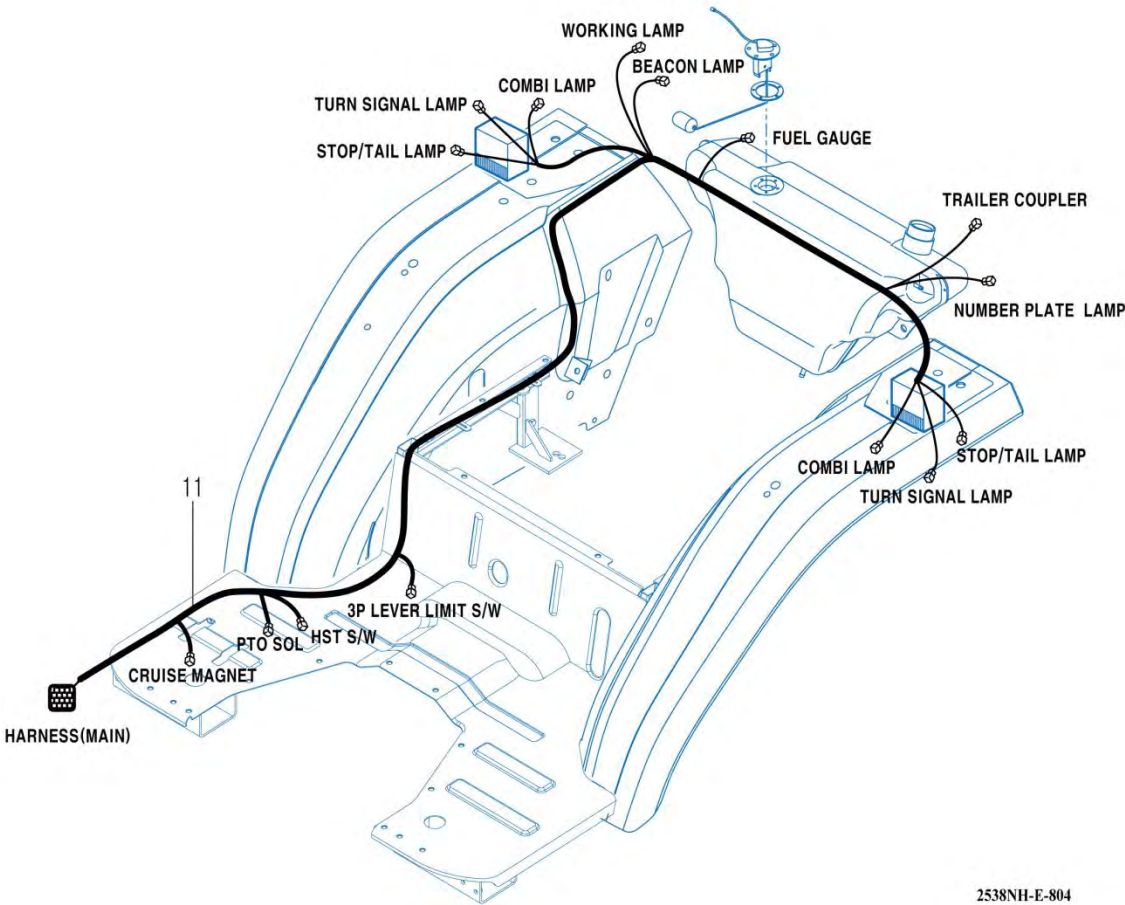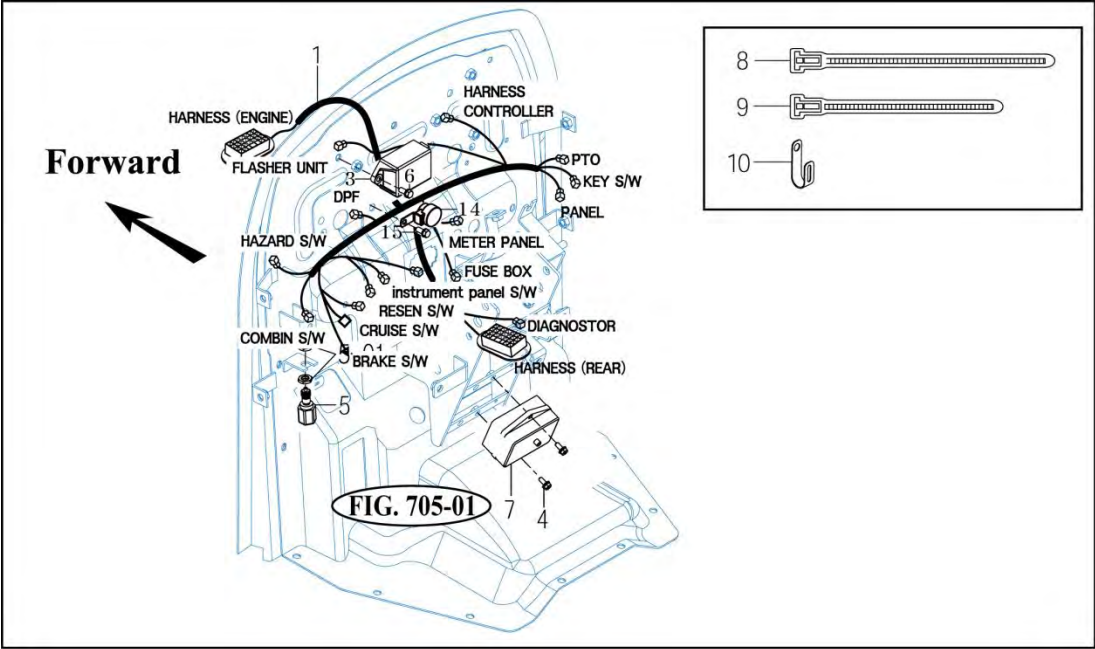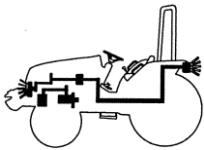

NOTE



FIG 805
T474NH

HARNESS

P1

YEAR

  2018

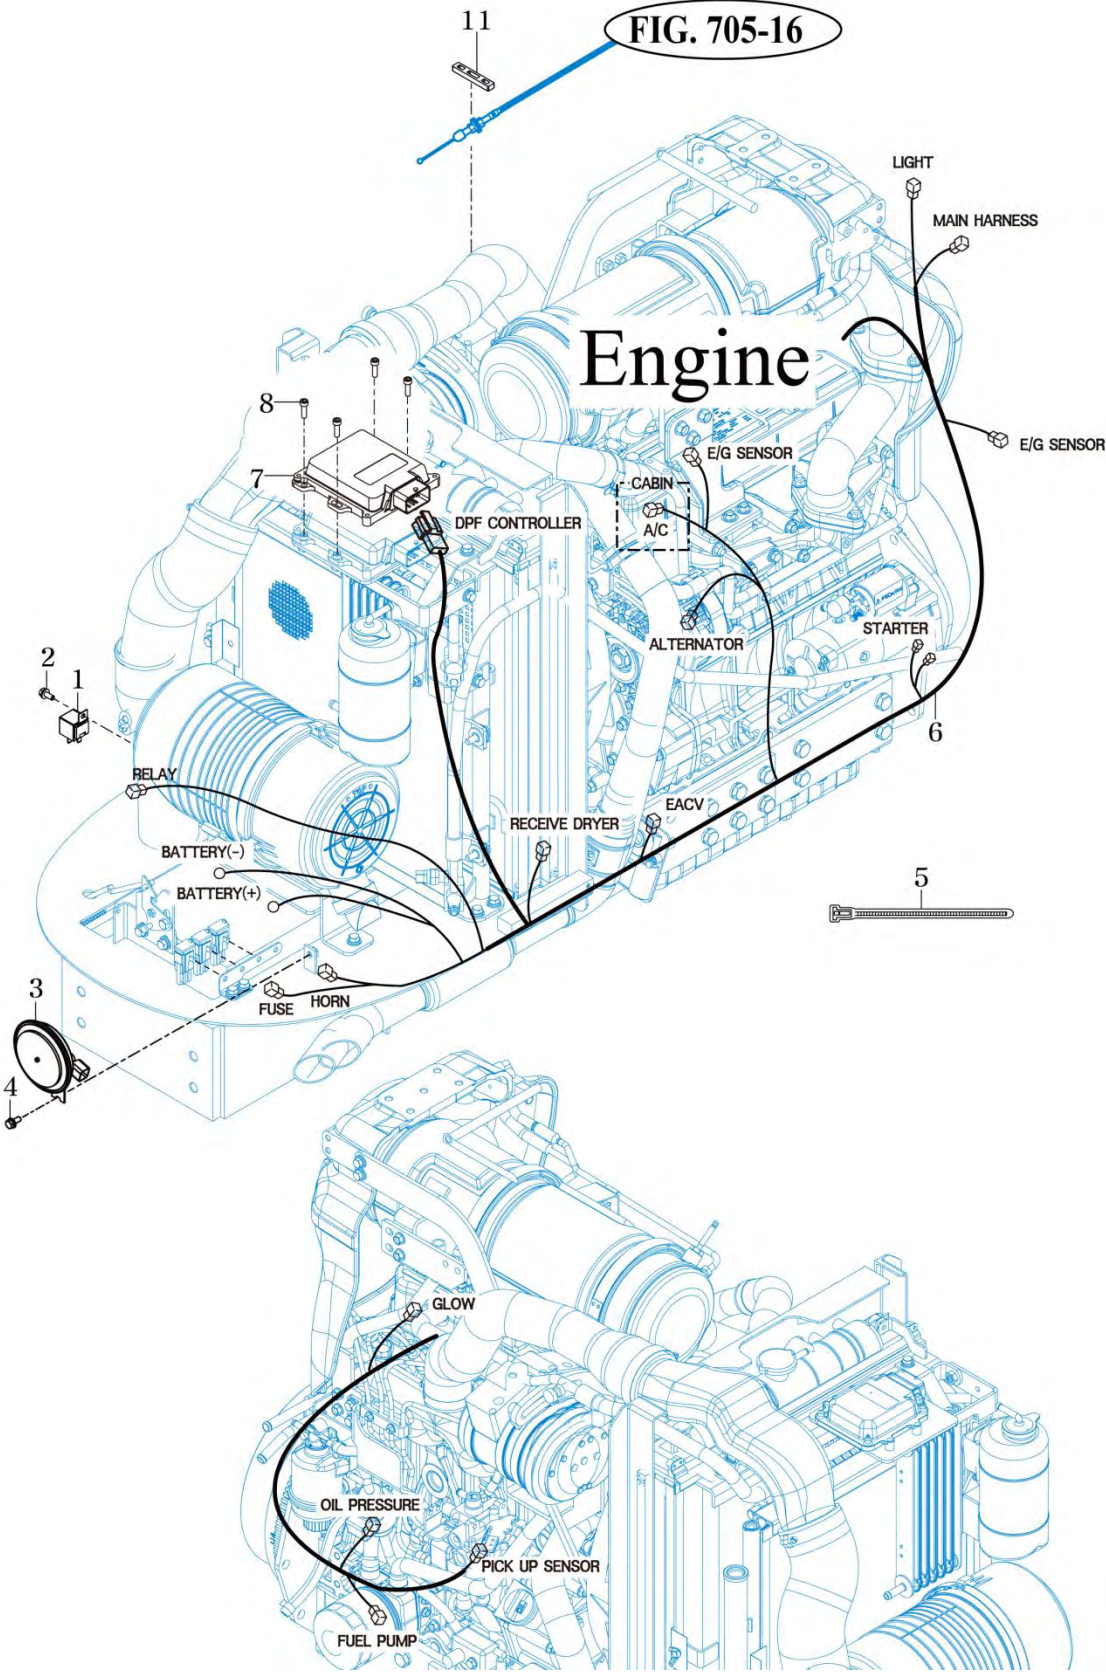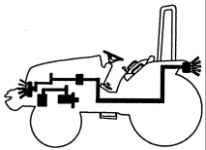

NOTE

FIG 901

 
 
T474NH

TOOL & ACCESSORY

P1

YEAR

2018

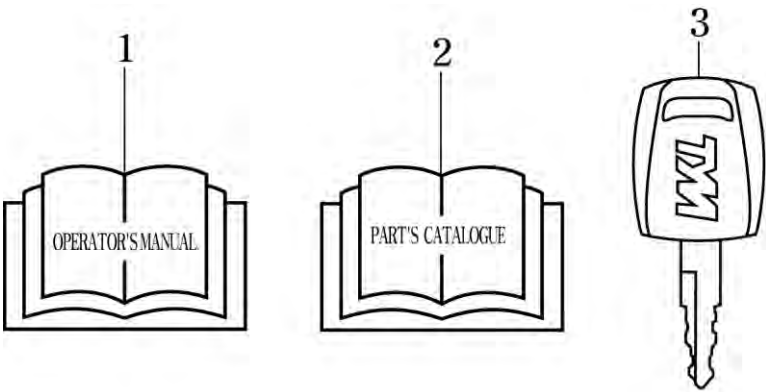

T474-U-901

NOTE


FIG 902

LABEL






P2

YEAR

 2018



T474NH

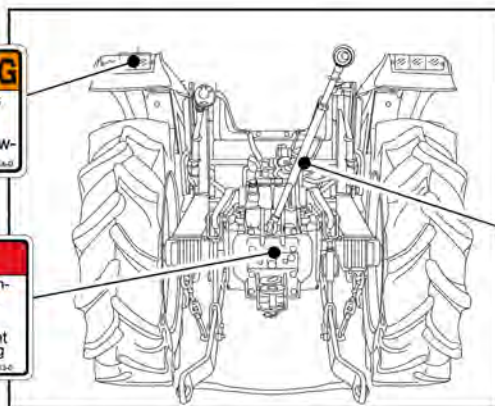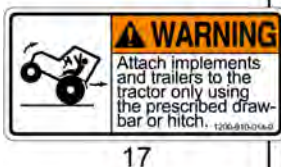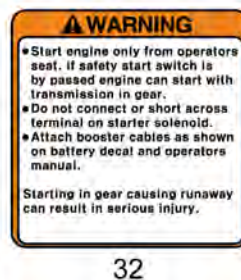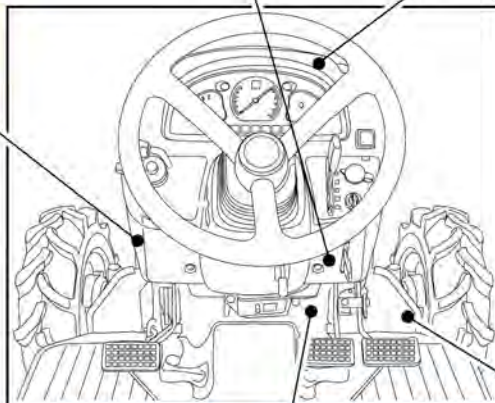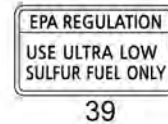     

A B 23 24



NOTE

FIG 903

 
T474NH

OPTION

P1


YEAR

2018




0A

 
— LOADER V/V 6PORT KIT —

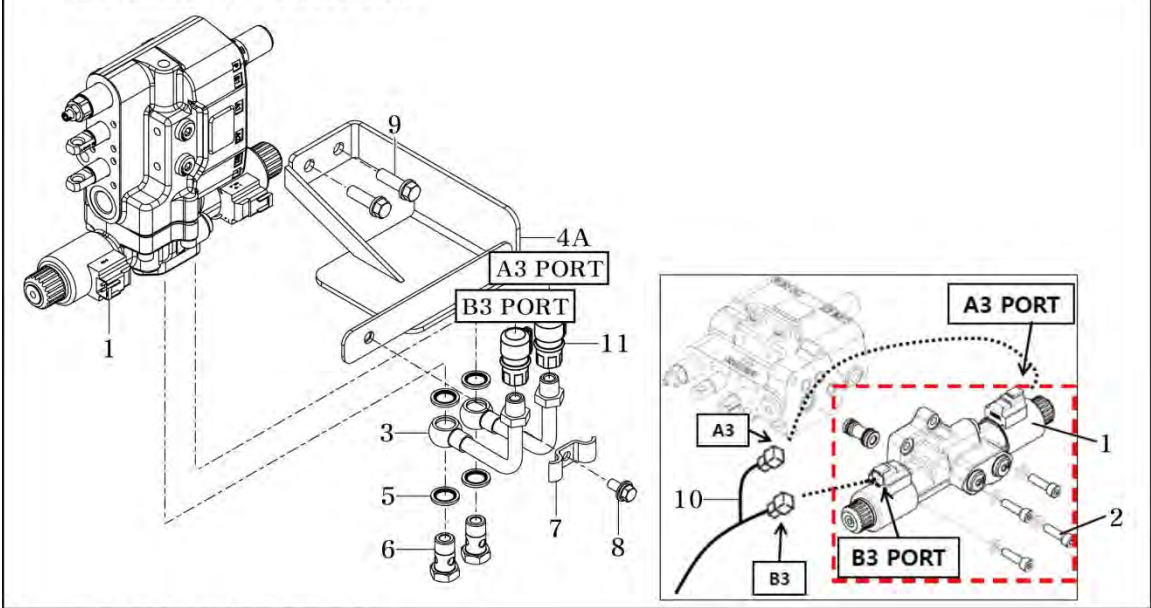

— TRAILER SOCKET KIT —

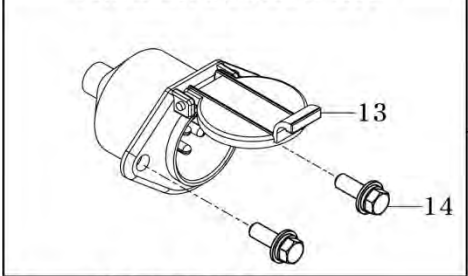 

— TOOL BOX KIT —

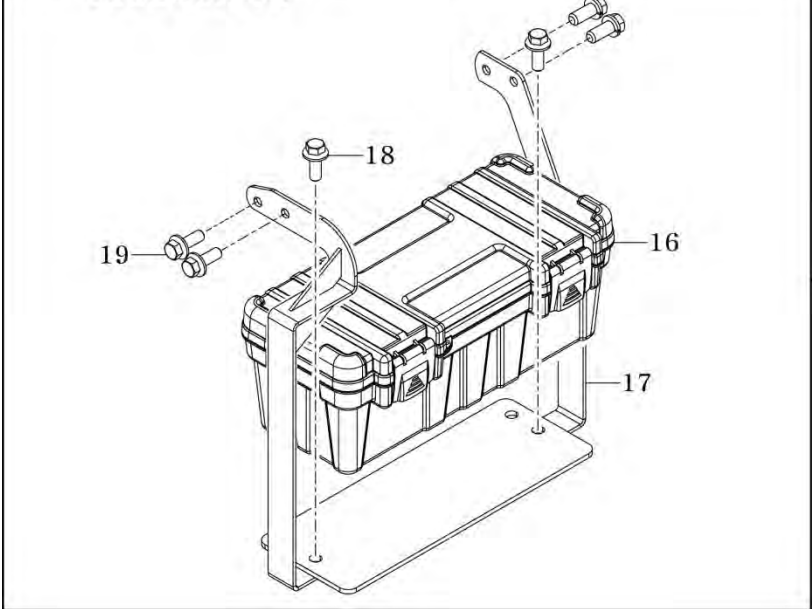 

NOTE

FIG 904

T474NH

EXTERIOR HYD. VALVE (4PORT KIT-OPTION)

P1

YEAR

2018

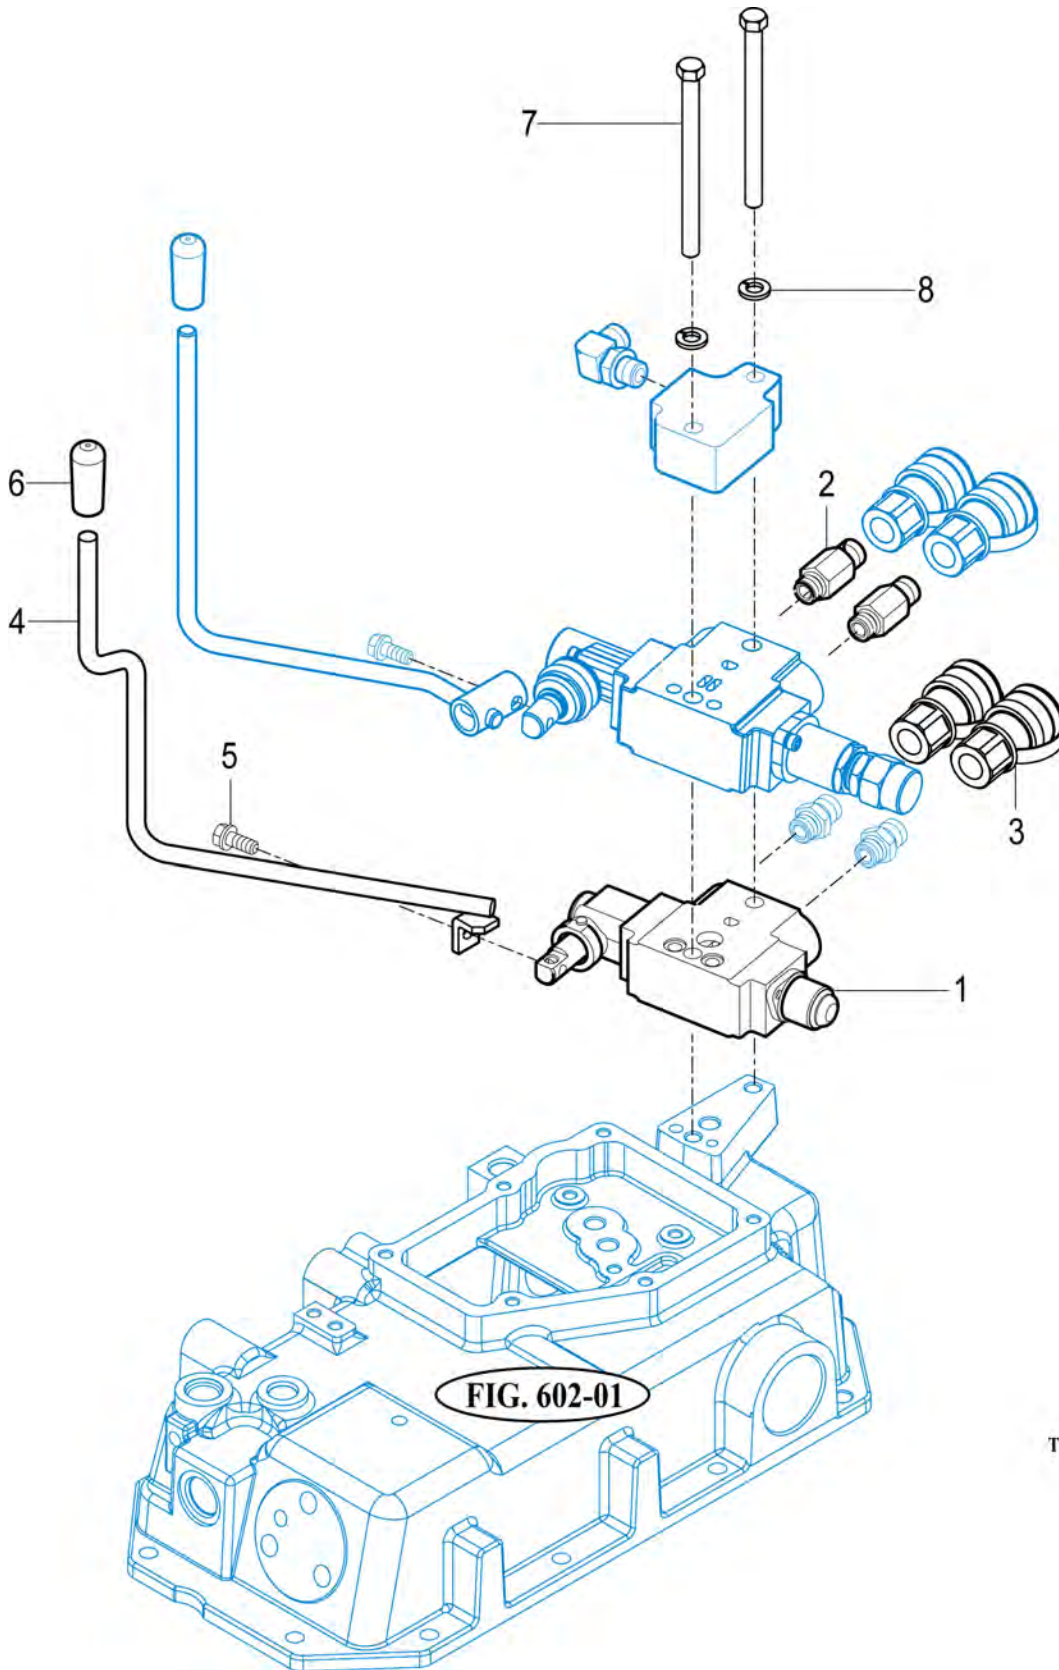 
 


FIG. 602-01

TE48-K-611

NOTE

FIG 905

 
 
T474NH

WEIGHT
(AUZ ONLY)

P1

YEAR

2018

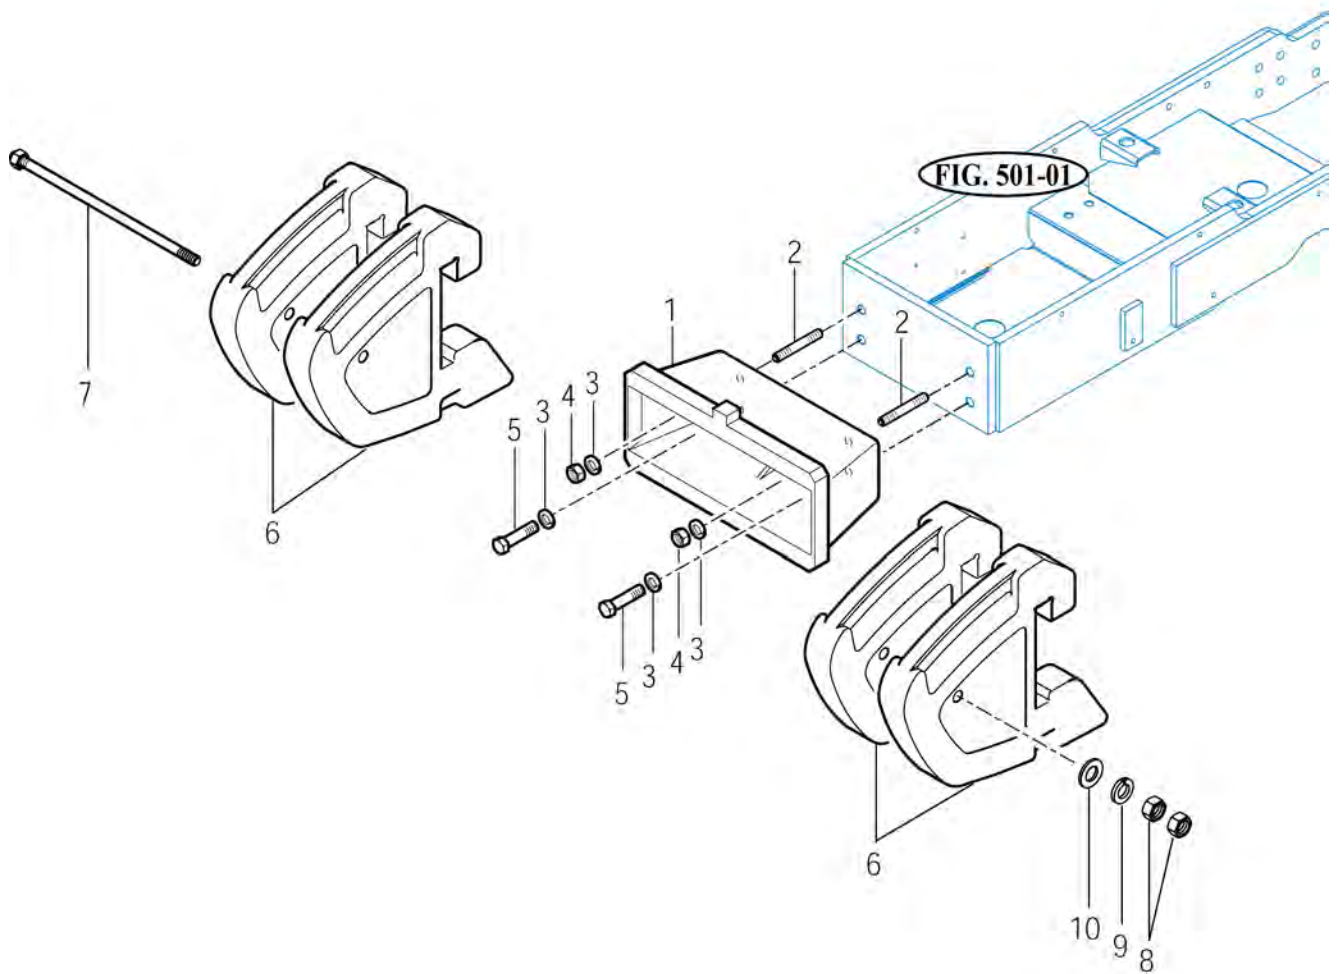

TE48-K-902

NOTE