

WARRANTY CONDITIONS

WARRANTY COVERAGE :

Daedong-USA, Inc., DAEDONG Tractor Division, herein referred to as **DAEDONG**, undertakes to replace or repair any part of a **DAEDONG** loader where damage has been proven to be caused by defects in material or workmanship.

This Warranty is valid for a period of 1 year from the date of the original retail sale. Parts replaced or repaired under the terms of this Warranty are guaranteed only until the original warranty expires. Warranty only applies to the original purchaser.

It is further understood and agreed that the defect should be immediately reported to the Selling Dealer. The Selling Dealer will generally perform Warranty repairs or replacements and the Purchaser shall deliver the **DAEDONG** loader to the Dealer's place of business for repair.

The obligation of **DAEDONG** to the Purchaser under this Warranty is limited to the repair or replacement of defective parts by an authorized **DAEDONG** dealer. Repair or replacement in accordance with this Warranty shall constitute fulfillment of all liabilities of **DAEDONG** and the Selling Dealer in respect to **DAEDONG** loader.

There are no warranties beyond those which expressly appear herein. Any implied warranty of merchantability or fitness for a particular purpose is specifically excluded here from.

WARRANTY CONDITIONS

 
WARRANTY PROVISIONS :

DAEDONG's liability under this warranty is subject to the observance by the Purchaser of the following provisions:

1. The purchaser shall at all times in the operation of any **DAEDONG** Product, use those brands and grades of lubricating oils, lubricants or fuel and spare parts officially approved by **DAEDONG**.
2. The **DAEDONG** loader shall have been used in accordance with the procedures specified in the Operator's Manual. This Warranty does not extend to damage resulting from misapplication, abuse, misuse, failure to preform maintenance, negligence, fire, accidents or changes or faulty mounting carried out by the Purchaser. When making a Warranty exchange of parts, the Purchaser shall compensate **DAEDONG** for the time that the parts have been used if they have been exposed to extreme wear.
3. Compensation is not paid for physical harm, deadlock, resulting damages or other losses.
4. To obtain warranty service, the Purchaser must (1) report the product defect to an authorized **DAEDONG** dealer and request repair within the applicable warranty term and (2) present evidence of purchase.
5. The Warranty shall be void if the **DAEDONG** loader has been altered or repaired outside of a **DAEDONG** dealership or travel of dealer personnel to customer location for Warranty repair. The customer shall also pay any premium for overtime labor requested by the dealership
6. Temporary repairs or additional costs due to the work being performed after normal working hours will not be compensated.
7. The above warranty is in lieu of all other warranties on **DAEDONG's** behalf and neither party assumes any other liability in connection with **DAEDONG's** Products.
8. Any dispute arising between **DAEDONG** and the Purchaser concerning the liability of **DAEDONG** under this warranty shall be subject to the laws of the State of North Carolina.

RIGHT TO MAKE DESIGN AND PRODUCT CHANGES:





DAEDONG reserves the right to make changes in the design and other changes in its **DAEDONG** Products at any time without incurring any obligation with respect to any product previously ordered, sold or shipped.




PLEASE NOTE

Make sure all potential operators of this equipment review this manual and all safety messages contained within.


SIGNS		DESCRIPTION
	CAUTION	This mark indicates important safety messages in this manual. When you see this symbol, carefully read the message that follows and be alert to the possibility of personal injury or death.
	WARNING	This mark indicates potentially hazardous situation which, if not observed, may result in death or moderate injury.
	IMPORTANT	This mark indicates emphasis on notable characteristics in working procedures or information on working procedures and technology for convenient use.
	NOTE	This mark indicates general comments or notes.

    




 


CONTENT I

SECTION

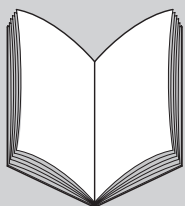


● SAFETY PRECAUTIONS	1
● SAFETY DECALS	2
● LOADER SPECIFICATIONS	3
● INTRODUCTION	4
● TRACTOR PREPARATION	5
● LOADER OPERATION	6
● LOADER REMOVAL	7
● LOADER MOUNTING	8
● LUBRICATION AND MAINTENANCE	9
● TROUBLE SHOOTING	10
● HYDRAULIC SYSTEM	11
● TORQUE TIGHTENING CHARTS	12

    








CONTENT II

SECTION

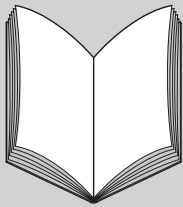

● PARTS ILLUSTRATIONS	13
ILLUSTRATIONS	13-2
BUCKET, QUICK ATTACHMENT	13-4
4IN1 BUCKET ASSEMBLY	13-6
FRONT GRILL ASSEMBLY (OPTIONAL)	13-10
MOUNTING FRAME ASSEMBLY	13-12
BOOM ASSEMBLY	13-14
BOOM HYDRAULIC ASSEMBLY	13-18
BOOM HYDRAULIC ASSEMBLY (4IN1 STD)	13-22
AUXILIARY HYDRAULIC DEVICE (OPTION)	13-28
BOOM CYLINDER ASSEMBLY-LH	13-30
BOOM CYLINDER ASSEMBLY-RH	13-32
BUCKET CYLINDER ASSEMBLY	13-34
DECALS	13-36
● LOADER INSTALLATION	14
● INDEX	15

    

 

1. SAFETY PRECAUTIONS

1

SAFETY 1-2

SAFETY PRECAUTIONS 1-2

1-2 KL701

SAFETY

Understand that your safety and the safety of other persons is measured by how you service and operate this loader. Know the position and operations of all controls before you try to operate. **Make sure you check all controls in a safe area before starting.**

Read this manual completely and thoroughly and make sure you understand all controls. All equipment has a limit. Make sure you are aware of the stability and load characteristics of this loader before you begin operation.

The safety information given in this manual does not replace any safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment required by your local laws and regulations.

CAUTION

- **This safety alert symbol indicates important safety messages in this manual. When you see this symbol, carefully read the message that follows and be alert to the possibility of personal injury or death.**

SAFETY PRECAUTIONS

Before starting the engine of your tractor, make sure all operation controls are in park lock or neutral position.

Operate controls only when seated in the operator's seat.

Equip your tractor with a ROPS cab or frame for your protection. See your tractor operator's manual for correct seat belt usage.

 
A frequent cause of personal injury or death is persons falling off and being run over. Do not permit others to ride on your tractor. Only one person, the operator, should be on the machine when it is in operation.

Before leaving the tractor, stop the engine, put all controls in neutral, engage the parking brake and remove the key from the ignition.

When using remote hydraulic tractor valves on some tractors, the loader lift and dump cylinders will continue moving unless the control levers are manually returned to neutral, or until relief pressure is reached at the ends of piston strokes. Observe the bucket movement and maintain control with the control levers.

Stop the loader arms gradually when lowering or lifting loads.

Stay off of slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".



SAFETY PRECAUTIONS 1-3

Travel speed should be such that complete control and machine stability is maintained at all times. Where possible, avoid operation near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick or muddy surfaces.

Never use your hand to check for suspected leaks under pressure. Use a piece of cardboard or wood for this purpose. Escaping hydraulic oil or diesel fuel leaking under pressure can have sufficient force to penetrate the skin and cause infection or serious injury, seek medical attention immediately.

To prevent personal injury, relieve all pressure before disconnecting fluid lines.

Before applying hydraulic pressure, make sure all hydraulic connections are tight and components are in good condition.

Contact with overhead power lines can cause severe electrical burn or death from electrocution.

Make sure there is enough clearance between raised equipment and overhead power lines.

Add recommended rear tire liquid weight or rear wheel weights for increased stability.

 
A loader attachment should be transported in a low position at slow ground speeds. Make turns slowly and use the tractor brakes cautiously. A loaded attachment in the raised position alters the center of gravity location of the machine and increases the possibility of mishaps.

Do not stand, walk or work under a raised loader or attachment unless it is securely blocked or held in position. Accidental movement of a control lever or leak in the hydraulic system could cause the loader to drop, or attachment to dump, causing severe injury.

Make sure all parked loaders on stands are on a hard level surface with all safety devices engaged to prevent loader from falling and being damaged or injuring someone.

When using a loader, be alert of bucket position at all times. Loader in raised position with bucket rolled back can dump material on tractor causing damage or injury to tractor and / or operator.

Always park loader with bucket attached to loader.



MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....



2. SAFETY DECALS

2

SAFETY DECALS.....2-2

SAFETY DECAL LOCATIONS 2-2

2-2 KL701

SAFETY DECALS

SAFETY DECAL LOCATIONS

⊕ IMPORTANT

- Warning decals 3102E-00001, located on the left hand Mid-Mount and Warning Decal 3102E-00002, 3102E-00003 located on the loader right hand Mid-Mount are visible when getting on tractor.

Care of Safety Decals.

1. Keep safety decals clean and free of obstructing material.
2. Clean safety decals with soap and water and dry with a soft cloth.
3. Replace damaged or missing safety decals with new decals from your **DAEDONG** Dealer.
4. If a component with a safety decal(s) affixed is replaced with a new part, make sure new safety decal(s) are attached in the same location(s) as the replaced components.
5. Mount new safety decals by applying on a clean dry surface and pressing air bubbles to outside edges.


(1) Part No : 3101E-00001




(2) Part No : 3101E-00156




(3) Part No : 3102E-00001

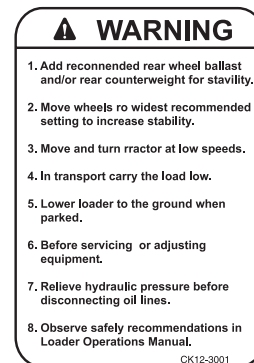


(4) Part No : 3102E-00003

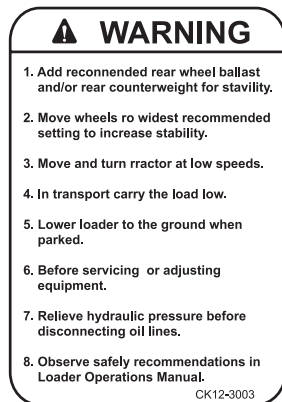

(5) Part No : 3102E-00002

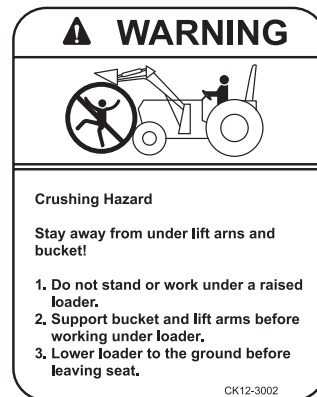

(6) Part No : 3104E-00030

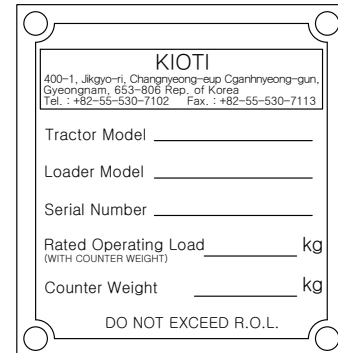

(7) Part No : 3102E-00014





MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....




3. LOADER SPECIFICATIONS

LOADER SPECIFICATIONS	3-2
-----------------------------	-----

3-2 KL701

LOADER SPECIFICATIONS

Specifications and design are subject to change without prior notice.

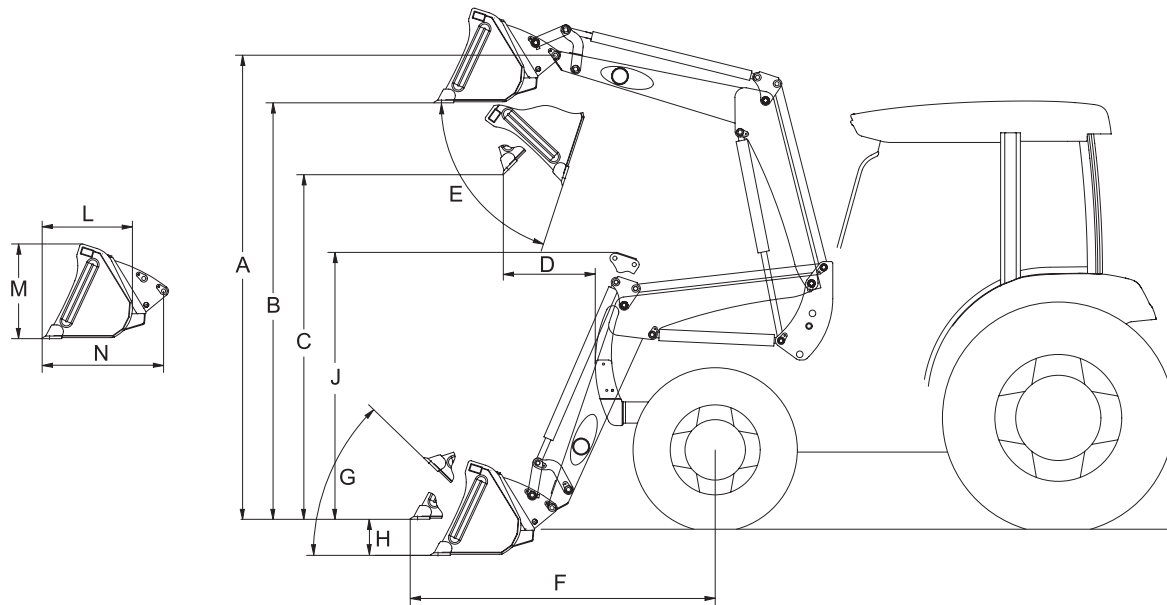


601O301A

LOADER MODEL	KL701
Tractor Model	RX7320

LOADER SPECIFICATIONS 3-3

A	Maximum Lift Height	3,400mm	133.9 in
B	Clearance with Attachment Level	3,123mm	123.0 in
C	Clearance with Attachment Dumped	2,599mm	102.3 in
D	Reach at Maximum Height 45°	519mm	20.4 in
E	Maximum Dump Angle	47°	←
F	Reach with Attachment on Ground	2,043mm	80.4 in
G	Attachment Rollback Angle	54°	←
H	Digging Depth Below Grade	166mm	6.5 in
J	Overall Height in Carry Position	1,760mm	69.3 in
L	Depth of Attachment (to back of inner shell)	592mm	23.3 in
M	Height of Attachment	581mm	22.9 in
N	Depth of Attachment (to pivot pin)	838mm	33.0 in
S	Lift Capacity to Full Height at Pivot Pins	1,535 kgf	3,384 lbs
T	Breakout Force at Pivot Pins	2,431 kgf	5,359 lbs
	Lift Cylinder	ø70mmX572mm	Ø2.8X23.2 in
	Bucket Cylinder	ø70mmX405mm	Ø2.8X15.9 in
	Bucket Width	2130mm	82 in
	Bucket Weight	194 Kg	428 lbs
	Approx. Weight (without Bucket)	666 Kg	1,468 lbs
	Bucket Capacity	0.60m³ (0.38m³)	21.2 ft³ (13.2 ft³)

 

MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....



4. INTRODUCTION

INTRODUCTION	4-2
WARRANTY REGISTRATION.....	4-2
SERIAL NUMBER AND LOCATION	4-2

4-2 KL701

INTRODUCTION

The purpose of this manual is to assist you in maintaining and operating your **DAEDONG** loader. Read it carefully, it furnishes information and instructions that will help you achieve years of dependable performance. Some information may be general in nature due to unknown and varying conditions. However, through experience and these instructions, you should be able to develop operating procedures suitable to your particular situation.

"Right" and "Left" as used throughout this manual are determined by facing the direction the machine will travel when in use.

The photos, illustrations and data used in this manual are current at the time of printing, but due to possible in-line production changes, your machine may vary slightly in detail. The manufacturer reserves the right to redesign the machine as may be necessary without notification.

⊕ IMPORTANT

- Illustrations used in this manual may not show all safety equipment that is recommended to ensure safe operation of tractor and loader. Refer to the Safety Precautions section of this manual for information concerning safety. Consult your dealer for further information.

WARRANTY REGISTRATION

 
The Delivery and Warranty Registration forms must be filled out and signed to validate your warranty protection. The items on the form under "I hereby Acknowledge" should be read and understood. The terms and conditions of the warranty on this machine are specified in the front of this manual.

SERIAL NUMBER AND LOCATION

The serial number is important information about the machine and it may be necessary to know it before obtaining the correct replacement part. The serial number is located on the right side of loader sub-frame. The serial number should be recorded on the Delivery and Registration form and also below for your reference.

DAEDONG KL701 Loader serial number information

Date purchased _____
 Loader serial number _____
 Dealer name and telephone number _____



5. TRACTOR PREPARATION

TRACTOR PREPARATION	5-2
REAR COUNTERWEIGHT	5-2
ROPS SYSTEM	5-2
TRACTOR HYDRAULIC SYSTEM	5-2
TRACTOR TIRES	5-3
TIRE INFLATION	5-3
WHEEL TREAD SETTINGS	5-3
FRONT COUNTERWEIGHT	5-3

5-2 KL701

TRACTOR PREPARATION REAR COUNTERWEIGHT

CAUTION

- **Add recommended rear tire liquid weight, rear wheel or rear ballast for increased stability.**
- **Do not exceed the manufacturer's rating for maximum gross vehicle weight.**
Refer to operator's manual or ROPS serial plate provided with tractor.

The use of adequate counterweight to counter balance for maximum loader capacity is required for safe loader operation.

Weight added to rear of the tractor provides better traction and easier, more efficient loader operation. The tractor can be counterweighted by filling rear tires with liquid calcium solution and/or by the installation of rear wheel weights.

Additional counterweight requirements will vary with loader attachments and equipment applications. Additional weight can be added by installation of Three Point Hitch mounted ballast.

CAUTION

- **Certain specific conditions may not permit safe use of loader at loader rating or may require more careful restricted operation at the rated load.**

Refer to tractor operator's manual for specific recommendations on counterweighting tractor.

ROPS SYSTEM

The tractor must be equipped with an approved ROPS system to ensure adequate operator's protection.

TRACTOR HYDRAULIC SYSTEM

Tractor operation in a loader application significantly increases demands on the tractor hydraulic system. Check the tractor hydraulic system fluid level daily. Refer to your tractor operator's manual maintenance section for instructions regarding tractor hydraulic system maintenance.

Adhere to recommendations in your tractor operator's manual concerning hydraulic fluid and filter specifications, and change intervals.

⚠ CAUTION

- **The tractor/loader must only be operated with all safety equipment properly installed.**

FRONT COUNTERWEIGHT

Use of front counterweight is not recommended when tractor is being used in a loader application. Front counterweight adds unnecessary front axle load in loader applications.

TRACTOR TIRES

Selection of tires of tires (size, profile, tread type) should be restricted to tire recommendations as specified by **DAEDONG**.

 
TIRE INFLATION

Front tires must be maintained at the maximum recommended inflation to maintain normal tire profile with the added weight of loader/material.

Rear tires must be maintained at equal pressure within the recommended tire inflation range. Unequal rear tire inflation can prevent loader attachment from contacting the ground across its full width.

WHEEL TREAD SETTINGS

Tractor front wheel tread settings must be restricted to wheel tread spacing recommended in the tractor operator's manual.



MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....



6. LOADER OPERATION

LOADER OPERATION	6-2
PRECAUTIONARY NOTES	6-2
INITIAL LOADER OPERATION	6-3
COLD WEATHER OPERATION	6-3
LOADING BUCKET	6-3
DUMPING BUCKET	6-4
TRANSPORTING A LOADED BUCKET	6-4
SCRAPING	6-5
BACKFILLING/BACKGRADING	6-5
CONTROLLED RATE OF LOADER FUNCTIONS	6-5
LOADER HYDRAULIC CONTROLS	6-5

6-2 KL701

LOADER OPERATION**⚠ CAUTION**

- **The tractor/loader should only be operated with all safety equipment properly installed.**

PRECAUTIONARY NOTES

Do not lower the edge of the bucket too low for loading. Keep the bottom of the bucket level with the ground when loading.

⊕ IMPORTANT

- **Do not use the bucket for pushing down material with bucket cylinders partially extended. Damage to the cylinders may result.**
- **Do not tip bucket cutting edge down (fully extended bucket cylinders) during backfilling/backgrading operations.**
- **Operation with front tractor wheels off the ground is not recommended.**
- **Position vehicle to be loaded as near the pile as possible and in such a direction as to minimize the amount of tractor turning required to dump.**
- **Do not lower the loader with the tractor engine shut off.**
- **Keep the unit clean and perform regular service. Observe safety messages whenever cleaning, servicing, or lubricating.**
- **Do not operate bucket cylinders without bucket, it may damage to the bucket cylinders.**

We urge you to follow this advice:

1. Read and understand this manual as well as the Tractor Operator's Manual.
2. Remember and observe the Safety Precautions brought to your attention in this manual, the tractor manual and on the machinery itself.
3. Use good common sense in the everyday operation of this unit. Safety recommendations can never be all-inclusive and you are responsible for watching out for and avoiding unsafe conditions.
4. Never exceed the limits of a piece of machinery. If its ability to do a job or to do so safely is in question, don't try it.
5. Don't hurry the learning process or take the unit for granted. Ease into it and become familiar with your new loader and tractor.

⚠ CAUTION

- **When lowering a heavy load, ease it downward slowly. Never drop a loaded attachment and "catch it hydraulically". Stopping a load after it has gained downward momentum places undue strain on the unit and may cause unnecessary damage to the loader or tractor or even worse, personal injury.**

⚠ CAUTION

- **Before disconnecting hydraulic lines, relieve all hydraulic pressure. Escaping hydraulic oil under pressure can have sufficient force to penetrate the skin causing serious personal injury. If injured by escaping hydraulic oil seek medical attention immediately.**
- **Do not operate the loader if the fittings are leaking or if the hoses are damaged. A sudden line burst would cause the mainframe to drop suddenly, causing damage to the tractor or loader or injury to personnel.**

INITIAL LOADER OPERATION

Before operating the loader, fully raise and lower the boom two or three times. Then raise the bucket approximately 4 feet above the ground and cycle the bucket cylinders three times. Lower the bucket to the ground. Check the tractor hydraulic oil and the correct oil level.

⚠ CAUTION

- **Before leaving the machine, stop the engine, remove the key, place all controls in neutral, and either set the parking brake or place tractor in park as equipped.**

Always keep cylinders in a retracted position when the loader is not in use to guard against rust and contamination which may cause damage to the cylinder rods or hydraulic system.

COLD WEATHER OPERATION

For smooth operation in cold weather, let the tractor warm up. Slowly cycle the lift and bucket cylinders several times to warm the oil in the hydraulic system. The loader may operate erratically until the hydraulic oil has warmed to operating temperatures.

⚠ CAUTION

- **Operate controls only when seated in the operator's seat.**

LOADING BUCKET

For the most efficient loading, slowly drive the tractor straight into the material to be loaded and increase speed only after contact has been made. Roll the attachment back a small amount and slowly lift to break away the material. As the load increases, continue rolling the attachment back so as to get the maximum load. Remove the top levels first when loading from large piles of material. When bucket is full, raise loader so the bucket is clear of material and slowly back out of the pile.

6-4 KL701

DUMPING BUCKET

When in the dump area slowly drive the tractor forward and raise the loader at the same time. Raise the loader to the height needed to dump the bucket. Make sure to keep a level bucket position to prevent spilling from the bucket. Make sure to keep a level bucket position to prevent spilling from the bucket. Dump the bucket, and keep all movements smooth.

TRANSPORTING A LOADED BUCKET

Transport material with the bucket as low as possible to prevent spilling and keep maximum stability. The loader must be in a position that will not block the operator's vision. A loaded bucket must not be transported in the upright position or at excessive speed.

Observe the following safety warnings when transporting a loaded bucket.

CAUTION

- When using a loader, be aware of bucket location at all times. When raising a loader with bucket rolled back, material can dump onto tractor causing damage to tractor or injury to operator.
- Stop the loader arms gradually when lowering or lifting. Do not stand, walk or work under a raised loader unless it is securely blocked or held in position.
- Accidental movement of a control lever or leak in the hydraulic system could cause the loader to drop, or attachment to dump, resulting in serious injury or death.

WARNING

- Contact with overhead power lines can cause severe electrical burns or death from electrocution. Make sure there is clearance between raised equipment and overhead power lines.
- A loaded Bucket should be transported in a low position at low ground speeds. Make turns slowly and use the tractor brakes cautiously. A full bucket in the raised position alters the center of gravity location of the machine and increases the possibility of accidents.

SCRAPING


When scraping, the float position must be used to keep the bucket on the ground and at the same time let the bucket follow ground contours. The bucket must be kept level to the ground during scraping operations.

BACKFILLING/BACKGRADING

When "Backfilling" or "Backgrading", position the bucket so it is level on the ground. Do not dump material from bucket following each pass, as additional weight of material in bucket will assist in "Backgrading" and increases loader efficiency during "Backfilling".


CONTROLLED RATE OF LOADER FUNCTIONS

By "feathering" the control lever, reduced operational speeds can be controlled. This action controls the position of the valve spool in the valve body and regulates flow of oil to/from cylinders. It is important to utilize this operational practice when lowering loader boom when the bucket is loaded with material.

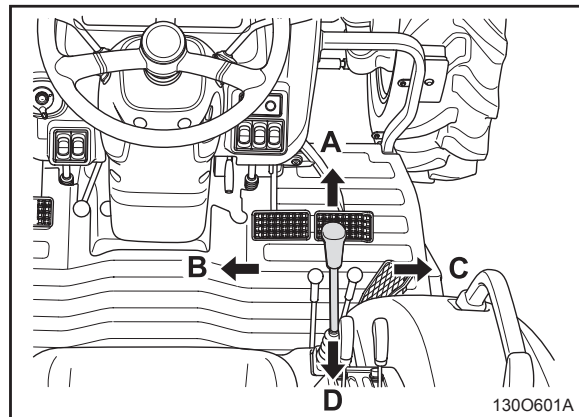LOADER HYDRAULIC CONTROLS

(A) Forward-Float Low
(C) Right-Bucket Dump

(B) Left-Bucket Retract
(D) Rear-Raise

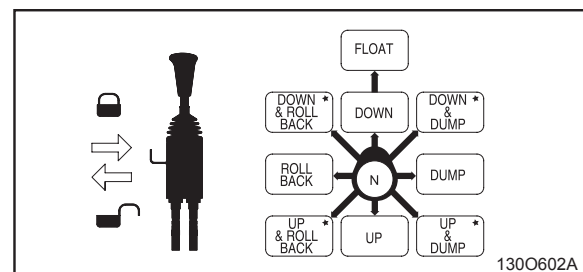

6-6 KL701

The Single lever joystick control lever is mounts on the RX7320 From the factory.

The control lever has the safety lock function.

Lock the control lever when leaving the tractor while the Bucket is in the air.

The loader hydraulic valve lift Cylinder circuit incorporates a "float" position which allows the loader bucket to follow ground contours. The "float" position is engaged by shifting the control lever forward into "detent" until the operator pulls the control lever out of the "Detent" position.

 
Refer to "Scraping" operation for recommended use of "float" position.

The control valve has a neutral position that prevents movement of loader or bucket.

When the control valve is released from the work position, the spool will return to neutral.

⊕ IMPORTANT

- **Contaminates in hydraulic oil can cause valve spools to stick. Be alert when operating loader and follow your Tractor Operator's Manual maintenance schedule.**



7. LOADER REMOVAL


LOADER REMOVAL.....	7-2
---------------------	-----

7-2 KL701

LOADER REMOVAL

CAUTION

- Never park loader without bucket attached to the loader.
- Never allow weight of tractor to be put on parking leg when removing loader.

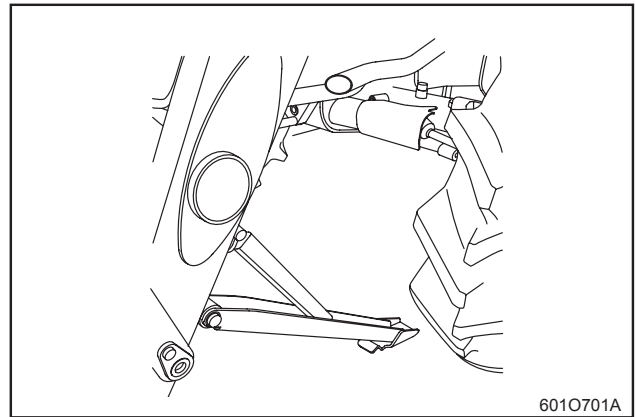

STEP 1.

Park the tractor and loader on hard level surface.

STEP 2.


Raise the boom until the bucket is about 2 feet off the ground.

STEP 3.

Set the parking legs with pivot pin and Keeper.

STEP 4.


Lower the boom until the Parking legs make contact on the ground. Tip the bucket until the bucket cutting edge touch the ground.

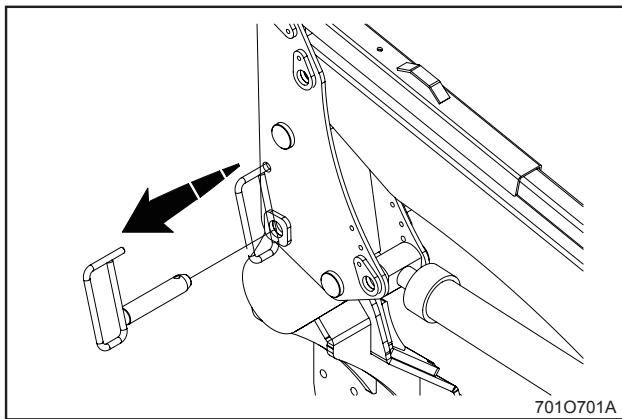

(1) Latch Pin

STEP 5.

Remove the latch pin while move the control lever back and forth slightly to make the latch pin easy.

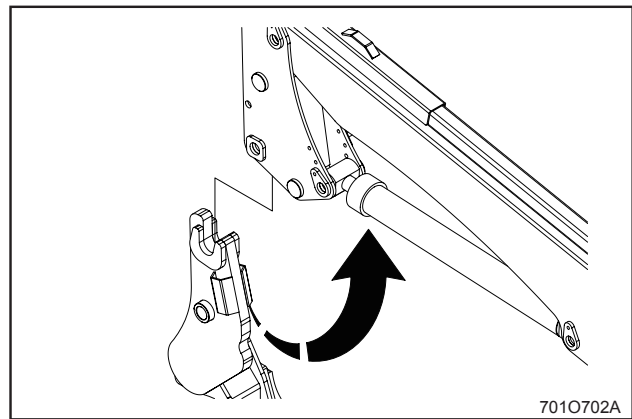

STEP 6.

Pull the control lever to raise the loader until the loader break way from the mounting frame. bearing box. Adjust the bucket until the bottom surface of bucket touch the ground.

STEP 7.

Move the tractor backword slowly and stop to avoid the hydraulic hoses being tighten.


STEP 8.

 
Stop the engine and move the control lever back and forth, left and right several times to reduce the hydraulic pressure in the hoses.

7-4 KL701

STEP 9.

Disconnect the quick couplers on the hydraulic hoses.

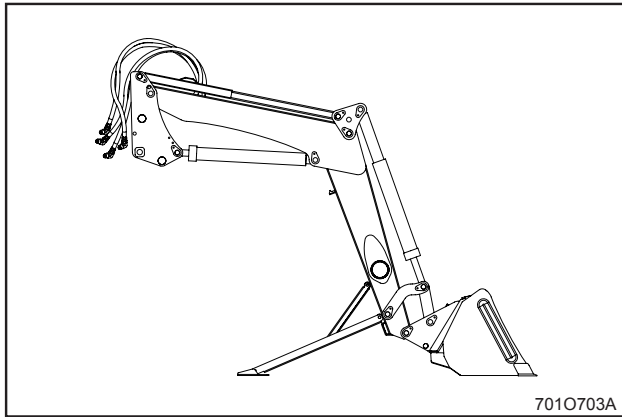



8. LOADER MOUNTING


LOADER MOUNTING.....	8-2
----------------------	-----

8-2 KL701

LOADER MOUNTING

CAUTION

- Never allow weight of tractor to be put on parking leg when mounting loader.

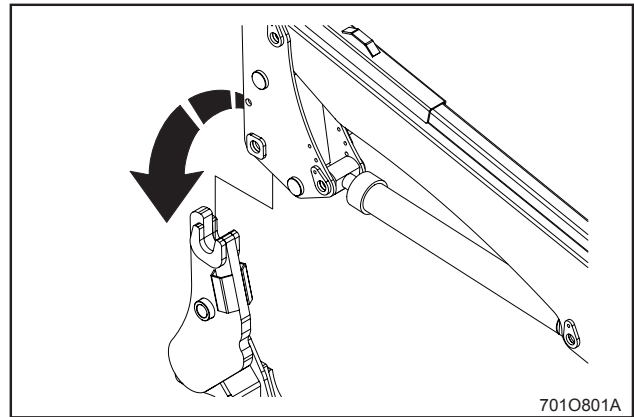

STEP 1.

Carefully drive the tractor into the loader to a position where the hydraulic hoses(Quick coupler) can be connected to the control valve block.

STEP 2.


Stop the engine and move the control lever back and forth, left and right several times to reduce the pressure in the hydraulic hoses.

Connect the hydraulic couplers match the color code rings.

STEP 3.

Start the engine and move the boom and bucket to adjust the height of loader.

Be sure to check the hook of mounting frame is slightly higher than the pin welded on loader post.

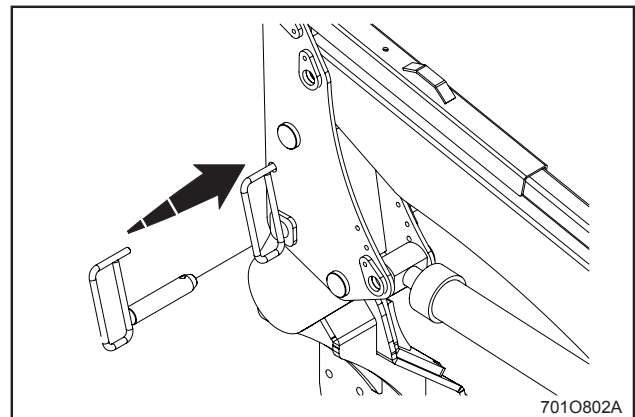

(1) Latch Pin

STEP 4.

 
Move the tractor forward to put the mounting frame into the loader post. Stop the tractor when the hook is right over the pin.

Lower the loader post with moving the boom and bucket until it hooked securely each other.

STEP 5.

Align the latch pin holes with moving the bucket and boom. Insert the latch pins.


Rubber hammer can be used to put the pin in if needed.



8-4 KL701

STEP 6.

 Remove pin and keeper holding the parking legs and return to storage position. Make secure by using pin and keeper.



9. LUBRICATION AND MAINTENANCE

LUBRICATION AND MAINTENANCE.....	9-2
----------------------------------	-----

9-2 KL701

LUBRICATION AND MAINTENANCE**⚠ CAUTION**

- Do not perform any service or maintenance Operations with loader raised off the ground. For additional access to tractor components remove loader.

⊕ IMPORTANT

- Lower the loader to the ground and relieve pressure in loader hydraulic lines prior to performing any service or maintenance operations on the tractor or loader.

⚠ CAUTION

- Escaping fluid under pressure can have sufficient force to penetrate the skin, causing serious injury. Before disconnecting lines, be sure to relieve all pressure. Before applying pressure to the system, be sure all connections are tight and that lines, pipes and hoses are not damaged.
Fluid escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood rather than your hands to search for suspected leaks. If injured by escaping fluid, seek medical attention immediately. Serious infection or reaction can develop if correct medical treatment is not administered immediately.

Refer to "Lubrication and Maintenance Chart" for quick reference to Maintenance Operations.

⚠ WARNING


- Do not operate the loader if the fittings are leaking or if the hoses are damaged. A sudden line burst could cause the mainframe to drop suddenly, causing damage to the tractor or loader or injury to personnel.
- Operate the loader from the tractor seat only.
- Do not stand or walk under a raised loader. Accidental movement of control lever or leak in hydraulic system could cause mainframe to drop, causing severe injury.

Check the tractor hydraulic system as outlined in the Tractor Operator's Manual.


NOTE

- When checking hydraulic system oil level, the loader should be on the flat land and bucket fully retracted (all cylinders in retracted position)
- Grease all loader pivot points daily (10 hours). Refer to Tractor Operator's Manual for lubricant recommendations.
- Inspect hydraulic hoses, connections, control valve and cylinders for evidence of leakage.
- Tractor tires should be maintained at maximum recommended inflation to maintain normal tire profile with added weight of loader/material. Unequal rear tire inflation can result in bucket not being level to the ground.

LUBRICATION AND MAINTENANCE 9-3

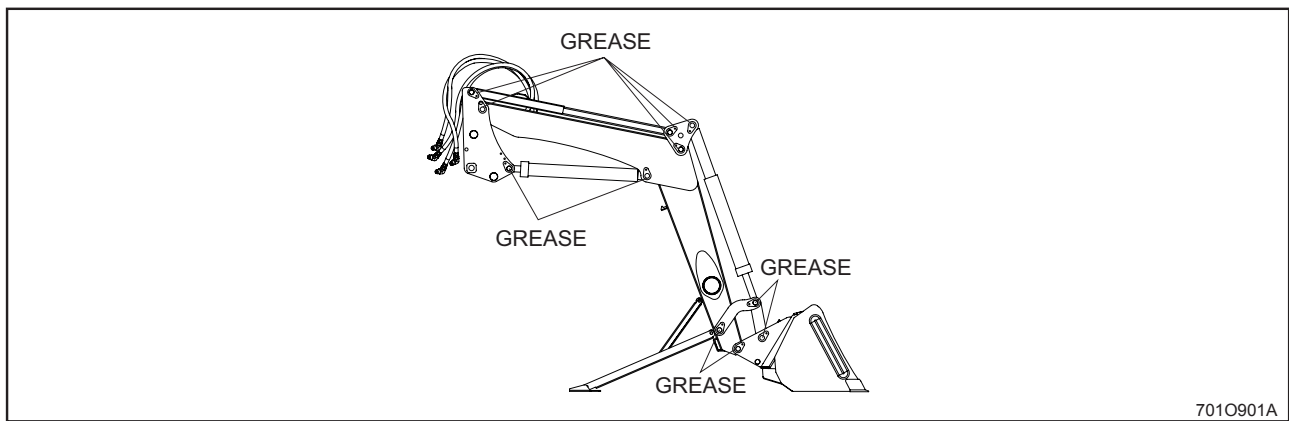

ITEM	SERVICE	SERVICE INTERVAL
Hydraulic System Oil Level	Check	Daily/10 hours
Hydraulic System Oil /Filter	Replace	As specified in Tractor Operator's Manual
Tire Inflation	Check	Weekly/50 hours
Loader Pivot Points	Lubricate	Daily/10 hours
Loader Hydraulic Lines, Hoses, Connections	Check for leaks, wear	Daily/10 hours
Lift and Bucket cylinder rod packing	Check for seepage, service as needed	Daily/10 hours
Pivot pin bolts and dust covers	Check, replace if missing	Daily/10 hours
lynch pins	Check, replace if necessary	Daily/10 hours
Loader mount hardware	Check visually	Daily/10 hours
Loader mount hardware	Re-torque	Every 25 hours

 

MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....



10. TROUBLE SHOOTING

TROUBLE SHOOTING	10-2
------------------------	------

10-2 KL701

TROUBLE SHOOTING

This Trouble shooting Chart is provided for reference for possible loader operational problems. Determine the problem that best describes the operational problem being experienced and eliminate the possible causes as listed by following the correction procedures. For further assistance contact your dealer.

PROBLEM	POSSIBLE CAUSE	CORRECTION
1. Lift and Bucket cylinders inoperative.	• Low hydraulic fluid level.	• Check and replenish hydraulic fluid.
	• Hydraulic hoses connected improperly.	• Check and correct hydraulic hose connections.
	• Hydraulic hoses to/from control valve blocked.	• Check for damaged (kinked) hoses, etc.
	• Loader control valve or tractor main relief valve stuck open.	• Check system pressure. Repair or replace relief valve.
	• Low system pressure supplied from hydraulic pump.	• Check system pressure. Repair or replace pump.
	• Control valve linkage broken.	• Inspect. Repair as required.
	• Quick disconnect coupler(s) are not fully connected or "Flow check".	• Check coupler connections. Replace coupler(s) if necessary.
	• Hydraulic hose or tubeline blockage.	• Check for evidence of damage to hoses or tubelines that would block flow of oil between cylinders and control valve.
	• Cylinder piston assembly defective (not sealing).	• Check cylinders for internal leakage as described in service section under cylinder leakage tests.
	• Control valve blockage.	• Inspect for blockage. Disassemble valve if necessary.

PROBLEM	POSSIBLE CAUSE	CORRECTION
2. Lift and/or bucket cylinders operate in wrong direction relative to control valve lever position.	Hydraulic hoses connected incorrectly.	Correct hydraulic hose connections.
3. Slow or erratic lift	Low hydraulic fluid level.	Check and replenish hydraulic fluid.
	Cold hydraulic fluid.	Allow hydraulic system to warm up to operating temperature.
	Engine R.P.M. too slow (hydraulic pump R.P.M. too slow).	Increase engine speed to obtain satisfactory loader operation.
	Excessive weight in bucket. Material weight exceeds maximum specified loader capacity.	Reduce material load.
	Control valve linkage binding/defective.	Check control valve linkage and repair if worn/defective.
	Aeration of hydraulic fluid	Refer to "Aeration of Hydraulic Fluid."
	Quick disconnect coupler restriction or coupler "Flow Checks"	Check coupler connections. Repair or replace.
	Hydraulic hose or tube-line restriction (hoses/tube-line kinked or pinched.)	Check hoses and tube-lines for evidence of restriction.
	Lift cylinder piston assembly leakage.	Check cylinders for leakage. Repair as needed.
	Relief valve erratic or set below specifications.	Check and reset relief valve setting as needed.


10-4 KL701

PROBLEM	POSSIBLE CAUSE	CORRECTION
3. Slow or erratic lift	• Control valve leaking internally. (Bypassing fluid within valve.)	• Replace control valve and recheck operation.
	• Inadequate hydraulic pump capacity.	• Refer to "Hydraulic Pump Capacity Inadequate."
4. Inadequate lifting capacity	• Engine R.P.M. too slow.	• Increase engine R.P.M.
	• Excessive load-material weight exceeds specified loader capacity.	• Reduce Load
	• Relief valve setting below specifications.	• Check and reset relief valve setting as needed.
	• Lift cylinder piston assembly leakage.	• Check cylinders for leakage. Repair as needed.
	• Control valve leaking internally.	• Replace control valve and recheck operation.
	• Hydraulic pump defective.	• Refer to "Hydraulic Pump Capacity Inadequate."
5. Aeration of Hydraulic Fluid (generally indicated by foamy appearance of fluid).	• Low hydraulic fluid level.	• Check and refill hydraulic system to proper level.
	• Air leaking into suction side of hydraulic pump.	• Check for loose or defective connections between reservoir and hydraulic pump.
	• Hydraulic fluid foaming due to improper hydraulic oil usage.	• Refer to Tractor Operator's Manual and replace hydraulic oil using recommended hydraulic oil.

PROBLEM	POSSIBLE CAUSE	CORRECTION
6. System relief valve squeals.	• Cold hydraulic fluid.	• Allow hydraulic fluid to warm up to operating temperature.
	• Excessive load in bucket. Weight exceeds specified loader capacity.	• Reduce load.
	• Relief valve setting below specifications.	• Check and reset valve setting as needed.
	• Hydraulic hose, tube line or quick disconnect coupler restriction.	• Check for evidence of restriction in hydraulic oil flow. Repair or replace defective components.
7. Loader drops with control valve spool in "Centered" position (no external oil leakage evident.) Note : A gradual drop over an extended period of time is a normal condition.	• Cylinder piston assembly leakage.	• Check cylinders for leakage.
	• Control valve internal leakage.	• Replace control valve and recheck.
8. Control valve spool(s) will not return to centered position.	• Control lever linkage binding.	• Determine origin of binding and repair.
	• Control valve spool centering is broken.	• Replace centering spring.
	• Control valve spool binding in valve body spool bore.	• Disassemble valve for inspection and repair.
9. External hydraulic fluid leakage.	• Loose hydraulic connection.	• Tighten loose connections.
	• Defective hydraulic hose, tube line adapter fitting & fitting O-ring.	• Check for origin of oil leak and replace defective parts.

10-6 KL701

PROBLEM	POSSIBLE CAUSE	CORRECTION
9. External hydraulic fluid leakage.	• Control valve O-rings defective.	• Replace defective O-rings.
	• Control valve spool or body damaged or worn.	• Replace control valve.
	• Cylinder rod packing set leakage.	• Check cylinders for leakage. Repair as needed.
10. Hydraulic pump capacity inadequate.	• Cold hydraulic fluid.	• Allow hydraulic fluid to warm up to operating temperature.
	• Engine R.P.M. too slow.	• Increase engine R.P.M.
	• Low hydraulic fluid supply.	• Refer to Tractor Operator's Manual for service recommendations.
	• Hydraulic hose restriction.	• Check for evidence of restriction in hydraulic hoses.
	• Hydraulic pump defective.	• Refer to Tractor Operator's manual for recommended service procedures. Replace hydraulic pump if determined to be defective.
11. Lift cylinder rod bend when lift cylinders extended.	• Excessive shock load on lift cylinders during transport.	• Replace defective parts. Review and observe proper and safe operational practices.
12. Bucket cutting edge wear is uneven side to side.	• Bucket is not level to ground.	• Check rear tire inflation and adjust to level bucket to ground.
13. Bucket cutting edge wear rate is excessive. (Wear rate is even across full width of bucket). Note : Extensive use of bucket on concrete or asphalt surfaces will accelerate wear rate of bucket cutting edge.	• Incorrect operational practices. Excessive down pressure placed on bucket when being used on hard abrasive surfaces.	• Refer to operation-scraping section for correct operating procedures. Utilize float position.
	• Bucket wear pads worn.	• Replace wear pads.

 


11. HYDRAULIC SYSTEM


HYDRAULIC SYSTEM SCHEMATIC 11-2

AUXILIARY HYDRAULIC VALVE PACKAGE 11-2

11-2 KL701

 HYDRAULIC SYSTEM SCHEMATIC AUXILIARY HYDRAULIC VALVE PACKAGE

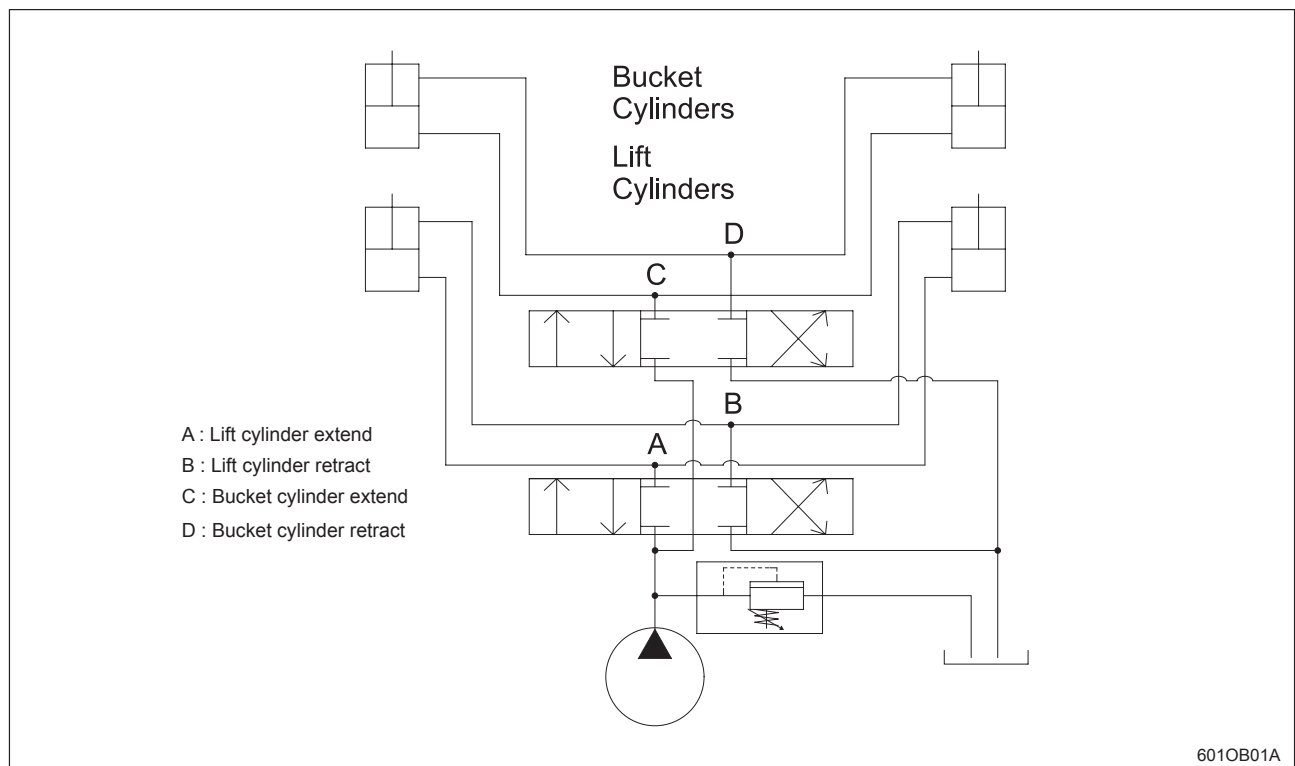



12. TORQUE TIGHTENING CHARTS

TORQUE TIGHTENING CHART 1 12-2

TORQUE TIGHTENING CHART 2 12-3


12-2 KL701

TORQUE TIGHTENING CHART 1

SAE FASTENER TORQUE CHART												
Note : Use these torques, unless special torques are specified. Values are for UNC and UNF thread fasteners, plated or unplated as received from supplier. Fasteners can be dry or lubricated with normal engine oil. Values do not apply if graphite, moly-disulphide or other extreme pressure lubricant is used.												
SAE Grade	2				5				8*			
Bolt head identification (See note 1)					  				  			
Bolt Size	LB FT				LB FT				LB FT			
	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
1/4	5	6	7	8	9	11	12	15	12	15	16	20
5/16	10	12	14	16	17	20.5	23	28	24	29	33	39
3/8	20	23	27	31	35	42	48	57	45	54	61	73
7/16	30	35	41	47	54	64	73	87	70	84	95	114
1/2	45	52	61	70	80	96	109	130	110	132	149	179
9/16	65	75	88	102	110	132	149	179	160	192	217	260
5/8	95	105	129	142	150	180	203	244	220	264	298	358
3/4	150	185	203	251	270	324	366	439	380	456	515	618
7/8	160	200	217	271	400	480	542	651	600	720	814	976
1	250	300	339	406	580	696	787	944	900	1080	1220	1464
1 1/8					800	880	1085	1193	1280	1440	1736	1953
1 1/4					1120	1240	1519	1681	1820	2000	2468	2712
1 3/8					1460	1680	1980	2278	2380	2720	3227	3688
1 1/2					1940	2200	2631	2983	3160	3560	4285	4827
Note : Bolt head identification marks as per grade. Manufacturing marks will vary. * Thick nuts must be used with Grade 8 bolts.												

TORQUE TIGHTENING CHART 2

METRIC FASTENER (ISO) TORQUE CHART												
Note : Use these torques, unless special torques are specified. Values are for UNC and UNF thread fasteners, plated or unplated as received from supplier. Fasteners can be dry or lubricated with normal engine oil. Values do not apply if graphite, moly-disulphide or other extreme pressure lubricant is used.												
ISO Class No.	8.8				10.9				12.9			
Bolt head identification (See note 1)												
Bolt Size	Nm		LB FT		Nm		LB FT		Nm		LB FT	
	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
M4	3	4	2	3	4	5	3	4	Because of the low ductility of these fasteners, the torque range is to be determined individually for each application. As a general rule, the torque ranges specified for grade 10.9 fasteners can be used satisfactorily on 12.9 fasteners. * M14 is not a preferred size.			
M5	6.5	8	5	6	9.5	11	7	8				
M6	10.5	12	8	9	15	17.5	11	13				
M8	26	31	19	23	37	43	27	32				
M10	52	61	38	45	73	87	54	64				
M12	90	107	66	79	125	150	93	112				
*M14	144	172	106	127	200	245	149	179				
M16	217	271	160	200	310	380	230	280				
M20	434	515	320	380	610	730	450	540				
M24	675	815	500	600	1050	1275	780	940				
M30	1250	1500	920	1100	2000	2400	1470	1770				
M36	2175	2600	1600	1950	1120	1240	1519					
Note : Bolt head identification marks as per grade. Manufacturing marks will vary.												

 

MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....



13. PART ILLUSTRATIONS

13

GENERAL INFORMATION 13-2

ILLUSTRATIONS	13-2
BUCKET, QUICK ATTACHMENT	13-4
4IN1 BUCKET ASSEMBLY	13-6
FRONT GRILL ASSEMBLY (OPTIONAL).....	13-10
MOUNTING FRAME ASSEMBLY	13-12
BOOM ASSEMBLY	13-14
BOOM HYDRAULIC ASSEMBLY	13-18
BOOM HYDRAULIC ASSEMBLY (4IN1 STD).....	13-22
AUXILIARY HYDRAULIC DEVICE (OPTION).....	13-28
BOOM CYLINDER ASSEMBLY-LH	13-32
BOOM CYLINDER ASSEMBLY-RH.....	13-34
BUCKET CYLINDER ASSEMBLY	13-36

DECALS..... 13-38

13-2 KL701

GENERAL INFORMATION

ILLUSTRATIONS

All parts are illustrated in "exploded views" which show the individual parts in their normal relationship to each other. Reference numbers are used in the illustrations. These numbers correspond to those in the "Reference Number" column and are followed by the quantity required and description.

DIRECTIONAL REFERENCE

"Right hand" and "left hand" sides are determined by standing at the rear of the unit and facing in the direction of forward travel.

PARTS ORDER

Orders must give the complete description, correct part number, the total amount required, the product model, all the necessary serial numbers, the method of shipment and the shipping address.

INSTRUCTIONS

1. GROUP NAME : Detail classification name for parts.
2. SECTION NAME : Classification name for parts.
3. COMPONENTS : The components of an assembly are identified by a bracket.
4. NO.: Reference numbers are assigned to parts in the figure.

INTERCHANGEABILITY

: Indicates the interchangeability of parts due to design change.


13

	Indicates that a new part can be used instead of an old part when you order this part, please order new part.
	Indicates that either parts can be used.
 ~4265-99999 5265-00001~	Indicates that a part has a serial number break. When you order this part, please order a part according to the serial number of the loader.

★Due to our policy of continuously improving products, The information contained herein is subject to change without notice.

13-4 KL701

BUCKET, QUICK ATTACHMENT

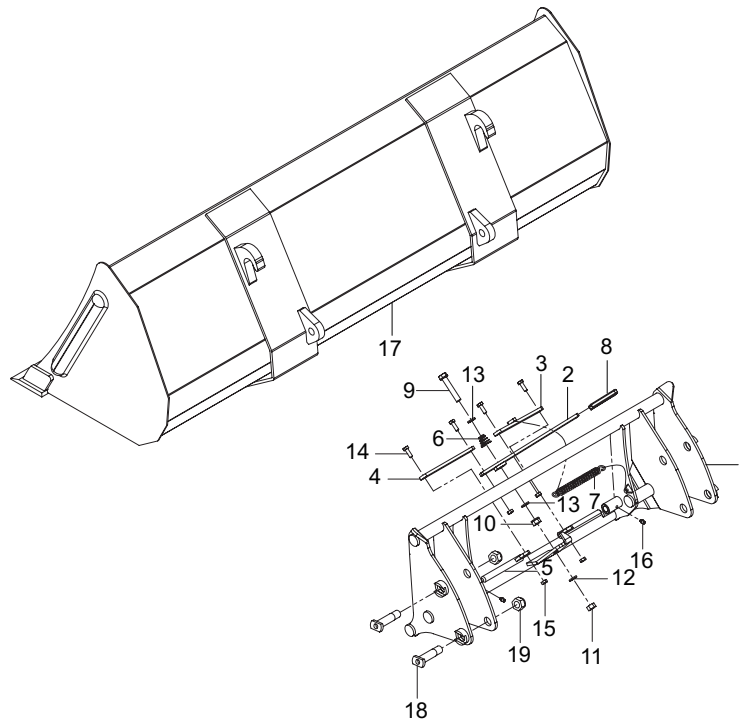


701OD01C

PART ILLUSTRATIONS 13-5

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
0	FTQU6-10000	Quick Attachment Ass'y - Euro Hitch Type(No.1~16)	1		
1	FTQU6-10100	Quick Attach Frame	1		
2	FTQU2-10200	Lever W.A-Quick	1		
3	FTQU2-10300	Link W.A-Quick	1		
4	FTQU2-10301	Link-Quick	1		
5	14132-20185	Pin W.A-Quick	2		
6	14232-36032	Spring	1		
7	14224-28181	Spring	1		
8	FTQU2-11003	Grip-Rubber	1		
9	10191-M1606-90	Hex Bolt, M16-P2.0 90L	1		
10	10261-M1606	Hex Bolt, M16-P2.0	1		
11	1021N-M1606	Nut-Selflock, M16-P2.0	1		
12	10316-M1600	Washer-Spring, M16	1		
13	10321-M1600	Washer-Plain, M16	2		
14	10191-M1004-35	Hex Bolt, M10-P1.5 35L	4		
15	1021N-M1004	Nut-Selflock, M10-P1.5	4		
16	802G0-T1900	Nipple, Grease, 1/8"	2		
17	FTBU3-82300-01	Bucket W.A - ISO (82")	1		
18	14131-30155-N	Pin, Ø30-155L	4		
19	1021M-M3006	Nut-Selflock, M30-P2.0	4		

13-6 KL701

4IN1 BUCKET ASSEMBLY

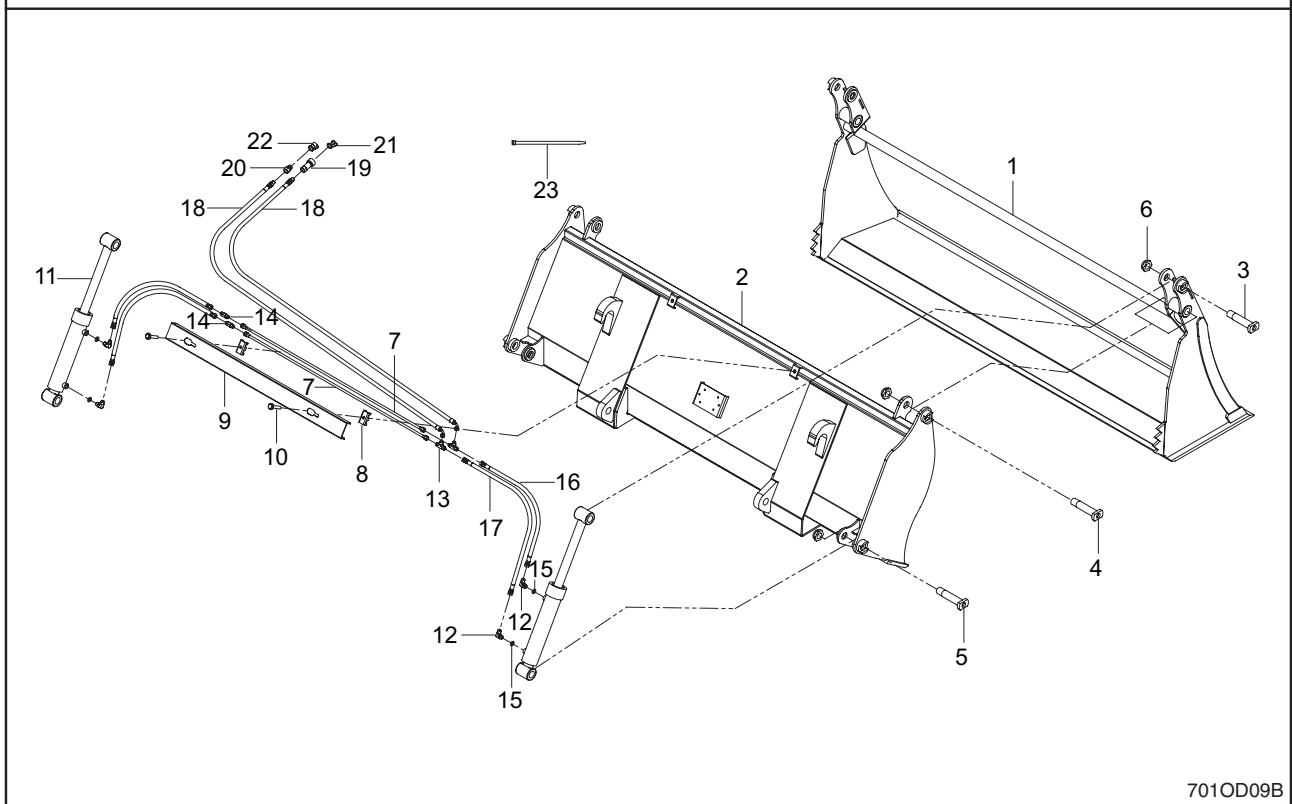


701OD09B

PART ILLUSTRATIONS 13-7

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
0	ZTBU5-7800S-01	4in1 Bucket Ass'y, 78" (NO. 1~23)	1		
1	ZTBU5-7810N	Front Bucket W.A, 78", V-hump Type	1		
2	ZTBU5-78200-01	Rear Bucket W.A-ISO Euro, 78"	1		
3	14124-25110-N	Pin W.A, Ø25-110L	2		
4	14124-25138-N	Pin W.A, Ø25-138L	2		
5	14124-25122-N	Pin W.A, Ø25-122L	2		
6	1021M-M2404	Nut-Selflock, M24-P1.5	6		
7	ZTBU5-H700	Pipe Ass'y, Ø12	2		
8	FTF40-62102	Clamp	2		
9	ZTBU5-72301	Cover, Pipe	1		
10	1012S-M0803-35	Sem's Bolt, M8-P1.25 35L	2		
11	226505	Cylinder, 30x50x415L(ST180)	2		
12	802L2-P46F9-42	Nipple, 3/4-16UNF, Hose x PF3/8, O-ring 90°	4		
13	802T2-F94F9-40	Nipple, 3/4-16UNF, T-Hose	2		
14	802N2-F94F9-40	Nipple, 3/4-16UNF, Hose x 3/4-16UNF, Hose	2		
15	81300-0P014	O-ring, P14	4		
16	80620-01002	Hose, 4(3/4-16UNF)-4(3/4-16UNF) 350L(3/8)	2		
17	80620-01003	Hose, 4(3/4-16UNF)-4(3/4-16UNF) 550L(3/8)	2		
18	80620-07011	Hose, 904(3/4-16UNF)-1(PT1/2) 1700L(3/8)	2		
19	80420-T1130	Quifk Coupler, PT1/2" Female	1		
20	80410-T1130	Quifk Coupler, PT1/2" Male	1		
21	8043K-01100	Dust Plug, 1/2" Black Male	1		
22	8044K-01100	Dust Cap, 1/2" Black Female	1		

13-8 KL701

4IN1 BUCKET ASSEMBLY

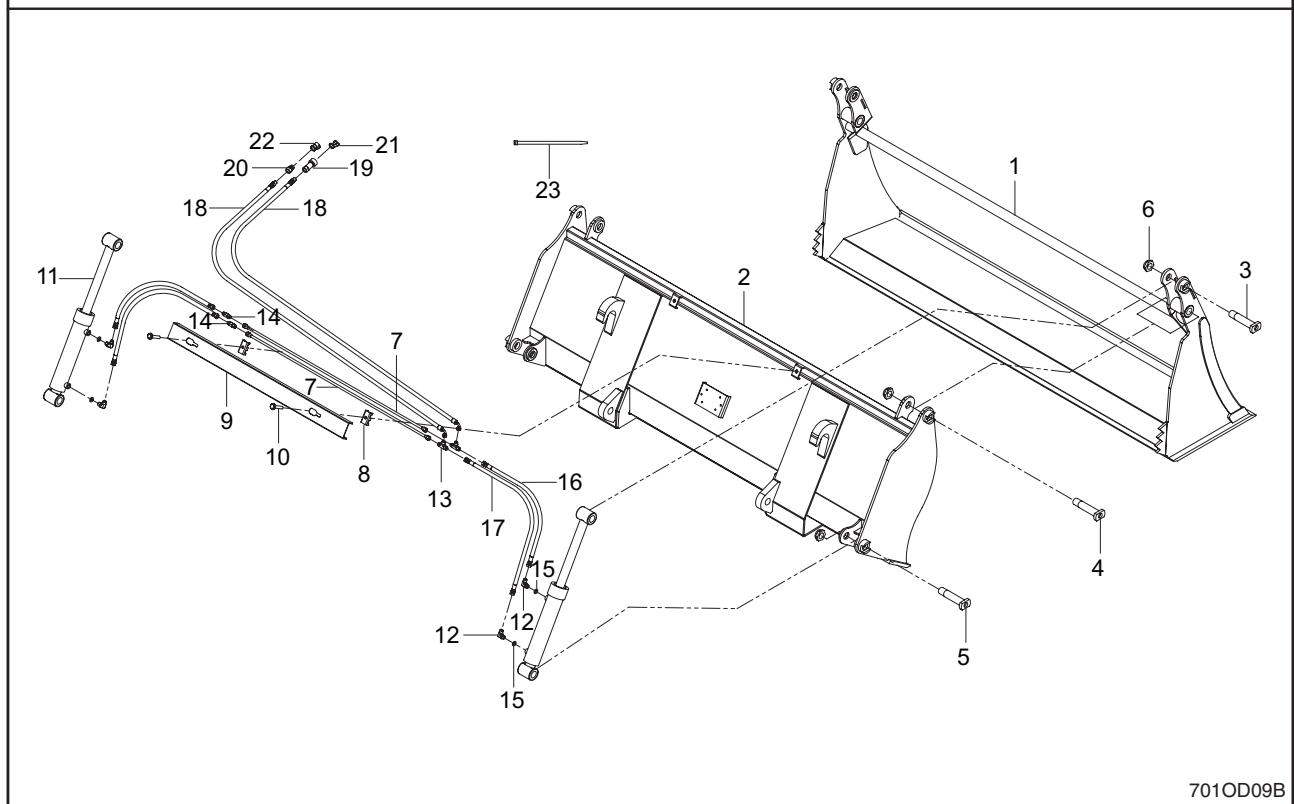


701OD09B

13

2013-05-10 오후 4:33:42

13-10 KL701

FRONT GRILL ASSEMBLY (OPTIONAL)

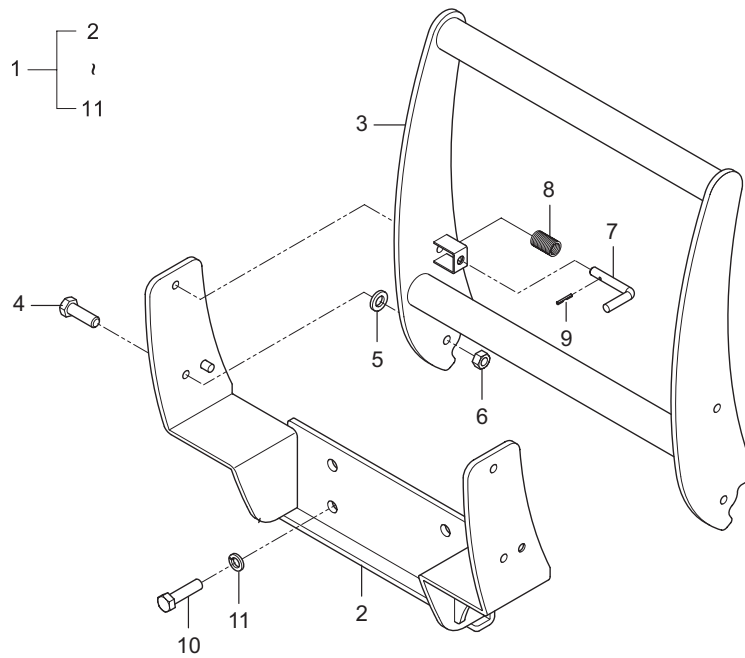


601OD03A

13

2013-05-10 오후 4:33:43

13-12 KL701

MOUNTING FRAME ASSEMBLY

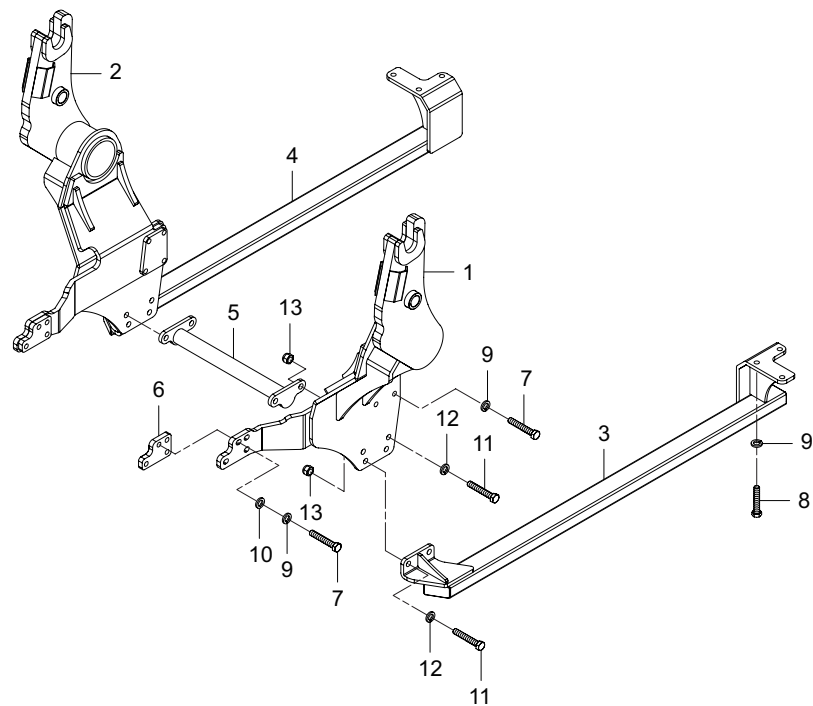


701OD01A

13

2013-05-10 오후 4:33:43

13-14 KL701

BOOM ASSEMBLY

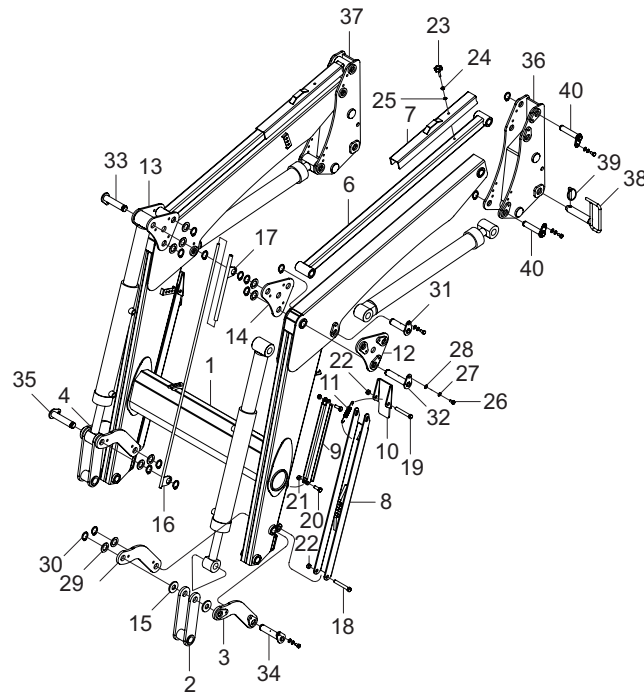

701OD08B


PART ILLUSTRATIONS 13-15

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
1	FTF66-11100-01	Boom W.A	1		
2	FTF34-53100	Link W.A	1		
3	FTF66-11410	Link W.A, LH	1		
4	FTF66-11420	Link W.A, RH	1		
5	FTF35-52101	Link	2		
6	FTF39-20100-02	Link W.A-LEVEL	2		
7	FTF35-55100-01	Safety Bar W.A	2		
8	FTF66-11600	Stand W.A	2		
9	FTF66-11603	Stand-Lock	2		
10	FTF66-11604	Foot Plate	2		
11	FTE44-11605	Stand Spring	2		
12	FTF66-11200	Link W.A, LH	1		
13	FTF66-11300	Link W.A, RH	1		
14	FTF39-11101	Plate	2		
15	FTF66-11015	Plain-Washer	4		
16	FTF66-70100	Bar Gauge Long, Ø12-1360L	1		
17	FTF66-70200	Bar Gauge Short, Ø12.7-360L	1		
18	10191-M1406-A0	Hex-Bolt, M14-P2.0-100L	2		
19	10191-M1406-B0	Hex-Bolt, M14-P2.0-110L	2		
20	10191-M1205-40	Hex-Bolt, M12-P1.75-40L	4		
21	1021N-M1205	Nut-Self Lock, M12-P1.75	4		
22	1021N-M1406	Nut-Self Lock, M14-P2.0	4		
23	10121-M0803-FM	Bolt Ass'y, M8-P1.25	2		

13

13-16 KL701

BOOM ASSEMBLY

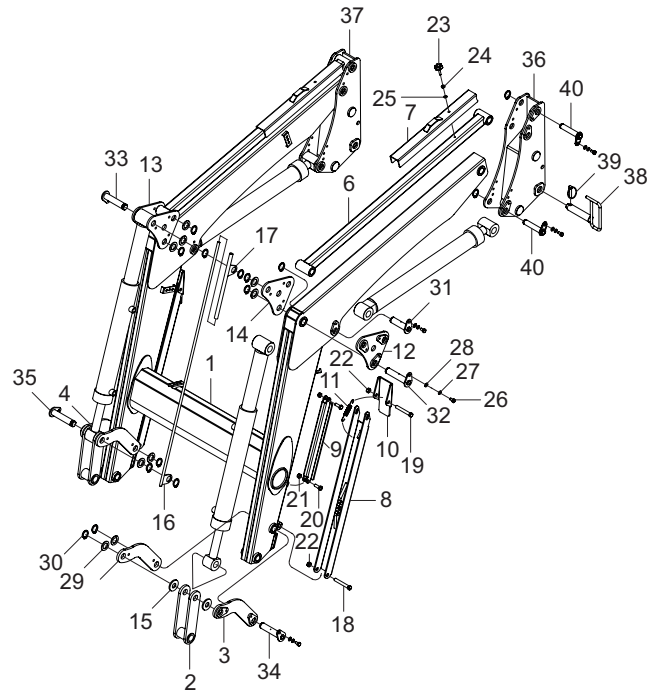


701OD08B

PART ILLUSTRATIONS 13-17

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
24	10211-M0803	Hex-Nut, M8 x P1.25	2		
25	10321-M0800	Washer-Plain, M8	2		
26	1019N-M1004-25	Nyloc Bolt, M10-P1.5-25L	18		
27	10316-M1000	Washer-Spring, M10	18		
28	10321-M1000	Washer-Plain, M10	18		
29	FTF66-11029	Washer-Pin, Ø30.5-Ø50-3.2T	10		
30	1301C-03000	Snap-Ring, C-Type, Ø30	18		
31	14136-30111-N	Pin, Ø30-111L	2		
32	14136-30133-N	Pin, Ø30-133L	5		
33	14137-30140-N	Pin, Ø30-140L	1		
34	14136-30139-N	Pin, Ø30-139L	3		
35	14137-30146-N	Pin, Ø30-146L	1		
36	FT117-20100	Top Post W.A, LH	1		
37	FT117-20200	Top Post W.A, RH	1		
38	FT117-20300	Pin, Ø34-164.5L	2		
39	14021-10000	Ring-Pin, Ø10	2		
40	14136-30145-N	Pin, Ø30-145L	6		

13-18 KL701

BOOM HYDRAULIC ASSEMBLY

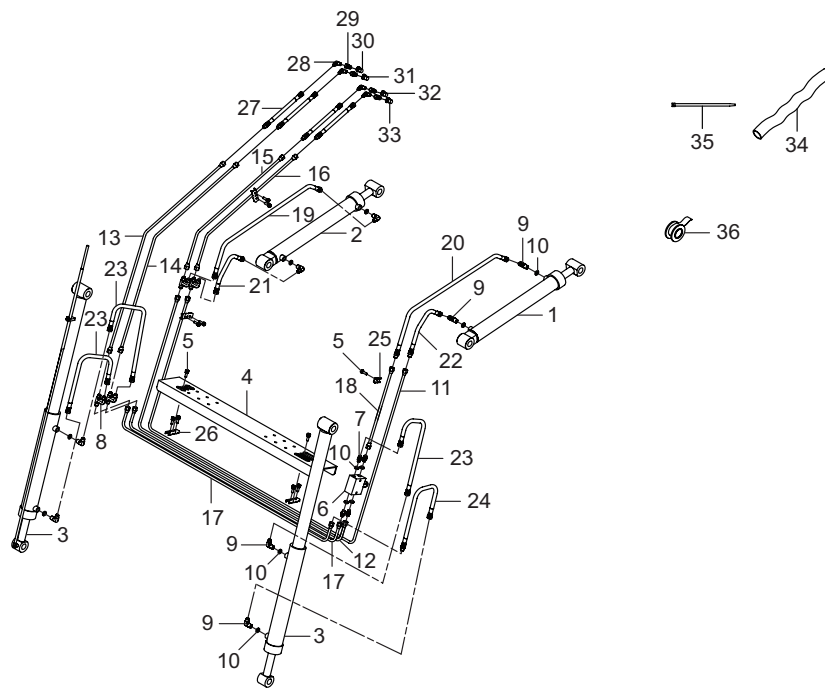


701OD07A

PART ILLUSTRATIONS 13-19

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
0	FTF66-H0000	Hydraulic piping Kit, NO.1~26			
1	22D003	Boom Cylinder Ass'y LH, Ø40-Ø70-905L (ST572)	1		
2	22D004	Boom Cylinder Ass'y RH, Ø40-Ø70-905L (ST572)	1		
3	22D001	Bucket Cylinder Ass'y, Ø35-Ø70-1080L (ST405)	2		
4	FTF66-H0101	Cover	1		
5	1012S-M0803-35	Sem's Bolt, M8-P1.25-35L	11		
6	801T1-50000	Valve, Relife	1		
7	802N2-P46F9-42	Nipple, PF3/8, O-Ring x 3/4-16UNF, Hose	4		
8	802H1-F94F9-40	Nipple, 3/4-16UNF, Hose H-Type	4		
9	802L2-P46F9-42	Nipple, 3/4-16UNF, Hose x PF3/8, O-Ring 90°	8		
10	81301-BP014	O-Ring, 1BP14	12		
11	FTF39-HP100	Pipe Ass'y	1		
12	FTF39-HP200	Pipe Ass'y	1		
13	FTF39-HP300	Pipe Ass'y	1		
14	FTF39-HP400	Pipe Ass'y	1		
15	FTF39-HP500	Pipe Ass'y	1		
16	FTF39-HP600	Pipe Ass'y	1		
17	FTF39-HP700	Pipe Ass'y	2		
18	FTF39-HP800	Pipe Ass'y	1		
19	80620-01037	Hyd Hose, 4(3/4-16UNF)-4(3/4-16UNF) 1050L(3/8)	1		
20	80620-03031	Hyd Hose, 4(3/4-16UNF)-2(3/4-16UNF) 1100L(3/8)	1		
21	80620-01027	Hyd Hose, 4(3/4-16UNF)-4(3/4-16UNF) 450L(3/8)	1		
22	80620-03011	Hyd Hose, 4(3/4-16UNF)-2(3/4-16UNF) 450L(3/8)	1		

13-20 KL701

BOOM HYDRAULIC ASSEMBLY

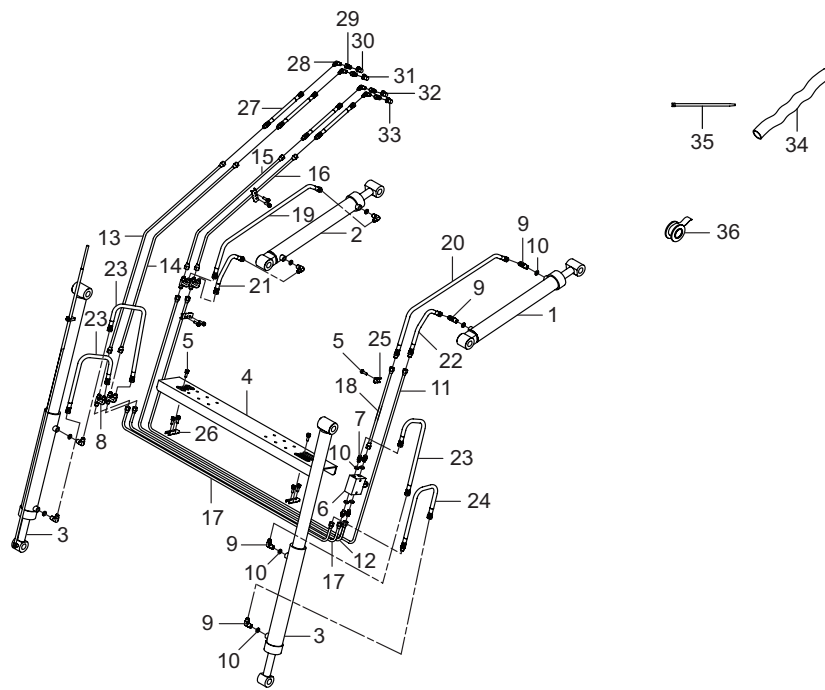

701OD07A

13

2013-05-10 오후 4:33:46


701OD10B

PART ILLUSTRATIONS 13-23

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
1	22D003	Boom Cylinder Ass'y LH, Ø40-Ø70-905L (ST572)	1		
2	22D004	Boom Cylinder Ass'y RH, Ø40-Ø70-905L (ST572)	1		
3	22D001	Bucket Cylinder Ass'y, Ø35-Ø70-1080L (ST405)	2		
4	1012S-M0803-35	Bolt-Sem's, M8x1.25P 35L	15		
5	801T1-50000	Valve, Relife	1		
6	802N2-P46F9-42	Nipple, PF3/8, O-Ring x 3/4-16UNF	4		
7	802H1-F94F9-40	Nipple, H-TYPE 3/4-16UNF, Hose	4		
8	802L2-P46F9-42	Nipple, PF3/8, O-Ring x 3/4-16UNF, Hose 90°	8		
9	81301-BP014	O-Ring, 1BP14	12		
10	FTF39-HP100	Pipe Ass'y	1		
11	FTF39-HP200	Pipe Ass'y	1		
12	FTF66-HP100	Pipe Ass'y	1		
13	FTF66-HP200	Pipe Ass'y	1		
14	FTF39-HP500	Pipe Ass'y	1		
15	FTF39-HP600	Pipe Ass'y	1		
16	FTF41-HP700	Pipe Ass'y	2		
17	FTF39-HP800	Pipe Ass'y	1		
18	80620-01037	Hyd Hose, 4(3/4-16UNF)x4(3/4-16UNF) 1050L(3/8)	1		
19	80620-03031	Hyd Hose, 4(3/4-16UNF)x2(3/4-16UNF) 1100L(3/8)	1		
20	80620-01027	Hyd Hose, 4(3/4-16UNF)x4(3/4-16UNF) 450L(3/8)	1		
21	80620-03011	Hyd Hose, 4(3/4-16UNF)x2(3/4-16UNF) 450L(3/8)	1		
22	80620-01026	Hyd Hose, 4(3/4-16UNF)x4(3/4-16UNF) 850L(3/8)	3		
23	80620-03010	Hyd Hose, 4(3/4-16UNF)x2(3/4-16UNF) 850L(3/8)	1		

13-24 KL701

BOOM HYDRAULIC ASSEMBLY (4IN1 STD)

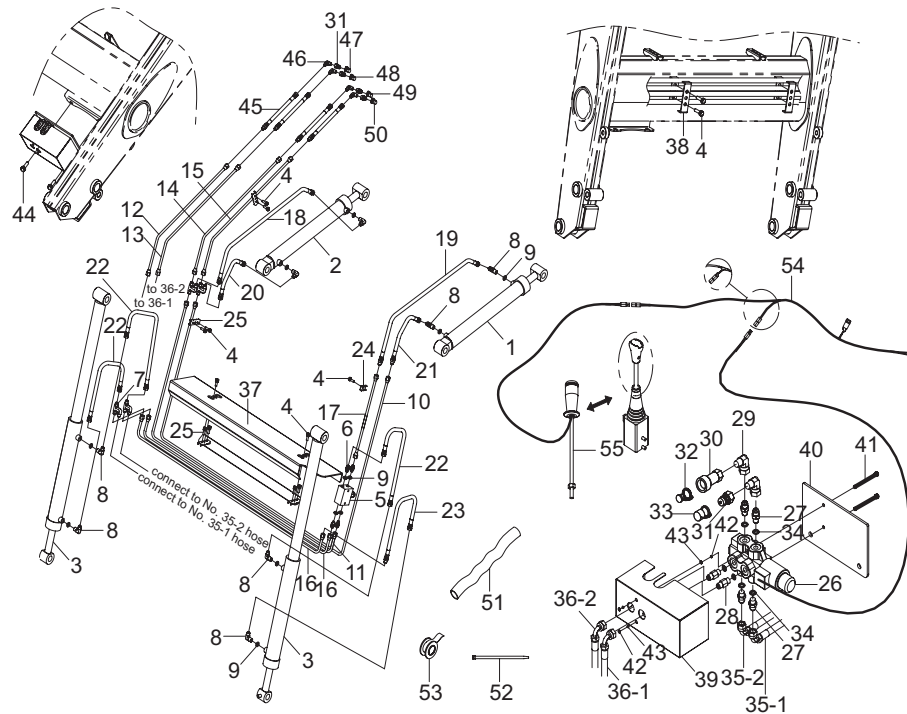


701OD10B

PART ILLUSTRATIONS 13-25

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
24	FTF40-62102	Clamp	1		
25	FTF40-62101	Clamp	4		
26	801Z1-02000	Valve, DUKIN	1		
27	802N0-T46P4-61	Nipple, PF3/8, Copper×3/8	4		
27	802N2-P46F9-41	Nipple, PF3/8, Copper×3/4-16UNF, Hose	4		13.04.11~
28	802N2-P46F9-4M	Nipple, PF3/8 Copper x 3/4-16UNF (69L)	2		
29	802N2-F94T6-3S	Nipple, PF1/4(O-Ring)×1/2-20UNF(90° Elbow)	2		Wrong spec
29	802N2-F94T6-3S	Nipple, PF1/4(O-Ring)×1/2-20UNF(90° Swivel)	2		
30	80420-T1130	Quick Coupler, PT1/2 Female	1		
31	80410-T1130	Quick Coupler, PT1/2 Male	5		
32	8043K-01100	Dust Plug, 1/2" Male Black	1		
33	8044K-01100	Dust Cap, 1/2, Black	1		
34	103C0-C0330	Washer-Copper, 3/8"	6		
35	80620-23008	Hyd Hose, 904(3/4-16UNF)×454(3/4-16UNF)1070L(3/8)180°	2		
36	80620-08010	Hyd Hose, 904(3/4-16UNF)×2(3/4-16UNF) 1500L(3/8)	2		
37	FTF66-H0104	Cover, Pipe	1		
38	FTE44-H0036	Clamp	2		
39	FTF66-H0102	Cover, Valve	1		
40	FTF66-H0103	Plate, Solenoid Valve	1		
41	10121-M0602-C0	Hex-Bolt, M6xP1.0-120L	2		
42	10316-M0600	Washer-Spring, M10	4		
43	10211-M0602	Hex-Nut, M6x1.0P	4		
44	1012S-M1004-25	Bolt-Sem's, M10x1.5P 25L	2		

13-26 KL701

BOOM HYDRAULIC ASSEMBLY (4IN1 STD)

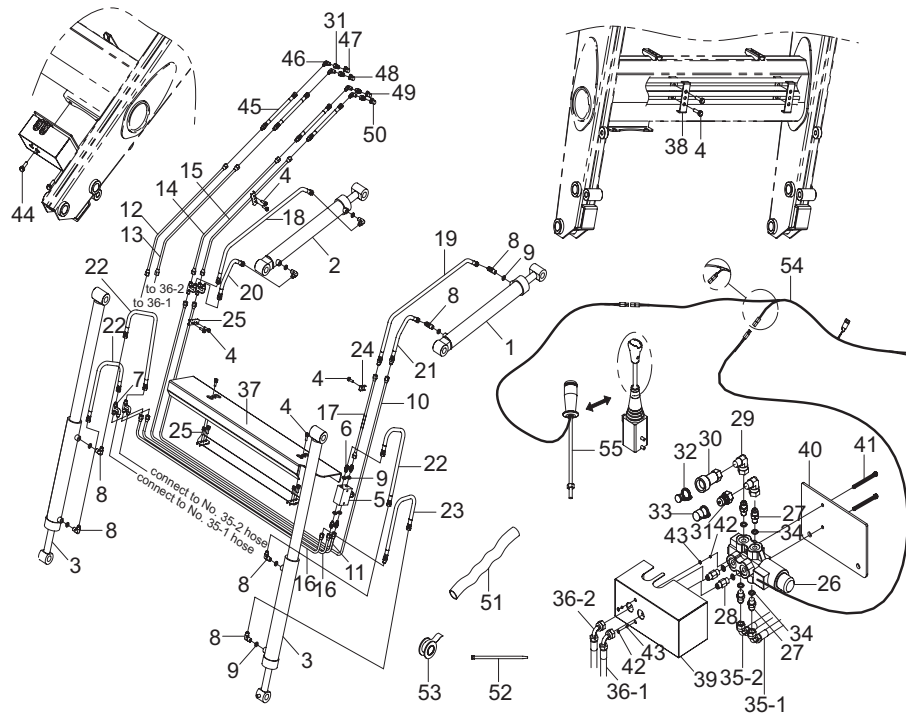

701OD10B

13

2013-05-10 오후 4:33:48


701OD11B

PART ILLUSTRATIONS 13-29

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
1	1012S-M0803-35	Bolt-Sem's, M8x1.25P 35L	4		
2	FTF66-HP100	Pipe Ass'y	1		
3	FTF66-HP200	Pipe Ass'y	1		
4	80620-03031	Hyd Hose, 4(3/4-16UNF)x2(3/4-16UNF) 1100L(3/8)	1		
5	801Z1-02000	Valve, DUKIN	1		
6	802N0-T46P4-61	Nipple, PF3/8 Copper x PT3/8	4		
6	802N2-P46F9-41	Nipple, PF3/8, Copperx3/4-16UNF, Hose	4		13.04.11~
7	802N2-P46F9-4M	Nipple, PF3/8 Copperx3/4-16UNF (69L)	2		
8	802N2-F94T6-3S	Nipple, PF1/4(O-Ring)x1/2-20UNF(90° Elbow)	2		Wrong spec
8	802N2-F94T6-3S	Nipple, PF1/4(O-Ring)x1/2-20UNF(90° Swivel)	2		
9	80420-T1130	Quick Coupler, PT1/2 Female	1		
10	80410-T1130	Quick Coupler, PT1/2 Male	1		
11	8043K-01100	Dust Plug, 1/2" Male Black	1		
12	8044K-01100	Dust Cap, 1/2, Black	1		
13	103C0-C0330	Washer-Copper, 3/8"	6		
14	80620-23008	Hyd Hose, 904(3/4-16UNF)x454(3/4-16UNF)1070L(3/8)180°	2		
15	80620-08010	Hyd Hose, 904(3/4-16UNF)x2(3/4-16UNF) 1500L(3/8)	2		
16	FTF66-H0104	Cover, Pipe	1		
17	FTE44-H0036	Clamp	2		
18	FTF66-H0102	Cover, Valve	1		
19	FTF66-H0103	Plate, Solenoid Valve	1		
20	10121-M0602-C0	Hex-Bolt, M6xP1.0-120L	2		
21	10316-M0600	Washer-Spring, M10	4		

13-30 KL701

AUXILIARY HYDRAULIC DEVICE (OPTION)

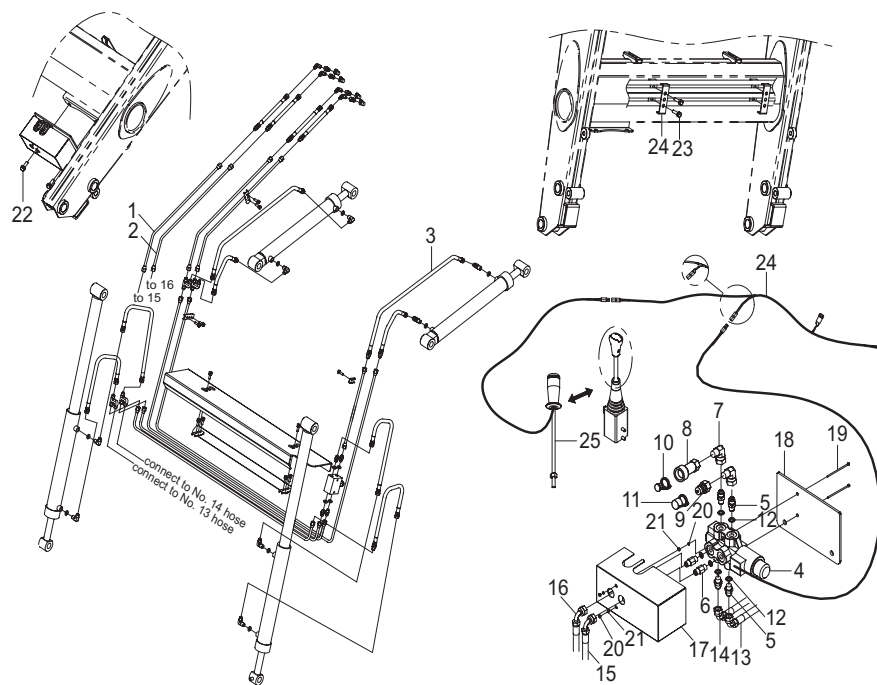


701OD11B

13

2013-05-10 오후 4:33:50

13-32 KL701

BOOM CYLINDER ASSEMBLY-LH

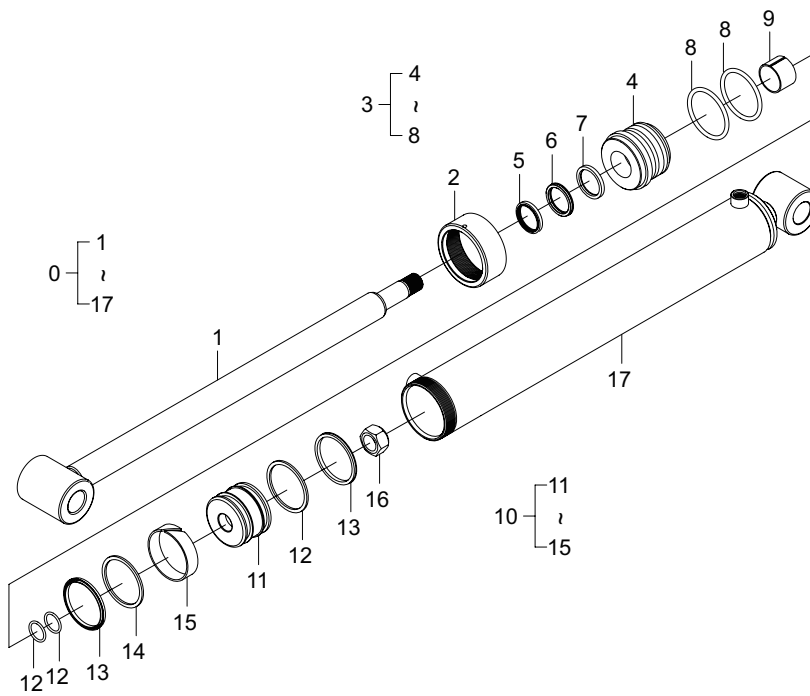


701OD02A

PART ILLUSTRATIONS 13-33

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
0	22D003	Boom Cylinder Ass'y LH, NO.1~17	1		
1	22D003-R	Rod Ass'y	1		
2	OC70-8037	Cap, Outer, Ø70x80x37L	1		
3	IA70-4055	Seal Kit Head, NO.4~9	1		
4	IC70-4055	Cover, Inner, Ø70x40x55L	1		
5	DSSD-R040	Dust, SDR 40x48x5/6.5	1		
6	UPSK-Y040	Packing, U, SKY 40x50x6	1		
7	UPIS-I040	Packing, U, ISI 40x50x6	1		
8	OR1B-G065	O-Ring, 1BG65	2		
9	DU04-0020	Bushing, DU, 40x44x20	1		
10	PA70-2746	Seal Kit Piston, NO.11~15	1		
11	PI70-2746	Piston, Ø70x27x46L	1		
12	OR1B-G027	O-Ring, 1BG27	2		
13	UPOS-I070	Packing, U, OSI 70x60x6	2		
14	TRBR-0070	Backup, Ring, 70x60x3	2		
15	WEWR-0070	Wearing, WR 70x65x15	1		
16	NTP0-U100-C	Nut, 1-14UN	1		
17	22D003-T	Tube Ass'y	1		

13-34 KL701

BOOM CYLINDER ASSEMBLY-RH

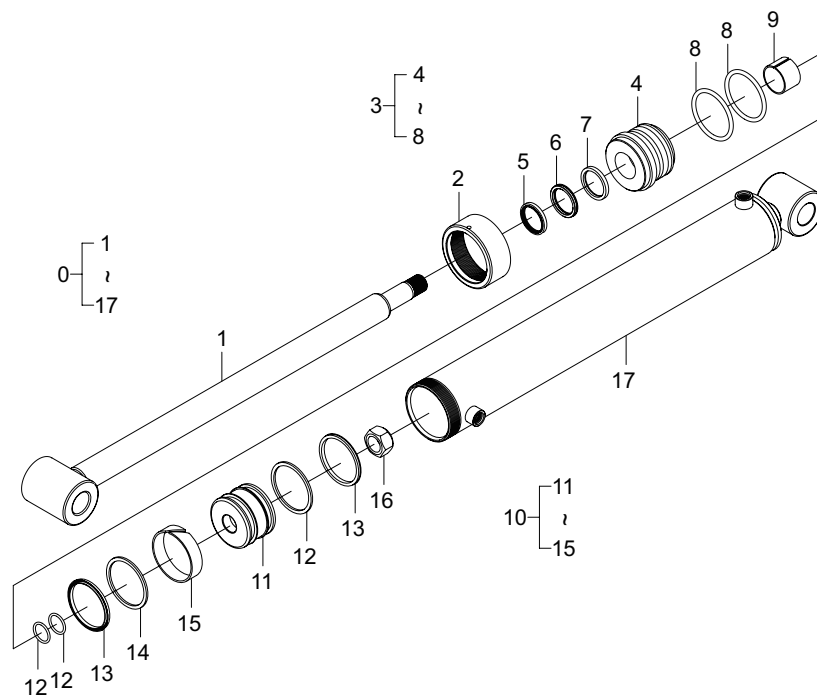


701OD03A

PART ILLUSTRATIONS 13-35

REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
0	22D004	Boom Cylinder Ass'y RH, NO.0~15	1		
1	22D004-R	Rod Ass'y	1		
2	OC70-8037	Cap, Outer, Ø70x80x37L	1		
3	IA70-4055	Seal Kit Head, NO.4~9	1		
4	IC70-4055	Cover, Inner, Ø70x40x55L	1		
5	DSSD-R040	Dust, SDR 40x48x5/6.5	1		
6	UPSK-Y040	Packing, U, SKY 40x50x6	1		
7	UPIS-I040	Packing, U, ISI 40x50x6	1		
8	OR1B-G065	O-Ring, 1BG65	2		
9	DU04-0020	Bushing, DU, 40x44x20	1		
10	PA70-2746	Seal Kit Piston, NO.11~15	1		
11	PI70-2746	Piston, Ø70x27x46L	1		
12	OR1B-G027	O-Ring, 1BG27	2		
13	UPOS-I070	Packing, U, OSI 70x60x6	2		
14	TRBR-0070	Backup, Ring, 70x60x3	2		
15	WEWR-0070	Wearing, WR 70x65x15	1		
16	NTP0-U100-C	Nut, 1-14UN	1		
17	22D004-T	Tube Ass'y	1		

13-36 KL701

BUCKET CYLINDER ASSEMBLY

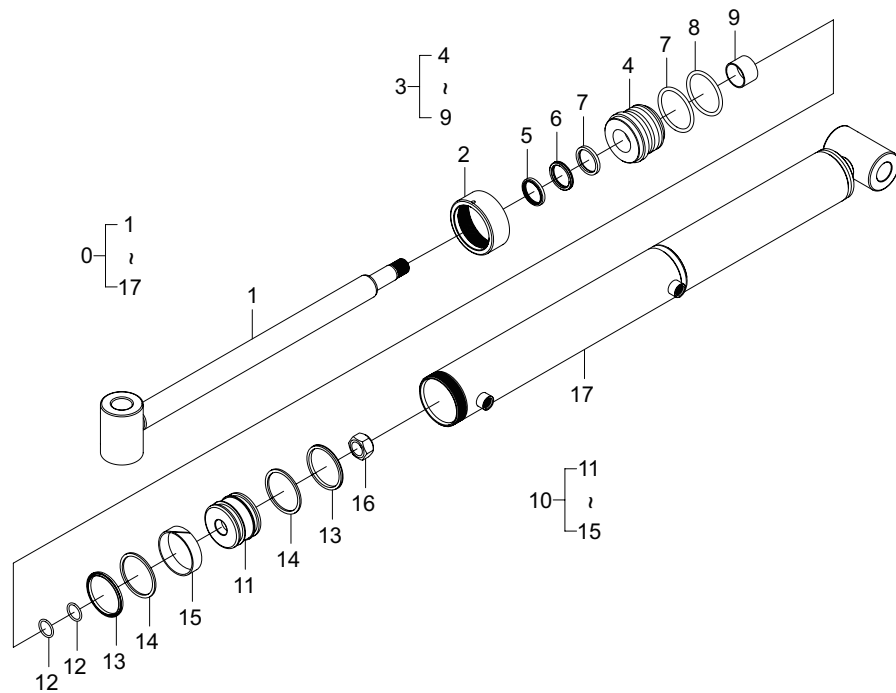

701OD04A

PART ILLUSTRATIONS 13-37


REF. NO	PART. NO	DESCRIPTION	QTY	I.C	REMARK
0	22D001	Boom Cylinder Ass'y, NO.1~17	1		
1	22D001-R	Rod Ass'y	1		
2	OC70-8040	Cap, Outer, Ø70x80x40L	1		
3	IA70-3565	Seal Kit Head, NO.4~9	1		
4	IC70-3565	Cover, Inner, Ø70x35x65L	1		
5	DSSD-R035	Dust, SDR 35x43x5/6.5	1		
6	UPSK-Y035	Packing, U, SKY 35x45x6	1		
7	UPIS-I035	Packing, U, ISI 35x45x6	1		
8	OR1B-P060	O-Ring, 1BP60	2		
9	DU03-5030	Bushing, DU, 35x39x30	1		
10	PA70-2746	Seal Kit Piston, NO.11~14	1		
11	PI70-2746	Piston, Ø70x27x46L	1		
12	OR1B-G027	O-Ring, 1BG27	2		
13	UPOS-I070	Packing, U, OSI 70x60x6	2		
14	TRBR-0070	Backup, Ring, 70x60x3	2		
15	WEWR-0070	Wearing, WR70x65x15	1		
16	NTP0-U100-C	Nut, 1-14UN	1		
17	22D001-T	Tube Ass'y	1		

13-38 KL701

DECALS


CAUTION

- Read and refer to the Tractor Operation Manual or Decals on the Tractor. and Loader Decals on as shown.

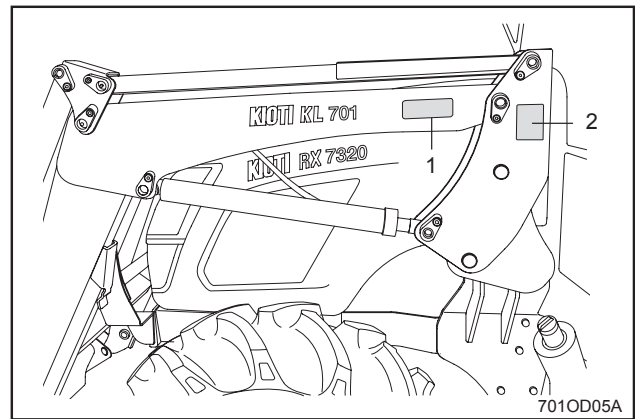

(1) 3104E-00001


(2) 3102E-00001

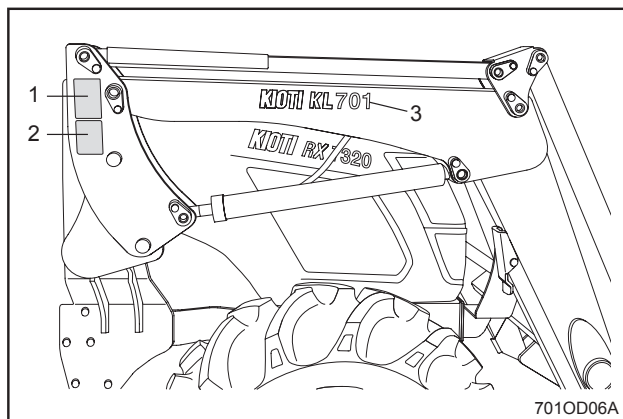

13

- (1) 3102E-00002
(3) 3101E-00156
- (2) 3102E-00003

 Refer to category "Safety decals"



MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....



14. LODER INSTALLATION


INSTALLATION INSTRUCTIONS..... 14-2

14-2 KL701

INSTALLATION INSTRUCTIONS

⚠ CAUTION

- See your tractor Operator's manual for Safety precautions and Tractor preparations before installing the loader.

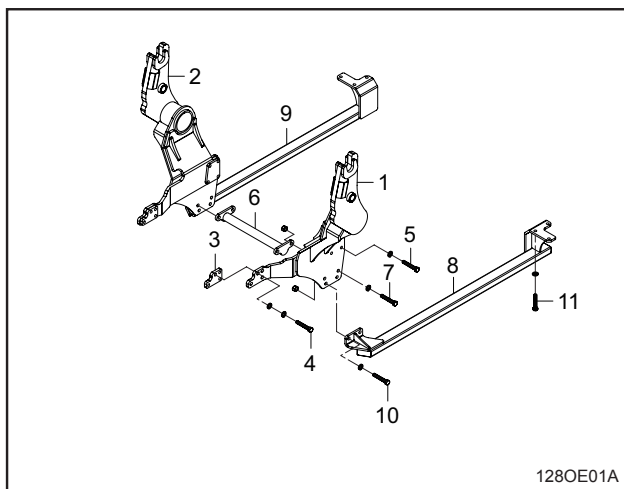

STEP 1.

Position tractor on hard level surface.

STEP 2.

Release loader, bucket and mount kit box from pallet.

STEP 3.

Install Mounting Frame W.A, LH and Mounting Frame W.A, RH.

1. Mounting Frame W.A, LH – 1EA
2. Mounting Frame W.A, RH – 1EA
3. Space, 16T– 2EA
4. Hex-Bolt, M14-P1.5 60L – 8EA
Spring-Washer, M14 – 8EA
Plain-Washer, M14 – 8EA
5. Hex-Bolt, M14-P1.5 60L – 8EA
Spring-Washer, M14 – 8EA

STEP 4.


Install Cross Bar.

6. Cross Bar – 1EA
7. Hex-Bolt, M16-P2.0 50L – 4EA
Spring-Washer, M16 – 4EA
Hex-Nut, M16-P2.0 – 4EA

STEP 5.

Install Rear Frame W.A, LH/RH.

8. Rear Frame W. A, LH – 1EA
9. Rear Frame W. A, RH – 1EA
10. Hex-Bolt, M16-P2.0 50L – 4EA
Spring-Washer, M16 – 4EA
Hex-Nut, M16-P2.0 – 4EA
11. Hex-Bolt, M14-P1.5 50L – 6EA
Spring-Washer, M14 – 6EA

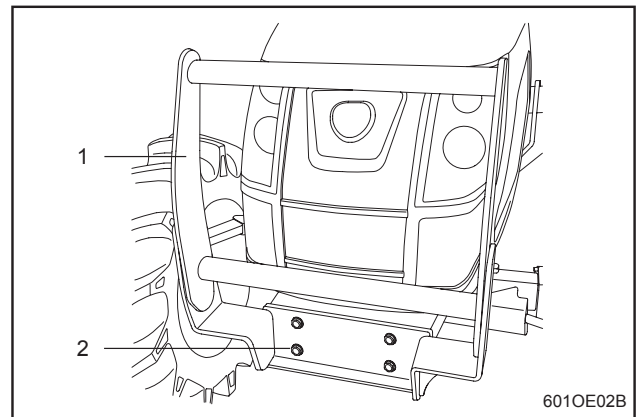

(1)Front Grill


(2) Bolt

STEP 6.

Install Front Grill. (Optional)


1. Front Grill - 1EA
2. Hex-Bolt, M16-1.5P 40L – 4EA
Spring-Washer, M16 – 4EA

14-4 KL701

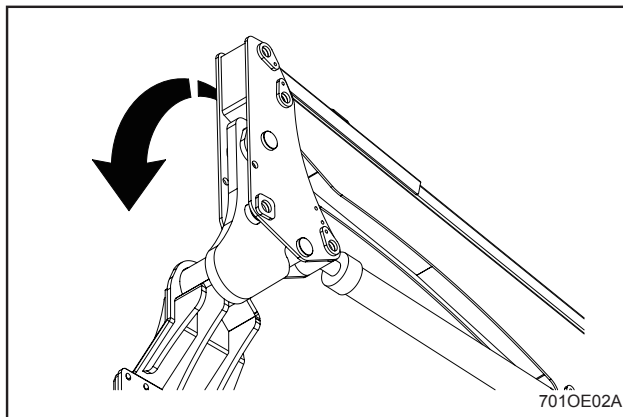

STEP 7.

Install Boom Ass'y
Hang the groove on the pin located on mounting frame.


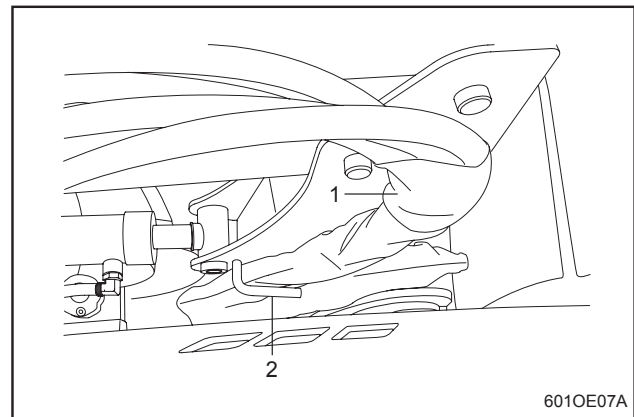


(1) Hose

(2) Hose Guide

STEP 8.

Hose "S"- shaped bend is fixed after the hose guide.

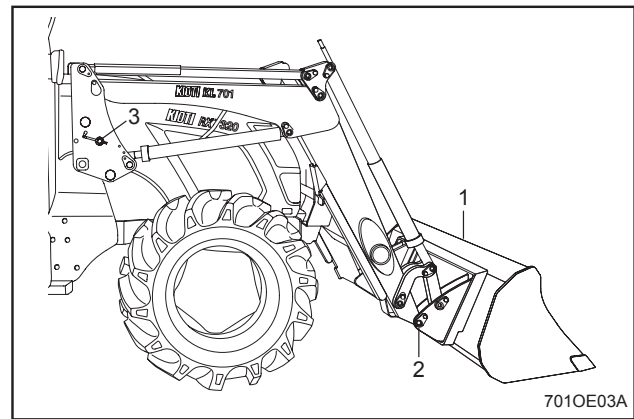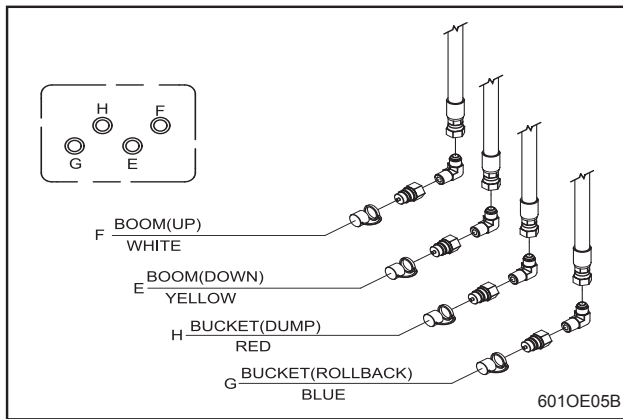

STEP 9.

 
Fit hydraulic hoses as shown diagram above.

STEP 10.

Install Latch pin
3 Latch pin W/Linch Pin - 2Sets

STEP 11.

Install the Bucket Ass'y



14-6 KL701

STEP 12.

Grease every fitting.

See page 9-3 for the grease chart.

 
STEP 13.

Hydr. oil level check.

- Lower the boom on the ground and retract the bucket cylinder.
- Add the hydraulic oil up to the "Full" mark on the oil gauge.
- Specification of oil: Refer to the tractor manual.

STEP 14.

In order to check the leakage of hydraulic oil. please operate the Loader 5 times or more with carefully.



15. INDEX 1

PART NO. INDEX 15-2

15-2 KL701


PART NO	PAGE	PART NO	PAGE	PART NO	PAGE
10121-M0602-C0	13-25	1021N-M1205	13-11	14124-25138-N	13-7
10121-M0602-C0	13-29	1021N-M1205	13-15	14131-30155-N	13-5
10121-M0803-FM	13-15	1021N-M1406	13-15	14132-20185	13-5
1012S-M0803-35	13-7	1021N-M1606	13-5	14136-30111-N	13-17
1012S-M0803-35	13-23	10261-M1606	13-5	14136-30133-N	13-17
1012S-M0803-35	13-29	10261-M1606	13-13	14136-30139-N	13-17
1012S-M0803-35	13-19	10316-M0600	13-25	14136-30145-N	13-17
1012S-M1004-25	13-25	10316-M0600	13-29	14137-30140-N	13-17
1012S-M1004-25	13-29	10316-M1000	13-17	14137-30146-N	13-17
10191-M1004-35	13-5	10316-M1400	13-13	14224-28181	13-5
10191-M1205-35	13-11	10316-M1600	13-5	14232-36032	13-5
10191-M1205-40	13-15	10316-M1600	13-11	226505	13-7
10191-M1404-50	13-13	10316-M1600	13-13	22D001	13-23
10191-M1404-60	13-13	10321-M0800	13-17	22D001	13-35
10191-M1406-A0	13-15	10321-M1000	13-17	22D001	13-19
10191-M1406-B0	13-15	10321-M1200	13-11	22D001-R	13-35
10191-M1604-40	13-11	10321-M1400	13-13	22D001-T	13-35
10191-M1606-50	13-13	10321-M1600	13-5	22D003	13-23
10191-M1606-90	13-5	103C0-C0330	13-25	22D003	13-19
1019N-M1004-25	13-17	103C0-C0330	13-29	22D004	13-23
10211-M0602	13-25	1301C-03000	13-17	22D004	13-33
10211-M0602	13-29	14021-10000	13-17	22D004	13-19
10211-M0803	13-17	14031-04040	13-11	22D004-R	13-33
1021M-M2404	13-7	14116-12086-01	13-11	22D004-T	13-33
1021M-M3006	13-5	14124-25110-N	13-7	50120-M270K	13-9
1021N-M1004	13-5	14124-25122-N	13-7	50120-M270K	13-27

PART NO	PAGE	PART NO	PAGE	PART NO	PAGE
50120-M270K	13-21	802N2-P46F9-4M	13-25	80620-01026	13-23
50135-1500K	13-27	802N2-P46F9-4M	13-29	80620-01026	13-21
50135-1500K	13-21	802T2-F94F9-40	13-7	80620-01027	13-23
801T1-50000	13-23	80410-T1130	13-7	80620-01027	13-19
801T1-50000	13-19	80410-T1130	13-25	80620-01037	13-23
801W1-80J60	13-27	80410-T1130	13-29	80620-01037	13-19
801W1-80J60	13-31	80410-T1130	13-21	80620-03010	13-23
801Z1-02000	13-25	80420-T1130	13-7	80620-03010	13-21
801Z1-02000	13-29	80420-T1130	13-25	80620-03011	13-19
802G0-T1900	13-5	80420-T1130	13-29	80620-03011	13-23
802H1-F94F9-40	13-23	8043K-01100	13-7	80620-03031	13-19
802H1-F94F9-40	13-19	8043K-01100	13-25	80620-03031	13-23
802L2-P46F9-42	13-7	8043K-01100	13-29	80620-03031	13-29
802L2-P46F9-42	13-23	8044B-01100	13-27	80620-03039	13-25
802L2-P46F9-42	13-19	8044B-01100	13-21	80620-03039	13-21
802L2-T63F9-40	13-25	8044K-01100	13-7	80620-07011	13-7
802L2-T63F9-40	13-21	8044K-01100	13-25	80620-08010	13-25
802N0-T46P4-61	13-25	8044K-01100	13-29	80620-08010	13-29
802N0-T46P4-61	13-29	8044R-01100	13-27	80620-23008	13-25
802N2-F94F9-40	13-7	8044R-01100	13-21	80620-23008	13-29
802N2-F94T6-3S	13-25	8044W-01100	13-27	81300-0P014	13-7
802N2-F94T6-3S	13-29	8044W-01100	13-21	81301-BP014	13-23
802N2-P46F9-41	13-25	8044Y-01100	13-27	81301-BP014	13-19
802N2-P46F9-41	13-29	8044Y-01100	13-21	99400-00001	13-21
802N2-P46F9-42	13-23	80620-01002	13-7	99400-00001	13-27
802N2-P46F9-42	13-19	80620-01003	13-7	DSSD-R035	13-35

15-4 KL701

PART NO	PAGE	PART NO	PAGE	PART NO	PAGE
DSSD-R040	13-33	FTF39-20100-02	13-15	FTF66-11410	13-15
DU03-5030	13-35	FTF39-HP100	13-23	FTF66-11420	13-15
DU04-0020	13-33	FTF39-HP100	13-19	FTF66-11600	13-15
FT116-11300	13-13	FTF39-HP200	13-23	FTF66-11603	13-15
FT116-11400	13-13	FTF39-HP200	13-19	FTF66-11604	13-15
FT116-11500	13-13	FTF39-HP300	13-19	FTF66-70100	13-15
FT116-11700	13-11	FTF39-HP400	13-19	FTF66-70200	13-15
FT116-11801	13-13	FTF39-HP500	13-23	FTF66-H0000	13-19
FT116-G1000	13-11	FTF39-HP500	13-19	FTF66-H0101	13-19
FT117-11100	13-13	FTF39-HP600	13-23	FTF66-H0102	13-25
FT117-11200	13-13	FTF39-HP600	13-19	FTF66-H0102	13-29
FT117-20100	13-17	FTF39-HP700	13-19	FTF66-H0103	13-25
FT117-20200	13-17	FTF39-HP800	13-23	FTF66-H0103	13-29
FT117-20300	13-17	FTF39-HP800	13-19	FTF66-H0104	13-25
FT303-91000	13-27	FTF40-62101	13-25	FTF66-H0104	13-29
FT303-91000	13-31	FTF40-62101	13-21	FTF66-HP100	13-23
FT613-11600-02	13-11	FTF40-62102	13-7	FTF66-HP100	13-29
FTBU3-82300-01	13-5	FTF40-62102	13-25	FTF66-HP200	13-23
FTE44-11605	13-15	FTF40-62102	13-21	FTF66-HP200	13-29
FTE44-H0036	13-25	FTF41-HP700	13-23	FTQU2-10200	13-5
FTE44-H0036	13-29	FTF66-11015	13-15	FTQU2-10300	13-5
FTF34-53100	13-15	FTF66-11029	13-17	FTQU2-10301	13-5
FTF35-52101	13-15	FTF66-11100-01	13-15	FTQU2-11003	13-5
FTF35-55100-01	13-15	FTF66-11200	13-15	FTQU6-10000	13-5
FTF39-11101	13-15	FTF66-11300	13-15	FTQU6-10100	13-5

PART NO	PAGE	PART NO	PAGE	PART NO	PAGE
IA70-3565	13-35	WEWR-0070	13-33		
IA70-4055	13-33	WEWR-0070	13-35		
IC70-3565	13-35	ZTBU5-72301	13-7		
IC70-4055	13-33	ZTBU5-7800S-01	13-7		
LK01-0203	13-11	ZTBU5-7810N	13-7		
NTP0-U100-C	13-33	ZTBU5-78200-01	13-7		
NTP0-U100-C	13-35	ZTBU5-H700	13-7		
OC70-8037	13-33				
OC70-8040	13-35				
OR1B-G027	13-33				
OR1B-G027	13-35				
OR1B-G065	13-33				
OR1B-P060	13-35				
PA70-2746	13-33				
PA70-2746	13-35				
PI70-2746	13-33				
PI70-2746	13-35				
TRBR-0070	13-33				
TRBR-0070	13-35				
UPIS-I035	13-35				
UPIS-I040	13-33				
UPOS-I070	13-33				
UPOS-I070	13-35				
UPSK-Y035	13-35				
UPSK-Y040	13-33				

 

MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....



15. INDEX 2

PART NAME INDEX	15-7
-----------------------	------

15-8 KL701

PART NAME	PAGE	PART NAME	PAGE
NUMERICAL			
4in1 Bucket Ass'y, 78" (NO. 1~23)	13-7	Cable Tie, 270mm Black	13-9
B		Cable Tie, 270mm Black	13-27
Backup, Ring, 70x60x3	13-33	Cable Tie, 270mm Black	13-21
Backup, Ring, 70x60x3	13-35	Cap, Outer, Ø70x80x37L	13-33
Bar Gauge Long, Ø12-1360L	13-15	Cap, Outer, Ø70x80x40L	13-35
Bar Gauge Short, Ø12.7-360L	13-15	Clamp	13-7
Bolt Ass'y, M8-P1.25	13-15	Clamp	13-25
Bolt-Sem's, M10x1.5P 25L	13-25	Clamp	13-25
Bolt-Sem's, M10x1.5P 25L	13-29	Clamp	13-25
Bolt-Sem's, M8x1.25P 35L	13-23	Clamp	13-29
Bolt-Sem's, M8x1.25P 35L	13-29	Clamp	13-21
Boom Cylinder Ass'y LH, Ø40-Ø70-905L (ST572)	13-19	Clamp	13-21
Boom Cylinder Ass'y LH, Ø40-Ø70-905L (ST572)	13-23	Cover	13-19
Boom Cylinder Ass'y RH, NO.0~15	13-33	Cover, Inner, Ø70x35x65L	13-35
Boom Cylinder Ass'y RH, Ø40-Ø70-905L (ST572)	13-19	Cover, Inner, Ø70x40x55L	13-33
Boom Cylinder Ass'y RH, Ø40-Ø70-905L (ST572)	13-23	Cover, Pipe	13-7
Boom Cylinder Ass'y, NO.1~17	13-35	Cover, Pipe	13-25
Boom W.A	13-15	Cover, Pipe	13-29
Bucket Cylinder Ass'y, Ø35-Ø70-1080L (ST405)	13-19	Cover, Valve	13-25
Bucket Cylinder Ass'y, Ø35-Ø70-1080L (ST405)	13-23	Cover, Valve	13-29
Bucket W.A - ISO (82")	13-5	Cross Bar	13-13
Bushing, DU, 35x39x30	13-35	Cylinder, 30x50x415L(ST180)	13-7
Bushing, DU, 40x44x20	13-33	D	
C		Dust Cap, 1/2" Black Female	13-7
		Dust Cap, 1/2" Blue Female	13-21
		Dust Cap, 1/2" Blue Male	13-27

PART NAME INDEX 15-9

PART NAME	PAGE	PART NAME	PAGE
Dust Cap, 1/2" Red Female	13-21	H	
Dust Cap, 1/2" Red Male	13-27	Haness Ass'y	13-31
Dust Cap, 1/2" White Female	13-21	Haness Ass'y	12-27
Dust Cap, 1/2" White Male	13-27	Hex Bolt, M10-P1.5 35L	13-5
Dust Cap, 1/2" Yellow Female	13-21	Hex Bolt, M16-P2.0	13-5
Dust Cap, 1/2" Yellow Male	13-27	Hex Bolt, M16-P2.0 90L	13-5
Dust Cap, 1/2, Black	13-25	Hex-Bolt, M12-1.75P 35L	13-11
Dust Cap, 1/2, Black	13-29	Hex-Bolt, M12-P1.75-40L	13-15
Dust Plug, 1/2" Black Male	13-7	Hex-Bolt, M14-P2.0-100L	13-15
Dust Plug, 1/2" Male Black	13-25	Hex-Bolt, M14-P2.0-110L	13-15
Dust Plug, 1/2" Male Black	13-29	Hex-Bolt, M16-1.5P 40L	13-11
Dust, SDR 35x43x5/6.5	13-35	Hex-Bolt, M6xP1.0-120L	13-25
Dust, SDR 40x48x5/6.5	13-33	Hex-Bolt, M6xP1.0-120L	13-29
E		Hex-Bolt-HT, M14 x P1.5 x L50	13-13
Electric Lever	13-27	Hex-Bolt-HT, M14 x P1.5 x L60	13-13
Electric Lever	13-31	Hex-Bolt-HT, M16 x P2.0 x L50	13-13
F		Hex-Nut Lock, M12-1.75P	13-11
Foot Plate	13-15	Hex-Nut, M6x1.0P	13-25
Front Bucket W.A, 78", V-hump Type	13-7	Hex-Nut, M6x1.0P	13-29
G		Hex-Nut, M8 x P1.25	13-17
Grill Kit, NO.2~11	13-11	Hex-Nut-HT, M16 x P2.0	13-13
Grill, Inner	13-11	Hose, 4(3/4-16UNF)-4(3/4-16UNF) 350L(3/8)	13-7
Grill, Outer	13-11	Hose, 4(3/4-16UNF)-4(3/4-16UNF) 550L(3/8)	13-7
Grip-Rubber	13-5	Hose, 904(3/4-16UNF)-1(PT1/2) 1700L(3/8)	13-7
		Hyd Hose, 4(3/4-16UNF)-2(3/4-16UNF) 1100L(3/8)	13-19
		Hyd Hose, 4(3/4-16UNF)-2(3/4-16UNF) 450L(3/8)	13-19
		Hyd Hose, 4(3/4-16UNF)-2(3/4-16UNF) 850L(3/8)	13-21

15-10 KL701

PART NAME	PAGE	PART NAME	PAGE
H		Link W.A-LEVEL	13-15
Hyd Hose, 4(3/4-16UNF)-2(3/4-16UNF)-1700L(3/8)	13-21	Link W.A-Quick	13-5
Hyd Hose, 4(3/4-16UNF)-4(3/4-16UNF) 1050L(3/8)	13-19	Link-Quick	13-5
Hyd Hose, 4(3/4-16UNF)-4(3/4-16UNF) 450L(3/8)	13-19		
Hyd Hose, 4(3/4-16UNF)-4(3/4-16UNF) 850L(3/8)	13-21	M	
Hyd Hose, 4(3/4-16UNF)x2(3/4-16UNF) 1100L(3/8)	13-23	Mounting Frame W.A, LH	13-13
Hyd Hose, 4(3/4-16UNF)x2(3/4-16UNF) 1100L(3/8)	13-29	Mounting Frame W.A, RH	13-13
Hyd Hose, 4(3/4-16UNF)x2(3/4-16UNF) 1700L(3/8)	13-25		
Hyd Hose, 4(3/4-16UNF)x2(3/4-16UNF) 450L(3/8)	13-23	N	
Hyd Hose, 4(3/4-16UNF)x2(3/4-16UNF) 850L(3/8)	13-23	Nipple, 3/4-16UNF, Hose H-Type	13-19
Hyd Hose, 4(3/4-16UNF)x4(3/4-16UNF) 1050L(3/8)	13-23	Nipple, 3/4-16UNF, Hose x 3/4-16UNF, Hose	13-7
Hyd Hose, 4(3/4-16UNF)x4(3/4-16UNF) 450L(3/8)	13-23	Nipple, 3/4-16UNF, Hose x PF3/8, O-ring 90°	13-7
Hyd Hose, 4(3/4-16UNF)x4(3/4-16UNF) 850L(3/8)	13-23	Nipple, 3/4-16UNF, Hose x PF3/8, O-Ring 90°	13-19
Hyd Hose, 904(3/4-16UNF)x2(3/4-16UNF) 1500L(3/8)	13-25	Nipple, 3/4-16UNF, Hose x PT1/2 90°	13-21
Hyd Hose, 904(3/4-16UNF)x2(3/4-16UNF) 1500L(3/8)	13-29	Nipple, 3/4-16UNF, T-Hose	13-7
Hyd Hose, 904(3/4-16UNF)x454(3/4-16UNF)1070L(3/8)180°	13-25	Nipple, Grease, 1/8"	13-5
Hyd Hose, 904(3/4-16UNF)x454(3/4-16UNF)1070L(3/8)180°	13-29	Nipple, H-TYPE 3/4-16UNF, Hose	13-23
Hydraulic piping Kit, NO.1~26	13-19	Nipple, PF1/4(O-Ring)x1/2-20UNF(90°Elbow)	13-25
		Nipple, PF1/4(O-Ring)x1/2-20UNF(90°Swivel)	13-25
L		Nipple, PF1/4(O-Ring)x1/2-20UNF(90°Elbow)	13-29
Lever W.A-Quick	13-5	Nipple, PF1/4(O-Ring)x1/2-20UNF(90°Swivel)	13-29
Link	13-15	Nipple, PF3/8 Copperx3/4-16UNF (69L)	13-25
Link W.A	13-15	Nipple, P F3/8, Copperx3/4-16UNF, Hose	13-25
Link W.A, LH	13-15	Nipple, PF3/8 Copperx3/4-16UNF (69L)	13-29
Link W.A, LH	13-15	Nipple, PF3/8, Copperx3/4-16UNF, Hose	13-25
Link W.A, RH	13-15	Nipple, PF3/8, Copperx3/4-16UNF, Hose	13-29
Link W.A, RH	13-15	Nipple, P F3/8, Copperx3/4-16UNF, Hose	13-29

PART NAME INDEX 15-11


PART NAME	PAGE	PART NAME	PAGE
Nipple, PF3/8, O-Ring x 3/4-16UNF, Hose	13-19	Packing, U, OSI 70x60x6	13-35
Nipple, PF3/8, O-Ring x 3/4-16UNF, Hose 90°	13-23	Packing, U, SKY 35x45x6	13-35
Nipple, PF3/8, O-Ring x 3/4-16UNF	13-23	Packing, U, SKY 40x50x6	13-33
Nipple, PT1/2x3/4-16UNF(90° ELBOW)	13-25	Pin W.A, Ø25-110L	13-7
Nut, 1-14UN	13-33	Pin W.A, Ø25-122L	13-7
Nut, 1-14UN	13-35	Pin W.A, Ø25-138L	13-7
Nut-Self Lock, M12-P1.75	13-15	Pin W.A-Quick	13-5
Nut-Self Lock, M14-P2.0	13-15	Pin, Ø30-155L	13-5
Nut-Selflock, M16-P2.0	13-5	Pin, Ø12	13-11
Nut-Selflock, M30-P2.0	13-5	Pin, Ø30-111L	13-17
Nut-Selflock, M10-P1.5	13-5	Pin, Ø30-133L	13-17
Nut-Selflock, M24-P1.5	13-7	Pin, Ø30-139L	13-17
Nyloc Bolt, M10-P1.5-25L	13-17	Pin, Ø30-140L	13-17
O		Pin, Ø30-145L	13-17
O-Ring, 1BG27	13-33	Pin, Ø30-146L	13-17
O-Ring, 1BG27	13-35	Pin, Ø34-164.5L	13-17
O-Ring, 1BG65	13-33	Pipe Ass'y	13-19
O-Ring, 1BP14	13-23	Pipe Ass'y	13-19
O-Ring, 1BP14	13-19	Pipe Ass'y	13-19
O-Ring, 1BP60	13-35	Pipe Ass'y	13-19
O-ring, P14	13-7	Pipe Ass'y	13-19
P		Pipe Ass'y	13-19
Packing, U, ISI 35x45x6	13-35	Pipe Ass'y, Ø12	13-7
Packing, U, ISI 40x50x6	13-33	Pipe Ass'y	13-29
Packing, U, OSI 70x60x6	13-33	Pipe Ass'y	13-29

15-12 KL701

PART NAME	PAGE	PART NAME	PAGE
P		R	
Pipe Ass'y	13-23	Rear Bucket W.A-ISO Euro, 78"	13-7
Pipe Ass'y	13-23	Rear Frame W.A, LH	13-13
Pipe Ass'y	13-23	Rear Frame W.A, RH	13-13
Pipe Ass'y	13-23	Ring-Pin, Ø10	13-17
Pipe Ass'y	13-23	Rod Ass'y	13-33
Pipe Ass'y	13-23	Rod Ass'y	13-35
Pipe Ass'y	13-23		
Piston, Ø70x27x46L	13-33	S	
Piston, Ø70x27x46L	13-35	Safety Bar W.A	13-15
Plain-Washer	13-15	Seal Kit Head, NO.4~9	13-33
Plain-Washer, M12	13-11	Seal Kit Head, NO.4~9	13-35
Plate	13-15	Seal Kit Piston, NO.11~14	13-35
Plate, Solenoid Valve	13-25	Seal Kit Piston, NO.11~15	13-33
Plate, Solenoid Valve	13-29	Sem's Bolt, M8-P1.25 35L	13-7
		Sem's Bolt, M8-P1.25-35L	13-19
Q		Snap-Ring, C-Type, Ø30	13-17
Quick Attach Frame	13-5	Space	13-13
Quick Attachment Ass'y - Euro Hitch Type(No.1~16)	13-5	Spring	13-5
Quick Coupler, PT1/2 Female	13-25	Spring	13-5
Quick Coupler, PT1/2 Female	13-29	Spring, Ø1.5	13-11
Quick Coupler, PT1/2 Male	13-25	Spring-Pin, Ø4	13-11
Quick Coupler, PT1/2 Male	13-29	Spring-Washer, M16	13-11
Quick Coupler, PT1/2" Male	13-21	Stand Spring	13-15
Quick Coupler, PT1/2" Female	13-7	Stand W.A	13-15
Quick Coupler, PT1/2" Male	13-7	Stand-Lock	13-15

PART NAME INDEX 15-13

PART NAME	PAGE	PART NAME	PAGE
T		Washer-Spring, M16	13-13
Teflon Tape	13-21	Wearing, WR 70x65x15	13-33
Tefron Tape	13-27	Wearing, WR70x65x15	13-35
Top Post W.A, LH	13-17	Webbing, 90x1500L	13-27
Top Post W.A, RH	13-17	Webbing, 90x1500mm	13-21
Tube Ass'y	13-33		
Tube Ass'y	13-35		
V			
Valve, DUKIN	13-25		
Valve, DUKIN	13-29		
Valve, Relife	13-19		
Valve, Relife	13-23		
W			
Washer-Copper, 3/8"	13-25		
Washer-Copper, 3/8"	13-29		
Washer-Pin, Ø30.5-Ø50-3.2T	13-17		
Washer-Plain, M10	13-17		
Washer-Plain, M14	13-13		
Washer-Plain, M16	13-5		
Washer-Plain, M8	13-17		
Washer-Spring, M10	13-17		
Washer-Spring, M10	13-25		
Washer-Spring, M10	13-29		
Washer-Spring, M14	13-13		
Washer-Spring, M16	13-5		

 

MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....



15. INDEX 3

CONTENTS INDEX	15-15
----------------------	-------

15-16 KL701

NUMERICAL

4IN1 BUCKET ASSEMBLY..... 13-6

A

AUXILIARY HYDRAULIC DEVICE (OPTION) 13-28

AUXILIARY HYDRAULIC VALVE PACKAGECAUTION..... 11-2

B

BACKFILLING/BACKGRADING..... 6-4

BOOM ASSEMBLY..... 13-14

BOOM CYLINDER ASSEMBLY-LH..... 13-30

BOOM CYLINDER ASSEMBLY-RH..... 13-32

BOOM HYDRAULIC ASSEMBLY..... 13-18

BOOM HYDRAULIC ASSEMBLY (4IN1 STD)..... 13-22

BUCKET CYLINDER ASSEMBLY..... 13-34

BUCKET, QUICK ATTACHMENT..... 13-4

C

CARE OF SAFETY DECALS..... 2-2

COLD WEATHER OPERATION..... 6-3

CONTENTSINDEX..... 15-15

CONTROLLED RATE OF LOADER FUNCTIONS..... 6-4

D

DECALS..... 13-36

DUMPING BUCKET..... 6-3

F

FRONT COUNTERWEIGHT..... 5-3

FRONT GRILL ASSEMBLY (OPTIONAL)..... 13-10

G

GENERAL INFORMATION..... 13-2

H

HYDRAULIC SYSTEM SCHEMATIC..... 11-2

I

ILLUSTRATIONS..... 13-2

INITIAL LOADER OPERATION..... 6-3

INTRODUCTION..... 4-2

L

LOADER HYDRAULIC CONTROLS..... 6-5

LOADER INSTALLATION..... 14-2

LOADER MOUNTING..... 8-2

LOADER OPERATION..... 6-2

 
LOADER REMOVAL..... 7-2

LOADER SPECIFICATIONS..... 3-2

LOADING BUCKET..... 6-3

LUBRICATION AND MAINTENANCE..... 9-2

M



CONTENTS INDEX 15-17

MOUNTING FRAME ASSEMBLY 13-12

P

PART NAME INDEX 15-7

PART NO. INDEX 15-1

PRECAUTIONARY NOTES 6-2

R

REAR COUNTERWEIGHT 5-2

ROPS SYSTEM 5-2

S

SAFETY 1-2

SAFETY DECAL LOCATIONS 2-2

SAFETY DECALS 2-2

SAFETY PRECAUTIONS 1-2

SCRAPING 6-4

SERIAL NUMBER AND LOCATION 4-2

T

TIRE INFLATION 5-3

TORQUE TIGHTENING CHART 1 12-2

TORQUE TIGHTENING CHART 2 12-3

TRACTOR HYDRAULIC SYSTEM 5-2

TRACTOR PREPARATION 5-2

TRACTOR TIRES 5-3

 
TRANSPORTING A LOADED BUCKET 6-4

TROUBLESHOOTING 10-2

W

WARRANTY REGISTRATION 4-2

WHEEL TREAD SETTINGS 5-3



MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....