 


ILLUSTRATED PARTS LIST

KUBOTA

MODEL D1105-BG2-SAE-1
D1105-BG2-SAE-2

DIESEL ENGINE

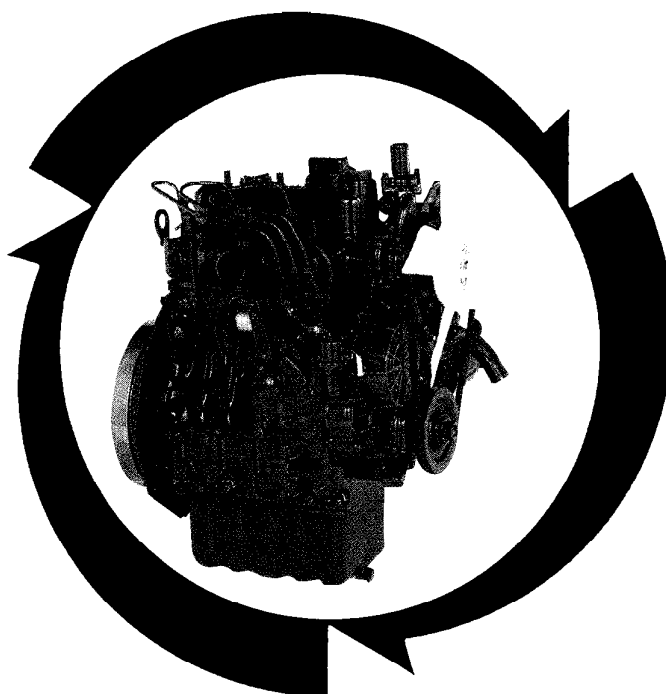

Kubota

97898-64290
JUN. 2004

NOTICE

This Parts List is for the following purposes.


1. When ordering parts, check with this Parts List to confirm the part number and the name of parts.
2. When making repairs, refer to the illustrations in this Parts List.
3. This Parts List is subject to change without notice.

ENGINE	
MODEL	CODE No.
D1105-BG2-SAE-1	17592-00000
D1105-BG2-SAE-2	17592-11000

INSTRUCTIONS

0102 PISTON AND CRANKSHAFT [B]

 ⑩ → S.No. ; A: ≤ 15000, B: 14000 to 15000

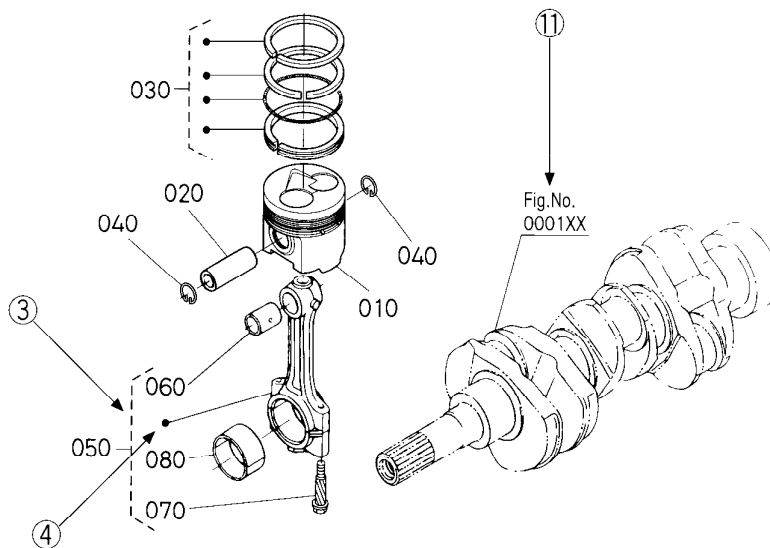

REF. No	PART No.	PART NAME	Q'TY / S.No.		I.C.	REMARKS
			A	B		
010	15800-0000-0	PISTON	1 <=15000	1 <=15000		[Example-1]
010	15800-0000-2	PISTON	1 >=15001	1 >=15001		
020	15800-1000-0	PIN, PISTON	1 <=15000	1 <=15000		
020	15800-1000-2	PIN, PISTON	1 >=15001	1 >=15001		[Example-2]
030	15800-2000-0	ASSY PISTON RING	1 <=15000	1 <=15000		
030	15830-2000-0	ASSY PISTON RING	1 >=15001	1 >=15001		[Example-3]

A:XXXX, B:XXXX

- ① Fig. No. Represents No. corresponding to each group name.
- ② Specifications The types and destinations of sister models are indicated. These indications are given to tell their relevant pages in this book.
(for sister models)
- ③ Components The components of an assembly are identified by a bracket of dotted lines.
- ④ Point Indicates that the parts is not sold independently.
The assembly (Ref.No.050) containing the part needs to be ordered.
- ⑤ REF. No. Reference numbers are assigned to parts in the illustration. The code number of a part in the illustration can be identified by referring to the same reference number in the parts list.
- ⑥ Model name The name of the basic model is indicated in this column. Other applicable models are indicated on the "REMARKS" column ⑨.
- ⑦ S. No. Indicates a group of serial numbers to which a design change is applied.
(serial No.)

Engine Serial No. ... Old Serial No.

654321 ... 6 digits all in numerals.

New Serial No.

Y A 4321

↑ ↑ ↑ Lower 4 digits in numerals.

↑ 5th digit ... Alphabetical letter (Month of manufacture).

Alphabetical letter	A,B	C,D	E,F	G,H	J,K	L,M	N,P	Q,R	S,T	U,V	W,X	Y,Z
Month	1	2	3	4	5	6	7	8	9	10	11	12

↑ 6th digit ... Alphabetical letter or numerals (Year of manufacture).

Alphabetical letter or numerals	W	X	Y	1	2	3	4	5	6	7	8	9	A	B	C
Year	'98	'99	2000	'01	'02	'03	'04	'05	'06	'07	'08	'09	'10	'11	'12

- ⑧ I. C. Indicates the interchangeability of parts due to design change.
(interchangeability)

Example-1 ← indicates that a new part can replace an old part, but not vice versa.
15800-0000-0 is applicable to the first serial number to S. No. 15000.
15800-0000-2 is applicable to the first serial number and above.


Example-2 ≠ indicates that the new and old parts are not interchangeable.
15800-1000-0 is applicable to the first serial number to S. No. 15000.
15800-1000-2 is applicable to S. No. 15001 and above.

Example-3 ↔ indicates that the new and old parts are interchangeable. Both 15800-2000-0 and 15830-2000-0 are applicable to the first serial number and above.
- ⑨ REMARKS 1 In this column, enter other applicable model names, dimensions and other special items. The following symbols and abbreviations are used throughout this book.
29*12.00-15 ... Tire size sq.m m² sq.mm mm²
cu.m m³ cu.mm ... mm³ D ... Diameter L Length
- ⑩ REMARKS 2 The following expressions are used in NOTE for each group.
Machines' serial numbers are indicated as follows.
<=15000 Serial number below 15000.
>=15001 Serial number above 15001.
14000 to 15000 Serial number 14000 to 15000.
For some models, the above expressions may also be used REMARKS 1 ⑨.
- ⑪ Fig. No. Indicates the numbers of figures for the parts that are shown in virtual images.
(virtual images)
A figure number with XX means that there are two or more figures depending on the sister models.

CONTENTS

[D1105-BG2-SAE-1, D1105-BG2-SAE-2]	
0001	CRANKCASE 1
0002	OIL PAN 2
0003	CYLINDER HEAD 3
0004	GEAR CASE 4
0005	HEAD COVER 5
0006	OIL FILTER 6
0007	DIPSTICK AND GUIDE 7
0100	MAIN BEARING CASE 8
0101	CAMSHAFT AND IDLE GEAR SHAFT 9
0102	PISTON AND CRANKSHAFT 10
0103	FLYWHEEL 12
0105	FUEL CAMSHAFT AND GOVERNOR SHAFT 13
0180	IDLE APPARATUS 14
0201	STOP SOLENOID 15
0202	INJECTION PUMP 16
0204	GOVERNOR 17
0205	SPEED CONTROL PLATE 18
0206	NOZZLE HOLDER AND GLOW PLUG 19
0207	NOZZLE HOLDER (COMPONENT PARTS) 20
0300	FUEL FILTER 21
0301	FUEL PUMP (MECHANICAL) 22
0402	ALTERNATOR AND PULLEY 23
0403	ALTERNATOR (COMPONENT PARTS) 24
0404	STARTER 25
0405	STARTER (COMPONENT PARTS) 26
0406	OIL SWITCH AND PLUG 27
0500	WATER FLANGE AND THERMOSTAT 28
0501	WATER PUMP 29
0502	RADIATOR 30
050301	WATER PIPE 31
050302	WATER PIPE 32
0504	FAN 33
0600	VALVE AND ROCKER ARM 34
0601	INLET MANIFOLD 35
0602	EXHAUST MANIFOLD 36
0603	AIR CLEANER 37
0604	INLET PIPE 38
0605	MUFFLER 39
0800	GLOW LAMP AND TIMER 40
0801	STARTER SWITCH 41
0803	PULLEY SHAFT (STUB SHAFT) [OPTION] 42
0804	ENGINE STAND [OPTION] 43
080801	ACCESSORIES AND SERVICE PARTS 44
080802	ACCESSORIES AND SERVICE PARTS 45
0809	LABEL AND OPERATOR'S MANUAL 46
■	NUMERICAL INDEX 47

 000100 CRANKCASE

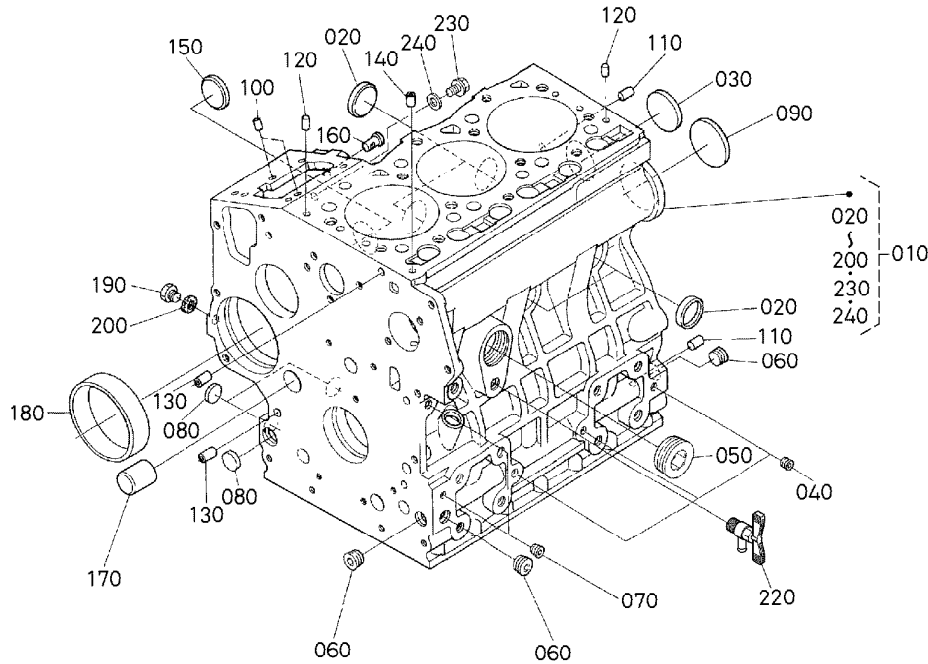

1G347-099-10

OLD




16615-800-11

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2


REF.No.	PART No.	PART NAME	Q'TY/S.No.		I.C.	REMARKS
			A	B		
010	16684-0101-8	COMP.CRANKCASE	1 <=429999	-		
010	1E021-0101-7	COMP.CRANKCASE	1 >=5A0001	-	≠	
010	1E021-0101-8	COMP.CRANKCASE	1 >=6J0001	-	←	
010	1E156-0101-0	COMP.CRANKCASE	1 >=9J0001	-	←	#
010	1E156-0101-2	COMP.CRANKCASE	1 >=9Y0001	-	←	#
010	16684-0101-8	COMP.CRANKCASE	-	1 <=429999		
010	1E021-0101-7	COMP.CRANKCASE	-	1 >=5A0001	≠	
010	1E021-0101-8	COMP.CRANKCASE	-	1 >=6J0001	←	
010	1E156-0101-0	COMP.CRANKCASE	-	1 >=9J0001	←	#
010	1E021-0101-8	COMP.CRANKCASE	-	1 >=9L0001	≠	#
020	15451-9627-0	CAP,SEALING	4	4		
030	15221-0349-0	CAP,SEALING	1	1		
040	15261-9601-0	PLUG	3	3		
050	16683-9602-0	PLUG	1	1		
060	16241-9601-0	PLUG	3	3		
070	15521-9602-0	PLUG	2	2		
080	17391-9616-0	PLUG,EXPANSION	3	3		
090	16271-9616-0	PLUG,EXPANSION	1	1		
100	05012-00508	PIN,STRAIGHT	2	2		
110	05012-00814	PIN,STRAIGHT	2	2		
120	16221-9452-0	PIN,STRAIGHT	2 <=6V9999	2 <=6V9999		
120	05012-00610	PIN,STRAIGHT	2 >=6W0001	2 >=6W0001	←	#
130	15231-3396-0	PIN,PIPE	2	2		
140	16241-3365-0	PIN,PIPE	1	1		
150	16241-9626-2	PLUG	1	1		
160	16261-5628-0	PIN,START SPRING	1	1		
170	16282-9601-0	PLUG	1	1		
180	16271-5535-0	BUSH,GOVERNOR GEAR	1	1		
190	15221-3361-0	PLUG	1 <=9XZ999	1 <=9VZ999		#
190	16896-3361-0	PLUG	1 >=9Y0001	1 >=9W0001	←	#

↔ Interchangeable; ≠ not Interchangeable; ← new for old; → old for new

 000100 CRANKCASE

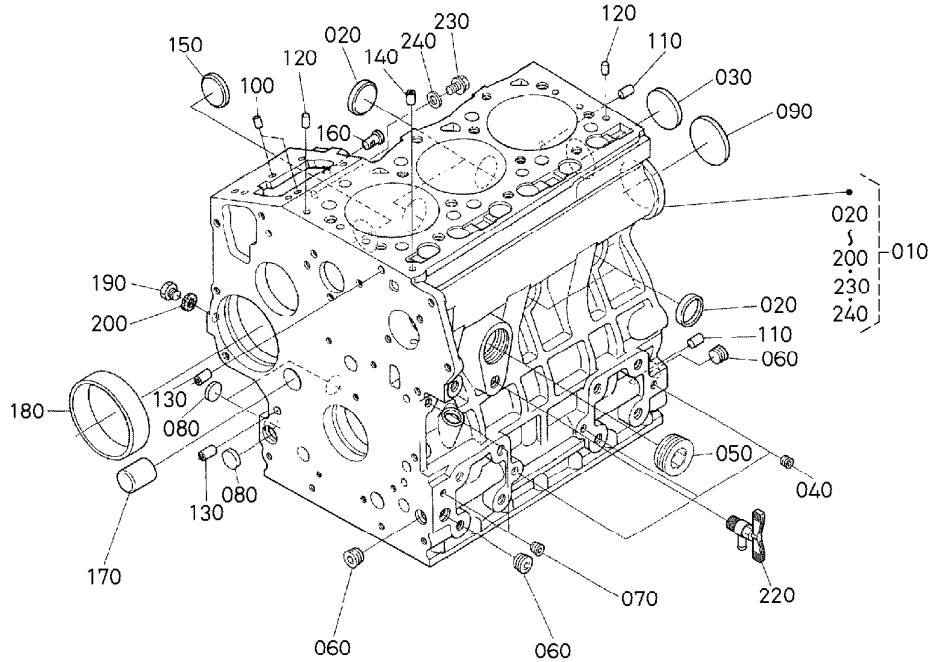

1G347-099-10

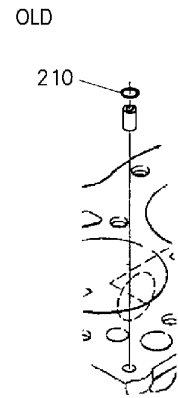 

16615-800-11


A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

[illegible]

↔ Interchangeable; ≠ not Interchangeable; ← new for old; → old for new

0004 GEAR CASE

#NOTE: ORDER BY REF. No. 010 (16239-0402-2) AND 140 (16264-0413-2) [SET]

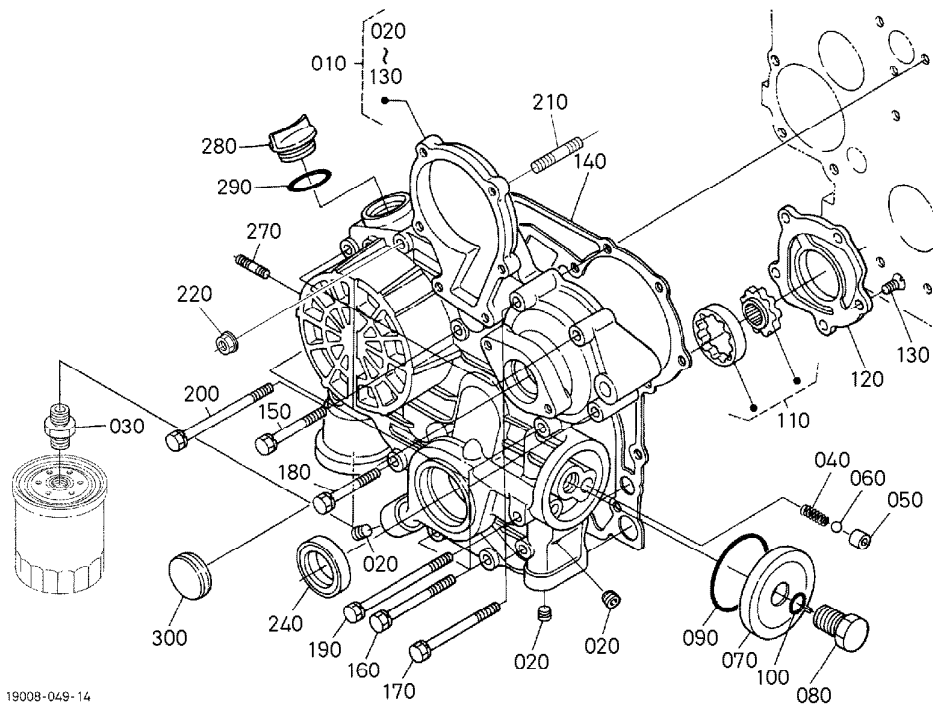 

19008-049-14


1G272-801-11

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2


REF. No.	PART No.	PART NAME	Q' TY/S. No.		I. C.	REMARKS
			A	B		
010	16259-0402-0	COMP. CASE, GEAR	≤509999	≤509999		#SEE NOTE
010	16239-0402-0	COMP. CASE, GEAR	≥5E0001	≥5E0001	↔	
010	16239-0402-2	COMP. CASE, GEAR	≥5G0001	≥5G0001	←	
020	16241-9602-0	PLUG	5	5		
030	15241-3229-0	JOINT, PIPE	1	1		
040	16241-3695-0	SPRING	1	1		
050	16241-3693-0	SEAT, VALVE	1	1		
060	07715-00201	BALL	1	1		
070	16259-3288-2	COVER	1	1		
080	16259-3290-0	BOLT	1	1		
090	04814-50600	O RING	1	1		
100	04814-00150	O RING	1	1		
110	16241-3507-0	ASSY ROTOR, OIL PUMP	1	1		
120	16259-3513-2	COVER, OIL PUMP	1	1		
130	16241-9312-0	SCREW, CSK-HD	5	5		
140	16264-0413-0	GASKET, GEAR CASE	1	1		
150	01023-50645	BOLT	3	3		
160	01023-60650	BOLT	4	4		
170	01023-50655	BOLT	2	2		
180	15841-9104-0	BOLT	1	1		
190	16241-9104-0	BOLT	2	2		
200	16259-9104-0	BOLT	1	1		
210	16245-9153-0	STUD	1	1		
220	02056-50060	NUT	≤7VZ999	≤7VZ999		#
220	02751-50060	NUT, FLANGE	≥7W0001	≥7W0001	←	#
230	04512-60060	WASHER, SPRING	≤7VZ999	≤7VZ999		#
240	16241-0421-2	SEAL, OIL	1	1		
250	04814-06100	RING	≤1X9999	≤1X9999		
260	04814-00150	RING	≤1X9999	≤1X9999		
270	16245-9154-0	STUD	2	2		

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

#NOTE:ORDER BY REF. No. 010(16239-0402-2) AND 140(16264-0413-2) [SET]

 

HEAD COVER

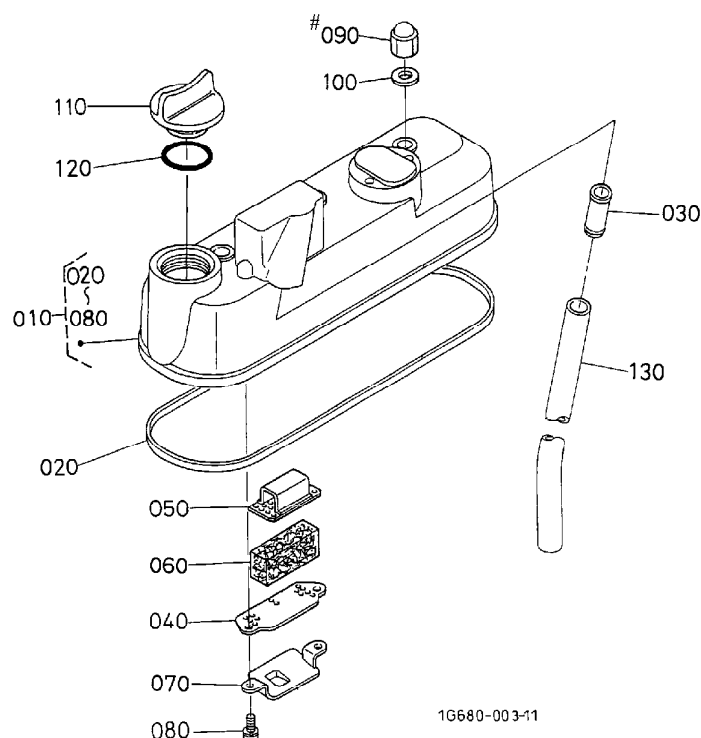 

1G680-003-11

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

[illegible]

 
$\Leftrightarrow$ Interchangeable; $\neq$ not interchangeable; $\leftarrow$ new for old; $\rightarrow$ old for new

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

[illegible]

6

0007 DIPSTICK AND GUIDE

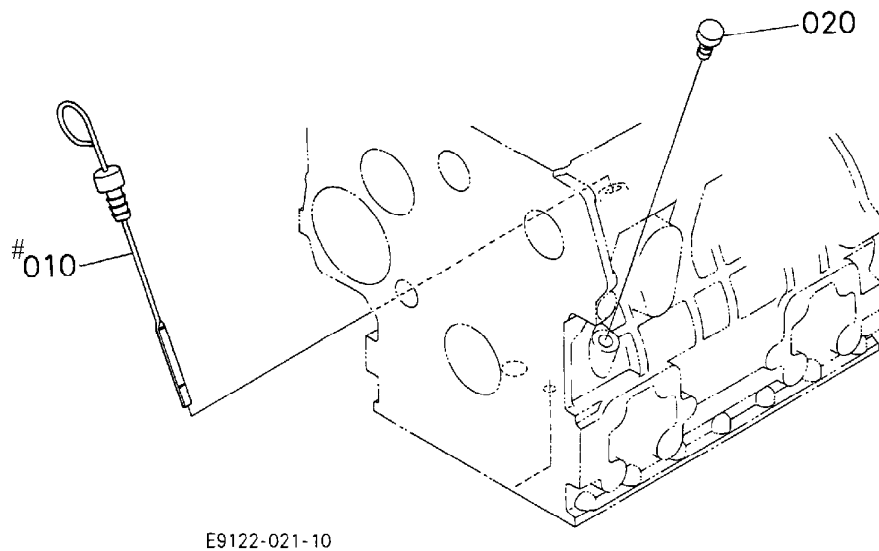


E9122-021-10

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

 0100 MAIN BEARING CASE

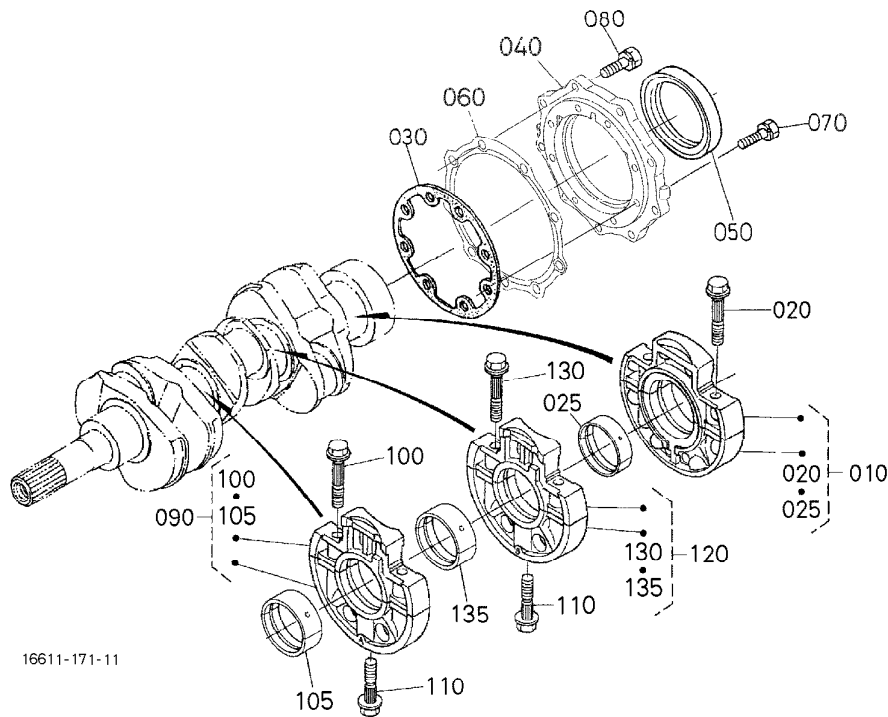


16611-171-11

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

REF. No.	PART No.	PART NAME	Q' TY/S. No.		I. C.	REMARKS
			A	B		
010	16292-0709-0	ASSY BRG. CASE, WHEEL	≤5X9999	≤5X9999		
010	16292-0709-3	ASSY BRG. CASE, WHEEL	≥5Y0001	≥5Y0001	←	
010	16292-0709-5	ASSY BRG. CASE, WHEEL	≥6L0001	≥6L0001	←	#
020	16241-0454-0	BOLT, BEARING CASE	2	2		
025	16292-2349-0	METAL, CRANKSHAFT	≤5X9999	≤5X9999		STD SET
025	16292-2349-3	METAL, CRANKSHAFT	≥5Y0001	≥5Y0001	←	STD SET
025	16292-2349-4	METAL, CRANKSHAFT	≥6L0001	≥6L0001	←	#STD SET
025	16292-2386-0	METAL, CRANKSHAFT	≤5X9999	≤5X9999		-0.20mm SET
025	16292-2386-3	METAL, CRANKSHAFT	≥5Y0001	≥5Y0001	←	-0.20mm SET
025	16292-2386-4	METAL, CRANKSHAFT	≥6L0001	≥6L0001	←	#-0.20mm SET
025	16292-2387-0	METAL, CRANKSHAFT	≤5X9999	≤5X9999		-0.40mm SET
025	16292-2387-3	METAL, CRANKSHAFT	≥5Y0001	≥5Y0001	←	-0.40mm SET
025	16292-2387-4	METAL, CRANKSHAFT	≥6L0001	≥6L0001	←	#-0.40mm SET
030	16264-0436-0	GASKET, BRG. CASE	1	1		
040	16241-0481-3	COVER, BEARING CASE	≤6K9999	≤6K9999		#
040	16241-0481-5	COVER, BEARING CASE	≥6L0001	≥6L0001	≠	#
050	16241-0446-0	SEAL, OIL	≤5V9999	≤5V9999		
050	16285-0446-0	SEAL, OIL	≥5W0001	≥5W0001	←	
060	16264-0482-0	GASKET	≤6K9999	≤6K9999		#
060	16264-0482-2	GASKET, CASE COVER	≥6L0001	≥6L0001	≠	#
070	01023-50625	BOLT	8	8		
080	01023-50620	BOLT	9	9		
090	16261-0704-0	ASSY BRG. CASE, MAIN	≤6K9999	≤6K9999		#
090	16261-0704-5	ASSY BRG. CASE, MAIN	≥6L0001	≥6L0001	←	#
100	16241-0454-0	BOLT, BEARING CASE	2	2		
105	16241-2348-0	METAL, CRANKSHAFT	1	1		STD SET
105	16241-2393-0	METAL, CRANKSHAFT	1	1		-0.20mm SET
105	16241-2394-0	METAL, CRANKSHAFT	1	1		-0.40mm SET
110	16241-0456-0	BOLT, BEARING CASE	2	2		

 ↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new




A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

[illegible]


$\leftrightarrow$ Interchangeable; $\neq$ not interchangeable; $\leftarrow$ new for old; $\rightarrow$ old for new

 010200 PISTON AND CRANKSHAFT

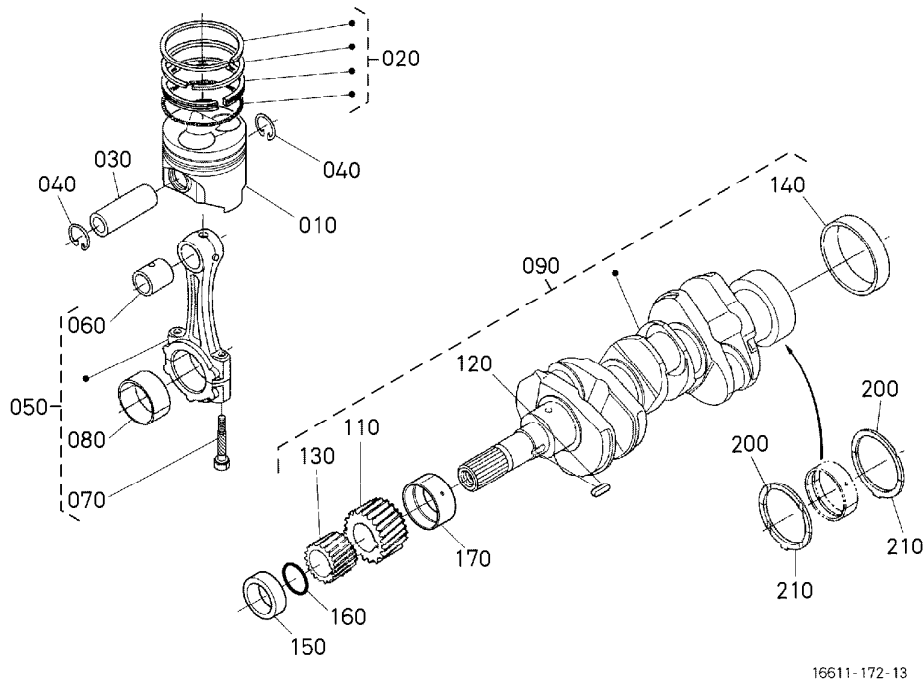

16611-172-13

 OLD

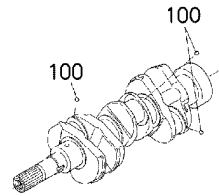


1G905-800-11

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

REF.No.	PART No.	PART NAME	Q'TY/S.No.		I.C.	REMARKS
			A	B		
010	16060-2111-0	PISTON	3 <=5F9999	3 <=5F9999		STD ORDER BY 010,020 NEW PARTS(SET)
010	16060-2111-3	PISTON	3 >=5G0001	3 >=5G0001	≠	STD
010	16060-2111-4	PISTON	3 >=5W0001	3 >=5W0001	←	STD
010	16060-2191-0	PISTON	3 <=5F9999	3 <=5F9999		+0.50mm ORDER BY 010,020 NEW PARTS(SET)
010	16060-2191-3	PISTON	3 >=5G0001	3 >=5G0001	≠	+0.50mm
010	16060-2191-4	PISTON	3 >=5W0001	3 >=5W0001	←	+0.50mm
020	16261-2105-0	ASSY PISTON RING	3 <=5F9999	3 <=5F9999		STD
020	16292-2105-0	ASSY PISTON RING	3 >=5G0001	3 >=5G0001	≠	STD
020	16261-2109-0	ASSY PISTON RING	3 <=5F9999	3 <=5F9999		+0.50mm
020	16292-2109-0	ASSY PISTON RING	3 >=5G0001	3 >=5G0001	≠	+0.50mm
030	16241-2131-0	PIN,PISTON	3	3		
040	16241-2133-0	CIR CLIP,PISTON PIN	6	6		
050	16241-2201-2	ASSY ROD,CONNECTING	3 <=6V9999	3 <=6V9999		
050	16700-2201-0	ASSY ROD,CONNECTING	3 >=6W0001	3 >=6W0001	←	
060	16241-2198-2	BUSH,PISTON PIN	3 <=7H2999	3 <=7H2999		
060	16700-2198-0	BUSH,PISTON PIN	1 >=7J0001	1 >=7J0001	←	
070	16241-2214-2	BOLT,CONNECTING ROD	6	6		
080	16241-2231-0	METAL,CRANKPIN	3	3		STD SET
080	16241-2297-0	METAL,CRANKPIN	3	3		-0.20mm SET
080	16241-2298-0	METAL,CRANKPIN	3	3		-0.40mm SET
090	16265-2301-3	COMP.CRANKSHAFT	1 <=9V2999	1 <=9V2999	#	
090	16065-2301-2	COMP.CRANKSHAFT	1 >=9W0001	1 >=9W0001	←	#
100	07715-00401	BALL	3 <=6X9999	3 <=6X9999		
110	16241-2411-0	GEAR,CRANK	1 <=9B2999	1 <=9B2999		
110	1A055-2411-0	GEAR,CRANKSHAFT	1 >=9C0001	1 >=9C0001	←	#
120	16271-9523-0	KEY	1	1		
130	16241-3563-0	GEAR,OIL PUMP DRIVE	1	1		
140	16241-2328-0	SLEEVE,CRANKSHAFT	1	1		
150	16241-2325-0	COLLAR,CRANKSHAFT	1	1		
160	04814-10280	O RING	1	1		

 ↔ Interchangeable; ≠ not Interchangeable; ← new for old; → old for new


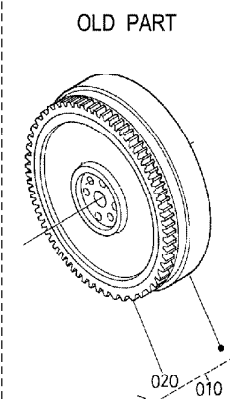


1G682-806-10

[illegible]

12

  010500 FUEL CAMSHAFT AND GOVERNOR SHAFT

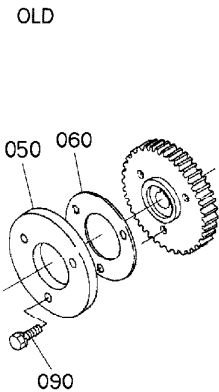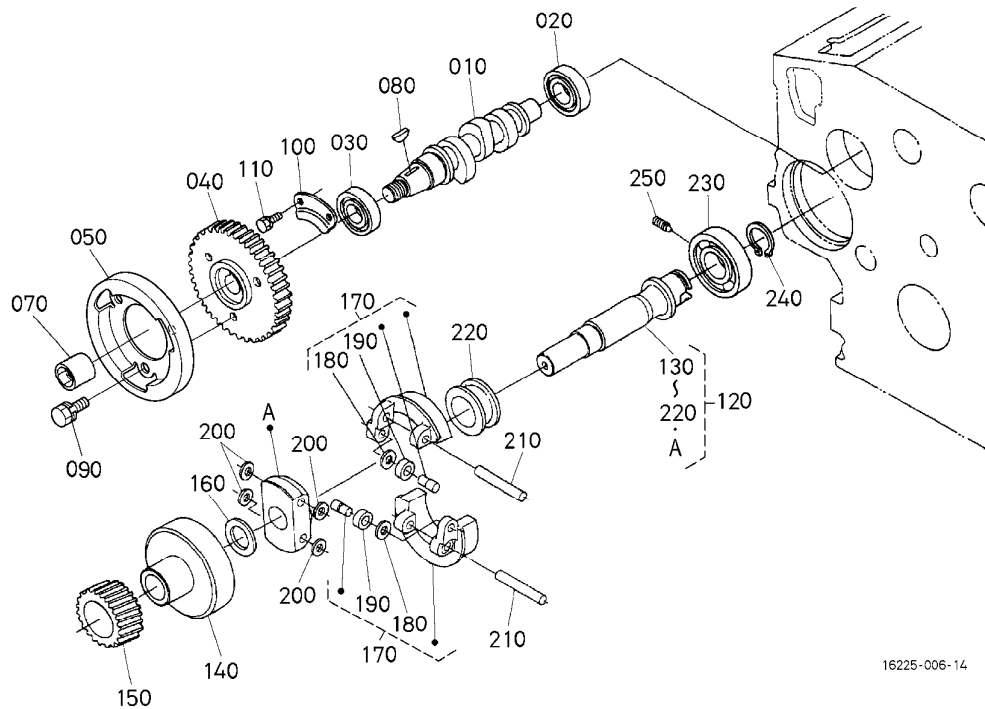

16225-006-14


1G978-824-11

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2


REF.No.	PART No.	PART NAME	Q'TY/S.No.		I.C.	REMARKS
			A	B		
010	16020-1617-0	CAMSHAFT,FUEL	1	1		
020	16261-9730-0	BEARING,BALL	1	1		
030	16261-9731-0	BEARING,BALL	1	1		
040	16272-5115-0	GEAR,INJECTION PUMP	1	1		
050	16241-5111-3	CAM.FUEL	<=9PZ999	<=9PZ999		#
050	16241-5111-4	CAM.FUEL	>=9Q0001	>=9Q0001	≠	#
060	16241-5119-0	WASHER	<=9PZ999	<=9PZ999		#
070	16241-9233-0	NUT	1	1		
080	16241-9523-0	KEY,WOODRUFF	1	1		
090	01023-50618	BOLT	3 <=9PZ999	3 <=9PZ999		#
090	01023-50612	BOLT	3 >=9Q0001	3 >=9Q0001	≠	#
100	16241-1632-0	STOPPER,FUEL.C/SHAFT	1	1		
110	01023-50616	BOLT	2	2		
120	16683-5501-0	ASSY SHAFT,GOVERNOR	1	1		
130	16683-5531-0	SHAFT,GOVERNOR	1	1		
140	16695-5539-0	HOLDER,GOVERNOR GEAR	1	1		
150	16683-5532-0	GEAR,GOVERNOR	1	1		
160	16683-5551-0	COLLAR,GOV.WEIGHT	1	1		
170	16683-5506-0	COMP.WEIGHT,GOVERNOR	2	2		
180	19818-5534-0	WASHER	2	2		
190	19818-5560-0	BEARING	2	2		
200	16683-5562-0	WASHER,GOVERNOR WEI.	4	4		
210	16241-5526-0	SHAFT,GOV. WEIGHT	2	2		
220	16683-5545-0	SLEEVE,GOVERNOR	1	1		
230	08102-06304	BEARING,BALL	1	1		
240	16683-5541-0	CIR-CLIP,GOV.SHAFT	1	1		
250	16241-5555-4	SCREW,SET	1	1		

↔ Interchangeable; ≠ not Interchangeable; ← new for old; → old for new

 OLD PART

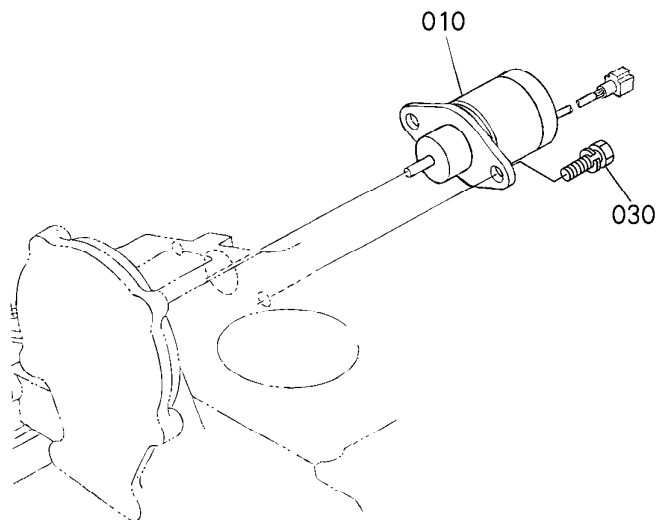

1G259-001-11

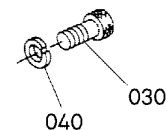 

1G383-808-10

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

This diagram shows an exploded view of a hydraulic pump assembly. The components are labeled with callout numbers:

- 010**: A small cylindrical component, likely a check valve or seal.
- 020**: A curved hose or pipe.
- 030**: A fitting or connector for the hose.
- 040**: A bracket or mounting plate for the hose.
- 050**: A bracketed group of parts including **120**, **130**, **140**, **150**, and **160**.
- 060**: A mounting plate or bracket.
- 070**: A base plate or housing.
- 080**: A small cylindrical component, likely a check valve or seal.
- 090**: A screw or bolt.
- 100**: A small cylindrical component, likely a check valve or seal.
- 110**: A small cylindrical component, likely a check valve or seal.
- 120**: A small cylindrical component, likely a check valve or seal.
- 130**: A small cylindrical component, likely a check valve or seal.
- 140**: A small cylindrical component, likely a check valve or seal.
- 150**: A small cylindrical component, likely a check valve or seal.
- 160**: A small cylindrical component, likely a check valve or seal.
- 170**: A small cylindrical component, likely a check valve or seal.

A legend in the top right corner indicates that the bracketed group **050** corresponds to the part number **120**.

1J905-800-11

[illegible]

$\Leftrightarrow$ Interchangeable; $\neq$ not interchangeable; $\leftarrow$ new for old; $\rightarrow$ old for new

This diagram shows an exploded view of a mechanical assembly. The components are labeled with numbers: 010, 020, 030, 040, 050, 060, 070, 080, 090, 100, 110, 120, 130, 140, 150, 160, 170, 180, 190, 200, 210, 220, 230, 240, 250, 260, 270, 280, 290, 300, 310, 320, 330, 340, 350, 360, 370, 380, 390, 400, 410, 420, 430, 440, 450, 460, 470, 480, 490, 500, 510, 520, 530, 540, 550, 560, 570, 580, 590, 600, 610, 620, 630, 640, 650, 660, 670, 680, 690, 700, 710, 720, 730, 740, 750, 760, 770, 780, 790, 800, 810, 820, 830, 840, 850, 860, 870, 880, 890, 900, 910, 920, 930, 940, 950, 960, 970, 980, 990. The assembly includes a central housing (010) with various internal components like a shaft (020), gears (030, 040), and bearings (050, 060). There are also external components like a bracket (070), a lever (080), and a handle (090). The diagram is a technical drawing showing the relative positions and assembly sequence of the parts.

1G680-034-12

Exploded view diagram of the front suspension assembly. The diagram shows the front wheel hub (170) and front wheel bearing (180) being installed onto the front wheel hub nut (170) and front wheel hub cap (180).

19094-805-10

[illegible]


$\Leftrightarrow$ Interchangeable; $\neq$ not interchangeable; $\leftarrow$ new for old; $\rightarrow$ old for new

Exploded view diagram of a 16-valve engine assembly. The diagram shows the cylinder head, intake manifold, and various components like valves, springs, and wiring. The diagram includes numerous callouts for parts and sub-assemblies, such as 010, 020, 030, 040, 050, 060, 070, 080, 090, 100, 110, 120, 130, 140, 150, 160, 170, and 180. It also shows a wiring harness with connectors labeled A and B.

1G662-006-35


[illegible]

 $\Leftrightarrow$ Interchangeable; $\neq$ not interchangeable; $\leftarrow$ new for old; $\rightarrow$ old for new

[illegible]

20

 0300 FUEL FILTER

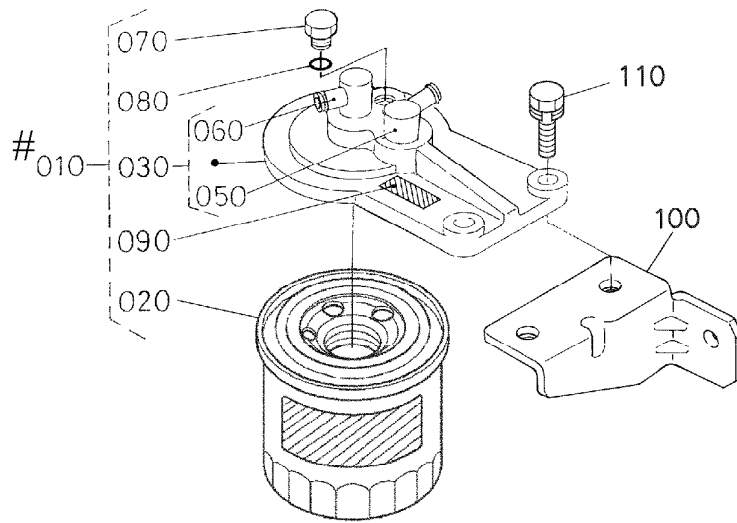



19093-020-12

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

  0301 FUEL PUMP (MECHANICAL)

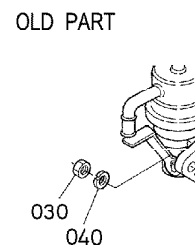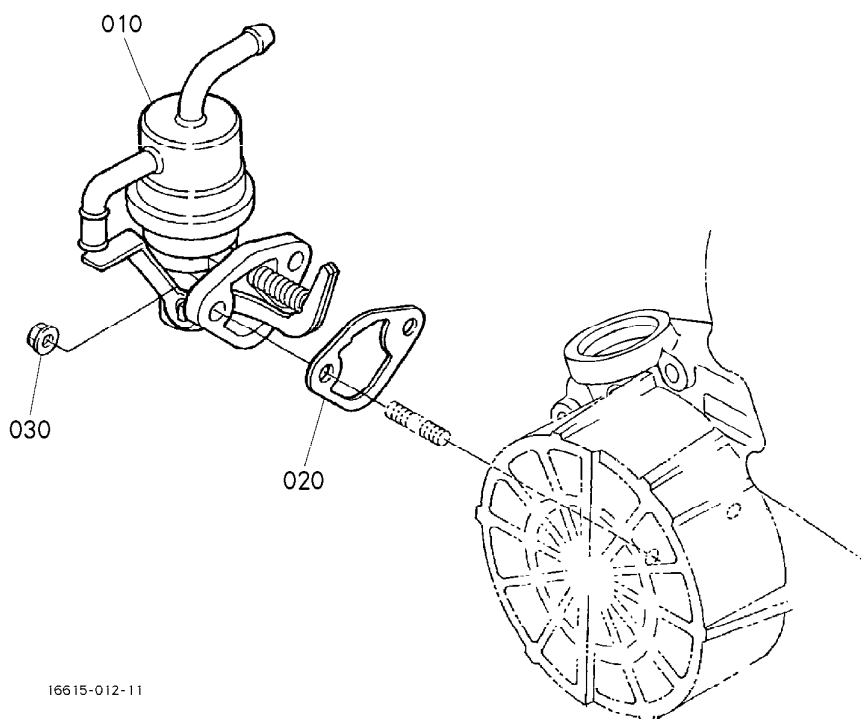

16615-012-11

 
16625-810-10

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

0402 ALTERNATOR AND PULLEY

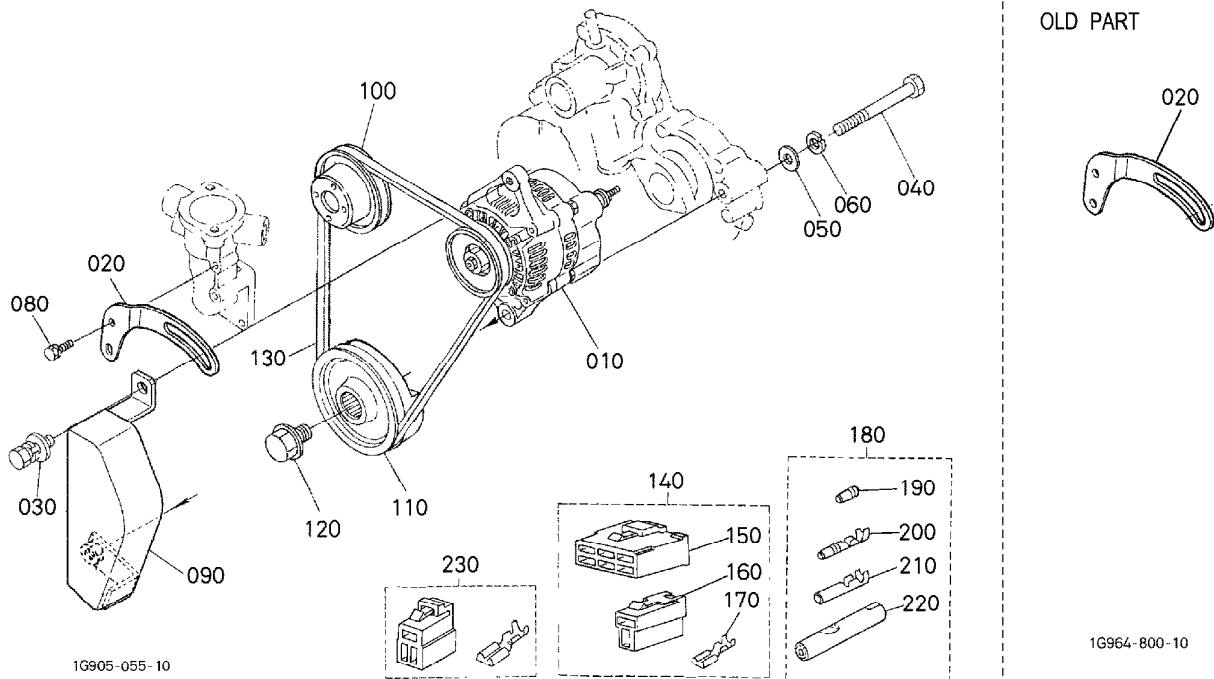


A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

REF. No.	PART No.	PART NAME	Q' TY/S. No.		I. C.	REMARKS
			A	B		
010	16231-6401-2	ASSY ALTERNATOR	1	1	12V 30A	
020	16241-6442-0	STAY, DYNAMO	≤6M9999	≤6M9999		
020	16241-6442-2	STAY, DYNAMO	≥6N0001	≥6N0001	←	
030	01127-50830	BOLT	1	1		
040	01173-51085	BOLT	1	1		
050	04011-50100	WASHER, PLAIN	1	1		
060	04512-60100	WASHER, SPRING	1	1		
070	—	BLANK	—	—		
080	01023-50616	BOLT	1	1		
090	16616-1386-0	COVER, BELT	1	1		
100	16241-7425-0	PULLEY, FAN	1	1		
110	16261-7428-0	PULLEY, FAN DRIVE	1	1		
120	16241-9102-0	BOLT, FAN DRIVE	1	1		
130	14911-9701-2	V BELT	1	1		
130	1G062-9701-0	BELT, FAN	≤7FZ999 ≥7G0001	≤7FZ999 ≥7G0001	←	#
140	19883-6583-0	ASSY COUPLER	1	1		
150	19872-6584-0	CONNECTOR	1	1		
160	19872-6588-0	CONNECTOR	1	1		
170	19237-6591-0	TERMINAL	7	7		
180	19268-6578-0	ASSY TERMINAL	1	1		
190	68271-6592-0	SLEEVE	1	1		
200	68271-6591-0	TERMINAL	1	1		
210	19268-6593-0	TERMINAL	1	1		
220	19268-6587-0	SLEEVE	1	1		
230	16259-6583-0	ASSY COUPLER, LOCK	1	1		

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

 
0403 ALTERNATOR (COMPONENT PARTS)

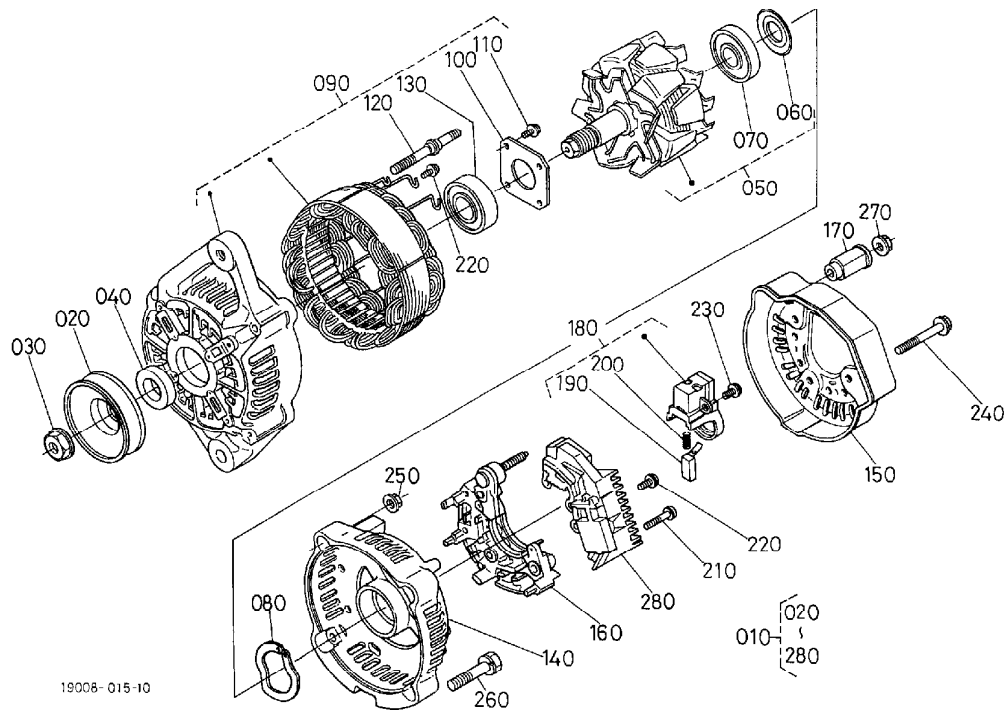

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

REF. No.	PART No.	PART NAME	Q' TY/S. No.		I. C.	REMARKS
			A	B		
010	16231-6401-2	ASSY ALTERNATOR	1	1		
020	15881-6411-0	PULLEY, DYNAMO	1	1		
030	15881-9201-0	NUT	1	1		
040	15881-6415-0	COLLAR	1	1		
050	66436-6404-0	ROTOR	1	1		
060	15881-6480-0	COVER, BEARING	1	1		
070	16652-6477-0	BEARING, BALL	1	1		
080	15881-6481-0	WASHER, THRUST	1	1		
090	16231-6402-0	FRAME, DRIVE END	1	1		
100	15881-6471-0	PLATE, RETAINER	1	1		
110	15881-9301-0	SCREW, ROUND HEAD	4	4		
120	15881-6426-0	BOLT, THROUGH	2	2		
130	16652-6478-0	BEARING, BALL	1	1		
140	16231-6406-0	FRAME, END	1	1		
150	16231-6423-0	COVER, END	1	1		
160	16231-6485-0	ASSY RECTIFIER	1	1		
170	16241-6490-0	BUSH, INSULATION	1	1		
180	16652-6431-0	HOLDER, BRUSH	1	1		
190	15881-6409-0	BRUSH	2	2		
200	15881-6433-0	SPRING, BRUSH	2	2		
210	15881-9302-0	SCREW, ROUND HEAD	2	2		
220	15881-9303-0	SCREW, ROUND HEAD	6	6		
230	15881-9304-0	SCREW, ROUND HEAD	1	1		
240	15881-9104-0	BOLT	3	3		
250	15881-9202-0	NUT	2	2		
260	15881-9105-0	BOLT	2	2		
270	14182-9203-0	NUT	1	1		
280	1K531-6460-0	ASSY REGULATOR	1	1		

 ↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

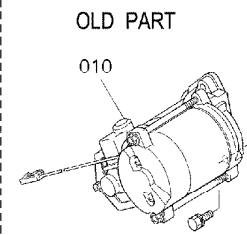


1G681-801-10

[illegible]

25

040501 STARTER (COMPONENT PARTS)

 S. No. : A: >=4Q0001 : B: >=4Q0001

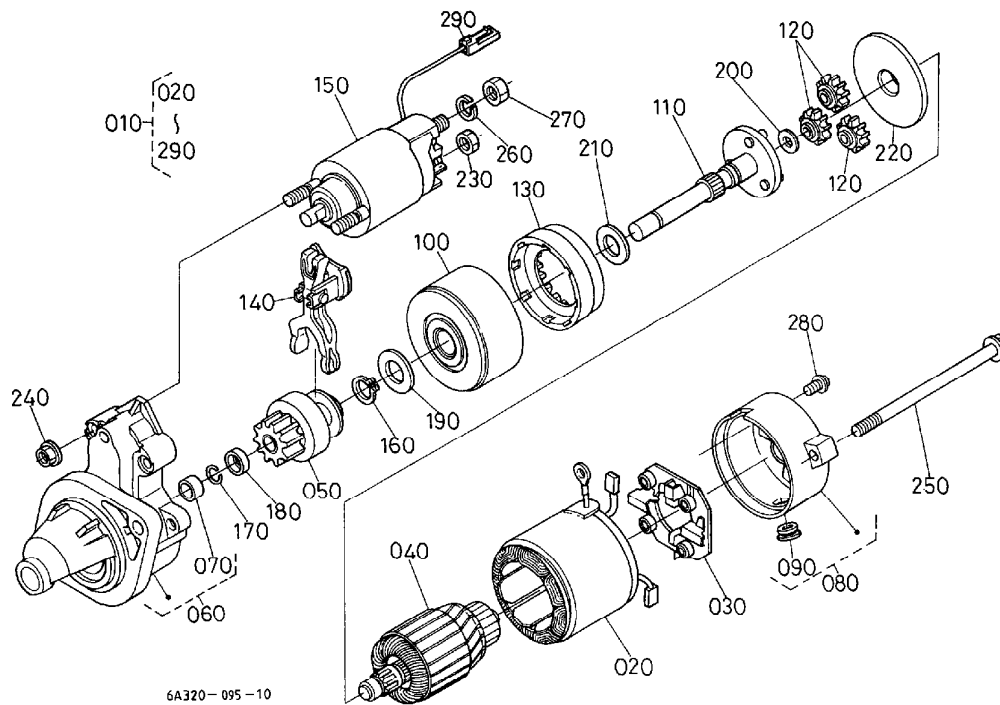


A: D1105-BG2-SAE-1 B: D1105-BG2-SAE-2

REF. No.	PART No.	PART NAME	Q' TY/S. No.		I. C.	REMARKS
			A	B		
010	6A320-5921-0	ASSY STARTER	1	1		
020	6A100-3116-0	ASSY YOKE, STARTER	1	1		
030	14958-6338-0	ASSY HOLDER	1	1		
040	6A100-3117-0	ASSY ARMATURE	1	1		
050	K3511-8143-0	ASSY CLUTCH, STARTER	1	1		
060	67980-3118-0	ASSY HOUSING, STARTER	1	1		
070	6A100-3119-0	BEARING	1	1		
080	K3511-8145-0	ASSY FRAME	1	1		
090	12182-6329-0	COVER	1	1		
100	14958-6353-0	ASSY BEARING	1	1		
110	K3511-8146-0	ASSY SHAFT, STARTER	1	1		
120	14958-6326-0	GEAR	3	3		
130	14958-6327-0	GEAR	1	1		
140	14958-6305-0	LEVER	1	1		
150	12181-6308-0	ASSY SWITCH, MAGNETIC	1	1		
160	14958-6317-0	RING, SNAP	1	1		
170	12181-6322-0	RING, SNAP	1	1		
180	13816-6346-0	COLLAR	1	1		
190	14958-9401-0	WASHER, PLAIN	1	1		
200	14958-9402-0	WASHER, PLAIN	1	1		
210	14958-9403-0	WASHER, PLAIN	1	1		
220	14958-9404-0	PLATE	1	1		
230	16611-9202-0	NUT, HEXAGON	1	1		
240	14278-9201-0	NUT	2	2		
250	11460-6332-0	BOLT, THROUGH	2	2		
260	13801-9410-0	WASHER, SPRING	1	1		
270	19616-9201-0	NUT, HEXAGON	1	1		
280	K3511-8148-0	SCREW	2	2		
290	K3511-8149-0	ASSY WIRE	1	1		

↔ Interchangeable; ↗ not interchangeable; * new for old; → old for new

0405 STARTER (COMPONENT PARTS)

 
S. No. : A: <=4P0496 : B: <=4P0496

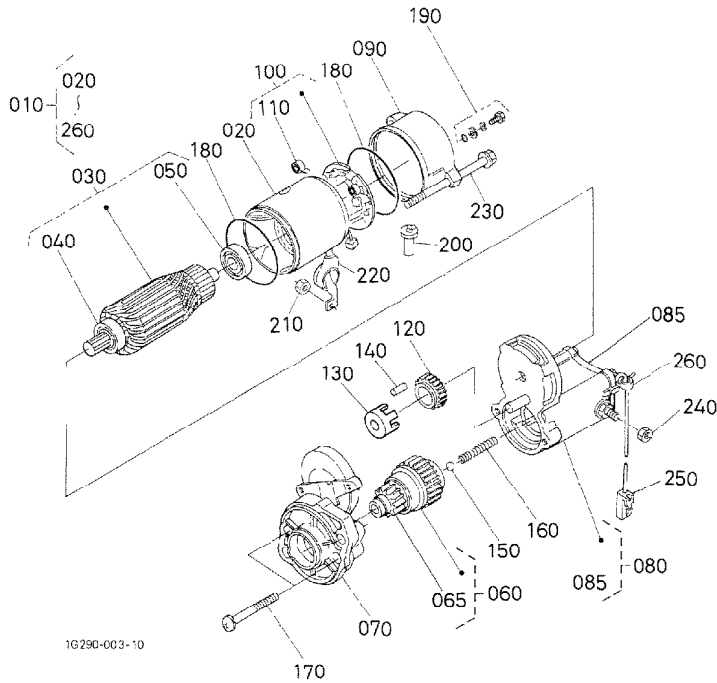

A: D1105-BG2-SAE-1 B: D1105-BG2-SAE-2

REF. No.	PART No.	PART NAME	Q' TY/S. No.		I. C.	REMARKS
			A	B		
010	37560-6301-0	ASSY STARTER	1	1		
020	37560-6308-0	YOKE	1	1		
030	11460-6307-0	ARMATURE	1	1		
040	11460-6350-0	BEARING	1	1		
050	11460-6353-0	BEARING	1	1		
060	16285-6304-0	ASSY CLUTCH	1	1		
065	16271-6314-0	PINION, BEVEL	1	1		
070	16285-6303-0	ASSY HOUSING	1	1		
080	16611-6302-0	ASSY SWITCH, MAGNETIC	1	1		
085	16271-9805-0	ASSY COVER	1	1		
090	16285-6320-0	ASSY FRAME, END	1	1		
100	11470-6338-0	ASSY HOLDER, BRUSH	1	1		
110	11460-6339-0	SPRING, BRUSH	4	4		
120	11460-6327-0	GEAR	1	1		
130	11460-6311-0	RETAINER	1	1		
140	19212-6310-0	ROLLER	5	5		
150	19212-9713-0	BALL	1	1		
160	11460-6312-0	SPRING	1	1		
170	11460-9331-0	BOLT	2	2		
180	15511-9666-0	O RING	2	2		
190	15511-6376-0	ASSY BOLT	2	2		
200	16285-6357-0	PIPE, DRAIN	1	1		
210	16285-9201-0	NUT, HEXAGON	1	1		
220	37560-6346-0	COVER	1	1		
230	11460-6332-0	BOLT, THROUGH	2	2		
240	16611-9202-0	NUT, HEXAGON	1	1		
250	16611-6366-0	CORD, STOP SOLENOID	1	1		
260	16612-6310-0	BAND, COVER	1	1		

 ↔ Interchangeable; ↗ not interchangeable; ✱ new for old; → old for new



↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

This diagram illustrates the assembly of a fuel injection system. The components are labeled with reference numerals:

- 010**: Main injection pump body.
- 020**: Pin or dowel pin.
- 030**: Two screws or bolts.
- 040**: A bracket or mounting plate.
- 050**: A pin or screw.
- 060**: A long pin or screw.
- 070**: A curved pipe or hose.
- 080**: A nut or washer.
- 090**: A filter or mesh screen.
- 100**: A nozzle or spray tip.
- 110**: A gasket or seal ring.
- 120**: A small pin or screw.


The diagram shows the injection pump (010) being mounted onto a larger engine block (indicated by dashed lines). The pump is secured by the bracket (040) and various fasteners (030, 050, 060). The nozzle (100) is attached to the pump via the gasket (110) and filter (090). The curved pipe (070) is connected to the pump's outlet, secured by the nut (080).

16614-024-20

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2


[illegible]

 ↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new




REF. No.	PART No.	PART NAME	Q' TY/S. No.		I. C.	REMARKS
			A	B		
010	16613-7206-0	ASSY RADIATOR	1	-		
020	15272-7202-0	ASSY CAP	1	-		
025	19077-8724-0	LABEL, CAUTION	1	-		
030	16613-7233-0	SHROUD, FAN	1	-		
040	15231-7311-0	COCK, DRAIN	1	-		
050	15231-9669-0	GASKET	1	-		
060	15596-7271-0	PIPE, WATER OVER FLOW	1	-		
070	19426-8788-0	LABEL, INSTRUCTION	1	-		
080	15108-7238-0	BOLT	2	-		
090	15111-7220-0	WASHER	4	-		
100	15111-7218-0	CUSHION	2	-		
110	15111-7219-0	CUSHION	2	-		
120	05515-61000	PIN, SNAP	2	-		
130	16683-7213-0	SUPPORT, RADIATOR	1	-		
140	16616-7214-0	SUPPORT, RADIATOR	1	-		
150	19428-7216-0	STAY, RADIATOR	2	-		
160	16616-7215-0	STAY, RADIATOR	1	-		
170	01123-50822	BOLT	2	-		
180	01123-50830	BOLT	2	-		
190	19416-7225-0	NET, RADIATOR	1	-		
200	04015-60060	WASHER, PLAIN	6	-		
210	01023-50612	BOLT	6	-		
220	EG552-7412-0	COVER, FAN	1	-		
230	01053-50614	BOLT	4	-		
240	02056-50060	NUT	4	-		
250	04512-60060	WASHER, SPRING	4	-		
260	04014-50060	WASHER, PLAIN	8	-		

 
30

[illegible]

 
31

[illegible]

 32

[illegible]

 
33

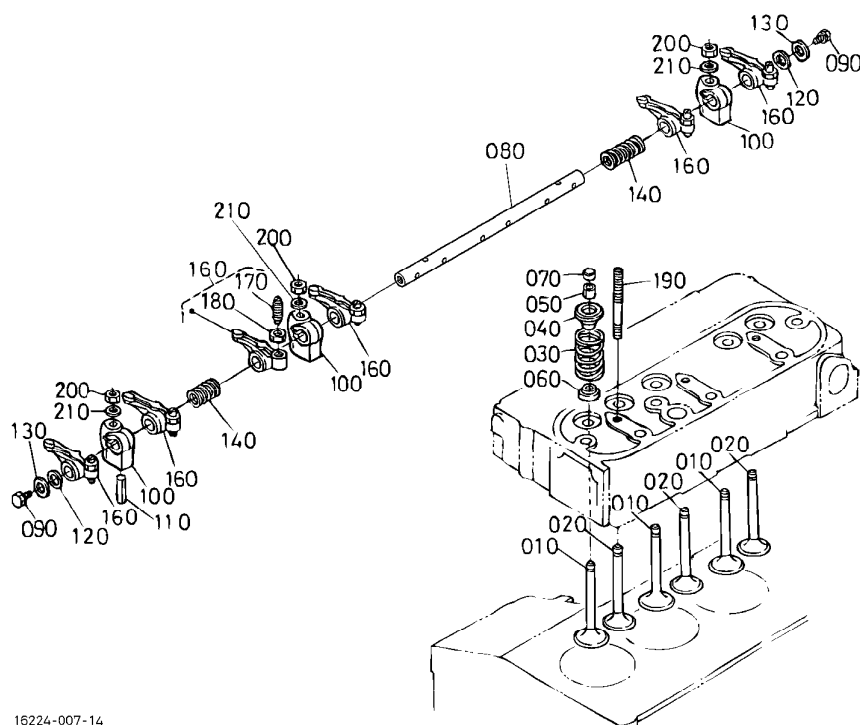


16224-007-14

[illegible]

 ↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

[illegible]

 
35

[illegible]


36

[illegible]

 
37



 
↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

[illegible]

 
39



 
↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new



 
↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

[illegible]

 
42

[illegible]

 43

[illegible]

 44



↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

This diagram shows an exploded perspective view of a mechanical assembly. A rectangular base plate, labeled 010, is positioned at the bottom. Above it, a more complex component, labeled 030, is shown. This component 030 has several features: a central cylindrical protrusion, a rectangular slot with diagonal hatching, and a circular feature on the right side. A label 040 points to a small circular component, likely a pin or a bolt, which is shown inserted into a hole in the component 030. The drawing uses solid lines for visible surfaces and dashed lines to indicate hidden internal features and the alignment of the exploded parts.

A:D1105-BG2-SAE-1 B:D1105-BG2-SAE-2

↔ Interchangeable; ≠ not Interchangeable; ← new for old; → old for new

NUMERICAL INDEX

PART No.	PAGE	REF. No.	PART No.	PAGE	REF. No.	PART No.	PAGE	REF. No.	PART No.	PAGE	REF. No.
E9151-3314-0.....4...290			03024-50520.....19...140			15111-7219-0....30...110			15841-9104-0.....4...180		
5...110			04011-50100.....23...050			15111-7220-0....30...090			15841-9150-0.....16...090		
EG552-7412-0....30...220			04012-50060.....39...120			15221-0349-0.....1...030			15841-9202-0.....14...030		
01023-50610.....34...090			04013-60040.....19...180			15221-1172-0....38...030			14...080		
01023-50612.....30...210			04013-60080.....12...080			15221-1241-3....39...020			15841-9232-0....16...100		
01023-50614.....17...140			39...050			15221-1243-3....39...030			15841-9402-2....34...130		
01023-50616.....9...080			04014-50060.....30...260			15221-3361-0.....1...190			15841-9602-0.....27...020		
9...150			04015-60060.....30...200			15221-4317-0....21...020			15841-9665-0....16...130		
13...110			04512-60060.....4...230			15224-4301-0....21...010			15841-9666-0....16...150		
18...150			15...040			15224-4320-0....21...030			15852-9233-0....14...040		
01023-50616.....23...080			04512-60060.....16...110			15224-8776-0....21...060			15852-9233-0....14...090		
28...050			18...200			15231-3396-0.....1...130			15861-9665-0....16...170		
01023-50618.....13...090			22...040			15231-7311-0....30...040			15876-7415-2....33...030		
35...030			30...250			15231-9669-0....30...050			15881-6409-0....24...190		
01023-50620.....8...080			39...150			15241-3229-0....4...030			15881-6411-0....24...020		
01023-50625.....8...070			04512-60080.....39...060			15261-0337-0....3...090			15881-6415-0....24...040		
01023-50630.....29...080			04512-60100.....23...060			15261-1336-0....34...050			15881-6426-0....24...120		
35...040			04612-00090.....17...110			15261-9119-0....12...050			15881-6433-0....24...200		
01023-50645.....4...150			04814-00100.....18...050			15261-9201-0....34...200			15881-6471-0....24...100		
01023-50655.....4...170			04814-00150.....4...100			15261-9401-0....34...210			15881-6480-0....24...060		
01023-50655.....28...060			04814-00160.....2...100			15261-9601-0.....1...040			15881-6481-0....24...080		
01023-50685.....29...090			04814-10280.....10...160			3...060			15881-9104-0....24...240		
01023-60650.....4...160			04814-50300.....4...300			15263-1237-0....39...160			15881-9105-0....24...260		
35...050			5...120			45...010			15881-9201-0....24...030		
01053-50614.....30...230			04814-50600.....4...090			15272-7202-0....30...020			15881-9202-0....24...250		
01053-50618.....18...160			05012-00508.....1...100			15321-9626-0....3...050			15881-9301-0....24...110		
01053-50620.....39...130			05012-00814.....1...110			15401-1172-0....38...020			15881-9302-0....24...210		
01053-50860.....39...040			05122-50612.....39...100			15403-6449-0....40...020			15881-9303-0....24...220		
01123-50820.....37...160			05411-00420.....18...060			15442-1211-0....39...010			15881-9304-0....24...230		
01123-50822.....21...080			05411-00428.....34...110			15451-9627-0.....1...020			15951-9666-0....5...100		
01123-50822.....30...170			05511-51612.....39...110			15451-9667-0.....2...050			15952-9233-0.....5...090		
39...170			05515-61000.....30...120			15471-5798-0....18...110			16006-5209-2....16...060		
45...020			05712-00518.....9...060			15511-6376-0....26...190			16006-5211-2....16...060		
01123-50825.....25...020			07715-00201.....4...060			15511-9666-0....26...180			16006-5212-2....16...070		
01123-50830.....30...180			07715-00401.....10...100			15521-2353-0....10...200			16020-1617-0....13...010		
01123-50835.....28...120			08102-06304.....13...230			15521-2395-0....11...200			16030-5101-0....16...050		
37...090			09318-89039.....31...060			15521-2396-0....11...200			16030-5132-0....16...120		
37...120			09661-80075.....16...030			15521-9361-0....9...040			16030-9601-0....16...160		
01123-60814.....3...030			11460-6307-0....26...030			15521-9602-0.....1...070			16032-0304-2....3...040		
12...070			11460-6311-0....26...130			15547-7411-2....33...010			16032-4201-0....16...020		
01123-60814.....37...140			11460-6312-0....26...160			15596-7271-0....30...060			16032-5300-0....19...060		
44...010			11460-6327-0....26...120			15601-9665-0.....1...220			20...010		
01123-60816.....2...090			11460-6332-0....26...230			14...050			16032-5316-0....20...060		
37...150			11460-6339-0....26...110			14...100			16032-5317-0....20...040		
01127-50830.....23...030			11460-6350-0....26...040			18...170			16032-5323-0....20...030		
01133-51028.....42...020			11460-6353-0....26...050			19...030			16032-5328-0....20...070		
43...030			11460-9331-0....26...170			15694-6599-0....40...010			16032-5335-0....20...050		
01173-51085.....23...040			11470-6338-0....26...100			15707-3375-0....2...040			16032-5361-0....20...090		
01311-10614.....15...030			14182-9203-0....24...270			15741-1108-3....37...020			16032-5390-0....19...055		
01311-10620.....16...080			14911-4275-0....16...040			15741-1147-0....37...060			16032-9203-0....20...020		
01754-50610.....1...210			14911-9701-0....23...130			15741-9262-0....37...040			16032-9404-0....20...080		
01754-50620.....33...020			14971-4275-0....19...050			15741-9443-0....37...050			16032-9810-0....20...100		
02056-50060.....4...220			15000-3692-0....37...110			15841-3901-0....27...010			16032-9850-0....20...110		
18...190			15000-3693-0....37...100			15841-4250-0....19...040			16032-9851-0....20...110		
22...030			15021-3366-0....1...200			15841-5135-0....16...140			16032-9852-0....20...110		
30...240			15108-4329-0....21...050			15841-5136-0....19...020			16032-9853-0....20...110		
39...140			15108-4361-0....21...032			15841-5362-2....19...070			16032-9854-0....20...110		
02114-50080.....39...070			15108-4378-0....21...033			15841-5385-0....19...120			16032-9855-0....20...110		
02761-50040.....19...170			15108-7238-0....30...080			15841-5386-0....19...130			16032-9856-0....20...110		
03024-50510.....5...080			15111-7218-0....30...100			15841-7302-0.....1...240			16032-9857-0....20...110		

NUMERICAL INDEX

PART No.	PAGE	REF. No.	PART No.	PAGE	REF. No.	PART No.	PAGE	REF. No.	PART No.	PAGE	REF. No.
16032-9858-0...	20...	110	16241-2348-0...	10...	180	16259-7352-0...	29...	020	16285-7286-0...	31...	010
16032-9859-0...	20...	110	16241-2391-0...	10...	170	16259-7355-2...	29...	030		32...	010
16060-2111-0...	10...	010	16241-2392-0...	10...	170	16259-9104-0...	4...	200	16285-9201-0...	26...	210
16060-2191-0...	10...	010	16241-2393-0...	10...	180	16261-0404-0...	8...	090	16286-4343-0...	21...	070
16219-7326-0...	28...	100	16241-2394-0...	10...	180	16261-0405-0...	8...	120	16286-7285-0...	31...	040
16221-5442-0...	14...	060	16241-2411-0...	10...	110	16261-1177-0...	35...	010	16292-2349-0...	10...	190
16221-7327-0...	28...	110	16241-2425-0...	9...	140	16261-1182-2...	35...	020	16292-2386-0...	10...	190
16221-9112-0...	2...	030	16241-2432-0...	9...	130	16261-1235-0...	36...	020	16292-2387-0...	10...	190
16221-9452-0...	1...	120	16241-2436-0...	9...	110	16261-1333-0...	34...	040	16299-5626-0...	17...	130
16222-5751-0...	18...	120	16241-2437-0...	9...	120	16261-1354-0...	3...	070	16326-3375-0...	2...	060
16226-3211-0...	2...	080	16241-2516-0...	12...	030	16261-1356-0...	3...	080	16611-6302-0...	26...	080
16231-6401-2...	23...	010	16241-3365-0...	1...	140	16261-1426-4...	34...	080	16611-6366-0...	26...	250
	24...	010	16241-3507-0...	4...	110	16261-1450-3...	5...	010	16611-8887-0...	44...	030
16231-6402-0...	24...	090	16241-3563-0...	10...	130	16261-1452-0...	5...	020	16611-9202-0...	26...	240
16231-6406-0...	24...	140	16241-3693-0...	4...	050	16261-1555-0...	9...	010	16612-6310-0...	26...	260
16231-6423-0...	24...	150	16241-3695-0...	4...	040	16261-1601-3...	9...	030	16613-0150-0...	2...	010
16231-6485-0...	24...	160	16241-5111-3...	13...	050	16261-2105-0...	10...	020	16613-7206-0...	30...	010
16239-7343-0...	29...	070	16241-5119-0...	13...	060	16261-2109-0...	10...	020	16613-7233-0...	30...	030
16241-0175-0...	3...	010	16241-5412-2...	14...	070	16261-4250-2...	19...	010	16613-7270-0...	28...	010
16241-0177-0...	3...	020	16241-5526-0...	13...	210	16261-5628-0...	1...	160	16616-0611-2...	43...	010
16241-0345-0...	3...	100	16241-5555-4...	13...	250	16261-6382-2...	12...	020	16616-1101-3...	37...	010
16241-0409-2...	8...	010	16241-5615-3...	17...	080	16261-6556-0...	19...	160	16616-1135-0...	37...	080
16241-0421-2...	4...	240	16241-5621-0...	17...	150	16261-7428-0...	23...	110	16616-1157-0...	37...	130
16241-0446-0...	8...	050	16241-5625-0...	17...	120	16261-9730-0...	13...	020	16616-1162-0...	38...	010
16241-0454-0...	8...	020	16241-5633-0...	17...	100	16261-9731-0...	13...	030	16616-1386-0...	23...	090
	8...	100	16241-5634-0...	17...	160	16264-0413-0...	4...	140	16616-7214-0...	30...	140
	8...	130	16241-5716-0...	18...	030	16264-0436-0...	8...	030	16616-7215-0...	30...	160
16241-0456-0...	8...	110	16241-6442-0...	23...	020	16264-0482-0...	8...	060	16616-8451-0...	42...	010
16241-0481-3...	8...	040	16241-6490-0...	24...	170	16264-5214-0...	22...	020	16626-0613-2...	43...	020
16241-0514-0...	5...	040	16241-7334-0...	29...	060	16264-5721-0...	18...	140	16652-6431-0...	24...	180
16241-0515-0...	5...	050	16241-7335-0...	28...	070	16264-7292-0...	28...	040	16652-6477-0...	24...	070
16241-0537-0...	5...	070	16241-7336-0...	28...	080	16264-8315-2...	14...	120	16652-6478-0...	24...	130
16241-0551-0...	5...	130	16241-7337-0...	28...	020	16264-8334-2...	4...	280	16683-0461-0...	12...	040
16241-0555-0...	5...	030	16241-7425-0...	23...	100	16265-2301-3...	10...	090	16683-2501-5...	12...	010
16241-0567-0...	5...	060	16241-9102-0...	23...	120	16265-5648-0...	17...	010	16683-5501-0...	13...	120
16241-1311-0...	34...	010	16241-9104-0...	4...	190	16266-7294-0...	31...	050	16683-5506-0...	13...	170
16241-1312-0...	34...	020	16241-9149-0...	36...	030	16271-1324-0...	34...	030	16683-5531-0...	13...	130
16241-1328-0...	34...	070	16241-9202-0...	18...	080	16271-2401-0...	9...	090	16683-5532-0...	13...	150
16241-1403-2...	34...	160	16241-9233-0...	13...	070	16271-2498-0...	9...	100	16683-5541-0...	13...	240
16241-1423-0...	34...	170	16241-9312-0...	4...	130	16271-3209-2...	6...	010	16683-5545-0...	13...	220
16241-1424-0...	34...	180	16241-9401-0...	17...	090	16271-5371-2...	19...	090	16683-5551-0...	13...	160
16241-1431-0...	34...	140	16241-9402-0...	18...	070	16271-5372-2...	19...	100	16683-5562-0...	13...	200
16241-1435-0...	34...	100	16241-9523-0...	13...	080	16271-5373-2...	19...	110	16683-5602-0...	18...	090
16241-1441-0...	34...	190	16241-9569-0...	16...	010	16271-5535-0...	1...	180	16683-5604-5...	17...	040
16241-1443-0...	34...	120	16241-9601-0...	1...	060	16271-5715-0...	18...	020	16683-5605-5...	17...	030
16241-1511-0...	9...	020	16241-9602-0...	4...	020	16271-5772-0...	18...	100	16683-5613-3...	17...	070
16241-1627-0...	9...	070	16241-9626-2...	1...	150	16271-5774-0...	18...	130	16683-5716-2...	18...	040
16241-1632-0...	13...	100	16245-9153-0...	4...	210	16271-6314-0...	26...	065	16683-7213-0...	30...	130
16241-1651-0...	9...	050	16245-9154-0...	4...	270	16271-8745-0...	37...	070	16683-8884-0...	44...	020
16241-2131-0...	10...	030		18...	180	16271-9201-0...	36...	040	16683-8916-8...	46...	010
16241-2133-0...	10...	040	16251-7303-4...	29...	010	16271-9523-0...	10...	120	16683-9602-0...	1...	050
16241-2198-2...	10...	060	16259-0402-0...	4...	010	16271-9616-0...	1...	090	16684-0101-8...	1...	010
16241-2201-2...	10...	050	16259-3288-2...	4...	070	16271-9805-0...	26...	085	16695-5539-0...	13...	140
16241-2214-2...	10...	070	16259-3290-0...	4...	080	16272-5115-0...	13...	040	16851-6551-2...	19...	150
16241-2231-0...	10...	080	16259-3513-2...	4...	120	16282-9601-0...	1...	170	17213-1231-2...	36...	010
16241-2297-0...	10...	080	16259-3641-0...	7...	010	16285-5203-2...	22...	010	17391-9616-0...	1...	080
16241-2298-0...	10...	080	16259-5409-3...	14...	010	16285-6303-0...	26...	070	17454-6001-0...	15...	010
16241-2325-0...	10...	150	16259-5410-3...	14...	020	16285-6304-0...	26...	060	19077-5365-0...	19...	080
16241-2328-0...	10...	140	16259-6583-0...	23...	230	16285-6320-0...	26...	090	19077-8724-0...	30...	025
16241-2347-0...	10...	170	16259-7351-2...	29...	050	16285-6357-0...	26...	200	19094-5641-0...	17...	020

NUMERICAL INDEX

PART No.	PAGE	REF. No.	PART No.	PAGE	REF. No.	PART No.	PAGE	REF. No.	PART No.	PAGE	REF. No.
19202-2354-0	11	210									
19202-2397-0	11	210									
19202-2398-0	11	210									
19212-6310-0	26	140									
19212-9713-0	26	150									
19222-4328-0	21	040									
19237-6591-0	23	170									
19268-6578-0	23	180									
19268-6587-0	23	220									
19268-6593-0	23	210									
19298-9602-0	28	030									
19416-7225-0	30	190									
19426-8788-0	30	070									
	46	040									
19426-8790-3	46	030									
19426-8888-0	44	040									
19427-1267-0	39	080									
19427-1268-0	39	090									
19428-7216-0	30	150									
19434-7301-4	28	090									
19818-5534-0	13	180									
	17	060									
19818-5560-0	13	190									
	17	050									
19872-6584-0	23	150									
19872-6588-0	23	160									
19883-6583-0	23	140									
1C010-1315-0	34	060									
1G063-0331-0	3	110									
1G219-5701-4	18	010									
1G642-7305-0	29	040									
1G680-7287-0	31	020									
	32	020									
1K531-6460-0	24	280									
31220-1417-0	12	060									
36200-8272-0	31	030									
	32	030									
37560-6301-0	25	010									
	26	010									
37560-6308-0	26	020									
37560-6346-0	26	220									
66436-6404-0	24	050									
66706-5512-0	41	010									
66706-5515-0	41	040									
66711-5513-0	41	020									
66711-5524-0	41	030									
68271-6591-0	23	200									
68271-6592-0	23	190									
6C090-5896-0	2	070									

KUBOTA

THE BASIC NECESSITIES GIANT

"Technology for the Needs of Tomorrow" is the ambition of everyone at Kubota. Through research and the development of new products for agriculture, industry, construction, and many other areas of modern life, we at Kubota hope to realize this goal.