

SERVICE MANUAL

CR8.90 / CR9.90 / CX8.90

Tier 4A

*CR8.90 PIN 1946 and above, CR9.90 PIN 1947 and above,
CX8.90 PIN 1962 and above*

CR10.90 / CX8.80

Tier 4B (final)

CR10.90 PIN 1947 and above, CX8.80 PIN 1957 and above

Combine

Part number 47956065

2nd edition English

May 2016

Replaces part number 47869947





SERVICE MANUAL

CR10.90 TIER 4B [1947 -]

CR8.90 TIER4A [1946 -]

CR9.90 TIER 4A [1947 -]

CX8.80 TIER 4B [1957 -]

CX8.90 TIER 4A [1962 -]

Link Product / Engine

Product	Market Product	Engine
CX8.80 TIER 4B [1957 -]	North America	F2CFE613C*B043
CX8.90 TIER 4A [1962 -]	North America	F3AFE613A*A
CR10.90 TIER 4B [1947 -]	North America	F3JFE613A*B003
CR8.90 TIER4A [1946 -]	North America	F3AFE613A*A
CR9.90 TIER 4A [1947 -]	North America	F3BFE613D*A

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.254] Intake and exhaust manifolds and muffler	10.3
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.4
[10.400] Engine cooling system	10.5
[10.418] Rotary screen	10.6
[10.450] Engine air compressor	10.7
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls	21.2
[21.145] Gearbox internal components	21.3
[21.182] Differential	21.4
Front axle system	25
[25.108] Final drive hub, steering knuckles, and shafts	25.1
[25.310] Final drives	25.2
Rear axle system	27
[27.124] Final drive hub, steering knuckles, and shafts	27.1
Hydrostatic drive	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.204] Reservoir, cooler, and lines	29.2
[29.218] Pump and motor components	29.3
[29.202] Hydrostatic transmission	29.4

[29.300] Rear hydrostatic transmission.....	29.5
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves.....	35.4
[35.359] Main control valve.....	35.5
[35.322] Regulated/Low pressure system	35.6
[35.220] Auxiliary hydraulic pump	35.7
[35.410] Header or attachment height system	35.8
[35.602] Header or attachment leveling system	35.9
[35.760] Header reverser drive	35.10
[35.992] Stone trapping system	35.11
[35.994] Positive Straw Discharge (PSD)	35.12
[35.796] Chaff spreader control	35.13
[35.440] Grain tank unload system	35.14
[35.450] Variator system.....	35.15
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.432] Autoguidance steering	41.3
Tracks and track suspension	48
[48.138] Track rollers	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3

[48.100] Tracks	48.4
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator	55.4
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.5
[55.640] Electronic modules	55.6
[55.029] Gearbox electric system	55.7
[55.019] Hydrostatic drive control system	55.8
[55.512] Cab controls	55.9
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.11
[55.662] Header height control	55.12
[55.628] Threshing electrical control	55.13
[55.427] Straw walker variator	55.14
[55.426] Harvest material flow control system	55.15
[55.624] Residue handling control	55.16
[55.785] Precision farming system	55.17
[55.911] Global Positioning System (GPS)	55.18
[55.680] Autopilot/Autoguidance	55.19
[55.518] Wiper and washer system	55.20
[55.404] External lighting	55.21
[55.405] External lighting switches and relays	55.22

[55.514] Cab lighting	55.23
[55.408] Warning indicators, alarms, and instruments	55.24
[55.DTC] FAULT CODES.....	55.25
Attachments/Headers	58
[58.900] Belt feeding	58.1
Product feeding	60
[60.105] Floating roll, feed chain, and drive	60.1
[60.110] Feeder housing.....	60.2
[60.150] Feeder drive system	60.3
[60.165] Feeder reverse system.....	60.4
[60.112] Stone trapping system	60.5
[60.260] Rotor	60.6
Threshing	66
[66.000] Threshing	66.1
[66.260] Threshing mechanism drive system	66.2
[66.331] Rotor	66.3
[66.330] Drum	66.4
[66.360] Drum/Rotor housing.....	66.5
[66.321] Drum/Rotor variator with electrical control	66.6
[66.105] Concave.....	66.7
[66.101] Concave conveyor plate	66.8
[66.110] Concave control system.....	66.9
Separation	72
[72.220] Discharge beater	72.1
[72.350] Beater	72.2
[72.420] Rotary separator	72.3
[72.440] Straw-flow beater	72.4
[72.110] Straw walker drive system	72.5

[72.101] Straw walkers and shafts	72.6
Residue handling	73
[73.300] Positive Straw Discharge (PSD)	73.1
[73.230] Straw chopper.....	73.2
[73.210] Straw chopper drive system.....	73.3
[73.220] Straw chopper frame	73.4
[73.335] Chaff spreader	73.5
[73.410] Opti-Spread™ system.....	73.6
Cleaning	74
[74.000] Cleaning.....	74.1
[74.101] Cleaning drive systems	74.2
[74.110] Grain pan.....	74.3
[74.114] Upper shaker shoe	74.4
[74.118] Lower shaker shoe	74.5
[74.125] Clean grain and return cross auger housing	74.6
[74.130] Fan housing	74.7
[74.136] Fan drive system.....	74.8
[74.140] Tailings return system	74.9
Crop storage / Unloading	80
[80.101] Clean grain elevator.....	80.1
[80.150] Grain tank	80.2
[80.175] Grain tank unload drive system	80.3
[80.180] Grain tank unload	80.4
Platform, cab, bodywork, and decals	90
[90.154] Cab doors and hatches	90.1
[90.110] Operator platform less cab	90.2
[90.118] Protections and footboards.....	90.3
[90.124] Pneumatically-adjusted operator seat.....	90.4

[90.105] Machine shields and guards	90.5
---	------



INTRODUCTION

Contents

INTRODUCTION

Foreword - Important notice regarding equipment servicing (*)	3
Note to the Owner (*)	4
Safety rules (*)	5
Safety rules (*)	8
Basic instructions (*)	9
Torque (*)	12
Torque - Standard torque data for hydraulic connections (*)	15
Basic instructions - Chain Wear Tables - Roller Chains (*)	22
Basic instructions - Shop and assembly (*)	24
Conversion factors (*)	26
Product identification (*)	27

(*) See content for specific models

Foreword - Important notice regarding equipment servicing

CR10.90 TIER 4B [1947 -]	NA
CR8.90 TIER4A [1946 -]	NA
CR9.90 TIER 4A [1947 -]	NA
CX8.80	NA
CX8.90	NA

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The manufacturer reserves the right to make improvements in design and changes in specifications at any time without notice and without incurring any obligation to install them on units previously sold. Specifications, descriptions, and illustrative material herein are as accurate as known at time of publication but are subject to change without notice.

In case of questions, refer to your NEW HOLLAND Sales and Service Networks.

Note to the Owner

CR10.90 TIER 4B [1947 -]	NA
CR8.90	NA
CR9.90	NA
CX8.80	NA
CX8.90	NA

Engine repair information:

The engine repair information is not contained within this manual.

For engine repair information, please refer to the respective Service Manual for the engine type used in your vehicle.

Fault Code Resolution (FCR) information:

The FCR information is not contained within the paper version of the manual.

For FCR information, please refer to the Electronic Service Tool (EST) or the electronic version of this manual.

Electronic Service Tool (EST) information:

The EST information and how to handle Control Modules (CM) (e.g.: resetting of the CM, etc.) is not contained within this manual.

For EST information, please refer to the Electronic Service Tool User's Guide.

Safety rules

CR10.90	NA
CR8.90	NA
CR9.90	NA
CX8.80	NA
CX8.90	NA

LEGAL OBLIGATIONS

This machine may be equipped with special guarding or other devices in compliance with local legislation. Some of these require active use by the operator. Therefore, check local legislations on the usage of this machine.

ACCIDENT PREVENTION

Most accidents or injuries that occur in workshops are the result of non compliance to simple and fundamental safety principles. For this reason, IN MOST CASES THESE ACCIDENTS CAN BE AVOIDED by applying the fundamental safety principles, acting with the necessary caution and care.

Accidents may occur with all types of machine, regardless of how well the machine in question was designed and built.

CAUTION

Unexpected machine movement!

- 1. Disengage all drives.**
 - 2. Engage parking brake.**
 - 3. Lower all attachments to the ground, or raise and engage all safety locks.**
 - 4. Shut off engine.**
 - 5. Remove key from key switch.**
 - 6. Switch off battery key, if installed.**
 - 7. Wait for all machine movement to stop.**
- Failure to comply could result in minor or moderate injury.**

C0038A

SAFETY REQUIREMENTS FOR FLUID POWER SYSTEMS AND COMPONENTS - HYDRAULICS

- Flexible hose assemblies must not be constructed from hoses which have been previously used as part of a hose assembly.
- Do not weld hydraulic pipes: when flexible hoses or piping are damaged, replace them immediately.
- It is forbidden to modify a hydraulic accumulator by machining, welding or any other way.
- Before removing hydraulic accumulators for servicing, the liquid pressure in the accumulators must be reduced to zero.
- Pressure check on hydraulic accumulators must be carried out by a method recommended by the accumulator manufacturer.
- Take care not to exceed the maximum allowed pressure of the accumulator. After any check or adjustment, check for leakages or gas in the hoses or tubes.

SAFETY RULES

General guidelines

- Carefully follow specified repair and maintenance procedures.
- When appropriate, use P.P.E (Personal Protective Equipment)
- Do not wear rings, wristwatches, jewellery, unbuttoned or loose articles of clothing such as: ties, torn clothing, scarves, open jackets or shirts with open zips that may remain entangled in moving parts. It is advised to wear approved safety clothing, e.g.: non-slip footwear, gloves, safety goggles, helmets, etc.

- Do not carry out repair operations with someone sitting in the driver's seat, unless the person is a trained technician who is assisting with the operation in question.
- Do not operate the machine or use any of the implements from different positions, other than the driver's seat.
- Do not carry out operations on the machine with the engine running, unless specifically indicated.
- Bring all hydraulic cylinders to the home positions (down, retracted, etc.) before engine shut down.
- Stop the engine and check that the hydraulic circuits are pressure-free before removing caps, covers, valves, etc.
- All repair and maintenance operations must be carried out using extreme care and attention.
- Service steps and platforms used in the workshop or elsewhere should be built according to the applicable standards and legislation.
- Disconnect the Power Take-Off (PTO) and label the controls to indicate that the machine is being serviced.
- Brakes are inoperative when manually released for repair or maintenance purposes. Use blocks or similar devices to secure the machine in these conditions.
- Only use specified towing points for towing the machine. Connect parts carefully. Make sure that all pins and/or locks are secured in position before applying traction. Never remain near the towing bars, cables or chains that are operating under load.
- When loading or unloading the machine from the trailer (or other means of transport), select a flat area capable of sustaining the trailer or truck wheels. Firmly secure the machine to the truck or trailer and lock the wheels in the position used by the carrier.
- Electric heaters, battery-chargers and similar equipment must only be powered by auxiliary power supplies with efficient ground insulation to avoid electrical shock hazards.
- Always use suitable hoisting or lifting devices when raising or moving heavy parts.
- Keep bystanders away.
- Never use gasoline, diesel oil or other inflammable liquids as cleaning agents. Use non-inflammable, non toxic commercially available solvents.
- Wear safety goggles with side guards when cleaning parts with compressed air.
- Never use open flames for lighting when working on the machine or checking for leaks.
- When carrying out checks with the engine running, request the assistance of an operator in the driver's seat. The operator must maintain visual contact with the service technician at all times.
- If operating outside the workshop, position the machine on a flat surface and lock in position. If working on a slope, lock the machine in position. Move to a flat area as soon as is safely possible.
- Maintenance and repair operations must be carried out in a clean and dry area. Clean up any water or oil spillage immediately.
- Do not create piles of oil or grease-soaked rags as they represent a serious fire hazard. Always store rags in a closed metal container.
- Before engaging the machine, make sure that there are no persons within the machine or implement range of action.
- Empty your pockets of all objects that may fall accidentally unobserved into the machine inner compartments.
- When metal parts are sticking out, use protective goggles or goggles with side guards, helmets, special footwear and gloves.
- When welding, use protective safety devices: tinted safety goggles, helmets, special overalls, gloves and footwear. All persons present in the area where welding is taking place must wear tinted goggles. **NEVER LOOK DIRECTLY AT THE WELDING ARC WITHOUT SUITABLE EYE PROTECTION.**

Machine start-up.

- Never run the engine in confined spaces that are not equipped with adequate ventilation for exhaust gas extraction.
- Never place the head, body, limbs, feet, hands or fingers near rotating and moving parts.

Hydraulic systems and fuel injection systems

- A liquid leaking from a tiny hole may be almost invisible but, at the same time, be powerful enough to penetrate the skin. Therefore, NEVER USE HANDS TO CHECK FOR LEAKS but use a piece of cardboard or paper for this purpose. If any liquid penetrates skin tissue, call for medical aid immediately. Failure to treat this condition with correct medical procedure may result in serious infection or death.
- In order to check the pressure in the system use suitable instruments.

Wheels and tires

- Make sure that the tires are correctly inflated at the pressure specified by the manufacturer. Periodically check the rims and tires for damage.
- Stand away from (at the side of) the tire when checking inflation pressure.
- Do not use parts of recovered wheels as incorrect welding brazing or heating may weaken and eventually cause damage to the wheel.
- Never cut or weld a rim mounted with an inflated tire.
- Deflate the tire before removing any objects that may be jammed in the tire tread.
- Never inflate tires using inflammable gases, as this may result in explosions and injury to bystanders.

Removal and installation

- Lift and handle all heavy parts using suitable hoisting equipment. Make sure that parts are sustained by appropriate hooks and slings. Use the hoisting eyebolts for lifting operations. Extra care should be taken if persons are present near the load to be lifted.
- Handle all parts carefully. Do not put your hands or fingers between parts. Wear suitable safety clothing - safety goggles, gloves and shoes.
- Avoid twisting chains or metal cables. Always wear safety gloves when handling cables or chains.
- Damaged or bent chains or cables are unreliable. Do not use them for lifting or towing. Always use suitable protective gloves when handling chains or cables.
- Chains should always be safely secured. Make sure that the hitch-up point is capable of sustaining the load in question. Keep the area near the hitch-up point, chains or cables free of all bystanders.
- Metal cables tend to fray with repeated use. Always use suitable protective devices (gloves, goggles, etc.) when handling cables.

Safety rules

CR10.90	NA
CR8.90	NA
CR9.90	NA
CX8.80	NA
CX8.90	NA

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine decals, you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 **DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with DANGER is RED.

 **WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with WARNING is ORANGE.

 **CAUTION**, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with CAUTION is YELLOW.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation which, if not avoided, could result in machine or property damage. The color associated with Notice is BLUE.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information which clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Basic instructions

CR10.90	NA
CR8.90	NA
CR9.90	NA
CX8.80	NA
CX8.90	NA

SHIMMING

For each adjustment operation, select adjusting shims and measure individually using a micrometer, then add up the recorded values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value indicated on each shim.

ROTATING SHAFT SEALS

For correct rotating shaft seal installation, proceed as follows:

- before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes
- thoroughly clean the shaft and check that the working surface on the shaft is not damaged
- position the sealing lip facing the fluid; with hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will deviate the fluid towards the inner side of the seal
- coat the sealing lip with a thin layer of lubricant (use oil rather than grease) and fill the gap between the sealing lip and the dust lip on double lip seals with grease
- insert the seal in its seat and press down using a flat punch, do not tap the seal with a hammer or mallet
- whilst inserting the seal, check that it is perpendicular to the seat; once settled, make sure that it makes contact with the thrust element, if required
- to prevent damaging the seal lip on the shaft, position a protective guard during installation operations

O-RING SEALS

Lubricate the O-RING seals before inserting them in the seats, this will prevent them from overturning and twisting, which would jeopardise sealing efficiency.

SEALING COMPOUNDS

Apply one of the following sealing compounds on the mating surfaces marked with an X: RTV SILMATE, RHODORSIL CAF 1 or LOCTITE PLASTIC GASKET. Before applying the sealing compound, prepare the surfaces as follows:

- remove any incrustations using a metal brush
- thoroughly de-grease the surfaces using one of the following cleaning agents: trichlorethylene, petrol or a water and soda solution

COTTER PINS

When fitting split cotter pins, ensure that the pin notch is positioned in the direction of the force required to stress the pin. Spiral cotter pins do not require special positioning.

PROTECTING THE ELECTRONIC/ ELECTRICAL SYSTEMS DURING CHARGING OR WELDING

To avoid damage to the electronic/electrical systems, always observe the following:

1. Never make or break any of the charging circuit connections, including the battery connections, when the engine is running.
2. Never short any of the charging components to ground.
3. Always disconnect the ground cable from the battery before arc welding on the combine or on any header attached to the combine.
 - position the welder ground clamp as close to the welding area as possible
 - if welding in close proximity to a computer module, then the module should be removed from the combine
 - never allow welding cables to lay on, near or across any electrical wiring or electronic component while welding is in progress
4. **⚠ WARNING**

Battery acid causes burns. Batteries contain sulfuric acid.

Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.

Failure to comply could result in death or serious injury.

W0111A

Always use the jump stud posts installed on the machine to jump start the machine or to charge the batteries. Refer to the Operator's Manual for more information!

NOTICE: *If welding must be performed on the unit, either the combine or the header (if it is attached), the battery ground cable must be disconnected. The electronic monitoring system and charging system will be damaged if this is not done. Refer to the Operator's Manual for more information!*

Remove the battery ground cable. Reconnect the cable when welding is completed.

SPARE PARTS

Only use "CNH Original Parts" or " NEW HOLLAND Parts".

Only genuine spare parts guarantee the same quality, duration and safety as original parts, as they are the same parts that are assembled during standard production. Only "CNH Original Parts" or " NEW HOLLAND Parts" can offer this guarantee.

When ordering spare parts, always provide the following information:

- machine model (commercial name) and serial number
- part number of the ordered part, which can be found in the "Microfiches" or the "Service Parts Catalogue", used for order processing

TOOLS

The tools that NEW HOLLAND suggests and illustrate in this manual have been:

- specifically researched and designed for use with NEW HOLLAND machines
- essential for reliable repair operations
- accurately built and rigorously tested so as to offer efficient and long-lasting operation

By using these tools, repair personnel will benefit from:

- operating in optimal technical conditions
- obtaining the best results
- saving time and effort
- working in safe conditions

NOTE: *Wear limit values indicated for certain parts should be considered to be recommended, but not binding. The terms "front", "rear", "right-hand" and "left-hand" (when referred to different parts) are determined from the rear, facing in the direction of travel of the machine during operation.*


Torque

CR10.90	NA
CR8.90	NA
CR9.90	NA
CX8.80	NA
CX8.90	NA

Minimum hardware tightening torques (in N m or lb in /lb ft) for normal assembly applications unless otherwise stated

NOTICE: Shown below is the suggested initial torque tightening sequences for general applications, tighten in sequence from item 1 through to the last item of the hardware.

The minimum hardware tightening torque on drawings, in specifications etc. have priority.
The applicable CNH Standard is ENS7001.

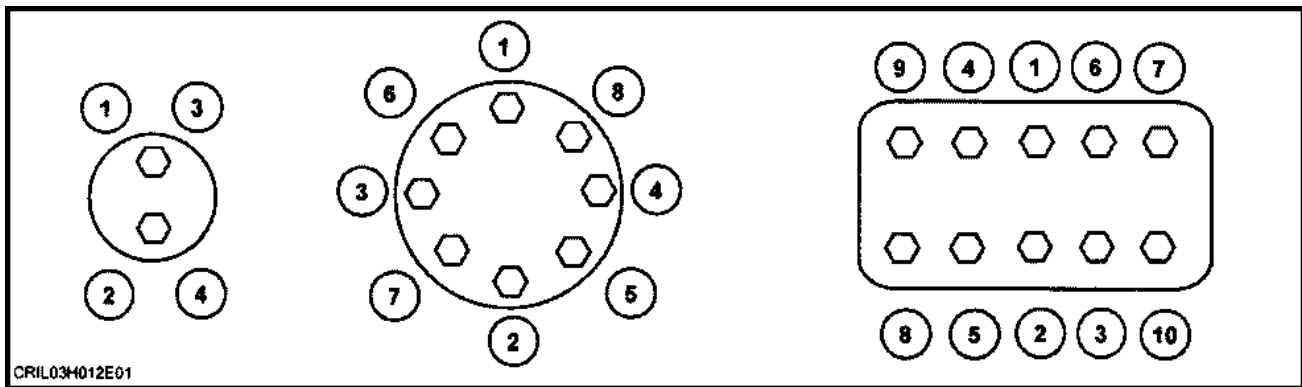

DF5019-1 1

Metric hardware

Nominal Size	Class 8.8 in N m (lb in or lb ft)			Class 10.9 in N m (lb in or lb ft)		
	Plated nut	Lock nut	Hardened nut	Plated nut	Lock nut	Hardened nut
M3	1.3 N·m (11.5 lb in)	0.7 N·m (6.2 lb in)	1.2 N·m (10.6 lb in)	1.8 N·m (15.9 lb in)	0.9 N·m (8.0 lb in)	1.6 N·m (14.2 lb in)
M4	2.9 N·m (25.7 lb in)	1.6 N·m (14.2 lb in)	2.6 N·m (23.0 lb in)	4.2 N·m (37.2 lb in)	2.3 N·m (20.4 lb in)	3.7 N·m (32.7 lb in)
M5	5.9 N·m (52.2 lb in)	3.2 N·m (28.3 lb in)	5.3 N·m (46.9 lb in)	8.5 N·m (75.2 lb in)	4.6 N·m (40.7 lb in)	7.6 N·m (67.3 lb in)
M6	10.1 N·m (89.4 lb in)	5.5 N·m (48.7 lb in)	9.1 N·m (80.5 lb in)	14.5 N·m (10.7 lb ft)	7.9 N·m (69.9 lb in)	13 N·m (9.6 lb ft)
M8	24.5 N·m (18.1 lb ft)	13.5 N·m (10.0 lb ft)	22 N·m (16.2 lb ft)	35.1 N·m (25.9 lb ft)	19.3 N·m (14.2 lb ft)	31.5 N·m (23.2 lb ft)
M10	48.7 N·m (35.9 lb ft)	26.8 N·m (19.8 lb ft)	43.8 N·m (32.3 lb ft)	69.5 N·m (51.3 lb ft)	38.2 N·m (28.2 lb ft)	62.5 N·m (46.1 lb ft)
M12	85 N·m (62.7 lb ft)	46.7 N·m (34.4 lb ft)	76.5 N·m (56.4 lb ft)	121 N·m (89.2 lb ft)	66.5 N·m (49.0 lb ft)	108.9 N·m (80.3 lb ft)
M14	135 N·m (99.6 lb ft)	74.2 N·m (54.7 lb ft)	121.5 N·m (89.6 lb ft)	193 N·m (142.3 lb ft)	106.1 N·m (78.3 lb ft)	173.7 N·m (128.1 lb ft)
M16	210 N·m (154.9 lb ft)	115.5 N·m (85.2 lb ft)	189 N·m (139.4 lb ft)	301 N·m (222 lb ft)	165.5 N·m (122.1 lb ft)	270.9 N·m (199.8 lb ft)
M18	299 N·m (220.5 lb ft)	164.4 N·m (121.3 lb ft)	269.1 N·m (198.5 lb ft)	414 N·m (305.4 lb ft)	227.7 N·m (167.9 lb ft)	372.6 N·m (274.8 lb ft)
M20	425 N·m (313.5 lb ft)	233.72 N·m (172.4 lb ft)	382.5 N·m (282.1 lb ft)	587 N·m (432.9 lb ft)	322.8 N·m (238.1 lb ft)	528.3 N·m (389.7 lb ft)
M22	579 N·m (427 lb ft)	318.4 N·m (234.8 lb ft)	521.1 N·m (384.3 lb ft)	801 N·m (590.8 lb ft)	440.5 N·m (324.9 lb ft)	720.9 N·m (531.7 lb ft)
M24	735 N·m (542.1 lb ft)	404.2 N·m (298.1 lb ft)	661.5 N·m (487.9 lb ft)	1016 N·m (749.4 lb ft)	558.8 N·m (412.1 lb ft)	914.4 N·m (674.4 lb ft)

Nominal Size	Class 8.8 in N m (lb in or lb ft)			Class 10.9 in N m (lb in or lb ft)		
	Plated nut	Lock nut	Hardened nut	Plated nut	Lock nut	Hardened nut
M27	1073 N·m (791.4 lb ft)	590.1 N·m (435.2 lb ft)	967.5 N·m (713.6 lb ft)	1486 N·m (1096 lb ft)	817.3 N·m (602.8 lb ft)	1337 N·m (986.1 lb ft)
M30	1461 N·m (1077.6 lb ft)	803.5 N·m (592.6 lb ft)	1315 N·m (969.9 lb ft)	2020 N·m (1489.9 lb ft)	1111 N·m (819.4 lb ft)	1818 N·m (1340.9 lb ft)

IDENTIFICATION

HEX CAP SCREW AND CARRIAGE BOLTS



SAE GRADE 2



 
SAE GRADE 5




SAE GRADE 8



REGULAR NUTS



SAE GRADE 5
HEX NUTS

 

SAE GRADE 8
HEX NUTS

 
LOCKNUTS



GRADE IDENTIFICATION
GRADE A: NO NOTCHES
GRADE B: ONE CIRCUMFERENTIAL NOTCH
GRADE C: TWO CIRCUMFERENTIAL NOTCHES



GRADE IDENTIFICATION
GRADE A: NO MARK
GRADE B: LETTER B
GRADE C: LETTER C




GRADE IDENTIFICATION
GRADE A: NO MARKS
GRADE B: THREE MARKS
GRADE C: SIX MARKS

ZEIL06CS0136F0A

**IDENTIFICATION
HEX CAP SCREW AND CARRIAGE BOLTS
CLASSES 5,6 AND UP**


MANUFACTURER'S IDENTIFICATION

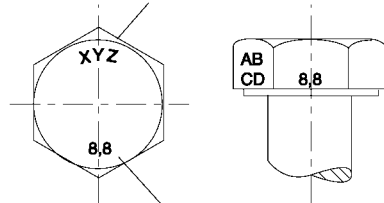

PROPERTY CLASS

**HEX NUTS AND LOCKNUTS
CLASSES 05 AND UP**

MANUFACTURER'S IDENTIFICATION

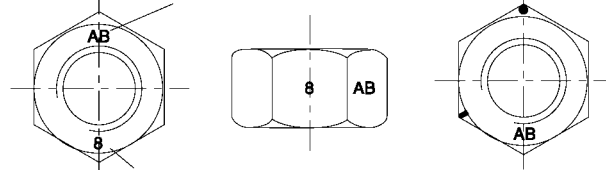

PROPERTY CLASS

CLOCK MARKING

ZEIL06CS0135F0A

ZEIL06CS0135F0A 3

Torque - Standard torque data for hydraulic connections

CR10.90	NA
CR9.90	NA
CX8.80	NA
CX8.90	NA

General information

- Hydraulic connections require a minimum assembly torque in order to provide zero leakage at rated pressure with adequate fatigue resistance. Over-torquing of a hydraulic connection can also lead to leakage or failure. For some connections, NEW HOLLAND requires a different torque value than is listed in the ISO and SAE standards.
- The torque values in this document should be used whenever possible or applicable.

NOTICE: Always follow the instructions in this manual for specific torque values when you service components. The information in this section is for general guidance only when a procedure contains no specific torque value.

Tolerance

- The tolerance for all torque values is $\pm 10\%$. This tolerance must include all assembly variation, not only the torque wrench repeatability.

Lubrication

Application of grease or other lubricants to hydraulic connectors should be avoided. If clean hydraulic oil is already on the connection, it is not required to remove the oil. Generally, application of grease:

- May cause a significant change in the torque required to properly tighten the connection.
- May reduce the connection's resistance to vibration.
- Excessive grease may displace an elastomer seal during tightening.
- Grease extrusion when connection is tightened may be mistaken for leakage.

NEW HOLLAND products generally use O-Ring Boss (ORB) connectors that have Teflon™-coated O-rings, eliminating the need for O-ring lubrication during installation. For connections which are made into aluminum manifolds or with stainless steel connectors, it may be required to apply a lubricant to prevent galling.

Use of **LOCTITE®** and other thread-locking compounds is prohibited. These compounds:

- May cause a significant change in the torque required to properly tighten the connections.
- Reduce the serviceability of the joint.
- May prevent the O-ring from properly sealing if the compound gets on the O-ring.

Torque values for metric O-Ring Boss (ORB) port connections

Metric thread	S-Series *		L-Series **	
	Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %	Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %
M8 x 1	10.5 (7.7)	6.3 (4.6)	8.5 (6.3)	5 (3.7)
M10 x 1	21 (15.5)	12.5 (9.2)	15.5 (11.4)	9.3 (6.9)
M12 x 1.5	37 (27.3)	22 (16.2)	27 (19.9)	16 (11.8)
M14 x 1.5	47 (34.7)	28 (20.7)	37 (27.3)	22 (16.2)
M16 x 1.5	58 (42.8)	35 (25.8)	42 (31)	25 (18.4)
M18 x 1.5	74 (54.6)	44 (32.5)	47 (34.7)	28 (20.7)
M22 x 1.5	105 (77.4)	63 (46.5)	63 (46.5)	38 (28)
M27 x 2	178 (131.3)	107 (78.9)	105 (77.4)	63 (46.5)
M30 x 2	225 (166)	135 (99.6)	136 (100.3)	82 (60.5)
M33 x 2	325 (239.7)	195 (143.8)	168 (123.9)	101 (74.5)
M42 x 2	345 (254.5)	207 (152.7)	220 (162.3)	132 (97.4)
M48 x 2	440 (324.5)	264 (194.7)	273 (201.4)	164 (121)
M60 x 2	525 (387.2)	315 (232.3)	330 (243.4)	198 (146)

* S-Series connectors are used with O-Ring Face Seals (ORFS).

** L-Series connectors are used with 37 ° flare.

Torque values for metric O-Ring Boss (ORB) port plugs

Metric thread	Ferrous		Non-ferrous
	Internal hex N·m (lb ft) ± 10 %	External hex N·m (lb ft) ± 10 %	N·m (lb ft) ± 10 %
M8 x 1	8.5 (6.3)	10.5 (7.7)	6.3 (4.6)
M10 x 1	16 (11.8)	21 (15.5)	12.5 (9.2)
M12 x 1.5	23 (17)	37 (27.3)	22 (16.2)
M14 x 1.5	47 (34.7)	47 (34.7)	28 (20.7)
M16 x 1.5	58 (42.8)	58 (42.8)	35 (25.8)
M18 x 1.5	74 (54.6)	74 (54.6)	44 (32.5)
M22 x 1.5	105 (77.4)	105 (77.4)	63 (46.5)
M27 x 2	178 (131.3)	178 (131.3)	107 (78.9)
M30 x 2	225 (166)	225 (166)	135 (99.6)
M33 x 2	325 (239.7)	325 (239.7)	195 (143.8)
M42 x 2	345 (254.5)	345 (254.5)	207 (152.7)
M48 x 2	440 (324.5)	440 (324.5)	264 (194.7)
M60 x 2	525 (387.2)	525 (387.2)	315 (232.3)

Torque values for port connections (British Standard Pipe Parallel (BSPP) thread ports and stud ends)

	Metric tube Outside Diameter (OD) mm (in)		Ferrous		Non-Ferrous	
BSPP thread G- Gas; A- medium coarse threads	S-Series *	L-Series **	S-Series N·m (lb ft) ± 10 %	L-Series N·m (lb ft) ± 10 %	S-Series N·m (lb ft) ± 10 %	L-Series N·m (lb ft) ± 10 %
G 1/8 A	–	6 (0.236)	–	21 (15.5)	–	12.5 (9.2)
G 1/4 A	6 (0.236) or 8 (0.315)	8 (0.315) or 10 (0.394)	63 (46.5)	53 (39.1)	38 (28)	32 (23.6)
G 3/8 A	10 (0.394) or 12 (0.472)	12 (0.472)	95 (70.1)	84 (62)	57 (42)	50 (36.9)
G 1/2 A	16 (0.630)	15 (0.591) or 18 (0.709)	136 (100.3)	105 (77.4)	82 (60.5)	63 (46.5)
G 3/4 A	20 (0.787)	22 (0.866)	210 (154.9)	210 (154.9)	126 (92.9)	126 (92.9)
G 1 A	25 (0.984)	28 (1.102)	400 (295)	400 (295)	240 (177)	240 (177)
G 1 1/4 A	30 (1.181)	35 (1.378)	525 (387.2)	525 (387.2)	315 (232.3)	315 (232.3)
G 1 1/2 A	38 (1.496)	42 (1.654)	660 (486.8)	660 (486.8)	396 (292.1)	396 (292.1)

* S-Series connectors are used with O-Ring Face Seals (ORFS).

** L-Series connectors are used with 37 ° flare.

Torque values for metric port connections (Metric face-seal ports and stud ends)

	Metric tube Outside Diameter (OD) mm (in)		Ferrous		Non-Ferrous	
Metric thread	S-Series *	L-Series **	S-Series N·m (lb ft) ± 10 %	L-Series N·m (lb ft) ± 10 %	S-Series N·m (lb ft) ± 10 %	L-Series N·m (lb ft) ± 10 %
M10 x 1	–	4 (0.157)	–	21 (15.5)	–	12.5 (9.2)
M12 x 1.5	4 (0.157)	6 (0.236)	47 (34.7)	32 (23.6)	28 (20.7)	19 (14)
M14 x 1.5	5 (0.197)	7 (0.276)	63 (46.5)	53 (39.1)	38 (28)	32 (23.6)
M16 x 1.5	7 (0.276)	9 (0.354)	84 (62)	63 (46.5)	50 (36.9)	38 (28)
M18 x 1.5	8 (0.315)	11 (0.433)	105 (77.4)	84 (62)	63 (46.5)	50 (36.9)
M20 x 1.5	10 (0.394)	–	147 (108.4)	–	88 (64.9)	–
M22 x 1.5	12 (0.472)	14 (0.551)	158 (116.5)	147 (108.4)	95 (70.1)	88 (64.9)
M26 x 1.5	–	18 (0.709)	–	210 (154.9)	–	126 (92.9)
M27 x 1.2	16 (0.630)	–	210 (154.9)	–	126 (92.9)	–
M33 x 2	20 (0.787)	23 (0.906)	400 (295)	400 (295)	240 (177)	240 (177)
M42 x 2	25 (0.984)	30 (1.181)	525 (387.2)	525 (387.2)	315 (232.3)	315 (232.3)
M48 x 2	32 (1.260)	36 (1.417)	630 (464.7)	630 (464.7)	396 (292.1)	396 (292.1)

* S-Series connectors are used with O-Ring Face Seals (ORFS).

** L-Series connectors are used with 37 ° flare.

Torque values for Inch O-Ring Boss (ORB) port non-adjustable connections

SAE dash size	UN/UNF thread size	Inch tube OD mm (in)	S-Series *		L-Series **	
			Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %	Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %
2	5/16-24	3.18 (0.125)	—	—	8.5 (6.3)	5 (3.7)
3	3/8-24	4.76 (0.187)	15.5 (11.4)	9.3 (6.9)	10.5 (7.7)	6.3 (4.6)
4	7/16-20	6.35 (0.250)	37 (27.3)	22 (16.2)	19 (14)	11.5 (8.5)
5	1/2-20	7.94 (0.313)	42 (31)	25 (18.4)	26 (19.2)	15.5 (11.4)
6	9/16-18	9.52 (0.375)	47 (34.7)	28 (20.7)	32 (23.6)	19 (14)
8	3/4-16	12.7 (0.500)	89 (65.6)	53 (39.1)	53 (39.1)	32 (23.6)
10	7/8-14	15.88 (0.625)	121 (89.2)	73 (53.8)	63 (46.5)	38 (28)
12	1-1/16-12	19.05 (0.750)	178 (131.3)	107 (78.9)	100 (73.8)	60 (44.3)
14	1-3/16-12	22.22 (0.875)	225 (166)	135 (99.6)	131 (96.6)	79 (58.3)
16	1-5/16-12	25.4 (1.000)	283 (208.7)	170 (125.4)	156 (115.1)	94 (69.3)
20	1-5/8-12	31.75 (1.250)	300 (221.3)	180 (132.8)	210 (154.9)	126 (92.9)
24	1-7/8-12	38.1 (1.500)	388 (286.2)	233 (171.9)	220 (162.3)	132 (97.4)
32	2-1/2-12	50.8 (2.000)	388 (286.2)	233 (171.9)	315 (232.3)	189 (139.4)

* S-Series connectors are used with O-Ring Face Seals (ORFS).

** L-Series connectors are used with 37 ° flare.

Torque values for inch O-Ring Boss (ORB) port adjustable connections

SAE dash size	UN/UNF thread size	Inch tube OD mm (in)	S-Series *		L-Series **	
			Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %	Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %
2	5/16-24	3.18 (0.125)	—	—	8.5 (6.3)	5 (3.7)
3	3/8-24	4.76 (0.187)	10.5 (7.7)	9.3 (6.9)	10.5 (7.7)	6.3 (4.6)
4	7/16-20	6.35 (0.250)	21 (15.5)	21 (15.5)	19 (14)	11.5 (8.5)
5	1/2-20	7.94 (0.313)	42 (31)	25 (18.4)	26 (19.2)	15.5 (11.4)
6	9/16-18	9.52 (0.375)	47 (34.7)	28 (20.7)	32 (23.6)	19 (14)
8	3/4-16	12.7 (0.500)	89 (65.6)	53 (39.1)	53 (39.1)	32 (23.6)
10	7/8-14	15.88 (0.625)	121 (89.2)	73 (53.8)	63 (46.5)	38 (28)
12	1-1/16-12	19.05 (0.750)	178 (131.3)	107 (78.9)	100 (73.8)	60 (44.3)
14	1-3/16-12	22.22 (0.875)	225 (166)	135 (99.6)	131 (96.6)	79 (58.3)
16	1-5/16-12	25.4 (1.000)	285 (210.2)	170 (125.4)	156 (115.1)	94 (69.3)
20	1-5/8-12	31.75 (1.250)	300 (221.3)	180 (132.8)	210 (154.9)	126 (92.9)
24	1-7/8-12	38.1 (1.500)	388 (286.2)	233 (171.9)	220 (162.3)	132 (97.4)
32	2-1/2-12	50.8 (2.000)	388 (286.2)	233 (171.9)	315 (232.3)	189 (139.4)

* S-Series connectors are used with O-Ring Face Seals (ORFS).

** L-Series connectors are used with 37 ° flare.

Torque values for inch O-Ring Boss (ORB) port plugs

SAE dash size	UN/UNF thread size	Ferrous		Non-Ferrous
		Internal hex N·m (lb ft) ± 10 %	External hex N·m (lb ft) ± 10 %	N·m (lb ft) ± 10 %
2	5/16-24	7.5 (5.5)	12.5 (9.2)	7.5 (5.5)
3	3/8-24	14.5 (10.7)	21 (15.5)	12.5 (9.2)
4	7/16-20	21 (15.5)	37 (27.3)	22 (16.2)
5	1/2-20	28 (20.7)	42 (31)	25 (18.4)
6	9/16-18	47 (34.7)	47 (34.7)	28 (20.7)
8	3/4-16	89 (65.6)	89 (65.6)	53 (39.1)
10	7/8-14	116 (85.6)	116 (85.6)	70 (51.6)
12	1-1/16-12	176 (129.8)	176 (129.8)	106 (78.2)
14	1-3/16-12	247 (182.2)	247 (182.2)	148 (109.2)
16	1-5/16-12	284 (209.5)	284 (209.5)	170 (125.4)
20	1-5/8-12	357 (263.3)	357 (263.3)	214 (157.8)
24	1-7/8-12	441 (325.3)	441 (325.3)	265 (195.5)
32	2-1/2-12	536 (395.3)	536 (395.3)	322 (237.5)

Torque values for four-bolt flange connections (Metric Screws, Class 10.9)

Metric size mm	Imperial size in	Screw code 61	Code 61 N·m (lb ft) ± 10 %	Screw code 62	Code 62 N·m (lb ft) ± 10 %
13	1/2	M8 x 1.25	34 (25.1)	M8 x 1.25	34 (25.1)
19	3/4	M10 x 1.5	74 (54.6)	M10 x 1.5	74 (54.6)
25	1	M10 x 1.5	74 (54.6)	M12 x 1.75	137 (101)
32	1-1/4	M10 x 1.5	74 (54.6)	M12 x 1.75	137 (101)
				M14 x 1.5	189 (139.4)
38	1-1/2	M12 x 1.75	137 (101)	M16 x 2	310 (228.6)
51	2	M12 x 1.75	137 (101)	M20 x 2.5	575 (424.1)
64	2-1/2	M12 x 1.75	137 (101)	M24 x 3	575 (424.1)
76	3	M16 x 2	310 (228.6)	M30 x 3.5	680 (501.5)
89	3-1/2	M16 x 2	310 (228.6)	—	—
102	4	M16 x 2	310 (228.6)	—	—
127	5	M16 x 2	310 (228.6)	—	—

Torque values for four-bolt flange connections (Metric Screws, Class 8.8)

Metric size mm	Imperial size in	Screw code 61	Code 61 N·m (lb ft) ± 10 %	Screw code 62	Code 62 N·m (lb ft) ± 10 %
13	1/2	M8 x 1.25	29 (21.4)	M8 x 1.25	29 (21.4)
19	3/4	M10 x 1.5	57(42)	M10 x 1.5	57(42)
25	1	M10 x 1.5	57(42)	M12 x 1.75	100 (73.8)
32	1-1/4	M10 x 1.5	57(42)	M12 x 1.75	100 (73.8)
				M14 x 1.5	160 (118)
38	1-1/2	M12 x 1.75	100 (73.8)	M16 x 2	250 (184.4)
51	2	M12 x 1.75	100 (73.8)	M20 x 2.5	500 (368.8)
64	2-1/2	M12 x 1.75	100 (73.8)	M24 x 3	575 (424.1)
76	3	M16 x 2	250 (184.4)	M30 x 3.5	680 (501.5)
89	3-1/2	M16 x 2	250 (184.4)	—	—
102	4	M16 x 2	250 (184.4)	—	—
127	5	M16 x 2	250 (184.4)	—	—

Torque values for four-bolt flange connections (Inch Screws, Grade 8)

Metric size mm	Imperial size in	Screw code 61	Code 61 N·m (lb ft) ± 10 %	Screw code 62	Code 62 N·m (lb ft) ± 10 %
13	1/2	5/16-18	34 (25.1)	5/16-18	34 (25.1)
19	3/4	3/8-16	63 (46.5)	3/8-16	63 (46.5)
25	1	3/8-16	63 (46.5)	7/16-14	97 (71.5)
32	1-1/4	7/16-14	97 (71.5)	1/2-13	158 (116.5)
38	1-1/2	1/2-13	158 (116.5)	5/8-11	310 (228.6)
51	2	1/2-13	158 (116.5)	3/4-10	473 (348.9)
64	2-1/2	1/2-13	158 (116.5)	–	–
76	3	5/8-11	310 (228.6)	–	–
89	3-1/2	5/8-11	310 (228.6)	–	–
102	4	5/8-11	310 (228.6)	–	–
127	5	5/8-11	310 (228.6)	–	–

Tapered thread connection tightening

British Standard Pipe Taper (BSPT) thread size (inch)	National Pipe Thread Fuel (NPTF) thread size (inch)	Turns from finger tight
1/8-28	1/8-27	2 - 3
1/4-19	1/4-18	2 - 3
3/8-19	3/8-18	2 - 3
1/2-14	1/2-14	2 - 3
3/4-14	3/4-14	2 - 3
1-11	1-11 1/2	1.5 - 2.5
1-1/4-11	1-1/4-11 1/2	1.5 - 2.5
1-1/2-11	1-1/2-11 1/2	1.5 - 2.5
2-11	2-11 1/2	1.5 - 2.5

Torque values for banjo bolt connections (Copper washer style)

Bolt thread (metric)	Hex size (mm)	Torque N·m (lb ft) ± 10 %
M8 x 1.25	13	13 (9.6)
M10 x 1.25	17	16 (11.8)
M12 x 1.5	17	40 (29.5)
M14 x 1.5	19	45 (33.2)
M16 x 1.5	22	48 (35.4)
M18 x 1.5	24	50 (36.9)
M20 x 1.5	27	73 (53.8)
M22 x 1.5	32	73 (53.8)
M24 x 1.5	32	73 (53.8)

Torque values for O-Ring Face Seals (ORFS) connections

SAE dash size	UN/UNF thread size	Inch tube OD (mm)	Metric tube OD (mm)	Hex size (mm) (Reference only)	* Swivel nut torque N·m (lb ft) ± 10 %	** Swivel nut torque N·m (lb ft) ± 10 %
4	9/16-18	6.35	6	17	27 (19.9)	27 (19.9)
5	5/8-18	7.94	8	19	34 (25.1)	34 (25.1)
6	11/16-16	9.52	10	22	44 (32.5)	44 (32.5)
8	13/16-16	12.7	12	24	65 (47.9)	65 (47.9)
10	1-14	15.88	16	30	100 (73.8)	100 (73.8)
12	1-3/16-12	19.05	20	36	150 (110.6)	131 (96.6)
14	1-5/16-12	22.23	22	41	163 (120.2)	131 (96.6)
16	1-7/16-12	25.4	25	41	210 (154.9) ***	131 (96.9)
20	1-11/16-12	31.75	30	50	280 (206.5) ***	178 (131.3)
24	2-12	38.1	38	60	375 (276.6) ***	210 (154.9)

* High/Medium-pressure applications > 50 bar (725 psi).

** Low-pressure applications < 50 bar (725 psi).

*** It is recommended to use a four-bolt flange connection instead of O-Ring Face Seals (ORFS) sizes "16" and up.

Torque values for 37 ° flare connections - Joint Industry Council (JIC)

SAE dash size	UN/UNF thread size	Metric tube OD (mm)	Inch tube OD (mm)	Swivel nut torque N·m (lb ft) ± 10 %
2	5/16-24	—	3.18	8.25 (6.1)
3	3/8-24	—	4.76	11.5 (8.5)
4	7/16-20	6	6.35	15.5 (11.4)
5	1/2-20	8	7.94	20 (14.8)
6	9/16-18	10	9.52	25 (18.4)
8	3/4-16	12	12.7	52 (38.4)
10	7/8-14	16	15.88	81 (59.7)
12	1-1/16-12	20	19.05	112 (82.6)
14	1-3/16-12	—	22.22	133 (98.1)
16	1-5/16-12	25	25.4	155 (114.3)
20	1-5/8-12	30/32	31.75	180 (132.8)
24	1-7/8-12	38	38.1	225 (166)
32	2-1/2-12	50	50.8	348 (256.7)

Torque values for 30 ° flare, 60 ° cone connections


Nominal size (mm)	British Standard Pipe Parallel (BSPP) thread size	Hex size (mm)	Swivel nut torque N·m (lb ft) ± 10 %
5, 6, 6.3	G 1/4	17	25 (18.4)
8, 9, 10	G 3/8	19	34 (25.1)
12, 12.5	G 1/2	22	64 (47.2)
15, 16, 19	G 3/4	30	132 (97.4)
25	G 1	36	196 (144.6)
31.5, 32	G 1-1/4	46	225 (166)
38	G 1-1/2	50	255 (188.1)
50, 51	G 2	65	316 (223.1)

Basic instructions - Chain Wear Tables - Roller Chains

CR10.90	NA
CR8.90	NA
CR9.90	NA
CX8.80	NA
CX8.90	NA

Chain Wear

The individual joints in a roller chain articulate as they enter and leave the sprockets. This articulation results in wear on the pins and bushings. A material is worn away from these surfaces the chain will gradually elongate.

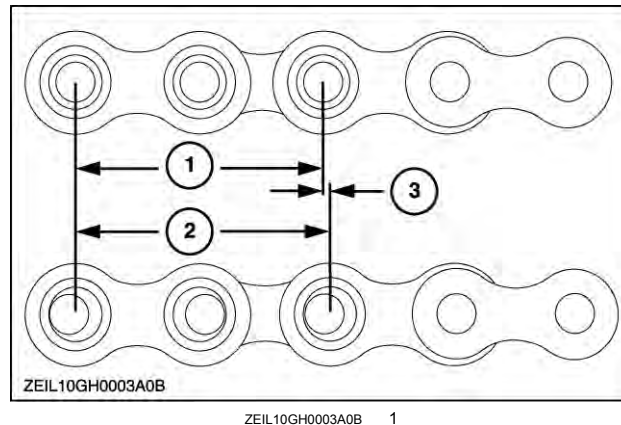


Chains do not "stretch" - material is removed from pin and bushing.

- (1): 2x pitch
- (2): 2x pitch + wear
- (3): elongation due to pin and bushing wear.

Elongation is normal and may be minimized by proper lubrication and drive maintenance. The rate of wear is dependent upon: the relationship between the load and the amount of bearing area between pin and bushing, the material and surface condition of the bearing surfaces, the adequacy of lubrication and the frequency and degree of articulation between pins and bushings.

The latter is determined by the quantity of sprockets in the drive, their speeds, the number of teeth and the length of the chain in pitches.

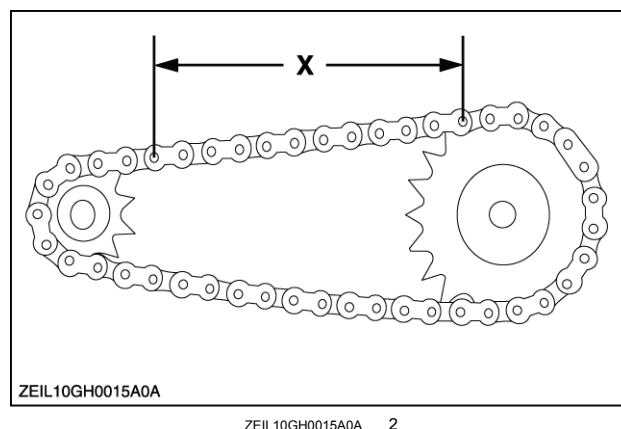

Measurement of Chain For Wear Elongation

Relatively accurate wear measurements can be made by using the above illustration. Measure as closely as possible from the center of one pin to the center of another. The more pitches (pins) contained within the measurement increase the accuracy. If the measured value exceeds the nominal by more than the allowable percentage the chain should be replaced.

The maximum allowable wear elongation is approximately **3 %** for most industrial applications, based upon sprocket design. The allowable chain wear in percent can be calculated using the relationship: $200 / (N)$, where **(N)** is the number of teeth in the large sprocket.

This relationship is often useful since the normal maximum allowable chain wear elongation of 3 % is valid only up to 67 teeth in the large sprocket. In drives having fixed center distances, chains running in parallel or where smoother operation is required, wear should be limited to approximately 1.5 %.

For example, if 40 pitches (40 pins) of a #40 chain were measured and the result was 523 mm (20.6 in) or greater (using 3 % as the maximum allowable wear), the chain should be replaced. Anything less than 523 mm (20.6 in) would still be acceptable by most industrial standards.

WEAR LIMITS ON ROLLER CHAIN

Strand Length in Pitches	No. 40 Chain (08A)		No. 50 Chain (10A)		No. 60 Chain (12A)		No. 80 Chain (16A)	
	New	Replace	New	Replace	New	Replace	New	Replace
40P	508 mm (20.0 in)	523 mm (20.6 in)	635 mm (25.0 in)	654 mm (25.7 in)	762 mm (30.0 in)	787 mm (31.0 in)	1016 mm (40.0 in)	1047 mm (41.2 in)
50P	635 mm (25.0 in)	654 mm (25.7 in)	793 mm (31.2 in)	817 mm (32.2 in)	952 mm (37.5 in)	981 mm (38.6 in)	1270 mm (50.0 in)	1308 mm (51.5 in)
60P	762 mm (30.0 in)	784 mm (30.9 in)	952 mm (37.5 in)	981 mm (38.6 in)	1143 mm (45.0 in)	1177 mm (46.3 in)	1524 mm (60.0 in)	1568 mm (61.7 in)
70P	889 mm (35.0 in)	914 mm (36.0 in)	1111 mm (43.7 in)	1144 mm (45.0 in)	1333 mm (52.5 in)	1371 mm (54.0 in)	1778 mm (70.0 in)	1828 mm (72.0 in)
80P	1016 mm (40.0 in)	1047 mm (41.2 in)	1270 mm (50.0 in)	1308 mm (51.5 in)	1524 mm (60.0 in)	1568 mm (61.7 in)	2032 mm (80.0 in)	2095 mm (82.5 in)
90P	1143 mm (45.0 in)	1177 mm (46.3 in)	1428 mm (56.2 in)	1473 mm (58.0 in)	1714 mm (67.5 in)	1765 mm (69.5 in)	2286 mm (90.0 in)	2355 mm (92.7 in)
100P	1270 mm (50.0 in)	1308 mm (51.5 in)	1578 mm (62.1 in)	1635 mm (64.4 in)	1905 mm (75.0 in)	1962 mm (77.2 in)	2540 mm (100.0 in)	2616 mm (103.0 in)

STANDARD ROLLER CHAIN SIZES - NEW CHAINS

Chain No.	150 Chain No.	Pitch	Width	Roller Diameter
40	08A	12.7 mm (0.5 in)	7.9 mm (0.3 in)	7.9 mm (0.3 in)
50	10A	15.8 mm (0.6 in)	9.5 mm (0.4 in)	10.1 mm (0.4 in)
60	12A	19 mm (0.7 in)	12.7 mm (0.5 in)	11.9 mm (0.5 in)
80	16A	25.4 mm (1.0 in)	15.8 mm (0.6 in)	15.8 mm (0.6 in)
100	20A	31.7 mm (1.2 in)	19 mm (0.7 in)	19 mm (0.7 in)
120	24A	38.1 mm (1.5 in)	25.4 mm (1.0 in)	22.2 mm (0.9 in)
140	28A	44.4 mm (1.7 in)	25.4 mm (1.0 in)	25.4 mm (1.0 in)
160	32A	50.8 mm (2.0 in)	31.7 mm (1.2 in)	28.5 mm (1.1 in)
180	*	57.1 mm (2.2 in)	35.7 mm (1.4 in)	35.7 mm (1.4 in)
200	40A	63.4 mm (2.5 in)	38.1 mm (1.5 in)	39.6 mm (1.6 in)

* No. 150 Number does not exist.

Basic instructions - Shop and assembly

CR10.90 TIER 4B [1947 -]	NA
CR8.90 TIER4A [1946 -]	NA
CR9.90 TIER 4A [1947 -]	NA
CX8.80	NA
CX8.90	NA

Shimming

For each adjustment operation, select adjusting shims and measure the adjusting shims individually using a micrometer, then add up the recorded values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value shown on each shim.

Rotating shaft seals

For correct rotating shaft seal installation, proceed as follows:

1. Before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes.
2. Thoroughly clean the shaft and check that the working surface on the shaft is not damaged.
3. Position the sealing lip facing the fluid.

NOTE: With hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will move the fluid towards the inner side of the seal.

4. Coat the sealing lip with a thin layer of lubricant (use oil rather than grease). Fill the gap between the sealing lip and the dust lip on double lip seals with grease.
5. Insert the seal in its seat and press down using a flat punch or seal installation tool. Do not tap the seal with a hammer or mallet.
6. While you insert the seal, check that the seal is perpendicular to the seat. When the seal settles, make sure that the seal makes contact with the thrust element, if required.
7. To prevent damage to the seal lip on the shaft, position a protective guard during installation operations.

O-ring seals

Lubricate the O-ring seals before you insert them in the seats. This will prevent the O-ring seals from overturning and twisting, which would jeopardize sealing efficiency.

Sealing compounds

Apply a sealing compound on the mating surfaces when specified by the procedure. Before you apply the sealing compound, prepare the surfaces as directed by the product container.

Spare parts

Only use CNH Original Parts or NEW HOLLAND Original Parts.

Only genuine spare parts guarantee the same quality, duration, and safety as original parts, as they are the same parts that are assembled during standard production. Only CNH Original Parts or NEW HOLLAND Original Parts can offer this guarantee.

When ordering spare parts, always provide the following information:

- Machine model (commercial name) and Product Identification Number (PIN)
- Part number of the ordered part, which can be found in the parts catalog

Protecting the electronic and/or electrical systems during charging and welding

To avoid damage to the electronic and/or electrical systems, always observe the following practices:

1. Never make or break any of the charging circuit connections when the engine is running, including the battery connections.
2. Never short any of the charging components to ground.
3. Always disconnect the ground cable from the battery before arc welding on the machine or on any machine attachment.
 - Position the welder ground clamp as close to the welding area as possible.
 - If you weld in close proximity to a computer module, then you should remove the module from the machine.
 - Never allow welding cables to lie on, near, or across any electrical wiring or electronic component while you weld.
4. Always disconnect the negative cable from the battery when charging the battery in the machine with a battery charger.

NOTICE: *If you must weld on the unit, you must disconnect the battery ground cable from the machine battery. The electronic monitoring system and charging system will be damaged if this is not done.*

5. Remove the battery ground cable. Reconnect the cable when you complete welding.

WARNING

Battery acid causes burns. Batteries contain sulfuric acid.

Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.

Failure to comply could result in death or serious injury.

W0111A

Special tools

The special tools that NEW HOLLAND suggests and illustrate in this manual have been specifically researched and designed for use with NEW HOLLAND machines. The special tools are essential for reliable repair operations. The special tools are accurately built and rigorously tested to offer efficient and long-lasting operation.

By using these tools, repair personnel will benefit from:

- Operating in optimal technical conditions
- Obtaining the best results
- Saving time and effort
- Working in safe conditions

Conversion factors

CR10.90	NA
CR8.90	NA
CR9.90	NA
CX8.80	NA
CX8.90	NA

Length

1 mm	=	0.0393 in	1 in	=	25.4 mm
1 km	=	0.621 miles	1 miles	=	1.609 km
1 m	=	3.281 ft	1 ft	=	0.3048 m

Area

1 ha	=	2.471 ac	1 ac	=	0.404 US fl oz
1 m ²	=	10.76 ft ²	1 ft ²	=	0.0923 m ²

Volume

1 litre	=	0.26 US gal	1 US gal	=	3.78 litre
1 litre	=	0.028 Bu	1 Bu	=	35.23 litre
1 litre	=	1.057 US quart	1 US quart	=	0.9464 litre
1 cm ³ (cc)	=	0.061 in ³	1 in ³	=	16.38 cm ³ (cc)
1 m ³	=	35.31 ft ³	1 ft ³	=	0.028 m ³
1 ml	=	0.033 US fl oz	1 US fl oz	=	29.57 ml

Mass

1 kg	=	2.204 lb	1 lb	=	0.4536 kg
------	---	----------	------	---	-----------

Torque

1 N·m	=	0.7376 lb ft	1 lb ft	=	1.3558 N·m
-------	---	--------------	---------	---	------------

Power

1 kW	=	1.358 Hp	1 Hp	=	0.746 kW
------	---	----------	------	---	----------

Pressure

1 bar	=	100 kPa	1 psi	=	0.06894 bar
1 bar	=	14.505 psi			

Temperature

1 °C	=	((1.8 x ° C) + 32) °F	1 °F	=	(0.56 x (° F - 32)) °C
------	---	-----------------------	------	---	------------------------

Flow

1 l/min	=	0.2642 US gpm	1 US gpm	=	3.7853 l/min
---------	---	---------------	----------	---	--------------

Speed

1 km/h	=	0.62 mph	1 mph	=	1.6 km/h
--------	---	----------	-------	---	----------

Product identification

CR10.90	NA
CR8.90 TIER4A [1946 -]	NA
CR9.90 TIER 4A [1947 -]	NA
CX8.80	NA
CX8.90	NA


Your NEW HOLLAND combine is identified using a Product Identification Number.

Product Identification Number and model can be found on the PIN (Product Identification Number) plate. According to the destination and specification, additional data is given (e.g. weight, year of manufacture, etc.).

The Product Identification Number (PIN) of the combine and the engine can be found on the following locations:

Base unit

On a plate **(1)** positioned on the frame rail below the right-hand side of the operator's platform.

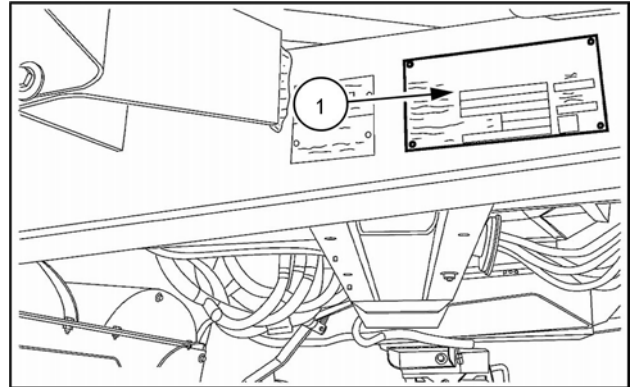


93103469 1

Engine

Cursor 9


- On a plate at the top, left side of engine.

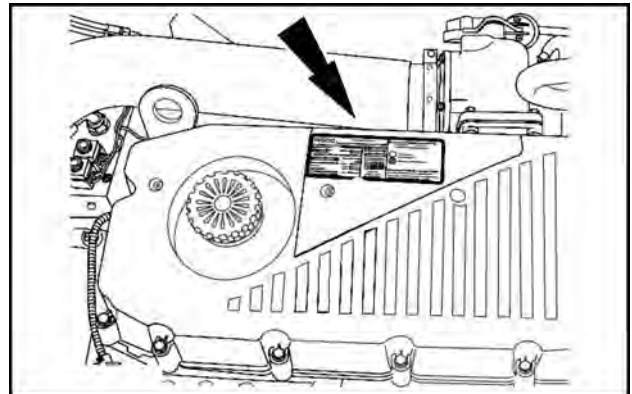

1Z0R200909ZEIL0 2


Cursor 10 and Cursor 13

- On a plate positioned on top of the rocker cover.

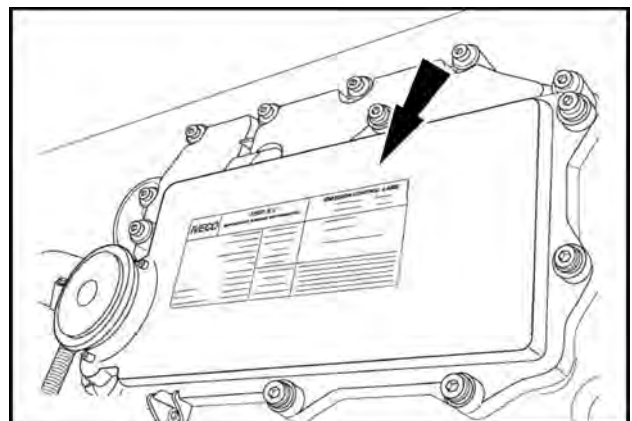


86063484A 3

- On a plate **(1)** on the breather cover.

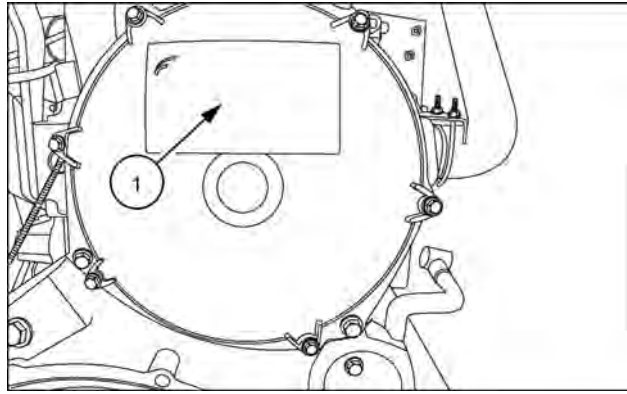

93094775 4

- On a plate on the engine block.

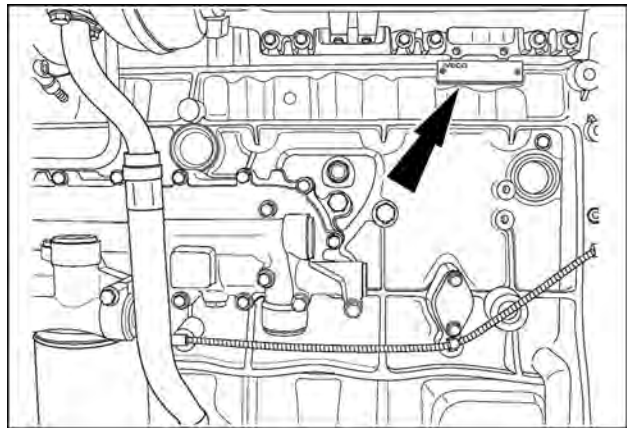

86063483 5



SERVICE MANUAL

Engine

CR10.90 TIER 4B [1947 -]

CR8.90 TIER4A [1946 -]

CR9.90 TIER 4A [1947 -]

CX8.80 TIER 4B [1957 -]

CX8.90 TIER 4A [1962 -]

Contents

Engine - 10

[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.254] Intake and exhaust manifolds and muffler	10.3
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.4
[10.400] Engine cooling system	10.5
[10.418] Rotary screen	10.6
[10.450] Engine air compressor	10.7



Engine - 10

Engine and crankcase - 001

CR10.90 TIER 4B [1947 -]
CR8.90 TIER4A [1946 -]
CR9.90 TIER 4A [1947 -]
CX8.80 TIER 4B [1957 -]
CX8.90 TIER 4A [1962 -]

Contents

Engine - 10

Engine and crankcase - 001

SERVICE

Engine

Remove (*)	3
Remove (*)	12
Remove (*)	28
Install (*)	44
Install (*)	52
Install (*)	67

DIAGNOSTIC

Engine

Troubleshooting (*)	82
---------------------------	----

(*) See content for specific models


Engine - Remove

CR10.90	NA
CR8.90	NA
CR9.90	NA
CX8.80	NA
CX8.90	NA

NOTE: The engine and cooling system used in the combine is designed to be removed as a modular unit. The following engine removal procedure demonstrates the removal of the engine only from the module. This procedure takes into consideration the possible unavailability of proper, or sufficient lifting equipment for complete module removal. When possible, remove the engine and cooling system module as designed.

1. Remove the gearbox and hydraulic pumps from the engine. (Refer to **Main gearbox and drive - Remove (14.100)**)
Place a suitable container (1) below the coolant drain hose (2).

NOTE: Depending on model, the cooling system has a coolant capacity between **50 - 60 l (13.2 - 15.9 US gal)**. Be sure to use clean containers with adequate capacity when draining the cooling system.

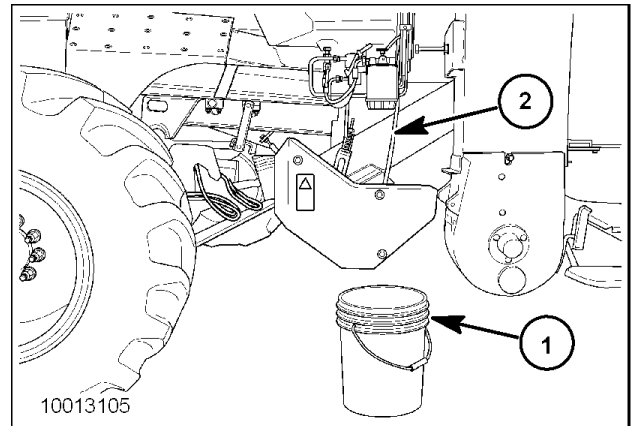


10013105_780 1

2. Refer to **Expansion tank - Remove (10.400)** for the coolant fluid drain and removal of the engine coolant reservoir.


NOTE: Depending on the model, the combine engine has an oil capacity between **29 - 35 l (7.7 - 9.2 US gal)**. Be sure to use clean containers with adequate capacity when draining the engine oil.

3. Remove the cap (1) and turn the engine oil drain valve (2), to the open position. Drain all of the engine oil into suitable containers.

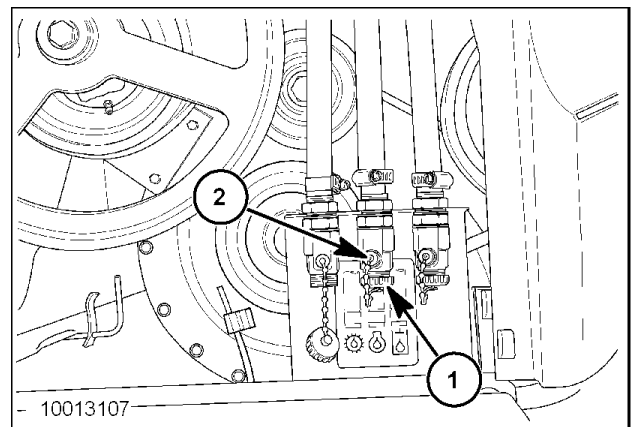


10013107 2

4. Loosen and remove the mounting hardware from the protection cover (1).
Remove the cover (1) from the engine compartment.

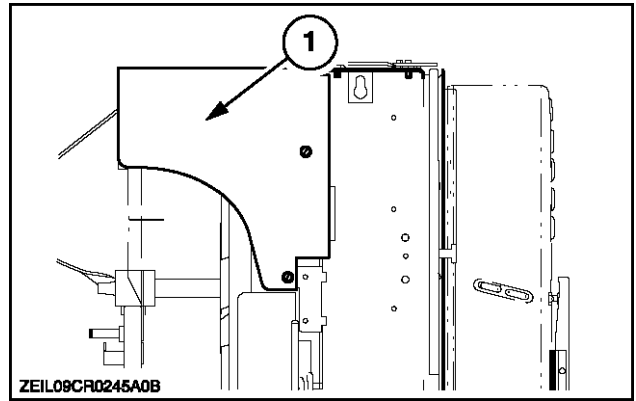


ZEIL09CR0245A0B 3

5. Secure the engine cover with an adequate rope. Attach the rope to a lifting device, able to carry the engine cover and stair assembly.
Disconnect the shock absorber (1) from the engine cover (2).

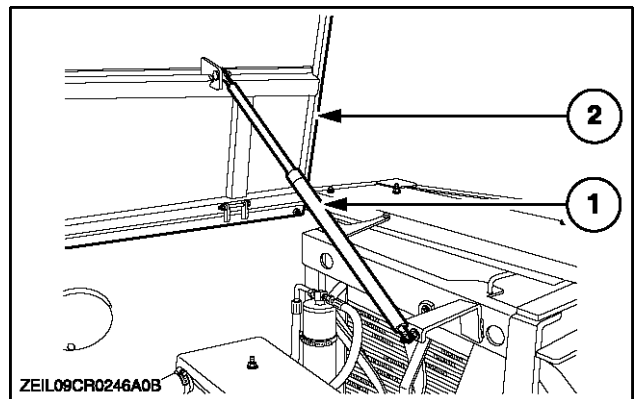


ZEIL09CR0246A0B 4

6. Remove the two retaining rings (1), washers (2) and hinge pins (3) from the engine cover.
Remove the engine cover from the combine.

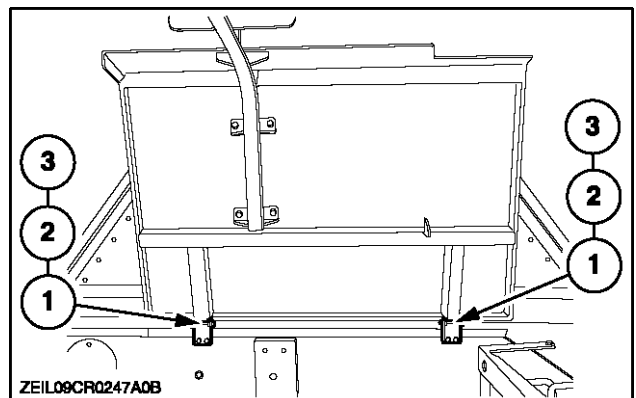


ZEIL09CR0247A0B 5

7. Refer to **Exhaust muffler - Remove (10.254)** for removal of the exhaust pipe.
8. Loosen the hardware (1) and remove the support (2).
9. Loosen the clamps (3) from the air inlet pipe (4).
Remove the air inlet pipe (4).

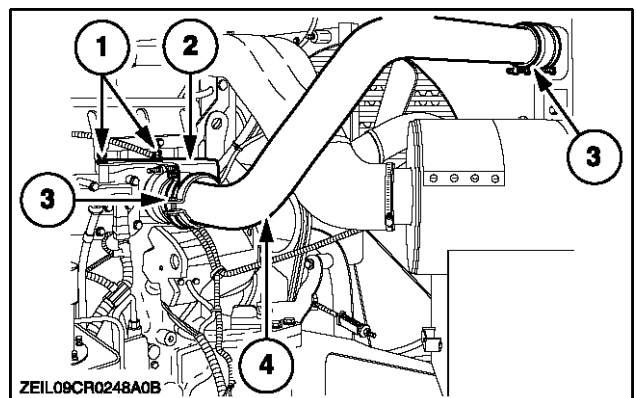


ZEIL09CR0248A0B 6

10. Remove the air cleaner assembly, if necessary, refer to **Air cleaner - Remove (10.202)**.
11. Loosen the clamps (1) and remove the air lines (2).
Loosen the clamps (3).
Loosen and remove the hardware (4) and remove the air duct (5) from the combine.

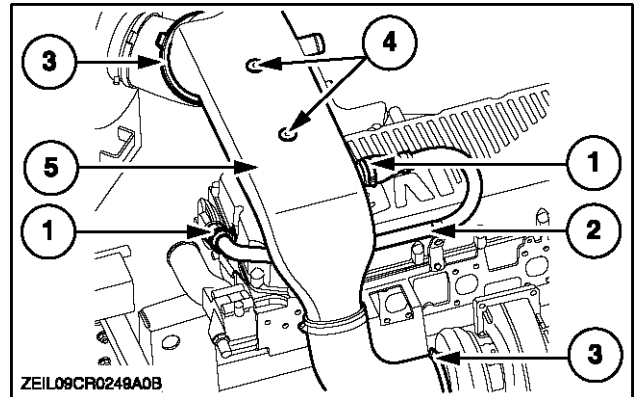


ZEIL09CR0249A0B 7

Depending on model/options, an additional air tube (7) needs to be removed/disconnected, loosen the coupler (6) from the air compressor.

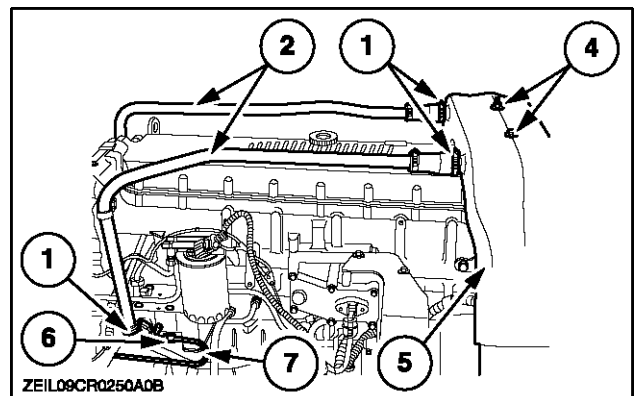


ZEIL09CR0250A0B 8

12. Loosen the coupler (1) and disconnect the fuel line (2) from the ECU cooler.
Loosen the coupler (4) and disconnect the fuel hose towards the injection pump from the fuel line (5).
Loosen and remove the clamp (3).
13. Loosen and disconnect the compressed air tube (7) at the connector (6).
Loosen and remove the clamp (8).

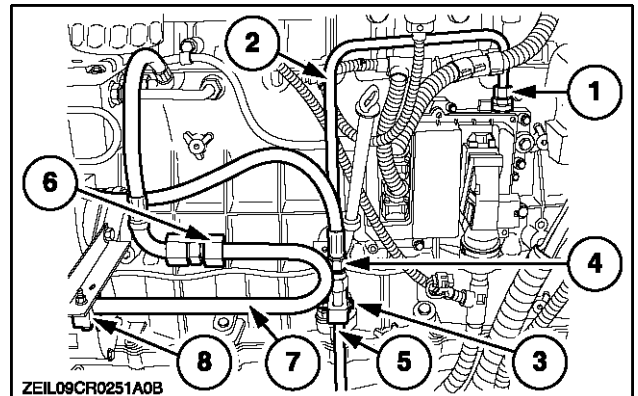


ZEIL09CR0251A0B 9

14. Loosen the hose clamps (1) and remove the top coolant pipe (2) from the engine and radiator neck.

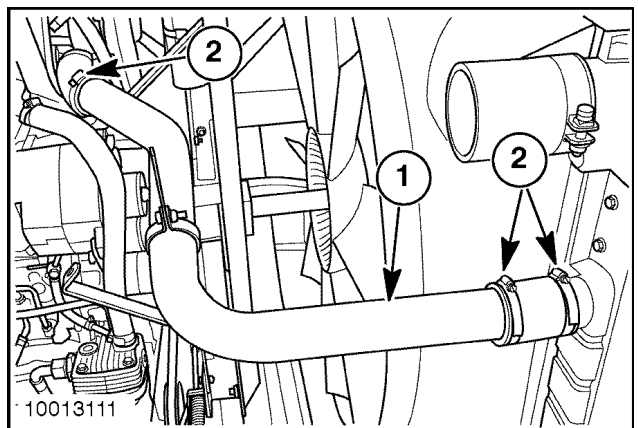

10013111 10

15. Loosen the clamps (1) and remove the air pipe (2).
16. Loosen the clamp (3) and disconnect the water hose from the cooling system.

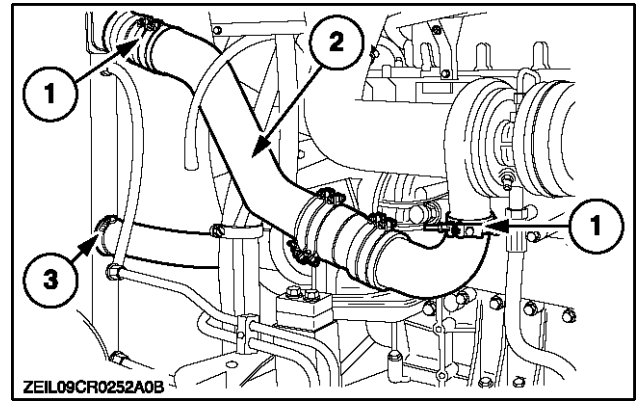


ZEIL09CR0252A0B 11

17. Remove the main drive belt (1) from the engine.
18. Disconnect the electrical connectors (1).


ATTENTION: Do not disconnect any of the air conditioning lines or hoses during compressor removal, as serious injury could result.

19. Remove the mounting bolts and nuts (2) from the air conditioning compressor (3). Remove the compressor from the engine and tie the assembly out of the way.

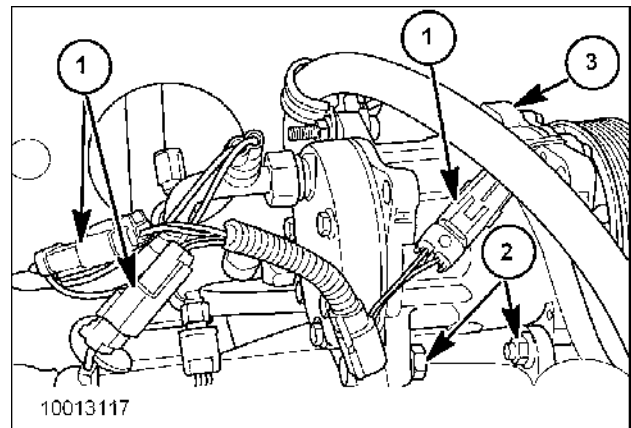


10013117 12

20. From inside the grain tank, loosen the mounting nuts on the carriage bolts (1) and turn the rotary screen drive pulley adjusting bolt (2) counter clockwise, to release the tension on the drive belt (3). Remove the drive belt.

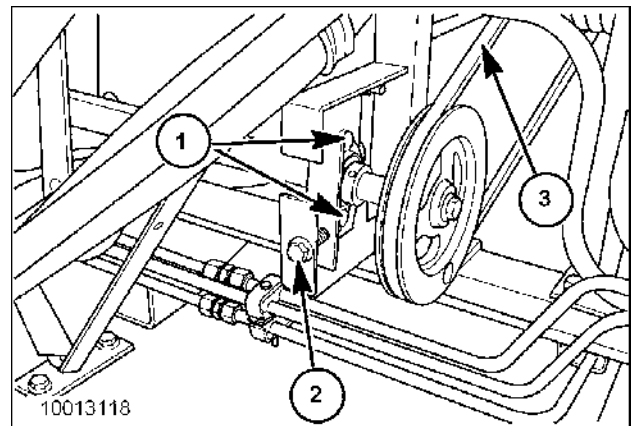


10013118 13

21. From inside the grain tank, loosen the hose clamp (1) and disconnect the lower coolant hose (2) from the engine.

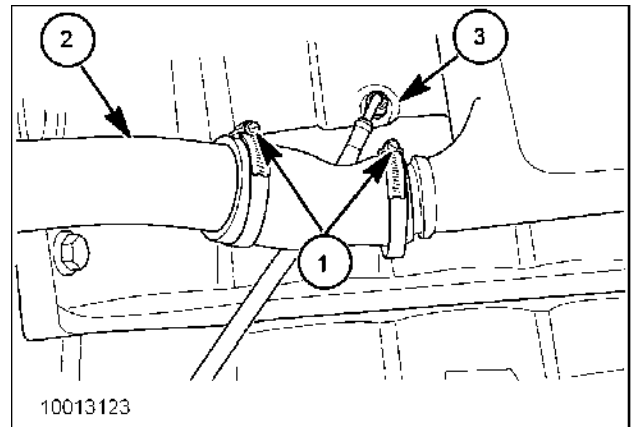


10013123 14

22. Disconnect the main engine electrical harness connector (1).

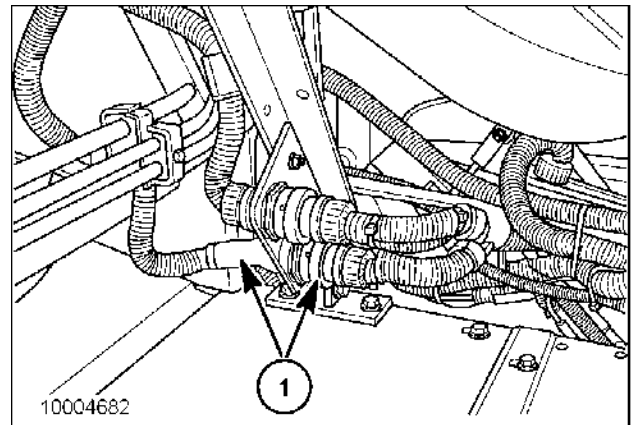

10004682 15


23. If installed, open the rotary screen door and disconnect the rotary screen brush electrical connector (1).

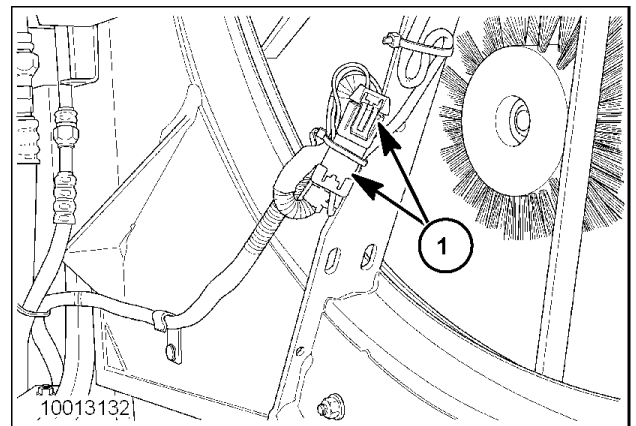

10013132 16


24. Feed the connector and wire loom (1) and grommet (2) through the hole in the radiator frame. Secure the wire loom and connector to the engine to prevent damage during removal.

NOTE: Removal of the rubber grommet in the radiator frame hole may be necessary to remove the radiator screen brush electrical connector.

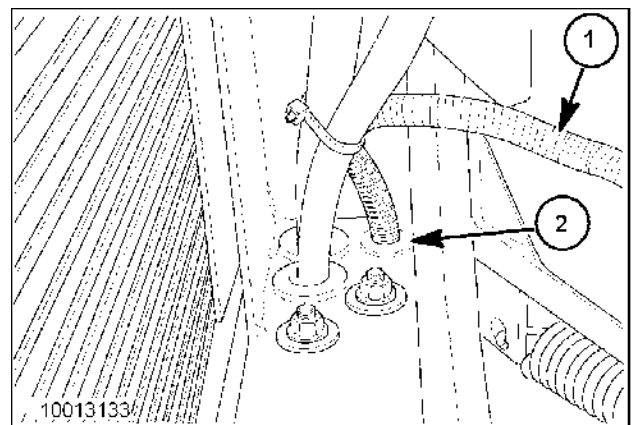


10013133 17

25. Loosen the nut **(1)** and remove the oil hose **(2)** from the hose guide **(3)**.

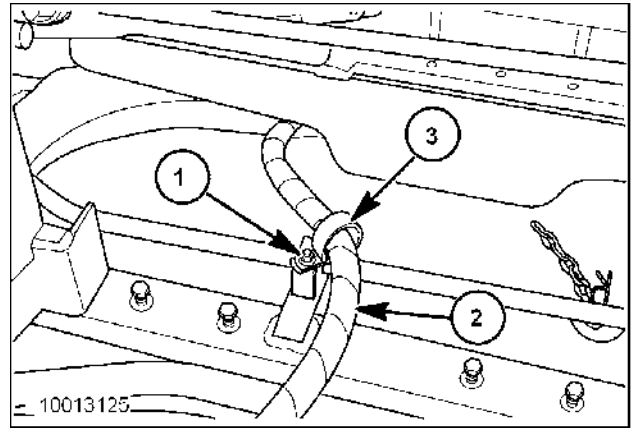


10013125 18

26. Cut the wire ties **(1)** and separate the engine wire harness **(2)**, from the gearbox wire harness **(3)**. Secure each harness to prevent damage during engine removal.

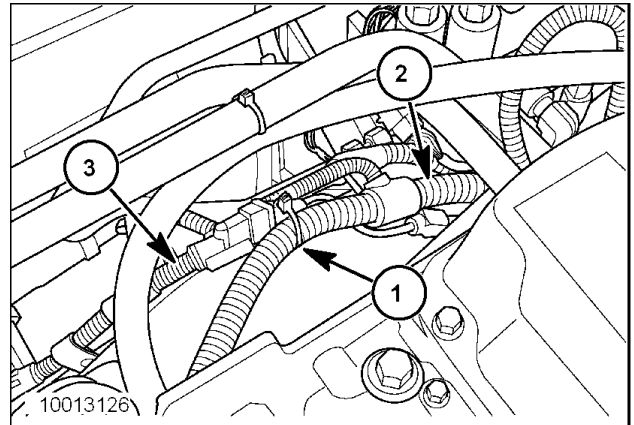


10013126 19

27. Loosen the hose clamp **(1)** and disconnect the rear heater hose **(2)** from the engine.

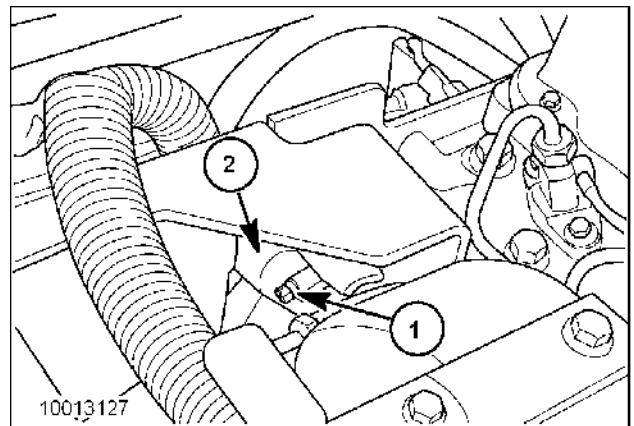


10013127 20

28. Loosen the hose clamp **(1)** and disconnect the front heater hose **(2)** from the engine.

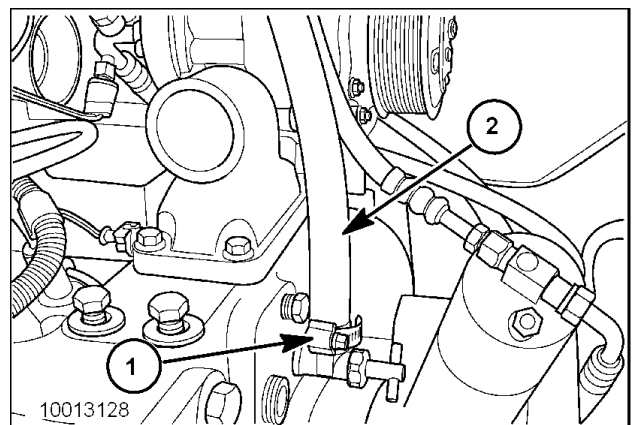


10013128 21

29. Remove the nut and bolt **(1)** from the front engine support bracket **(2)**.

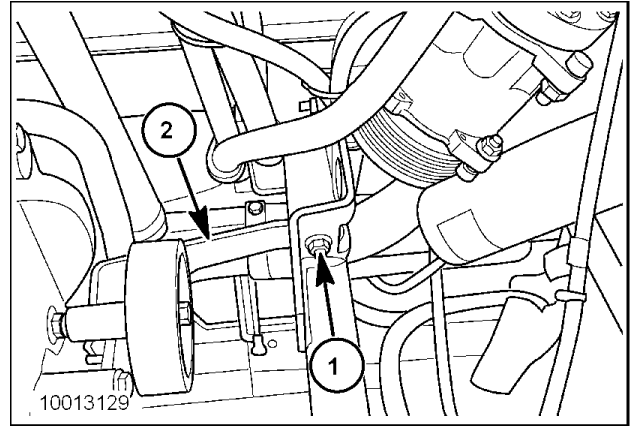


10013129 22

30. Remove the banjo bolt **(1)** from the engine oil pan **(2)**. Disconnect the oil hoses **(3)** and plug the hole in the oil pan **(2)**.

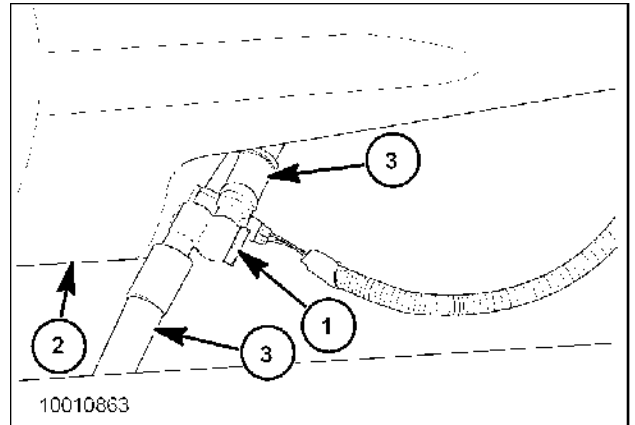


10010863 23

31. Loosen and remove the nut **(1)**. Disconnect the main starter cable **(2)** from the starter solenoid **(3)**.

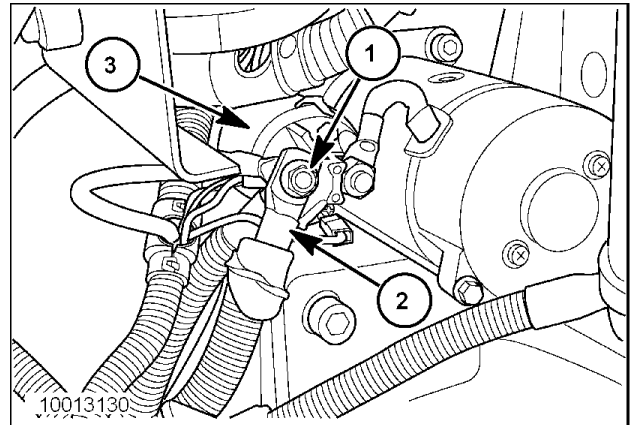


10013130 24

32. Attach a suitable chain to the front lift eye **(1)** and to the ECU bracket **(2)** at the rear of the engine.

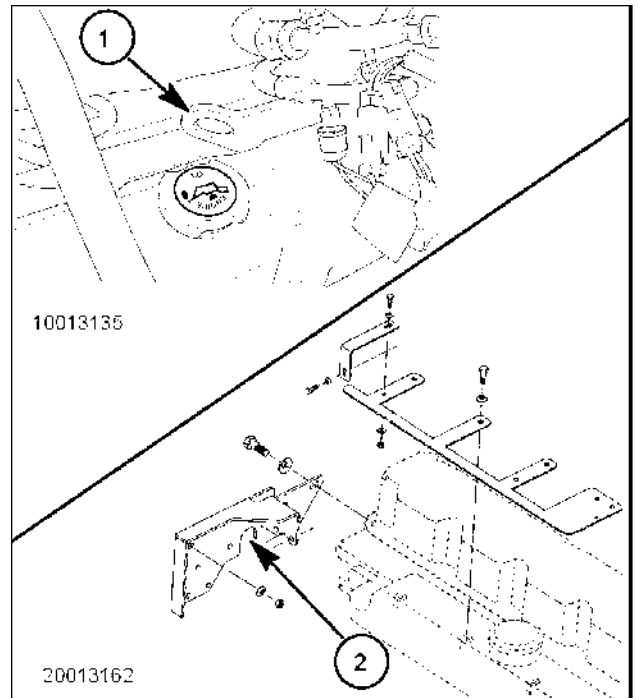


20013162 25

33. Connect the lift chain to a suitable lifting device. Raise the lifting device enough to support the engine during removal of the engine mounting bolts.

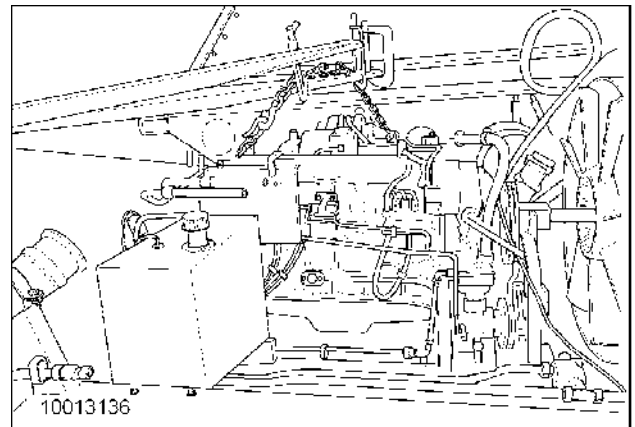


10013136 26

34. Loosen the two front, engine mounting bolts **(1)** and nuts **(2)** on each side of the engine. Do not remove the mounting bolts at this time.

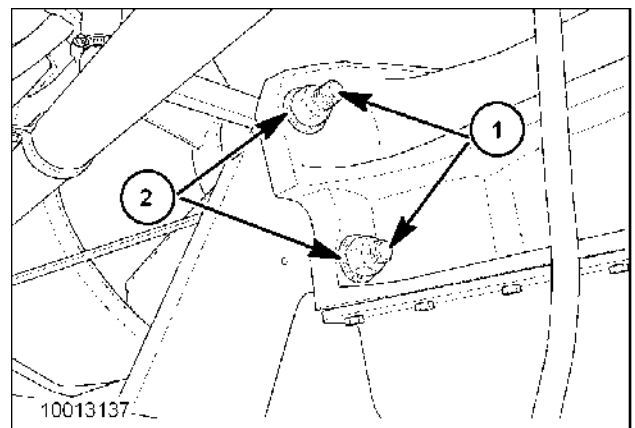

10013137 27

35. Loosen the four rear, engine mounting bolts **(1)** on each side of the engine. Do not remove the mounting bolts at this time.
With the engine securely supported by the lifting device, remove all of the engine mounting bolts loosened in the previous steps.
Carefully lift the engine from the frame and remove from the combine.

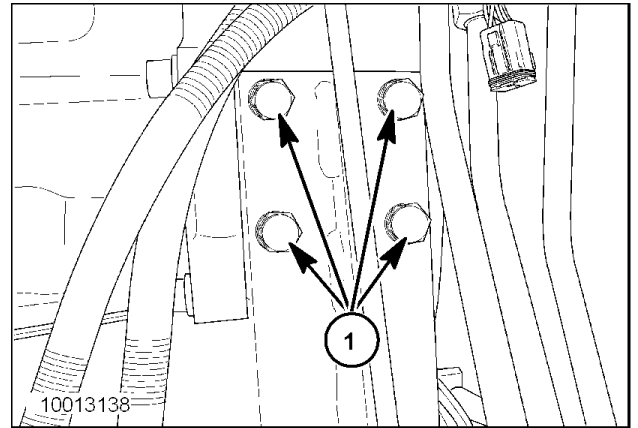

10013138 28

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**