



HARNESS LAYOUTS

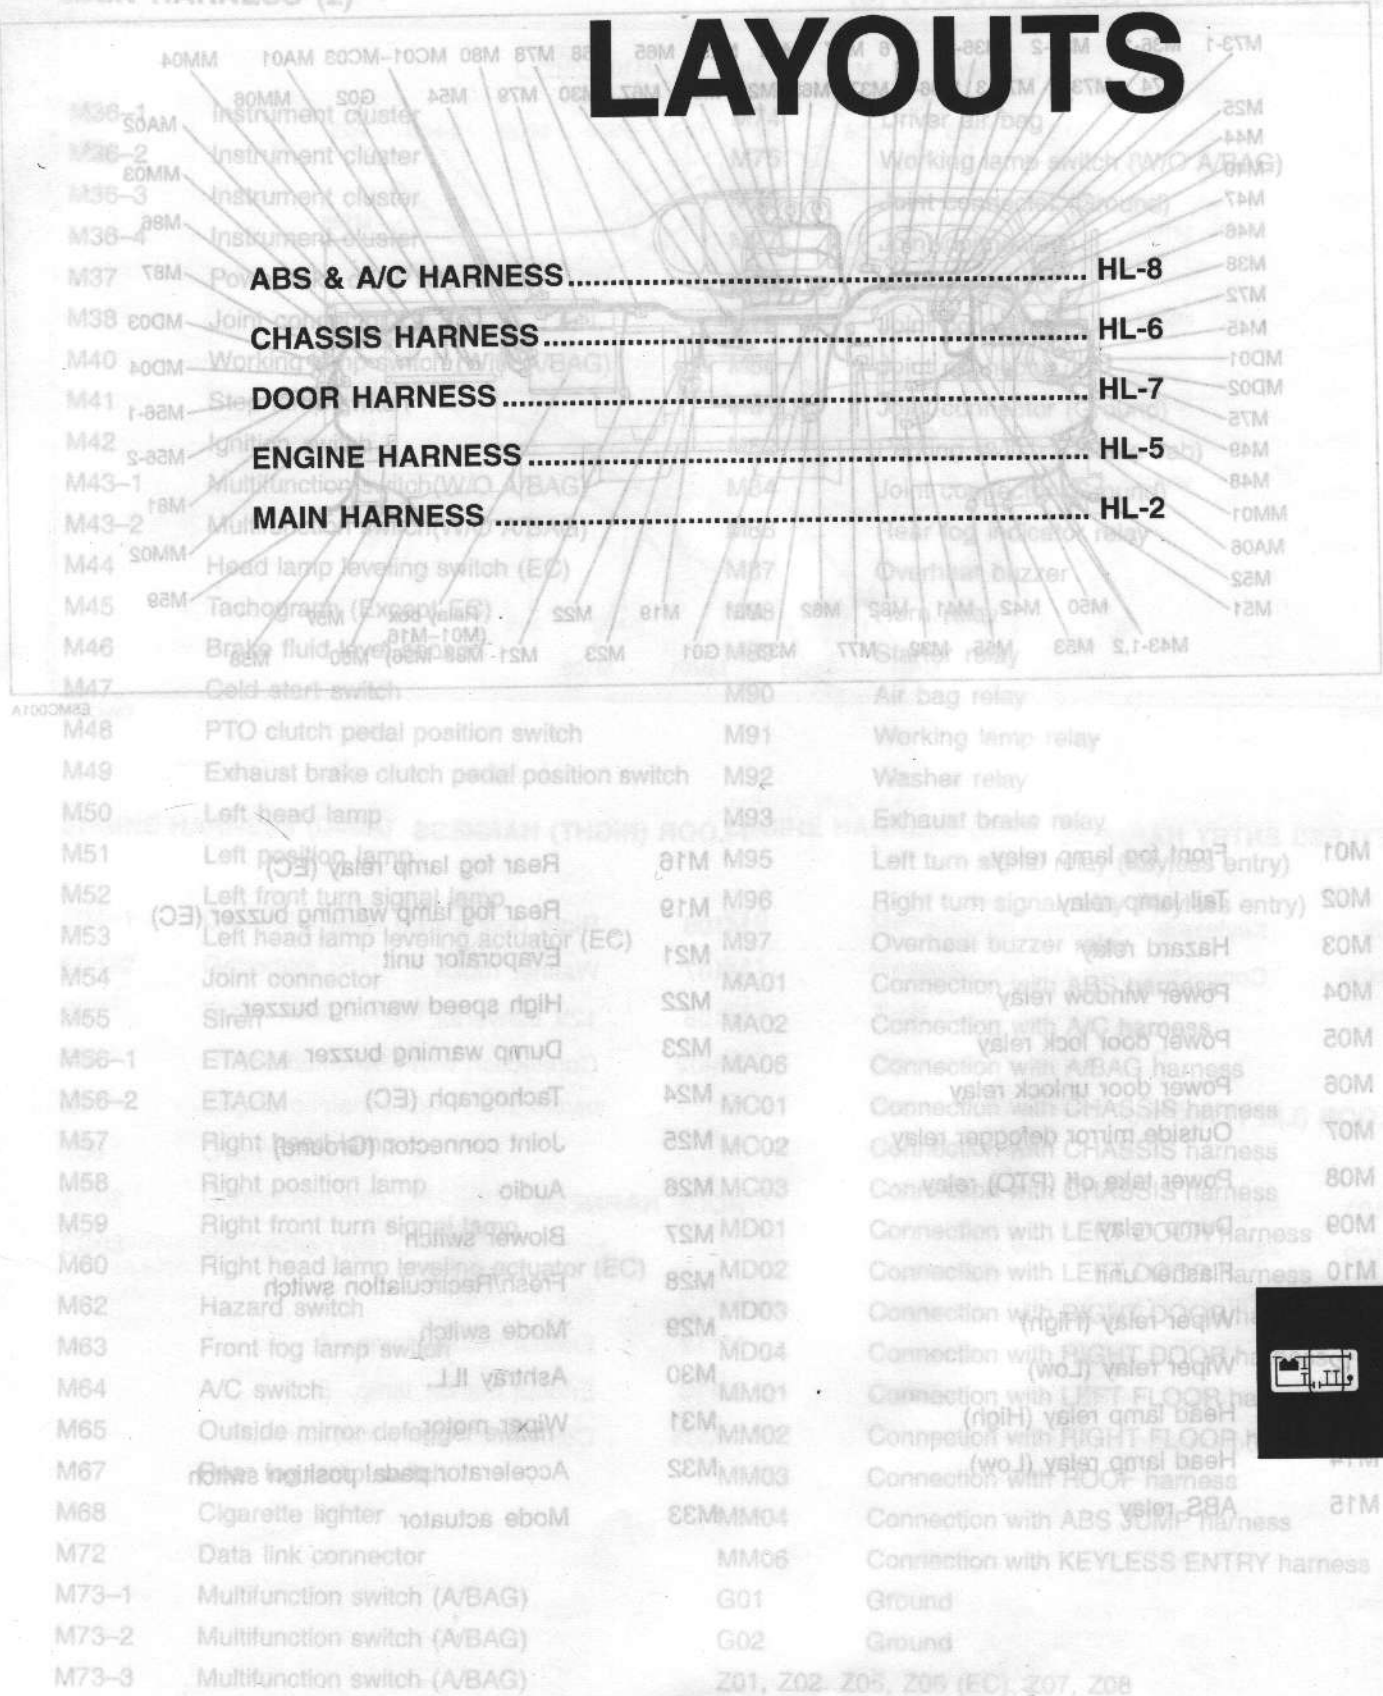

MAIN HARNESS

E5MC0010

MAIN HARNESS (1)

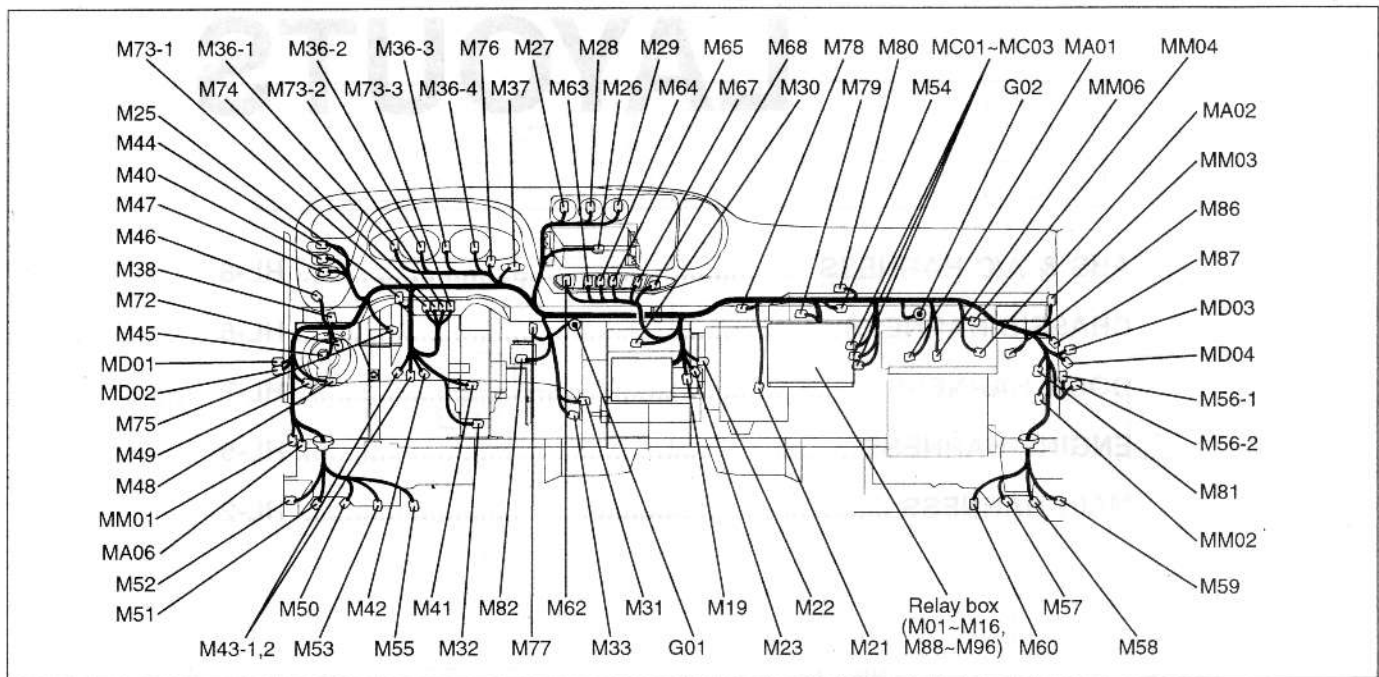


E5MC001A

M01	Front fog lamp relay	M16	Rear fog lamp relay (EC)
M02	Tail lamp relay	M19	Rear fog lamp warning buzzer (EC)
M03	Hazard relay	M21	Evaporator unit
M04	Power window relay	M22	High speed warning buzzer
M05	Power door lock relay	M23	Dump warning buzzer
M06	Power door unlock relay	M24	Tachograph (EC)
M07	Outside mirror defogger relay	M25	Joint connector (Ground)
M08	Power take off (PTO) relay	M26	Audio
M09	Dump relay	M27	Blower switch
M10	Flasher unit	M28	Fresh/Recirculation switch
M11	Wiper relay (High)	M29	Mode switch
M12	Wiper relay (Low)	M30	Ashtray ILL.
M13	Head lamp relay (High)	M31	Wiper motor
M14	Head lamp relay (Low)	M32	Accelerator pedal position switch
M15	ABS relay	M33	Mode actuator

MAIN HARNESS (2)

M36-1	Instrument cluster	M74	Driver air bag
M36-2	Instrument cluster	M75	Working lamp switch (W/O A/BAG)
M36-3	Instrument cluster	M76	Joint connector (Ground)
M36-4	Instrument cluster	M77	Joint connector
M37	Power take off (PTO) switch	M78	Joint connector
M38	Joint connector	M79	Joint connector
M40	Working lamp switch (With A/BAG)	M80	Joint connector
M41	Stop lamp switch	M81	Joint connector (Ground)
M42	Ignition switch	M82	Parking switch (Double cab)
M43-1	Multifunction switch(W/O A/BAG)	M84	Joint connector (Ground)
M43-2	Multifunction switch(W/O A/BAG)	M86	Rear fog indicator relay
M44	Head lamp leveling switch (EC)	M87	Overheat buzzer
M45	Tachograph (Except EC)	M88	Horn relay
M46	Brake fluid level sensor	M89	Starter relay
M47	Cold start switch	M90	Air bag relay
M48	PTO clutch pedal position switch	M91	Working lamp relay
M49	Exhaust brake clutch pedal position switch	M92	Washer relay
M50	Left head lamp	M93	Exhaust brake relay
M51	Left position lamp	M95	Left turn signal relay (Keyless entry)
M52	Left front turn signal lamp	M96	Right turn signal relay (Keyless entry)
M53	Left head lamp leveling actuator (EC)	M97	Overheat buzzer relay
M54	Joint connector	MA01	Connection with ABS harness
M55	Siren	MA02	Connection with A/C harness
M56-1	ETACM	MA06	Connection with A/BAG harness
M56-2	ETACM	MC01	Connection with CHASSIS harness
M57	Right head lamp	MC02	Connection with CHASSIS harness
M58	Right position lamp	MC03	Connection with CHASSIS harness
M59	Right front turn signal lamp	MD01	Connection with LEFT DOOR harness
M60	Right head lamp leveling actuator (EC)	MD02	Connection with LEFT DOOR harness
M62	Hazard switch	MD03	Connection with RIGHT DOOR harness
M63	Front fog lamp switch	MD04	Connection with RIGHT DOOR harness
M64	A/C switch	MM01	Connection with LEFT FLOOR harness
M65	Outside mirror defogger switch	MM02	Connection with RIGHT FLOOR harness
M67	Rear fog lamp switch	MM03	Connection with ROOF harness
M68	Cigarette lighter	MM04	Connection with ABS JUMP harness
M72	Data link connector	MM06	Connection with KEYLESS ENTRY harness
M73-1	Multifunction switch (A/BAG)	G01	Ground
M73-2	Multifunction switch (A/BAG)	G02	Ground
M73-3	Multifunction switch (A/BAG)	Z01, Z02, Z05, Z06 (EC), Z07, Z08	

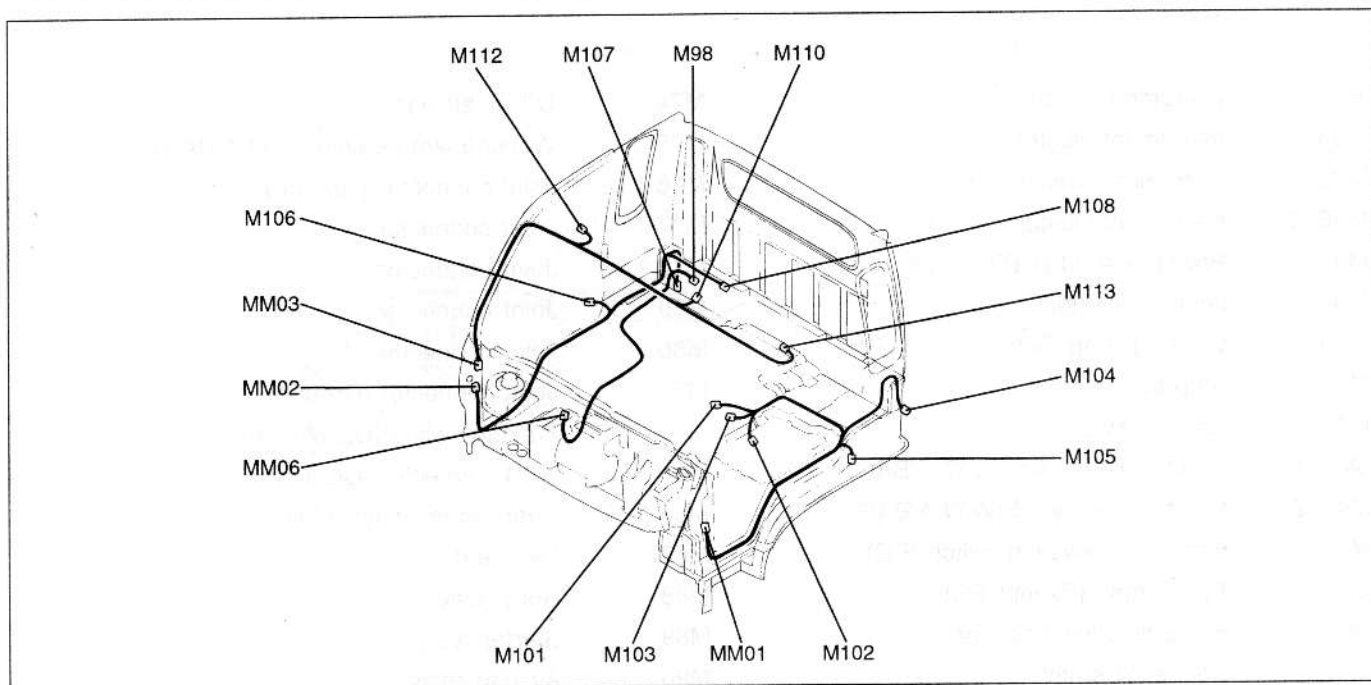MAIN HARNESS (FLOOR & ROOF) (3)

E5MC001B

KEYLESS ENTRY HARNESS

M98	Keyless entry control module
MM06	Connection with MAIN harness

FLOOR (RIGHT) HARNESS

M106	Right door switch
M107	Washer motor
M108	12V converter
MM02	Connection with MAIN harness

FLOOR (LEFT) HARNESS

M101	12V socket
M102	Seat belt switch
M103	Parking brake switch
M104	Cab tilting switch
M105	Left door switch
MM01	Connection with MAIN harness


ROOF HARNESS

M110	Room lamp
M112	Endout marker lamp. A
M113	Endout marker lamp. B
MM03	Connection with MAIN harness

ENGINE HARNESS

E5MC0020

ENGINE HARNESS (1)

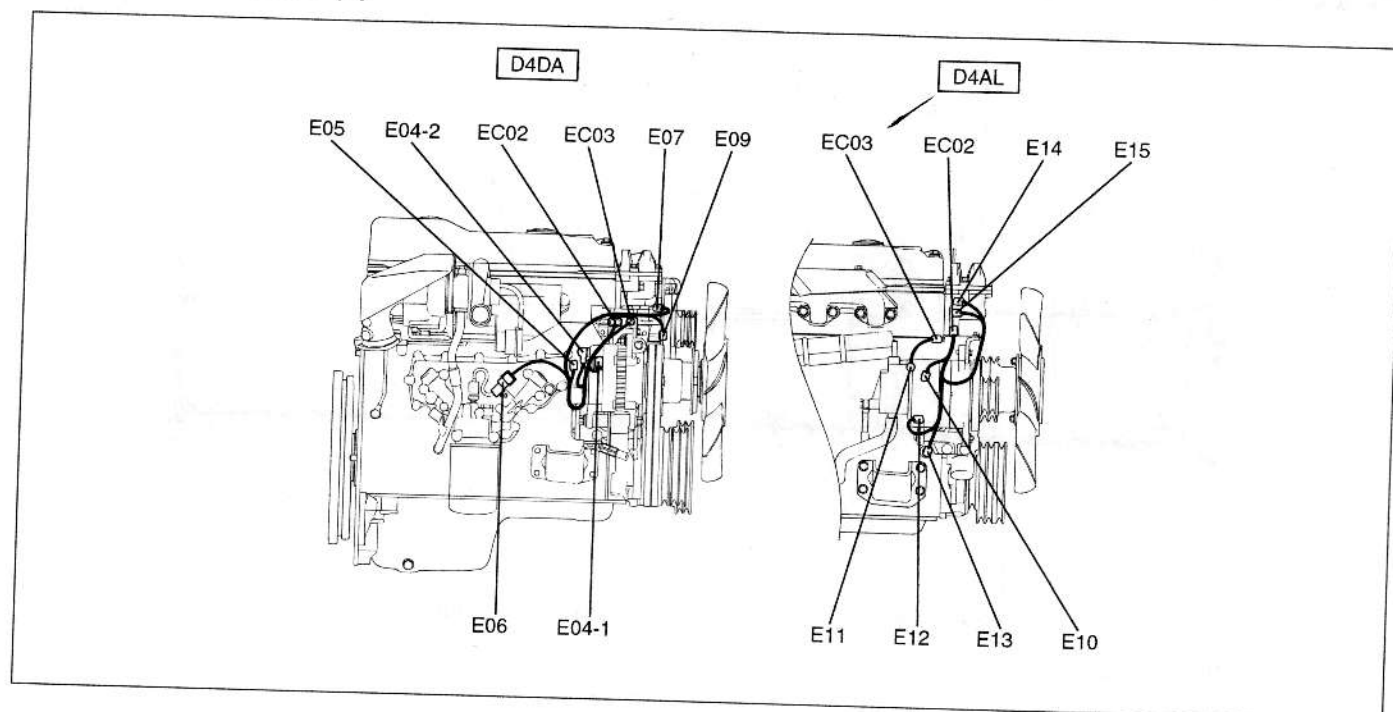

E5MC002A

ENGINE HARNESS (D4DA)

E04-1	Generator (L,S)
E04-2	Generator (B+)
E05	Tachometer sensor
E06	Oil pressure switch
E07	Engine coolant temperature sensor
E09	Overheat unit
EC02	Connection with CHASSIS harness
EC03	Connection with CHASSIS harness


ENGINE HARNESS (D4AL)

E10	Generator (L,S)
E11	Generator (B+)
E12	Tachometer sensor
E13	Oil pressure switch
E14	Engine coolant temperature sensor
E15	Overheat unit
EC02	Connection with CHASSIS harness
EC03	Connection with CHASSIS harness

CHASSIS HARNESS

F5MC0030

CHASSIS HARNESS (1)

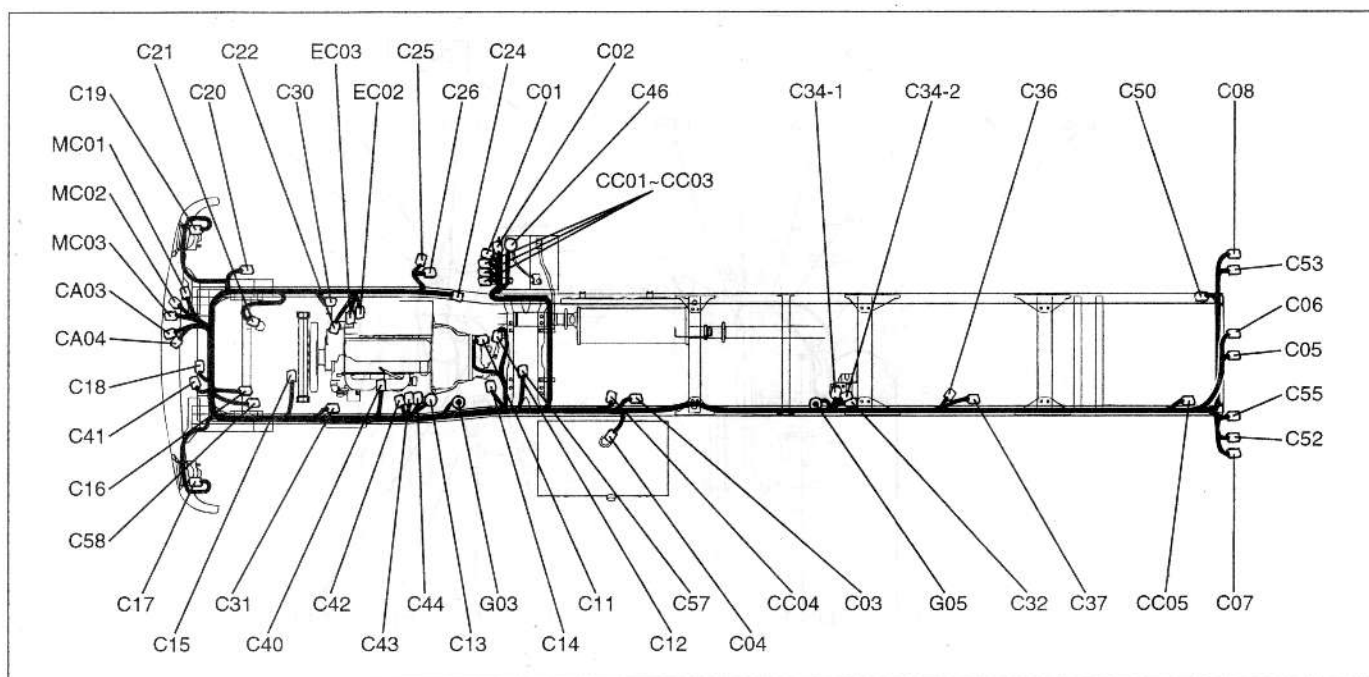

E5MC003A

CHASSIS HARNESS


C01	Sub start switch
C02	Working lamp
C03	Dump warning switch
C04	Fuel sender
C05	License lamp (Except EC)
C06	License lamp (EC)
C07	Left rear combination lamp
C08	Right rear combination lamp
C11	Neutral switch
C12	Back-up lamp switch
C13	Start motor (B+)
C14	Power take off (PTO) control switch
C15	Condenser fan motor (NA)
C16	Vacuum switch
C17	Left fog lamp
C18	Horn
C19	Right fog lamp
C20	Condenser fan motor (TCI)
C21	A/C pressure switch
C22	A/C compressor
C24	Power take off magnetic valve
C25	Intake shutter valve
C26	Exhaust magnetic valve
C30	Right front wheel speed sensor
C31	Left front wheel speed sensor
C32	Hydraulic unit
C34-1	ABS relay box
C34-2	ABS relay box
C36	Right rear wheel speed sensor
C37	Left rear wheel speed sensor
C40	Idle up magnetic valve
C42	Air heater relay
C43	Air heater & glow monitor
C44	Start motor solenoid switch
C47	Front side marker lamp (EC)
C48	Rear side marker lamp (EC)
C50	Back warning buzzer (EC)
C52	Left rear marker lamp (EC)
C53	Right rear marker lamp (EC)
C55	Rear fog lamp (EC)
C57	Vehicle speed sensor
C58	Vehicle speed sensor
CA03	Connection with ABS MAIN harness
CA04	Connection with ABS MAIN harness
CC01	Connection with FUSIBLE LINK
CC02	Connection with FUSIBLE LINK
CC03	Connection with FUSIBLE LINK
CC04	Connection with DECK MARKER harness
CC05	Connection with DECK MARKER harness
EC02	Connection with ENGINE(RIGHT) harness
EC03	Connection with ENGINE(RIGHT) harness
MC01	Connection with MAIN harness
MC02	Connection with MAIN harness
MC03	Connection with MAIN harness
G03	Ground
G05	Ground
Z03	Diode

DECK MARKER HARNESS

C70	Left front outside marker lamp
C72	Right front outside marker lamp
C73	Left rear outside marker lamp
C74	Right rear outside marker lamp
CC04	Connection with CHASSIS harness
CC05	Connection with CHASSIS harness

DOOR HARNESS E5MC0040

DOOR HARNESS (1)

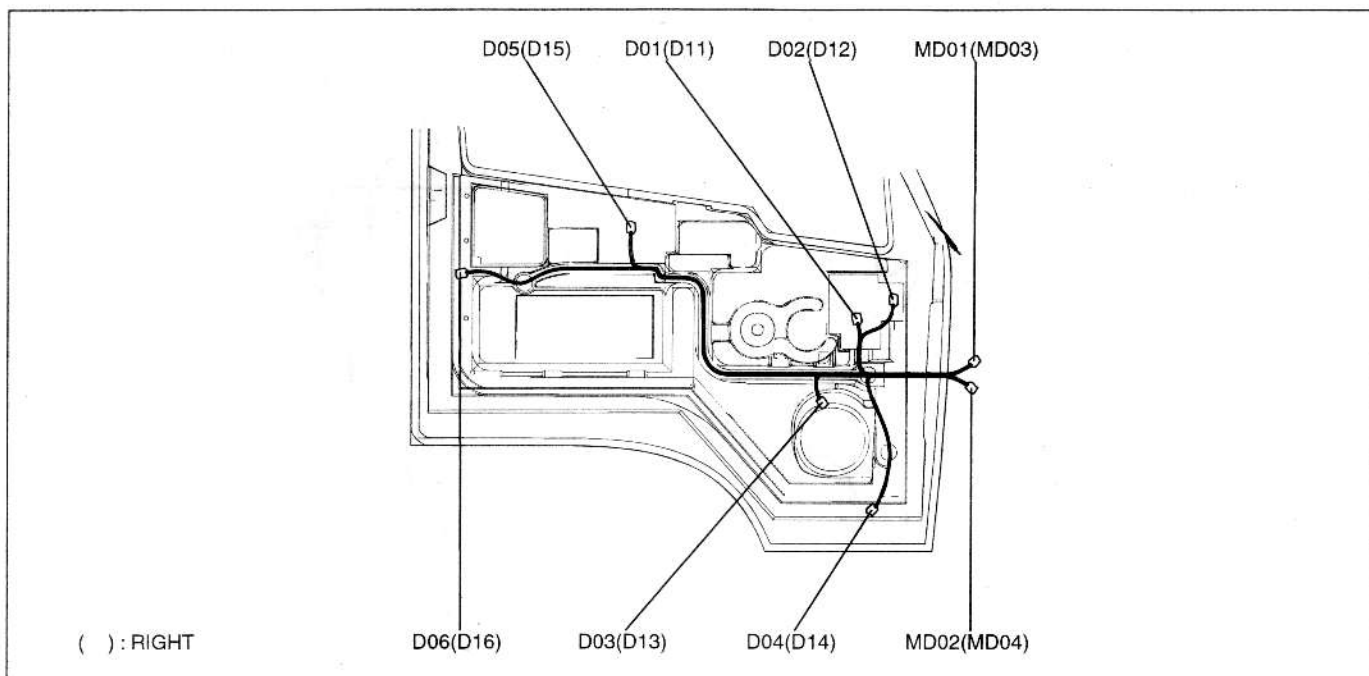

E5MC004A

DECK MARKER HARNESS


D01	Left power window motor
D02	Left outside mirror defogger
D03	Left speaker
D04	Left side repeater lamp
D05	Power window main switch
D06	Left power door lock actuator
MD01	Connection with MAIN harness
MD02	Connection with MAIN harness

DECK MARKER HARNESS

D11	Right power window motor
D12	Right outside mirror defogger
D13	Right speaker
D14	Right side repeater lamp
D15	Power window sub switch
D16	Right power door lock actuator
MD03	Connection with MAIN harness
MD04	Connection with MAIN harness

ABS & A/C HARNESS

E5MC0050

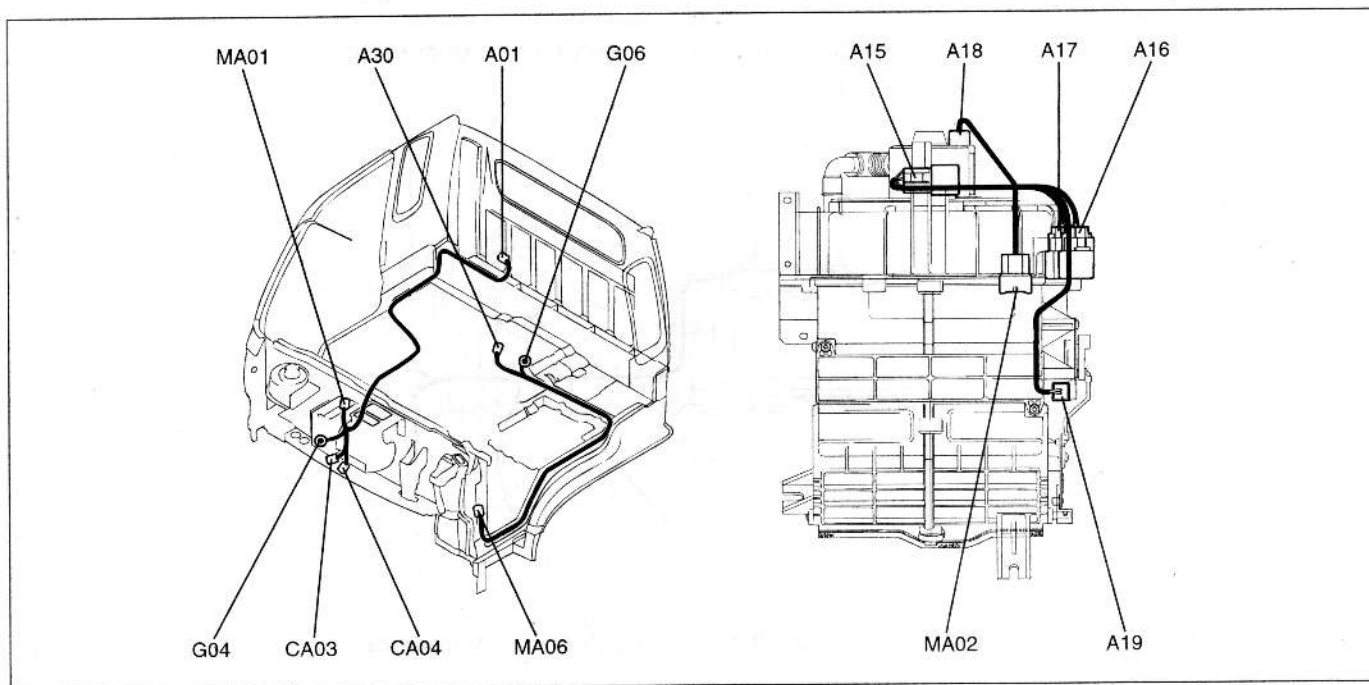ABS & A/C HARNESS (1)

E5MC005A

ABS (MAIN) HARNESS**A/C HARNESS**

A01	ABS control module
CA03	Connection with CHASSIS harness
CA04	Connection with CHASSIS harness
MA01	Connection with MAIN harness
G04	Ground

A15	Blower relay
A16	Condenser fan relay
A17	A/C relay
A18	Blower motor
A19	Fresh/Recirculation actuator
MA02	Connection with MAIN harness

A/BAG HARNESS

A30	SRS control module
MA06	Connection with MAIN harness
G06	Ground