

SCHEMATIC DIAGRAMS

ACOUSTIC WARNING SYSTEM	SD-76
AIR BAG SYSTEM (SRS)	SD-132
ABS (ANTI-LOCK BRAKE SYSTEM)	SD-58
AUDIO	SD-100
BACK-UP LAMPS	SD-120
BLOWER & A/C CONTROLS	SD-134
BRAKE WARNING SYSTEM	SD-62
CAB TILTING SYSTEM	SD-56
CHARGING SYSTEM	SD-40
CIGARETTE LIGHTER	SD-64
CLOCK	SD-68
COURTESY LAMPS	SD-126
DATA LINK DETAILS	SD-34
DUMP WARNING BUZZER	SD-78
ETACS (ELECTRONIC TIME & ALARM CONTROL SYSTEM)	SD-70
EXHAUST BRAKE SYSTEM (W/O PTO)	SD-50
EXHAUST BRAKE & POWER TAKE OFF (PTO) SYSTEM	SD-46
FRONT FOG LAMPS	SD-112
FUSE & RELAY INFORMATION	SD-2
FUSE BOX DETAILS	SD-10
GROUND DISTRIBUTION	SD-22
HEAD LAMP LEVELING DEVICE	SD-106
HEAD LAMPS	SD-104
HORN	SD-102
ILLUMINATIONS	SD-128
INDICATORS & GAUGES	SD-84
KEYLESS ENTRY & BURGLAR ALARM CONTROL SYSTEM	SD-80
OUTSIDE MIRROR DEFOGGER	SD-96
OVERHEAT WARNING SYSTEM	SD-54
POWER DISTRIBUTION	SD-6
POWER DOOR LOCKS	SD-94
POWER WINDOWS	SD-98
PREHEATING SYSTEM	SD-42
REAR FOG LAMPS	SD-114
SOCKET	SD-66
STARTING SYSTEM	SD-38
STOP LAMPS	SD-122
TACHOGRAPH	SD-90
TAIL & LICENSE LAMPS	SD-116
TURN & HAZARD LAMPS	SD-108
VEHICLE SPEED SENSOR	SD-36
WIPER & WASHER	SD-72
WORKING LAMP	SD-124



FUSE & RELAY INFORMATION

E2MC0010

FUSE BOX

LAYOUT

1 15A	2 5A	3 10A	4 10A	5 15A	6 5A	7 5A	8 5A	9 15A	10 10A	11 10A	12 10A
13 20A	14 10A	15 10A	16 10A	17 15A	18 15A	19 15A	20 Not used	21 Not used	22 10A	23 10A	24 15A
25 15A	26 15A	27 Not used	28 Not used	29 10A	30 10A	31 10A	32 15A	33 15A	34 15A	35 15A	36 15A


USE THE DESIGNATED FUSES ONLY

CIRCUIT

Fuse	Amperages (A)	Circuit protected
1	15A	Working lamp
2	5A	Head lamp leveling device (EC), Head lamp
3	10A	Blower & A/C control
4	10A	ABS , Exhaust brake , Tachograph (EC), Cold start switch
5	15A	Wiper & washer
6	5A	ABS control
7	5A	PTO system
8	5A	Air bag
9	15A	Neutral switch
10	10A	Turn signal lamps
11	10A	Vehicle speed sensor, Back-up lamps
12	10A	ETACM, Instrument cluster, Generator
13	20A	Power window
14	10A	Stop lamp, Horn, Data link connector
15	10A	Cab tilting switch,Hazard lamps
16	10A	Rear fog lamps
17	15A	Power door lock (unlock) system
18	15A	ABS control
19	15A	Outside mirror defogger
20	Not used	-
21	Not used	-
22	10A	Starter relay, Keyless entry control system
23	10A	Tachograph, ETACM, Audio, Instrument cluster, Room lamp
24	15A	ETACM, Starting system
25	15A	Head lamp (Low)
26	15A	Head lamp (High), Instrument cluster
27	Not used	-
28	Not used	-
29	10A	Fog lamps, A/C control, Cigarette lighter, Combination lamp
30	10A	Rear marker lamp, Endout marker lamp(EC)
31	10A	Front fog lamps
32	15A	Air bag
33	15A	Condenser fan relay, A/C relay
34	15A	Blower relay
35	15A	12V converter, Keyless entry control module
36	15A	Instrument cluster, Audio, Cigarette lighter


RELAY BOX

LAYOUT

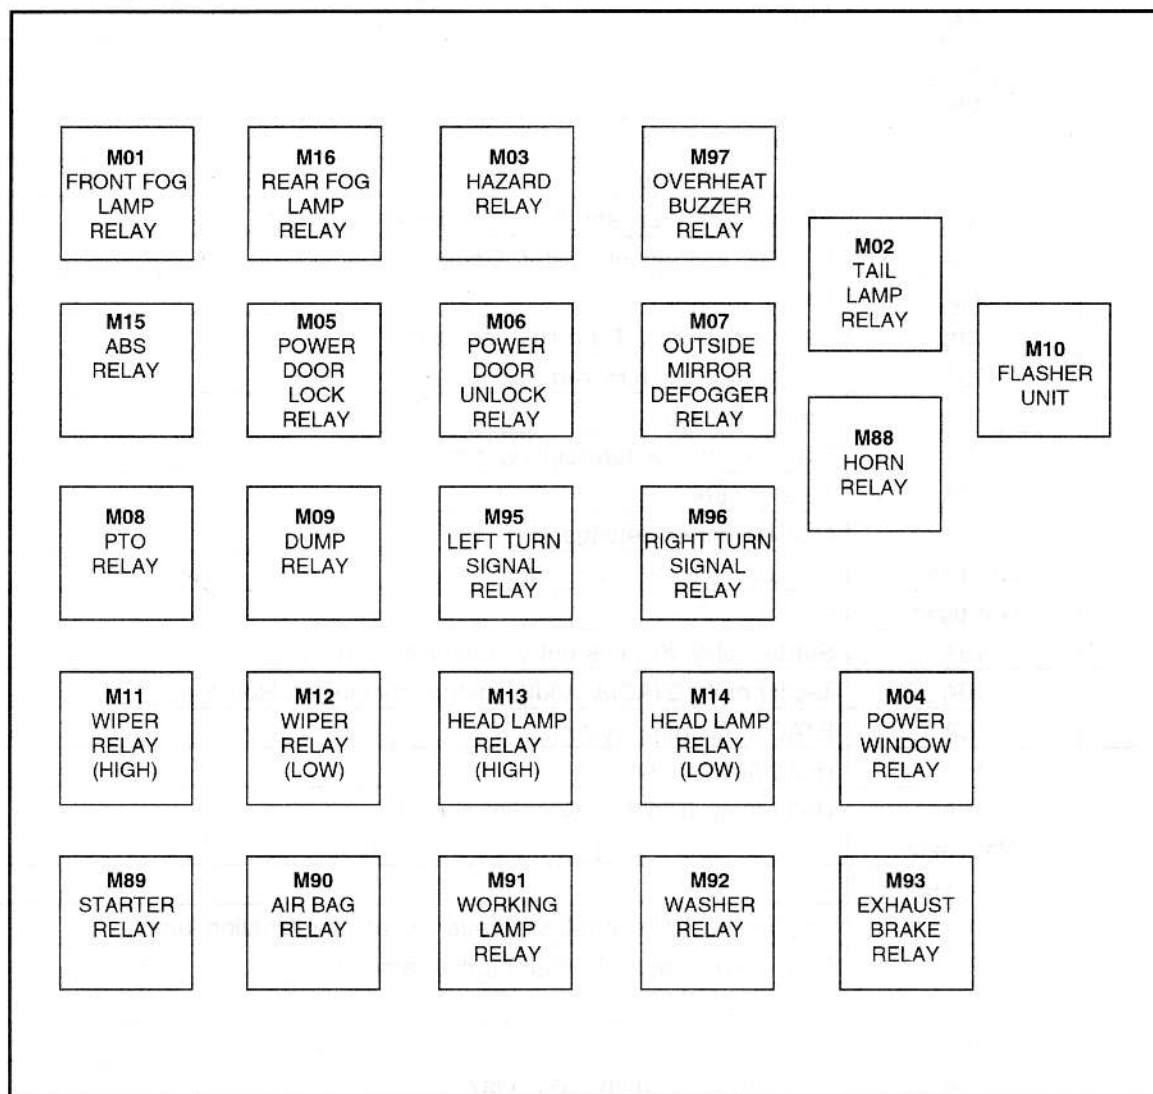

FUSIBLE LINK BOX

LAYOUT

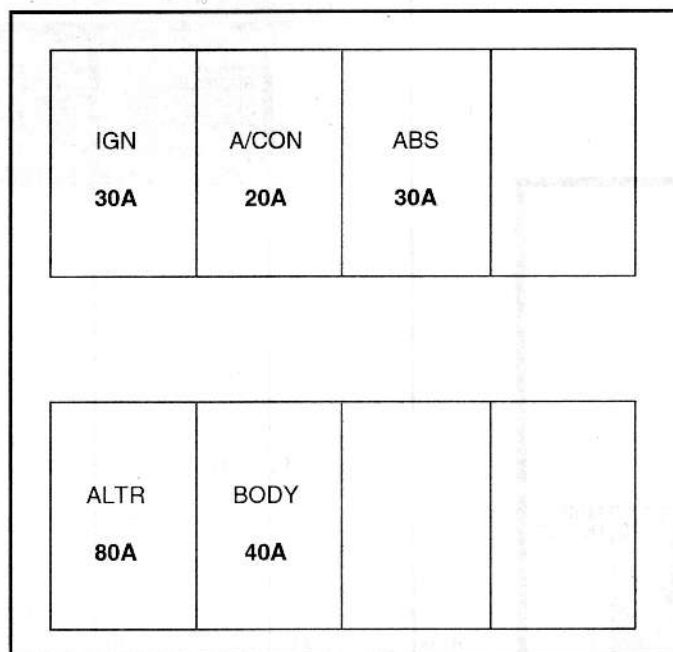


USE THE DESIGNATED FUSES ONLY

Description		Amperages (A)	Circuit protected
FUSIBLE LINK	IGN	30A	Ignition switch
	A/CON	20A	Fuse 33, Fuse 34
	ABS	30A	ABS relay box
	ALTR	80A	Generator
	BODY	40A	Head lamp relay (HIGH), Head lamp relay (LOW), Tail lamp relay, Fuse 13~19, Fuse 22, Fuse 23, Fuse 31
FUSE	AIR BAG	20A	Fuse 32

POWER DISTRIBUTION

E2MC0020


POWER DISTRIBUTION (1)

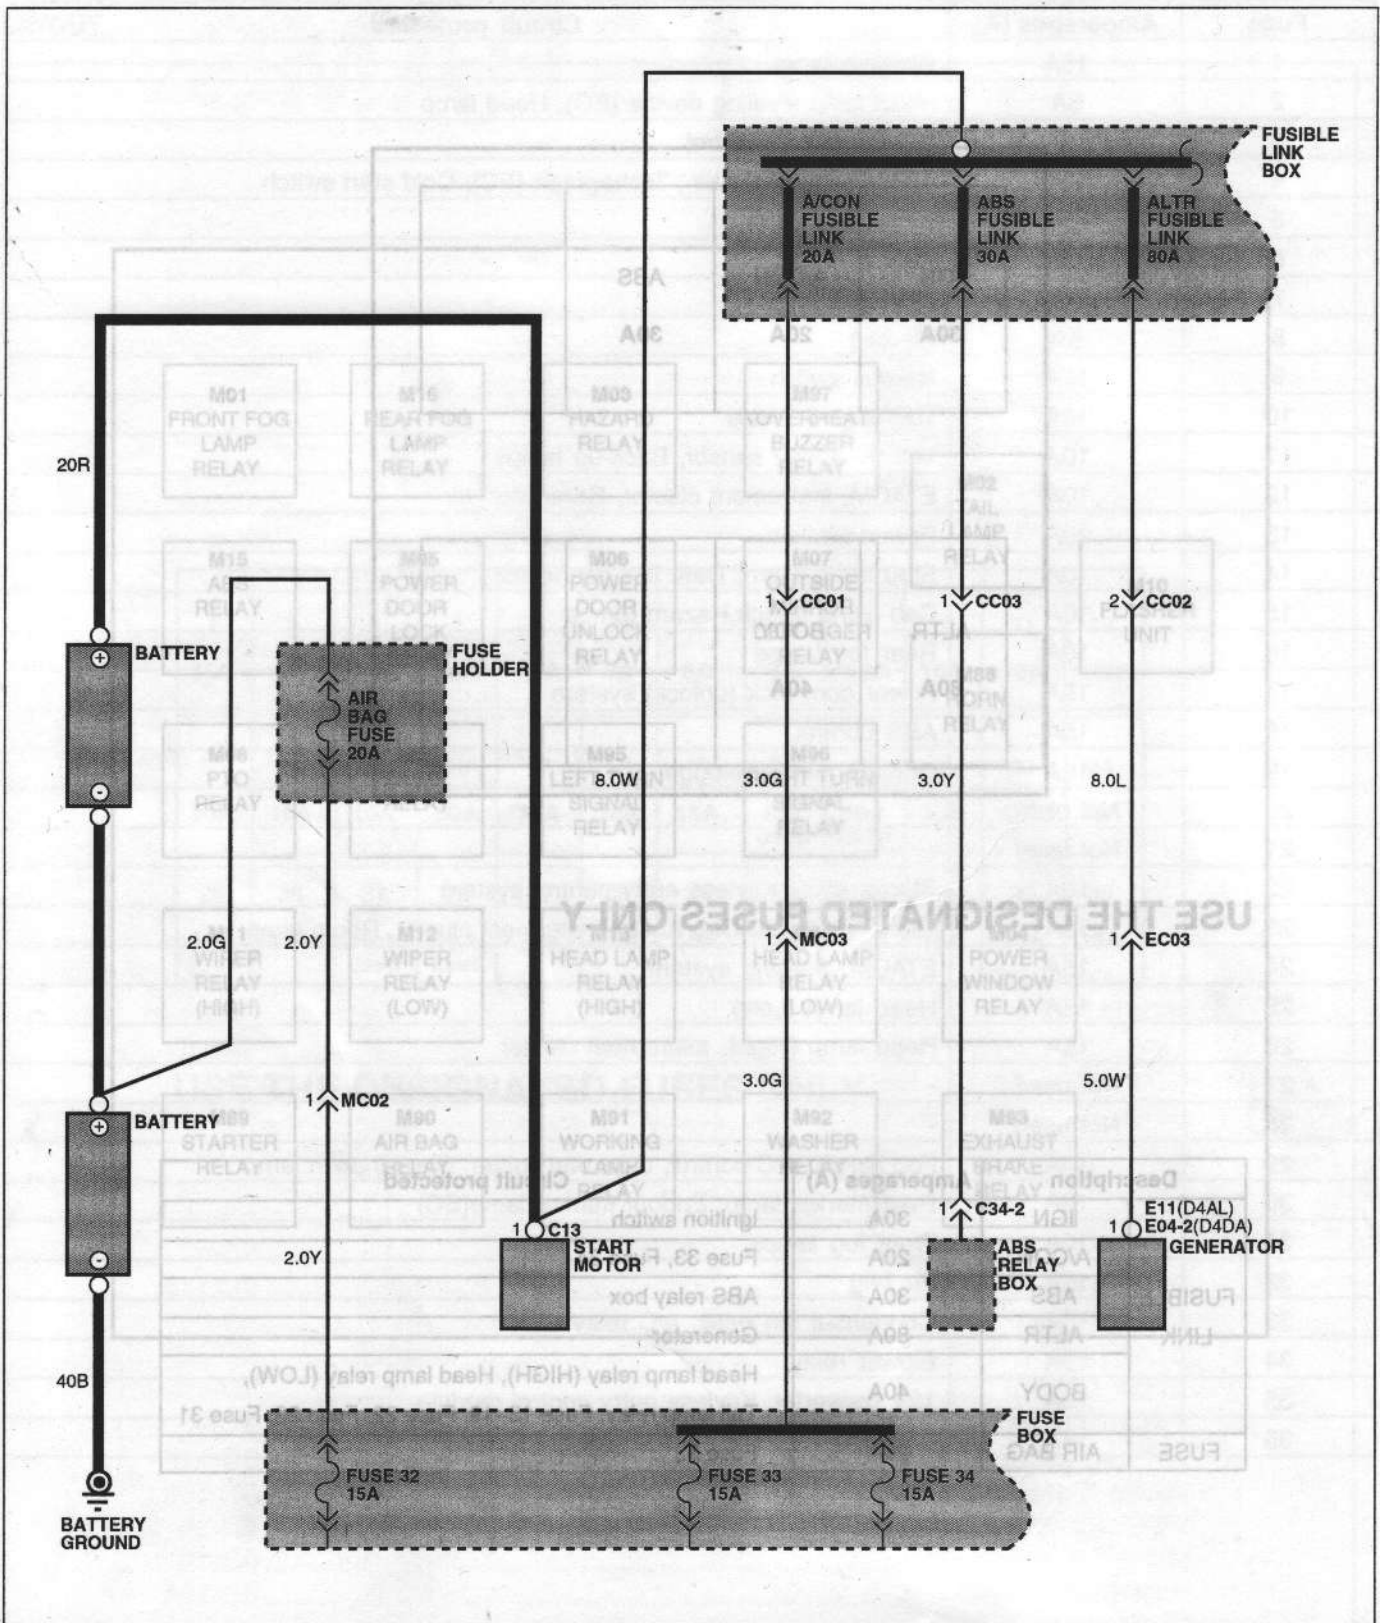

E2MC002A

POWER DISTRIBUTION (2)

POWER DISTRIBUTION (3)

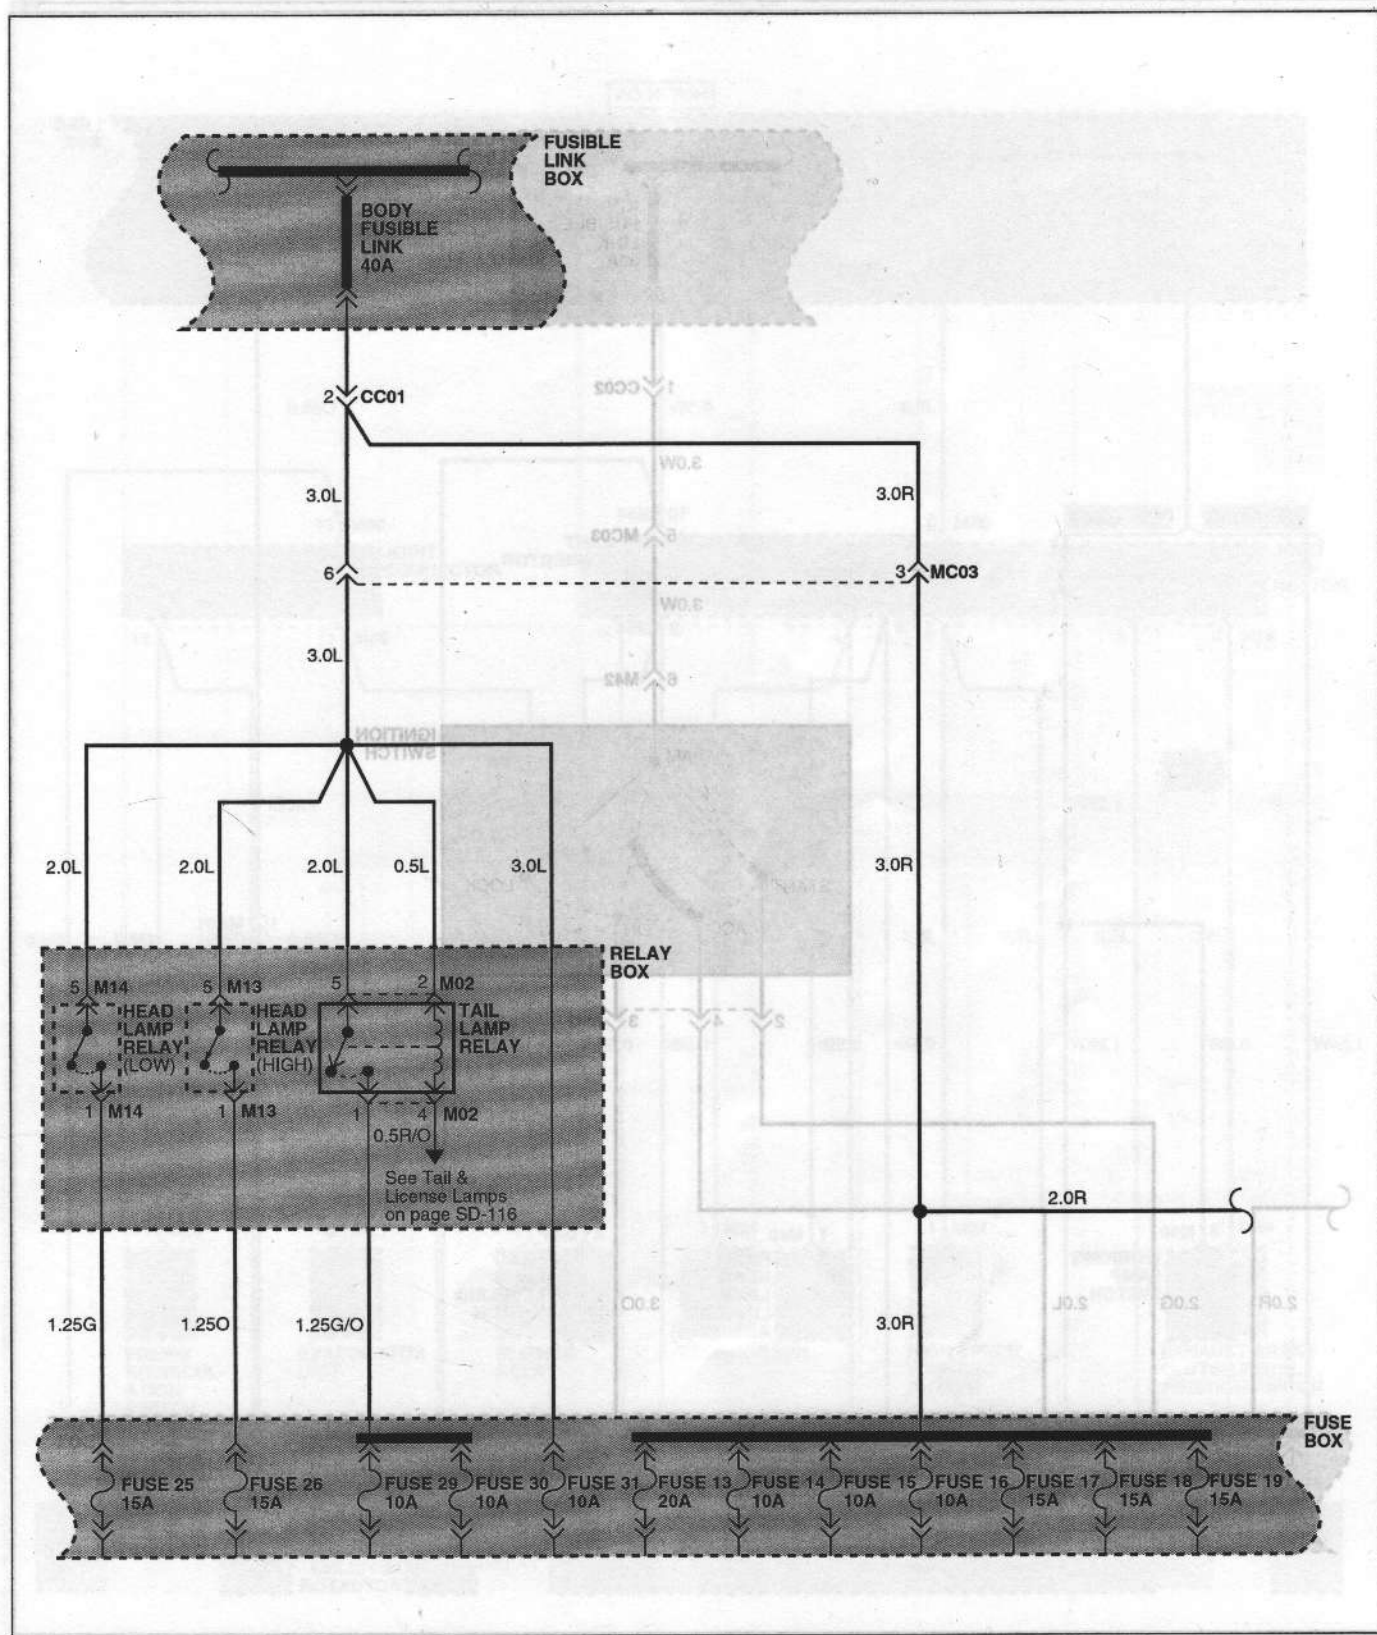


POWER DISTRIBUTION

E2MC0020

POWER DISTRIBUTION (3)

POWER DISTRIBUTION (3)

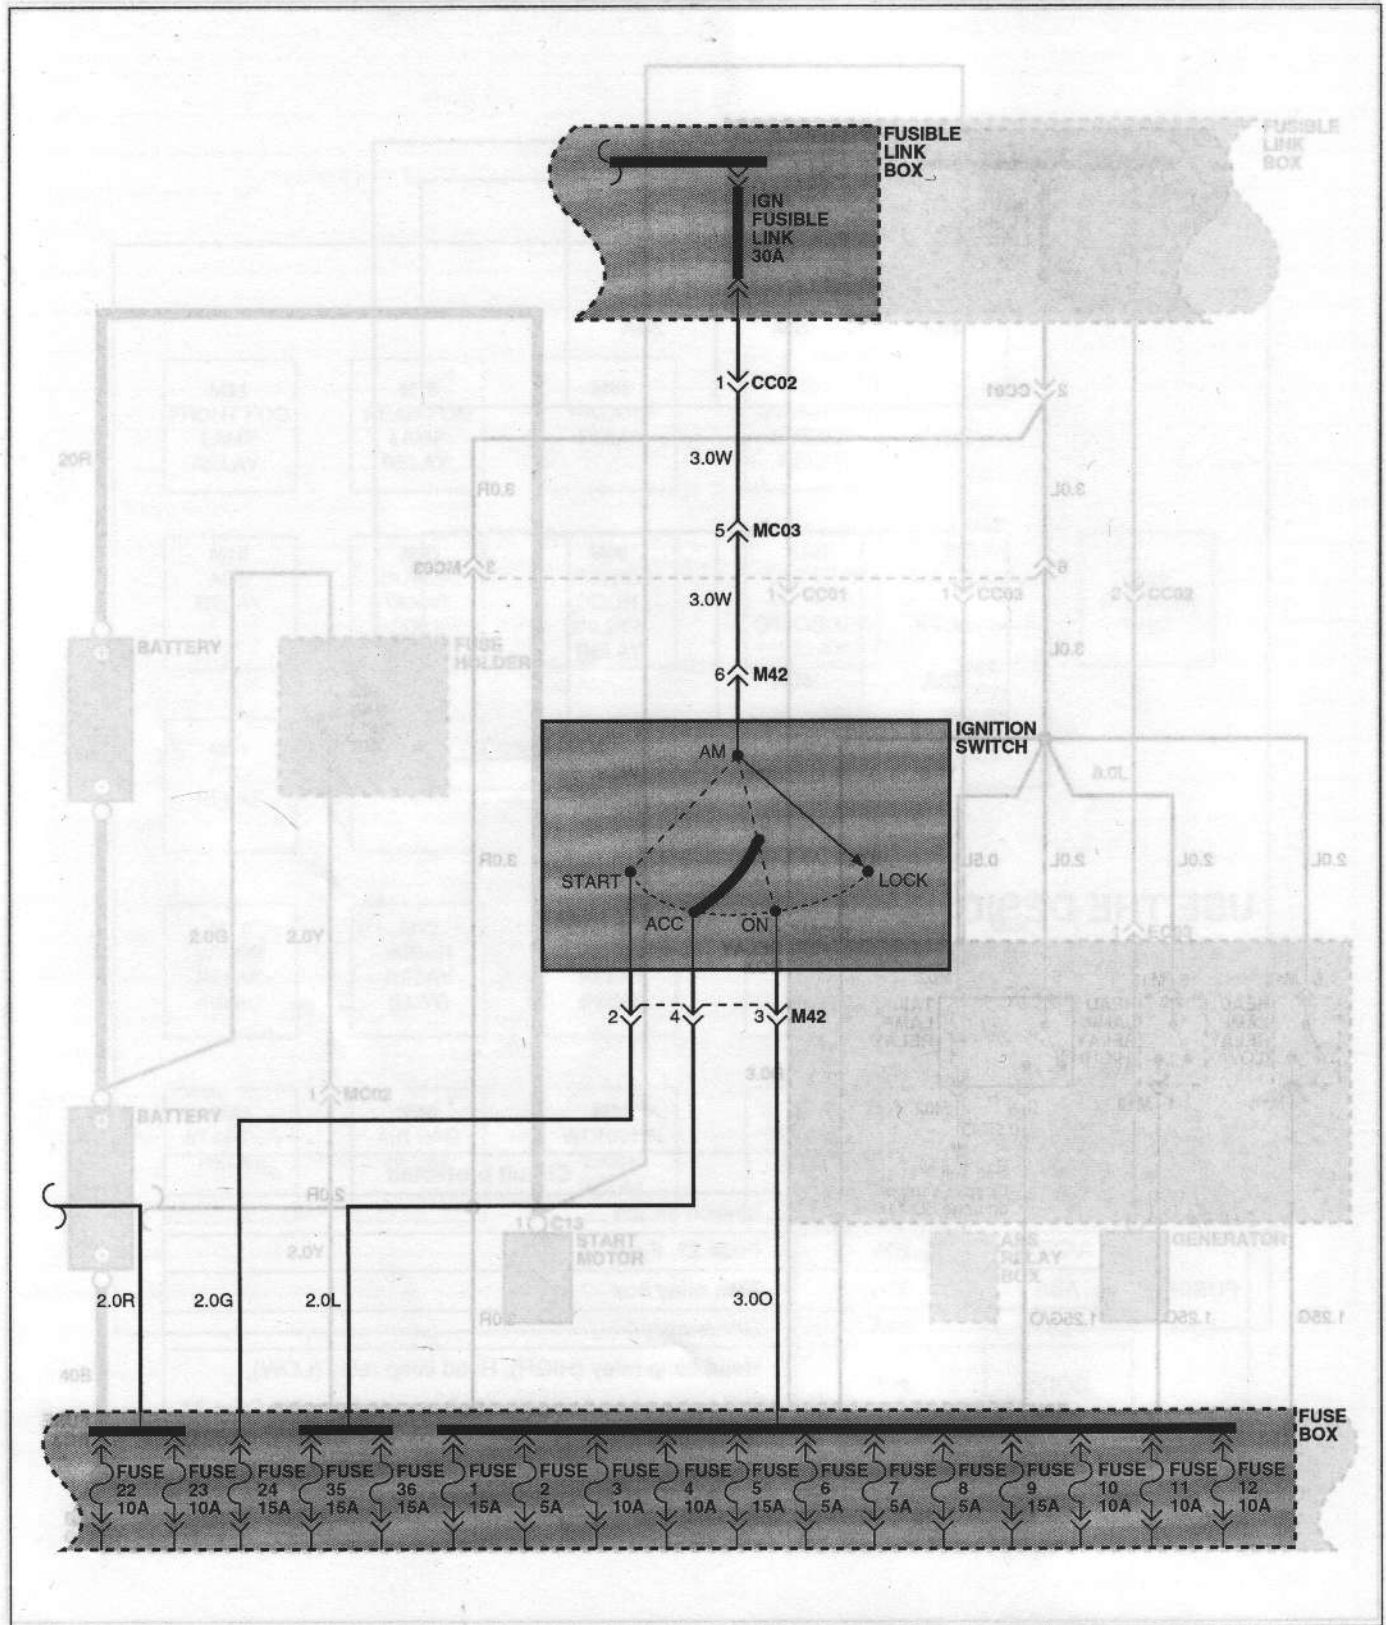

E2MC0020

E2MC002C


E3M00000

FUSE BOX DETAILS

PO

MEMO BOX DETAILS (2)

FUSE BOX DETAILS (1)

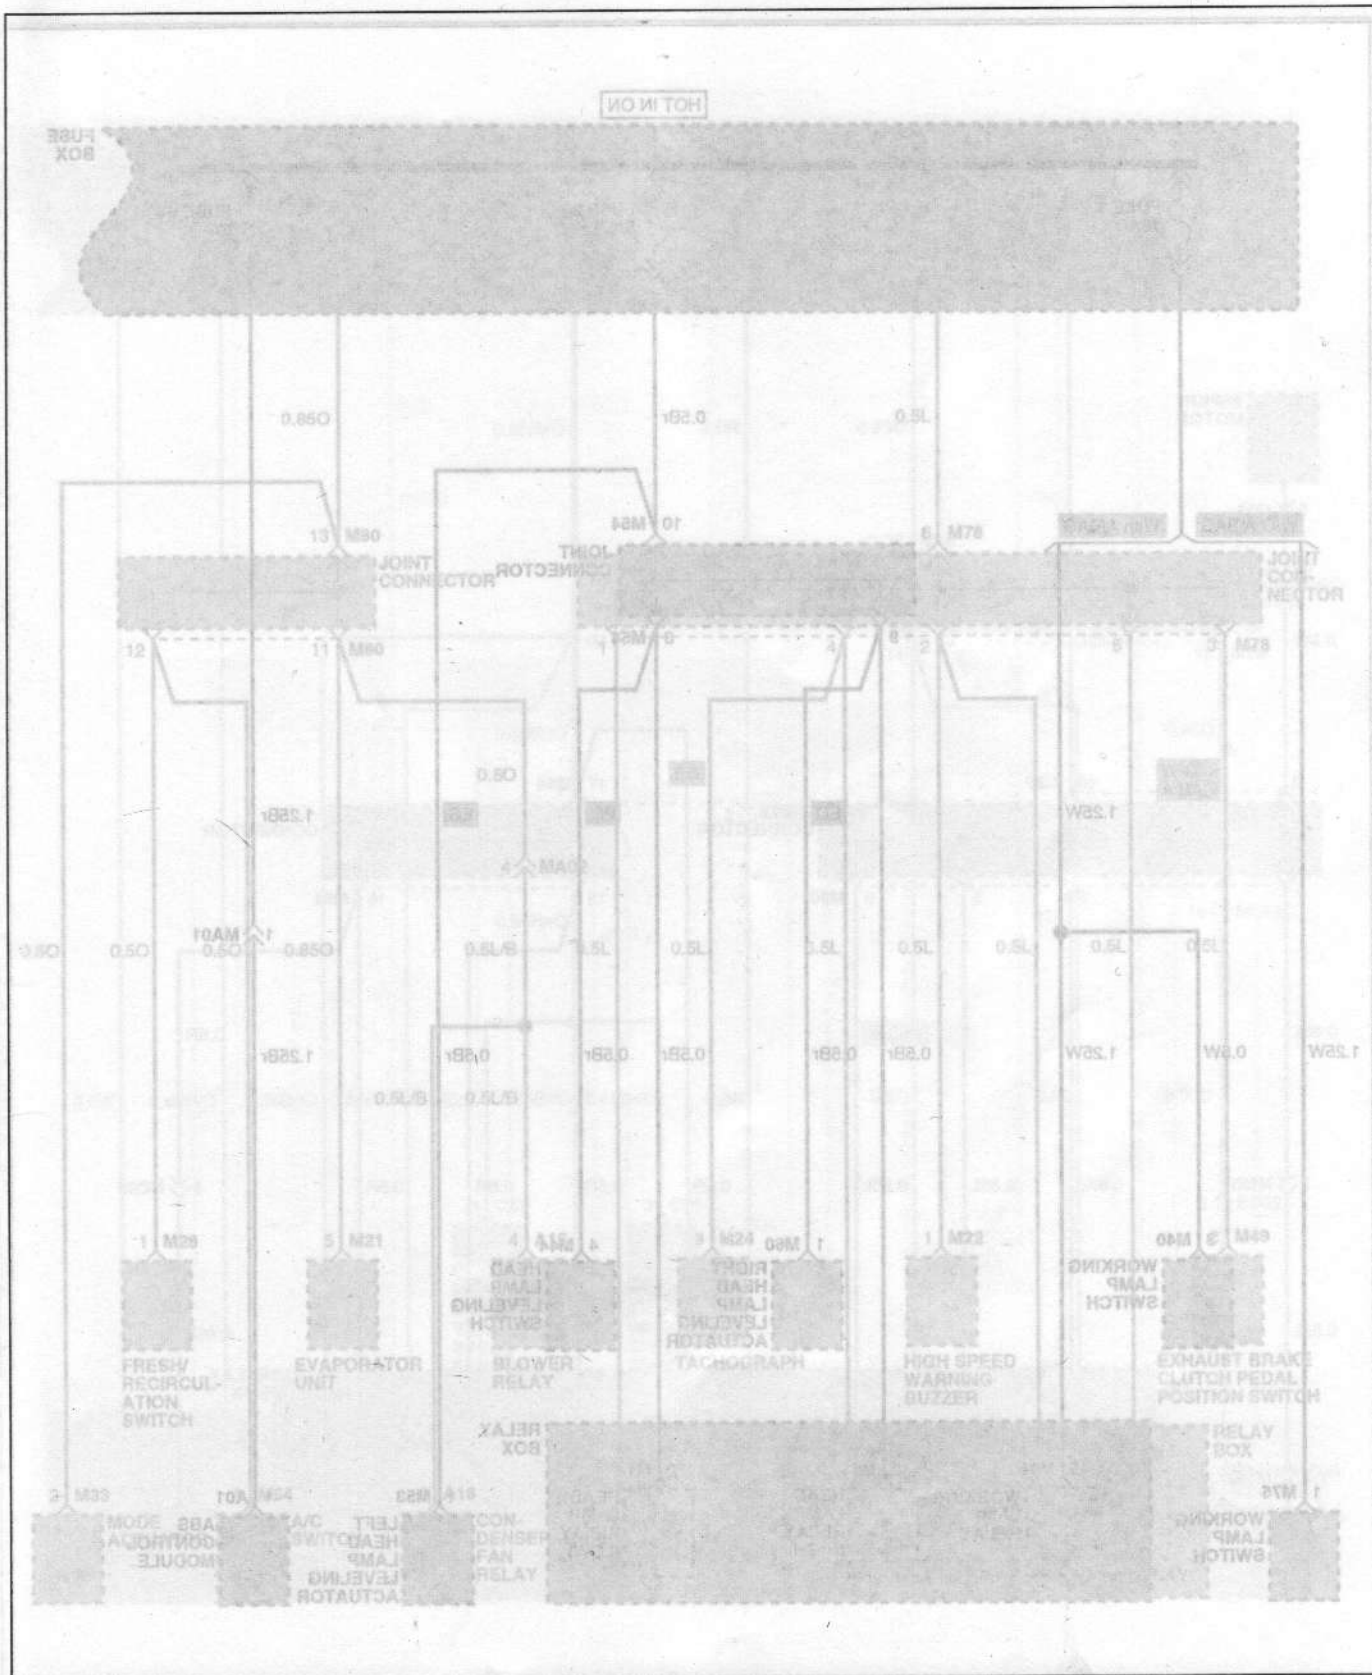


E3M00000

E3M00000

FUSE BOX DETAILS

E2MC0030


FUSE BOX DETAILS (1) (3)

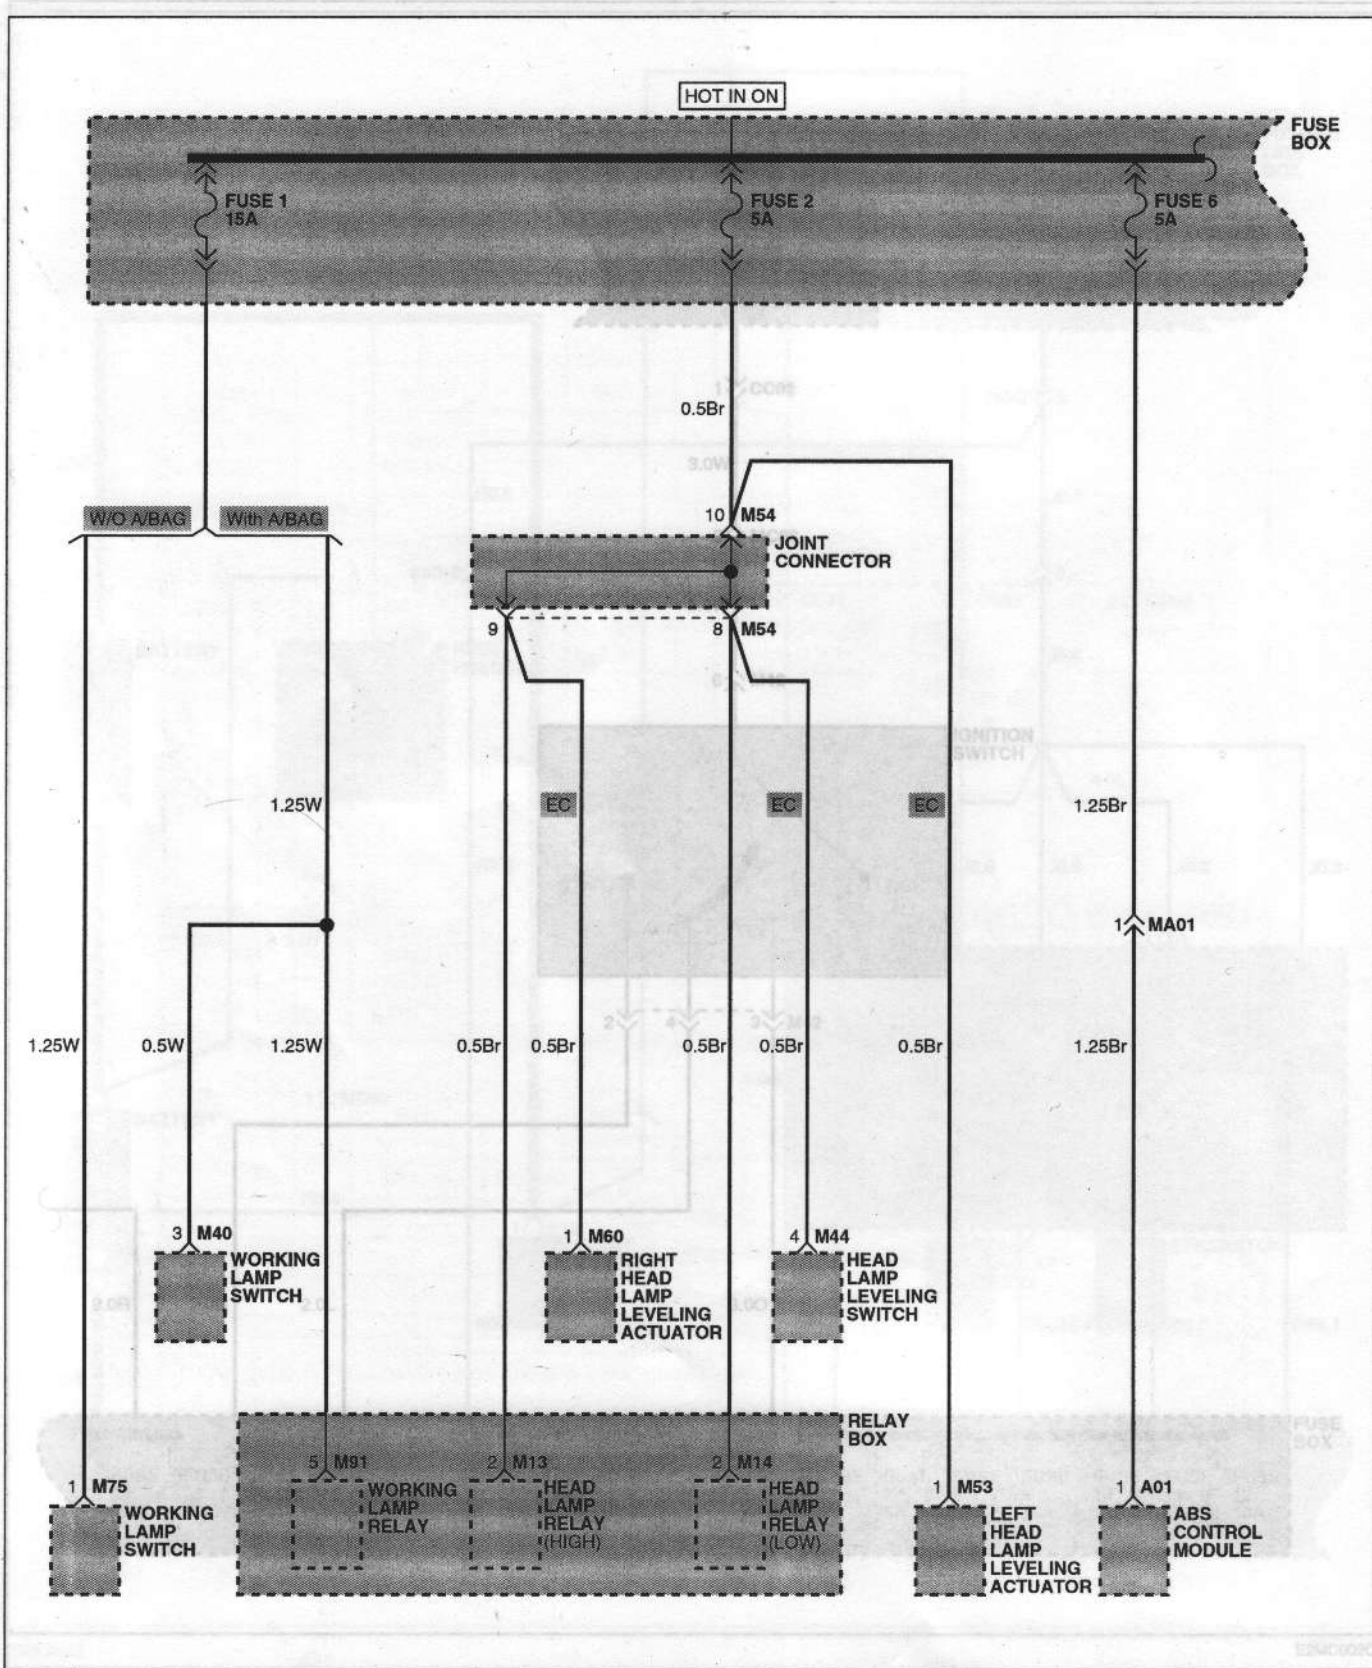

E2MC003A

FUSE BOX DETAILS (2)


FUSE BOX DETAILS (3)

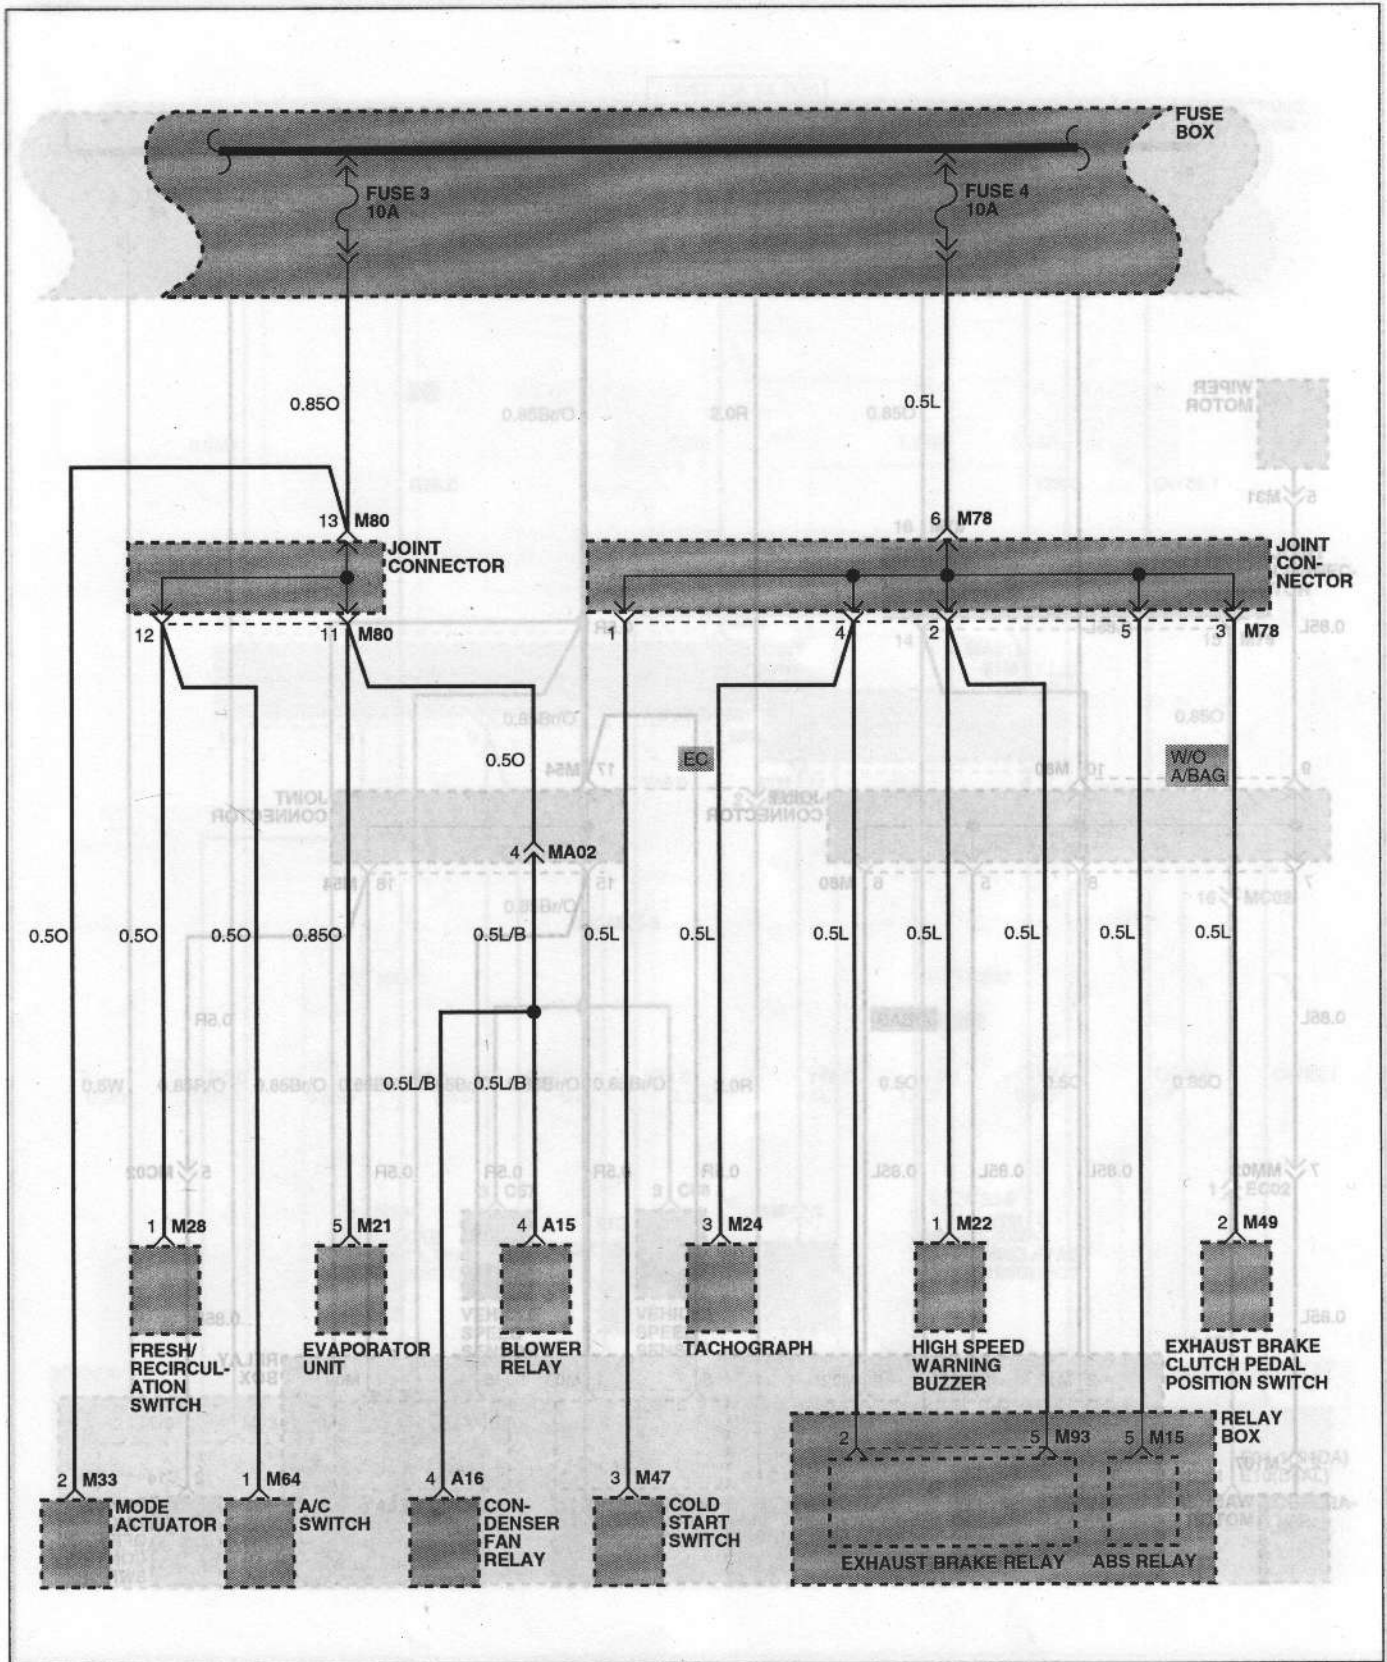

E2MC003B

BOX DETAILS


FUSE BOX DETAILS (3)

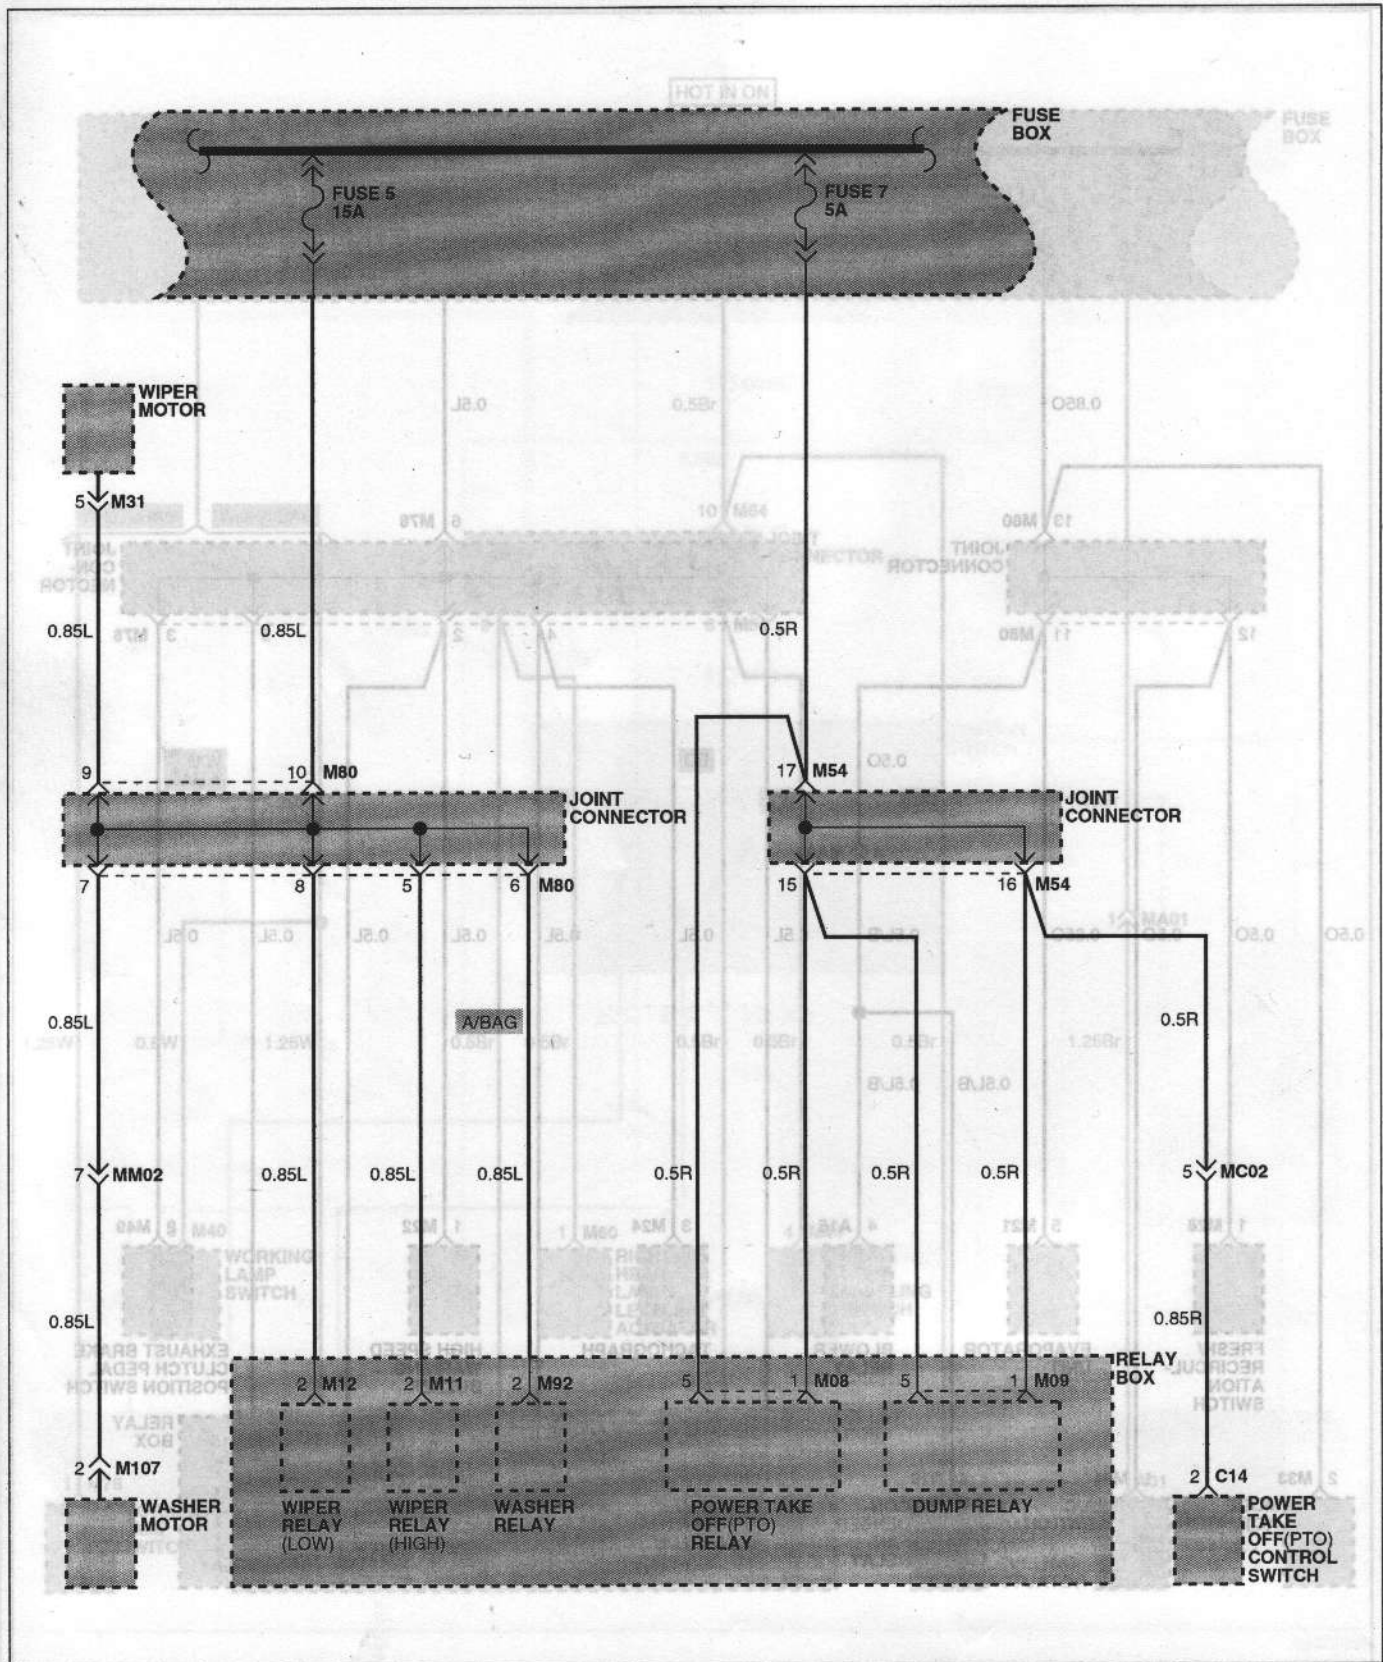

E2MC003C


FUSE BOX DETAILS (4)

FUSE BOX DETAILS (5)

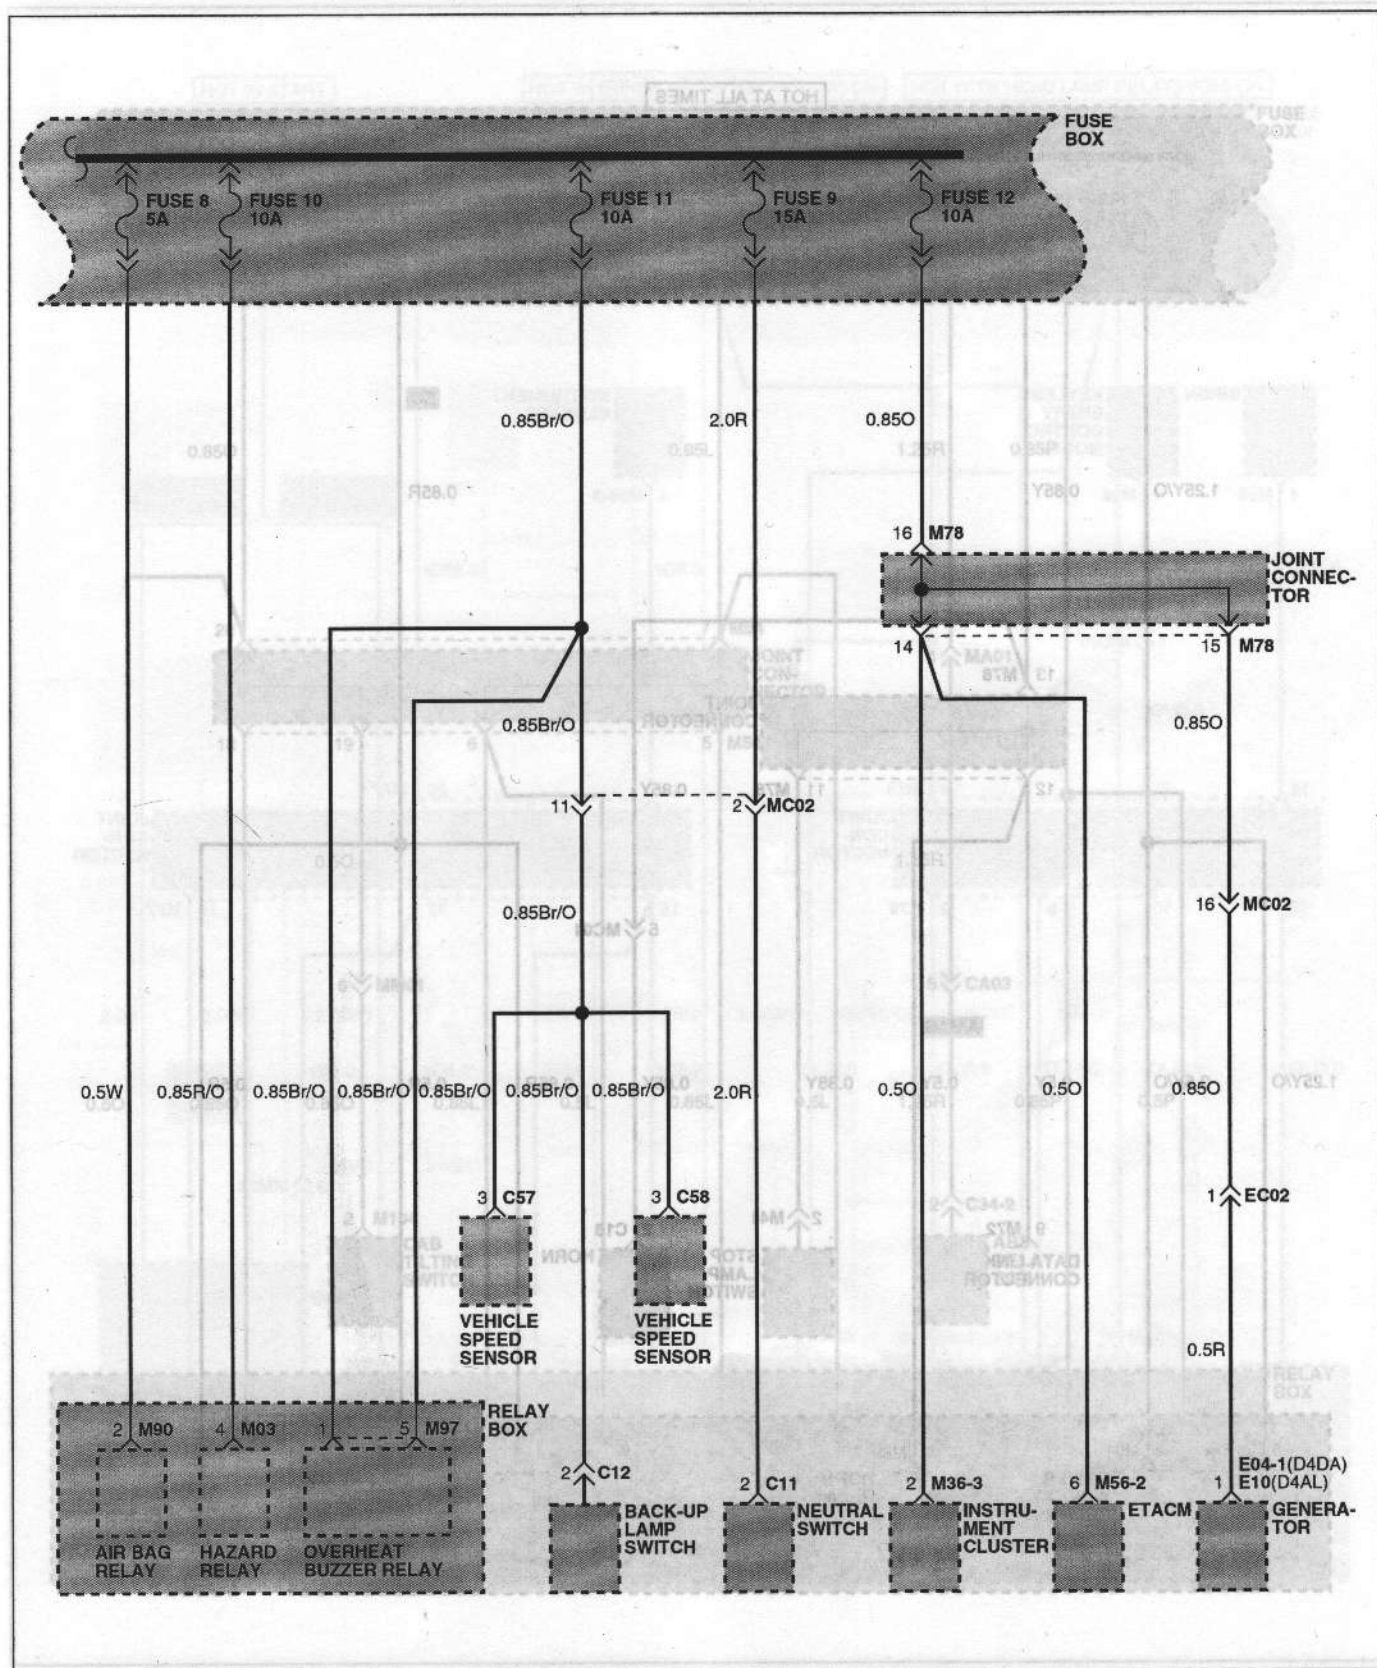

FUSE BOX DETAILS (5)


FUSE BOX DETAILS (4)

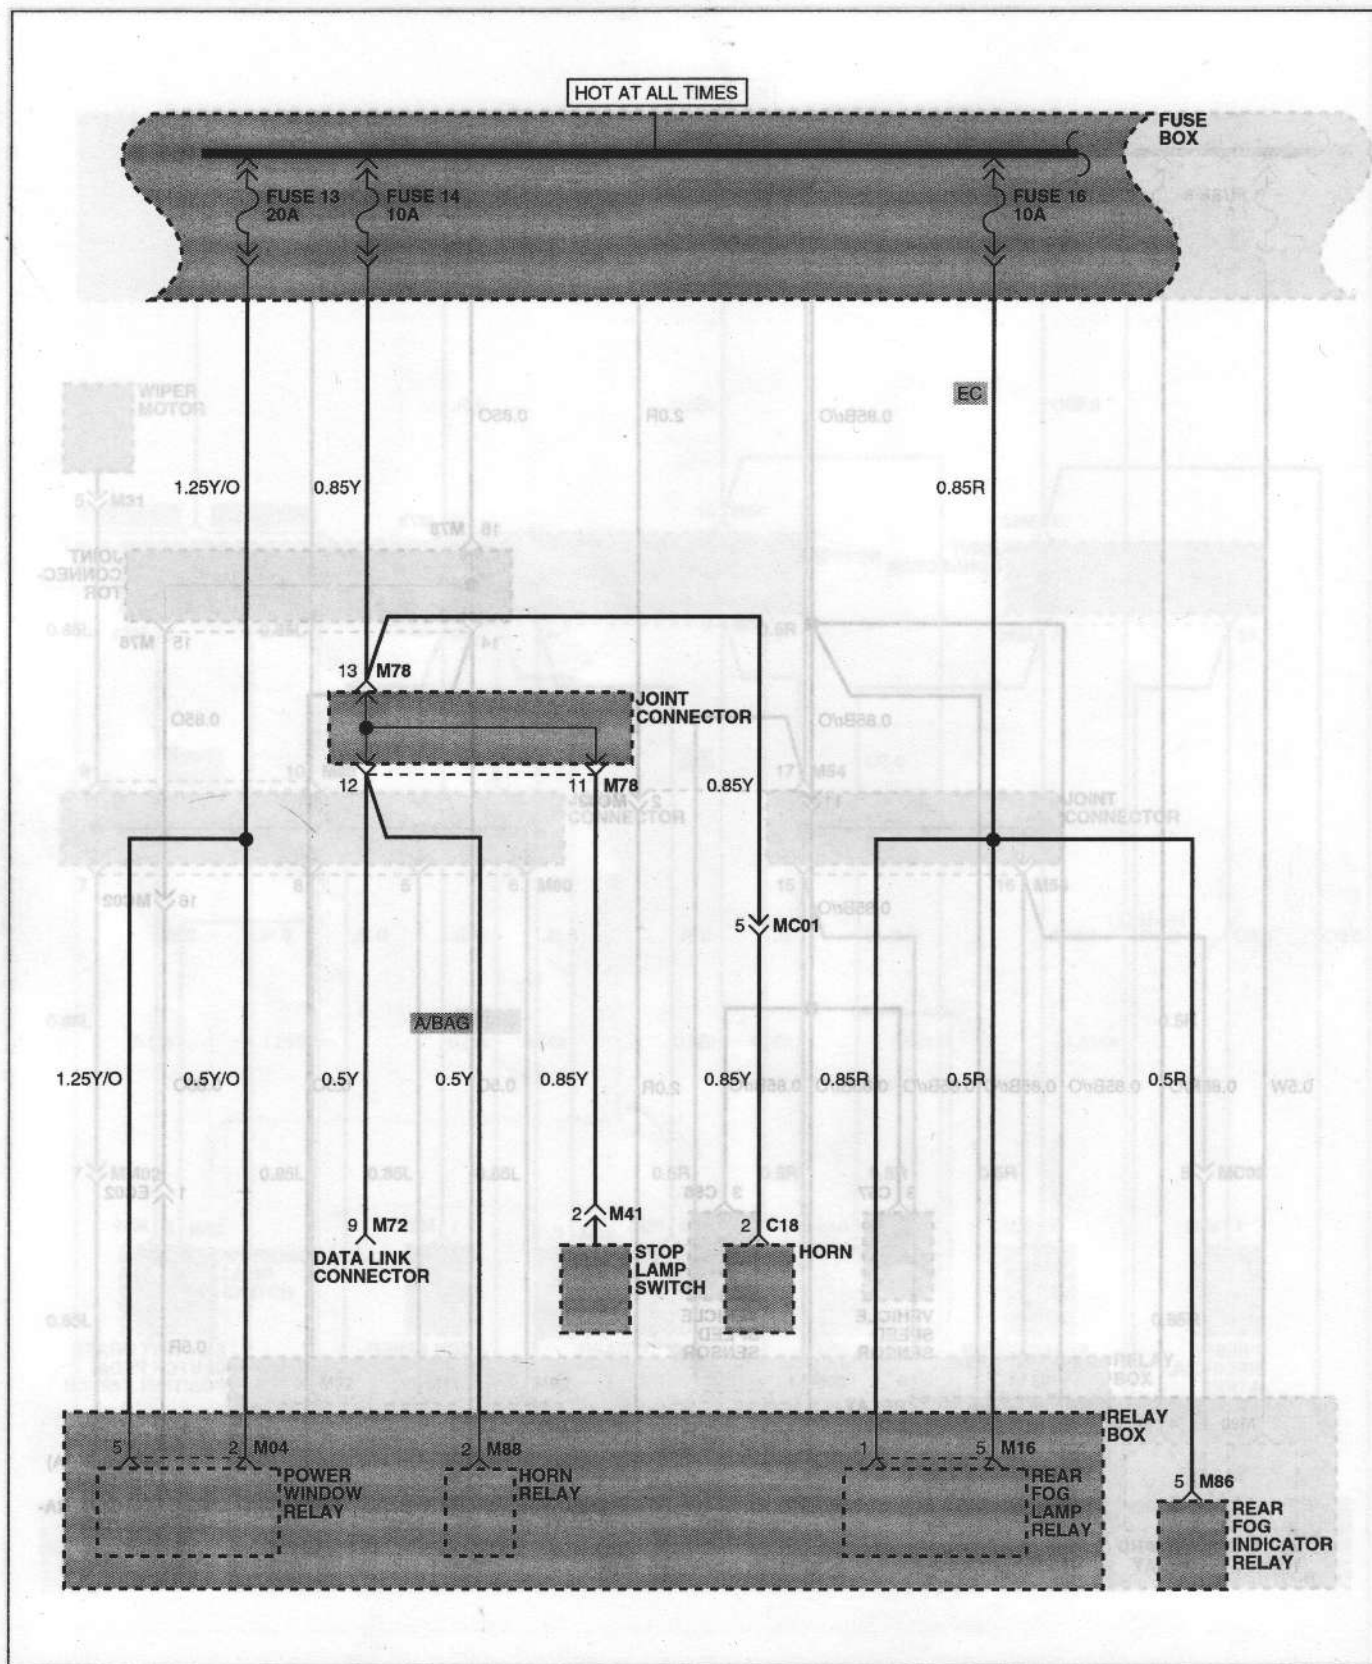

E2MC003E

FUSE BOX DETAILS (6)

FUSE BOX DETAILS (7)

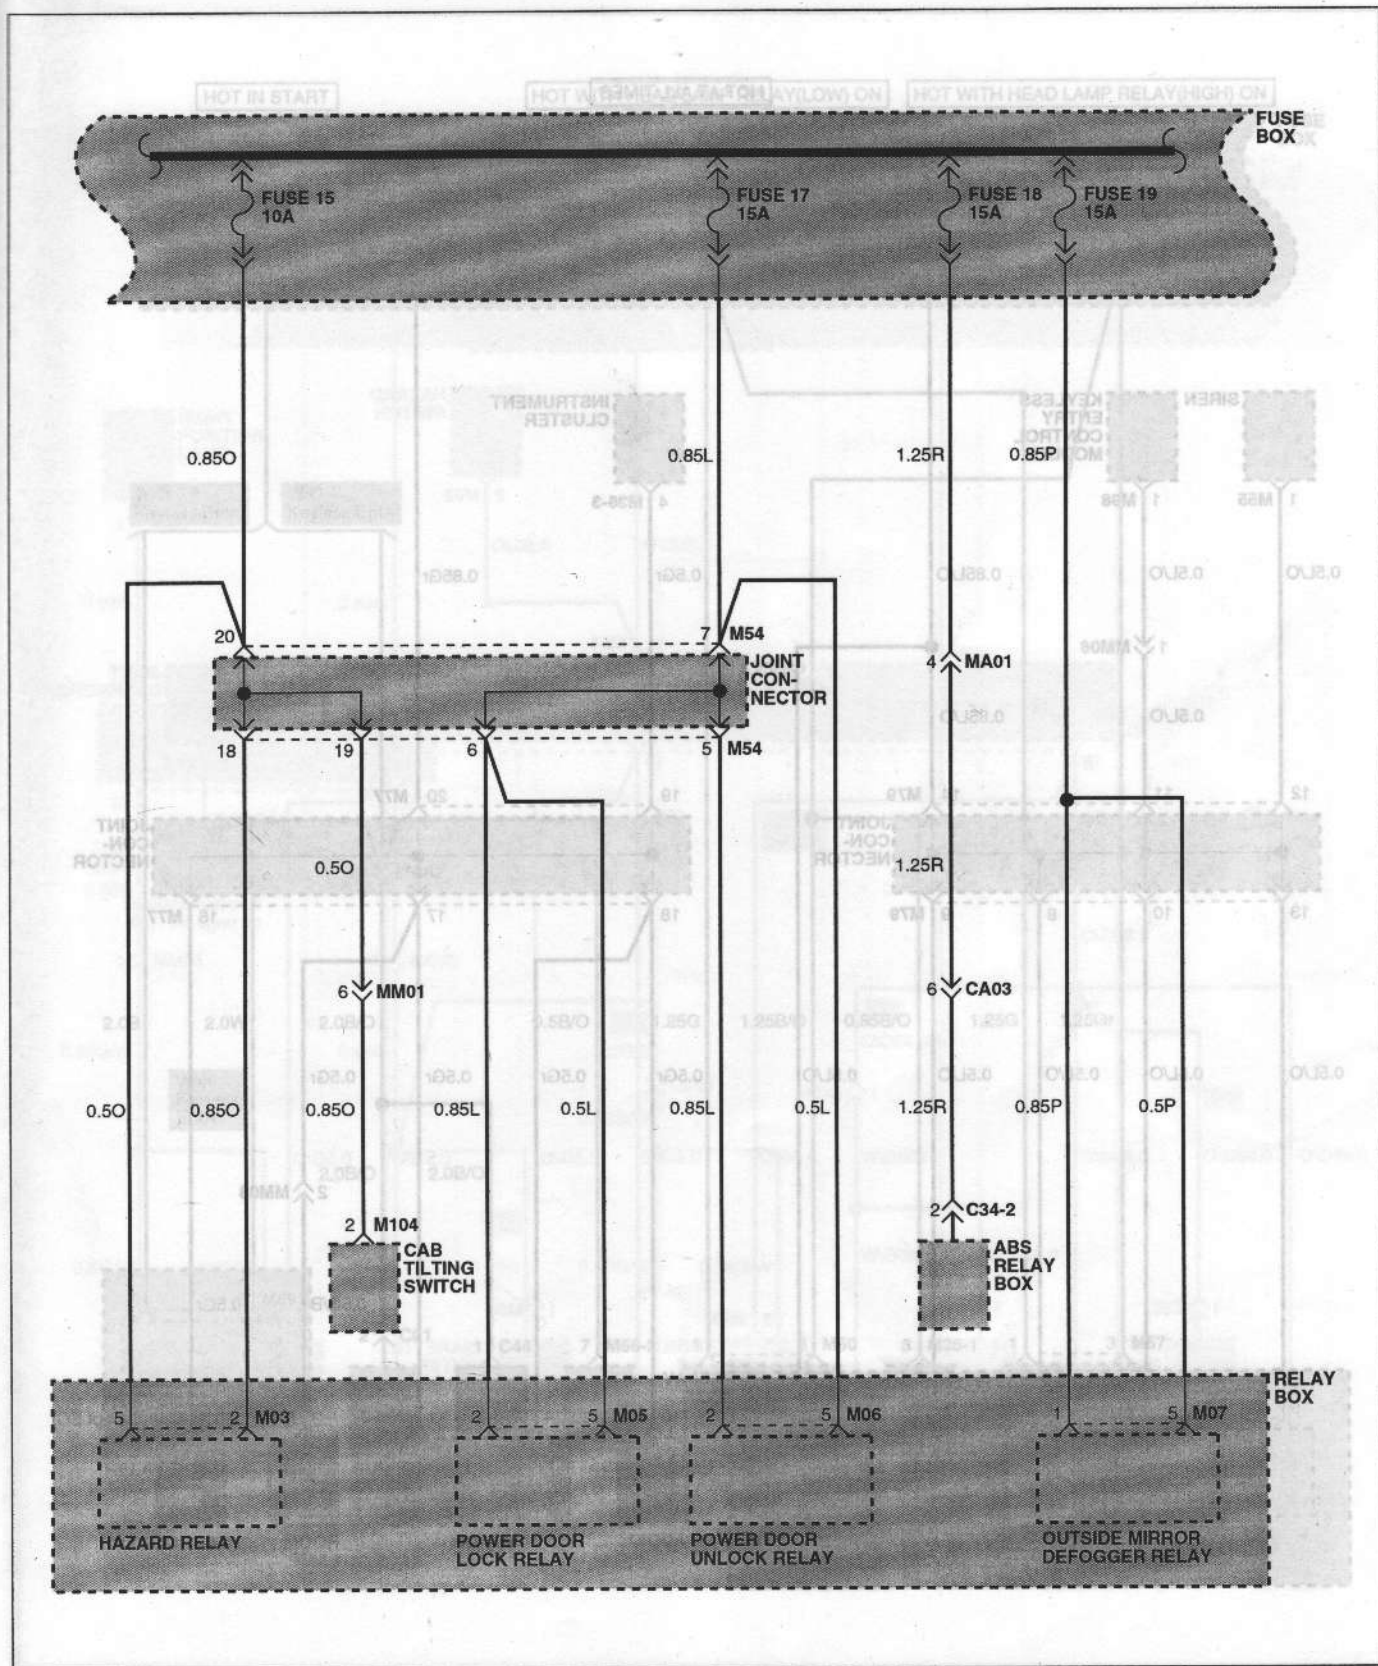


003E

00000MS3

E2MC003F

FUSE BOX DETAILS (7)

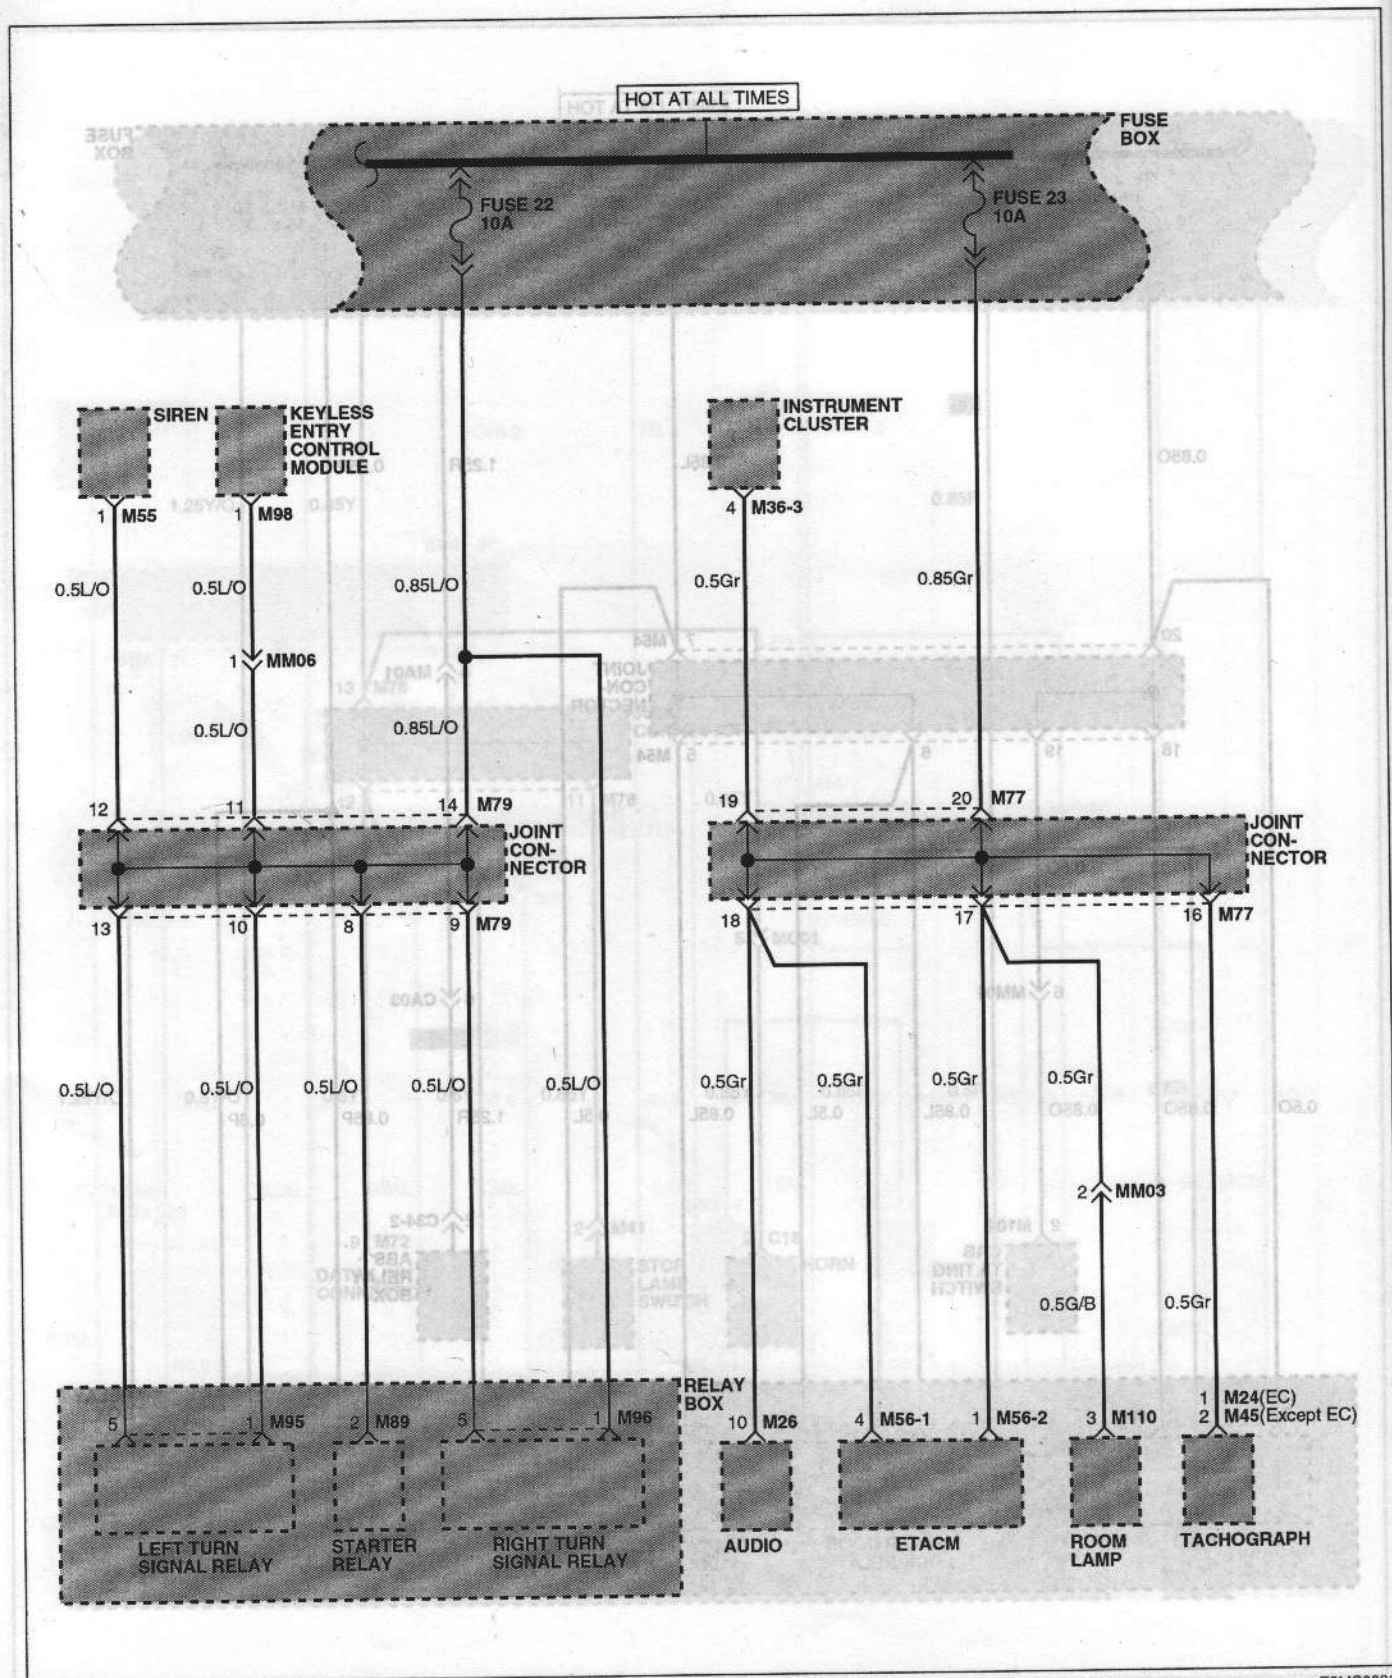


E2MC003G

FUSE BOX DETAILS (9)




FUSE BOX DETAILS (9)

(8) 2.IIATED XOB 22UJ

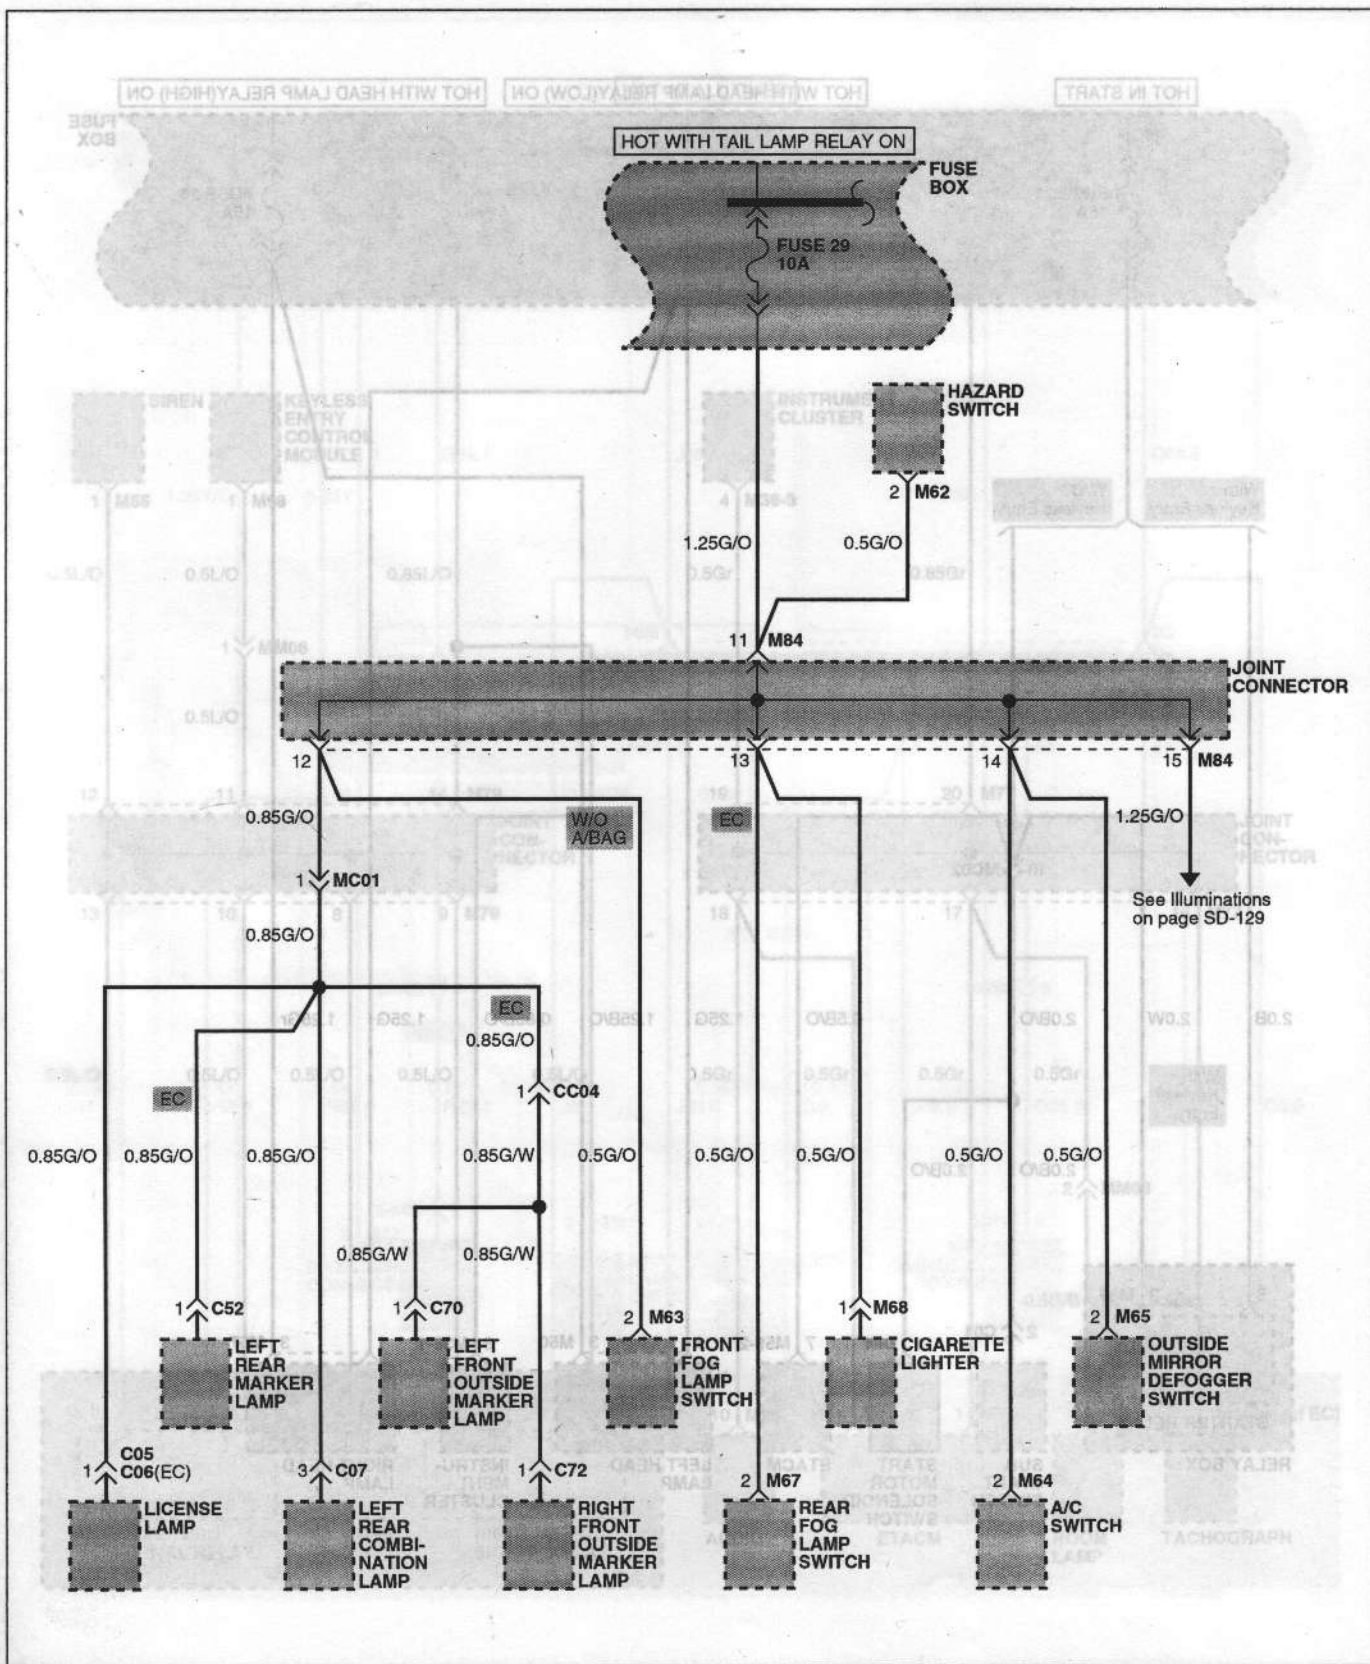

E2MC003J

FUSE BOX DETAILS (10)

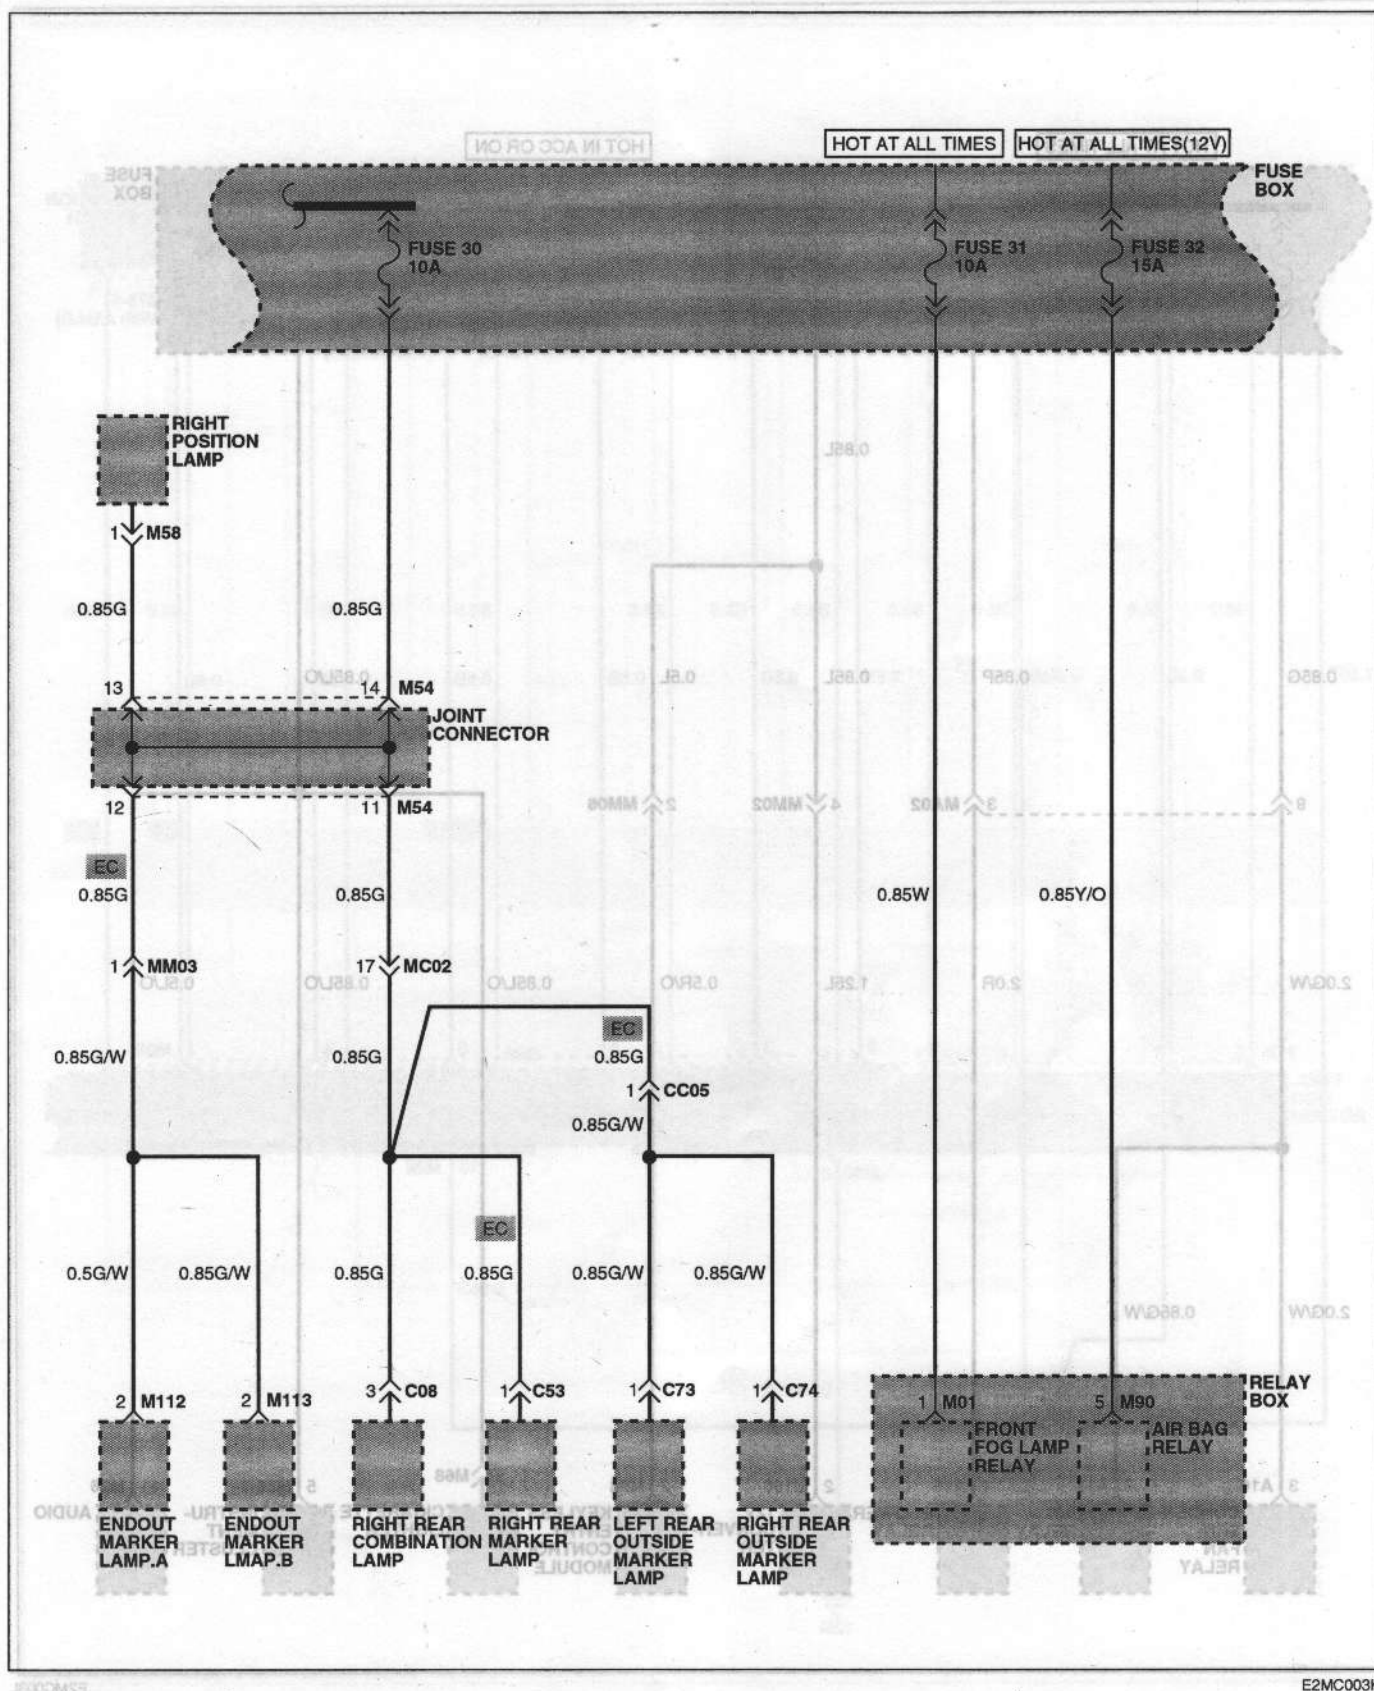


0003J

E2MC003K

GROUND DISTRIBUTION

E2MC0040


GROUND DISTRIBUTION (1)

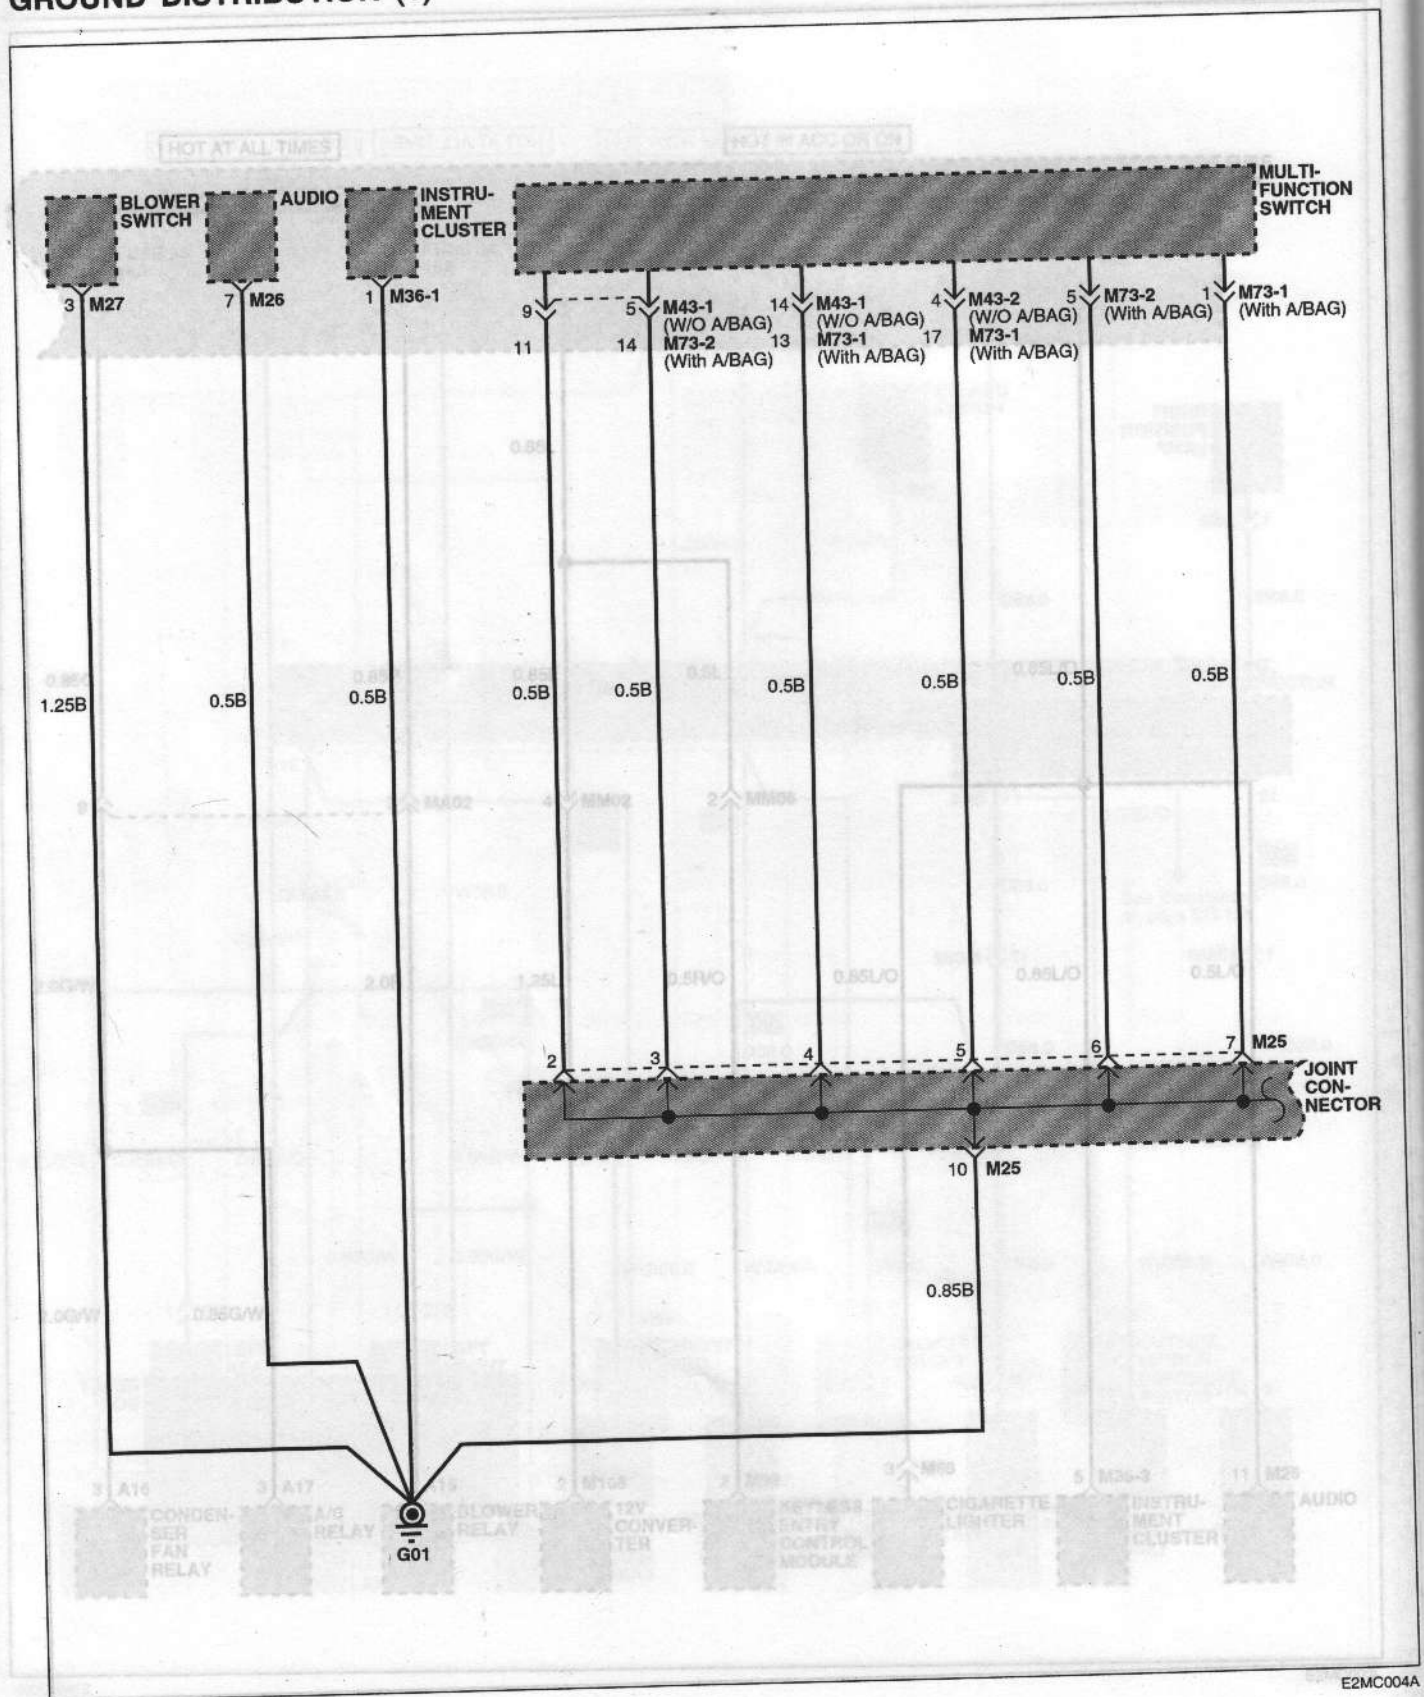

E2MC004A

GROUND DISTRIBUTION (2)


GROUND DISTRIBUTION (3)

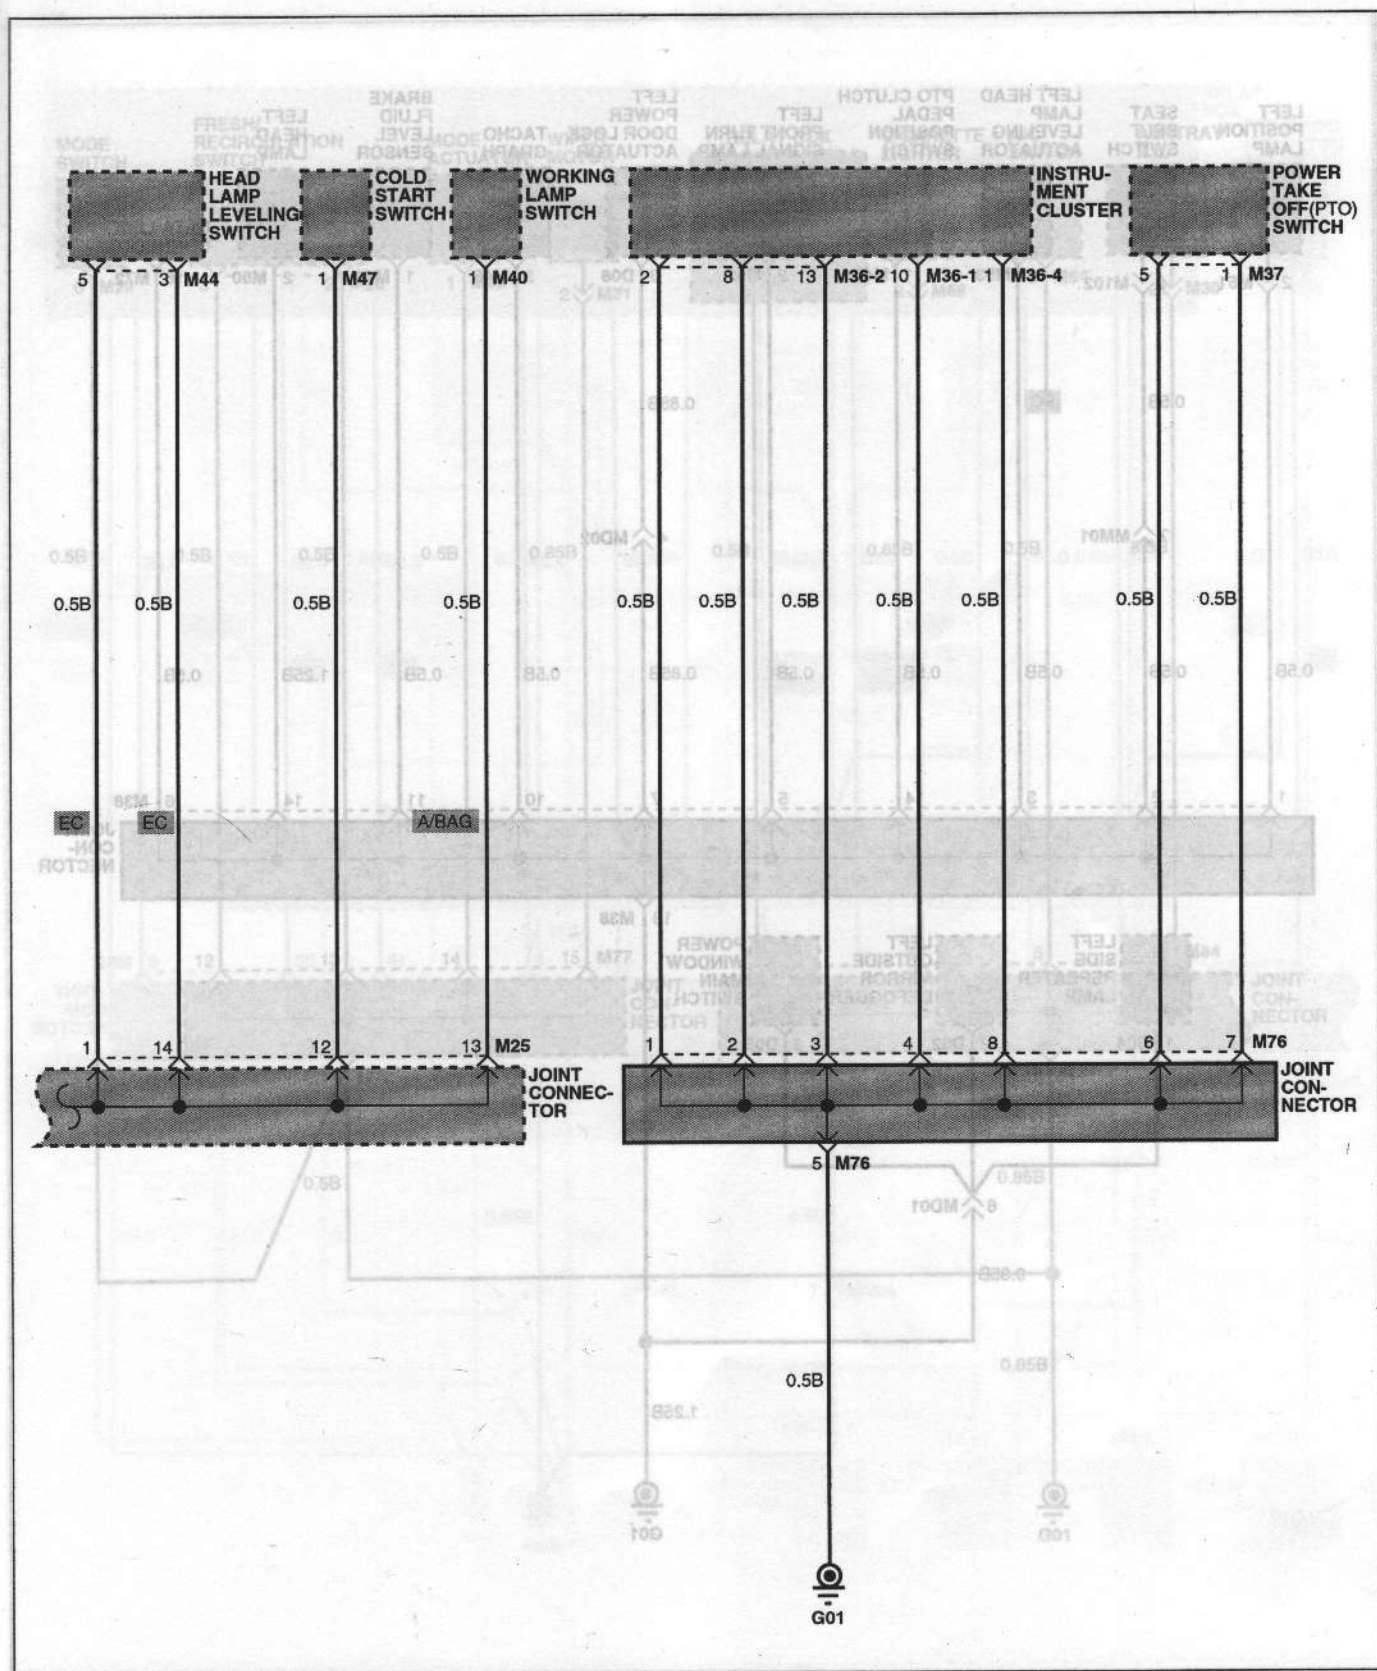

C004A

E2MC004B


GROUND DISTRIBUTION (3)

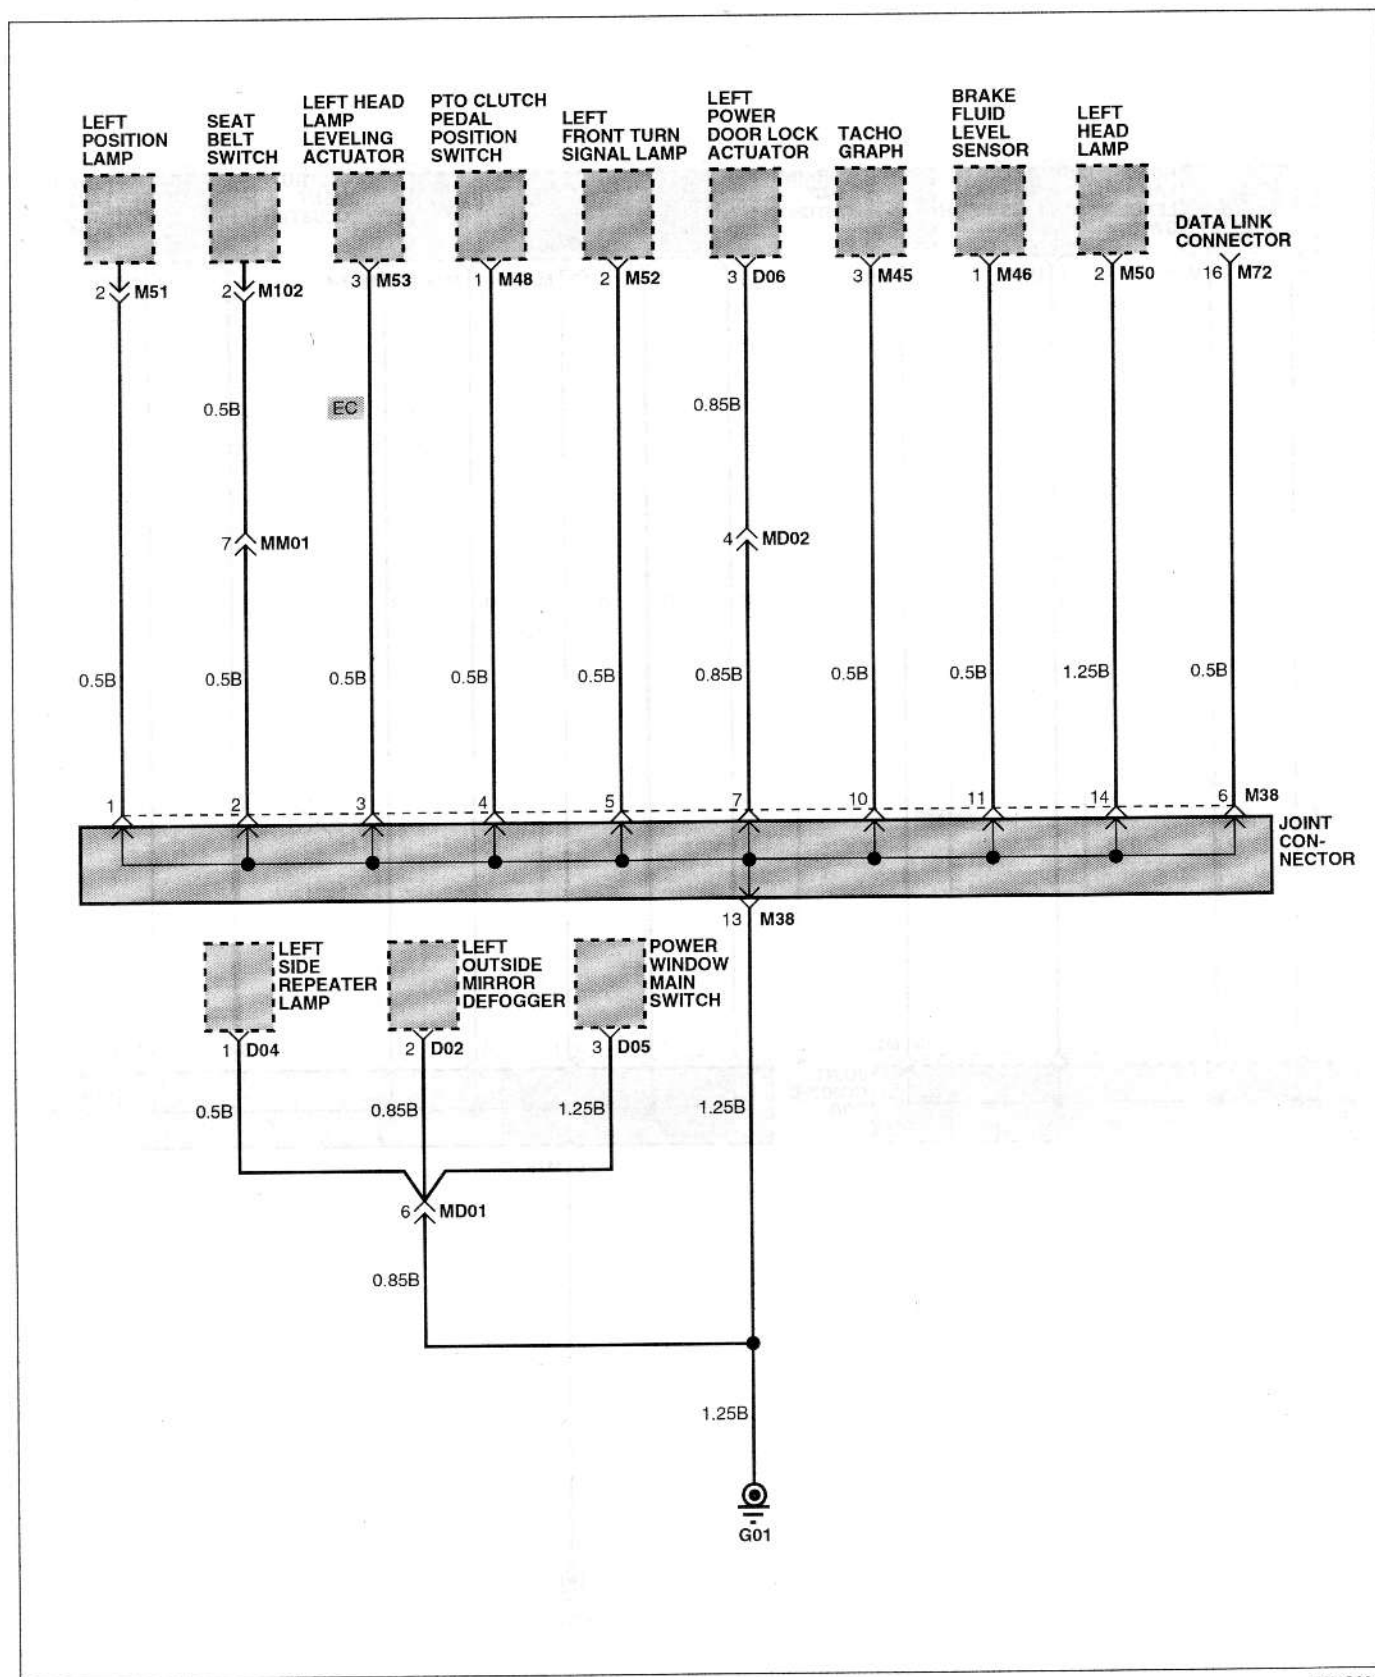

E2MC004C


GROUND DISTRIBUTION (4)

(a) NOITUBIRTSID QINUORG

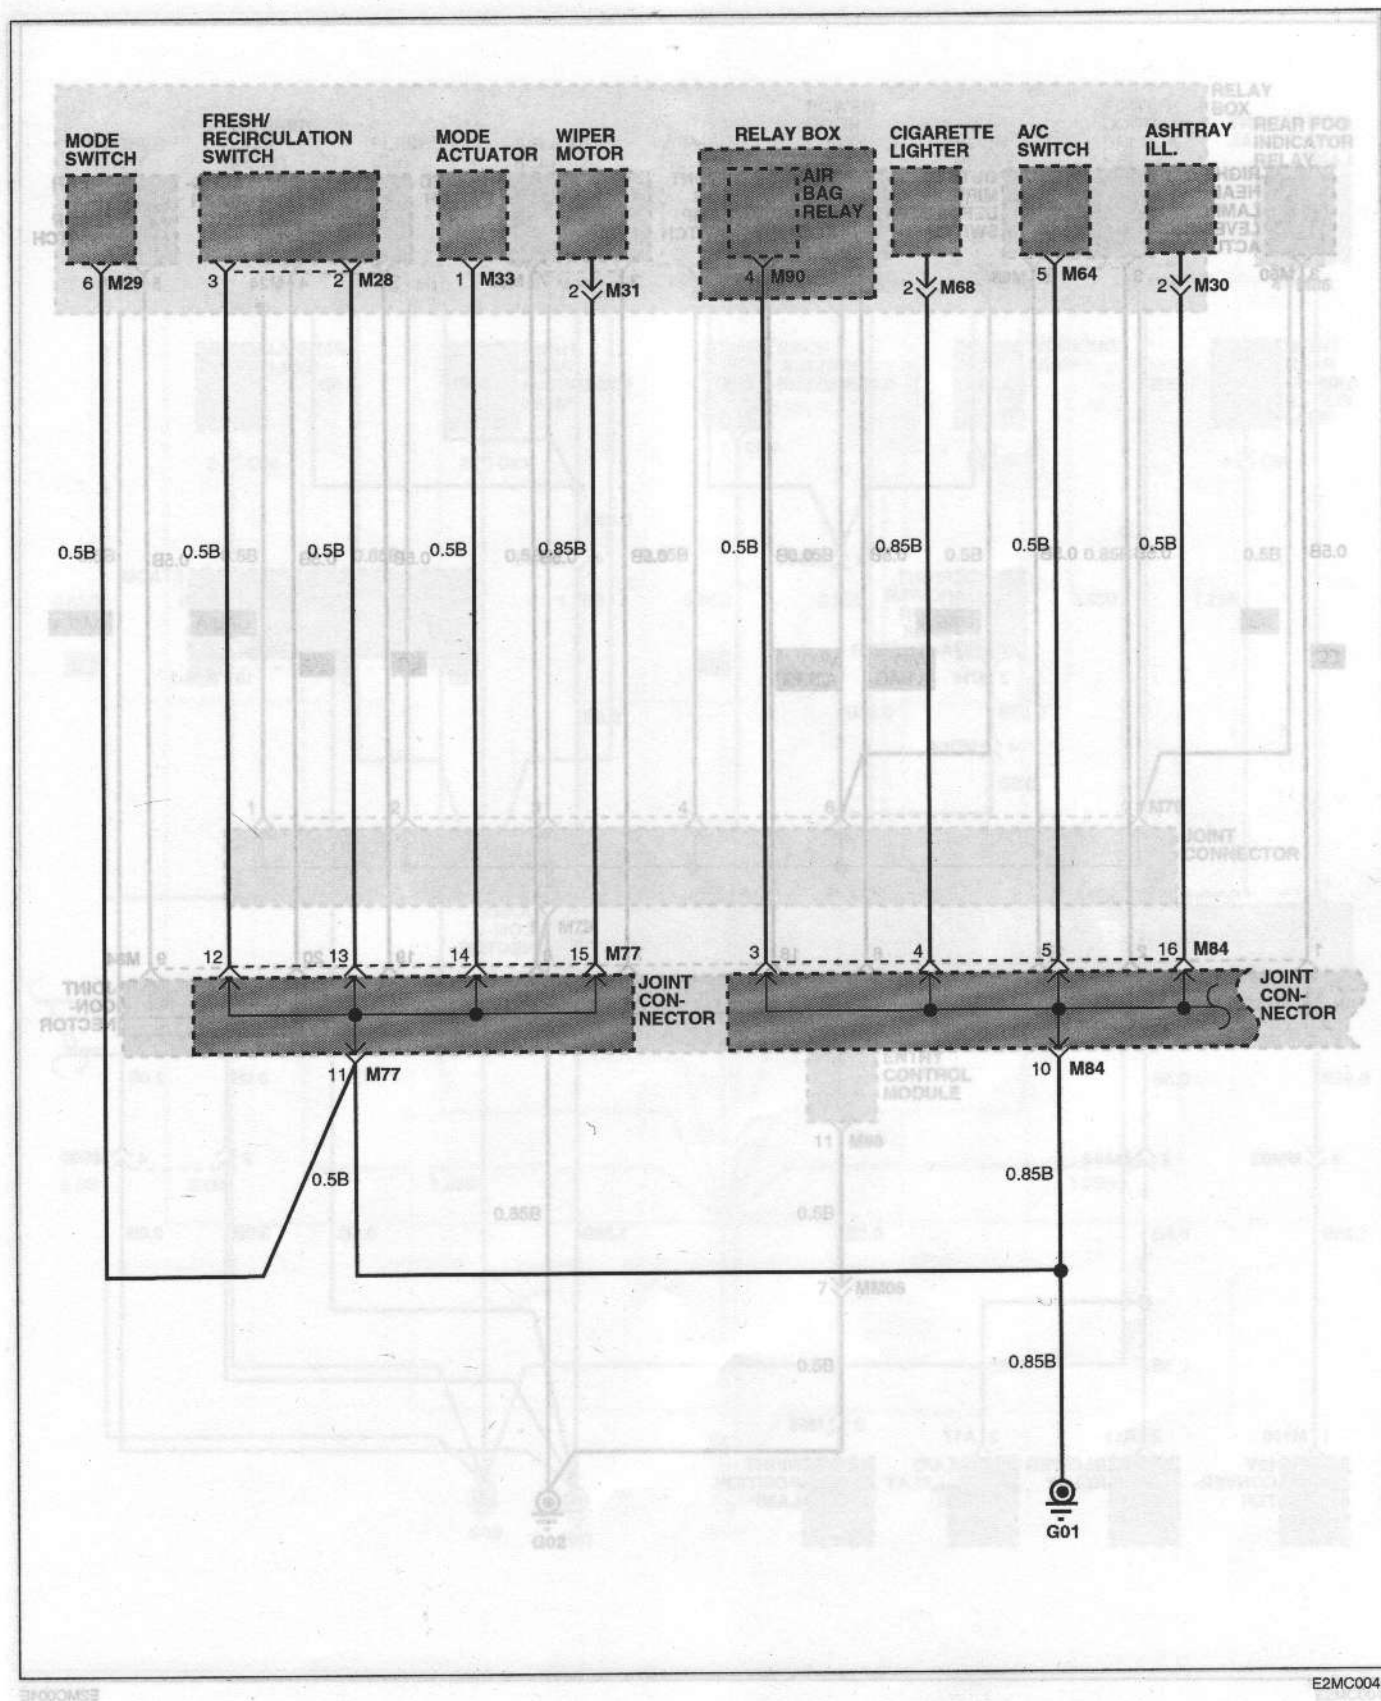


GROUND DISTRIBUTION (5)

(A) NOITUBIRTSID DNUORG

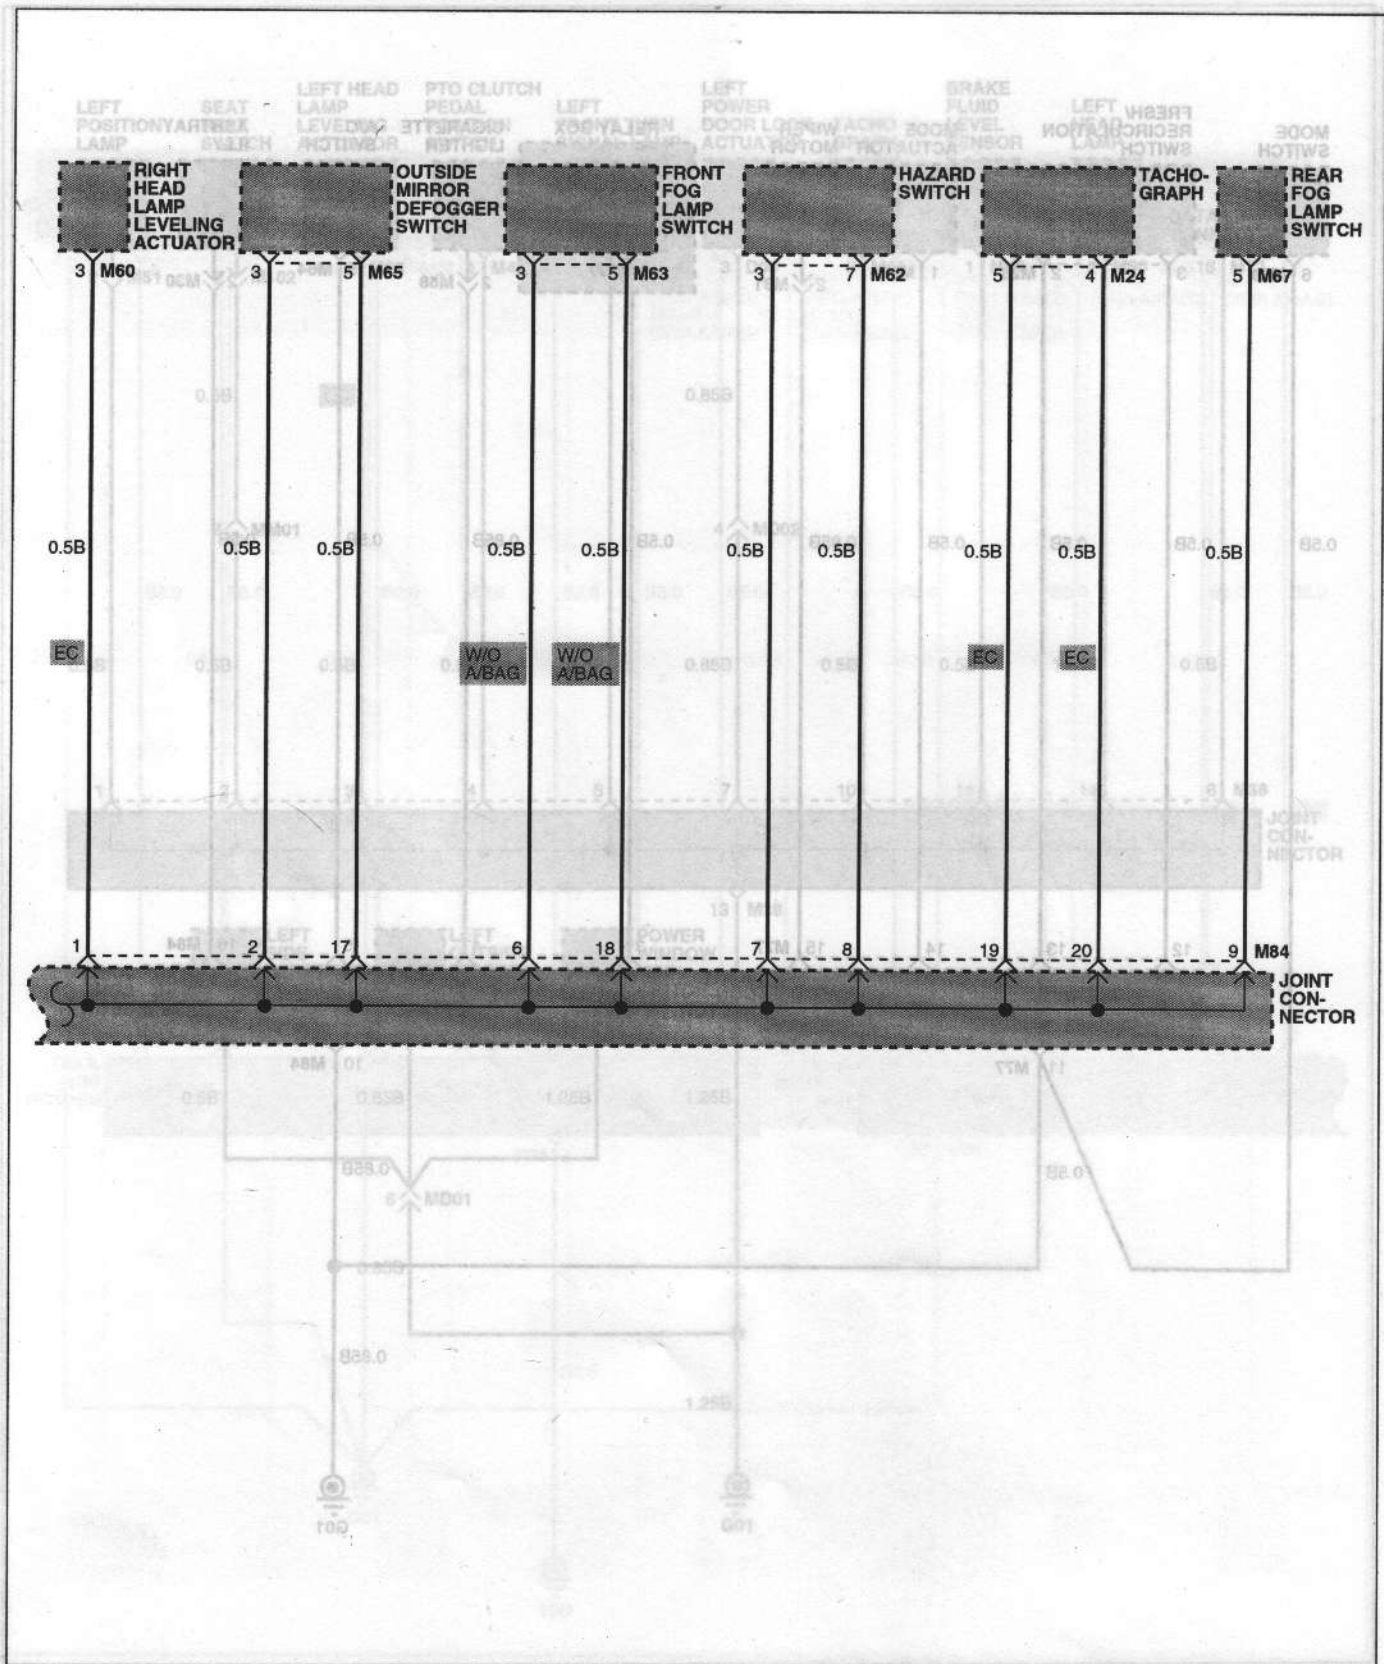

E2MC004E


GROUND DISTRIBUTION (6)

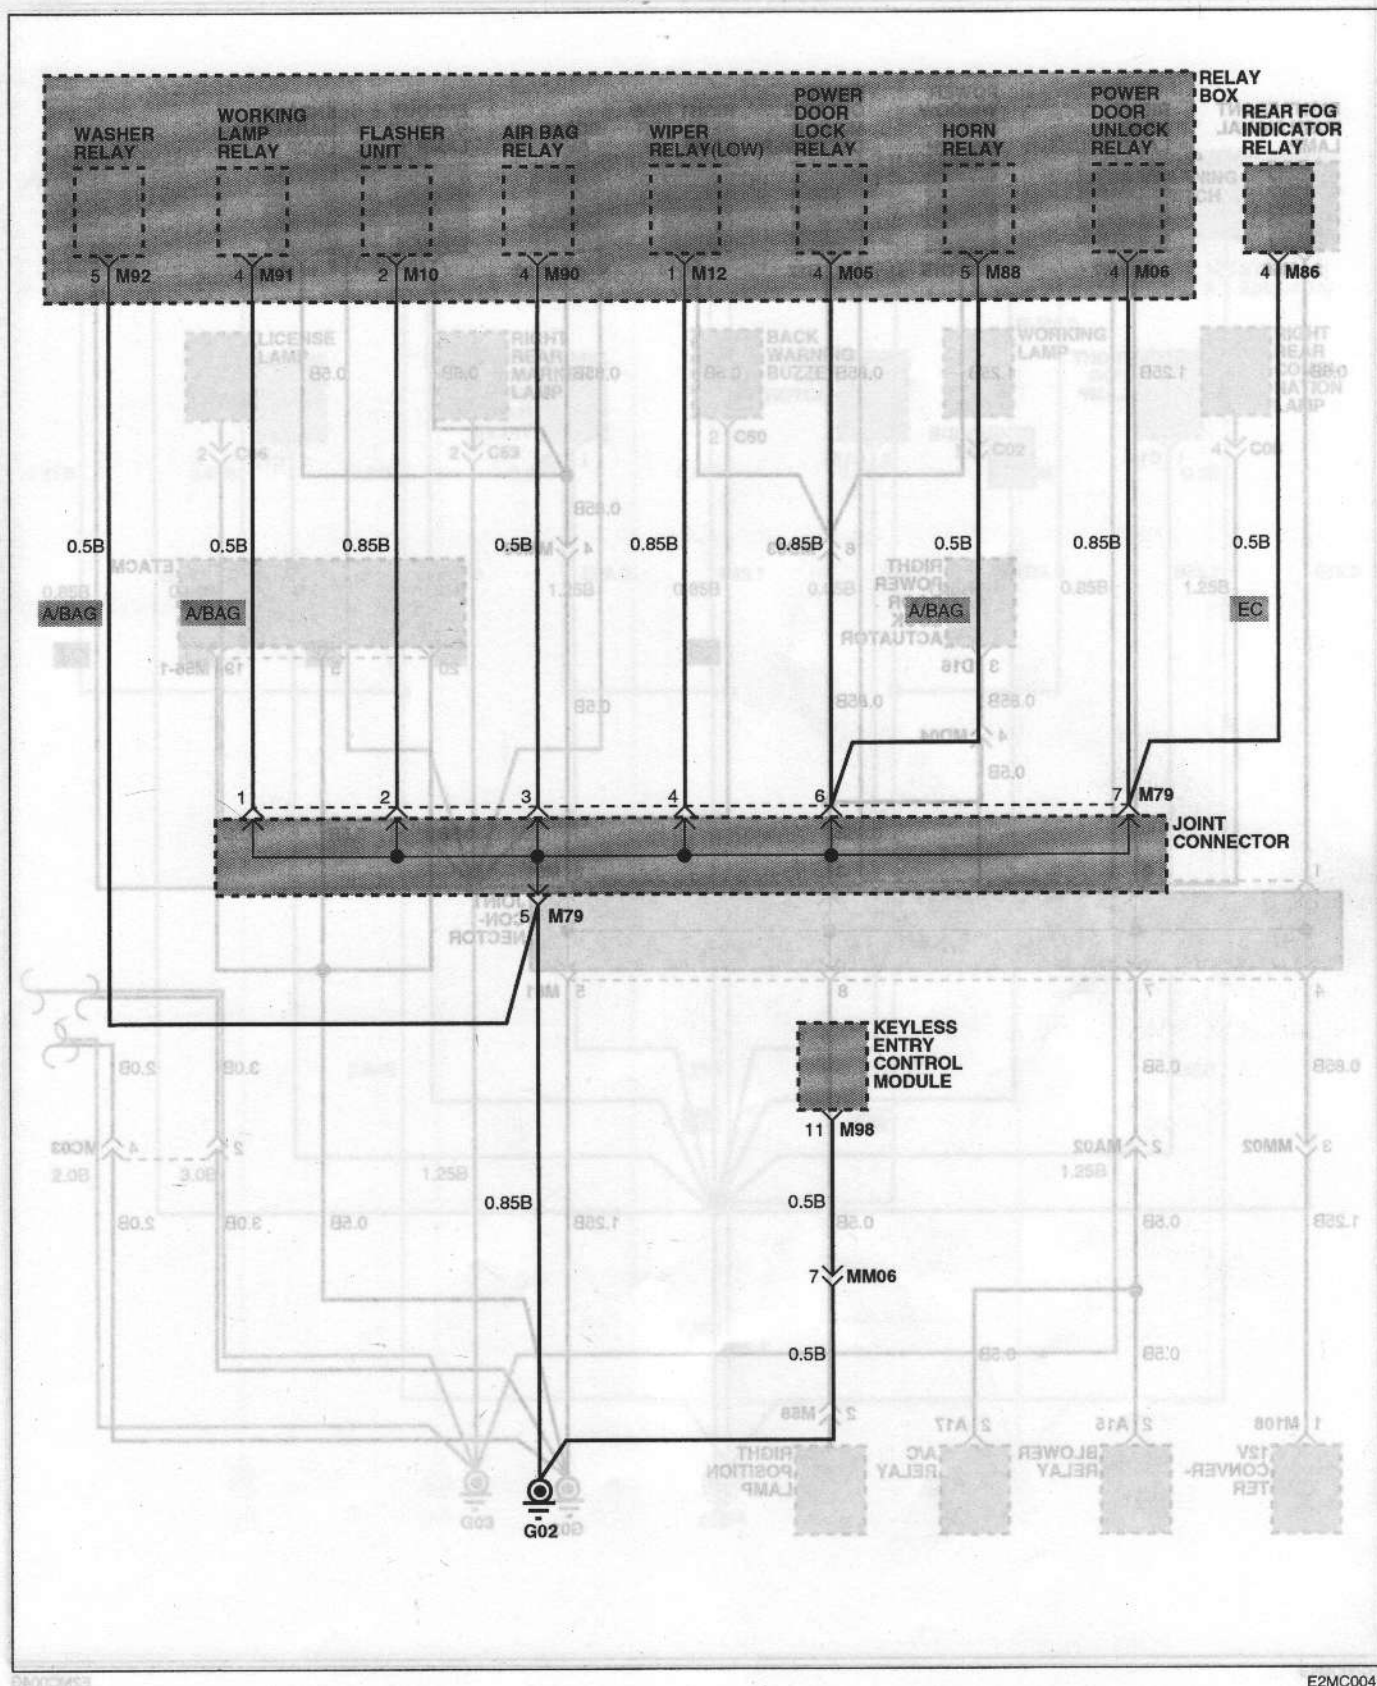

MC004E


E2MC004F

GROUND DISTRIBUTION (7)

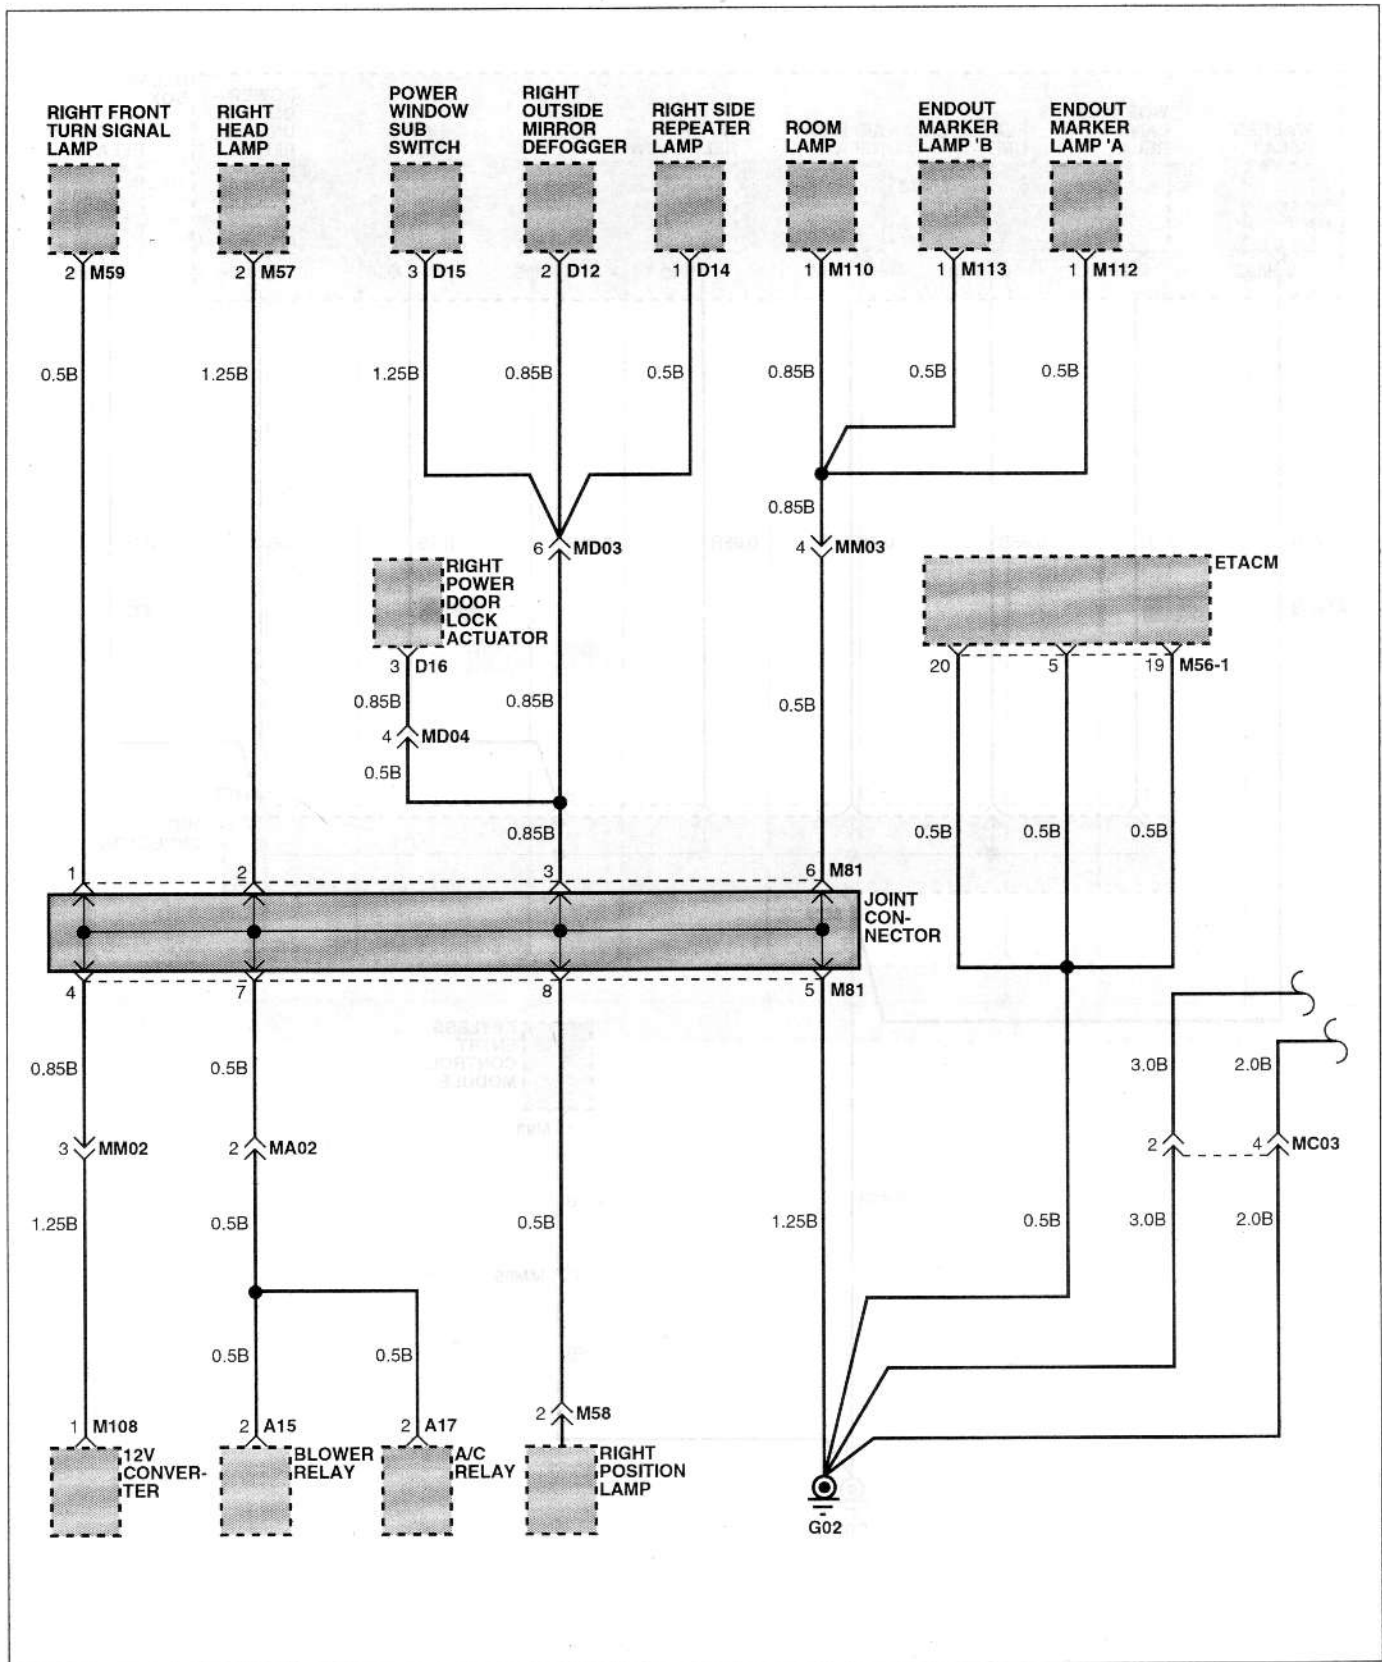

E2MC004G


GROUND DISTRIBUTION (8)

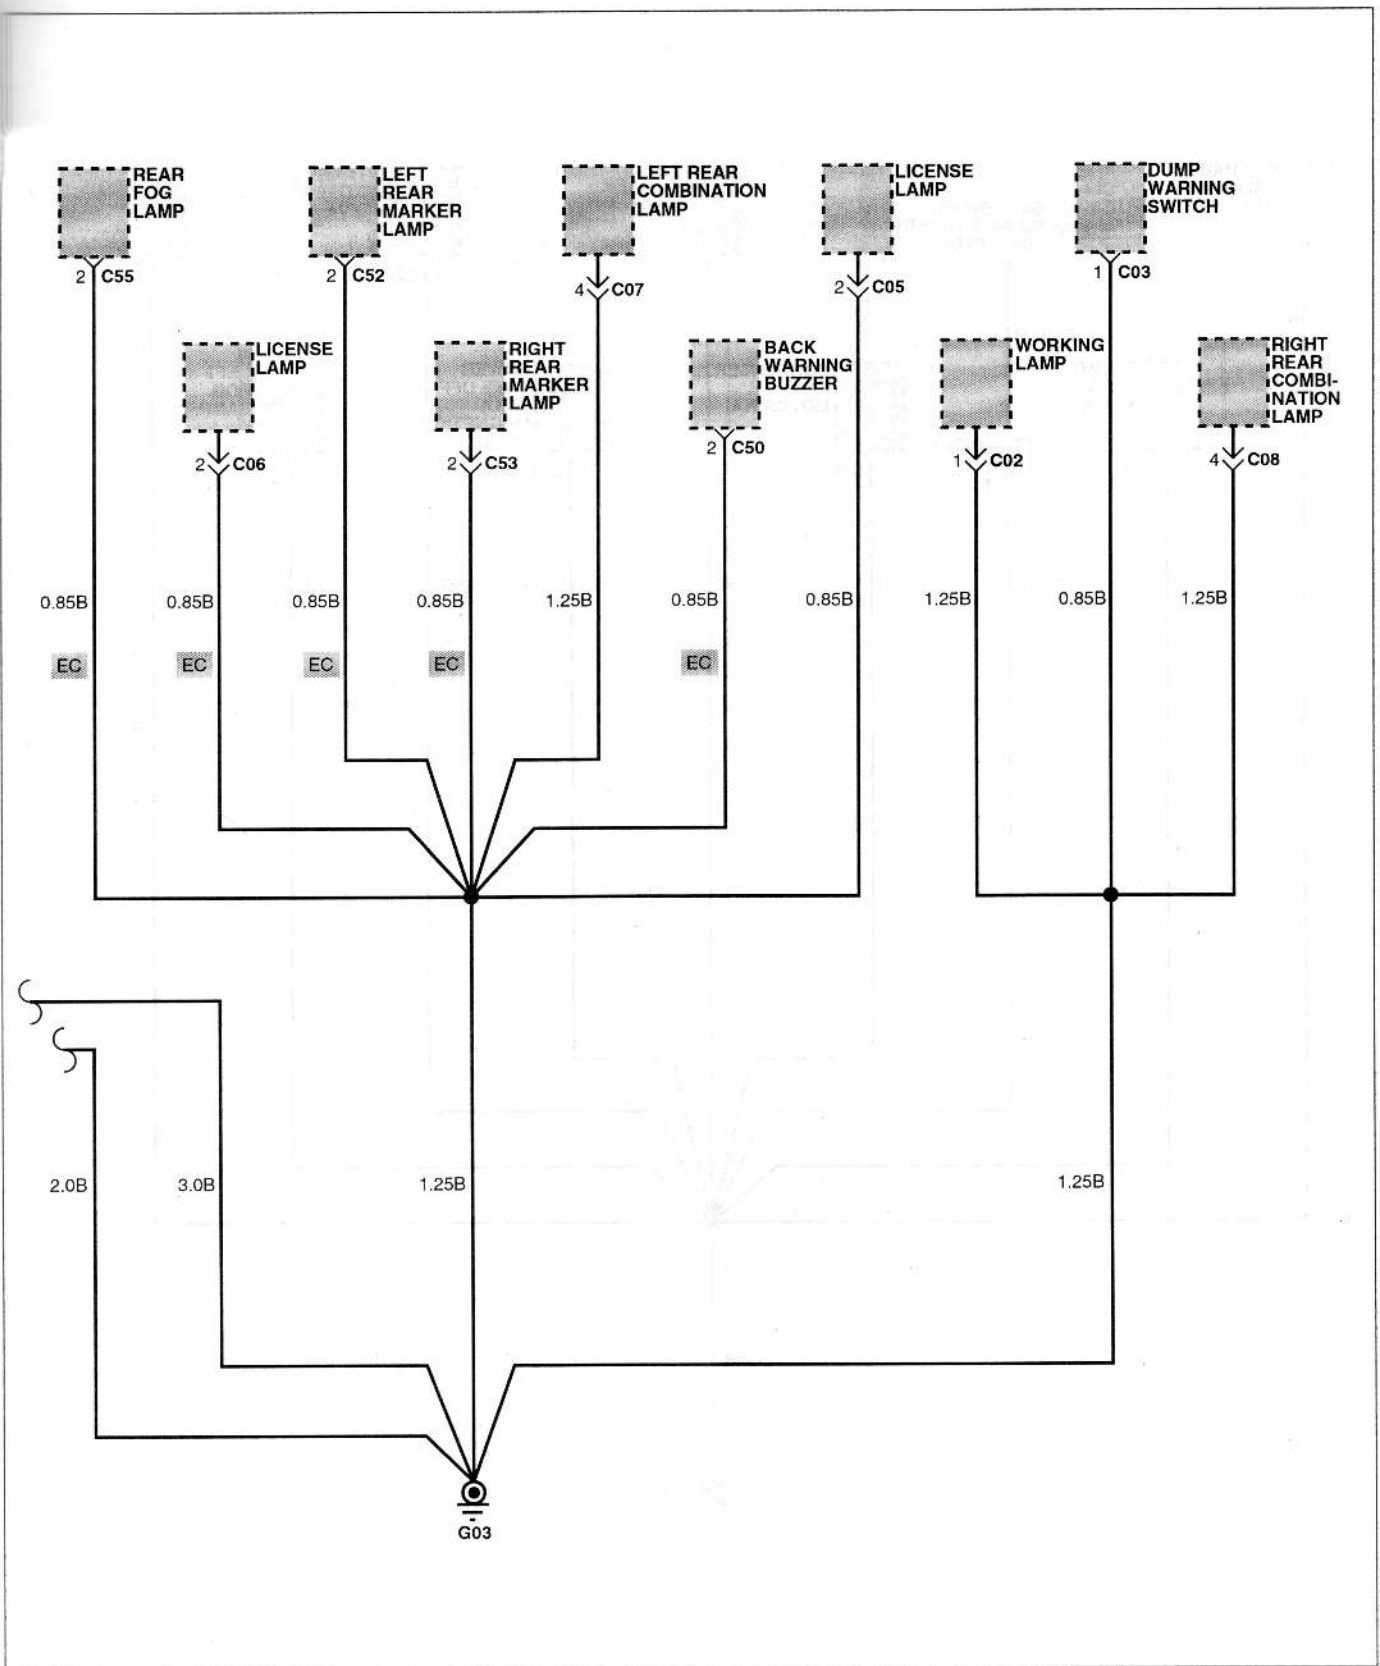

C004G


E2MC004H

GROUND DISTRIBUTION (9)

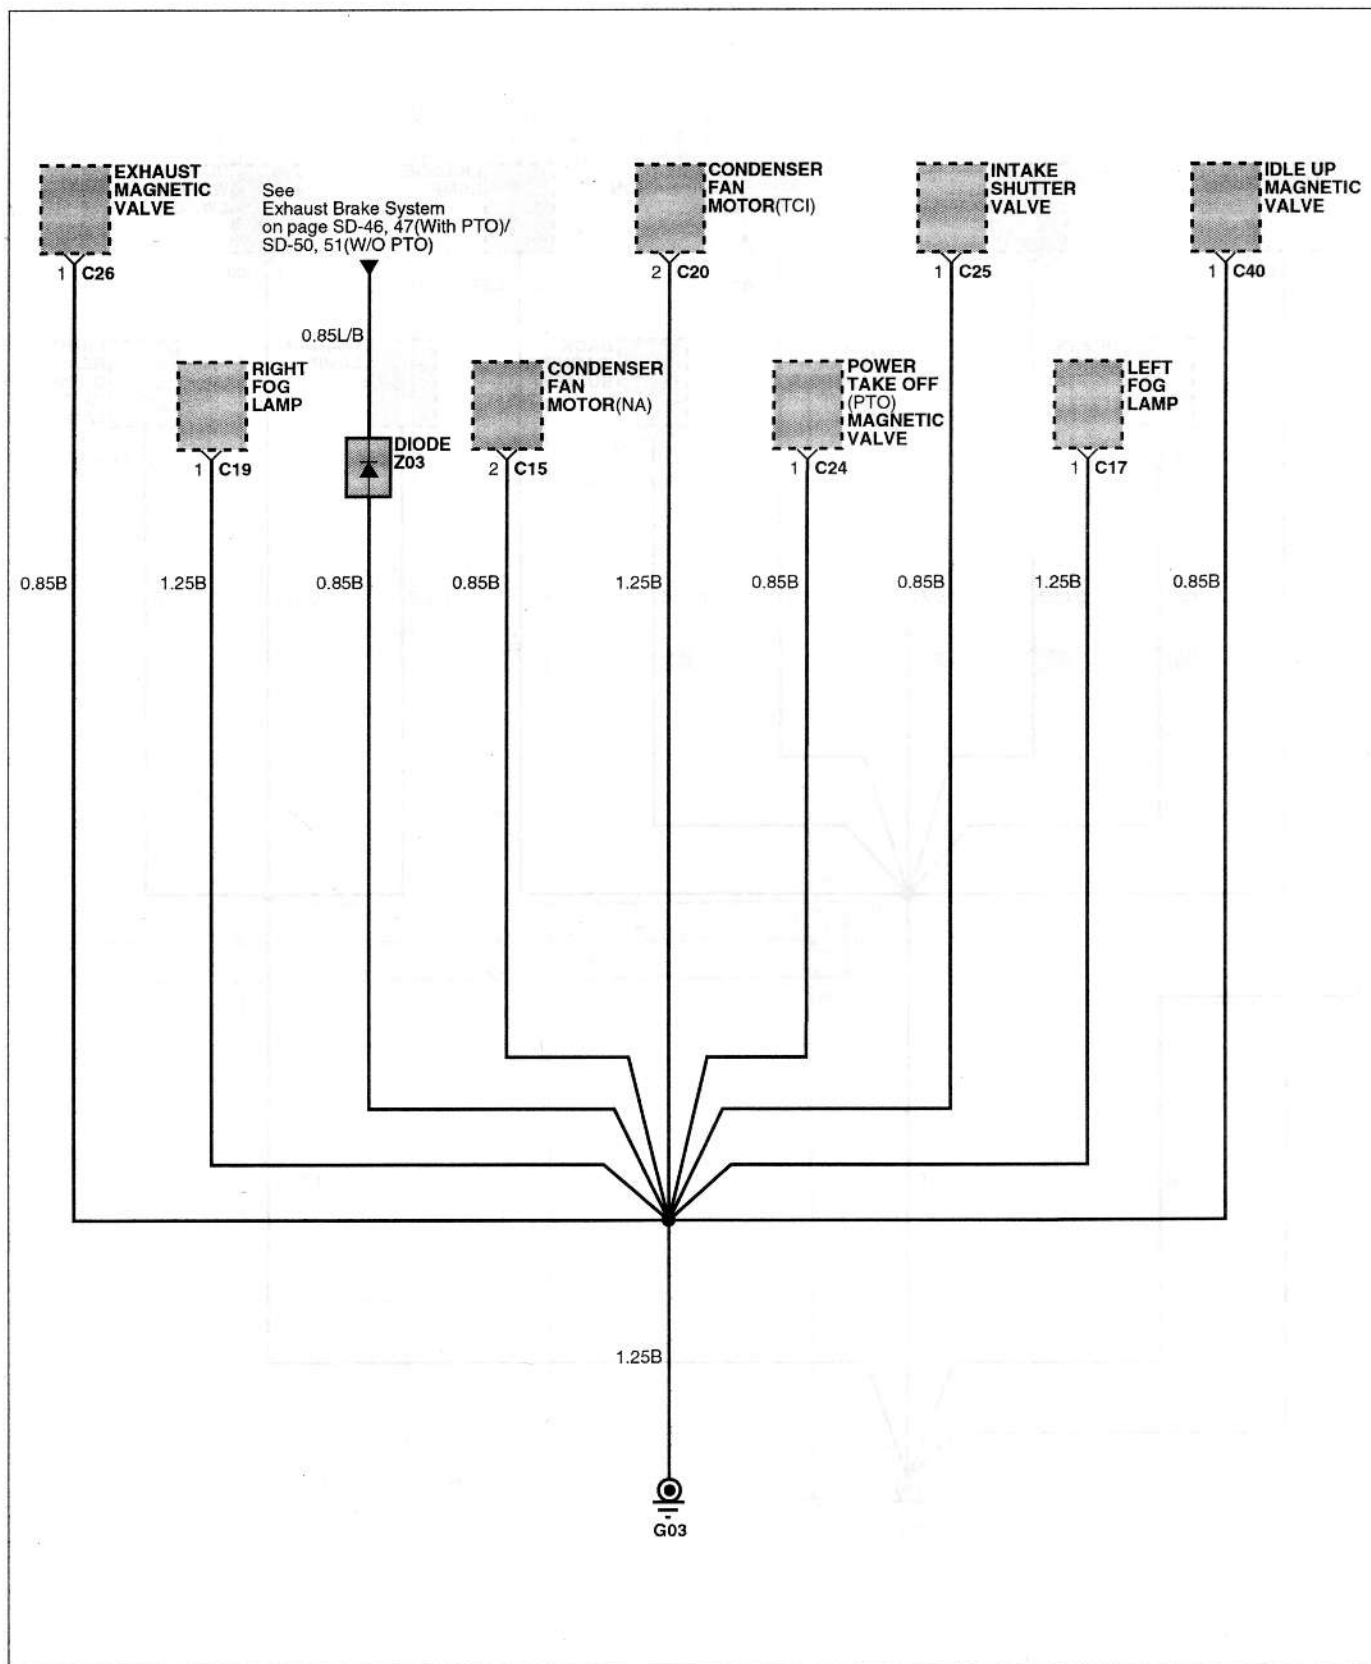

E2MC0041

GROUND DISTRIBUTION (10)

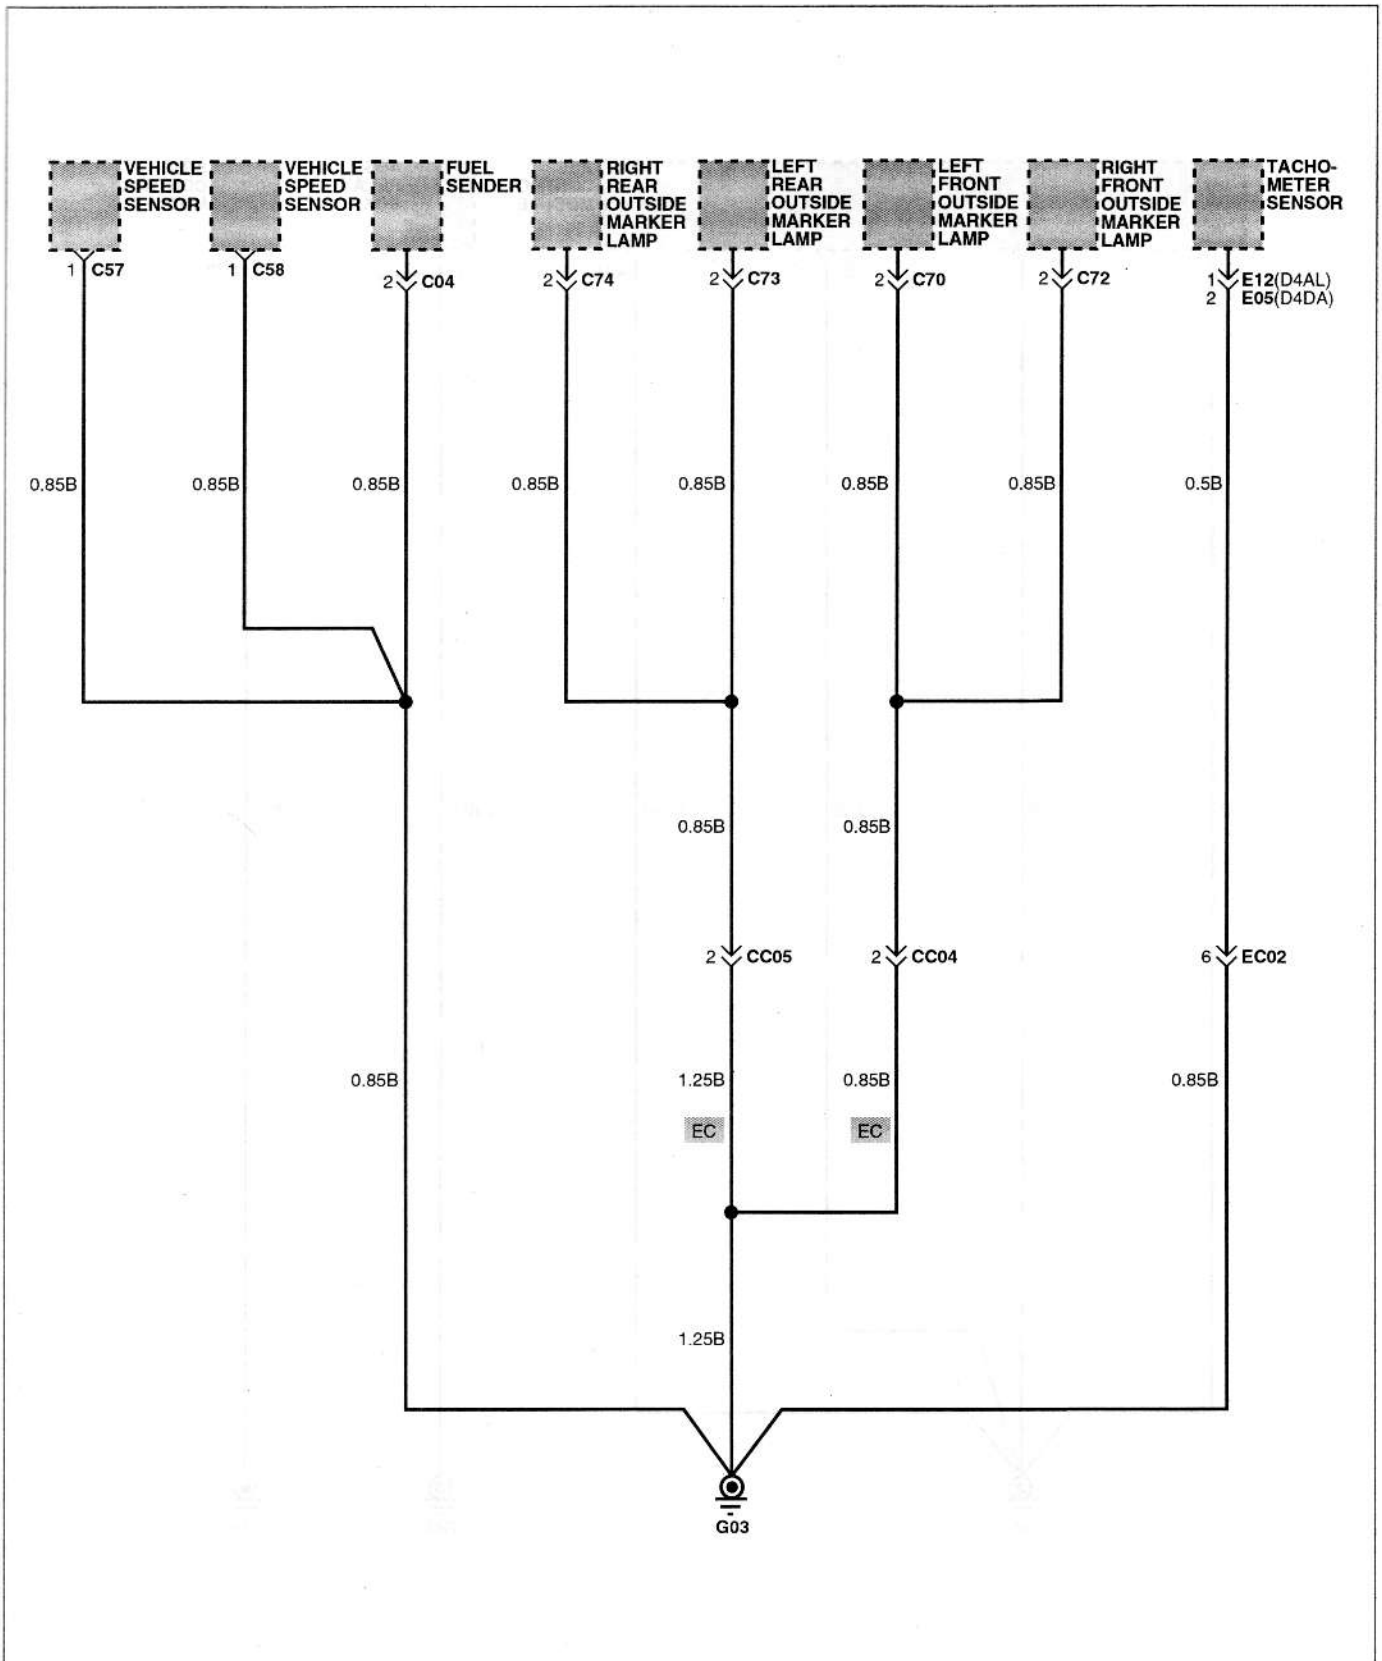


UP
NETIC
E

IC004I

E2MC004J

GROUND DISTRIBUTION (11)

GROUND DISTRIBUTION (10)

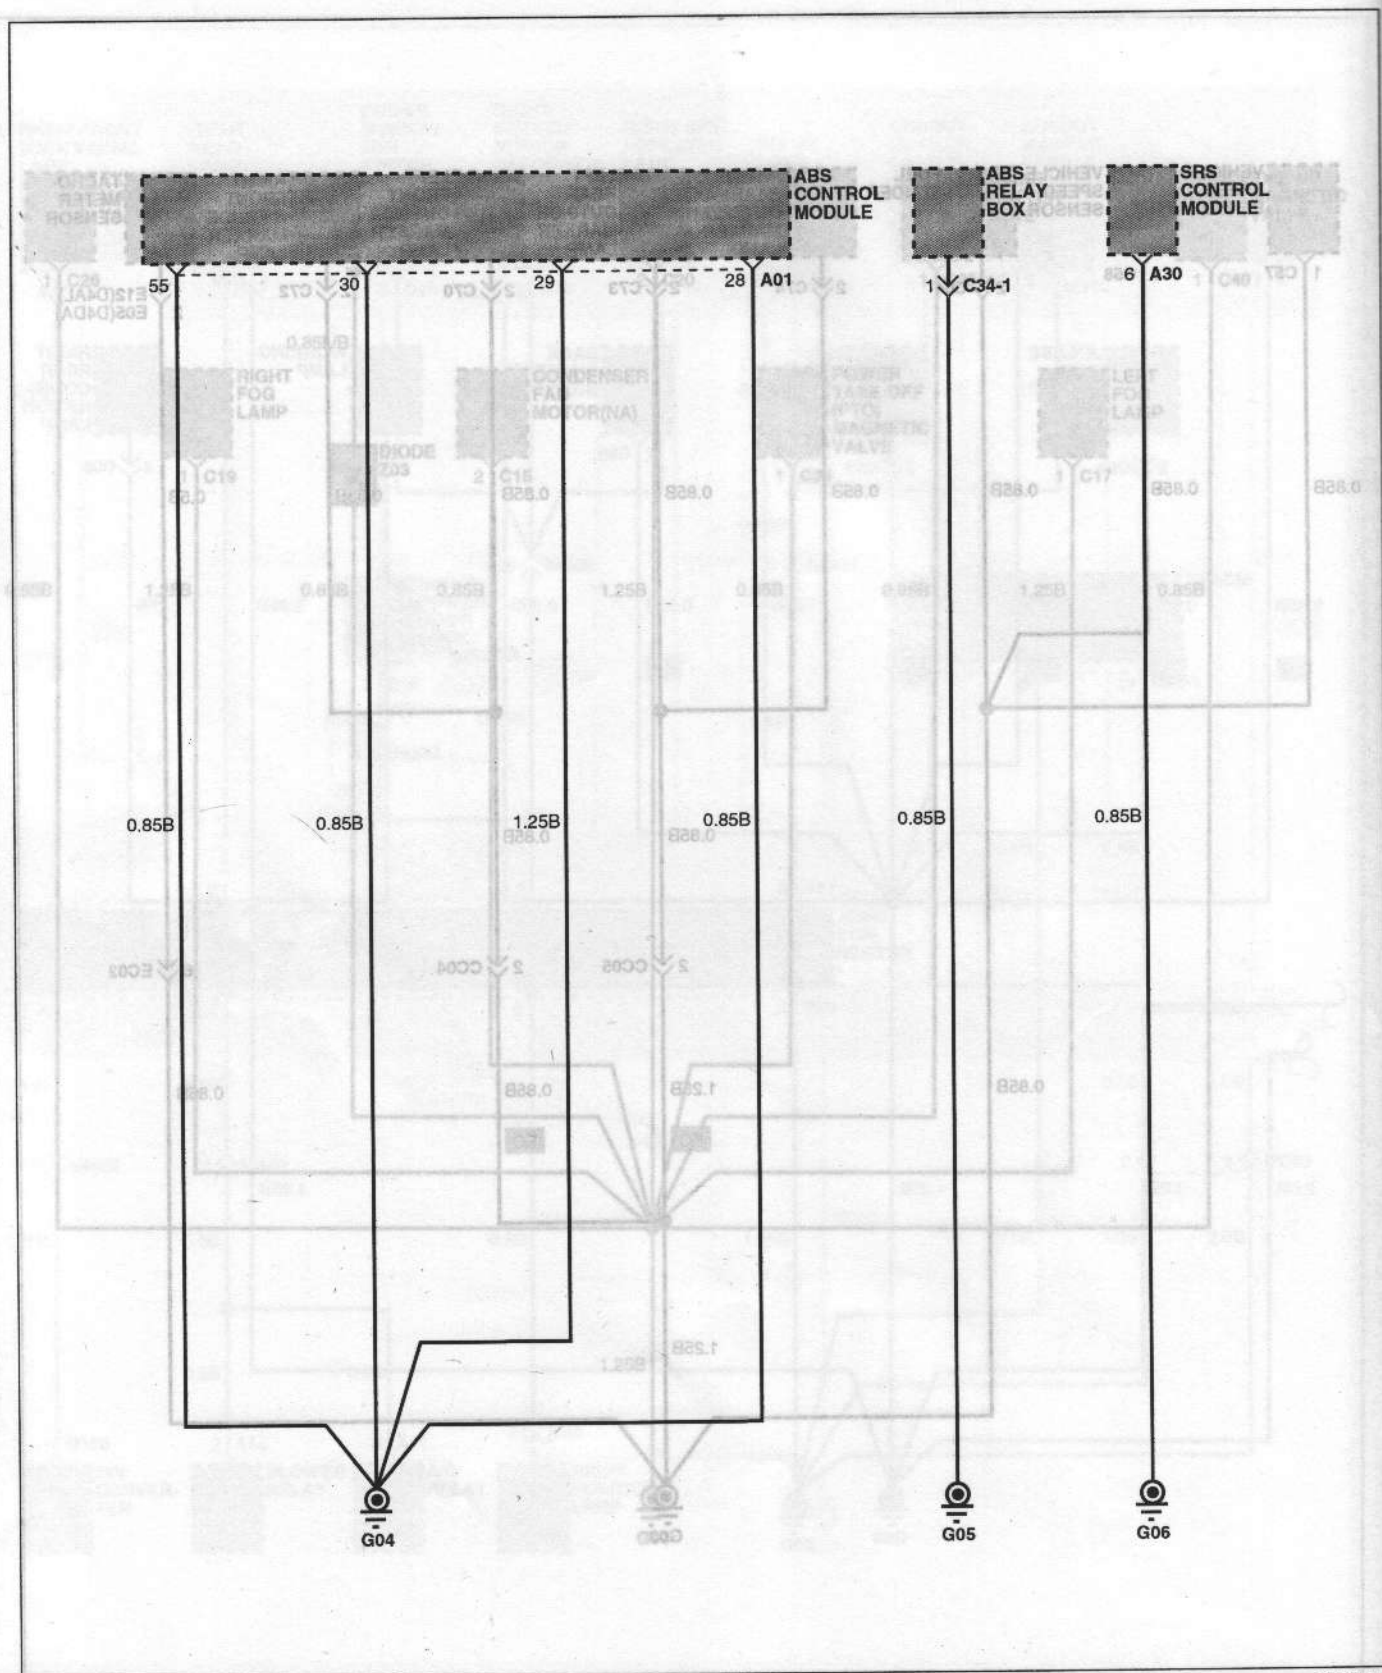


E2MC004K

MEMO ON LOCATION INDEX

DATA LINK DETAILS

DATA LINK DETAILS (1)

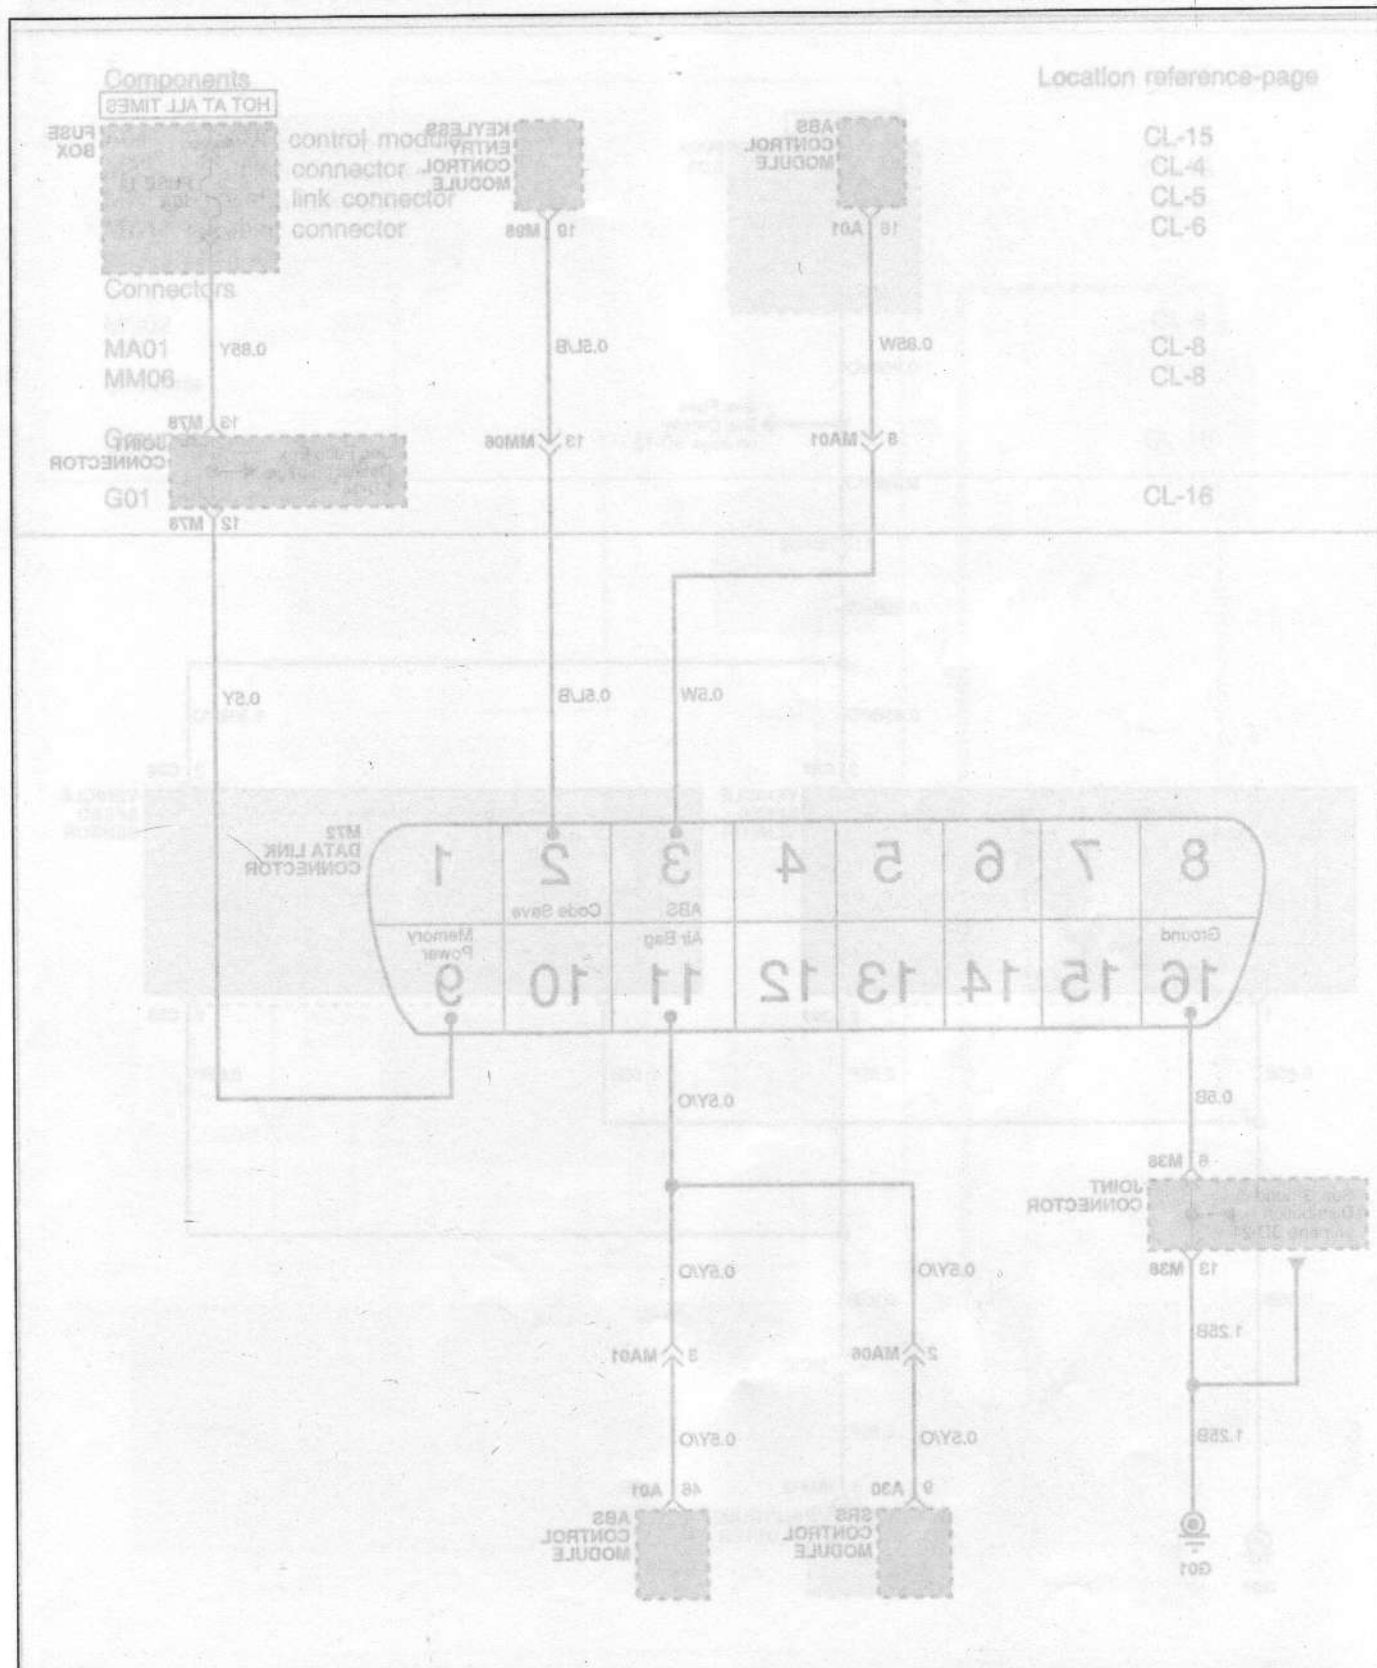


C004K

BMD002A

VEHICLE SPEED SENSOR


E2MC0060

VEHICLE SPEED SENSOR (1)

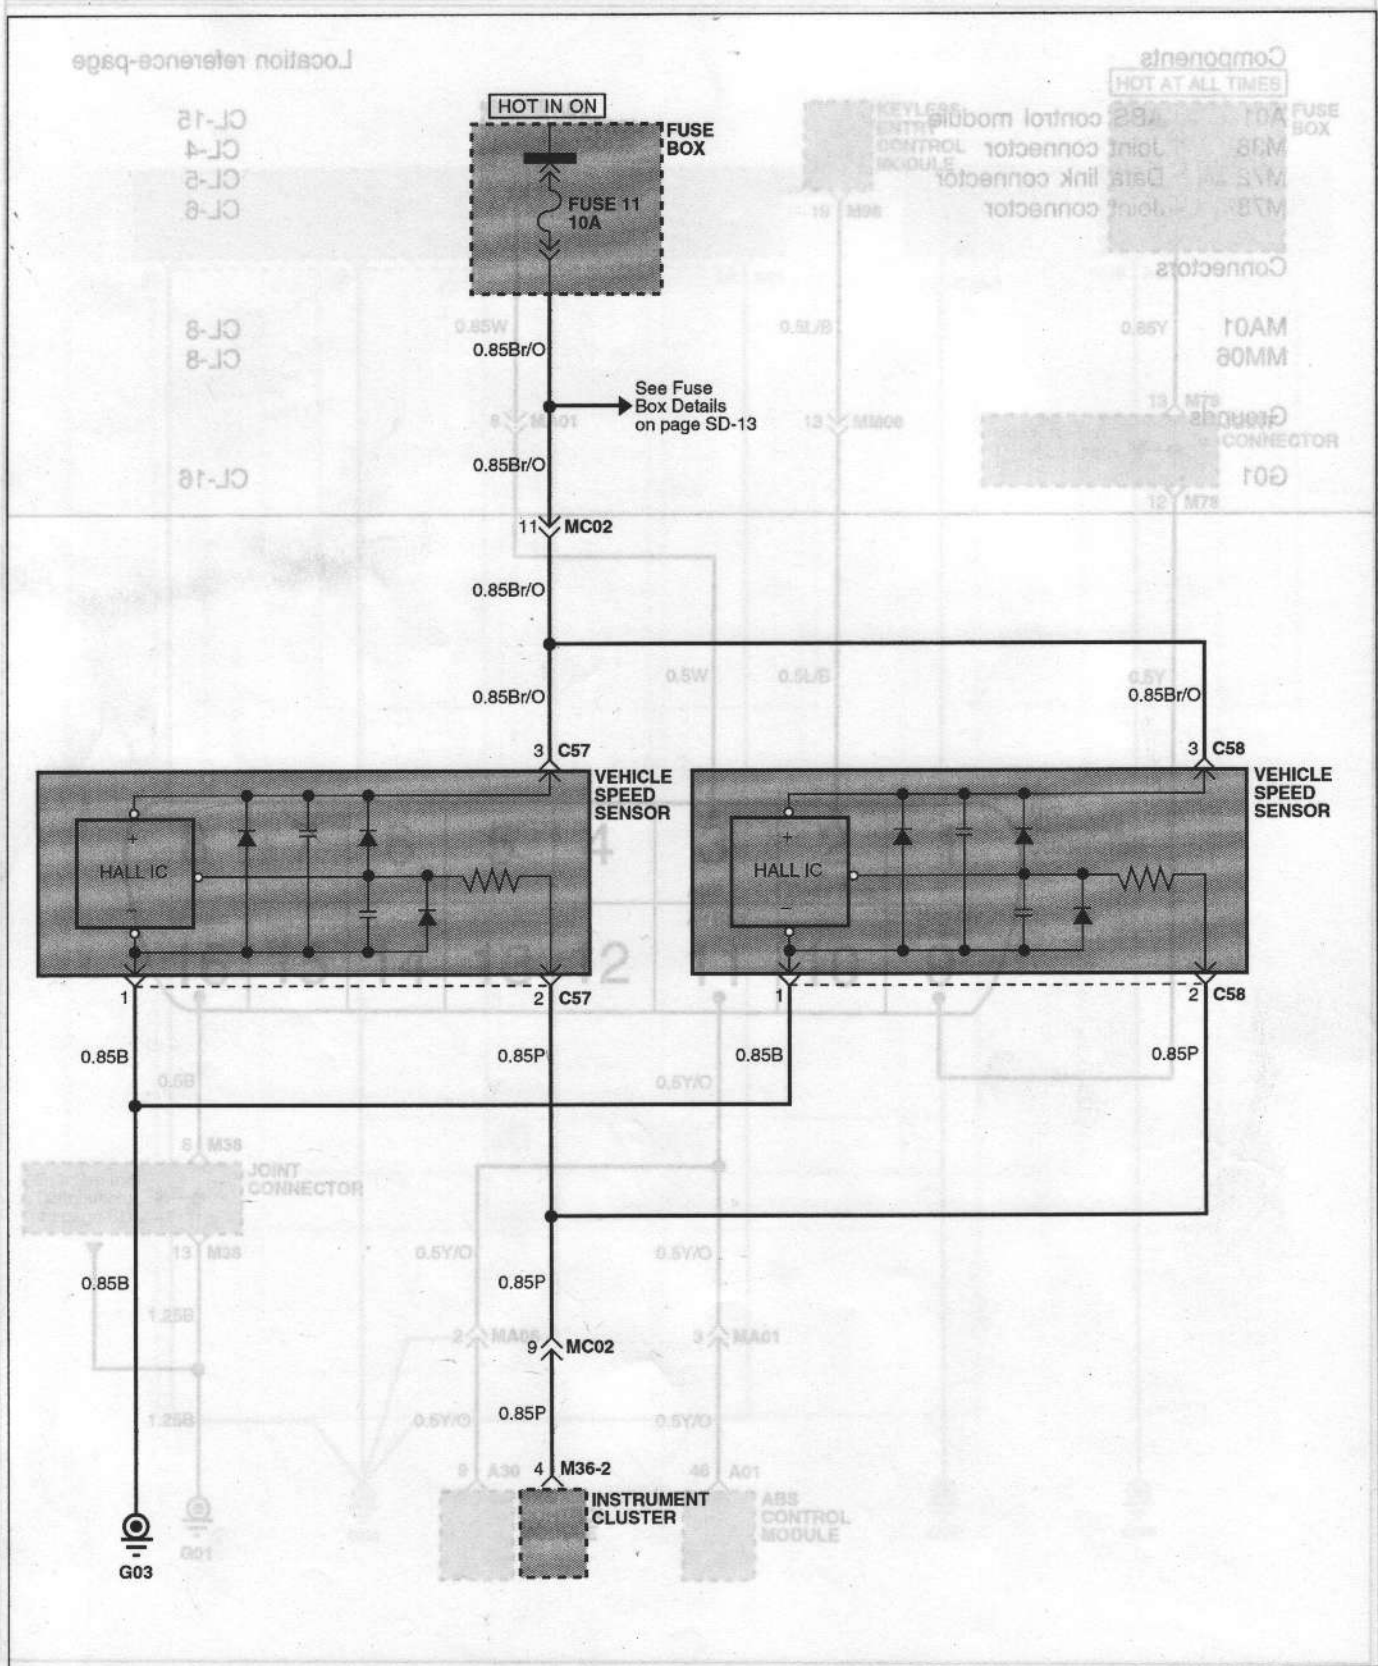

E2MC006A


COMPONENT LOCATION INDEX

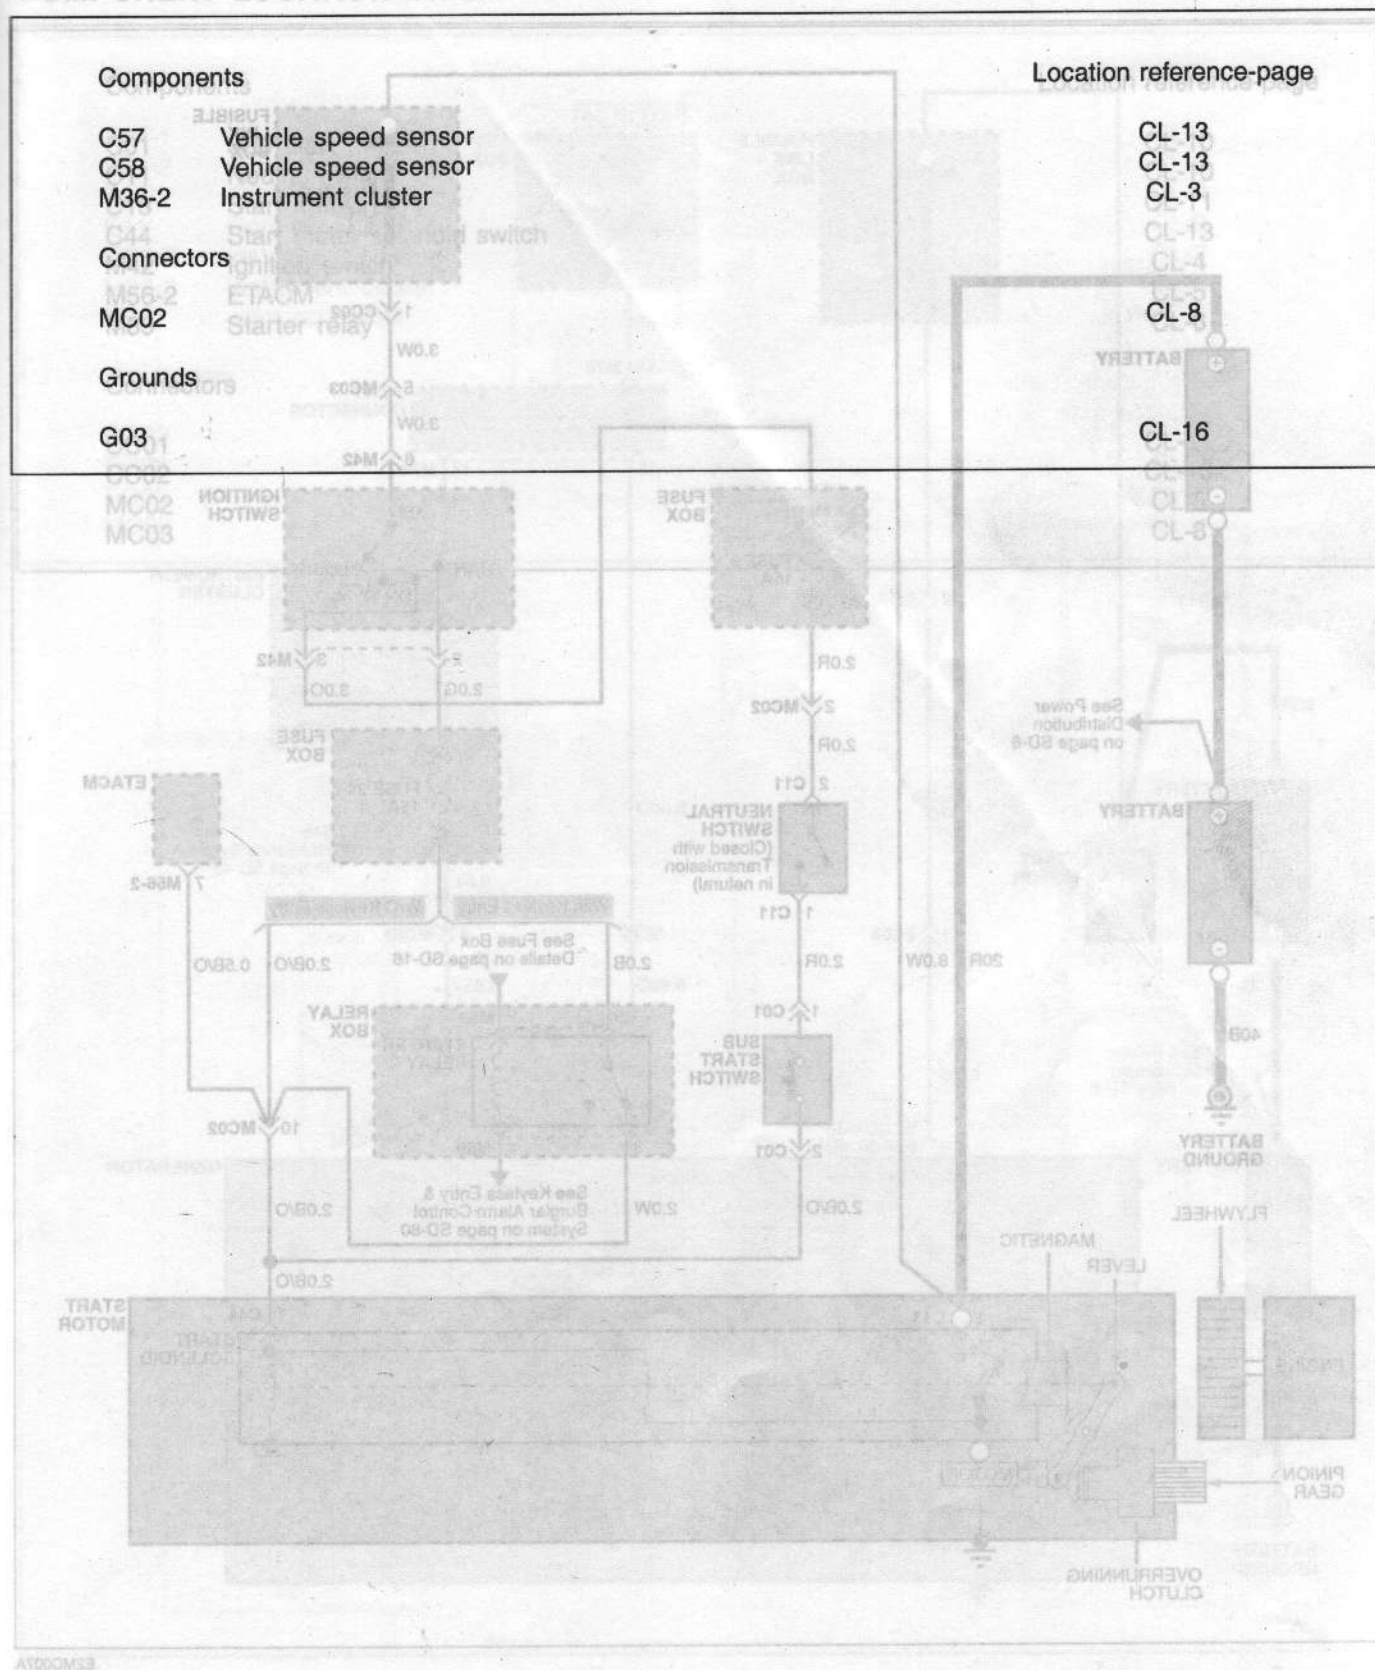

STARTING SYSTEM

E2MC0070

STARTING SYSTEM (1)

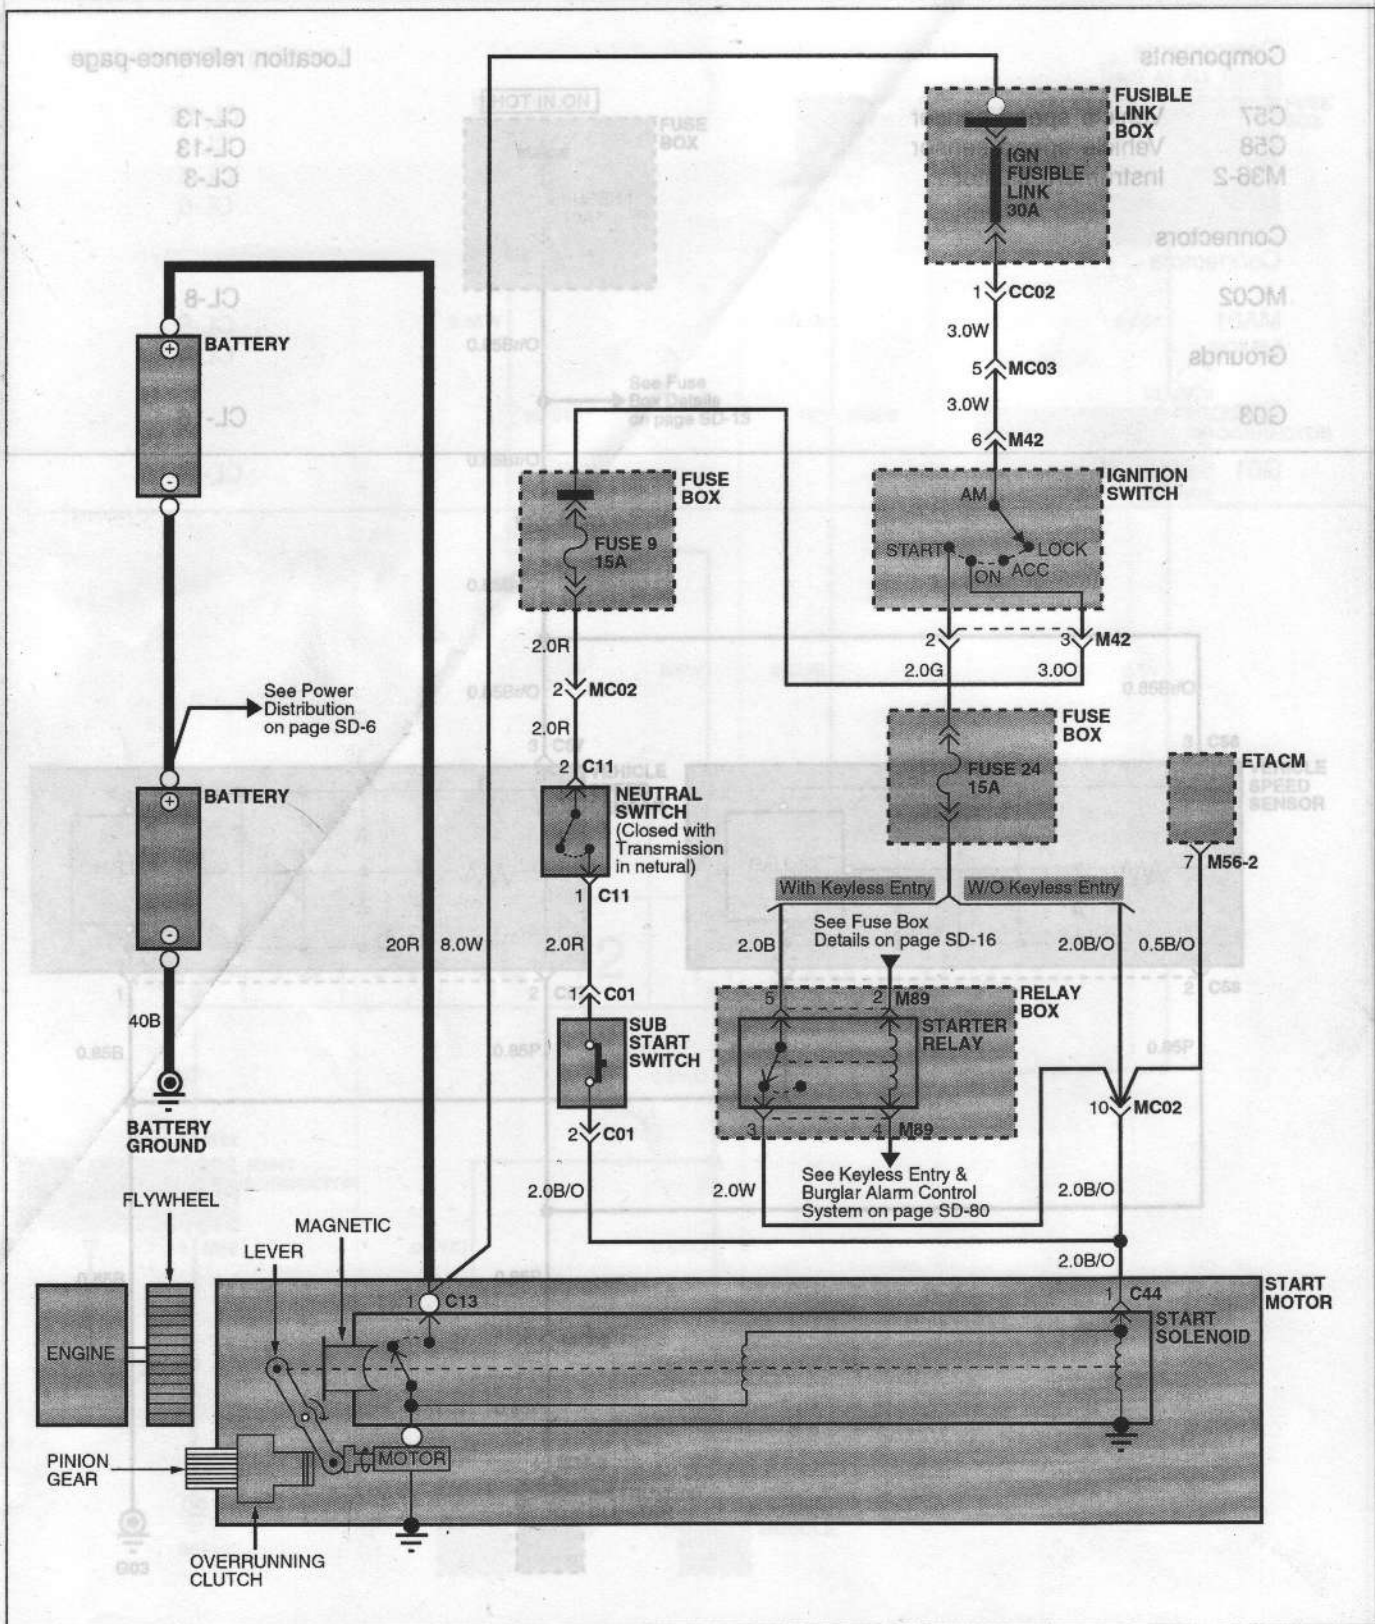

E2MC007A

COMPONENT LOCATION INDEX

Components		Location reference-page
C01	Sub start switch	CL-10
C11	Neutral switch	CL-10
C13	Start motor (B+)	CL-11
C44	Start motor solenoid switch	CL-13
M42	Ignition switch	CL-4
M56-2	ETACM	CL-5
M89	Starter relay	CL-6
Connectors		
CC01		CL-13
CC02		CL-13
MC02		CL-8
MC03		CL-8

E2MC0080

COMPONENT LOCATION INDEX



COMPONENT LOCATION INDEX


Components		Location reference-page
E04-1	Generator (D4DA)	CL-9
E04-2	Generator (D4DA)	CL-9
E10	Generator (D4AL)	CL-9
E11	Generator (D4AL)	CL-9
M36-2	Instrument cluster	CL-3
M36-3	Instrument cluster	CL-3
M78	Joint connector	CL-6
Connectors		
CC02		CL-13
EC02		CL-9
EC03		CL-9
MC02		CL-8

PREHEATING SYSTEM


E2MC0100

PREHEATING SYSTEM (1)

COMPONENT LOCATION INDEX

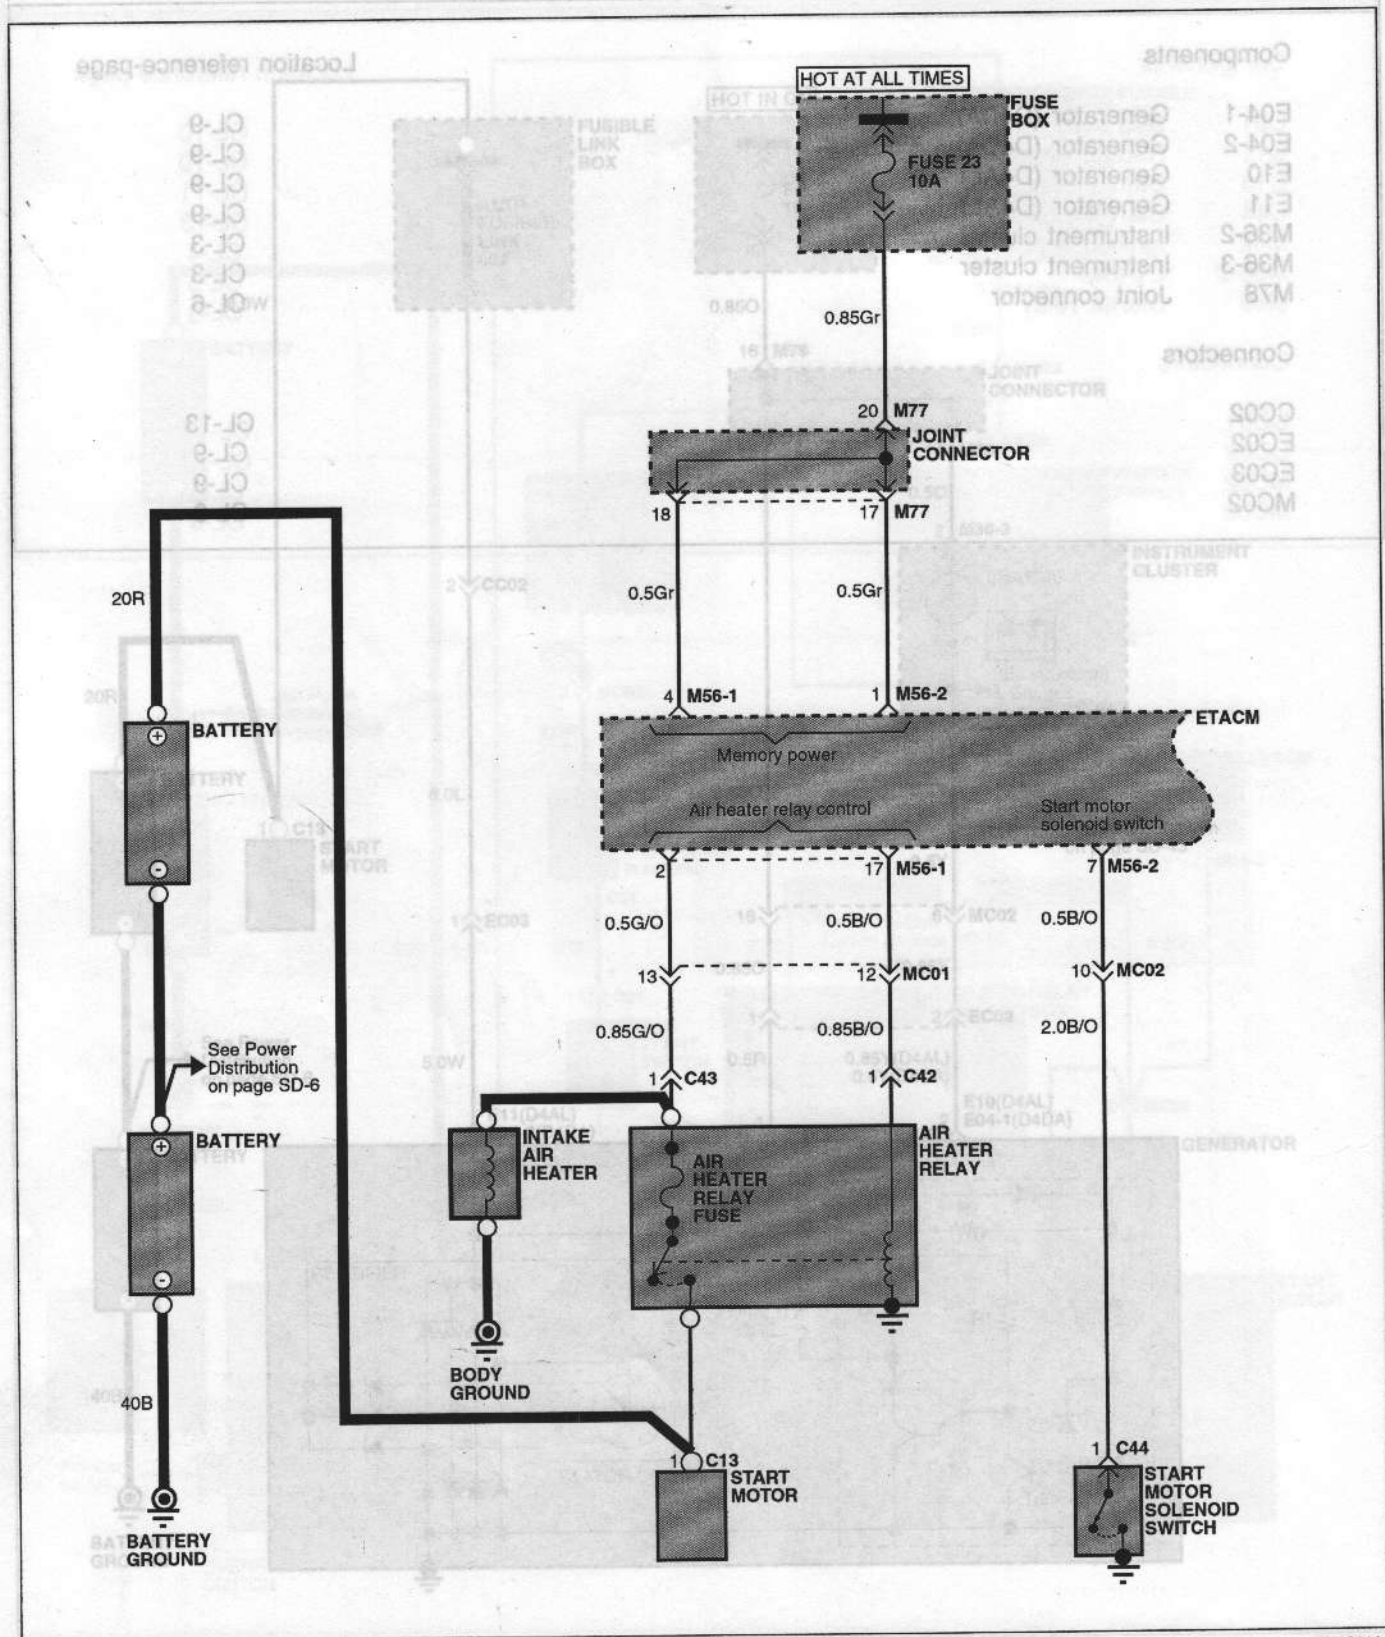

PREHEATING SYSTEM (2)

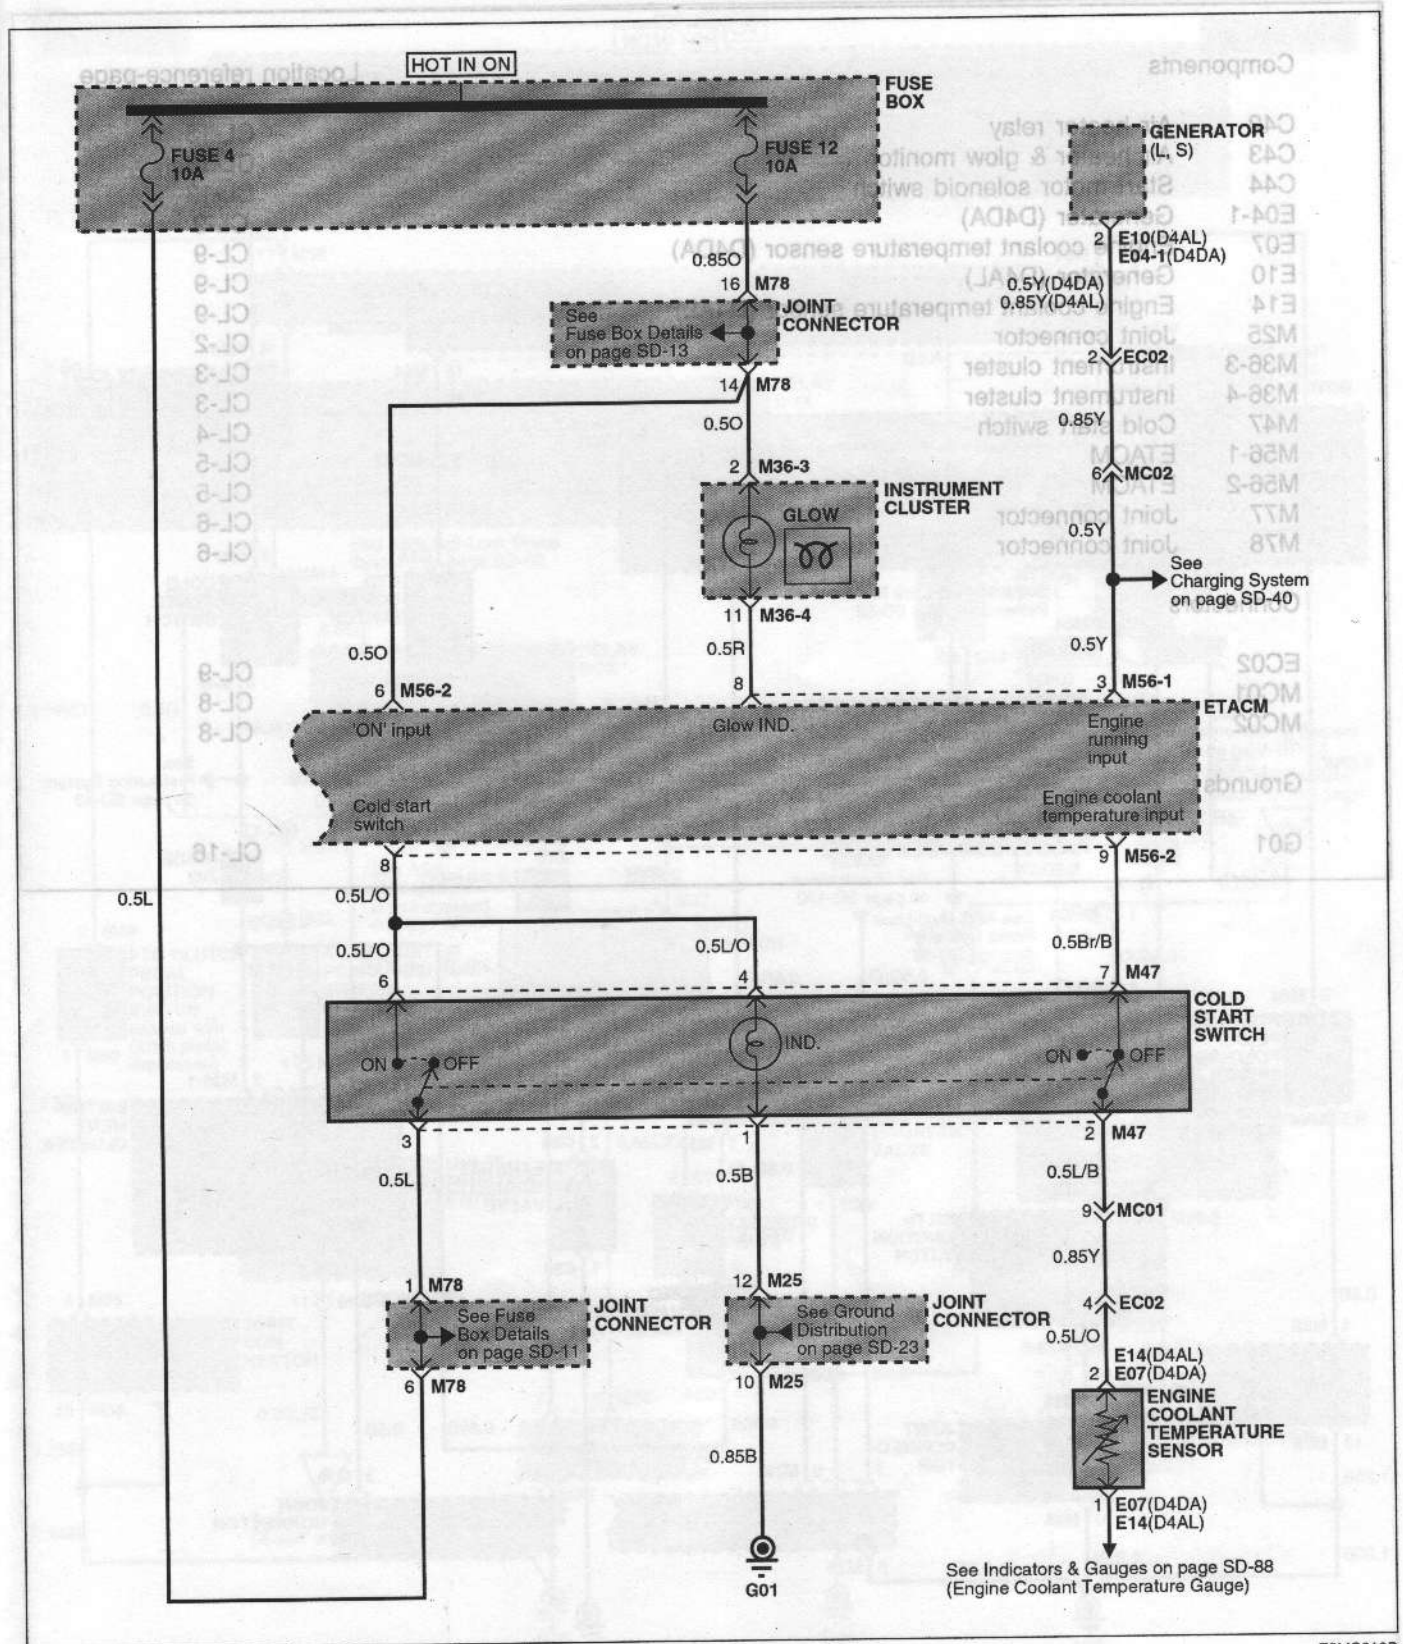


E2MC010B

COMPONENT LOCATION INDEX

Components		Location reference-page
C42	Air heater relay	CL-13
C43	Air heater & glow monitor	CL-13
C44	Start motor solenoid switch	CL-13
E04-1	Generator (D4DA)	CL-9
E07	Engine coolant temperature sensor (D4DA)	CL-9
E10	Generator (D4AL)	CL-9
E14	Engine coolant temperature sensor (D4AL)	CL-9
M25	Joint connector	CL-2
M36-3	Instrument cluster	CL-3
M36-4	Instrument cluster	CL-3
M47	Cold start switch	CL-4
M56-1	ETACM	CL-5
M56-2	ETACM	CL-5
M77	Joint connector	CL-6
M78	Joint connector	CL-6
Connectors		
EC02		CL-9
MC01		CL-8
MC02		CL-8
Grounds		
G01		CL-16


MEMO

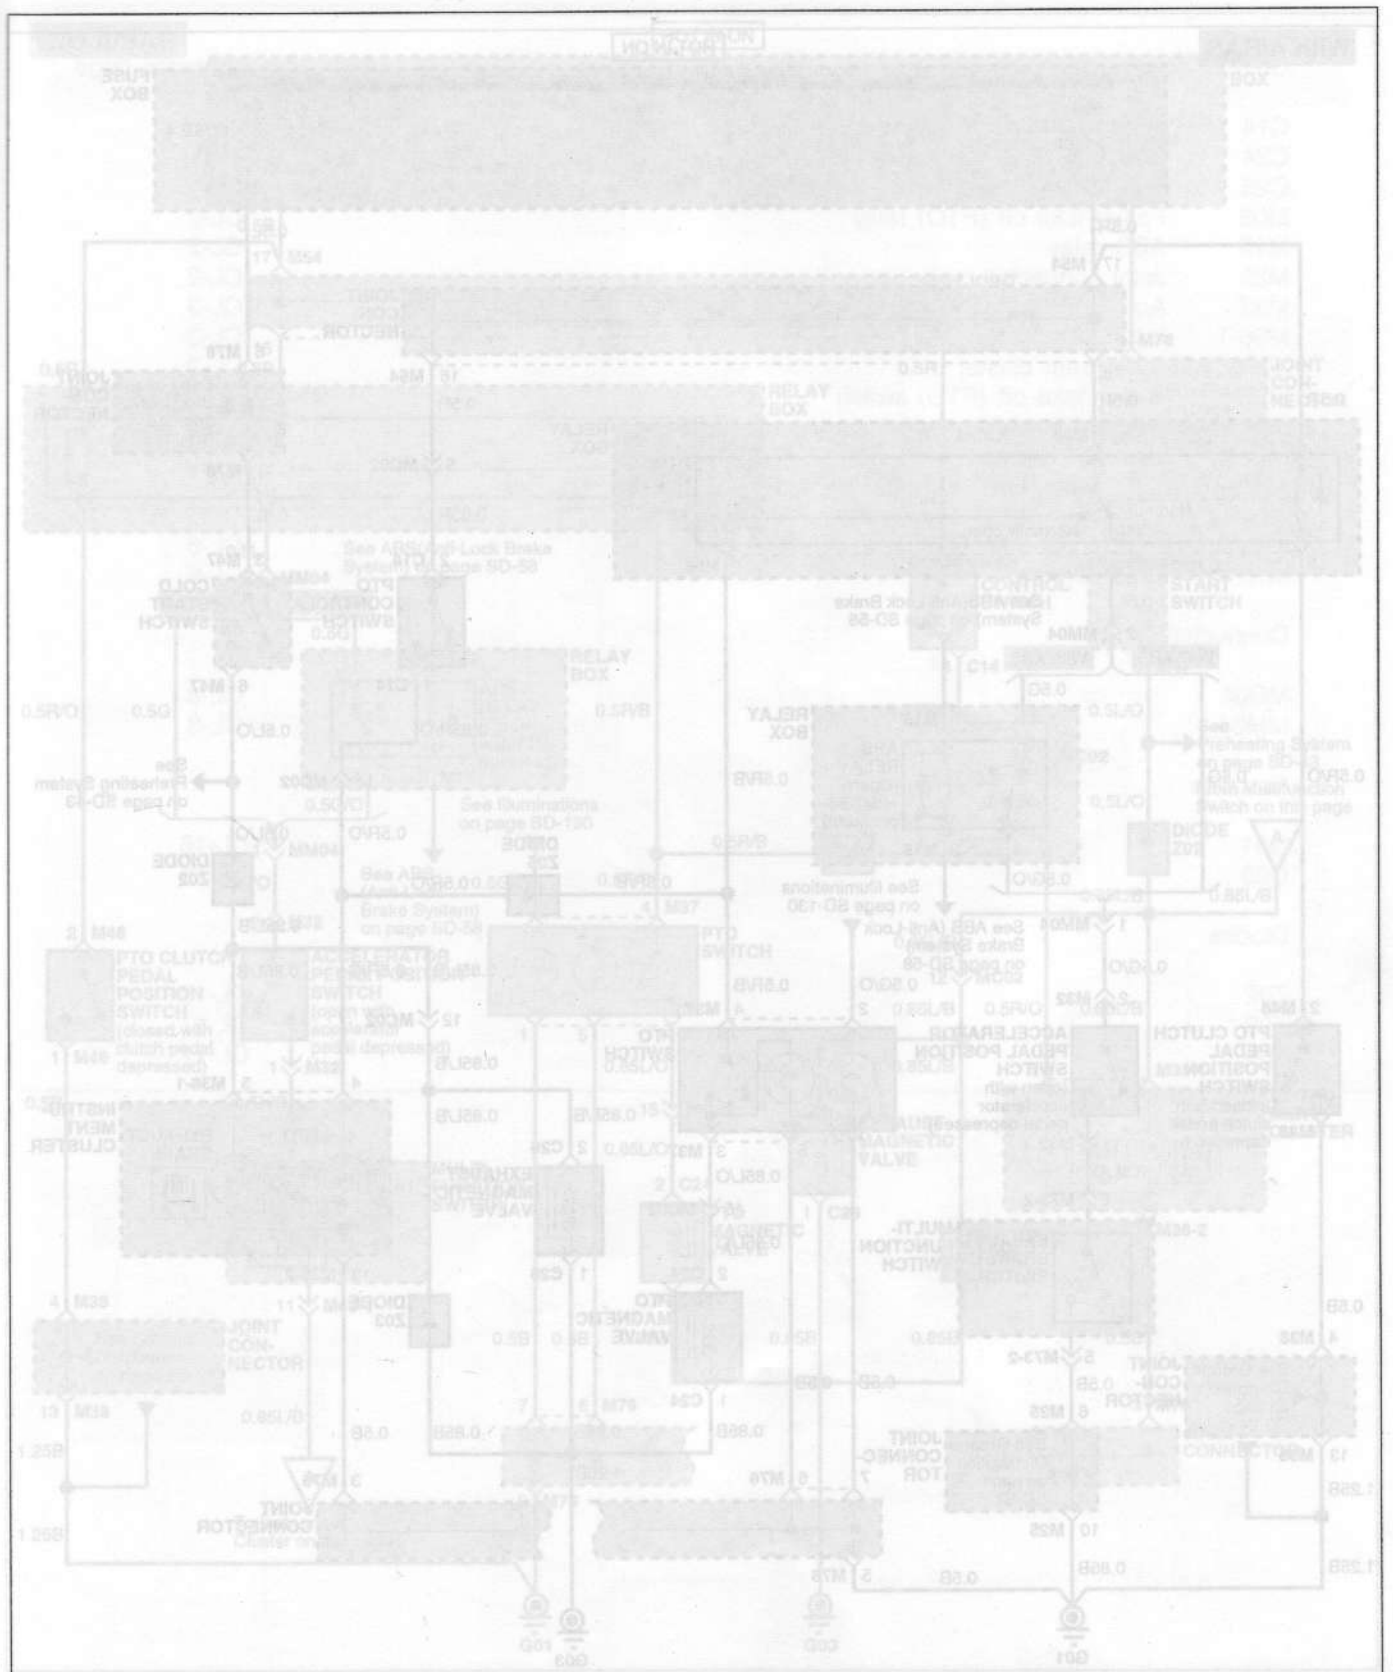

EXHAUST BRAKE AND POWER TAKE OFF (PTO) SYSTEM

E2MC0110

EXHAUST BRAKE AND POWER TAKE OFF (PTO) SYSTEM (1)

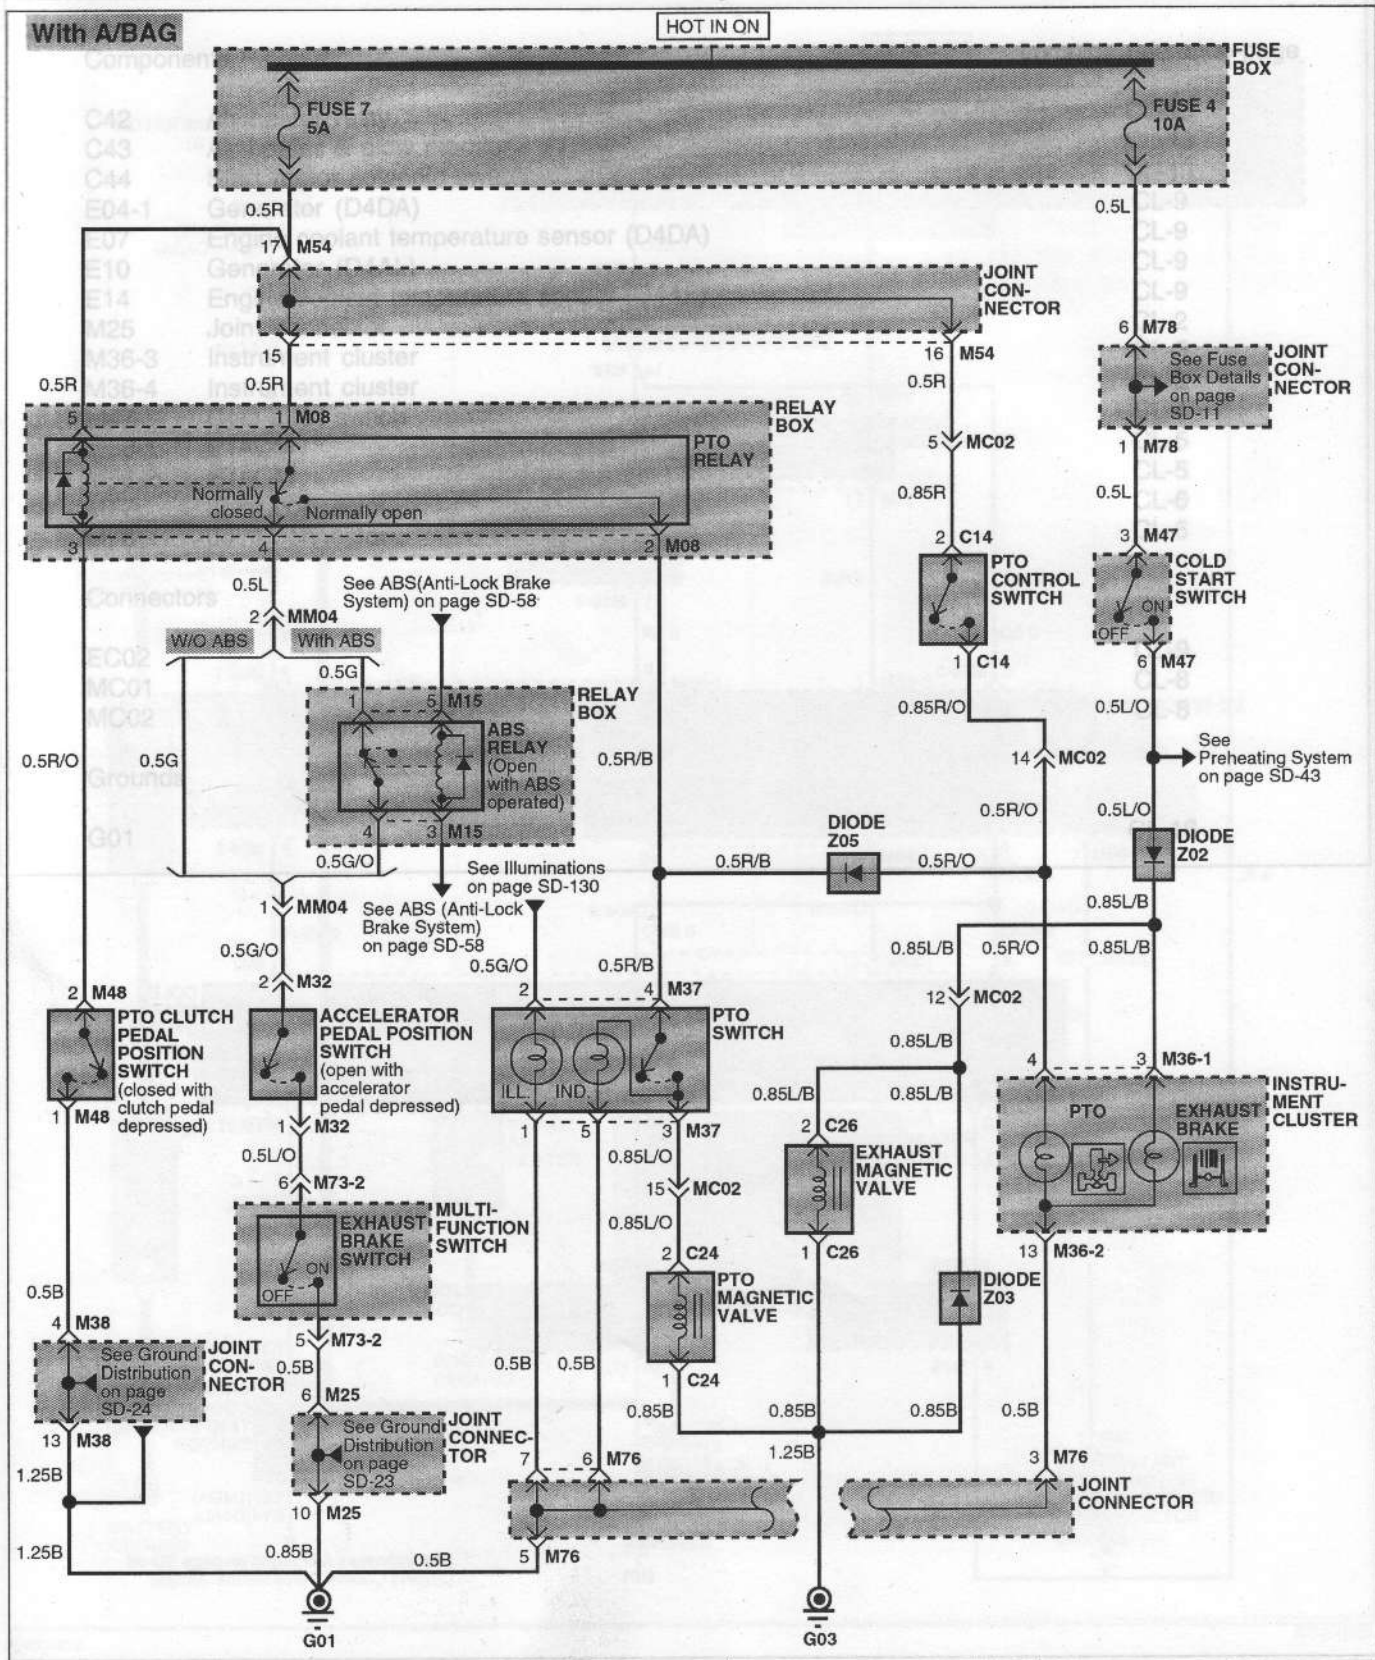

E2MC011A

COMPONENT LOCATION IN




E2MC011B

COMPONENT LOCATION INDEX

Components		Location reference-page
C14	Power take off (PTO) control switch	CL-11
C24	Power take off magnetic valve	CL-12
C26	Exhaust magnetic valve	CL-12
M08	Power take off (PTO) relay	CL-2
M15	ABS relay	CL-2
M25	Joint connector	CL-2
M32	Accelerator pedal position switch	CL-3
M36-1	Instrument cluster	CL-3
M36-2	Instrument cluster	CL-3
M37	Power take off (PTO) switch	CL-3
M38	Joint connector	CL-4
M47	Cold start switch	CL-4
M48	PTO clutch pedal position switch	CL-4
M54	Joint connector	CL-5
M76	Joint connector	CL-6
M78	Joint connector	CL-6
Connectors		
MC02		CL-8
MM04		CL-8
Grounds		
G01		CL-16
G03		CL-16
Diodes		
Z02		CL-17
Z03		CL-17
Z05		CL-17

EXHAUST BRAKE SYSTEM (WITHOUT PTO) (2)

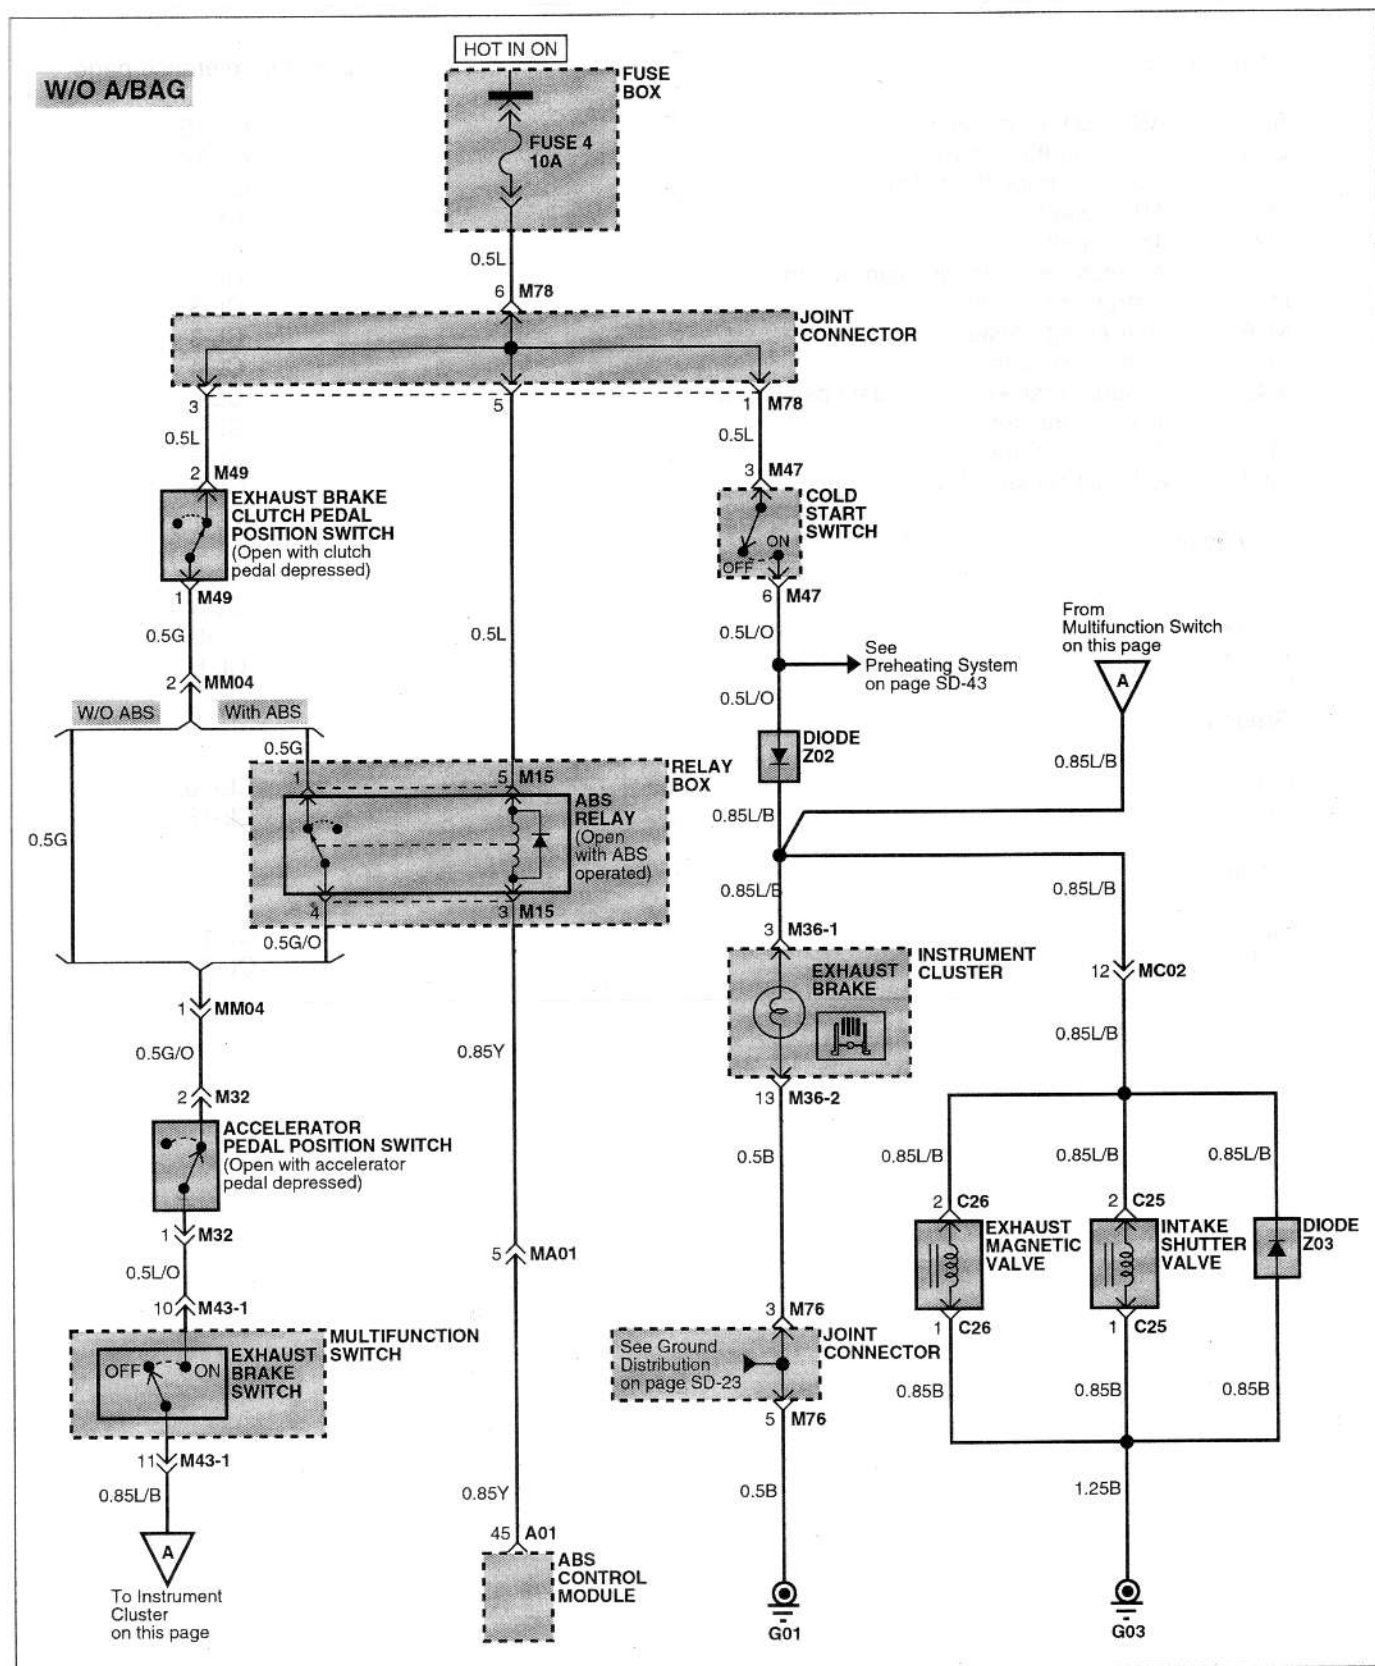

E2MC012B


COMPONENT LOCATION INDEX

Components		Location reference-page
A01	ABS control module	CL-15
C25	Intake shutter valve	CL-12
C26	Exhaust magnetic valve	CL-12
M15	ABS relay	CL-2
M25	Joint connector	CL-2
M32	Accelerator pedal position switch	CL-3
M36-1	Instrument cluster	CL-3
M36-2	Instrument cluster	CL-3
M47	Cold start switch	CL-4
M49	Exhaust brake clutch pedal position switch	CL-4
M76	Joint connector	CL-6
M78	Joint connector	CL-6
M93	Exhaust brake relay	CL-6
Connectors		
MA01		CL-8
MC02		CL-8
MM04		CL-8
Grounds		
G01		CL-16
G03		CL-16
Diodes		
Z02		CL-17
Z03		CL-17

OVERHEAT WARNING SYSTEM

E2MC0140

OVERHEAT WARNING SYSTEM (1)

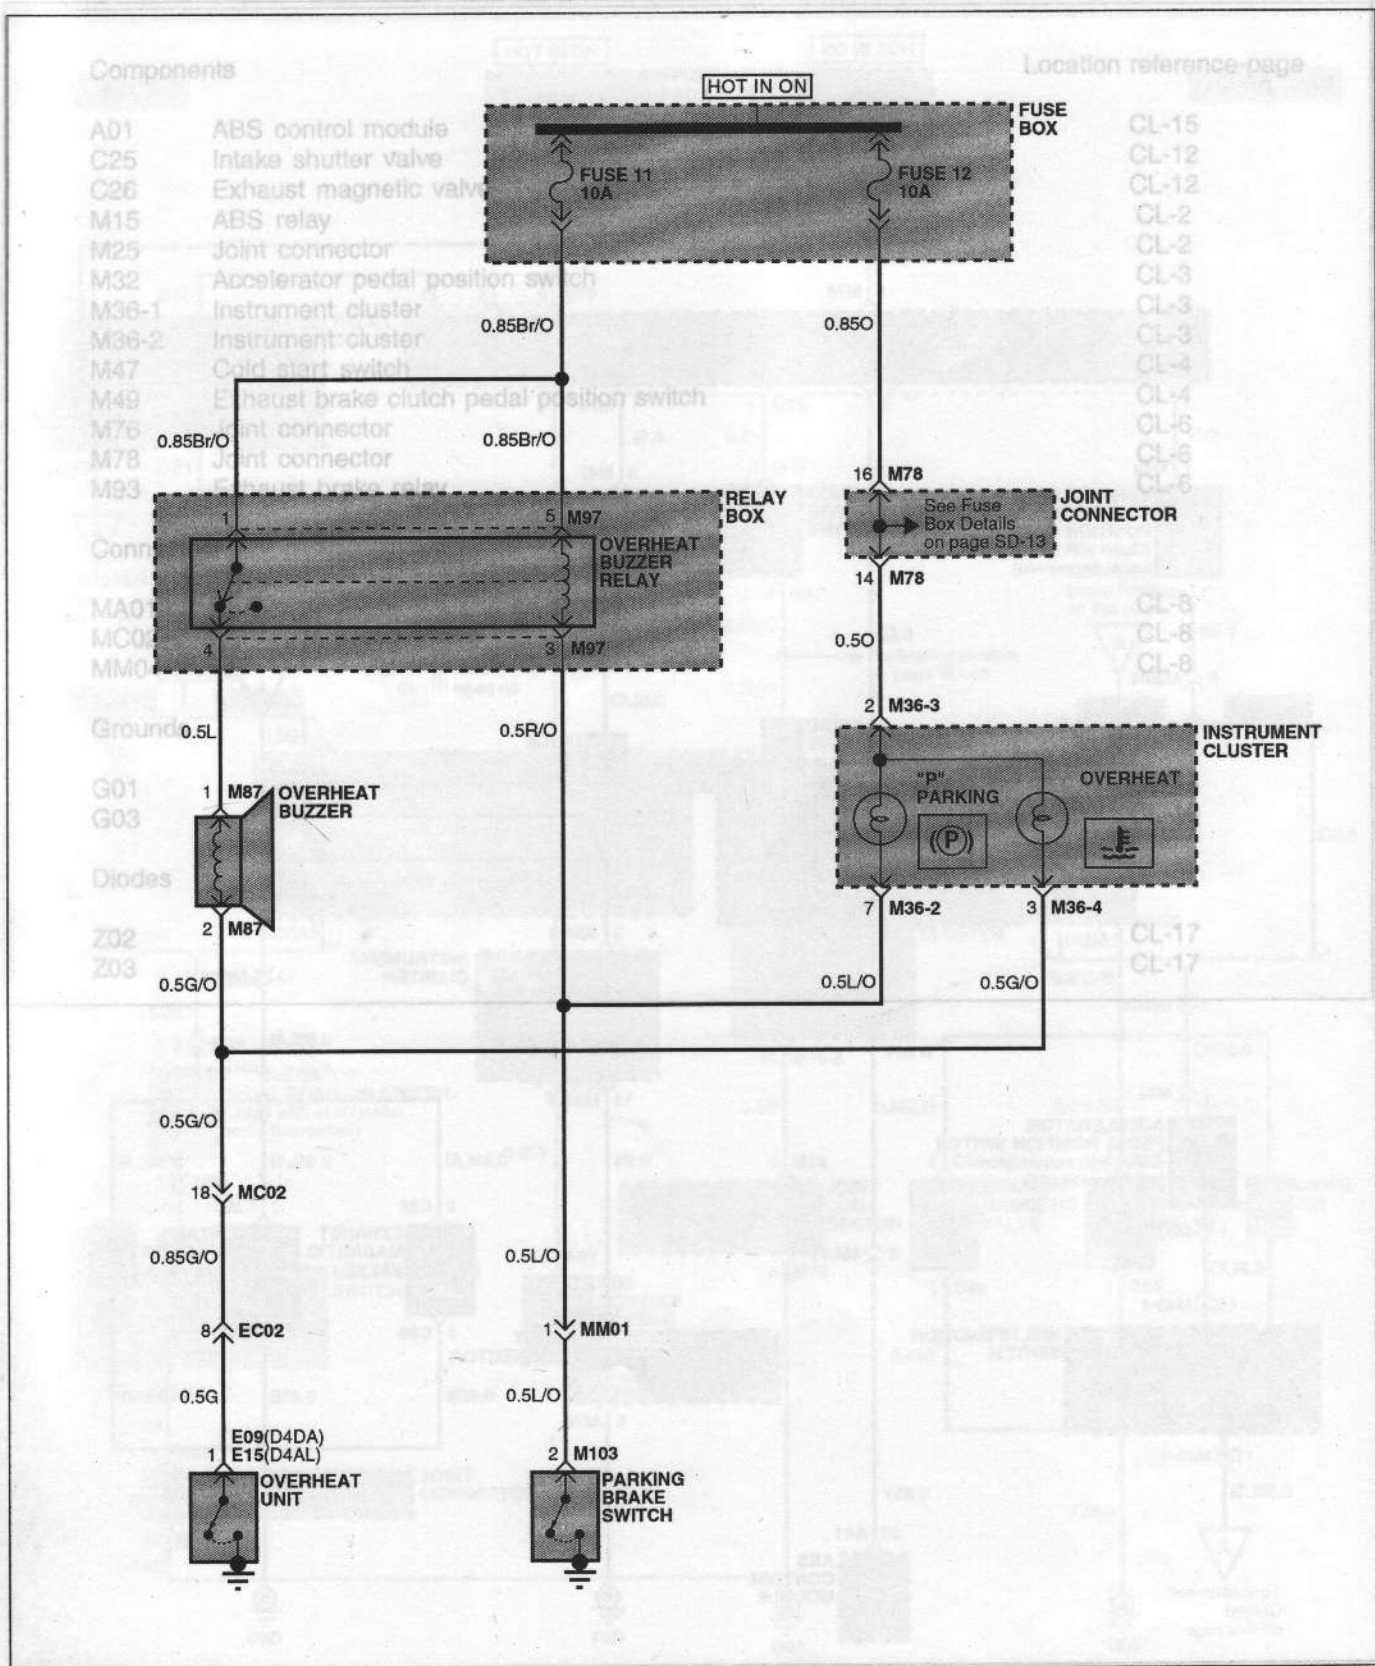

E2MC014A


COMPONENT LOCATION INDEX

Components		Location reference-page
M36-2	Instrument cluster	CL-3
M36-3	Instrument cluster	CL-3
M36-4	Instrument cluster	CL-3
M78	Joint connector	CL-6
M87	Overheat buzzer	CL-6
M97	Overheat buzzer relay	CL-6
M103	Parking brake switch	CL-7
Connectors		
EC02		CL-9
MC02		CL-8
MM01		CL-8

CAB TILTING SYSTEM


E2MC0150

CAB TILTING SYSTEM (1)

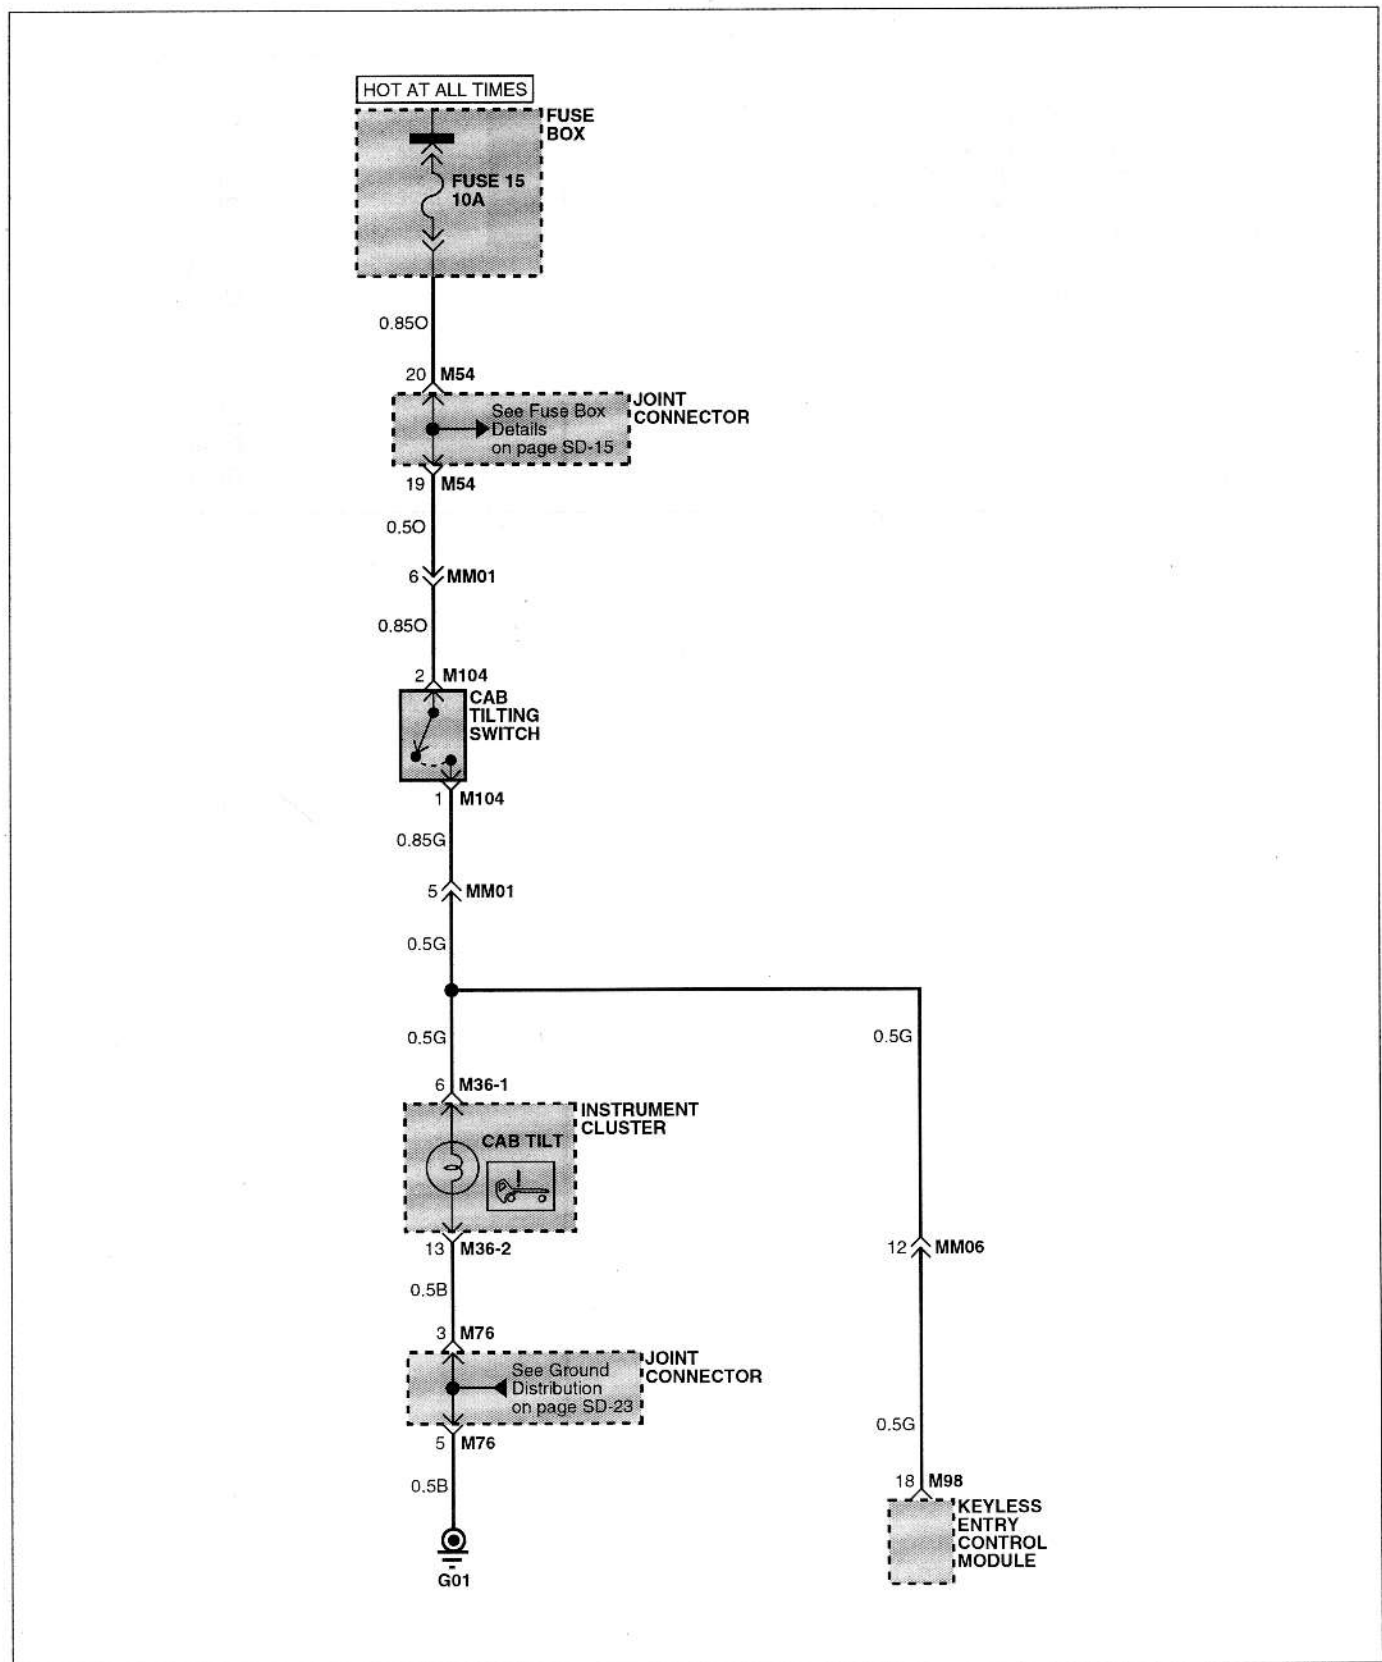

E2MC015A

COMPONENT LOCATION INDEX

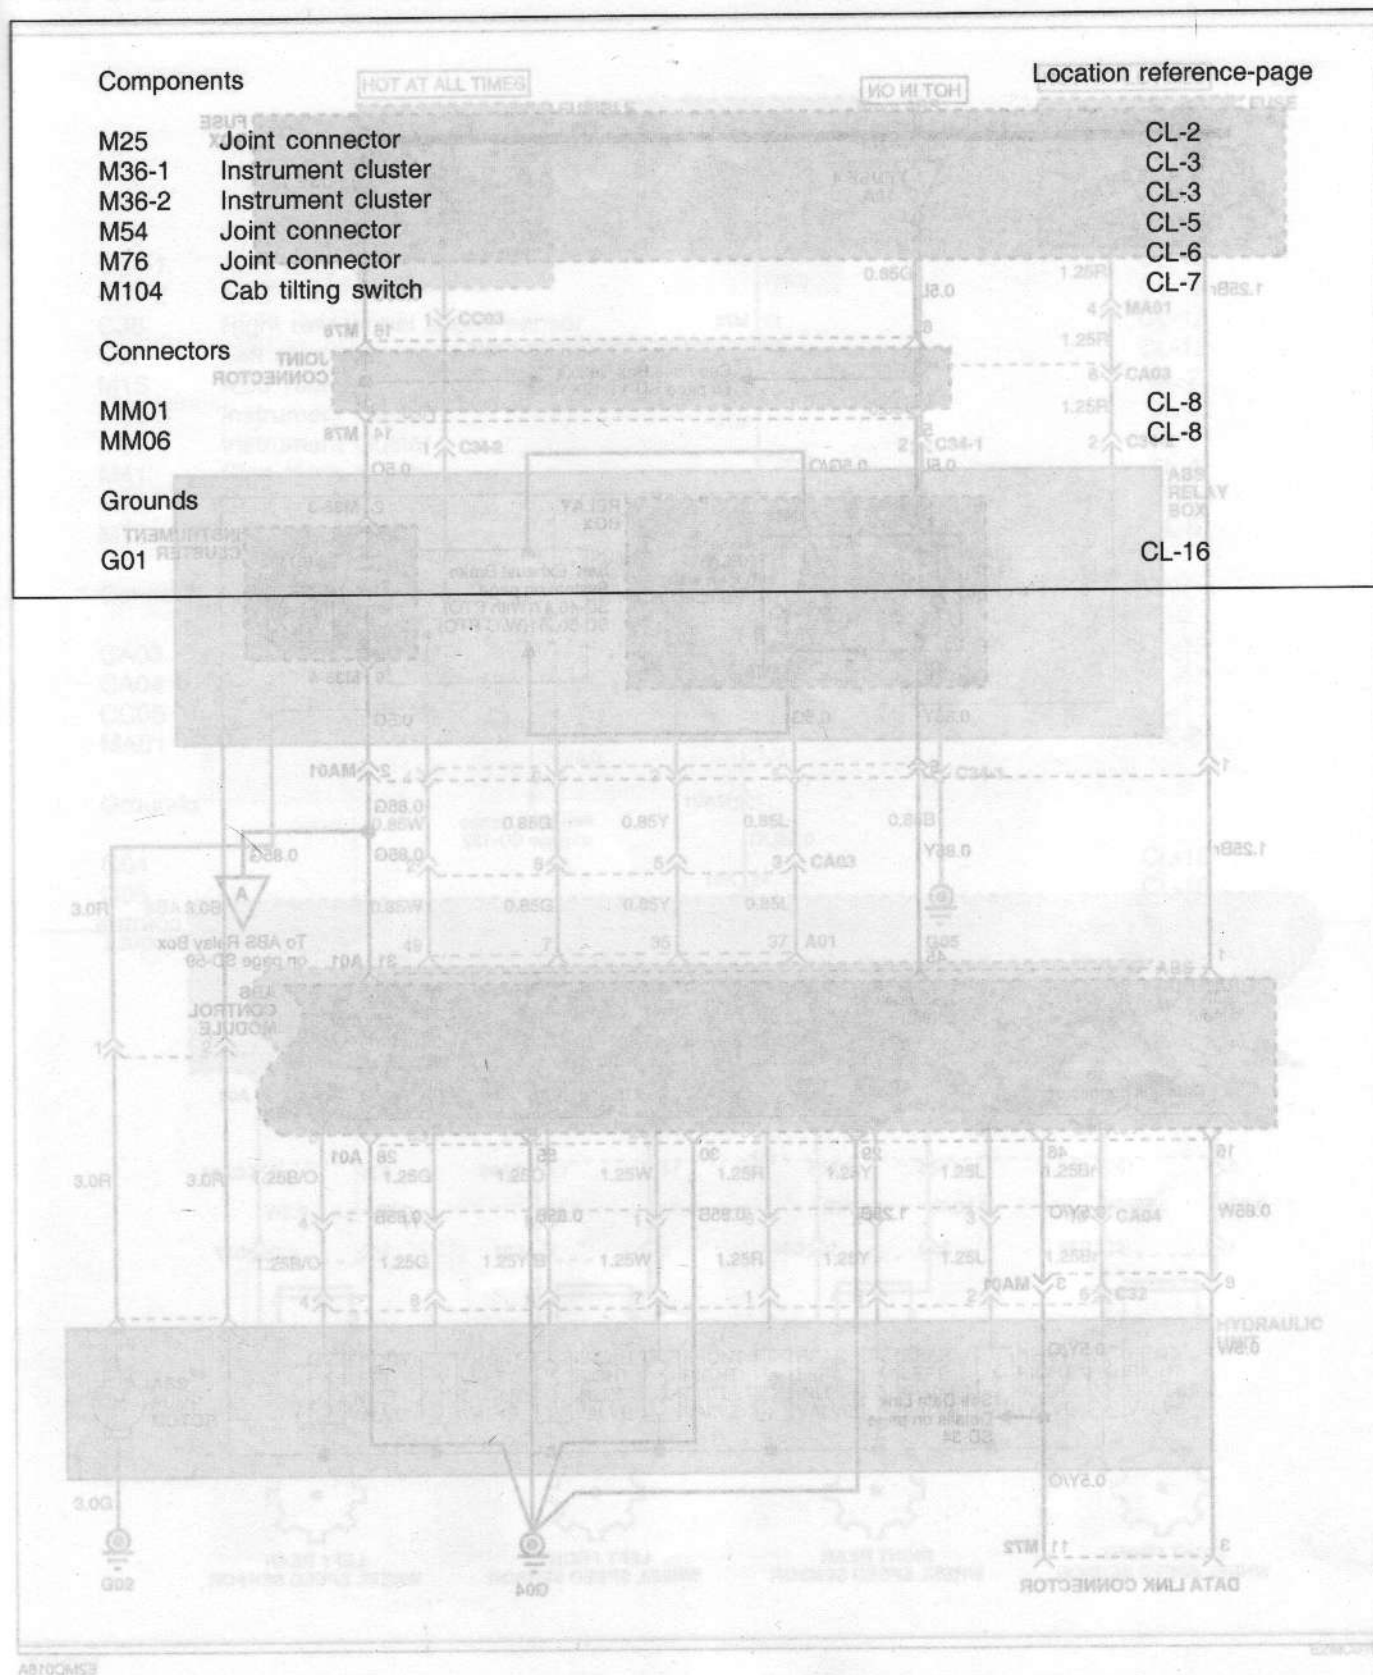

F2MC0160

COMPONENT LOCATION INDEX






ABS (ANTI-LOCK BRAKE SYSTEM)

ABS (ANTI-LOCK BRAKE SYSTEM) (3)

ABS (ANTI-LOCK BRAKE SYSTEM) (S)

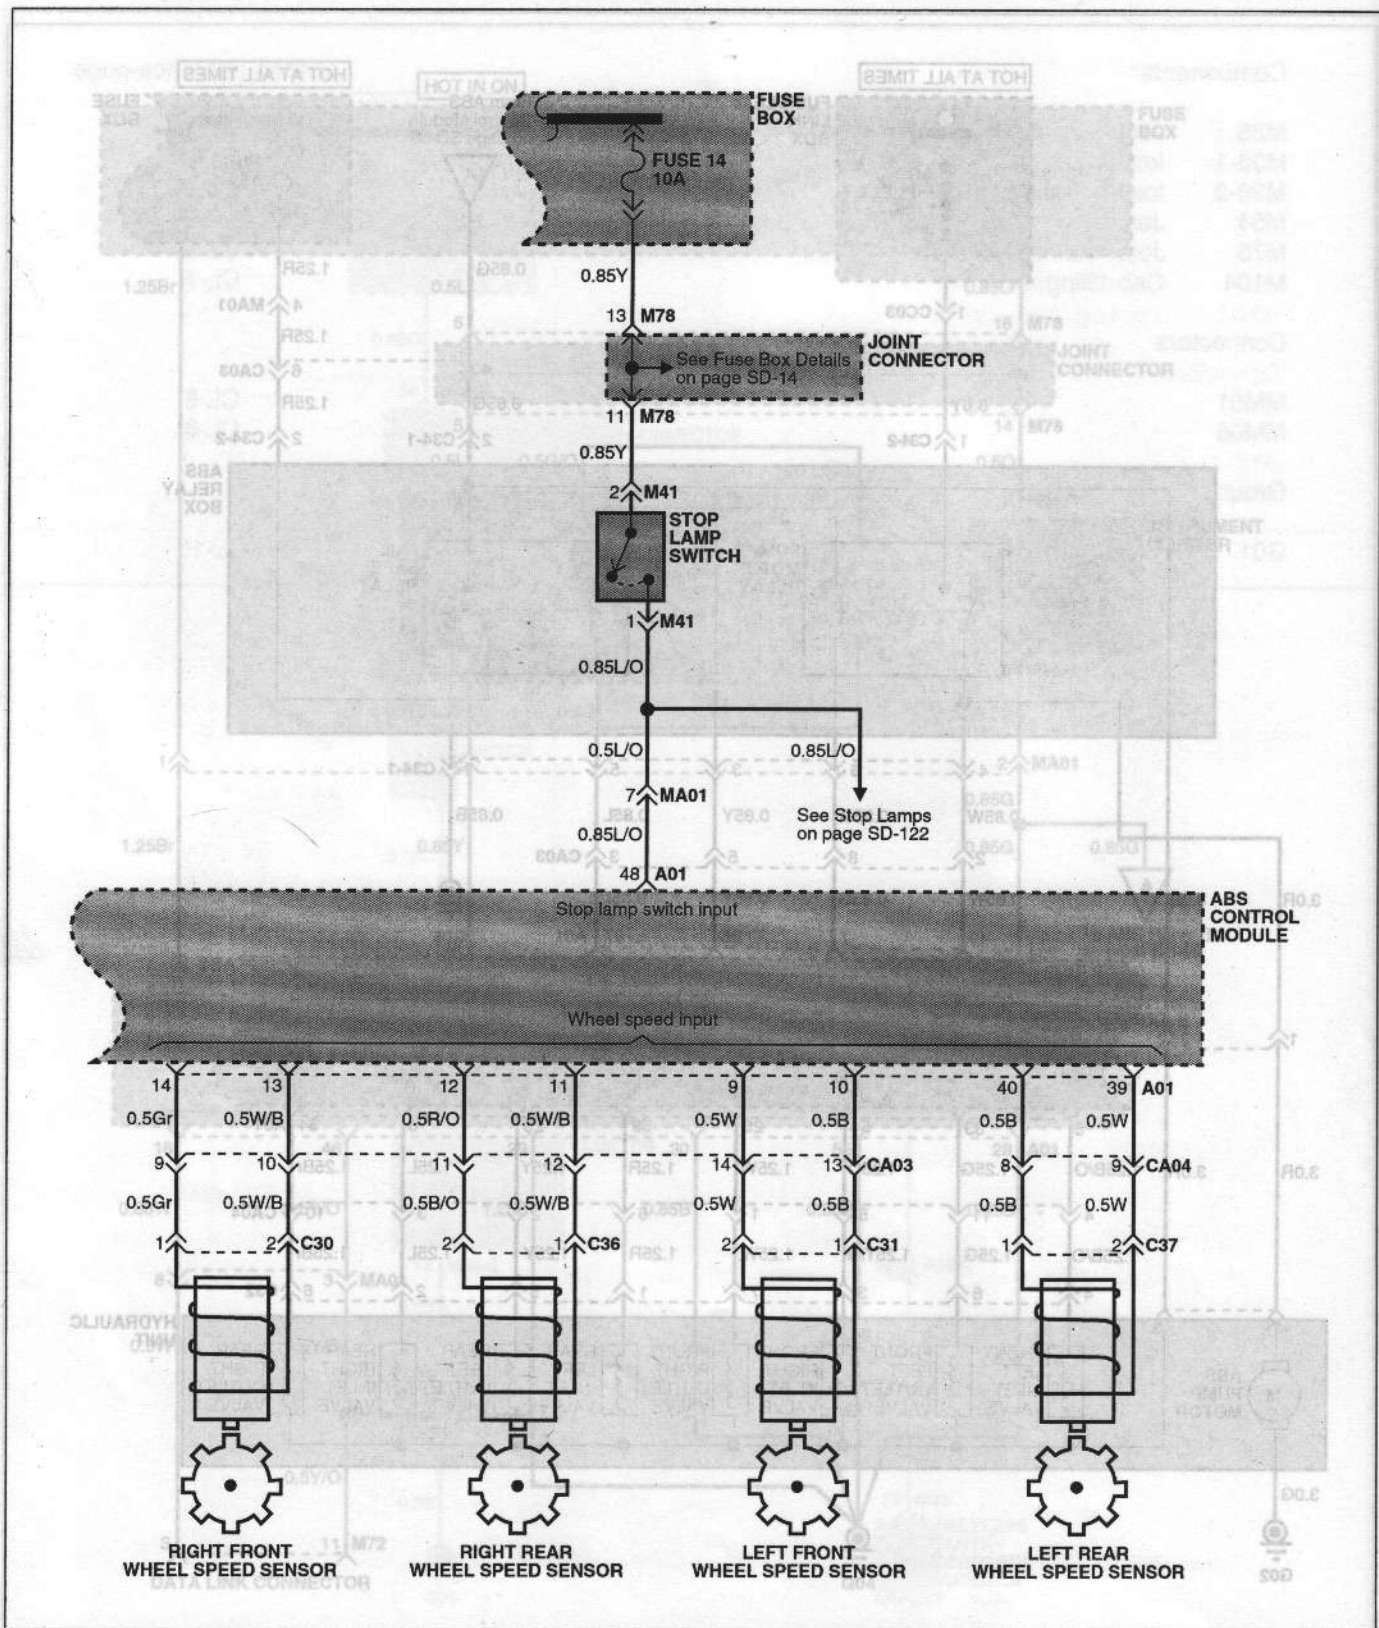

E2MC016C


COMPONENT LOCATION INDEX

Components		Location reference-page
A01	ABS control module	CL-15
C30	Right front wheel speed sensor	CL-12
C31	Left front wheel speed sensor	CL-12
C32	Hydraulic unit	CL-12
C34-1	ABS relay box	CL-12
C34-2	ABS relay box	CL-12
C36	Right rear wheel speed sensor	CL-13
C37	Left rear wheel speed sensor	CL-13
M15	ABS relay	CL-2
M36-3	Instrument cluster	CL-3
M36-4	Instrument cluster	CL-3
M41	Stop lamp switch	CL-4
M72	Data link connector	CL-5
M78	Joint connector	CL-6
Connectors		
CA03		CL-13
CA04		CL-13
CC03		CL-13
MA01		CL-8
Grounds		
G04		CL-16
G05		CL-16

BRAKE WARNING SYSTEM

E2MC0170

BRAKE WARNING SYSTEM (1)

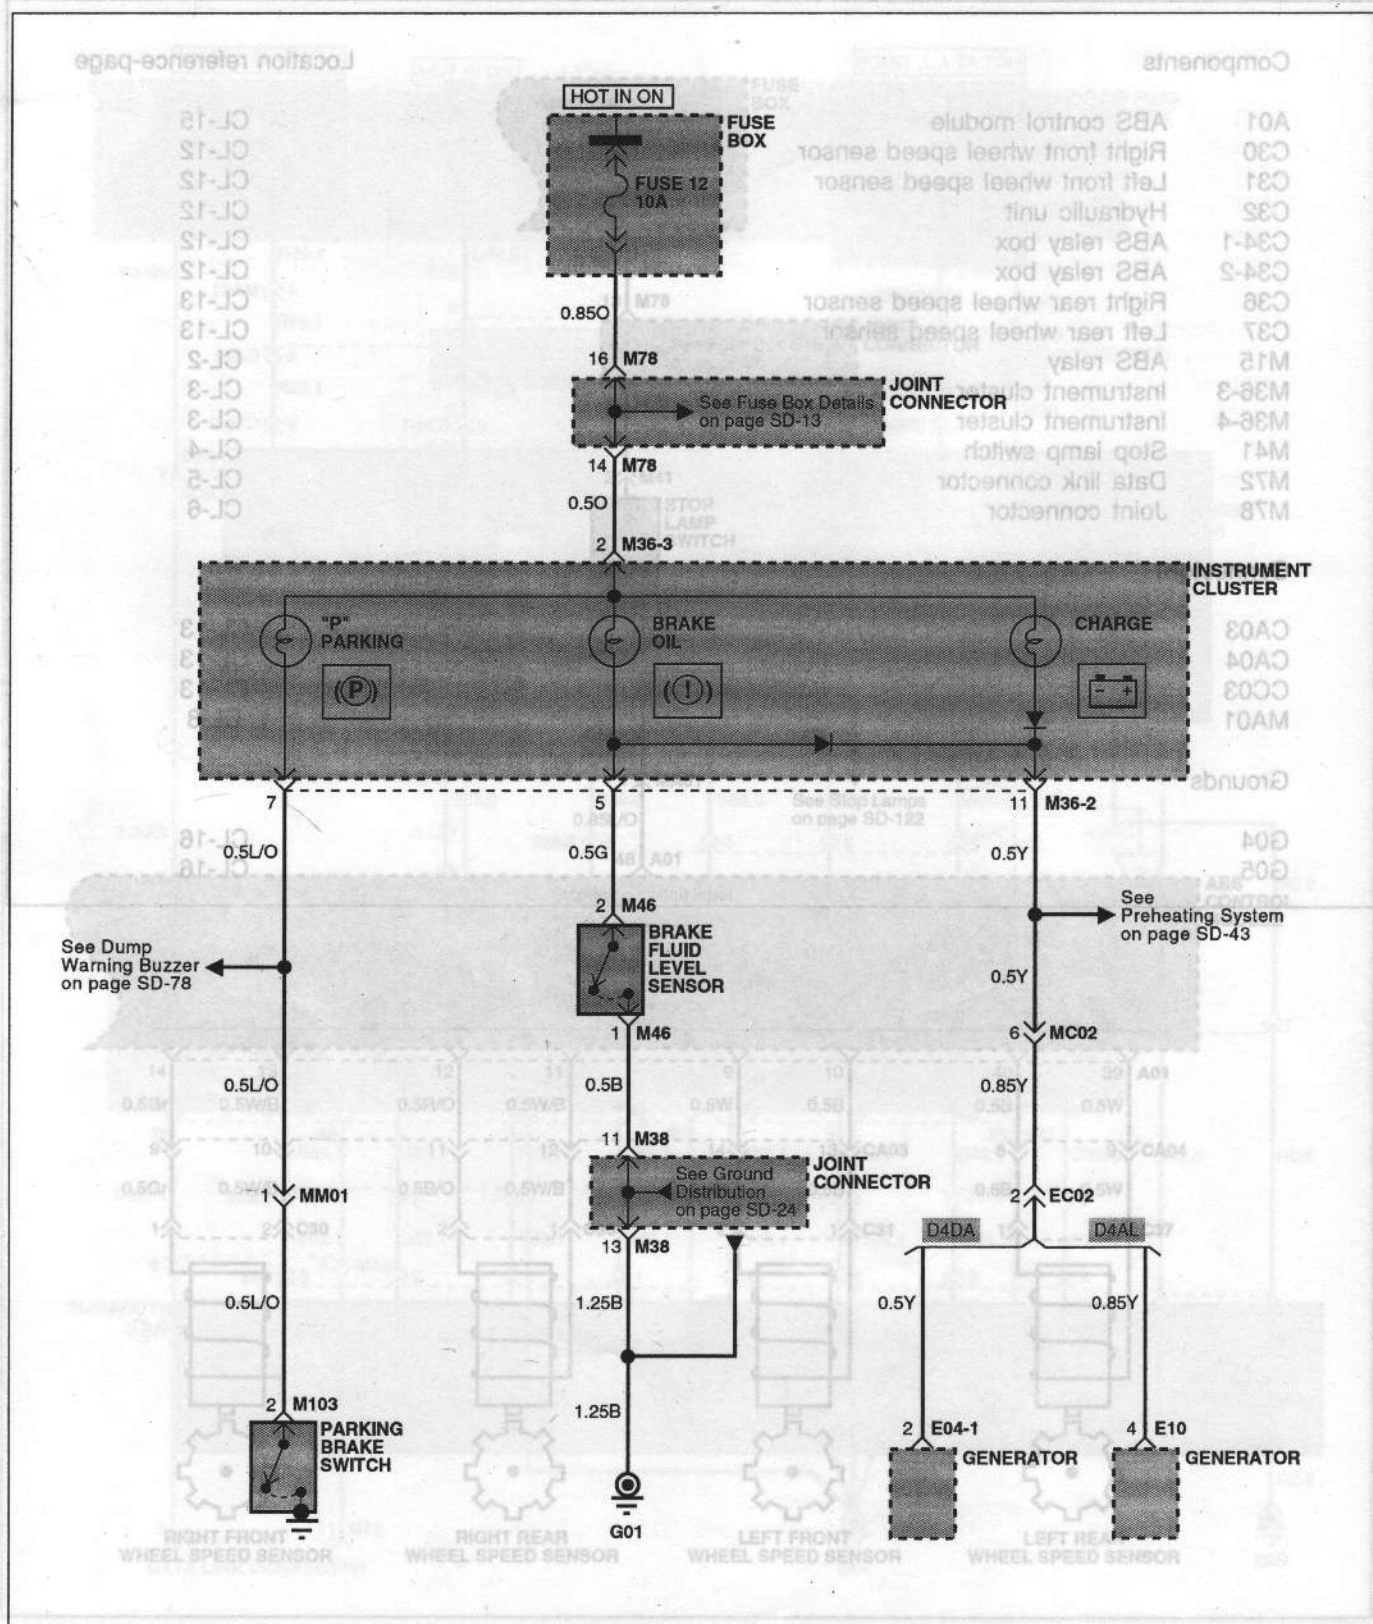

E2MC017A


COMPONENT LOCATION INDEX

Components		Location reference-page
E04-1	Generator (D4DA)	CL-9
E10	Generator (D4AL)	CL-9
M36-2	Instrument cluster	CL-3
M36-3	Instrument cluster	CL-3
M38	Joint connector	CL-4
M46	Brake fluid level sensor	CL-4
M78	Joint connector	CL-6
M103	Parking brake switch	CL-7
Connectors		
EC02		CL-9
MC02		CL-8
MM01		CL-8
Grounds		
G01		CL-16

CIGARETTE LIGHTER

E2MC0180

CIGARETTE LIGHTER (1)

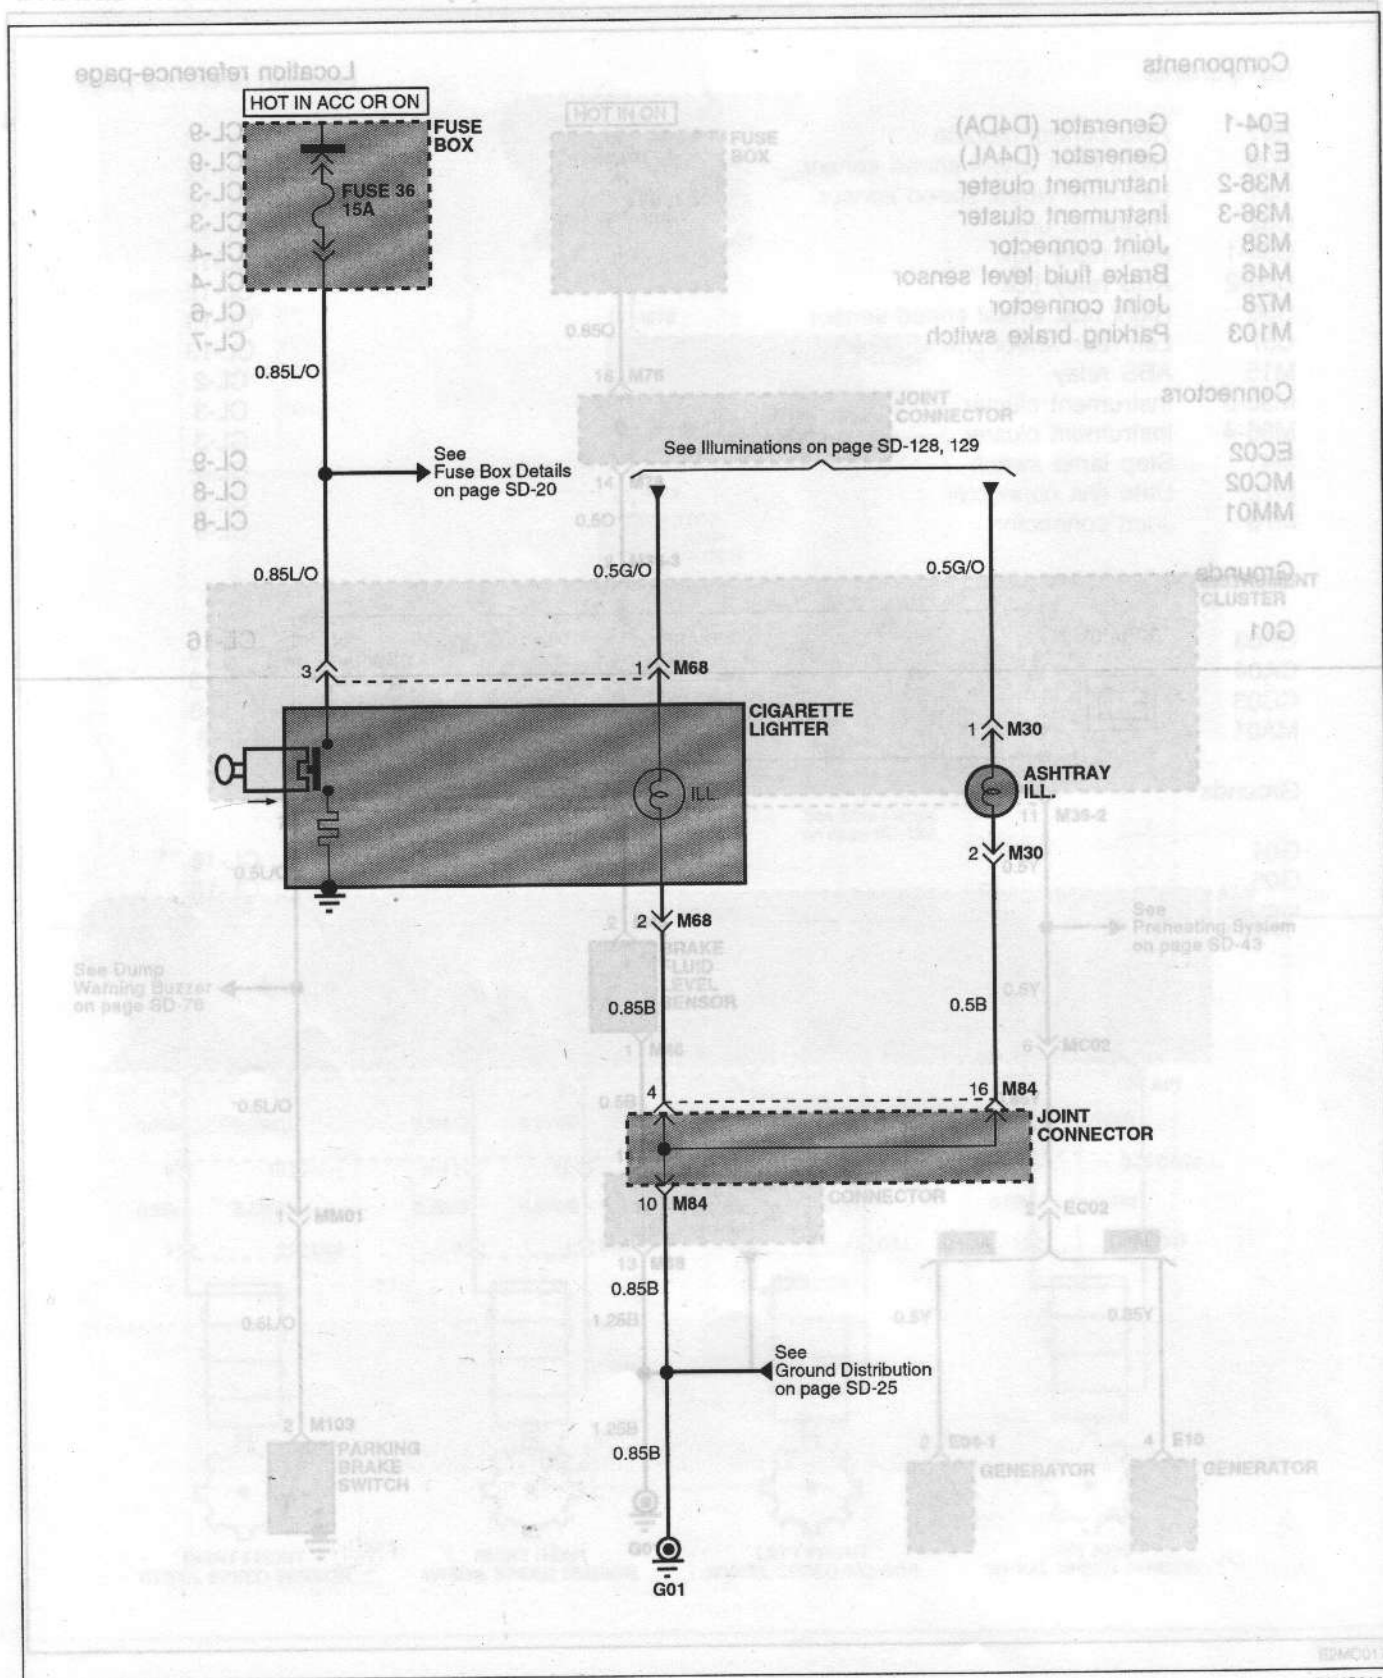

SOCKET

COMPONENT LOCATION INDEX

SOCKET (1)

Components

Location reference-page

M30 Ashtray ILL.
 M68 Cigarette lighter
 M84 Joint connector

CL-3
 CL-5
 CL-6

Grounds


G01

CL-16


Grounds

G02


CL-16

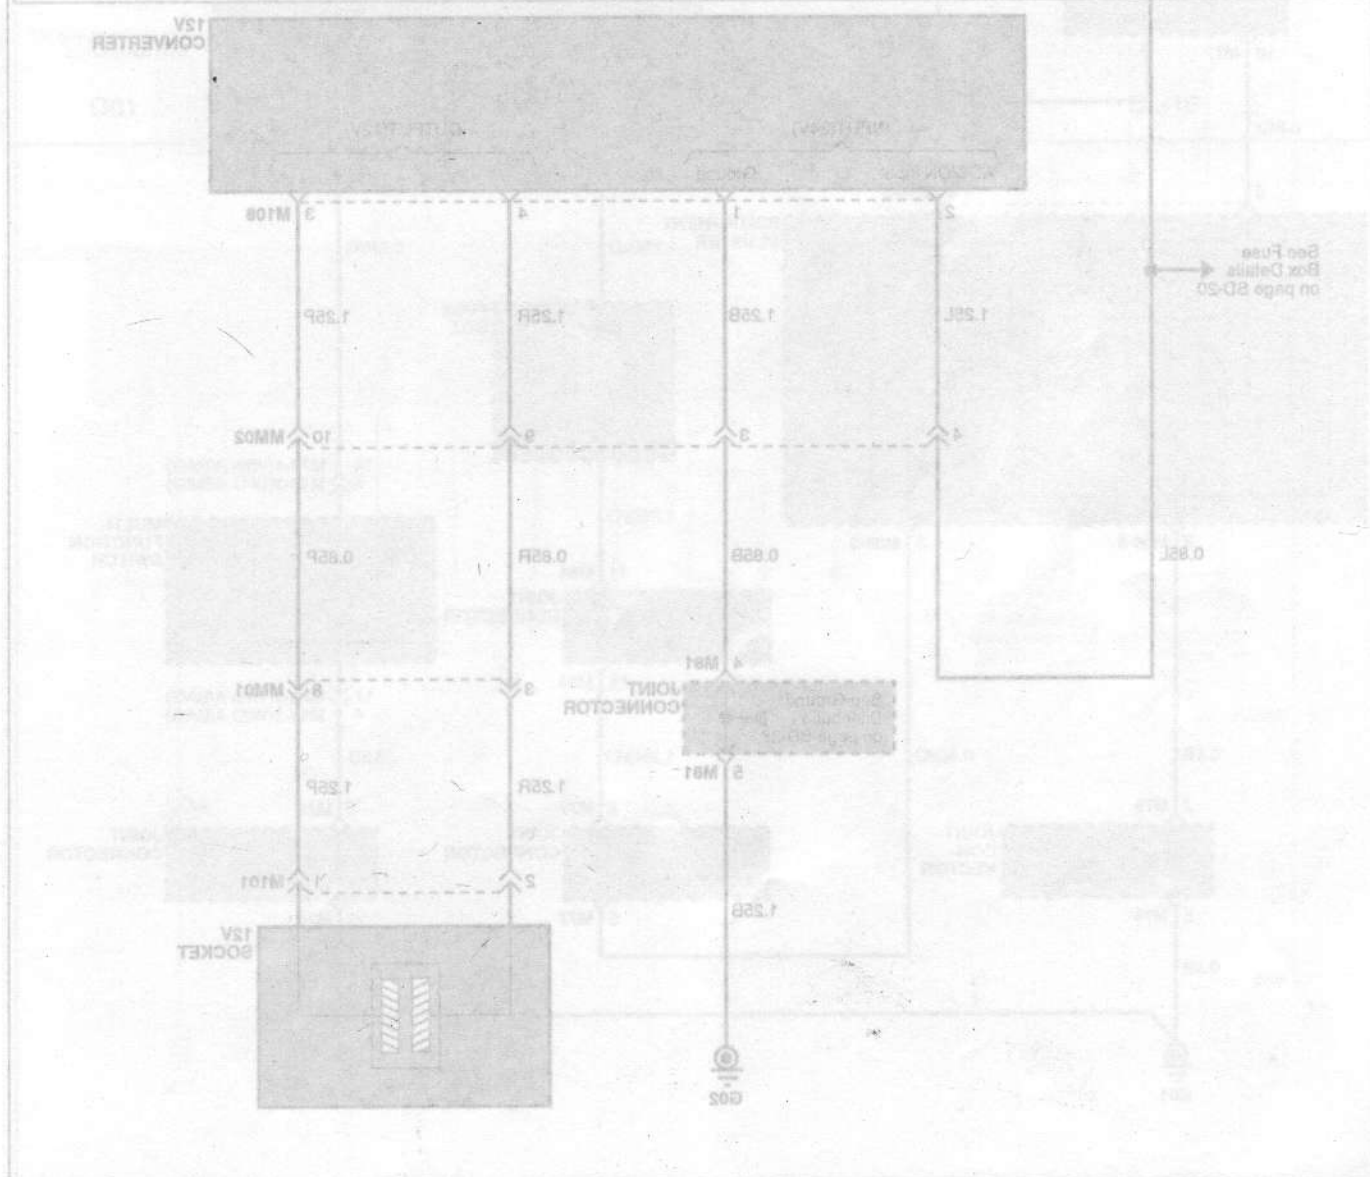

COMPONENT LOCATION INDEX

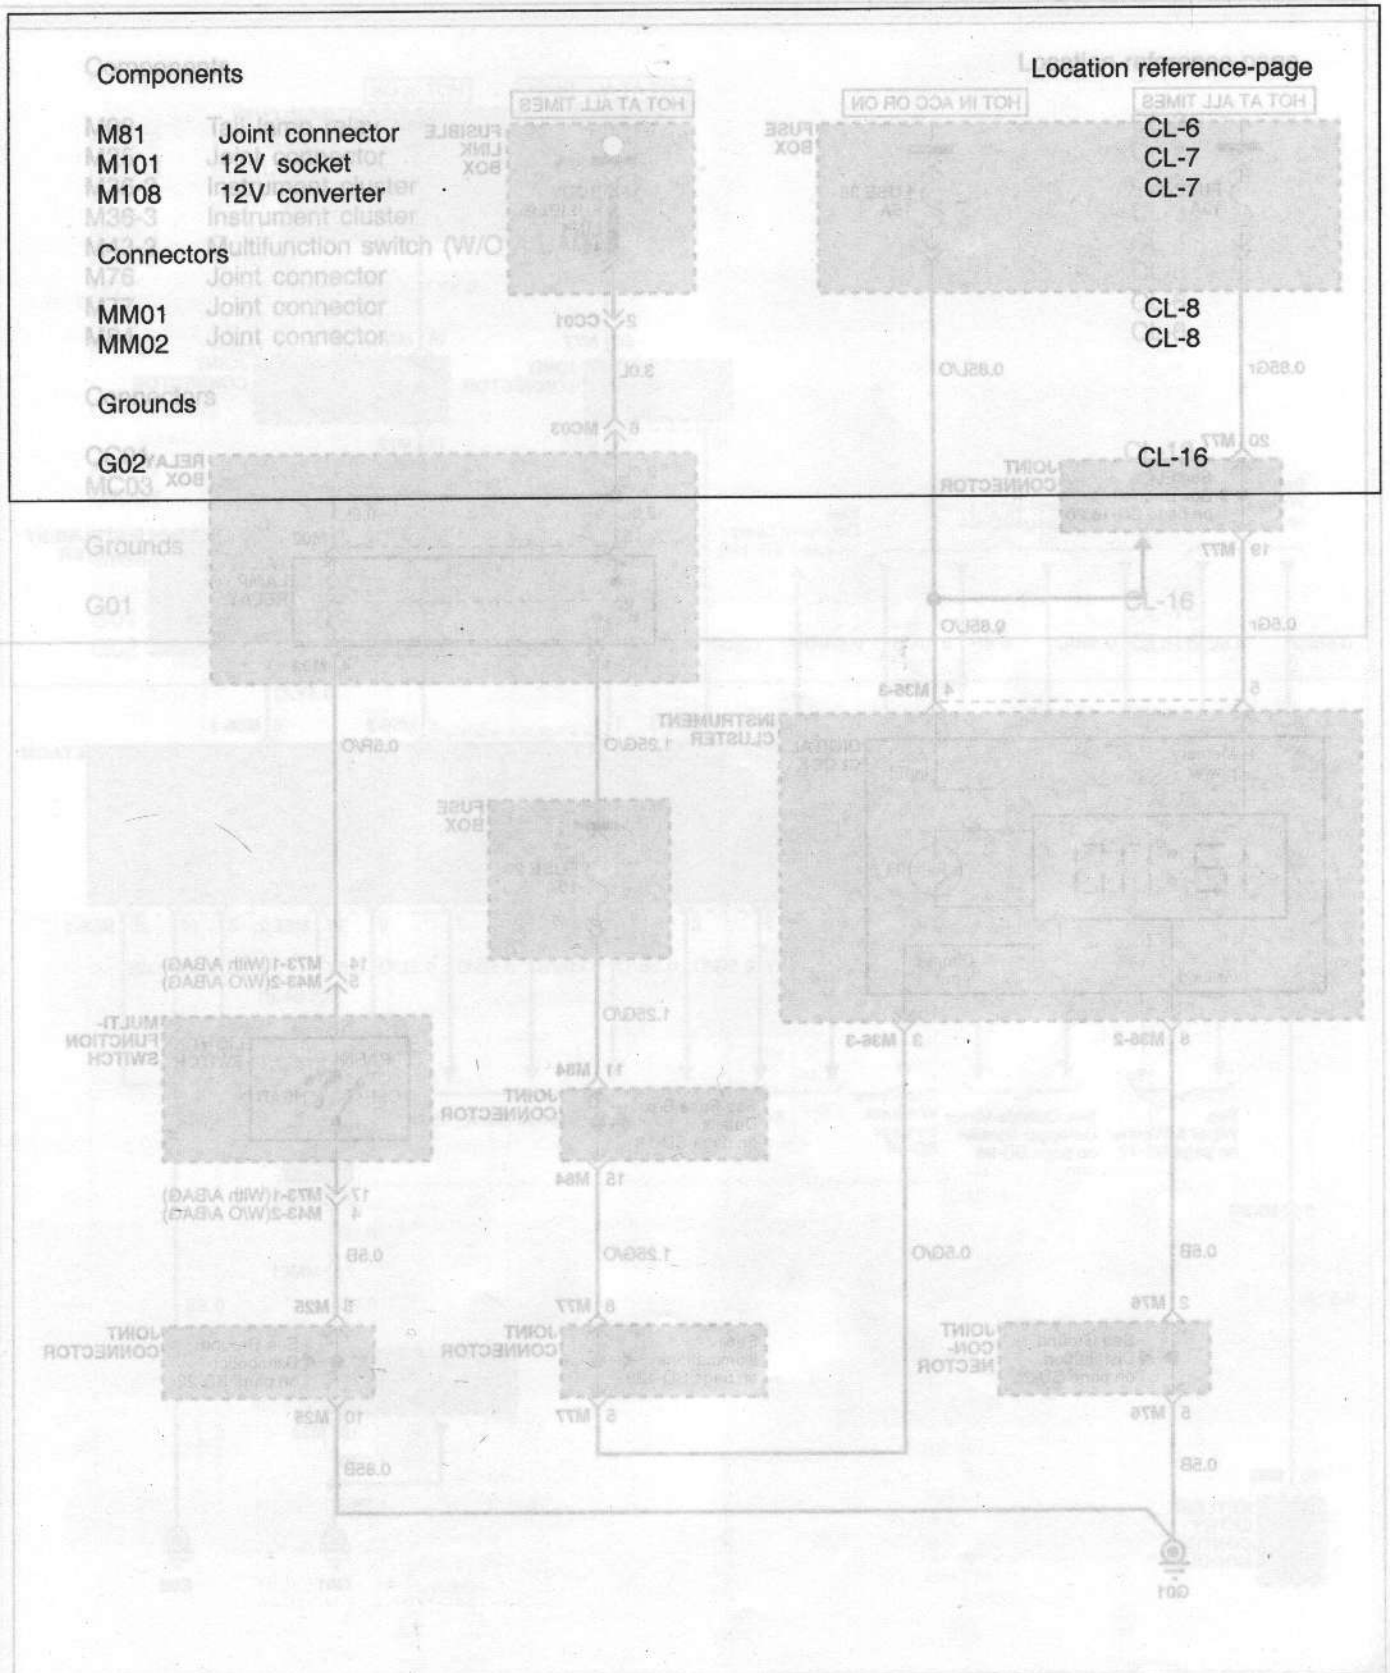

CLOCK (1)

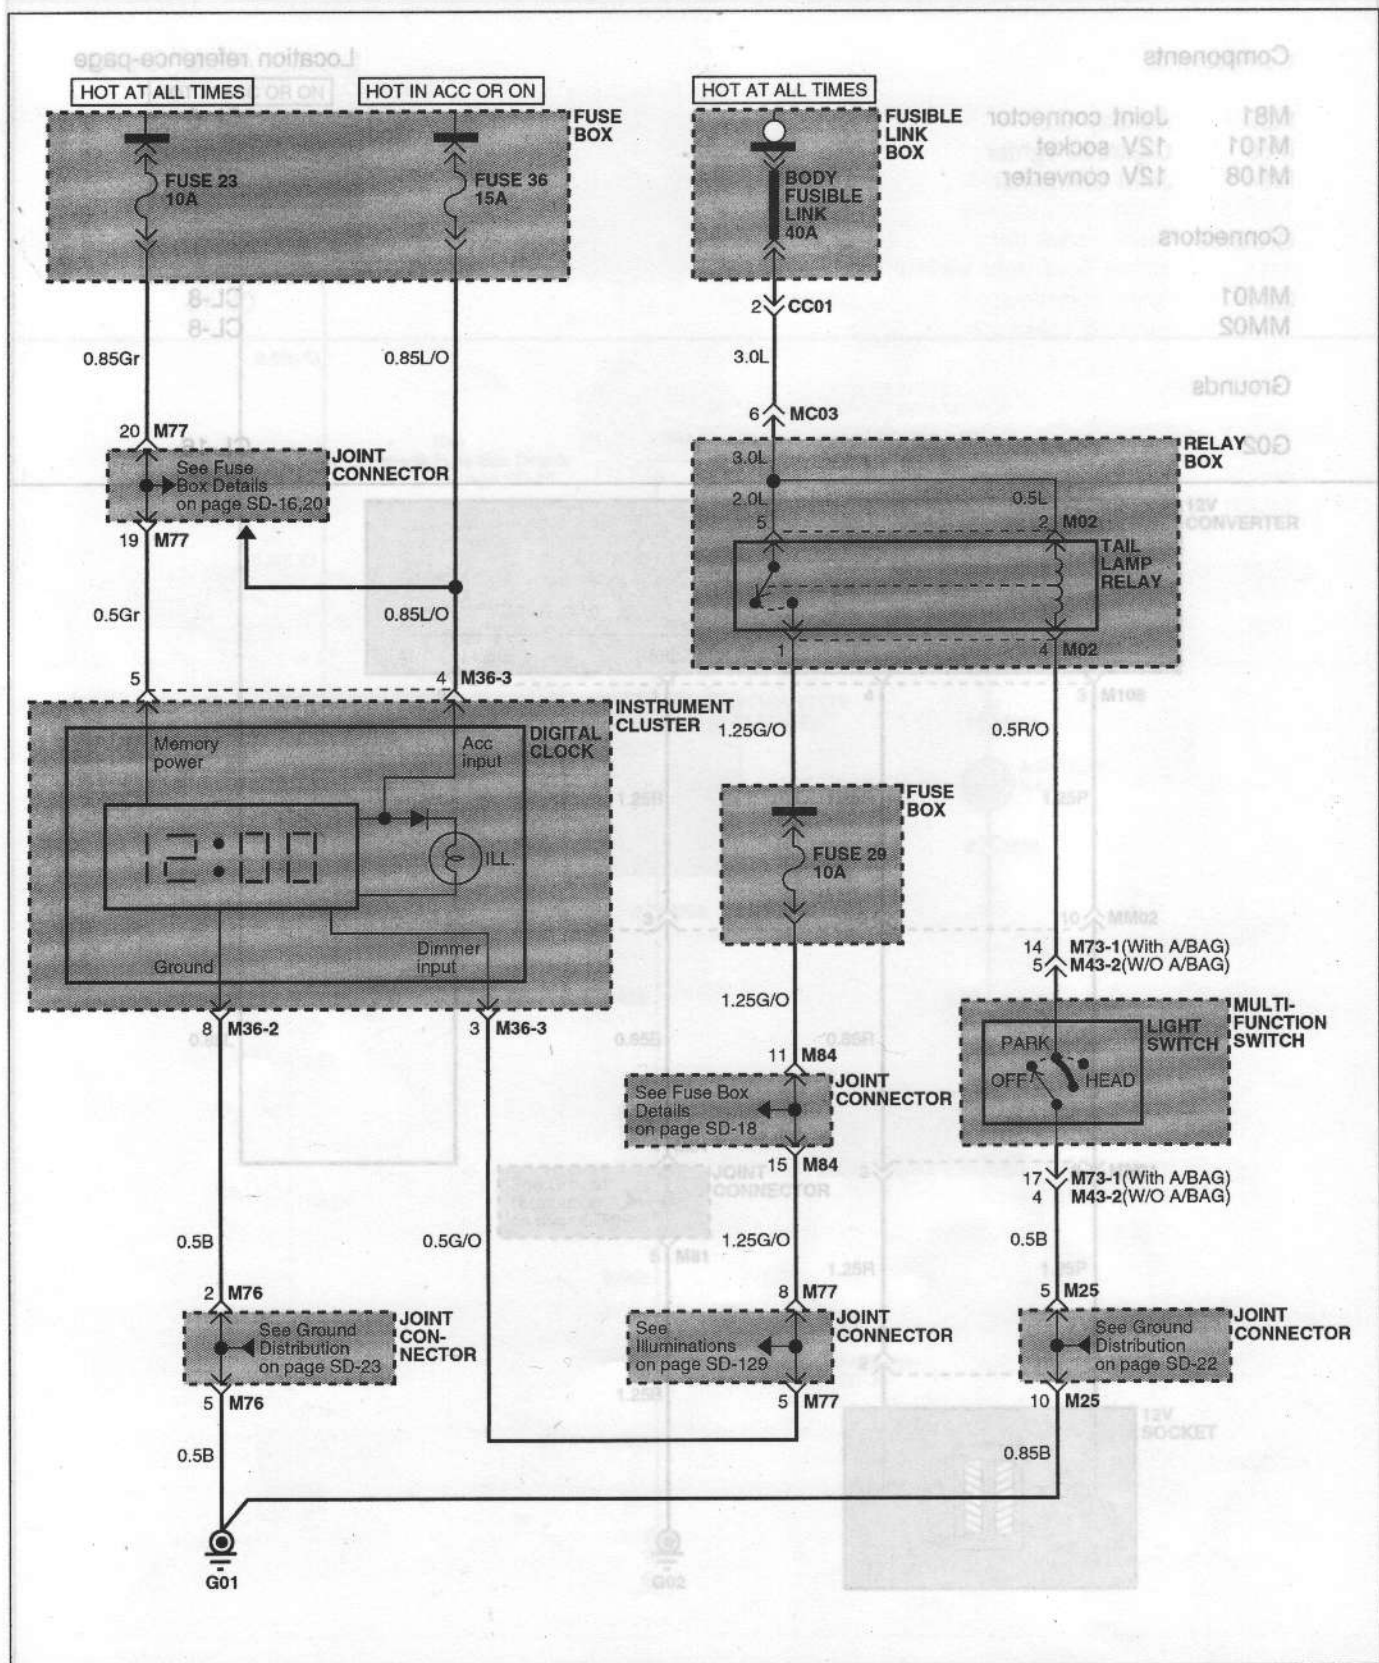


COMPONENT LOCATION INDEX

Components		Location reference-page
M02	Tail lamp relay	CL-2
M25	Joint connector	CL-2
M36-2	Instrument cluster	CL-3
M36-3	Instrument cluster	CL-3
M43-2	Multifunction switch (W/O A/BAG)	CL-4
M76	Joint connector	CL-6
M77	Joint connector	CL-6
M84	Joint connector	CL-6
Connectors		
CC01		CL-13
MC03		CL-8
Grounds		
G01		CL-16

ETACS (ELECTRONIC TIME & ALARM CONTROL SYSTEM)


E2MC0210

ETACS (ELECTRONIC TIME & ALARM CONTROL SYSTEM) (1)

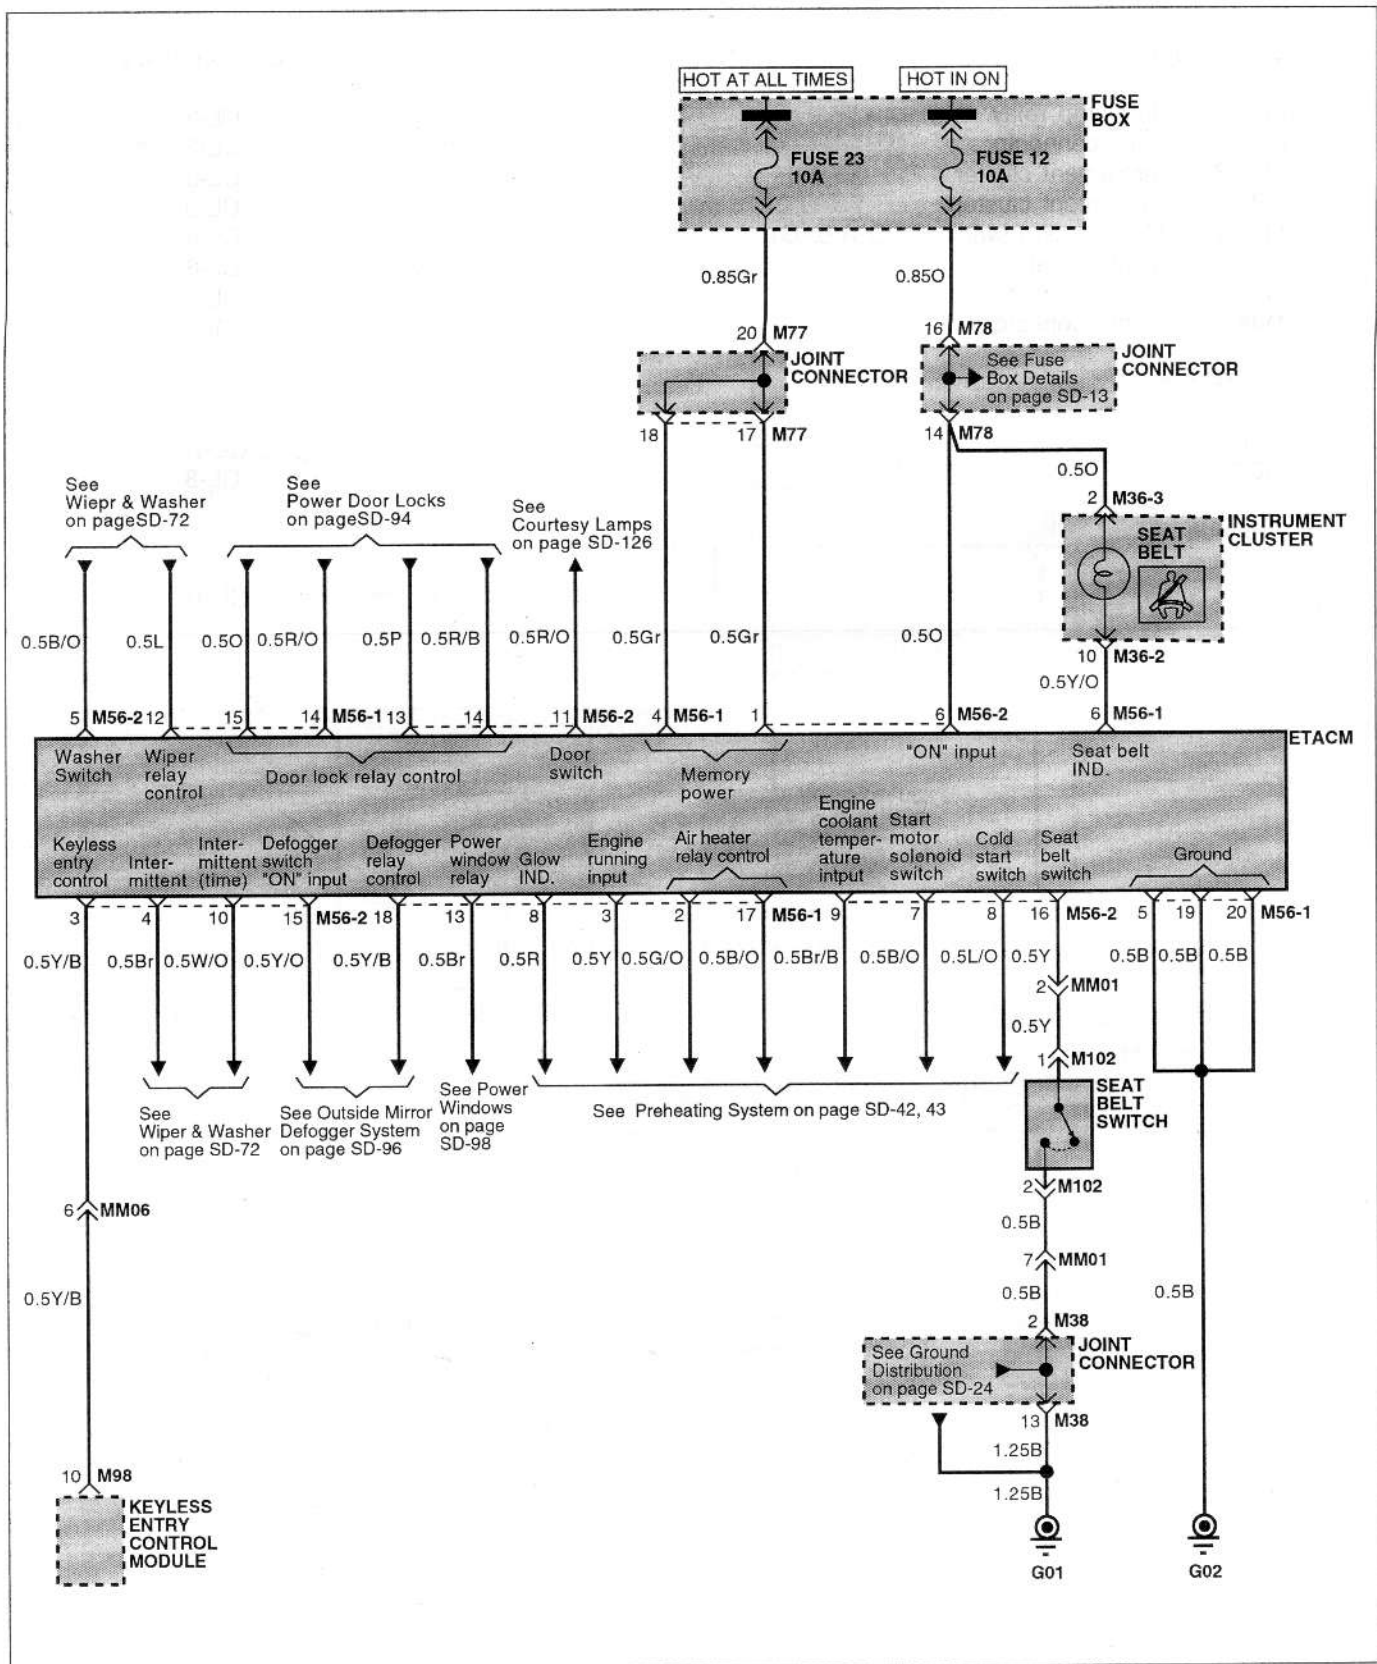

E2MC021A

COMPONENT LOCATION INDEX

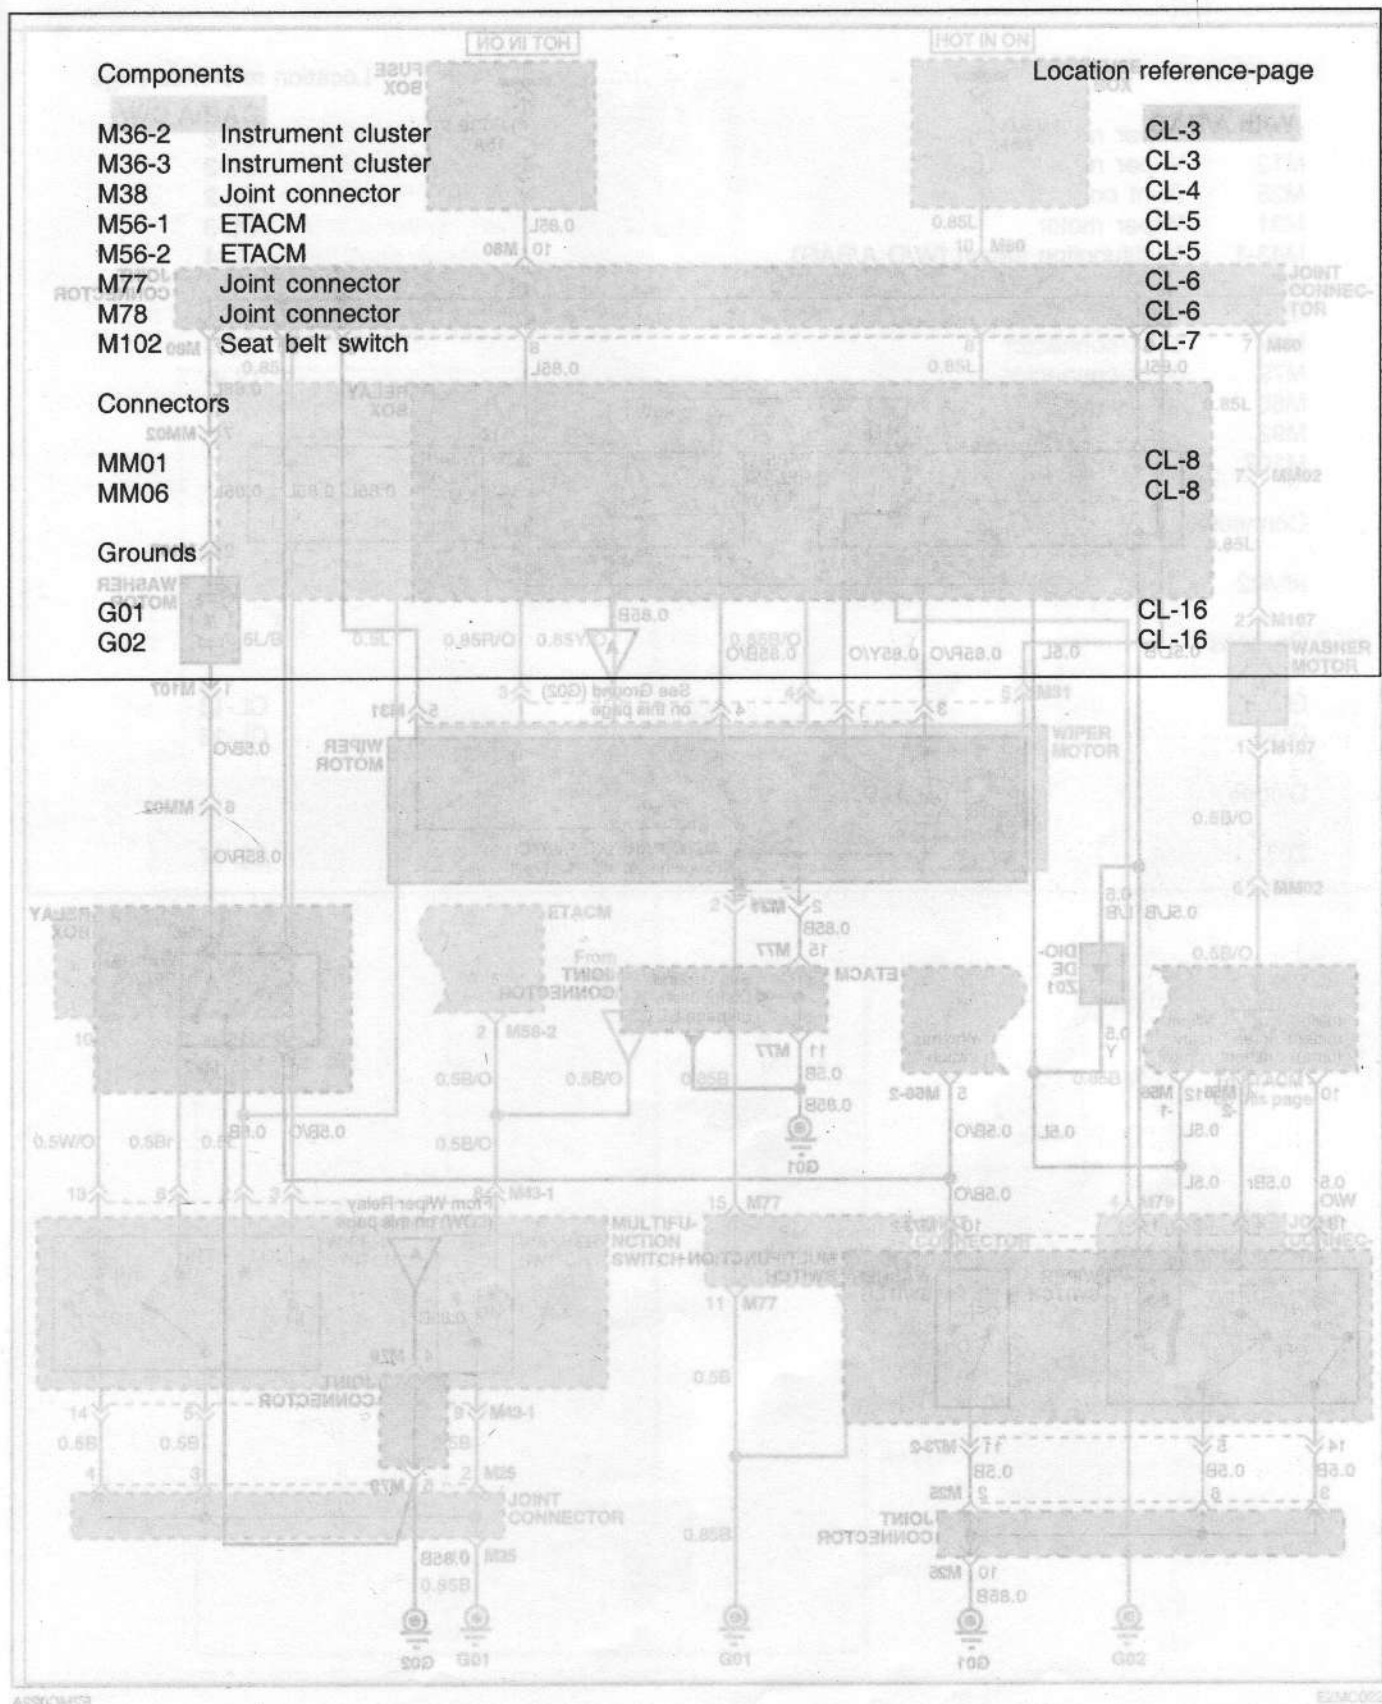

WIP

E2MC022A

COMPONENT LOCATION INDEX



COMPONENT LOCATION INDEX

Components		Location reference-page
M11	Wiper relay (High)	CL-2
M12	Wiper relay (Low)	CL-2
M25	Joint connector	CL-2
M31	Wiper motor	CL-3
M43-1	Multifunction switch (W/O A/BAG)	CL-4
M56-1	ETACM	CL-5
M56-2	ETACM	CL-5
M77	Joint connector	CL-6
M79	Joint connector	CL-6
M80	Joint connector	CL-6
M92	Washer relay	CL-6
M107	Washer motor	CL-7
Connectors		
MM02		CL-8
Grounds		
G01		CL-16
G02		CL-16
Diodes		
Z01		CL-17

E2MC0230



COMPONENT LOCATION INDEX


Components		Location reference-page
M16	Rear fog lamp relay	CL-2
M19	Rear fog lamp warning buzzer	CL-2
M25	Joint connector	CL-2
M43-2	Multifunction switch (W/O A/BAG)	CL-4
M67	Rear fog lamp switch	CL-5
M79	Joint connector	CL-6
M86	Rear fog indicator relay	CL-6
M105	Left door switch	CL-7
Connectors		
MC02		CL-8
MM01		CL-8
Grounds		
G01		CL-16
G02		CL-16
Diodes		
Z06		CL-17

DUMP WARNING BUZZER

E2MC0250 E2MC0230

DUMP WARNING BUZZER (1)

COMPONENT LOCATION INDEX

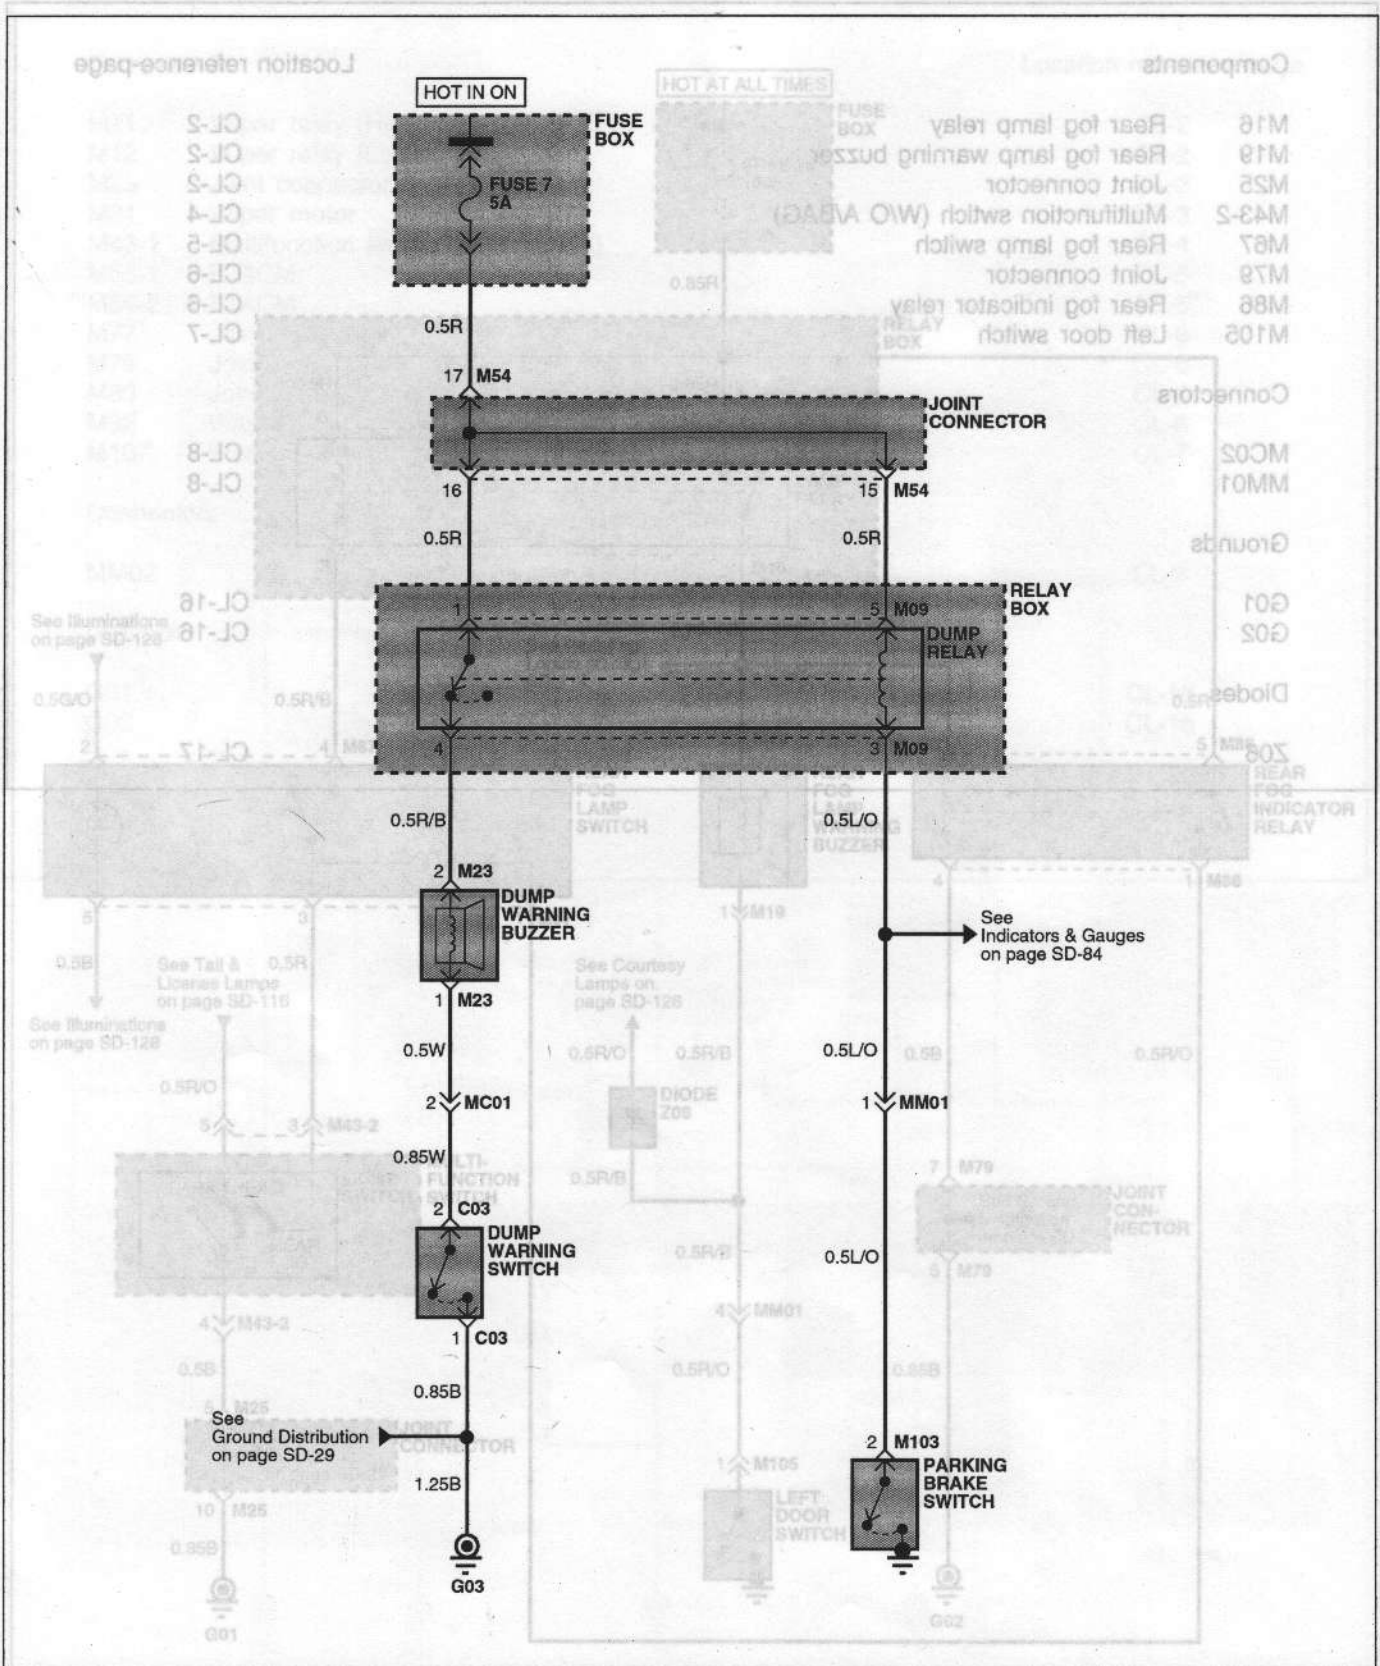


E2MC025A

COMPONENT LOCATION INDEX


Components		Location reference-page
C03	Dump warning switch	CL-10
M09	Dump relay	CL-2
M23	Dump warning buzzer	CL-2
M54	Joint connector	CL-5
M103	Parking brake switch	CL-7
Connectors		
MC01		CL-8
MM01		CL-8
Grounds		
G03		CL-16

E2MC0260

 COMPONENT LOCATION



KEYLESS ENTRY & BURGLAR ALARM CONTROL SYSTEM (2)

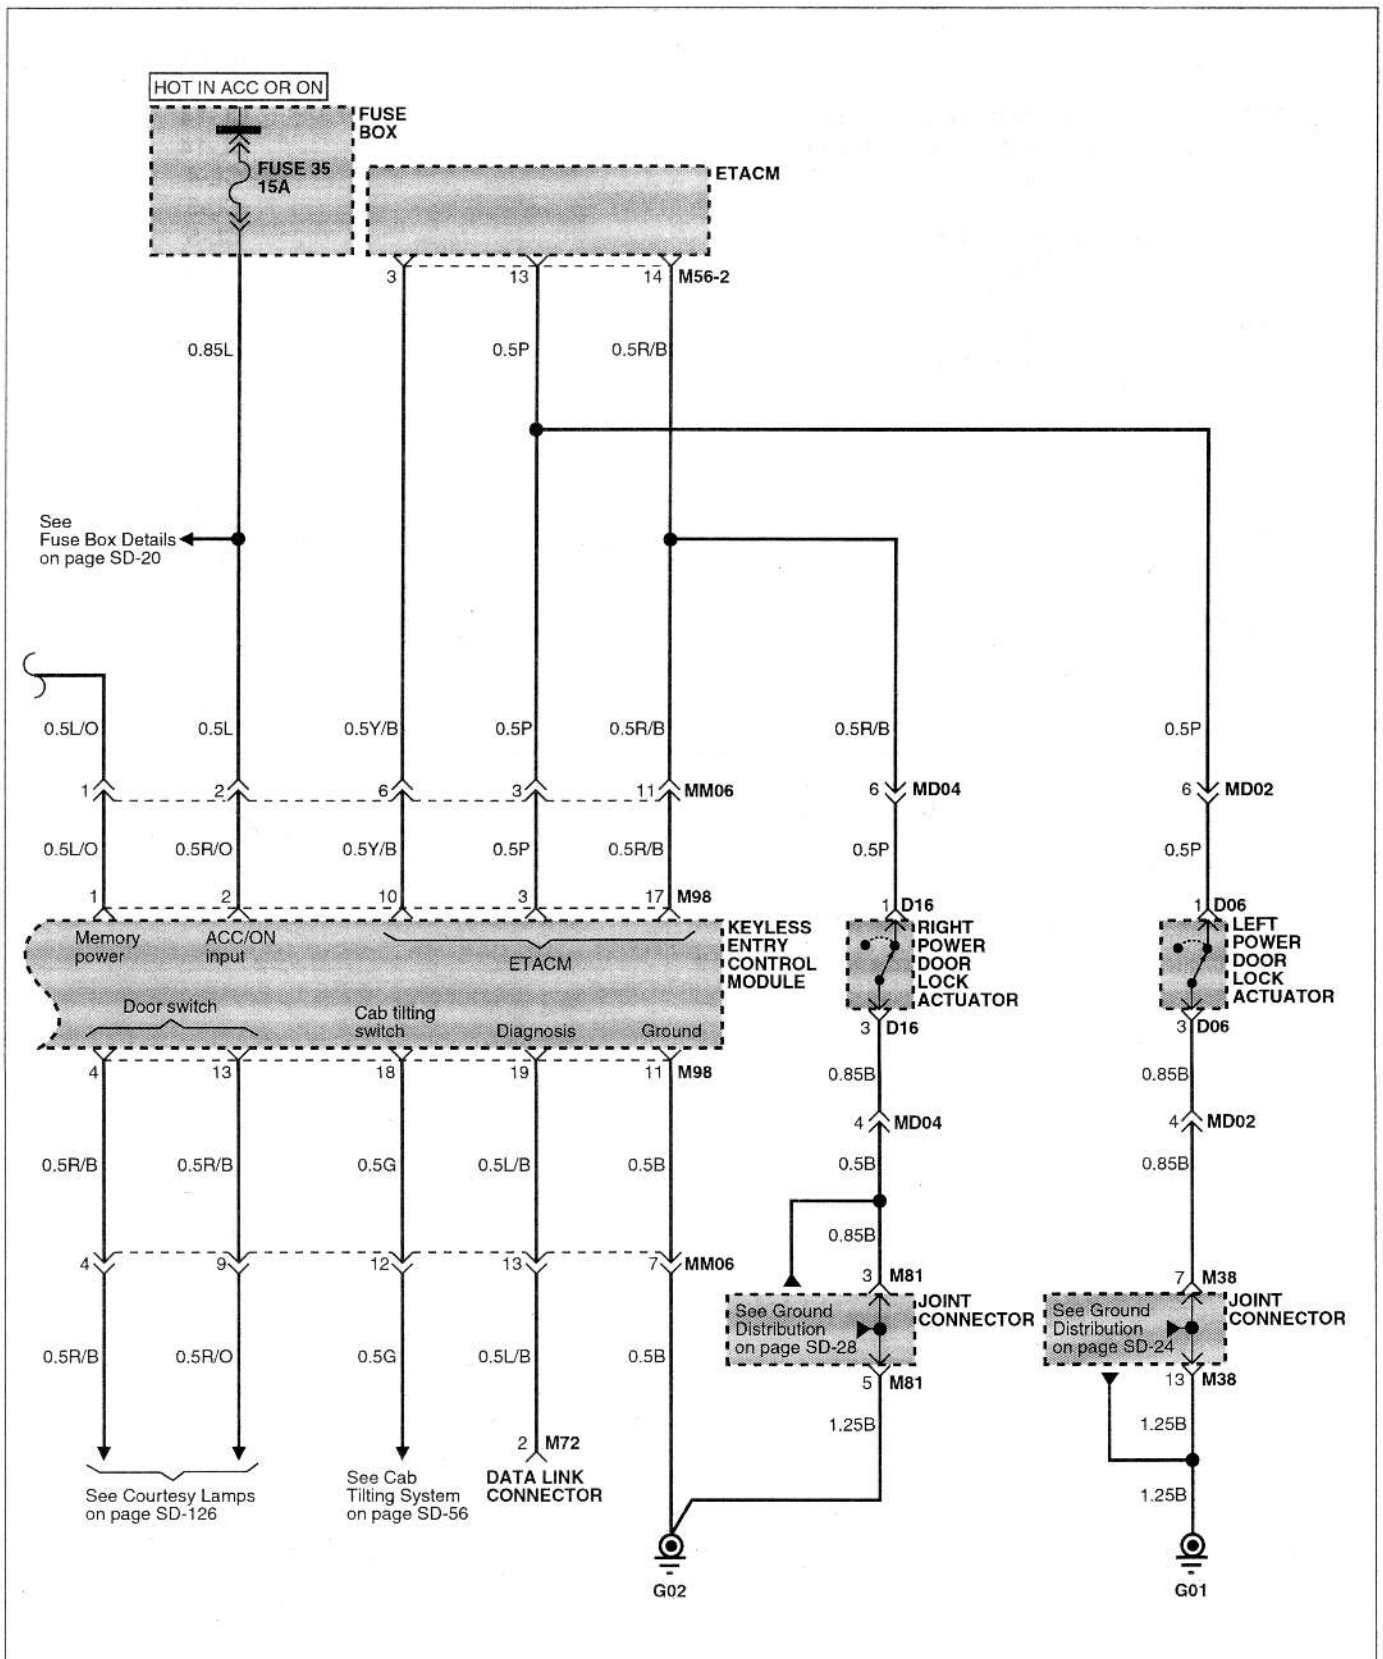

E2MC026B

COMPONENT LOCATION INDEX

Components		Location reference-page
D06	Left power door lock actuator	CL-14
D16	Right power door lock actuator	CL-14
M38	Joint connector	CL-4
M56-2	ETACM	CL-5
M72	Data link connector	CL-5
M79	Joint connector	CL-6
M81	Joint connector	CL-6
M89	Starter relay	CL-6
M95	Left turn signal relay	CL-6
M96	Right turn signal relay	CL-6
Connectors		
MD02		CL-8
MD04		CL-8
MM06		CL-8
Grounds		
G01		CL-16
G02		CL-16

(1) INDICATORS & GAUGES (1)




INDICATORS & GAUGES (3)



INDICATORS & GAUGES

INDICATORS & GAUGES (3)


(S) 23QUAG & 2ROTACIOMI

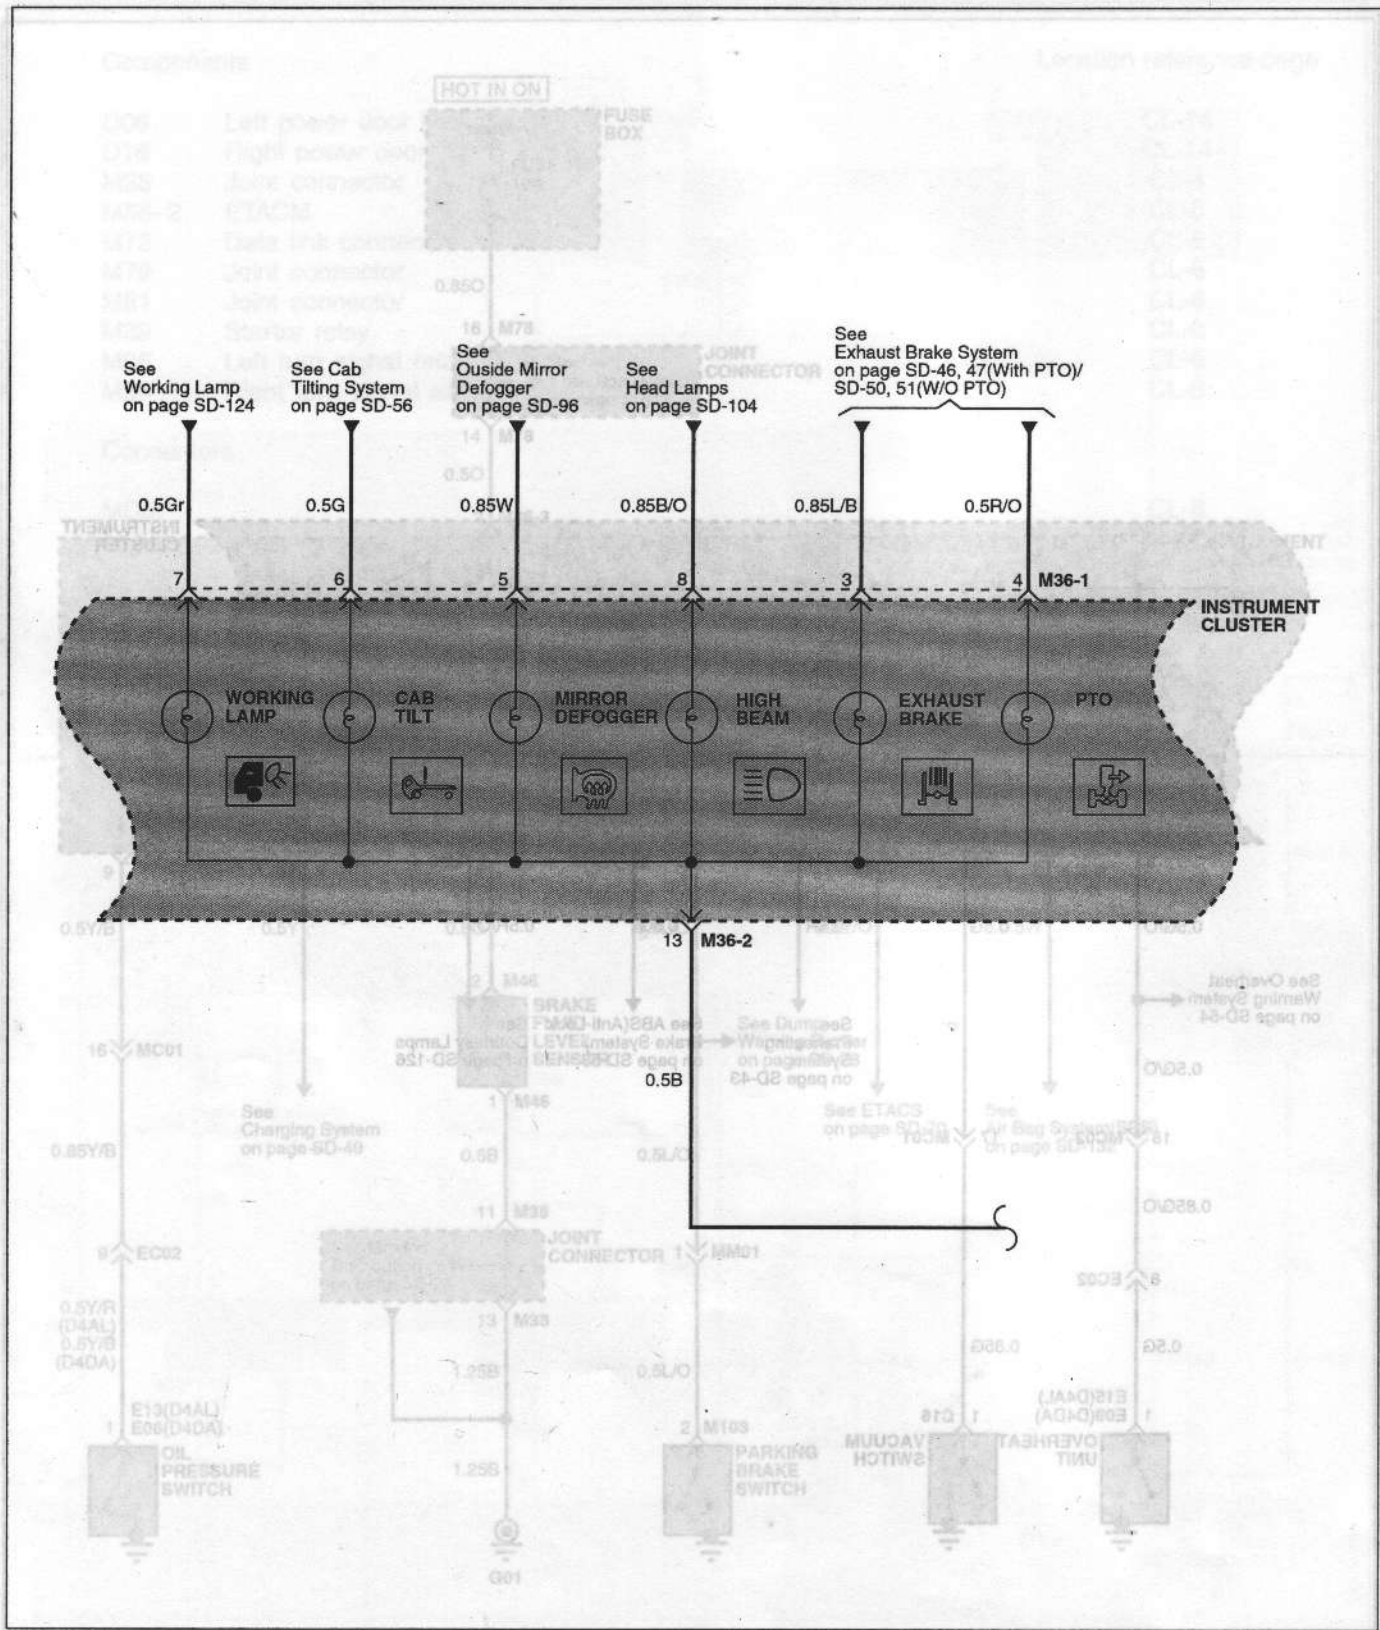

E2MC027C

INDICATORS & GAUGES (4) DEX


(5) INDICATORS & GAUGES

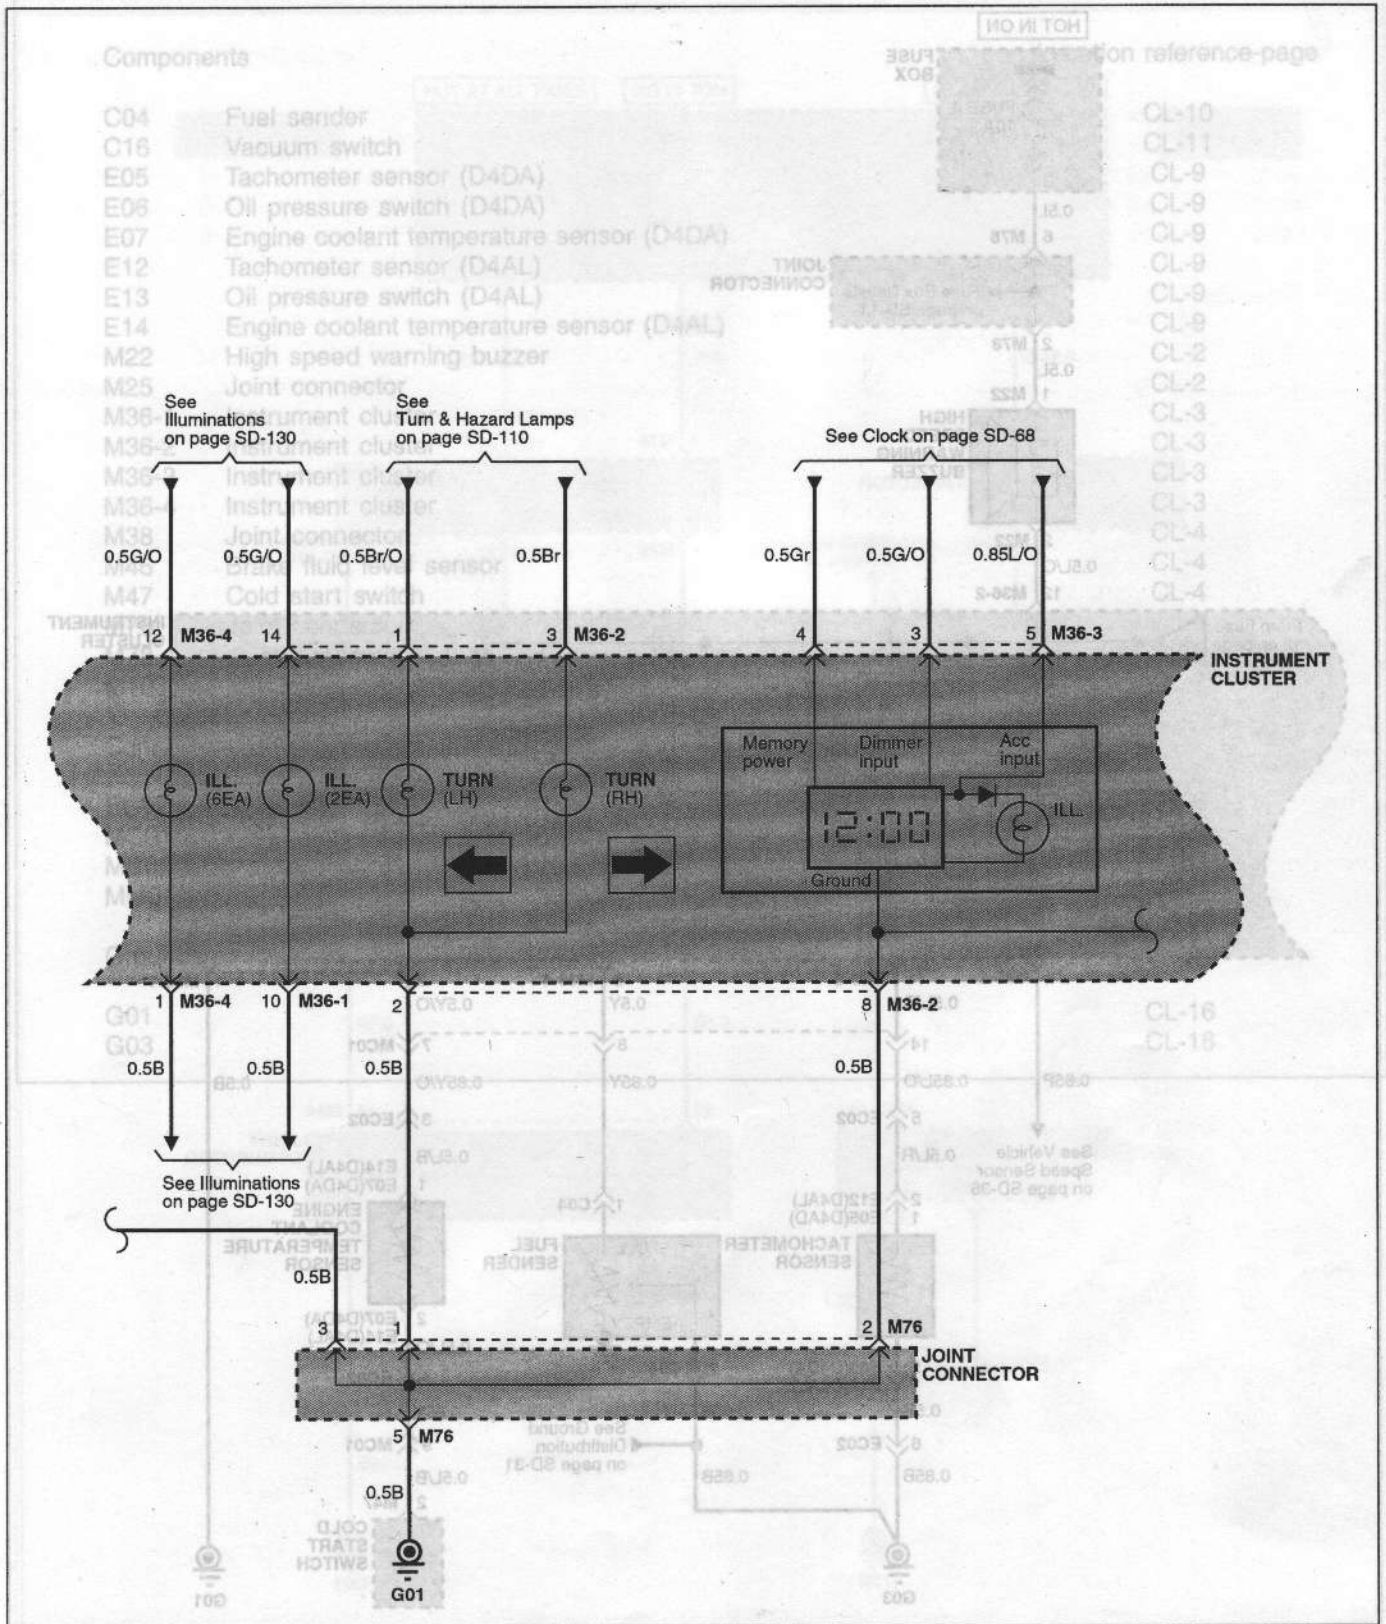

E2MC027D

INDICATORS & GAUGES (5)

(A) SEQUAS & SROTACIOM

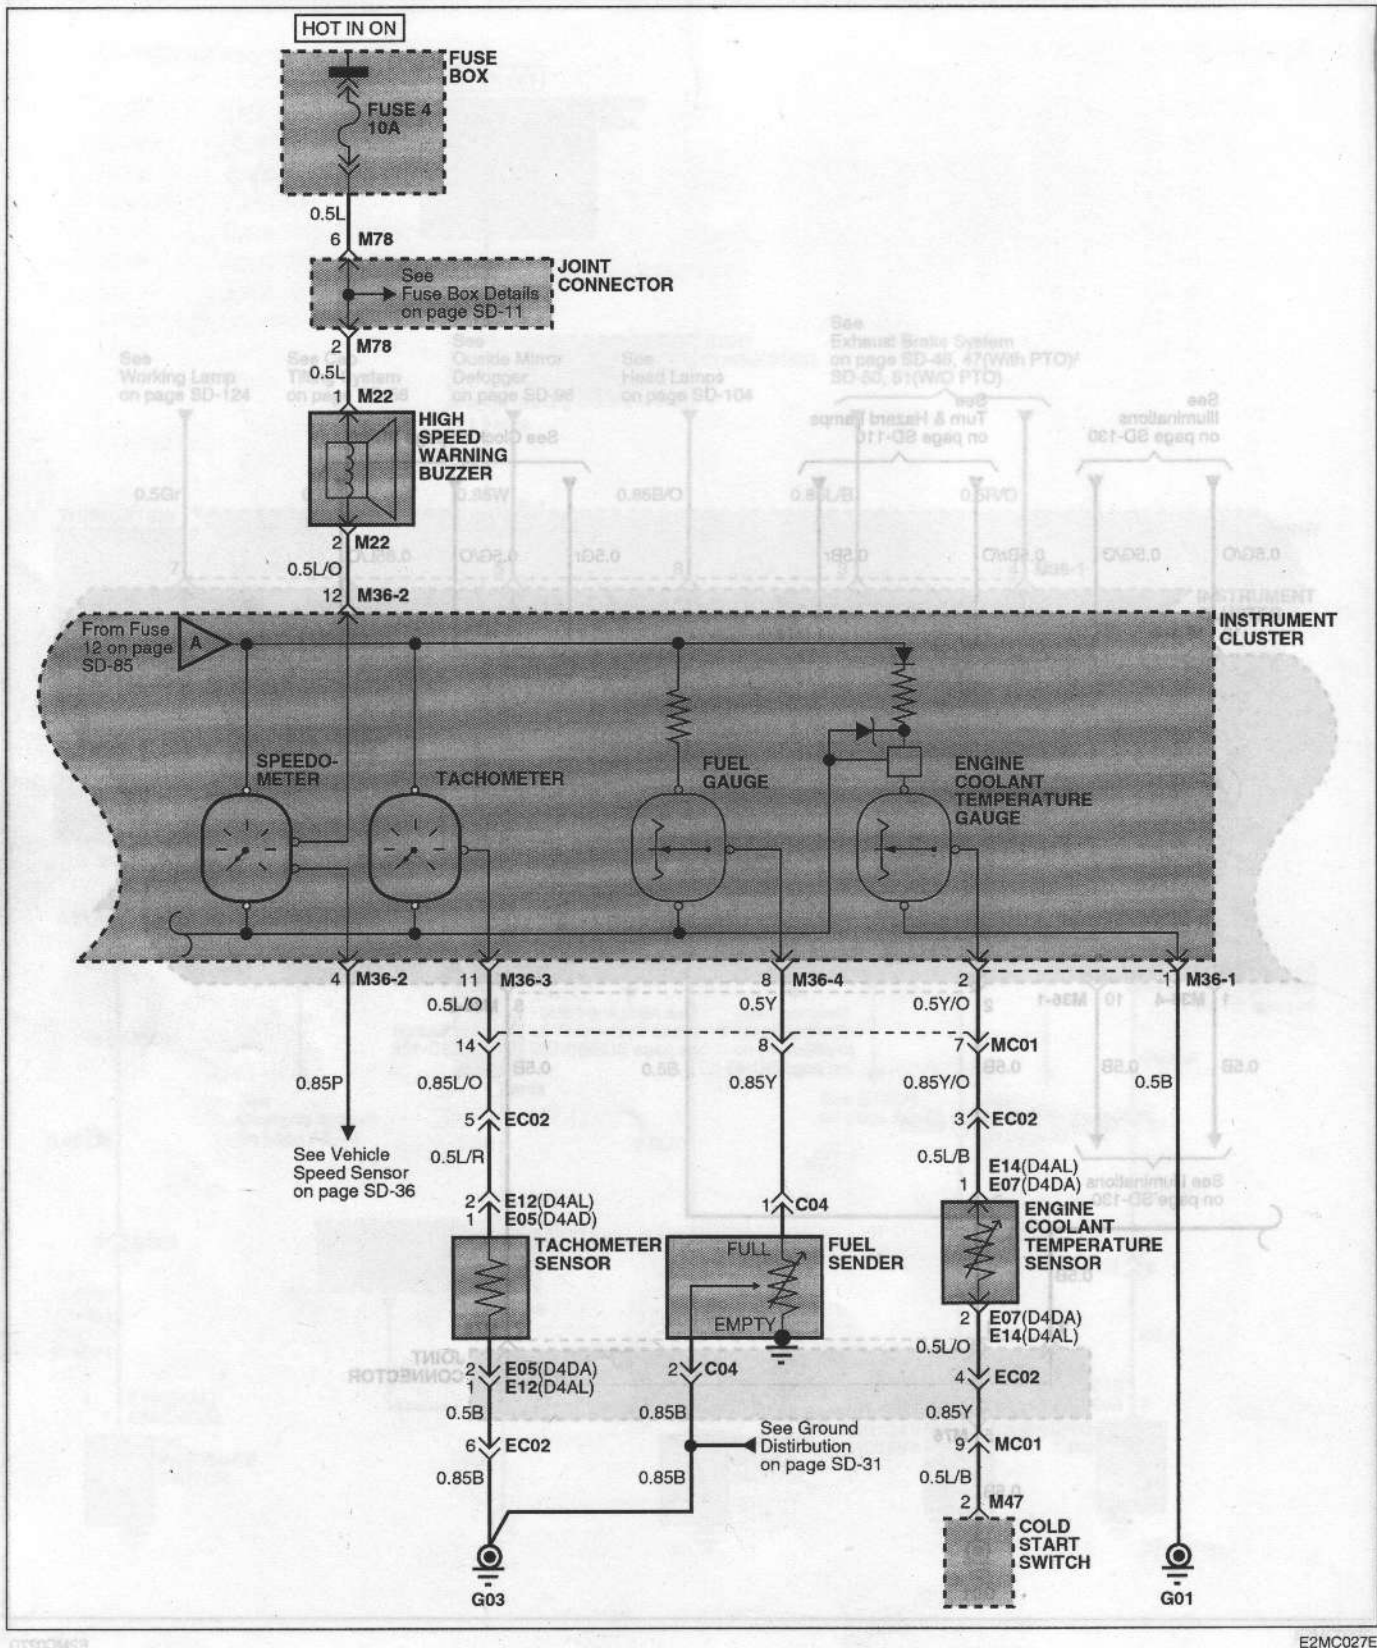

E2MC027E

COMPONENT LOCATION INDEX


Components		Location reference-page
C04	Fuel sender	CL-10
C16	Vacuum switch	CL-11
E05	Tachometer sensor (D4DA)	CL-9
E06	Oil pressure switch (D4DA)	CL-9
E07	Engine coolant temperature sensor (D4DA)	CL-9
E12	Tachometer sensor (D4AL)	CL-9
E13	Oil pressure switch (D4AL)	CL-9
E14	Engine coolant temperature sensor (D4AL)	CL-9
M22	High speed warning buzzer	CL-2
M25	Joint connector	CL-2
M36-1	Instrument cluster	CL-3
M36-2	Instrument cluster	CL-3
M36-3	Instrument cluster	CL-3
M36-4	Instrument cluster	CL-3
M38	Joint connector	CL-4
M46	Brake fluid level sensor	CL-4
M47	Cold start switch	CL-4
M76	Joint connector	CL-6
M78	Joint connector	CL-6
M103	Parking brake switch	CL-7
Connectors		
EC02		CL-9
MC01		CL-8
MC02		CL-8
MM01		CL-8
Grounds		
G01		CL-16
G03		CL-16

TACHOGRAPH


E2MC0280

TACHOGRAPH (1) PAGES (5)

COMPONENT LOCATION INDEX

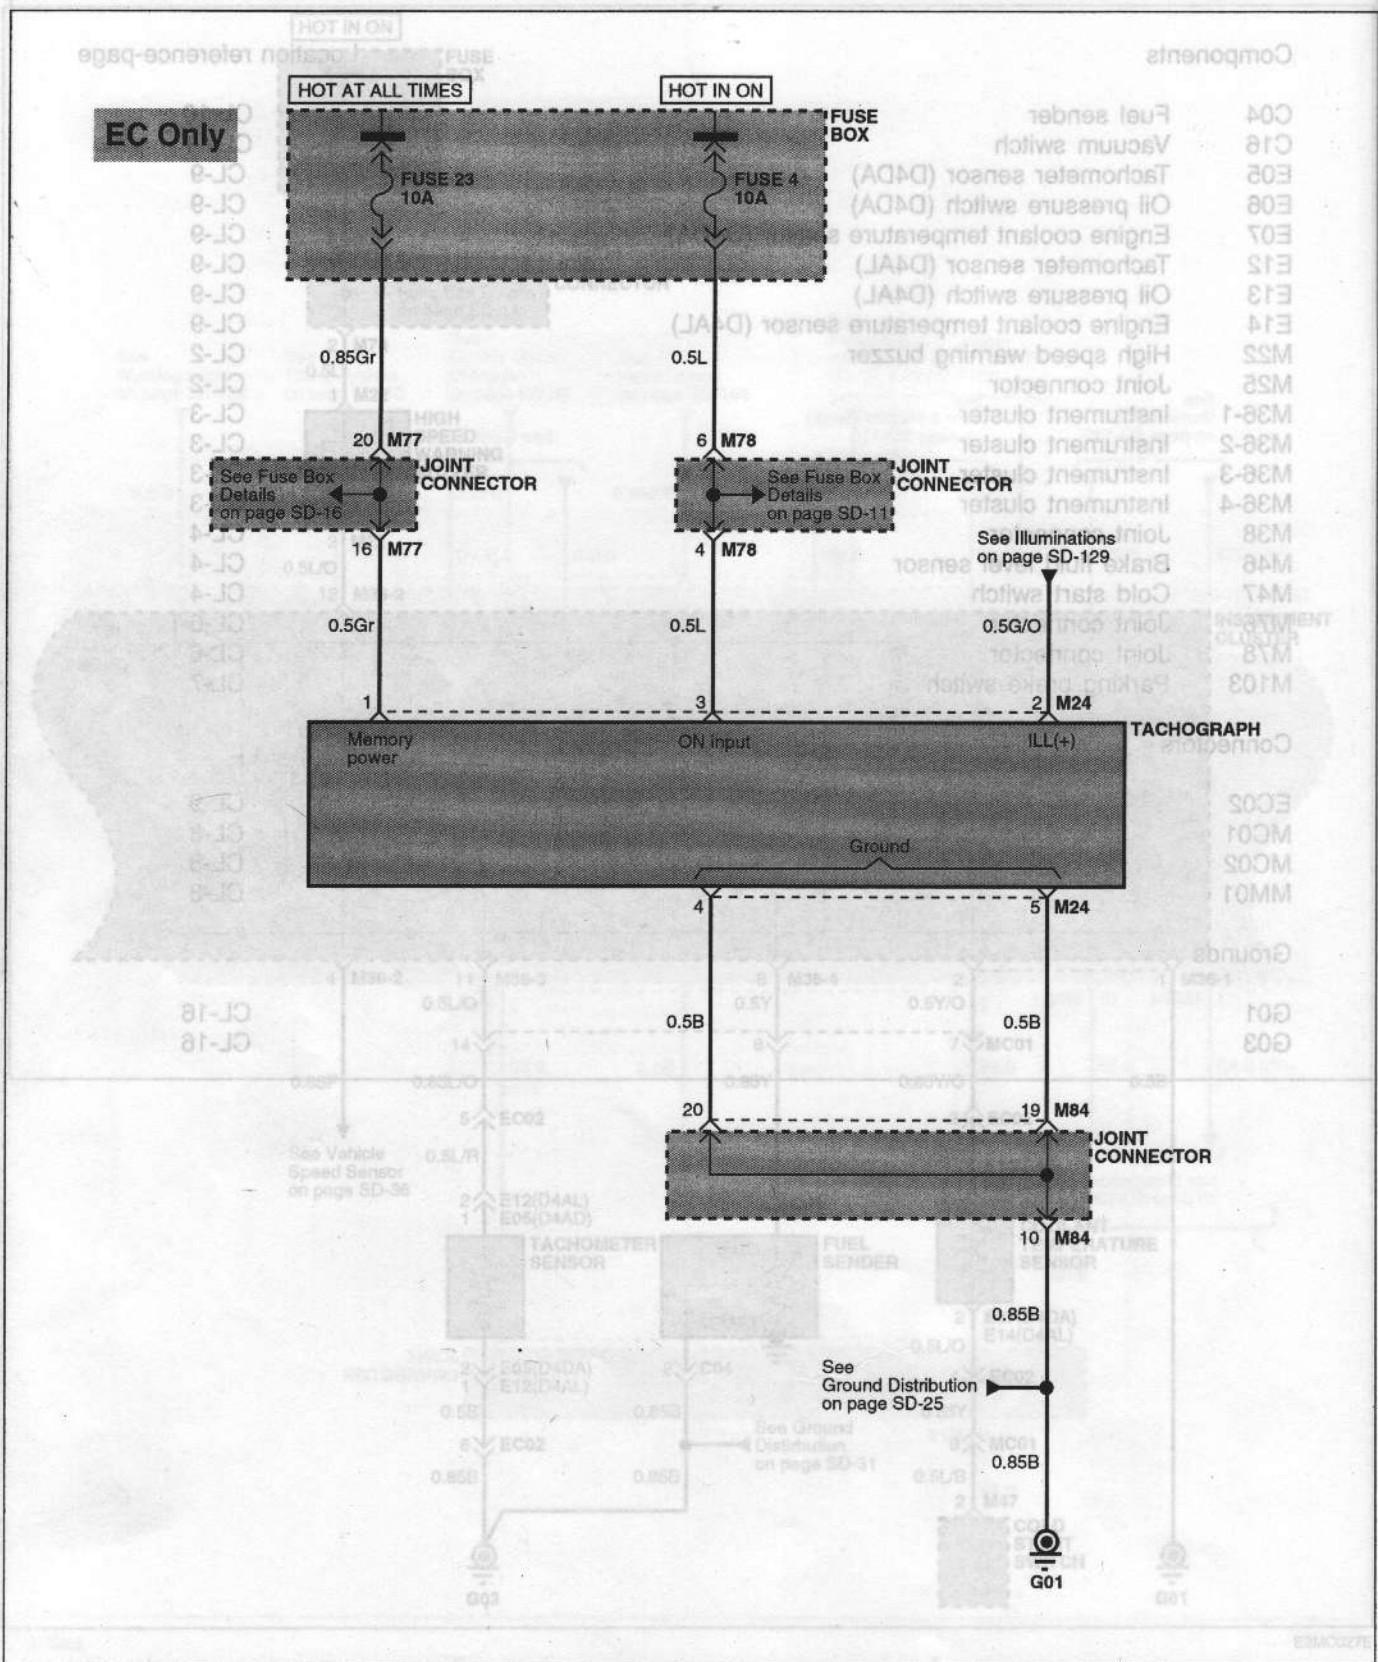

TACHOGRAPH (2)

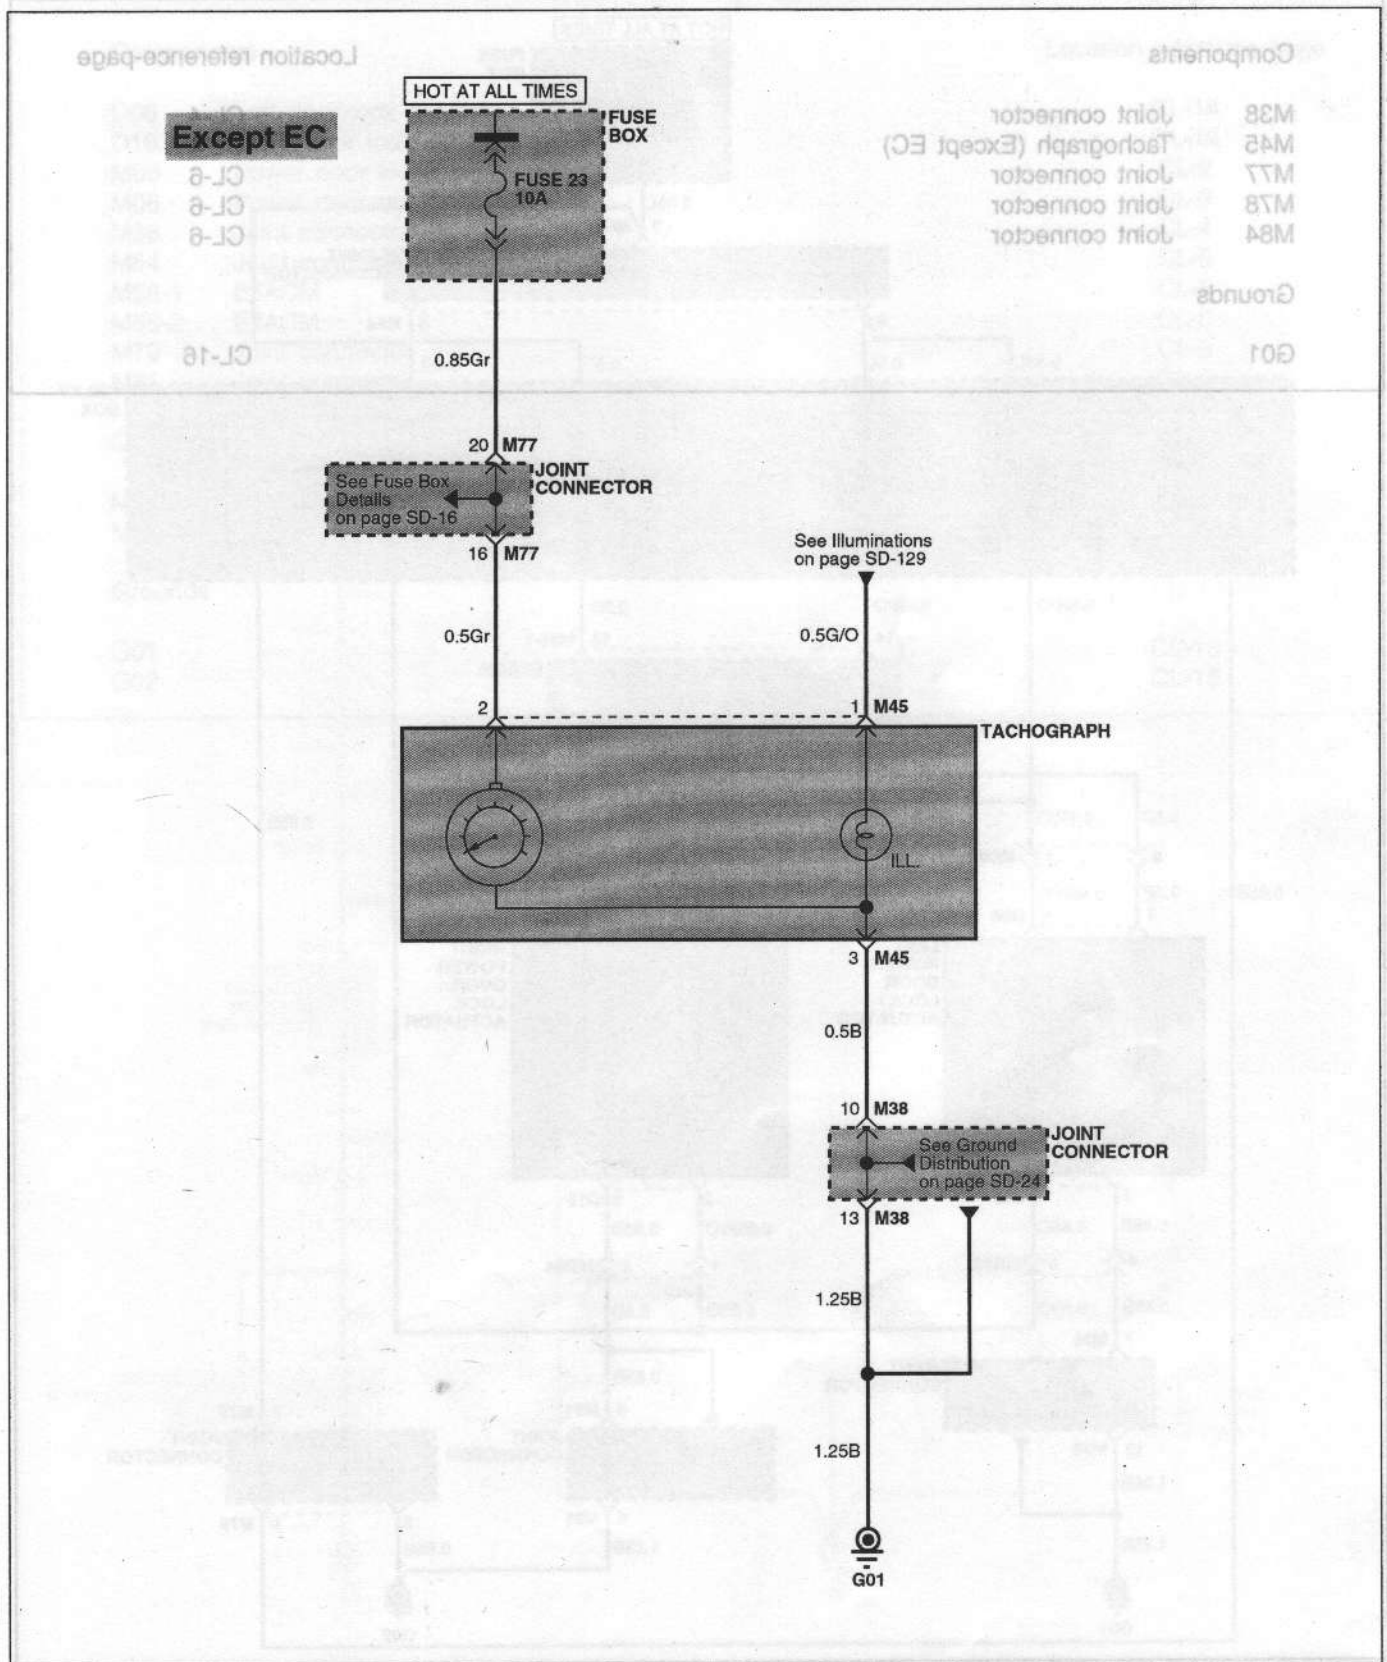

E2MC028B


COMPONENT LOCATION INDEX

Components		Location reference-page
M38	Joint connector	CL-4
M45	Tachograph (Except EC)	CL-4
M77	Joint connector	CL-6
M78	Joint connector	CL-6
M84	Joint connector	CL-6
Grounds		
G01		CL-16

POWER DOOR LOCKS

E2MC0290

POWER DOOR LOCKS (1) INDEX

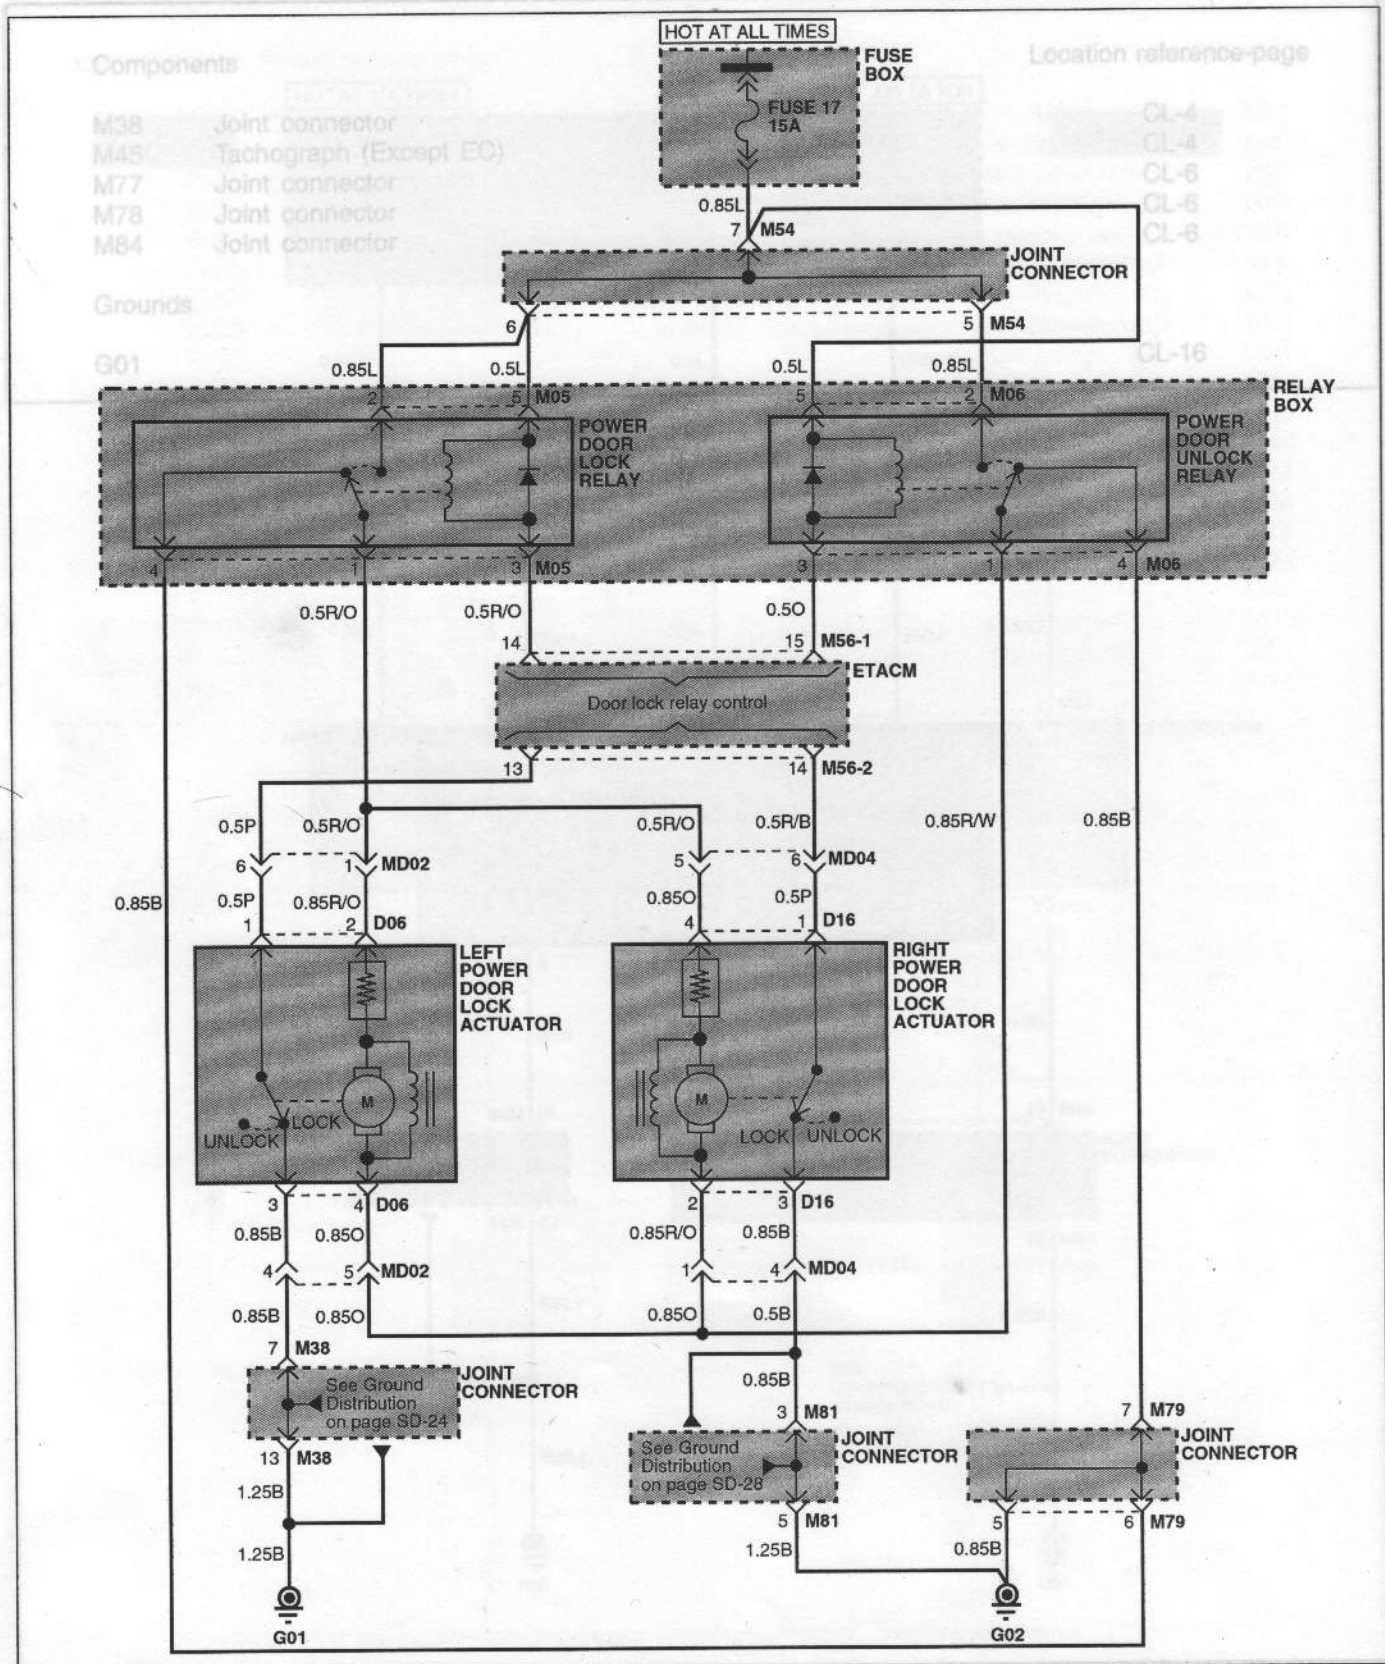

E2MC029A

COMPONENT LOCATION INDEX

Components		Location reference-page
D06	Left door lock actuator	CL-14
D16	Right door lock actuator	CL-14
M05	Power door lock relay	CL-2
M06	Power door unlock relay	CL-2
M38	Joint connector	CL-4
M54	Joint connector	CL-5
M56-1	ETACM	CL-5
M56-2	ETACM	CL-5
M79	Joint connector	CL-6
M81	Joint connector	CL-6
Connectors		
MD02		CL-8
MD04		CL-8
Grounds		
G01		CL-16
G02		CL-16

E2MC0300

COMPONENT LOCATION INDEX




COMPONENT LOCATION INDEX

Components		Location reference-page
D02	Left outside mirror defogger	CL-14
D12	Right outside mirror defogger	CL-14
M07	Outside mirror defogger relay	CL-2
M36-1	Instrument cluster	CL-3
M36-2	Instrument cluster	CL-3
M56-1	ETACM	CL-5
M56-2	ETACM	CL-5
M65	Outside mirror defogger switch	CL-5
M76	Joint connector	CL-6
M80	Joint connector	CL-6
M81	Joint connector	CL-6
M84	Joint connector	CL-6
Connectors		
MD01		CL-8
MD03		CL-8
Grounds		
G01		CL-16
G02		CL-16

E2MC0310

 COMPONENT LOCATION INDEX



COMPONENT LOCATION INDEX

Components		Location reference-page
D01	Left power window motor	CL-14
D05	Power window main switch	CL-14
D11	Right power window motor	CL-14
D15	Power window sub switch	CL-14
M04	Power window relay	CL-2
M56-1	ETACM	CL-5
M81	Joint connector	CL-6
Connectors		
MD01		CL-8
MD03		CL-8
Grounds		
G01		CL-16
G02		CL-16

AUDIO (1)



COMPONENT LOCATION INDEX


Components		Location reference-page
D03	Left speaker	CL-14
D13	Right speaker	CL-14
M26	Audio	CL-2
M77	Joint connector	CL-6
Connectors		
MD02		CL-8
MD04		CL-8
Grounds		
G01		CL-16

E2MC0330

COMPONENT LOCATION INDEX



COMPONENT LOCATION INDEX

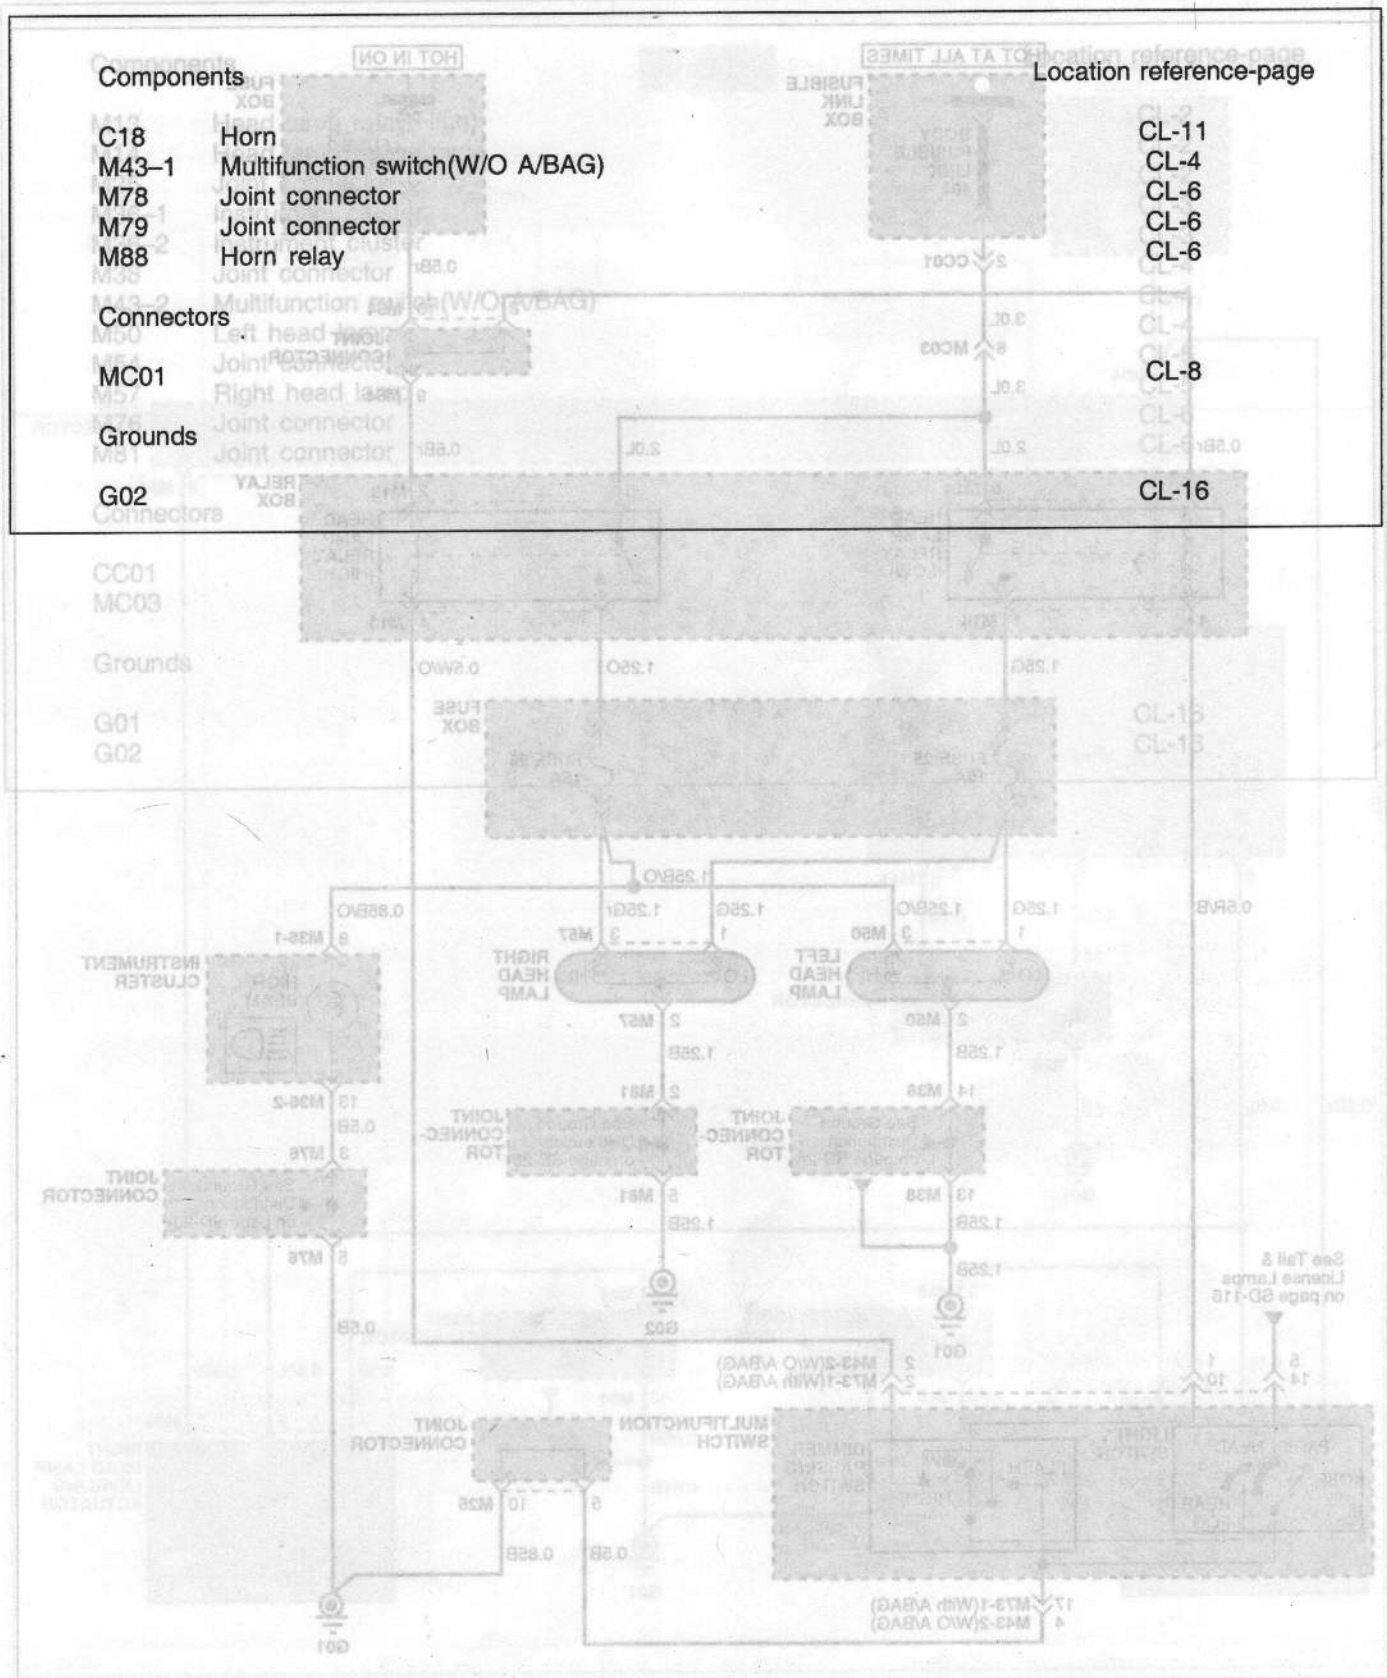

E2MC0340

COMPONENT LOCATION INDEX



COMPONENT LOCATION INDEX


Components		Location reference-page
M13	Head lamp relay(High)	CL-2
M14	Head lamp relay(Low)	CL-2
M25	Joint connector	CL-2
M36-1	Instrument cluster	CL-3
M36-2	Instrument cluster	CL-3
M38	Joint connector	CL-4
M43-2	Multifunction switch(W/O A/BAG)	CL-4
M50	Left head lamp	CL-4
M54	Joint connector	CL-5
M57	Right head lamp	CL-5
M76	Joint connector	CL-6
M81	Joint connector	CL-6
Connectors		
CC01		CL-13
MC03		CL-8
Grounds		
G01		CL-16
G02		CL-16

HEAD LAMP LEVELING DEVICE

E2MC0350


HEAD LAMP LEVELING DEVICE (1)

COMPONENT LOCATION INDEX

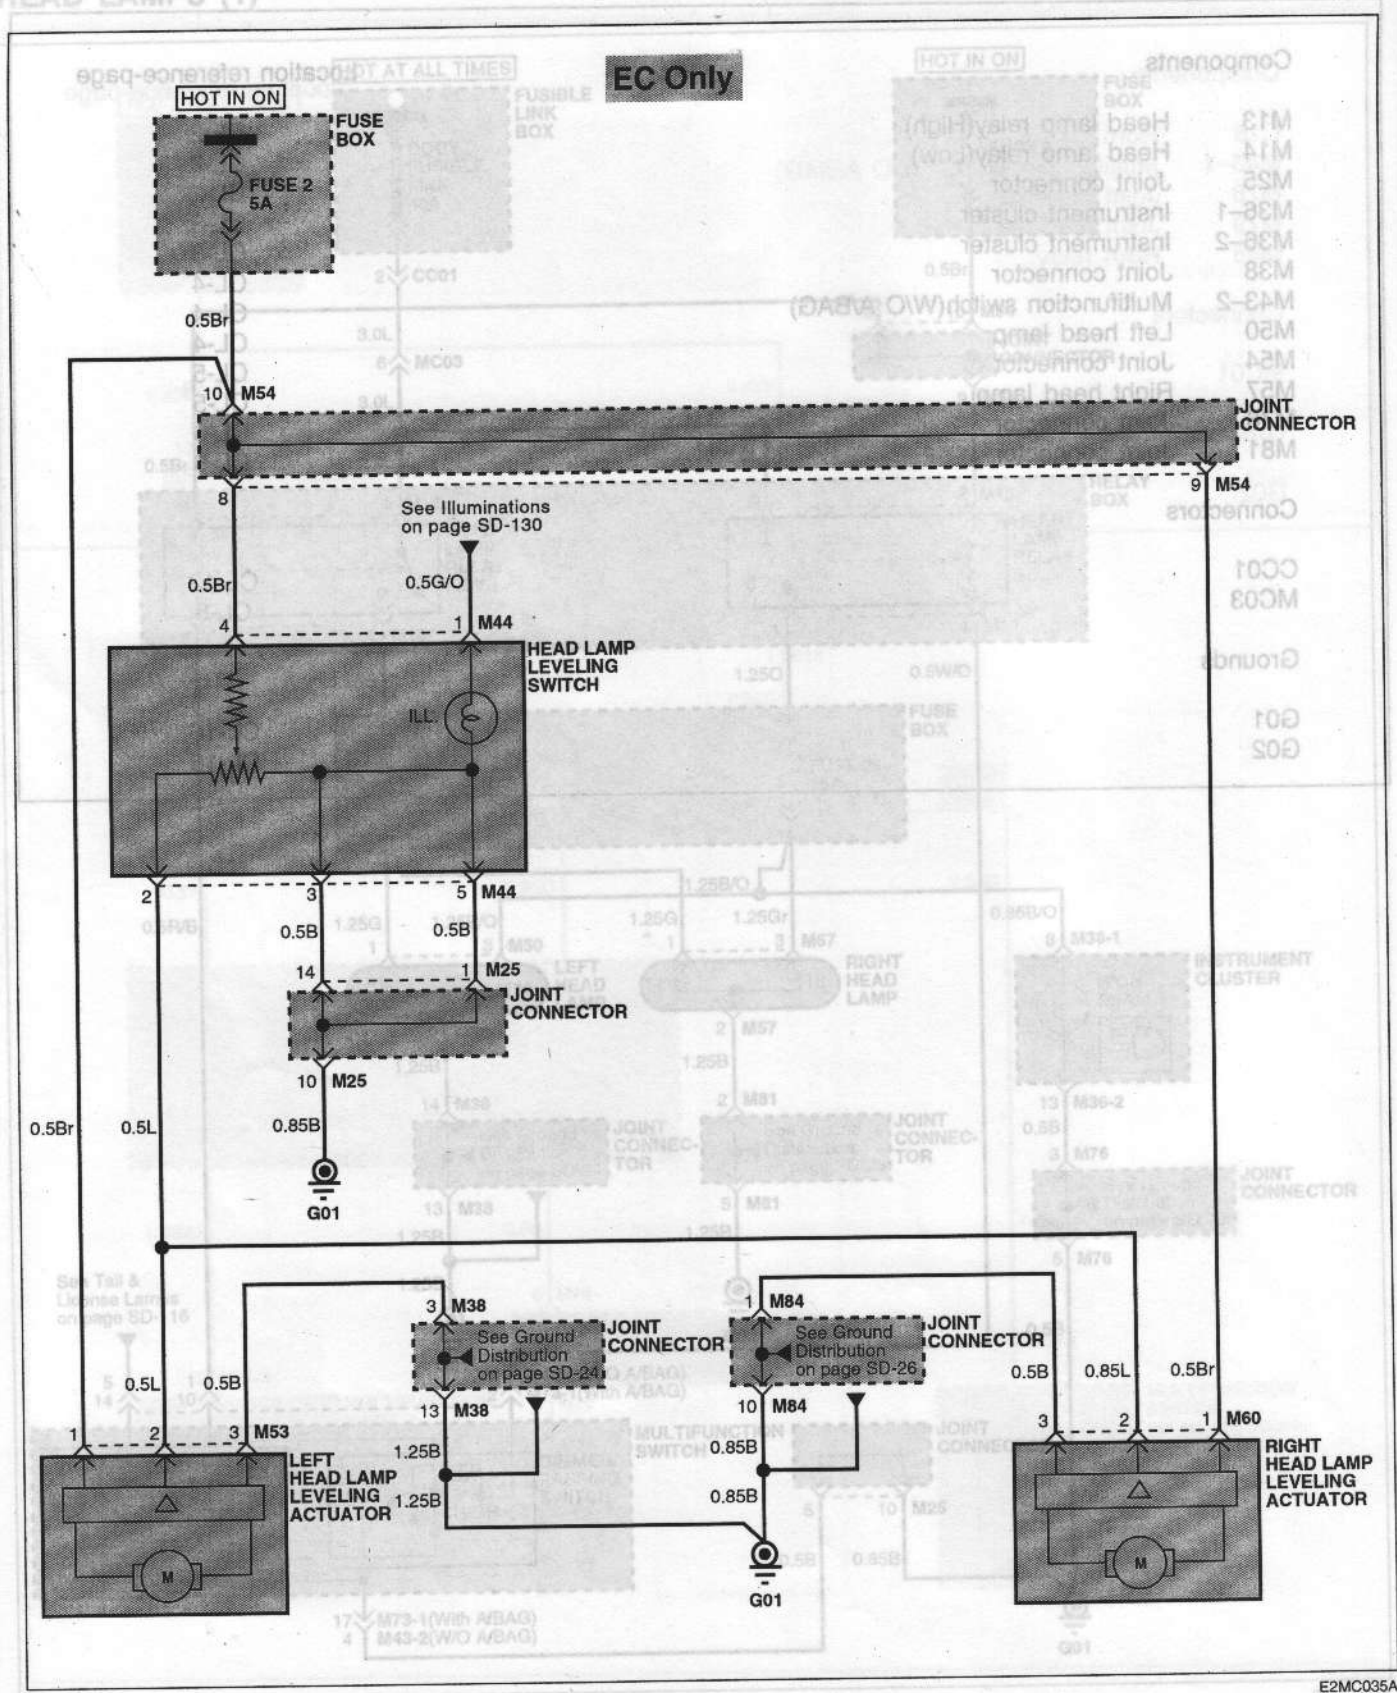

E2MC035A

COMPONENT LOCATION INDEX

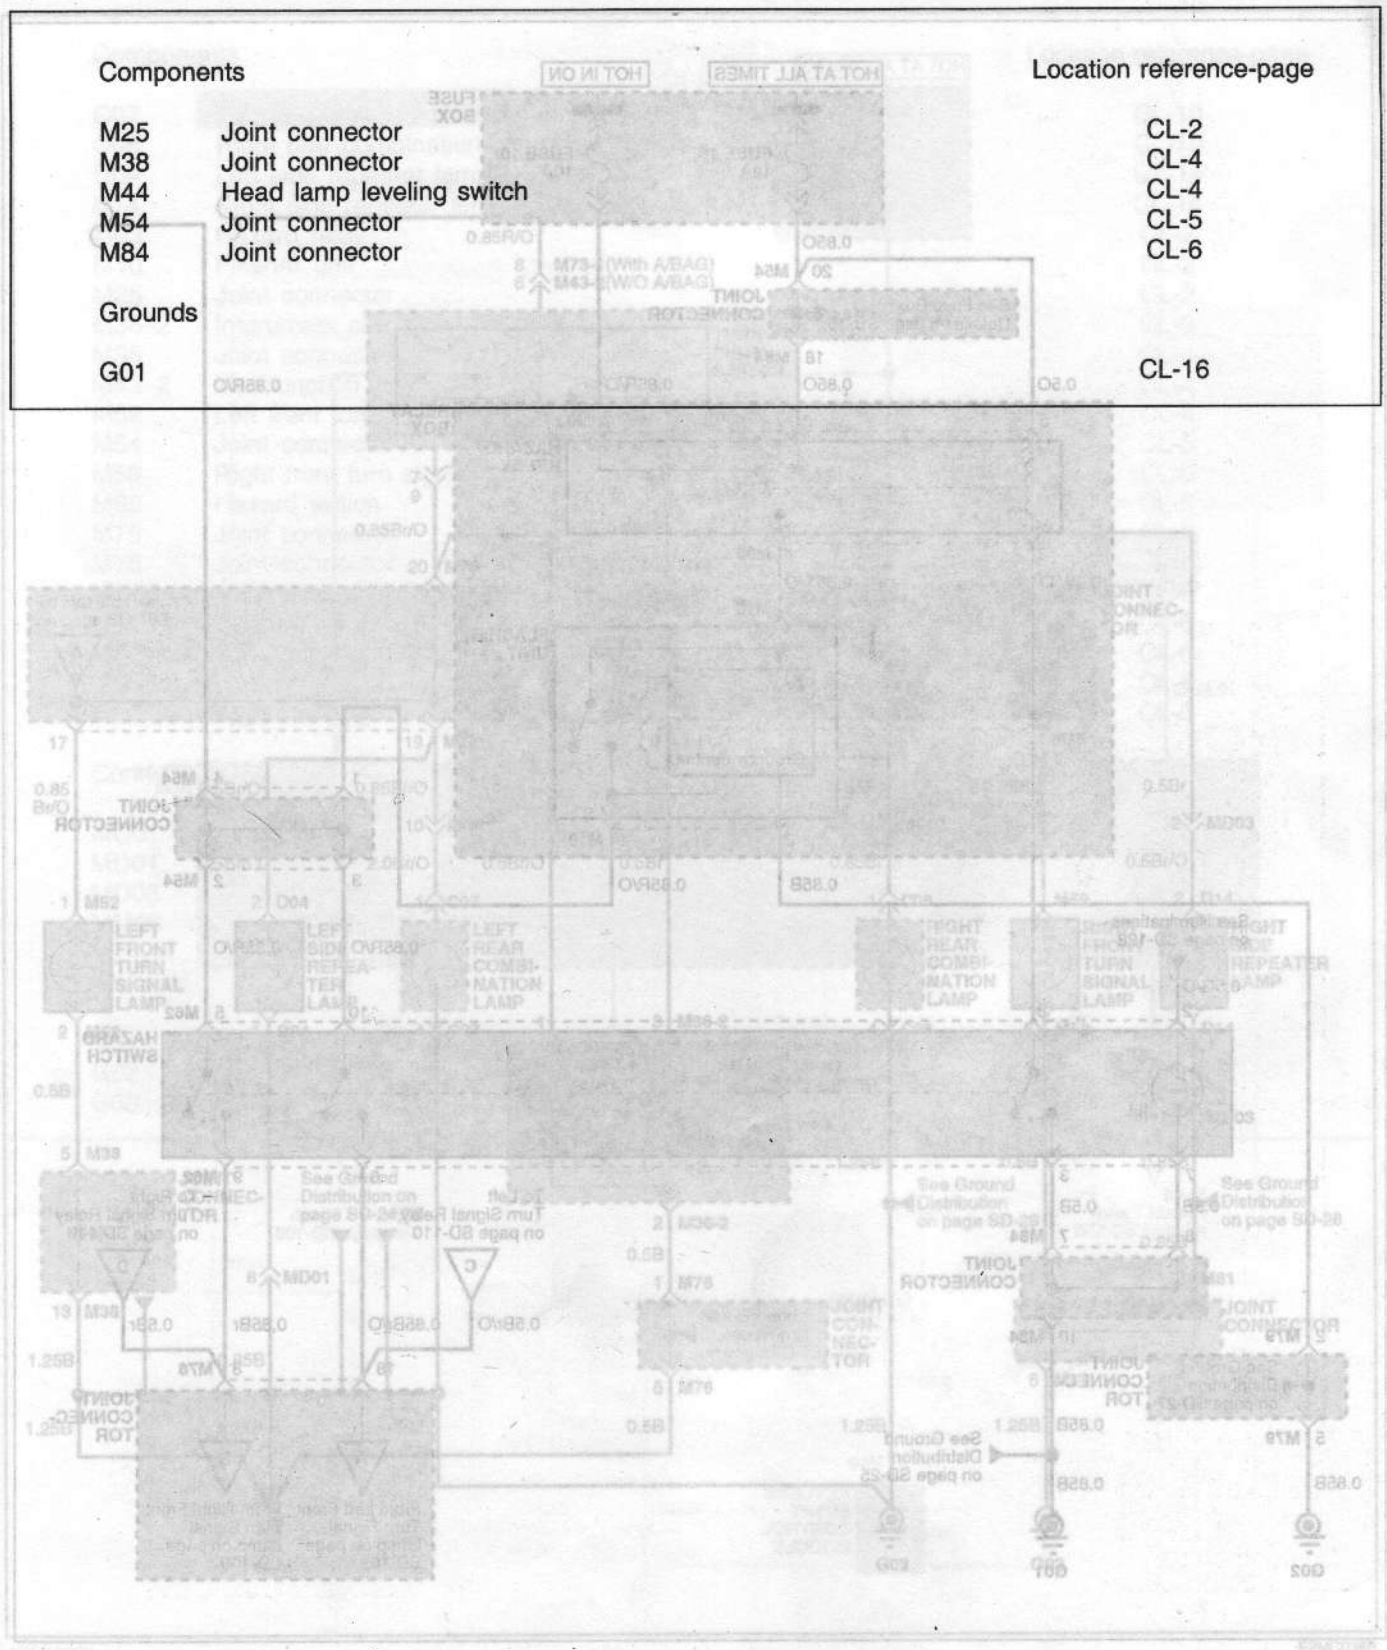


E2MC0360

COMPONENT LOCATION INDEX




TURN & HAZARD LAMPS (2)

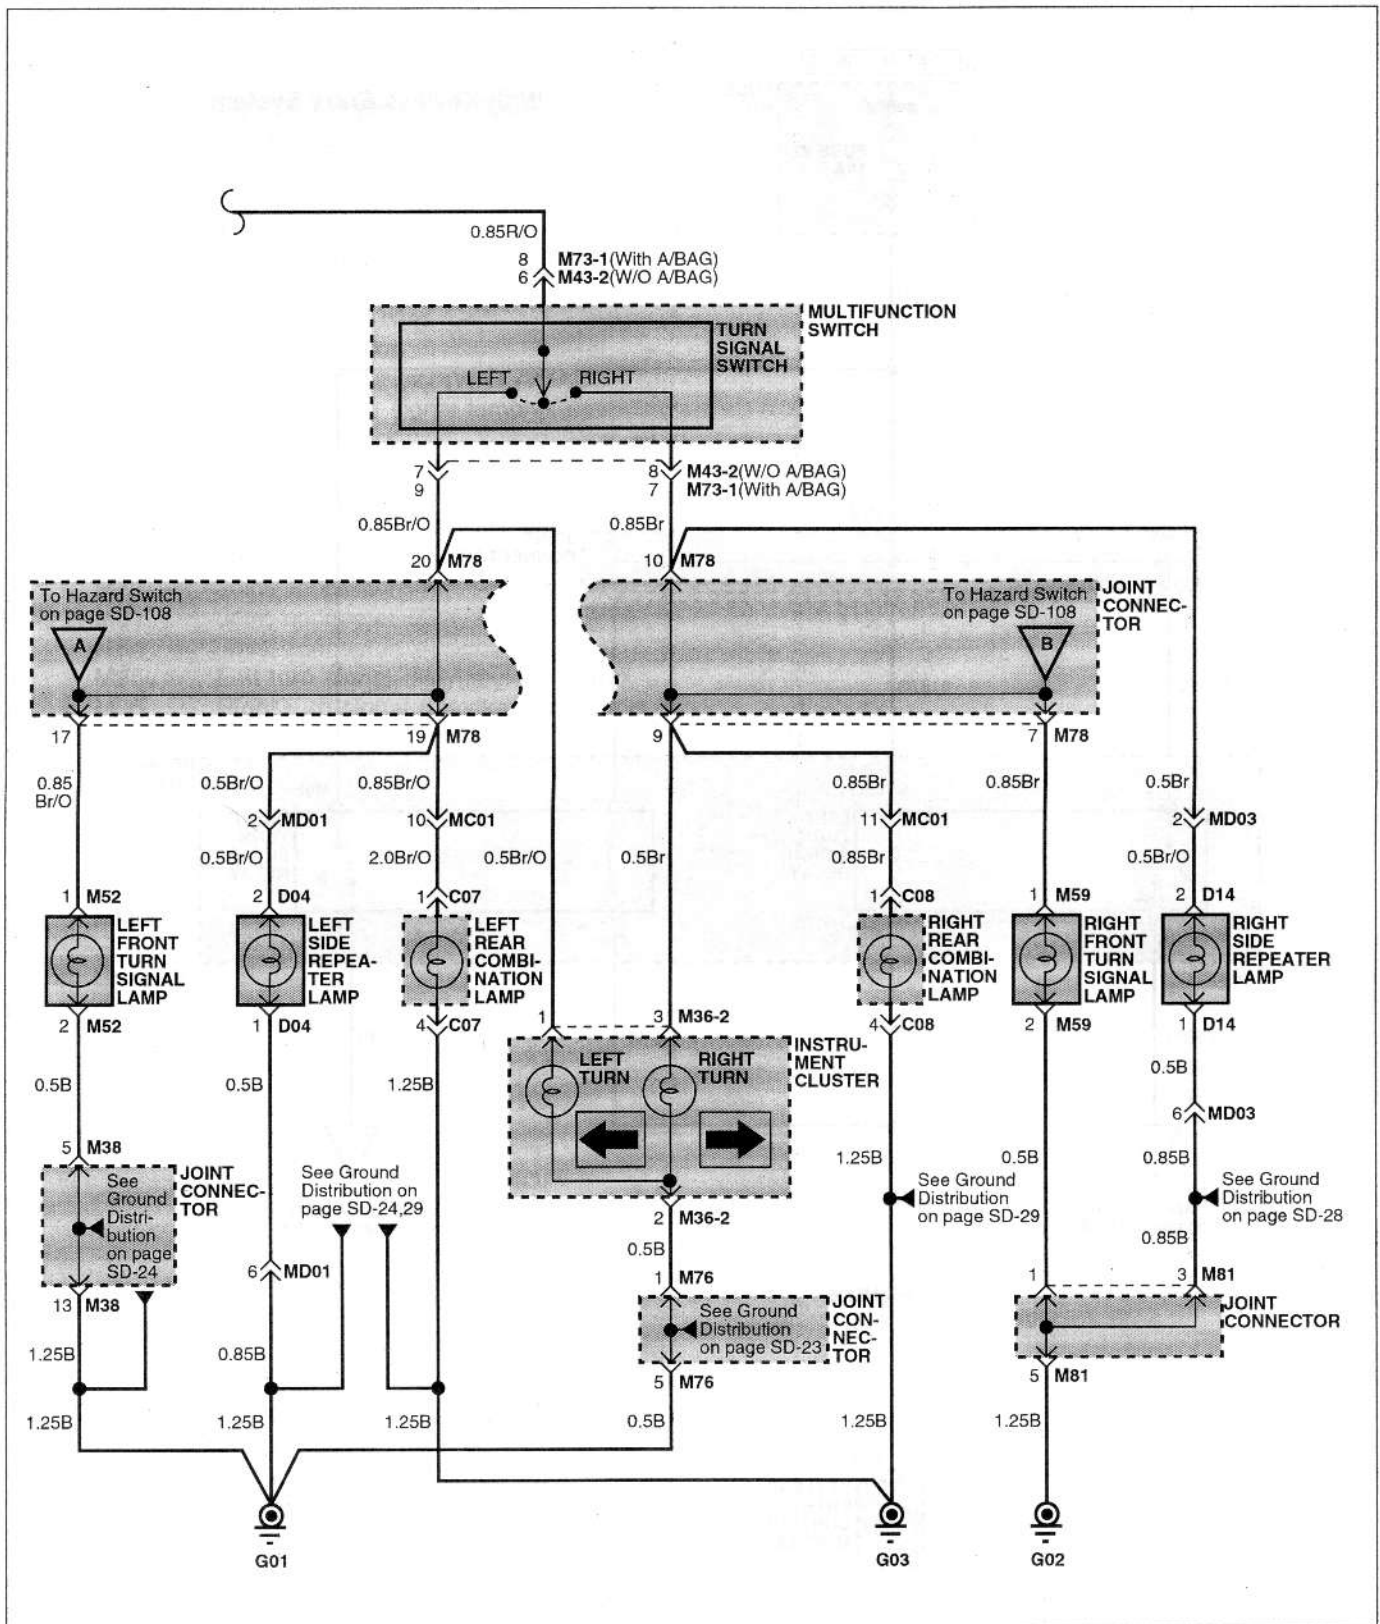

E2MC036B

TURN & HAZARD LAMPS (3)

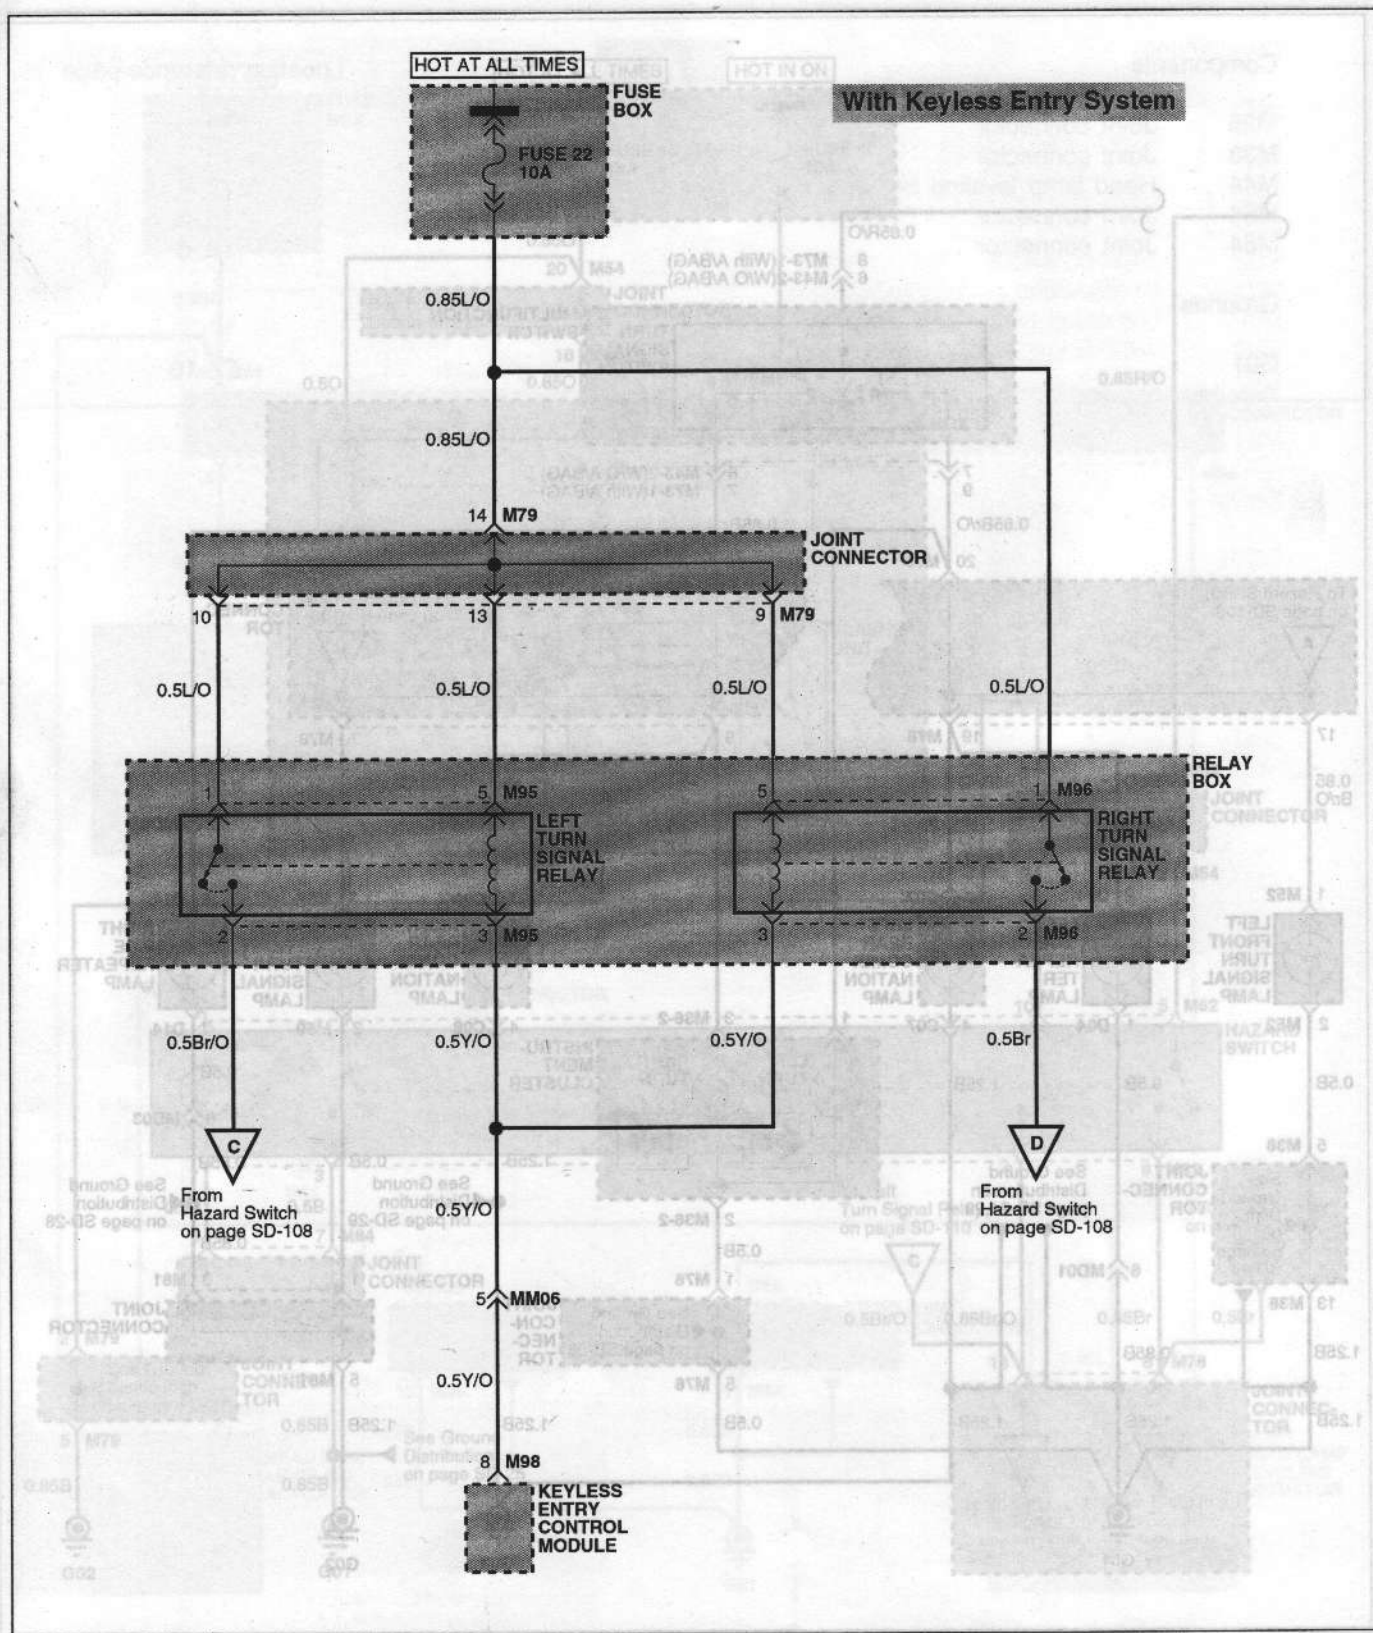

COMPONENT LOCATION INDEX

Components		Location reference-page
C07	Left rear combination lamp	CL-10
C08	Right rear combination lamp	CL-10
D04	Left side repeater lamp	CL-14
D14	Right side repeater lamp	CL-14
M03	Hazard relay	CL-2
M10	Flasher unit	CL-2
M25	Joint connector	CL-2
M36-2	Instrument cluster	CL-3
M38	Joint connector	CL-4
M43-2	Multifunction switch(W/O A/BAG)	CL-4
M52	Left front turn signal lamp	CL-4
M54	Joint connector	CL-5
M59	Right front turn signal lamp	CL-5
M62	Hazard switch	CL-5
M76	Joint connector	CL-6
M78	Joint connector	CL-6
M79	Joint connector	CL-6
M81	Joint connector	CL-6
M84	Joint connector	CL-6
M95	Left turn signal relay(keyless entry)	CL-6
M96	Right turn signal relay(keyless entry)	CL-6
Connectors		
MC01		CL-8
MD01		CL-8
MD03		CL-8
MM06		CL-8
Grounds		
G01		CL-16
G02		CL-16
G03		CL-16

E2MC0370

COMPONENT LOCATION INDEX



COMPONENT LOCATION INDEX

Components	Location reference-page
C17 Left fog lamp C19 Right fog lamp M01-2 Front fog lamp relay M02 Tail lamp relay M25 Joint connector M43-2 Multifunction switch(W/O A/BAG) M63 Front fog lamp switch M77 Joint connector M84 Joint connector	CL-11 CL-11 CL-2 CL-2 CL-2 CL-4 CL-5 CL-6 CL-6 CL-8
Connectors	
MC01	CL-8
MC03	CL-8
Grounds	
G01	CL-16
G03	CL-16

E2MC0380


COMPONENT LOCATION INDEX




TAIL & LICENSE LAMPS (1)

E2MC0390

TAIL & LICENSE LAMPS (1)

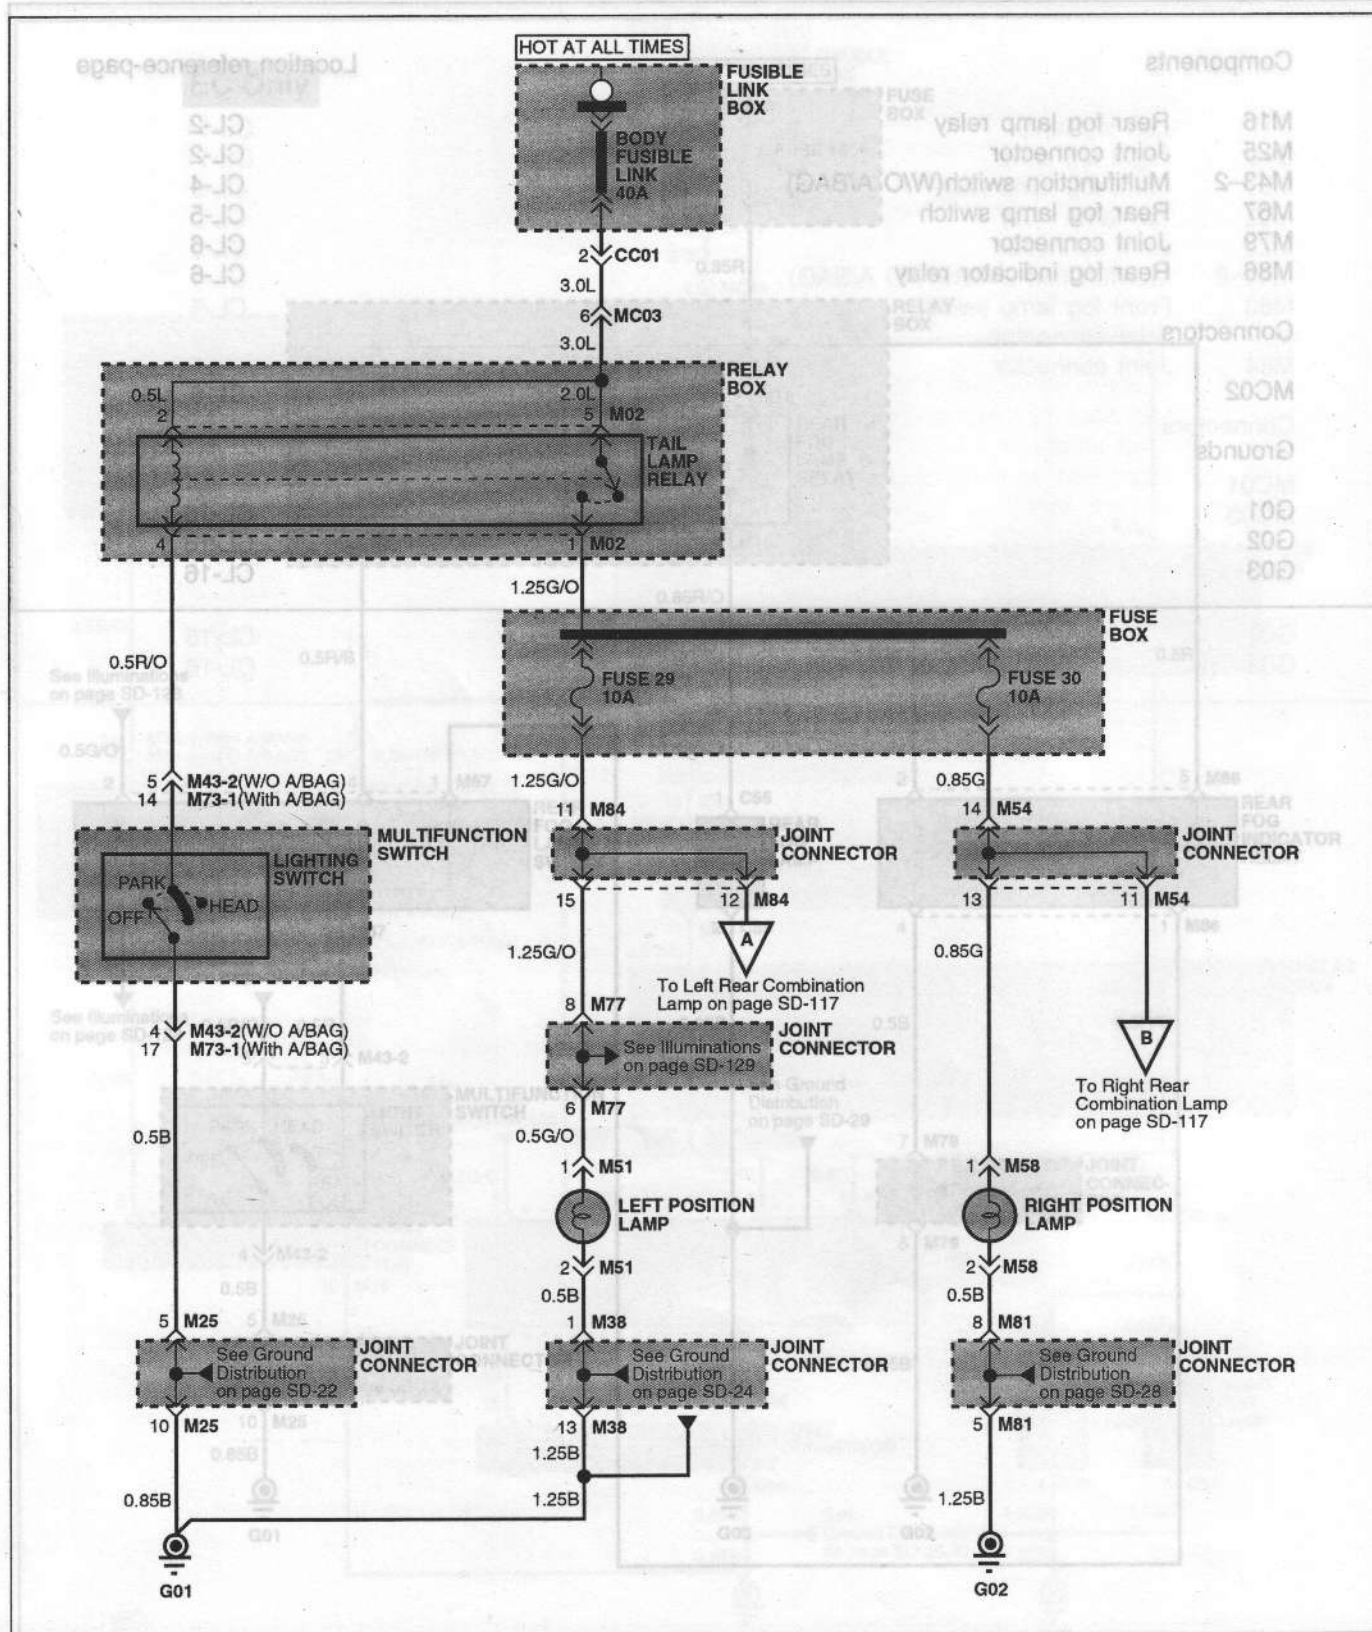

TAIL & LICENSE LAMPS (2)

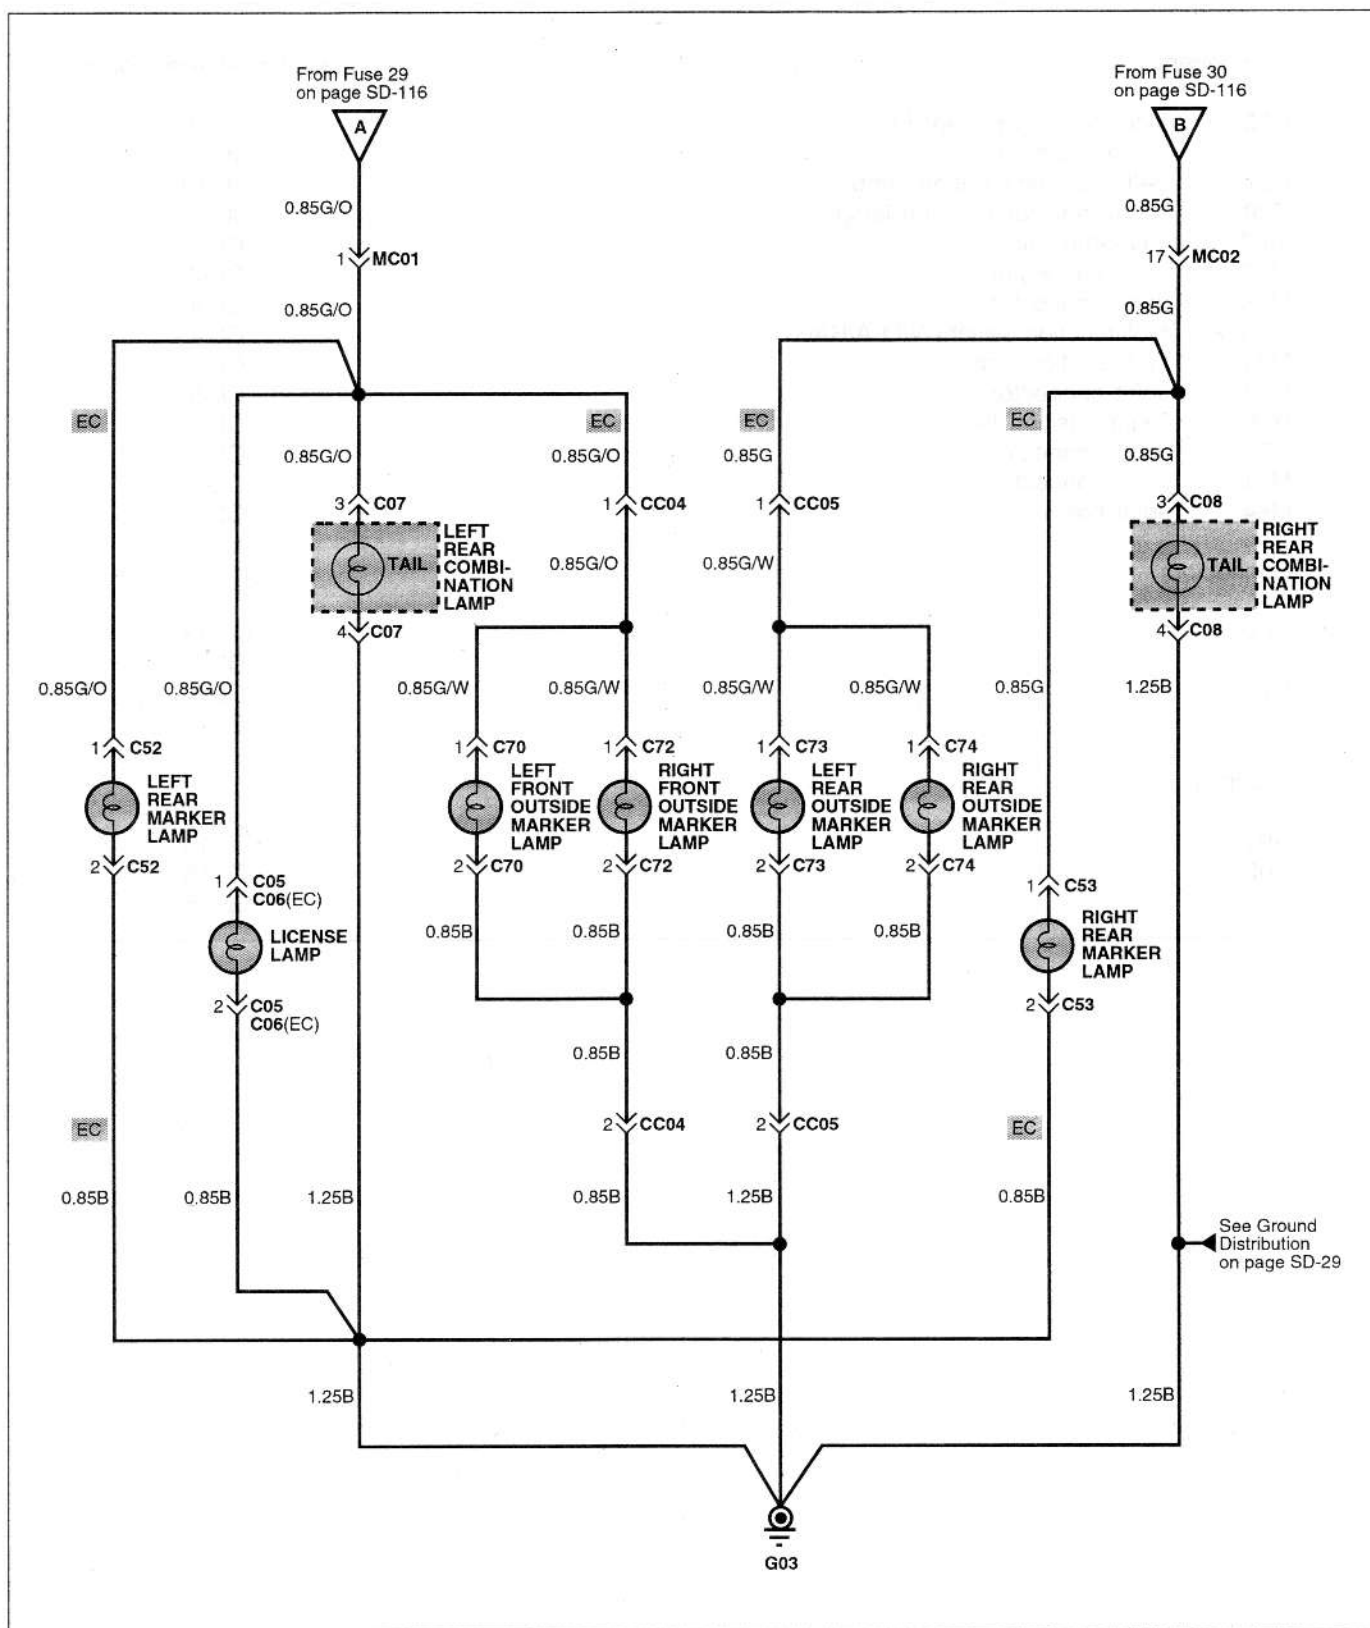

E2MC039B


COMPONENT LOCATION INDEX

Components		Location reference-page
C05	License lamp(Except EC)	CL-10
C06	License lamp(EC)	CL-10
C07	Left rear combination lamp	CL-10
C08	Right rear combination lamp	CL-10
M02	Tail lamp relay	CL-2
M25	Joint connector	CL-2
M38	Joint connector	CL-4
M43-2	Multifunction switch(W/O A/BAG)	CL-4
M51	Left position lamp	CL-4
M54	Joint connector	CL-5
M58	Right position lamp	CL-5
M77	Joint connector	CL-6
M81	Joint connector	CL-6
M84	Joint connector	CL-6
Connectors		
CC01		CL-13
MC01		CL-8
MC02		CL-8
MC03		CL-8
Grounds		
G01		CL-16
G02		CL-16
G03		CL-16

BACK-UP LAMPS

E2MC0400

BACK-UP LAMPS (1)

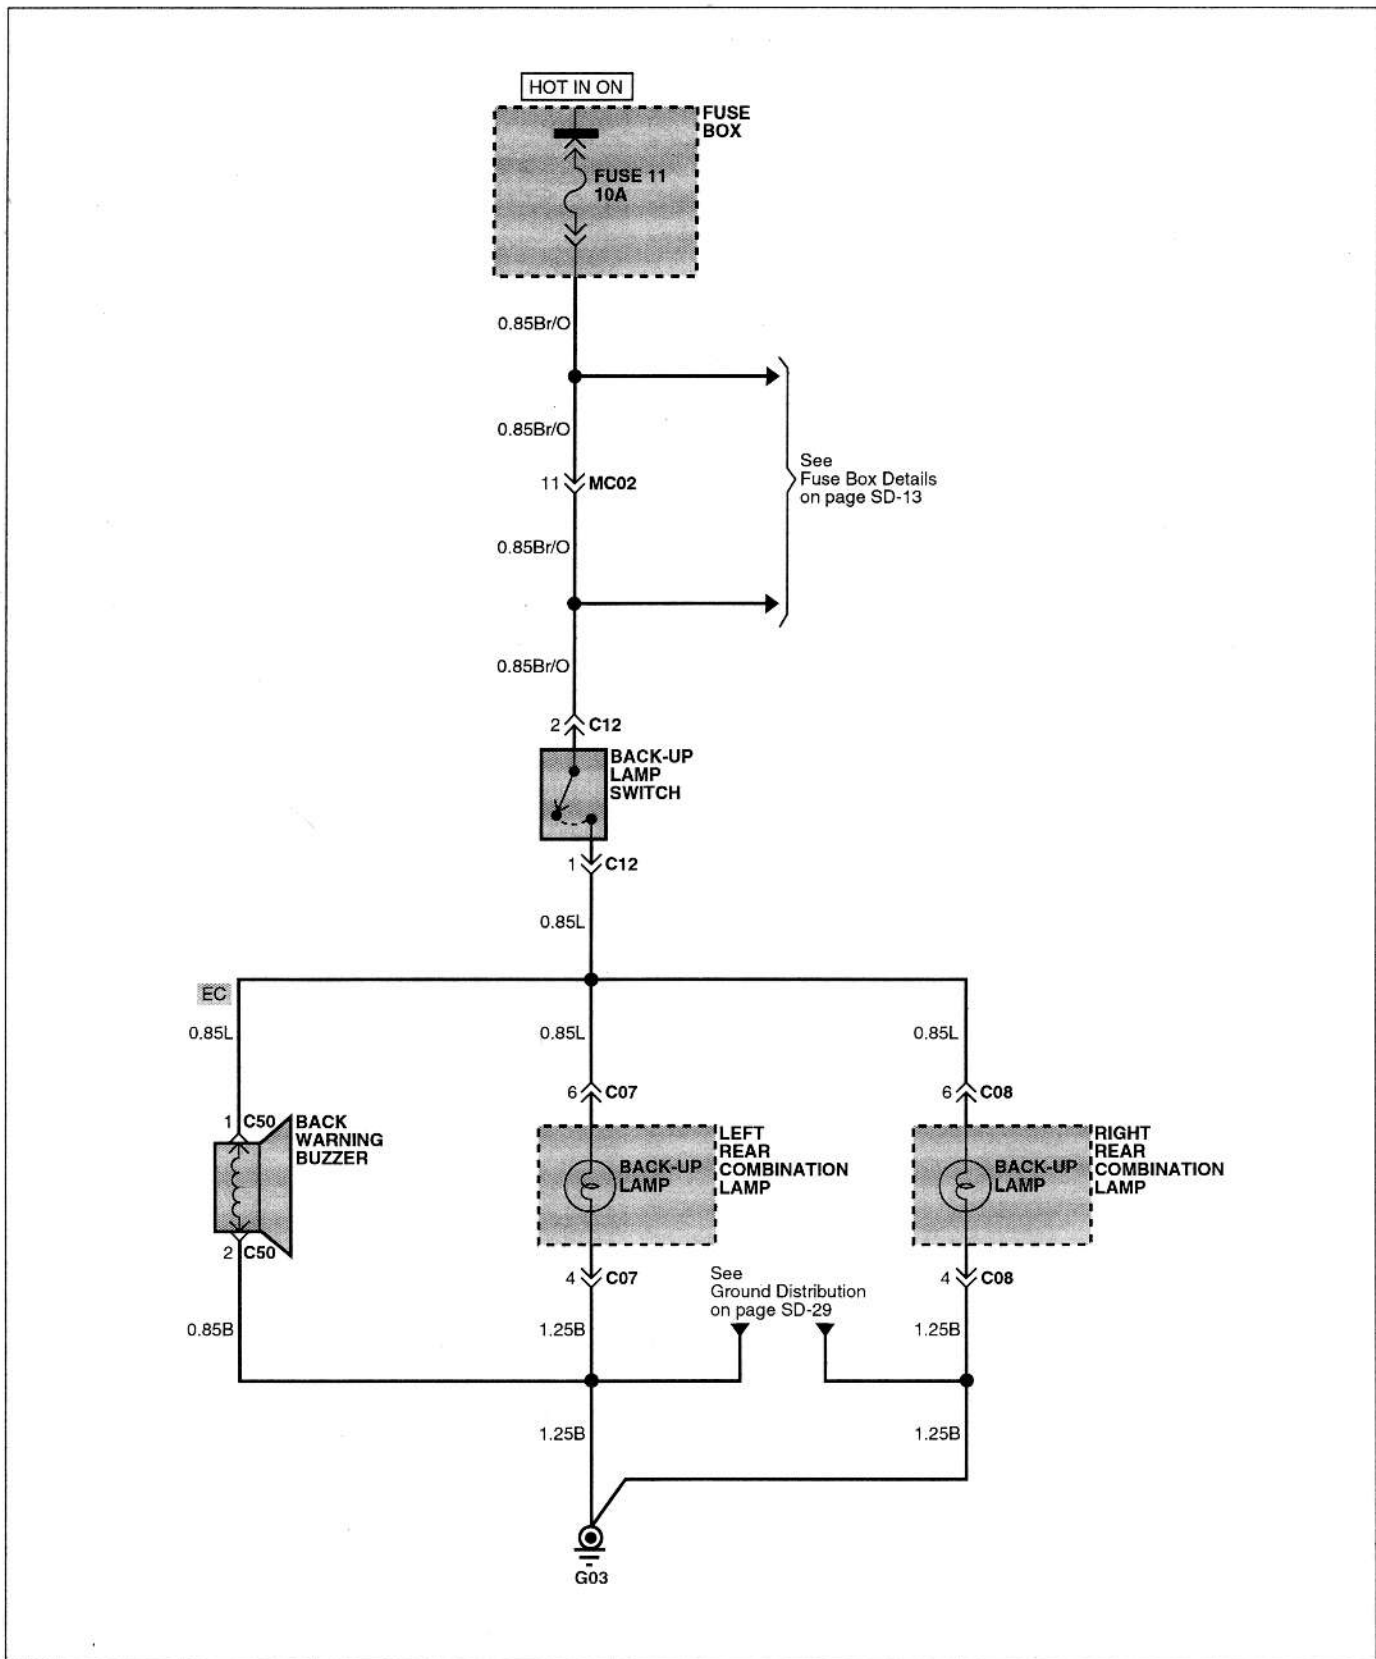

E2MC040A

COMPONENT LOCATION INDEX

Components

- C07 Left rear combination lamp
- C08 Right rear combination lamp
- C12 Back-up lamp switch
- M78 Joint connector

Connectors

- MC02
- MC01

Grounds

- G03

Location reference-page

CL-10

CL-10


CL-10

CL-6

CL-8

CL-8


CL-16

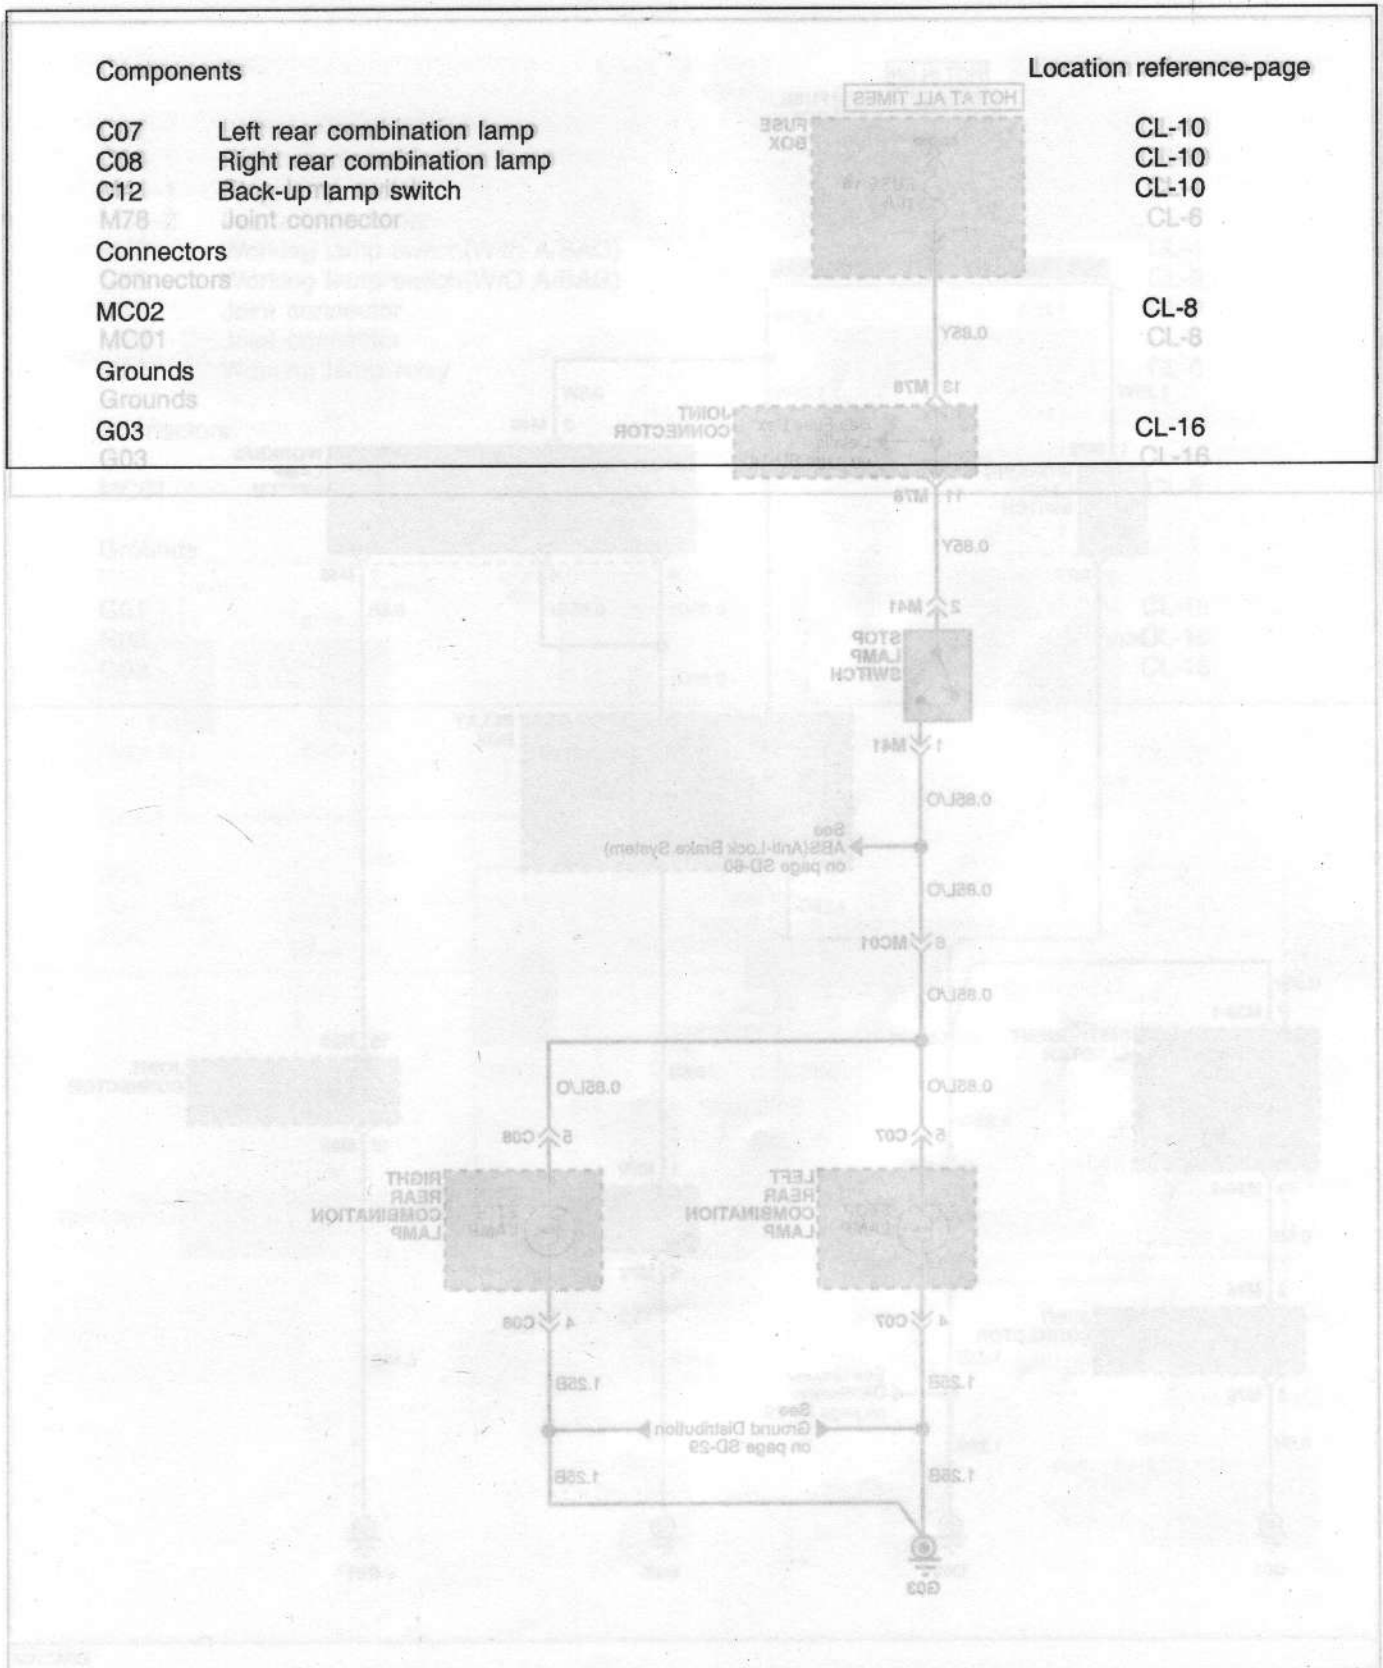

STOP LAMPS


E2MC0410

STOP LAMPS (1)

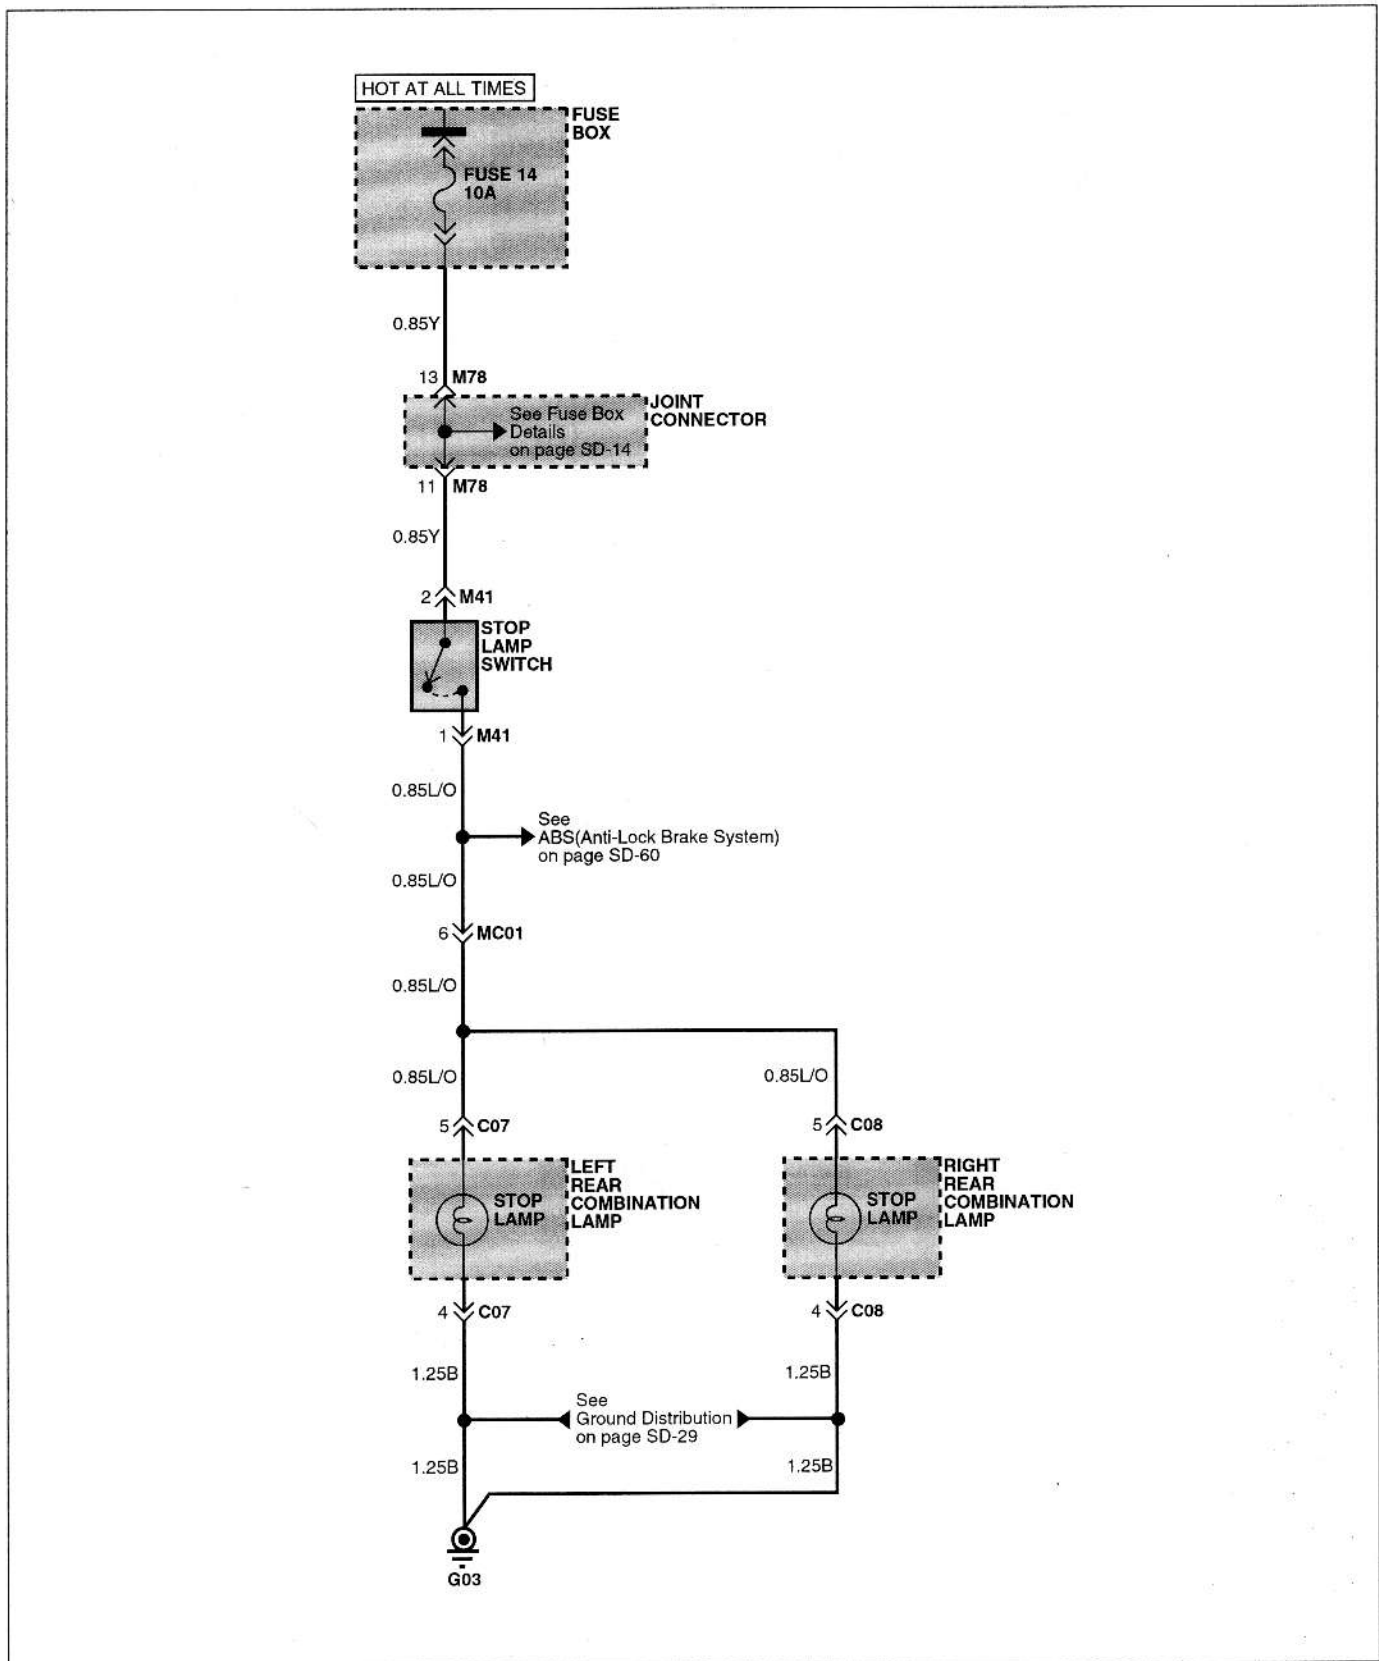

E2MC041A


COMPONENT LOCATION INDEX

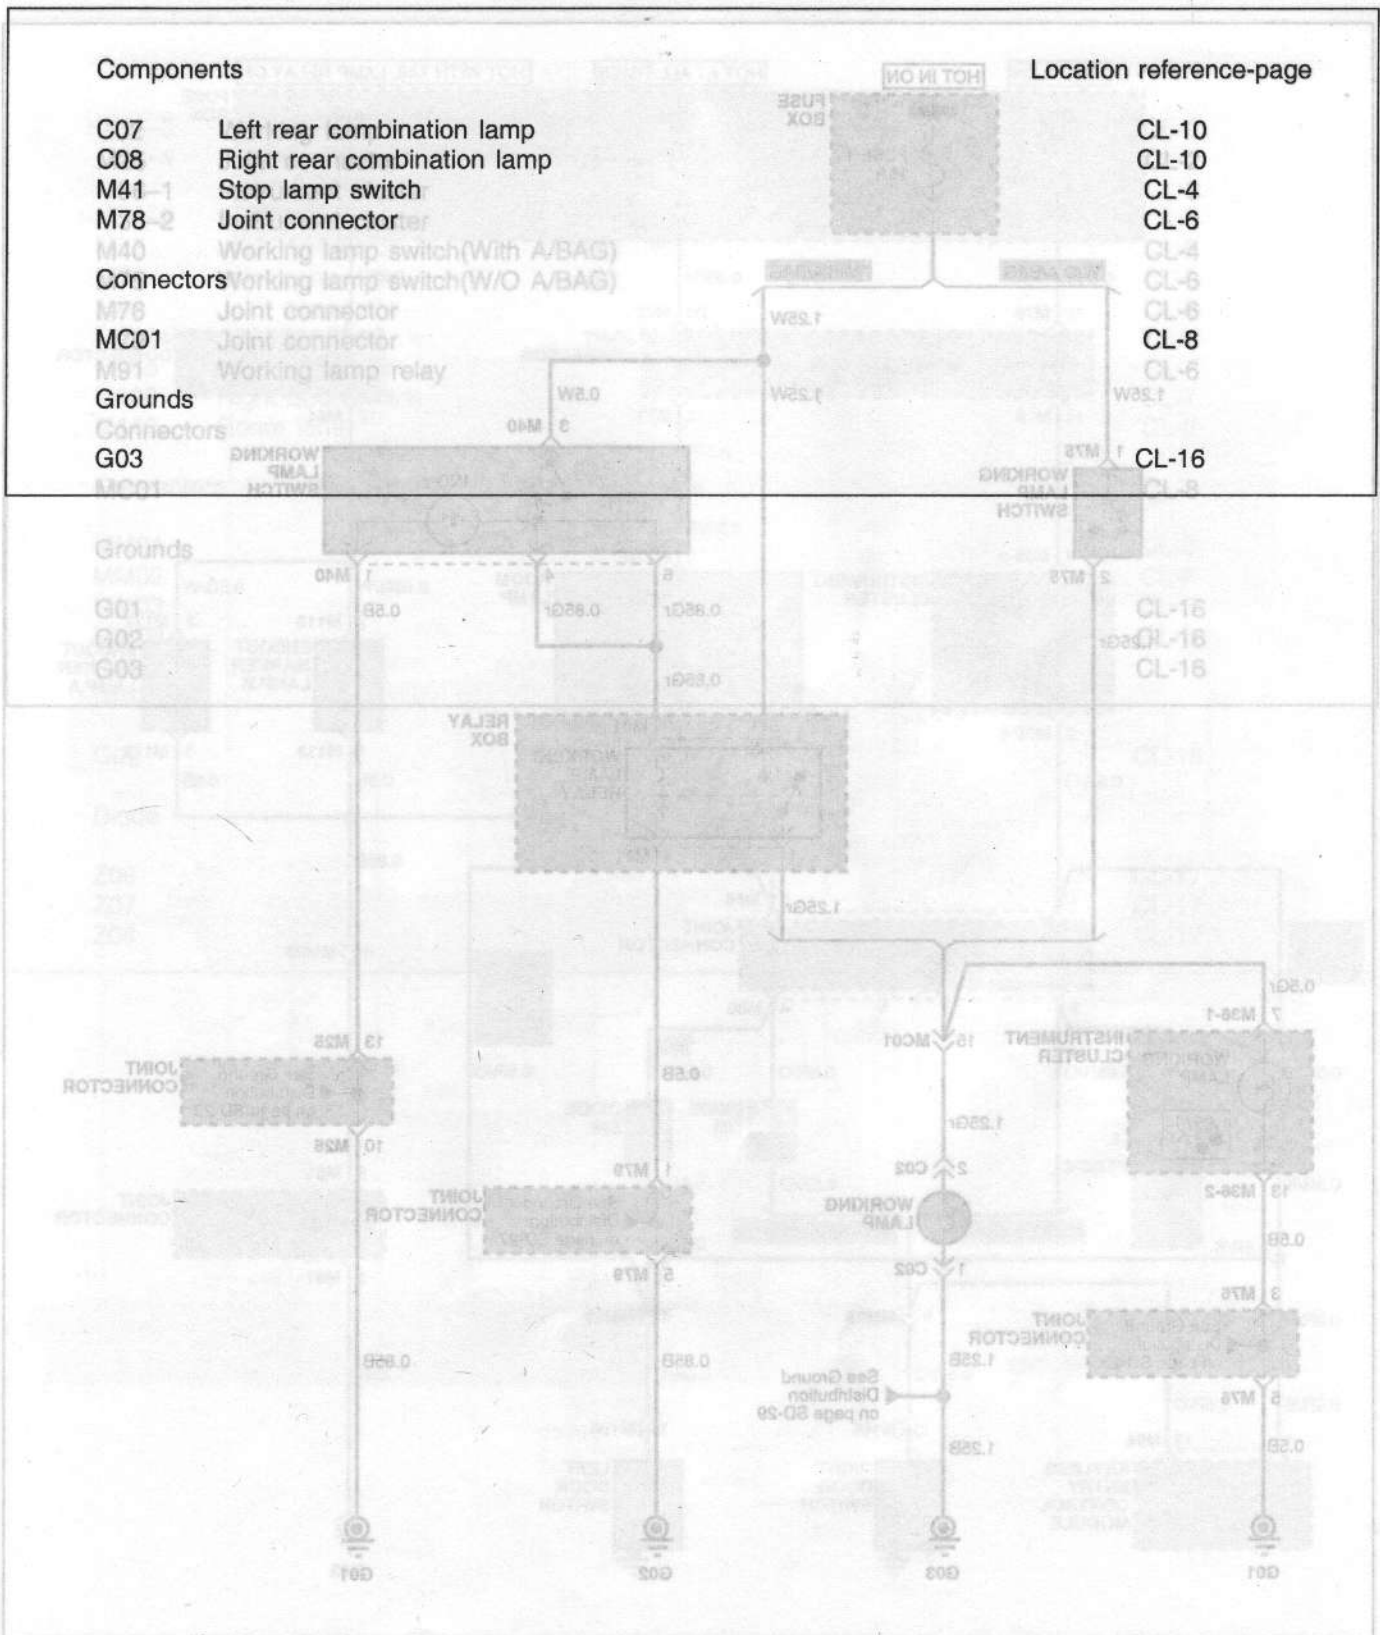

WORKING LAMP

E2MC0430

WORKING LAMP (1)

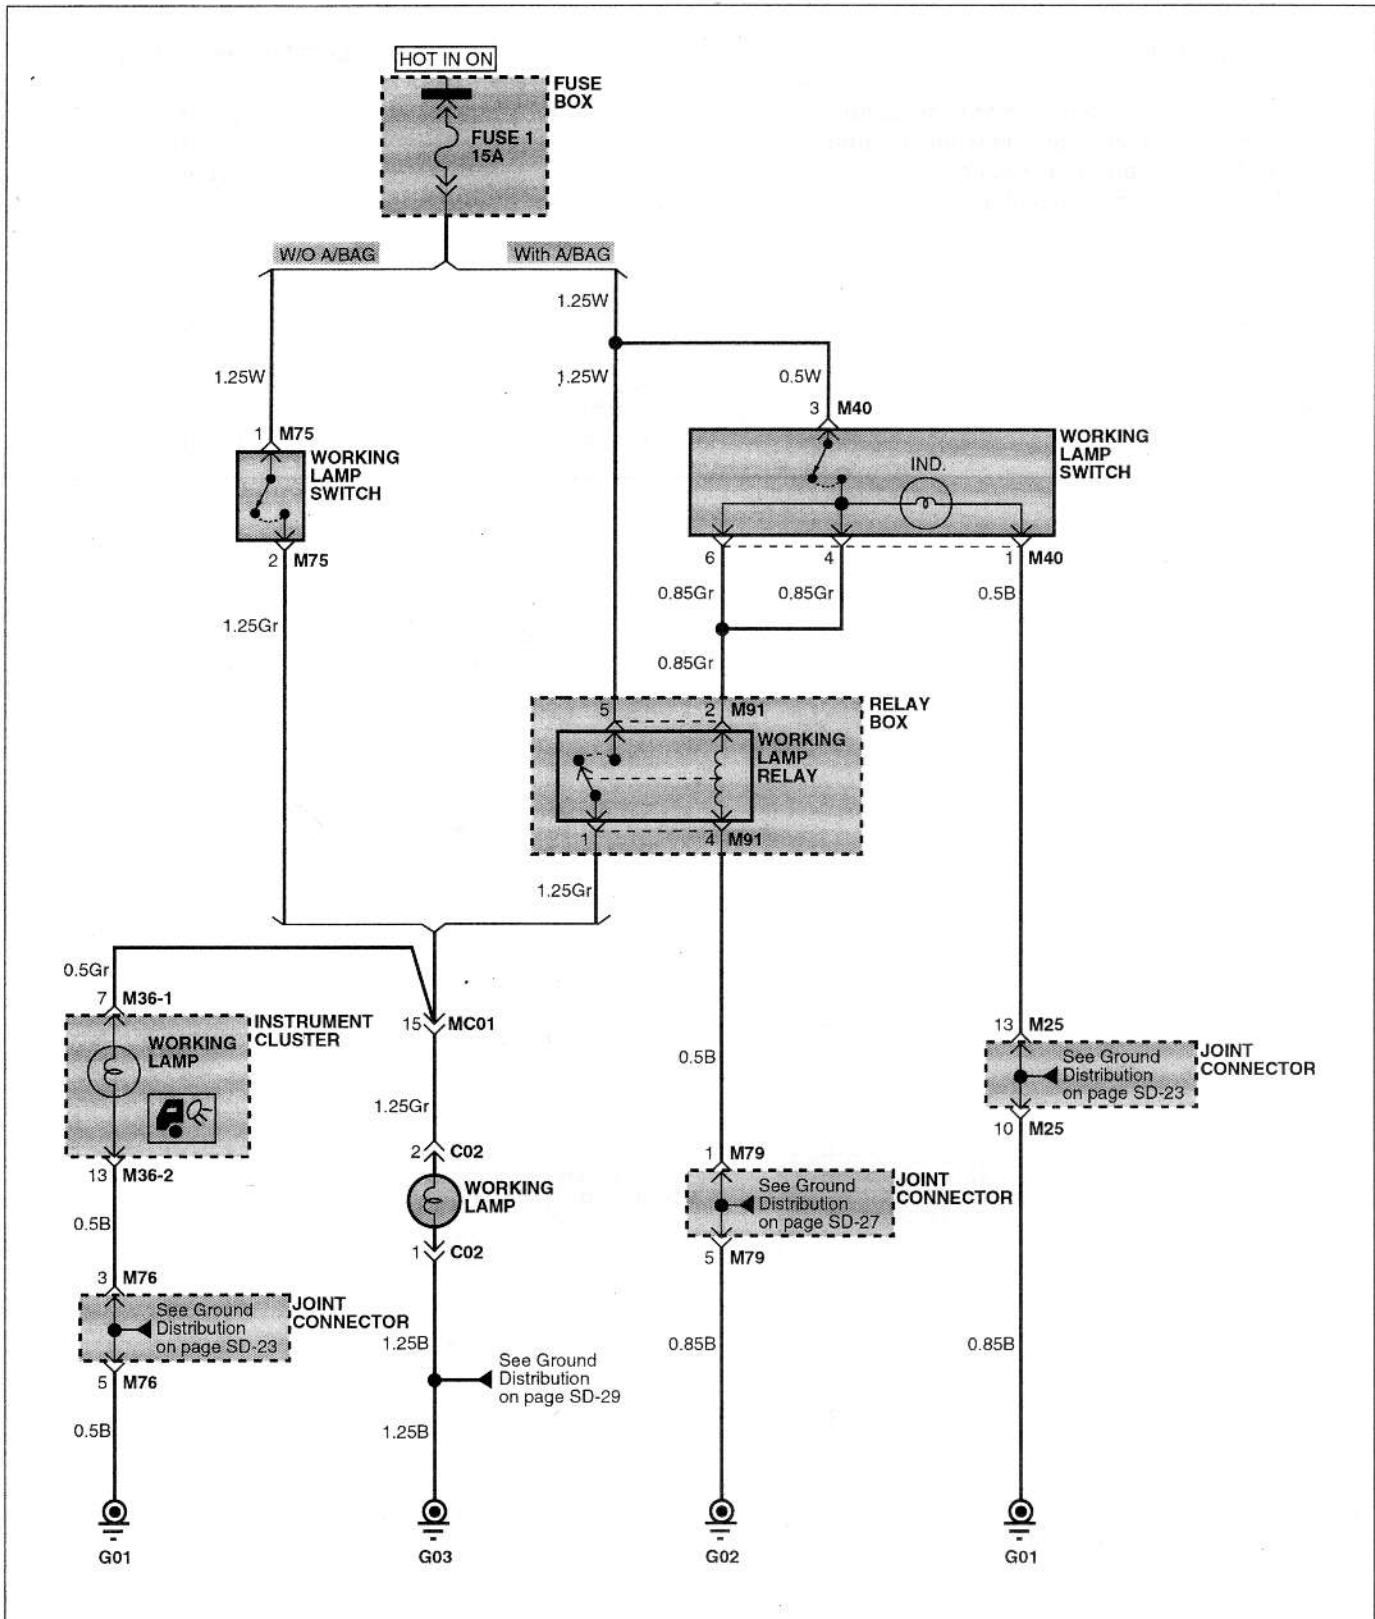

E2MC043A

COMPONENT LOCATION INDEX

Components		Location reference-page
C02	Working lamp	CL-10
M25	Joint connector	CL-2
M36-1	Instrument cluster	CL-3
M36-2	Instrument cluster	CL-3
M40	Working lamp switch(With A/BAG)	CL-4
M75	Working lamp switch(W/O A/BAG)	CL-6
M76	Joint connector	CL-6
M79	Joint connector	CL-6
M91	Working lamp relay	CL-6
Connectors		
MC01		CL-8
Grounds		
G01		CL-16
G02		CL-16
G03		CL-16

E2MC0440

COMPONENT LOCATION INDEX



COMPONENT LOCATION INDEX

Components		Location reference-page
M36-3	Instrument cluster	CL-3
M36-4	Instrument cluster	CL-3
M54	Joint connector	CL-5
M56-2	ETACM	CL-5
M77	Joint connector	CL-6
M78	Joint connector	CL-6
M80	Joint connector	CL-6
M81	Joint connector	CL-6
M105	Left door switch	CL-7
M106	Right door switch	CL-7
M110	Room lamp	CL-8
Connectors		
MM01		CL-8
MM02		CL-8
MM03		CL-8
MM06		CL-8
Grounds		
G02		CL-16
Diode		
Z06		CL-17
Z07		CL-17
Z08		CL-17


E2MC0450

ILLUMINATIONS (1) (1)

COMPONENT LOCATION INDEX




ILLUMINATIONS (2)

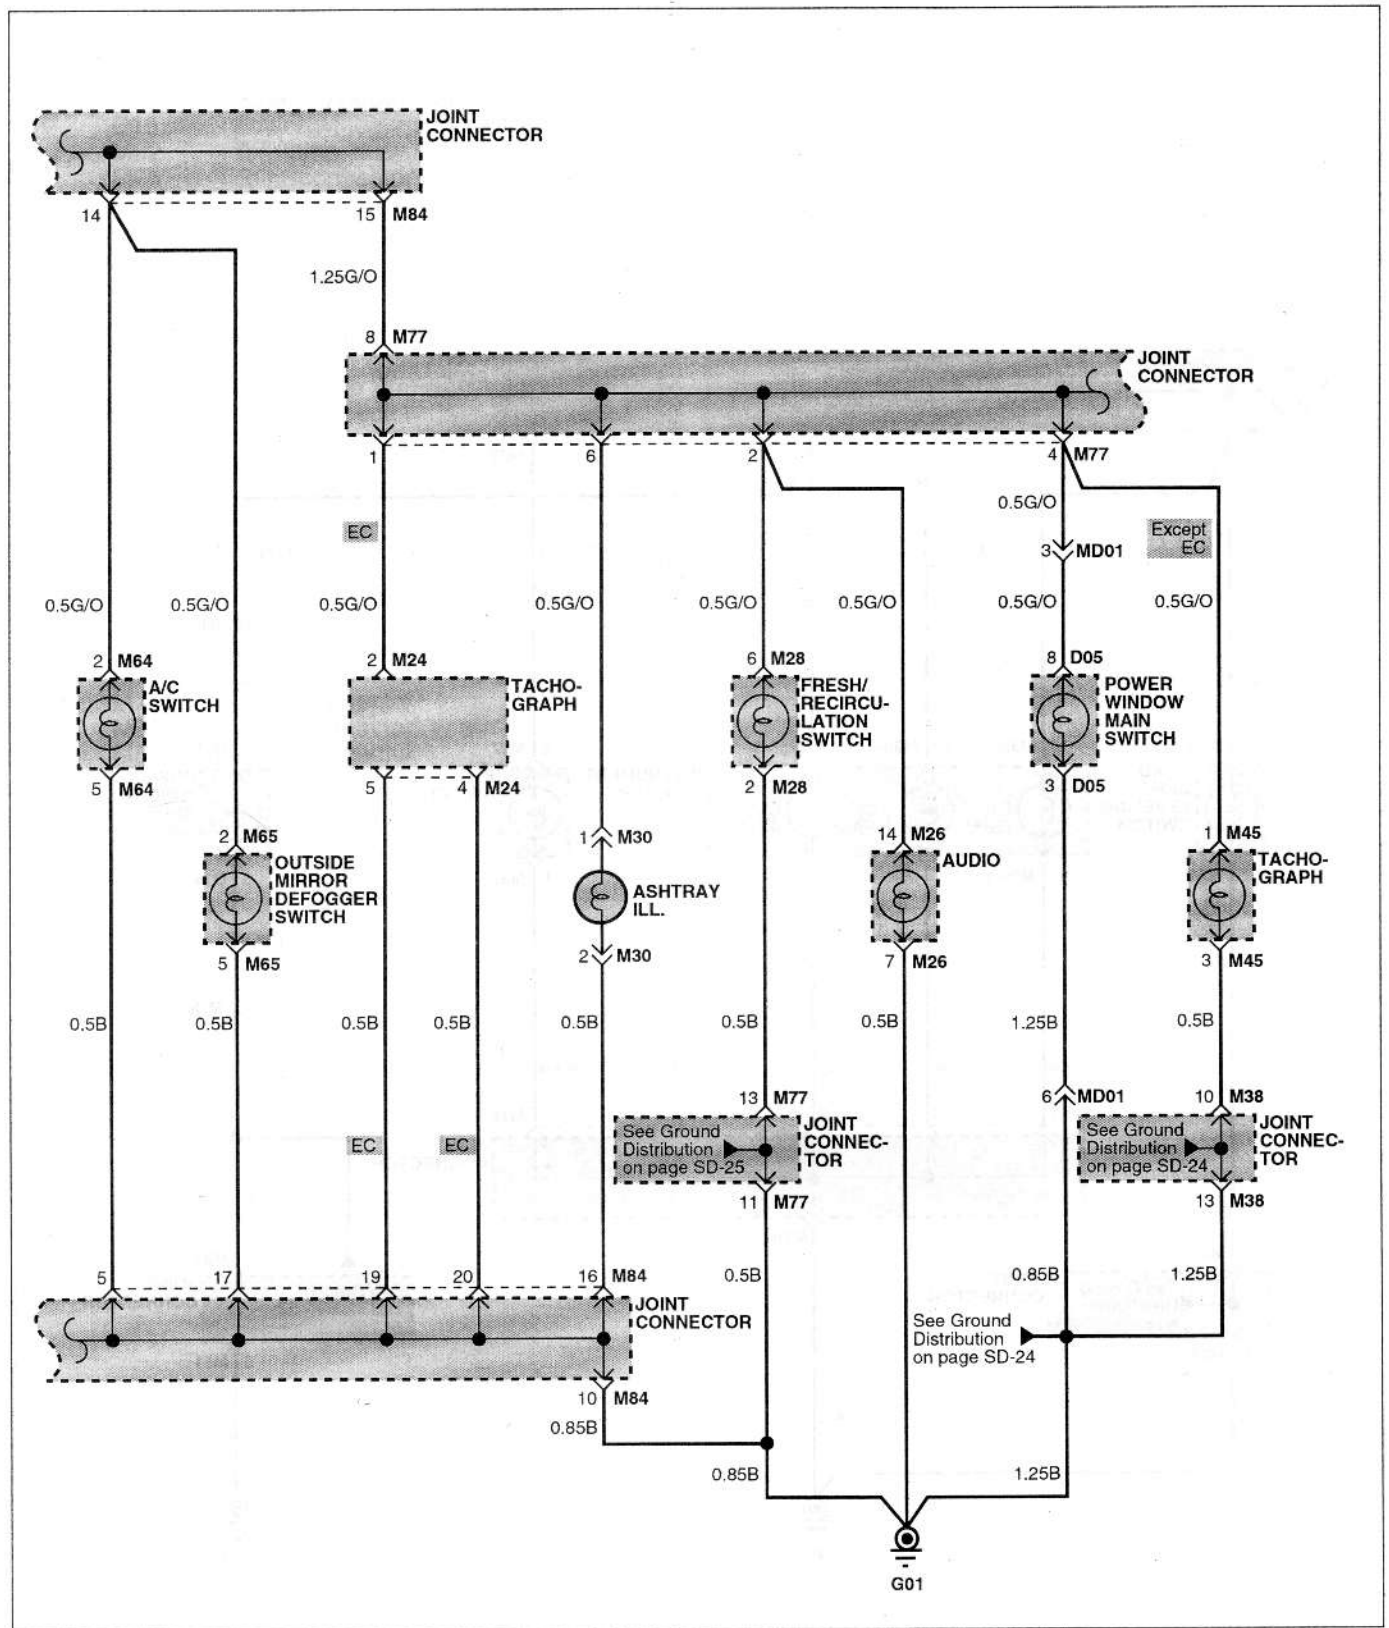

E2MC045B

ILLUMINATIONS

ILLUMINATIONS (3)

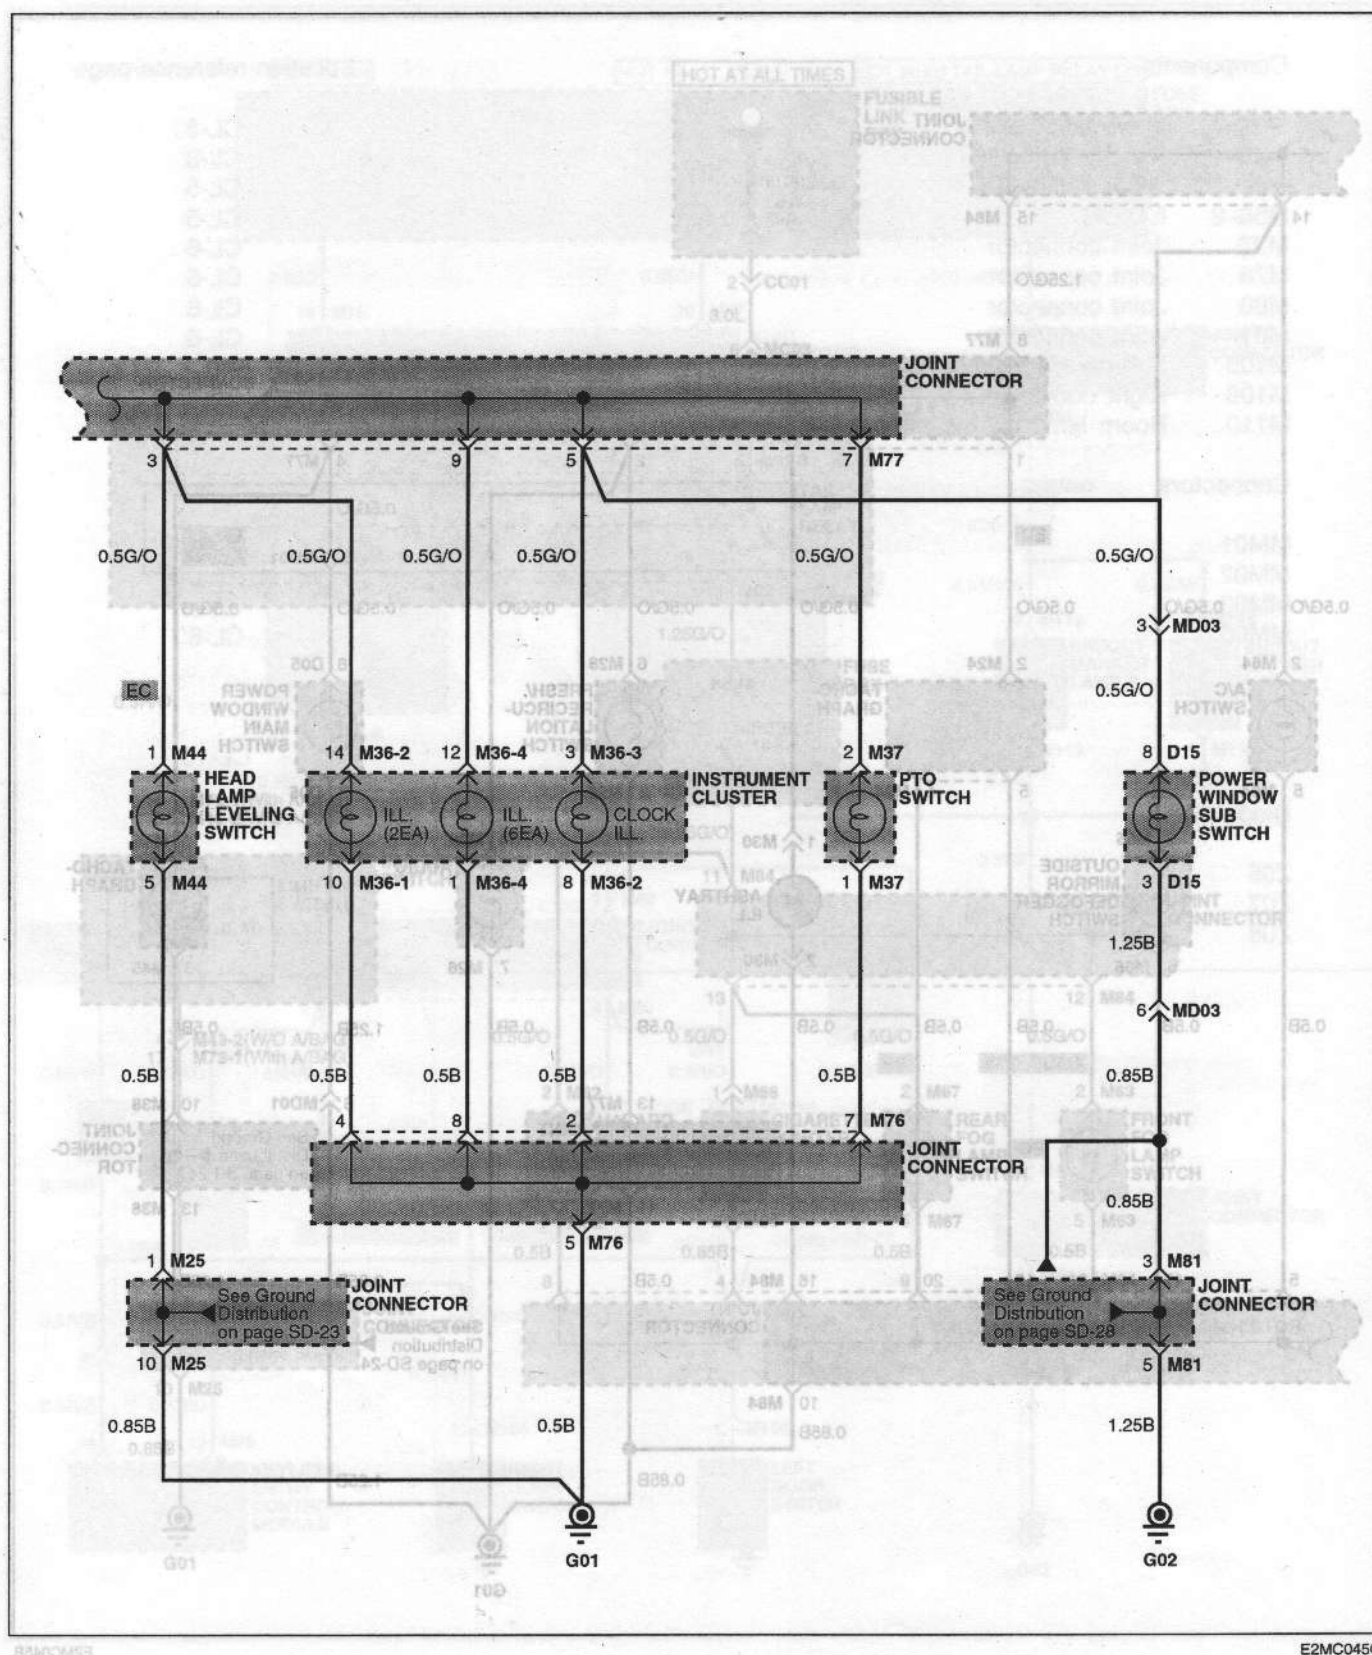

COMPONENT LOCATION INDEX


Components		Location reference-page
D05	Power window main switch	CL-14
D15	Power window sub switch	CL-14
M02	Tail lamp relay	CL-2
M25	Joint connector	CL-2
M26	Audio	CL-2
M28	Fresh/Recirculation switch	CL-3
M30	Ashtray ILL.	CL-3
M36-1	Instrument cluster	CL-3
M36-2	Instrument cluster	CL-3
M36-3	Instrument cluster	CL-3
M36-4	Instrument cluster	CL-3
M37	Power take off(PTO) switch	CL-3
M38	Joint connector	CL-4
M43-2	Multifunction switch(W/O A/BAG)	CL-4
M44	Head lamp leveling switch	CL-4
M45	Tachograph(Except EC)	CL-4
M62	Hazard switch	CL-5
M63	Front fog lamp switch	CL-5
M64	A/C switch	CL-5
M65	Outside mirror defogger switch	CL-5
M67	Rear fog lamp switch	CL-5
M68	Cigarette lighter	CL-5
M76	Joint connector	CL-6
M77	Joint connector	CL-6
M81	Joint connector	CL-6
M84	Joint connector	CL-6
Connectors		
CC01		CL-13
MC03		CL-8
MD01		CL-8
MD03		CL-8
Grounds		
G01		CL-16
G02		CL-16

AIR BAG SYSTEM(SRS)

E2MC0460

AIR BAG SYSTEM(SRS) (1)

COMPONENT LOCATION INDEX

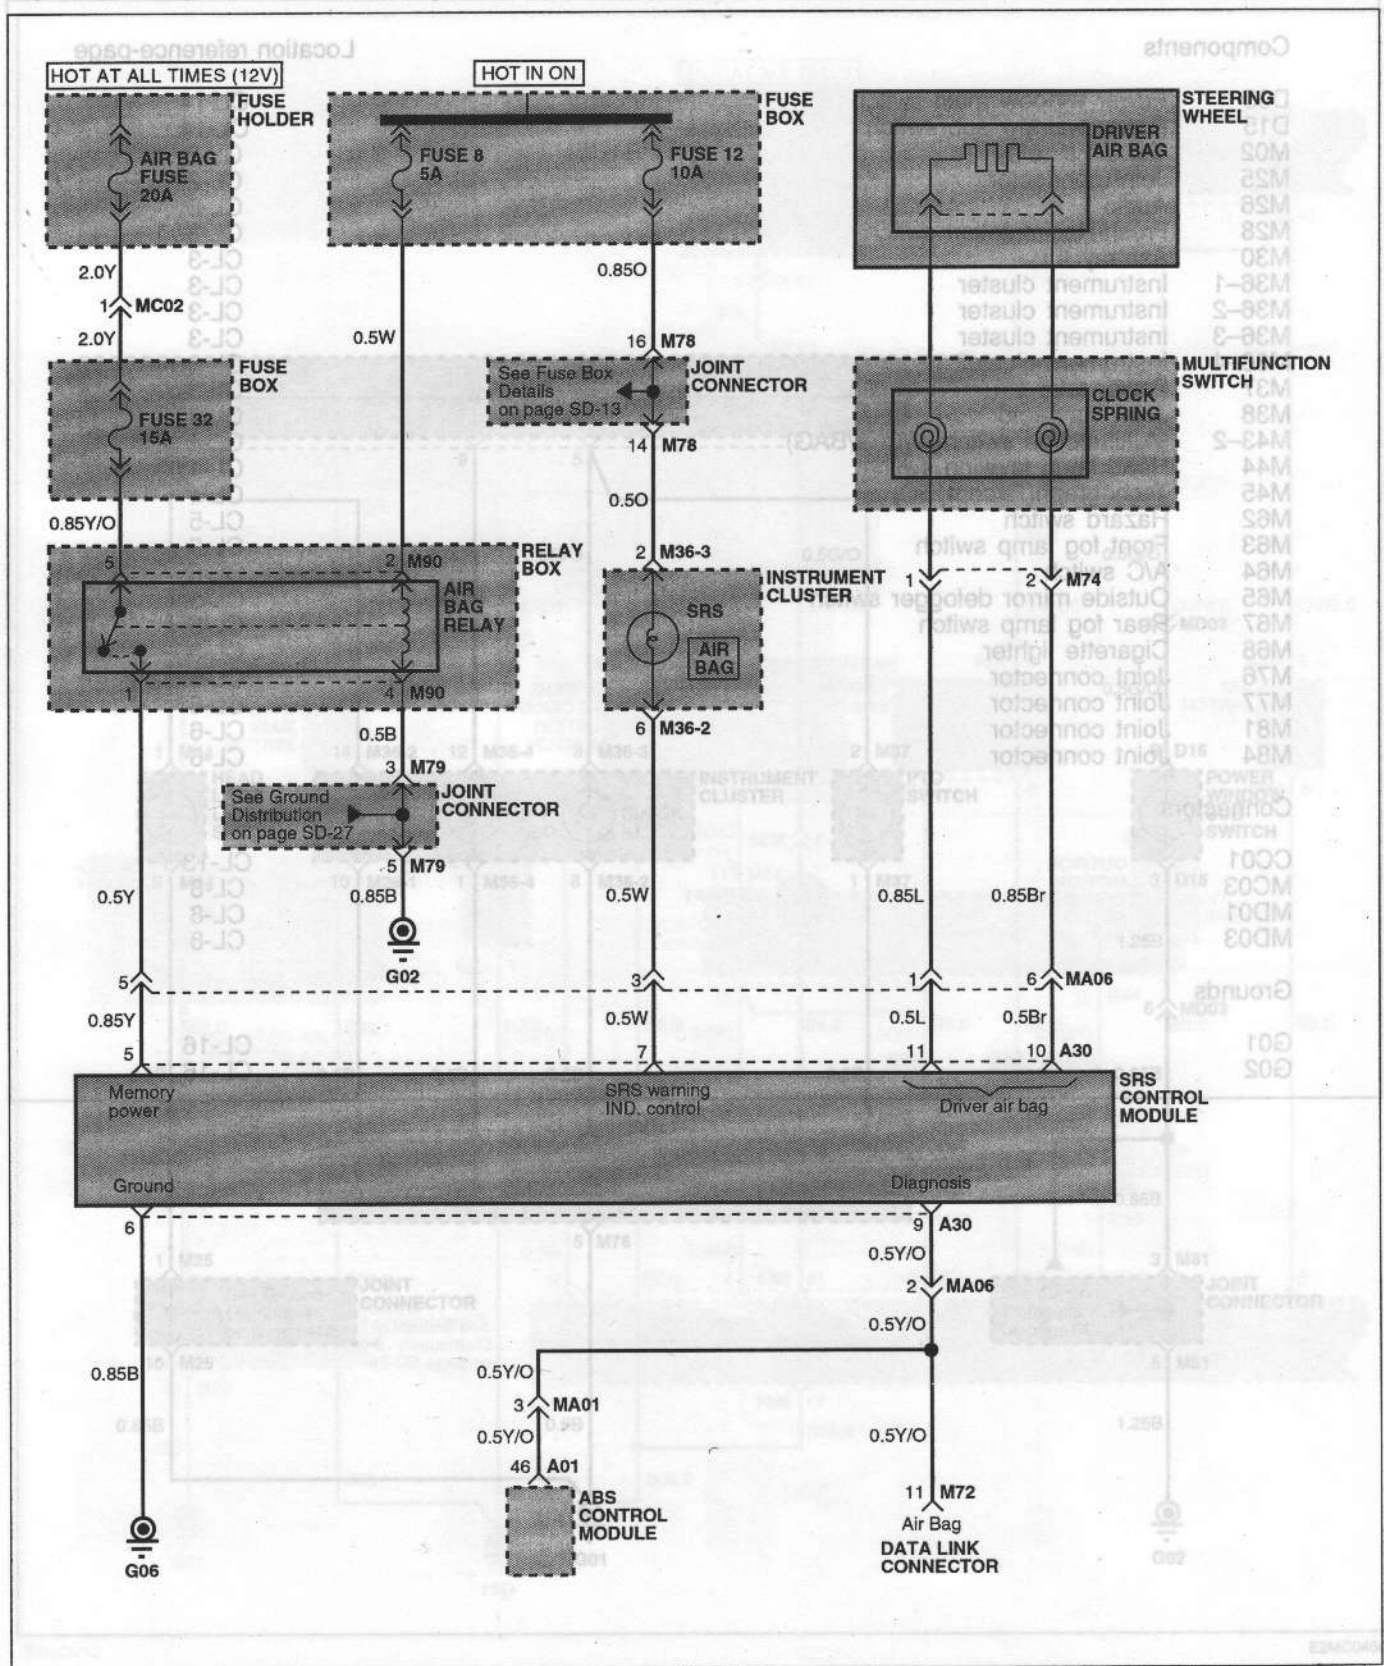


E2MC046A

COMPONENT LOCATION INDEX

Components		Location reference-page
A01	ABS Control module	CL-15
M36-2	Instrument cluster	CL-3
M36-3	Instrument cluster	CL-3
M72	Data link connector	CL-5
M78	Joint connector	CL-6
M79	Joint connector	CL-6
M90	Air bag relay	CL-6
Connectors		
MC02		CL-8
Grounds		
G06		CL-16


E2MC0470

 COMPONENT LOCATION INDEX




BLOWER & A/C CONTROLS (2)

BLOWER & A/C CONTROLS (3)

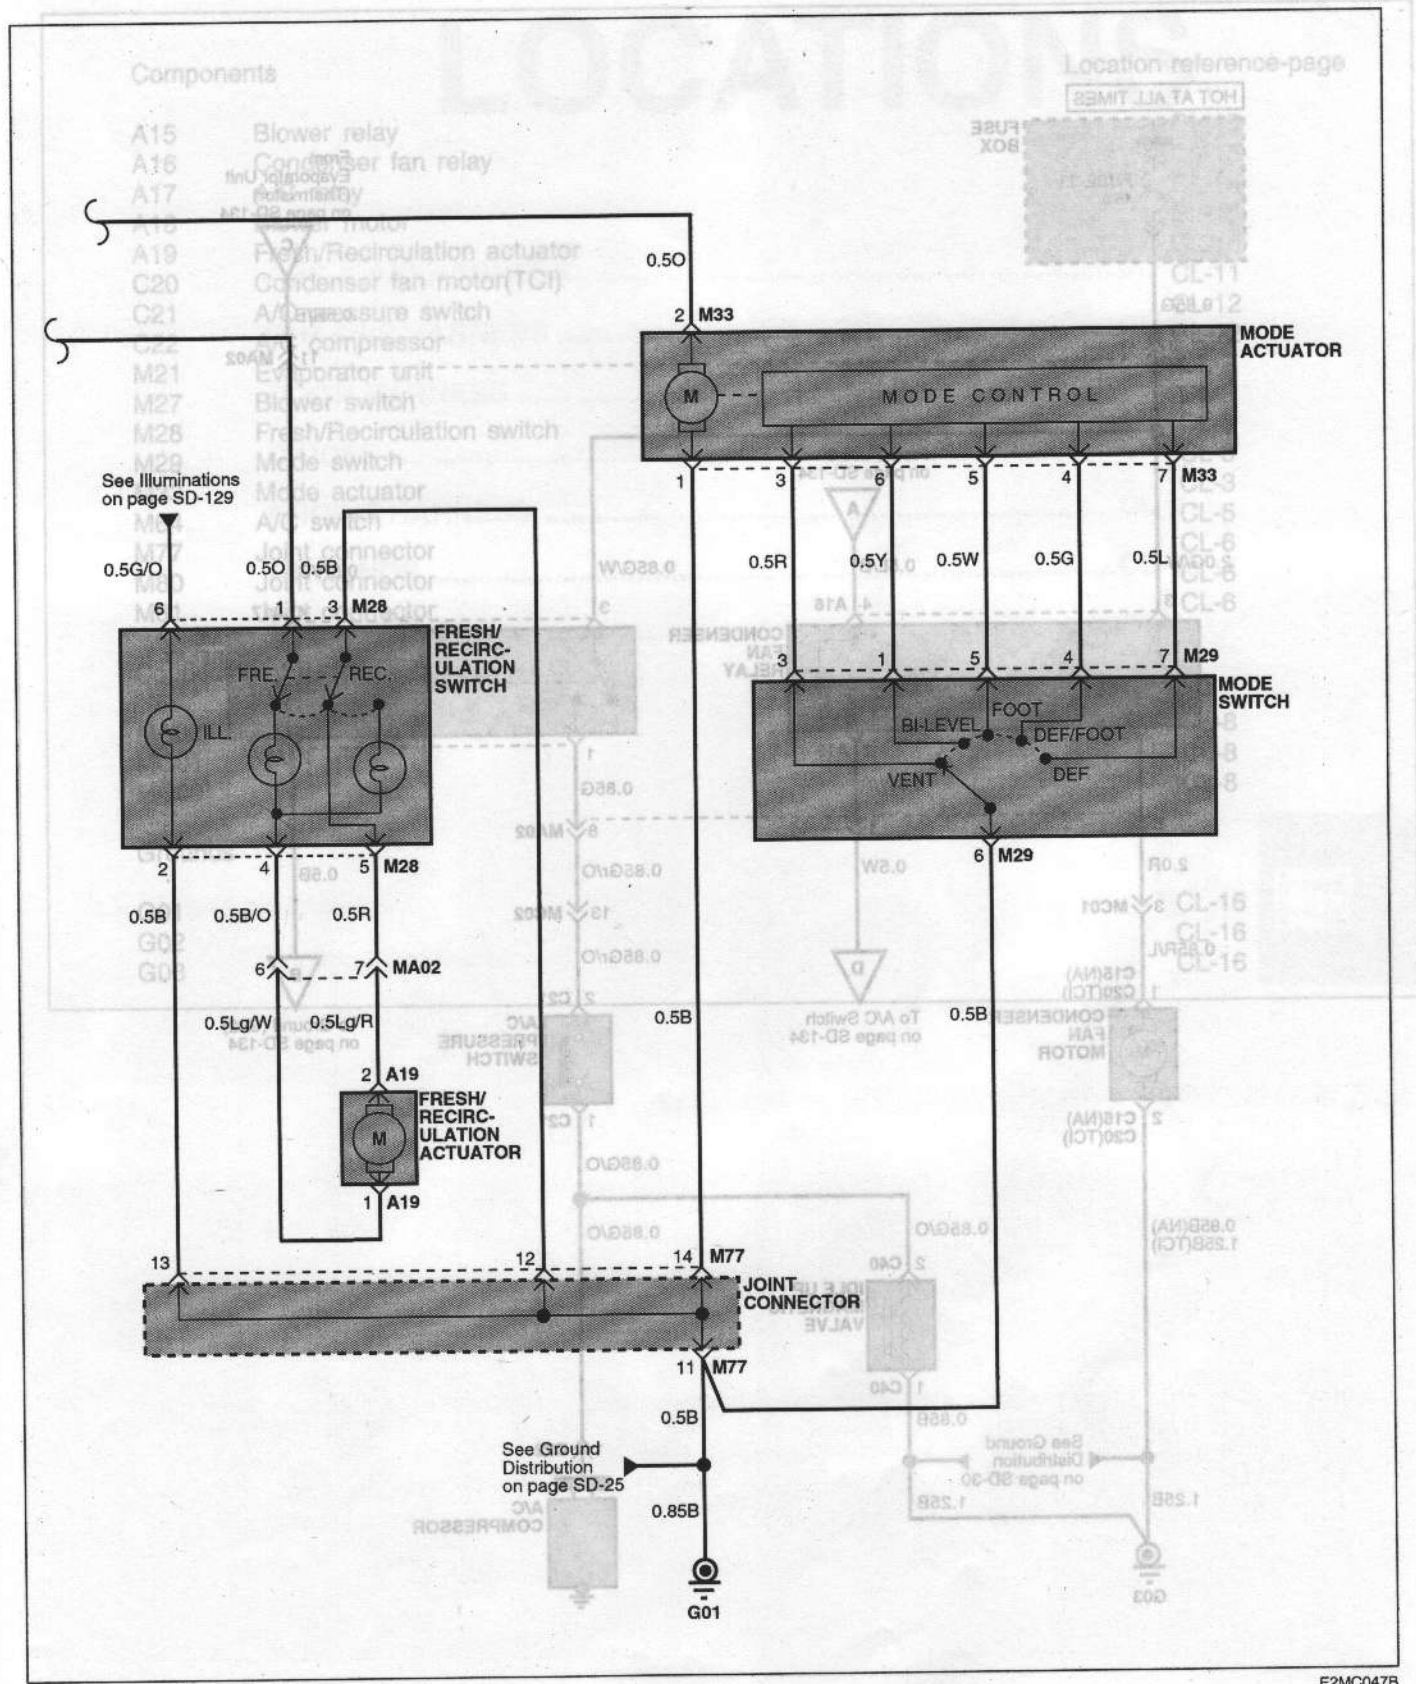

BLOWER & A/C CONTROLS (3)

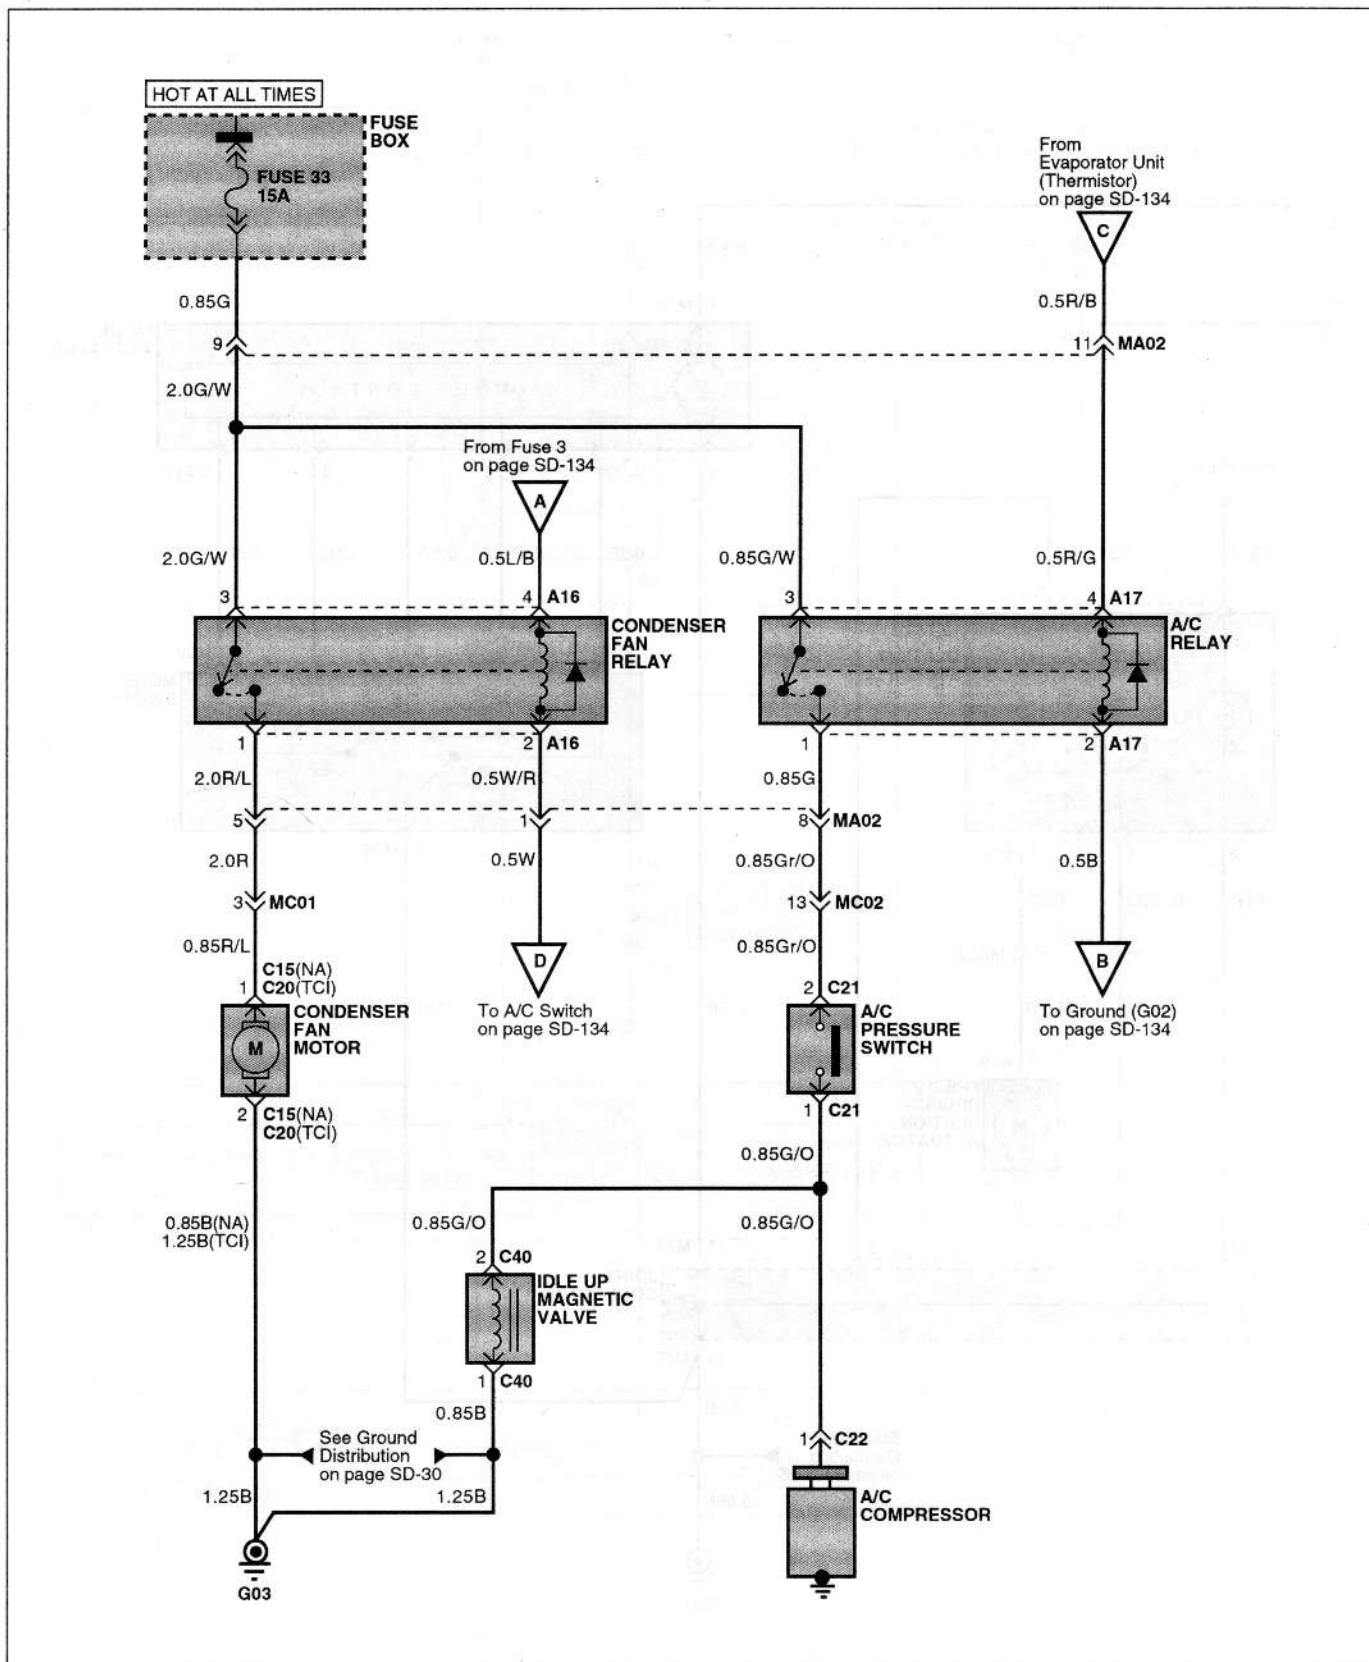

COMPONENT LOCATION INDEX

Components		Location reference-page
A15	Blower relay	CL-15
A16	Condenser fan relay	CL-15
A17	A/C relay	CL-15
A18	Blower motor	CL-15
A19	Fresh/Recirculation actuator	CL-15
C20	Condenser fan motor(TCI)	CL-11
C21	A/C pressure switch	CL-12
C22	A/C compressor	CL-12
M21	Evaporator unit	CL-2
M27	Blower switch	CL-3
M28	Fresh/Recirculation switch	CL-3
M29	Mode switch	CL-3
M33	Mode actuator	CL-3
M64	A/C switch	CL-5
M77	Joint connector	CL-6
M80	Joint connector	CL-6
M81	Joint connector	CL-6
Connectors		
MA02		CL-8
MC01		CL-8
MC02		CL-8
Grounds		
G01		CL-16
G02		CL-16
G03		CL-16