

For those that ever pull codes with a standard OBDII reader here's the conversion list for getting the Volvo DTC:

Column 1 = OBDII code

Column 2 = Volvo DTC code

Column 3 = Trouble code designation

Column 4 = Fault type

PART 1 of 2

P0016 -- ECM-670C -- Camshaft position, inlet -- High
P0016 -- ECM-670D -- Camshaft position, inlet -- Low
P0017 -- ECM-671C -- Camshaft position, exhaust -- High
P0017 -- ECM-671D -- Camshaft position, exhaust -- Low
P0026 -- ECM-6110 -- Camshaft control, inlet -- Slow
P0026 -- ECM-611B -- Camshaft control, inlet -- Faulty
P0027 -- ECM-6140 -- Camshaft control exhaust -- Slow
P0027 -- ECM-614B -- Camshaft control exhaust -- Faulty
P0030 -- ECM-244B -- Front heated oxygen sensor, bank 1 heating -- Signal missing
P0031 -- ECM-244D -- Front heated oxygen sensor, bank 1 heating -- Signal too low
P0032 -- ECM-244C -- Front heated oxygen sensor, bank 1 heating -- Signal too high
P0036 -- ECM-223B -- Rear heated oxygen sensor, bank 1 -- Signal missing
P0037 -- ECM-223D -- Rear heated oxygen sensor, bank 1 -- Signal too low
P0038 -- ECM-223C -- Rear heated oxygen sensor, bank 1 -- Signal too high
P0040 -- ECM-24A0 -- Front heated oxygen sensors mixed up -- Faulty signal
P0041 -- ECM-2240 -- Rear heated oxygen sensors, mixed up -- Faulty signal
P0050 -- ECM-254B -- Front heated oxygen sensor, bank 2 heating -- Signal missing
P0051 -- ECM-254D -- Front heated oxygen sensor, bank 2 heating -- Signal too low
P0052 -- ECM-254C -- Front heated oxygen sensor, bank 2 heating -- Signal too high
P0053 -- ECM-2400 -- Front heated oxygen sensor, bank 1 heating -- Faulty signal
P0053 -- ECM-240B -- Front heated oxygen sensor, bank 1 heating -- Signal missing
P0053 -- ECM-240C -- Front heated oxygen sensor, bank 1 heating -- Signal too high
P0053 -- ECM-240D -- Front heated oxygen sensor, bank 1 heating -- Signal too low
P0056 -- ECM-233B -- Rear heated oxygen sensor, bank 2 -- Signal missing
P0057 -- ECM-233D -- Rear heated oxygen sensor, bank 2 -- Signal too low
P0058 -- ECM-233C -- Rear heated oxygen sensor, bank 2 -- Signal too high
P0059 -- ECM-2500 -- Front heated oxygen sensor, bank 2 heating -- Faulty signal
P0059 -- ECM-250B -- Front heated oxygen sensor, bank 2 heating -- Signal missing
P0059 -- ECM-250C -- Front heated oxygen sensor, bank 2 heating -- Signal too high
P0059 -- ECM-250D -- Front heated oxygen sensor, bank 2 heating -- Signal too low
P0071 -- ECM-1410 -- Ambient temperature sensor -- Faulty signal
P0071 -- ECM-141B -- Ambient temperature sensor -- Signal missing
P0072 -- ECM-140D -- Ambient temperature sensor -- Signal too low
P0073 -- ECM-140C -- Ambient temperature sensor -- Signal too high
P0075 -- ECM-612B -- Intake camshaft reset valve -- Signal missing
P0076 -- ECM-612D -- Intake camshaft reset valve -- Signal too low
P0077 -- ECM-612C -- Intake camshaft reset valve -- Signal too high
P0078 -- ECM-616B -- Exhaust camshaft reset valve -- Signal missing
P0079 -- ECM-616D -- Exhaust camshaft reset valve -- Signal too low
P0079 -- ECM-616D -- Exhaust camshaft reset valve -- Signal too low
P0080 -- ECM-616C -- Exhaust camshaft reset valve -- Signal too high
P0087 -- ECM-290D -- Fuel pressure -- Signal too low
P0088 -- ECM-290C -- Fuel pressure -- Signal too high
P0089 -- ECM-2900 -- Fuel pressure -- Faulty signal
P0090 -- ECM-290B -- Fuel pressure -- Signal missing
P0100 -- ECM-120C -- Air mass -- Signal too high

Visit <https://truckmanualshub.com/> for more information's

P0100 -- ECM-120D -- Air mass -- Signal too low
P0101 -- ECM-1210 -- Mass air flow sensor -- Flow too high
P0101 -- ECM-121B -- Mass air flow sensor -- Flow too low
P0102 -- ECM-121D -- Mass air flow sensor -- Signal too low
P0103 -- ECM-121C -- Mass air flow sensor Signal too high
P0110 -- ECM-132D -- Intake air temperature (IAT) sensor inlet -- Signal too low
P0111 -- ECM-1320 -- Intake air temperature (IAT) sensor inlet -- Faulty signal
P0111 -- ECM-132C -- Intake air temperature (IAT) sensor inlet -- Signal too high
P0112 -- ECM-131C -- Intake air temperature (IAT) sensor inlet -- Signal too high
P0113 -- ECM-131D -- Intake air temperature (IAT) sensor inlet -- Signal too low
P0117 -- ECM-273C -- Engine coolant temperature (ECT) sensor -- Signal too high
P0118 -- ECM-273D -- Engine coolant temperature (ECT) sensor -- Signal too low
P0121 -- ECM-9210 -- Electronic throttle unit, potentiometer 1 -- Faulty signal
P0122 -- ECM-921D -- Electronic throttle unit, potentiometer 1 -- Signal too low
P0123 -- ECM-921C -- Electronic throttle unit, potentiometer 1 -- Signal too high
P0125 -- ECM-270B -- Engine coolant temperature (ECT) sensor -- Signal missing
P0128 -- ECM-2B00 -- Thermostat -- Faulty signal
P0131 -- ECM-248D -- Front heated oxygen sensor, bank 1 -- Signal too low
P0132 -- ECM-248C -- Front heated oxygen sensor, bank 1 -- Signal too high
P0133 -- ECM-242D -- Front heated oxygen sensor, bank 1 -- Signal missing
P0136 -- ECM-222B -- Rear heated oxygen sensor, bank 1 -- Signal missing
P0137 -- ECM-222D -- Rear heated oxygen sensor, bank 1 -- Signal too low
P0138 -- ECM-222C -- Rear heated oxygen sensor, bank 1 -- Signal too high
P0140 -- ECM-221B -- Rear heated oxygen sensor aging, bank 1 -- Signal missing
P0140 -- ECM-221C -- Rear heated oxygen sensor aging, bank 1 -- Signal too high
P0140 -- ECM-221D -- Rear heated oxygen sensor aging, bank 1 -- Signal too low
P0141 -- ECM-2200 -- Rear heated oxygen sensor bank 1, heating -- Faulty signal
P0151 -- ECM-258D -- Front heated oxygen sensor, bank 2 -- Signal too low
P0152 -- ECM-258C -- Front heated oxygen sensor, bank 2 -- Signal too high
P0153 -- ECM-252D -- Front heated oxygen sensor, bank 2 -- Signal missing
P0156 -- ECM-232B -- Rear heated oxygen sensor, bank 2 -- Signal missing
P0157 -- ECM-232D -- Rear heated oxygen sensor, bank 2 -- Signal too low
P0158 -- ECM-232C -- Rear heated oxygen sensor, bank 2 -- Signal too high
P0160 -- ECM-231B -- Rear heated oxygen sensor aging, bank 2 -- Signal missing
P0160 -- ECM-231C -- Rear heated oxygen sensor aging, bank 2 -- Signal too high
P0160 -- ECM-231D -- Rear heated oxygen sensor aging, bank 2 -- Signal too low
P0161 -- ECM-2300 -- Rear heated oxygen sensor bank 2, heating -- Faulty signal
P0182 -- ECM-2A0D -- Fuel temperature sensor -- Signal too low
P0183 -- ECM-2A0C -- Fuel temperature sensor -- Signal too high
P0190 -- ECM-280B -- Fuel pressure sensor -- Signal too high
P0191 -- ECM-2800 -- Fuel pressure sensor -- Signal too low
P0192 -- ECM-280D -- Fuel pressure sensor -- Signal too low
P0193 -- ECM-280C -- Fuel pressure sensor -- Signal too high
P0197 -- ECM-540D -- Oil quality, level and temperature sensor -- Signal too low
P0198 -- ECM-540C -- Oil quality, level and temperature sensor -- Signal too high
P0199 -- ECM-540B -- Oil quality, level and temperature sensor -- Faulty signal
P0201 -- ECM-2C0B -- Injector cyl 1 -- Signal missing
P0202 -- ECM-2C1B -- Injector cyl 2 -- Signal missing
P0203 -- ECM-2C2B -- Injector cyl 3 -- Signal missing
P0204 -- ECM-2C3B -- Injector cyl 4 -- Signal missing
P0205 -- ECM-2C4B -- Injector cyl 5 -- Signal missing
P0206 -- ECM-2C5B -- Injector cyl 6 -- Signal missing
P0221 -- ECM-9220 -- Electronic throttle unit, potentiometer 2 -- Faulty signal
P0222 -- ECM-922D -- Electronic throttle unit, potentiometer 2 -- Signal too low
P0223 -- ECM-922C -- Electronic throttle unit, potentiometer 2 -- Signal too high
P0234 -- ECM-601C -- Turbo control defective boost pressure -- Signal too high

Visit <https://truckmanualshub.com/> for more information's

P0237 -- ECM-125D -- Charge pressure sensor -- Signal too low
P0238 -- ECM-125C -- Charge pressure sensor -- Signal too low
P0240 -- ECM-1260 -- Charge pressure sensor -- Faulty signal
P0240 -- ECM-126B -- Charge pressure sensor -- Signal missing
P0240 -- ECM-126C -- Charge pressure sensor -- Signal too high
P0240 -- ECM-126D -- Charge pressure sensor -- Signal too low
P0243 -- ECM-600B -- Turbocharger (TC) control valve -- Signal missing
P0245 -- ECM-600D -- Turbocharger (TC) control valve -- Signal too low
P0246 -- ECM-600C -- Turbocharger (TC) control valve -- Signal too high
P0261 -- ECM-2C0D -- Injector cyl 1 -- Signal too low
P0262 -- ECM-2C0C -- Injector cyl 1 -- Signal too high
P0264 -- ECM-2C1D -- Injector cyl 2 -- Signal too low
P0265 -- ECM-2C1C -- Injector cyl 2 -- Signal too high
P0267 -- ECM-2C2D -- Injector cyl 3 -- Signal too low
P0268 -- ECM-2C2C -- Injector cyl 3 -- Signal too high
P0270 -- ECM-2C3D -- Injector cyl 4 -- Signal too low
P0271 -- ECM-2C3C -- Injector cyl 4 -- Signal too high
P0273 -- ECM-2C4D -- Injector cyl 5 -- Signal too low
P0274 -- ECM-2C4C -- Injector cyl 5 -- Signal too high
P0276 -- ECM-2C5D -- Injector cyl 6 -- Signal too low
P0277 -- ECM-2C5C -- Injector cyl 6 -- Signal too high
P0299 -- ECM-602D -- Turbo control defective flow -- Signal too low
P0300 -- ECM-3100 -- Misfire, at least one cylinder -- Start-up
P0300 -- ECM-310C -- Misfire, at least one cylinder -- Catalytic converter damage
P0300 -- ECM-310D -- Misfire, at least one cylinder -- Emissions impact
P0300 -- ECM-310D -- Misfire, at least one cylinder -- Emissions impact
P0301 -- ECM-3210 -- Misfire cylinder 1, start-up -- Start-up
P0301 -- ECM-321C -- Misfire cylinder 1, catalytic converter damage -- Catalytic converter damage
P0301 -- ECM-321D -- Misfire cylinder 1, emissions impact -- Emissions impact
P0302 -- ECM-3220 -- Misfire cylinder 2, start-up -- Start-up
P0302 -- ECM-322C -- Misfire cylinder 2, catalytic converter damage -- Catalytic converter damage
P0302 -- ECM-322D -- Misfire cylinder 2, emissions impact -- Emissions impact
P0303 -- ECM-3230 -- Misfire cylinder 3, start-up -- Start-up
P0303 -- ECM-323C -- Misfire cylinder 3, catalytic converter damage -- Catalytic converter damage
P0303 -- ECM-323D -- Misfire cylinder 3, emissions impact -- Emissions impact
P0304 -- ECM-3240 -- Misfire cylinder 4, start-up -- Start-up
P0304 -- ECM-324C -- Misfire cylinder 4, catalytic converter damage -- Catalytic converter damage
P0304 -- ECM-324D -- Misfire cylinder 4, emissions impact -- Emissions impact
P0305 -- ECM-3250 -- Misfire cylinder 5, start-up -- Start-up
P0305 -- ECM-325C -- Misfire cylinder 5, catalytic converter damage -- Catalytic converter damage
P0305 -- ECM-325D -- Misfire cylinder 5, emissions impact -- Emissions impact
P0306 -- ECM-3260 -- Misfire cylinder 6, start-up -- Start-up
P0306 -- ECM-326C -- Misfire cylinder 6, catalytic converter damage -- Catalytic converter damage
P0306 -- ECM-326D -- Misfire cylinder 6, emissions impact -- Emissions impact
P0324 -- ECM-3000 -- Engine control module (ECM), Internal fault -- Faulty signal
P0324 -- ECM-3010 -- Engine control module (ECM), Internal fault -- Faulty signal
P0324 -- ECM-3020 -- Engine control module (ECM), Internal fault -- Faulty signal
P0327 -- ECM-303D -- Knock sensor front -- Signal too low
P0328 -- ECM-303C -- Knock sensor front -- Signal too high
P0332 -- ECM-304D -- Knock sensor rear -- Signal too low
P0333 -- ECM-304C -- Knock sensor rear -- Signal too high
P0335 -- ECM-500B -- Engine speed (RPM) sensor signal -- Signal missing
P0336 -- ECM-5000 -- Engine speed (RPM) sensor signal -- Faulty signal
P0337 -- ECM-500D -- Engine speed (RPM) sensor signal -- Signal too low
P0338 -- ECM-500C -- Engine speed (RPM) sensor signal -- Signal too high
P0340 -- ECM-340B -- Camshaft position (CMP) sensor, intake -- Signal missing

Visit <https://truckmanualshub.com/> for more information's

P0342 -- ECM-340D -- Camshaft position (CMP) sensor, intake -- Signal too low
P0343 -- ECM-340C -- Camshaft position (CMP) sensor, intake -- Signal too high
P0344 -- ECM-3400 -- Camshaft position (CMP) sensor, intake -- Faulty signal
P0345 -- ECM-341B -- Camshaft position (CMP) sensor, exhaust -- Signal missing
P0347 -- ECM-341D -- Camshaft position (CMP) sensor, exhaust -- Signal too low
P0348 -- ECM-341C -- Camshaft position (CMP) sensor, exhaust -- Signal too high
P0349 -- ECM-3410 -- Camshaft position (CMP) sensor, exhaust -- Faulty signal
P0351 -- ECM-360B -- Ignition coil cyl 1 -- Signal missing
P0352 -- ECM-361B -- Ignition coil cyl 2 -- Signal missing
P0353 -- ECM-362B -- Ignition coil cyl 3 -- Signal missing
P0354 -- ECM-363B -- Ignition coil cyl 4 -- Signal missing
P0355 -- ECM-364B -- Ignition coil cyl 5 -- Signal missing
P0356 -- ECM-365B -- Ignition coil cyl 6 -- Signal missing
P0420 -- ECM-400C -- Catalytic converter efficiency, bank 1 -- Signal too high
P0430 -- ECM-401C -- Catalytic converter efficiency, bank 2 -- Signal too high
P0442 -- ECM-439C -- Tank system, leakage -- Major leak
P0443 -- ECM-421B -- Evaporative emission system (EVAP) valve -- Signal missing
P0444 -- ECM-421C -- Evaporative emission system (EVAP) valve -- Signal too high
P0445 -- ECM-421D -- Evaporative emission system (EVAP) valve -- Signal too low
P0456 -- ECM-434C -- Tank system, leakage -- Minor leak
P0457 -- ECM-430C -- Tank system, leakage -- Fuel tank cap missing
P0457 -- ECM-4380 -- Tank cap -- Missing
P0460 -- ECM-440C -- Fuel level sensor -- Signal too high
P0461 -- ECM-4400 -- Fuel level sensor -- Faulty signal
P0464 -- ECM-440B -- Fuel level sensor -- Signal missing
P0480 -- ECM-650B -- Engine cooling fan (FC) -- Signal missing
P0483 -- ECM-6200 -- Engine cooling fan (FC) control module -- Faulty signal
P0484 -- ECM-620C -- Engine cooling fan (FC) control module -- Signal too high
P0485 -- ECM-620D -- Engine cooling fan (FC) control module -- Signal too low
P0496 -- ECM-420C -- EVAP-system -- Signal too high
P0497 -- ECM-420D -- EVAP-system -- Signal too high
P0500 -- ECM-530C -- Speed signal -- Signal too high
P0501 -- ECM-5300 -- Speed signal -- Faulty signal
P0502 -- ECM-530D -- Speed signal -- Signal too low
P0503 -- ECM-A12B -- Speed signal -- Signal missing
P0503 -- ECM-A12C -- Speed signal -- Signal too high
P0503 -- ECM-530B -- Speed signal -- Signal missing
P0506 -- ECM-951D -- Engine control module (ECM), idle control -- Signal too low
P0507 -- ECM-951C -- Engine control module (ECM), idle control -- Signal too high
P0530 -- ECM-520B -- A/C pressure sensor -- Signal missing
P0531 -- ECM-5200 -- A/C pressure sensor -- Faulty signal
P0532 -- ECM-520D -- A/C pressure sensor -- Signal too low
P0533 -- ECM-520C -- A/C pressure sensor -- Signal too high
P0560 -- ECM-8200 -- Battery voltage -- Faulty signal
P0561 -- ECM-800B -- System relay -- Signal too low
P0562 -- ECM-820D -- Battery voltage -- Signal too low
P0563 -- ECM-820C -- Battery voltage -- Signal too high
P0564 -- ECM-930B -- Control module, communication fault -- Signal missing
P0571 -- ECM-900B -- Brake pedal sensor -- Signal missing
P0573 -- ECM-900C -- Brake pedal sensor -- Signal too low
P0579 -- ECM-9300 -- Control module, communication fault -- Faulty signal
P0580 -- ECM-930D -- Control module, communication fault -- Signal too low
P0581 -- ECM-930C -- Control module, communication fault -- Signal too high

Part 2 of 2

Visit <https://truckmanualshub.com/> for more information's

P0602 -- ECM-5110 -- Malfunction indicator light CEM -- Faulty signal
P0604 -- ECM-9970 -- Memory error RAM -- Faulty signal
P0605 -- ECM-9980 -- Memory error ROM -- Faulty signal
P0606 -- ECM-9990 -- Engine control module (ECM) -- Faulty signal
P0607 -- ECM-9800 -- Engine control module (ECM), torque signal -- Internal fault
P0607 -- ECM-9810 -- Engine control module (ECM), engine rpm -- Internal fault
P0607 -- ECM-9820 -- Engine control module (ECM), load signal -- Internal fault
P0607 -- ECM-983B -- Engine control module (ECM) -- Internal fault
P0607 -- ECM-983C -- Engine control module (ECM) -- Internal fault
P0607 -- ECM-983D -- Engine control module (ECM) -- Internal fault
P0607 -- ECM-9840 -- Engine control module (ECM) -- Internal fault
P0607 -- ECM-984B -- Engine control module (ECM) -- Internal fault
P0607 -- ECM-9860 -- Engine control module (ECM) -- Internal fault
P0607 -- ECM-720B -- Engine control module (ECM) internal fault -- Signal missing
P0607 -- ECM-9850 -- Engine control module (ECM) -- Internal fault
P0627 -- ECM-291B -- Fuel pump control module -- Signal missing
P0628 -- ECM-291D -- Fuel pump control module -- Signal too low
P0629 -- ECM-291C -- Fuel pump control module -- Signal too high
P0634 -- ECM-7010 -- Engine control module high temperature -- Faulty signal
P0634 -- ECM-7020 -- Engine control module high temperature -- Faulty signal
P0638 -- ECM-9270 -- Throttle unit -- Faulty signal
P0642 -- ECM-810D -- Power supply (5 volt) -- Signal too low
P0643 -- ECM-810C -- Power supply (5 volt) -- Signal too high
P0645 -- ECM-630B -- Air conditioning (A/C) relay -- Signal missing
P0646 -- ECM-630D -- Air conditioning (A/C) relay -- Signal too low
P0647 -- ECM-630C -- Air conditioning (A/C) relay -- Signal too high
P0650 -- ECM-660B -- Malfunction indicator lamp (MIL) -- Signal missing
P0650 -- ECM-660C -- Malfunction indicator lamp (MIL) -- Signal too high
P0650 -- ECM-660D -- Malfunction indicator lamp (MIL) -- Signal too low
P0668 -- ECM-700D -- Engine control module (ECM), Internal fault -- Signal too low
P0669 -- ECM-700C -- Engine control module (ECM), Internal fault -- Signal too high
P0700 -- ECM-5100 -- Malfunction indicator light TCM -- Faulty signal
P0700 -- ECM-5130 -- Malfunction indicator light TCM -- Faulty signal
P0700 -- ECM-513B -- Malfunction indicator light TCM -- Signal missing
P0727 -- ECM-330B -- Engine speed (RPM) sensor -- Faulty signal
P0805 -- ECM-910B -- Clutch pedal sensor -- Signal missing
P0806 -- ECM-9100 -- Clutch pedal sensor -- Faulty signal
P0807 -- ECM-910D -- Clutch pedal sensor -- Signal too low
P0808 -- ECM-910C -- Clutch pedal sensor -- Signal too high
P0863 -- ECM-512B -- Malfunction indicator light communication -- Signal missing
P1124 -- ECM-92B0 -- Throttle unit -- Faulty signal
P1124 -- ECM-92D0 -- Throttle unit -- Faulty signal
P1136 -- ECM-680B -- Cooling fan for control modules -- Signal missing
P1136 -- ECM-680C -- Cooling fan for control modules -- Signal too high
P1136 -- ECM-680D -- Cooling fan for control modules -- Signal too low
P1167 -- ECM-92CC -- Throttle unit -- Signal too high
P1167 -- ECM-92CD -- Throttle unit -- Signal too low
P1480 -- ECM-620B -- Engine cooling fan (FC) control module -- Signal too low
P1481 -- ECM-650D -- Engine cooling fan (FC) -- Signal too low
P1482 -- ECM-650C -- Engine cooling fan (FC) -- Signal too high
P1526 -- ECM-960C -- Engine control module (ECM), torque signal -- Internal fault
P1646 -- ECM-2450 -- Front heated oxygen sensor, bank 1 -- Faulty signal
P1646 -- ECM-245B -- Front heated oxygen sensor, bank 1 -- Signal missing
P1646 -- ECM-245C -- Front heated oxygen sensor, bank 1 -- Signal too high
P1646 -- ECM-245D -- Front heated oxygen sensor, bank 1 -- Signal too low

Visit <https://truckmanualshub.com/> for more information's

P1647 -- ECM-2550 -- Front heated oxygen sensor, bank 2 -- Faulty signal
P1647 -- ECM-255B -- Front heated oxygen sensor, bank 2 -- Signal missing
P1647 -- ECM-255C -- Front heated oxygen sensor, bank 2 -- Signal too high
P1647 -- ECM-255D -- Front heated oxygen sensor, bank 2 -- Signal too low
P2065 -- ECM-440D -- Fuel level sensor -- Signal too low
P2096 -- ECM-24BC -- Front heated oxygen sensor, bank 1 -- Signal too high
P2097 -- ECM-24BD -- Front heated oxygen sensor, bank 1 -- Signal too low
P2098 -- ECM-25BC -- Front heated oxygen sensor, bank 2 -- Signal too high
P2099 -- ECM-25BD -- Front heated oxygen sensor, bank 2 -- Signal too low
P2101 -- ECM-9240 -- Engine control module (ECM) -- Faulty signal
P2108 -- ECM-929C -- Engine control module (ECM) -- Signal too high
P2108 -- ECM-929D -- Engine control module (ECM) -- Signal too low
P2108 -- ECM-9290 -- Engine control module (ECM) -- Faulty signal
P2109 -- ECM-92E0 -- Engine control module (ECM) -- Internal fault
P2111 -- ECM-925C -- Throttle unit -- Signal too high
P2111 -- ECM-925D -- Throttle unit -- Signal too low
P2112 -- ECM-926C -- Throttle unit -- Signal too high
P2112 -- ECM-926D -- Throttle unit -- Signal too low
P2119 -- ECM-9280 -- Throttle unit -- Faulty signal
P2121 -- ECM-9700 -- Accelerator pedal position sensor, digital signal -- Faulty signal
P2121 -- ECM-970B -- Accelerator pedal position sensor, digital signal -- Signal missing
P2122 -- ECM-941D -- Accelerator pedal position sensor, digital signal -- Signal too low
P2123 -- ECM-941C -- Accelerator pedal position sensor, digital signal -- Signal too high
P2126 -- ECM-9400 -- Accelerator pedal position sensor, analog signal -- Faulty signal
P2127 -- ECM-940D -- Accelerator pedal position sensor, analog signal -- Signal too low
P2128 -- ECM-940C -- Accelerator pedal position sensor, analog signal -- Signal too high
P2131 -- ECM-9000 -- Brake pedal sensor -- Faulty signal
P2135 -- ECM-9200 -- Throttle position sensor -- Faulty signal
P2177 -- ECM-21EC -- Adaptive heated oxygen sensor control, bank 1 -- Signal too high
P2177 -- ECM-212C -- Adaptive heated oxygen sensor control, bank 1 -- Signal too high
P2178 -- ECM-21ED -- Adaptive heated oxygen sensor control, bank 1 -- Signal too low
P2178 -- ECM-212D -- Adaptive heated oxygen sensor control, bank 1 -- Signal too low
P2179 -- ECM-213C -- Adaptive heated oxygen sensor control, bank 2 -- Signal too high
P2179 -- ECM-21FC -- Adaptive heated oxygen sensor control, bank 2 -- Signal too high
P2180 -- ECM-213D -- Adaptive heated oxygen sensor control, bank 2 -- Signal too low
P2180 -- ECM-21FD -- Adaptive heated oxygen sensor control, bank 2 -- Signal too low
P2187 -- ECM-21EB -- Adaptive heated oxygen sensor control, bank 1 -- Signal missing
P2187 -- ECM-216C -- Adaptive heated oxygen sensor control, bank 1 -- Signal too high
P2188 -- ECM-21E0 -- Adaptive heated oxygen sensor control, bank 1 -- Faulty signal
P2188 -- ECM-216D -- Adaptive heated oxygen sensor control, bank 1 -- Signal too low
P2189 -- ECM-217C -- Adaptive heated oxygen sensor control, bank 2 -- Signal too high
P2189 -- ECM-21FB -- Adaptive heated oxygen sensor control, bank 2 -- Signal missing
P2190 -- ECM-217D -- Adaptive heated oxygen sensor control, bank 2 -- Signal too low
P2190 -- ECM-21F0 -- Adaptive heated oxygen sensor control, bank 2 -- Faulty signal
P2191 -- ECM-210C -- Adaptive heated oxygen sensor control, bank 1 -- Signal too high
P2192 -- ECM-210D -- Adaptive heated oxygen sensor control, bank 1 -- Signal too low
P2193 -- ECM-211C -- Adaptive heated oxygen sensor control, bank 2 -- Signal too high
P2194 -- ECM-211D -- Adaptive heated oxygen sensor control, bank 2 -- Signal too low
P2195 -- ECM-24B0 -- Front heated oxygen sensor, bank 1 -- Faulty signal
P2196 -- ECM-24BB -- Front heated oxygen sensor, bank 1 -- Signal missing
P2197 -- ECM-25B0 -- Front heated oxygen sensor, bank 2 -- Faulty signal
P2198 -- ECM-25BB -- Front heated oxygen sensor, bank 2 -- Signal missing
P2227 -- ECM-1130 -- Atmospheric pressure sensor -- Faulty signal
P2227 -- ECM-113B -- Atmospheric pressure sensor -- Signal missing
P2227 -- ECM-113C -- Atmospheric pressure sensor -- Signal too high
P2227 -- ECM-113D -- Atmospheric pressure sensor -- Signal too low

Visit <https://truckmanualshub.com/> for more information's

P2228 -- ECM-112D -- Atmospheric pressure sensor -- Signal too low
P2229 -- ECM-112C -- Atmospheric pressure sensor -- Signal too high
P2231 -- ECM-243B -- Front heated oxygen sensor, bank 1 -- Signal missing
P2232 -- ECM-2220 -- Rear heated oxygen sensor, bank 1 -- Faulty signal
P2234 -- ECM-253B -- Front heated oxygen sensor, bank 2 -- Signal missing
P2235 -- ECM-2320 -- Rear heated oxygen sensor, bank 2 -- Faulty signal
P2237 -- ECM-247B -- Front heated oxygen sensor, bank 1 -- Signal missing
P2238 -- ECM-2470 -- Front heated oxygen sensor, bank 1 -- Faulty signal
P2239 -- ECM-247C -- Front heated oxygen sensor, bank 1 -- Signal too high
P2240 -- ECM-257B -- Front heated oxygen sensor, bank 2 -- Signal missing
P2241 -- ECM-2570 -- Front heated oxygen sensor, bank 2 -- Faulty signal
P2242 -- ECM-257C -- Front heated oxygen sensor, bank 2 -- Signal too high
P2243 -- ECM-249B -- Front heated oxygen sensor, bank 1 -- Signal missing
P2247 -- ECM-259B -- Front heated oxygen sensor, bank 2 -- Signal missing
P2251 -- ECM-24AB -- Front heated oxygen sensor, bank 1 -- Signal missing
P2254 -- ECM-25AB -- Front heated oxygen sensor, bank 2 -- Signal missing
P2281 -- ECM-640C -- Turbocharger (TC) control -- Signal too high
P2281 -- ECM-640D -- Turbocharger (TC) control -- Signal too low
P2300 -- ECM-360D -- Ignition coil cyl 1, signal -- Signal too low
P2301 -- ECM-360C -- Ignition coil cyl 1, signal -- Signal too high
P2303 -- ECM-361D -- Ignition coil cyl 2, signal -- Signal too low
P2304 -- ECM-361C -- Ignition coil cyl 2, signal -- Signal too high
P2306 -- ECM-362D -- Ignition coil cyl 3, signal -- Signal too low
P2307 -- ECM-362C -- Ignition coil cyl 3, signal -- Signal too high
P2309 -- ECM-363D -- Ignition coil cyl 4, signal -- Signal too low
P2310 -- ECM-363C -- Ignition coil cyl 4, signal -- Signal too high
P2312 -- ECM-364D -- Ignition coil cyl 5, signal -- Signal too low
P2313 -- ECM-364C -- Ignition coil cyl 5, signal -- Signal too high
P2315 -- ECM-365D -- Ignition coil cyl 6, signal -- Signal too low
P2316 -- ECM-365C -- Ignition coil cyl 6, signal -- Signal too high
P2400 -- ECM-433B -- Leakage diagnostic unit, pump -- Signal missing
P2401 -- ECM-433D -- Leakage diagnostic unit, pump -- Signal too low
P2402 -- ECM-433C -- Leakage diagnostic unit, pump -- Signal too high
P2404 -- ECM-4360 -- Leak diagnostic unit -- Faulty signal
P2405 -- ECM-436D -- Leak diagnostic unit -- Signal too low
P2406 -- ECM-436C -- Leak diagnostic unit -- Signal too high
P2407 -- ECM-436B -- Leak diagnostic unit - Signal missing
P240A -- ECM-431B -- Leakage diagnostic unit, preheating -- Signal missing
P240B -- ECM-431D -- Leakage diagnostic unit, preheating -- Signal too low
P240C -- ECM-431C -- Leakage diagnostic unit, preheating -- Signal too high
P2414 -- ECM-24C0 -- Front heated oxygen sensor, bank 1 -- Faulty signal
P2415 -- ECM-25C0 -- Front heated oxygen sensor, bank 2 -- Faulty signal
P2418 -- ECM-432B -- Leak diagnostic unit, valve -- Signal missing
P2419 -- ECM-432D -- Leak diagnostic unit, valve -- Signal too low
P2420 -- ECM-432C -- Leak diagnostic unit, valve -- Signal too high
P250B -- ECM-5500 -- Oil level -- Faulty signal
P250C -- ECM-550D -- Oil level -- Signal too low
P2510 -- ECM-8210 -- System relay -- Faulty signal
P2511 -- ECM-821B -- System relay -- Signal missing
P2626 -- ECM-246B -- Front heated oxygen sensor, bank 1 -- Signal missing
P2629 -- ECM-256B -- Front heated oxygen sensor, bank 2 -- Signal missing
U0001 -- ECM-A130 -- Communication control module -- Signal missing
U0002 -- ECM-E000 -- Communication control module -- Internal fault
U0073 -- ECM-E003 -- Configuration error -- Faulty signal
U0103 -- ECM-7300 -- Gear-shift position sensor -- Faulty signal
U0167 -- ECM-710B -- Communication Immobilizer -- Signal missing

Visit <https://truckmanualshub.com/> for more information's

U0401 -- ECM-A020 -- Configuration error -- Signal missing
U0426 -- ECM-7100 -- Communication Immobilizer -- Faulty signal

Visit <https://truckmanualshub.com/> for more information's