

Code	Dot	Condition
-	Flash	Condition Normal
01	Solid	Internal ECM Fault
02	Solid	Platform ECM Fault
03	Solid	Undefined Configuration
20	Flash	Platform Choke/Glow Plug Switch Fault
21	Flash	Platform Engine Start Switch Fault
22	Flash	Platform Left Turn Switch Fault
23	Flash	Platform Right Turn Switch Fault
26	Flash	Platform Up/Down Switch Fault
27	Solid	Platform Left Enable High Switch Fault
28	Solid	Platform Left Enable Low Switch Fault
29	Solid	Platform Drive Enable Switch Fault
30	Flash	Platform Joystick Fault
40	Flash	Right Turn Coil Fault
41	Flash	Left Turn Coil Flash
42	Flash	Up Coil Fault
43	Flash	Brake Coil Fault
44	Flash	Motor 1 Coil Fault
45	Flash	Motor 2 Coil Fault
46	Flash	Motor 3 Coil Fault
47	Flash	Motor 4 Coil Fault
48	Flash	Down Coil Fault
49	Flash	Drive 1 Coil Fault
50	Flash	Drive 2 Coil Fault
51	Flash	Drive 3 Coil Fault
52	Flash	Proportional Coil Fault
60	Flash	LP Coil Fault
61	Flash	Gas/Diesel Coil Fault
66	Flash	