
https://truckmanualshub.com/

CLICK HERE FOR STANDARD TABLE OF CONTENTS

CLICK HERE FOR OPTIONAL TABLE OF CONTENTS

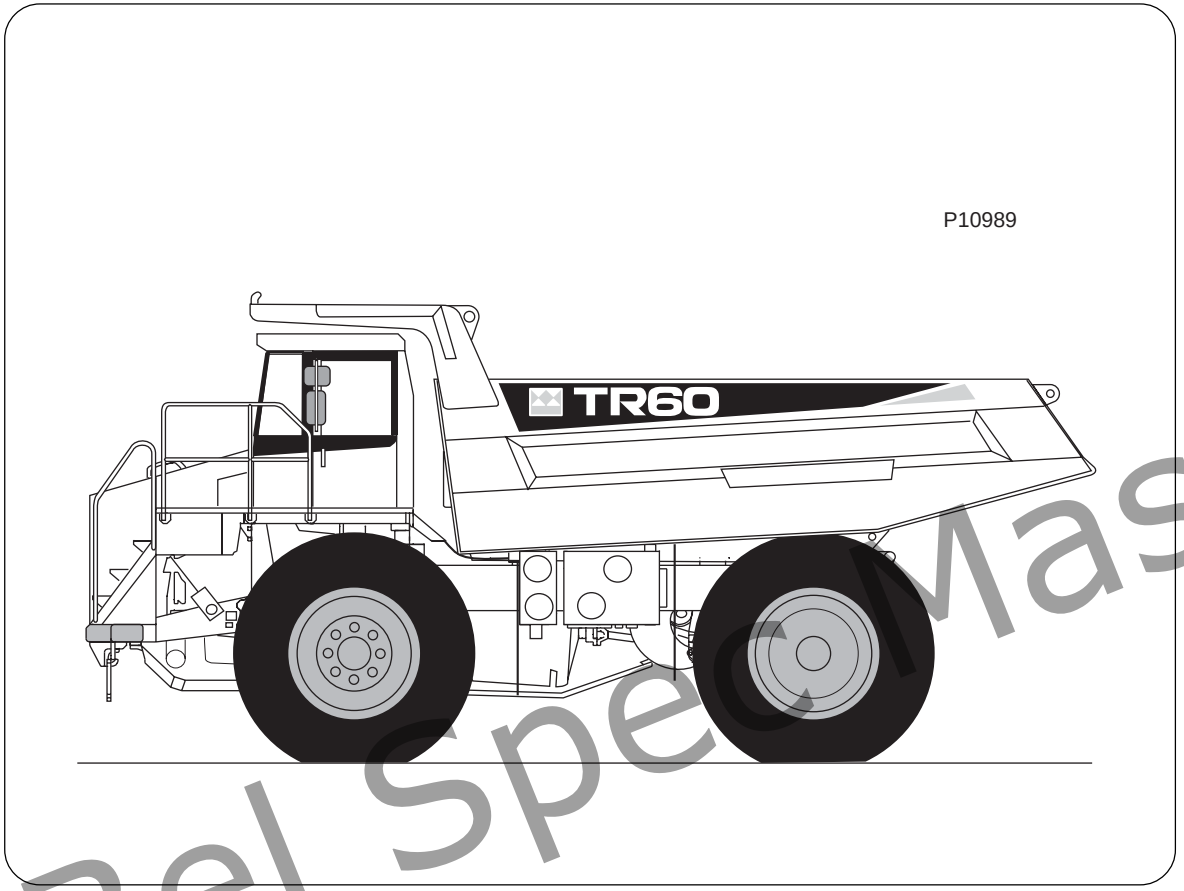

TEREX

Parts Book

CLICK HERE TO RETURN TO MAIN LIBRARY INDEX

Part Number
15275765

Bel SpecMash - servis

TR60 Off-Highway Truck

(Cummins QSK19-C650 Tier 2 Powered)

From Serial No. T8391011

April 2002
Revised: January 2004

PUBLISHED BY:
PRODUCT SUPPORT DEPARTMENT

TEREX EQUIPMENT LIMITED
MOTHERWELL, SCOTLAND

https://truckmanualshub.com/

THIS PAGE IS INTENTIONALLY LEFT BLANK

Bel Spec Mash - servis

https://truckmanualshub.com/

WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months after sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

Bel Spec Mash - servis

https://truckmanualshub.com/

THIS PAGE IS INTENTIONALLY LEFT BLANK

Bel Spec Mash - servis

https://truckmanualshub.com/

INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS **SECTION 140 - FRONT AXLE GROUP** **SECTION 230 - BODY HOIST SYSTEM etc.**

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings.
For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.
   EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts.They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

Bel Spec Mash - servis

https://truckmanualshub.com/

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE -	1	9052564	Pump Assy.
	2	9058512	. Shaft
	3	9024169	. Ring
	4	9058132	. Control Assy.
	5	9058135	. . Spring
	6	9072162	Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

Amps ..... Amperes	Hsg ..... Housing	N.I ..... Not Illustrated
As R ..... As Required	I.D ..... Inside Diameter	N.L.A ..... No Longer Available
Assy ..... Assembly	L.H ..... Left Hand	N.S.S ..... Not Sold Separately
Brkt ..... Bracket	L.W ..... Lockwasher	O.D ..... Outside Diameter
Cad-Pltd ..... Cadium Plated	Lg ..... Long	Pr ..... Pair
Comm ..... Commencement of production	Lkg ..... Linkage	P.T.O ..... Power-Take-Off
E.S.N ..... Elastic Stop Nut	Mtg ..... Mounting	R.H ..... Right Hand
Ftgs ..... Fittings	N.C ..... Note Code	Std ..... Standard

Bel Spec Mash - servis

https://truckmanualshub.com/

TEREX

Truck

STANDARD SECTIONS

CHASSIS	100	FUEL SYSTEM	200
ENGINE	110	COOLING SYSTEM	210
TRANSMISSION	120	STEERING SYSTEM	220
DRIVELINE	130	BODY SYSTEM	230
FRONT AXLE	140	BRAKING SYSTEM	250
REAR AXLE	160	CAB	260
BRAKE PARTS	165	BODY	270
SUSPENSION SYSTEM	180	DECALS	290
ELECTRICAL SYSTEM	190	MISCELLANEOUS	300

Bel Spec Mash - servis

https://truckmanualshub.com/

TABLE OF CONTENTS FOR MODEL TR60 QSK19C ENG FROM SERIAL NO T8391011 REVISED 01/04

SECT - PAGE - PLI DESCRIPTION

SECTION 100 CHASSIS
100-0010-8391 CHASSIS
100-0040-8391 HOOD AND MOUNTING
100-0070-8391 FENDERS AND MOUNTING R1 08/03
100-0090-8391 LADDERS AND HANDRAILS
100-0100-8391 RADIATOR GUARD AND MOUNTING R1 09/02
100-0140-8391 MUDGUARDS

SECTION 110 ENGINE
110-0030-8391 ENGINE AND MOUNTING
110-0030-8391 ENGINE AND MOUNTING 01/03
110-0050-8391 AIR CLEANER
110-0060-8391 AIR CLEANER PIPES AND HOSES
110-0130-8391 POWER TAKEOFF - ENG

SECTION 120 TRANSMISSION
120-0010-8391 TRANSMISSION MOUNTING R1 04/03
120-0020-8391 TRANSMISSION BREAKDOWN
120-0050-8391 CONTROL VALVE
120-0070-8391 SHIFT CONTROL
120-0090-8391 POWER TAKEOFF - TRANS
120-0100-8391 FILTER
120-0110-8391 OIL LINES-TRANSMISSION
120-0190-8391 RETARDER CONTROL LINES - HYD R1 11/03
120-0200-8391 FRONT COVER & CONVERTER GROUP
120-0210-8391 CONVERTER HOUSING GROUP
120-0220-8391 OIL PUMP
120-0230-8391 FILTER ADAPT/REGULATOR VALVES
120-0240-8391 LOCKUP VALVE
120-0260-8391 RETARDER GROUP
120-0270-8391 RETARDER CONTROL VALVE
120-0280-8391 SPLITTER GEARING AND CLUTCHES
120-0290-8391 MAIN HOUSING GROUP
120-0300-8391 HIGH RANGE GEARING & CLUTCHES
120-0310-8391 INTER RANGE GEARING & CLUTCHES
120-0320-8391 LOW RANGE GEARING & CLUTCHES
120-0330-8391 REV RANGE GEARING & CLUTCHES
120-0340-8391 REAR COVER GROUP

SECT - PAGE - PLI DESCRIPTION

SECTION 130 DRIVELINE
130-0010-8391 FRONT DRIVELINE
130-0020-8391 REAR DRIVELINE

SECTION 140 FRONT AXLE
140-0040-8391 WHEEL, RIM AND TYRE-FRONT

SECTION 160 REAR AXLE
160-0020-8391 DIFFERENTIAL-REAR
160-0030-8391 AXLE GROUP-REAR R1 09/02
160-0040-8391 PLANETARY GEARING-REAR
160-0050-8391 WHEEL, RIM AND TYRE-REAR

SECTION 165 BRAKE PARTS
165-0020-8391 BRAKE PARTS-FRONT WHEEL-RIGIDS
165-0030-8391 BRAKE PARTS-REAR WHEEL-RIGIDS

SECTION 180 SUSPENSION SYSTEM
180-0030-8391 FRONT RIDE CYLINDER
180-0050-8391 REAR RIDE CYLINDER

SECTION 190 ELECTRICAL SYSTEM
190-0010-8391 TERMINALS
190-0011-8391 CONNECTORS
190-0030-8391 CABLES/HARNESSES-CAB
190-0040-8391 CABLES/HARNESSES-CHASS/ENG R2 08/03
190-0070-8391 BATTERY AND CABLES
190-0080-8391 BATTERY MOUNTING
190-0100-8391 ELECTRICAL LIGHTING SYSTEM R1 04/03
190-0110-8391 ALTERNATOR
190-0120-8391 STARTER MOTOR
190-0270-8391 SWITCHES AND SENSORS R1 04/03
190-0300-8391 RADIO CASSETTE AND SPEAKERS
190-0310-8391 ELECTRICAL HORN R1 08/03

SECTION 200 FUEL SYSTEM
200-0010-8391 FUEL TANK AND MOUNTING
200-0040-8391 FUEL LINES R1 09/02
200-0050-8391 ACCELERATOR LINKAGE
200-0050-8391 ACCELERATOR LINKAGE 09/02

Bel Spec Mash - servis

https://truckmanualshub.com/

TABLE OF CONTENTS FOR MODEL TR60 QSK19C ENG FROM SERIAL NO T8391011 REVISED 01/04

SECT - PAGE - PLI DESCRIPTION

SECTION210 COOLING SYSTEM
210-0010-8391 RADIATOR ASSEMBLY R2 04/03
210-0020-8391 RADIATOR MOUNTING
210-0030-8391 RADIATOR PIPING R1 09/02
210-0035-8391 CHARGE AIR COOLER & PIPING R1 01/03
210-0040-8391 RADIATOR HEADER TANK AND HOSES R1 08/03
210-0050-8391 OIL COOLER-DISC BRAKES
210-0051-8391 OIL COOLER PIPING-DISC BRAKES
210-0060-8391 OIL COOLER AND PIPING-TRANS

SECTION 220 STEERING SYSTEM
220-0010-8391 STEERING LINES R4 11/03
220-0015-8391 STEERING LINES FILTRATION
220-0040-8391 TANK AND MOUNTING-STEERING
220-0050-8391 PUMP-STEERING
220-0060-8391 PUMP AND ACCUMULATOR MOUNTING
220-0080-8391 ACCUMULATOR-STEERING
220-0080-8391 ACCUMULATOR-STEERING 01/03
220-0080-8391 ACCUMULATOR-STEERING 09/02
220-0080-8391 ACCUMULATOR-STEERING 01/04
220-0090-8391 STEERING VALVE
220-0110-8391 DOUBLE RELIEF VALVE
220-0120-8391 STEERING CYLINDER
220-0120-8391 STEERING CYLINDER 11/03
220-0130-8391 RELIEF VALVE-STEERING
220-0150-8391 FILTER-STEERING
220-0190-8391 STEERING LINKAGE
220-0230-8391 STEERING COLUMN MOUNTING

SECTION 230 BODY SYSTEM
230-0020-8391 LINES AND FITTINGS-BODY HOIST R1 01/03
230-0021-8391 SERVO CONTROL LINES-BODY
230-0040-8391 TANK AND MOUNTING-BODY HOIST R1 09/02
230-0041-8391 BREATHER LINE-HYDRAULIC TANKS
230-0050-8391 PUMP-BODY HOIST
230-0060-8391 CONTROL VALVE-BODY HOIST
230-0070-8391 CONTROL VALVE MOUNTING
230-0081-8391 JOYSTICK-BODY CONTROL
230-0090-8391 KICK-OVER VALVE
230-0090-8391 KICK-OVER VALVE 08/03
230-0100-8391 KICK-OVER VALVE MOUNTING

SECT - PAGE - PLI DESCRIPTION

SECTION 230 BODY SYSTEM-CONTINUED
230-0120-8391 RELIEF VALVE
230-0121-8391 PILOT SUPPLY VALVE
230-0130-8391 HOIST CYLINDERS

SECTION 250 BRAKING SYSTEM
250-0020-8391 BRAKE LINES-HYDRAULIC R1 11/03
250-0050-8391 BRAKE MANIFOLD/PAS VALVE
250-0060-8391 BRAKE ACCUMULATOR
250-0070-8391 TREADLE VALVE
250-0090-8391 DIRECTIONAL CONTROL VALVE
250-0100-8391 MONOBLOCK BRAKE VALVE
250-0130-8391 RETARDER CONTROL VALVE-BRAKES
250-0240-8391 FILTER ASSEMBLY-DISC BRAKE

SECTION 260 CAB
260-0010-8391 CAB ASSEMBLY
260-0011-8391 CAB CENTRE CONSOLE
260-0015-8391 CAB MOUNTING
260-0030-8391 CAB DOOR-LEFT HAND
260-0040-8391 CAB DOOR-RIGHT HAND
260-0080-8391 SWITCHES AND INSTRUMENTS
260-0090-8391 SEAT-DRIVER R1 08/03
260-0110-8391 SEAT-PASSENGER
260-0130-8391 AIR CONDITIONER/HEATER R1 04/03
260-0130-8391 AIR CONDITIONER/HEATER 01/04
260-0140-8391 HEATER LINES AND WIRING
260-0145-8391 AIR CONDITIONER LINES R1 01/03
260-0190-8391 WINDSCREEN WASHER

SECTION 270 BODY
270-0010-8391 BODY ASSEMBLY R1 09/02
270-0020-8391 EXHAUST HEATED BODY
270-0080-8391 ROCK EJECTORS

SECTION 290 DECALS
290-0010-8391 DECALS-ENGLISH R1 01/03
290-0010-8391 DECALS-ENGLISH 08/03


SECTION 300 MISCELLANEOUS
300-0040-8391 MULTI-TUBE CLAMPS AND HARDWARE

Bel-Spec Mashin servis

https://truckmanualshub.com/

100-0010-8391 CHASSIS
FROM SERIAL NO. T8391011

DRAWING NO. P10275

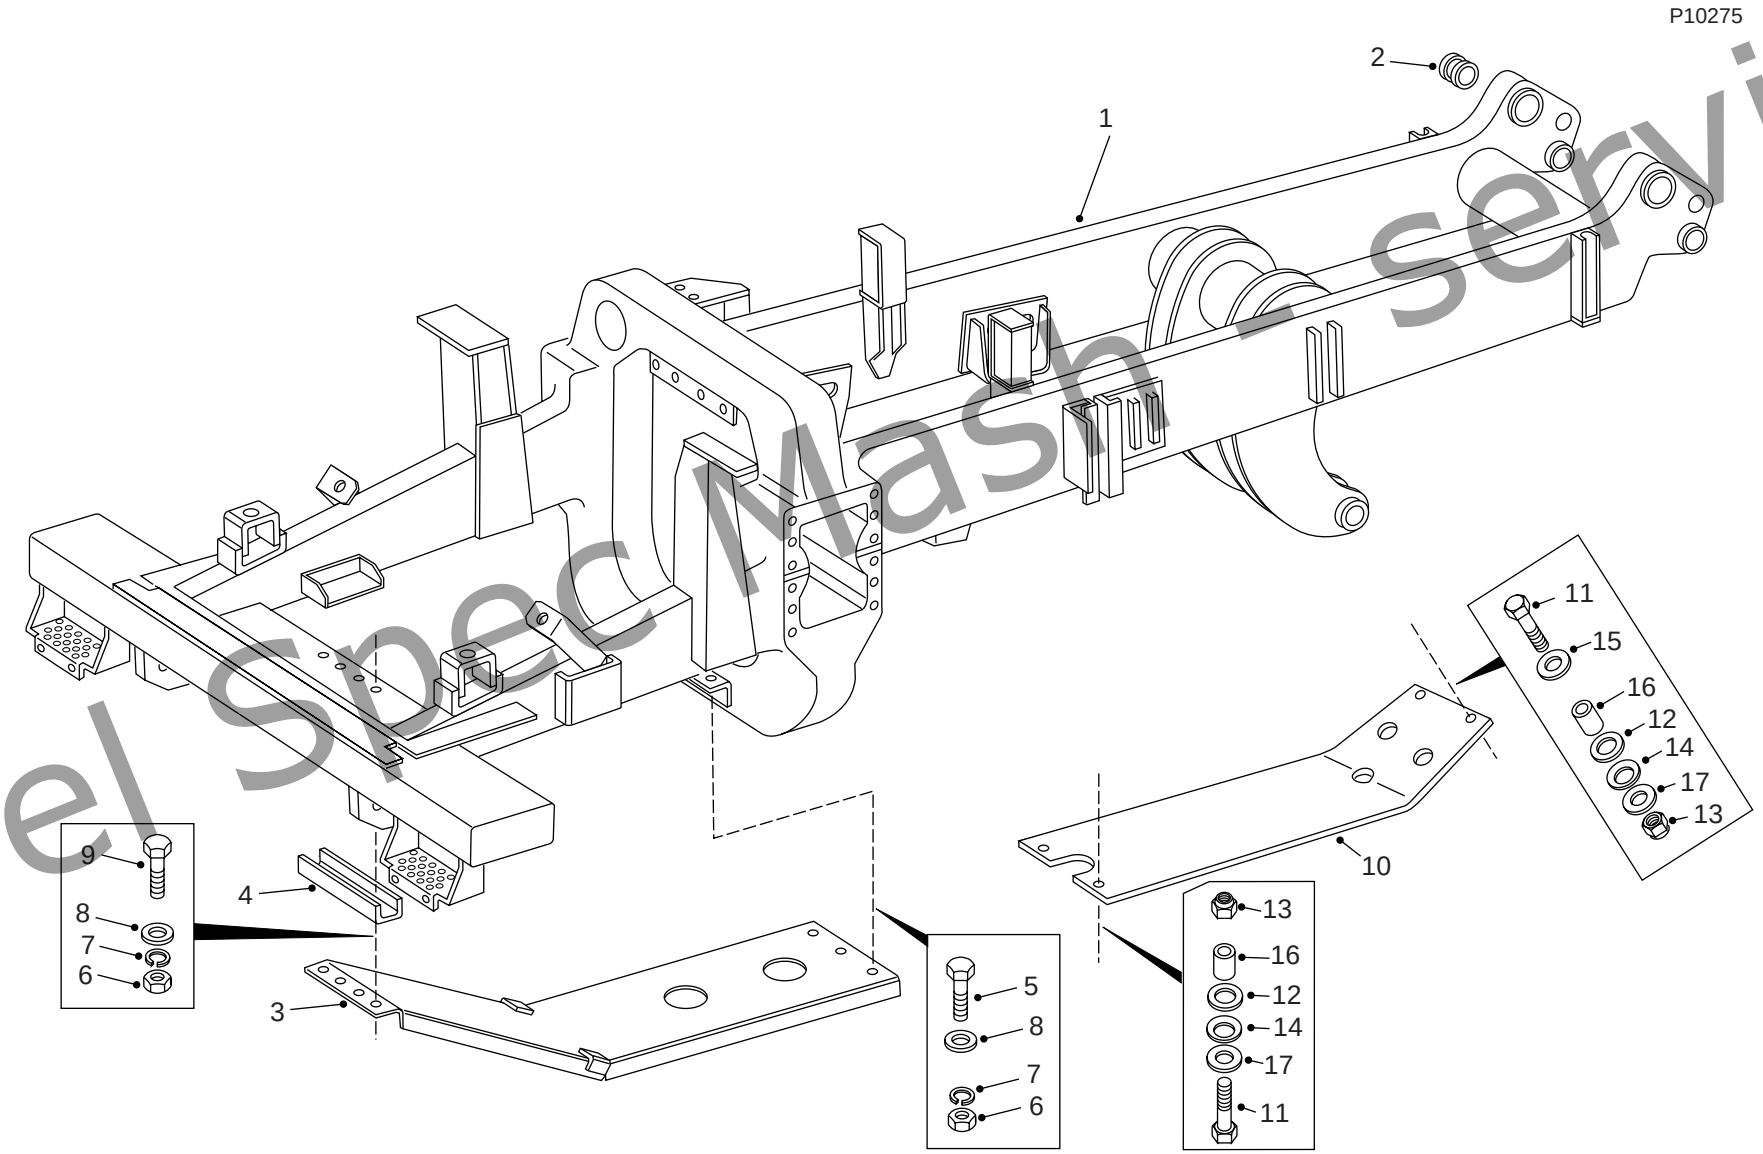

Bel Spec Mash - servis

https://truckmanualshub.com/

100-0010-8391 CHASSIS
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312917	FRAME ASSY-COMPLETE		
	002	002	09015394	.BUSHING		
	003	001	15232910	GUARD ASSY		
	004	001	15258186	CHANNEL ASSY		
	005	003	00271612	BOLT		
	006	007	00220081	NUT		
	007	007	00103332	LOCKWASHER		
	008	007	00106268	WASHER		
	009	004	00271619	BOLT		
	010	001	15304072	GUARD-TRANSMISSION		
	011	004	00271621	BOLT		
	012	004	15303749	WASHER-HARDENED		
	013	004	09355771	NUT		
	014	004	15250985	SPRING-DISC		
	015	004	09011226	WASHER		
	016	004	15303750	SPACER		
	017	004	15020053	WASHER		

Bel Spec Mash - servis

https://truckmanualshub.com/

100-0040-8391 HOOD AND MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P9481

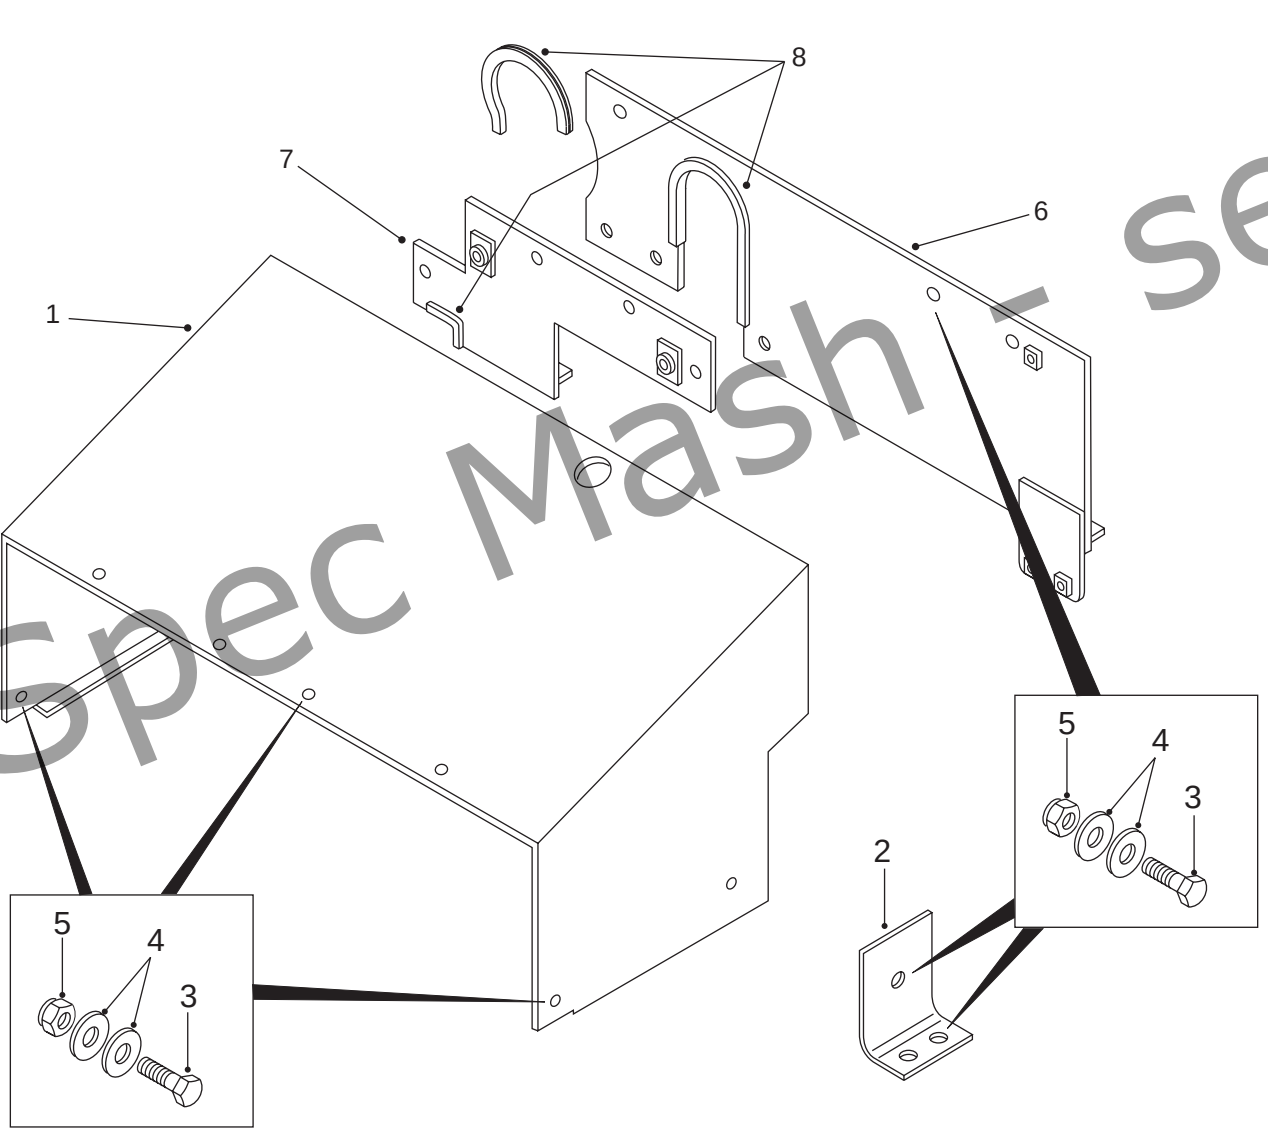

Bel Spec Mash - servis

https://truckmanualshub.com/

100-0040-8391 HOOD AND MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312961	HOOD ASSEMBLY		
	002	002	15252142	PLATE		
	003	006	00179885	BOLT		
	004	022	09267949	WASHER-HARDENED		
	005	006	00120378	NUT		
	006	001	15304242	BAFFLE ASSY-HOOD		
	007	001	15257809	BAFFLE ASSY-HOOD		
	008	ASR	09368561	BEADING-BULK		

Bel Spec Mash - servis


https://truckmanualshub.com/

R1 08/03 (ECN 105627)

100-0070-8391 FENDERS AND MOUNTING

FROM SERIAL NO. T8391011

DRAWING NO. P10278A

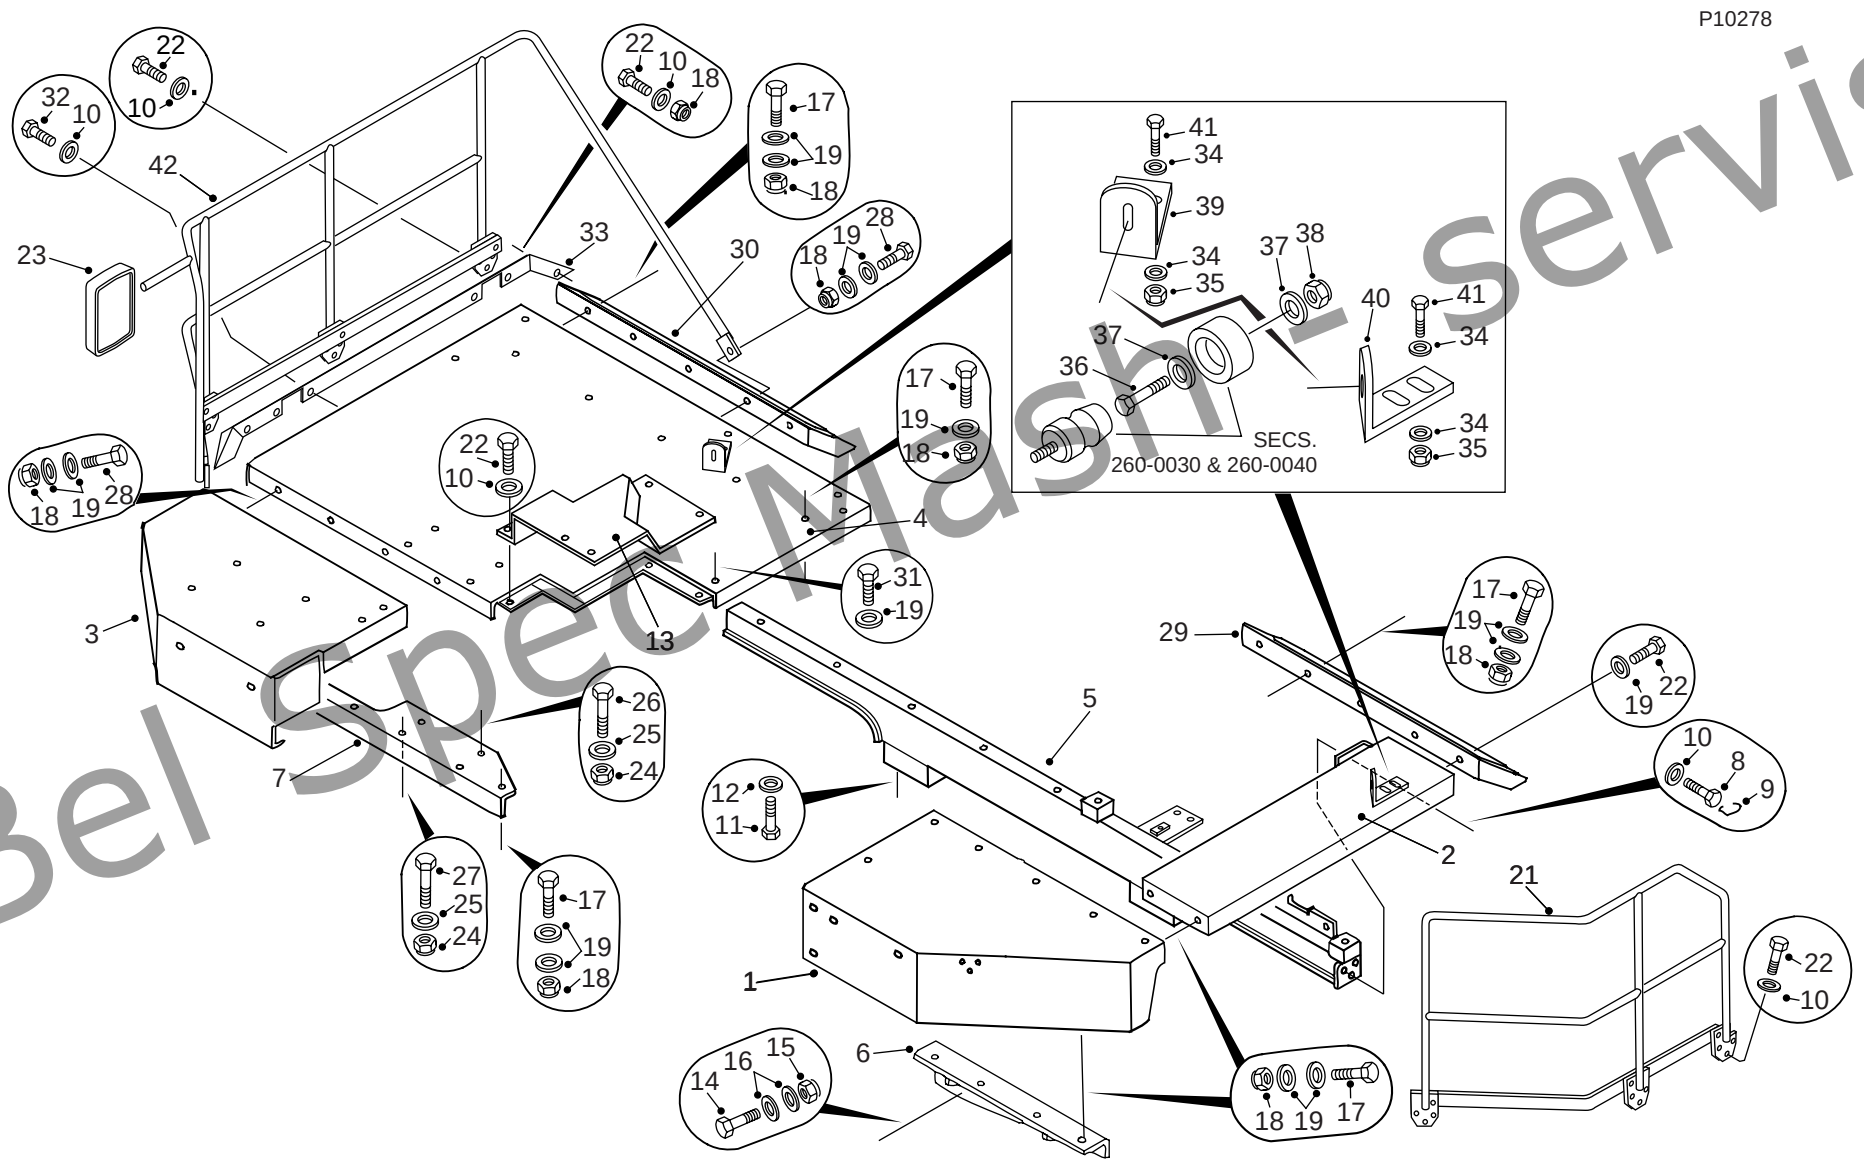


Bel Spec Mash - servis

https://truckmanualshub.com/

100-0070-8391 FENDERS AND MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P10278B

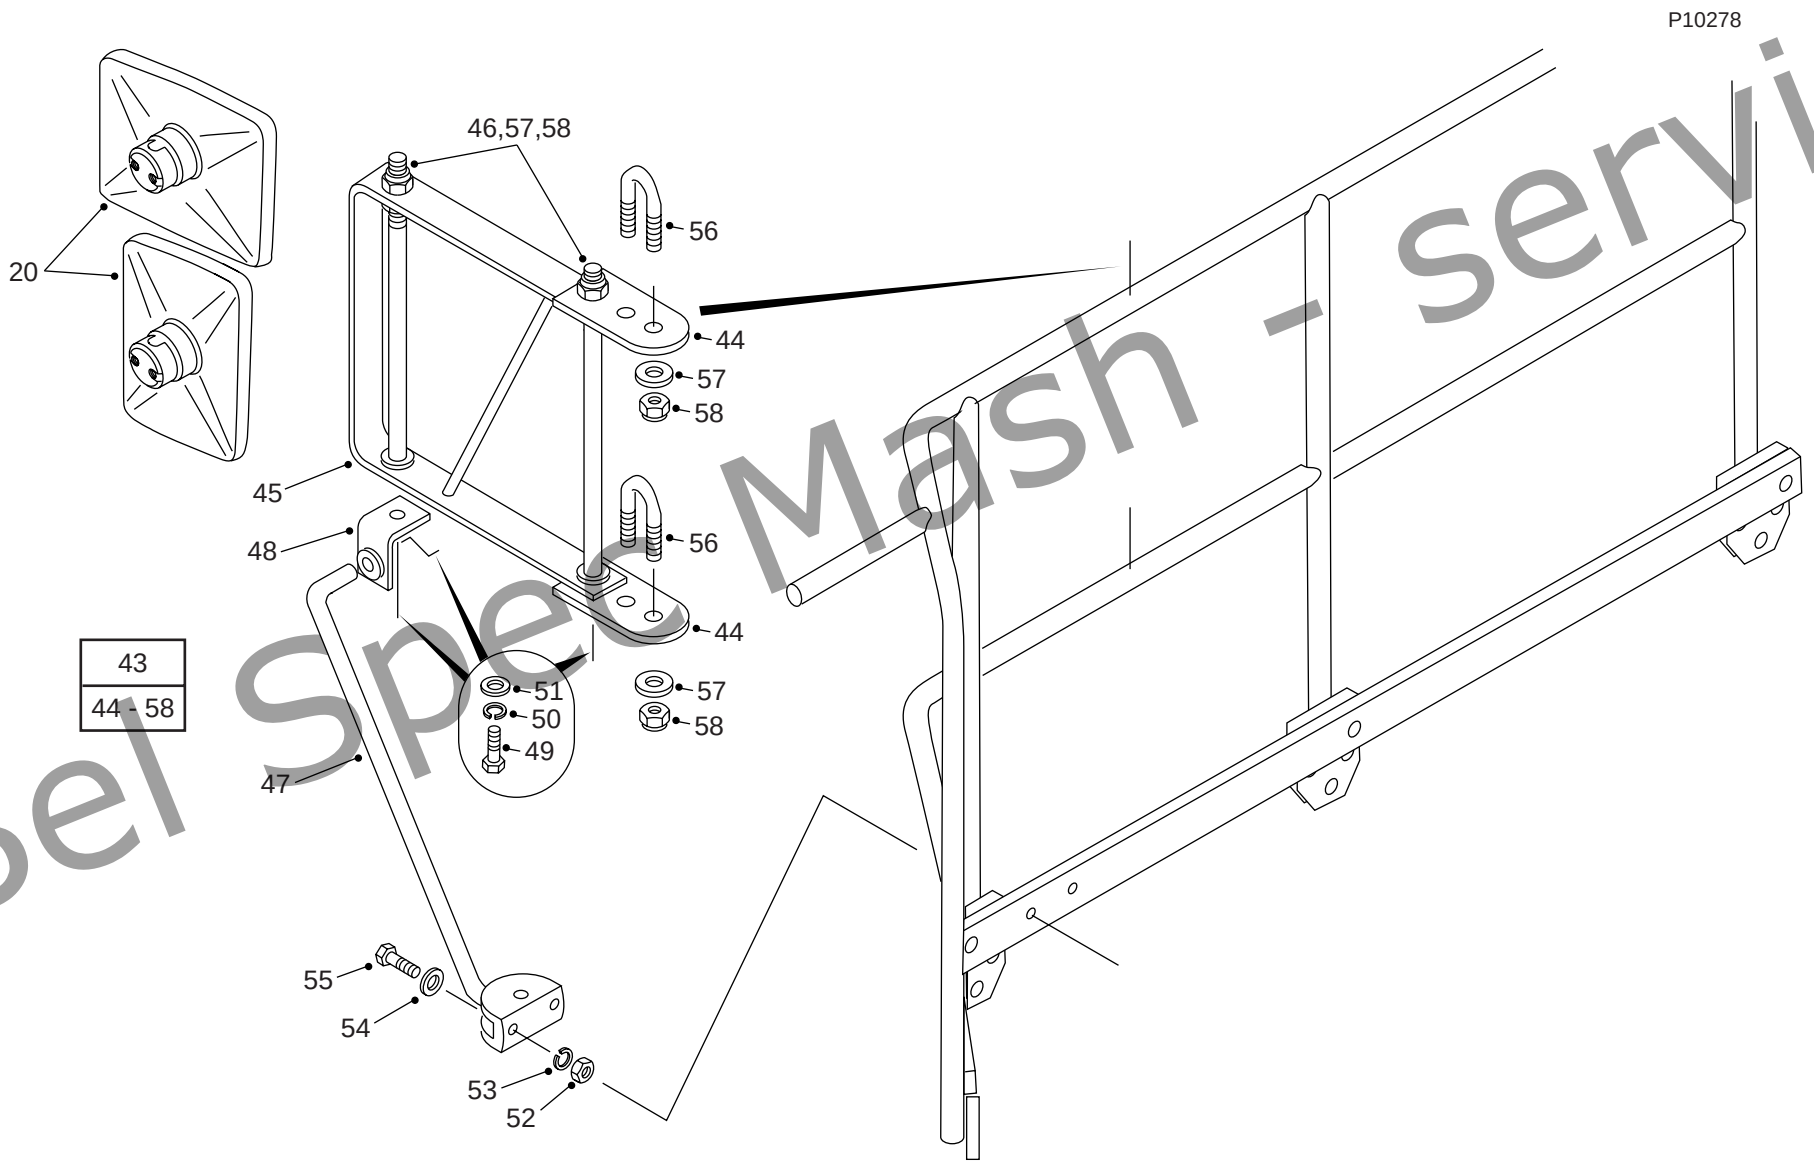

Bel Spec Mash - servis

R1 08/03 (ECN 105627)

https://truckmanualshub.com/

R1 08/03 (ECN 105627)

100-0070-8391 FENDERS AND MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312948	FENDER ASSY-LH		
	002	001	15251926	PLATFORM ASSY-LH		
	003	001	15312950	FENDER ASSY-RH		
	004	001	15310457	PLATFORM ASSY R.H.S.		
	005	001	15301205	CROSSMEMBER-CAB REAR		
	006	001	15247991	SUPPORT-LH		
	007	001	15256827	SUPPORT-RH		
	008	003	09262364	BOLT		
	009	ASR	09113457	LOCKWIRE		
	010	022	09270000	WASHER-HARDENED		
	011	004	09009275	BOLT		
	012	004	09019631	WASHER-HARDENED		
	013	001	15257874	COVER-ENGINE ACCESS		
	014	006	00271612	BOLT		
	015	004	09355771	NUT		
	016	008	09250715	WASHER-HARDENED		
	017	010	00179887	BOLT		
	018	018	00274209	LOCKNUT		
	019	032	09267949	WASHER-HARDENED		
	020	002	09077400	MIRROR		
	021	001	15302681	HANDRAIL ASSY-LH		
	022	031	00179885	BOLT		
	023	001	15246087	MIRROR-WIDE ANGLE		
	024	004	09355771	NUT		
	025	004	00106268	WASHER		
	026	002	00271612	BOLT		
	027	002	00271614	BOLT		
	028	005	00179889	BOLT		
	029	001	15254780	GUARD-MUD LH		
	030	001	15312804	MUDGUARD		
	031	001	00190270	BOLT		
	032	005	00179880	BOLT		
	033	001	15312805	FENDER EXTENSION		
	034	008	09270000	WASHER-HARDENED		
	035	004	00274209	LOCKNUT		
	036	002	06350625	BOLT		
	037	004	07150620	WASHER		
	038	002	06470601	LOCKNUT		
	039	001	15302574	BENT PLATE		
	040	001	15302618	BRACKET-LH DOOR STOP		

100-0070-8391 FENDERS AND MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	004	00179887	BOLT		
	042	001	15306111	HANDRAIL ASSY-RH		
	043	001	15304667	.MIRROR ATTACHMENT ASSY		
	044	002	15304664	..PLATE		
	045	001	15304670	..ARM ASSY-MIRROR		
	046	002	15304663	..BAR-MIRROR MTG		
	047	001	15304704	..ROD ASSY		
	048	001	15304671	..BRACKET ASSY		
	049	003	00179820	..BOLT		
	050	003	00103320	..LOCKWASHER		
	051	003	00103340	..WASHER		
	052	002	00109084	..NUT		
	053	002	00103319	..LOCKWASHER		
	054	002	00103339	..WASHER		
	055	002	00179795	..BOLT		
	056	002	15302982	..U-BOLT		
	057	002	00102639	..NUT		
	058	002	09354243	..LOCKNUT		

PerSpec Mash-servis

https://truckmanualshub.com/


THIS PAGE IS INTENTIONALLY LEFT BLANK

Bel Spec Mash - servis

https://truckmanualshub.com/

100-0090-8391 LADDERS AND HANDRAILS
FROM SERIAL NO. T8391011

DRAWING NO. P9473

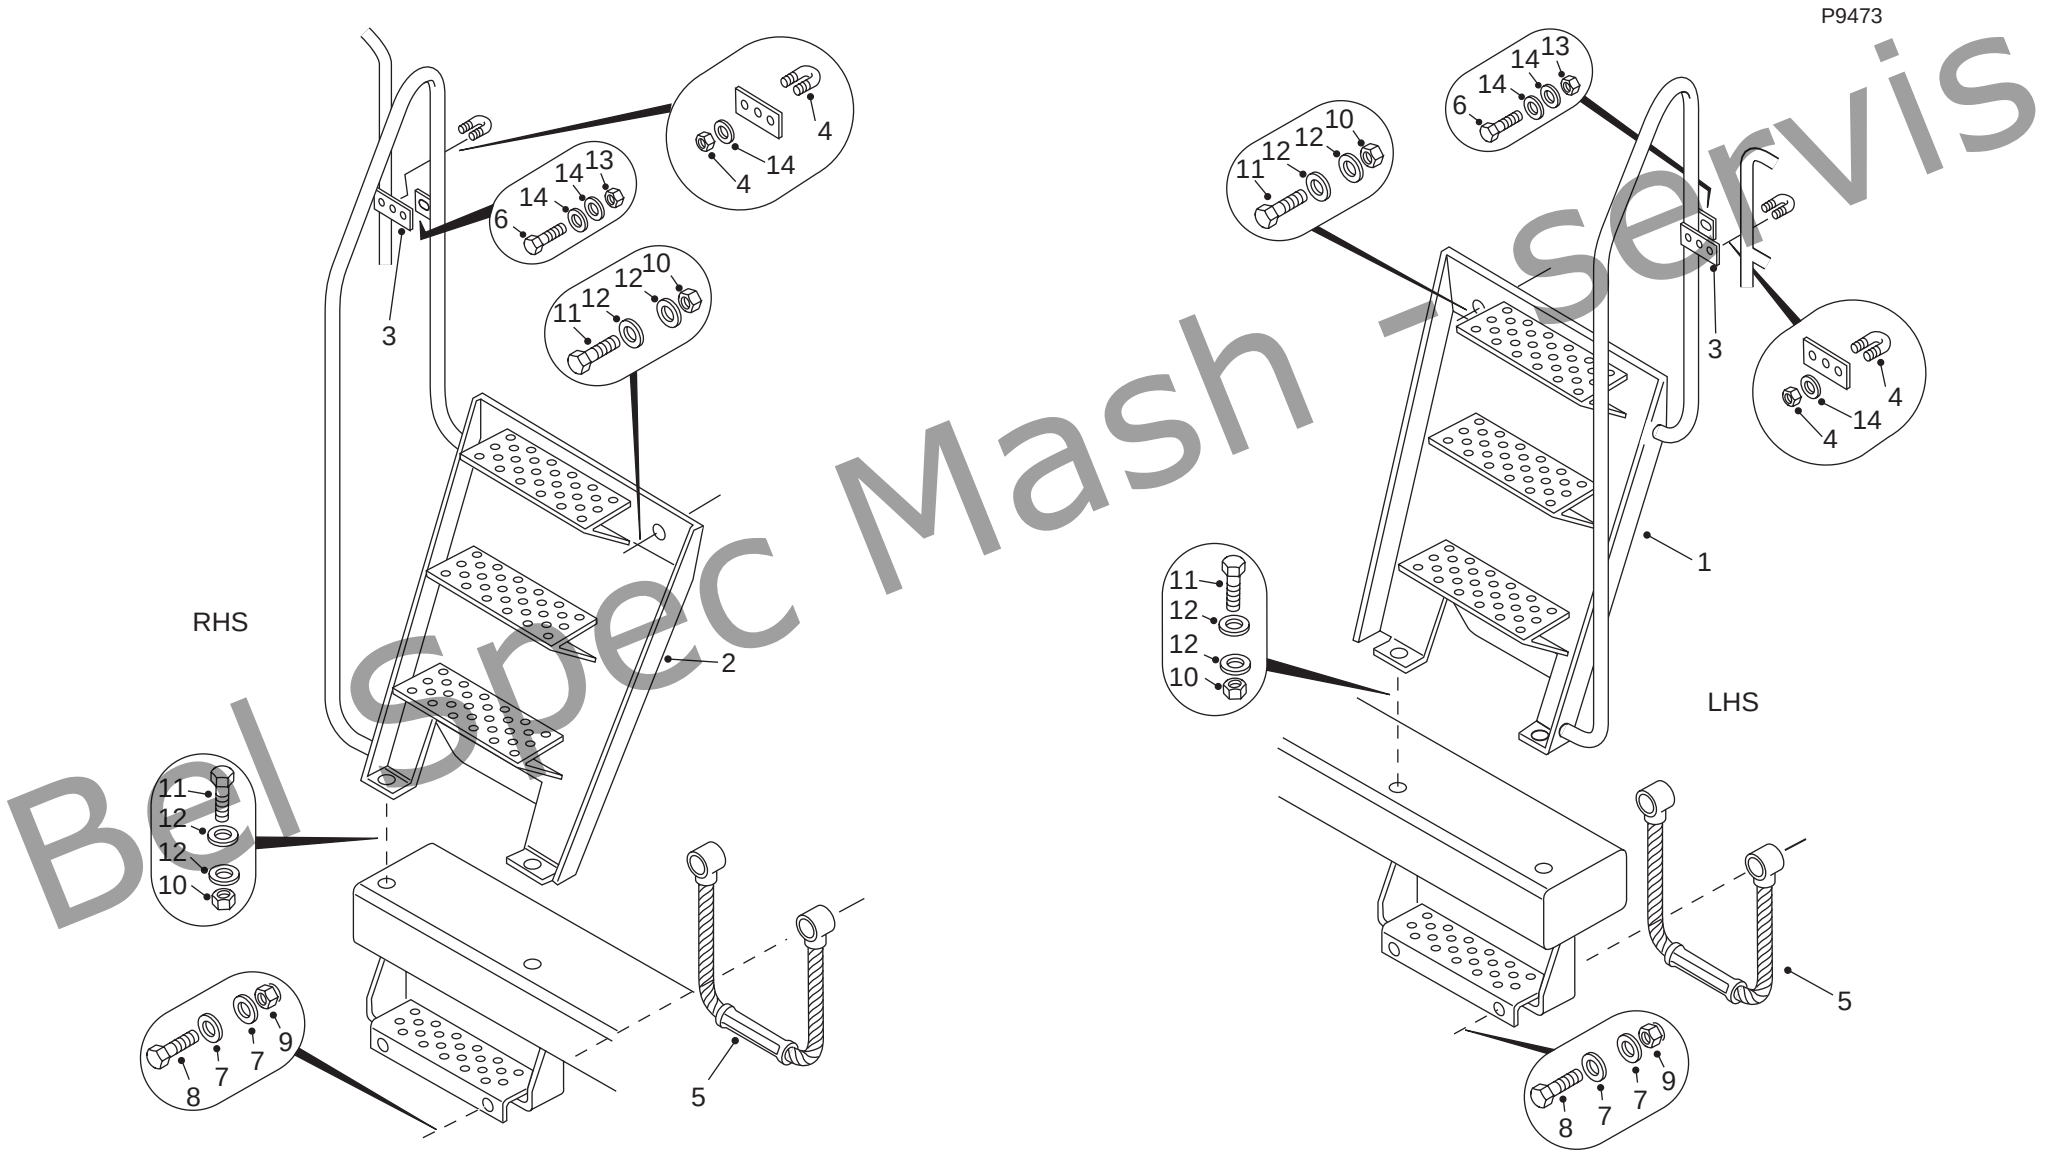

Bel Spec Mash - servis

https://truckmanualshub.com/

100-0090-8391 LADDERS AND HANDRAILS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312900	STEP ASSY-LH		
	002	001	15312901	STEP ASSY-RH		
	003	002	15302981	PLATE		
	004	002	15302982	U-BOLT		
	005	002	15255698	STEP ASSY		
	006	002	00179841	BOLT		
	007	008	00106265	WASHER		
	008	004	00179893	BOLT		
	009	004	00274209	LOCKNUT		
	010	008	00102637	NUT		
	011	004	00179885	BOLT		
	012	016	09267949	WASHER-HARDENED		
	013	004	09417713	NUT		
	014	008	09060202	WASHER-HARDENED		

Bel Spec Mash - servis


https://truckmanualshub.com/

R1 (ECN 104332, ECN 104797)

100-0100-8391 RADIATOR GUARD AND MOUNTING

FROM SERIAL NO. T8391011

DRAWING NO. P10974

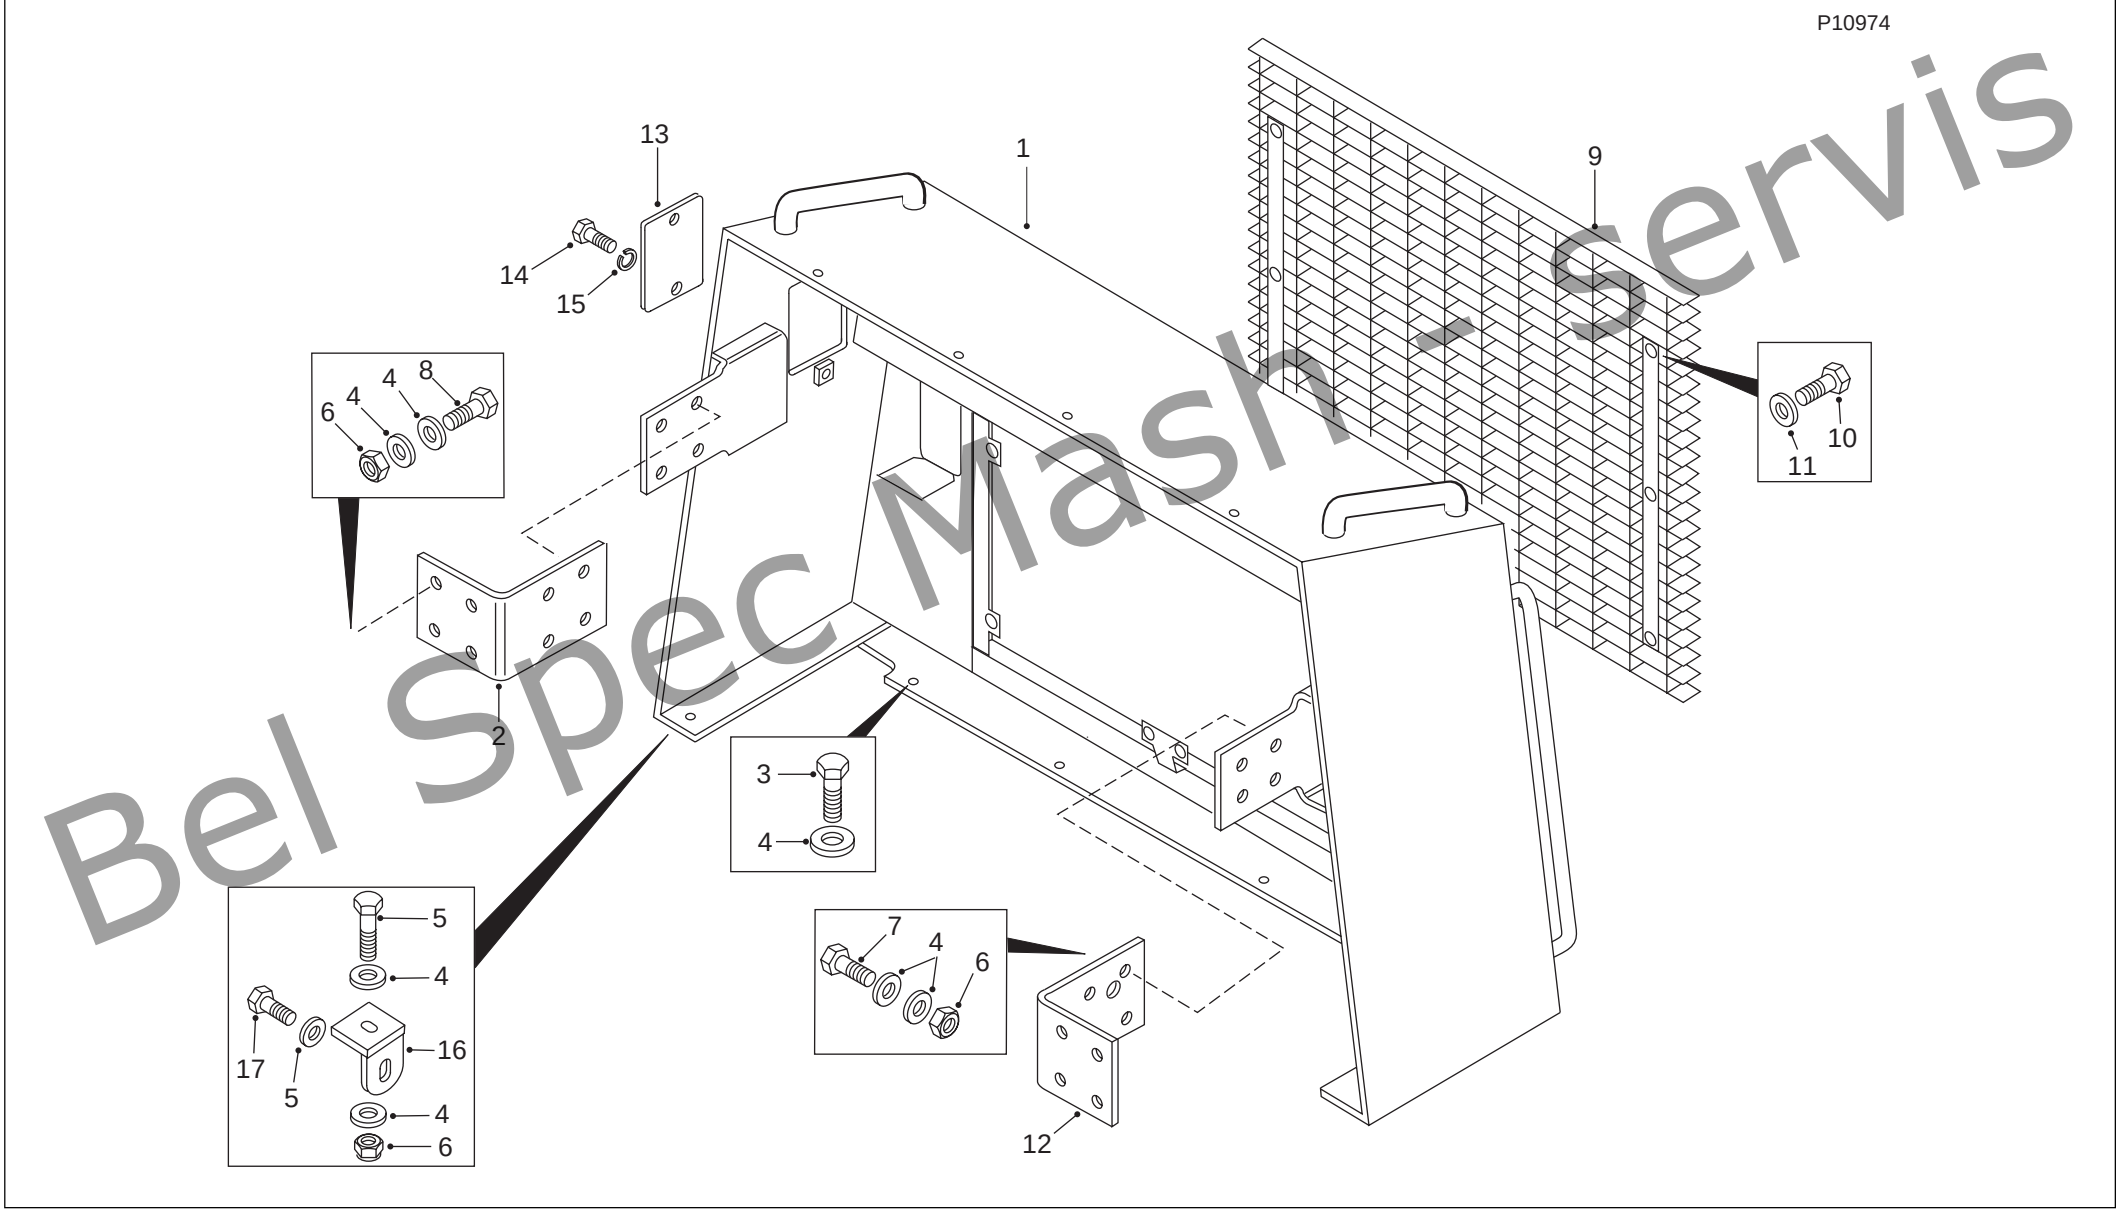

Bel Spec Mash - Servis

https://truckmanualshub.com/

100-0100-8391 RADIATOR GUARD AND MOUNTING
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15313020	GUARD ASSY-RADIATOR		
	002	001	15252077	BRACKET		
	003	002	00179881	BOLT		
	004	038	09270000	WASHER-HARDENED		
	005	002	09037837	WASHER		
	006	018	00120378	NUT		
	007	008	00179885	BOLT		
	008	010	00179887	BOLT		
	009	001	15305470	GRILLE-RADIATOR		
	010	006	00179839	BOLT		
	011	006	09060202	WASHER		
	012	001	15300546	PLATE		
	013	001	15308223	COVER		
	014	002	00179837	BOLT		
	015	002	00108580	LOCKWASHER		
	016	002	15314839	SUPPORT BRKT-RADGUARD		
	017	002	00179883	BOLT		

Bel Spec Mash - servis

https://truckmanualshub.com/

100-0140-8391 MUDGUARDS
FROM SERIAL NO. T8391011

DRAWING NO. P9502

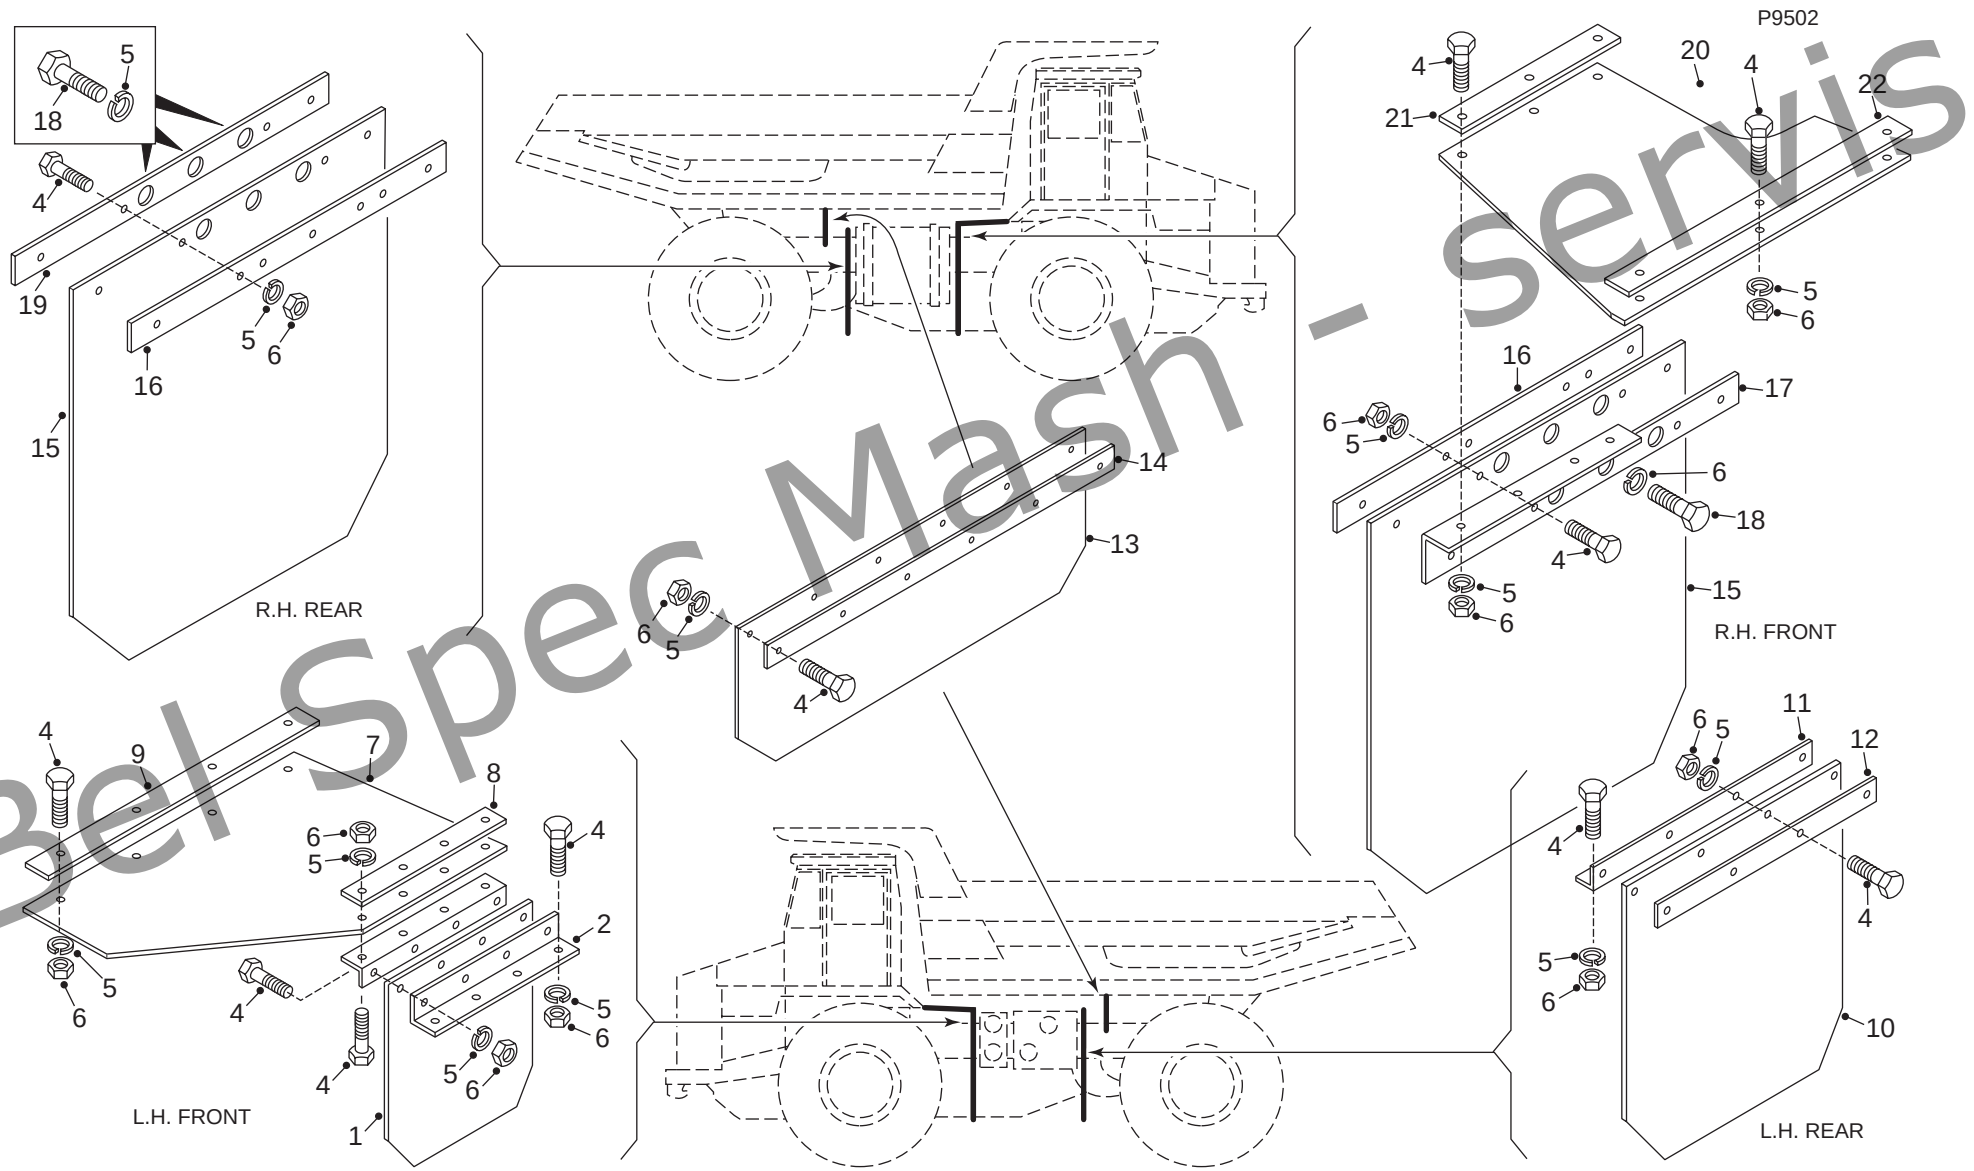

Bel Spec Mash - servis

https://truckmanualshub.com/

100-0140-8391 MUDGUARDS
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15249109	MUDFLAP		
	002	001	15249123	ANGLE-MOUNTING		
	003	001	15255372	ANGLE-MOUNTING		
	004	036	00179885	BOLT		
	005	042	00103329	LOCKWASHER		
	006	036	00120378	NUT		
	007	001	15312801	MUDFLAP		
	008	001	15233492	PLATE-MOUNTING		
	009	001	15312820	CLAMP PLATE		
	010	001	15300760	MUDFLAP		
	011	001	15300761	ANGLE		
	012	001	15300756	CLAMP-PLATE		
	013	002	15300762	MUDFLAP		
	014	002	15249115	PLATE-CLAMPING		
	015	002	15300750	MUDFLAP		
	016	002	15300753	PLATE		
	017	001	15300755	BRACKET		
	018	006	00179883	BOLT		
	019	001	15300754	CLAMP-PLATE		
	020	001	15312802	MUDFLAP		
	021	001	15300823	CLAMP-PLATE		
	022	001	15312821	CLAMP PLATE		

Bel Spec Mash - servis

https://truckmanualshub.com/

110-0030-8391 ENGINE AND MOUNTING
FROM SERIAL NO. T8391011 TO T8391034

DRAWING NO. P10975

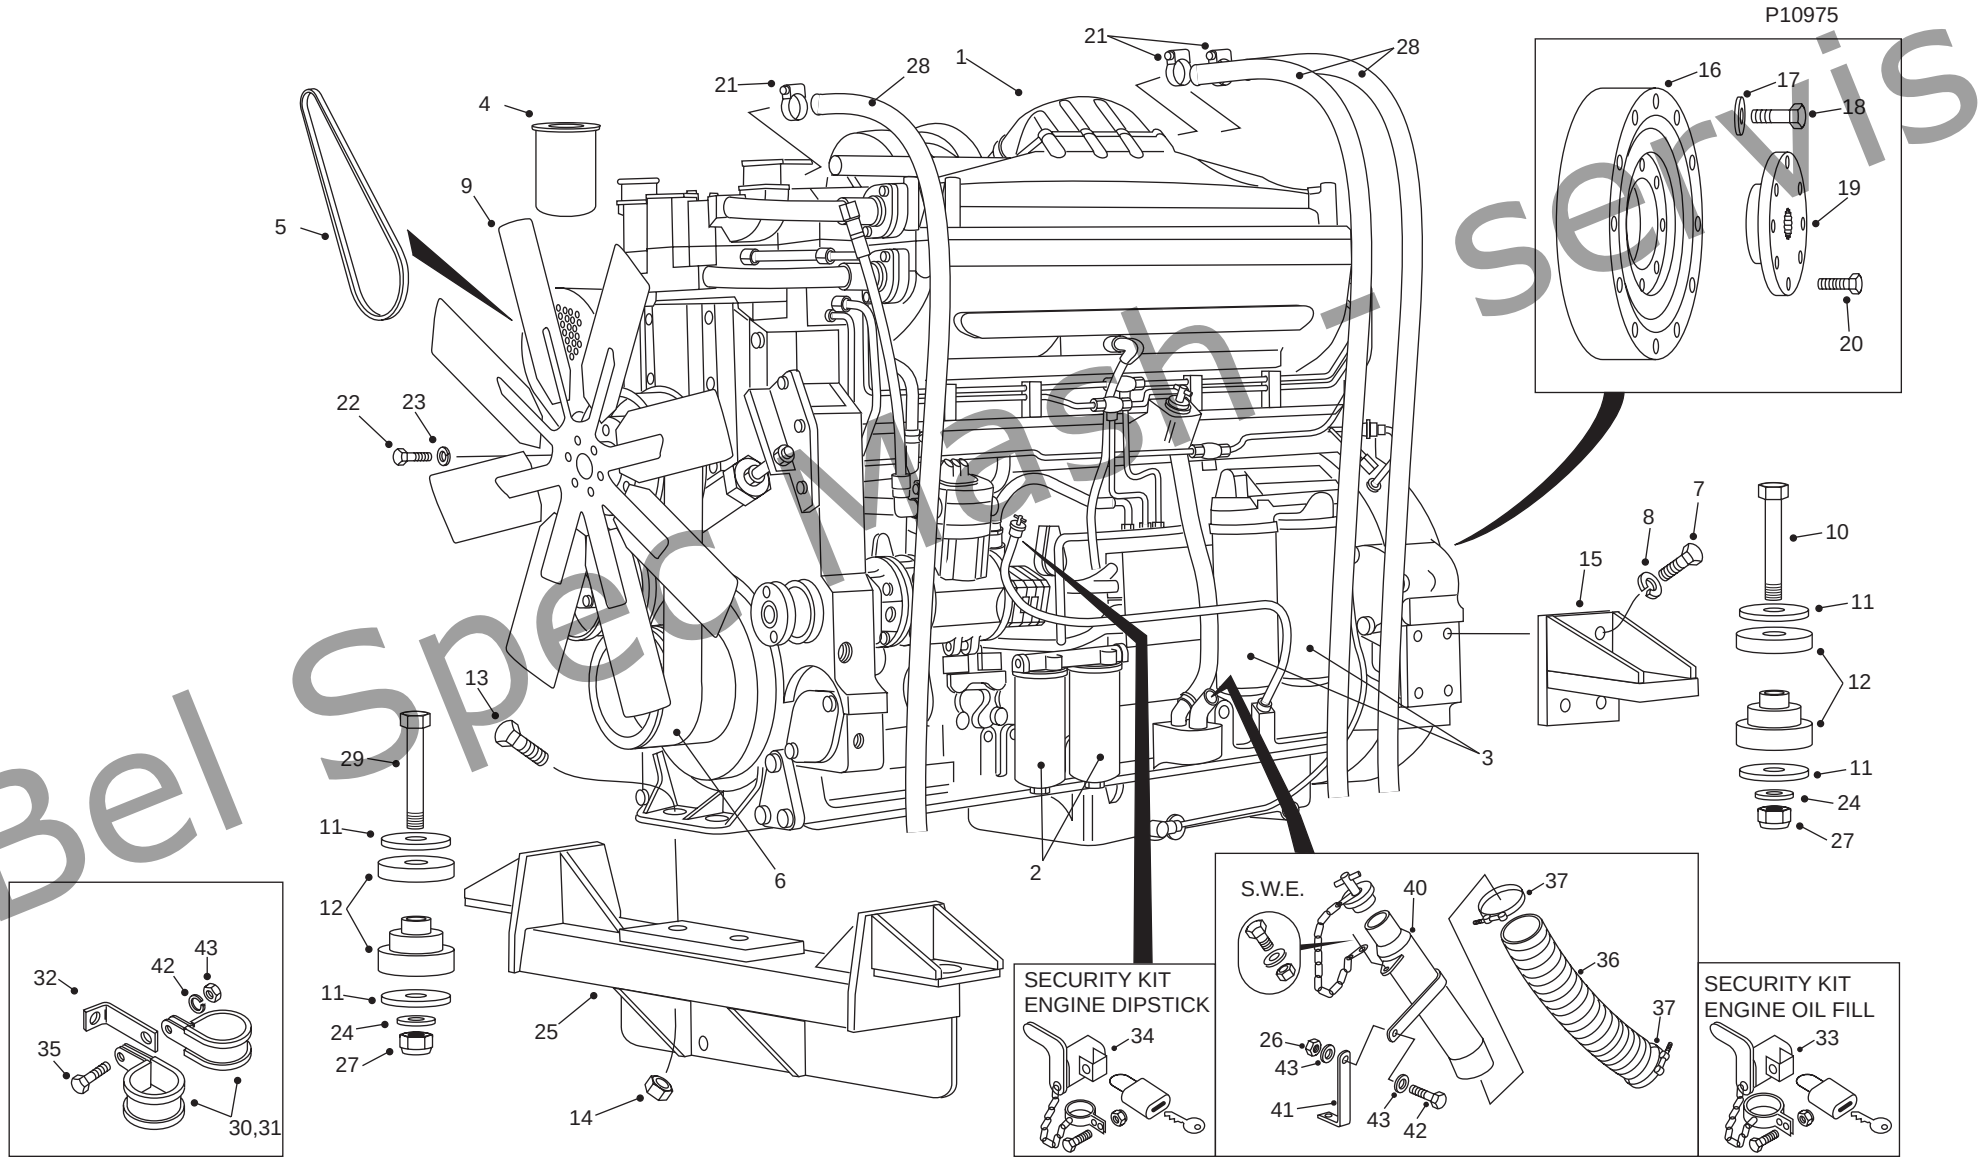

Bel Spec Nash - servis

https://truckmanualshub.com/

110-0030-8391 ENGINE AND MOUNTING
FROM SERIAL NO. T8391011 TO T8391034

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312684	ENGINE-QSK19 TIER2		
	002	002	15271319	.FILTER-FUEL		
	003	002	15266844	.FILTER-LUBE OIL		
A	004	001	15275737	.CORROSION RESISTOR		
	005	001	15275766	.BELT-ALTERNATOR		
	006	001	15273589	.FAN BELT-TR60		
	007	008	00271558	BOLT		
	008	008	00103331	LOCKWASHER		
	009	001	15313034	FAN ASSY 42"DIA		
	010	002	15256879	BOLT		
	011	008	15235607	WASHER-SNUBBING		
	012	004	15311433	ISOLATION MOUNT		
	013	002	00271621	BOLT		
	014	002	09355771	NUT		
	015	002	15302001	BRACKET ASSY		
	016	001	15228210	COUPLING-DRIVE		
	017	012	09060202	WASHER-HARDENED		
	018	012	09423067	BOLT		
	019	001	15252692	FLANGE-COUPLING		
	020	008	09409907	BOLT		
	021	002	09379664	CLAMP		
	022	006	00186295	BOLT		
	023	006	00103329	LOCKWASHER		
	024	002	15002802	WASHER-HARDENED		
	025	001	15256627	MOUNTING-ENG FRONT		
	026	001	00274208	LOCKNUT		
	027	004	00274098	LOCKNUT		
	028	ASR	07551826	HOSE-BULK		
	029	002	09210208	BOLT		
	030	004	09174339	CLIP		
	031	002	09181284	CLIP-RUBBERIZED		
	032	001	09362607	BRACKET		
	033	001	15016763	KIT-SECURITY-ENG OIL		
	034	001	09255477	KIT-SECURITY D/STICK		
	035	002	00179795	BOLT		
	036	ASR	09134207	HOSE-BULK		
	037	002	09223731	CLAMP		
	038	002	00103319	LOCKWASHER		
	039	002	00109084	NUT		
	040	001	15303146	TUBE ASSY		

110-0030-8391 ENGINE AND MOUNTING
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	15303147	BENT PLATE		
	042	001	00179839	BOLT		
	043	002	00106263	WASHER		

NOTES:
A WATER FILTERS,REFER TO ENGINE MANUFACTURES RECOMMENDATIONS

Ref Spec Mash - servis

https://truckmanualshub.com/

110-0030-8391 ENGINE AND MOUNTING
FROM SERIAL NO. T8391035

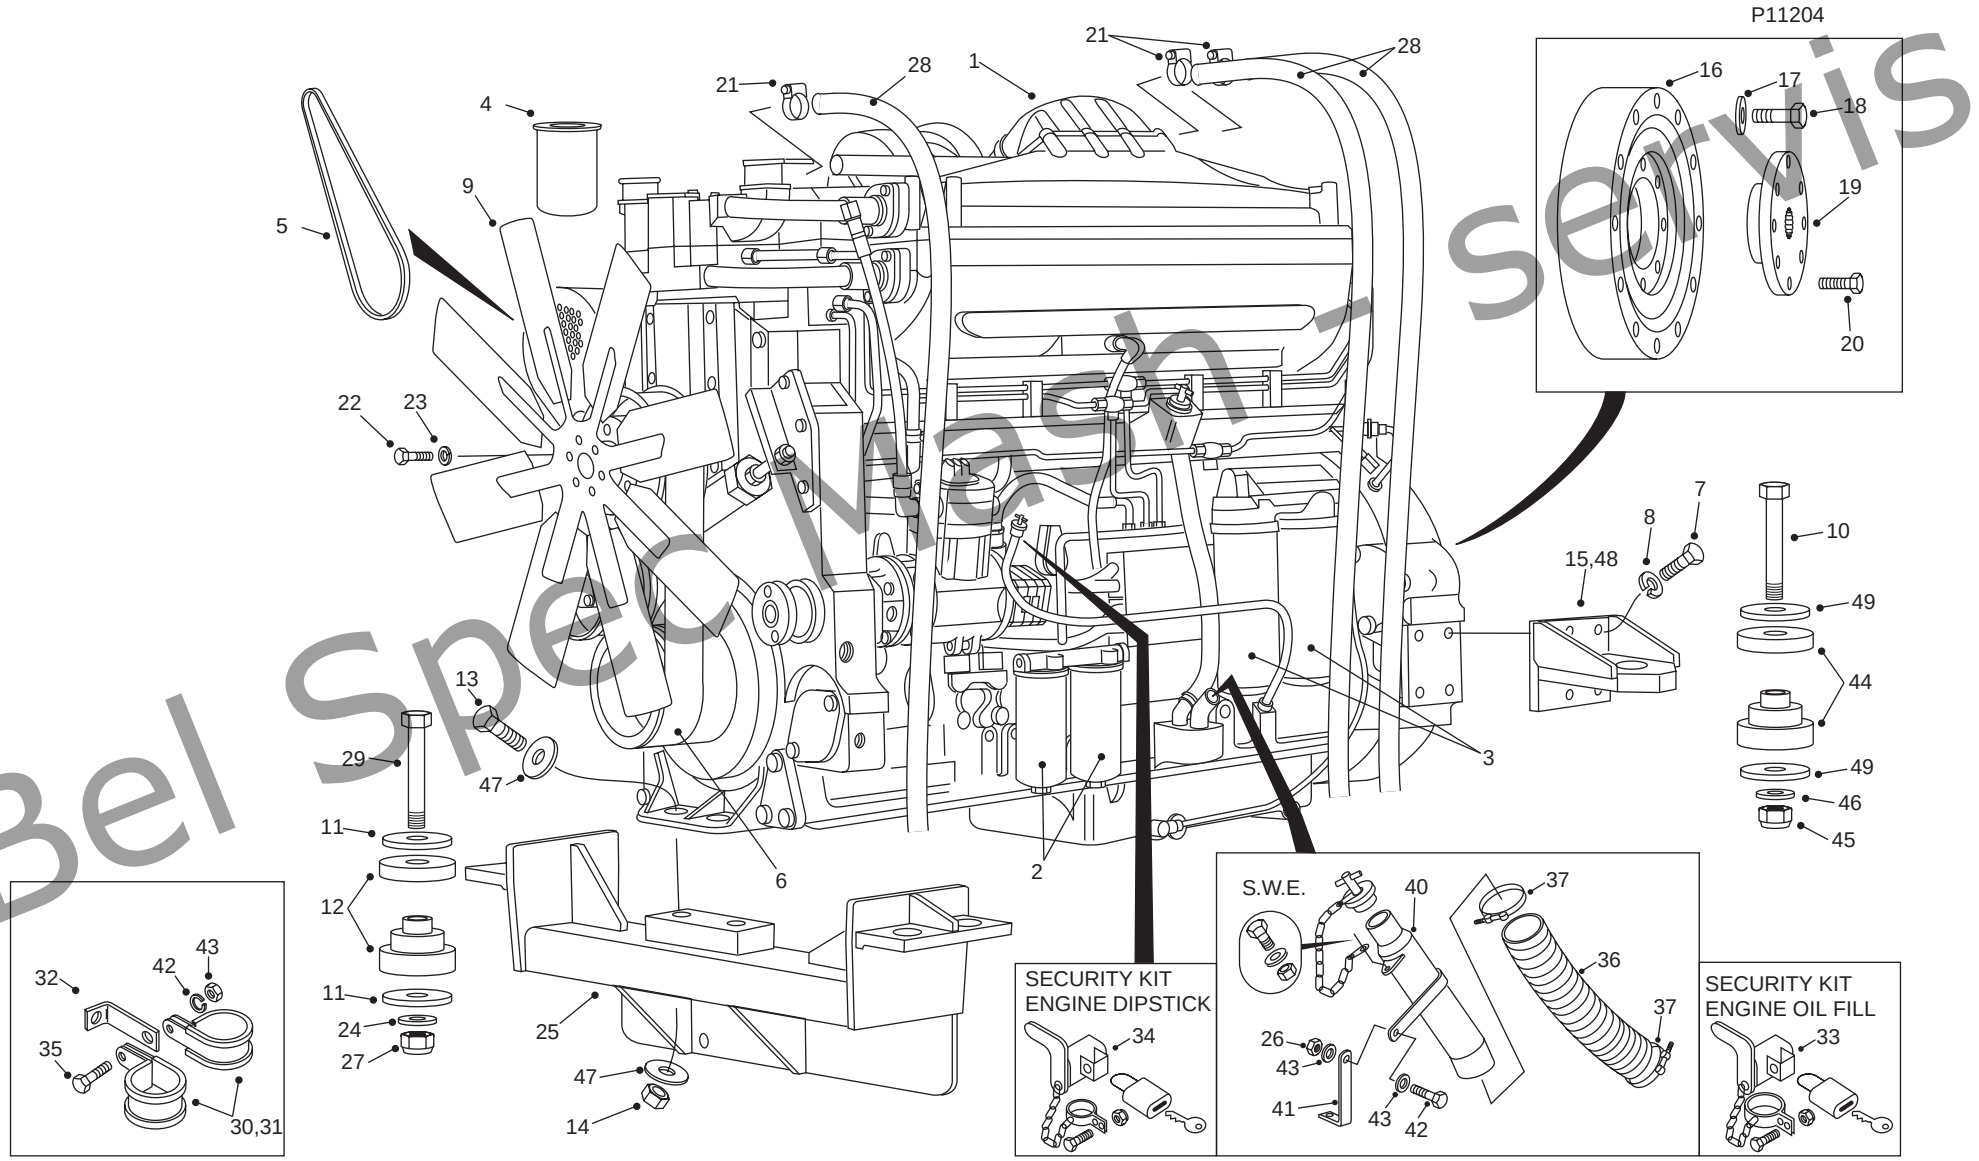

Bel Spec Wash servis

https://truckmanualshub.com/

110-0030-8391 ENGINE AND MOUNTING
FROM SERIAL NO. T8391035

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312684	ENGINE-QSK19 TIER2		
	002	002	15271319	.FILTER-FUEL		
	003	002	15266844	.FILTER-LUBE OIL		
A	004	001	15275737	.CORROSION RESISTOR		
	005	001	15275766	.BELT-ALTERNATOR		
	006	001	15273589	.FAN BELT-TR60		
	007	008	00271558	BOLT		
	008	008	00103331	LOCKWASHER		
	009	001	15313034	FAN ASSY 42"DIA		
	010	002	09001353	BOLT		
	011	008	15235607	WASHER-SNUBBING		
	012	004	15315704	ISOLATION MOUNT		
	013	002	00454414	BOLT		
	014	002	09419493	LOCKNUT		
	015	001	15315588	BRACKET-ENG MTG REAR LH		
	016	001	15228210	COUPLING-DRIVE		
	017	012	09060202	WASHER		
	018	012	09423067	BOLT		
	019	001	15252692	FLANGE-COUPLING		
	020	008	09409907	BOLT		
	021	002	09379664	CLAMP		
	022	006	00186295	BOLT		
	023	006	00103329	LOCKWASHER		
	024	004	15007339	WASHER-HARDENED		
	025	001	15315581	BRACKET-ENG MTG FRONT		
	026	001	00274208	LOCKNUT		
	027	004	09419495	NUT		
	028	ASR	07551826	HOSE-BULK		
	029	004	15315644	BOLT		
	030	004	09174339	CLIP		
	031	002	09181284	CLIP-RUBBERIZED		
	032	001	09362607	BRACKET		
	033	001	15016763	KIT-SECURITY-ENG OIL		
	034	001	09255477	KIT-SECURITY D/STICK		
	035	002	00179795	BOLT		
	036	ASR	09134207	HOSE-BULK		
	037	002	09223731	CLAMP		
	038	002	00103319	LOCKWASHER		
	039	002	00109084	NUT		
	040	001	15303146	TUBE ASSY		

110-0030-8391 ENGINE AND MOUNTING
FROM SERIAL NO. T8391035

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	15303147	BENT PLATE		
	042	001	00179839	BOLT		
	043	002	00106263	WASHER		
	044	002	15315642	ISOLATION MOUNT		
	045	002	09419497	NUT-NYLON INSERT		
	046	002	09019631	WASHER-HARDENED		
	047	004	09250715	WASHER-HARDENED		
	048	001	15315589	BRACKET-ENG MTG REAR RH		
	049	004	15235606	WASHER-SNUBBING		


NOTES:
A WATER FILTERS,REFER TO ENGINE MANUFACTURES RECOMMENDATIONS

Bet Spec Mash - servis

https://truckmanualshub.com/

110-0050-8391 AIR CLEANER
FROM SERIAL NO. T8391011

DRAWING NO. P8510

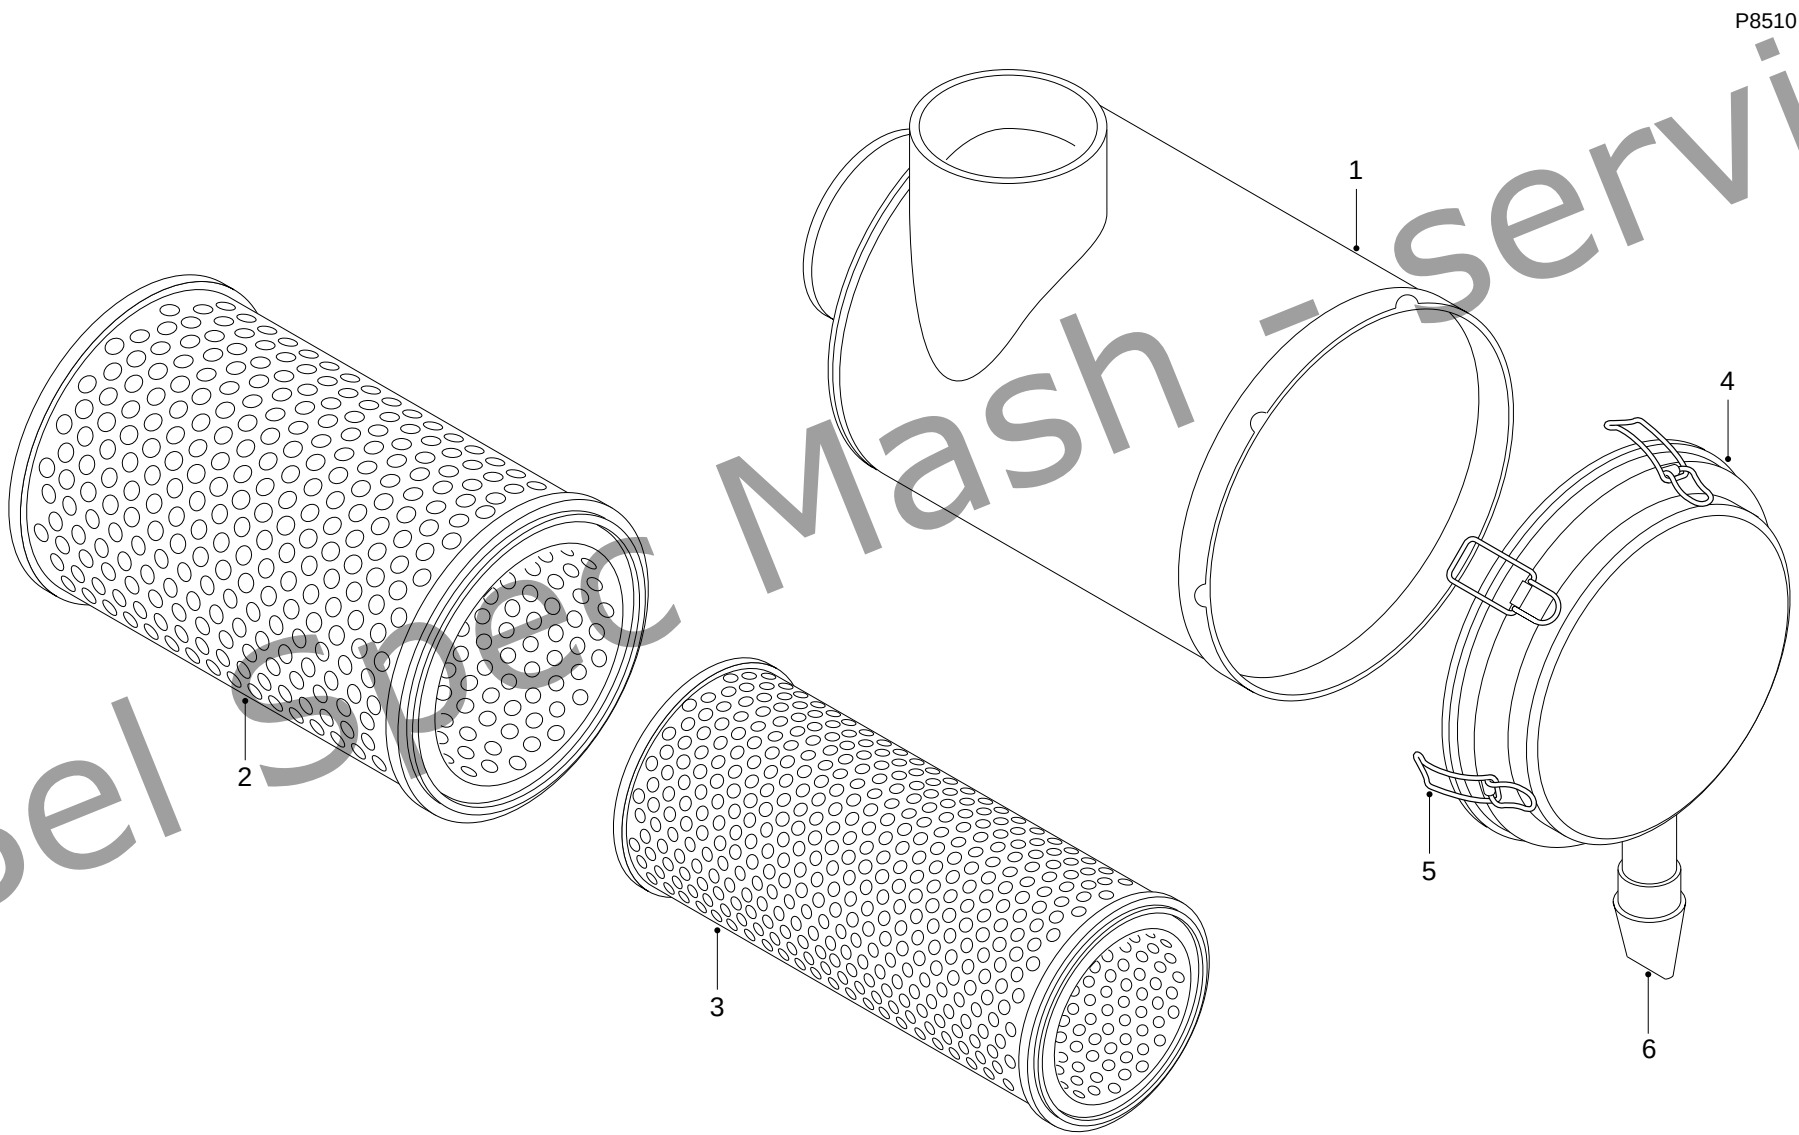

Bel Spec Mash - servis

https://truckmanualshub.com/

110-0050-8391 AIR CLEANER
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15254860	AIR CLEANER		
	002	002	15270188	.ELEMENT-MAIN		
	003	002	15270189	.ELEMENT-SAFETY		
	004	002	15270190	.COVER ASSY		
	005	012	15270191	..LATCH		
	006	002	15270192	.VALVE-VACUATOR		

Bel Spec Mash - servis

https://truckmanualshub.com/

110-0060-8391 AIR CLEANER PIPES AND HOSES
FROM SERIAL NO. T8391011

DRAWING NO. P9546

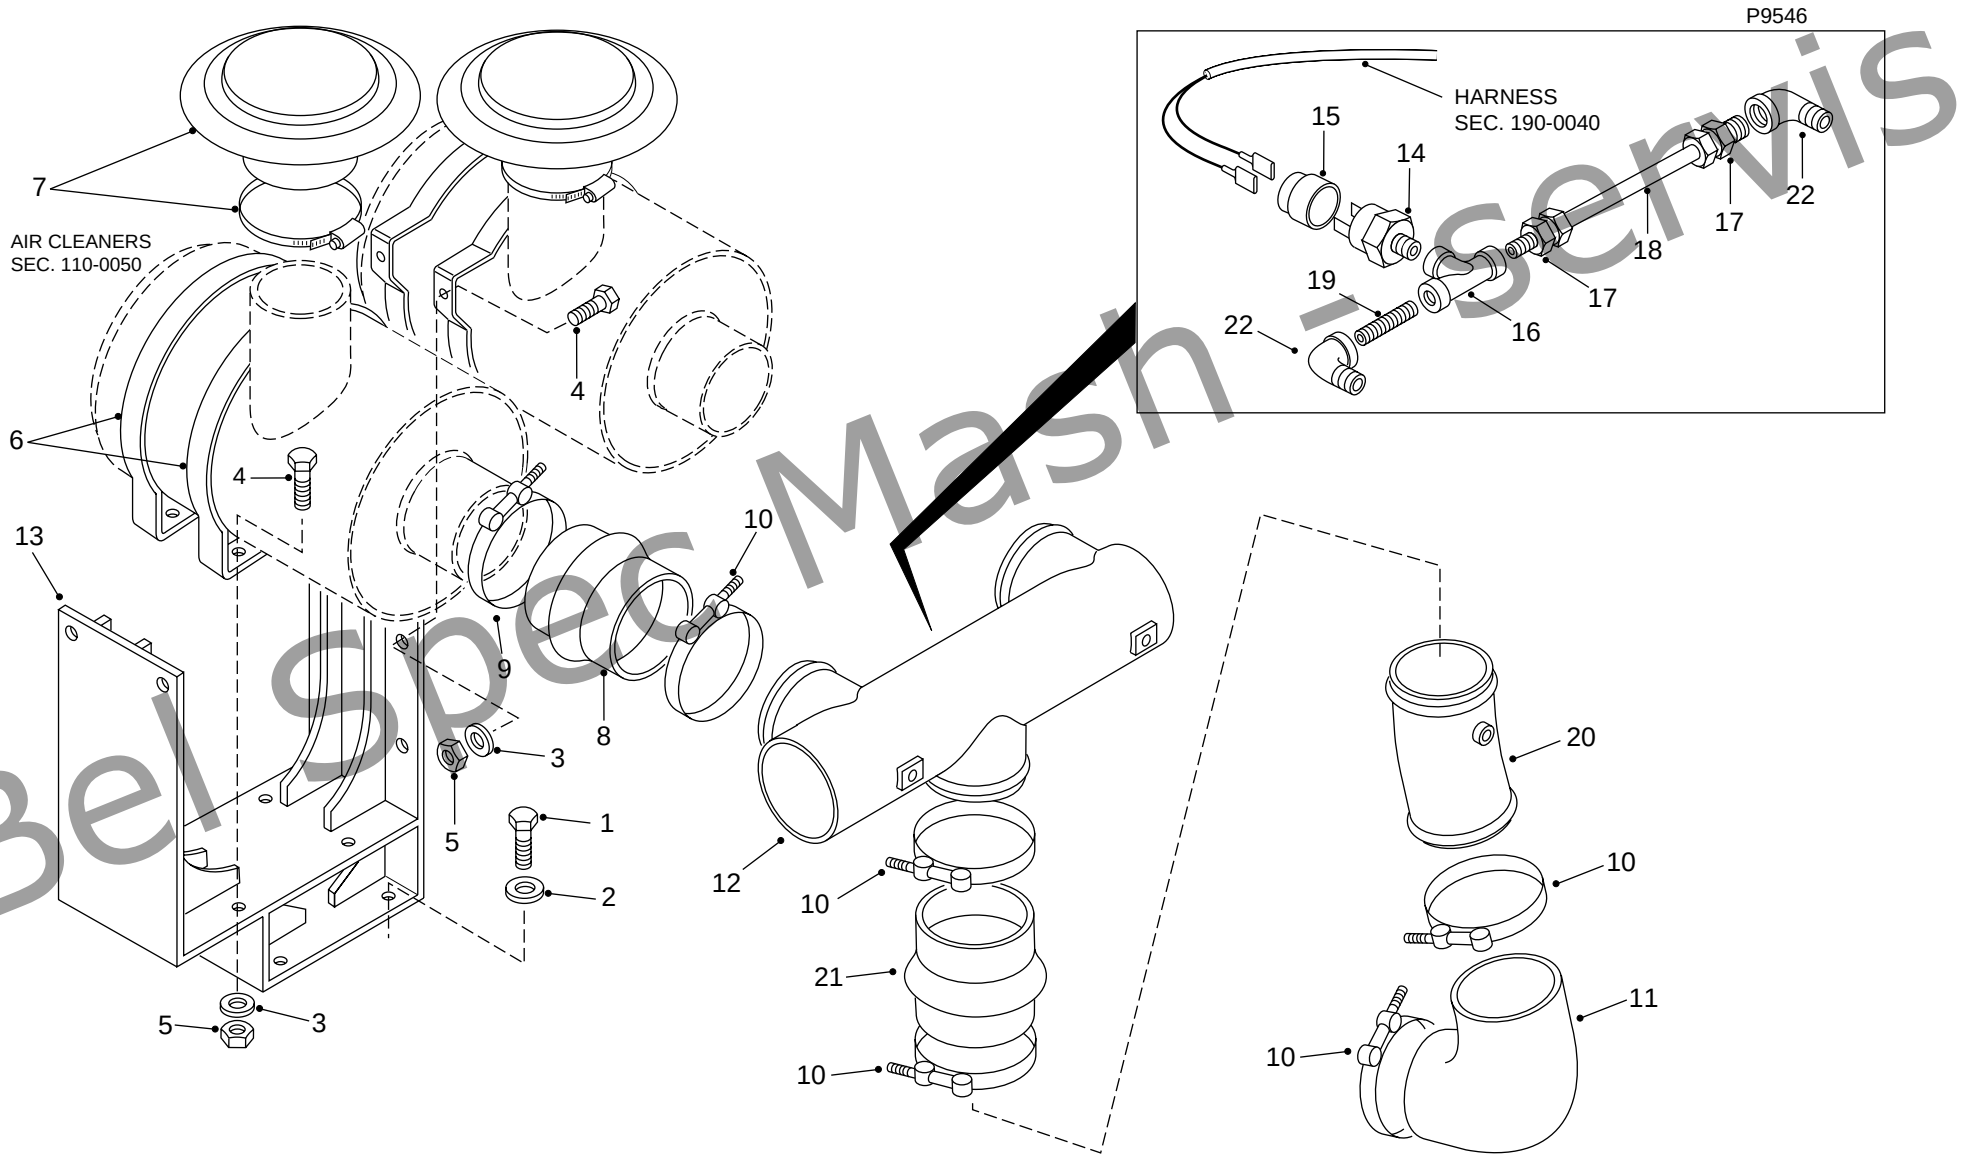

Bel Spec Mash Servis

https://truckmanualshub.com/

110-0060-8391 AIR CLEANER PIPES AND HOSES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	004	00179883	BOLT		
	002	004	09270000	WASHER-HARDENED		
	003	016	09060202	WASHER-HARDENED		
	004	008	00179841	BOLT		
	005	008	00274208	LOCKNUT		
	006	004	15254862	BAND-MOUNTING		
	007	002	09004851	CAP ASSY		
	008	002	15253938	HOSE-HUMP		
	009	002	09229246	CLAMP		
	010	006	09071447	CLAMP		
	011	001	09197104	ELBOW		
	012	001	15256681	PLENUM CHAMBER		
	013	001	15256699	BRACKET ASSY		
	014	001	15235949	SWITCH-AIR RESTRICTION		
	015	001	15235951	CAP-PROTECTIVE		
	016	001	00454132	TEE		
	017	002	09384872	ADAPTOR		
	018	ASR	09233142	TUBE-NYLON 4MM		
	019	001	00443977	NIPPLE		
	020	001	15256685	TUBE		
	021	001	09197976	HOSE-HUMP		
	022	002	00105422	ELBOW		

Bel Spec Mash - servis

https://truckmanualshub.com/

110-0130-8391 POWER TAKEOFF - ENG
FROM SERIAL NO. T8391011

DRAWING NO. P9705

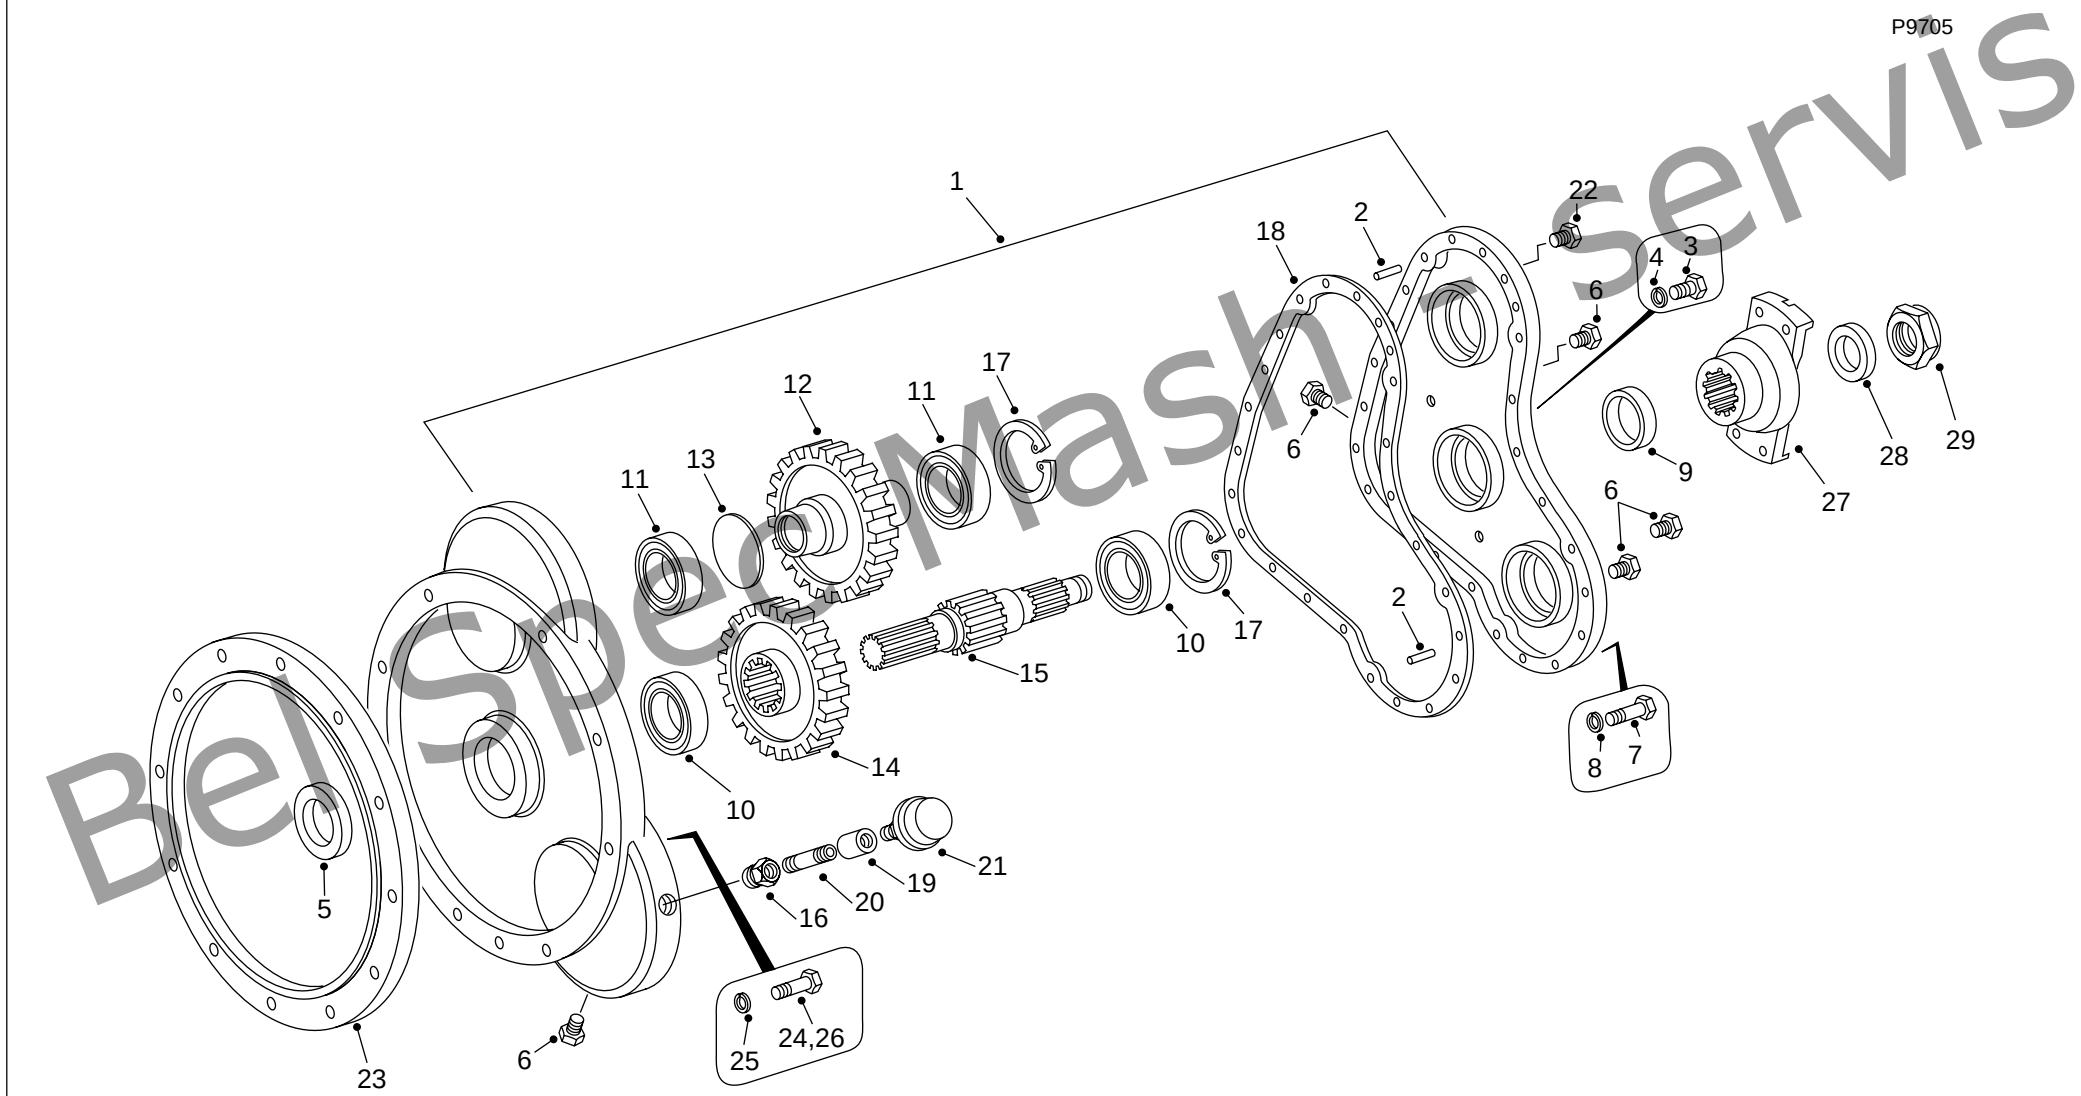

BelSpecMash servis

https://truckmanualshub.com/

110-0130-8391 POWER TAKEOFF - ENG
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	001	15252682	PTO ASSY		
	001	001	09060235	.HOUSING ASSY		
	002	002	00784079	..PIN		
	003	002	00179826	..BOLT		
	004	002	00103320	..LOCKWASHER		
	005	001	09004541	.SEAL		
	006	004	00444637	.PLUG		
	007	017	00179826	.BOLT		
	008	015	00103320	.LOCKWASHER		
	009	001	09004540	.SEAL		
	010	002	00954528	.BEARING		
	011	002	00907696	.BEARING		
	012	001	09274893	.GEAR-DRIVEN		
	013	001	00444692	.PLUG		
	014	001	09195847	.GEAR-DRIVE		
	015	001	15252439	.SHAFT-DRIVE PTO		
	016	001	00144218	.BUSHING		
	017	002	09414895	.RING-SNAP		
	018	001	09195842	.GASKET		
	019	001	00187396	.COUPLING		
	020	001	15247042	.BREATHER ASSY		
	021	001	06750967	.CAP-BREATHER		
	022	001	00444698	.PLUG		
	023	001	15252646	SPACER-PTO		
	024	006	00179874	BOLT		
	025	010	00103328	LOCKWASHER		
	026	004	09415092	BOLT		
	027	001	15300845	YOKE-PTO		
	028	001	09071870	WASHER-HARDENED		
	029	001	09269703	LOCKNUT		


BerSpec Mash - servis

https://truckmanualshub.com/

120-0010-8391 TRANSMISSION MOUNTING

FROM SERIAL NO. T8391011

DRAWING NO. P10274

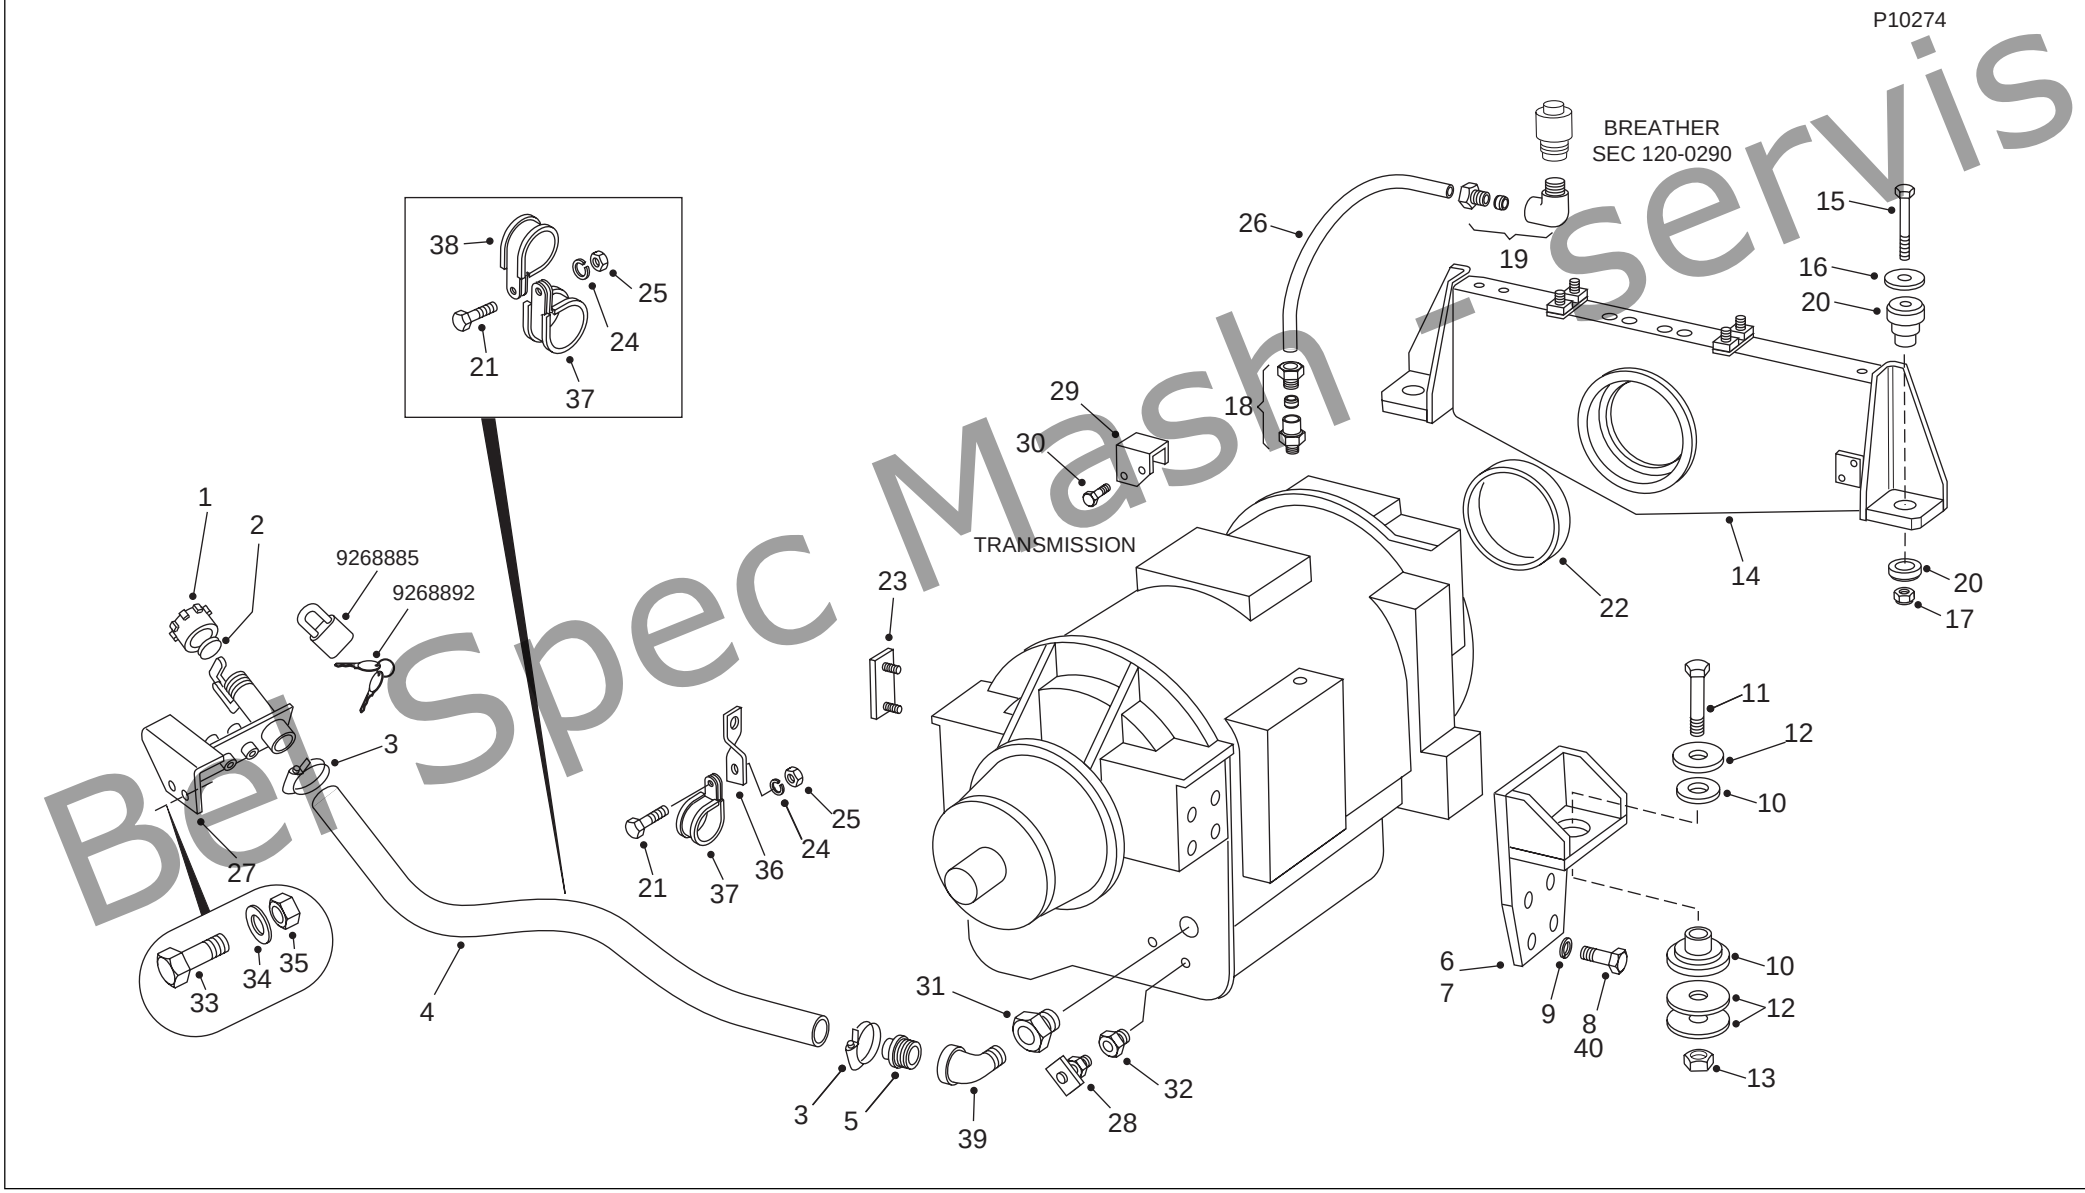

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0010-8391 TRANSMISSION MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	09195340	CAP-FILLER		
	002	001	09189082	GASKET		
	003	002	02337379	CLAMP		
	004	ASR	09141843	HOSE-BULK		
	005	001	09196539	TUBE-FILLER		
	006	001	00111001	ELBOW		
	007	002	15300625	BRACKET-TRANS MTG		
	008	008	00271565	BOLT		
	009	008	00103331	LOCKWASHER		
	010	002	15311299	ISOLATION MOUNT		
	011	002	15301183	BOLT		
	012	006	15235606	WASHER-SNUBBING		
	013	002	06642401	LOCKNUT		
	014	001	15304355	TRUNNION ASSY		
	015	002	15251433	BOLT		
	016	002	15235607	WASHER-SNUBBING		
	017	002	00274098	LOCKNUT		
	018	001	09357070	CONNECTOR		
	019	001	09357072	ELBOW		
	020	002	15311297	ISOLATION MOUNT		
	021	003	00179795	BOLT		
	022	001	09066008	RING		
	023	001	06839183	KIT-GAUGE OIL LEVEL		
	024	003	00103319	LOCKWASHER		
	025	003	00109084	NUT		
	026	024	09233796	TUBE-NYLON		
	027	001	15300297	ADAPTOR ASSY		
	028	002	00114981	COCK-DRAIN		
	029	001	15301172	PLATE-BENT		
	030	002	00179887	BOLT		
	031	001	15257170	ADAPTOR		
	032	002	15257213	ADAPTOR		
	033	001	00186646	BOLT		
	034	001	09270000	WASHER-HARDENED		
	035	001	00274766	NUT		
	036	001	09252467	BRACKET		
	037	002	09171664	CLIP		
	038	002	09131871	CLIP		
	039	001	00111001	ELBOW		


PerSpec Mash - servis

https://truckmanualshub.com/

120-0020-8391 TRANSMISSION BREAKDOWN

FROM SERIAL NO. T8391011

DRAWING NO. P9912

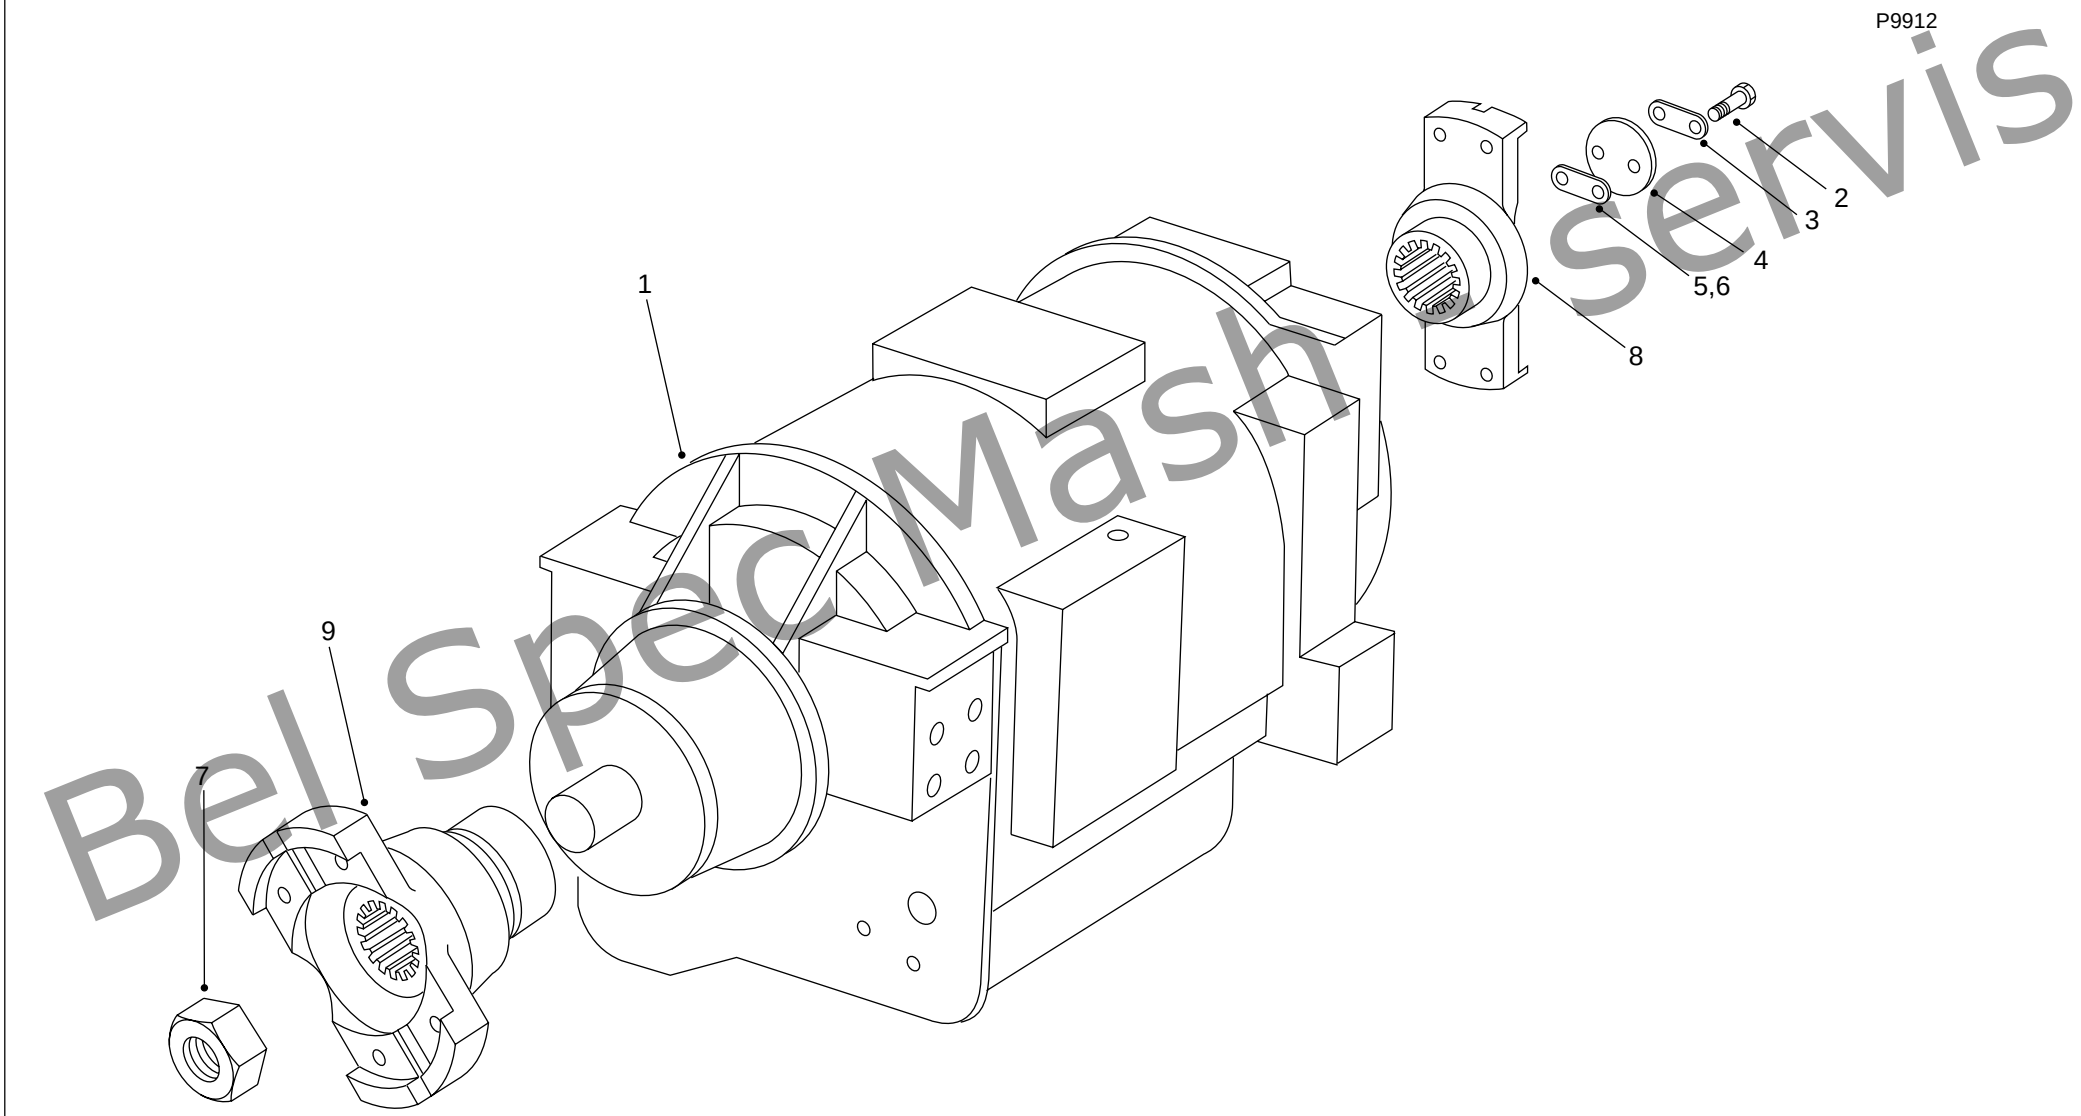

Bel Spec Mash servis

https://truckmanualshub.com/

120-0020-8391 TRANSMISSION BREAKDOWN
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	29537485	TRANS ASSY-CEC2		
	002	002	29510838	BOLT		
	003	001	06755269	STRIP		
	004	001	29515102	RETAINER		
	005	002	06772140	SHIM-.025		
	006	002	06772141	SHIM-.005		
	007	001	06772182	NUT		
	008	001	15300846	YOKE-TRANS INPUT		
	009	001	15300847	YOKE-TRANS OUTPUT		


NOTES:
A FOR PARTS BREAKDOWN REFER TO SECTIONS LISTED ON MAIN INDEX.
29515701 SEAL AND GASKET KIT FOR COMPLETE TRANSMISSION REBUILD.

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0050-8391 CONTROL VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P9318

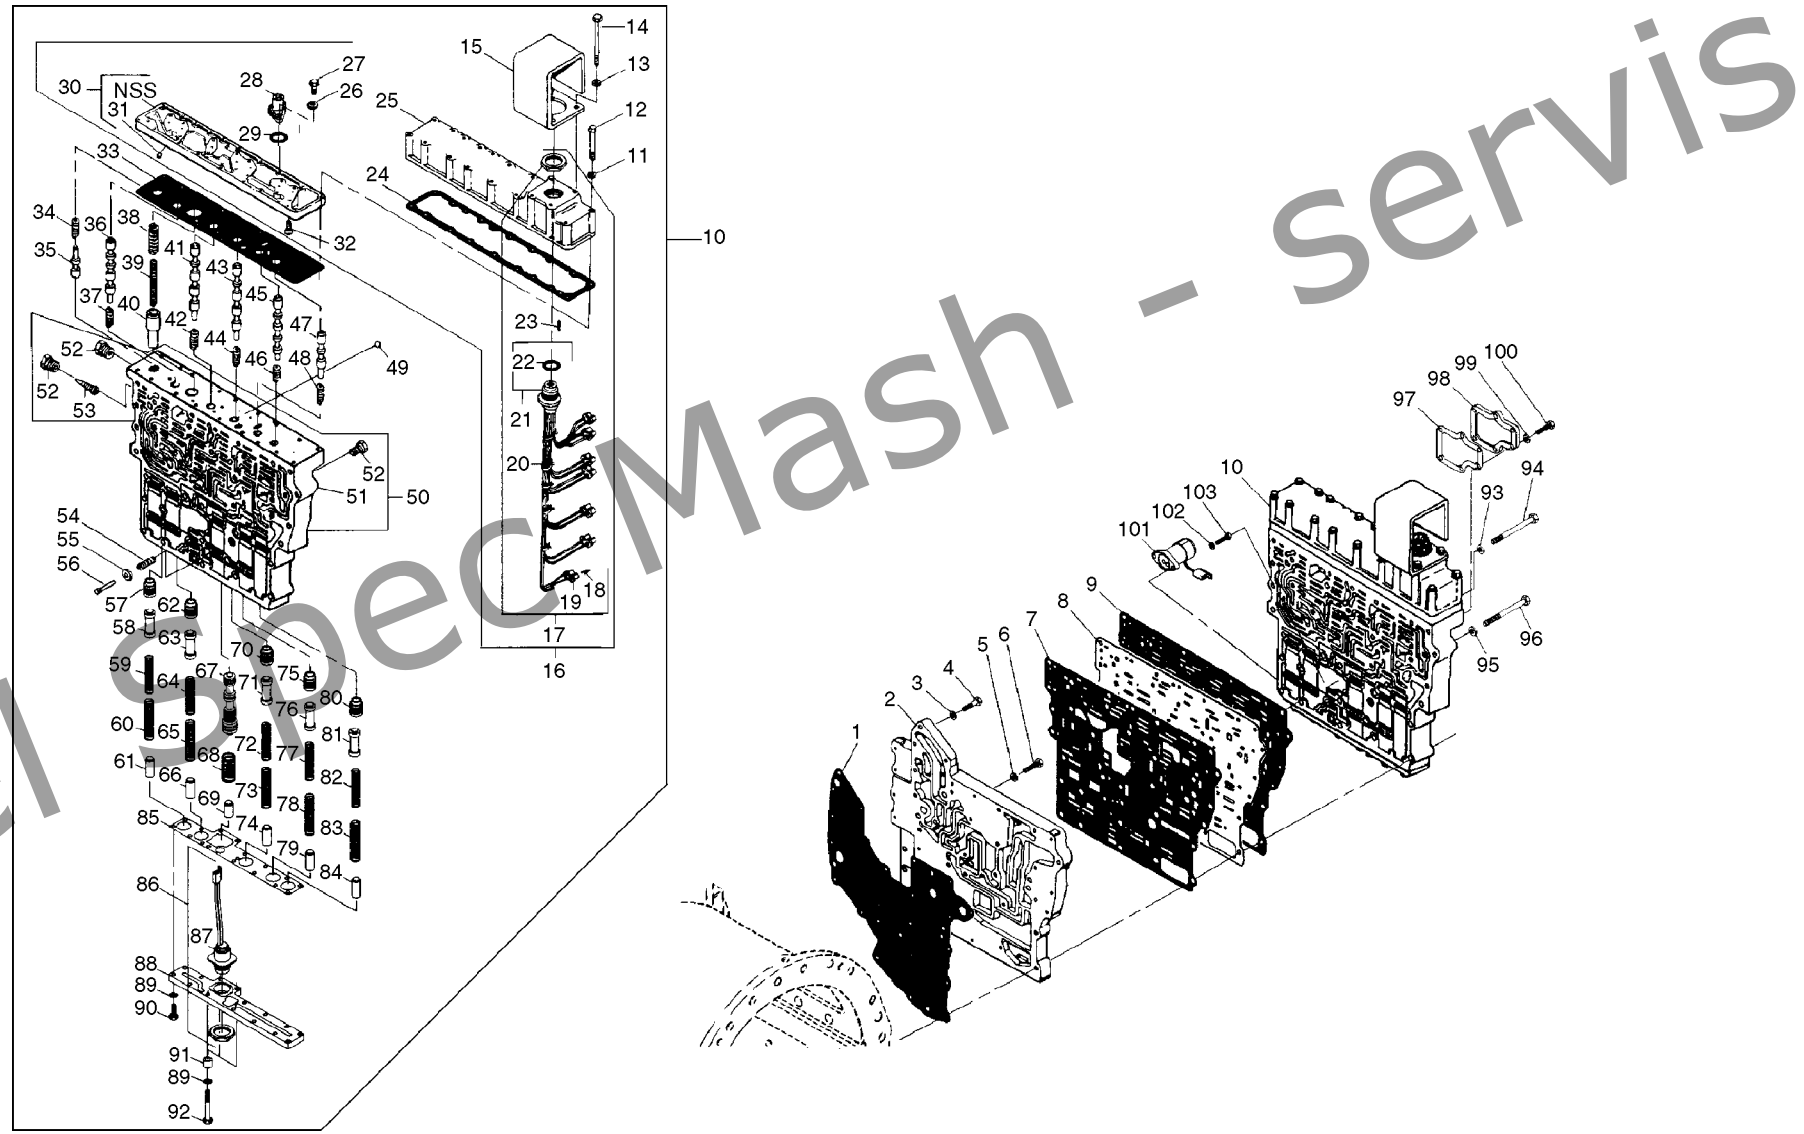

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0050-8391 CONTROL VALVE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	06777974	GASKET		
	002	001	29523167	PLATE		
	003	003	06830003	WASHER		
	004	003	23018739	BOLT		
	005	002	06830003	WASHER		
	006	002	09409030	BOLT		
	007	001	29528652	GASKET		
	008	001	29528650	PLATE		
	009	001	29528651	GASKET		
	010	001	29536512	BODY ASSY		
	011	014	00103339	.WASHER		
	012	014	09427847	.BOLT		
	013	004	00103339	.WASHER		
	014	004	09433579	.BOLT		
	015	001	23045747	.GUARD		
	016	001	29536511	.COVER & PLATE		
	017	001	29536510	..HARNESS ASSY		
	018	014	12052410	...TERMINAL		
	019	001	23042786	....RING		
	019	007	12059716	...CONNECTOR-BODY		
	020	005	23041052	...CABLE-TIE		
	021	001	23046476	...CONNECTOR-RECEPTACL		
	023	002	23046473	...PIN		
	024	007	23046848	...SEAL		
	024	001	06779833	..GASKET		
	025	001	23045748	..COVER		
	026	005	06833281	...PLUG-ORIFICE		
	026	014	00103339	..WASHER		
	027	014	00454813	..BOLT		
	028	007	23019734	..SOLENOID-12V		
	029	001	06880179	..PLATE-SOLENOID		
	032	002	29524652	..SCREW		
	033	001	06880178	.GASKET		
	034	001	06880795	.SPRING		
	035	001	06835405	.VALVE-PRESS REG		
	036	001	06880381	.VALVE		
	037	001	06832304	.SPRING		
	038	001	06833223	.SPRING-OUTER		
	039	001	06830243	.SPRING-INNER		
	040	001	06779840	.VALVE-PRIORITY		

120-0050-8391 CONTROL VALVE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	06880172	.VALVE		
	042	001	06832304	.SPRING		
	043	001	06880172	.VALVE		
	044	001	06832304	.SPRING		
	045	001	06880174	.VALVE		
	046	001	06832304	.SPRING		
	047	001	06779837	.VALVE-REV RANGE		
	048	001	06832304	.SPRING		
	049	002	06880187	.BALL-CHECK		
	050	001	29527534	.BODY ASSY		
	051	001	29527535	..BODY		
	052	009	29525044	..PLUG ASSY		
	053	001	06835614	..SCREEN		
	054	001	06834536	.SPRING		
	055	001	06756164	.VALVE		
	056	001	06756146	.PIN		
	057	001	29513453	.VALVE		
	058	001	29513456	.PLUG-VALVE TRIM		
	059	001	23013909	.SPRING-INNER		
	060	001	06885047	.SPRING		
	061	001	29521871	.STOP		
	062	001	29513453	.VALVE		
	063	001	29513456	.PLUG-VALVE TRIM		
	064	001	23013909	.SPRING-INNER		
	065	001	06885047	.SPRING		
	066	001	29521871	.STOP		
	067	001	29513462	.VALVE		
	068	001	06880186	.SPRING		
	069	001	29513461	.STOP		
	070	001	29513453	.VALVE		
	071	001	29513456	.PLUG-VALVE TRIM		
	072	001	06885166	.SPRING-INNER		
	073	001	29513457	.SPRING		
	074	001	29521871	.STOP		
	075	001	29513454	.VALVE		
	076	001	29513456	.PLUG-VALVE TRIM		
	077	001	06885166	.SPRING-INNER		
	078	001	29513457	.SPRING		
	079	001	29521871	.STOP		
	080	001	29513454	.VALVE		

Perspec Mash. servis

https://truckmanualshub.com/

120-0050-8391 CONTROL VALVE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	081	001	29513456	.PLUG-VALVE TRIM		
	082	001	06885166	.SPRING-INNER		
	083	001	29513457	.SPRING		
	084	001	29521871	.STOP		
	085	001	29530896	.GASKET		
	086	001	29513460	.HARNESS		
	087	001	23046475	..CONNECTOR-RECEPTACLE		
	088	001	29527105	.COVER		
	089	015	00103339	.WASHER		
	090	012	00186647	.BOLT		
	091	003	29527536	.SPACER		
	092	003	00454815	.BOLT		
	093	003	09415545	WASHER		
	094	003	00450517	BOLT		
	095	031	00103455	LOCKWASHER		
	096	031	00186284	BOLT		
	097	001	29513464	GASKET		
	098	001	29513463	COVER-SOLENOID		
	099	006	00103339	WASHER		
	100	006	00186647	BOLT		
	101	001	29506298	SOLENOID		
	102	002	00115547	LOCKWASHER		
	103	002	00138202	BOLT		

Bel Spec Mash - servis

https://truckmanualshub.com/


THIS PAGE IS INTENTIONALLY LEFT BLANK

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0070-8391 SHIFT CONTROL
FROM SERIAL NO. T8391011

DRAWING NO. P10901A

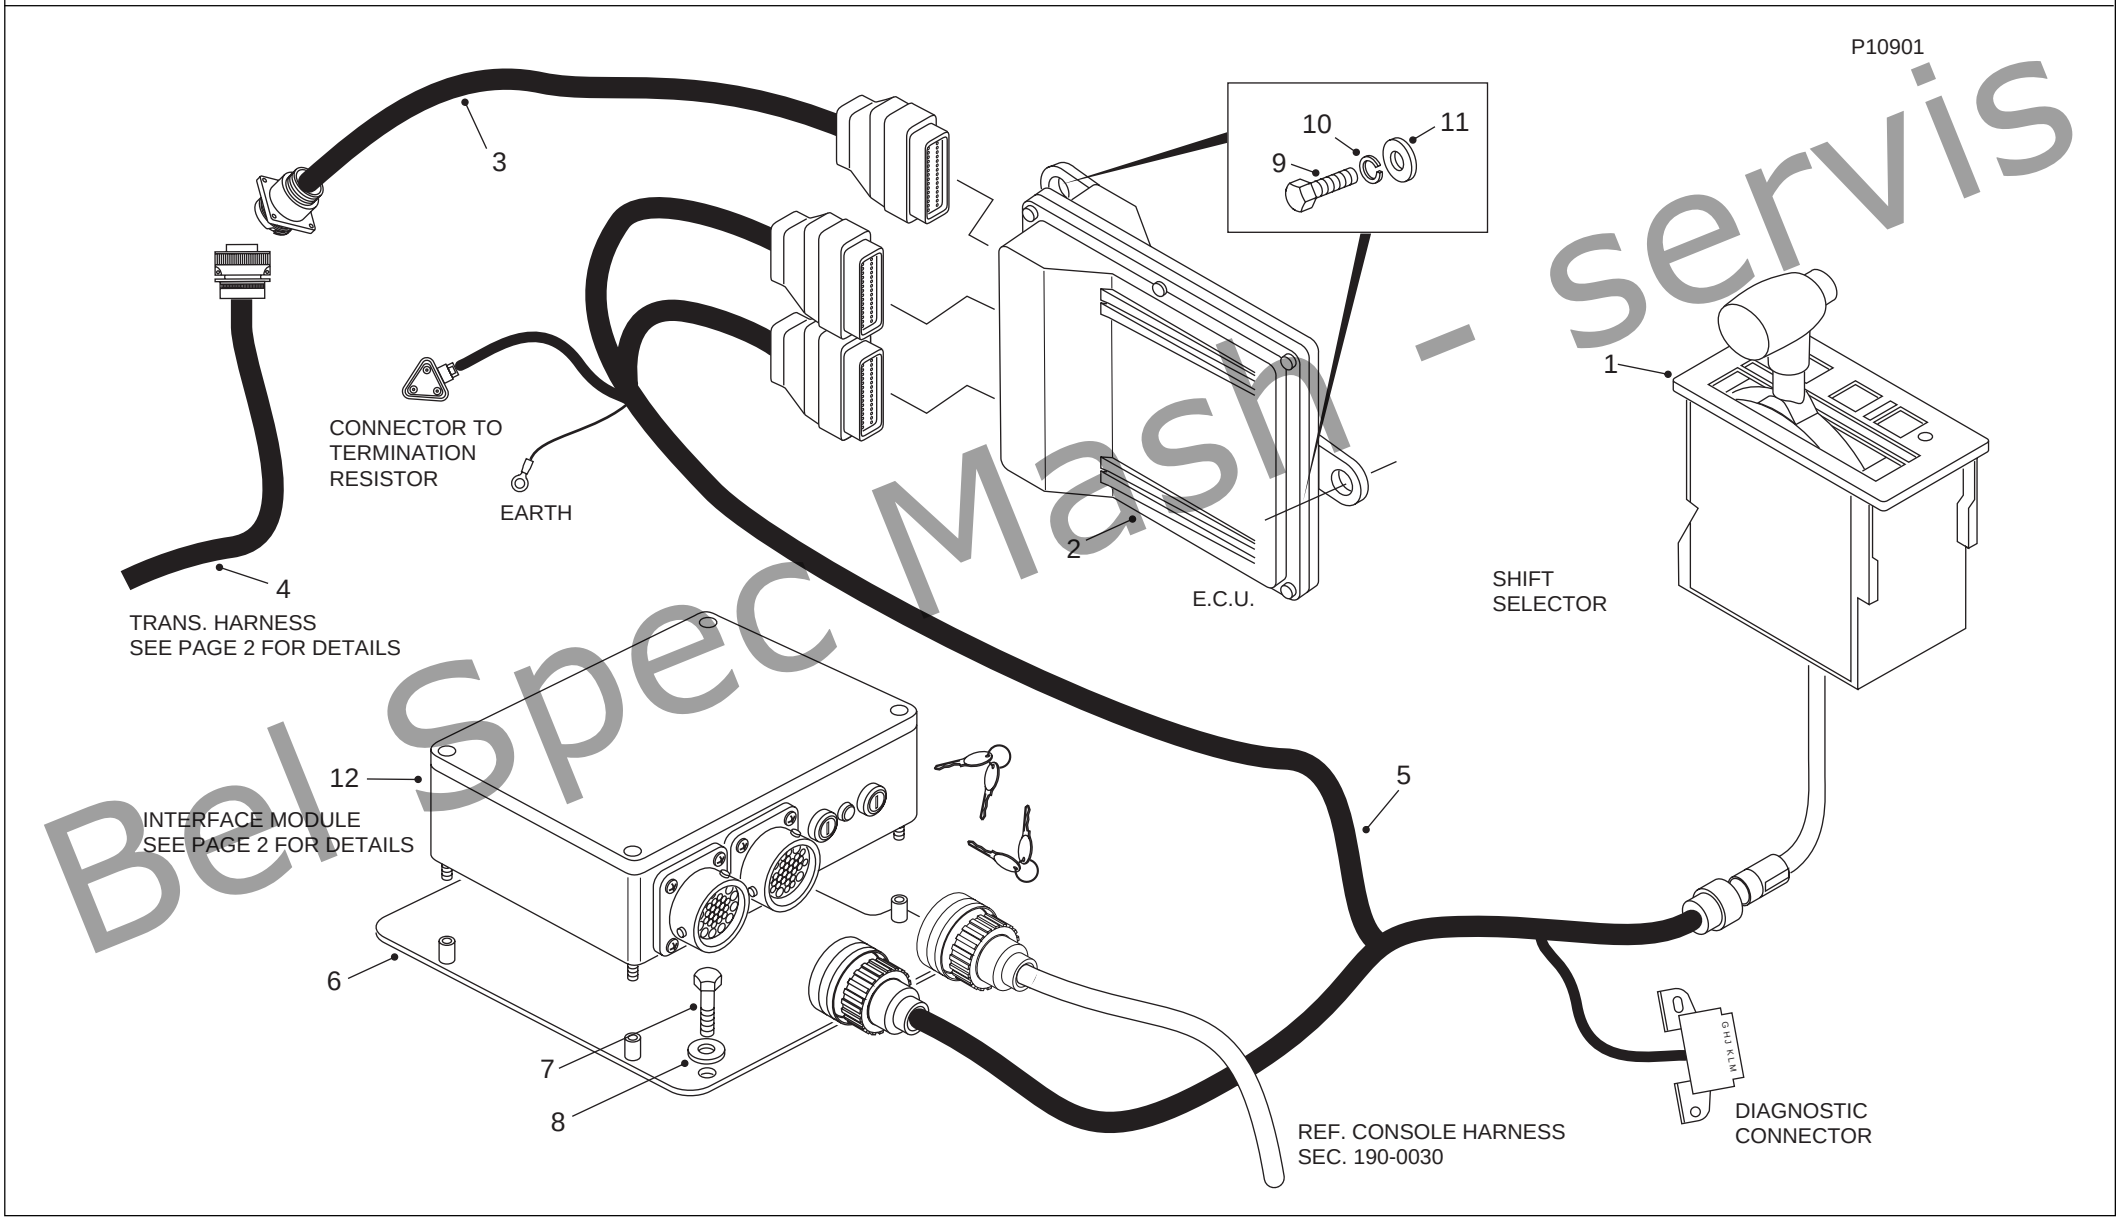


Bel Spec Mash - servis

https://truckmanualshub.com/

120-0070-8391 SHIFT CONTROL
FROM SERIAL NO. T8391011

DRAWING NO. P10901B

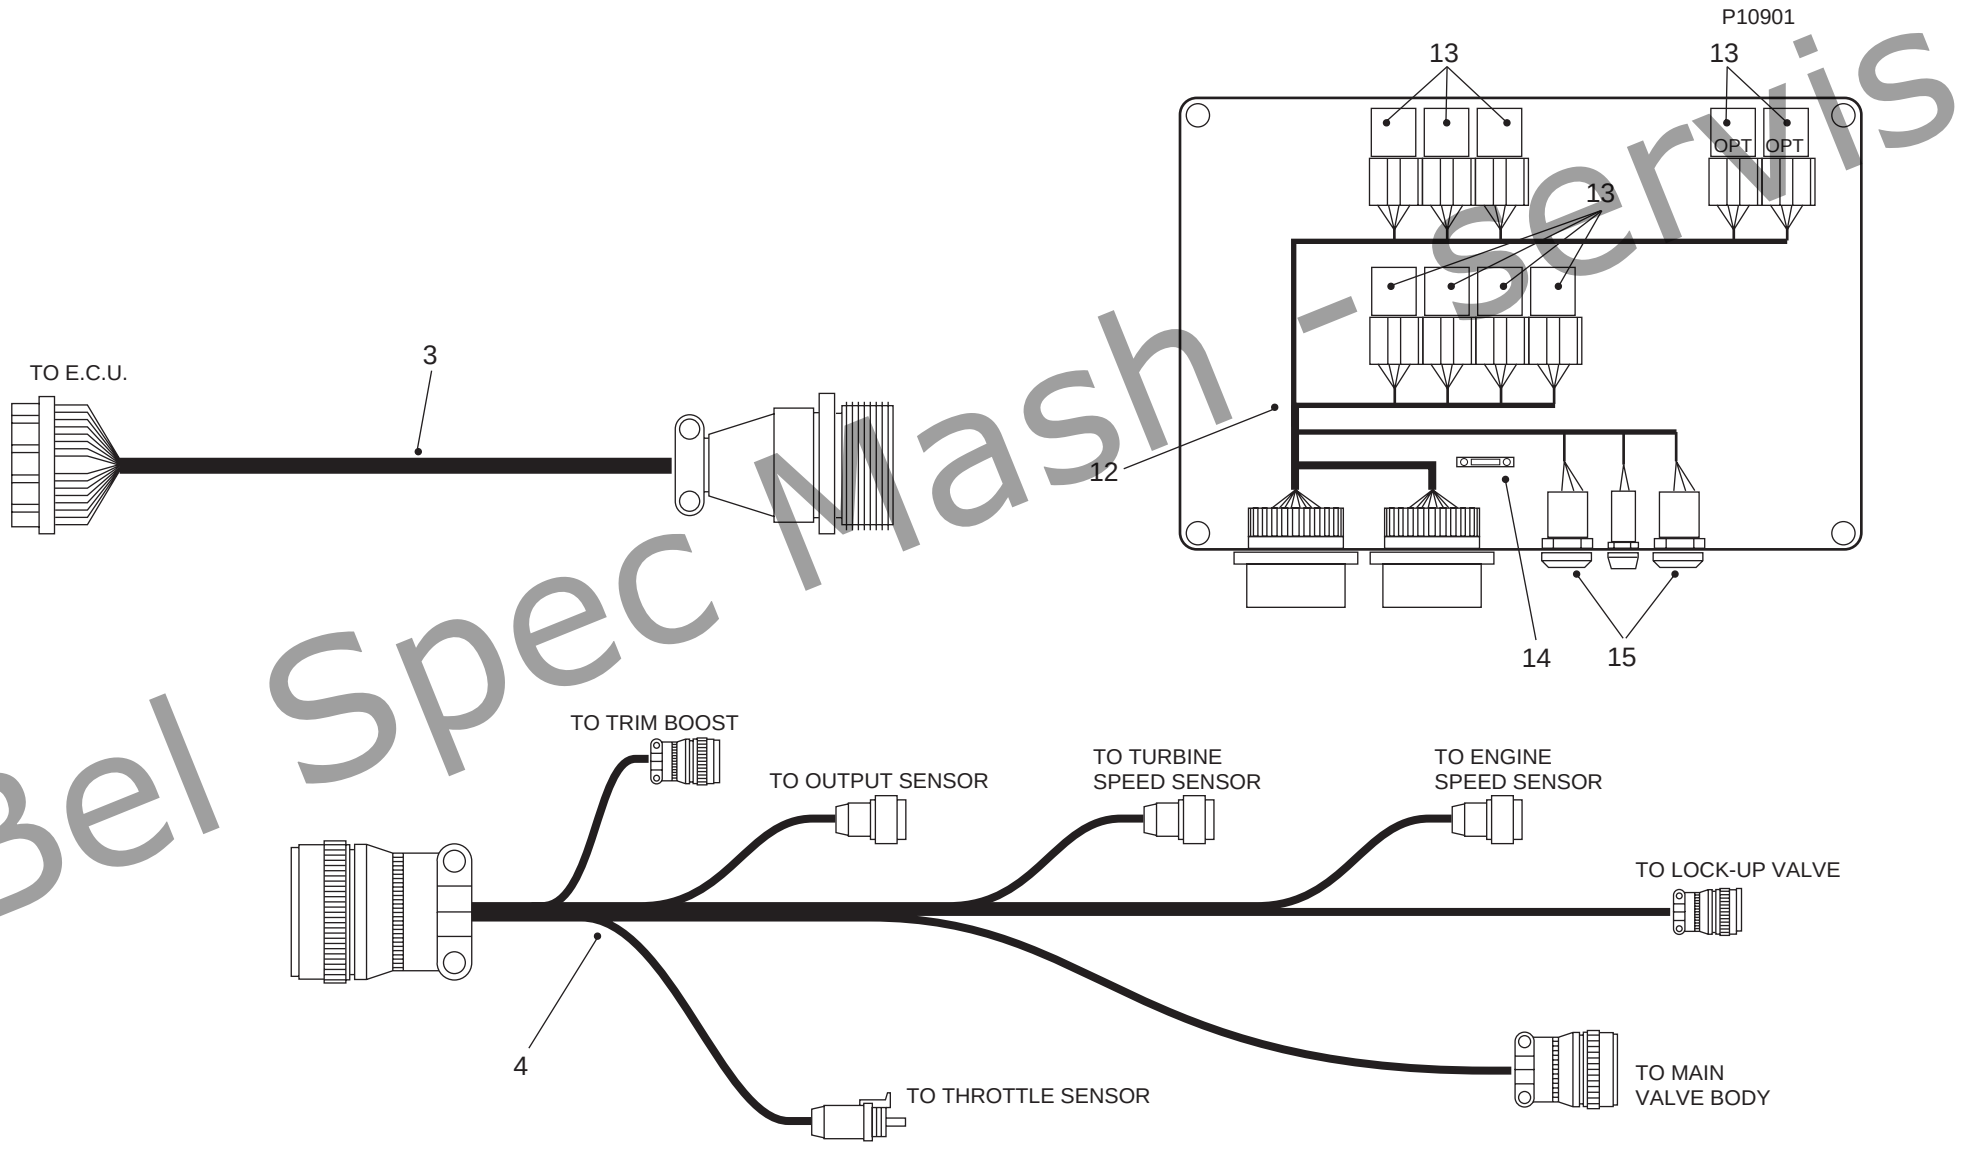

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0070-8391 SHIFT CONTROL
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	29536931	TRANS SHIFT SELECTOR		
	002	001	15310415	ECM-CEC2 TRANSMISSION		
	003	001	29537718	HARNESS-CEC2 TRANS		
	004	001	29537724	HARNESS-CEC2 TRANS		
	005	001	15310346	HARNESS-SHIFT CONT/ECU		
	006	001	15310406	PLATE-ADAPTOR		
	007	002	06350812	BOLT		
	008	002	07150815	WASHER		
	009	003	00179801	BOLT		
	010	003	00103319	LOCKWASHER		
	011	003	00103339	WASHER		
	012	001	15312229	HARNESS-INTERFACE		
	013	007	15256444	.RELAY		
	014	001	15247612	.FUSE-10AMP		
	015	002	15233323	.SWITCH-KEY		

Bel Spec Mash - servis

https://truckmanualshub.com/

THIS PAGE IS INTENTIONALLY LEFT BLANK


Bel Spec Mash - servis

https://truckmanualshub.com/

120-0090-8391 POWER TAKEOFF - TRANS
FROM SERIAL NO. T8391011

DRAWING NO. P8590

P8590

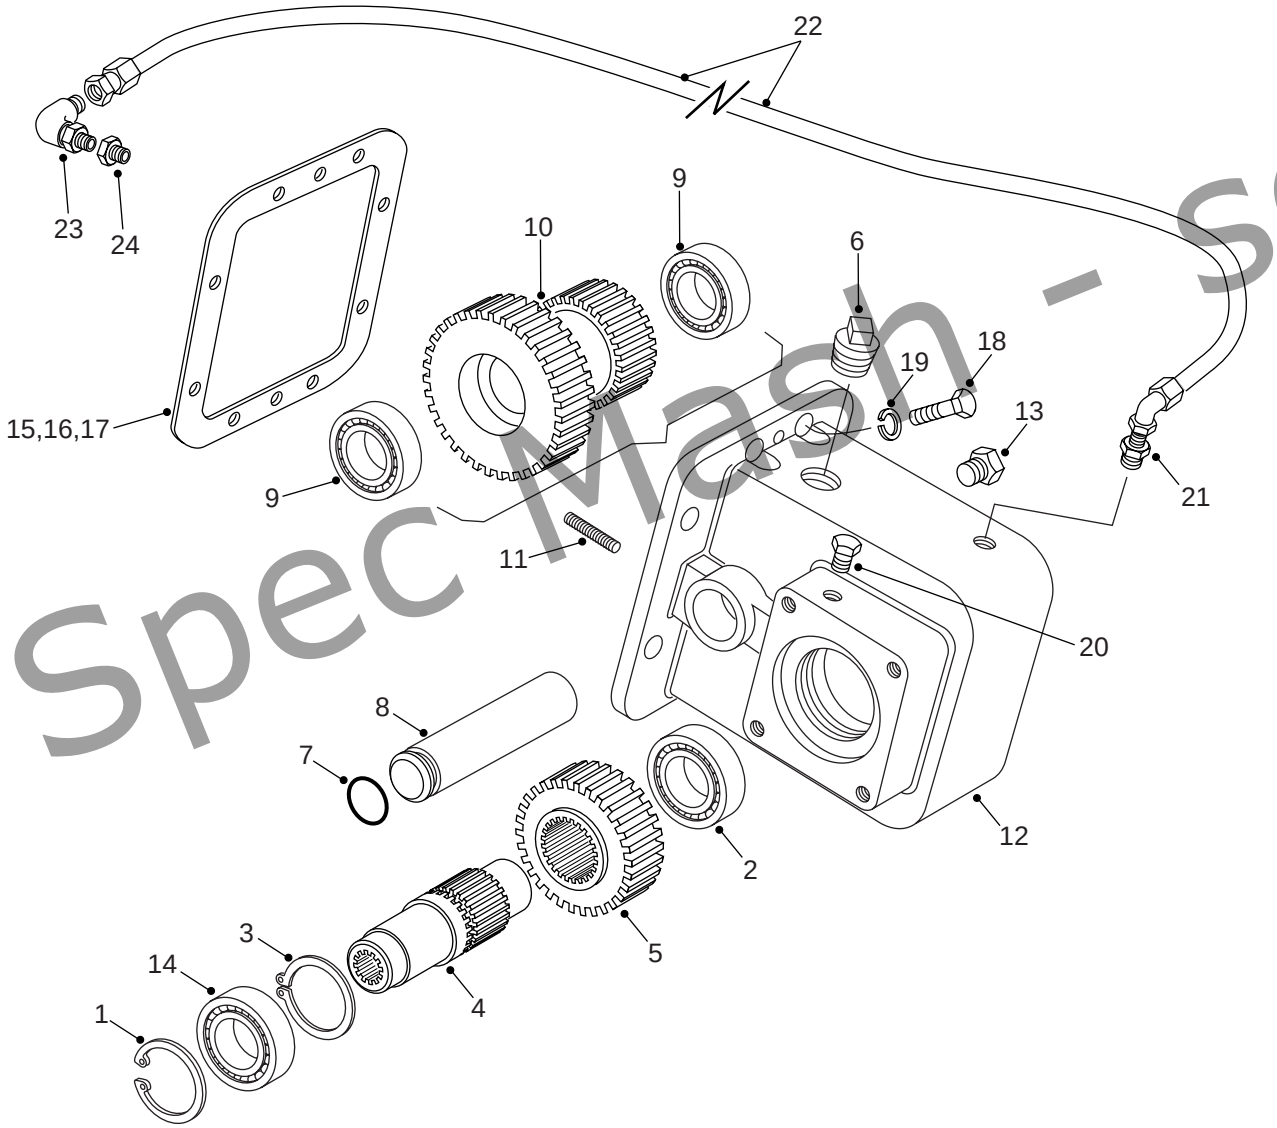

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0090-8391 POWER TAKEOFF - TRANS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	001	09182509	PTO ASSY		
	001	001	09413386	.RING		
	002	001	00907559	.BEARING		
	003	001	09413409	.RING		
	004	001	09182510	.SHAFT		
	005	001	09182507	.GEAR		
	006	001	00219305	.PLUG-PIPE		
	007	001	09148275	.O RING		
	008	001	09182511	.SHAFT		
	009	002	00907451	.BEARING		
	010	001	09182508	.GEAR		
	011	001	00102578	.SCREW		
	012	001	09182350	.HOUSING		
	013	001	00444625	.PLUG		
	014	001	00907561	.BEARING		
	015	ASR	09003659	SHIM (0.008 IN)		
	016	ASR	09003530	SHIM (0.020 IN)		
	017	ASR	09003658	SHIM (0.003 IN)		
	018	008	00179862	BOLT		
	019	008	00103328	LOCKWASHER		
	020	002	00444613	PLUG		
	021	001	15252873	ADAPTOR		
	022	001	15253257	HOSE ASSY		
	023	001	15252983	ELBOW		
	024	001	15257193	ADAPTOR		


Bel Spec Mash - servis

https://truckmanualshub.com/

120-0100-8391 FILTER
FROM SERIAL NO. T8391011

DRAWING NO. P7222

P7222

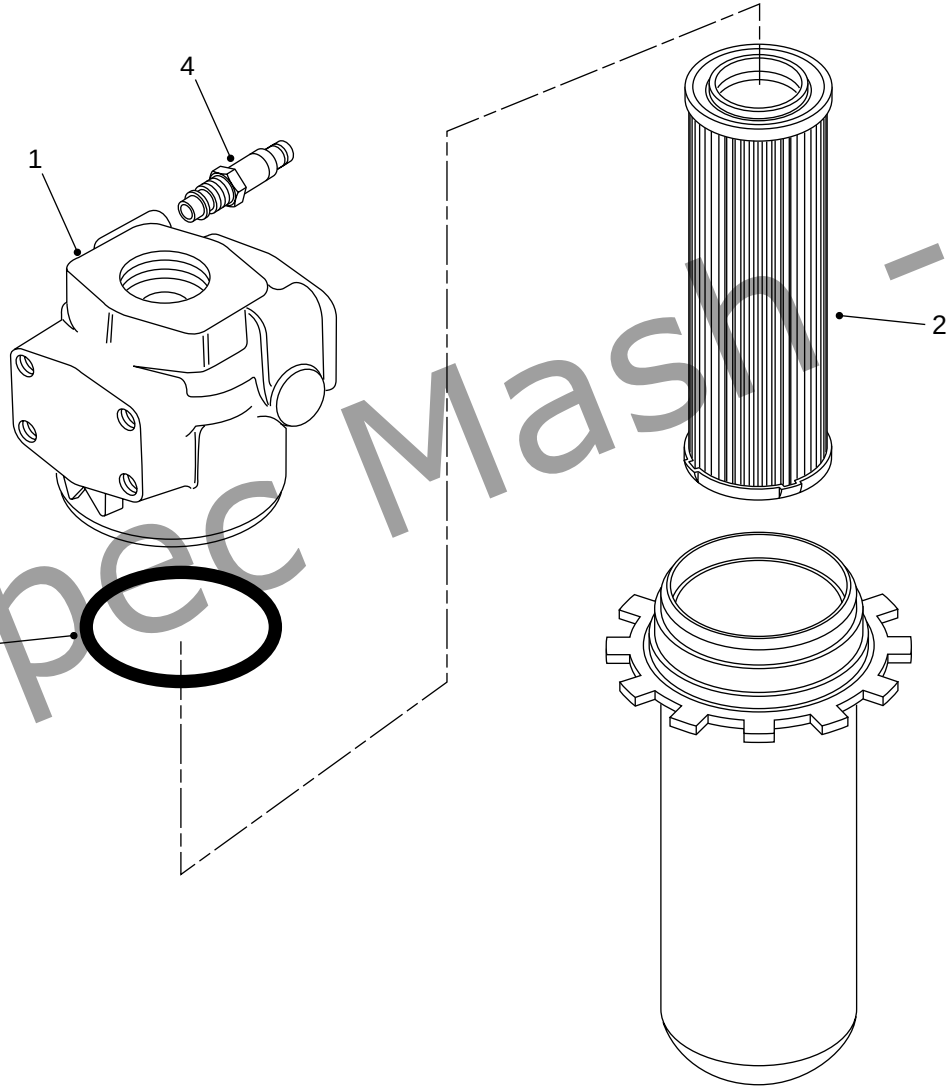

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0100-8391 FILTER
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	29530557	FILTER ASSY		
	002	001	15270496	.ELEMENT		
	003	001	23018958	.SEAL		
	004	001	29529657	.SWITCH		

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0110-8391 OIL LINES-TRANSMISSION
FROM SERIAL NO. T8391011

DRAWING NO. P10279

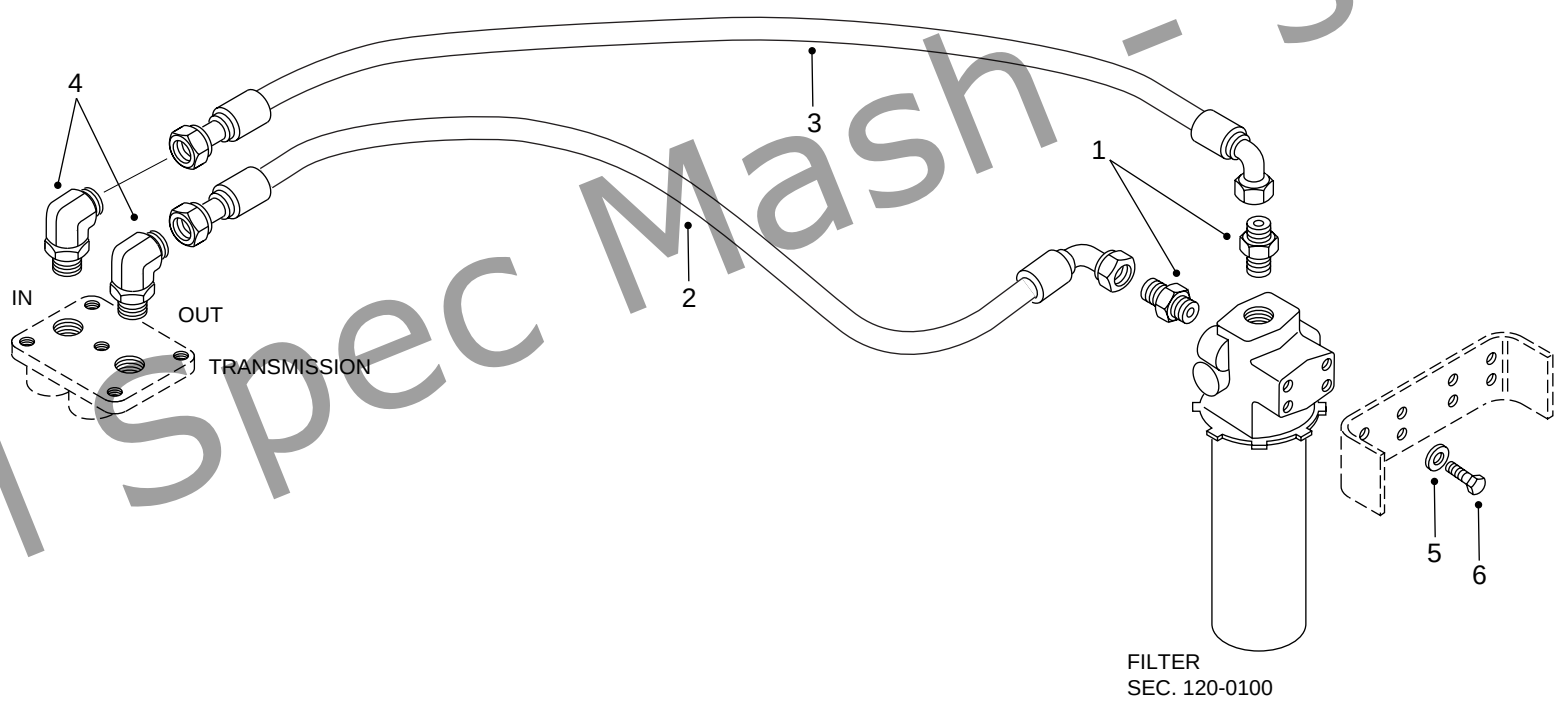

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0110-8391 OIL LINES-TRANSMISSION
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15252833	ADAPTOR		
	002	001	15258034	HOSE ASSY		
	003	001	15258035	HOSE ASSY		
	004	002	15258036	ELBOW		
	005	004	00103329	LOCKWASHER		
	006	004	00179885	BOLT		

Bel Spec Mash - servis


https://truckmanualshub.com/

R1 11/03 (ECN 106092)

120-0190-8391 RETARDER CONTROL LINES - HYD

FROM SERIAL NO. T8391011

DRAWING NO. P9957

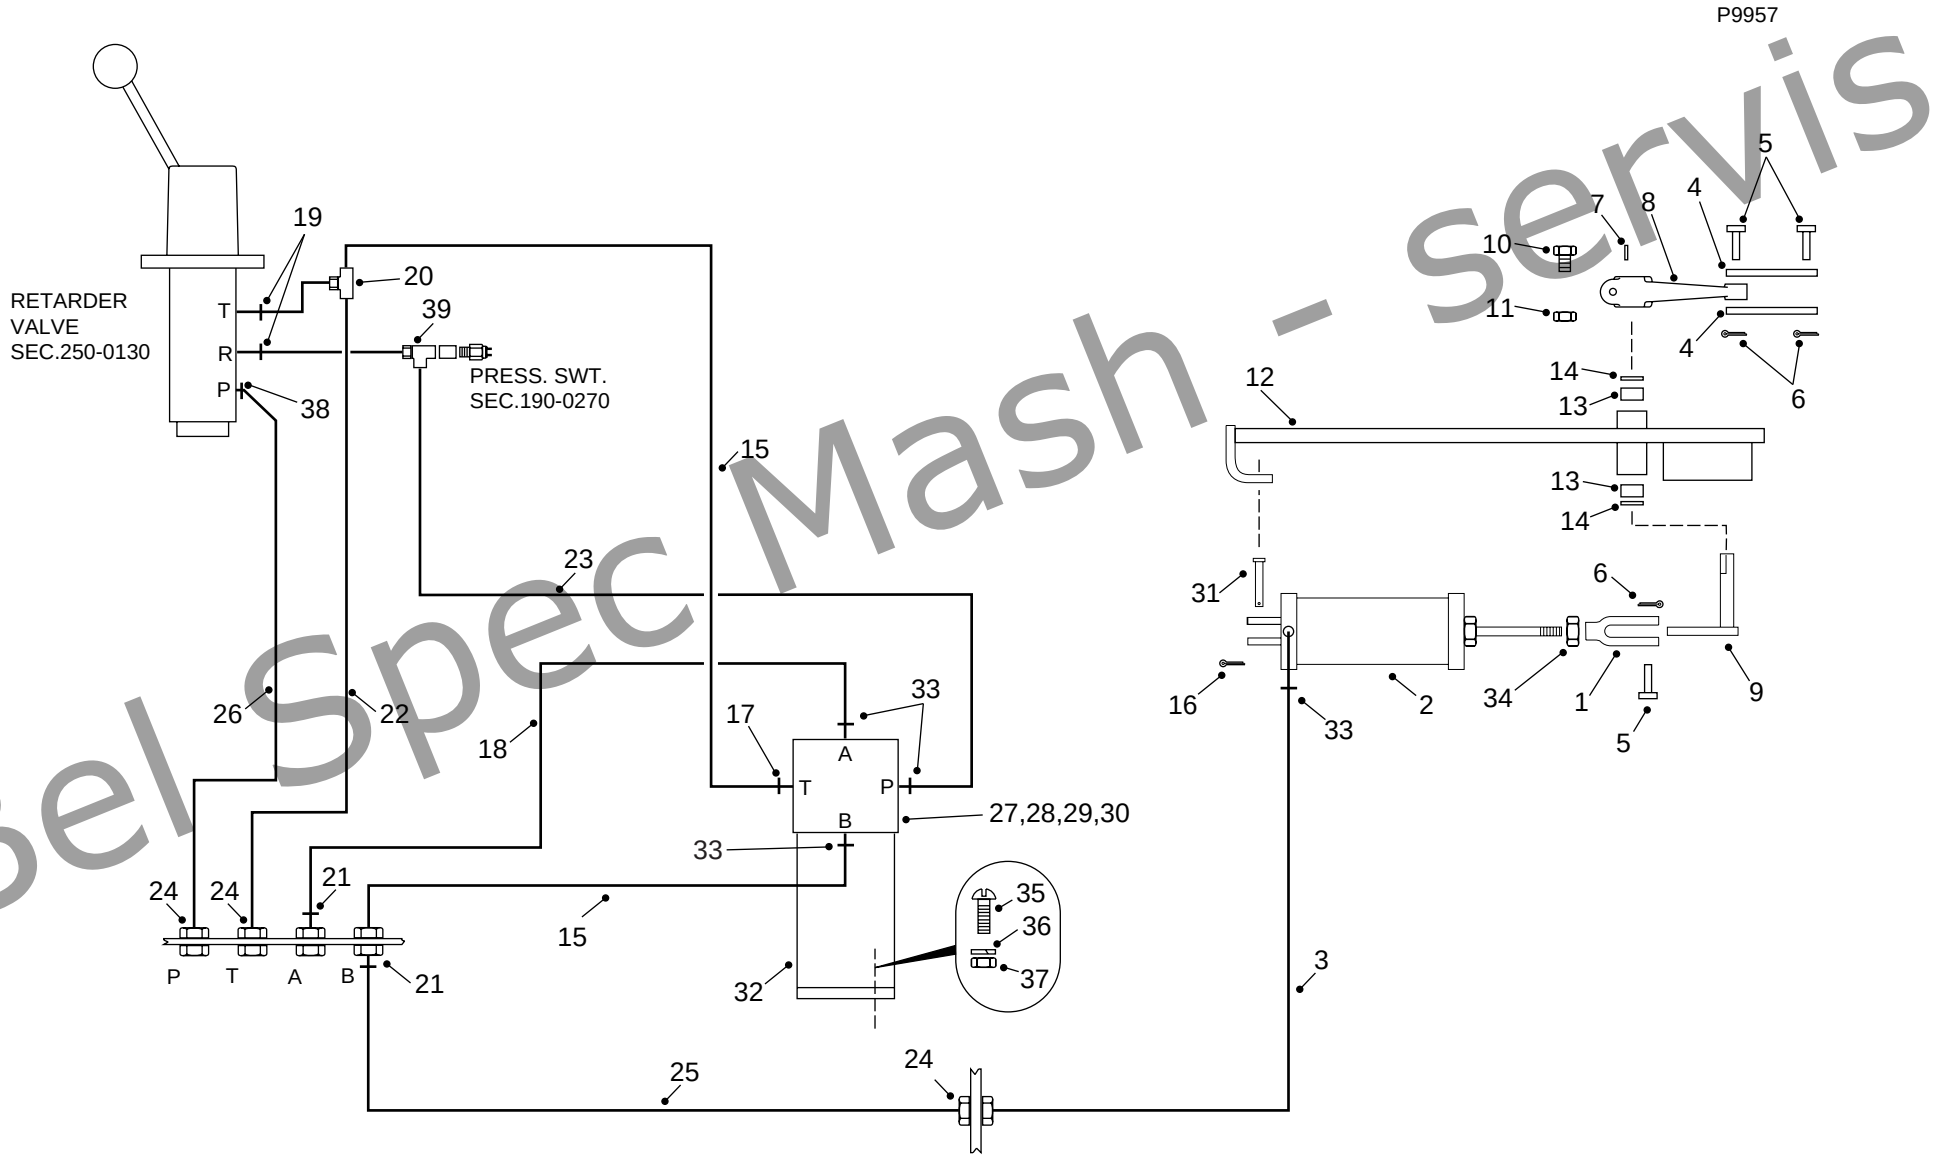

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0190-8391 RETARDER CONTROL LINES - HYD
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	09241275	CLEVIS		
A	002	001	15304629	CYLINDER-RETARDER	T8391011	T8391061
B	002	001	15318034	CYLINDER-RETARDER	T8391062	
	003	001	15302226	HOSE ASSY		
	004	001	15021239	PLATE		
	005	003	00103498	PIN		
	006	003	00137185	PIN-COTTER		
	007	001	09236064	KEY		
	008	001	09148477	LEVER		
	009	001	15021238	LEVER		
	010	001	00427574	BOLT		
	011	001	09417713	NUT		
	012	001	15246518	BRACKET ASSY		
	013	002	15021005	.BEARING		
	014	002	09153476	.SEAL		
	015	002	15255351	HOSE ASSY		
	016	001	00121222	PIN-COTTER		
	017	004	15233866	ADAPTOR		
	018	001	15255352	HOSE ASSY		
	019	001	15251979	ADAPTOR		
	020	001	15252977	TEE		
	021	002	15253157	ELBOW-BULKHEAD		
	022	001	15255350	HOSE ASSY		
	023	001	15255349	HOSE ASSY		
	024	003	15253039	ADAPTOR-BULKHEAD		
	025	001	15255377	HOSE ASSY		
	026	001	15253087	HOSE ASSY		
	027	003	07160530	LOCKWASHER		
	028	003	06350512	BOLT		
	029	001	15304321	SOLENOID VALVE		
	030	001	15272875	.KIT-STEM & COIL		
	031	001	09218975	PIN-CLEVIS		
	032	001	15255584	BRACKET-SOLENOID		
	033	003	15255442	ELBOW		
	034	001	09429209	NUT		
	035	003	00110500	SCREW		
	036	003	00106497	LOCKWASHER		
	037	003	00110633	NUT		
	038	002	15253060	ELBOW		
	039	001	15251951	TEE		

120-0190-8391 RETARDER CONTROL LINES - HYD
FROM SERIAL NO. T8391011


NOTES:
A SEAL KIT 15273719
B SEAL KIT 15500965

Bel-Spec Mash - servis

https://truckmanualshub.com/

120-0200-8391 FRONT COVER & CONVERTER GROUP
FROM SERIAL NO. T8391011

DRAWING NO. P9408

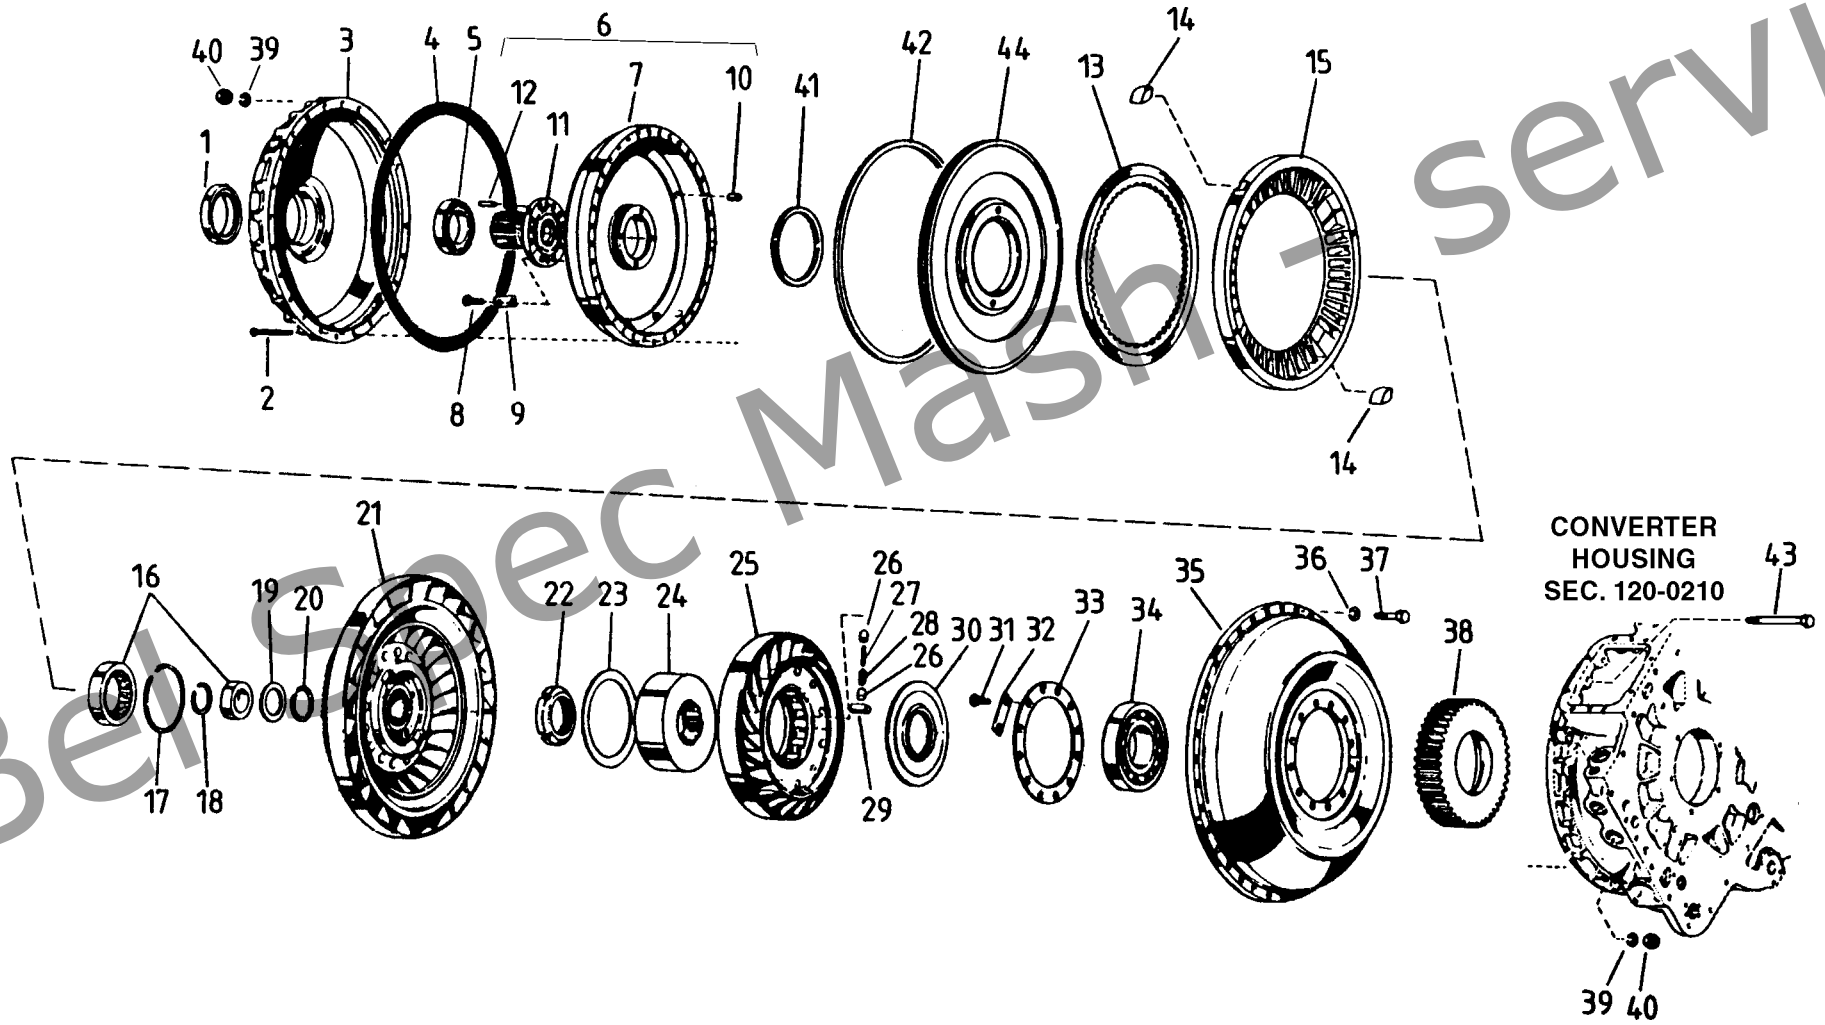

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0200-8391 FRONT COVER & CONVERTER GROUP
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	06773186	SEAL		
	002	018	00181415	BOLT		
	003	001	06768689	COVER		
	004	001	05181902	GASKET		
	005	001	23041458	BEARING		
A	006	001	29519116	HOUSING ASSY		
	007	001	23045944	.COVER		
	008	008	00181454	.BOLT		
	009	004	06768688	.STRIP		
	010	004	23018502	.PIN		
	011	001	29515103	.HUB		
	012	004	00455366	.PIN DOWEL		
	013	001	06832138	PLATE-FRICTION		
	014	002	06772552	KEY		
	015	001	23016058	PLATE		
	016	001	23041452	BEARING		
	017	001	06774184	RING-SNAP		
	018	001	06838403	RING-SNAP		
	019	001	06774704	SPACER		
	020	001	06774703	RING-SNAP		
	021	001	23019639	TURBINE		
	022	001	06774708	NUT		
	023	001	06758485	WASHER		
	024	001	06774709	RACE		
	025	001	29507738	STATOR		
	026	024	06773088	CUP		
	027	012	06770302	ROLLER		
	028	012	06769276	SPRING		
	029	012	06770574	ROLLER		
	030	001	06774710	PLATE		
	031	012	00181374	BOLT		
	032	006	06770578	STRIP		
	033	001	06770585	RING		
	034	001	23041915	BEARING		
	035	001	29536876	PUMP		
	036	036	06830003	WASHER		
	037	036	09420572	BOLT		
	038	001	29503632	GEAR-INPUT ACC DRIVE		
	039	021	00103322	LOCKWASHER		
	040	021	00271505	NUT		

120-0200-8391 FRONT COVER & CONVERTER GROUP
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	06752849	SEAL		
	042	001	06752848	SEAL		
	043	003	00186331	BOLT		
B	044	001	29537277	PISTON		


NOTES:
A USE ONE 06774587 SLEEVE FOR COVER ASSEMBLY REWORK
B USE ONE 06832547 BUSHING FOR PISTON REWORK.

Be Spec Mash - servis

https://truckmanualshub.com/

120-0210-8391 CONVERTER HOUSING GROUP
FROM SERIAL NO. T8391011

DRAWING NO. P10708

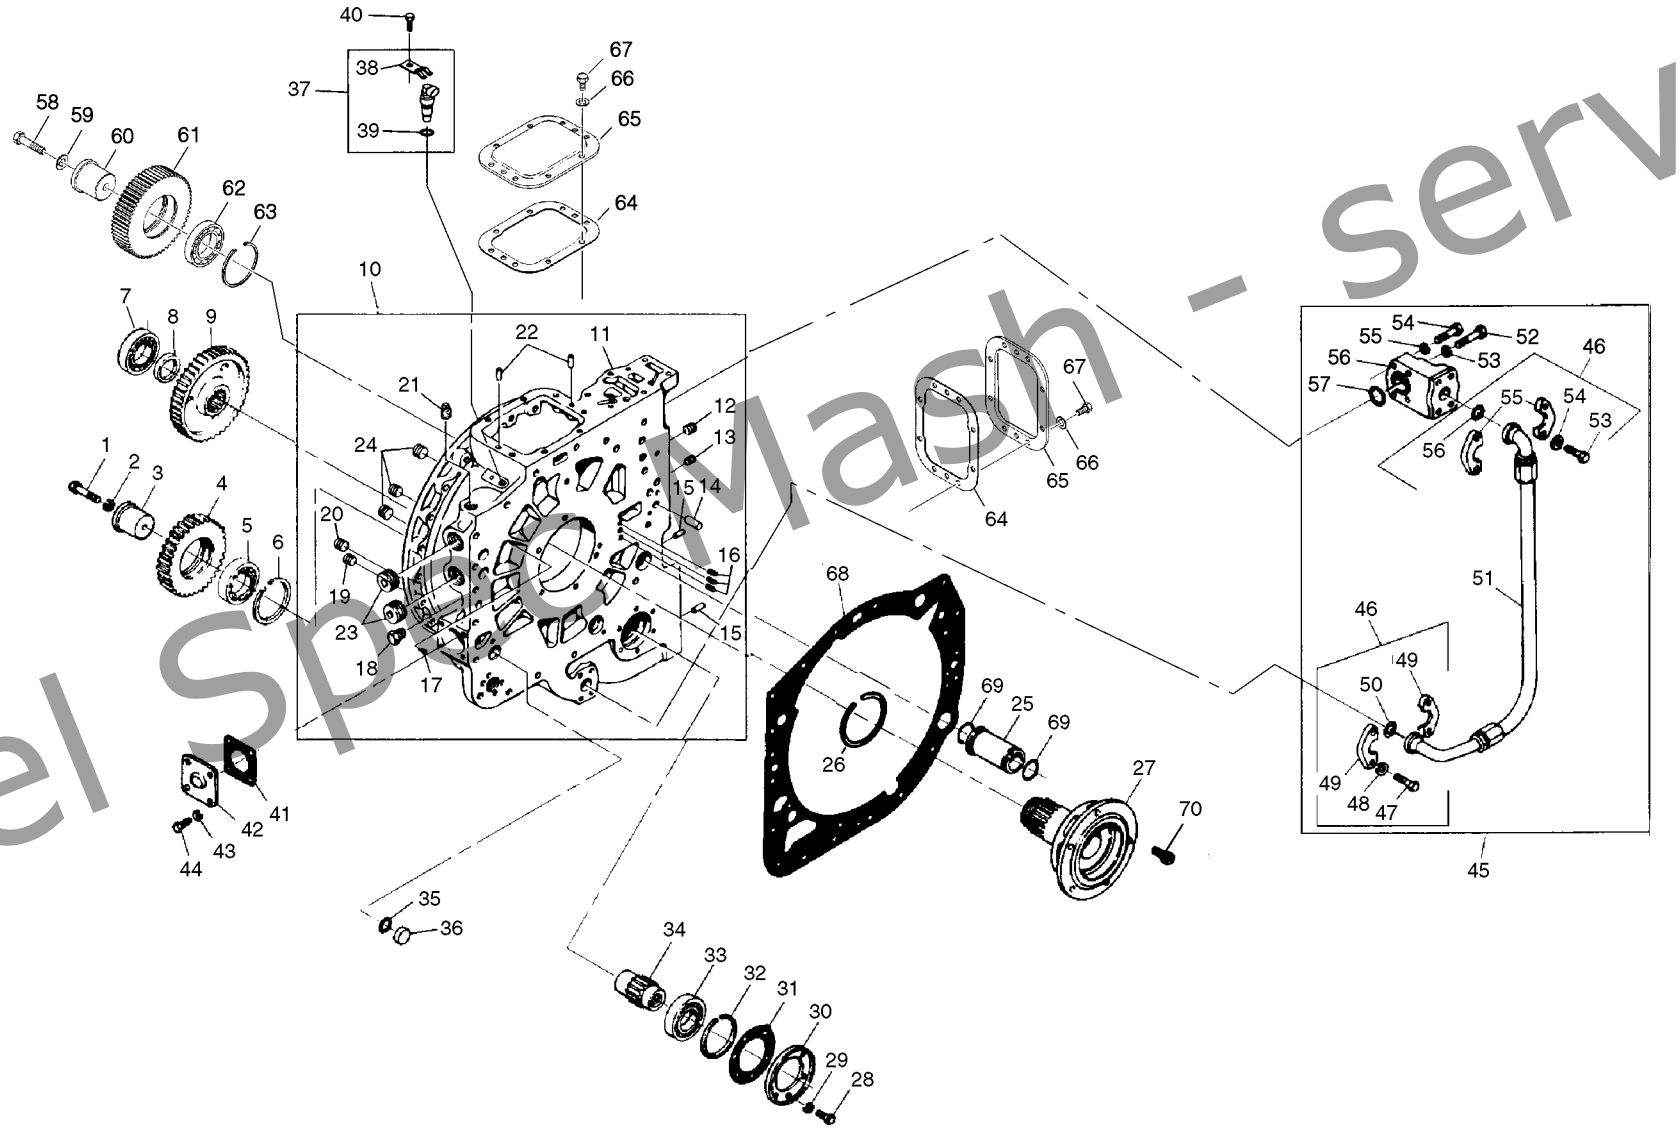

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0210-8391 CONVERTER HOUSING GROUP
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	00179891	BOLT		
	002	001	00103323	WASHER		
	003	001	06774736	SPINDLE-PUMP DRIVE		
	004	001	06774735	GEAR-IDLER OIL PUMP		
	005	001	23048022	ROLLER BEARING		
	006	001	08892840	RING-SNAP		
	007	001	23047992	BEARING		
	008	001	06756338	SPACER		
	009	001	06755986	GEAR-DRIVE OIL PUMP		
	010	001	29537274	HOUSING ASSY		
	011	001	29537272	.CONVERTER HOUSING		
	012	001	23012038	.PLUG		
	013	001	00444654	.PLUG		
	014	002	00107393	.PIN		
	015	002	00141264	.PIN-DOWEL		
	016	003	00444688	.PLUG		
	017	001	00145067	.SCREW		
	018	001	29525046	.PLUG ASSY		
	019	001	29527480	.PLUG ASSY		
	020	001	29525050	.PLUG ASSY		
	021	001	29525048	.PLUG ASSY		
	022	002	00141264	.PIN-DOWEL		
	023	002	29525051	.PLUG ASSY		
	024	003	00444716	.PLUG		
	025	001	06768770	TUBE		
	026	001	23019731	SEAL		
	027	001	29501206	SLEEVE		
	028	006	00179838	BOLT		
	029	006	00103321	LOCKWASHER		
	030	001	06758337	COVER-ACCESSORY		
	031	001	06882702	GASKET		
	032	001	06753487	RING-SNAP		
	033	001	23047992	BEARING		
	034	001	06769509	HUB GEAR-OIL PUMP		
	035	001	06836923	SEAL		
	036	001	06837821	PLUG		
	037	001	29509637	SPEED SENSOR ASSY		
	038	001	29503843	.RETAINER		
	039	001	29503383	.O RING		
	040	001	00179812	BOLT		

120-0210-8391 CONVERTER HOUSING GROUP
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	29503803	GASKET		
	042	001	06758216	COVER		
	043	004	00103321	LOCKWASHER		
	044	004	00179837	BOLT		
	045	001	06838413	KIT-HOSE		
	046	002	29501462	.FLANGE		
	047	008	00179860	..BOLT		
	048	008	00103322	..LOCKWASHER		
	049	004	06779125	..FLANGE		
	050	002	06830007	..SEAL		
	051	001	23046148	.HOSE ASSY		
	052	002	00179867	.BOLT		
	053	002	00103322	.LOCKWASHER		
	054	002	00179866	.BOLT		
	055	002	00103322	.LOCKWASHER		
	056	001	06837129	.BLOCK		
	057	001	06830007	.SEAL		
	058	001	00179891	BOLT		
	059	001	00103323	WASHER		
	060	001	06774736	SPINDLE-PUMP DRIVE		
	061	001	06774735	GEAR-IDLER OIL PUMP		
	062	001	23048022	ROLLER BEARING		
	063	001	08892840	RING-SNAP		
	064	002	06758442	GASKET		
	065	002	06768990	COVER-PTO		
	066	016	00103322	LOCKWASHER		
	067	016	00179857	BOLT		
	068	001	06779451	GASKET		
	069	002	06830021	SEAL		
	070	005	09409127	BOLT		

BeriSpec Mashinservis

https://truckmanualshub.com/

120-0220-8391 OIL PUMP
FROM SERIAL NO. T8391011

DRAWING NO. P9309

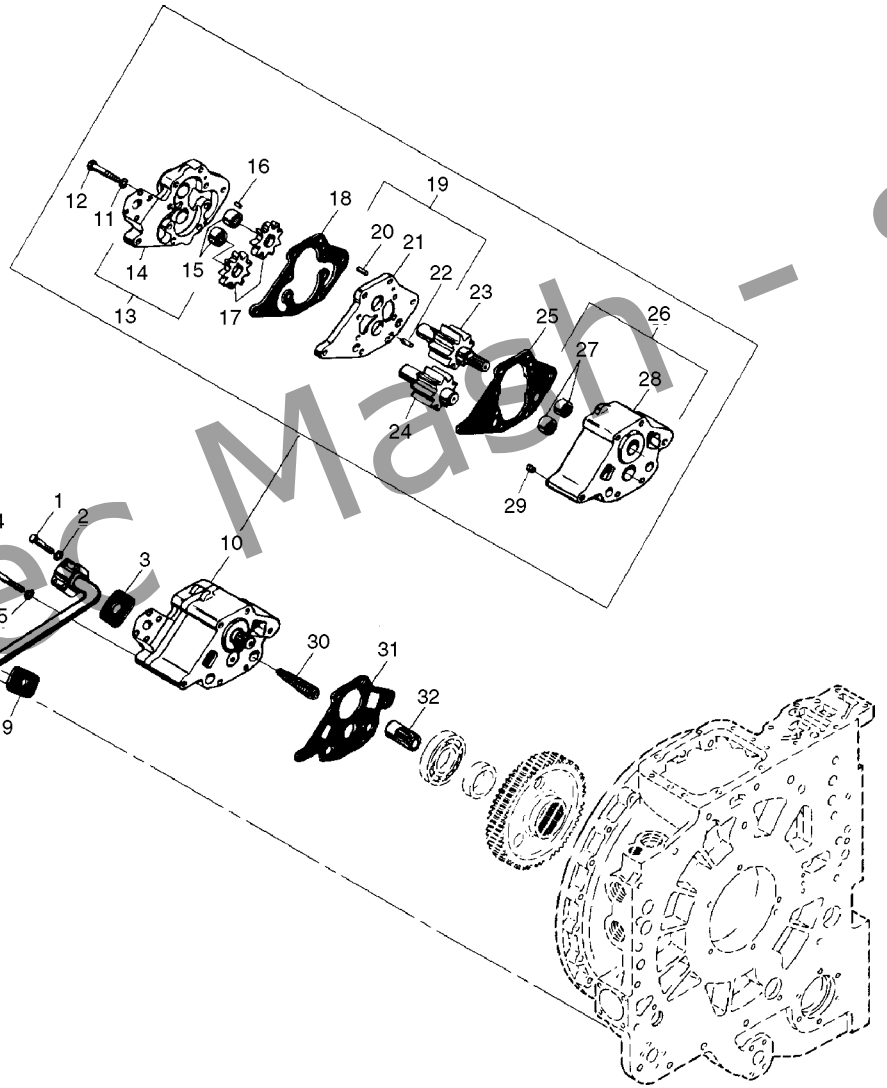

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0220-8391 OIL PUMP
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	004	00179845	BOLT		
	002	004	00103321	LOCKWASHER		
	003	001	06758218	GASKET		
	004	006	09418964	BOLT		
	005	006	00103321	LOCKWASHER		
	006	004	00179839	BOLT		
	007	004	09415545	WASHER		
	008	001	06769729	TUBE-FLANGED		
	009	001	06758218	GASKET		
	010	001	06880125	PUMP ASSY		
	011	004	00103321	.LOCKWASHER		
	012	004	00179848	.BOLT		
	013	001	06834181	.BODY		
	014	001	06834182	..PUMP BODY		
	015	002	00148415	..BEARING		
	016	001	06758530	.ROLLER		
	017	002	06834180	.GEAR		
	018	001	06769413	.GASKET		
	019	001	06834183	.PLATE		
	020	001	06838429	..STOP		
	021	001	06834184	..PLATE		
	022	001	06838429	..STOP		
	023	001	06769722	.GEAR-DRIVE		
	024	001	06769720	.GEAR-DRIVE		
	025	001	06756124	.GASKET		
	026	001	06880127	.BODY ASSY		
	027	002	00148415	..BEARING		
	028	001	06880128	..BODY-INPUT		
	029	006	06880124	.RING-STAR		
	030	001	06776451	SCREEN		
	031	001	06756002	GASKET		
	032	001	06881547	COUPLING		

BelSpec Mash - servis

https://truckmanualshub.com/

120-0230-8391 FILTER ADAPT/REGULATOR VALVES
FROM SERIAL NO. T8391011

DRAWING NO. P9312

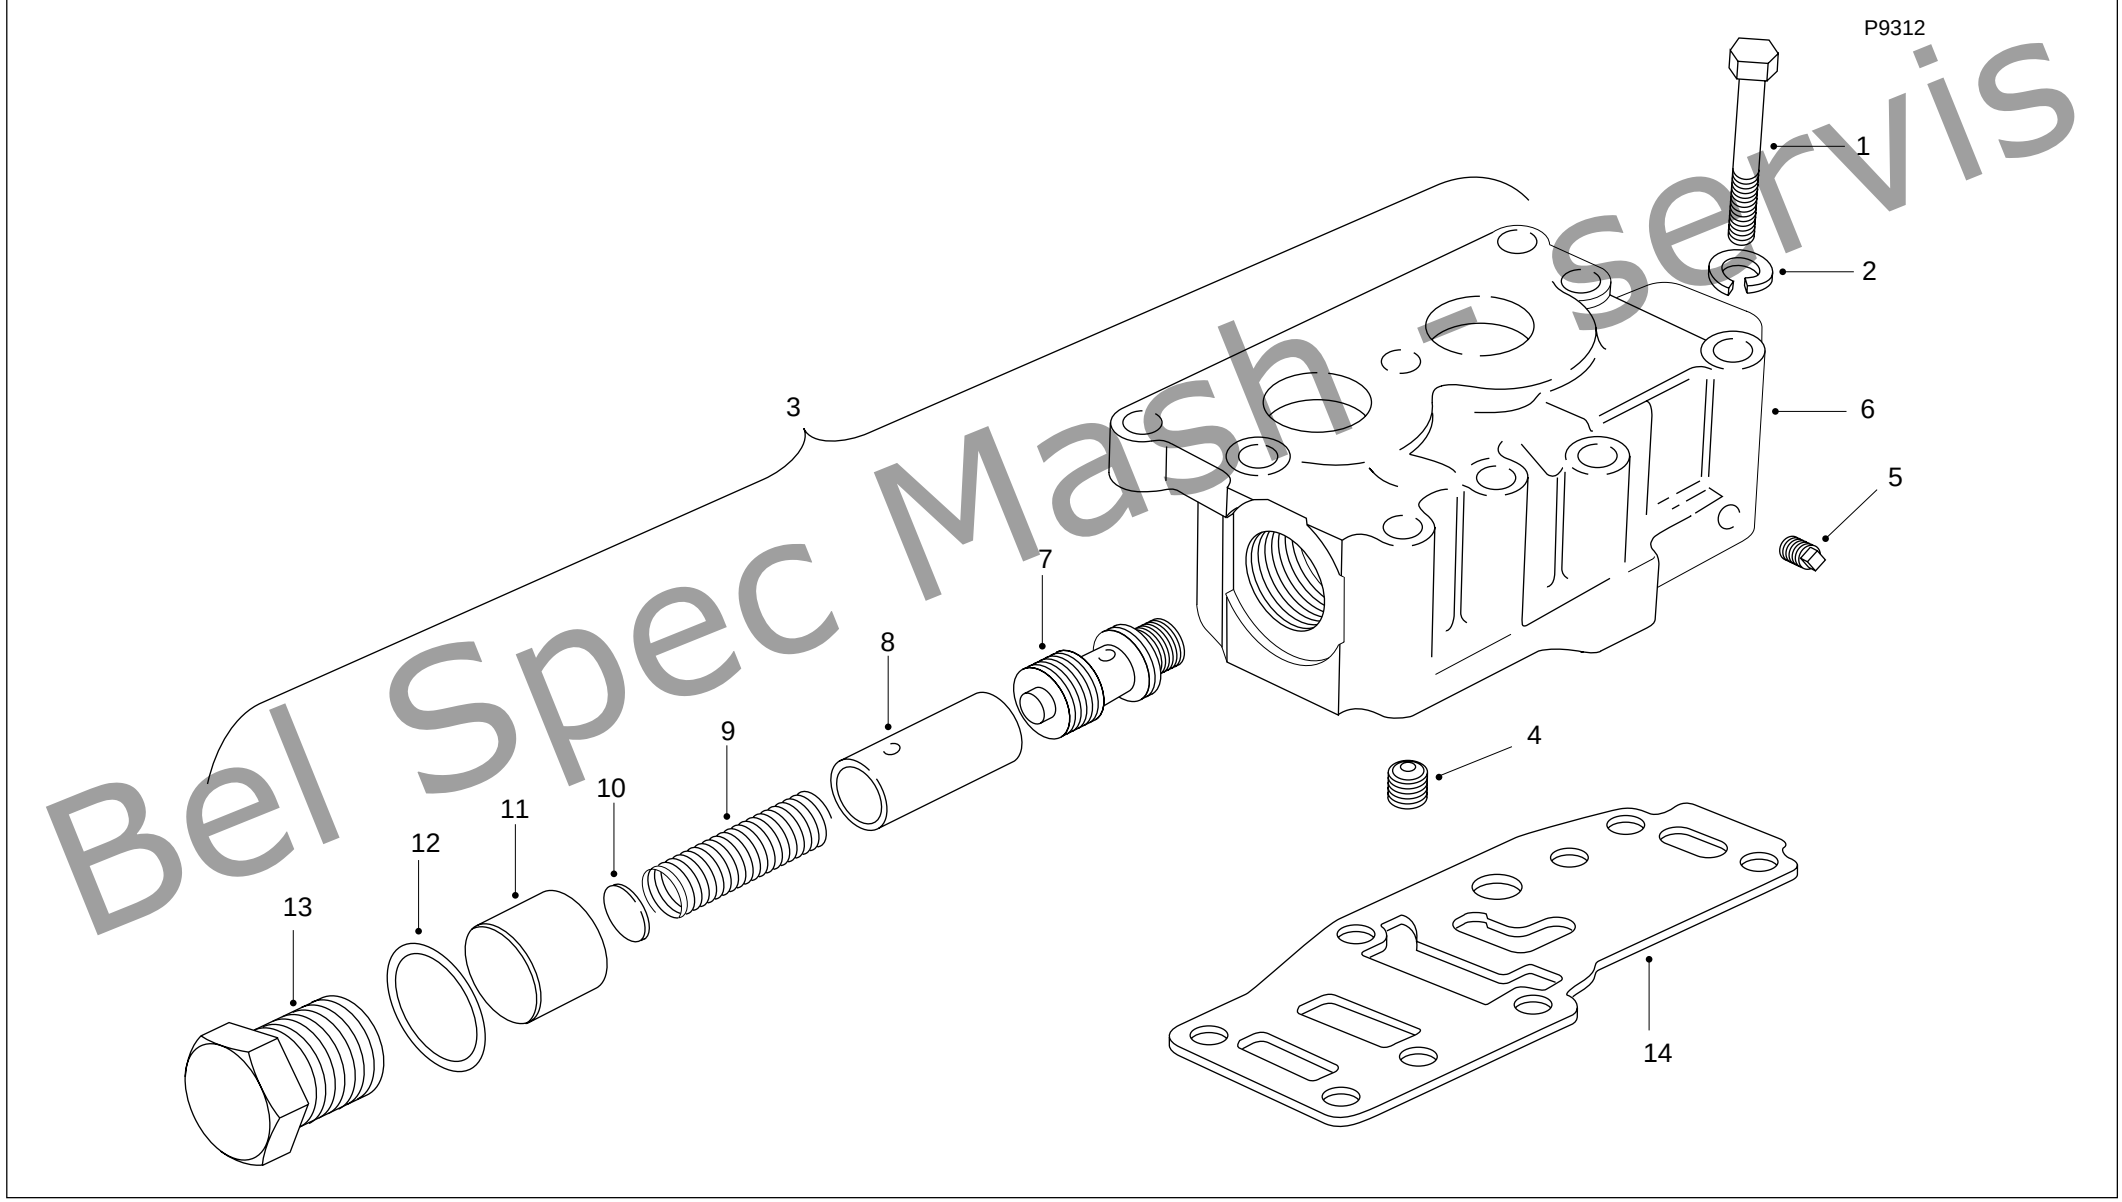

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0230-8391 FILTER ADAPT/REGULATOR VALVES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	007	09409045	BOLT		
	002	007	09422848	WASHER		
	003	001	29525040	BODY ASSY		
	004	001	09417797	.SCREW		
	005	001	29500034	.PLUG ASSY		
	006	001	29525039	.BODY-MAIN PRESS REG		
	007	001	06770075	.VALVE		
	008	001	06758907	.STOP		
	009	001	06758508	.SPRING		
	010	ASR	06769783	.SHIM		
	010	ASR	06768264	.SHIM		
	011	001	06776680	.PLUG		
	012	001	06760112	.GASKET		
	013	001	06758461	.PLUG		
	014	001	23016548	GASKET		

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0240-8391 LOCKUP VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P10709

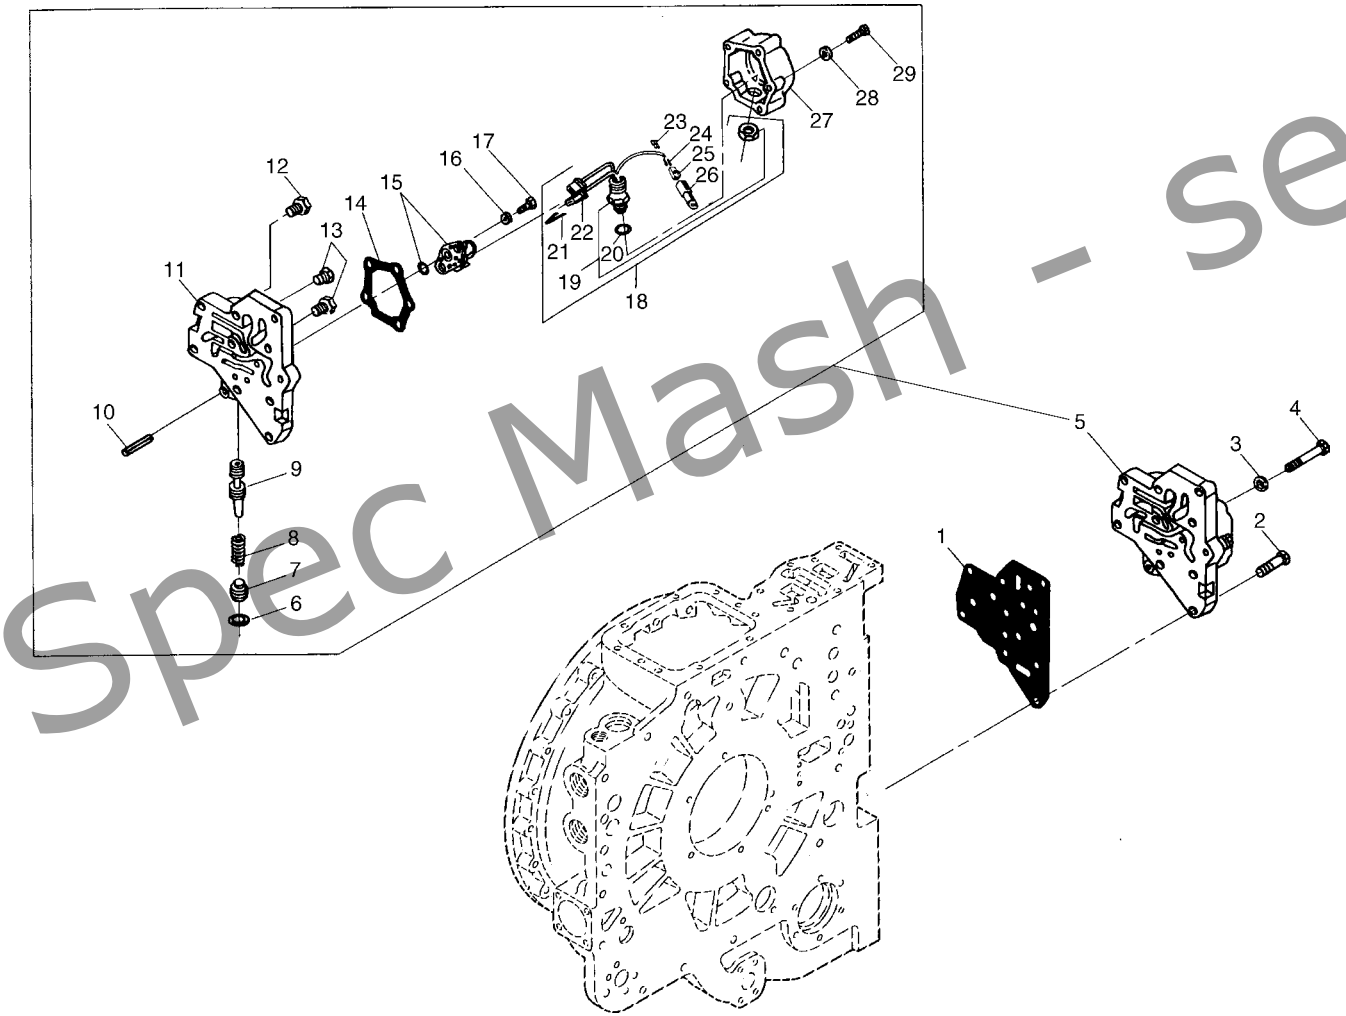

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0240-8391 LOCKUP VALVE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	06880860	GASKET		
	002	005	09409231	BOLT		
	003	003	09422847	WASHER		
	004	004	09409226	BOLT		
	005	001	29536480	VALVE-LOCKUP		
	006	001	06771005	.RING		
	007	001	06758543	.PLUG		
	008	001	06838520	.SPRING		
	009	001	06770023	.VALVE		
	010	001	00273921	.PIN		
	011	001	29527366	.BODY		
	012	001	29500034	.PLUG ASSY		
	013	002	29525044	.PLUG ASSY		
	014	001	23045876	.GASKET		
	015	001	23019734	.SOLENOID-12V		
	016	002	00103339	.WASHER		
	017	002	00186647	.BOLT		
	018	001	29536509	.HARNESS ASSY		
	019	001	23046474	..CONNECTOR-RECEPTACLE		
	020	001	23016455	...SEAL RING		
	021	002	12052410	..TERMINAL		
	022	001	12059716	..CONNECTOR-BODY		
	023	001	12047664	..LOCK		
	024	002	12047767	..TERMINAL		
	025	001	12047662	..CONNECTOR		
	026	001	12129691	..SENSOR		
	027	001	NSS	.COVER-SOLENOID		
	028	002	00103339	.WASHER		
	029	002	00454815	.BOLT		

Bel-Spec Mash - servis

https://truckmanualshub.com/

120-0260-8391 RETARDER GROUP
FROM SERIAL NO. T8391011

DRAWING NO. P10710

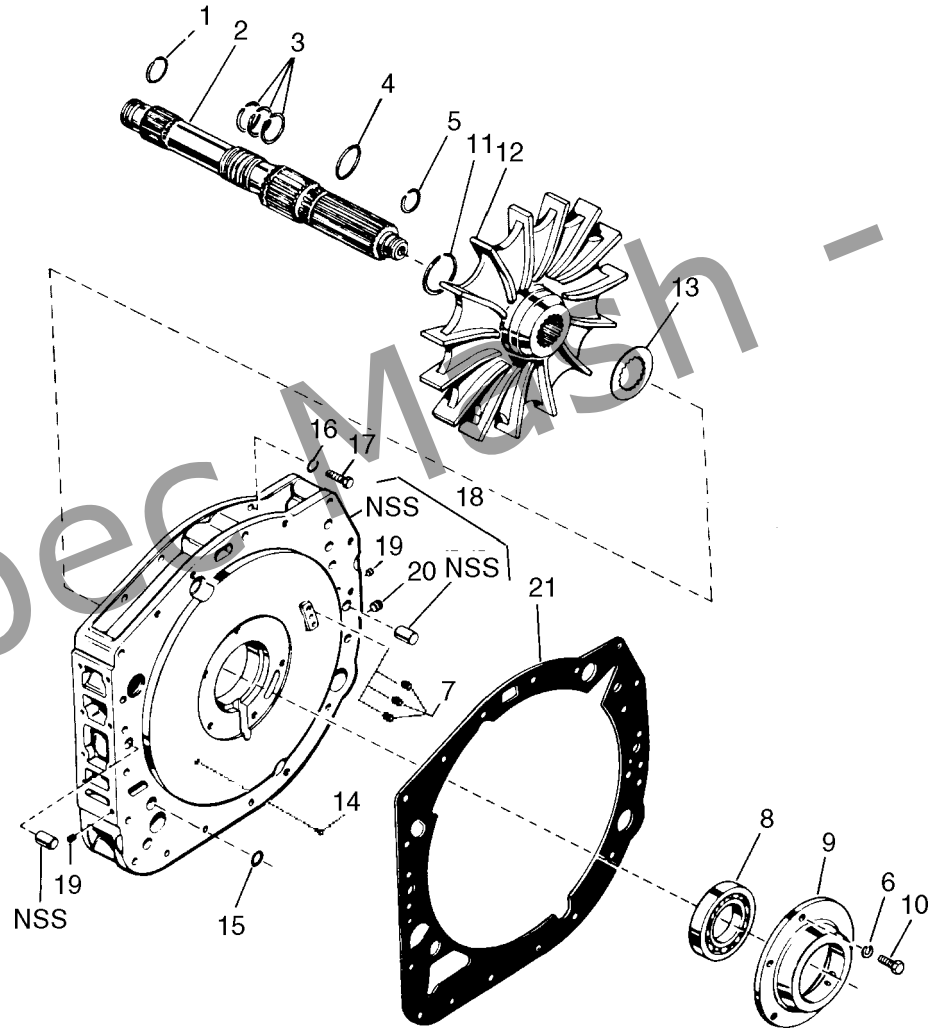

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0260-8391 RETARDER GROUP
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	23019730	SEAL		
	002	001	06778435	SHAFT-TURBINE OUTPUT		
	003	003	23019649	SEAL		
	004	001	06774290	SEAL		
	005	001	23019729	SEAL		
	006	005	00103323	WASHER		
	007	003	00444688	PLUG		
	008	001	29507729	BEARING		
	009	001	23014166	HUB		
	010	005	00179883	BOLT		
	011	001	06754835	RING-SNAP		
	012	001	06880323	ROTOR		
	013	001	06769107	WASHER		
	014	001	00145067	SCREW		
	015	001	06836923	SEAL		
	016	007	00103323	WASHER		
	017	007	00179885	BOLT		
	018	001	23048643	HOUSING		
	019	002	23014911	PLUG		
	020	001	23014599	PLUG-PIPE		
	021	001	06779451	GASKET		

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0270-8391 RETARDER CONTROL VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P9955

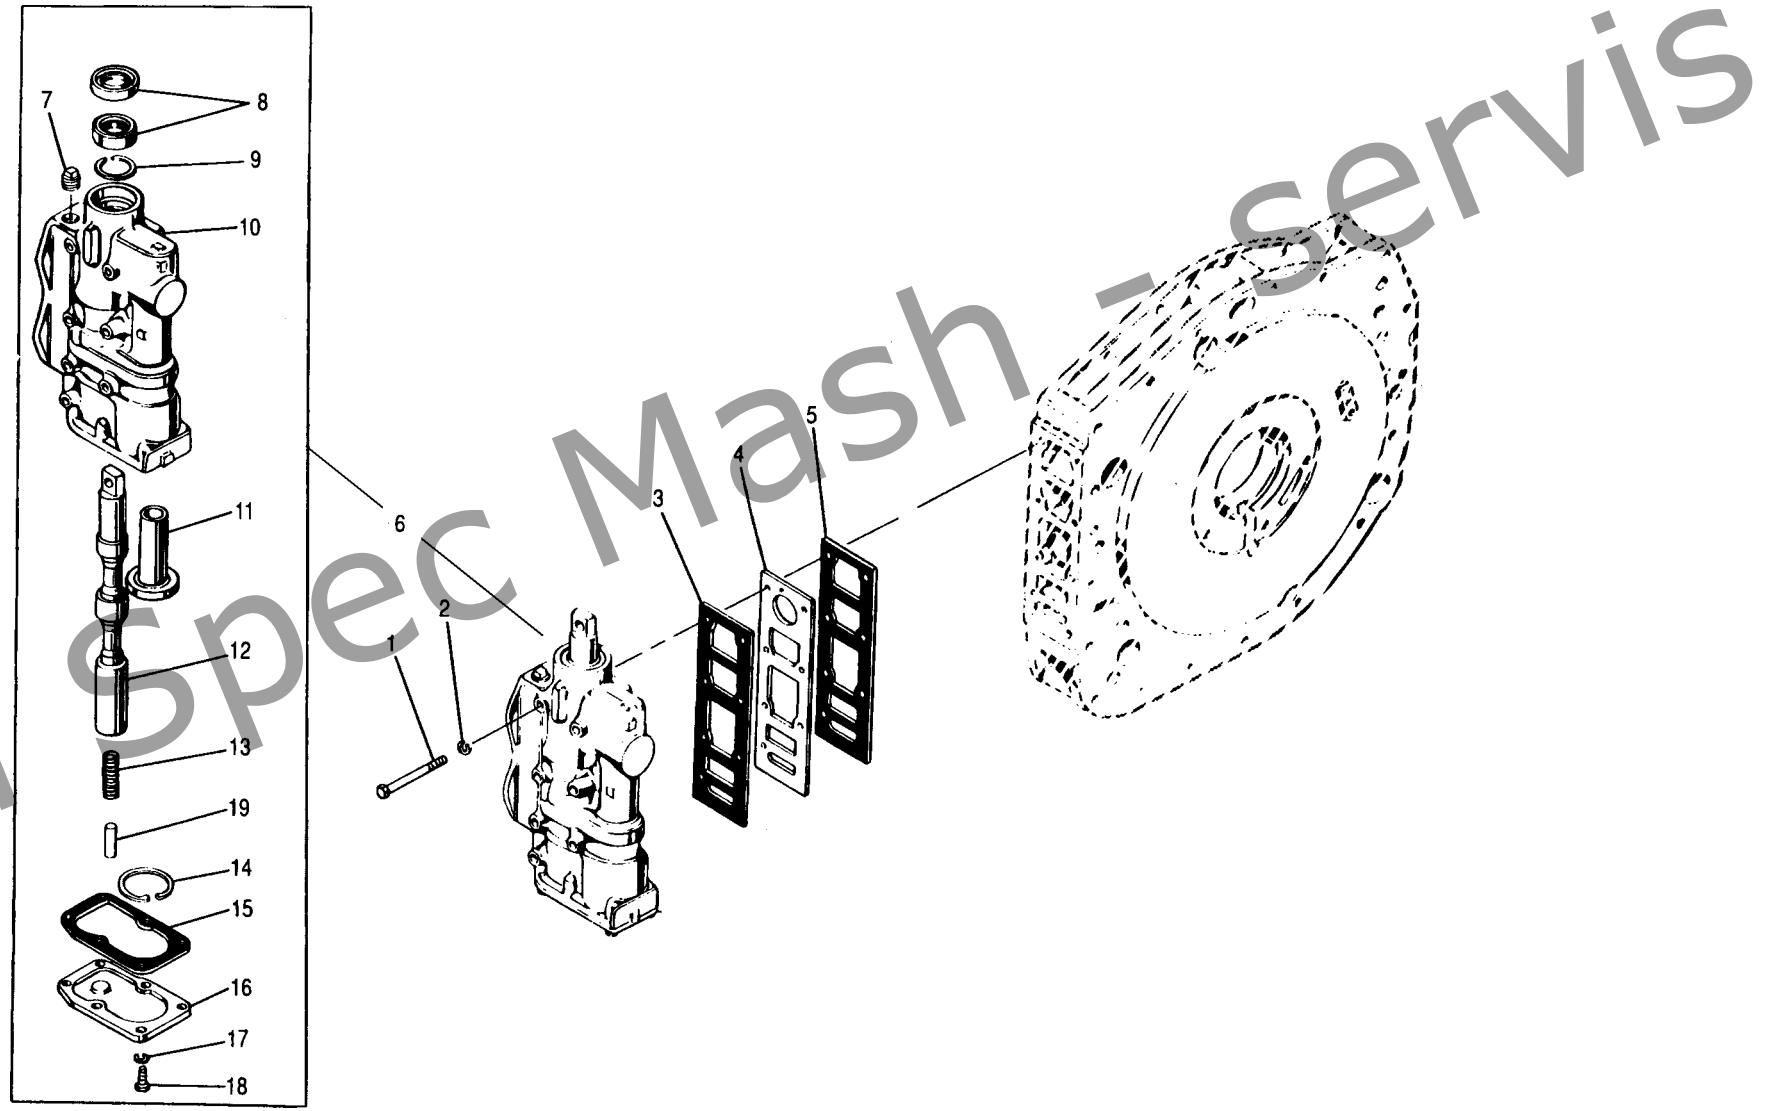

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0270-8391 RETARDER CONTROL VALVE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	007	00433114	BOLT		
	002	007	00103321	LOCKWASHER		
	003	001	06758381	GASKET		
	004	001	06880476	PLATE		
	005	001	06758381	GASKET		
	006	001	29525031	VALVE		
	007	001	29525048	.PLUG ASSY		
	008	001	06833409	.KIT-SEAL		
	009	001	06758523	.RING-SNAP		
	010	001	29525030	.BODY-RETARDER VALVE		
	011	001	06885031	.TUBE		
	012	001	23018483	.VALVE		
	013	001	06770860	.SPRING		
	014	001	09425158	.RING-SNAP		
	015	001	06758380	.GASKET		
	016	001	06758375	.COVER		
	017	006	00103321	.LOCKWASHER		
	018	006	00179839	.BOLT		

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0280-8391 SPLITTER GEARING AND CLUTCHES
FROM SERIAL NO. T8391011

DRAWING NO. P10712A

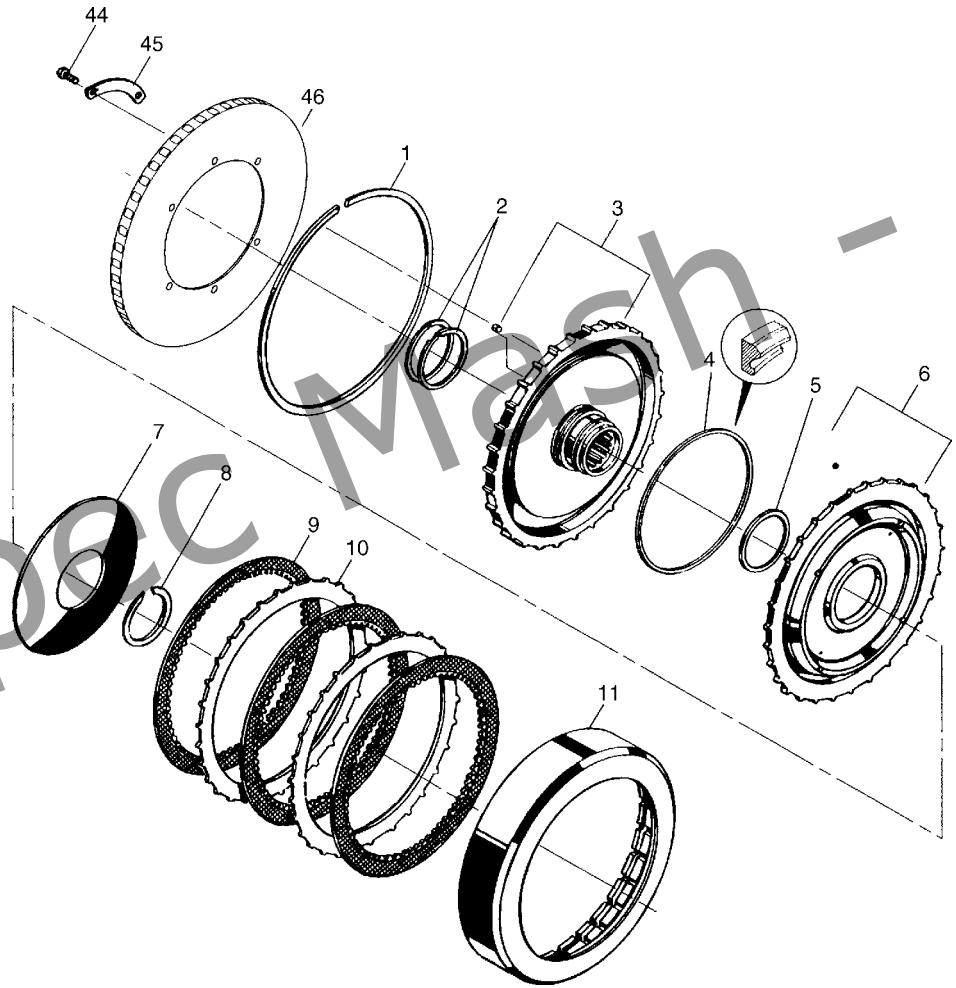


Bel Spec Mash - servis

https://truckmanualshub.com/

120-0280-8391 SPLITTER GEARING AND CLUTCHES
FROM SERIAL NO. T8391011

DRAWING NO. P10712B

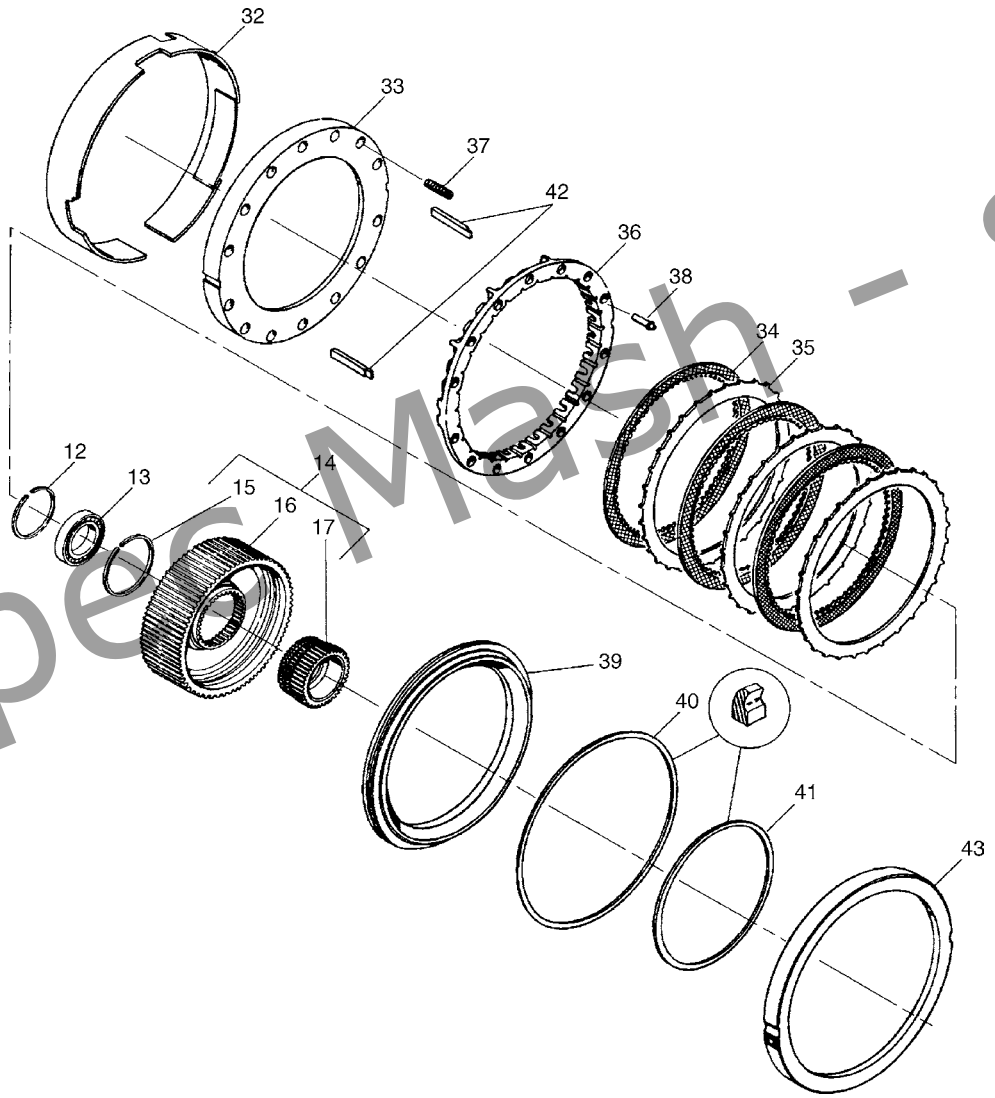


Bel Spec Mash - servis

https://truckmanualshub.com/

120-0280-8391 SPLITTER GEARING AND CLUTCHES
FROM SERIAL NO. T8391011

DRAWING NO. P10712C

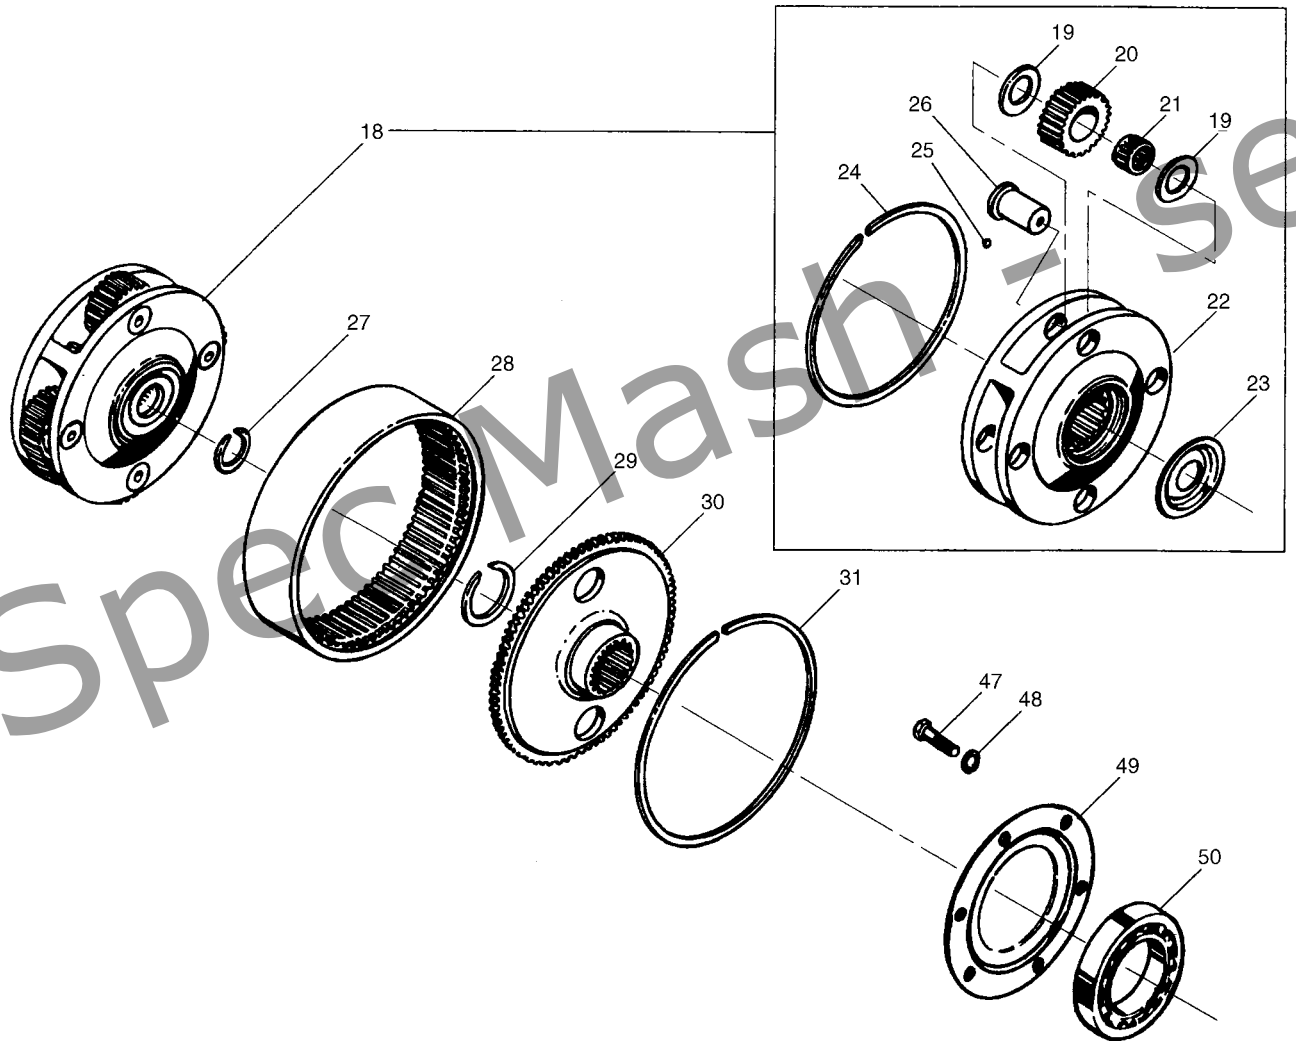

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0280-8391 SPLITTER GEARING AND CLUTCHES
FROM SERIAL NO. T8391011

NC REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001	23011150	RING-SNAP		
002	002	23019650	SEAL		
003	001	29533089	HUB		
004	001	06832481	KIT-SEAL		
005	001	06770623	SEAL		
006	001	06777908	PISTON-SPLITTER LOW		
007	001	06756042	SPRING-RETURN		
008	001	06756041	RING-SNAP		
009	003	23041616	PLATE-INTER SPLINED		
010	002	06776610	PLATE-REACTION		
011	001	06777814	DRUM		
012	001	08892840	RING-SNAP		
013	001	23048003	BEARING		
014	001	29513912	GEAR ASSY		
015	001	06769195	.RING-SNAP		
016	001	29511631	.HUB		
017	001	06772143	.GEAR		
018	001	06779801	CARRIER ASSY		
019	008	23015601	.WASHER		
020	001	06771316	.PINION-SET		
021	004	06884835	.BEARING		
022	001	06779802	.CARRIER		
023	001	06774607	.SHIELD-LUBE		
024	001	06750027	.RING-SNAP		
025	004	00453606	.BALL		
026	004	06839418	.SPINDLE		
027	001	06773402	RING-SNAP		
028	001	06884436	GEAR		
029	001	06750259	RING-SNAP		
030	001	06758367	HUB		
031	001	06773806	RING-SNAP		
032	001	29537419	SPACER		
033	001	06832868	PLATE		
034	004	23041616	PLATE-INTER SPLINED		
035	004	06776610	PLATE-REACTION		
036	001	06759340	ANCHOR		
037	014	06835742	SPRING		
038	014	23017739	GUIDE		
039	001	06831031	PISTON		
040	001	06832482	SEAL		

120-0280-8391 SPLITTER GEARING AND CLUTCHES
FROM SERIAL NO. T8391011


NC REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	001	06832483	SEAL		
042	002	06771690	KEY		
043	001	06770591	HOUSING		
044	006	23017810	BOLT		
045	003	06776626	PLATE		
046	001	29537449	WHEEL-TONE		
047	006	09414052	BOLT		
048	006	00115551	LOCKWASHER		
049	001	06758497	RETAINER		
050	001	23041458	BEARING		

PerSpec Mash - servis

https://truckmanualshub.com/

120-0290-8391 MAIN HOUSING GROUP
FROM SERIAL NO. T8391011

DRAWING NO. P10713

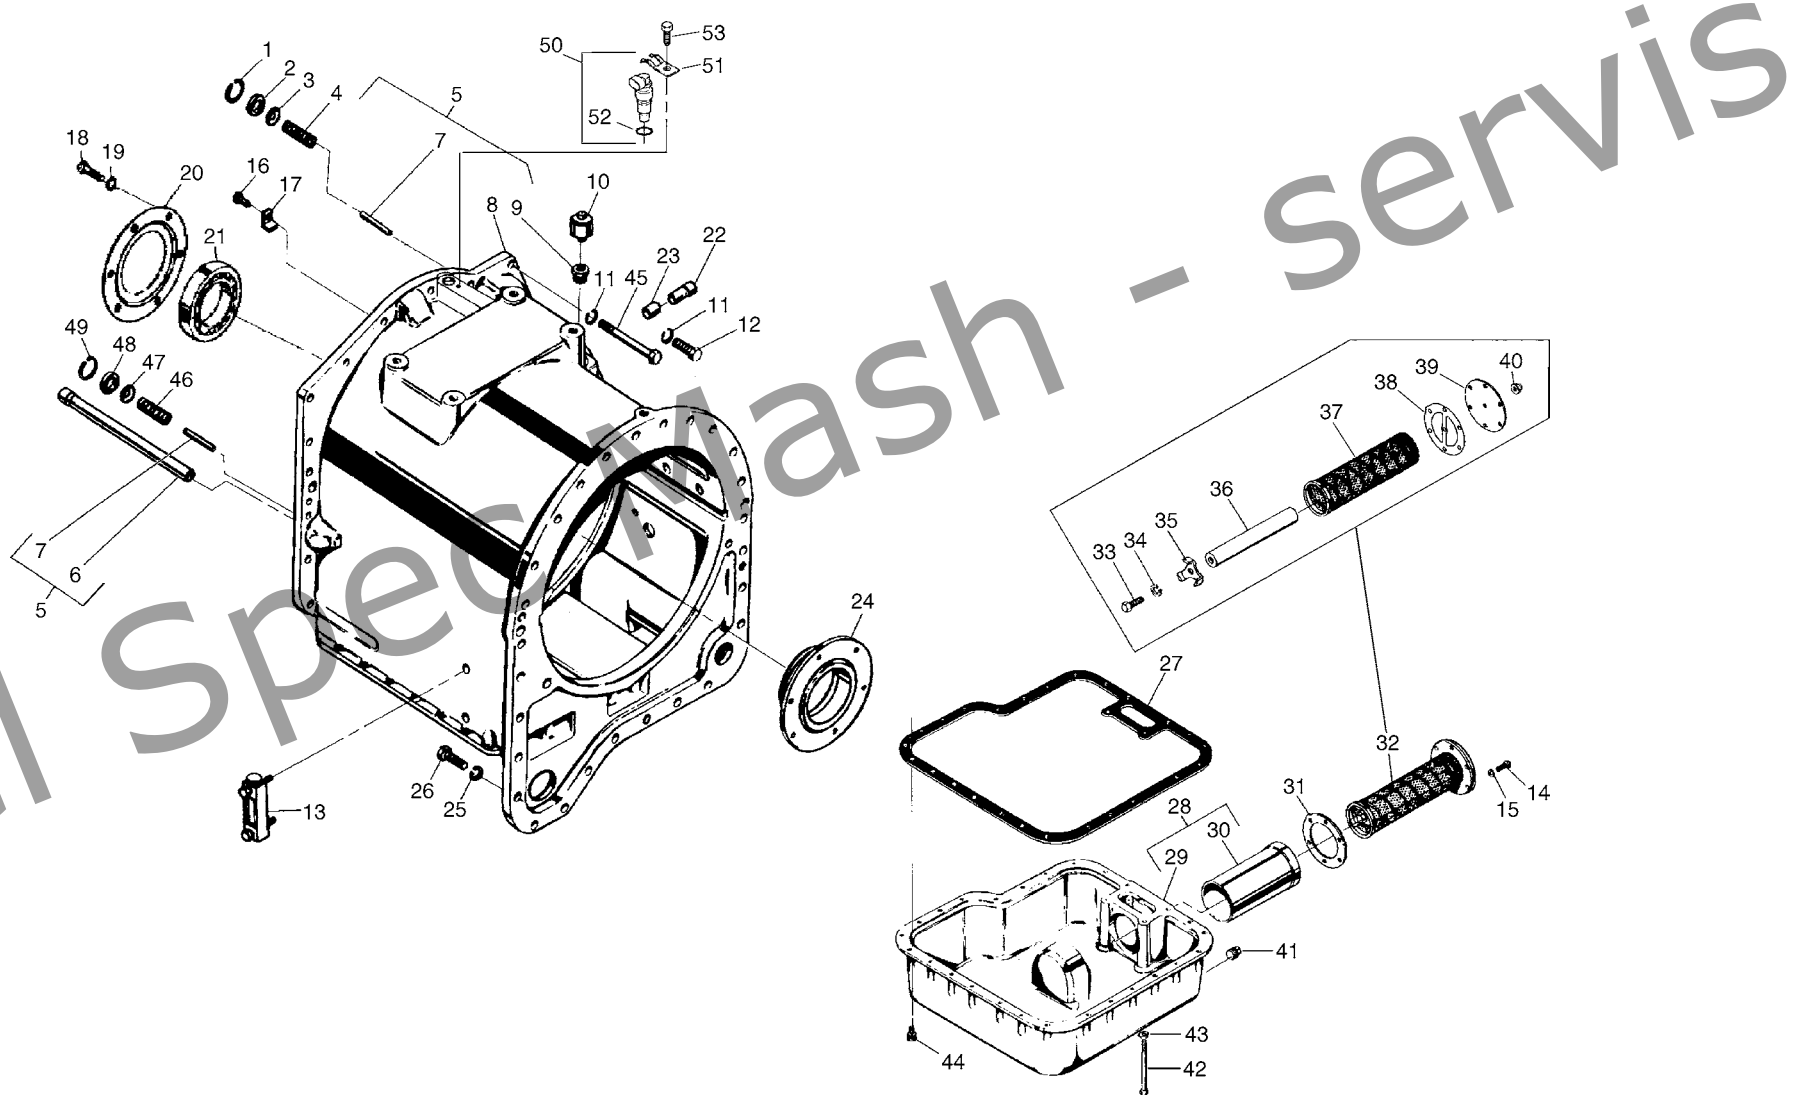

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0290-8391 MAIN HOUSING GROUP
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	02219907	RING-SNAP		
	002	001	06770571	SEAT		
	003	001	06758459	VALVE		
	004	001	06769344	SPRING		
	005	001	29537423	HOUSING ASSY		
	006	001	06758488	.TUBE		
	007	002	06758462	.PIN		
	008	001	29537424	.HOUSING-TRANS		
	009	001	00444335	.REDUCER		
	010	001	07964576	BREATHER		
	011	019	00103323	WASHER		
	012	007	00179887	BOLT		
	013	001	06839183	KIT-GAUGE OIL LEVEL		
	014	006	00179838	BOLT		
	015	006	00103321	LOCKWASHER		
	016	002	00179837	BOLT		
	017	002	06838686	RETAINER		
	018	006	09414052	BOLT		
	019	006	00115551	LOCKWASHER		
	020	001	06758497	RETAINER		
	021	001	23041458	BEARING		
	022	003	06759381	JUMPER-TUBE		
	023	003	06759379	HOSE-JUMPER		
	024	001	06758330	HUB-OIL TRANSFER		
	025	027	00103325	LOCKWASHER		
	026	027	00271560	BOLT		
	027	001	06758437	GASKET		
	028	001	29525029	PAN ASSY		
	029	001	29525028	.PAN		
	030	001	06758473	.SHIELD		
	031	001	06882702	GASKET		
	032	001	29520043	STRAINER/MAGNET ASSY		
	033	001	00186630	.BOLT HEX 0.25-20 UNF		
	034	001	00103319	.LOCKWASHER		
	035	001	23011194	.BRACKET		
	036	001	23011195	.MAGNET		
	037	001	29520044	.STRAINER ASSY		
	038	001	29520046	.GASKET		
	039	001	29520047	.COVER		
	040	001	23014107	.NUT		

120-0290-8391 MAIN HOUSING GROUP
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	29525049	PLUG ASSY		
	042	004	09418964	BOLT		
	043	004	00103321	LOCKWASHER		
	044	024	23016149	SCREW		
	045	012	00187152	BOLT		
	046	001	06756430	SPRING		
	047	001	06758459	VALVE		
	048	001	06770571	SEAT		
	049	001	02219907	RING-SNAP		
	050	001	29509637	SPEED SENSOR ASSY		
	051	001	29503843	.RETAINER		
	052	001	29503383	.O RING		
	053	001	00179812	BOLT		

Bel-Spec Mash. servis

https://truckmanualshub.com/

120-0300-8391 HIGH RANGE GEARING & CLUTCHES
FROM SERIAL NO. T8391011

DRAWING NO. P6680

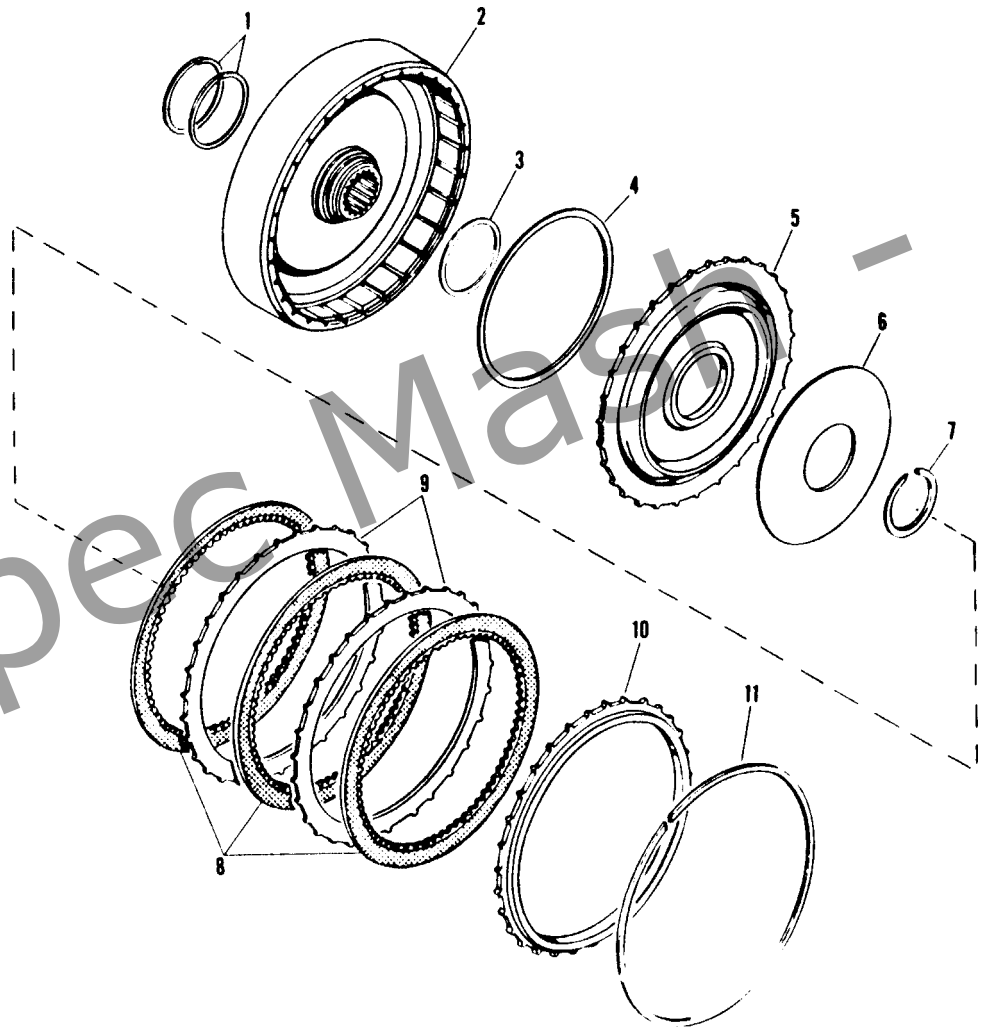

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0300-8391 HIGH RANGE GEARING & CLUTCHES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	23019650	SEAL		
	002	001	06832035	DRUM-HIGH RANGE		
	003	001	06770623	SEAL		
	004	001	06832481	KIT-SEAL		
	005	001	06775840	PISTON		
	006	001	06756042	SPRING-RETURN		
	007	001	06756041	RING-SNAP		
	008	003	23041616	PLATE-INTER SPLINED		
	009	002	06769326	PLATE-EXTER SPLINED		
	010	001	06770848	PLATE-BACKING		
	011	001	06755100	RING-SNAP		

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0310-8391 INTER RANGE GEARING & CLUTCHES
FROM SERIAL NO. T8391011

DRAWING NO. P8142

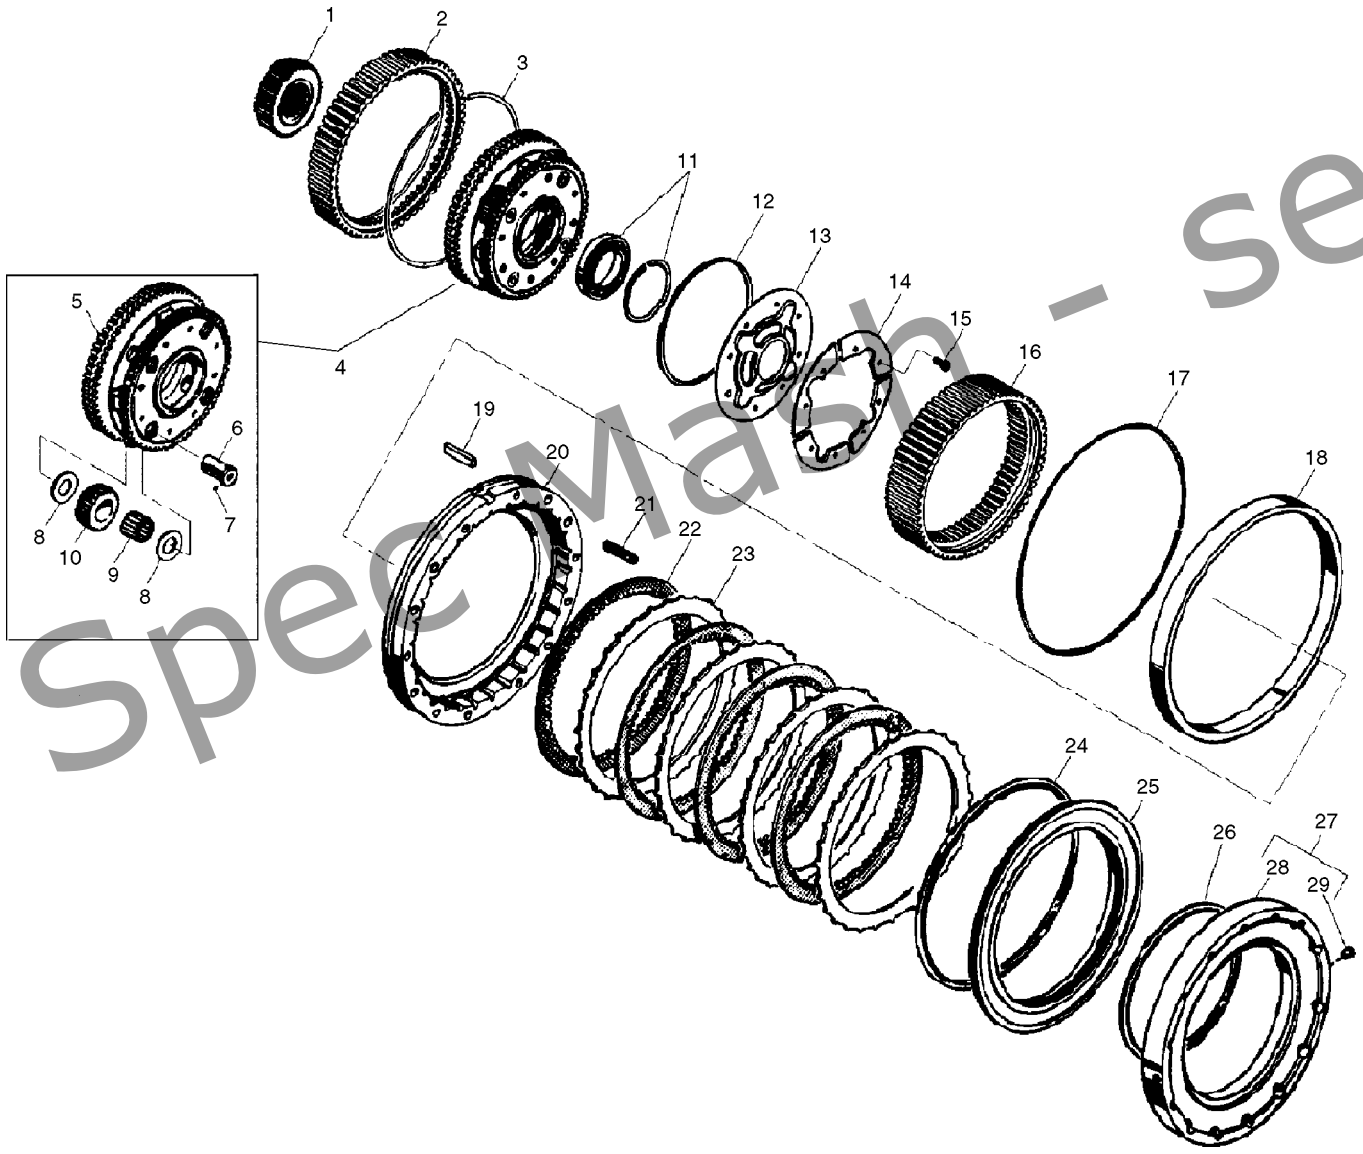

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0310-8391 INTER RANGE GEARING & CLUTCHES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	06758397	GEAR-INTER RANGE SUN		
	002	001	29512834	CLUTCH-HUB H/RANGE		
	003	001	29512835	RING		
	004	001	29512836	CARRIER ASSY		
	005	001	29512265	.CARRIER		
	006	004	06759377	.SPINDLE		
	007	004	00453606	.BALL		
	008	008	23015601	.WASHER		
	009	004	06884835	.BEARING		
	010	001	06771316	.PINION-SET		
	011	001	23041530	BEARING		
	012	001	06769289	SEAL		
	013	001	06779576	RING-OIL COLLECTOR		
	014	004	23016715	RETAINER		
	015	008	23016615	BOLT		
	016	001	29512264	GEAR		
	017	001	06756369	RING-COMPRESSION		
	018	001	06833812	SPACER		
	019	002	06768396	KEY		
	020	001	06775854	RING		
	021	014	06838590	SPRING		
	022	004	23041616	PLATE-INTER SPLINED		
	023	004	06769326	PLATE-EXTER SPLINED		
	024	001	06832484	SEAL		
	025	001	06831033	PISTON		
	026	001	06832485	SEAL		
	027	001	06772860	HOUSING ASSY		
	028	001	06772859	.HOUSING		
	029	002	06768419	.PIN		

BelSpec Mash - servis

https://truckmanualshub.com/

120-0320-8391 LOW RANGE GEARING & CLUTCHES
FROM SERIAL NO. T8391011

DRAWING NO. P6728

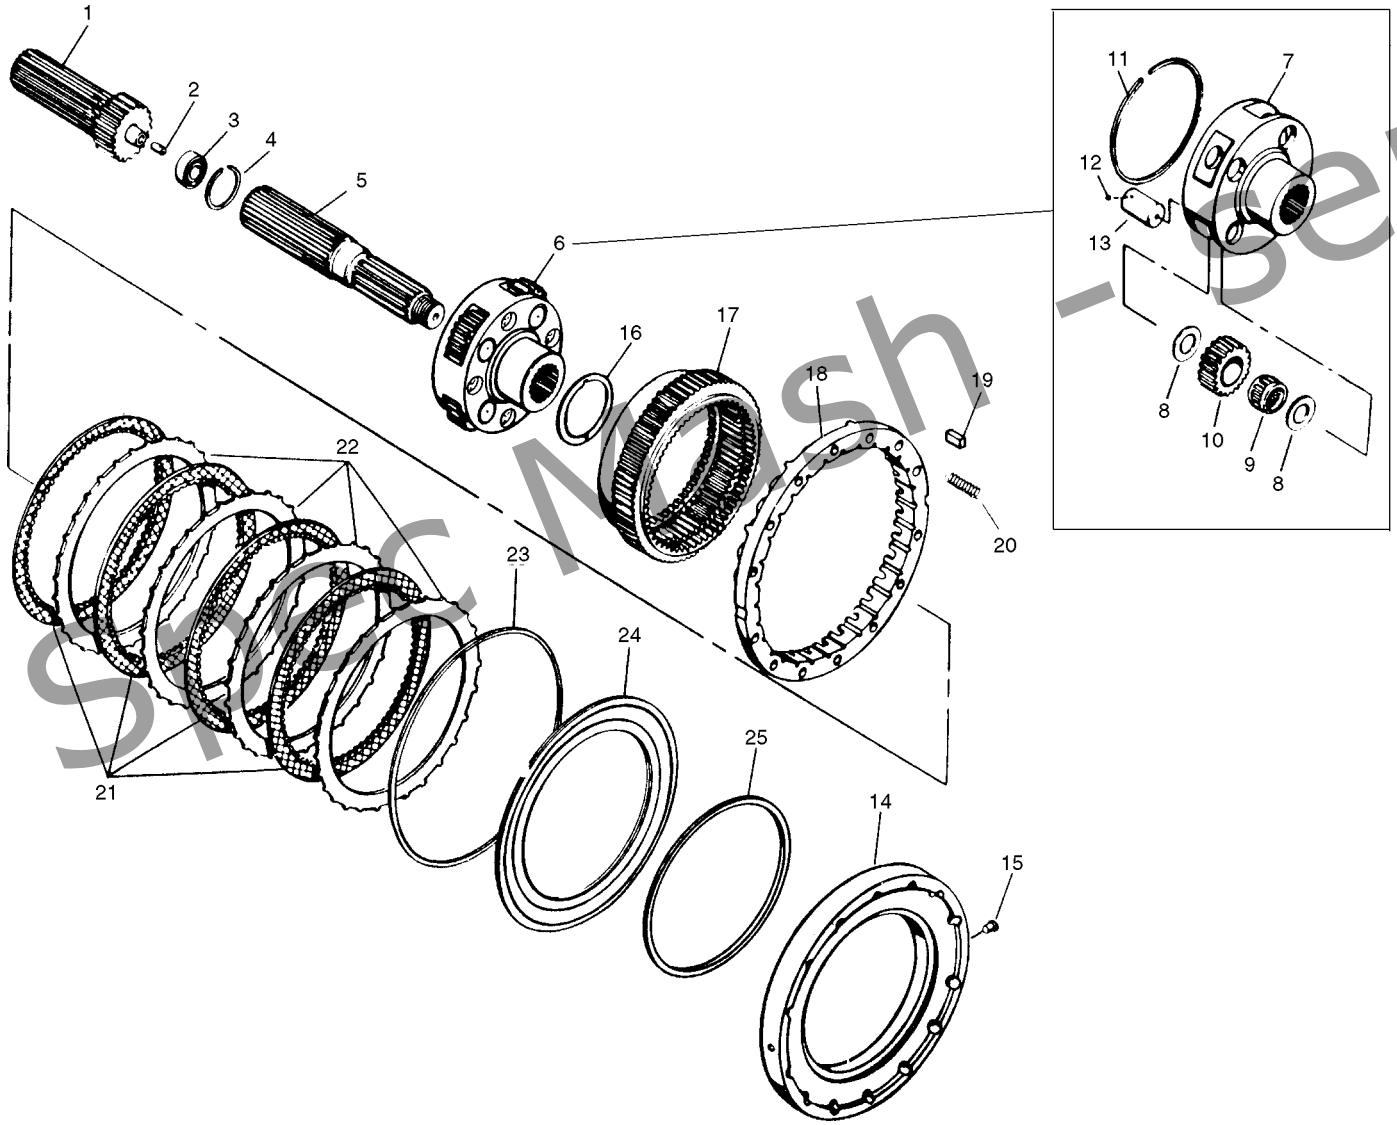

Bel Spec Nash - servis

https://truckmanualshub.com/

120-0320-8391 LOW RANGE GEARING & CLUTCHES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	06831151	SHAFT-SPLITTER		
	002	001	06756030	.TUBE		
	003	001	23047981	BEARING		
	004	001	06754835	RING-SNAP		
	005	001	29536124	SHAFT-OUTPUT		
	006	001	06831150	CARRIER ASSY		
	007	001	06775706	.CARRIER		
	008	010	23041007	.WASHER		
	009	005	06830333	.BEARING		
	010	001	06832007	.PINION SET		
	011	001	06758541	.RING-SNAP		
	012	005	00453606	.BALL		
	013	005	06758540	.SPINDLE		
	014	001	06831155	HOUSING ASSY		
	015	002	06768419	.PIN		
	016	001	06758505	WASHER		
	017	001	06831120	GEAR-LOW		
	018	001	06759414	ANCHOR		
	019	002	06768478	KEY		
	020	014	06838589	SPRING		
	021	005	23041616	PLATE-INTER SPLINED		
	022	005	06776610	PLATE-REACTION		
	023	001	06832484	SEAL		
	024	001	06831034	PISTON		
	025	001	06832486	SEAL		

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0330-8391 REV RANGE GEARING & CLUTCHES
FROM SERIAL NO. T8391011

DRAWING NO. P9709

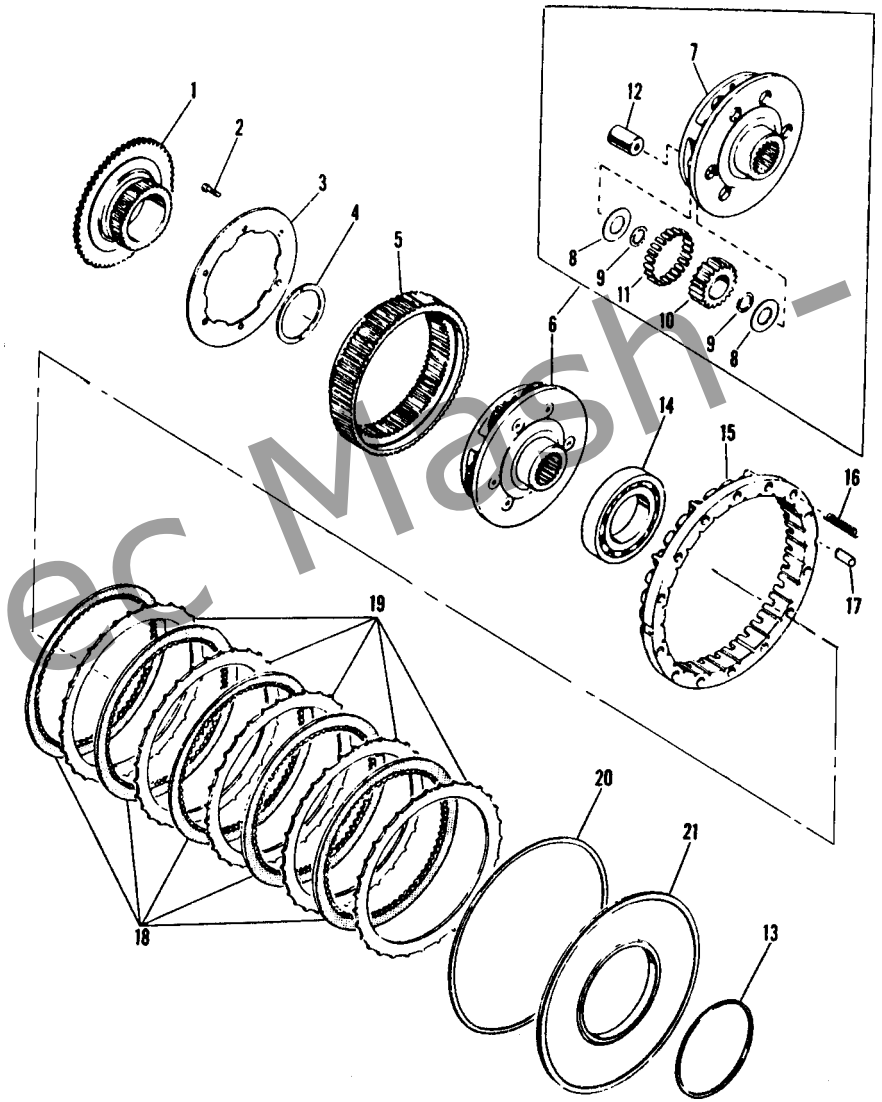

Bel Spec Mash- servis

https://truckmanualshub.com/

120-0330-8391 REV RANGE GEARING & CLUTCHES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	06775716	GEAR-SUN REVERSE		
	002	006	23016615	BOLT		
	003	001	06775712	RING		
	004	001	06775699	WASHER		
	005	001	06831119	GEAR-REVERSE		
	006	001	06775718	CARRIER ASSY		
	007	001	06775717	.CARRIER		
	008	012	06768499	.WASHER		
	009	012	06769261	.SPACER		
	010	001	06776022	.PINION SET		
	011	144	06756275	.ROLLER		
	012	006	06775714	.SPINDLE		
	013	001	06832487	SEAL		
	014	001	23041147	BEARING		
	015	001	06759423	ANCHOR		
	016	014	23017349	SPRING		
	017	002	06768396	KEY		
	018	005	23041616	PLATE-INTER SPLINED		
	019	005	06769326	PLATE-EXTER SPLINED		
	020	001	06832484	SEAL		
	021	001	06831032	PISTON		

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0340-8391 REAR COVER GROUP
FROM SERIAL NO. T8391011

DRAWING NO. P10714

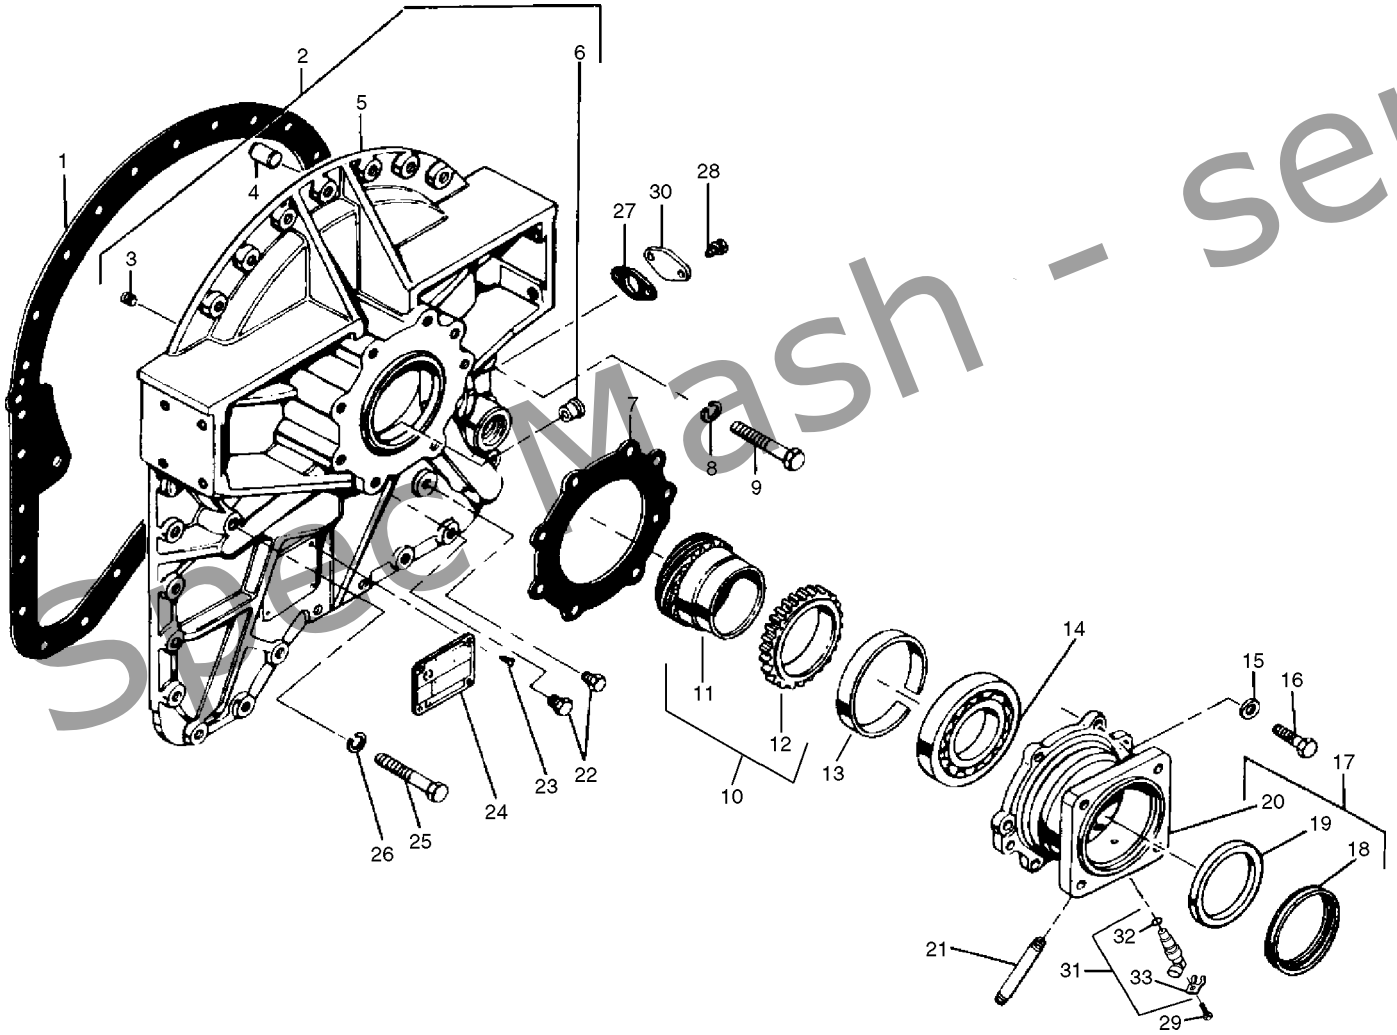

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0340-8391 REAR COVER GROUP
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	06772162	GASKET		
	002	001	29525020	HOUSING		
	003	001	23012031	.PLUG		
	004	002	00107393	.PIN		
	005	001	29525019	.COVER		
	006	001	02222424	.BUSHING		
	007	001	06838043	GASKET		
	008	001	00103325	LOCKWASHER		
	009	001	00271569	BOLT		
	010	001	06838044	GEAR ASSY		
	011	001	06838040	.GEAR		
	012	001	06838039	.GEAR P/UP		
	013	001	06838041	SPACER		
	014	001	23047997	BEARING		
	015	008	06768827	WASHER		
	016	008	00223435	BOLT		
	017	001	29536893	RETAINER ASSY		
	018	001	06757563	.BAFFLE-DUST SHIELD		
	019	001	06773311	.SEAL		
	020	001	29536396	.RETAINER		
	021	001	00119247	NIPPLE		
	022	002	29500034	PLUG ASSY		
	023	004	00145372	SCREW-DRIVE		
	024	001	23049131	PLATE-NAME		
	025	001	00271569	BOLT		
	026	001	00103325	LOCKWASHER		
	027	001	00552868	GASKET		
	028	002	23016147	SCREW		
	029	001	00179812	BOLT		
	030	001	06771300	COVER PLATE		
	031	001	29509637	SPEED SENSOR ASSY		
	032	001	29503843	.RETAINER		
	033	001	29503383	.O RING		

PerkSpec Mash - servis

https://truckmanualshub.com/

130-0010-8391 FRONT DRIVELINE
FROM SERIAL NO. T8391011

DRAWING NO. P9910

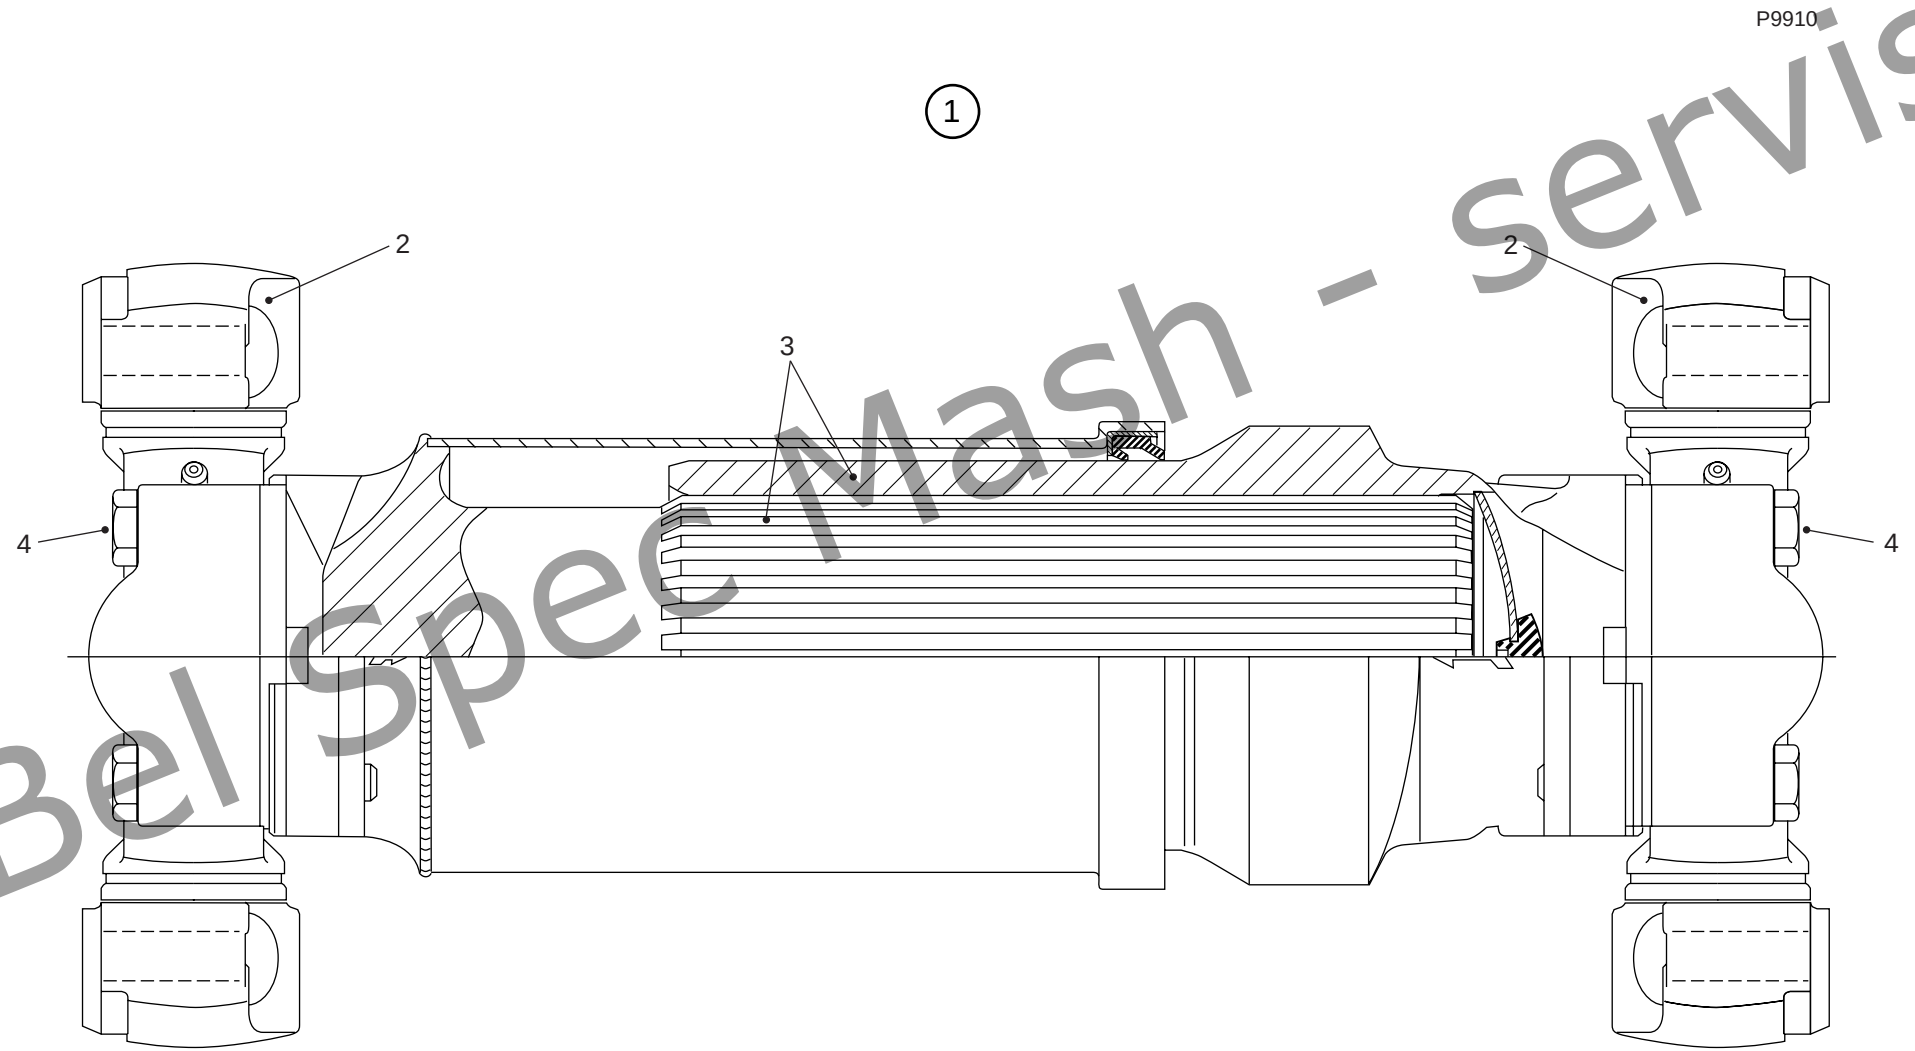

Bel Spec Mash - servis

https://truckmanualshub.com/

130-0010-8391 FRONT DRIVELINE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15300843	DRIVELINE		
	002	002	15272772	.U-JOINT ASSY		
	003	001	15272866	.TUBE ASSY		
	004	008	15272770	.SCREW		

Bel Spec Mash - servis

https://truckmanualshub.com/

130-0020-8391 REAR DRIVELINE
FROM SERIAL NO. T8391011

DRAWING NO. P9911

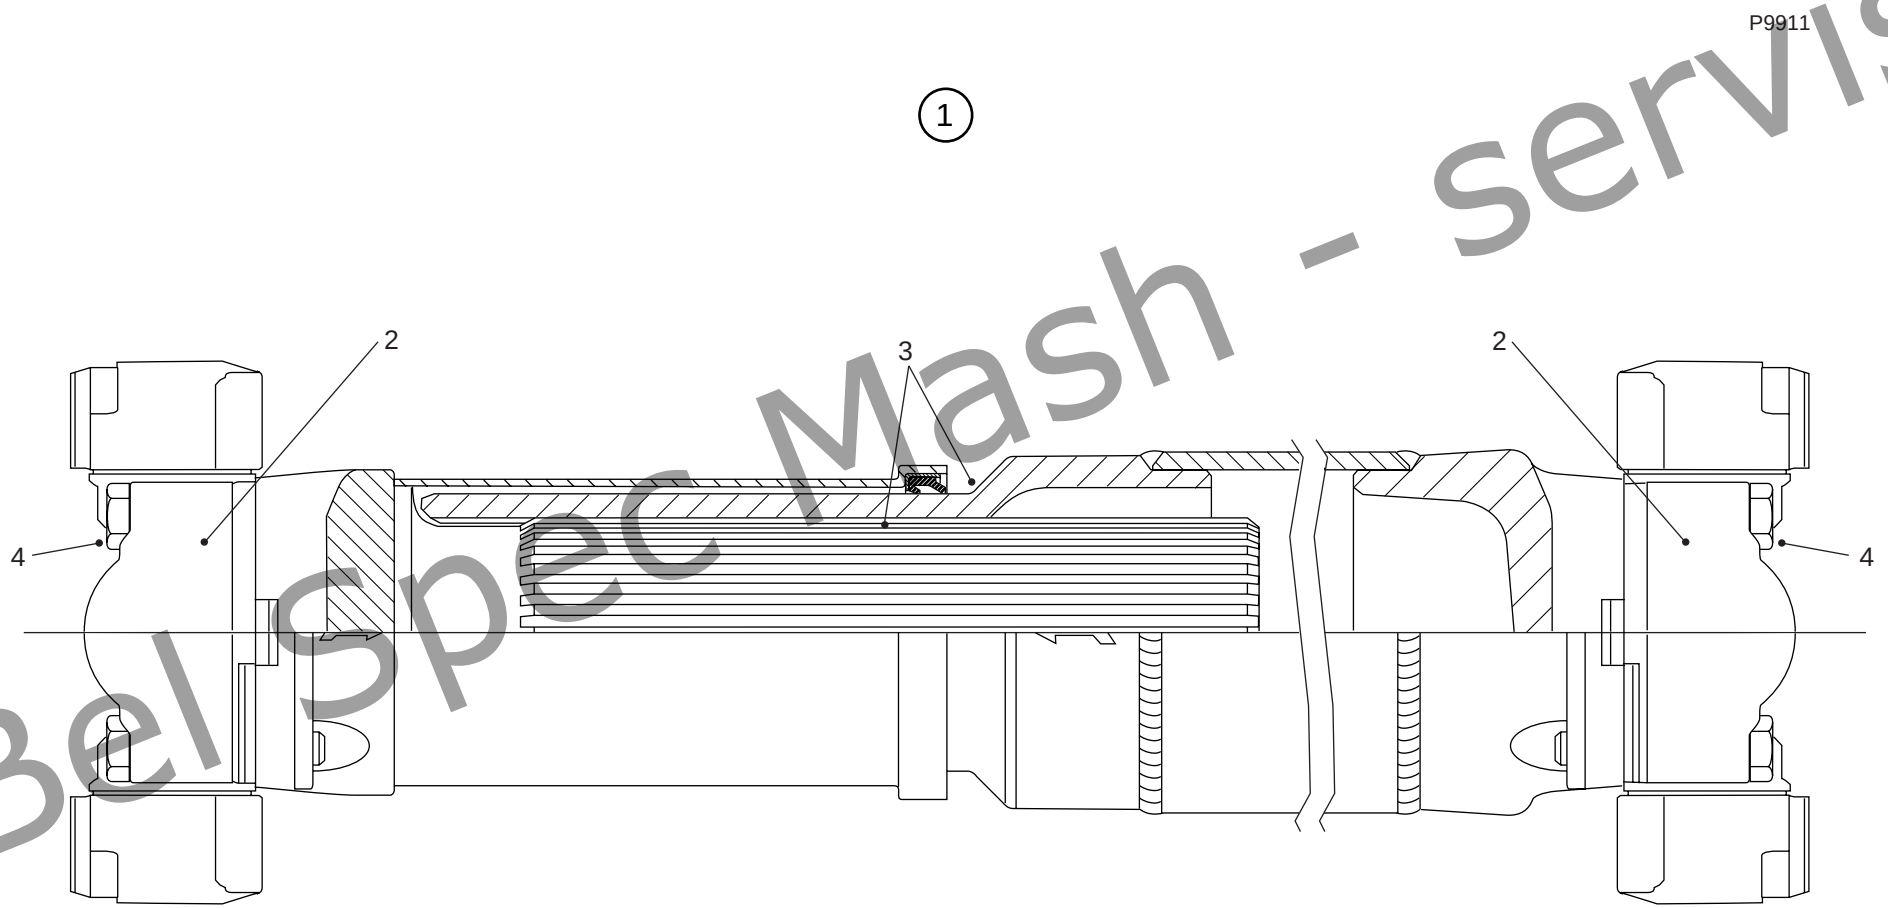

BelSpec Mash - servis

https://truckmanualshub.com/

130-0020-8391 REAR DRIVELINE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15300992	DRIVELINE		
	002	002	15272865	.U-JOINT ASSY		
	003	001	15272864	.TUBE ASSY		
	004	016	15272863	.SCREW		

Bel Spec Mash - servis

https://truckmanualshub.com/

140-0040-8391 WHEEL, RIM AND TYRE-FRONT
FROM SERIAL NO. T8391011

DRAWING NO. P9710

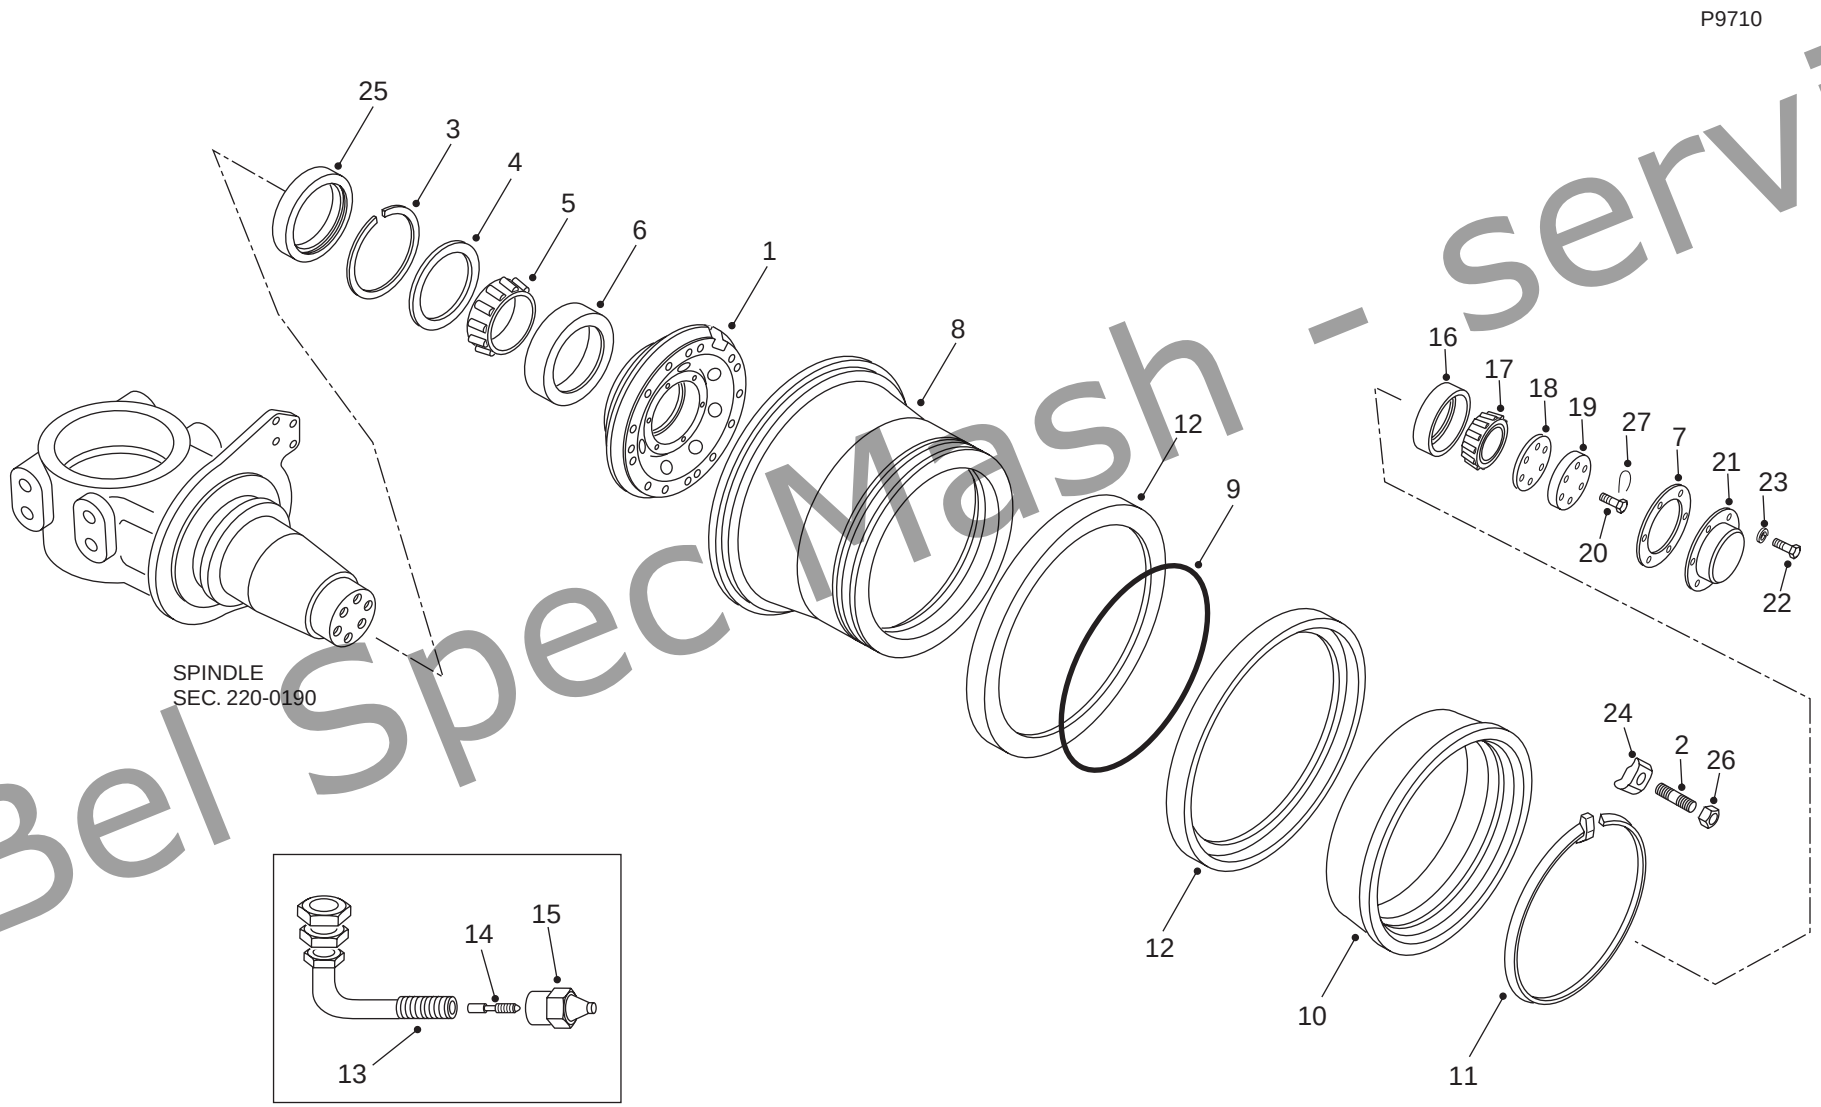

Bel Spec Mash - servis

https://truckmanualshub.com/

140-0040-8391 WHEEL, RIM AND TYRE-FRONT
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15246296	WHEEL HUB DRIVEN		
	002	032	09253468	STUD		
	003	002	09250686	RING		
	004	002	09016971	WASHER		
	005	001	09433277	CONE-INNER BEARING		
	006	001	09433278	CUP-INNER BEARING		
	007	002	09207478	GASKET		
	008	002	15022012	BASE		
	009	002	09003519	.O RING		
	010	002	15013508	BAND-BEAD SEAT		
	011	002	15013509	LOCKRING		
A	012	004	09239465	FLANGE		
	013	002	15231505	VALVE ASSY		
	014	002	09142286	.CORE		
	015	002	09116292	.CAP		
	016	002	09432641	CUP-OUTER BEARING		
	017	002	09432640	CONE-OUTER BEARING		
	018	002	09253681	SHIM .020		
	018	002	09253680	SHIM .007		
	018	ASR	09253679	SHIM .005		
	019	002	09253619	PLATE		
	020	012	09253620	BOLT		
	021	002	09115806	CAP-HUB		
	022	012	00179881	BOLT		
	023	012	00103329	LOCKWASHER		
	024	032	15023746	CLAMP		
	025	002	15001293	OIL SEAL		
	026	032	09433576	NUT NSS		
	027	ASR	09113457	LOCKWIRE		

NOTES:
A RIM PARTS FROM DIFFERENT MANUFACTURERS MUST NOT BE INTERMIXED

BelSpec Mash - servis

https://truckmanualshub.com/

160-0020-8391 DIFFERENTIAL-REAR
FROM SERIAL NO. T8391011

DRAWING NO. P9909



BelSpec Mash- servis

https://truckmanualshub.com/

160-0020-8391 DIFFERENTIAL-REAR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	003	00223432	BOLT		
	002	001	09245141	RETAINER		
	003	002	00139230	SCREW		
	004	001	15300937	YOKE-DIFF INPUT		
	005	001	09231786	.SLEEVE		
	006	001	09141877	O RING		
	007	001	15228166	DIFFERENTIAL ASSY		
	008	ASR	09113457	.LOCKWIRE		
	009	002	00222761	.SCREW		
	010	001	09245131	.RETAINER		
	011	014	00271562	.BOLT		
	012	ASR	09245139	.SHIM		
	012	ASR	09245138	.SHIM		
	012	ASR	09245137	.SHIM		
	013	001	15244310	.SEAL		
	014	001	09423967	.BEARING ASSY		
	015	001	09423968	..CONE		
	016	001	09423969	..CUP		
	017	001	15021458	.GEAR SET		
	018	001	09428204	.BEARING ASSY		
	019	001	09428205	..CONE		
	020	001	09428206	..CUP		
	021	ASR	09245133	.SHIM		
	021	002	09245134	.SHIM		
	021	ASR	09245135	.SHIM		
	022	001	09253506	.HOUSING ASSY		
	023	004	09192618	..DOWEL-BUSHING		
	024	004	09216692	..BOLT		
	025	004	09170517	.BOLT		
	026	002	09245142	.LOCK		
	027	002	09245234	.BEARING-ADJUSTER		
	028	002	09428202	.BEARING ASSY		
	029	002	09427249	..CUP-BEARING		
	030	002	09428203	..CONE-BEARING		
	031	001	15019476	.CASE		
	032	004	09114897	.SCREW		
	032	008	09430296	.BOLT		
	033	024	09419496	.NUT		
	034	024	00223775	.BOLT		
	035	002	09005581	.WASHER		

160-0020-8391 DIFFERENTIAL-REAR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	036	004	09219084	.PIN-DOWEL		
	037	002	09272352	.GEAR		
	038	001	09272346	.SPIDER		
	039	004	09272386	.PINION		
	040	008	09430296	.BOLT		
	041	004	00137393	.BEARING		


Perf Spec Mash - servis

https://truckmanualshub.com/

160-0030-8391 AXLE GROUP-REAR

FROM SERIAL NO. T8391011

DRAWING NO. P9712

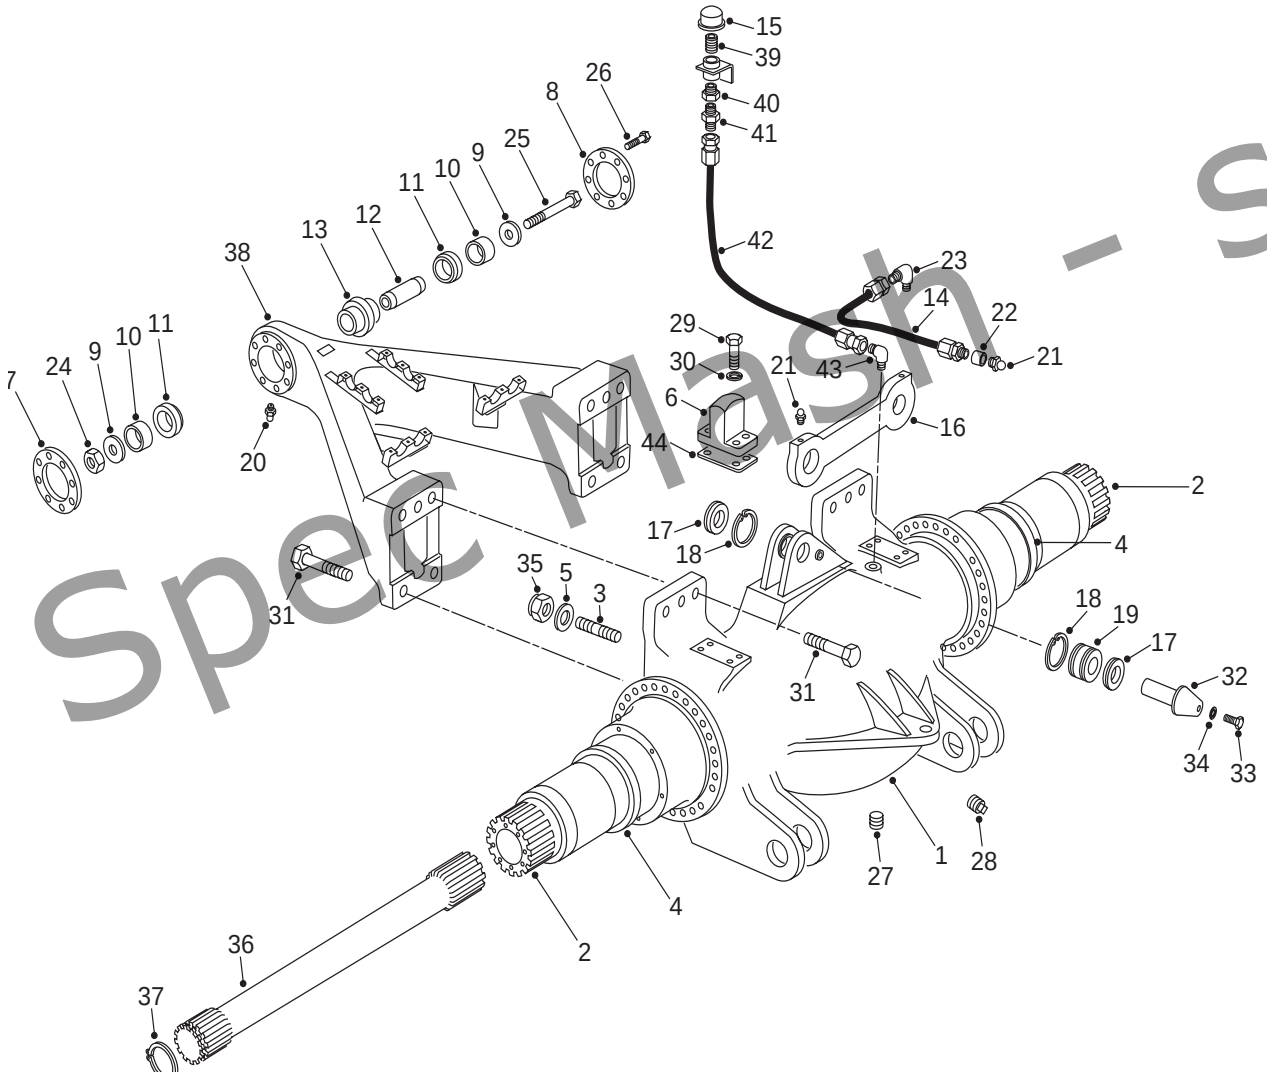

Bel Spec Mash - servis

https://truckmanualshub.com/

160-0030-8391 AXLE GROUP-REAR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15303659	BANJO & SPINDLE ASSY		
	002	002	15303660	.SPINDLE		
	003	022	15303353	.STUD		
	004	002	15023773	RING-BEARING		
	005	022	09250715	WASHER-HARDENED		
	006	002	09256947	STOP-OSCILLATION		
	007	001	09252271	RETAINER		
	008	001	09252272	RETAINER		
	009	002	09244595	WASHER		
	010	002	09244596	CUP-SPLIT		
A	011	002	09244594	SPACER		
	012	001	09244597	PIN		
	013	001	09240460	BEARING		
	014	001	09121127	HOSE ASSY		
	015	001	15246949	BREATHER		
	016	001	09062518	LINK		
	017	002	09015245	SPACER		
	018	004	09425517	RING-SNAP		
	019	002	09167506	BEARING-SPHERICAL		
	020	001	09411017	FITTING-GREASE		
	021	002	09411019	NIPPLE-GREASE		
	022	001	00444345	COUPLING-STRAIGHT		
	023	001	00118753	ELBOW		
	024	001	09355771	NUT		
	025	001	09153231	BOLT		
	026	008	00223446	BOLT		
	027	001	09117927	PLUG-MAGNETIC		
	028	001	00444716	PLUG		
	029	008	00223458	BOLT		
	030	008	09250715	WASHER-HARDENED		
	031	010	09018241	BOLT		
	032	002	09015247	PIN		
	033	002	00454989	BOLT		
	034	002	09267949	WASHER-HARDENED		
	035	022	09419493	LOCKNUT		
	036	002	15247329	SHAFT-AXLE		
	037	002	09413420	RING-SNAP		
	038	001	15254803	A-FRAME ASSY		
	039	001	09136639	NIPPLE		
	040	001	00144033	BUSHING		

160-0030-8391 AXLE GROUP-REAR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	00116436	CONNECTOR		
	042	001	15249531	HOSE ASSY		
	043	001	08040335	ELBOW		
	044	002	15247466	SPACER-OSCILLATION		


A NOTE : UNIT SERIAL NO'S T8391021 THROUGH T8391028
USE 2 OFF 15315765 STEPPED WASHERS

PerSpec Mash - servis

https://truckmanualshub.com/

160-0040-8391 PLANETARY GEARING-REAR
FROM SERIAL NO. T8391011

DRAWING NO. P10902

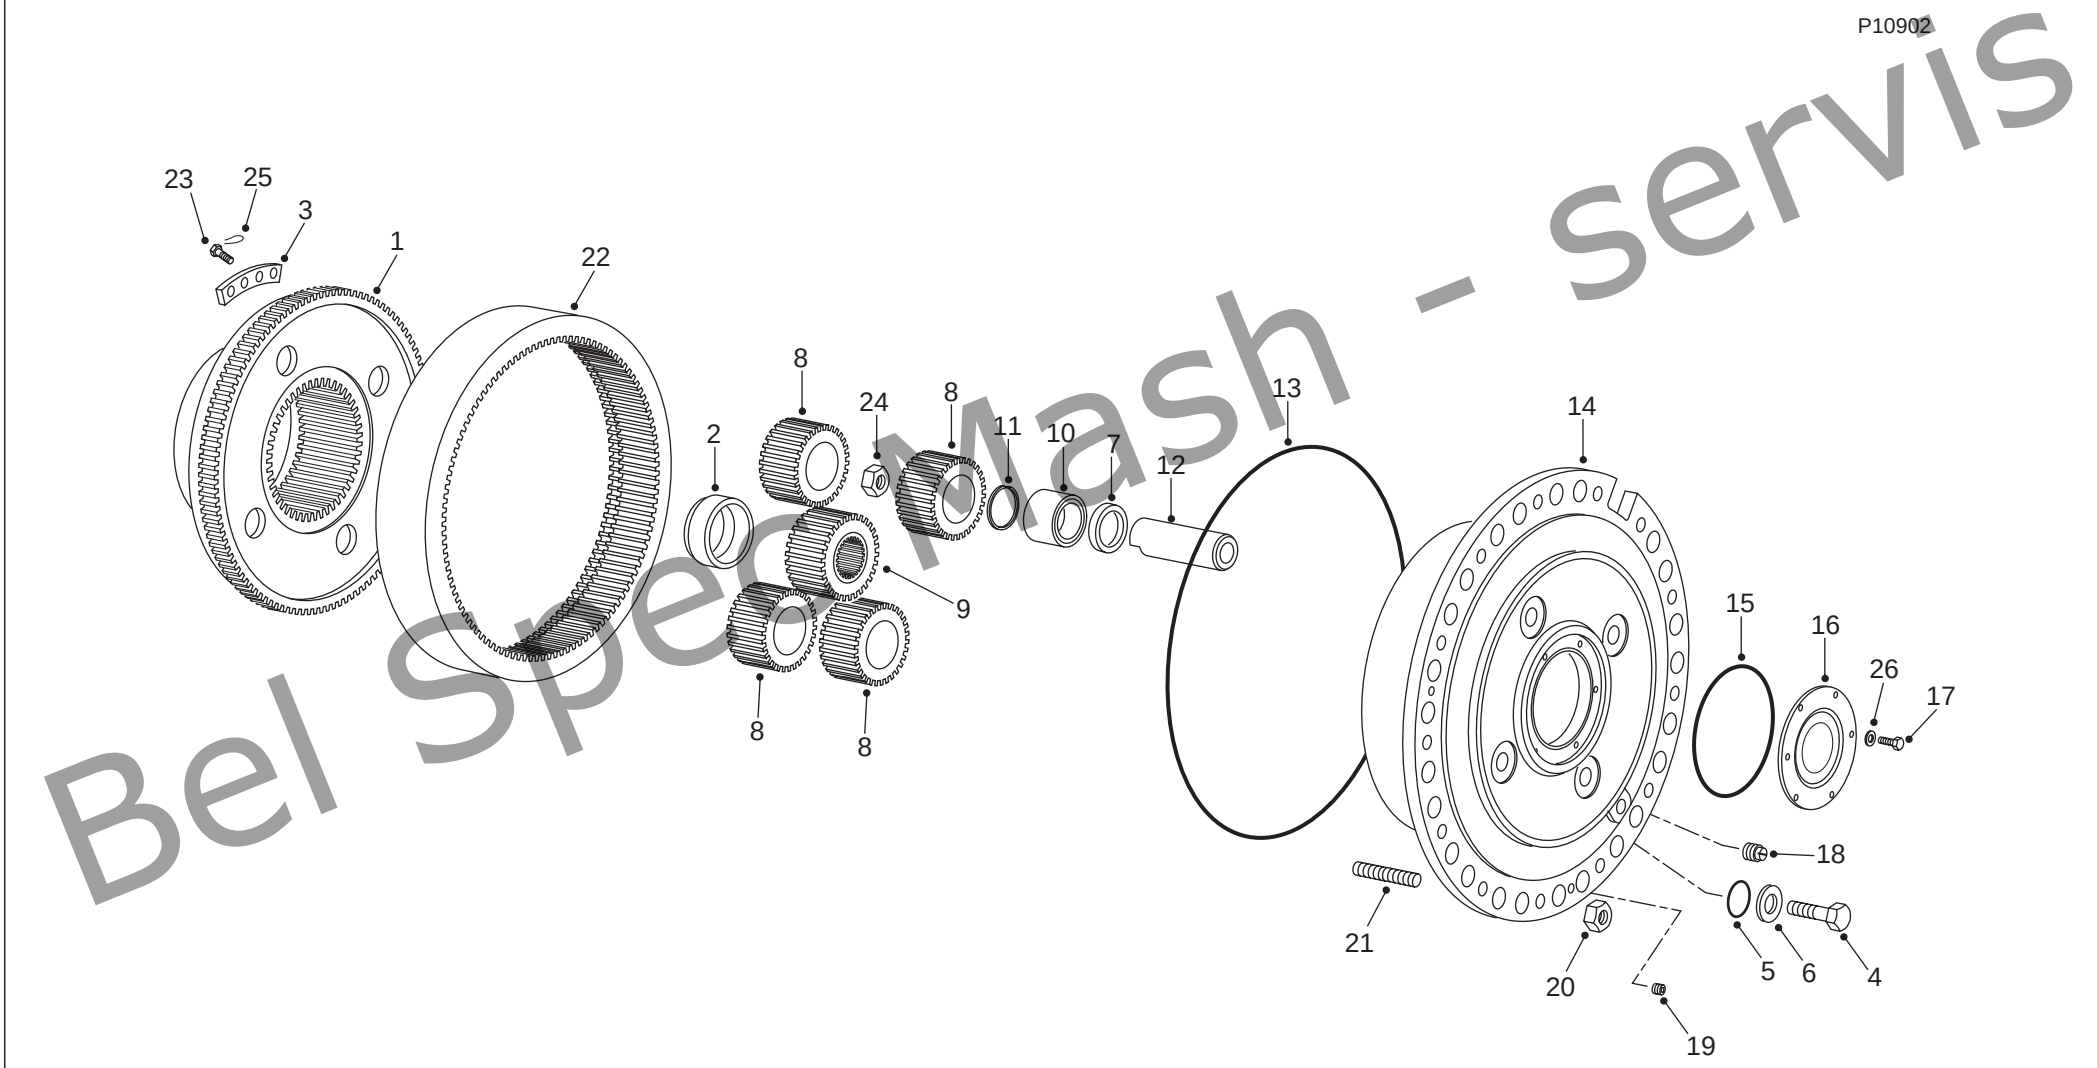

Bel SpecMash - servis

https://truckmanualshub.com/

160-0040-8391 PLANETARY GEARING-REAR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15007337	GEAR		
	002	002	15247747	RING		
	003	012	15006049	PLATE-RETAINER		
	004	008	09064575	BOLT		
	005	008	09410967	O RING		
	006	004	09272898	WASHER		
	007	008	09064713	SPACER		
	008	008	09259203	PINION		
	009	002	09243839	PINION-SUN GEAR		
	010	008	09433581	BEARING		
	011	008	09252957	RING-SNAP		
	012	008	09064589	PIN-PLANETARY		
	013	ASR	09125576	O-RING-BULK		
	014	002	15311603	PLANETARY CARRIER		
	015	002	09120034	O RING		
	016	002	15311604	COVER THRUST		
	017	008	00179839	BOLT		
	018	002	09008525	PLUG-MAGNETIC		
	019	006	00139230	SCREW		
	020	026	09056740	NUT		
	021	026	09013007	STUD		
	022	002	15005352	RING-GEAR		
	023	048	09122119	BOLT		
	024	008	00274189	LOCKNUT		
A	025	ASR	09113457	LOCKWIRE		
	026	012	15311628	WASHER-COPPER		

NOTES:
A USE 18 GAUGE SOFT ANNEALED WIRE OR EQUIVILANT


Bel Spec Mash - servis

https://truckmanualshub.com/

160-0050-8391 WHEEL, RIM AND TYRE-REAR
FROM SERIAL NO. T8391011

DRAWING NO. P7185

P7185

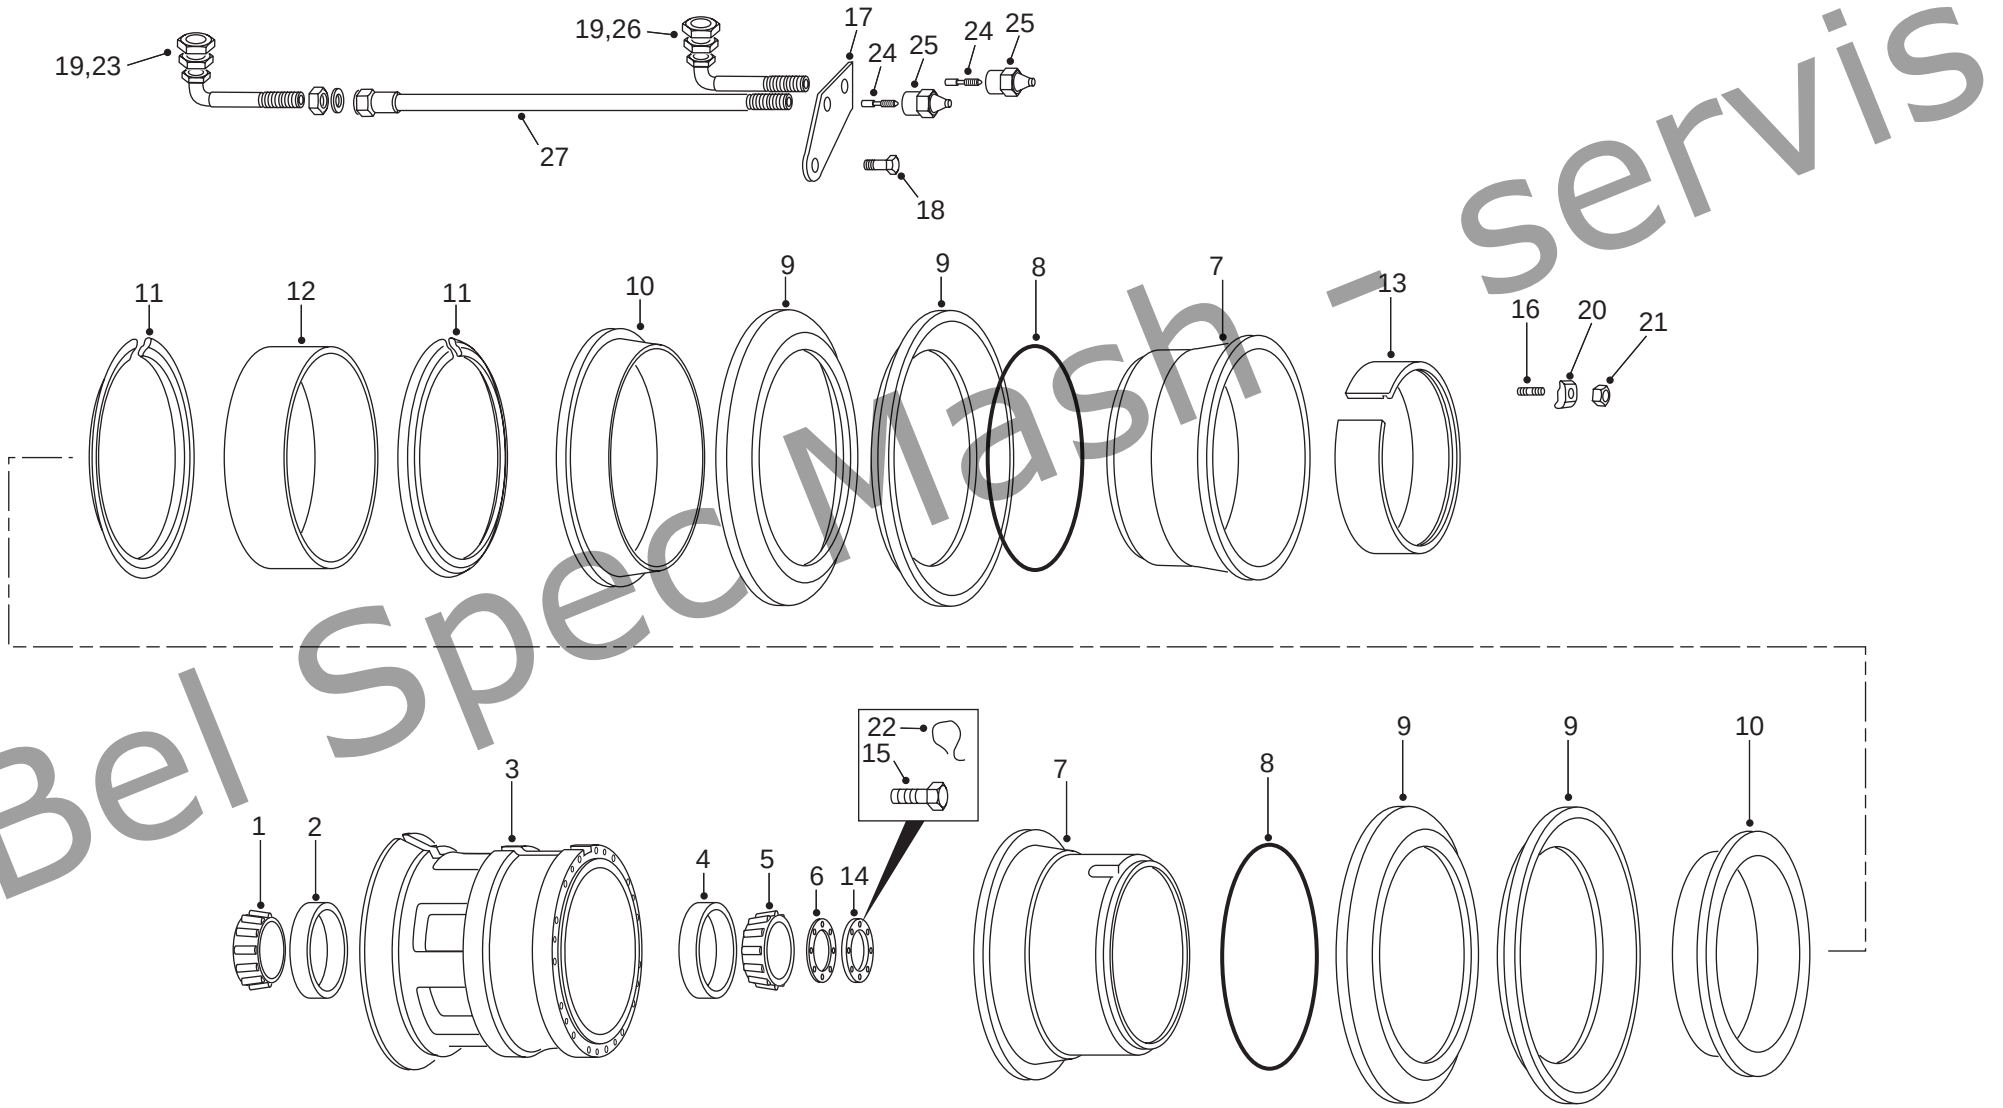

Bel Spec Mash - servis

https://truckmanualshub.com/

160-0050-8391 WHEEL, RIM AND TYRE-REAR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	09418488	CONE-BEARING		
	002	002	00456513	CUP-BEARING		
	003	002	15246293	WHEEL HUB DRIVE		
	004	002	15246401	CUP-BEARING		
	005	002	15246400	BEARING		
	006	ASR	15006041	SHIM PACK		
A	007	004	15022012	BASE		
	008	002	09003519	.O RING		
A	009	008	09239465	FLANGE		
A	010	004	15013508	BAND-BEAD SEAT		
A	011	004	15013509	LOCKRING		
	012	002	09074604	SPACER-BAND		
	013	002	09254226	WEDGE-BAND		
	014	002	15006040	PLATE		
	015	016	15008253	BOLT		
	016	036	09253468	STUD		
	017	002	15233471	BAR		
	018	002	00454988	BOLT		
	019	004	09074815	SPUD		
	020	036	15023746	CLAMP		
	021	036	09433576	NUT NSS		
	022	ASR	09113457	LOCKWIRE		
	023	002	15232303	STEM-VALVE		
	024	002	09142286	.CORE		
	025	002	09116292	.CAP		
	026	002	15230598	STEM-VALVE		
	027	002	15231534	EXTENSION-VALVE		


NOTES:
A RIM PARTS FROM DIFFERENT MANUFACTURERS MUST NOT BE INTERMIXED

BelSpec Mash - servis

https://truckmanualshub.com/

165-0020-8391 BRAKE PARTS-FRONT WHEEL-RIGIDS
FROM SERIAL NO. T8391011

DRAWING NO. P9713

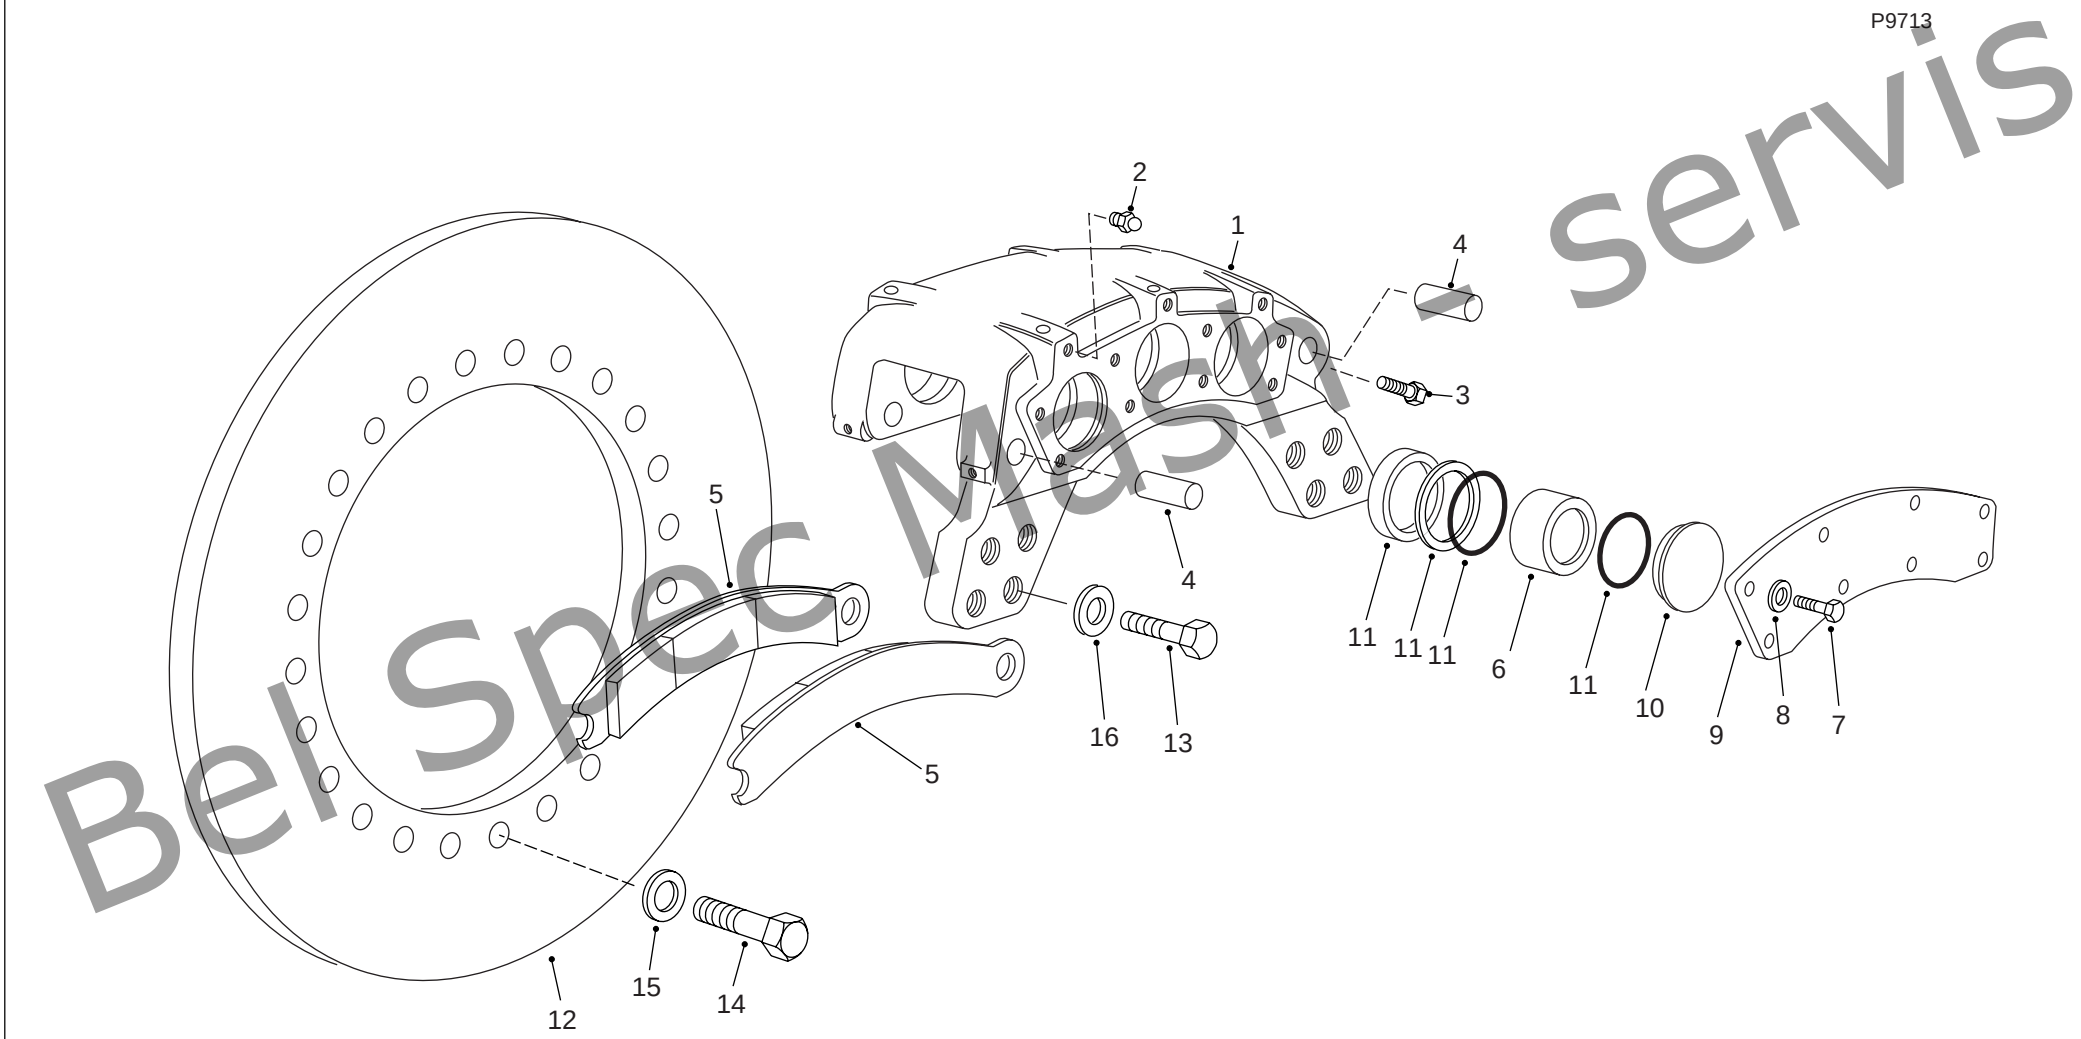

BelSpec Mash - servis

https://truckmanualshub.com/

165-0020-8391 BRAKE PARTS-FRONT WHEEL-RIGIDS
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15231643	BRAKE ASSY		
	002	002	09051432	.VALVE-BLEEDER		
	003	004	09054402	.SCREW		
	004	004	15265338	.PIN		
	005	001	15266826	.KIT-LINING		
	006	006	15265344	.PISTON		
	007	008	15265339	.BOLT		
	008	008	15265340	.WASHER		
	009	001	15265341	.PLATE-COVER		
	010	003	15265342	.PLUG		
	011	001	15265529	.KIT-SEAL		
	012	002	15231642	DISC-BRAKE		
	013	016	00223473	BOLT		
	014	048	00223756	BOLT		
	015	048	09250715	WASHER-HARDENED		
	016	008	09270005	WASHER-HARDENED		

Bel Spec Mash - servis

https://truckmanualshub.com/

165-0030-8391 BRAKE PARTS-REAR WHEEL-RIGIDS
FROM SERIAL NO. T8391011

DRAWING NO. P10002

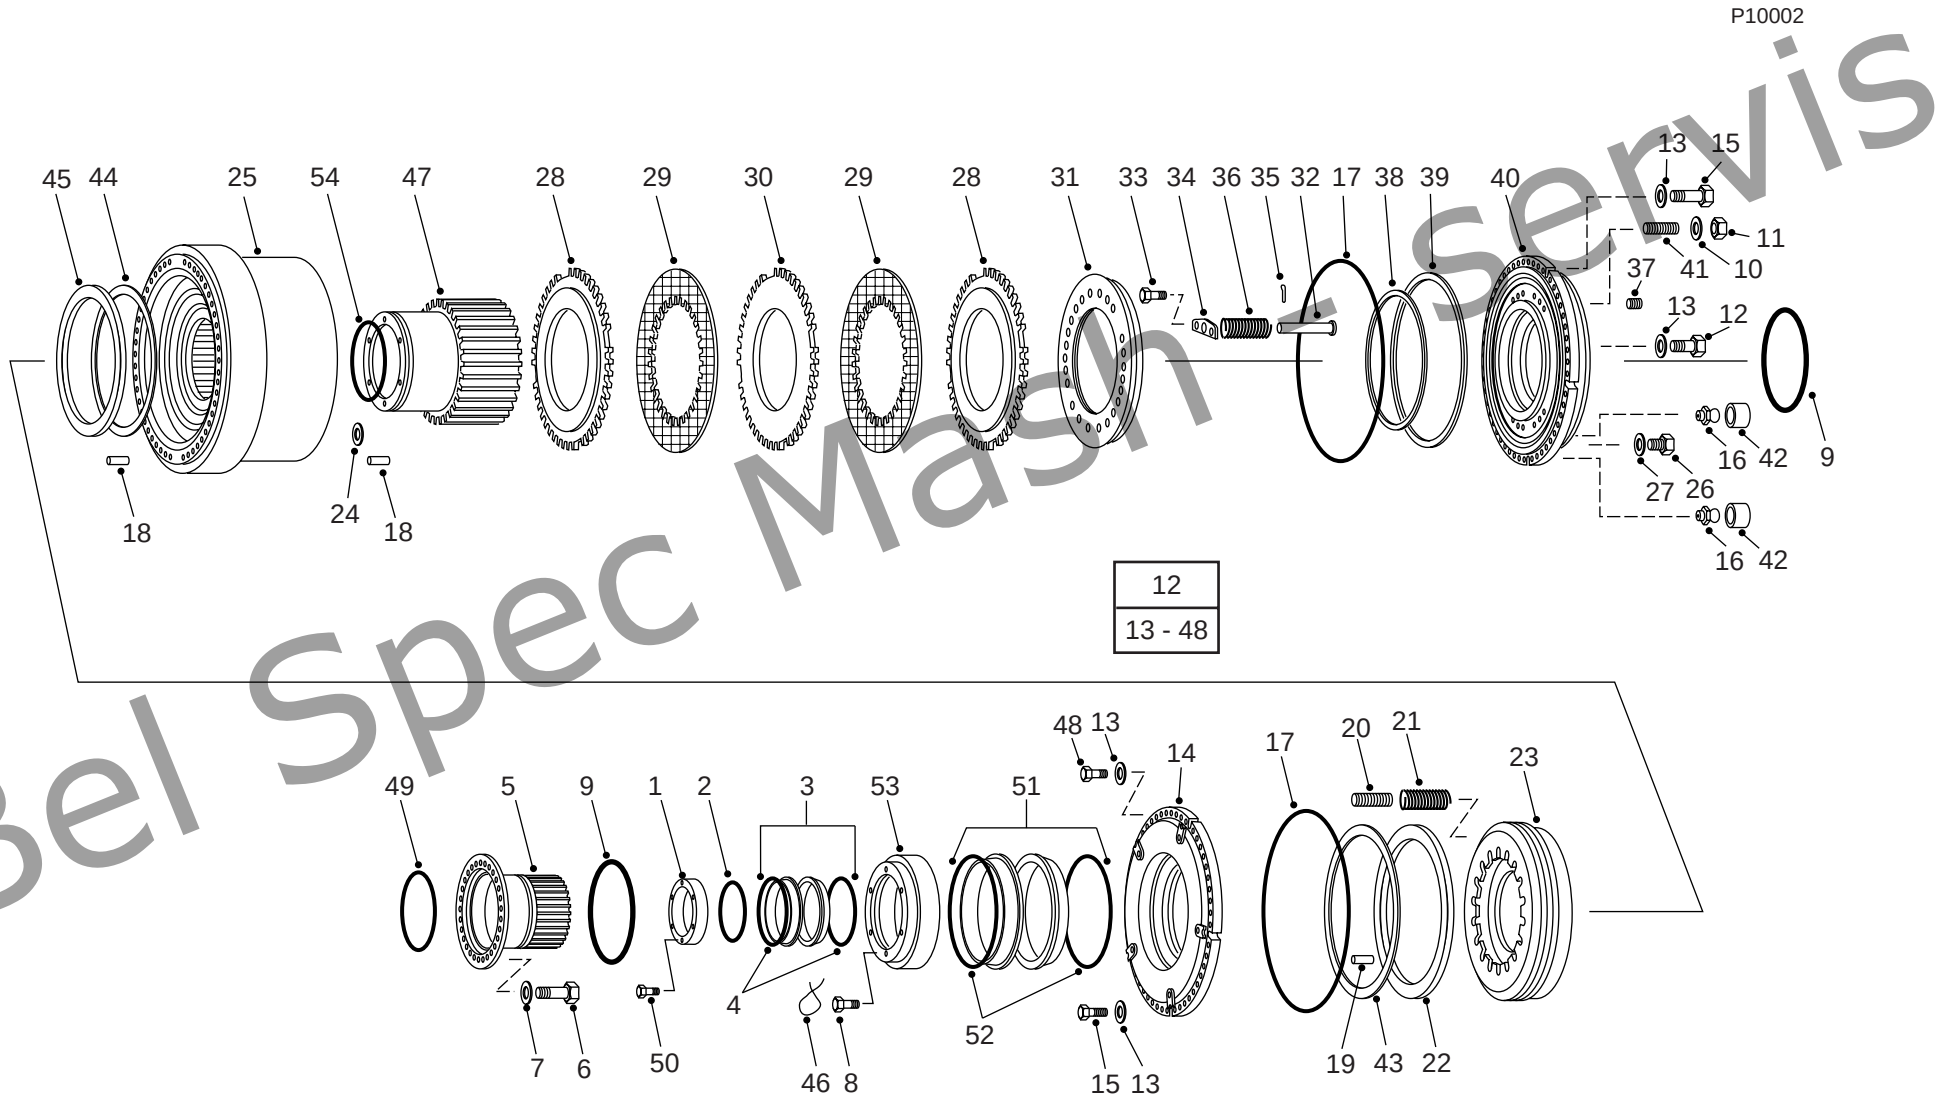

Bel Spec Mash - servis

https://truckmanualshub.com/

165-0030-8391 BRAKE PARTS-REAR WHEEL-RIGIDS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15003556	HOUSING-SEAL		
	002	002	15302757	O-RING		
	003	002	15302752	SEAL ASSY-FACE TYPE		
	004	004	15272374	.RING-TORIC		
	005	001	15008533	WHEEL DRIVER		
	006	040	00223495	BOLT		
	007	040	09019631	WASHER-HARDENED		
	008	012	00445943	BOLT		
	009	004	15302758	O-RING		
	010	056	09019631	WASHER-HARDENED		
	011	056	09419497	NUT-NYLON INSERT		
	012	002	15303652	BRAKE ASSY		
	013	216	09065332	.WASHER		
	014	002	15247047	.SRING HOUSING		
	015	020	09068505	.SCREW		
	016	008	02276784	.SCREW-BLEED		
A	017	004	15258053	.SEAL-O RING		
	018	004	00784094	.PIN-DOWEL		
	019	002	00784088	.PIN-DOWEL		
	020	054	09065306	.SPRING		
	021	054	09065305	.SPRING		
B	022	002	15303608	.SEAL ASSY-PISTON		
	023	002	15302125	.PISTON-PARKING		
A	024	006	15258054	.SEAL-O RING		
	025	002	15303670	.DISC HOUSING		
	026	004	09183205	.PLUG		
	027	004	00274248	..O-RING		
	028	004	15302798	.DAMPER ASSY		
	029	014	15302796	.DISC-FRICTION		
	030	012	15302797	.PLATE-SPLINED		
	031	002	15231497	.PISTON-SERVICE		
	032	048	00936559	.PIN		
	033	096	00179814	.BOLT		
	034	048	09064810	.PLATE-RETAINER		
	035	048	09064750	.PIN-RETAINING		
	036	048	09065315	.SPRING		
	037	004	00444692	.PLUG		
A	038	002	15258051	.SEAL-D RING		
A	039	002	15258038	.SEAL-D RING		
	040	002	15307381	.PISTON HOUSING ASSY		

165-0030-8391 BRAKE PARTS-REAR WHEEL-RIGIDS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
C	041	056	15303368	..STUD		
	042	008	15249911	.DUSTCAP		
B	043	002	15303609	.GUIDE RING-PISTON		
B	044	002	15303611	.GUIDE RING-ROD		
B	045	002	15303610	.SEAL ASSY-ROD		
	046	ASR	09113457	.LOCKWIRE		
	047	002	15247409	.DISC-DRIVE		
	048	196	00223437	.BOLT		
	049	ASR	09125576	O-RING-BULK		
	050	012	15003778	BOLT		
	051	002	15247216	SEAL ASSY		
	052	004	15247433	.O RING		
	053	002	15247046	HOUSING-SEAL		
	054	002	15302759	O-RING		


NOTES:
A PARTS IN 15303631 SEAL KIT
B PARTS IN 15303607 SEAL KIT - PARK BRAKE
C USE WITH 15257449 LOCTITE CLEANER AND 09371048 RETAINING COMPOUND

PerSpec Mash-servis

https://truckmanualshub.com/

180-0030-8391 FRONT RIDE CYLINDER
FROM SERIAL NO. T8391011

DRAWING NO. P8816

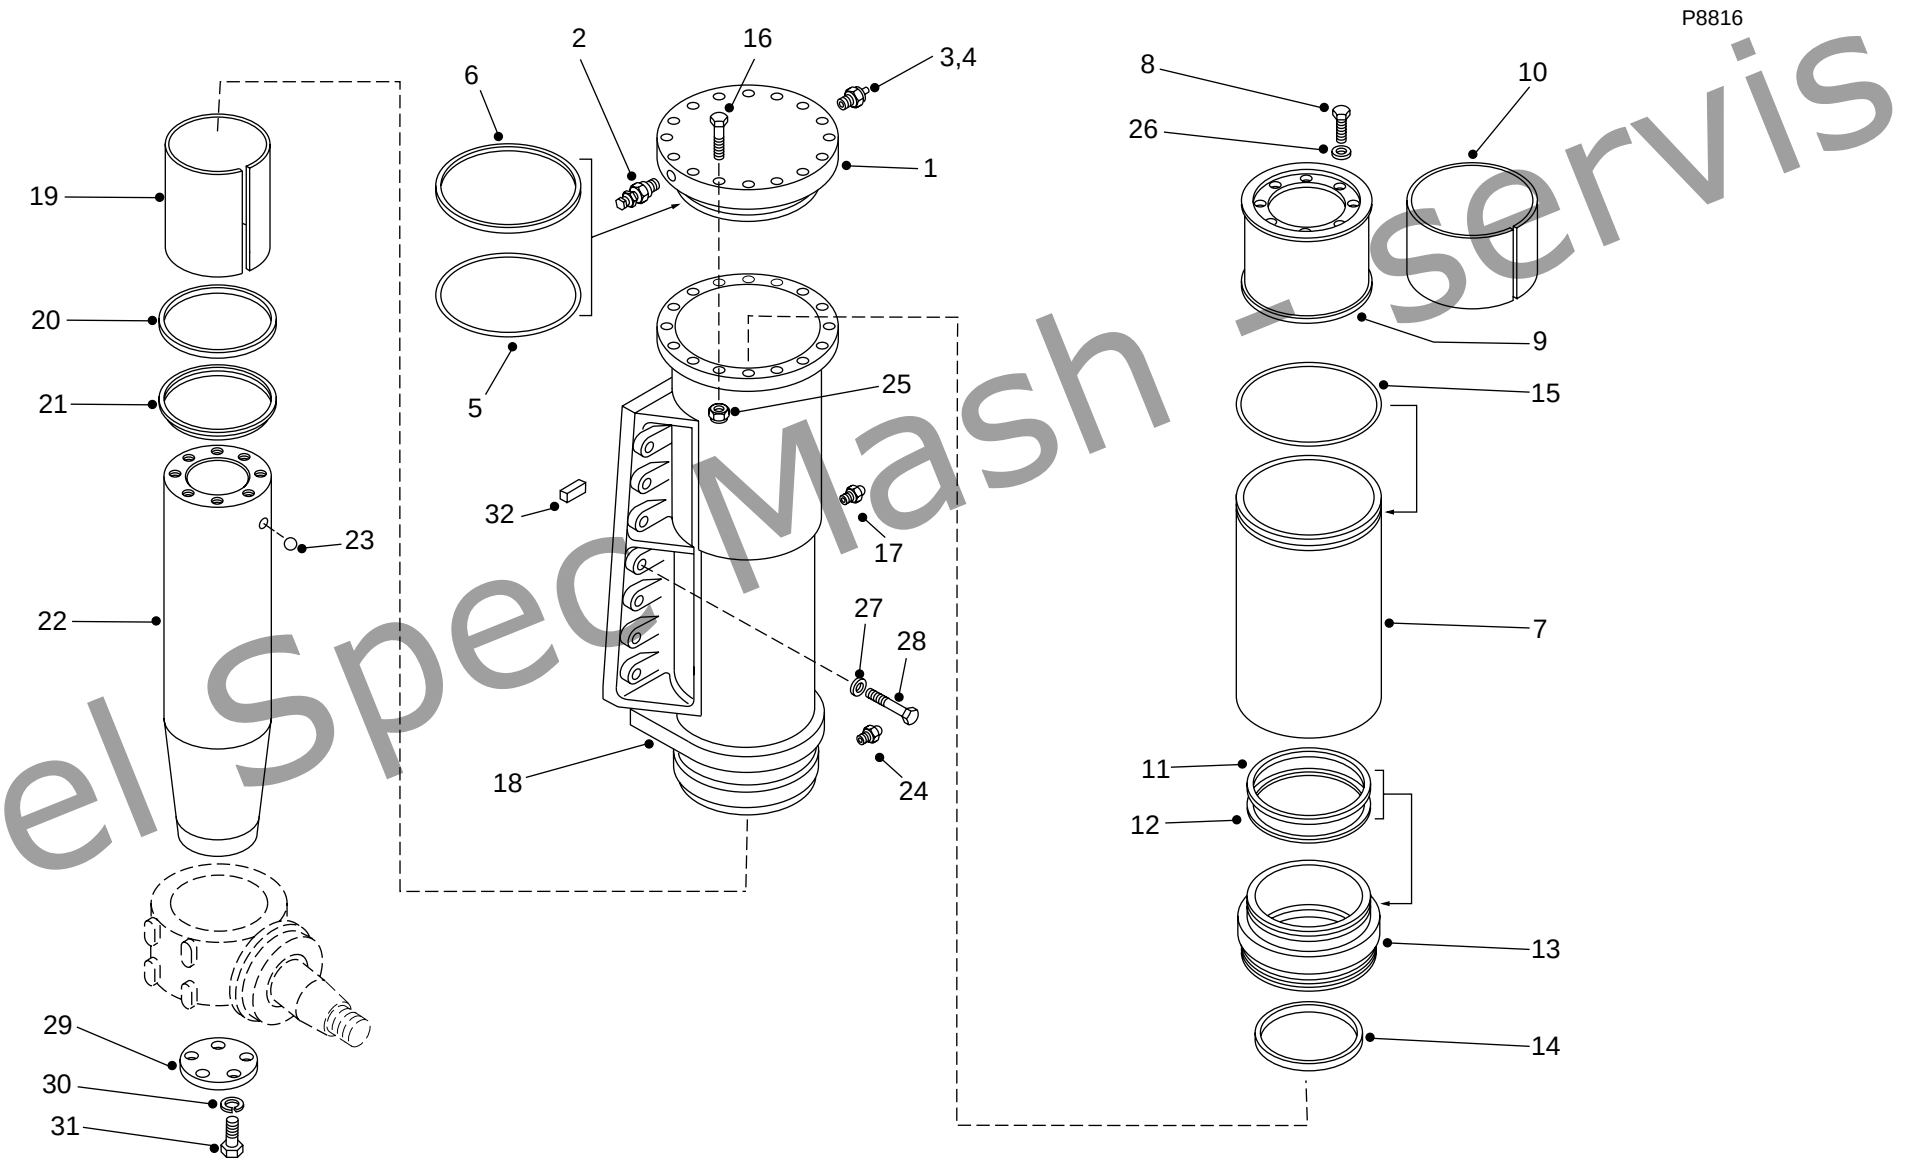

BelSpecMash Servis

https://truckmanualshub.com/

180-0030-8391 FRONT RIDE CYLINDER
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	002	15247974	FRONT RIDE CYLINDER		
	001	001	09384086	.CAP-END		
A	002	001	06525035	.VALVE ASSY-RECHARGE		
	003	001	09013688	.VALVE-CHECK		
	004	001	00444613	.PLUG		
A	005	001	15019179	.O RING		
A	006	001	09015056	.RING-BACKUP		
	007	001	09068668	.TUBE		
	008	010	09068667	.BOLT		
	009	002	09079450	.PISTON		
A	010	001	09014093	.RING-WEAR		
A	011	010	09169669	.O RING		
A	012	001	09036867	.RING-BACKUP		
	013	001	09079449	.RETAINER-SEAL		
A	014	001	15233756	.SEAL		
A	015	001	09120034	.O RING		
	016	016	00186659	.BOLT		
A	017	001	09411010	.FITTING-GREASE		
	018	001	15247973	.TUBE ASSY		
A	019	001	15255936	.RING-WEAR		
A	020	001	09014235	.SEAL		
A	021	001	09256606	.WIPER		
	022	002	09079451	.ROD-PISTON		
	023	001	00169162	.BALL		
A	024	001	00106671	.FITTING-RELIEF		
	025	016	00274209	.LOCKNUT		
	026	010	09068666	.WASHER-HARDENED		
	027	028	09019631	WASHER-HARDENED		
	028	028	09430339	BOLT		
	029	002	09014267	DISC-1.00 IN		
	030	008	00103332	LOCKWASHER		
	031	008	00271613	BOLT		
	032	002	09017345	KEY-SHEAR		


NOTES:
A PARTS IN 09396508 OVERHAUL KIT

PerSpec Mash - servis

https://truckmanualshub.com/

180-0050-8391 REAR RIDE CYLINDER
FROM SERIAL NO. T8391011

DRAWING NO. P9715

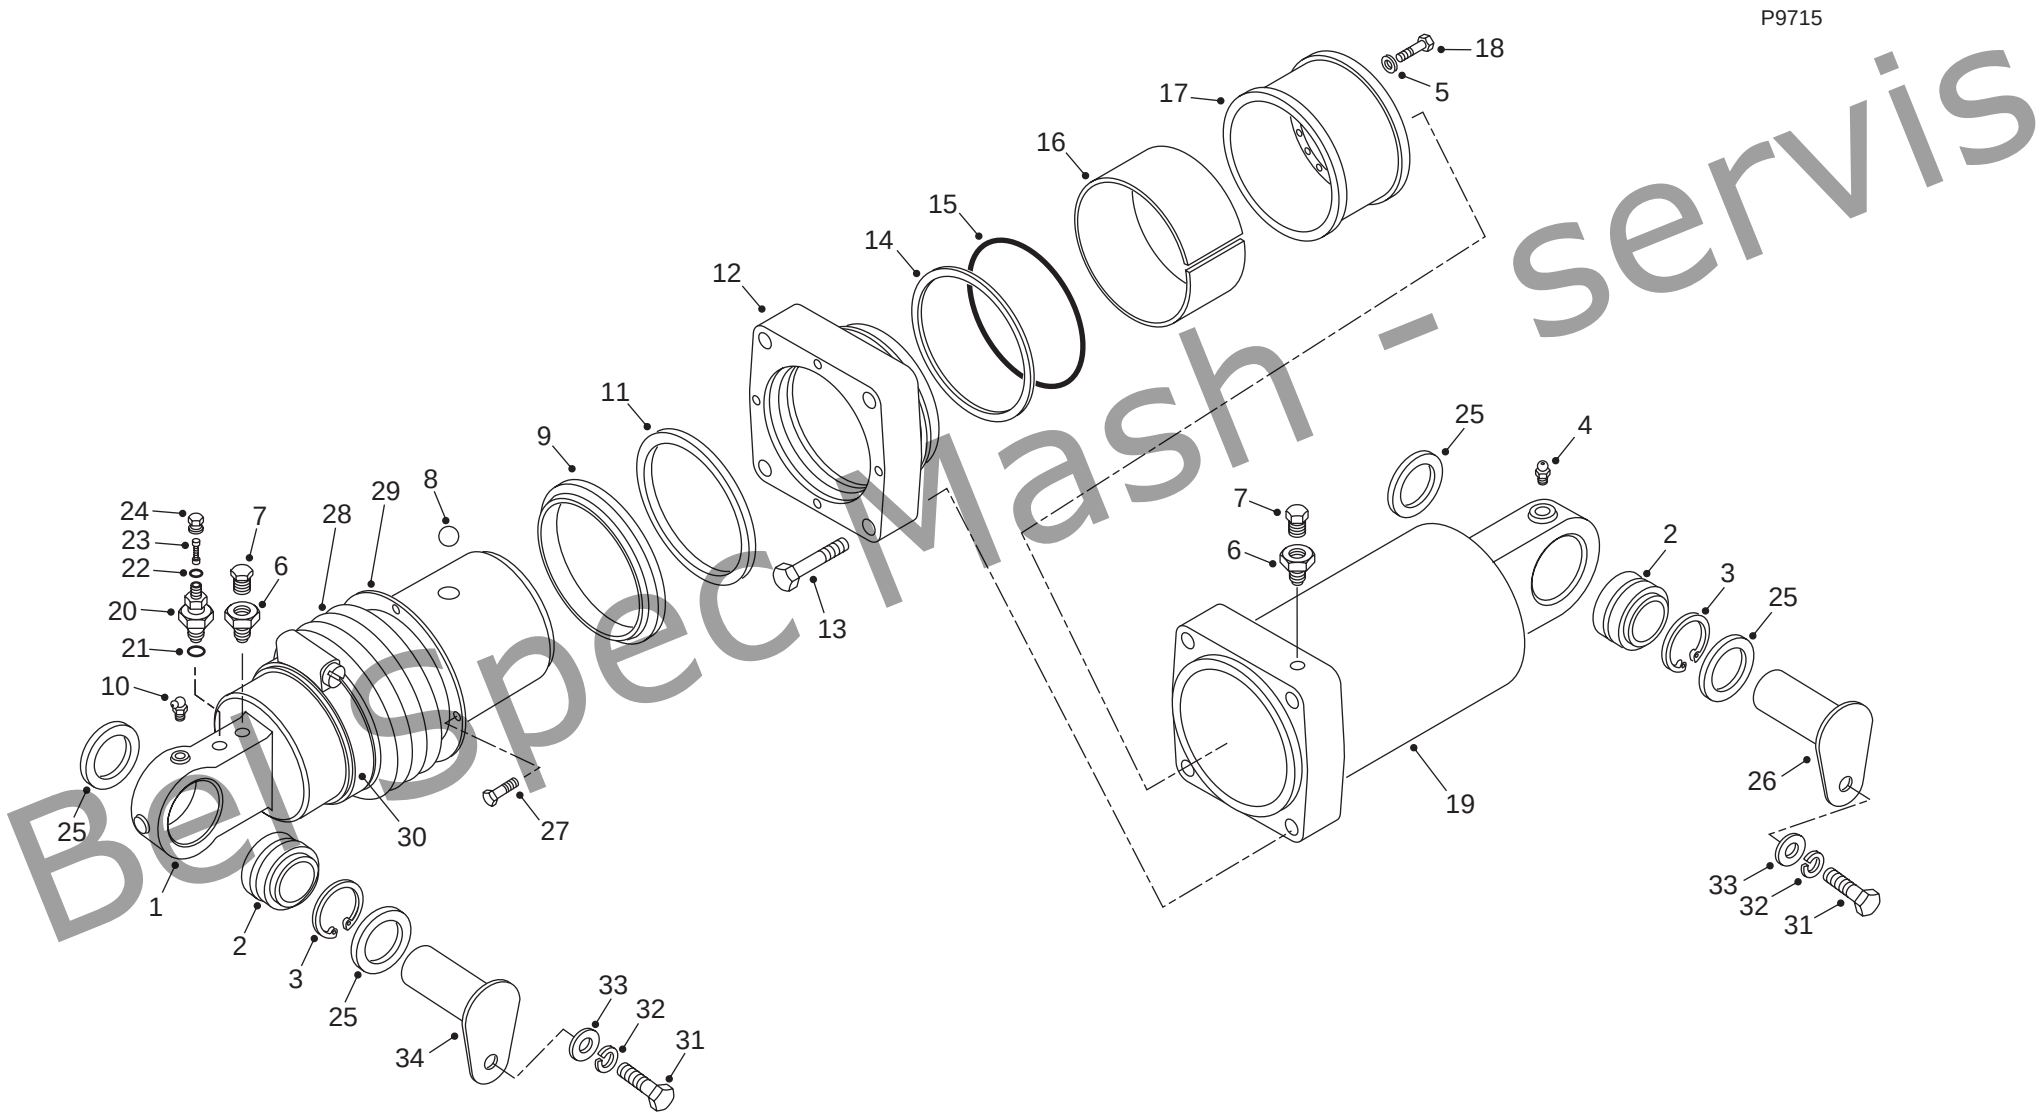

BelSpecMash - servis

https://truckmanualshub.com/

180-0050-8391 REAR RIDE CYLINDER
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	002	15246289	CYLINDER ASSY		
	001	001	15246237	.ROD-PISTON		
A	002	002	09167506	.BEARING-SPHERICAL		
A	003	004	09425517	.RING-SNAP		
A	004	001	09411010	.FITTING-GREASE		
	005	010	09068666	.WASHER-HARDENED		
A	006	002	09013688	.VALVE-CHECK		
	007	003	00444613	.PLUG		
	008	001	00169162	.BALL		
A	009	001	09256608	.WIPER		
A	010	001	09411019	.NIPPLE-GREASE		
A	011	001	15233757	.SEAL		
A	012	001	09015063	.SEAL-RETAINER		
	013	004	09414567	.BOLT		
A	014	001	09015056	.RING-BACKUP		
A	015	001	09154249	.O RING		
A	016	001	09015057	.RING-WEAR PISTON		
	017	001	09079588	.PISTON		
	018	010	09068667	.BOLT		
	019	001	09015066	.TUBE ASSY		
A	020	001	06525035	.VALVE ASSY-RECHARGE		
	021	001	09030336	..RING-LARGE		
	022	001	09190141	..RING-SMALL		
	023	001	09034883	..CORE		
	024	001	09035137	..CAP		
	025	008	09015036	SPACER		
	026	002	09250113	PIN ASSY		
	027	008	00179837	BOLT		
	028	002	15247495	BELLOWS		
	029	002	09078136	PLATE		
	030	002	09139822	CLAMP		
	031	004	00179883	BOLT		
	032	004	00103329	LOCKWASHER		
	033	004	09217321	WASHER		
	034	002	09015038	PIN ASSY		

NOTES:
A PARTS IN 09396507 OVERHAUL KIT


PerkSpec Mash - servis

https://truckmanualshub.com/

190-0010-8391 TERMINALS
FROM SERIAL NO. T8391011

DRAWING NO. P9336A

P9336



1

SPADE, FEMALE
FULLY INSULATED


NOMINAL SIZE	CABLE SIZE	PART NO.
4.8	14/0.30	15246057
6.4	14/0.30	09380600
6.4	28/0.30	09077383



2

SPADE, FEMALE
INSULATED


NOMINAL SIZE	CABLE SIZE	PART NO.
2.8	14/0.30	09366396
4.7	14/0.30	09366404
4.7	28/0.30	09366405
6.4	14/0.30	09366397
6.4	28/0.30	09366319
6.4	44/0.30	09366412
9.5	44/0.30	09366320
6.4*	14/0.30	15246235
6.4*	28/0.30	15229343



3

SPADE, FEMALE
UNINSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
6.4	14/0.30	09384673
6.4	28/0.30	09384676
6.4	44/0.30	15245444
9.5	65/0.30	09384675
6.2	14/0.30	15248118
6.2	28/0.30	15248119
6.2	44/0.30	15248120
2.6	14/0.30	15248373
7.2	14 & 28/0.30	15248390
7.2	44 & 65/0.30	15248441
3.7	14/0.30	15248442
3.7 SEALED	14/0.30	15248448
2.6	35/0.30	15250885
12.7	65/0.30	09384674
4.7	14/0.30	15236608
2.8	14/0.30	15257399
2.6	14/0.30	15258009
2.8	14/0.30	15258010
2.8	14/0.30	15258011
1.6	14/0.30	15258013



4

SPADE, MALE
UNINSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
1.5	14/0.30	15257492
2.8	14/0.30	15258015
6.3	14/0.30	09384672
6.3	28/0.30	09384671
9.5	65/0.30	09384670


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0010-8391 TERMINALS
FROM SERIAL NO. T8391011

DRAWING NO. P9336B

P9336



5

SPADE, MALE
INSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
6.4	14/0.30	15244386
6.4	28/0.30	09380599



6

RING
INSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
4	14/0.30	09366390
5	14/0.30	09366391
6	14/0.30	09366392
8	14/0.30	09366393
10	14/0.30	09366394
12	14/0.30	09366395



7

RING
INSULATED


NOMINAL SIZE	CABLE SIZE	PART NO.
4	28/0.30	09366398
5	28/0.30	09366399
6	28/0.30	09366400
8	28/0.30	09366401
10	28/0.30	09366402
12	28/0.30	09366403



8

RING
INSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
4	44/0.30	09366406
5	44/0.30	09366407
6	44/0.30	09366408
8	44/0.30	09366409
10	44/0.30	09366410
12	44/0.30	09366411



9

SOCKET
UNINSULATED

TYPE	CABLE SIZE	PART NO.
RISTS	14/0.30	15229700
RISTS	28/0.30	15229701
RISTS	44/0.30	15229702
AMPLIVERSAL	28/0.30	09371773
CANNON	14,& 28/0.30	15234481
CANNON	14/0.30	15248102
CANNON	28/0.30	15248104
CANNON	14,& 28/0.30	15248107
CANNON	44/0.30	15248110
HARNESSFLEX	14,& 28/0.30	15248140
AMPLIVERSAL	14/0.30	15248361
AMPLIVERSAL	28/0.30	15248363
PACKARD	14/0.30	15248406
BURNDY	28/0.30	15249400
HARNESSFLEX	14,& 28/0.30	15252034
HARNESSFLEX	44,& 65/0.30	15252035
AMPHENOL	14/0.30	15247170
PACKARD	19/0.41	15255019
AMPLIVERSAL	14/0.30	15256533
KOSTAL	14/0.30	15258008


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0010-8391 TERMINALS
FROM SERIAL NO. T8391011

DRAWING NO. P9336C

P9336



10

PIN
UNINSULATED


TYPE	CABLE SIZE	PART NO.
RISTS	14/0.30	15229697
RISTS	28/0.30	15229698
RISTS	44/0.30	15229699
AMPLIVERSAL	28/0.30	09371771
CANNON	14 & 28/0.30	15234480
CANNON	14/0.30	15248099
CANNON	28/0.30	15248103
CANNON	14 & 28/0.30	15248106
CANNON	44/0.30	15248108
AMPLIVERSAL	14/0.30	15248360
AMPLIVERSAL	28/0.30	15248362
PACKARD	14/0.30	15248413
DEUTSCH	14 & 28/0.30	15250803
HARNESSFLEX	14,& 28/0.30	15252036
HARNESSFLEX	44,& 65/0.30	15252037
PACKARD	19/0.41	15256007
AMPLIVERSAL	14/0.3	15256612



11

BULLET
INSULATED


NOMINAL SIZE	CABLE SIZE	PART NO.
4	14/0.30	09378086
4	28/0.30	09378087
7	65/0.30	09378088



13

WIRE PIN
INSULATED


TYPE	CABLE SIZE	PART NO.
HOLLOW	14/0.30	09078630
SOLID	14/0.30	09380432
HOLLOW	28/0.30	09078631
SOLID	28/0.30	09380433
SOLID	44/0.30	09366293



12

SPADE, FEMALE, 90°
UNINSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
6.4	14/0.30	15229342
6.4	28/0.30	15246529



14

FORK
INSULATED

SIZE	CABLE SIZE	PART NO.
4	14/0.30	09077965
4	28/0.30	15256528
4	44/0.30	15256529
5	14/0.30	09067944
5	28/0.30	09067945

Bel Spec Mash servis


https://truckmanualshub.com/

190-0010-8391 TERMINALS
FROM SERIAL NO. T8391011

DRAWING NO. P9336D

P9336


15



BATTERY CABLE
RINGS UNINSULATED

SIZE	TYPE	CABLE SIZE	PART NO.
6	CRIMP	37/0.71	09384213
8	CRIMP	37/0.71	15231078
10	CRIMP	37/0.71	09384214
12	CRIMP	37/0.71	15231151
6	CRIMP	120/0.30	15252081
8	CRIMP	120/0.30	15254430
10	CRIMP	120/0.30	15254432
12	CRIMP	120/0.30	15252082
10	SOLDER	61/1.13	09378351
10	CRIMP	61/1.13	09078916
12	CRIMP	61/1.13	09078920


16



SPADE, FEMALE (POWER)
UNINSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
6.0	120/0.30	15254388


17



SPADE, MALE (POWER)
UNINSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
6.0	120/0.30	15254389


18



FUSE, TERMINAL
UNINSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
4.0	19/0.41	15256530
4.0	84/0.3	15256531


19



FUSE LINK, TERMINAL
UNINSULATED

NOMINAL SIZE	CABLE SIZE	PART NO.
4.0	19/0.41	15256532

20



BATTERY CABLE
CLAMPS UNINSULATED

POLARITY	TYPE	CABLE SIZE	PART NO.
+Ve	CRIMP	61/1.13	09078917
-Ve	CRIMP	61/1.13	09078919

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0011-8391 CONNECTORS
FROM SERIAL NO. T8391011

DRAWING NO. P9337A

P9337

TERMINAL; PIN, RISTS
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
1	RISTS 'E' SERIES	15229691
2	RISTS 'E' SERIES	15229692
3	RISTS 'E' SERIES	15229693
4	RISTS 'E' SERIES	15231071

TERMINAL; PIN, HARNESSFLEX
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
5	5-WAY	15252800
6	BAYONENT 8-WAY	15252728
7	BAYONENT 8-WAY	15252046
8	BAYONENT 16-WAY	15255083
9	BAYONENT 21-WAY	15252047

TERMINAL; SOCKET, RISTS
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
10	RISTS 'E' SERIES	15229694
11	RISTS 'E' SERIES	15229695
12	RISTS 'E' SERIES	15229696
13	RISTS 'E' SERIES	15231072

Bel Spec Mash - servis





https://truckmanualshub.com/

190-0011-8391 CONNECTORS
FROM SERIAL NO. T8391011





DRAWING NO. P9337B

P9337




TERMINAL; SOCKET, HARNESSFLEX
SUITABLE CONNECTORS;-

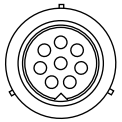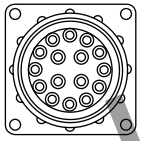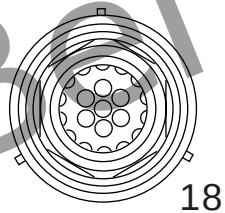OUTLINE	TYPE	PART NO
 14	5-WAY	15252801
 15	BAYONENT 8-WAY	15252729
 16	BAYONENT 8-WAY	15252044
 17	BAYONENT 16-WAY	15255081
 18	BAYONENT 21-WAY	15252045
 19	90° SWIVEL (M27)	15234423
 20	90° SWIVEL (M24)	15244784

TERMINAL; PIN, AMPLIVERSAL
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
 21	MATE-N-LOCK	15248364
 22	MATE-N-LOCK	15251638
 23	MATE-N-LOCK	15256836
 24	MATE-N-LOCK	15256587
 25	MR II	15256611
 26	MATE-N-LOCK	09377007
 27	MATE-N-LOCK	09371774

TERMINAL; PIN, RISTS & CANNON
SUITABLE CONNECTORS;-

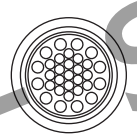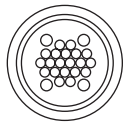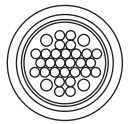OUTLINE	TYPE	PART NO
 28	CANNON (12-19)	15248074
 29	CANNON (4-20)	15248077
 30	CANNON (4-28)	15257951

Bol Spec Mash -servis







https://truckmanualshub.com/

190-0011-8391 CONNECTORS
FROM SERIAL NO. T8391011




DRAWING NO. P9337C

P9337

TERMINAL; SOCKET, AMPLIVERSAL
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
 31	MATE-N-LOCK	15248365
 32	MATE-N-LOCK	15251593
 33	MATE-N-LOCK	15253354
 34	MATE-N-LOCK	15256588
 35	MR II	15256576
 36	MATE-N-LOCK	09377008
 37	MATE-N-LOCK	09371775

TERMINAL; SOCKET, CANNON
SUITABLE CONNECTORS;-

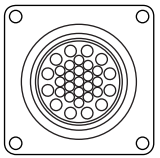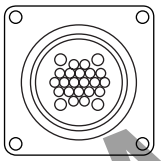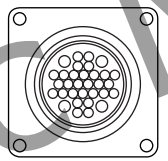OUTLINE	TYPE	PART NO
 38	CANNON (12-19)	15248038
 39	CANNON (4-20)	15248076
 40	CANNON (4-28)	15257950
 41	CANNON (3)	15244400
 42	CANNON (6)	15244399

TERMINAL; SOCKET, Z.F. GEARS
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
 43	90° SWIVEL (M30)	15253829



TERMINAL; SOCKET, AMPHENOL
SUITABLE CONNECTORS;-

 44	AMPHENOL (2)	15247169


TERMINAL; SOCKET, FRAMATOME
SUITABLE CONNECTORS;-

 45	FRAMATOME (6)	15249408


TERMINAL; SOCKET, LUCAS
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
 46	LUCAS (BLACK)	15226941
 47	LUCAS (WHITE)	15226519

TERMINAL; PIN, DEUTSCH
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
 48	DEUTSCH	15250802

TERMINAL; PIN, KOSTAL
SUITABLE CONNECTORS;-

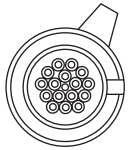OUTLINE	TYPE	PART NO
 49	KOSTAL	15257952

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0011-8391 CONNECTORS
FROM SERIAL NO. T8391011

DRAWING NO. P9337D

P9337

TERMINAL; FEMALE SPADE, 6.4mm
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
50	AMPLIVERSAL	15226251
51	AMPLIVERSAL	15236937
52	AMPLIVERSAL	15226970
53	BRITAX	15236939
54	BRITAX	15236938
55	RISTS	09384682
56	WIPER CONN	15245388
57	RELAY BASE	15231993
58	RELAY BASE	15231520
59	HELLA	15250284
60	V.D.O.	15256616
61	MERIT	15256597

TERMINAL; FEMALE SPADE, 6.2mm
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
62	FUSE BOX	15248123

TERMINAL; FEMALE SPADE, 7.2mm
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
63	PACKARD	15248414

TERMINAL; FEMALE SPADE, 9.5mm
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
64	RISTS	09364681
65	MERIT	15256598

TERMINAL; FEMALE SPADE, 1.6mm
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
66	AMPLIVERSAL	15257954

TERMINAL; FEMALE SPADE, 2.6mm
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
67	PACKARD	15248395
68	PACKARD	15248402
69	PACKARD	15257955

TERMINAL; FEMALE SPADE, 2.8mm
SUITABLE CONNECTORS;-

OUTLINE	TYPE	PART NO
70	A.S.L.	15257403
71	AMPLIVERSAL	15257956
72	AMPLIVERSAL	15257967

Bol Spec Mash servis

https://truckmanualshub.com/




190-0011-8391 CONNECTORS
FROM SERIAL NO. T8391011

DRAWING NO. P9337E

P9337

TERMINAL; FEMALE SPADE, 3.7mm
SUITABLE CONNECTORS;-



OUTLINE	TYPE	PART NO
 73	PACKARD	15248439
 74	PACKARD	15248446
 75	PACKARD	15248445
 76	PACKARD	15250882


TERMINAL; FEMALE SPADE, 4.7mm
SUITABLE CONNECTORS;-



OUTLINE	TYPE	PART NO
 77	RISTS	15236579

TERMINAL; MALE SPADE, 1.5mm
SUITABLE CONNECTORS;-




OUTLINE	TYPE	PART NO
 78	PACKARD	15257490

TERMINAL; MALE SPADE, 2.8mm
SUITABLE CONNECTORS;-




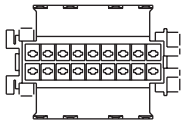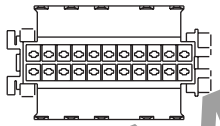OUTLINE	TYPE	PART NO
 80	AMPLIVERSAL	15257962
 81	AMPLIVERSAL	15257963

TERMINAL; MALE SPADE, 6.4mm
SUITABLE CONNECTORS;-


OUTLINE	TYPE	PART NO
 82	AMPLIVERSAL	15236936
 83	AMPLIVERSAL	15231994
 84	AMPLIVERSAL	09376050
 85	BULKHEAD	09384685

TERMINAL; MALE SPADE, 9.5mm
SUITABLE CONNECTORS;-




OUTLINE	TYPE	PART NO
 86	BULKHEAD	15230605

TERMINAL; MALE SPADE, 6.0mm
SUITABLE CONNECTORS;-

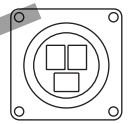

OUTLINE	TYPE	PART NO
 87	AMPLIVERSAL	15254387
 88	AMPLIVERSAL	15254385

TERMINAL; PIN, PACKARD
SUITABLE CONNECTORS;-

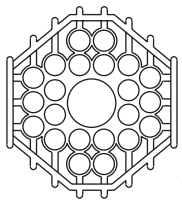OUTLINE	TYPE	PART NO
 89	PACKARD	15248426
 90	PACKARD	15250805
 91	PACKARD	15250869
 92	PACKARD	15255037

Bel Spec Mash Servis

https://truckmanualshub.com/


190-0011-8391 CONNECTORS
FROM SERIAL NO. T8391011

DRAWING NO. P9337F


P9337




TERMINAL; FEMALE SPADE, 6.0mm
SUITABLE CONNECTORS;-




OUTLINE	TYPE	PART NO
 93	AMPLIVERSAL	15254386

TERMINAL; SOCKET, PACKARD
SUITABLE CONNECTORS;-



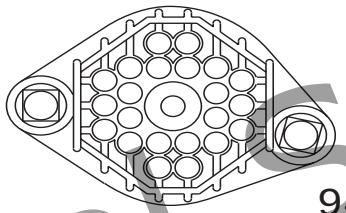

OUTLINE	TYPE	PART NO
 94	PACKARD	15248438
 95	PACKARD	15253703
 96	PACKARD	15250847
 97	PACKARD	15248424

TERMINAL; PIN/SOCKET, CANNON
SUITABLE CONNECTORS;-



 98	CANNON (10)	15234478
 99	CANNON (10)	15234479

TERMINALS SUPPLIED OR NOT REQ'D
SUITABLE CONNECTORS;-

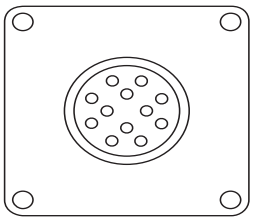
OUTLINE	TYPE	PART NO
 100	DIN 43650	15232617
 101		09241277
 102	SUCO	09241277
 103	A.B. CONTROLS	09380580

Ber Spec Mash - servis

https://truckmanualshub.com/

190-0030-8391 CABLES/HARNESSES-CAB
FROM SERIAL NO. T8391011

DRAWING NO. P10905A

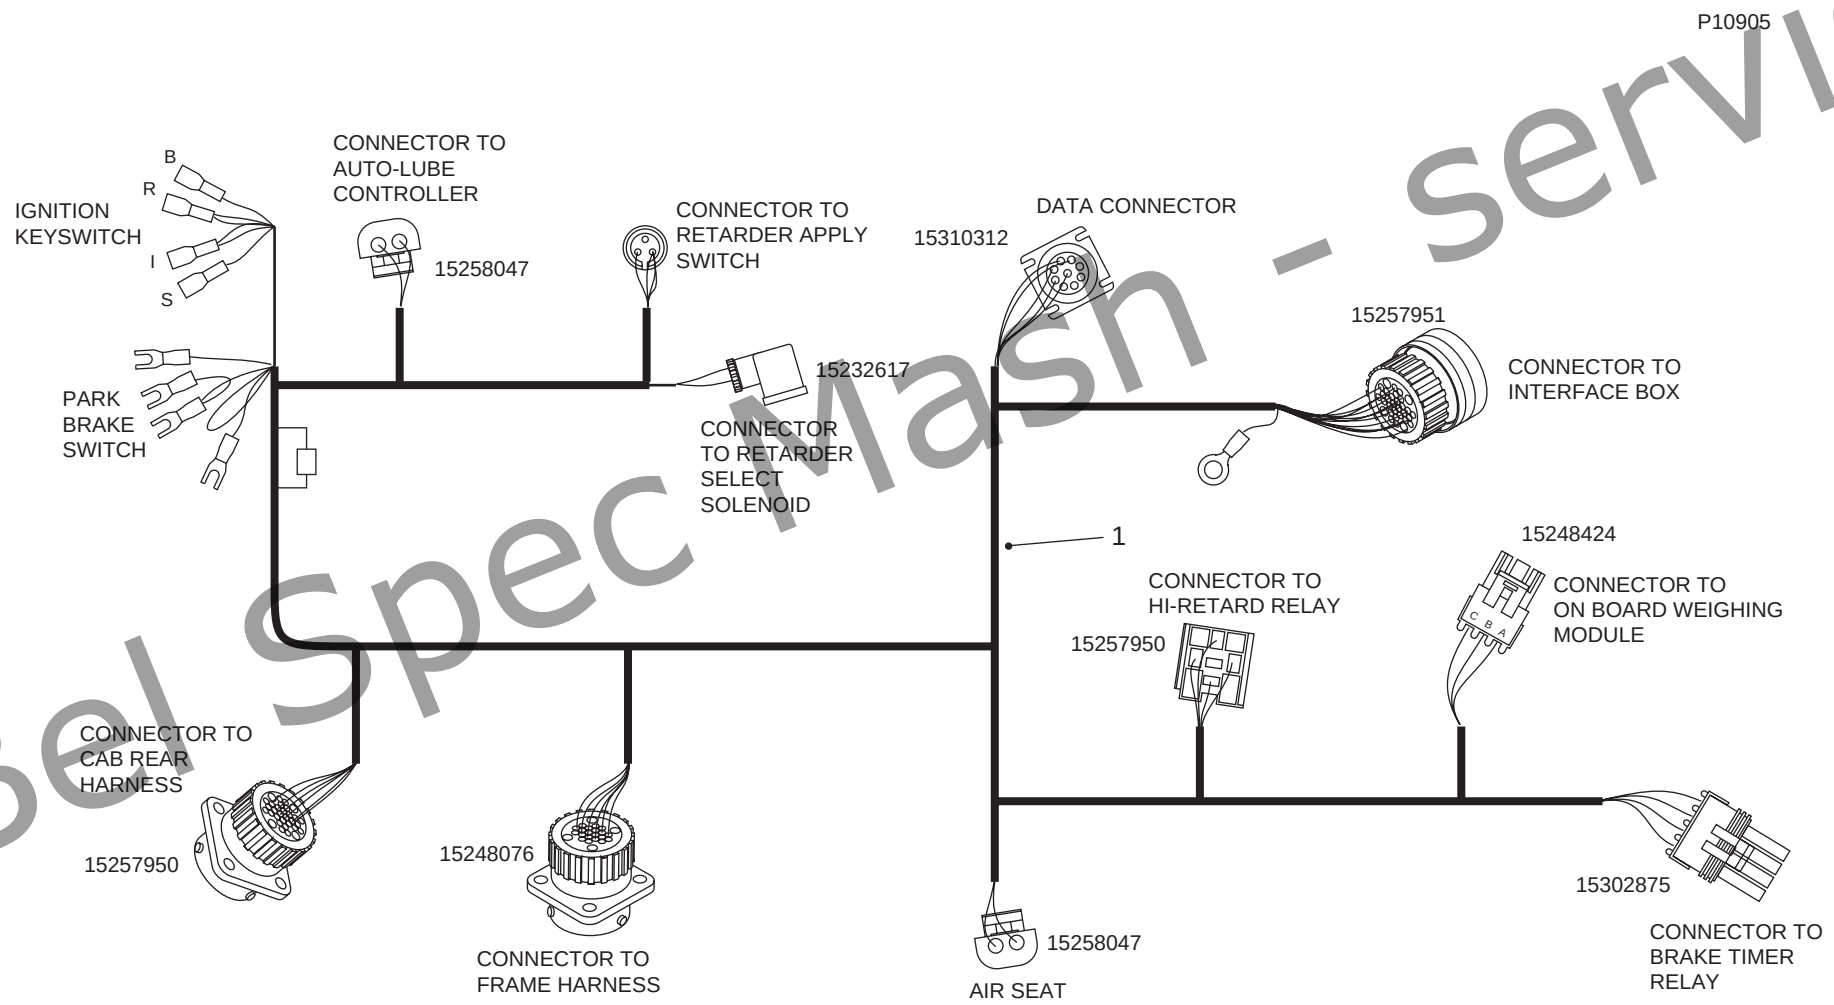


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0030-8391 CABLES/HARNESSES-CAB
FROM SERIAL NO. T8391011

DRAWING NO. P10905B

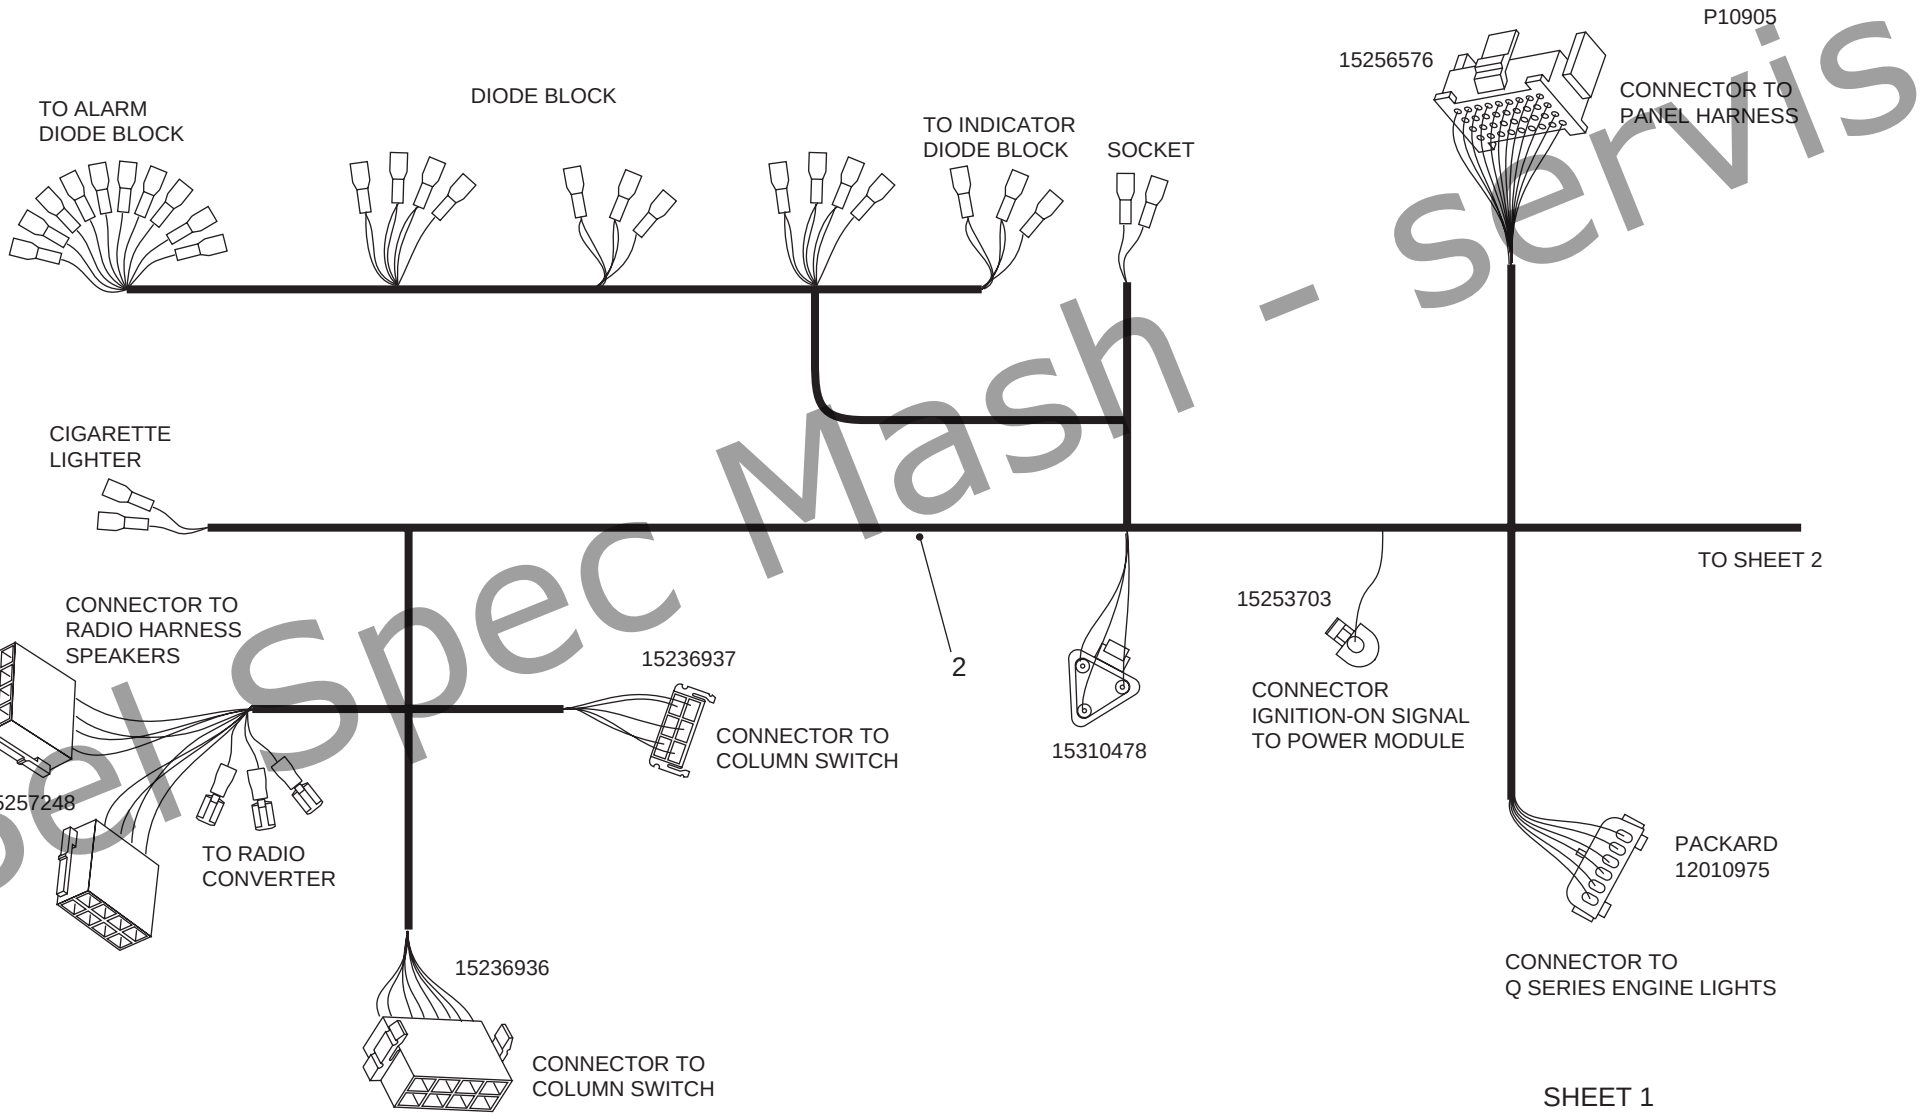


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0030-8391 CABLES/HARNESSES-CAB
FROM SERIAL NO. T8391011

DRAWING NO. P10905C

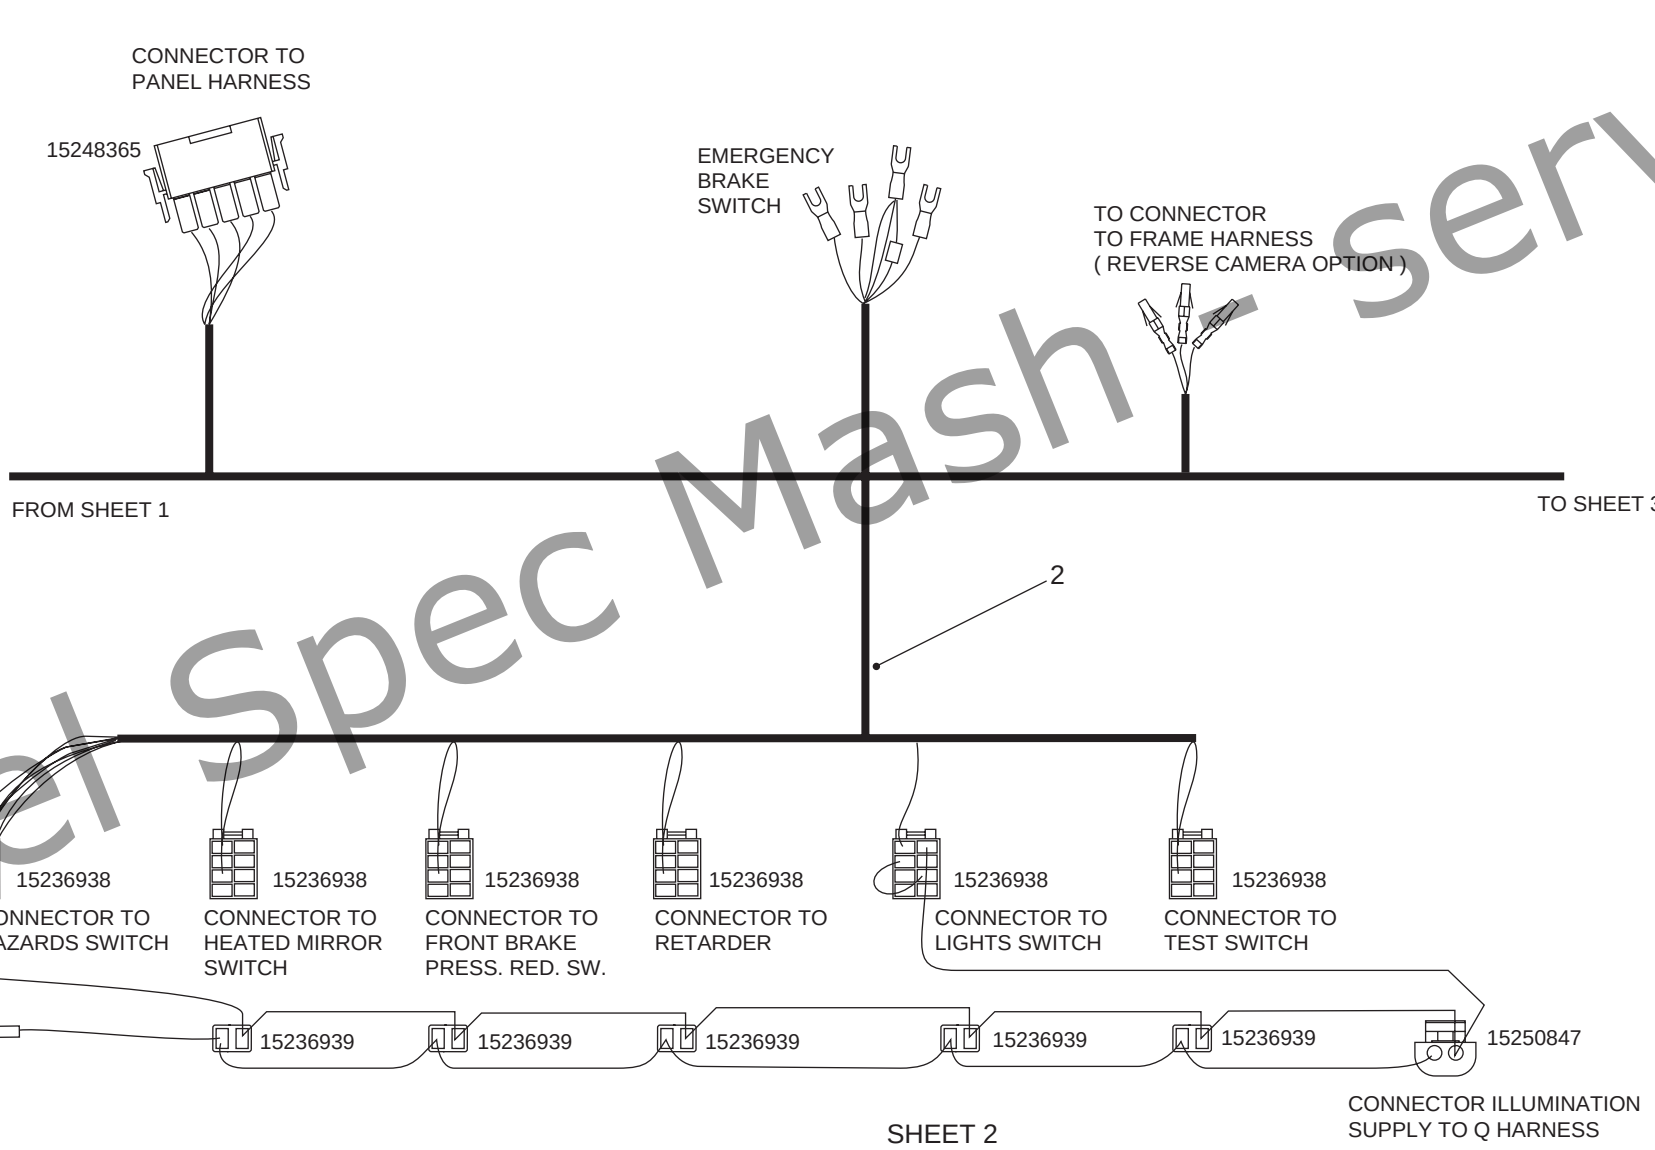


SHEET 2

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0030-8391 CABLES/HARNESSES-CAB
FROM SERIAL NO. T8391011

DRAWING NO. P10905D

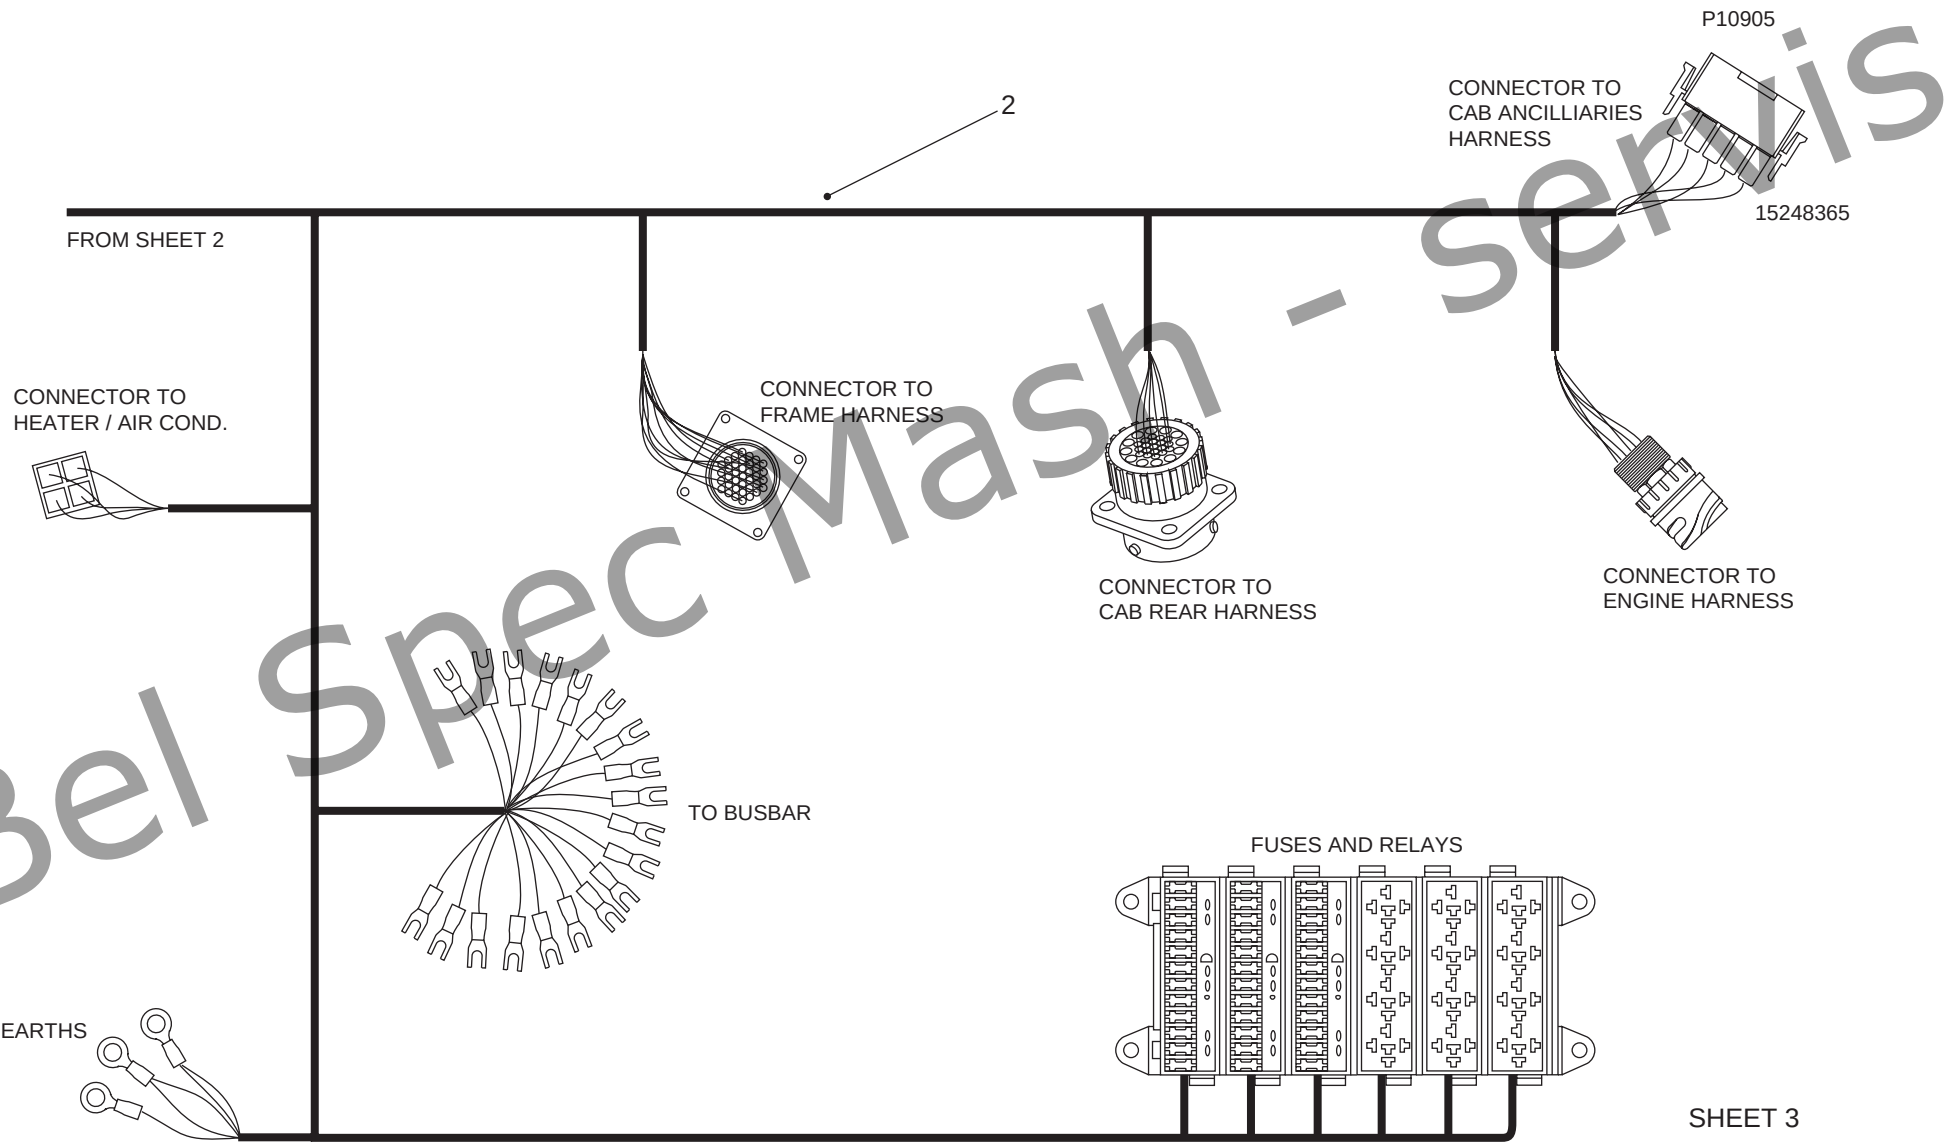


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0030-8391 CABLES/HARNESSES-CAB
FROM SERIAL NO. T8391011

DRAWING NO. P10905E

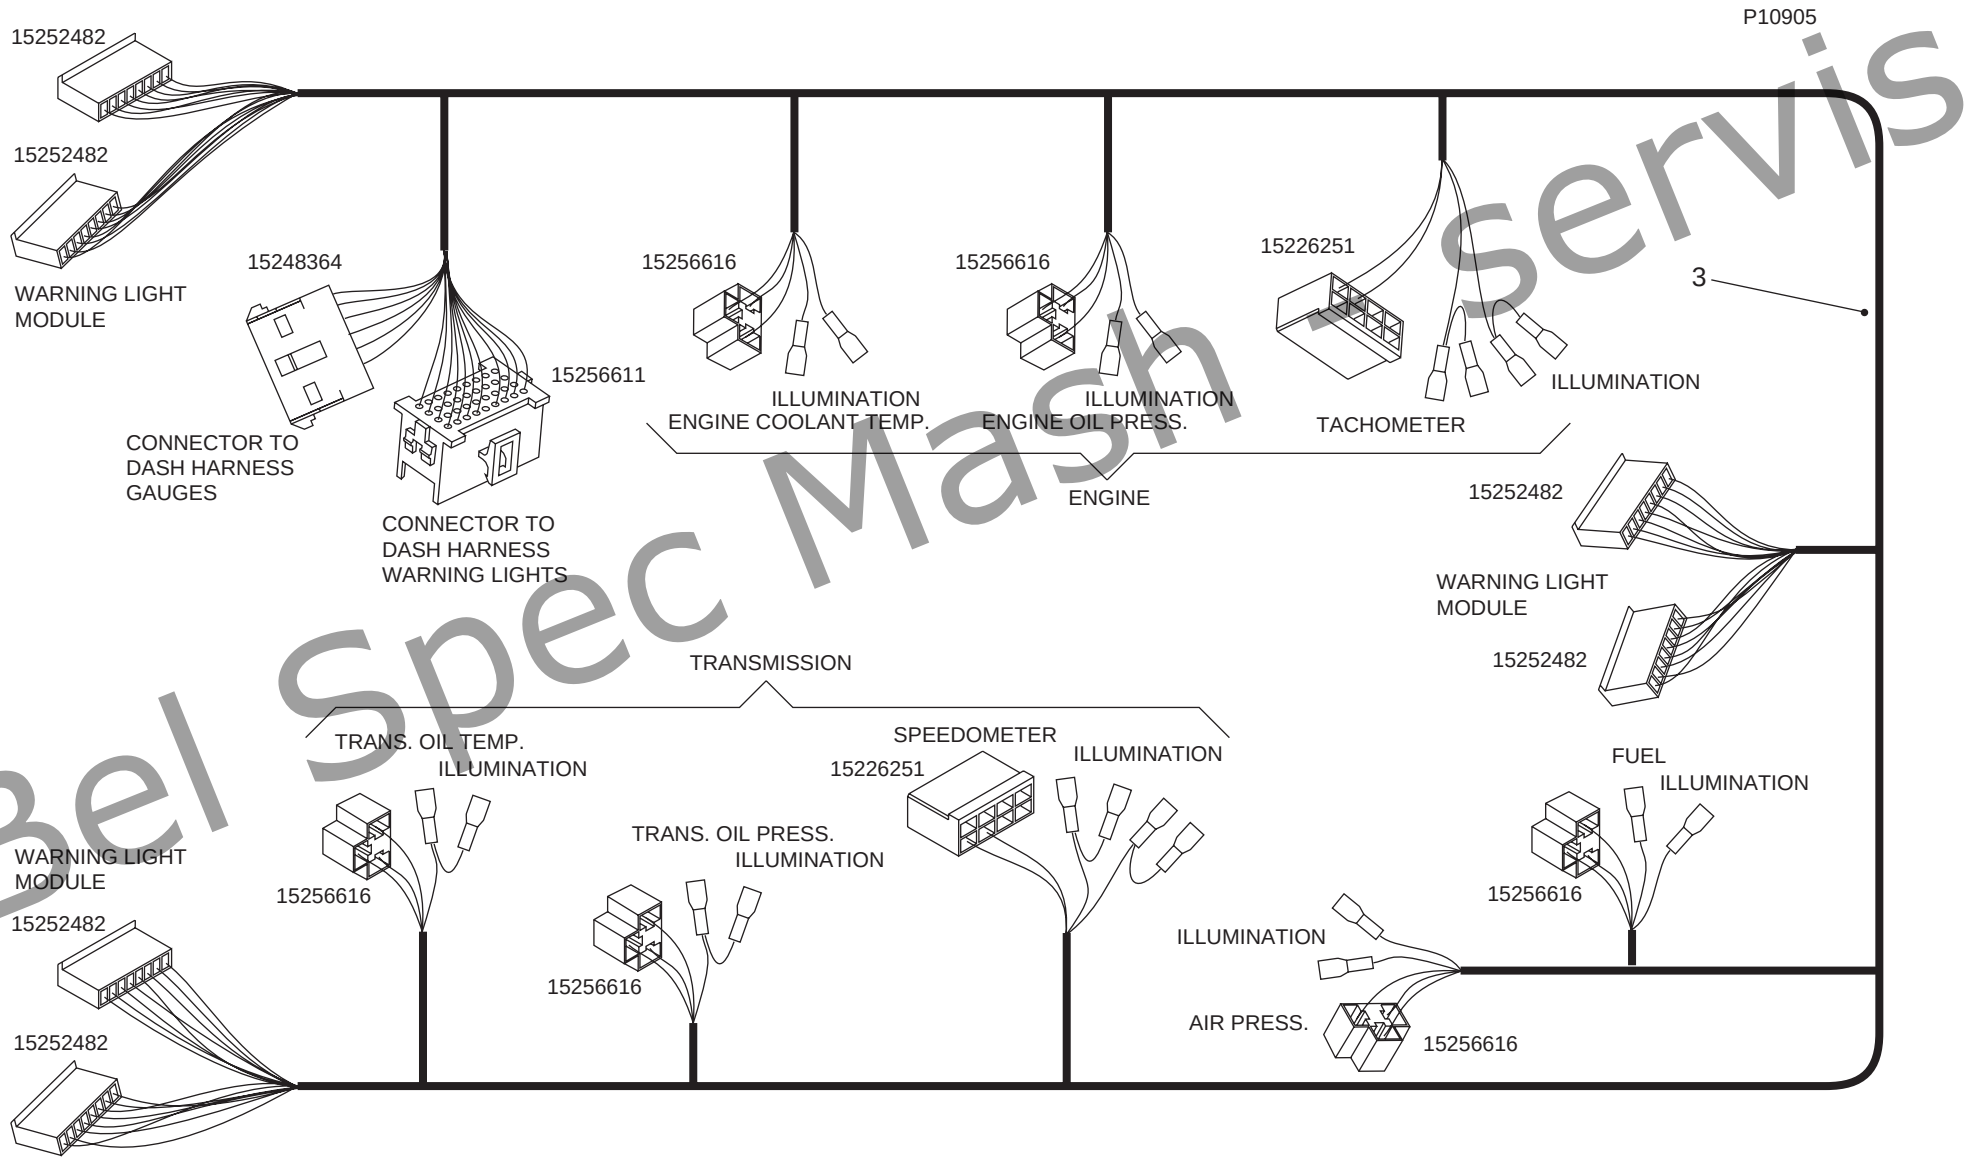


Bel Spec Mash servis

https://truckmanualshub.com/

190-0030-8391 CABLES/HARNESSES-CAB
FROM SERIAL NO. T8391011

DRAWING NO. P10905F

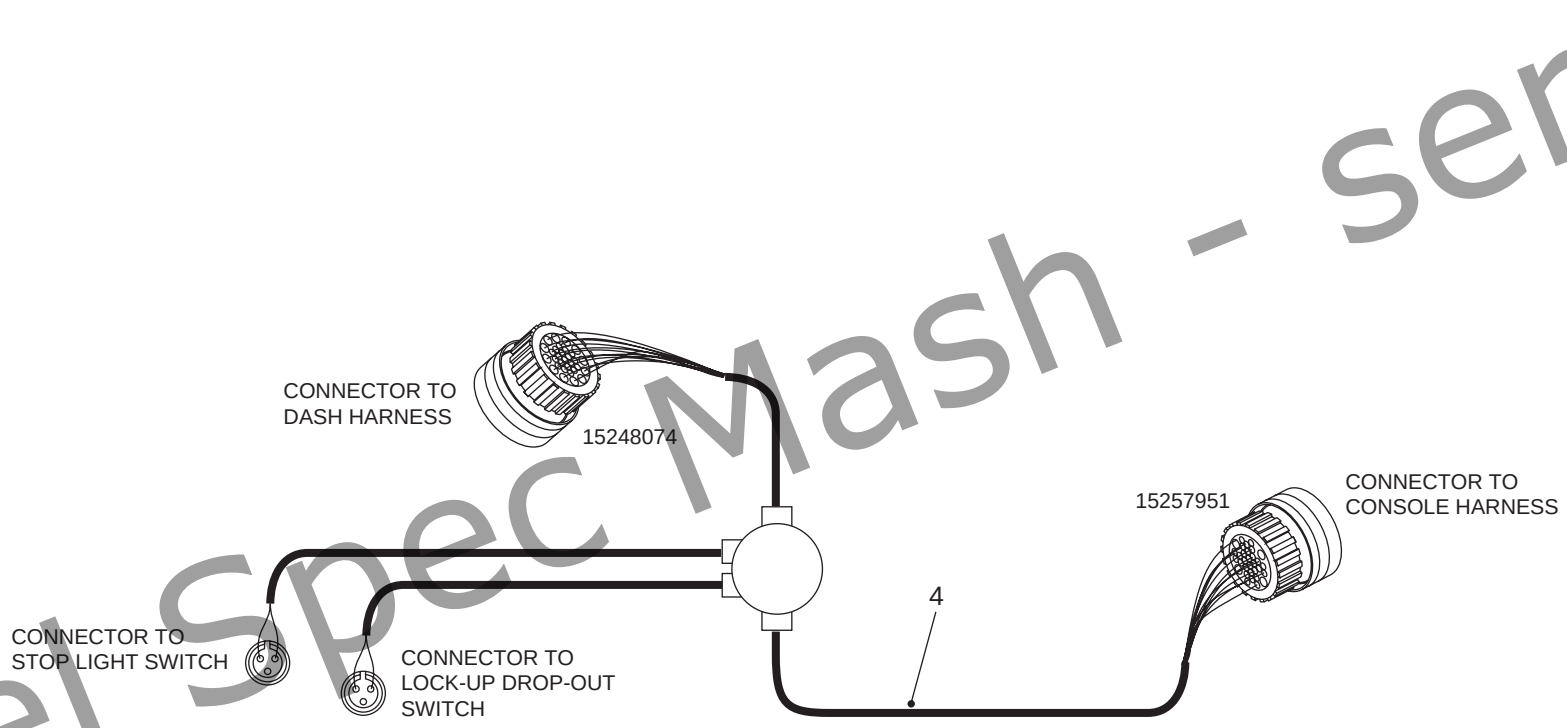

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0030-8391 CABLES/HARNESSES-CAB
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312228	HARNESS, CONSOLE		
	002	001	15312226	HARNESS, DASH		
	003	001	15310125	HARNESS-INSTRUMENTS		
	004	001	15312227	HARNESS, CAB REAR		

Bel Spec Mash - servis

https://truckmanualshub.com/

THIS PAGE IS INTENTIONALLY LEFT BLANK


Bel Spec Mash - servis

https://truckmanualshub.com/

R2 08/03 (ECN 105264, ECN 105815)

190-0040-8391 CABLES/HARNESSES-CHASS/ENG
FROM SERIAL NO. T8391011

DRAWING NO. 10993A

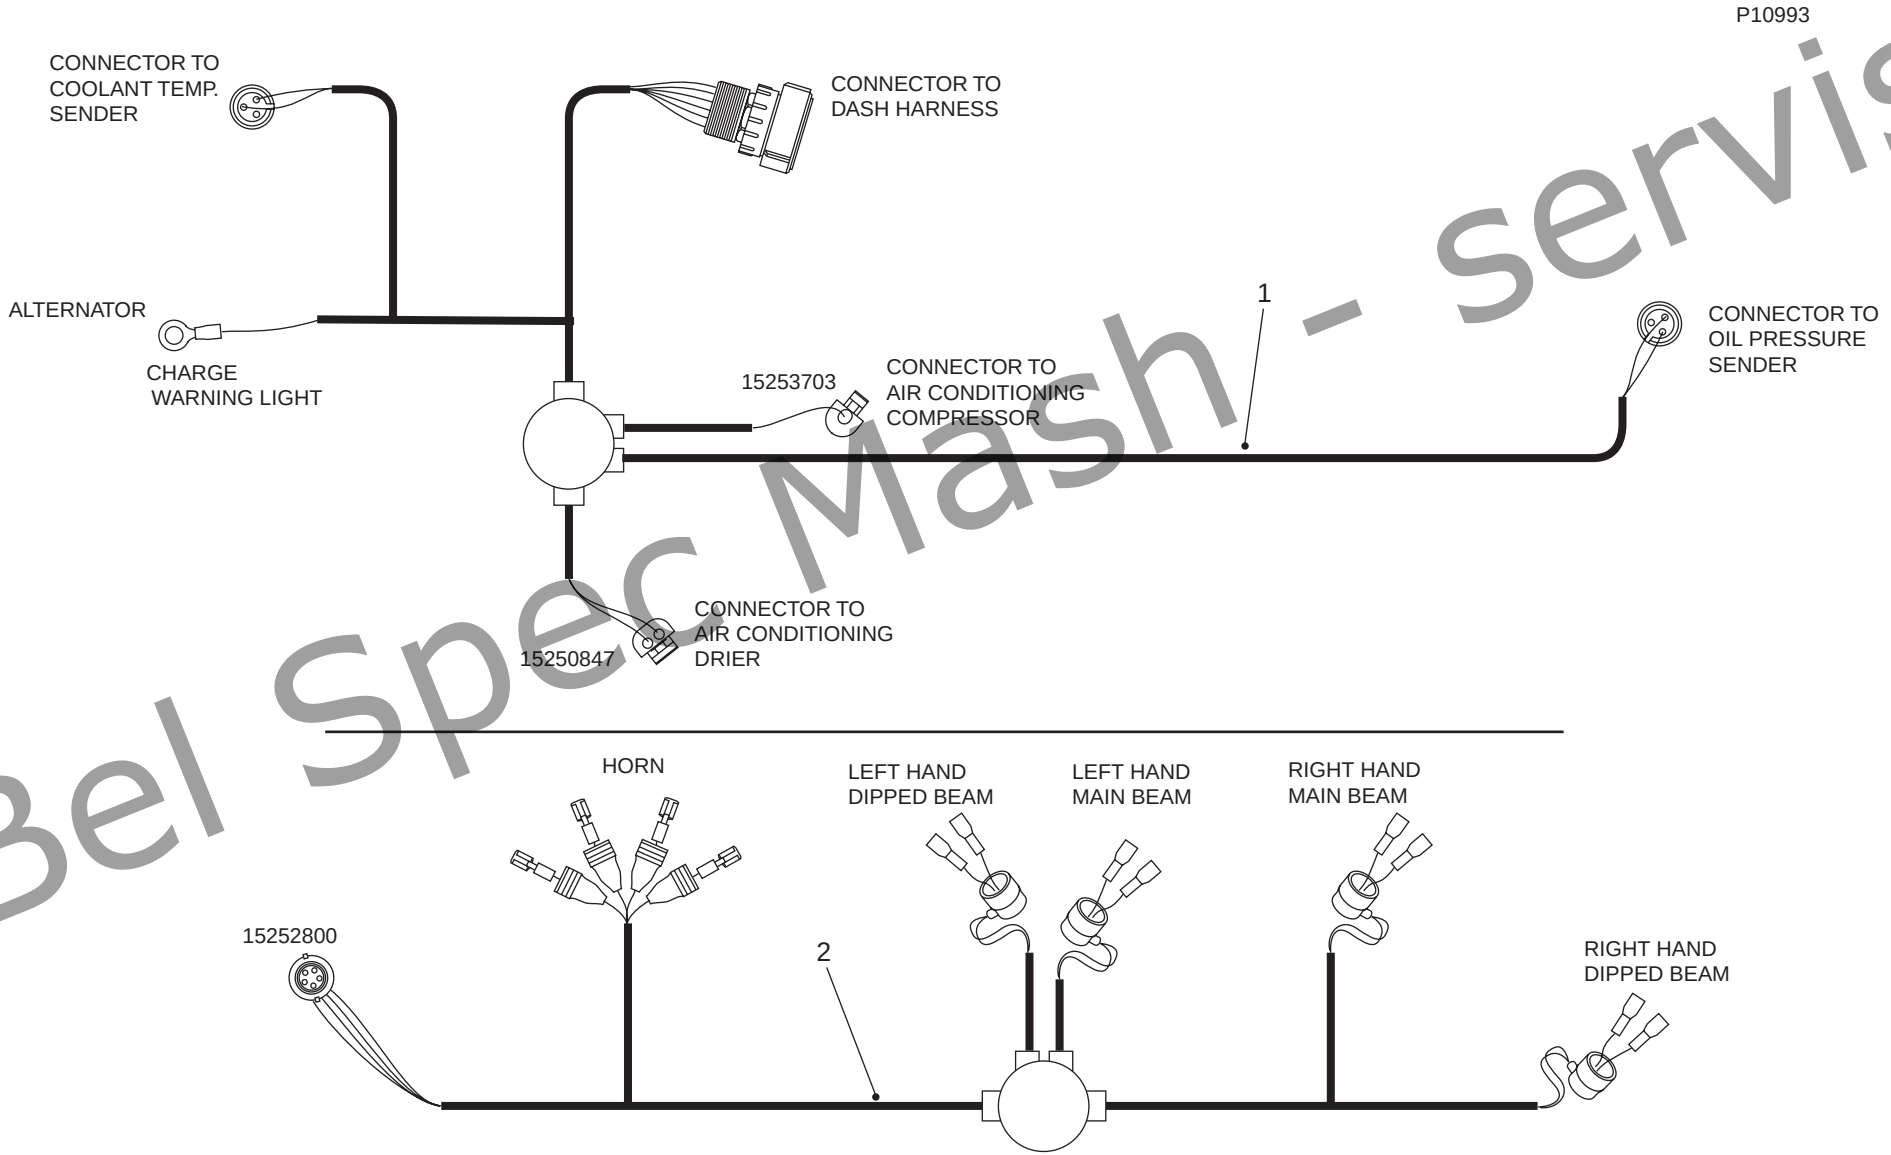


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0040-8391 CABLES/HARNESSES-CHASS/ENG
FROM SERIAL NO. T8391011

DRAWING NO. 10993B

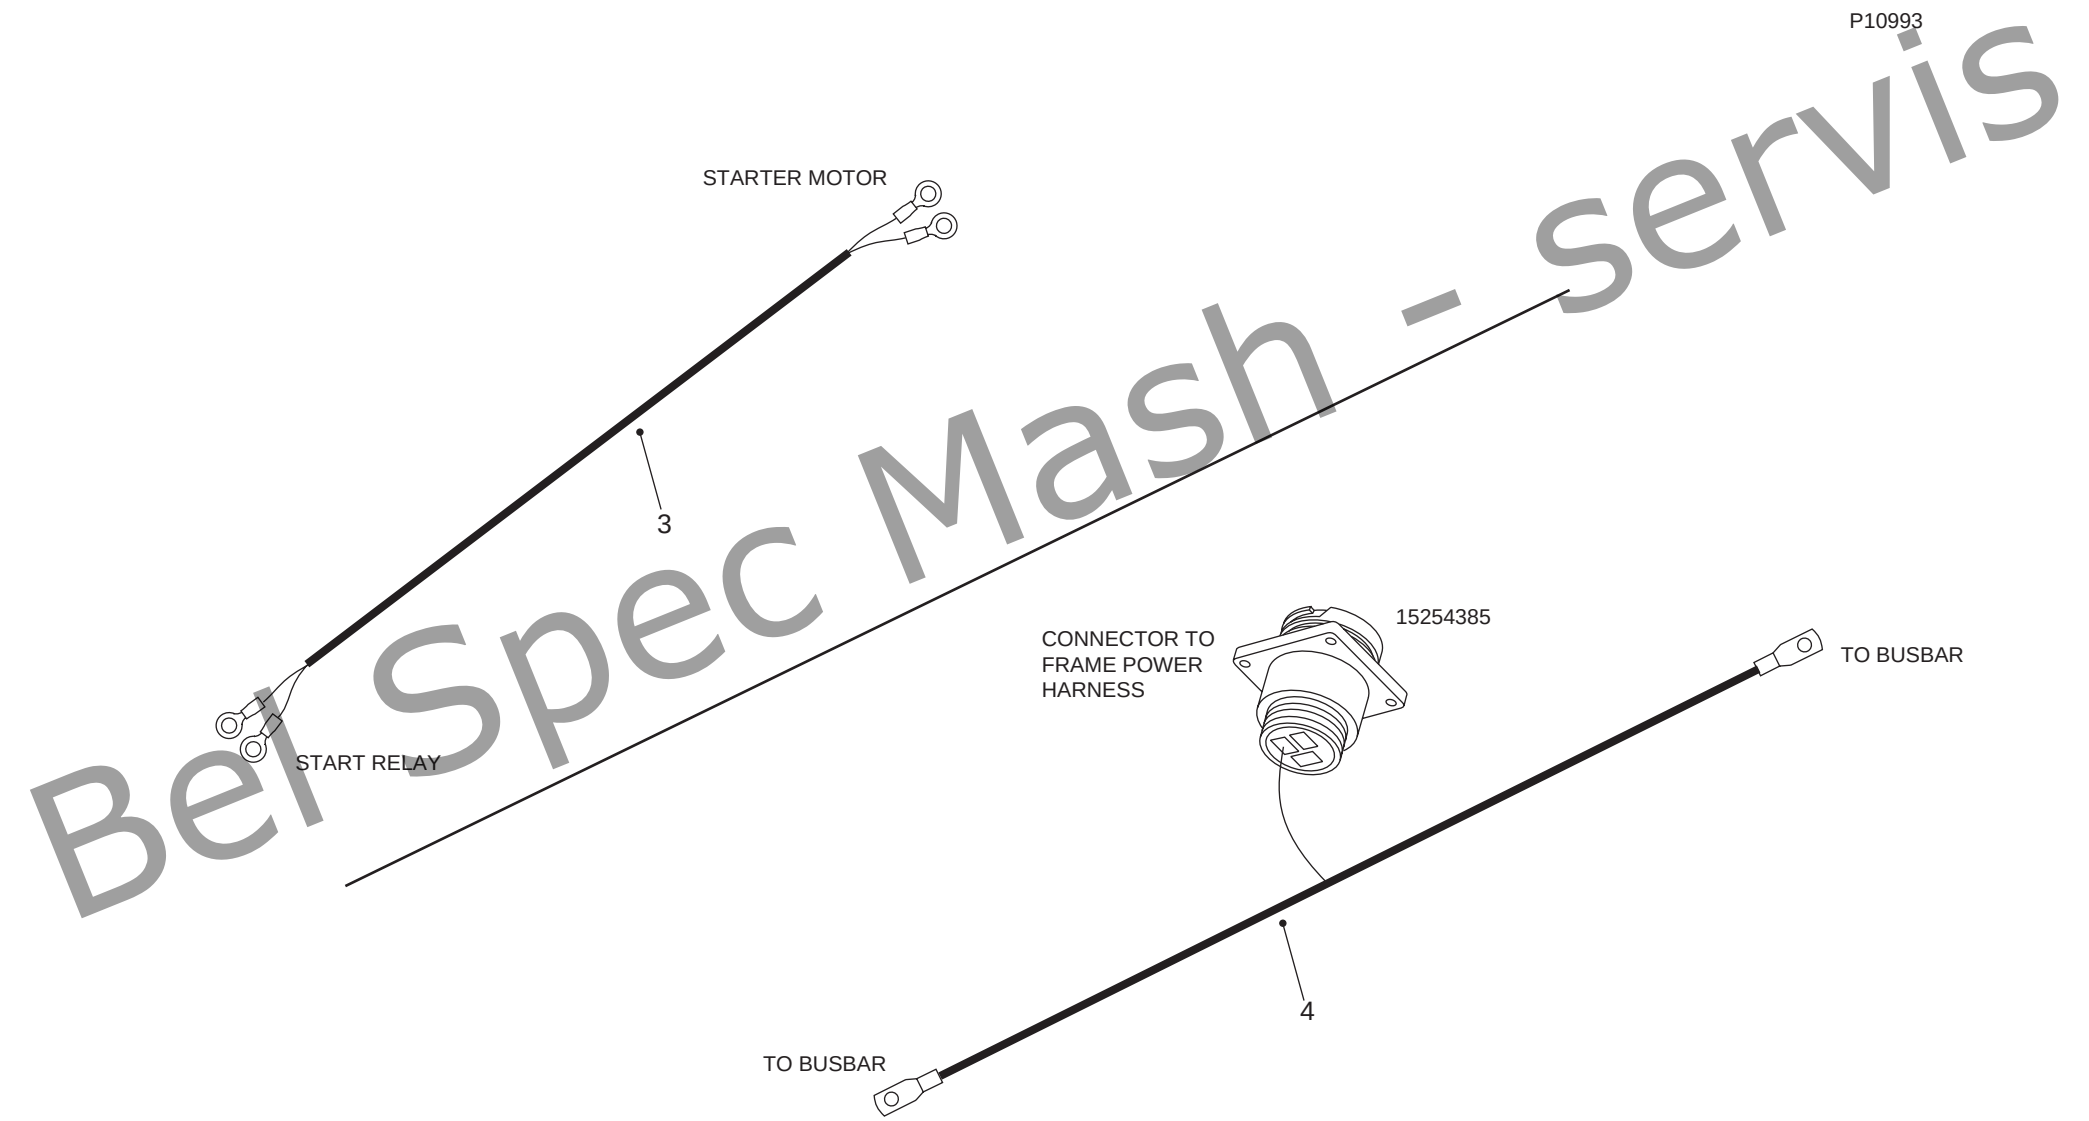


Bel Spec Mash - servis

https://truckmanualshub.com/

R2 08/03 (ECN 105264, ECN 105815)

190-0040-8391 CABLES/HARNESSES-CHASS/ENG
FROM SERIAL NO. T8391011

DRAWING NO. 10993C

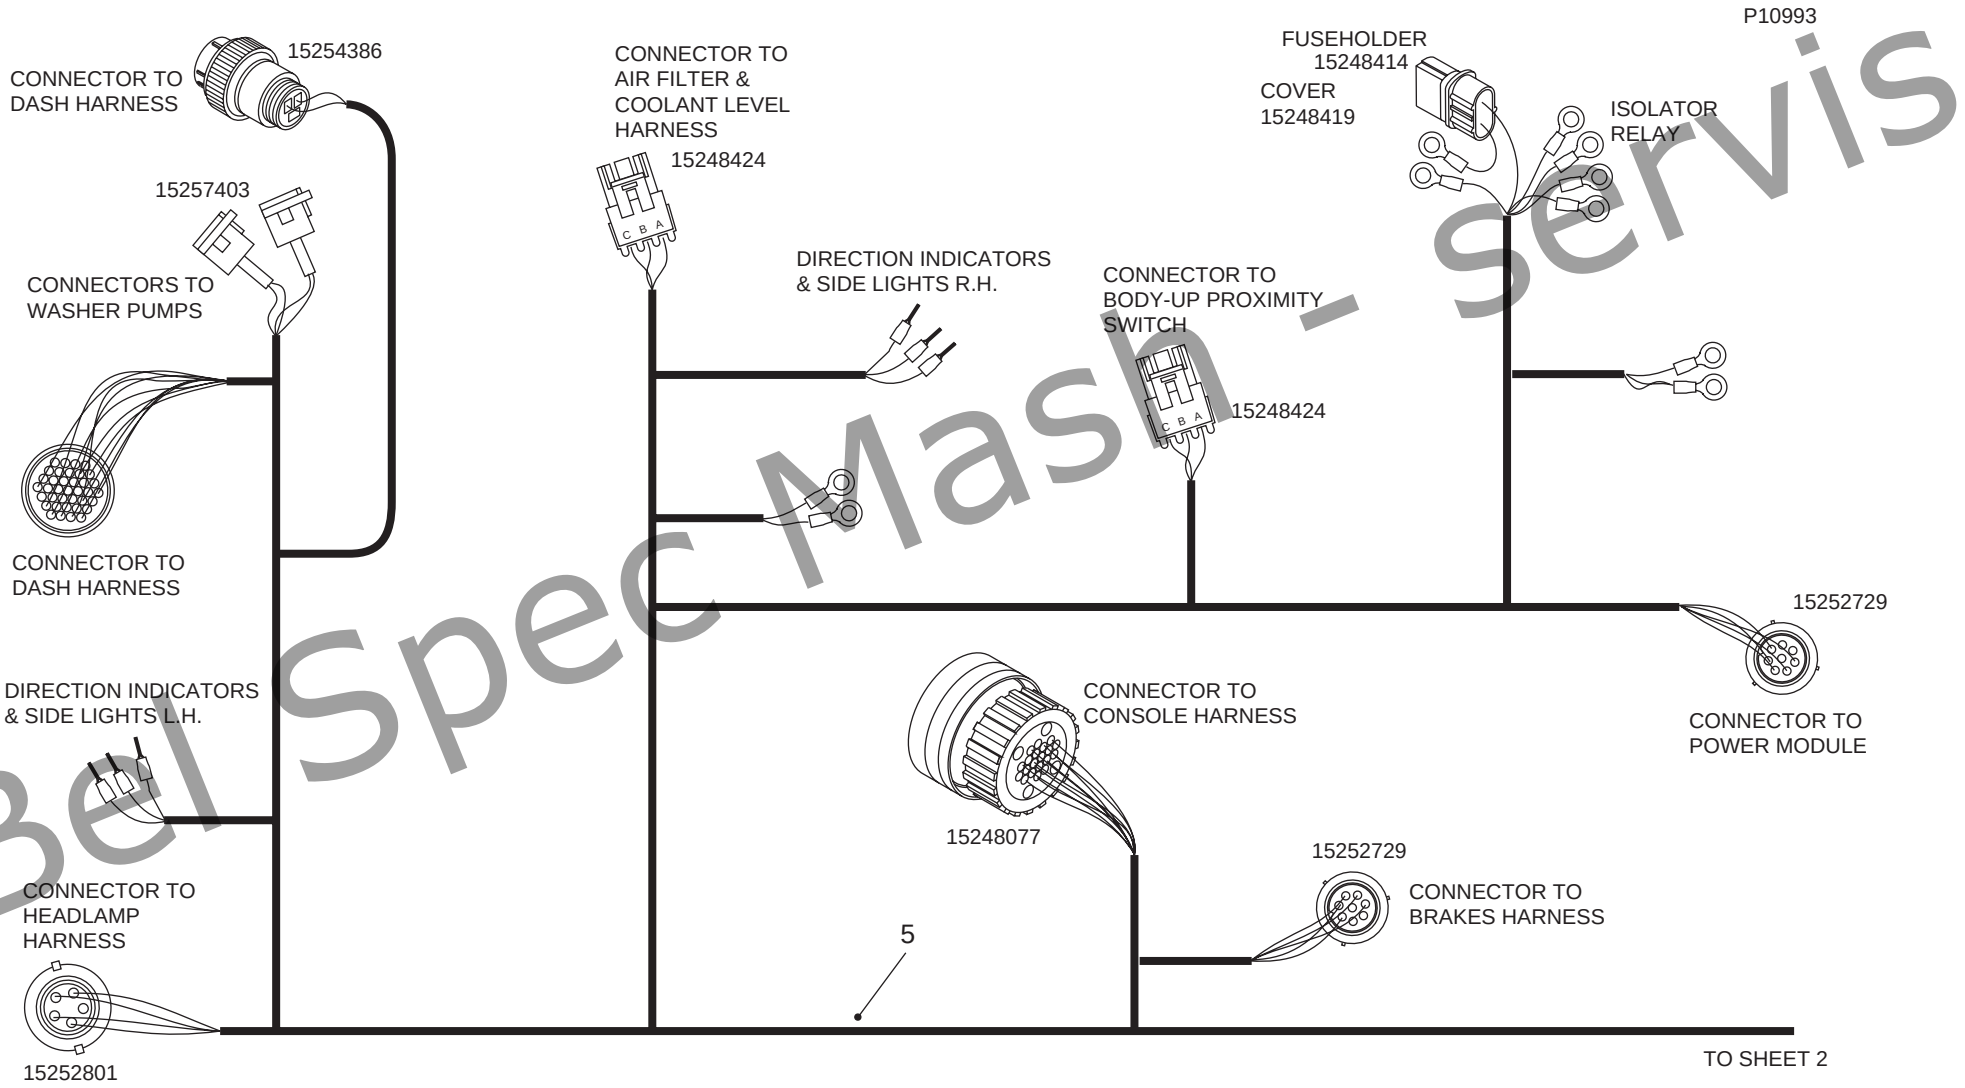


SHEET 1

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0040-8391 CABLES/HARNESSES-CHASS/ENG
FROM SERIAL NO. T8391011

DRAWING NO. 10993D

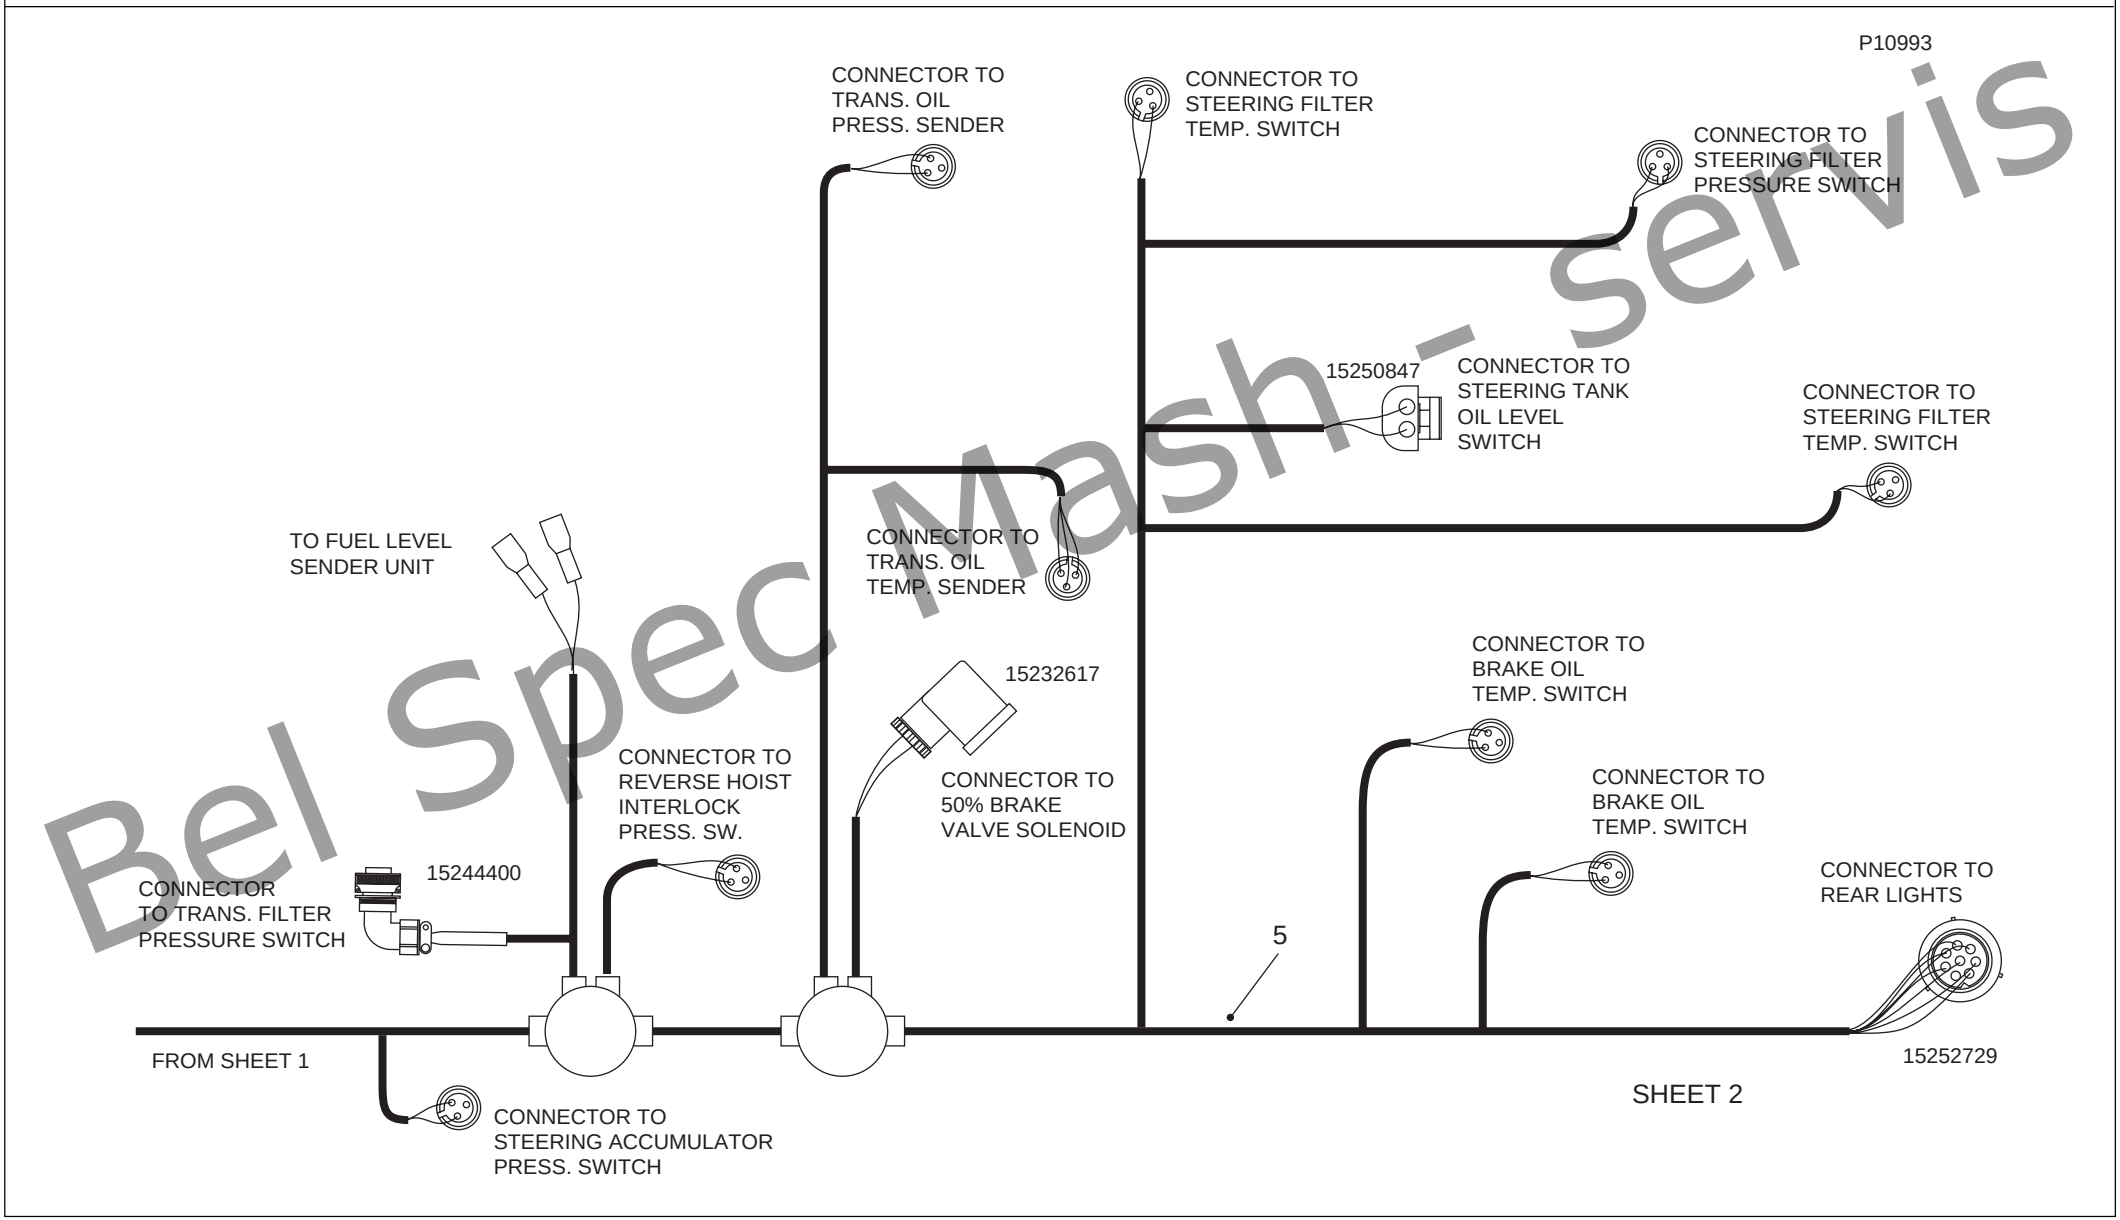

Bel Spec Mash- servis

R2 08/03 (ECN 105264, ECN 105815)


https://truckmanualshub.com/

R2 08/03 (ECN 105264, ECN 105815)

190-0040-8391 CABLES/HARNESSES-CHASS/ENG

FROM SERIAL NO. T8391011

DRAWING NO. 10993E

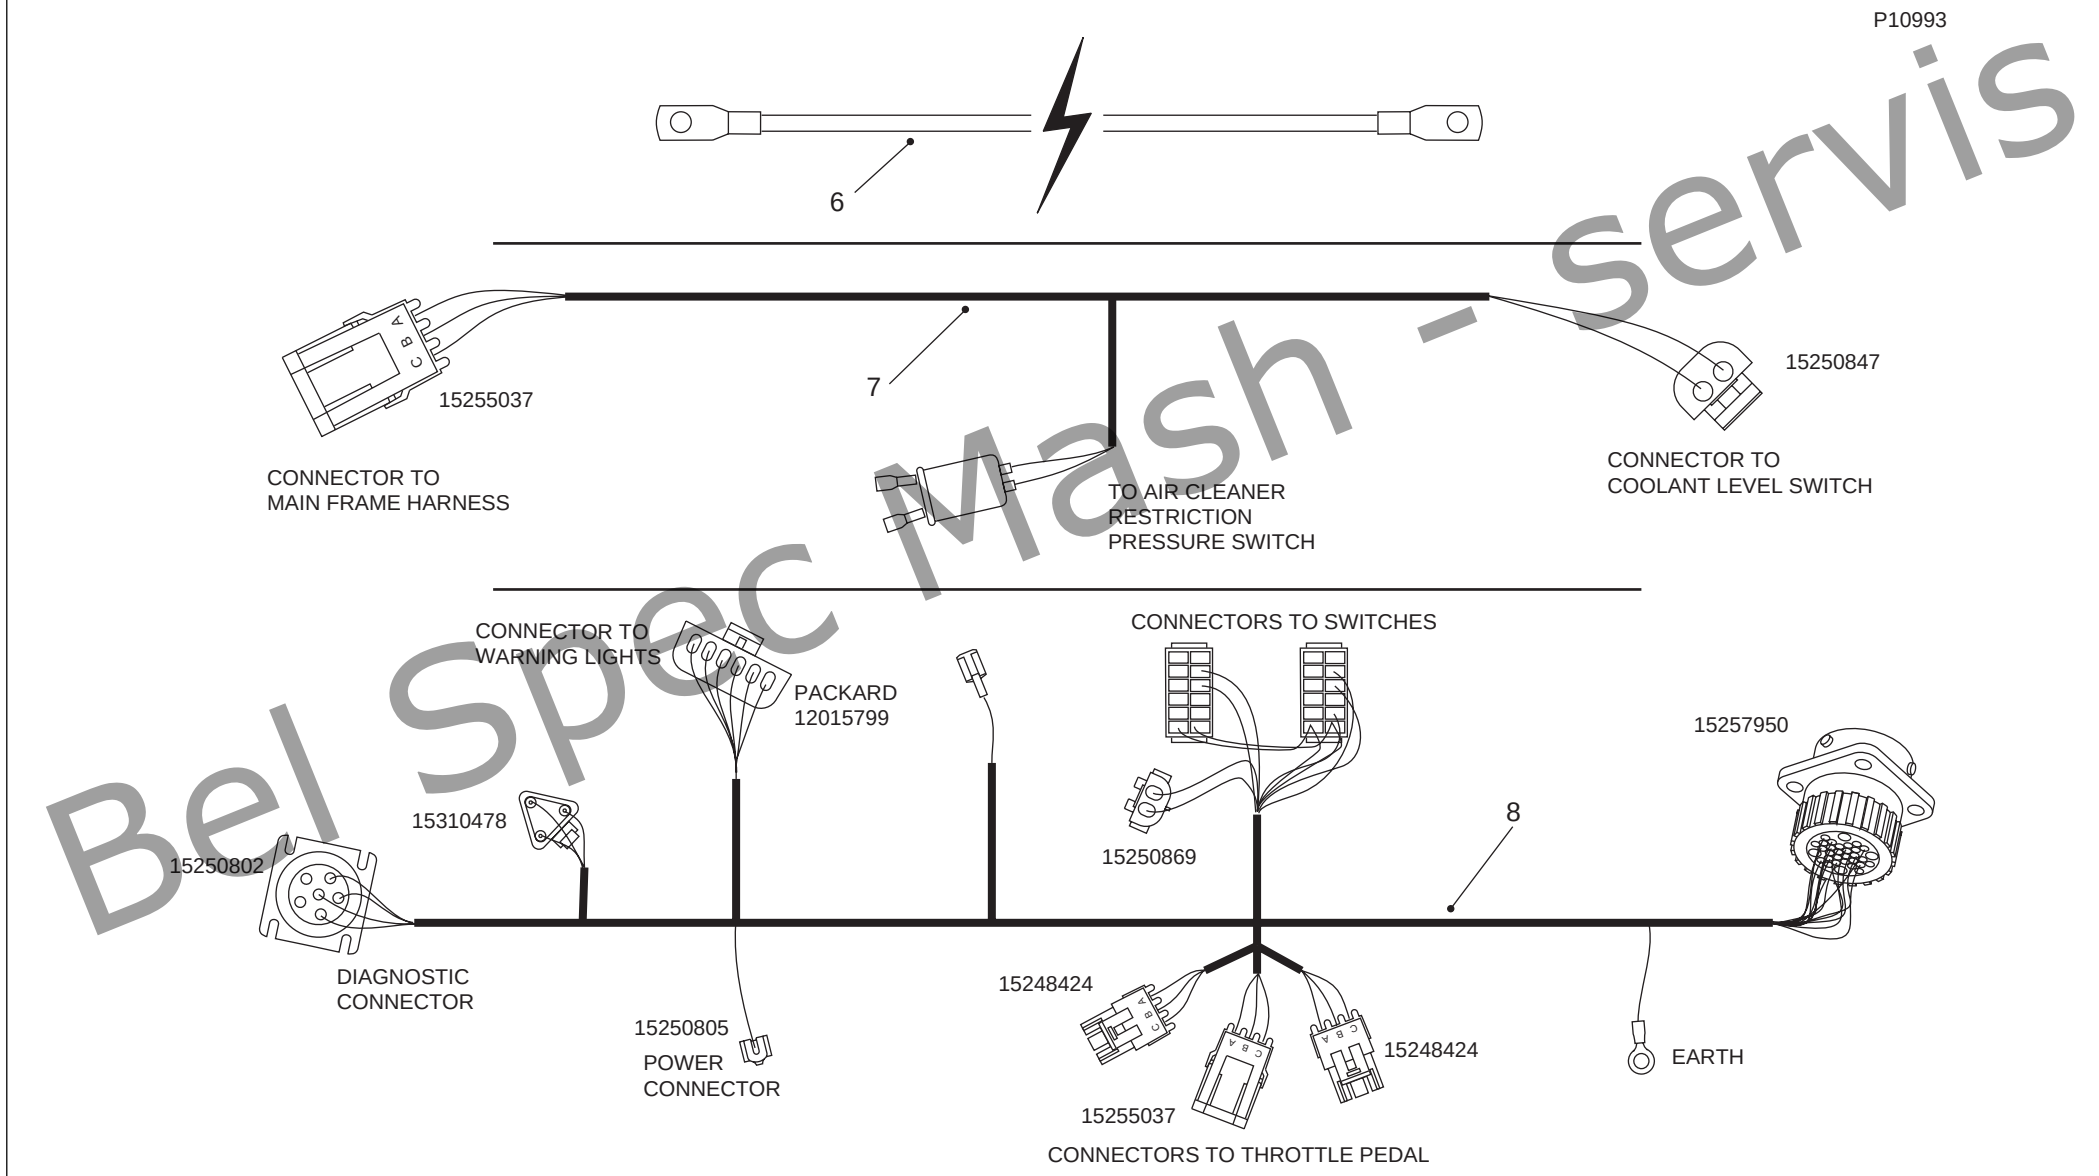


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0040-8391 CABLES/HARNESSES-CHASS/ENG
FROM SERIAL NO. T8391011

DRAWING NO. 10993F

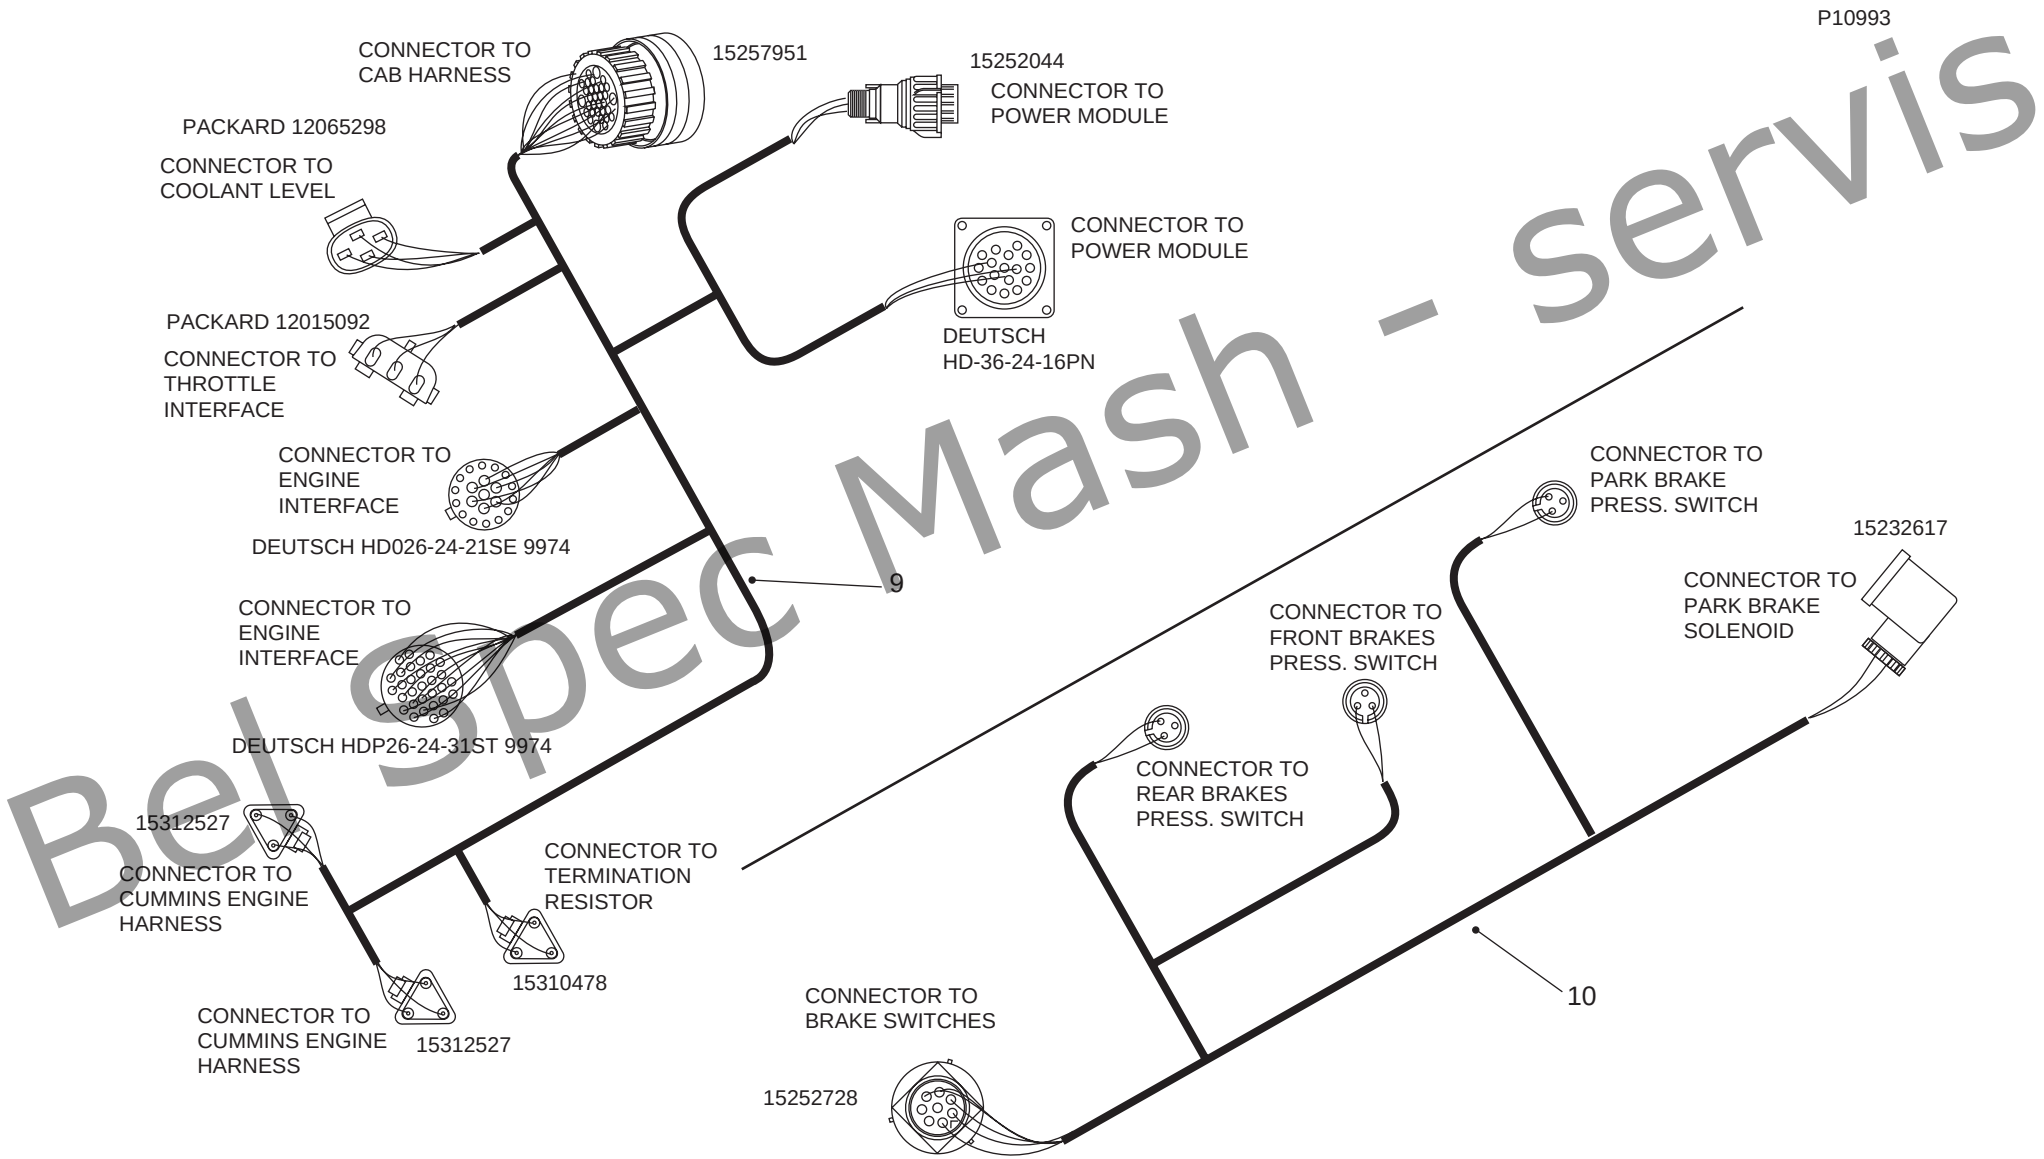

Bel Spec Mash - servis

R2 08/03 (ECN 105264, ECN 105815)


https://truckmanualshub.com/

R2 08/03 (ECN 105264, ECN 105815)

190-0040-8391 CABLES/HARNESSES-CHASS/ENG
FROM SERIAL NO. T8391011

DRAWING NO. 10993G

P10993

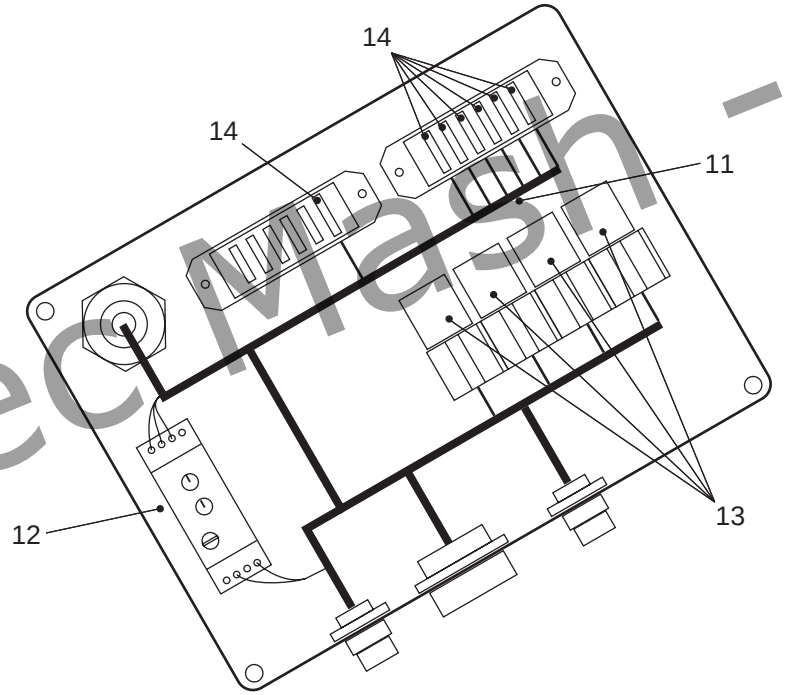

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0040-8391 CABLES/HARNESSES-CHASS/ENG
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15314234	HARNESS-ENGINE		
	002	001	15314313	HARNESS-HEADLAMPS	T8391011	T8391053
	002	001	15317354	HARNESS-HEADLAMPS	T8391054	
	003	001	15304228	HARNESS-RELAYS		
	004	001	15255926	HARNESS-BATT/ALT		
	005	001	15314312	HARNESS-FRAME	T8391011	T8391039
	005	001	15316347	HARNESS-FRAME	T8391040	
	006	001	15253344	CABLE-ALTERNATOR		
	007	001	15255038	HARNESS-AIR FILTERS		
	008	001	15310418	HARNESS-ENG INTERFACE		
	009	001	15314304	HARNESS-ENGINE INTERFA		
	010	001	15300384	HARNESS-BRAKE		
	011	001	15310463	HARNESS-POWER MODULE		
	012	001	15302871	.TIMER RELAY		
	013	004	15256444	.RELAY		
	014	007	15247611	.FUSE-15AMP		

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0070-8391 BATTERY AND CABLES
FROM SERIAL NO. T8391011

DRAWING NO. P10726

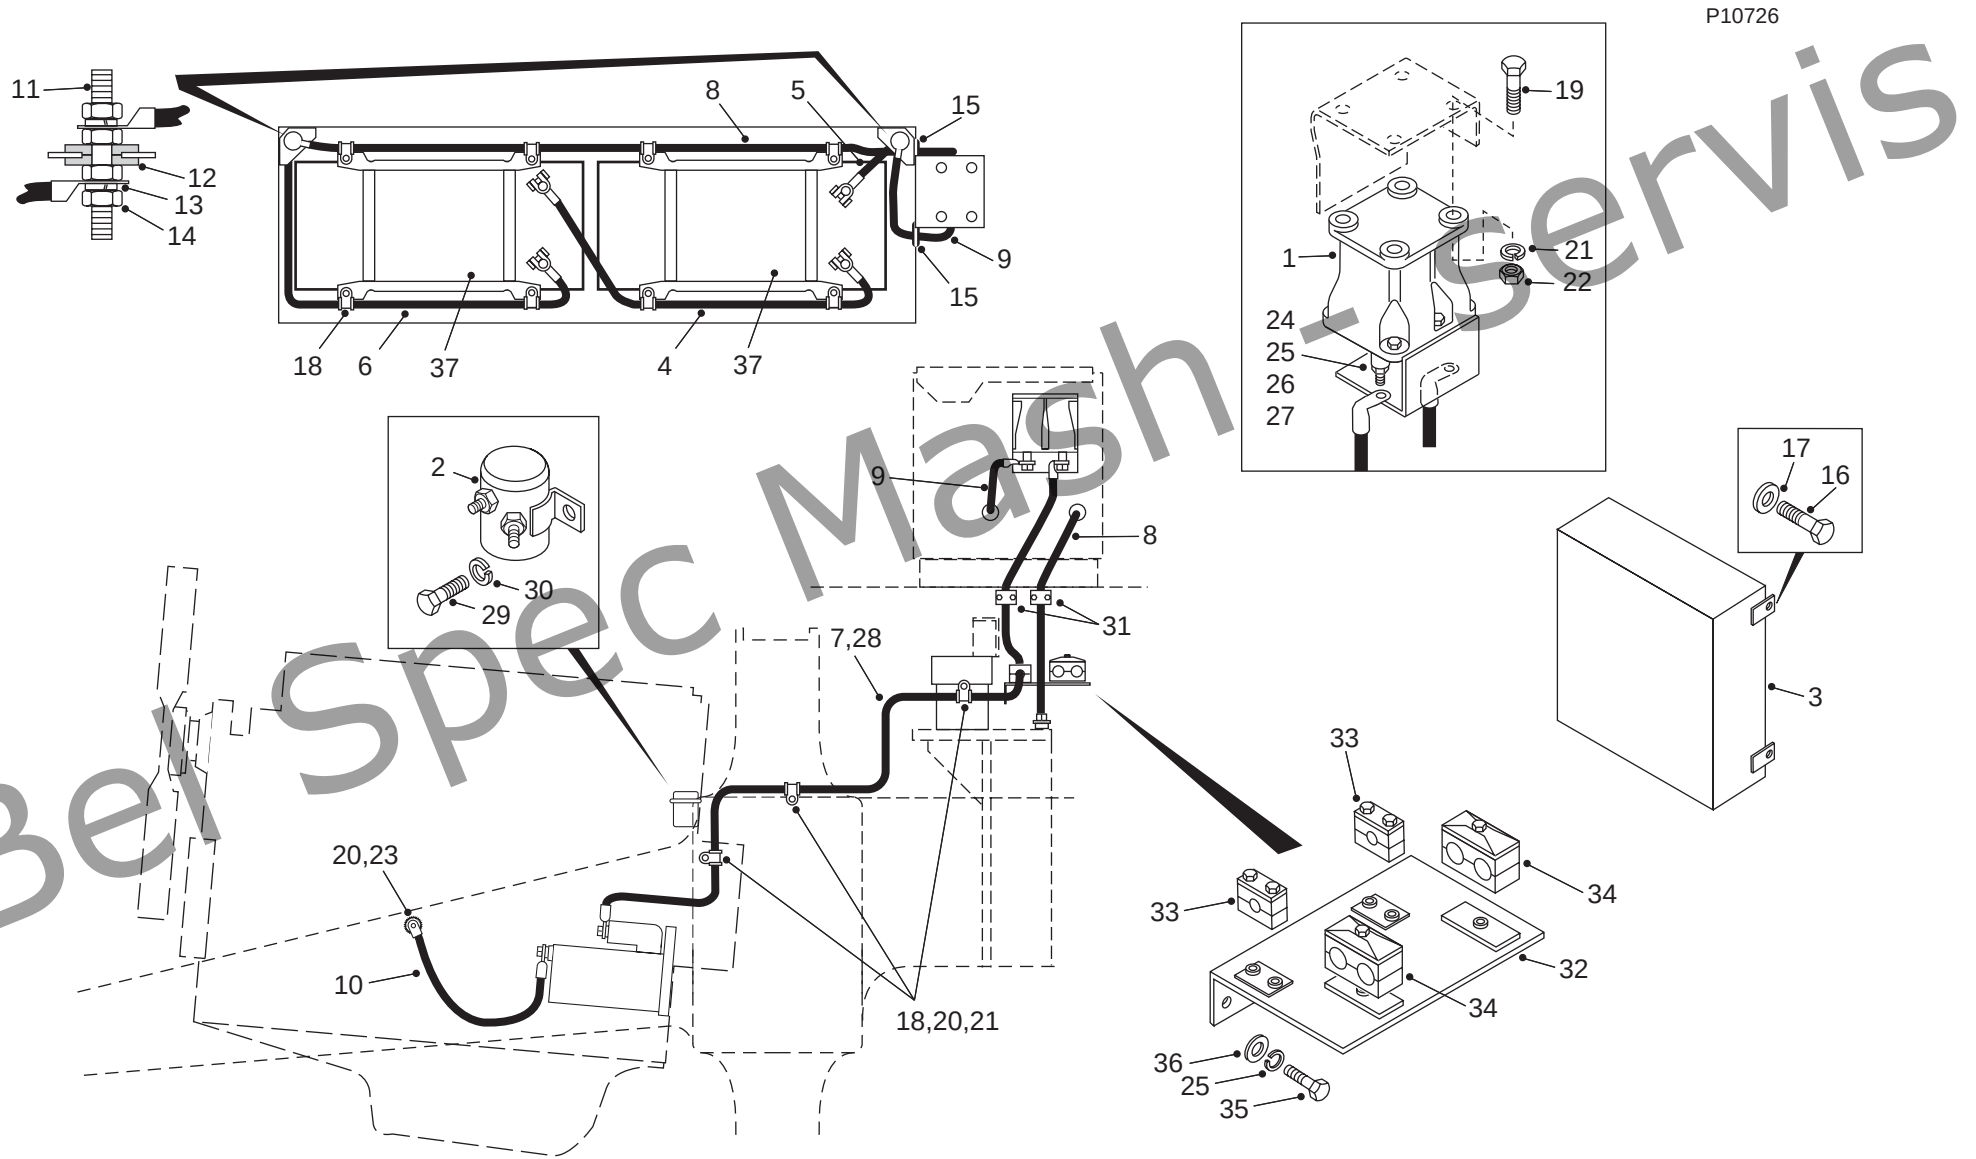

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0070-8391 BATTERY AND CABLES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15258443	ISOLATOR RELAY		
	002	001	15305862	SWITCH-MAGNETIC		
	003	001	15236325	COVER ASSY		
	004	001	15244701	CABLE-BATT/BATT		
	005	001	15310899	CABLE ASSY		
	006	001	15310419	CABLE-BATT TO POST		
	007	001	15258442	CABLE-BATTERY EARTH		
	008	001	15310420	CABLE-POST TO ISOLATOR		
	009	001	15310422	CABLE-POST TO ISOLATOR		
	010	001	15226869	CABLE-STARTER		
	011	002	15300941	ROD-BRASS		
	012	004	15300379	BUSH		
	013	004	15252130	WASHER-SPRING		
	014	008	15252126	NUT		
	015	002	09352841	GROMMET		
	016	004	00179793	BOLT		
	017	004	00103319	LOCKWASHER		
	018	009	09131853	CLIP		
	019	004	00179845	BOLT		
	020	004	00179835	BOLT		
	021	007	00108580	LOCKWASHER		
	022	004	00102635	NUT		
	023	004	00115550	LOCKWASHER		
	024	002	00102634	NUT		
	025	002	00108580	LOCKWASHER		
	026	002	00179818	BOLT		
	027	002	00103320	LOCKWASHER		
	028	ASR	07551826	HOSE-BULK		
	029	002	06350612	SCREW		
	030	002	07160630	WASHER		
	031	002	15253869	CLAMP		
	032	001	15310907	PLATE ASSY		
	033	002	15253875	CLAMP-PIPE		
	034	002	15253109	CLAMP-PIPE		
	035	002	00179839	BOLT		
	036	002	00106263	WASHER		
	037	002	15226158	BATTERY		

PerSpec Mash - servis

https://truckmanualshub.com/

190-0080-8391 BATTERY MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P10731

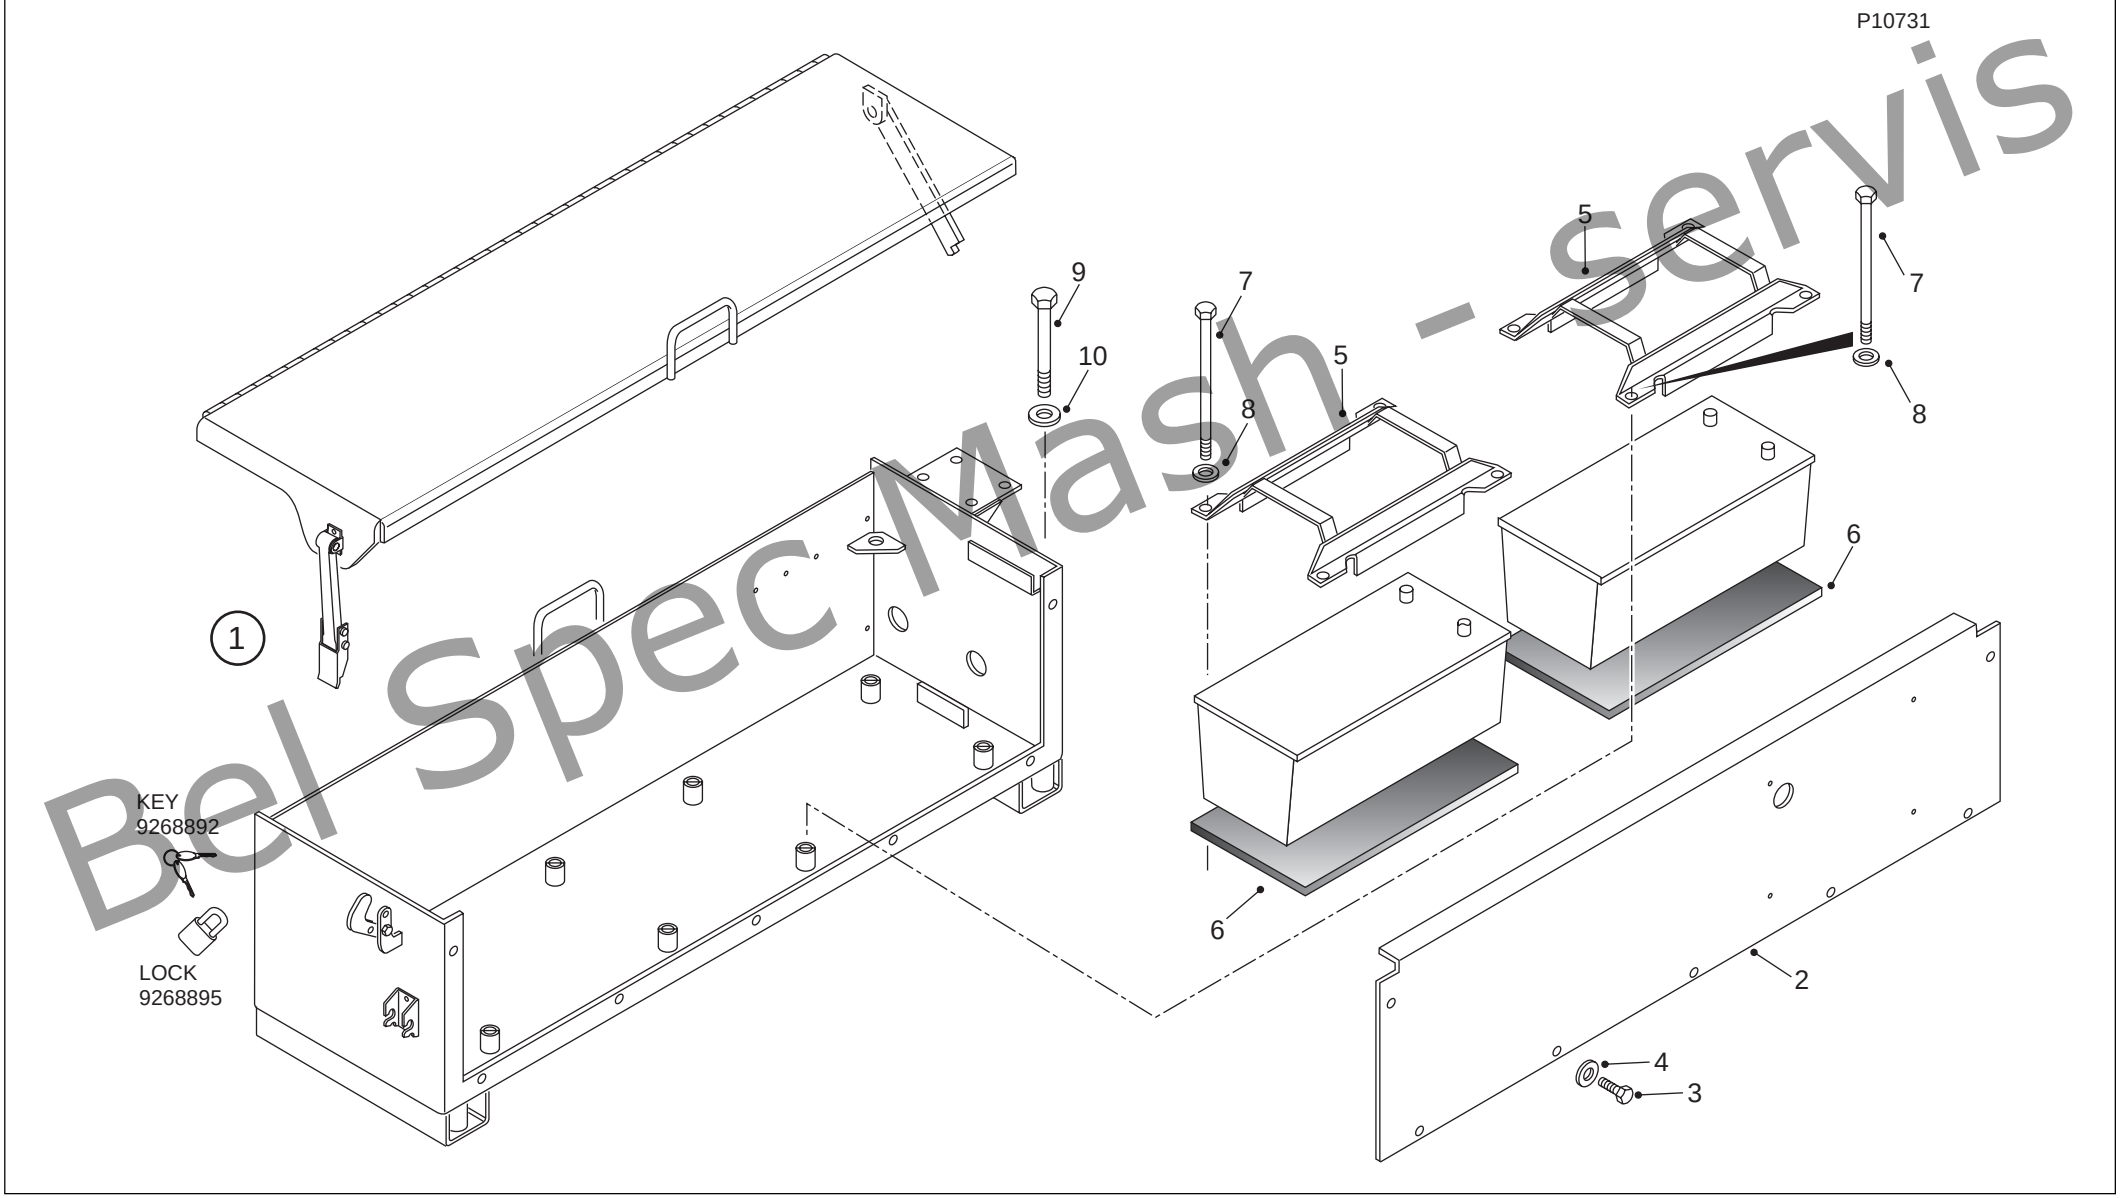

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0080-8391 BATTERY MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15310273	BATTERY BOX ASSY		
	002	001	15310270	.COVER		
	003	007	00454899	.BOLT		
	004	007	09060202	.WASHER-HARDENED		
	005	002	09383885	CLAMP		
	006	002	09140612	PAD		
	007	008	15233485	BOLT		
	008	008	09060202	WASHER-HARDENED		
	009	004	00190256	BOLT		
	010	004	09270000	WASHER-HARDENED		


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0100-8391 ELECTRICAL LIGHTING SYSTEM

FROM SERIAL NO. T8391011

DRAWING NO. P10196

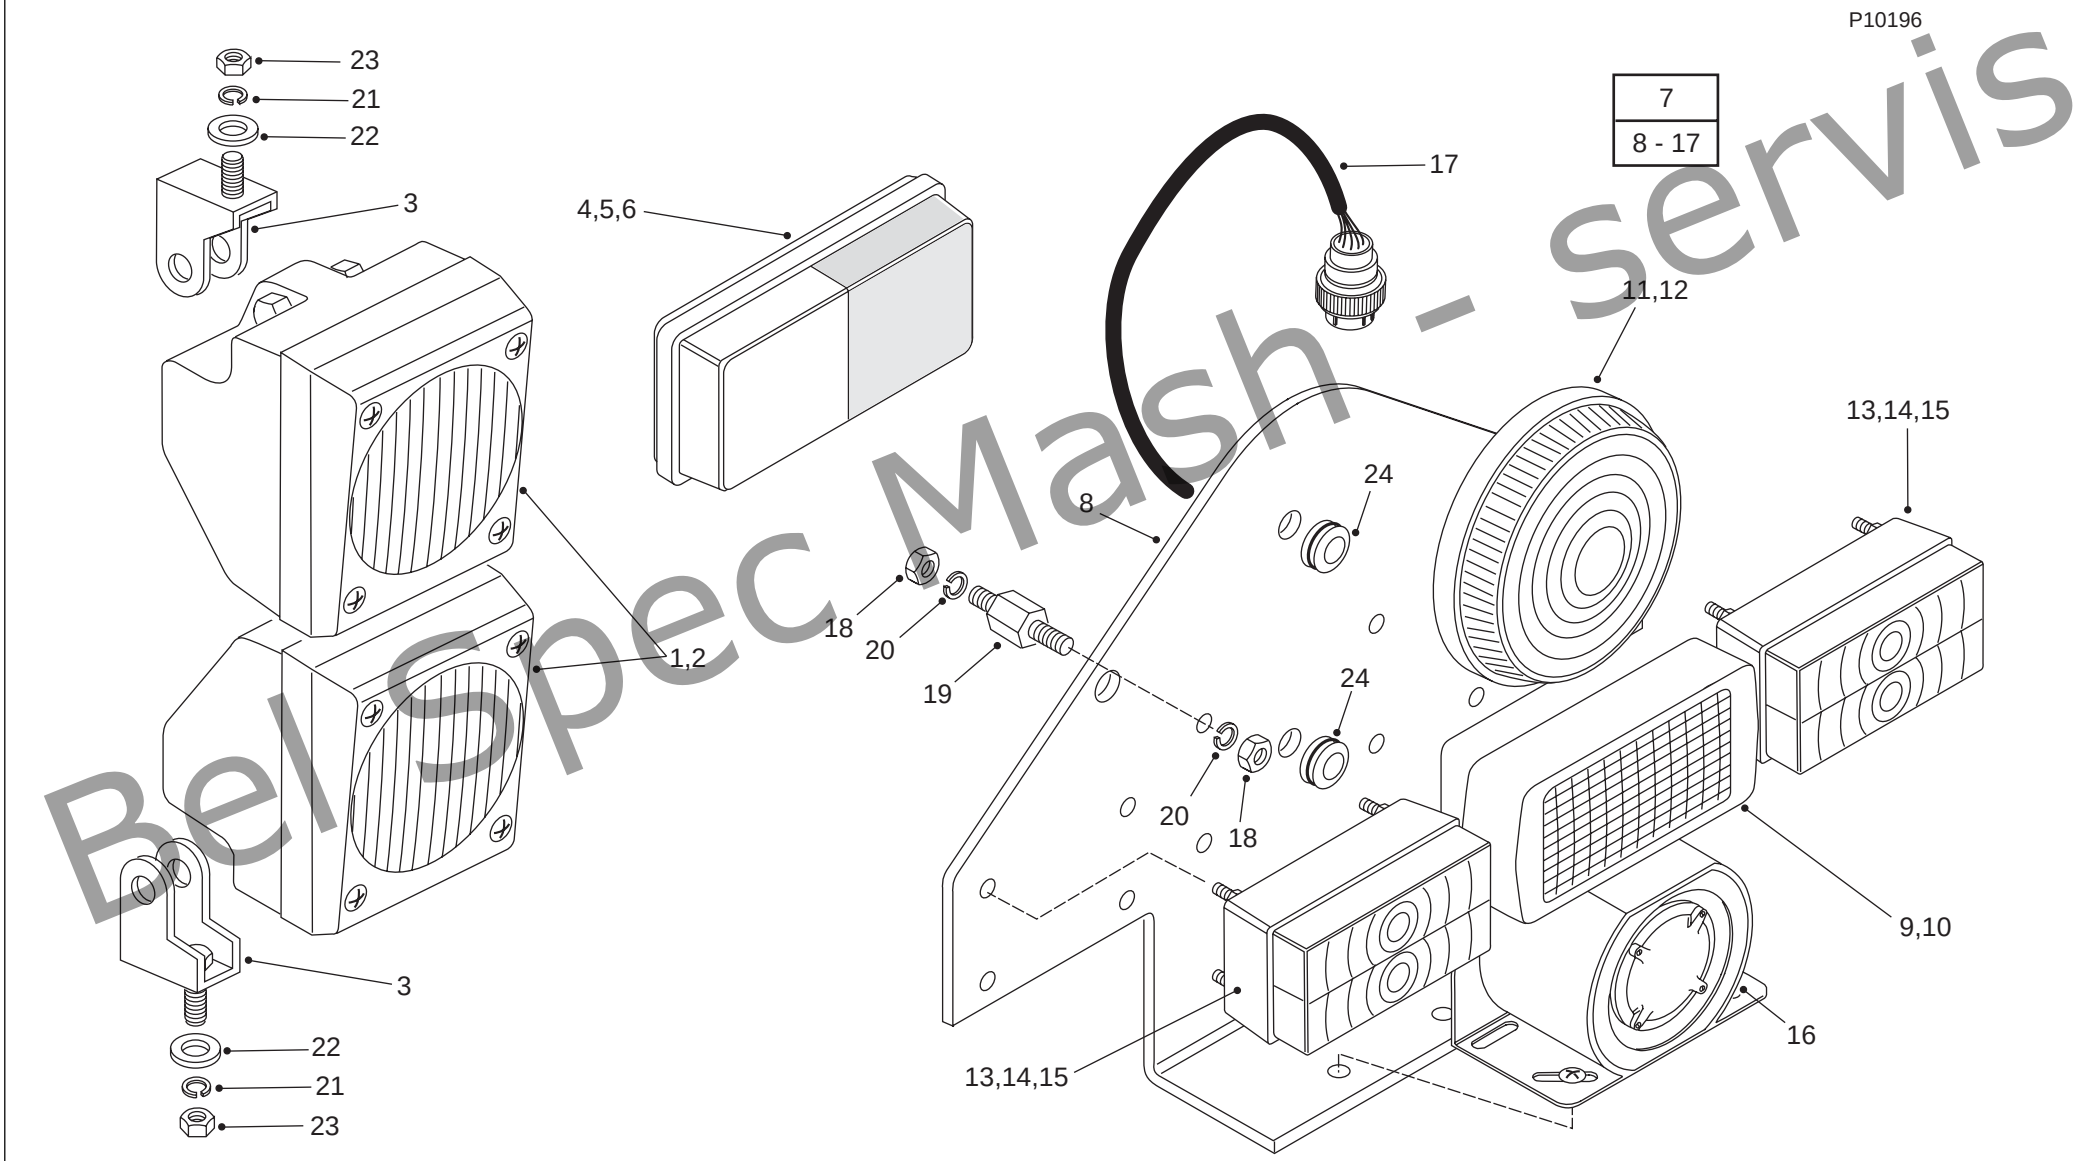

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0100-8391 ELECTRICAL LIGHTING SYSTEM
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	004	15230426	HEADLAMP		
	002	001	15271433	.BULB-H4		
	003	004	15230393	BRACKET-HEADLAMP		
	004	002	15258783	LAMP-SIDE INDICATOR		
	005	002	15258873	.BULB		
	006	002	15258872	.BULB-24V 21W H/DUTY I		
	007	001	15303141	PLATE ASSY-REAR LIGHT		
	008	001	15273640	.PLATE-LAMP MTG		
	009	001	15273641	.LAMP-REVERSE		
	010	001	15273642	.BULB 24V 70W HALOGEN		
	011	001	15273643	.LAMP-RETARDER		
	012	001	00446914	.BULB-24V 21W H/DUTY		
	013	002	15273644	.LAMP-DIR/STOP/TAIL		
	014	002	15258872	.BULB-24V 21W H/DUTY		
	015	002	15271432	.BULB-24V 5/21W H/DUTY		
	016	001	15273645	.ALARM-REVERSE		
	017	001	15273718	. HARNESS-REAR LIGHTS		
	018	008	00102634	NUT		
	019	004	09004006	SHOCK MOUNT		
	020	008	00103320	LOCKWASHER		
	021	004	00108580	LOCKWASHER		
	022	004	00106263	WASHER		
	023	004	00102635	NUT		
	024	002	00117966	GROMMET		


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0110-8391 ALTERNATOR
FROM SERIAL NO. T8391011

DRAWING NO. P10263

P10263

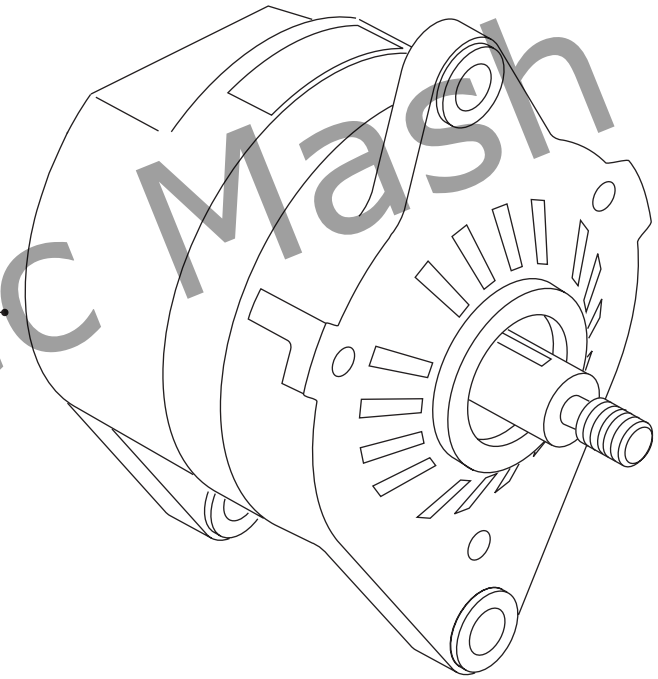

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0110-8391 ALTERNATOR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15273449	ALTERNATOR		


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0120-8391 STARTER MOTOR
FROM SERIAL NO. T8391011

DRAWING NO. P9779

P9779

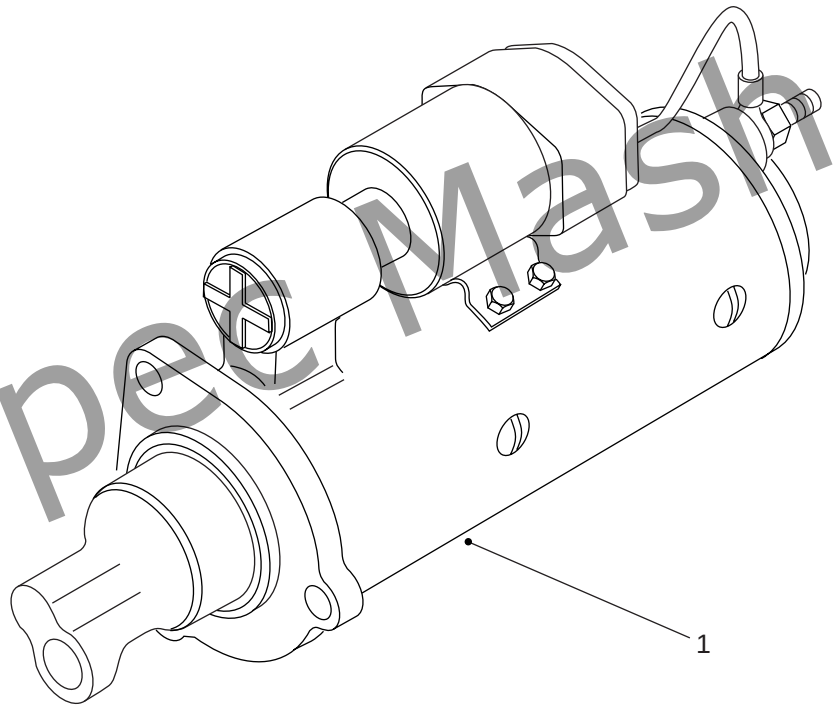

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0120-8391 STARTER MOTOR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15273450	STARTER MOTOR-PRE LUB		


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0270-8391 SWITCHES AND SENSORS

FROM SERIAL NO. T8391011

DRAWING NO. P10977

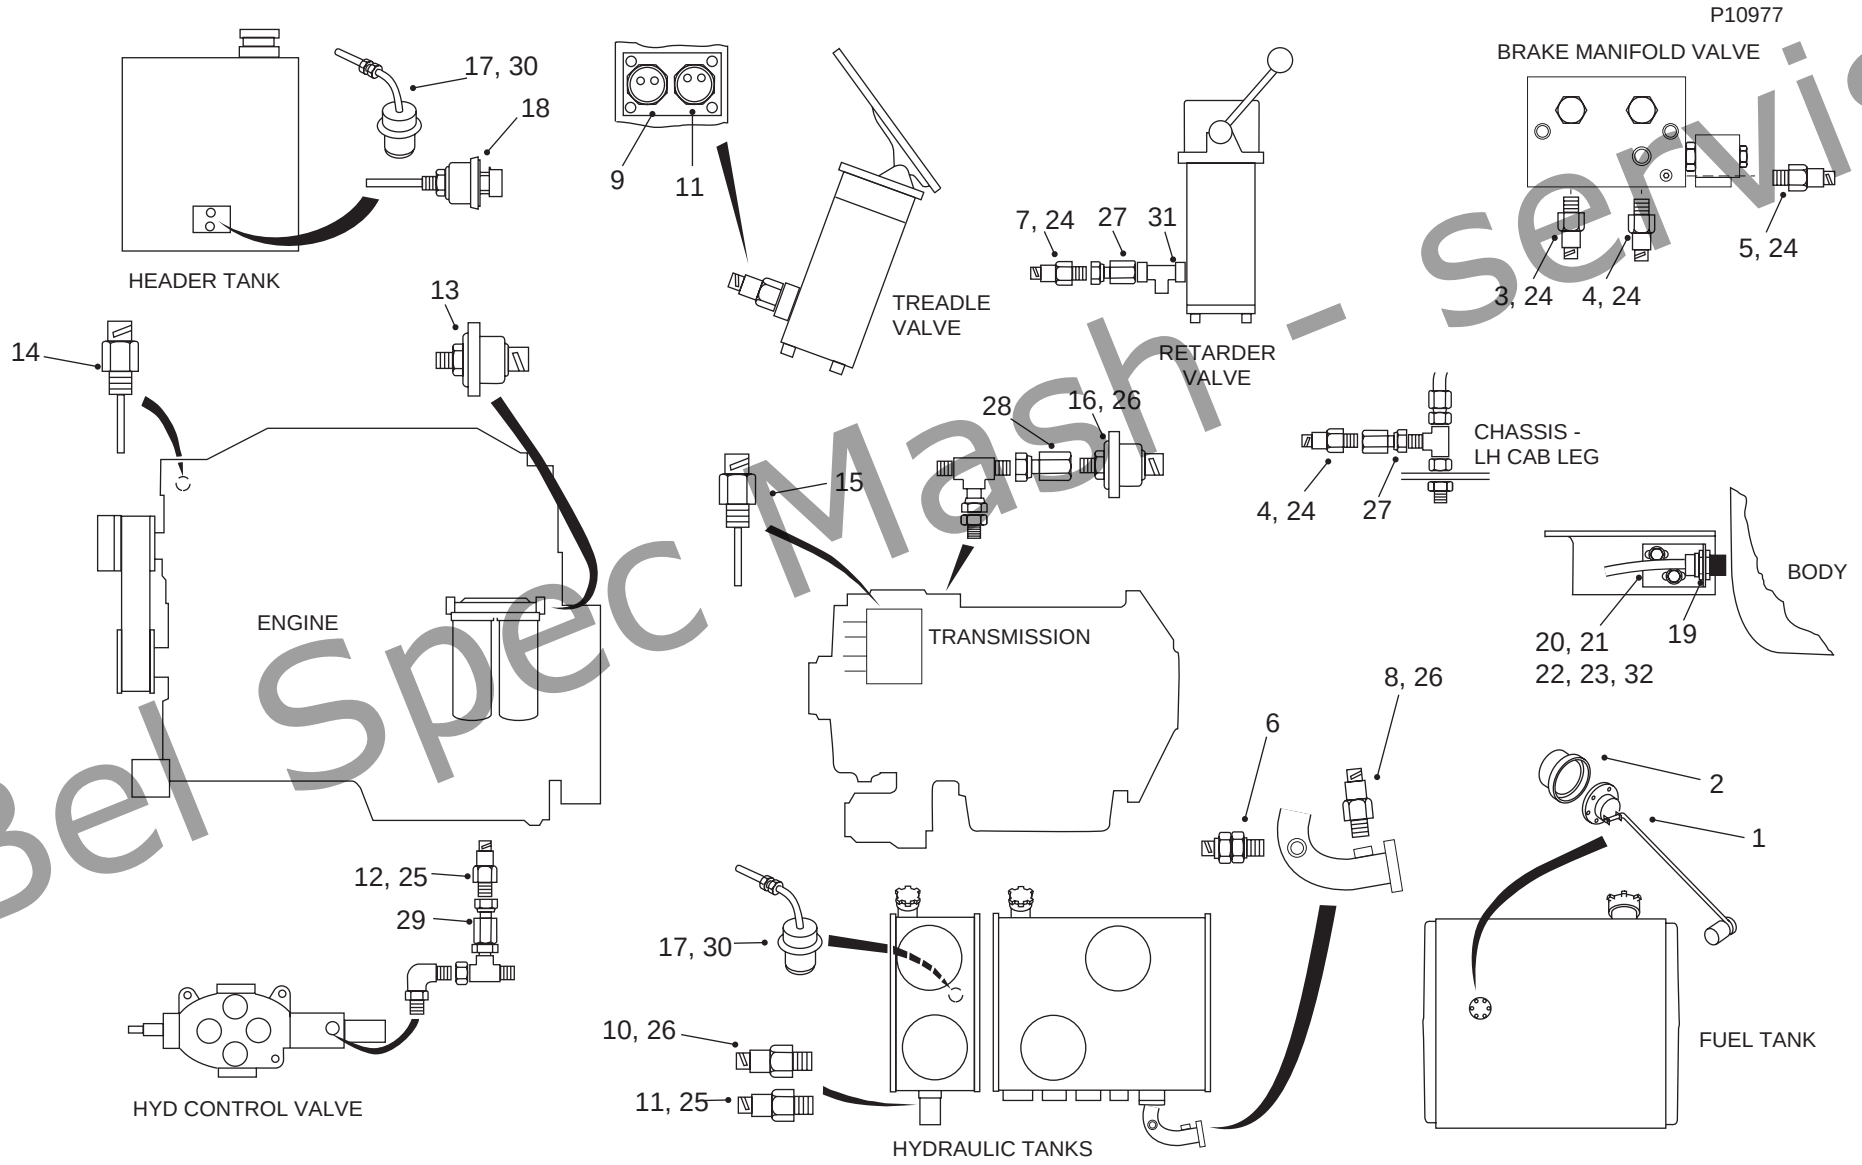

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0270-8391 SWITCHES AND SENSORS
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15300412	SENDER-FUEL LEVEL		
	002	001	15310614	COVER-FUEL SENDER		
	003	001	15300082	SWITCH-PRESSURE		
	004	002	15300083	SWITCH-PRESSURE		
	005	001	15300084	SWITCH-PRESSURE		
	006	001	15310396	SWITCH-TEMPERATURE		
	007	001	15300086	SWITCH-PRESSURE		
	008	001	15300087	SWITCH-TEMPERATURE		
	009	001	15300090	SWITCH-PRESSURE		
	010	001	15300089	SWITCH-TEMPERATURE		
	011	002	15300088	SWITCH-PRESSURE		
	012	001	15303318	SWITCH-PRESSURE		
	013	001	15300116	SENDER-PRESSURE		
	014	001	15300117	SENDER-TEMPERATURE		
	015	001	15300118	SENDER-TEMPERATURE		
	016	001	15300119	SENDER-PRESSURE		
	017	002	15236152	SWITCH-LEVEL FLOAT		
	018	001	15257878	SENSOR-COOLANT LEVEL		
	019	001	15259165	SWITCH ASSY		
	020	001	15300933	BRACKET		
	021	002	00179795	BOLT		
	022	002	00103339	WASHER		
	023	002	00109084	NUT		
	024	005	15227711	SEAL		
	025	002	15301169	SEAL		
	026	003	15229742	SEAL		
	027	002	15301115	ADAPTOR		
	028	001	15301114	ADAPTOR		
	029	001	15301113	ADAPTOR		
	030	002	02222651	WASHER		
	031	001	15251951	TEE		
	032	002	00103319	LOCKWASHER		

RepSpec Mash - servis

https://truckmanualshub.com/

190-0300-8391 RADIO CASSETTE AND SPEAKERS
FROM SERIAL NO. T8391011

DRAWING NO. P10895

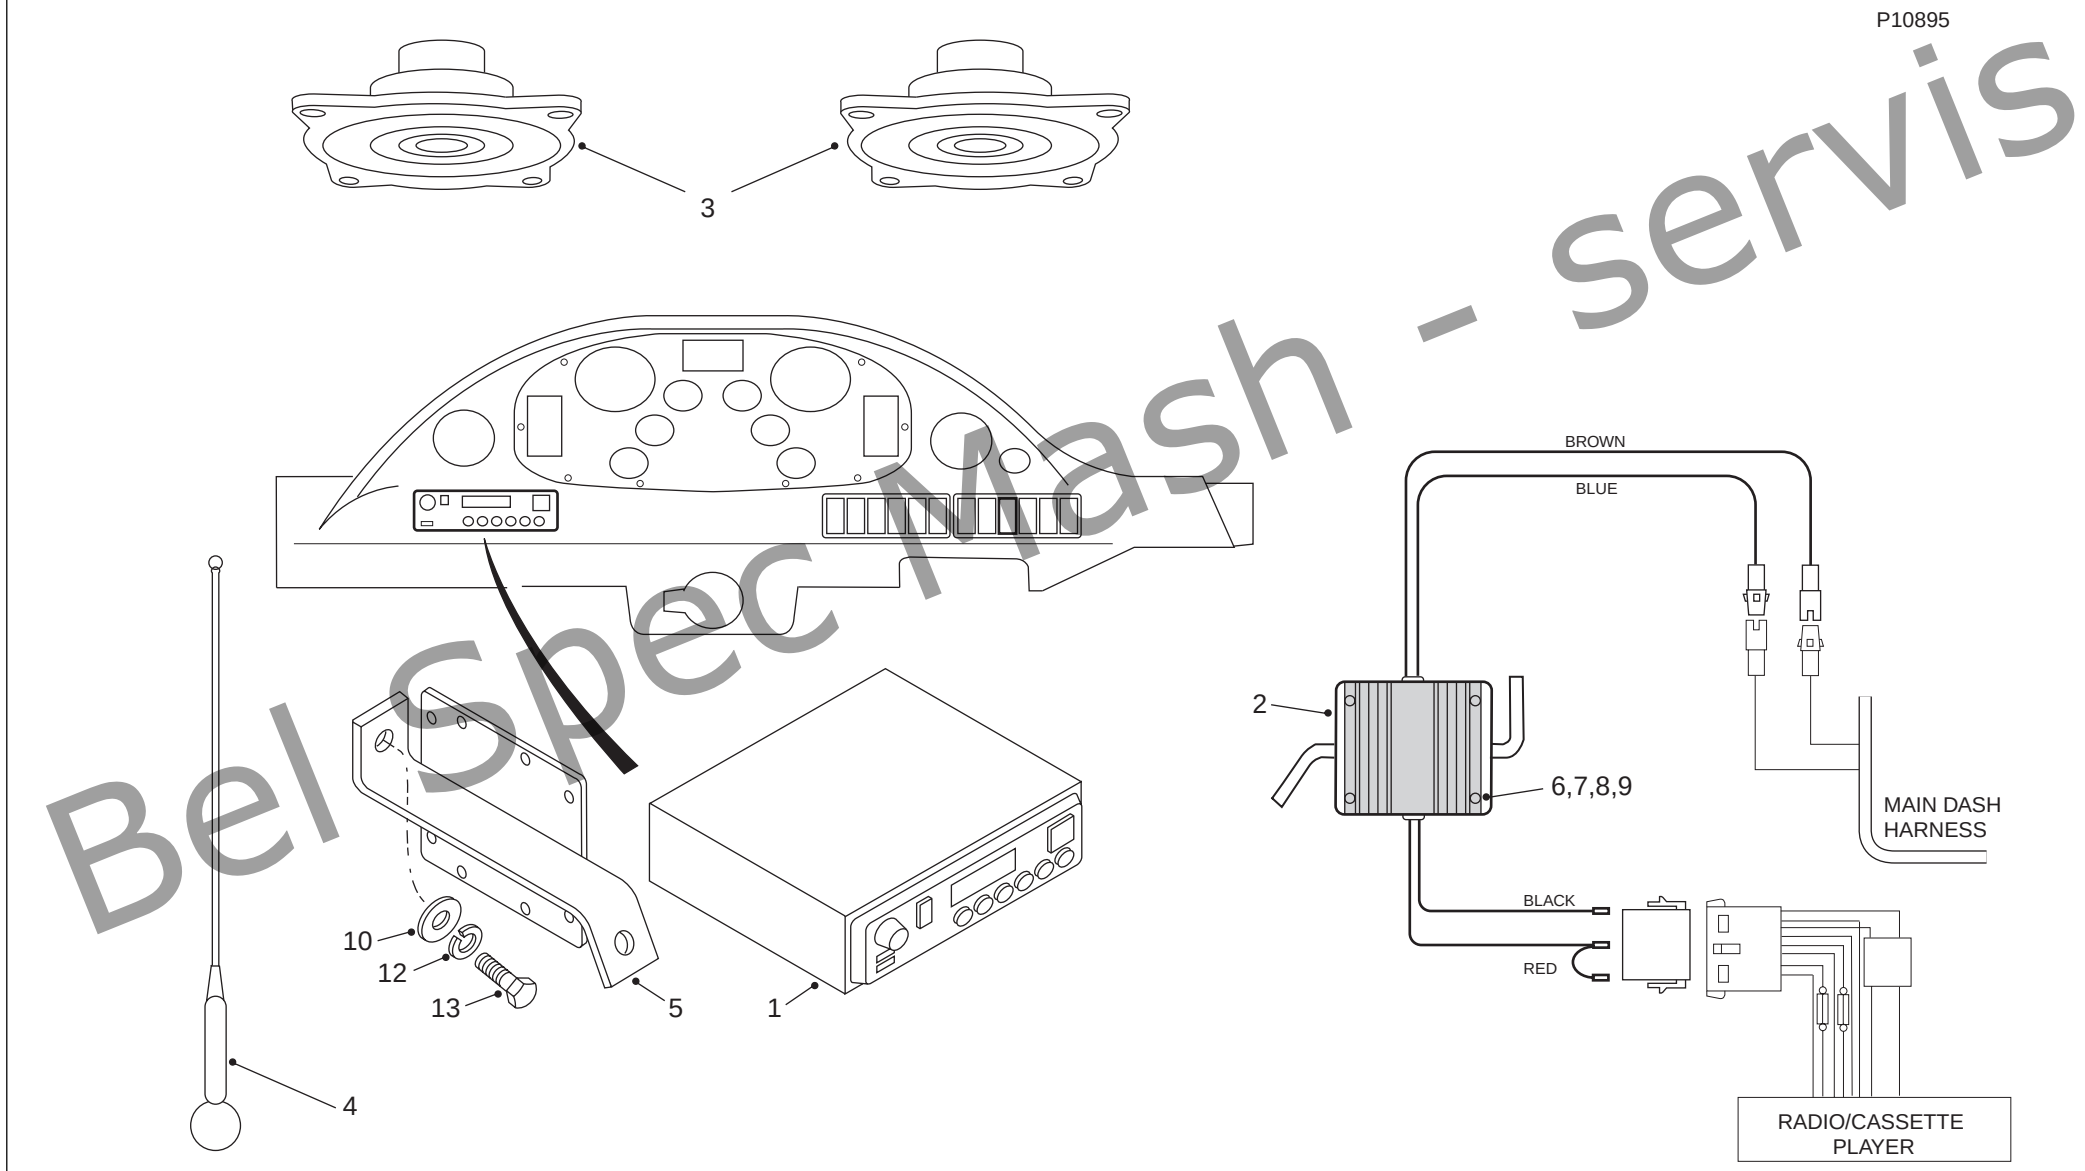

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0300-8391 RADIO CASSETTE AND SPEAKERS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15311211	RADIO/CASSETTE 12V		
	002	001	15305082	CONVERTOR ASSY DC/DC		
	003	002	15256599	SPEAKER-SINGLE		
	004	001	15229893	AERIAL		
	005	001	15312112	BRACKET ASSY		
	006	004	00100752	SCREW		
	007	004	00103092	NUT		
	008	004	00114986	WASHER		
	009	004	00106496	LOCKWASHER		
	010	001	06350850	SCREW		
	011	001	00106263	WASHER		
	012	001	00108580	LOCKWASHER		


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0310-8391 ELECTRICAL HORN
FROM SERIAL NO. T8391011

DRAWING NO. P9913

P9913

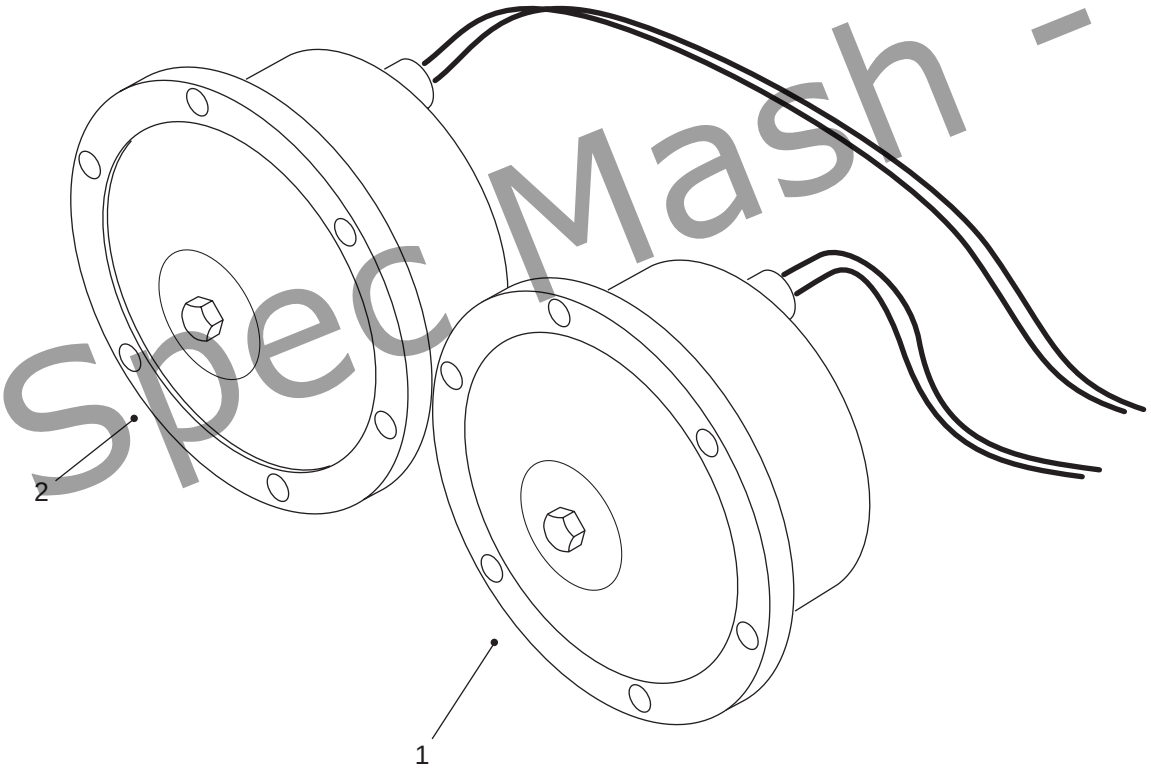

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0310-8391 ELECTRICAL HORN
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15303068	HORN	T8391011	T8391053
	001	001	15317368	HORN	T8391054	
	002	001	15303069	HORN	T8391011	T8391053
	002	001	15317372	HORN	T8391054	

Bel Spec Mash - servis

https://truckmanualshub.com/

200-0010-8391 FUEL TANK AND MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P9718

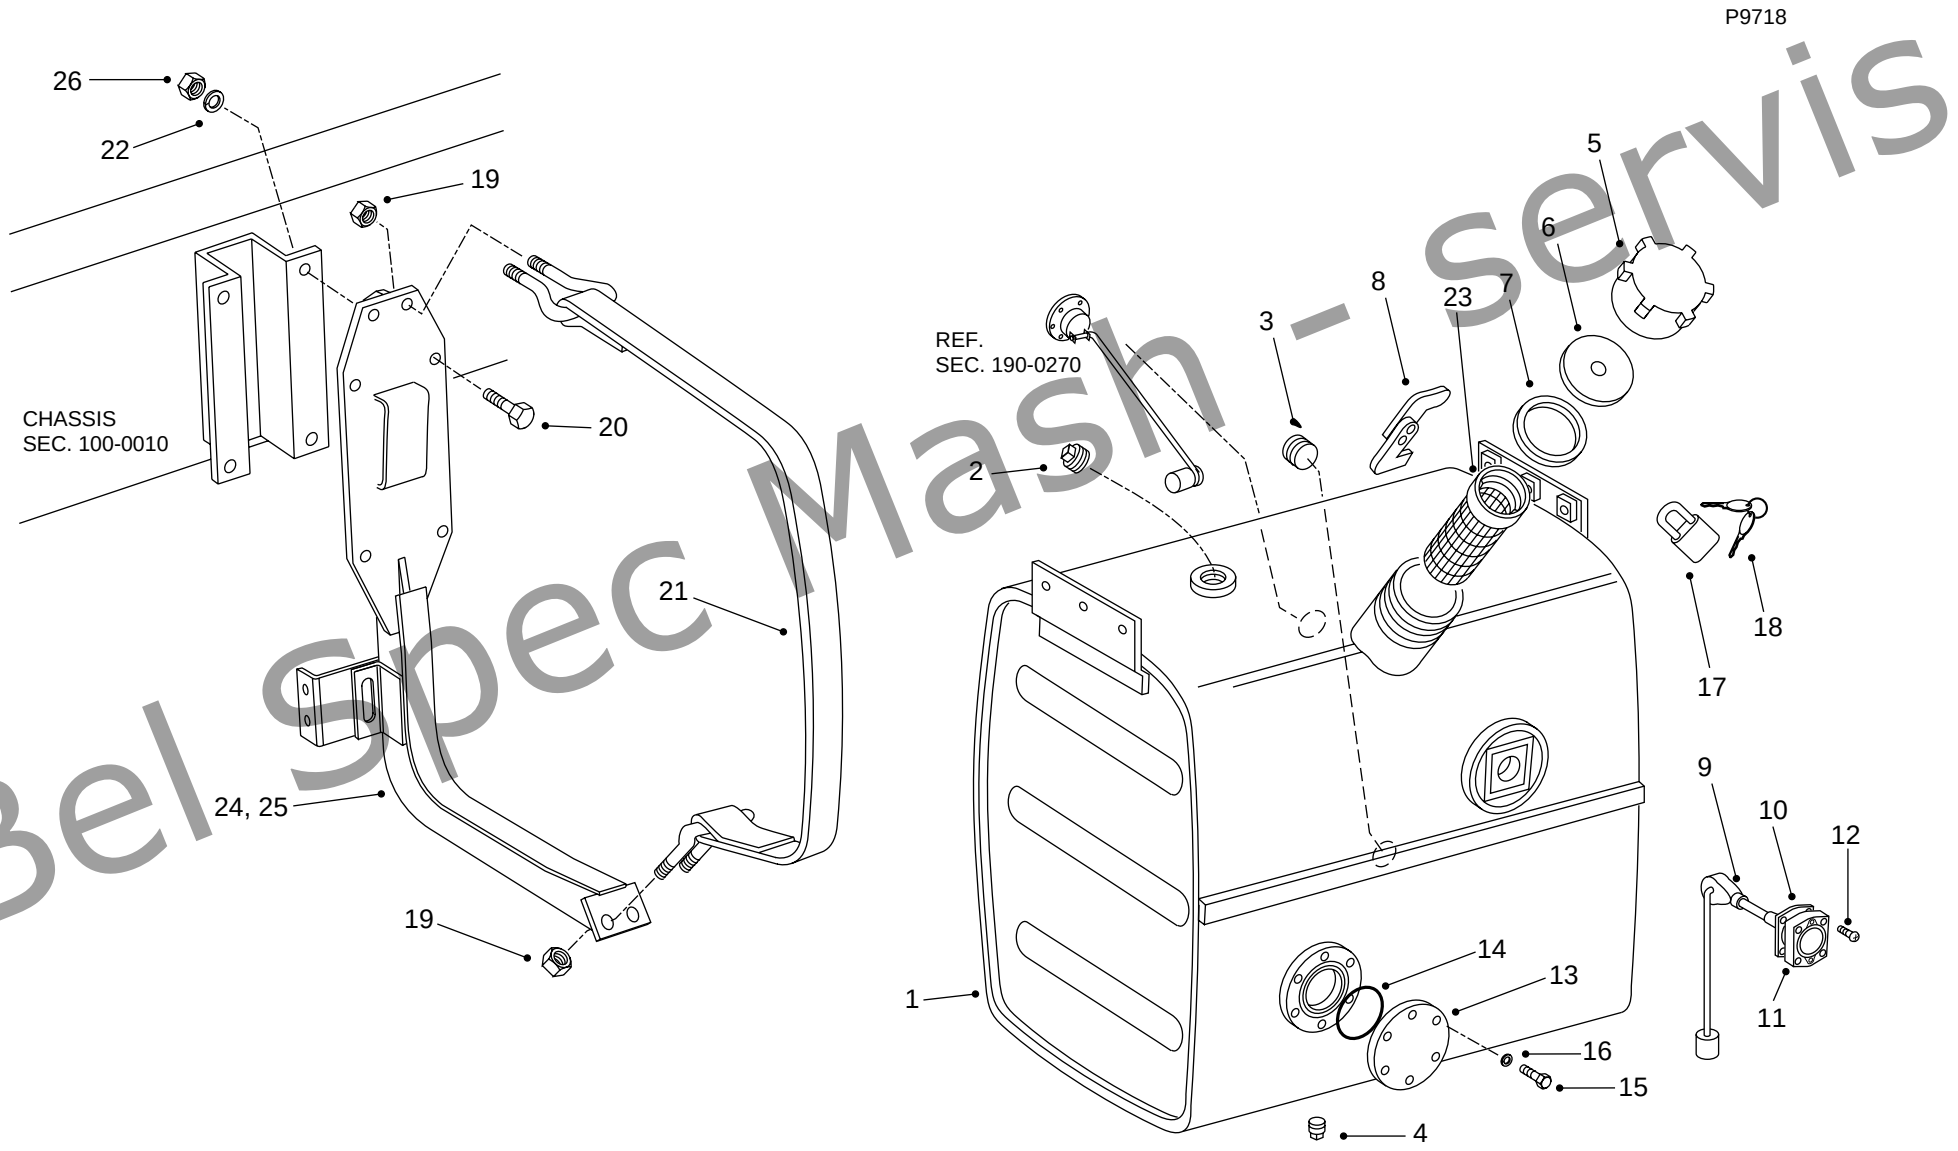

Bel Spec Mash - servis

https://truckmanualshub.com/

200-0010-8391 FUEL TANK AND MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15252598	TANK ASSY-FUEL		
	002	001	00219309	.PLUG		
	003	001	09016714	.PLUG		
	004	001	00273469	.PLUG		
	005	001	09251163	.CAP ASSY		
	006	001	09251092	..GASKET		
	007	001	09183385	..GASKET		
	008	001	09071724	.LATCH		
	009	001	09049324	.GAUGE-FUEL LEVEL		
	010	001	09027836	..GASKET		
	011	001	09049192	..DIAL		
	012	004	00225593	..SCREW		
	013	001	15017227	.PLATE-COVER		
	014	001	09141915	.O RING		
	015	006	00179883	.BOLT		
	016	006	00103329	.LOCKWASHER		
	017	001	09268885	.LOCK		
	018	001	09268892	.KEY		
	019	008	09355771	NUT		
	020	008	00186729	BOLT		
	021	002	15233783	STRAP-HEAVY DUTY		
	022	008	00103332	LOCKWASHER		
	023	001	09160607	STRAINER		
	024	001	15301432	BRACKET ASSY-FRONT		
	025	001	15301433	BRACKET ASSY-REAR		
	026	008	00274141	NUT		

BelSpec Mash - servis


https://truckmanualshub.com/

R1 09/02 (ECN 104745)

200-0040-8391 FUEL LINES

FROM SERIAL NO. T8391011

DRAWING NO. P10992

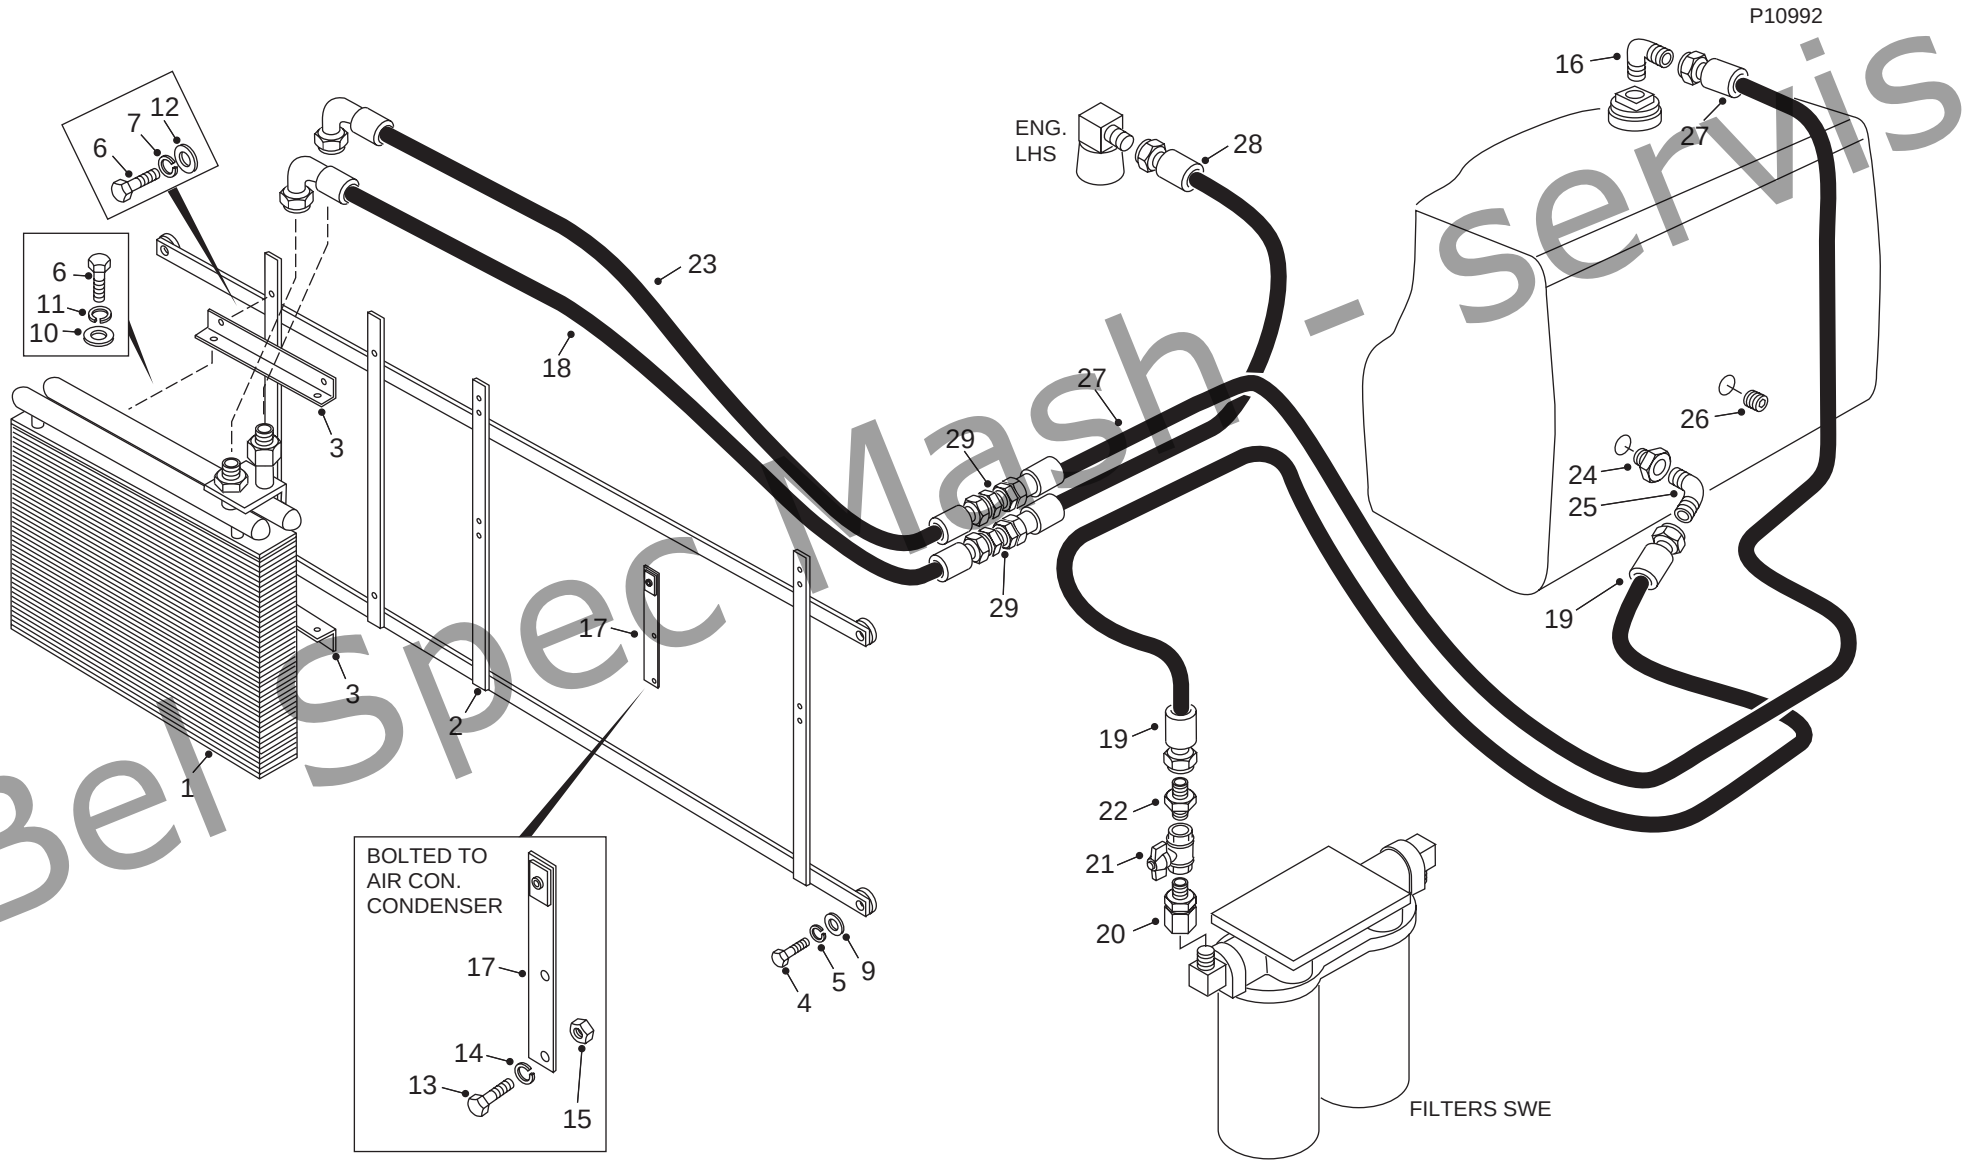

Bel Spec Mash - servis

https://truckmanualshub.com/

200-0040-8391 FUEL LINES
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15257968	COOLER ASSY-FUEL		
	002	001	15313150	BRACKET-AIR CON/COOLER		
	003	002	15313152	PLATE-BENT		
	004	004	06350812	BOLT		
	005	004	07160830	LOCKWASHER		
	006	006	00179837	BOLT		
	007	004	00108580	LOCKWASHER		
	008	004	06351020	BOLT		
	009	004	07150815	WASHER		
	010	004	07151020	WASHER		
	011	004	07161030	LOCKWASHER		
	012	004	00106263	WASHER		
	013	003	00179791	BOLT		
	014	002	00103320	LOCKWASHER		
	015	003	00109084	NUT		
	016	001	09402866	ELBOW		
	017	001	15313706	BRACKET ASSY		
	018	001	15314387	HOSE ASSY		
	019	001	15300403	HOSE ASSY		
	020	001	15258244	ADAPTOR		
	021	001	15230961	VALVE-BALL SHUT-OFF		
	022	001	09411742	CONNECTOR		
	023	001	15314386	HOSE ASSY		
	024	001	15258243	REDUCER		
	025	001	09402828	ELBOW		
	026	001	00444704	PLUG		
	027	001	15314385	HOSE ASSY		
	028	001	15314388	HOSE ASSY		
	029	002	15314384	ADAPTOR-BULKHEAD		


BerSpec Mash - servis

https://truckmanualshub.com/

200-0050-8391 ACCELERATOR LINKAGE
FROM SERIAL NO T8391011 TO T8391015

DRAWING NO P9719

P9719

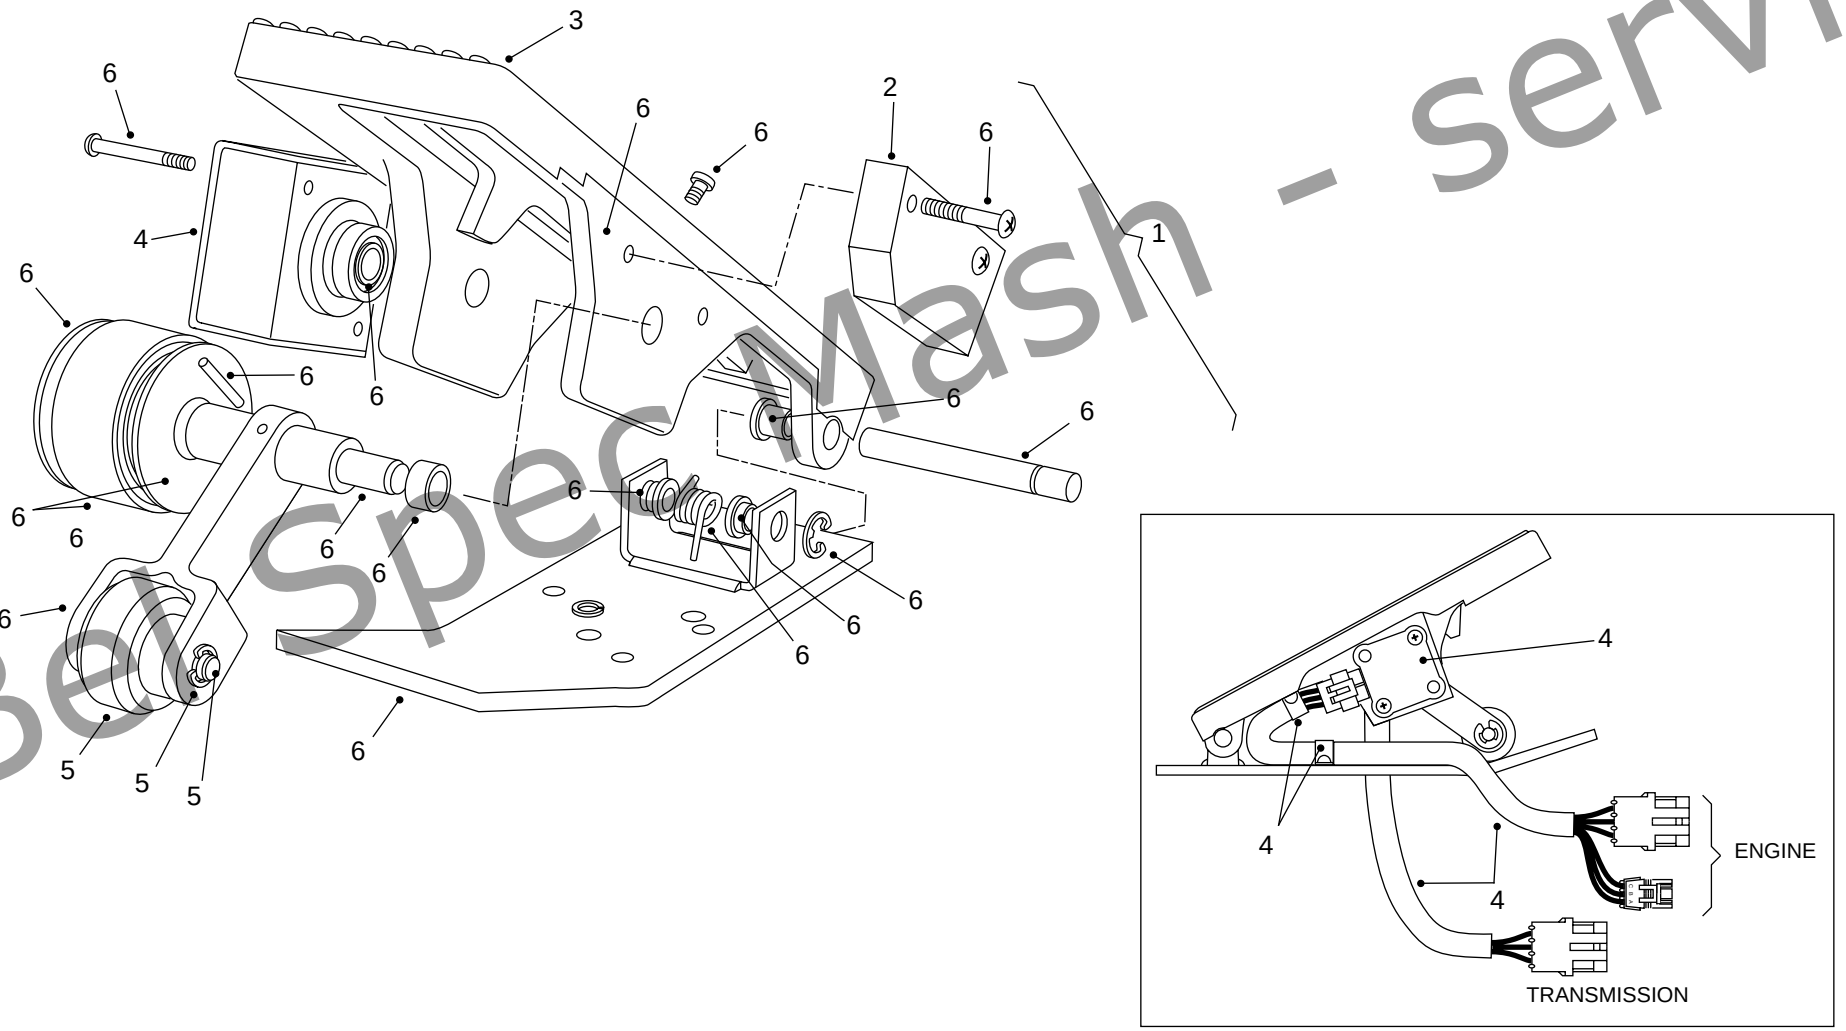

BelSpecMash - servis

https://truckmanualshub.com/

200-0050-8391 ACCELERATOR LINKAGE
FROM SERIAL NO T8391011 TO T8391015

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15256552	PEDAL ASSY		
	002	001	15271371	.SENSOR		
	003	001	15271372	.COVER-PEDAL		
	004	001	15271373	.KIT-SENSOR		
	005	001	15267720	.KIT-ROLLER		
	006	001	15267718	.KIT-TREADLE		

Bel Spec Mash - servis


https://truckmanualshub.com/

R1 09/02 (ECN 104728)

200-0050-8391 ACCELERATOR LINKAGE

FROM SERIAL NO. T8391016

DRAWING NO. P10978

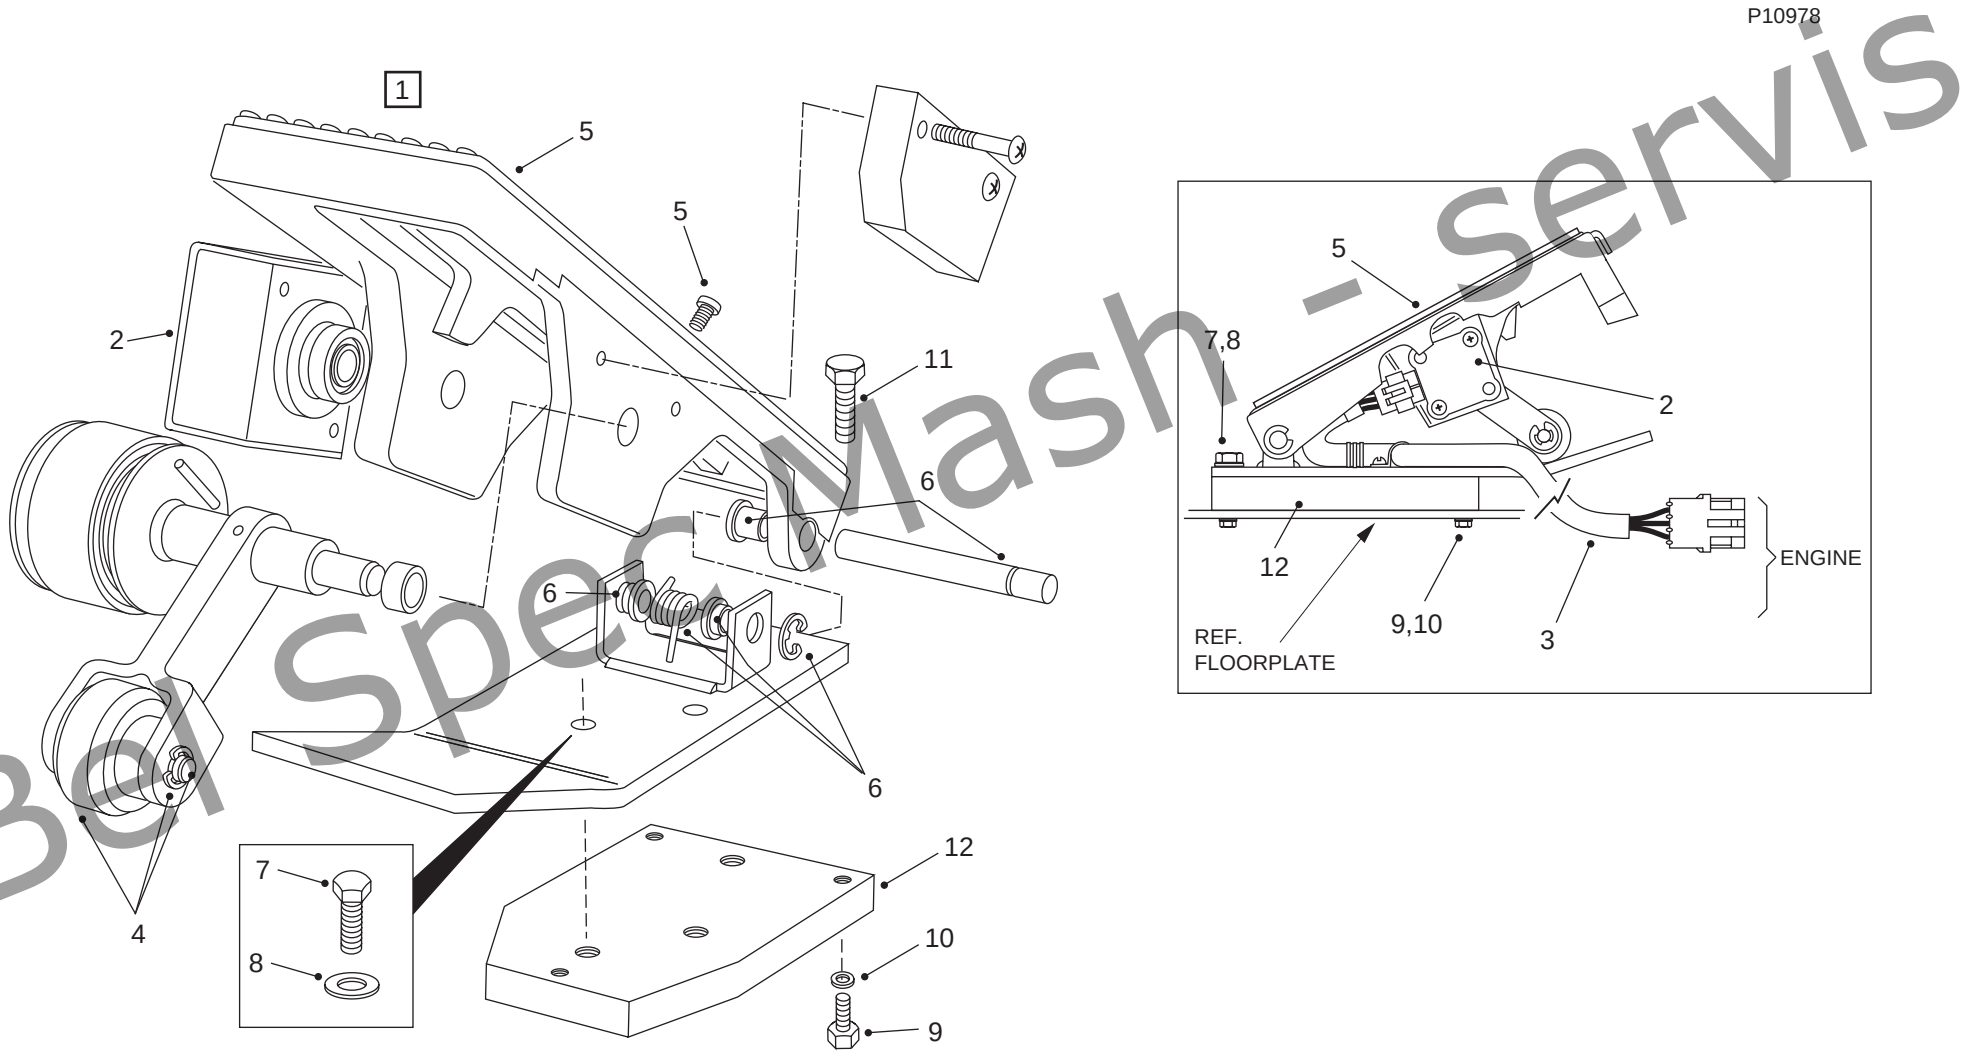

Bel Spec Mash - servis

https://truckmanualshub.com/

200-0050-8391 ACCELERATOR LINKAGE
FROM SERIAL NO. T8391016

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15301131	ACCELERATOR PEDAL		
	002	001	15271373	.KIT-SENSOR		
	003	001	15271370	..HARNESS		
	004	001	15267720	.KIT-ROLLER		
	005	001	15272259	.KIT-TREADLE/COVER		
	006	001	15272260	.KIT-TREADLE PIN		
	007	002	06350820	SCREW		
	008	003	07150815	WASHER		
	009	003	06350620	SCREW		
	010	003	07150615	LOCKWASHER		
	011	001	06350840	SCREW		
	012	001	15300431	PLATE-ADAPTOR		

Bel Spec Mash - servis

https://truckmanualshub.com/


R2 04/03 (ECN 104860)

210-0010-8391 RADIATOR ASSEMBLY

FROM SERIAL NO. T8391018

DRAWING NO.P11187

P11187

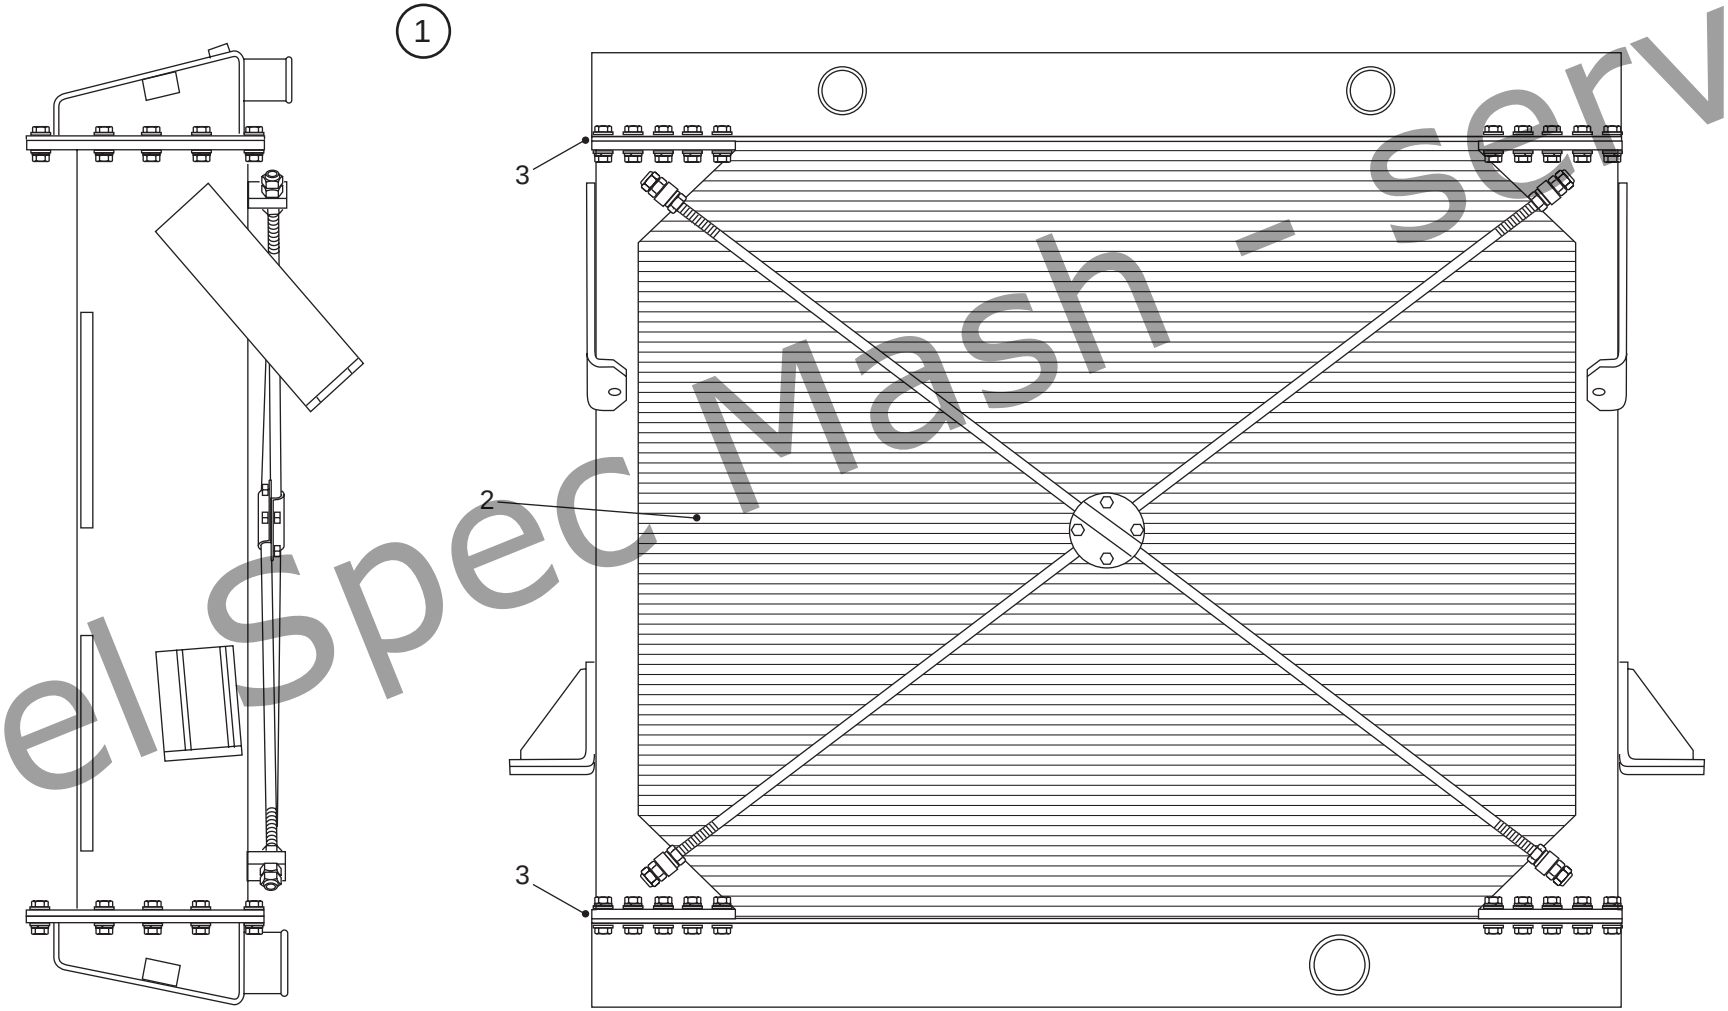

BelSpec Mash - servis

https://truckmanualshub.com/

210-0010-8391 RADIATOR ASSEMBLY
FROM SERIAL NO. T8391018

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
B,A	001	001	15314886	RADIATOR ASSEMBLY		
	002	001	15500550	.CORE ASSY		
	003	002	15500548	.GASKET		

A NOTE: CORE AND GASKETS SERVICED ONLY, ALL OTHER PARTS N.S.S (NOT SOLD SEPERATLY)

B: UNIT SERIAL NO T8391011 ALSO FITTED WITH 15314886 RADIATOR ASSY


Bel Spec Mash - servis

https://truckmanualshub.com/

210-0020-8391 RADIATOR MOUNTING

FROM SERIAL NO. T8391011

DRAWING NO. P10991

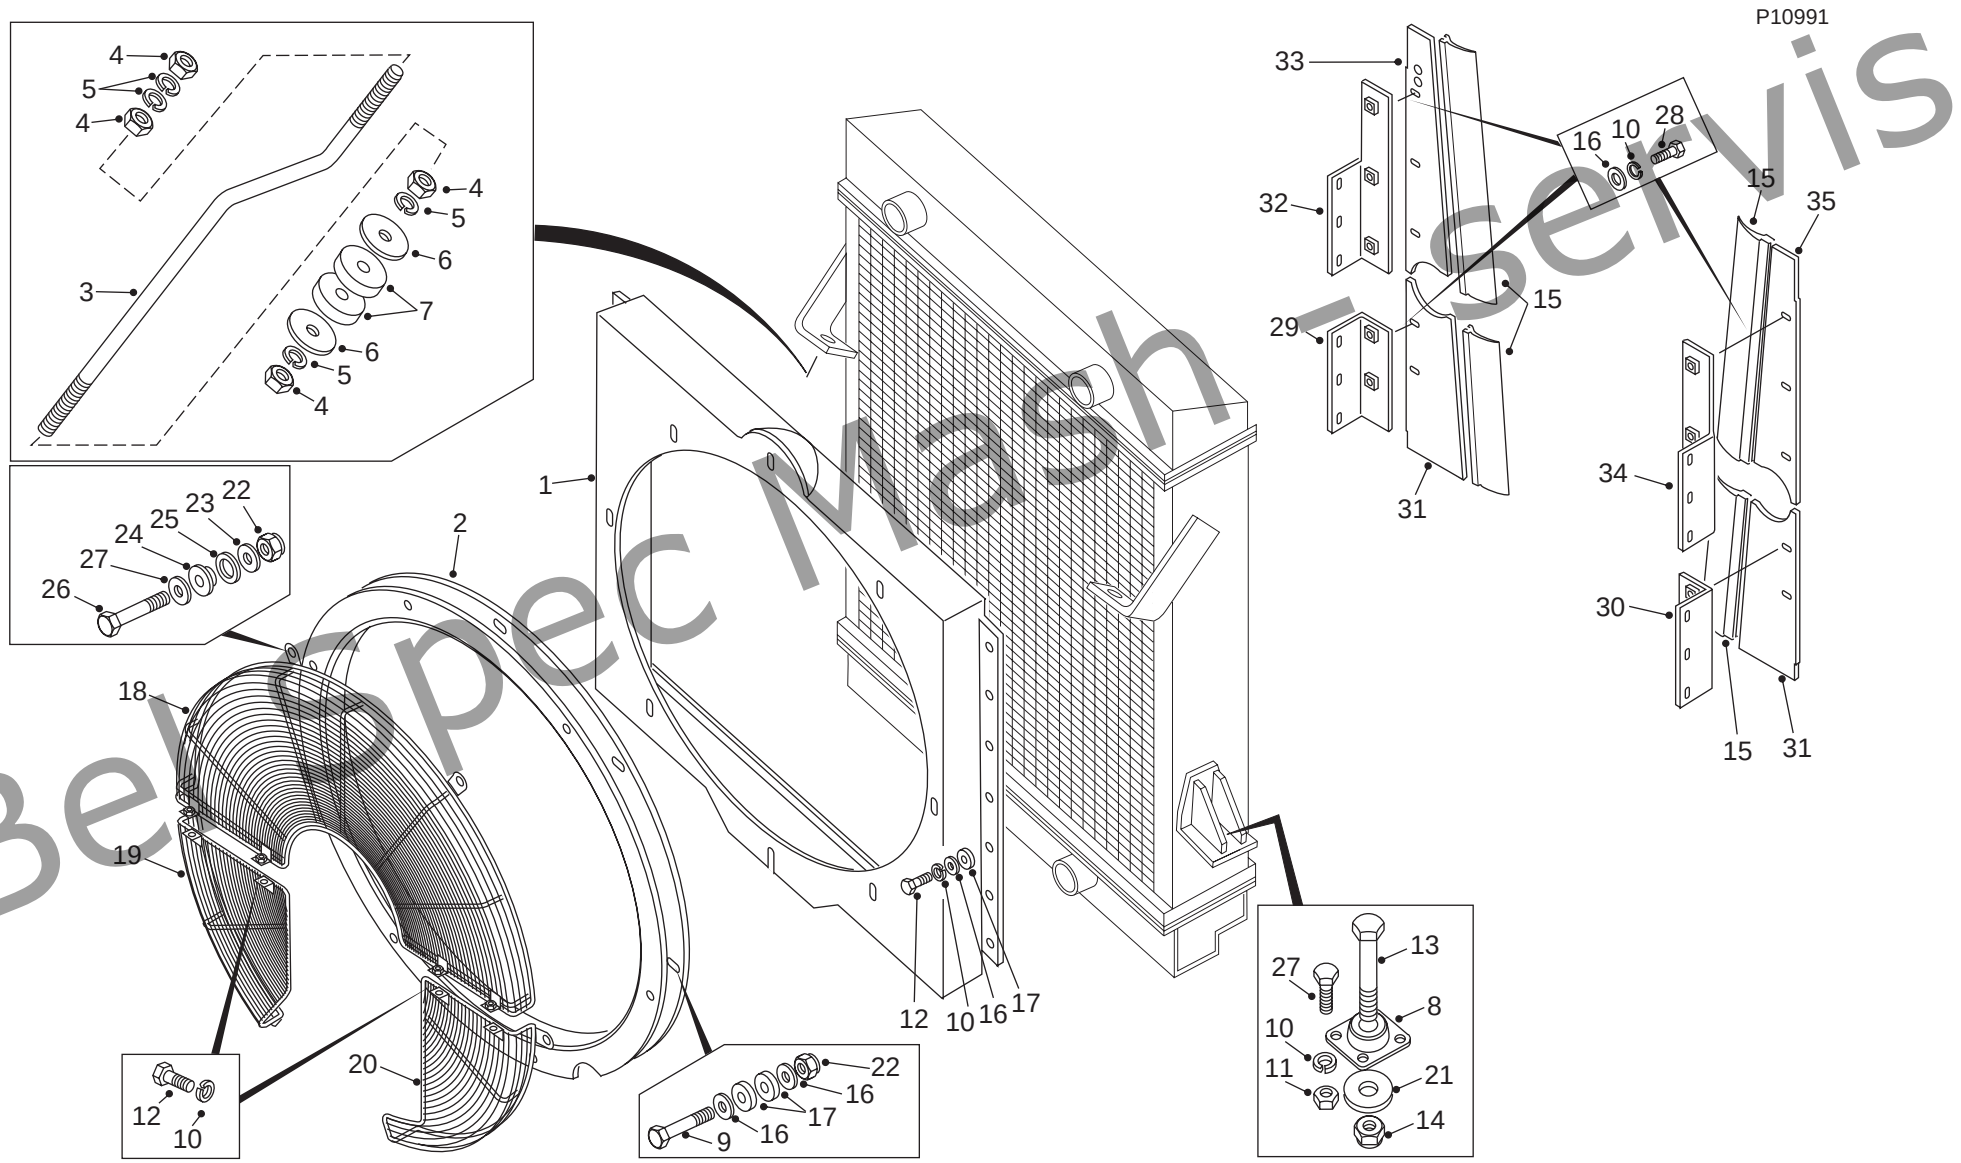

BeSpec Mash-servis

https://truckmanualshub.com/

210-0020-8391 RADIATOR MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15313062	SHROUD		
	002	001	15313063	RING		
	003	002	15313430	ROD-RADIATOR		
	004	008	00220081	NUT		
	005	008	00103332	LOCKWASHER		
	006	004	09187694	WASHER		
	007	004	09186377	MOUNT-FLEXIBLE		
	008	002	09182221	MOUNT-FLEXIBLE		
	009	008	00179841	BOLT		
	010	036	00108580	LOCKWASHER		
	011	008	00102635	NUT		
	012	018	00179839	BOLT		
	013	002	00271621	BOLT		
	014	002	09355771	NUT		
	015	ASR	15244364	SEAL-BULK		
	016	040	00106263	WASHER		
	017	030	09199170	WASHER-RUBBER		
	018	001	15313064	SCREEN		
	019	001	15313065	SCREEN LHS		
	020	001	15313066	SCREEN RHS		
	021	002	09139927	WASHER		
	022	022	00274208	LOCKNUT		
	023	012	09238836	WASHER		
	024	006	09015821	STEM-FLEX O PAD		
	025	006	09015820	RING		
	026	006	00179847	BOLT		
	027	008	00179843	BOLT		
	028	010	00179837	BOLT		
	029	001	15313197	PLATE MTG-BTM LH		
	030	001	15314344	PLATE MTG-BTM RH		
	031	002	15313199	PLATE-BTM LH & RH		
	032	001	15313171	PLATE MTG-TOP LH		
	033	001	15314345	PLATE-TOP LH		
	034	001	15313172	PLATE MTG-TOP RH		
	035	001	15313198	PLATE-TOP RH		


PerkSpec Mash - servis

https://truckmanualshub.com/

210-0030-8391 RADIATOR PIPING

FROM SERIAL NO. T8391011

DRAWING NO. P10980

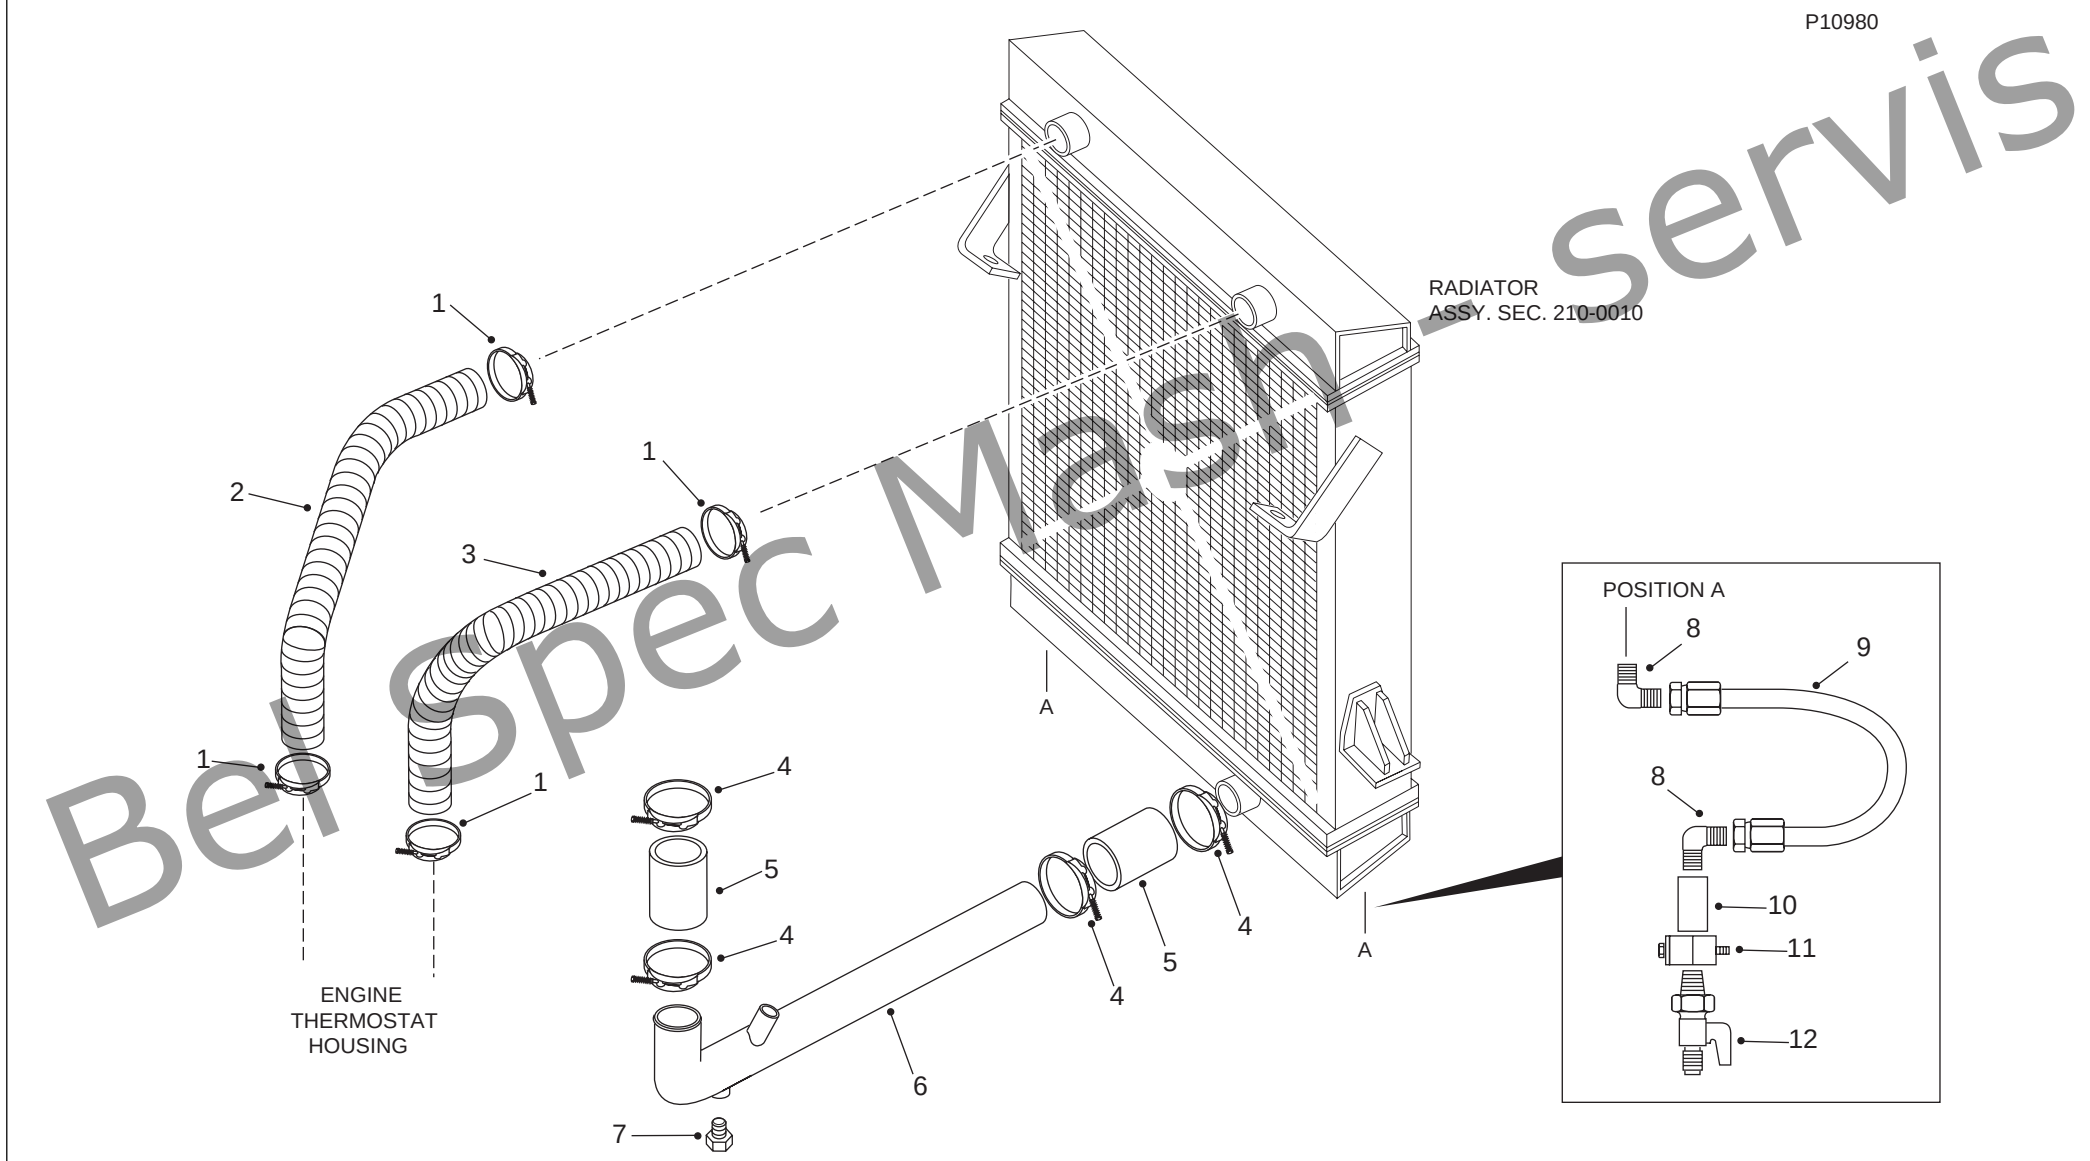

Bel Spec Mgsn-servis

https://truckmanualshub.com/

210-0030-8391 RADIATOR PIPING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	004	15254642	CLAMP		
	002	001	15258111	HOSE-SILICONE		
	003	001	15313490	HOSE-SILICONE		
	004	006	15248752	CLAMP-SPRING		
	005	002	15252489	HOSE-SILICONE		
	006	001	15313486	TUBE-RADIATOR		
	007	002	00444698	PLUG		
	008	004	00116453	ELBOW		
	009	002	09126049	HOSE ASSY		
	010	002	00187395	COUPLING		
	011	002	15258185	PIPE CLAMP-18MM OD		
	012	002	09100270	COCK		

Bel Spec Mash - servis


https://truckmanualshub.com/

R1 01/03 (ECN 105519)

210-0035-8391 CHARGE AIR COOLER & PIPING

FROM SERIAL NO. T8391011

DRAWING NO. P10990

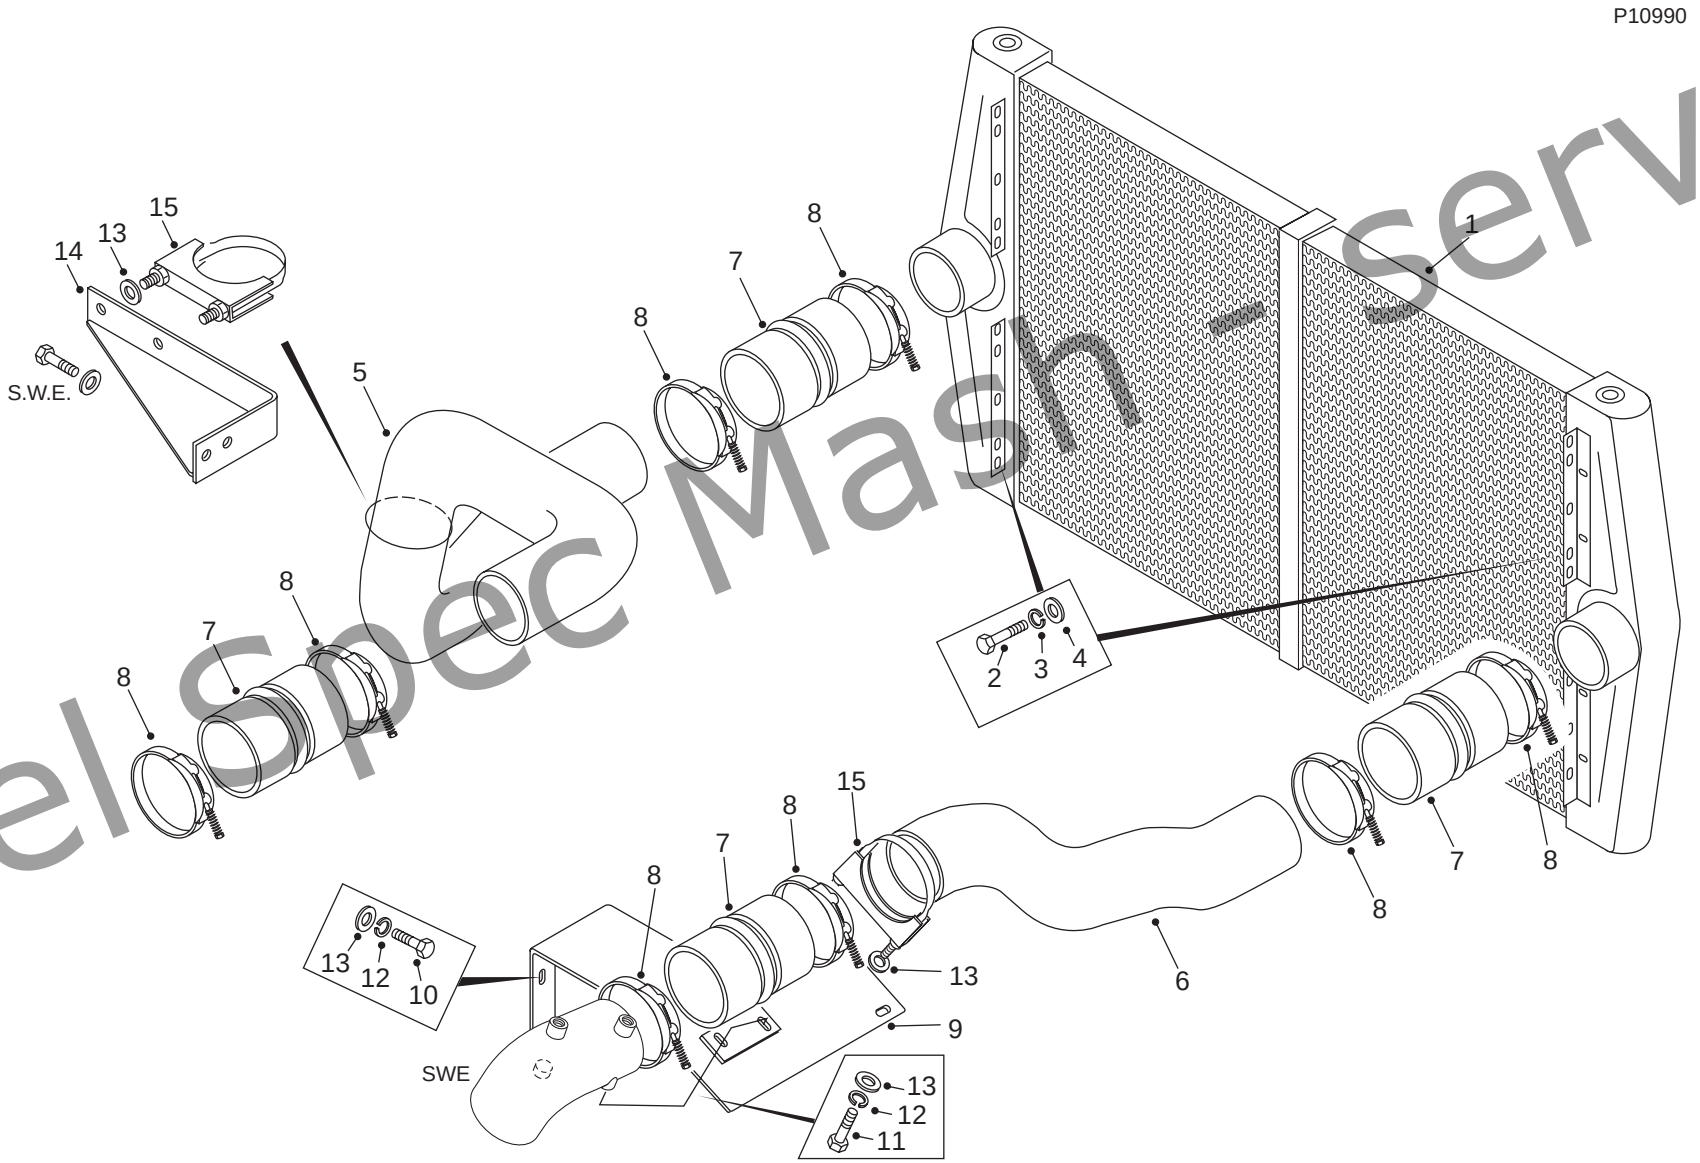

BelSpec Master servis

https://truckmanualshub.com/

210-0035-8391 CHARGE AIR COOLER & PIPING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312828	CHARGE AIR COOLER		
	002	020	06350820	SCREW		
	003	020	07160830	LOCKWASHER		
	004	020	07150815	WASHER		
	005	001	15313392	TUBE-LH		
	006	001	15314099	TUBE-RH		
	007	004	15310311	HOSE-SILICONE		
	008	008	15313671	CLAMP-SPRING LOADED		
	009	001	15316628	BRACKET ASSY		
	010	003	00433114	BOLT		
	011	002	00179839	BOLT		
	012	005	00108580	LOCKWASHER		
	013	009	01967341	WASHER		
	014	001	15316250	BRACKET ASSY		
	015	002	09017439	SADDLE-CLAMP		

Bel Spec Mash - servis


https://truckmanualshub.com/

R1 08/03 (ECN 105405)

210-0040-8391 RADIATOR HEADER TANK AND HOSES

FROM SERIAL NO. T8391011

DRAWING NO. P10981

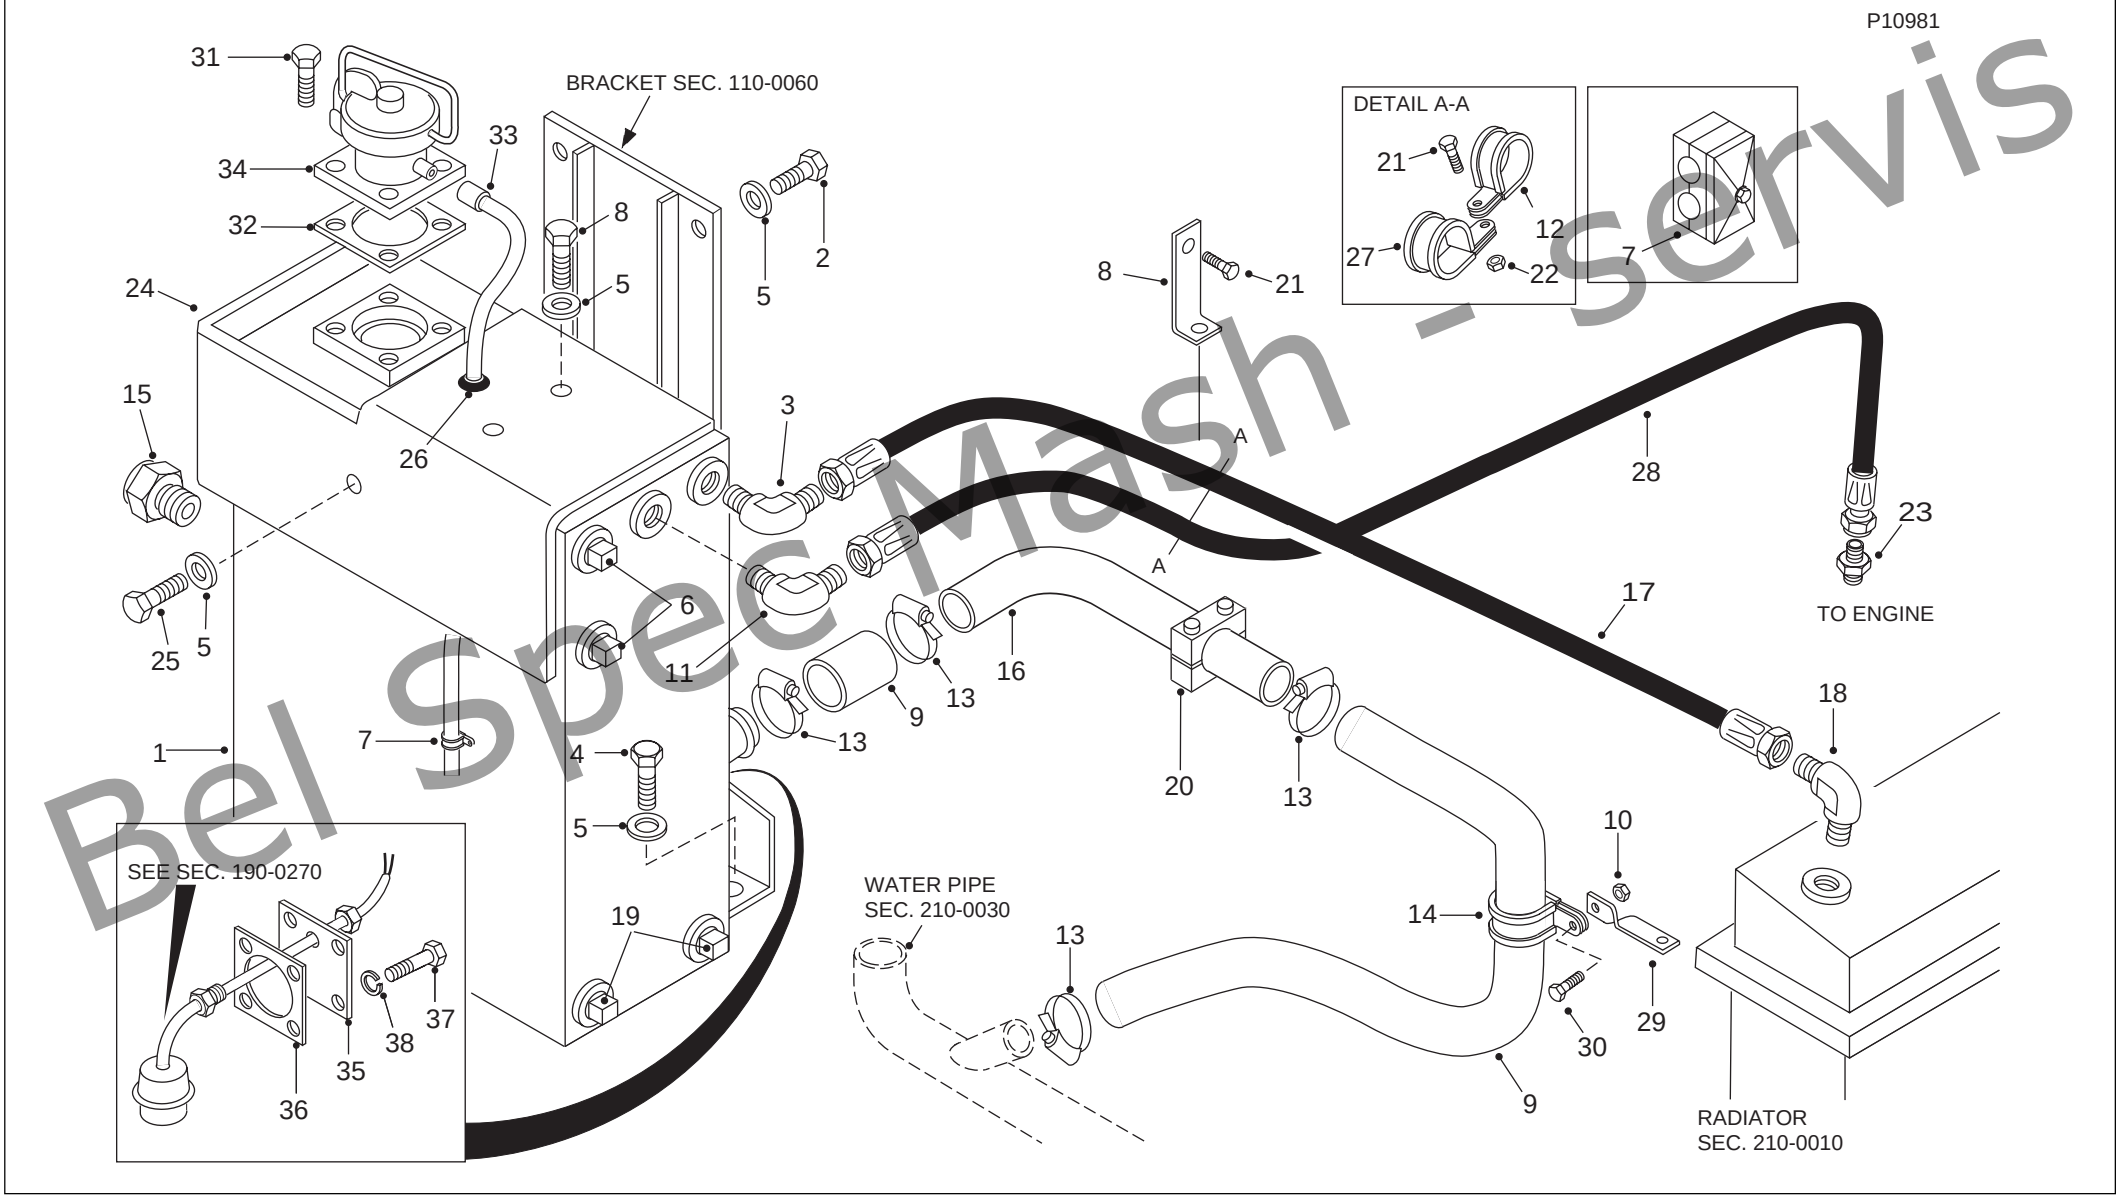

Bel Spec Mash - servis

https://truckmanualshub.com/

210-0040-8391 RADIATOR HEADER TANK AND HOSES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15256846	TANK-REMOTE HEADER	T8391011	T8391052
	001	001	15316399	TANK-REMOTE HEADER	T8391053	
	002	002	00179881	BOLT		
	003	001	00116453	ELBOW		
	004	002	00179883	BOLT		
	005	008	09270000	WASHER-HARDENED		
	006	002	00444619	PLUG		
	007	002	15253111	CLAMP-PIPE		
	008	001	09251501	BRACKET		
	009	ASR	09158575	HOSE-BULK		
	010	001	00102635	NUT		
	011	001	08040341	ELBOW		
	012	001	09131851	CLIP		
	013	004	09139803	CLAMP		
	014	001	09131877	P-CLIP		
	015	001	15230178	NUT-WINDOW		
	016	001	15254920	TUBE		
	017	001	15258255	HOSE ASSY		
	018	001	08040335	ELBOW		
	019	002	00444692	PLUG		
	020	001	15254921	CLAMP		
	021	002	00179791	BOLT		
	022	001	00109084	NUT		
	023	001	09011273	CONNECTOR		
	024	001	15258200	HEAT SHIELD	T8391011	T8391052
	024	001	15316400	HEAT SHIELD	T8391053	
	025	004	00179879	BOLT		
	026	001	00117959	GROMMET		
	027	001	09155490	CLAMP		
	028	001	15314369	HOSE ASSY		
	029	001	15252286	BRACKET		
	030	001	00179837	BOLT		
	031	004	00179838	BOLT		
	032	001	09024628	GASKET		
	033	ASR	09030744	TUBING		
	034	001	15230896	FILLER ASSY		
	035	001	15257448	ADAPTOR PLATE		
	036	001	09024628	GASKET		
	037	004	00179839	BOLT		
	038	004	00108580	LOCKWASHER		

PerSpec Mash - servis

https://truckmanualshub.com/

210-0050-8391 OIL COOLER-DISC BRAKES
FROM SERIAL NO. T8391011

DRAWING NO. P9958

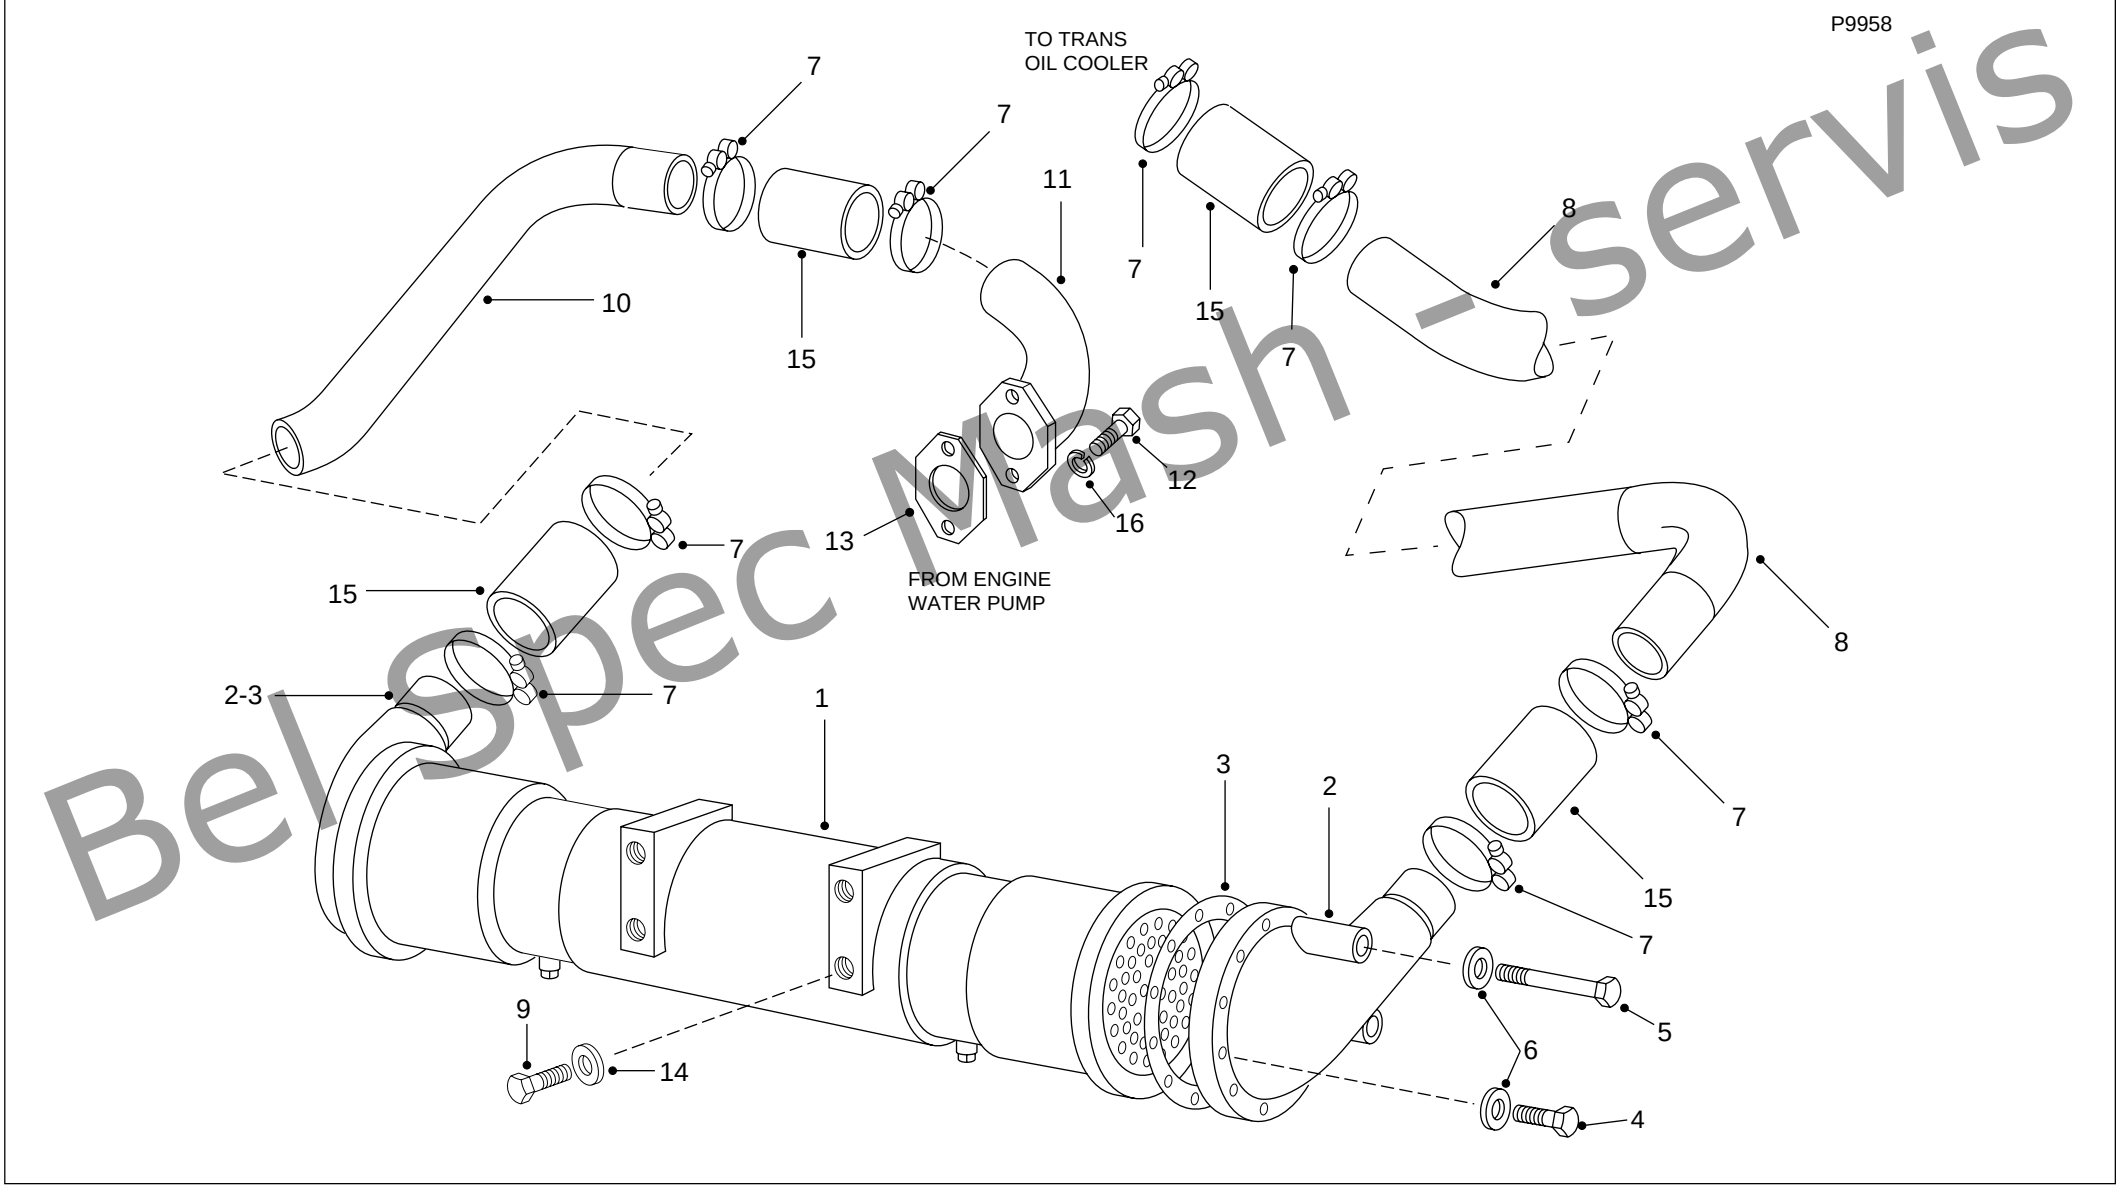

BelSpec Nash - servis

https://truckmanualshub.com/

210-0050-8391 OIL COOLER-DISC BRAKES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15232379	HEAT EXCHANGER		
	002	002	09372695	FLANGE		
	003	002	09208131	GASKET		
	004	018	00179841	BOLT		
	005	004	00186284	BOLT		
	006	022	00108580	LOCKWASHER		
	007	007	15254657	CLAMP		
	008	001	15301134	TUBE		
	009	004	00223438	BOLT		
	010	001	15257598	TUBE-BRAKE COOLER		
	011	001	15257592	ELBOW-BRAKE COOLER		
	012	002	00179839	BOLT		
	013	001	15226844	GASKET		
	014	004	09270004	WASHER		
	015	003	15258083	HOSE-SILICONE		
	016	002	00108580	LOCKWASHER		

Bel Spec Mash - servis

https://truckmanualshub.com/

210-0051-8391 OIL COOLER PIPING-DISC BRAKES
FROM SERIAL NO. T8391011

DRAWING NO. P9552

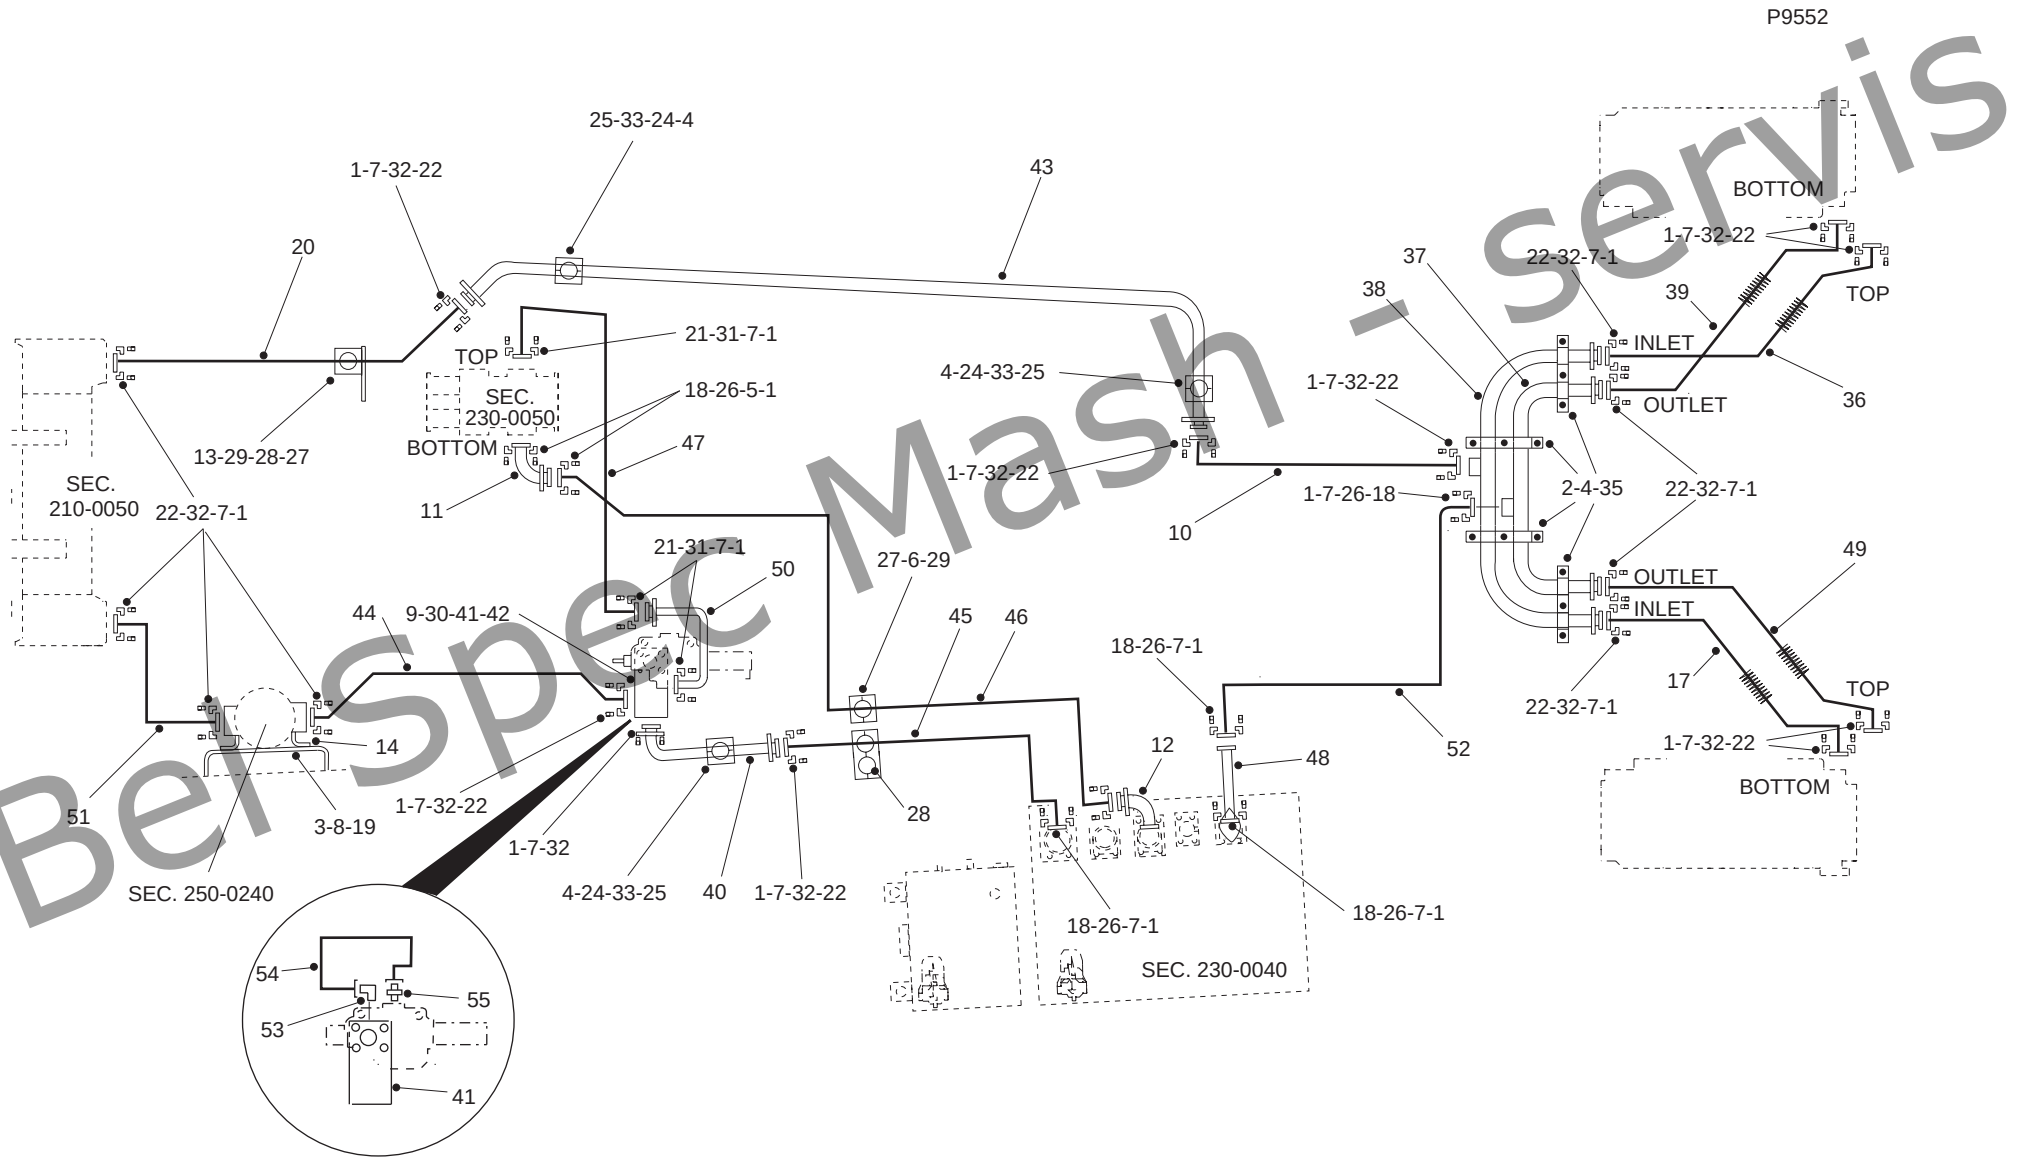

Bel Spec Mash - servis

https://truckmanualshub.com/

210-0051-8391 OIL COOLER PIPING-DISC BRAKES
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	147	00103329	LOCKWASHER		
	002	012	00108580	LOCKWASHER		
	003	002	00179887	BOLT		
	004	022	00186609	BOLT		
	005	020	00186646	BOLT		
	006	006	00186689	BOLT		
	007	120	00186725	BOLT		
	008	002	00274209	LOCKNUT		
	009	008	09430248	BOLT		
	010	001	15301257	HOSE ASSY		
	011	001	09008157	ADAPTOR-SWIVEL		
	012	001	15300251	TUBE ASSY		
	013	004	00179889	BOLT		
	014	001	09067454	CLAMP		
	015	001	15257089	PLATE-BENT		
	016	003	00179883	BOLT		
	017	001	15305765	HOSE ASSY		
	018	018	09167602	FLANGE-SPLIT		
	019	004	09267949	WASHER-HARDENED		
	020	001	15257105	HOSE ASSY		
	021	002	09409984	FLANGE-SPLIT		
	022	034	09409985	FLANGE-SPLIT		
	023	002	09417713	NUT		
	024	006	15001428	NUT-STACKING		
	025	003	15001429	CLAMP		
	026	008	15002672	O RING		
	027	002	15004712	CLAMP		
	028	002	15015251	BUSHING-SPLIT		
	029	004	15004748	NUT-STACKING		
	030	002	15008260	O RING		
	031	003	15008261	O RING		
	032	017	15008262	O RING		
	033	003	15014979	BUSHING-SPLIT		
	034	001	15014979	BUSHING-SPLIT		
	035	004	15018528	CLAMP		
	036	001	15305764	HOSE ASSY		
	037	001	15259061	TUBE ASSY		
	038	001	15018624	TUBE ASSY		
	039	001	15310707	HOSE ASSY		
	040	001	15304353	TUBE ASSY		

210-0051-8391 OIL COOLER PIPING-DISC BRAKES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	15302223	MANIFOLD		
	042	001	15252429	BLOCK		
	043	001	15300312	TUBE ASSY		
	044	001	15257093	HOSE ASSY		
	045	001	15305111	HOSE ASSY		
	046	001	15021376	HOSE ASSY		
	047	001	15312470	HOSE ASSY		
	048	001	15308865	TUBE ASSEMBLY		
	049	001	15305766	HOSE ASSY		
	050	001	15252754	TUBE ASSY		
	051	001	15302782	HOSE		
	052	001	15259003	HOSE ASSY		
	053	001	15244830	ELBOW		
	054	001	15302230	HOSE ASSY		
	055	001	15251937	ADAPTOR		

BelSpec Mash-servis

https://truckmanualshub.com/

210-0060-8391 OIL COOLER AND PIPING-TRANS
FROM SERIAL NO. T8391011

DRAWING NO. P10280

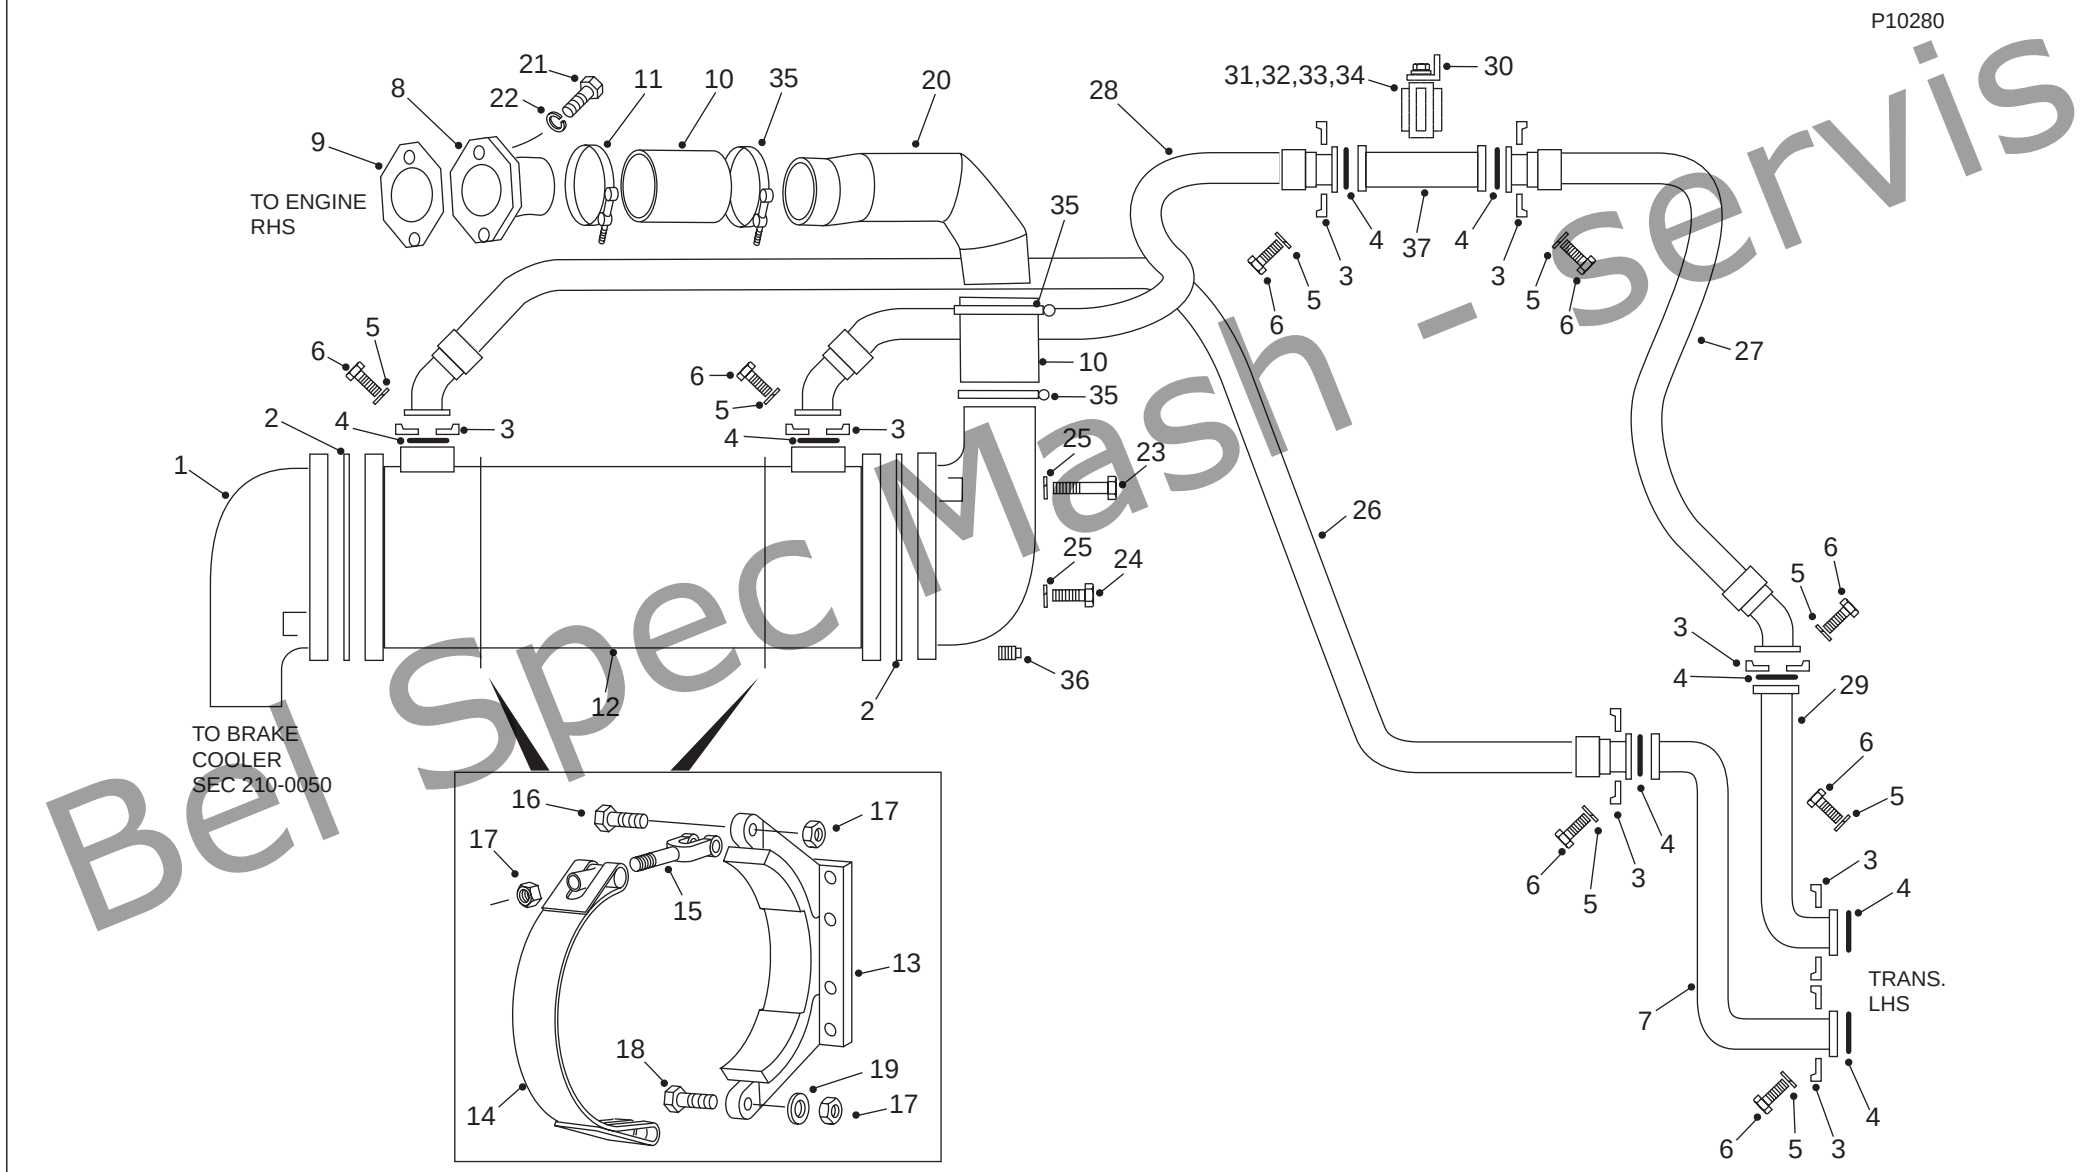

Bel Spec Mash - servis

https://truckmanualshub.com/

210-0060-8391 OIL COOLER AND PIPING-TRANS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	09372695	FLANGE		
	002	002	09208131	GASKET		
	003	016	09409985	FLANGE-SPLIT		
	004	008	15008262	O RING		
	005	034	00103329	LOCKWASHER		
	006	034	00179885	BOLT		
	007	001	15236049	TUBE ASSY		
	008	001	15305793	TUBE		
	009	001	15226844	GASKET		
	010	002	15258083	HOSE-SILICONE		
	011	001	15248752	CLAMP-SPRING		
	012	001	15231546	HEAT EXCHANGER-TRANS		
	013	002	15231535	SADDLE		
	014	002	15231537	CLAMP		
	015	002	15234825	YOKE		
	016	002	00179843	BOLT		
	017	006	00274208	LOCKNUT		
	018	002	00179850	BOLT		
	019	004	00106263	WASHER		
	020	001	15305792	TUBE		
	021	002	00179837	BOLT		
	022	002	00106265	LOCKWASHER		
	023	004	00186284	BOLT		
	024	018	00179841	BOLT		
	025	022	00108580	LOCKWASHER		
	026	001	15305874	HOSE ASSY		
	027	001	15305875	HOSE ASSY		
	028	001	15305876	HOSE ASSY		
	029	001	15305878	TUBE ASSY		
	030	001	15305880	BRACKET		
	031	001	15004742	BUSHING-SPLIT		
	032	001	15004743	BUSHING-SPLIT		
	033	002	15004712	CLAMP		
	034	004	15004748	NUT-STACKING		
	035	003	15254657	CLAMP		
	036	002	00444625	PLUG		
	037	001	15305877	TUBE ASSY		

PerSpec Mash - servis


https://truckmanualshub.com/

R4 11/03 (ECN 104938, ECN 105264, ECN 106059)

220-0010-8391 STEERING LINES

FROM SERIAL NO. T8391011

DRAWING NO. P10983

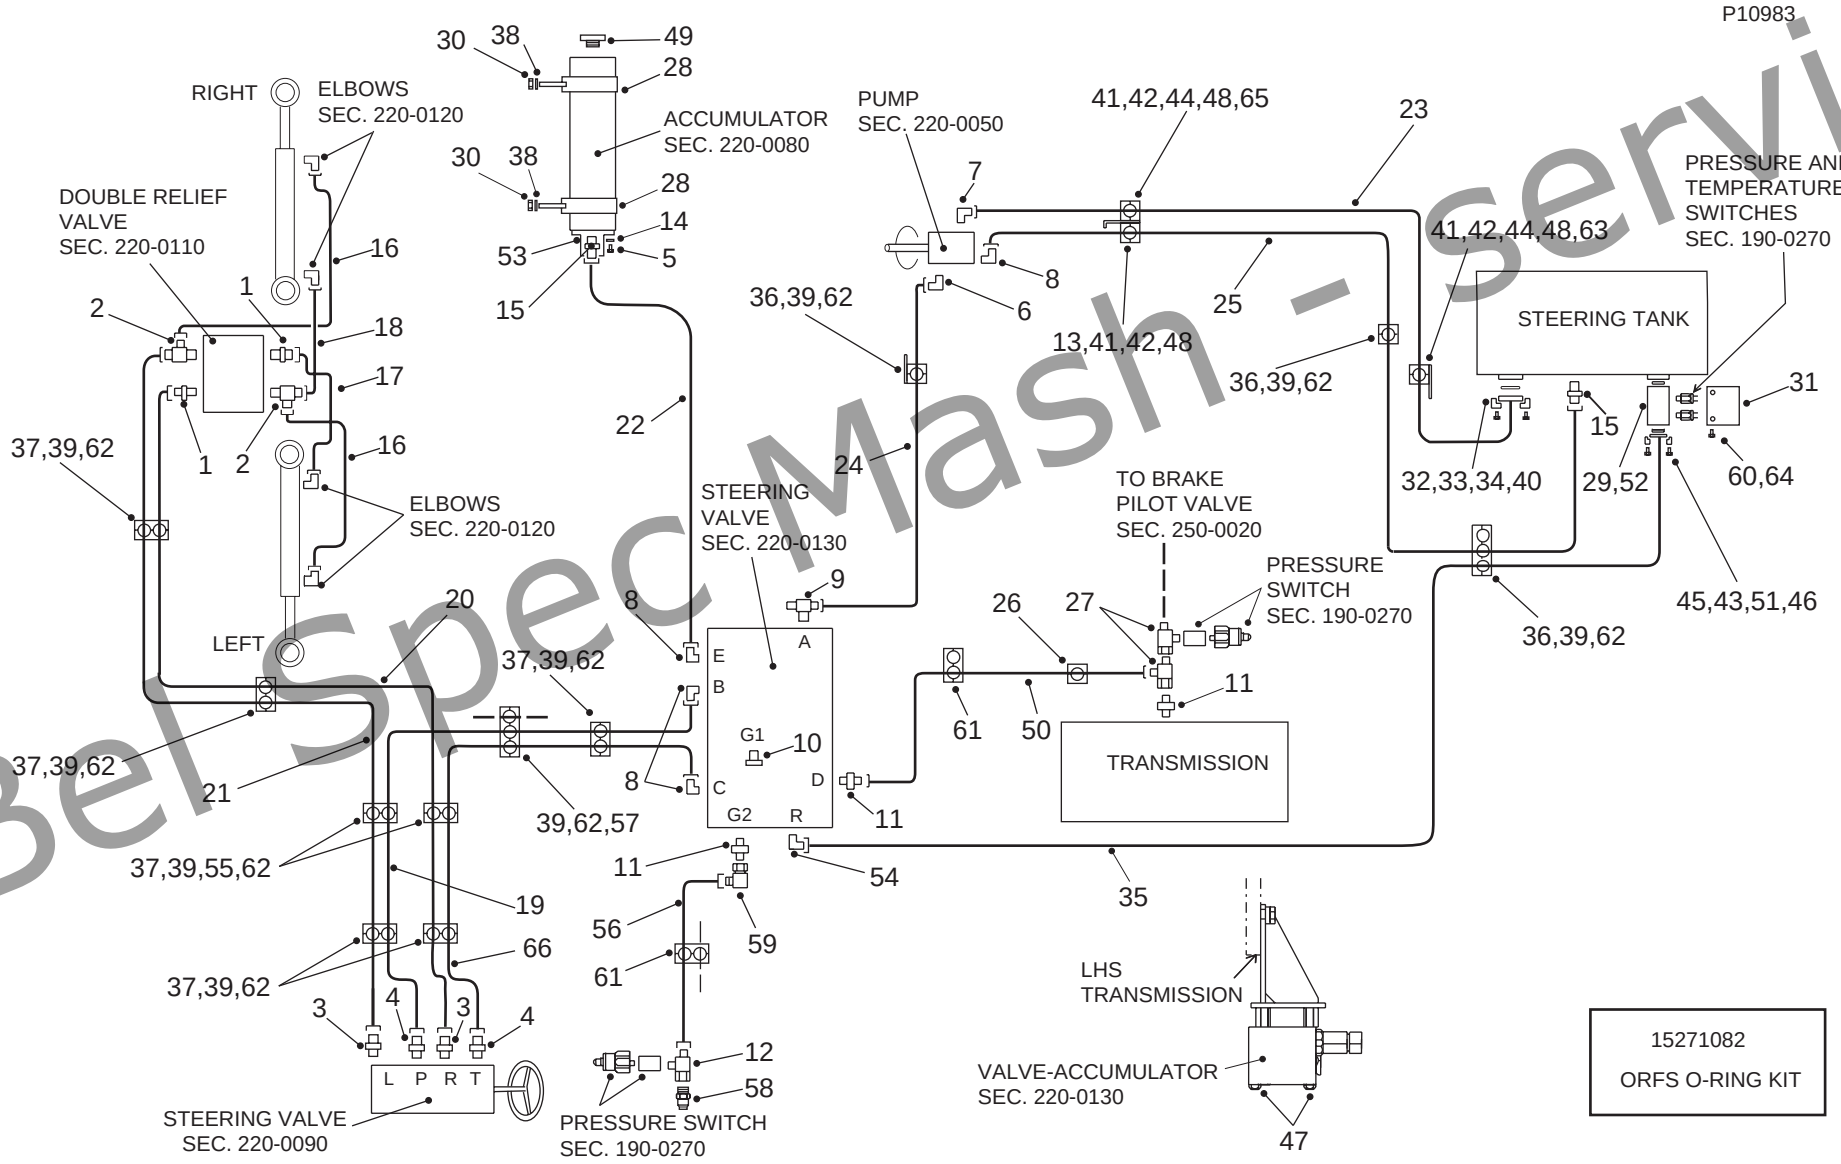

BelSpec Mash - servis

https://truckmanualshub.com/

220-0010-8391 STEERING LINES
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15252849	ADAPTOR		
	002	002	15252989	TEE		
	003	002	15253042	ADAPTOR		
	004	002	15252844	ADAPTOR		
	005	003	00179881	BOLT		
	006	001	15251981	ELBOW		
	007	001	15252672	ELBOW		
	008	004	15252976	ELBOW		
	009	001	15252869	TEE		
	010	001	09052234	PLUG		
	011	002	15251938	ADAPTOR		
	012	001	15251951	TEE		
	013	001	15004795	BUSHING-SPLIT		
	014	003	00103329	LOCKWASHER		
	015	002	15251941	ADAPTOR		
	016	002	15252933	HOSE ASSY		
	017	001	15252934	HOSE ASSY		
	018	001	15252935	HOSE ASSY		
	019	001	15301059	HOSE ASSY		
	020	001	15301061	HOSE ASSY		
	021	001	15301060	HOSE ASSY		
	022	001	15252998	HOSE ASSY		
	023	001	15253689	HOSE ASSY		
	024	001	15253006	HOSE ASSY		
	025	001	15253007	HOSE ASSY		
	026	001	15253875	CLAMP-PIPE		
	027	002	15251951	TEE		
	028	002	09190982	STRAP		
	029	001	15301154	MANIFOLD		
	030	004	00106263	WASHER		
	031	001	15301342	PLATE-GUARD		
	032	004	00179885	BOLT		
	033	002	09409984	FLANGE-SPLIT		
	034	006	00103329	LOCKWASHER		
	035	001	15253138	HOSE ASSY		
	036	003	15001403	CLAMP		
	037	007	15001404	CLAMP		
	038	004	09417713	NUT		
	039	020	15001422	BUSHING-SPLIT		
	040	001	09410970	O RING		

220-0010-8391 STEERING LINES
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	006	15001428	NUT-STACKING		
	042	003	15001429	CLAMP		
	043	002	09410967	O RING		
	044	002	15014978	BUSHING-SPLIT		
	045	002	09409981	FLANGE-SPLIT		
	046	004	00186289	BOLT		
	047	002	00214265	BOLT		
	048	010	00179839	BOLT		
	049	001	15251035	COVER PLUG-ACCUM	T8391011	T8391052
	050	001	15253192	HOSE ASSY		
	051	004	00108580	LOCKWASHER		
	052	001	09410968	O RING		
	053	001	15245323	BRACKET-ACCUM GUARD		
	054	001	15253129	ELBOW		
	055	001	15253193	BRACKET ASSY		
	056	001	15305112	HOSE ASSY		
	057	002	15253272	CLAMP-PIPE 28MM		
	058	001	15300946	ADAPTOR-BULKHEAD		
	059	001	15252983	ELBOW		
	060	002	00186270	BOLT		
	061	002	15253870	CLAMP-PIPE		
	062	024	00179816	BOLT		
	063	001	15251837	PLATE		
	064	002	00102634	NUT		
	065	001	15251836	PLATE		
	066	001	15313250	HOSE ASSY		

Perspec Mash-servis

https://truckmanualshub.com/

220-0015-8391 STEERING LINES FILTRATION
FROM SERIAL NO. T8391011

DRAWING NO. P9730

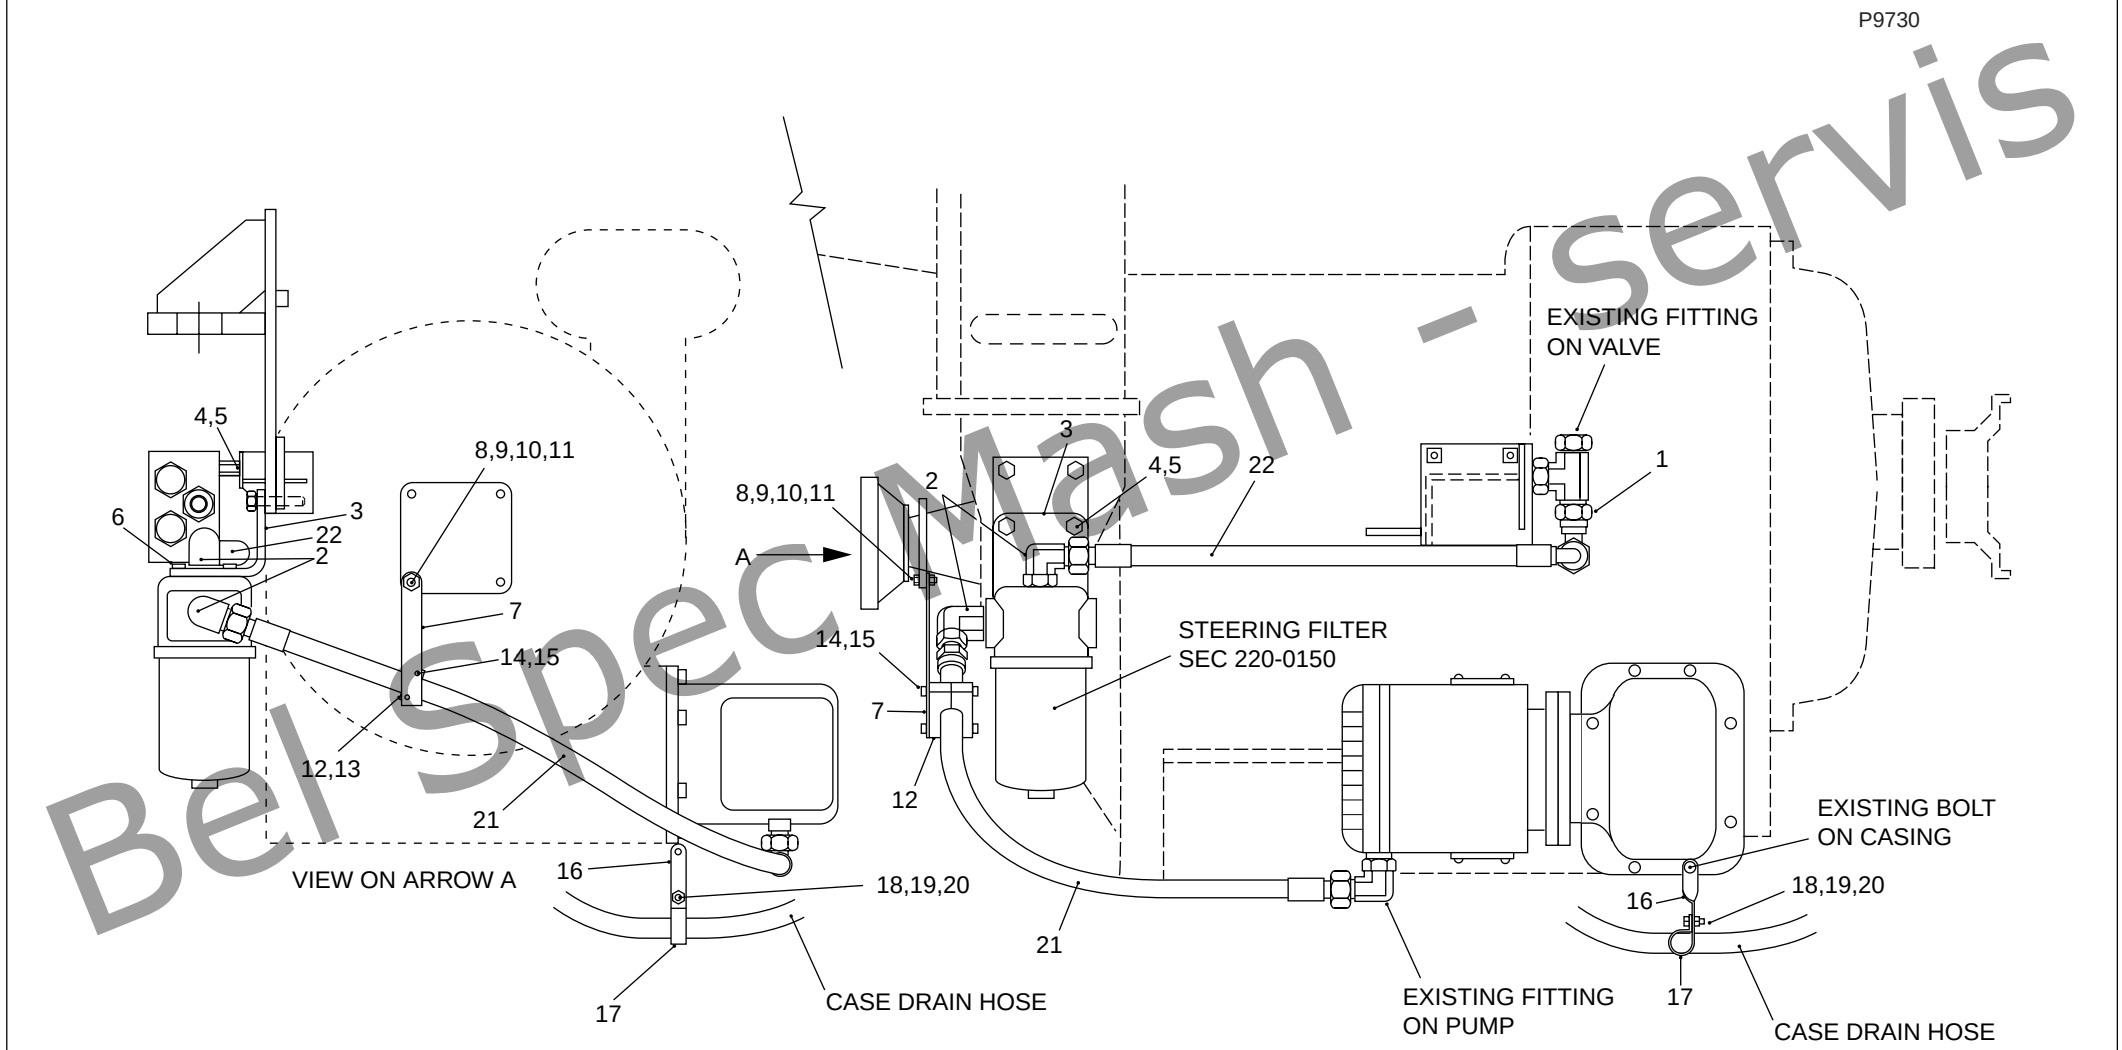

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0015-8391 STEERING LINES FILTRATION
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15252695	ELBOW		
	002	002	15251948	ELBOW		
	003	001	15301306	PLATE		
	004	002	00271568	BOLT		
	005	002	00103331	LOCKWASHER		
	006	004	06351020	BOLT		
	007	001	15301413	PLATE		
	008	001	00179889	BOLT		
	009	001	00274209	LOCKNUT		
	010	002	00106265	WASHER		
	011	001	00103323	WASHER		
	012	001	15254318	CLAMP		
	013	001	15254319	PLATE		
	014	002	15254320	BOLT		
	015	002	06470601	LOCKNUT		
	016	001	15251834	BRACKET-TWISTED		
	017	001	09014080	CLAMP		
	018	001	00102635	NUT		
	019	001	00108580	LOCKWASHER		
	020	001	00179839	BOLT		
	021	001	15301788	HOSE ASSY		
	022	001	15301789	HOSE ASSY		

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0040-8391 TANK AND MOUNTING-STEERING
FROM SERIAL NO. T8391011

DRAWING NO. P9722

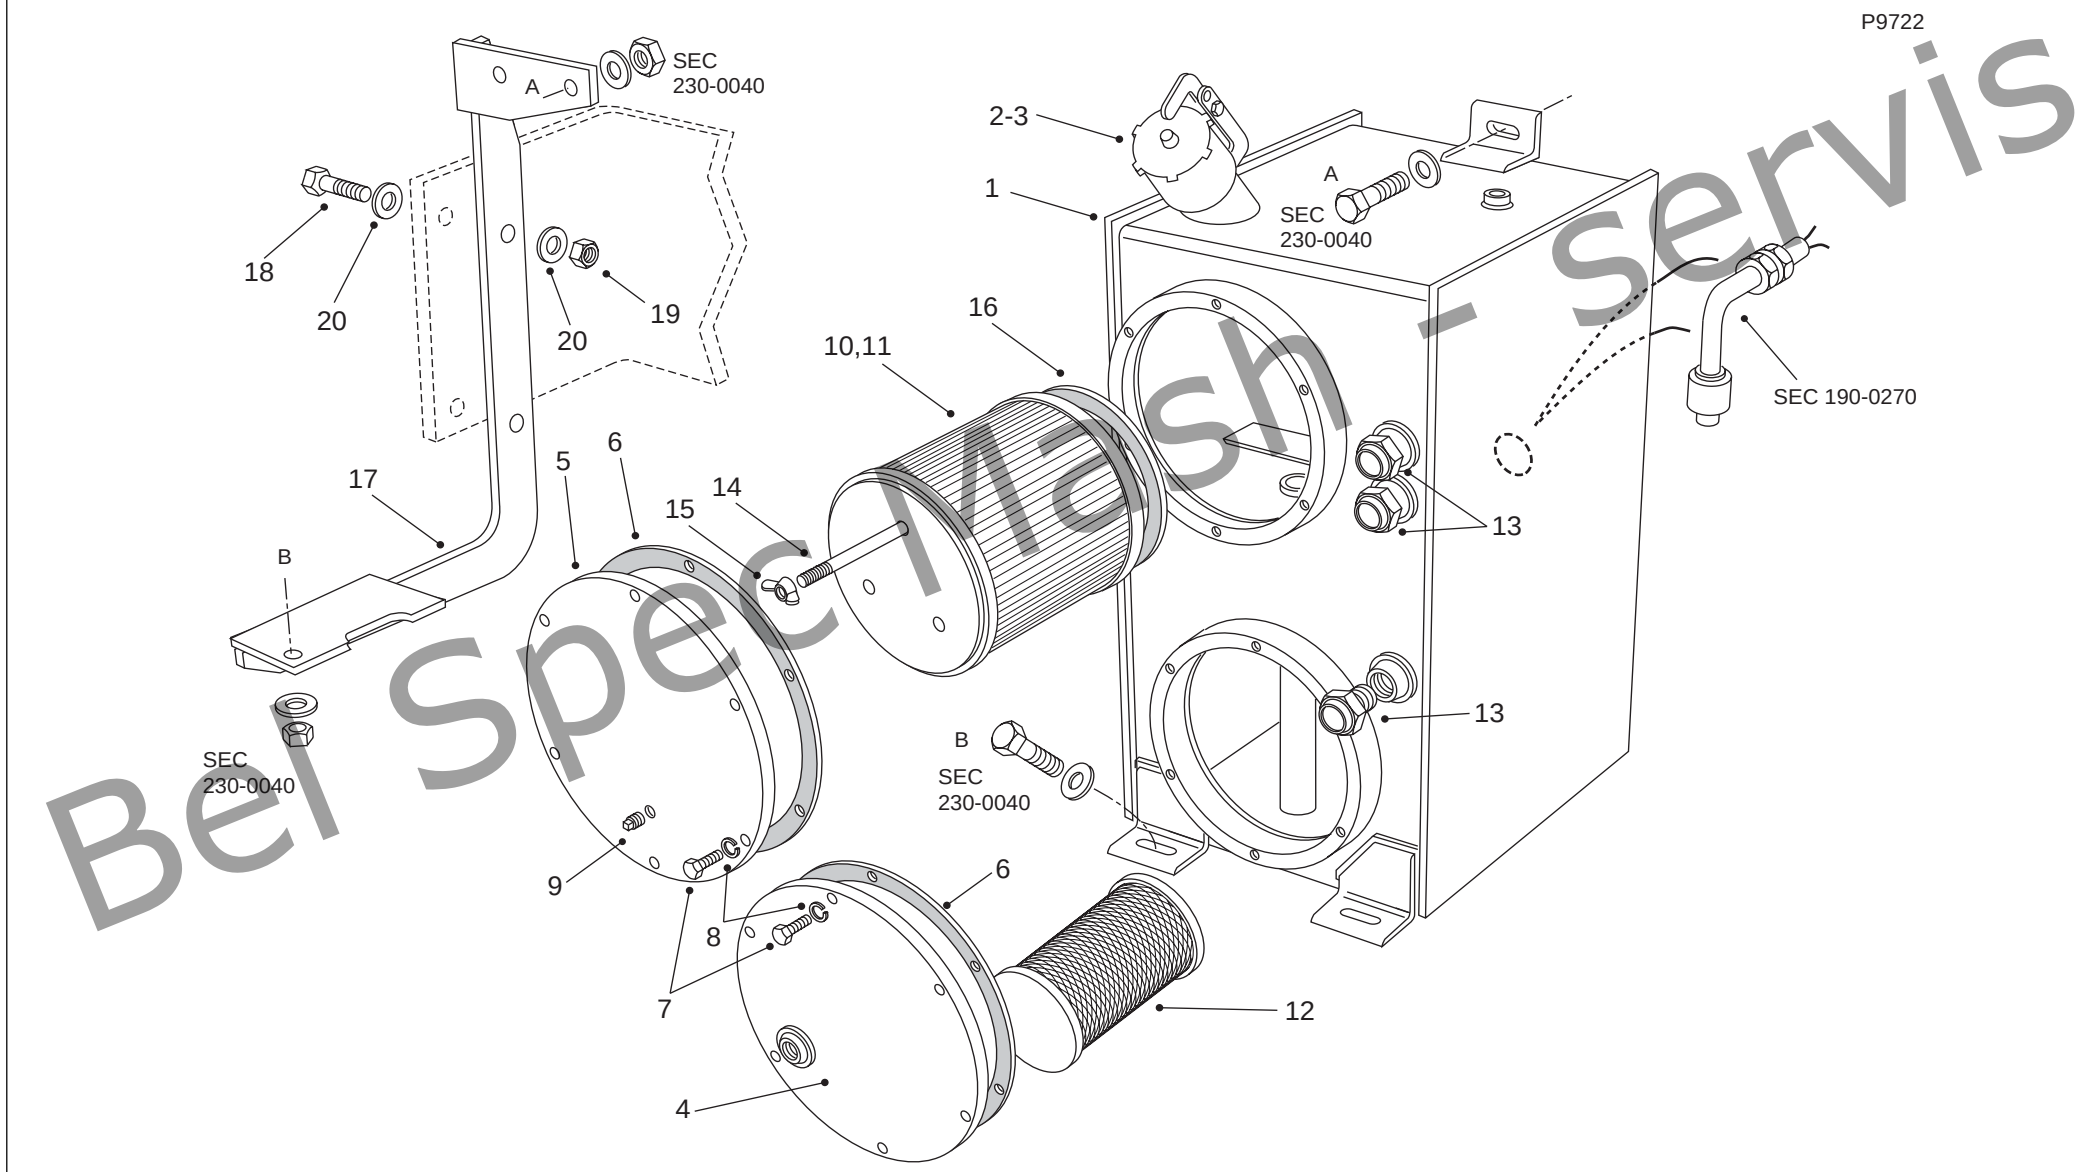

Bel Spec Nash - servis

https://truckmanualshub.com/

220-0040-8391 TANK AND MOUNTING-STEERING
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15251729	TANK-STEERING		
	002	001	09246992	.CAP ASSY		
	003	001	09247259	..GASKET		
	004	001	15301265	.COVER ASSY		
	005	001	15255315	.COVER		
	006	001	09202069	.GASKET NSS		
	007	012	00179839	.BOLT		
	008	012	00108580	.LOCKWASHER		
	009	001	00444619	.PLUG		
	010	001	15250940	FILTER ASSY		
	011	001	15265318	.ELEMENT		
	012	001	15025076	SCREEN ASSY-SUCTION		
	013	003	15230178	NUT-WINDOW		
	014	003	09188290	ROD		
	015	003	02389616	NUT-WING		
	016	001	09188288	GASKET NSS		
	017	001	15251874	BRACKET ASSY		
	018	002	00223437	BOLT		
	019	002	09411566	NUT		
	020	012	09191596	WASHER		

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0050-8391 PUMP-STEERING
FROM SERIAL NO. T8391011

DRAWING NO. P9723

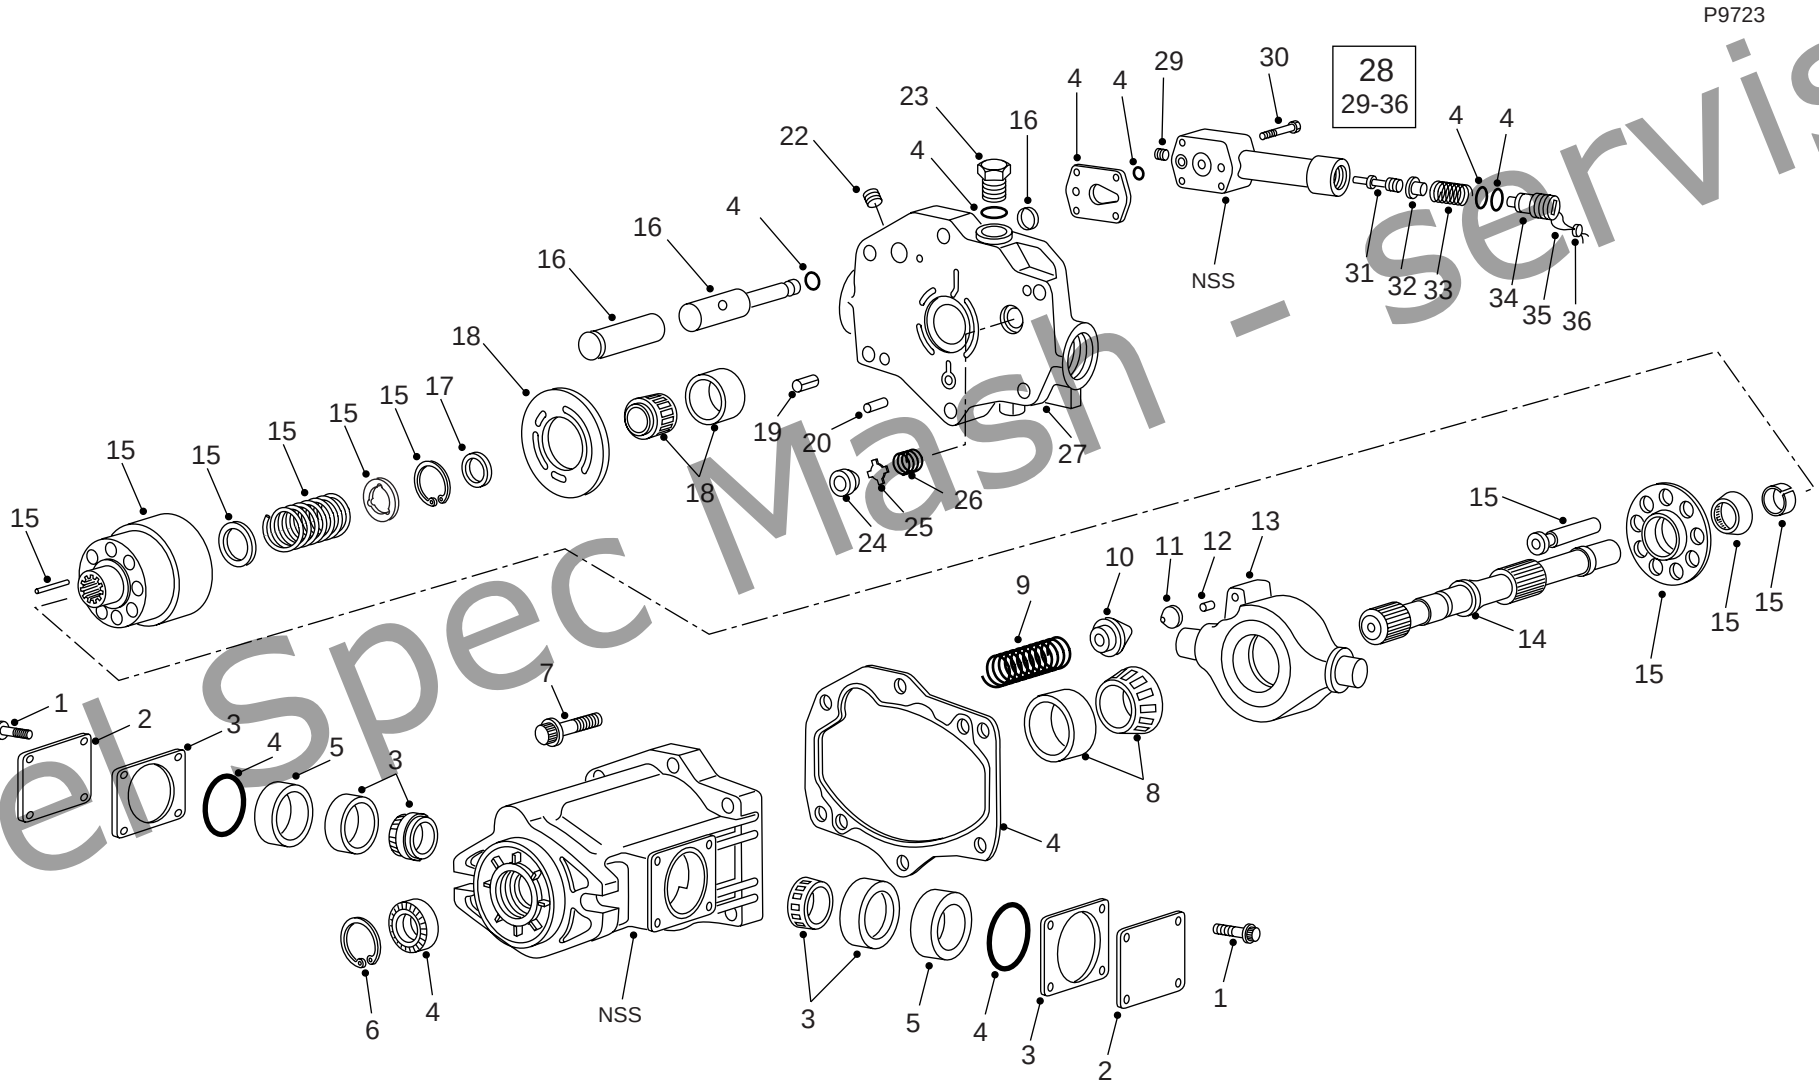

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0050-8391 PUMP-STEERING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	001	15244762	PUMP-PISTON		
	001	008	09058044	.SCREW		
	002	002	09058045	.COVER		
	003	001	09058108	.KIT-BEARING		
	004	001	09058104	.KIT-SEAL		
	005	002	09058046	.SPACER		
	006	001	02340310	.RING-RETAINER		
	007	006	09058069	.SCREW		
	008	001	09058075	.BEARING		
	009	001	09058072	.SPRING		
	010	001	09058073	.SEAT		
	011	001	09058074	.SEAT		
	012	001	09417456	.PIN-ROLL		
	013	001	09058076	.YOKE		
	014	001	09398180	.SUPERCEDED MATERIAL		
	015	001	09058110	.ROTATING GROUP		
	016	001	09058107	.KIT-PISTON & ROD		
	017	001	09058105	.BEARING		
	018	001	09058093	.PLATE		
	019	001	09058094	.BEARING		
	020	002	09058095	.PIN-ROLLER		
	021	001	09058096	.PIN-DOWEL		
	022	001	00444854	.SUPERCEDED MATERIAL		
	023	001	09058097	.PLUG		
	024	001	09058098	.SEAT		
	025	001	09058099	.VALVE		
	026	001	09058100	.SPRING		
	027	001	09058043	.BLOCK		
	028	001	09053287	.KIT-COMPENSATOR		
	029	001	00444848	..PLUG		
	030	004	00147114	..SCREW		
	031	001	09058126	..SPOOL		
	032	001	09050191	..SEAT		
	033	001	09050194	..SPRING		
	034	001	09058127	..PLUG		
	035	001	09113457	..LOCKWIRE		
	036	001	09044413	..SEAL		


PerSpec Mash - servis

https://truckmanualshub.com/

220-0060-8391 PUMP AND ACCUMULATOR MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P9420

P9420

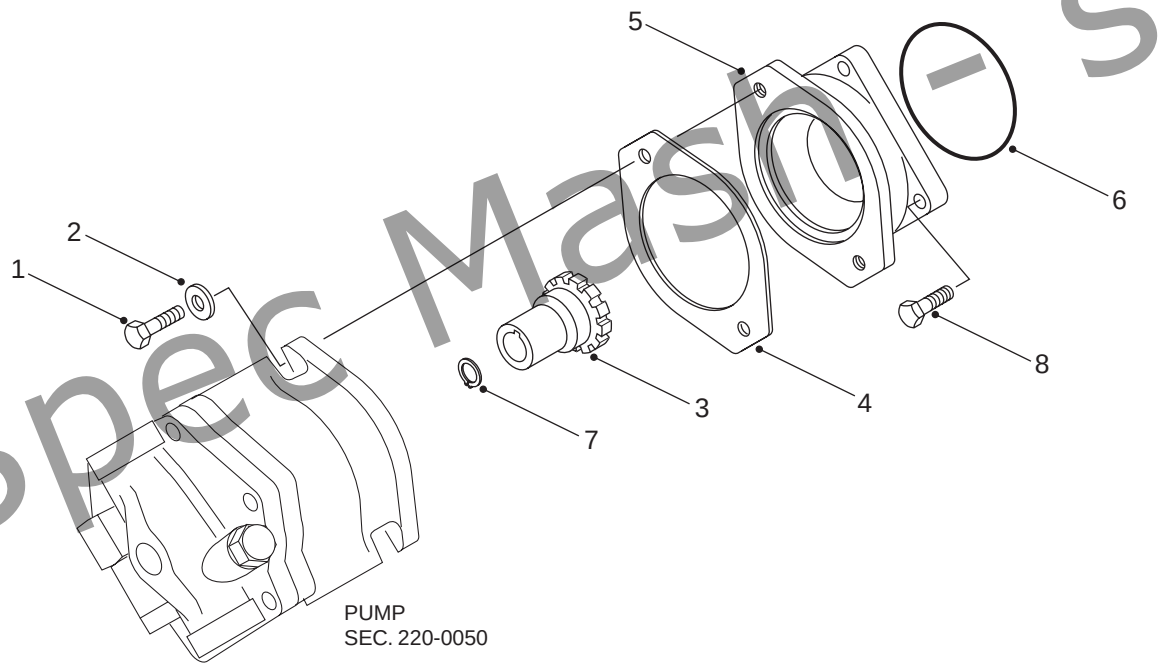

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0060-8391 PUMP AND ACCUMULATOR MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	00179885	BOLT		
	002	002	09270000	WASHER-HARDENED		
	003	001	15244763	COUPLING-SPLINED		
	004	001	09206866	GASKET		
	005	001	15004932	ADAPTOR-PUMP MTG		
	006	001	09172766	O RING		
	007	001	00274416	RING		
	008	004	00179883	BOLT		


Bel Spec Mash - servis

https://truckmanualshub.com/

220-0080-8391 ACCUMULATOR-STEERING
FROM SERIAL NO. T8391011 TO T8391018

DRAWING NO. P5482

P5482

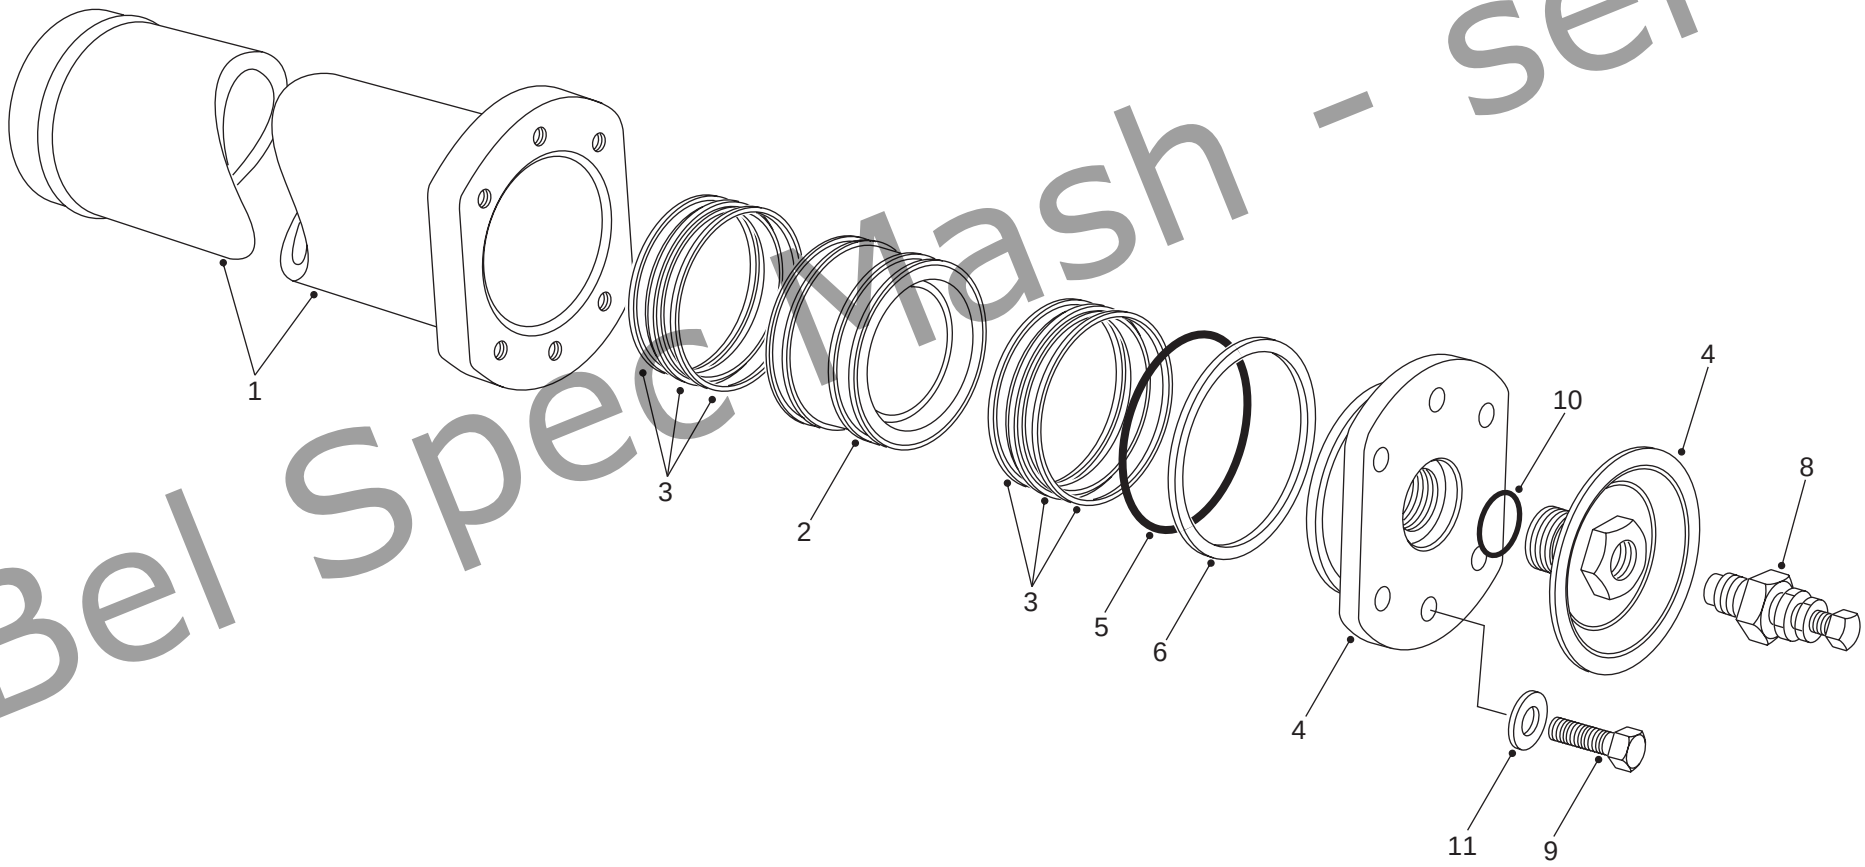

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0080-8391 ACCUMULATOR-STEERING
FROM SERIAL NO. T8391011 TO T8391018

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	001	15007340	ACCUMULATOR ASSY		
	001	001	15245482	.TUBE		
	002	001	15021812	.PISTON		
	003	002	15021811	.SEAL		
	004	001	15007338	.CAP-END		
	005	001	09190980	.O RING		
	006	001	09220661	.RING-BACKUP		
	007	001	15002608	.SHIELD		
	008	001	06525035	.VALVE ASSY-RECHARGE		
	009	006	00223471	.BOLT		
	010	001	00274253	.O RING		
	011	006	15007339	.WASHER-HARDENED		

Bel Spec Mash - servis


https://truckmanualshub.com/

09/02 (ECN 104804)

220-0080-8391 ACCUMULATOR-STEERING
FROM SERIAL NO. T8391019 TO T8391034

DRAWING NO. P11162

P11162

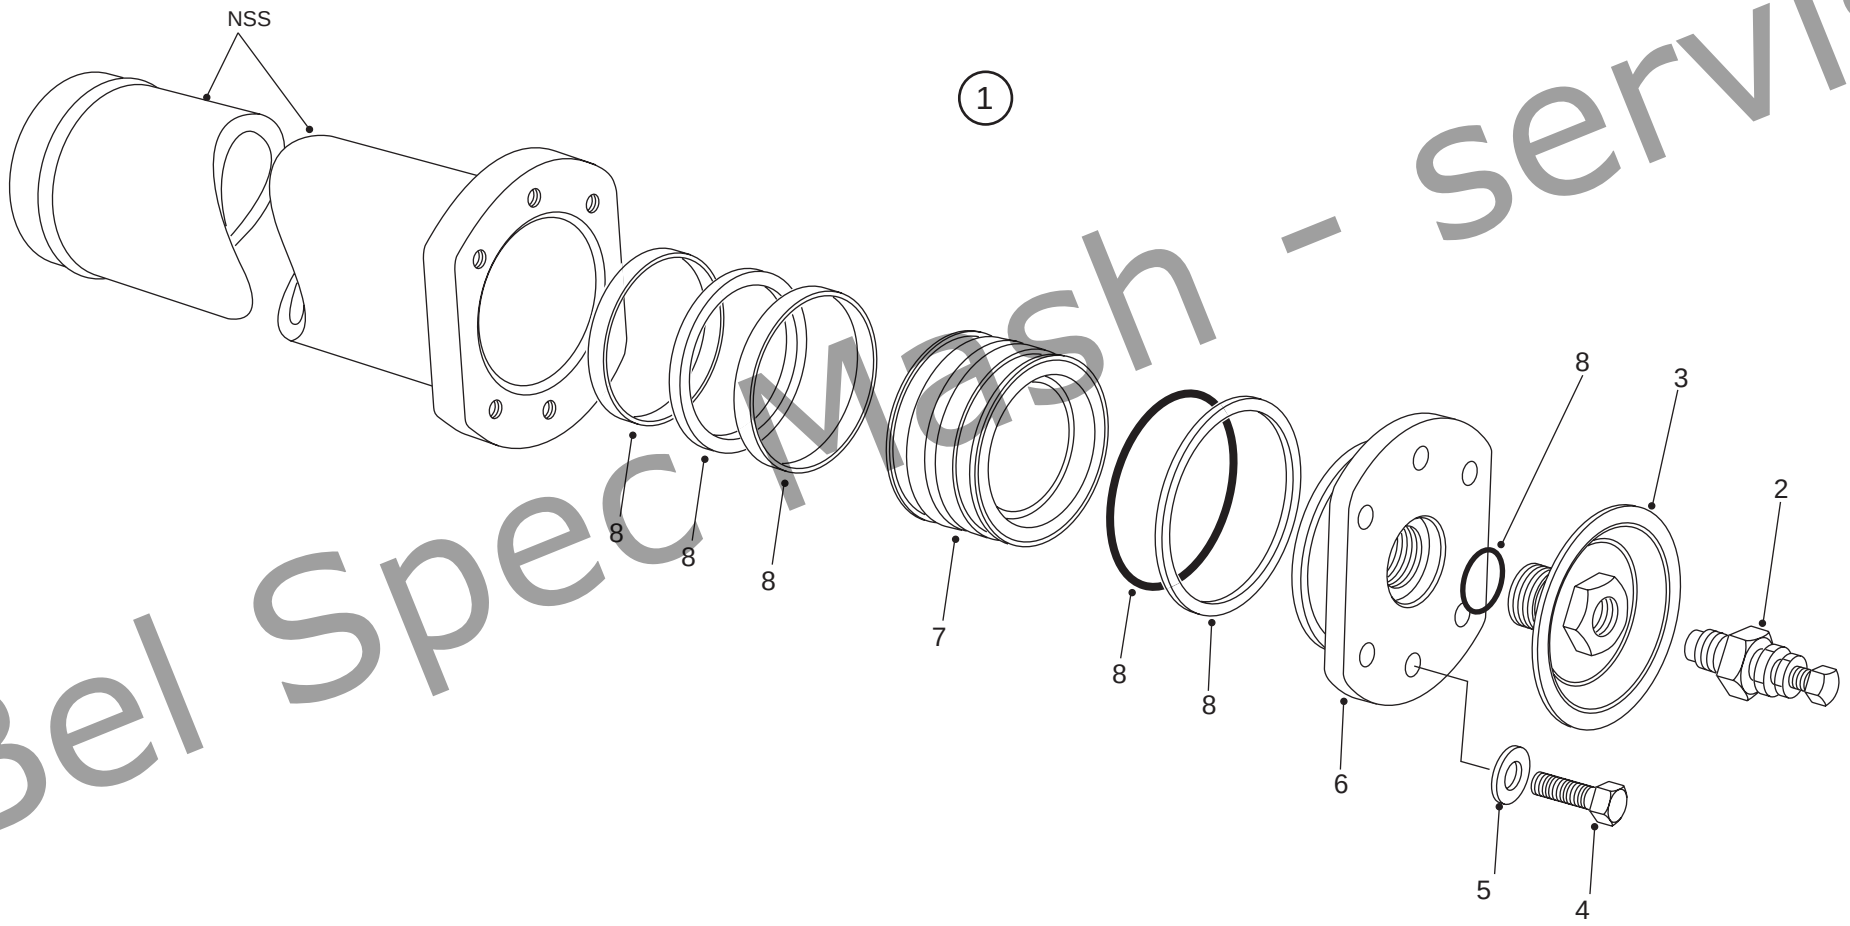

Bel Spec Wash - servis

https://truckmanualshub.com/

220-0080-8391 ACCUMULATOR-STEERING
FROM SERIAL NO. T8391019 TO T8391034

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15314801	ACCUMULATOR ASSY(3.7GAL)		
	002	001	15500406	.VALVE ASSY		
	003	001	15500407	.SHIELD ASSY		
	004	006	15500408	.BOLT		
	005	006	15500409	.WASHER-HDN		
	006	001	15500410	.END CAP		
	007	001	15500411	.PISTON		
	008	001	15500412	.SERVICE KIT		


Bel Spec Mash - servis

https://truckmanualshub.com/

01/03 (ECN 105308)

220-0080-8391 ACCUMULATOR-STEERING
FROM SERIAL NO. T8391035 TO T8391052

DRAWING NO.P11201

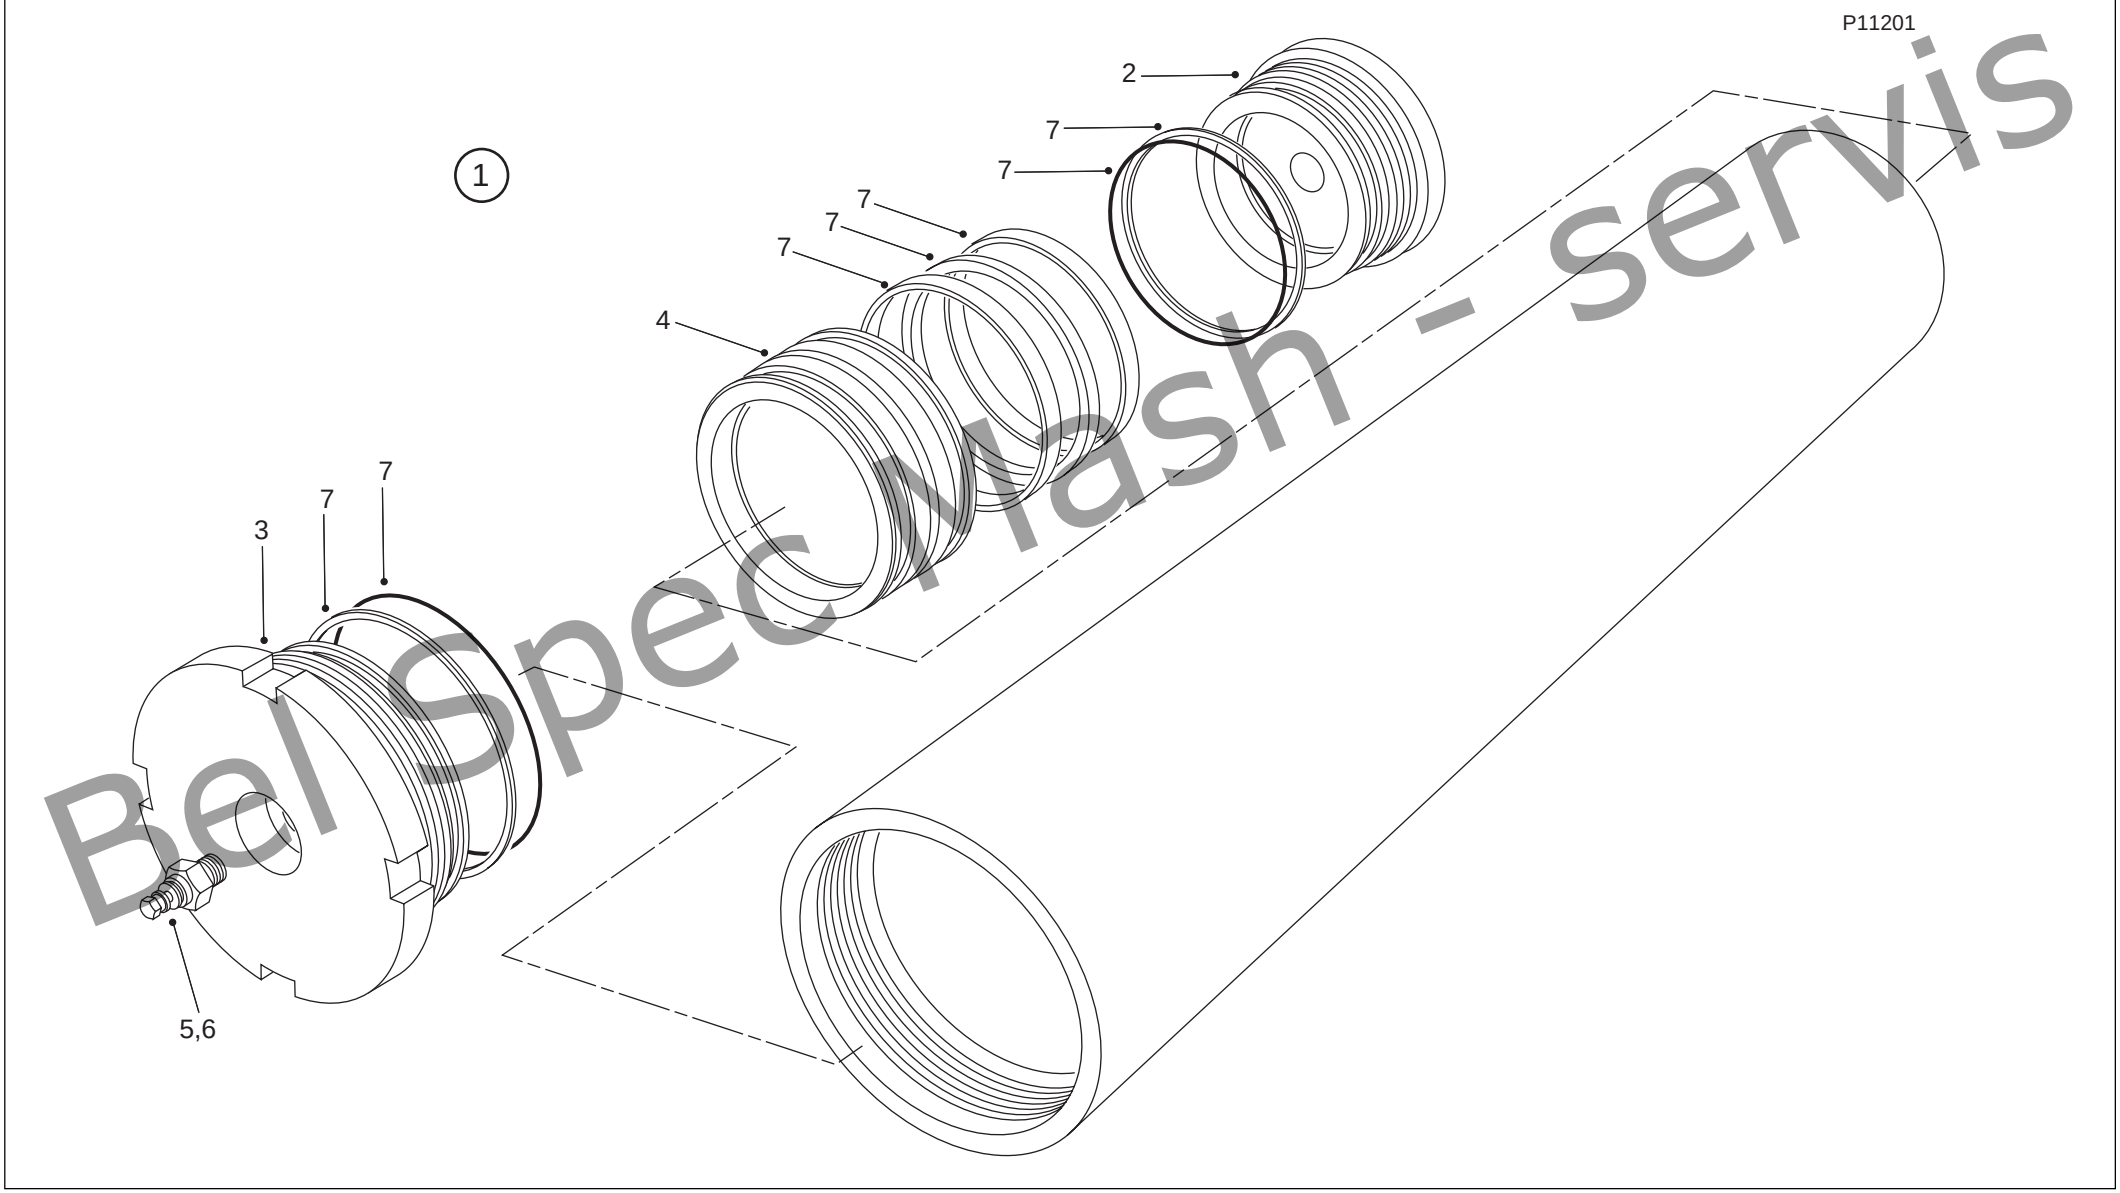

BelSpec Nash - servis

https://truckmanualshub.com/

220-0080-8391 ACCUMULATOR-STEERING
FROM SERIAL NO. T8391035 TO T8391052

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15315998	ACCUMULATOR		
	002	001	15500634	.END CAP		
	003	001	15500635	.END CAP		
	004	001	15500411	.PISTON		
	005	001	15500632	.FITTING		
	006	001	15500406	.VALVE ASSY		
	007	001	15500633	.KIT-SERVICE		


Bel Spec Mash - servis

https://truckmanualshub.com/

220-0080-8391 ACCUMULATOR-STEERING

FROM SERIAL NO. T8391053

DRAWING NO. P11382

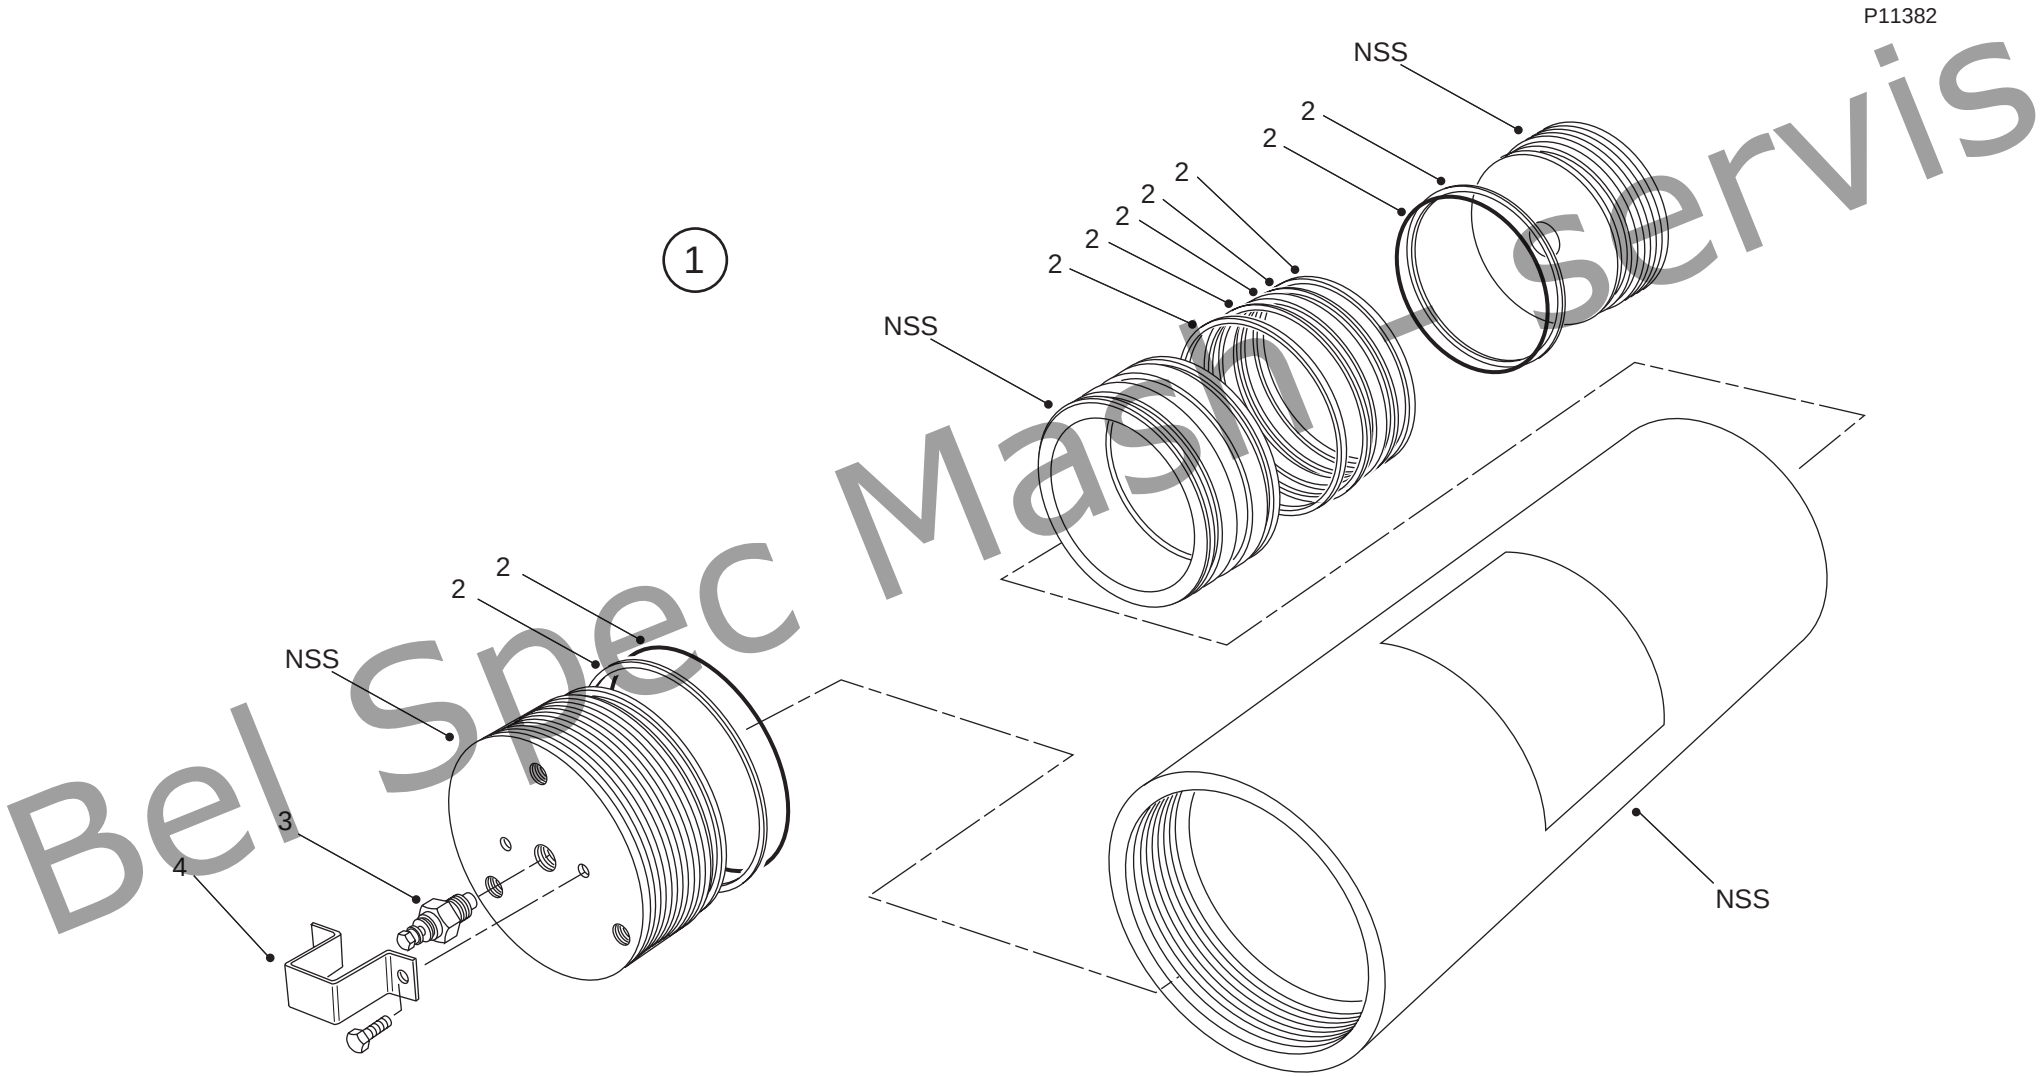

Bel Spec Mash-Servis

https://truckmanualshub.com/

220-0080-8391 ACCUMULATOR-STEERING
FROM SERIAL NO. T8391053


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15317871	ACCUMULATOR		
	002	001	15501024	.SEAL KIT-PISTON		
	003	001	15501025	.GAS VALVE		
	004	001	15501026	.PROTECTOR-GAS VALVE		

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0090-8391 STEERING VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P9724

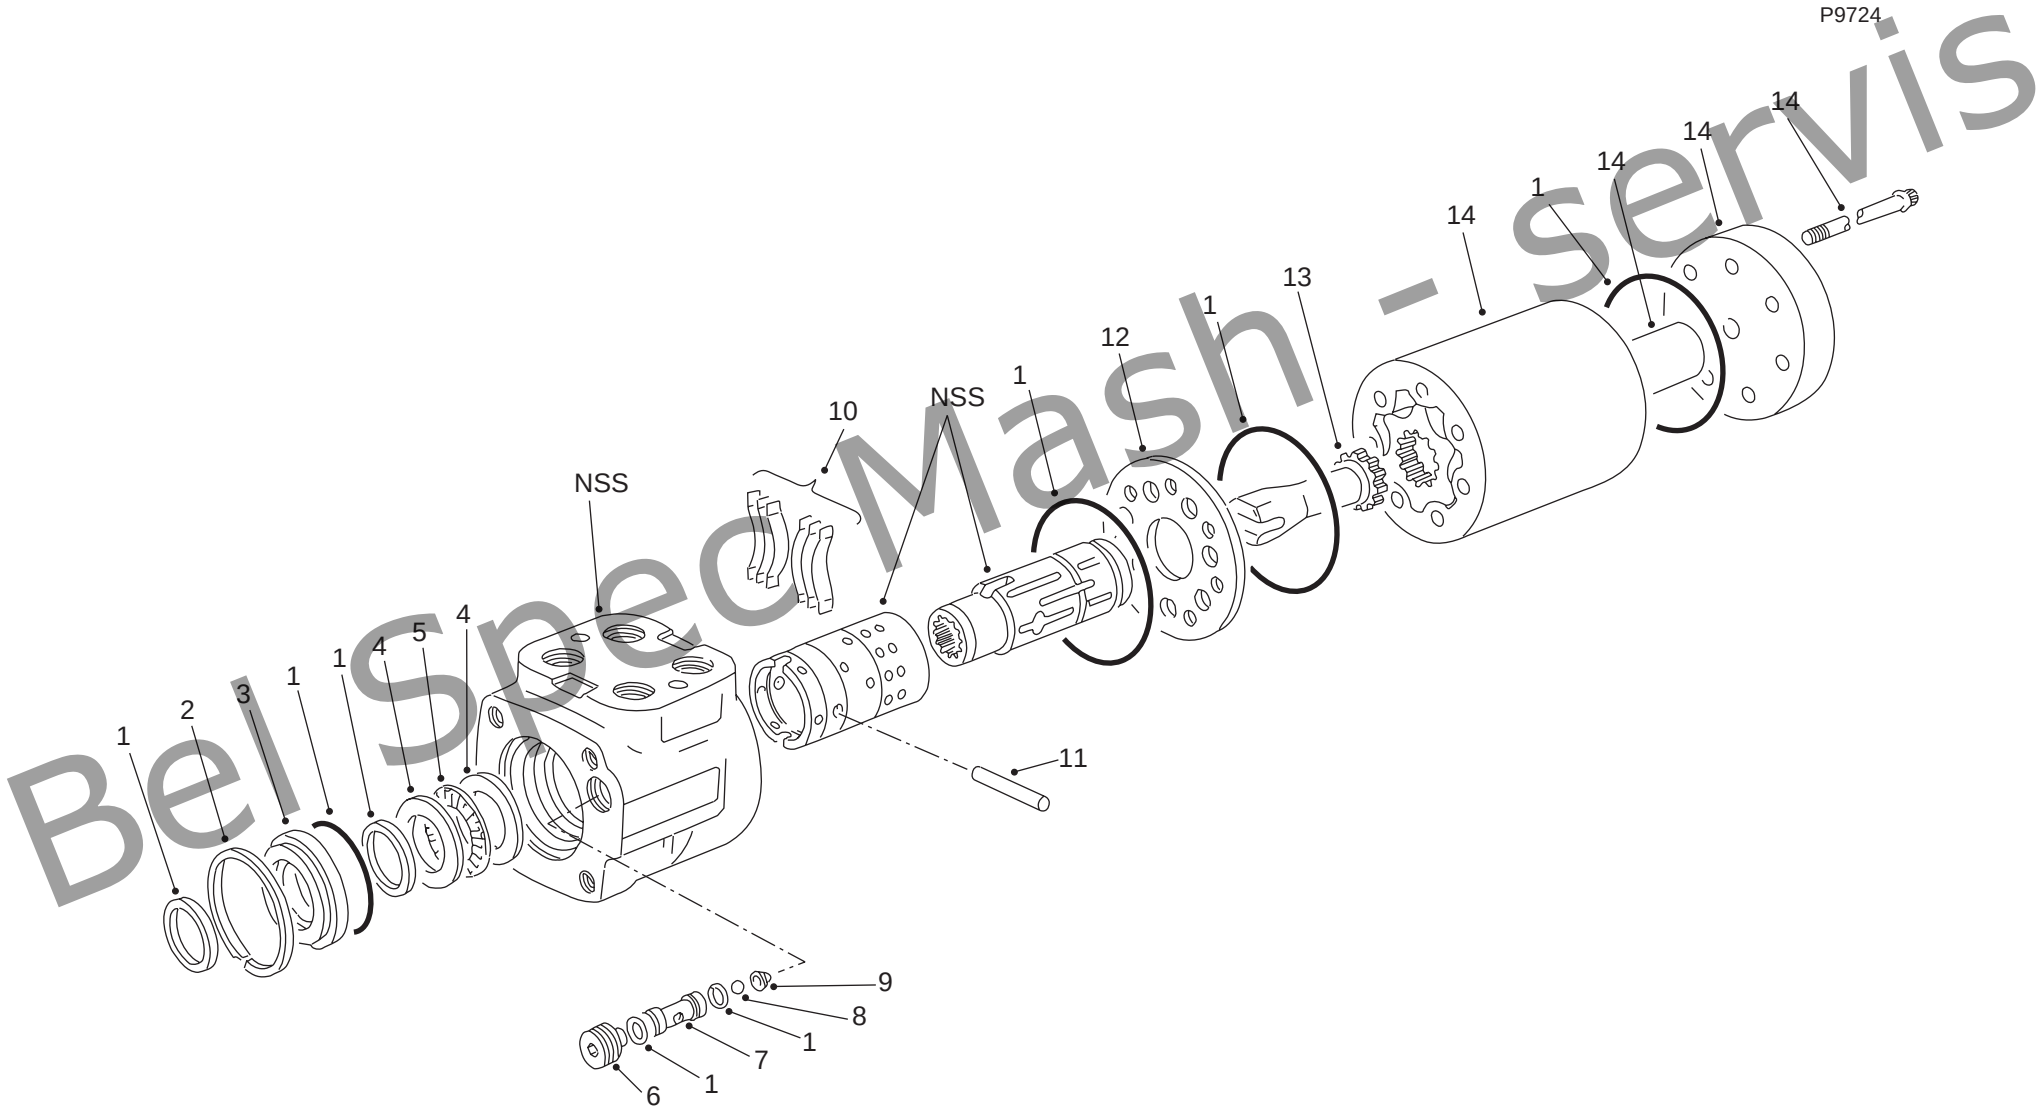

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0090-8391 STEERING VALVE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	001	15252436	VALVE ASSY-STEERING		
	001	001	15269825	.KIT-SEAL		
	002	001	09055618	.RING-SNAP		
	003	001	09055616	.GLAND-BUSHING SEAL		
	004	002	09055615	.BEARING		
	005	001	00457151	.BEARING		
	006	001	09055613	.SCREW-SET		
	007	001	09055606	.SEAT-BALL CHECK		
	008	001	00104919	.BALL-CHECK		
	009	001	09055599	.RETAINER-BALL CHECK		
	010	001	15267631	.KIT-CENTERING SPRING		
	011	001	09036296	.PIN-CENTERING		
	012	001	15269820	.PLATE-SPACER		
	013	001	09031165	.DRIVE		
	014	001	15269827	.KIT-GEROTOR/SPACER		


Bel Spec Mash - servis

https://truckmanualshub.com/

220-0110-8391 DOUBLE RELIEF VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P9725

P9725

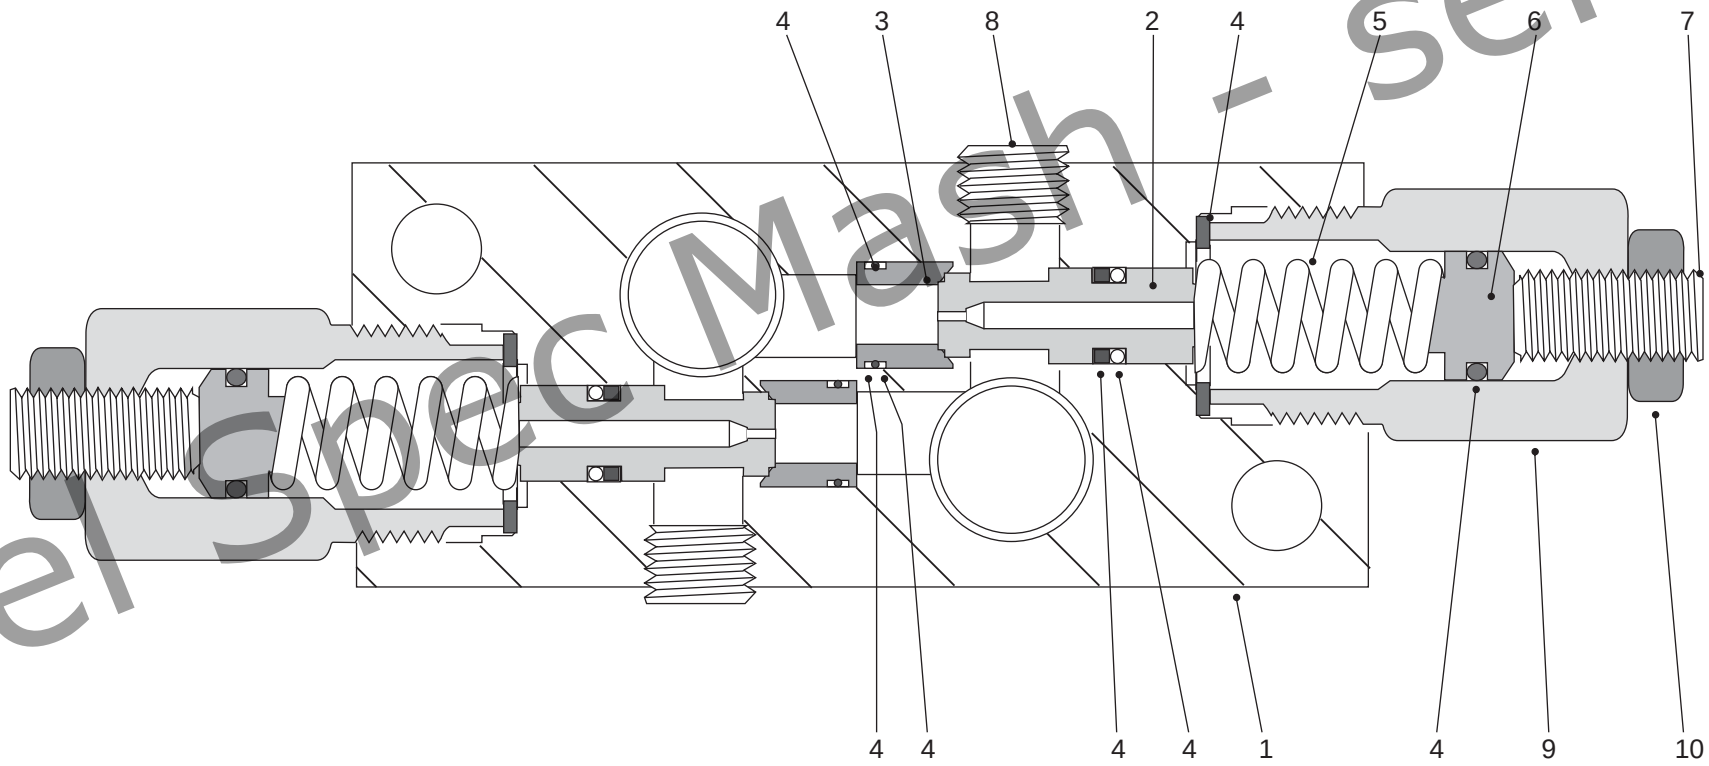

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0110-8391 DOUBLE RELIEF VALVE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15253016	VALVE-CROSS OVER		
	002	002	15266671	.POPPET		
	003	002	15266670	.SEAT		
	004	001	15266680	.KIT-SEAL		
	005	002	15266678	.SPRING		
	006	002	15269701	.SPRING END		
	007	002	15269702	.SCREW-ADJUST		
	008	002	00444692	.PLUG		
	009	002	15269703	.RELIEF BODY		
	010	002	00114496	.NUT-JAM		

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0120-8391 STEERING CYLINDER
FROM SERIAL NO. T8391011 TO T8391055

DRAWING NO. P10226

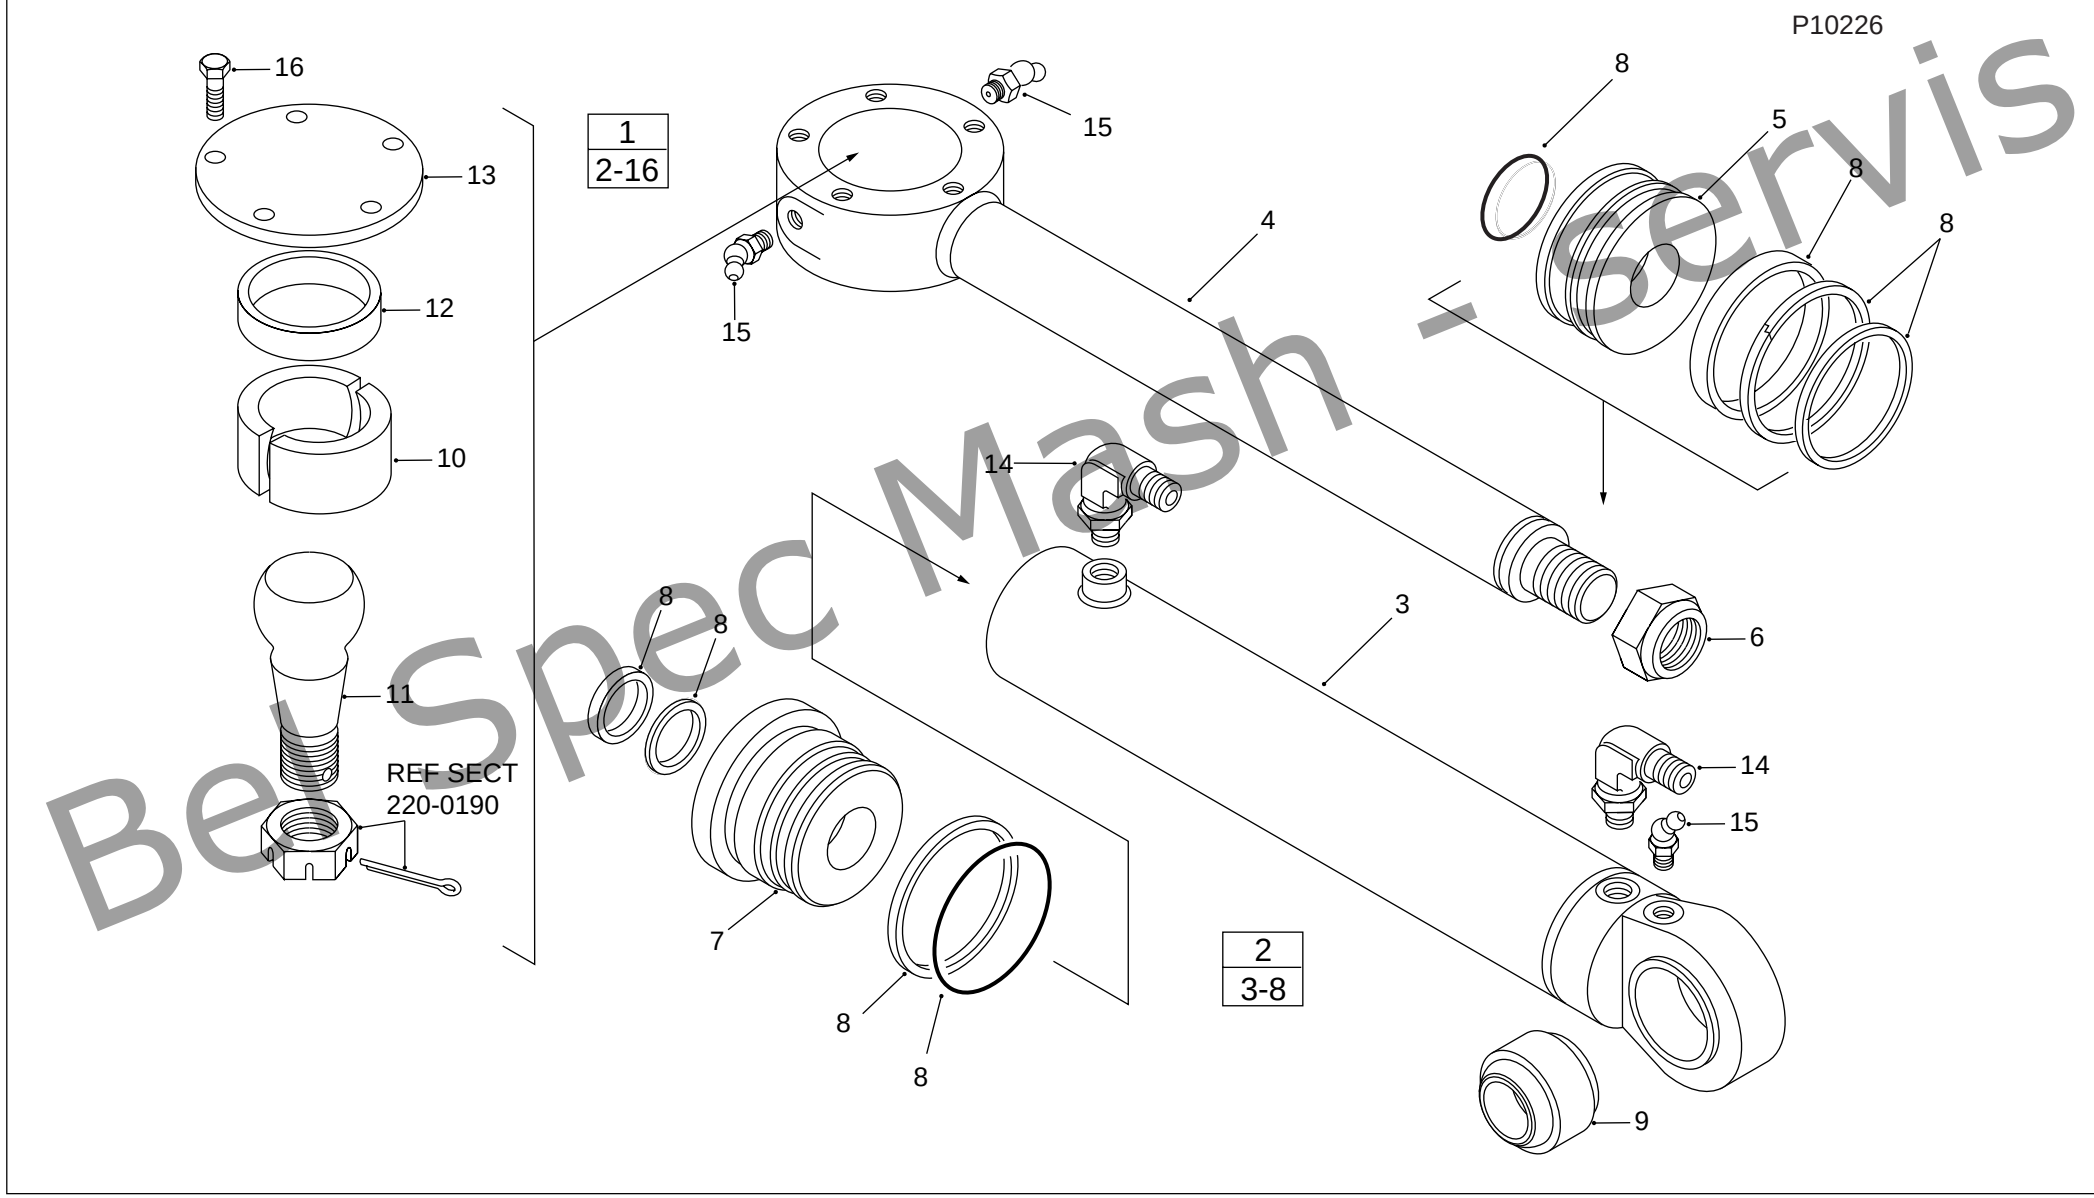

BelSpec Mash - servis

https://truckmanualshub.com/

220-0120-8391 STEERING CYLINDER
FROM SERIAL NO. T8391011 TO T8391055

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15303578	CYLINDER ASSY-STEERING		
	002	002	15303577	.CYLINDER-STEERING		
	003	002	15273475	..SHELL ASSY		
	004	002	15273476	..ROD ASSY		
	005	002	15273477	..PISTON		
	006	002	15273478	..NUT		
	007	002	15273479	..RETAINER		
	008	002	15273474	..KIT-SERVICE		
	009	002	09253494	.BUSHING		
	010	002	09253566	.BUSHING		
	011	002	09258621	.PIN		
	012	002	09018310	.RING-RETAINER		
	013	002	09018309	.PLATE		
	014	004	15252996	.ELBOW		
	015	006	09411017	.FITTING-GREASE		
	016	010	00179841	.BOLT		


Bel Spec Mash - servis

https://truckmanualshub.com/

11/03 (ECN 106092)

220-0120-8391 STEERING CYLINDER
FROM SERIAL NO. T8391056

DRAWING NO. P11364

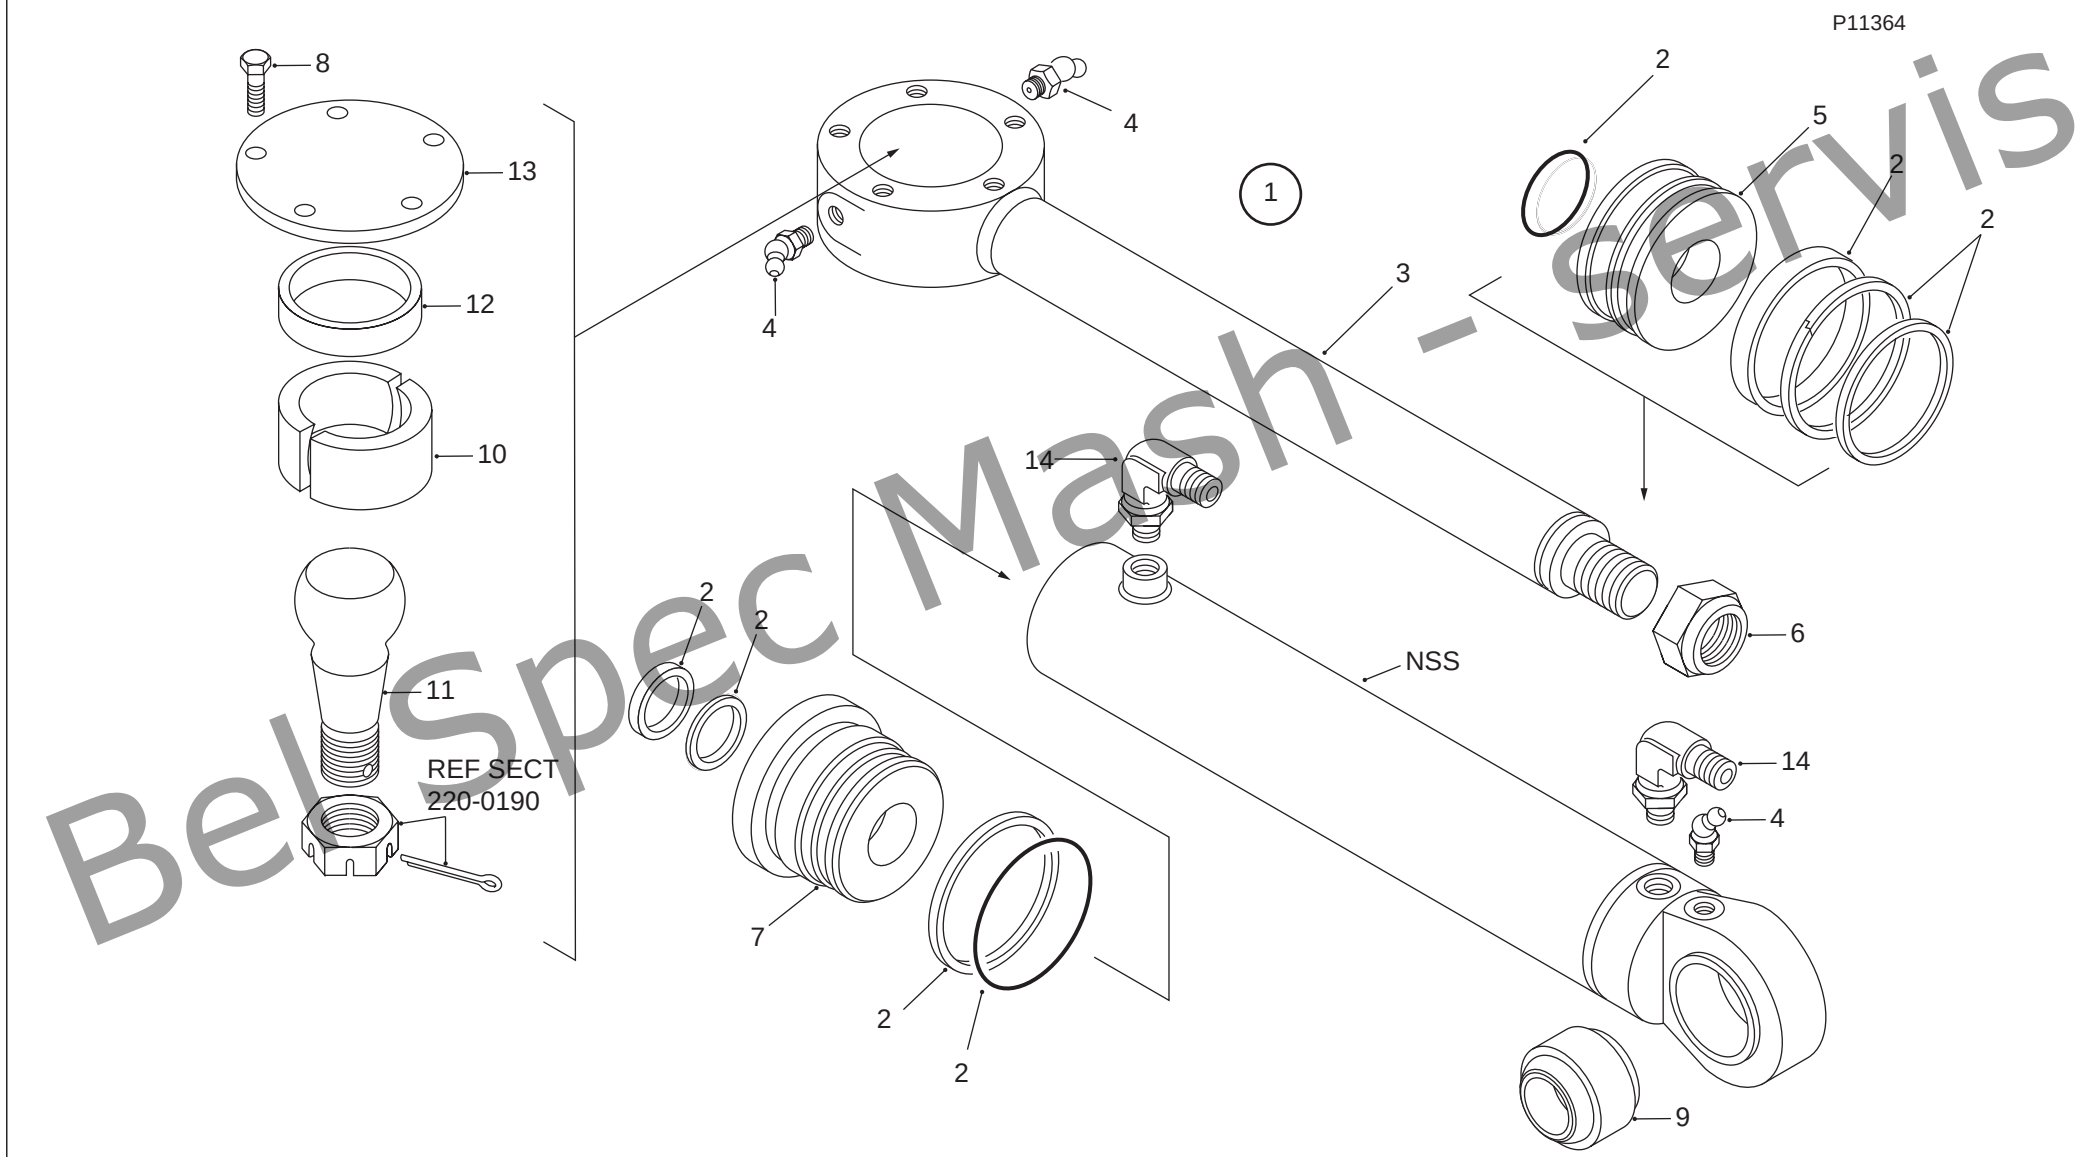

BelSpec Mash - servis

https://truckmanualshub.com/

220-0120-8391 STEERING CYLINDER
FROM SERIAL NO. T8391056

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15318032	STEERING CYLINDER(PARKER)		
	002	001	15500959	.SERVICE KIT		
	003	001	15500960	.PISTON ROD COMPLETE		
	004	003	09411017	.FITTING-GREASE		
	005	001	15500956	.PISTON		
	006	001	15500957	.NUT		
	007	001	15500958	.END RETAINER		
	008	005	00179841	.BOLT		
	009	001	09253494	.BUSHING		
	010	001	09253566	.BUSHING		
	011	001	09258621	.PIN		
	012	001	09018310	.RING-RETAINER		
	013	001	09018309	.PLATE		
	014	002	15252996	.ELBOW		


Bel Spec Mash - servis

https://truckmanualshub.com/

220-0130-8391 RELIEF VALVE-STEERING
FROM SERIAL NO. T8391011

DRAWING NO. P7542

P7542

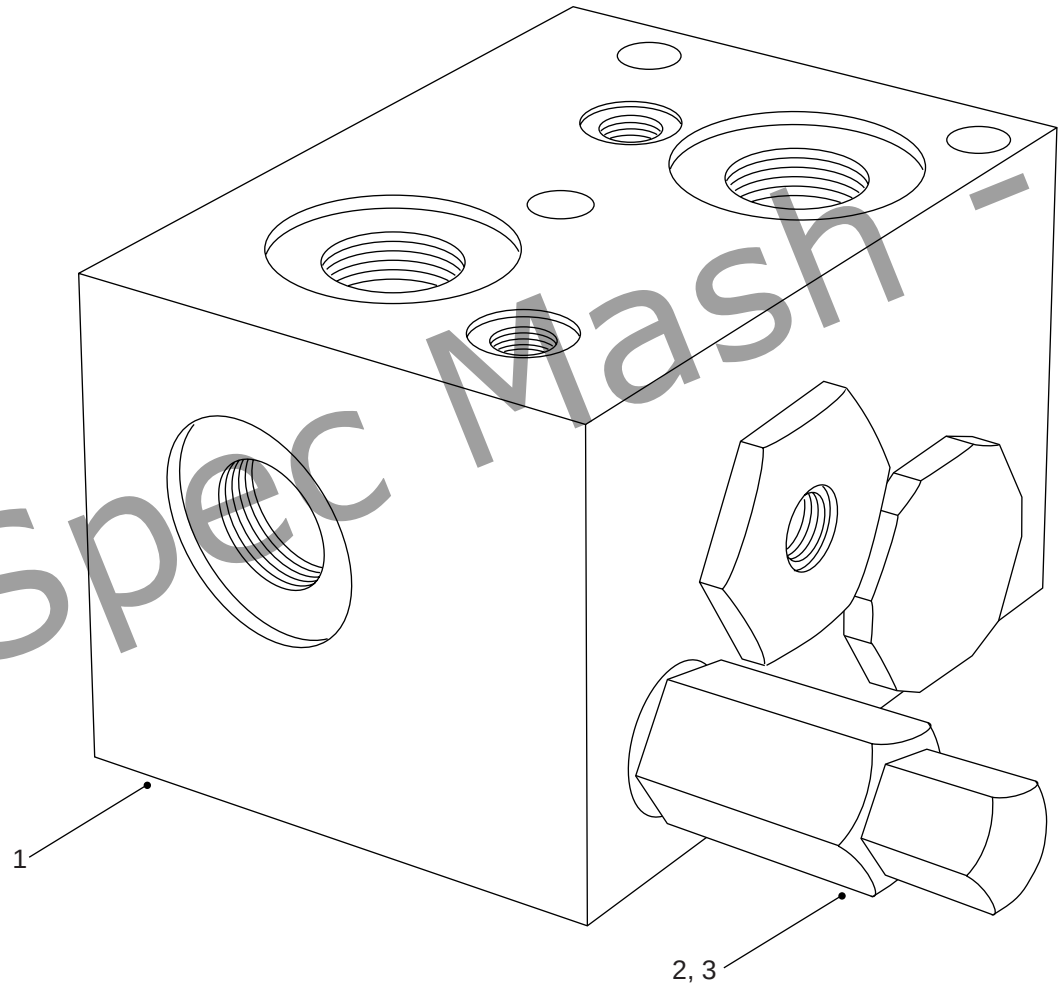

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0130-8391 RELIEF VALVE-STEERING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	15247593	VALVE-ACCUMULATOR		
	002	001	15265078	.CARTRIDGE		
	003	001	09038865	.O RING		

NOTES:
A 15265696 SEAL KIT- VALVE


Bel Spec Mash - servis

https://truckmanualshub.com/

220-0150-8391 FILTER-STEERING
FROM SERIAL NO. T8391011

DRAWING NO. P10258

P10258

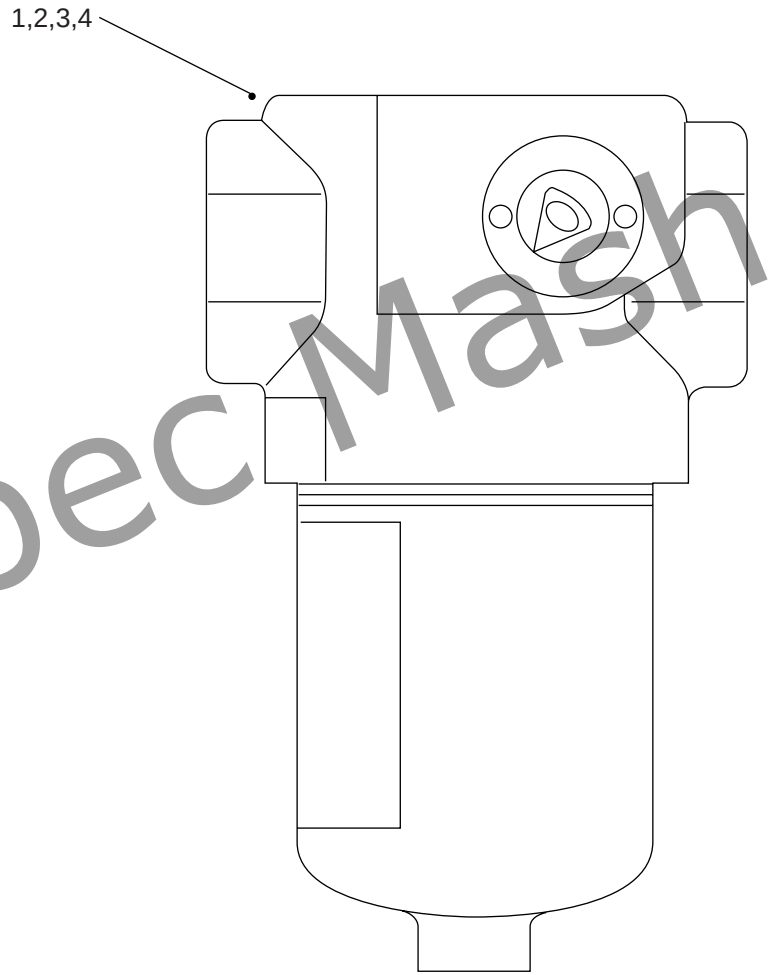

Bel SpecMash - servis

https://truckmanualshub.com/

220-0150-8391 FILTER-STEERING
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15251818	FILTER ASSY-STEERING		
	002	001	15267224	.MAGNET		
	003	001	15266831	.ELEMENT		
	004	001	15267223	.KIT-SEAL		

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0190-8391 STEERING LINKAGE
FROM SERIAL NO. T8391011

DRAWING NO. P10727

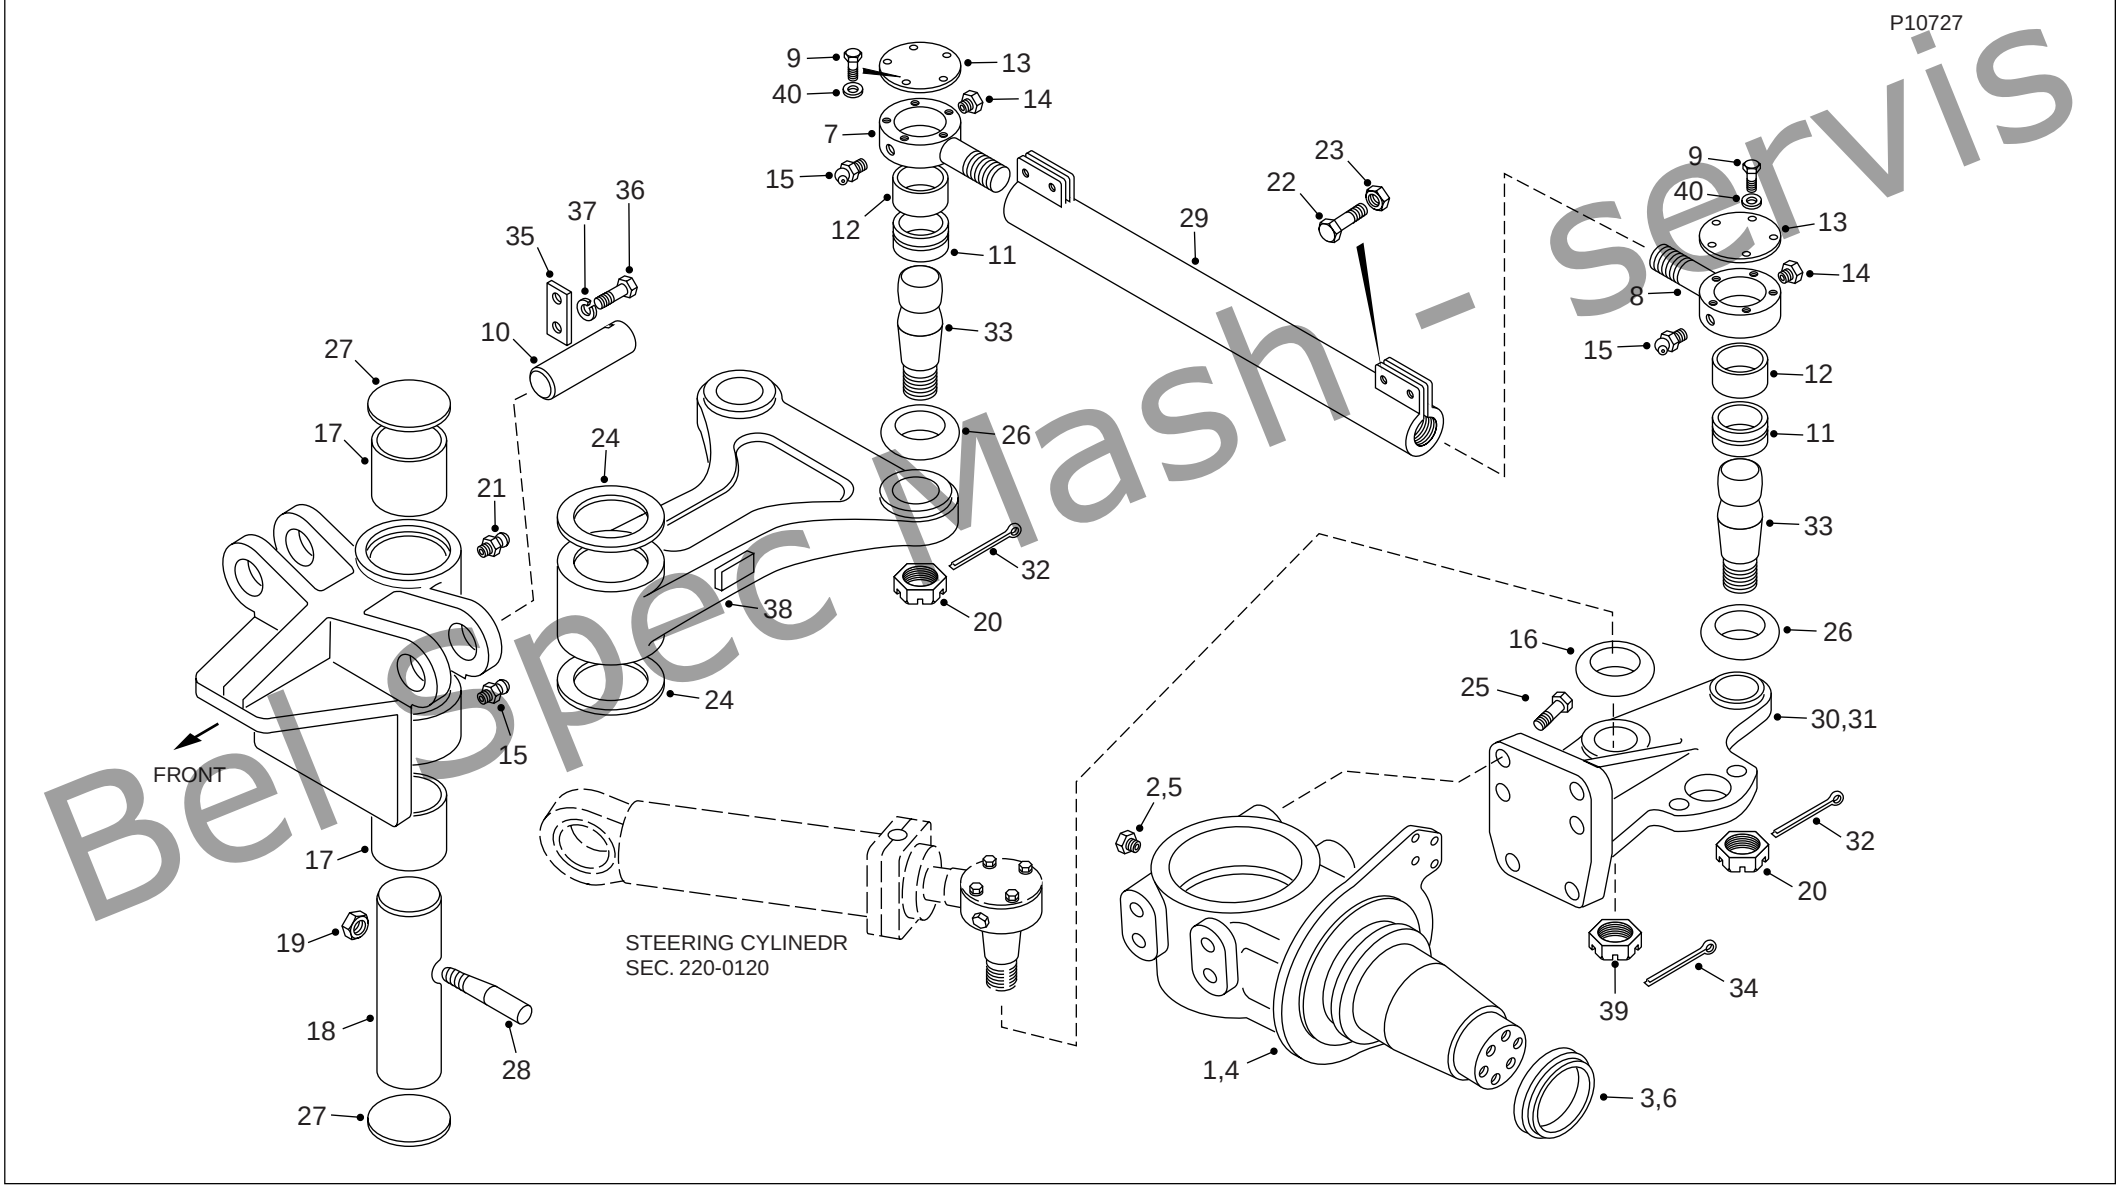

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0190-8391 STEERING LINKAGE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15231622	SPINDLE ASSY-LH		
	002	001	09016972	.SPACER		
	003	001	00444692	.PLUG		
	004	001	15231623	SPINDLE ASSY-RH		
	005	001	09016972	.SPACER		
	006	001	00444692	.PLUG		
	007	002	15228999	ROD-END		
	008	002	15228998	ROD-END		
	009	020	00179839	BOLT		
	010	002	15237869	PIN - STEER CYL		
	011	004	09015216	BEARING		
	012	004	09018310	RING-RETAINER		
	013	004	09018309	PLATE		
	014	004	00444613	PLUG		
	015	004	09411019	NIPPLE-GREASE		
	016	002	09253567	SEAL		
	017	002	15230266	BUSHING		
	018	001	09384854	PIN		
	019	001	09355772	NUT		
	020	004	00272328	NUT		
	021	001	09411010	FITTING-GREASE		
	022	008	00271563	BOLT		
	023	008	09354243	LOCKNUT		
	024	002	15230267	WASHER TH		
	025	012	00223489	BOLT		
	026	004	09253567	SEAL		
	027	002	00131296	PLUG		
	028	001	09014471	PIN-LOCK		
	029	002	15237698	TIE ROD		
	030	001	15250765	ARM		
	031	001	15250772	ARM		
	032	004	00103426	PIN-COTTER		
	033	004	09372594	STUD		
	034	002	00103426	PIN-COTTER		
	035	002	09253492	PAD		
	036	004	00179839	BOLT		
	037	004	00108580	LOCKWASHER		
	038	001	15304346	BELLCRANK		
	039	002	00427667	NUT		
	040	020	00108580	LOCKWASHER		

BelSpec Mash - servis

https://truckmanualshub.com/

220-0230-8391 STEERING COLUMN MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P10701

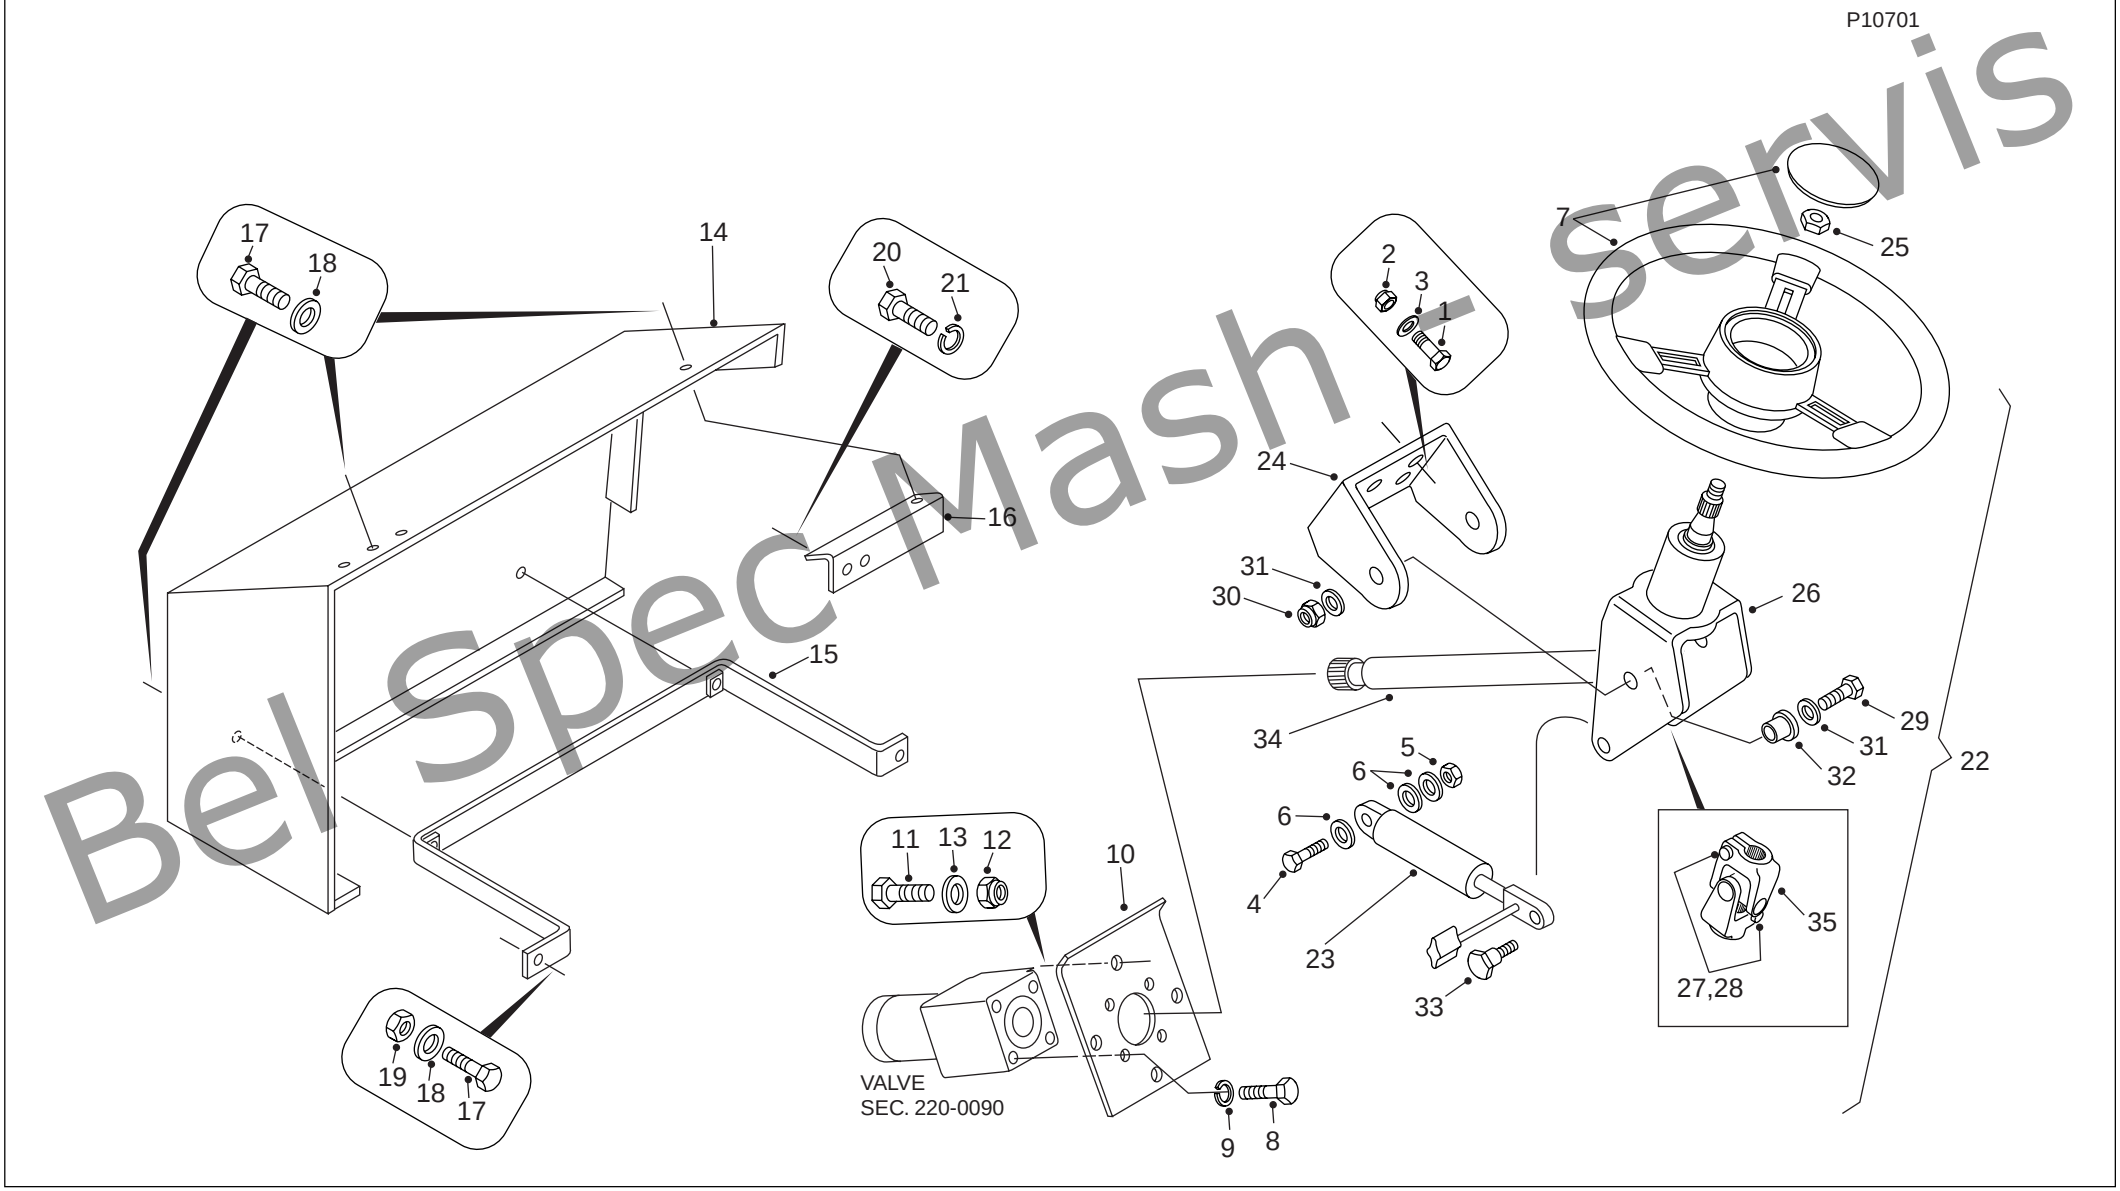

Bel Spec Mash - servis

https://truckmanualshub.com/

220-0230-8391 STEERING COLUMN MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	004	06351230	BOLT		
	002	004	06471201	LOCKNUT		
	003	004	07151220	WASHER		
	004	001	06350835	SCREW		
	005	001	06430801	NUT		
	006	003	07150815	WASHER		
	007	001	15255304	STEERING WHEEL		
	008	004	00179837	BOLT		
	009	004	00108580	LOCKWASHER		
	010	001	15300540	PLATE		
	011	004	06351025	BOLT		
	012	004	06471001	LOCKNUT		
	013	004	07151020	WASHER		
	014	001	15312994	ORBITROL COVER		
	015	001	15300827	BRACKET ASSY		
	016	001	15300829	BRACKET ASSY		
	017	005	06351030	BOLT		
	018	005	09060202	WASHER-HARDENED		
	019	002	06431001	NUT		
	020	002	06350820	SCREW		
	021	002	07160830	LOCKWASHER		
	022	001	15310191	STEERING COLUMN ASSY		
	023	001	15275116	.GAS STRUT ASSY		
	024	001	15275117	.BRACKET ASSY		
	025	001	15275118	.NUT		
	026	001	15275119	.COLUMN ASSY-TOP NSS		
	027	002	15275120	.BOLT		
	028	002	15275121	.NUT-NYLOC		
	029	002	15275122	.BOLT		
	030	002	15275123	.NUT-NYLOC		
	031	004	15275124	.WASHER		
	032	002	15274171	.BUSH-PIVOT		
	033	001	15275125	.SHOULDER BOLT		
	034	001	15275126	.SHAFT-LOWER		
	035	001	15275127	.UNIVERSAL JOINT		


Bel Spec Mash - servis

https://truckmanualshub.com/

230-0020-8391 LINES AND FITTINGS-BODY HOIST

FROM SERIAL NO. T8391011

DRAWING NO. P11195

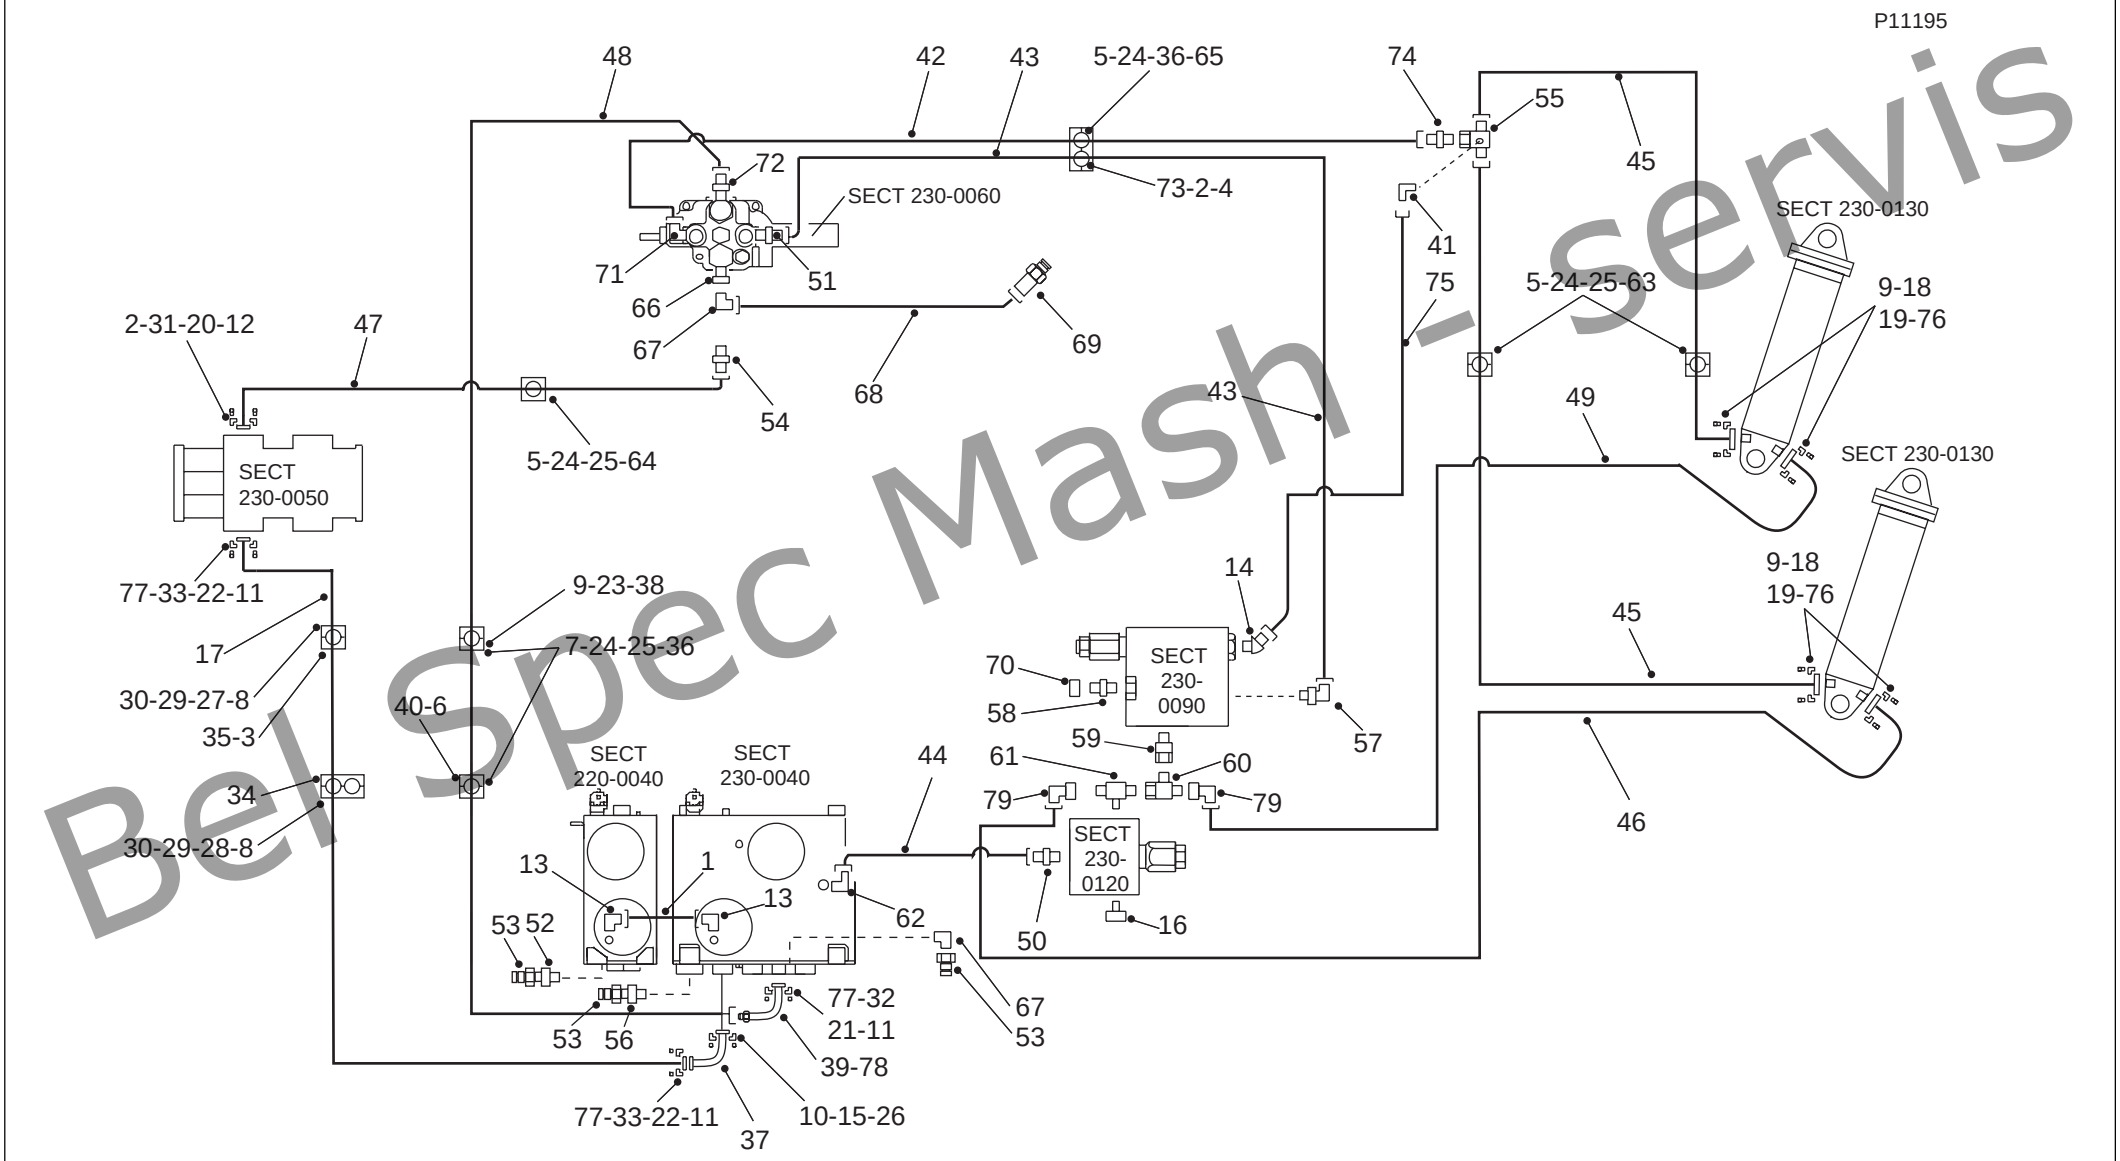

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0020-8391 LINES AND FITTINGS-BODY HOIST
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15301267	HOSE ASSY		
	002	006	00103328	LOCKWASHER		
	003	002	09267949	WASHER-HARDENED		
	004	002	00179860	BOLT		
	005	012	00179839	BOLT		
	006	002	00179885	BOLT		
	007	004	00186609	BOLT		
	008	006	00179885	BOLT		
	009	018	00186622	BOLT		
	010	004	00186646	BOLT		
	011	012	00186725	BOLT		
	012	004	00193221	BOLT		
	013	002	15258036	ELBOW		
	014	001	15253060	ELBOW		
	015	002	09167602	FLANGE-SPLIT		
	016	001	09183206	PLUG		
	017	001	15304125	HOSE ASSY		
	018	004	09216976	O RING		
	019	008	09409981	FLANGE-SPLIT		
	020	002	09409983	FLANGE-SPLIT		
	021	002	09409984	FLANGE-SPLIT		
	022	004	09409985	FLANGE-SPLIT		
	023	002	09417713	NUT		
	024	016	15001428	NUT-STACKING		
	025	008	15001429	CLAMP		
	026	001	15002672	O RING		
	027	002	15004712	CLAMP		
	028	001	15004713	CLAMP		
	029	003	15015251	BUSHING-SPLIT		
	030	004	15004748	NUT-STACKING		
	031	001	15008260	O RING		
	032	001	15008261	O RING		
	033	002	15008262	O RING		
	034	001	15300323	BRACKET ASSY		
	035	001	15304438	BRACKET ASSEMBLY		
	036	004	15014977	BUSHING-SPLIT		
	037	001	15304116	TUBE ASSY		
	038	001	15021389	BRACKET		
	039	001	15252017	TUBE ASSY		
	040	001	15300327	BRACKET ASSY		

230-0020-8391 LINES AND FITTINGS-BODY HOIST
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	09012209	ELBOW		
	042	001	15257942	HOSE ASSY		
	043	001	15257943	HOSE ASSY		
	044	001	15310666	HOSE ASSY		
	045	001	15300189	HOSE ASSY		
	046	002	15300191	HOSE ASSY		
	047	001	15252900	HOSE ASSY		
	048	001	15252857	HOSE ASSY		
	049	001	15300190	HOSE ASSY		
	050	001	15251936	ADAPTOR		
	051	001	15251937	ADAPTOR		
	052	001	15251938	ADAPTOR		
	053	003	15301727	NIPPLE-DIAGNOSTIC		
	054	001	15252870	ADAPTOR		
	055	001	15253394	TEE		
	056	001	15251938	ADAPTOR		
	057	001	15252906	ELBOW		
	058	001	15255212	NIPPLE-DIAGNOSTIC		
	059	001	15252872	ADAPTOR		
	060	001	15252902	TEE		
	061	001	15252869	TEE		
	062	001	15253129	ELBOW		
	063	002	15001434	BUSHING-SPLIT		
	064	001	15015249	BUSHING-SPLIT		
	065	001	15001430	CLAMP		
	066	001	15253163	ADAPTOR-TEST POINT		
	067	001	15251944	ELBOW		
	068	001	15253501	HOSE ASSY		
	069	001	15300946	ADAPTOR-BULKHEAD		
	070	002	15025869	PLUG-DUST		
	071	001	15244830	ELBOW		
	072	001	15253156	ADAPTOR		
	073	001	15252924	PLATE ASSY		
	074	001	15251994	ADAPTOR-BULKHEAD		
	075	001	15313249	HOSE ASSY		
	076	016	00108580	LOCKWASHER		
	077	014	00103329	LOCKWASHER		
A	078	001	15253036	O-RING		
	079	002	15252695	ELBOW		

BelSpec Mash-servis

https://truckmanualshub.com/

230-0020-8391 LINES AND FITTINGS-BODY HOIST
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO

NOTES:
A AVAILABLE IN 15271082 ORFS O RING KIT

Bel Spec Mash - servis

https://truckmanualshub.com/


THIS PAGE IS INTENTIONALLY LEFT BLANK

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0021-8391 SERVO CONTROL LINES-BODY
FROM SERIAL NO. T8391011

DRAWING NO. P10985

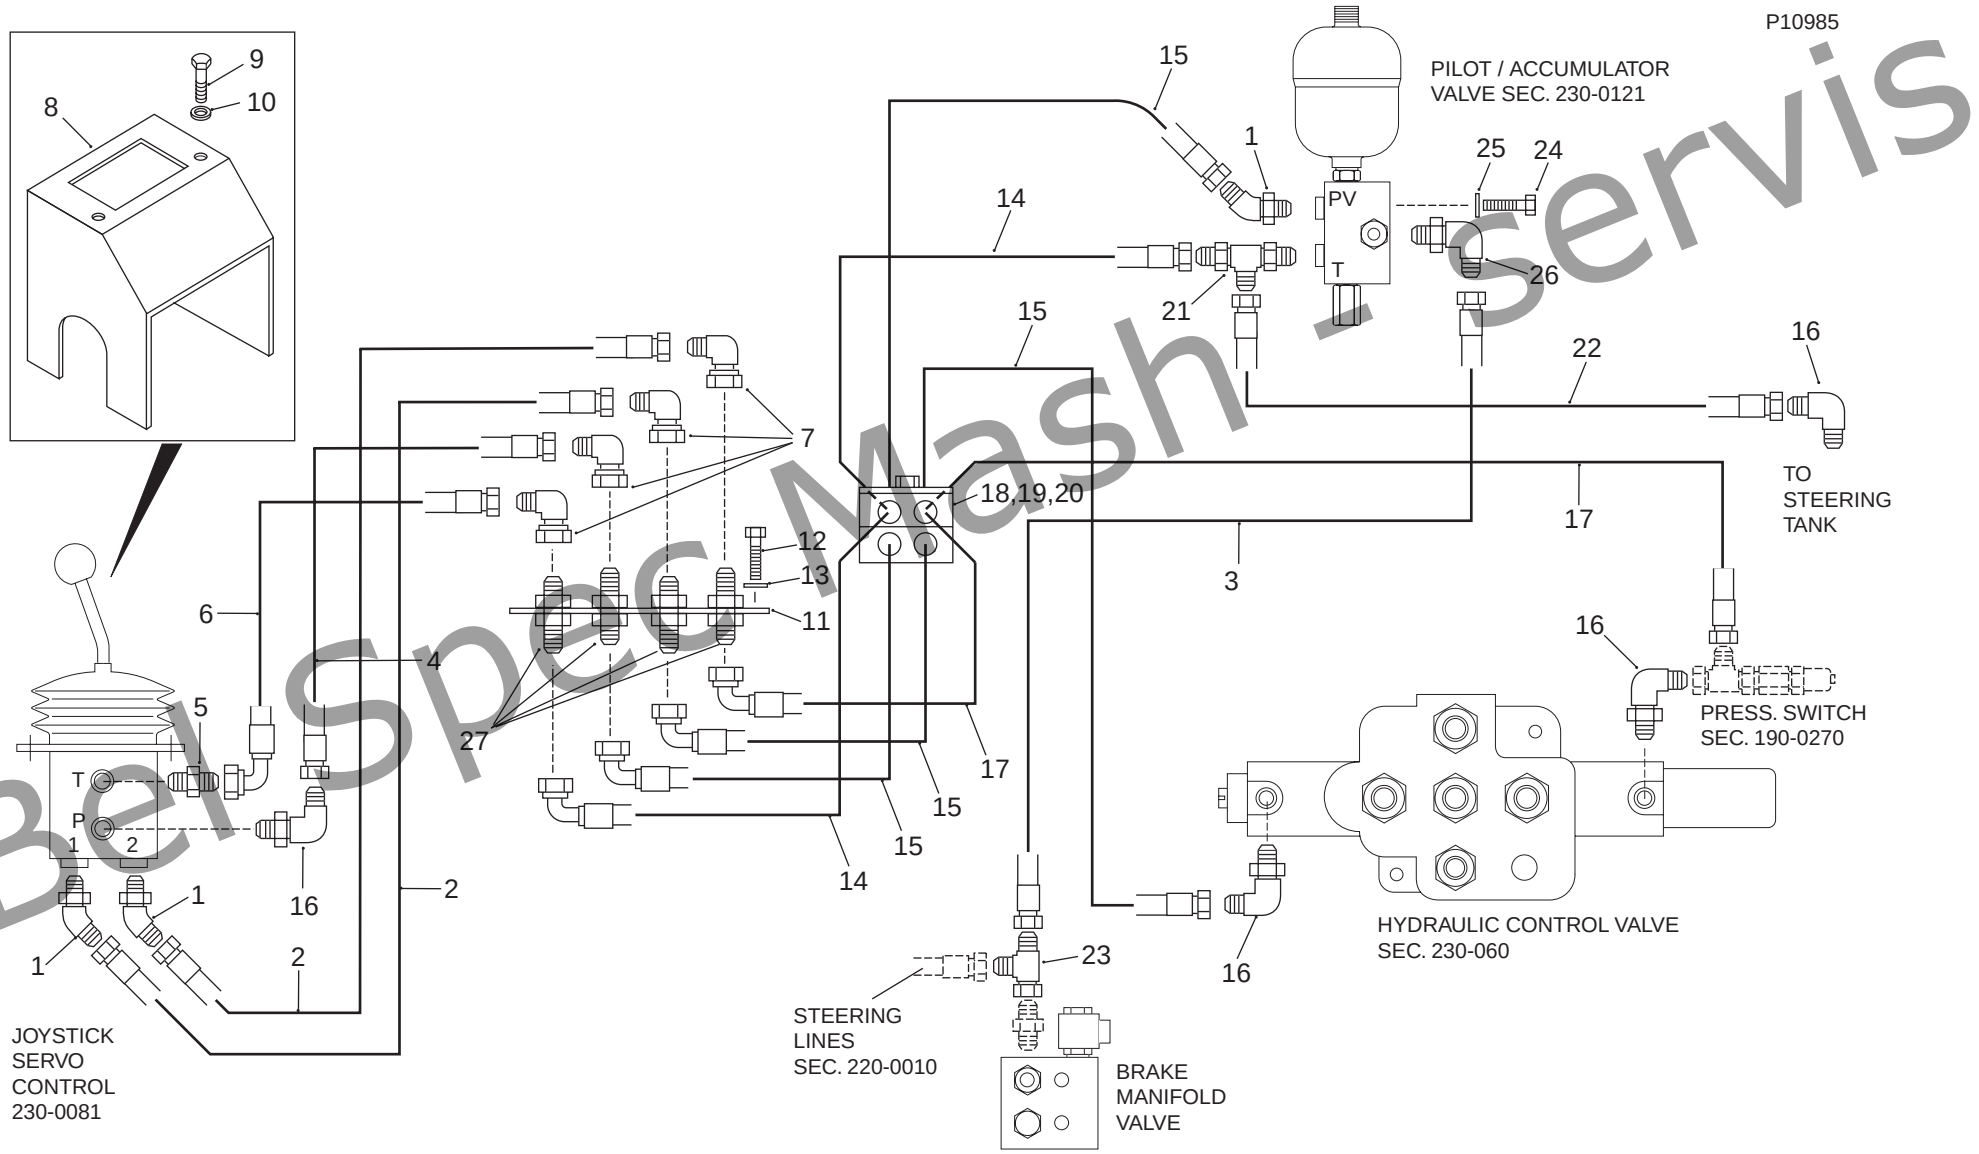

BelSpec Mash - servis

https://truckmanualshub.com/

230-0021-8391 SERVO CONTROL LINES-BODY
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15300696	ELBOW		
	002	002	15301325	HOSE ASSY		
	003	001	15301323	HOSE ASSY		
	004	001	15301324	HOSE ASSY		
	005	001	15251982	ADAPTOR		
	006	001	15301326	HOSE ASSY		
	007	004	15252983	ELBOW		
	008	001	15301158	COVER		
	009	004	15256924	SCREW		
	010	004	07160630	WASHER		
	011	001	15310374	PLATE-SERVO HOSES		
	012	004	06350820	SCREW		
	013	004	07150815	WASHER		
	014	001	15301329	HOSE ASSY		
	015	004	15301327	HOSE ASSY		
	016	004	15255442	ELBOW		
	017	001	15301328	HOSE ASSY		
	018	002	15258472	CLAMP		
	019	001	15253267	BOLT-STACKING		
	020	001	15253268	PLATE-LOCKING		
	021	001	15301332	TEE		
	022	001	15301330	HOSE ASSY		
	023	001	15253073	TEE		
	024	002	06350820	SCREW		
	025	002	07160830	LOCKWASHER		
	026	001	15301344	ELBOW		
	027	004	15253039	ADAPTOR-BULKHEAD		


BelSpec Mash - servis

https://truckmanualshub.com/

R1 09/02 (ECN 105163)

230-0040-8391 TANK AND MOUNTING-BODY HOIST
FROM SERIAL NO. T8391011

DRAWING NO. P9493

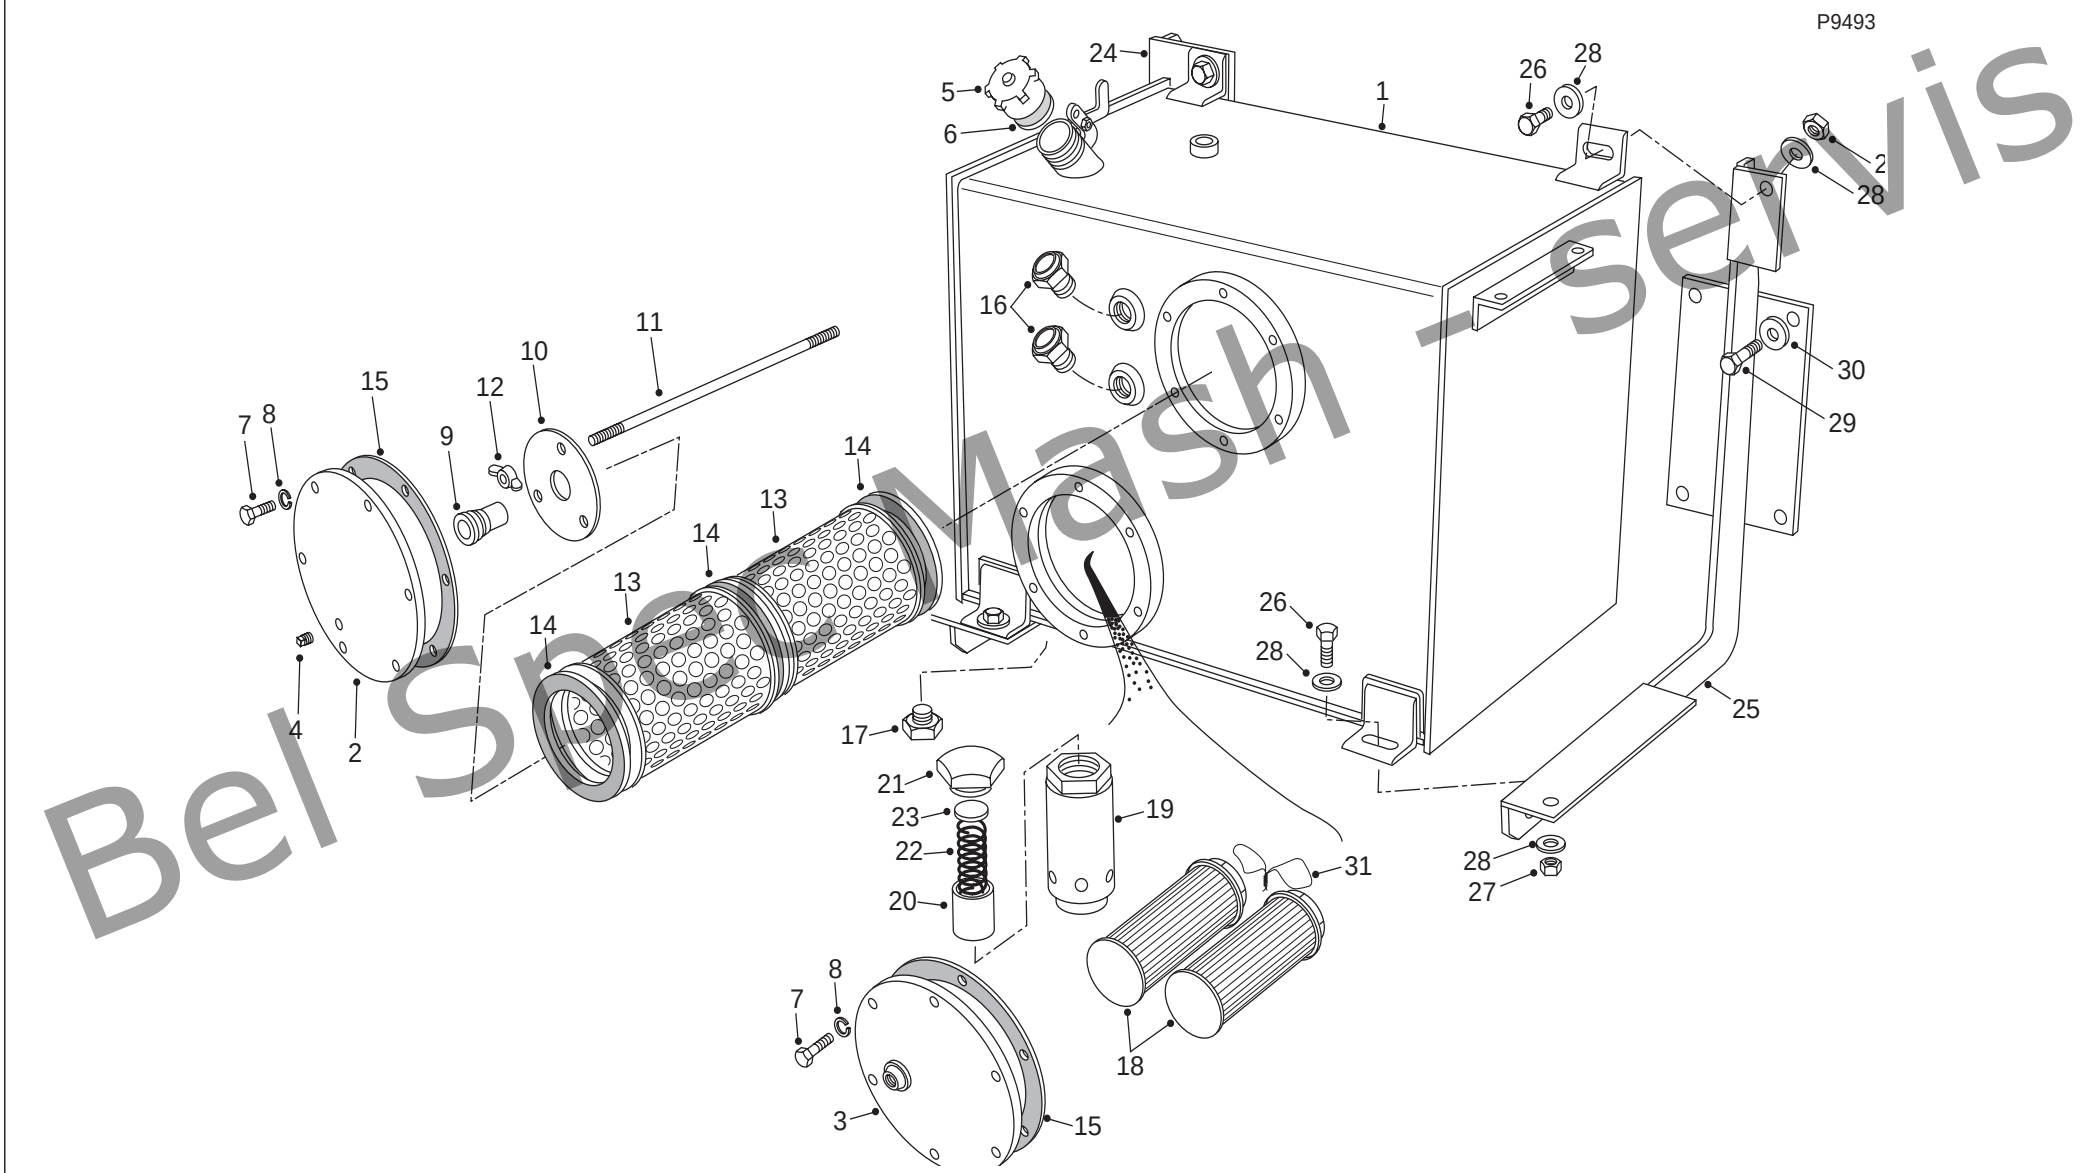

Bel Spec Wash - servis

https://truckmanualshub.com/

230-0040-8391 TANK AND MOUNTING-BODY HOIST
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15248890	TANK-MAIN HYDRAULIC		
	002	001	15255315	.COVER		
	003	001	15301265	.COVER ASSY		
	004	001	00444619	.PLUG		
	005	001	09246992	.CAP ASSY		
	006	001	09247259	.GASKET		
	007	012	00179839	.BOLT		
	008	012	00108580	.LOCKWASHER		
	009	001	15251862	VALVE-BY PASS		
	010	001	15251861	PLATE		
	011	003	09003522	ROD BOLT		
	012	003	02389616	NUT-WING		
	013	002	09038953	KIT-ELEMENT		
A	014	003	09188288	.GASKET NSS		
A	015	002	09003531	.ELEMENT		
	016	002	15230178	NUT-WINDOW		
	017	001	09183207	PLUG		
	018	002	09068999	SCREEN ASSY		
	019	001	15232378	VALVE ASSY		
	020	001	15004129	.POPPET		
	021	001	15004130	.CAP NOT AVAILABLE		
	022	001	15004131	.SPRING		
	023	002	15004132	.SHIM		
	024	001	15251866	BRACKET ASSY		
	025	001	15300292	BRACKET ASSY		
	026	008	00186646	BOLT		
	027	008	09419465	NUT		
	028	016	09267949	WASHER-HARDENED		
	029	008	00223436	BOLT		
	030	008	09191596	WASHER		
	031	ASR	09113457	LOCKWIRE		

NOTES:
A NOTE: ELEMENT KIT 9038953 CONSISTS OF:2 X 9188288 GASKETS, 1 X 9003531 ELEMENT AND 1 X 9202069 GASKET.


PerkSpec Mash - servis

https://truckmanualshub.com/

230-0041-8391 BREATHER LINE-HYDRAULIC TANKS
FROM SERIAL NO. T8391011

DRAWING NO. P8942

P89

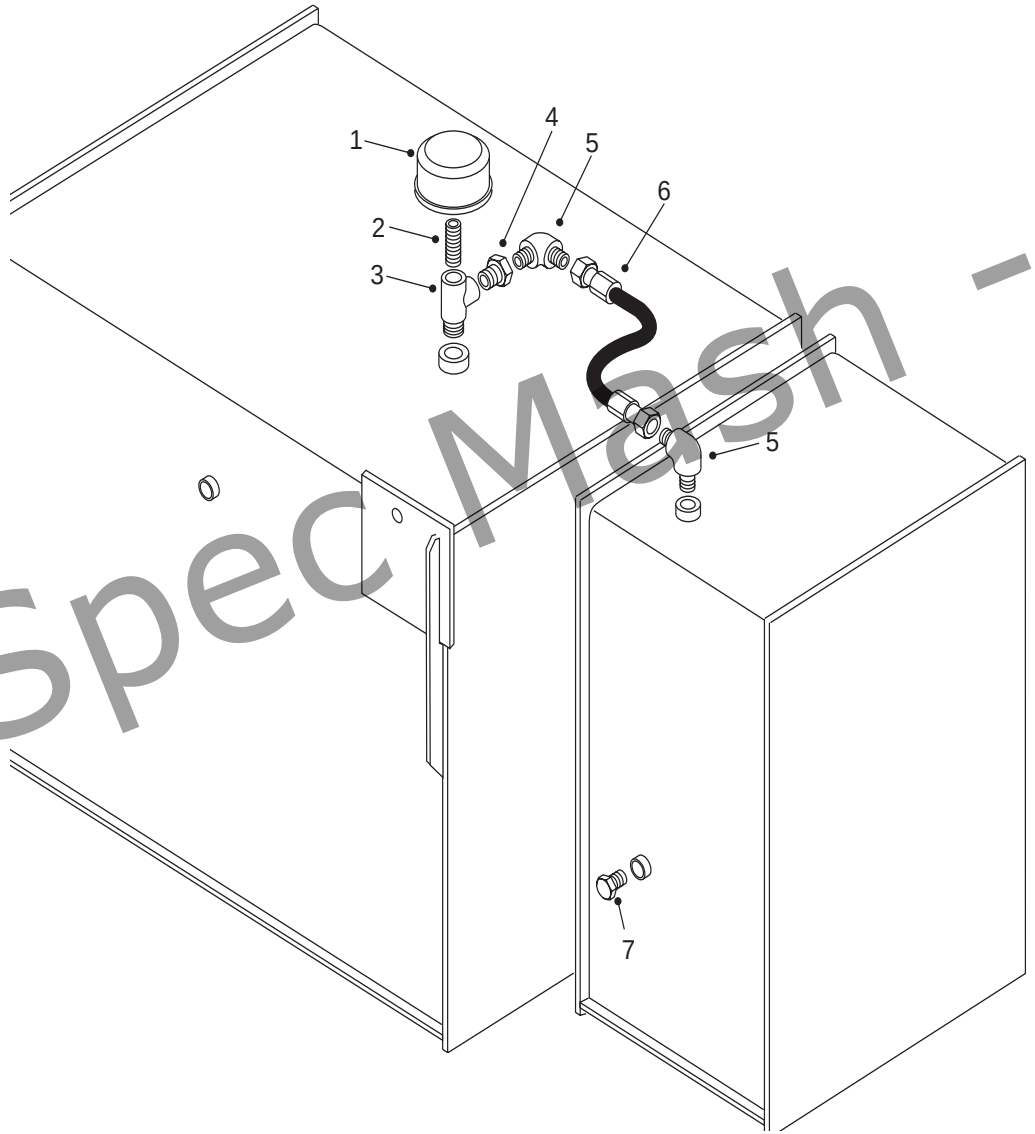

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0041-8391 BREATHER LINE-HYDRAULIC TANKS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15246949	BREATHER		
	002	001	09136639	NIPPLE		
	003	001	00454148	TEE		
	004	001	00144034	BUSHING		
	005	001	09402866	ELBOW		
	006	001	15253787	HOSE ASSY		
	007	001	09183203	PLUG		


Bel Spec Mash - servis

https://truckmanualshub.com/

230-0050-8391 PUMP-BODY HOIST
FROM SERIAL NO. T8391011

DRAWING NO. P7129

P7129

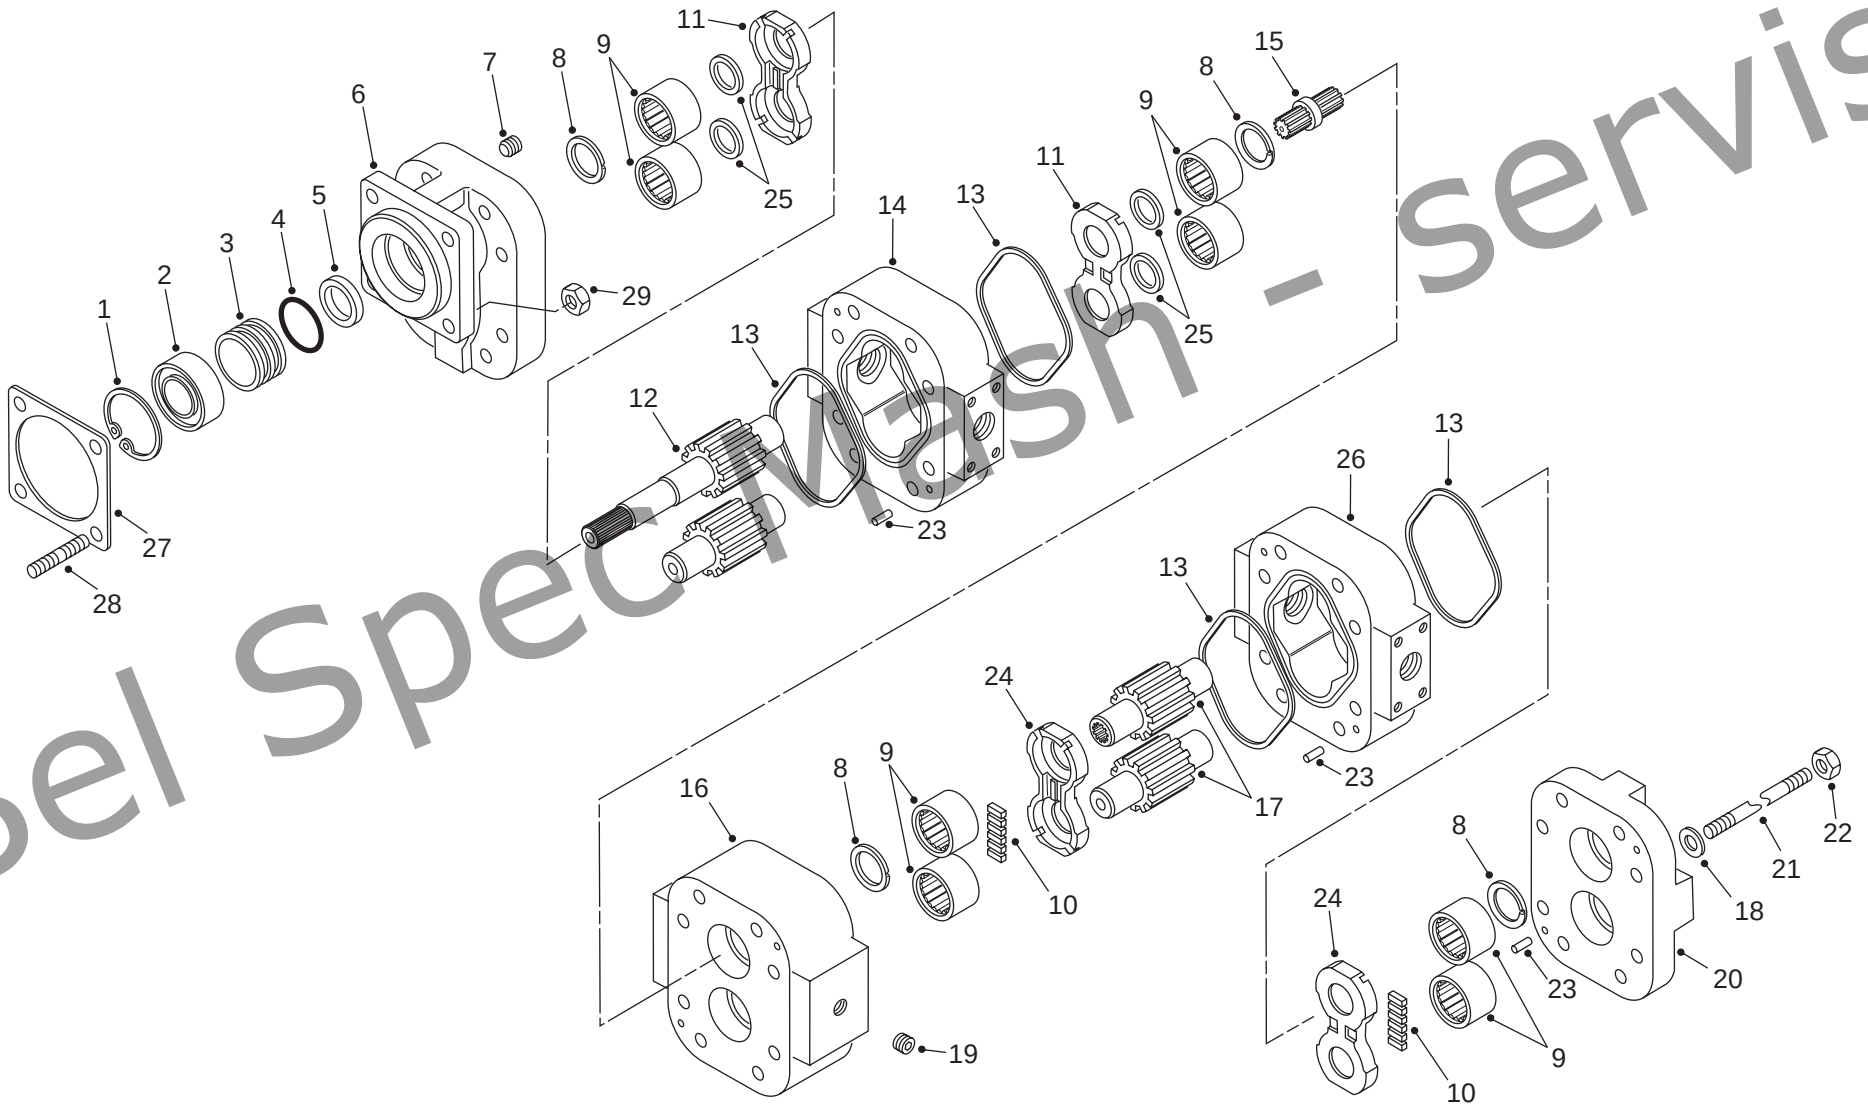

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0050-8391 PUMP-BODY HOIST
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	001	15020938	PUMP-HYDRAULIC		
	001	001	09413385	.RING-SNAP		
	002	001	09036076	.SPACER		
	003	001	09055968	.RETAINER		
	004	001	09035829	.O RING		
	005	001	09031475	.SEAL		
	006	001	09054021	.COVER		
	007	001	09038111	.SCREW-SET		
	008	004	09036077	.SEAL		
	009	008	09021459	.BEARING		
	010	012	09036083	.SEAL-POCKET		
	011	002	09058893	.PLATE		
	012	001	09059449	.GEAR SET		
	013	004	09036082	.SEAL-GASKET		
	014	001	09059448	.HOUSING		
	015	001	09036072	.SHAFT		
	016	001	09058891	.CARRIER		
	017	001	09054807	.GEAR-SET		
	018	008	09034501	.WASHER		
	019	001	09052357	.PLUG		
	020	001	09054020	.COVER		
	021	008	09059450	.STUD		
	022	008	09411566	.NUT		
	023	008	09054023	.PIN		
	024	002	09054024	.PLATE		
	025	004	09058892	.SEAL		
	026	001	09054022	.HOUSING		
	027	001	09156021	GASKET		
	028	004	09179585	STUD		
	029	004	00103028	NUT		

BelSpec Mash - servis

https://truckmanualshub.com/

230-0060-8391 CONTROL VALVE-BODY HOIST
FROM SERIAL NO. T8391011

DRAWING NO. P9791

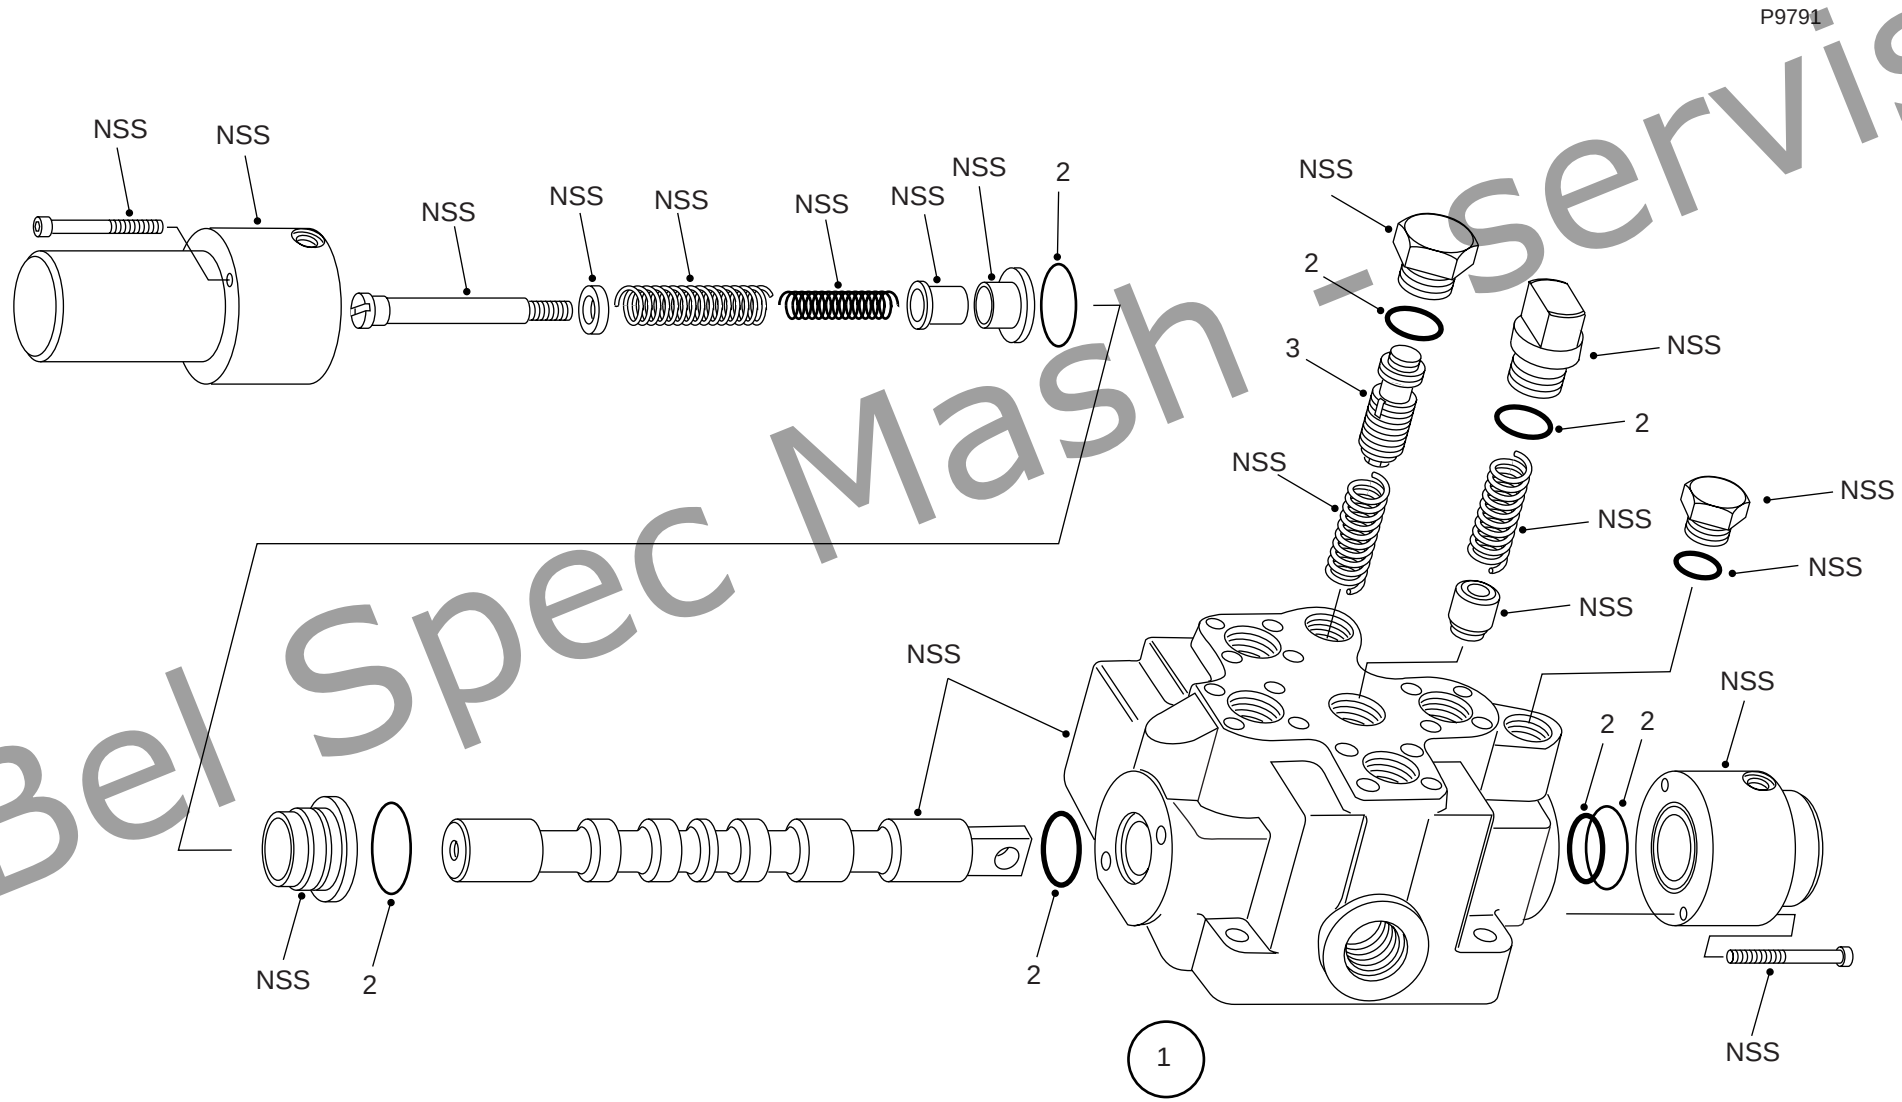

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0060-8391 CONTROL VALVE-BODY HOIST
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15302549	VALVE-BODY HOIST		
	002	001	15272692	.KIT-SEAL		
	003	001	15272693	.VALVE-RELIEF		

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0070-8391 CONTROL VALVE MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P9424

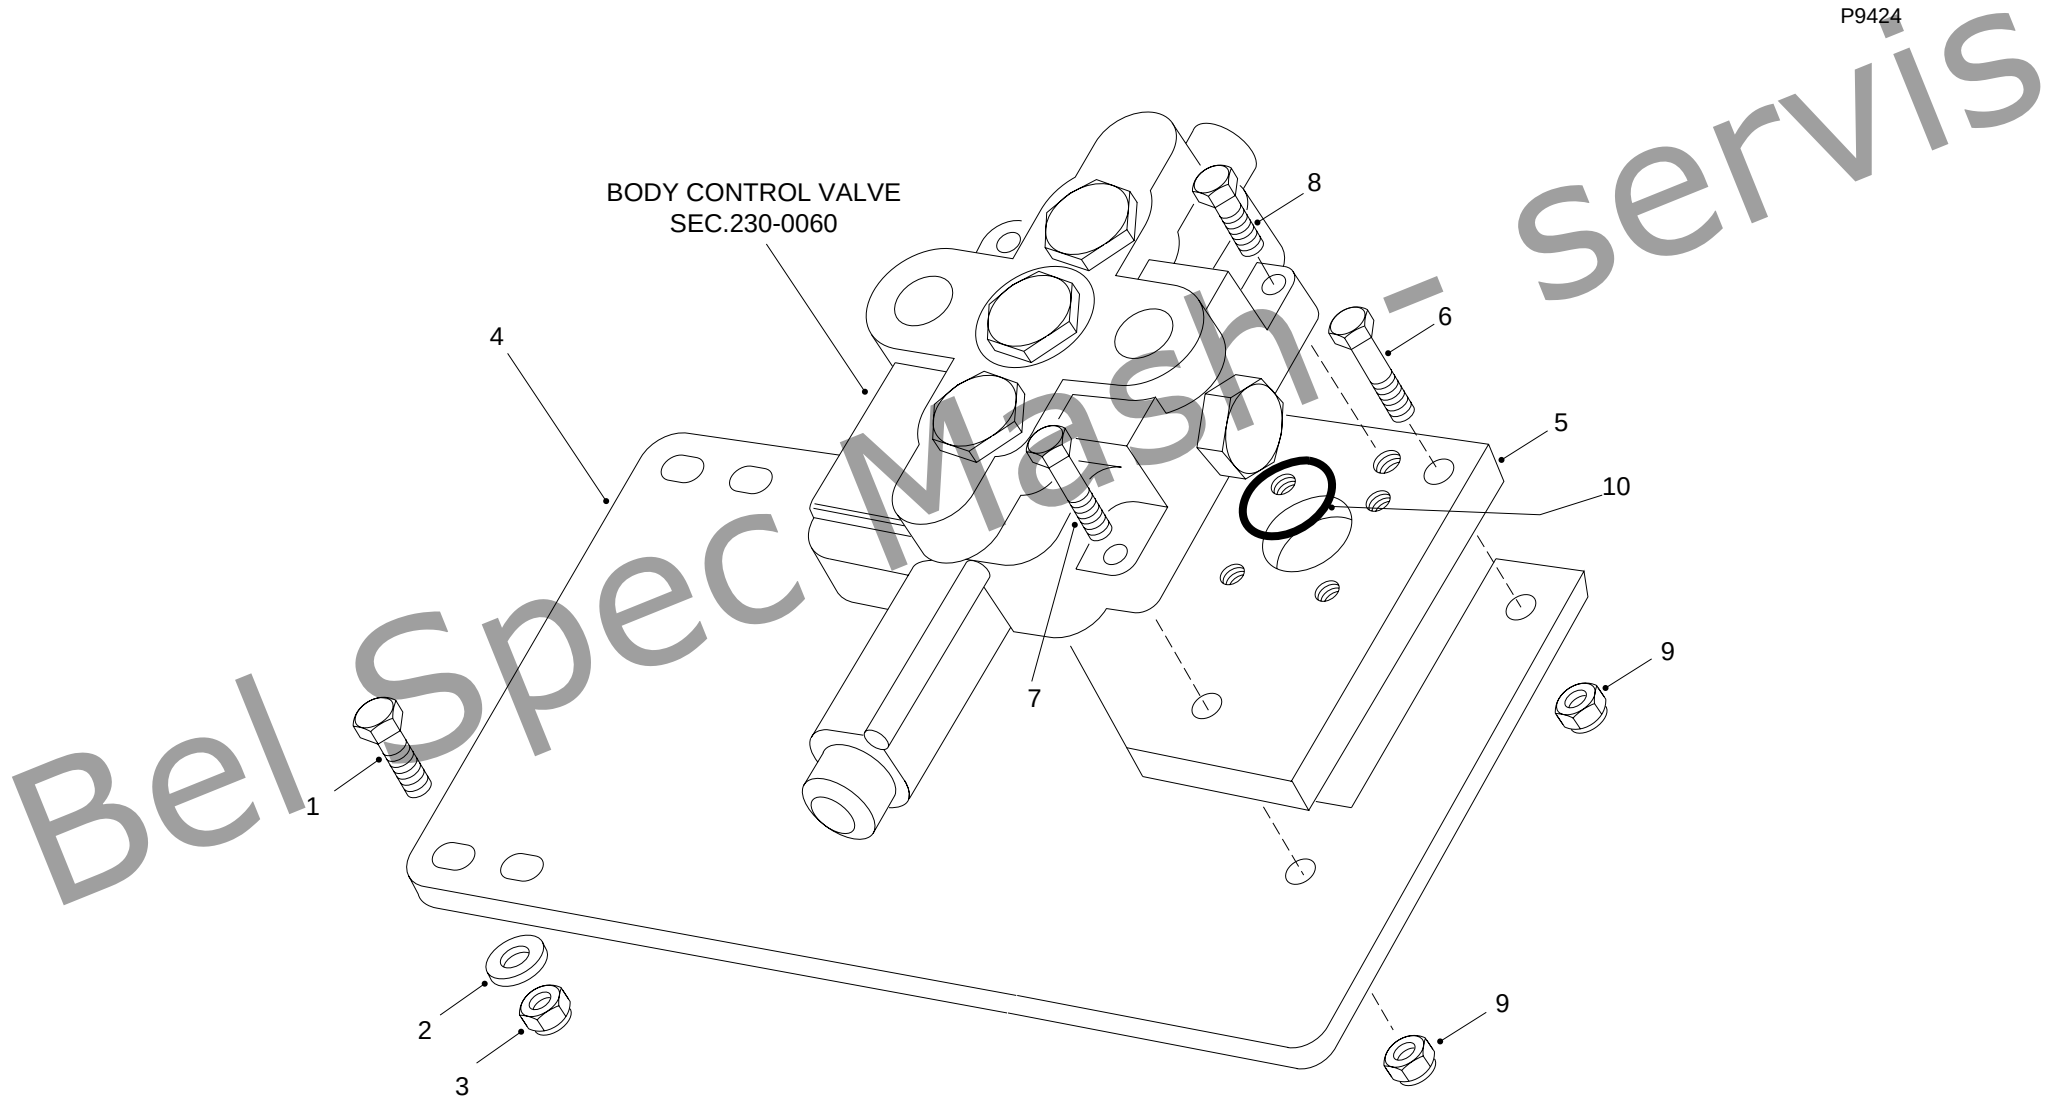

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0070-8391 CONTROL VALVE MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	004	00223436	BOLT		
	002	005	09191596	WASHER		
	003	004	09411566	NUT		
	004	001	15252427	PLATE		
	005	001	15252428	BLOCK		
	006	001	00186689	BOLT		
	007	002	15245078	BOLT		
	008	002	00186631	BOLT		
	009	003	00274766	NUT		
	010	001	09120133	O RING		


Bel Spec Mash - servis

https://truckmanualshub.com/

230-0081-8391 JOYSTICK-BODY CONTROL
FROM SERIAL NO. T8391011

DRAWING NO. P9569

P9569

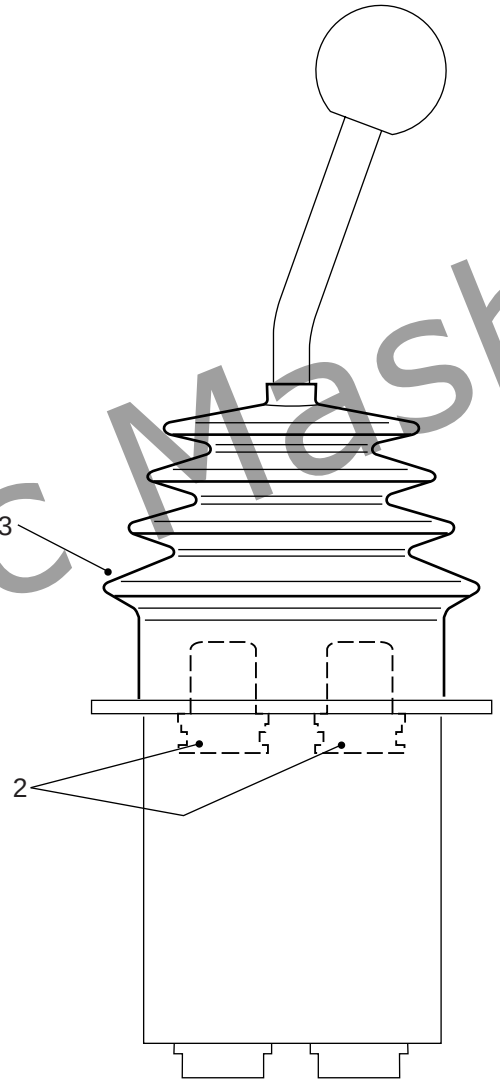

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0081-8391 JOYSTICK-BODY CONTROL
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15302550	VALVE-BODY CONTROL		
	002	002	15272027	.GUIDE-BUSH ASSY		
	003	001	15272028	.SEAL KIT		

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0090-8391 KICK-OVER VALVE
FROM SERIAL NO. T8391011 TO T8391052

DRAWING NO. P5415

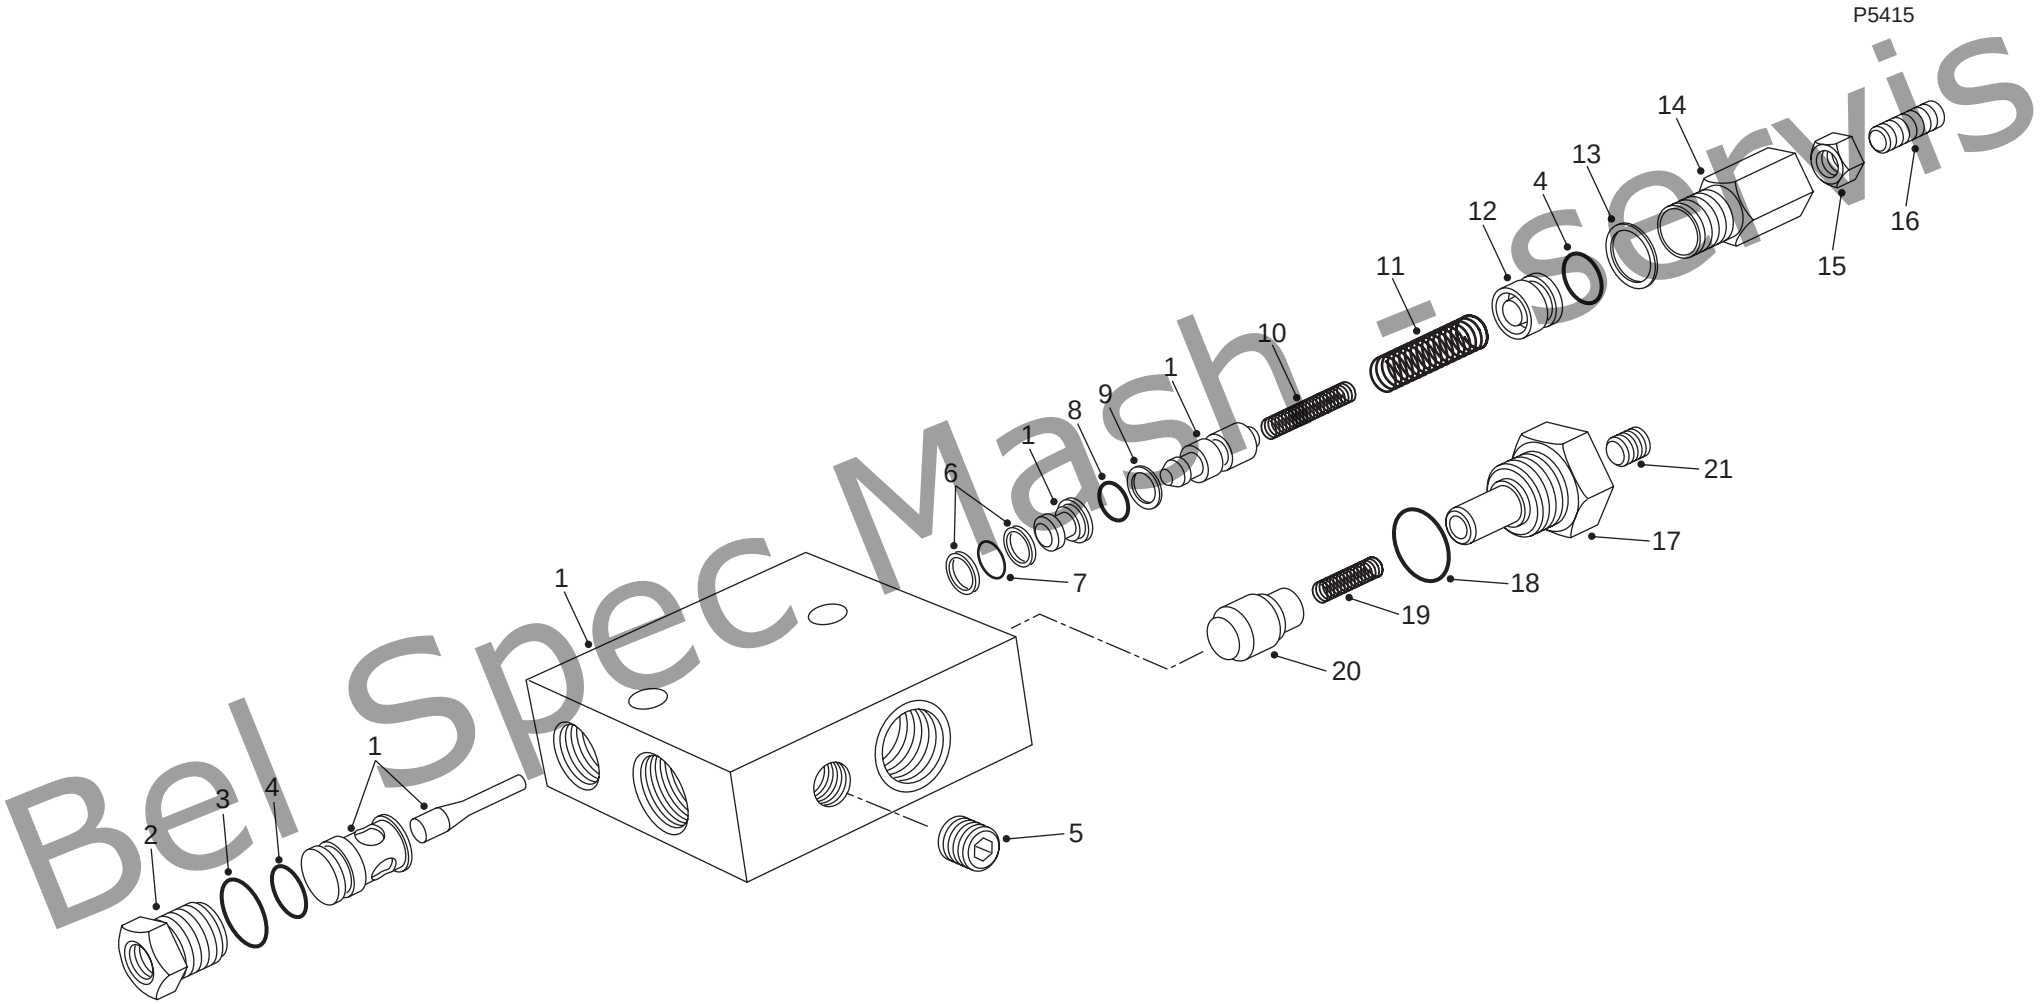

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0090-8391 KICK-OVER VALVE
FROM SERIAL NO. T8391011 TO T8391052

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15014890	VALVE-KICK OVER		
	002	001	09058414	.PLUG		
	003	001	09034127	.O RING		
	004	002	09031299	.O RING		
	005	001	00444698	.PLUG		
	006	002	09034132	.RING-BACKUP		
	007	001	09034130	.O RINGS/S9028104		
	008	001	09034129	.O RING		
	009	001	09053849	.RING-BACKUP		
	010	001	09039644	.SPRING		
	011	001	09034135	.SPRING		
	012	001	09039645	.SPRING-END		
	013	001	09025789	.O RING		
	014	001	09039643	.PLUG		
	015	001	00114496	.NUT-JAM		
	016	001	00222710	.SCREW-NLA		
	017	001	09260096	.GUIDE		
	018	001	09036136	.O RING		
	019	001	09038876	.SPRING		
	020	001	09058415	.POPPET		
	021	001	00444692	.PLUG		


Bel Spec Mash - servis

https://truckmanualshub.com/

230-0090-8391 KICK-OVER VALVE
FROM SERIAL NO. T8391053

DRAWING NO. P11221

P11221

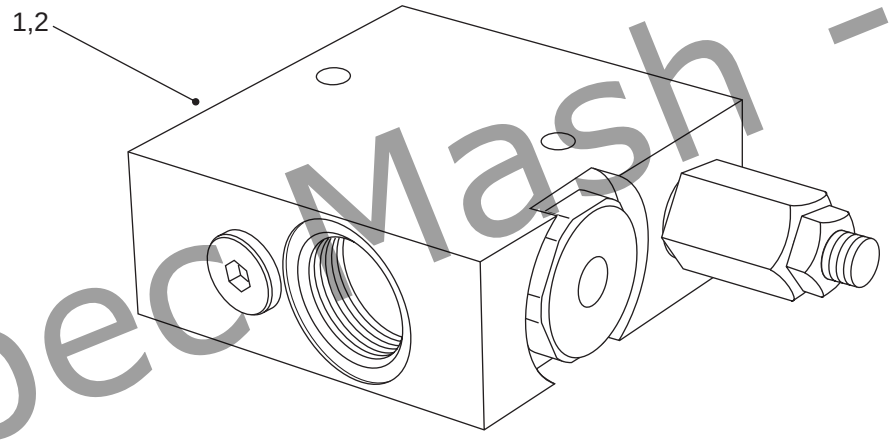

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0090-8391 KICK-OVER VALVE
FROM SERIAL NO. T8391053


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15316516	VALVE-KICK OVER		
	002	001	15500681	.SEAL KIT		

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0100-8391 KICK-OVER VALVE MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P9920

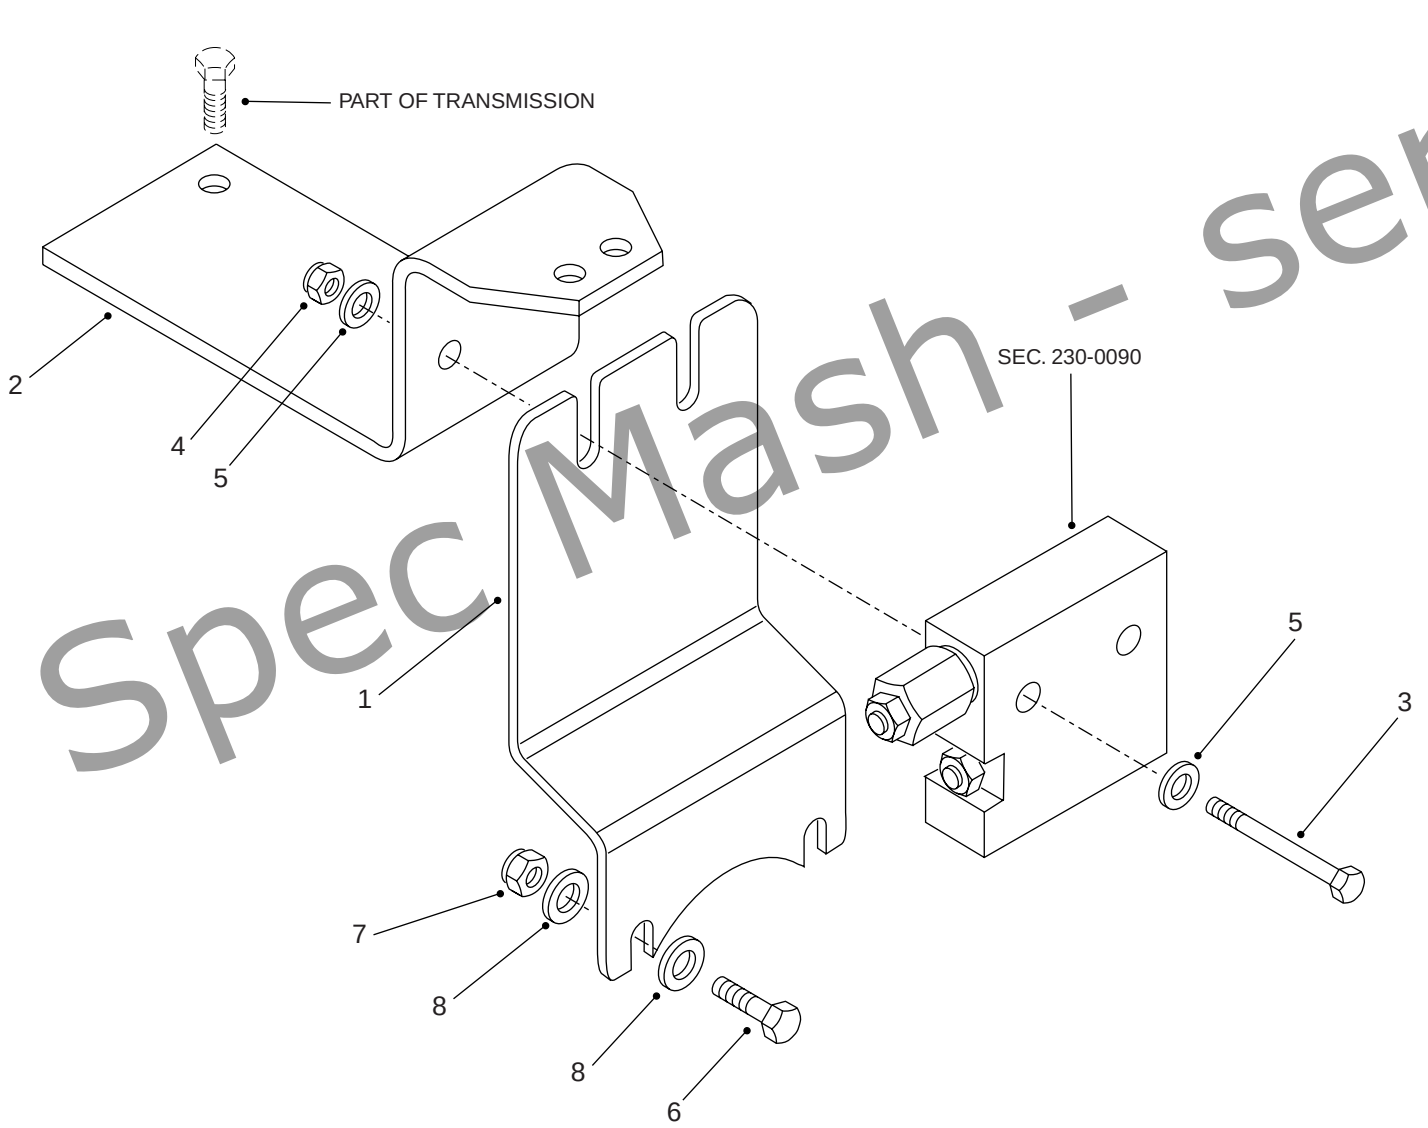

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0100-8391 KICK-OVER VALVE MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15303740	PLATE		
	002	001	15303742	PLATE		
	003	002	00179851	BOLT		
	004	002	00274208	LOCKNUT		
	005	002	00106263	WASHER		
	006	002	00179889	BOLT		
	007	002	00274209	LOCKNUT		
	008	004	09233952	WASHER		


Bel Spec Mash - servis

https://truckmanualshub.com/

230-0120-8391 RELIEF VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P7015

P7015

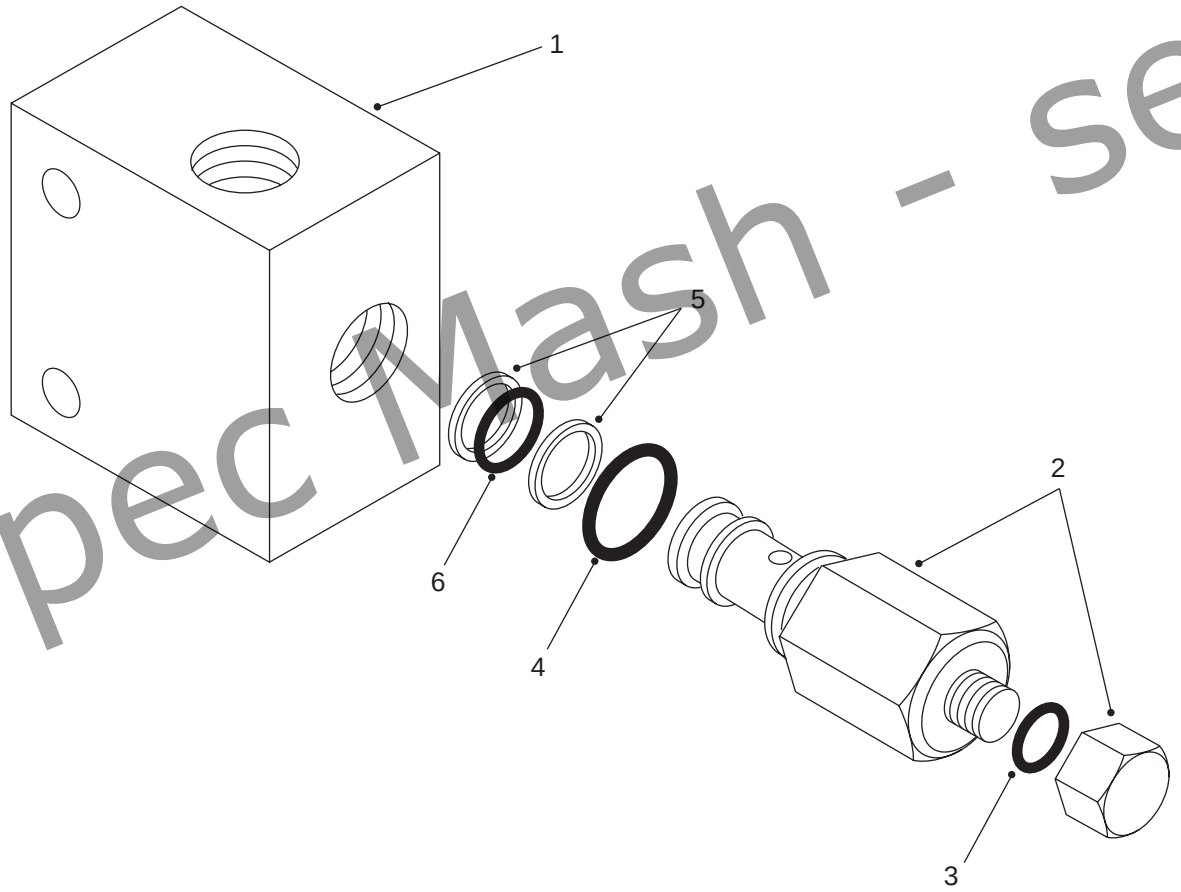

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0120-8391 RELIEF VALVE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15228109	VALVE-RELIEF		
	002	001	09053290	.CARTRIDGE ASSY		
	003	001	09025789	..O RING		
	004	001	09034127	..O RING		
	005	002	09038666	..RING-BACKUP		
	006	001	09031299	..O RING		

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0121-8391 PILOT SUPPLY VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P9604

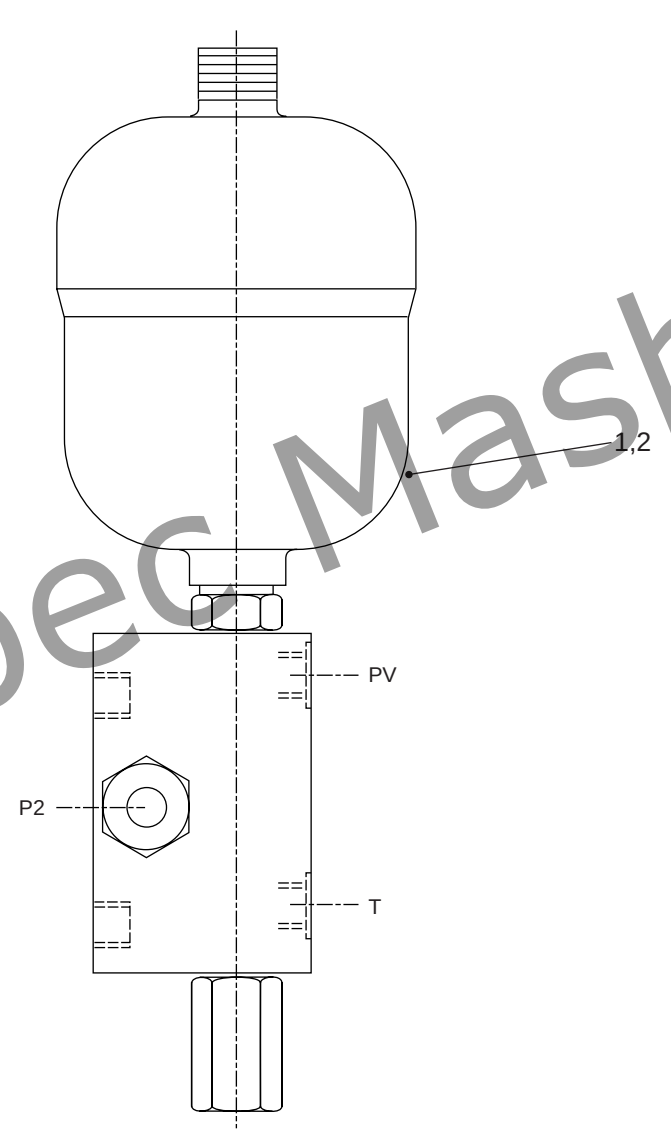

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0121-8391 PILOT SUPPLY VALVE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15301128	VALVE-PILOT SUPPLY		
	002	001	15272119	.KIT-SEAL		

Bel Spec Mash - servis

https://truckmanualshub.com/

230-0130-8391 HOIST CYLINDERS
FROM SERIAL NO. T8391011

DRAWING NO. P9489

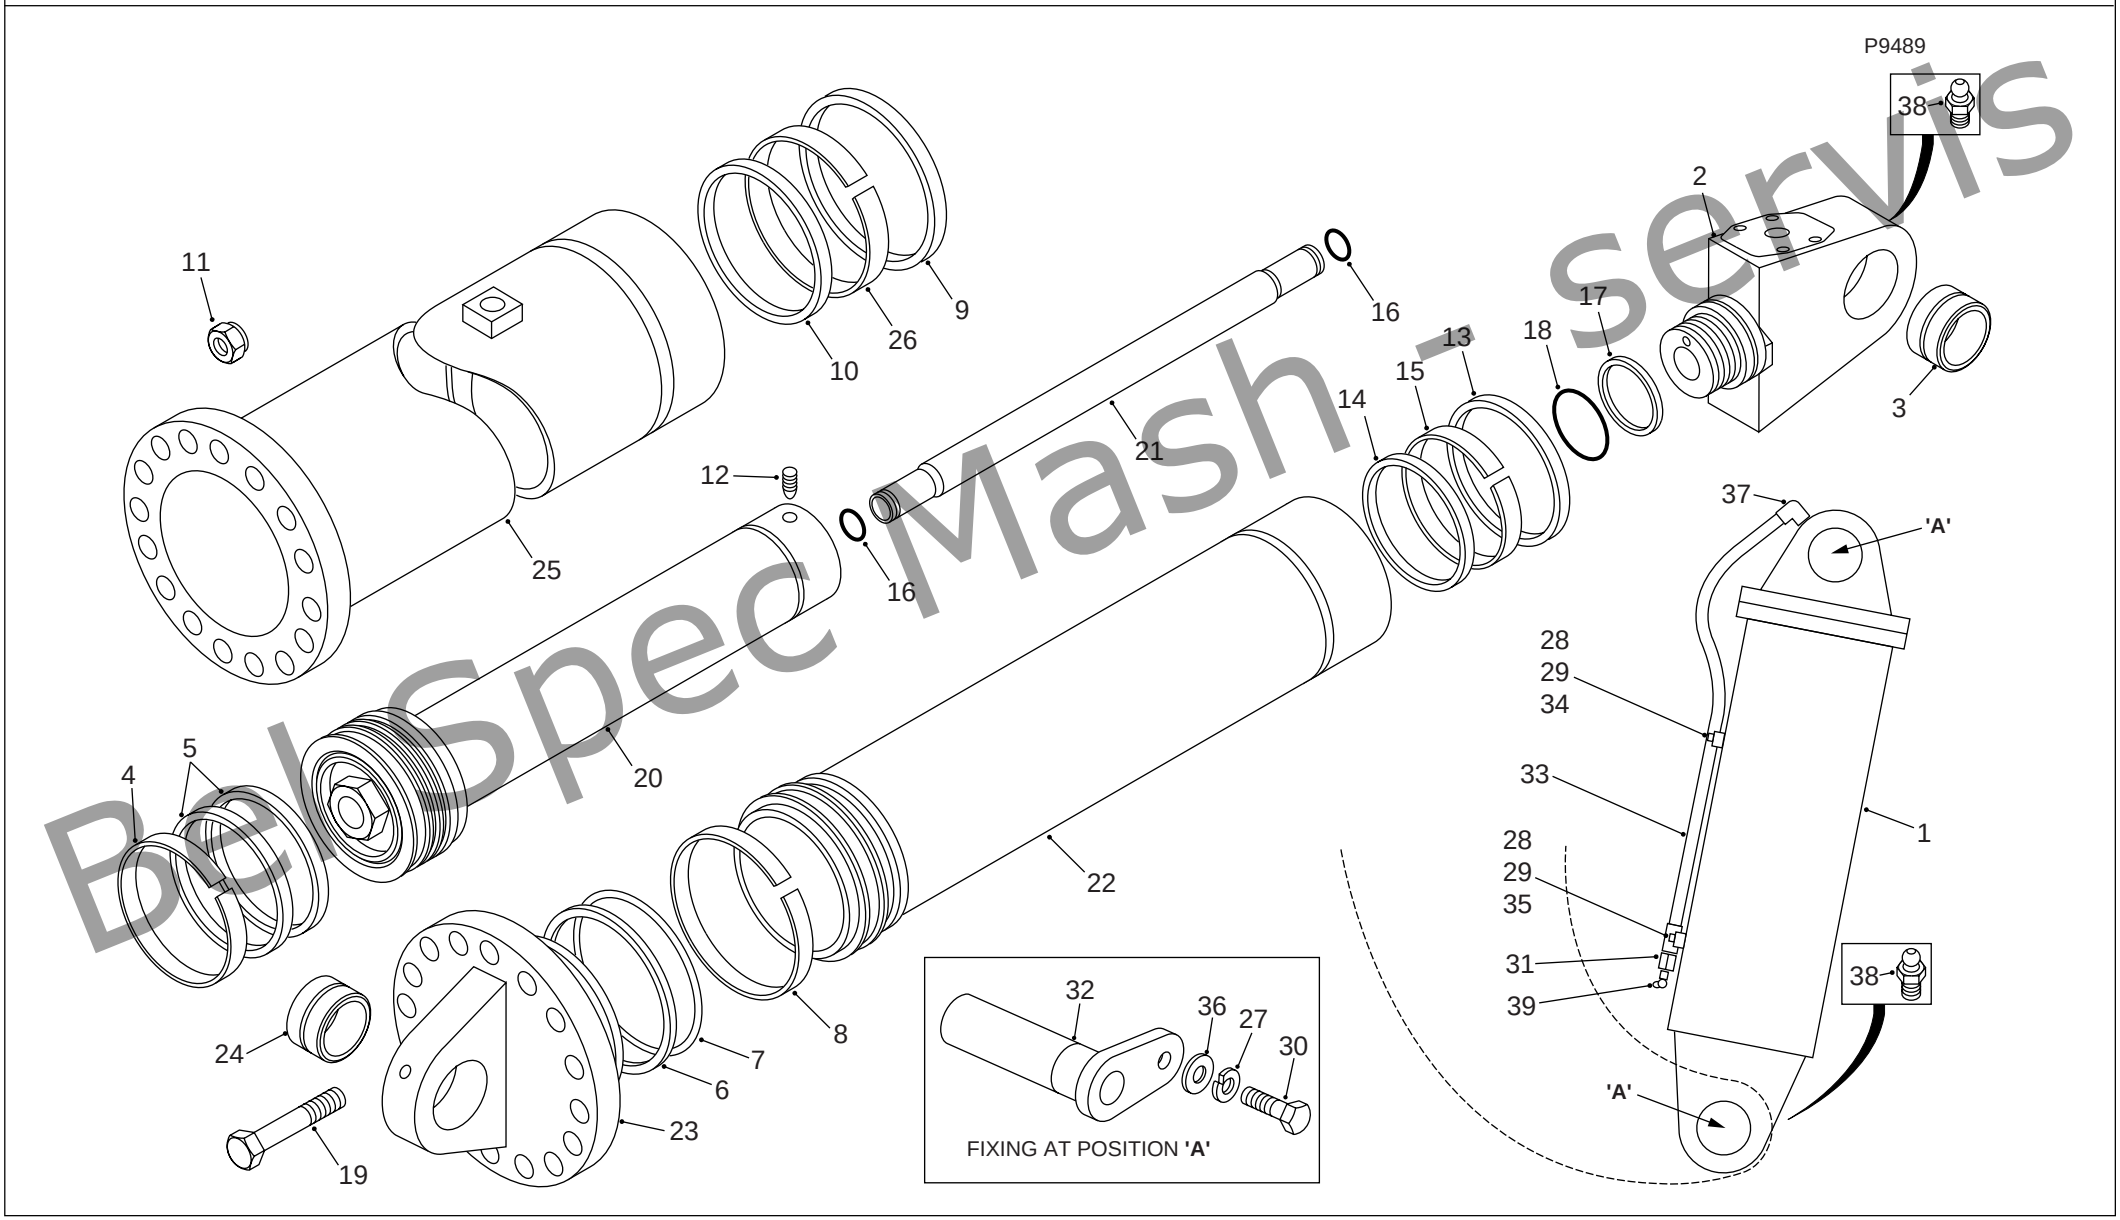

BelSpec Mash - servis

https://truckmanualshub.com/

230-0130-8391 HOIST CYLINDERS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15258006	CYLINDER ASSY-LIFT		
	002	002	15232135	.END ASSY		
	003	002	09014200	..BUSHING		
A	004	002	09014131	.RING-WEAR		
A	005	004	09014633	.RING-PISTON		
A	006	002	09014635	.RING-BACKUP		
A	007	002	09014636	.O RING		
A	008	002	09018420	.RING-WEAR		
A	009	002	09256608	.WIPER		
A	010	002	09270713	.SEAL		
	011	016	09354243	.LOCKNUT		
	012	004	15227029	.SCREW-SET		
A	013	002	15227030	.WIPER		
A	014	002	15227031	.RING-WEAR		
A	015	002	15227032	.SEAL		
A	016	004	15232053	.SEAL-T		
A	017	002	09014362	.RING-BACKUP		
A	018	002	09014593	.O RING		
	019	016	15245036	.BOLT		
	020	001	15257992	.TUBE ASSY		
	021	001	15257993	.TUBE		
	022	002	15258003	.TUBE ASSY		
	023	002	15300143	.BASE ASSY		
	024	001	09014200	..BUSHING		
	025	001	15258005	.TUBE ASSY		
	026	001	06944596	.RING-WEAR		
	027	004	00103329	LOCKWASHER		
	028	004	00108580	LOCKWASHER		
	029	004	00179835	BOLT		
	030	004	00179883	BOLT		
	031	002	00187394	COUPLING		
	032	004	09015218	PIN		
	033	002	09122232	HOSE ASSY		
	034	002	09131853	CLIP		
	035	002	09131857	CLIP		
	036	002	09217321	WASHER		
	037	002	09402823	ELBOW		
	038	002	09411010	FITTING-GREASE		
	039	002	09411019	NIPPLE-GREASE		

230-0130-8391 HOIST CYLINDERS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO

NOTES:
A PARTS IN 15273769 KIT-SEAL/RING REPAIR

Repspec Mash - servis


https://truckmanualshub.com/

R1 11/03 (ECN 106120)

250-0020-8391 BRAKE LINES-HYDRAULIC

FROM SERIAL NO. T8391011

DRAWING NO. P10987A

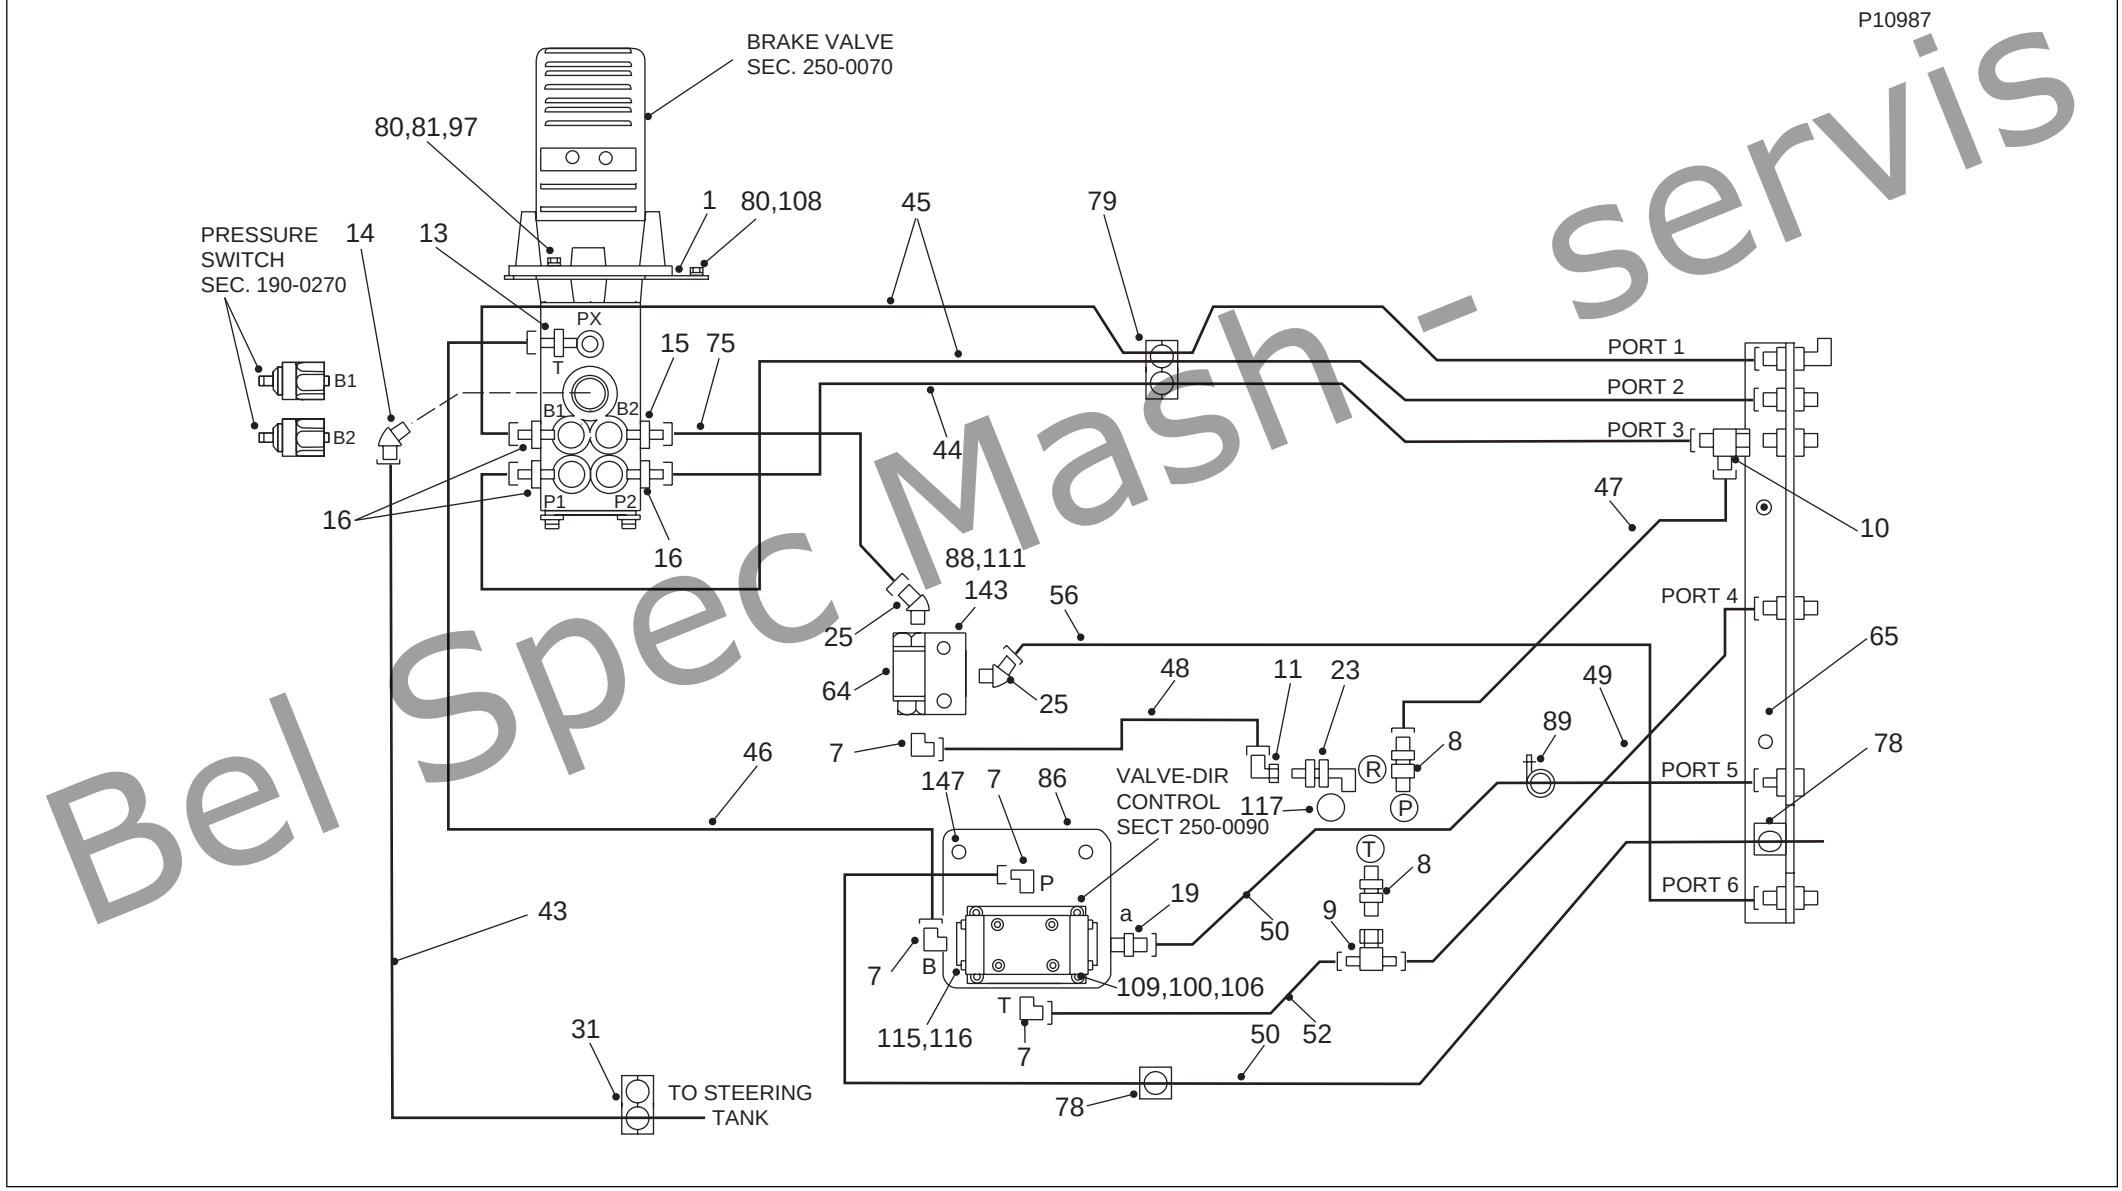


Bel Spec Mash - servis

https://truckmanualshub.com/

250-0020-8391 BRAKE LINES-HYDRAULIC
FROM SERIAL NO. T8391011

DRAWING NO. P10987B

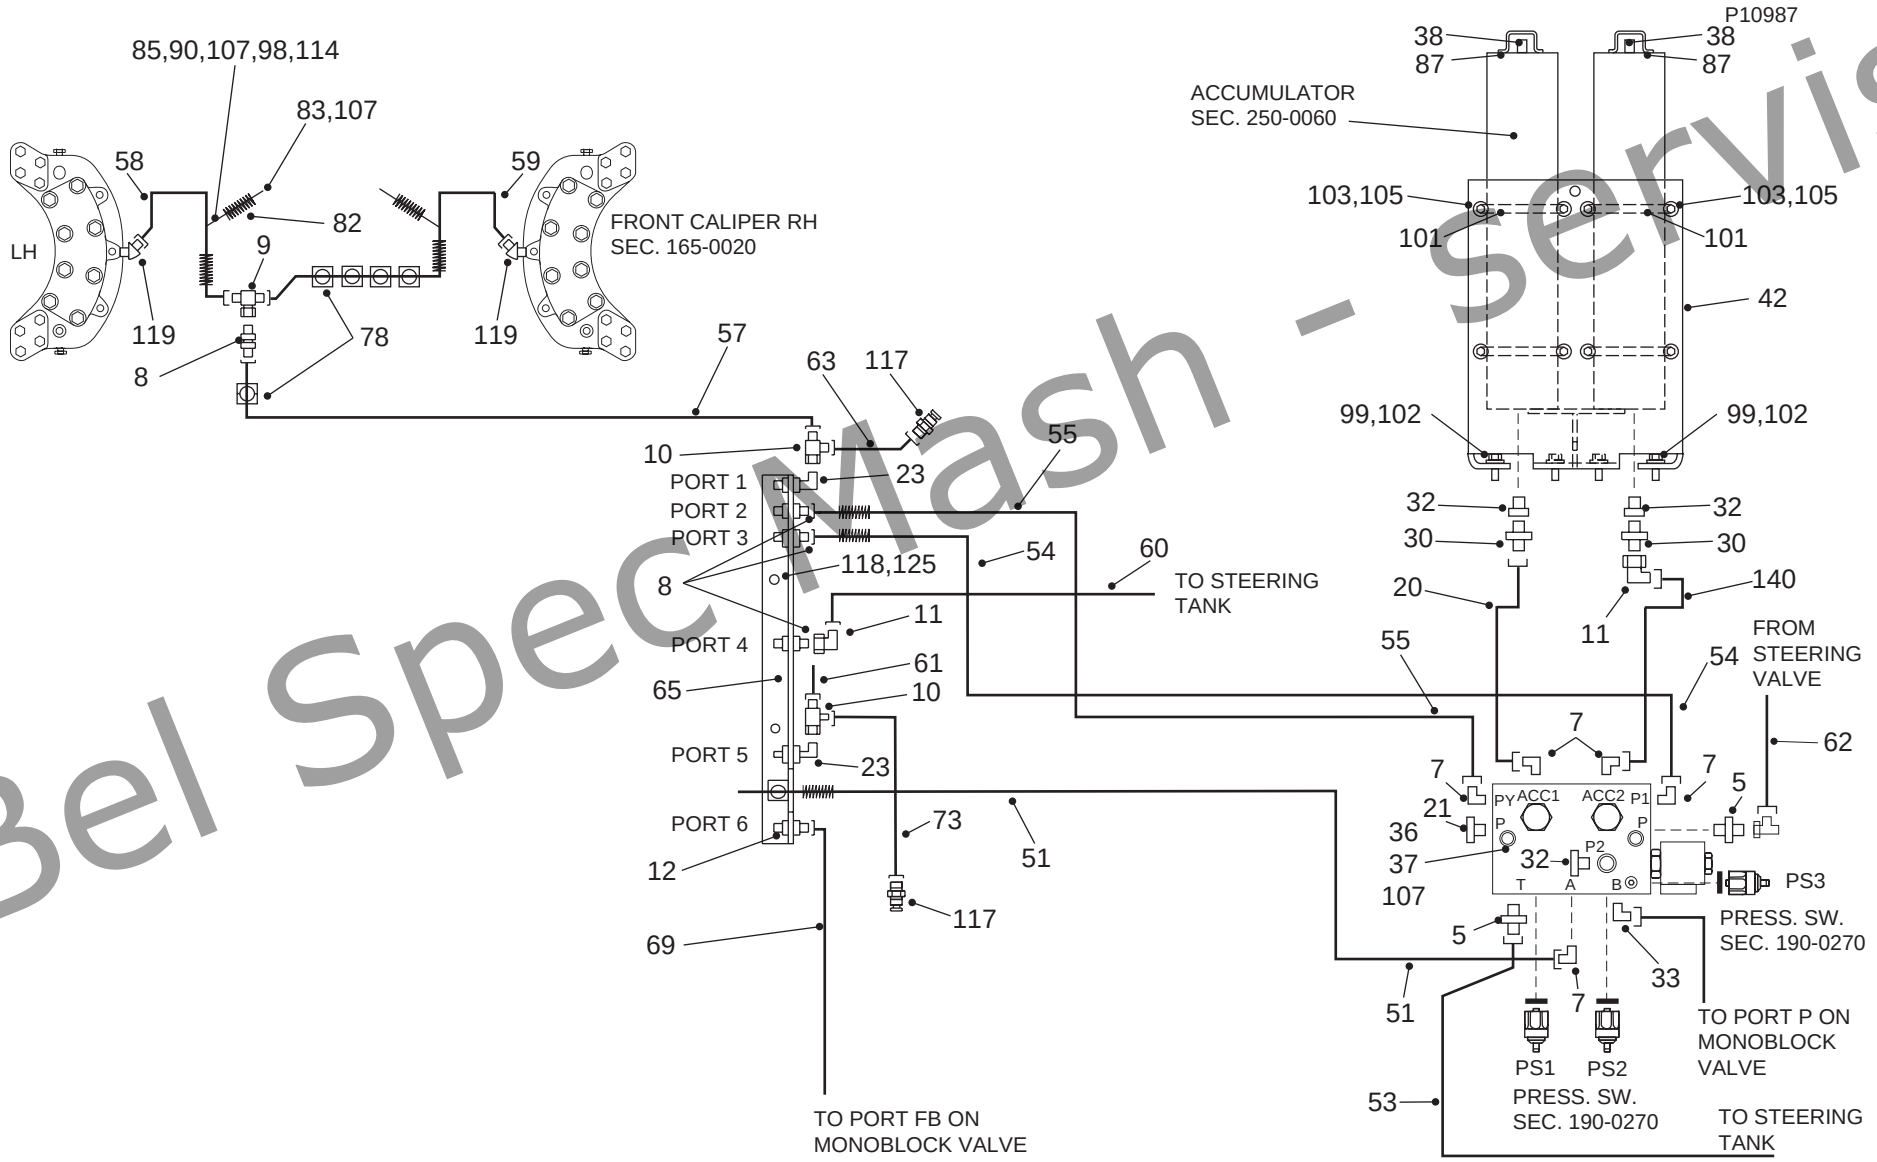

Bel Spec Wash - servis

R1 11/03 (ECN 106120)


https://truckmanualshub.com/

R1 11/03 (ECN 106120)

250-0020-8391 BRAKE LINES-HYDRAULIC

FROM SERIAL NO. T8391011

DRAWING NO. P10987C

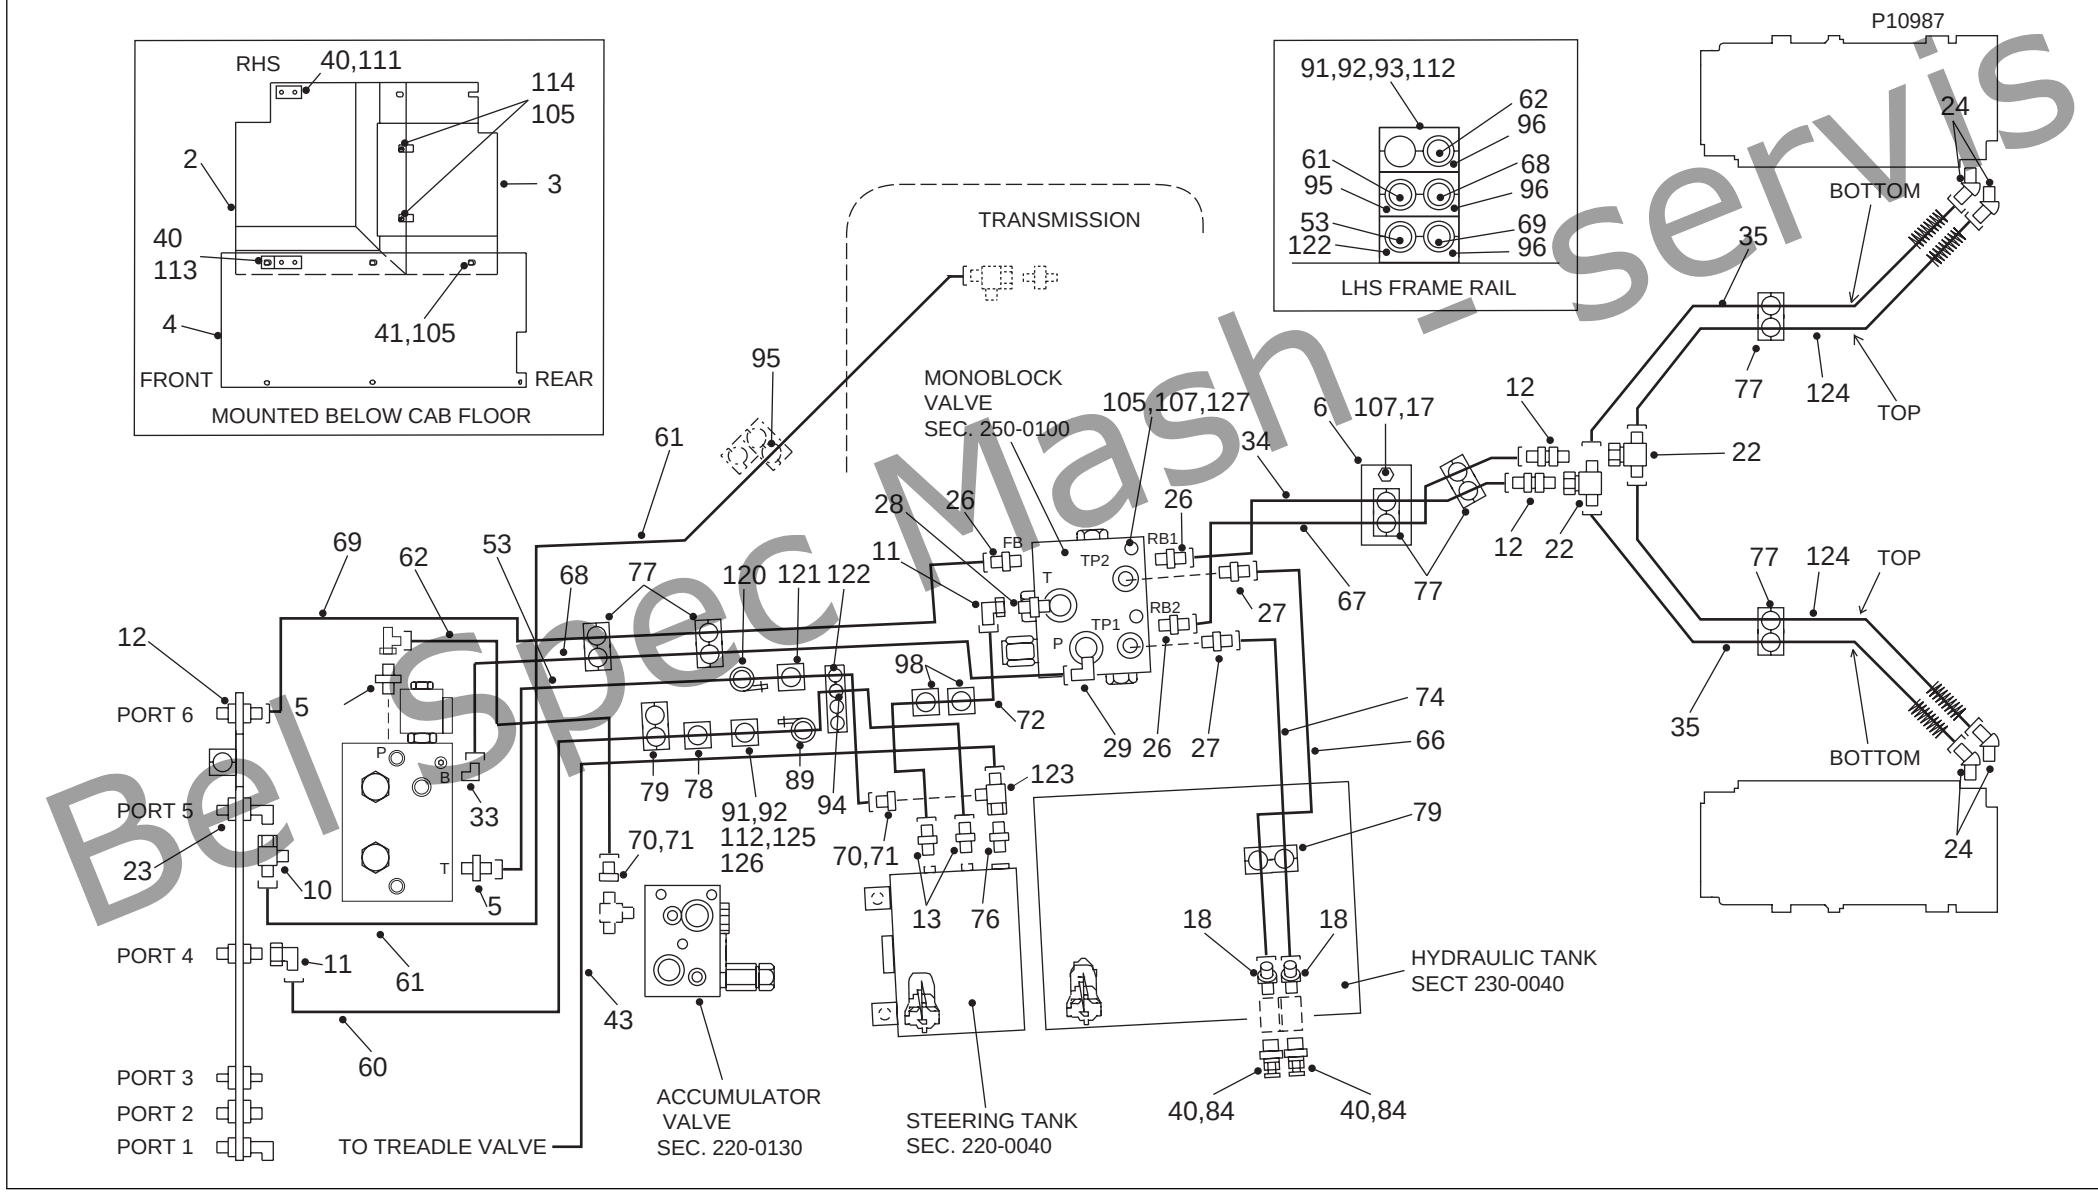

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0020-8391 BRAKE LINES-HYDRAULIC
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15301033	PLATE-PEDAL ASSY		
	002	001	15248514	PLATE ASSY-GUARD		
	003	001	15238044	PLATE ASSY-GUARD		
	004	001	15236149	PLATE-PROTECTION		
	005	002	15253061	ADAPTOR		
	006	001	15259081	PLATE		
	007	009	15253055	ELBOW		
	008	006	15253039	ADAPTOR-BULKHEAD		
	009	001	15252977	TEE		
	010	003	15251951	TEE		
	011	001	15252983	ELBOW		
	012	003	15253043	ADAPTOR-BULKHEAD		
	013	002	15251938	ADAPTOR		
	014	001	15256760	ELBOW		
	015	001	15253042	ADAPTOR		
	016	003	15253040	ADAPTOR		
	017	001	00179838	BOLT		
	018	002	15253060	ELBOW		
	019	001	15253064	ADAPTOR		
	020	001	15301184	HOSE ASSY		
	021	003	15247882	PLUG		
	022	002	15253128	TEE		
	023	003	15253157	ELBOW-BULKHEAD		
	024	004	15253181	ELBOW		
	025	002	15253182	ELBOW		
	026	003	15252849	ADAPTOR		
	027	002	15251982	ADAPTOR		
	028	001	15253239	ADAPTOR		
	029	001	15253242	ELBOW		
	030	005	15251979	ADAPTOR		
	031	001	15257356	CLAMP		
	032	002	15254346	ADAPTOR		
	033	001	15254646	ELBOW		
	034	001	15317121	HOSE ASSY		
	035	002	15254654	HOSE ASSY		
	036	002	00138252	SCREW		
	037	002	09417713	NUT		
	038	002	06525035	VALVE ASSY-RECHARGE		
	039	002	15251819	NIPPLE-DIAGNOSTIC		
	040	004	06350820	SCREW		

250-0020-8391 BRAKE LINES-HYDRAULIC
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	011	06351030	BOLT		
	042	001	15300444	BRACKET		
	043	001	15300870	HOSE ASSY		
	044	001	15253085	HOSE ASSY		
	045	002	15253100	HOSE ASSY		
	046	001	15253090	HOSE ASSY		
	047	001	15253091	HOSE ASSY		
	048	001	15253092	HOSE ASSY		
	049	001	15256351	HOSE ASSY		
	050	001	15253130	HOSE ASSY		
	051	001	15254641	HOSE ASSY		
	052	001	15253103	HOSE ASSY		
	053	001	15256461	HOSE ASSY		
	054	001	15254637	HOSE ASSY		
	055	001	15254638	HOSE ASSY		
	056	001	15253200	HOSE ASSY		
	057	001	15254647	HOSE ASSY		
	058	001	15255184	HOSE ASSY		
	059	001	15253732	HOSE ASSY		
	060	001	15300296	HOSE ASSY		
	061	001	15253482	HOSE ASSY		
	062	001	15254639	HOSE ASSY		
	063	001	15253480	HOSE ASSY		
	064	001	15246667	VALVE-SHUTTLE		
	065	001	15301105	BRACKET		
	066	001	15253227	HOSE ASSY		
	067	001	15317121	HOSE ASSY		
	068	001	15254640	HOSE ASSY		
	069	001	15253483	HOSE ASSY		
	070	002	15253153	REDUCER		
	071	002	15253098	NUT-SWIVEL		
	072	001	15253318	HOSE ASSY		
	073	001	15253322	HOSE ASSY		
	074	001	15253327	HOSE ASSY		
	075	001	15300869	HOSE ASSY		
	076	001	15251939	ADAPTOR		
	077	006	15253868	CLAMP-PIPE		
	078	010	15253869	CLAMP		
	079	004	15253870	CLAMP-PIPE		
	080	014	07150815	WASHER		

BelSpec Mash-servis

https://truckmanualshub.com/

250-0020-8391 BRAKE LINES-HYDRAULIC
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	081	004	06350825	BOLT		
	082	002	09072454	SPRING		
	083	002	09072632	BRACKET		
	084	002	15025869	PLUG-DUST		
	085	002	15227537	PLATE		
	086	001	15300425	PLATE		
	087	004	07552191	PAD		
	088	001	15300825	PLATE		
	089	002	09131857	CLIP		
	090	002	09131861	P-CLIP		
	091	006	15001401	ADAPTOR-THREAD		
	092	006	15001402	NUT-STACKING		
	093	003	15001404	CLAMP		
	094	001	15001415	BUSHING-SPLIT		
	095	002	15001419	BUSHING-SPLIT		
	096	003	15001424	BUSHING-SPLIT		
	097	004	06470801	NUT		
	098	002	15253875	CLAMP-PIPE		
	099	004	00179883	BOLT		
	100	004	00110633	NUT		
	101	006	09270000	WASHER-HARDENED		
	102	004	15300442	U-BOLT		
	103	008	00103339	WASHER		
	104	011	00103340	WASHER		
	105	008	00274856	LOCKNUT		
	106	004	00106497	LOCKWASHER		
	107	010	00108580	LOCKWASHER		
	108	006	06350820	SCREW		
	109	004	00147114	SCREW		
	110	001	15301185	HOSE ASSY		
	111	001	15301277	BRACKET		
	112	011	00179816	BOLT		
	113	001	15301278	BRACKET		
	114	002	00179839	BOLT		
	115	001	15233873	PLUG		
	116	001	15247882	PLUG		
	117	002	15300946	ADAPTOR-BULKHEAD		
	118	002	06621045	BOLT		
	119	002	15255185	ELBOW		
	120	001	09181285	CLIP		

250-0020-8391 BRAKE LINES-HYDRAULIC
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	121	001	15248164	CLAMP		
	122	002	15001416	BUSHING-SPLIT		
	123	001	15252902	TEE		
	124	002	15258027	HOSE ASSY		
	125	002	07161030	LOCKWASHER		
	126	002	07150620	WASHER		
	127	002	00179850	BOLT		

PerfSpec Mash - servis

https://truckmanualshub.com/


THIS PAGE IS INTENTIONALLY LEFT BLANK

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0050-8391 BRAKE MANIFOLD/PAS VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P10475

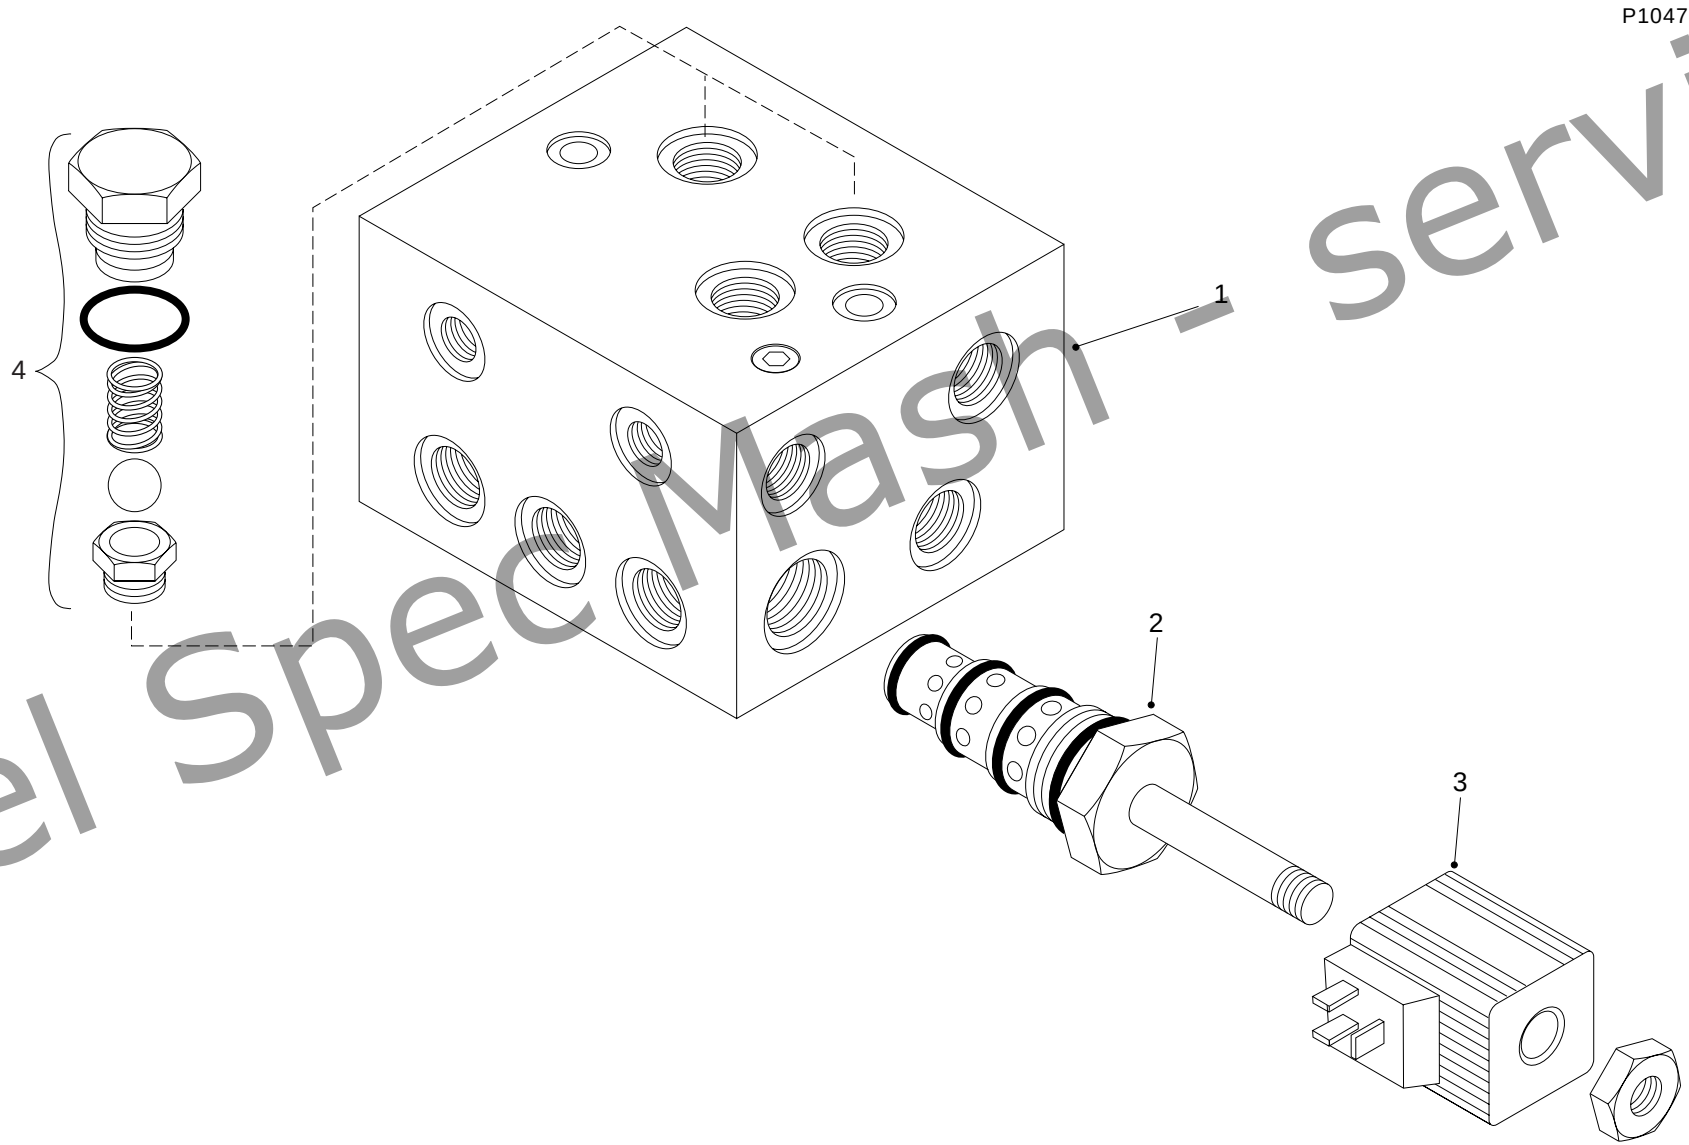

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0050-8391 BRAKE MANIFOLD/PAS VALVE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15307827	BRAKE MANIFOLD VALVE		
A	002	001	15274258	.CARTRIDGE-SOLENOID		
	003	001	15274259	.COIL-SOLENOIDS		
	004	002	15274261	.KIT-CHECK VALVE		


NOTES:
A 15274260 SEAL KIT-SOLENOID CARTRIDGE

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0060-8391 BRAKE ACCUMULATOR
FROM SERIAL NO. T8391011

DRAWING NO. P6786

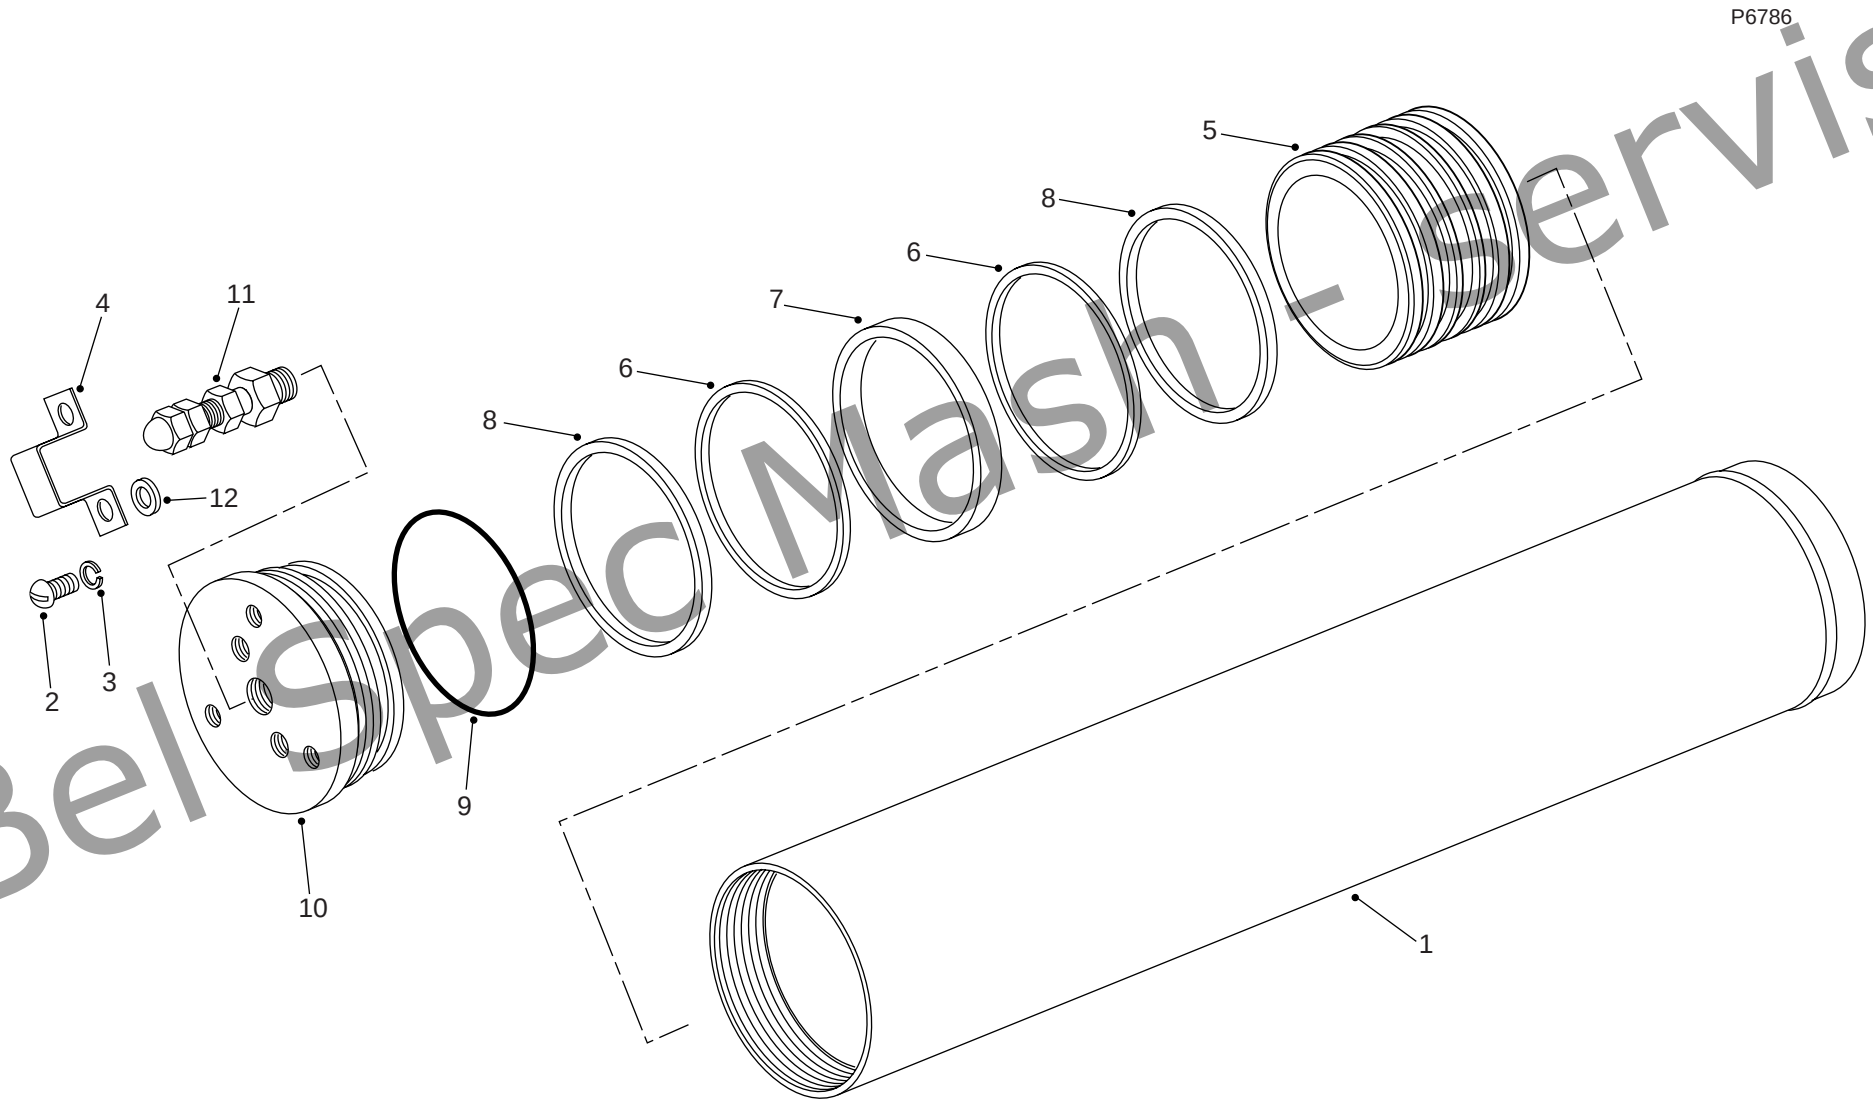

BelSpecMash - Servis

https://truckmanualshub.com/

250-0060-8391 BRAKE ACCUMULATOR
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15231753	ACCUMULATOR		
	002	004	00114699	.SCREW-NLA		
	003	004	00103321	.LOCKWASHER		
	004	002	09055400	.PROTECTOR		
	005	002	09055409	.PISTON		
	006	001	09055408	.WASHER-BACKUP		
	007	002	09055407	.RING		
	008	004	09055401	.RING-PISTON		
	009	002	09055397	.O RING		
	010	002	09055402	.CAP END		
	011	002	06525035	VALVE-RECHARGE		
	012	002	07552191	PAD		

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0070-8391 TREADLE VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P9728

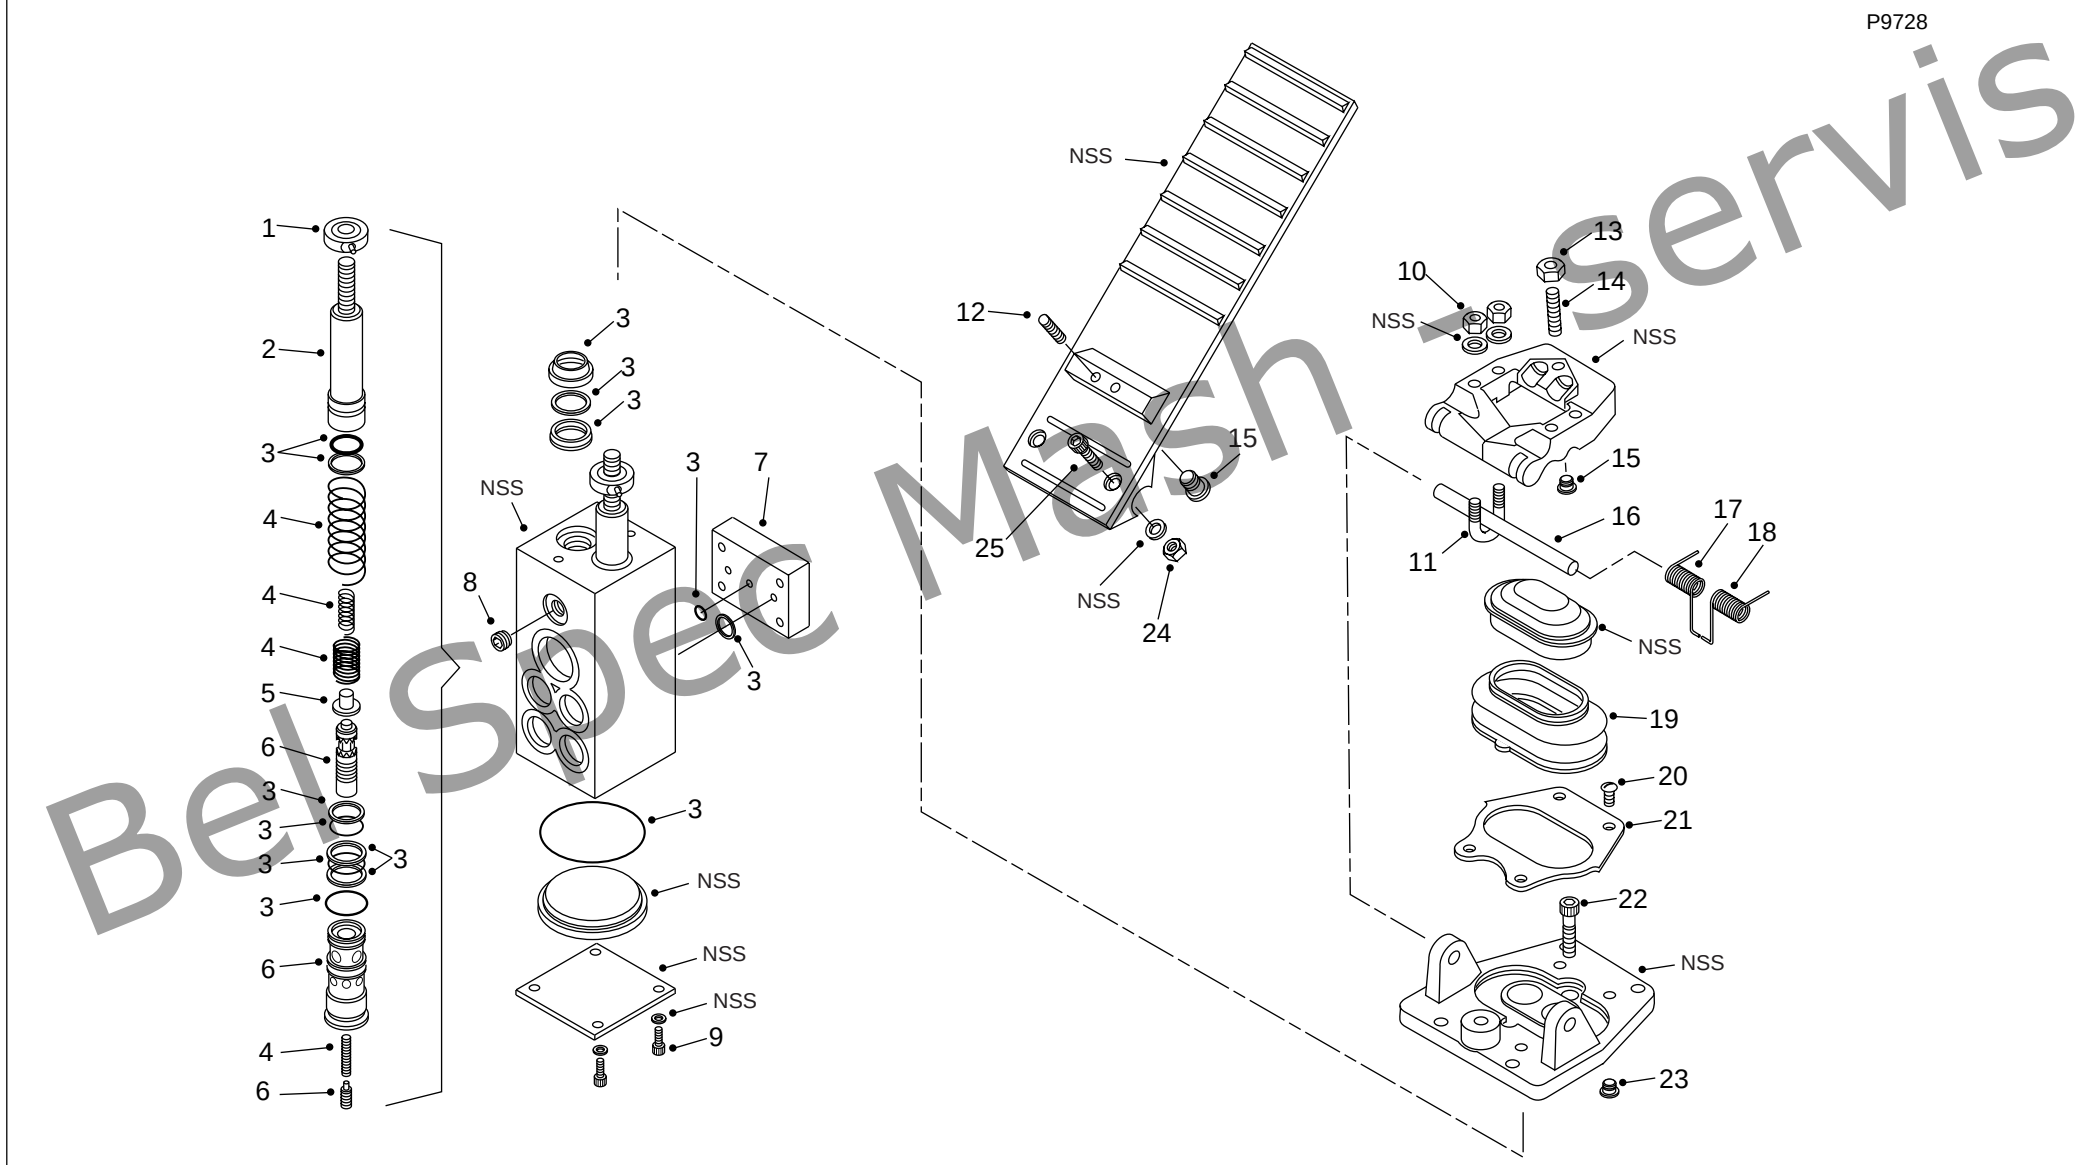

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0070-8391 TREADLE VALVE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	001	15248653	VALVE-TREADLE		
	001	002	15268376	.COLLAR		
	002	002	15268377	.PLUNGER		
	003	001	15268373	.KIT-SEAL		
	004	001	15268372	.KIT-SPRING		
	005	002	15268382	.SPRING-SEAT		
	006	001	15268375	.KIT-SPOOL/SLEEVE		
	007	001	15268660	.PLATE ASSY		
	008	001	15268392	.SCREW		
	009	004	15268395	.SCREW		
	010	004	15268396	.NUT		
	011	002	15268397	.BOLT-U		
	012	002	15268415	.SCREW		
	013	001	15268399	.NUT		
	014	001	15268400	.SCREW		
	015	003	15268402	.INSERT		
	016	001	15268403	.PIN		
	017	001	15268404	.SPRING-PEDAL RETURN		
	018	001	15268405	.SPRING-PEDAL RETURN		
	019	001	15268374	.KIT-BOOT		
	020	004	15268408	.SCREW		
	021	001	15268409	.PLATE-RETAINER		
	022	002	15268410	.SCREW		
	023	004	15268412	.INSERT		
	024	002	15268396	.NUT		
	025	002	15268414	.SCREW		


BelSpec Mash - servis

https://truckmanualshub.com/

250-0090-8391 DIRECTIONAL CONTROL VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P7010

P7010

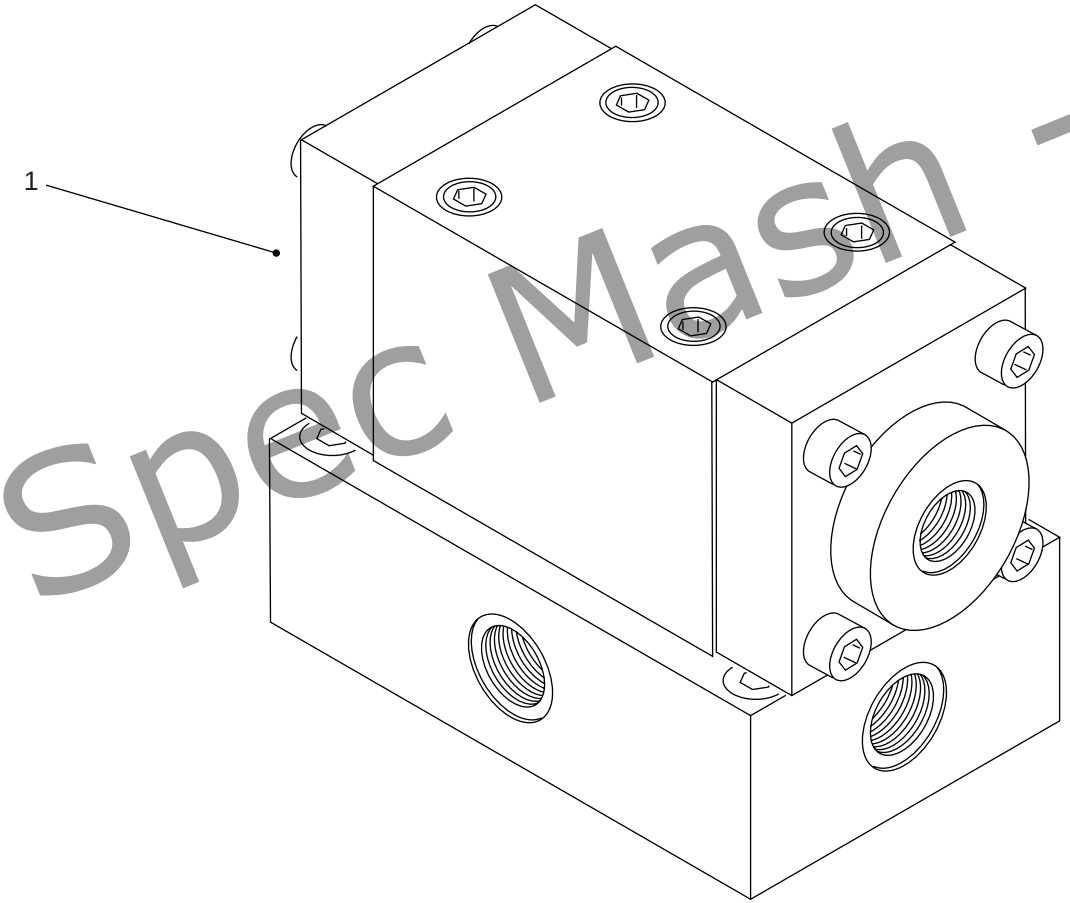

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0090-8391 DIRECTIONAL CONTROL VALVE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	1523367O	VALVE-DIRECTION CONT		


NOTES:
A 15265694 SEAL KIT FOR OVERHAUL, ALL OTHER ITEMS NON-SERVICEABLE.

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0100-8391 MONOBLOCK BRAKE VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P8229

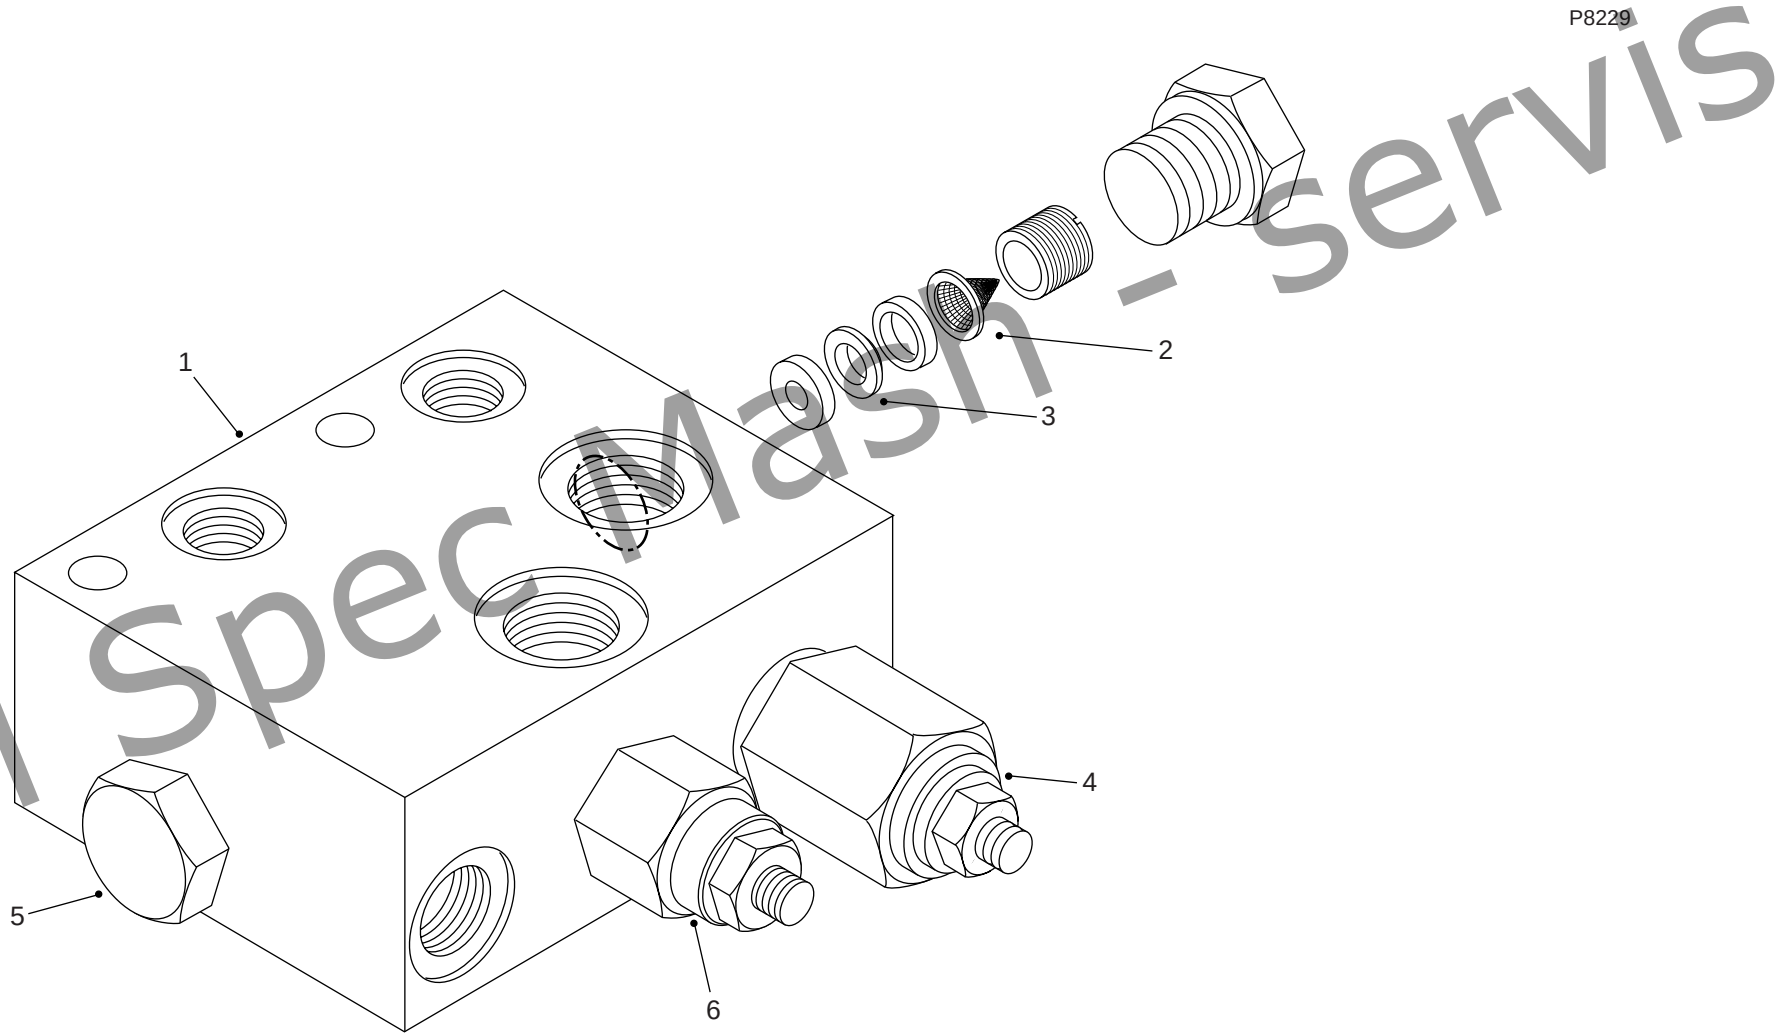

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0100-8391 MONOBLOCK BRAKE VALVE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15253248	VALVE-MONOBLOCK		
	002	001	15269871	.FILTER-CONICAL		
	003	001	15269872	.FILTER-DISC		
A	004	001	15269873	.CARTRIDGE-PRESS RED		
B	005	001	15269874	.VALVE-SHUTTLE		
C	006	001	15269875	.VALVE-RELIEF		


NOTES:
A 15269876 SEAL KIT- PRESSURE REDUCING VALVE
B 15269877 SEAL KIT-SHUTTLE VALVE
C 15269878 SEAL KIT-LOW PRESSURE RELIEF VALVE

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0130-8391 RETARDER CONTROL VALVE-BRAKES
FROM SERIAL NO. T8391011

DRAWING NO. P9729

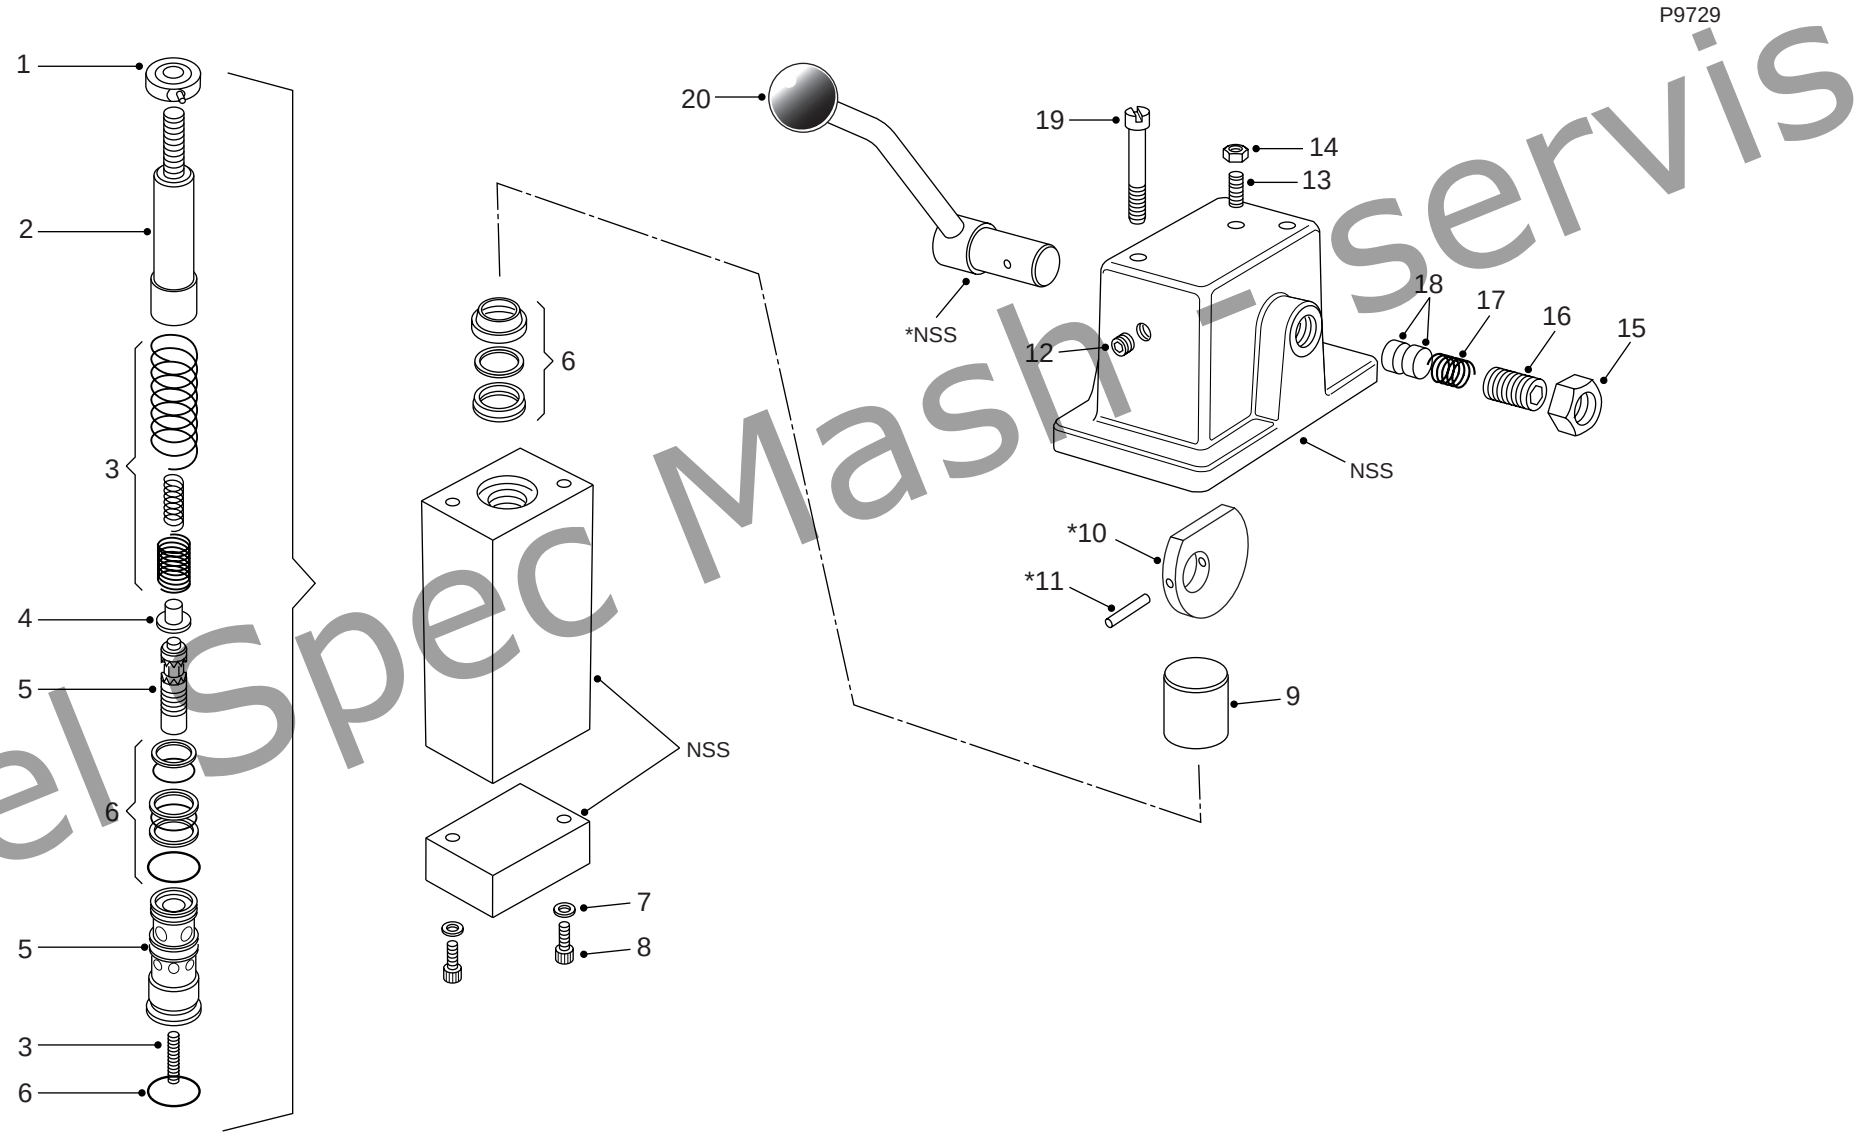

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0130-8391 RETARDER CONTROL VALVE-BRAKES
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	001	15259155	VALVE		
	001	001	15268376	.COLLAR		
	002	001	15268419	.PLUNGER		
	003	001	15268416	.KIT-SPRING		
	004	001	15267601	.SEAT-SPRING		
	005	001	15268418	.KIT-SPOOL/SLEEVE		
	006	001	15268417	.KIT-SEAL		
	007	002	15268429	.WASHER		
	008	002	NSS	.SCREW		
	009	001	15268432	.CAP		
A	010	001	15268433	.CAM		
A	011	001	15272881	.PIN		
	012	001	15268435	.PLUG		
	013	001	15268398	.SCREW		
	014	001	15268399	.NUT		
	015	001	15268436	.NUT		
	016	001	15268437	.SCREW		
	017	001	15268438	.SPRING		
	018	002	15268439	.PUCK-FRIC		
	019	002	15268440	.SCREW		
	020	001	15268444	.KNOB		


NOTES:
A VALVES BELOW S/NO 5320 USE *15273026 KIT-LEVER,CAM & PIN

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0240-8391 FILTER ASSEMBLY-DISC BRAKE
FROM SERIAL NO. T8391011

DRAWING NO. P5550

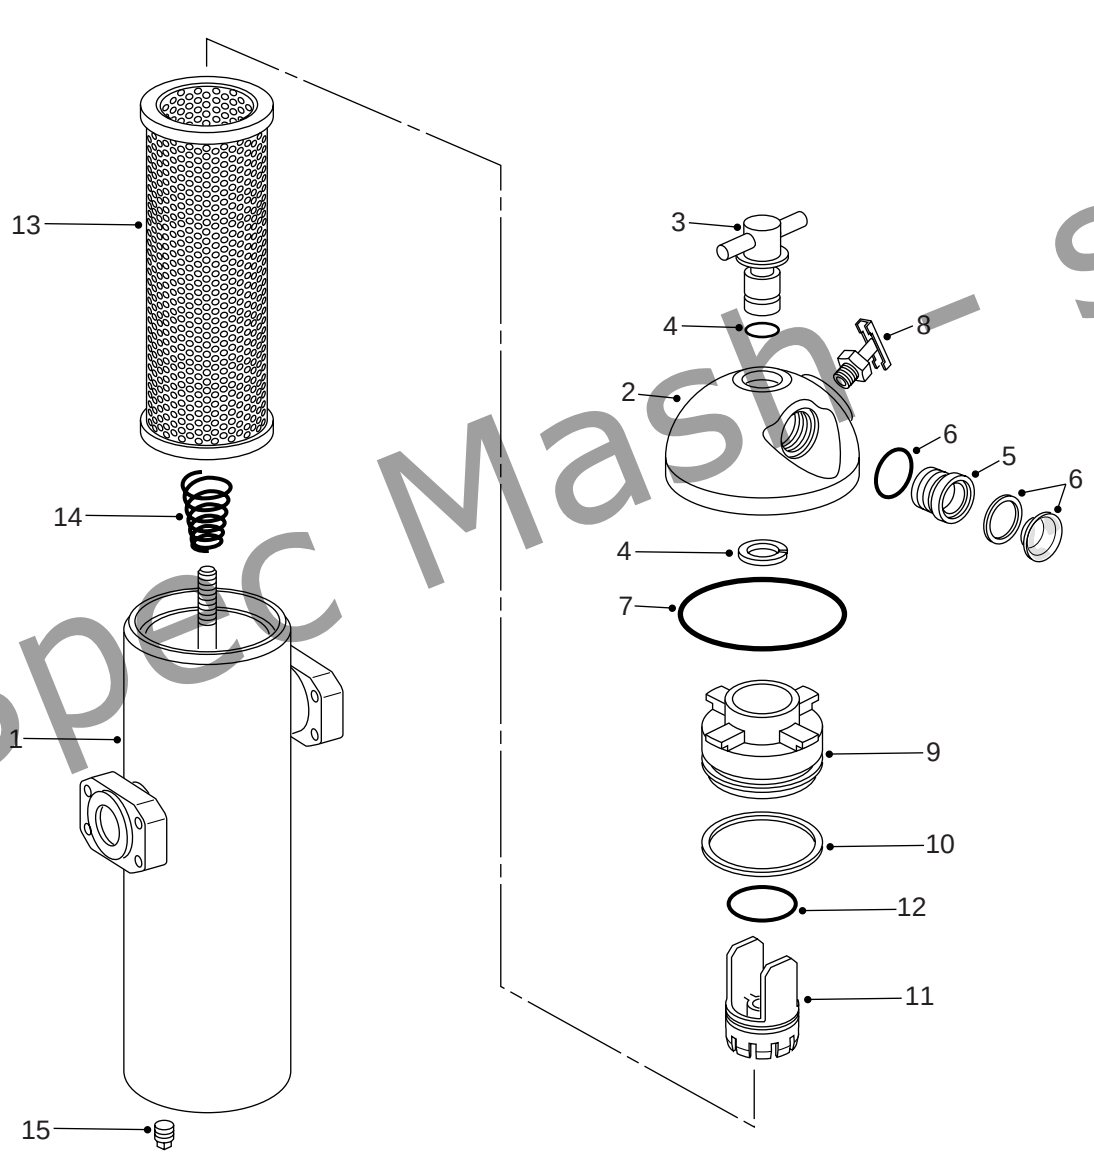

Bel Spec Mash- servis

https://truckmanualshub.com/

250-0240-8391 FILTER ASSEMBLY-DISC BRAKE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	09066150	FILTER		
	002	001	09055356	.HEAD ASSY		
	003	001	09055357	..NUT ASSY		
	004	001	09055358	...RING-RETAINER		
	005	001	NSS	..WINDOW ASSY		
	006	001	09055360	...SEAL KIT-WINDOW		
	007	001	09055361	..RING		
	008	001	09055362	..VALVE-BLEEDER		
	009	001	09055363	.BAFFLE ASSY		
	010	001	09055364	..SEAL-CUP		
	011	001	09055365	.VALVE ASSY		
	012	001	09055366	..O RING		
	013	001	09066151	.ELEMENT		
	014	001	09055367	.SPRING		
	015	001	00444631	.PLUG		

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0010-8391 CAB ASSEMBLY
FROM SERIAL NO. T8391011

DRAWING NO. P10242A

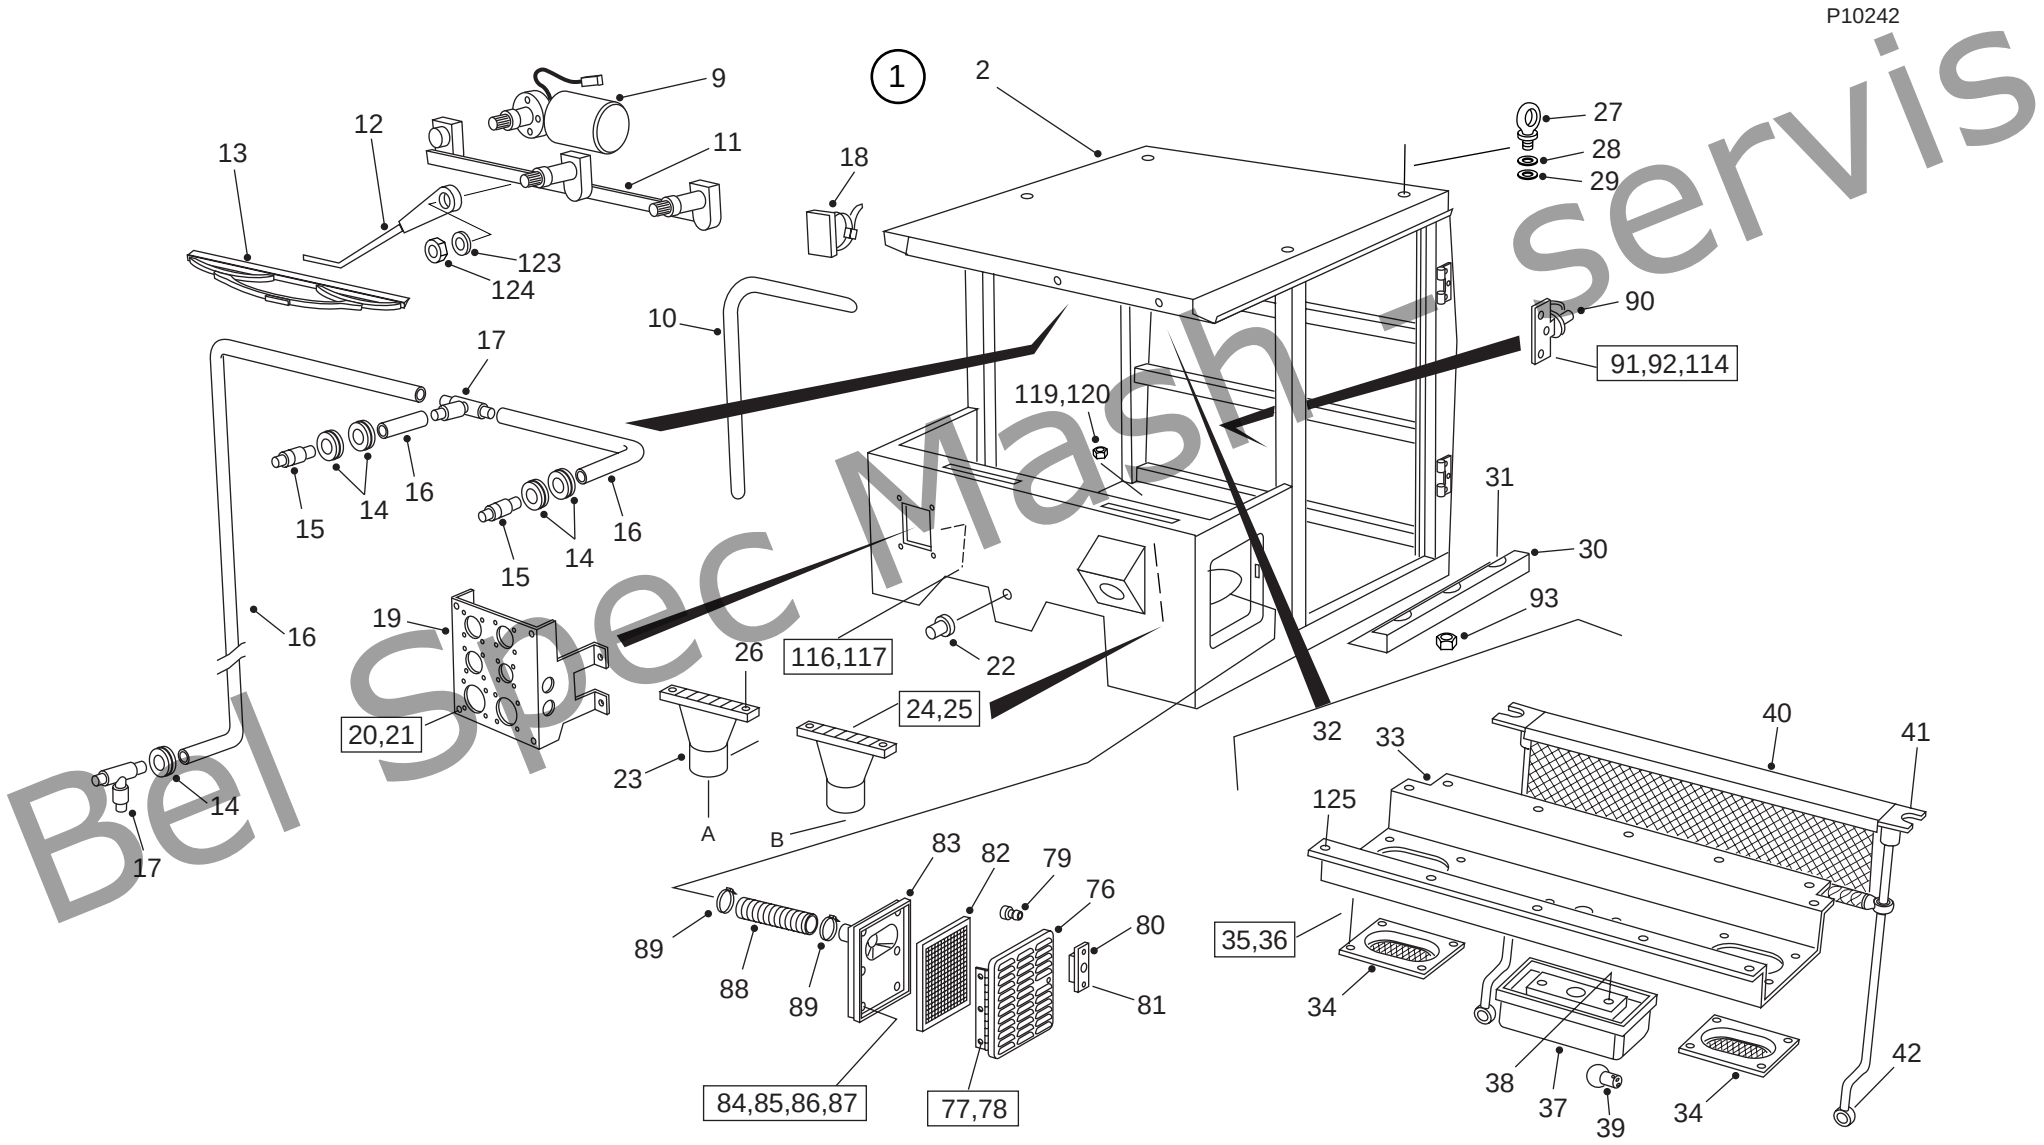


Bel Spec Mash - servis

https://truckmanualshub.com/

260-0010-8391 CAB ASSEMBLY
FROM SERIAL NO. T8391011

DRAWING NO. P10242B

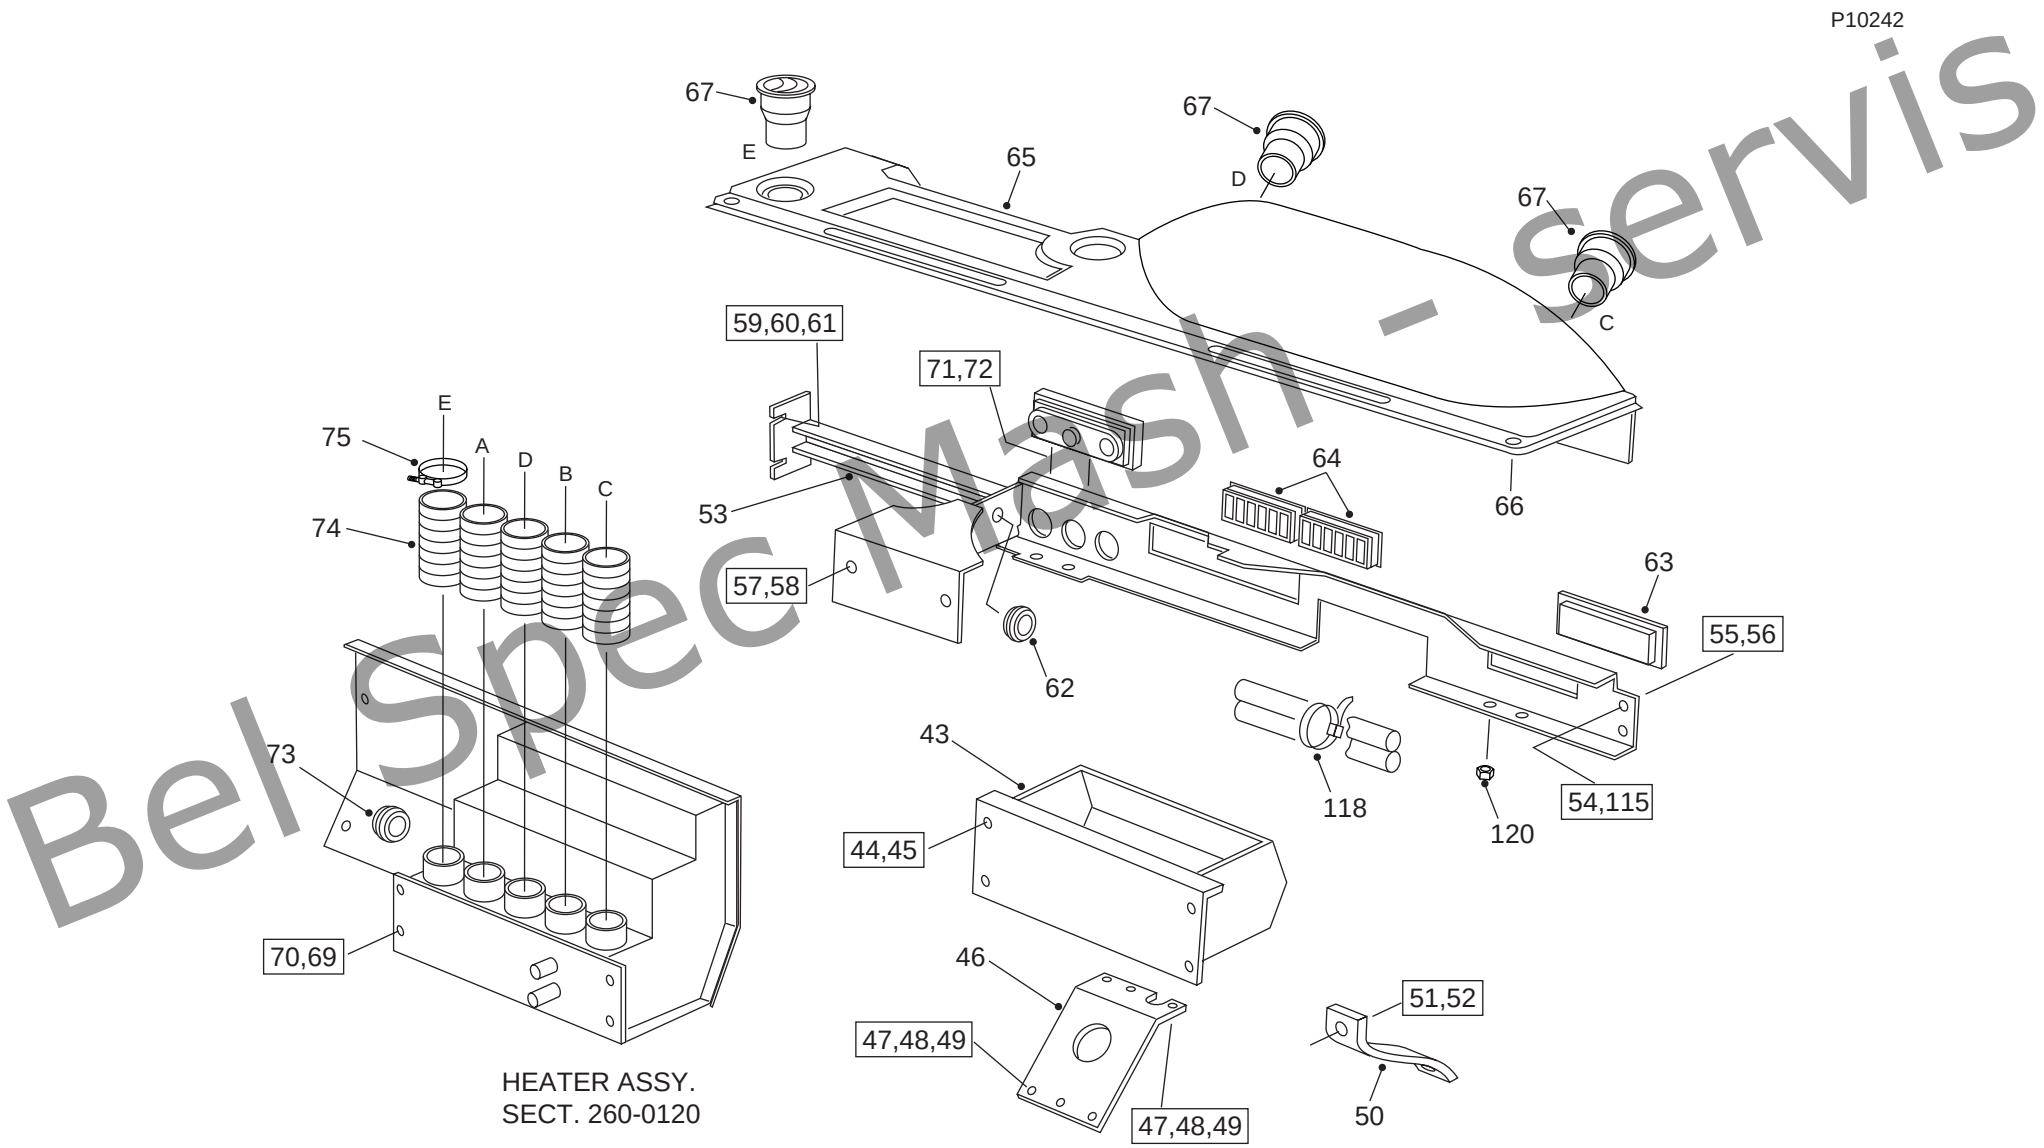


Bel Spec Mash - servis

https://truckmanualshub.com/

260-0010-8391 CAB ASSEMBLY
FROM SERIAL NO. T8391011

DRAWING NO. P10242C

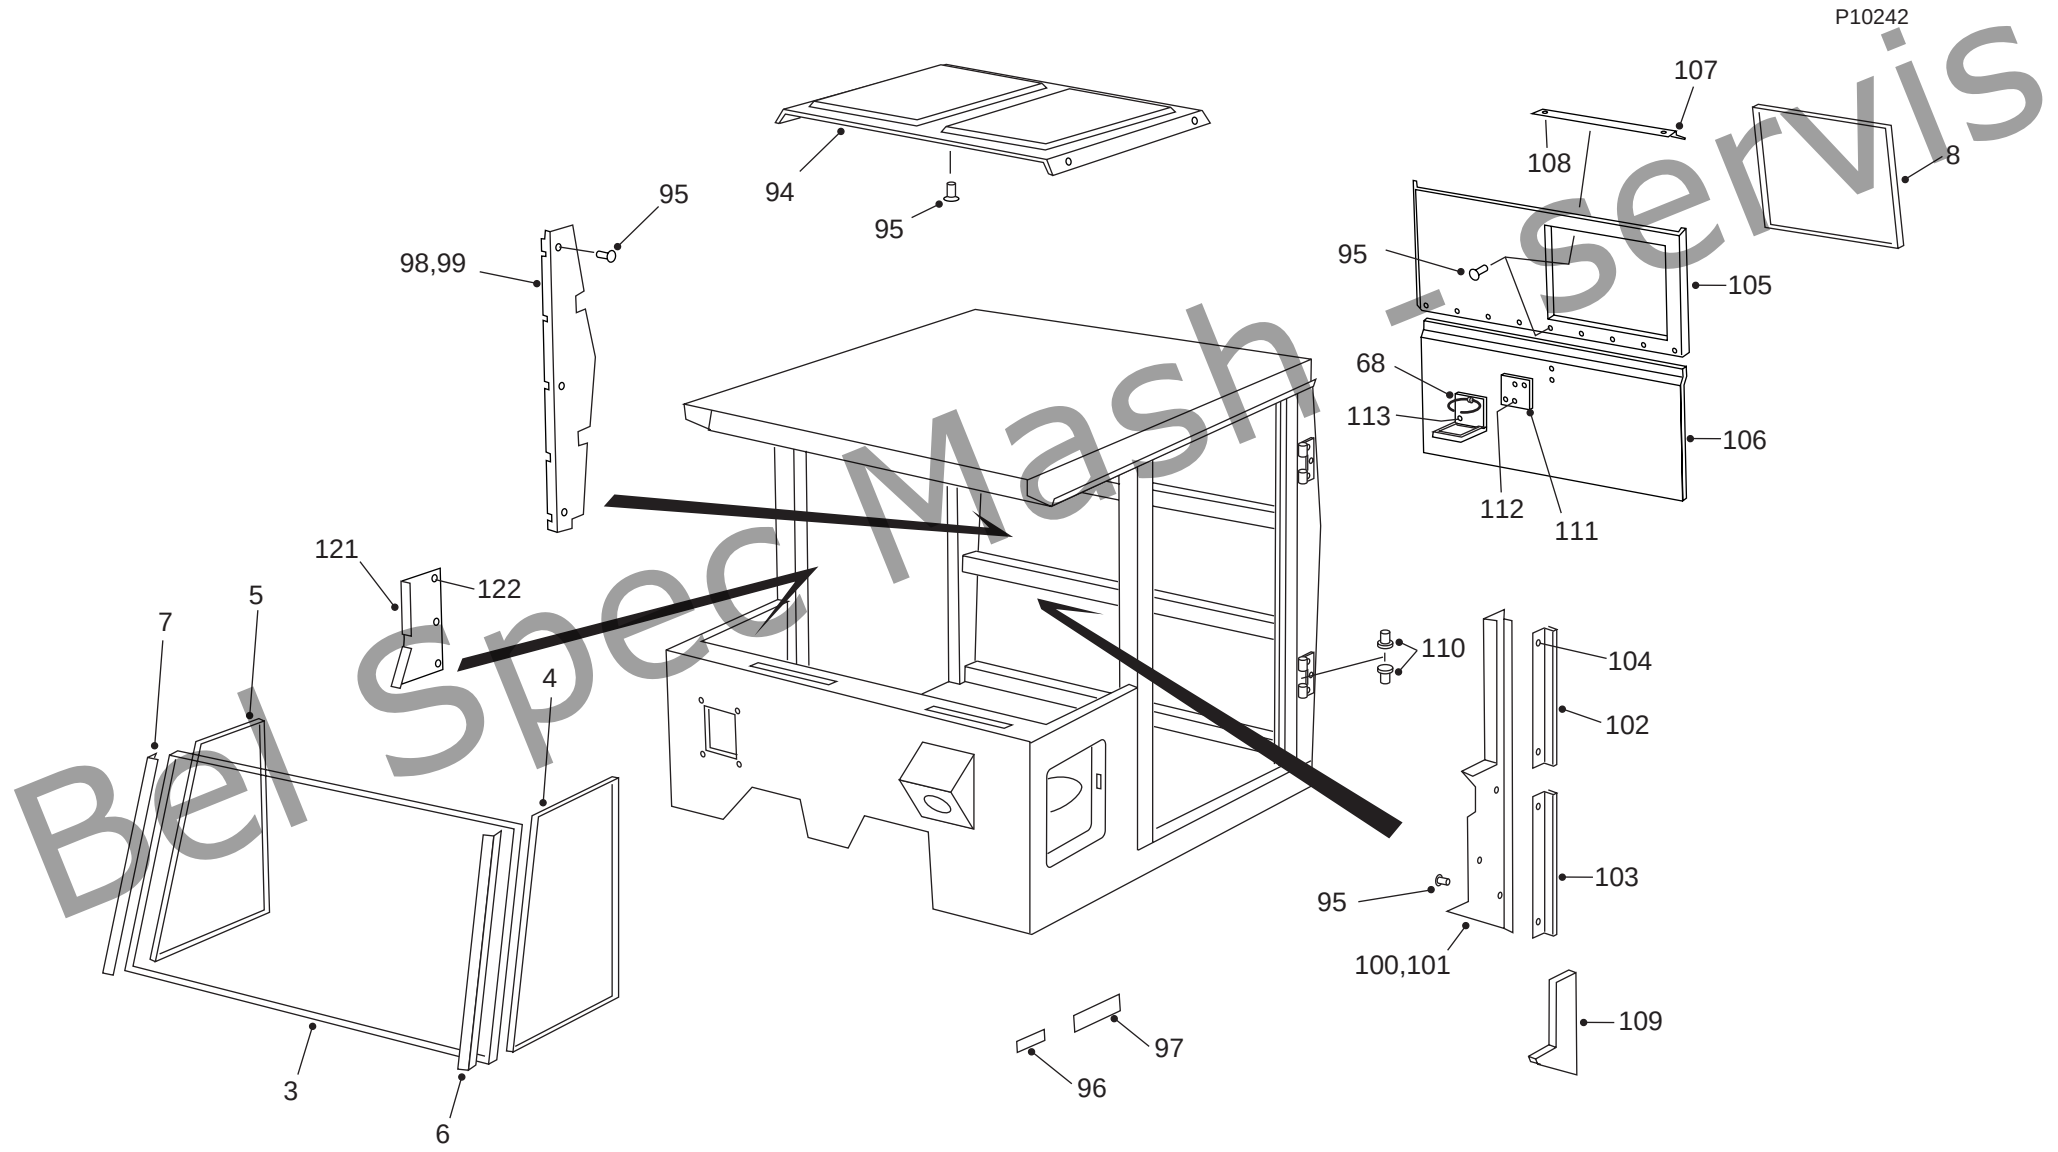

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0010-8391 CAB ASSEMBLY
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15311692	RIGID CAB ASSY		
	002	001	NSS	.CAB-BASIC		
	003	001	15272038	.WINDSCREEN		
	004	001	15272039	.GLASS-SIDE LH		
	005	001	15272040	.GLASS-SIDE RH		
	006	001	15272041	.COVER-LH		
	007	001	15272042	.COVER-RH		
	008	001	15272043	.GLASS-REAR		
	009	001	15272044	.WIPER MOTOR		
	010	001	15272045	.HARNESS		
	011	001	15272046	.LINKAGE		
	012	002	15272047	.WIPER ARM		
	013	002	15272048	.WIPER BLADE		
	014	005	15272049	.GROMMET		
	015	002	15270749	.VALVE-SCREEN WASHER		
	016	ASR	15272050	.TUBING-BULK		
	017	002	15272051	.TEE		
	018	016	09379264	.TIE-CABLE		
	019	001	15270908	.SUPPORT-FUSE BOX		
	020	004	15270789	.SCREW		
	021	004	15270790	.WASHER		
	022	001	15272052	.NUT		
	023	002	15270891	.AIR DIFFUSER		
	024	004	15270781	.BOLT		
	025	004	15270840	.WASHER		
	026	004	15270829	.SCREW		
	027	004	15272053	.LIFTING EYE NUT		
	028	004	15270873	.WASHER		
	029	004	15270874	.WASHER-FIBRE		
	030	002	15272054	.CARPET FIXATION		
	031	006	15270829	.SCREW		
	032	001	15272055	.BOX ASSY-FRONT		
	033	001	15272056	..BOX		
	034	002	15270888	..GRILLE-SPEAKER		
	035	008	15272057	..SCREW		
	036	008	15270995	..CLIP		
	037	001	15250390	..LIGHT-CAB INTERIOR		
	038	002	15270829	..SCREW		
	039	001	15265564	..BULB-24V 5W		
	040	001	15272058	.SUN BLIND		

260-0010-8391 CAB ASSEMBLY
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	002	15270829	.SCREW		
	042	002	15270799	.SCREW		
	043	001	15272059	.SUPPORT		
	044	004	15272060	.SCREW		
	045	004	15270800	.WASHER		
	046	001	15272061	.SUPPORT ADDITIVE		
	047	006	15270900	.SCREW		
	048	006	15272062	.WASHER		
	049	006	15271185	.WASHER		
	050	001	15272063	.SUPPORT		
	051	001	15270900	.SCREW		
	052	001	15270790	.WASHER		
	053	001	15272064	.SUPPORT-DASHBOARD		
	054	002	06350620	.SCREW		
	055	002	15270840	.WASHER		
	056	002	15270833	.NUT		
	057	002	15270900	.SCREW		
	058	002	15270790	.WASHER		
	059	002	15270833	.NUT		
	060	002	15270998	.WASHER		
	061	002	15270858	.WASHER		
	062	001	15272049	.GROMMET		
	063	001	15270904	.COVER-RADIO		
	064	002	15270901	.HOUSING-SWITCHES		
	065	001	15272065	.DASHBOARD		
	066	002	15270829	.SCREW		
	067	003	15270890	.AIR DIFFUSER		
	068	002	15271183	.SCREW		
	069	002	15270840	.WASHER		
	070	002	15270833	.NUT		
	071	002	15270781	.BOLT		
	072	002	15270840	.WASHER		
	073	001	15270910	.GROMMET		
	074	ASR	15270896	.HOSE-BULK PLASTIC		
	075	010	15270895	.CLAMP		
	076	001	15270793	.DOOR ASSY		
	077	003	15270781	.BOLT		
	078	003	15270840	.WASHER		
	079	002	15270798	.STOPPER		
	080	001	15270797	.LOCK		

PerSpec Mash. servis

https://truckmanualshub.com/

260-0010-8391 CAB ASSEMBLY
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	081	002	15270799	.SCREW		
	082	001	15270794	.FILTER-AIR		
	083	001	15270796	.SUPPORT-FILTER		
	084	007	15270781	.BOLT		
	085	007	15270840	.WASHER		
	086	007	15270832	.WASHER		
	087	007	15270833	.NUT		
	088	ASR	15272067	.HOSE-BULK PLASTIC		
	089	004	15272068	.RING-PLASTIC		
	090	002	15272069	.STRIKER		
	091	006	15272070	.SCREW		
	092	006	15271185	.WASHER		
	093	002	15272052	.NUT		
	094	001	15272084	.TRIM PANEL-ROOF FIX		
	095	001	15272085	.BUTTON		
	096	001	15270992	.PLATE-IDENTITY		
	097	001	15272265	.PLATE		
	098	001	15272086	.TRIM-REAR SIDE LH		
	099	001	15272087	.TRIM-REAR SIDE RH		
	100	001	15272088	.TRIM-FRONT SIDE LH		
	101	001	15272089	.TRIM-FRONT SIDE RH		
	102	002	15272090	.UPPER FIXATION		
	103	002	15272091	.LOWER FIXATION		
	104	008	15270871	.RIVET		
	105	001	15272092	.TRIM-REAR UPPER		
	106	001	15272093	.TRIM-REAR LOWER		
	107	001	15272094	.UPPER FIXATION-REAR		
	108	003	15270829	.SCREW		
	109	001	15272266	.INSULATION		
	110	008	15272267	.SOCKET		
	111	001	15271180	.SUPPORT-BOTTLE RACK		
	112	002	15270845	.SCREW		
	113	001	15271004	.MUG/CAN HOLDER		
	114	006	15272082	.CAP-PLASTIC		
	115	002	15270858	.WASHER		
	116	001	15270789	.SCREW		
	117	001	15272062	.WASHER		
	118	006	15272068	.RING-PLASTIC		
	119	006	15272052	.NUT		
	120	004	15270921	.NUT		

260-0010-8391 CAB ASSEMBLY
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	121	001	15272083	.TRIM PANEL-SIDE FIX		
	122	003	15270754	.SCREW		
	123	002	07150815	.WASHER		
	124	002	06430801	.NUT		
	125	010	15270829	.SCREW		

BerSpec Mash - servis

https://truckmanualshub.com/

THIS PAGE IS INTENTIONALLY LEFT BLANK


Bel Spec Mash - servis

https://truckmanualshub.com/

260-0011-8391 CAB CENTRE CONSOLE
FROM SERIAL NO. T8391011

DRAWING NO. P10705

P10705

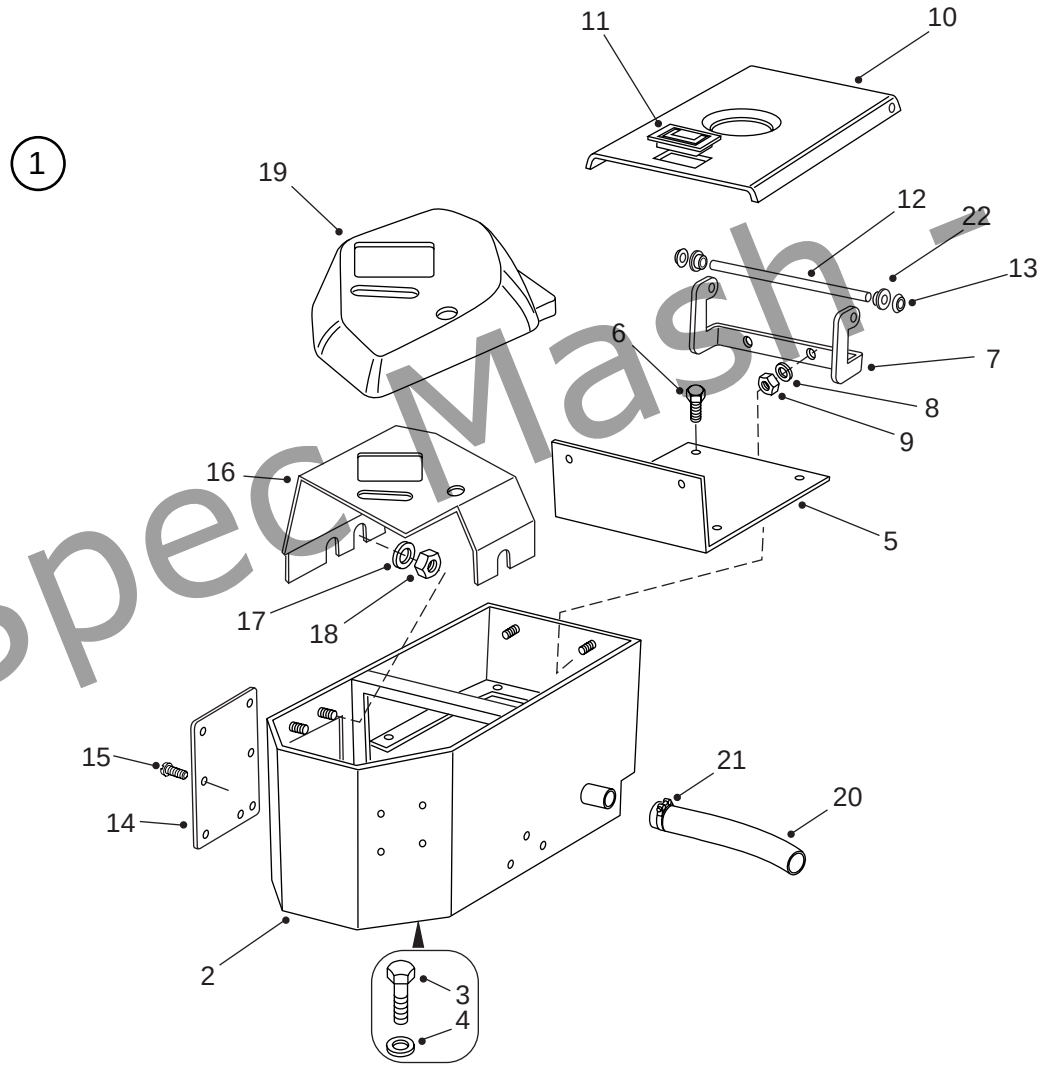

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0011-8391 CAB CENTRE CONSOLE
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15310296	CENTRE CONSOLE ASSY		
	002	001	15272071	.CONSOLE		
	003	006	06441020	.BOLT		
	004	006	15270800	.WASHER		
	005	001	15272072	.PLATE		
	006	006	15270829	.SCREW		
	007	001	15272073	.SUPPORT		
	008	002	15270840	.WASHER		
	009	002	15270833	.NUT		
	010	001	15272074	.COVER		
	011	001	15272075	.LATCH		
	012	001	15272076	.ROD		
	013	002	15272077	.CLIP		
	014	001	15272078	.COVER-SIDE		
	015	007	15270829	.SCREW		
	016	001	15275133	.SUPPORT		
	017	003	15270840	.WASHER		
	018	003	15270833	.NUT		
	019	001	15275134	.COVER-CONSOLE		
	020	ASR	15270896	.HOSE-BULK PLASTIC		
	021	001	15270895	.CLAMP		
	022	002	15275135	.SPACER-PLASTIC		

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0015-8391 CAB MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P10264

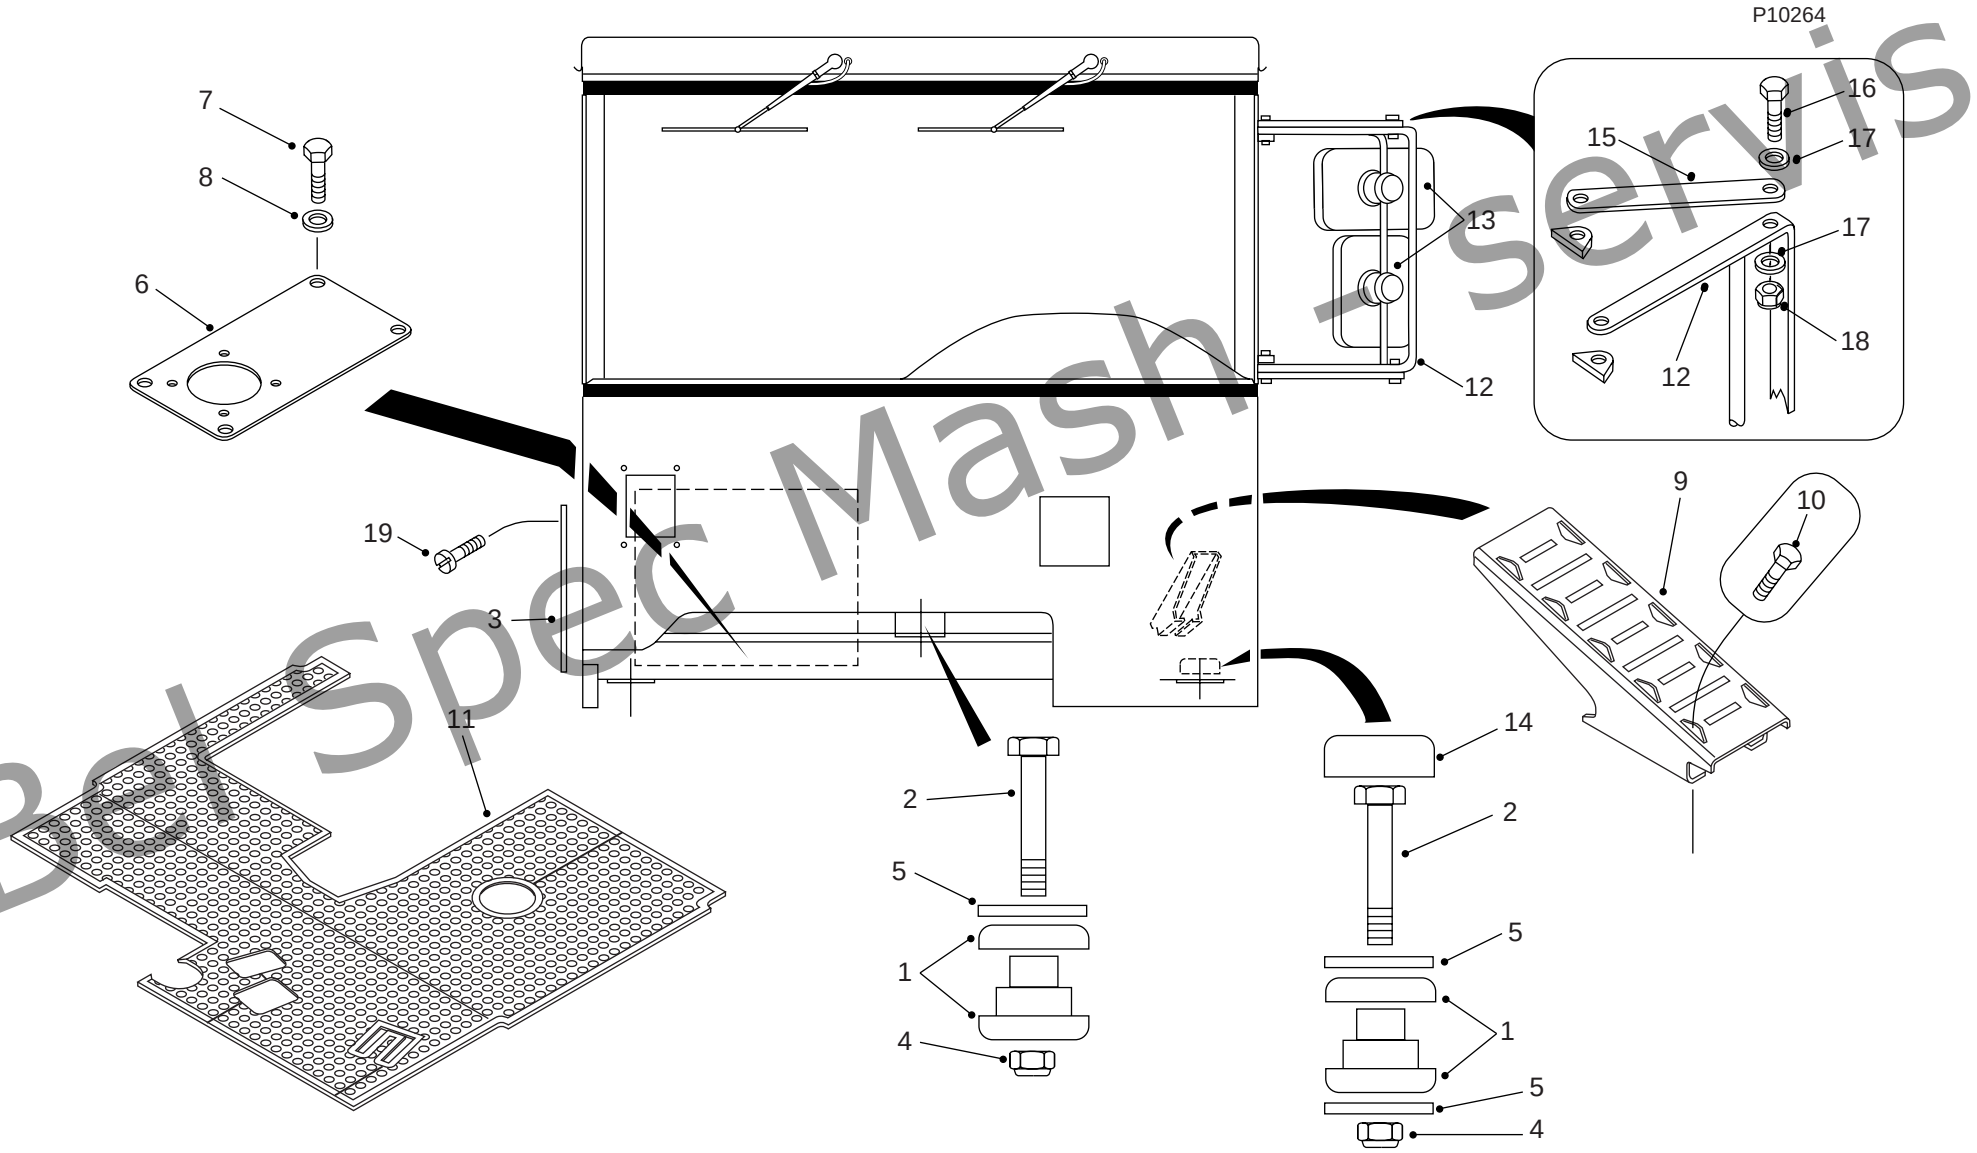

Bob Spec Mash - servis

https://truckmanualshub.com/

260-0015-8391 CAB MOUNTING
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	003	15311433	ISOLATION MOUNT		
	002	003	00454414	BOLT		
	003	001	15305983	COVER PLATE		
	004	001	09419493	LOCKNUT		
	005	003	15250143	WASHER-HARDENED		
	006	001	15300422	PLATE-ATEC MANIFOLD		
	007	004	06350820	SCREW		
	008	004	07160830	LOCKWASHER		
	009	001	15300537	FOOTREST		
	010	004	15301135	CAPSCREW		
	011	001	15300236	FLOORMAT		
	012	001	15303081	ARM-MIRROR		
	013	002	09077400	MIRROR		
	014	002	15301678	CAP-END		
	015	002	15303084	BAR		
	016	006	06351230	BOLT		
	017	012	07151220	WASHER		
	018	006	06471201	LOCKNUT		
	019	003	00171715	SCREW		

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0030-8391 CAB DOOR-LEFT HAND
FROM SERIAL NO. T8391011

DRAWING NO. P9688

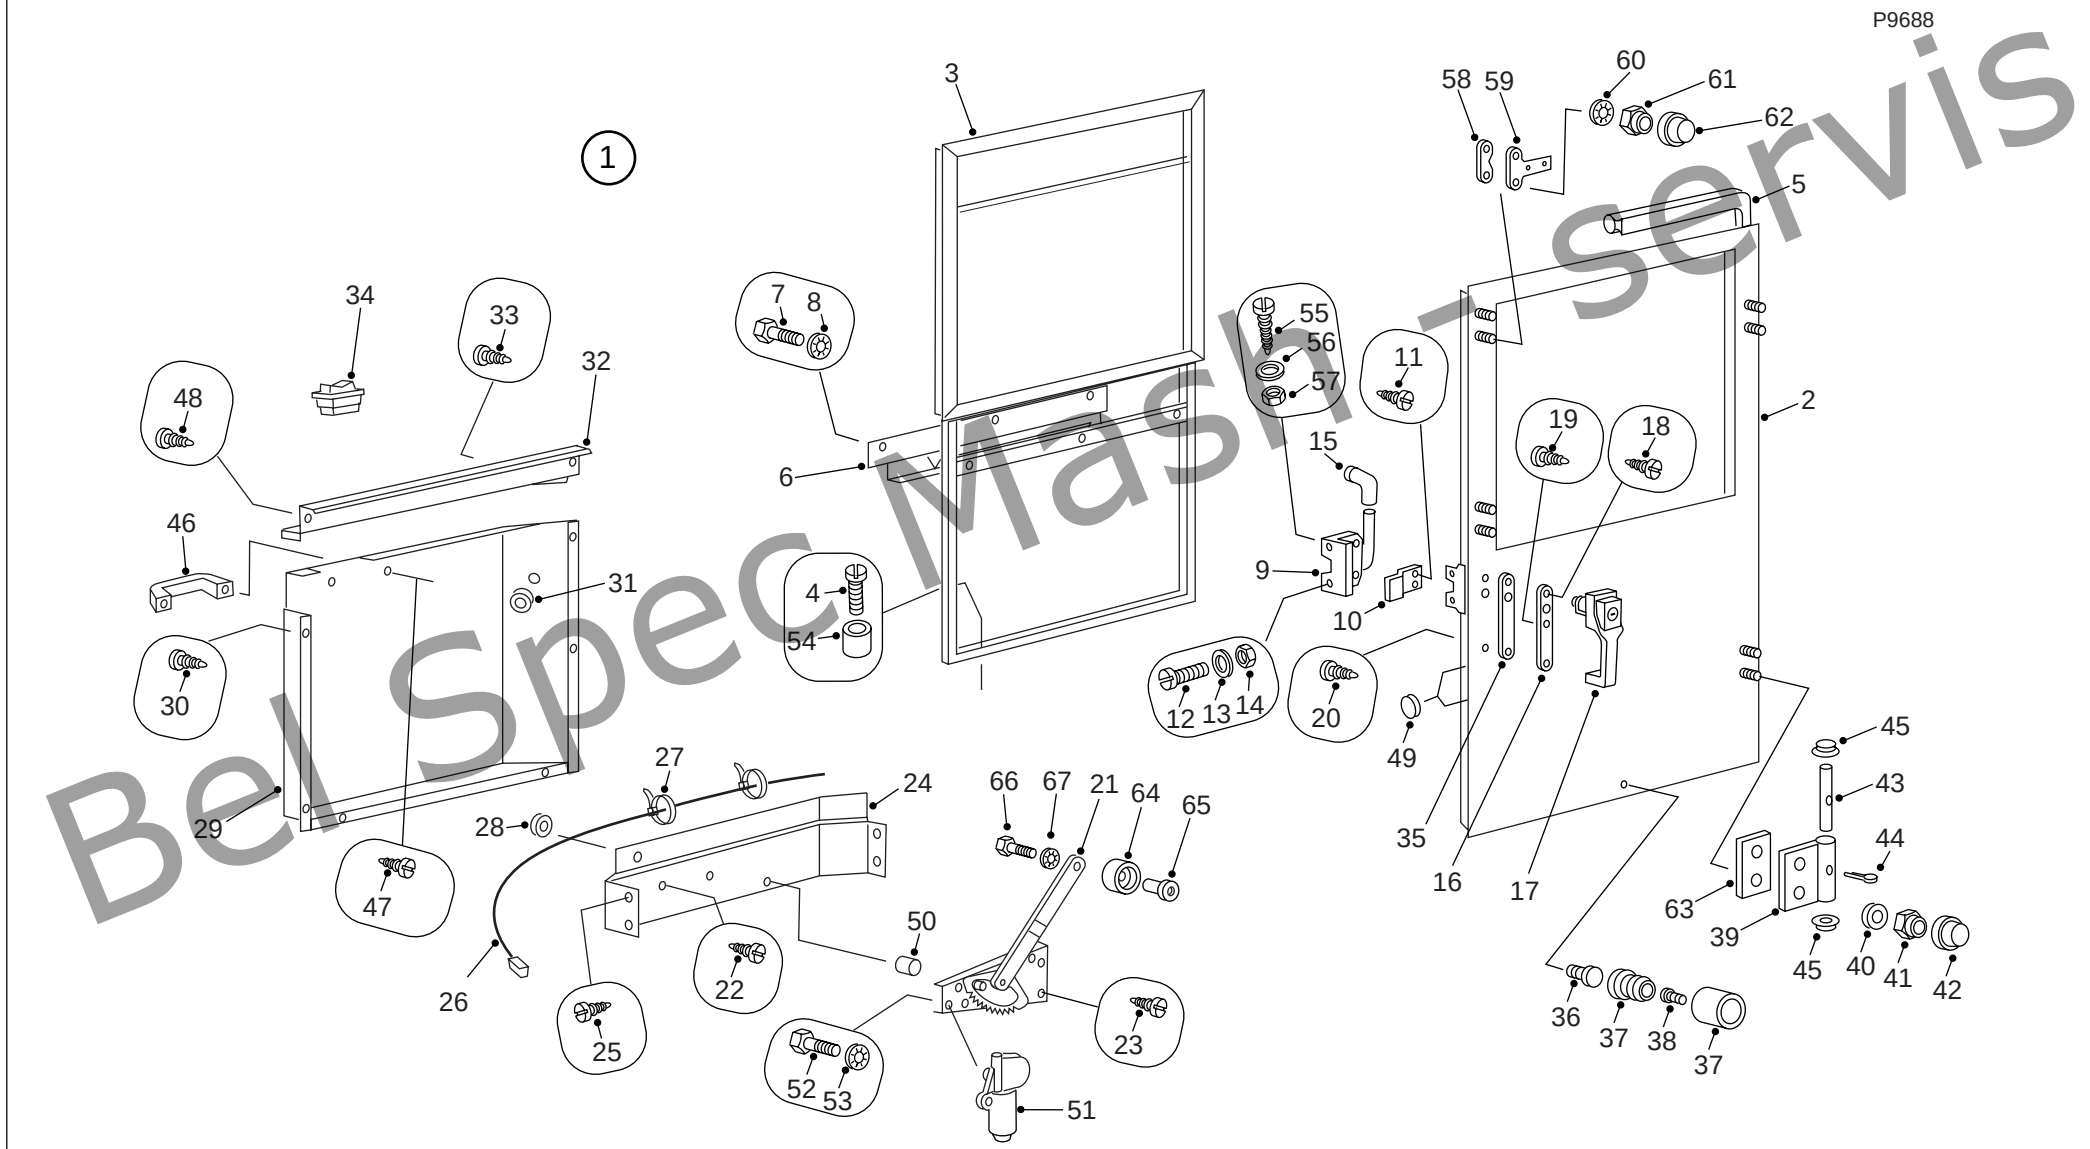

Bel Spec Mash Servis

https://truckmanualshub.com/

260-0030-8391 CAB DOOR-LEFT HAND
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	15272275	.DOOR ASSY-LH		
	002	001	15272296	..DOOR-LH		
	003	001	15272276	..WINDOW-SLIDING-LH		
	004	002	15272277	..SCREW		
	005	ASR	15272099	..SEAL-BULK		
	006	001	15272870	..SUPPORT-GLASS		
	007	003	15270754	..SCREW		
	008	003	15272279	..WASHER		
	009	001	15272280	..DOOR LOCK-LH		
	010	001	15272105	..ADDITIVE-LOCK		
	011	002	15270754	..SCREW		
	012	002	15270841	..SCREW		
	013	002	15270840	..WASHER		
	014	002	15270833	..NUT		
	015	001	15270843	..COVER		
	016	001	15272101	..SPACER-HANDLE RH		
	017	001	15270751	..HANDLE-DOOR		
	018	001	15270829	..SCREW		
	019	001	15272102	..SCREW		
	020	001	15272103	..SCREW		
	021	001	15272871	..ARM-SLIDING		
	022	002	15270829	..SCREW		
	023	001	15272283	..SCREW		
	024	001	15272284	..SUPPORT		
	025	004	15270770	..SCREW		
	026	001	15272285	..CABLE		
	027	002	09379264	..TIE-CABLE		
	028	001	15272286	..GROMMET		
	029	001	15272287	..DOOR-INNER		
	030	007	15270754	..SCREW		
	031	001	15272288	..GROMMET		
	032	001	15272289	..SWITCH-SUPPORT		
	033	003	15272290	..SCREW		
	034	001	15272141	..SWITCH-WINDOW LH		
	035	001	15272100	..SEAL-HANDLE		
	036	001	15270921	..NUT		
	037	001	15272108	..RETAINER-DOOR		
	038	001	15270867	..SCREW		
	039	002	15272271	..HINGE		
	040	004	15272113	..WASHER		

260-0030-8391 CAB DOOR-LEFT HAND
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	004	15272114	..NUT-SAFETY		
	042	004	15272115	..CAP-NUT		
	043	002	15272272	..PIN		
	044	002	15272273	..PIN-SPLIT		
	045	004	15272274	..CLIP		
	046	001	15270752	..HANDLE-PULL		
	047	002	15272102	..SCREW		
	048	002	15270754	..SCREW		
	049	004	15272294	..SPACER		
	050	001	15272292	..SPACER		
	051	001	15272140	..MOTOR-DOOR LH		
	052	003	06350620	..SCREW		
	053	003	15270840	..WASHER		
	054	002	15272293	..SPACER		
	055	001	15270781	..BOLT		
	056	001	15270840	..WASHER		
	057	001	15270833	..NUT		
	058	002	15272294	..SPACER		
	059	002	15272295	..SUPPORT-MIRROR		
	060	004	15270840	..WASHER		
	061	004	15270833	..NUT		
	062	004	15270791	..CAP		
	063	002	15272270	..SEAL		
	064	001	15272872	..ROLLER-NYLON		
	065	001	15272873	..BUSH-THREADED		
	066	001	15270781	..BOLT		
	067	001	15270840	..WASHER		


NOTES:
A PART OF CAB ASSEMBLY

Perspec Mash. servis

https://truckmanualshub.com/

260-0040-8391 CAB DOOR-RIGHT HAND
FROM SERIAL NO. T8391011

DRAWING NO. P9689

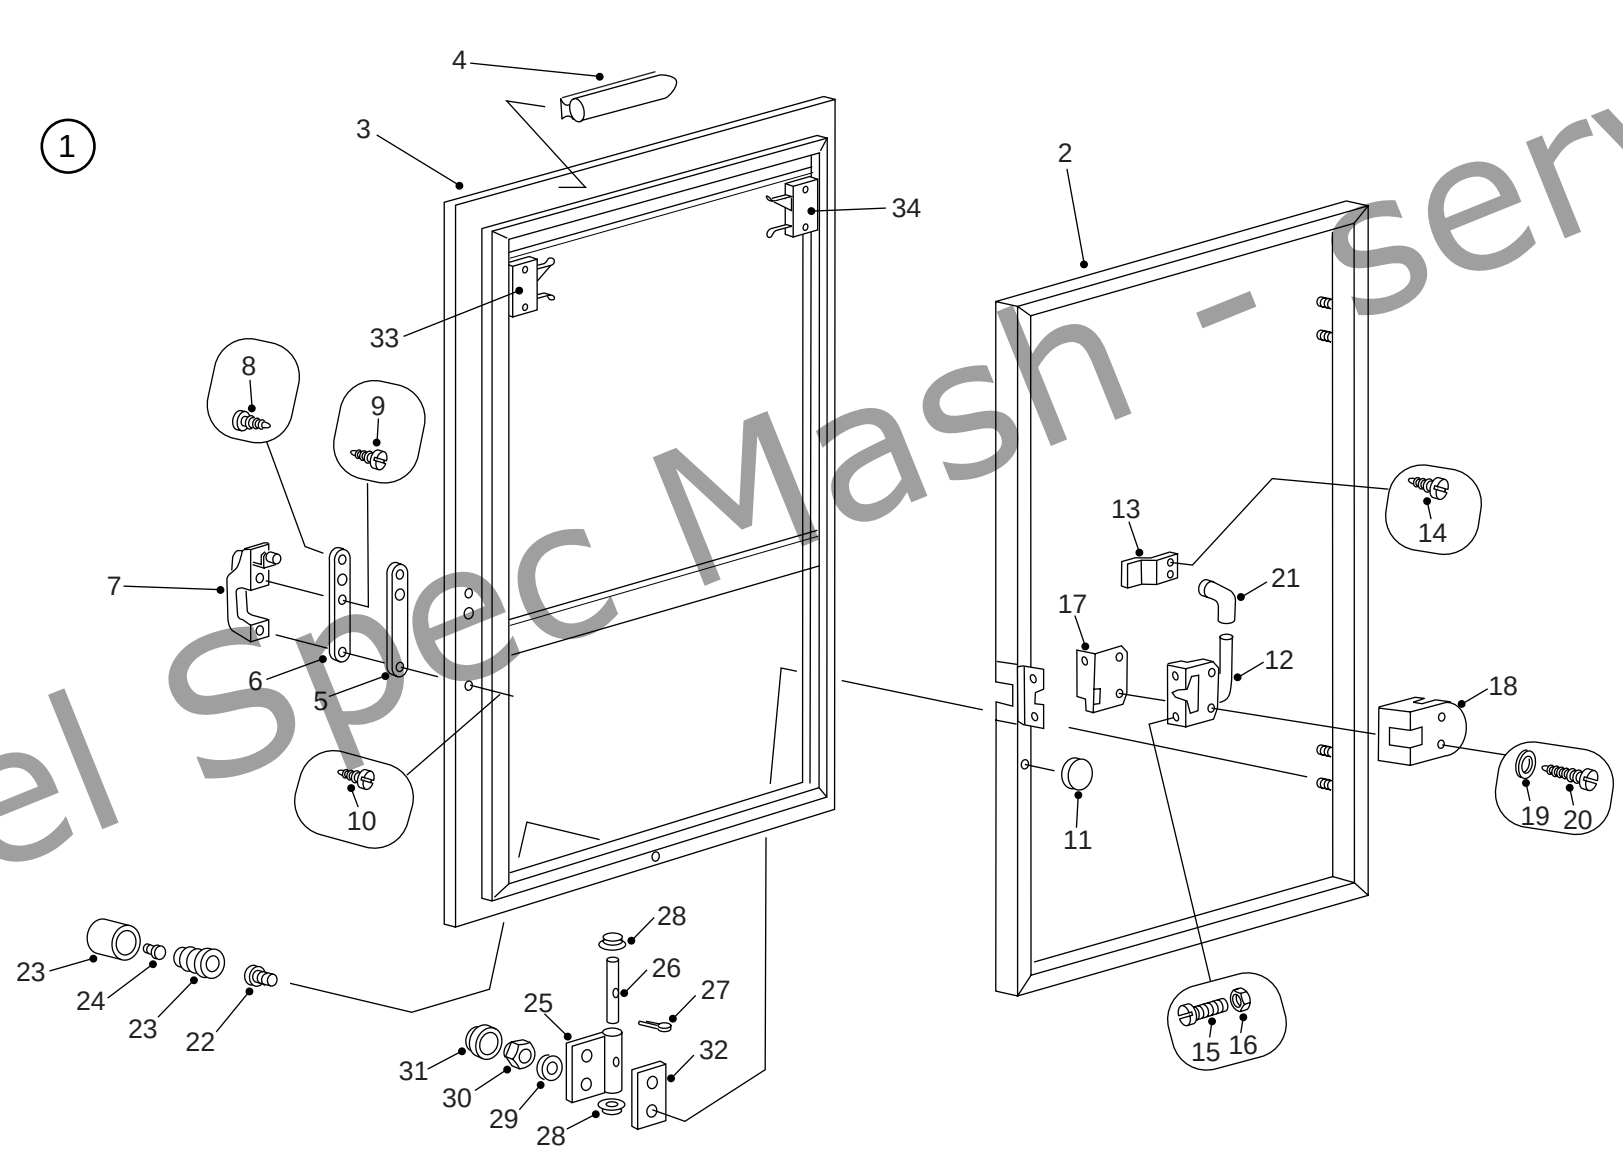

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0040-8391 CAB DOOR-RIGHT HAND
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	15272096	.DOOR ASSY-COMPLETE		
	002	001	15272097	..FRAME ASSY-RH		
	003	001	15272098	..WINDOW-SLIDING-RH		
	004	ASR	15272099	..SEAL-BULK		
	005	001	15272100	..SEAL-HANDLE		
	006	001	15272101	..SPACER-HANDLE RH		
	007	001	15270751	..HANDLE-DOOR		
	008	001	15270913	..SCREW		
	009	001	15272102	..SCREW		
	010	001	15272103	..SCREW		
	011	001	15270787	..GROMMET		
	012	001	15272104	..LOCK		
	013	001	15272105	..ADDITIVE-LOCK		
	014	002	15270799	..SCREW		
	015	002	15272268	..SCREW		
	016	002	15270833	..NUT		
	017	001	15272106	..CAP-LOCK FIXATION		
	018	001	15272269	..LOCK-CAP		
	019	002	15270767	..SCREW		
	020	002	15270840	..WASHER		
	021	001	15270769	..COVER		
	022	001	15270921	..NUT		
	023	001	15272108	..RETAINER-DOOR		
	024	001	15270867	..SCREW		
	025	002	15272271	..HINGE		
	026	002	15272272	..PIN		
	027	002	15272273	..PIN-SPLIT		
	028	004	15272274	..CLIP		
	029	004	15272113	..WASHER		
	030	004	15272114	..NUT-SAFETY		
	031	004	15272115	..CAP-NUT		
	032	001	15272270	..SEAL		
	033	001	15273658	..CATCH-WINDOW LH		
	034	001	15273659	..CATCH-WINDOW RH		


NOTES:
A PART OF CAB ASSEMBLY

BenSpec Mash - servis

https://truckmanualshub.com/

260-0080-8391 SWITCHES AND INSTRUMENTS
FROM SERIAL NO. T8391011

DRAWING NO. P10578

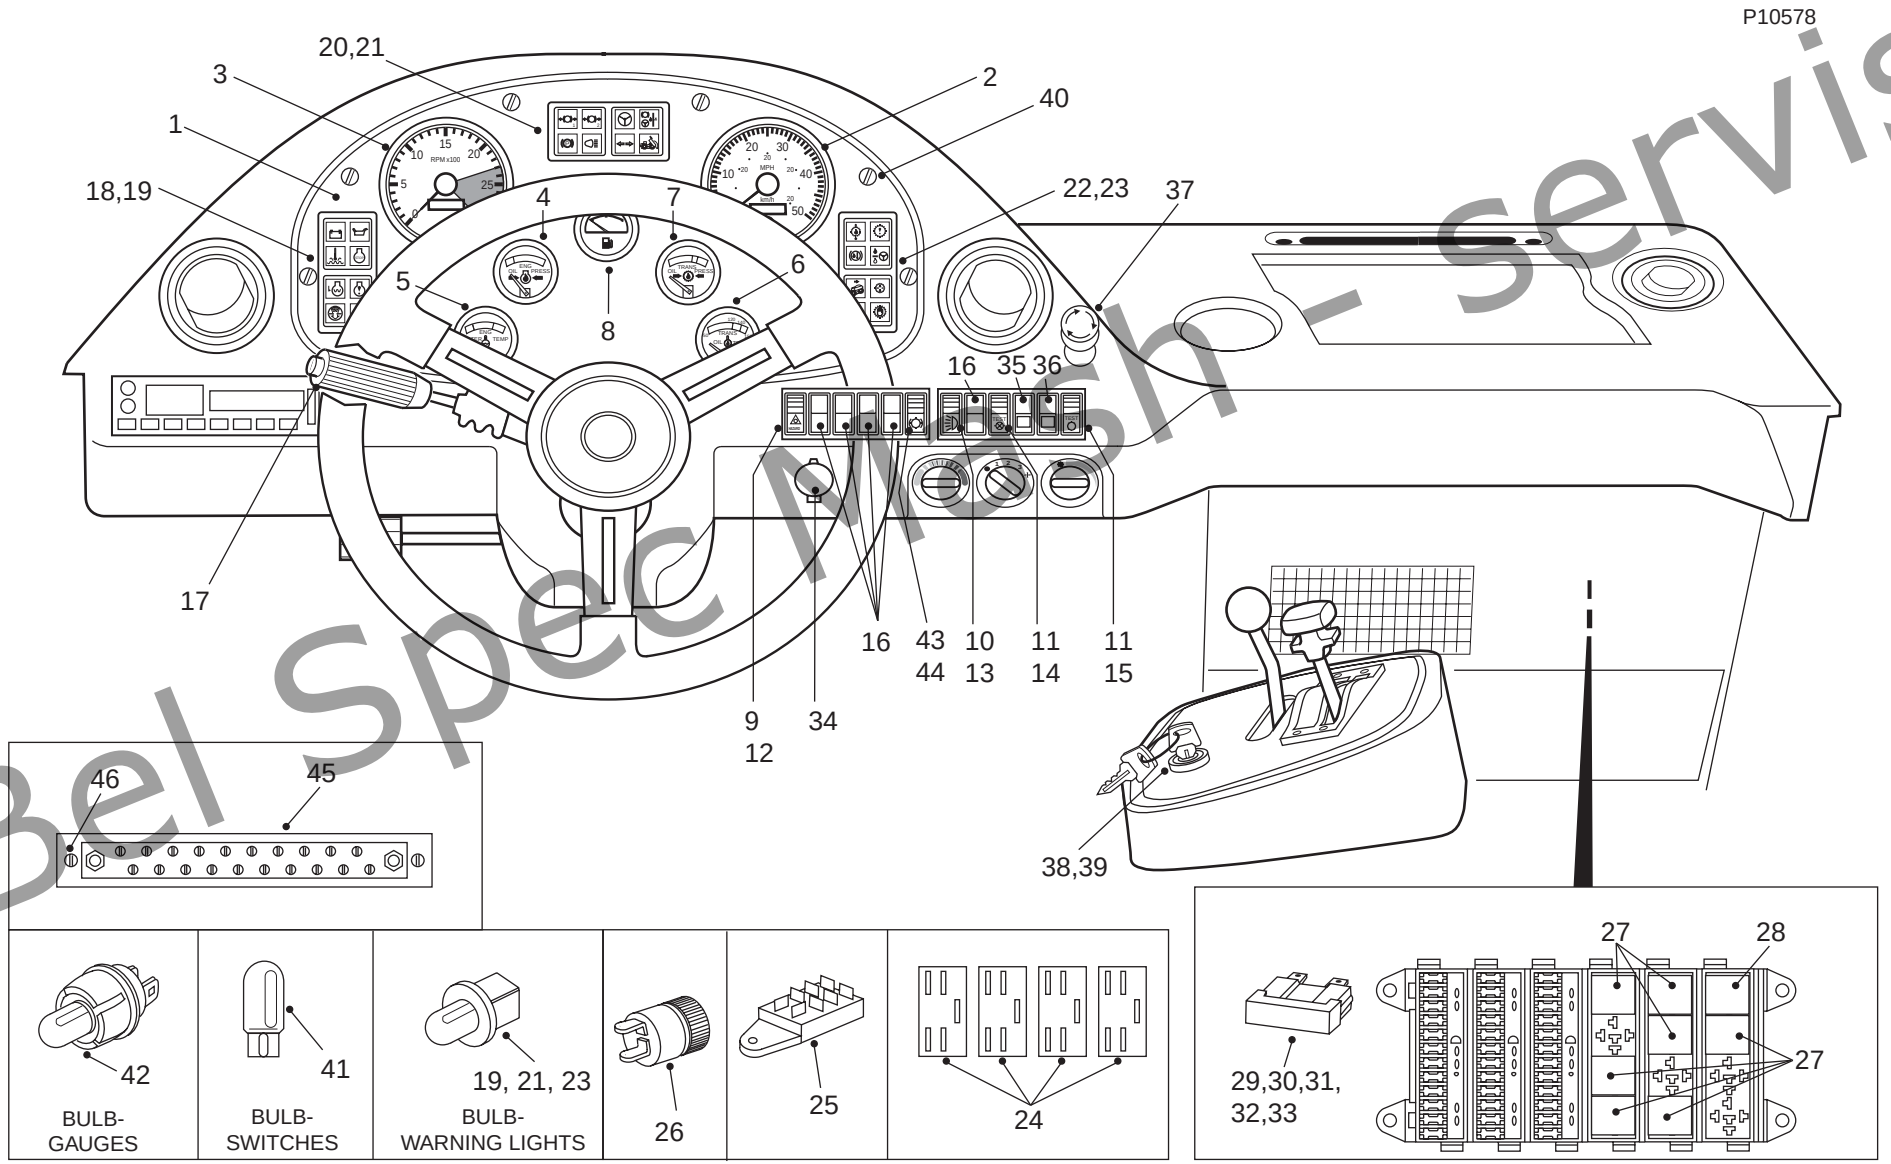

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0080-8391 SWITCHES AND INSTRUMENTS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15307750	INSTRUMENT PANEL		
	002	001	15256433	SPEEDOMETER		
	003	001	15256026	TACHOMETER		
	004	001	15308402	GAUGE-ENGINE OIL PRESS		
	005	001	15258291	GAUGE-ENG WATER TEMP		
	006	001	15258288	GAUGE-TRANS OIL TEMP		
	007	001	15300128	GAUGE-TRANS OIL PRES		
	008	001	15300413	GAUGE-FUEL LEVEL		
	009	001	15258795	SWITCH-HAZARDS		
	010	001	15258798	SWITCH-LIGHTS		
	011	003	15258796	SWITCH-TEST		
	012	001	15237165	LENS-HAZARD LIGHTS		
	013	001	15237163	LENS-LIGHTS		
	014	001	15229156	LENS-TEST SWITCH		
	015	001	15300563	LENS-TRANS CHECK		
	016	001	15229157	PLUG-BLANKING		
	017	001	15237161	SWITCH-COLUMN		
	018	001	15300587	MODULE-WARNING LIGHT		
	019	008	15271204	.BULB & SOCKET-MODULE		
	020	001	15300588	MODULE-WARNING LIGHT		
	021	008	15271204	.BULB & SOCKET-MODULE		
	022	001	15310373	MODULE, WARNING LIGHTS		
	023	008	15271204	.BULB & SOCKET-MODULE		
	024	004	09079062	DIODE-BLOCK		
	025	001	15252388	DIODE		
	026	001	15227360	BUZZER		
	027	004	15256444	RELAY		
	028	001	15244724	FLASHER UNIT		
	029	008	15247615	FUSE-3AMP		
	030	005	15247614	FUSE-5AMP		
	031	006	15247612	FUSE-10AMP		
	032	001	15247611	FUSE-15AMP		
	033	001	15248347	FUSE-25AMP		
	034	001	15256443	SOCKET-HANDLAMP		
	035	001	15257875	SWITCH-DIAGNOSTIC		
	036	001	15257876	SWITCH		
	037	001	15300658	SWITCH-PUSH/TWIST		
	038	001	15257770	KEYSWITCH		
	039	002	15271326	.KEY-IGNITION		
	040	010	15256924	SCREW		

260-0080-8391 SWITCHES AND INSTRUMENTS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	ASR	15265325	BULB-SWITCHES		
	042	ASR	15273771	BULB/HOLDER-GAUGES(2 E		


Perspec Mash - servis

https://truckmanualshub.com/

R1 08/03 (VENDOR CHANGE)

260-0090-8391 SEAT-DRIVER
FROM SERIAL NO. T8391011

DRAWING NO. P9772

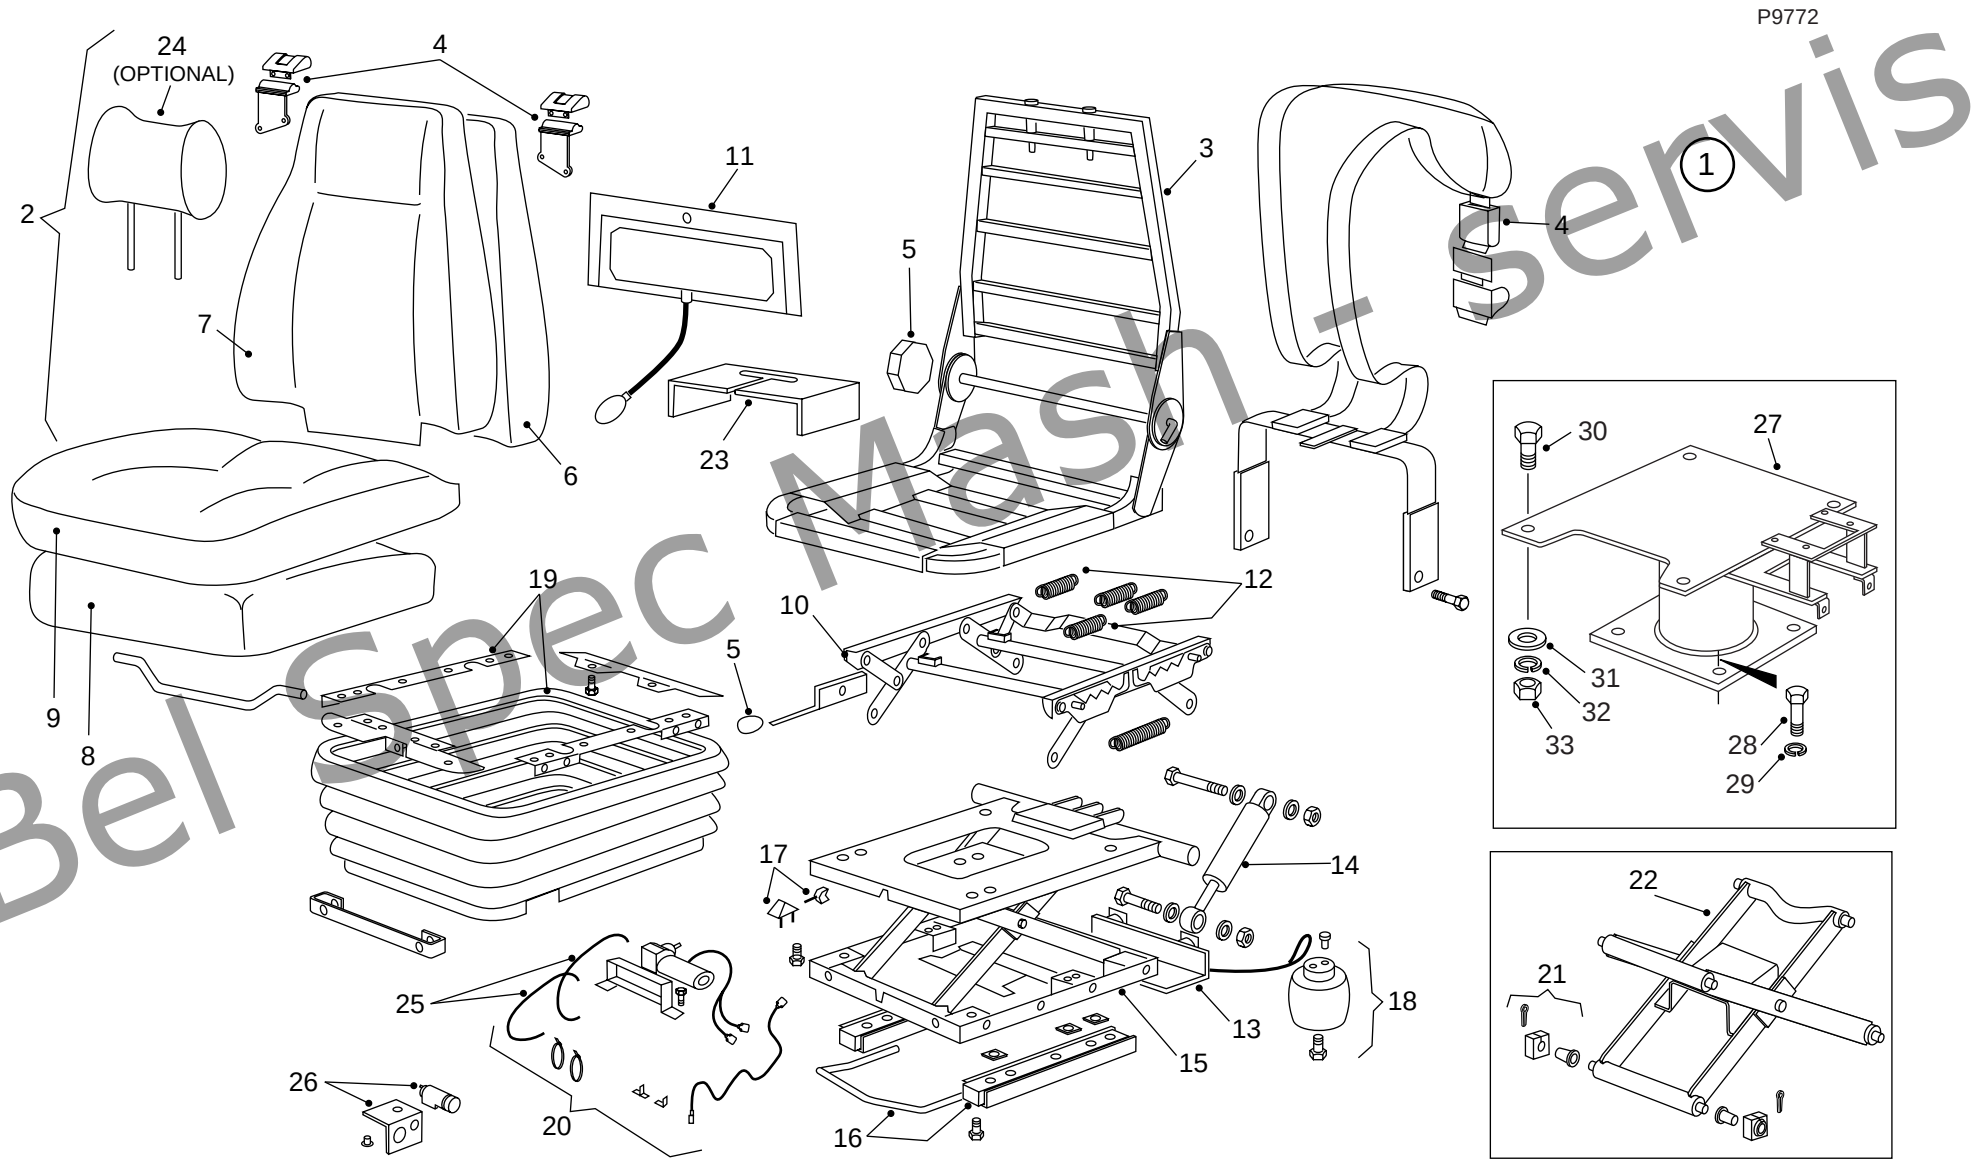

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0090-8391 SEAT-DRIVER
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	15302059	SEAT ASSY-HIGH BACK		
	002	001	15272399	.KIT-UPPER ASSY		
	003	001	15272400	.KIT-FRAME ASSY RH		
	004	001	15272401	.KIT-SEAT BELT		
	005	001	15272402	.KIT-KNOB YELLOW		
	006	001	15272403	.KIT-BACK FOAM		
	007	001	15272404	.KIT-BACK COVER		
	008	001	15272405	.KIT-SEAT FOAM		
	009	001	15272406	.KIT-SEAT COVER		
	010	001	15272407	.KIT-HEIGHT RISER		
	011	001	15272408	.LUMBER SUPPORT		
	012	001	15269020	.KIT-HT RISER SPRING		
	013	001	15269886	.KIT-TETHER		
	014	001	15269022	.KIT-DAMPER		
	015	001	15272409	.KIT-SUSPENSION ASSY		
	016	001	15271797	.KIT-ADJUSTER FORE/AF		
	017	001	15269025	.KIT-UPSTOP/BUMPSTOP		
	018	001	15269026	.KIT-AIR SPRING		
	019	001	15272410	.KIT-SUSPENSION COVER		
B	020	001	15269028	.KIT-24V COMP/VALVE		
	021	001	15269029	.KIT-BEARING		
C	022	001	15269030	.KIT-LEVER/CTR PIVOT		
	023	001	15272411	.KIT-REEL COVER		
	024	001	15272412	.HEADREST		
	025	001	15272413	.KIT-AIR PIPES		
	026	001	15272414	.KIT-VALVE (1XPORT-METAL)		
	026	001	15500823	.KIT-VALVE (2XPORT-PLASTIC)NOV 2001		
	027	001	15301289	PEDESTAL ASSY		
	028	004	06621235	BOLT		
	029	004	07161230	LOCKWASHER		
	030	002	06350830	BOLT		
	030	002	06350825	BOLT		
	031	004	07150815	WASHER		
	032	004	07160830	LOCKWASHER		
	033	004	06430801	NUT		

NOTES:
A ALL KITS HAVE REQUIRED FIXINGS INCLUDED
B EARLIER AIR SEATS MAY HAVE B.D.W. TYPE COMPRESSOR KITS FITTED,FOR REPLACEMENT ORDER 15271518 KIT
C TO SERVICE CENTRE PIVOT BEARING ON SEATS WITH WELDED PIVOT PINS


R1 08/03 (VENDOR CHANGE)

Bel-Spec Mash - servis

https://truckmanualshub.com/

260-0110-8391 SEAT-PASSENGER
FROM SERIAL NO. T8391011

DRAWING NO. P10536

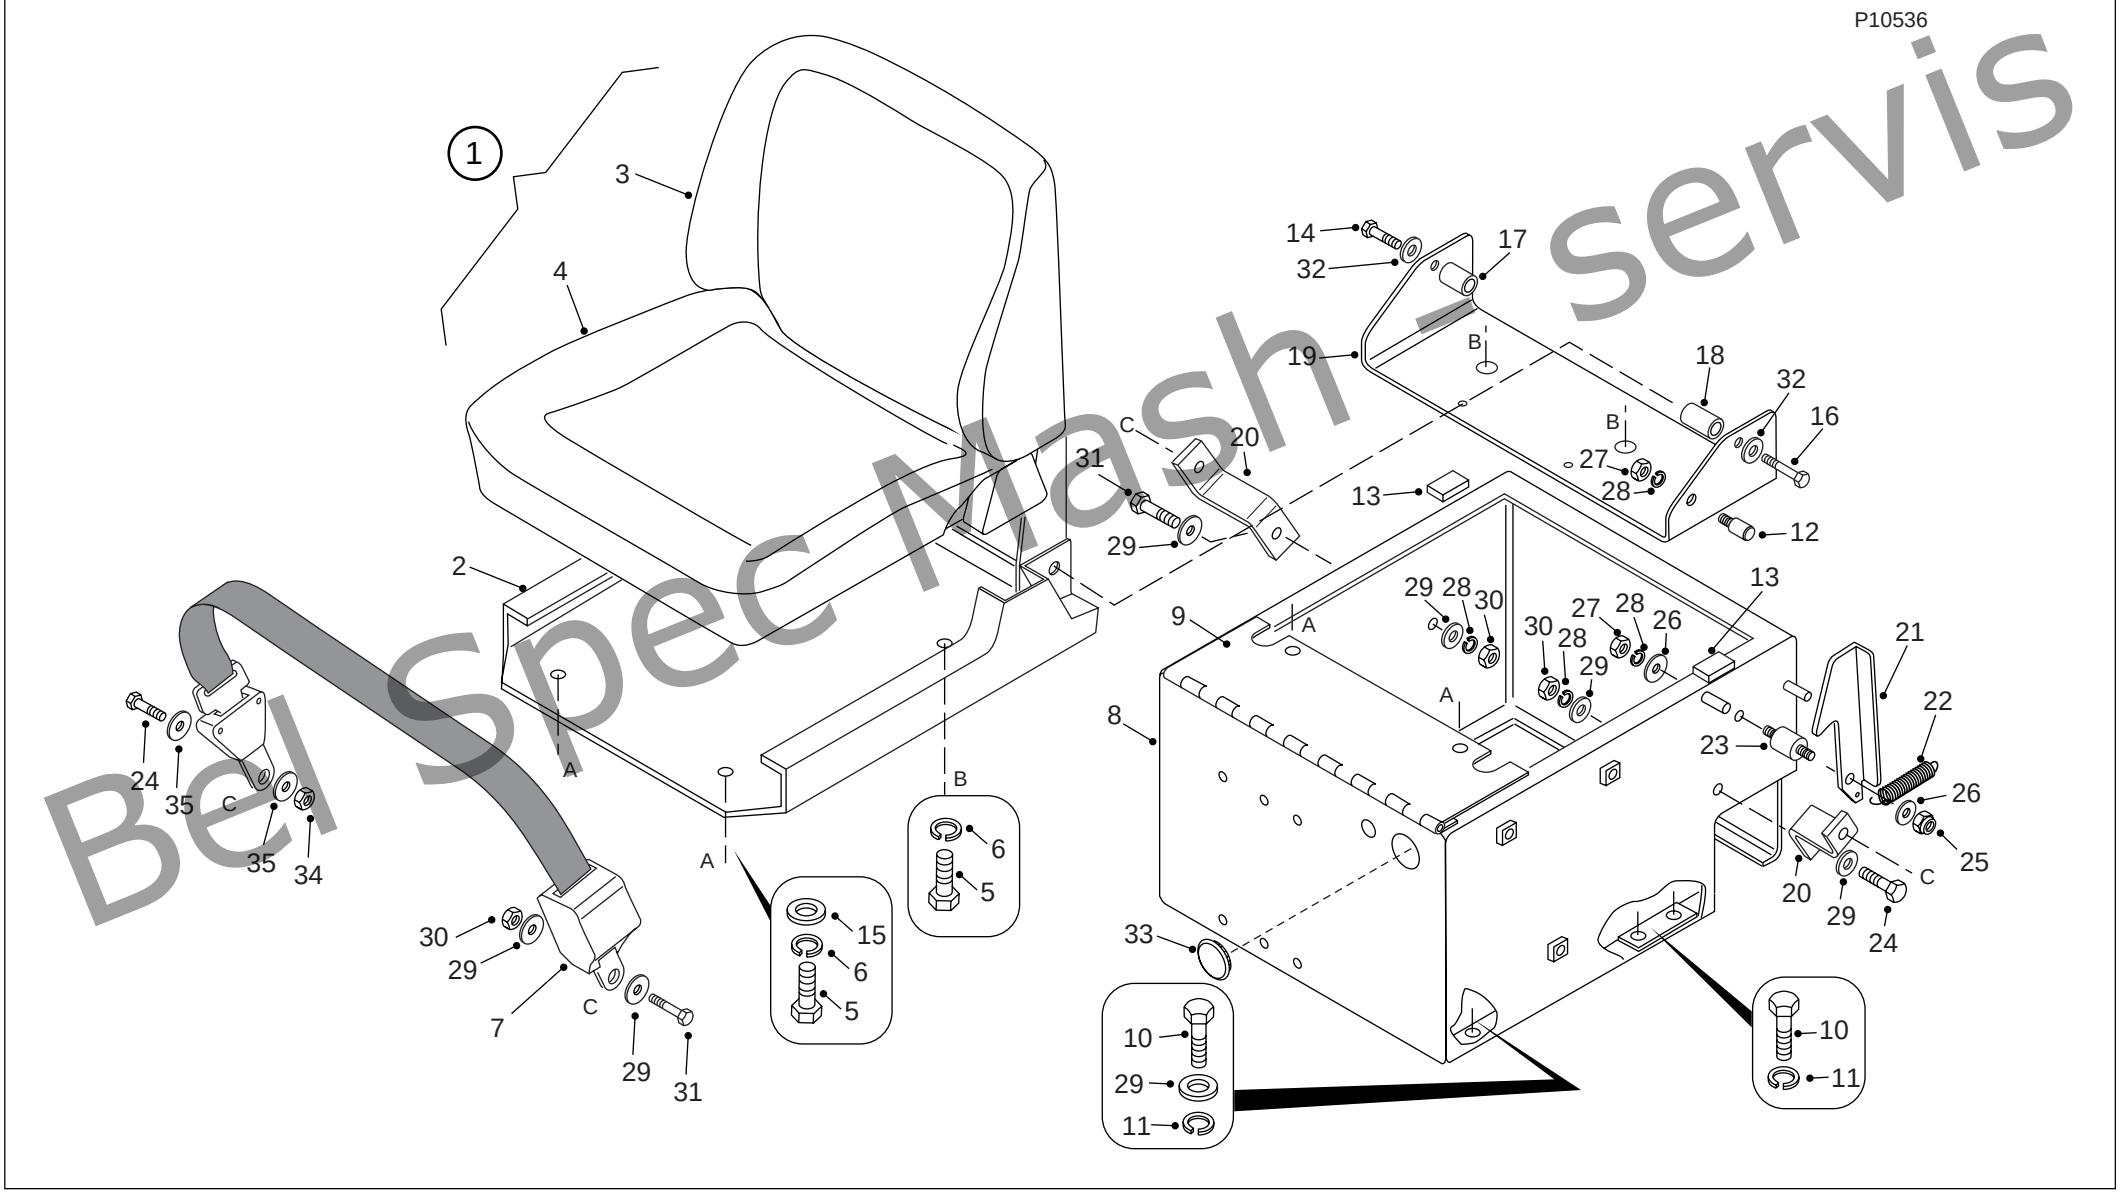

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0110-8391 SEAT-PASSENGER
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15301163	SEAT-PASSENGER		
	002	001	09395446	.FRAME		
	003	001	15271814	.BACK CUSHION		
	004	001	15271813	.CUSHION-SEAT		
	005	004	06350825	.BOLT		
	006	004	07160830	.LOCKWASHER		
	007	001	15245369	LAPBELT		
	008	001	15301110	SEAT BASE		
	009	001	15301109	.HINGE		
	010	006	06351020	BOLT		
	011	006	07161030	LOCKWASHER		
	012	001	09014423	PIN-LATCH		
	013	002	09077822	PAD		
	014	001	00181406	BOLT		
	015	002	00103340	WASHER		
	016	001	00181409	BOLT		
	017	001	15258781	SPACER		
	018	001	15258778	SPACER		
	019	001	15301111	BRACKET-SEAT		
	020	002	15308359	BRACKET - SEAT BELT		
	021	001	09014421	LATCH-SEAT		
	022	001	09014422	SPRING		
	023	001	09014420	PIN-PIVOT		
	024	001	06351230	BOLT		
	025	001	00274209	LOCKNUT		
	026	002	09068666	WASHER-HARDENED		
	027	002	00120378	NUT		
	028	002	00103329	LOCKWASHER		
	029	006	07151020	WASHER		
	030	003	06471001	LOCKNUT		
	031	003	06351030	BOLT		
	032	002	00103343	WASHER		
	033	001	09373557	BUTTON PLUG		
	034	001	06471201	LOCKNUT		
	035	002	07151220	WASHER		


BelSpec Mash - servis

https://truckmanualshub.com/

R1 04/03 (SER CORR)

260-0130-8391 AIR CONDITIONER/HEATER
FROM SERIAL NO. T8391011 TO T8391084

DRAWING NO. P11240A

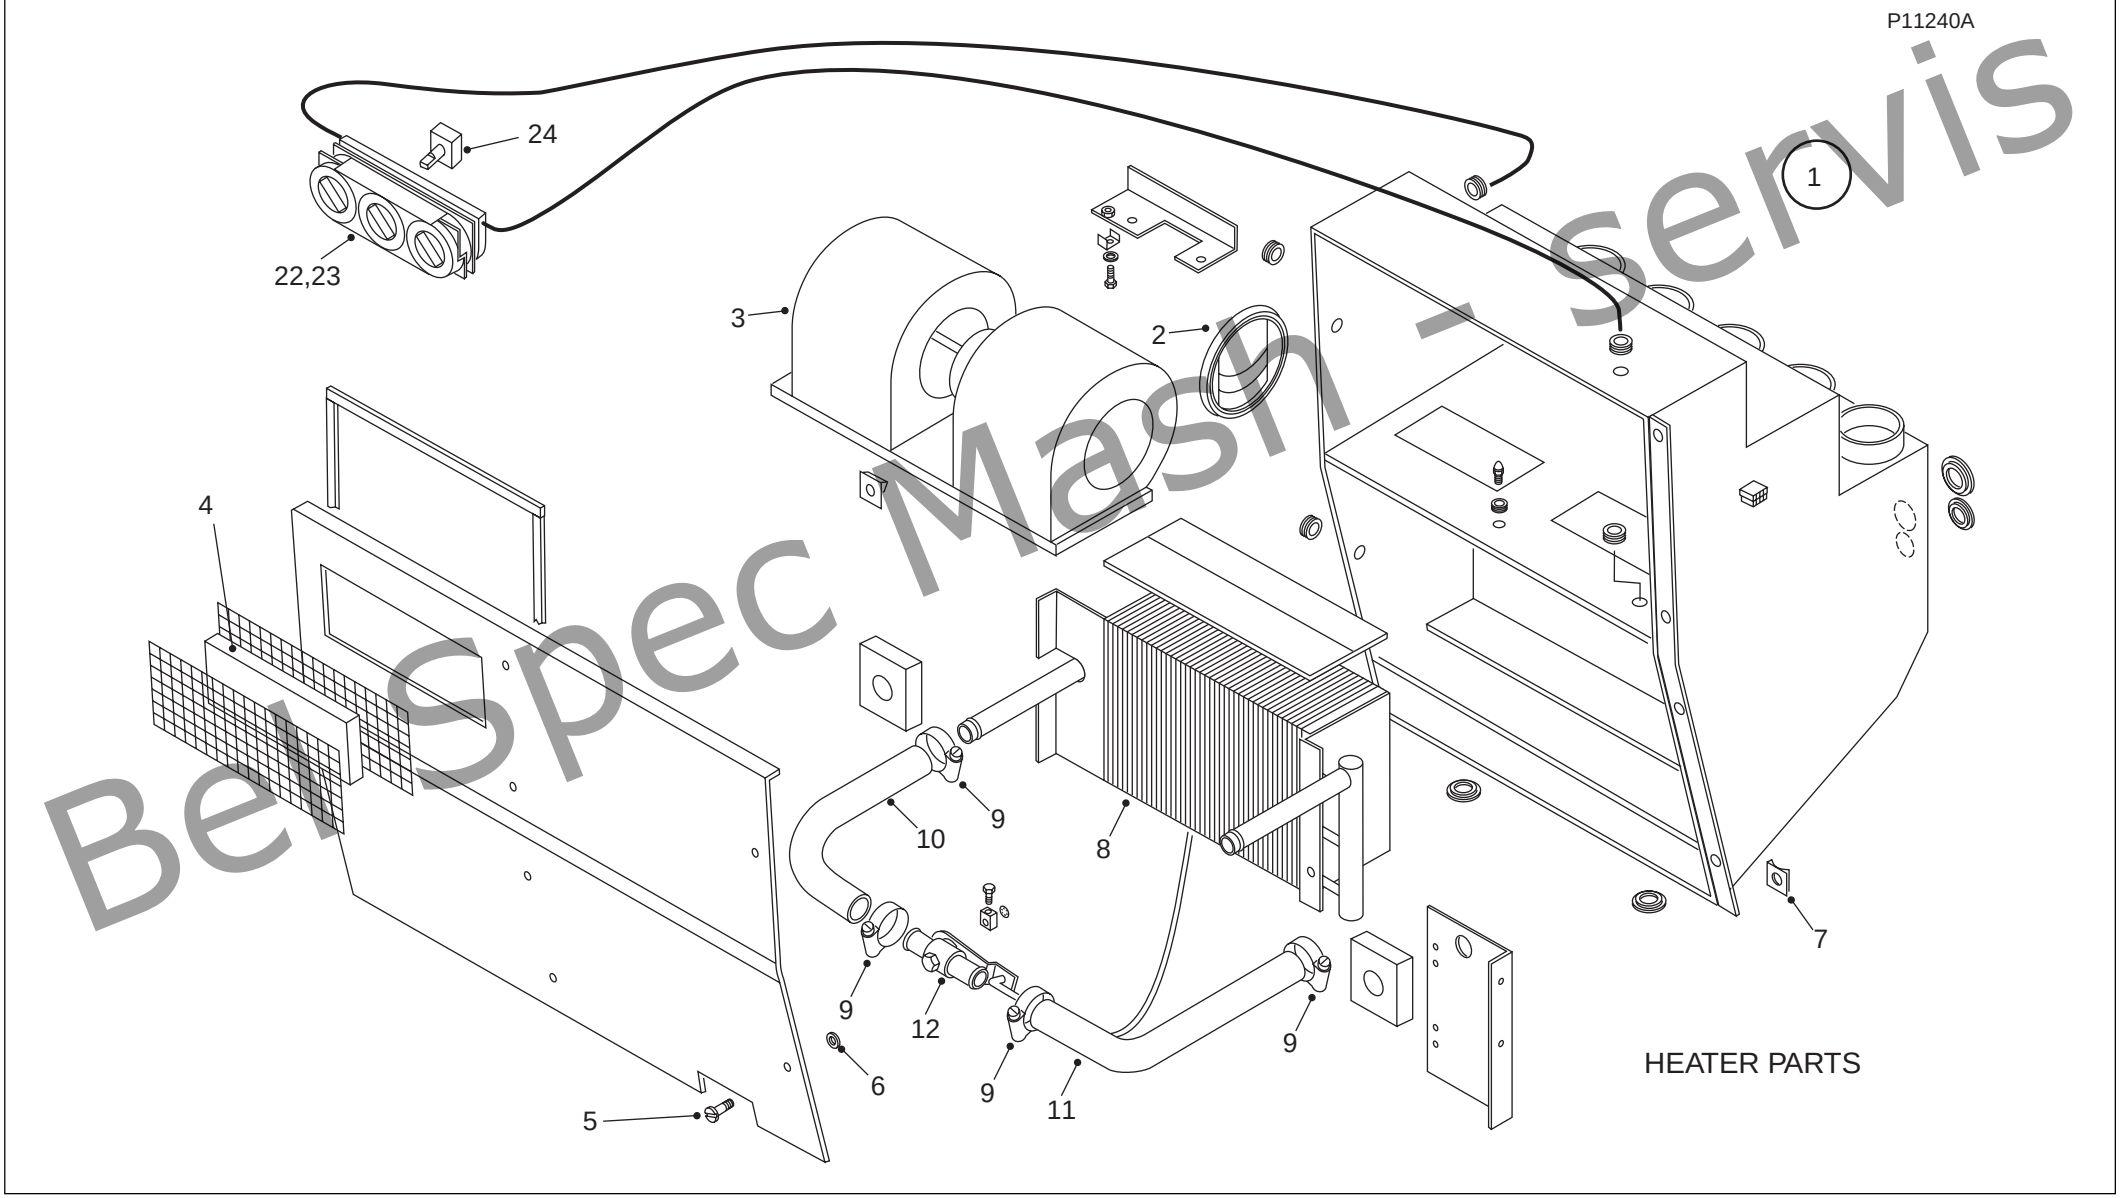


BelSpec Mash - servis

https://truckmanualshub.com/

260-0130-8391 AIR CONDITIONER/HEATER
FROM SERIAL NO. T8391011 TO T8391084

DRAWING NO. P11240B

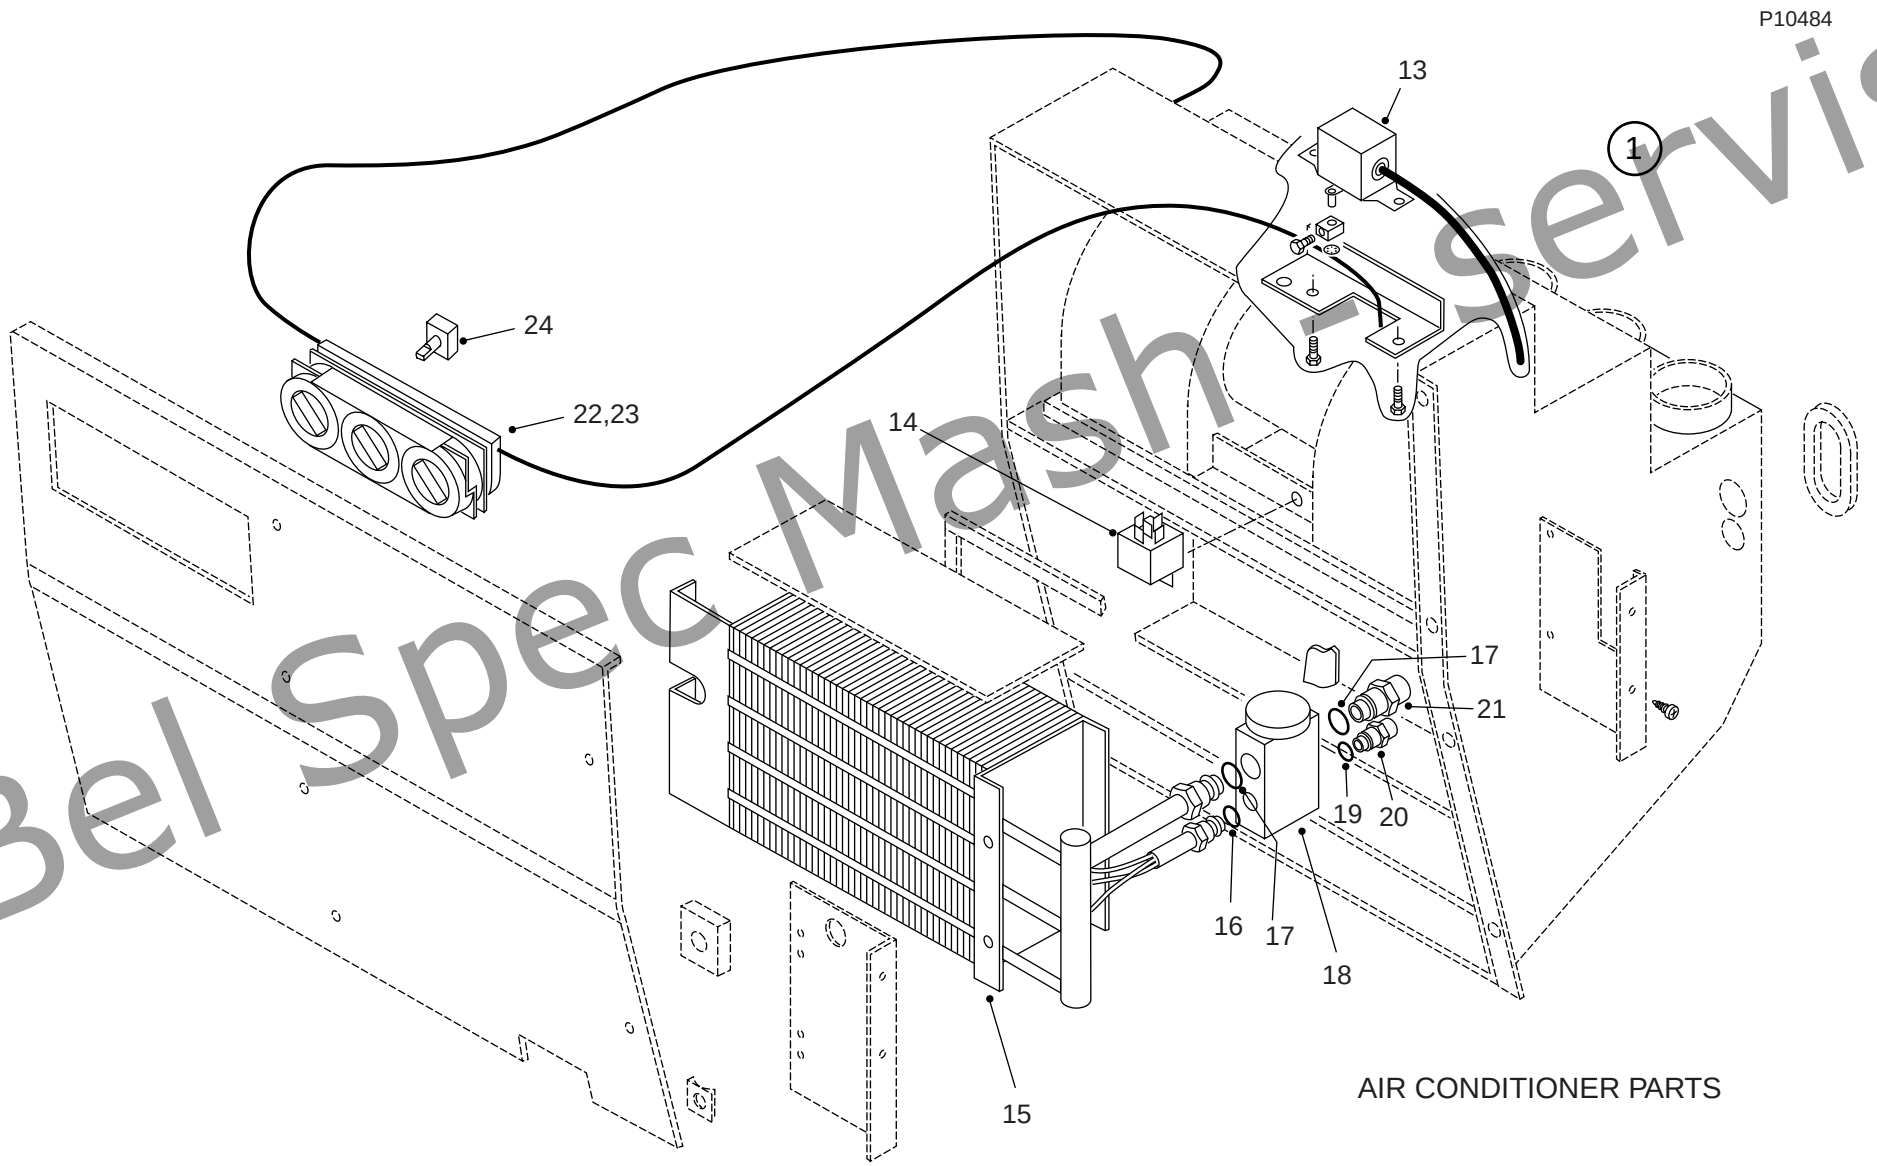


Bel Spec Mash - servis

https://truckmanualshub.com/

260-0130-8391 AIR CONDITIONER/HEATER
FROM SERIAL NO. T8391011 TO T8391084

DRAWING NO. P11240C

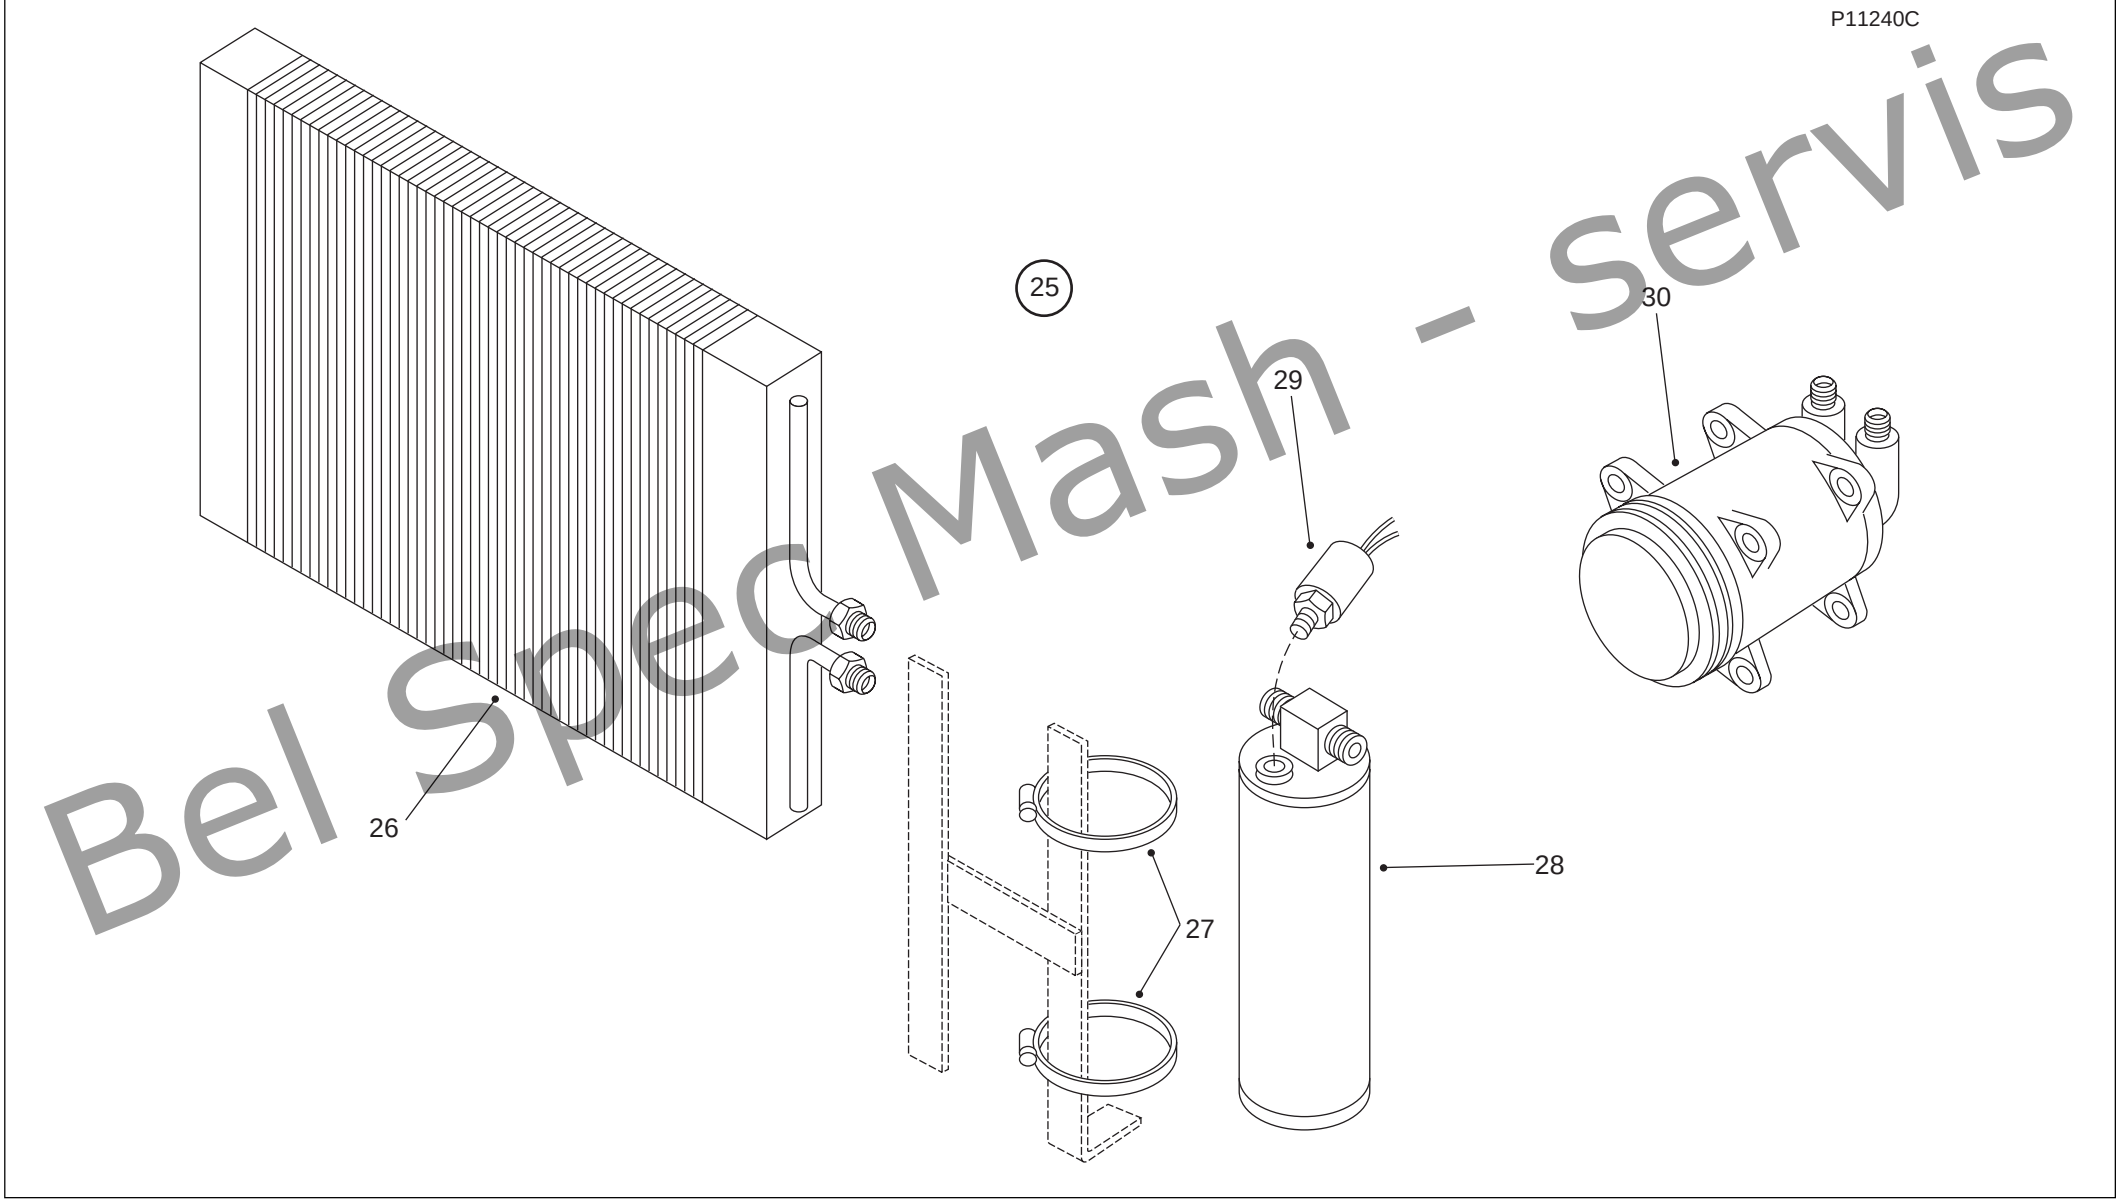

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0130-8391 AIR CONDITIONER/HEATER
FROM SERIAL NO. T8391011 TO T8391084

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	15274276	HEATER & A/CON UNIT		
	002	001	15269904	.VENT		
	003	001	15272214	.BLOWER UNIT		
	004	001	15272215	.FILTER ELEMENT-AIR		
	005	006	15272217	.STUD		
	006	006	15272218	.RETAINER		
	007	004	15272219	.RECEPTACLE		
	008	001	15272220	.MATRIX-HEATER		
	009	004	15273063	.CLIP-HOSE		
	010	001	15272221	.ELBOW		
	011	001	15272222	.ELBOW		
	012	001	15274277	.VALVE-WATER		
	013	001	15272300	.THERMOSTAT		
	014	001	15272302	.RELAY		
	015	001	15272303	.EVAPORATOR MATRIX		
	016	001	15271344	.O RING		
	017	002	15271334	.O RING		
	018	001	15270348	.VALVE-EXPANSION		
	019	001	15271338	.O RING		
	020	001	15272304	.ADAPTOR		
	021	001	15272305	.ADAPTOR		
A	022	001	15272213	CONTROL UNIT		
	023	001	15273044	.KIT-CONTROL KNOBS		
	024	001	15273043	.SWITCH-BLOWER		
	025	001	15304924	AIR CONDITIONING KIT		
	026	001	15270360	.CONDENSER		
	027	002	15270374	.CLIP		
	028	001	15270361	.RECEIVER		
	029	001	15270363	.SWITCH-TRINERY		
	030	001	15270358	.COMPRESSOR-134A		

NOTES:
A ,,PART OF CAB ASSEMBLY

BerSpec Mash - servis


https://truckmanualshub.com/

01/04 (ECN 106410)

260-0130-8391 AIR CONDITIONER/HEATER
FROM SERIAL NO. T8391085

DRAWING NO. P11418A

P11418

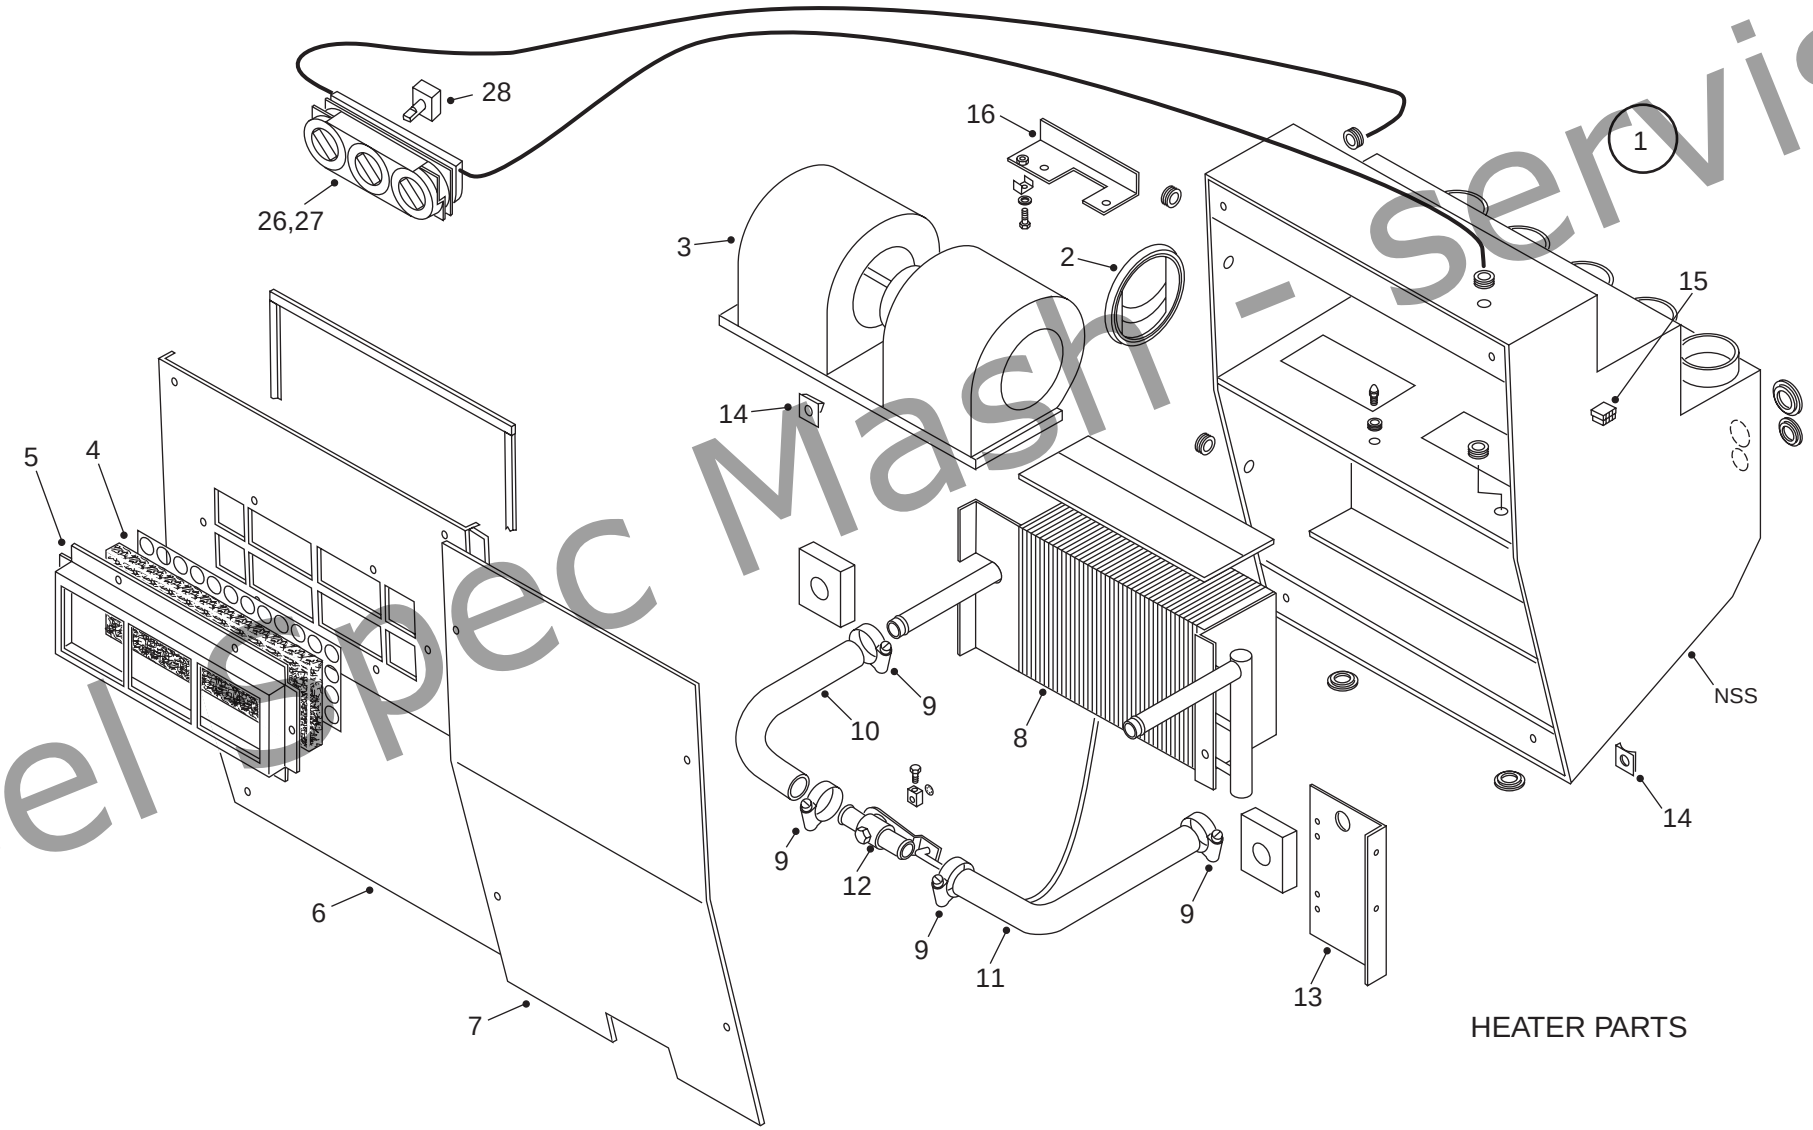


HEATER PARTS

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0130-8391 AIR CONDITIONER/HEATER
FROM SERIAL NO. T8391085

DRAWING NO. P11418B

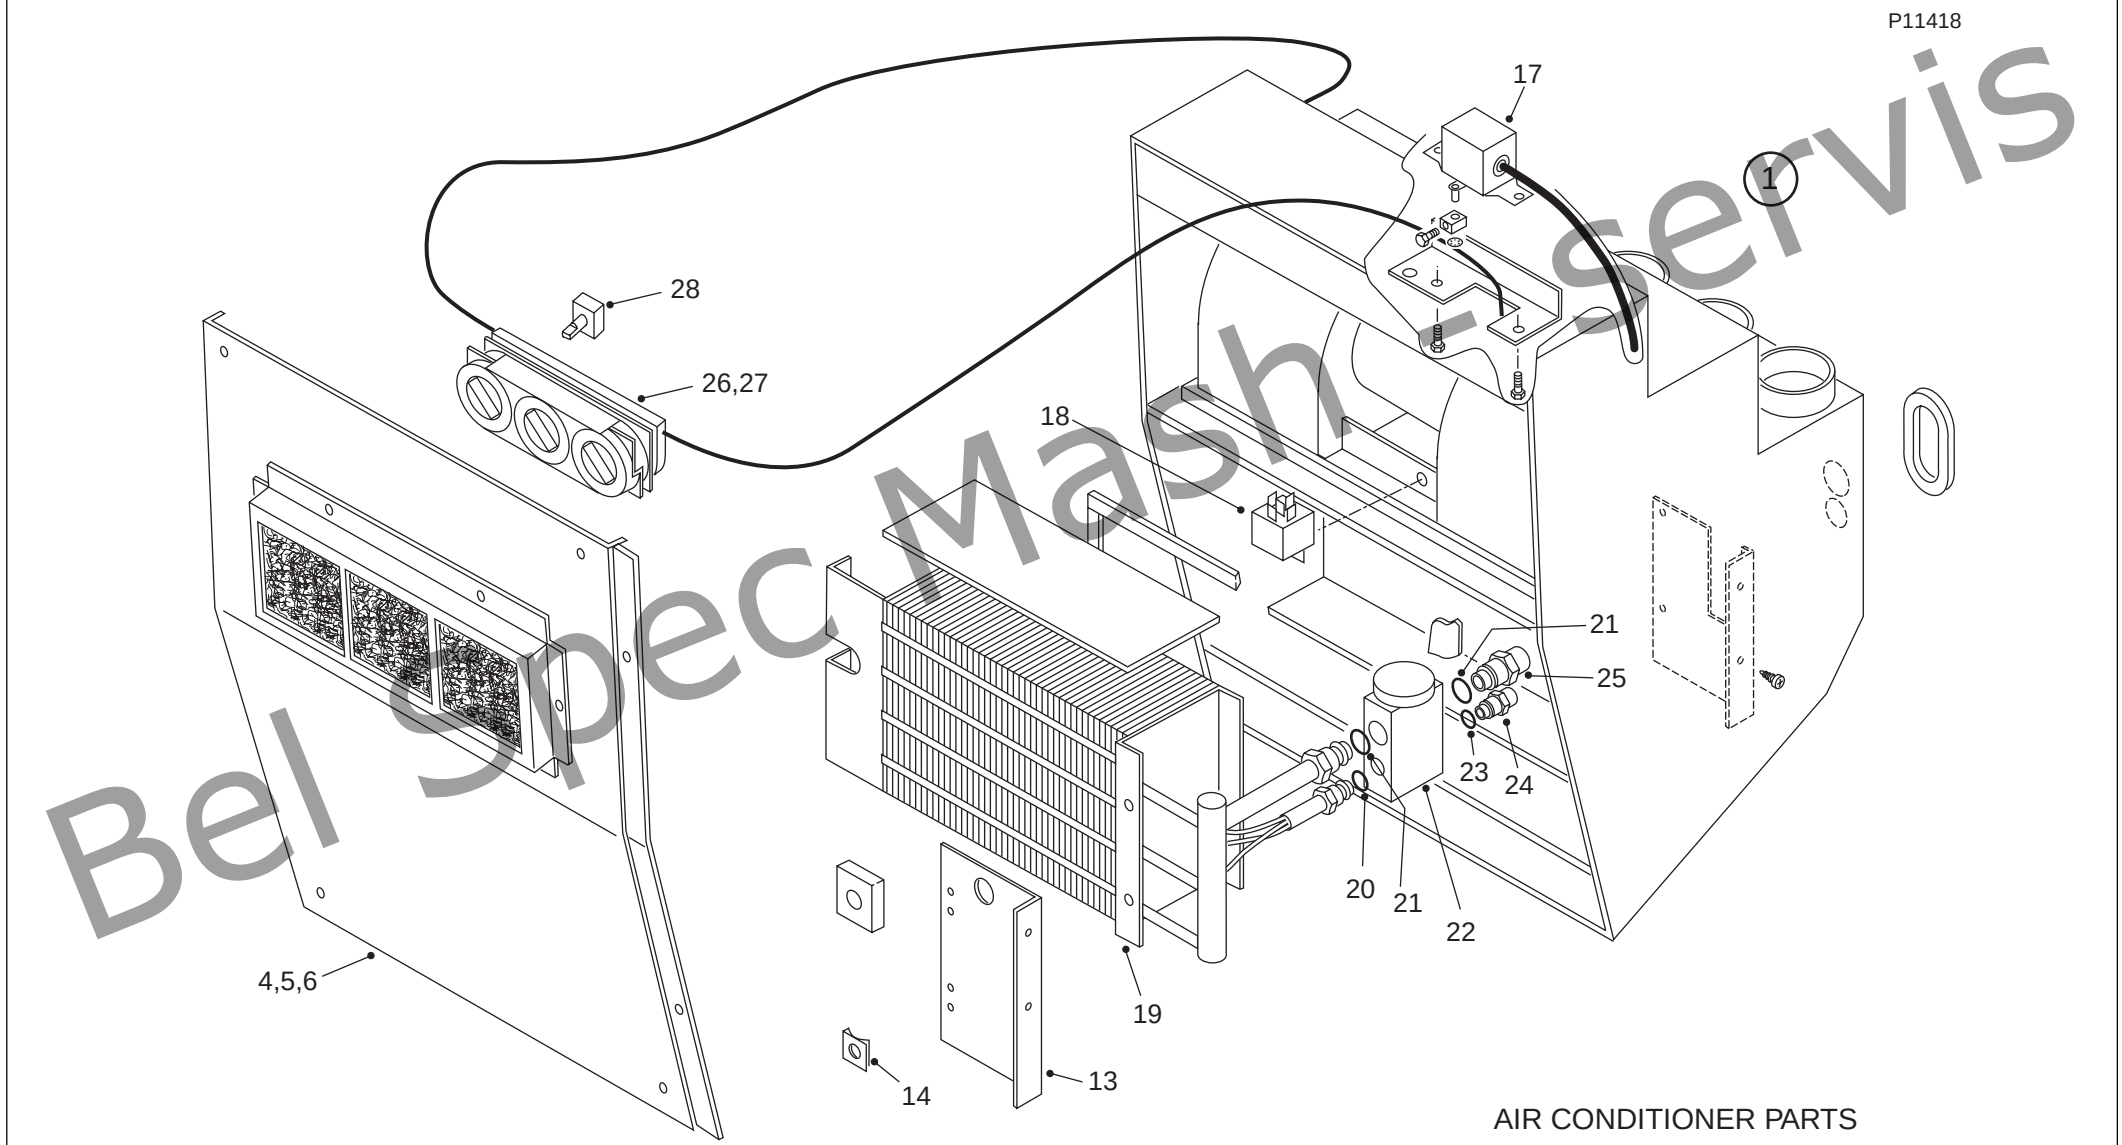


Bel Spec Mash - servis

https://truckmanualshub.com/

260-0130-8391 AIR CONDITIONER/HEATER
FROM SERIAL NO. T8391085

DRAWING NO. P11418C

P11418

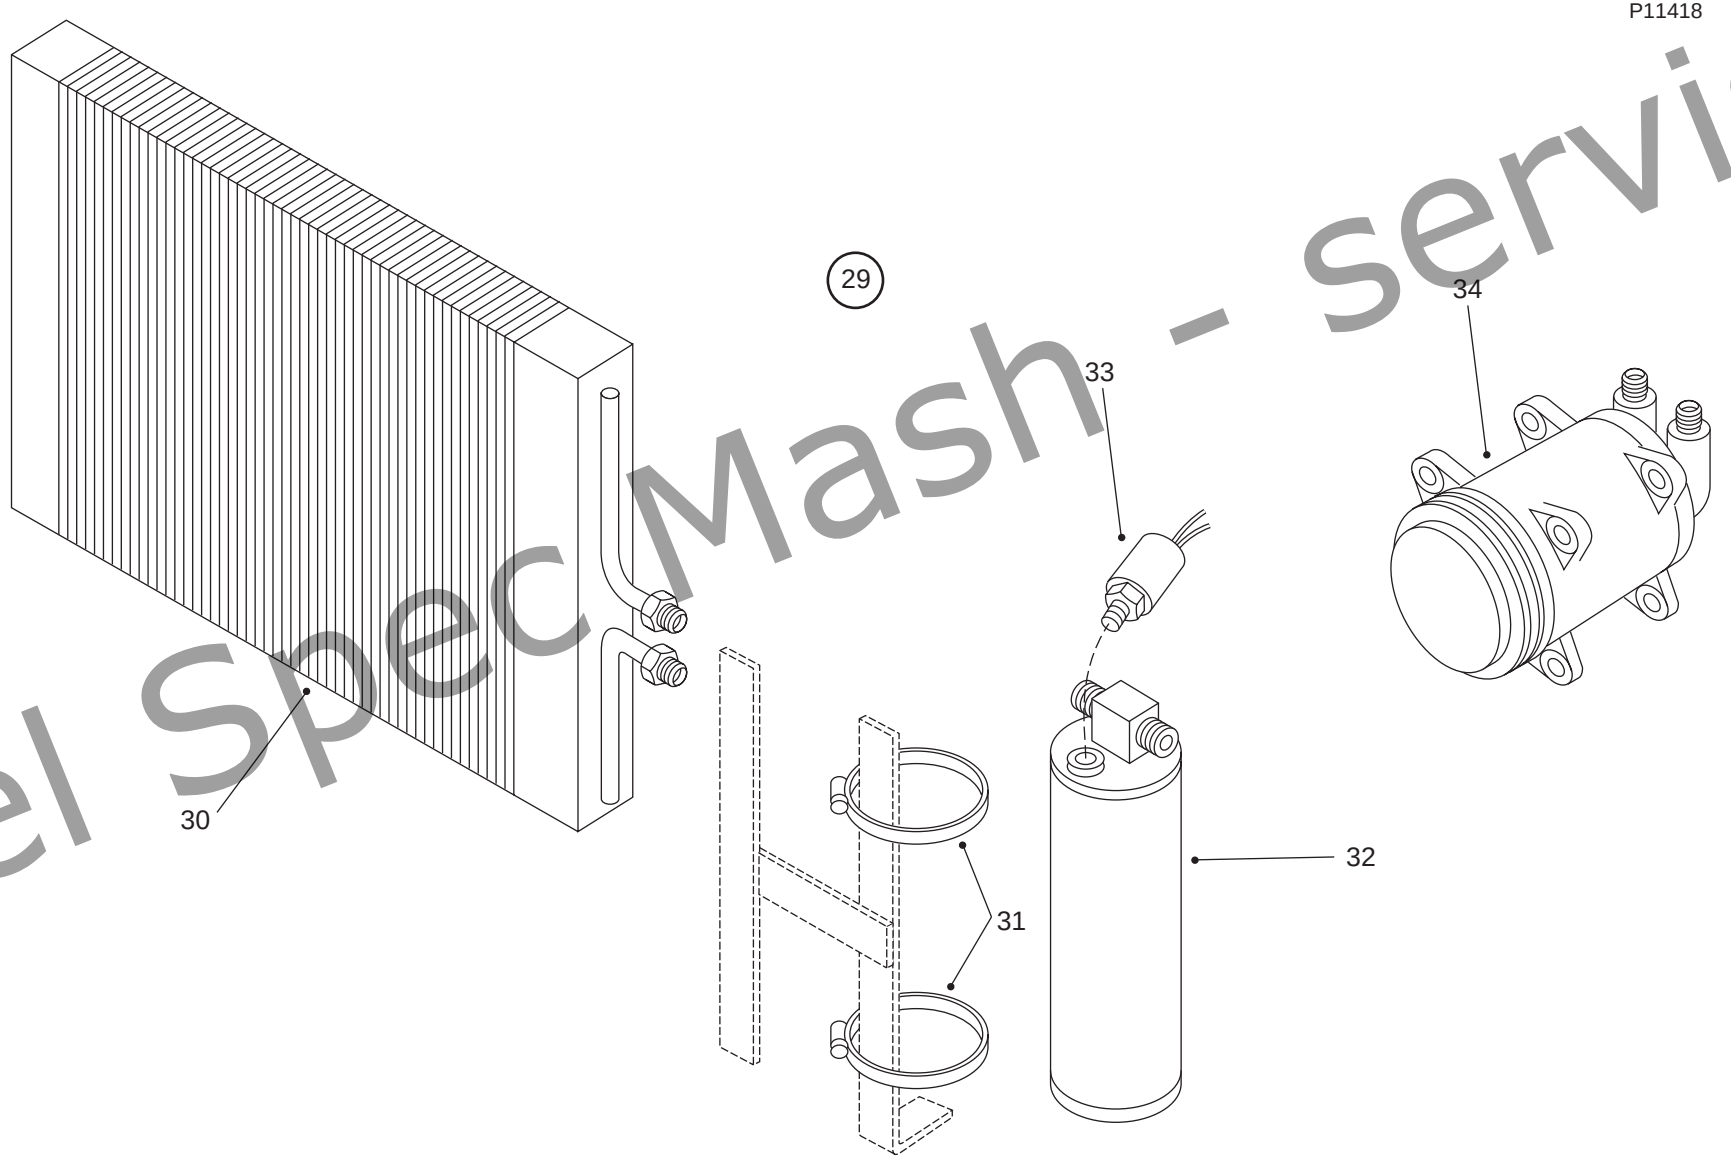

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0130-8391 AIR CONDITIONER/HEATER
FROM SERIAL NO. T8391085

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	15501102	HEATER & A/COND UNIT		
	002	001	15269904	.VENT		
	003	001	15272214	.BLOWER UNIT		
	004	001	15501105	.ELEMENT-AIR FILTER		
	005	001	15501106	.SUPPORT FRAME-FILTER		
	006	001	15501107	.COVER ASSY-LH		
	007	001	15501108	.COVER ASSY-RH		
	008	001	15272220	.MATRIX-HEATER		
	009	004	15273063	.CLIP-HOSE		
	010	001	15272221	.ELBOW		
	011	001	15272222	.ELBOW		
	012	001	15274277	.VALVE-WATER		
	013	001	15501109	.BRACKET-MATRIX		
	014	004	15272219	.RECEPTACLE		
	015	001	15501104	.HARNESS ASSY		
	016	001	15501110	.BRACKET-THERMOSTAT		
	017	001	15272300	.THERMOSTAT		
	018	001	15272302	.RELAY		
	019	001	15272303	.EVAPORATOR MATRIX		
	020	001	15271344	.O RING		
	021	002	15271334	.O RING		
	022	001	15270348	.VALVE-EXPANSION		
	023	001	15271338	.O RING		
	024	001	15272304	.ADAPTOR		
	025	001	15272305	.ADAPTOR		
A	026	001	15272213	CONTROL UNIT		
	027	001	15273044	.KIT-CONTROL KNOBS		
	028	001	15273043	.SWITCH-BLOWER		
	029	001	15304924	AIR CONDITIONING KIT		
	030	001	15270360	.CONDENSER		
	031	002	15270374	.CLIP		
	032	001	15270361	.RECEIVER		
	033	001	15270363	.SWITCH-TRINERY		
	034	001	15270358	.COMPRESSOR-134A		


NOTES:
A ,,PART OF CAB ASSEMBLY

Perspec Mash - servis

https://truckmanualshub.com/

260-0140-8391 HEATER LINES AND WIRING
FROM SERIAL NO. T8391011

DRAWING NO. P10576

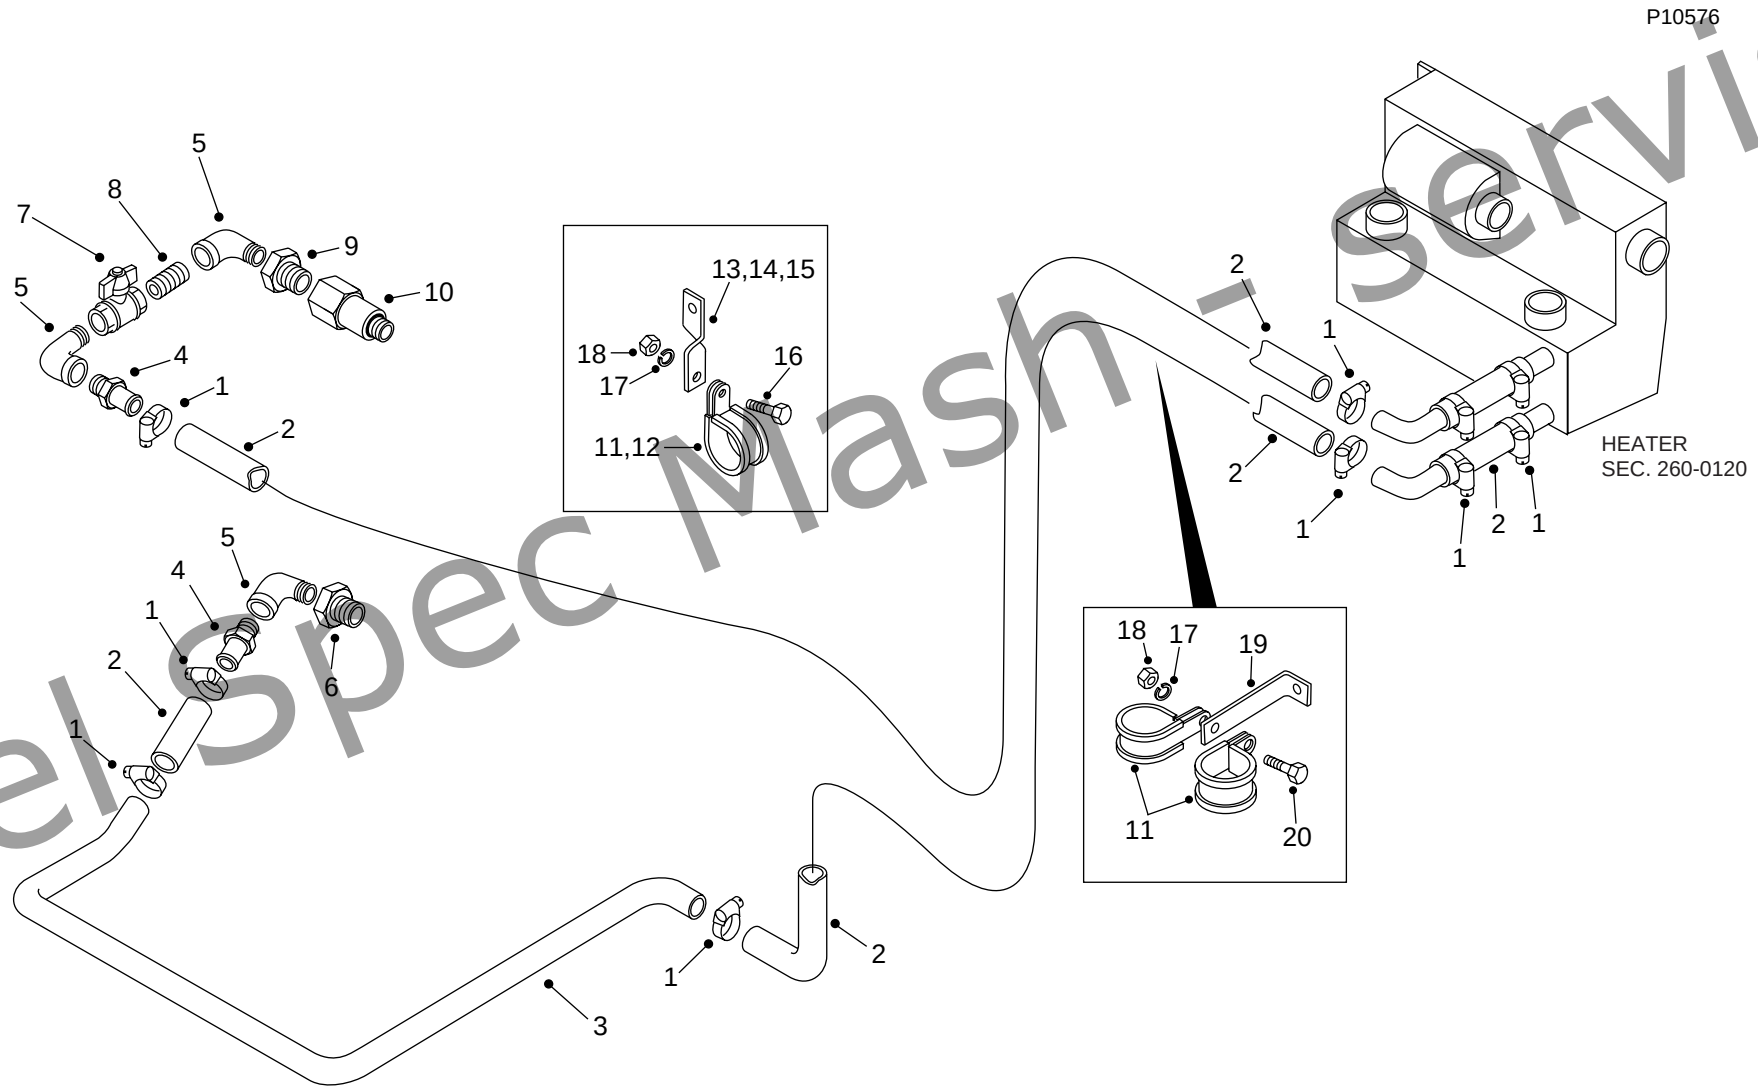

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0140-8391 HEATER LINES AND WIRING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	006	09379664	CLAMP		
	002	ASR	07551826	HOSE-BULK		
	003	001	15226843	TUBE		
	004	002	09014950	CONNECTOR		
	005	002	00108686	ELBOW		
	006	001	09003299	ADAPTOR		
	007	001	15230961	VALVE-BALL SHUT-OFF		
	008	001	09136638	NIPPLE		
	009	001	15257525	ADAPTOR		
	010	001	15253229	ADAPTOR		
	011	002	09181284	CLIP-RUBBERIZED		
	012	004	09131865	CLIP		
	013	004	09114833	BRACKET-TWISTED		
	014	001	09104771	BRACKET		
	015	001	09362607	BRACKET		
	016	004	00179837	BOLT		
	017	005	00108580	LOCKWASHER		
	018	006	00102635	NUT		
	019	001	09251501	BRACKET		
	020	001	00179839	BOLT		


Bel Spec Mash - servis

https://truckmanualshub.com/

260-0145-8391 AIR CONDITIONER LINES

FROM SERIAL NO. T8391011

DRAWING NO. P10986

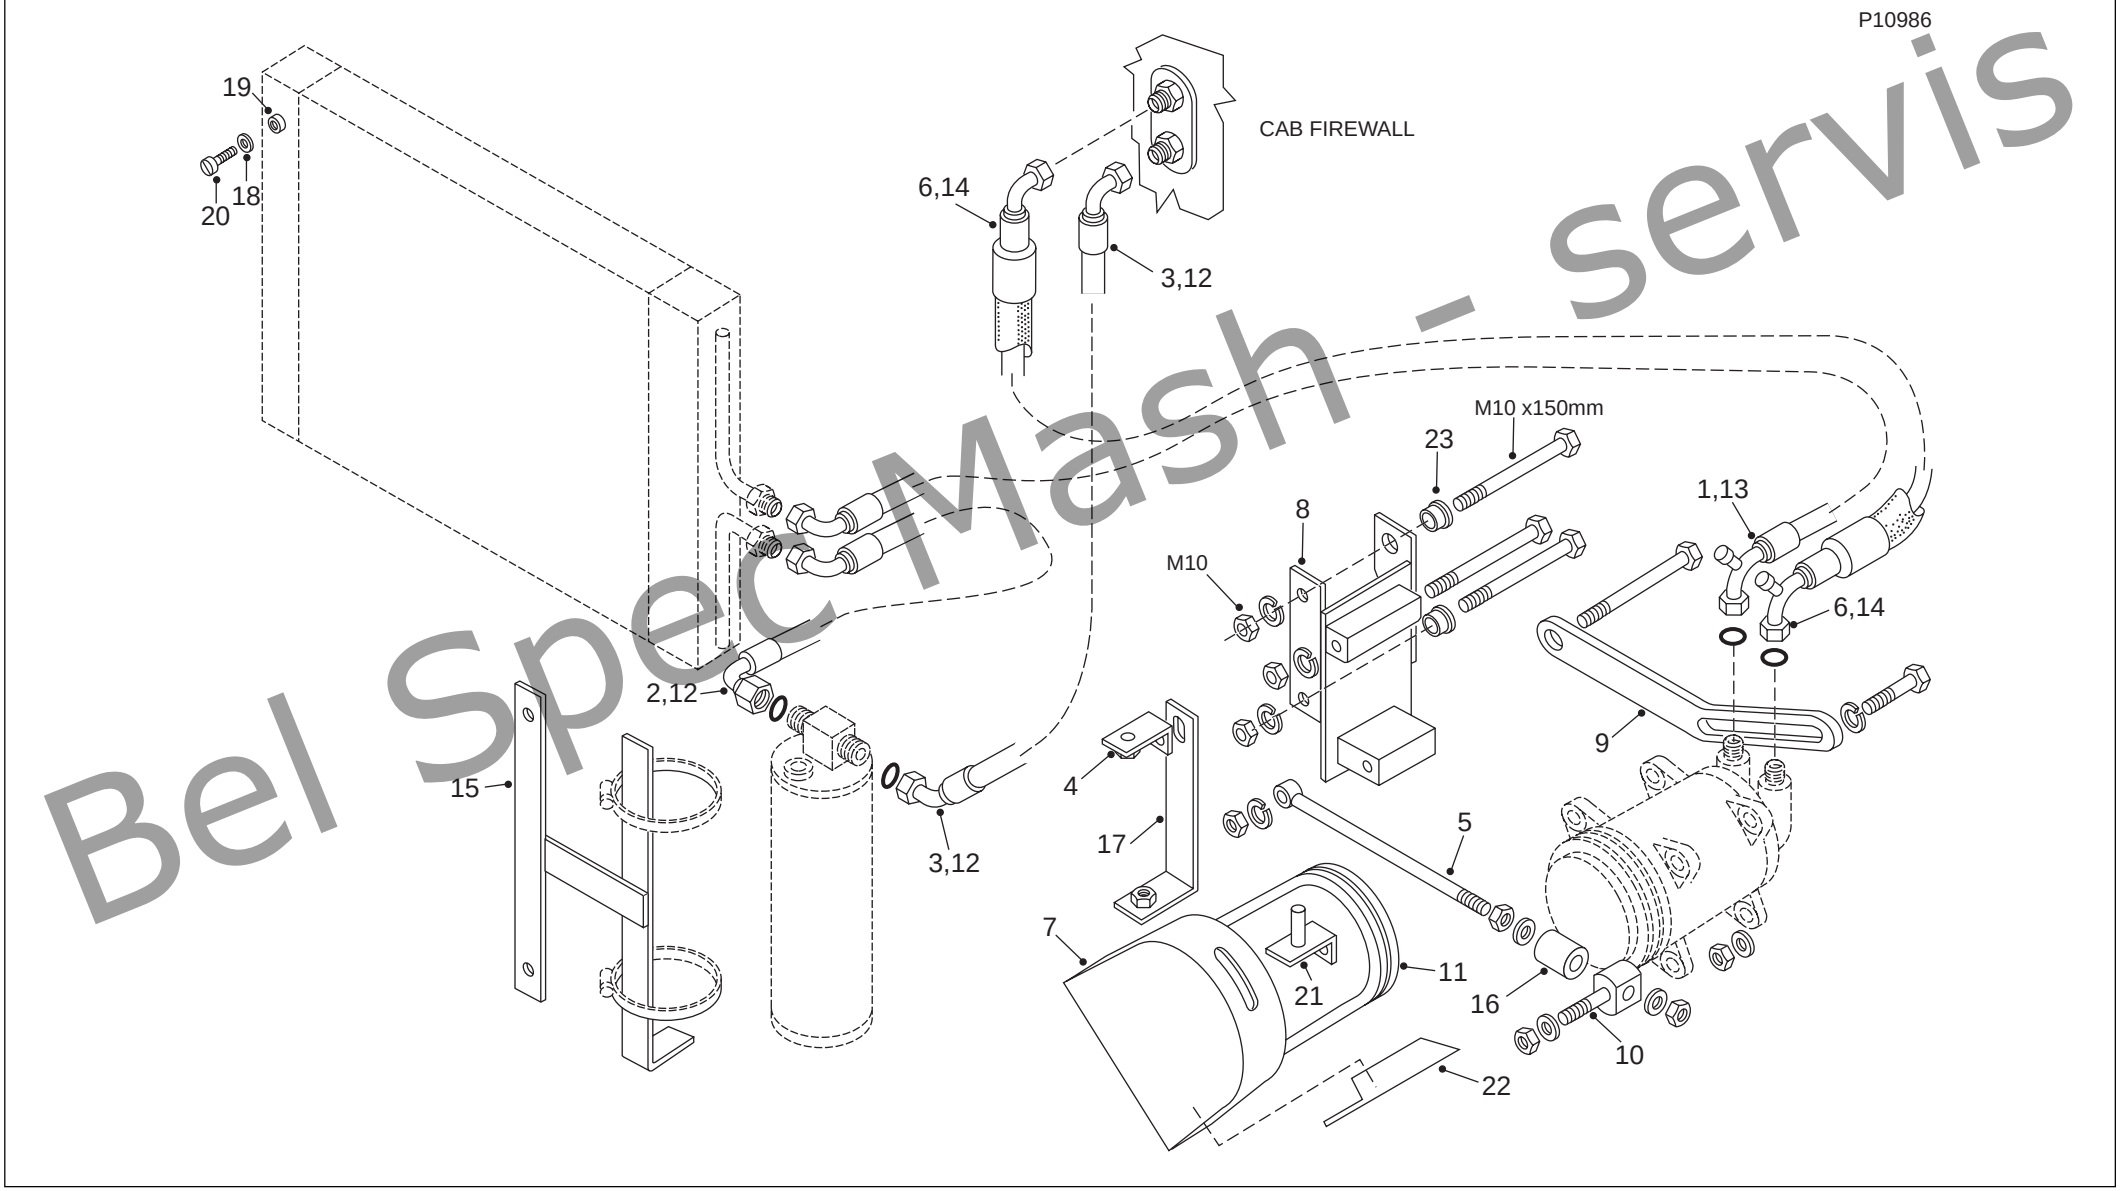

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0145-8391 AIR CONDITIONER LINES
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	000	001	15314440	AIR CONDITIONING KIT		
	001	001	15275768	.HOSE ASSY		
	002	001	15275769	.HOSE ASSY		
	003	001	15275770	.HOSE ASSY		
	004	001	15313861	.BRKT ASSY		
	005	001	15270378	.BOLT		
	006	001	15270356	.HOSE ASSY		
	007	001	15313863	.GUARD-(BELT AIR/CON)		
	008	001	15313090	.BRACKET-COMP MTG		
	009	001	15270379	.ARM-COMP. SUPPORT		
	010	001	15271443	.PIVOT		
	011	002	15271450	.BELT-DRIVE		
	012	005	15271338	.O RING		
	013	002	15271344	.O RING		
	014	003	15271334	.O RING		
	015	001	15270369	.BRACKET		
	016	001	15271140	.SPACER		
	017	001	15313862	.BRACKET ASSY		
	018	004	07150615	.LOCKWASHER		
	019	004	15270375	.NUT		
	020	004	06350616	.BOLT		
	021	001	15271457	.BRACKET-BELT GUARD		
	022	001	15271455	.GUARD-BELT COVER		
	023	002	15271454	.BUSH-SLIDING		


Bel Spec Mash - servis

https://truckmanualshub.com/

260-0190-8391 WINDSCREEN WASHER
FROM SERIAL NO. T8391011

DRAWING NO. P9479

P9479

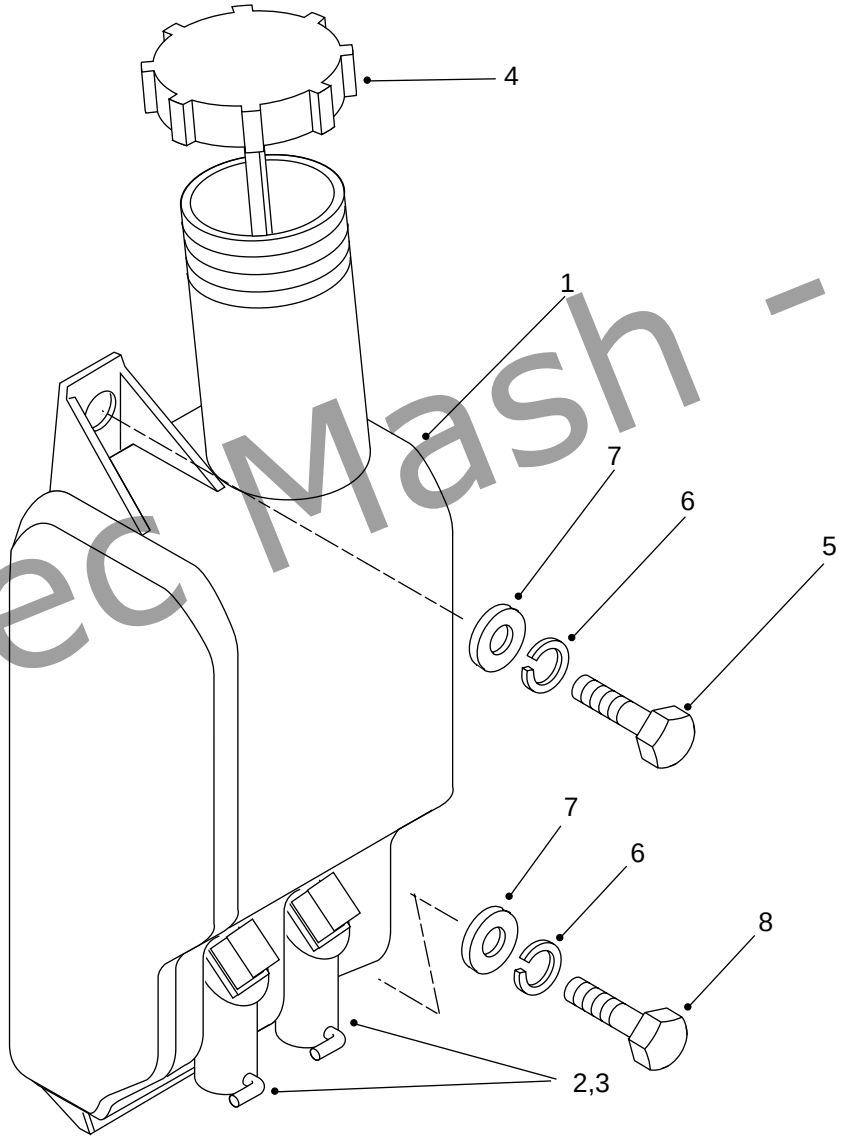

Bel Spec Mash - servis

https://truckmanualshub.com/

260-0190-8391 WINDSCREEN WASHER
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15256431	KIT-WASHER BOTTLE		
	002	002	15271481	.PUMP-24V		
	003	002	15271482	.RING SEAL		
	004	001	15271804	.CAP-WASHERBOTTLE		
	005	001	06350825	BOLT		
	006	003	07160830	LOCKWASHER		
	007	003	07150815	WASHER		
	008	002	06350820	SCREW		


Bel Spec Mash - servis

https://truckmanualshub.com/

R1 09/02 (ECN 104874)

270-0010-8391 BODY ASSEMBLY
FROM SERIAL NO. T8391011

DRAWING NO. P10787

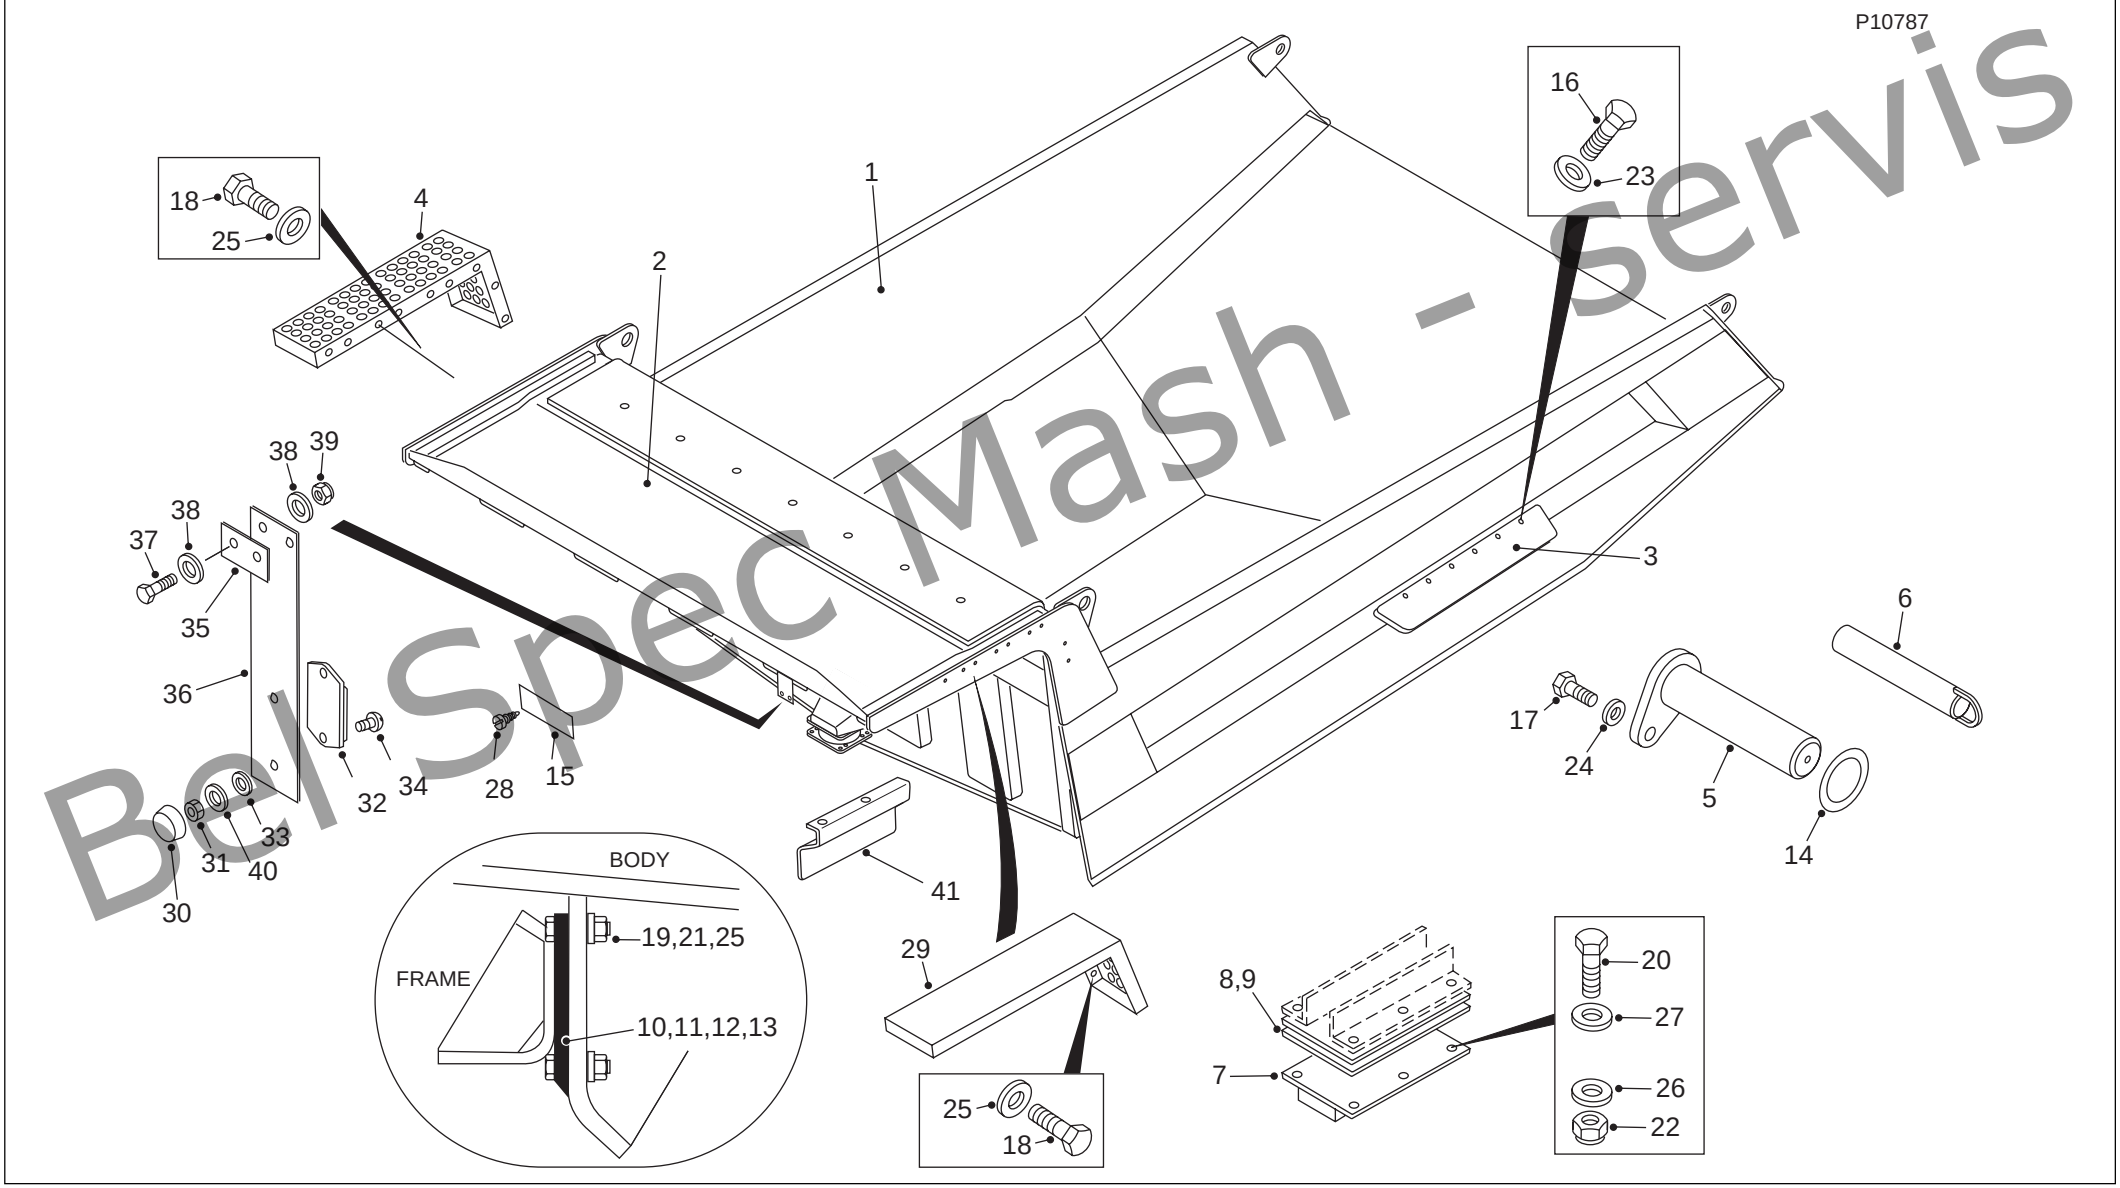

BelSpec Mash - servis

https://truckmanualshub.com/

270-0010-8391 BODY ASSEMBLY
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312726	BODY ASSEMBLY		
	002	001	15300174	.CABGUARD ASSY		
	003	002	15310842	SHED PLATE		
A	004	001	09257553	GUARD-RH		
	005	002	15249710	PIN-BODY HINGE		
	006	002	15258062	PIN ASSEMBLY		
	007	008	15301849	PAD-BODY		
	008	ASR	15251929	SHIM-10 S.W.G.		
	009	ASR	15251930	SHIM-18 S.W.G.		
	010	ASR	15302582	SHIM-BODY GUIDE 6MM		
	011	ASR	15302581	SHIM-BODY GUIDE 8MM		
	012	ASR	15302580	SHIM-BODY GUIDE 10.0		
	013	ASR	15302579	SHIM-BODY GUIDE 12.5		
	014	ASR	15251001	SHIM		
	015	001	15250090	DECAL-ROPS/FOPS		
	016	012	00271609	BOLT		
	017	002	00271607	BOLT		
	018	009	00271558	BOLT		
	019	008	00223436	BOLT		
	020	048	00179843	BOLT		
	021	008	09411566	NUT		
	022	048	00274208	LOCKNUT		
	023	012	09263889	WASHER		
	024	002	09176228	WASHER-HARDENED		
	025	017	09191596	WASHER		
	026	048	09060202	WASHER-HARDENED		
	027	048	00106263	WASHER		
	028	004	00145378	SCREW		
	029	001	09061852	GUARD ASSY-LH		
	030	002	15234728	CAP		
	031	002	00110633	NUT		
	032	001	15309615	REFLECTOR		
	033	002	00103338	WASHER		
	034	002	00110501	SCREW		
	035	001	15301424	PLATE		
	036	001	15301423	RUBBER STRIP		
	037	002	00179843	BOLT		
	038	004	00106263	WASHER		
	039	002	00274208	LOCKNUT		
	040	002	15234727	WASHER		

270-0010-8391 BODY ASSEMBLY
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	041	001	15304099	HEATSHEILD		


NOTE:
A OPTIONAL EQUIPMENT

BelSpec Mash - servis

https://truckmanualshub.com/

270-0020-8391 EXHAUST HEATED BODY
FROM SERIAL NO. T8391011

DRAWING NO. P10785

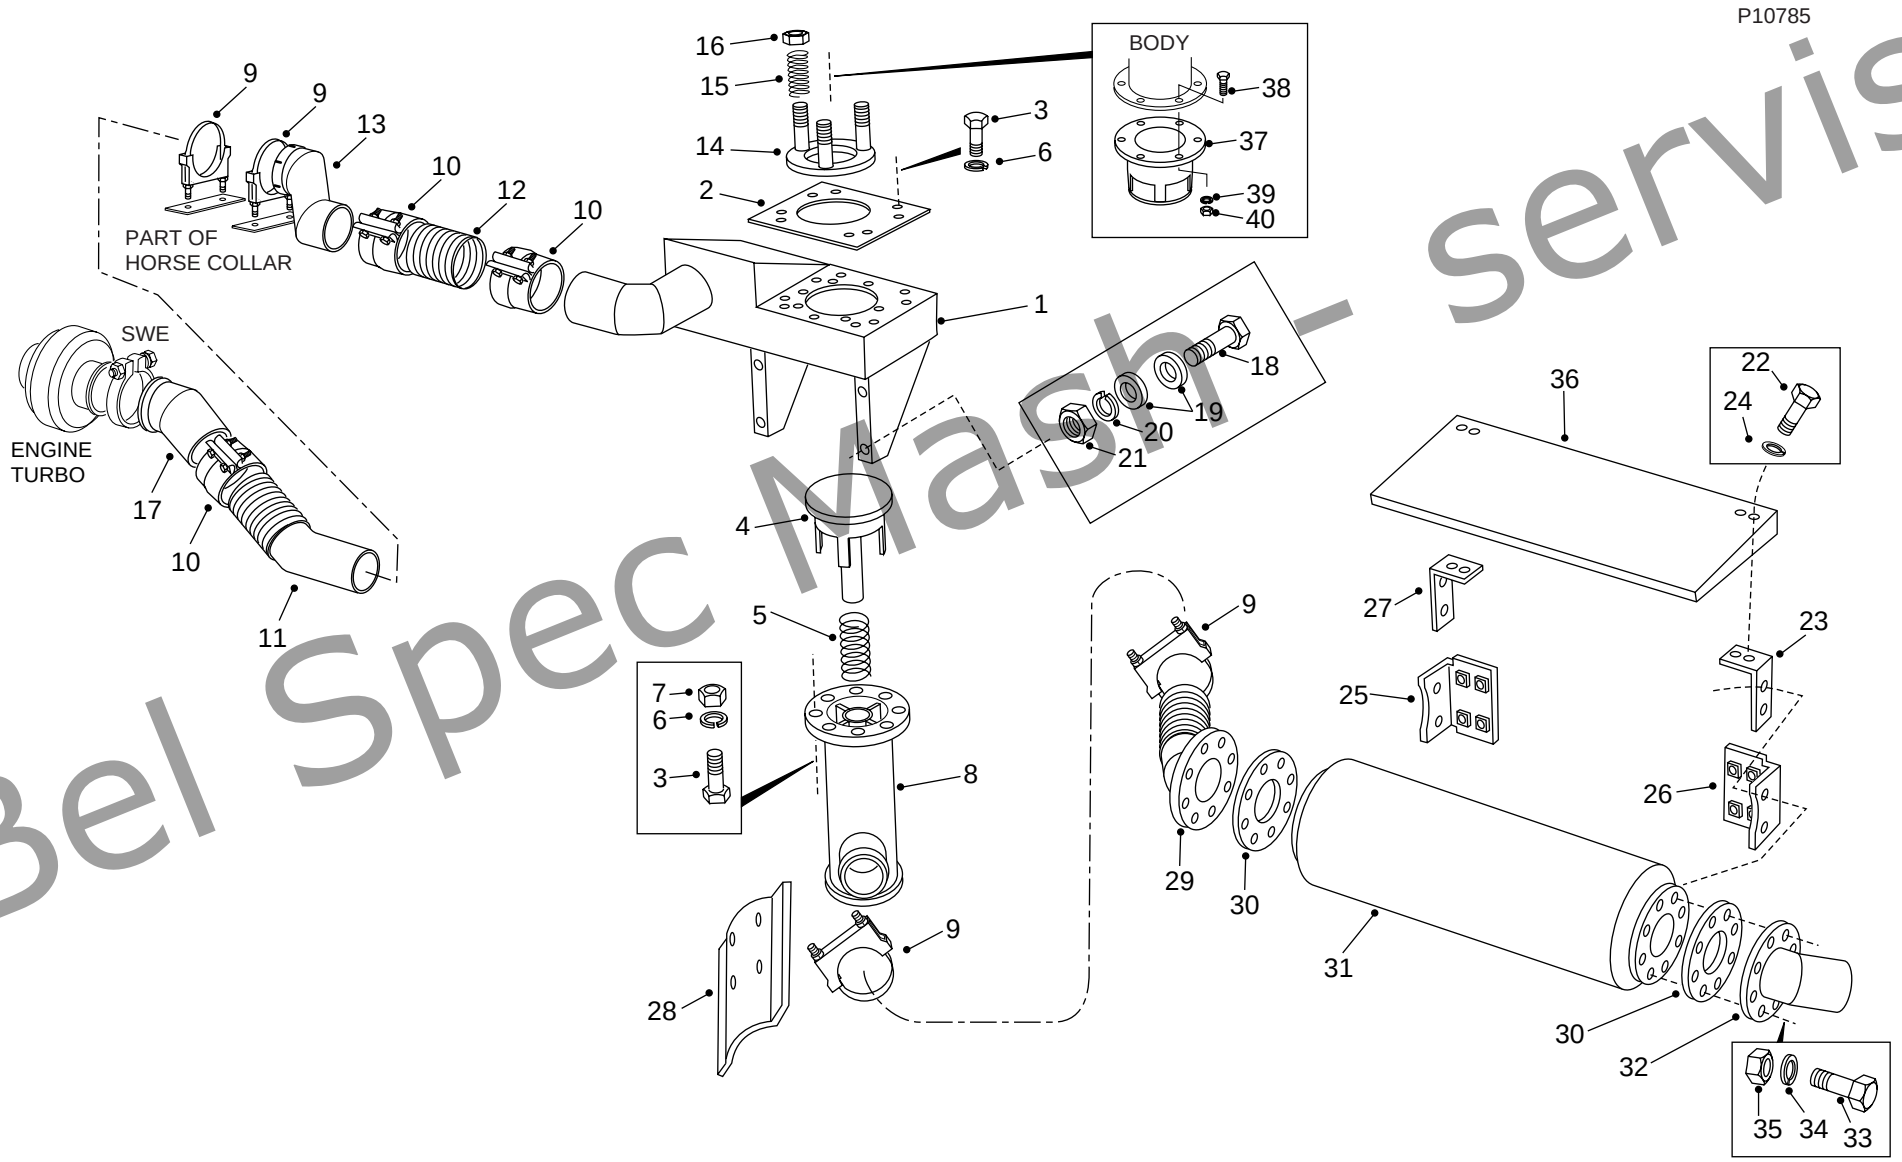

Bel Spec Mash - servis

https://truckmanualshub.com/

270-0020-8391 EXHAUST HEATED BODY
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15301435	DIVERTOR BOX ASSY		
	002	001	09018236	.PLATE		
	003	016	00179883	.BOLT		
	004	001	09018264	.PLATE ASSY-BAFFLE		
	005	001	15249494	.SPRING		
	006	016	00103329	.LOCKWASHER		
	007	008	00120378	.NUT		
	008	001	15301436	.TUBE ASSY		
	009	004	09065853	CLAMP		
	010	003	15303418	CLAMP		
	011	001	15311415	EXHAUST FLEX TUBE ASSY		
	012	001	15311444	FLEX TUBE		
	013	001	15311434	TUBE		
	014	001	15251102	PLATE ASSY		
	015	003	09015939	SPRING		
	016	003	09416503	NUT		
	017	001	15311417	TUBE ASSEMBLY		
	018	004	00179889	BOLT		
	019	008	00106265	WASHER		
	020	004	00103329	LOCKWASHER		
	021	004	00120378	NUT		
	022	004	00179837	BOLT		
	023	001	15226852	BRACKET ASSY		
	024	012	00106263	WASHER		
	025	001	15256784	BRACKET-EXHAUST FRON		
	026	001	15256785	BRACKET-EXHAUST REAR		
	027	001	15256799	BRACKET ASSY		
	028	001	15303804	HEAT SHIELD		
	029	001	15311424	EXHAUST FLEX TUBE ASSY		
	030	002	15256783	GASKET		
	031	001	15256778	SILENCER		
	032	001	15256781	TAILPIPE		
	033	016	00271562	BOLT		
	034	020	00103331	LOCKWASHER		
	035	016	00102639	NUT		
	036	001	15226854	SHIELD-HEAT		
	037	001	15013832	TUBE ASM		
	038	003	00271560	BOLT		
	039	003	00103331	LOCKWASHER		
	040	003	00102639	NUT		

BelSpec Mash - servis

https://truckmanualshub.com/

270-0080-8391 ROCK EJECTORS
FROM SERIAL NO. T8391011

DRAWING NO. P9914

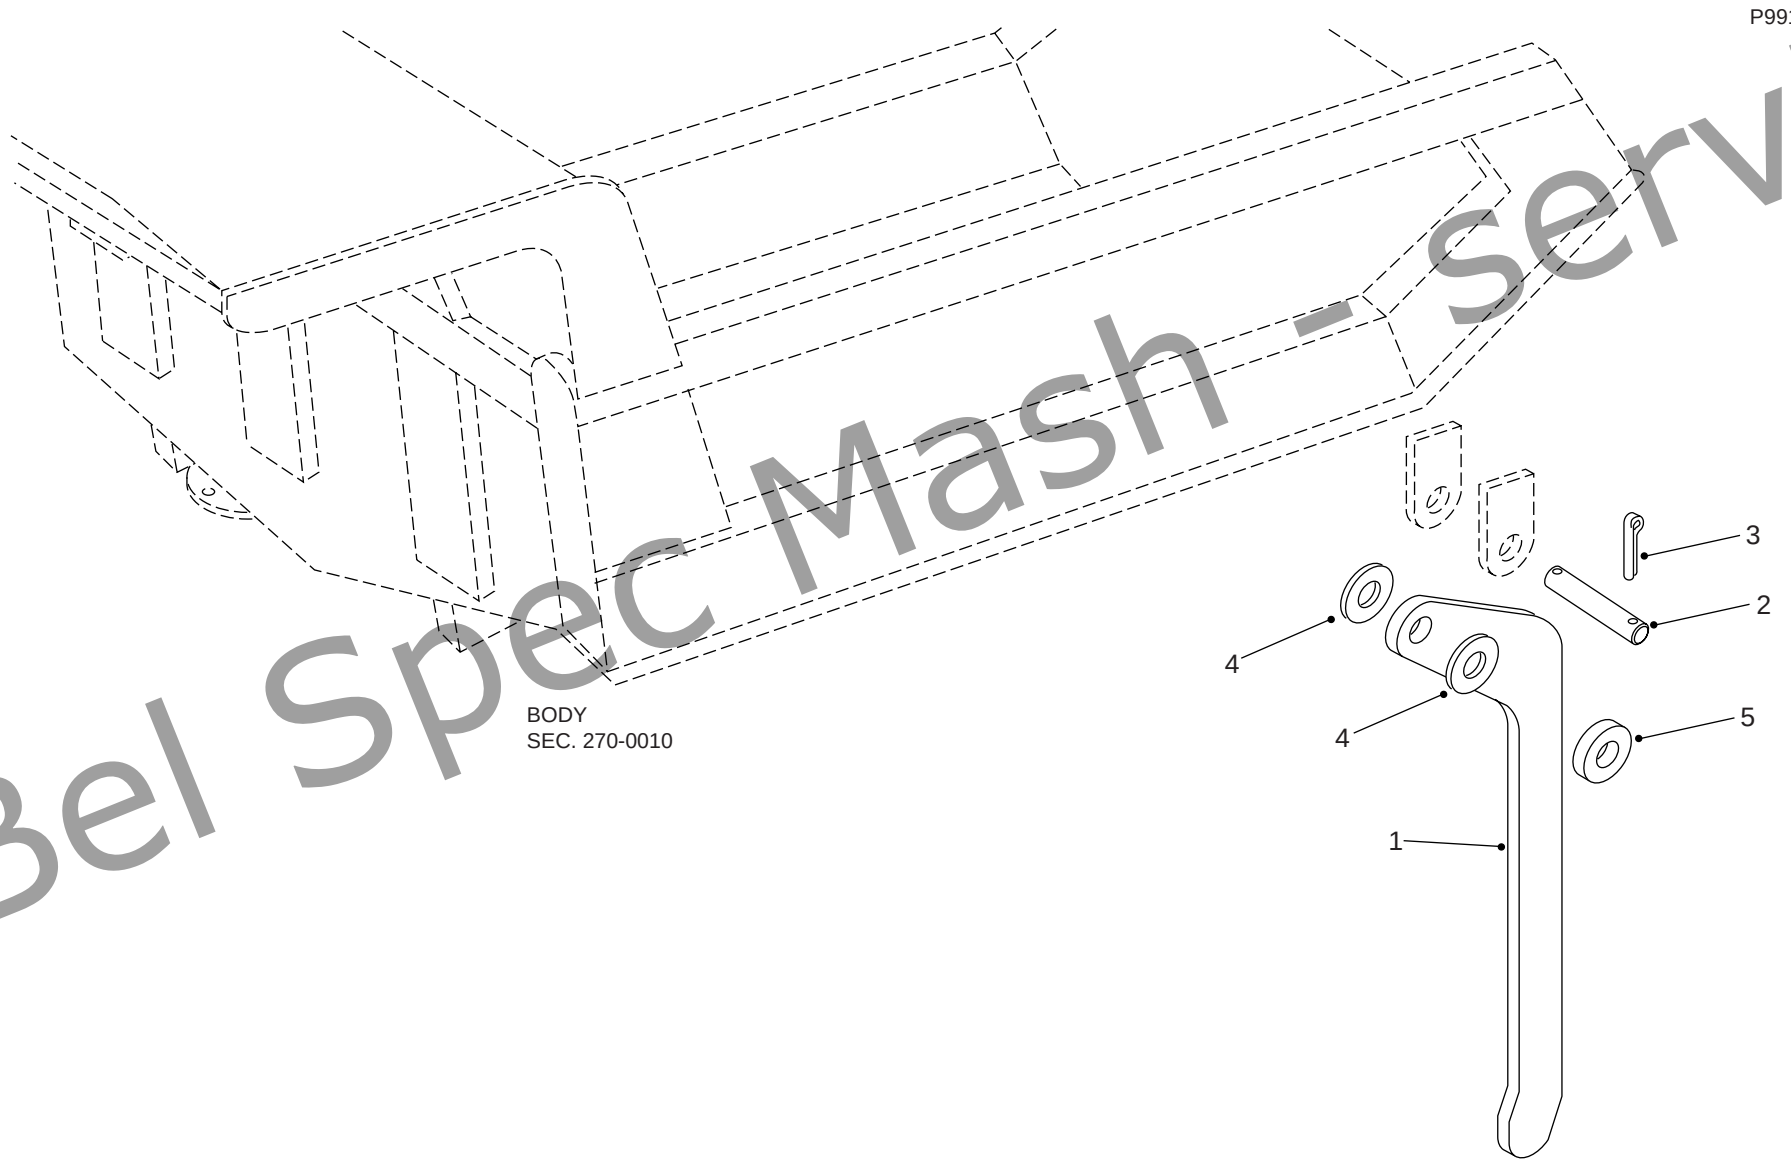

Bel Spec Mash - servis

https://truckmanualshub.com/

270-0080-8391 ROCK EJECTORS
FROM SERIAL NO. T8391011


NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15011204	BAR		
	002	002	15303294	PIN		
	003	002	00436484	PIN-COTTER		
	004	006	15228120	SPACER		
	005	002	15303293	SPACER		

Bel Spec Mash - servis

https://truckmanualshub.com/

290-0010-8391 DECALS-ENGLISH
FROM SERIAL NO. T8391011 TO T8391052

DRAWING NO. P10906

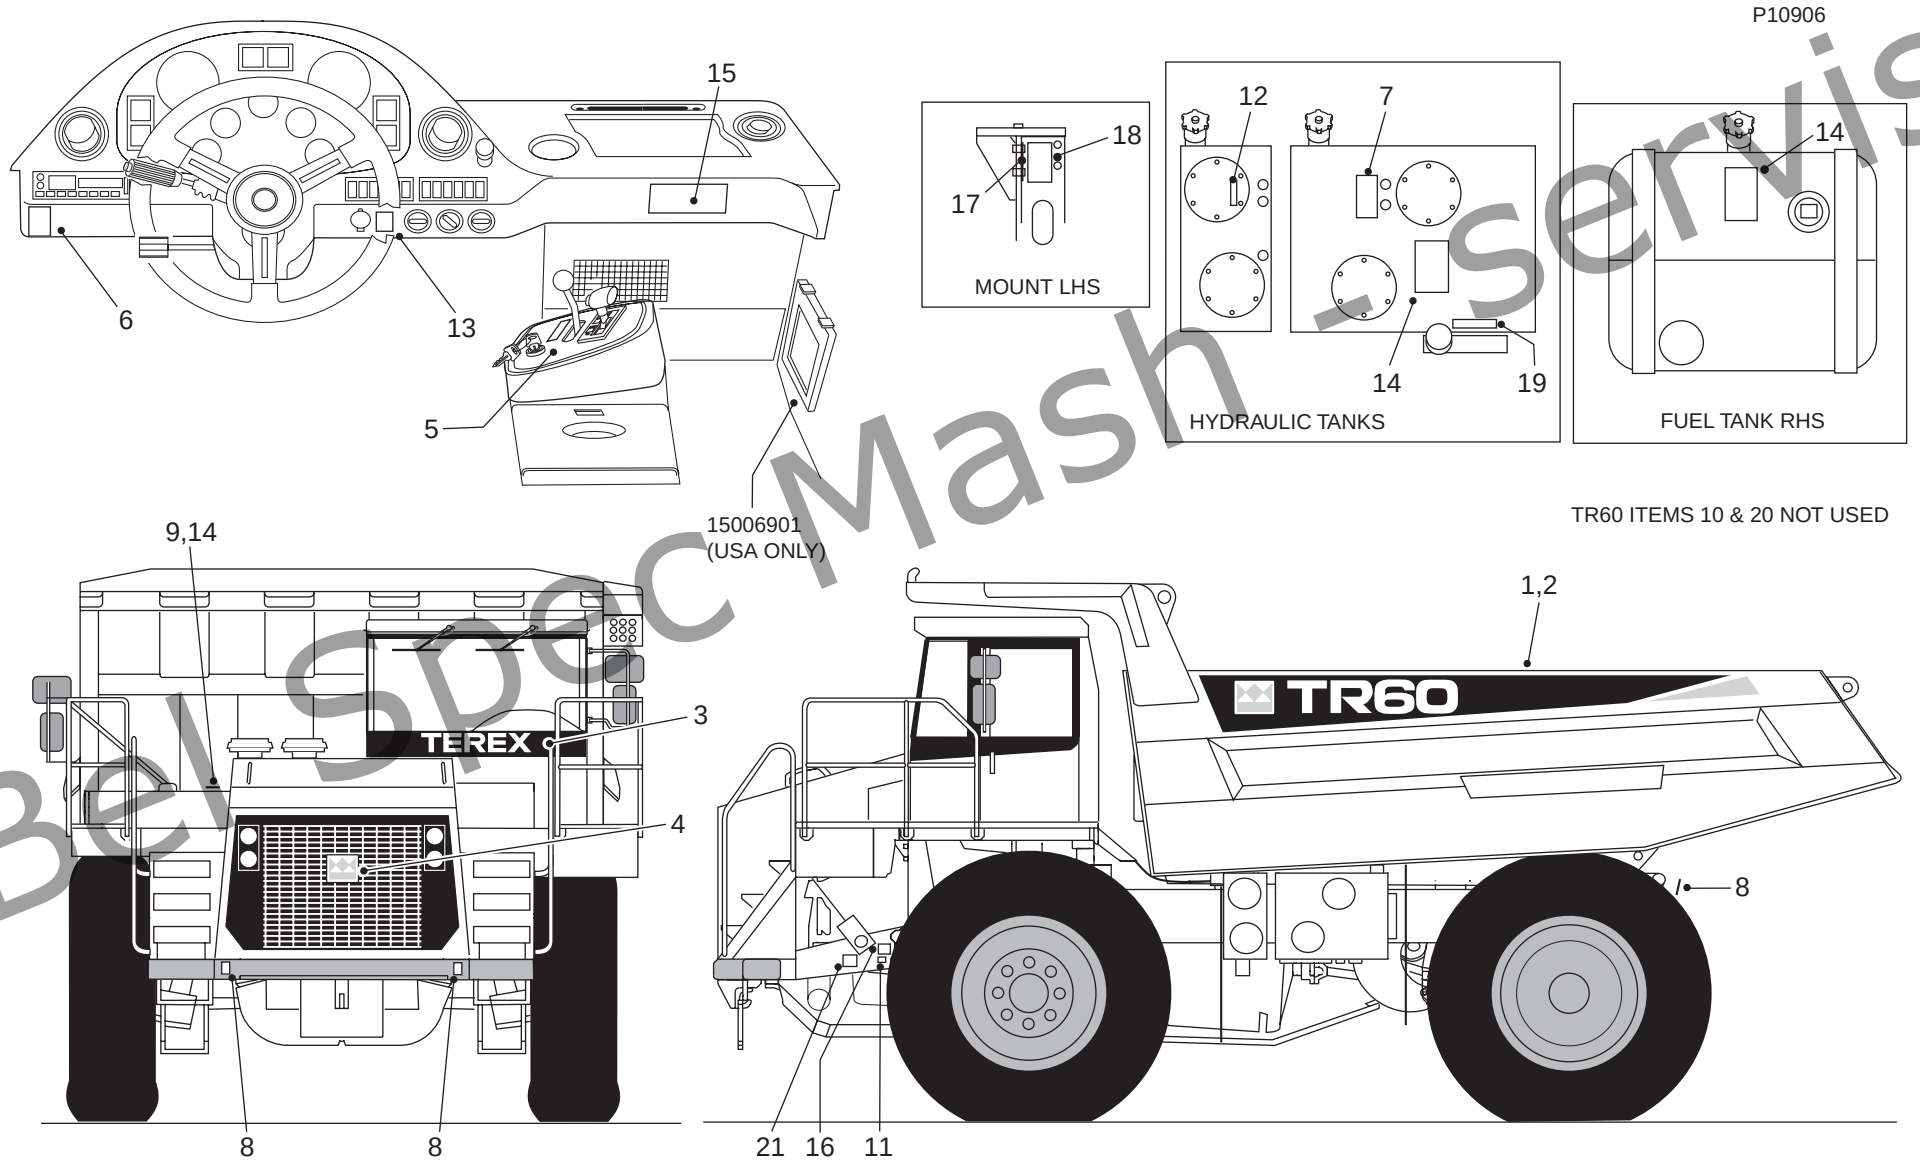

Bel Spec Mash - servis

https://truckmanualshub.com/

290-0010-8391 DECALS-ENGLISH
FROM SERIAL NO. T8391011 TO T8391052

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15312826	DECAL-BODY SIDE LHS		
	002	001	15312827	DECAL-BODY SIDE RHS		
	003	001	15311915	DECAL-CAB FRONT		
	004	001	15009299	DECAL-TEREX CROWN		
	005	001	09270762	DECAL-RETARDER		
	006	001	09270768	DECAL-HYD CONTROL		
	007	001	09270769	DECAL-HYDRAULIC OIL		
	008	004	09271069	DECAL-HOOK		
	009	001	09361787	DECAL-BATTERY EARTH		
A	010	001	15255616	DECAL-PRESS CHECK		
	011	001	15245247	DECAL-CE SAFETY		
	012	001	15245918	DECAL-HYDRAULIC OIL		
	013	001	15255885	DECAL-HAND LAMP		
	014	003	15301024	DECAL-BODY SUPPORT		
	015	001	15303454	DECAL-HEIGHT		
	016	001	15303455	DECAL-SLINGING		
B	017	001	15301857	DECAL-PRESSURE TEST		
B	018	001	15301858	DECAL-PRESSURE TEST		
B	019	001	15301859	DECAL-PRESSURE TEST		
C	020	001	15308588	DECAL-PRESS TEST		
	021	001	15316595	DECAL-SERIAL PLATE		

NOTES:
A TR100 UNITS ONLY
B NOT TR100
C TR70 UNITS ONLY


Bel Spec Mash - servis

https://truckmanualshub.com/

08/03 (ECN 105823)

290-0010-8391 DECALS-ENGLISH
FROM SERIAL NO. T8391053

DRAWING NO. P11320

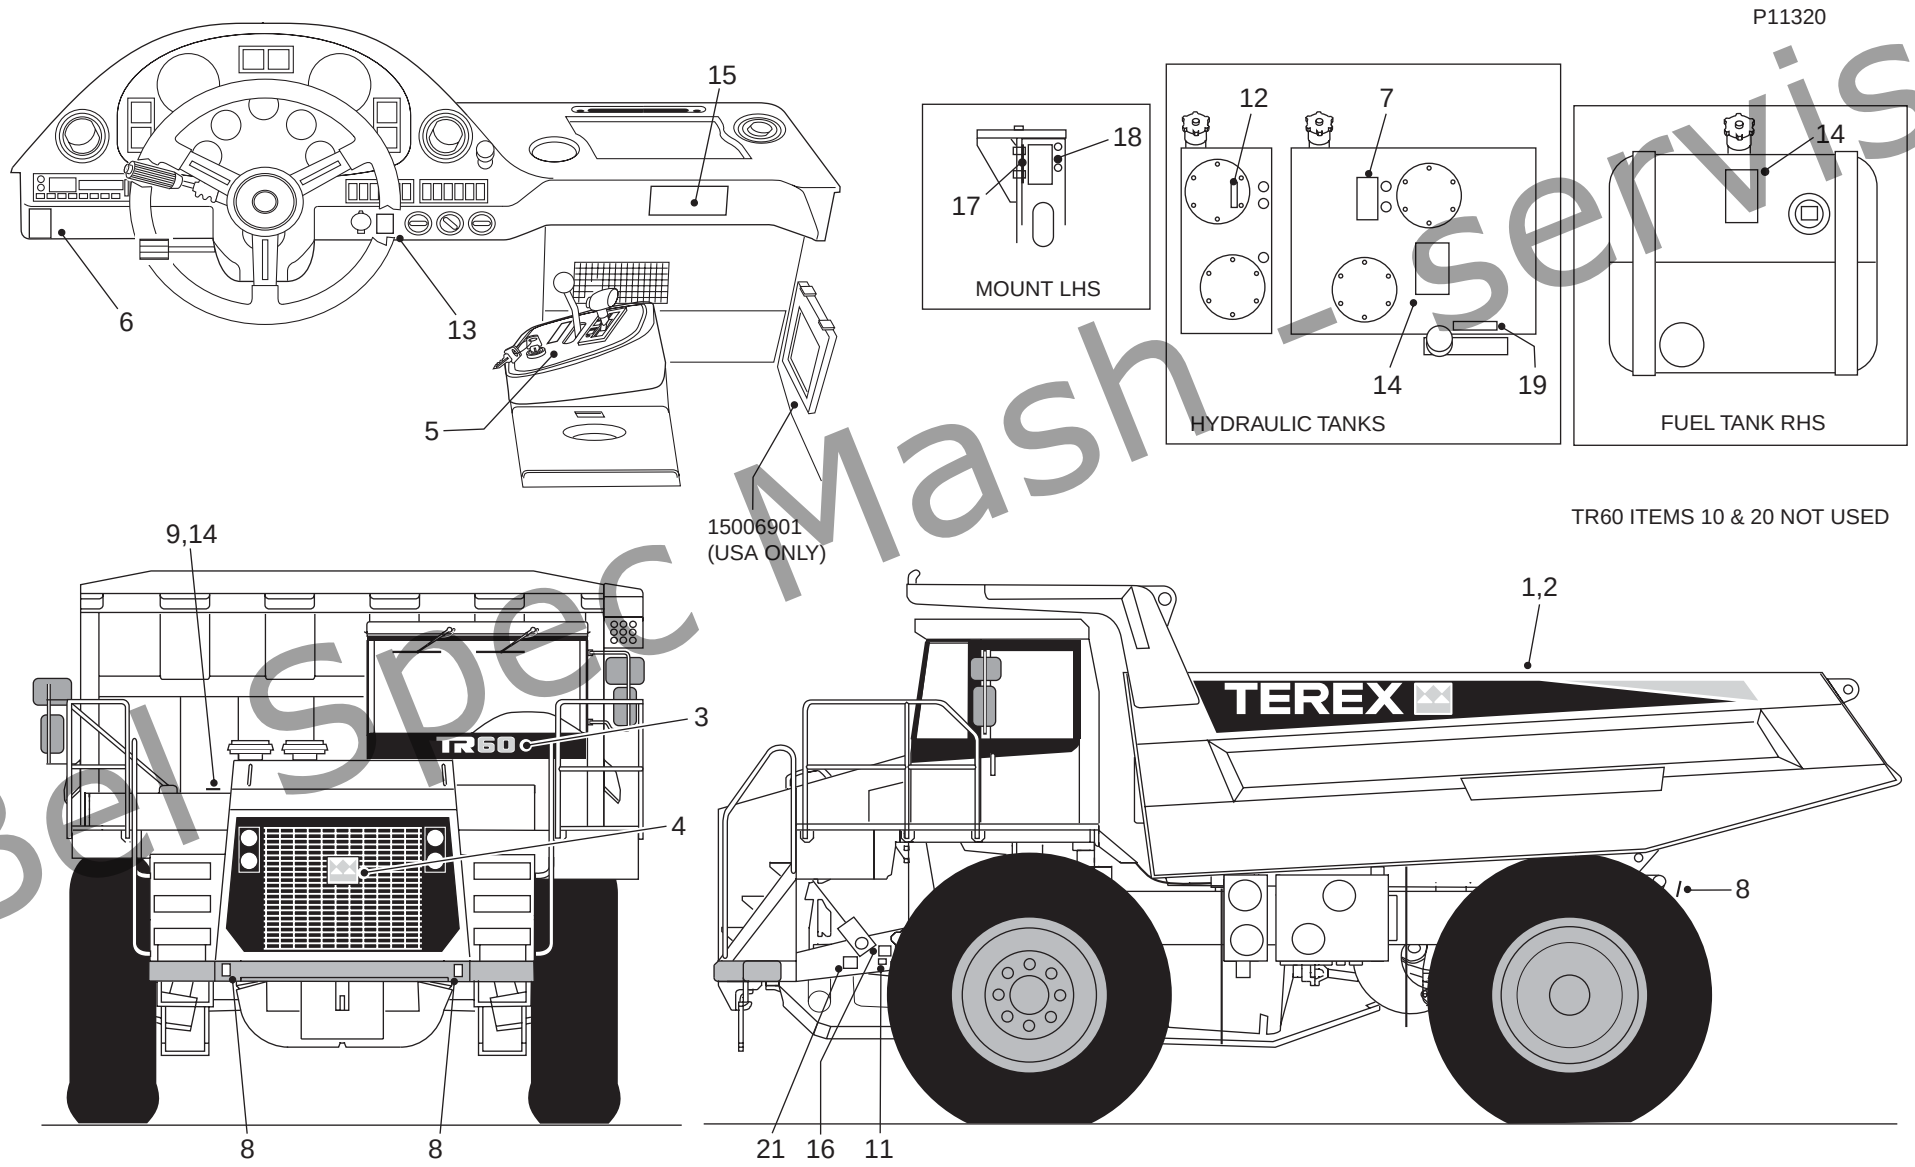

Bel Spec Mash - servis

https://truckmanualshub.com/

290-0010-8391 DECALS-ENGLISH
FROM SERIAL NO. T8391053

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15317326	DECAL-BODY SIDE LHS		
	002	001	15317327	DECAL-BODY SIDE RHS		
	003	001	15317328	DECAL-CAB FRONT		
	004	001	15009299	DECAL-TEREX CROWN		
	005	001	09270762	DECAL-RETARDER		
	006	001	09270768	DECAL-HYD CONTROL		
	007	001	09270769	DECAL-HYDRAULIC OIL		
	008	004	09271069	DECAL-HOOK		
	009	001	09361787	DECAL-BATTERY EARTH		
A	010	001	15255616	DECAL-PRESS CHECK		
	011	001	15245247	DECAL-CE SAFETY		
	012	001	15245918	DECAL-HYDRAULIC OIL		
	013	001	15255885	DECAL-HAND LAMP		
	014	003	15301024	DECAL-BODY SUPPORT		
	015	001	15303454	DECAL-HEIGHT		
	016	001	15303455	DECAL-SLINGING		
B	017	001	15301857	DECAL-PRESSURE TEST		
B	018	001	15301858	DECAL-PRESSURE TEST		
B	019	001	15301859	DECAL-PRESSURE TEST		
C	020	001	15308588	DECAL-PRESS TEST		
	021	001	15316595	DECAL-SERIAL PLATE		


NOTES:
A TR100 UNITS ONLY
B NOT TR100
C TR70 UNITS ONLY

Bel Spec Mash - servis

https://truckmanualshub.com/

300-0040-8391 MULTI-TUBE CLAMPS AND HARDWARE
FROM SERIAL NO. T8391011

DRAWING NO. P8256A

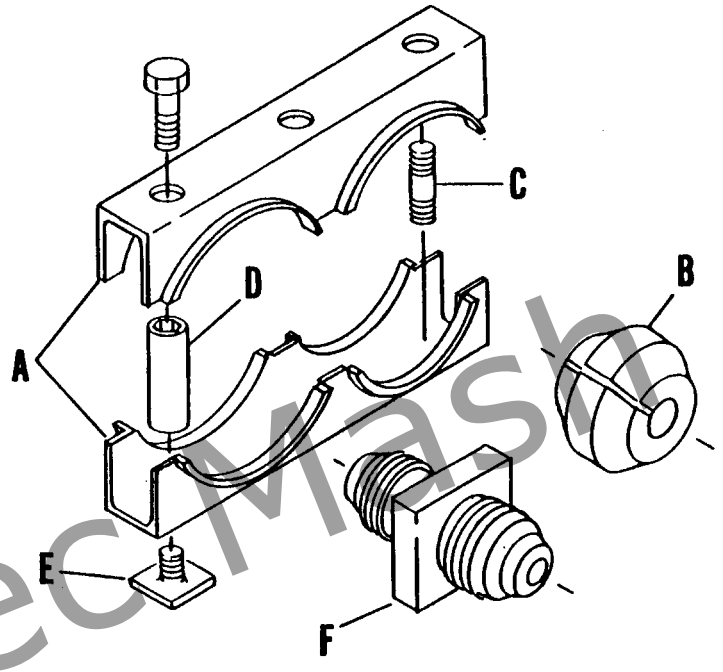

A. CLAMPS
B. SPLIT BUSHINGS
C. THREAD ADAPTERS
D. STACKING NUTS W/SOCKET HEADS
E. WELD ADAPTERS
F. JUNCTION ADAPTERS

A. CLAMPS

A.1-SERIES #10 CLAMPS--.84 IN (21 MM) DIA. OPENING

PART NUMBER	NO. OF OPENINGS
15003258	1
15003251	2
15003252	3
15003253	4
15003254	5
15003255	6
15003256	7
15003257	8
15004760	29

A.2-SERIES #16 CLAMPS-1.18 IN. (30 MM) DIA. OPENING

PART NUMBER	NO. OPENINGS
15001403	1
15001404	2
15001405	3
15001406	4
15001407	5
15001408	6
15001409	7
15001410	8
15001411	9
15004761	21

Bel SpecMash - servis

https://truckmanualshub.com/

300-0040-8391 MULTI-TUBE CLAMPS AND HARDWARE
FROM SERIAL NO. T8391011

DRAWING NO. P8256B

A.3 SERIES #32 CLAMPS-2.12 IN (54 MM) DIA. OPENING

PART NUMBER	NO. OPENINGS
15001429	1
15001430	2
15001431	3
15001432	4
15001433	5
15004773	13

A.4 SERIES #46 CLAMPS-2.50 IN (63 MM) DIA OPENING

PART NUMBER	NO. OPENINGS
15004712	1
15004713	2
15004714	3
15004715	4
15004716	11

B. SPLIT BUSHINGS

B.1 SPLIT BUSHINGS FOR #10 CLAMPS

PART NO.	I.D.(INCHES)
15003259	.38
15003260	.52
15003261	.66
15004735	.75

B.2 SPLIT BUSHINGS FOR #16 CLAMPS

PART NO.	I.D.(INCHES)
15001412	.23
15001413	.36
15001425	.41
15001414	.48
15001419	.52
15014974	.56
15001415	.61
15001420	.66
15001416	.73
15001423	.81
15001417	.86
15001421	.88
15001424	.92
15001418	.98
15001422	1.03

B.3 SPLIT BUSHINGS FOR #32 CLAMPS

PART NUMBER	I.D. (INCHES)
15004795	1.00
15014975	1.12
15001434	1.20
15014976	1.41
15001435	1.45
15014977	1.47
15001436	1.80
15014978	1.80
15014979	1.90
15015249	2.00

B.4 SPLIT BUSHINGS FOR #46 CLAMPS.

PART NUMBER	I.D. (INCHES)
15004739	1.45
15004740	1.70
15004741	1.78
15004742	2.04
15004743	2.17
15004744	2.83
15015250	2.00
15015251	2.50
15015252	2.68

Bal Spec Mash - servis

https://truckmanualshub.com/

300-0040-8391 MULTI-TUBE CLAMPS AND HARDWARE
FROM SERIAL NO. T8391011

C. THREAD ADAPTERS

PART NUMBER	SIZE (INCHES)
15001401	5/16-18 X 1.25
15001427	3/8-16 X 1.50
15014687	3/8-16 X 1.88

D. STACKING NUTS W/SOCKET HEADS

PART NUMBER	THREADS	USE WITH
15003250	5/16-18	#10 CLAMPS
15001402	5/16-18	#16 CLAMPS
15001428	3/8-16	#32 CLAMPS
15004748	1/2-13	#46 CLAMPS

E. WELD ADAPTERS

PART NUMBER	THREADS	USE WITH
15001400	5/16-18	#10 OR #16 CLAMPS
15001426	3/8-16	#32 CLAMPS
15004759	1/2-13	#46 CLAMPS

F. JUNCTION ADAPTERS

F.1 37° FLARE FOR #10 CLAMPS

PART NUMBER	THREAD SIZE (INCHES)
15003262	7/16-20
15003263	9/16-18
15003264	3/4-16
15003265	7/8-14

F.2 45° FLARE FOR #10 CLAMPS

PART NUMBER	THREAD SIZE (INCHES)
15014722	7/16-20
15014717	5/8-18
15014747	3/4-16
15014746	7/8-14

F.3 37° FLARE FOR #16 CLAMPS

PART NUMBER	THREAD SIZE (INCHES)
15013938	7/16-20
15014098	9/16-18
15014438	3/4-16
15014755	7/8-14
15014980	1 1/16-12
15004789	1 5/16-12

F.4 45° FLARE FOR #16 CLAMPS

PART NUMBER	THREAD SIZE (INCHES)
15014561	7/16-20
15014719	5/8-18
15014562	3/4-16
15014716	7/8-14
15014563	1 1/16-12

Bel Spec Mash - servis

https://truckmanualshub.com/



ENGINE 110



TRANSMISSION 120



ELECTRICAL SYSTEM 190



FUEL SYSTEM 200



BRAKING SYSTEM 250



BODY 270



MISCELLANEOUS 300

Bel Spec Mash - servis

https://truckmanualshub.com/

SECTION 110 ENGINE
110-0030-8393 ENGINE OIL DRAIN 08/03

SECTION 120 TRANSMISSION
120-0010-8393 TRANSMISSION OIL DRAIN 08/03

SECTION 190 ELECTRICAL SYSTEM
190-0110-8393 ALTERNATOR 08/03
190-0220-8393 BODY-UP BUZZER 08/03
190-0240-8393 FLASHING BEACON 08/03
190-0320-8393 TRANS RANGE DISPLAY INDICATOR 08/03

SECTION 200 FUEL
200-0010-8393 FUEL TANK VENT 08/03

SECTION 250 BRAKING SYSTEM
250-0030-8393 BRAKE LINES-DRY/SLIPPERY 08/03
250-0110-8393 PRESSURE REDUCING VALVE 08/03

SECTION 260 CAB
260-0210-8393 FIRE EXTINGUISHER 08/03

SECTION 270 BODY
270-0050-8393 SPILLGUARDS 08/03
270-0052-8393 SPILLGUARD-OPERATOR 08/03

SECTION 300 MISCELLANEOUS
300-0010-8393 FIRST AID KIT 08/03
300-0011-8393 HAND TOOL KIT 08/03
300-0012-8393 O RING KIT-SAE 08/03
300-0013-8393 O RING KIT-ORFS 08/03
300-0020-8393 LUBRICATION SYSTEM 01/03
300-0025-8393 CENTRALISED LUBRICATION 08/03

PclSpec Mash - servis

https://truckmanualshub.com/

THIS PAGE IS INTENTIONALLY LEFT BLANK


Bel Spec Mash - servis

https://truckmanualshub.com/

110-0030-8393 ENGINE OIL DRAIN
FROM SERIAL NO. T8391011

DRAWING NO. P11355

P11355

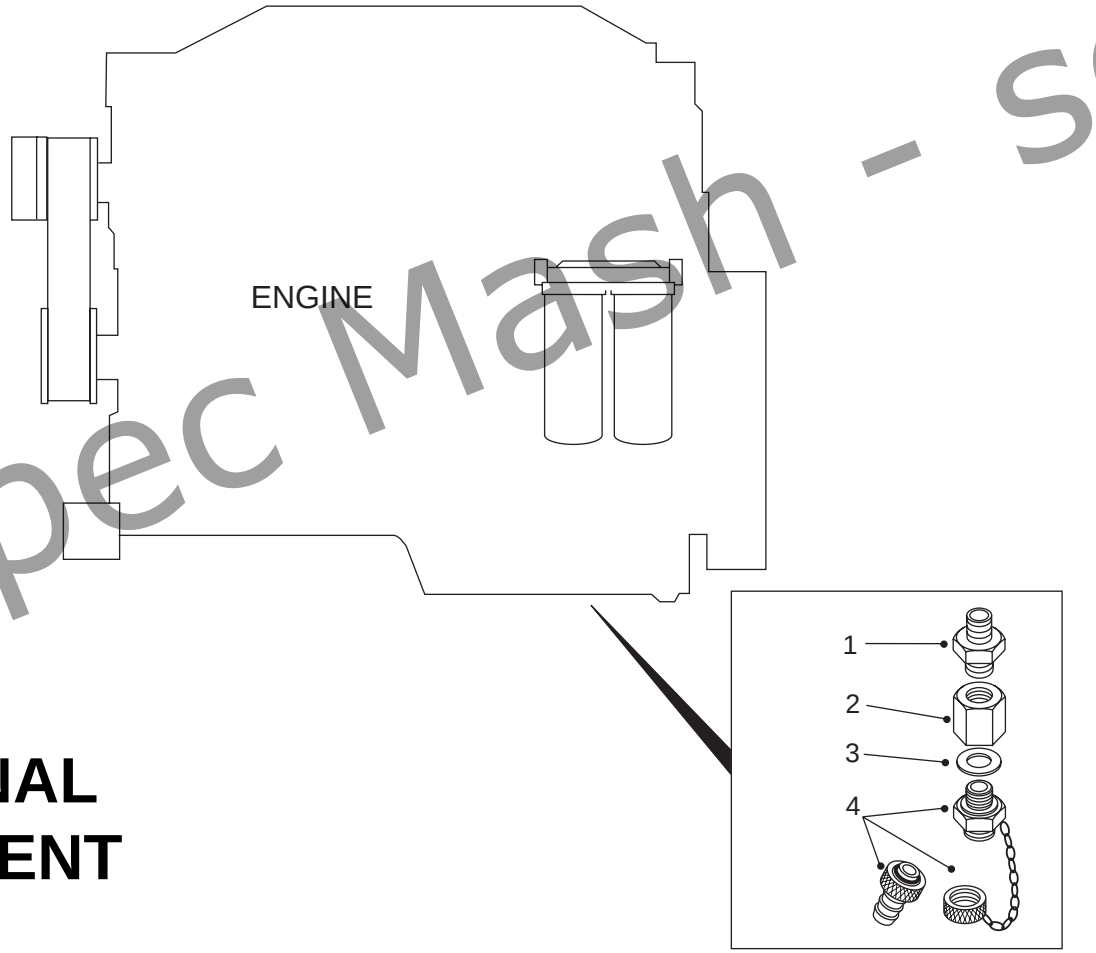

OPTIONAL EQUIPMENT

Bel Spec Mash - servis

https://truckmanualshub.com/

110-0030-8393 ENGINE OIL DRAIN
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15245775	ADAPTOR		
	002	001	15245772	HOUSING-ADAPTOR		
	003	002	15226196	GASKET		
	004	001	15245765	DRAINPLUG-ANTI SPILL		


Bel Spec Mash - servis

https://truckmanualshub.com/

120-0010-8393 TRANSMISSION OIL DRAIN
FROM SERIAL NO. T8391011

DRAWING NO. P11356

P11356

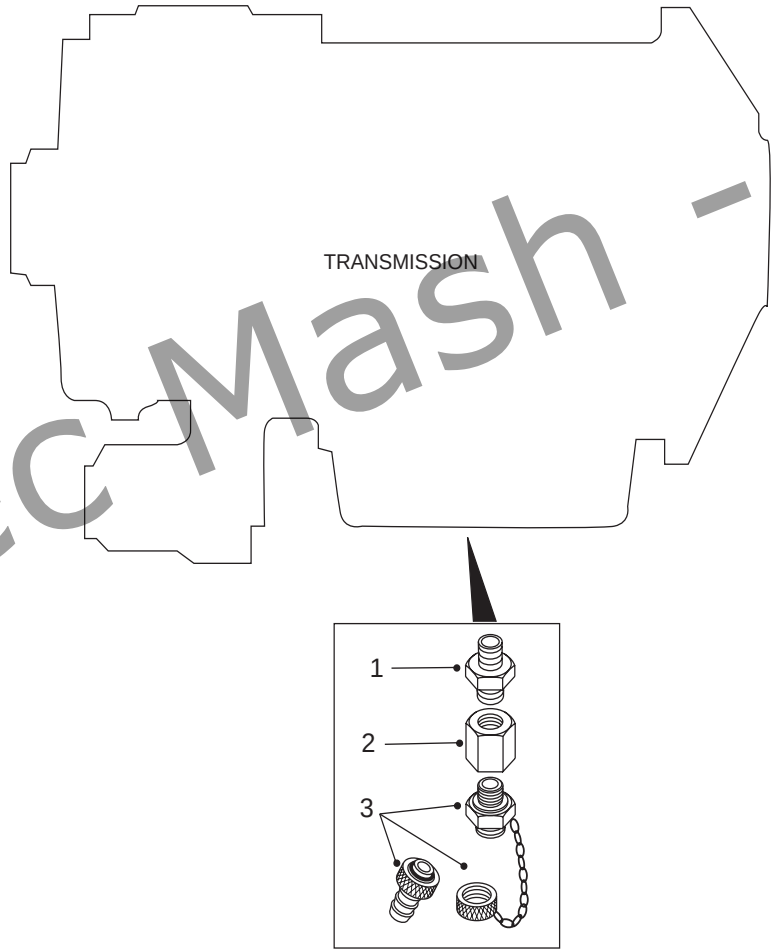

OPTIONAL EQUIPMENT

Bel Spec Mash - servis

https://truckmanualshub.com/

120-0010-8393 TRANSMISSION OIL DRAIN
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15303411	ADAPTOR		
	002	001	15245772	HOUSING-ADAPTOR		
	003	001	15245765	DRAINPLUG-ANTI SPILL		


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0110-8393 ALTERNATOR
FROM SERIAL NO. T8391011

DRAWING NO. P8145

P8145

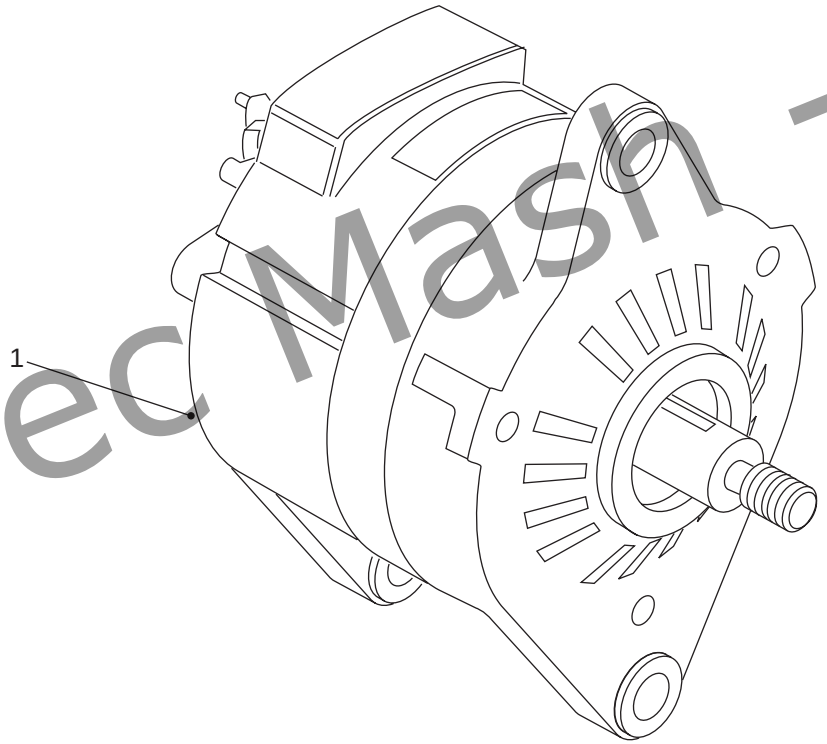

OPTIONAL EQUIPMENT

BelSpec Mash - servis

https://truckmanualshub.com/

190-0110-8393 ALTERNATOR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15301193	ALTERNATOR-100 AMP		


Bel Spec Mash - servis

https://truckmanualshub.com/

190-0220-8393 BODY-UP BUZZER/INDICATOR
FROM SERIAL NO. T8391011

DRAWING NO. P11338

P11338

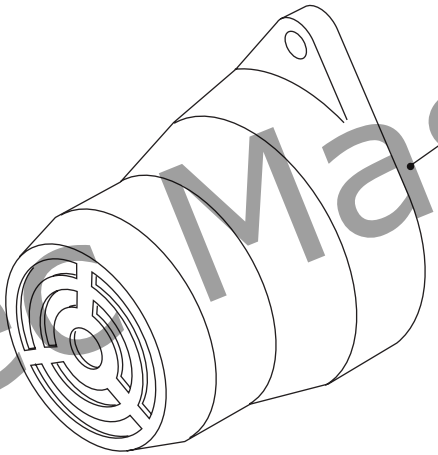

Bel Spec Mash - servis

OPTIONAL EQUIPMENT

https://truckmanualshub.com/

190-0220-8393 BODY-UP BUZZER/INDICATOR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15316626	BUZZER		

Bel Spec Mash - servis


https://truckmanualshub.com/

08/03

190-0240-8393 FLASHING BEACON
FROM SERIAL NO. T8391011

DRAWING NO. P11335

P11335

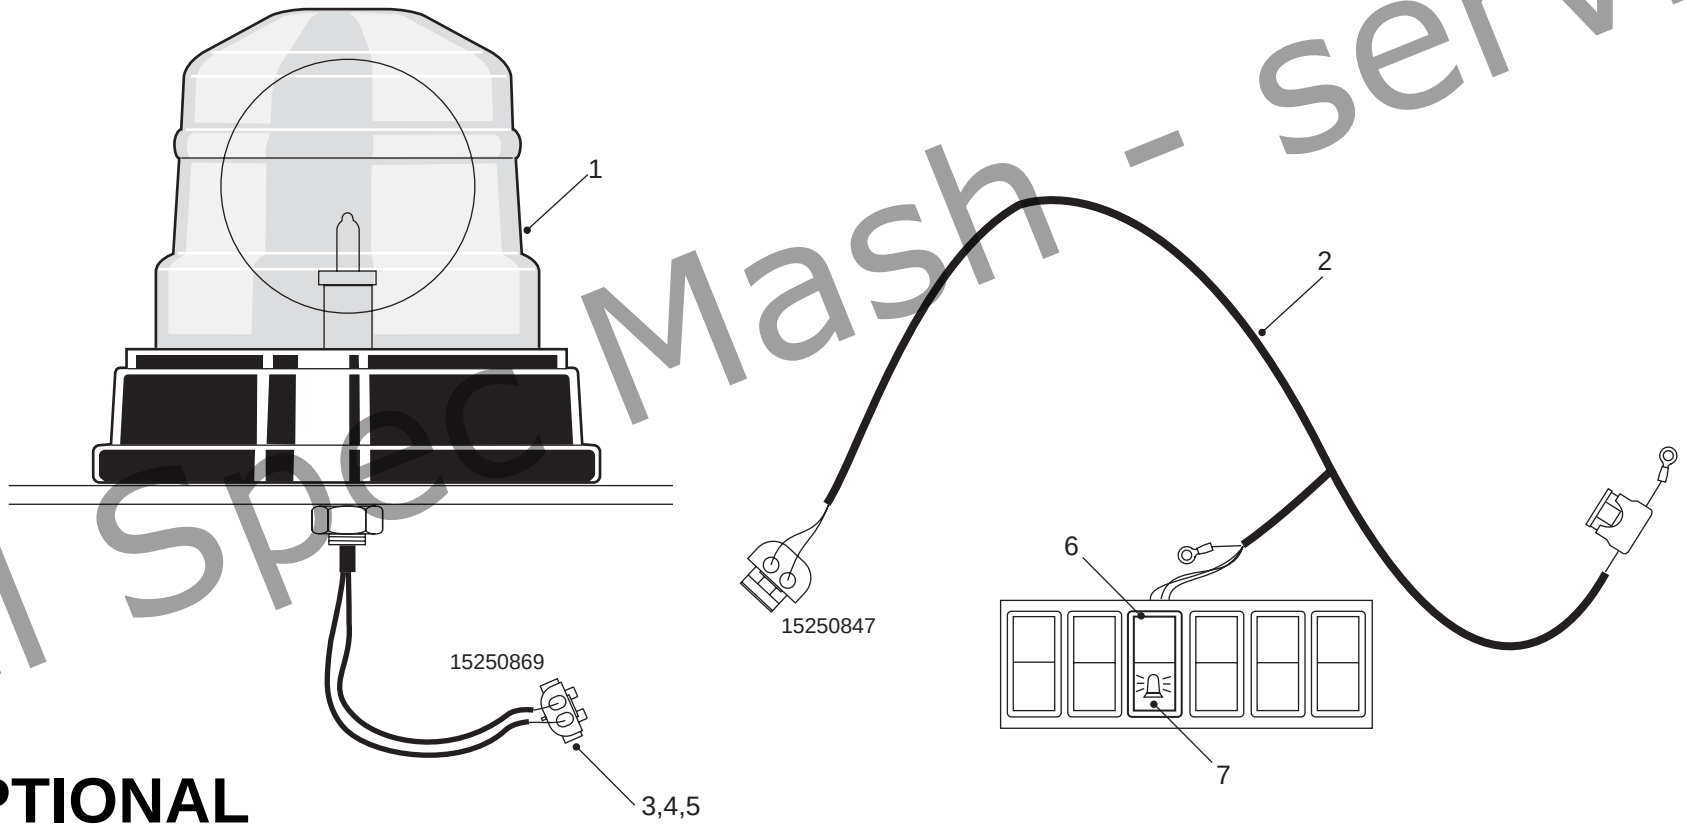

Bel Spec Mash - servis

OPTIONAL EQUIPMENT

https://truckmanualshub.com/

190-0240-8393 FLASHING BEACON
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15300244	FLASHING BEACON		
	002	001	15307310	HARNESS-FLASHING BEACON		
	003	001	15250869	CONNECTOR-2 PIN		
	004	002	15248413	PIN-14/0.30		
	005	002	15248396	SEAL-CABLE		
	006	001	15258797	SWITCH-ON/OFF		
	007	001	15230893	LENS-FLASHING BEACON		

Bel Spec Mash - servis


https://truckmanualshub.com/

190-0320-8393 TRANS RANGE DISPLAY INDICATOR
FROM SERIAL NO. T8391011

DRAWING NO. P11300

P11300

OPTIONAL EQUIPMENT

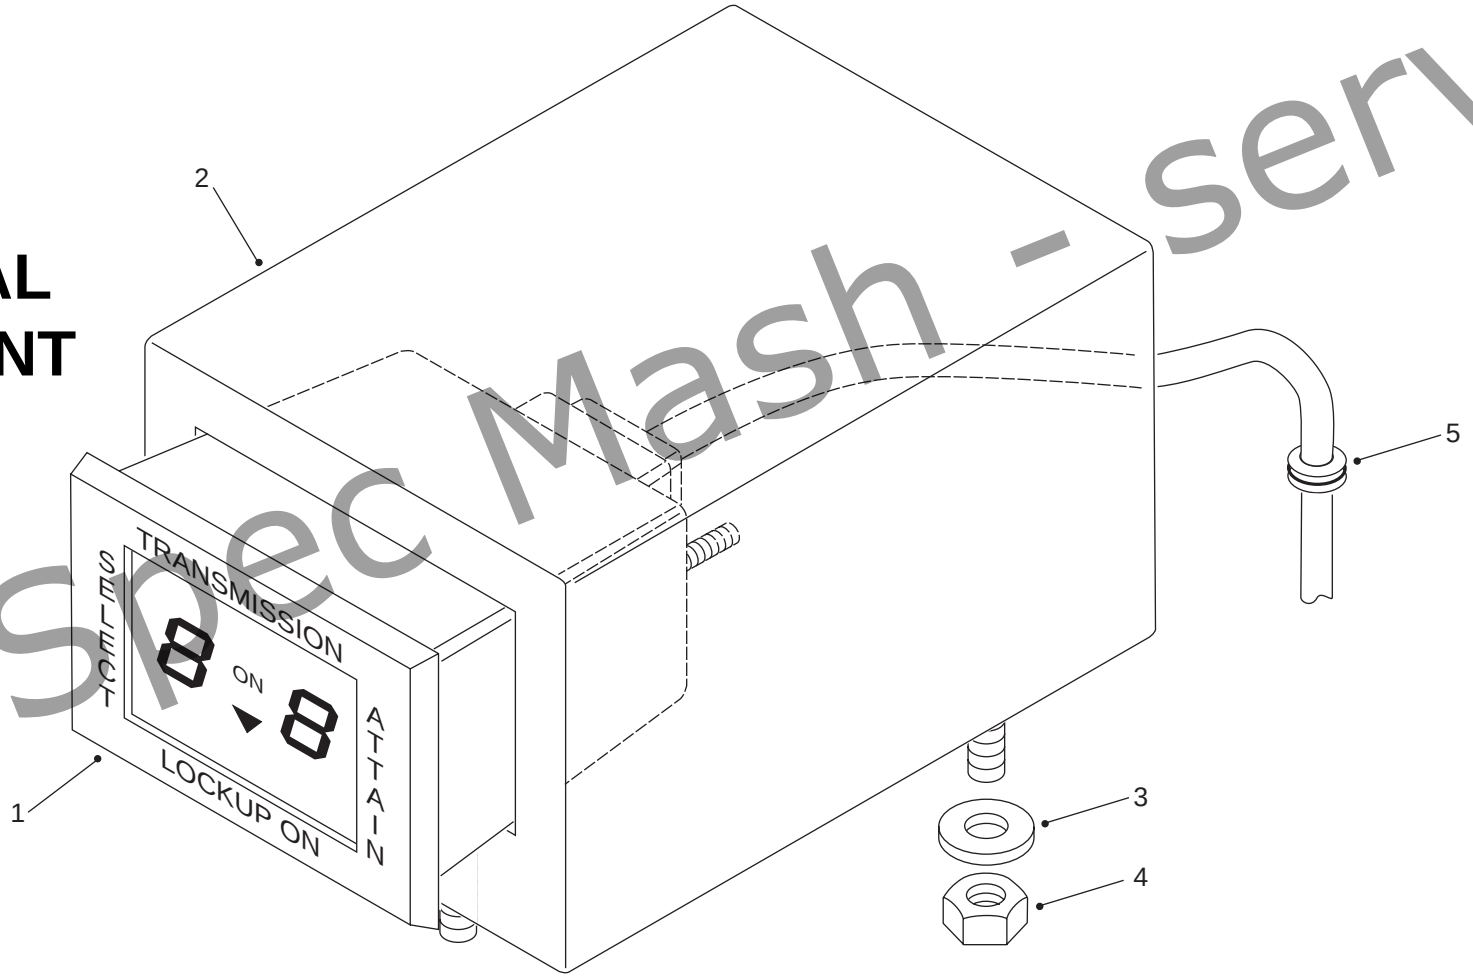

Bel Spec Mash - servis

https://truckmanualshub.com/

190-0320-8393 TRANS RANGE DISPLAY INDICATOR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15313789	DIGITAL DISPLAY UNIT		
	002	001	15313842	BOX-DISPLAY UNIT		
	003	003	00103339	WASHER		
	004	003	00109084	NUT		
	005	003	00117964	GROMMET		


Bel Spec Mash - servis

https://truckmanualshub.com/

200-0010-8393 FUEL TANK AND MOUNTING
FROM SERIAL NO. T8391011

DRAWING NO. P11334

P11334

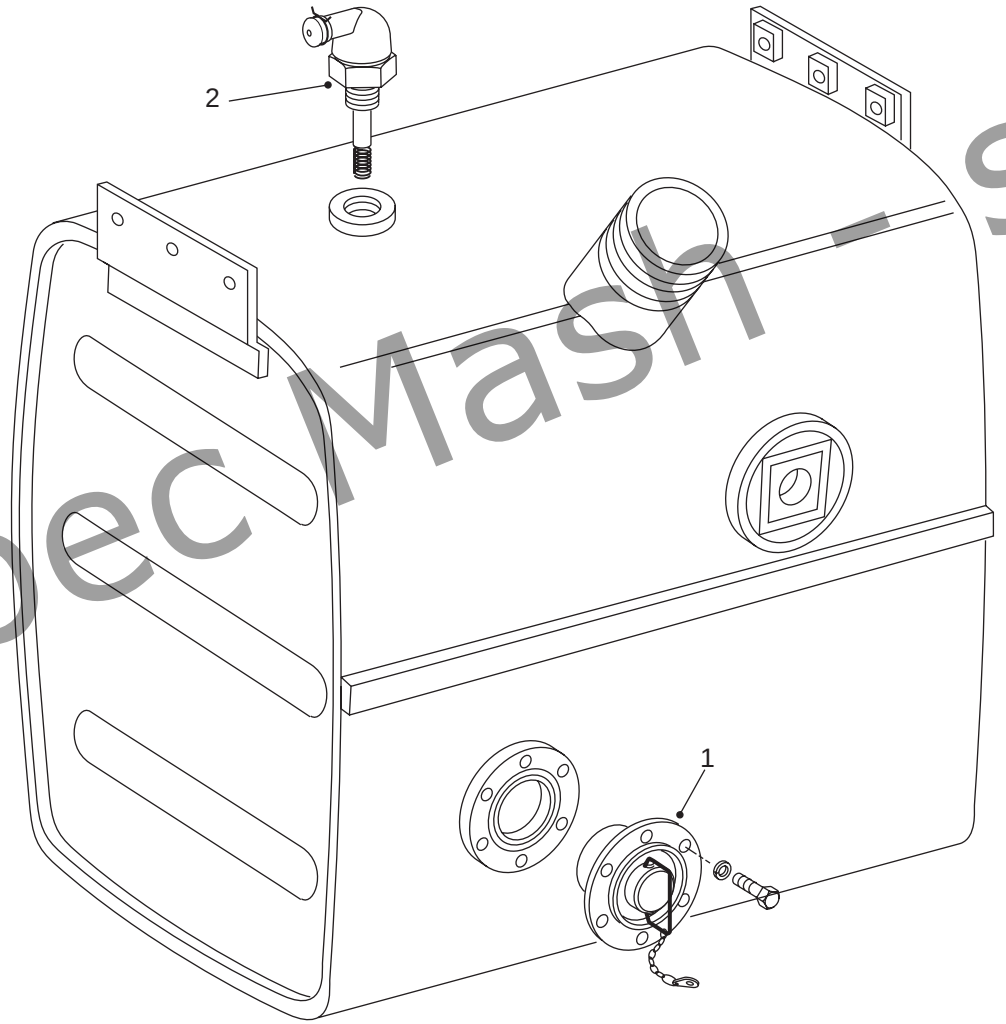

OPTIONAL EQUIPMENT

Bel Spec Mash - servis

https://truckmanualshub.com/

200-0010-8393 FUEL TANK AND MOUNTING
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15017165	FLANGE & NIPPLE		
	002	001	09268994	VENT		
NI		001	00444613	PLUG		


Bel Spec Mash - servis

https://truckmanualshub.com/

250-0030-8393 BRAKE LINES-DRY/SLIPPERY

FROM SERIAL NO. T8391011

DRAWING NO. P10181

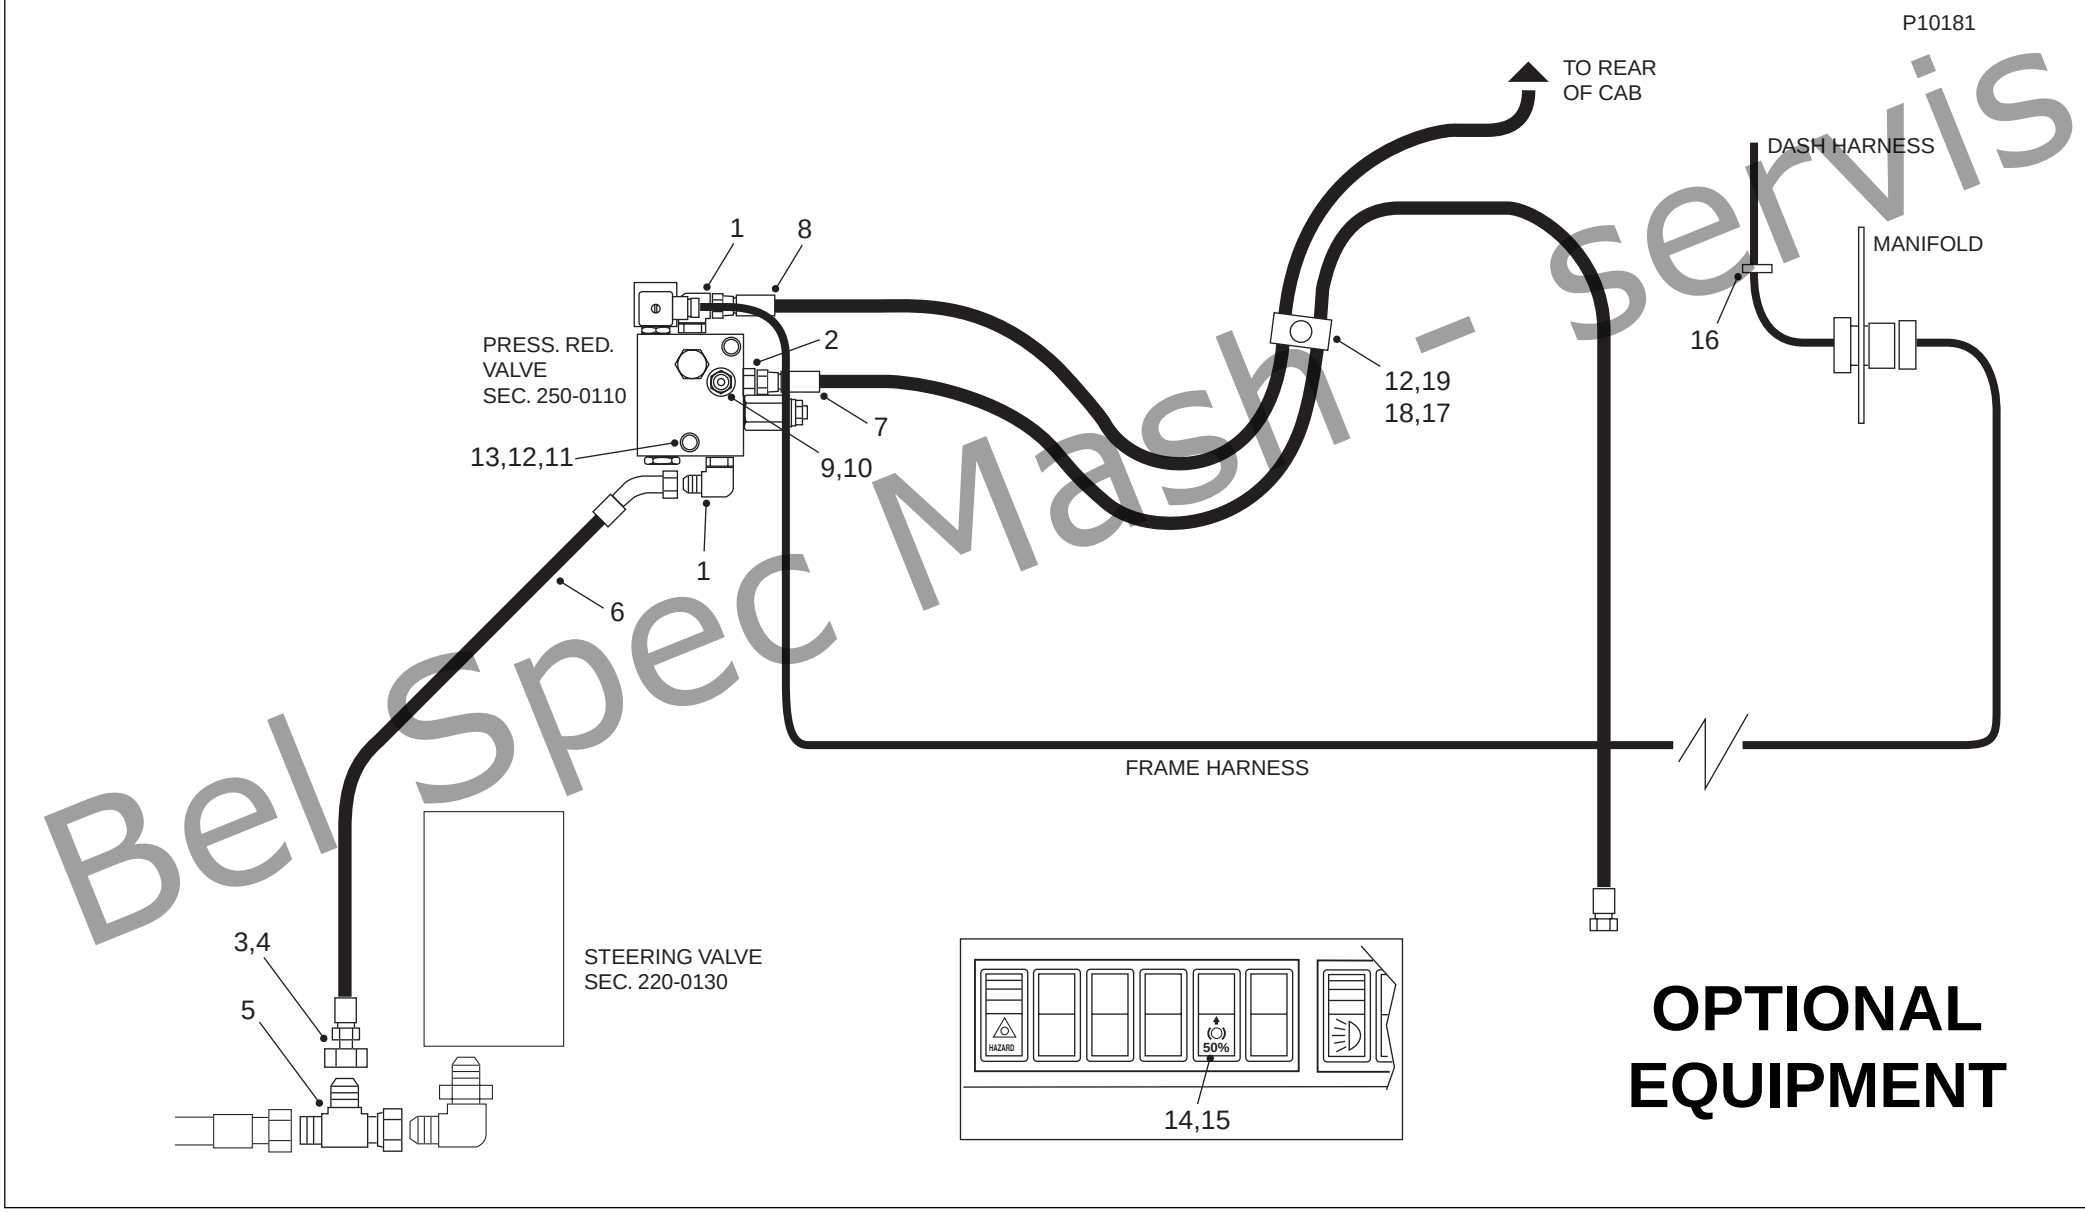

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0030-8393 BRAKE LINES-DRY/SLIPPERY
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	002	15255442	ELBOW		
	002	001	15251982	ADAPTOR		
	003	001	15253098	NUT-SWIVEL		
	004	001	15253099	REDUCER		
	005	001	15252902	TEE		
	006	001	15257113	HOSE ASSY		
	007	001	15257112	HOSE ASSY		
	008	001	15257111	HOSE ASSY		
	009	001	15251819	NIPPLE-DIAGNOSTIC		
	010	001	15025869	PLUG-DUST		
	011	002	00179828	BOLT		
	012	003	00103320	LOCKWASHER		
	013	002	09273889	PAD		
	014	001	15237166	SWITCH		
	015	001	15255078	LENS-FRONT BRAKES		
	016	ASR	09379264	TIE-CABLE		
	017	001	15253870	CLAMP-PIPE		
	018	001	15253267	BOLT-STACKING		
	019	001	15253268	PLATE-LOCKING		


Bel Spec Mash - servis

https://truckmanualshub.com/

250-0110-8393 PRESSURE REDUCING VALVE
FROM SERIAL NO. T8391011

DRAWING NO. P8484

P8484

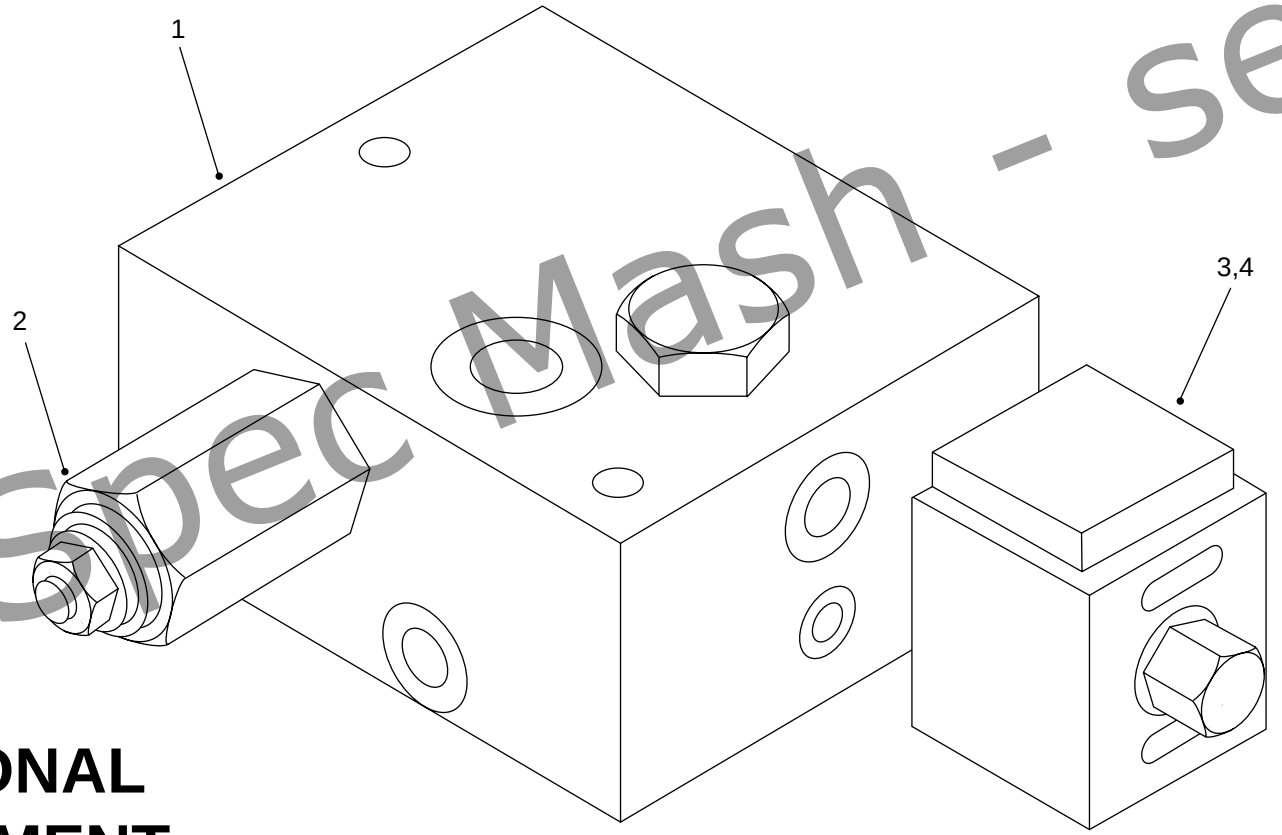

OPTIONAL EQUIPMENT

Bel Spec Mash - servis

https://truckmanualshub.com/

250-0110-8393 PRESSURE REDUCING VALVE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15251475	VALVE-PRESS RED HIC		
A	002	001	15269873	.CARTRIDGE-PRESS RED		
B	003	001	15269951	.VALVE-SOLENOID		
	004	001	15267578	.COIL		

NOTES:
A 15269876 SEAL KIT- PRESSURE REDUCING VALVE
B 15269952 SEAL KIT


Bel Spec Mash - servis

https://truckmanualshub.com/

260-0210-8393 FIRE EXTINGUISHER
FROM SERIAL NO. T8391011

DRAWING NO. P9624

P9624

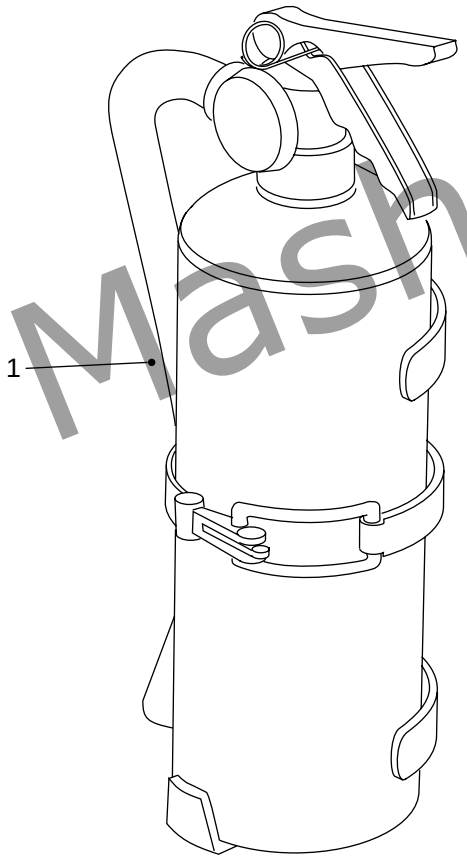

OPTIONAL EQUIPMENT

BolSpec Mash - servis

https://truckmanualshub.com/

260-0210-8393 FIRE EXTINGUISHER
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15253397	FIRE EXTINGUISHER		


Bel Spec Mash - servis

https://truckmanualshub.com/

270-0050-8393 SPILLGUARDS
FROM SERIAL NO. T8391011

DRAWING NO. P11194

P11194

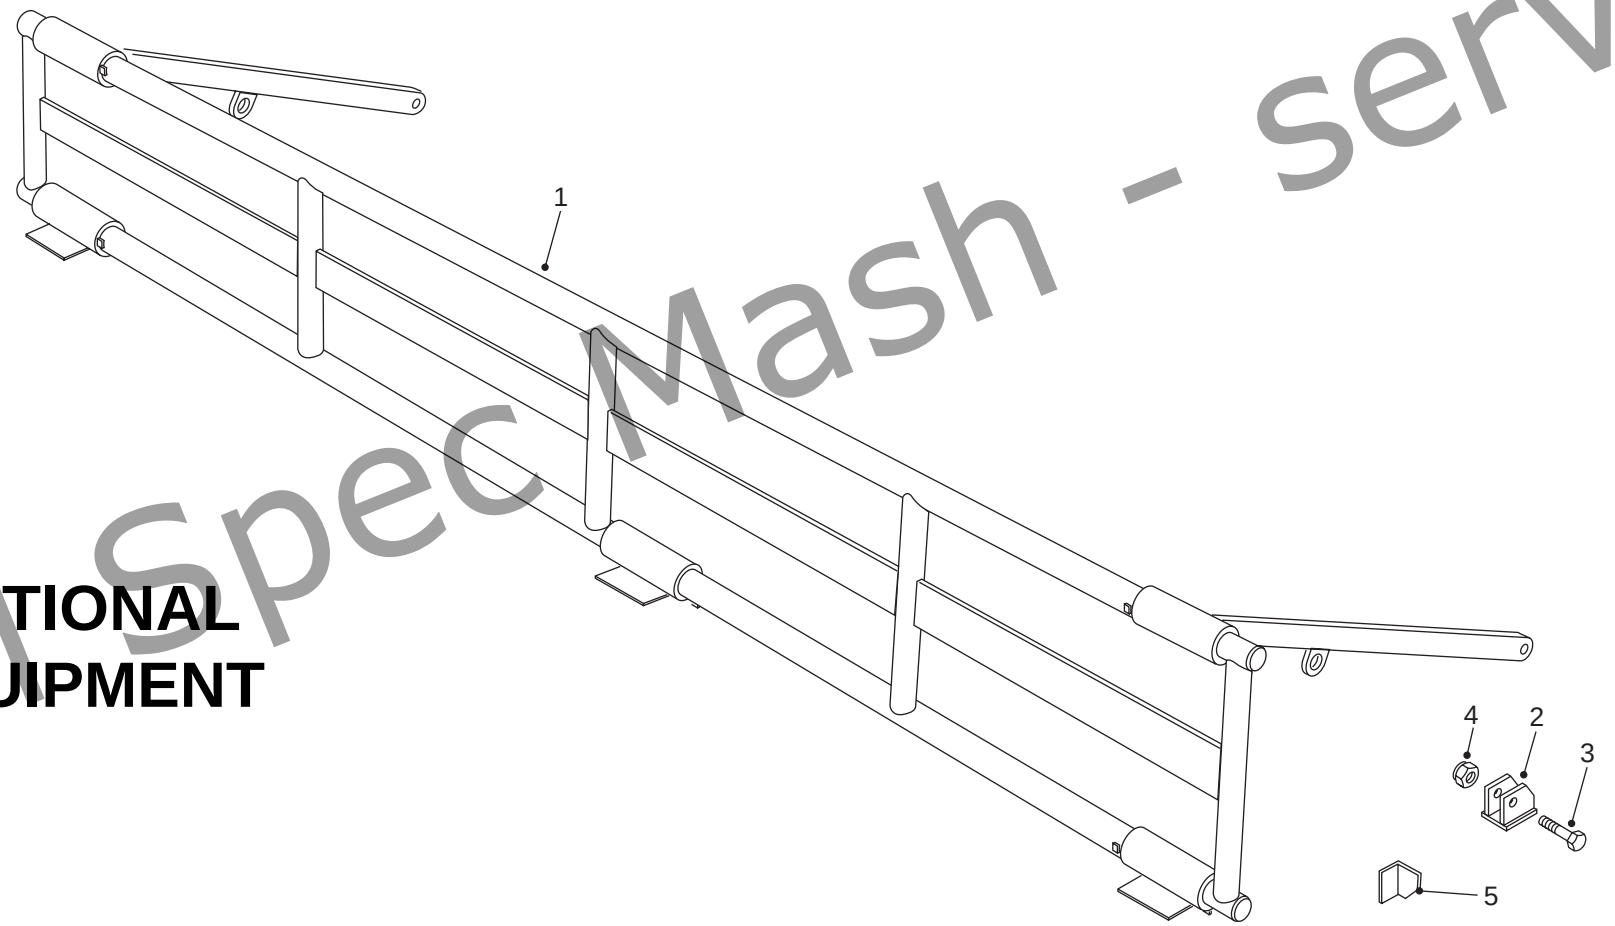

OPTIONAL EQUIPMENT

BelSpec Mash - servis

https://truckmanualshub.com/

270-0050-8393 SPILLGUARDS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15306411	SPILL GUARD ASSY		
	002	002	09263566	BRACKET-NLA		
	003	002	00271705	BOLT		
	004	002	00273852	LOCKNUT		
	005	002	09263597	ANGLE-NLA		


Bel Spec Mash - servis

https://truckmanualshub.com/

270-0052-8393 SPILLGUARD-OPERATOR
FROM SERIAL NO. T8391011

DRAWING NO. P9741

P9741

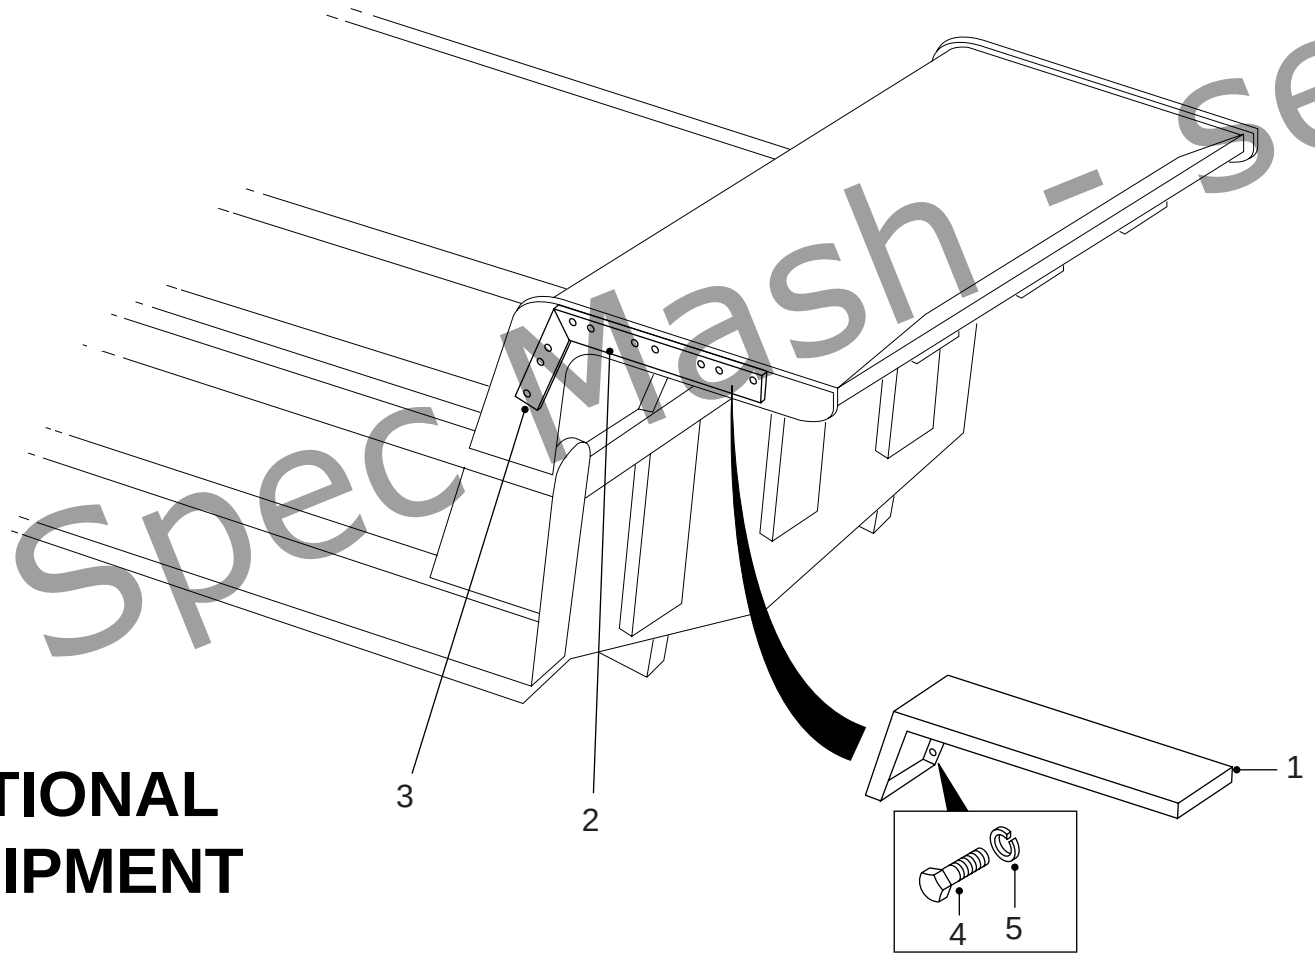

OPTIONAL EQUIPMENT

Bel Spec Mash - servis

https://truckmanualshub.com/

270-0052-8393 SPILLGUARD-OPERATOR
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	09257552	GUARD		
	002	001	09257544	PLATE		
	003	001	09257546	PLATE		
	004	010	00271554	BOLT		
	005	010	00103331	LOCKWASHER		

Bel Spec Mash - servis


https://truckmanualshub.com/

08/03

300-0010-8393 FIRST AID KIT
FROM SERIAL NO. T8391011

DRAWING NO. P8582

P8582

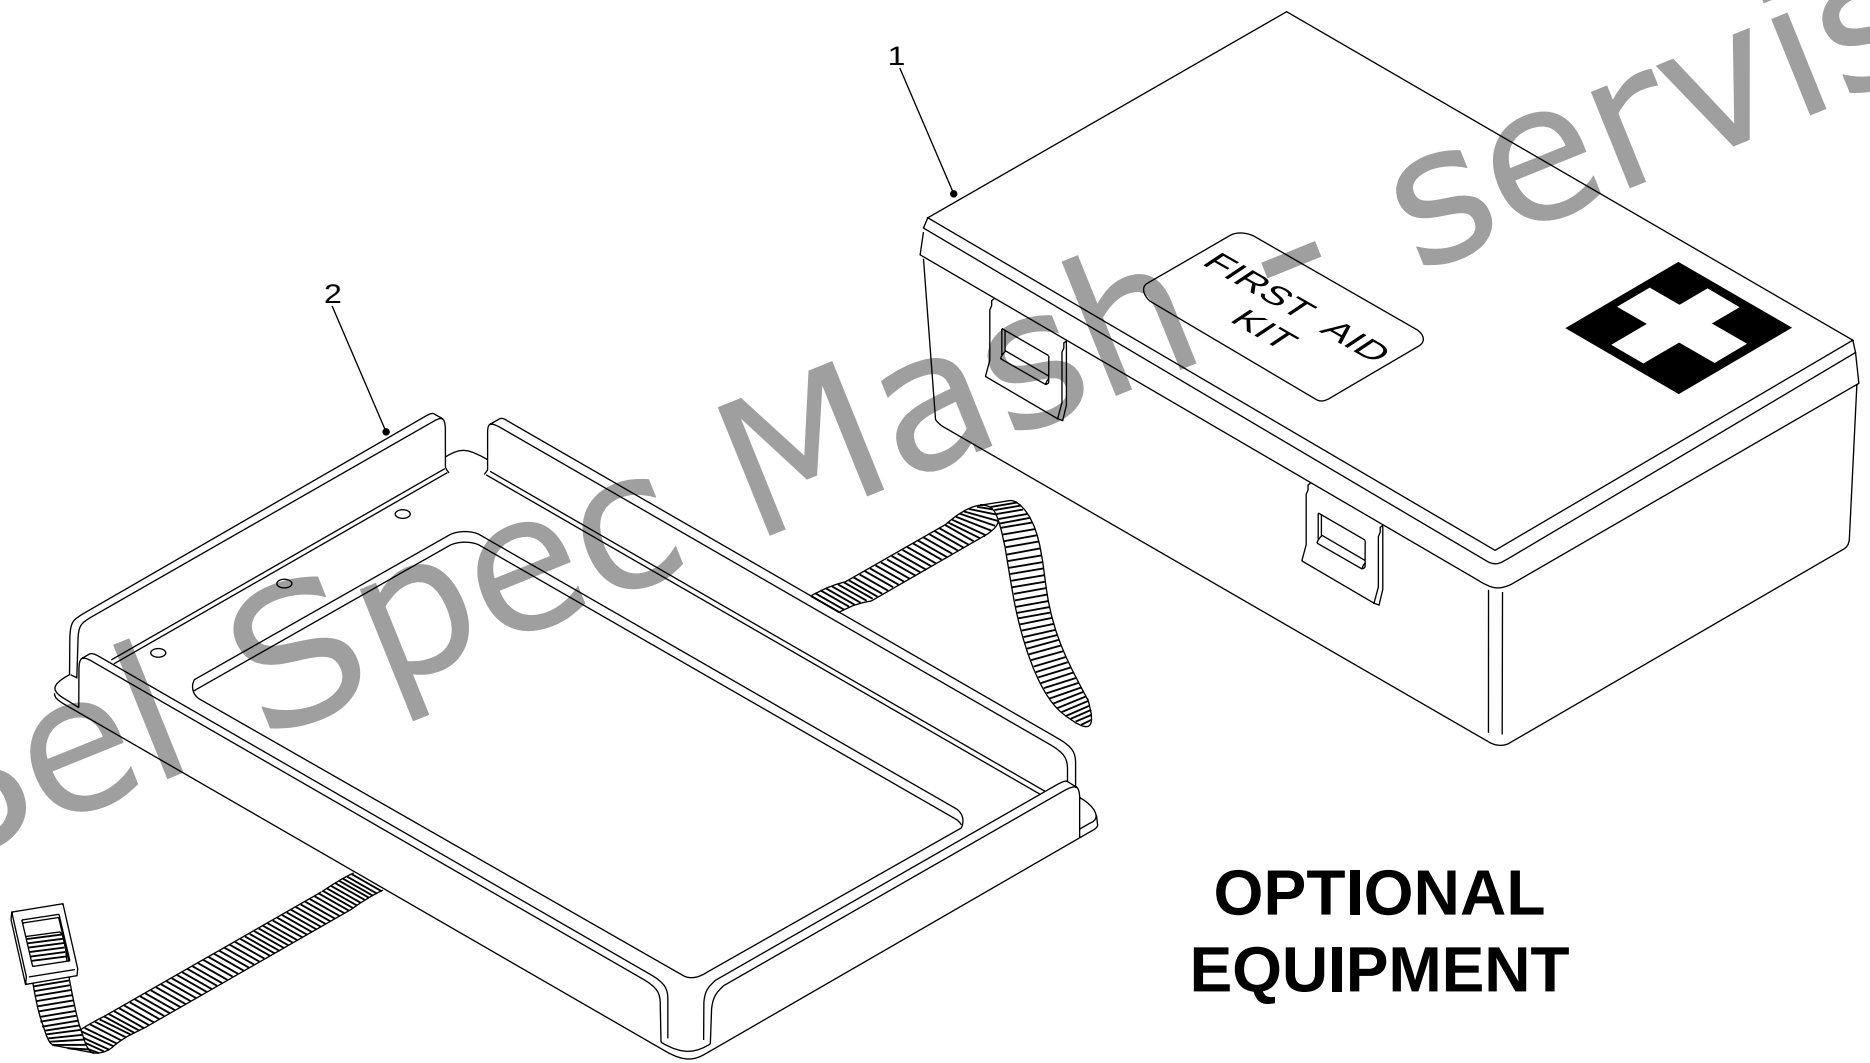

OPTIONAL EQUIPMENT

Bel Spec Mash - servis

https://truckmanualshub.com/

300-0010-8393 FIRST AID KIT
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15254112	FIRST AID KIT		
	002	001	15253774	BRACKET-FIRST AID KIT		
NI		005	00171655	SCREW		


Bel Spec Mash - servis

https://truckmanualshub.com/

300-0011-8393 HAND TOOL KIT
FROM SERIAL NO. T8391011

DRAWING NO. P8079

P8079

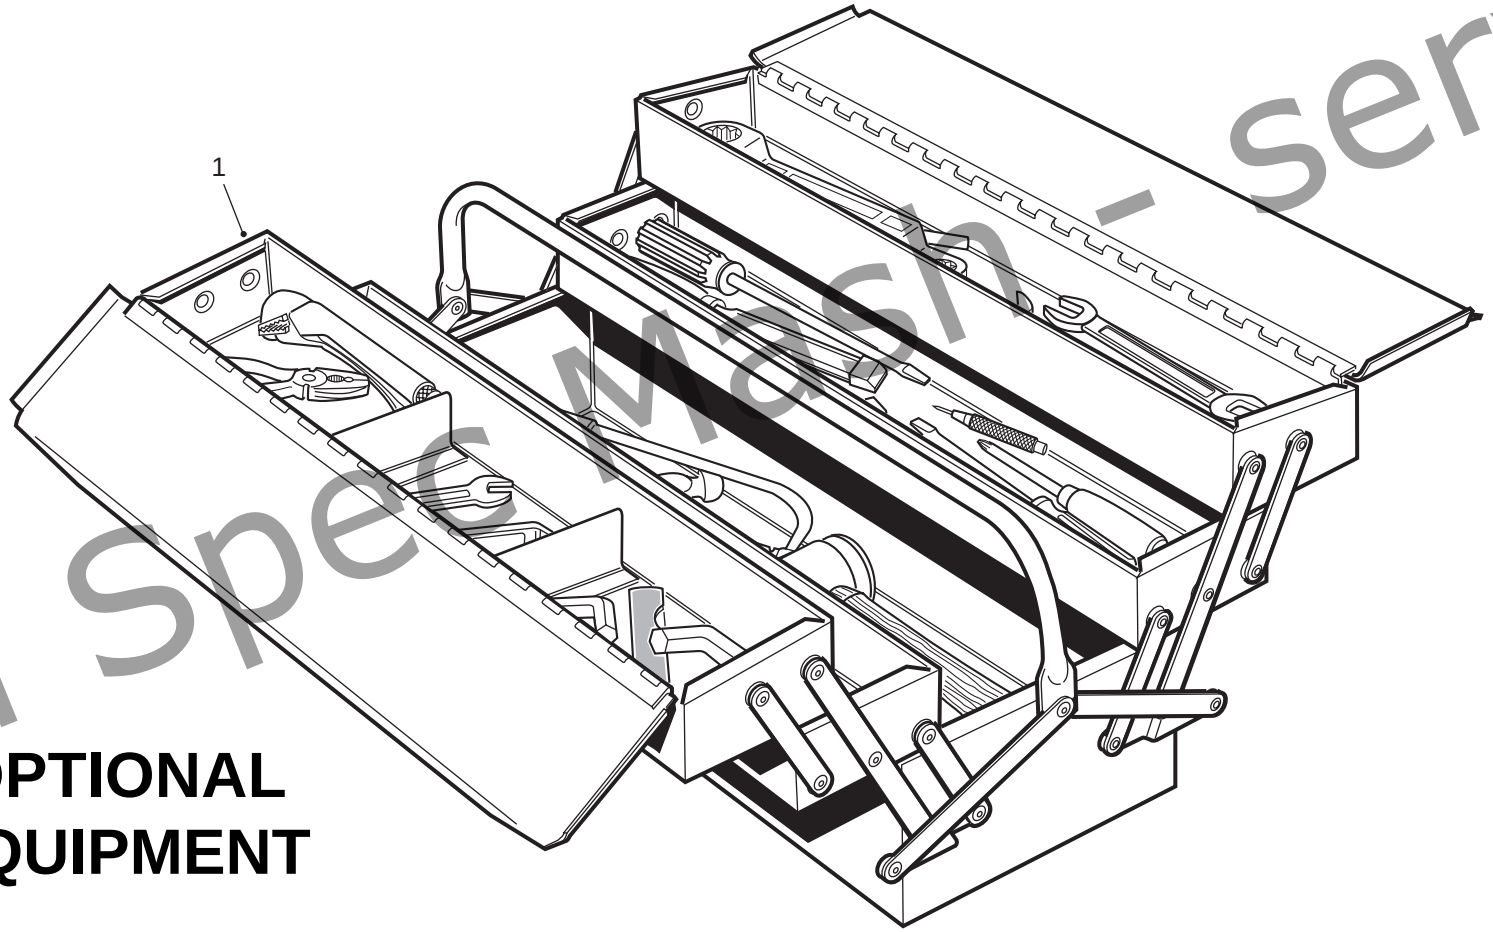

OPTIONAL EQUIPMENT

Bel Spec Mash - servis

https://truckmanualshub.com/

300-0011-8393 HAND TOOL KIT
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15250127	KIT-HAND TOOLS		


Bel Spec Mash - servis

https://truckmanualshub.com/

300-0012-8393 O RING KIT-SAE
FROM SERIAL NO. T8391011

DRAWING NO.P11346

P11346

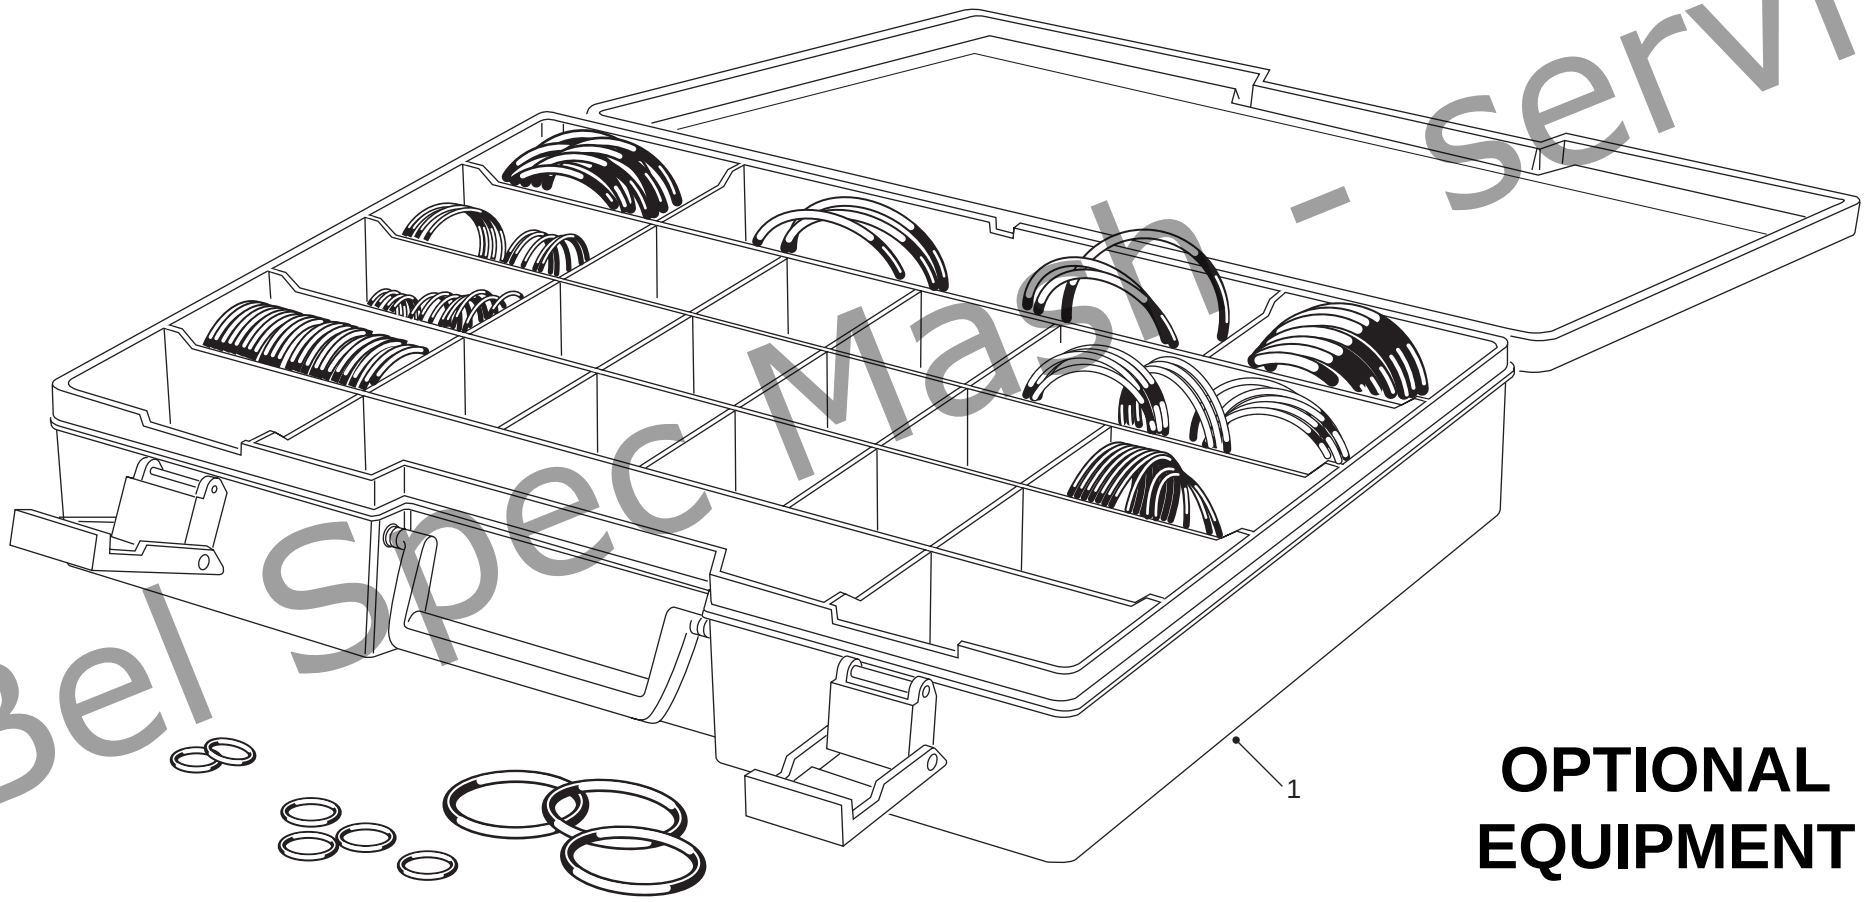

OPTIONAL EQUIPMENT

Bel Spec Mash - servis

https://truckmanualshub.com/

300-0012-8393 O RING KIT-SAE
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15050284	O RING KIT-SAE		


Bel Spec Mash - servis

https://truckmanualshub.com/

300-0013-8393 O RING KIT-ORFS
FROM SERIAL NO. T8391011

DRAWING NO.P11347

P11347

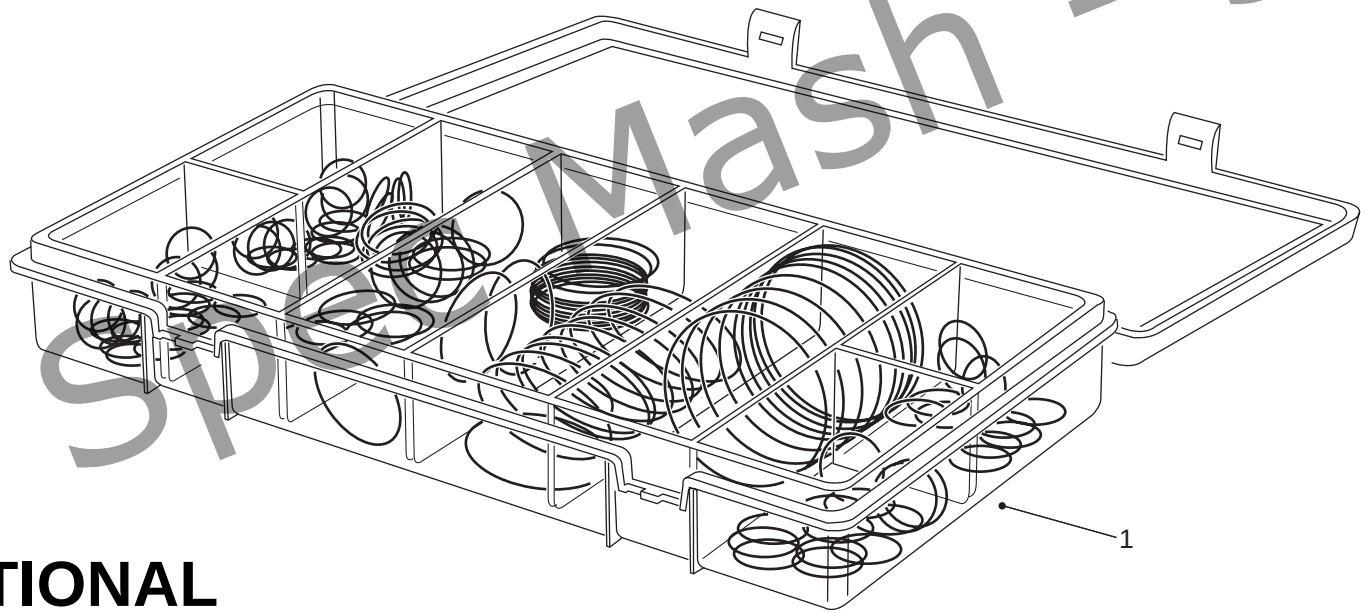

Bel Spec Mash - servis

OPTIONAL EQUIPMENT

https://truckmanualshub.com/

300-0013-8393 O RING KIT-ORFS
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15271082	O RING KIT-ORFS		

Bel Spec Mash - servis


https://truckmanualshub.com/

300-0020-8393 LUBRICATION SYSTEM
FROM SERIAL NO. T8391011

DRAWING NO. P11227

P11227

OUTLET #	LUBRICATION POINT
1	STEER CYLINDER-OUTER RH
2	STEER CYLINDER-INNER RH
3	BELLCRANK-UPPER
4	FRONT RIDE CYLINDER-RH
5	PLUGGED
6	DRAGLINK-OUTER RH
7	DRAGLINK-INNER RH
8	LIFT CYLINDER-LOWER RH

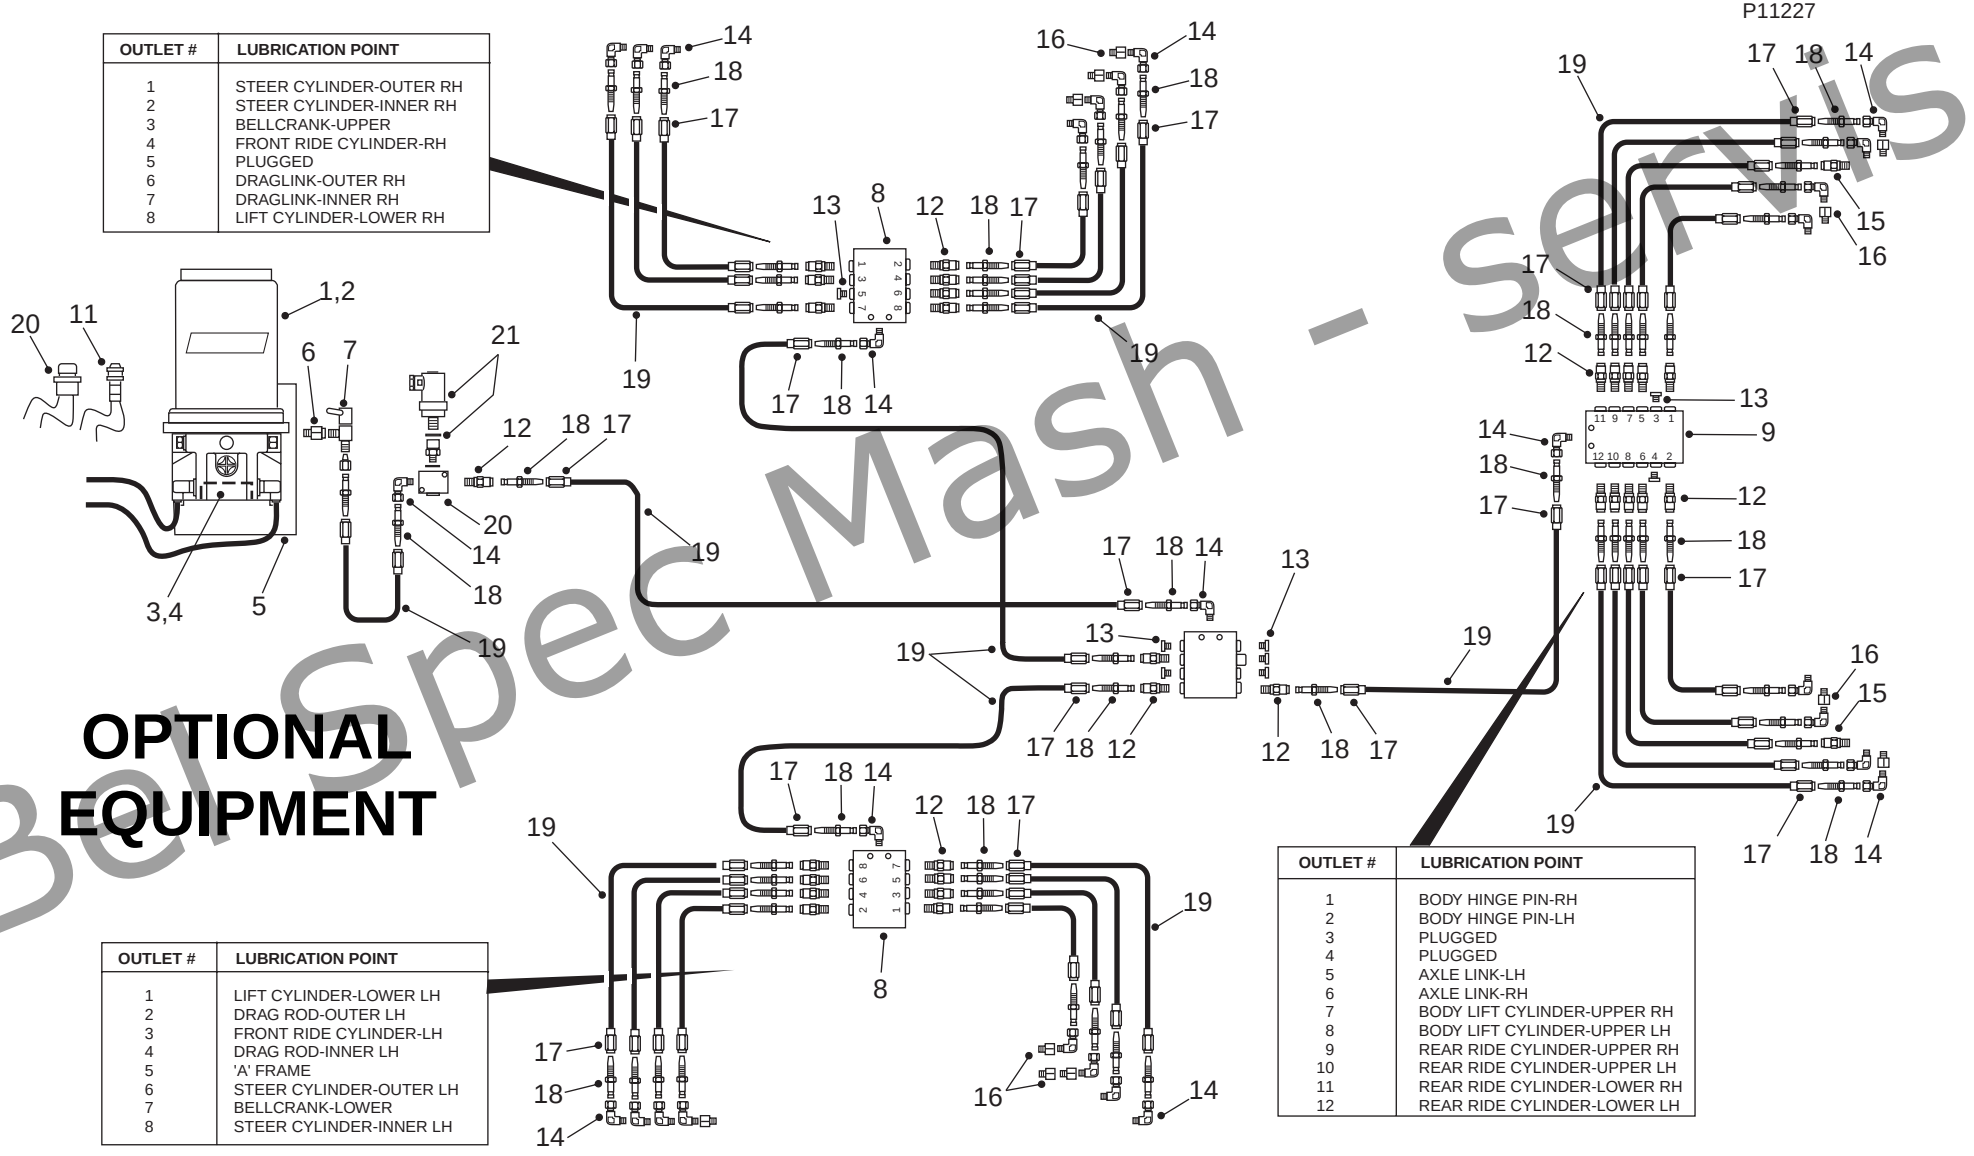

OUTLET #	LUBRICATION POINT
1	LIFT CYLINDER-LOWER LH
2	DRAG ROD-OUTER LH
3	FRONT RIDE CYLINDER-LH
4	DRAG ROD-INNER LH
5	'A' FRAME
6	STEER CYLINDER-OUTER LH
7	BELLCRANK-LOWER
8	STEER CYLINDER-INNER LH

OUTLET #	LUBRICATION POINT
1	BODY HINGE PIN-RH
2	BODY HINGE PIN-LH
3	PLUGGED
4	PLUGGED
5	AXLE LINK-LH
6	AXLE LINK-RH
7	BODY LIFT CYLINDER-UPPER RH
8	BODY LIFT CYLINDER-UPPER LH
9	REAR RIDE CYLINDER-UPPER RH
10	REAR RIDE CYLINDER-UPPER LH
11	REAR RIDE CYLINDER-LOWER RH
12	REAR RIDE CYLINDER-LOWER LH

BelSpec Mash - series

https://truckmanualshub.com/

300-0020-8393 LUBRICATION SYSTEM
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	15274307	GREASE PUMP ASSY		
	002	001	15274943	.RESERVOIR 8 LITRE		
	003	001	15275348	.PUMP ELEMENT WITH ASSY		
	004	001	15275349	.VDC CONTROL CARD		
	005	001	15500694	FLAT BKT-PUMP MTG		
	006	001	15275629	ADAPTOR-SAFETY VALVE		
	007	001	15273146	VALVE-SAFETY		
	008	002	15273149	METERING BLOCK-SSV8		
	009	001	15273150	METERING BLOCK-SSV12		
	010	001	15273148	METERING BLOCK-SSV8K		
	011	001	15500645	ILLUM PUSHBUTTON 24V		
	012	028	15275170	CHECK ASSY (PIF)		
	013	012	15500644	PLUG		
	014	003	15273649	ADAPTOR		
	015	024	15273650	ELBOW		
	016	012	15273163	ADAPTOR-1/8 EXTENSION		
	017	060	15273164	SLEEVE-HOSE		
	018	060	15273165	STUD-HOSE		
	019	ASR	15273166	HOSE-PLASTIC 10M LG(FILLED)		
	020	001	15500640	LUBE FTG BLOCK-1 WAY		
	021	001	15500639	KIT-PRESS WARNING		
	NI	001	15273153	FUSE HOLDER & 5AMP FUS		
	NI	ASR	15273167	HELIX-PROTECTOR BULK		
	NI	002	15500695	TUBE-STEERING ROD		

NOTES:
A KIT-REPAIR 15273145 24V MOTOR INCLUDES ONE EACH:24V MOTOR, CONNECTOR,WOODRUFF KEY,SHAFT SEAL AND TWO O RINGS SIZE 144x4

Bel Spec Mash - servis


https://truckmanualshub.com/

300-0025-8393 CENTRAL OIL LUBRICATION SYSTEM

FROM SERIAL NO. T839100

DRAWING NO. P11342

P11342

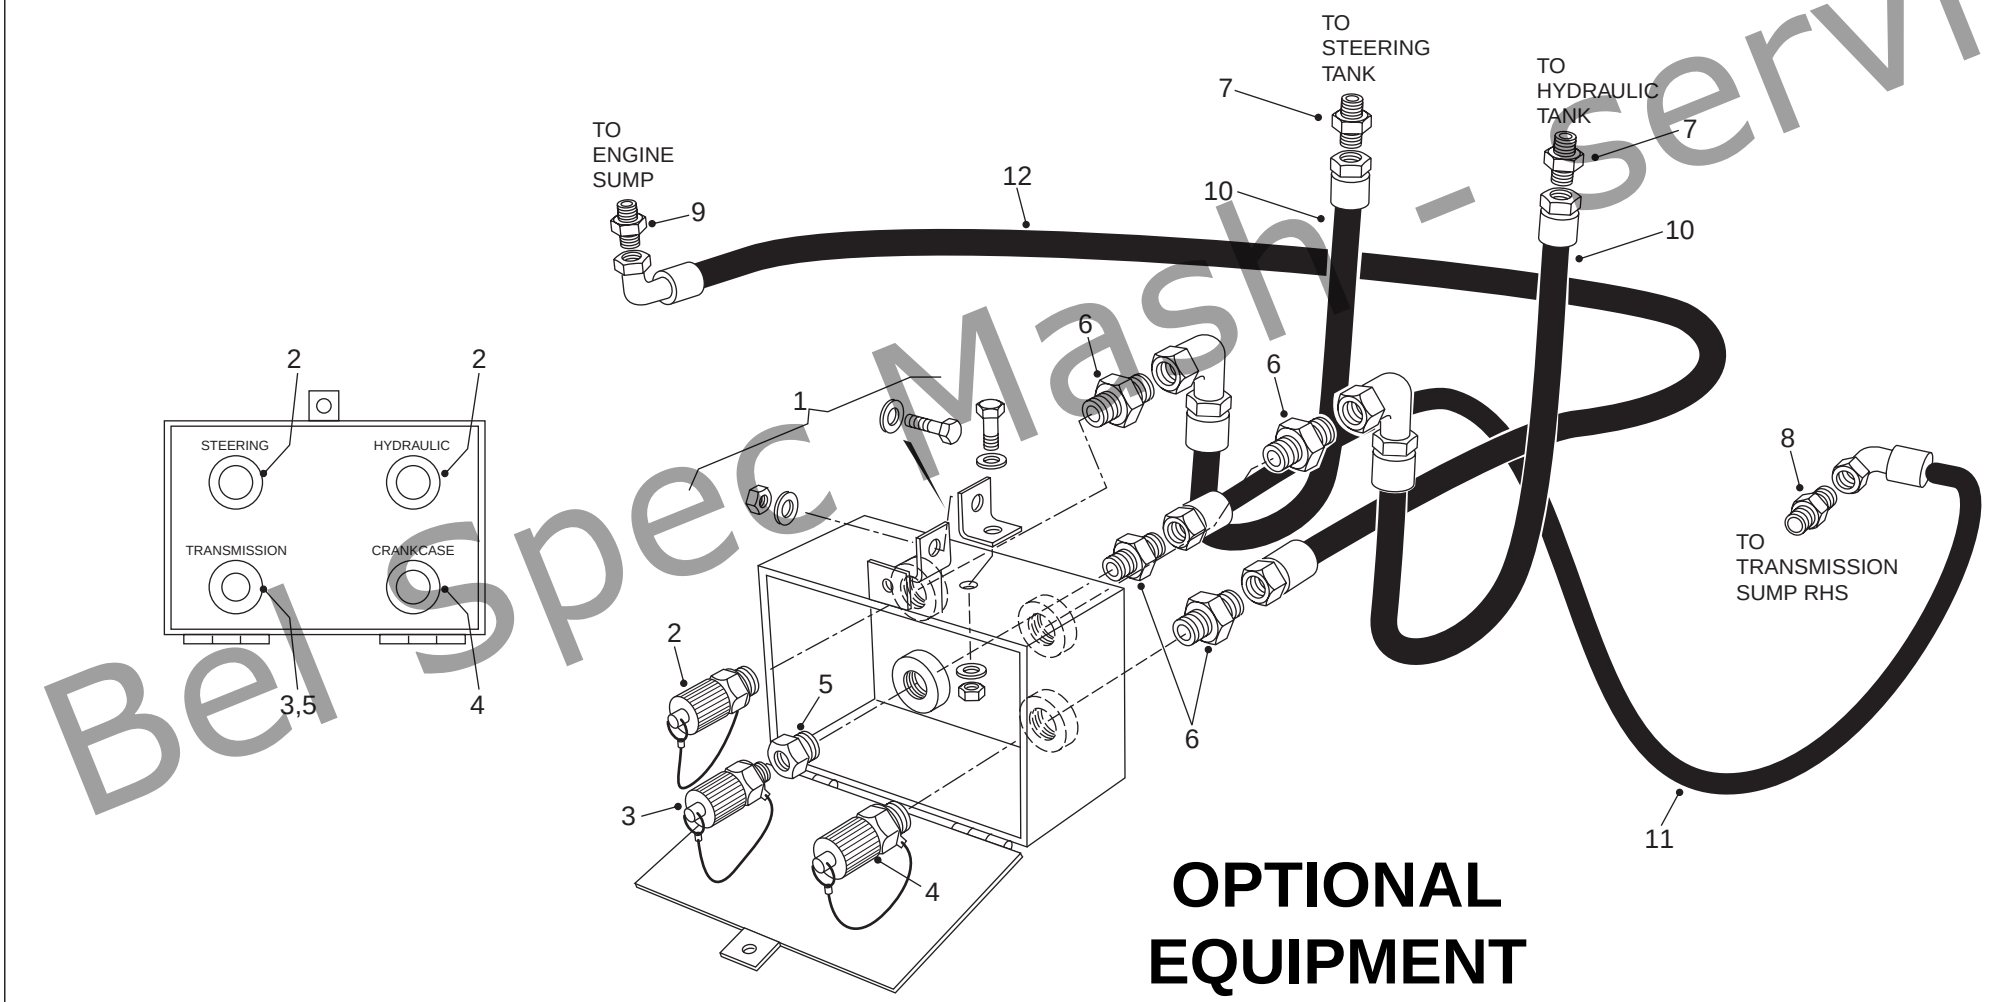

OPTIONAL EQUIPMENT

Bel Spec Mash - servis

https://truckmanualshub.com/

300-0025-8393 CENTRAL OIL LUBRICATION SYSTEM
FROM SERIAL NO. T8391011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
	001	001	15500857	SERVICE PANEL BOX		
	002	002	15500858	RECEIVER-HYD & STEERING		
	003	001	15500859	RECEIVER-TRANS		
	004	001	15500860	RECEIVER-CRANKCASE		
	005	001	15500861	BUSHING-REDUCER		
	006	004	15500862	ADAPTOR		
	007	002	15500863	CONNECTOR		
	008	001	15500864	CONNECTOR		
	009	001	15500865	CONNECTOR		
	010	002	15500866	HOSE ASSY		
	011	001	15500867	HOSE ASSY		
	012	001	15500868	HOSE ASSY		

Bel Spec Mash - servis

https://truckmanualshub.com/

THIS PAGE IS INTENTIONALLY LEFT BLANK

Bel Spec Mash - servis