https://truckmanualshub.com/

PARTS BOOK

SANYI

SRT95C Off–highway truck

Equipment No.14RT95100040

https://truckmanualshub.com/

https://truckmanualshub.com/

Preface

Dear clients:

Thanks for you purchasing mining dump truck via SANY mining equipment co., Ltd. We will provide excellent products and first class service to you. Please read instruction carefully at below that will help you easily to understand this parts book.

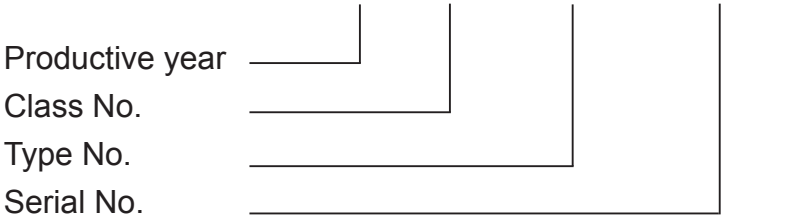
Summary

This book has contained all spare parts and components that are used on maintenance period of your equipment.

Ex-work No.

There is a Ex-work No. with truck when it has been made that used to indicate what kind of type truck have you purchased ,we could provid spare parts and excellent service to you by that Ex-work No. quickly When there are any problems with your truck.

Such as: 10 RT 9510 0001



About illustration

A lot of explosion view are used in this book, depending on the function of your truck.

https://truckmanualshub.com/

Guidance

The parts book has provided with other documents and manuals. Our client and service engineer could get some useful information from the book on fixing period .

This book compiled for SRT 95 mining dump truck that has contained following contents:

Front wheel assembly\Front axle assembly\Rear axle assembly and installation\Rear Wheel Assembly\Rear Suspension System\Engine and mounting\Transmission and mounting\Fender and platform mounting\Cab mounting\Transmission oil filter assembly\Driveline installation\Air cleaner and mounting\Exhaust system assembly\Cab steering pipeline and pipe joint\Brake pipeline and joint of cab\Air Conditioning System\Central Lubrication System etc.

Illustration: the illustration has shown all separation parts accurately which composed the component of the truck, that just to be a reference, cause of no details has been shown by it. All of parts has an Arabic numerals for easily find it from the spare parts list and order it from our company.

Spare parts list: this form has composed by one page or few pages, the spare parts that are following the Arabic numerals to list out which mark on the assembly illustration. First column is Item No., second column is Part No., third column is Description, the fourth column is Quantity, the fifth column is Remark.

https://truckmanualshub.com/

Spare Parts Quality Guarantee

We guarantee: the warranty period of all of spare parts is 6 months or 1000Hrs after sold, we will repair or replace new one for you when the machine damaged or failure due to the reason of materials or manufacturing defect.

The following situations are outside of the scope of the warranty, Negligence, modification without permission, accident or overload.

In the warranty period, after all damaged or failure parts has been arrived SANY mining equipment co., Ltd, we would determinate them in reasonable time.

The failure parts or accessories has to deliver to our company on warranty time or on replacement period with copy of invoice or warranty list.

* * * * *

Guarantee uniqueness

We just duty on spare parts and accessories which sold from SANY mining equipment co., Ltd without other responsibility and obligation.

SANY mining equipment co., Ltd,(SANYI)

https://truckmanualshub.com/

https://truckmanualshub.com/

TABLE OF CONTENTS

Group 1 SRT95C Off–highway truck 1–1
12800040 SRT95C Off–highway truck 1–2

Group 2 Front wheel assembly 2–1
11605564 Front wheel assembly 2–2
11605565 Tyre and rim assembly 2–4

Group 3 Front axle assembly SRT95C.032 3–1
13320708 Front axle assembly SRT95C.032 3–2
13320616 Right front axle assembly SRT95C.032.2 3–4
13298846 Assembly of front oil–cooled disc brake 3–6
13295273 Front wheel and installation SRT95C.032. 3–10
12889569 Steering arm assembly 3–12
12920652 Steering mechanism 3–14
12903209 Tie rod assembly 3–16
60212671 Steering cylinder 3–18
12890691 Steering crank assembly 3–20
13320599 Left front axle assembly SRT95C.032.1 3–22

Group 4 Rear axle assembly and installation 4–1
12952346 Rear axle assembly and installation 4–2

12952338 Assembly of rear axle ····· 4–4
11508484 Planetary assembly and axle shaft ····· 4–6
11508485 Planetary assembly ····· 4–8
11460587 Rear hub assembly ····· 4–12
11510897 Rear brake assembly ····· 4–14
B230101002024 Dynamic seal assembly ····· 4–16
11510862 Brake assembly ····· 4–18
11189898 Piston housing assembly ····· 4–22
12951175 Rear axle housing assembly ····· 4–24
11183403 Breather ····· 4–28
11479985 Main reducer and differential assembly ····· 4–30
11473323 Yoke assembly ····· 4–34
11474421 Main reducer housing assembly SRT95.050. ····· 4–36
11182915 Differential assembly ····· 4–38
12951167 Rear axle mounting parts ····· 4–40

Group 5 Accessories of cab ····· 5–1
12952471 Accessories of cab ····· 5–2
12955478 Fixing of cab accessories ····· 5–4
11217564 Steering column assembly ····· 5–6
11569436 Accelerograph controller assembly ····· 5–8
12927012 Driver's cab harness ····· 5–10
A229900010580 Evaporator Assy. ····· 5–12
11569403 Seat assembly ····· 5–14
60127236 Mechanical Suspension Driver seat ····· 5–16
A229900009850 Mechanic suspension auxiliary driving seat ····· 5–18
12933082 Switch and meter ····· 5–20
A249900001541 Monitor ····· 5–24

https://truckmanualshub.com/

12933079 Control board installation ····· 5–26
60100460 Central distribution case ····· 5–32
60198294 Central distributioncase ····· 5–34

Group 6 Subassembly of rigid dump ····· 6–1
12952315 Subassembly of rigid dump ····· 6–2
12952316 Subassembly of rigid dump truck cab ····· 6–4
12985767 Body, cab JKGX06.1 ····· 6–10
12990476 Assembly, of, SRT95C, decoration JKGX06. ····· 6–14
11550237 Electrical system,cab ····· 6–18

Group 7 Rear wheel assembly ····· 7–1
11508133 Rear wheel assembly ····· 7–2
11508135 Rear inner tyre and rim assembly ····· 7–4
11508134 Rear outer tyre and rim assembly ····· 7–6

Group 8 Rear Suspension System ····· 8–1
11945738 Rear Suspension System ····· 8–2
12690092 Rear Suspension Cylinder ····· 8–4

Group 9 Engine installation ····· 9–1
12955811 Engine installation ····· 9–2
12955665 Engine installation ····· 9–4
B220200000163 Engine ····· 9–6
A222100000615 Filter, diesel ····· 9–8
12867945 Engine – power takeoff ····· 9–10

60234833 Flanging coupling ····· 9–12
12867826 PTO assembly ····· 9–14
11576510 Compressor installation ····· 9–16

Group 10 Transmission oil filter assembly ····· 10–1
10504472 Transmission oil filter assembly ····· 10–2
10504474 Hose assembly 1 ····· 10–4
A222100000611 Filter ····· 10–6
10504476 Hose assembly 2 ····· 10–8

Group 11 Transmission and mounting ····· 11–1
12951889 Transmission and mounting ····· 11–2
12951890 Transmission mounting ····· 11–6
12951895 Power take–off assembly ····· 11–8
11624261 Transmission retarder control ····· 11–10

Group 12 Driveline installation ····· 12–1
10511218 Driveline installation ····· 12–2
60001267 Front driveline ····· 12–4
60001261 Rear driveline ····· 12–6

Group 13 Air cleaner and pipeline installation ····· 13–1
12951956 Air cleaner and pipeline installation ····· 13–2
A222100000601 Air cleaner ····· 13–4

Group 14 Exhaust tube installation srt95c.191 ····· 14–1

https://truckmanualshub.com/

13367057 Exhaust tube installation srt95c.191 14–2
12946197 Fixed clamp assembly 14–4
12946192 Fixed clamp 14–6

Group 15 Radiator and pipeline installation 15–1
12951932 Radiator and pipeline installation 15–2
12952514 Cooler 15–6

Group 16 Water tank mounting and lines 16–1
10506336 Water tank mounting and lines 16–2

Group 17 Disc brake oil cooler installation assembly 17–1
10495190 Disc brake oil cooler installation assembly 17–2

Group 18 Tranmission cooling piping mounting 18–1
12950173 Tranmission cooling piping mounting 18–2

Group 19 Frame component 19–1
12955995 Frame component 19–2

Group 20 Fender and platform mounting 20–1
12950946 Fender and platform mounting 20–2
12361876 Battery box assembly 20–12
11628499 Step 20–16

Group 21 Air–conditioner pipeline installation 21–1

12952088 Air–conditioner pipeline installation ····· 21–2

Group 22 Body and mounting ····· 22–1
12953150 Body and mounting ····· 22–2

Group 23 Radiator guard assembly ····· 23–1
12950841 Radiator guard assembly ····· 23–2

Group 24 Battery installation ····· 24–1
12939118 Battery installation ····· 24–2
60125384 Push–Button Switch ····· 24–4

Group 25 Illuminating lamp installation ····· 25–1
12931513 Illuminating lamp installation ····· 25–2
10252432 alarm system of tail lamp light ····· 25–4

Group 26 Cable and harness ····· 26–1
12927135 Cable and harness ····· 26–2
12927060 Headlamp harness ····· 26–6
12927063 Engine ECU harness ····· 26–8
12927064 Starter relay power harness ····· 26–10
12927059 Engine earthing cable ····· 26–12
12927054 Starter motor earthing cable ····· 26–14
12927053 Starter motor power cable ····· 26–16
12927058 Generator earthing cable ····· 26–18

https://truckmanualshub.com/

12927062 Fuse to generator cable ····· 26–20
12927056 Starter motor parallel earthing cable ····· 26–22
12927055 Starter motor positive parallel cable ····· 26–24
12927050 Battery serial cable ····· 26–26
12927051 Battery parallel cable ····· 26–28
12927049 Vehicle body harness ····· 26–30
12927061 Tail lamp harness ····· 26–32
12927052 Battery to main switch cable ····· 26–34
12927067 Battery negative earthing cable ····· 26–36
12927065 Branch cable ····· 26–38
12927057 Main switch to fuse cable ····· 26–40
12942629 32 Core Round Plug harness ····· 26–42
12927066 Can bus harness ····· 26–44
12942615 GPS harness ····· 26–46

Group 27 Vehicle detecting assembly ····· 27–1
12926818 Vehicle detecting assembly ····· 27–2
12926879 Body approach switch installation ····· 27–4

Group 28 Fuel tank assembly and pipeline installation ····· 28–1
12952808 Fuel tank assembly and pipeline installation ····· 28–2
B229900005676 Primary filter ····· 28–6
12952398 Fuel tank ····· 28–8

Group 29 Steering pipeline ····· 29–1
12953022 Steering pipeline ····· 29–2
12952974 Steering valve group and adaptor ····· 29–6

60000783 Steering valve group ····· 29–8
12952854 Steering gear and adaptor ····· 29–10

Group 30 Lifting pipeline ····· 30–1
12954513 Lifting pipeline ····· 30–2
12954500 Balanced valve group group ····· 30–12
60000962 Balance valve block unit ····· 30–14
12954498 Lifting valve group ····· 30–16
12954497 Leading oil sources valve group assem ····· 30–18
60009300 Pilot valve ····· 30–20
12954514 Lifting pump assembly ····· 30–22
60212670 Hoisting cylinder ····· 30–24

Group 31 Cooling pipeline for discs braking SRT95 ····· 31–1
13428981 Cooling pipeline for discs braking SRT95 ····· 31–2
21000745 Testing connector ····· 31–20
21022084 Valve, one–way ····· 31–22

Group 32 Brake pipeline and adaptor ····· 32–1
12954489 Brake pipeline and adaptor ····· 32–2
12954468 Brake valve group & adaptor installation ····· 32–12
60189516 Brake valve group ····· 32–14
60211733 Piston type accumulator ····· 32–16
B230103000461 Hose, rubber ····· 32–18
12954450 Assembly of brake distributor block ····· 32–20

Group 33 Brake pipeline and adaptor SRT95C.615A ····· 33–1

https://truckmanualshub.com/

13237984 Brake pipeline and adaptor SRT95C.615A 33–2
13237985 Foot–operated valve adaptor installation 33–6

Group 34 Hydraulic oil tank installation SRT95C.6 34–1
13294563 Hydraulic oil tank installation SRT95C.6 34–2
13294564 Hydraulic fuel tank assy. SRT95C.641.1 34–4

Group 35 Steering pipeline and pipe joint 35–1
12954463 Steering pipeline and pipe joint 35–2
12954053 Plunger pump installation 35–10
12954434 Buffering valve block adaptor installation 35–12
60000781 Buffering valve block unit 35–14
60211734 Piston Accumulator 35–16
12954443 Adaptor installation of pipeline filter 35–18
24005054 Filter 35–20

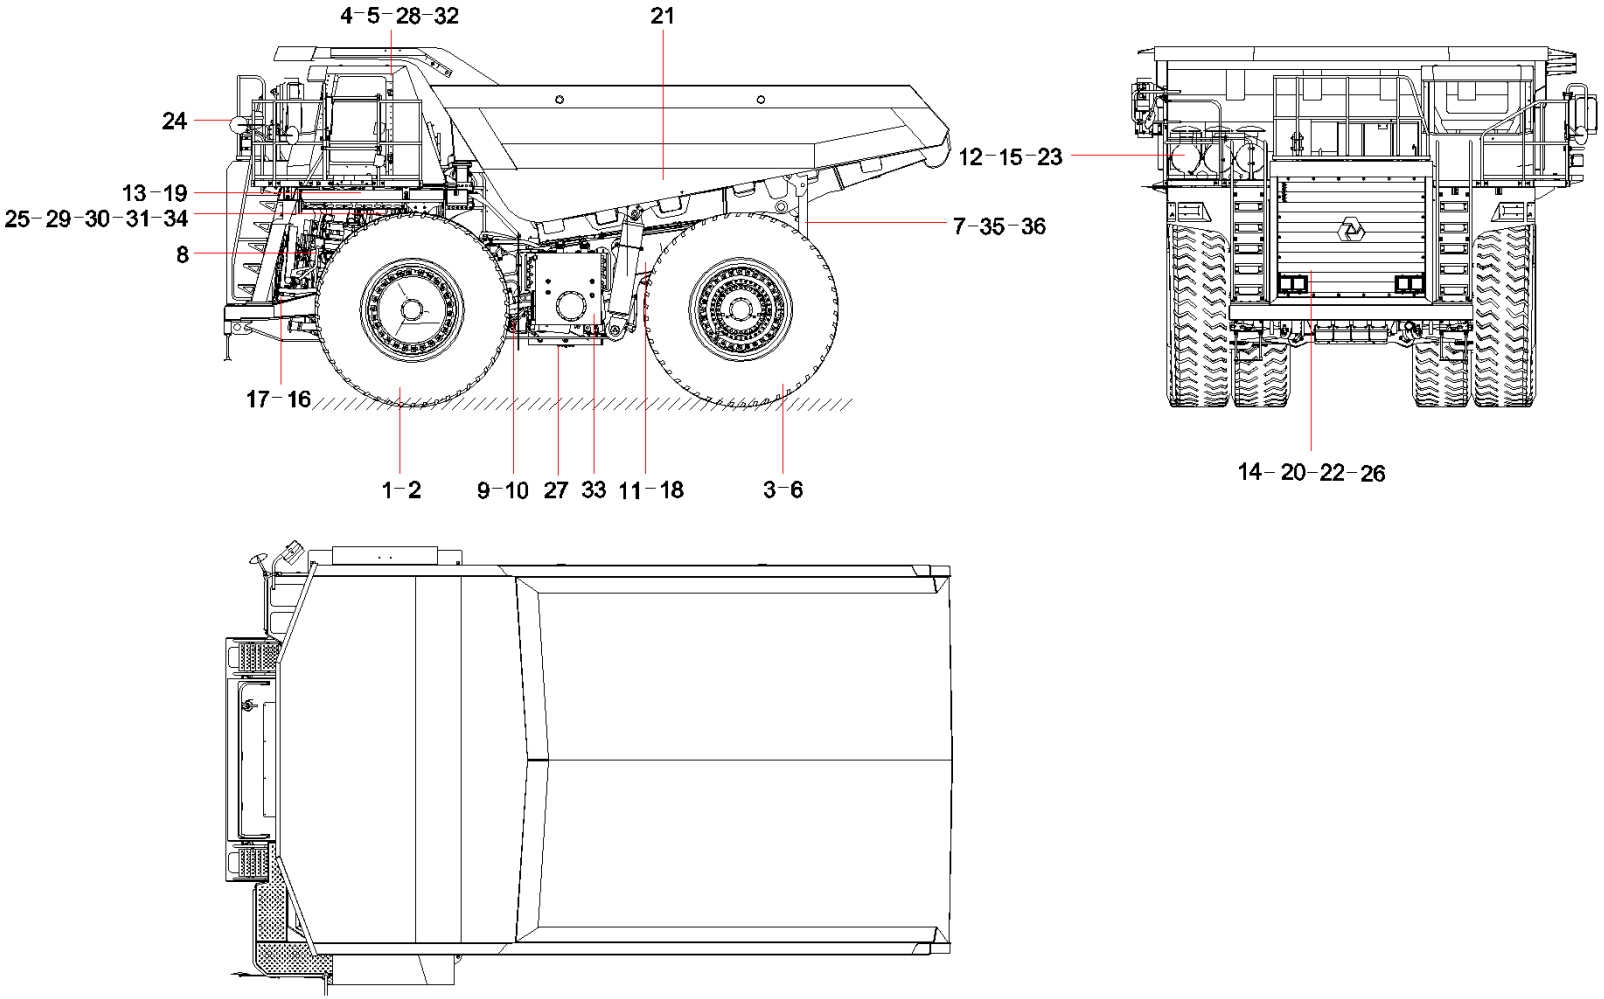
Group 36 Labeling layout 36–1
12953547 Labeling layout 36–2

Group 37 Manual lubrication system 37–1
12943163 Manual lubrication system 37–2

https://truckmanualshub.com/

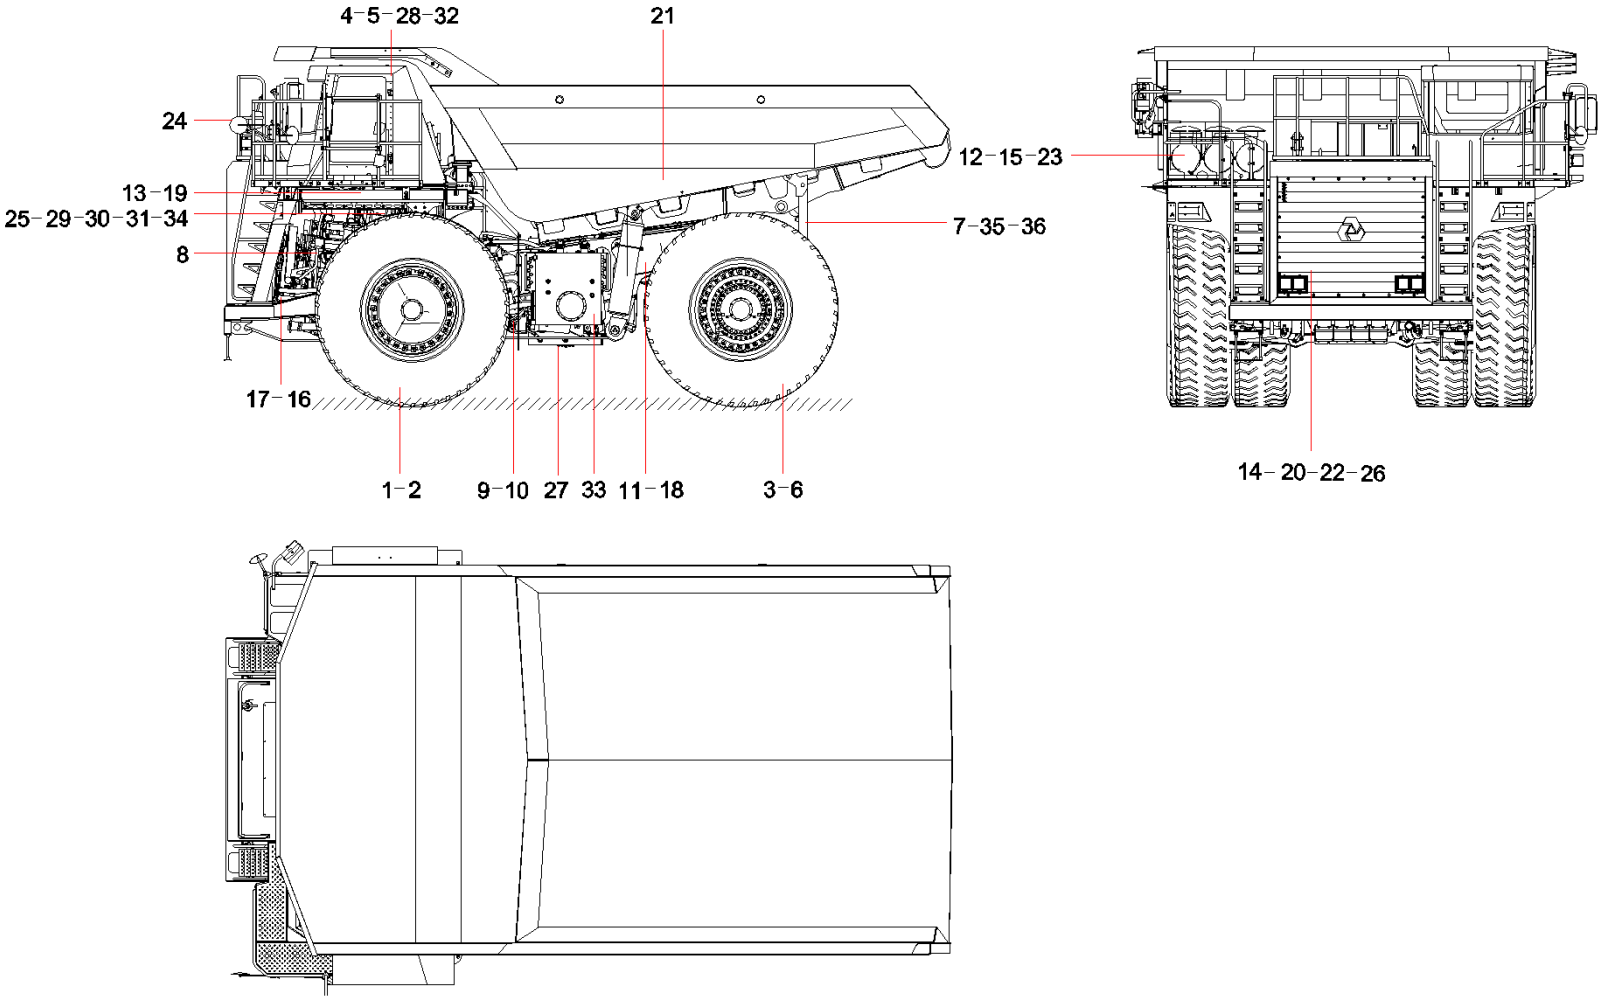
https://truckmanualshub.com/

Group 1
SRT95C　Off–highway truck


4–5–28–32
21
24
12–15–23
13–19
25–29–30–31–34
7–35–36
8
17–16
1–2
9–10
27
33
11–18
3–6
14–20–22–26

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11605564	Front wheel assembly	2	
2	13320708	Front axle assembly SRT95C.032	1	
3	12952346	Rear axle assembly and installation	1	
4	12952471	Accessories of cab	1	
5	12952315	Subassembly of rigid dump	1	
6	11508133	Rear wheel assembly	2	
7	11945738	Rear Suspension System	2	
8	12955811	Engine installation	1	
9	10504472	Transmission oil filter assembly	1	
10	12951889	Transmission and mounting	1	
11	10511218	Driveline installation	1	
12	12951956	Air cleaner and pipeline installation	1	
13	13367057	Exhaust tube installation srt95c.191	1	
14	12951932	Radiator and pipeline installation	1	
15	10506336	Water tank mounting and lines	1	
16	10495190	Disc brake oil cooler installation assembly	1	
17	12950173	Tranmission cooling piping mounting	1	
18	12955995	Frame component	1	
19	12950946	Fender and platform mounting	1	
20	12952088	Air–conditioner pipeline installation	1	
21	12953150	Body and mounting	1	
22	12950841	Radiator guard assembly	1	


4–5–28–32
21
24
12–15–23
13–19
25–29–30–31–34
7–35–36
8
17–16
1–2
9–10
27
33
11–18
3–6
14–20–22–26

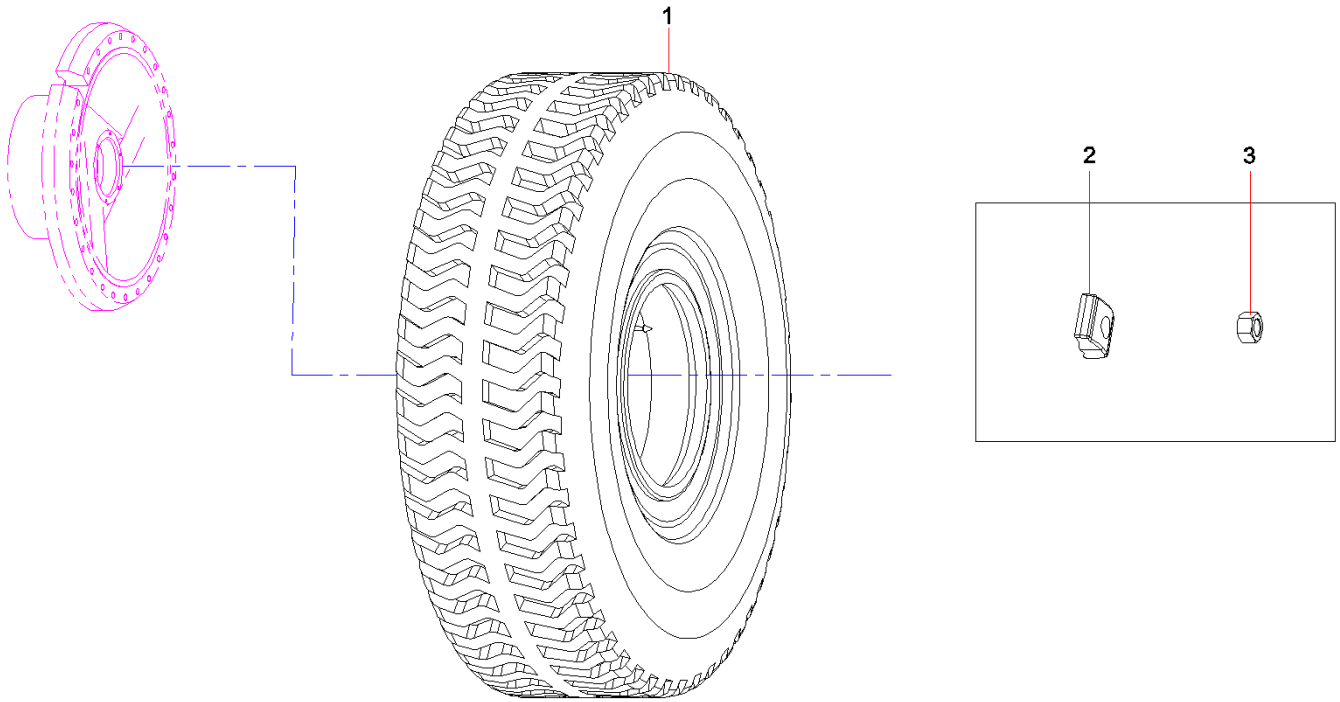
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	12939118	Battery installation	1	
24	12931513	Illuminating lamp installation	1	
25	12927135	Cable and harness	1	
26	12926818	Vehicle detecting assembly	1	
27	12952808	Fuel tank assembly and pipeline installation	1	
28	12953022	Steering pipeline	1	
29	12954513	Lifting pipeline	1	
30	13428981	Cooling pipeline for discs braking SRT95	1	
31	12954489	Brake pipeline and adaptor	1	
32	13237984	Brake pipeline and adaptor SRT95C.615A	1	
33	13294563	Hydraulic oil tank installation SRT95C.6	1	
34	12954463	Steering pipeline and pipe joint	1	
35	12953547	Labeling layout	1	
36	12943163	Manual lubrication system	1	

https://truckmanualshub.com/

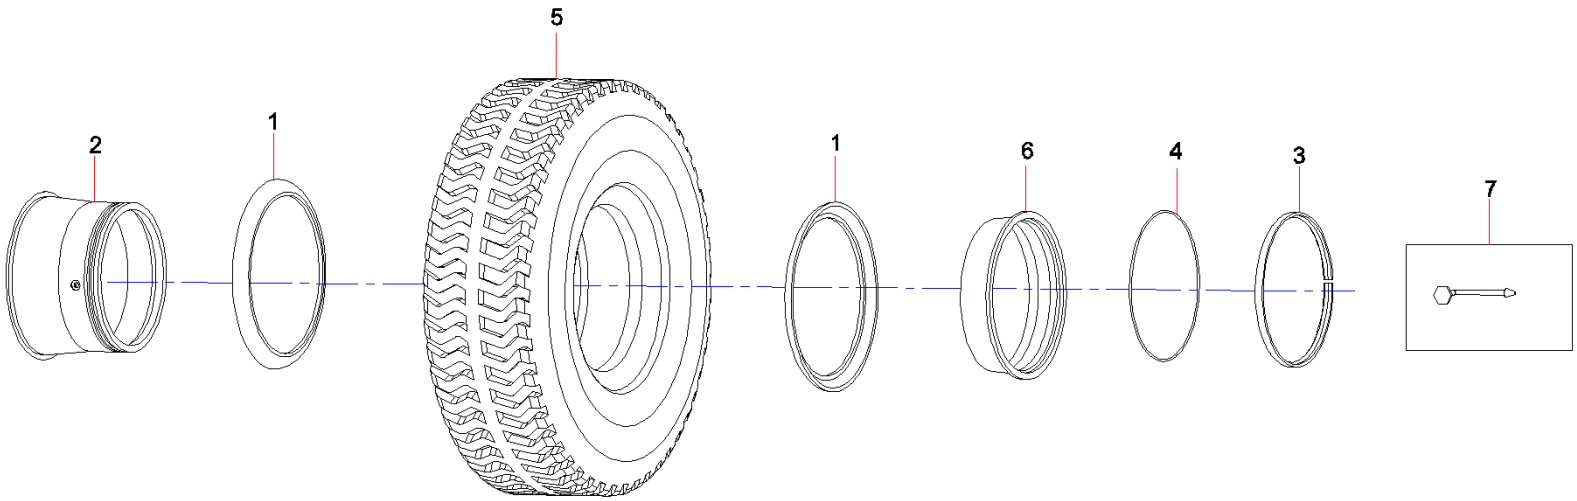
https://truckmanualshub.com/

Group 2
Front wheel assembly


1
2
3

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11605565	Tyre and rim assembly	1	
2	10235251	Clamp	26	
3	60010517	Nut M24 10 grade	26	


5
2
1
1
6
4
3
7

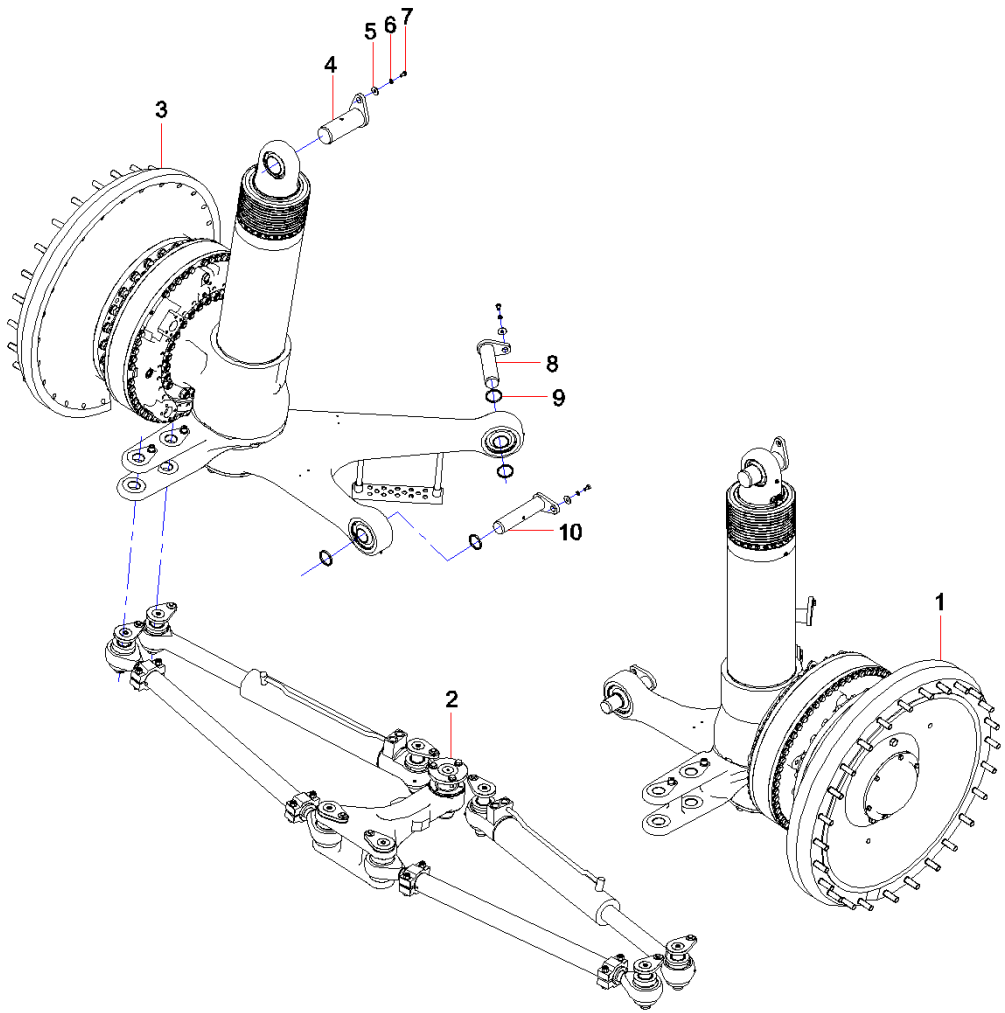
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60036995	Flange	2	
2	60036991	Rim	1	
3	60036993	Lockring	1	
4	60037011	O–ring	1	
5	60004579	Tyre	1	
6	60037008	Band–bead Seat	1	
7	60037002	Valve Stem Assy	1	

https://truckmanualshub.com/

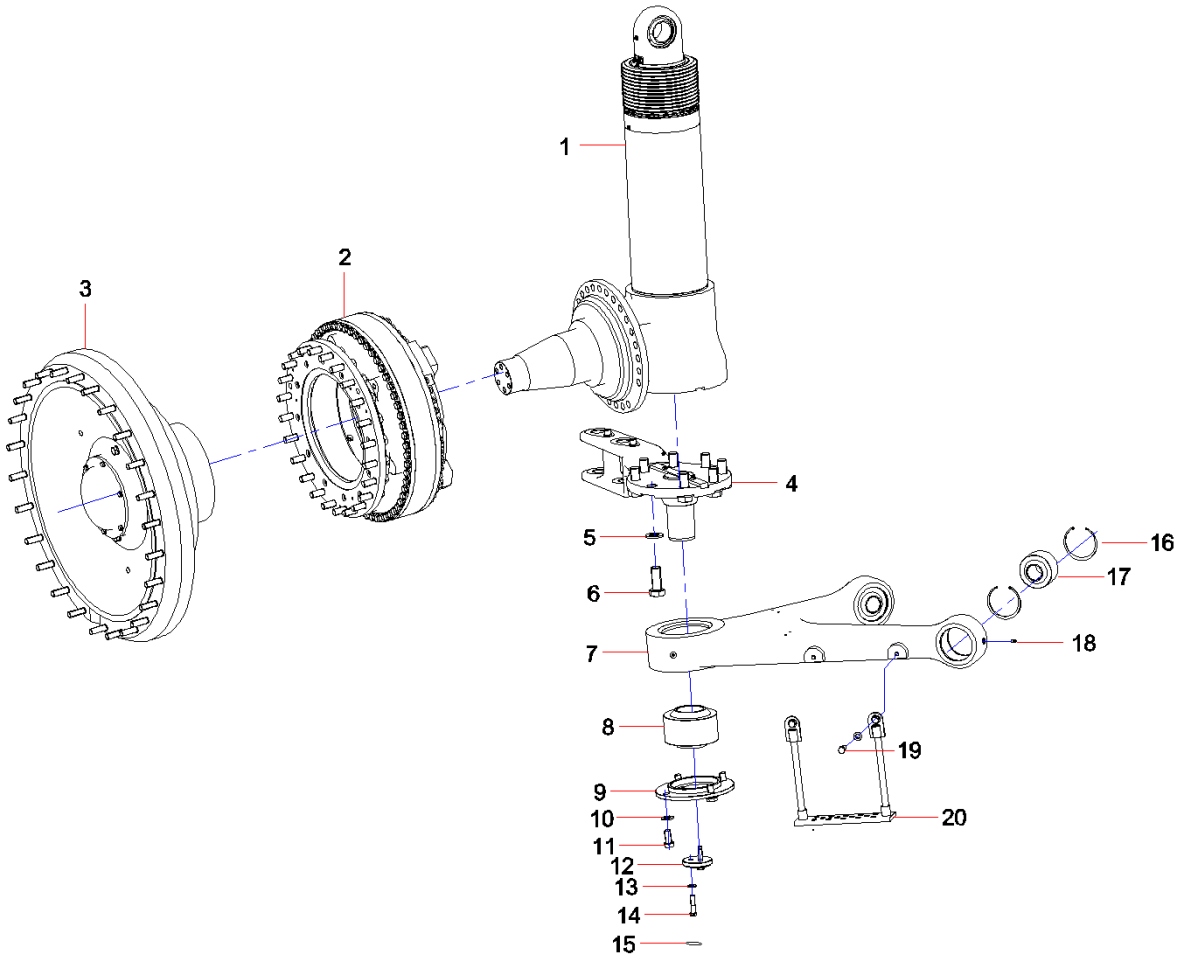
https://truckmanualshub.com/

Group 3
Front axle assembly SRT95C.032


1
2
3
4
5
6
7
8
9
10

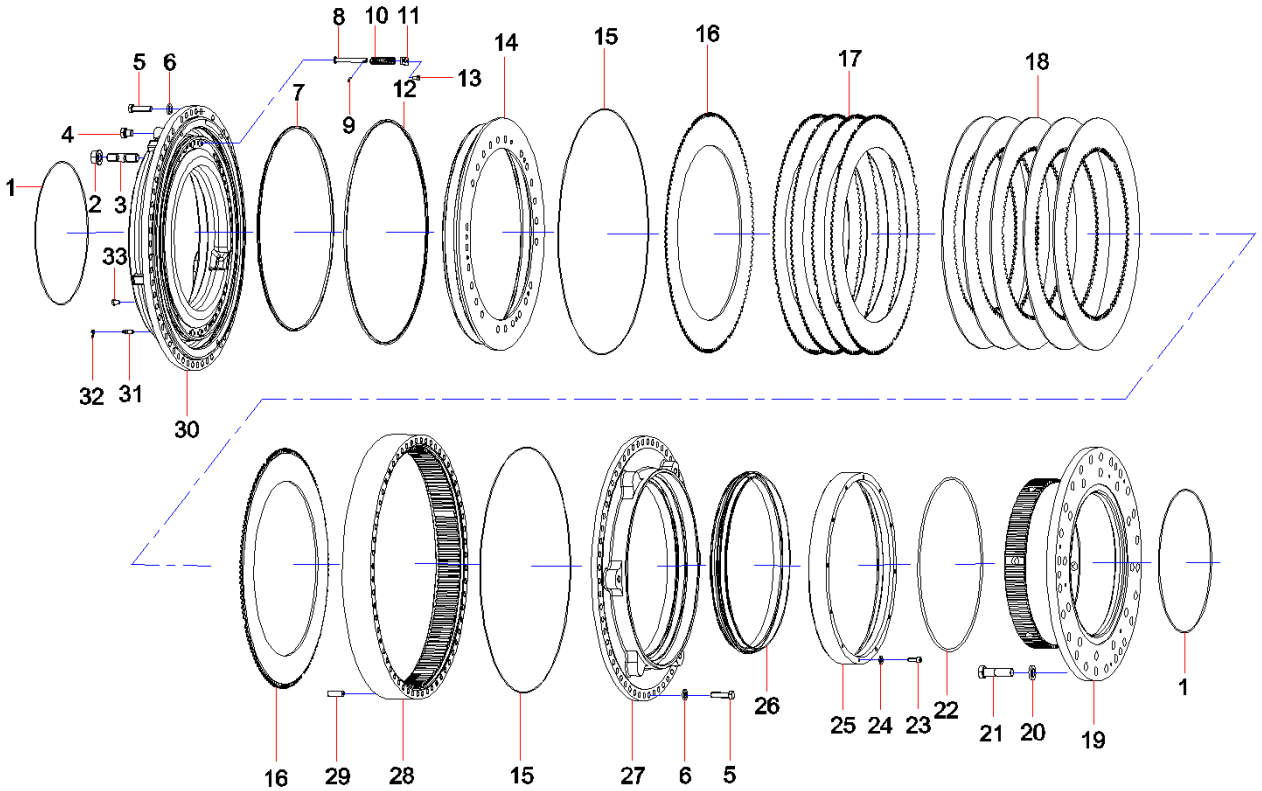
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	13320616	Right front axle assembly SRT95C.032.2	1	
2	12920652	Steering mechanism	1	
3	13320599	Left front axle assembly SRT95C.032.1	1	
4	12940327	Brace piece axial pin	2	
5	60060548	Washer 12GB96.1	6	
6	24000513	Washer 12GB93 DACROMET	6	
7	A210111000199	Bolt M12 × 20GB5783 Grade 10.9	2	
8	12940332	Brace piece axial pin	2	
9	12940324	Sleeve	8	
10	12940332	Brace piece axial pin	2	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20

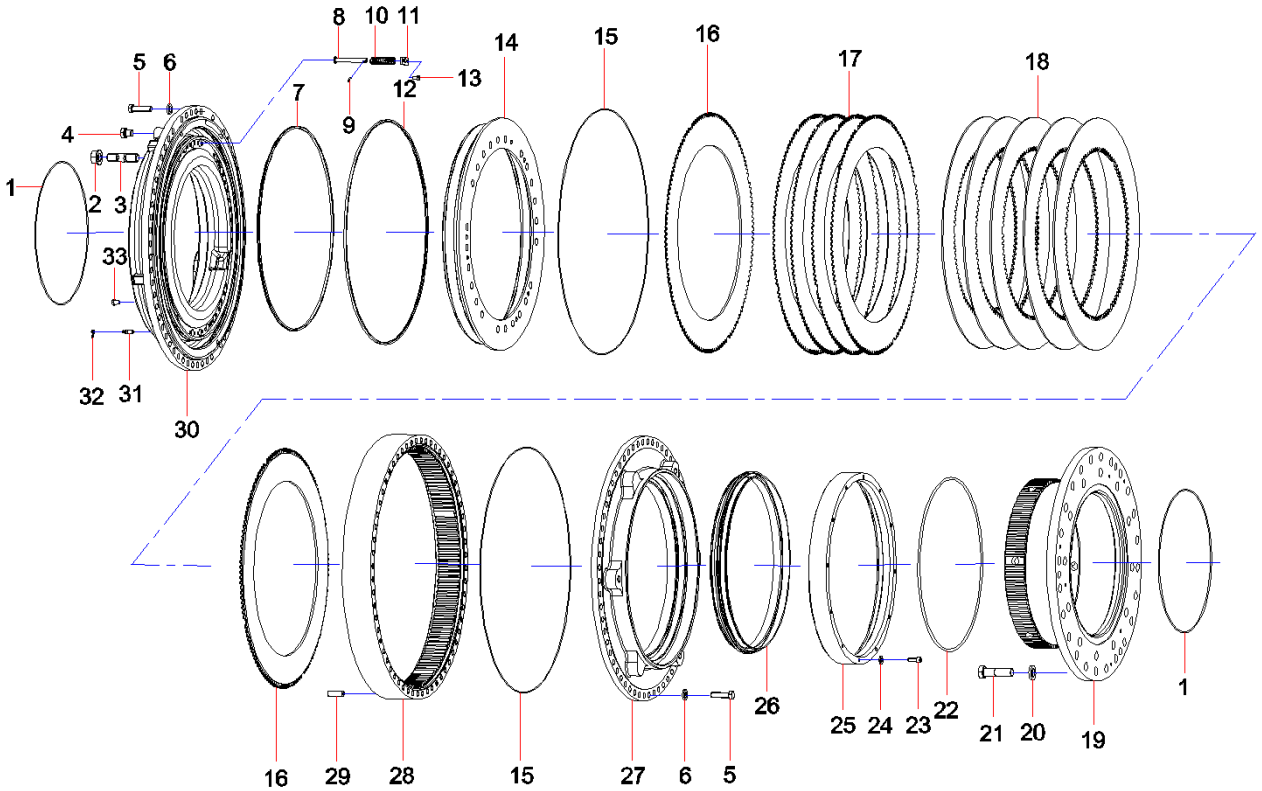
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	13274215	Front suspension cylinder SRT95C.032.1.1	1	
2	13298846	Assembly of front oil–cooled disc brake	1	
3	13295273	Front wheel and installation SRT95C.032.	1	
4	12889569	Steering arm assembly	1	
5	A229900003095	Spacer	8	
6	60225023	Bolt	8	
7	13072498	Right A–shape arm assembly SRT95C.031.2.	1	
8	60211393	Spherical Plain Bearing	1	
9	12929965	Baffle	1	
10	A210491000122	Washer	4	
11	21030883	Bolt	4	
12	12910244	Steering arm plate	1	
13	A210491000118	Washer	3	
14	24000015	Bolt	3	
15	11620190	Steel wire	1	
16	60211392	Spherical Plain Bearing	4	
17	A210416000046	Ring,retainer	2	
18	A210804000002	Oil cup	2	
19	A210111000053	Bolt M16 × 40GB5783 Grade 10.9	2	
20	12969724	Step assembly	1	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
33
32
31
30
16
29
28
15
27
6
5
26
25
24
23
22
21
20
19
1

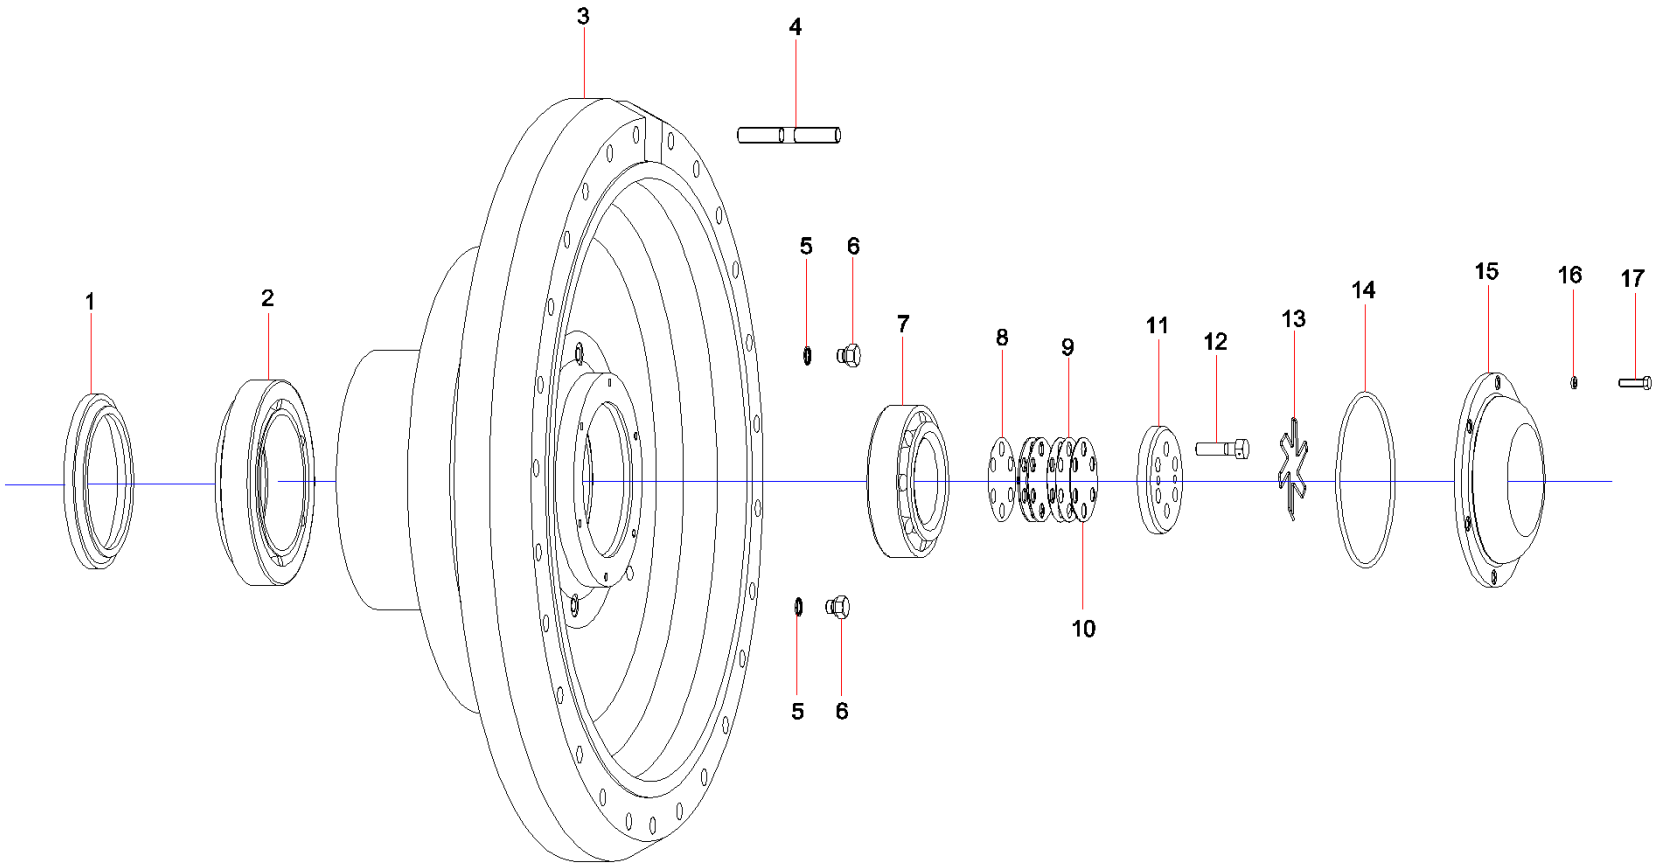
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A230101000660	O–ring	2	
2	60014452	Nut	25	
3	13297754	Double threaded stud SRT95C.032.1.3–6	25	
4	A229900010412	Plug	2	
5	A229900010221	Bolt	113	
6	11189880	Washer	113	
7	A230101000654	D seal ring	1	
8	11189894	Return pin	24	
9	11189884	Retainer pin	24	
10	11189888	Spring	24	
11	11189879	Retainer plate	24	
12	A230101000655	D seal ring	1	
13	A210111000342	Bolt M8 × 16GB5783 10.9 grade	48	
14	11189889	Service brake piston	1	
15	A230101000662	O–ring	2	
16	B229900006164	Dampening plate	2	
17	B229900006165	Friction plate	4	
18	B229900006166	Friction disc	5	
19	13297318	Driving wheel SRT95C.032.1.3–2	1	
20	11189876	Washer	24	
21	A210110000427	Bolt M24 × 90GB5782 Grade 10.9	24	
22	60127269	O–ring	1	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
33
32
31
30
16
29
28
15
27
6
5
26
25
24
23
22
21
20
19
1

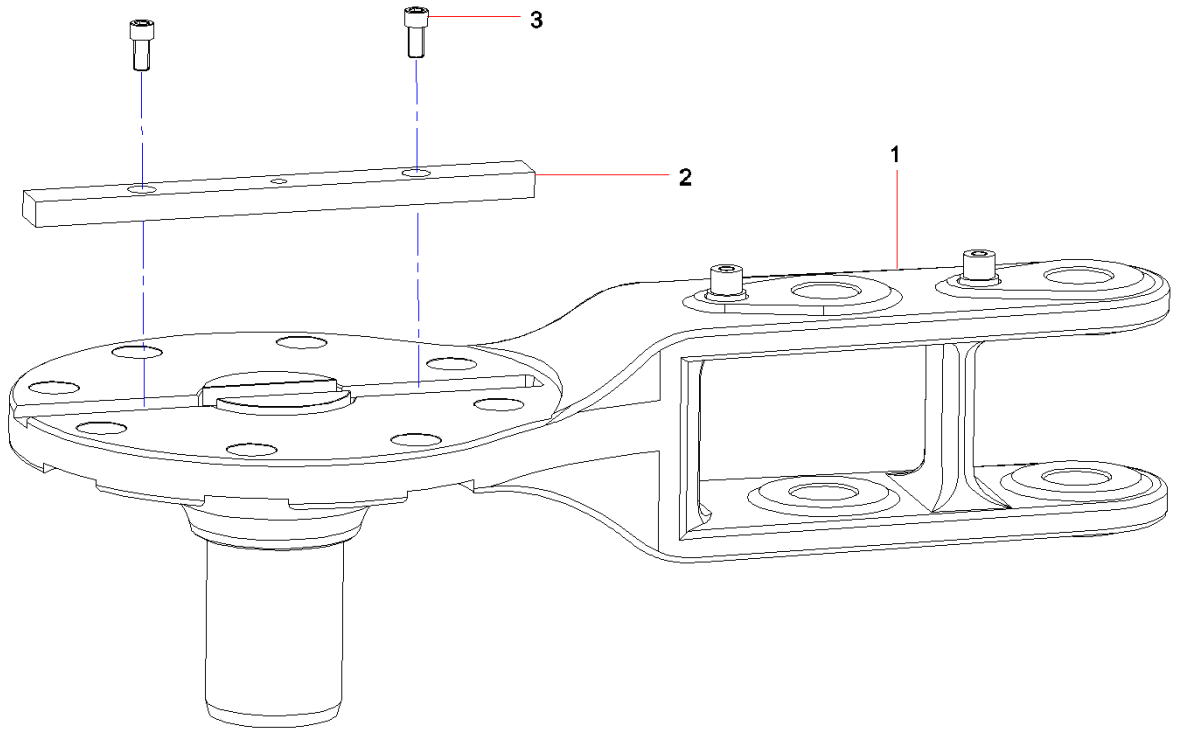
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	A210204000221	Screw	12	
24	A210491000120	Washer	12	
25	13297031	Outter seal housing SRT95C.032.1.3–1	1	
26	60253495	Floating oil seal	1	
27	13297422	Housing SRT95C.032.1.3–3	1	
28	13297611	Disc housing SRT95C.032.1.3–4	1	
29	11189883	Pin	1	
30	13297644	Piston housing SRT95C.032.1.3–5	1	
31	11189893	Bleeder screw	2	
32	11189886	Dust boot	2	
33	60000005	Plug	2	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
5
6

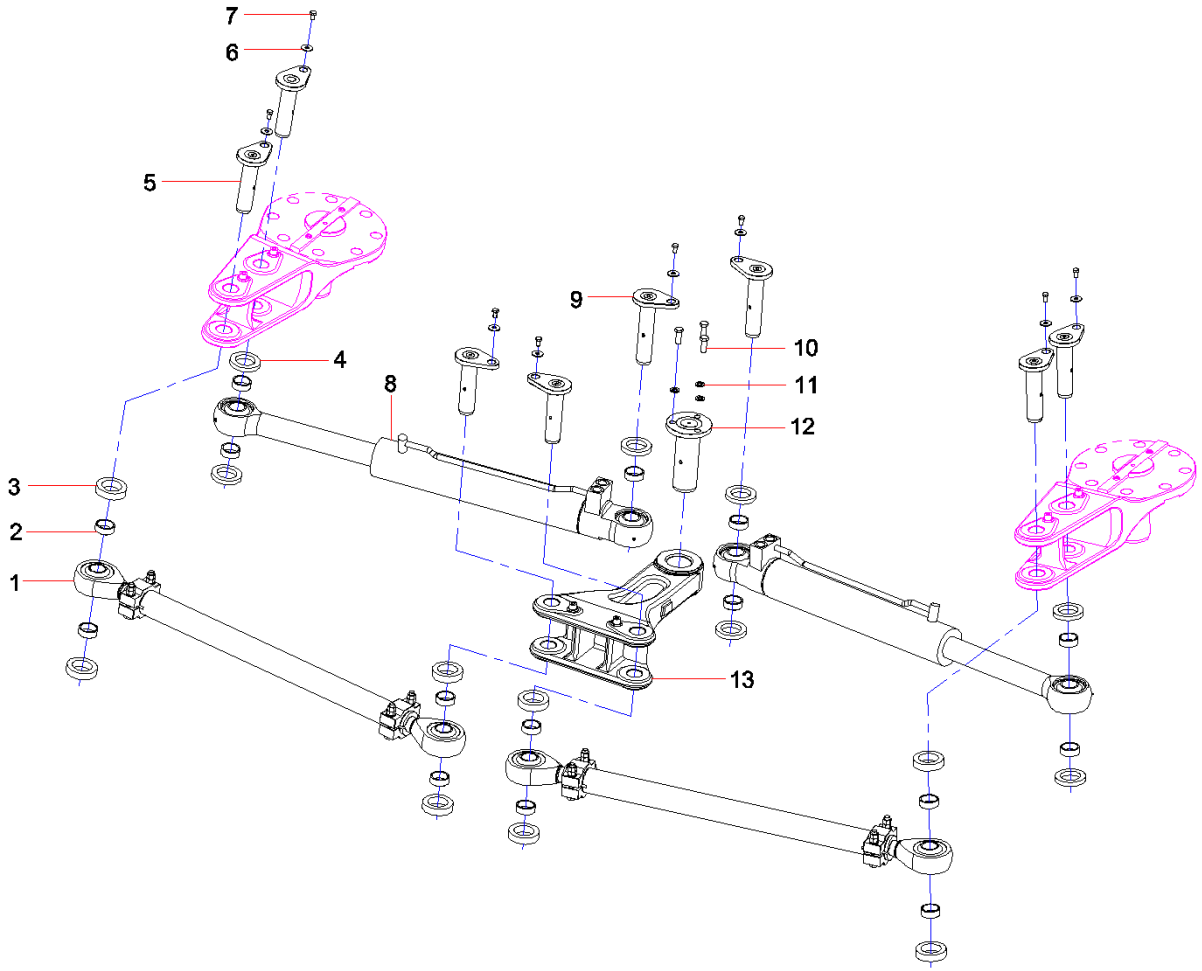
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11608492	Bushing	1	
2	B221500000557	Bearing	1	
3	13292265	Front wheel SRT95C.032.1.4–1	1	
4	10235249	Stud	26	
5	A210434000010	Washer	2	
6	A229900009069	Plug	2	
7	60004581	Bearing	1	
8	11608493	Shim	4	
9	11608494	Shim	3	
10	11608495	Shim	2	
11	11608498	Plate	1	
12	24002266	Bolt M20 × 65(GB32.1) Grade 10.9	6	
13	11609378	Lockwire	1	
14	60161452	O–ring	1	
15	13292266	Cover SRT95C.032.1.4–7	1	
16	24000513	Washer 12GB93 DACROMET	6	
17	24000303	Bolt M12 × 40GB5783 Dacroment	6	


3
2
1

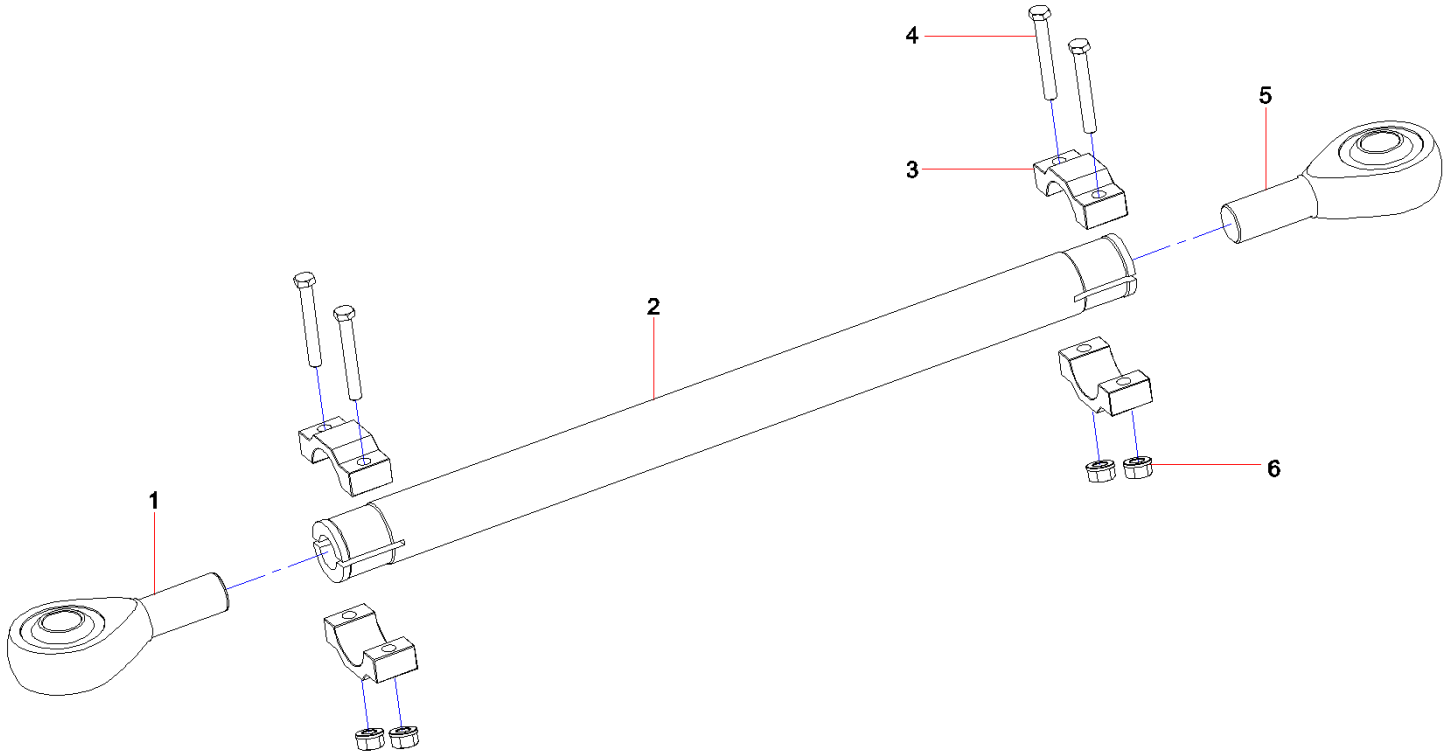
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12888558	Steering arm welding assembly	1	
2	60009346	Key	1	
3	A210204000167	Screw	2	


7
6
5
4
8
9
10
11
12
3
2
1
13

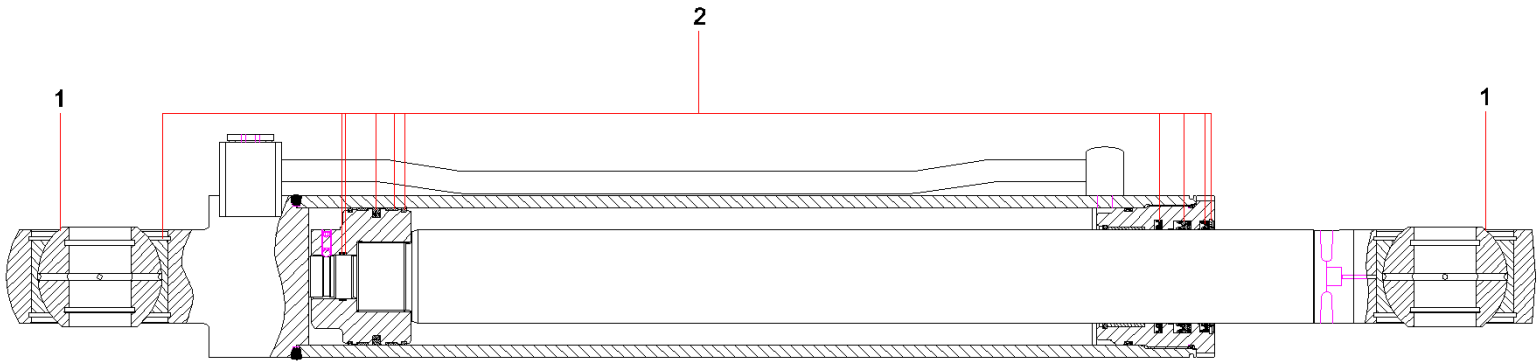
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12903209	Tie rod assembly	2	
2	11618908	Locating bushing	16	
3	11618914	Dust cover	8	
4	11618909	Dust cover	8	
5	12906951	Tie rod pin assembly	6	
6	60060548	Washer 12GB96.1	8	
7	A210111000199	Bolt M12×20GB5783 Grade 10.9	8	
8	60212671	Steering cylinder	2	
9	12906952	Cylinder pin assembly	2	
10	A210111000106	Bolt	3	
11	A210491000118	Washer	3	
12	12907439	Pin assembly	1	
13	12890691	Steering crank assembly	1	


4
5
3
2
1
6

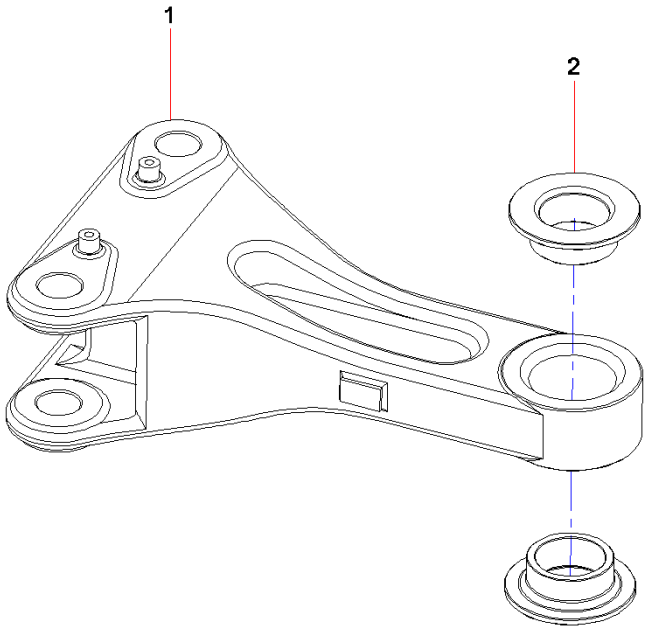
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60211394	Spherical Plain Bearing	1	
2	12902846	Tie rod body	1	
3	12902847	Tie rod clip	4	
4	A210111000447	Bolt	4	
5	60211395	Spherical Plain Bearing	1	
6	60024266	Nut M16 10 grade	4	


2
1
1

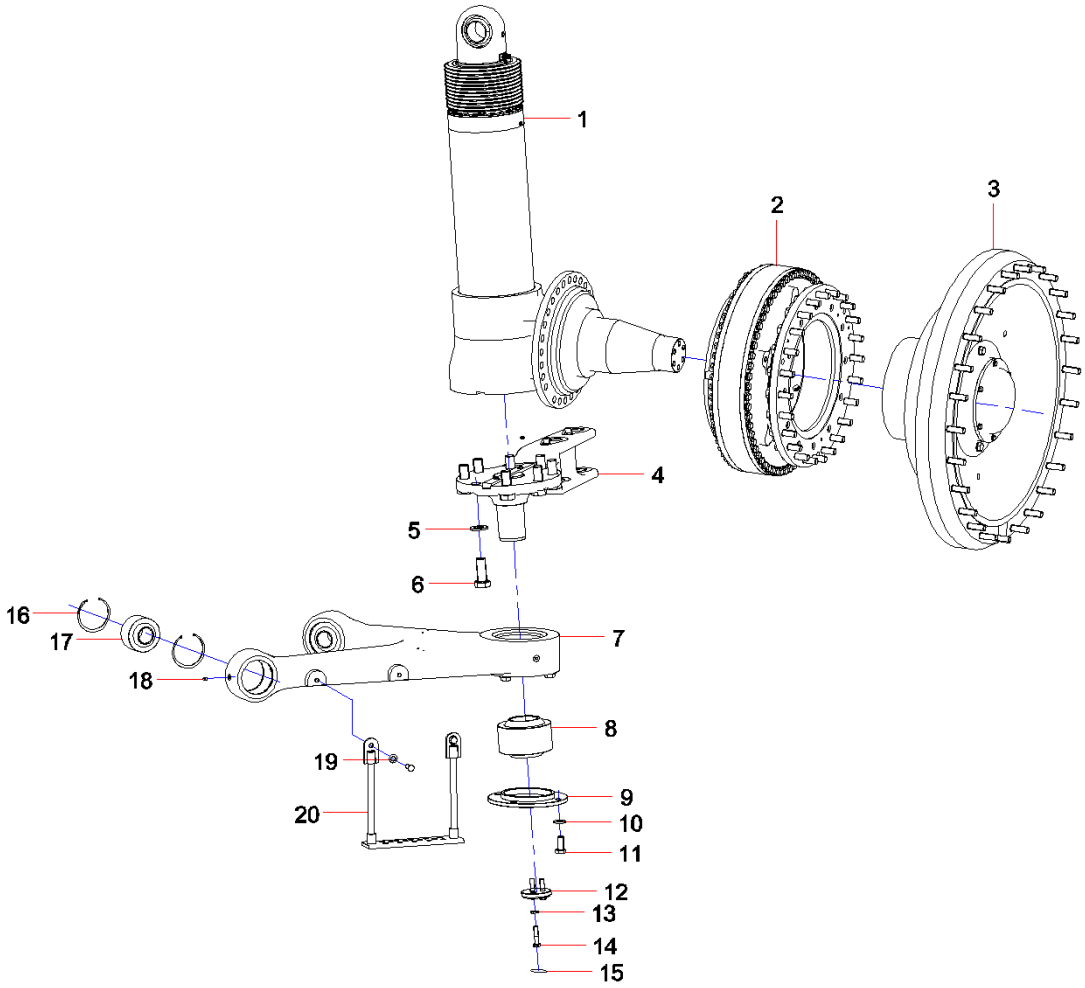
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60211391	Spherical Plain Bearing	2	
2	60231041	Repair kit of SRT95C steering cylinder	1	


1
2

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12888559	Crank welding body	1	
2	12890383	Crank spacer	2	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20

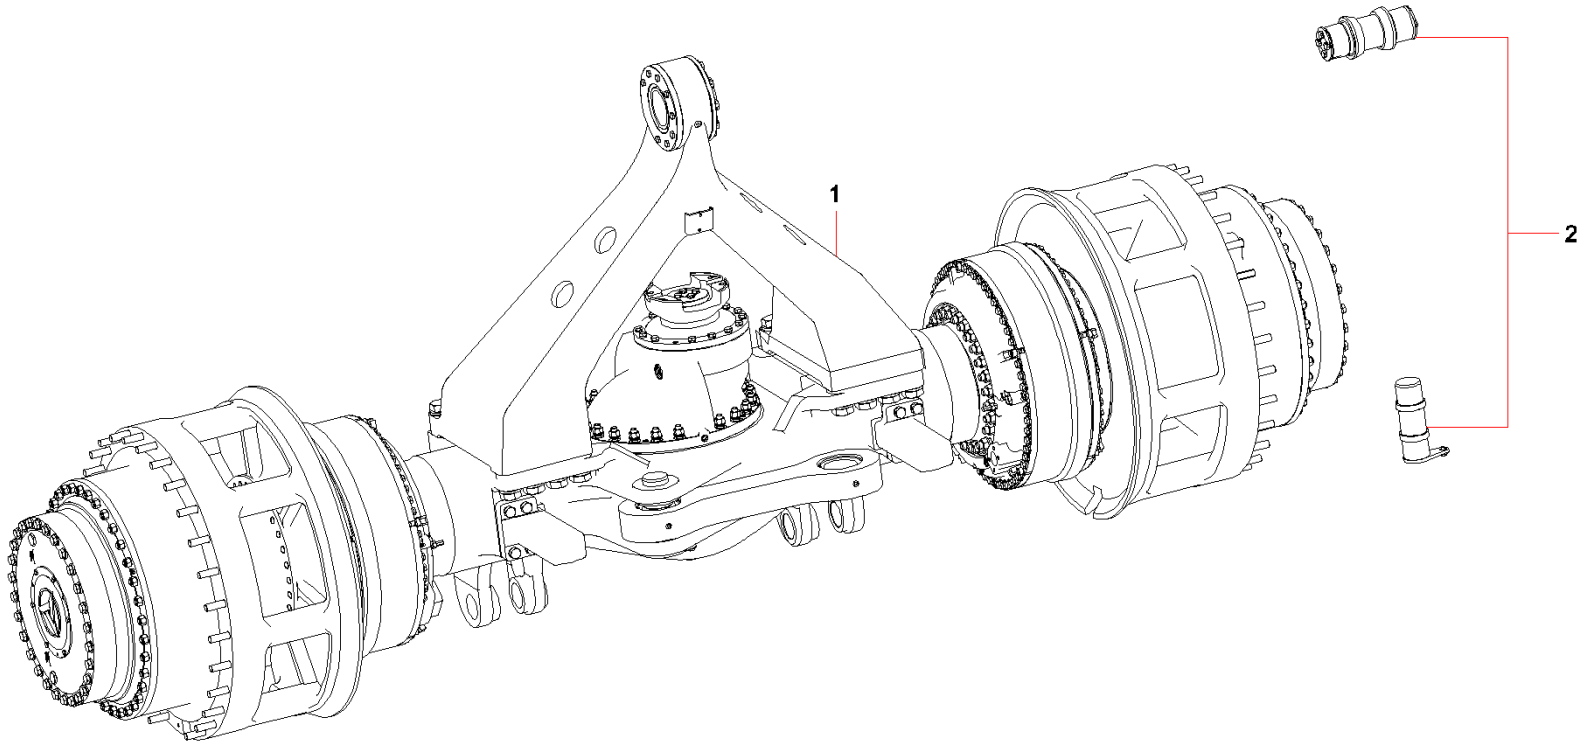
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	13274215	Front suspension cylinder SRT95C.032.1.1	1	
2	13298846	Assembly of front oil–cooled disc brake	1	
3	13295273	Front wheel and installation SRT95C.032.	1	
4	12889569	Steering arm assembly	1	
5	A229900003095	Spacer	8	
6	60225023	Bolt	8	
7	13072497	A–shape arm assembly(Right)	1	
8	60211393	Spherical Plain Bearing	1	
9	12929965	Baffle	1	
10	A210491000122	Washer	4	
11	21030883	Bolt	4	
12	12910244	Steering arm plate	1	
13	A210491000118	Washer	5	
14	24000015	Bolt	3	
15	11620190	Steel wire	1	
16	60211392	Spherical Plain Bearing	4	
17	A210416000046	Ring,retainer	2	
18	A210804000002	Oil cup	2	
19	A210111000053	Bolt M16 × 40GB5783 Grade 10.9	2	
20	12969724	Step assembly	1	

https://truckmanualshub.com/

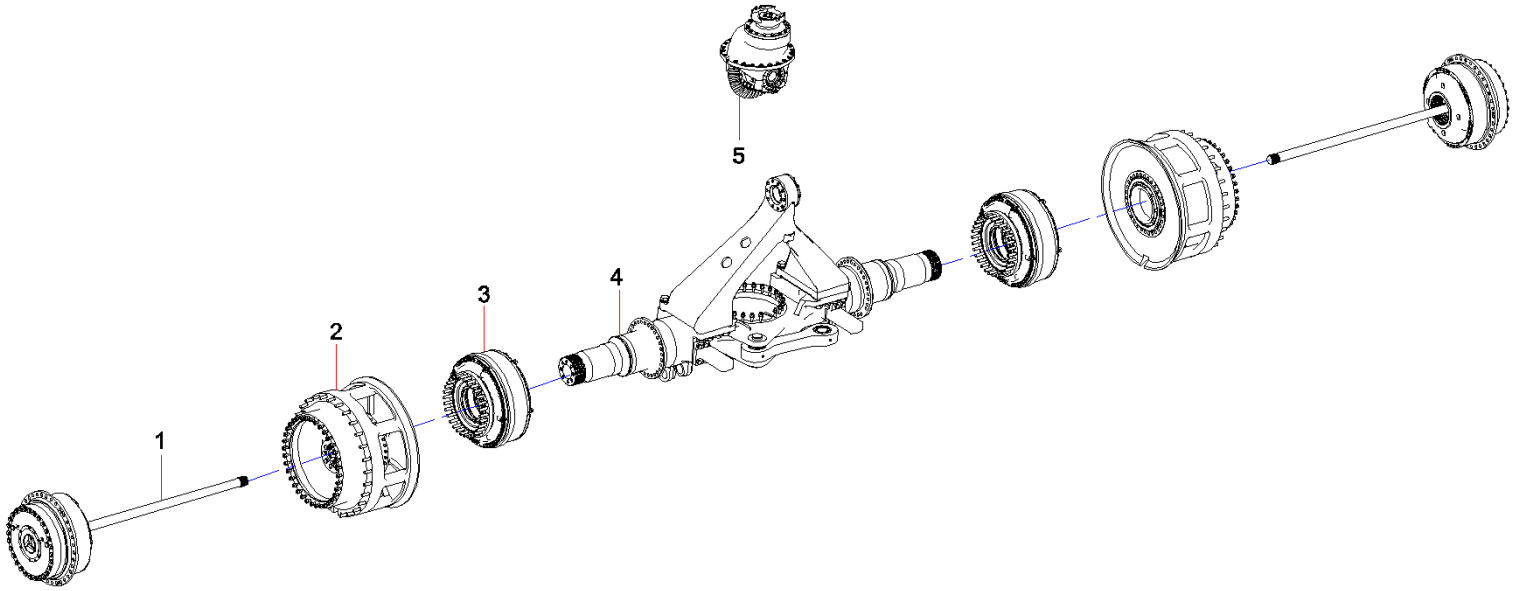
https://truckmanualshub.com/

Group 4
Rear axle assembly and installation


1
2

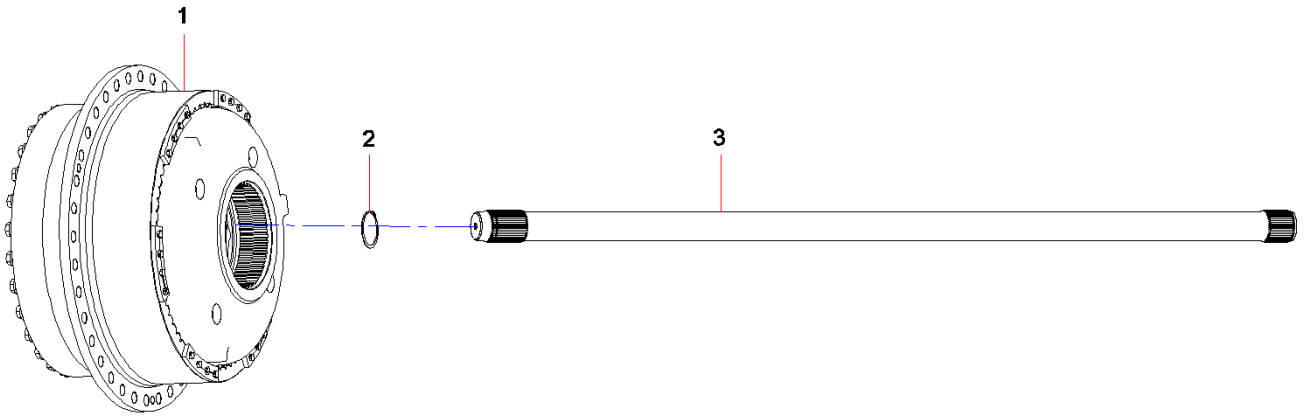
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12952338	Assembly of rear axle	1	
2	12951167	Rear axle mounting parts	1	


1
2
3
4
5

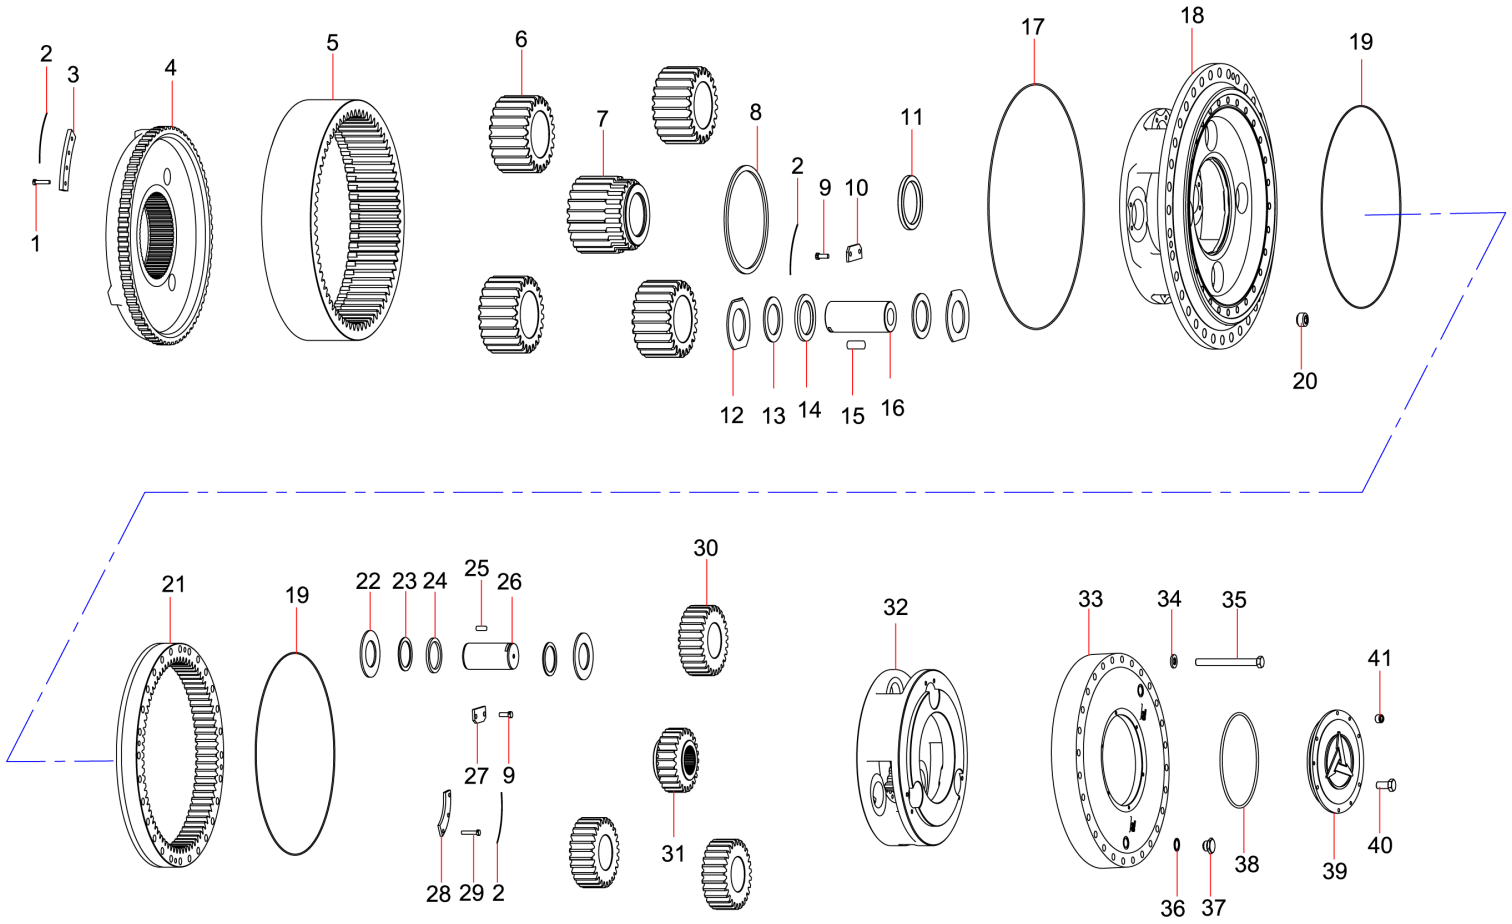
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11508484	Planetary assembly and axle shaft	2	
2	11460587	Rear hub assembly	2	
3	11510897	Rear brake assembly	2	
4	12951175	Rear axle housing assembly	1	
5	11479985	Main reducer and differential assembly	1	


1
2
3

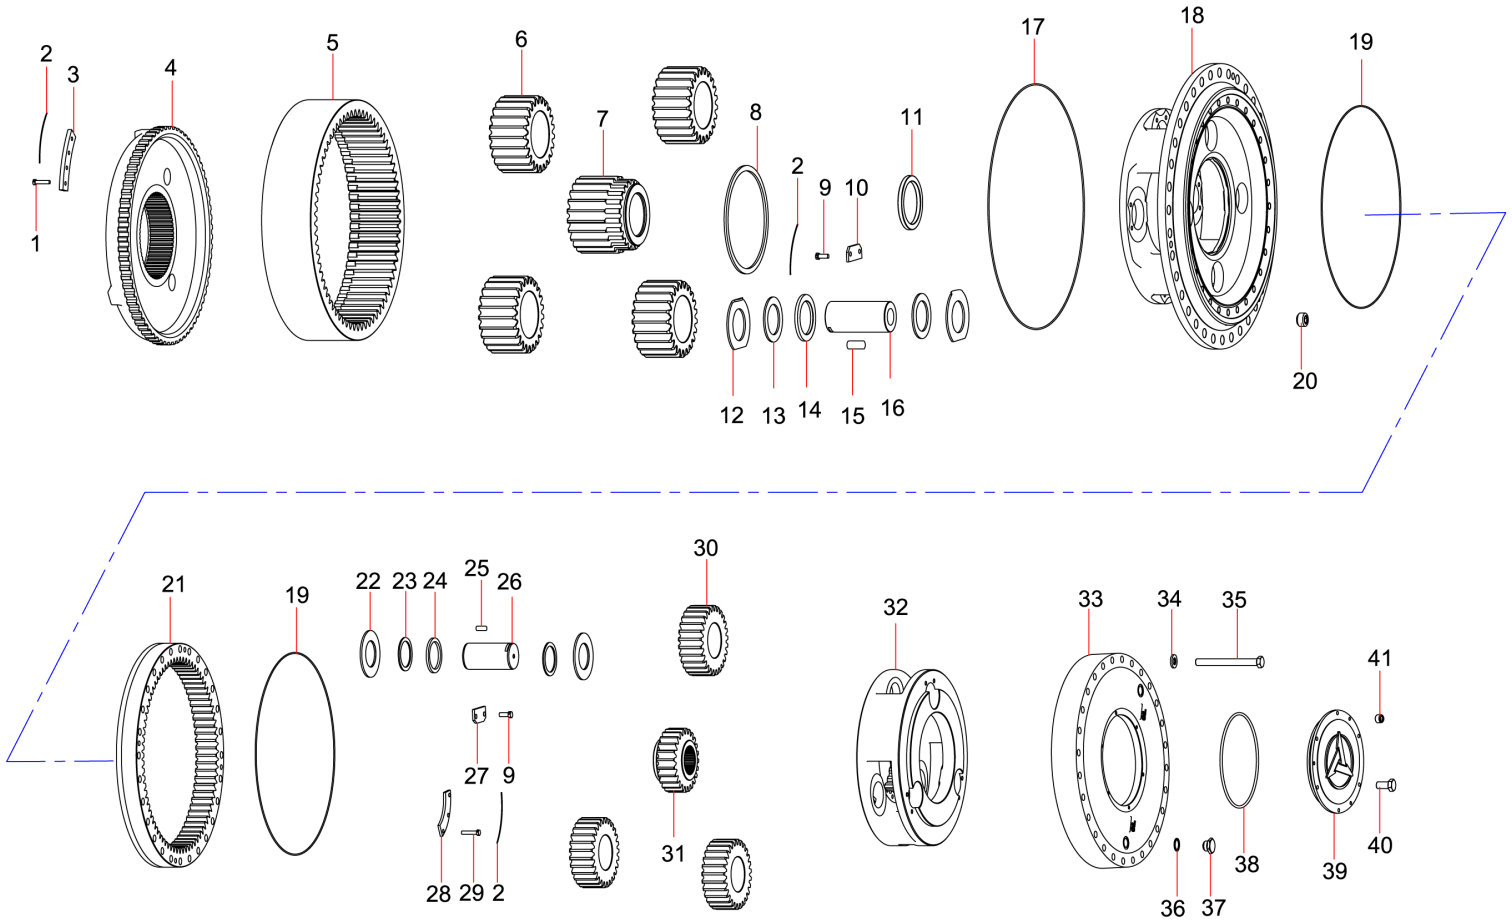
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11508485	Planetary assembly	1	
2	A210419000014	Retainer Ring 85GB894.1	1	
3	11508145	Axle shaft	1	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41

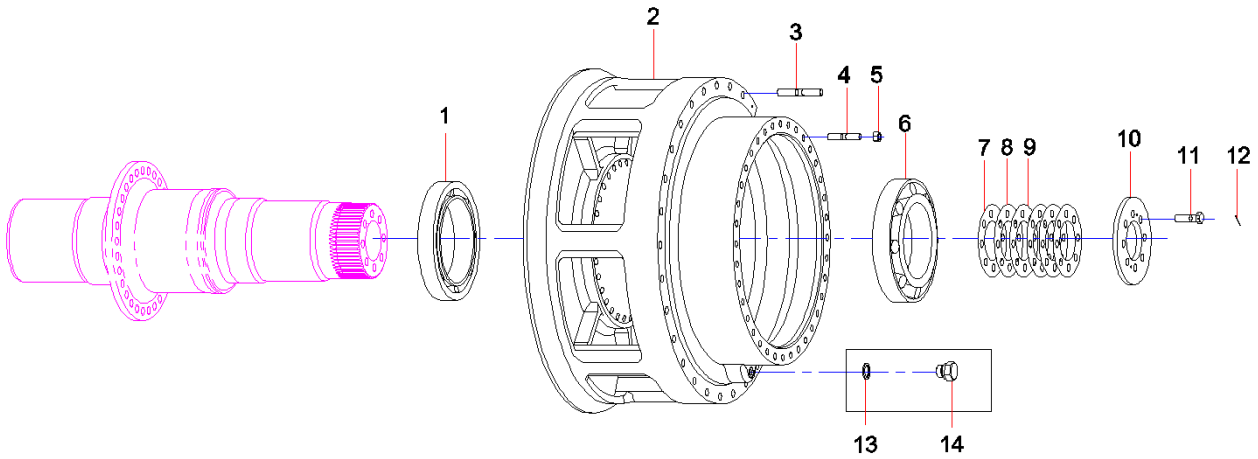
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210128000031	Bolt	24	
2	11508165	lockwire	17	
3	11508158	Ring gear retainer	6	
4	11508157	Secondary ring gear carrier	1	
5	11508159	Secondary ring gear	1	
6	11508154	Secondary planetary pinion	4	
7	11508164	Secondary sun gear	1	
8	11508162	Thrust washer	1	
9	A210128000003	Bolt	14	
10	11508175	Sun gear retainer	4	
11	11508156	Thrust washer	1	
12	11508172	Thrust plate	8	
13	11508173	Thrust spacer	8	
14	11508174	Roller spacer	4	
15	60007825	Roller	120	
16	11508155	Secondary Pinion pin	4	
17	11508148	O–ring	1	
18	11508160	Secondary planetary carrier	1	
19	11508161	O–ring	2	
20	A210206000009	Screw M20 × 12GB77	3	
21	11508150	First ring gear	1	
22	11508168	Thrust plate	6	


2
3
4
5
6
7
8
2
9
10
11
17
18
19
1
12
13
14
15
16
20
21
19
22
23
24
25
26
30
32
33
34
35
41
27
9
31
38
39
40
28
29
2
36
37

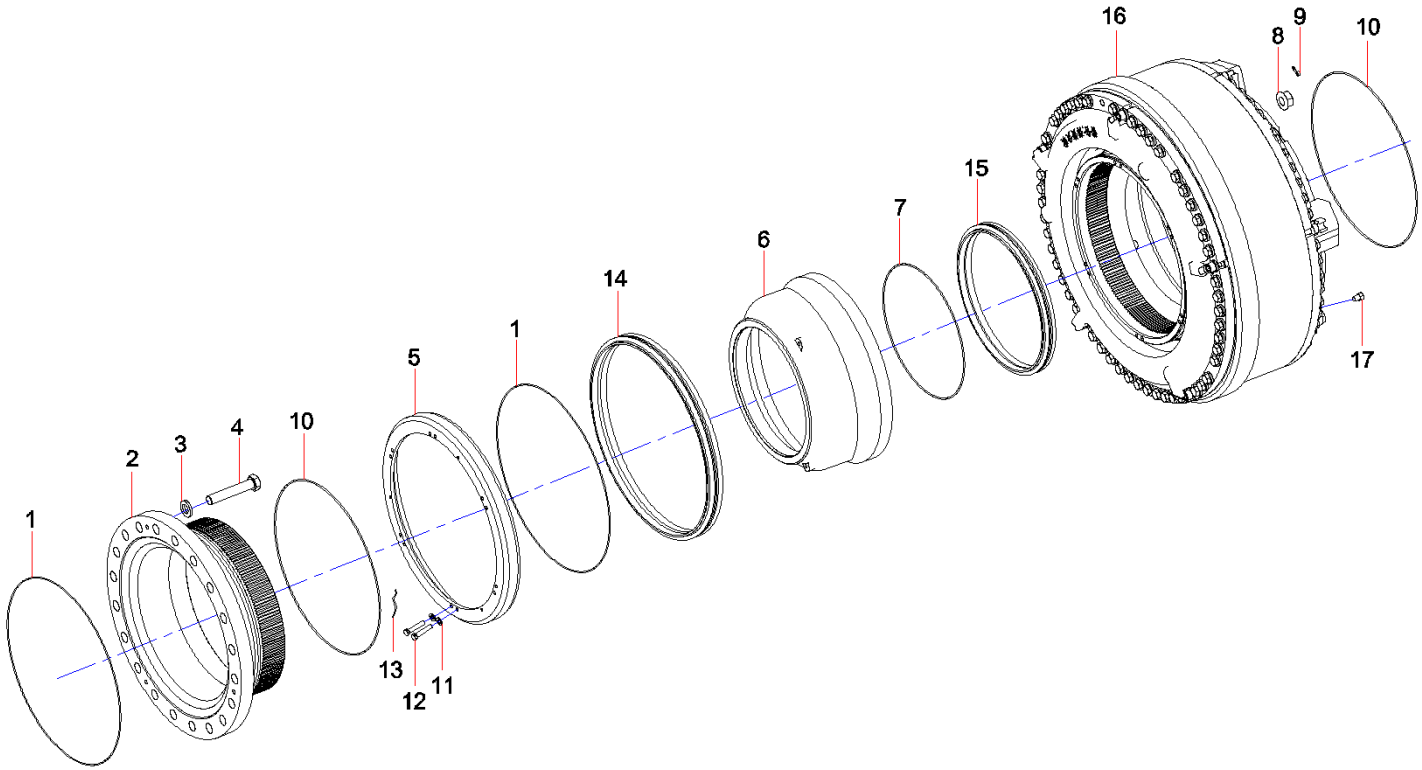
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	11508169	Thrust Spacer	6	
24	11508170	Roller spacer	3	
25	60007824	Roller	132	
26	11508149	First pinion pin	3	
27	11508152	Pin retainer	3	
28	11508163	Pin retainer	4	
29	60007555	Bolt	12	
30	11508147	First planetary pinion	3	
31	11508167	First sun gear	1	
32	11508171	Frist planetary carrier	1	
33	11508151	Carrier cover	1	
34	A210491000132	Washer	28	
35	A210110000347	Bolt	28	
36	A210434000014	Washer 30JB982	2	
37	21051814	Plug, screw	2	
38	60007556	O–ring	1	
39	11508146	Cover	1	
40	A210111000012	Bolt	6	
41	11508166	Screw	3	


1
2
3
4
5
6
7
8
9
10
11
12
13
14

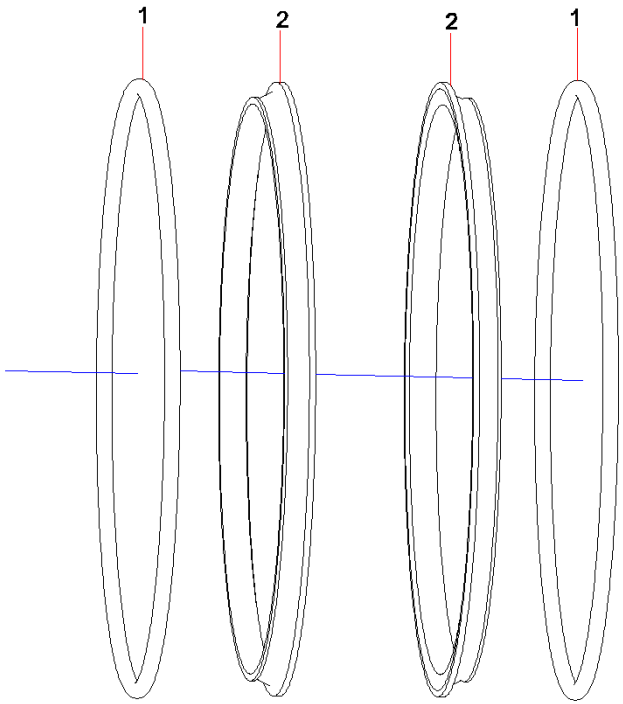
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60004583	Bearing	1	
2	11460581	Rear wheel	1	
3	10235249	Stud	27	
4	11183432	Stud	36	
5	60010516	Nut M20 10 grade	36	
6	60004582	Bearing	1	
7	11460583	Shim	3	
8	11460584	Shim	2	
9	11460582	Shim	6	
10	11460586	Plate	1	
11	24000021	Bolt	8	
12	11460585	Lockwire	1	
13	A210434000010	Washer	1	
14	A229900009069	Plug	1	


16
8
9
10
15
7
6
14
1
5
10
4
3
2
1
17
13
12
11

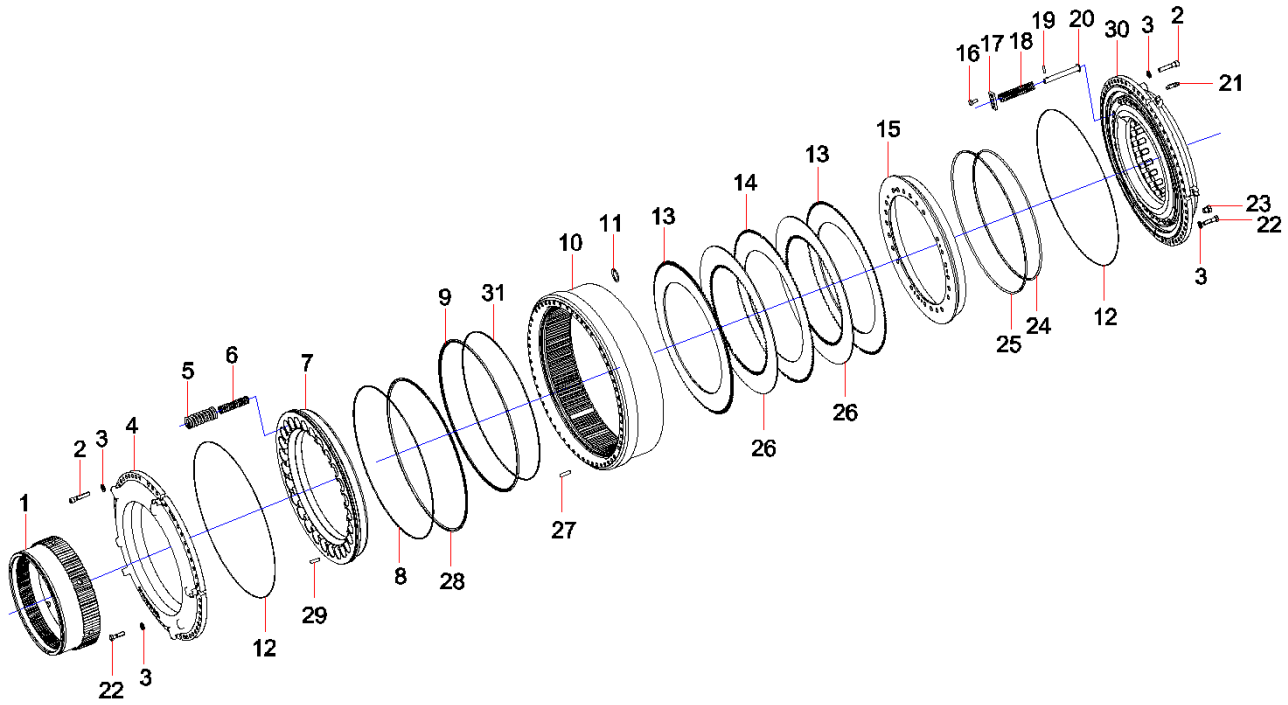
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A230101000661	O–ring	2	
2	11510775	Driving wheel SRT95.050.1.2–1	1	
3	11189876	Washer	30	
4	A229900010222	Bolt	30	
5	11189874	Outer seal housing	1	
6	11510779	Inner seal housing	1	
7	A230101000659	O–ring	1	
8	60014452	Nut	28	
9	11189886	Dust boot	4	
10	A230101000660	O–ring	2	
11	A210405000045	Washer	12	
12	A229900010458	Bolt	12	
13	24003899	Lockwire	1	
14	B230101002024	Dynamic seal assembly	1	
15	60237512	Floating oil seal	1	
16	11510862	Brake assembly	1	
17	60000005	Plug	2	


1
2
2
1

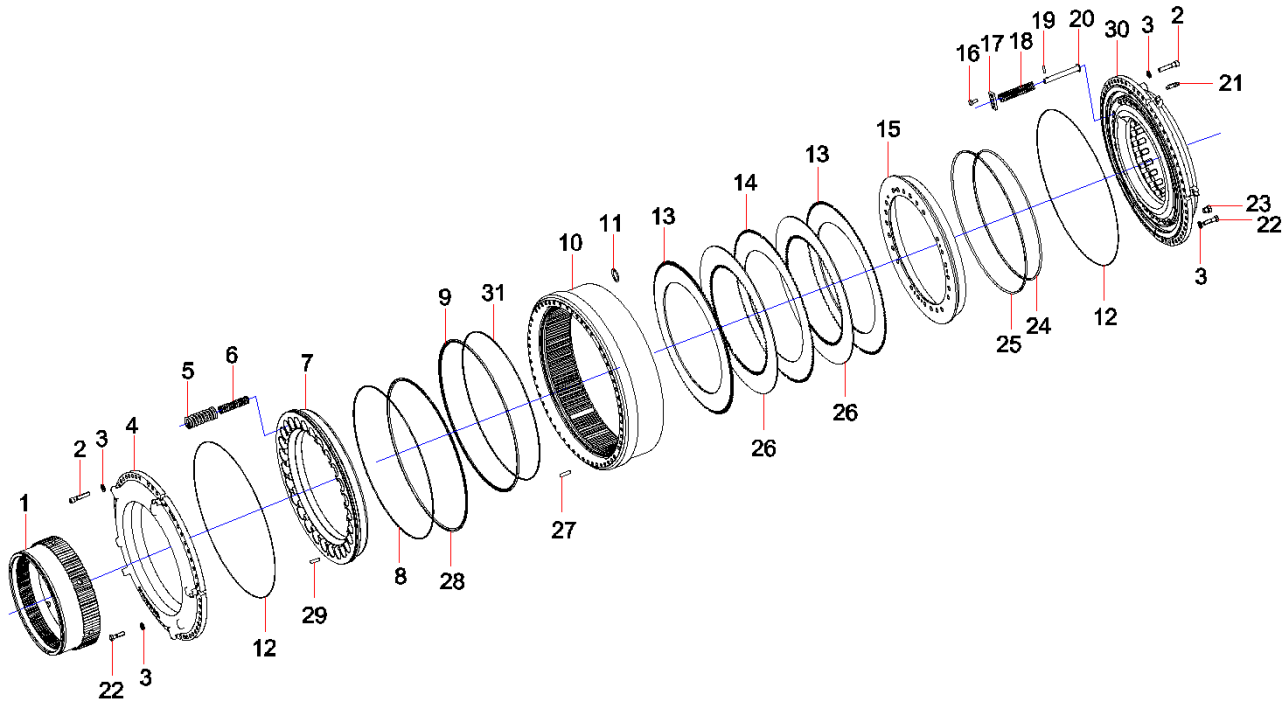
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B230101002193	O–ring	2	
2	B230101002195	Seal ring	2	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31

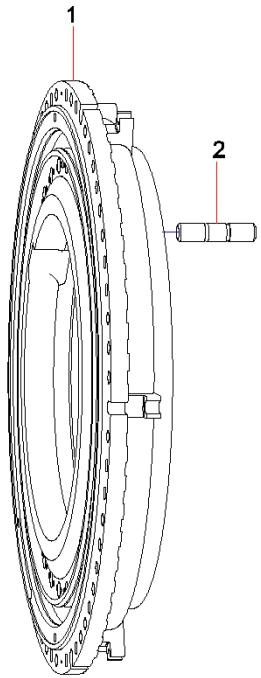
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11510805	Driving disc	1	
2	11189881	Socket head screw	10	
3	11189880	Washer	108	
4	11189891	Spring housing	1	
5	11189878	Spring	27	
6	11189887	Spring	27	
7	11189890	Parking piston	1	
8	13043514	Guiding belt	1	
9	A230101000656	Seal, OD–ring	1	
10	11510787	Housing	1	
11	A230101000658	O–ring	3	
12	A230101000662	O–ring	2	
13	B229900006164	Dampening plate	2	
14	B229900006165	Friction plate	12	
15	11189889	Service brake piston	1	
16	A210111000342	Bolt M8 × 16GB5783 10.9 grade	48	
17	11189879	Retainer plate	24	
18	11189888	Spring	24	
19	11189884	Retainer pin	24	
20	11189894	Return pin	24	
21	11189893	Bleeder screw	4	
22	A229900010221	Bolt	98	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31

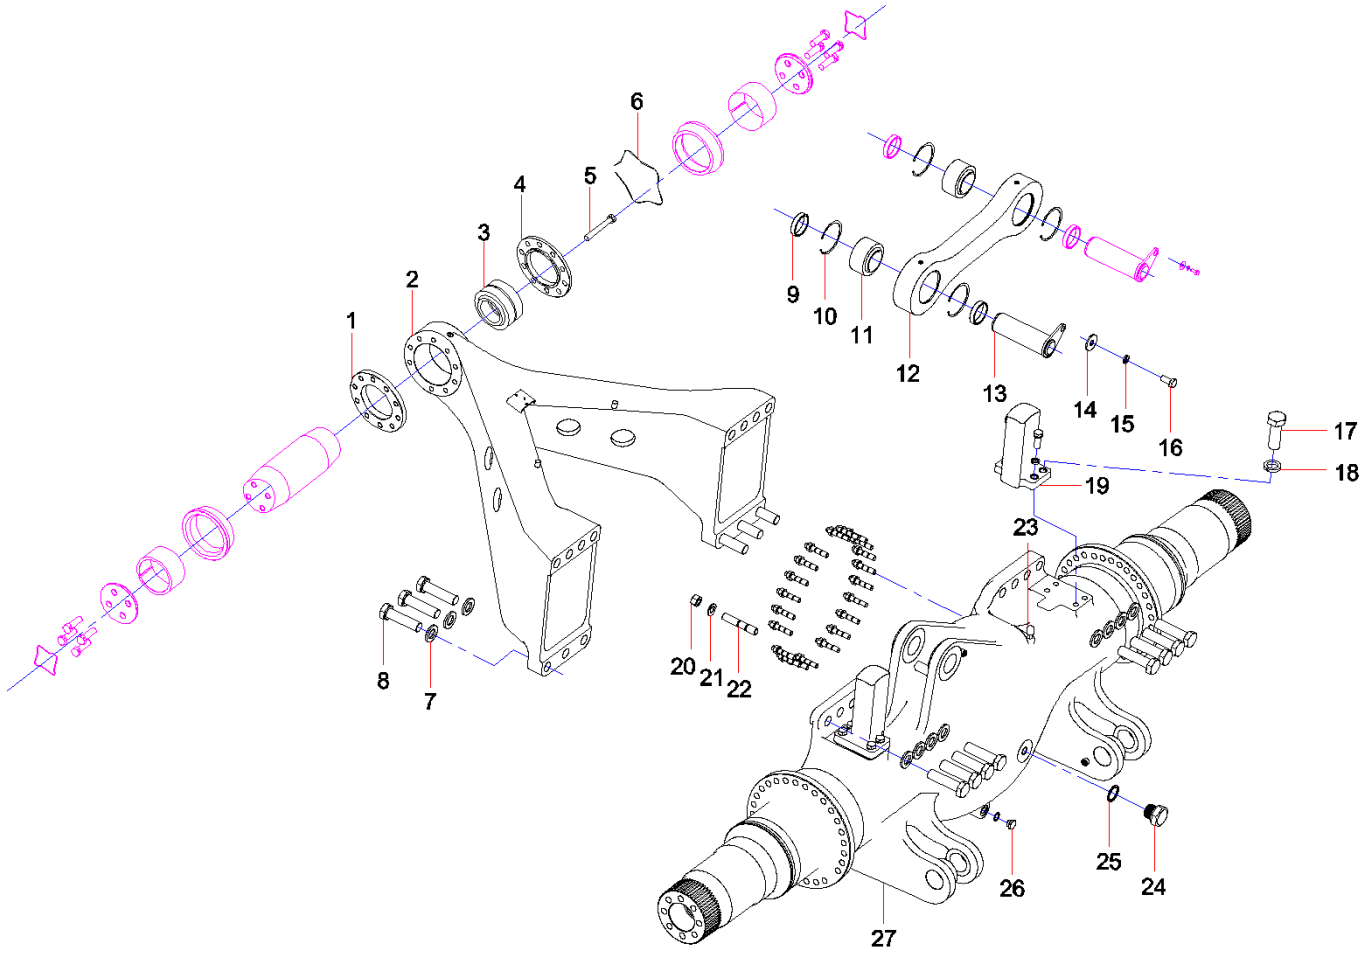
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	A229900010412	Plug	2	
24	A230101000654	D seal ring	1	
25	A230101000655	D seal ring	1	
26	B229900006166	Friction disc	13	
27	11189883	Pin	2	
28	A230101000657	Seal, OG–ring	1	
29	11189882	Pin	1	
30	11189898	Piston housing assembly	1	
31	11946371	Spacer ring	1	


1
2

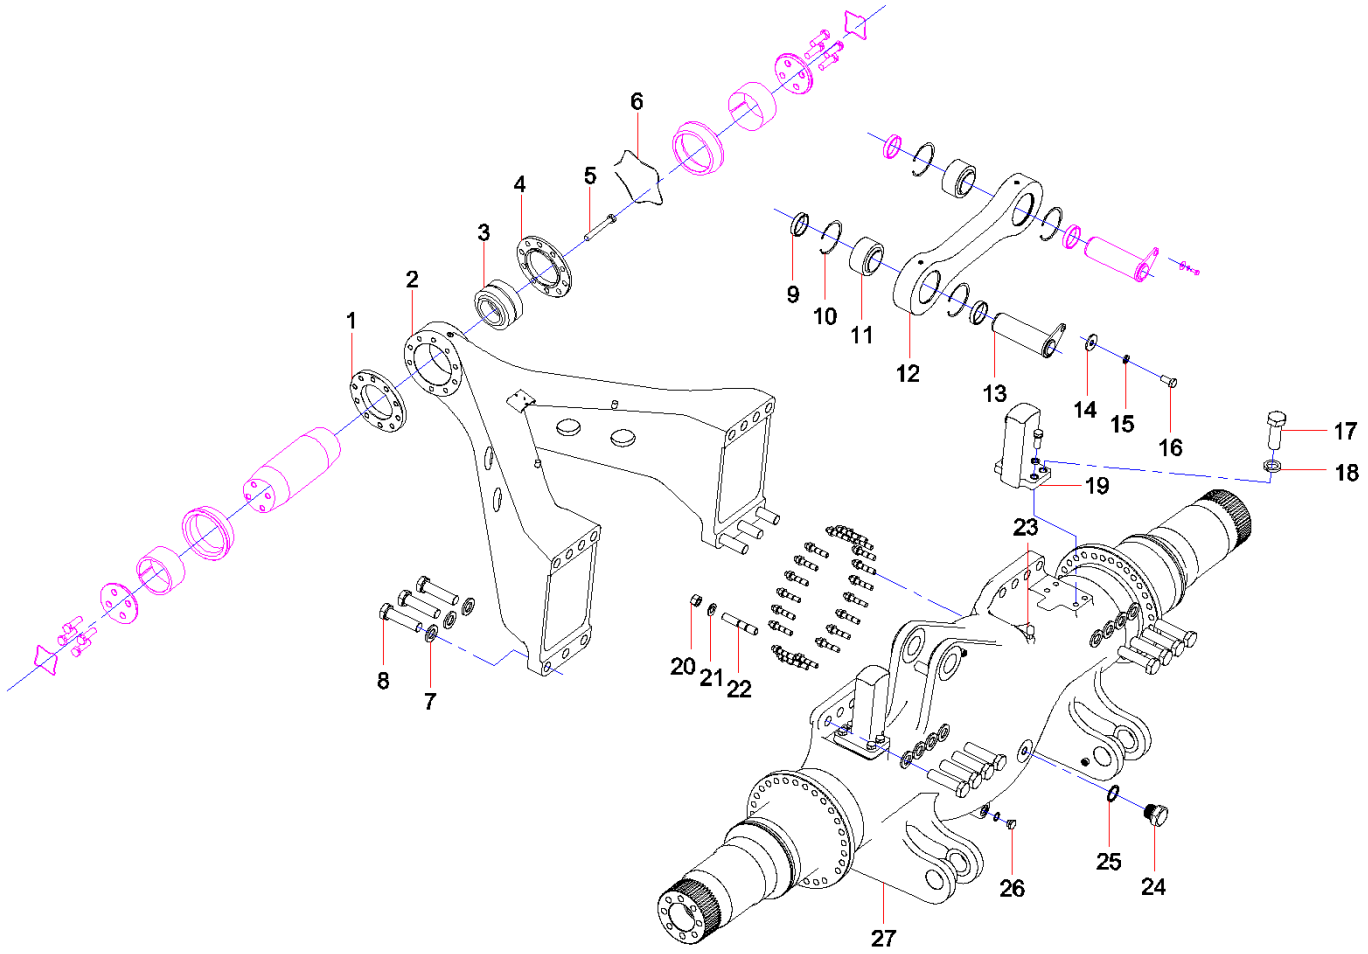
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11189896	Service brake piston housing	1	
2	11189897	Stud	28	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27

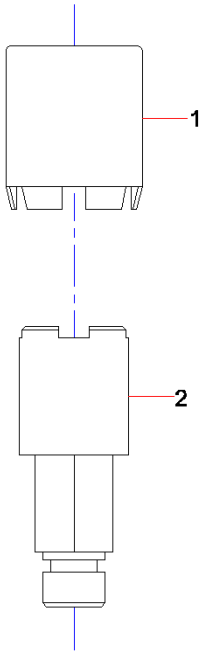
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11507586	Thread gasket	1	
2	12951098	A–frame assembly	1	
3	60007762	Bearing	1	
4	11507585	Washer	1	
5	24002665	Bolt M24 × 160GB32.1 Grade 10.9	10	
6	11507773	Steel Wire	1	
7	60007828	Washer	14	
8	60007827	Bolt	14	
9	11507582	Spacer	2	
10	A210416000008	Ring, retainer	4	
11	60004634	Bearing	2	
12	11507772	Link	1	
13	11507581	Shaft	1	
14	A210404000004	Washer	1	
15	24000513	Washer 12GB93 DACROMET	1	
16	A210111000101	Bolt	1	
17	21051125	Bolt M24 × 65GB5783 Grade 10.9	8	
18	A210401000008	Washer	8	
19	11507771	Oscillation stop	2	
20	60010516	Nut M20 10 grade	22	
21	A210491000132	Washer	22	
22	11183260	Stud	22	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27

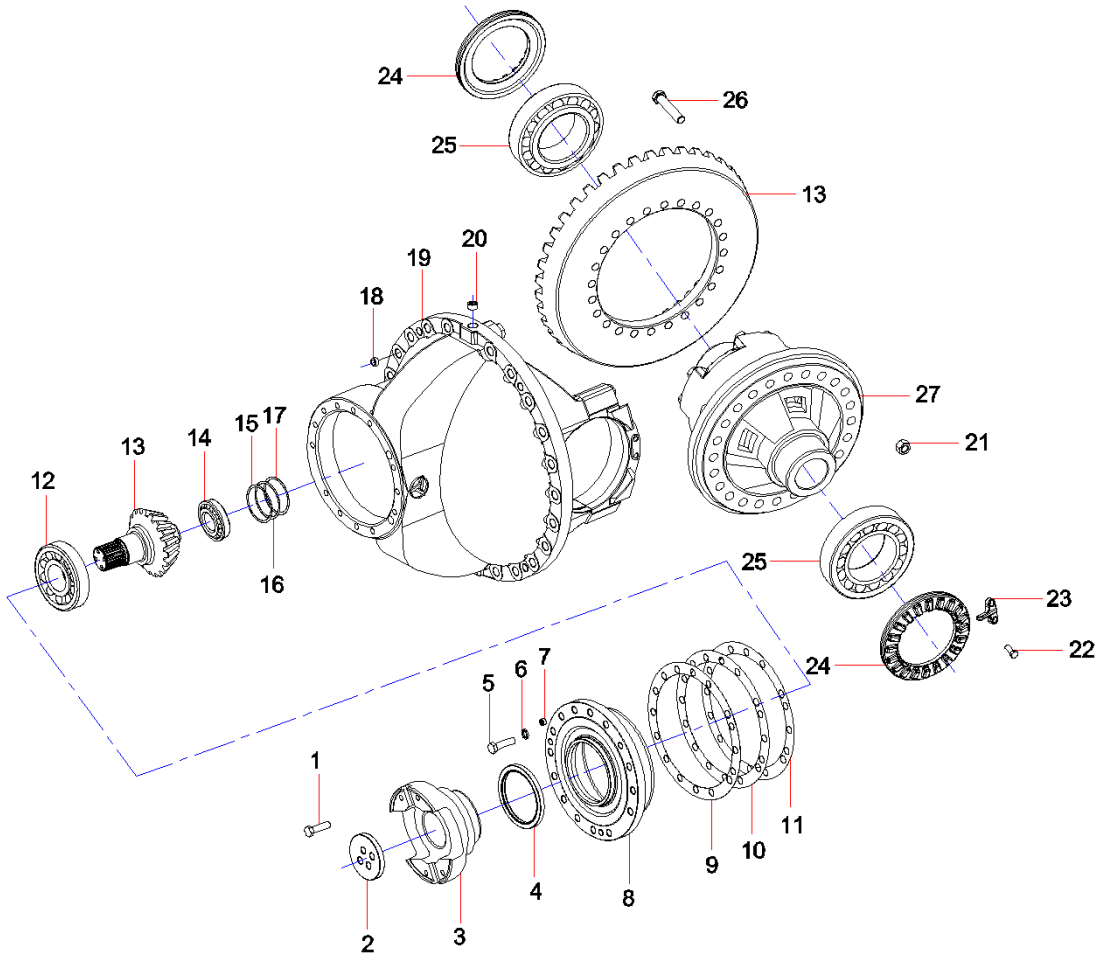
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	11183403	Breather	1	
24	60004363	Screw plug M30 × 2JB1760	1	
25	A210434000014	Washer 30JB982	2	
26	21051814	Plug, screw	1	
27	11507578	Axle housing component	1	


1
2

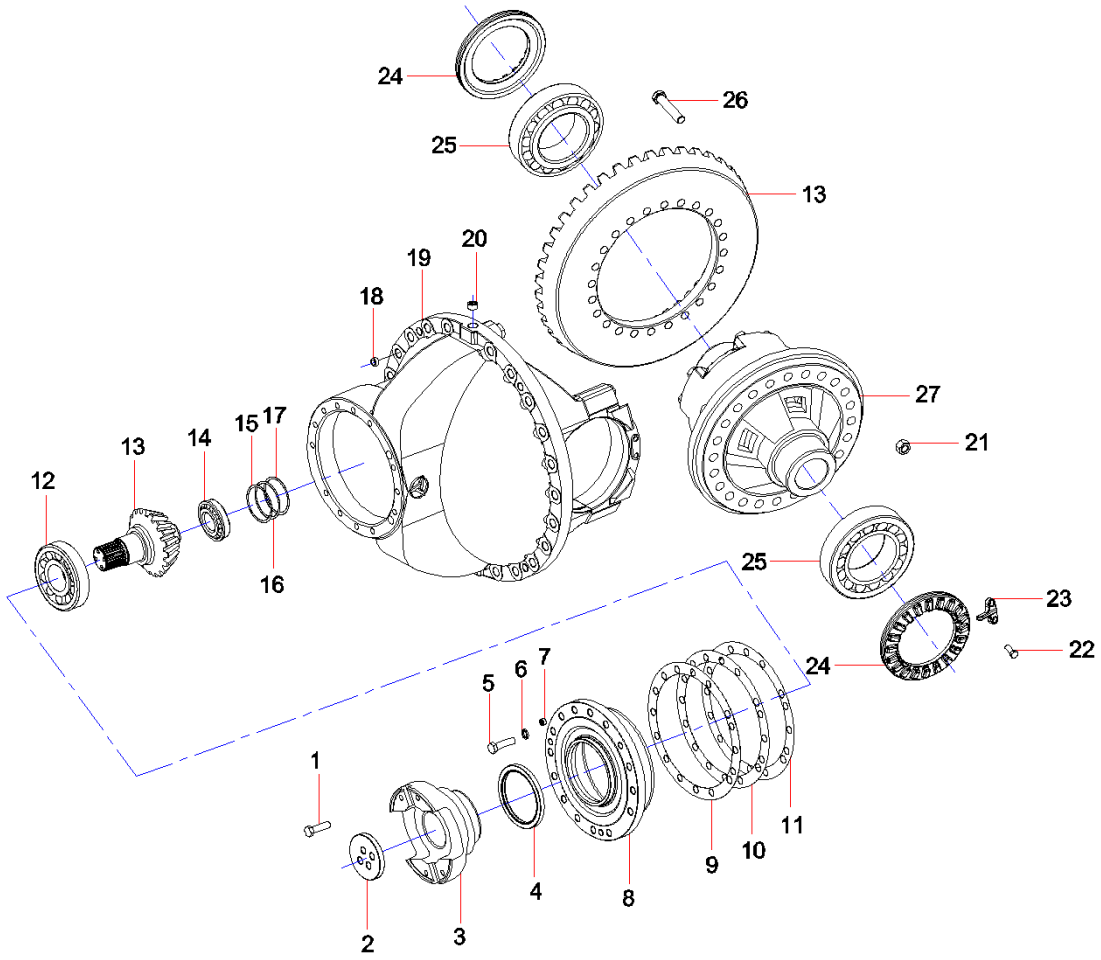
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11183392	Base	1	
2	11183391	Cover	1	


24
26
25
13
19
20
18
27
21
15
17
13
14
12
16
25
23
22
24
5
6
7
1
11
10
9
4
8
2
3

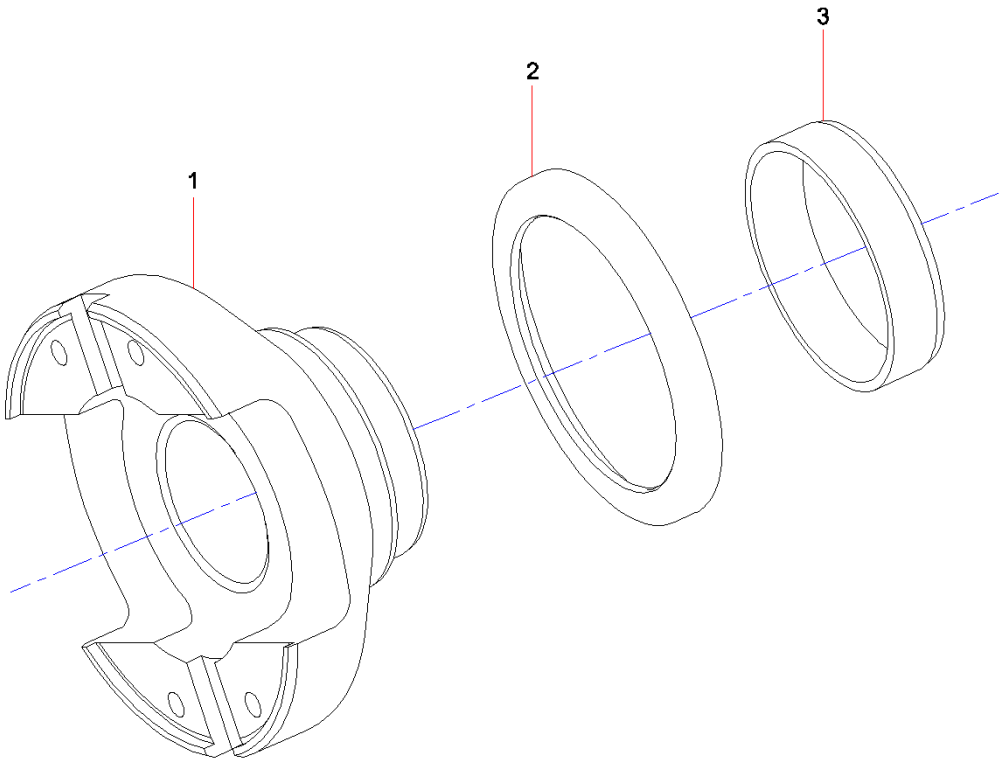
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12072336	Socket head screw	4	
2	11472260	Plate	1	
3	11473323	Yoke assembly	1	
4	60141598	Oil Seal	1	
5	A210111000055	Bolt M16 × 60GB5783 Grade 10.9	14	
6	24000514	Washer 16GB93	14	
7	A210206000026	Screw	3	
8	11472304	Seat	1	
9	11473100	Shim	1	
10	11473114	shim	1	
11	11473136	Shim	1	
12	60004046	Bearing	1	
13	60106154	Main reducer gear pair	1	
14	60004045	Bearing	1	
15	11473146	Shim	1	
16	11473161	Shim	1	
17	11473165	Shim	1	
18	A210206000009	Screw M20 × 12GB77	4	
19	11474421	Main reducer housing assembly SRT95.050.	1	
20	A210206000027	Screw	2	
21	60012073	Nut	24	
22	A210128000003	Bolt	4	


24
26
25
13
19
20
18
27
21
15
17
13
14
12
16
25
23
22
24
5
6
7
1
11
10
9
4
8
2
3

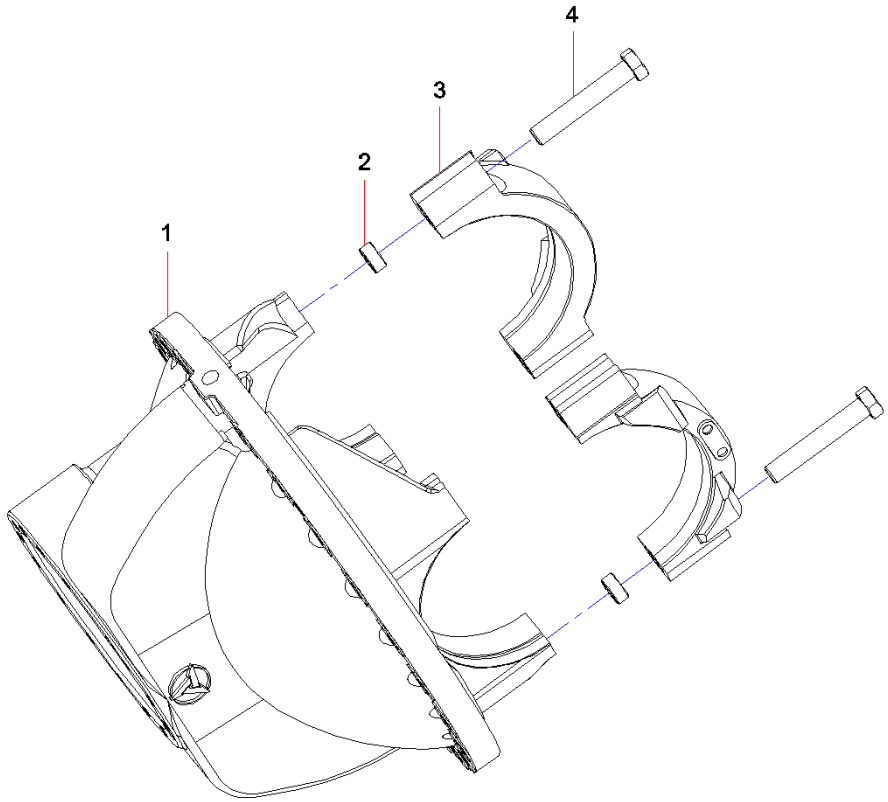
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	11181959	Lock	2	
24	11181989	Bearing adjuster	2	
25	B221500000639	Bearing	2	
26	11182034	Bolt	24	
27	11182915	Differential assembly	1	


1
2
3

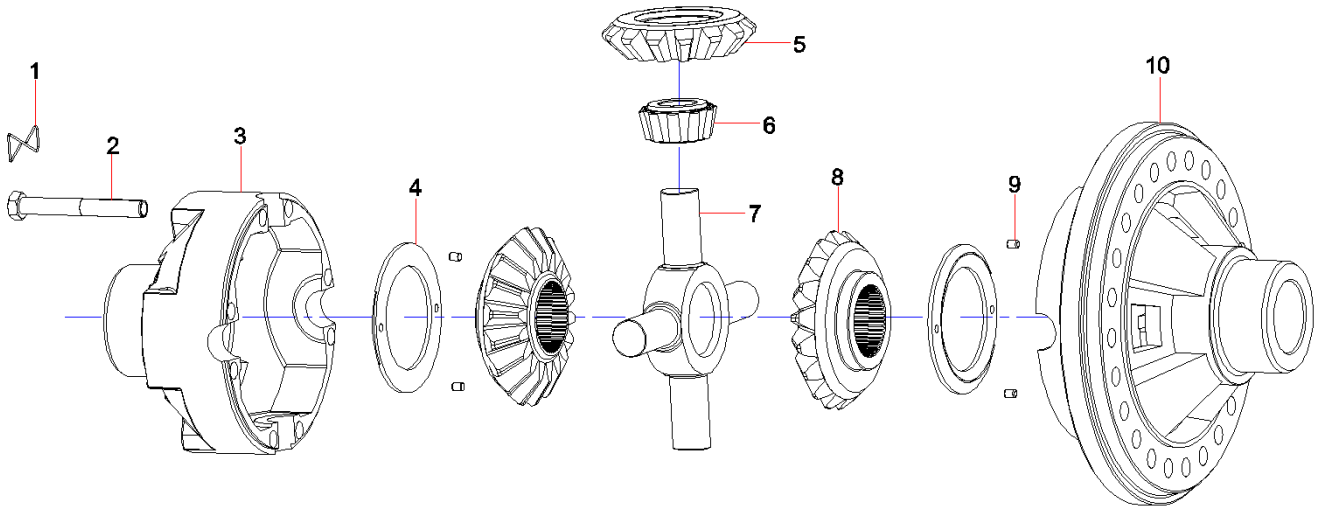
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60001258	Fork,flange,input,differential	1	
2	11473313	Cover,dustproof	1	
3	12439547	Spacer Sleeve	1	


4
3
2
1

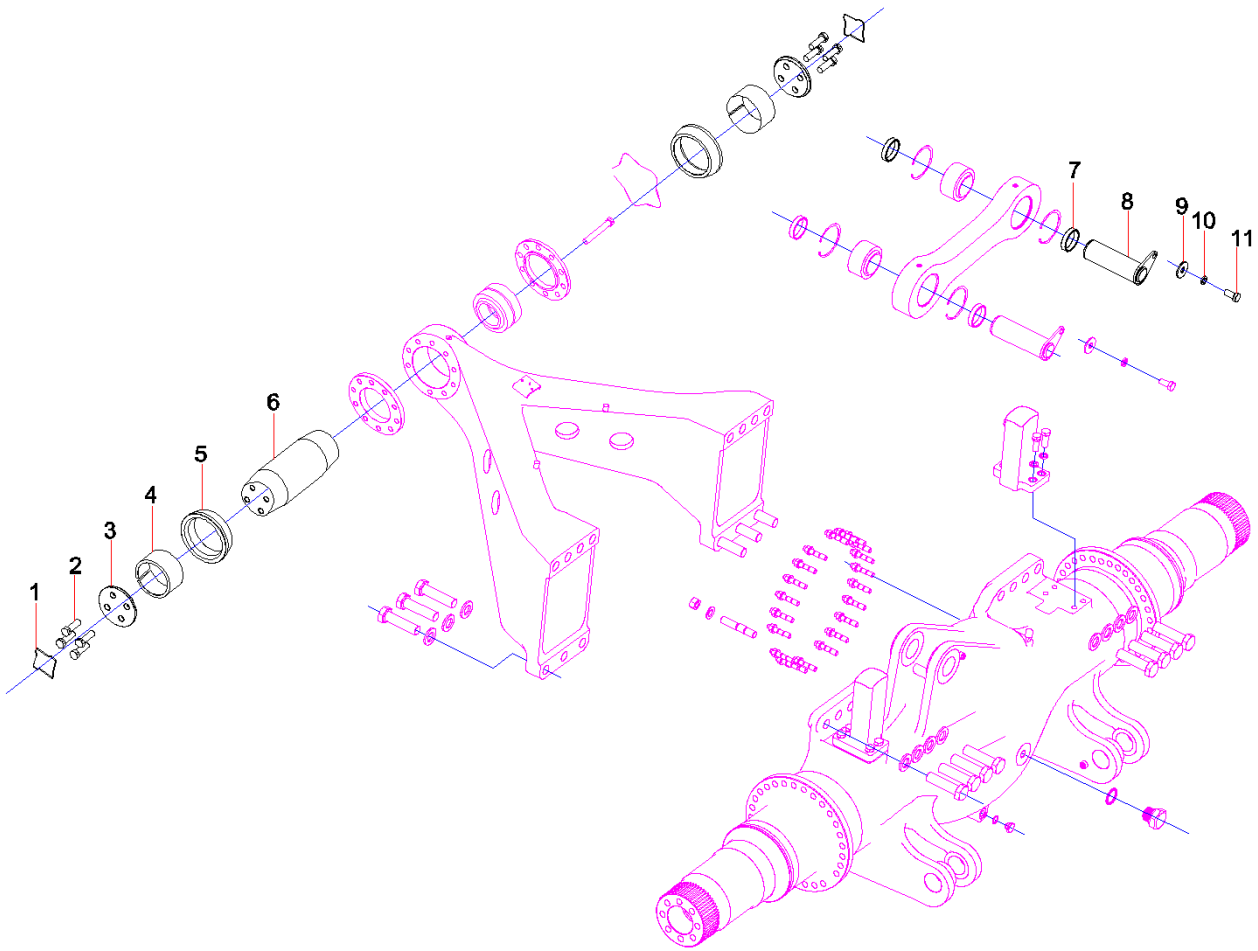
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11473351	Main reducer housing	1	
2	11182434	Locating Sleeve	4	
3	11182437	Bearing cap	2	
4	60006202	Bolt M24 × 2 × 140GB32.3 12.9 grade	4	


1
2
3
4
5
6
7
8
9
10

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11182172	Lockwire	4	
2	60006201	Bolt	8	
3	11182708	Left differential housing	1	
4	11182517	Thrust Washer	2	
5	11182624	Planetary bevel gear	4	
6	B221500000637	Bearing	4	
7	11182622	Spider	1	
8	11182600	Axle shaft bevel gear	2	
9	11182592	Dowel pin	4	
10	11182736	Right differential housing	1	


1
2
3
4
5
6
7
8
9
10
11

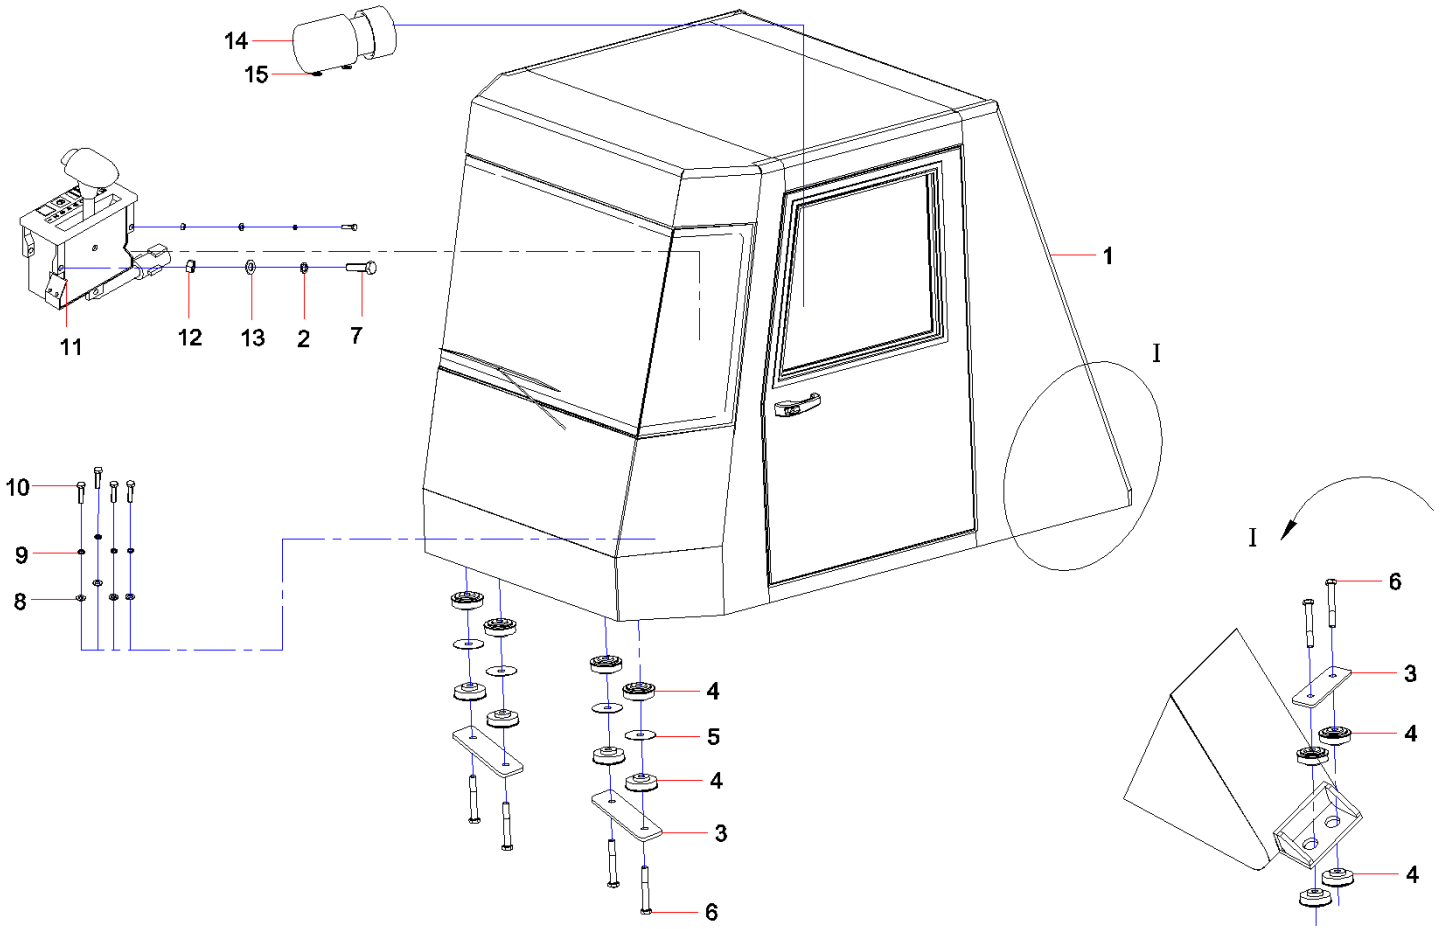
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11510233	Steel Wire	2	
2	23002506	Bolt M16 × 50GB32.1 Grade 10.9	8	
3	11510231	Plate	2	
4	11510230	Bush	2	
5	11510229	Spacer	2	
6	11510232	Tapered Pin	1	
7	11507582	Spacer	2	
8	12951120	Shaft	1	
9	A210404000004	Washer	1	
10	24000513	Washer 12GB93 DACROMET	1	
11	A210111000199	Bolt M12 × 20GB5783 Grade 10.9	1	

https://truckmanualshub.com/

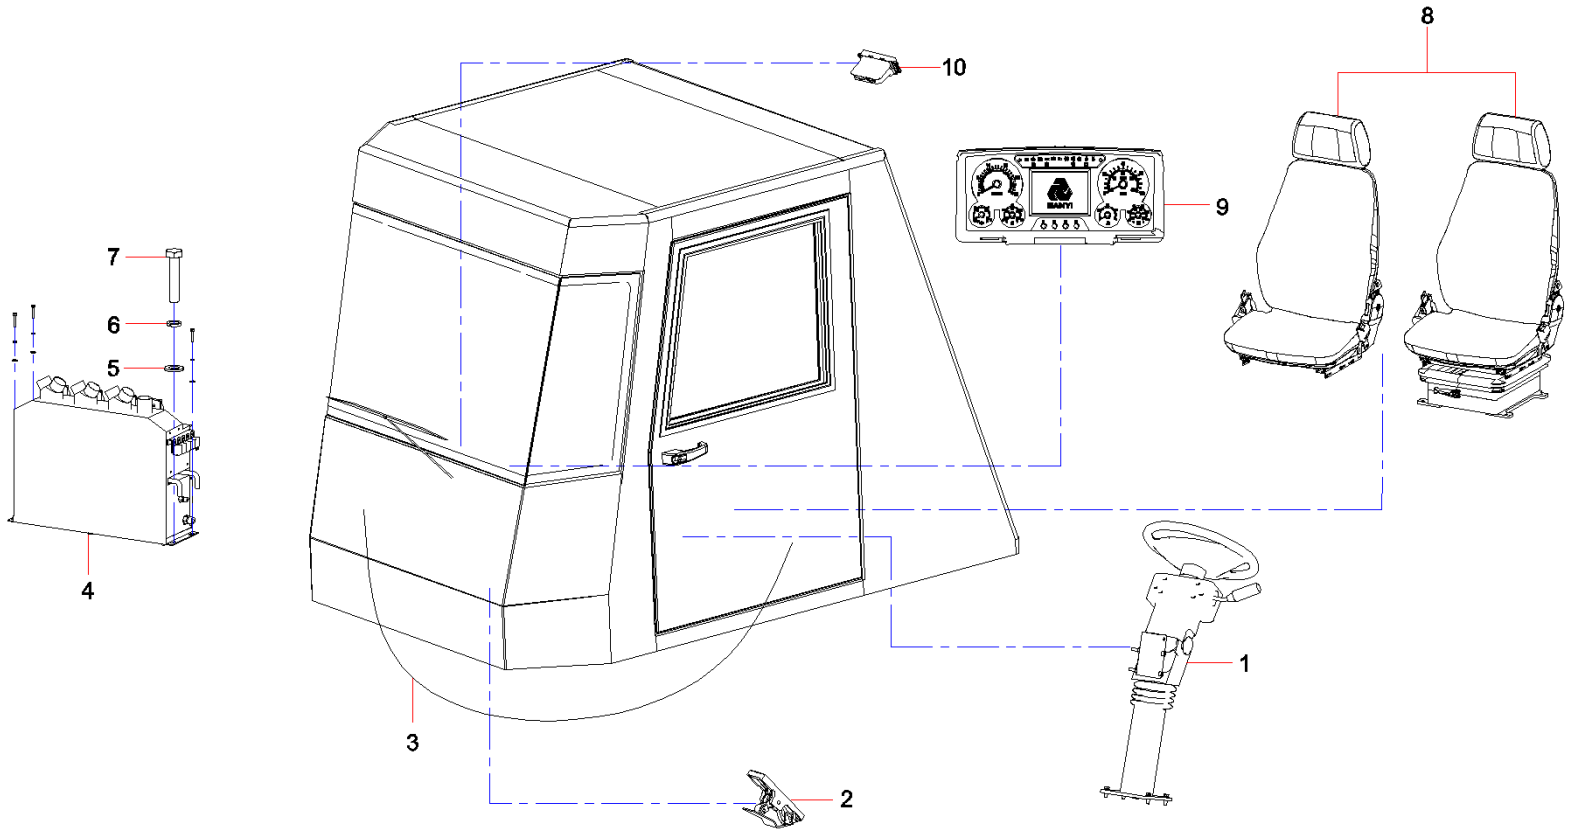
https://truckmanualshub.com/

Group 5
Accessories of cab


14
15
11
12
13
2
7
1
I
10
9
8
4
5
4
3
6
I
6
3
4
4

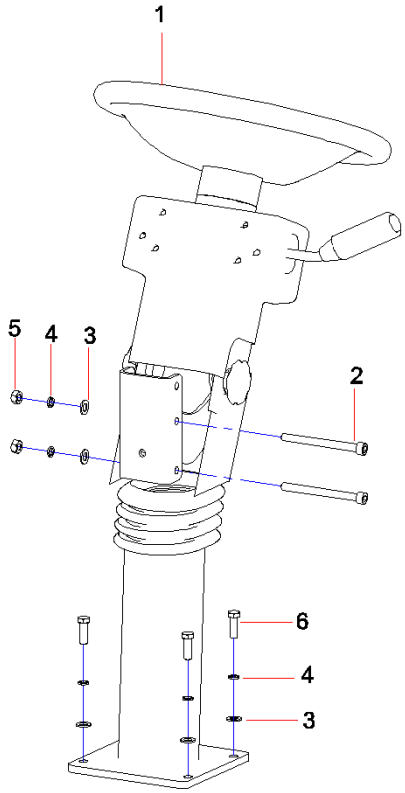
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12955478	Fixing of cab accessories	1	
2	60060564	Washer	2	
3	12952443	Cushion	4	
4	60023245	Absorber	16	
5	12859515	Washer	4	
6	A210114000062	Bolt M22 × 1.5 × 160GB5785 10.9 grade	4	
7	A210111000082	Bolt	2	
8	24000637	Washer	8	
9	24000512	Washer 10GB93	4	
10	A210111000197	Bolt	4	
11	60007138	Selector，rod	1	
12	23000169	Nut	2	
13	24000632	Washer	2	
14	60233855	Supercharger assembly	1	
15	10667424	Fixed block for Cluster	4	


10
8
9
7
6
5
4
3
1
2

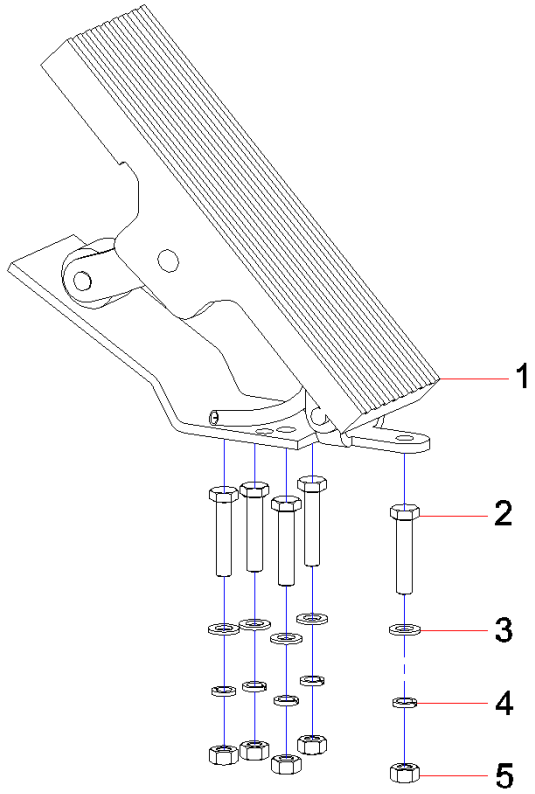
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11217564	Steering column assembly	1	
2	11569436	Accelerograph controller assembly	1	
3	12927012	Driver's cab harness	1	
4	A229900010580	Evaporator Assy.	1	
5	A210401000017	Washer	4	
6	24000633	Washer	4	
7	A210111000093	Bolt	4	
8	11569403	Seat assembly	1	
9	12933082	Switch and meter	1	
10	60035728	Mounting plate for control panel of air	1	


1
5
4
3
2
6
4
3

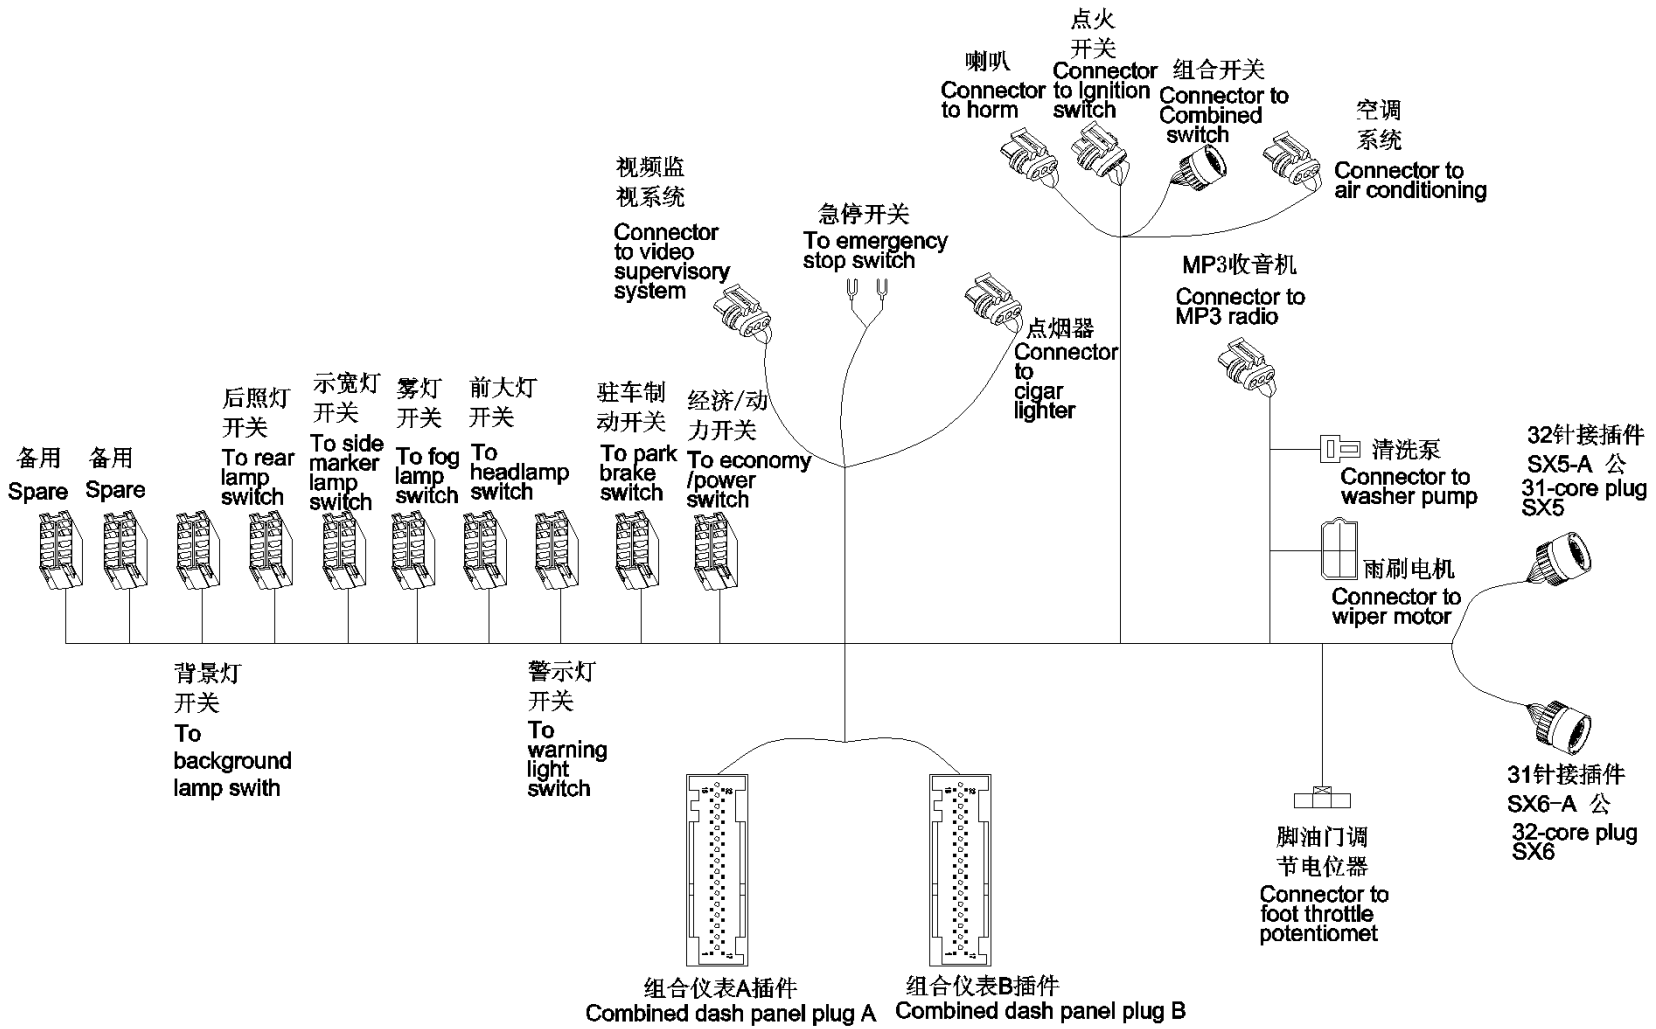
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60117879	Steering column	1	
2	A210204000477	Screw	2	
3	24000637	Washer	6	
4	24000512	Washer 10GB93	6	
5	A210307000036	Nut	2	
6	A210111000024	Bolt	4	

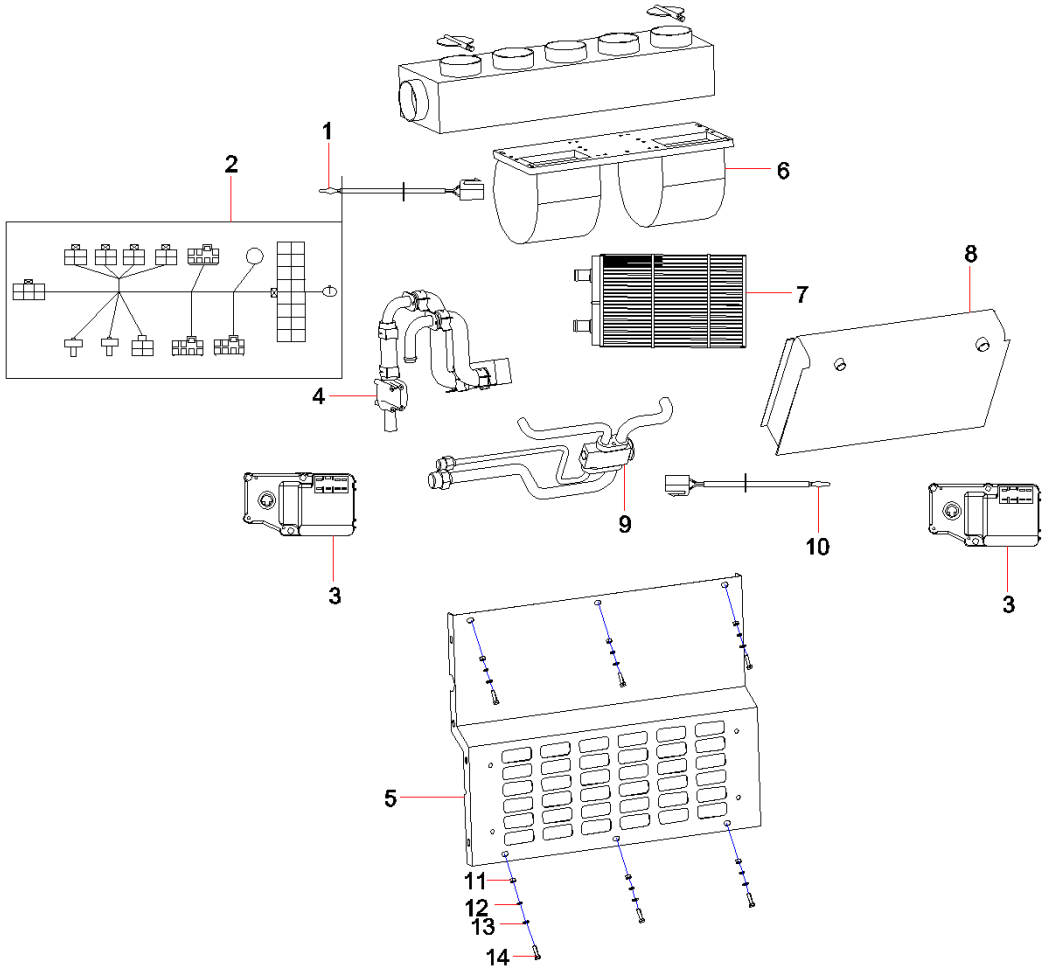

1
2
3
4
5

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	21016951	Accelerograph controller assembly	1	
2	A210111000093	Bolt	5	
3	24000633	Washer	5	
4	A210401000017	Washer	5	
5	A210307000055	Nut M8GB6170 Grade 10	5	

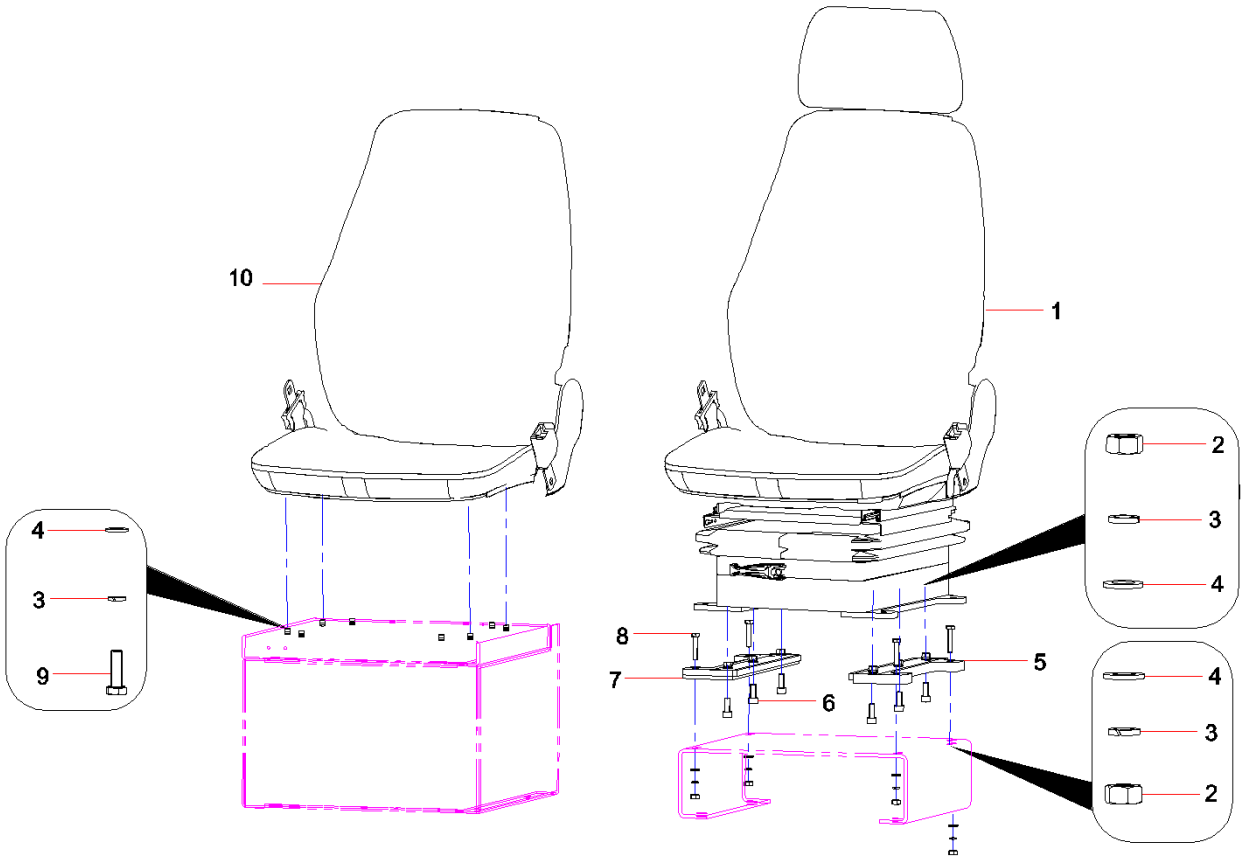

点火
开关
Connector to Ignition switch
喇叭
Connector to horn
组合开关
Connector to Combined switch
空调
系统
Connector to air conditioning
视频监
视系统
Connector to video supervisory system
急停开关
To emergency stop switch
点烟器
Connector to cigar lighter
MP3收音机
Connector to MP3 radio
备用
Spare
备用
Spare
后照灯
开关
To rear lamp switch
示宽灯
开关
To side marker lamp switch
雾灯
开关
To fog lamp switch
前大灯
开关
To headlamp switch
驻车制
动开关
To park brake switch
经济/动
力开关
To economy /power switch
清洗泵
Connector to washer pump
雨刷电机
Connector to wiper motor
32针接插件
SX5-A 公
31-core plug
SX5
背景灯
开关
To background lamp swith
警示灯
开关
To warning light switch
31针接插件
SX6-A 公
32-core plug
SX6
脚油门调
节电位器
Connector to foot throttle potentiomet
组合仪表A插件
Combined dash panel plug A
组合仪表B插件
Combined dash panel plug B

https://truckmanualshub.com/


1
2
6
7
8
4
9
10
3
3
5
11
12
13
14

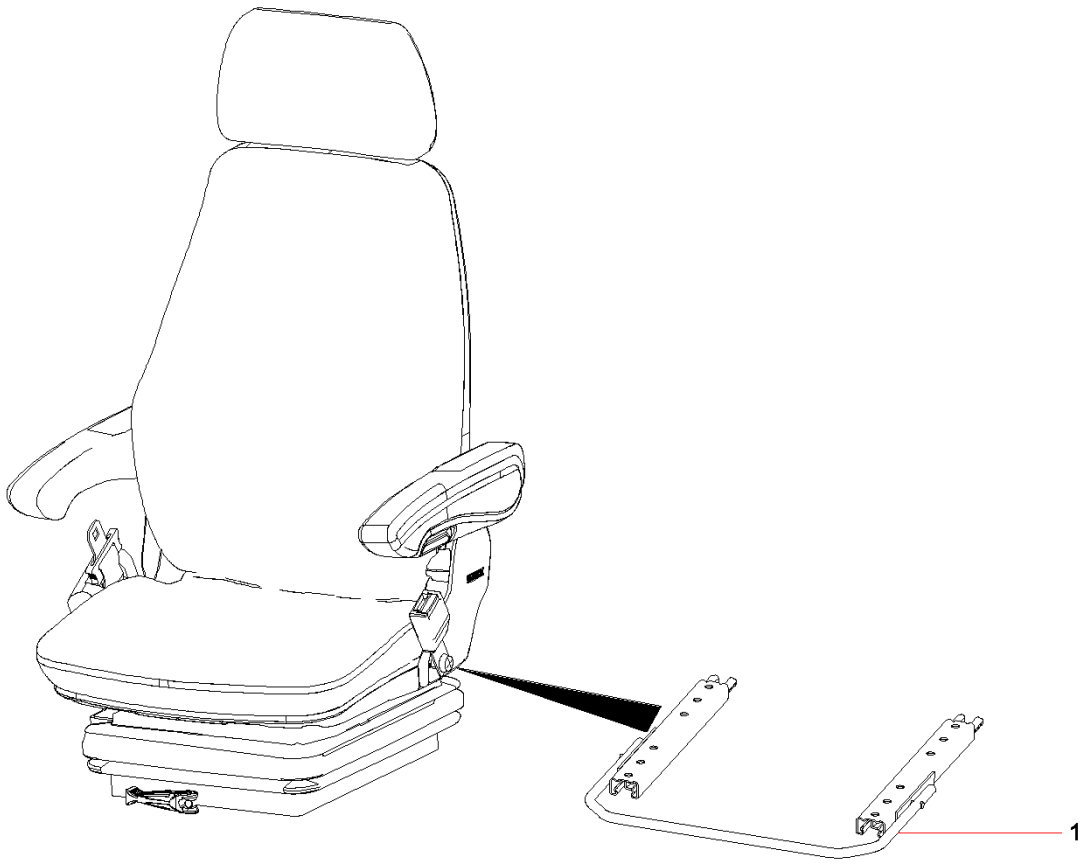
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60236734	Temperature sensor of air filter	1	
2	60236735	Air filter harness	1	
3	60236736	Servo motor	2	
4	60236737	Relay	4	
5	60236738	Core	1	
6	60164524	Evaporator fan	1	
7	60164523	Warmer water tank	1	
8	60164525	Evaporator core body assembly	1	
9	60164522	Expansion valve	1	
10	60236741	Defrost temperature sensor	1	
11	A210307000012	Nut	6	
12	A210401000017	Washer	6	
13	A210405000007	Washer	6	
14	A210111000091	Bolt	6	


10
1
2
3
4
4
3
9
8
7
6
5
4
3
2

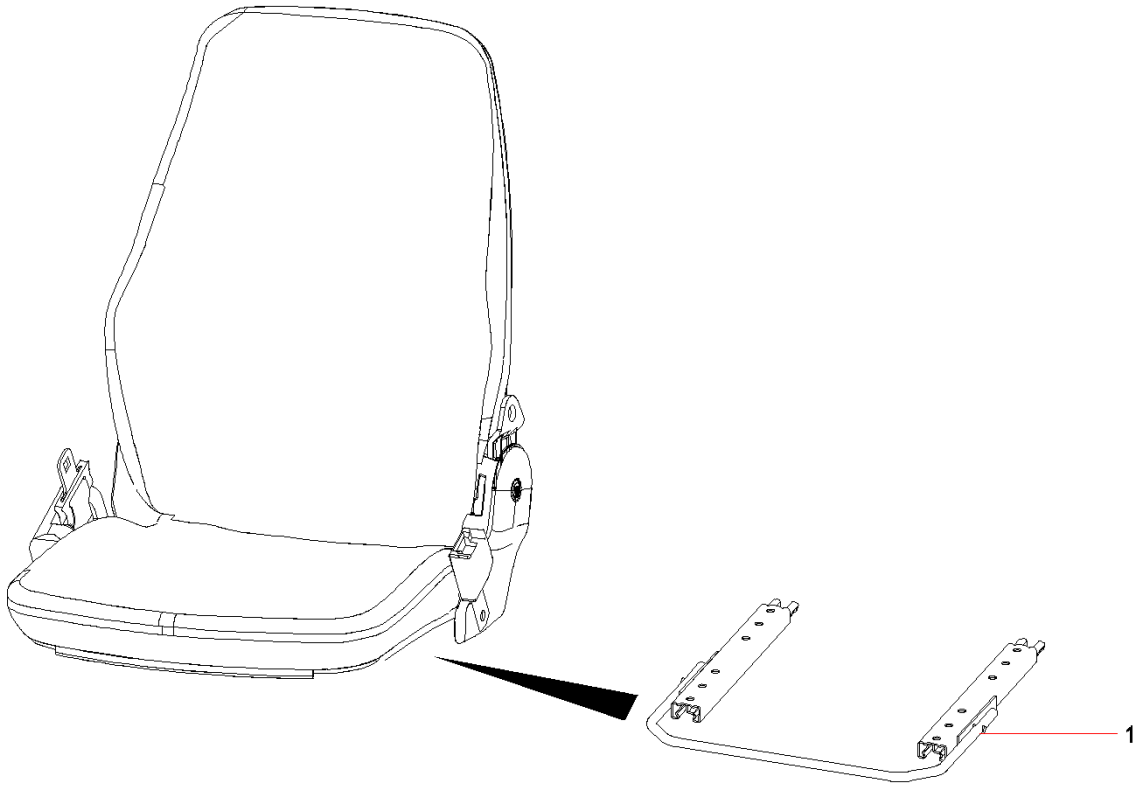
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60127236	Mechanical Suspension Driver seat	1	
2	A210307000055	Nut M8GB6170 Grade 10	10	
3	A210401000017	Washer	14	
4	24000633	Washer	14	
5	12252616	Right connecting board of main seat	1	
6	A210204000220	Screw	6	
7	12252613	Left connecting board of main seat	1	
8	A210111000293	Bolt	4	
9	A210111000323	Bolt	4	
10	A229900009850	Mechanic suspension auxiliary driving seat	1	


1

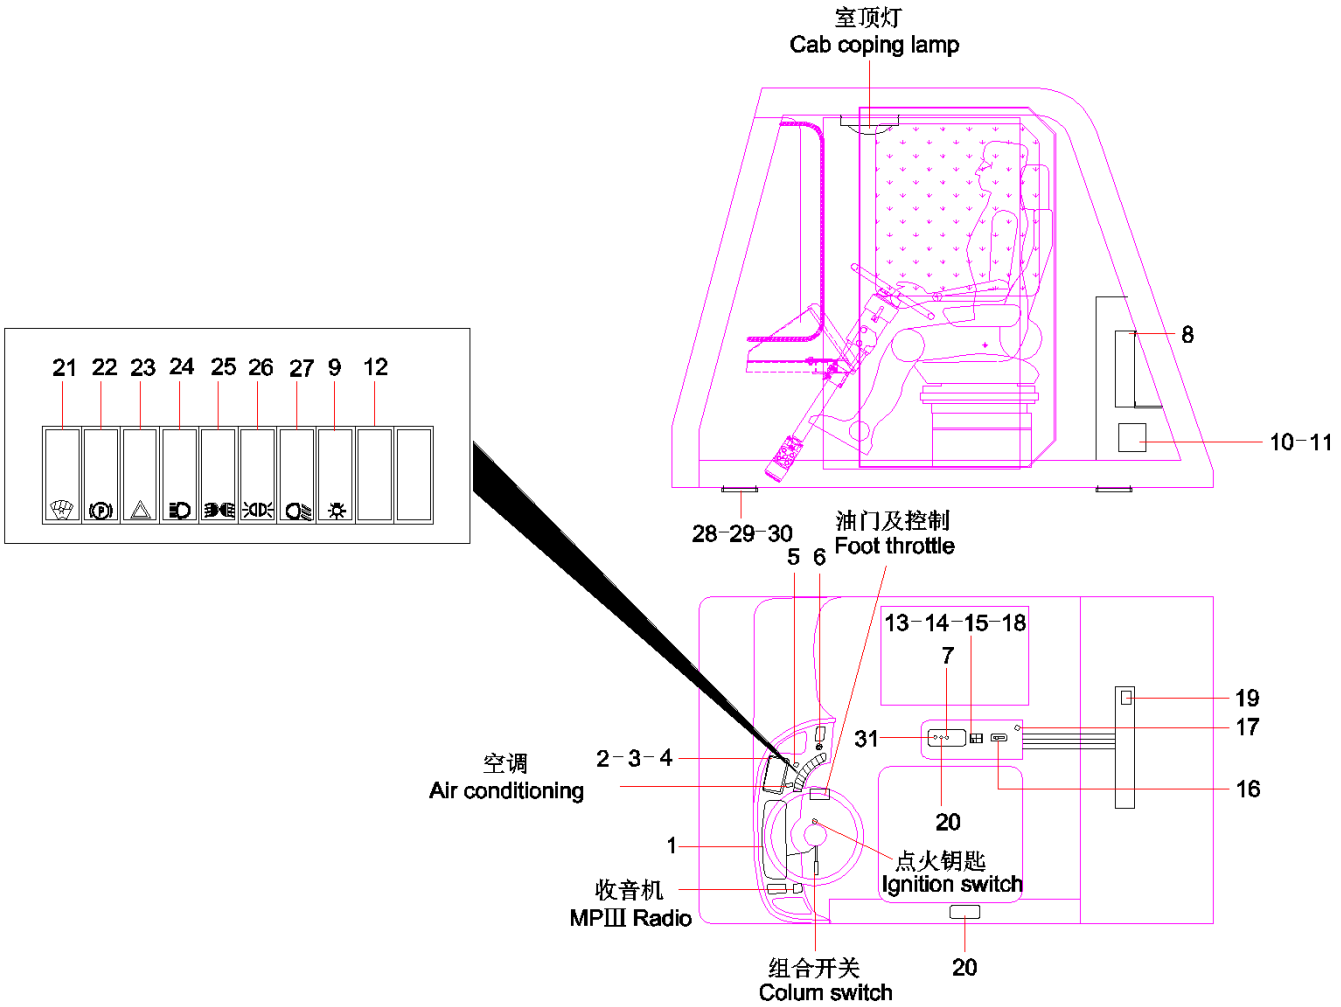
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60115160	Rail AS,guide,seat,for driver	1	


1

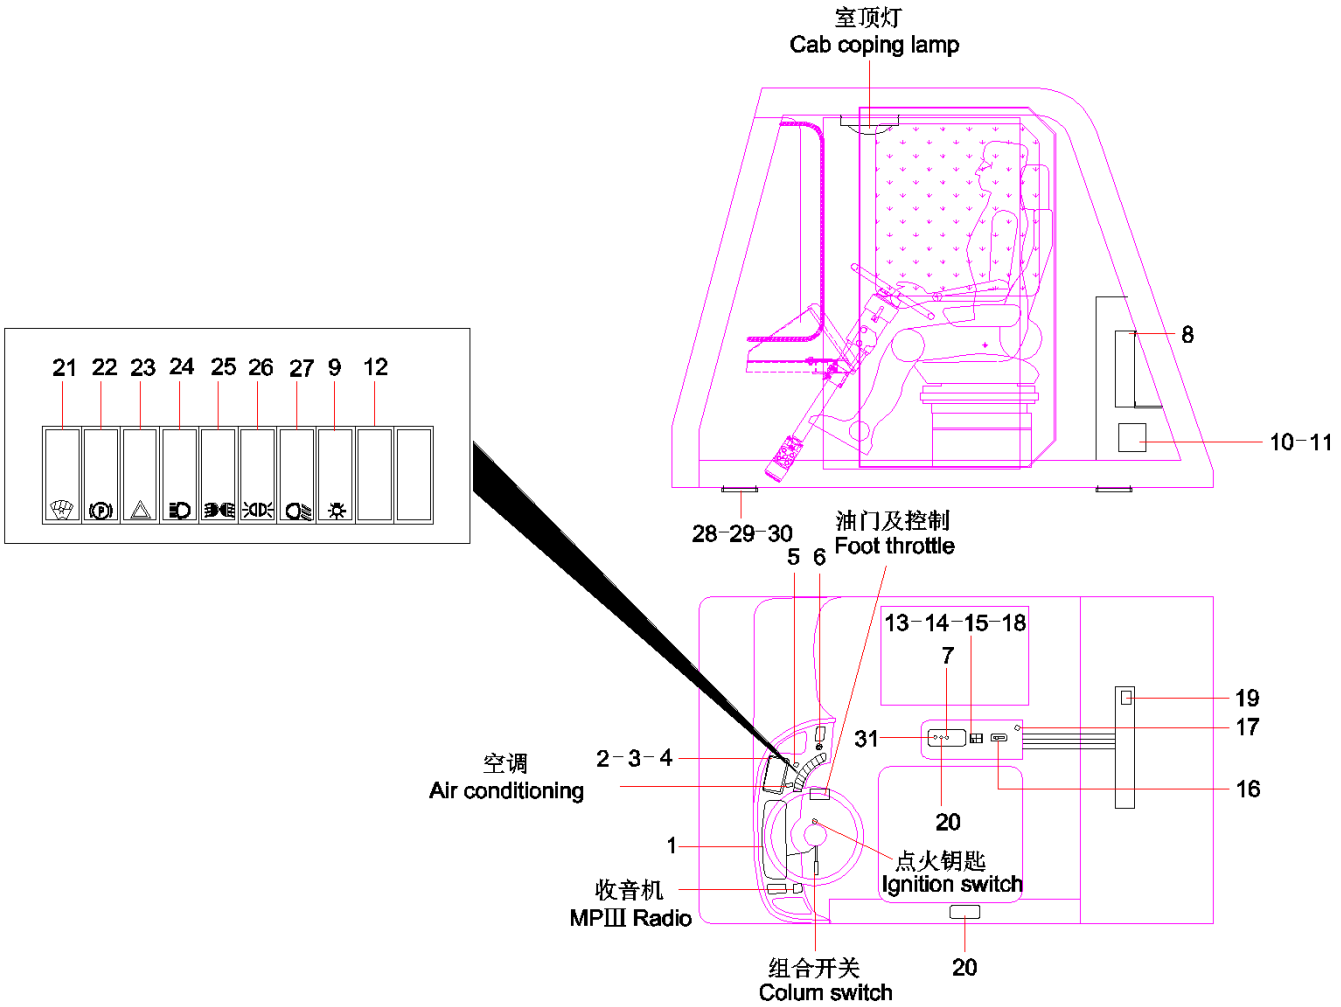
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60115160	Rail AS,guide,seat,for driver	1	


室顶灯
Cab coping lamp
21 22 23 24 25 26 27 9 12
8
10-11
28-29-30
油门及控制
Foot throttle
5 6
13-14-15-18
7
19
17
31
16
空调
Air conditioning
2-3-4
20
1
点火钥匙
Ignition switch
收音机
MPⅢ Radio
组合开关
Colum switch
20

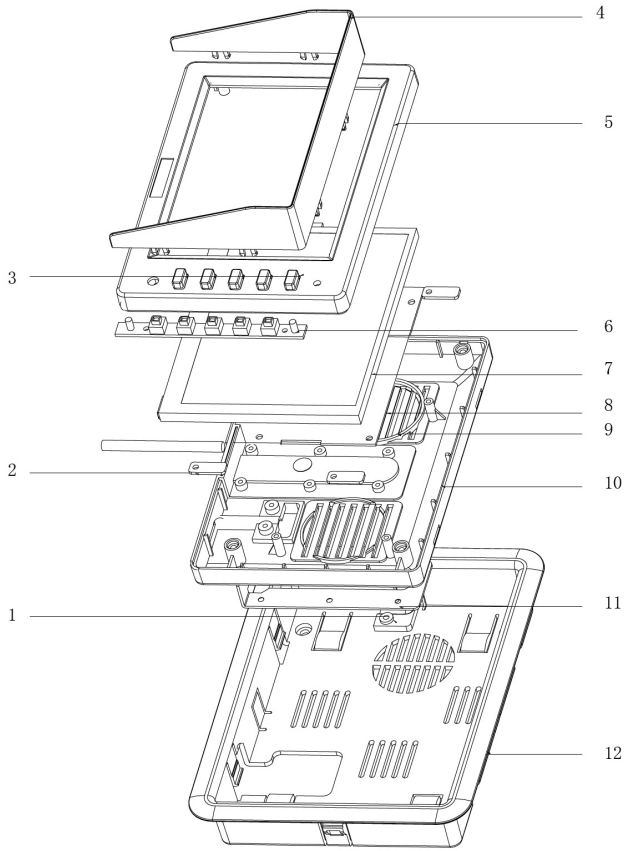
https://truckmanualshub.com/

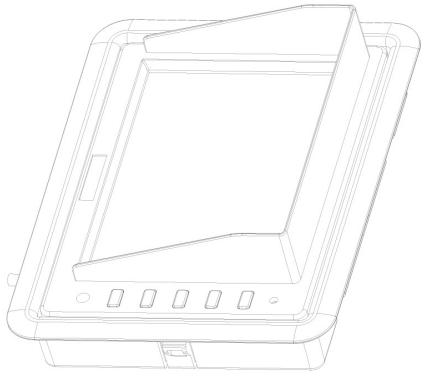
Item No.	Part No.	Description	Qty.	Remark
1	60200651	Combination Meter	1	
2	A249900001541	Monitor	1	
3	A249900000963	Control Box	1	
4	A241900000577	20–meter signal–line & accessories	1	
5	60026642	Emergency Stop Button	1	
6	A229900003764	Lighter, cigarette	1	
7	60257105	Button Switch	1	
8	12933079	Control board installation	1	
9	60150600	Rocker switch	1	
10	11620913	Sany Mining truck GPS	1	
11	A210210000011	Screw M5 × 25GB818	2	
12	60060816	Mounting panel end	8	
13	60060813	Mounting panel end	6	
14	60150619	Rocker switch	1	
15	60040549	Switch	4	
16	60194763	Control Lever	1	
17	60082790	Buzzer XB2–BSBC Grey	1	
18	60060815	Connector	3	
19	A210307000001	Nut	4	
20	60257106	Button Switch	1	
21	60150618	Rocker switch	1	
22	60150599	Rocker switch	1	


室顶灯
Cab coping lamp
21 22 23 24 25 26 27 9 12
8
10-11
28-29-30
油门及控制
Foot throttle
5 6
13-14-15-18
7
19
17
31
16
空调
Air conditioning
2-3-4
20
1
点火钥匙
Ignition switch
收音机
MPⅢ Radio
组合开关
Colum switch
20

https://truckmanualshub.com/

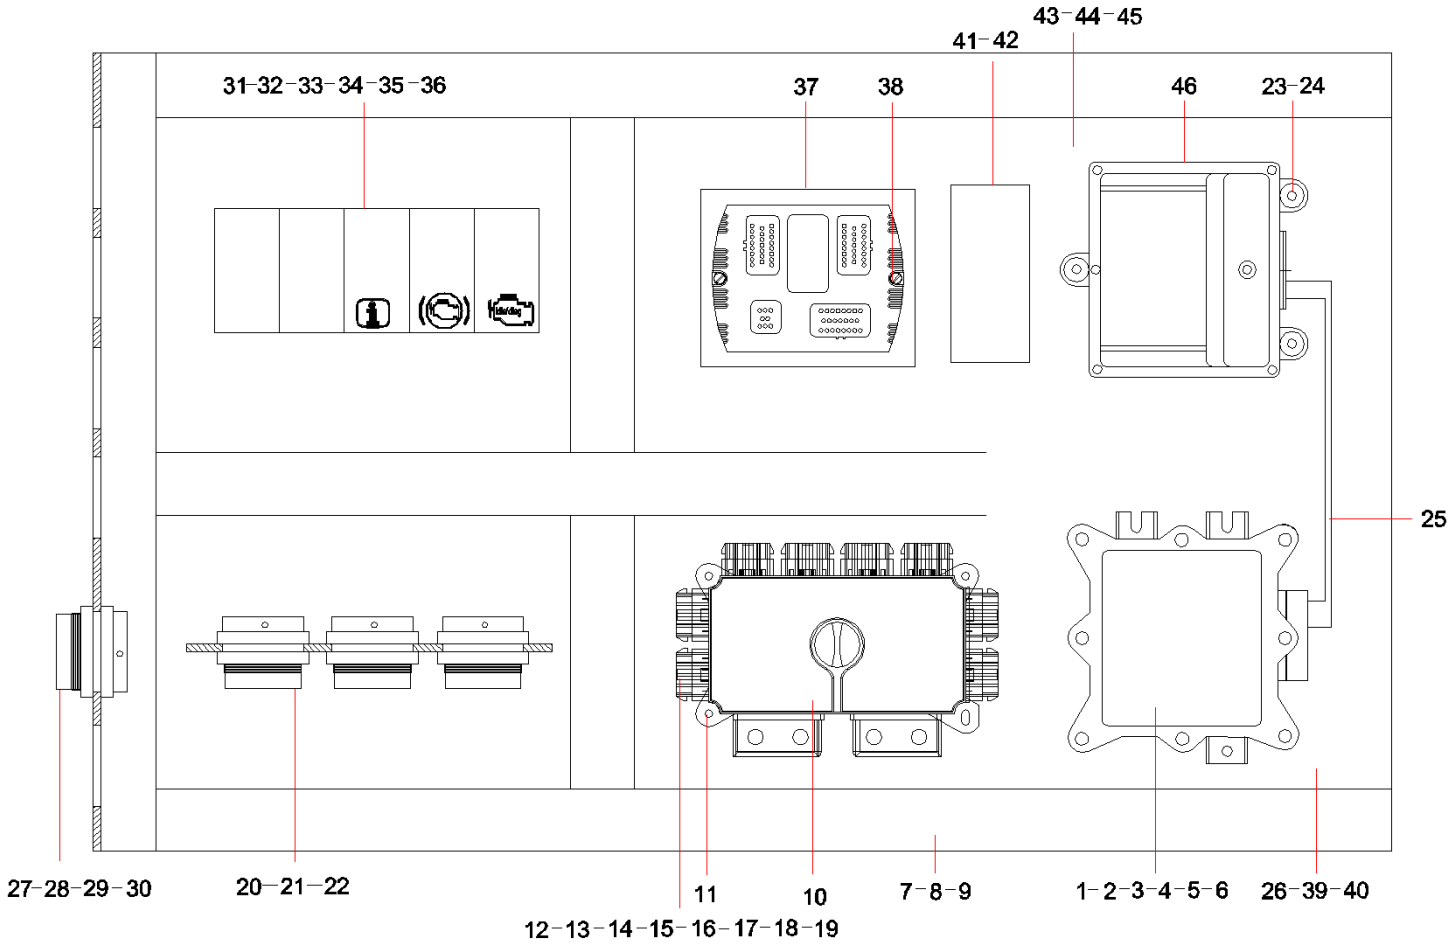
Item No.	Part No.	Description	Qty.	Remark
23	60150603	Rocker switch	1	
24	60150601	Rocker switch	1	
25	60150604	Rocker switch	1	
26	60150611	Rocker switch	1	
27	60150605	Rocker switch	1	
28	13165931	Installation plateJKGX06_1_1WX–10	1	
29	60248593	water–proof nylon cable	4	
30	60248594	water–proof nylon cable	1	
31	60257107	Button Switch	1	


4
5
3
6
7
8
9
2
10
11
1
12



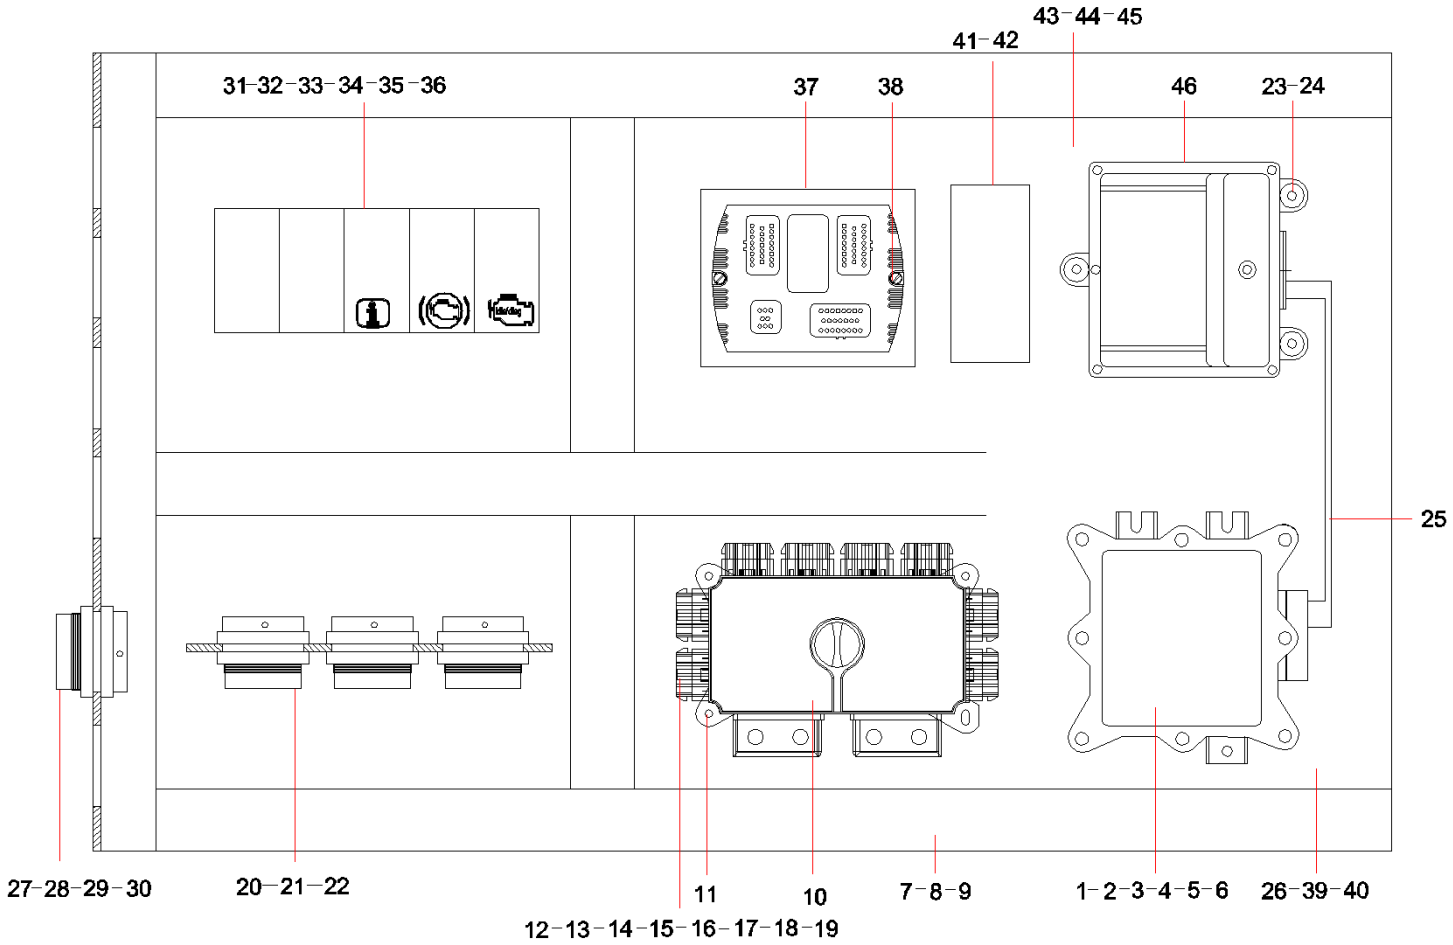
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60158267	Pressure block	1	
2	60158268	Pressure sheet	1	
3	60158301	Key	5	
4	60158269	Sun cover	1	
5	60158265	Front cover	1	
6	60158302	Key panel	1	
7	60158303	Display	1	
8	60158266	Drive board	1	
9	60158300	Horn	1	
10	60158260	Rear cover	1	
11	60158259	Back clamp	1	
12	60158282	Base	1	


43-44-45
41-42
31-32-33-34-35-36
37
38
46
23-24
25
27-28-29-30
20-21-22
11
10
7-8-9
1-2-3-4-5-6
26-39-40
12-13-14-15-16-17-18-19

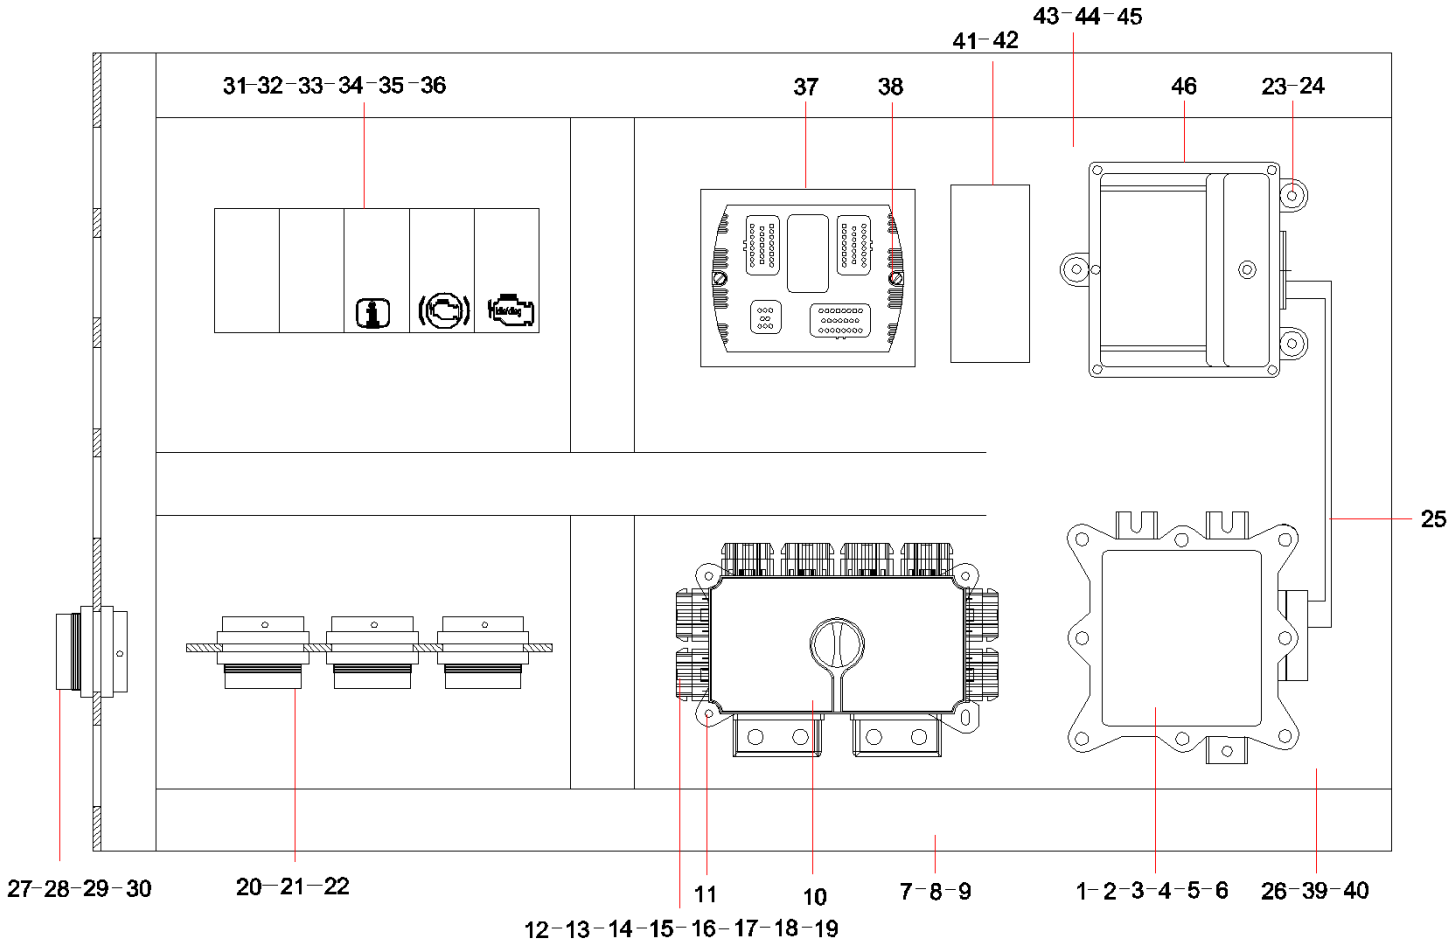
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B249900001468	M6610AR VIM 29516036	1	
2	B241900000269	VIM gear shift harness	1	
3	B241900000268	Gear shift harness	1	
4	60008377	Transmission harness	1	
5	B241900000267	Vehicle harness	1	
6	B241900000270	VIM harness	1	
7	A210210000006	Screw	13	
8	24000630	Washer	41	
9	24000509	Washer	41	
10	60100460	Central distribution case	1	
11	60198294	Central distributioncase	1	
12	21021560	Plug AS, squre	1	
13	21021561	Plug	2	
14	21021562	Plug AS, squre	1	
15	21021563	Plug	2	
16	21021564	Plug AS, squre	1	
17	21021565	Plug	2	
18	21021566	Plug AS, squre	1	
19	21021567	Plug	2	
20	A210210000002	Screw	16	
21	60028684	48 Pin Round Plug	1	
22	60028685	48 Core Round Socket	1	


43-44-45
41-42
31-32-33-34-35-36
37
38
46
23-24
25
27-28-29-30
20-21-22
11
10
7-8-9
1-2-3-4-5-6
26-39-40
12-13-14-15-16-17-18-19

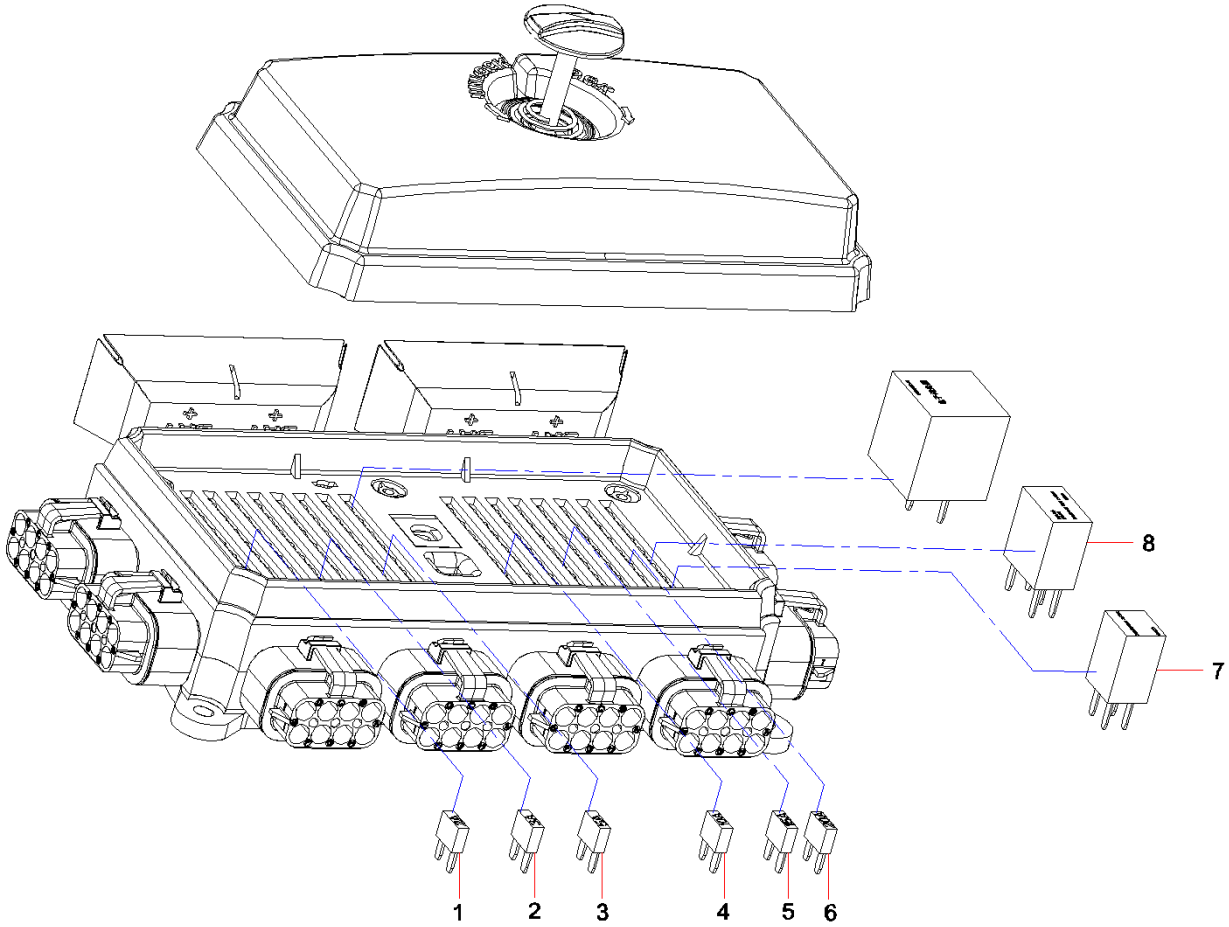
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	A210210000017	Screw	3	
24	A210210000027	Screw	3	
25	60008378	Input_Vehicle harness	1	
26	A210204000116	Screw	13	
27	11321139	Control board assembly	1	
28	A210210000026	Screw M4×20GB818	8	
29	24003256	Nut	8	
30	24000508	Washer	8	
31	60060816	Mounting panel end	3	
32	60060813	Mounting panel end	2	
33	60040549	Switch	3	
34	60150615	Rocker switch	1	
35	60150620	Rocker switch	1	
36	60150625	Rocker switch	1	
37	B249900001183	Programmable Controller	1	
38	A210210000011	Screw M5×25GB818	2	
39	A210307000015	Nut	6	
40	A210204000338	Screw	4	
41	B240700000250	Relay, auxiliary	6	
42	B240700000007	Protective sleeve, socket, relay	6	
43	A210307000031	Nut	4	
44	24000513	Washer 12GB93 DACROMET	8	


43-44-45
41-42
31-32-33-34-35-36
37
38
46
23-24
25
27-28-29-30
20-21-22
11
10
7-8-9
1-2-3-4-5-6
26-39-40
12-13-14-15-16-17-18-19

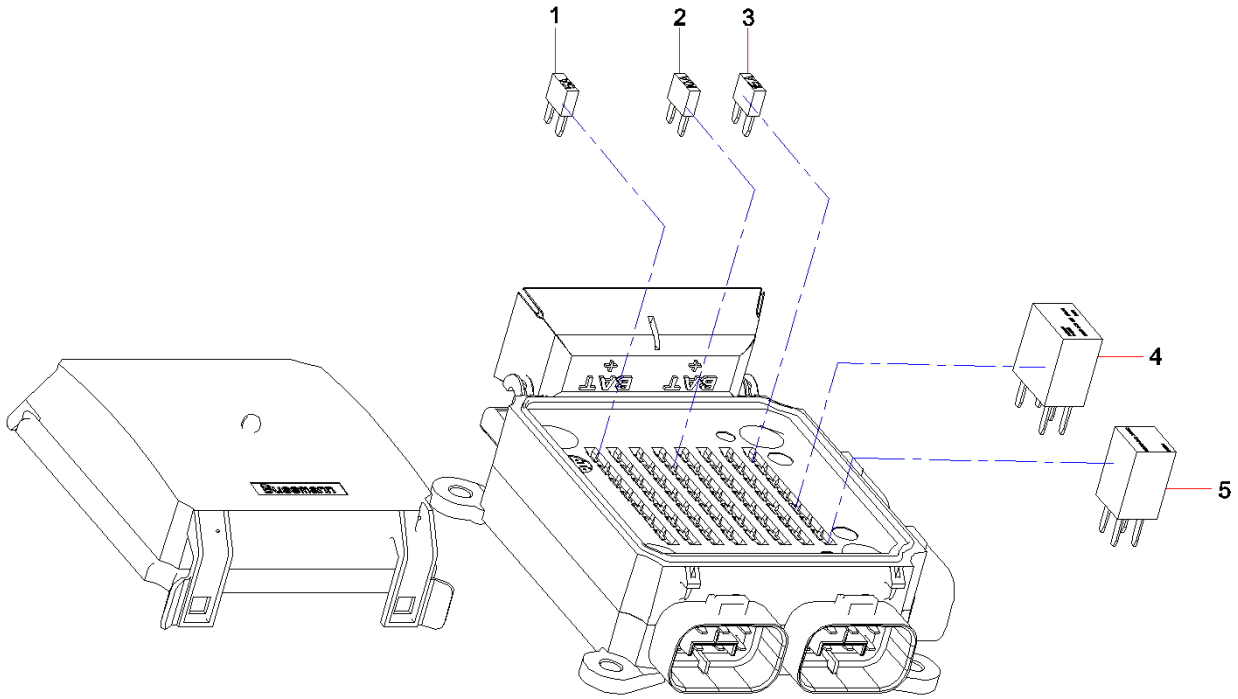
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
45	24000639	Washer 12GB97.1	4	
46	60117461	Electronic control unit	1	


8
7
1
2
3
4
5
6

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	21019917	Fuse	2	
2	60014830	Fuse	1	
3	21019916	Fuse	1	
4	21019915	Fuse	11	
5	60014829	Fuse	5	
6	21019914	Fuse	7	
7	60015838	Relay,central distribution box	10	
8	21019918	Relay	3	


1
2
3
4
5

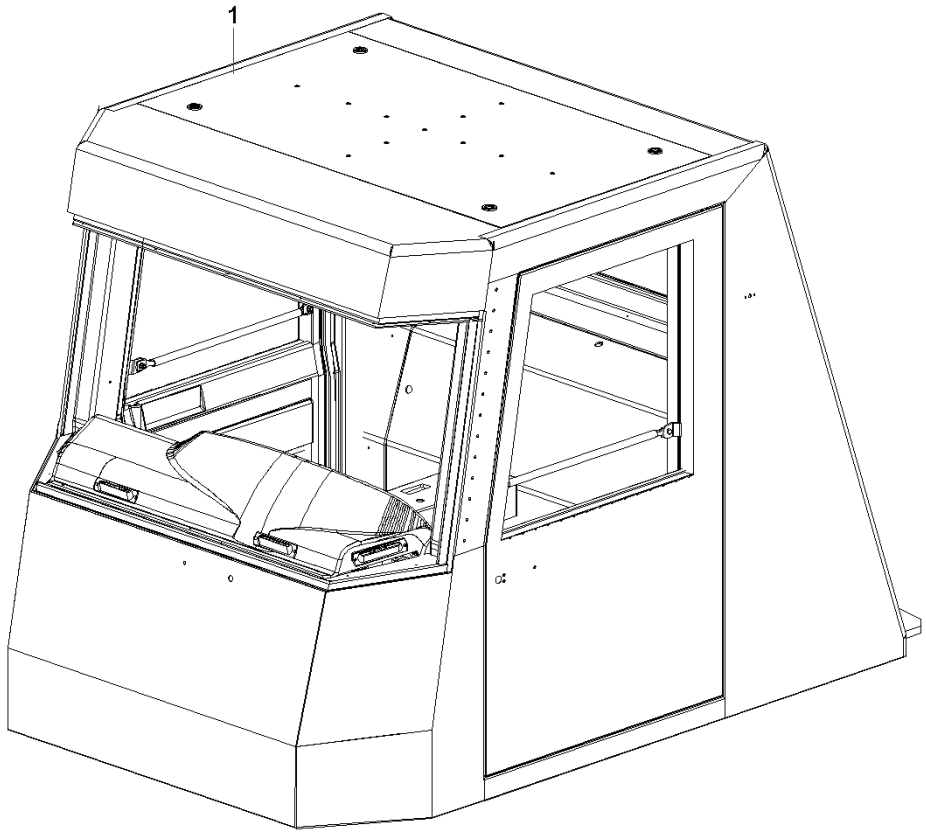
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	21019916	Fuse	9	
2	21019915	Fuse	5	
3	60014829	Fuse	1	
4	21019918	Relay	1	
5	60015838	Relay,central distribution box	4	

https://truckmanualshub.com/

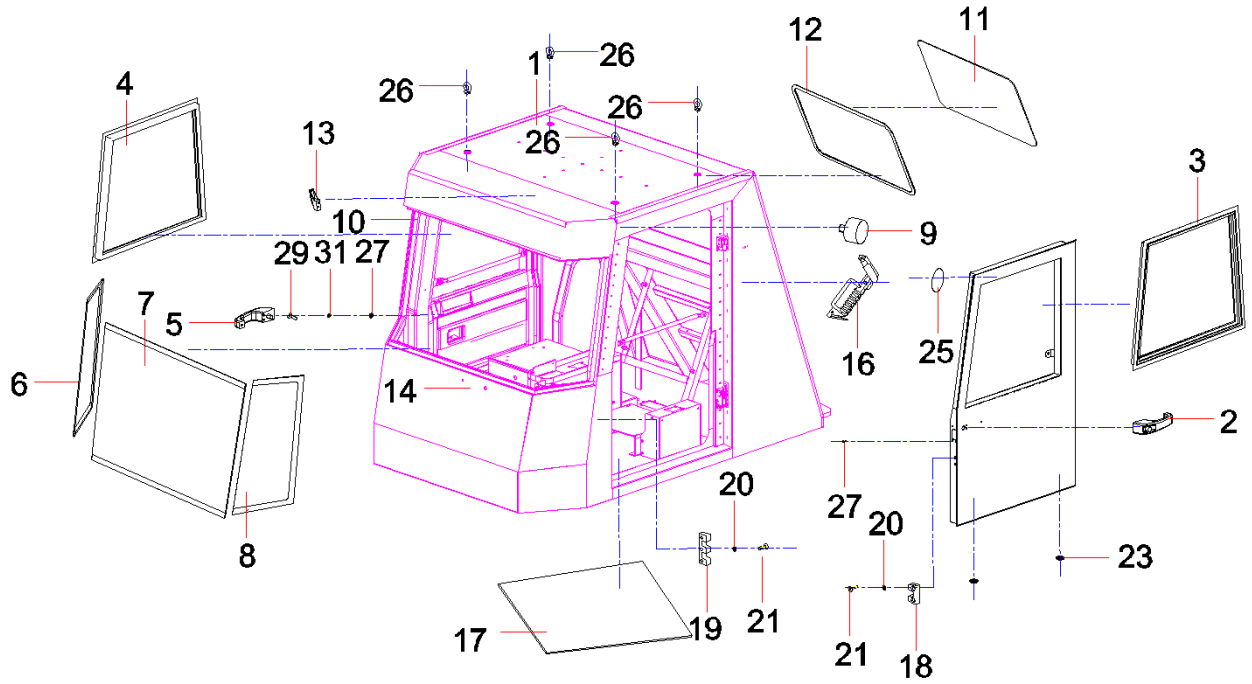
https://truckmanualshub.com/

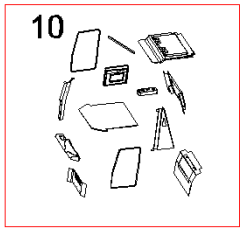
Group 6
Subassembly of rigid dump

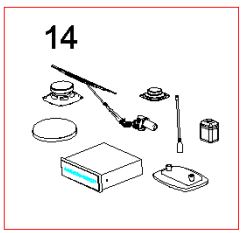

1

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12952316	Subassembly of rigid dump truck cab	1	


4
26
1
26
26
26
12
11
13
10
9
3
29
31
27
7
5
6
14
16
25
2
20
27
20
23
8
17
19
21
21
18

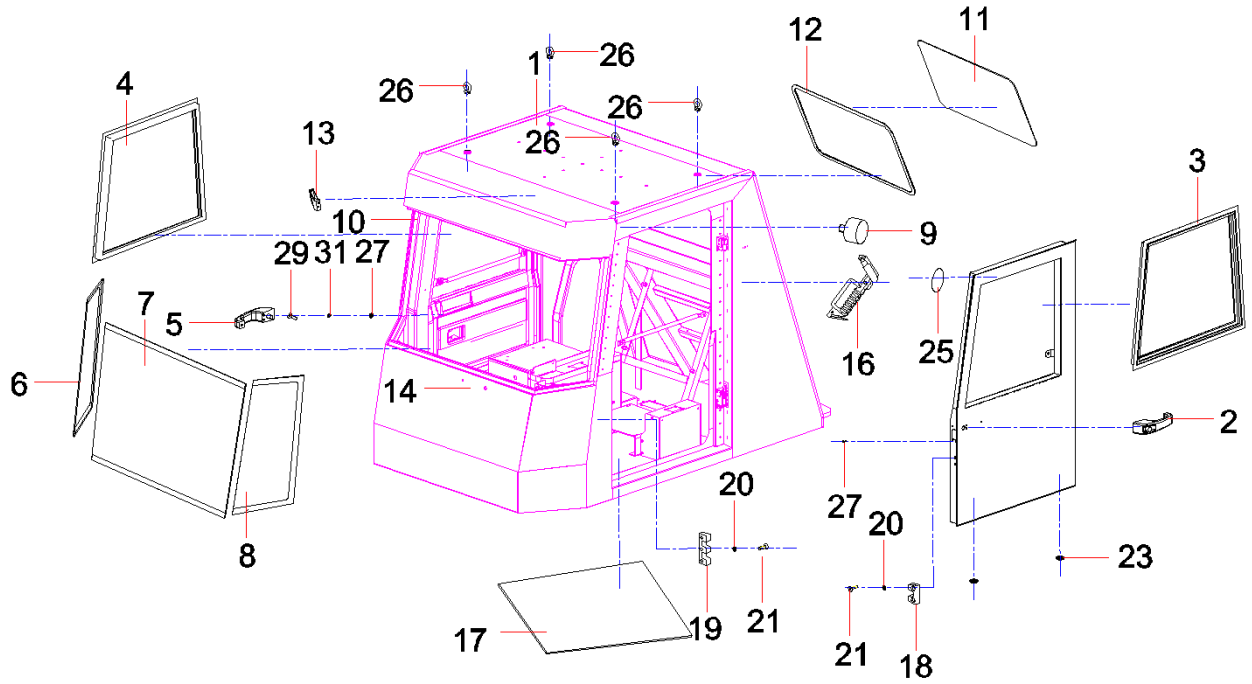

10

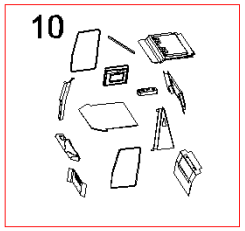

14

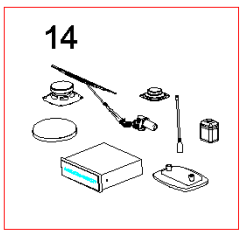

24

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12985767	Body, cab JKGX06.1	1	
2	60066750	Inner & outer door handle	1	
3	11404619	Window, left sliding	1	
4	11404618	Right sliding window	1	
5	60066749	Inner & outer door handle	1	
6	11400593	Right–front window glass	1	
7	11400591	Front window glass	1	
8	11400592	Left–front window glass	1	
9	12685035	Block, rubber limit	4	
10	12990476	Assembly, of, SRT95C, decoration JKGX06.	1	
11	11400590	rear window glass	1	
12	A230105000068	Rubber strip, side window	3	
13	A229900005559	Hook, hat & coat	1	
14	11550237	Electrical system,cab	1	
16	60001291	Emergency hammer	1	
17	60014125	Plate, isolation	3	
18	12561580	Block, spacing	2	
19	12562203	Block, limit	2	
20	A210459000005	Washer 8GB956.2	10	
21	23002292	Screw	10	
23	60042056	Plug	4	
24	11270627	Nameplate	1	


4
26
1
26
26
26
12
11
13
10
9
3
29
31
27
7
5
6
14
16
25
2
20
27
20
23
8
17
19
21
21
18

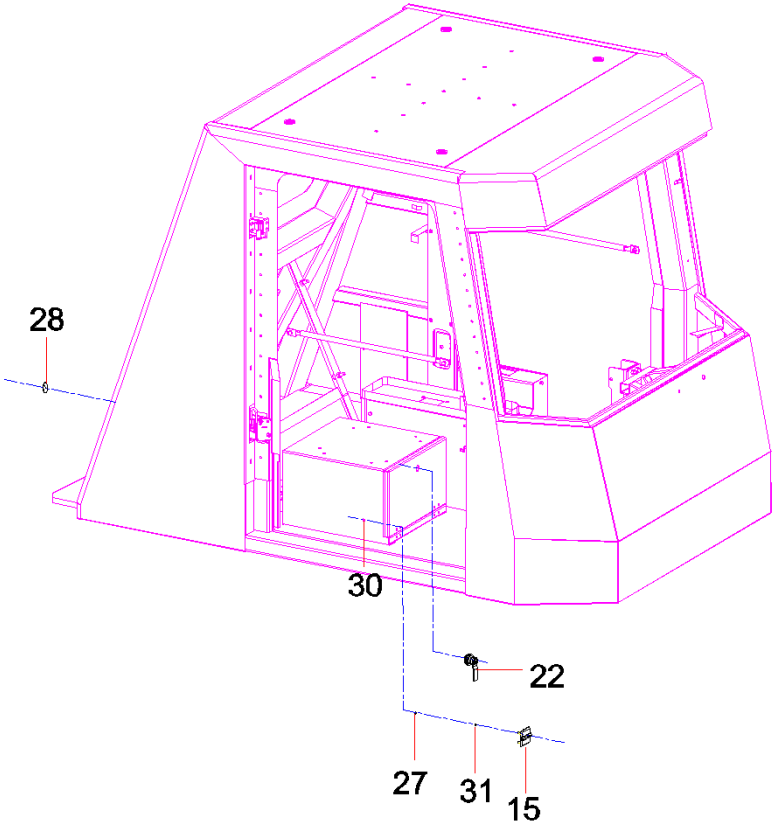

10


14


24

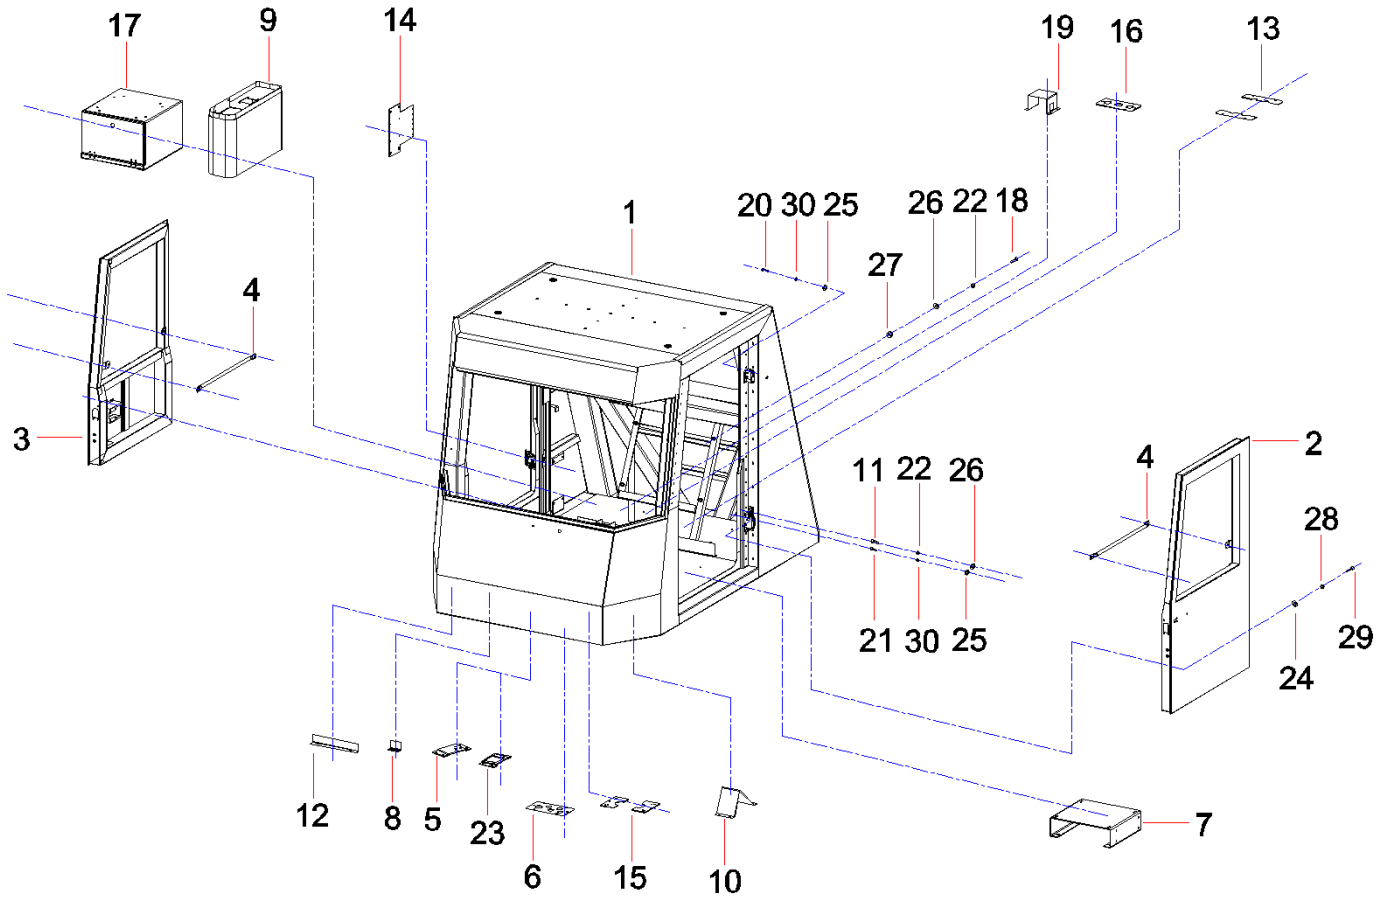
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
25	60101155	Stick sheet	4	
26	A210491000001	Screw	4	
27	A210405000006	Washer	10	
29	A210210000005	Screw	6	
31	A210401000016	Washer	14	


28
30
22
27
31
15

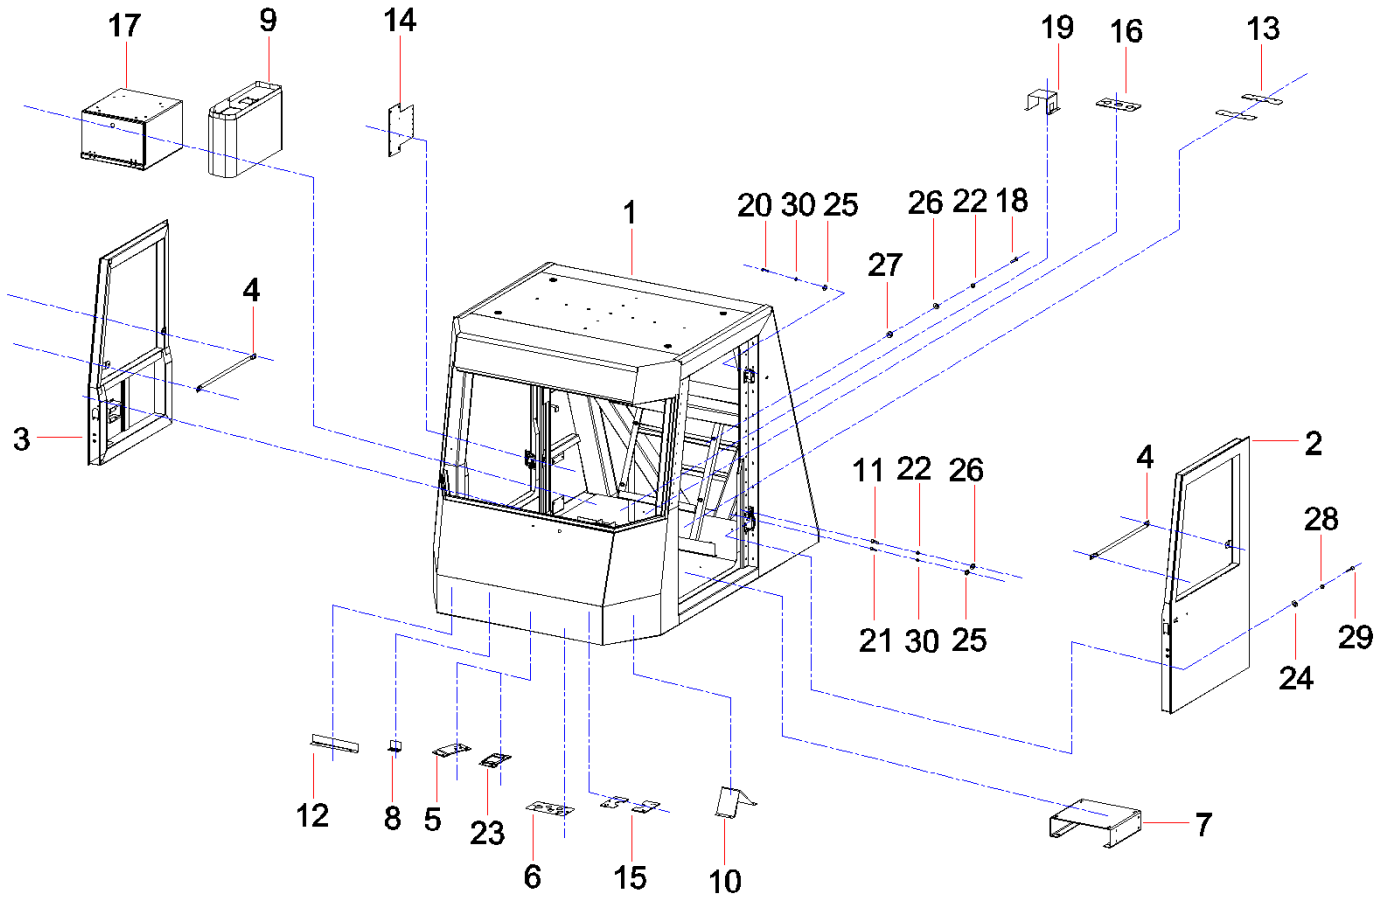
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
15	60013491	Hinge	2	
22	60002574	Lock, door	1	
27	A210405000006	Washer	10	
28	60014124	Pintle, fixed	21	
30	A210307000016	Nut	8	
31	A210401000016	Washer	14	


17
9
14
19
16
13
1
20 30 25
26 22 18
27
4
3
11 22 26
21 30 25
4
2
28
29
24
12
8
5
23
6
15
10
7

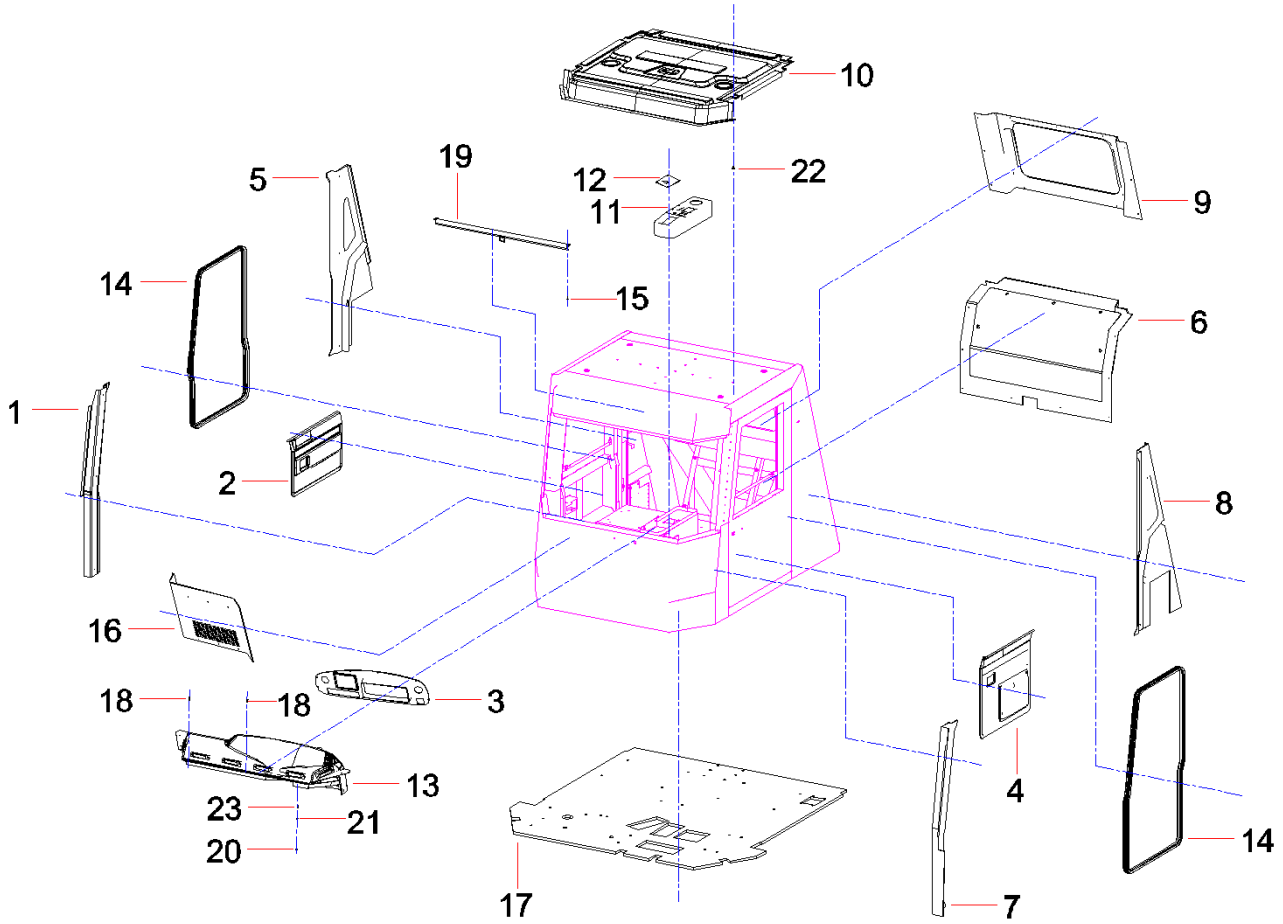
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12987519	Assembly, driver's cab welding JKGX06.1.	1	
2	12548962	Assembly, door welding left	1	
3	12985800	Assembly, door welding right JKGX06.1.2	1	
4	12561215	Rod, pull	2	
5	11545917	Plate,mounting,throttle	1	
6	13280401	Installation plate JKGX06.1–10	1	
7	11717212	Main seat bracket	1	
8	11908894	Lower baffle left bracket	1	
9	11551574	Box, central controlling	1	
10	12940586	Pedal SRT55C.330A.1–29	1	
11	A210111000204	Bolt	2	
12	11908858	Lower baffle right bracket	1	
13	13280402	Plate JKGX06.1–11	2	
14	12985763	Equipment, installation plate for electr	1	
15	12985760	Cover plateJKGX06.1–1	2	
16	12742639	Plate, aviation plug fixedSRT45.330A.1.1	1	
17	12985807	Toolbox JKGX06.1.3	1	
18	A210111000040	Bolt	4	
19	11717356	Cluster cover plate	1	
20	A210111000024	Bolt	6	
21	21005186	Bolt M10×40GB5783 Grade 10.9	4	
22	A210401000002	Washer	6	


17
9
14
19
16
13
1
20 30 25
26 22 18
27
4
3
11 22 26
21 30 25
4
2
28
29
24
12
8
5
23
6
15
10
7

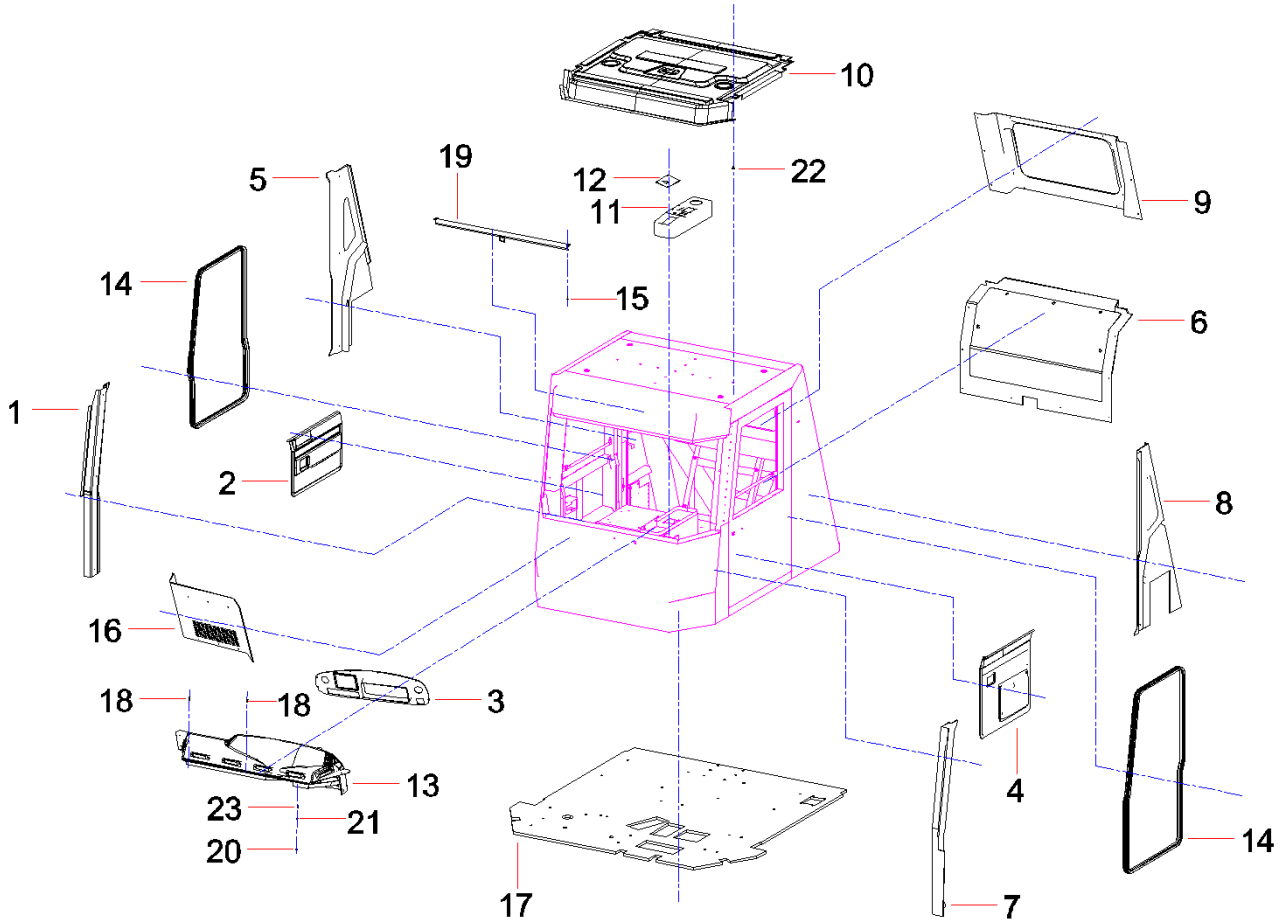
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	11545913	Plate,mounting,brake,foot	1	
24	A210405000007	Washer	4	
25	A210405000011	Washer	10	
26	A210405000001	Washer	6	
27	A210307000001	Nut	4	
28	A210401000017	Washer	4	
29	A210111000293	Bolt	4	
30	A210401000001	Washer	10	


10
19
5
12
22
11
9
14
15
6
1
2
8
16
18
18
3
4
13
23
21
20
17
7
14

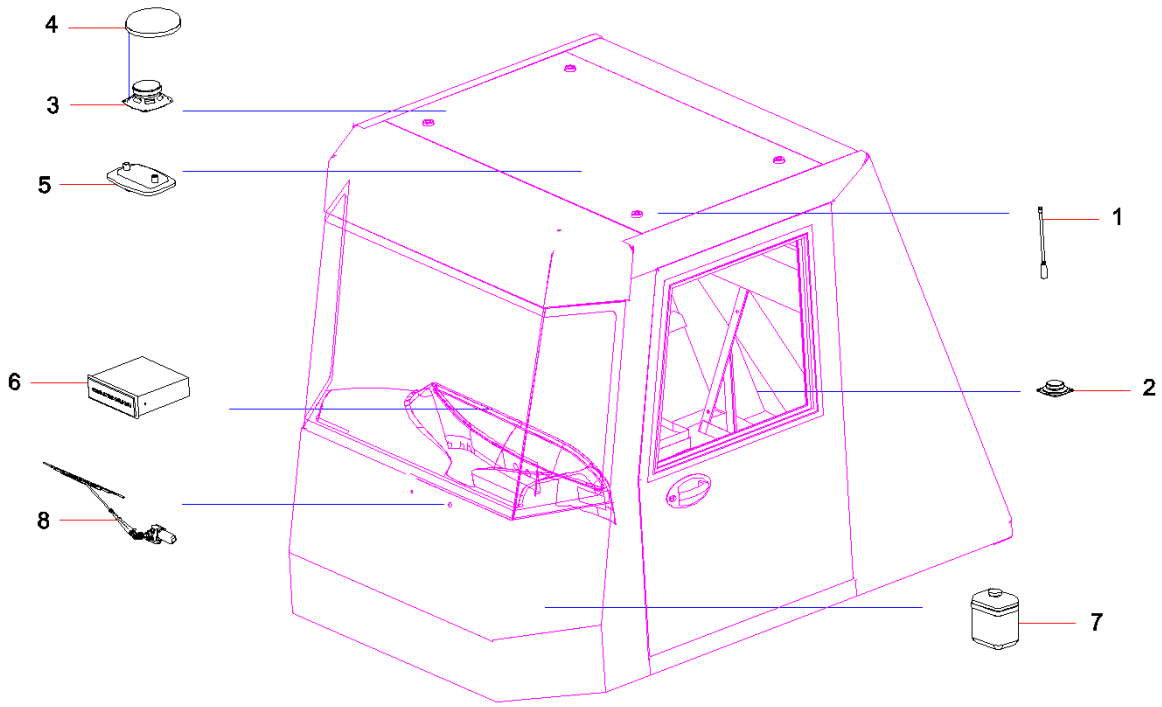
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12961512	Right, upright, column, protective, plat	1	
2	11401418	Left door protective plate	1	
3	12743970	Panel, of, instrument, panelSRT45.330A.1	1	
4	12961519	Right, door, decoration, panelJKGX06.2–2	1	
5	12963963	Right–side, protective, panelJKXG06.2–3	1	
6	11401432	Rear, cover, plate	1	
7	11401444	Left, upright, column, protective, plate	1	
8	11401430	Left–hand, decorating, plate	1	
9	11401426	Rear coaming plate	1	
10	11401447	Top, decorative, parts	1	
11	12746831	Panel, of, middle, controlling, consoleS	1	
12	12745657	Middle, controlling, platform, transitio	1	
13	12758490	Instrument, panelSRT45.330A.1.2–5	1	
14	13068700	Seal, door, opening	2	
15	11115686	Tapping, bolt	8	
16	11487587	Lower baffle	1	
17	13124565	Floor, leatherJKXG06.2–5	1	
18	11115687	Inner, hexagon screw	19	
19	A229900010230	Sun shading	1	
20	A210307000016	Nut	6	
21	A210404000009	Washer	6	
22	12053491	Screw	79	


10
19
5
12
22
11
9
14
15
6
1
2
8
16
18
18
3
4
13
23
21
20
17
7
14

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	A210111000081	Bolt	3	


4
3
5
6
8
1
2
7

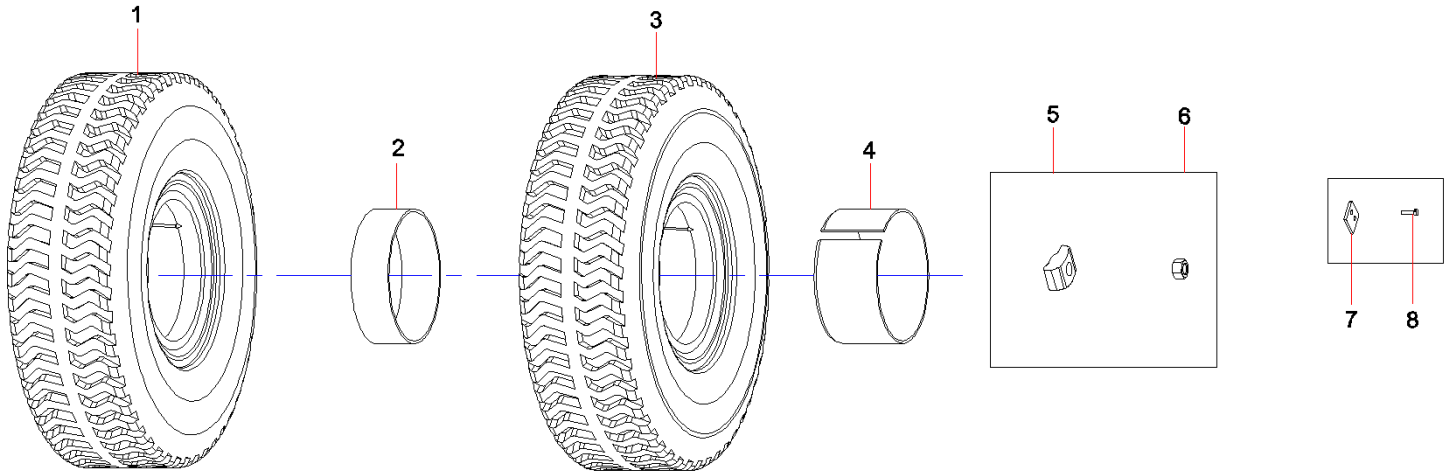
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60023704	Antenna	1	
2	11443728	Harness,cab	1	
3	60023703	Horn	1	
4	60052997	Horn cover	1	
5	A241100000498	Roof lamp, auman	1	
6	60197594	Radio	1	
7	A229900000113	Washer	1	
8	60062132	Front window wiper	1	

https://truckmanualshub.com/

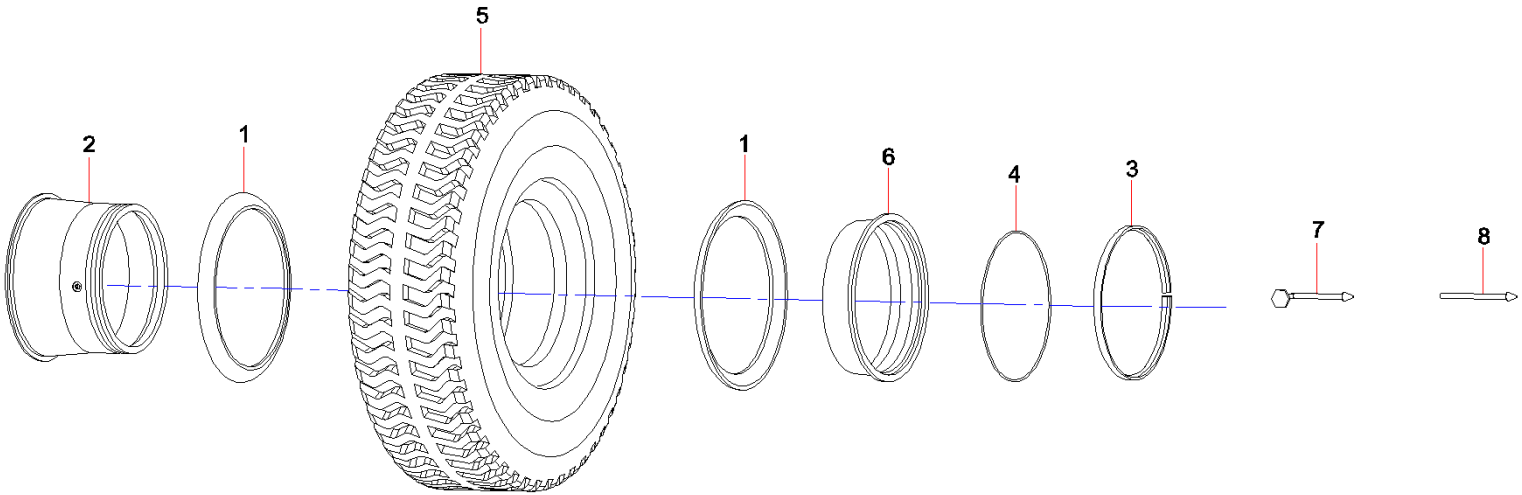
https://truckmanualshub.com/

Group 7
Rear wheel assembly


1
2
3
4
5
6
7
8

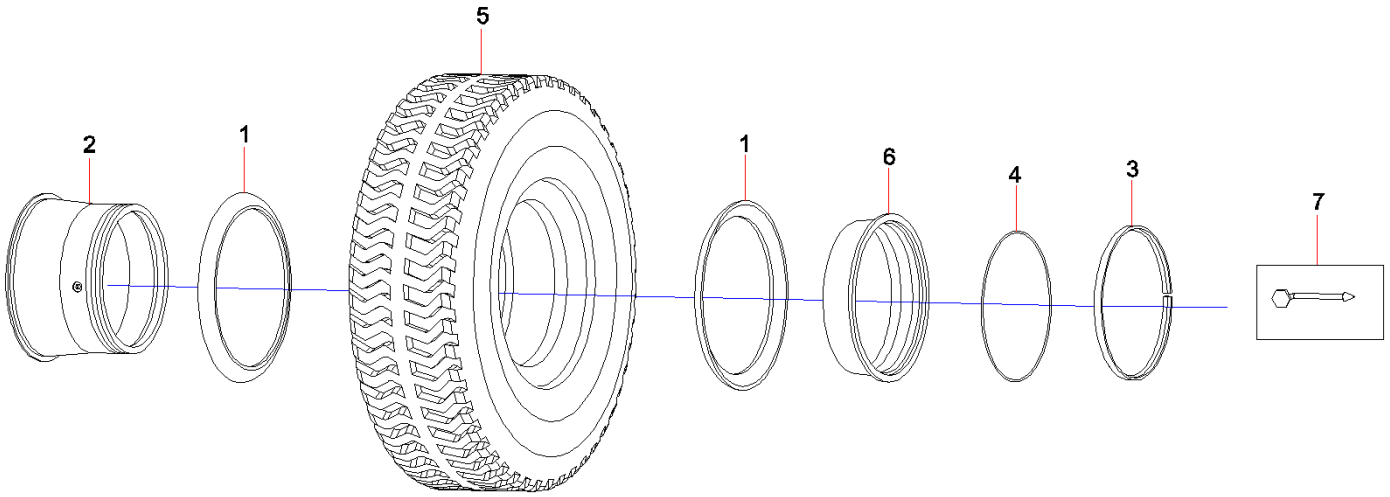
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11508135	Rear inner tyre and rim assembly	1	
2	60036997	Spacer–Band	1	
3	11508134	Rear outer tyre and rim assembly	1	
4	60037006	Wedge–Band	1	
5	10235251	Clamp	27	
6	60010517	Nut M24 10 grade	27	
7	11508132	Plate	1	
8	A210111000197	Bolt	2	


5
2
1
1
6
4
3
7
8

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60036995	Flange	2	
2	60036991	Rim	1	
3	60036993	Lockring	1	
4	60037011	O–ring	1	
5	60004579	Tyre	1	
6	60037008	Band–bead Seat	1	
7	60037002	Valve Stem Assy	1	
8	60037012	Valve Extension Bar	1	


5
2
1
1
6
4
3
7

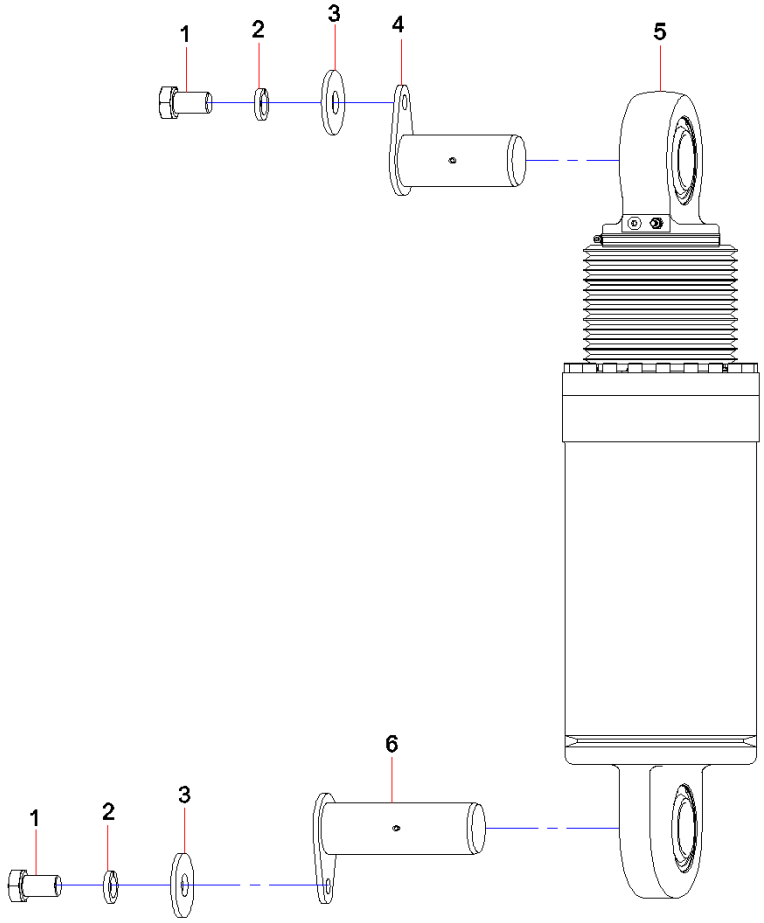
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60036995	Flange	2	
2	60036991	Rim	1	
3	60036993	Lockring	1	
4	60037011	O–ring	1	
5	60004579	Tyre	1	
6	60037008	Band–bead Seat	1	
7	60037003	Valve Stem Assy	1	

https://truckmanualshub.com/

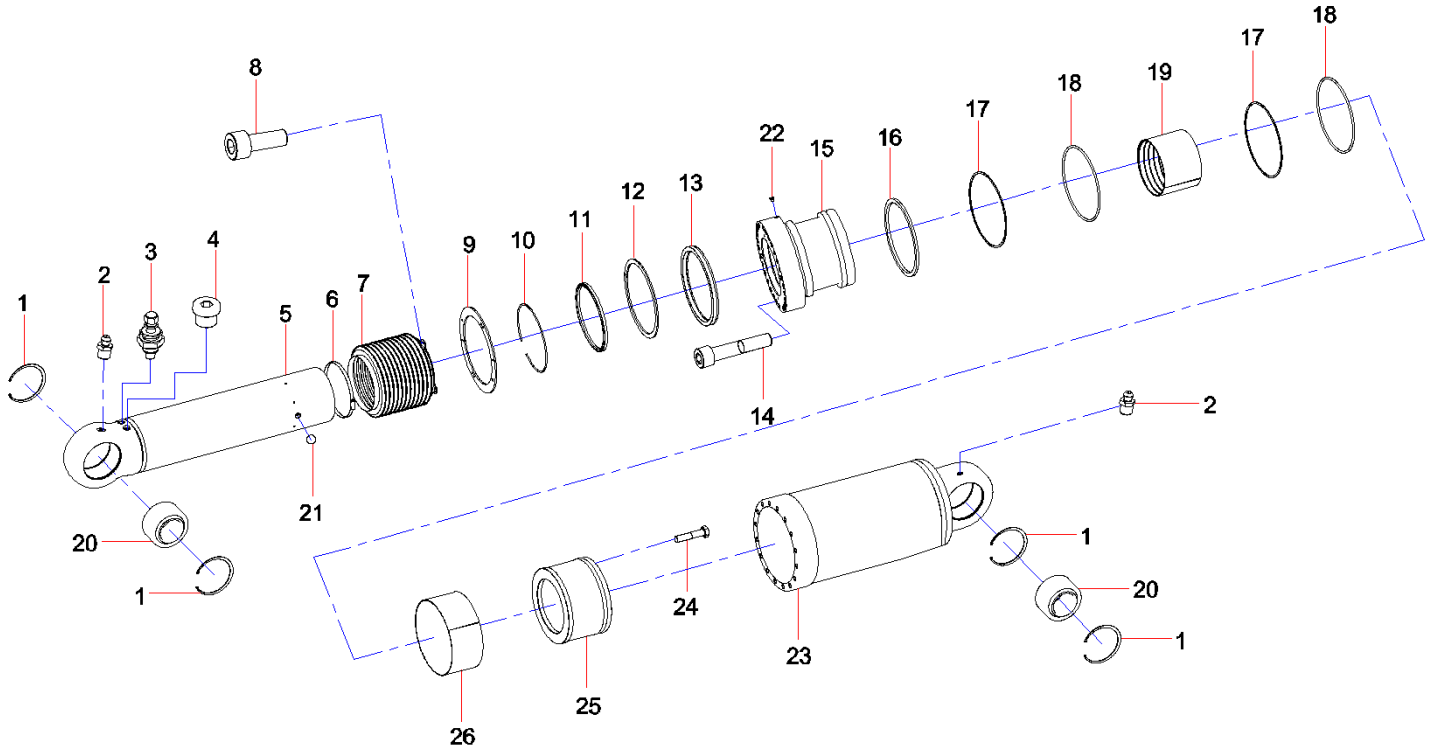
https://truckmanualshub.com/

Group 8
Rear Suspension System


1
2
3
4
5
6
1
2
3

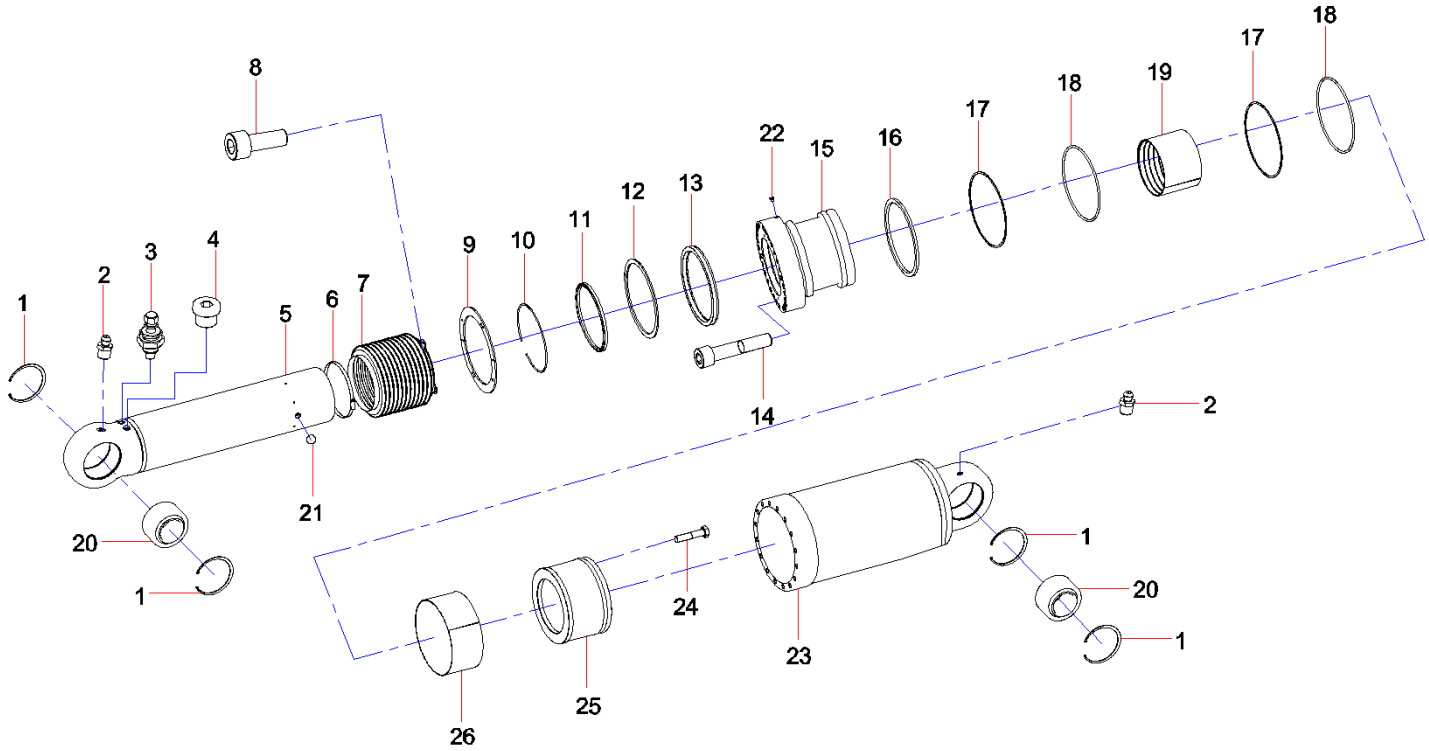
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000199	Bolt M12 × 20GB5783 Grade 10.9	2	
2	24000513	Washer 12GB93 DACROMET	2	
3	A210404000004	Washer	2	
4	11911540	Pin	1	
5	12690092	Rear Suspension Cylinder	1	
6	11911542	Pin	1	


8
18
17
19
18
17
16
15
22
13
12
11
10
9
7
6
5
4
3
2
1
21
20
1
14
2
1
20
1
24
23
25
26

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210416000009	Retainer Ring 160GB893.1	4	
2	A210804000002	Oil cup	2	
3	A220400000599	Charge valve	1	
4	21008717	Plug	1	
5	12689291	Piston rod	1	
6	60006914	Clamp	1	
7	10480089	Dust boot	1	
8	A210204000130	Screw	6	
9	11840368	Plate	1	
10	11609348	Retainer ring	1	
11	60096932	Seal–wiper	1	
12	60199313	Backup ring	1	
13	60199311	Seal	1	
14	A210204000266	Bolt	28	
15	12688780	Guide sleeve	1	
16	60199312	Buffer seal	1	
17	60004637	Retainer ring	2	
18	60004642	O–ring	2	
19	60004635	Wear ring	1	
20	60141787	Bearing	2	
21	A210661000003	Steel ball	2	
22	A210777000094	Plug	1	


8
18
17
19
18
17
16
15
22
13
12
11
10
9
7
6
5
4
3
2
1
21
20
1
14
2
1
20
1
24
23
25
26

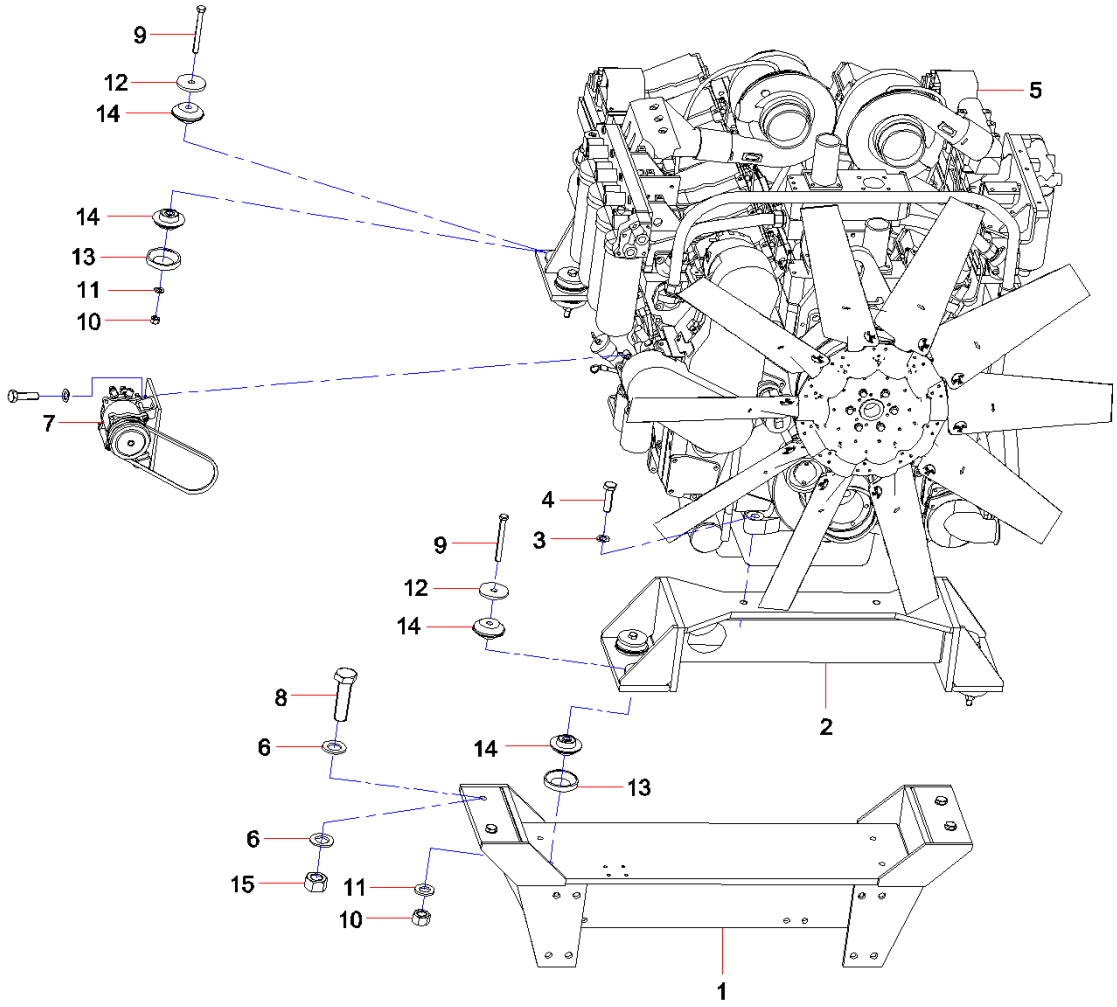
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	12688902	Cylinder tube assy.	1	
24	A210204000351	Screw	20	
25	12689121	Piston	1	
26	60070629	Wear ring	1	

https://truckmanualshub.com/

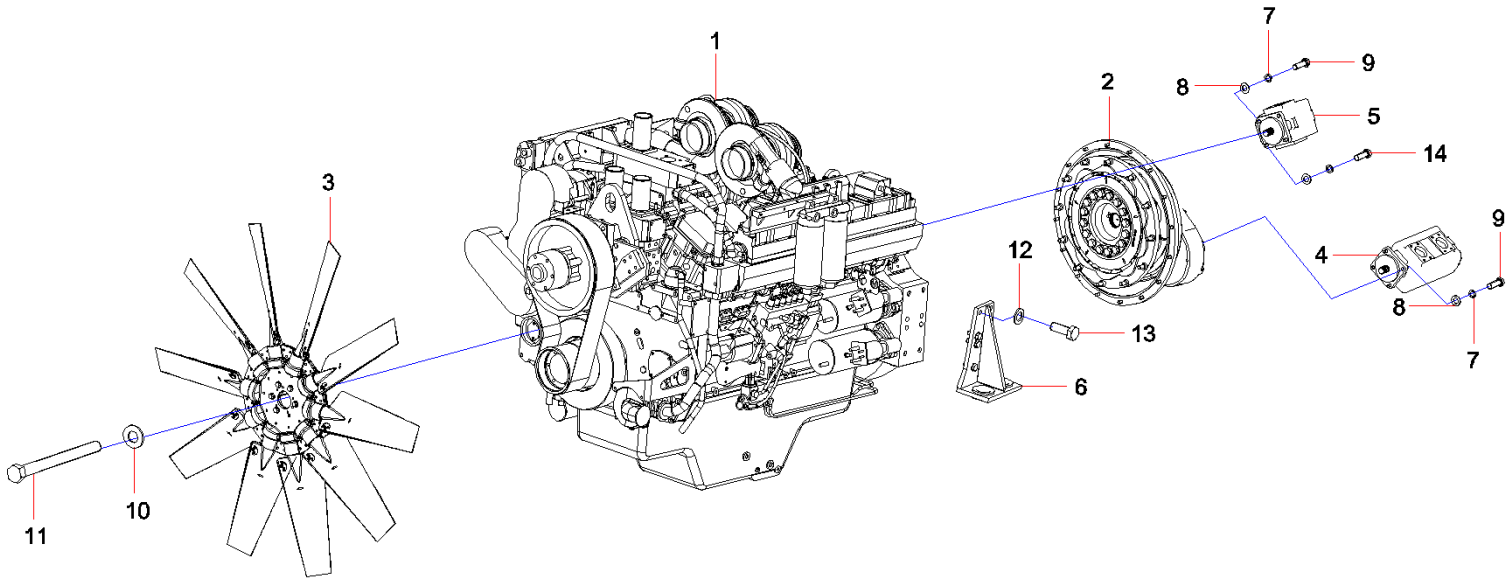
https://truckmanualshub.com/

Group 9
Engine installation


9
12
14
14
13
11
10
7
5
4
3
9
12
14
8
6
14
13
6
15
11
10
2
1

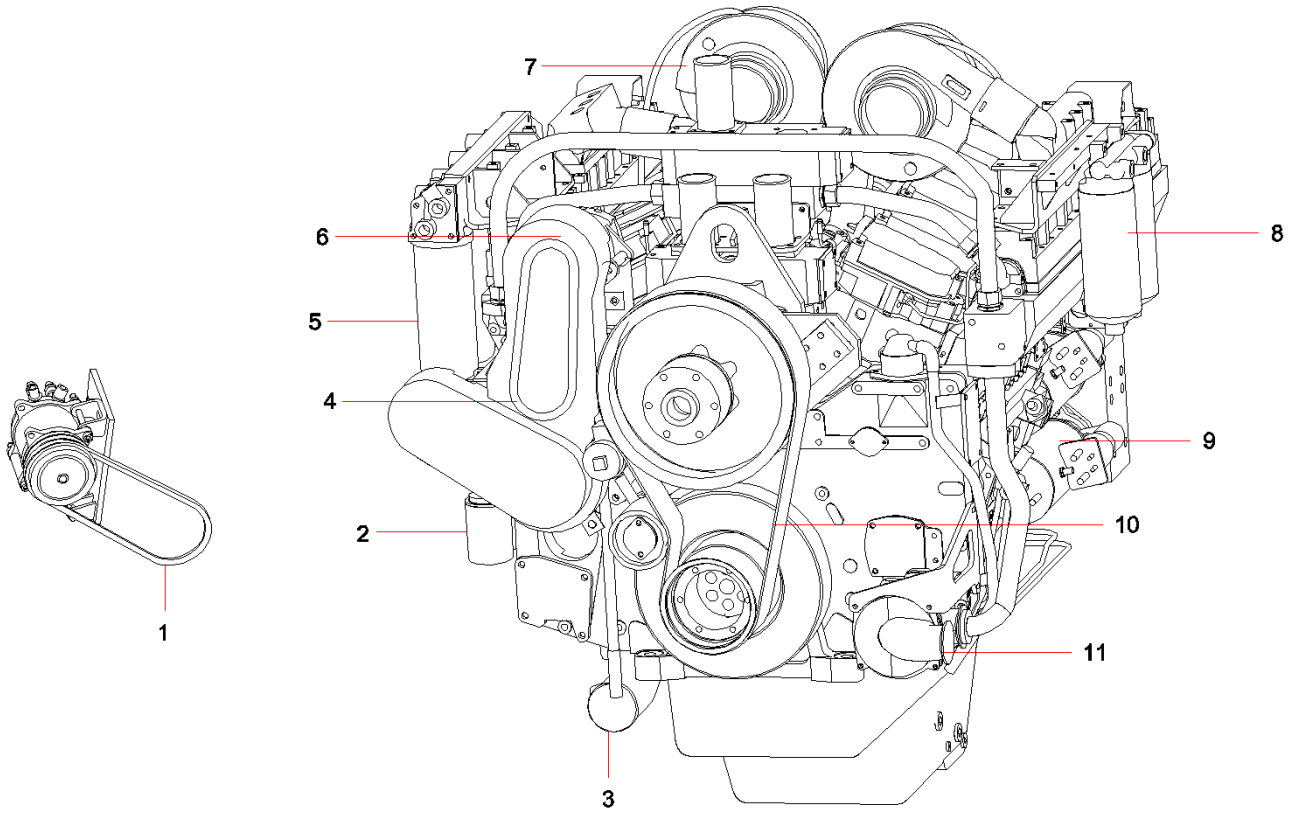
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	10499998	Crossbeam	1	
2	10499530	Front support	1	
3	A210444000002	Washer 22GB1230	2	
4	A210110000333	Bolt	2	
5	12955665	Engine installation	1	
6	A210491000132	Washer	8	
7	11576510	Compressor installation	1	
8	A210111000063	Bolt M20×70GB5783 Grade 10.9	4	
9	A210111000210	Bolt	8	
10	A210307000028	Nut	8	
11	A210491000118	Washer	8	
12	10499508	Washer	8	
13	10499509	Washer	8	
14	60004630	Shock mount	16	
15	A210307000029	Nut	4	


1
2
3
4
5
6
7
8
9
10
11
12
13
14

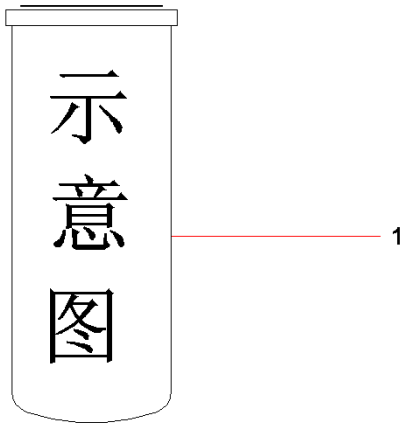
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B220200000163	Engine	1	
2	12867945	Engine – power takeoff	1	
3	60004631	Fan	1	
4	60000875	Double–gear pump	1	
5	60156509	Gear Pump	1	
6	11617835	Rear Mount	2	
7	24000513	Washer 12GB93 DACROMET	8	
8	24000639	Washer 12GB97.1	8	
9	A210111000204	Bolt	6	
10	A229900009503	Washer	6	
11	60008339	Bolt	6	
12	24000646	Washer	16	
13	A210111000221	Bolt	16	
14	A210111000202	Bolt	2	


1
2
3
4
5
6
7
8
9
10
11

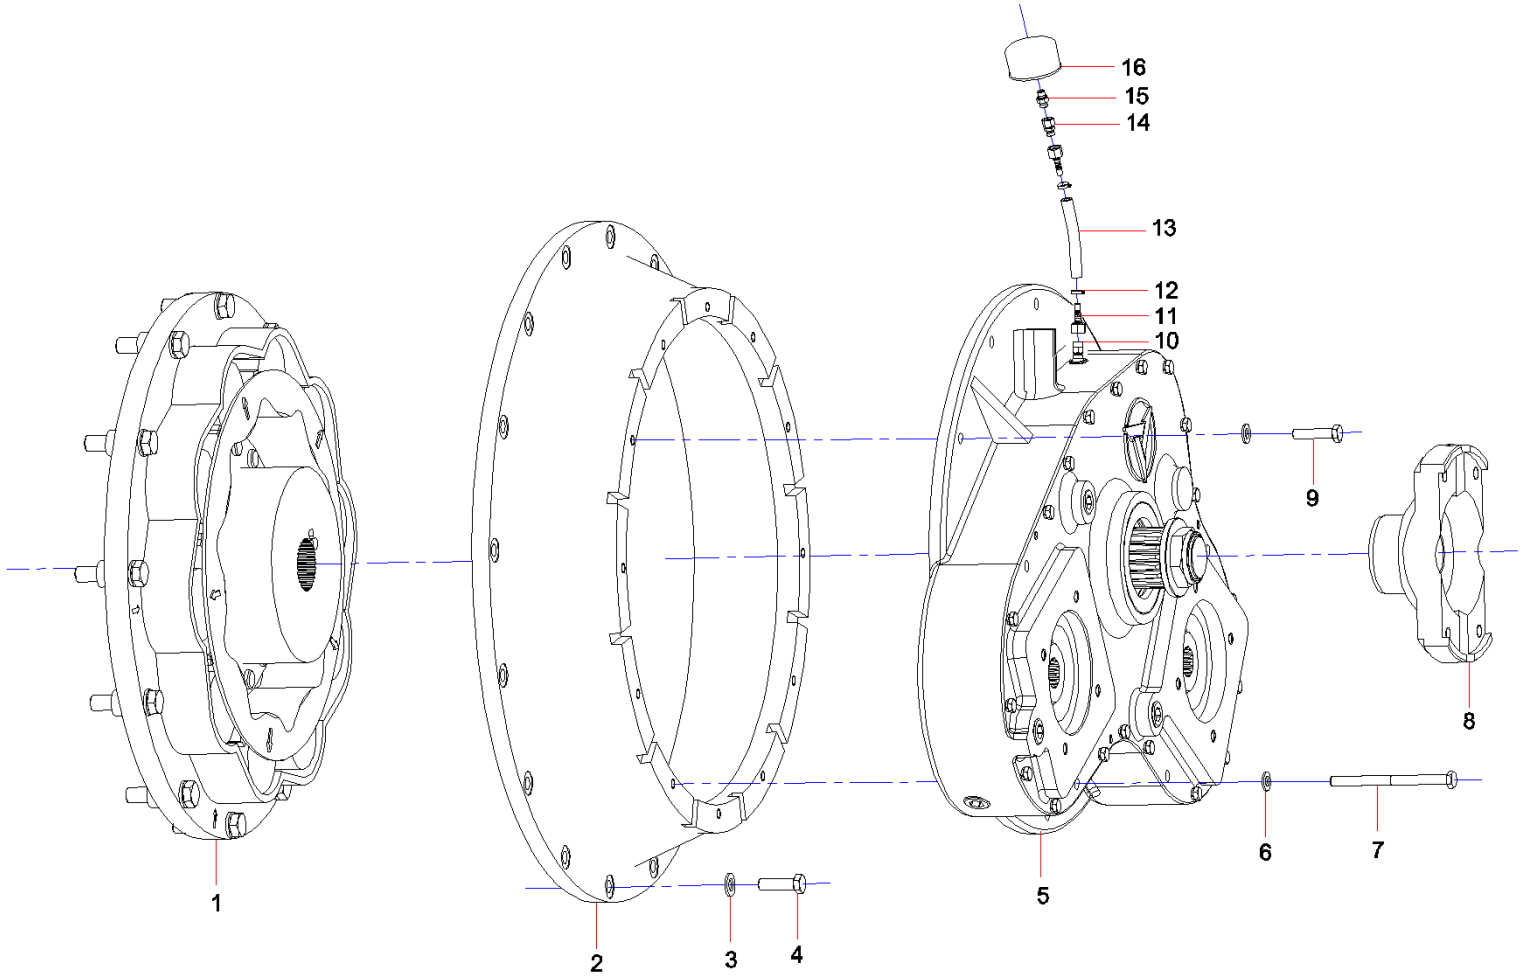
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11576509	V Belt	1	
2	21019723	Filter, water	2	
3	60015010	Water pump GP	1	
4	60025678	Alternator Belt	1	
5	B222100000595	Filter, engine oil	4	
6	60030981	Alternator	1	
7	60015007	Turbocharger	2	
8	A222100000615	Filter, diesel	1	
9	60225753	Starting motor	2	
10	60009584	Belt, fan	1	
11	60225754	Water pump	1	


示意图
1

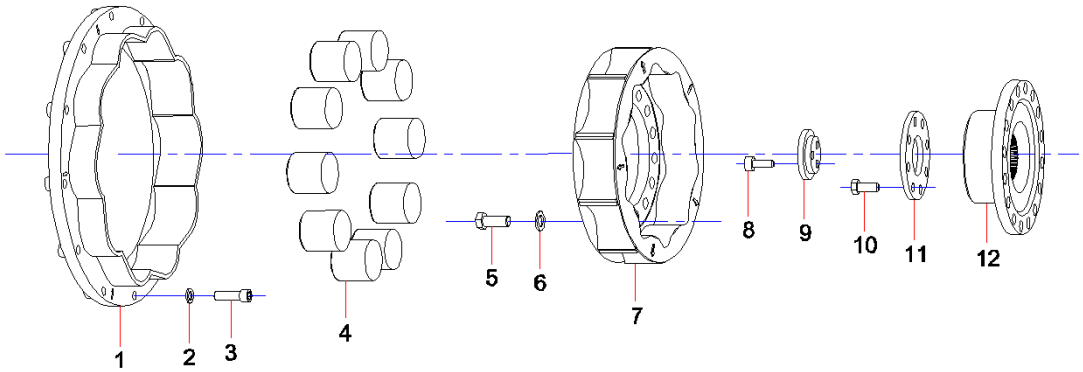
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A222100000616	Element, filter, separator, water	1	


16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1

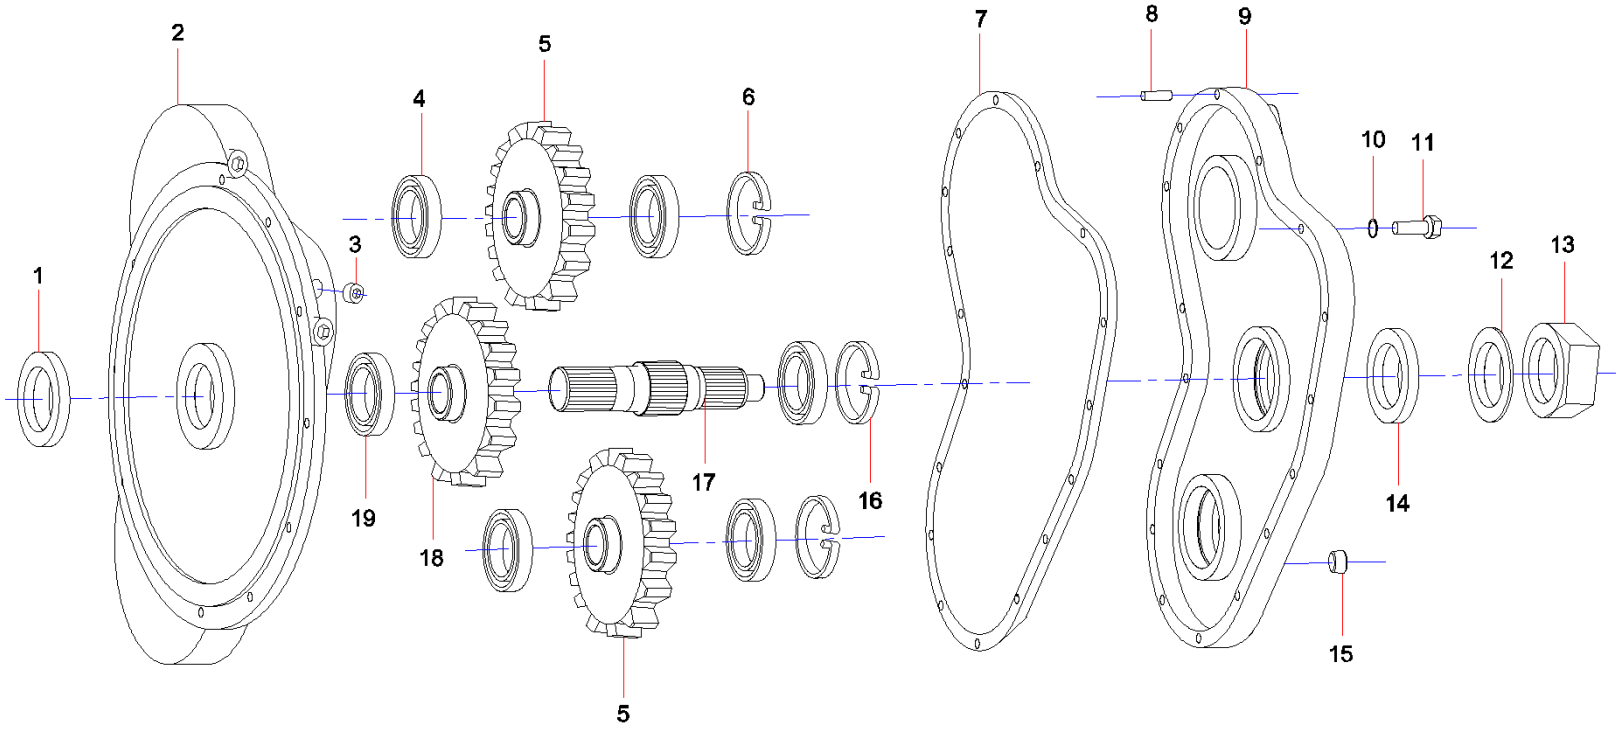
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60234833	Flanging coupling	1	
2	11605792	Transitional disc	1	
3	A210491000121	Washer	16	
4	A210111000204	Bolt	16	
5	12867826	PTO assembly	1	
6	A210491000120	Washer	10	
7	A210111000003	Bolt	4	
8	60001255	Yoke	1	
9	A210111000120	Bolt	6	
10	60006416	Pipe connector	1	
11	A210770000455	Domestic rubber hose coupling	2	
12	A210855000005	Hoop	2	
13	12867932	Breathing tube	1	
14	A229900006533	Connector, pipe	1	
15	21002854	Connector, pipe	1	
16	60133933	Breather	1	


1
2
3
4
5
6
7
8
9
10
11
12

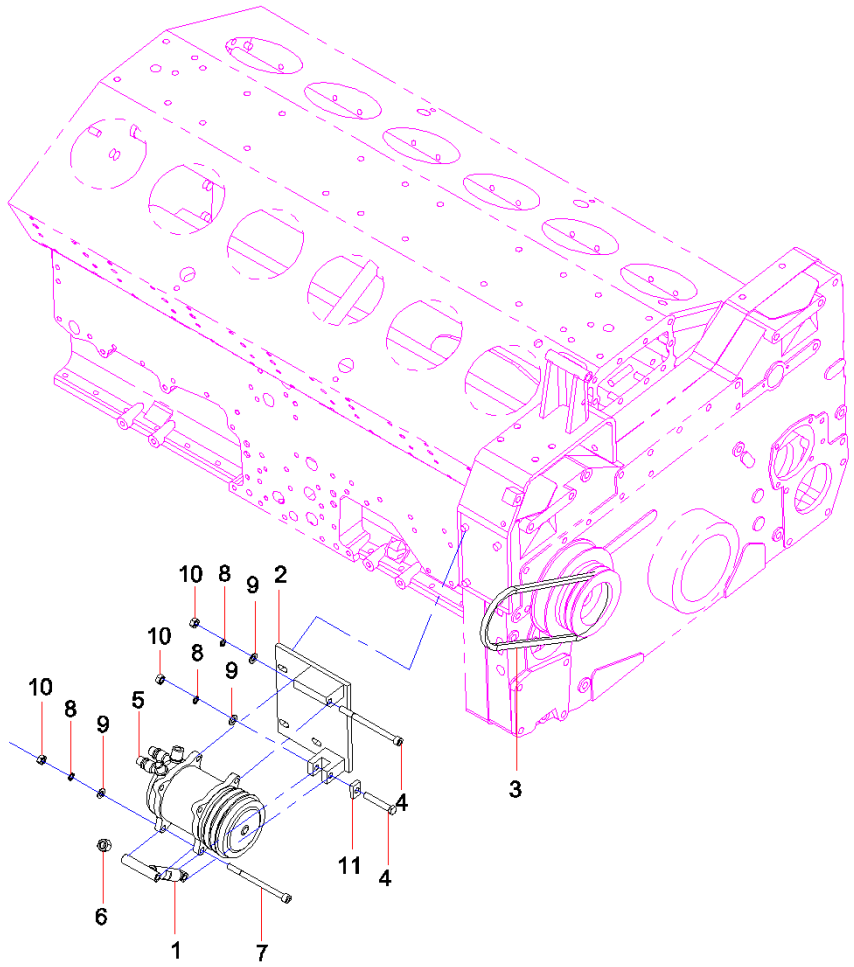
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60234613	Outer ring, aluminum	1	
2	21029362	Washer	8	
3	A210204000183	Screw M16 × 55GB70.1	8	
4	60122936	Elastic body	10	
5	24000168	Bolt	16	
6	21028776	Washer	16	
7	60234612	Inner ring, aluminum	1	
8	21010958	Bolt	3	
9	60232728	Pressure cover	1	
10	A210111000202	Bolt	8	
11	60232729	Pressure cover	1	
12	60234611	Sleeve, shaft	1	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
5

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60227257	Oil seal	1	
2	12118761	shell seat	1	
3	60005843	Plug,screw	3	
4	60104956	Bearing	4	
5	11122006	Driven gear	2	
6	A210416000003	Retainer Ring 100GB893.1	2	
7	11122005	Cushion	1	
8	A210551000028	Pin	2	
9	12865924	Shell cover	1	
10	A210401000017	Washer	19	
11	A210110000277	Bolt M8×60GB5782	19	
12	12124584	Washer	1	
13	12126766	Nut	1	
14	60227256	Oil seal	1	
15	10662925	Inner hex screw plug	6	
16	A210416000047	Snap ring	1	
17	12118854	Drive shaft	1	
18	12122158	Drive gear	1	
19	60129016	Bearing	2	


10
8
9
2
10
8
9
10
8
9
5
3
4
11
4
6
1
7

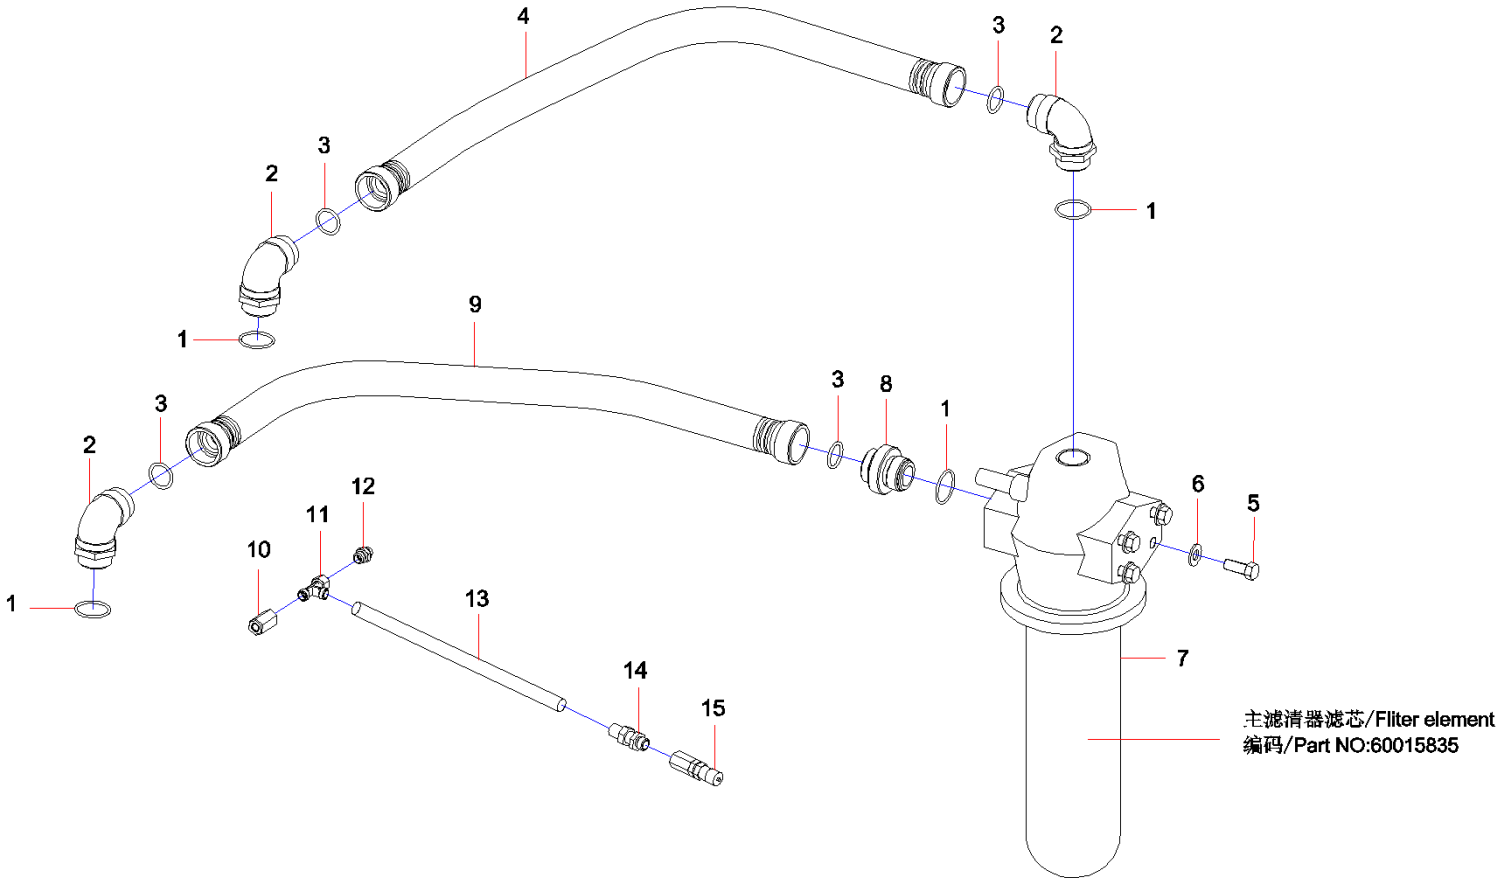
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	11519994	Adjusting connecting rod	1	
2	11576511	Compressor bracket	1	
3	11576509	V Belt	1	
4	21008534	Screw	2	
5	21022626	Compressor TYJ2–100	1	
6	A210307000025	Nut M14GB6170	1	
7	A210111000294	Bolt	1	
8	24000512	Washer 10GB93	3	
9	24000637	Washer	3	
10	A210307000036	Nut	3	
11	12117684	Adjusting gasket	1	

https://truckmanualshub.com/

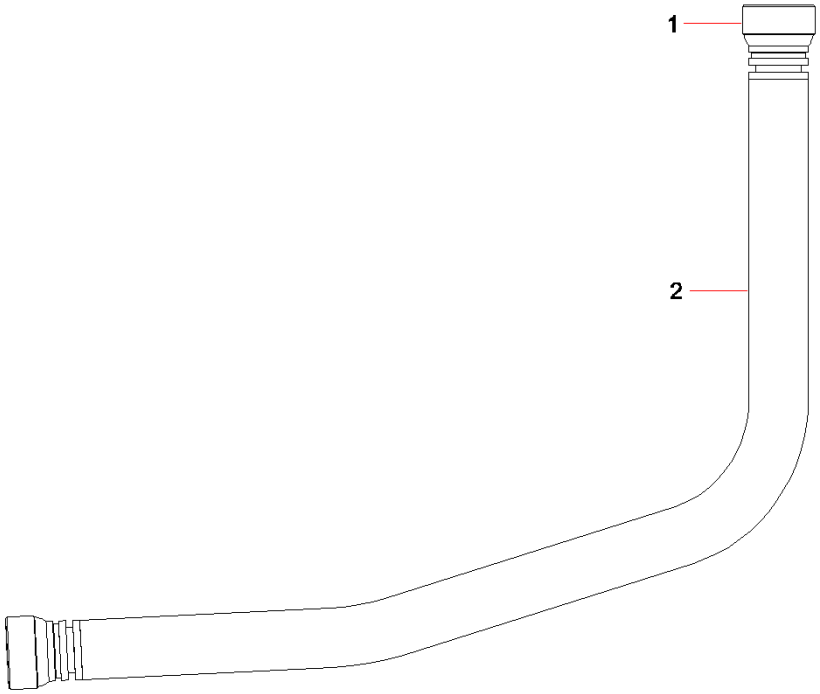
https://truckmanualshub.com/

Group 10
Transmission oil filter assembly


4
3
2
3
2
1
1
9
3
8
1
3
2
6
5
12
11
10
1
13
14
15
7
主滤清器滤芯/Fliter element
编码/Part NO:60015835

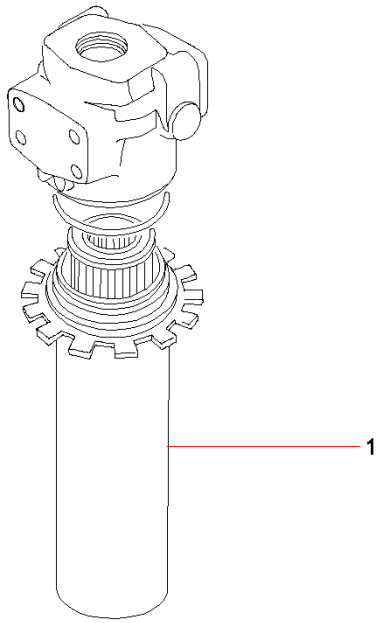
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60008434	O–ring	4	
2	A229900009496	Elbow	3	
3	60008433	O–ring	4	
4	10504474	Hose assembly 1	1	
5	A229900009500	Bolt	4	
6	A229900009503	Washer	4	
7	A222100000611	Filter	1	
8	A229900009497	Adaptor	1	
9	10504476	Hose assembly 2	1	
10	11215142	Connector	1	
11	21003059	Pipe connector	1	
12	A229900009829	Adaptor	1	
13	11902262	Hose	1	
14	21007672	Pipe connector	1	
15	21083668	Testing connector	1	


1
2

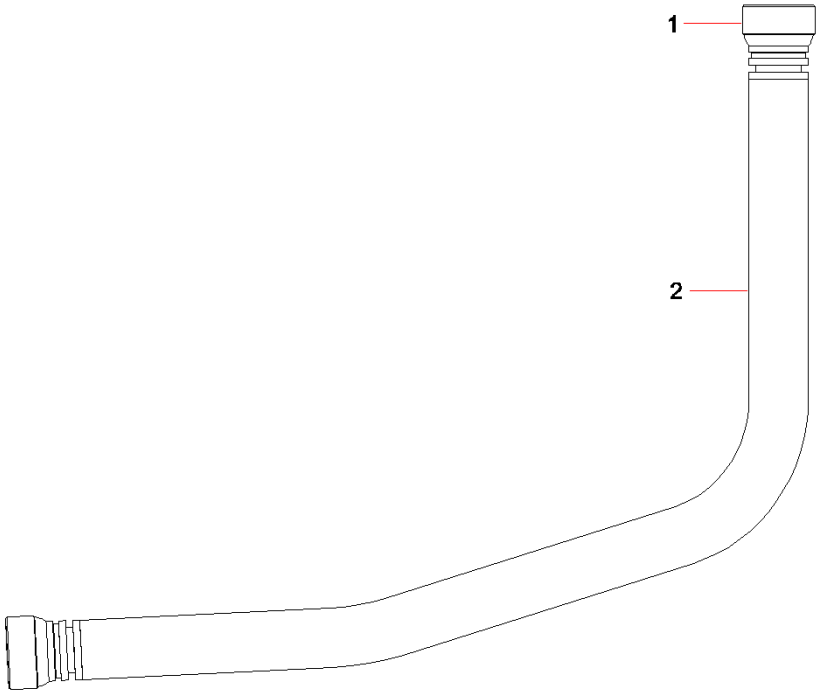
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A229900009498	Adaptor	2	
2	10504473	Hose,rubber	4	


1

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60015835	Filter element,transmission	1	


1
2

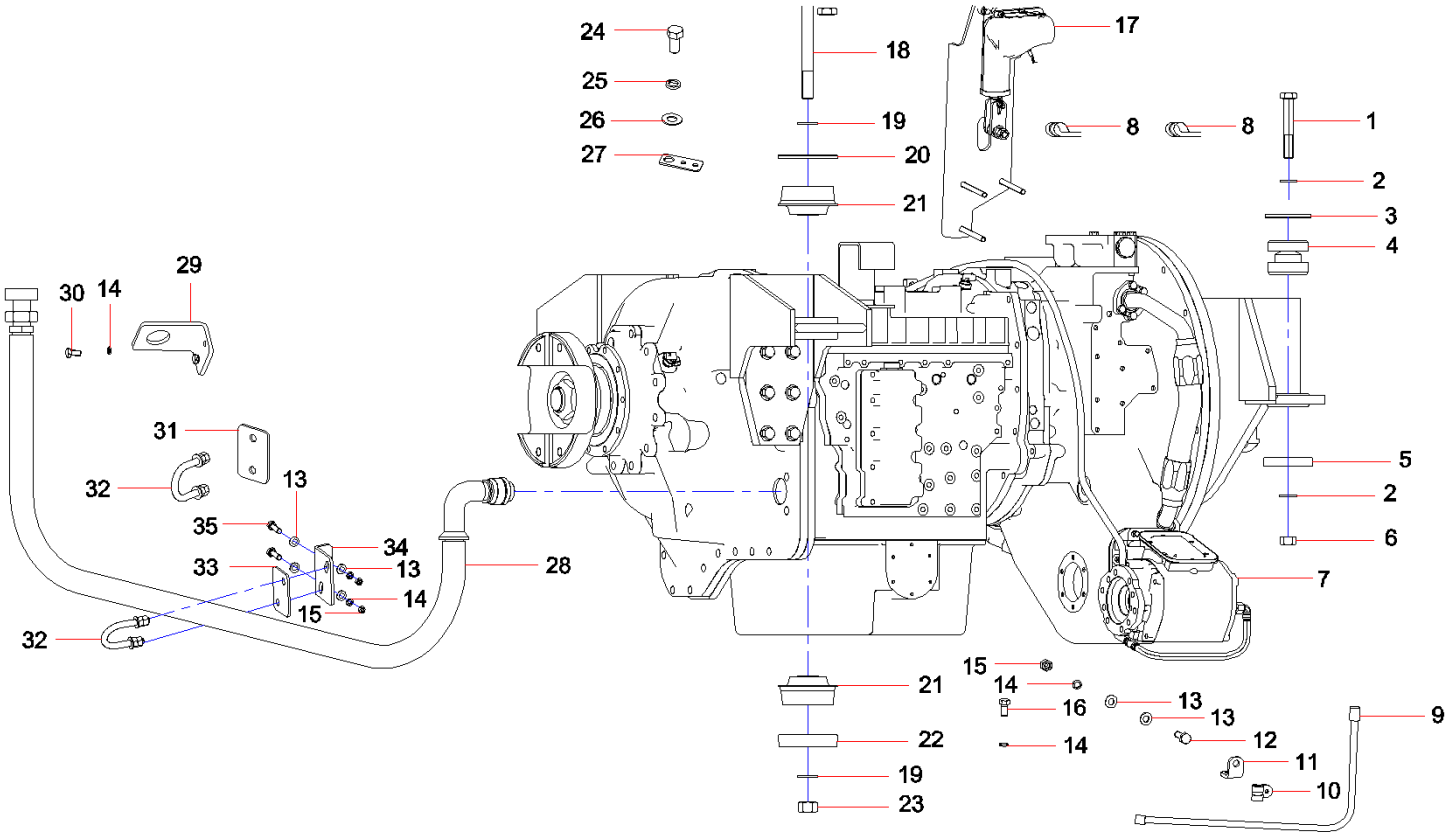
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A229900009498	Adaptor	2	
2	10504475	Hose,rubber	4	

https://truckmanualshub.com/

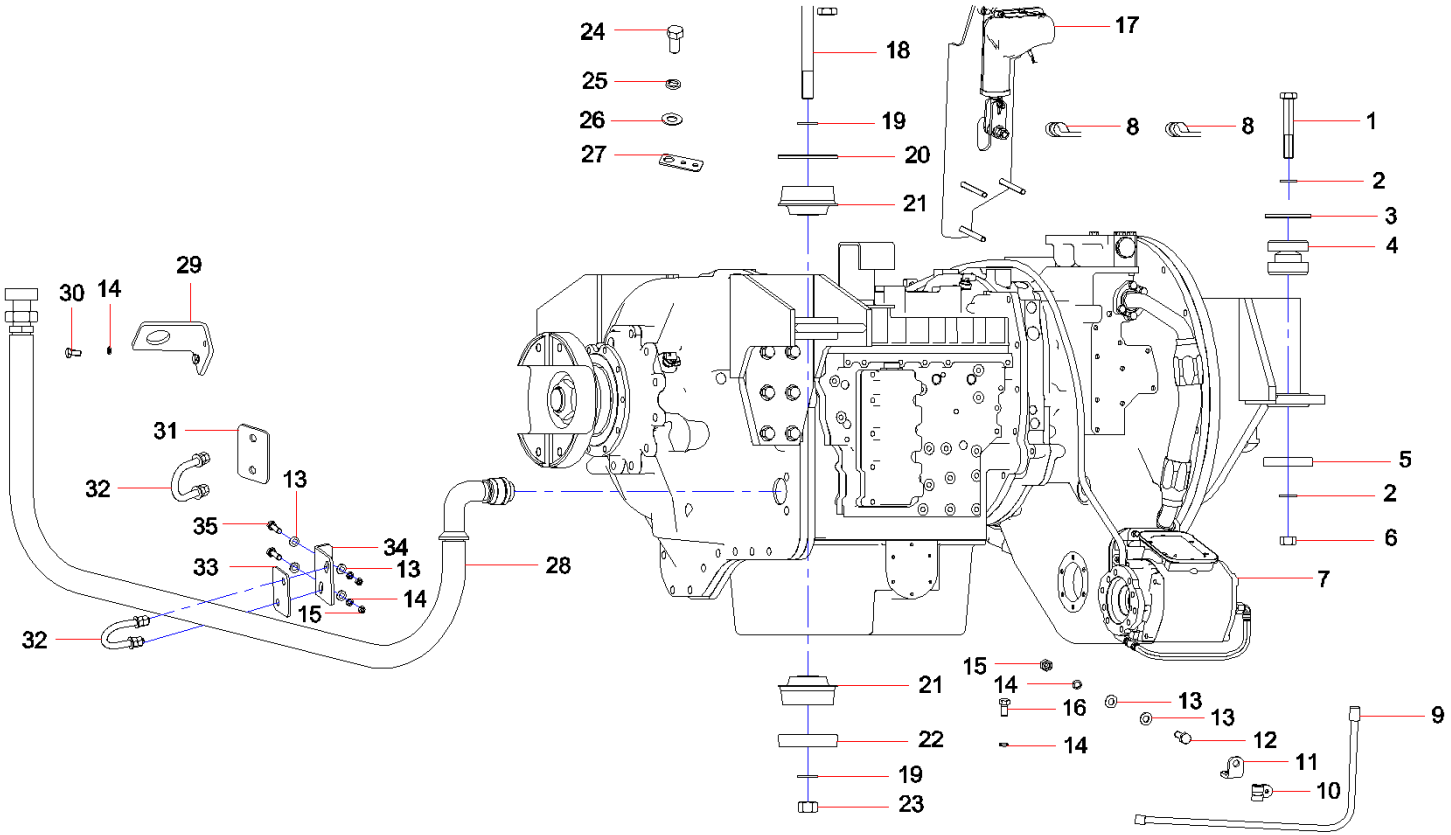
https://truckmanualshub.com/

Group 11
Transmission and mounting


24
25
26
27
18
19
20
21
17
8
8
1
2
3
4
5
2
6
7
29
30
14
31
32
13
35
34
33
13
14
15
28
32
21
22
19
23
15
14
16
14
13
13
12
11
10
9

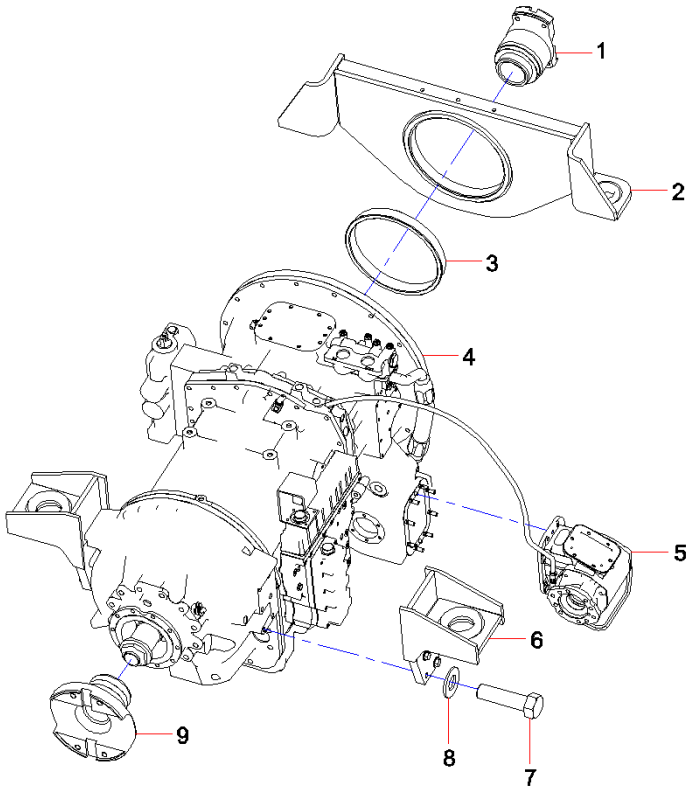
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000446	Bolt	2	
2	A210491000132	Washer	4	
3	11627037	Retainer plate	2	
4	60001062	Shock mount	2	
5	11627039	Ringer	2	
6	A210307000029	Nut	2	
7	12951890	Transmission mounting	1	
8	A230200000169	Clamp, cord	2	
9	60223368	Overflow tubing	1	
10	60000419	Clamp, hose	1	
12	A210111000197	Bolt	1	
13	24000637	Washer	2	
14	24000512	Washer 10GB93	4	
15	A210307000036	Nut	1	
16	A229900009583	Bolt	1	
17	11624261	Transmission retarder control	1	
18	A210110000213	Bolt	2	
19	A210491000122	Washer	4	
20	11627040	Retainer plate	2	
21	A222000000074	Shock mount	4	
22	11627038	Ringer	2	
23	A210307000007	Nut M24GB6170 Grade 10	2	


24
25
26
27
18
19
20
21
17
8
8
1
2
3
4
5
2
6
7
29
30
14
31
32
13
35
34
33
13
14
15
28
32
21
22
19
23
15
14
16
14
13
13
12
11
10
9

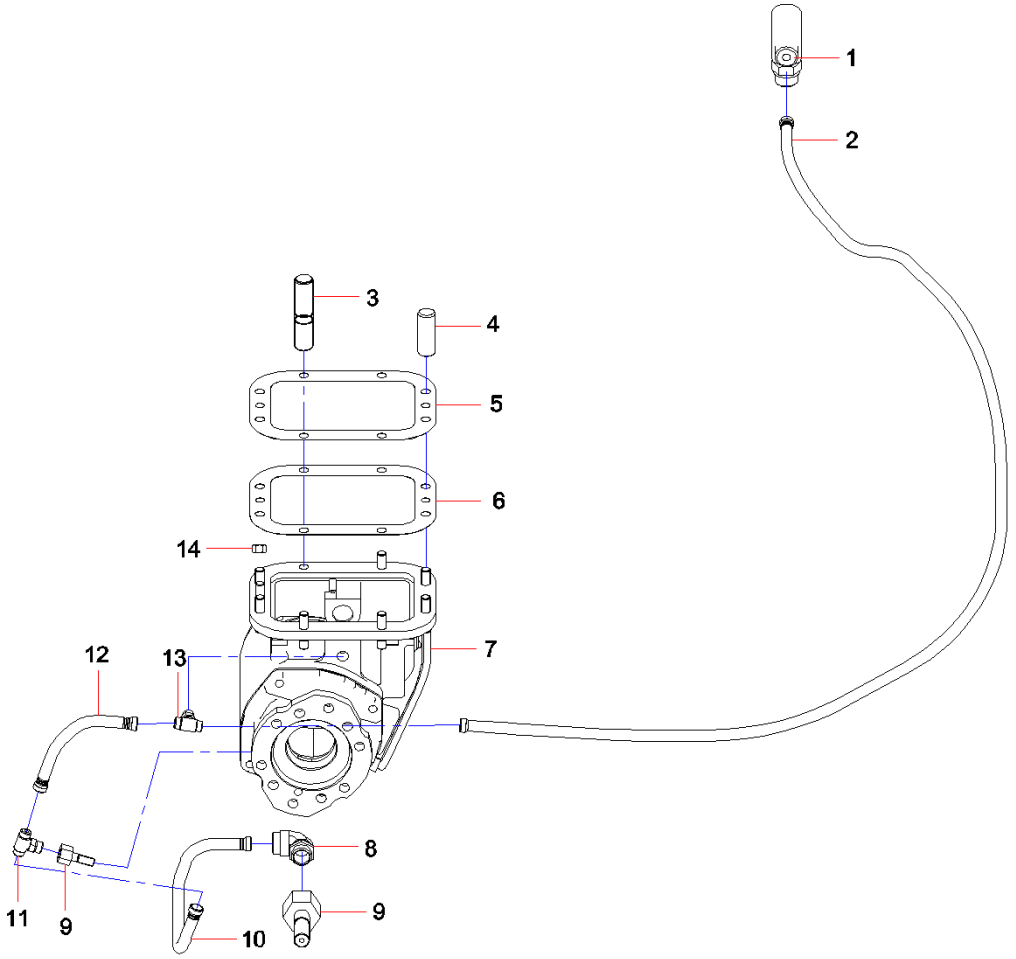
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
24	A229900009501	Screw	4	
25	A229900009504	Washer	4	
26	24000514	Washer 16GB93	4	
27	12753728	Fixed Plate	4	
28	60007612	Filler hose	1	
29	12951887	Fixed Plate	1	
30	A210111000012	Bolt	2	
31	12701266	Rupper pad	1	
32	60008275	U–clamp	2	
33	13083324	Rubber padSRT95C.153–4	1	
34	13083323	Fixed plateSRT95C.153–3	1	
35	A210111000026	Bolt	2	


1
2
3
4
5
6
7
8
9

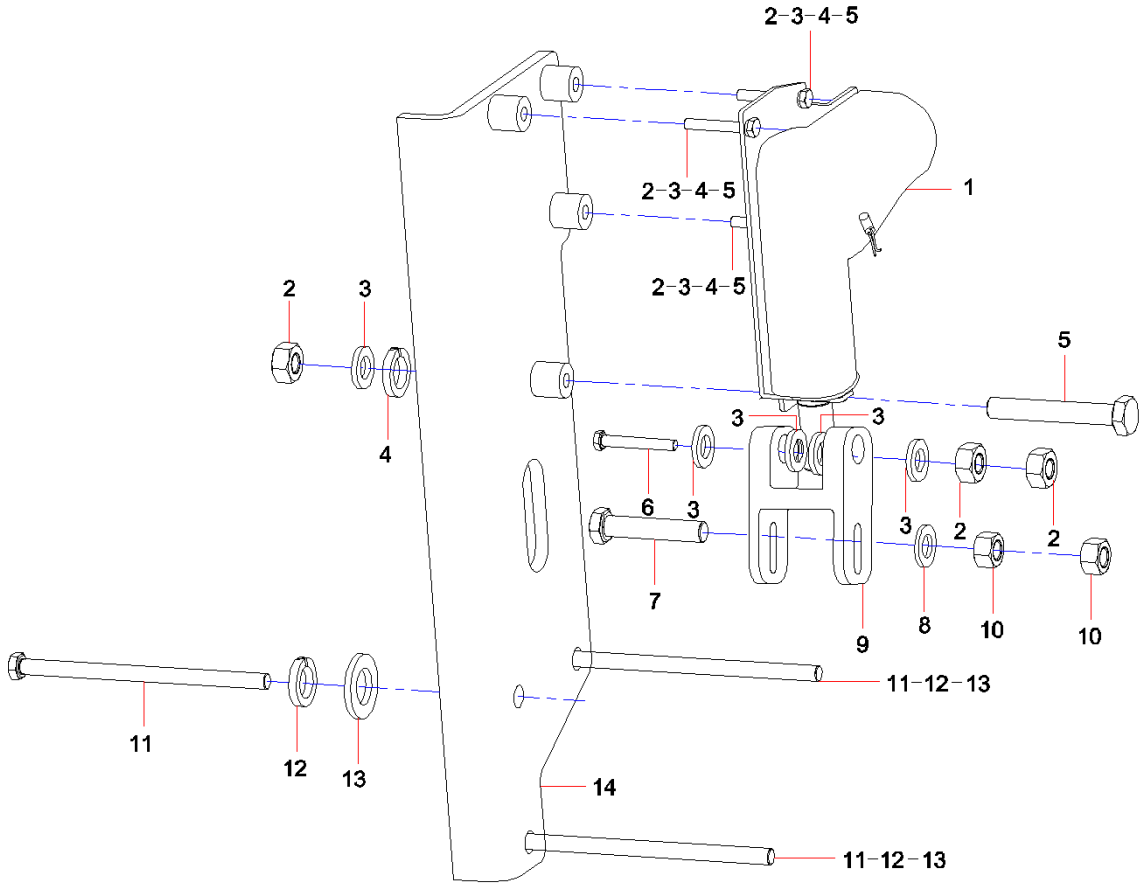
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60001257	Input flange	1	
2	12951893	Trunnion	1	
3	11626929	Sleeve,nylon	1	
4	60000233	Transmission	1	
5	12951895	Power take–off assembly	1	
6	12951894	Bracket	2	
7	60044697	Bolt	12	
8	A229900009504	Washer	12	
9	60001256	Output flange	1	


1
2
3
4
5
6
14
7
12
13
8
9
11
9
10

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60006906	Lube connector	1	
2	60006911	Hose assembly	1	
3	60006907	Stud	8	
4	60007095	Pin	2	
5	60006902	Gasket	1	
6	60006903	Gasket	1	
7	60082337	Power take–off	1	
8	60006904	Elbow	1	
9	60006908	Adapter	2	
10	60006913	Hose assembly	1	
11	60006905	Adapter	1	
12	60006912	Hose assembly	1	
13	60006910	Adapter	1	
14	60006909	Nut，self–locking	8	


2–3–4–5
2–3–4–5
2–3–4–5
1
2
3
4
5
3
3
6
3
7
3
2
2
8
10
9
10
11–12–13
11
12
13
14
11–12–13

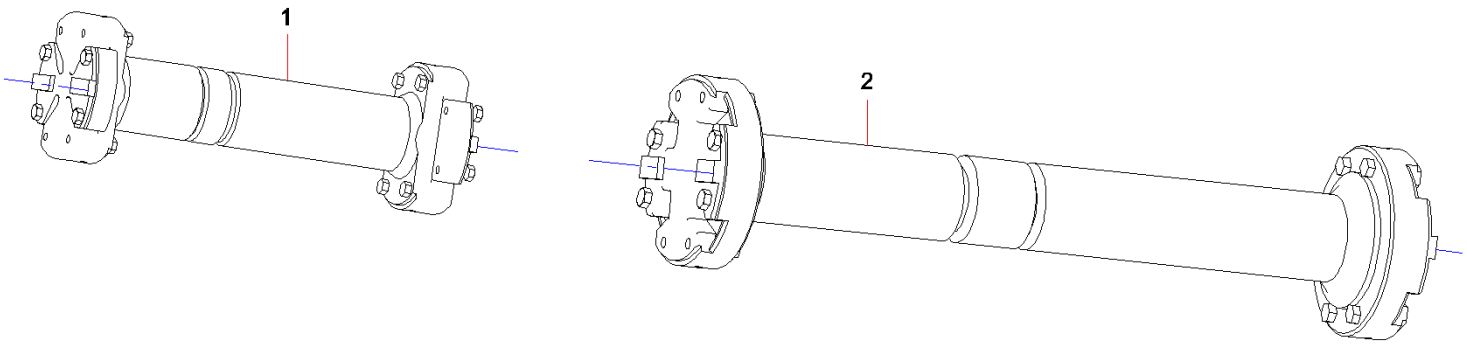
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60067753	Linear actuator	1	
2	A210307000016	Nut	6	
3	24000632	Washer	8	
4	60060564	Washer	4	
5	A210111000084	Bolt	4	
6	A210110000319	Bolt	1	
7	A210110000012	Bolt	1	
8	24000639	Washer 12GB97.1	1	
9	13255767	Connecting board SRT95.151A–3	1	
10	A210307000031	Nut	2	
11	60009687	Bolt	3	
12	24000512	Washer 10GB93	3	
13	A210491000120	Washer	3	
14	11624264	Fixed plate	1	

https://truckmanualshub.com/

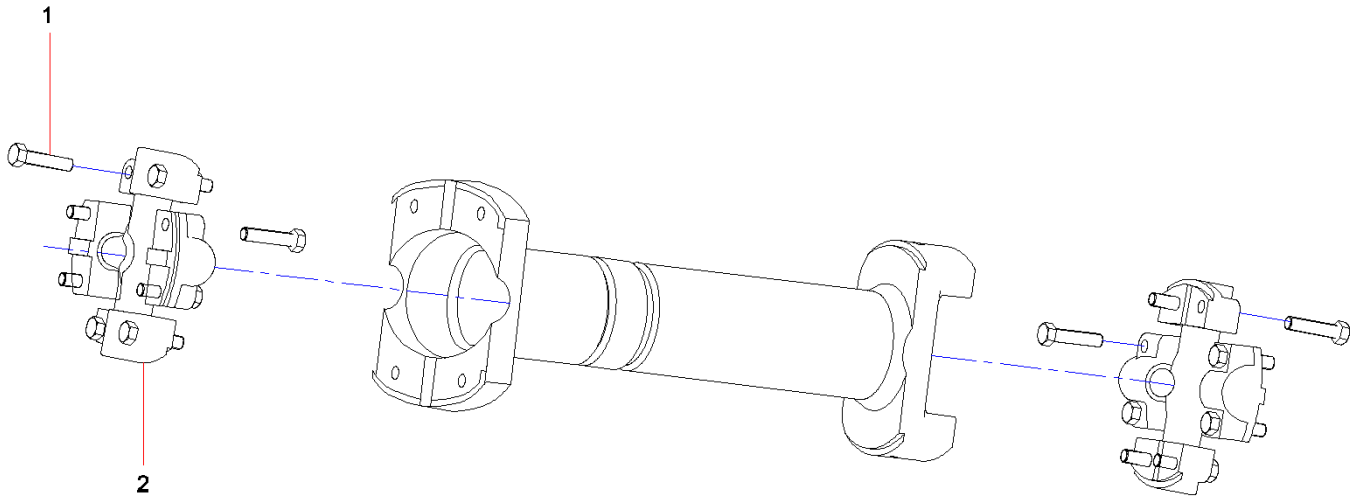
https://truckmanualshub.com/

Group 12
Driveline installation


1
2

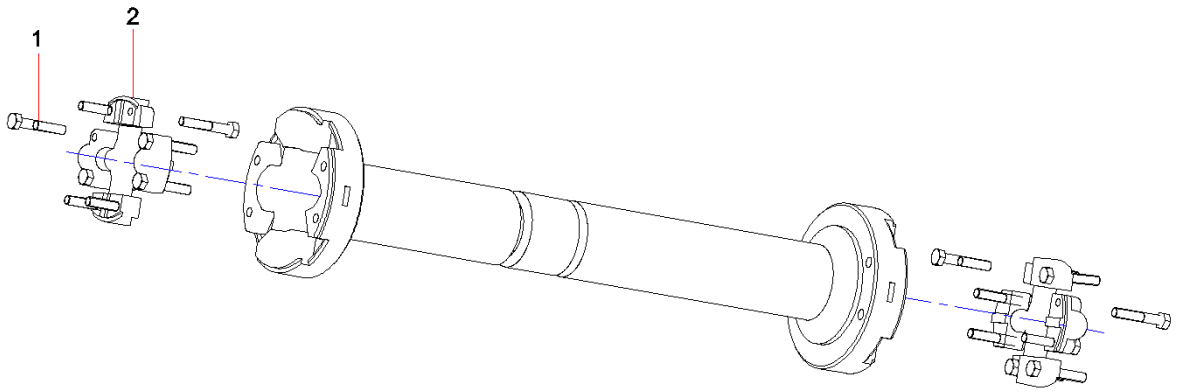
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60001267	Front driveline	1	
2	60001261	Rear driveline	1	


1
2

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60011099	Front Transmission Shaft Assy bolt	8	
2	60027405	Cross shaft,transmission,front	2	


1
2

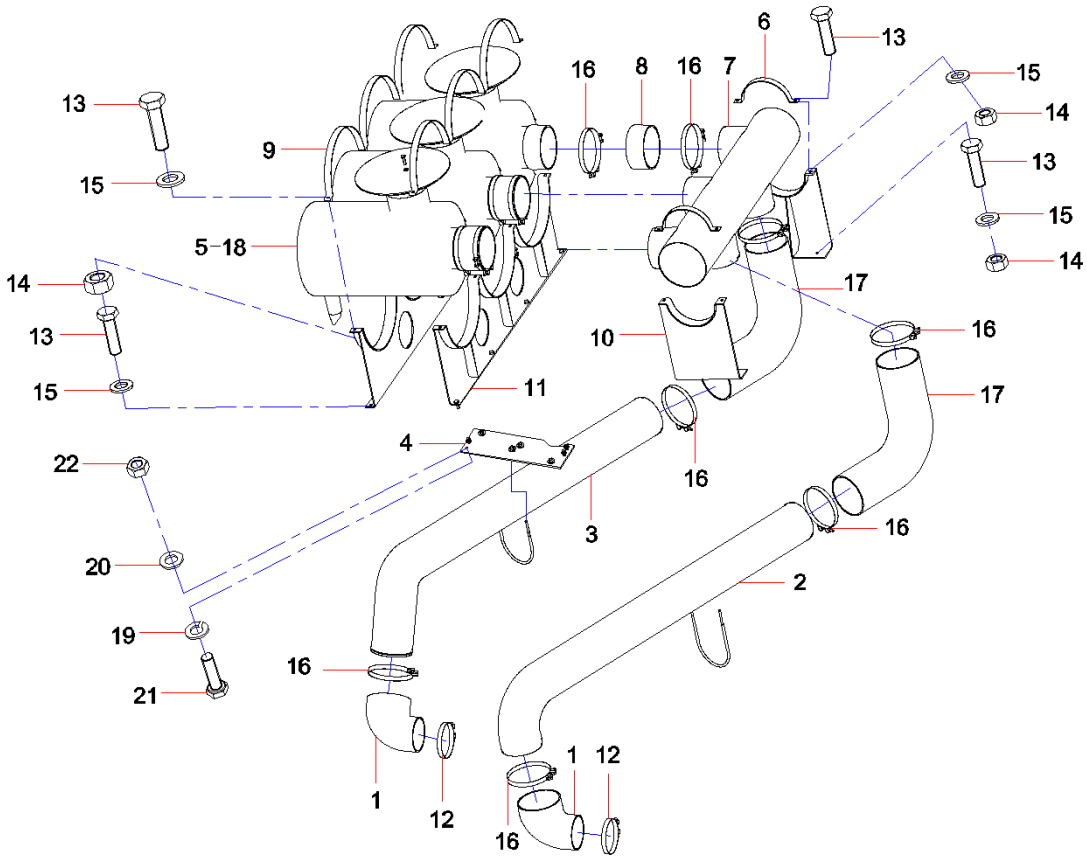
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60011098	Rear transmission shaft assem bolt	8	
2	60027404	Shaft,cross,transmission shaft,rear	2	

https://truckmanualshub.com/

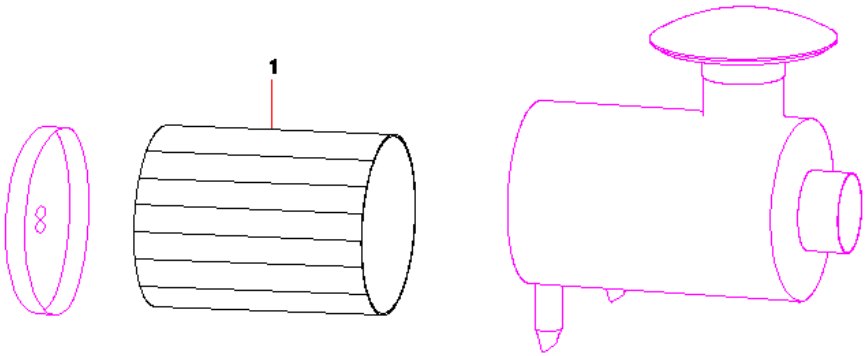
https://truckmanualshub.com/

Group 13
Air cleaner and pipeline installation


6
13
16
8
16
7
15
14
13
15
14
13
9
15
5-18
14
13
15
17
10
16
11
17
4
22
16
3
16
20
2
19
16
21
1
12
1
12
16

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	10492435	Elbow	2	
2	10492433	Intake tube	1	
3	10492434	Intake tube	1	
4	12951950	Fixed device	1	
5	A222100000601	Air cleaner	3	
6	10492437	Mounting band	2	
7	10492443	Plenum chamber	1	
8	10492436	Tube	3	
9	10492438	Mounting band	2	
10	10492450	Bracket	2	
11	10492454	Bracket	2	
12	60250990	T Model Anchor Ear	2	
13	A210111000026	Bolt	24	
14	A210307000036	Nut	16	
15	24000637	Washer	24	
16	60250989	T Model Anchor Ear	12	
17	10504206	Tube	2	
18	60013897	Main cartridge,air filter	3	
19	24000513	Washer 12GB93 DACROMET	4	
20	24000639	Washer 12GB97.1	16	
21	A210111000203	Bolt	4	
22	A210307000031	Nut	4	


1

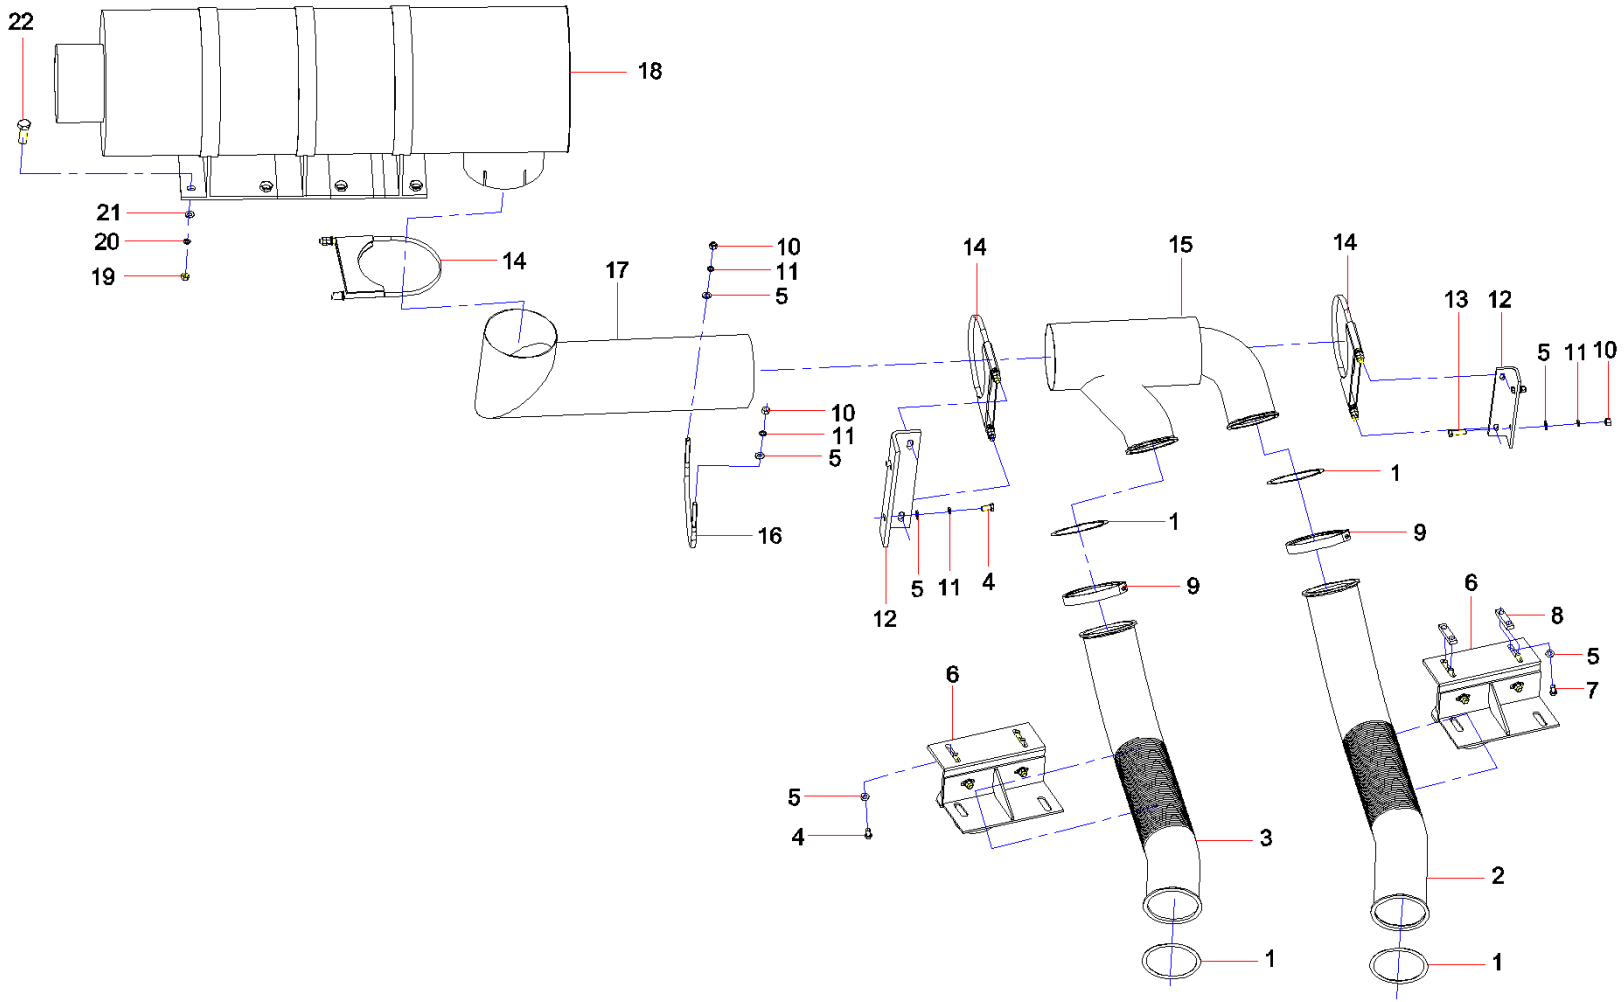
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60013897	Main cartridge,air filter	2	

https://truckmanualshub.com/

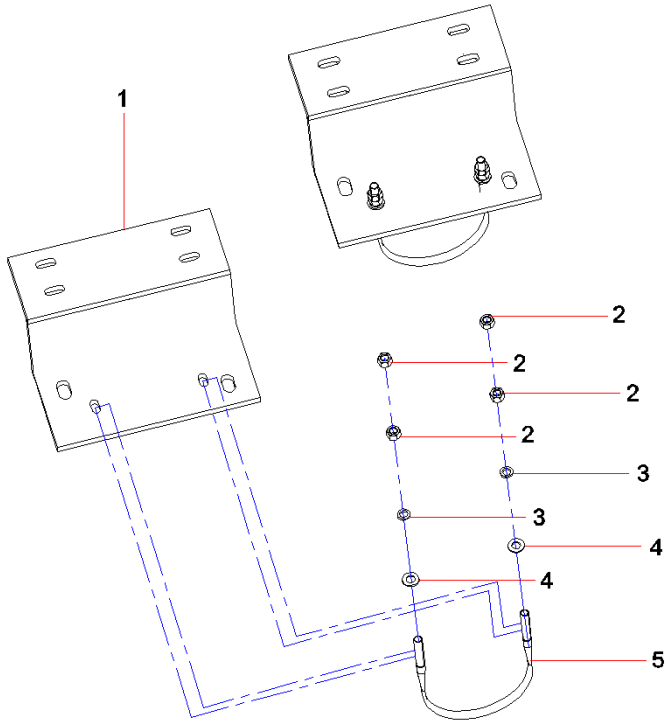
https://truckmanualshub.com/

Group 14
Exhaust tube installation srt95c.191


22
18
21
20
19
14
17
10
11
5
16
14
15
14
13
12
5
11
10
1
9
6
8
5
7
12
5
11
4
6
5
4
3
2
1
1

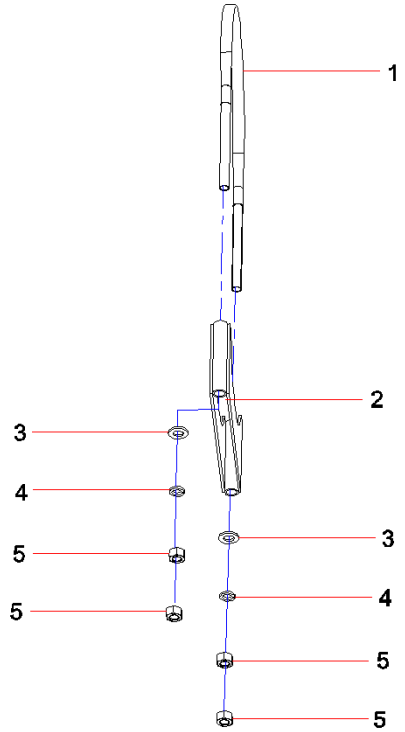
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	10694157	Gasket	4	
2	12946181	Exhaust tube	1	
3	12946179	Exhaust tube	1	
4	A210111000101	Bolt	6	
5	24000639	Washer 12GB97.1	14	
6	12946197	Fixed clamp assembly	2	
7	A210111000203	Bolt	4	
8	13176321	Plate	2	
9	60195993	Connector	2	
10	A210307000031	Nut	4	
11	24000513	Washer 12GB93 DACROMET	14	
12	12946189	Plate	2	
13	A210111000204	Bolt	2	
14	12946192	Fixed clamp	3	
15	12946186	Exhaust tube assembly	1	
16	12946191	U–bolt	1	
17	13367056	Exhaust tube SRT95C.191–1	1	
18	60259198	Muffler	1	
19	A210307000029	Nut	8	
20	24000515	Washer 20GB93 DACROMET	8	
21	24000646	Washer	8	
22	A210111000061	Bolt	8	


1
2
2
2
2
3
3
4
4
5

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12946201	Support	1	
2	A210307000031	Nut	6	
3	24000513	Washer 12GB93 DACROMET	2	
4	24000639	Washer 12GB97.1	6	
5	12946196	U–bolt	1	


1
2
3
4
5
5
3
4
5
5

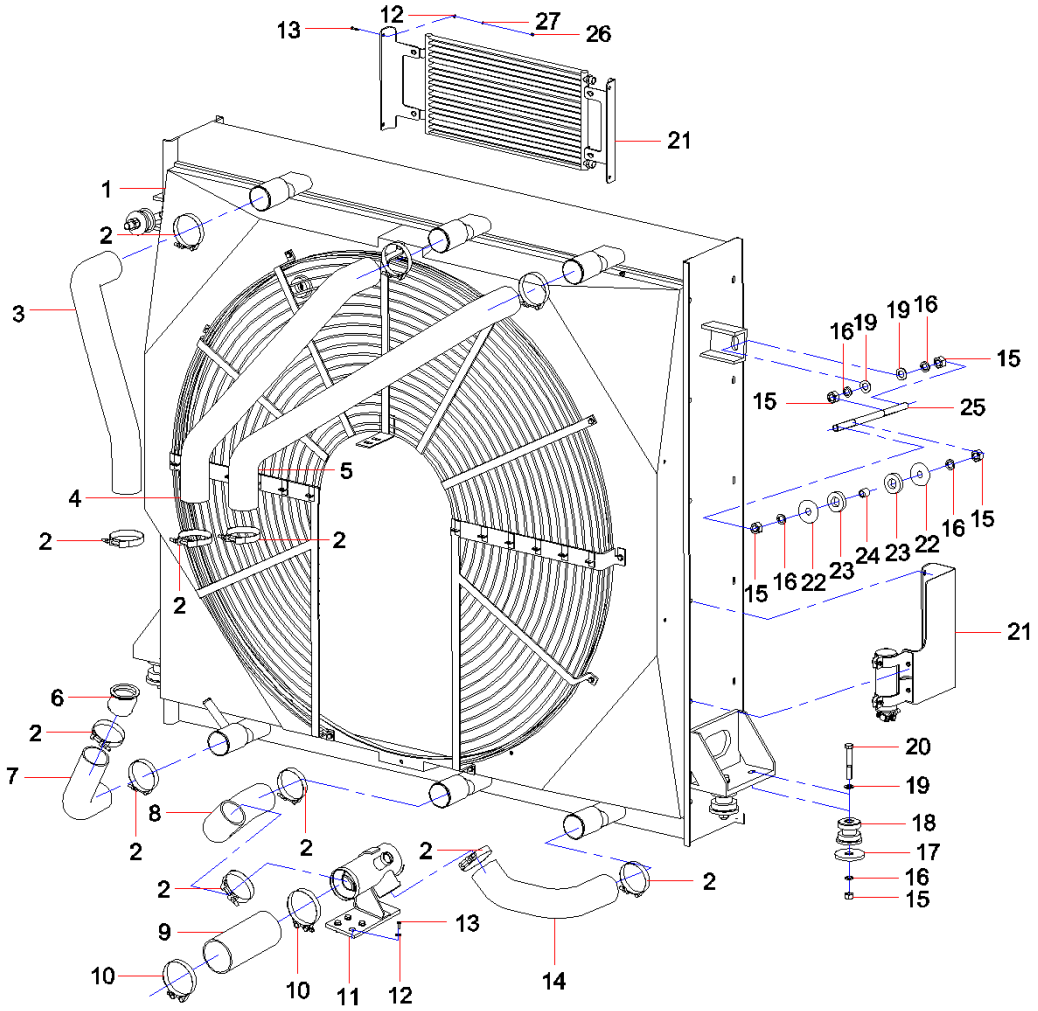
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12946191	U–bolt	1	
2	12946195	Support assembly	1	
3	24000639	Washer 12GB97.1	2	
4	24000513	Washer 12GB93 DACROMET	2	
5	A210307000031	Nut	4	

https://truckmanualshub.com/

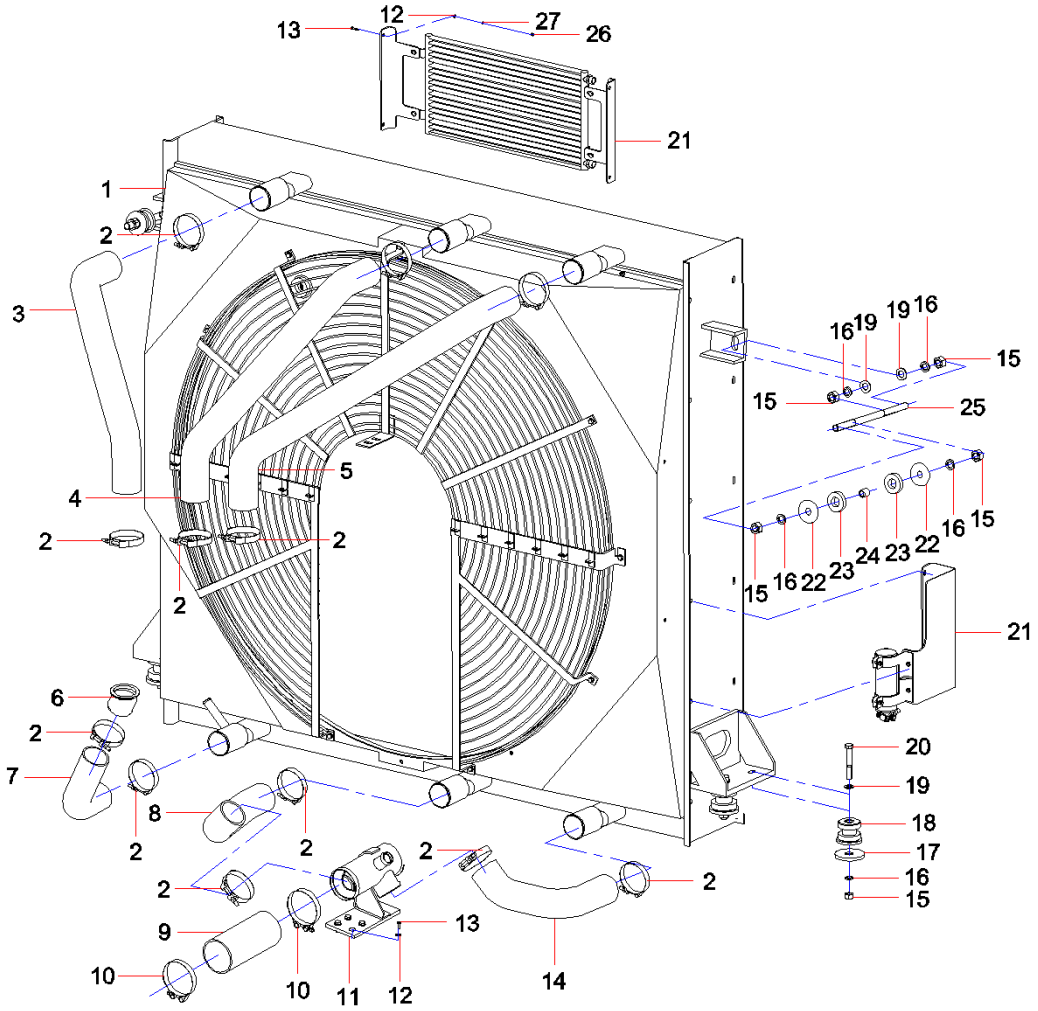
https://truckmanualshub.com/

Group 15
Radiator and pipeline installation


12
13
27
26
21
1
2
3
16
19
19
16
15
15
25
5
4
2
2
2
15
16
22
23
24
23
22
16
15
21
6
2
7
8
2
2
2
2
2
2
20
19
18
17
16
15
9
13
10
10
11
12
14

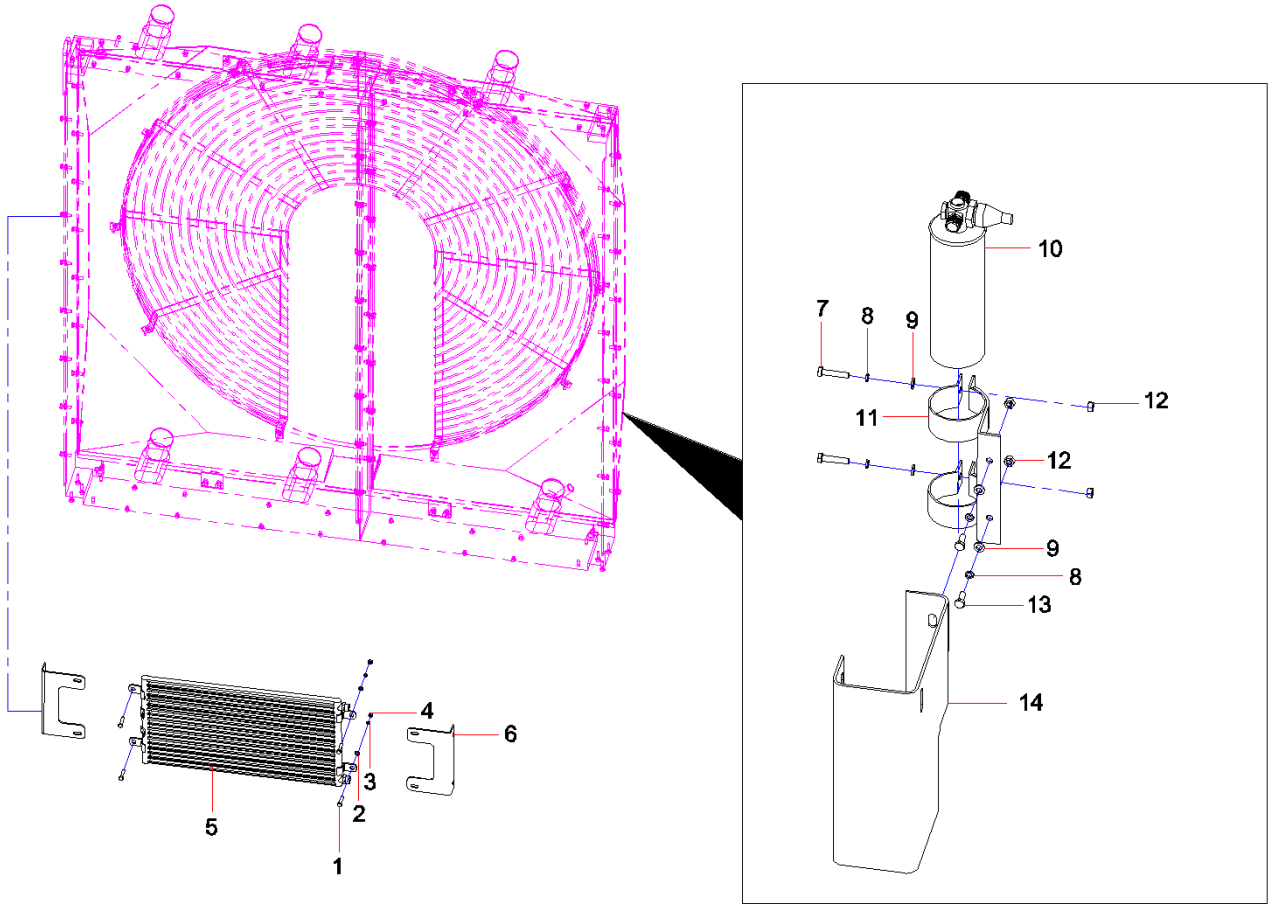
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60221141	Radiator assembly	1	
2	60250995	T Model Anchor Ear	12	
3	12951906	Inlet pipe	1	
4	12951885	Inlet pipe	1	
5	12951884	Inlet pipe	1	
6	11076012	Elbow	1	
7	12951877	Outlet pipe	1	
8	12951878	Outlet pipe	1	
9	10499920	Hose	1	
10	60250993	T Model Anchor Ear	2	
11	10499927	Cross pipe assembly	1	
12	24000637	Washer	8	
13	A210111000024	Bolt	8	
14	12951880	Outlet pipe	1	
15	A210307000029	Nut	12	
16	24000515	Washer 20GB93 DACROMET	12	
17	10239993	Plate	4	
18	21003719	Pad, damper	4	
19	24000646	Washer	8	
20	A210111000446	Bolt	8	
21	12952514	Cooler	1	
22	10700960	washer	4	


12
13
27
26
21
1
2
3
5
4
2
2
2
6
2
7
8
2
2
2
2
2
2
9
10
10
11
12
13
14
16
19
19
16
15
15
25
15
16
22
23
24
23
22
16
15
21
20
19
18
17
16
15

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	A229900003147	Pad	4	
24	10700947	Sleeve	2	
25	12951882	Support Rod	2	
26	A210307000036	Nut	4	
27	24000512	Washer 10GB93	4	


10
7
8
9
12
11
12
9
8
13
14
4
6
3
2
5
1

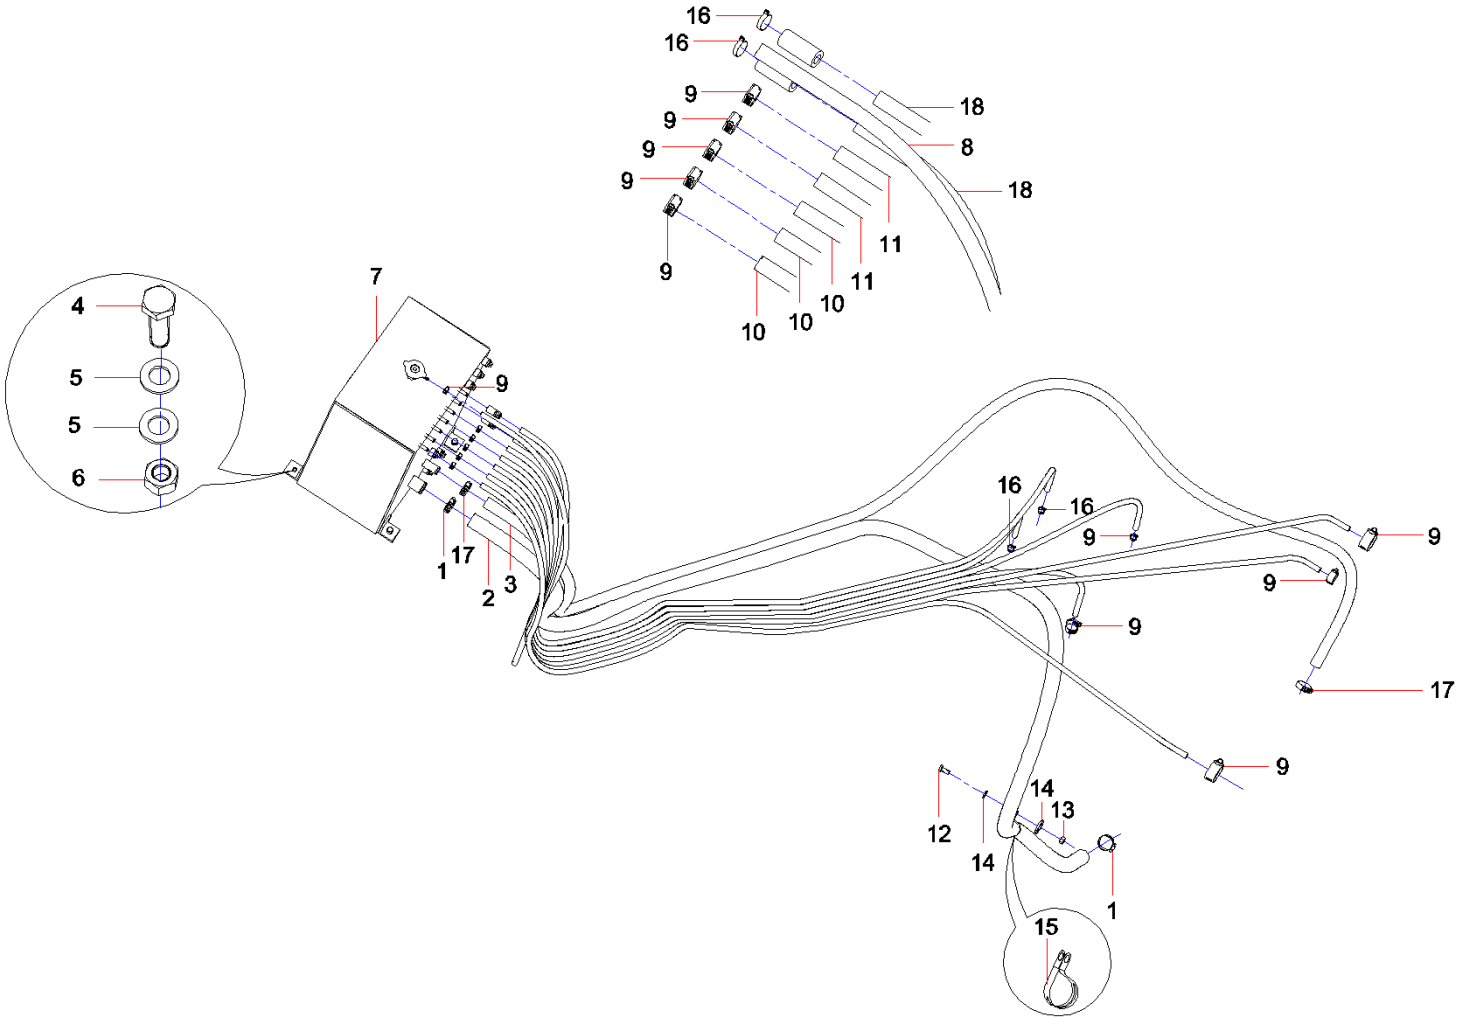
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000092	Bolt	4	
2	A210401000016	Washer	4	
3	24000632	Washer	4	
4	A210307000055	Nut M8GB6170 Grade 10	4	
5	A220700000032	Condenser	1	
6	12952496	Bracket	2	
7	A210111000082	Bolt	2	
8	A210401000017	Washer	4	
9	24000633	Washer	4	
10	21024881	Assembly, cistern	1	
11	11576518	Reciver bracket	1	
12	A210307000016	Nut	4	
13	A210111000079	Bolt	2	
14	12952500	Pinboard	1	

https://truckmanualshub.com/

https://truckmanualshub.com/

Group 16
Water tank mounting and lines


16
16
9
9
9
9
9
10
10
10
11
11
18
8
18
7
4
5
5
6
9
1
17
2
3
16
16
9
9
9
9
17
14
13
12
14
1
15

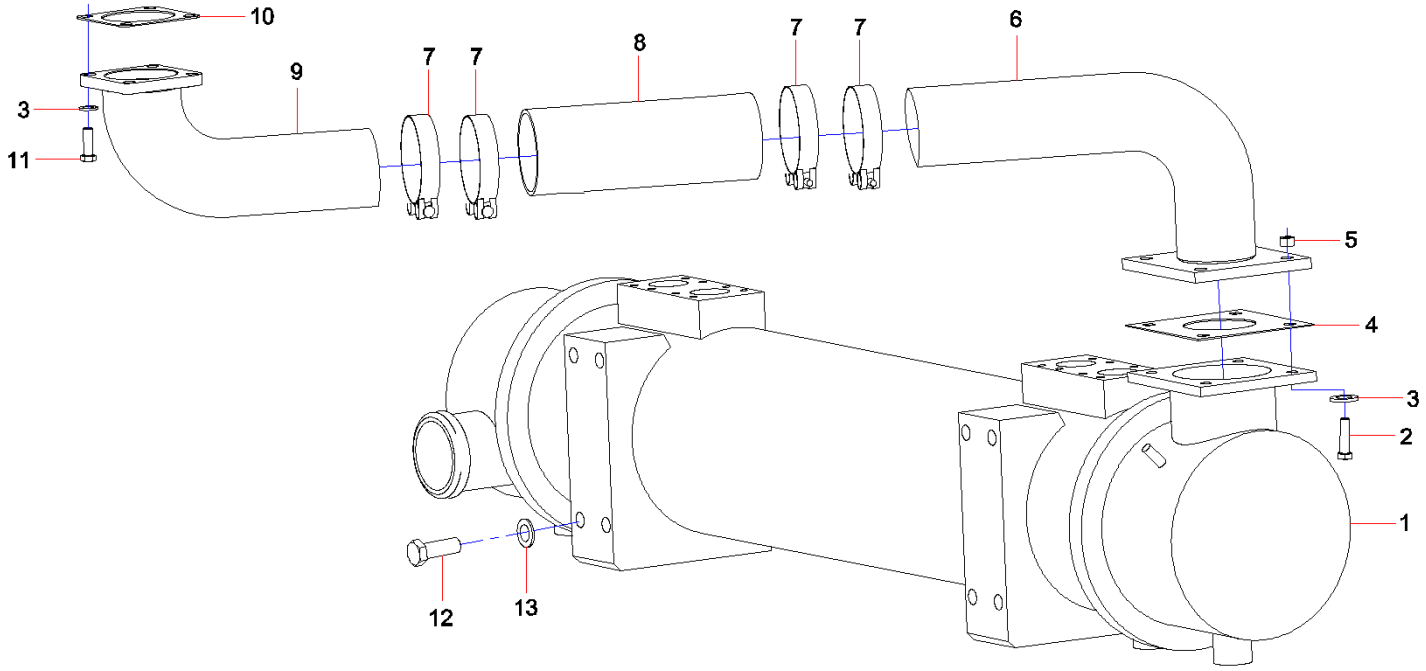
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210855000011	Hoop	2	
2	10506330	Make–up line	1	
3	10506335	Make–up line	1	
4	A210111000026	Bolt	4	
5	24000637	Washer	8	
6	A210307000036	Nut	4	
7	60004632	Water tank	1	
8	10970312	Overflow tubing	1	
9	21053360	Hose ring hoop	11	
10	10506334	Deaeration line	3	
11	10506331	Deaeration line	2	
12	A210111000101	Bolt	1	
13	A210307000031	Nut	1	
14	A210405000001	Washer	2	
15	A230200000178	Clamp	1	
16	A210855000005	Hoop	4	
17	A210855000020	Hoop	2	
18	11858460	Deaeration line	2	

https://truckmanualshub.com/

https://truckmanualshub.com/

Group 17
Disc brake oil cooler installation assembly


10
9
7
7
8
7
7
6
3
11
5
4
3
2
1
12
13

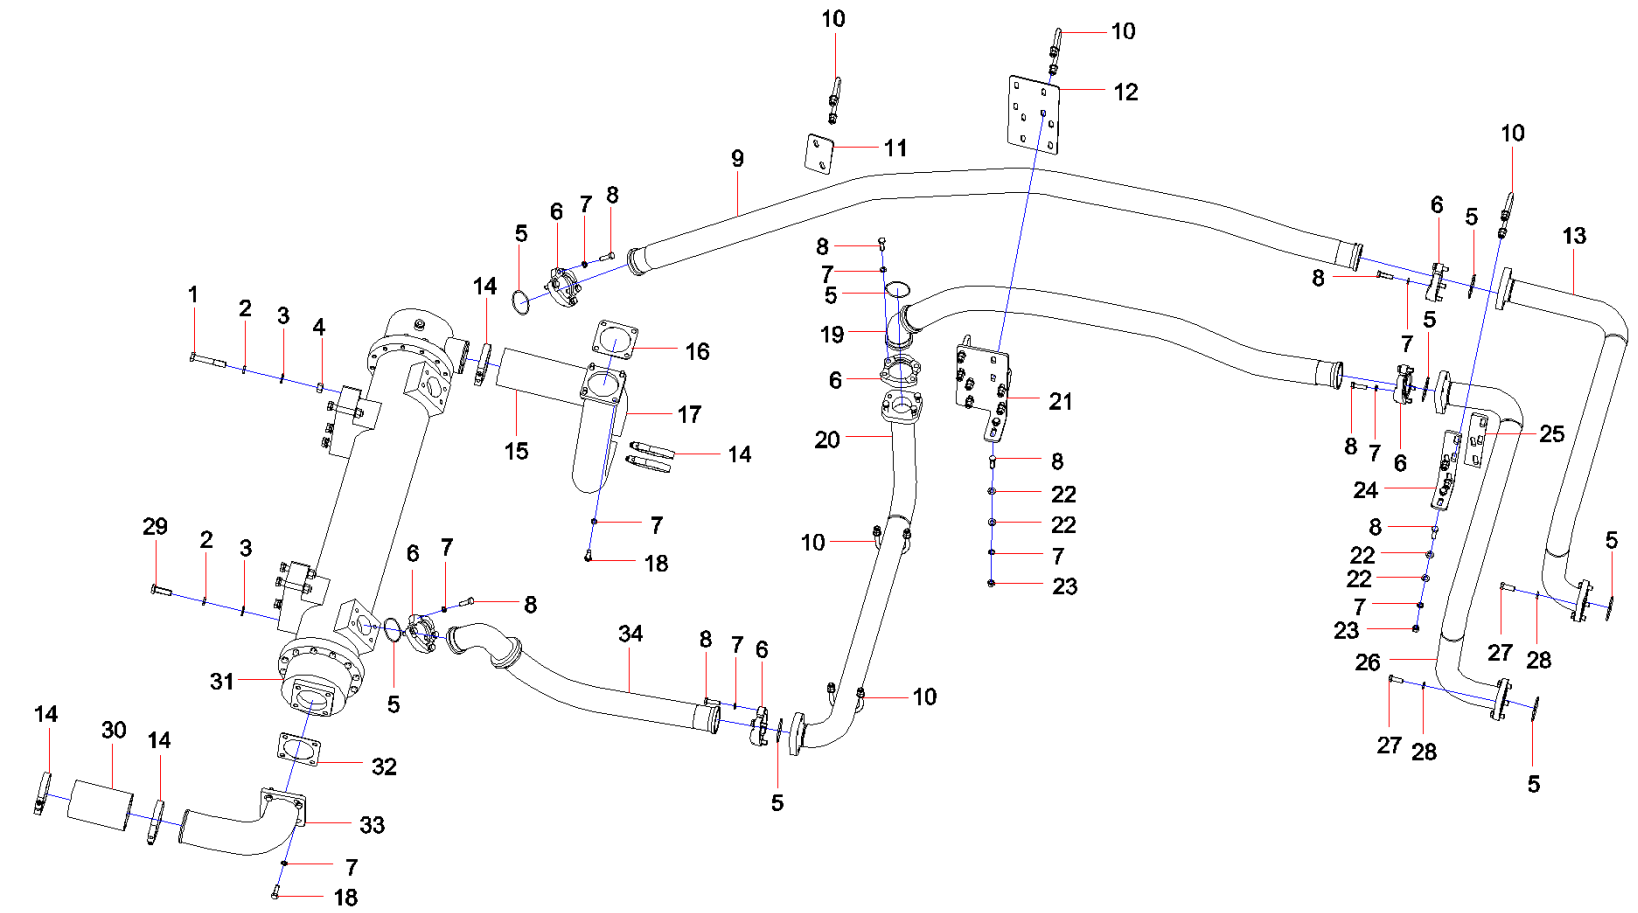
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60001270	Disc brake oil cooler	1	
2	A210111000119	Bolt	4	
3	24000639	Washer 12GB97.1	16	
4	10494836	Combined seal pad	1	
5	A210307000031	Nut	4	
6	10495193	Elbow	1	
7	60250992	T Model Anchor Ear	4	
8	10494841	Sleeve	1	
9	10495197	Elbow	1	
10	10494839	Gasket	1	
11	A210111000203	Bolt	4	
12	A210111000062	Bolt M20×60GB5783 Grade 10.9	8	
13	A210491000132	Washer	8	

https://truckmanualshub.com/

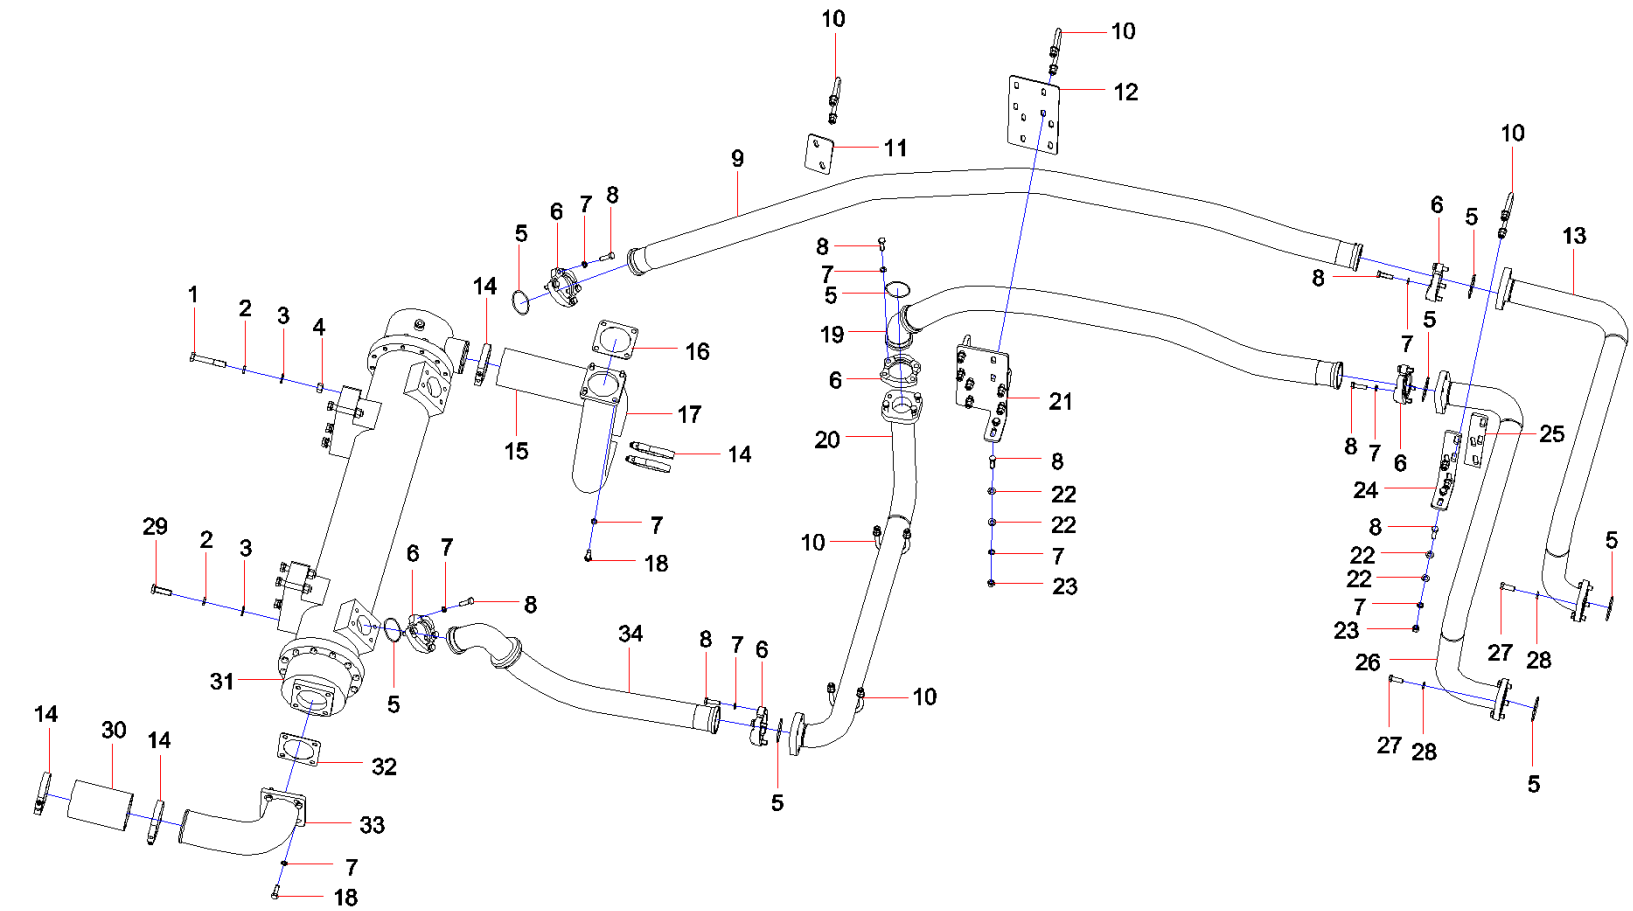
https://truckmanualshub.com/

Group 18
Tranmission cooling piping mounting


10
10
12
11
9
6 7 8
5
14
1 2 3 4
16
17
14
15
7
18
8
7
5
19
6
20
10
21
8
22
22
7
23
29 2 3
6 7
8
31
5
34
8 7 6
10
5
14 30 14
32
33
7
18
10
6 5
13
8
5
7
8 7 6
25
24
8
22
22
7
23
26
27 28
27 28
5
5

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210110000033	Bolt	4	
2	24000514	Washer 16GB93	12	
3	A210491000118	Washer	12	
4	A210307000028	Nut	4	
5	B230101002072	O-ring	8	
6	21018528	Split flange	6	
7	24000513	Washer 12GB93 DACROMET	36	
8	A210111000204	Bolt	28	
9	11992626	Oil inlet pipe assembly	1	
10	60008277	U-CLAMP	9	
11	12256518	Rubber pad	1	
12	12256517	Rubber pad	1	
13	11992167	Steel tube assembly	1	
14	A229900002263	T-type anchor ear	6	
15	12950170	Rubber hose	1	
16	10507405	Gasket	1	
17	12950175	Tube assembly	1	
18	A210111000203	Bolt	8	
19	11992628	Oil outlet pipe assembly	1	
20	11992378	Steel tube assembly	1	
21	11990357	Fixed plate	1	
22	A210405000001	Washer	8	


10
10
12
11
9
6 7 8
5
14
1 2 3 4
16
17
14
15
7
18
8
7
5
19
6
20
10
21
8
22
22
7
23
29 2 3
6 7
8
31
5
34
8 7 6
10
5
14 30 14
32
33
7
18
10
6 5
13
8
5
7
8 7 6
25
24
8
22
22
7
23
26
27 28
27 28
5
5

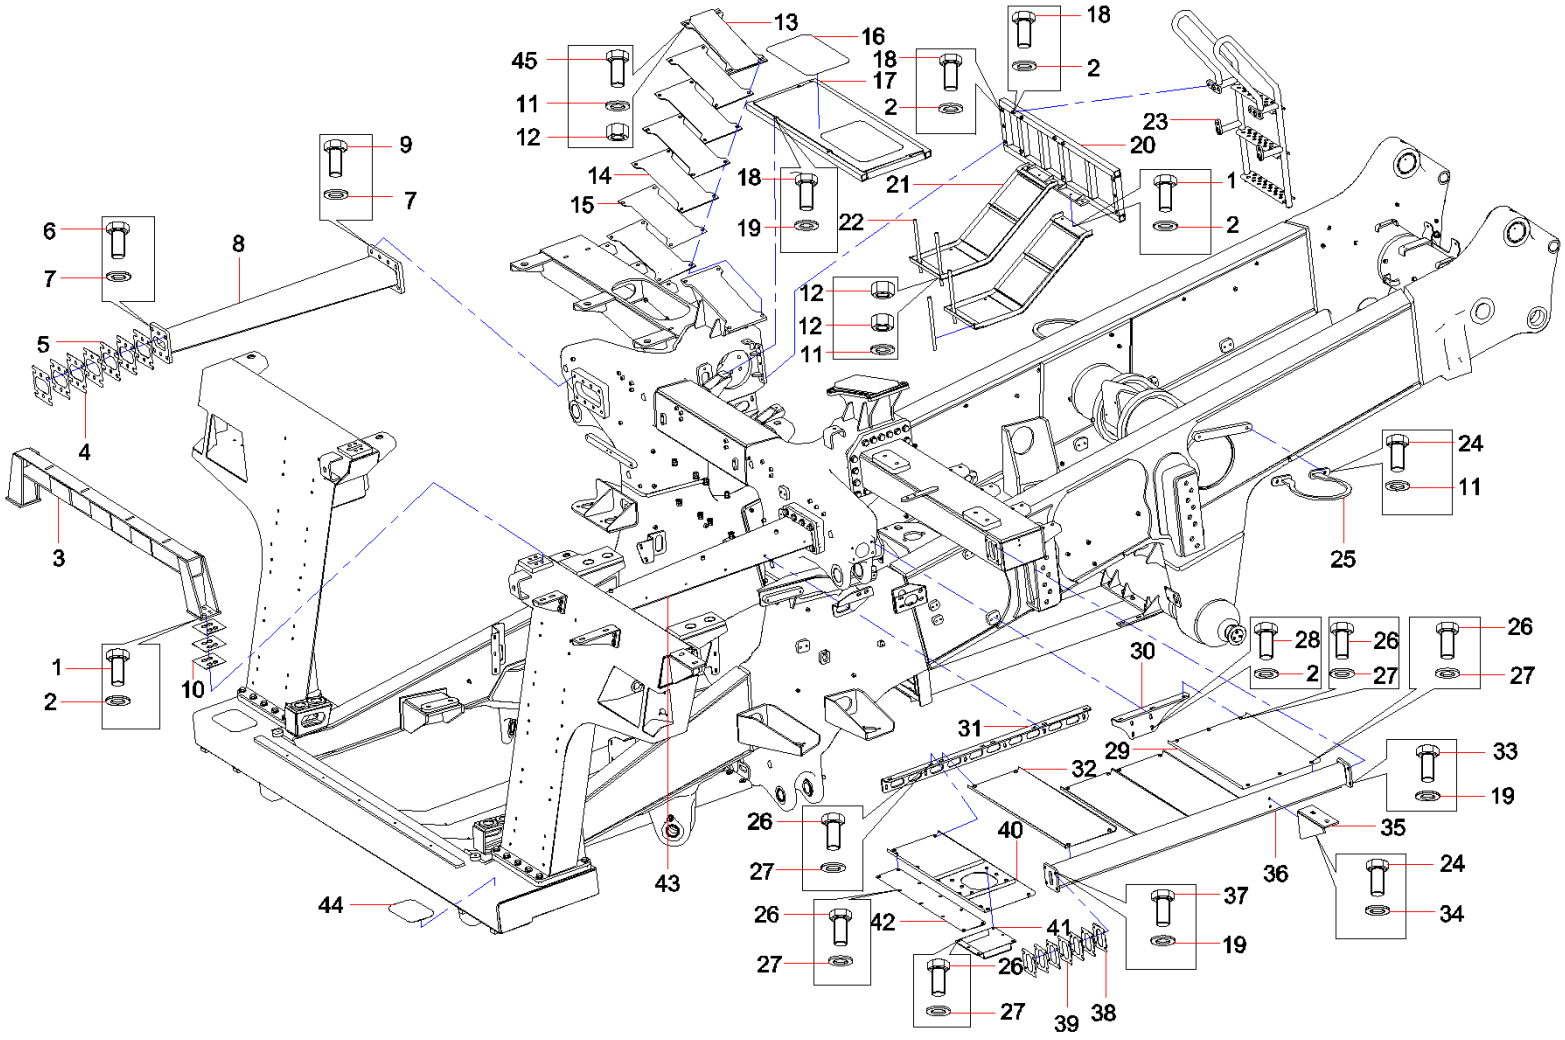
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	A210307000031	Nut	4	
24	12950171	Fixed Plate	1	
25	12950172	Rupper pad	1	
26	11992328	Steel tube assembly	1	
27	A229900009970	Bolt	8	
28	A229900009582	Washer	8	
29	A210111000243	Bolt	4	
30	10507398	Hose silicone	1	
31	60000231	Oil cooler	1	
32	10507392	Gasket	1	
33	10508277	Water inlet tube assembly	1	
34	11992630	Oil outlet pipe assembly	1	

https://truckmanualshub.com/

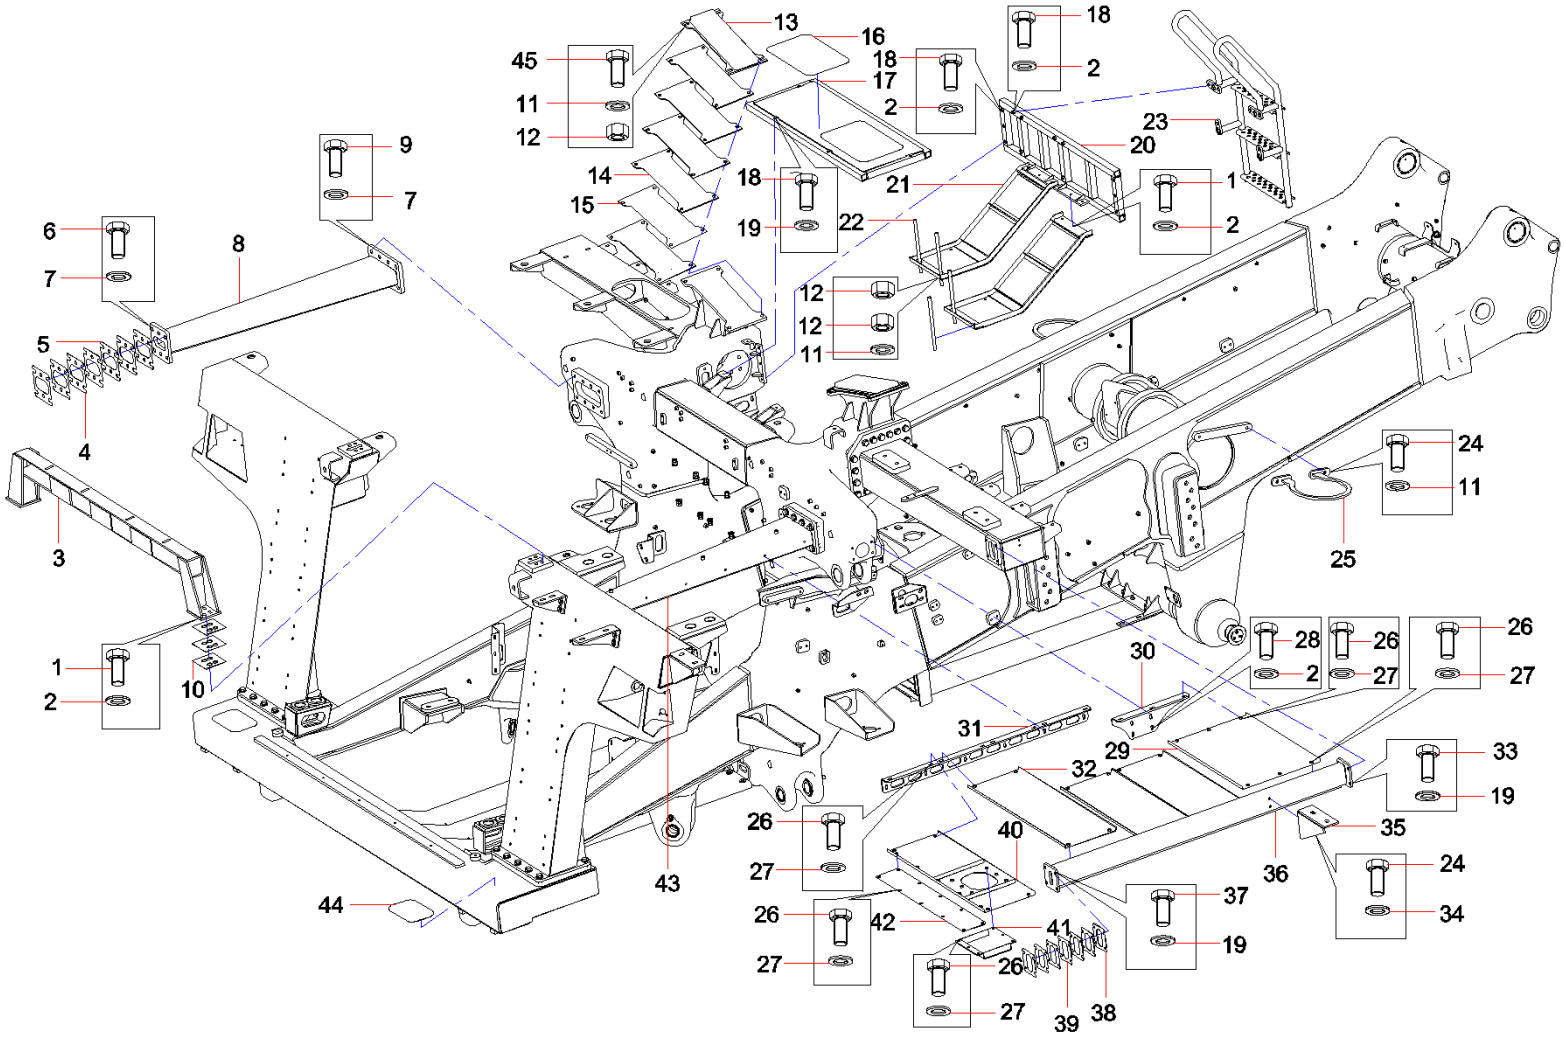
https://truckmanualshub.com/

Group 19
Frame component


13
16
45
18
17
11
2
12
18
2
23
20
14
18
21
1
15
19
22
2
9
7
6
8
7
12
12
5
11
4
24
11
3
25
1
2
10
28
26
26
2
27
27
30
31
29
33
32
19
26
35
40
36
27
24
34
26
42
41
37
27
26
19
27
39
38
44
43

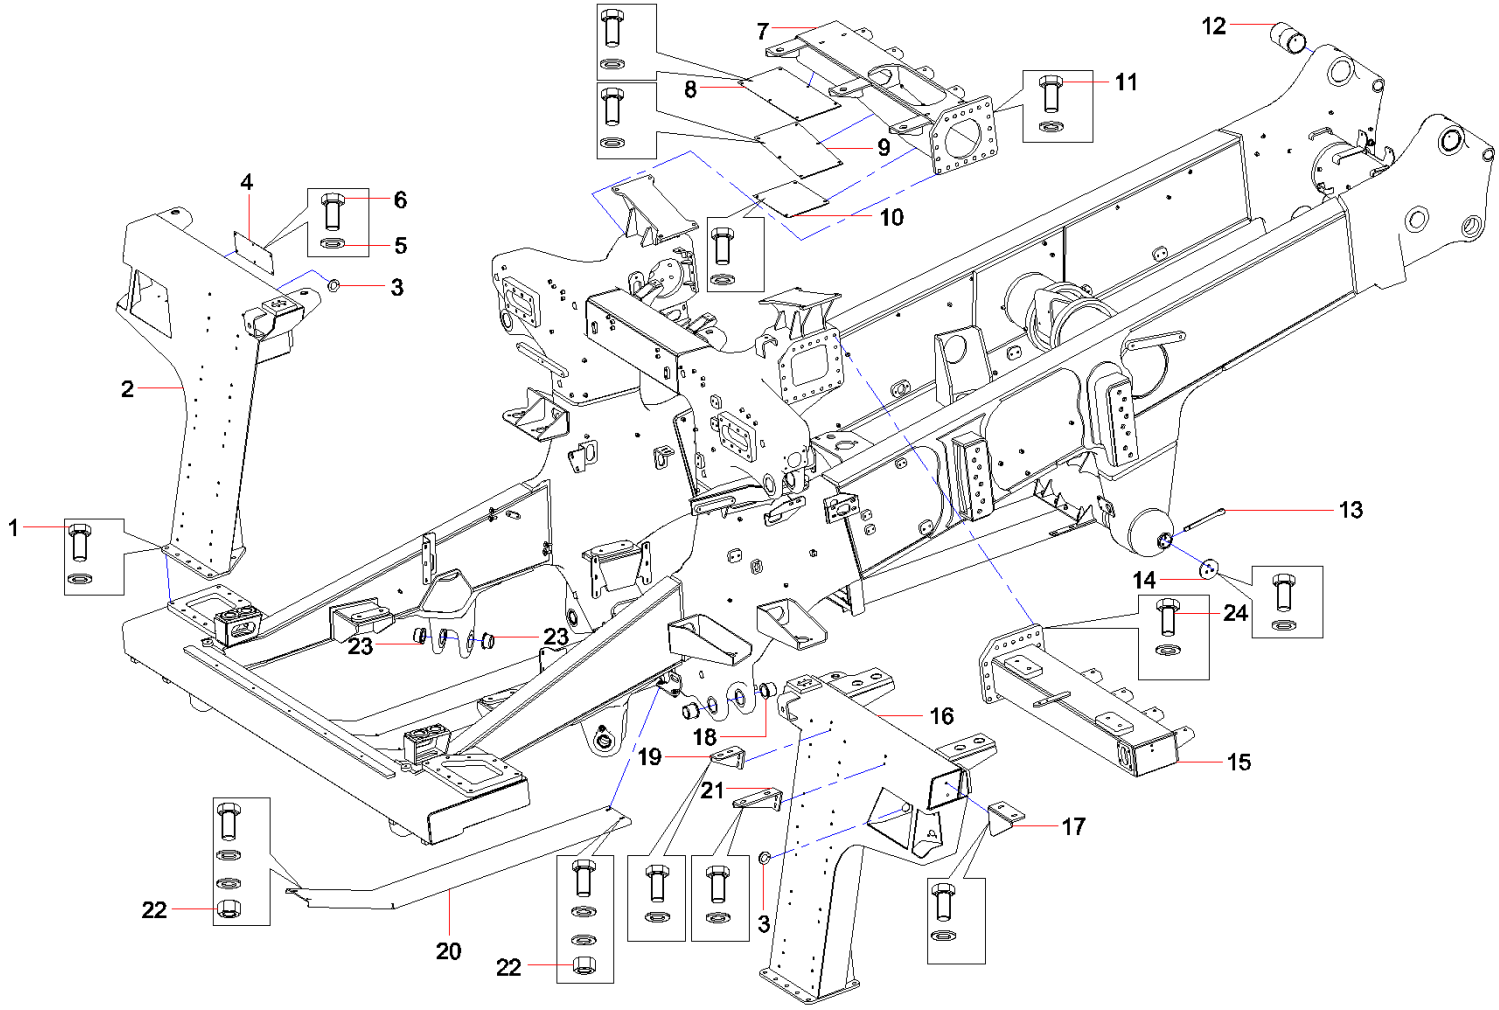
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000204	Bolt	72	
2	60060548	Washer 12GB96.1	96	
3	13090229	Tie rod units	1	
4	12951986	Board	6	
5	12951987	Board	22	
6	A210110000201	Bolt	12	
7	A210491000132	Washer	85	
8	12949087	Right–hand longitudinal pull rod	1	
9	A210111000061	Bolt	16	
10	13090162	Adjusting plate	6	
11	A210491000118	Washer	24	
12	A210307000028	Nut	24	
13	12953090	Damping pad	2	
16	11953373	Antiskid paste	2	
17	13090257	Rear platform	1	
18	A210111000104	Bolt	16	
19	24000639	Washer 12GB97.1	34	
20	12949778	Rear transverse tie beam	1	
21	13090264	Lower guard	2	
22	13069632	Screw rod	4	
23	12949895	Ladder of platform	1	
24	A210111000053	Bolt M16 × 40GB5783 Grade 10.9	12	


13
16
45
18
17
11
2
12
18
2
23
20
14
18
21
1
15
19
22
2
9
7
6
8
7
12
12
5
11
4
24
11
3
25
1
2
10
28
26
26
2
27
27
30
31
29
33
32
19
26
35
40
36
27
24
26
42
41
37
34
27
26
19
27
39
38
44
43

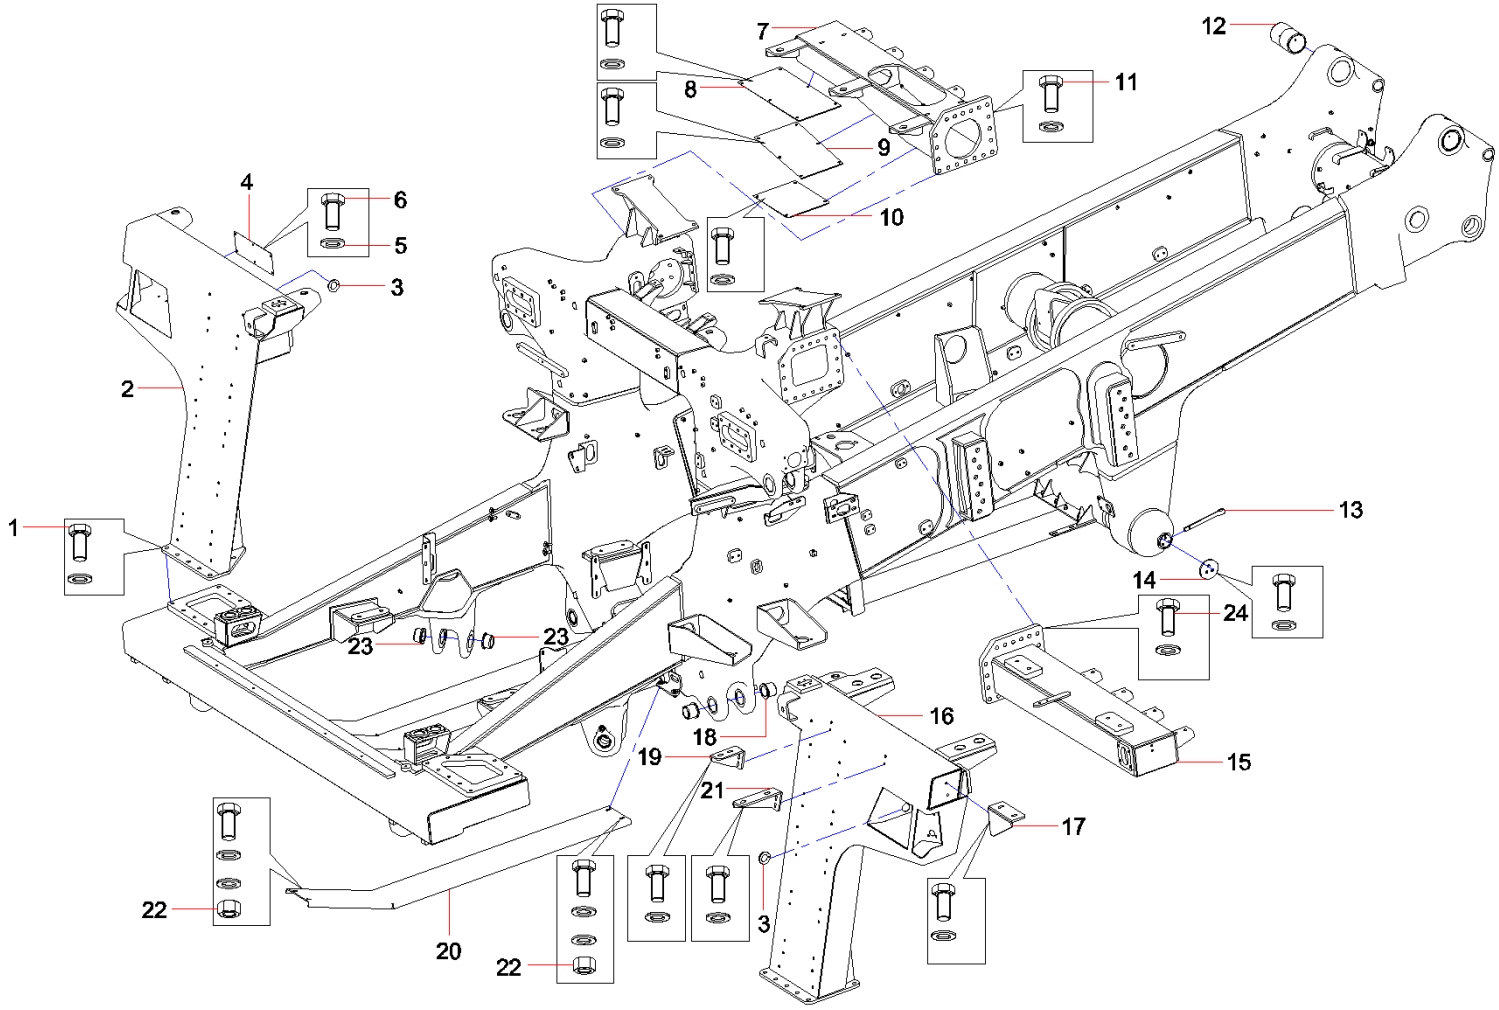
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
25	12949934	Anchor ear of lifting cylinder	2	
26	A210111000197	Bolt	54	
27	60060546	Washer 10GB96.1	54	
28	A210111000202	Bolt	4	
29	13090252	Rear lower cab guard boardSRT95C.270.39	1	
30	12951977	Fix board	1	
31	12951979	Board	1	
32	13090247	Cab rear lower guard board SRT95C.270.37	3	
33	A210111000203	Bolt	12	
34	60060553	Washer 16GB96.1	8	
35	13090266	Mounting seatSRT95C.270.42	1	
36	13090239	Outer longitudinal pull rod SRT95C.270.3	1	
37	A210111000118	Bolt M12×55GB5783 Grade 10.9	6	
38	12951989	Shim	9	
39	12951988	Board	2	
40	13090250	Front lower cab guard boardSRT95C.270.38	1	
41	13090269	Foot pedal valve coverSRT95C.270.43	1	
42	13090164	Fixed plate SRT95C.270–28	1	
43	12948610	Left–hand longitudinal pull rod	1	
44	11696489	Antiskid paste	2	
45	A210111000347	Bolt M16×90GB5783 10.9 grade	8	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24

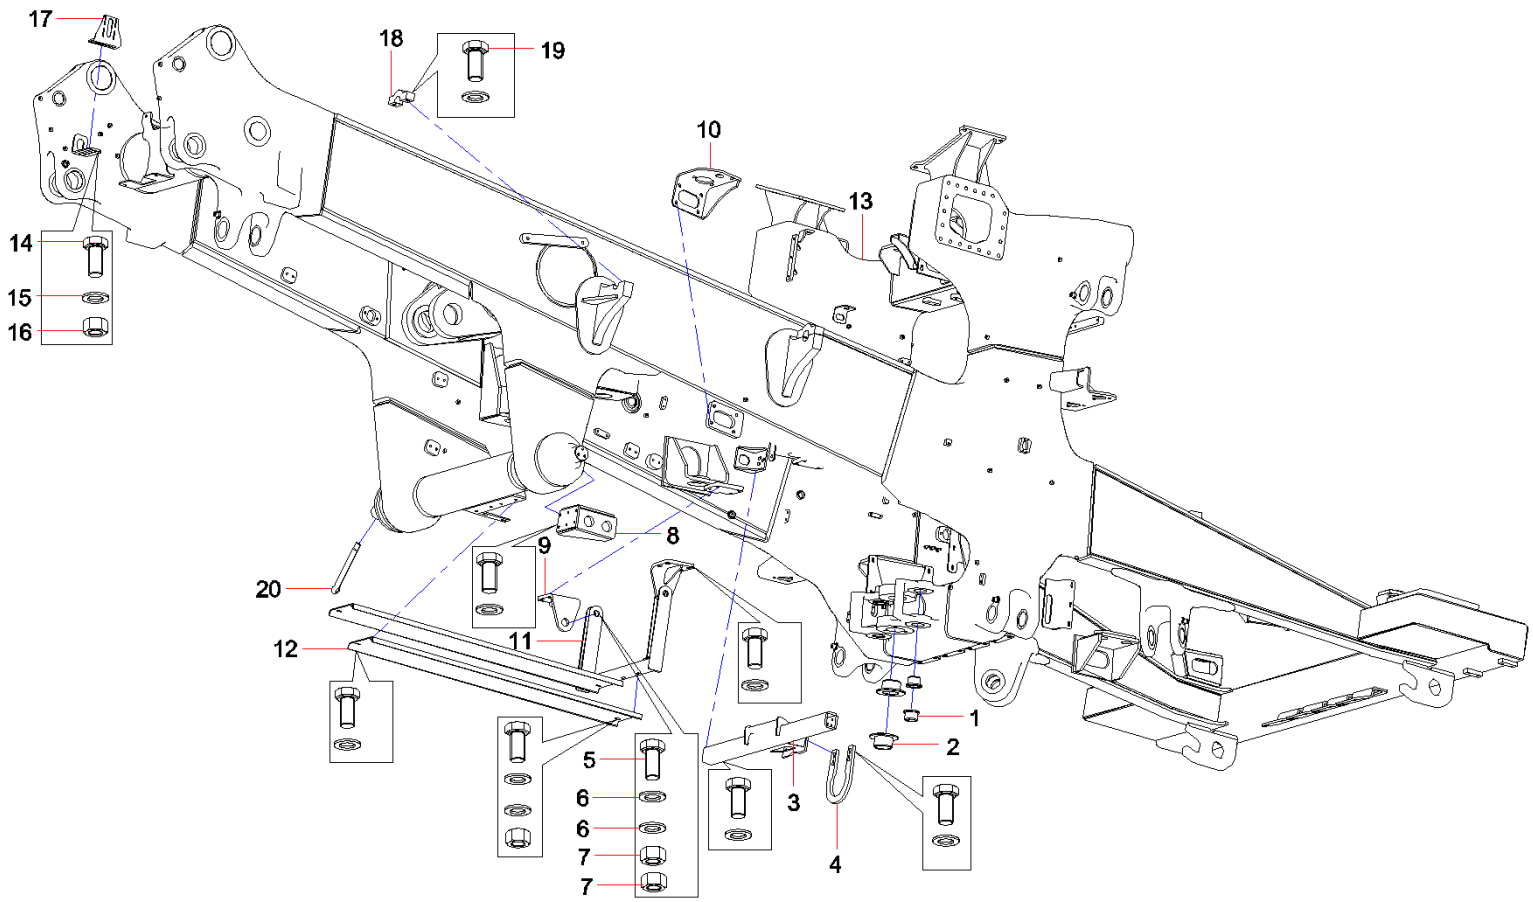
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000289	Bolt M20×45GB5783 Grade 10.9	20	
2	13090189	Right front support SRT95C.270.30	1	
3	11778087	Rubber bar	2	
4	13090161	Cover plateSRT95C.270-25	2	
5	24000633	Washer	12	
6	A210111000343	Bolt	12	
7	13090225	Right lengthening beam SRT95C.270.32	1	
8	13090169	Cover plateSRT95C.270-33	1	
9	13090168	Cover plateSRT95C.270-32	1	
10	13090167	Cover plateSRT95C.270-31	1	
11	A210111000062	Bolt M20×60GB5783 Grade 10.9	19	
12	12951969	Bush	2	
13	A210491000016	Pin	4	
14	13090166	Hoisting cylinder pressure plateSRT95C.2	2	
15	13090197	Left lengthening beam SRT95C.270.31	1	
16	13090179	Left front support SRT95C.270.29	1	
17	12949266	Mounting seat of left platform	1	
18	12951972	Bush	4	
19	12949471	Fixed seat of platform	1	
20	13090242	Engine lower guard SRT95C.270.35	4	
21	12949762	Fixed seat of platform	1	
22	A210307000031	Nut	20	


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	12951970	Bush	4	
24	A210111000063	Bolt M20 × 70GB5783 Grade 10.9	19	


17
18
19
10
13
14
15
16
8
9
20
11
12
1
2
5
6
6
7
7
3
4

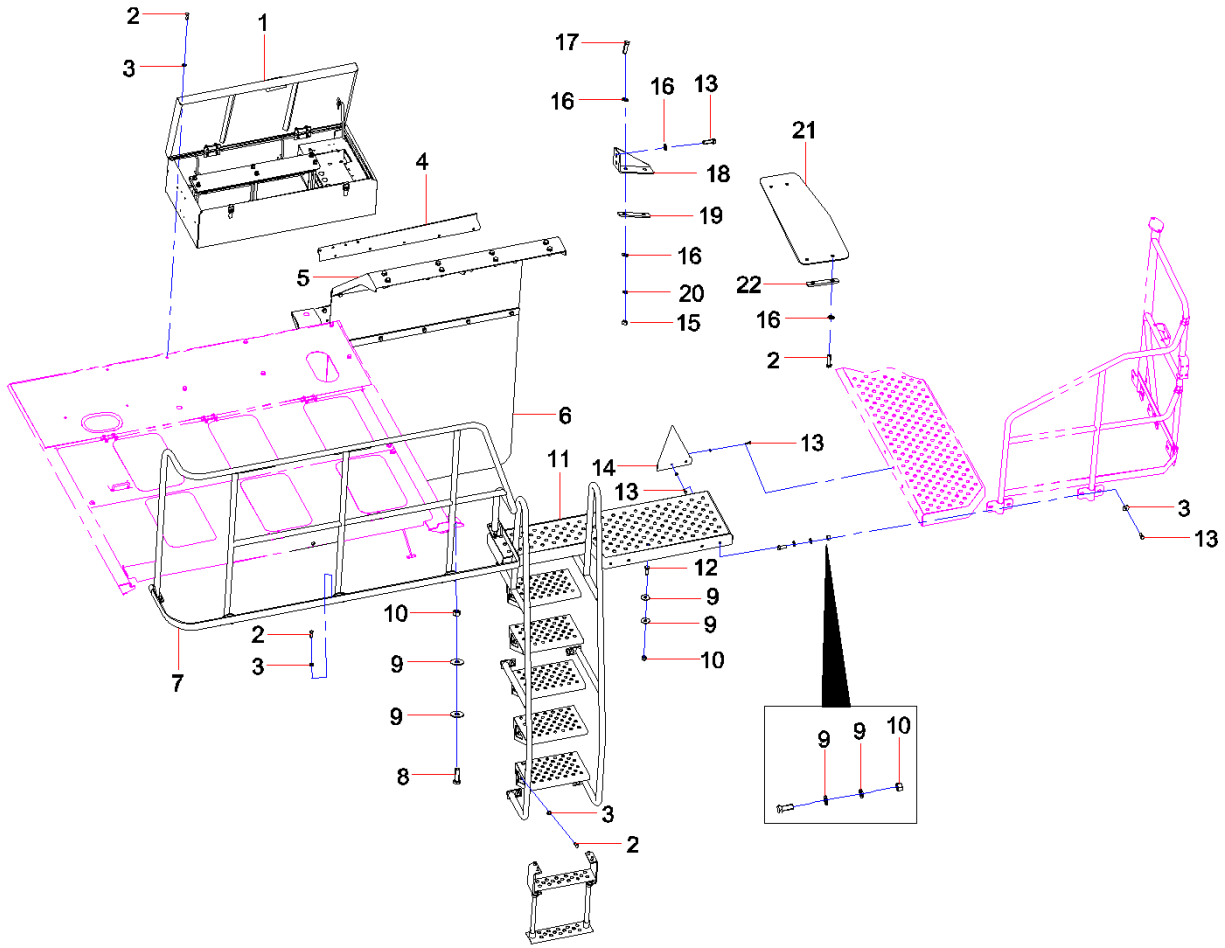
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12951973	Bush	4	
2	12951974	Bush	2	
3	12949770	Protecting rack	1	
4	13090165	Transmission shaft upper protective plat	1	
5	23002389	Bolt M30×110GB5782 Grade 10.9	2	
6	A210444000003	Washer 30GB1230	2	
7	A210307000009	Nut M30GB6170 Grade 10	4	
8	12949931	Lower fixed seat of fuel tank	1	
9	12949082	Fixed seat	2	
10	13090245	Mounting plate	1	
11	12948660	Back bracket of lower guard of gearbox	1	
12	13090163	Bottom board	2	
13	12955632	Frame assembly	1	
14	A210111000024	Bolt	4	
15	A210491000120	Washer	4	
16	A210307000036	Nut	4	
17	12951985	Board	1	
18	12955304	Press board	2	
19	23002022	Bolt	4	
20	13279619	Fixed pin	2	

https://truckmanualshub.com/

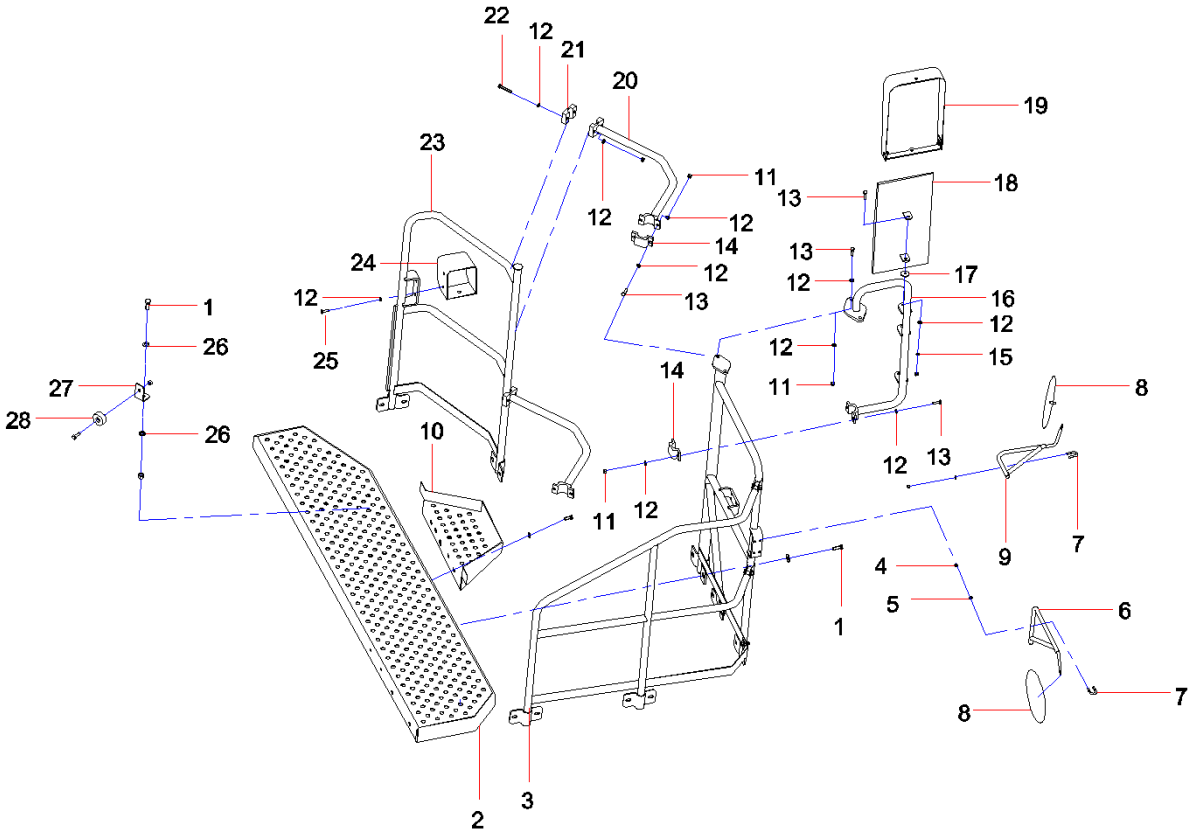
https://truckmanualshub.com/

Group 20
Fender and platform mounting


2
1
3
17
16
16
13
21
4
18
19
16
5
20
22
15
16
2
6
13
11
14
13
3
13
12
9
9
10
2
3
10
9
9
8
7
9
9
10
3
2

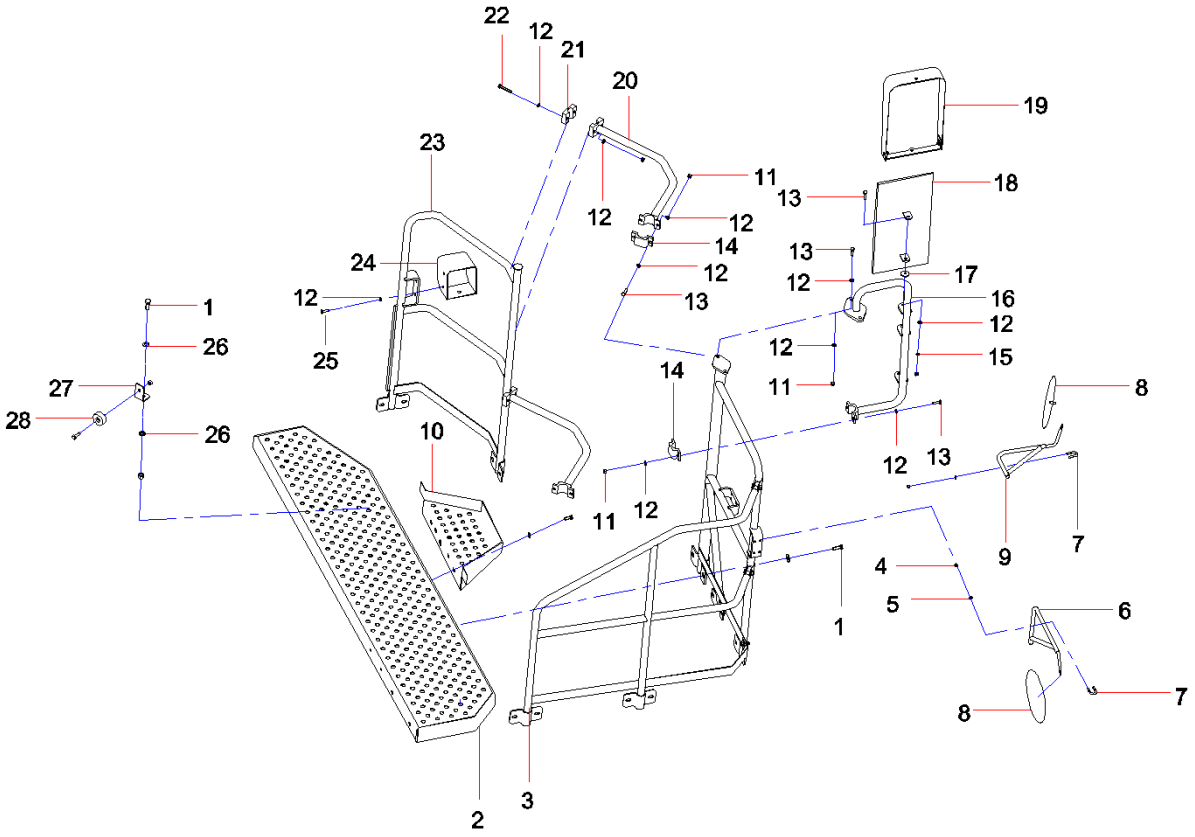
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12361876	Battery box assembly	1	
2	A210111000203	Bolt	52	
3	60060548	Washer 12GB96.1	75	
4	12950118	Fixed seat	1	
5	12949157	Mudguard assembly	2	
6	12950125	Mudguard	1	
7	12949383	Front guardrail assembly	1	
8	A210111000055	Bolt M16×60GB5783 Grade 10.9	8	
9	60060553	Washer 16GB96.1	72	
10	A210307000028	Nut	34	
11	12948938	Front walking board assembly	1	
12	A210111000106	Bolt	24	
13	A210111000202	Bolt	89	
14	12520118	Left–hand buffer Assembly	1	
15	A210307000031	Nut	46	
16	24000639	Washer 12GB97.1	143	
17	A210111000204	Bolt	33	
18	13083158	Installation seat	4	
19	13083152	Pressure plate	4	
20	24000513	Washer 12GB93 DACROMET	9	
21	13083150	Left mudguard	1	
22	12950117	Plate	1	


22
12
21
20
19
23
11
13
18
12
12
14
13
24
12
13
17
12
16
12
12
15
12
11
1
26
27
28
26
25
14
10
8
12
13
11
12
9
7
4
5
6
1
8
7
2
3

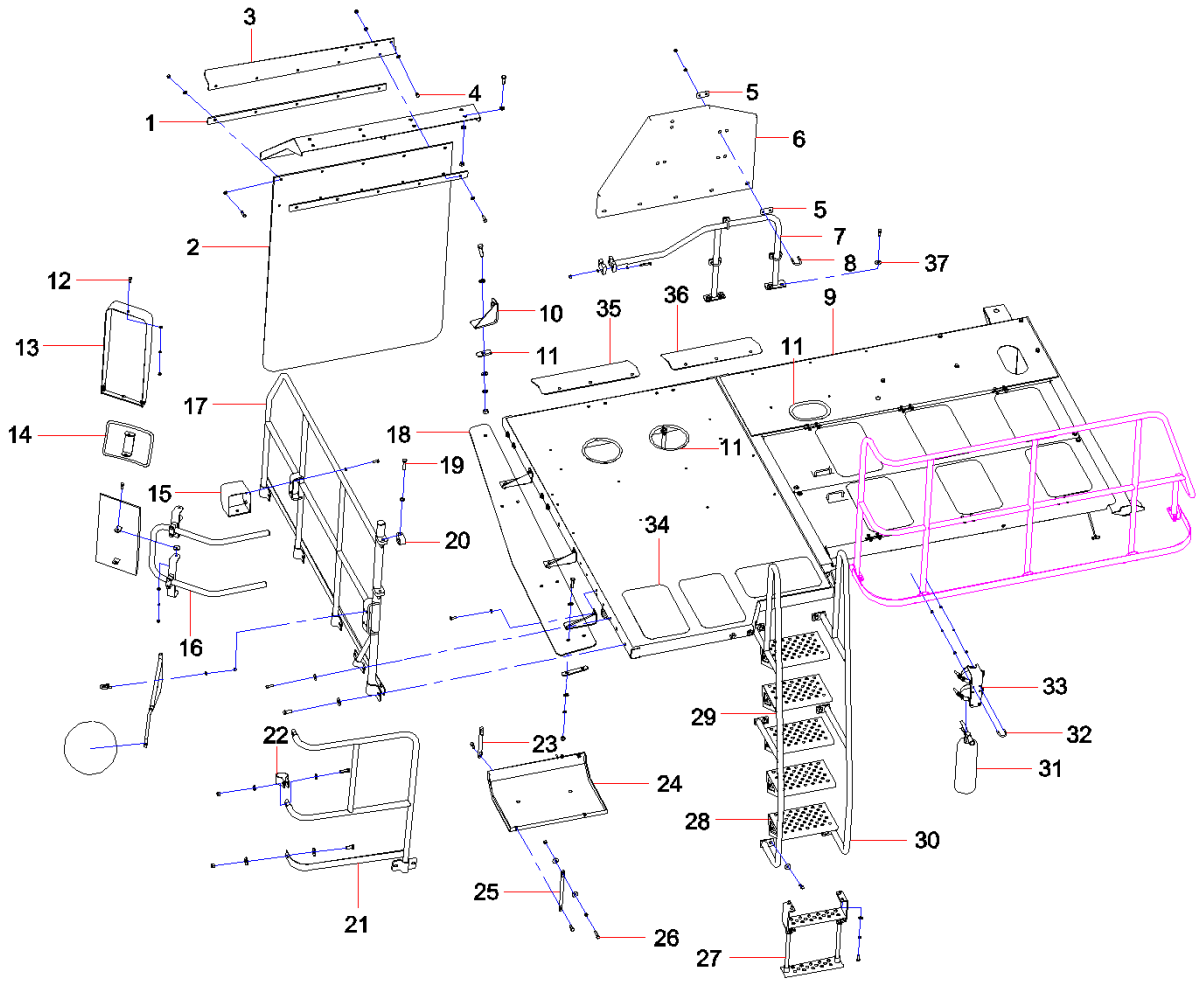
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000053	Bolt M16 × 40GB5783 Grade 10.9	6	
2	12948811	Left walking board assembly	1	
3	13082028	Left guardrail assembly	1	
4	A210307000055	Nut M8GB6170 Grade 10	18	
5	24000633	Washer	16	
6	12969722	Support assembly	1	
7	11805420	U–clip	6	
8	60216402	Dowm tail Mirror	3	
9	12969728	Support assembly	2	
10	12969701	Left additive walkway assembly	1	
11	A210307000036	Nut	30	
12	24000637	Washer	48	
13	A210111000026	Bolt	14	
14	11403681	Installation seat	3	
15	24000512	Washer 10GB93	8	
16	12949476	Left rear view mirror rack	1	
17	11630953	Shock pad	6	
18	60050650	Rearview mirror	2	
19	12712414	Rearview mirror cover	1	
20	12949251	Pull rod	2	
21	11402703	Installation seat	3	
22	A210111000294	Bolt	6	


22
12
21
20
19
23
11
13
18
12
12
14
13
24
12
12
17
13
16
12
12
15
25
12
11
1
26
27
28
26
14
8
10
12
13
11
12
9
7
4
5
6
1
8
7
2
3

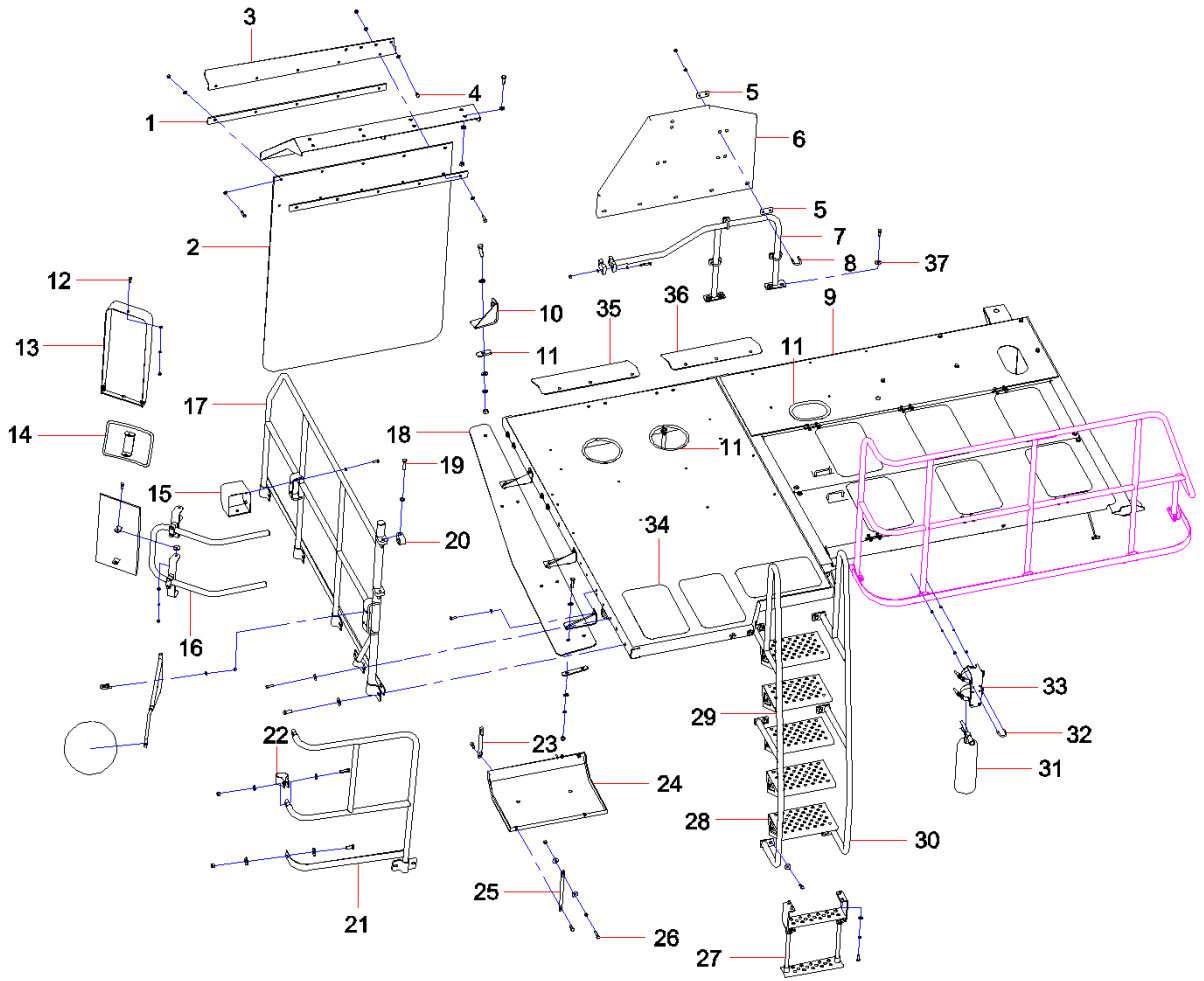
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	12948996	Left–hand rear guard rail assembly	1	
24	12712020	Left lamp cover	1	
25	A210111000024	Bolt	4	
26	24000642	washer	2	
27	12950124	Limit plate	1	
28	11180307	Rubber pad	1	


3
4
1
5
6
5
7
8
37
2
12
10
35
36
9
13
11
11
17
18
11
14
19
15
34
20
16
33
29
32
22
23
31
24
28
30
25
26
27
21

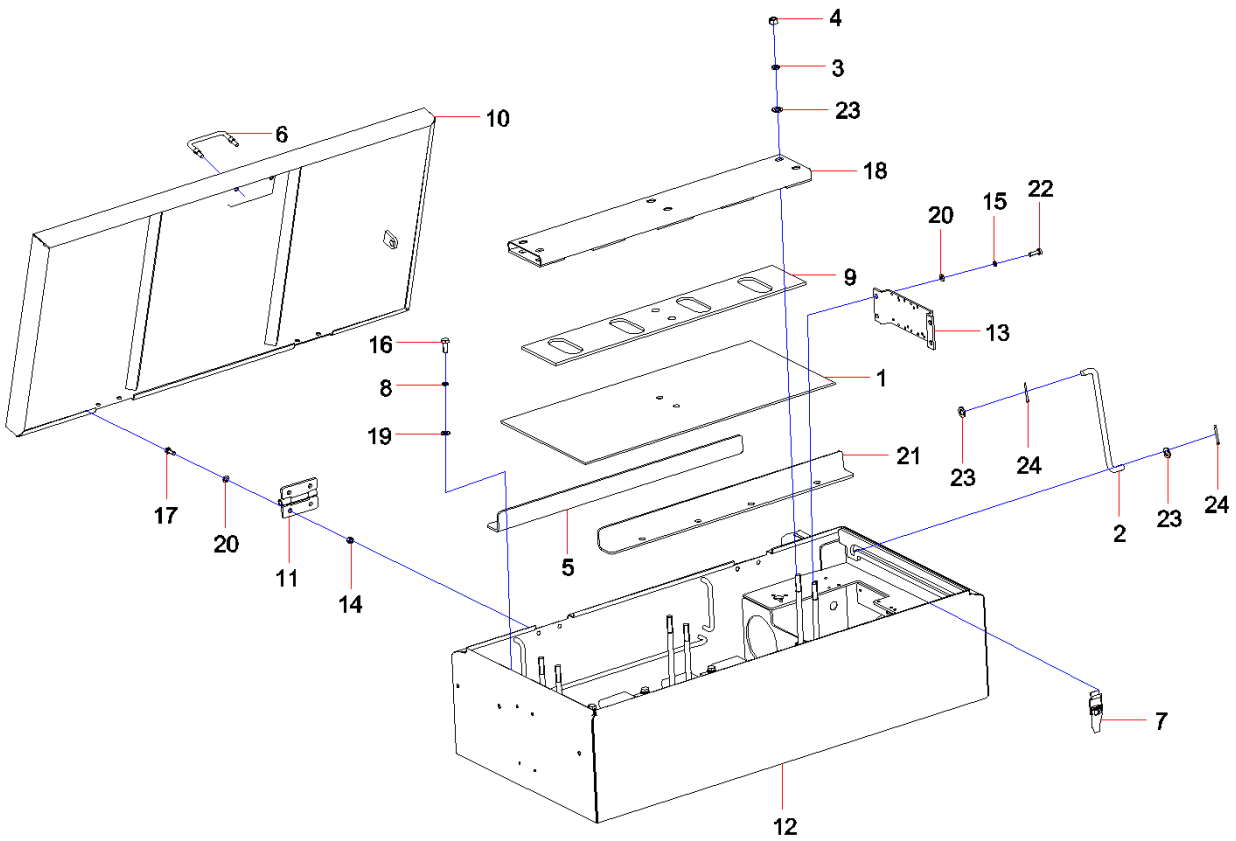
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12950126	Plate	4	
2	12950111	Mudguard	1	
3	12950119	Fixed seat	1	
4	A210111000199	Bolt M12×20GB5783 Grade 10.9	8	
5	12950121	Cushion	8	
6	12950120	Plate	1	
7	12948374	Back guardrail assembly	1	
8	12950123	U–bolt	4	
9	12950098	Platform assembly	1	
10	13083161	Installation seat	1	
11	13083155	Pressure plate	1	
12	A210111000197	Bolt	2	
13	12948310	Mirror cover	1	
14	60141948	Rearview mirror	1	
15	12712022	RH lamp cover	1	
16	12948465	Right rear view mirror rack	1	
17	13082721	Right handrail assembly	1	
18	13083151	Dashboard	1	
19	A210110000281	Bolt	2	
20	12950122	Mounting band	2	
21	13082726	Right handrail assemblySRT95C.290.27	1	
22	12969762	Connection sleeve	2	


3
4
1
2
5
6
5
7
8
37
12
13
14
15
16
17
18
19
20
10
11
35
36
9
11
11
34
33
32
31
29
30
28
22
23
24
25
26
27
21

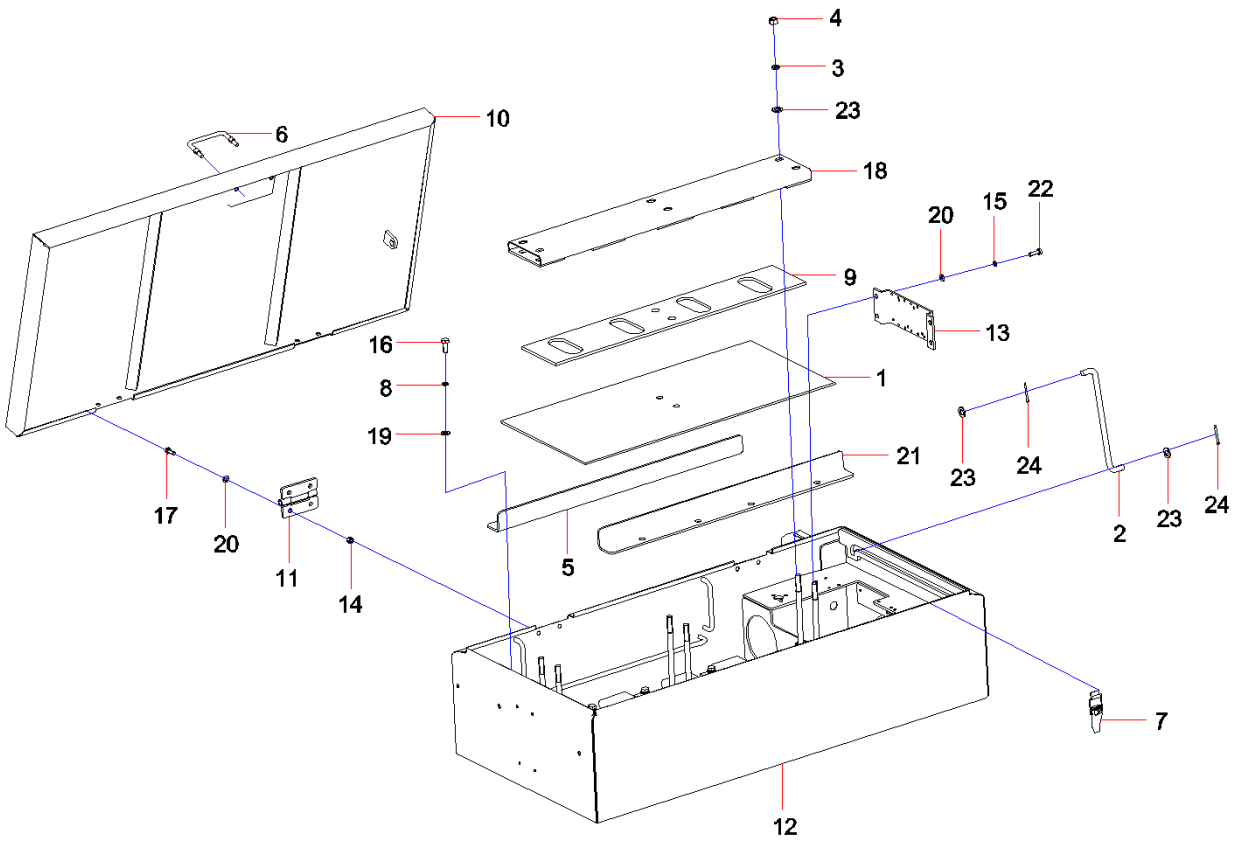
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	12950112	Tie rod	2	
24	12948170	Air intake tube guard	1	
25	12950113	Tie rods	2	
26	A210111000118	Bolt M12 × 55GB5783 Grade 10.9	2	
27	11628499	Step	2	
28	12949187	Ladder assembly	10	
29	12262166	Handrail assembly	2	
30	12262168	Handrail assembly	2	
31	A559900000099	Fire extinguisher,powder,BC	1	
32	11529937	U–bolt	2	
33	11891847	Fire extinguisher bracket	1	
34	11953373	Antiskid paste	9	
35	13083153	Baffle	1	
36	13083154	Baffle	1	
37	12951346	Washer	4	


4
3
23
18
6
10
20
15
22
9
13
16
8
19
1
21
23
24
17
20
11
14
5
2
23
24
7
12

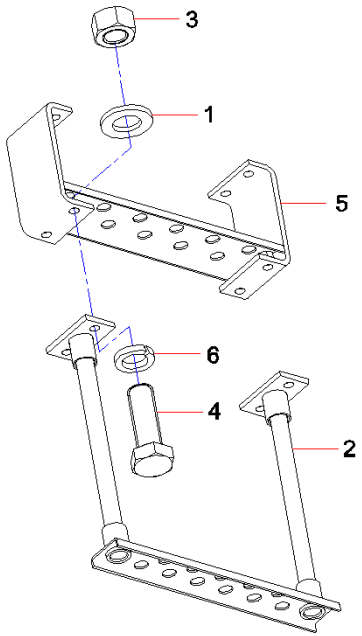
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12361875	Rubber backup plate of battery	1	
2	12925038	Bar, supporting	1	
3	A210401000002	Washer	6	
4	A210307000001	Nut	6	
5	12684045	Baffle	1	
6	60016013	Handle	1	
7	60111951	Buckle,heavy duty	2	
8	A210401000001	Washer	8	
9	12361874	Rubber backup plate of battery	1	
10	12361886	Tank cover	1	
11	11696499	Hinge	2	
12	12361884	Battery body assy.	1	
13	12925039	Mounting seat	1	
14	A210307000012	Nut	8	
15	A210401000017	Washer	4	
16	A210111000197	Bolt	8	
17	A210111000343	Bolt	8	
18	12361890	Plate assemble	1	
19	A210405000011	Washer	8	
20	24000633	Washer	12	
21	12684048	Baffle	1	
22	A210111000323	Bolt	4	


4
3
23
18
6
10
20
15
22
9
13
16
8
19
1
21
17
20
11
14
5
23
24
2
23
24
7
12

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	A210405000001	Washer	8	
24	A210491000016	Pin	2	


3
1
5
6
4
2

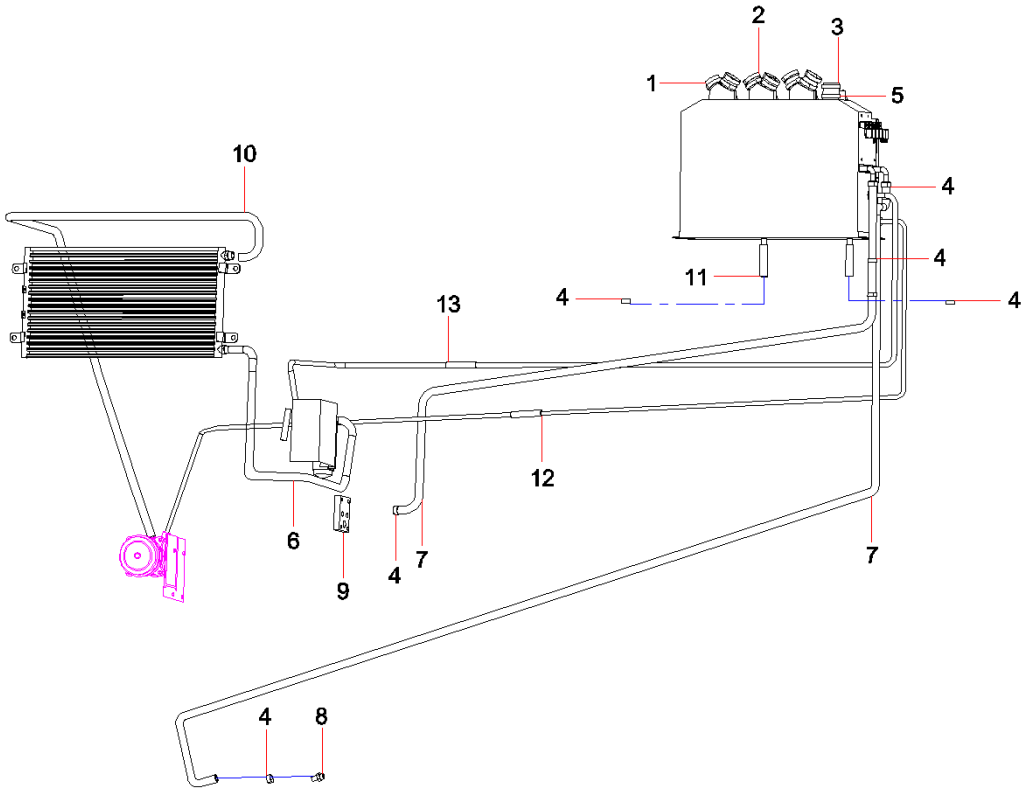
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210405000001	Washer	4	
2	11628506	Underlayer step	1	
3	A210307000001	Nut	4	
4	24000300	Bolt	4	
5	11628502	Upper step	1	
6	A210401000002	Washer	4	

https://truckmanualshub.com/

https://truckmanualshub.com/

Group 21
Air–conditioner pipeline installation


2
3
1
5
10
4
4
11
4
4
13
12
6
9
4
7
7
4
8

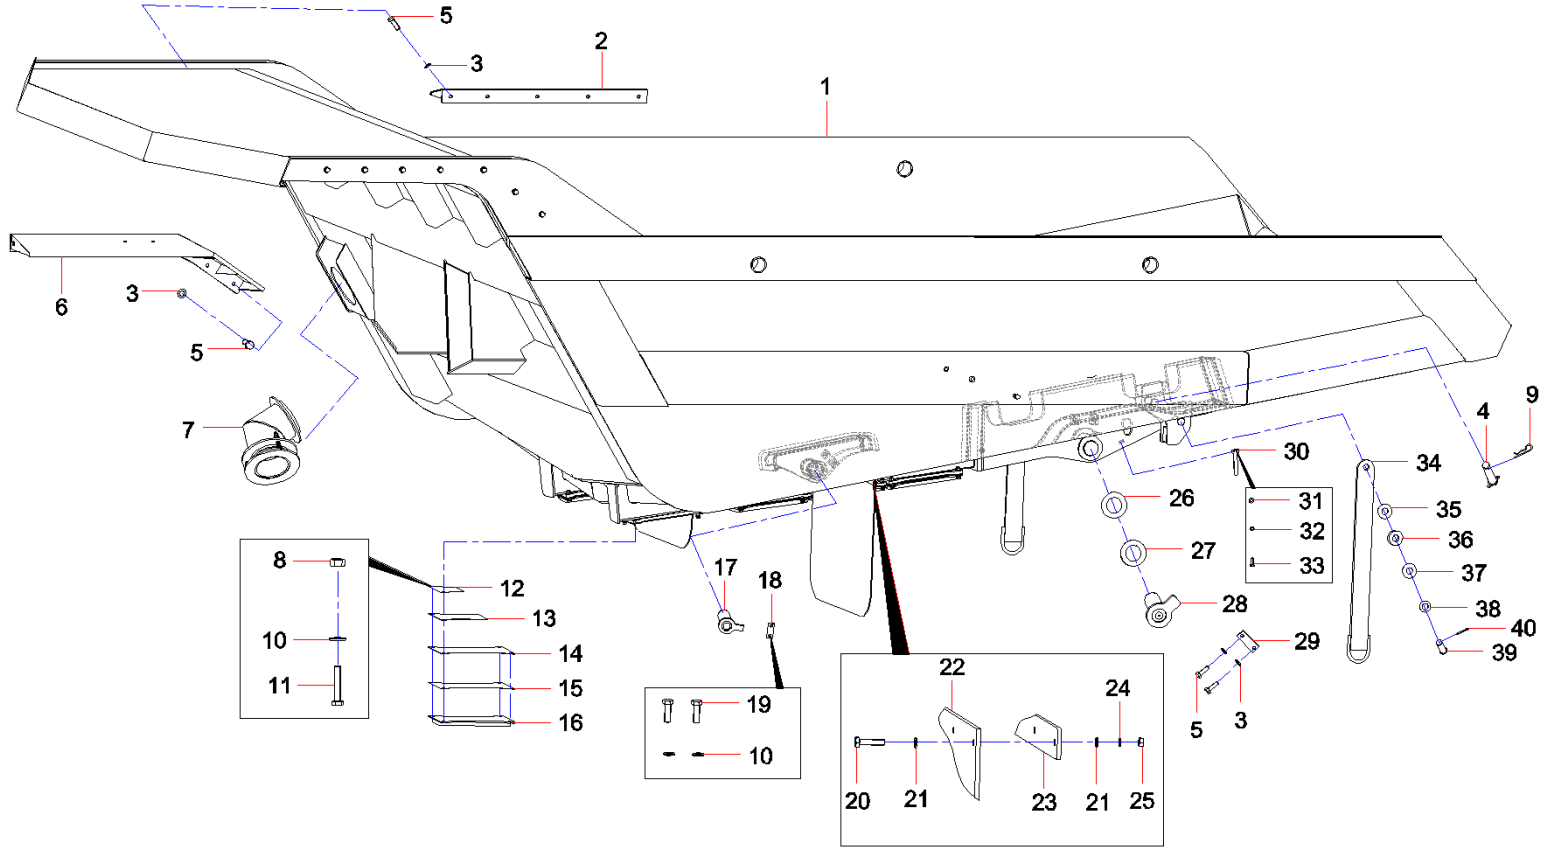
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A229900009098	Air pipe	2	
2	A229900007800	Air pipe	4	
3	21022629	Air pipe	1	
4	12119862	Thimble	6	
5	12119859	Thimble	14	
6	60084134	Cold–reserving rubber hose component	1	
7	A230103001216	Hot water pipe	2	
8	11613578	Connector	1	
9	11613579	Connector	1	
10	60084136	Pressure–cooling rubber hose component	1	
11	A229900009099	Water diversion hose	2	
12	60084138	Steam–pressure host component	1	
13	60084140	Reserving–steaming hose component	1	

https://truckmanualshub.com/

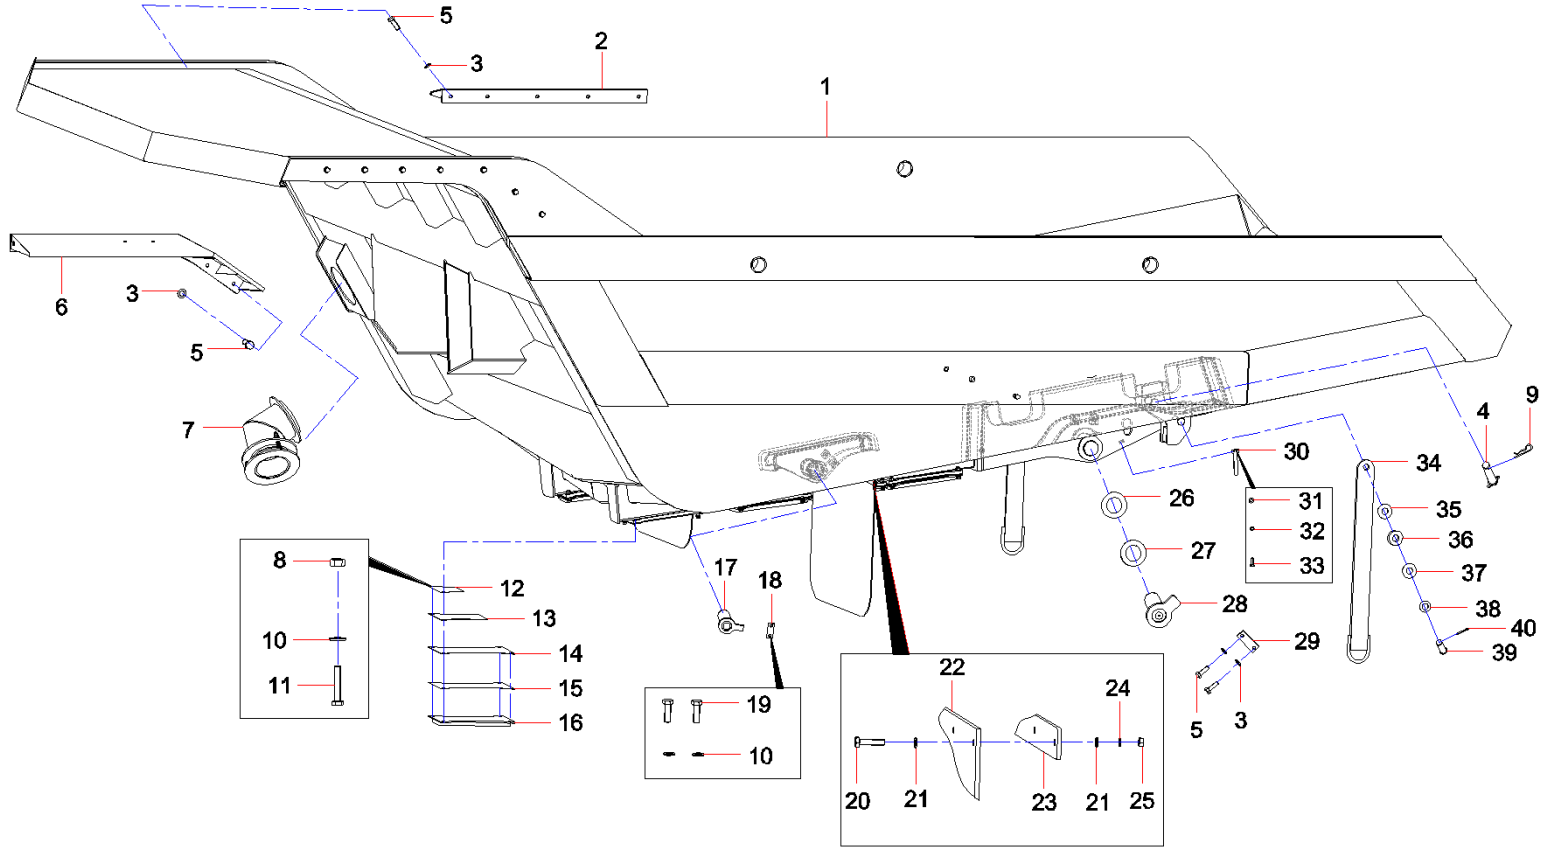
https://truckmanualshub.com/

Group 22
Body and mounting


5
3
2
1
6
3
5
7
4
9
30
34
26
31
32
33
35
36
27
37
38
40
28
39
29
8
12
13
14
15
16
10
11
17
18
19
10
22
24
5
3
20
21
23
21
25

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12953081	Body	1	
2	12953133	Right front guard	1	
3	A210491000132	Washer	16	
4	11949185	Safety pin	2	
5	A210111000221	Bolt	16	
6	12953112	Left front guard	1	
7	12953151	Exhaust device	1	
8	A210307000028	Nut	32	
9	11037300	Cross pin	2	
10	A210491000118	Washer	68	
11	A210110000324	Bolt	32	
12	12953145	Shim	8	
13	12953147	Shim	8	
16	12953090	Damping pad	8	
17	12953126	Brace piece axial pin	2	
18	11946741	Plate	2	
19	A210111000053	Bolt M16×40GB5783 Grade 10.9	4	
20	21005186	Bolt M10×40GB5783 Grade 10.9	12	
21	24000637	Washer	12	
22	12953140	Rubber splashboard	2	
23	12953141	Plate	2	
24	24000512	Washer 10GB93	12	


5
3
2
1
6
3
5
7
4
9
30
34
26
31
32
33
35
36
27
37
38
40
28
39
29
8
12
13
10
14
11
15
16
17
18
19
10
22
24
5
3
20
21
23
21
25

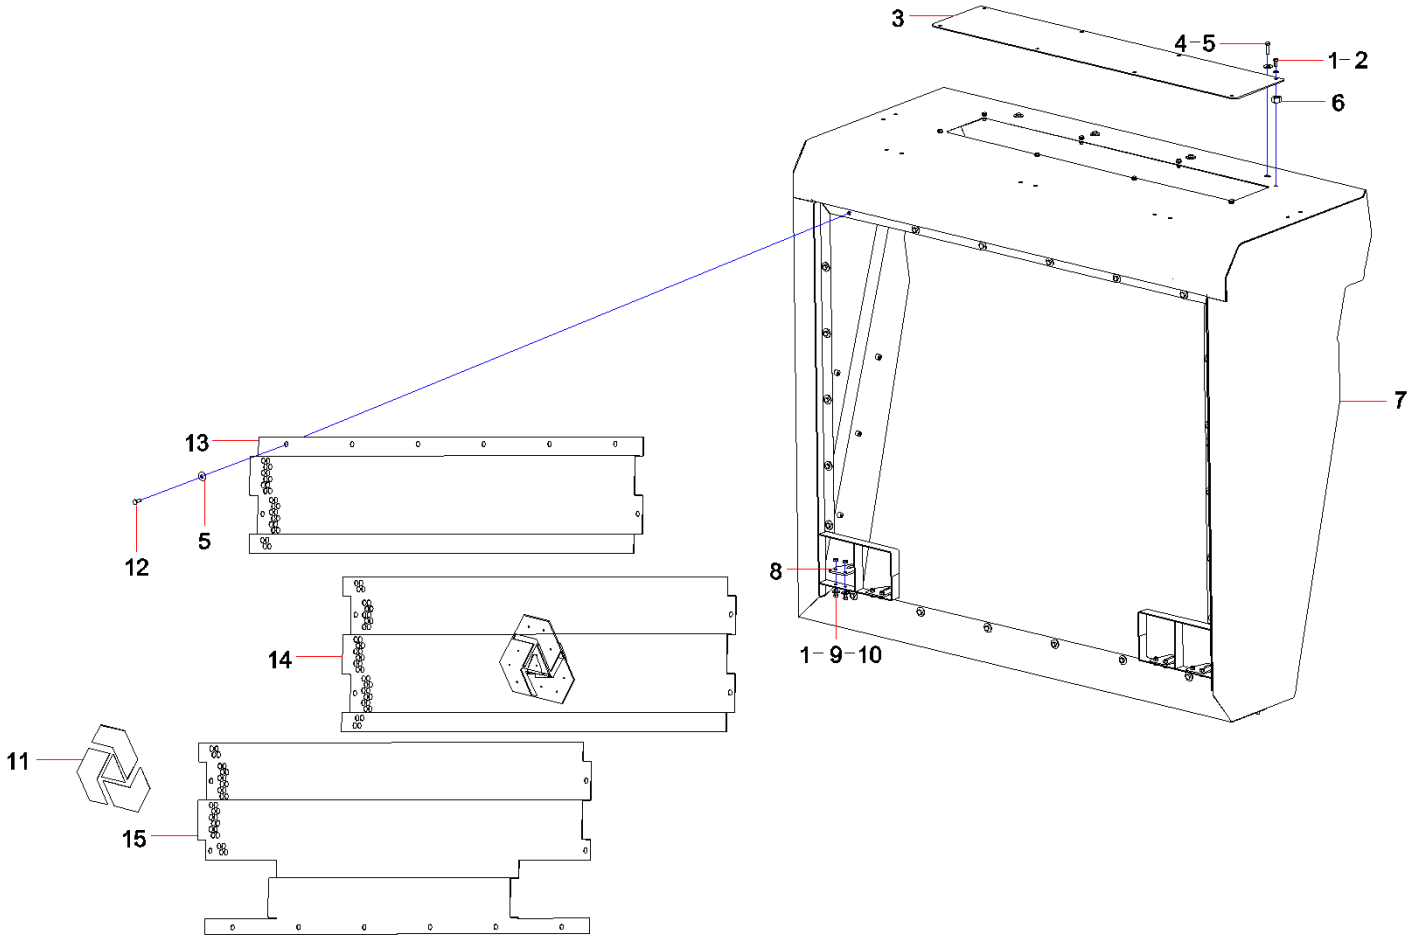
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
25	A210307000036	Nut	12	
26	12953144	Shim	4	
27	12953146	Shim	24	
28	12953139	Brace piece axial pin	2	
29	12953143	Plate	2	
30	12953142	Mounting plate	1	
31	24000633	Washer	2	
32	A210401000017	Washer	2	
33	A210111000342	Bolt M8 × 16GB5783 10.9 grade	2	
34	12953123	Bar	2	
35	11037296	Shim	6	
36	11037297	Shim	4	
37	11037298	Shim	6	
38	A210406000003	Washer 42(GB97.1)	2	
39	A210491000027	Pin	2	
40	11037304	Shaft	2	

https://truckmanualshub.com/

https://truckmanualshub.com/

Group 23
Radiator guard assembly


3
4-5
1-2
6
7
13
5
12
8
1-9-10
14
11
15

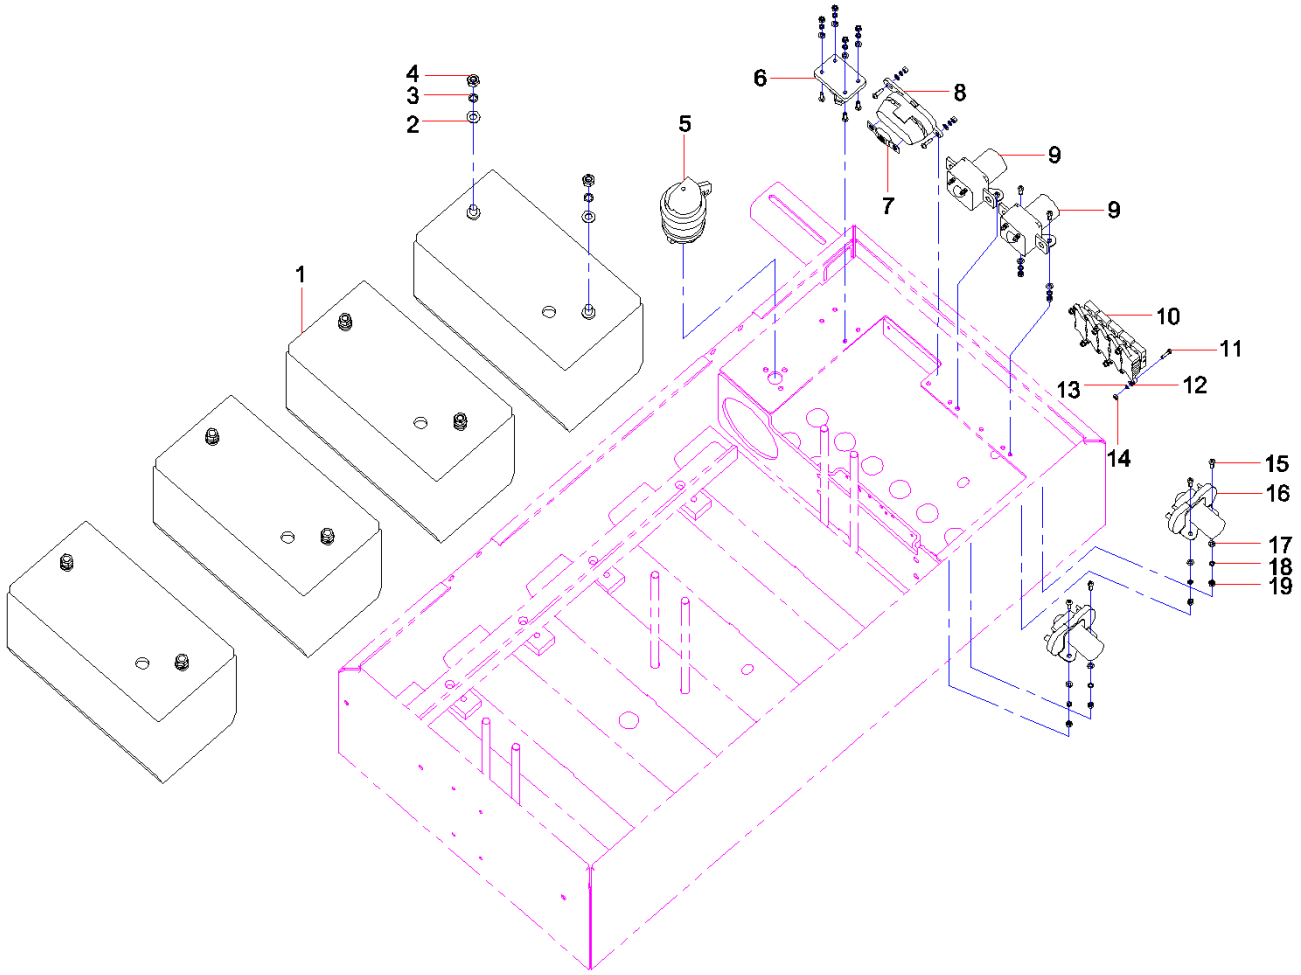
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000197	Bolt	16	
2	24000637	Washer	8	
3	12950840	Sealing plate	1	
4	A210111000204	Bolt	4	
5	60060548	Washer 12GB96.1	33	
6	A210307000031	Nut	4	
7	12950850	Hood frame	1	
8	13068126	Web plate	4	
9	A210307000036	Nut	8	
10	60060546	Washer 10GB96.1	8	
11	12336895	Company logosrt	1	
12	A210111000101	Bolt	29	
13	13248530	Radiating mesh SRT95C.360.6	1	
14	13248524	Radiating mesh SRT95C.360.4	1	
15	13248527	Radiating mesh SRT95C.360.5	1	

https://truckmanualshub.com/

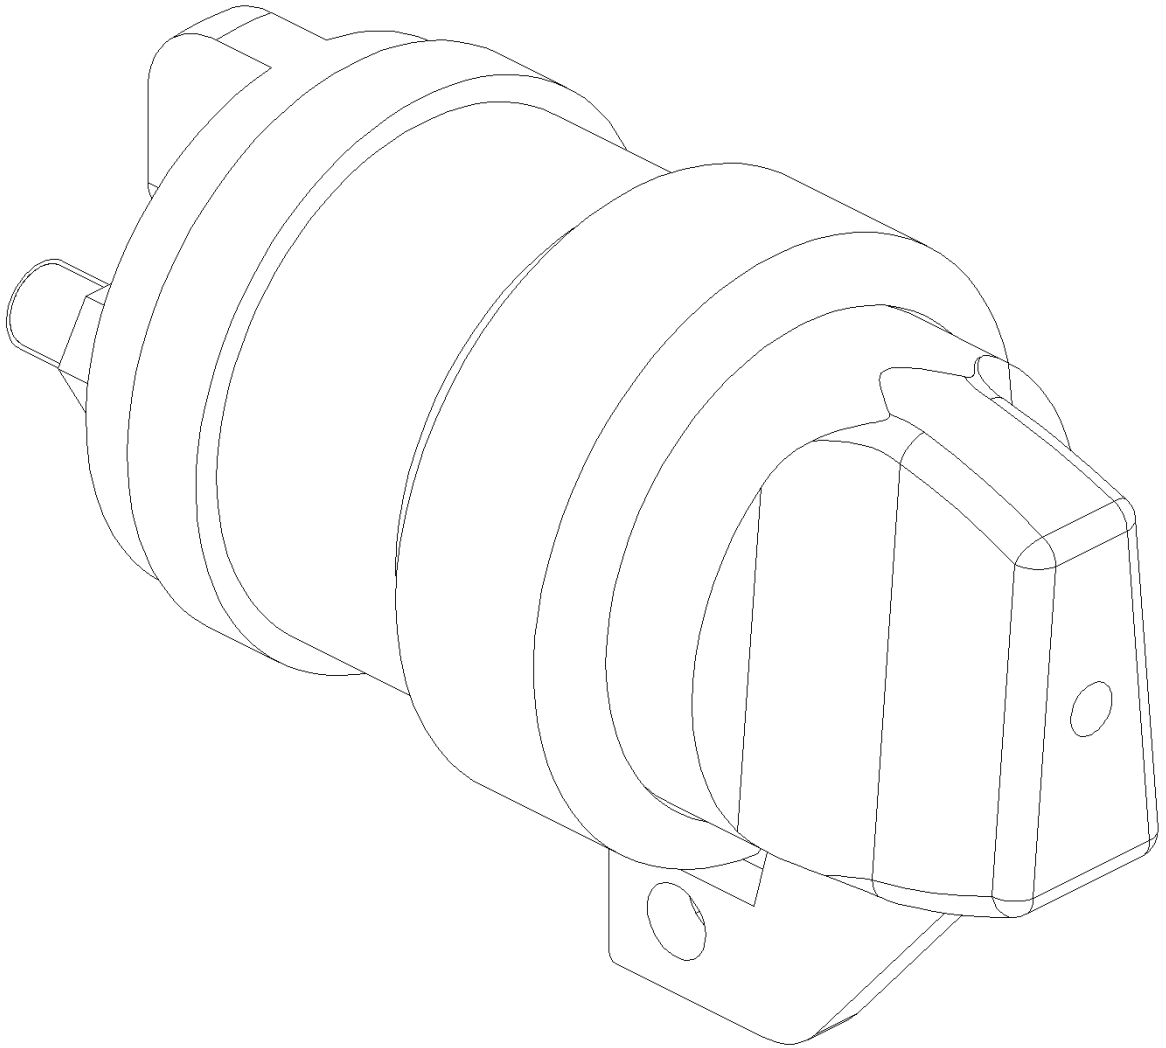
https://truckmanualshub.com/

Group 24
Battery installation


4
3
2
5
6
8
7
9
9
1
10
11
13
12
14
15
16
17
18
19

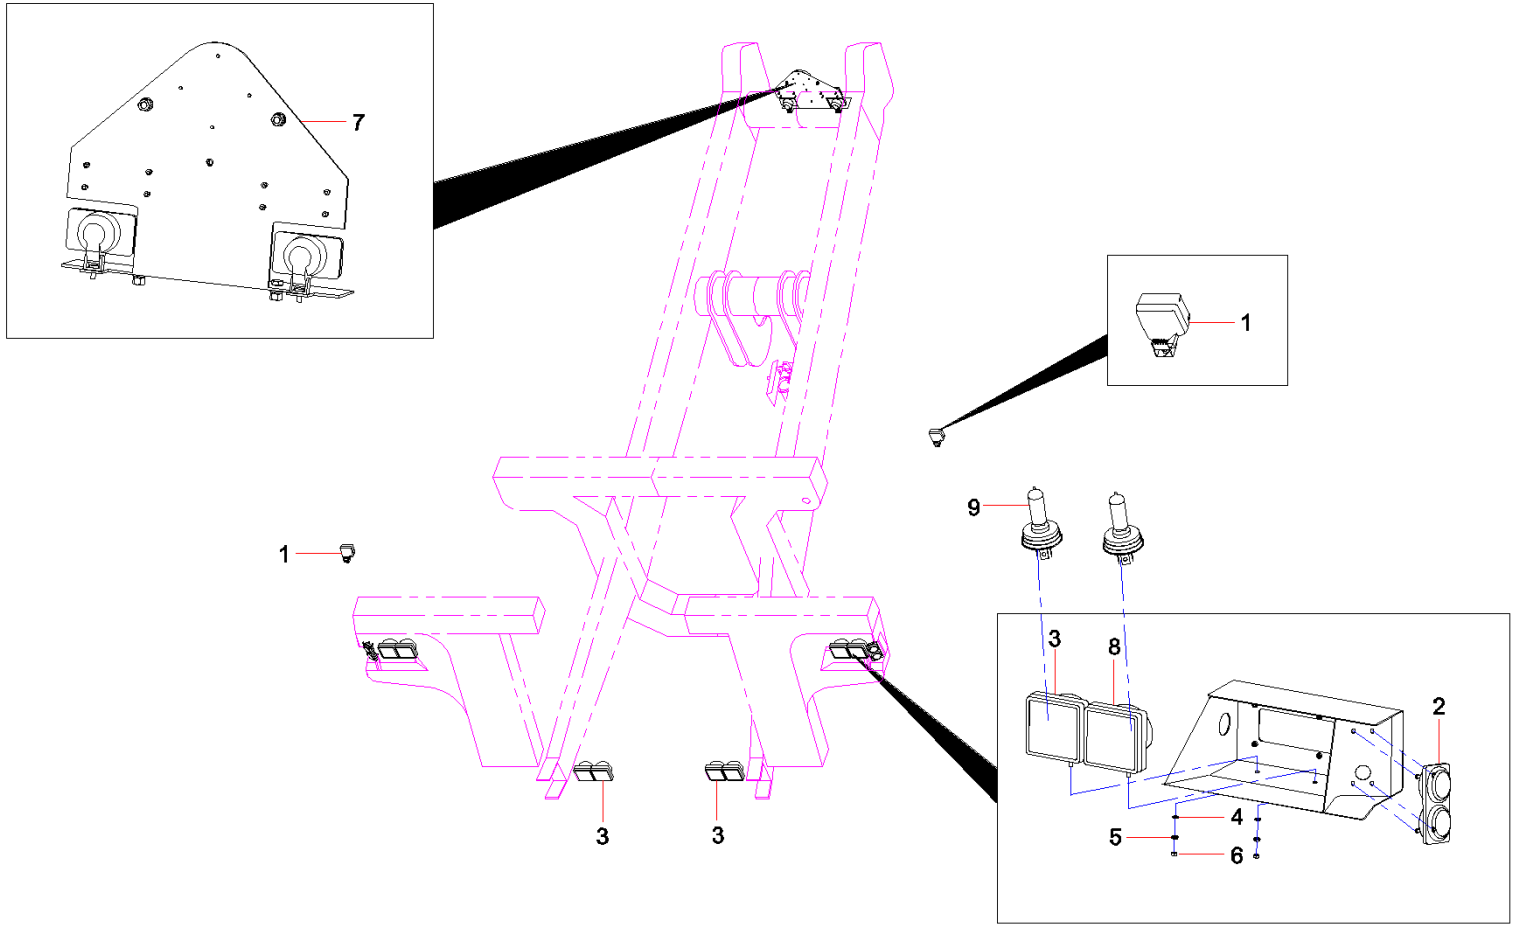
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A242200000057	Battery	4	
2	24000637	Washer	8	
3	24000512	Washer 10GB93	8	
4	A210307000036	Nut	8	
5	60125384	Push–Button Switch	1	
6	60155462	Stud type connecting fitting	1	
7	60219873	Fuse	1	
8	60120965	Fuse–base	1	
9	60190151	DC contactor	2	
10	60147575	Fuse–base	1	
11	A210210000023	Screw	6	
12	A210405000004	Washer	6	
13	A210401000013	Washer	6	
14	A210307000014	Nut	6	
15	A210210000002	Screw	12	
16	60190150	DC contactor	2	
17	A210405000005	Washer	12	
18	A210401000015	Washer	12	
19	A210307000015	Nut	12	



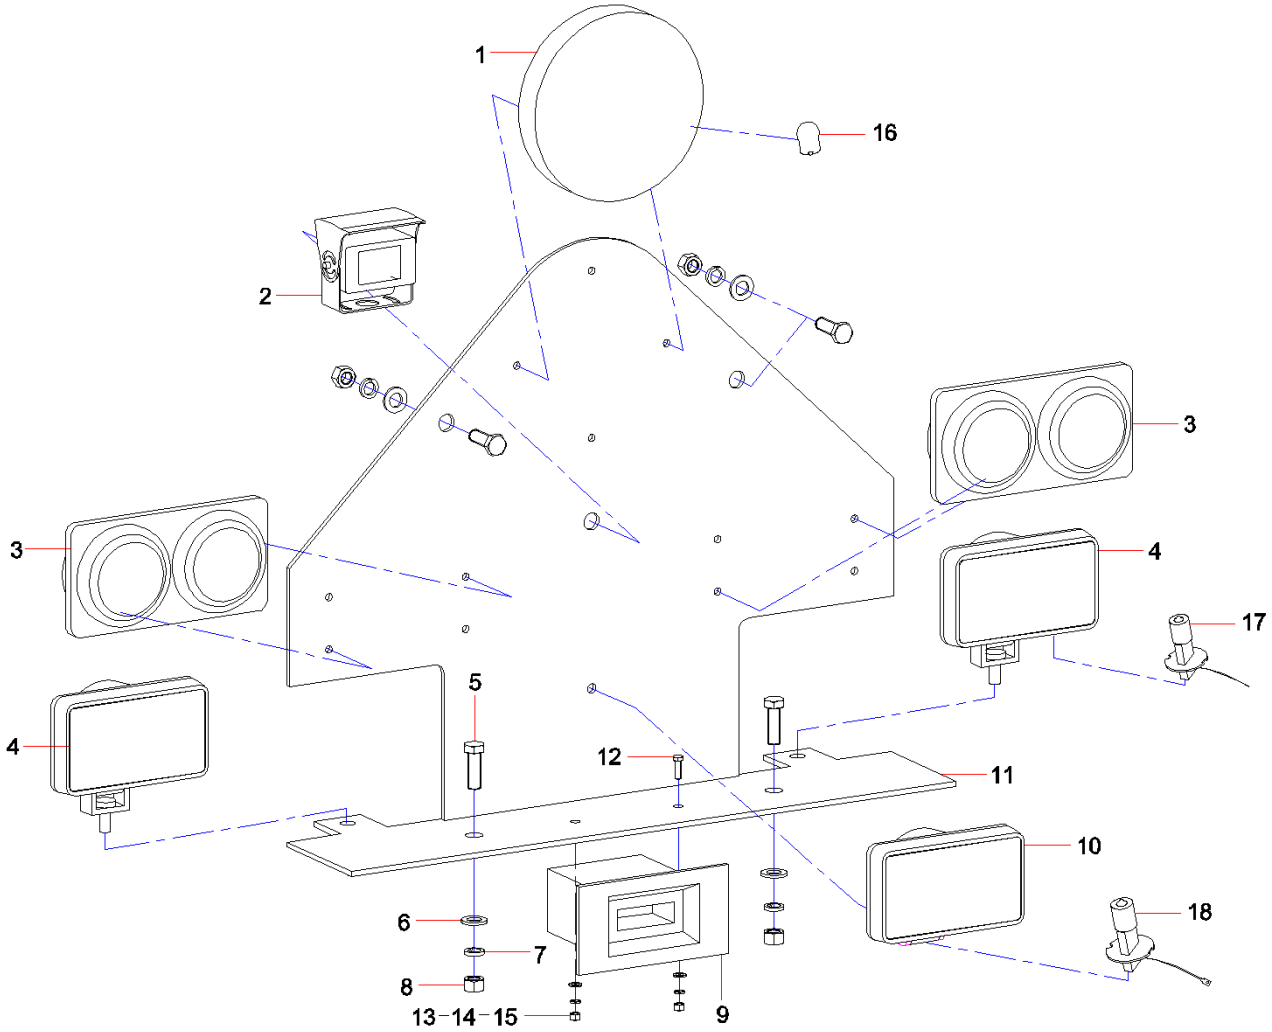
https://truckmanualshub.com/

Group 25
Illuminating lamp installation


7
1
1
9
3
8
2
4
5
6
3
3

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B241100000421	Working lamp	2	
2	A241100000649	Combination type front steering light assembly	2	
3	A241100000648	Front headlight assembly	6	
4	24000637	Washer	8	
5	24000512	Washer 10GB93	8	
6	24000868	Nut M10GB6170 Dacroment	8	
7	10252432	alarm system of tail lamp light	1	
8	60006212	Foglight	2	
9	A241100000053	Bulb	8	


1
16
2
3
3
4
17
5
4
12
11
10
18
6
7
8
13
14
15
9

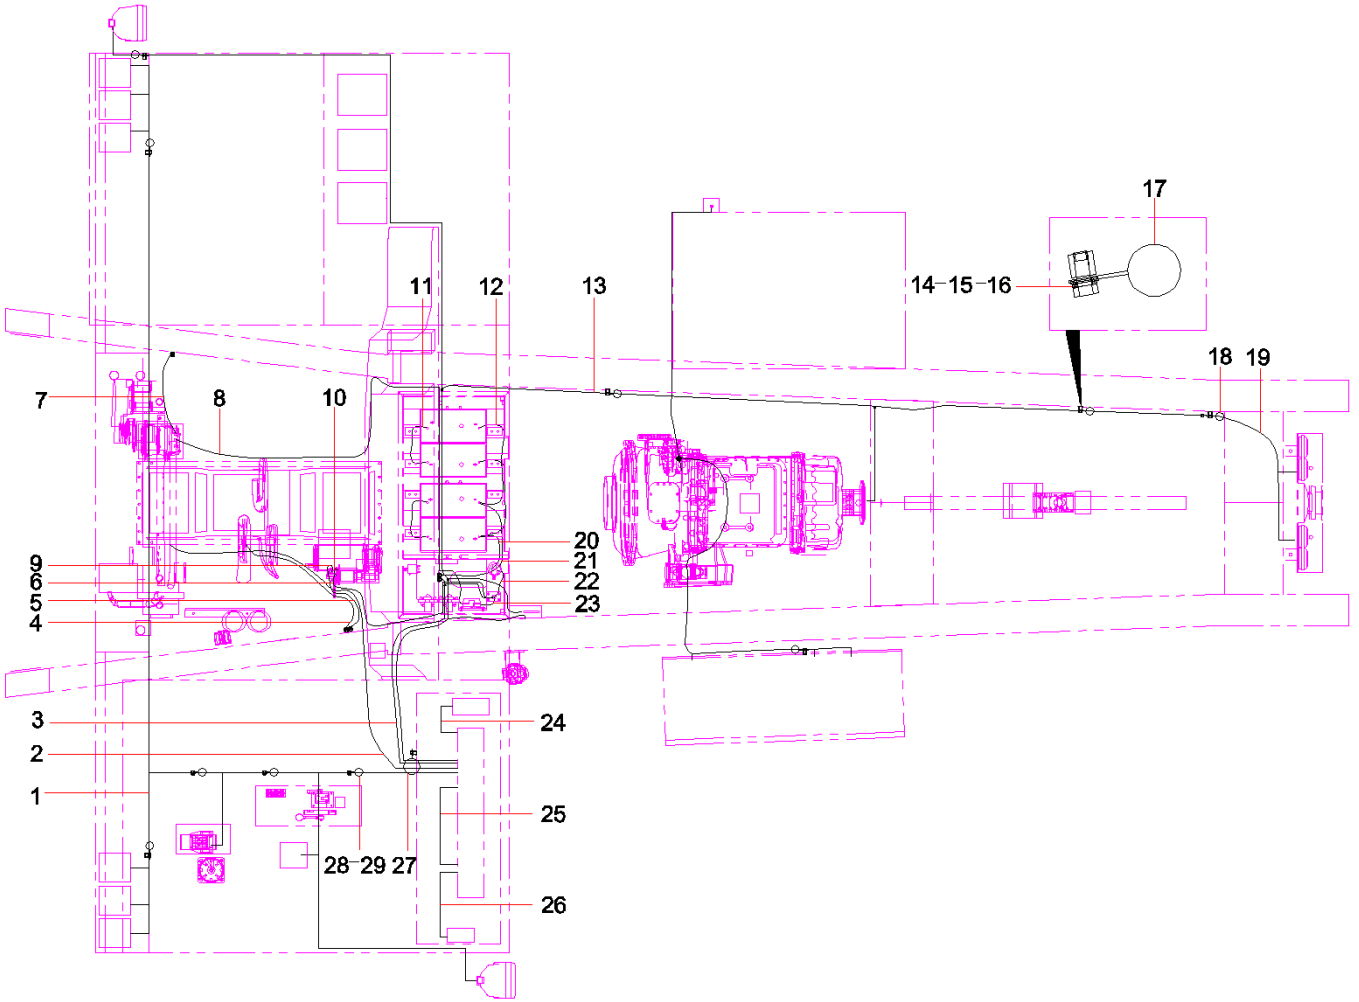
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A241100000647	Retarding lamp	1	
2	A249900001543	CameraCM11B	1	
3	A241100000650	Combination type rear steering light assembly	2	
4	A241100000646	Anti–fogging lamp	2	
5	A210111000203	Bolt	4	
6	A210405000001	Washer	4	
7	24000513	Washer 12GB93 DACROMET	4	
8	A210307000031	Nut	4	
9	B241100000413	Siren (intelligent)	1	
10	A241100000645	Reversing lamp assembly	1	
11	A229900009173	Installation assembly of tail light support	1	
12	A210111000323	Bolt	4	
13	A210401000017	Washer	7	
14	A210307000055	Nut M8GB6170 Grade 10	7	
15	24000633	Washer	7	
16	60013930	Bulb	1	
17	21011354	Bulb	1	
18	21011354	Bulb	1	

https://truckmanualshub.com/

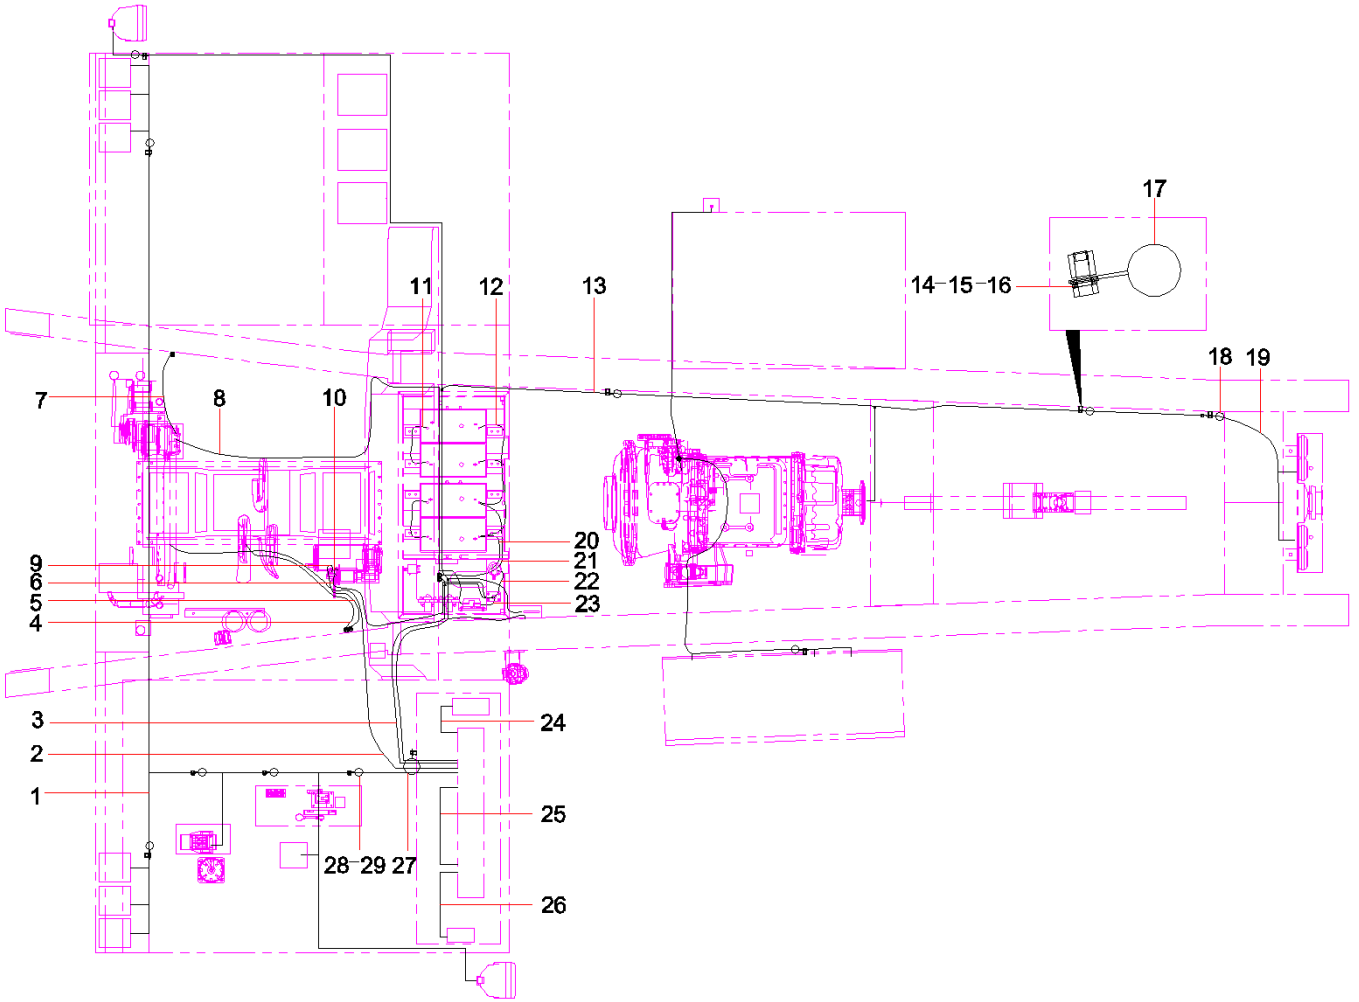
https://truckmanualshub.com/

Group 26
Cable and harness


17
11
12
13
14-15-16
18
19
7
8
10
20
21
22
23
9
6
5
4
3
2
1
24
25
28-29
27
26

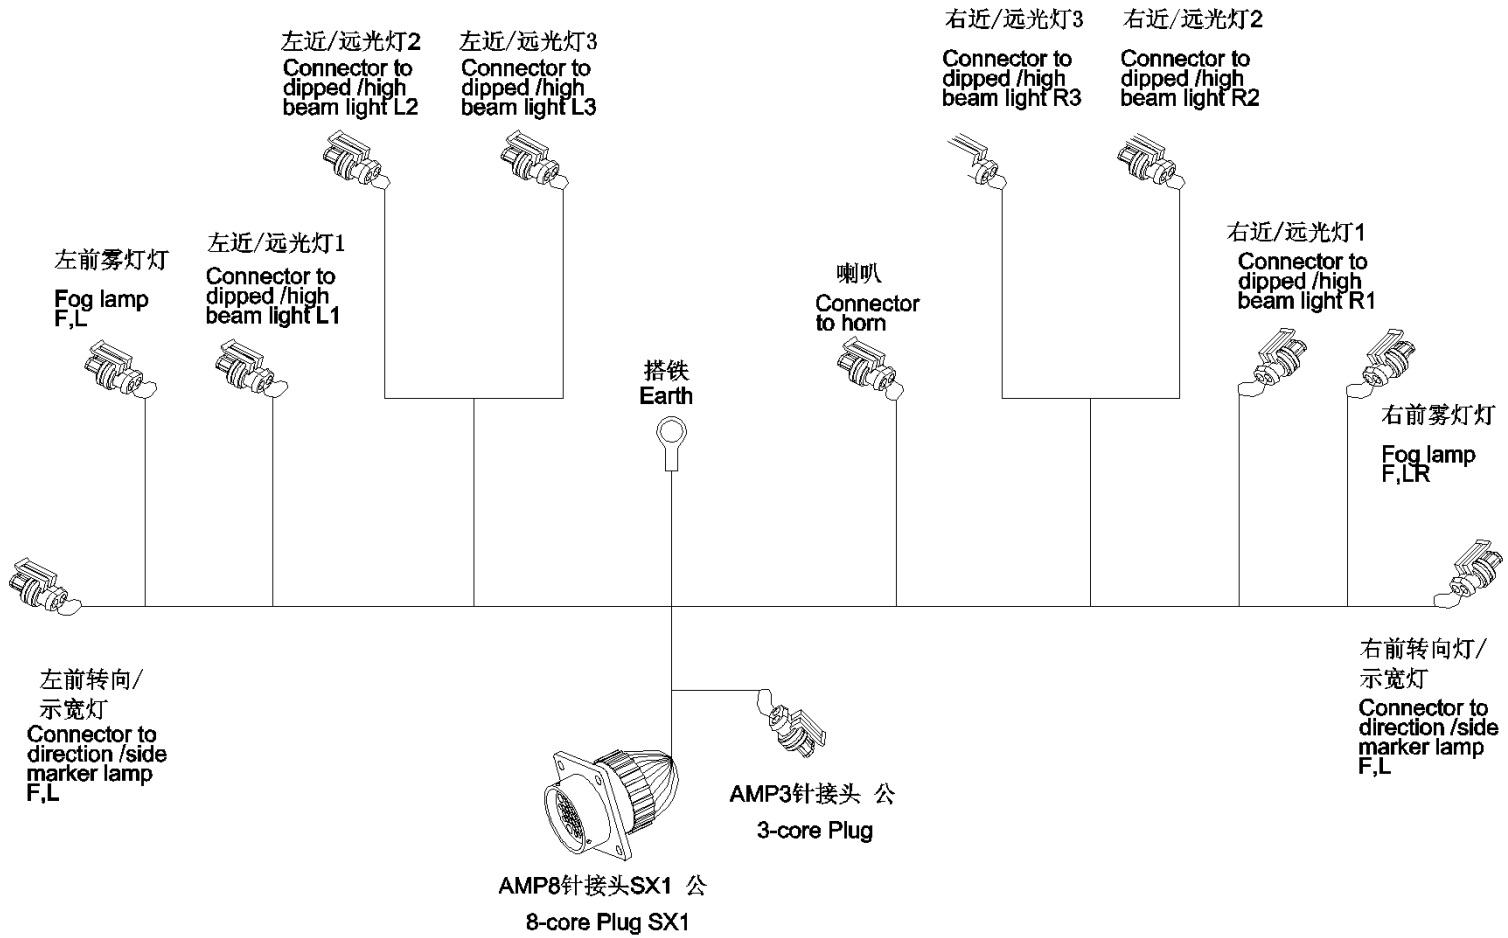
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12927060	Headlamp harness	1	
2	12927063	Engine ECU harness	1	
3	12927064	Starter relay power harness	1	
4	12927059	Engine earthing cable	1	
5	12927054	Starter motor earthing cable	1	
6	12927053	Starter motor power cable	1	
7	12927058	Generator earthing cable	1	
8	12927062	Fuse to generator cable	1	
9	12927056	Starter motor parallel earthing cable	1	
10	12927055	Starter motor positive parallel cable	1	
11	12927050	Battery serial cable	2	
12	12927051	Battery parallel cable	2	
13	12927049	Vehicle body harness	1	
14	24000632	Washer	80	
15	60060564	Washer	80	
16	A210204000130	Screw	80	
17	A229900006641	Pipe nip	20	
18	60016761	Pipe clamp	20	
19	12927061	Tail lamp harness	1	
20	12927052	Battery to main switch cable	1	
21	12927067	Battery negative earthing cable	1	
22	12927065	Branch cable	1	

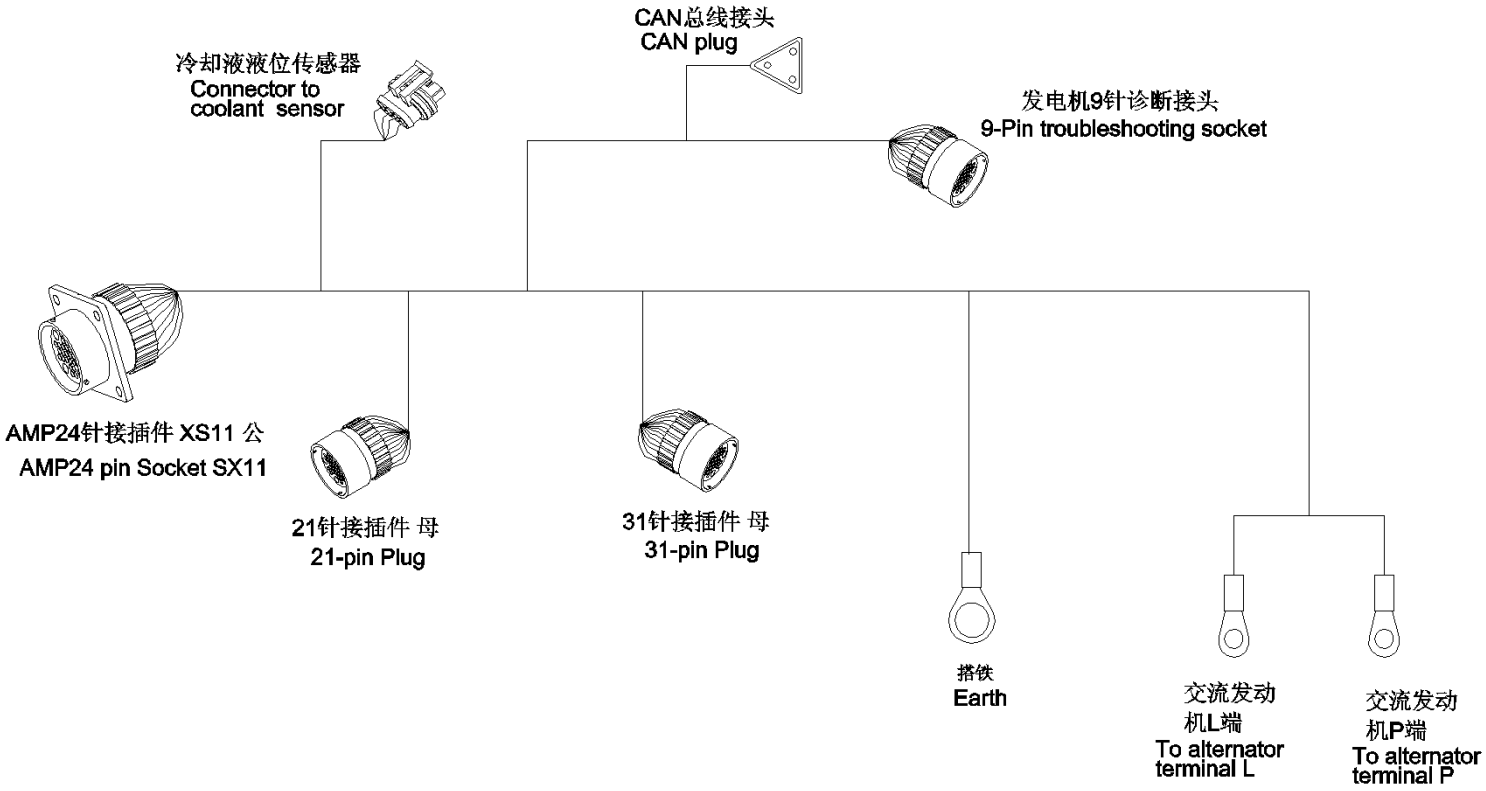

17
11
12
13
14-15-16
18
19
7
8
10
20
21
22
23
9
6
5
4
3
2
1
24
25
28-29
27
26

https://truckmanualshub.com/

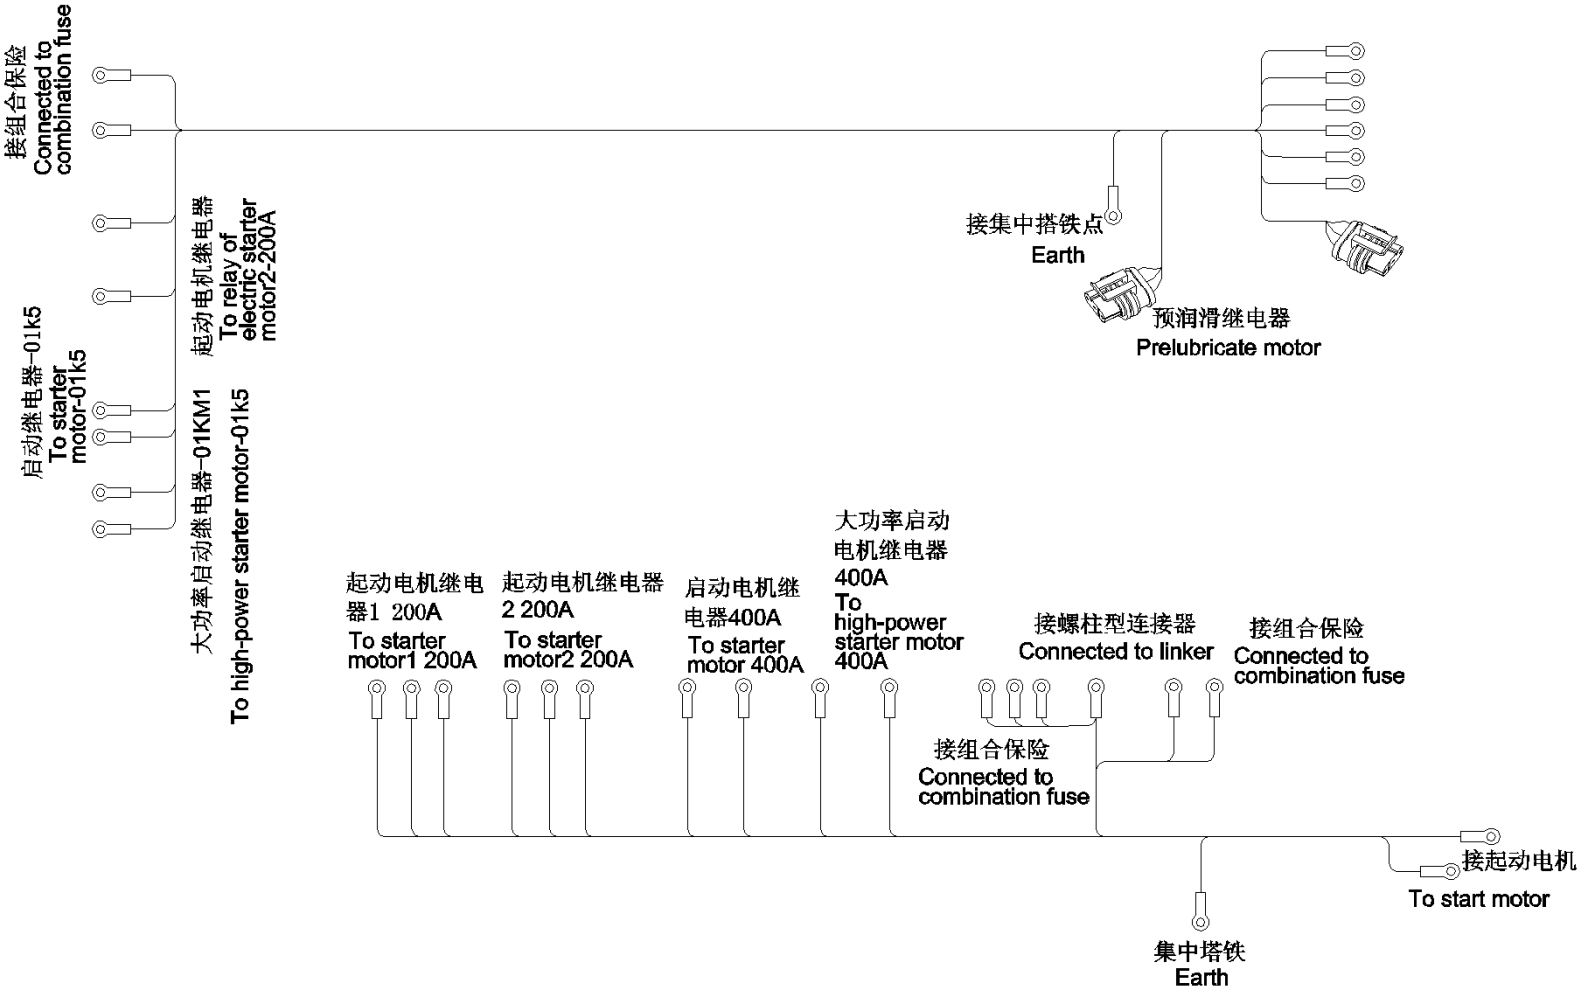
Item No.	Part No.	Description	Qty.	Remark
23	12927057	Main switch to fuse cable	1	
24	12942629	32 Core Round Plug harness	1	
25	12927066	Can bus harness	1	
26	12942615	GPS harness	1	
27	A229900006640	Clamp	20	
28	60016763	Clamp	18	
29	A229900006639	Tube clamp	18	


左近/远光灯2
Connector to dipped /high beam light L2
左近/远光灯3
Connector to dipped /high beam light L3
右近/远光灯3
Connector to dipped /high beam light R3
右近/远光灯2
Connector to dipped /high beam light R2
左前雾灯灯
Fog lamp F,L
左近/远光灯1
Connector to dipped /high beam light L1
喇叭
Connector to horn
右近/远光灯1
Connector to dipped /high beam light R1
搭铁
Earth
右前雾灯灯
Fog lamp F,LR
左前转向/示宽灯
Connector to direction /side marker lamp F,L
右前转向灯/示宽灯
Connector to direction /side marker lamp F,L
AMP3针接头 公
3-core Plug
AMP8针接头SX1 公
8-core Plug SX1

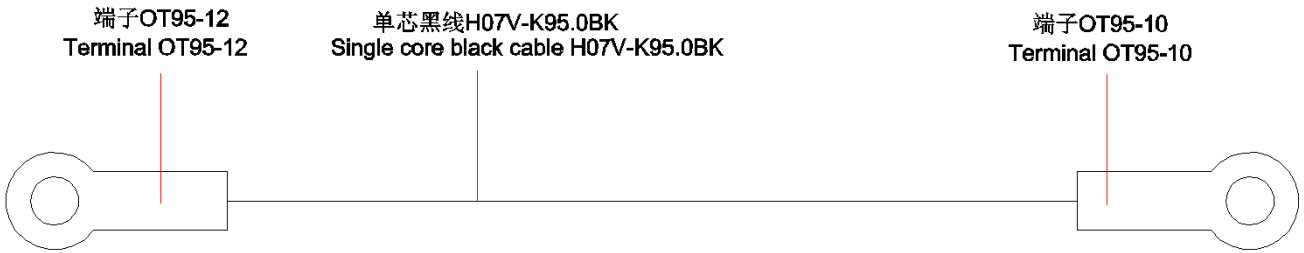
https://truckmanualshub.com/


CAN总线接头
CAN plug
冷却液液位传感器
Connector to
coolant sensor
发电机9针诊断接头
9-Pin troubleshooting socket
AMP24针接插件 XS11 公
AMP24 pin Socket SX11
21针接插件 母
21-pin Plug
31针接插件 母
31-pin Plug
搭铁
Earth
交流发动
机L端
To alternator
terminal L
交流发动
机P端
To alternator
terminal P

https://truckmanualshub.com/


接组合保险
Connected to combination fuse
启动继电器-01k5
To starter motor-01k5
起动电机继电器
To relay of electric starter motor2-200A
大功率启动继电器-01KM1
To high-power starter motor-01k5
接集中搭铁点
Earth
预润滑继电器
Prelubricate motor
起动电机继电器1 200A
To starter motor1 200A
起动电机继电器2 200A
To starter motor2 200A
启动电机继电器400A
To starter motor 400A
大功率启动电机继电器400A
To high-power starter motor 400A
接螺柱型连接器
Connected to linker
接组合保险
Connected to combination fuse
接组合保险
Connected to combination fuse
接起动电机
To start motor
集中塔铁
Earth

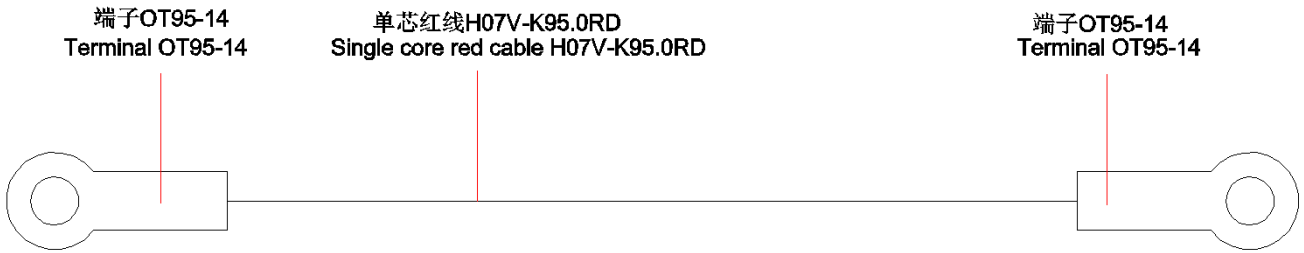
https://truckmanualshub.com/


端子OT95-12
Terminal OT95-12
单芯黑线H07V-K95.0BK
Single core black cable H07V-K95.0BK
端子OT95-10
Terminal OT95-10

https://truckmanualshub.com/


端子OT95-14
Terminal OT95-14
单芯黑线H07V-K95.0BK
Single core black cable H07V-K95.0BK
端子OT95-10
Terminal OT95-10

https://truckmanualshub.com/


端子OT95-14
Terminal OT95-14
单芯红线H07V-K95.0RD
Single core red cable H07V-K95.0RD
端子OT95-14
Terminal OT95-14

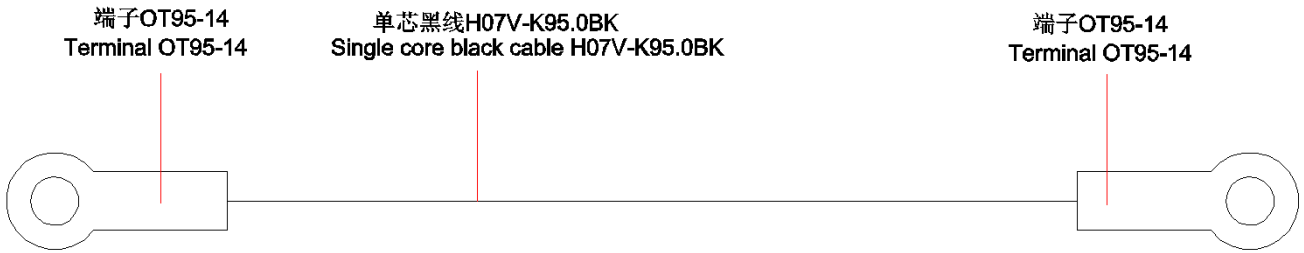
https://truckmanualshub.com/


端子OT95-8
Terminal OT95-8
单芯黑线H07V-K95.0BK
Single core black cable H07V-K95.0BK
端子OT95-10
Terminal OT95-10

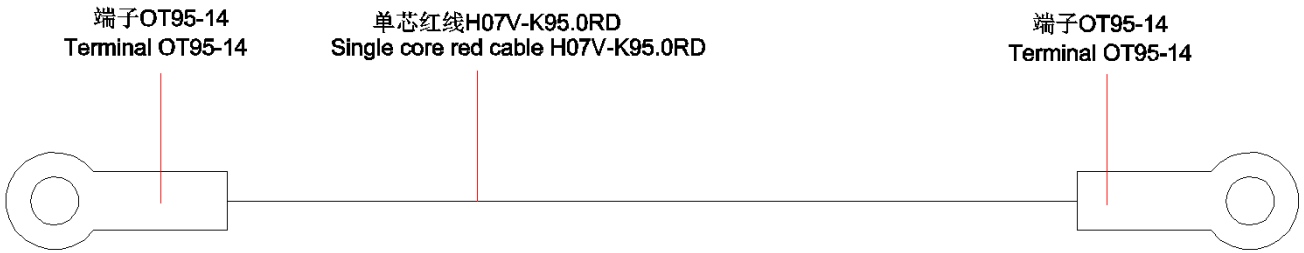
https://truckmanualshub.com/


端子OT25-6
Terminal OT25-6
单芯红线H07V-K25.0RD
Single core red cable 25.0RD
端子OT25-8
Terminal OT25-8

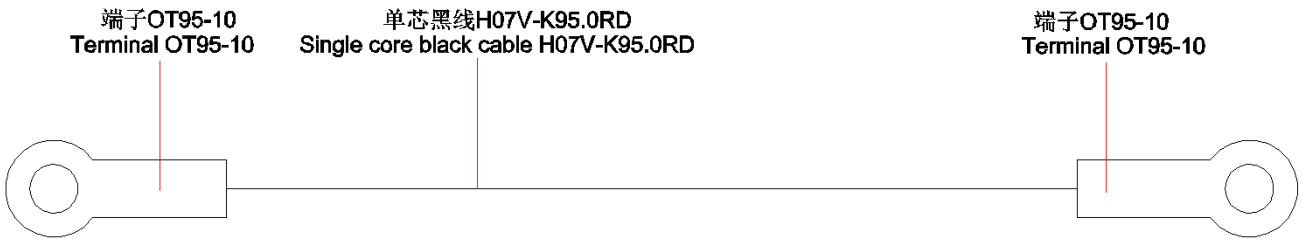
https://truckmanualshub.com/


端子OT95-14
Terminal OT95-14
单芯黑线H07V-K95.0BK
Single core black cable H07V-K95.0BK
端子OT95-14
Terminal OT95-14

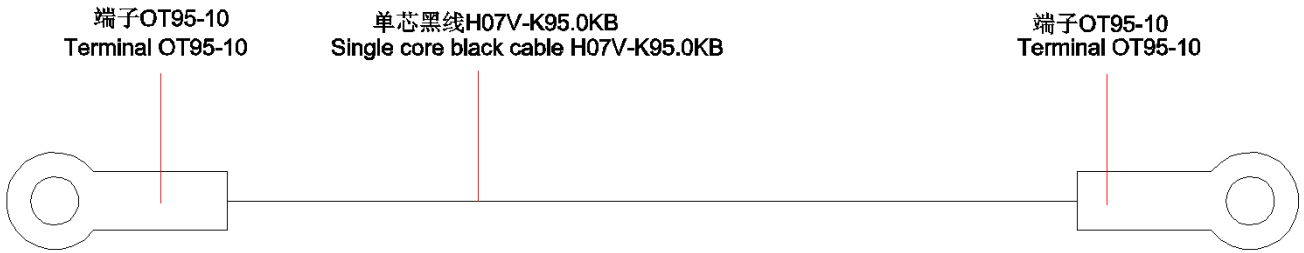
https://truckmanualshub.com/


端子OT95-14
Terminal OT95-14
单芯红线H07V-K95.0RD
Single core red cable H07V-K95.0RD
端子OT95-14
Terminal OT95-14

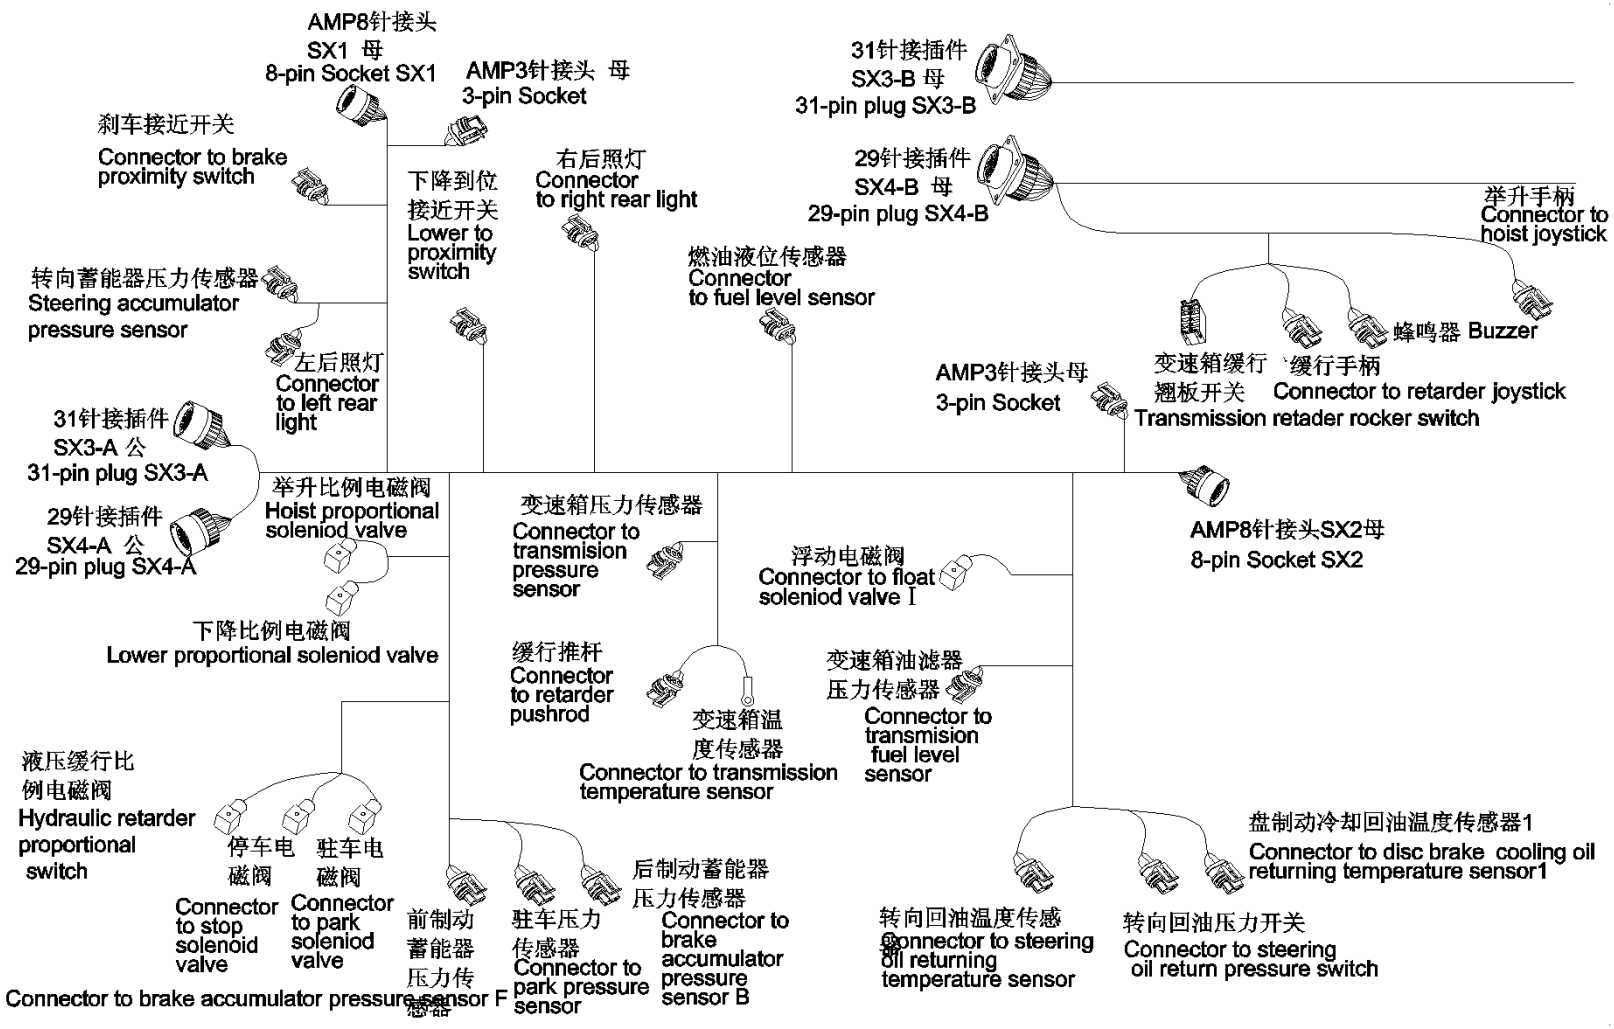
https://truckmanualshub.com/


端子OT95-10
Terminal OT95-10
单芯黑线H07V-K95.0RD
Single core black cable H07V-K95.0RD
端子OT95-10
Terminal OT95-10

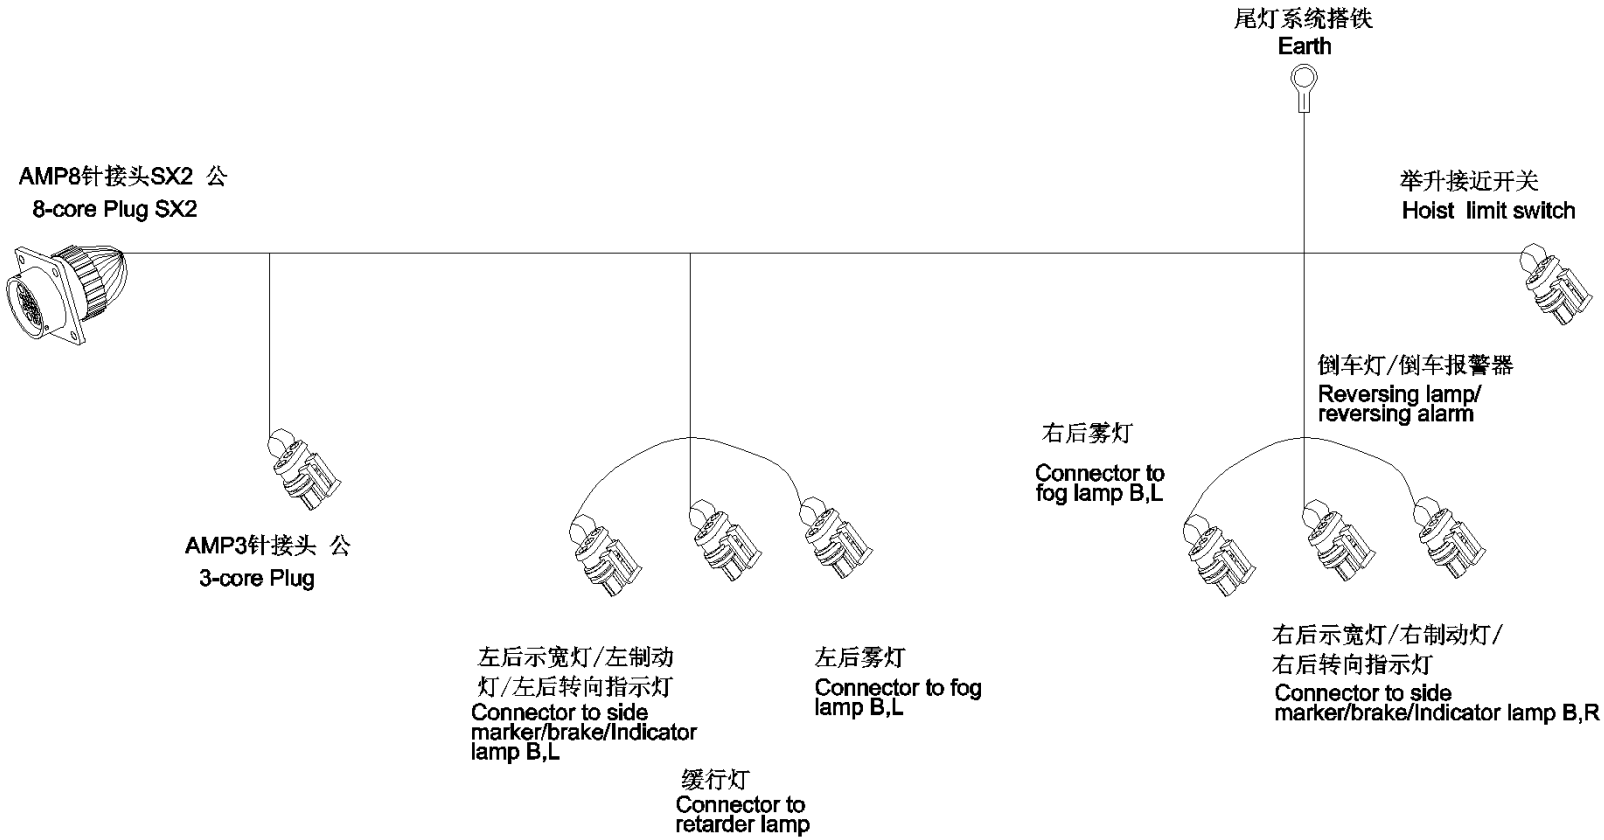
https://truckmanualshub.com/


端子OT95-10
Terminal OT95-10
单芯黑线H07V-K95.0KB
Single core black cable H07V-K95.0KB
端子OT95-10
Terminal OT95-10

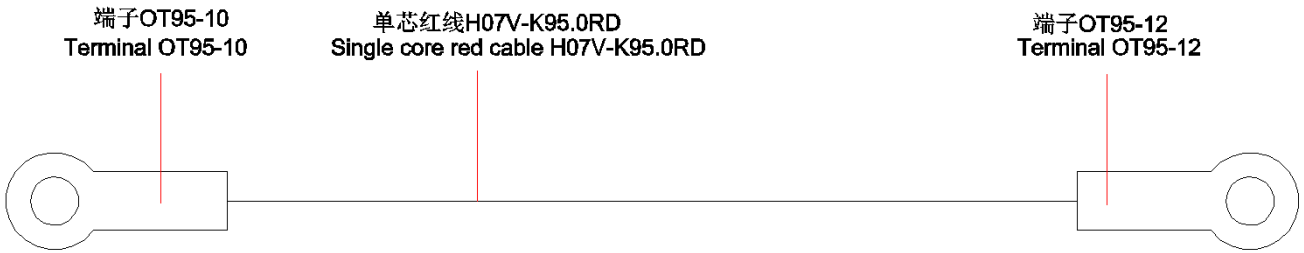
https://truckmanualshub.com/


AMP8针接头
SX1 母
8-pin Socket SX1
AMP3针接头 母
3-pin Socket
31针接插件
SX3-B 母
31-pin plug SX3-B
刹车接近开关
Connector to brake proximity switch
下降到位
接近开关
Lower to proximity switch
右后照灯
Connector to right rear light
29针接插件
SX4-B 母
29-pin plug SX4-B
举升手柄
Connector to hoist joystick
转向蓄能器压力传感器
Steering accumulator pressure sensor
燃油液位传感器
Connector to fuel level sensor
蜂鸣器 Buzzer
左后照灯
Connector to left rear light
AMP3针接头母
3-pin Socket
变速箱缓行
翘板开关
缓行手柄
Connector to retarder joystick
Transmission retader rocker switch
31针接插件
SX3-A 公
31-pin plug SX3-A
举升比例电磁阀
Hoist proportional soleniod valve
变速箱压力传感器
Connector to transmision pressure sensor
AMP8针接头SX2母
8-pin Socket SX2
29针接插件
SX4-A 公
29-pin plug SX4-A
浮动电磁阀
Connector to float soleniod valve I
下降比例电磁阀
Lower proportional soleniod valve
缓行推杆
Connector to retarder pushrod
变速箱油滤器
压力传感器
Connector to transmision fuel level sensor
变速箱温
度传感器
Connector to transmission temperature sensor
液压缓行比
例电磁阀
Hydraulic retarder proportional switch
停车电
磁阀
驻车电
磁阀
盘制动冷却回油温度传感器1
Connector to disc brake cooling oil returning temperature sensor1
后制动蓄能器
压力传感器
Connector to stop solenoid valve
Connector to park soleniod valve
前制动
蓄能器
压力传
感器
驻车压力
传感器
Connector to park pressure sensor
Connector to brake accumulator pressure sensor B
转向回油温度传感
Connector to steering oil returning temperature sensor
转向回油压力开关
Connector to steering oil return pressure switch
Connector to brake accumulator pressure sensor F

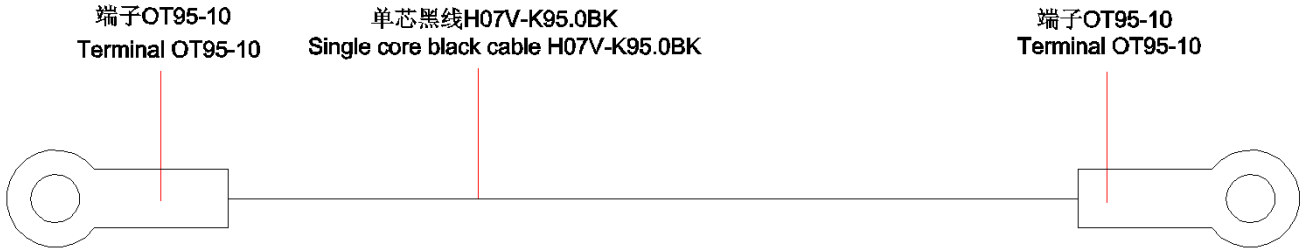
https://truckmanualshub.com/


尾灯系统搭铁
Earth
AMP8针接头SX2 公
8-core Plug SX2
举升接近开关
Hoist limit switch
倒车灯/倒车报警器
Reversing lamp/
reversing alarm
右后雾灯
Connector to
fog lamp B,L
AMP3针接头 公
3-core Plug
左后示宽灯/左制动
灯/左后转向指示灯
Connector to side
marker/brake/Indicator
lamp B,L
左后雾灯
Connector to fog
lamp B,L
缓行灯
Connector to
retarder lamp
右后示宽灯/右制动灯/
右后转向指示灯
Connector to side
marker/brake/Indicator lamp B,R

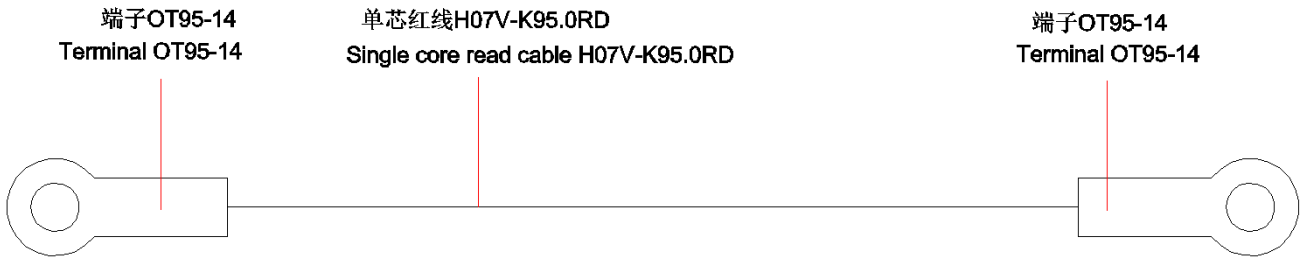
https://truckmanualshub.com/


端子OT95-10
Terminal OT95-10
单芯红线H07V-K95.0RD
Single core red cable H07V-K95.0RD
端子OT95-12
Terminal OT95-12

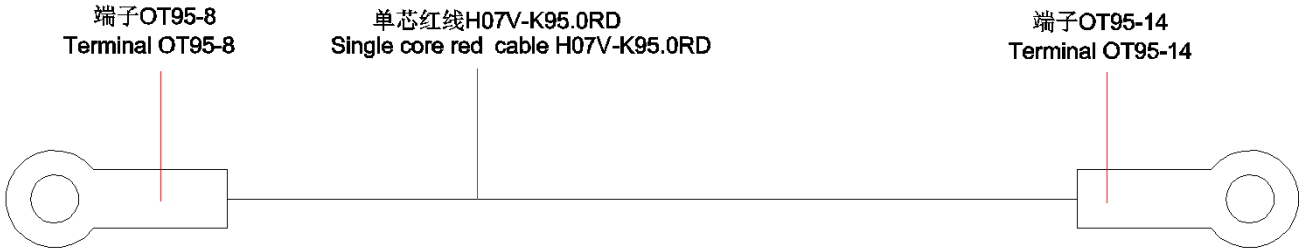
https://truckmanualshub.com/


端子OT95-10
Terminal OT95-10
单芯黑线H07V-K95.0BK
Single core black cable H07V-K95.0BK
端子OT95-10
Terminal OT95-10

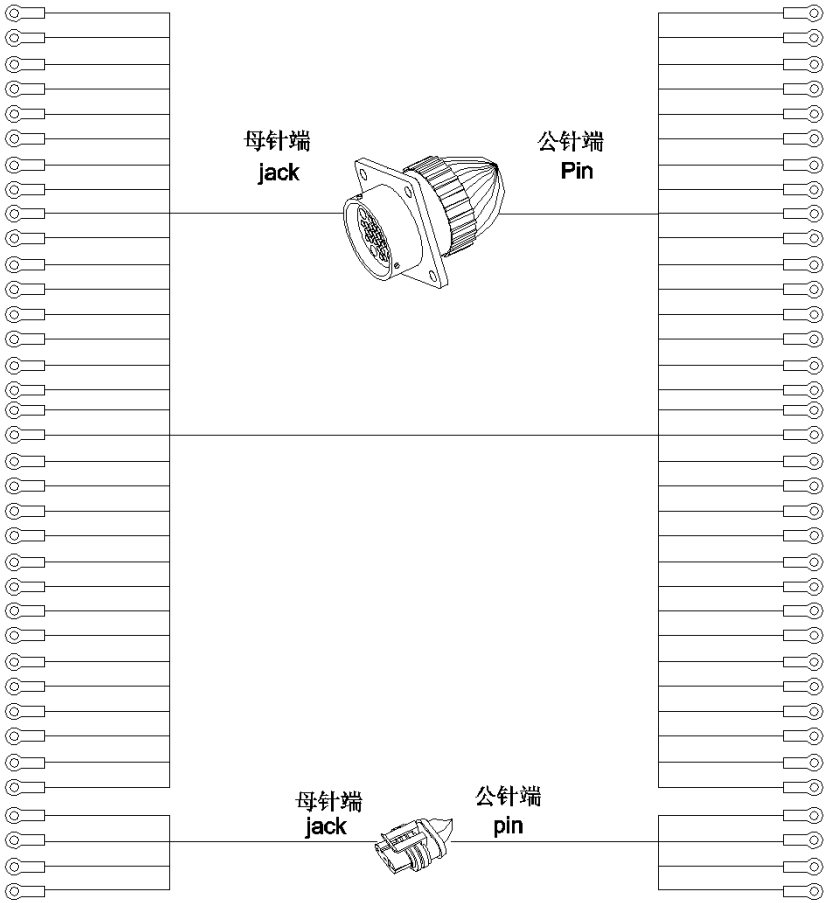
https://truckmanualshub.com/


端子OT95-14
Terminal OT95-14
单芯红线H07V-K95.0RD
Single core read cable H07V-K95.0RD
端子OT95-14
Terminal OT95-14

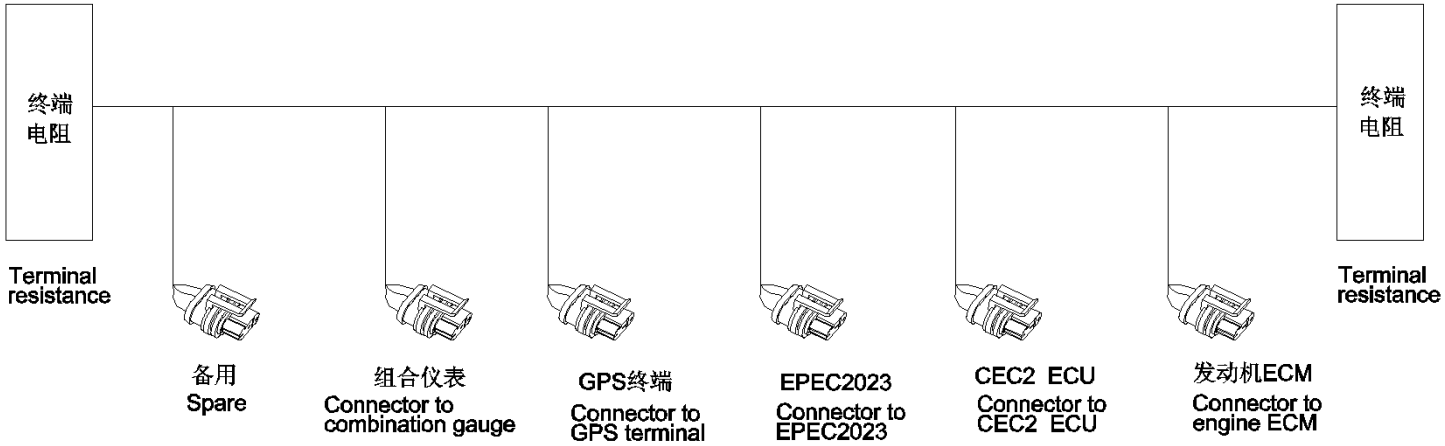
https://truckmanualshub.com/


端子OT95-8
Terminal OT95-8
单芯红线H07V-K95.0RD
Single core red cable H07V-K95.0RD
端子OT95-14
Terminal OT95-14

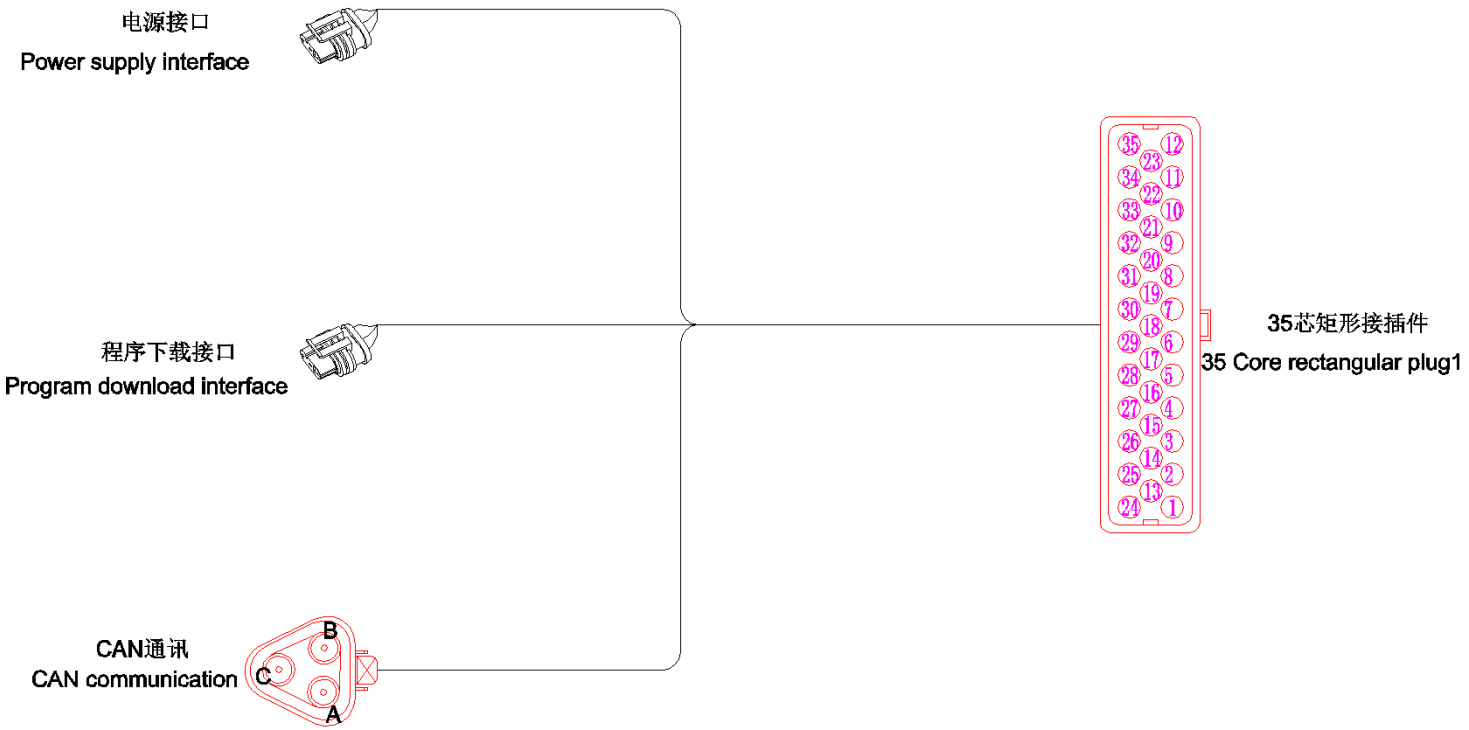
https://truckmanualshub.com/


母针端
jack
公针端
Pin
母针端
jack
公针端
pin

https://truckmanualshub.com/

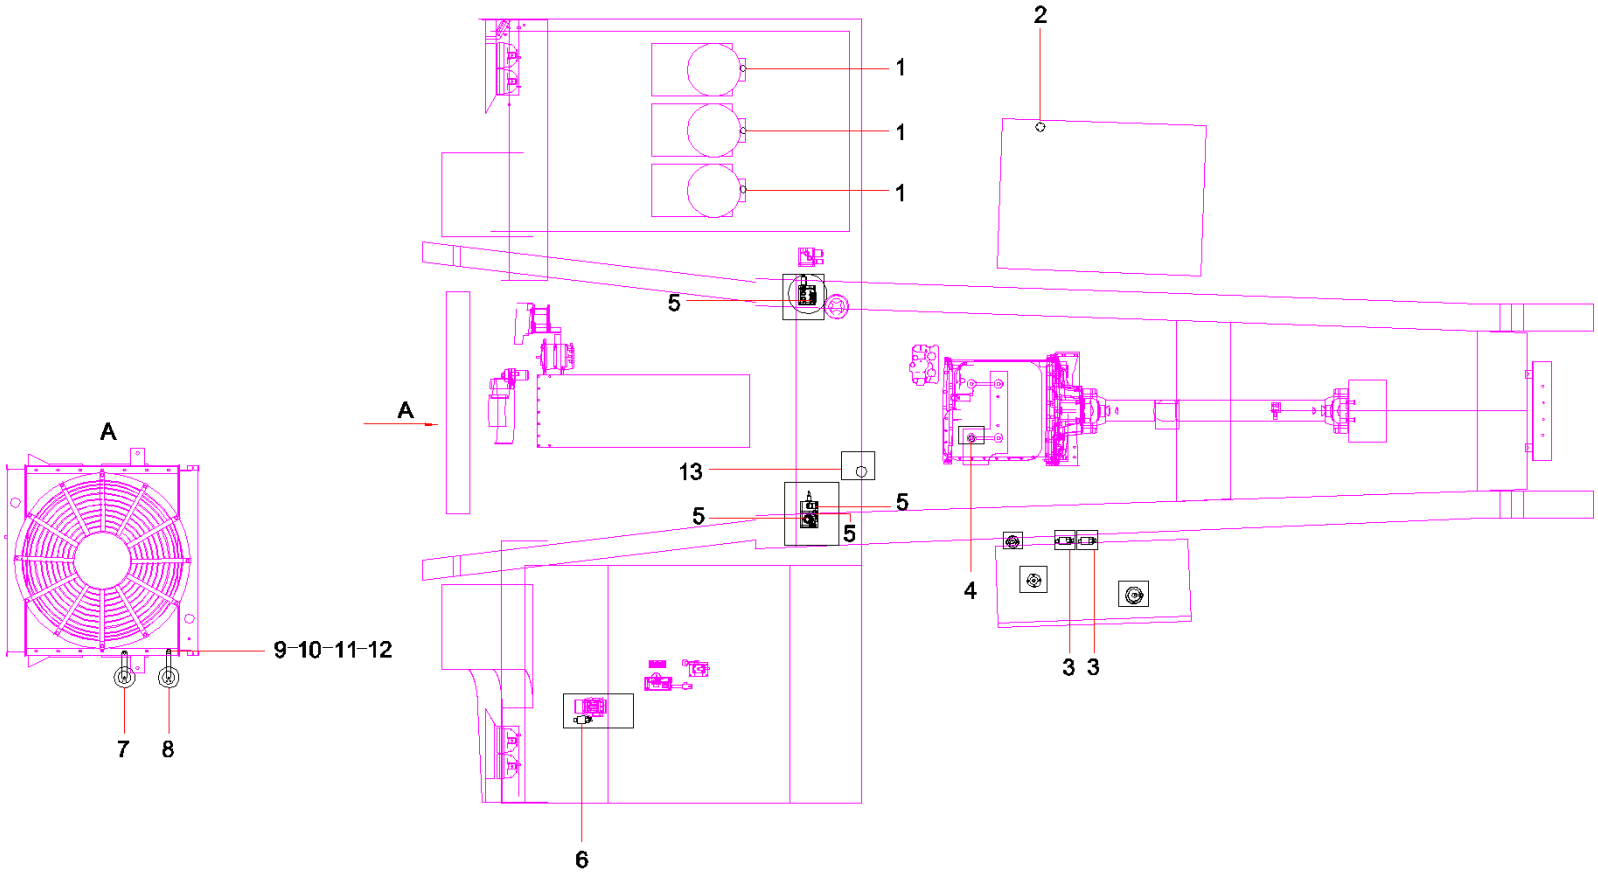

终端
电阻
Terminal
resistance
备用
Spare
组合仪表
Connector to
combination gauge
GPS终端
Connector to
GPS terminal
EPEC2023
Connector to
EPEC2023
CEC2 ECU
Connector to
CEC2 ECU
发动机ECM
Connector to
engine ECM
终端
电阻
Terminal
resistance

https://truckmanualshub.com/


电源接口
Power supply interface
程序下载接口
Program download interface
CAN通讯
CAN communication
B
C
A
35芯矩形接插件
35 Core rectangular plug1

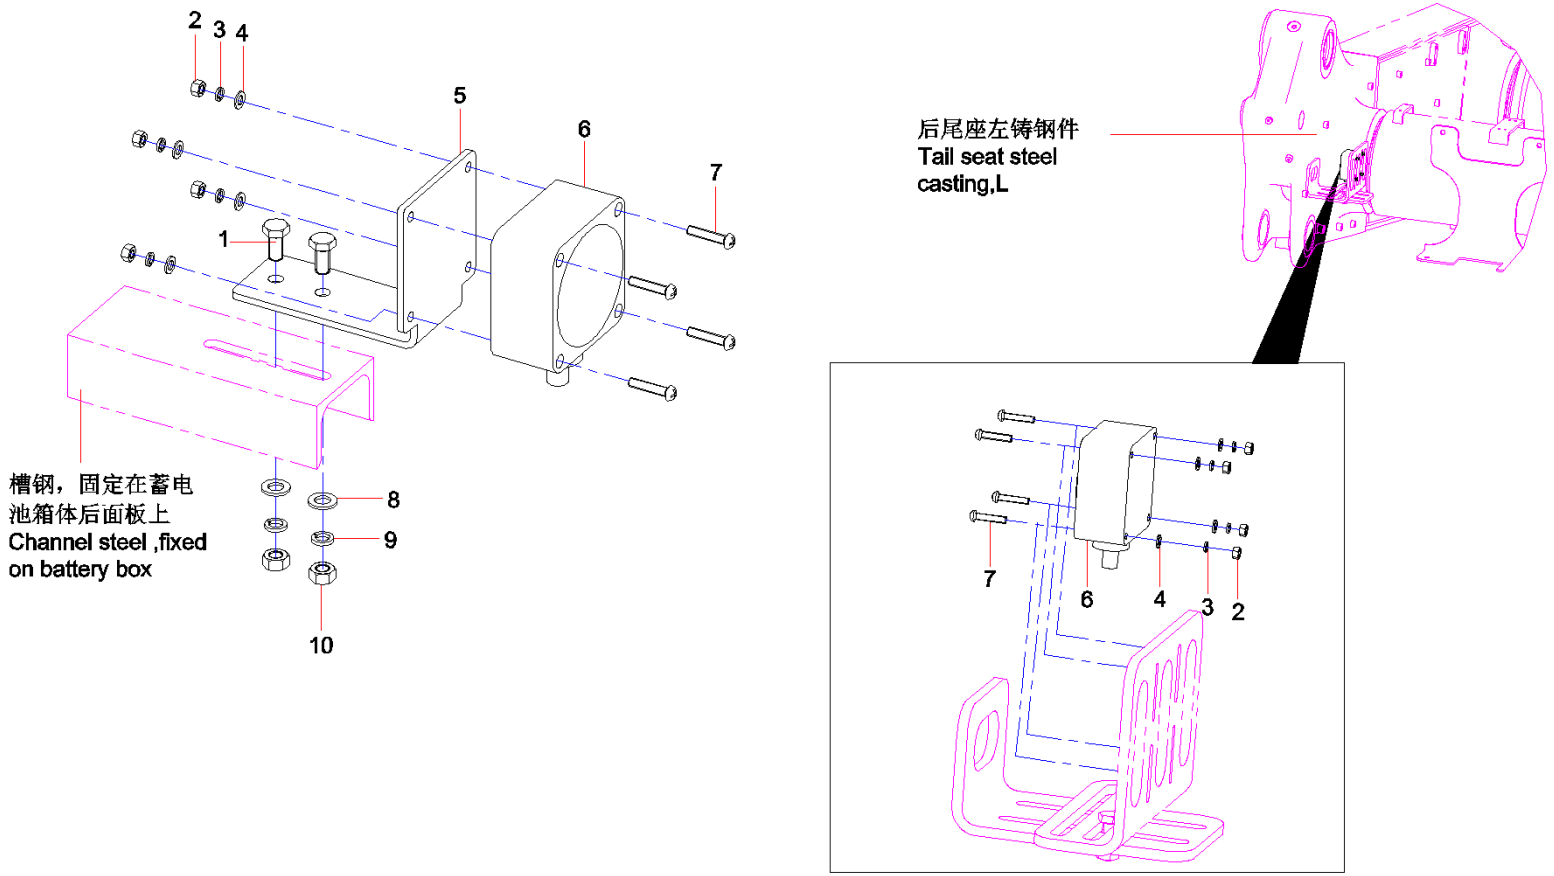
https://truckmanualshub.com/

Group 27
Vehicle detecting assembly


2
1
1
1
5
A
A
13
5
5
5
4
3 3
9-10-11-12
7 8
6

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B250299000033	Air cleaner indicator	3	
2	60224268	Liquid level sensor	1	
3	60148917	Temperature sensor	2	
4	60227740	Oil temperature sensor	1	
5	60190385	Pressure Sensor	4	
6	60123367	Pressure senor	1	
7	B249900000090	Horn	1	
8	21004763	Horn	1	
9	A210401000017	Washer	4	
10	24000633	Washer	4	
11	A210307000055	Nut M8GB6170 Grade 10	2	
12	A210111000090	Bolt	2	
13	12926879	Body approach switch installation	1	


2
3
4
5
6
7
1
槽钢，固定在蓄电池箱体后面板上
Channel steel ,fixed on battery box
8
9
10
后尾座左铸钢件
Tail seat steel casting,L
7
6
4
3
2

https://truckmanualshub.com/

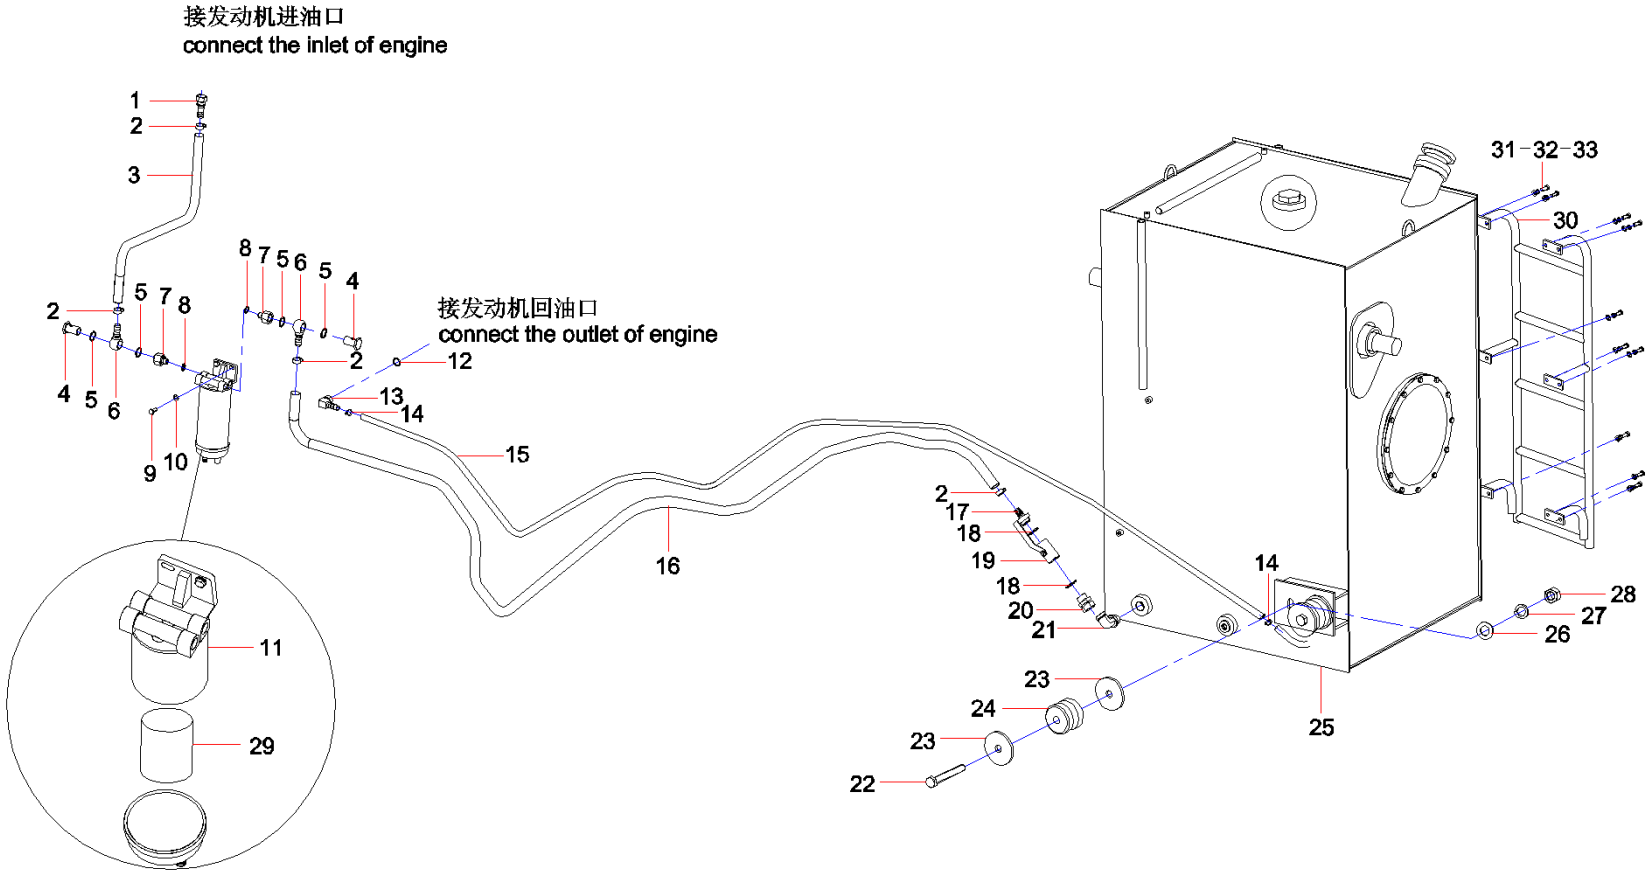
Item No.	Part No.	Description	Qty.	Remark
1	A210111000342	Bolt M8×16GB5783 10.9 grade	6	
2	A210307000015	Nut	8	
3	24000509	Washer	8	
4	24000630	Washer	8	
5	12924807	Installation plate	1	
6	60035978	Proximity switch	2	
7	A210210000011	Screw M5×25GB818	8	
8	24000633	Washer	6	
9	A210401000017	Washer	6	
10	A210307000055	Nut M8GB6170 Grade 10	6	

https://truckmanualshub.com/

https://truckmanualshub.com/

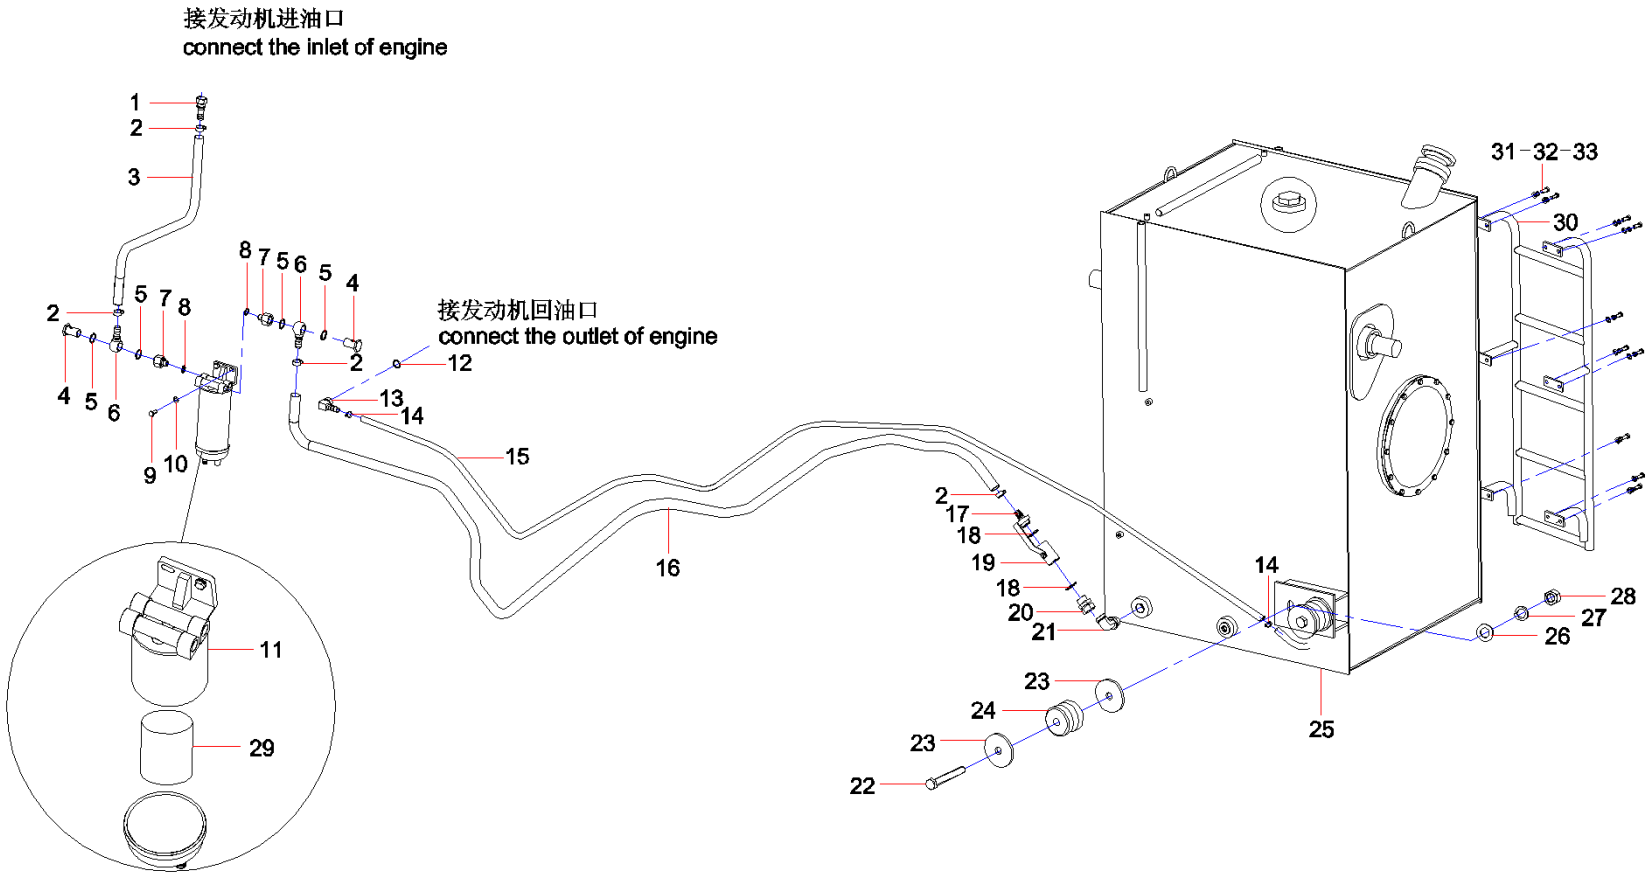
Group 28

Fuel tank assembly and pipeline installation


接发动机进油口
connect the inlet of engine
接发动机回油口
connect the outlet of engine
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33

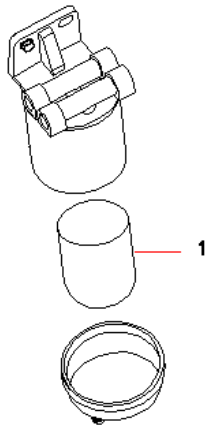
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A229900009509	Connector	1	
2	A210855000008	Hoop	4	
3	11614287	Fuel supply line	1	
4	A229900009505	Bolt	2	
5	A210434000013	Washer	4	
6	A229900009506	Articulating body	2	
7	10704734	Connector	2	
8	A210434000009	Washer	2	
9	A210111000197	Bolt	2	
10	24000637	Washer	2	
11	B229900005676	Primary filter	1	
12	A210434000011	Washer 22JB982	1	
13	60008337	Connector	1	
14	A210855000005	Hoop	2	
15	11614288	Fuel return line	1	
16	11614258	Fuel supply line	1	
17	10841304	Connector	1	
18	A210434000015	Washer	2	
19	A220400000004	Ball valve	1	
20	21002965	Connector	1	
21	21002837	Connector	1	
22	A210110000234	Bolt M20 × 140GB5782 10.9	2	


接发动机进油口
connect the inlet of engine
接发动机回油口
connect the outlet of engine
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33

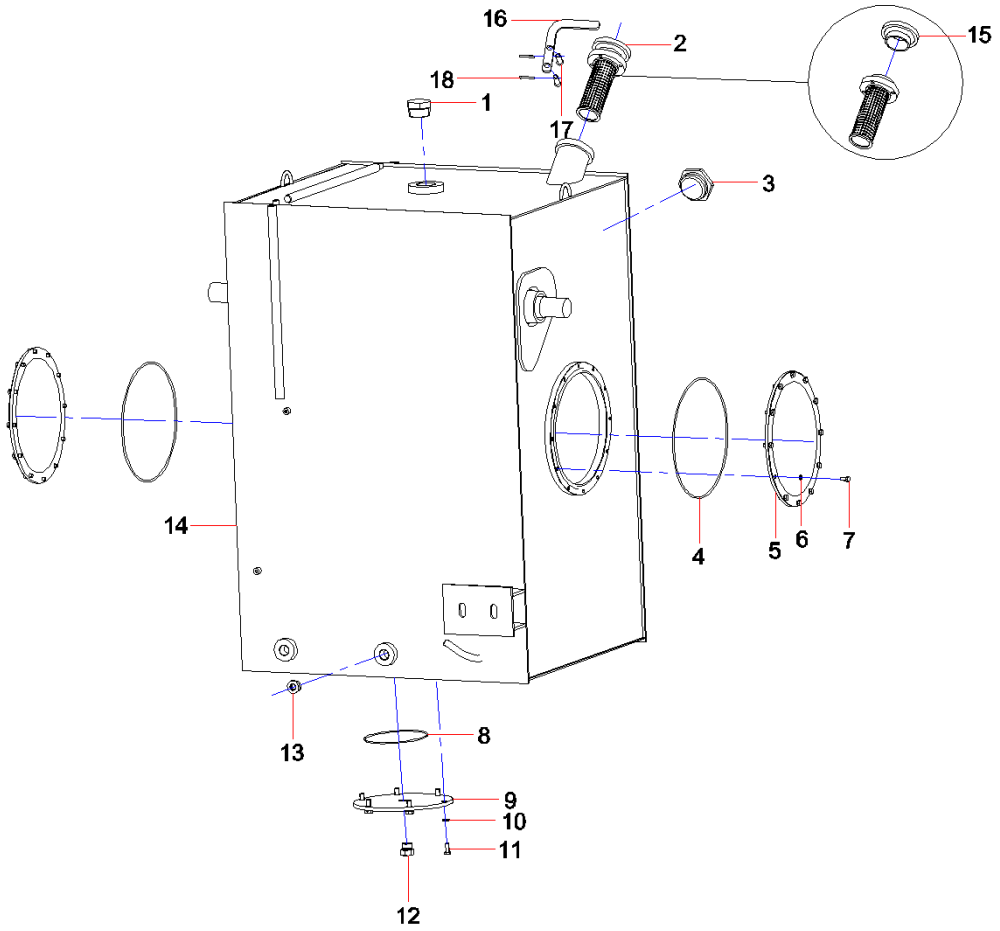
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	12171757	Washer	4	
24	60001062	Shock mount	2	
25	12952398	Fuel tank	1	
26	A210491000132	Washer	2	
27	24000515	Washer 20GB93 DACROMET	2	
28	A210307000029	Nut	2	
29	B222100000622	Core,filter,separator,oil–water	1	
30	13087370	LadderSRT95C.470.2	1	
31	24000513	Washer 12GB93 DACROMET	12	
32	24000639	Washer 12GB97.1	12	
33	A210111000202	Bolt	12	


1

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B222100000622	Core,filter,separator,oil–water	1	


16
2
15
18
1
17
3
14
4
5
6
7
13
8
9
10
11
12

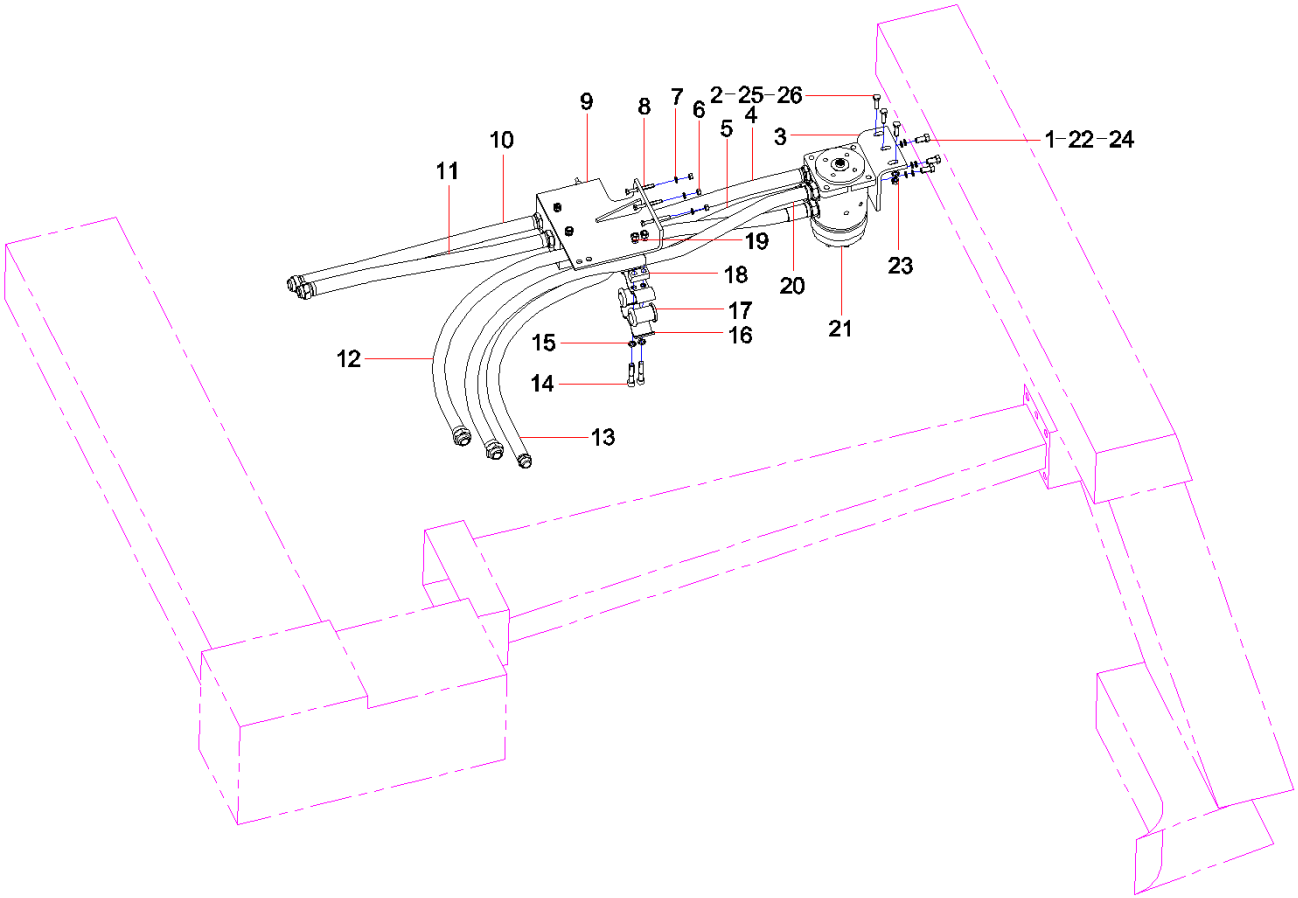
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60223847	Plug	1	
2	A222100000355	Air cleaner	1	
3	60240021	Oil sign	1	
4	A210609000384	O–ring 365×5.3GB3452.1	2	
5	11643404	Cover Plate	2	
6	24000512	Washer 10GB93	24	
7	A210111000012	Bolt	24	
8	A210609000016	O–ring 180×3.55GB3452.1	1	
9	10704464	Cover plate	1	
10	24000637	Washer	6	
11	A210111000197	Bolt	6	
12	21012175	Screw plug	1	
13	21010723	Plug	1	
14	12951835	Fueling tank welding assembly	1	
15	60203630	cover	1	
16	12964126	Ear plate Ⅱ	1	
17	A210508000040	Shaft, pin	2	
18	A210501000001	Pin	2	

https://truckmanualshub.com/

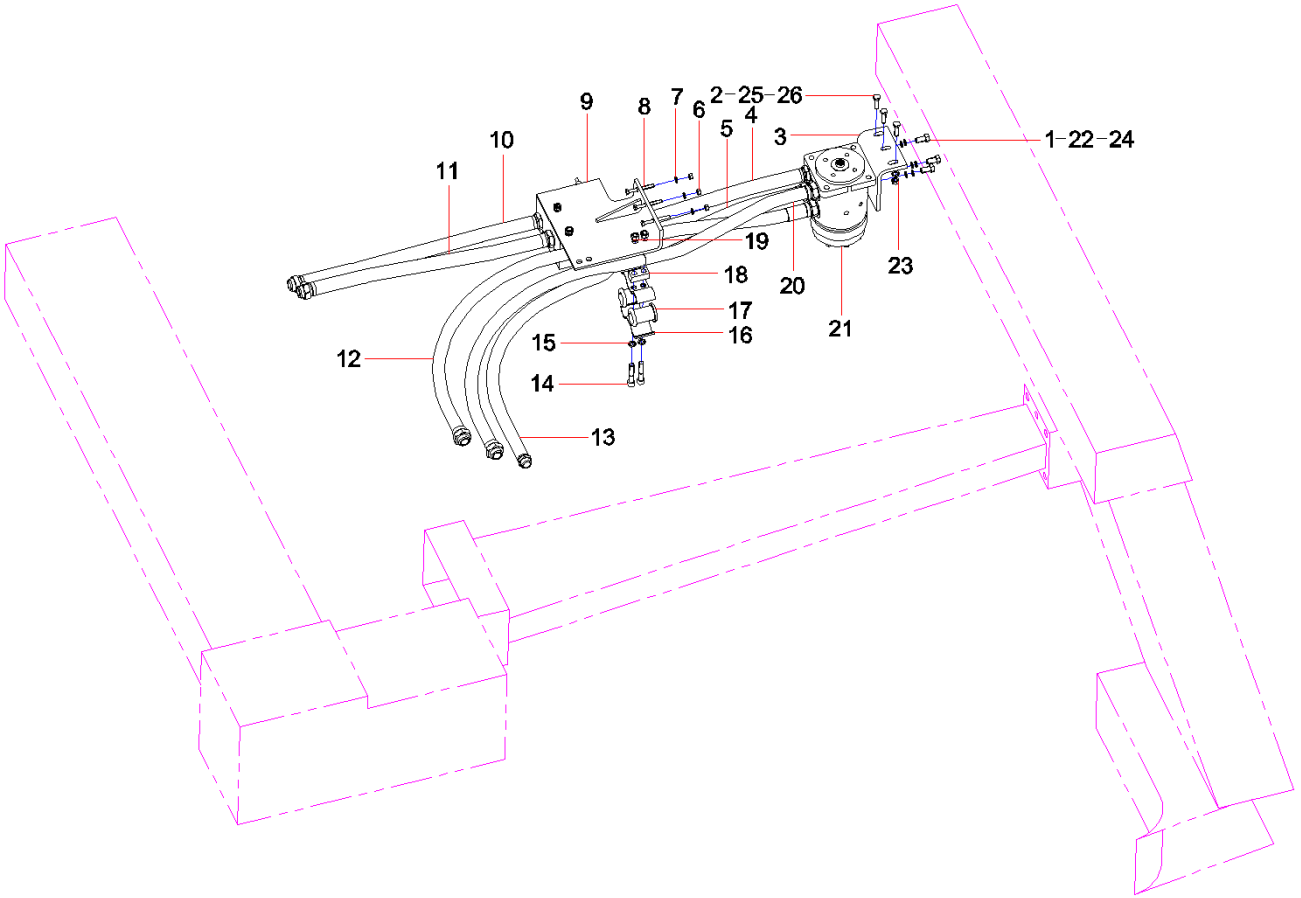
https://truckmanualshub.com/

Group 29
Steering pipeline


9
8
7
6
2-25-26
5
4
3
1-22-24
10
11
19
18
17
16
15
14
13
12
20
21
23

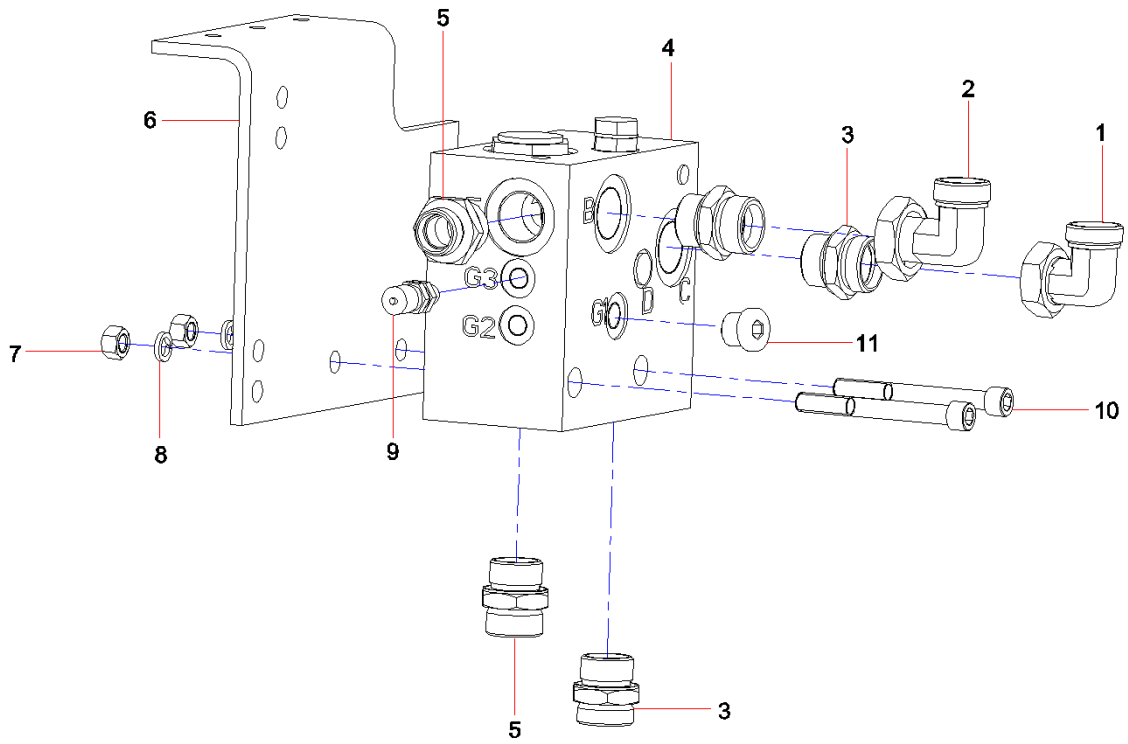
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A229900009500	Bolt	3	
2	24002305	Bolt M10 × 35GB5783 Dacroment	3	
3	13069681	Retainer plate	1	
4	B230103006392	Rubber hose	1	
5	B230103004115	Rubber hose	1	
6	24000911	Nut	3	
7	A210405000045	Washer	3	
8	A210111000096	Bolt	3	
9	12952974	Steering valve group and adaptor	1	
10	B230103002506	Rubber hose	1	
11	60207502	rubber hose	1	
12	B230103006939	Hose	1	
13	B230103008339	Hose, rubber	1	
14	A210204000359	Screw	2	
15	A210401000002	Washer	2	
16	12951068	Clamp, pipe	2	
17	12953021	Tube clamp pad	2	
18	12951070	Seat	1	
19	A210307000001	Nut	2	
20	B230103003808	Hose,rubber	1	
21	12952854	Steering gear and adaptor	1	
22	A229900009503	Washer	3	


9
8
7
6
2-25-26
5
4
3
1-22-24
10
11
19
18
17
16
15
14
13
12
20
21
23

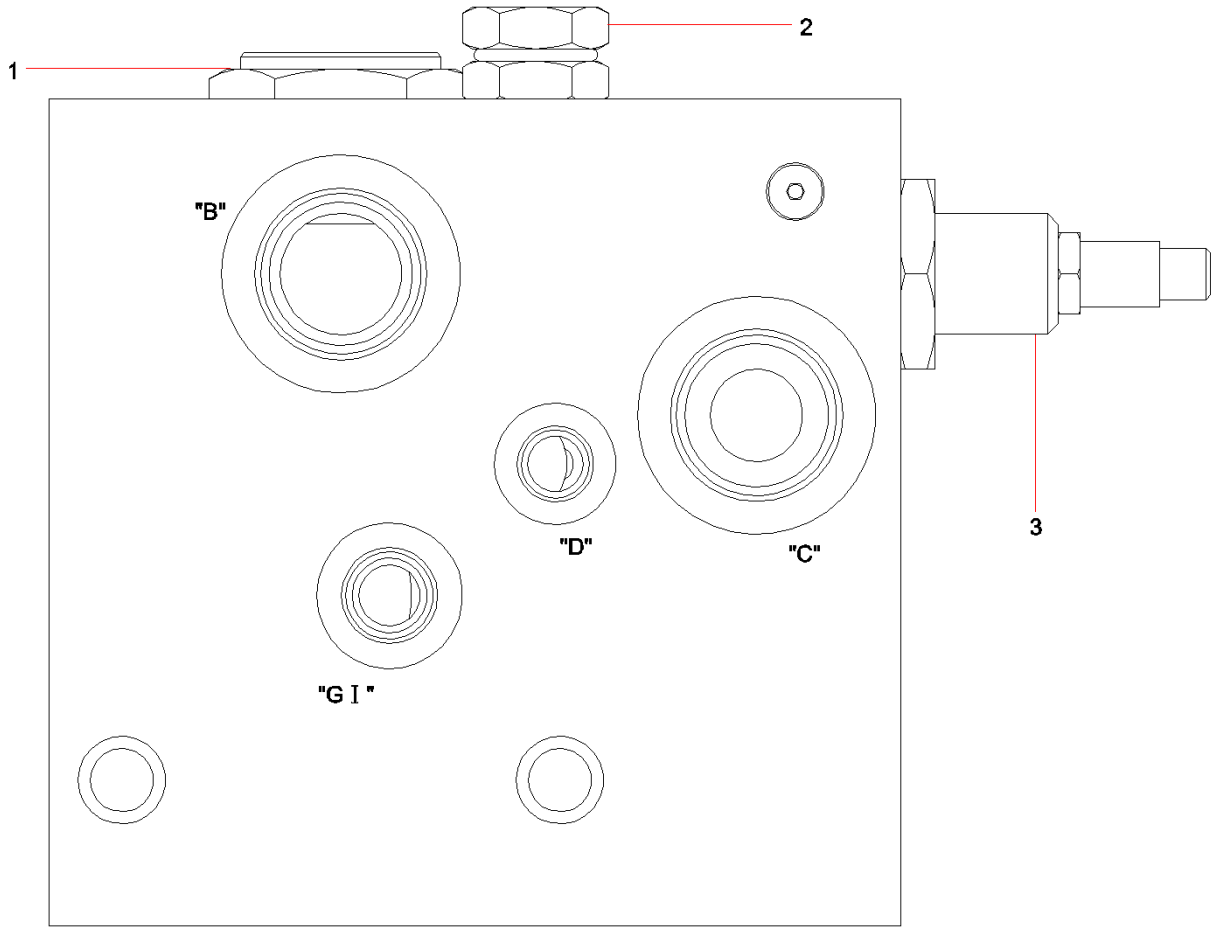
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	24000868	Nut M10GB6170 Dacroment	3	
24	A210401000003	Washer	3	
25	24000637	Washer	3	
26	24000512	Washer 10GB93	3	


5
4
2
6
3
1
G3
G2
G1
B
D
C
7
11
10
8
9
5
3

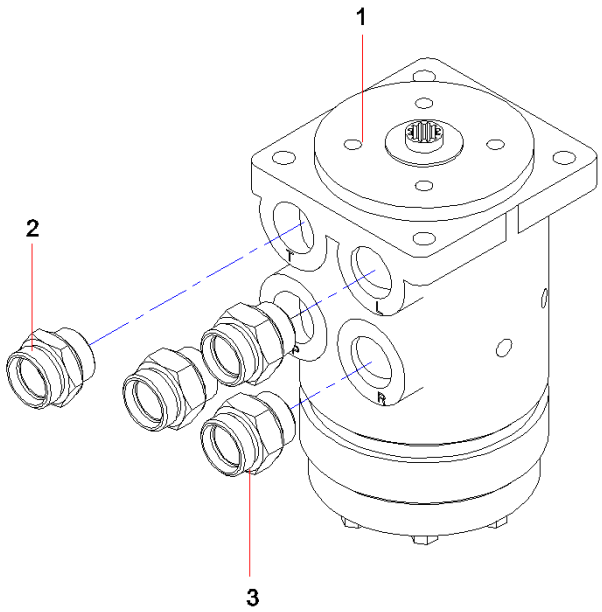
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B210780000838	Pipe connector	1	
2	B210780000029	Pipe connector	1	
3	B210780001005	Pipe connector	2	
4	60000783	Steering valve group	1	
5	B210780001389	Pipe connector	3	
6	12952950	Installation seat	1	
7	A210307000001	Nut	2	
8	A210401000002	Washer	2	
9	B210770000003	Connector, pressure measuring	1	
10	A210204000455	Screw	2	
11	21008717	Plug	1	


1
2
"B"
"D"
"C"
3
"G I "

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60072692	Valve,check	1	
2	60096907	Directional valve with hydraulic actuation	1	
3	60072700	Valve,overflow	1	


1
2
3
T
L
R

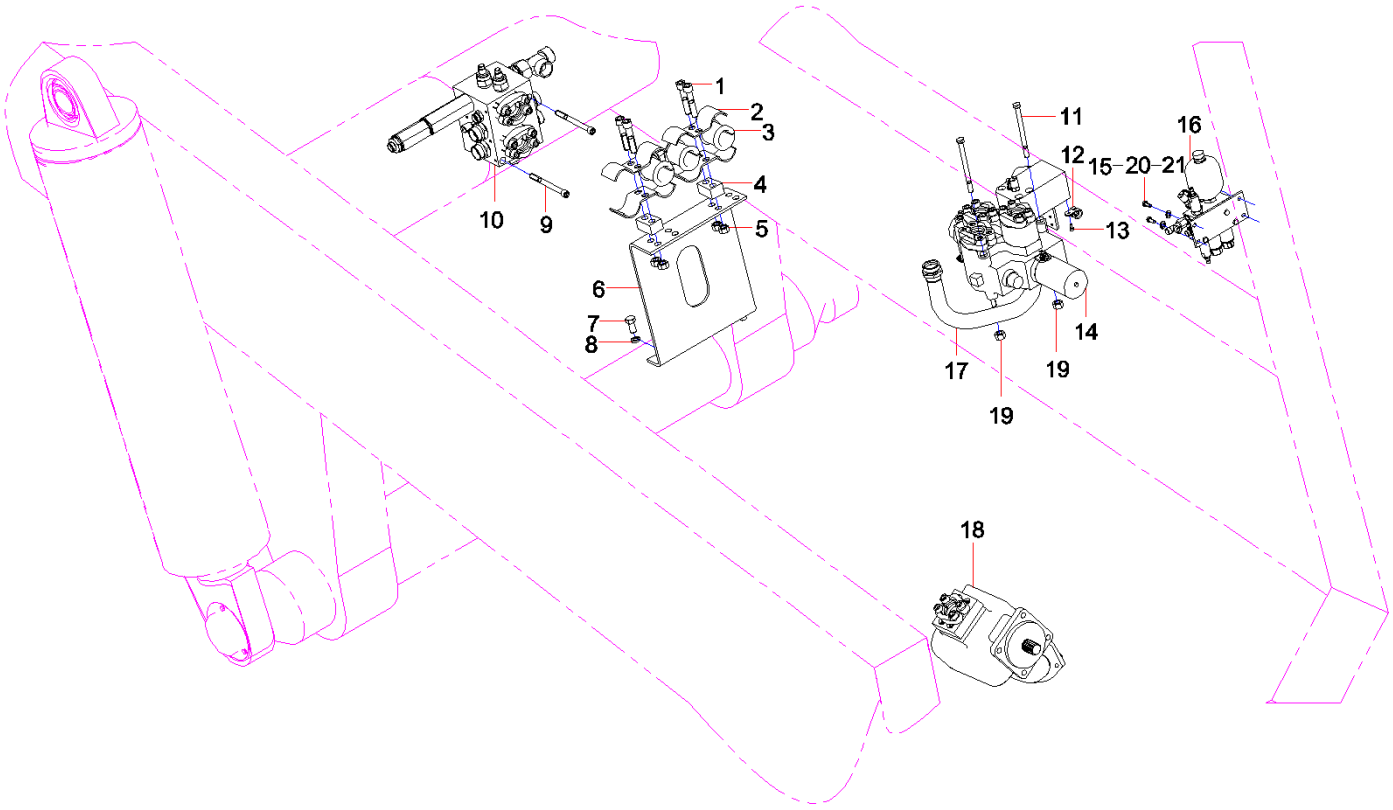
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60001078	Steering control unit	1	
2	21006470	Connector, pipe	1	
3	A210770000590	Connector, pipe	3	

https://truckmanualshub.com/

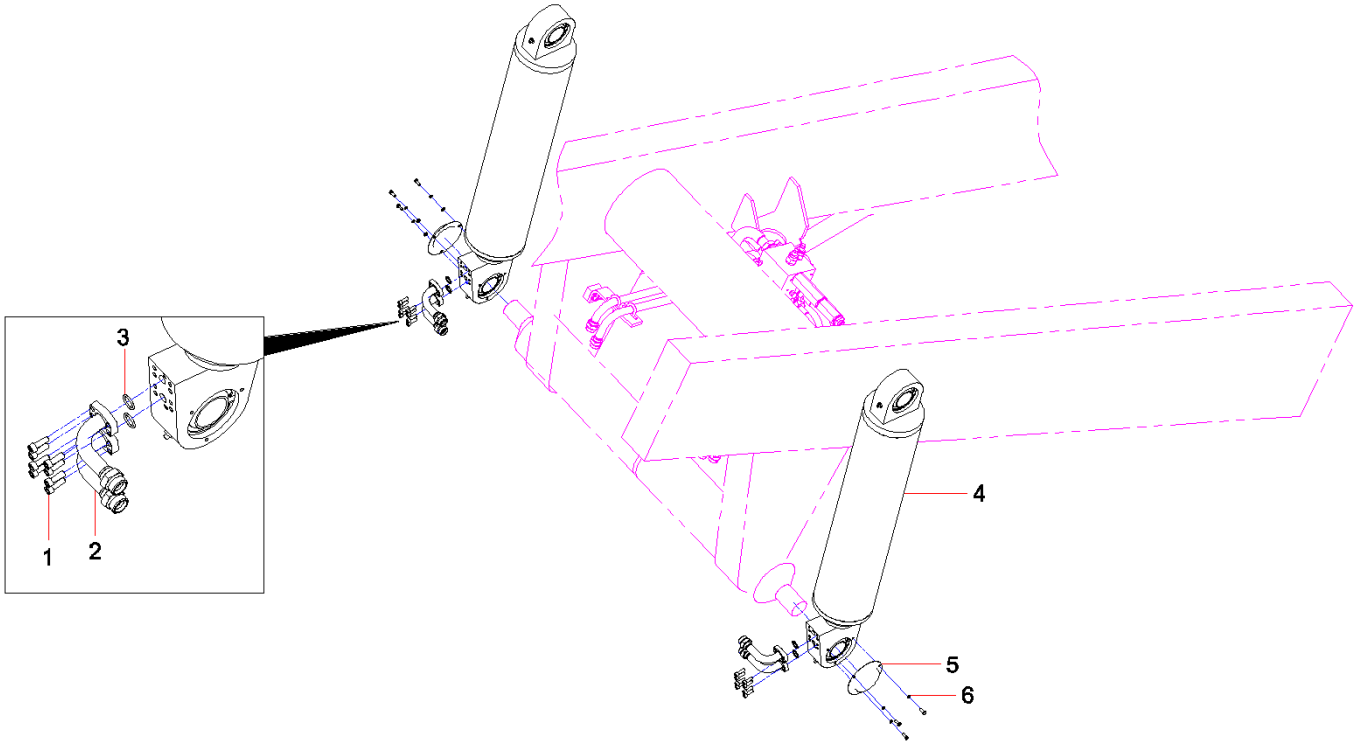
https://truckmanualshub.com/

Group 30
Lifting pipeline


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
19
20
21

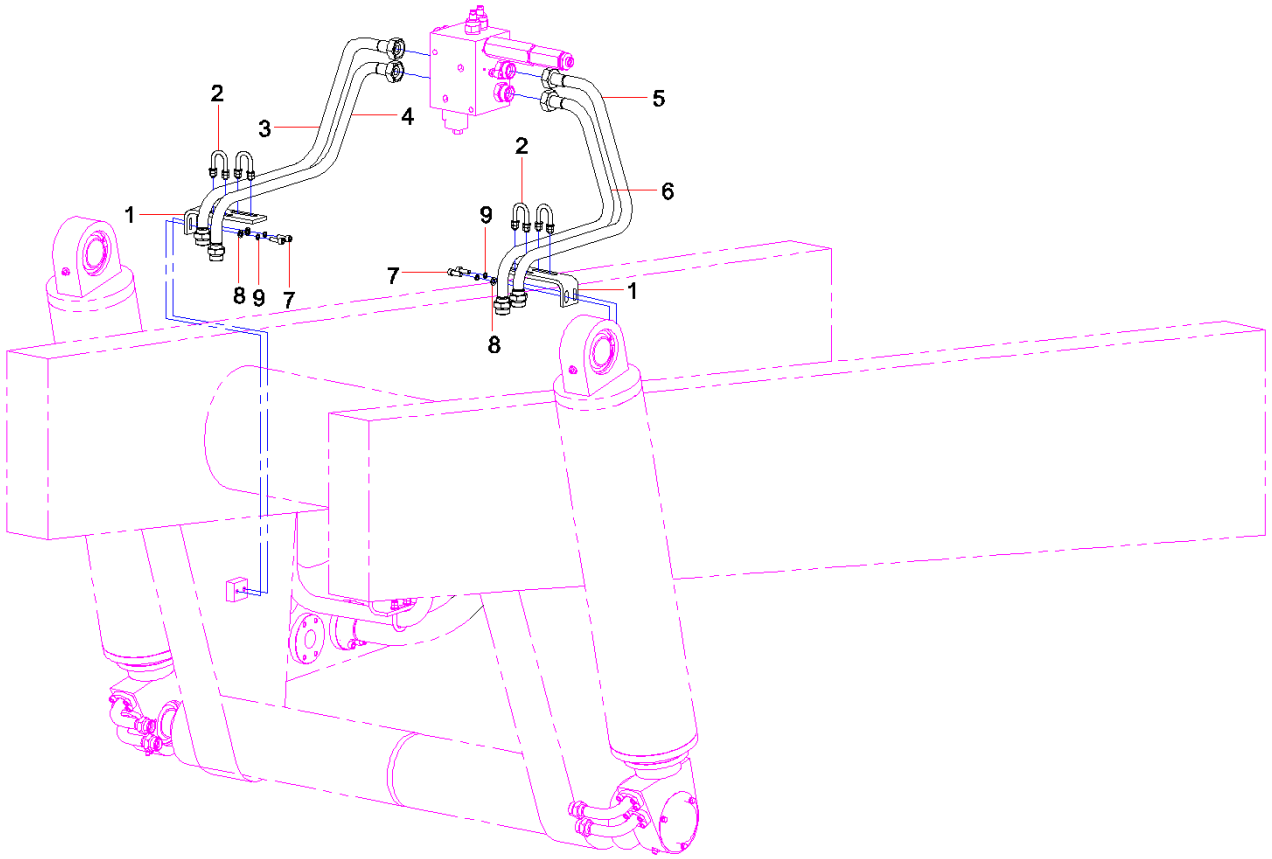
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	24000779	Screw	4	
2	12961726	Clamp	4	
3	12961727	Tube clamp pad	3	
4	12961728	Clamp bearer	2	
5	A210307000028	Nut	4	
6	12954484	Fixed plate	1	
7	A229900009501	Screw	2	
8	A210401000004	Washer	2	
9	A210204000272	Screw	2	
10	12954500	Balanced valve group group	1	
11	A210110000179	Bolt M12×160GB5782	3	
12	A229900006640	Clamp	2	
13	A210204000129	Screw	2	
14	12954498	Lifting valve group	1	
15	A210111000343	Bolt	10	
16	12954497	Leading oil sources valve group assem	1	
17	12954502	Steel pipe assy.	1	
18	12954514	Lifting pump assembly	1	
19	A210307000031	Nut	3	
20	A210404000005	Washer	4	
21	A210307000012	Nut	4	


3
1
2
4
5
6

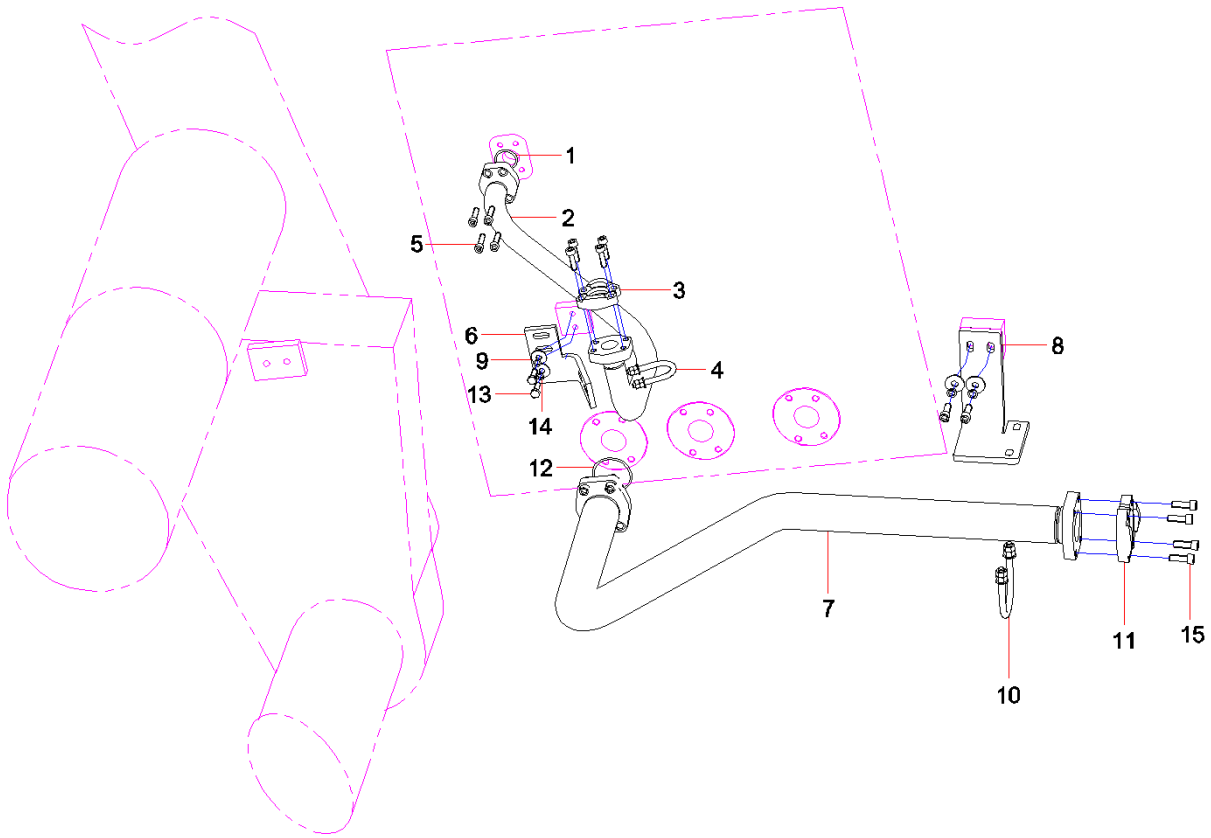
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210204000215	Screw	20	
2	12954493	Steel pipe assy.	4	
3	A210609000195	O–ring	4	
4	60212670	Hoisting cylinder	2	
5	12986488	Cover plate	2	
6	A210401000017	Washer	10	


2
3
4
5
2
6
1
9
7
1
8 9 7
8

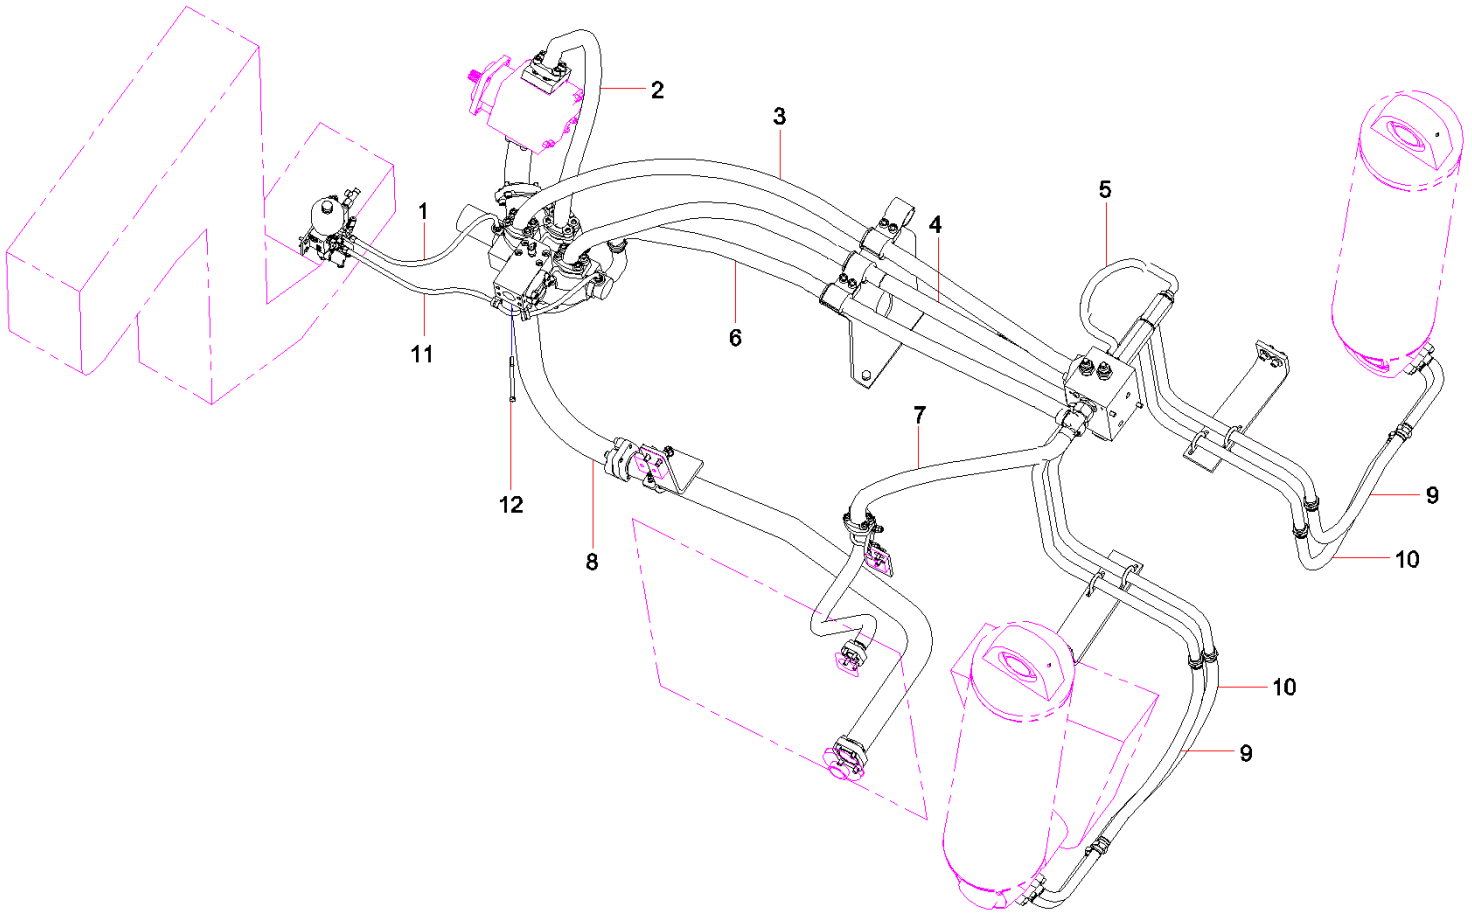
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12954485	Fixed seat	2	
2	60008273	U–clamp	4	
3	12954504	Steel pipe assy.	1	
4	12954506	Steel pipe assy.	1	
5	12954508	Steel pipe assy.	1	
6	12954510	Steel pipe assy.	1	
7	A210204000225	Screw	6	
8	A210404000004	Washer	6	
9	A210401000002	Washer	12	


1
2
5
3
6
9
13
14
4
12
8
7
10
11
15

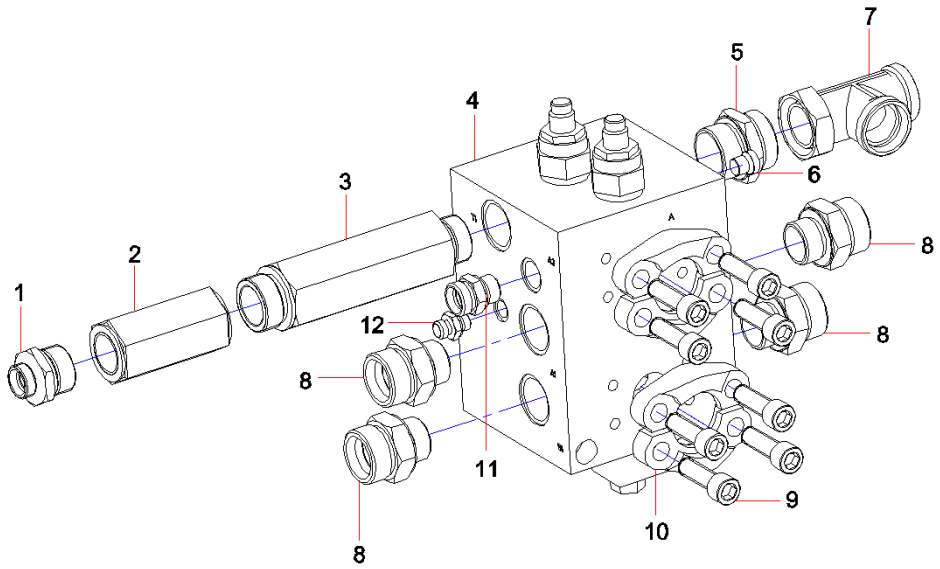
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B230101002071	O–ring	1	
3	A229900002488	Split flange clamp	2	
4	60008274	U–clamp	1	
5	A210204000355	Screw	4	
6	12954486	Pipe clamp seat	1	
7	12954516	Steel pipe assy.	1	
8	12954015	Pipe clamp seat	1	
9	A210404000003	Washer	2	
10	60008277	U–CLAMP	1	
11	21018528	Split flange	4	
12	B230101002072	O–ring	1	
13	24000527	Bolt M10 × 30GB5783 Dacroment	2	
14	A210401000001	Washer	2	
15	A210204000206	Screw	12	


1
2
3
4
5
6
7
8
9
10
10
9
11
12

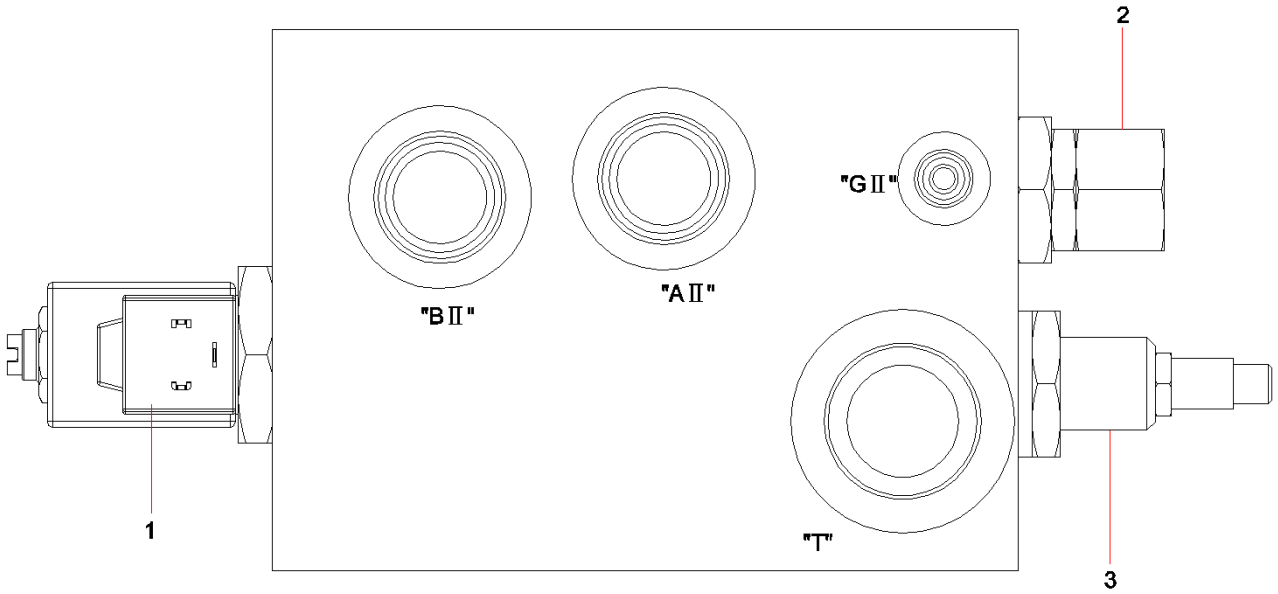
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B230103005499	Hose	1	
2	60206714	Rubber Hose	1	
3	B230103007653	Hose,rubber	1	
4	23001434	Hose, rubber	1	
5	60234814	rubber hose	1	
6	B230103005872	Hose, rubber	1	
7	60035669	Hose	1	
8	60234813	rubber hose	1	
9	60212562	Hose, rubber	2	
10	60024615	Hose	2	
11	B230103001518	Hose,rubber	1	
12	A210204000354	Screw	4	


1
2
3
4
5
6
7
8
8
8
8
9
10
11
12

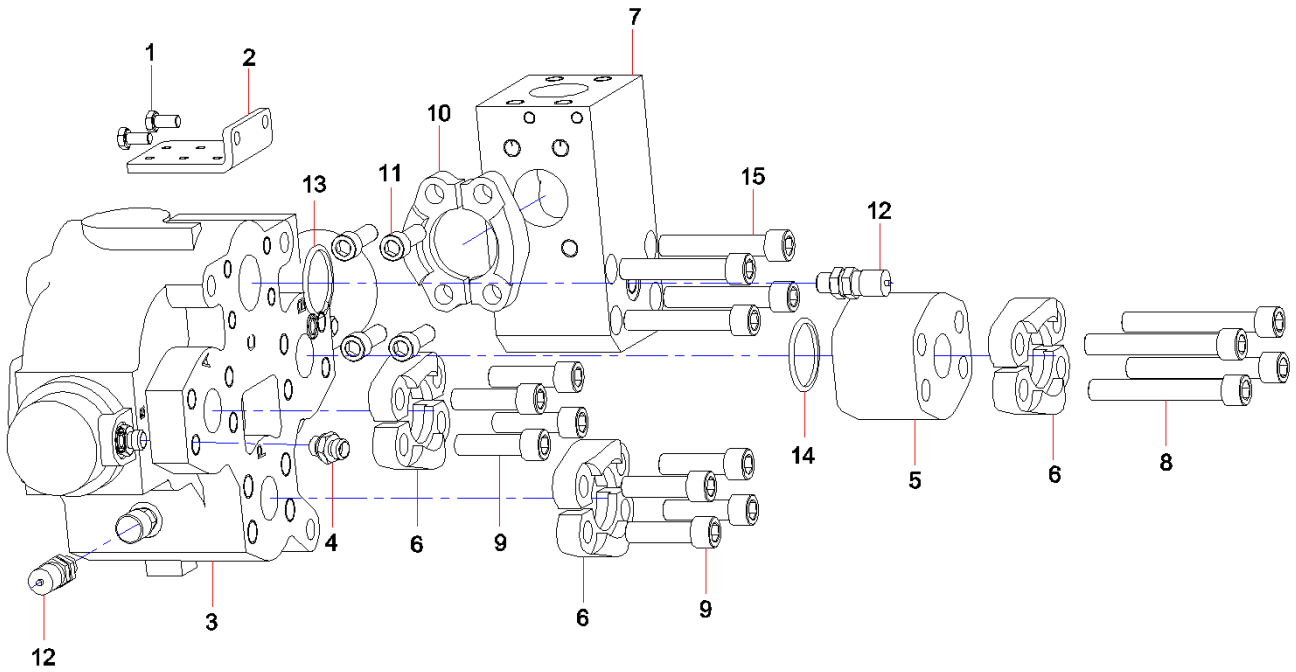
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12871948	Transitional adaptor	1	
2	21020347	Check Valve	1	
3	12871947	Transitional adaptor	1	
4	60000962	Balance valve block unit	1	
5	B210780001181	Connector, pipe	1	
6	21001441	Plug	1	
7	B230780000058	Connector, pipe	1	
8	24001376	Pipe connector	4	
9	A210204000454	Screw	8	
10	A229900005120	Flange, split	4	
11	21002824	Pipe connector	1	
12	B210770000003	Connector, pressure measuring	1	


2
"GⅡ"
"BⅡ"
"AⅡ"
1
"T"
3

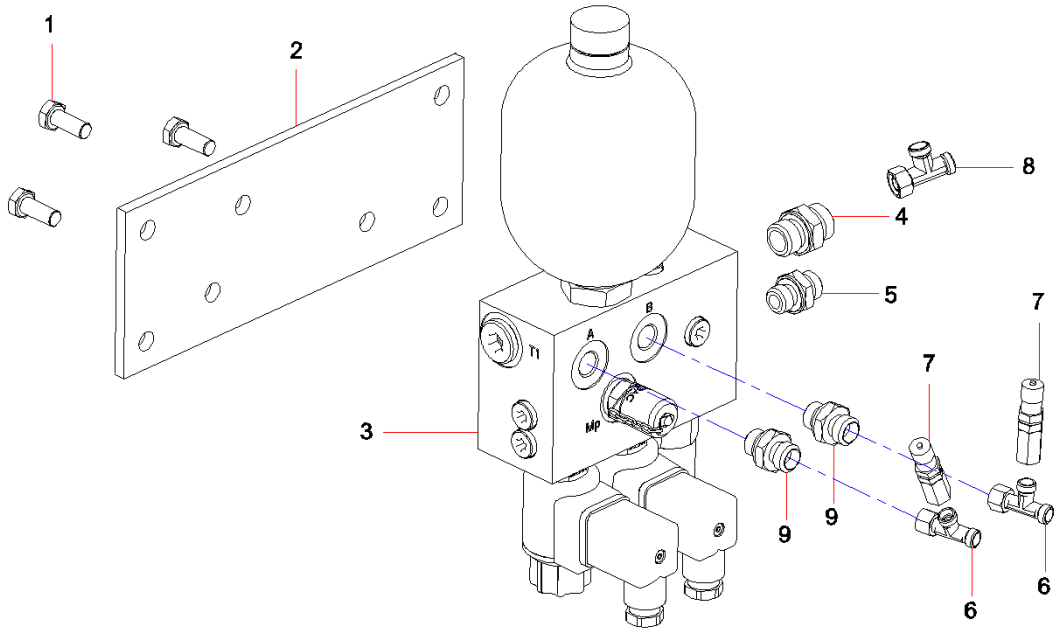
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60072694	Balance valve	1	
2	60072699	Valve,overflow	1	
3	60072702	Valve,reversal,electromagnetic	1	


1
2
7
10
13
11
15
12
14
5
6
8
4
6
9
6
9
3
12

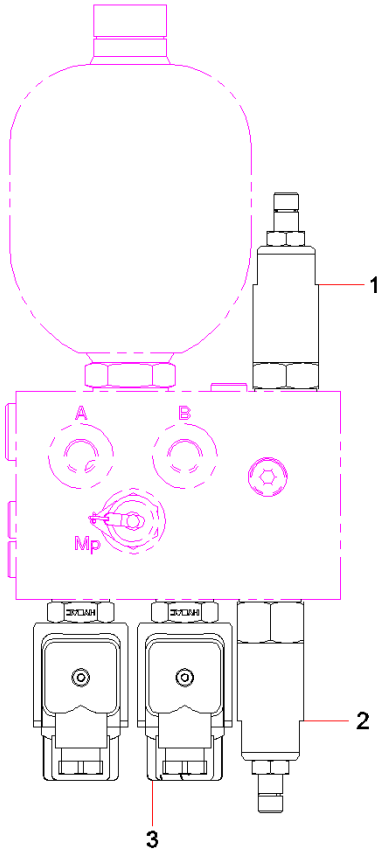
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000342	Bolt M8 × 16GB5783 10.9 grade	2	
2	12027718	Mounting rack	1	
3	60009299	Directional Valve With Hydraulic Actuation	1	
4	21002815	Pipe connector	2	
5	11641472	Block	1	
6	A229900005120	Flange, split	6	
7	12021600	Block	1	
8	A210204000448	Screw	4	
9	A210204000353	Screw	8	
10	A229900002509	Flange, split	2	
11	A210204000206	Screw	4	
12	B210770000003	Connector, pressure measuring	2	
13	21007883	O–Ring	1	
14	B230101002071	O–ring	1	
15	A210204000360	Screw	4	


1
2
3
4
5
6
6
7
7
7
8
9
9
A
B
MP

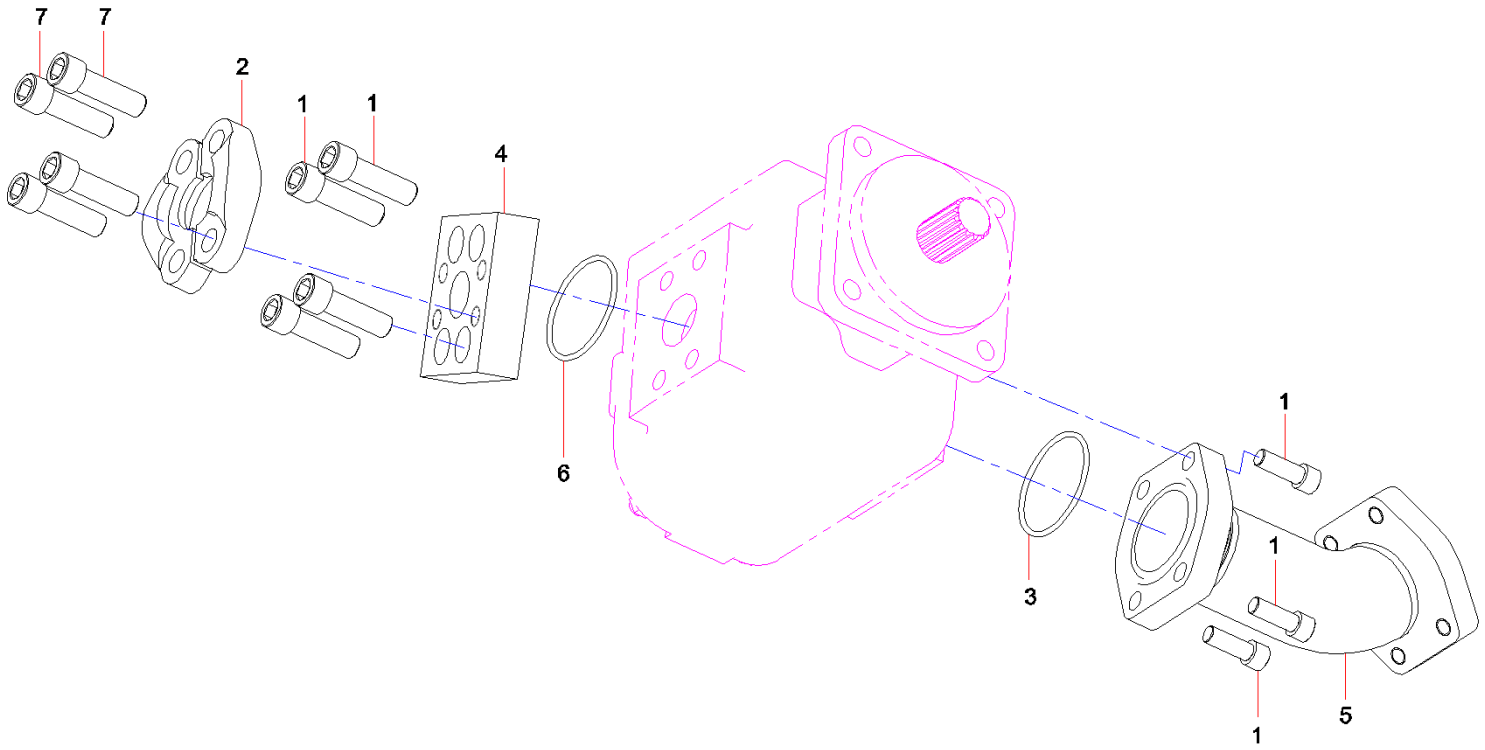
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000343	Bolt	3	
2	12954496	Fixed plate	1	
3	60009300	Pilot valve	1	
4	21002820	Pipe connector	1	
5	A210770000616	Pipe connector	1	
6	B210780000170	Pipe connector	2	
7	B210770000002	Pressure–measuring Connector	2	
8	B210780000016	Connector, pipe	1	
9	21002815	Pipe connector	2	


1
A
B
Mp
2
3

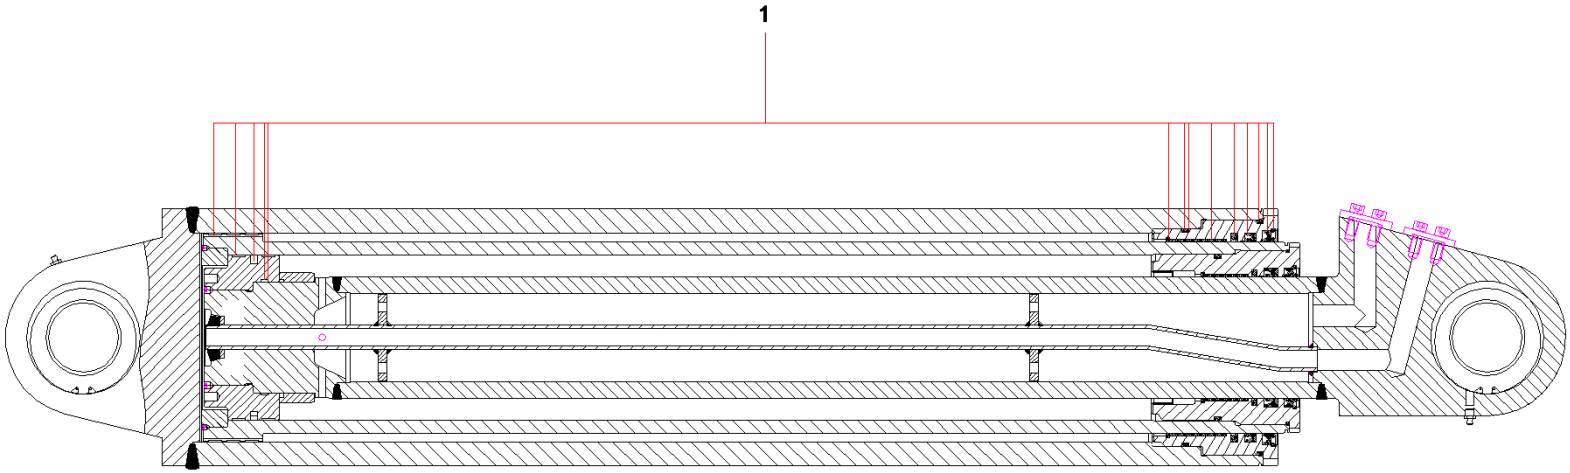
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60208507	Relief valve	1	
2	60208508	Reduce valve	1	
3	60208509	Porprotional reduce valve	2	


7
7
2
1
1
4
6
3
1
1
1
5

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210204000206	Screw	8	
2	A229900005120	Flange, split	2	
3	B230101002072	O–ring	1	
4	11860746	Flange	1	
5	12954512	Steel pipe assy.	1	
6	21007883	O–Ring	1	
7	A210204000454	Screw	4	


1

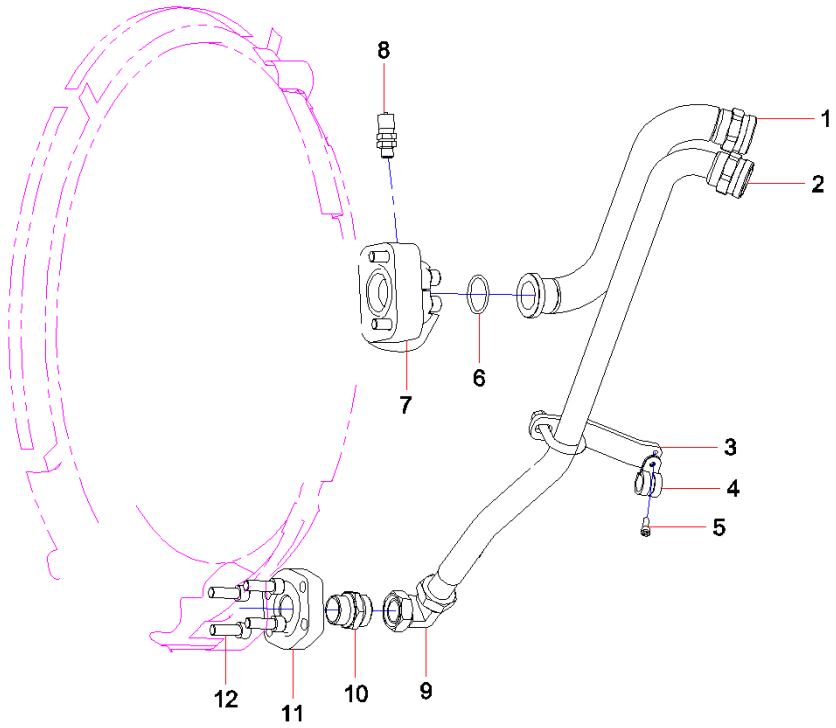
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60232234	Repair kit of 95C hoisting cylinder	1	

https://truckmanualshub.com/

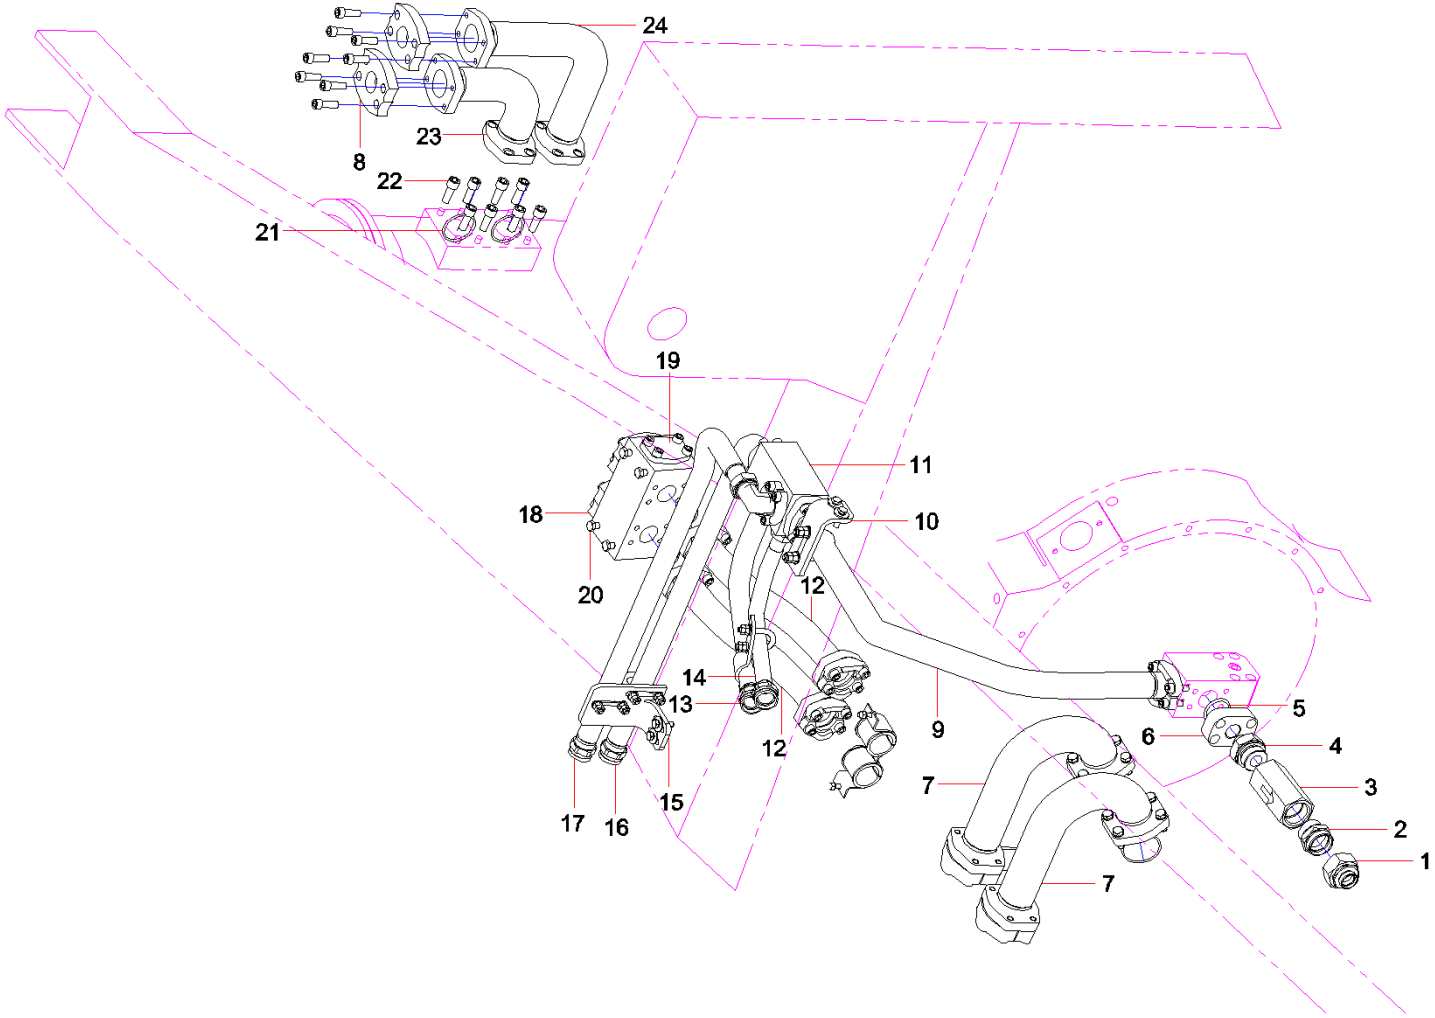
https://truckmanualshub.com/

Group 31
Cooling pipeline for discs braking SRT95


8
1
2
6
7
3
4
5
12
11
10
9

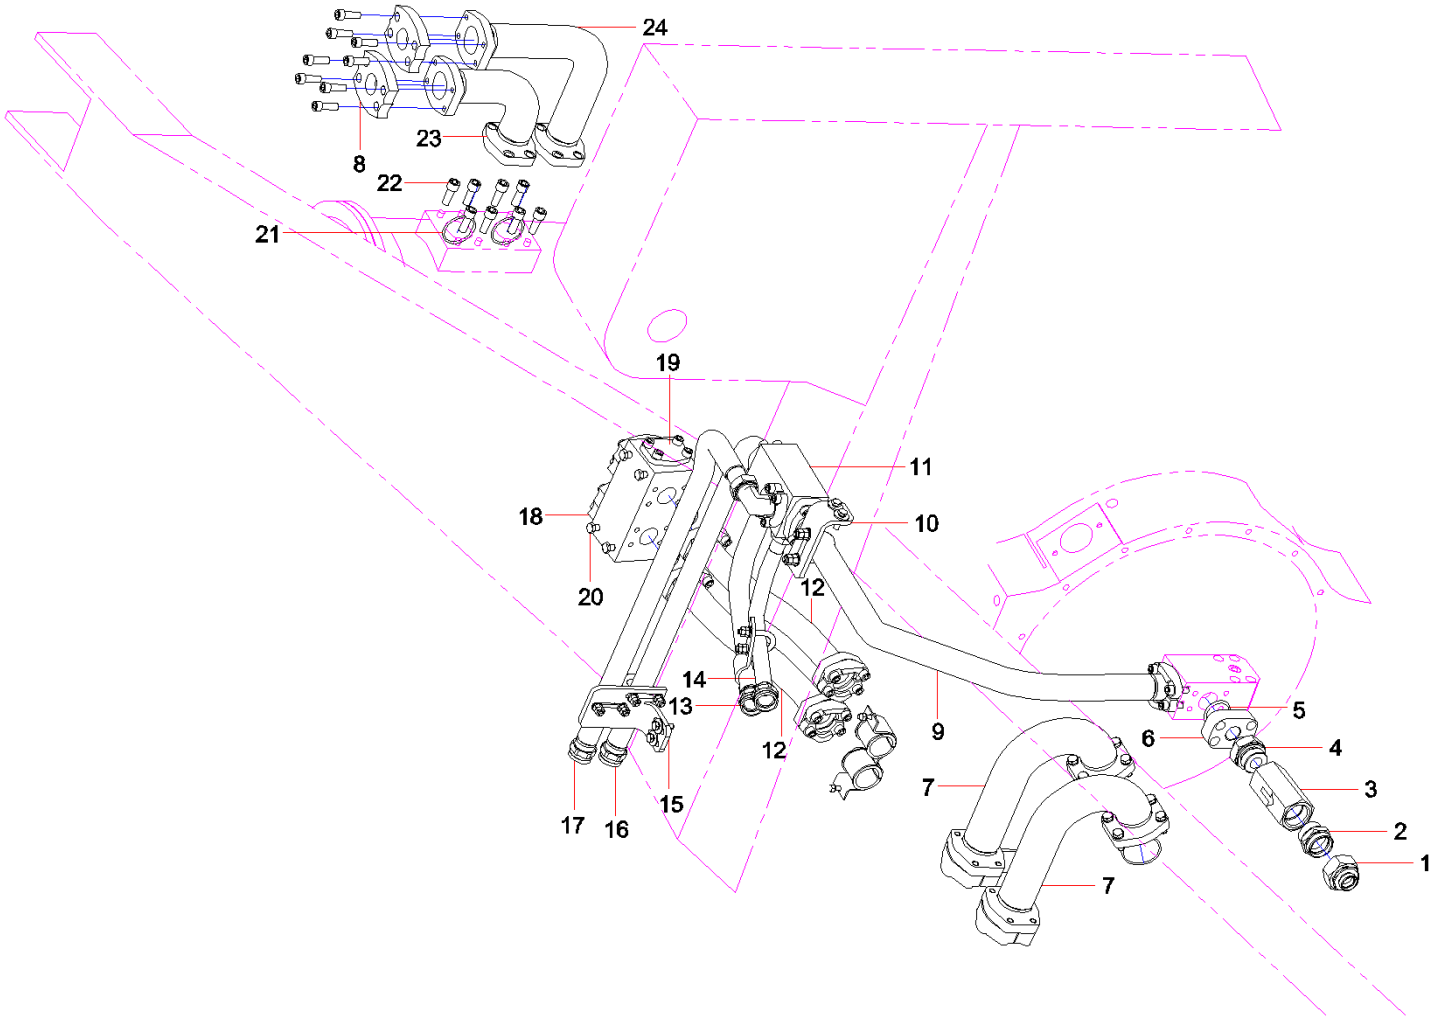
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	13427675	Steel pipe assembly SRT95C.613A.2	1	
2	13427710	Steel pipe assembly SRT95C.613A.3	1	
3	13427393	plate SRT95C.613A–12	1	
4	A229900006640	Clamp	2	
5	A210204000131	Screw	2	
6	B230101000647	O–Ring	6	
7	13427390	Flange SRT95C.613A–1	3	
8	21000745	Testing connector	5	
9	A229900004138	Pipe connector	1	
10	21002828	Pipe connector	2	
11	13299566	Flange SRT95C.613–6	1	
12	A210204000225	Screw	160	


24
23
8
22
21
19
11
18
10
20
12
14
13
12
9
5
6
4
7
3
2
1
15
17
16
7

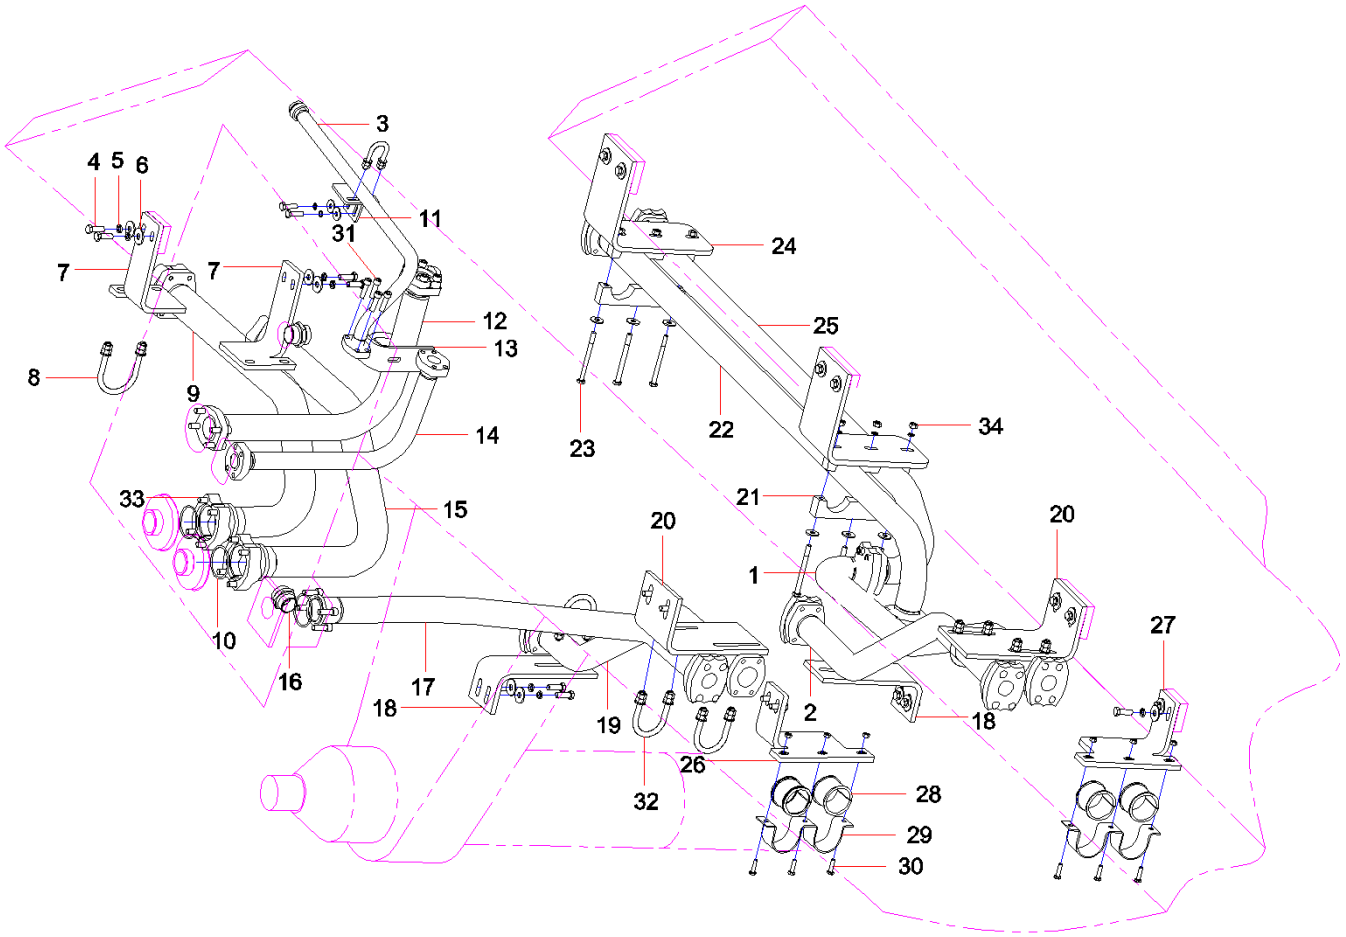
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	21015735	Fitting, pipe	1	
2	A210770000665	Pipe connector	1	
3	21022084	Valve, one–way	1	
4	13299551	Connector SRT95C.613–16	1	
5	13427396	Flange SRT95C.613A–15	1	
6	21007883	O–Ring	7	
7	13066764	Steel tube assembly	2	
8	B210780000741	Flange, split	41	
9	13427605	Steel pipe assembly SRT95C.613A.1	1	
10	13427401	Fixed seat SRT95C.613A–6	1	
11	13427400	Block SRT95C.613A–5	1	
12	12025552	Steel tube assembly	2	
13	13427687	Steel pipe assembly SRT95C.613A.6	1	
14	13427706	Steel pipe assembly SRT95C.613A.9	1	
15	13427403	Plate SRT95C.613A–8	1	
16	13427610	Steel pipe assembly SRT95C.613A.12	1	
17	13427612	Steel pipe assembly SRT95C.613A.13	1	
18	12025568	Confluent block unit	1	
19	13299439	Flange SRT95C.613–11	1	
20	A210111000331	Bolt	4	
21	A230101000628	O–ring 56.74 × 3.53AS568–228	4	
22	60011100	American–standard bolt	16	


24
23
8
22
21
19
11
18
10
20
12
14
13
12
9
5
6
4
7
3
2
1
15
17
16
7

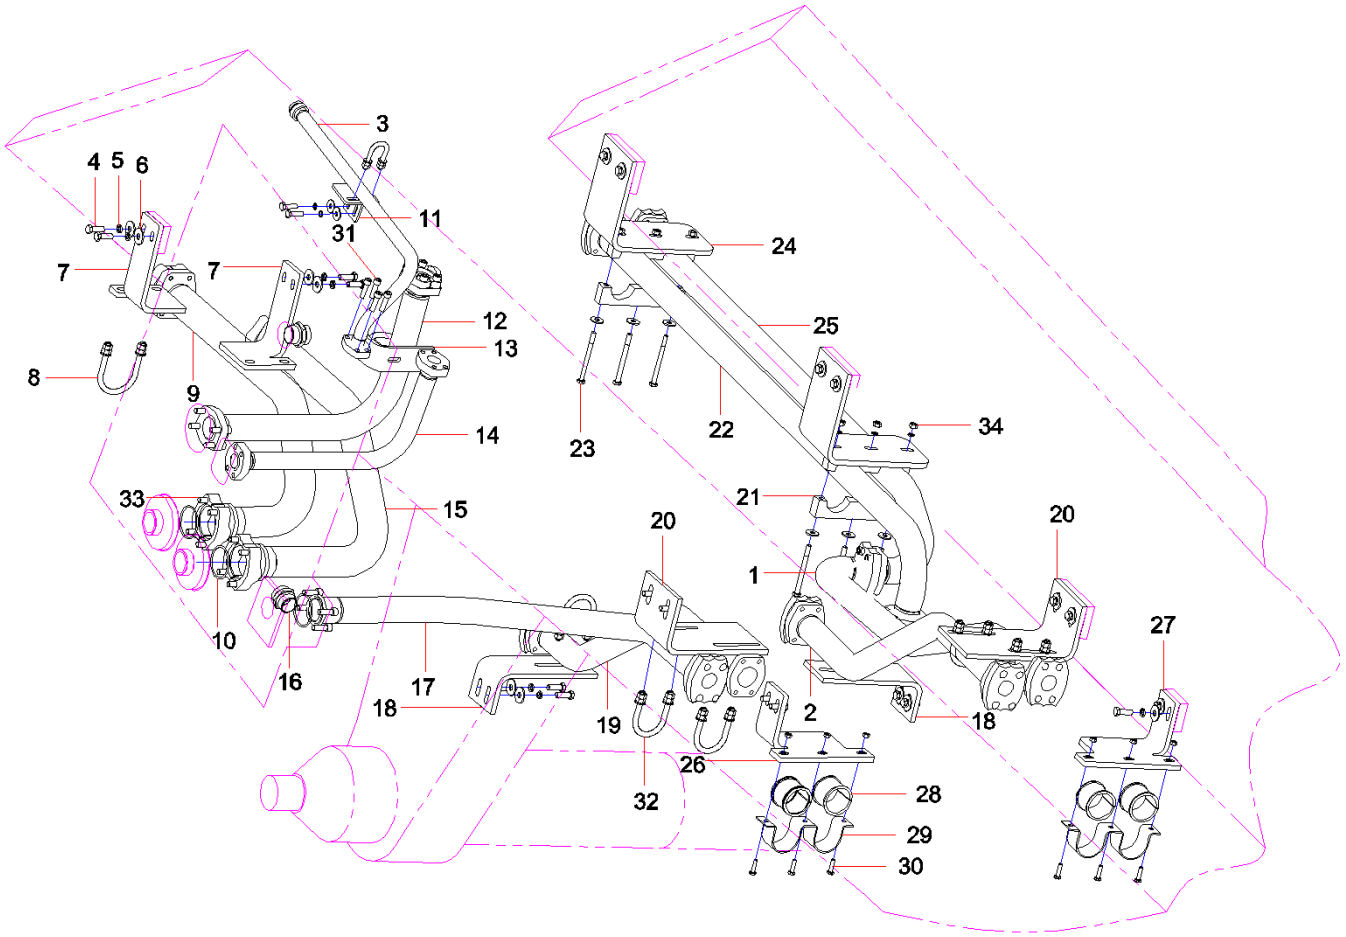
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	11654782	Steel tube assembly	1	
24	11654784	Steel tube assembly	1	


3
4
5
6
11
31
7
7
12
13
8
9
14
33
15
10
16
17
18
20
19
32
26
2
24
25
22
23
34
21
1
20
18
27
28
29
30

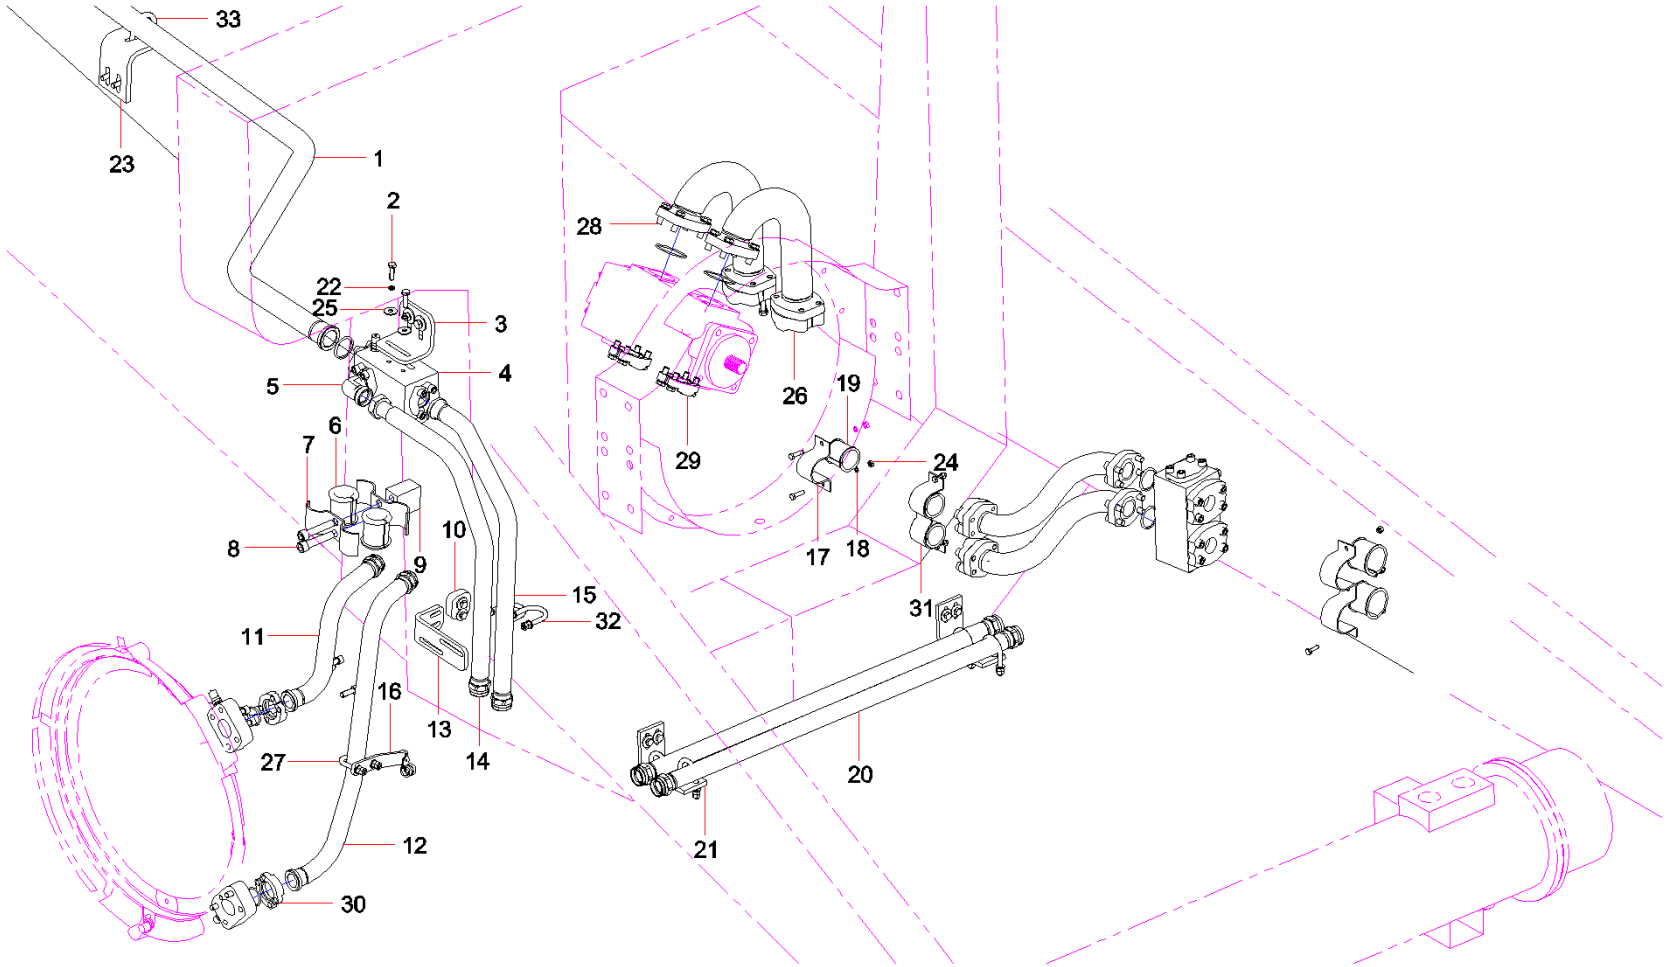
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	13299606	Steel Pipe Assy SRT95C.613.11	1	
2	13299967	Steel pipe assy STT95C.613.6	1	
3	13427607	Steel pipe assembly SRT95C.613A.11	1	
4	21005215	Bolt	32	
5	A210401000002	Washer	48	
6	A210404000004	Washer	24	
7	12954015	Pipe clamp seat	2	
8	60008277	U–CLAMP	2	
9	12954179	Steel pipe assy	1	
10	B230101002072	O–ring	4	
11	12953836	Pipe clamp seat	1	
12	13427624	Steel pipe assy SRT95C.613A.15	1	
13	12954020	Pipe clamp seat	1	
14	13299777	Steel pipe assy SRT95C.613.19	1	
15	12954177	Steel pipe assy	1	
16	21029888	Pipe connector	2	
17	13299973	Steel pipe assy SRT95C.613.9	1	
18	13299553	Plate SRT95C.613–3	2	
19	13299971	Steel pipe assy SRT95C.613.7	1	
20	13299552	plate SRT95C.613–2	2	
21	11653560	Clamp	4	
22	12954183	Steel tube assembly	1	


3
4
5
6
11
31
7
7
12
13
8
9
14
33
15
10
16
17
18
20
19
32
26
2
24
25
23
22
34
21
1
20
18
27
28
29
30

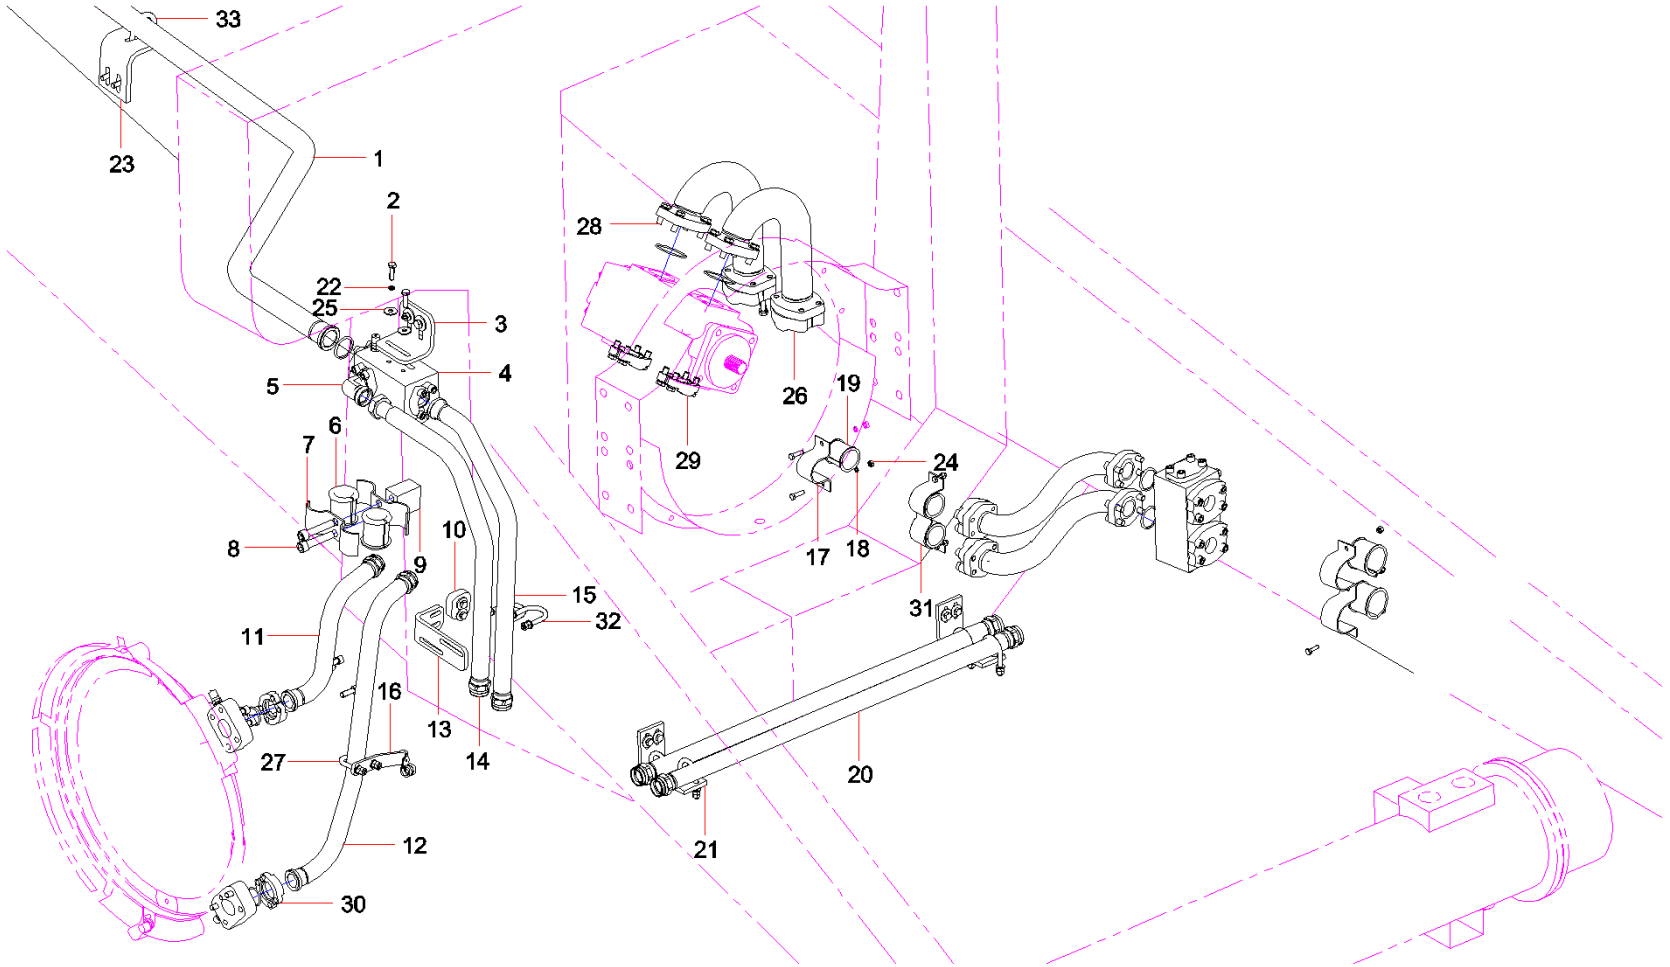
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	A210111000365	Bolt	6	
24	12954016	Plate	2	
25	12954181	Steel pipe assy.	1	
26	12954019	Left pipe clamp seat	1	
27	12954018	Right pipe clamp seat	1	
28	11082254	Rubber ring	15	
29	11644262	Pipe clamp	6	
30	A210111000293	Bolt	24	
31	A210204000197	Screw	4	
32	60008276	U–CLAMP	7	
33	A210204000226	Screw	24	
34	A210307000017	Nut	6	


33
23
1
2
22
25
3
4
5
6
7
8
9
10
15
32
11
16
13
14
27
12
30
28
29
26
19
24
17
18
31
20
21

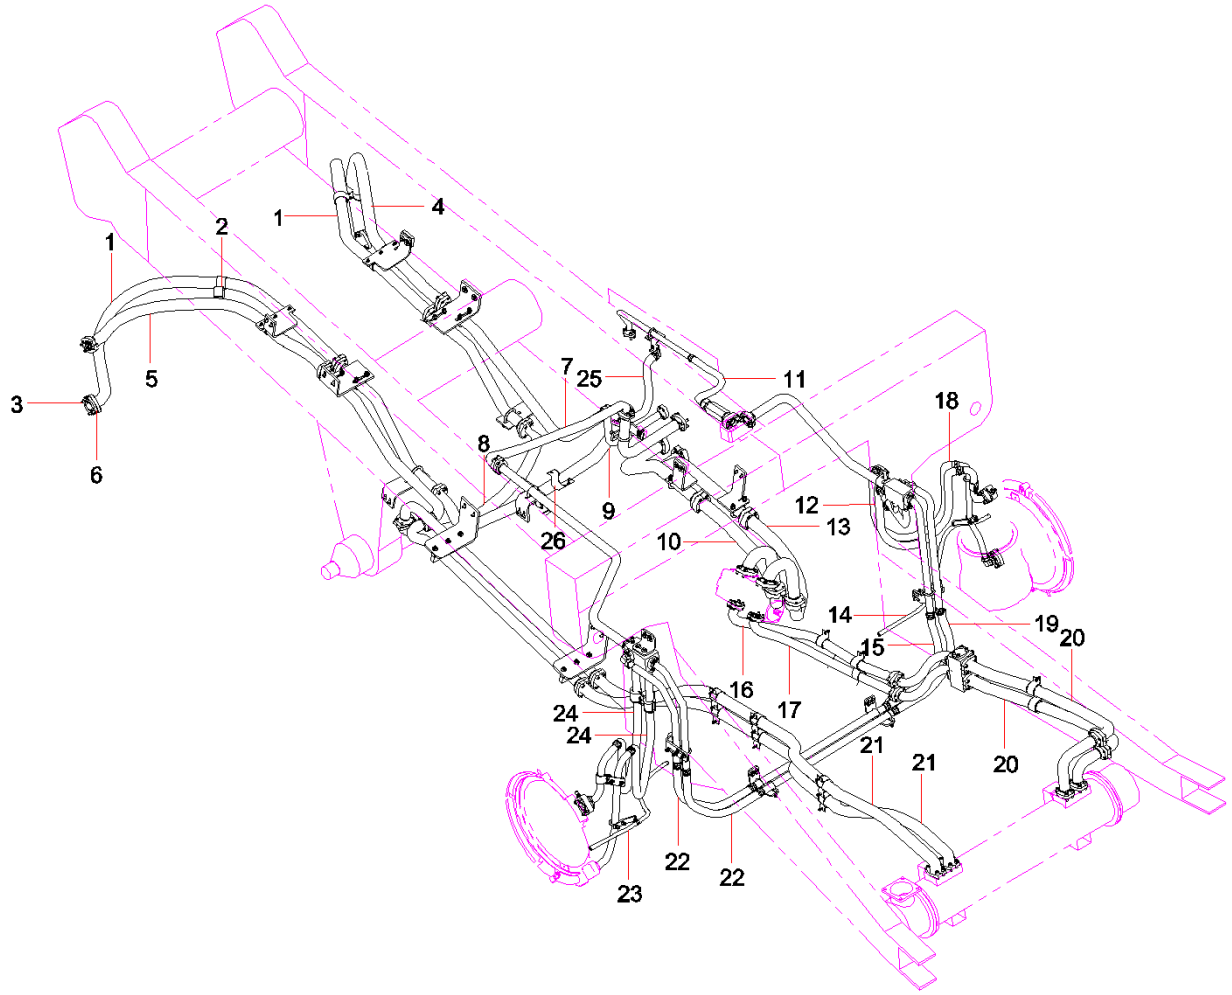
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	13427622	Steel pipe assembly SRT95C.613A.14	1	
2	21005185	Bolt	16	
3	13427399	Fixed seat SRT95C.613A–4	1	
4	13427398	Block SRT95C.613A–3	1	
5	A210770000614	Joint, flange, right–angle	2	
6	12961727	Tube clamp pad	2	
7	12961726	Clamp	2	
8	24000779	Screw	2	
9	13427404	Clamp bearer SRT95C.613A–9	1	
10	13427402	Fixed seat SRT95C.613A–7	1	
11	13427816	Steel pipe assembly SRT95C.613A.4	1	
12	13427683	Steel pipe assembly SRT95C.613A.5	1	
13	13427391	Fixed seat SRT95C.613A–10	1	
14	13427689	Steel pipe assembly SRT95C.613A.7	1	
15	13427691	Steel pipe assembly SRT95C.613A.8	1	
16	13427395	plate SRT95C.613A–14	1	
17	13075548	Pipe clamp	1	
18	A210401000017	Washer	24	
19	11082221	Rubber ring	3	
20	13427779	Steel pipe assembly SRT95C.613A.10	2	
21	13431894	Plate SRT95C.613A–16	2	
22	A210401000001	Washer	22	


33
23
1
2
22
25
3
4
5
6
7
8
9
10
15
32
11
16
13
14
27
12
30
28
29
26
19
24
17
18
31
20
21

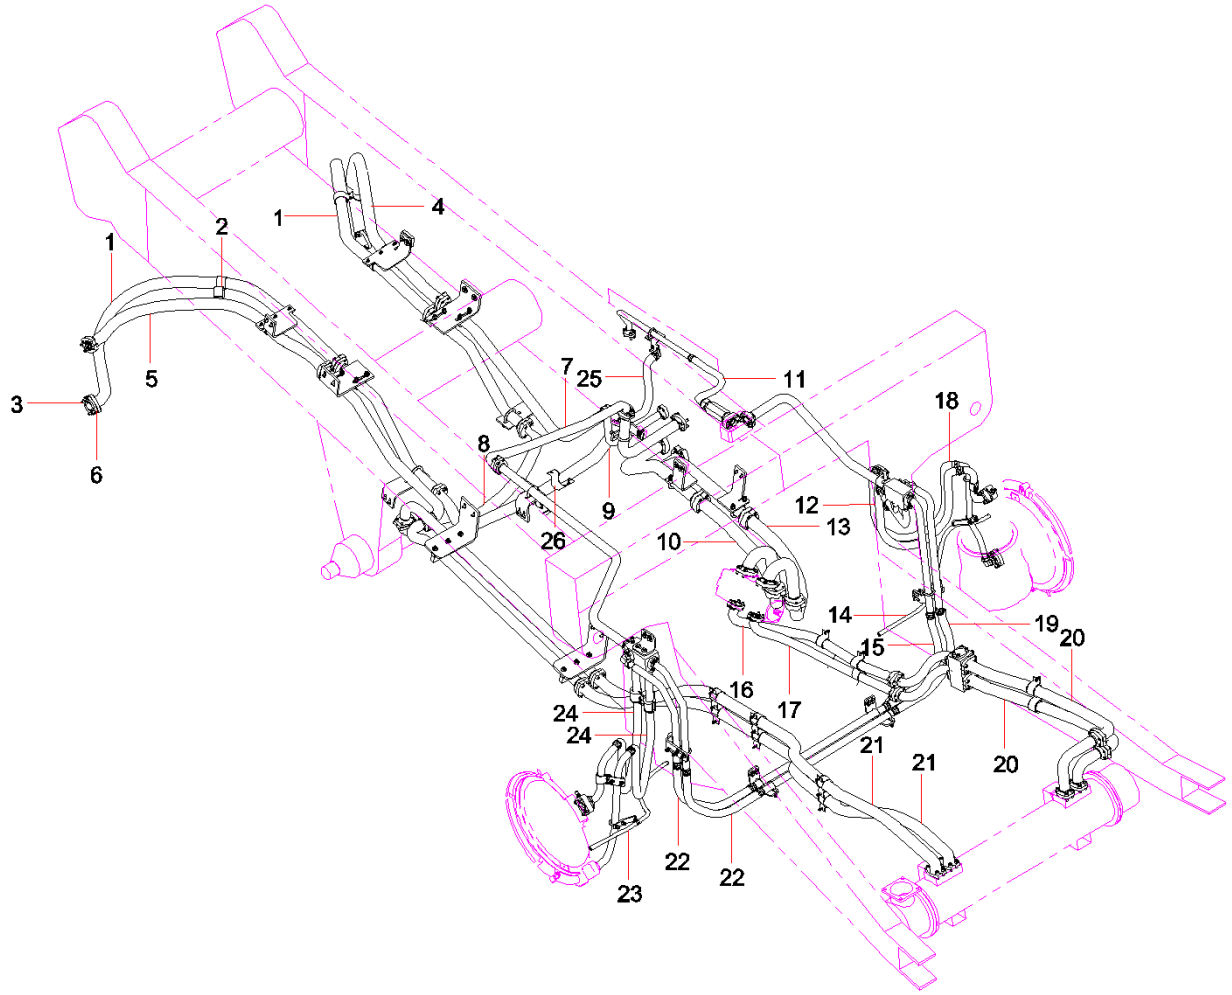
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	13299431	plate SRT95C.613–1	1	
24	A210307000055	Nut M8GB6170 Grade 10	24	
25	A210404000003	Washer	22	
26	60024155	Flange, SAE	12	
27	60008272	U–Clamp	2	
28	A210111000332	Bolt M12 × 40GB5783 12.9 grade	16	
29	B210780000249	Flange, SAE	15	
30	B210780000644	Flange, split	20	
31	11266123	Pipe clamp	1	
32	60008274	U–clamp	9	
33	60008275	U–clamp	2	


1
2
1
4
1
5
3
6
7
25
11
18
8
9
26
12
13
10
14
19
20
15
16
17
24
24
21
21
20
22
22
23

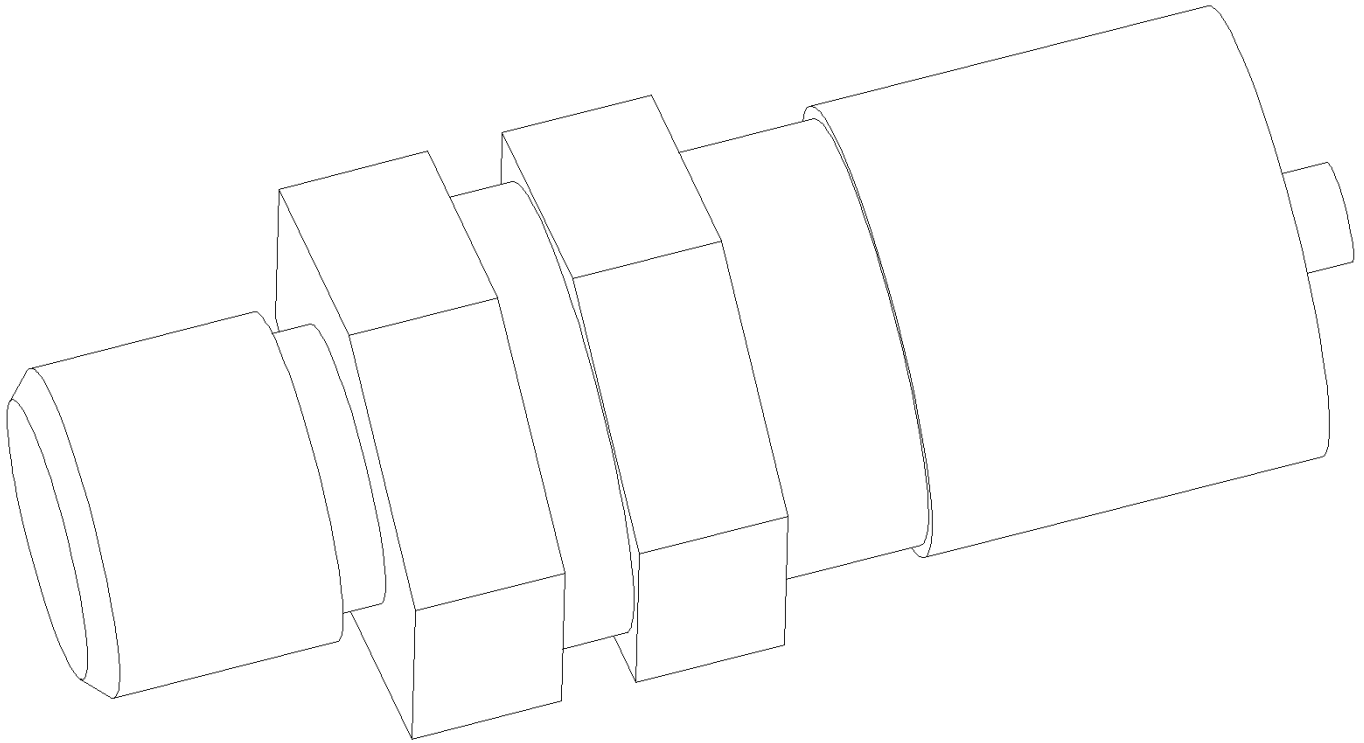
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60086946	Hose,rubber	1	
2	11082245	Clamp	6	
3	A210204000351	Screw	8	
4	60035743	Hose,rubber	1	
5	B230103005092	Rubber Hose	1	
6	12026181	Flange	2	
7	60265081	Rubber hose	1	
8	60234818	rubber hose	1	
9	60234820	rubber hose	1	
10	60234822	rubber hose	1	
11	B230103002218	Hose	1	
12	B230103001140	Hose, rubber	1	
13	60234821	Rubber hose	1	
14	B230103000336	Hose, rubber	1	
15	60029255	Hose	1	
16	B230103003630	Hose, rubber	1	
17	B230103001820	Hose, rubber	1	
18	B230103001070	Hose, rubber	1	
19	B230103003458	Hose	1	
20	60234815	rubber hose	2	
21	60105326	Hose assembly	2	
22	B230103000070	Hose, rubber	1	

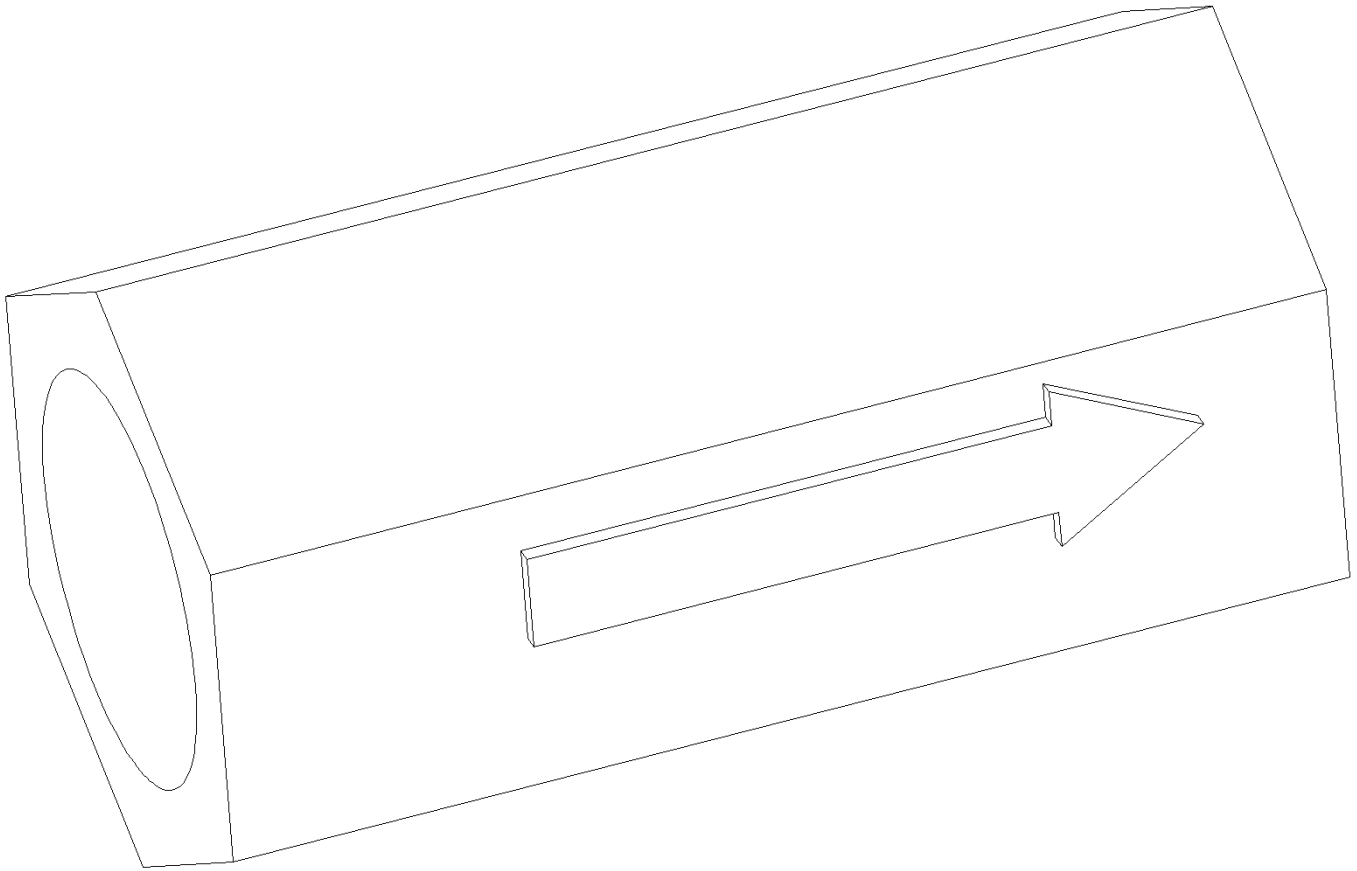

1
2
1
4
1
5
3
6
7
25
11
18
8
9
26
12
13
10
14
19
20
15
16
17
24
24
21
21
20
22
22
23

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	B230103000337	Rubber hose	1	
24	60040346	Hose	2	
25	60265082	Rubber hose	1	
26	12954164	Pipe clamp	1	

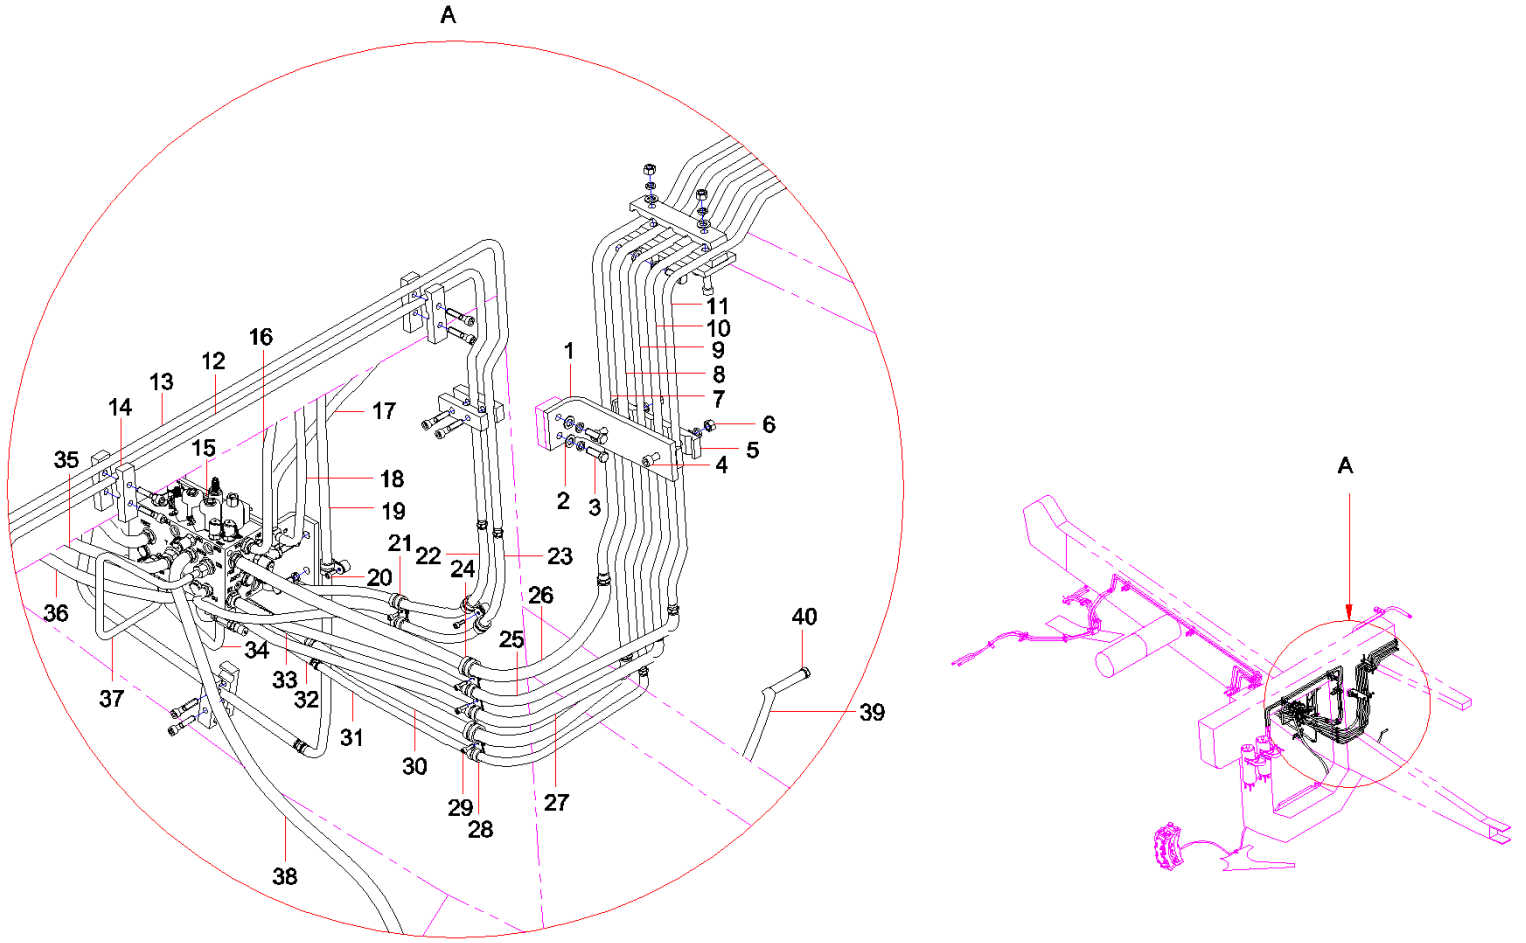


https://truckmanualshub.com/



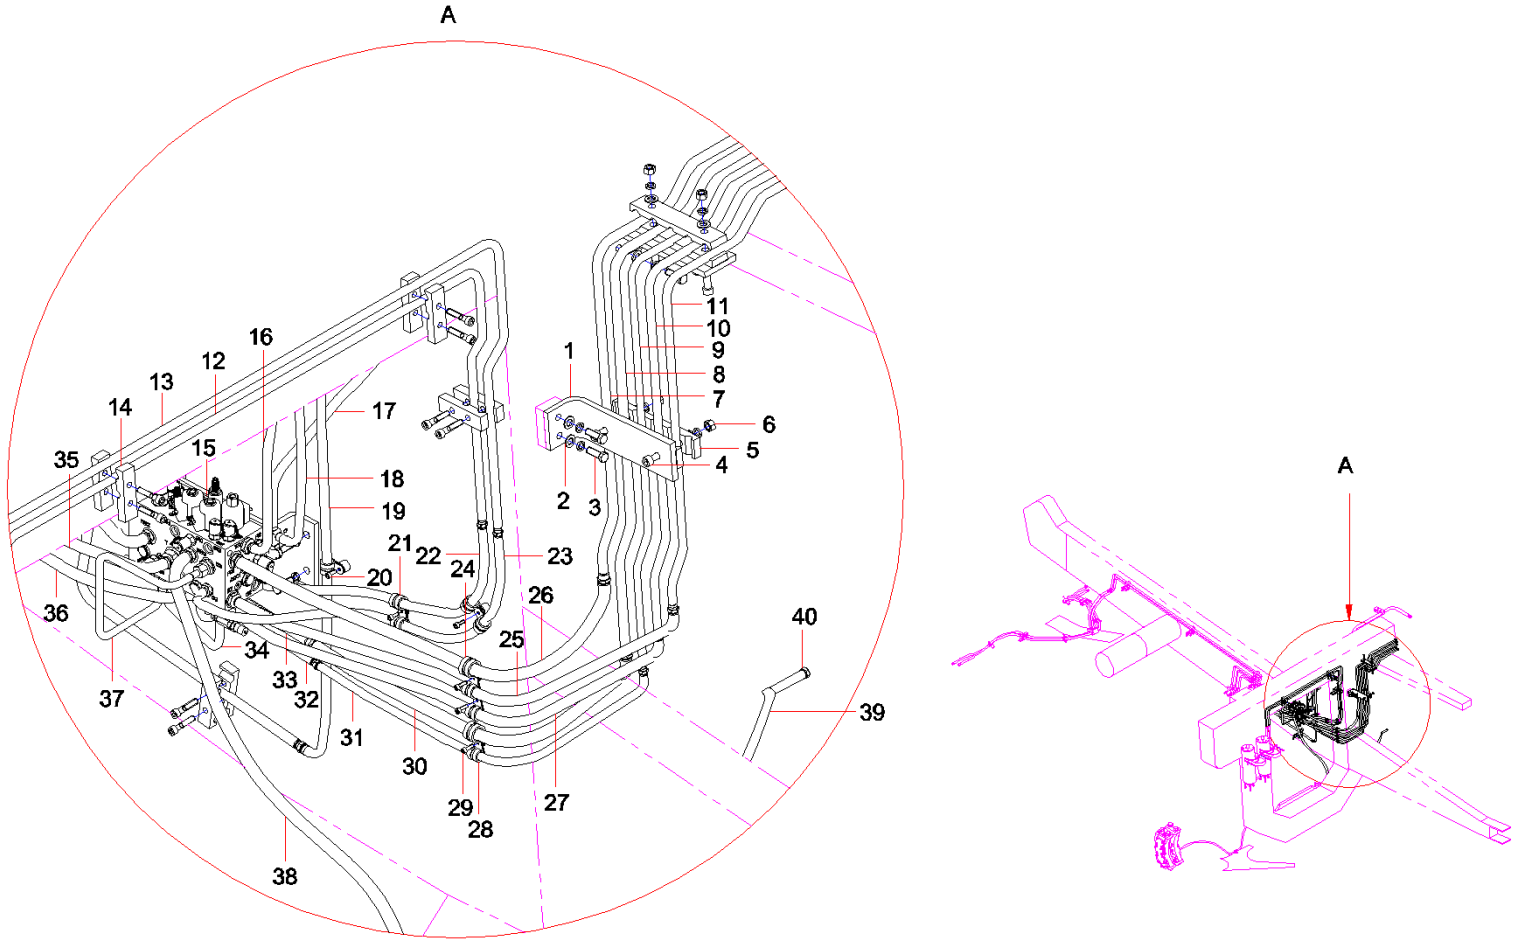
https://truckmanualshub.com/

Group 32
Brake pipeline and adaptor


A
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
A

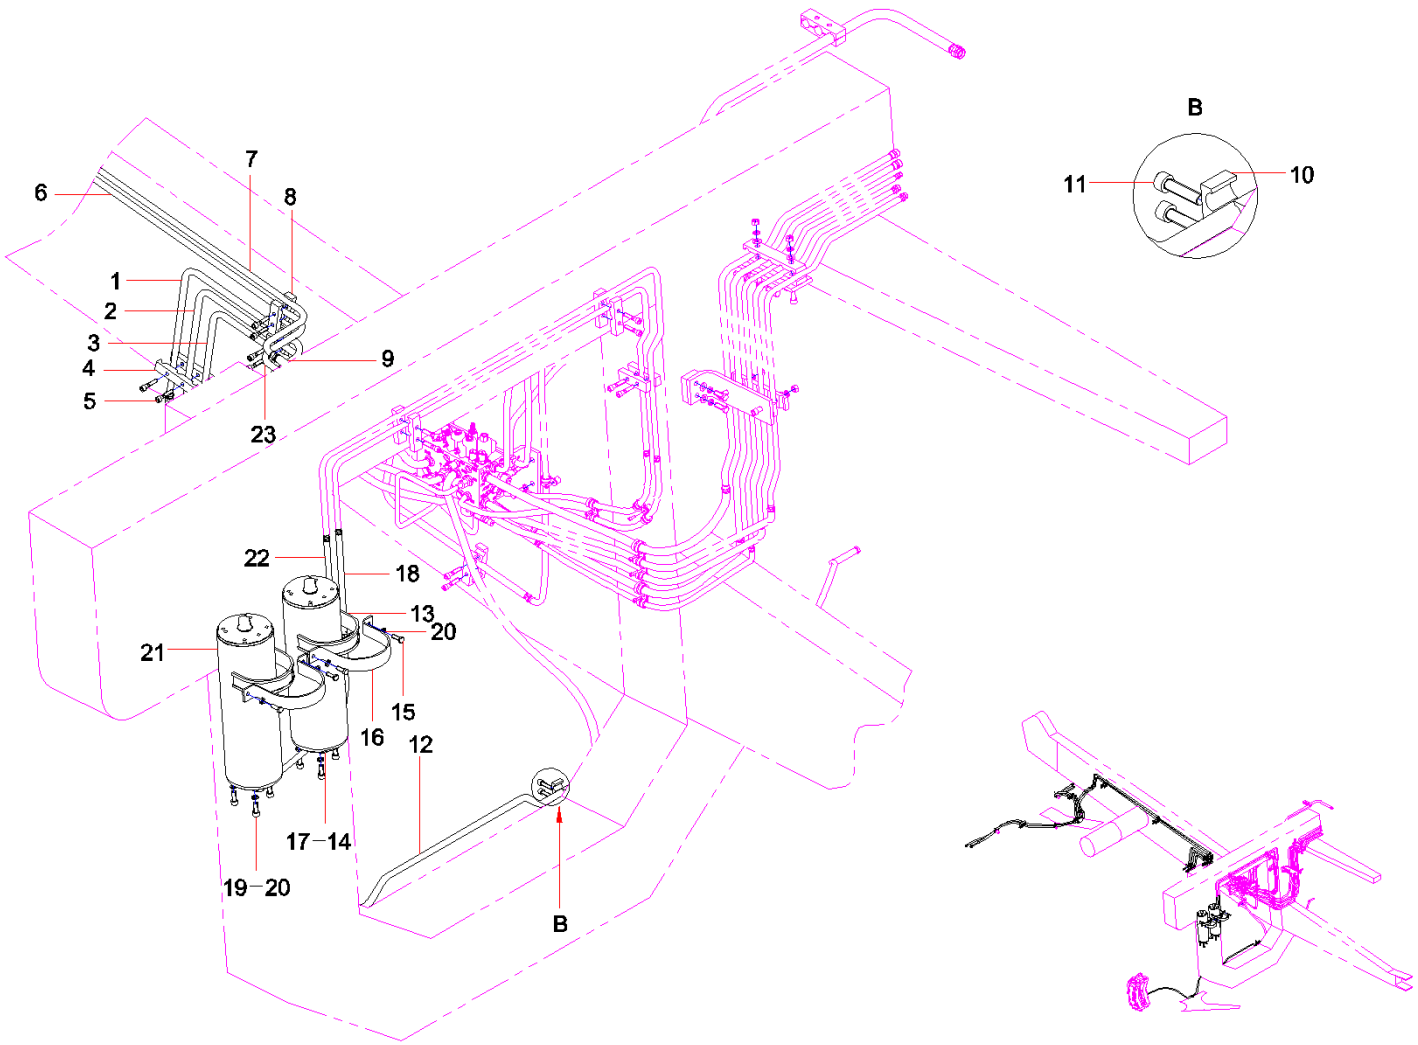
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12954325	Pipe clamp seat	2	
2	24000639	Washer 12GB97.1	8	
3	21005215	Bolt	8	
4	A210204000228	Screw	4	
5	12954326	Pipe nip	4	
6	A210307000001	Nut	4	
7	12954403	Steel tube assy.	1	
8	12954405	Steel tube assy.	1	
9	12954411	Steel tube assy.	1	
10	12954413	Steel tube assy.	1	
11	12954415	Steel tube assy.	1	
12	12954349	Steel tube assy.	1	
13	12954347	Steel tube assy.	1	
14	13078381	Pipe nip	6	
15	12954468	Brake valve group & adaptor installation	1	
16	60245345	Rubber hose	1	
17	60234831	rubber hose	1	
18	60245344	Rubber hose	1	
19	60234828	rubber hose	1	
20	A210204000130	Screw	4	
21	A229900006640	Clamp	11	
22	B230103000453	Hose, rubber	1	


A
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
A

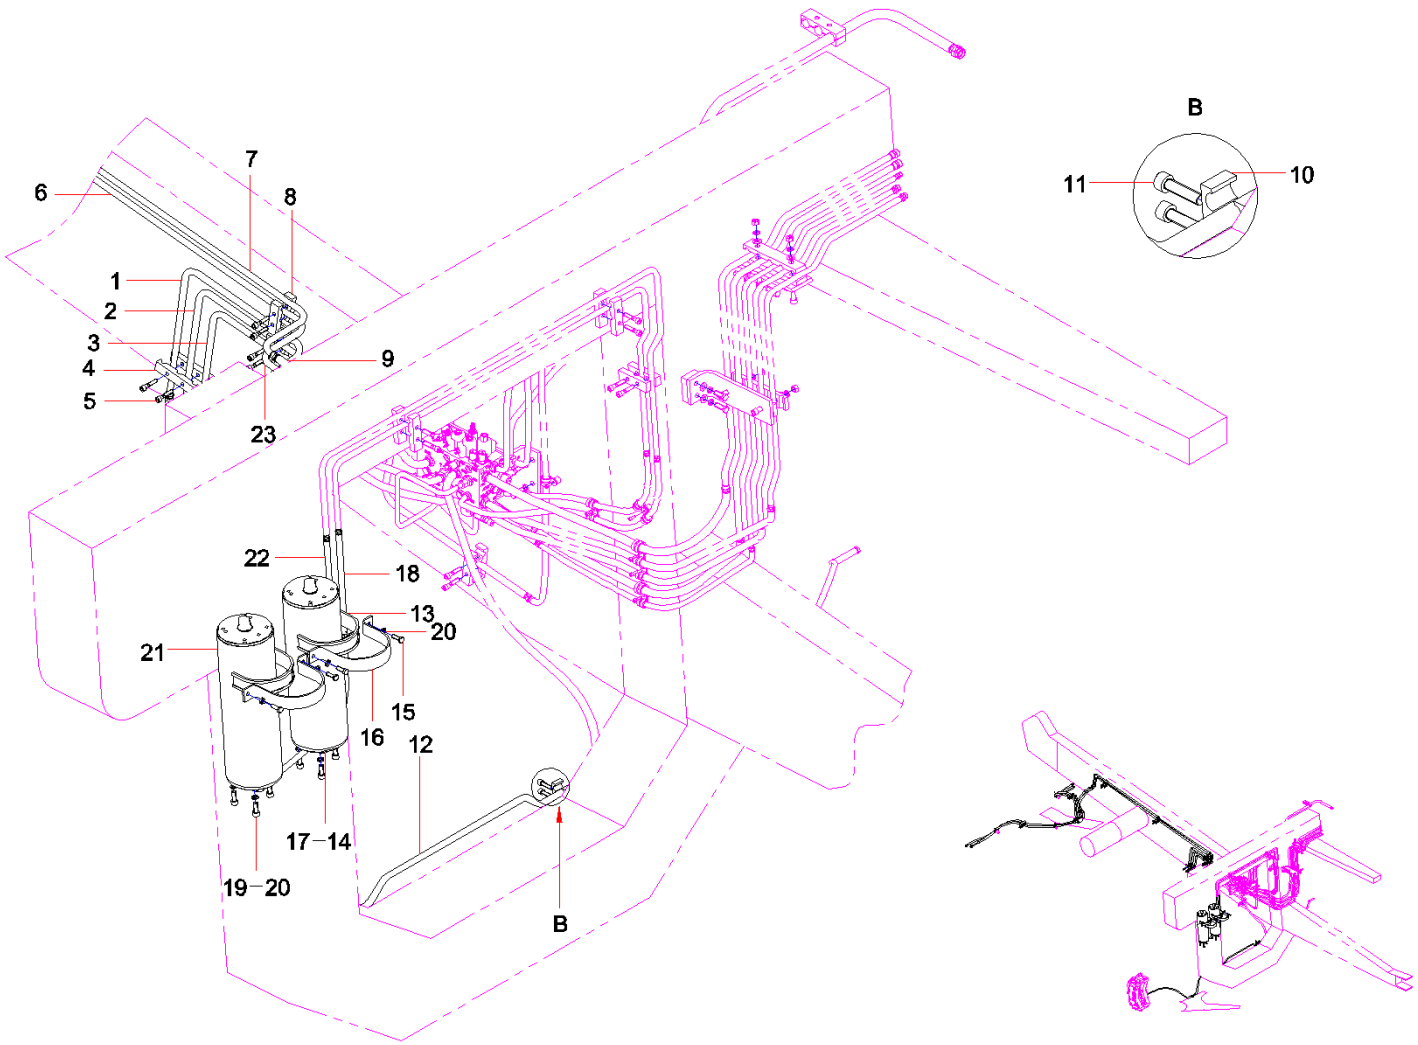
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	B230103003858	Hose, rubber	1	
24	60000421	Pipe clamp	10	
25	B230103005317	Rubber Hose	1	
26	B230103008029	Hose,rubber	1	
27	60234829	rubber hose	1	
28	60016761	Pipe clamp	1	
29	A210204000131	Screw	9	
30	60234832	rubber hose	1	
31	60088695	Hose	1	
32	12954351	Steel tube assy.	1	
33	12954452	Steel tube assy.	1	
34	12954375	Steel tube assy.	1	
35	B230103002444	Hydraulic Hose Assembly	1	
36	B230103001183	Hose	1	
37	12954364	Steel tube assy.	1	
38	B230103008185	Hose,rubber	1	
40	B210780001048	Connector, pipe	2	


B
11
10
7
6
8
1
2
3
4
5
9
23
22
18
13
20
21
15
16
12
17-14
19-20
B

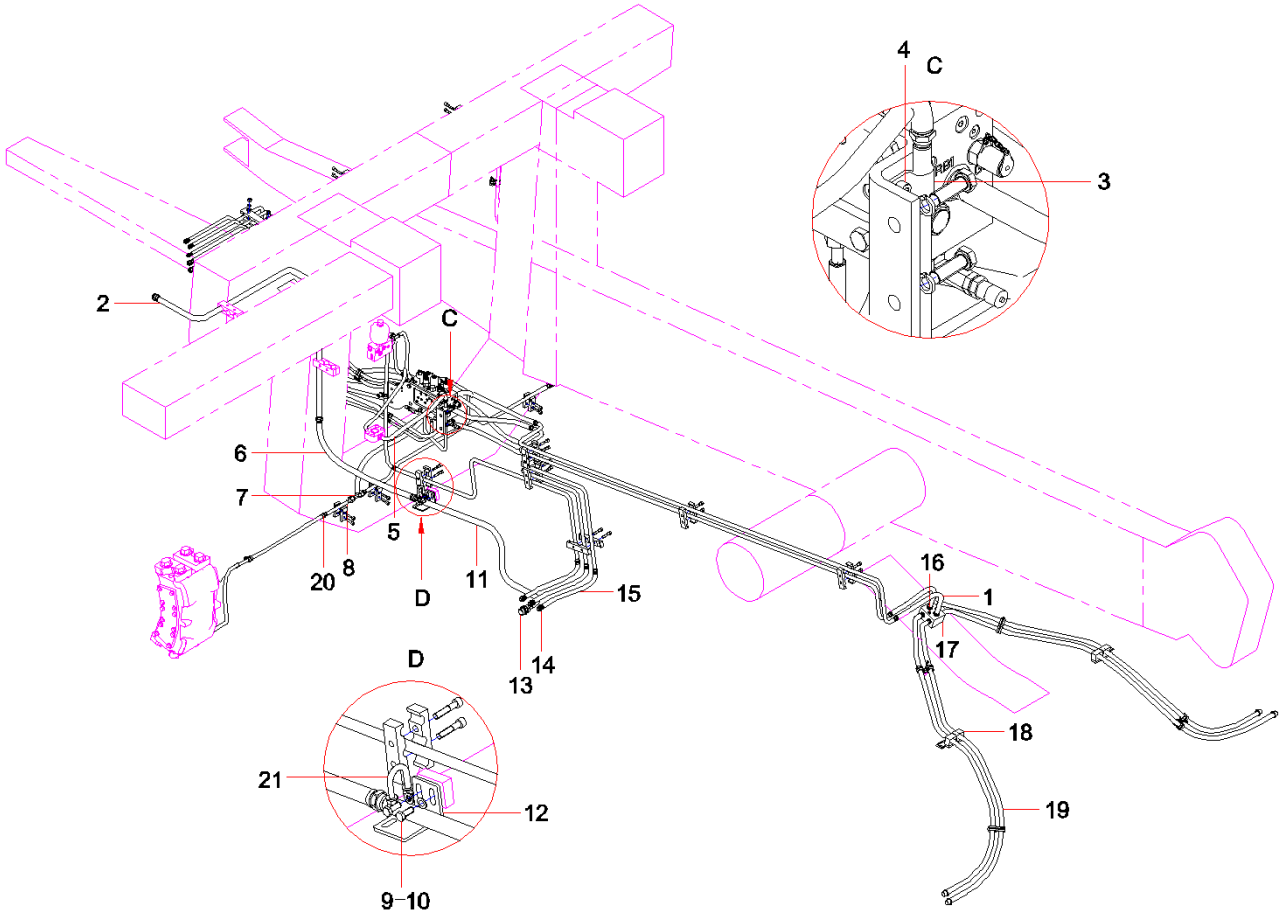
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12954343	Steel tube assy.	1	
2	12954345	Steel tube assy.	1	
3	12954401	Steel tube assy.	1	
4	12954328	Pipe nip	2	
5	A210204000356	Screw	18	
6	12954419	Steel tube assy.	1	
7	12954417	Steel tube assy.	1	
8	12025449	Clamp	10	
9	B230103004028	Hose, rubber	1	
10	12954327	Pipe nip	6	
11	A210204000355	Screw	6	
12	12954377	Steel tube assy.	1	
13	12877280	Rubber Pad	2	
14	B210780001246	Connector, pipe	2	
15	A210111000024	Bolt	4	
16	12877468	Energy Storage Thimble	2	
17	21002823	Pipe connector	2	
18	B230103003877	Hose, rubber	1	
19	A210204000337	Screw	6	
20	24000513	Washer 12GB93 DACROMET	22	
21	60211733	Piston type accumulator	2	
22	B230103000461	Hose, rubber	1	


B
11
10
6
7
8
1
2
3
4
5
9
23
22
18
13
20
21
15
16
12
17-14
19-20
B

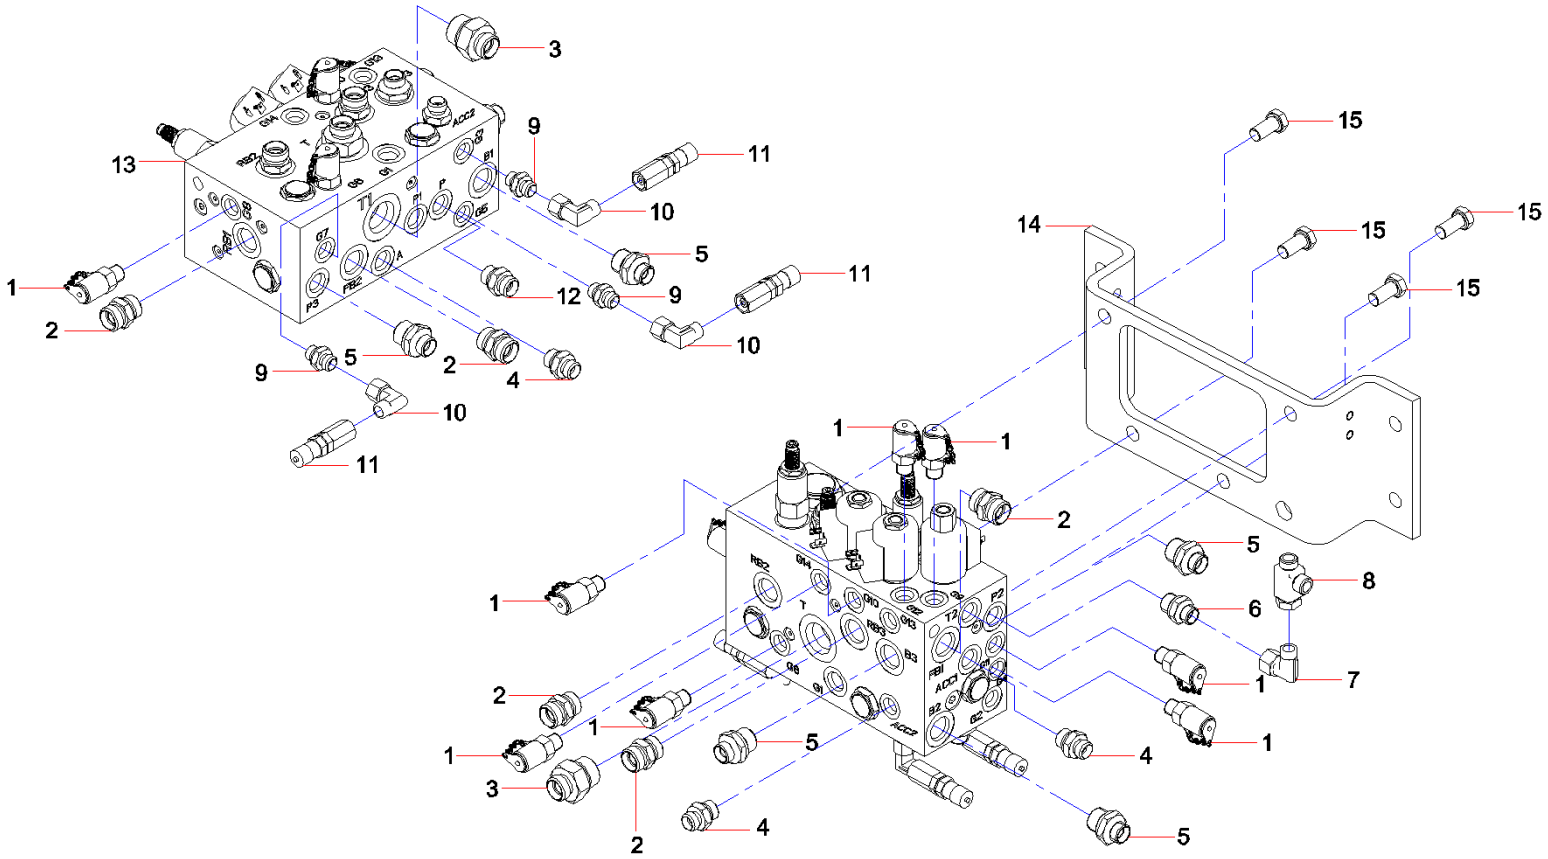
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	60035748	Rubber Hose	1	


4
C
3
2
C
6
7
5
20
8
D
11
15
16
1
17
14
13
D
18
21
12
19
9-10

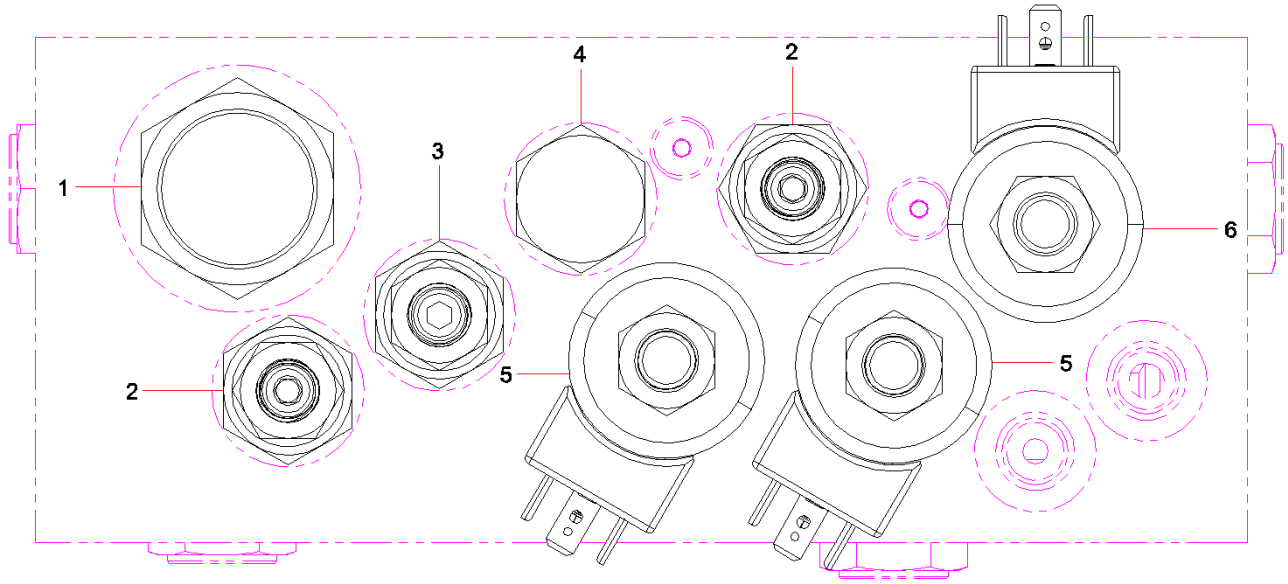
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B230103007874	Hose,rubber	2	
2	13304560	Steel tube assembly SRT95C.613.25	1	
3	12954466	Bent plate	1	
4	A210204000220	Screw	2	
5	60097870	Hose	1	
6	21030908	Hose, rubber	1	
7	B210780000017	Pipe connector	1	
8	12954379	Steel tube assy.	1	
9	A210111000197	Bolt	2	
10	24000637	Washer	2	
11	12954445	Steel tube assy.	1	
12	12953836	Pipe clamp seat	1	
13	21002827	Pipe connector	1	
14	21002822	Pipe connector	3	
15	23000800	Hose,rubber	3	
16	A210204000151	Screw	2	
17	12954450	Assembly of brake distributor block	1	
18	B210851000004	Clamp, single pipe	4	
19	B230103003970	Hose, rubber	4	
20	B210780000684	Connector, pipe	2	
21	60008272	U–Clamp	1	


3
13
9
11
10
5
1
12
9
11
2
10
5
2
9
4
10
11
15
14
15
15
15
1
1
2
5
8
6
1
7
1
1
5
4
2
1
3
2
4
5

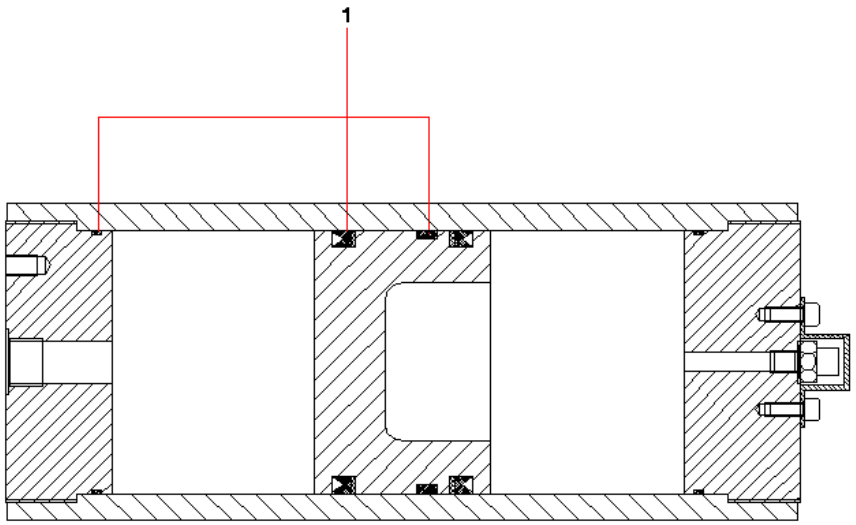
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	B210770000003	Connector, pressure measuring	8	
2	21002822	Pipe connector	5	
3	21002823	Pipe connector	2	
4	21002819	Pipe connector	3	
5	21008338	Fitting, pipe	5	
6	B210780000177	Connector, pipe	1	
7	B210780000636	Pipe connector	1	
8	B210780000015	Connector, pipe	1	
9	21002815	Pipe connector	3	
10	B210780000418	Connector, pipe	3	
11	B210770000002	Pressure–measuring Connector	3	
12	B210780000180	Connector, pipe	1	
13	60189516	Brake valve group	1	
14	12954467	Bent plate	1	
15	A210111000101	Bolt	4	


1
2
3
4
2
5
5
6

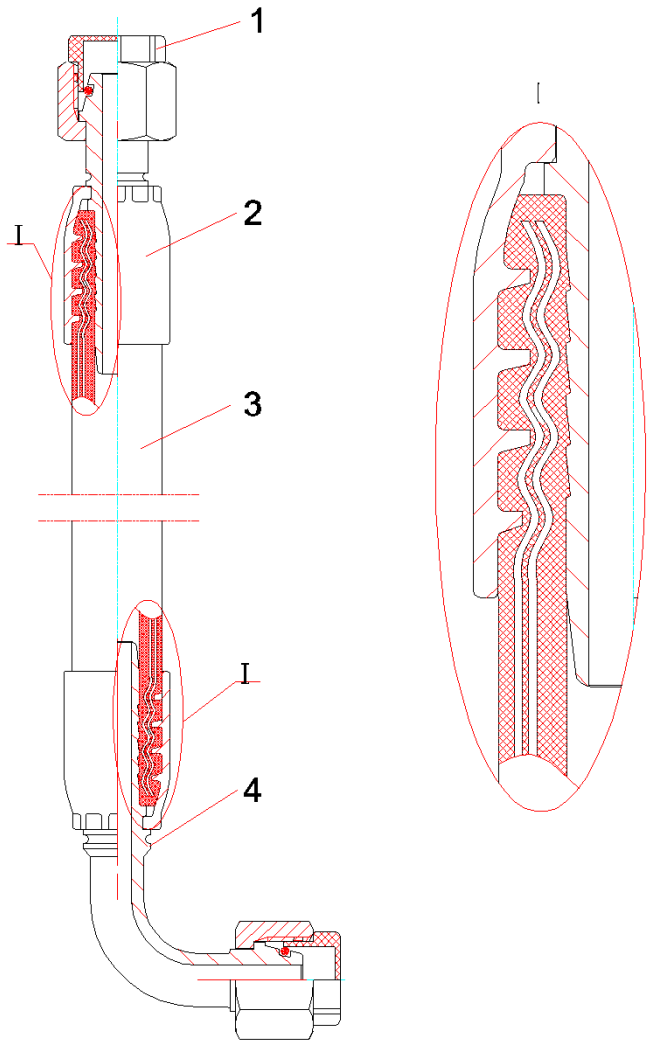
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60046289	High pressure filter	1	
2	B220401000920	Reduce valve	2	
3	60072697	Relief valve	1	
4	24004232	Valve,cartridge	1	
5	B220401000301	Directional valve with solenoid	1	
6	60208509	Porprotional reduce valve	1	


1

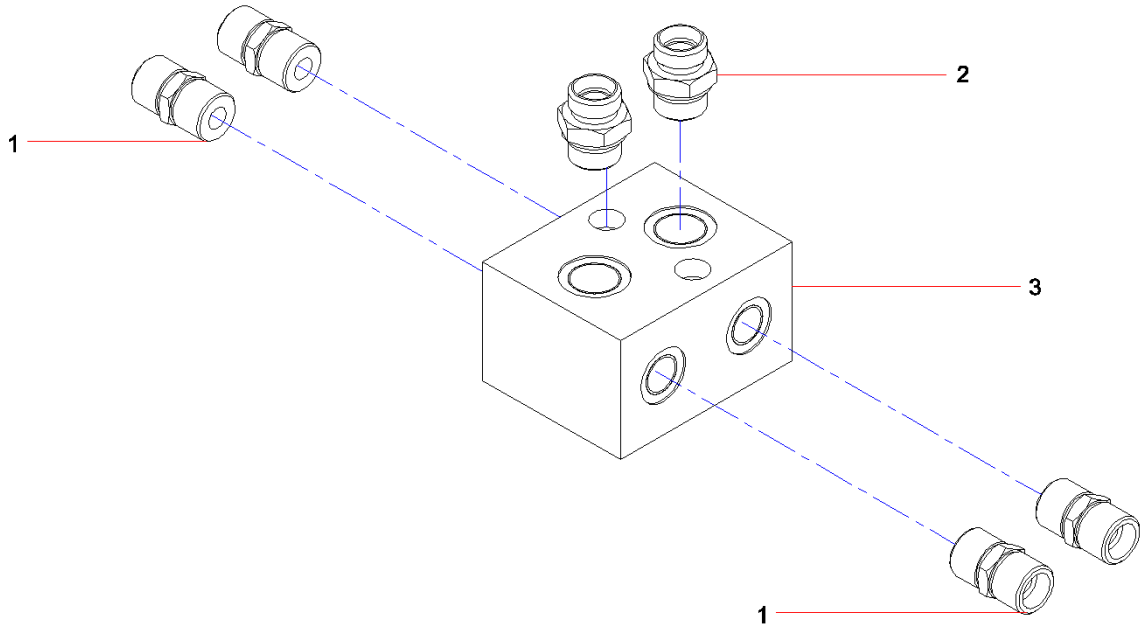
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60211735	Energy storage repair kit	1	


1
2
I
3
I
4
I

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60218179	Plastic cover	2	
2	B229900004145	Connector, rubber hose	1	
3	12897825	Hose, rubber	1	
4	B229900004147	Connector, rubber hose	1	


1
2
3
1

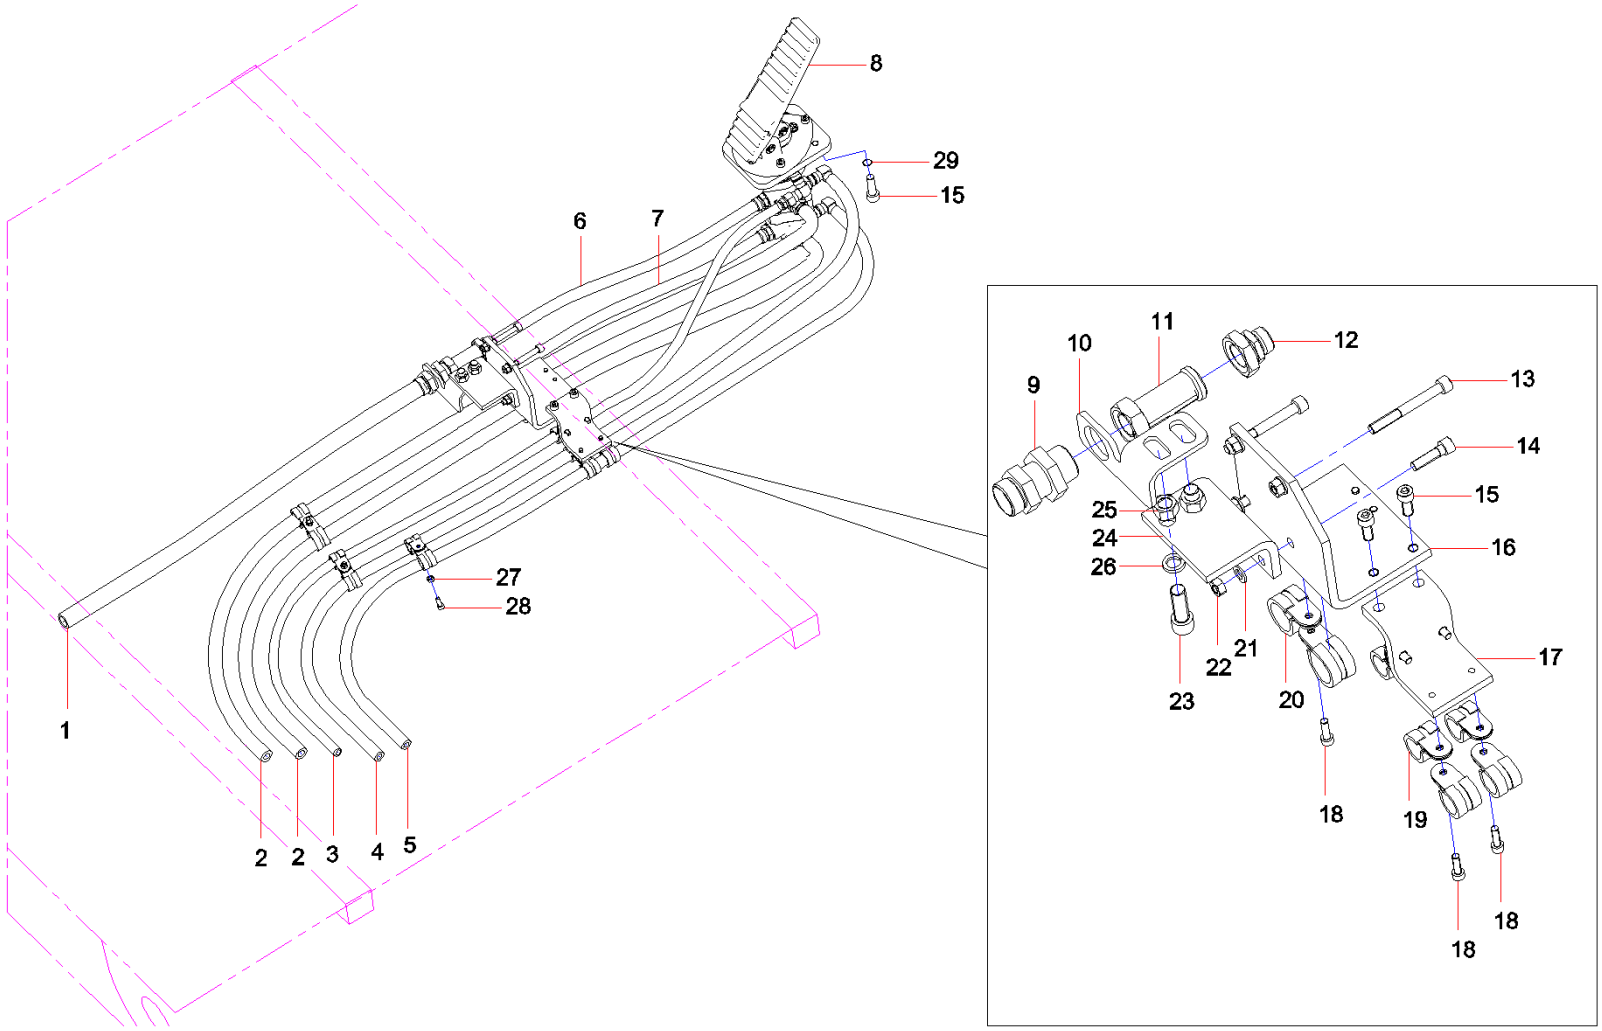
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	21002852	Pipe connector	4	
2	21002850	Pipe connector	2	
3	10704067	Rear braking Oil–separating block	1	

https://truckmanualshub.com/

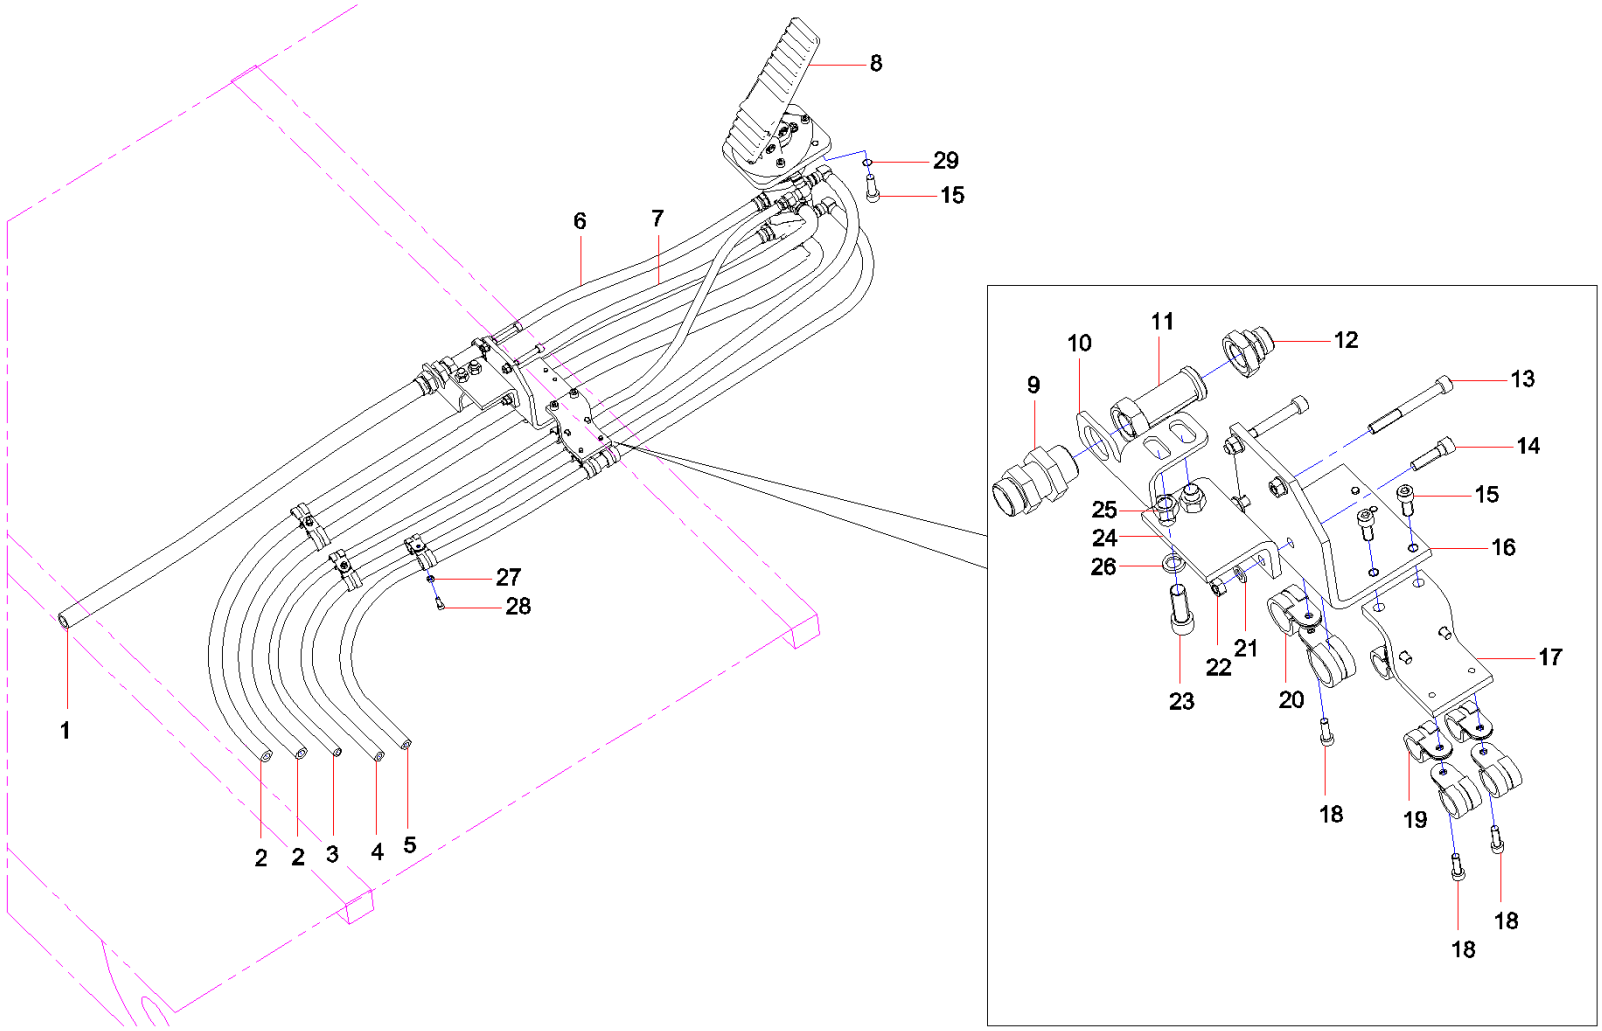
https://truckmanualshub.com/

Group 33
Brake pipeline and adaptor SRT95C.615A


8
29
15
6
7
27
28
1
2
2
3
4
5
11
10
12
9
13
14
15
25
24
16
26
21
22
17
23
20
18
19
18
18

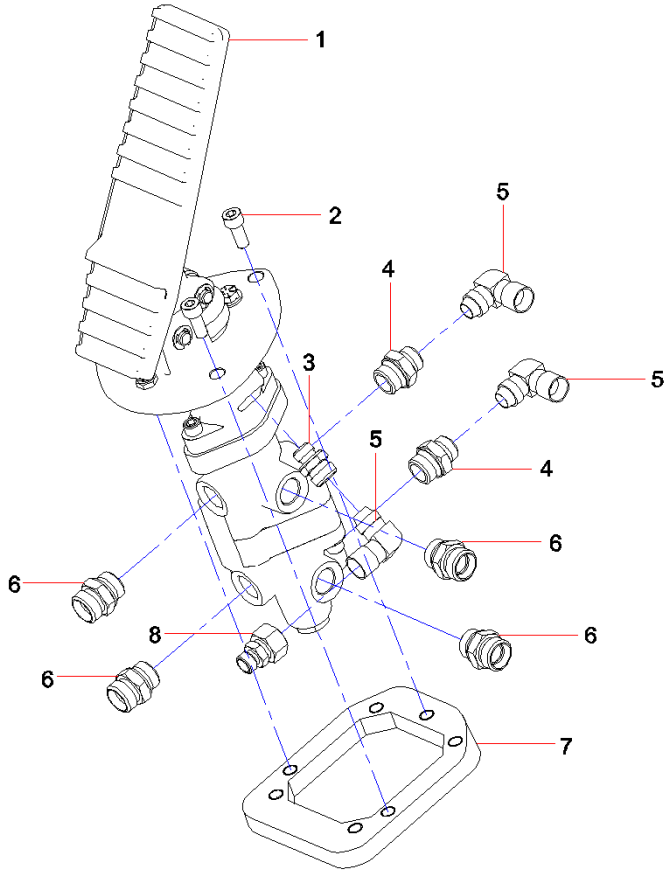
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	21030908	Hose, rubber	1	
2	B230103001399	Hose	2	
3	B230103004592	Hose, rubber	1	
4	B230103000317	Hose, rubber	1	
5	B230103003861	Hose, rubber	1	
6	B230103006181	Hose, rubber	1	
7	60235608	Rubber hose	1	
8	13237985	Foot–operated valve adaptor installation	1	
9	21008336	Connector, pipe	1	
10	13231478	Fixed plate SRT95C.615A–1	1	
11	A229900004359	Connector, pipe	1	
12	21028317	Pipe connector	2	
13	A210204000151	Screw	2	
14	A210204000164	Screw	2	
15	A210204000220	Screw	6	
16	12951577	Bent plate	1	
17	12951578	Bent plate	1	
18	21005074	Screw	6	
19	A229900006640	Clamp	10	
20	A229900006641	Pipe nip	6	
21	A210405000007	Washer	4	
22	A210307000012	Nut	4	


8
29
15
6
7
27
28
1
2
2
3
4
5
11
10
12
9
13
14
15
25
24
16
26
21
22
17
23
20
18
19
18
18

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	A210204000206	Screw	2	
24	12952834	Bent plate	1	
25	A210307000001	Nut	2	
26	A210401000002	Washer	2	
27	A210307000016	Nut	3	
28	A210204000130	Screw	3	
29	A210401000017	Washer	4	


1
2
5
4
3
5
5
4
6
6
8
6
6
7

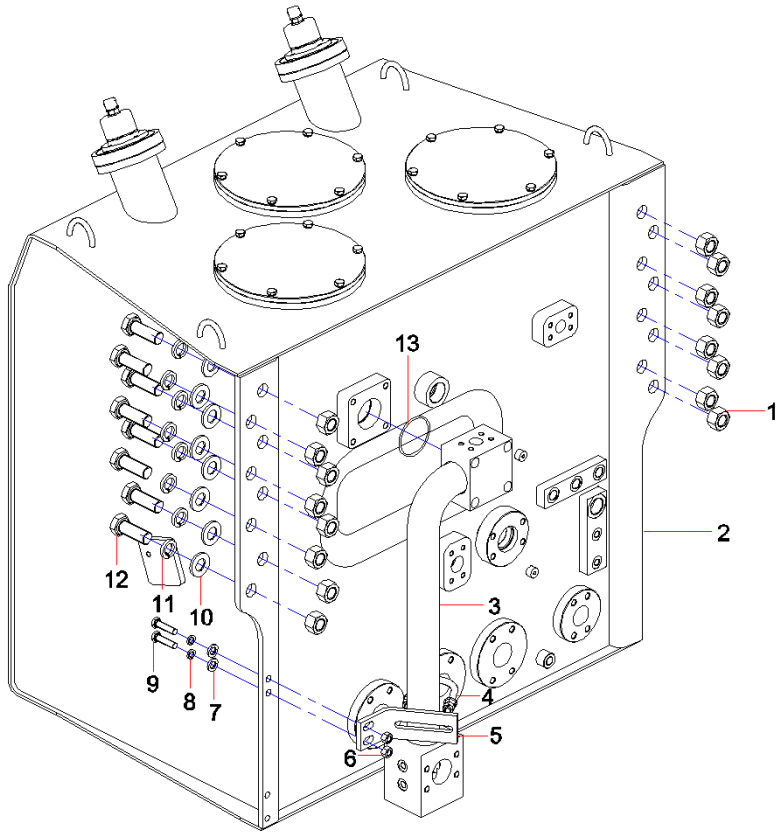
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60197325	pedal valve	1	
2	A210204000341	Screw	3	
3	21004266	Pipe connector	1	
4	21021532	Connector, pipe	2	
5	A229900003506	Pipe connector	3	
6	21024284	Pipe connector	4	
7	13271613	Transition plate SRT95C.615A.1–3	1	
8	21027304	Pipe connector	1	

https://truckmanualshub.com/

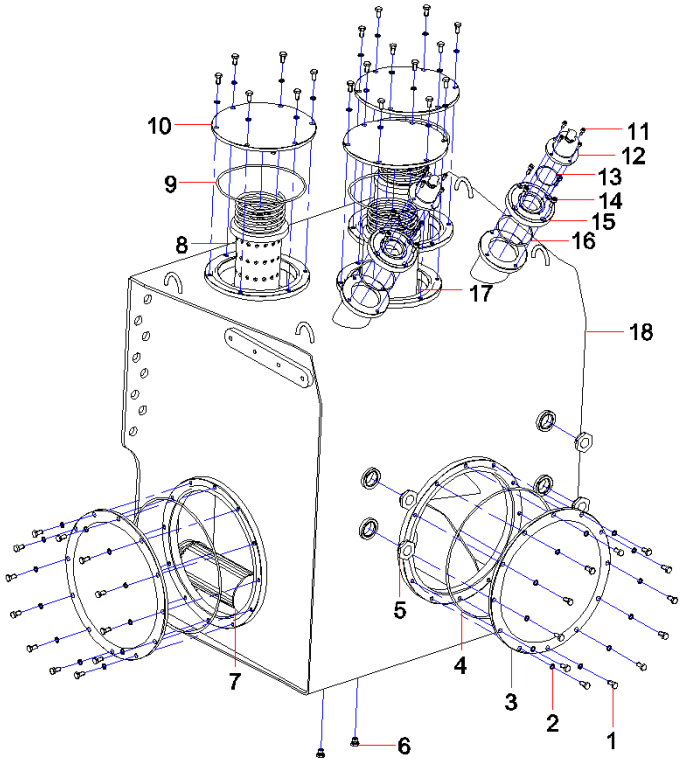
https://truckmanualshub.com/

Group 34
Hydraulic oil tank installation SRT95C.6


13
1
2
12
11
10
3
9
8
7
4
5
6

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210307000007	Nut M24GB6170 Grade 10	16	
2	13294564	Hydraulic fuel tank assy. SRT95C.641.1	1	
3	13294588	Steel tube assembly SRT95C.641.2	1	
4	60008276	U–CLAMP	1	
5	13294562	Bent plate SRT95C.641–1	1	
6	A210307000031	Nut	2	
7	A210491000121	Washer	2	
8	A210401000002	Washer	2	
9	A210111000119	Bolt	2	
10	A210491000122	Washer	16	
11	A210401000008	Washer	16	
12	21051125	Bolt M24 × 65GB5783 Grade 10.9	16	
13	A210609000077	O–ring	1	


10
9
8
11
12
13
14
15
16
17
18
5
4
3
2
1
7
6

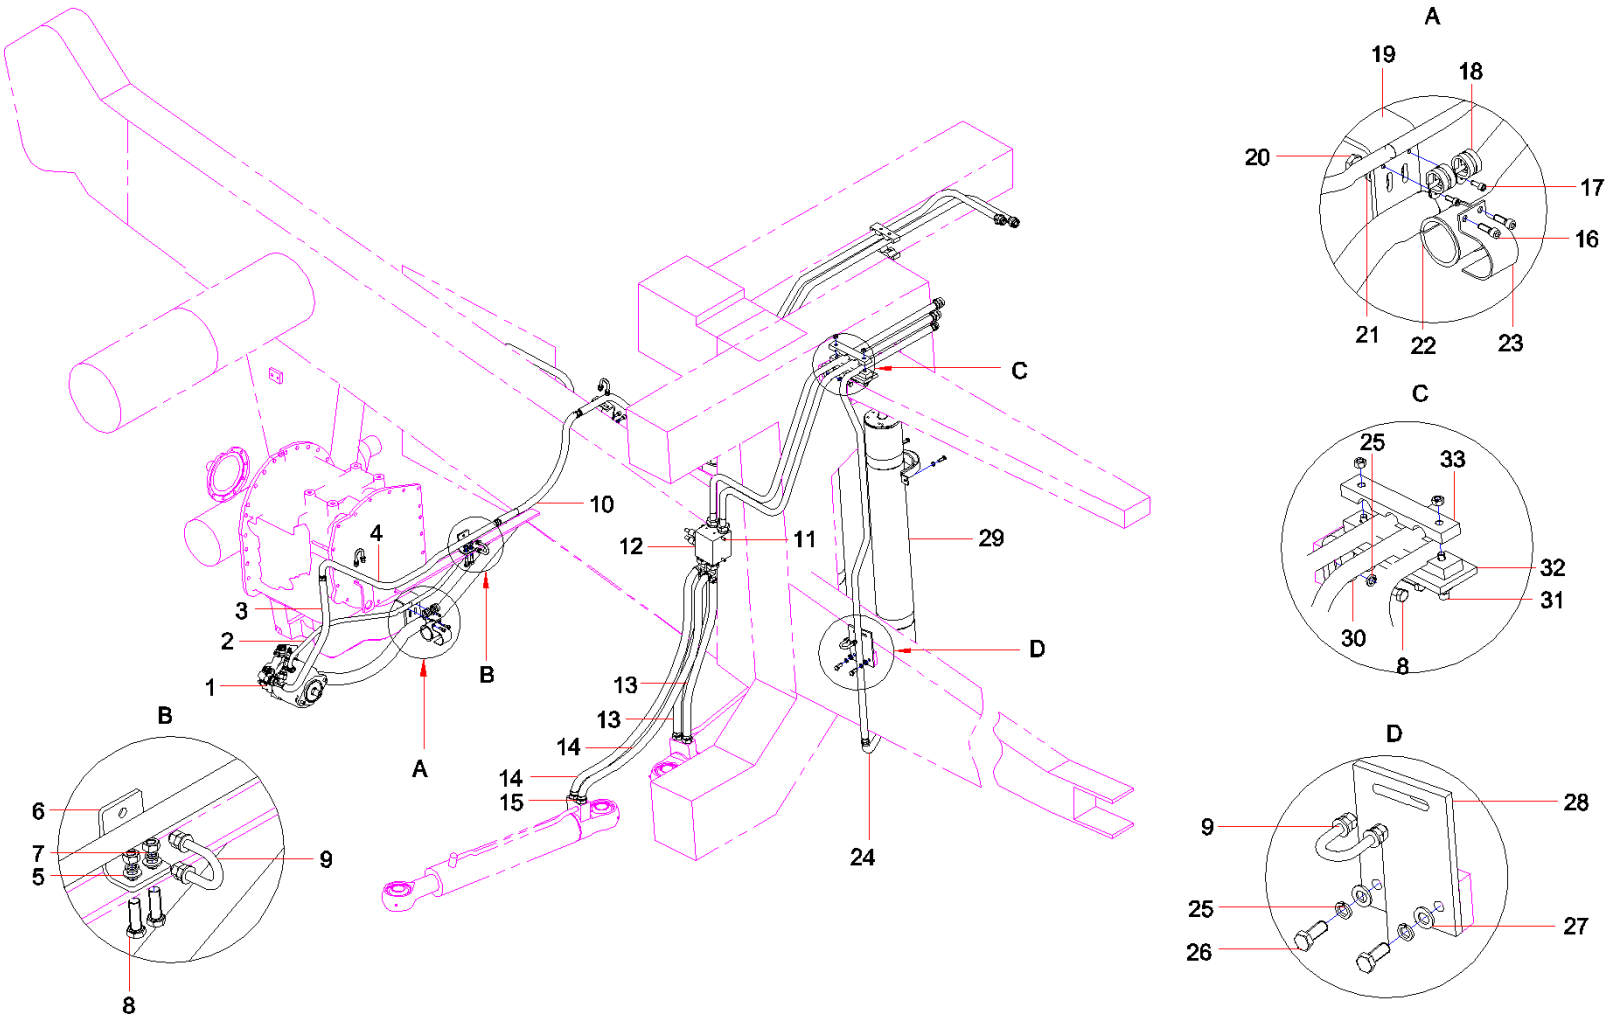
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210111000012	Bolt	42	
2	A210401000001	Washer	42	
3	11643404	Cover Plate	2	
4	A210609000384	O–ring 365 × 5.3GB3452.1	2	
5	60240021	Oil sign	4	
6	A229900002944	Plug	2	
7	60209906	Oil suction filter element	4	
8	60209907	Oil return filter core	1	
9	60013667	O–ring 230 × 5.3GB3452.1	3	
10	11643456	Cover plate	3	
11	A210204000130	Screw	8	
12	60136332	Breather valve	2	
13	A210609000202	O–ring	2	
14	A210204000341	Screw	8	
15	12951904	Spacer flange	2	
16	A210609000209	O–ring	2	
17	60101256	Filter, return oil	2	
18	13294573	Box body welding assembly SRT95C.641.1.1	1	

https://truckmanualshub.com/

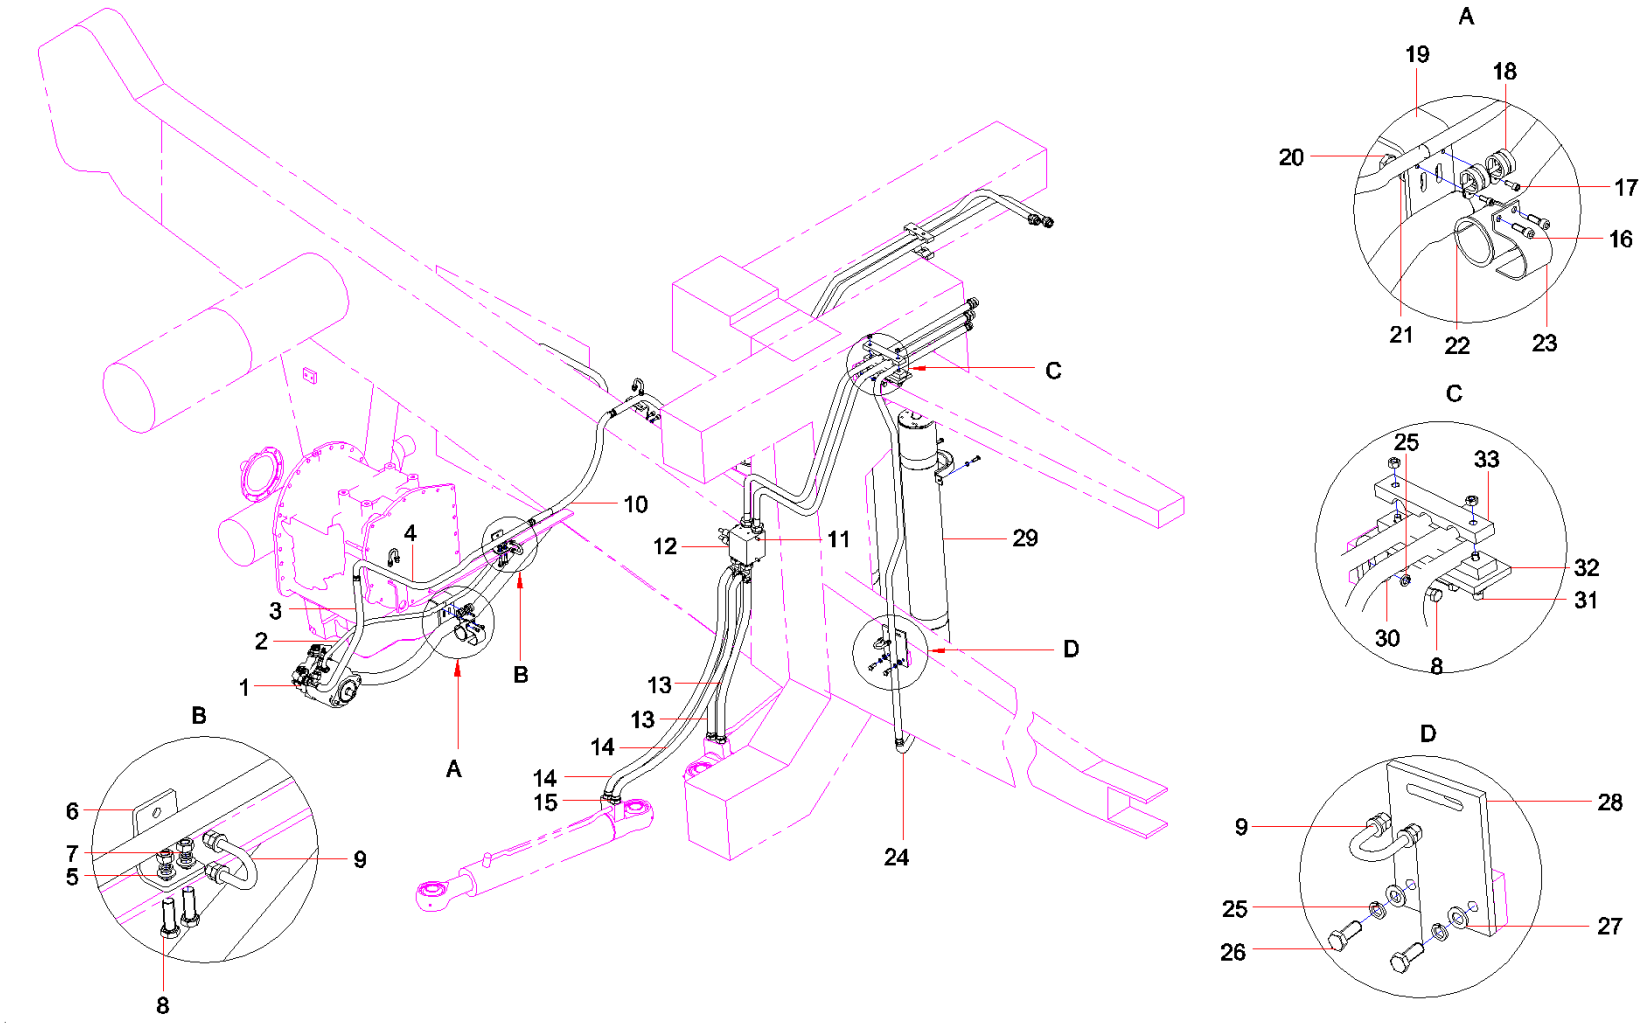
https://truckmanualshub.com/

Group 35
Steering pipeline and pipe joint


A
19
18
20
17
16
21
22
23
C
25
33
32
31
30
8
D
9
28
25
27
26
B
6
7
5
9
8
1
2
3
4
A
B
10
12
11
29
C
D
13
13
14
14
15
24

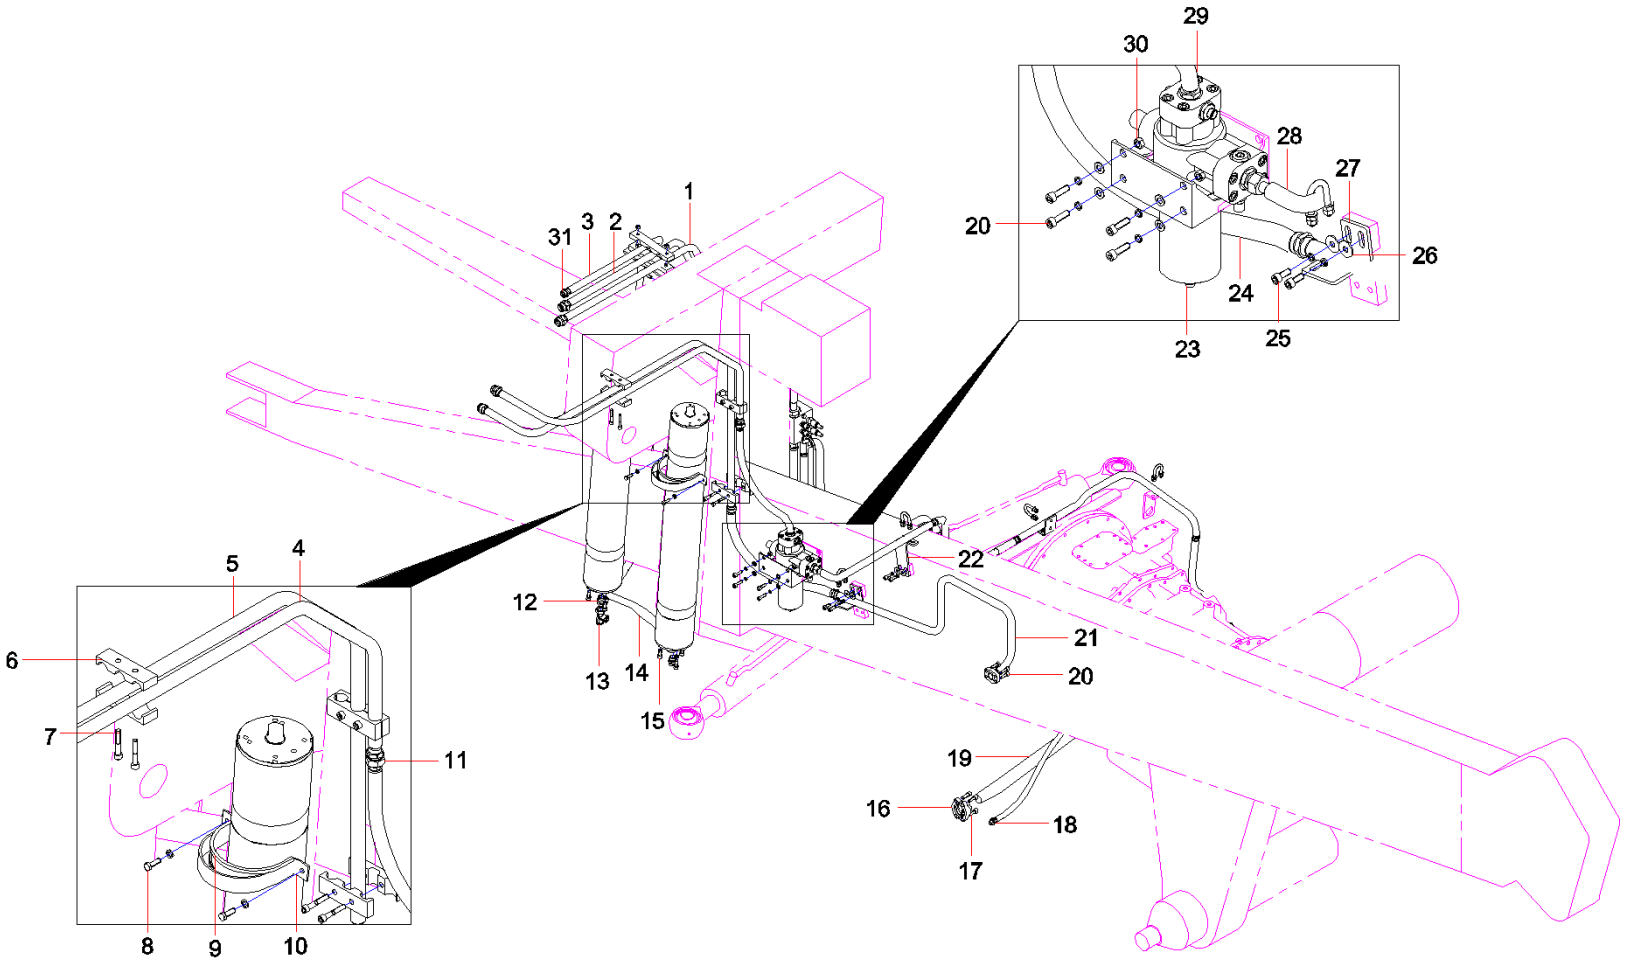
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12954053	Plunger pump installation	1	
2	B230103000279	Hose	1	
3	60234825	rubber hose	1	
4	12954055	steel tube assy.	1	
5	24000637	Washer	2	
6	12953838	Pipe clamp seat	1	
7	24000512	Washer 10GB93	8	
8	21005215	Bolt	4	
9	60008272	U–Clamp	5	
10	60234824	rubber hose	1	
11	21052948	Bolt	2	
12	12954434	Buffering valve block adaptor installation	1	
13	60097989	Hose	2	
14	60244148	Rubber hose	2	
15	23000611	Connector, pipe	4	
16	A210204000341	Screw	2	
17	A210204000130	Screw	2	
18	A229900006641	Pipe nip	2	
19	12953839	Pipe clamp seat	1	
20	A210307000055	Nut M8GB6170 Grade 10	2	
21	60060565	Washer	2	
22	11082254	Rubber ring	1	


A
19
18
20
17
16
21
22
23
C
25
33
32
31
30
8
D
9
28
25
27
26
B
6
7
5
9
8
1
2
3
4
A
B
10
12
11
29
C
D
13
13
14
14
15
24

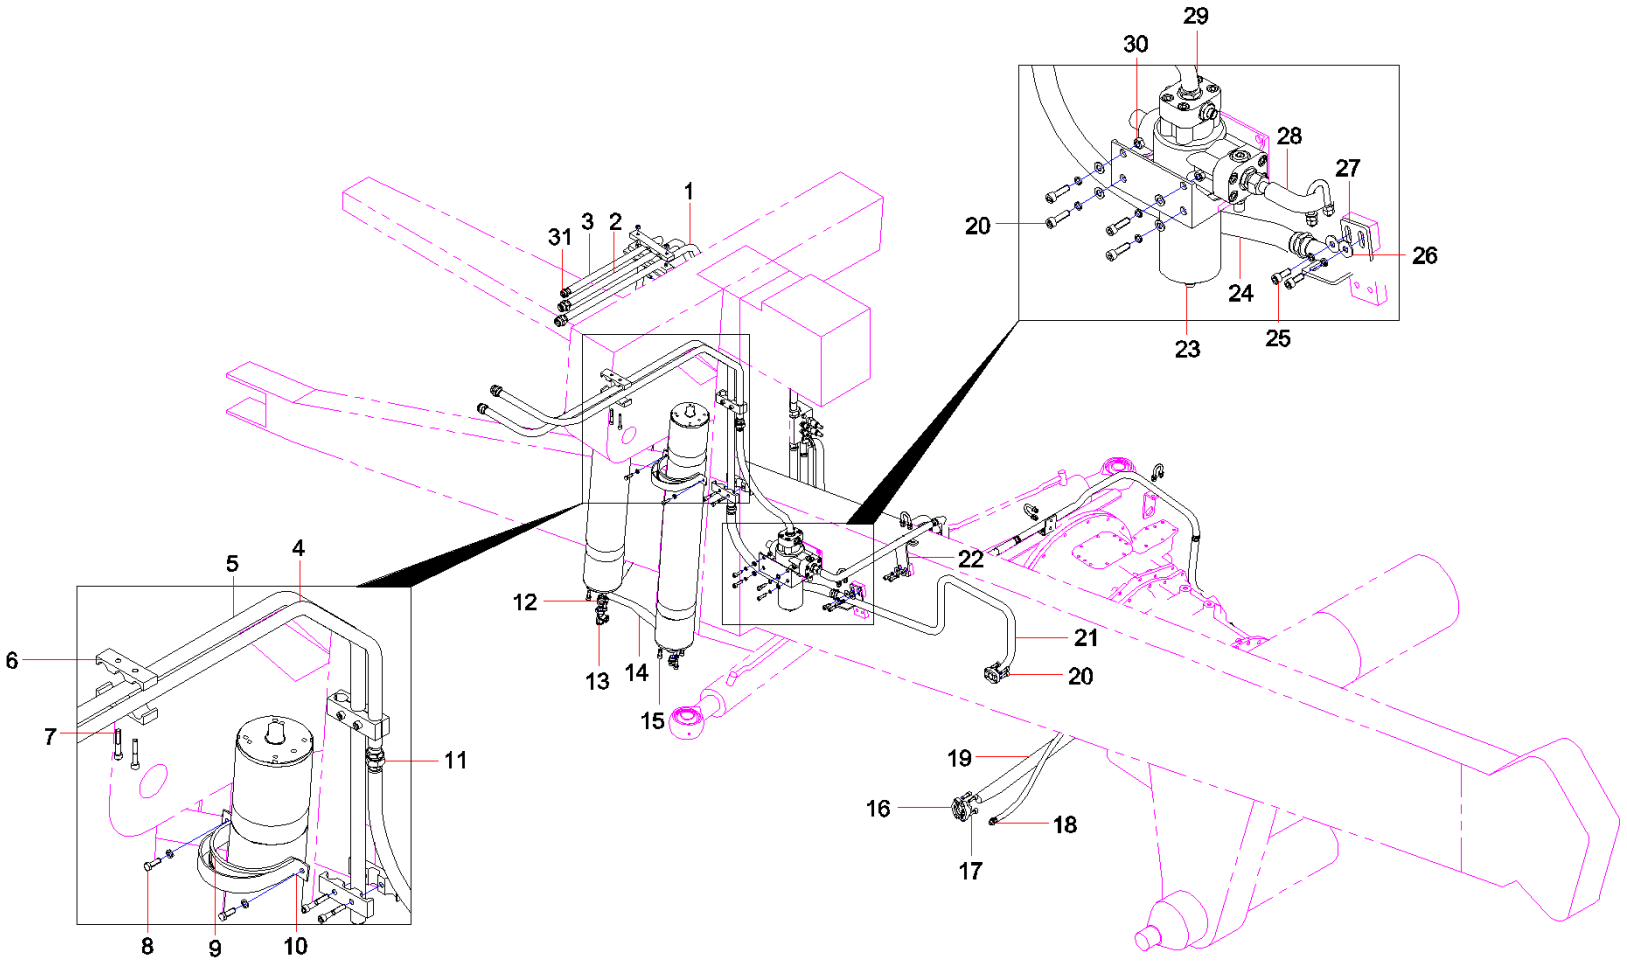
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	12953842	Tube clamp	1	
24	60034073	Hose,rubber	1	
25	24000513	Washer 12GB93 DACROMET	8	
26	A210111000331	Bolt	2	
27	24000639	Washer 12GB97.1	2	
28	12953835	Pipe clamp seat	1	
29	60211734	Piston Accumulator	2	
30	60060548	Washer 12GB96.1	2	
31	A210204000345	Screw	2	
32	12953833	Pipe clamp seat	1	
33	12953834	Tube clamp	2	


29
30
28
27
20
26
24
23
25
1
31
3
2
5
4
6
7
11
8
9
10
12
13
14
15
22
21
20
19
16
18
17

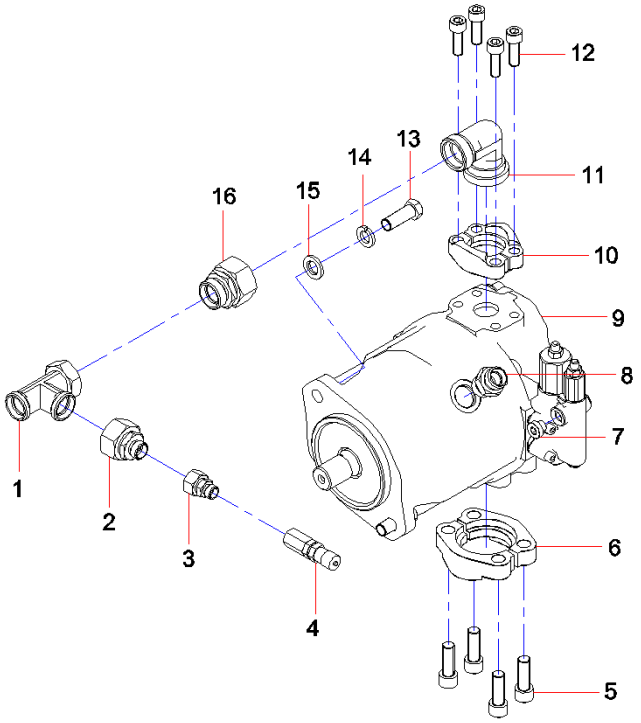
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	13210491	Steel tube assembly SRT95C.660.16	1	
2	13210489	Steel tube assembly SRT95C.660.15	1	
3	13210487	Steel tube assemblySRT95C.660.14	1	
4	12954388	Steel tube assy.	1	
5	13304558	Steel tube assembly SRT95C.613.24	1	
6	12953796	Pipe nip	6	
7	A210204000357	Screw	6	
8	A210111000024	Bolt	4	
9	12877280	Rubber Pad	2	
10	12877468	Energy Storage Thimble	2	
11	B210780000630	Connector, pipe	1	
12	21002826	Pipe connector	2	
13	A229900004359	Connector, pipe	1	
14	B230103000960	Hose, rubber	1	
15	A210204000337	Screw	6	
16	A229900002509	Flange, split	2	
17	A210204000206	Screw	4	
18	21002822	Pipe connector	1	
19	60234826	rubber hose	1	
20	A210204000215	Screw	4	
21	12954002	Steel tube assy.	1	
22	12953837	Pipe clamp seat	1	


29
30
28
27
20
26
24
23
25
1
31
3
2
5
4
6
7
11
8
9
10
12
13
14
15
22
21
20
19
16
18
17

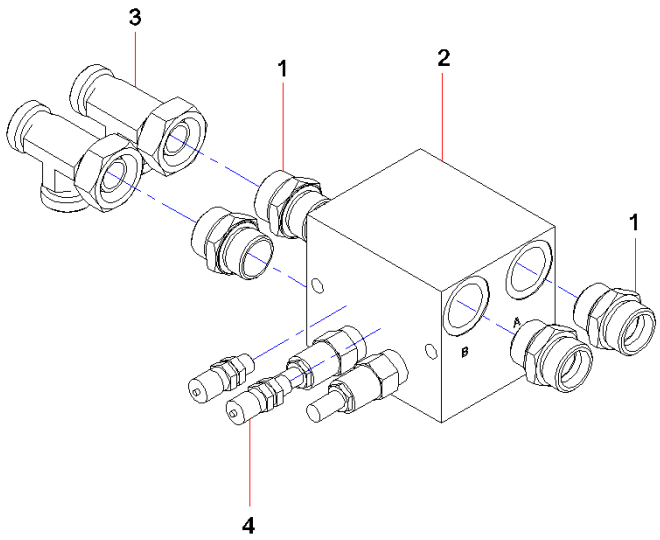
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
23	12954443	Adaptor installation of pipeline filter	1	
24	B230103003833	Hose	1	
25	A210204000262	Screw	4	
26	60060546	Washer 10GB96.1	6	
27	12953836	Pipe clamp seat	1	
28	12954465	Steel tube assy.	1	
29	B230103005600	Hose, rubber	1	
30	A210307000036	Nut	4	
31	21002822	Pipe connector	1	


12
13
14
11
16
15
10
9
8
7
1
2
3
6
4
5

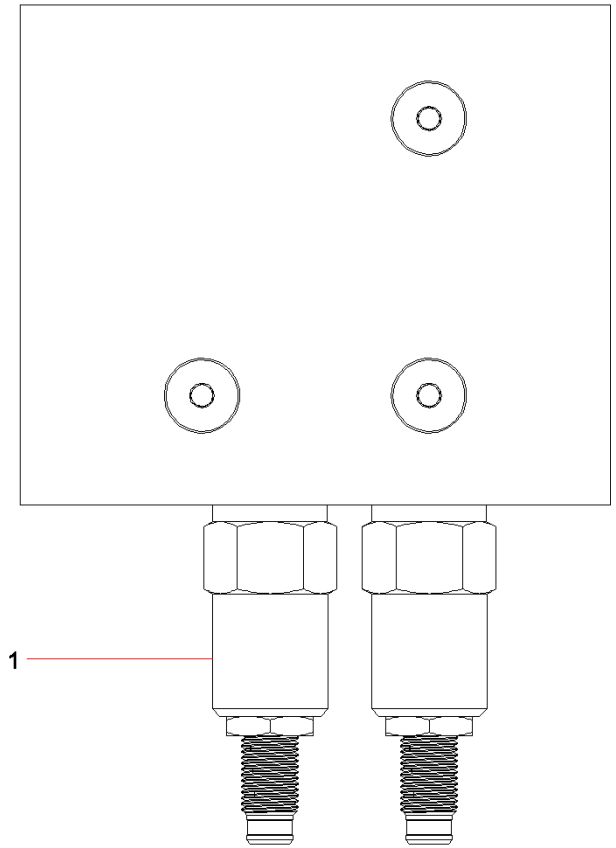
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A229900004359	Connector, pipe	1	
2	21027338	Connector, pipe	1	
3	21027304	Pipe connector	1	
4	21083668	Testing connector	1	
5	A210204000206	Screw	4	
6	A229900002509	Flange, split	2	
7	60069744	Screw Plug	1	
8	21004607	Connector, pipe	1	
9	23000451	Pump, plunger	1	
10	B229900000332	Flange, split	2	
11	21002810	Connector, flange	1	
12	A210204000354	Screw	4	
13	A229900009970	Bolt	2	
14	A229900009582	Washer	2	
15	A210491000121	Washer	2	
16	21020851	Swivel connector	1	


3
1
2
1
4
A
B

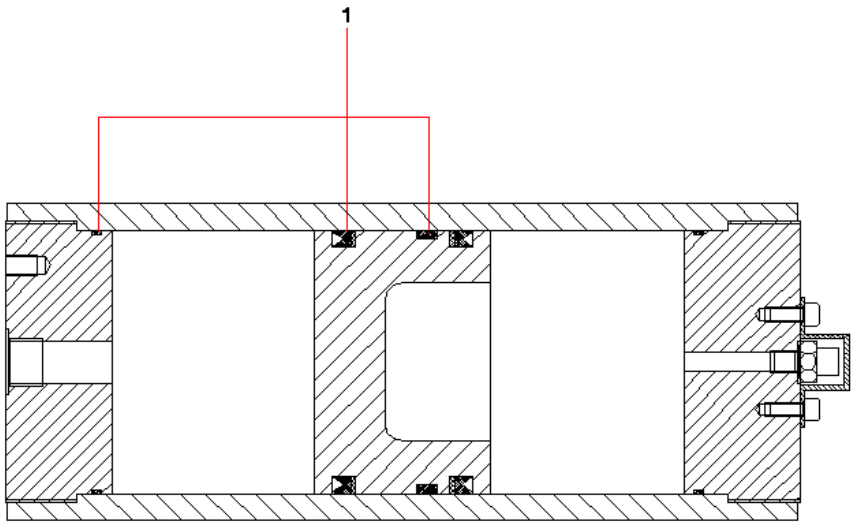
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	21018578	Male straight fitting	4	
2	60000781	Buffering valve block unit	1	
3	21003066	Union tee	2	
4	21000745	Testing connector	2	


1

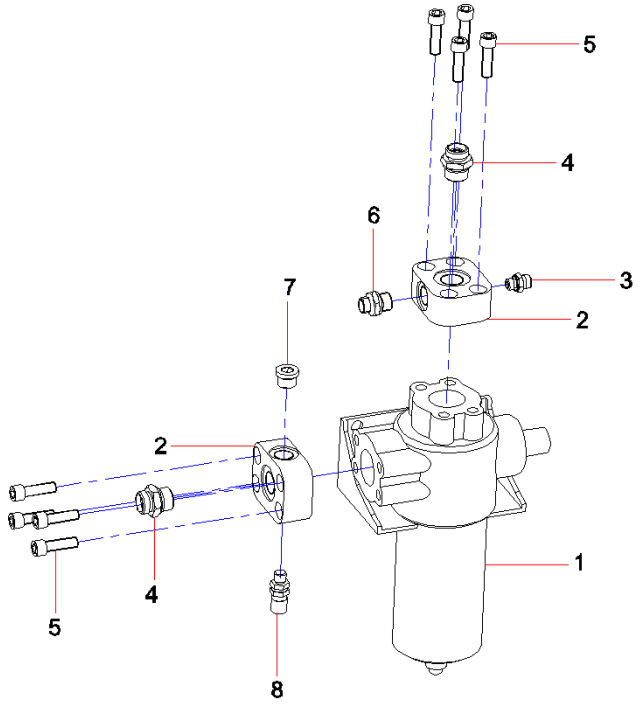
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60072701	Valve,overflow	1	


1

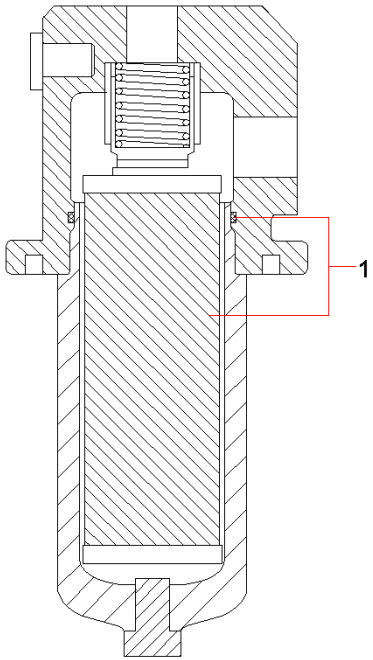
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60211735	Energy storage repair kit	1	


5
4
6
3
7
2
2
1
4
5
8

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	24005054	Filter	1	
2	12953820	Flange	2	
3	A210770000616	Pipe connector	1	
4	21002825	Pipe connector	2	
5	60011100	American–standard bolt	8	
6	B210780000179	Connector, pipe	1	
7	21001442	Plug	1	
8	21000745	Testing connector	1	


1

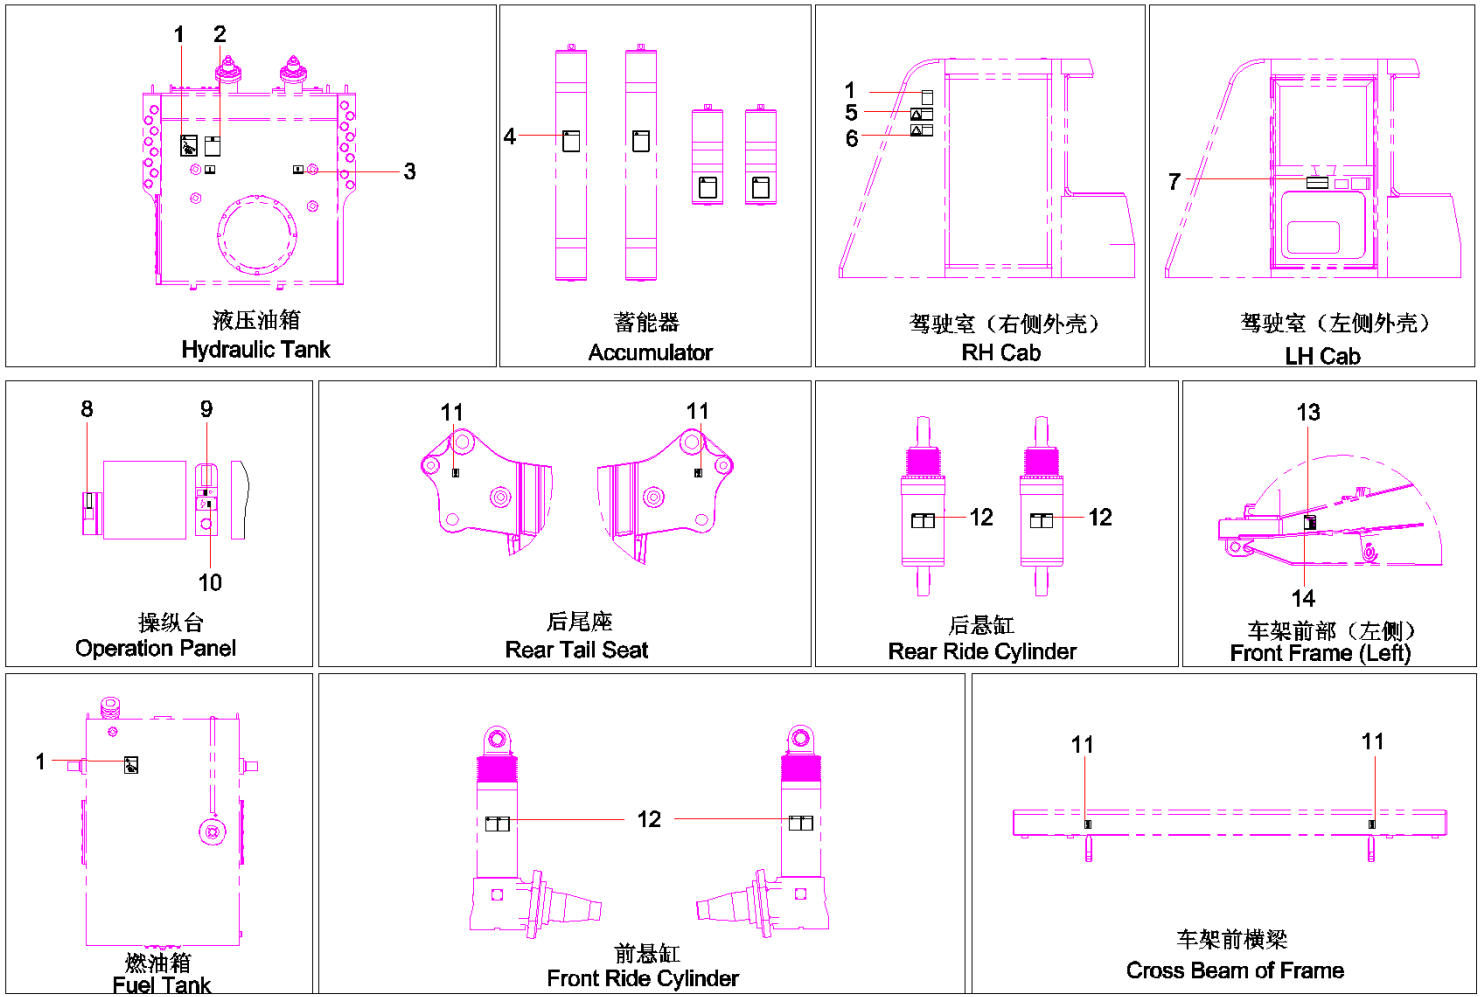
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	60211735	Energy storage repair kit	1	

https://truckmanualshub.com/

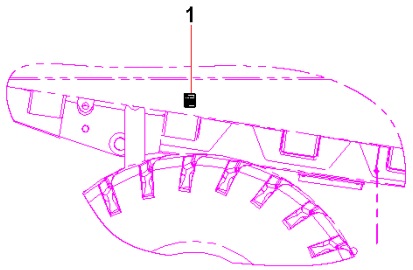
https://truckmanualshub.com/

Group 36
Labeling layout

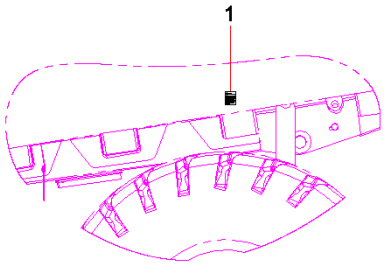

1
2
3
液压油箱
Hydraulic Tank
4
蓄能器
Accumulator
1
5
6
驾驶室（右侧外壳）
RH Cab
7
驾驶室（左侧外壳）
LH Cab
8
9
10
操纵台
Operation Panel
11
11
后尾座
Rear Tail Seat
12
12
后悬缸
Rear Ride Cylinder
13
14
车架前部（左侧）
Front Frame (Left)
1
燃油箱
Fuel Tank
12
前悬缸
Front Ride Cylinder
11
11
车架前横梁
Cross Beam of Frame

https://truckmanualshub.com/

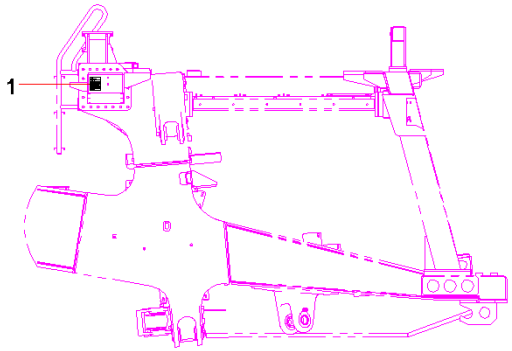
Item No.	Part No.	Description	Qty.	Remark
1	10644127	SRT55 warning mark of carriage	3	
2	10644123	SRT55 Instruction mark of hydraulic oil	1	
3	11858629	SRT95 hydraulic oil level label	2	
4	12952685	Decal––accumulator warning	4	
5	10644121	SRT55 warning mark of cab weld	1	
6	10644132	SRT55 warning mark of "no standing"	1	
7	12951351	Decal––driving height warning	1	
8	10644129	SRT55 hydraulic control mark	1	
9	12734050	Decal––transmission retarding control	1	
10	12734812	Decal––brake retarding control	1	
11	A820101990552	Mark diagram, hook point	4	
12	12734114	Decal––ride cylinder warning	4	
13	10644108	SRT55 nameplate	1	
14	21005399	Rivet 3 × 10GB827	4	



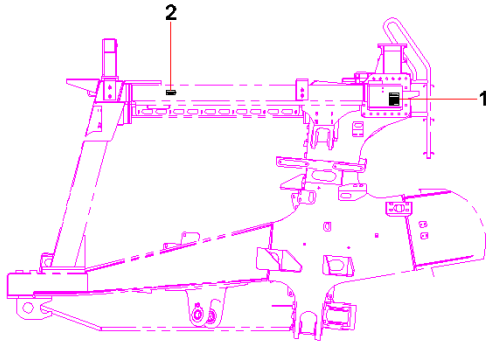
车架后部（右侧）
Rear of Carriage (Right Side)



车架后部（左侧）
Rear of Carriage (Left Side)



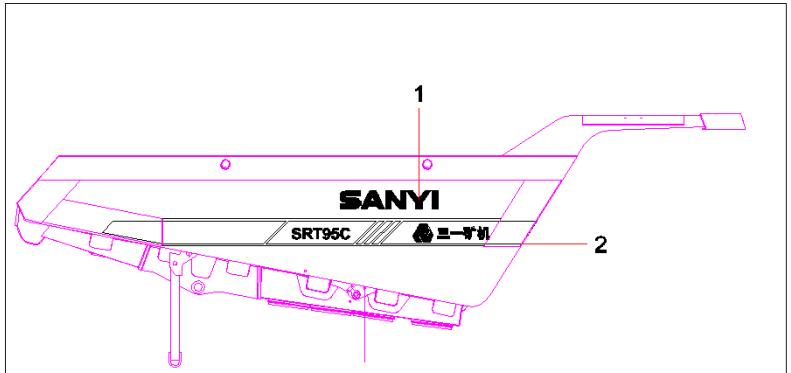
车架右加长梁
Frame lengthening beam (RH)



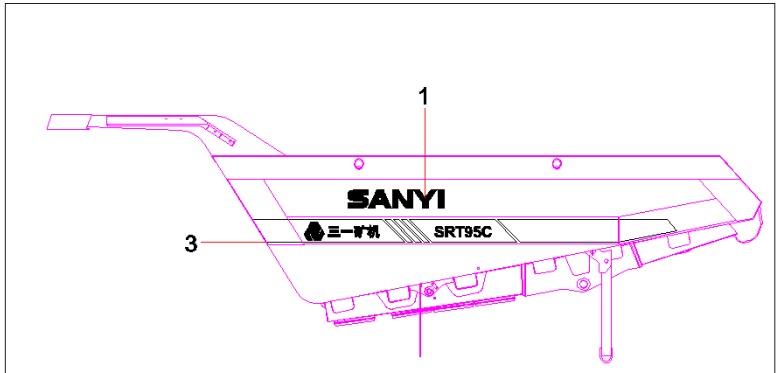
车架左加长梁
Frame lengthening beam (LH)

https://truckmanualshub.com/

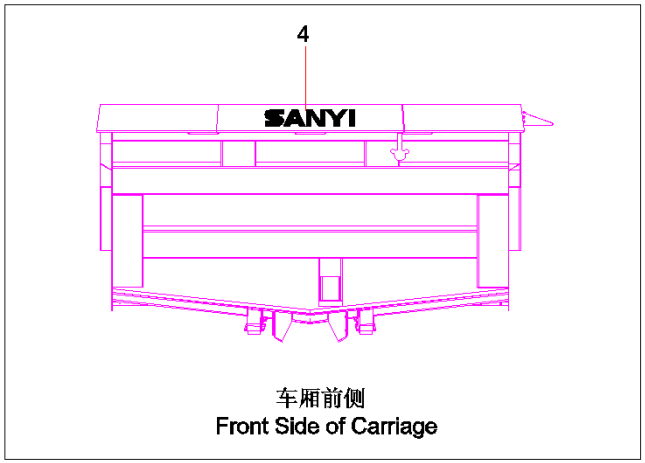
Item No.	Part No.	Description	Qty.	Remark
1	10644109	SRT55 warning mark of Tire	4	
2	13035399	Decal–service hot–lineSRT95C.740–8	1	



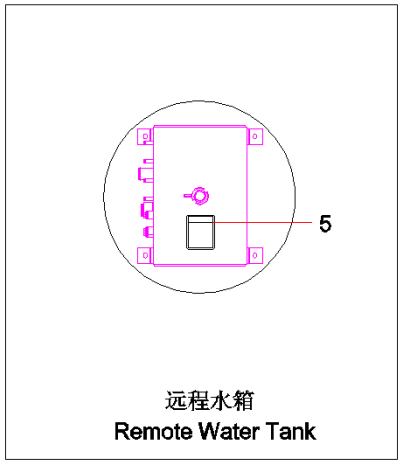
车厢（右视）
Carriage (Right view)



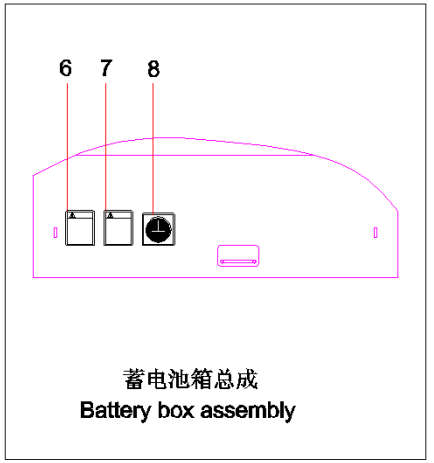
车厢（左视）
Carriage (left view)



车厢前侧
Front Side of Carriage



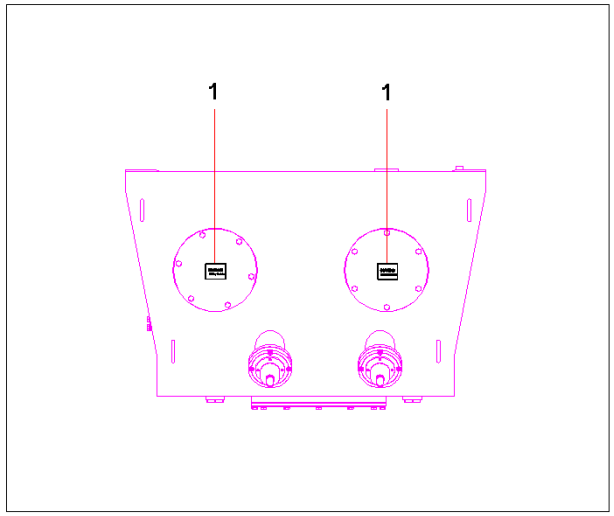
远程水箱
Remote Water Tank

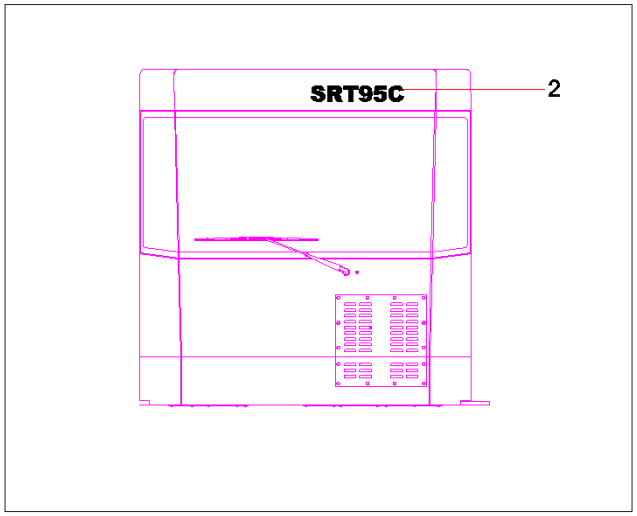


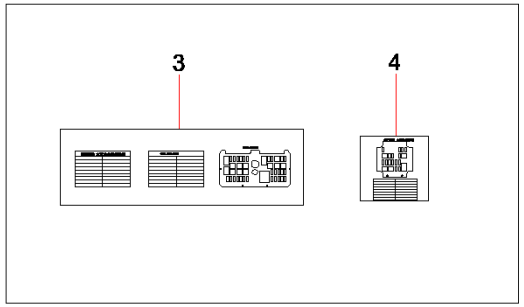
蓄电池箱总成
Battery box assembly

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	12951350	Decal––body	2	
2	12951345	Decal––right body	1	
3	12951342	Decal––left body	1	
4	12951338	Decal––front body	1	
5	10644124	SRT55 warning mark of water tank opening	1	
6	10644117	SRT55 warning mark of battery cable	1	
7	10644120	SRT55 warning mark of alternator	1	
8	12033786	Ground brand	1	


1
1


SRT95C
2


3
4

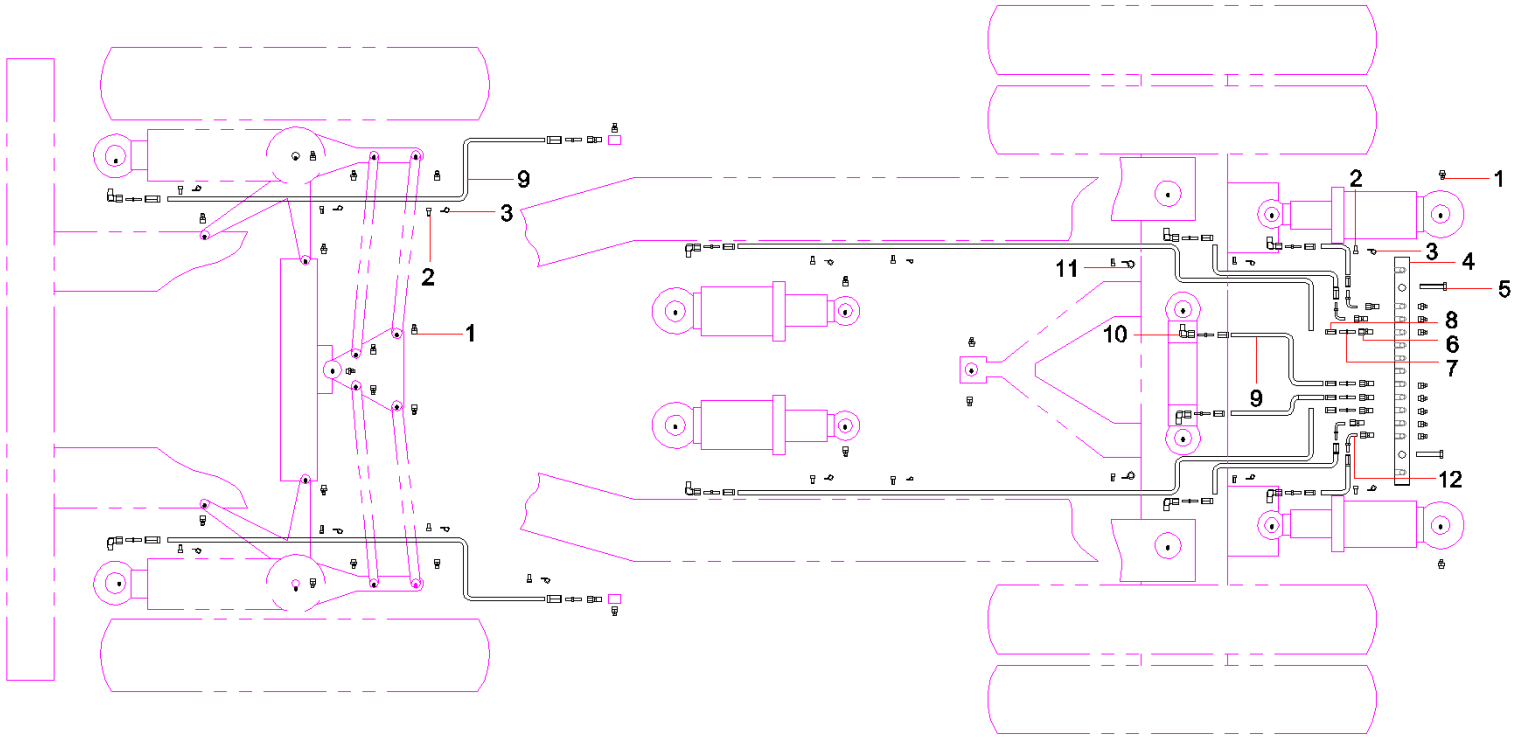
https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	13035180	Decal–filling position	2	
2	13075680	SRT95C symbol film	1	
3	13132842	SRT95C distribution box decal	1	
4	13132843	SRT95C distribution box decal	1	

https://truckmanualshub.com/

https://truckmanualshub.com/

Group 37
Manual lubrication system


9
3
2
1
11
10
9
2
1
3
4
5
8
6
7
12

https://truckmanualshub.com/

Item No.	Part No.	Description	Qty.	Remark
1	A210804000002	Oil cup	32	
2	A210204000129	Screw	23	
3	60000418	Pipe Clamp	20	
4	11885969	Rear distributor	1	
5	A210111000103	Bolt	2	
6	A229900008126	Straight joint	10	
7	60067375	Straight joint core	16	
8	60067373	Adaptor outer cover	20	
9	12628426	liquid pipe	1	
10	A229900008124	Bent joint	10	
11	60000420	Pipe Clamp	3	
12	60067372	Bent joint core	4	