
https://truckmanualshub.com/

Part No.501055120002
Rev: C
Jun 2021

Parts Manual

GTJZ0408SE/0408SE/1530SE
GTJZ0608SE/0608SE/1930SE
GTJZ0408ME/0408ME/1532ME
GTJZ0608ME/0608ME/1932ME

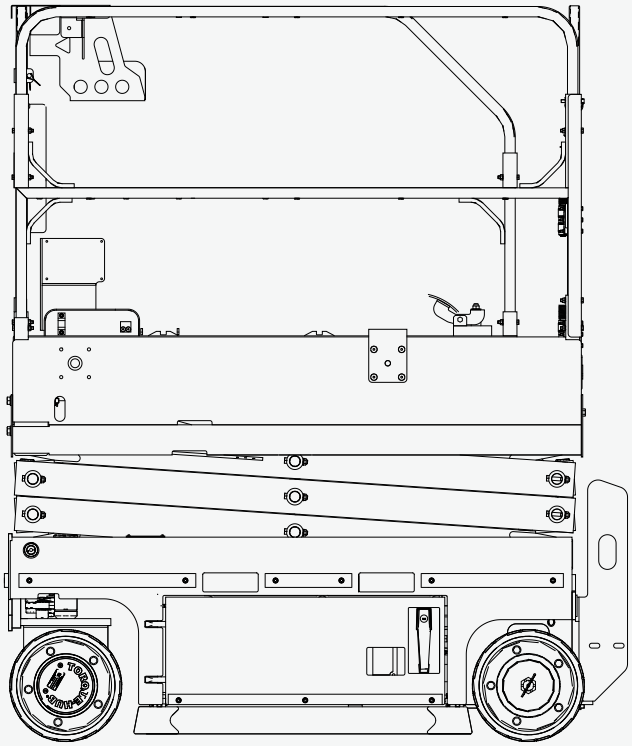

SINOBOOM

https://truckmanualshub.com/

https://truckmanualshub.com/

⚠ WARNING

Operating, servicing and maintaining this vehicle or equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle or equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing. For more information go to: www.P65warnings.ca.gov.

https://truckmanualshub.com/

Manual revision history：

REV	DATE	DESCRIPTION	REMARK
A	Aug, 2020	Original issue of the manual	
B	Mar, 2021	Updated manual, adding information on quick fold-down rails, etc.	
C	Jun, 2021	Updated manual.	

Please contact us:

Website : www.sinoboom.com

E-mail : sales@sinoboom.com

Sales Tel : 0086-0731-87116222

Service Tel : 0086-0731–87116333

Address : No.128, East Jinzhou Avenue, Ningxiang High-tech Industrial Park, Changsha, Hunan, China

Zip Code : 410600

Copyright © Hunan Sinoboom Intelligent Equipment Co., Ltd. All Rights Reserved

The final interpretation right of this manual belongs to Hunan Sinoboom Intelligent Equipment Co., Ltd.

https://truckmanualshub.com/

APPLICATION

Use the following table to identify the specific serial number for models included in this manual. Check the model of your machine before consulting the manual, and then use the correct manual according to the serial number of the model. See the nameplate on your machine to identify the model and serial number. (See ***Decals*** section of this manual for details.)

MODELS	Trade identification		SERIAL NO.
	Metric	Imperial	
GTJZ0408SE	0408SE	1530SE	From 0105700200 to Present
GTJZ0608SE	0608SE	1930SE	From 0105800300 to Present
GTJZ0408ME	0408ME	1532ME	From 0105500200 to Present
GTJZ0608ME	0608ME	0932ME	From 0105600300 to Present

NOTE:

- Product model is applied in product nameplate for distinction of products of different main parameters.
- Product trade identification is applied in marketing and machine decals for distinction of products of different main parameters, and can be classified as metric type and imperial type: The metric type of trade identification is applicable to machines for countries/regions using metric system or as specially required by customers; The imperial type of trade identification is applicable to the machines for countries/regions using imperial system or as specially required by customers.

https://truckmanualshub.com/

https://truckmanualshub.com/

STATEMENTS

Hunan Sinoboom Intelligent Equipment Co., Ltd. (Hereinafter referred to as Sinoboom) will upload the latest product manual information to the website www. sinoboom. com as soon as possible. However, due to continuous product improvement, the information in this manual is subject to change without prior notice.


This manual covers the basic parts information of one or more products. Therefore, please use this manual according to your needs. If you find problems in the manual or have suggestions for improvement, feel free to share your feedback with Sinoboom, and we will address these issues as soon as possible.

Feel free to consult and download the *Operation Manual*, *Maintenance Manual* and *Parts Manual* of the products you need online at www.sinoboom.com.

Hunan Sinoboom Intelligent Equipment Co., Ltd. retains the right of final interpretation of the manual.

https://truckmanualshub.com/

GENERAL INFORMATION

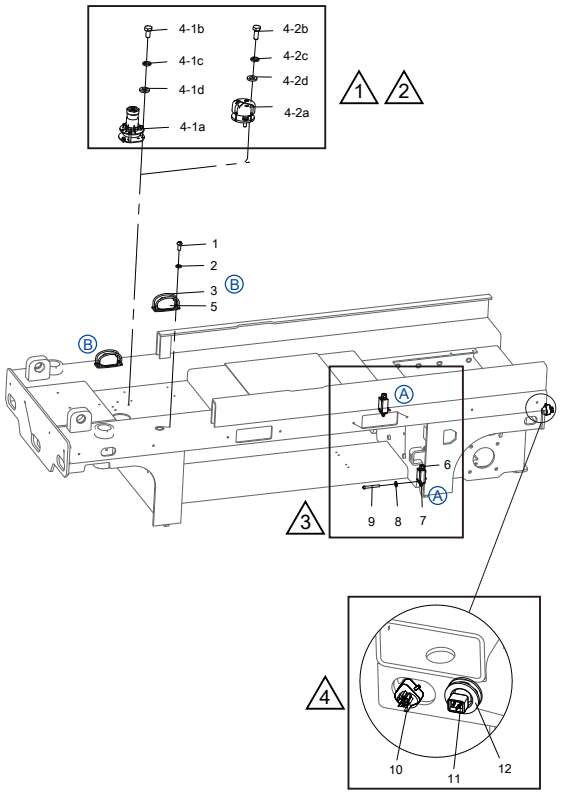

No.	Part No.	Qty.	Description
1	215020000110	4	Screw M5×12-A2-70 GB/T 818
2	215040000003	4	Washer 5-A2-70 GB/T 93
3	203990000003	4	Guard
4	101053063017		Options, Level sensor installation
4-1a	203150000066	1	Level sensor
4-1b	215010000049	3	Bolt M6×12-A2-70 GB/T 5783
4-1c	215040000004	3	Washer 6-A2-70 GB/T 93
4-1d	215040000033	3	Washer 6-A2 GB/T 97.1
4-2a	203060000076	1	Level sensor
4-2b	215010000050	3	Bolt M6×16-A2-70 GB/T 5783
4-2c	215040000004	3	Washer 6-A2-70 GB/T 93
4-2d	215040000033	3	Washer 6-A2 GB/T 97.1
5	203050000038	2	LED light, beacon
6	201990003005	2	Connector
7	203060000055	2	Limit switch
8	215040000003	2	Washer 5-A2-70 GB/T 93
9	215020000215	2	Screw M5×40-A2-70 GB/T 818
10	203080000173	1	Charger cord and plug
11	203080000343	1	3 pins plug
12	101032030115	1	Rubber grommet

The special meanings expressed in the illustrations and tables in this manual are explained as follows :

△1 Add "-1, -2, -3…" after the number to represents an options (one multiple choice), such as choose 4-1 and 4-2 according to specific needs.

△2 Add "lowercase a, b, c…" after the number to indicate by a variety of components, such as 4a, 4b, 4c and 4d composition 4.

△3 "A,B,C..." in figure indicates the same parts in many places, and the same place is indicated by the same symbol.

△4 The diagram indicated by the lead is a local enlargement or a local illustration.

https://truckmanualshub.com/

TABLE OF CONTENTS

1 Chassis Components 3

1.1 Drive Installation 4
1.2 Drive reducer, DC 203010003012 6
1.3 Steer Installation 7
1.4 Drive Installation 9
1.5 Pothole Protection System Installation 11
1.6 Left Door Installation 13
1.7 Left Door Installation (AS) 15
1.8 Right Door Installation 17
1.9 Ladder and Counterweight Installation (GTJZ0408SE&0408ME) 19
1.10 Ladder and Counterweight Installation (GTJZ0608SE&0608ME) 21
1.11 Chassis Shield Installation 23

2 Scissor Components 25

2.1 Scissor Components (GTJZ0408SE&0408ME) 26
2.2 Scissor Components (GTJZ0608SE&0608ME) 29

3 Platform Components 33

3.1 Platform Components(Japanese Specs) 34
3.1.1 Fixed Platform Assembly (Japanese Specs) 35
3.1.2 Extended Platform Assembly (Japanese Specs) 37
3.1.3 Fixed Platform Rails Installation (Japanese Specs) 39
3.1.4 Extended Platform Rails Installation(Japanese Specs) 41
3.1.5 Platform Entry Gate Installation (Japanese Specs) 43
3.2 Platform Components (Korean Specs) 45
3.2.1 Fixed Platform Assembly (Korean Specs) 46
3.2.2 Extended Platform Assembly (Korean Specs) 48
3.2.3 Fixed Platform Rails Installation (Korean Specs) 50
3.2.4 Extended Platform Rails Installation (Korean Specs) 52
3.2.5 Platform Entry Gate Installation (Korean Specs) 54
3.3 Platform Components(Fold-down) 56
3.3.1 Fixed Platform Assembly(Fold-down) 57

https://truckmanualshub.com/

3.3.2 Extended Platform Assembly(Fold-down).....59
3.3.3 Fixed Platform Rails Installation(Fold-down).....61
3.3.4 Extended Platform Rails Installation(Fold-down).....63
3.3.5 Platform Entry Gate Installation(Fold-down).....65
3.4 Platform Components(AS Models).....67
3.4.1 Platform Components(AS Models).....68
3.4.2 Platform Components(AS Models).....70
3.4.3 Platform Components(AS Models).....71
3.4.4 Extended Platform Assembly(AS Models).....72
3.4.5 Extended Platform Assembly(AS Models).....74
3.4.6 Extended Platform Assembly(AS Models).....76
3.5 Extended Platform Assembly(AS Models).....78
3.5.1 Extended Platform Assembly(AS Models).....79
3.5.2 Extended Platform Assembly(AS Models).....81
3.5.3 Extended Platform Assembly(AS Models).....82
3.5.4 Extended Platform Assembly(Quick Fold-down Platform).....83
3.5.5 Extended Platform Assembly(Quick Fold-down Platform).....85
3.5.6 Platform Entry Gate Installation(Quick Fold-down Platform).....87

4 Chassis-Scissor-Platform Installation..... 89

4.1 Chassis-Scissor-Platform Installation (GTJZ0408SE&0408ME).....90
4.2 Chassis-Scissor-Platform Installation (GTJZ0608SE&0608ME).....92

5 Electrical System..... 95

5.1 Emergency Decent Handle Installation.....96
5.2 Right Door Hydraulic Components Installation.....98
5.3 Power unit 202010000056.....100
5.4 Hose Clamp Installation.....101
5.5 Lift Control Valve Installation.....103
5.6 Lift Control Valve 202040003293.....104
5.7 Lift Control Valve 202040003295.....105
5.8 Hydraulic Tubes Layout.....106
5.9 Hydraulic Valves Identification.....107
5.10 Hydraulic Schematic.....108

6 Electrical System.....109

6.1 Chassis Electrical Components.....110

https://truckmanualshub.com/

6.2 Options, Level sensor Installation 112
6.3 Angle sensor Installation..... 113
6.4 Left Door Electrical Components Installation 114
6.5 Right Door Electrical Components Installation..... 116
6.6 Batteries Installation (Lead-acid battery)..... 118
6.7 Batteries Installation(Lead acid battery, maintenance-free)..... 120
6.8 Batteries Installation(Lithium battery) 122
6.9 Scissor Arm Electrical Components Installation..... 123
6.10 Platform Control Box Installation..... 125
6.11 Platform Control Box 203020000065 126
6.12 Platform Control Box 203020003028 127
6.13 Chassis Harness..... 128
6.14 Power Cable Kit(Lead-acid battery) 131
6.15 Electrical power wiring layout(Lithium battery)..... 133
6.16 Ground to Platform Harness (GTJZ0408SE&0408ME)..... 135
6.17 Ground to Platform Harness (GTJZ0608SE&0608ME)..... 136
6.18 Electrical Schematic Diagram 138

7 Decals 141

7.1 Decals(GB)..... 142
7.2 Decals(CE-Metric) 145
7.3 Decals(CE-Imperial) 148
7.4 Decals(KCS)..... 151
7.5 Decals(CE-PL) 154
7.6 Decals (CSA)..... 157
7.7 Decals(CE-JP) 160
7.8 Decals(ANSI)..... 163
7.9 Decals(AS)-GTJZ0408SE&0408ME&0608SE 166
7.10 Decals(AS)-GTJZ0608ME 169

8 Special Options 173

8.1 LED light Installation 174
8.2 RCBO Installation..... 175
8.3 GPS Installation 1 176
8.4 GPS Installation 2 177
8.5 Work Light Installation 178
8.6 Foot Switch Installation 180

https://truckmanualshub.com/

8.7 Overhead Protection Installation 182
8.8 AC Box at Platform Installation(All Specs) 184
8.9 AC Box at Platform Installation(European Standard) 186
8.10 AC Box at Platform Installation(American Standard) 188
8.11 External Power Installation 190

https://truckmanualshub.com/

INTRODUCTION

Thank you for choosing and using the machinery of Hunan Sinoboom Intelligent Equipment Co., Ltd. Always read, understand and become familiar with the operation requirements of the machine and its associated safety procedures before operating, maintaining and repairing the machine. Operating the machine without becoming familiar with its specific operation requirements and safety procedures poses serious risks. Operators who follow safety rules and operate the machine carefully and effectively will prevent personal injury, property loss and accidents.

The information contained in this manual is designed to aid the user in locating and identifying replacement parts. Component parts of various assemblies and sub-assemblies are illustrated and accompanied by a descriptive parts list. Exploded drawings are used to show relative location of component parts in disassembly or assembly order.

This product uses the latest technology and the highest quality components. When replacement parts are required, Hunan Sinoboom Intelligent Equipment Co., Ltd. recommends that only the original or recommended parts be used. When ordering replacement parts, the complete part number and description should be used to ensure proper identification and delivery of the desired item. This complete identification should also be used when requesting equipment information.

Consider this manual a part of the machine, along with *Operation Manual* and *Maintenance Manual*, and always keep the manuals with the machine. The owner or administrator of the machine shall offer all manuals and other necessary information provided by the machine manufacturer regarding the daily inspection and maintenance to each of the renters. If the machine is sold, the owner or administrator must pass along the manuals and other necessary information to the purchaser. The owner or administrator of the machine shall also provide the manufacturer’s maintenance information to the person responsible for maintaining the machine.

If you have any questions, contact Hunan Sinoboom Intelligent Equipment Co., Ltd..

https://truckmanualshub.com/


This Page Intentionally Left Blank

https://truckmanualshub.com/

1 CHASSIS COMPONENTS

https://truckmanualshub.com/

1.1 DRIVE INSTALLATION

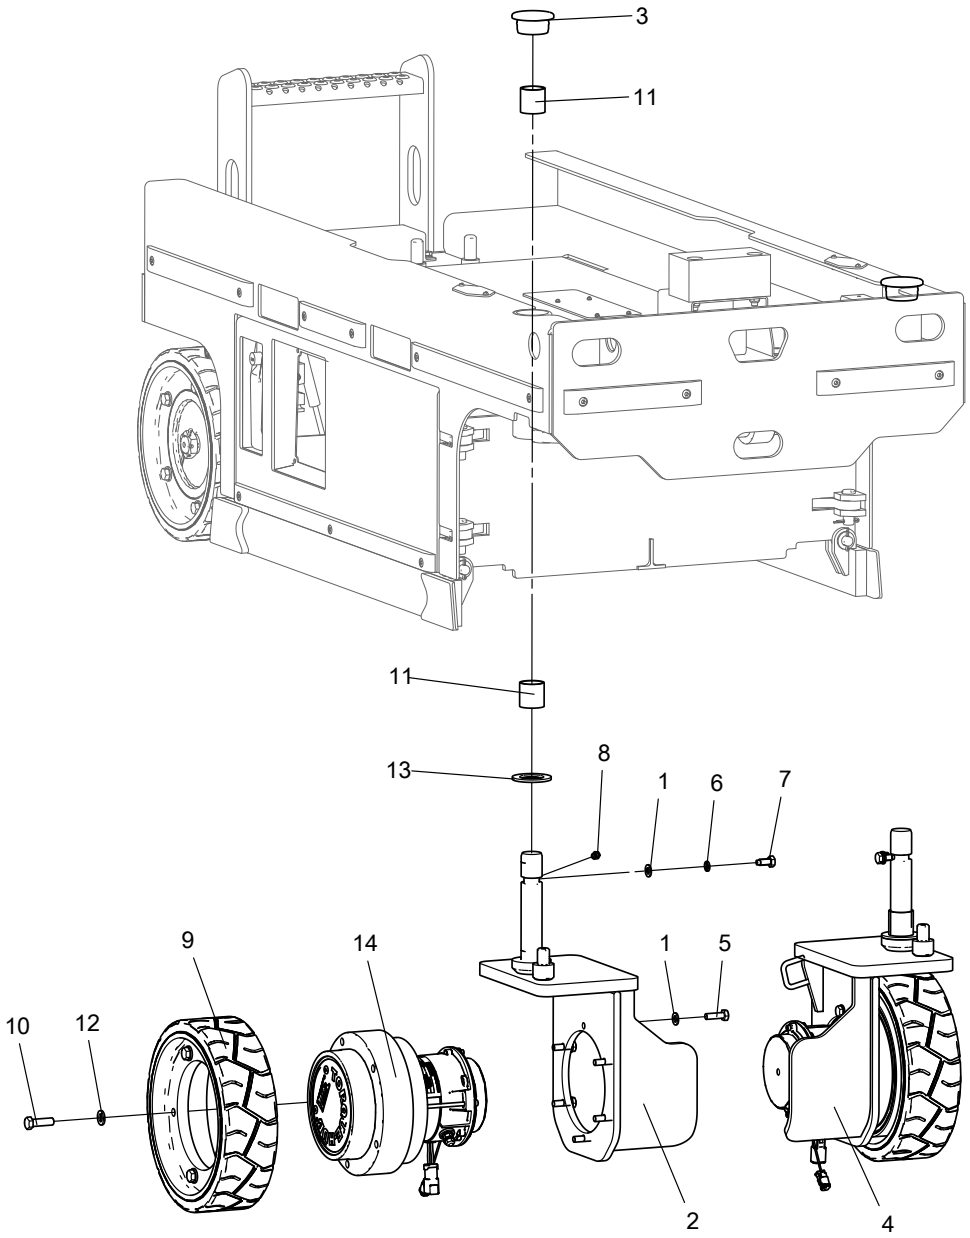


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215040000035	14	Washer 10-200HV-ZnD GB/T 97.1
2	101058030002	1	Wheel carrier, Right
3	101014030089	2	Blockage
4	101058030001	1	Wheel carrier, Left
5	215080000023	12	Bolt 3/8"-16UNC-1.25inches GR8
6	215040000006	2	Washer 10-ZnD GB/T 93
7	101032030107	2	Special Bolt
8	207010000003	2	Grease nipple M10×1 GB/T 1152
9	204080000042	2	Solid wheel
10	215010000226	10	Bolt M12×1.5×40-10.9-DKL GB/T 5786
11	214030000004	4	Bearing, self-lubricating
12	215040000037	10	Washer 12-200HV-ZnD GB/T 97.1
13	101032030084	2	Washer
14	203010003012	2	Drive reducer, DC

https://truckmanualshub.com/


1.2 DRIVE REDUCER, DC 203010003012

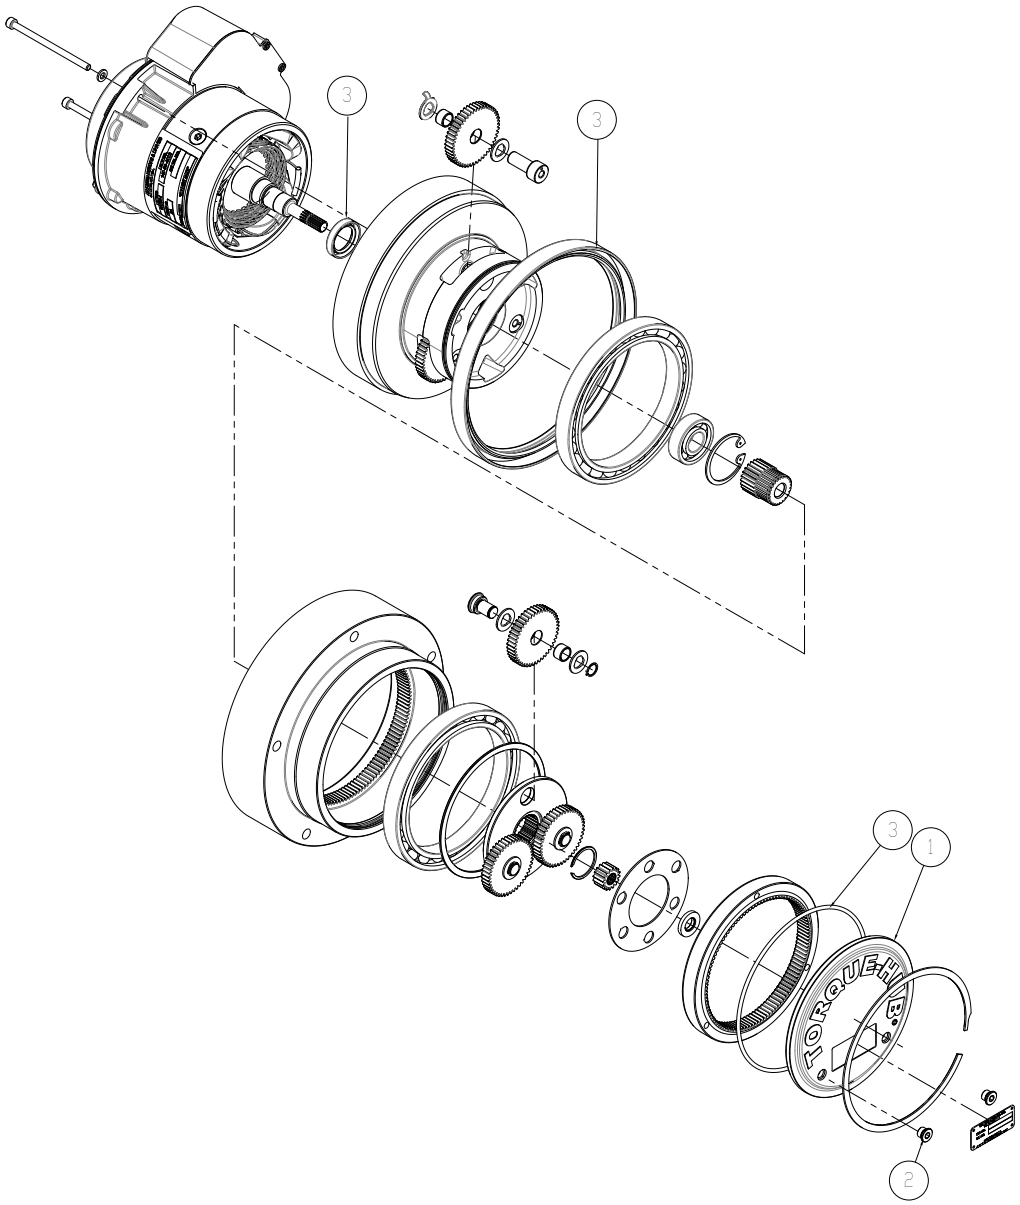

No.	Part No.	Qty.	Description
1	216990003049	1	End cap, small
2	207080003001	2	Oil plug
3	207060003006	1	Service kit, sealing

https://truckmanualshub.com/

1.3 STEER INSTALLATION

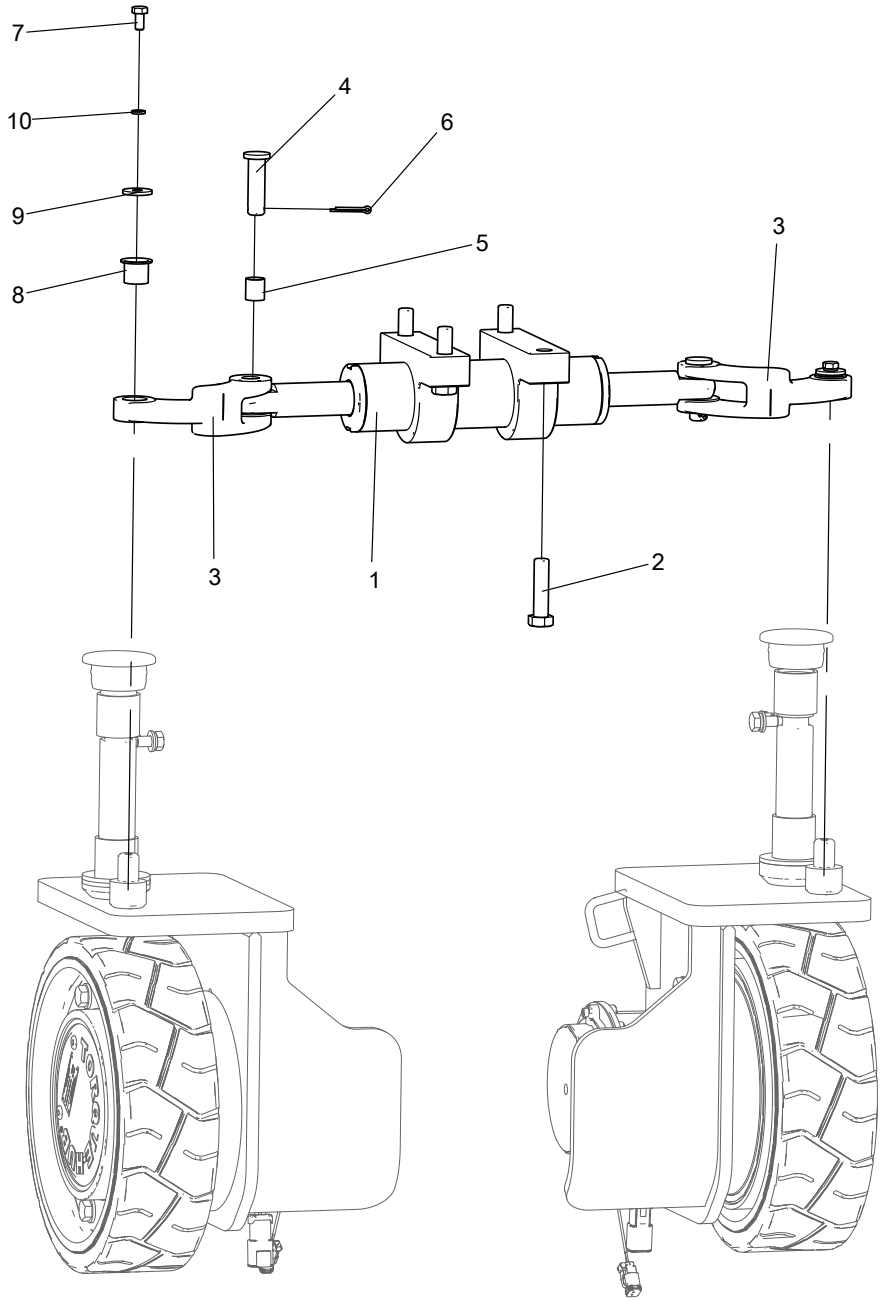


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101032050001	1	Steer cylinder
1a-1	207990003003	1	Seal kit, cylinder(1000145)
1a-2	207990003005	1	Seal kit, cylinder(1000122)
2	215010000195	4	Bolt M14×1.5×55-10.9 DKL GB/T 5786
3	101014030031	2	Steering linkage
4	215060000039	2	Clevis Pin B16×55-ZnD GB/T 882
5	214030000025	2	Bearing 16×18×20 SF-1
6	215060000066	2	Pin 4×25-ZnD GB/T 91
7	215010000056	2	Bolt M8×16-8.8-ZnD GB/T 5783
8	214080000001	2	Bearing 20×23×21.5 SF-1F
9	215040000103	2	Washer 8-100HV-ZnD GB/T 5287
10	215040000005	2	Washer 8-ZnD GB/T 93

https://truckmanualshub.com/

1.4 REAR WHEEL INSTALLATION

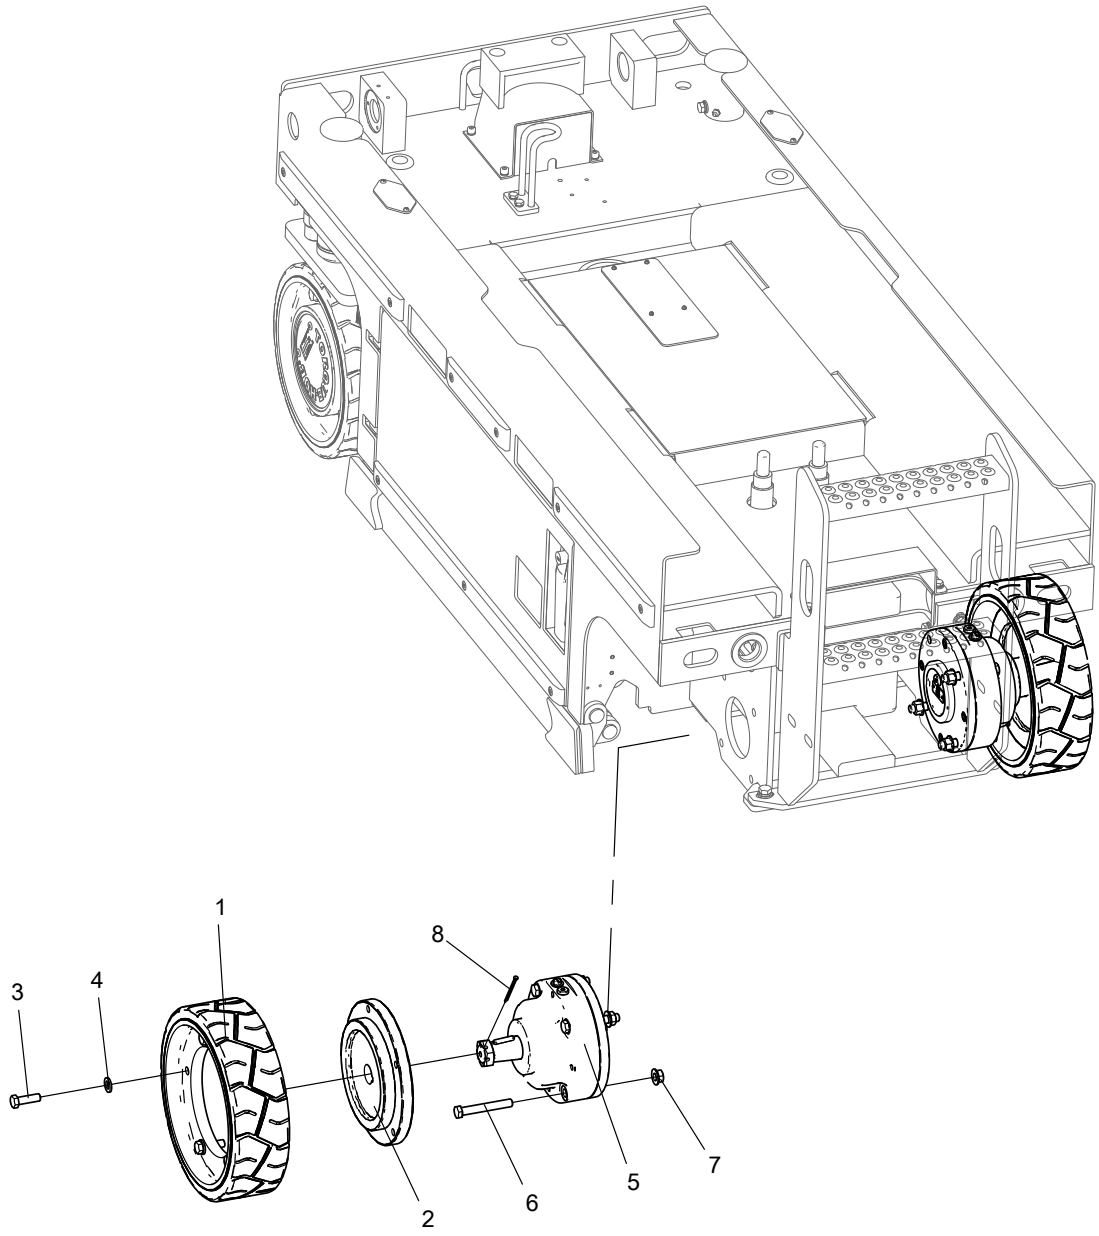


 © Jun 2021

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	204080000042	2	Solid wheel
2	101045030005	2	Wheel flange
3	215010000226	10	Bolt M12×1.5×40-10.9-DKL GB/T 5786
4	215040000037	10	Washer 12-200HV-ZnD GB/T 97.1
5	202050000006	2	Bearing block
6	215080000025	8	Bolt 1/2-13UNC-3.5inches GR8
7	215030000093	8	Nut 1/2"-13UNC GR8
8	215060000008	2	Cotter pin 4×63-ZnD GB/T 91

https://truckmanualshub.com/

1.5 POTHOLE PROTECTION SYSTEM INSTALLATION

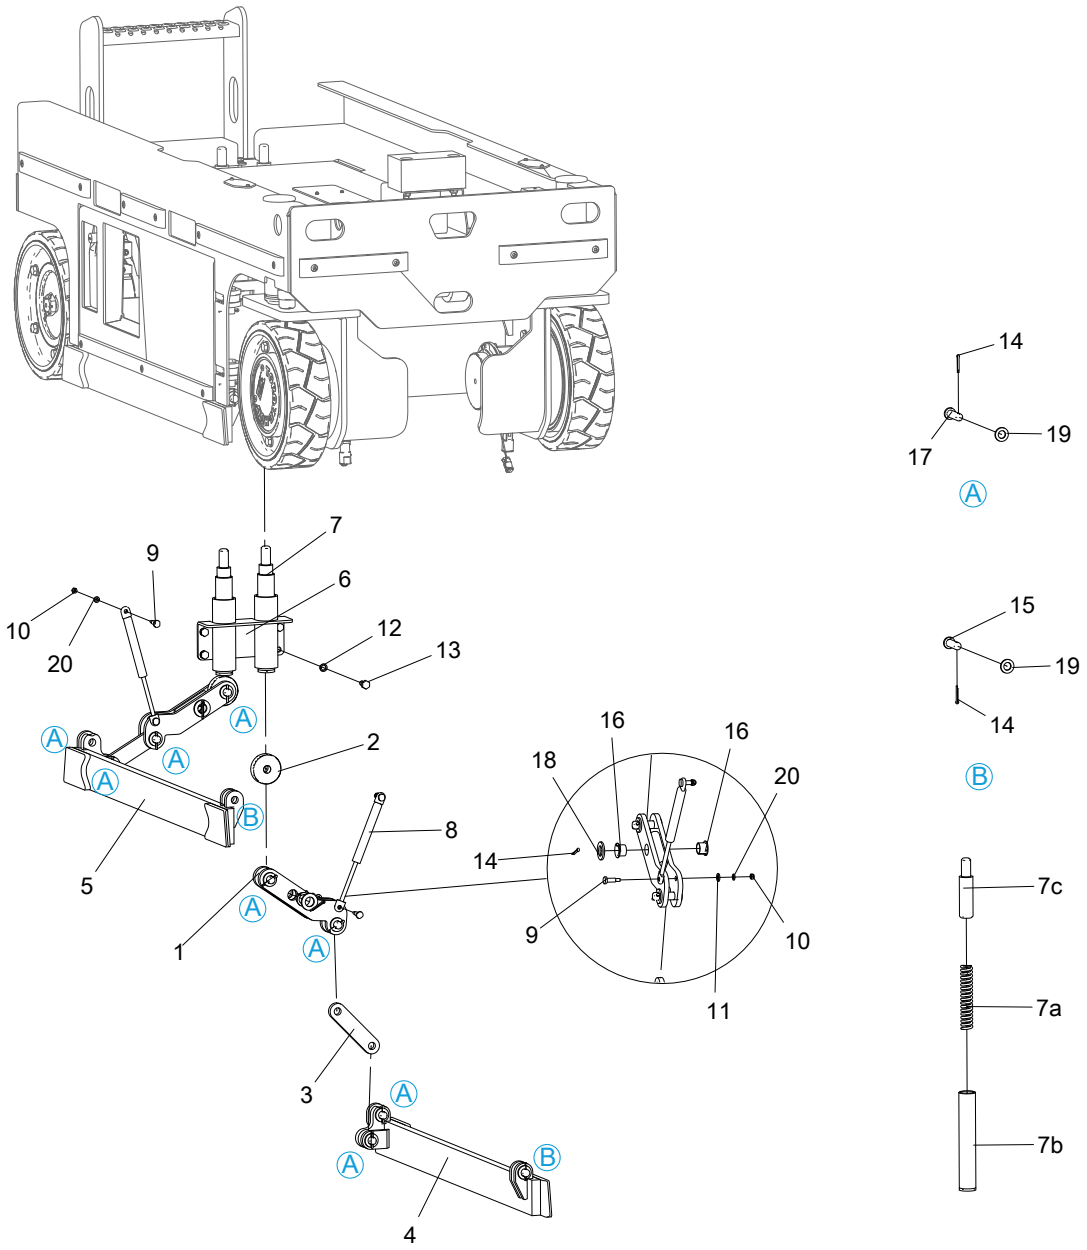


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101032030066	2	Linkage
2	101014030007	2	Roller
3	101032030007	2	Linkage
4	101058030012	1	Pothole protection plate, Left
5	101058030015	1	Pothole protection plate, Right
6	101032030054	1	Plunger
7	101012030021	2	Spring support
7a	101012030034	1	Spring
7b	101012030089	1	Steel pipe
7c	101012030072	1	Actuator
8	210010000006	2	Gas strut
9	101014030008	4	Clevis pin
10	215030000025	4	Nut M6-8-A2-70 GB/T 889.1
11	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
12	215040000006	4	Washer 10-ZnD GB/T 93
13	215010000068	4	Nut M10×20-8.8-ZnD GB/T 5783
14	215060000066	12	Pin 4×25-ZnD GB/T 91
15	215060000064	2	Clevis Pin B16×50-ZnD GB/T 882
16	214030000024	4	Bearing 20×23×16.5 SF-1F
17	215060000039	8	Clevis Pin B16×55-ZnD GB/T 882
18	215040000041	2	Washer 20-200HV-ZnD GB/T 97.1
19	215040000039	10	Washer 16-200HV-ZnD GB/T 97.1
20	215040000033	4	Washer 6-A2 GB/T 97.1

https://truckmanualshub.com/

1.6 LEFT DOOR INSTALLATION

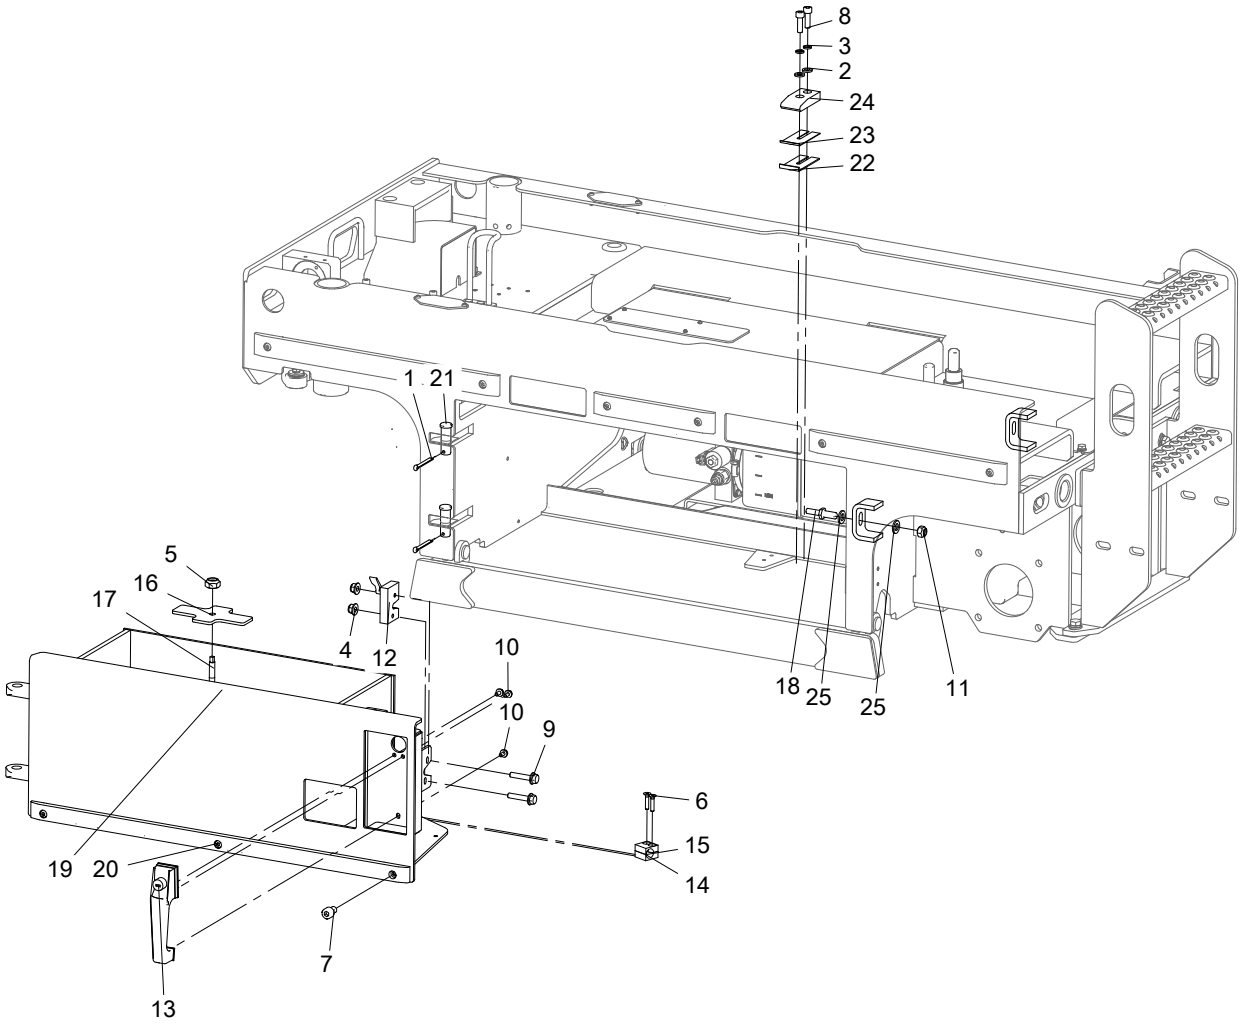


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215060000007	2	Pin 4×32-ZnD GB/T 91
2	215040000033	2	Washer 6-A2 GB/T 97.1
3	215040000004	2	Washer 6-A2-70 GB/T 93
4	215030000107	2	Nut M6-8-ZnD GB/T 6183
5	215030000027	1	Nut M10-8-ZnD GB/T 889.1
6	215020000231	2	Screw M6×30-A2-70 GB/T 70.3
7	215020000021	3	Screw M8×12-8.8-ZnD GB/T 70.1
8	215020000012	2	Screw M6×20-A2-70 GB/T 70.1
9	215010000282	2	Nut M6×30-8.8-ZnD GB/T 5789
10	215010000281	3	Bolt M6×12-8.8-ZnD GB/T 5789
11	215030000029	1	Nut M12-8-ZnD GB/T 889.1
12	209050000021	1	502 hood lock cylinder, Left
13	209030000009	1	Handle, latch
14	101040040070	1	Clamp
15	101040040069	1	Clamp
16	101038033051	1	Plate
17	101038033050	1	Screw rod
18	101017030054	1	Lock Catch
19	101038030011	1	Weldment, Left door
20	101038030001	1	Bumper strip
21	101032030062	2	Clevis Pin
22	101015030030	1	Shim
23	101015030029	1	Shim
24	101014030014	1	Pad
25	215040000037	2	Washer 12-200HV-ZnD GB/T 97.1

https://truckmanualshub.com/

1.7 LEFT DOOR INSTALLATION(AS)

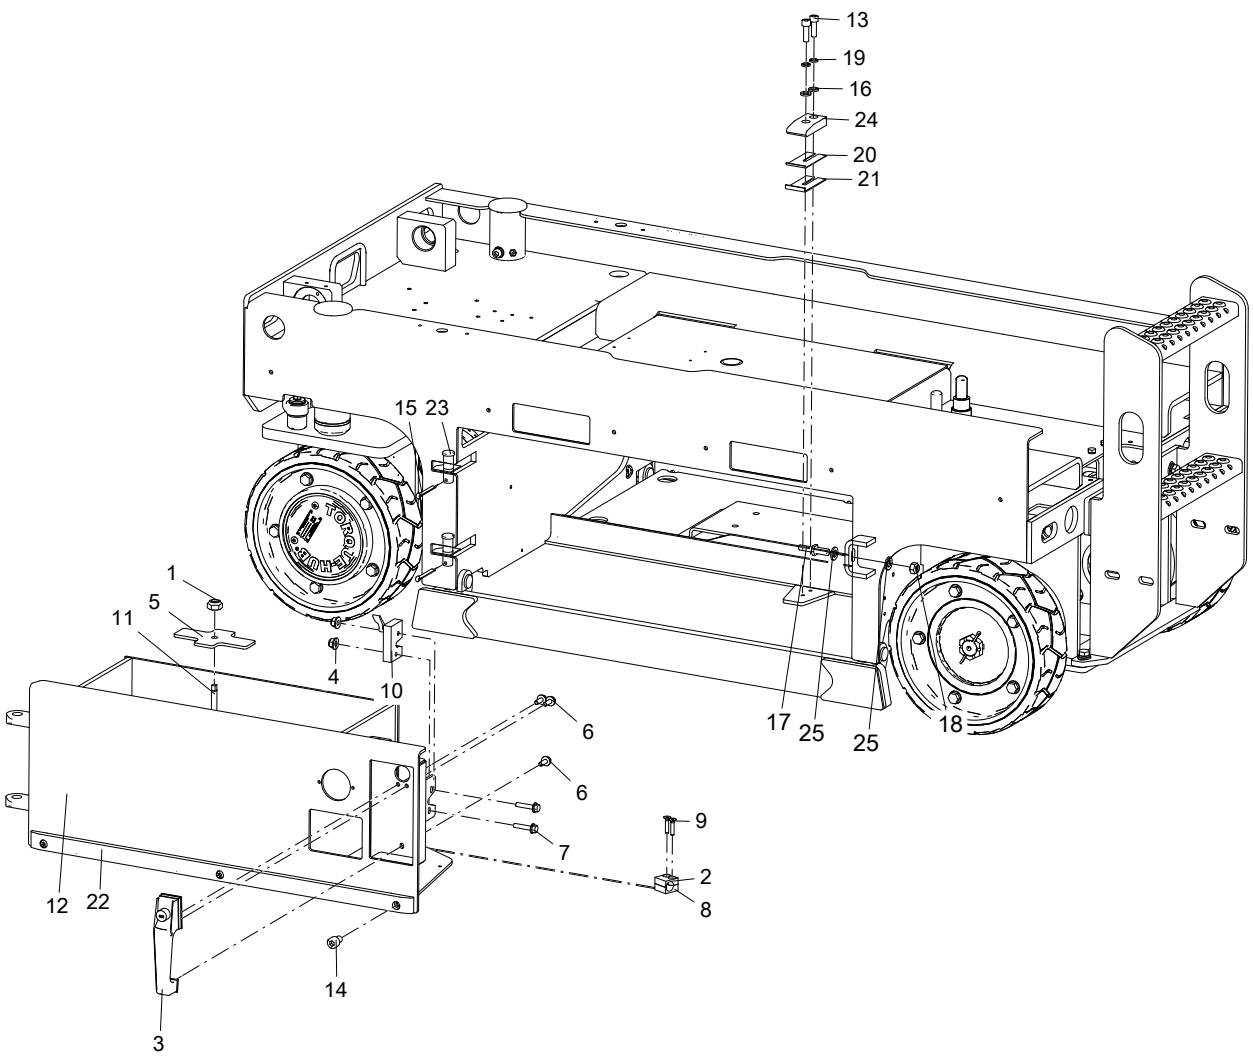


 © Jun 2021

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215030000027	1	Nut M10-8-ZnD GB/T 889.1
2	101040040069	1	Clamp
3	209030000009	1	Handle, latch
4	215030000107	2	Nut M6-8-ZnD GB/T 6183
5	101038033051	1	Plate
6	215010000230	3	Bolt M6×16-8.8-ZnD GB/T 5789
7	215010000282	2	Nut M6×30-8.8-ZnD GB/T 5789
8	101040040070	1	Clamp
9	215020000231	2	Screw M6×30-A2-70 GB/T 70.3
10	209050000021	1	502 hood lock cylinder, Left
11	101038033050	1	Screw rod
12	101038033044	1	Weldment,Lleft door
13	215020000012	2	Screw M6×20-A2-70 GB/T 70.1
14	215020000021	3	Screw M8×12-8.8-ZnD GB/T 70.1
15	215060000007	2	Pin 4×32-ZnD GB/T 91
16	215040000033	2	Washer 6-A2 GB/T 97.1
17	101017030054	1	Lock Catch
18	215030000029	1	Nut M12-8-ZnD GB/T 889.1
19	215040000004	2	Washer 6-A2-70 GB/T 93
20	101015030029	1	Shim
21	101015030030	1	Shim
22	101038030001	1	Bumper strip
23	101032030062	2	Clevis Pin
24	101014030014	1	Pad
25	215040000037	2	Washer 12-200HV-ZnD GB/T 97.1

https://truckmanualshub.com/

1.8 RIGHT DOOR INSTALLATION

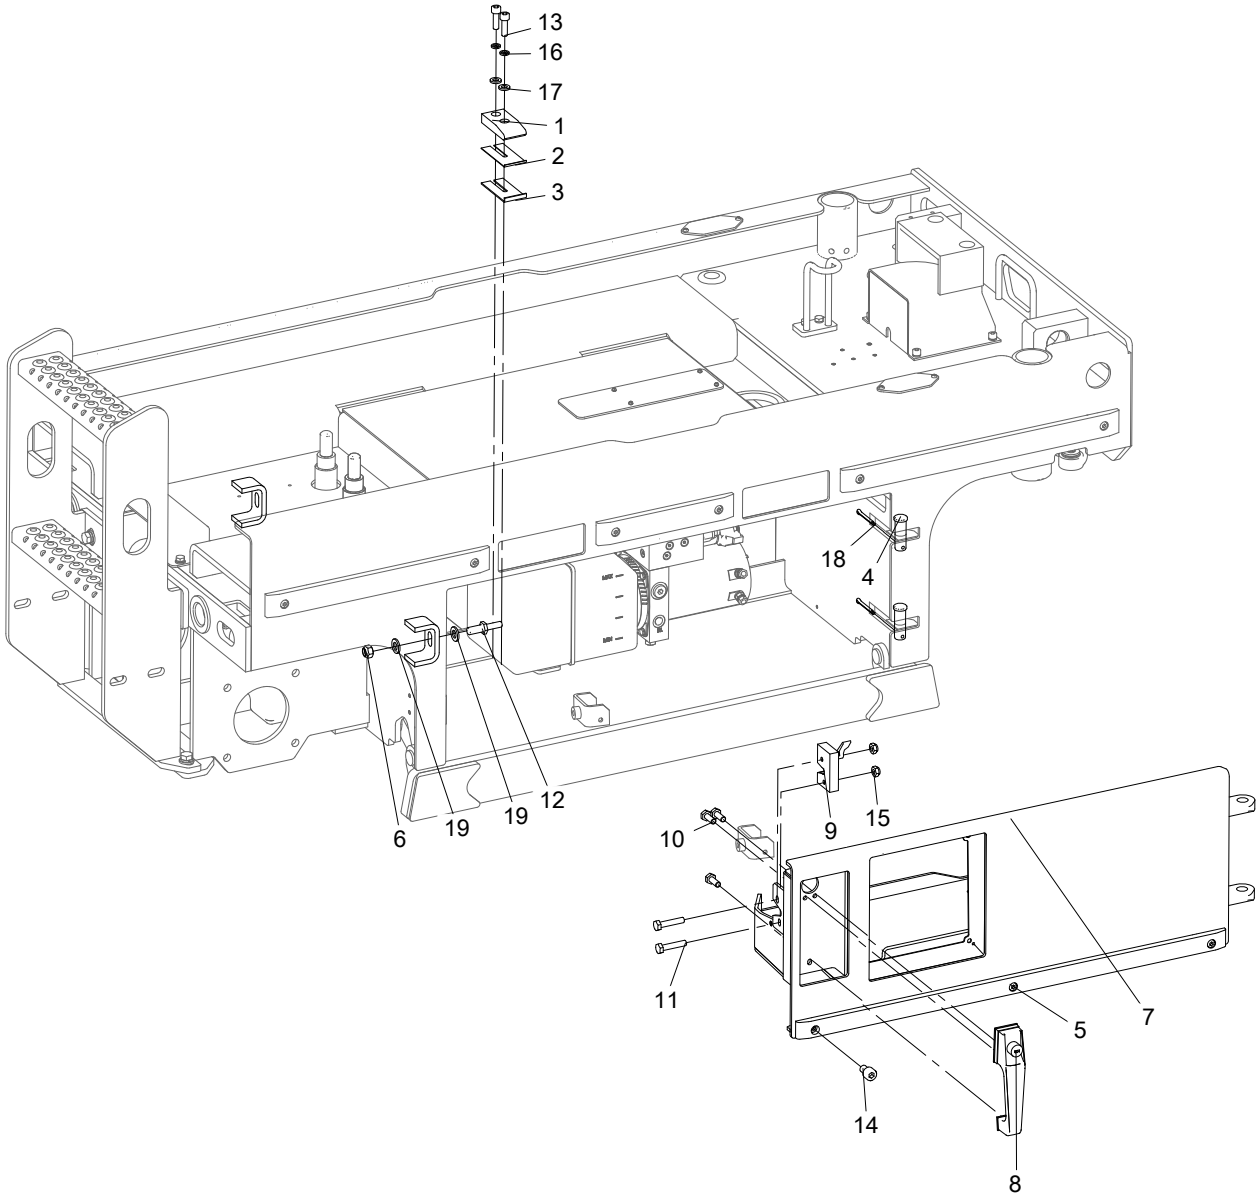


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101014030014	1	Pad
2	101015030029	1	Shim
3	101015030030	1	Shim
4	101032030062	2	Clevis Pin
5	101038030001	1	Bumper strip
6	215030000029	1	Nut M12-8-ZnD GB/T 889.1
7	101058030016	1	Weldment, Right door
8	209030000009	1	Handle, latch
9	209050000020	1	502 hood lock cylinder,Right
10	215010000050	3	Bolt M6×16-A2-70 GB/T 5783
11	215010000053	2	Bolt M6×30-A2-70 GB/T 5783
12	101017030054	1	Lock Catch
13	215020000012	2	Screw M6×20-A2-70 GB/T 70.1
14	215020000021	3	Screw M8×12-8.8-ZnD GB/T 70.1
15	215030000025	2	Nut M6-8-A2-70 GB/T 889.1
16	215040000004	2	Washer 6-A2-70 GB/T 93
17	215040000033	2	Washer 6-A2 GB/T 97.1
18	215060000007	2	Pin 4×32-ZnD GB/T 91
19	215040000037	2	Washer 12-200HV-ZnD GB/T 97.1

https://truckmanualshub.com/

1.9 LADDER AND COUNTERWEIGHT INSTALLATION (GTJZ0408SE&0408ME)

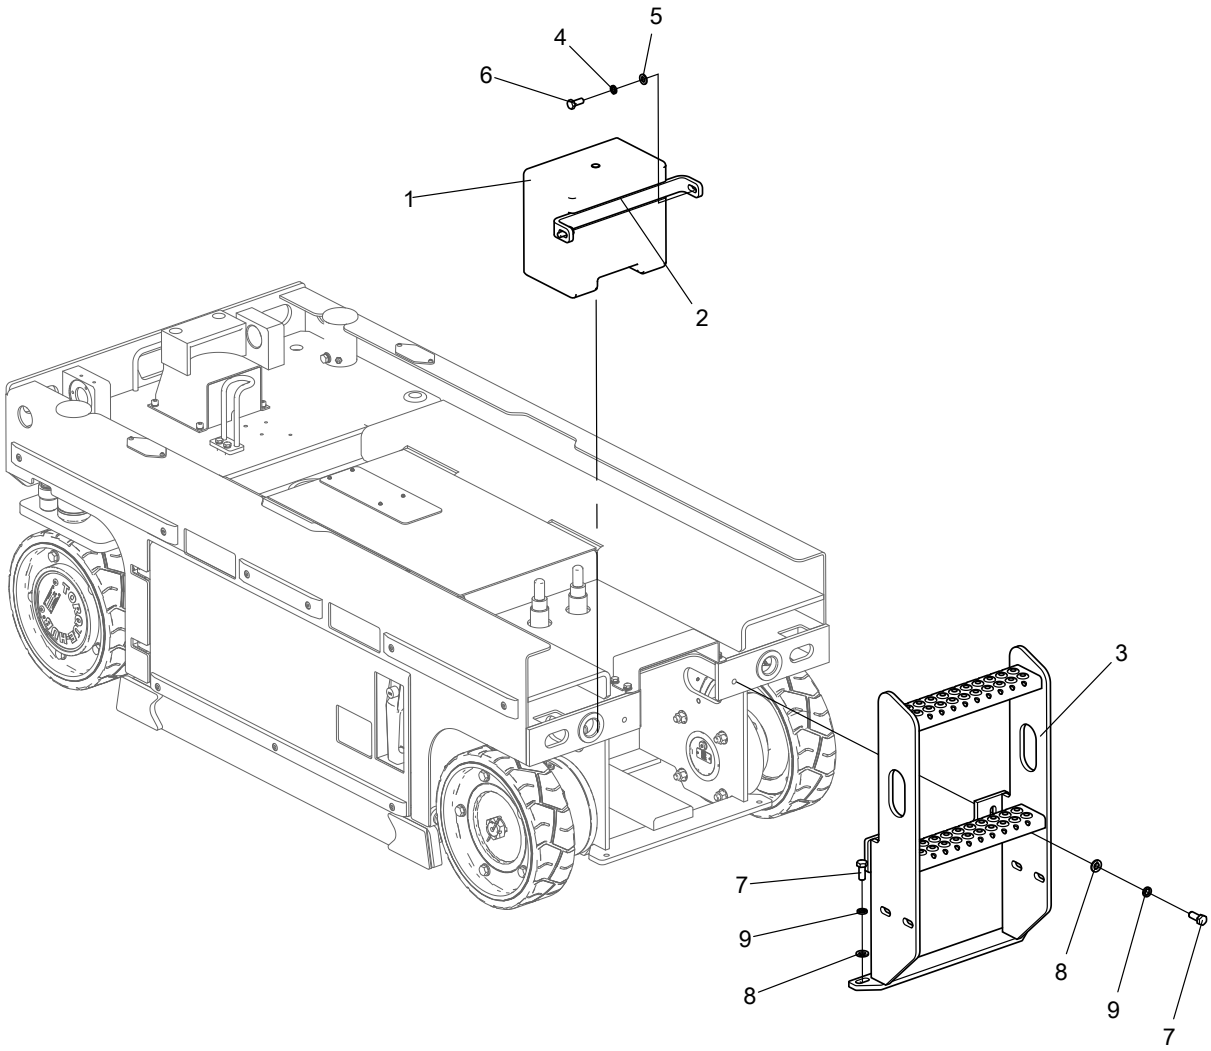


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101038030024	1	Counterweight
2	101032030097	1	Plate
3	101016030061	1	Ladder
4	215040000006	2	Washer 10-ZnD GB/T 93
5	215040000035	2	Washer 10-200HV-ZnD GB/T 97.1
6	215010000069	2	Nut M10×25-8.8-ZnD GB/T 5783
7	215010000090	4	Bolt M12×30-8.8-ZnD GB/T 5783
8	215040000037	4	Washer 12-200HV-ZnD GB/T 97.1
9	215040000007	4	Washer 12-ZnD GB/T 93

https://truckmanualshub.com/

1.10 LADDER AND COUNTERWEIGHT INSTALLATION (GTJZ0608SE&0608ME)

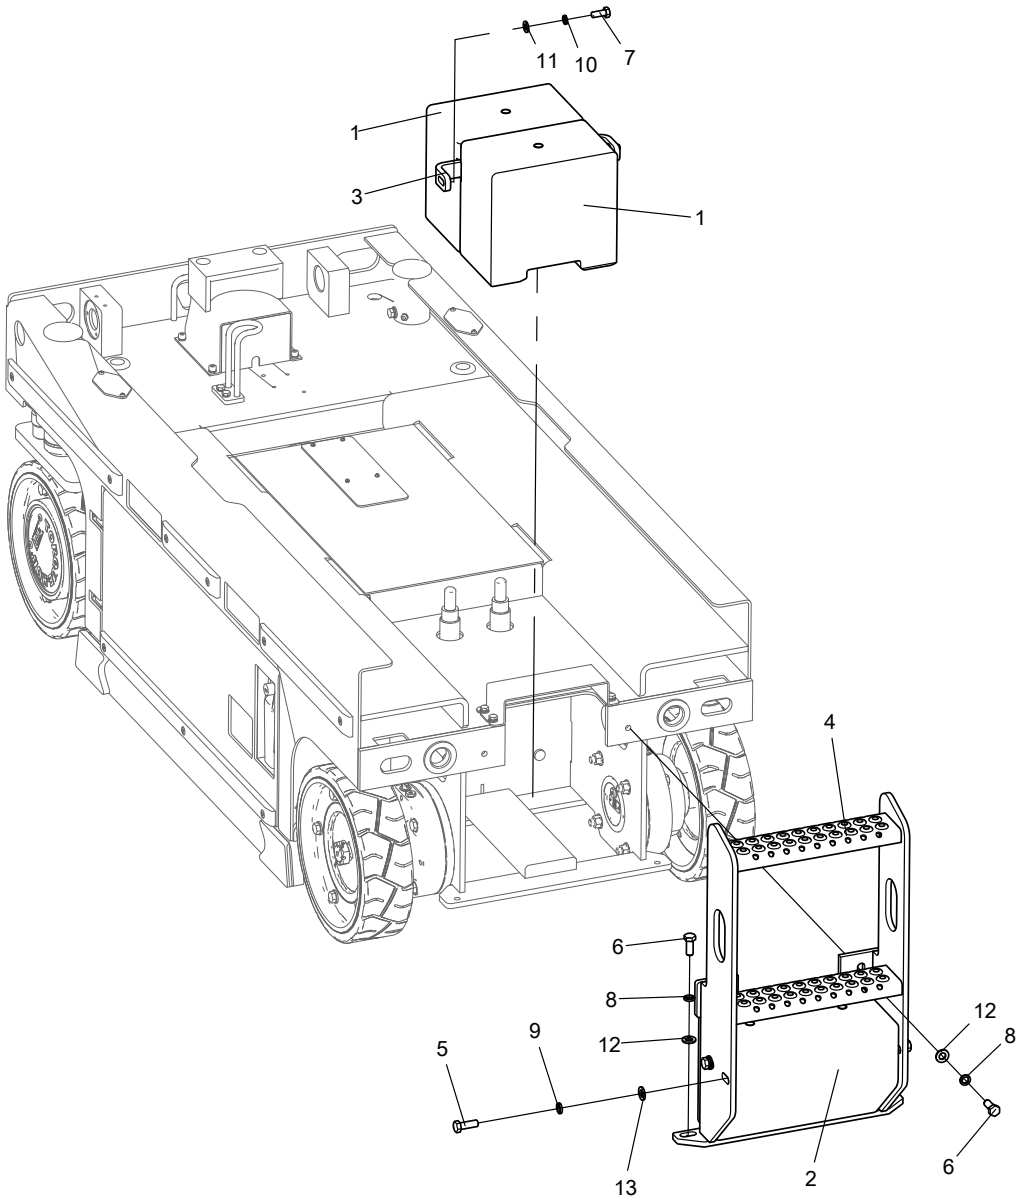


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101038030024	2	Counterweight
2	101038030025	1	Counterweight
3	101032030097	1	Plate
4	101016030061	1	Ladder
5	215010000092	4	Nut M12×35-8.8-ZnD GB/T 5783
6	215010000090	4	Bolt M12×30-8.8-ZnD GB/T 5783
7	215010000069	2	Nut M10×25-8.8-ZnD GB/T 5783
8	215040000007	4	Washer 12-ZnD GB/T 93
9	215040000007	4	Washer 12-ZnD GB/T 93
10	215040000006	2	Washer 10-ZnD GB/T 93
11	215040000035	2	Washer 10-200HV-ZnD GB/T 97.1
12	215040000037	4	Washer 12-200HV-ZnD GB/T 97.1
13	215040000037	4	Washer 12-200HV-ZnD GB/T 97.1

https://truckmanualshub.com/

1.11 CHASSIS SHIELD INSTALLATION

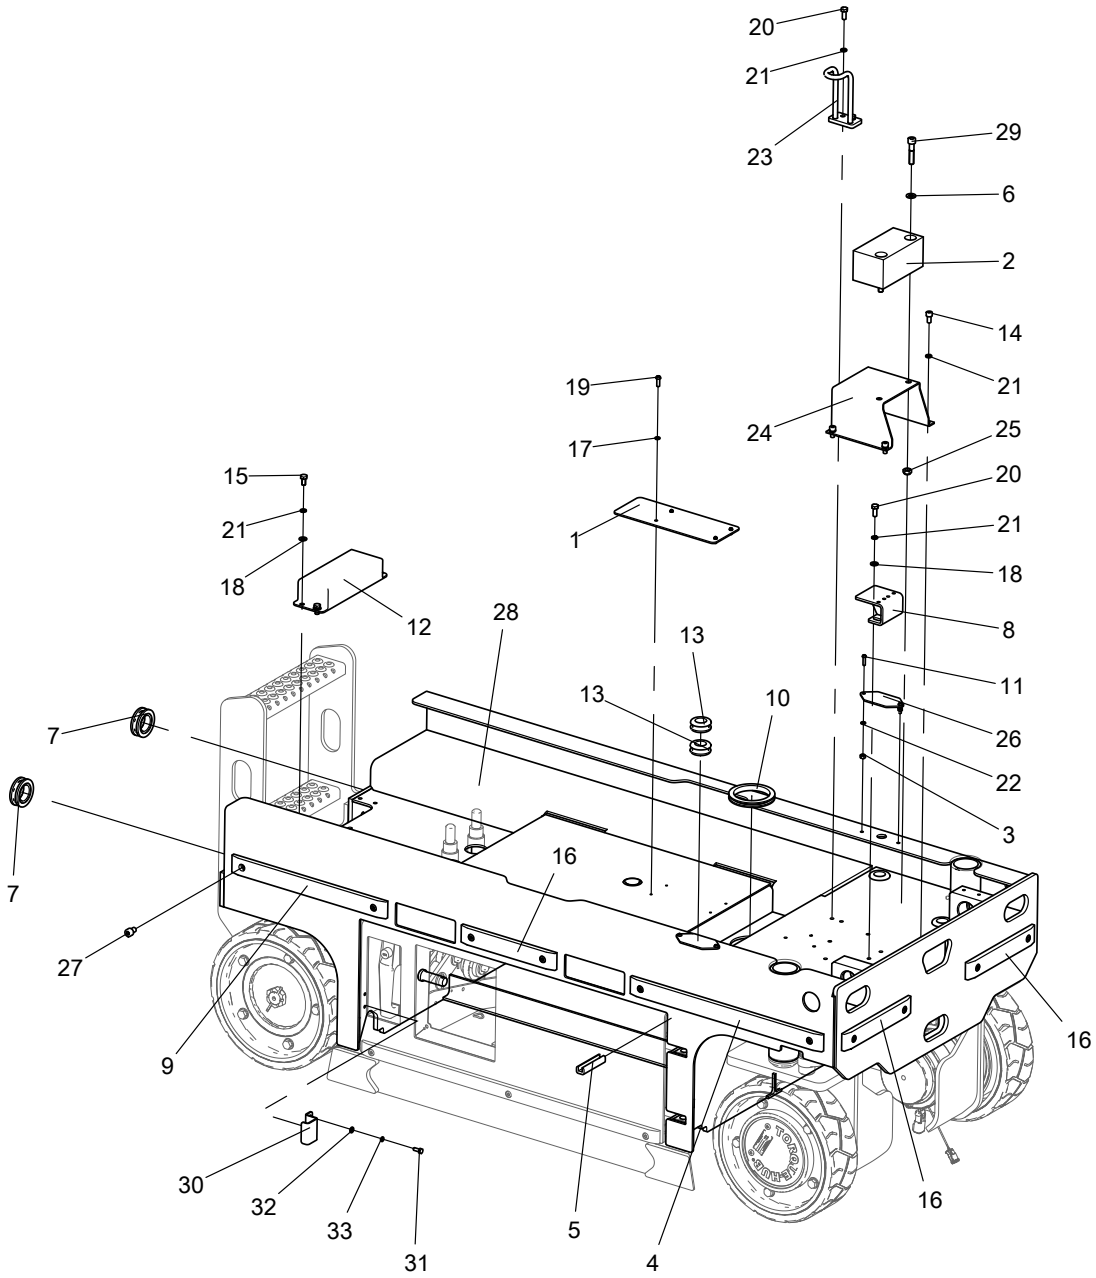

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
1	101058033019	1	Coverplate
2	101032030090	1	Clamp
3	215030000003	4	Nut M5-A2-70 GB/T 6170
4	101054033020	2	Bumper strip
5	216030000005	3	Rubber grommet
6	215040000035	2	Washer 10-200HV-ZnD GB/T 97.1
7	101032030115	2	Rubber grommet
8	101015030020	1	Bracket
9	101054033012	2	Bumper strip
10	101014030104	1	Rubber grommet
11	215020000112	4	Screw M5×20-A2-70 GB/T 818
12	101016030044	1	Protective Cover
13	101032030094	5	Rubber grommet
14	215020000022	4	Screw M8×16-8.8-ZnD GB/T 70.1
15	215010000056	4	Bolt M8×16-8.8-ZnD GB/T 5783
16	101054043028	4	Bumper strip
17	215040000002	4	Washer 4-A2-70 GB/T 93
18	215040000034	6	Washer 8-200HV-ZnD GB/T 97.1
19	215020000105	4	Screw M4×12-A2-70 GB/T 818
20	215010000057	4	Bolt M8×20-8.8-ZnD GB/T 5783
21	215040000005	12	Washer 8-ZnD GB/T 93
22	215040000003	4	Washer 5-A2-70 GB/T 93
23	101032030093	1	Clamp
24	101032030072	1	Cover
25	215030000027	2	Nut M10-8-ZnD GB/T 889.1
26	101053033000	2	Coverplate
27	215020000021	16	Screw M8×12-8.8-ZnD GB/T 70.1
28	101058033004	1	Weldment, Chassis
29	215020000057	2	Screw M10×50-8.8-ZnD GB/T 70.1
30	101014030107	2	Bracket
31	215010000050	4	Bolt M6×16-A2-70 GB/T 5783
32	215040000033	4	Washer 6-A2 GB/T 97.1
33	215040000004	4	Washer 6-A2-70 GB/T 93

https://truckmanualshub.com/


2 SCISSOR COMPONENTS

https://truckmanualshub.com/


2.1 SCISSOR COMPONENTS (GTJZ0408SE&0408ME)

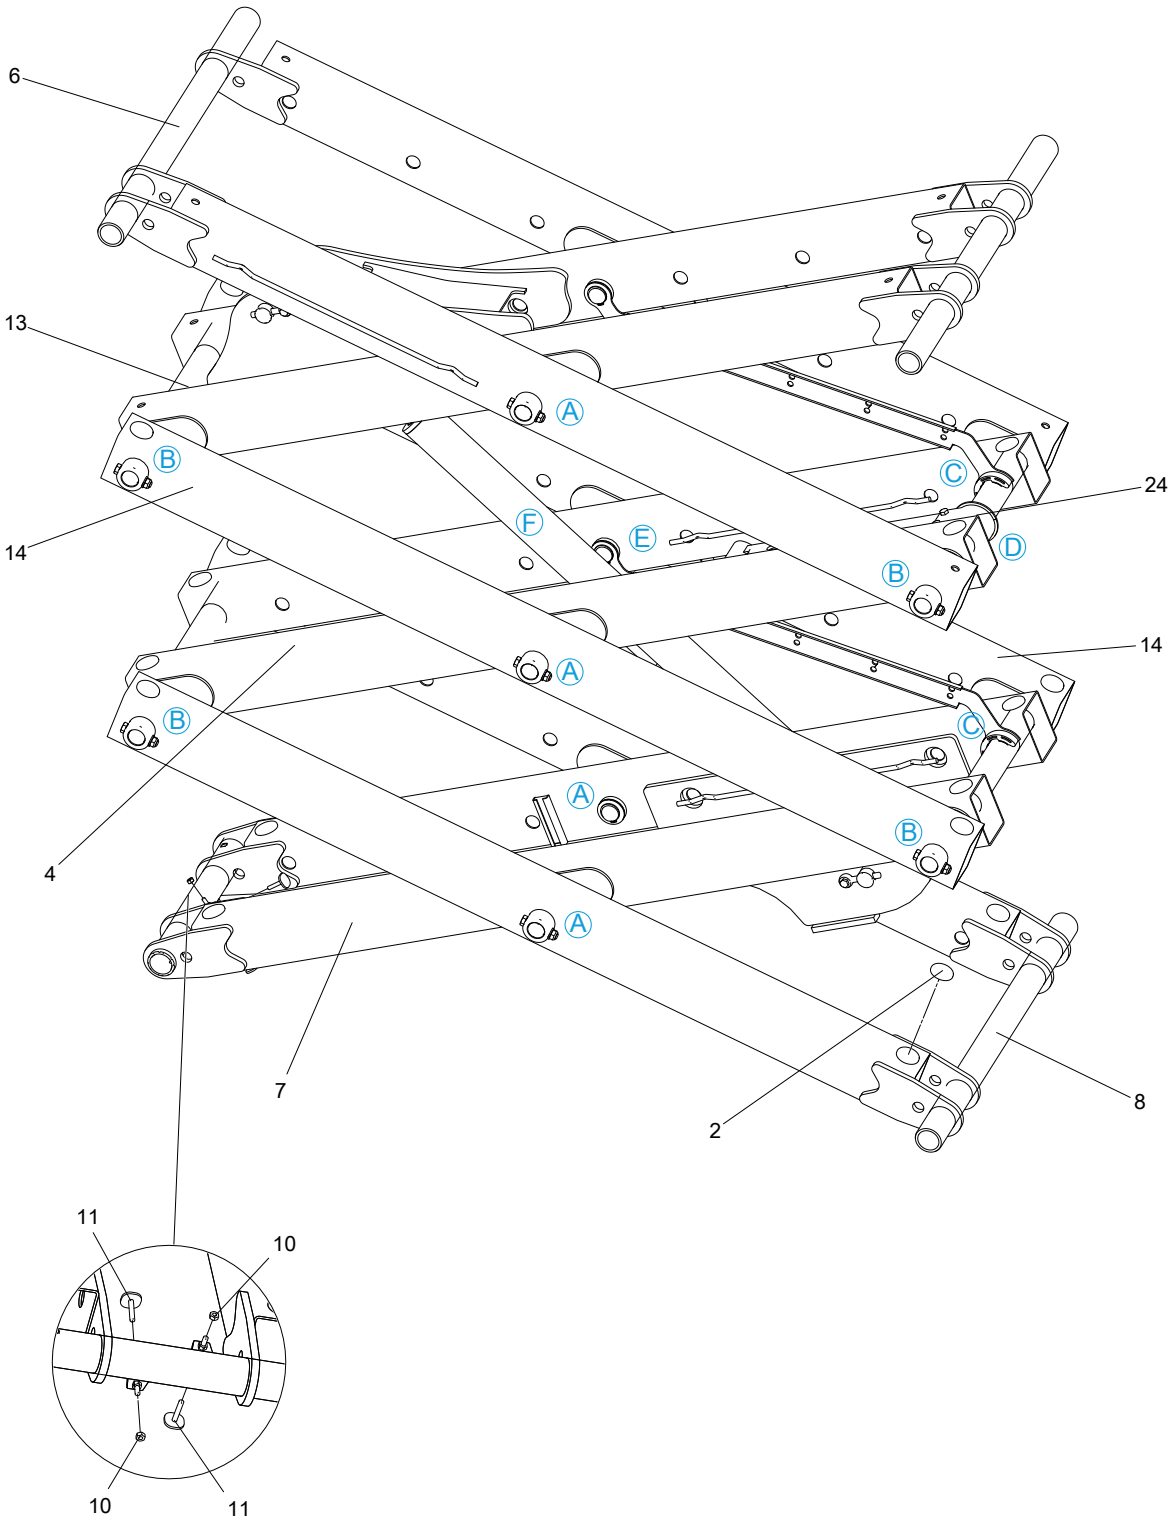

https://truckmanualshub.com/

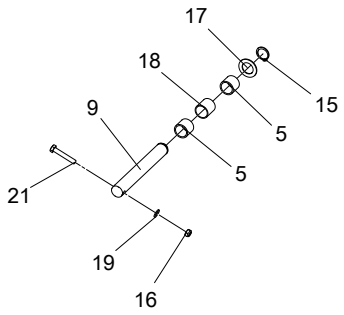


Ⓐ

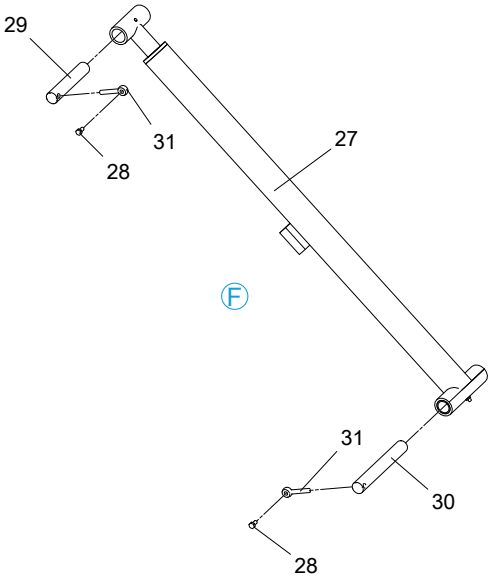


Ⓕ




Ⓒ

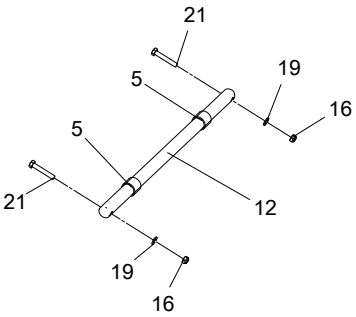

Ⓑ

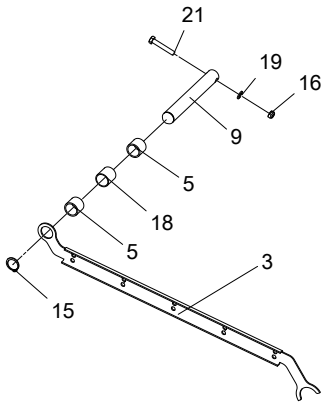

Ⓔ

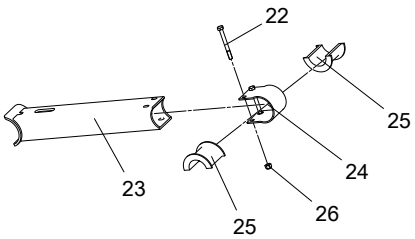

Ⓓ


 © Jun 2021

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
1	215020000264	2	Screw M5×16-A2-70 GB/T70.3
2	101016010055	16	Pad
3	101033010004	2	Rod, spool
4	101032010020	1	Arm, inboard
5	214030000006	20	Self-lubricating bearing
6	101032010018	1	Arm, Outboard
7	101032010003	1	Arm, inboard
8	101032010022	1	Arm, Outboard
9	101033010005	6	Pin
10	215030000004	2	Nut M6-A2-70 GB/T 6170
11	101015030022	2	Special bolt
12	101032010006	4	Pin
13	101032010016	1	Arm, inboard
14	101032010014	2	Arm, Outboard
15	215040000096	6	Retaining ring 30-DKL JB/ZQ 4342
16	215030000027	14	Nut M10-8-ZnD GB/T 889.1
17	101012010075	4	Retaining ring
18	101012010057	6	Spacer sleeve
19	215040000035	14	Washer 10-200HV-ZnD GB/T 97.1
20	101032010008	2	Clamp
21	215010000010	14	Bolt M10×60-8.8-ZnD GB/T 5782
22	215010000006	2	Bolt M8×80-8.8-ZnD GB/T 5782
23	101016010061	1	Safety arm
24	101016010068	1	Clamp
25	101011010008	2	Rubber grommet
26	215030000026	2	Nut M8-8-ZnD GB/T889.1
27	101032010001	1	Lift Cylinder
27a-1	207990003002	1	Seal kit, cylinder(1000122)
27a-2	207990003004	1	Seal kit, cylinder(1000145)
28	215010000056	2	Bolt M8×16-8.8-ZnD GB/T 5783
29	101012010016	1	Pin, upper end
30	101012010032	1	Pin, lower end
31	101012010044	2	Keeper pin


https://truckmanualshub.com/


2.2 SCISSOR COMPONENTS (GTJZ0608SE&0608ME)

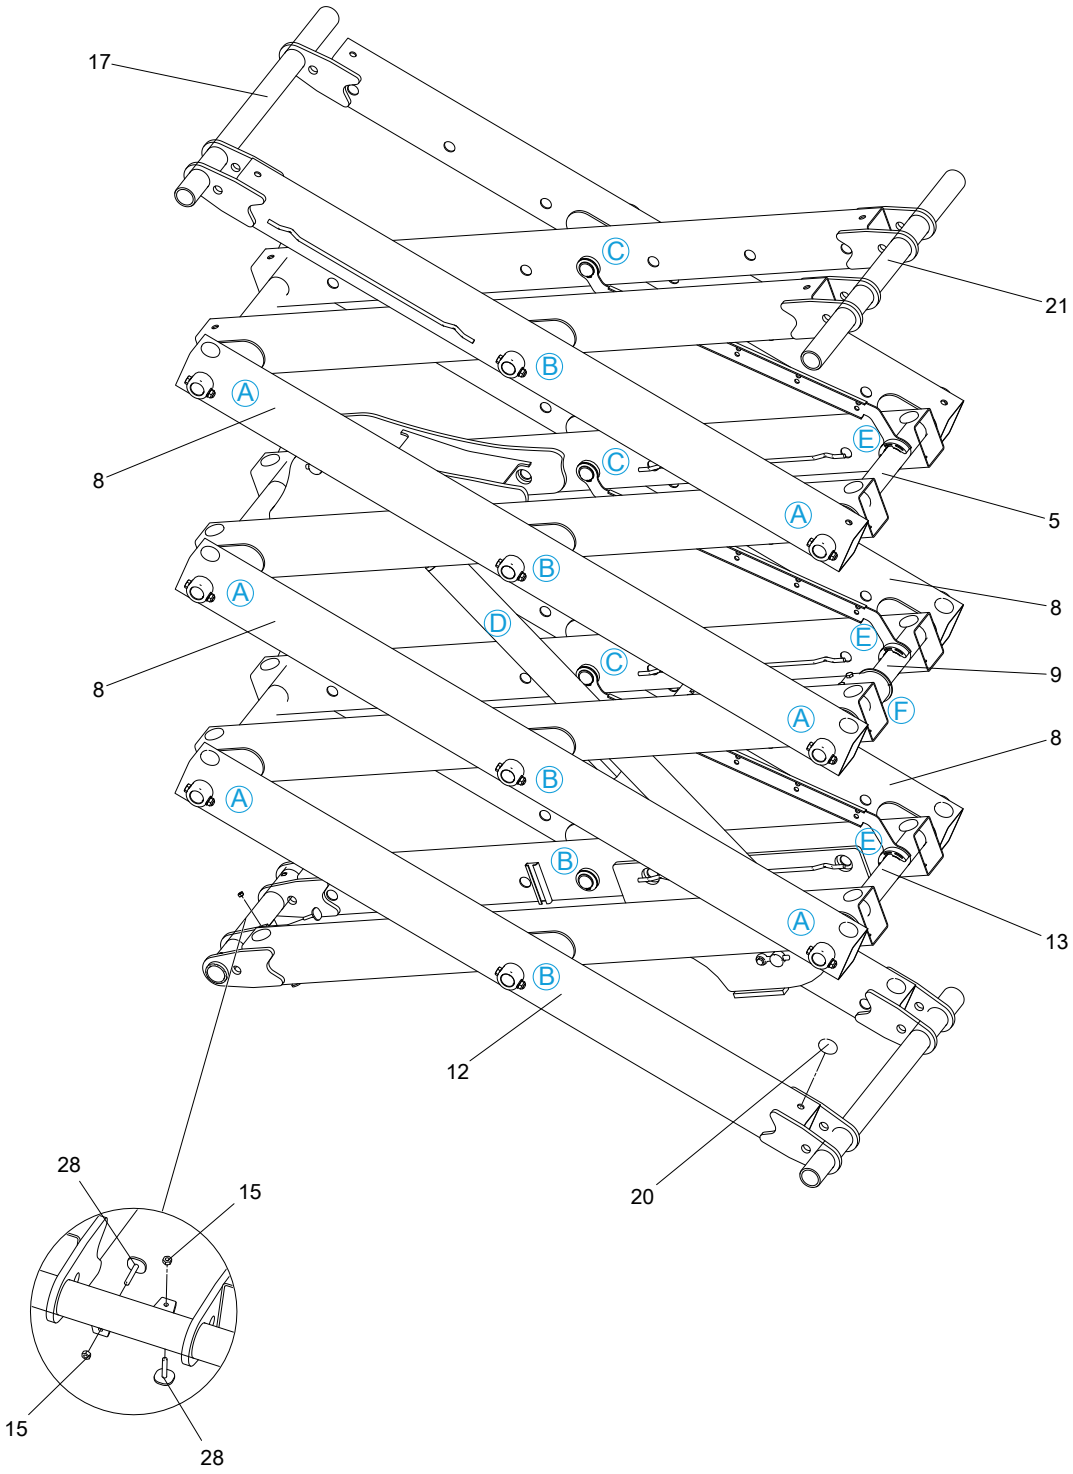



https://truckmanualshub.com/

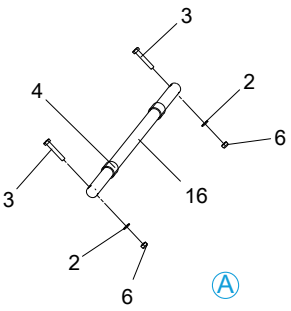


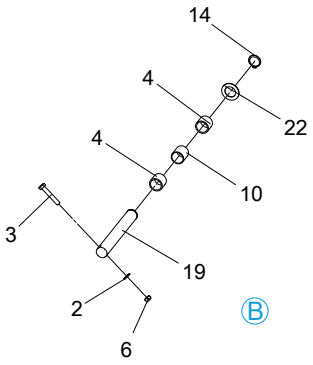

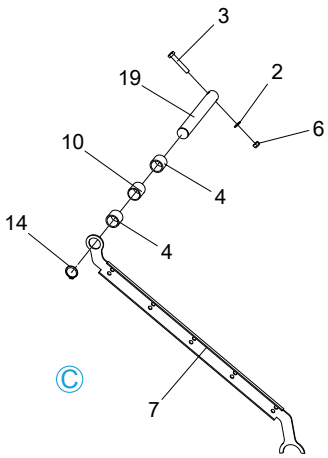

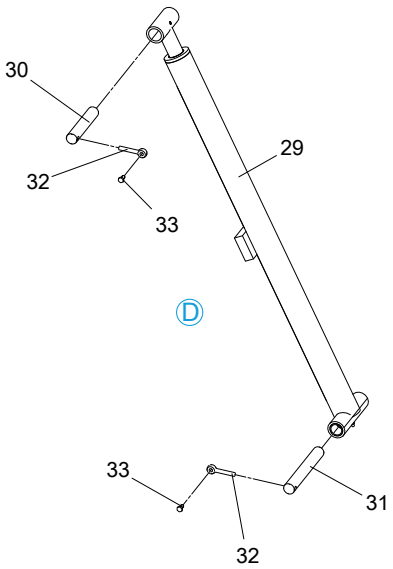

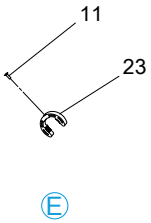

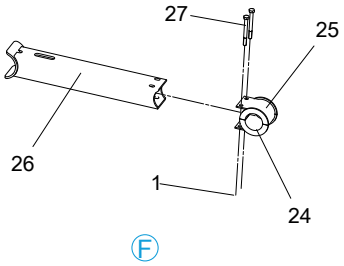

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215030000026	2	Nut M8-8-ZnD GB/T889.1
2	215040000035	20	Washer 10-200HV-ZnD GB/T 97.1
3	215010000010	20	Bolt M10×60-8.8-ZnD GB/T 5782
4	214030000006	28	Self-lubricating bearing
5	101033010002	1	Arm, inboard
6	215030000027	20	Nut M10-8-ZnD GB/T 889.1
7	101033010004	3	Rod, spool
8	101032010014	4	Arm, Outboard
9	101032010020	1	Arm, inboard
10	101012010057	8	Spacer sleeve
11	215020000264	3	Screw M5×16-A2-70 GB/T70.3
12	101032010022	1	Arm, Outboard
13	101032010003	1	Arm, inboard
14	215040000096	8	Retaining ring 30-DKL JB/ZQ 4342
15	215030000004	2	Nut M6-A2-70 GB/T 6170
16	101032010006	6	Pin
17	101032010018	1	Arm, Outboard
19	101033010005	8	Pin
20	101016010055	25	Pad
21	101033010003	1	Arm, inboard
22	101012010075	5	Retaining ring
23	101032010008	3	Clamp
24	101011010008	2	Rubber grommet
25	101016010068	1	Clamp
26	101016010061	1	Safety arm
27	215010000006	2	Bolt M8×80-8.8-ZnD GB/T 5782
28	101015030021	2	Special Bolt
29	101032010001	1	Lift Cylinder
29a-1	207990003002	1	Seal kit, cylinder(1000122)
29a-2	207990003004	1	Seal kit, cylinder(1000145)
30	101012010016	1	Pin, upper end
31	101012010032	1	Pin, lower end
32	101012010044	2	Keeper pin
33	215010000056	2	Bolt M8×16-8.8-ZnD GB/T 5783

https://truckmanualshub.com/

This Page Intentionally Left Blank

https://truckmanualshub.com/


3 PLATFORM COMPONENTS

https://truckmanualshub.com/

3.1 PLATFORM COMPONENTS(JAPANESE SPECS)

https://truckmanualshub.com/

3.1.1 FIXED PLATFORM ASSEMBLY (JAPANESE SPECS)

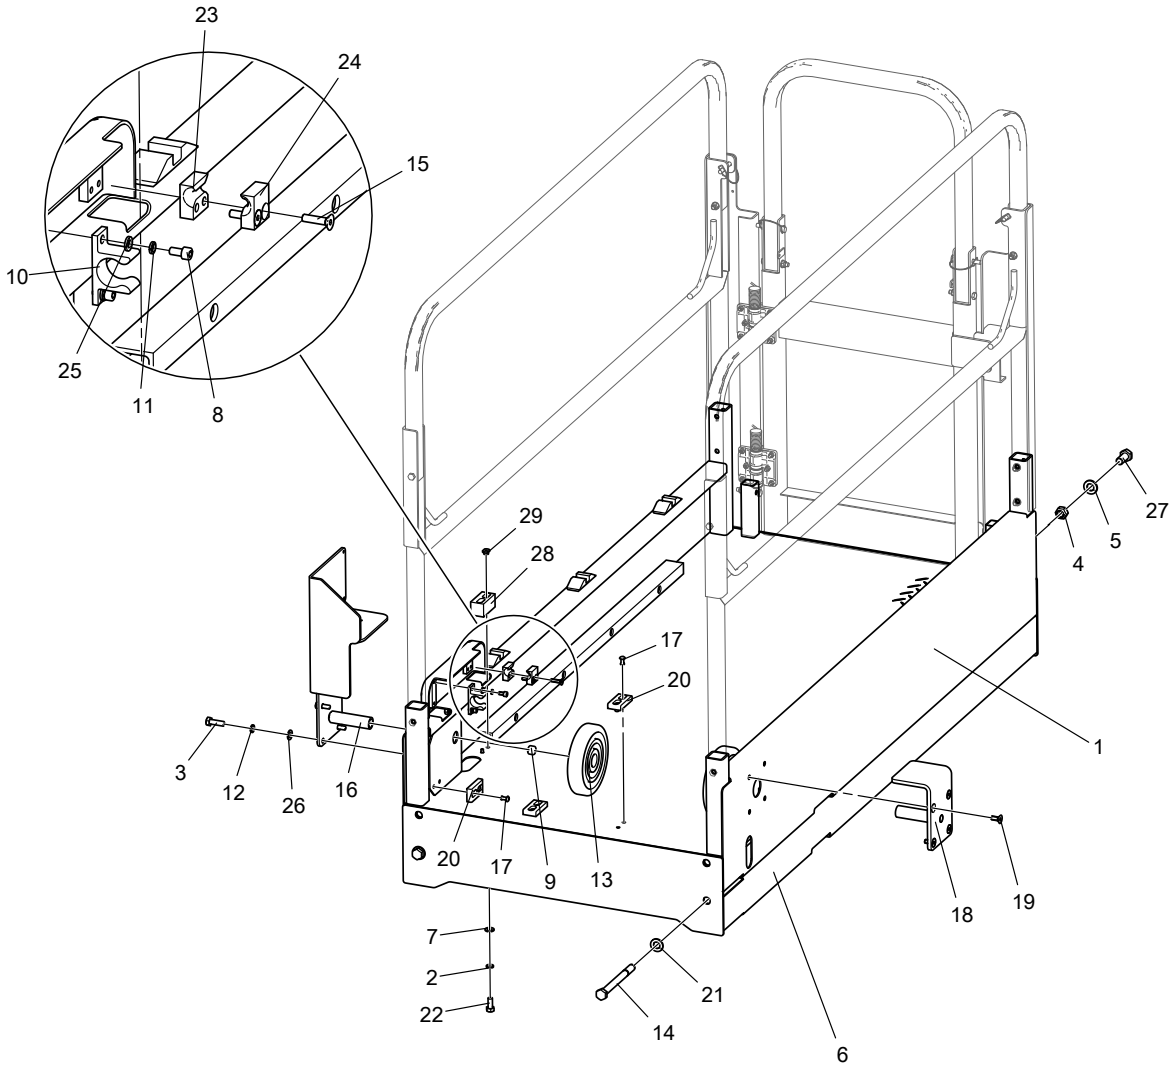


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101036040002	1	Fixed platform
2	215040000003	4	Washer 5-A2-70 GB/T 93
3	215010000058	4	Bolt M8×25-8.8-ZnD GB/T 5783
4	215030000029	2	Nut M12-8-ZnD GB/T 889.1
5	215040000037	2	Washer 12-200HV-ZnD GB/T 97.1
6	101032040040	1	Support, platform(Models with 4m platform height only)
7	215040000032	4	Washer 5-A2 GB/T 97.1
8	215020000010	2	Screw M6×12-A2-70 GB/T 70.1
9	101016040136	2	Sliding block
10	101040040071	1	Clamp
11	215040000004	2	Washer 6-A2-70 GB/T 93
12	215040000005	4	Washer 8-ZnD GB/T 93
13	101035040018	2	Roller
14	215010000223	2	Bolt M14×155-8.8-ZnD GB/T 5782
15	215020000230	2	Screw M6×25-A2-70 GB/T 70.3
16	101030040006	1	Bracket
17	215050000007	8	Blind rivet 6×10-ZnD GB/T 12618.2
18	101016040146	1	Bracket
19	215020000226	4	Screw M8×20-8.8-ZnD GB/T 70.3
20	101016040113	4	Pad
21	215040000119	2	Washer 14-200HV GB/T97.1
22	215010000041	4	Bolt M5×12-A2-70 GB/T 5783
23	101040040070	1	Clamp
24	101040040069	1	Clamp
25	215040000033	2	Washer 6-A2 GB/T 97.1
26	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
27	215010000089	2	Bolt M12×25-8.8-ZnD GB/T 5783
28	101032040061	2	Pad
29	101012040008	4	Special Nut

https://truckmanualshub.com/

3.1.2 EXTENDED PLATFORM ASSEMBLY (JAPANESE SPECS)

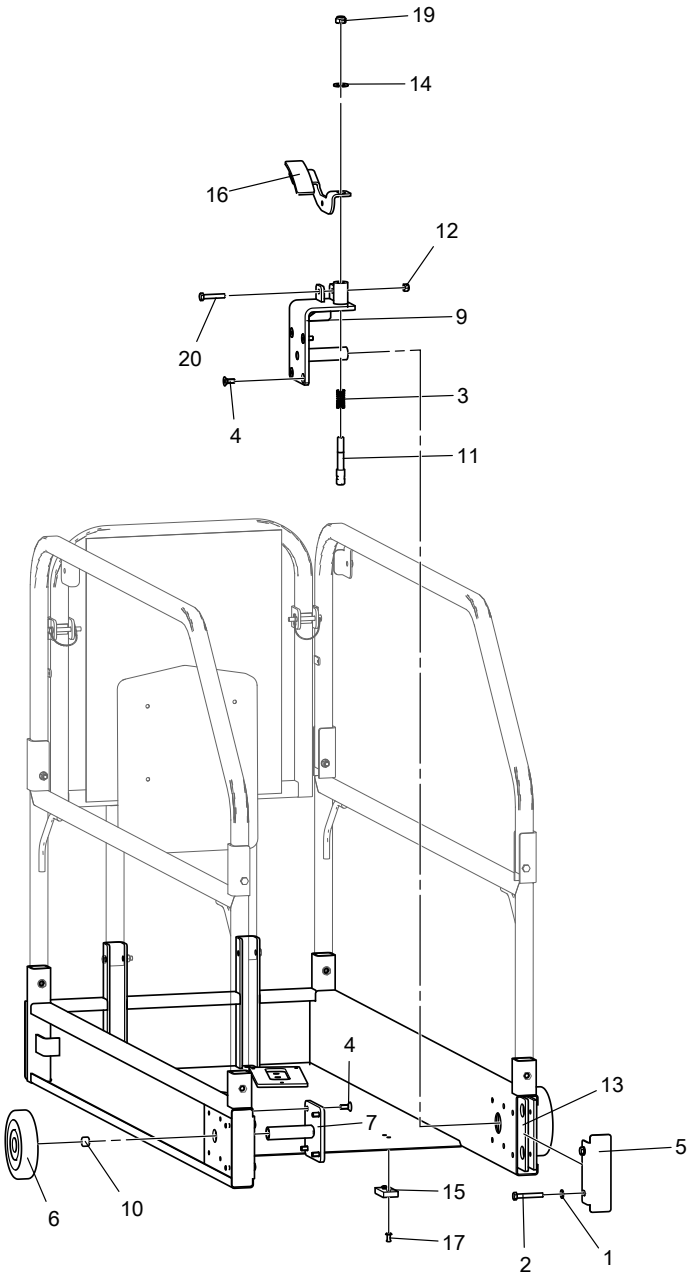


 © Jun 2021

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
2	215010000064	4	Bolt M8×55-8.8-ZnD GB/T 5783
3	101040040062	1	Spring
4	215020000226	8	Screw M8×20-8.8-ZnD GB/T 70.3
5	101038040028	2	Cover
6	101013040015	2	Roller
7	101039040024	1	Bracket
8	101038043003	1	Extended platform
9	101015040103	1	Bracket
10	101016040136	1	Sliding block
11	101040040060	1	Rod
12	215030000026	1	Nut M8-8-ZnD GB/T889.1
13	101055043000	2	Plate
14	215040000119	1	Washer 14-200HV GB/T97.1
15	101016040113	2	Pad
16	101040040066	1	Pedal
17	215050000007	4	Blind rivet 6×10-ZnD GB/T 12618.2
18	101016040136	1	Sliding block
19	215030000029	1	Nut M12-8-ZnD GB/T 889.1
20	215010000062	1	Bolt M8×45-8.8-ZnD GB/T 5783

https://truckmanualshub.com/

3.1.3 FIXED PLATFORM RAILS INSTALLATION (JAPANESE SPECS)

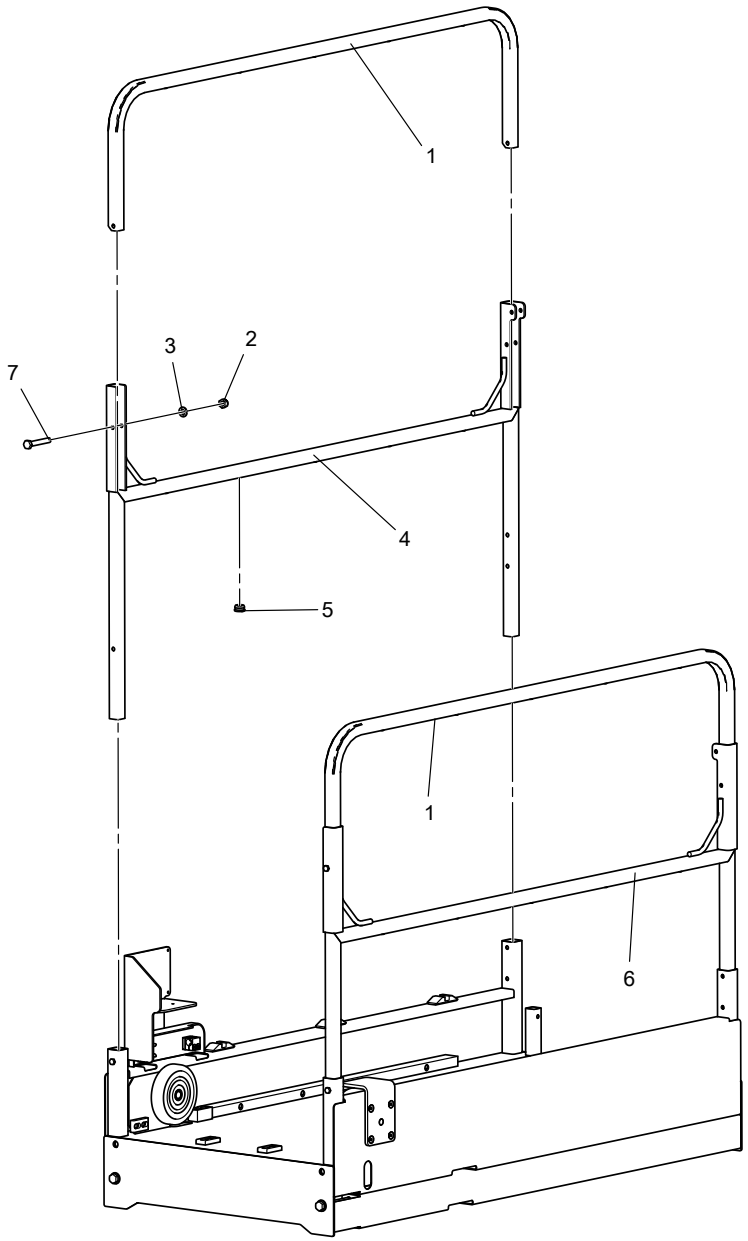


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101032040002	2	Rail
2	215030000026	4	Nut M8-8-ZnD GB/T889.1
3	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
4	101032040034	1	Rail, lower
5	101014043005	20	Rubber choke plug
6	101032040037	1	Rail, lower
7	215010000064	4	Bolt M8×55-8.8-ZnD GB/T 5783

https://truckmanualshub.com/

3.1.4 EXTENDED PLATFORM RAILS INSTALLATION (JAPANESE SPECS)

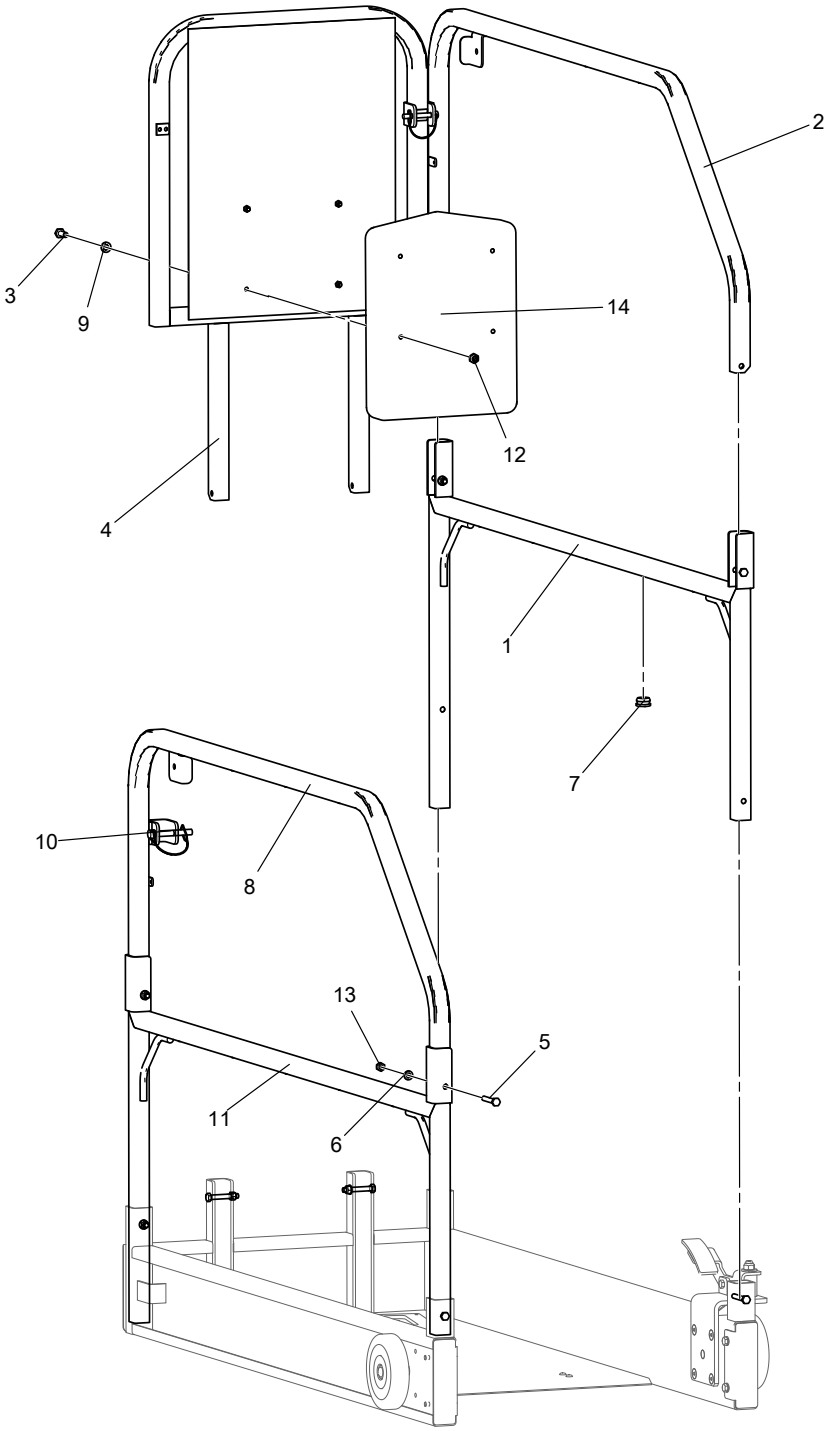


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101035040017	1	Rail
2	101038040017	1	Rail, upper
3	215010000050	4	Bolt M6×16-A2-70 GB/T 5783
4	101038043002	1	Rail, front
5	215010000064	10	Bolt M8×55-8.8-ZnD GB/T 5783
6	215040000034	10	Washer 8-200HV-ZnD GB/T 97.1
7	101014043005	17	Rubber choke plug
8	101032040030	1	Rail, upper
9	215040000033	4	Washer 6-A2 GB/T 97.1
10	209020000005	2	Lanyard
11	101035040016	1	Rail
12	215030000025	4	Nut M6-8-A2-70 GB/T 889.1
13	215030000026	10	Nut M8-8-ZnD GB/T889.1
14	216070000001	1	Manual storage container

https://truckmanualshub.com/

3.1.5 PLATFORM ENTRY GATE INSTALLATION (JAPANESE SPECS)

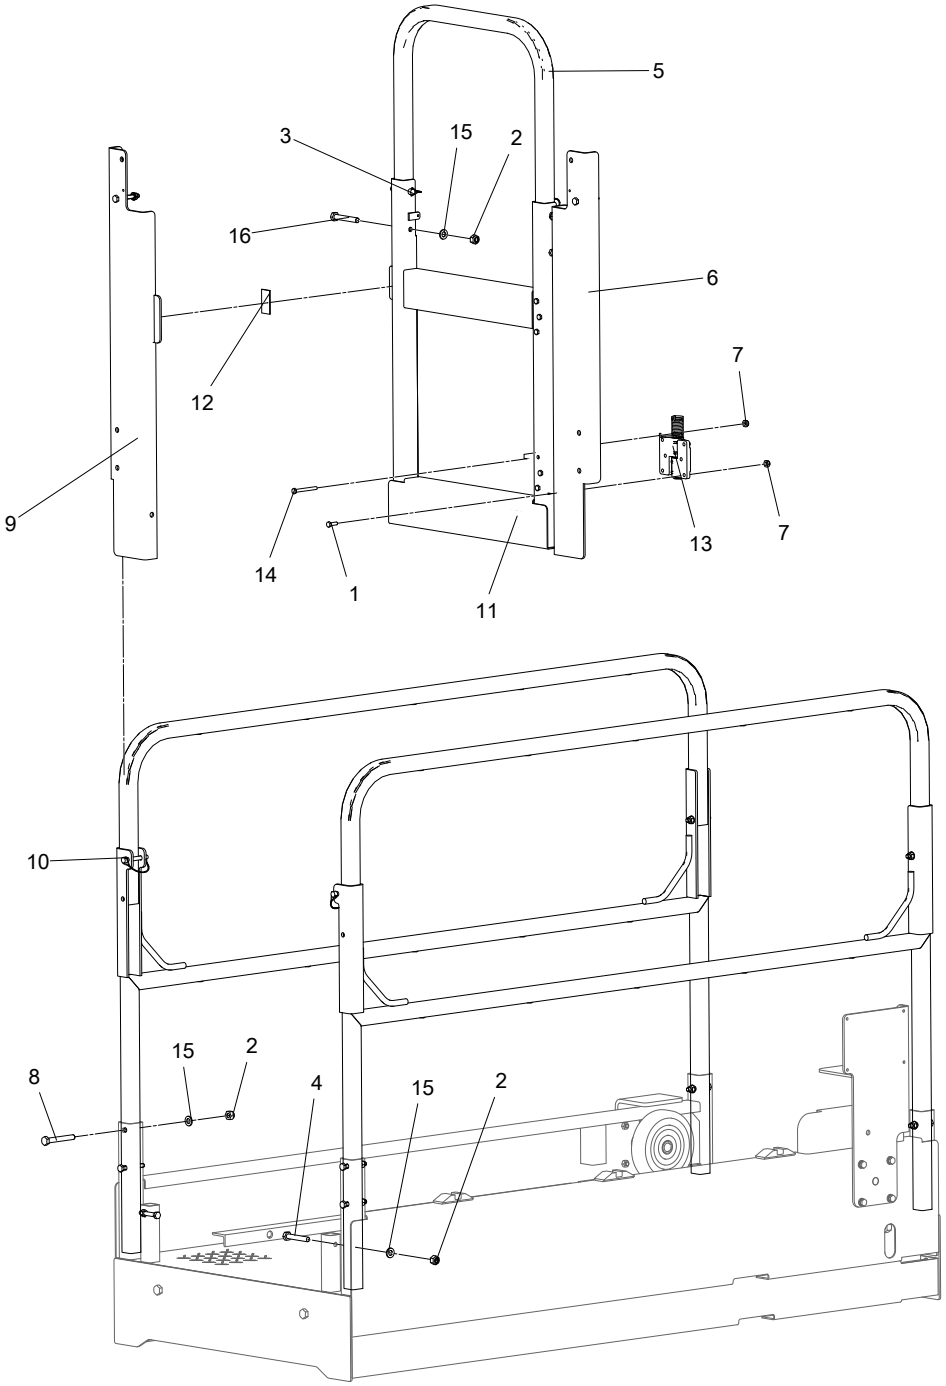

 © Jun 2021

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
1	215010000051	6	Bolt M6×20-A2-70 GB/T 5783
2	215030000026	10	Nut M8-8-ZnD GB/T889.1
3	209020000005	2	Lanyard
4	215010000163	2	Bolt M8×50-8.8-ZnD GB/T 5782
5	101032040031	1	Rail
6	101032040024	1	Cover
7	215030000025	12	Nut M6-8-A2-70 GB/T 889.1
8	215010000065	6	Bolt M8×60-8.8-ZnD GB/T 5783
9	101032040046	1	Cover
10	209020000005	2	Lanyard
11	101038040034	1	Door
12	216030000022	1	Magnet
13	101015040007	2	Hinge assembly
14	215010100004	6	Bolt M8×50-8.8-ZnD GB/T 5782
15	215040000034	10	Washer 8-200HV-ZnD GB/T 97.1
16	215010000064	2	Bolt M8×55-8.8-ZnD GB/T 5783

https://truckmanualshub.com/

3.2 PLATFORM COMPONENTS (KOREAN SPECS)

https://truckmanualshub.com/

3.2.1 FIXED PLATFORM ASSEMBLY (KOREAN SPECS)

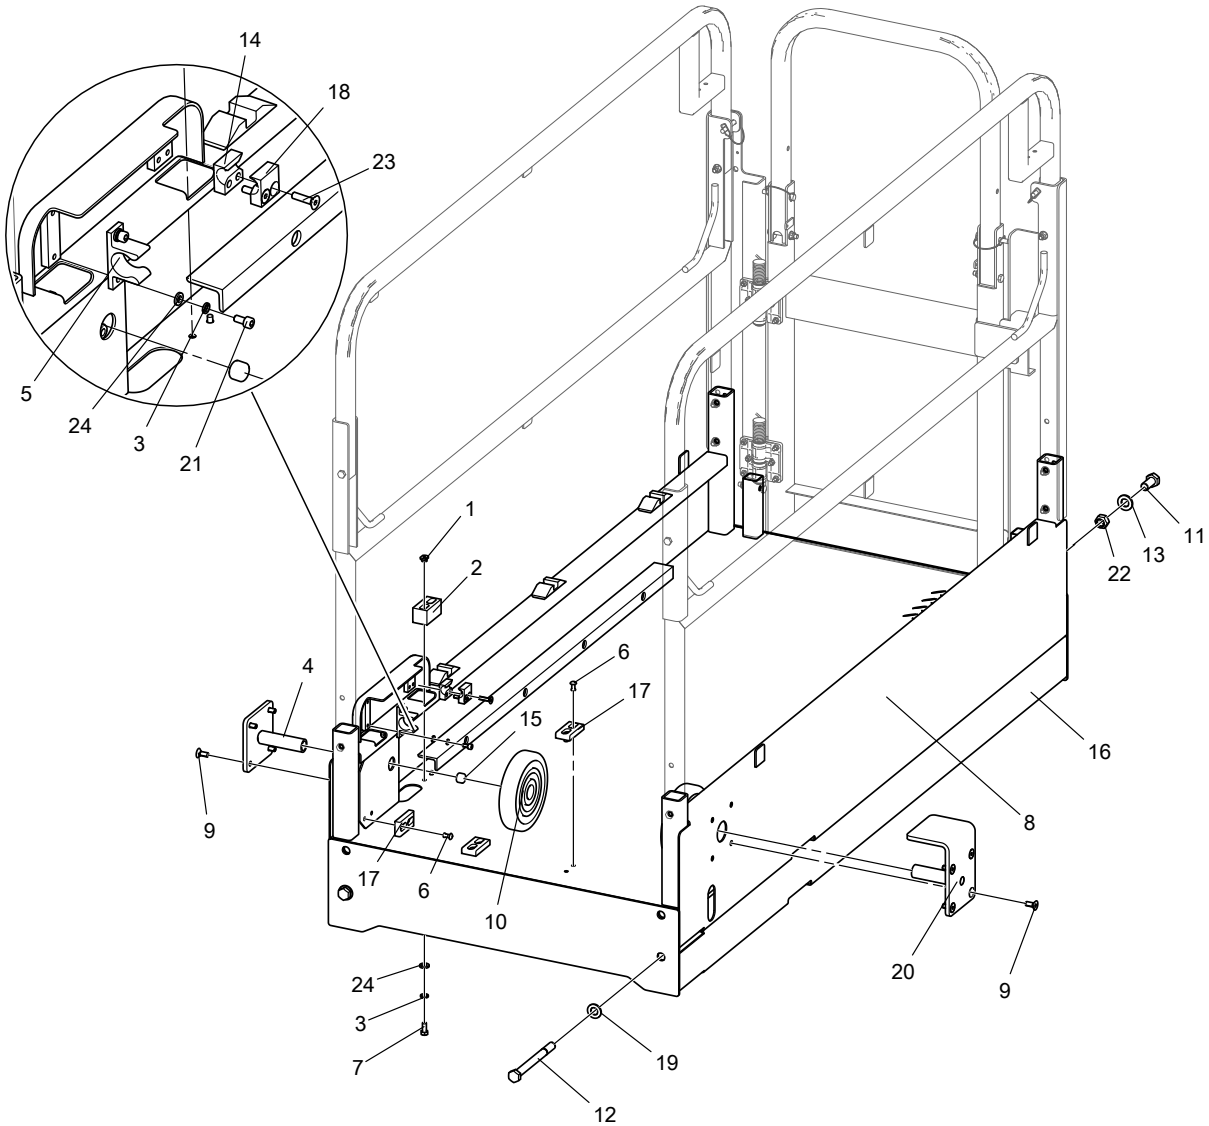


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101012040008	4	Special Nut
2	101032040061	2	Pad
3	215040000004	6	Washer 6-A2-70 GB/T 93
4	101039040026	1	Bracket
5	101040040071	1	Clamp
6	215050000007	8	Blind rivet 6×10-ZnD GB/T 12618.2
7	215010000041	4	Bolt M5×12-A2-70 GB/T 5783
8	101038040041	1	Fixed Platform
9	215020000226	8	Screw M8×20-8.8-ZnD GB/T 70.3
10	101035040018	2	Roller
11	215010000089	2	Bolt M12×25-8.8-ZnD GB/T 5783
12	215010000223	2	Bolt M14×155-8.8-ZnD GB/T 5782
13	215040000037	2	Washer 12-200HV-ZnD GB/T 97.1
14	101040040070	1	Clamp
15	101016040136	2	Sliding block
16	101032040040	1	Support, platform(Models with 4m platform height only)
17	101016040113	4	Pad
18	101040040069	1	Clamp
19	215040000119	2	Washer 14-200HV GB/T97.1
20	101016040146	1	Bracket
21	215020000010	2	Screw M6×12-A2-70 GB/T 70.1
22	215030000029	2	Nut M12-8-ZnD GB/T 889.1
23	215020000230	2	Screw M6×25-A2-70 GB/T 70.3
24	215040000033	6	Washer 6-A2 GB/T 97.1

https://truckmanualshub.com/

3.2.2 EXTENDED PLATFORM ASSEMBLY (KOREAN SPECS)

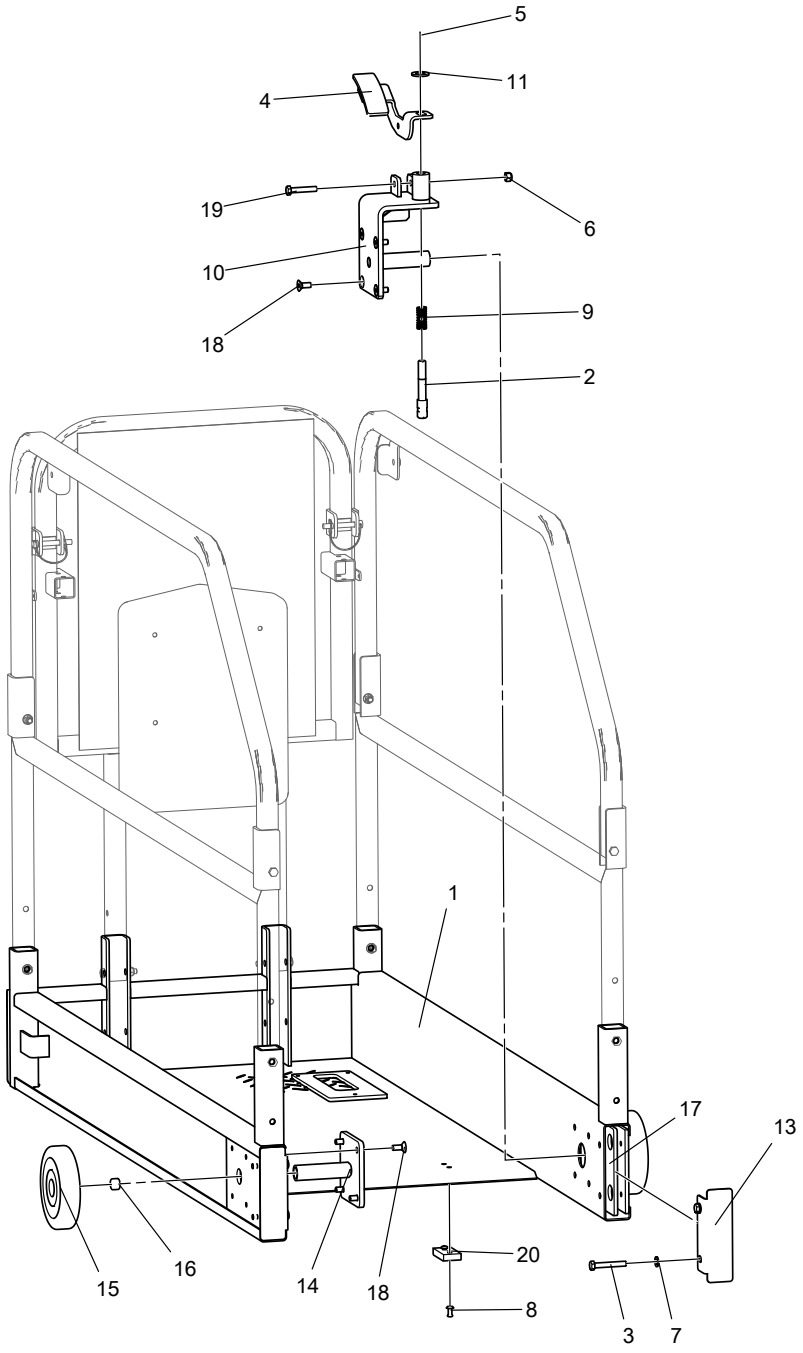


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101038040029	1	Extended platform [Z]
2	101040040060	1	Rod
3	215010000064	4	Bolt M8×55-8.8-ZnD GB/T 5783
4	101040040066	1	Pedal
5	215030000029	1	Nut M12-8-ZnD GB/T 889.1
6	215030000026	1	Nut M8-8-ZnD GB/T889.1
7	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
8	215050000007	4	Blind rivet 6×10-ZnD GB/T 12618.2
9	101040040062	1	Spring
10	101015040103	1	Bracket
11	215040000119	1	Washer 14-200HV GB/T97.1
12	101016040136	1	Sliding block
13	101038040028	2	Cover
14	101039040024	1	Bracket
15	101013040015	2	Roller
16	101016040136	1	Sliding block
17	101055043000	2	Plate
18	215020000226	8	Screw M8×20-8.8-ZnD GB/T 70.3
19	215010000062	1	Bolt M8×45-8.8-ZnD GB/T 5783
20	101016040113	2	Pad

https://truckmanualshub.com/

3.2.3 FIXED PLATFORM RAILS INSTALLATION (KOREAN SPECS)

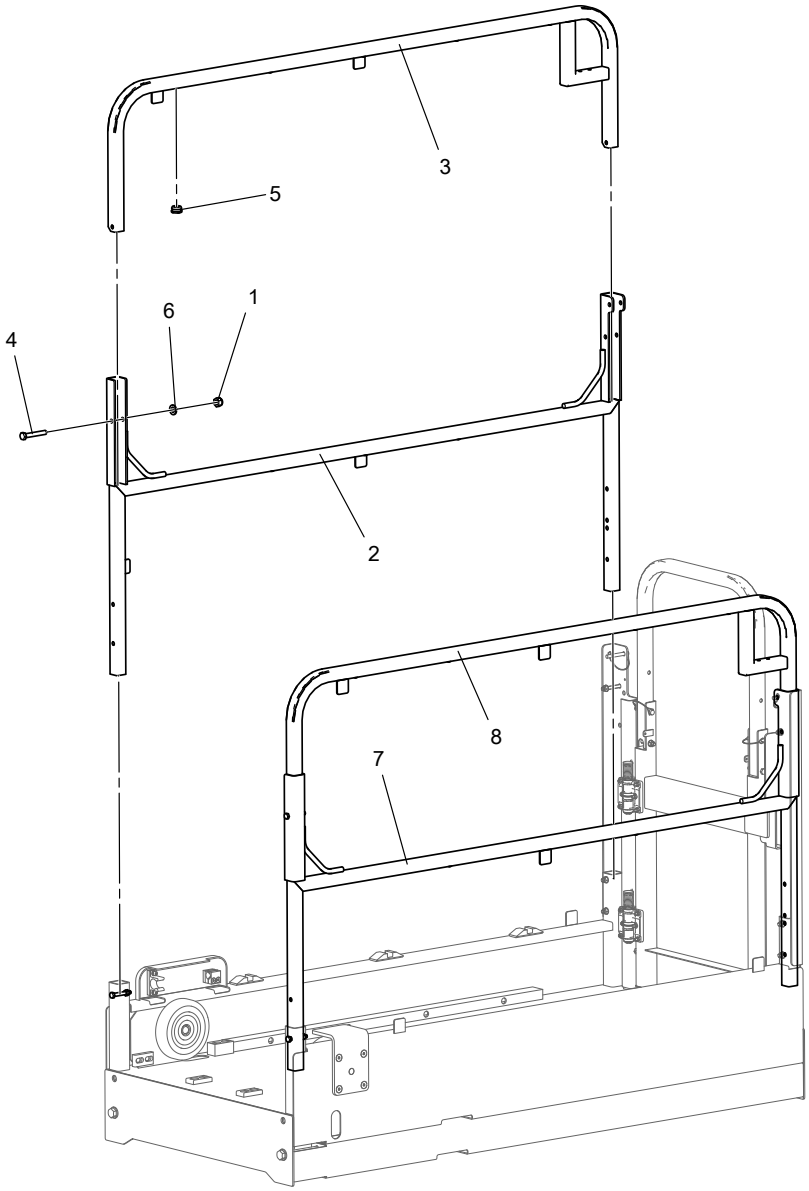


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215030000026	4	Nut M8-8-ZnD GB/T889.1
2	101038040039	1	Rail, lower
3	101038040038	1	Rail, upper
4	215010000064	4	Bolt M8×55-8.8-ZnD GB/T 5783
5	101014043005	16	Rubber choke plug
6	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
7	101038040036	1	Rail, lower
8	101038043007	1	Rail, left

https://truckmanualshub.com/

3.2.4 EXTENDED PLATFORM RAILS INSTALLATION (KOREAN SPECS)

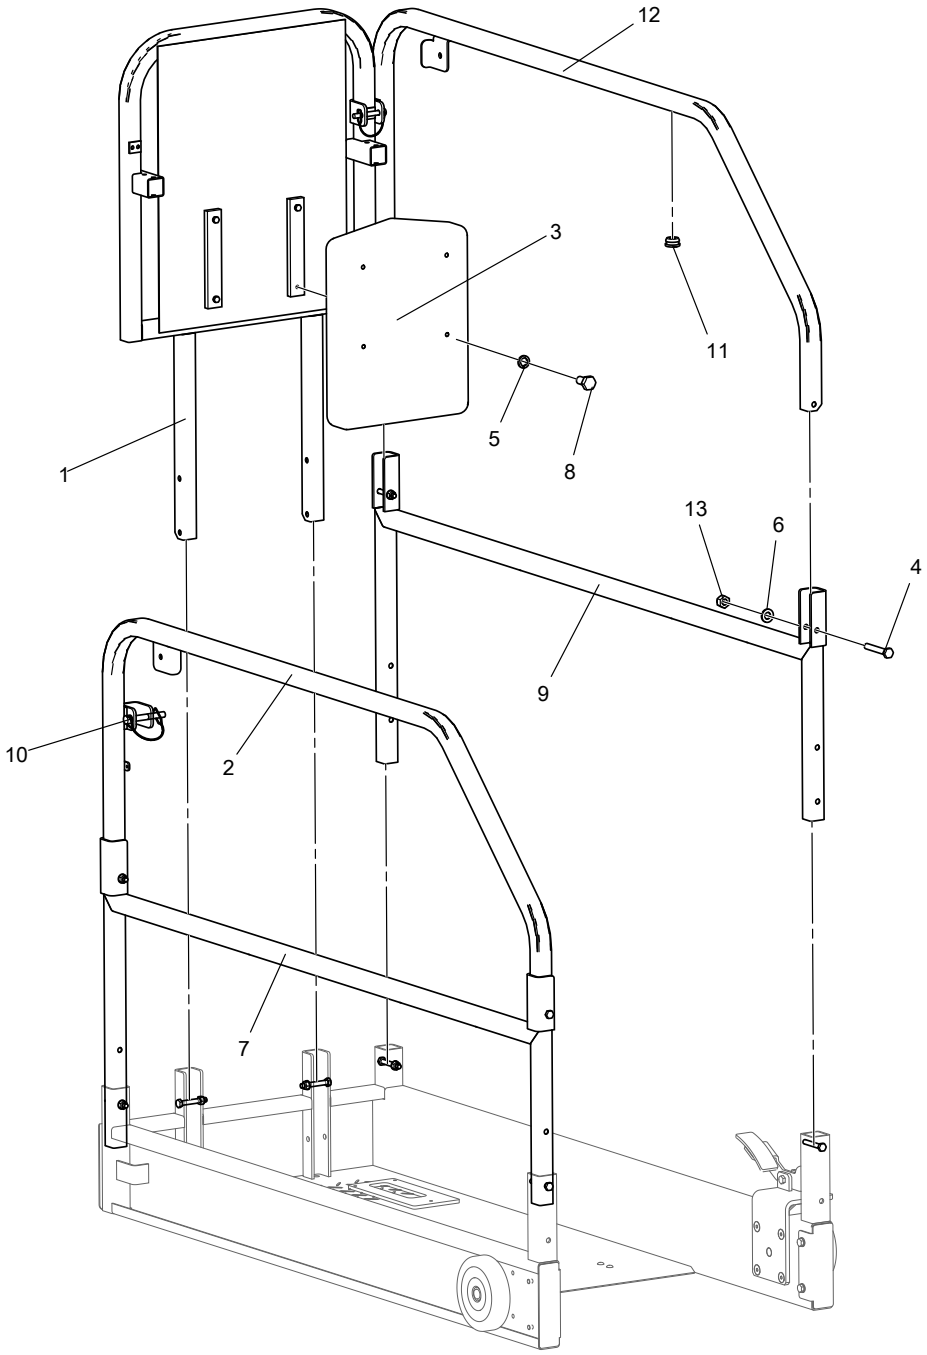


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101011040003	1	Rail, front
2	101032040030	1	Rail, upper
3	216070000001	1	Manual storage container
4	215010000064	10	Bolt M8×55-8.8-ZnD GB/T 5783
5	215040000004	4	Washer 6-A2-70 GB/T 93
6	215040000034	10	Washer 8-200HV-ZnD GB/T 97.1
7	101038040040	1	Rail
8	215010000049	4	Bolt M6×12-A2-70 GB/T 5783
9	101038040044	1	Rail
10	209020000005	2	Lanyard
11	101014043005	13	Rubber choke plug
12	101038040017	1	Rail, upper
13	215030000026	10	Nut M8-8-ZnD GB/T889.1

https://truckmanualshub.com/

3.2.5 PLATFORM ENTRY GATE INSTALLATION (KOREAN SPECS)

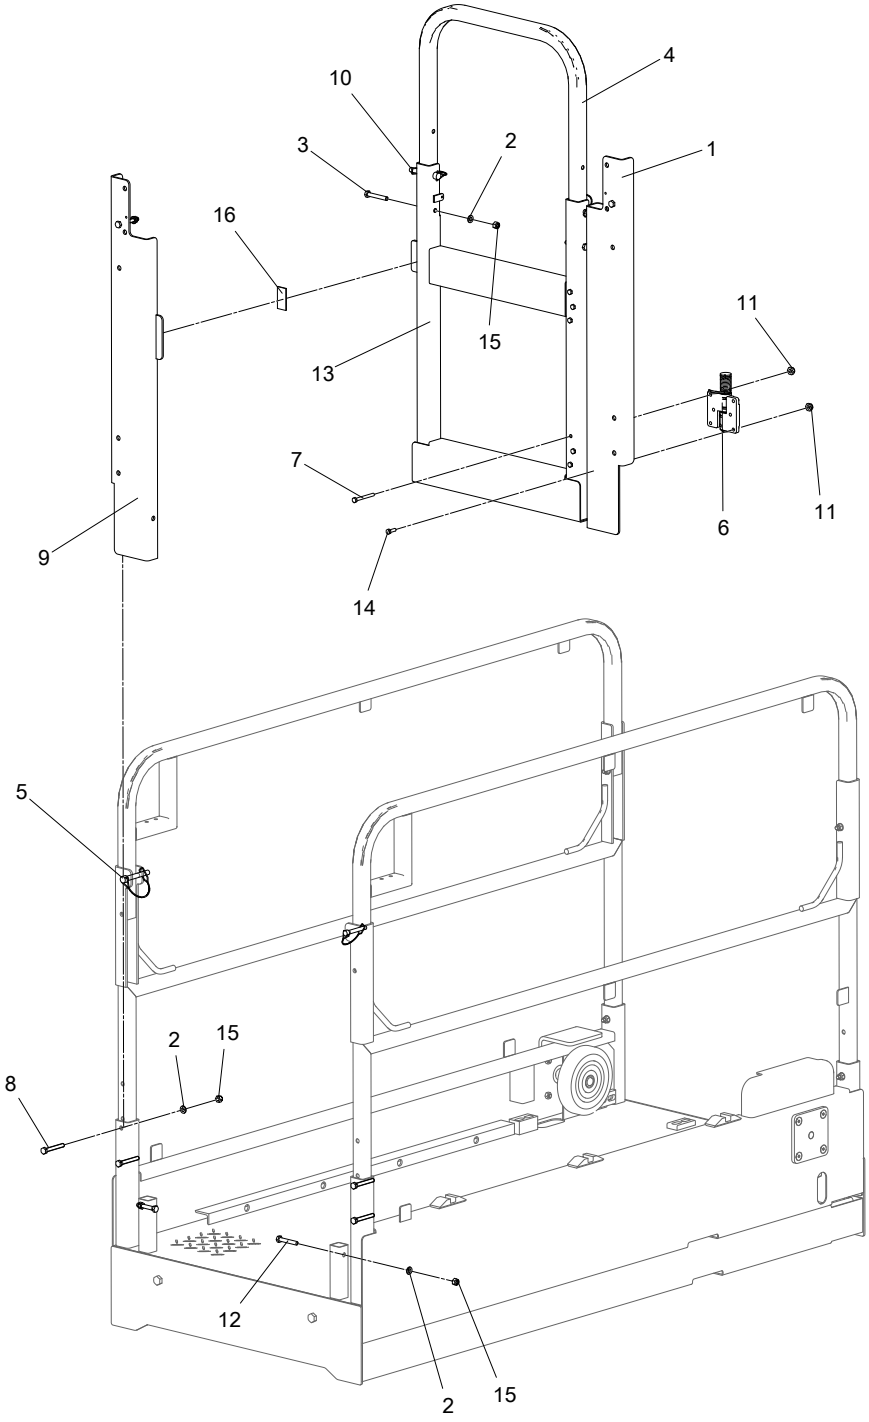

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
1	101038040035	1	Cover
2	215040000034	10	Washer 8-200HV-ZnD GB/T 97.1
3	215010000064	2	Bolt M8×55-8.8-ZnD GB/T 5783
4	101038040049	1	Rail
5	209020000005	2	Lanyard
6	101015040007	2	Hinge assembly
7	215010100004	6	Bolt M8×50-8.8-ZnD GB/T 5782
8	215010000065	6	Bolt M8×60-8.8-ZnD GB/T 5783
9	101038040045	1	Cover
10	209020000005	2	Lanyard
11	215030000025	12	Nut M6-8-A2-70 GB/T 889.1
12	215010000163	2	Bolt M8×50-8.8-ZnD GB/T 5782
13	101038040034	1	Door
14	215010000051	6	Bolt M6×20-A2-70 GB/T 5783
15	215030000026	10	Nut M8-8-ZnD GB/T889.1
16	216030000022	1	Magnet

https://truckmanualshub.com/

3.3 PLATFORM COMPONENTS(FOLD-DOWN)

https://truckmanualshub.com/

3.3.1 FIXED PLATFORM ASSEMBLY(FOLD-DOWN)

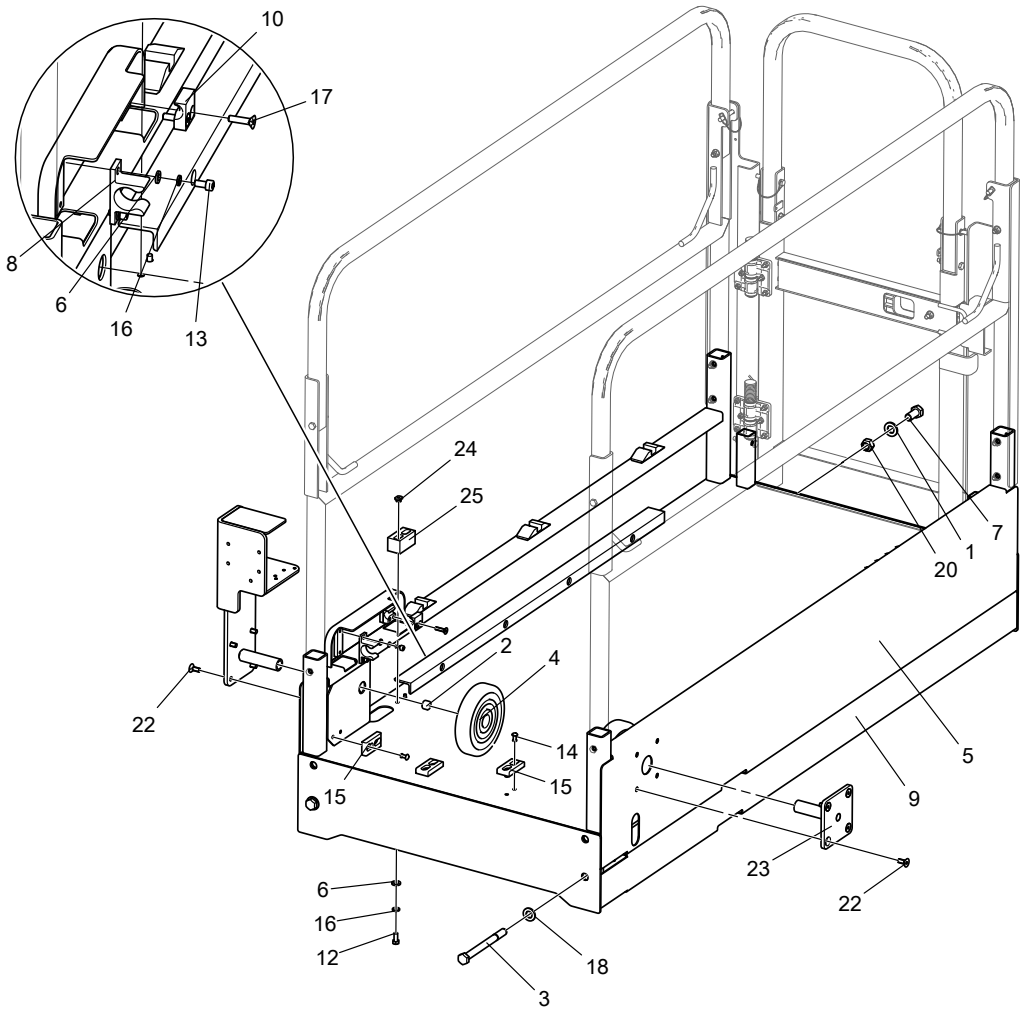


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215040000037	2	Washer 12-200HV-ZnD GB/T 97.1
2	101016040136	2	Sliding block
3	215010000223	2	Bolt M14×155-8.8-ZnD GB/T 5782
4	101035040018	2	Roller
5	101036040002	1	Fixed platform
6	215040000033	6	Washer 6-A2 GB/T 97.1
7	215010000089	2	Bolt M12×25-8.8-ZnD GB/T 5783
8	101040040071	1	Clamp
9	101032040040	1	Support, platform(Models with 4m platform height only)
10	101040040069	1	Clamp
12	215010000041	4	Bolt M5×12-A2-70 GB/T 5783
13	215020000010	2	Screw M6×12-A2-70 GB/T 70.1
14	215050000007	8	Blind rivet 6×10-ZnD GB/T 12618.2
15	101016040113	4	Pad
16	215040000004	6	Washer 6-A2-70 GB/T 93
17	215020000230	2	Screw M6×25-A2-70 GB/T 70.3
18	215040000119	2	Washer 14-200HV GB/T97.1
19	101040040037	1	Bracket
20	215030000029	2	Nut M12-8-ZnD GB/T 889.1
21	101040040070	1	Clamp
22	215020000226	8	Screw M8×20-8.8-ZnD GB/T 70.3
23	101039040024	1	Bracket
24	101012040008	4	Special Nut
25	101032040061	2	Pad

https://truckmanualshub.com/

3.3.2 EXTENDED PLATFORM ASSEMBLY(FOLD-DOWN)

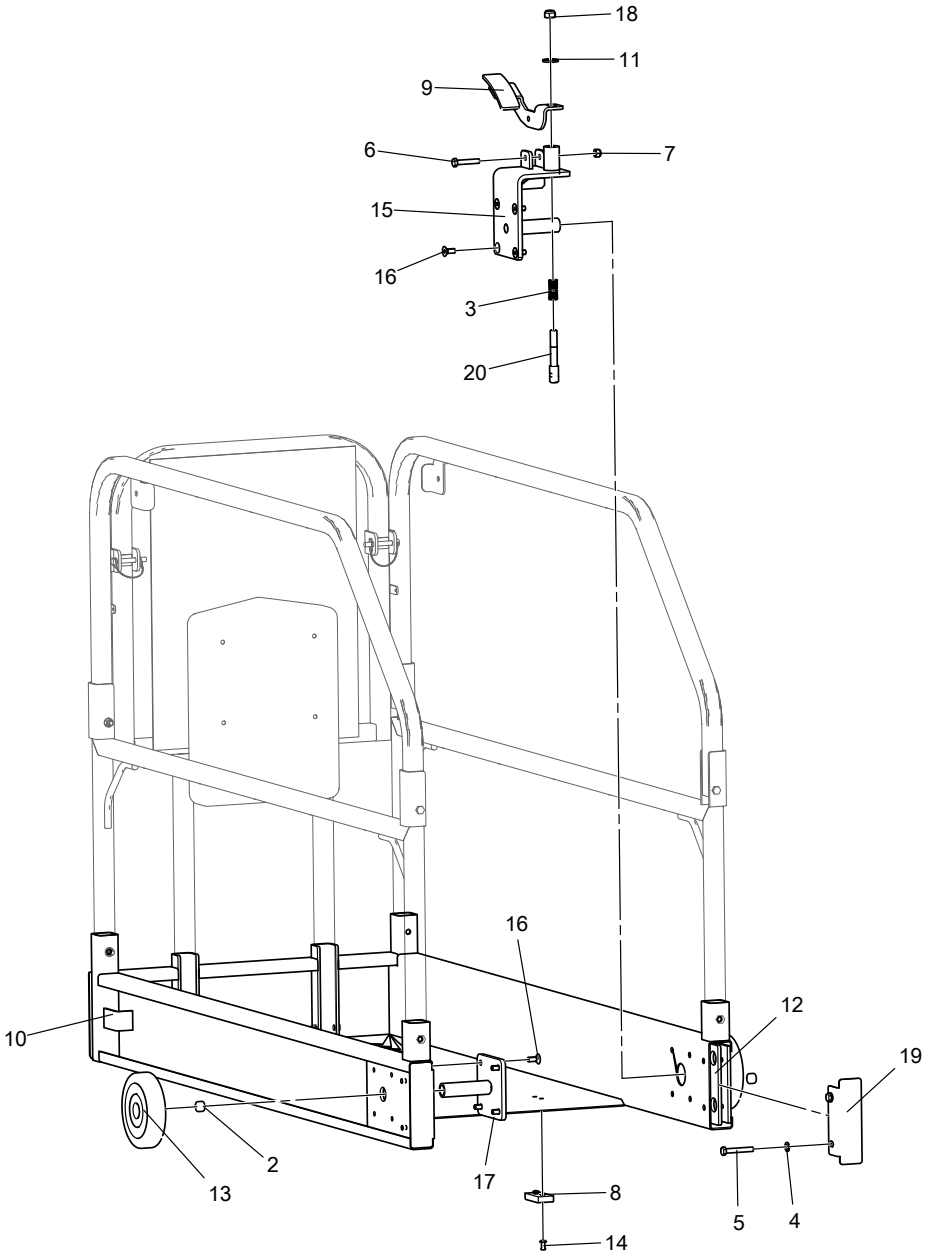


 © Jun 2021

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101016040136	1	Sliding block
2	101016040136	1	Sliding block
3	101040040062	1	Spring
4	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
5	215010000064	4	Bolt M8×55-8.8-ZnD GB/T 5783
6	215010000062	1	Bolt M8×45-8.8-ZnD GB/T 5783
7	215030000026	1	Nut M8-8-ZnD GB/T889.1
8	101016040113	2	Pad
9	101040040066	1	Pedal
10	101035040009	1	Extended platform
11	215040000119	1	Washer 14-200HV GB/T97.1
12	101055043000	2	Plate
13	101013040015	2	Roller
14	215050000007	4	Blind rivet 6×10-ZnD GB/T 12618.2
15	101015040103	1	Bracket
16	215020000226	8	Screw M8×20-8.8-ZnD GB/T 70.3
17	101039040024	1	Bracket
18	215030000029	1	Nut M12-8-ZnD GB/T 889.1
19	101038040028	2	Cover
20	101040040060	1	Rod

https://truckmanualshub.com/

3.3.3 FIXED PLATFORM RAILS INSTALLATION(FOLD-DOWN)

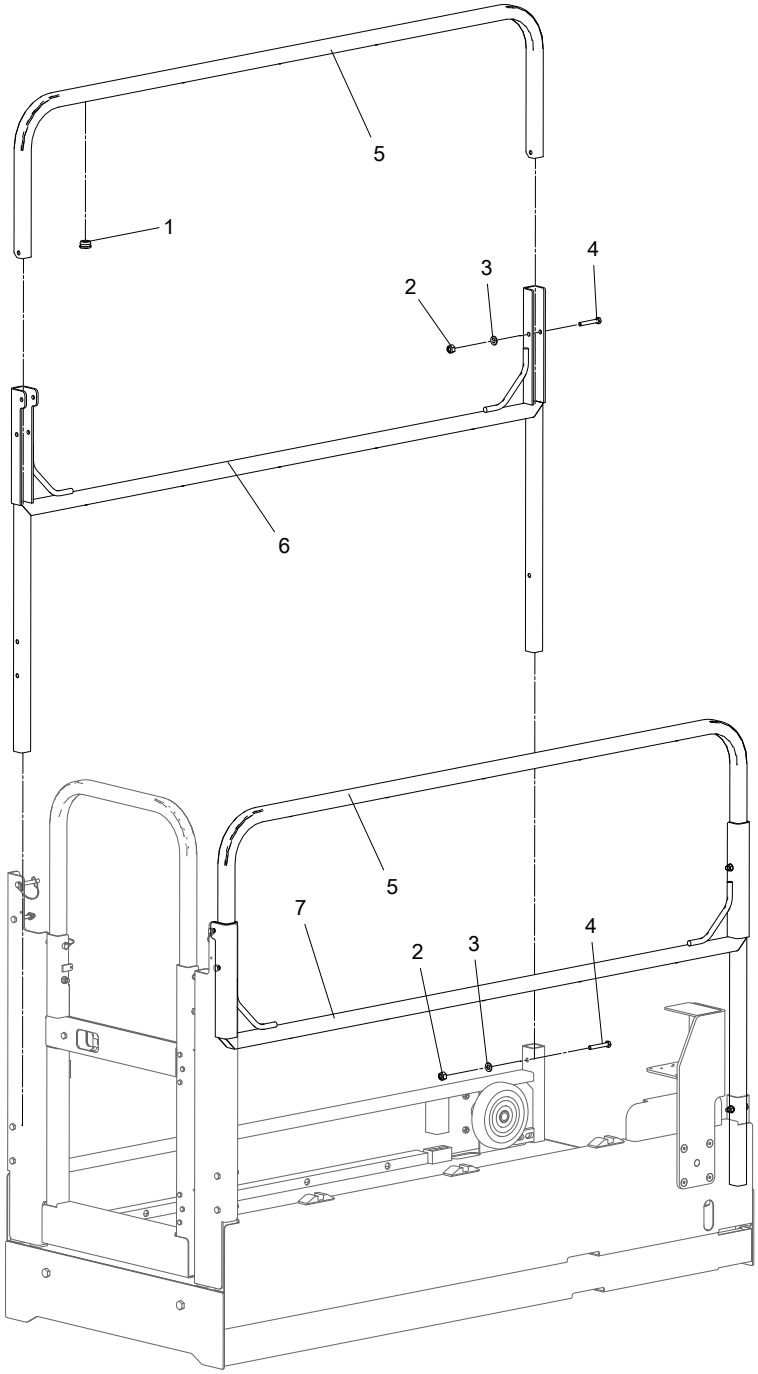


 © Jun 2021

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101014043005	20	Rubber choke plug
2	215030000026	4	Nut M8-8-ZnD GB/T889.1
3	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
4	215010000064	4	Bolt M8×55-8.8-ZnD GB/T 5783
5	101032040002	2	Rail
6	101032040037	1	Rail, lower
7	101032040034	1	Rail, lower

https://truckmanualshub.com/

3.3.4 EXTENDED PLATFORM RAILS INSTALLATION(FOLD-DOWN)

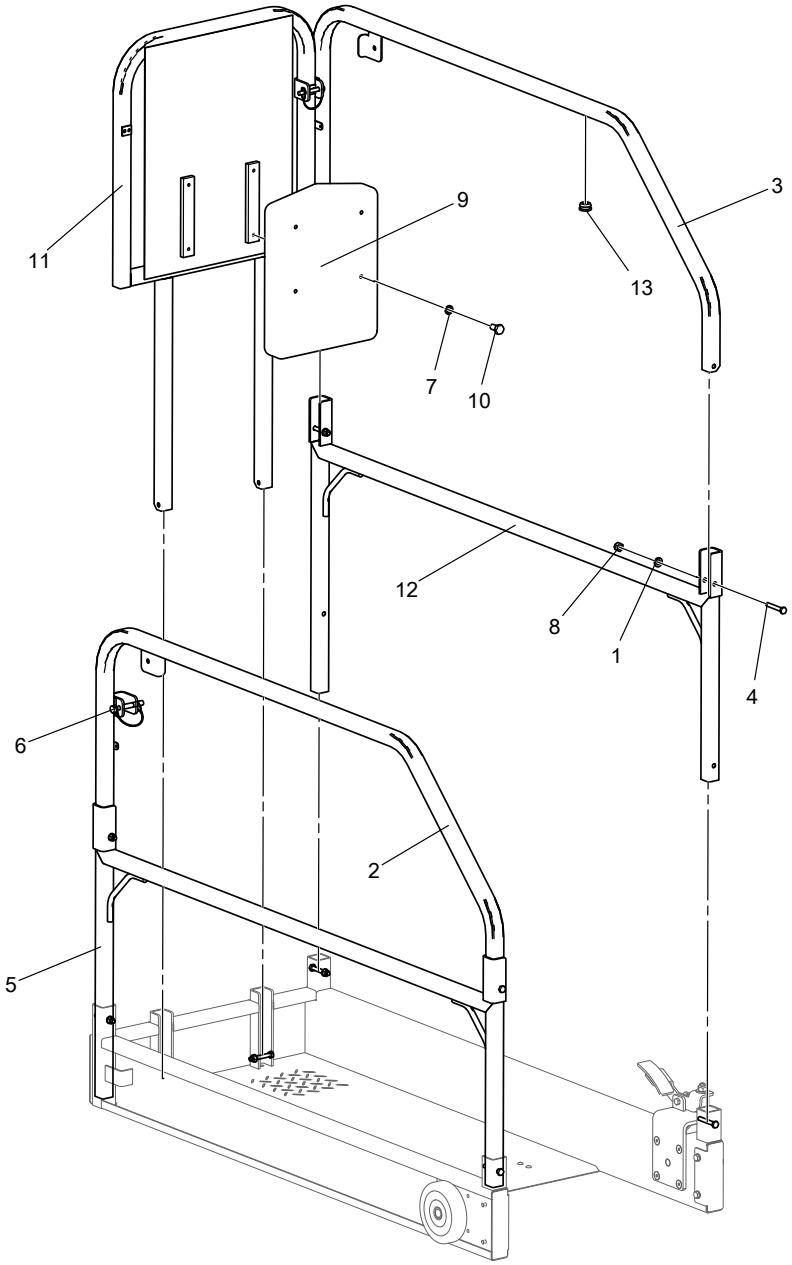


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215040000034	10	Washer 8-200HV-ZnD GB/T 97.1
2	101032040030	1	Rail, upper
3	101038040017	1	Rail, upper
4	215010000064	10	Bolt M8×55-8.8-ZnD GB/T 5783
5	101035040016	1	Rail
6	209020000005	2	Lanyard
7	215040000004	4	Washer 6-A2-70 GB/T 93
8	215030000026	10	Nut M8-8-ZnD GB/T889.1
9	216070000001	1	Manual storage container
10	215010000049	4	Bolt M6×12-A2-70 GB/T 5783
11	101038040015	1	Rail, front
12	101035040017	1	Rail
13	101014043005	17	Rubber choke plug

https://truckmanualshub.com/

3.3.5 PLATFORM ENTRY GATE INSTALLATION(FOLD-DOWN)

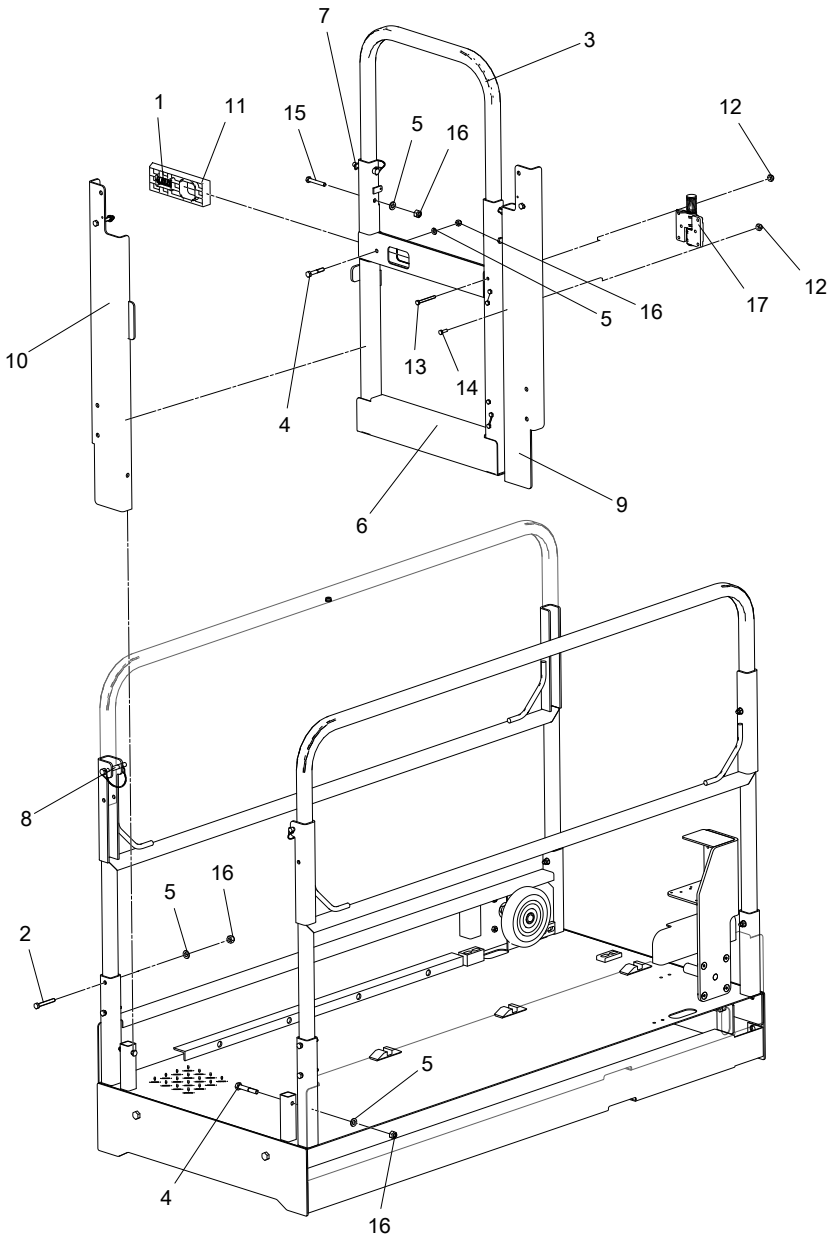

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
1	101019040001	1	Spring
2	215010000065	6	Bolt M8×60-8.8-ZnD GB/T 5783
3	101032040031	1	Rail
4	215010000163	3	Bolt M8×50-8.8-ZnD GB/T 5782
5	215040000034	11	Washer 8-200HV-ZnD GB/T 97.1
6	101038040024	1	Door
7	209020000005	2	Lanyard
8	209020000005	2	Lanyard
9	101032040024	1	Cover
10	101032040046	1	Cover
11	101012040056	1	Lock
12	215030000025	12	Nut M6-8-A2-70 GB/T 889.1
13	215010100004	6	Bolt M8×50-8.8-ZnD GB/T 5782
14	215010000051	6	Bolt M6×20-A2-70 GB/T 5783
15	215010000064	2	Bolt M8×55-8.8-ZnD GB/T 5783
16	215030000026	11	Nut M8-8-ZnD GB/T889.1
17	101015040007	2	Hinge assembly

https://truckmanualshub.com/

3.4 PLATFORM COMPONENTS(AS MODELS)

https://truckmanualshub.com/

3.4.1 FIXED PLATFORM ASSEMBLY(AS MODELS)

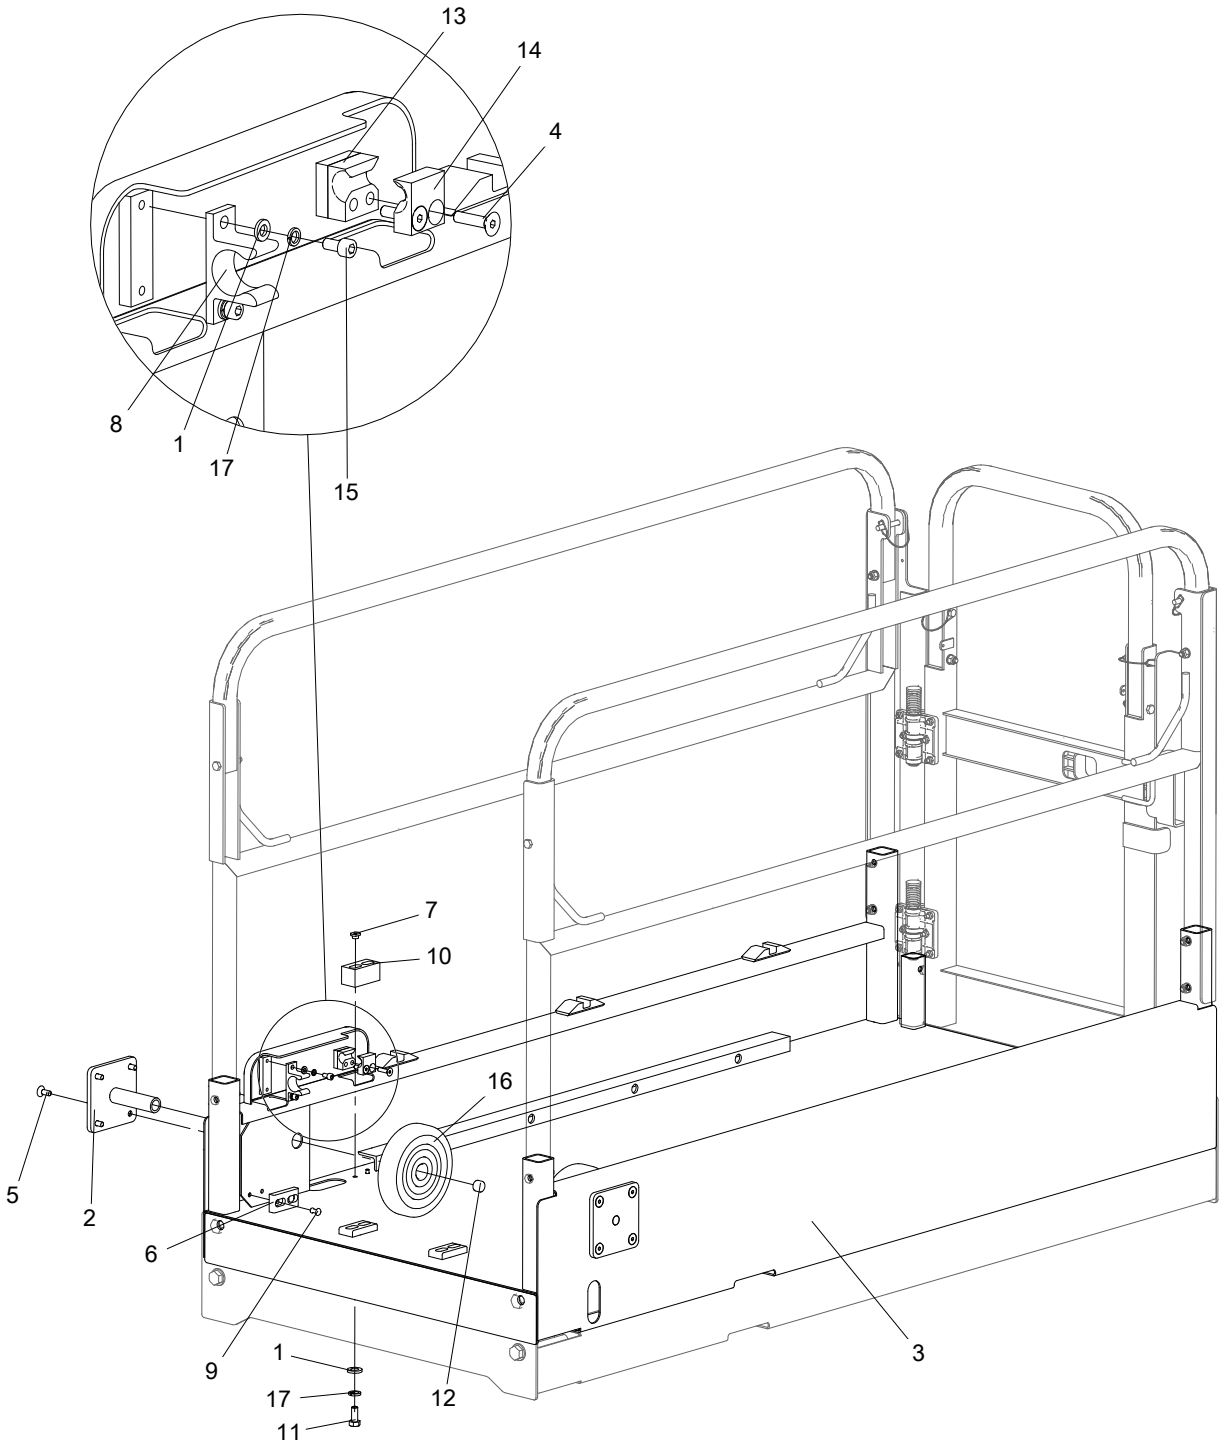


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215040000033	6	Washer 6-A2 GB/T 97.1
2	101039040024	2	Bracket
3	101036040002	1	Fixed platform
4	215020000230	2	Screw M6×25-A2-70 GB/T 70.3
5	215020000226	8	Screw M8×20-8.8-ZnD GB/T 70.3
6	101016040113	4	Pad
7	101012040008	4	Special Nut
8	101040040071	1	Clamp
9	215050000007	8	Blind rivet 6×10-ZnD GB/T 12618.2
10	101032040061	2	Pad
11	215010000041	4	Bolt M5×12-A2-70 GB/T 5783
12	101016040136	2	Sliding block
13	101040040070	1	Clamp
14	101040040069	1	Clamp
15	215020000010	2	Screw M6×12-A2-70 GB/T 70.1
16	101035040018	2	Roller
17	215040000004	6	Washer 6-A2-70 GB/T 93

https://truckmanualshub.com/


3.4.2 FIXED PLATFORM RAILS INSTALLATION(AS MODELS)

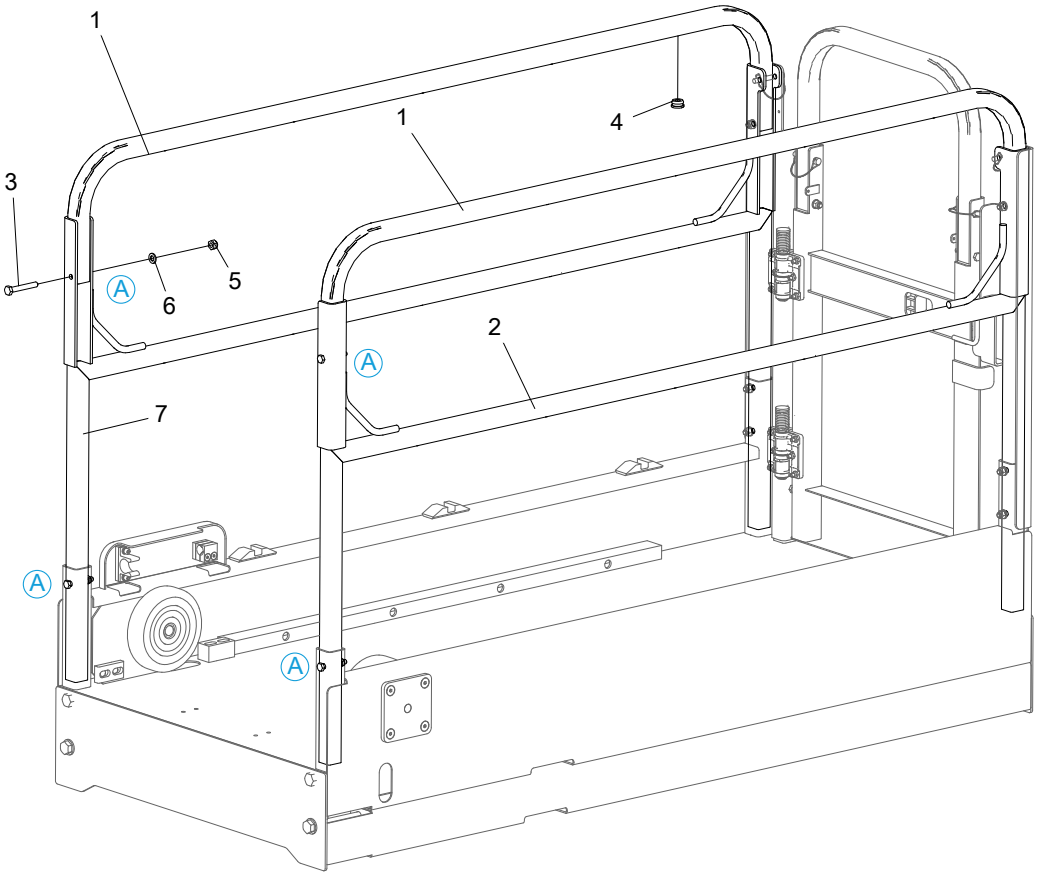

No.	Part No.	Qty.	Description
1	101056043002	2	Rail
2	101032040037	1	Rail, lower
3	215010000064	4	Bolt M8×55-8.8-ZnD GB/T 5783
4	101014043005	20	Rubber choke plug
5	215030000026	4	Nut M8-8-ZnD GB/T889.1
6	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
7	101032040034	1	Rail, lower

https://truckmanualshub.com/


3.4.3 PLATFORM SUPPORT INSTALLATION(AS MODELS)-MODELS WITH 4M PLATFORM HEIGHT ONLY

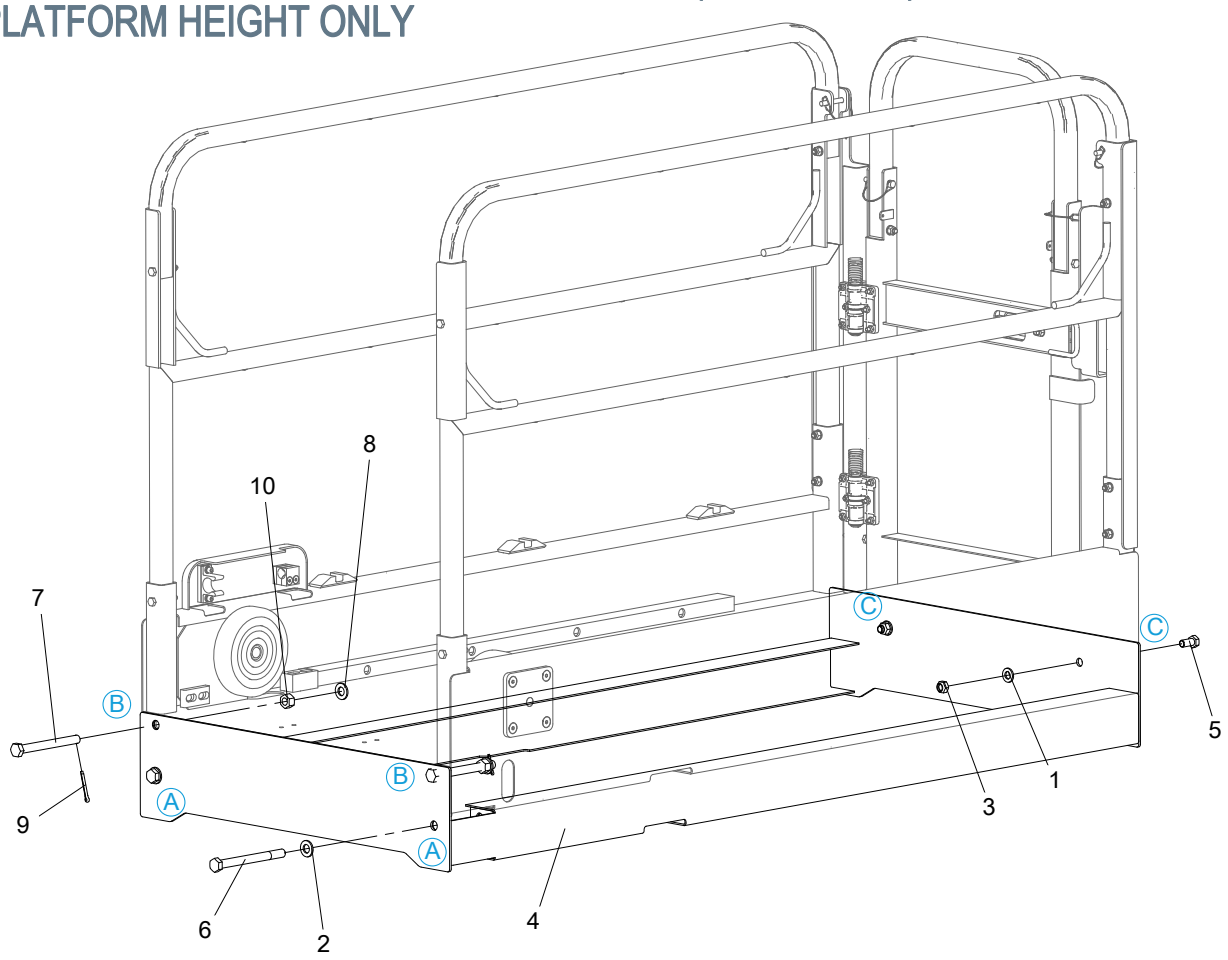

No.	Part No.	Qty.	Description
1	215040000037	2	Washer 12-200HV-ZnD GB/T 97.1
2	215040000119	2	Washer 14-200HV GB/T97.1
3	215030000029	2	Nut M12-8-ZnD GB/T 889.1
4	101032040040	1	Support, platform
5	215010000089	2	Bolt M12×25-8.8-ZnD GB/T 5783
6	215010000223	2	Bolt M14×155-8.8-ZnD GB/T 5782
7	215010000224	2	Bolt M14×140-8.8-DKL GB/T31.1
8	215040000119	4	Washer 14-200HV GB/T97.1
9	215060000004	2	Pin 3.2×25-ZnD GB/T 91
10	215030000068	2	Nut M14-8 GB/T 6170

https://truckmanualshub.com/

3.4.4 EXTENDED PLATFORM ASSEMBLY(AS MODELS)

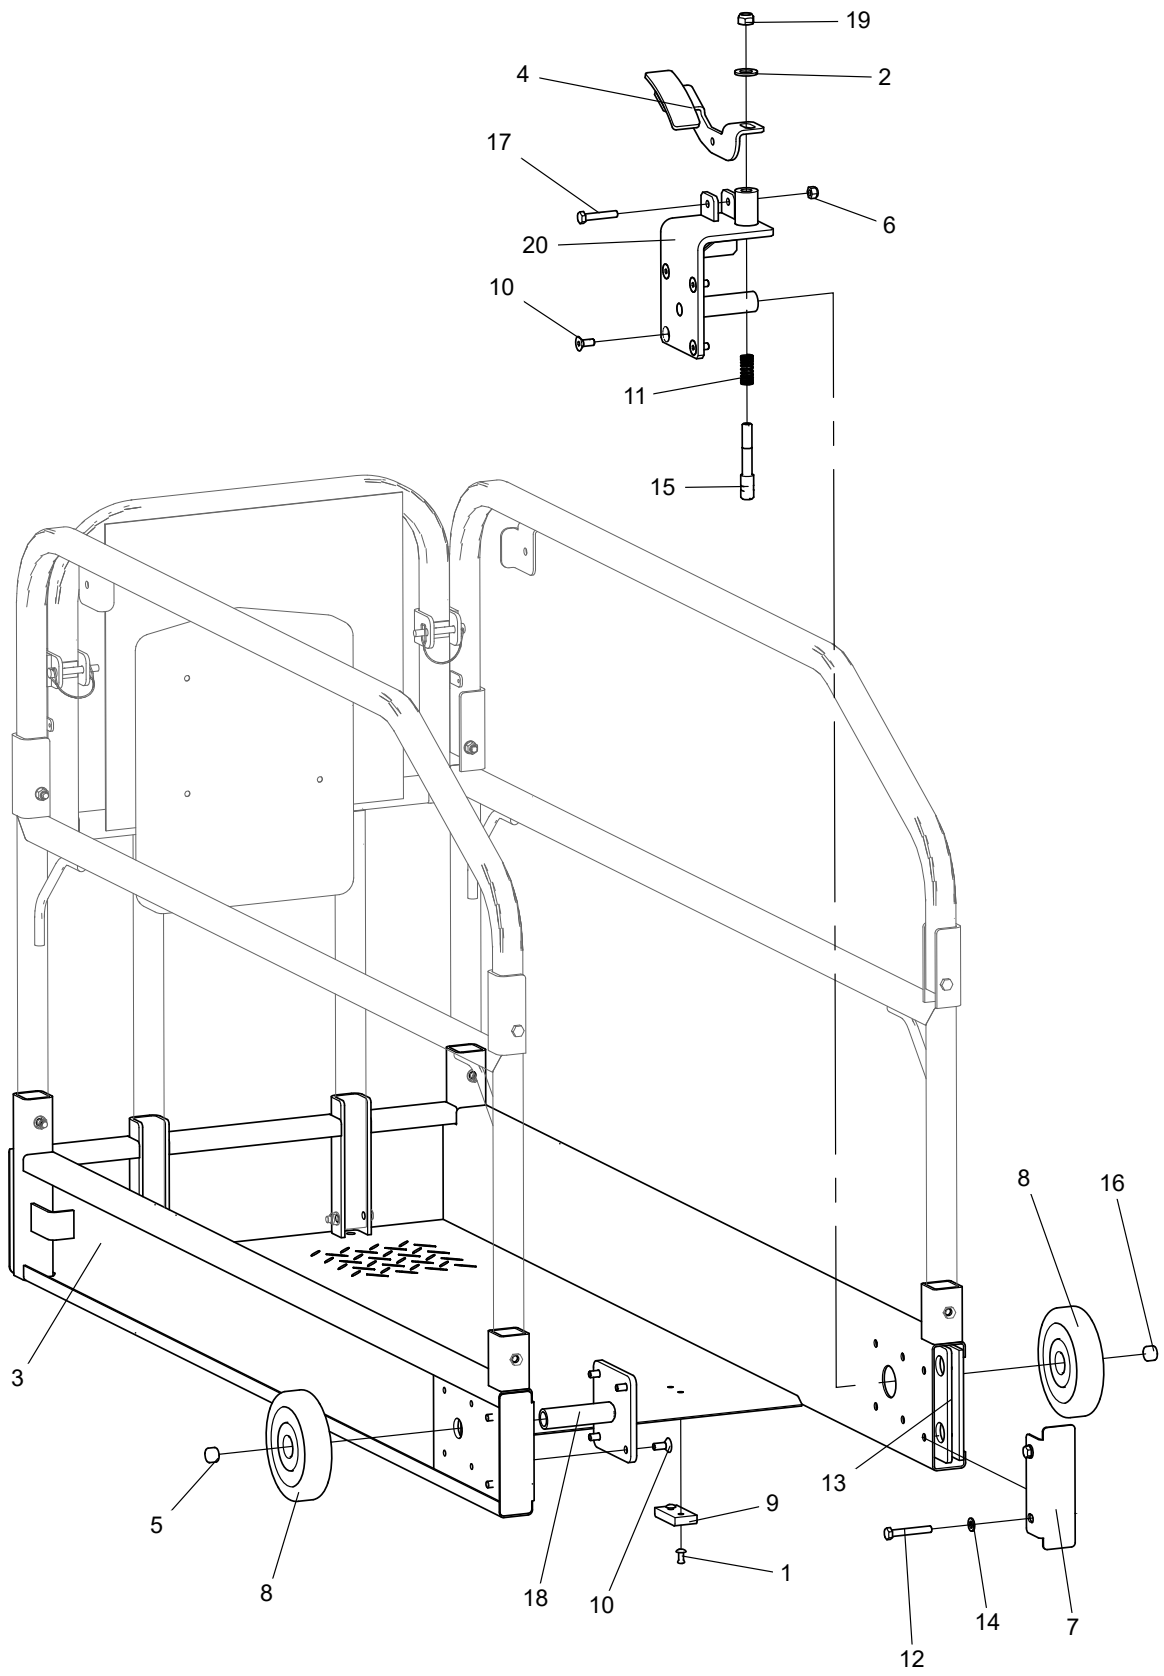


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215050000007	4	Blind rivet 6×10-ZnD GB/T 12618.2
2	215040000119	1	Washer 14-200HV GB/T97.1
3	101035040009	1	Extended platform
4	101040040066	1	Pedal
5	101016040136	1	Sliding block
6	215030000026	1	Nut M8-8-ZnD GB/T889.1
7	101038040028	2	Cover
8	101013040015	2	Roller
9	101016040113	2	Pad
10	215020000226	8	Screw M8×20-8.8-ZnD GB/T 70.3
11	101040040062	1	Spring
12	215010000064	4	Bolt M8×55-8.8-ZnD GB/T 5783
13	101055043000	2	Plate
14	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
15	101040040060	1	Rod
16	101016040136	1	Sliding block
17	215010000062	1	Bolt M8×45-8.8-ZnD GB/T 5783
18	101039040024	1	Bracket
19	215030000029	1	Nut M12-8-ZnD GB/T 889.1
20	101015040103	1	Bracket

https://truckmanualshub.com/

3.4.5 EXTENDED PLATFORM RAILS INSTALLATION(AS MODELS)

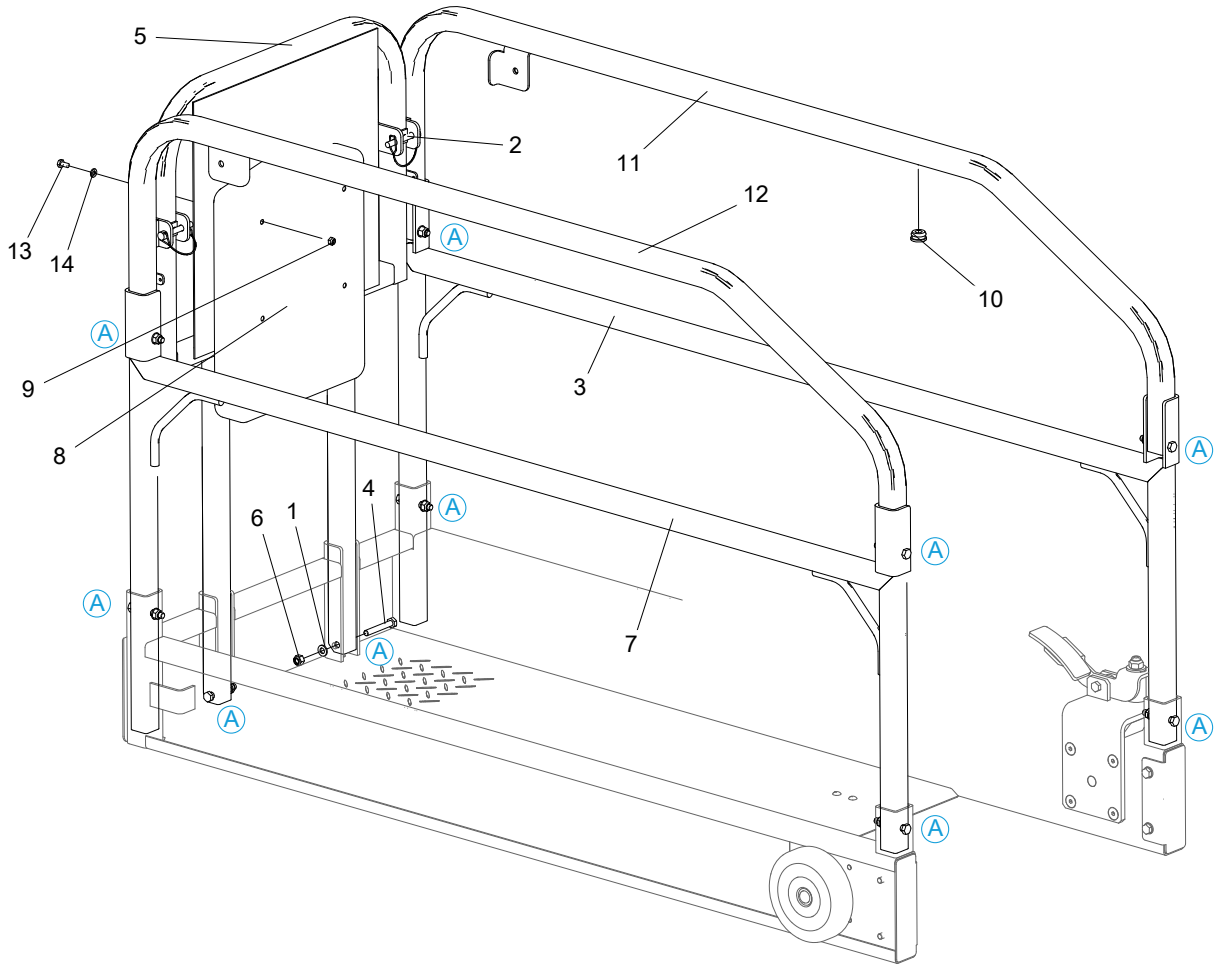


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215040000034	10	Washer 8-200HV-ZnD GB/T 97.1
2	209020000005	2	Lanyard
3	101035040017	1	Rail
4	215010000064	10	Bolt M8×55-8.8-ZnD GB/T 5783
5	101056043006	1	Rail, front
6	215030000026	10	Nut M8-8-ZnD GB/T889.1
7	101035040016	1	Rail
8	216070000001	1	Manual storage container
9	215030000025	4	Nut M6-8-A2-70 GB/T 889.1
10	101014043005	17	Rubber choke plug
11	101056043007	1	Rail, upper
12	101056043009	1	Rail, upper
13	215010000049	4	Bolt M6×12-A2-70 GB/T 5783
14	215040000033	4	Washer 6-A2 GB/T 97.1

 © Jun 2021

https://truckmanualshub.com/

3.4.6 PLATFORM ENTRY GATE INSTALLATION(AS MODELS)

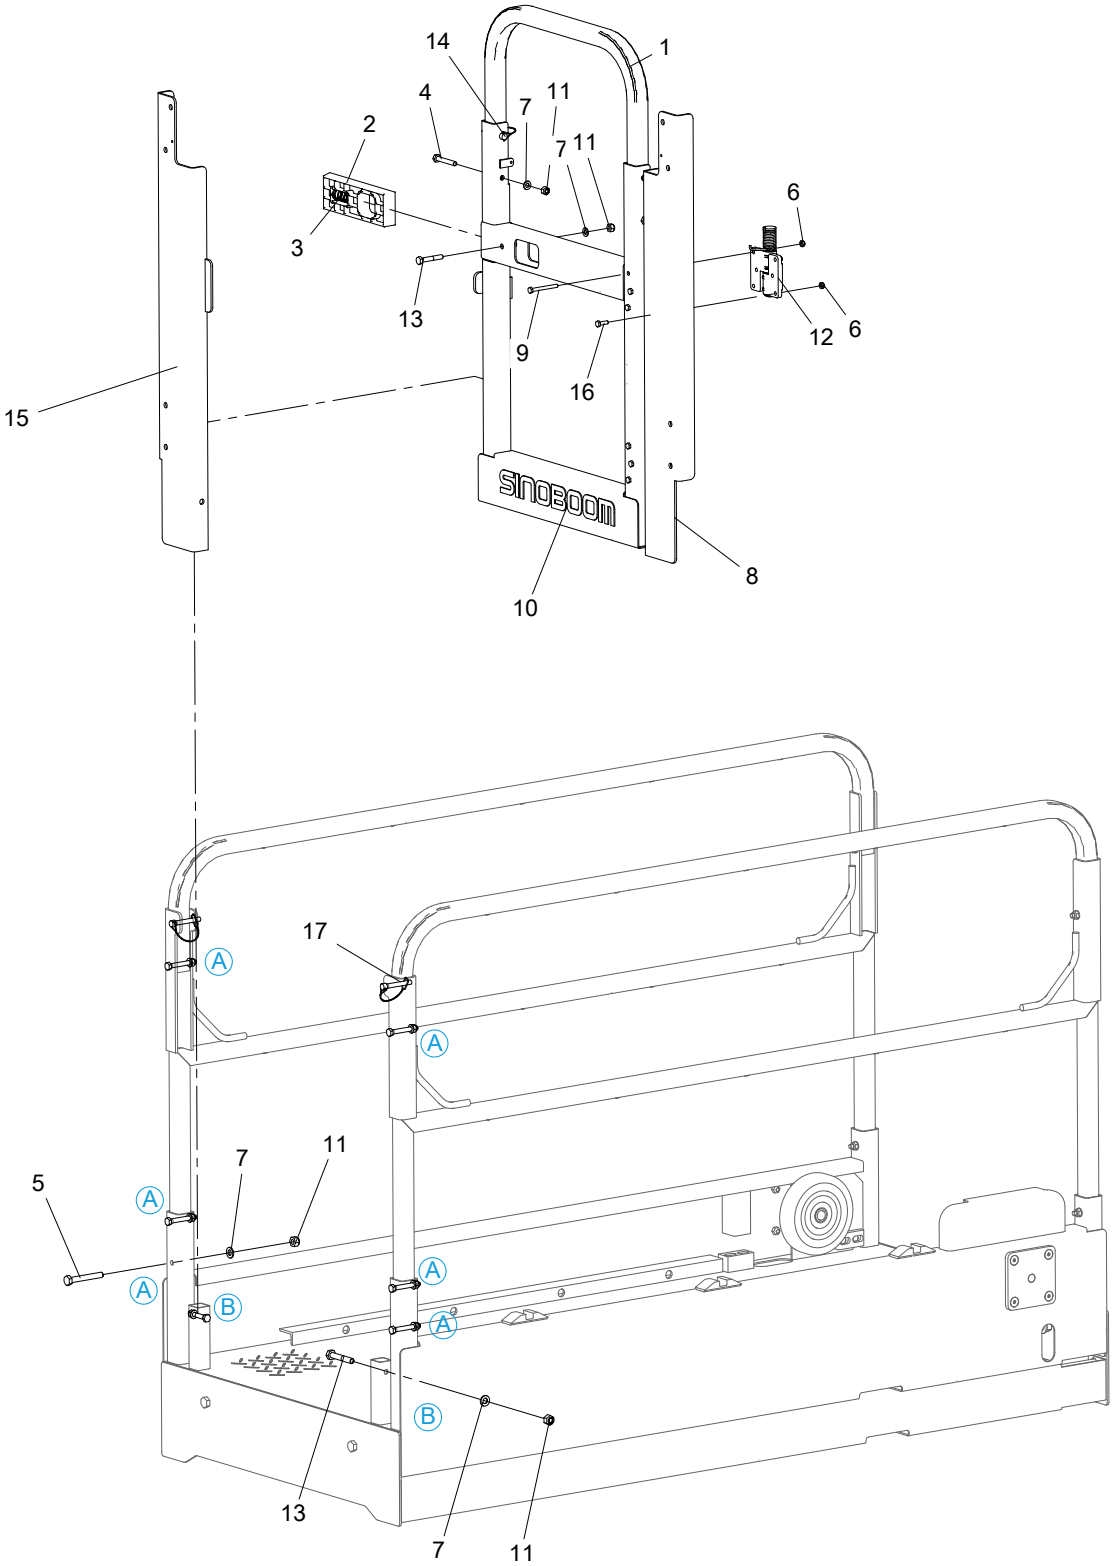

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
1	101056043001	1	Rail
2	101012040056	1	Lock
3	101019040001	1	Spring
4	215010000064	2	Bolt M8×55-8.8-ZnD GB/T 5783
5	215010000065	6	Bolt M8×60-8.8-ZnD GB/T 5783
6	215030000025	12	Nut M6-8-A2-70 GB/T 889.1
7	215040000034	11	Washer 8-200HV-ZnD GB/T 97.1
8	101032040024	1	Cover
9	215010100004	6	Bolt M8×50-8.8-ZnD GB/T 5782
10	101038040024	1	Door
11	215030000026	11	Nut M8-8-ZnD GB/T889.1
12	101015040007	2	Hinge assembly
13	215010000163	3	Bolt M8×50-8.8-ZnD GB/T 5782
14	209020000005	2	Lanyard
15	101032040046	1	Cover
16	215010000051	6	Bolt M6×20-A2-70 GB/T 5783
17	209020000005	2	Lanyard

https://truckmanualshub.com/

3.5 PLATFORM COMPONENTS(QUICK FOLD-DOWN PLATFORM)

https://truckmanualshub.com/

3.5.1 FIXED PLATFORM ASSEMBLY(QUICK FOLD-DOWN PLATFORM)

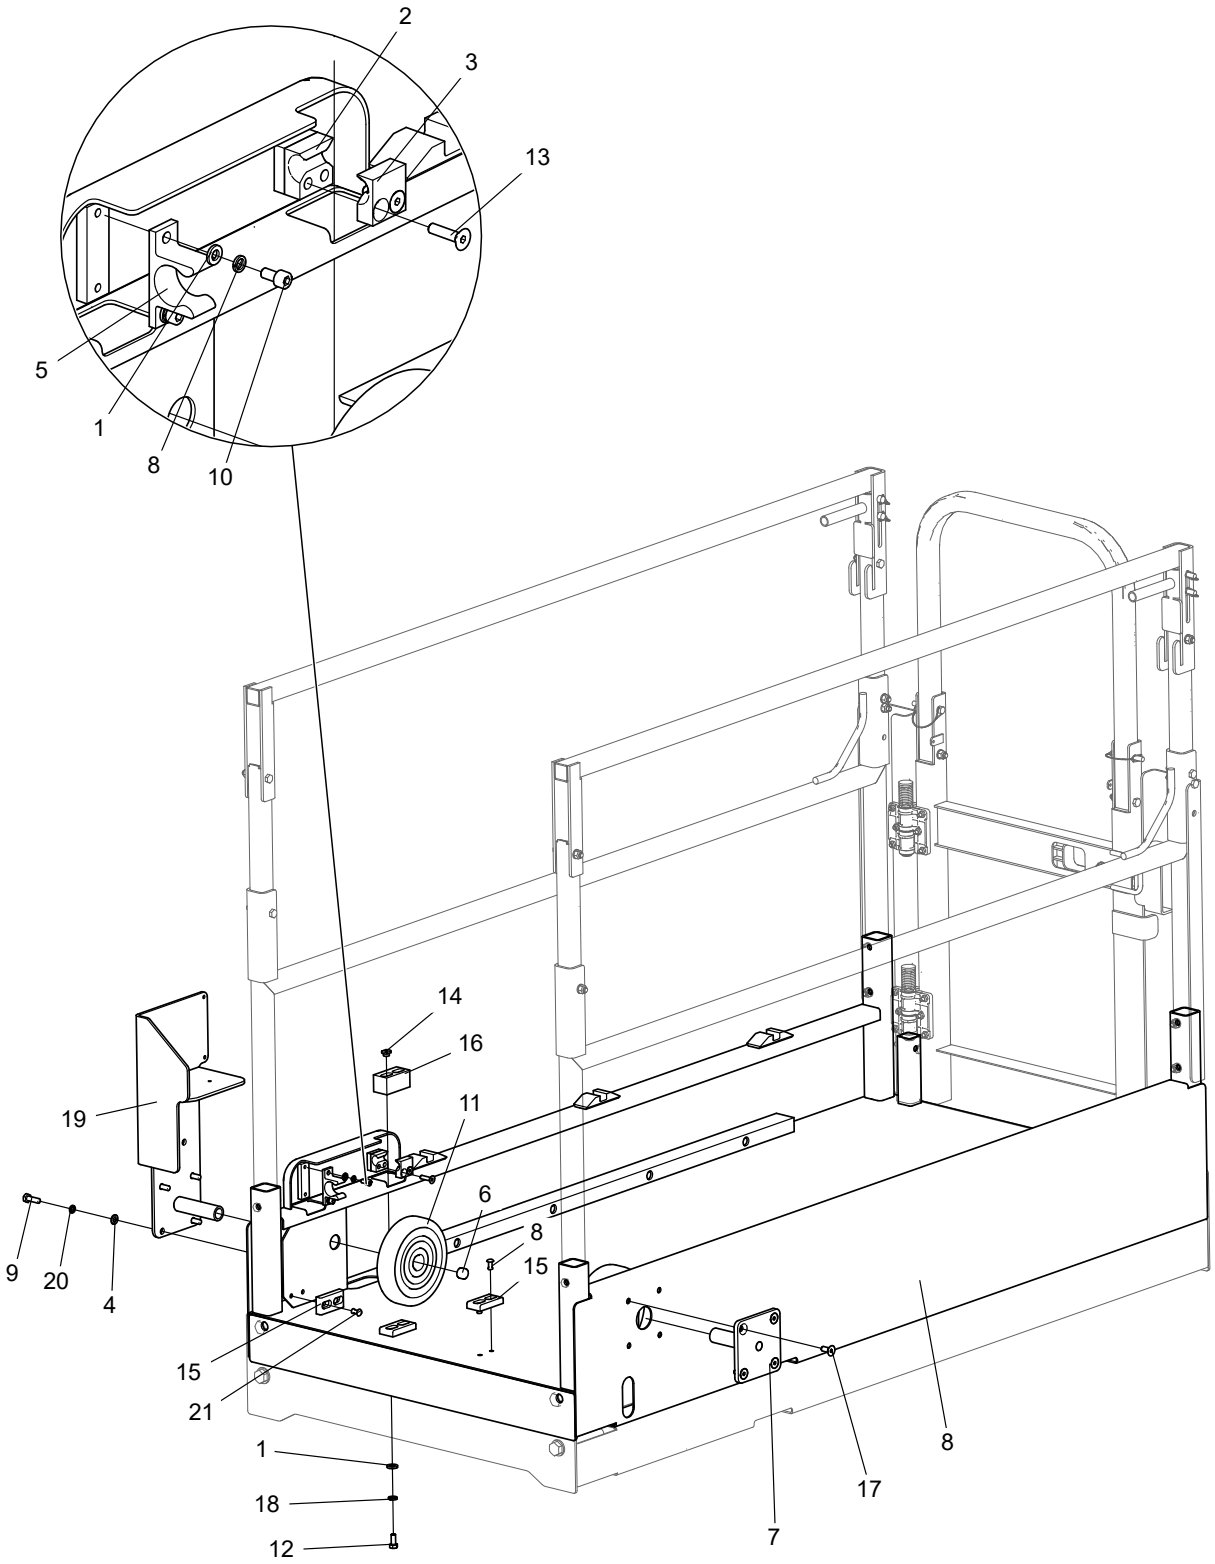


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215040000033	6	Washer 6-A2 GB/T 97.1
2	101040040070	1	Clamp
3	101040040069	1	Clamp
4	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
5	101040040071	1	Clamp
6	101016040136	2	Sliding block
7	101039040024	1	Bracket
8	101036040002	1	Fixed platform
9	215010000058	4	Bolt M8×25-8.8-ZnD GB/T 5783
10	215020000010	2	Screw M6×12-A2-70 GB/T 70.1
11	101035040018	2	Roller
12	215010000041	4	Bolt M5×12-A2-70 GB/T 5783
13	215020000230	2	Screw M6×25-A2-70 GB/T 70.3
14	101012040008	4	Special Nut
15	101016040113	4	Pad
16	101032040061	2	Pad
17	215020000226	4	Screw M8×20-8.8-ZnD GB/T 70.3
18	215040000004	6	Washer 6-A2-70 GB/T 93
19	101030040006	1	Bracket
20	215040000005	4	Washer 8-ZnD GB/T 93
21	215050000007	8	Blind rivet 6×10-ZnD GB/T 12618.2

https://truckmanualshub.com/

3.5.2 FIXED PLATFORM RAILS INSTALLATION(QUICK FOLD-DOWN PLATFORM)

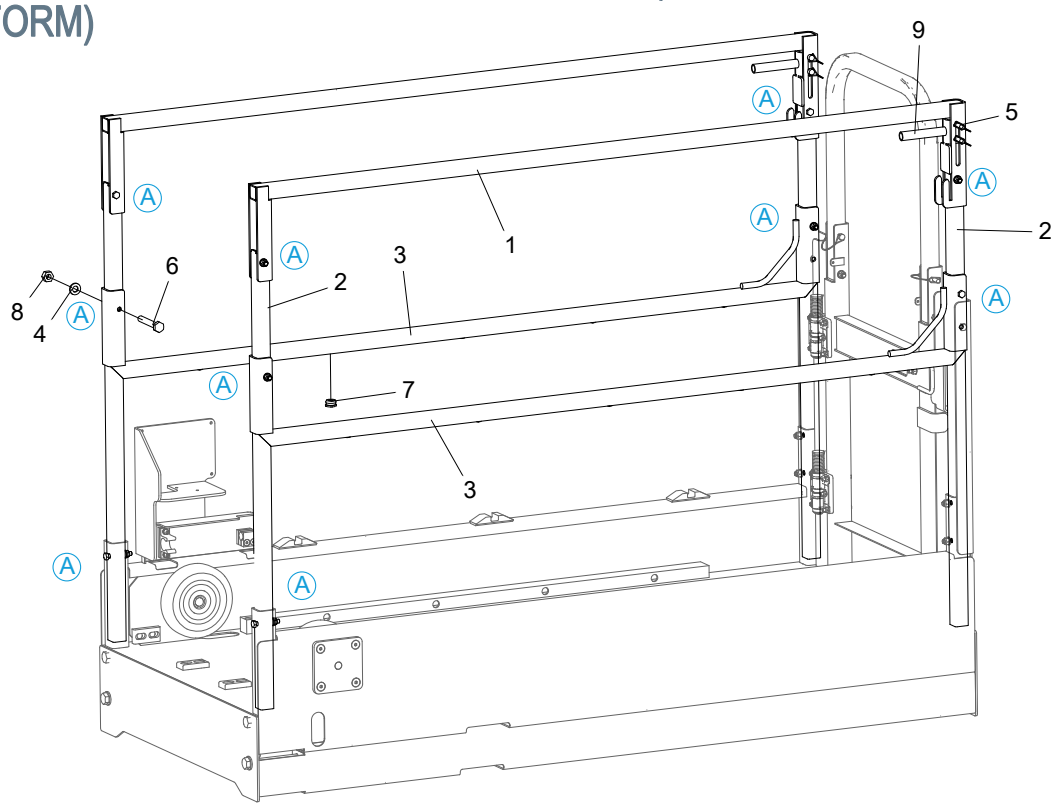


No.	Part No.	Qty.	Description
1	101058043020	2	Rail, upper
2	101058043068	4	Connector
3	101058043019	2	Rail, lower
4	215040000034	10	Washer 8-200HV-ZnD GB/T 97.1
5	209020000005	4	Lanyard
6	215010000064	10	Bolt M8×55-8.8-ZnD GB/T 5783
7	101014043005	10	Rubber choke plug
8	215030000026	10	Nut M8-8-ZnD GB/T889.1
9	101058043031	2	Handle, fixed

 © Jun 2021

https://truckmanualshub.com/


3.5.3 PLATFORM SUPPORT INSTALLATION(AS MODELS)-MODELS WITH 4M PLATFORM HEIGHT ONLY

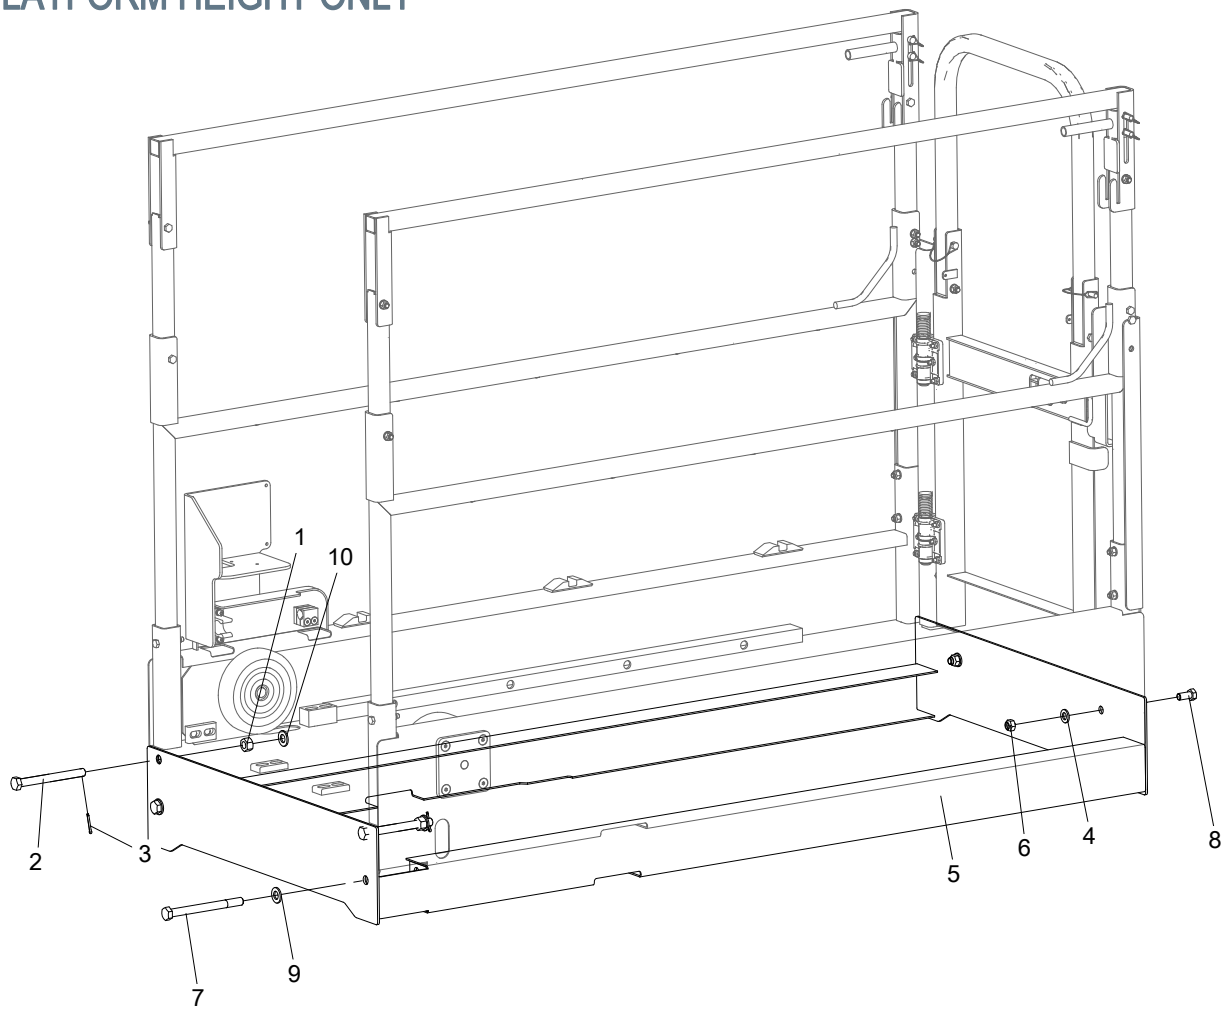

No.	Part No.	Qty.	Description
1	215030000068	2	Nut M14-8 GB/T 6170
2	215010000224	2	Bolt M14×140-8.8-DKL GB/T31.1
3	215060000004	2	Pin 3.2×25-ZnD GB/T 91
4	215040000037	2	Washer 12-200HV-ZnD GB/T 97.1
5	101032040040	1	Support, platform
6	215030000029	2	Nut M12-8-ZnD GB/T 889.1
7	215010000223	2	Bolt M14×155-8.8-ZnD GB/T 5782
8	215010000089	2	Bolt M12×25-8.8-ZnD GB/T 5783
9	215040000119	2	Washer 14-200HV GB/T97.1
10	215040000119	4	Washer 14-200HV GB/T97.1

https://truckmanualshub.com/

3.5.4 EXTENDED PLATFORM ASSEMBLY(QUICK FOLD-DOWN PLATFORM)

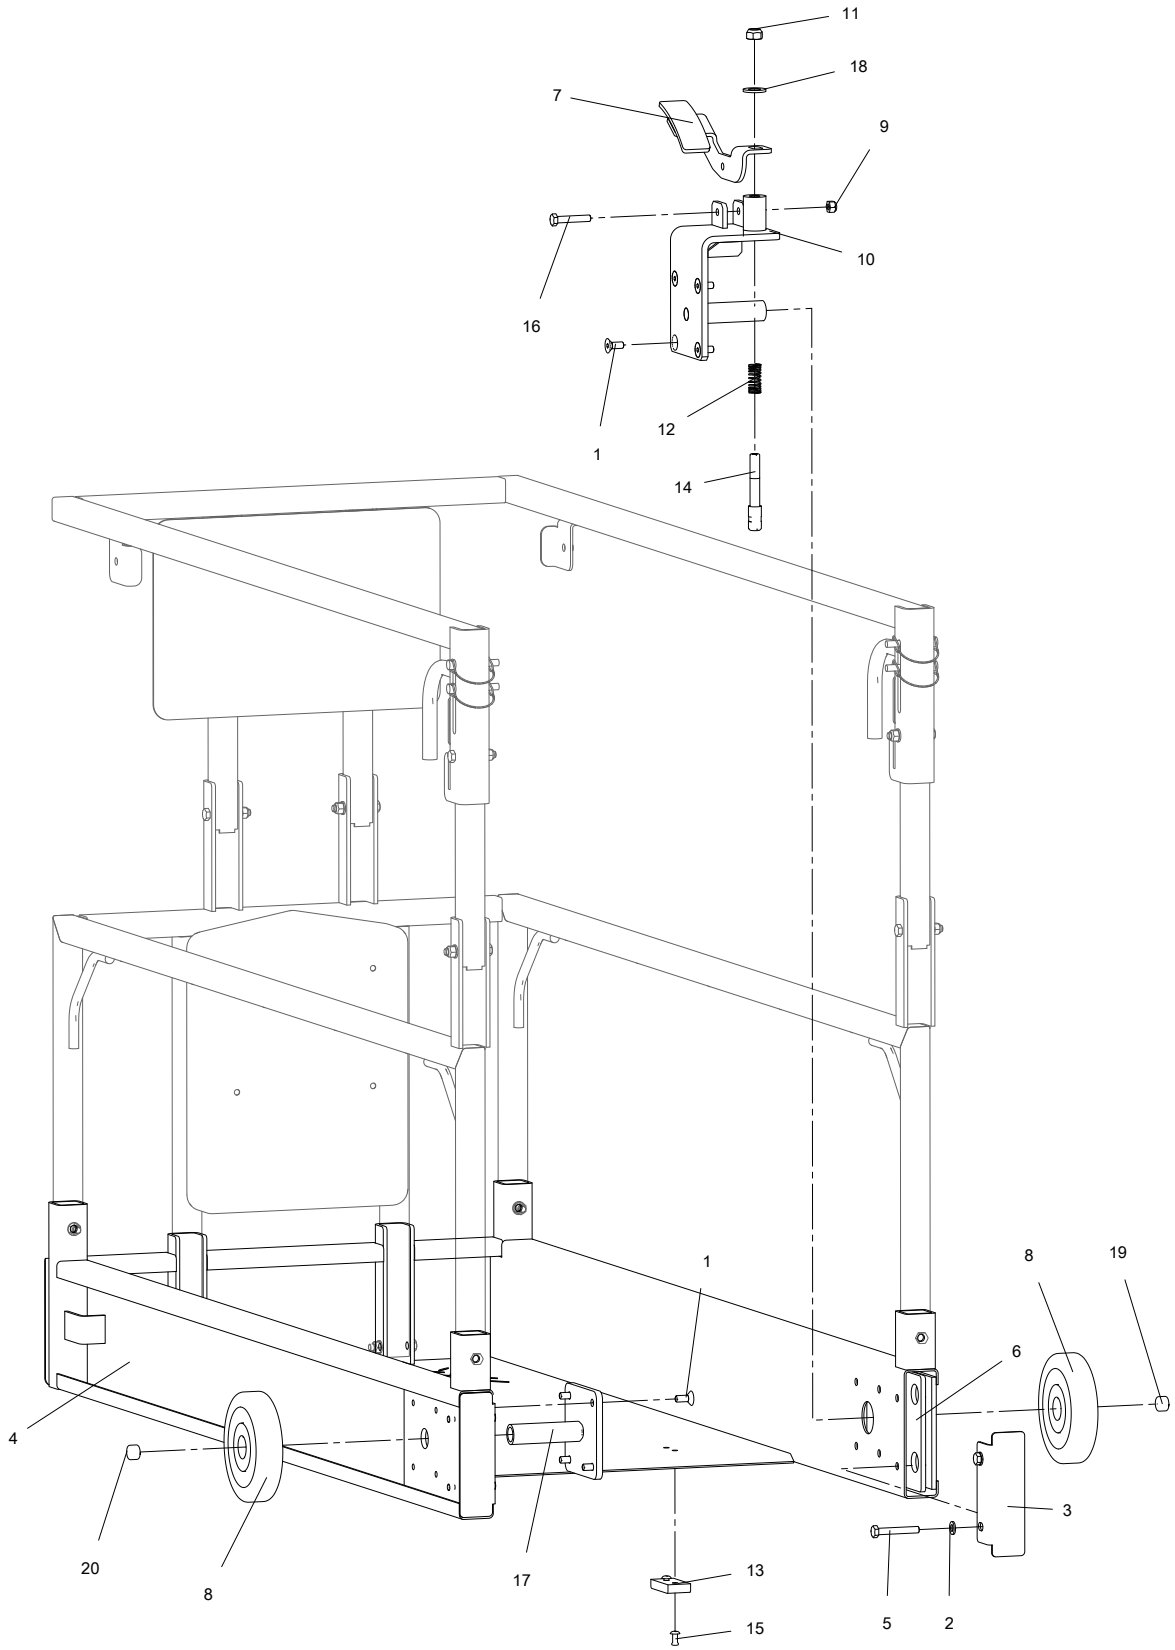


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215020000226	8	Screw M8×20-8.8-ZnD GB/T 70.3
2	215040000034	4	Washer 8-200HV-ZnD GB/T 97.1
3	101038040028	2	Cover
4	101035040009	1	Extended platform
5	215010000064	4	Bolt M8×55-8.8-ZnD GB/T 5783
6	101055043000	2	Plate
7	101040040066	1	Pedal
8	101013040015	2	Roller
9	215030000026	1	Nut M8-8-ZnD GB/T889.1
10	101015040103	1	Bracket
11	215030000029	1	Nut M12-8-ZnD GB/T 889.1
12	101040040062	1	Spring
13	101016040113	2	Pad
14	101040040060	1	Rod
15	215050000007	4	Blind rivet 6×10-ZnD GB/T 12618.2
16	215010000062	1	Bolt M8×45-8.8-ZnD GB/T 5783
17	101039040024	1	Bracket
18	215040000119	1	Washer 14-200HV GB/T97.1
19	101016040136	1	Sliding block
20	101016040136	1	Sliding block

https://truckmanualshub.com/

3.5.5 EXTENDED PLATFORM RAILS INSTALLATION(QUICK FOLD-DOWN PLATFORM)

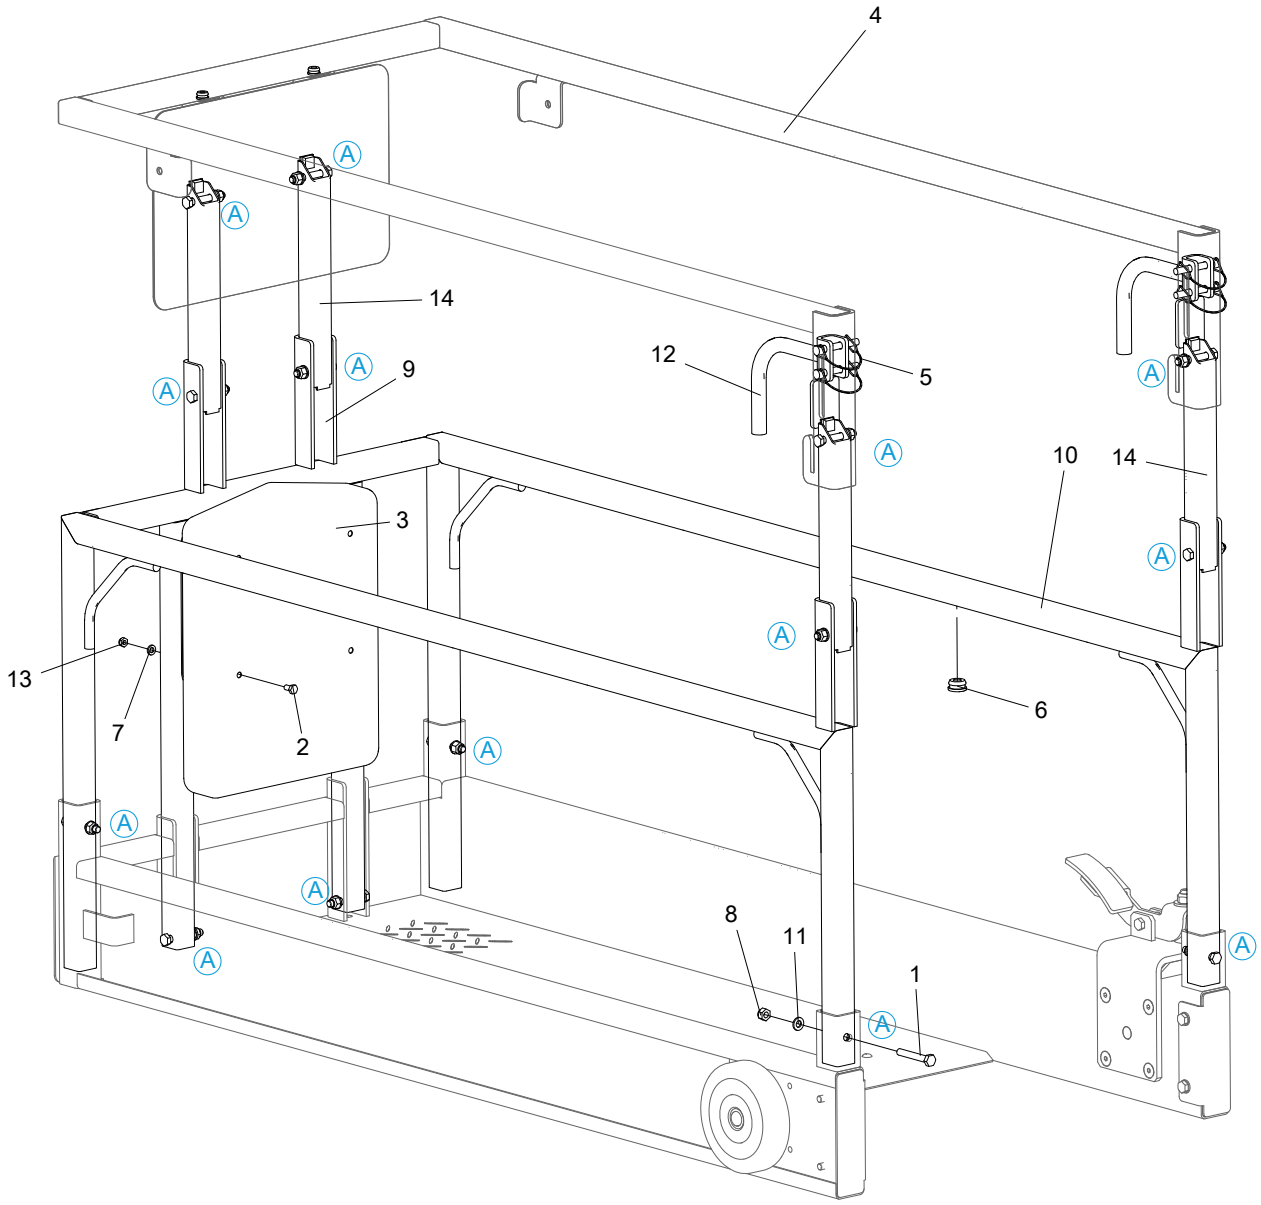


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215010000064	14	Bolt M8×55-8.8-ZnD GB/T 5783
2	215010000049	4	Bolt M6×12-A2-70 GB/T 5783
3	216070000001	1	Manual storage container
4	101058043016	1	Rail, upper
5	209020000005	4	Lanyard
6	101014043005	12	Rubber choke plug
7	215040000033	4	Washer 6-A2 GB/T 97.1
8	215030000026	14	Nut M8-8-ZnD GB/T889.1
9	101058043017	1	Rail, front
10	101058043018	2	Rail, lower
11	215040000034	14	Washer 8-200HV-ZnD GB/T 97.1
12	101058043062	2	Handle, fixed
13	215030000025	4	Nut M6-8-A2-70 GB/T 889.1
14	101058043068	4	Connector

https://truckmanualshub.com/

3.5.6 PLATFORM ENTRY GATE INSTALLATION(QUICK FOLD-DOWN PLATFORM)

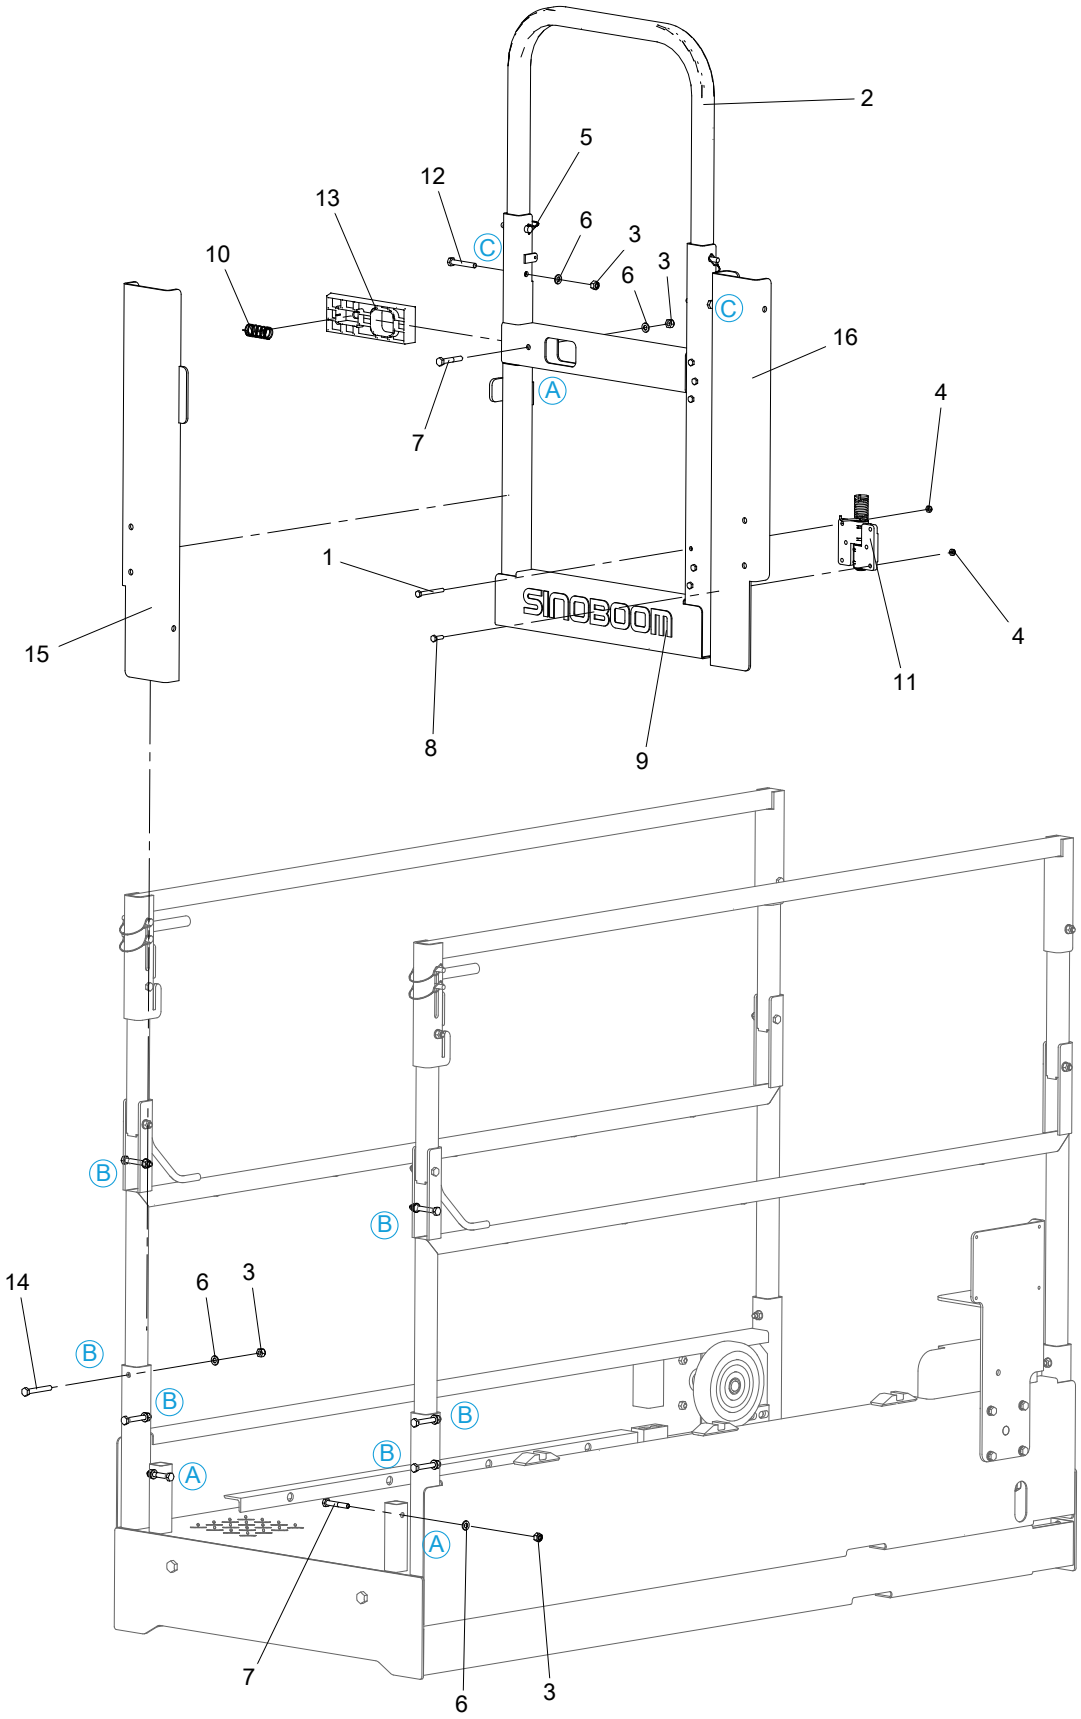

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
1	215010100004	6	Bolt M8×50-8.8-ZnD GB/T 5782
2	101032040031	1	Rail
3	215030000026	11	Nut M8-8-ZnD GB/T889.1
4	215030000025	12	Nut M6-8-A2-70 GB/T 889.1
5	209020000005	2	Lanyard
6	215040000034	11	Washer 8-200HV-ZnD GB/T 97.1
7	215010000163	3	Bolt M8×50-8.8-ZnD GB/T 5782
8	215010000051	6	Bolt M6×20-A2-70 GB/T 5783
9	101038040024	1	Door
10	101019040001	1	Spring
11	101015040007	2	Hinge assembly
12	215010000064	2	Bolt M8×55-8.8-ZnD GB/T 5783
13	101012040056	1	Lock
14	215010000065	6	Bolt M8×60-8.8-ZnD GB/T 5783
15	101058043026	1	Cover
16	101058043027	1	Cover

https://truckmanualshub.com/

4 CHASSIS-SCISSOR-PLATFORM INSTALLATION

https://truckmanualshub.com/

4.1 CHASSIS-SCISSOR-PLATFORM INSTALLATION (GTJZ0408SE&0408ME)

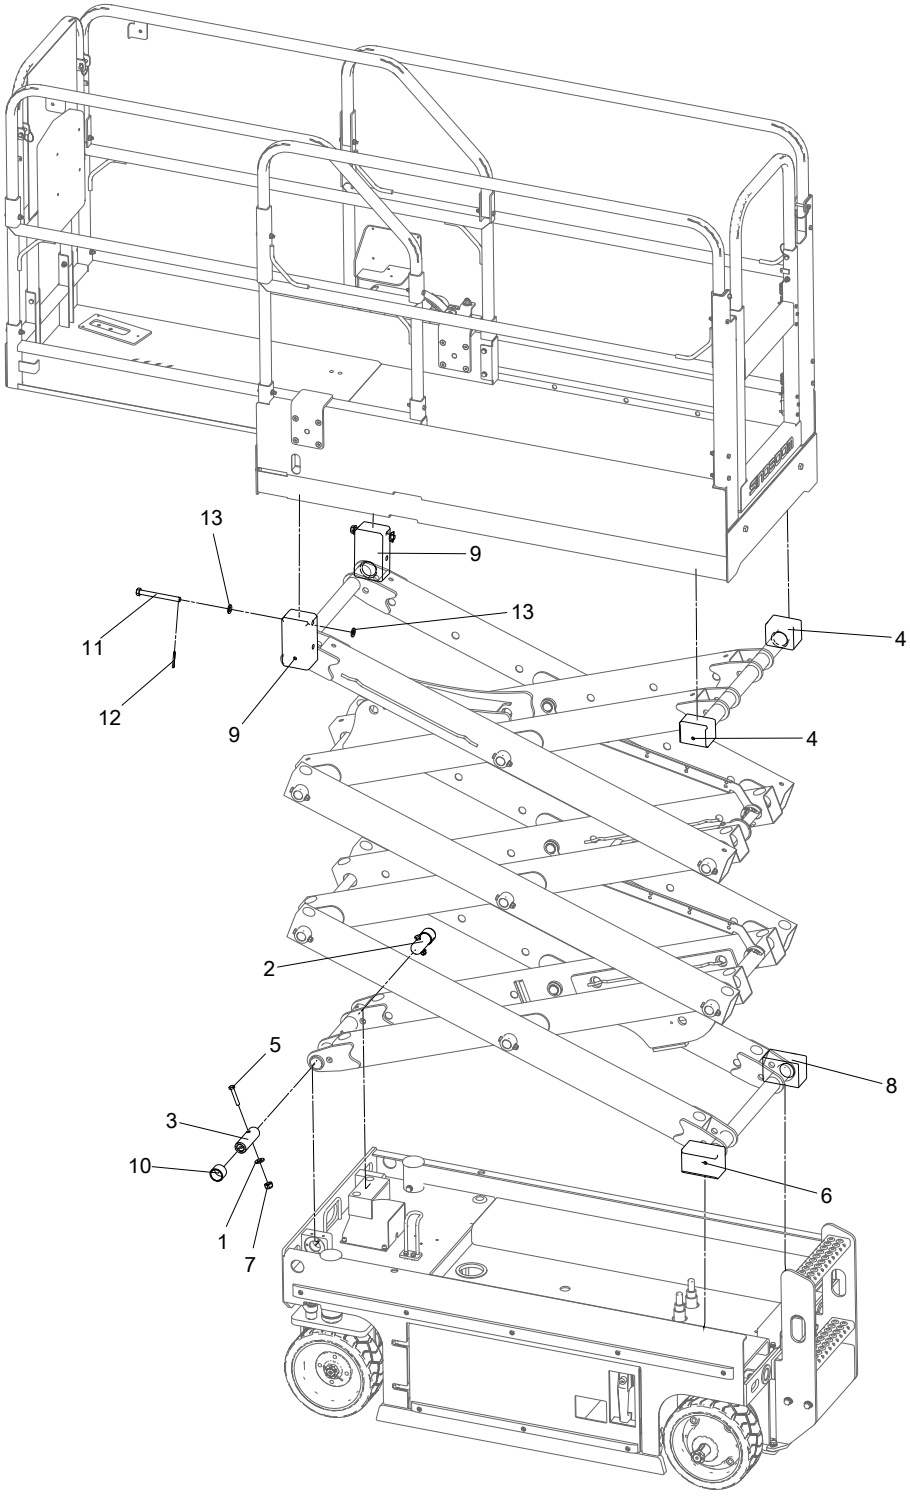


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215040000035	2	Washer 10-200HV-ZnD GB/T 97.1
2	101016010044	1	Pin
3	101032010023	1	Pin
4	101032040054	2	Sliding block, upper
5	215010000010	2	Bolt M10×60-8.8-ZnD GB/T 5782
6	101033030025	1	Sliding block, lower left
7	215030000027	2	Nut M10-8-ZnD GB/T 889.1
8	101033030023	1	Sliding block, lower right
9	101032040053	2	Sliding block
10	214030000014	2	Self-lubricating bearing
11	215010000224	2	Bolt M14×140-8.8-DKL GB/T31.1
12	215060000004	2	Pin 3.2×25-ZnD GB/T 91
13	215040000119	4	Washer 14-200HV GB/T97.1

https://truckmanualshub.com/

4.2 CHASSIS-SCISSOR-PLATFORM INSTALLATION (GTJZ0608SE&0608ME)

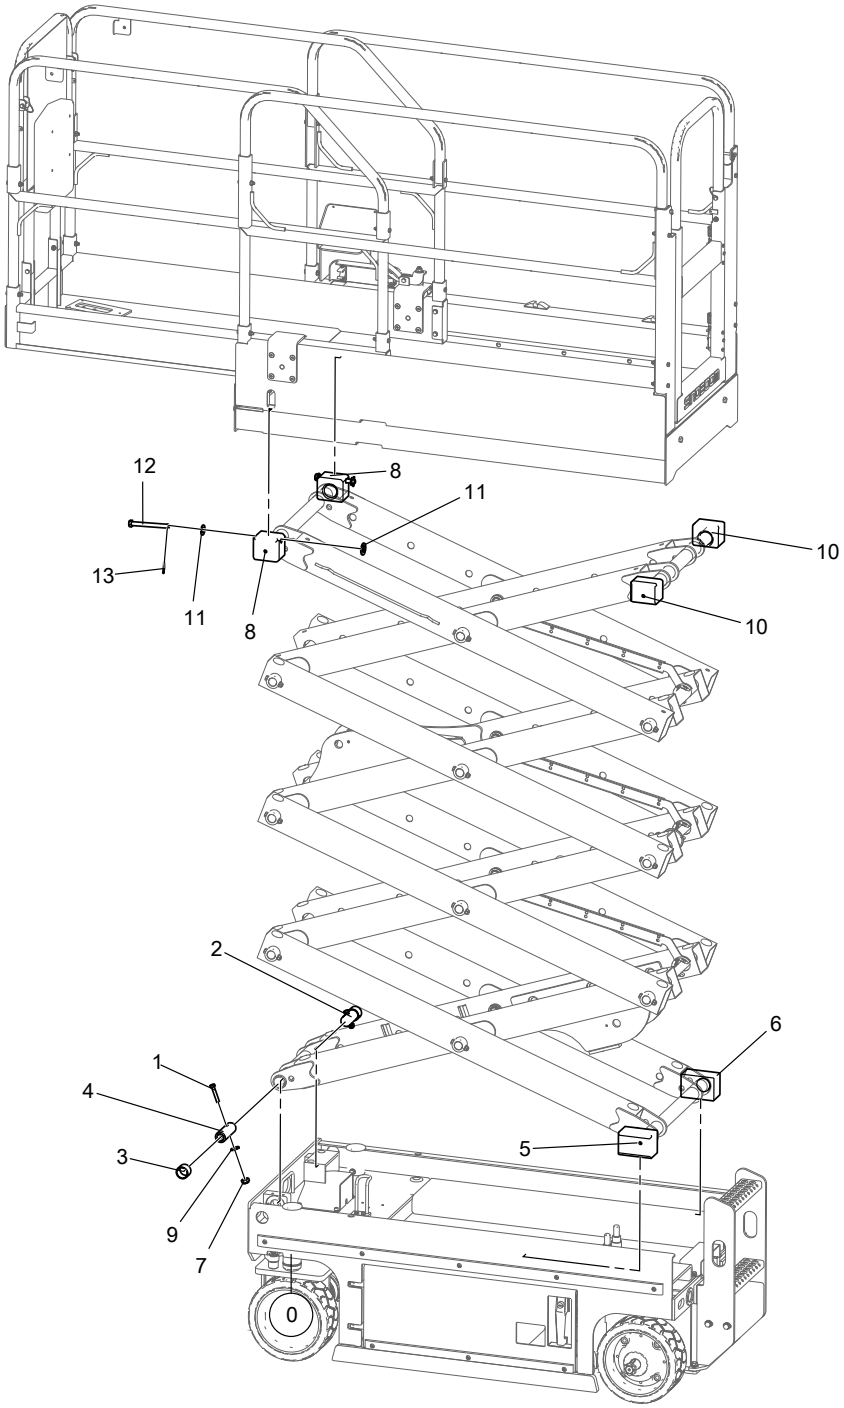

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215010000010	2	Bolt M10×60-8.8-ZnD GB/T 5782
2	101016010044	1	Pin
3	214030000014	2	Self-lubricating bearing
4	101032010023	1	Pin
5	101033030025	1	Sliding block, lower left
6	101033030023	1	Sliding block, lower right
7	215030000027	2	Nut M10-8-ZnD GB/T 889.1
8	101032040052	2	Sliding block, upper
9	215040000035	2	Washer 10-200HV-ZnD GB/T 97.1
10	101032040054	2	Sliding block, upper
11	215040000119	4	Washer 14-200HV GB/T97.1
12	215010000224	2	Bolt M14×140-8.8-DKL GB/T31.1
13	215060000004	2	Pin 3.2×25-ZnD GB/T 91

https://truckmanualshub.com/


This Page Intentionally Left Blank

https://truckmanualshub.com/

5 HYDRAULIC SYSTEM

https://truckmanualshub.com/

5.1 EMERGENCY DECENT HANDLE INSTALLATION

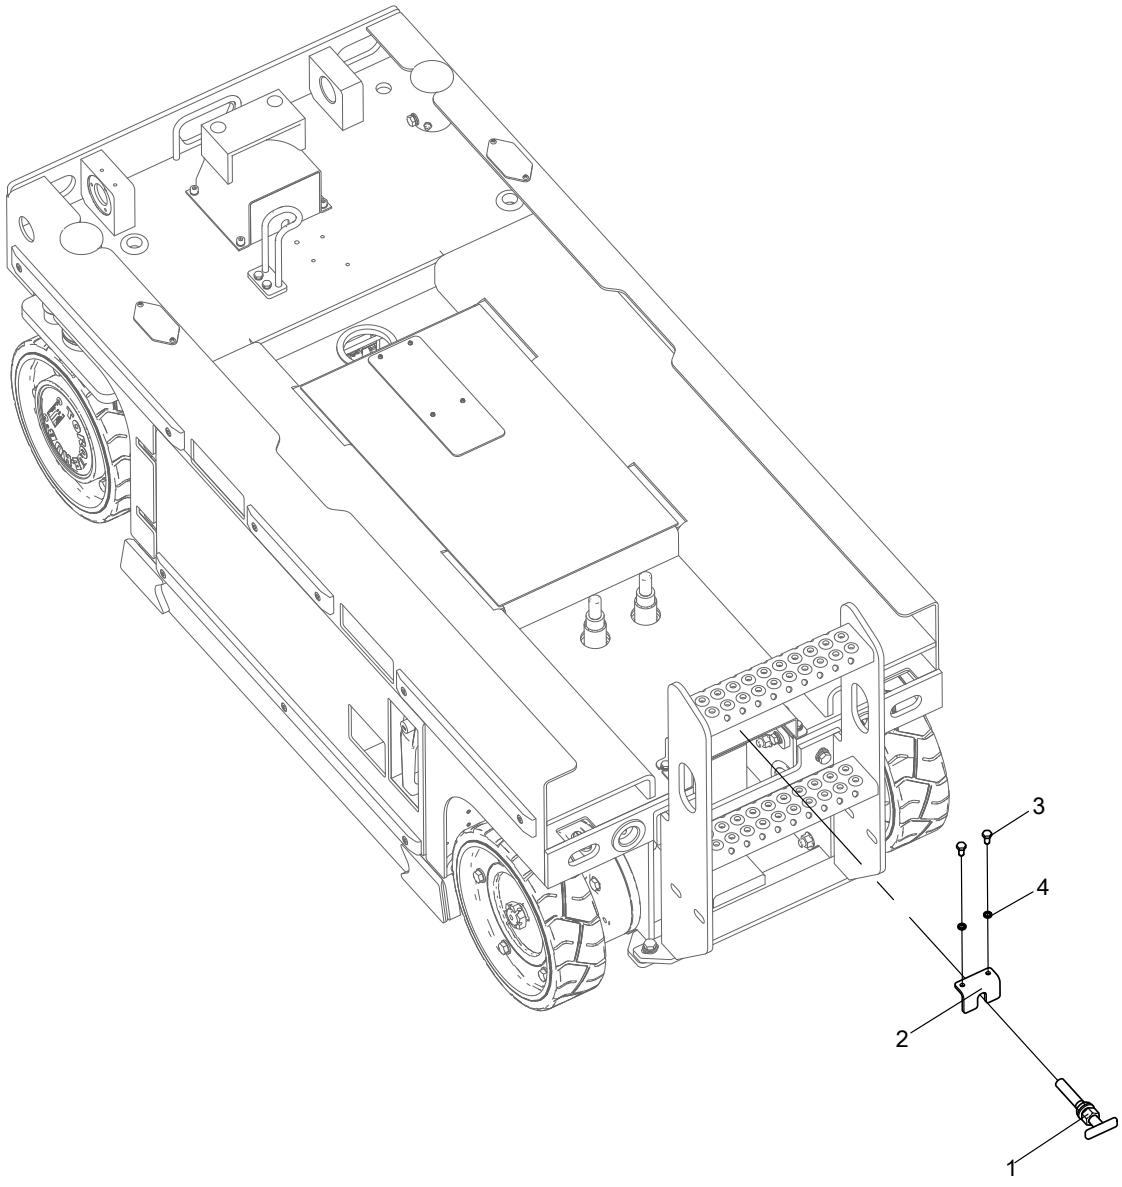


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	204100000015	1	Emergency Decent Handle
2	101016030042	1	Plate
3	215010000056	2	Bolt M8×16-8.8-ZnD GB/T 5783
4	215040000005	2	Washer 8-ZnD GB/T 93

https://truckmanualshub.com/

5.2 RIGHT DOOR HYDRAULIC COMPONENTS INSTALLATION

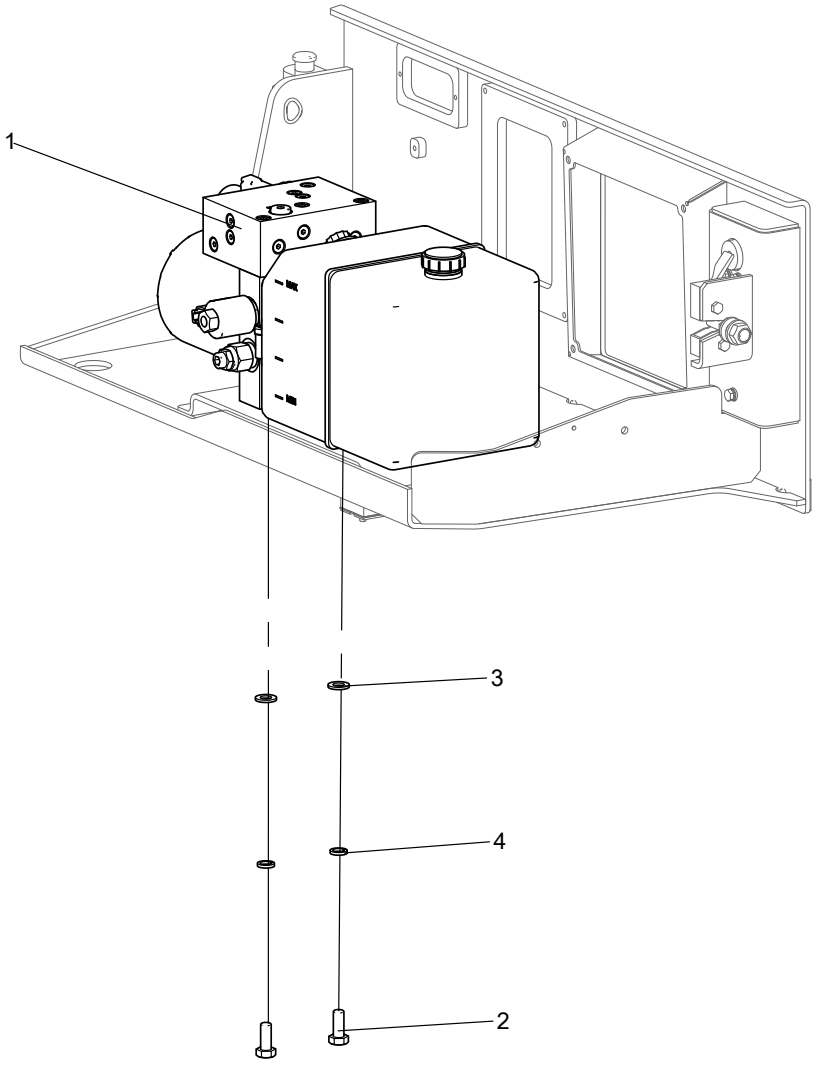


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	202010000056	1	Power unit
2	215010000069	2	Nut M10×25-8.8-ZnD GB/T 5783
3	215040000035	2	Washer 10-200HV-ZnD GB/T 97.1
4	215040000006	2	Washer 10-ZnD GB/T 93

https://truckmanualshub.com/


5.3 POWER UNIT 202010000056

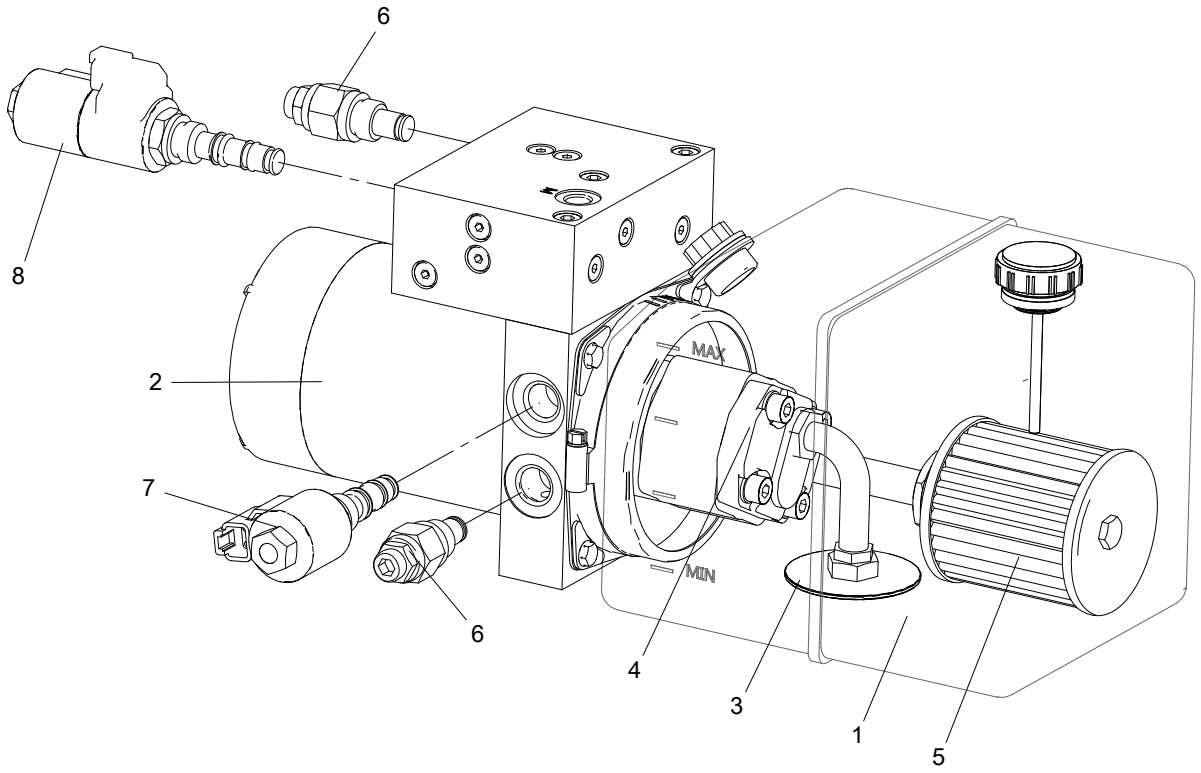

No.	Part No.	Qty.	Description
1	202110003009	1	Oil tank, plastic
2	203010003038	1	DC motor
2a	203990003015	1	Carbon brush
3	202080003005	1	Screen
4	202010003050	1	Gear pump
4a	207990003033	1	Seal kit, Gear pump assembly
5	202080003002	1	Return filter, in-tank
6	202040003288	2	Relief valve, direct-acting
7	202040003289	1	Cartridge solenoid valve, 2-position 4-way
8	202040003290	1	Cartridge solenoid valve, 3-position 4-way

https://truckmanualshub.com/

5.4 HOSE CLAMP INSTALLATION

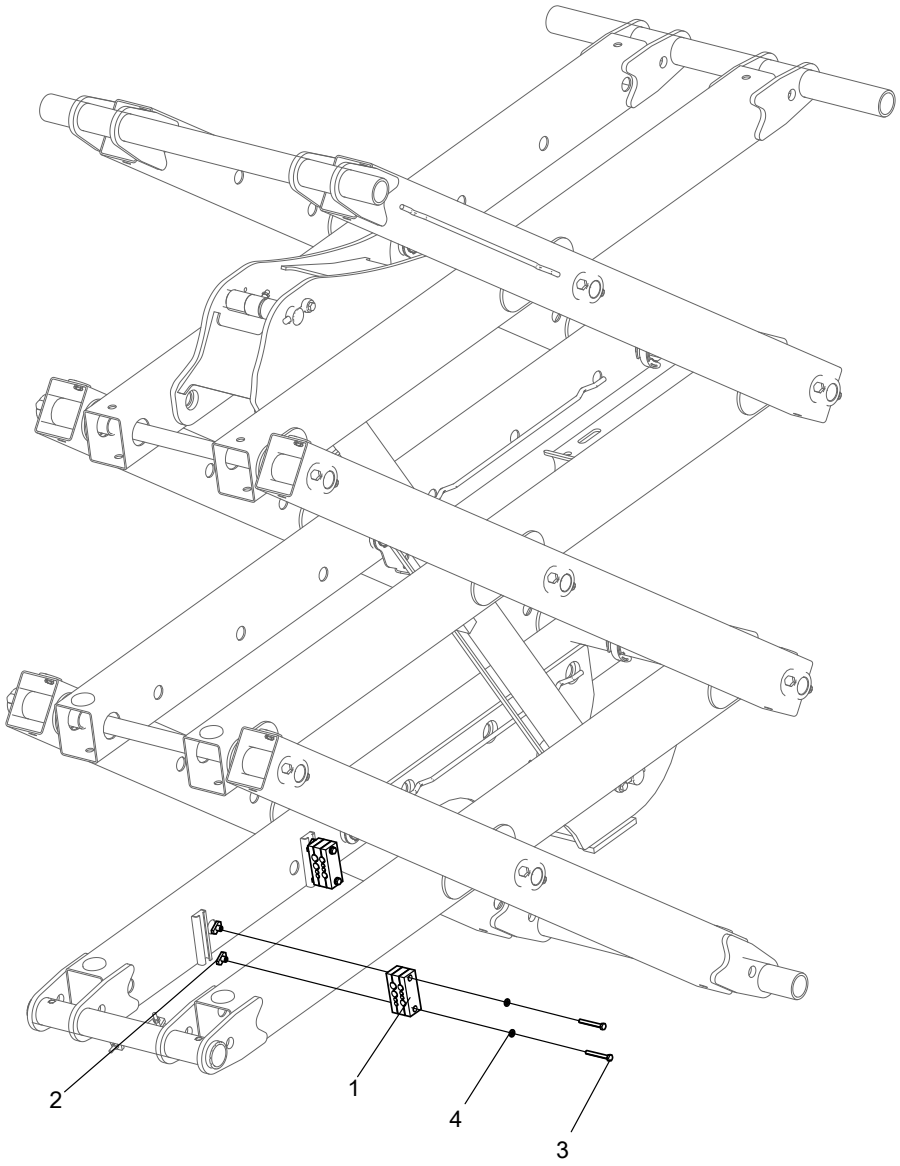


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101046053000	2	Hose Clamp
2	216010000019	4	Nut
3	215010000055	4	Bolt M6×50-A2-70 GB/T 5783
4	215040000033	4	Washer 6-A2 GB/T 97.1

https://truckmanualshub.com/


5.5 LIFT CONTROL VALVE INSTALLATION

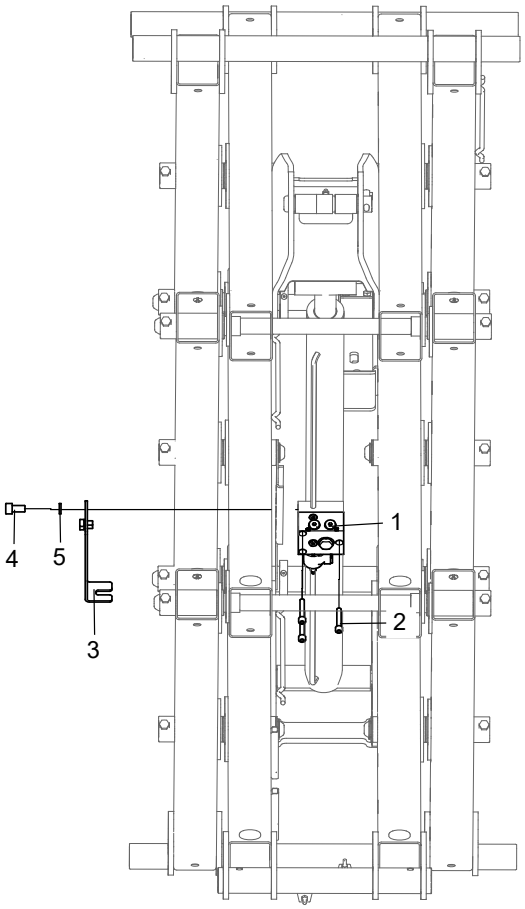

No.	Part No.	Qty.	Description
1	101054050002		Options, Lift control valve
1-1	202040003293	1	Lift control valve(1000282)
1-2	202040003295	1	Lift control valve(1000176)
2	215020000030	3	Screw M8×45-8.8-ZnD GB/T 70.1
3	101012010046	1	Bracket
4	215020000022	3	Screw M8×16-8.8-ZnD GB/T 70.1
5	215040000005	3	Washer 8-ZnD GB/T 93

https://truckmanualshub.com/


5.6 LIFT CONTROL VALVE 202040003293

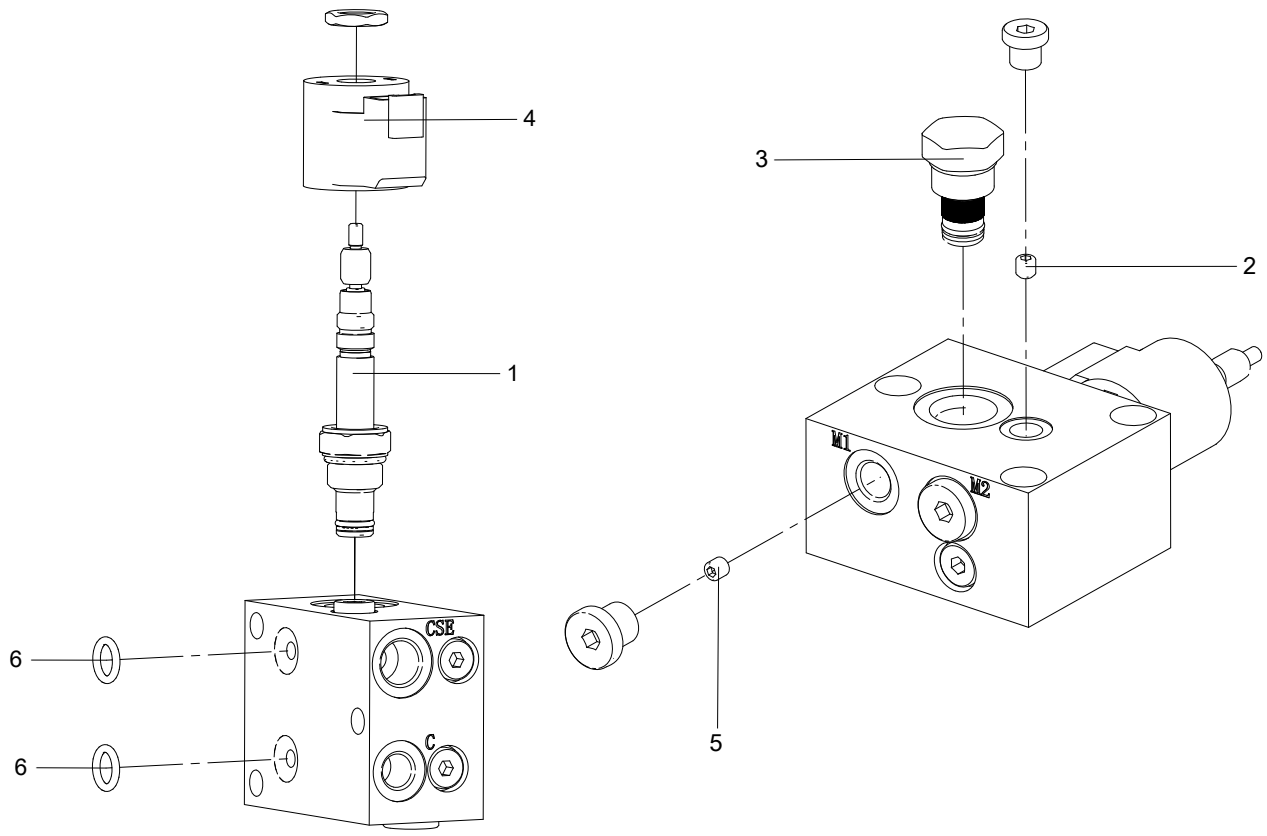

No.	Part No.	Qty.	Description
1	202990003020	1	Solenoid valve(with screen)
2	202130000006	1	Plug
3	202990003023	1	Check valve (with screen)
4	202990003019	1	Coil
5	202130000007	1	Plug
6	207040003003	2	O-ring

https://truckmanualshub.com/


5.7 LIFT CONTROL VALVE 202040003295

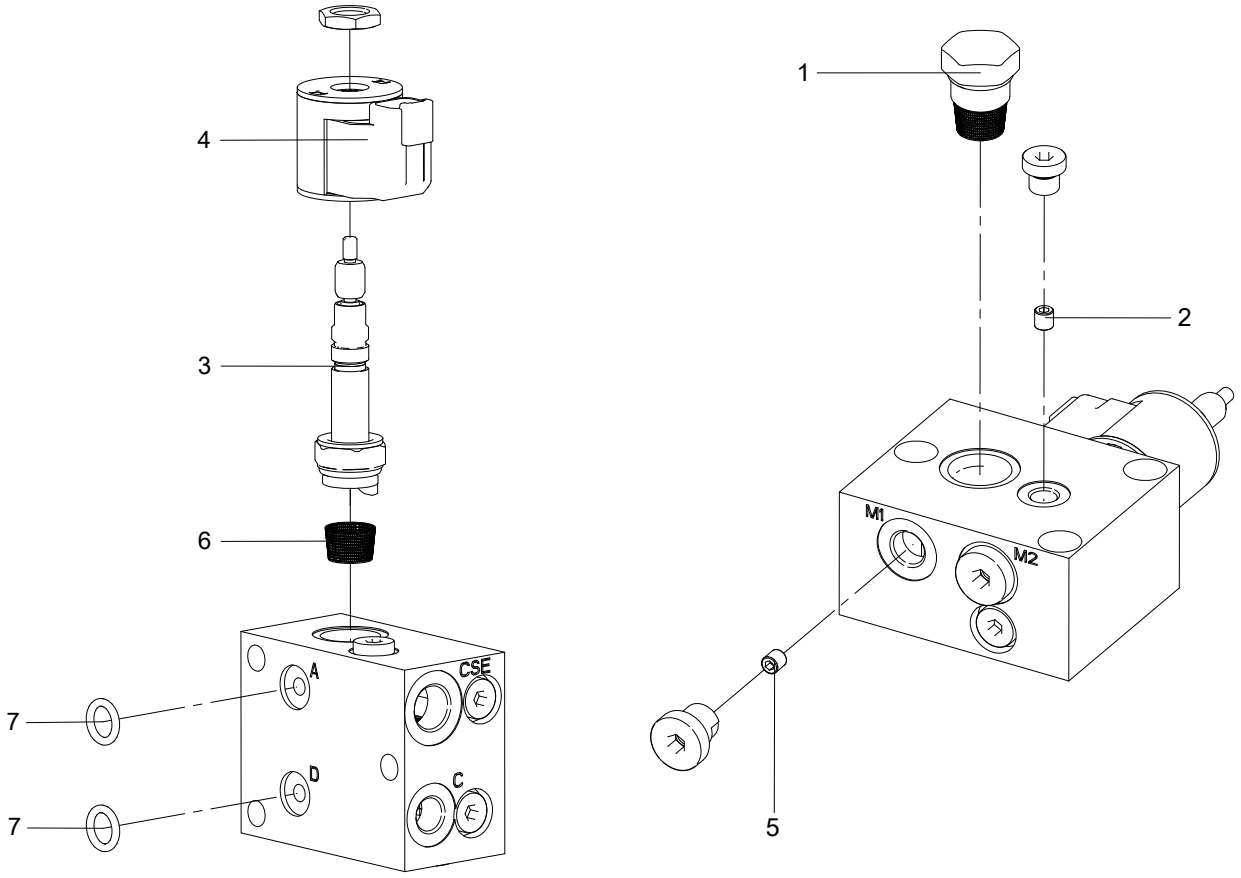

No.	Part No.	Qty.	Description
1	202990003021	1	Check valve (with screen)
2	202130000006	1	Plug
3	202990000031	1	Solenoid valve spool, lower lifting
4	202990000039	1	Coil
5	202130000007	1	Plug
6	202080003007	1	Filter screen
7	207040003003	2	O-ring

https://truckmanualshub.com/


5.8 HYDRAULIC TUBES LAYOUT

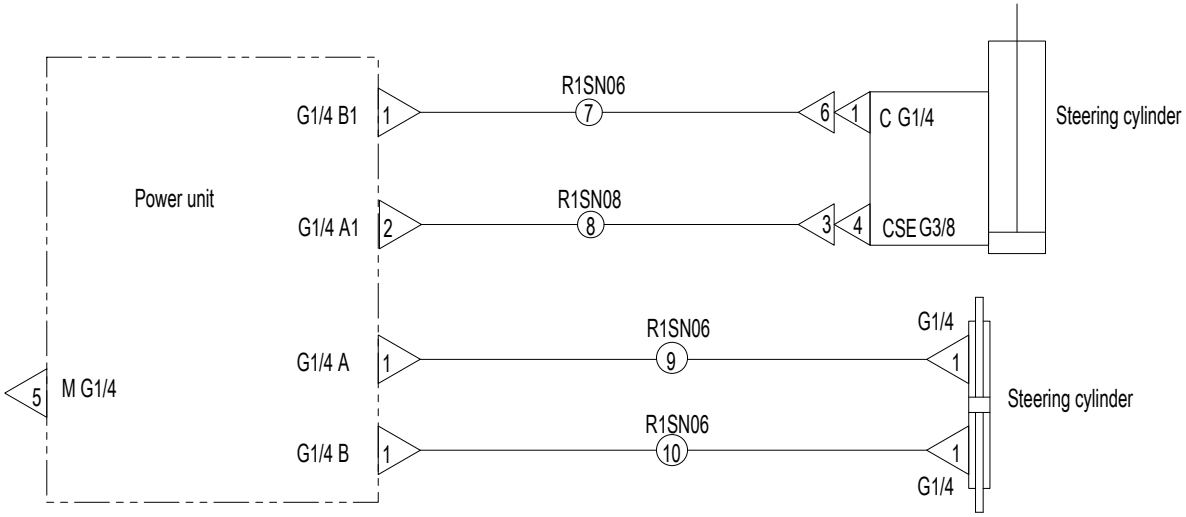


No.	Part No.	Qty.	Description
1	213010000007	6	Fitting
2	213010000012	1	Fitting
3	213010000009	1	Fitting
4	213010003141	1	Fitting, filter screen
5	213010000010	1	Fitting
6	213010000024	1	Fitting
7	213050001159	1	Hose
8	213050001525	1	Hose
9	213050003158	1	Hose
10	213050000441	1	Hose
11	216110000001	1	Hose jacket

https://truckmanualshub.com/

5.9 HYDRAULIC VALVES IDENTIFICATION

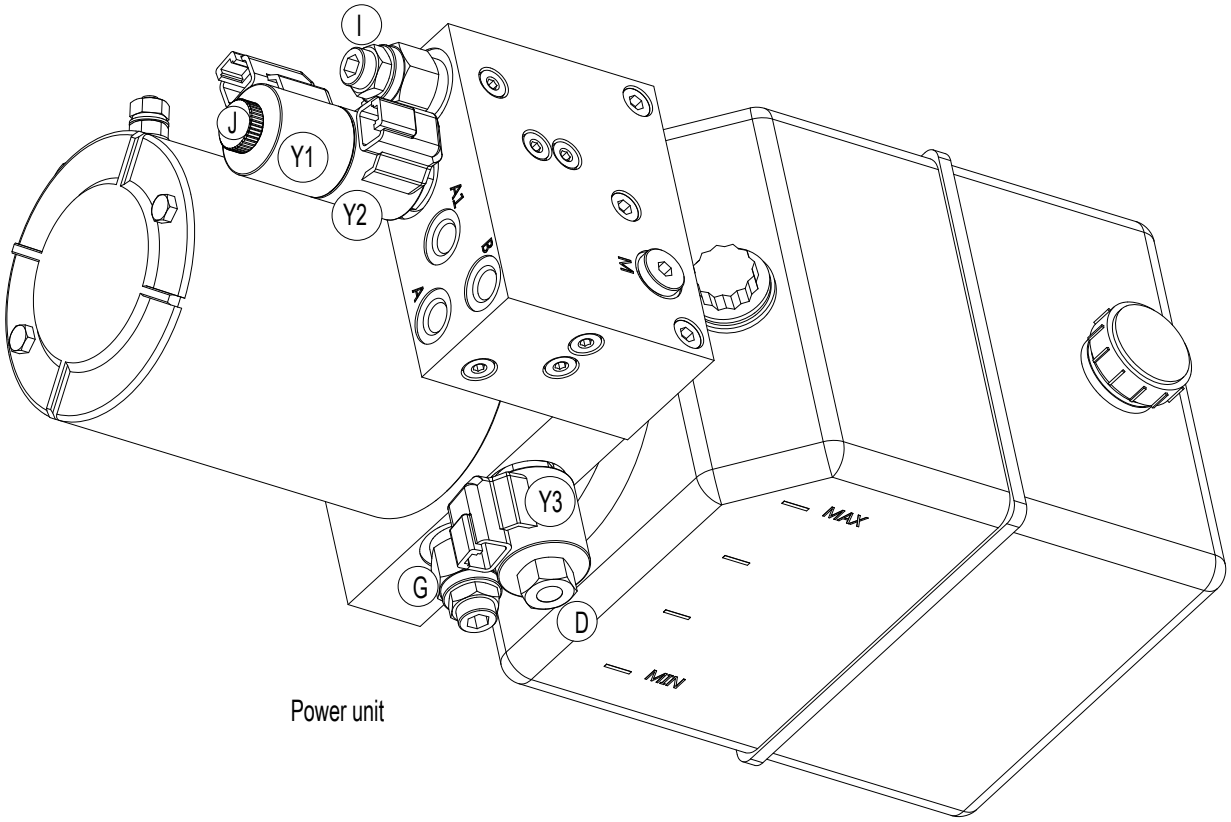

Power unit

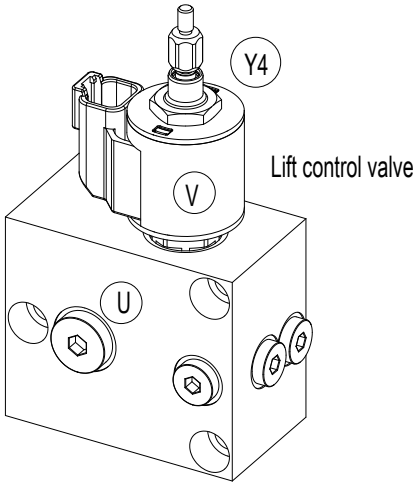


Lift control valve

NO.	Description
D	Lift valve
G	Lift relief valve
I	Steer relief valve
J	Soleniod directional valve, steer
U	Check valve
V	Soleniod directional valve, descend
Y1	Soleniod, right steer valve
Y2	Soleniod, left steer valve
Y3	Soleniod, lift valve
Y4	Soleniod, descend valve

https://truckmanualshub.com/

5.10 HYDRAULIC SCHEMATIC

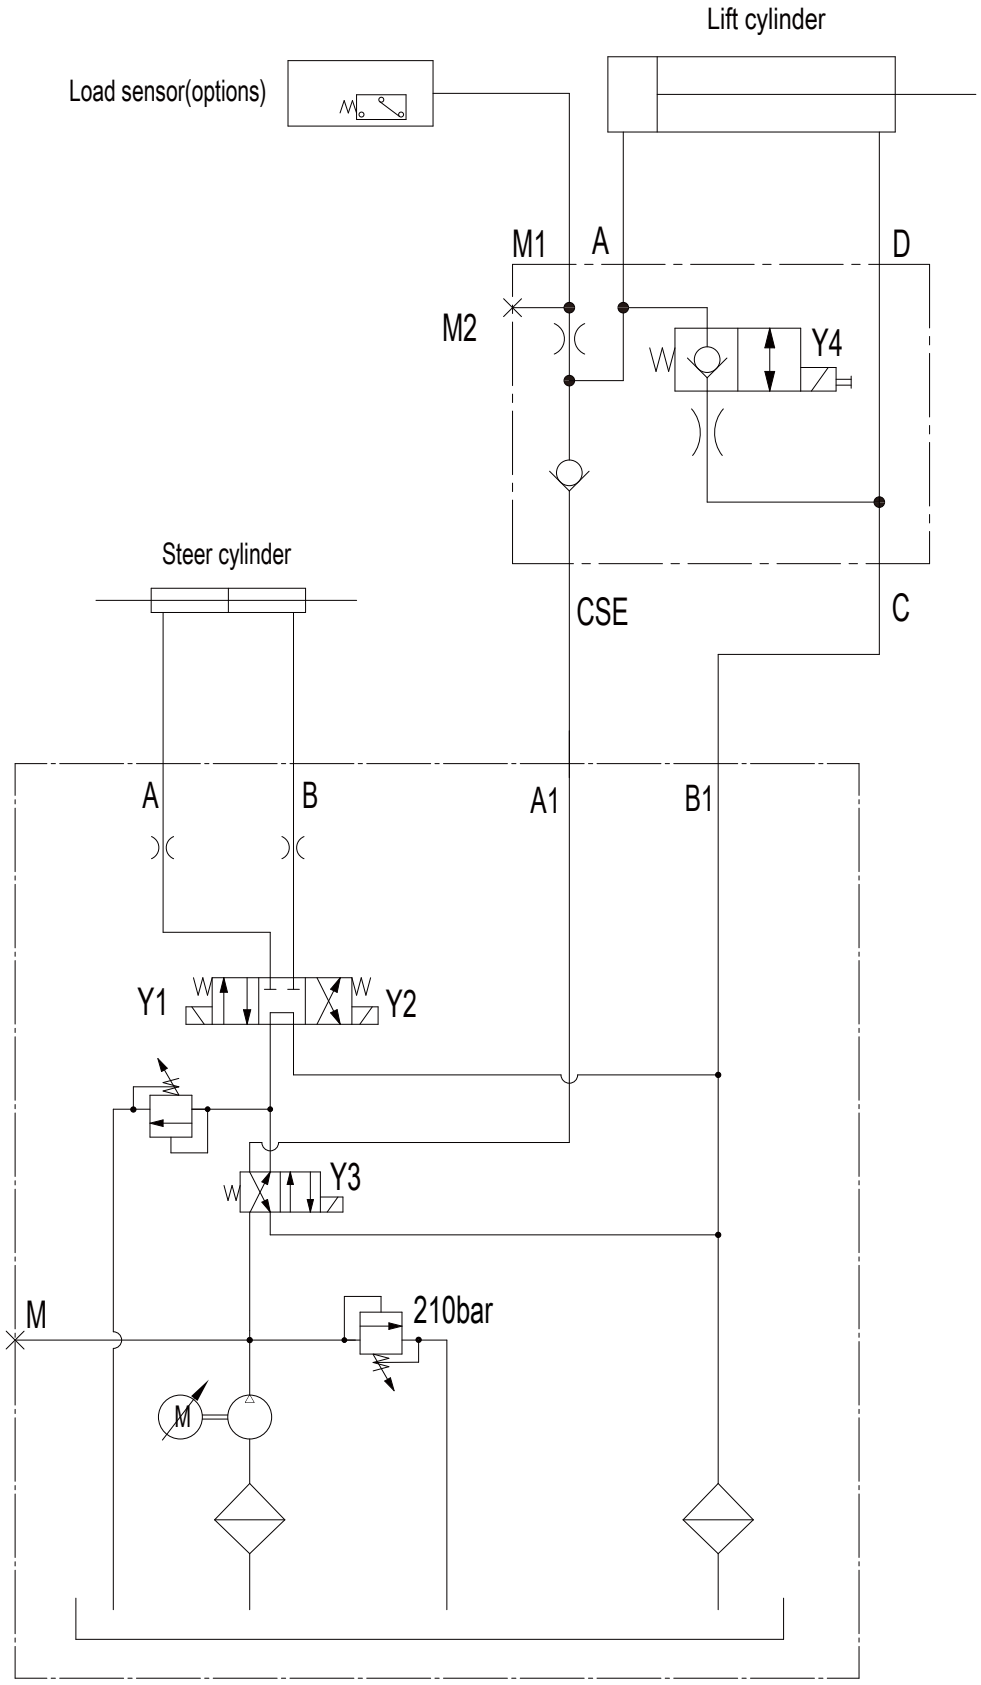


https://truckmanualshub.com/

6 ELECTRICAL SYSTEM

https://truckmanualshub.com/

6.1 CHASSIS ELECTRICAL COMPONENTS INSTALLATION

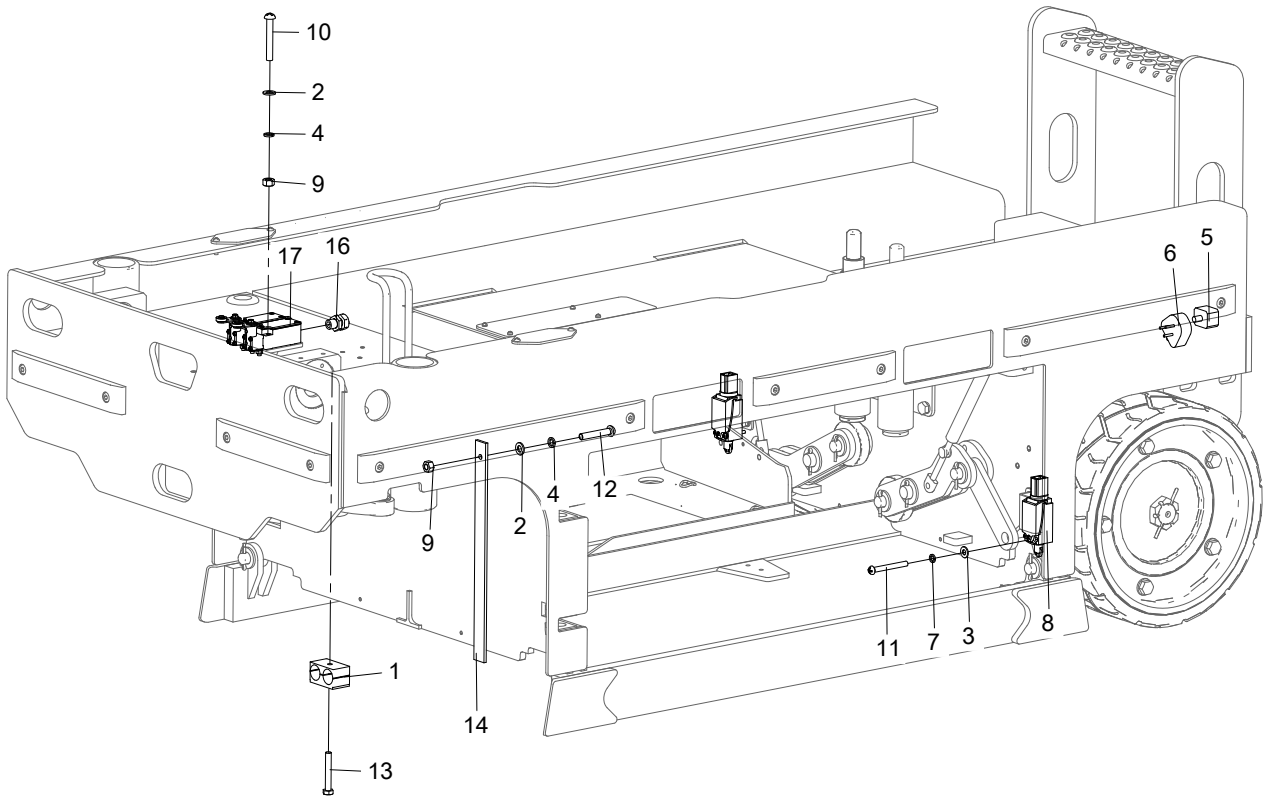


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	216990003000	1	Clamp
2	215040000032	5	Washer 5-A2 GB/T 97.1
3	215040000031	4	Washer 4-A2 GB/T 97.1
4	215040000003	5	Washer 5-A2-70 GB/T 93
5	101055063030		Options, 3 pins plug
5-1	203080000464	1	3 pins plug(2.9m)
5-2	203080003071	1	3 pins plug(0.3m)
6	101055063023		Options, Charger cord and plug
6-1	203080000178	1	Charger cord and plug (Type G, HongKong and Middle East specs)(Type G, HongKong and Middle East specs)
6-2	101055063062	1	Charger cord and plug(AS specs)
6-3	203080000173	1	Charger cord and plug (Type M, Macao specs)(Type M, Macao specs)
6-4	203080000177	1	Charger cord and plug (Type E+F, European and Brazilian specs)(Type E+F, European and Brazilian specs)
6-5	203080000175	1	Charger cord and plug(Type I, China and Australian specs)(Type I, China and Australian specs)
6-6	203080000174	1	Charger cord and plug (Type J, Swiss specs)(Type J, Swiss specs)
6-7	203080000630	1	Charger cord and plug (Type B, American and South American specs)(Type B, Americag and South America specs)
6-8	203080000319	1	Charger cord and plug(Type L, South America specs)
7	215040000002	4	Washer 4-A2-70 GB/T 93
8	101058063003		Options, Limit switch, Pothole protection
8-1	203060003031	2	Limit switch(Standard)
8-2	203060003030	2	Limit switch(Options)
9	215030000003	5	Nut M5-A2-70 GB/T 6170
10	215020000214	4	Screw M5×35-A2-70 GB/T 818
11	215020000212	4	Screw M4×35-A2-70 GB/T 818
12	215020000114	1	Screw M5×30-A2-70 GB/T 818
13	215010000064	1	Bolt M8×55-8.8-ZnD GB/T 5783
14	203160000004	1	Rubber strap, anti-static
15	203080003061	1	Cable(Not shown)
16	201990003005	2	Connector
17	203060000108	2	Limit switch

https://truckmanualshub.com/


6.2 OPTIONS, LEVEL SENSOR INSTALLATION

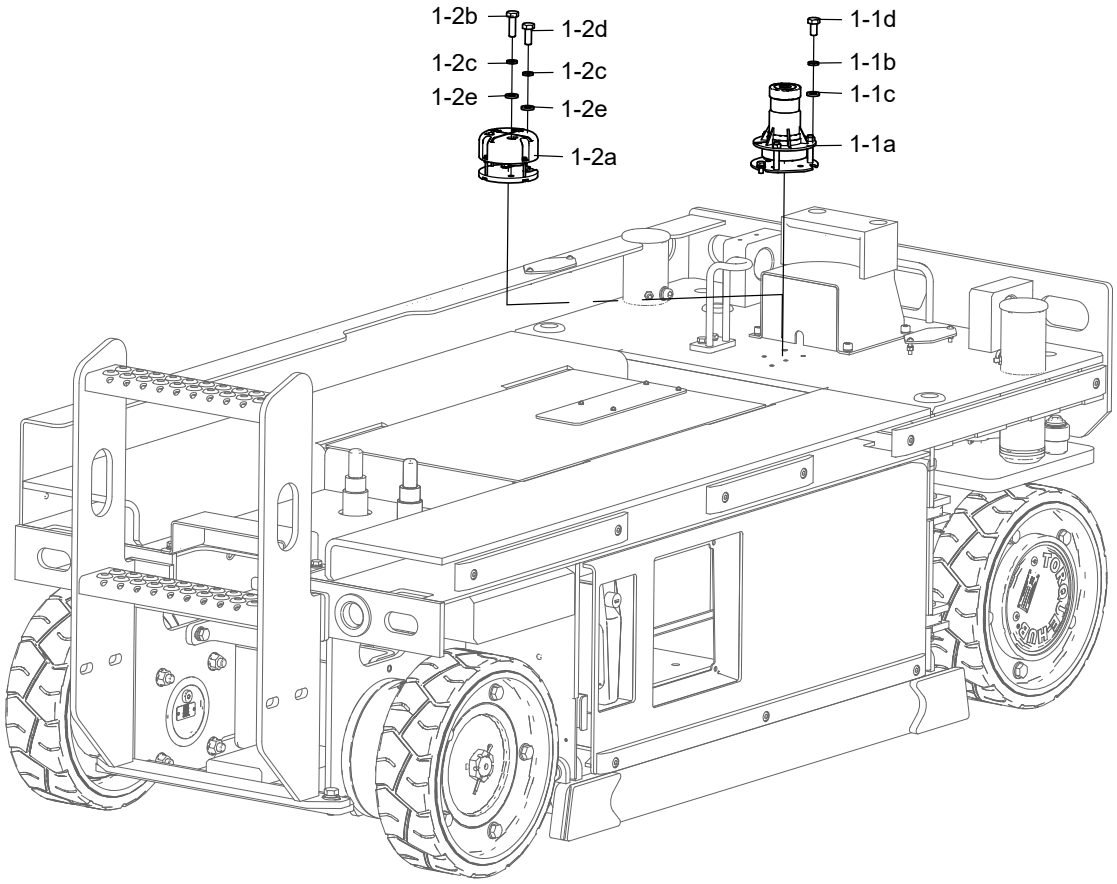

No.	Part No.	Qty.	Description
1-1a	203150000036	1	Level sensor(1000135)
1-1b	215040000004	3	Washer 6-A2-70 GB/T 93
1-1c	215040000033	3	Washer 6-A2 GB/T 97.1
1-1d	215010000049	3	Bolt M6×12-A2-70 GB/T 5783
1-2a	203060000076	1	Level sensor(1000154)
1-2b	215010000051	1	Bolt M6×20-A2-70 GB/T 5783
1-2c	215040000004	3	Washer 6-A2-70 GB/T 93
1-2d	215010000050	2	Bolt M6×16-A2-70 GB/T 5783
1-2e	215040000033	3	Washer 6-A2 GB/T 97.1

https://truckmanualshub.com/


6.3 ANGLE SENSOR INSTALLATION

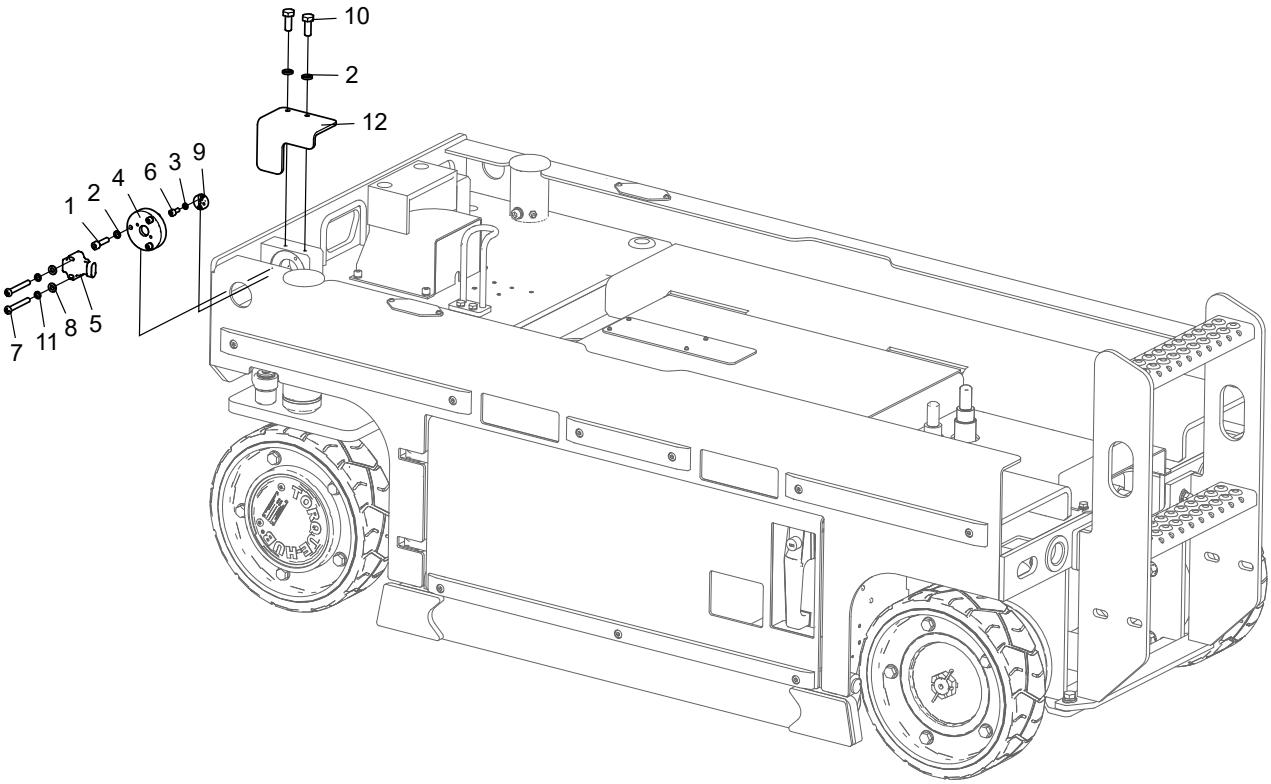

No.	Part No.	Qty.	Description
1	215020000013	3	Screw M6×25-A2-70 GB/T 70.1
2	215040000004	5	Washer 6-A2-70 GB/T 93
3	215040000002	2	Washer 4-A2-70 GB/T 93
4	101032030078	1	Flange
5	203150000046	1	Angle sensor
6	215020000001	2	Screw M4×10-A2-70 GB/T 70.1
7	215020000215	2	Screw M5×40-A2-70 GB/T 818
8	215040000032	2	Washer 5-A2 GB/T 97.1
9	101016010062	1	Flange
10	215010000050	2	Bolt M6×16-A2-70 GB/T 5783
11	215040000003	2	Washer 5-A2-70 GB/T 93
12	101032030087	1	Plate

https://truckmanualshub.com/

6.4 LEFT DOOR ELECTRICAL COMPONENTS INSTALLATION

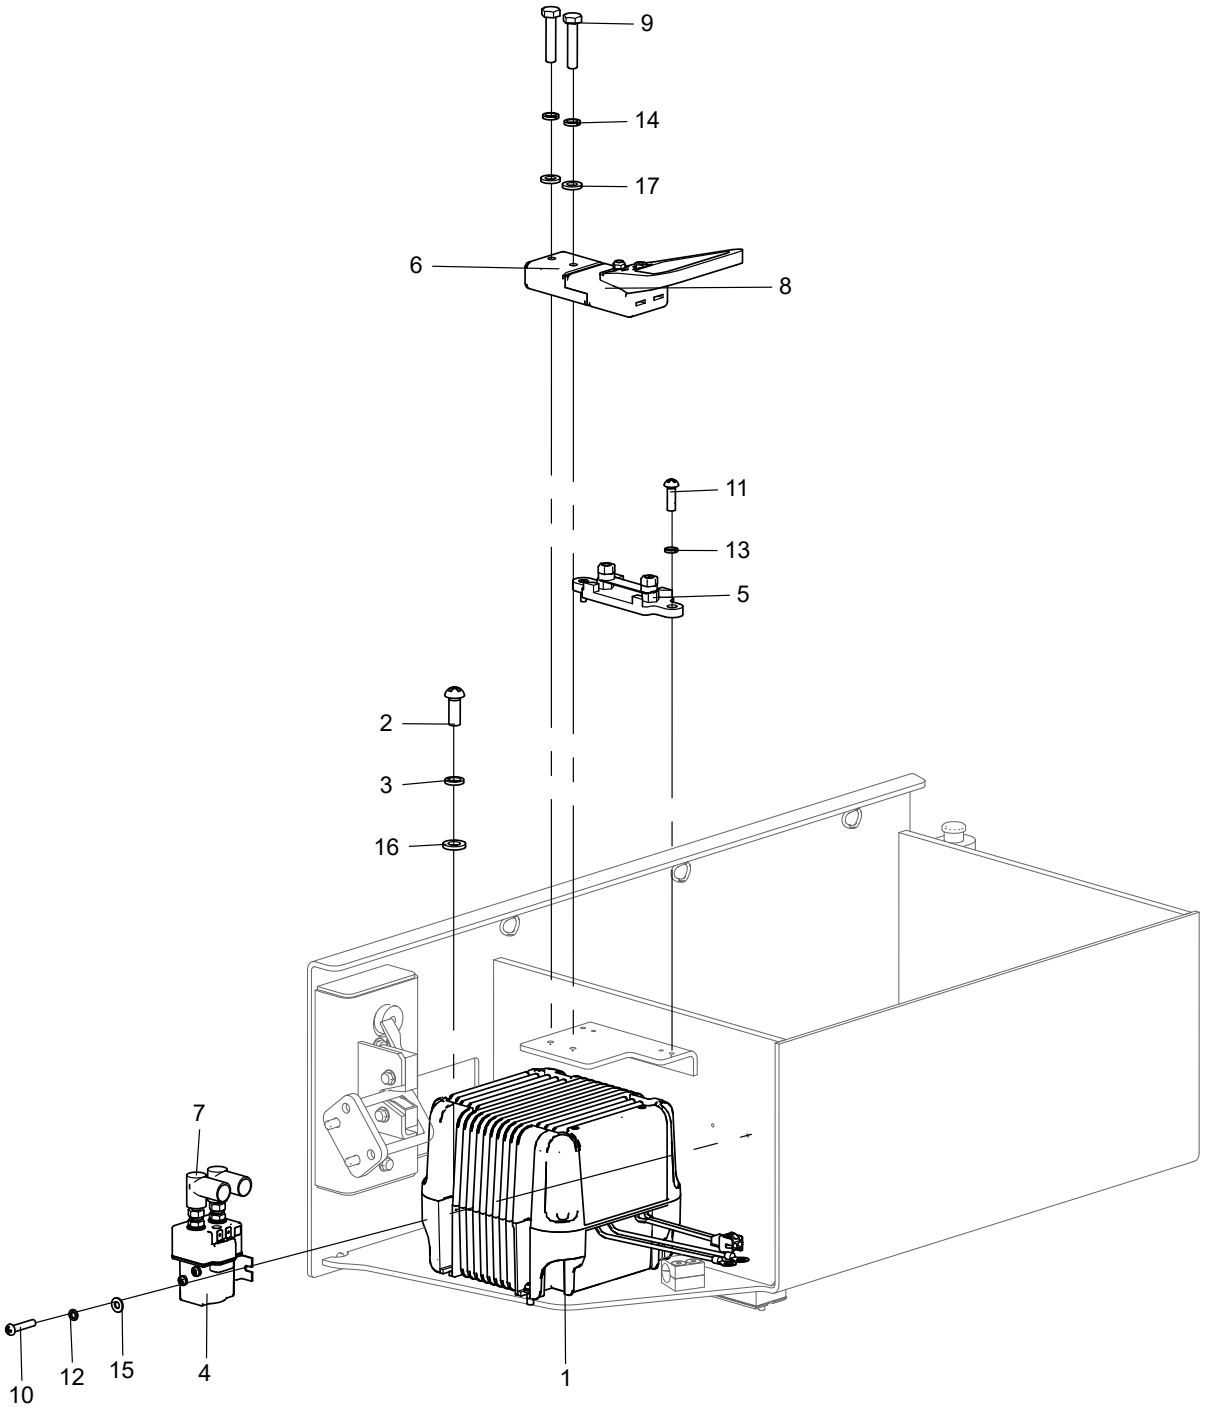


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101058063005		Options, Charger
1-1	203100000067	1	Charger(Lithium battery)
1-2	203100003052	1	Charger(Lithium battery,30A)
1-3	203100000025	1	Charger(Lead acid battery)
2	215020000116	4	Screw M6×16-A2-70 GB/T 818
3	215040000004	4	Washer 6-A2-70 GB/T 93
4	203040000023	1	Contactor
5	203070000043	1	Fuseholder, with 275A fuse
6	203080000002	1	Emergency stop plug
7	203080000004	2	Jacket, PVC
8	203080000647	1	Handle assembly, Emergency stop plug
9	215010000053	2	Bolt M6×30-A2-70 GB/T 5783
10	215020000107	2	Screw M4×20-A2-70 GB/T 818
11	215020000111	2	Screw M5×16-A2-70 GB/T 818
12	215040000002	2	Washer 4-A2-70 GB/T 93
13	215040000003	2	Washer 5-A2-70 GB/T 93
14	215040000004	2	Washer 6-A2-70 GB/T 93
15	215040000031	2	Washer 4-A2 GB/T 97.1
16	215040000033	4	Washer 6-A2 GB/T 97.1
17	215040000033	2	Washer 6-A2 GB/T 97.1

https://truckmanualshub.com/

6.5 RIGHT DOOR ELECTRICAL COMPONENTS INSTALLATION

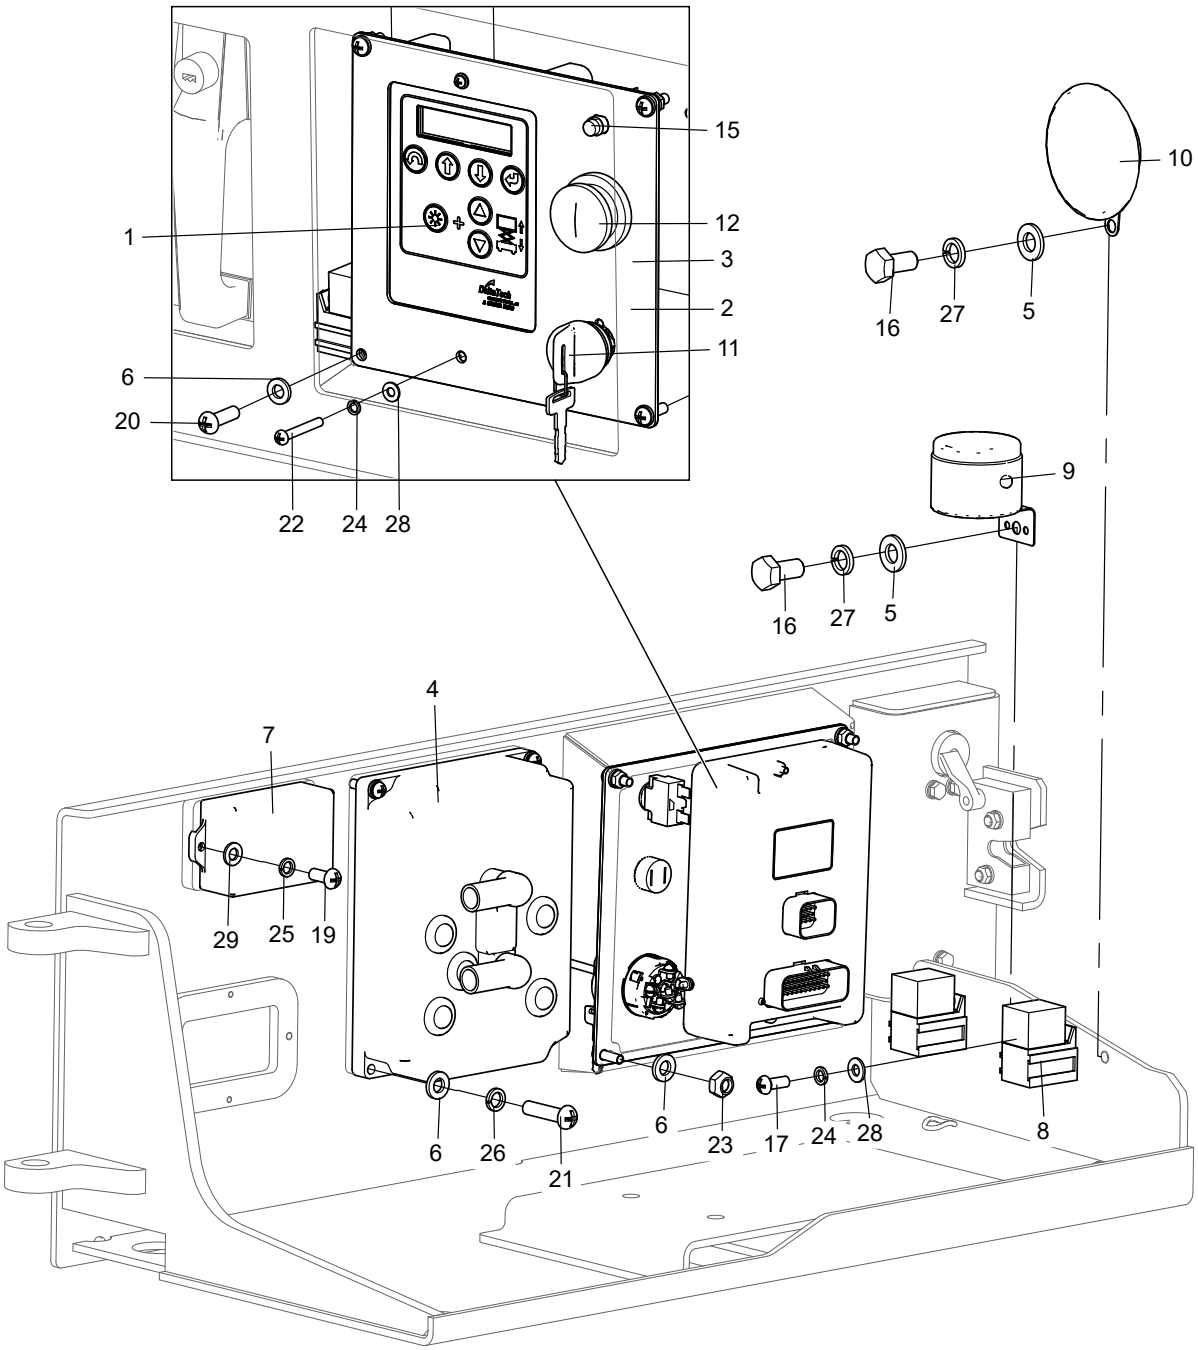


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	101041063016		Options, Main controller
1-1	203020000064	1	Main controller(DTC)
1-2	203020003029	1	Main controller(SINOBOOM)
2	101053063039	1	Screen label
3	101058033013	1	Control panel
4	203020000060	1	Motor controller
5	215040000034	2	Washer 8-200HV-ZnD GB/T 97.1
6	215040000033	12	Washer 6-A2 GB/T 97.1
7	203030000014	1	Protector, drive circuit
8	203040000001	2	Relay
9	203050000002	1	Alarm
10	203050000012	1	Horn
11	203060000066	1	Key switch
12	203060000142	1	Emergency stop switch
13	203080000571	5	Connector, PVC
14	203080000572	2	Connector, PVC
15	203160003001	1	Fuse
16	215010000056	2	Bolt M8×16-8.8-ZnD GB/T 5783
17	215020000104	2	Screw M4×10-A2-70 GB/T 818
18	215020000105	3	Screw M4×12-A2-70 GB/T 818
19	215020000110	2	Screw M5×12-A2-70 GB/T 818
20	215020000117	4	Screw M6×20-A2-70 GB/T 818
21	215020000118	4	Screw M6×25-A2-70 GB/T 818
22	215020000211	2	Screw M4×30-A2-70 GB/T 818
23	215030000025	4	Nut M6-8-A2-70 GB/T 889.1
24	215040000002	4	Washer 4-A2-70 GB/T 93
25	215040000003	2	Washer 5-A2-70 GB/T 93
26	215040000004	4	Washer 6-A2-70 GB/T 93
27	215040000005	2	Washer 8-ZnD GB/T 93
28	215040000031	4	Washer 4-A2 GB/T 97.1
29	215040000032	2	Washer 5-A2 GB/T 97.1

https://truckmanualshub.com/

6.6 BATTERIES INSTALLATION (LEAD-ACID BATTERY)

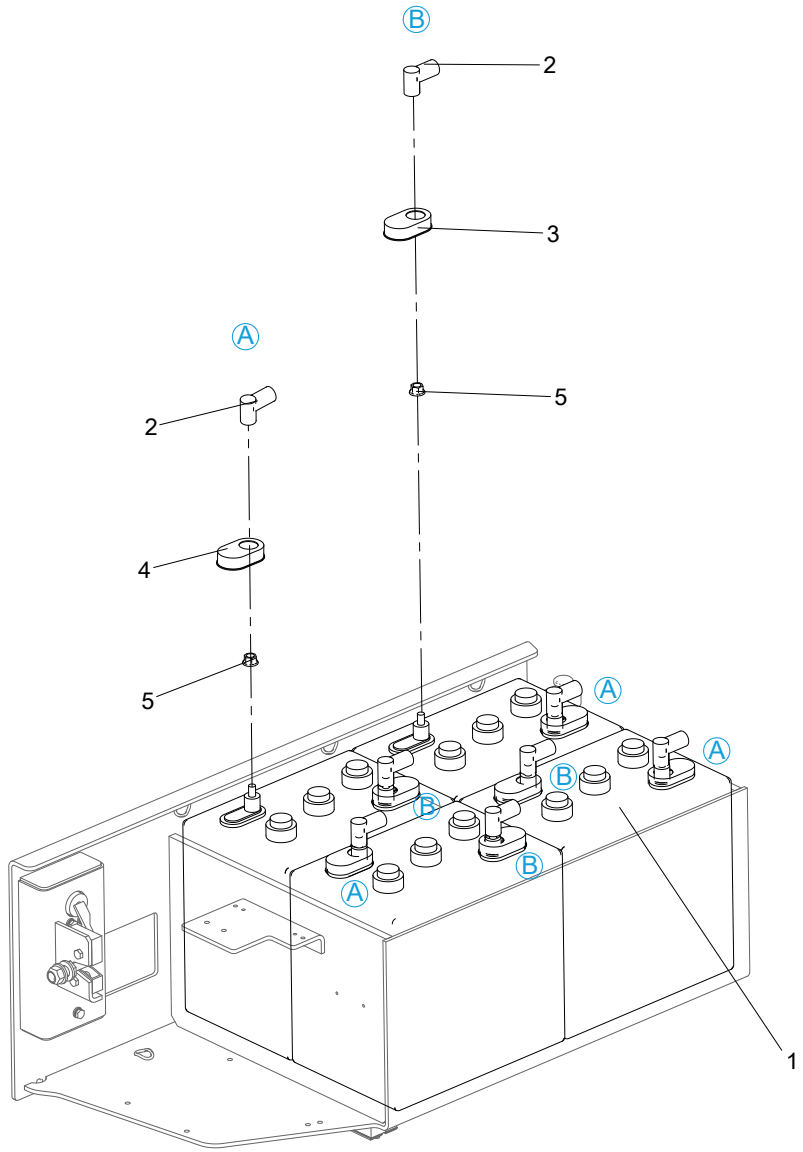


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	203100000002	4	Battery, Lead acid
2	203080000004	8	Jacket, PVC
3	203100000044	4	Battery cap (Black)
4	203100000041	4	Battery cap
5	215080000007	8	Nut 5/16"-18UNC

https://truckmanualshub.com/

6.7 BATTERIES INSTALLATION(LEAD ACID BATTERY, MAINTENANCE-FREE)

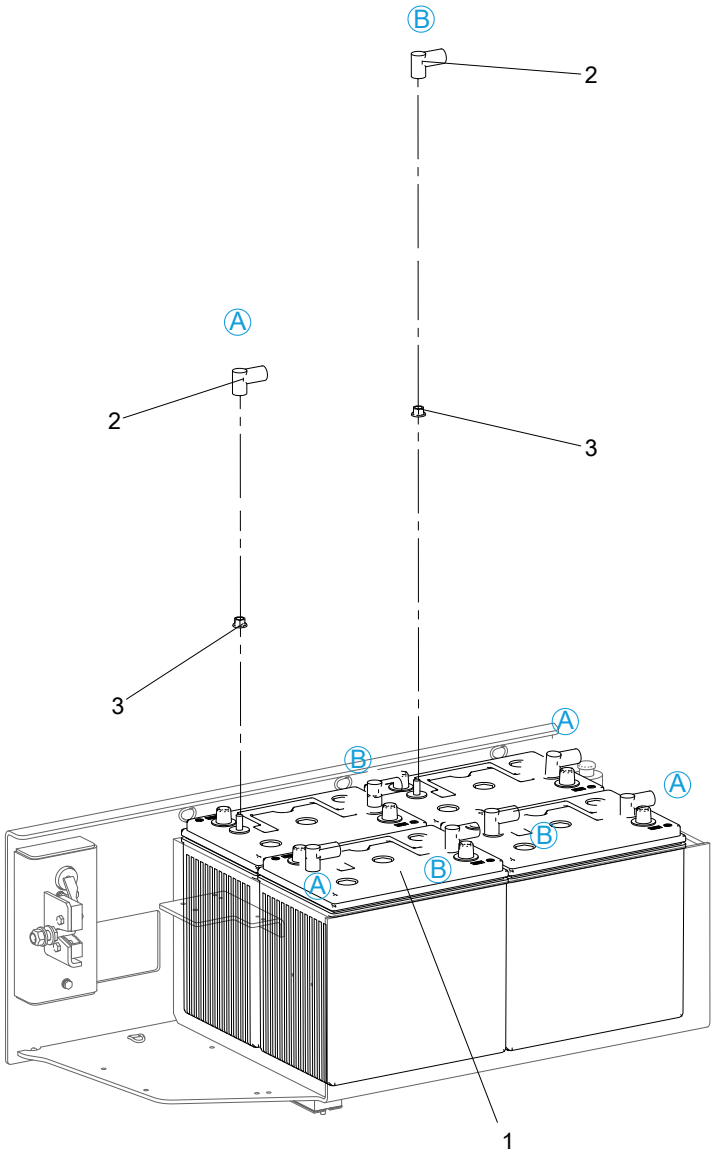


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	203100000017	4	Battery, Maintenance free
2	203080000004	8	Jacket, PVC
3	215080000007	8	Nut 5/16"-18UNC

https://truckmanualshub.com/


6.8 BATTERIES INSTALLATION(LITHIUM BATTERY)

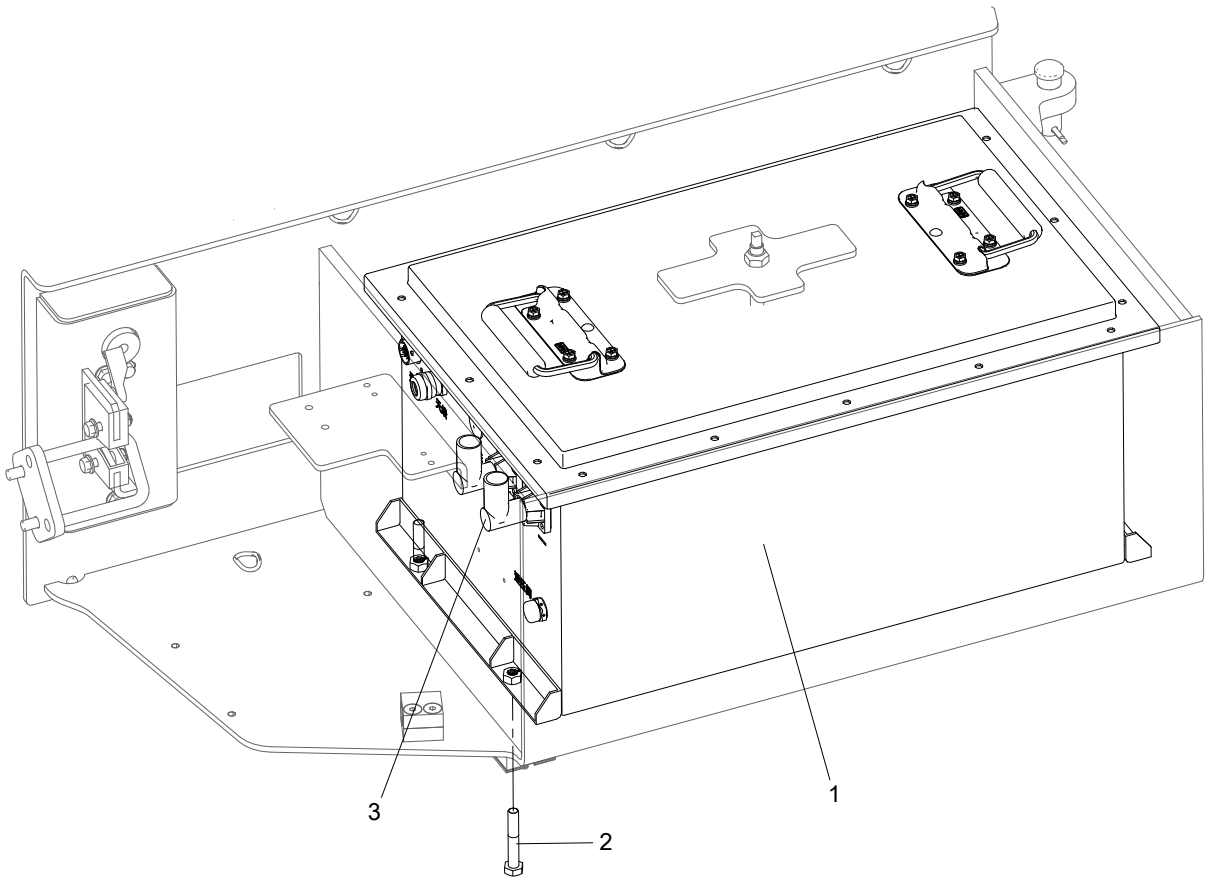

No.	Part No.	Qty.	Description
1	203100003054	1	Lithium battery
2	215010000163	4	Bolt M8×50-8.8-ZnD GB/T 5782
3	203080000004	2	Jacket, PVC

https://truckmanualshub.com/

6.9 SCISSOR ARM ELECTRICAL COMPONENTS INSTALLATION

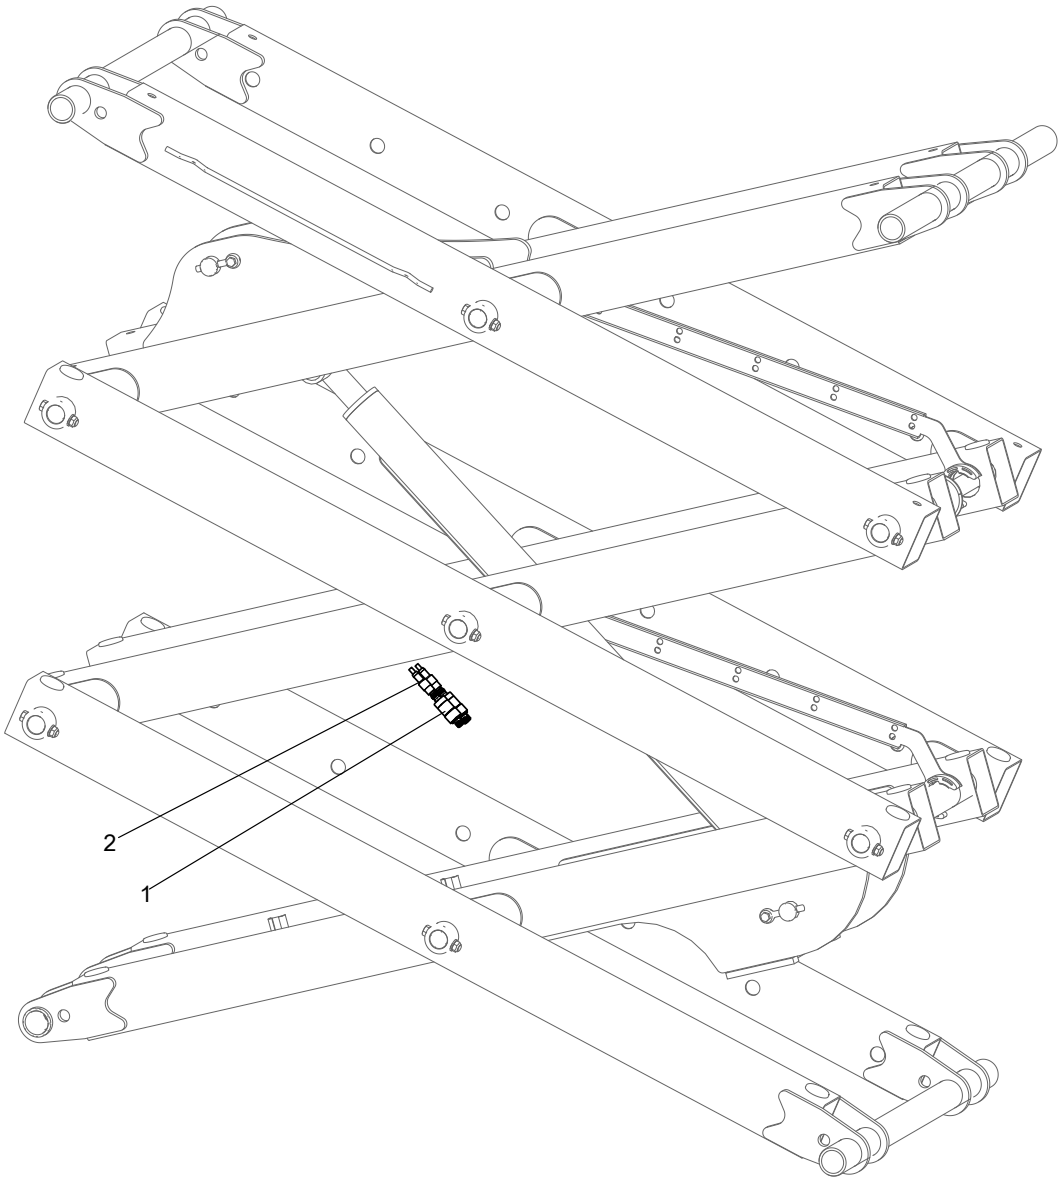


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	203150000055	2	Pressure sensor
2	203080003094	2	Plug, with cable

https://truckmanualshub.com/

6.10 PLATFORM CONTROL BOX INSTALLATION

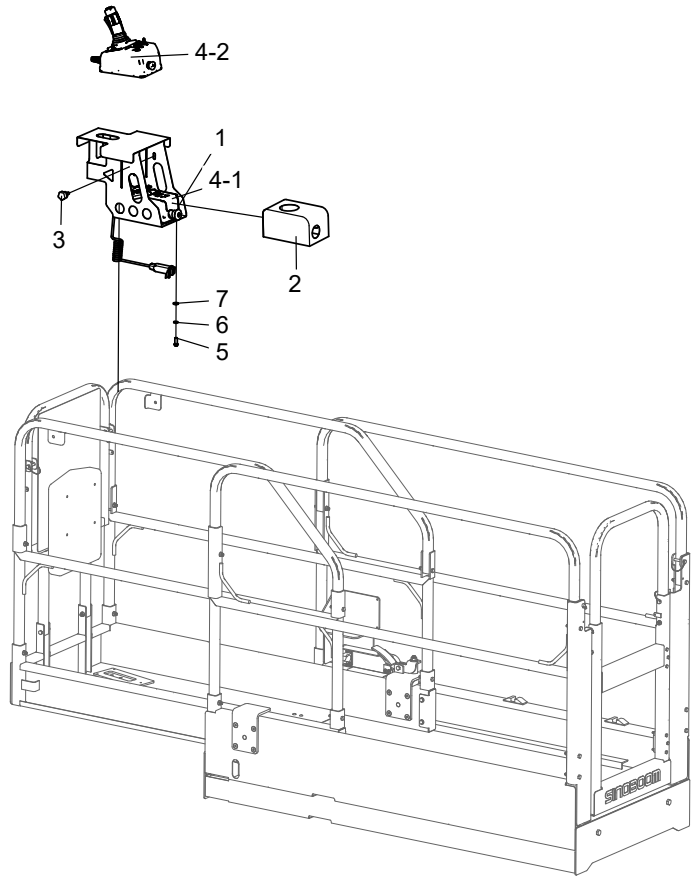


No.	Part No.	Qty.	Description
1	101014040046	1	Bracket
2	101015060015	1	Cover, Platform control box
3	209030003004	1	Bolt M8
4-1	203020000065	1	Platform control box(DTC)
4-2	203020003028	1	Platform control box assembly(SINOBOOM)
5	215020000116	4	Screw M6×16-A2-70 GB/T 818
6	215040000004	4	Washer 6-A2-70 GB/T 93
7	215040000033	4	Washer 6-A2 GB/T 97.1

 © Jun 2021

https://truckmanualshub.com/


6.11 PLATFORM CONTROL BOX 203020000065

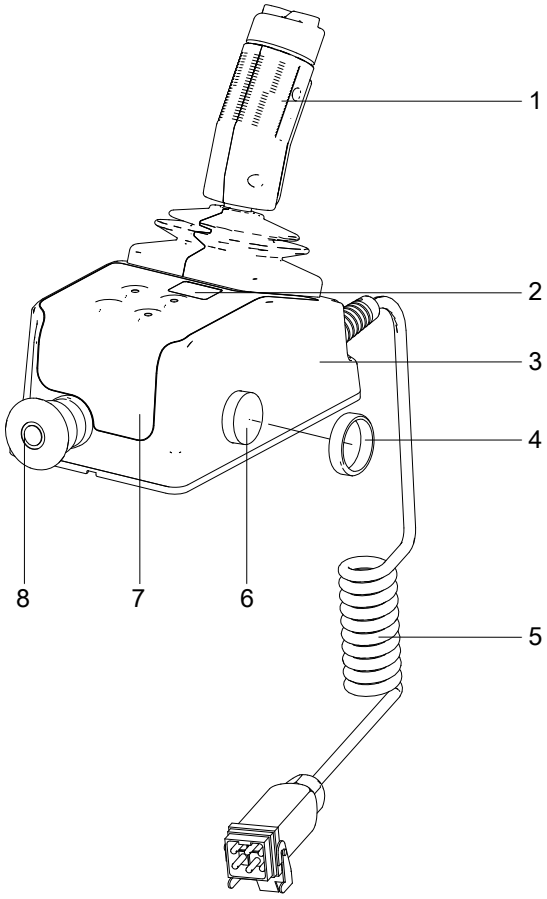

No.	Part No.	Qty.	Description
1	203030003022	1	
2	203060003060	1	Cover, PCU window
3	203060003059	1	Enclosure PCU
4	203060003056	1	Rubber gasket of alarm
5	203080003458	1	Coil code assy
6	203050003036	1	Alarm floyd bell
7	203060003063	1	Overlay
8	203060003054	1	Emergency stop switch
9	203060003055	1	Contact block(Not Shown)
10	203030003021	1	PCU upgrade(Not Shown)

https://truckmanualshub.com/


6.12 PLATFORM CONTROL BOX 203020003028

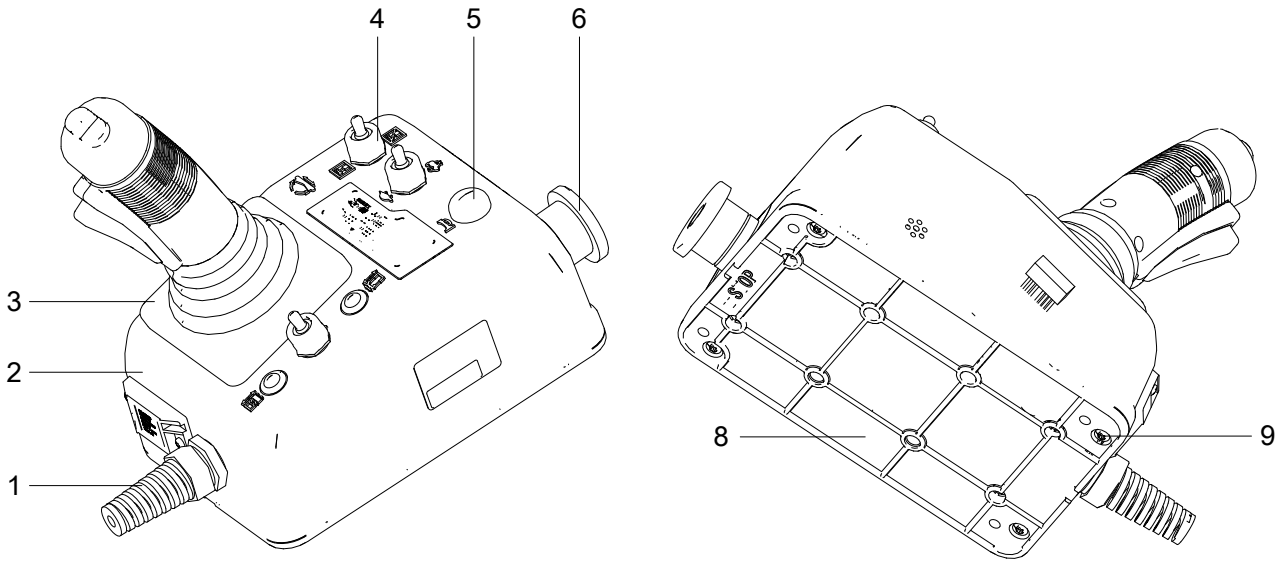

No.	Part No.	Qty.	Description
1	203080003429	1	Cable assembly (1.3m), 5-core, spiral
2	203060003050	1	Housing, upper
3	203090003003	1	Handle
4	203080003430	1	Socket assembly (0.2m), 6P
5	203060003051	2	Harness assembly (0.2mm)
6	203060003049	1	Emergency stop switch
7	203030003020	1	Motherboard assembly(Not Shown)
8	203060003052	1	Housing, lower
9	203060003053	4	Screw M4×8 GBT2672-2017 A2-70

https://truckmanualshub.com/

6.13 CHASSIS HARNESS

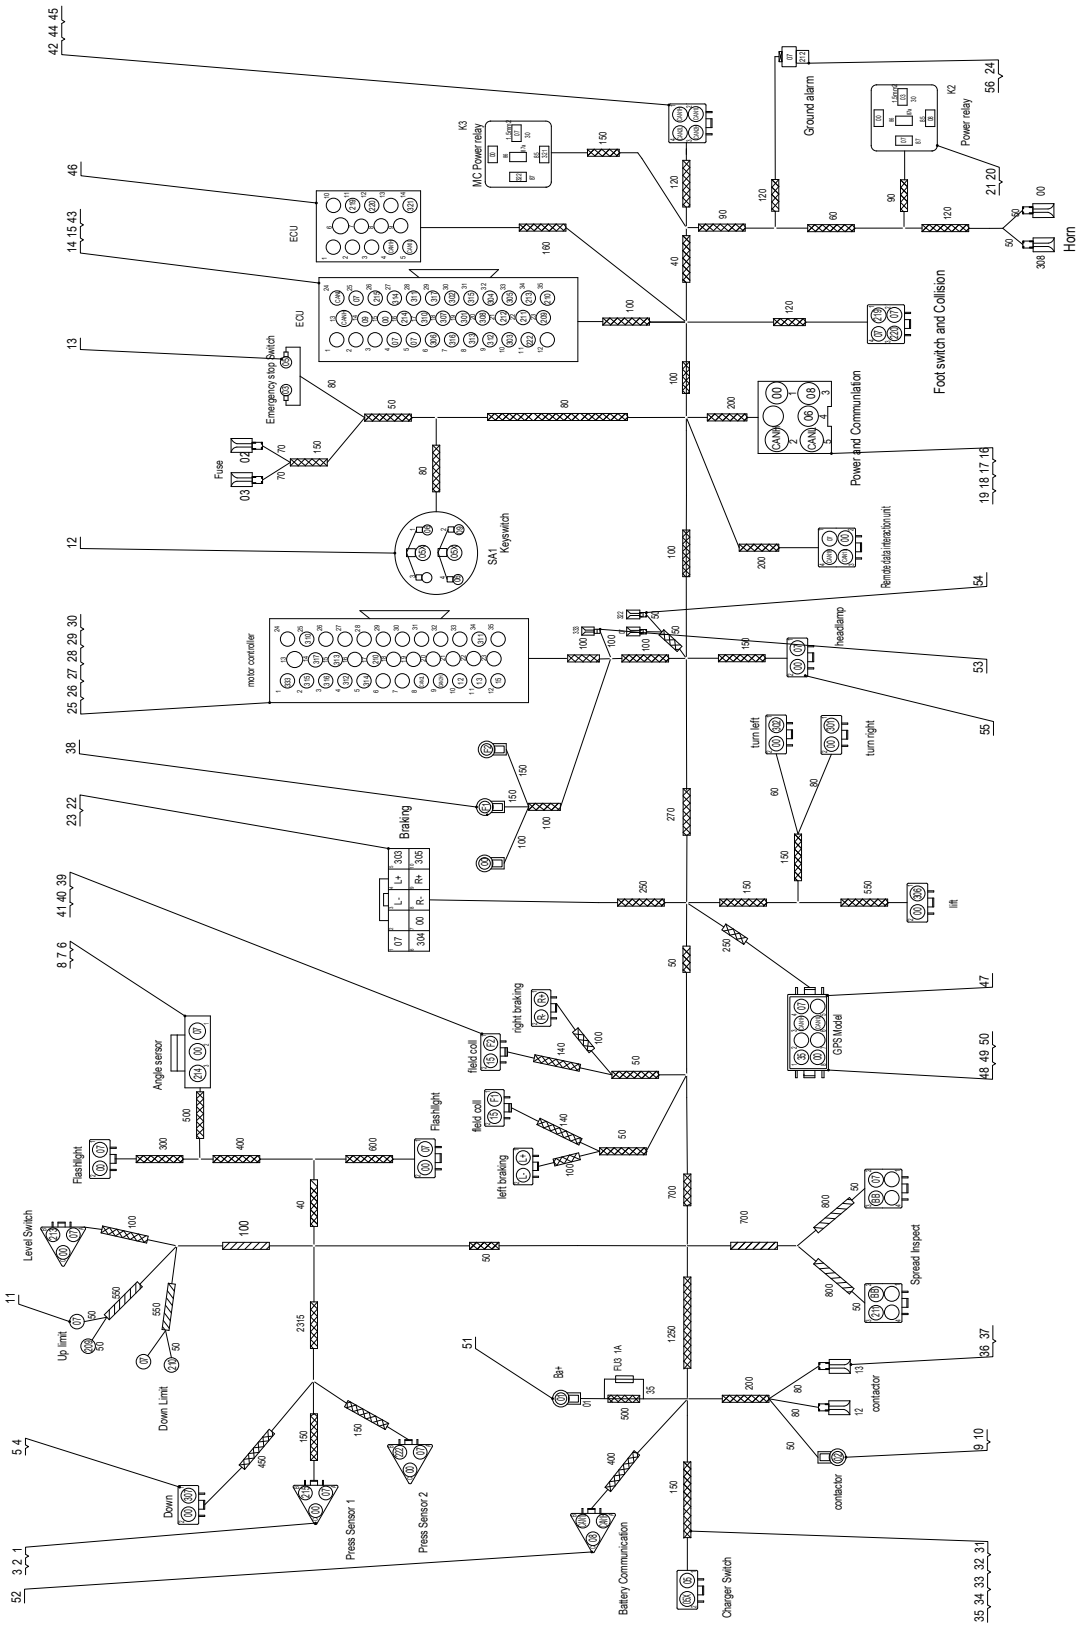

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
	101055060008	1	Chassis Harness
1	203080000012	4	Connector
2	203080000032	4	Lock
3	203080000041	50	Terminal, female
4	203080000024	10	Sheath
5	203080000016	10	Lock
6	203080000293	1	Sheath
7	203080000496	3	Seal, single-line
8	203080000298	3	Terminal
9	203080000018	2	Terminal
10	203080000030	2	Heat shrink
11	203080000514	4	Terminal
12	203080000134	5	Terminal, blade-hole type
13	203080000036	2	Terminal
14	203080000430	2	AMP Connector (35 Position)
15	203080000433	51	Terminal
16	203080000348	1	Connector
17	203080000355	5	Socket
18	203080000354	1	Cover
19	203080000350	1	Connector
20	203040000038	2	Relay mount
21	203080000336	8	Terminal
22	203080000259	1	MOLEX Connector
23	203080000584	9	Terminal
24	203080000335	1	Connector
25	203080000029	1	Cable
26	203080000047	3	Cable
27	203080000248	68	Cable
28	203080000308	21	Cable
29	203080000196	1	Cable
30	203080000528	2	Cable
31	203080000135	1	Corrugated pipe (Black)
32	203080000037	2	Pipe, corrugated
33	203080000006	6	Pipe, corrugated
34	203080000031	11	Corrugated pipe
35	203080000188	1	Corrugated pipe
36	203080000130	6	Terminal
37	203080000129	6	Jacket, flexible

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
38	203080000133	3	Terminal, blade-hole type
39	203080000678	2	Connector
40	203080000663	2	Locking piece
41	203080000664	4	Terminal
42	203080000492	3	Cap, Female (4 position)
43	203080000295	33	Plastic plug
44	203080000020	5	Lock
45	203080000044	5	Jacket
46	203080000431	1	AMP Connector (14 Position)
47	203080000068	7	Blind plug
48	203080000100	1	Connector
49	203080000112	1	Lock
50	203080003219	1	Cover, waterproof, 8-pin, female
51	203070003007	1	Fuse box (for harness)
52	203080000473	1	Cap, 3 position, female
53	203080000651	1	Terminal
54	203080000652	2	Terminal
55	203080000474	1	Cover, waterproof, 2-pin, female
56	203080000200	2	Terminal

https://truckmanualshub.com/

6.14 POWER CABLE KIT(LEAD ACID BATTERY)

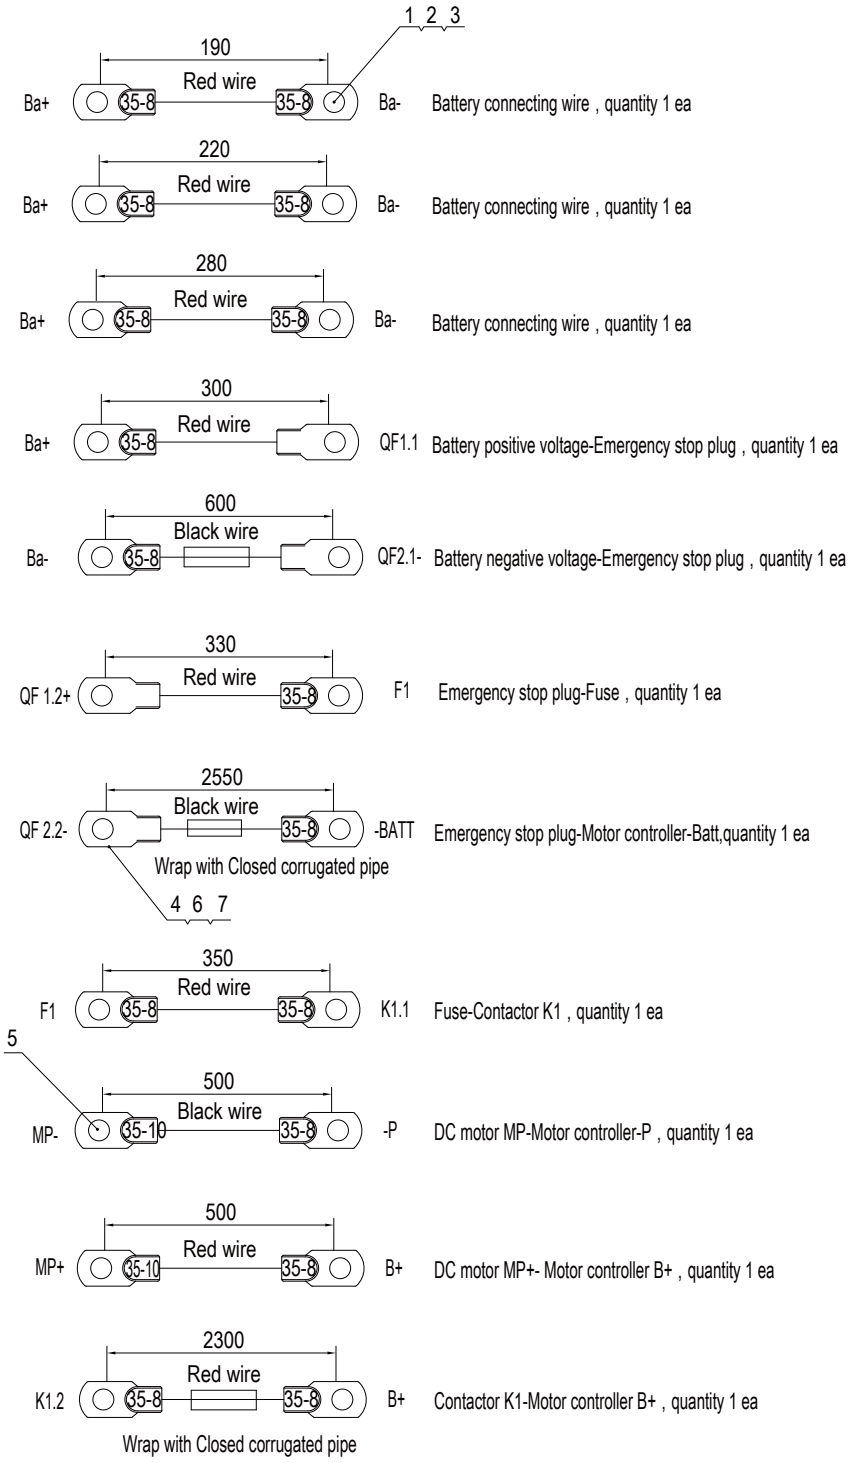


 © Jun 2021

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	203080000677	18	Terminal, copper
2	203080000257	4	Cable (red)
3	203080000035	1	Pipe, heat-shrink
4	203080000009	4	Cable (black)
5	203080000680	2	Terminal, copper
6	203080000006	6	Pipe, corrugated
7	203060000067	4	Terminal, Emergency stop plug

https://truckmanualshub.com/

6.15 ELECTRICAL POWER WIRING LAYOUT(LITHIUM BATTERY)

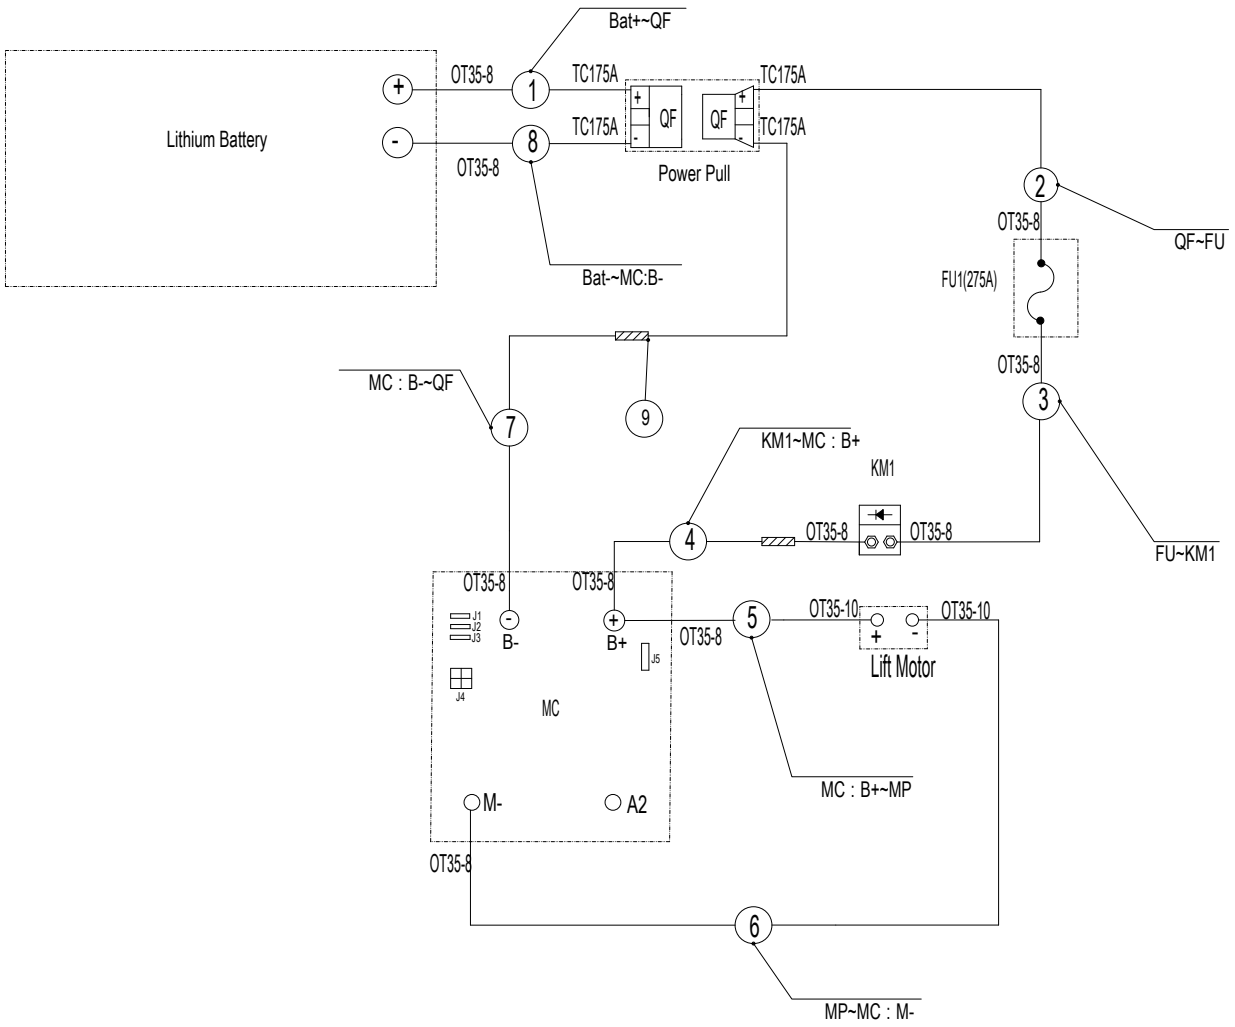


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	203230000598	1	Power harness
2	203230000824	1	Power Cable Kit
3	203230000859	1	Power Cable Kit
4	203230000831	1	Power Cable Kit
5	203230000884	1	Power Cable Kit
6	203230000885	1	Power Cable Kit
7	203230000886	1	Power Cable Kit
8	203230000888	1	Power Cable Kit
9	203080000006	1	Pipe, corrugated

https://truckmanualshub.com/


6.16 GROUND TO PLATFORM HARNESS (GTJZ0408SE&0408ME)

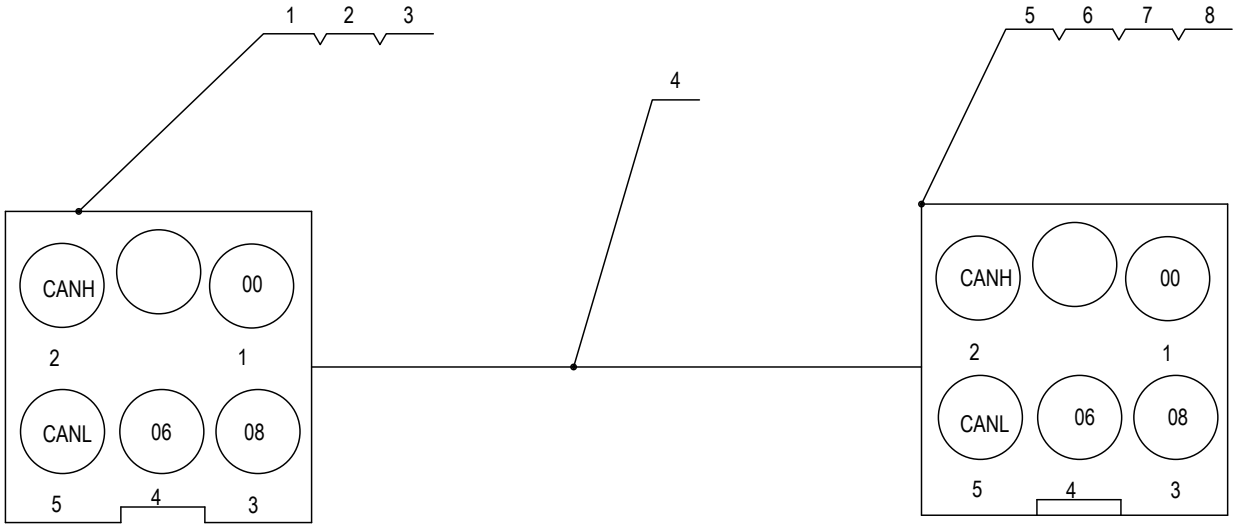

No.	Part No.	Qty.	Description
1	203080000349	1	Connector
2	203080000351	5	Pin
3	203080000353	1	Cover
4	203080003050	7	Cable, 5-core
5	203080000348	1	Connector
6	203080000355	5	Socket
7	203080000354	1	Cover
8	203080000350	2	Connector

https://truckmanualshub.com/

6.17 GROUND TO PLATFORM HARNESS (GTJZ0608SE&0608ME)

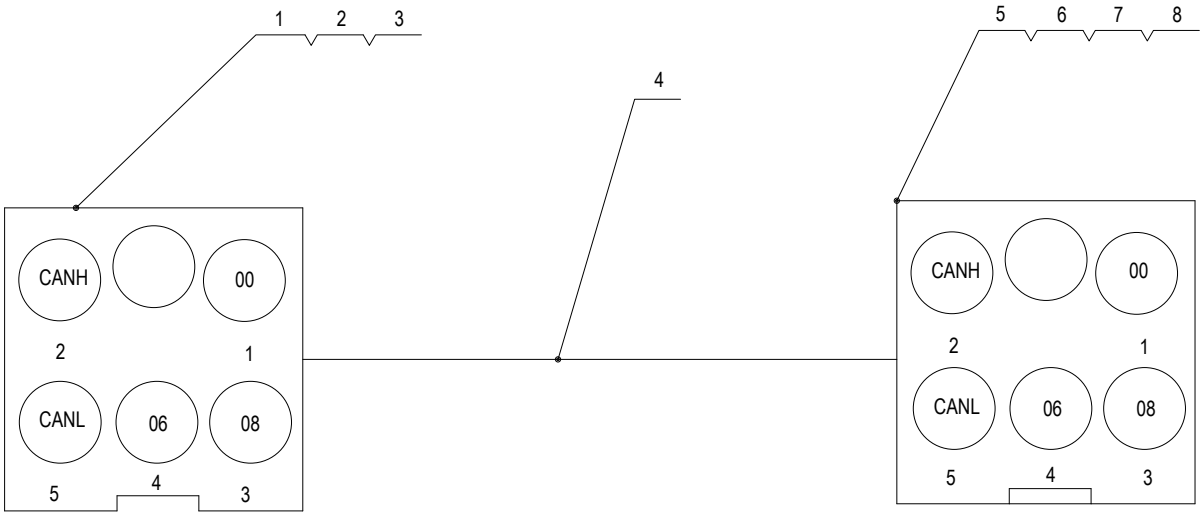


No.	Part No.	Qty.	Description
1	203080000349	1	Connector
2	203080000351	5	Pin
3	203080000353	1	Cover
4	203080003050	9	Cable, 5-core
5	203080000348	1	Connector
6	203080000355	5	Socket
7	203080000354	1	Cover
8	203080000350	2	Connector

https://truckmanualshub.com/


https://truckmanualshub.com/

6.18 ELECTRICAL SCHEMATIC DIAGRAM

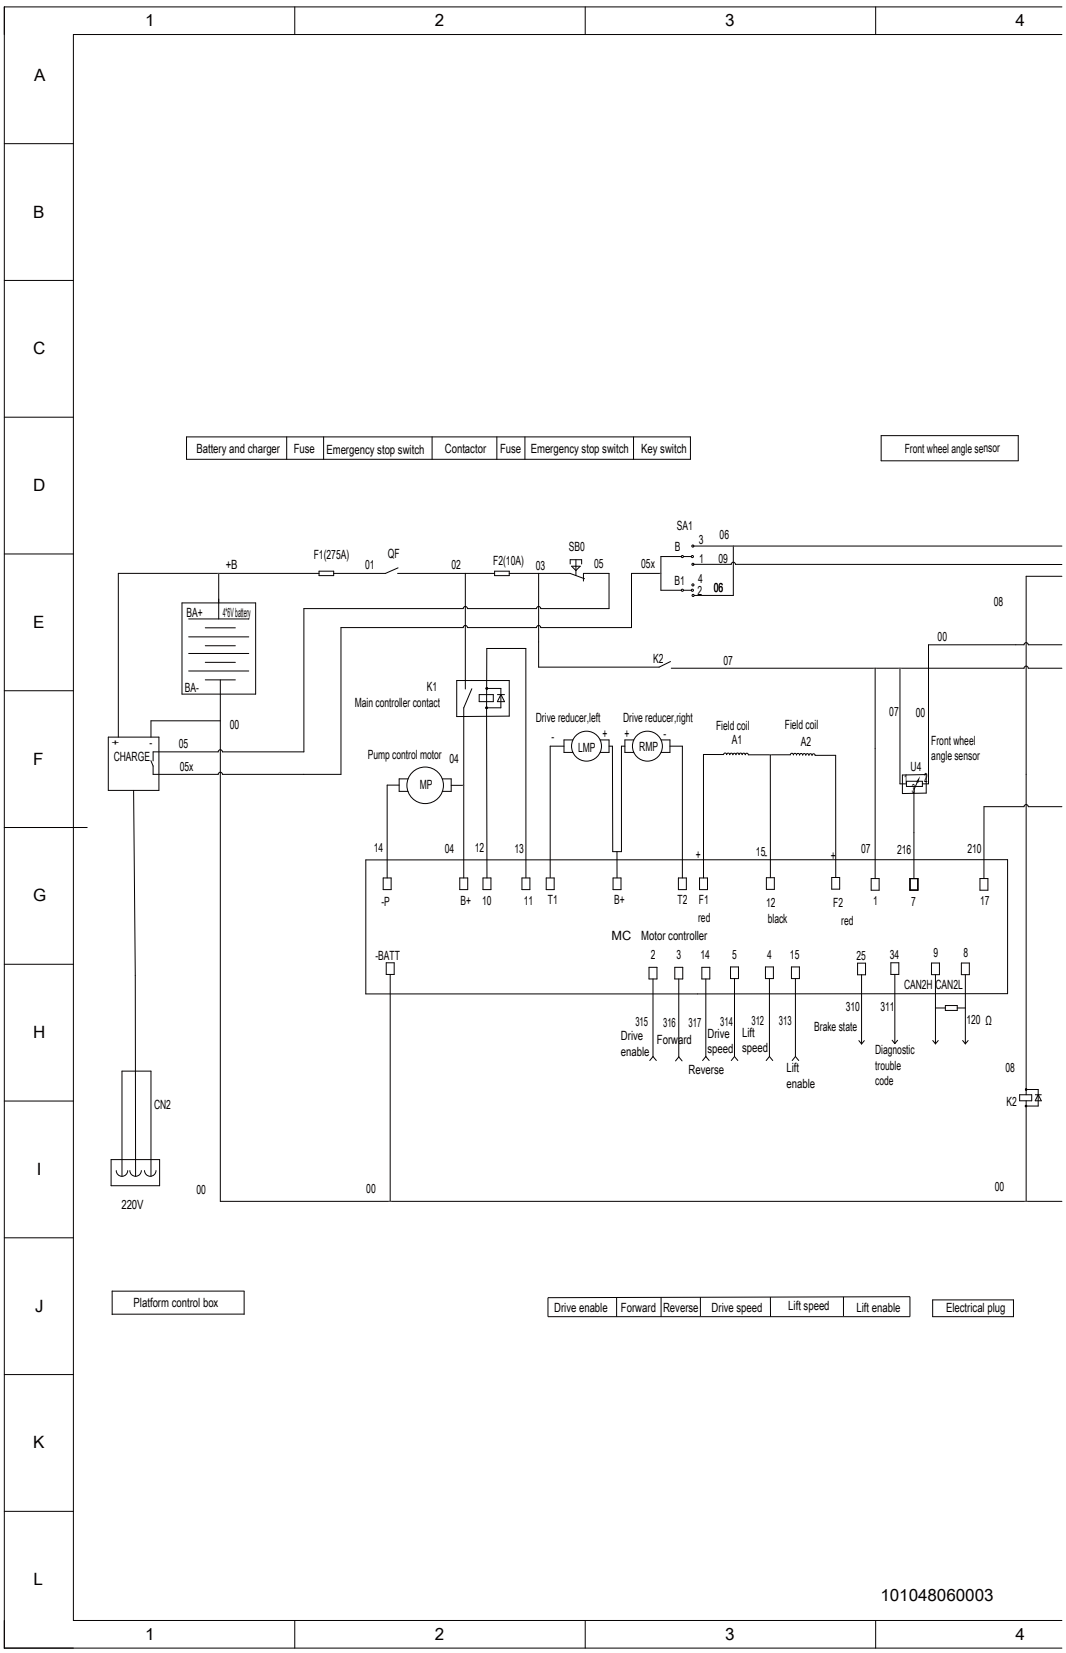

https://truckmanualshub.com/

https://truckmanualshub.com/

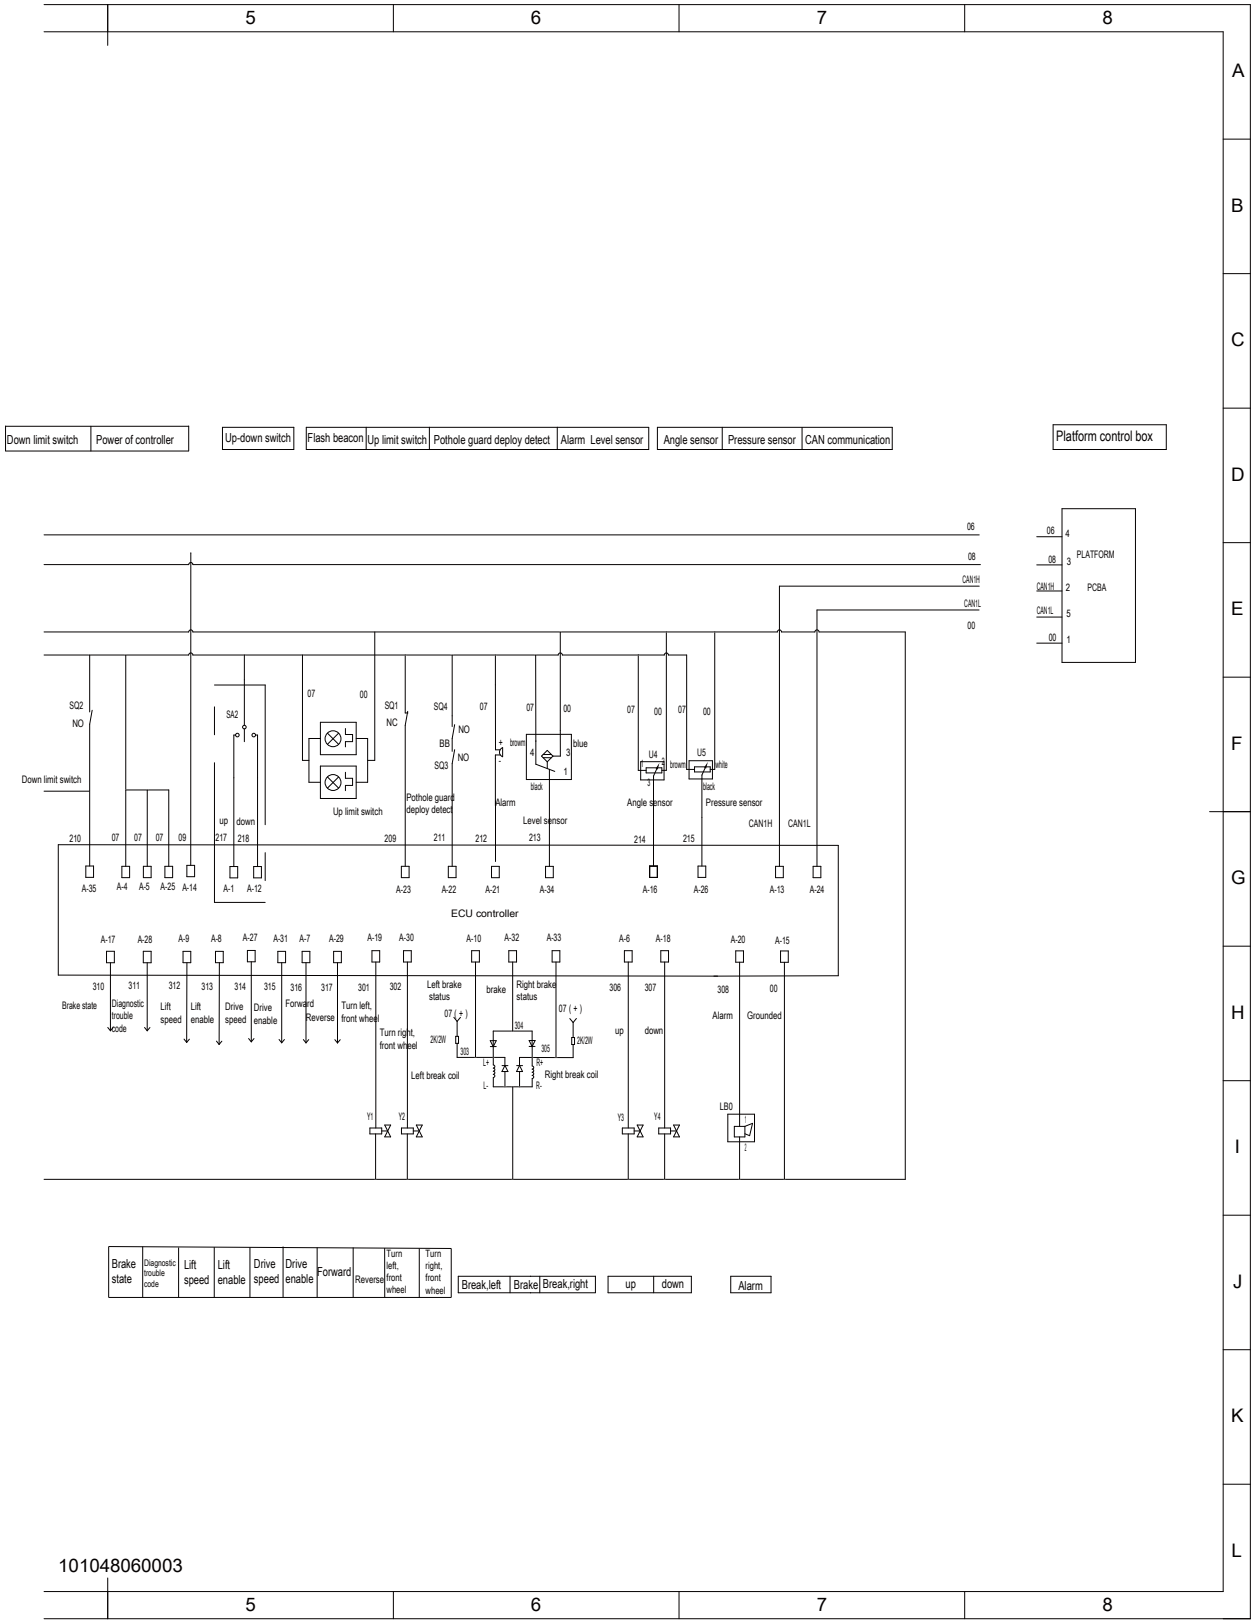


https://truckmanualshub.com/

7 DECALS

https://truckmanualshub.com/

7.1 DECALS(GB)

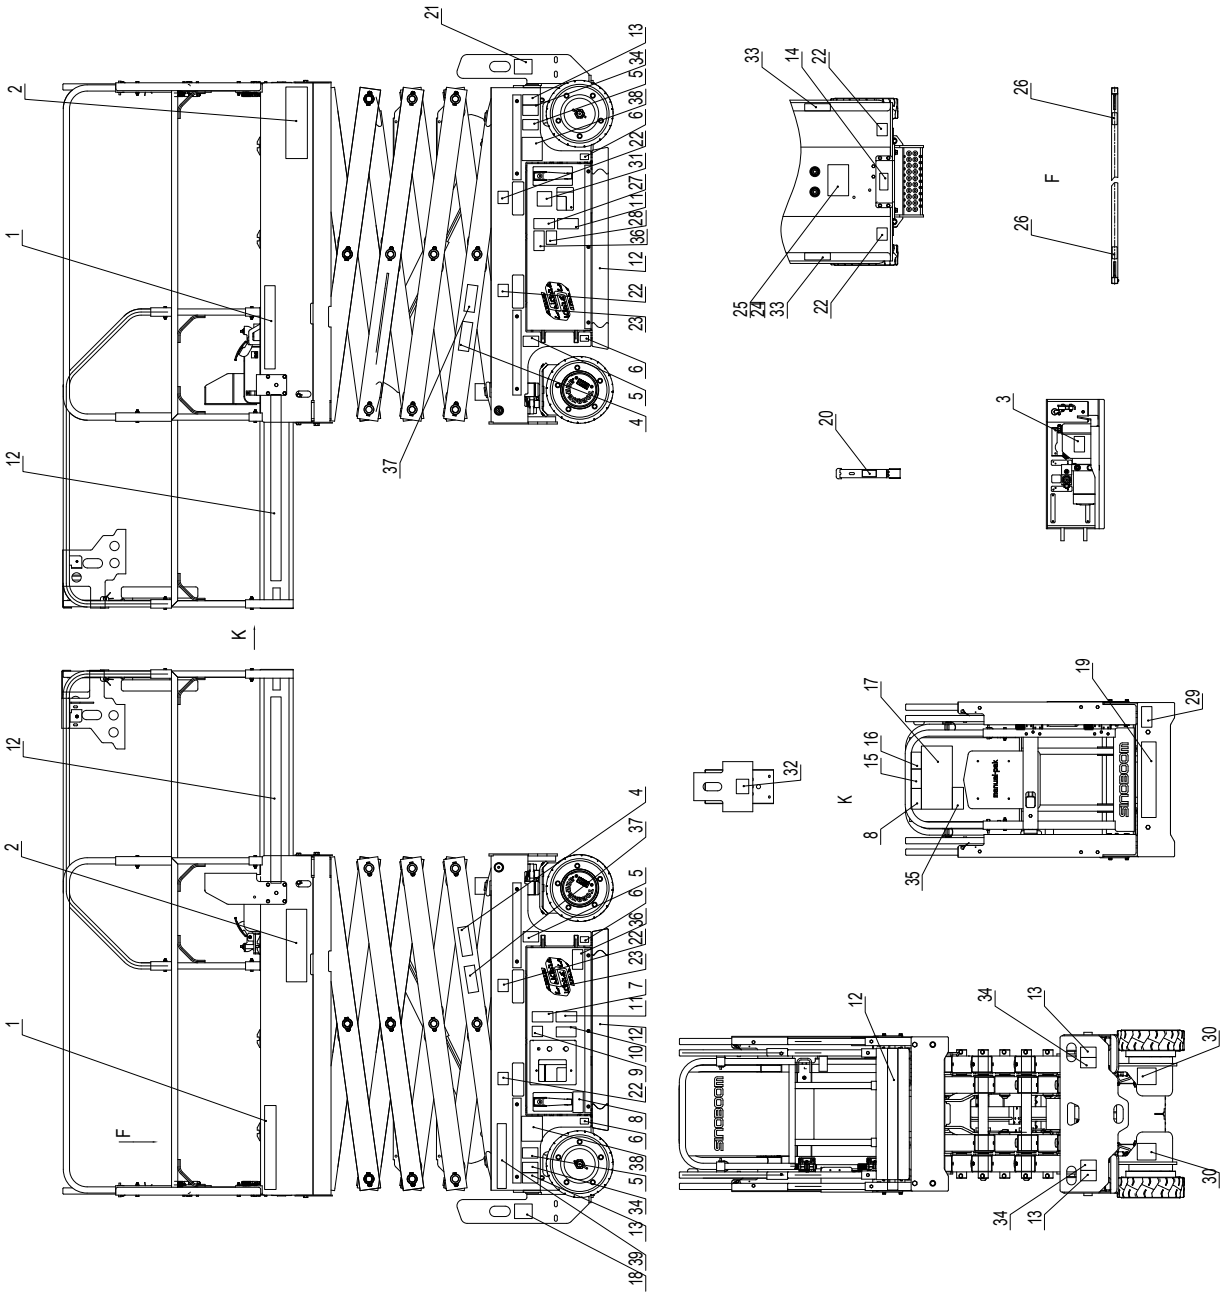

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
	101055000003	1	GTJZ0408ME Decals-GB
	101055000013	1	GTJZ0408SE Decals-GB
	101056000003	1	GTJZ0608ME Decals-GB
	101058000003	1	GTJZ0608SE Decals-GB
1	101040103021	2	LOGO-SINOBOOM
2-1	101057103022	2	Decal-0408SE
2-2	101058103020	2	Decal-0608SE
2-3	101055103026	2	Decal-0408ME
2-4	101056103020	2	Decal-0608ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101058103018	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101012100005	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101040100005	1	Decal-Read manuals
16	101040100009	1	Decal-Tipping hazard
17-1	101055000018	1	Decal-Use condition, GTJZ0408SE
17-2	101058000008	1	Decal-Use condition, GTJZ0608SE
17-3	101055000008	1	Decal-Use condition, GTJZ0408ME
17-4	101056000008	1	Decal-Use condition, GTJZ0608ME
18	101014100007	1	Decal-Platform electrical plug
19-1	101055000017	1	Decal-Use condition, GTJZ0408SE
19-2	101058000007	1	Decal-Use condition, GTJZ0608SE
19-3	101055000007	1	Decal-Use condition, GTJZ0408ME
19-4	101056000007	1	Decal-Use condition, GTJZ0608ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101040103023	2	Decal-Logo, white
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
25	101017100009	1	Nameplate-GB
26	101016100030	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101041103020	1	Decal-Tipping hazard
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101055103017	1	Decal-Main power switch
32	101055103016	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101012100019	1	Decal-Tipping hazard
36	101012100008	2	Decal-Tipping hazard
37	101012100029	2	Decal-Crush hazard
38	101038100010	2	Decal-Warranty period
39	101014100034	1	Decal-Contact information

https://truckmanualshub.com/

7.2 DECALS(CE-METRIC)

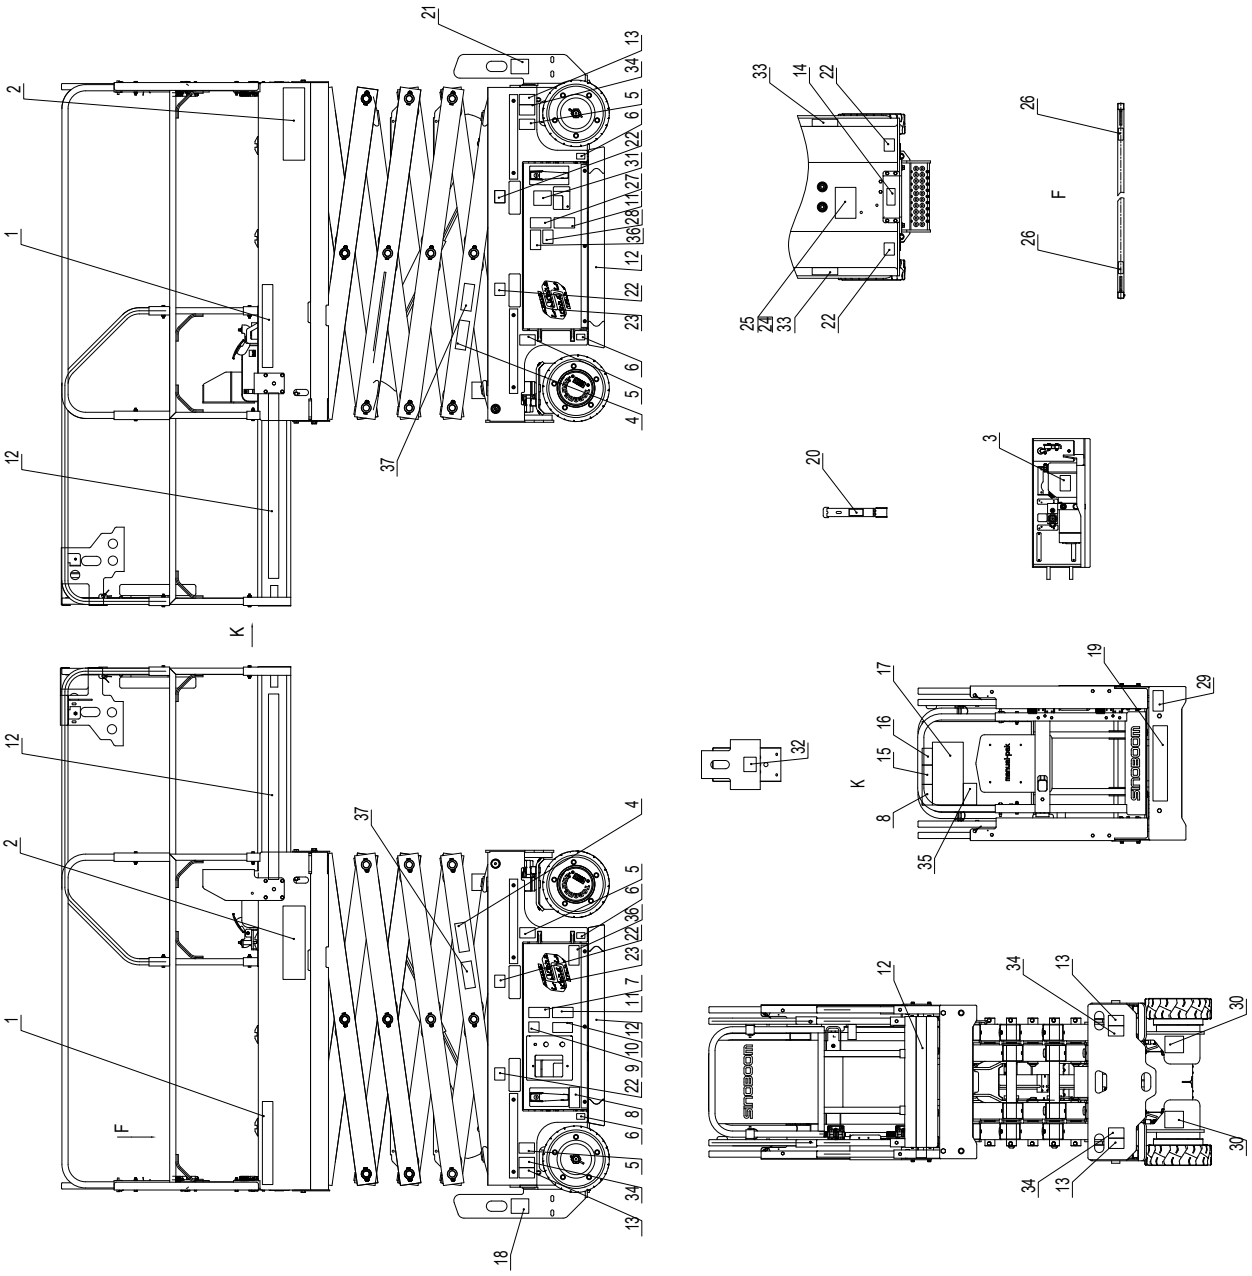

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
	101055063063	1	Decals (CE-Metric)-GTJZ0408ME-2
	101056103019	1	Decals (CE-Metric)-GTJZ0608ME-2
	101057103023	1	Decals (CE-Metric)-GTJZ0408SE-2
	101058103019	1	Decals (CE-Metric)-GTJZ0608SE-2
1	101040103021	2	LOGO-SINOBOOM
2-1	101057103022	2	Decal-0408SE
2-2	101058103020	2	Decal-0608SE
2-3	101055103026	2	Decal-0408ME
2-4	101056103020	2	Decal-0608ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101058103018	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101012100005	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101040100005	1	Decal-Read manuals
16	101040100009	1	Decal-Tipping hazard
17-1	101055000018	1	Decal-Use condition, GTJZ0408SE
17-2	101058000008	1	Decal-Use condition, GTJZ0608SE
17-3	101055000008	1	Decal-Use condition, GTJZ0408ME
17-4	101056000008	1	Decal-Use condition, GTJZ0608ME
18	101014100007	1	Decal-Platform electrical plug
19-1	101055000017	1	Decal-Use condition, GTJZ0408SE
19-2	101058000007	1	Decal-Use condition, GTJZ0608SE
19-3	101055000007	1	Decal-Use condition, GTJZ0408ME
19-4	101056000007	1	Decal-Use condition, GTJZ0608ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101040103023	2	Decal-Logo, white
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
25	101012100037	1	Nameplate-CE
26	101016100030	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101041103020	1	Decal-Tipping hazard
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101055103018	1	Decal-Main power switch
32	101055103015	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101012100019	1	Decal-Tipping hazard
36	101012100008	2	Decal-Tipping hazard
37	101012100029	2	Decal-Crush hazard

https://truckmanualshub.com/

7.3 DECALS(CE-IMPERIAL)

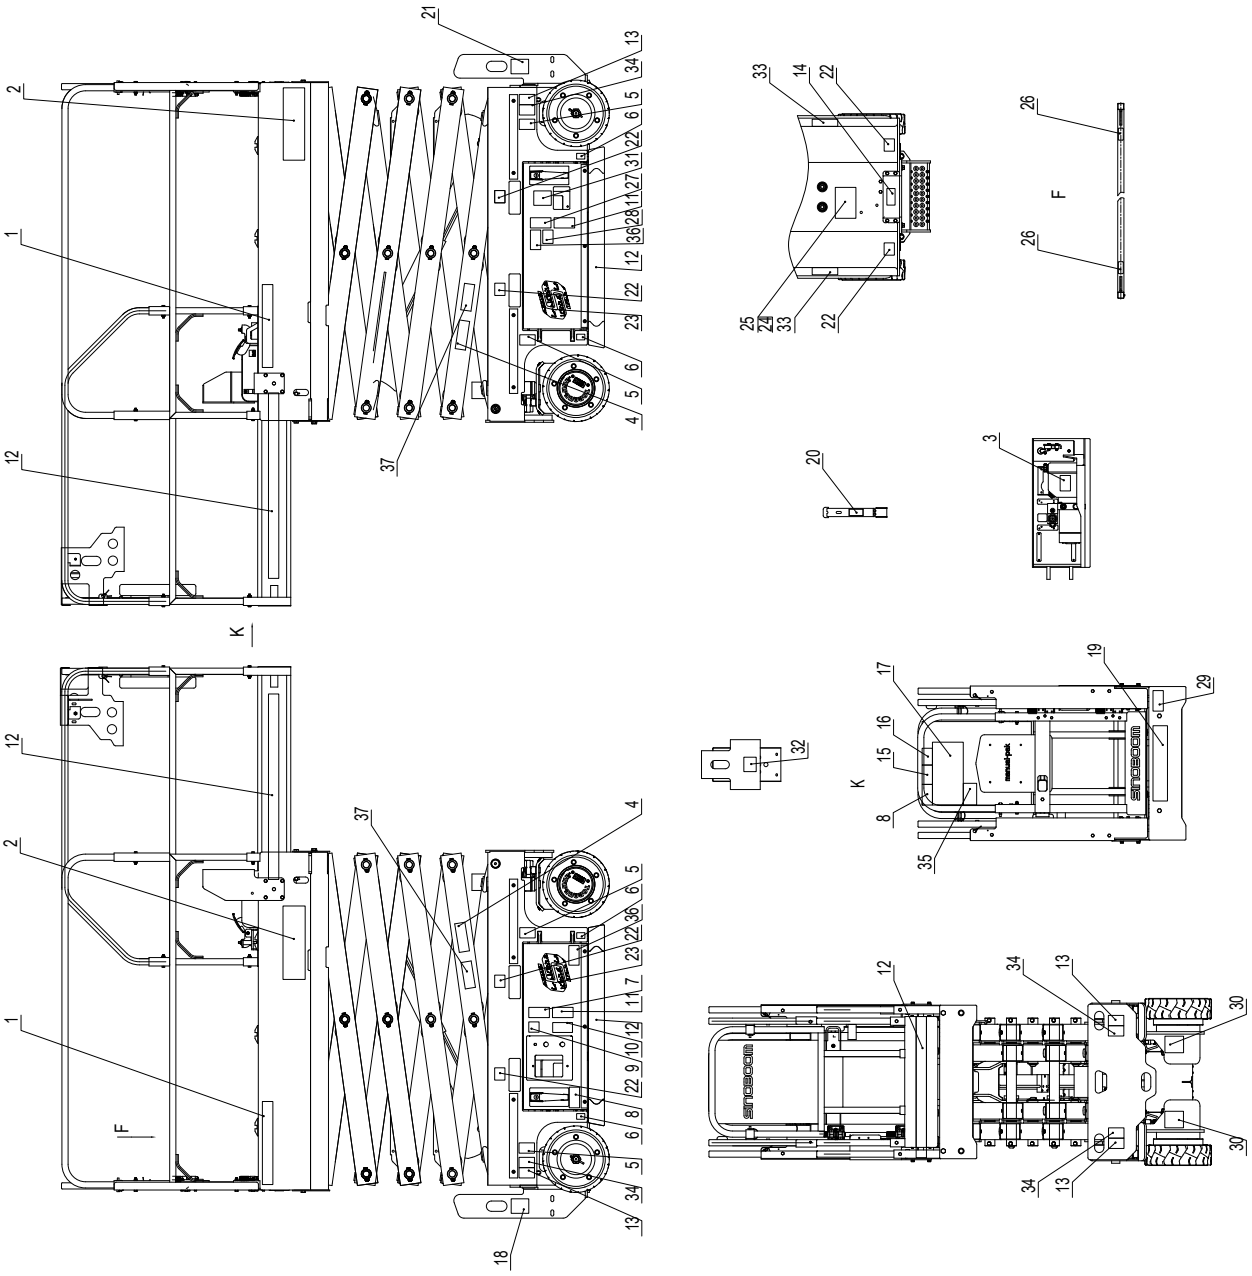

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
	101055000004	1	GTJZ0408ME Decals-CE
	101055000014	1	GTJZ0408SE Decals-CE
	101056000004	1	GTJZ0608ME Decals-CE
	101058000004	1	GTJZ0608SE Decals-CE
1	101040103021	2	LOGO-SINOBOOM
2-1	101057103020	2	Decal-1530SE
2-2	101058103014	2	Decal-1930SE
2-3	101055103025	2	Decal-1532ME
2-4	101056103018	2	Decal-1932ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101058103018	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101012100005	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101040100005	1	Decal-Read manuals
16	101040100009	1	Decal-Tipping hazard
17-1	101055000018	1	Decal-Use condition, GTJZ0408SE
17-2	101058000008	1	Decal-Use condition, GTJZ0608SE
17-3	101055000008	1	Decal-Use condition, GTJZ0408ME
17-4	101056000008	1	Decal-Use condition, GTJZ0608ME
18	101014100007	1	Decal-Platform electrical plug
19-1	101055000017	1	Decal-Use condition, GTJZ0408SE
19-2	101058000007	1	Decal-Use condition, GTJZ0608SE
19-3	101055000007	1	Decal-Use condition, GTJZ0408ME
19-4	101056000007	1	Decal-Use condition, GTJZ0608ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101040103023	2	Decal-Logo, white
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
25	101012100037	1	Nameplate-CE
26	101016100030	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101041103020	1	Decal-Tipping hazard
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101055103018	1	Decal-Main power switch
32	101055103015	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101012100019	1	Decal-Tipping hazard
36	101012100008	2	Decal-Tipping hazard
37	101012100029	2	Decal-Crush hazard

https://truckmanualshub.com/

7.4 DECALS(KCS)

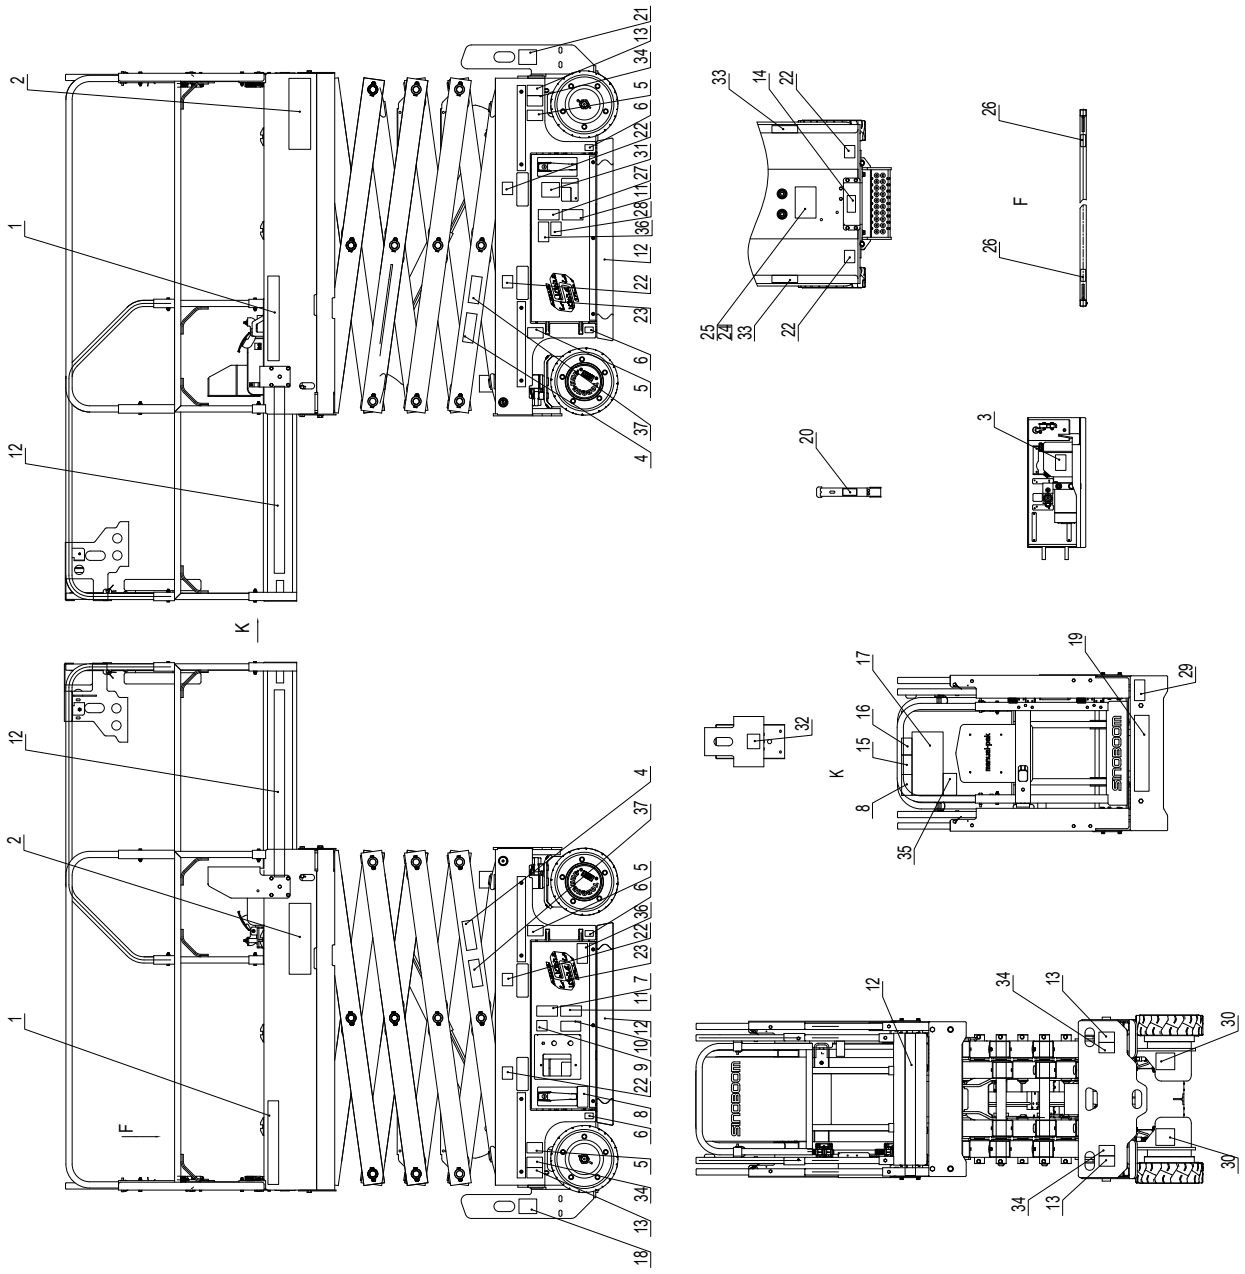

 © Jun 2021

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
	101055103003	1	GTJZ0408ME Decals-KCS
	101056103003	1	GTJZ0608ME Decals-KCS
	101057103004	1	GTJZ0408SE Decals-KCS
	101058103005	1	GTJZ0608SE Decals-KCS
1	101040103021	2	LOGO-SINOBOOM
2-1	101057103022	2	Decal-0408SE
2-2	101058103020	2	Decal-0608SE
2-3	101055103026	2	Decal-0408ME
2-4	101056103020	2	Decal-0608ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101058103018	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101012100005	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101040100005	1	Decal-Read manuals
16	101040100009	1	Decal-Tipping hazard
17-1	101055000018	1	Decal-Use condition, GTJZ0408SE
17-2	101058000008	1	Decal-Use condition, GTJZ0608SE
17-3	101055000008	1	Decal-Use condition, GTJZ0408ME
17-4	101056000008	1	Decal-Use condition, GTJZ0608ME
18	101014100007	1	Decal-Platform electrical plug
19-1	101055000017	1	Decal-Use condition, GTJZ0408SE
19-2	101058000007	1	Decal-Use condition, GTJZ0608SE
19-3	101055000007	1	Decal-Use condition, GTJZ0408ME
19-4	101056000007	1	Decal-Use condition, GTJZ0608ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101040103023	2	Decal-Logo, white
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
25	101015100026	1	Nameplate (KC)
26	101016100030	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101041103020	1	Decal-Tipping hazard
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101055103018	1	Decal-Main power switch
32	101055103015	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101012100019	1	Decal-Tipping hazard
36	101012100008	2	Decal-Tipping hazard
37	101012100029	2	Decal-Crush hazard

https://truckmanualshub.com/

7.5 DECALS(CE-PL)

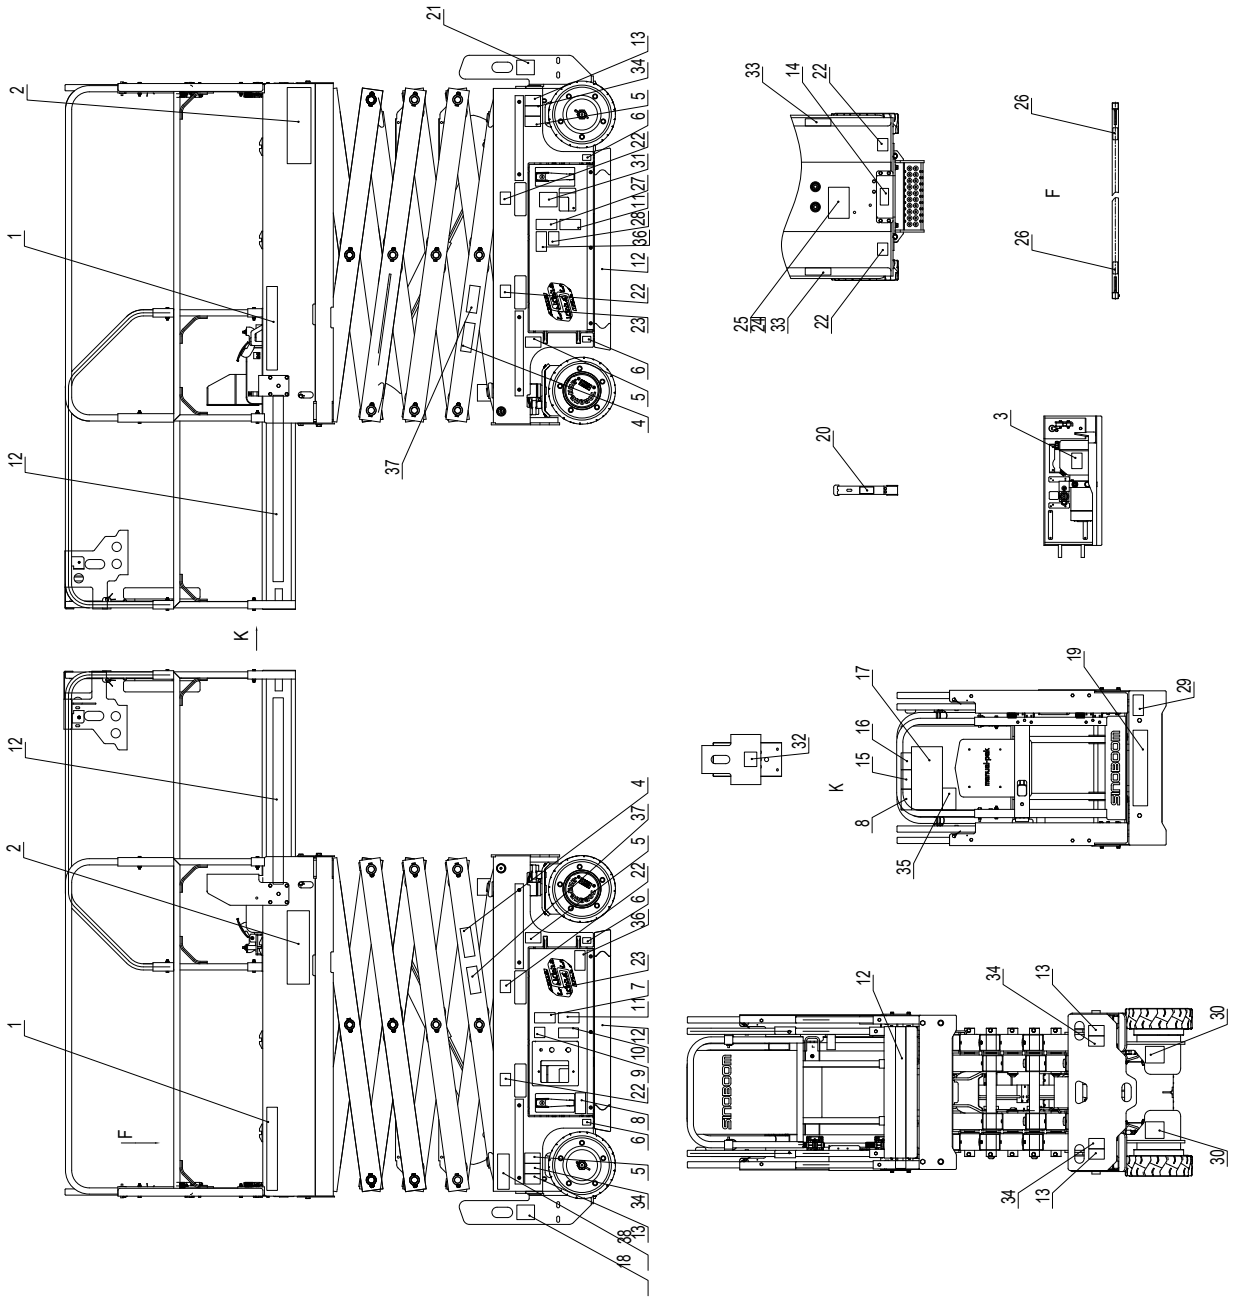

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
	101055103004	1	GTJZ0408ME Decals-Poland
	101056103004	1	GTJZ0608ME Decals-Poland
	101057103005	1	GTJZ0408SE Decals-Poland
	101058103006	1	GTJZ0608SE Decals-Poland
1	101040103021	2	LOGO-SINOBOOM
2-1	101057103020	2	Decal-1530SE
2-2	101058103014	2	Decal-1930SE
2-3	101055103025	2	Decal-1532ME
2-4	101056103018	2	Decal-1932ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101057103021	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101012100005	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101040100005	1	Decal-Read manuals
16	101040100009	1	Decal-Tipping hazard
17-1	101055000018	1	Decal-Use condition, GTJZ0408SE
17-2	101058000008	1	Decal-Use condition, GTJZ0608SE
17-3	101055000008	1	Decal-Use condition, GTJZ0408ME
17-4	101056000008	1	Decal-Use condition, GTJZ0608ME
18	101014100007	1	Decal-Platform electrical plug
19-1	101055000017	1	Decal-Use condition, GTJZ0408SE
19-2	101058000007	1	Decal-Use condition, GTJZ0608SE
19-3	101055000007	1	Decal-Use condition, GTJZ0408ME
19-4	101056000007	1	Decal-Use condition, GTJZ0608ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101040103023	2	Decal-Logo, white
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
25	101012100037	1	Nameplate-CE
26	101016100030	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101041103020	1	Decal-Tipping hazard
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101055103018	1	Decal-Main power switch
32	101055103015	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101012100019	1	Decal-Tipping hazard
36	101012100008	2	Decal-Tipping hazard
37	101012100029	2	Decal-Crush hazard
38	101058103000	1	Q-LINE(Logo)

https://truckmanualshub.com/

7.6 DECALS (CSA)

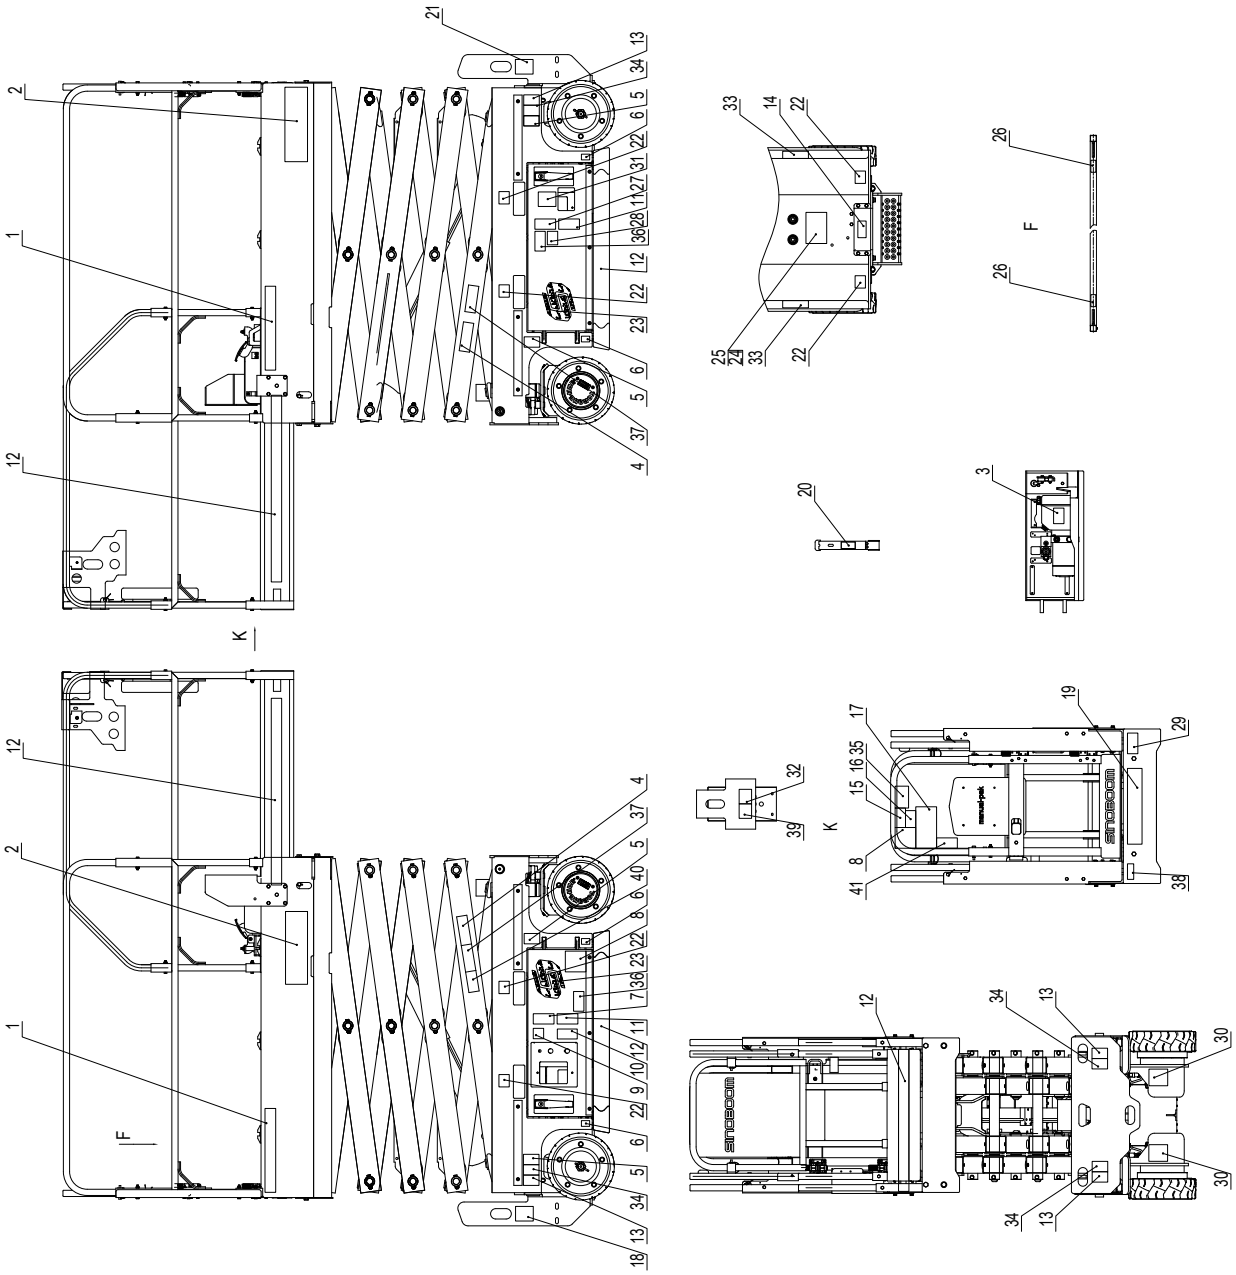

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
	101055103020	1	GTJZ0408ME Decals-CSA
	101056103014	1	GTJZ0608ME Decals-CSA
	101057103015	1	GTJZ0408SE Decals-CSA
	101058103013	1	GTJZ0608SE Decals-CSA
1	101040103021	2	LOGO-SINOBOOM
2-1	101057103020	2	Decal-1530SE
2-2	101058103014	2	Decal-1930SE
2-3	101055103025	2	Decal-1532ME
2-4	101056103018	2	Decal-1932ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101057103024	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101040103013	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101040100005	1	Decal-Read manuals
16	101040100009	1	Decal-Tipping hazard
17-1	101055000018	1	Decal-Use condition, GTJZ0408SE
17-2	101058000008	1	Decal-Use condition, GTJZ0608SE
17-3	101055000008	1	Decal-Use condition, GTJZ0408ME
17-4	101056000008	1	Decal-Use condition, GTJZ0608ME
18	101014100007	1	Decal-Platform electrical plug
19-1	101055000017	1	Decal-Use condition, GTJZ0408SE
19-2	101058000007	1	Decal-Use condition, GTJZ0608SE
19-3	101055000007	1	Decal-Use condition, GTJZ0408ME
19-4	101056000007	1	Decal-Use condition, GTJZ0608ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101040103023	2	Decal-Logo, white
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
25	101048103022	1	Nameplate(CSA)
26	101016100030	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101038103017	1	Decal-Tipping hazard
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101055103018	1	Decal-Main power switch
32	101055103015	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101012100019	1	Decal-Tipping hazard
36	101012100008	2	Decal-Tipping hazard
37	101012100029	2	Decal-Crush hazard
38	101040103015	1	Decal-Annual inspection
39	101040103014	1	Decal-Detachable bracket
40	104011100021	1	Decal-Crush hazard
41	101048103023	1	Decal-Operating instructions

https://truckmanualshub.com/

7.7 DECALS(CE-JP)

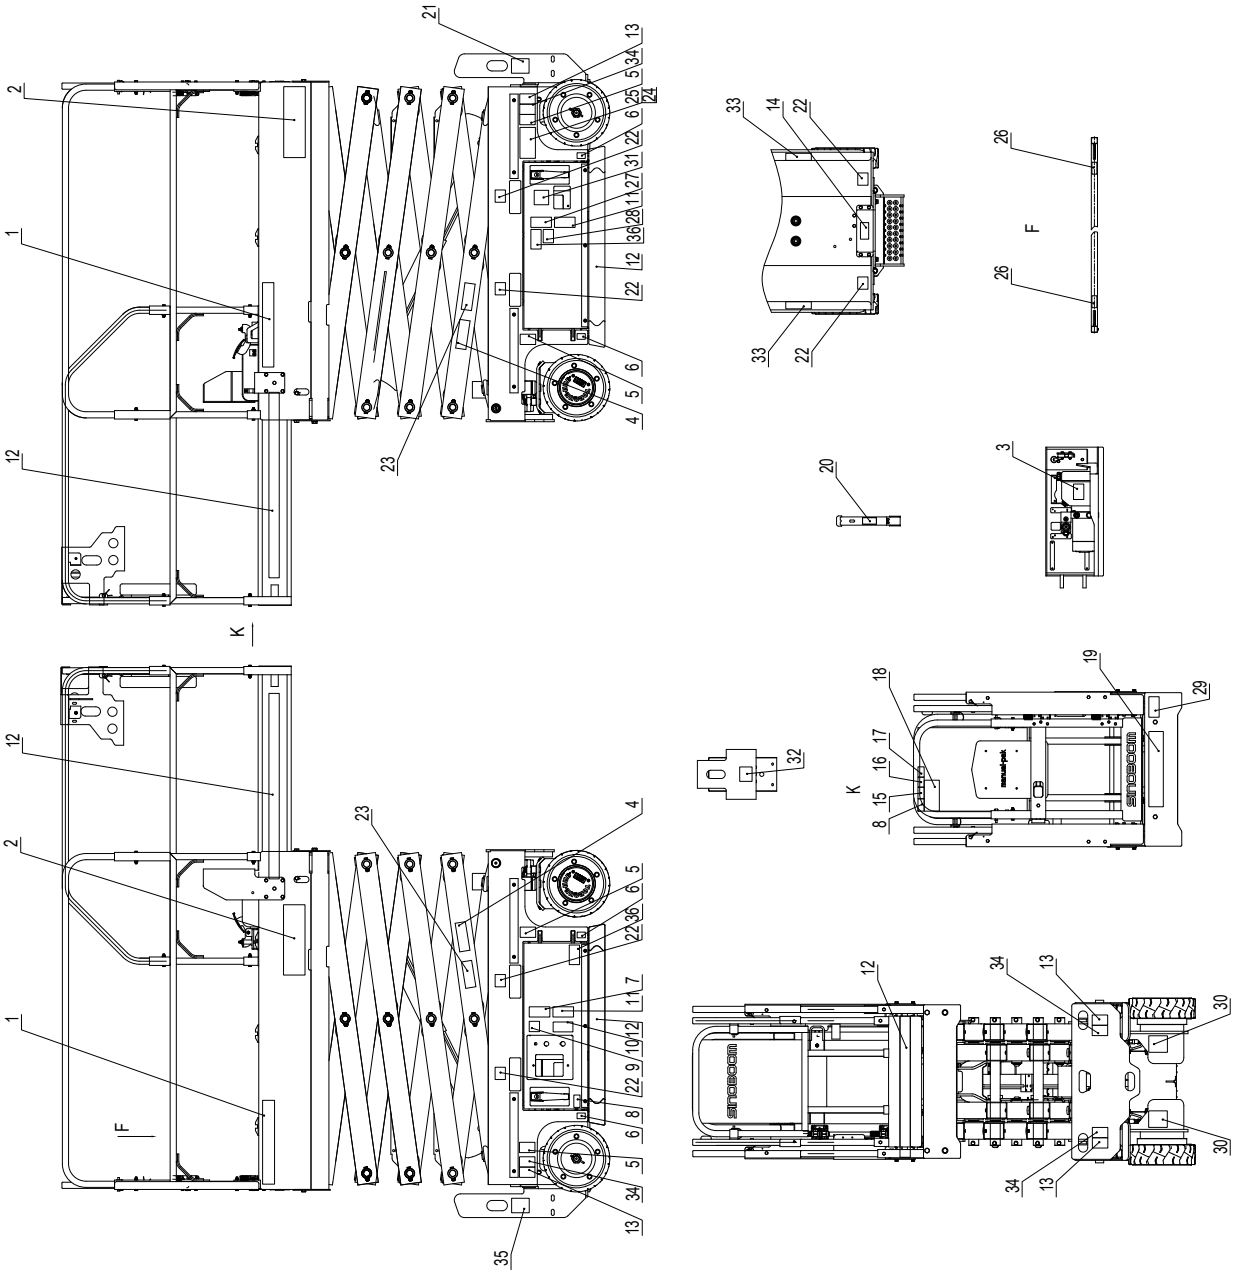

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
	101055103005	1	GTJZ0408ME Decals-Japan
	101056103005	1	GTJZ0608ME Decals-Japan
	101057103006	1	GTJZ0408SE Decals-Japan
	101058103007	1	GTJZ0608SE Decals-Japan
1	101040103021	2	LOGO-SINOBOOM
2-1	101057103022	2	Decal-0408SE
2-2	101058103020	2	Decal-0608SE
2-3	101055103026	2	Decal-0408ME
2-4	101056103020	2	Decal-0608ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101058103018	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101053103005	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101054103001	1	Decal-Read manuals
16	101054103002	1	Decal-Tipping hazard
17	101049103022	1	Decal-Tipping hazard
18-1	101057103001	1	Decal-Use condition, GTJZ0408SE
18-2	101058103002	1	Decal-Use condition, GTJZ0608SE
18-3	101055103001	1	Decal-Use condition, GTJZ0408ME
18-4	101056103000	1	Decal-Use condition, GTJZ0608ME
19-1	101055000017	1	Decal-Use condition, GTJZ0408SE
19-2	101058000007	1	Decal-Use condition, GTJZ0608SE
19-3	101055000007	1	Decal-Use condition, GTJZ0408ME
19-4	101056000007	1	Decal-Use condition, GTJZ0608ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101012100029	2	Decal-Crush hazard
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2


 © Jun 2021

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
25	101055103002	1	Nameplate (CE)
26	101058103017	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101041103020	1	Decal-Tipping hazard
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101058103015	1	Decal-Main power switch
32	101058103016	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101014100007	1	Decal-Platform electrical plug
36	101012100008	2	Decal-Tipping hazard

https://truckmanualshub.com/

7.8 DECALS(ANSI)

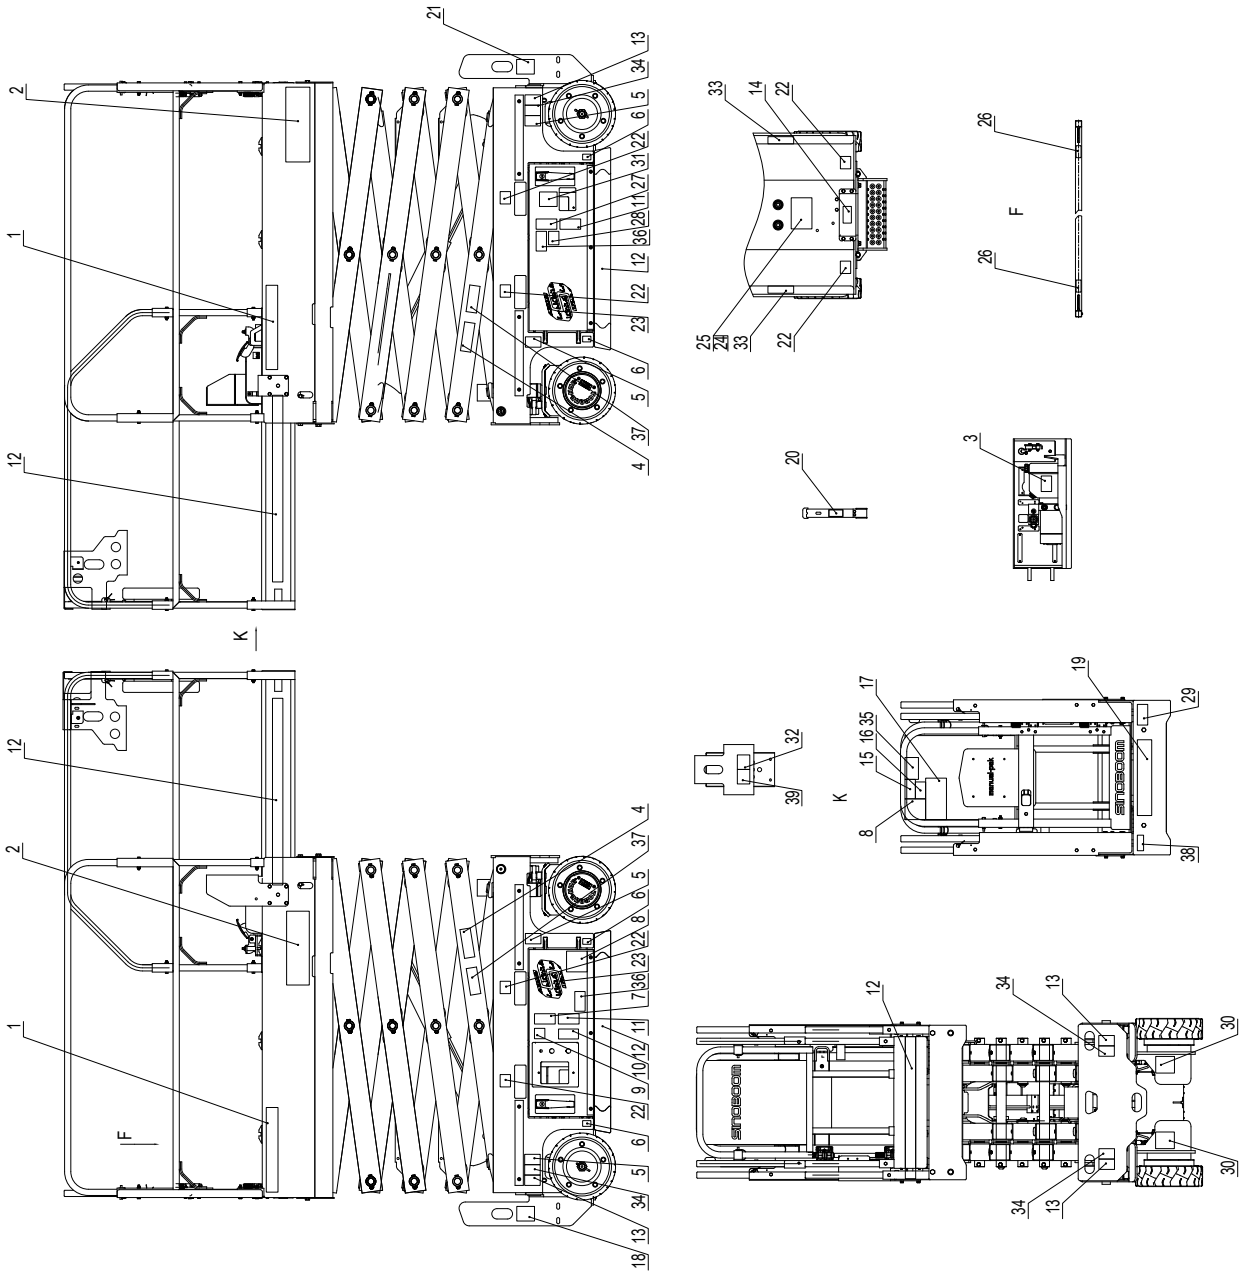

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
	101055103021	1	GTJZ0408ME Decals-ANSI
	101056103015	1	GTJZ0608ME Decals-ANSI
	101057103016	1	GTJZ0408SE Decals-ANSI
	101058103010	1	GTJZ0608SE Decals-ANSI
1	101040103021	2	LOGO-SINOBOOM
2-1	101057103020	2	Decal-1530SE
2-2	101058103014	2	Decal-1930SE
2-3	101055103025	2	Decal-1532ME
2-4	101056103018	2	Decal-1932ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101057103024	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101040103013	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101040100005	1	Decal-Read manuals
16	101040100009	1	Decal-Tipping hazard
17-1	101057103017	1	Decal-Use condition, GTJZ0408SE
17-2	101058103011	1	Decal-Use condition, GTJZ0608SE
17-3	101055103022	1	Decal-Use condition, GTJZ0408ME
17-4	101056103016	1	Decal-Use condition, GTJZ0608ME
18	101014100007	1	Decal-Platform electrical plug
19-1	101057103018	1	Decal-Use condition, GTJZ0408SE
19-2	101058103012	1	Decal-Use condition, GTJZ0608SE
19-3	101055103023	1	Decal-Use condition, GTJZ0408ME
19-4	101056103017	1	Decal-Use condition, GTJZ0608ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101040103023	2	Decal-Logo, white
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
25	101048103010	1	Nameplate (American)
26	101016100030	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101038103017	1	Decal-Tipping hazard
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101055103018	1	Decal-Main power switch
32	101055103015	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101012100019	1	Decal-Tipping hazard
36	101012100008	2	Decal-Tipping hazard
37	101012100029	2	Decal-Crush hazard
38	101040103015	1	Decal-Annual inspection
39	101040103014	1	Decal-Detachable bracket

https://truckmanualshub.com/

7.9 DECALS(AS)-GTJZ0408SE&0408ME&0608SE

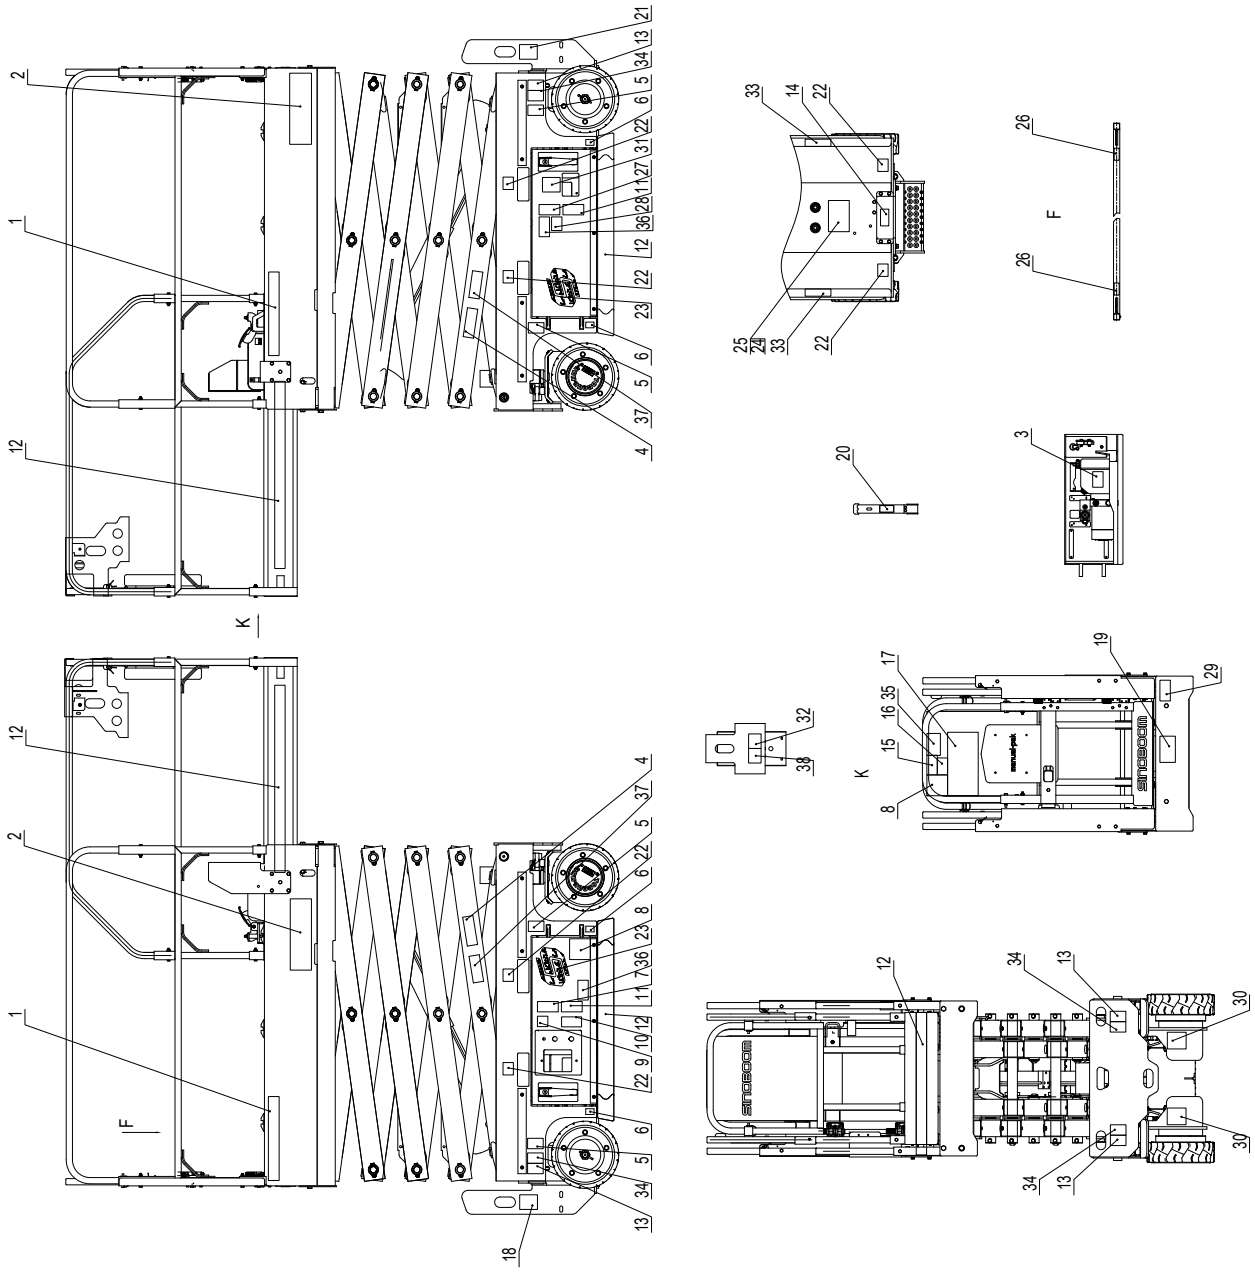

https://truckmanualshub.com/


No.	Part No.	Qty.	Description
	101055000005	1	GTJZ0408ME Decals-AS
	101055000015	1	GTJZ0408SE Decals-AS
	101058000005	1	GTJZ0608SE Decals-AS
1	101040103021	2	LOGO-SINOBOOM
2-1	101057103022	2	Decal-0408SE
2-2	101058103020	2	Decal-0608SE
2-3	101055103026	2	Decal-0408ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101058103018	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101055103019	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101040100005	1	Decal-Read manuals
16	101040100009	1	Decal-Tipping hazard
17-1	101055000018	1	Decal-Use condition, GTJZ0408SE
17-2	101058000008	1	Decal-Use condition, GTJZ0608SE
17-3	101055000008	1	Decal-Use condition, GTJZ0408ME
18	101014100007	1	Decal-Platform electrical plug
19-1	101055000019	1	Decal-Use condition, GTJZ0408SE
19-2	101058000009	1	Decal-Use condition, GTJZ0608SE
19-3	101055000009	1	Decal-Use condition, GTJZ0408ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101040103023	2	Decal-Logo, white
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2
25	101012100038	1	Nameplate-AS
26	101016100030	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101041103020	1	Decal-Tipping hazard

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101055103018	1	Decal-Main power switch
32	101055103015	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101012100019	1	Decal-Tipping hazard
36	101012100008	2	Decal-Tipping hazard
37	101012100029	2	Decal-Crush hazard
38	101040103014	1	Decal-Detachable bracket

https://truckmanualshub.com/

7.10 DECALS(AS)-GTJZ0608ME

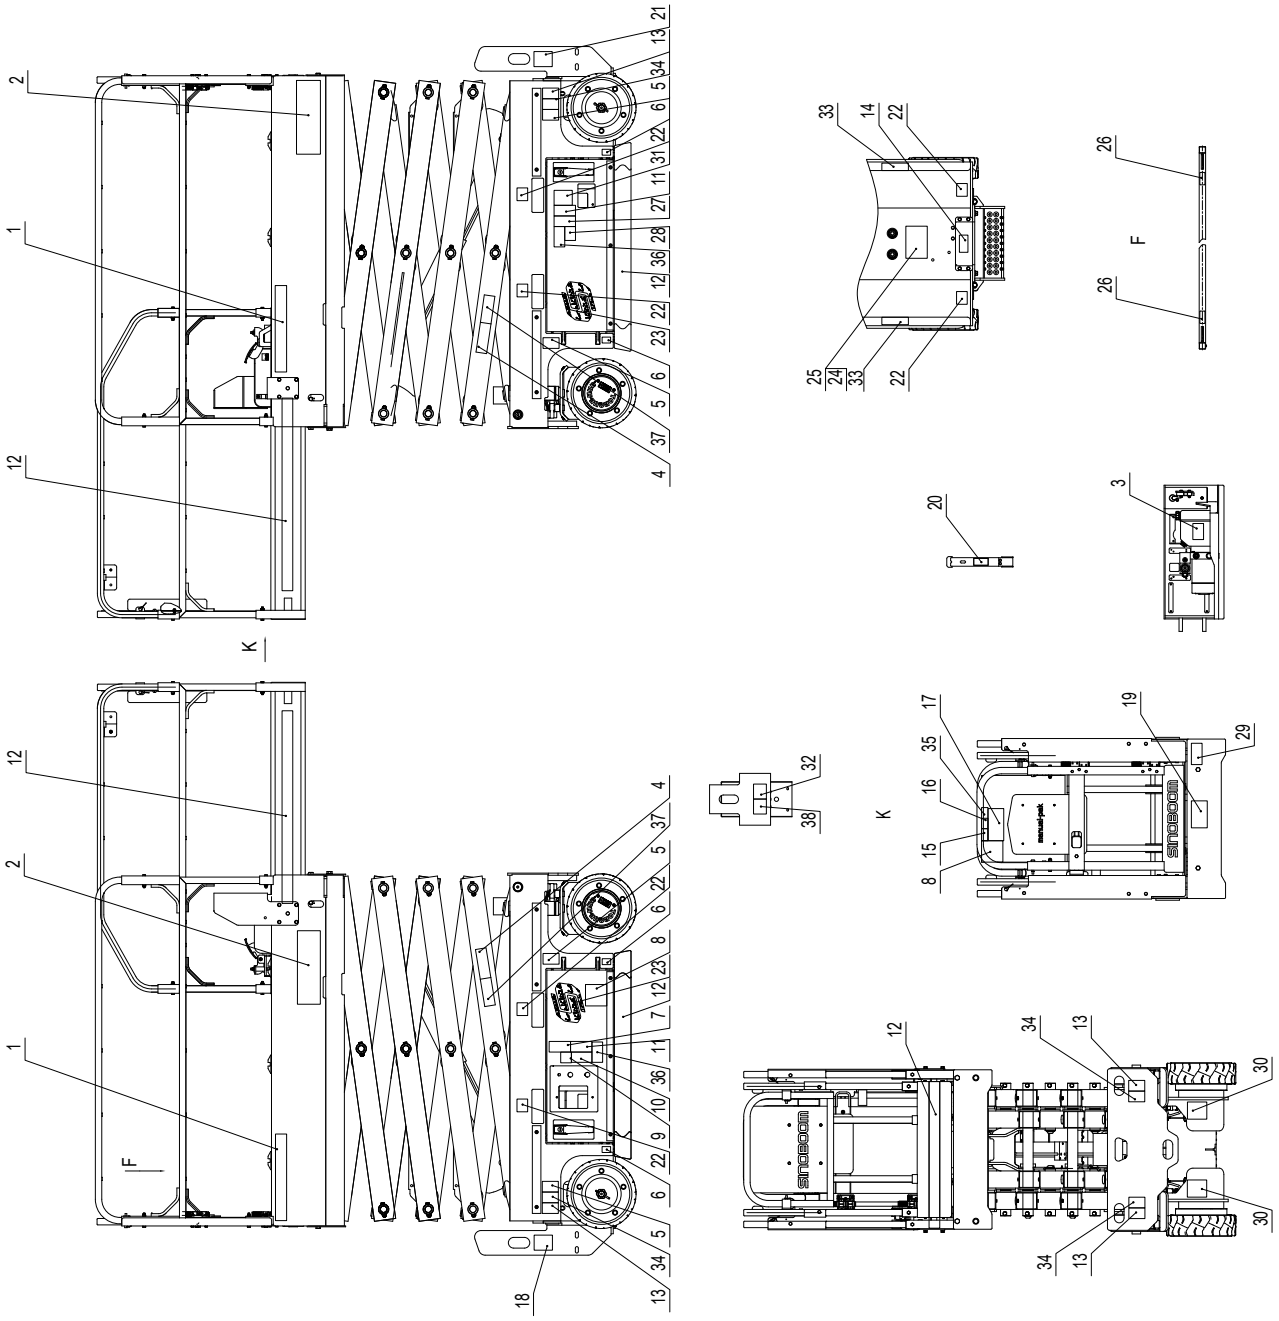

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
	101056000005	1	GTJZ0608ME Decals-AS
1	101040103021	2	LOGO-SINOBOOM
2	101056103020	2	Decal-0608ME
3	101014100022	1	Decal-Oil filling port
4	101012100018	2	Decal-Crush hazard
5	101058103018	4	Decal-Wheel load 700kg
6	101012100020	4	Decal-Crush hazard
7	101038100002	1	Decal-High Pressure Hazard
8	101055103019	2	Decal-Electrocution hazard
9	101014100018	1	Decal-Platform up/down
10	101014100017	1	Decal-Read manuals
11	101038100008	2	Decal-No fire
12	216060000004	5	Attention line, 50mm wide
13	101014100020	4	Decal-Lifting lugs
14	101012100011	1	Decal-Emergency down
15	101054103001	1	Decal-Read manuals
16	101054103002	1	Decal-Tipping hazard
17	101056103000	1	Decal-Use condition, GTJZ0608ME
18	101014100007	1	Decal-Platform electrical plug
19	101056000009	1	Decal-Use condition, GTJZ0608ME
20	101040100010	1	Decal-Engage safety arm
21	101014100008	1	Decal-Charging voltage
22	101012100026	6	Decal-Forklift fork position
23	101040103023	2	Decal-Logo, white
24	215050000012	4	Blind rivet 4×8-ZnD GB/T 12618.2
25	101012100038	1	Nameplate-AS
26	101016100030	8	Decal-Lanyard anchorage points
27	101038100007	1	Decal-Electrocution hazard
28	101041103020	1	Decal-Tipping hazard
29	101058103001	1	Decal-IPAF
30	101040103008	2	Decal-Release brake
31	101055103018	1	Decal-Main power switch
32	101055103015	1	Decal-Emergency stop switch
33	101014100032	2	Decal-Serial number
34	101014100021	4	Decal-Tiedown
35	101049103022	1	Decal-Tipping hazard
36	101012100008	2	Decal-Tipping hazard

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
37	101012100029	2	Decal-Crush hazard
38	101040103014	1	Decal-Detachable bracket

https://truckmanualshub.com/


This Page Intentionally Left Blank

https://truckmanualshub.com/

8 SPECIAL OPTIONS

https://truckmanualshub.com/


8.1 LED LIGHT INSTALLATION

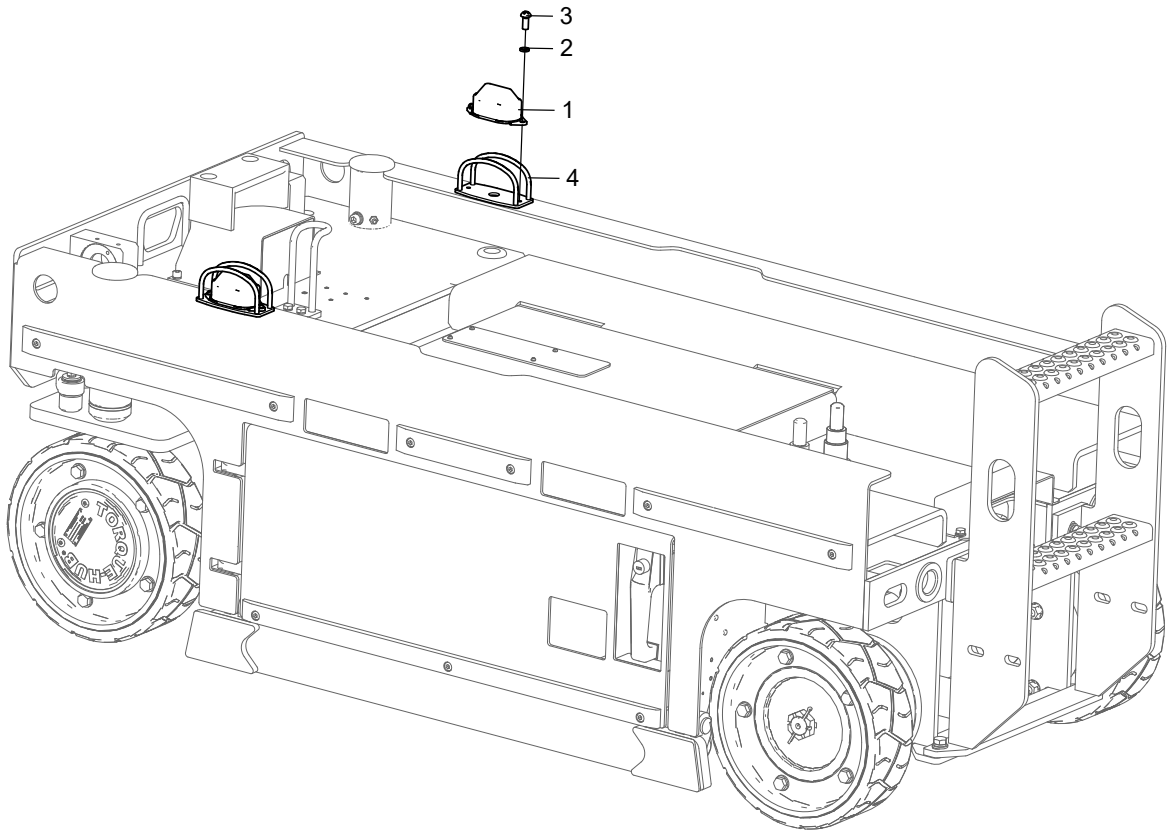

No.	Part No.	Qty.	Description
1	203050000038	2	LED light, beacon
2	215040000003	4	Washer 5-A2-70 GB/T 93
3	215020000110	4	Screw M5×12-A2-70 GB/T 818
4	203990000003	2	Guard

https://truckmanualshub.com/

8.2 RCBO INSTALLATION

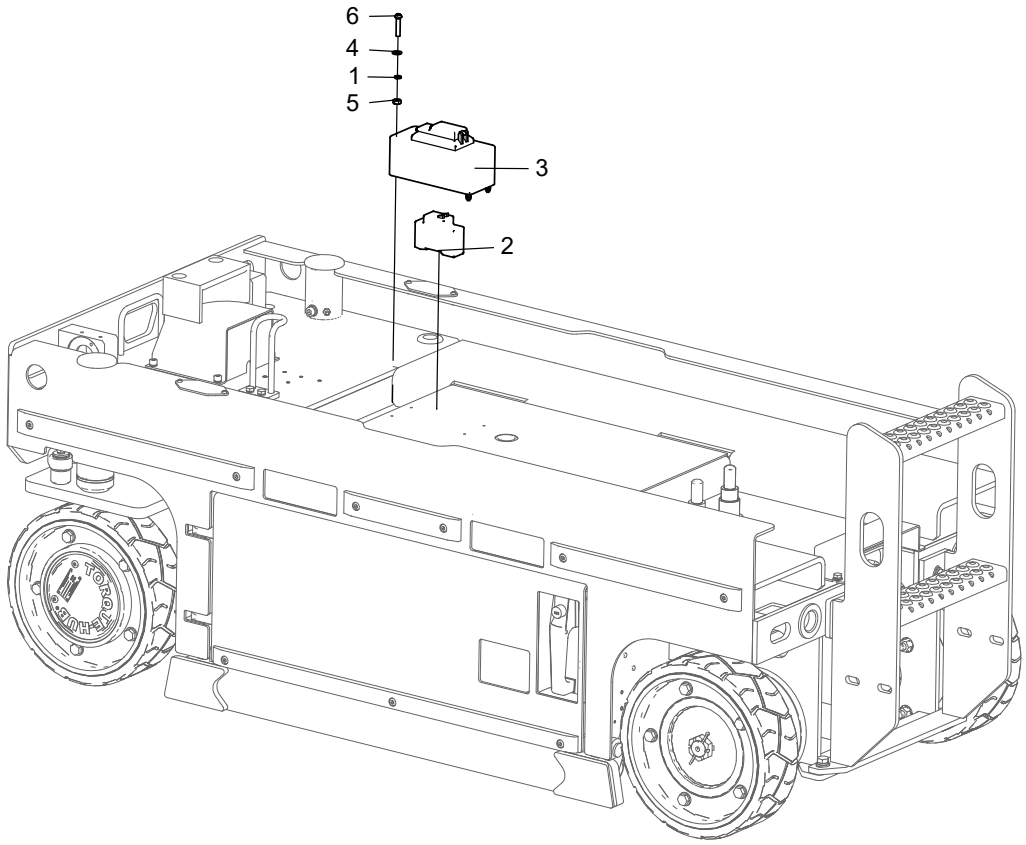


No.	Part No.	Qty.	Description
1	215040000002	4	Washer 4-A2-70 GB/T 93
2	203160000002	1	Current leakage protector
3	203090000002	1	Waterproof Cover, RCBO
4	215040000031	4	Washer 4-A2 GB/T 97.1
5	215030000002	4	Nut M4-8-A2-70 GB/T 6170
6	215020000107	4	Screw M4×20-A2-70 GB/T 818

 © Jun 2021

https://truckmanualshub.com/


8.3 GPS INSTALLATION 1

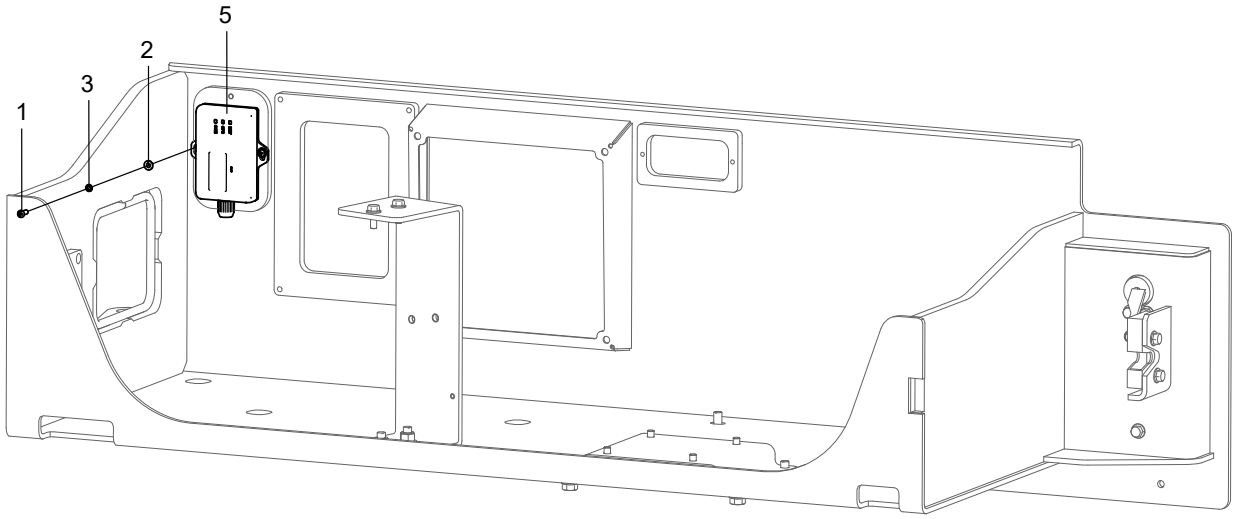

No.	Part No.	Qty.	Description
1	215020000105	2	Screw M4×12-A2-70 GB/T 818
2	215040000031	2	Washer 4-A2 GB/T 97.1
3	215040000002	2	Washer 4-A2-70 GB/T 93
4	203150003022	1	GPS/LTE antenna(Not Shown)
5	203020003040	1	GPS module (4G)(1000577)

https://truckmanualshub.com/


8.4 GPS INSTALLATION 2

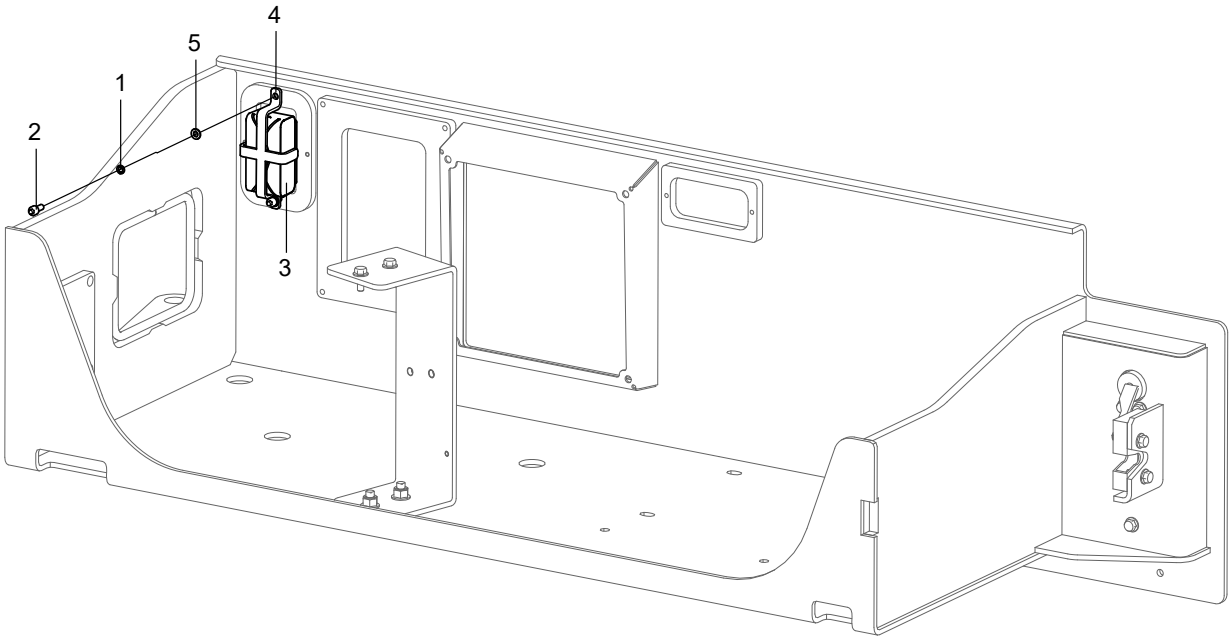

No.	Part No.	Qty.	Description
1	215040000003	2	Washer 5-A2-70 GB/T 93
2	215020000006	2	Screw M5×12-A2-70 GB/T 70.1
3	203020003017	1	GPS terminal (including magnet)(1000254)
4	101038033017	1	Guard
5	215040000032	2	Washer 5-A2 GB/T 97.1

https://truckmanualshub.com/

8.5 WORK LIGHT INSTALLATION

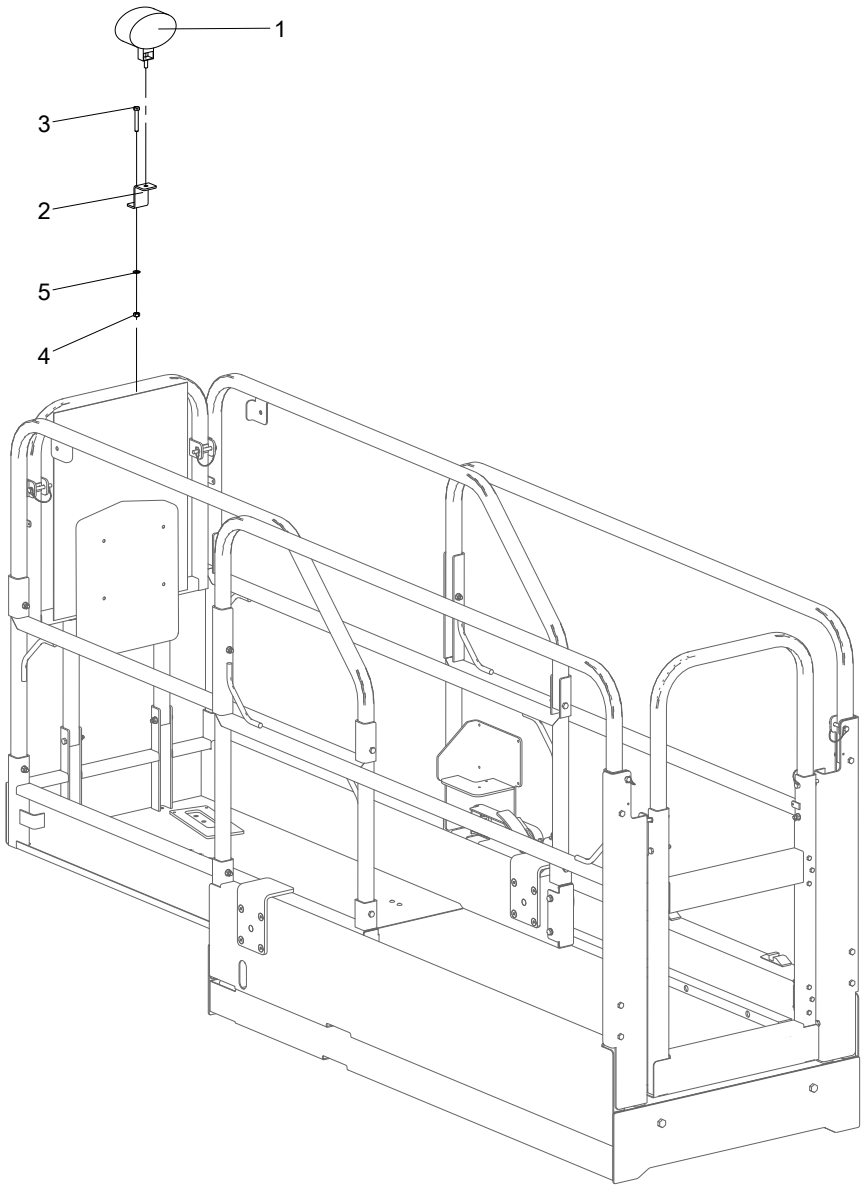


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
	101055063009	1	Work Light Installation(Not shown)
1	203050000059	1	Work Light
2	101015060019	1	Plate
3	215010000064	1	Bolt M8×55-8.8-ZnD GB/T 5783
4	215030000005	1	Nut M8-8-ZnD GB/T 6170
5	215040000034	1	Washer 8-200HV-ZnD GB/T 97.1

https://truckmanualshub.com/

8.6 FOOT SWITCH INSTALLATION

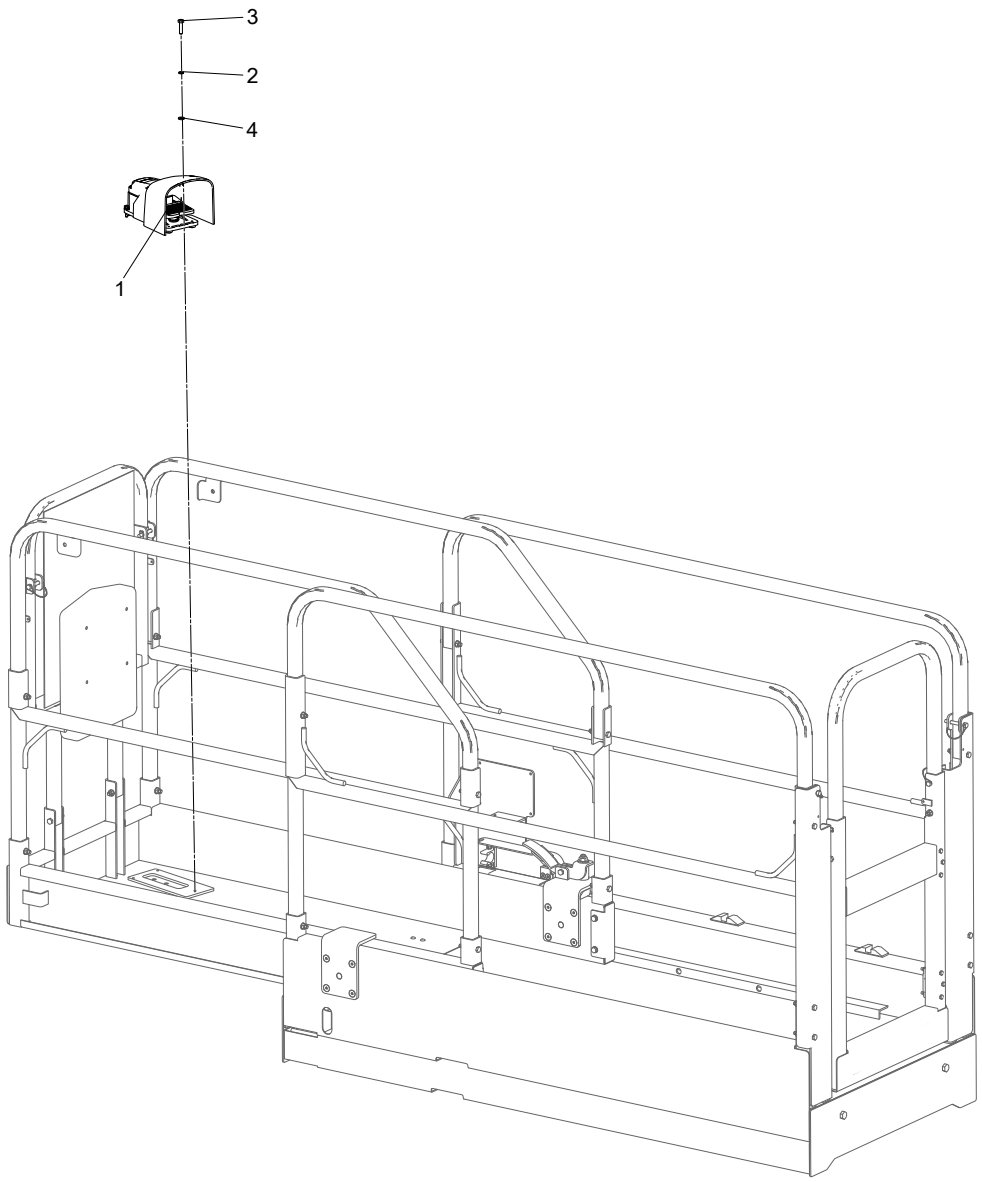



https://truckmanualshub.com/

No.	Part No.	Qty.	Description
	101055063022	1	Foot Switch Harness(Not shown)
1	203060003001	1	Footswitch
2	215010000052	3	Bolt M6×25-A2-70 GB/T 5783
3	215040000004	3	Washer 6-A2-70 GB/T 93
4	215040000033	3	Washer 6-A2 GB/T 97.1

https://truckmanualshub.com/

8.7 OVERHEAD PROTECTION INSTALLATION

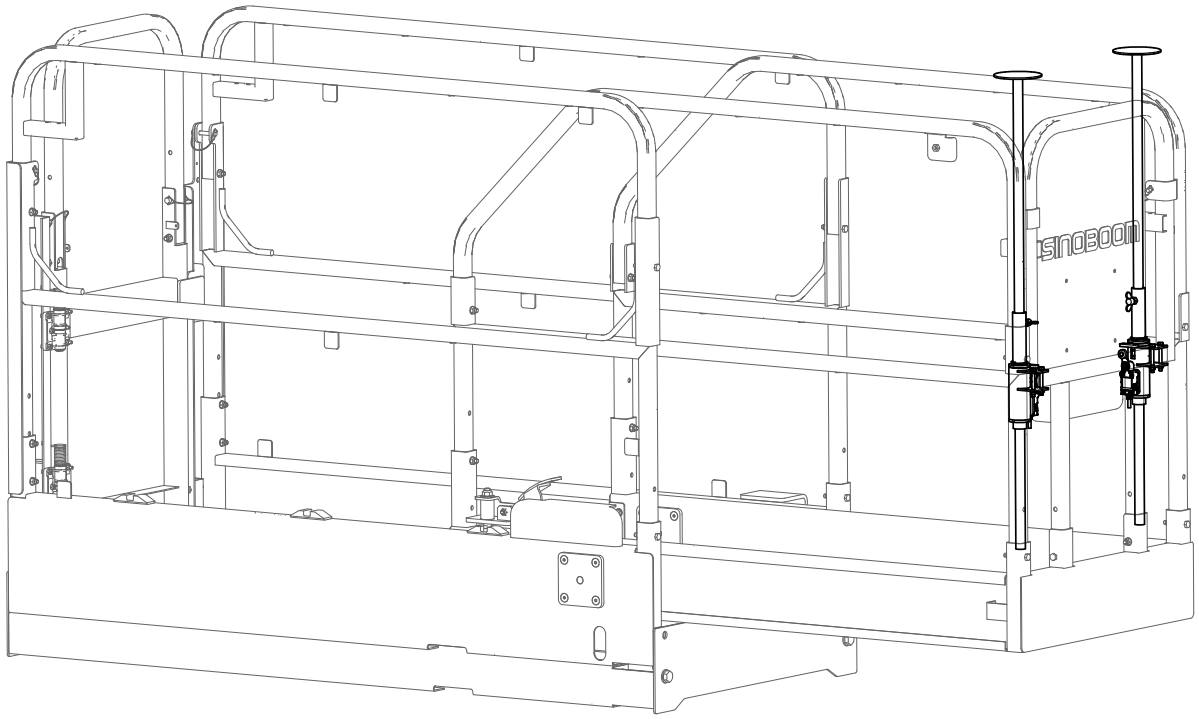

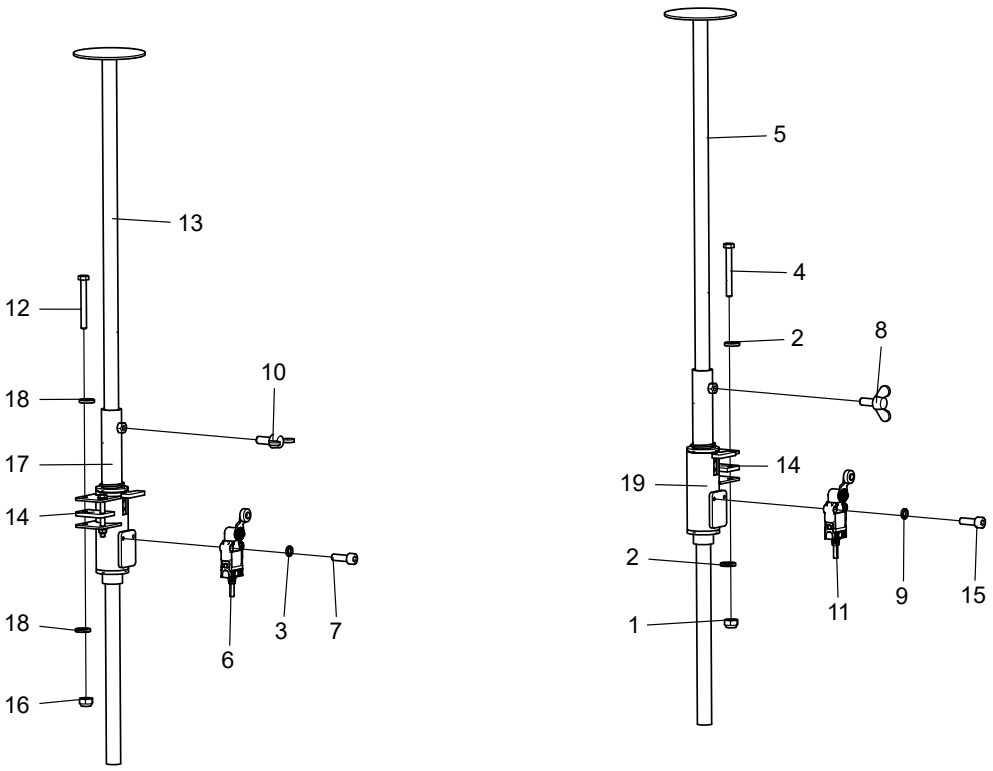


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215030000025	4	Nut M6-8-A2-70 GB/T 889.1
2	215040000033	8	Washer 6-A2 GB/T 97.1
3	215040000003	4	Washer 5-A2-70 GB/T 93
4	215010000205	4	Bolt M6×55-A2-70 GB/T5783
5	101038040071	2	Steel pipe, overhead
6	203060000151	2	Limit switch
7	215020000007	4	Screw M5×16-A2-70 GB/T 70.1
8	215010000228	2	Thumb bolt M8x20-8.8-ZnD DIN 316
9	215040000003	4	Washer 5-A2-70 GB/T 93
10	215010000228	2	Thumb bolt M8x20-8.8-ZnD DIN 316
11	203060000151	2	Limit switch
12	215010000205	4	Bolt M6×55-A2-70 GB/T5783
13	101038040071	2	Steel pipe, overhead
14	101038040073	2	Pad
15	215020000007	4	Screw M5×16-A2-70 GB/T 70.1
16	215030000025	4	Nut M6-8-A2-70 GB/T 889.1
17	101038040072	2	Bracket, Left
18	215040000033	8	Washer 6-A2 GB/T 97.1
19	101038040059	2	Bracket, Right
20	101055063010	1	Overhead Protection Harness(Not shown)

https://truckmanualshub.com/

8.8 AC BOX AT PLATFORM INSTALLATION(ALL SPECS)

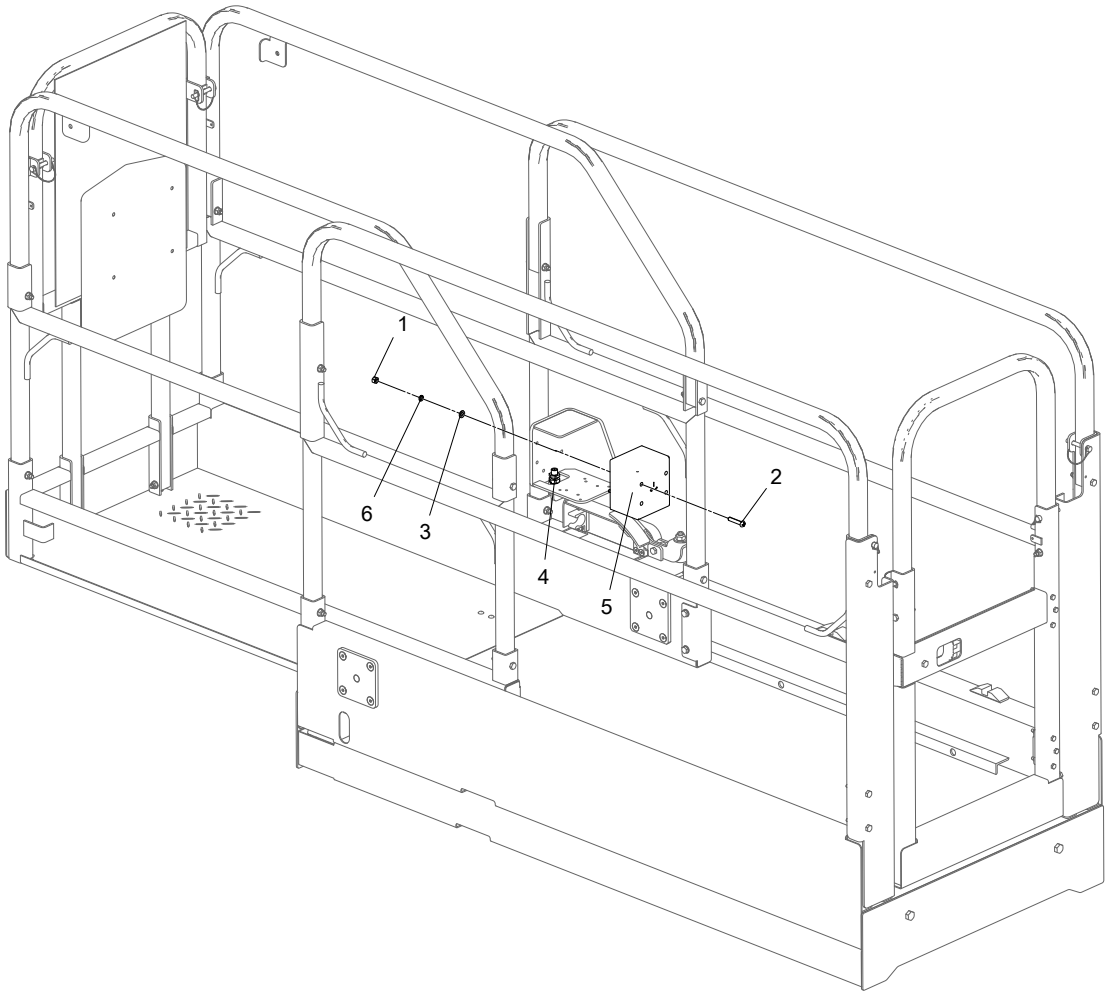


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215030000003	4	Nut M5-A2-70 GB/T 6170
2	215020000113	4	Screw M5×25-A2-70 GB/T 818
3	215040000032	4	Washer 5-A2 GB/T 97.1
4	201990003005	1	Connector
5	203080000301	1	Box, receptacle
6	215040000003	4	Washer 5-A2-70 GB/T 93

https://truckmanualshub.com/

8.9 AC BOX AT PLATFORM INSTALLATION(EUROPEAN STANDARD)

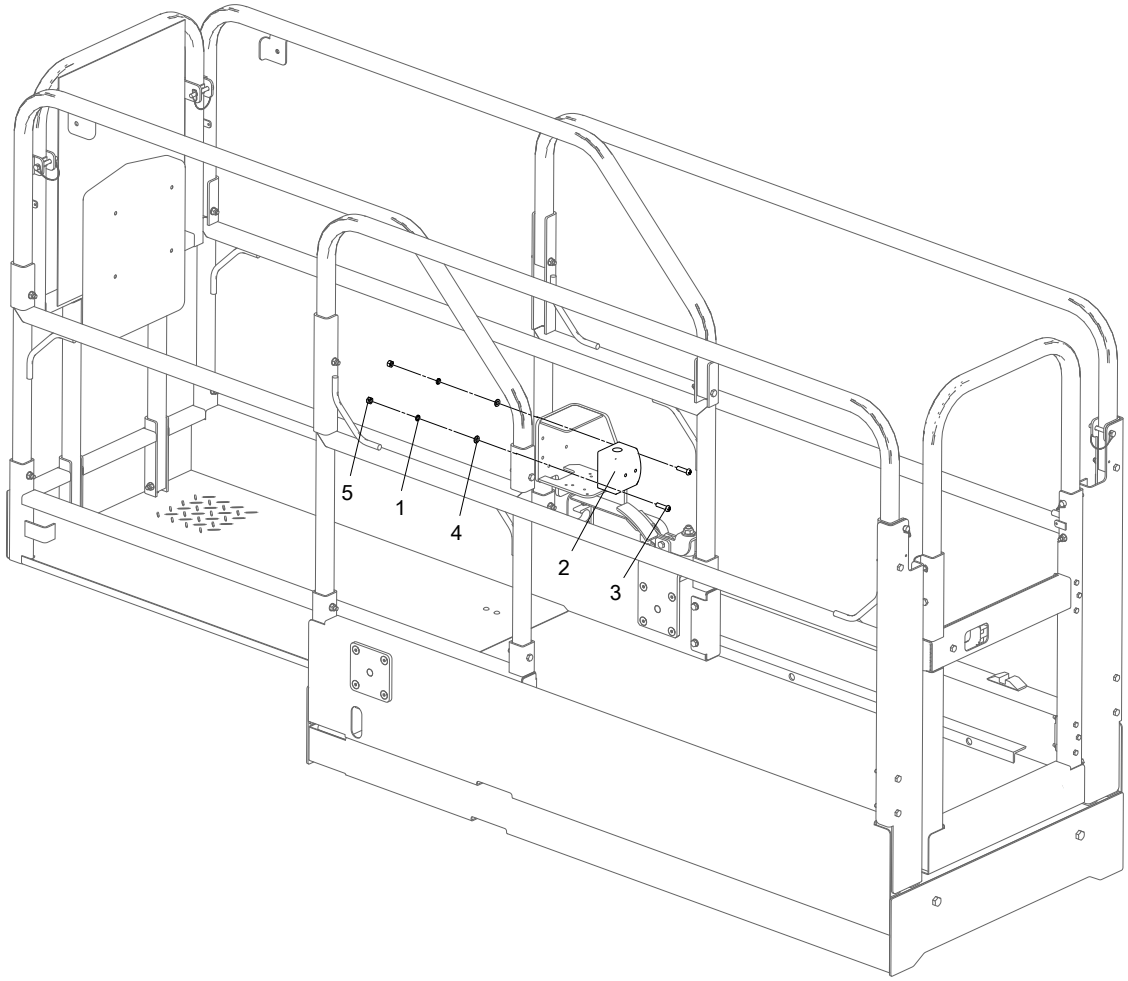


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215040000003	2	Washer 5-A2-70 GB/T 93
2	203080000278	1	Box, receptacle
3	215020000112	2	Screw M5×20-A2-70 GB/T 818
4	215040000032	2	Washer 5-A2 GB/T 97.1
5	215030000003	2	Nut M5-A2-70 GB/T 6170

https://truckmanualshub.com/

8.10 AC BOX AT PLATFORM INSTALLATION(AMERICAN STANDARD)

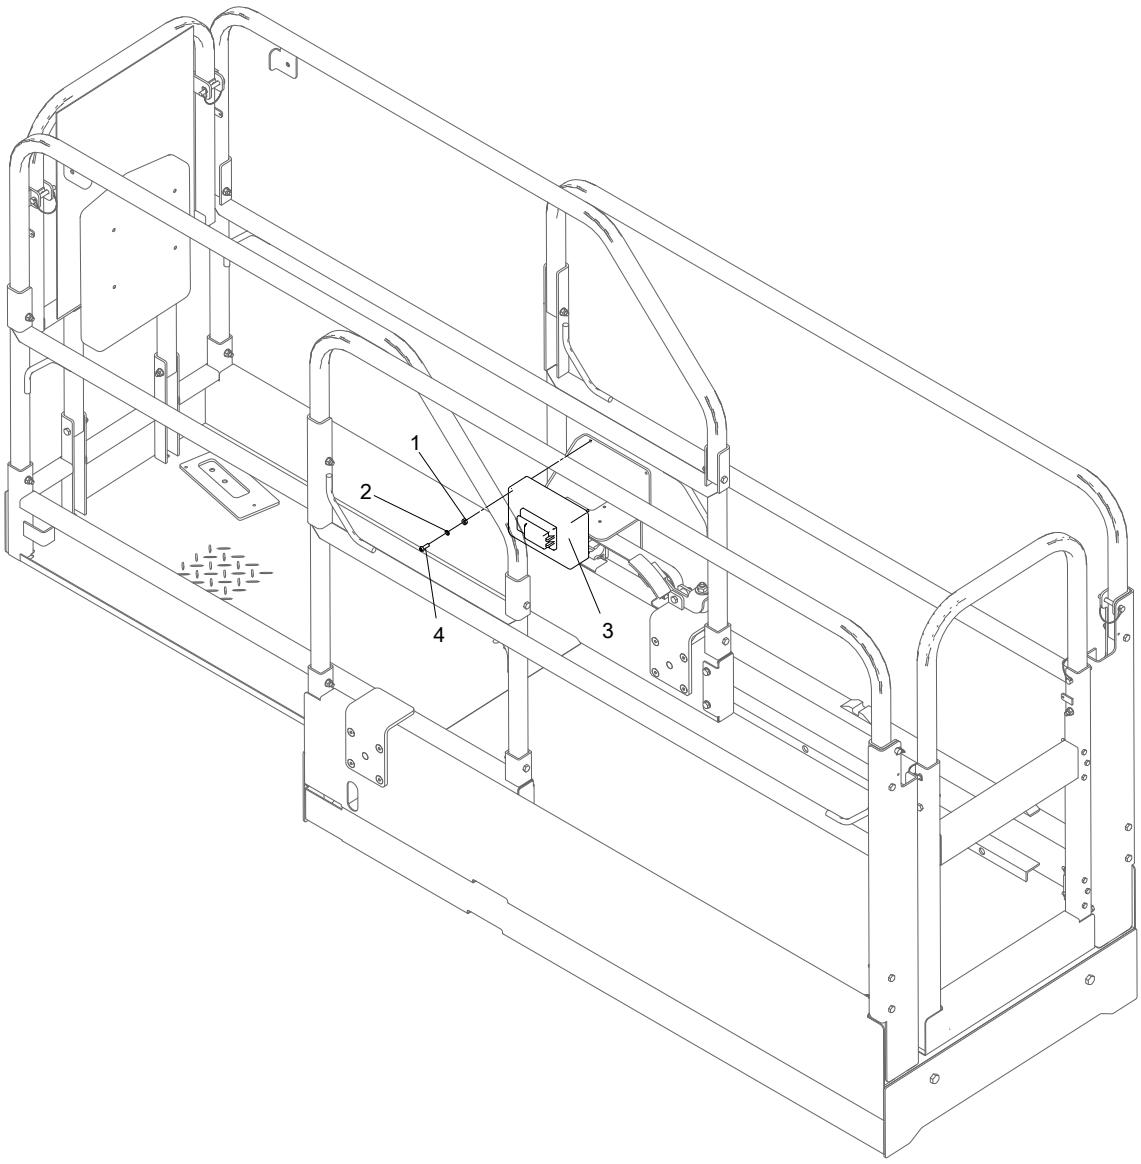


https://truckmanualshub.com/

No.	Part No.	Qty.	Description
1	215030000002	4	Nut M4-8-A2-70 GB/T 6170
2	215040000002	4	Washer 4-A2-70 GB/T 93
3	203080000472	1	Box, receptacle
4	215020000105	4	Screw M4×12-A2-70 GB/T 818

https://truckmanualshub.com/

8.11 EXTERNAL POWER INSTALLATION

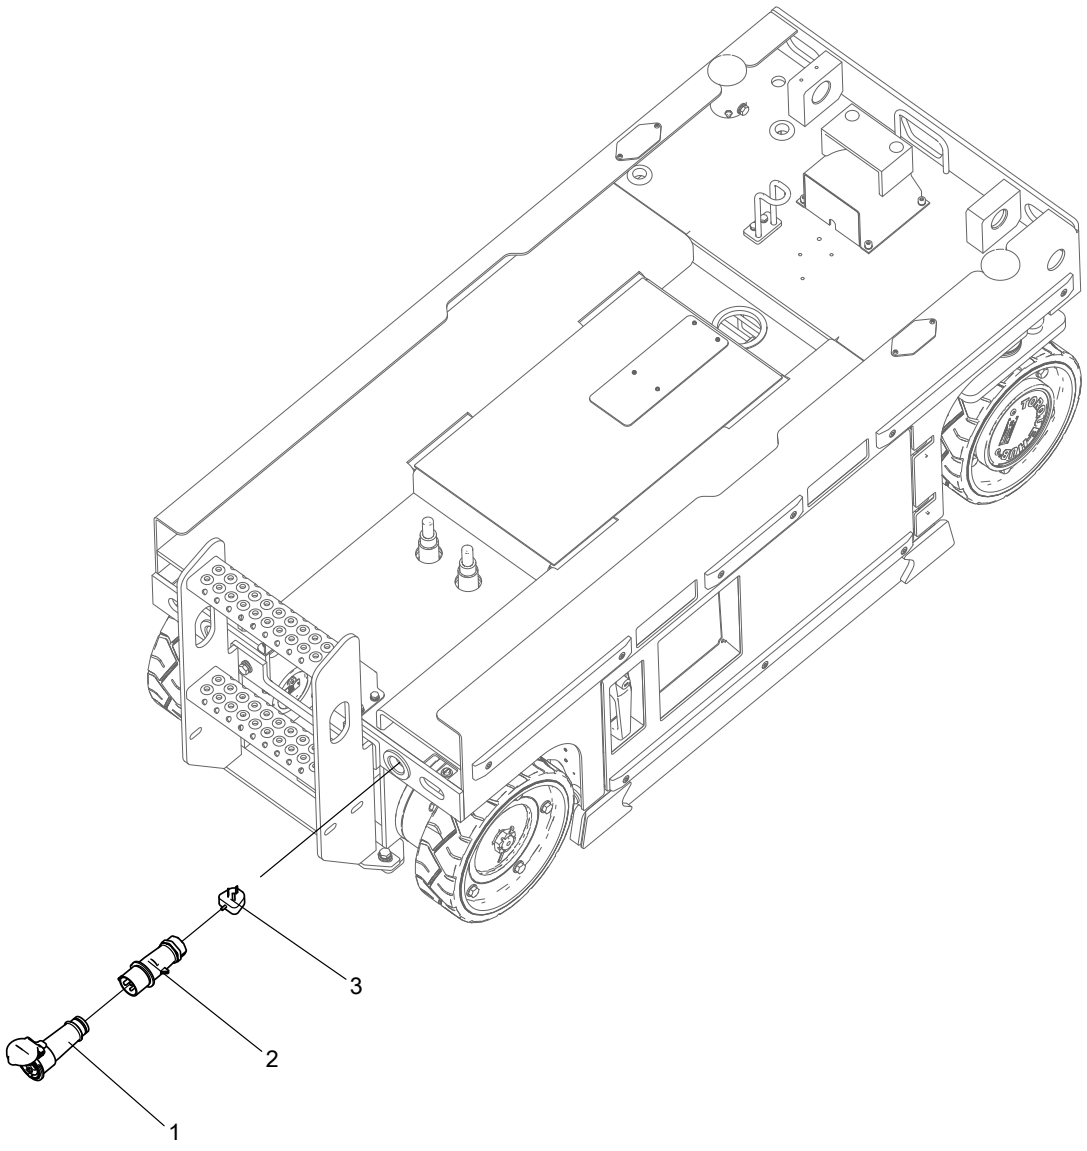

https://truckmanualshub.com/

No.	Part No.	Qty.	Description
	101055063036	1	AC Power Harness (Japanese Specs)(Not shown(Janpan))
	101055060015	1	AC Power Harness(Not shown(All specs))
1	203080000300	1	Industrial connector
2	203080000303	1	Electrical plug
3	101055063028	1	Options, AC input cord and plug
3-1	203080000532	1	AC input cord and plug (Type G, HongKong and Middle East specs)(Type G, HongKong and Middle East specs)
3-2	203080003043	1	AC input cord and plug (Type L, South American and Italian specs)(Type L, South American and Italian specs)
3-3	203080000534	1	AC input cord and plug (Type B, American and South American specs)(Type B, American and South American specs)
3-4	203080000537	1	AC input cord and plug (Type M, Macao specs)(Type M, Macao specs)
3-5	203080000530	1	AC input cord and plug (Type I, China and Australian specs)(Type I, China and Australian specs)
3-6	203080000538	1	AC input cord and plug (Type E+F, European and Brazilian specs)(Type E+F, European and Brazilian specs)
3-7	203080000539	1	AC input cord and plug (Type J, Swiss specs)(Type J, Swiss specs)

https://truckmanualshub.com/

Always for Better Access Solutions

Hunan Sinoboom Intelligent Equipment Co., Ltd.

No.128, East Jinzhou Avenue, Ningxiang High-tech Industrial Park, Changsha, Hunan, China

0086-0731-87116222 (Sales) & 0086-0731-87116333 (Service)
sales@sinoboom.com
www.sinoboom.com

North American Subsidiary

Sinoboom North American LLC

310 Mason Creek Drive
unit #100
Katy, TX 77450, US
Tel: (281) 729–5425
E-mail: info@sinoboom.us

Europe Subsidiary

Sinoboom B.V.

Nikkelstraat 26, NL-2984 AM Ridderkerk,
The Netherlands
Tel: +31 180 225 666
E-mail: info@sinoboom.eu

Korea Subsidiary

Sinoboom Korea Co., Ltd.

95, Docheong-ro, Yeongtong-gu, Suwon-si, Gyeonggi-do, Republic of Korea
Tel: 010–8310–8026
E-mail: ka1@sinoboom.com

Australia Subsidiary

Sinoboom Intelligent Equipment Pty Ltd.

50/358 Clarendon St, South Melbourne
VIC 3205, Australia
E-mail: au@sinoboom.com

Singapore Subsidiary

Star Access Solutions Pte. Ltd.

112 Robinson Road #03-01 Robinson 112
Singapore 068902

Poland Subsidiary

Sinoboom Poland sp. z o.o.

Ul. Bolesława Krzywoustego 74A
61-144 Poznań, Poland