https://truckmanualshub.com/

Parts Catalogue

T1104SC(US) / T1054SC(EU) / T954SC



제 작 일	2014.
작 성	
검 토	
승 인	

TYM 동양물산 기계사업부

Printed : 2014 Version : A
Part number of this book: 1874 950 001 0

https://truckmanualshub.com/

Important tips of Parts Catalogue

We thank you for your purchasing our product, manufactured under strict quality control, by gathering plenty of experiences and new technology, designed for a comport and pleasant work.

1. Part Composition

This catalogue deals with engine and chassis.

Detailed classifications are listed in the following page.



2.For locating parts easily,Please Note:

A.If you know the assembly where the part is used.

-Refer to the relevant figure from the identifying group symbol illustration,

-Locate the relevant chapter

-Refer to the particular chapter desired.

3. For ordering parts

To obtain spare parts please contact your nearest dealer and give him the details listed below.


①Tractor Model : Tractor T1054SC

②Tractor Serial Number : H00001

③Part Number : 18711032000

④Description : Air cleaner V9

⑤Quantity required: 1

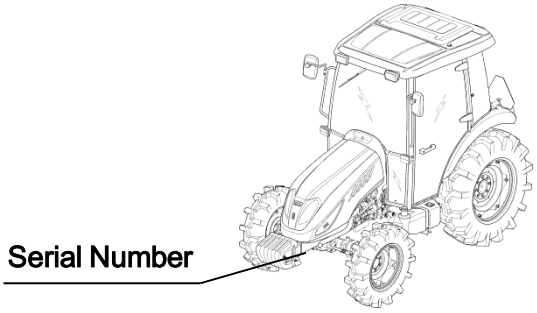

4. For ordering PARTS CATALOGUE

This is Priced item and one is to order the same on part No. 18749500010


This supersedes all our editions.

Note)When replacing parts, please use original spare parts to be sure of the performance and the longer life of the product

※The information in this catalogue may at any time be modified without a prior notice for the improvement of performance, please consult our spare parts dept. for the detailed inquiry.

5. How to use parts catalogue

FIG 301 ②	DAMPER FLANGE ASSY ③	P1 ④	Year ⑤ 2014	①

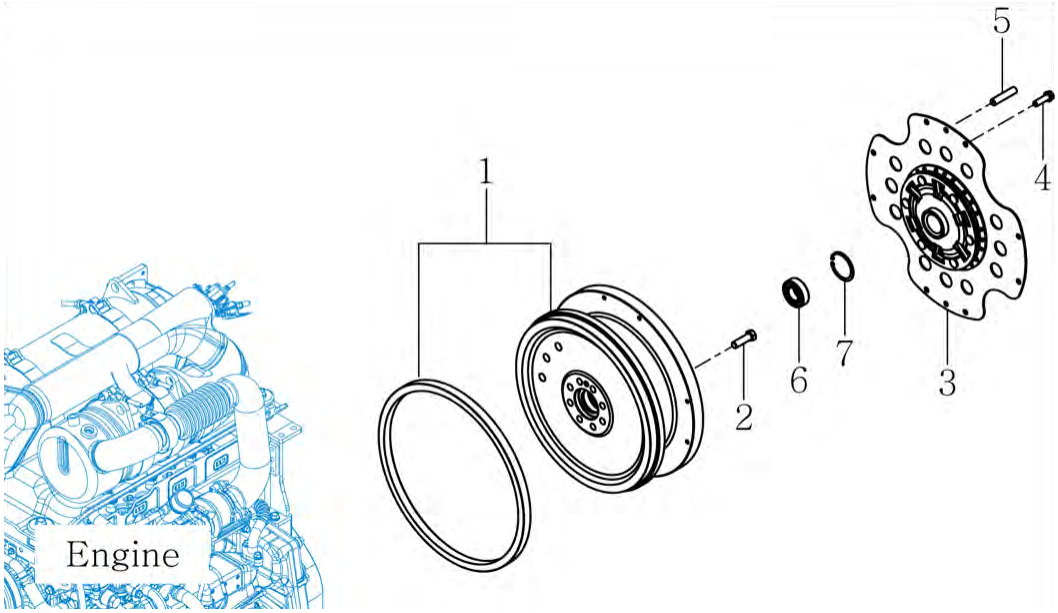

NOTE ⑬

FIG 301 ② T1054SC / T954SC	DAMPER FLANGE ASSY ③	P1 ④	YEAR ⑤ 2014	①

KEY NO.	PART NO.	DESCRIPSTION	SPEC.	QTY. T1054SC	QTY. T954SC	REPAIR	EFFECTIVE DATE	REMARKS
301 001	18711020100	FLYWHEEL ASSY		1	1			
301 002	18711210011	FLYWHEEL BOLT M12X55XP1.5		8	8			
301 003	19021202303	DAMPER FLANGE ASSY , 365		1	1			
301 004	V2173608020	BOLT , HEX/S	M8X16	8	8			
301 005	V5211008016	PIN , PARALLEL/B	8X16	2	2			
3 06	V60 205	BEARING , BALL		1	1			
301 007	V7051400520	C-RING , HOLE		1	1			

⑥ ⑦ ⑧ ⑨ ⑩ ⑪ ⑫ ⑭

NOTE ⑬

① Group Indication : Indicate the relevant location of the part with a symbol illustration.

② Figure Number: Indicate the relevant section of the machine with a figure number.

③ Section Name : Indicate the section name of the machine

④ Section Page : Page number of the section in this catalogue.

⑤ Date : Show the Year of the section made or updated

⑥ Key number : Indicating number of each parts in the illustration.

⑦ Part Number : Unique part number maintained in our system

The part number starting with V or M means it is TYM s standard part

The alphabet at the end of part number means the status of material or the color of paint

Legend : M:Machining, DG:Dark Gray, BR:Bright Red, SW:Summer White, PB:Pure Black, GB:Glossy Black, SR:Super Red, MS:Metallic Silver DD:Heat proof Black, TY: Tangerine Yellow etc.

⑧ Description : Description of a part, Abbreviation means as follows.

- Indicate the mixture condition of a part

ASSY : Assembly with a mixture of several parts, so can be broke up retaining their original form

COMP : Assembly with a mixture of several parts, but can not be broke up retaining their original form

SUB : mean the same as ASSY but used in lower level in aid.

SET : Part consist of ASSY, COMP, and part(s) as a group

- Indicate the location of a part

LH: Left, RH: Right, FR: Front, RR: Rear, UPR: Upper, LOW: Lower

⑨ Type : Type of the standard items like bolt or nut

⑩ Quantity : Total quantity of the part referred to in the page.

Symbol below indicate options. So, show the quantity of each option.

Note) AR means as requested quantity.

⑪ Repair Parts consumption frequency class: indicate the level of a part in aid of stocking spares, anticipating the service requirements.

A :Fast moving part(frequently required)

B :Medium moving part (sometimes required)

C :Slow moving part(rarely required)

⑫ Modification :

Year/Month~ : From which the change starts


~ Year/Month : To which the part installed

⑬ Notes : explain some reference data


⑭ Remark : indicate reference data or abbreviation in the content.

https://truckmanualshub.com/


ENGINEERING GROUP INDEX

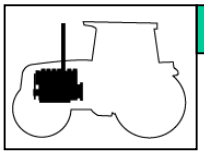


1 ENGINE

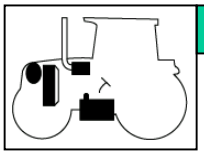


2 ENGINE ACCESSORIES & CONTROL

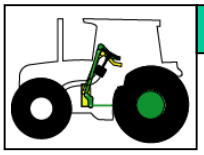


3 CLUTCH,BRAKE,STEERING

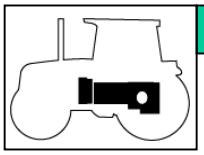


4 TRANSMISSION & REAR AXLE

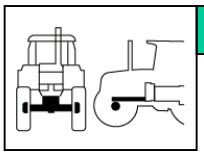


5 FRONT AXLE,SUPPORTER & DRIVE SHAFT

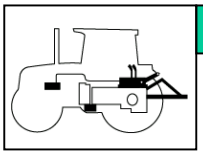


6 HYDRAULICS & 3-POINT LINK

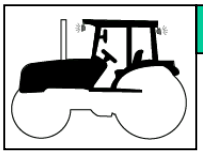


7 SHEET METAL & CABIN

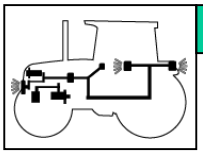

8 ELECTRICALS & HARNESS

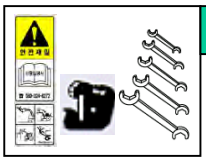

9 WEIGHT,LABEL,TOOLS

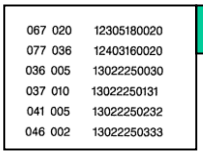

067 020 12305180020
077 036 12403160020
036 005 13022250030
037 010 13022250131
041 005 13022250232
046 002 13022250333

10 NUMERICAL INDEX

https://truckmanualshub.com/

CONTENTS

ENGINE

1 ENGINE

FIG 101 CYLINDER BLOCK ASSY ----------04
FIG 102 FLYWHEEL HOUSING ----------06
FIG 103 OIL SEAL HOLDER ----------08
FIG 104 RETURN HOSE ----------10
FIG 105 CRANKSHAFT ASSY ----------12
FIG 106 CONNECTING ROD ASSY ----------14
FIG 107 PISTON ASSY ----------16
FIG 108 CRANKSHAFT PULLEY ----------18
FIG 109 CYLINDER HEAD ASSY ----------20
FIG 110 CYLINDER HEAD COVER ASSY ----------22
FIG 111 EXHAUST VALVE INLET ----------24
FIG 112 ROCKER ARM SHAFT ASSY ----------26
FIG 113 PUSHROD ----------28
FIG 114 CAMSHAFT ASSY ----------30
FIG 115 IDLE GEAR ASSY ----------32
FIG 116 LUBRICATION PUMP ----------34
FIG 117 ENGINE OIL FILTER ASSY ----------36
FIG 118 OIL PAN ----------38
FIG 119 THERMOSTAT HOUSING ASSY ----------40
FIG 120 WATER PUMP ASSY ----------42
FIG 121 FAN MOUNTING BRACKET ----------44
FIG 122 EXHAUST MANIFOLD ASSY ----------46
FIG 123 INTAKE MANIFOLD ----------48
FIG 124 TURBO CHARGER ASSY ----------50
FIG 125 INTAKE STAKE ----------52
FIG 126 INJECTOR ----------54
FIG 127 COMMON RAIL ----------56
FIG 128 FUEL INJECTION PUMP ASSY ----------58
FIG 129 ECU ----------60
FIG 130 INJECTION PUMP DRIVE GEAR ----------62
FIG 131 FUEL TUBE ASSY ----------64
FIG 132 FUEL FILTER ASSY ----------66
FIG 133 EXHAUST FILTERING MUFFLER ----------68

https://truckmanualshub.com/

FIG 134 EGR VALVE ----------70
FIG 135 ALTERNATOR BRACKET ----------72
FIG 136 LIFTING HOOK ----------74
FIG 137 ALTERNATOR ----------76
FIG 138 STARTER ----------78
FIG 139 AIR HEATER ASSY ----------80
FIG 140 SENSOR ASSY ----------82
FIG 141 ENGINE HARNESS ASSY ----------84
FIG 142 PTO ASSY ----------86
FIG 143 MOUNTING BRACKET ----------88

CHASSIS

2 ENGINE ACCESSORIES & CONTROL

FIG 201 AIR CLEANER ----------94
FIG 202 RADIATOR ----------96
FIG 203 EXHAUST PIPE ----------100
FIG 205 FUEL TANK & FUEL LINES ----------102-01
FIG 206 CABLE,THROTTLE & ACCELERATOR ASSY ----------104
FIG 207 INTERCOOLER ----------106

3 CLUTCH, BRAKE, STEERING

FIG 301 DAMPER FLANGE ASSY ----------112
FIG 302 CASE SUB ASSY, BRAKE ----------114
FIG 303A BRAKE PIPES ----------116
FIG 303B BRAKE ----------118
FIG 304 FRONT WHEEL ----------120
FIG 305 REAR WHEEL ----------122
FIG 306 STEERING WHEEL ASSY ----------124
FIG 307 POWER STEERING VALVE ----------126
FIG 308 POWER STEERING CYLINDER ----------128
FIG 309 SUB CLUTCH PEDAL ----------130
FIG 310 HAND BRAKE SUB ----------132
FIG 311 DIFF-LOCK PEDAL ----------134

4 TRANSMISSION & REAR AXLE

FIG 401 CASE SUB, RR TRANSMISSION ----------140
FIG 402A METAL SUB ASSY, PINION ----------142
FIG 402B DIFF ASSY, RR ----------144
FIG 403 SUB CHANGE GEARS ----------146
FIG 404 SUB CHANGE LEVER ----------148
FIG 405 4WD DRIVE GEARS ----------150

FIG 406 HOUSING, RR AXLE ----------152
FIG 407 540,1000 PTO CASE ----------154
FIG 408A SHAFT, PTO ----------156
FIG 408B PTO CLUTCH ASSY ----------158
FIG 409 METAL SUB ASSY ----------160
FIG 410 CASE, MID TRANSMISSION ----------162
FIG 411 MAIN CHANGE GEARS ----------164
FIG 412 MAIN CHANGE LEVER ----------166
FIG 413 PARKING BRAKE ----------168
FIG 414 POWER SHUTTLE GEAR ----------170
FIG 415 POWER SHUTTLE COUNT GEAR ----------172
FIG 416 CASE, FR TRANSMISSION ----------174

5 FRONT AXLE,SUPPORTER & DRIVE SHAFT

FIG 501 FRONT AXLE SUPPORTER ----------180
FIG 502 FRONT DRIVE SHAFT ----------184
FIG 503 FRONT AXLE HOUSING ----------186
FIG 504 FRONT DIFFERENTIAL GEARS ----------188
FIG 505 FRONT GEAR CASE (1) ----------190
FIG 506 FRONT GEAR CASE (2) ----------192
FIG 507 FRONT GEAR CASE (3) ----------194

6 HYDRAULICS & 3P-LINK

FIG 601A VALVE SUB, SHIFT ----------200
FIG 601B VALVE SUB, MAIN ----------202
FIG 602 DRAWBAR ASSY ----------204
FIG 603A FILTER SUB, SUCTION ----------206
FIG 603B GEAR PUMP ASSY ----------208

FIG 604 CASE, CYLINDER ----------210
FIG 605 ARM SUB, LIFT MAIN CONTROL VALVE SUB ----------212
FIG 606 POSITION & DRAFT LINK ----------214
FIG 607A AUX VALVE & FILTER SUB ----------216
FIG 607B LEVER SUB, AUX ----------218
FIG 607C POSITION & DRAFT LEVER ----------220
FIG 608A HITCH & 3-POINT LINK ----------222
FIG 608B HITCH & 3-POINT LINK ----------224
FIG 608C LOWER LINK & LIFT ROD ----------226
FIG 609 HYDRAULIC PIPE & HOSES ----------228
FIG 610 JOYSTICK ----------230

7 SHEET METAL & CABIN

FIG 701 FRONT FRAME SUB ----------236
FIG 702 FRAME, HOOD ----------238
FIG 703 HOOD ----------240
FIG 704 STEP & BOOTS ----------242
FIG 705 FRONT & REAR MOUNTING ----------244
FIG 706 SEAT & MAT ----------246
FIG 708 DOOR-LH ----------248
FIG 709 DOOR-RH ----------250
FIG 710 FRAME COMP & FRONT GLASS ----------252
FIG 711 SIDE GLASS ----------254
FIG 712 REAR GLASS ----------256
FIG 713 SUB FENDER & COVER ----------258
FIG 714 REARVIEW MIRRORS ----------260
FIG 715 HEATER & AIR-CON (1) ----------262
FIG 716 HEATER & AIR-CON (2) ----------264
FIG 717 ROOF ----------266
FIG 718 CABIN INTERIOR ----------268
FIG 719 DASHCOVER ----------270
FIG 720 TANK ASSY, WASH ----------272

https://truckmanualshub.com/

FIG 721 ROOM MIRROR ASSY ----------274
FIG 722 COVER-FENDER&JOYSTICK LEVER ----------276

8 ELECTRICALS & HARNESS

FIG 801 BATTERY & MOUNTING ----------282
FIG 802 ELECTRIC SYSTEM (1) ----------284
FIG 803 ELECTRIC SYSTEM (2) ----------286
FIG 804 ELECTRIC SYSTEM (3) ----------288
FIG 805 ELECTRIC SYSTEM (4) ----------290
FIG 806 ELECTRIC SYSTEM (5) ----------292
FIG 807 ELECTRIC SYSTEM (5) ----------294

9 WEIGHT, LABEL& TOOLS

FIG 901 TOOL & ACCESSORY ----------300
FIG 902 WEIGHT ----------302
FIG 903A LABEL ----------304
FIG 903B LABEL ----------306

10 NUMERICAL INDEX

ENGINE ----------311
CHASSIS ----------314

https://truckmanualshub.com/

ENGINE

1 ENGINE

FIG 101 CYLINDER BLOCK ASSY ----------04
FIG 102 FLYWHEEL HOUSING ----------06
FIG 103 OIL SEAL HOLDER ----------08
FIG 104 RETURN HOSE ----------10
FIG 105 CRANKSHAFT ASSY ----------12
FIG 106 CONNECTING ROD ASSY ----------14
FIG 107 PISTON ASSY ----------16
FIG 108 CRANKSHAFT PULLEY ----------18
FIG 109 CYLINDER HEAD ASSY ----------20
FIG 110 CYLINDER HEAD COVER ASSY ----------22
FIG 111 EXHAUST VALVE INLET ----------24
FIG 112 ROCKER ARM SHAFT ASSY ----------26
FIG 113 PUSHROD ----------28
FIG 114 CAMSHAFT ASSY ----------30
FIG 115 IDLE GEAR ASSY ----------32
FIG 116 LUBRICATION PUMP ----------34
FIG 117 ENGINE OIL FILTER ASSY ----------36
FIG 118 OIL PAN ----------38
FIG 119 THERMOSTAT HOUSING ASSY ----------40
FIG 120 WATER PUMP ASSY ----------42
FIG 121 FAN MOUNTING BRACKET ----------44
FIG 122 EXHAUST MANIFOLD ASSY ----------46
FIG 123 INTAKE MANIFOLD ----------48
FIG 124 TURBO CHARGER ASSY ----------50
FIG 125 INTAKE STAKE ----------52
FIG 126 INJECTOR ----------54
FIG 127 COMMON RAIL ----------56
FIG 128 FUEL INJECTION PUMP ASSY ----------58
FIG 129 ECU ----------60
FIG 130 INJECTION PUMP DRIVE GEAR ----------62
FIG 131 FUEL TUBE ASSY ----------64
FIG 132 FUEL FILTER ASSY ----------66
FIG 133 EXHAUST FILTERING MUFFLER ----------68

https://truckmanualshub.com/

FIG 134 EGR VALVE ----------70
FIG 135 ALTERNATOR BRACKET ----------72
FIG 136 LIFTING HOOK ----------74
FIG 137 ALTERNATOR ----------76
FIG 138 STARTER ----------78
FIG 139 AIR HEATER ASSY ----------80
FIG 140 SENSOR ASSY ----------82
FIG 141 ENGINE HARNESS ASSY ----------84
FIG 142 PTO ASSY ----------86
FIG 143 MOUNTING BRACKET ----------88

https://truckmanualshub.com/

2 ENGINE ACCESSORIES & CONTROL

FIG 201 AIR CLEANER ----------94
FIG 202 RADIATOR ----------96
FIG 203 EXHAUST PIPE ----------100
FIG 205 FUEL TANK & FUEL LINES ----------102-01
FIG 206 CABLE,THROTTLE & ACCELERATOR ASSY ----------104
FIG 207 INTERCOOLER ----------106

https://truckmanualshub.com/

3 CLUTCH, BRAKE, STEERING

FIG 301 DAMPER FLANGE ASSY ----------112
FIG 302 CASE SUB ASSY, BRAKE ----------114
FIG 303A BRAKE PIPES ----------116
FIG 303B BRAKE ----------118
FIG 304 FRONT WHEEL ----------120
FIG 305 REAR WHEEL ----------122
FIG 306 STEERING WHEEL ASSY ----------124
FIG 307 POWER STEERING VALVE ----------126
FIG 308 POWER STEERING CYLINDER ----------128
FIG 309 SUB CLUTCH PEDAL ----------130
FIG 310 HAND BRAKE SUB ----------132
FIG 311 DIFF-LOCK PEDAL ----------134

https://truckmanualshub.com/

4 TRANSMISSION & REAR AXLE

FIG 401 CASE SUB, RR TRANSMISSION ----------140
FIG 402A METAL SUB ASSY, PINION ----------142
FIG 402B DIFF ASSY, RR ----------144
FIG 403 SUB CHANGE GEARS ----------146
FIG 404 SUB CHANGE LEVER ----------148
FIG 405 4WD DRIVE GEARS ----------150
FIG 406 HOUSING, RR AXLE ----------152
FIG 407 540,1000 PTO CASE ----------154
FIG 408A SHAFT, PTO ----------156
FIG 408B PTO CLUTCH ASSY ----------158
FIG 409 METAL SUB ASSY ----------160
FIG 410 CASE, MID TRANSMISSION ----------162
FIG 411 MAIN CHANGE GEARS ----------164
FIG 412 MAIN CHANGE LEVER ----------166
FIG 413 PARKING BRAKE ----------168
FIG 414 POWER SHUTTLE GEAR ----------170
FIG 415 POWER SHUTTLE COUNT GEAR ----------172
FIG 416 CASE, FR TRANSMISSION ----------174

https://truckmanualshub.com/

5 FRONT AXLE,SUPPORTER & DRIVE SHAFT

FIG 501 FRONT AXLE SUPPORTER ----------180
FIG 502 FRONT DRIVE SHAFT ----------184
FIG 503 FRONT AXLE HOUSING ----------186
FIG 504 FRONT DIFFERENTIAL GEARS ----------188
FIG 505 FRONT GEAR CASE (1) ----------190
FIG 506 FRONT GEAR CASE (2) ----------192
FIG 507 FRONT GEAR CASE (3) ----------194

https://truckmanualshub.com/

6 HYDRAULICS & 3P-LINK

FIG 601A VALVE SUB, SHIFT ----------200
FIG 601B VALVE SUB, MAIN ----------202
FIG 602 DRAWBAR ASSY ----------204
FIG 603A FILTER SUB, SUCTION ----------206
FIG 603B GEAR PUMP ASSY ----------208
FIG 604 CASE, CYLINDER ----------210
FIG 605 ARM SUB, LIFT MAIN CONTROL VALVE SUB ----------212
FIG 606 POSITION & DRAFT LINK ----------214
FIG 607A AUX VALVE & FILTER SUB ----------216
FIG 607B LEVER SUB, AUX ----------218
FIG 607C POSITION & DRAFT LEVER ----------220
FIG 608A HITCH & 3-POINT LINK ----------222
FIG 608B HITCH & 3-POINT LINK ----------224
FIG 608C LOWER LINK & LIFT ROD ----------226
FIG 609 HYDRAULIC PIPE & HOSES ----------228
FIG 610 JOYSTICK ----------230

https://truckmanualshub.com/

7 SHEET METAL & CABIN

FIG 701 FRONT FRAME SUB ----------236
FIG 702 FRAME, HOOD ----------238
FIG 703 HOOD ----------240
FIG 704 STEP & BOOTS ----------242
FIG 705 FRONT & REAR MOUNTING ----------244
FIG 706 SEAT & MAT ----------246
FIG 708 DOOR-LH ----------248
FIG 709 DOOR-RH ----------250
FIG 710 FRAME COMP & FRONT GLASS ----------252
FIG 711 SIDE GLASS ----------254
FIG 712 REAR GLASS ----------256
FIG 713 SUB FENDER & COVER ----------258
FIG 714 REARVIEW MIRRORS ----------260
FIG 715 HEATER & AIR-CON (1) ----------262
FIG 716 HEATER & AIR-CON (2) ----------264
FIG 717 ROOF ----------266
FIG 718 CABIN INTERIOR ----------268
FIG 719 DASHCOVER ----------270
FIG 720 TANK ASSY, WASH ----------272
FIG 721 ROOM MIRROR ASSY ----------274
FIG 722 COVER-FENDER&JOYSTICK LEVER ----------276

https://truckmanualshub.com/

8 ELECTRICALS & HARNESS

FIG 801 BATTERY & MOUNTING ----------282
FIG 802 ELECTRIC SYSTEM (1) ----------284
FIG 803 ELECTRIC SYSTEM (2) ----------286
FIG 804 ELECTRIC SYSTEM (3) ----------288
FIG 805 ELECTRIC SYSTEM (4) ----------290
FIG 806 ELECTRIC SYSTEM (5) ----------292
FIG 807 ELECTRIC SYSTEM (5) ----------294

https://truckmanualshub.com/

9 WEIGHT, LABEL& TOOLS

FIG 901 TOOL & ACCESSORY ----------300
FIG 902 WEIGHT ----------302
FIG 903A LABEL ----------304
FIG 903B LABEL ----------306

https://truckmanualshub.com/

10 NUMERICAL INDEX

ENGINE ---------- 311
CHASSIS ---------- 314

FIG 101


T1104SC / T1054SC / T954SC


CYLINDER BLOCK ASSY


P1


YEAR

2014

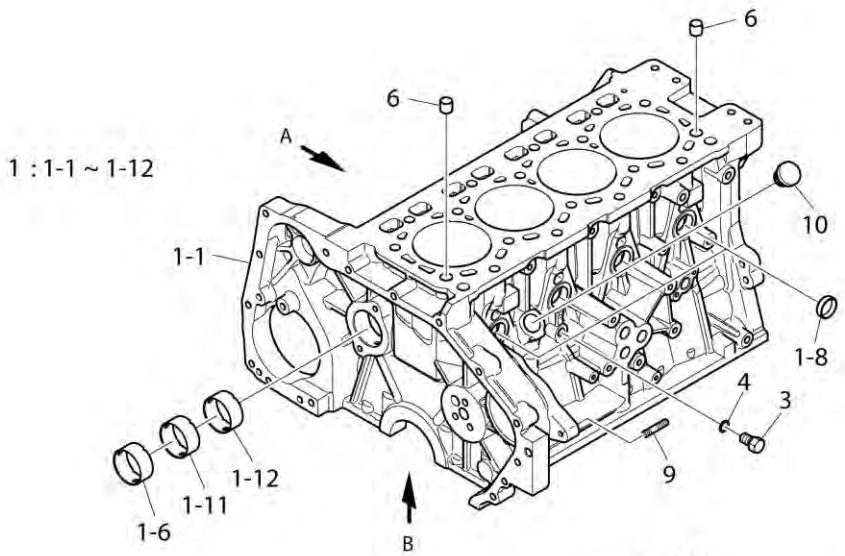

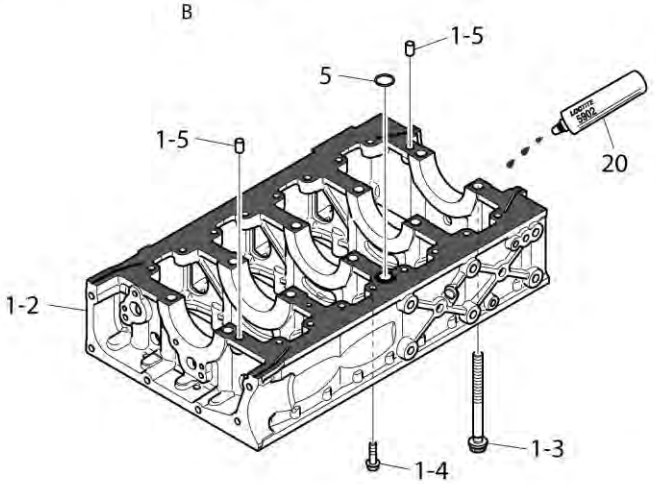

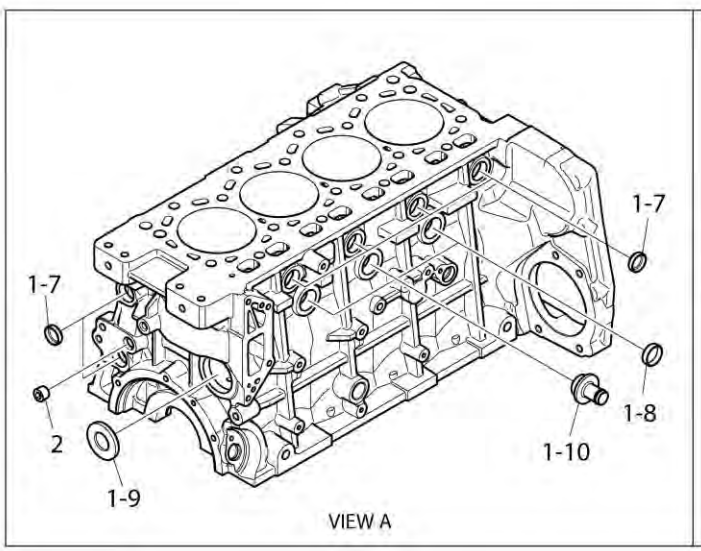

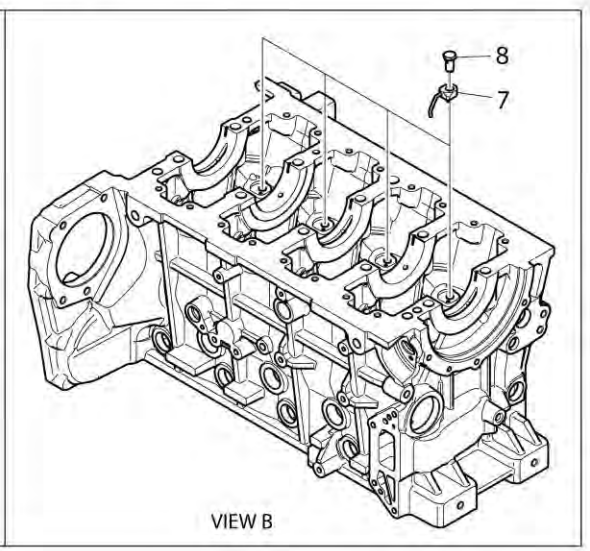

NOTE

FIG 102


T1104SC / T1054SC / T954SC

FLYWHEEL HOUSING

P1

YEAR

2014

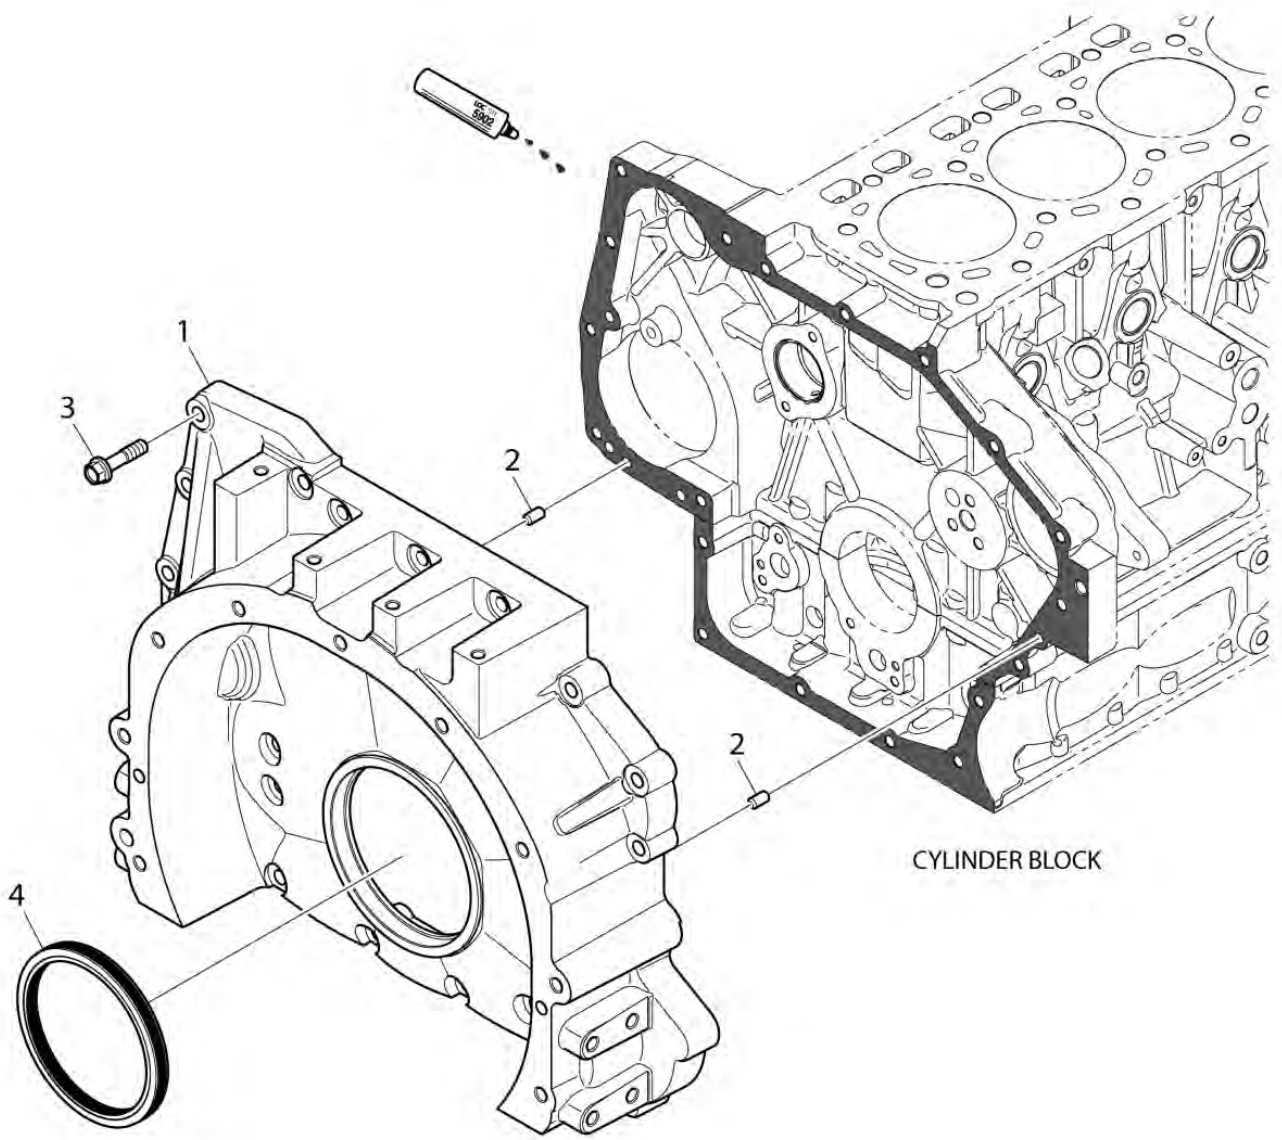

NOTE

FIG 103


T1104SC / T1054SC / T954SC

OIL SEAL HOLDER

P1

YEAR


2014

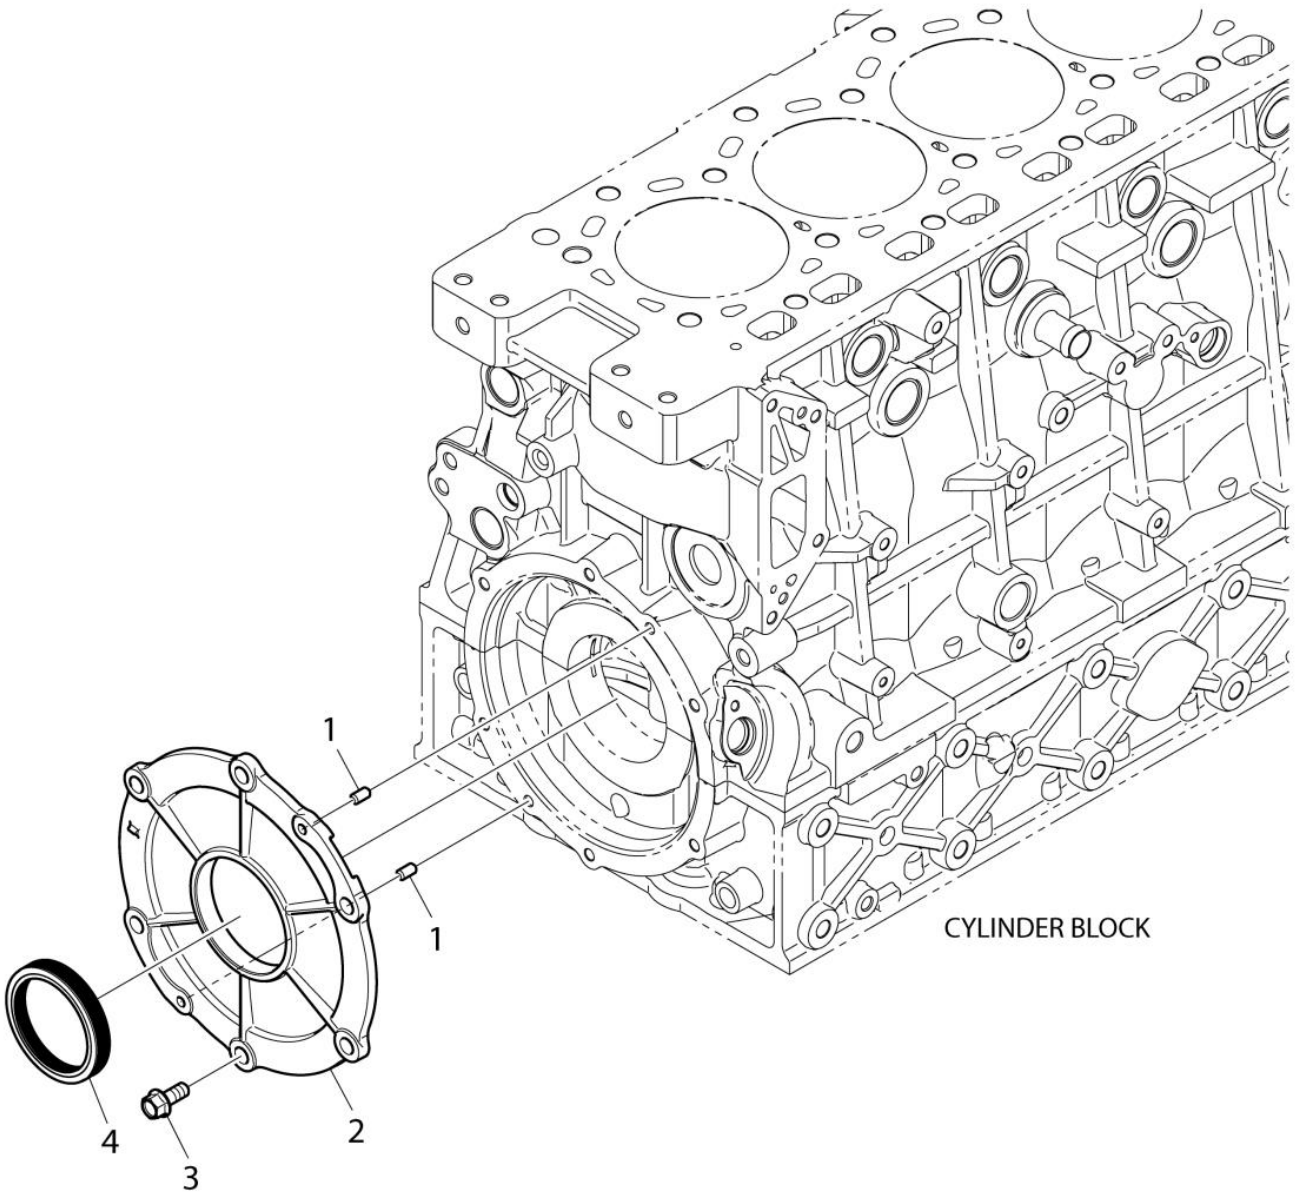

NOTE

https://truckmanualshub.com/

FIG 104 T1104SC / T1054SC / T954SC	RETURN HOSE	P1	YEAR 2014	

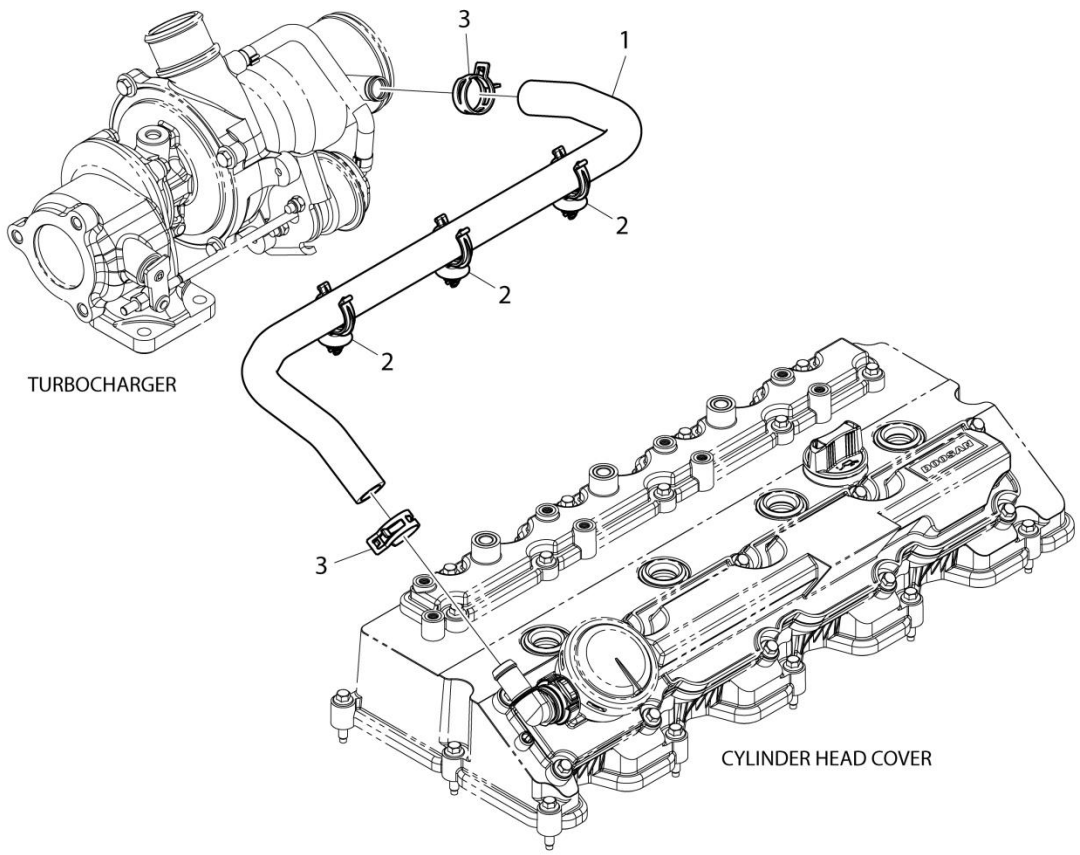

NOTE	

https://truckmanualshub.com/

FIG 105


T1104SC / T1054SC / T954SC

CRANKSHAFT ASSY

P1

YEAR

2014

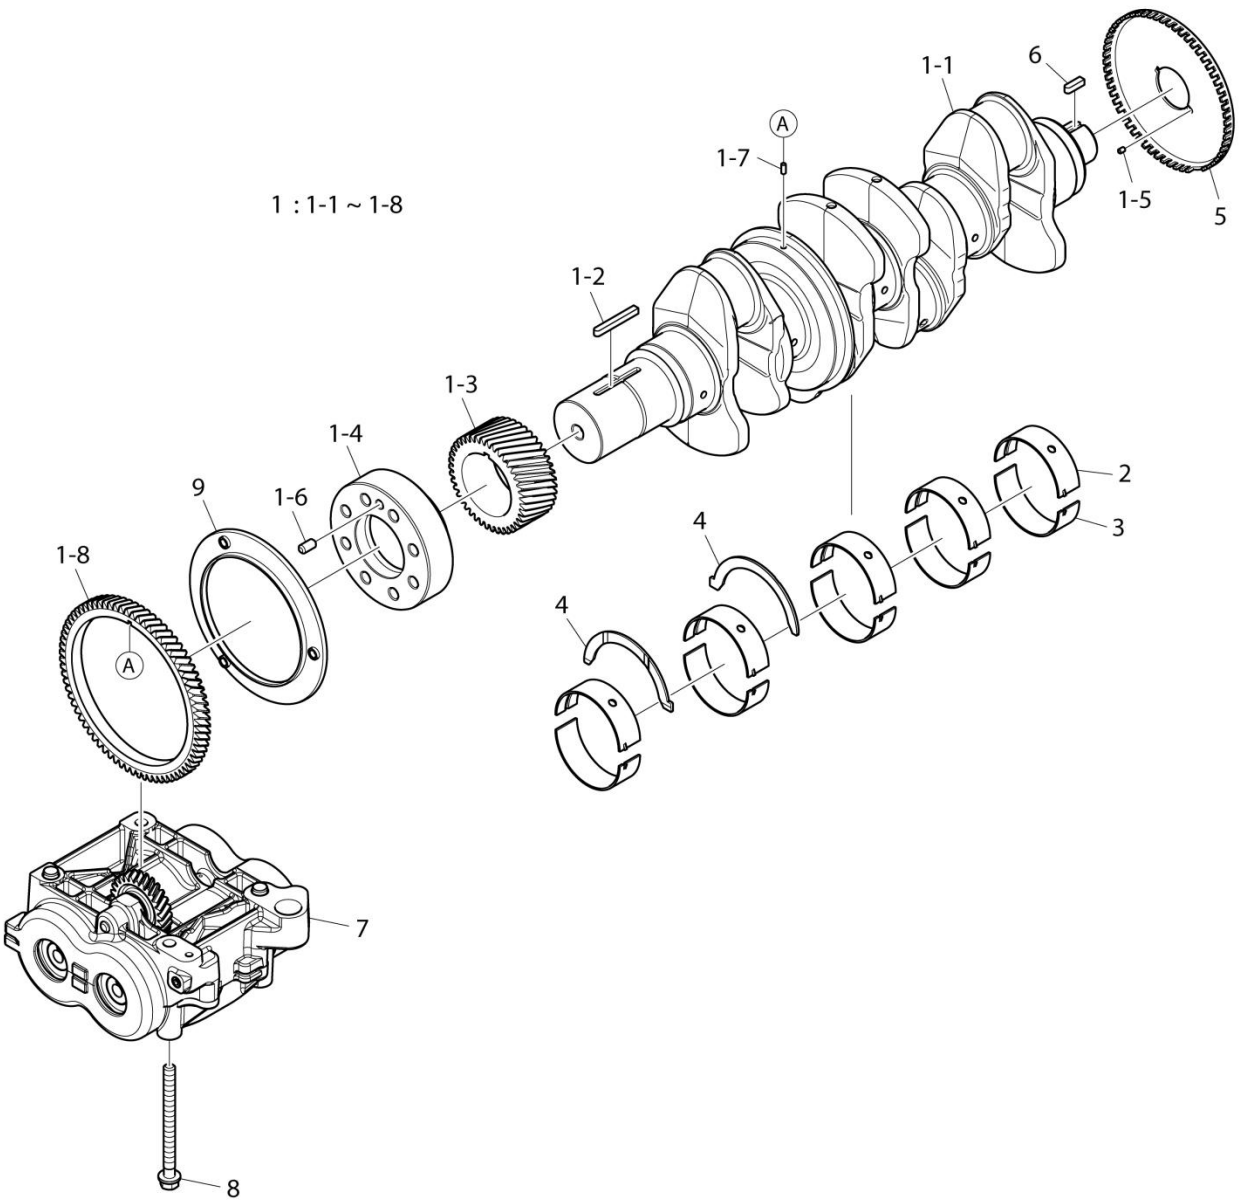

NOTE

FIG 106


T1104SC / T1054SC / T954SC

CONNECTING ROD ASSY

P1


YEAR

2014

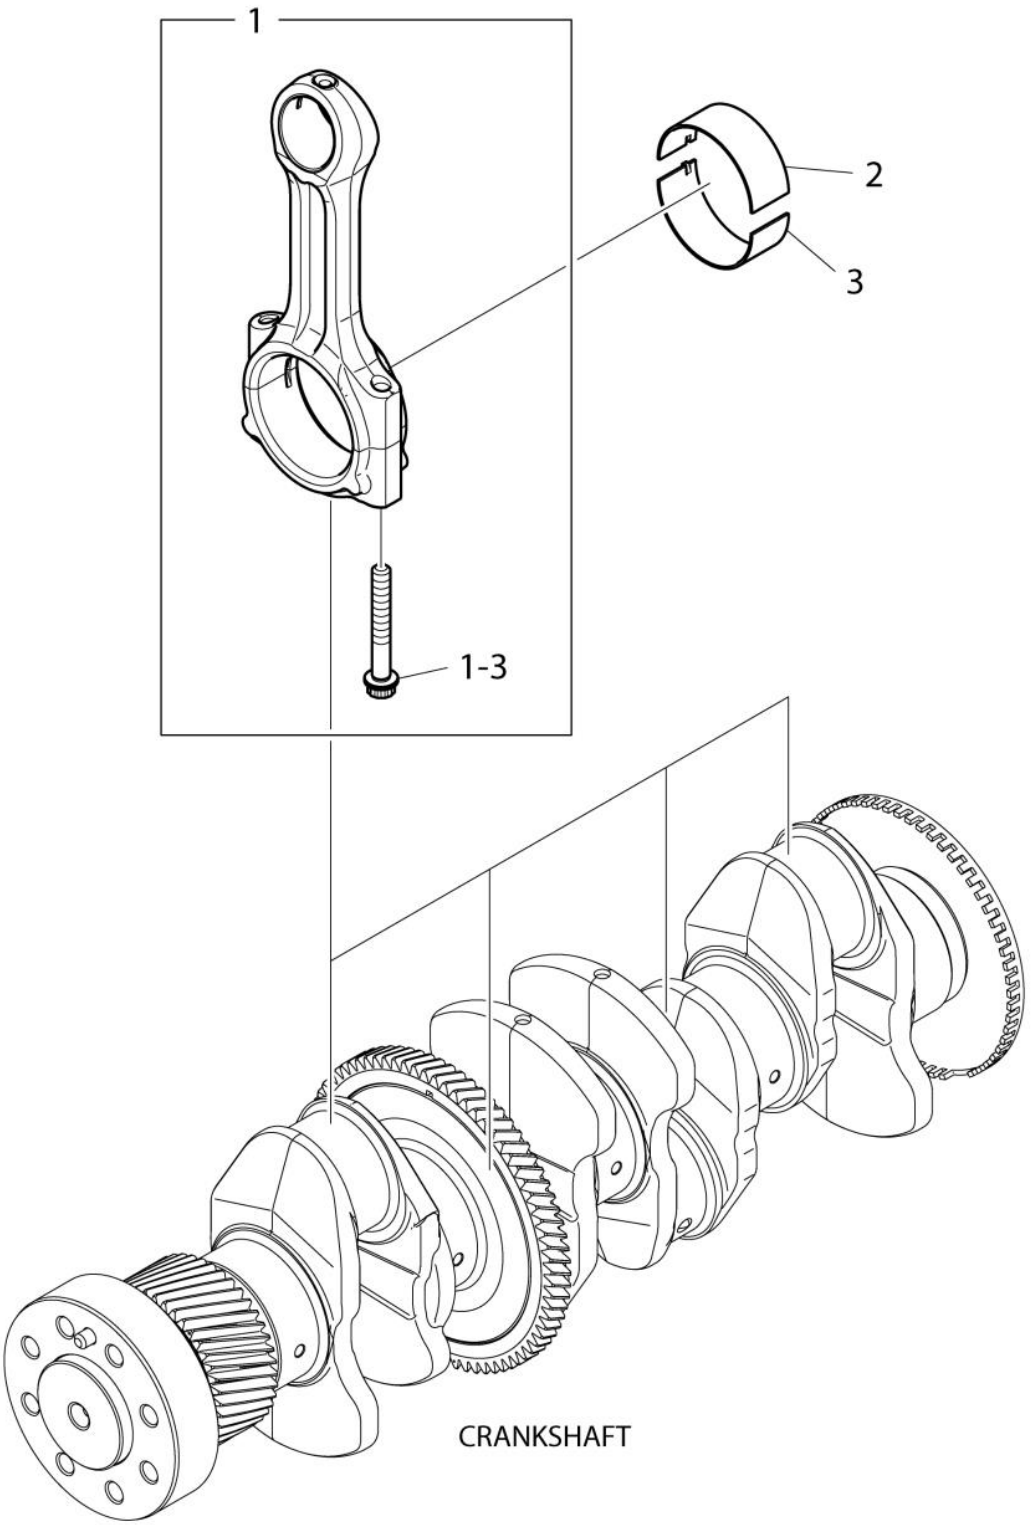

NOTE


FIG 107 T1104SC / T1054SC / T954SC	PISTON ASSY	P1	YEAR 2014	

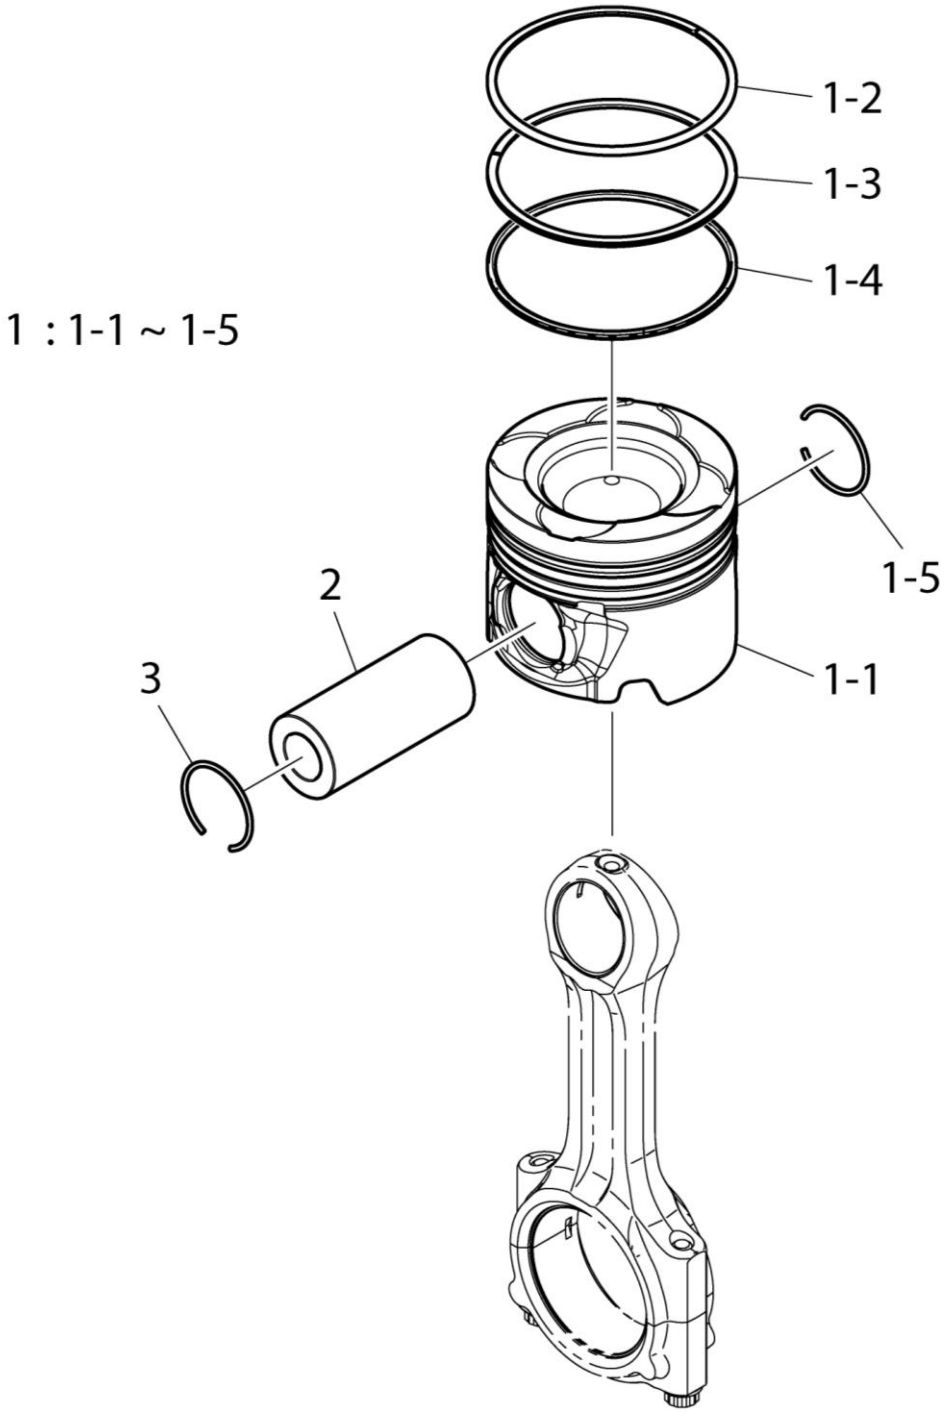

NOTE	

https://truckmanualshub.com/

FIG 108 T1104SC / T1054SC / T954SC	CRANKSHAFT PULLEY	P1	YEAR 2014	

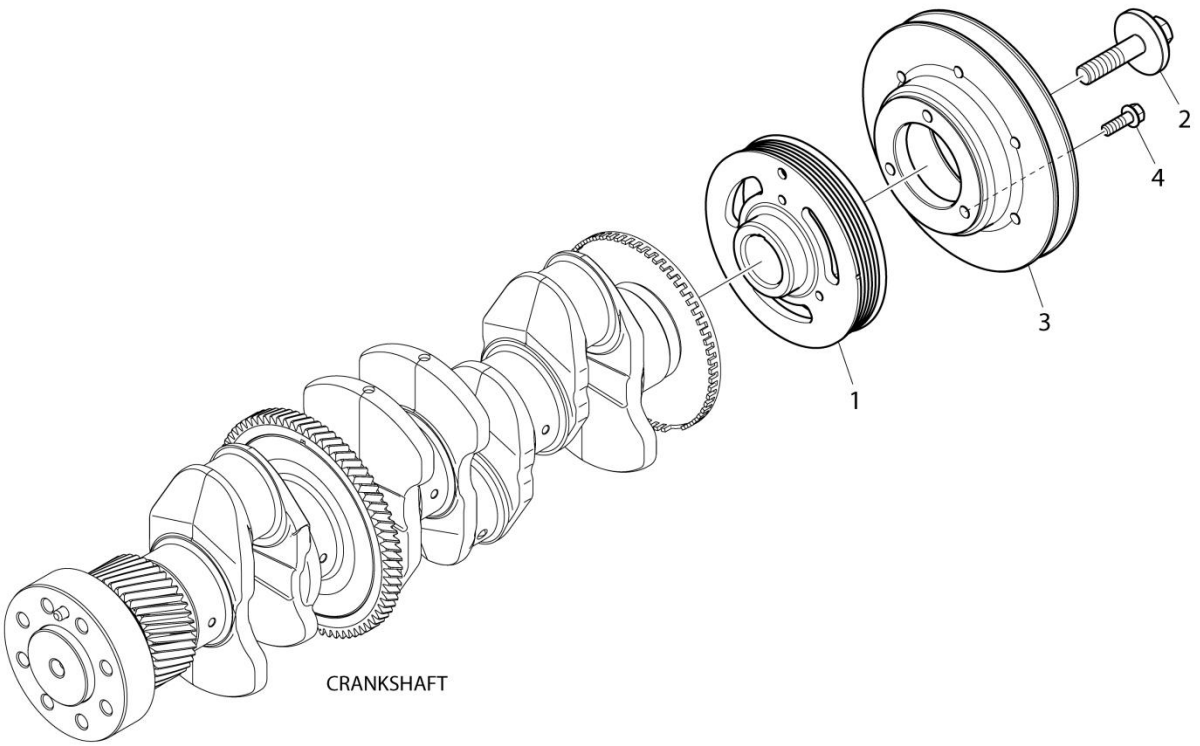

NOTE

FIG 109


T1104SC / T1054SC / T954SC


CYLINDER HEAD ASSY


P1

YEAR

2014

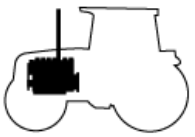

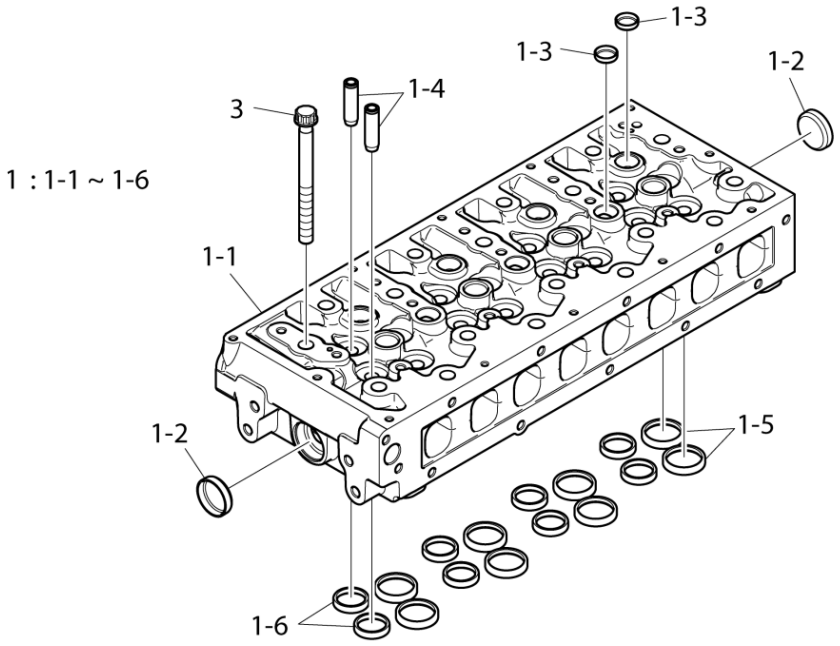

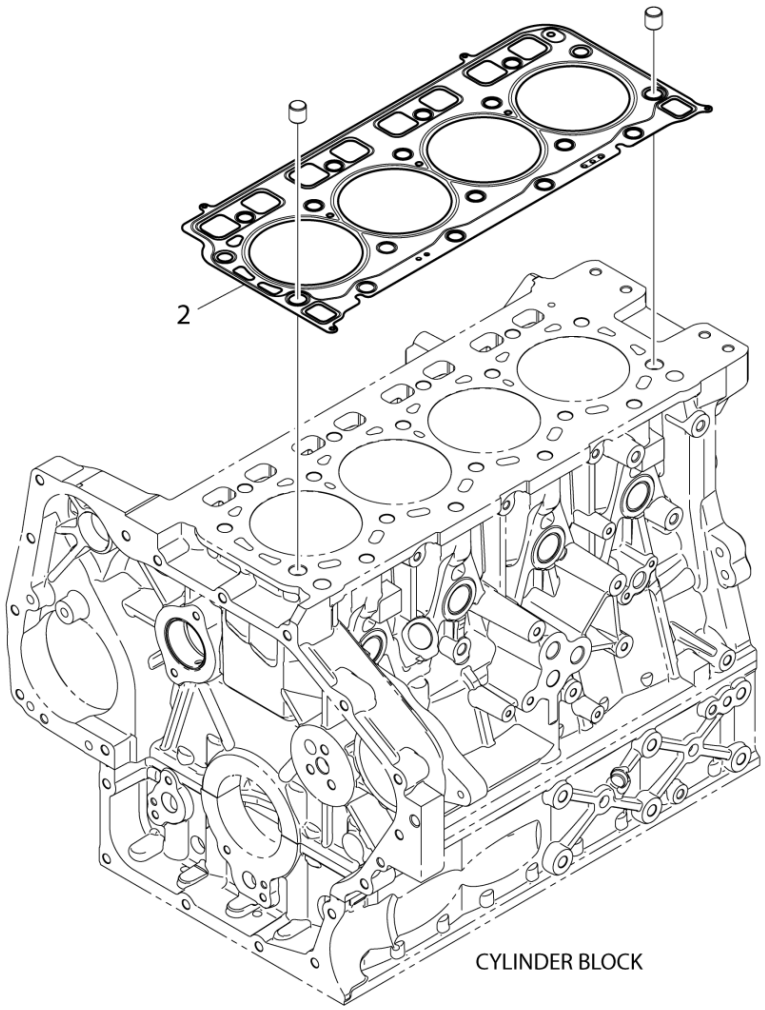

NOTE

FIG 110


T1104SC / T1054SC / T954SC


CYLINDER HEAD COVER ASSY

P1

YEAR

2014

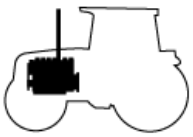


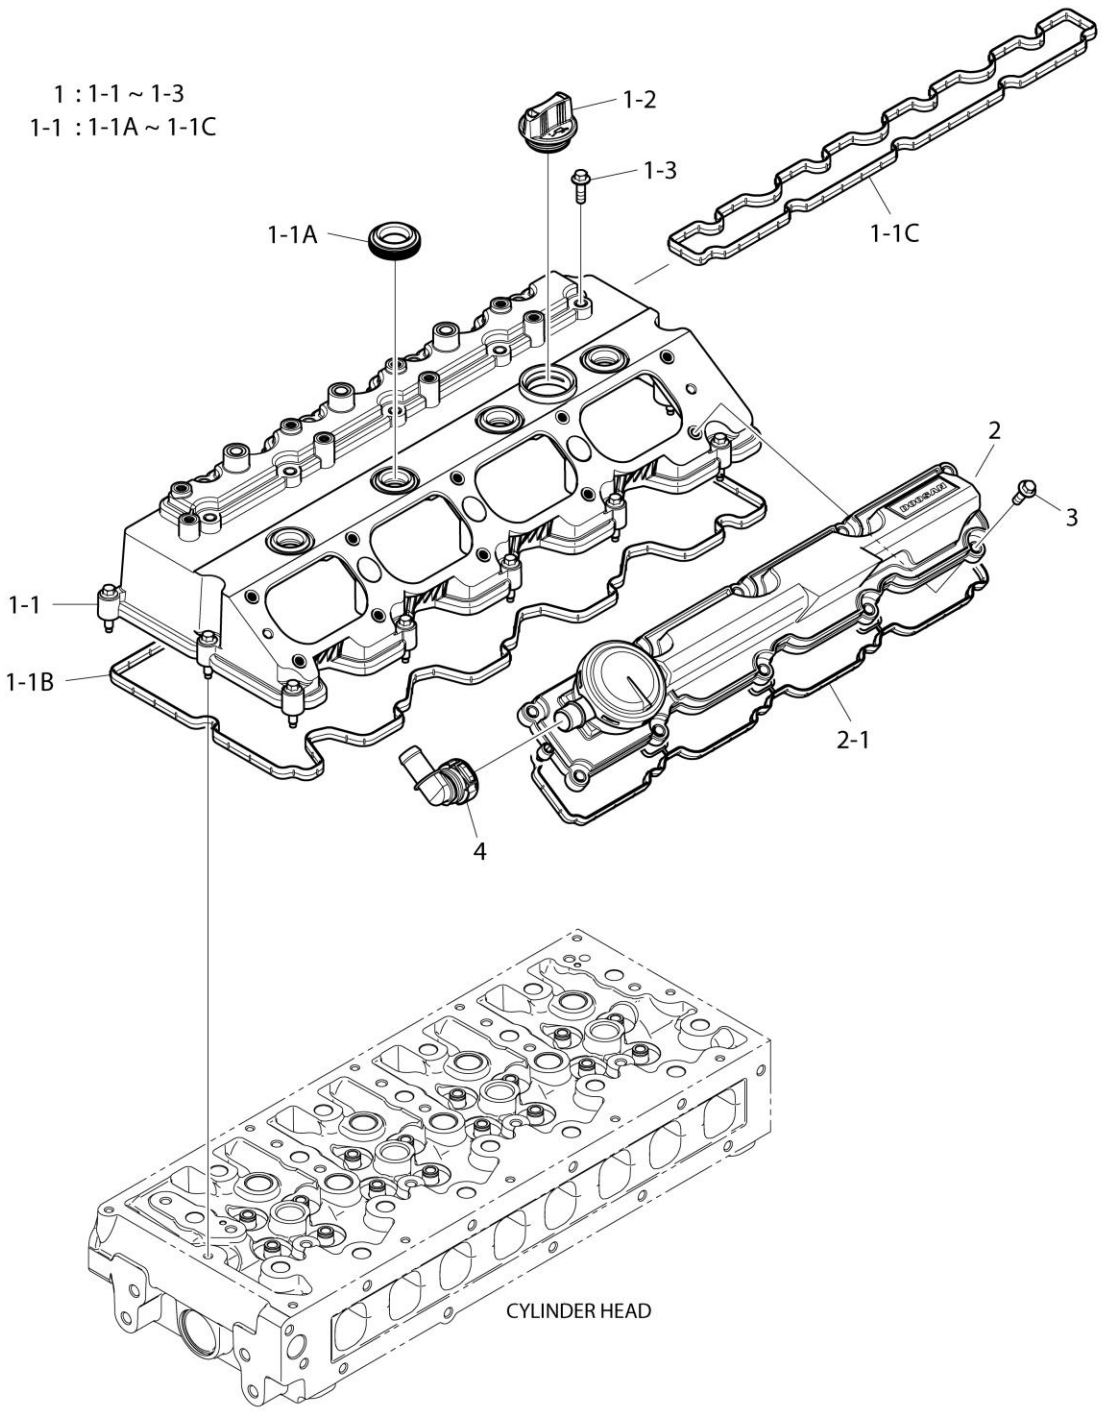

NOTE

https://truckmanualshub.com/

FIG 111 T1104SC / T1054SC / T954SC	EXHAUST VALVE INLET	P1	YEAR 2014	

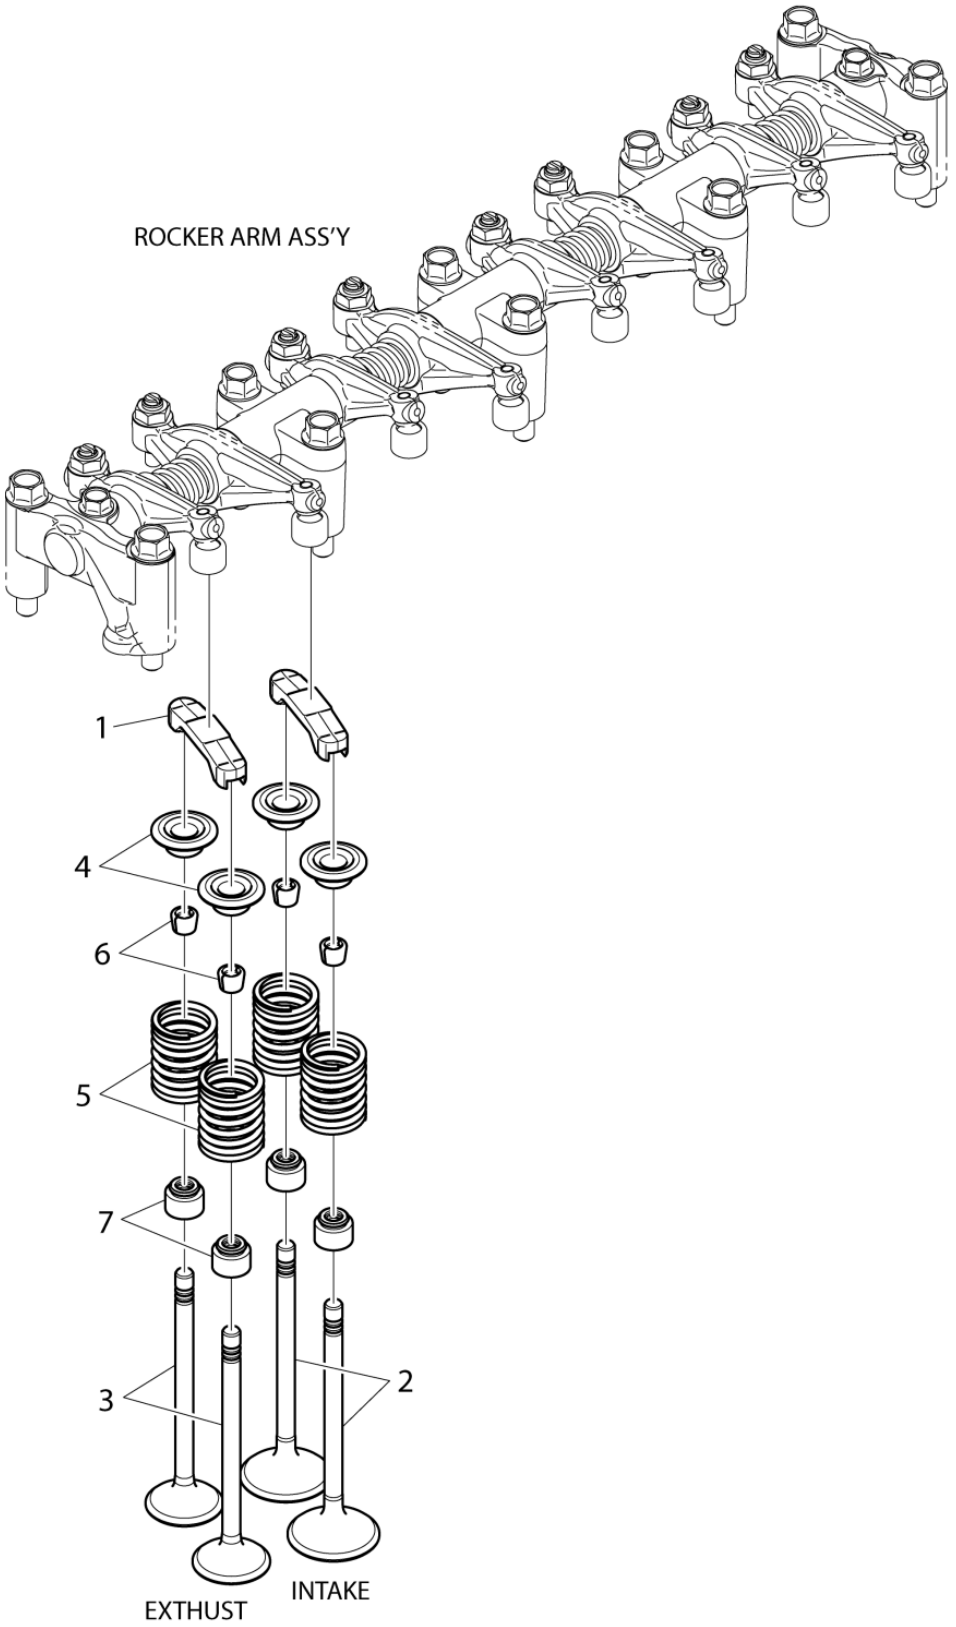

NOTE	

FIG 112


T1104SC / T1054SC / T954SC

ROCKER ARM SHAFT ASSY


P1


YEAR

2014

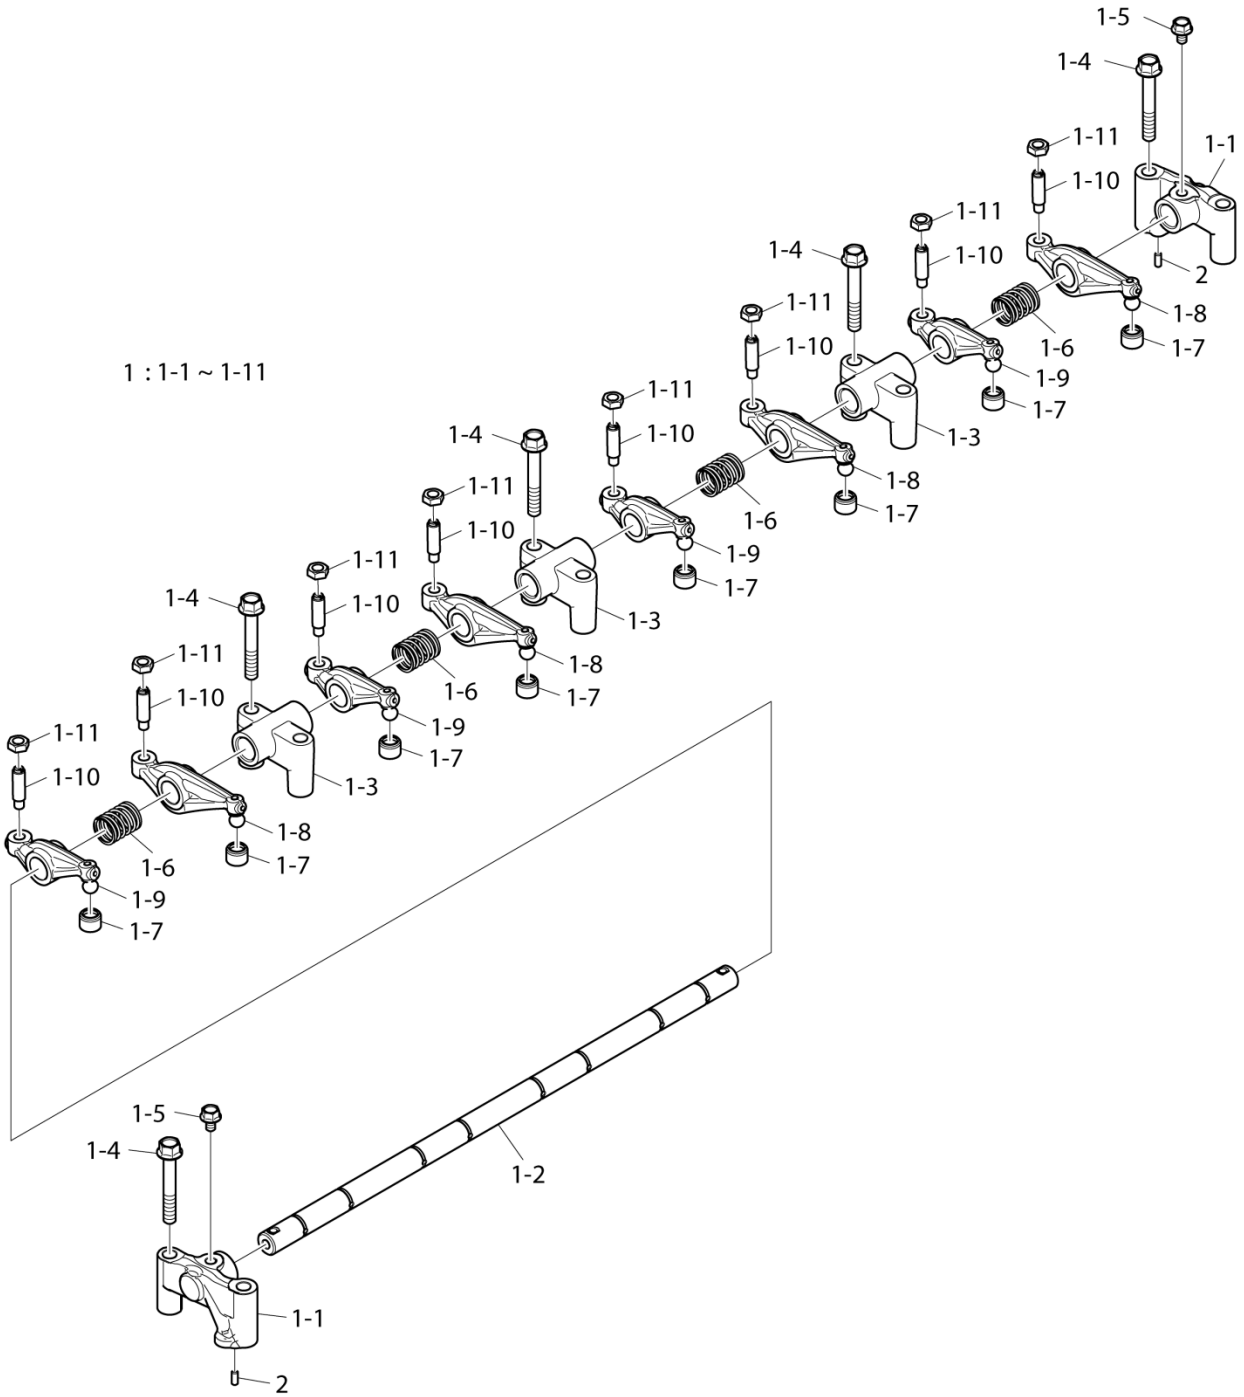



NOTE

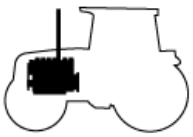FIG 113 T1104SC / T1054SC / T954SC	PUSHROD	P1	YEAR 2014	

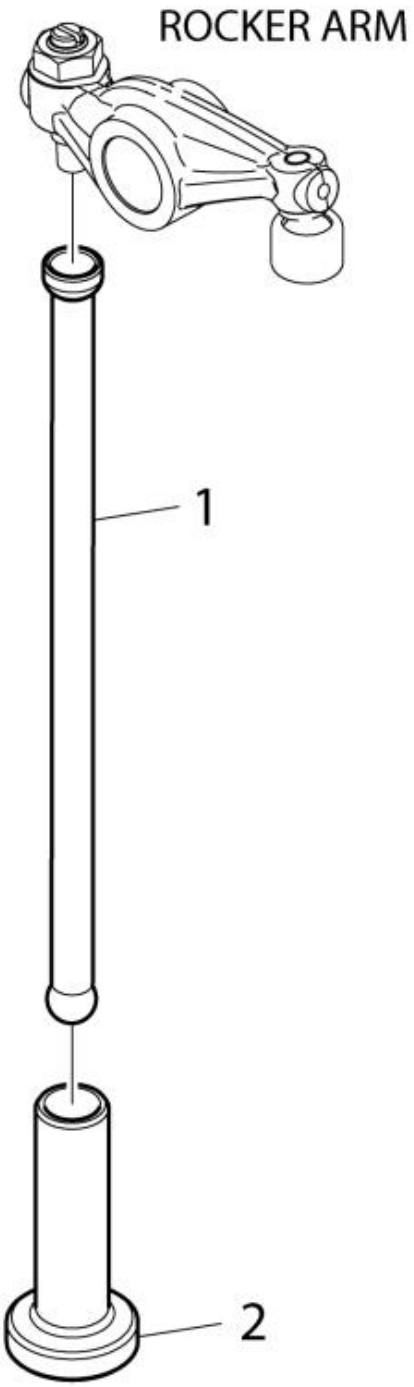

NOTE	

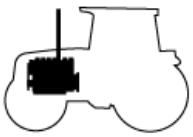FIG 114 T1104SC / T1054SC / T954SC	CAMSHAFT ASSY	P1	YEAR 2014	

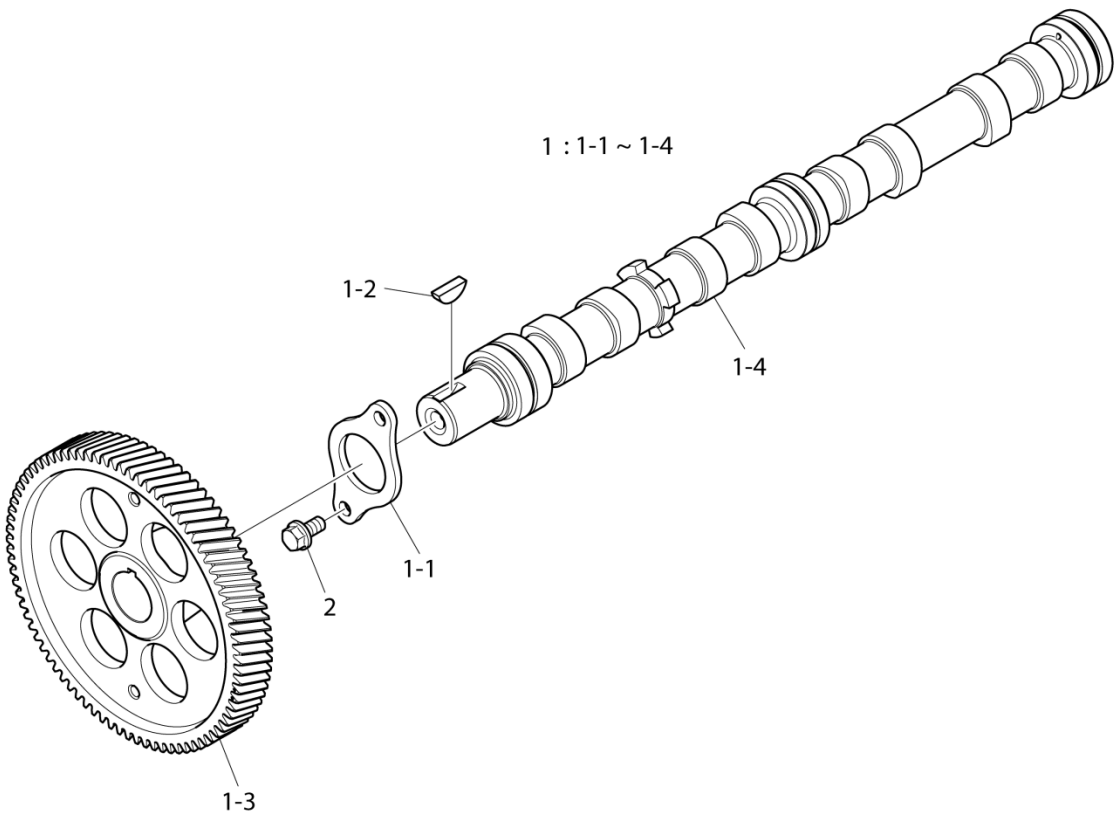

NOTE	

FIG 115


T1104SC / T1054SC / T954SC

IDLE GEAR ASSY

P1

YEAR

2014

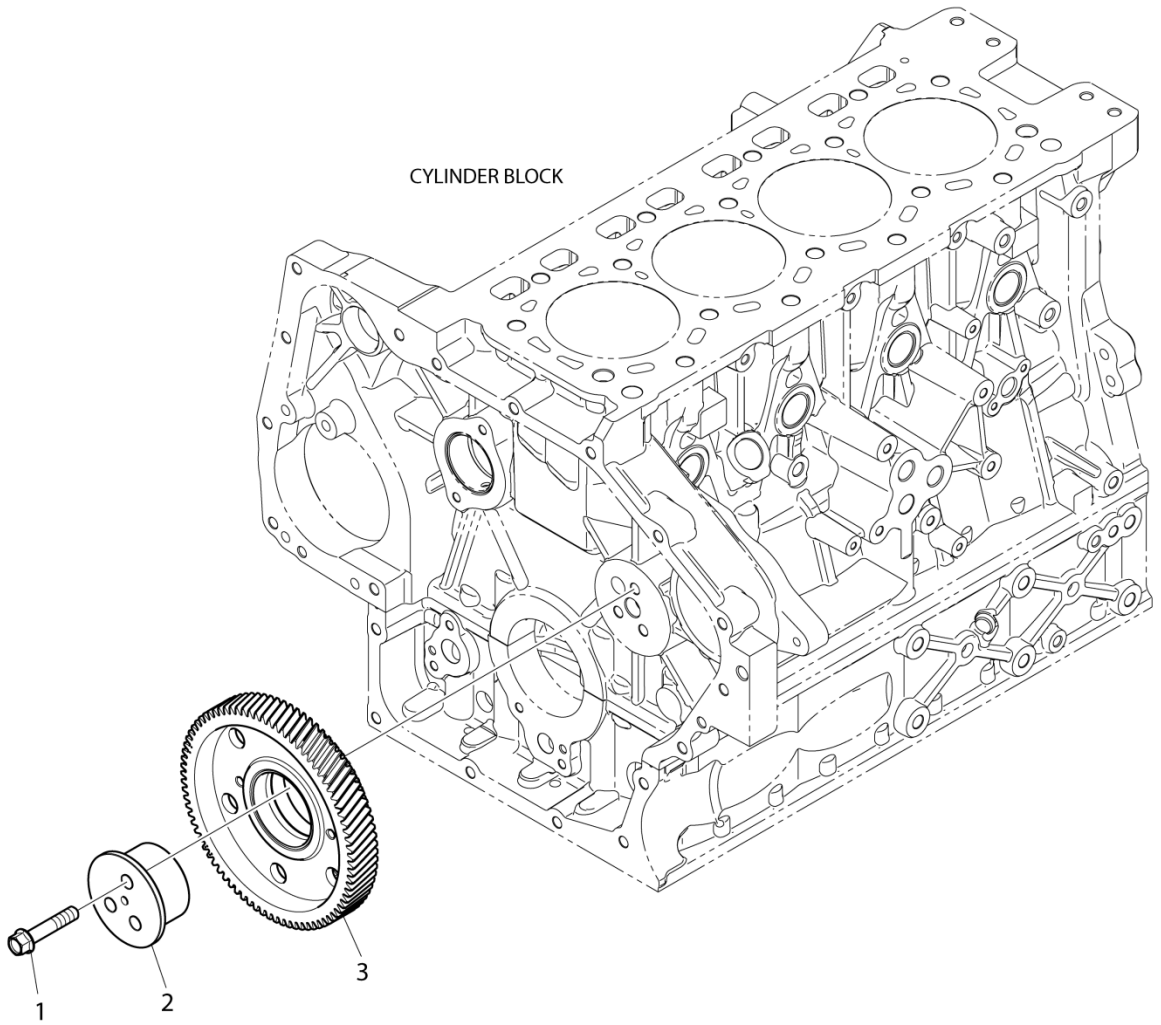

NOTE

https://truckmanualshub.com/

FIG 116


T1104SC / T1054SC / T954SC

LUBRICATION PUMP

P1


YEAR

2014

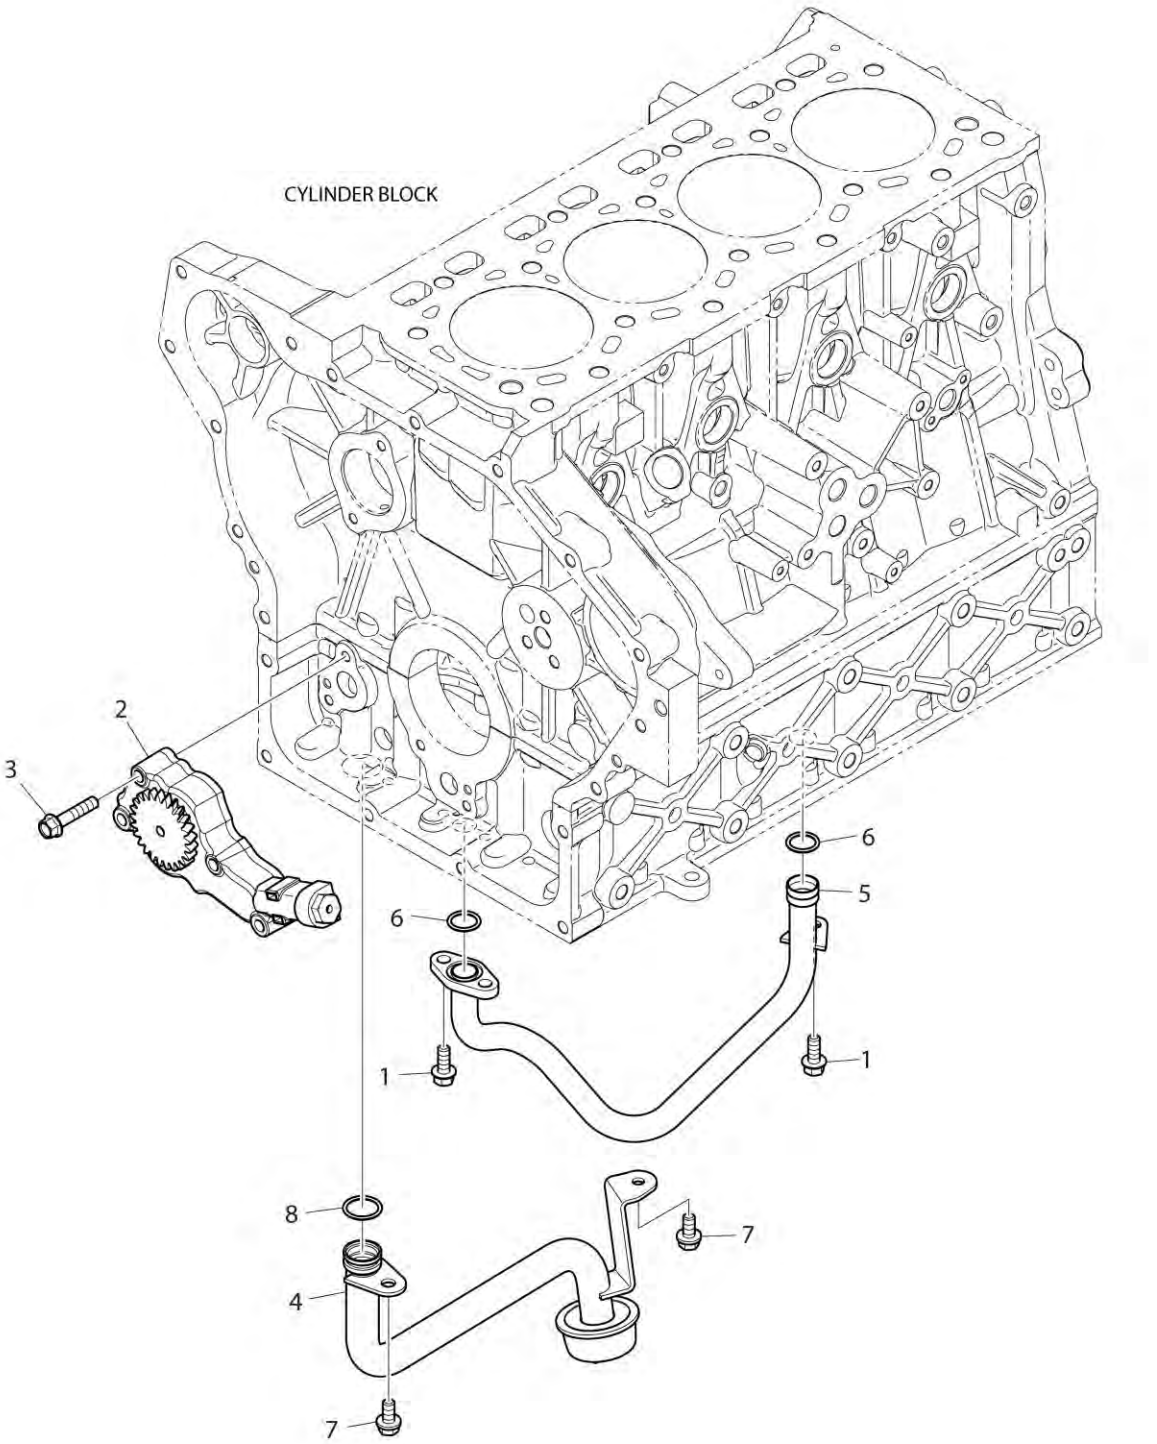

NOTE

FIG 117 T1104SC / T1054SC / T954SC	ENGINE OIL FILTER ASSY	P1	YEAR 2014	

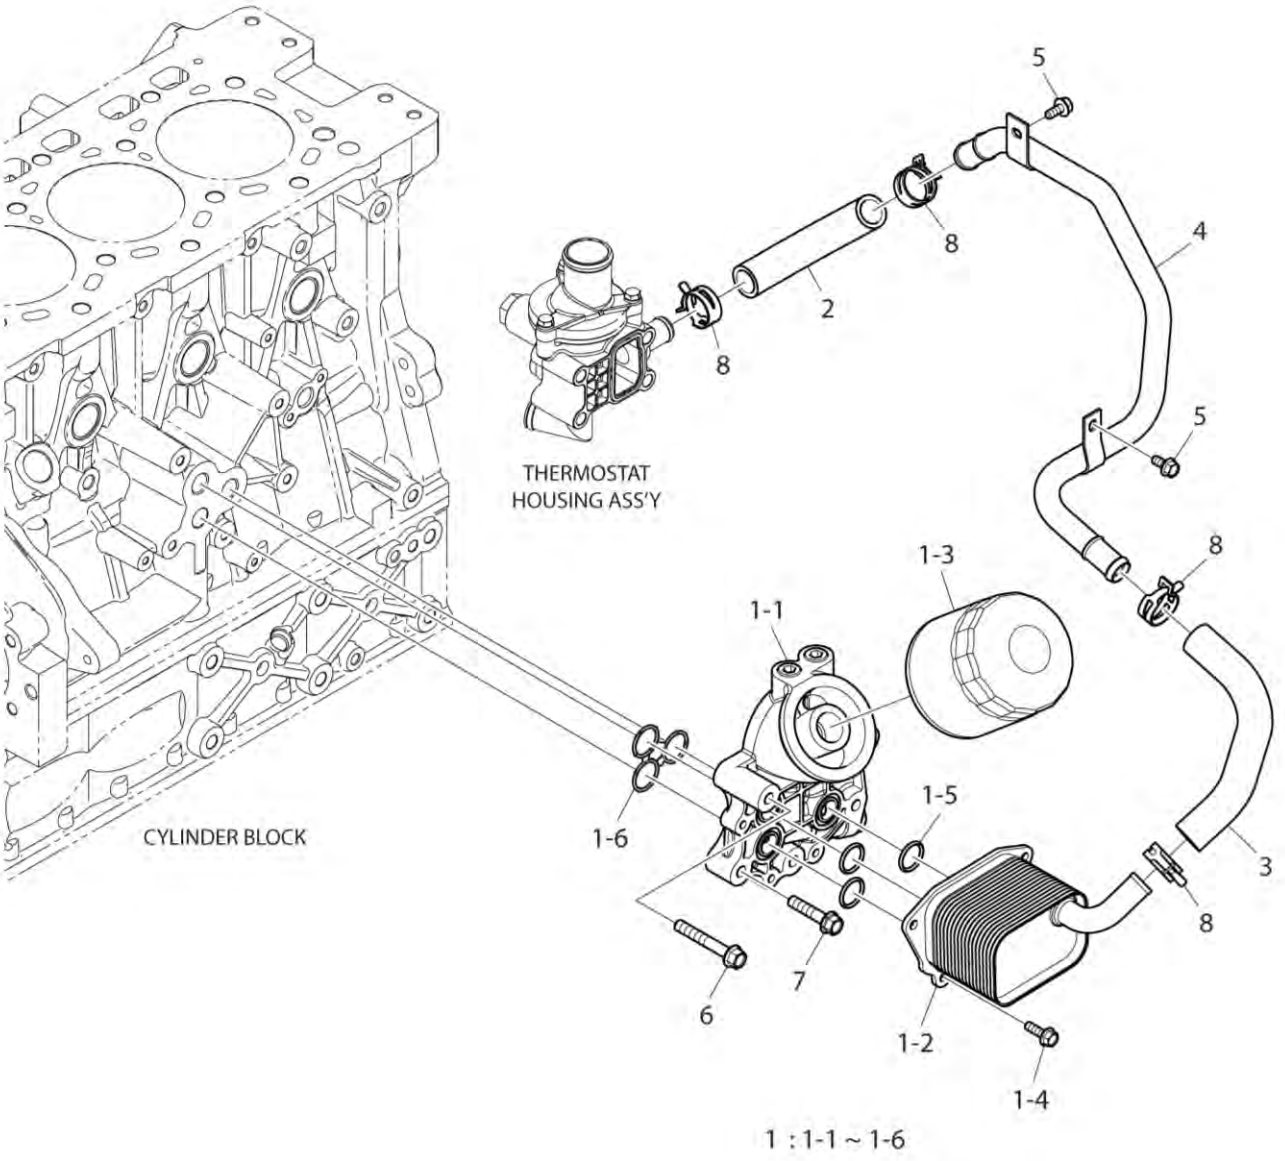

1 : 1-1 ~ 1-6

NOTE

FIG 118


T1104SC / T1054SC / T954SC

OIL PAN

P1

YEAR

2014

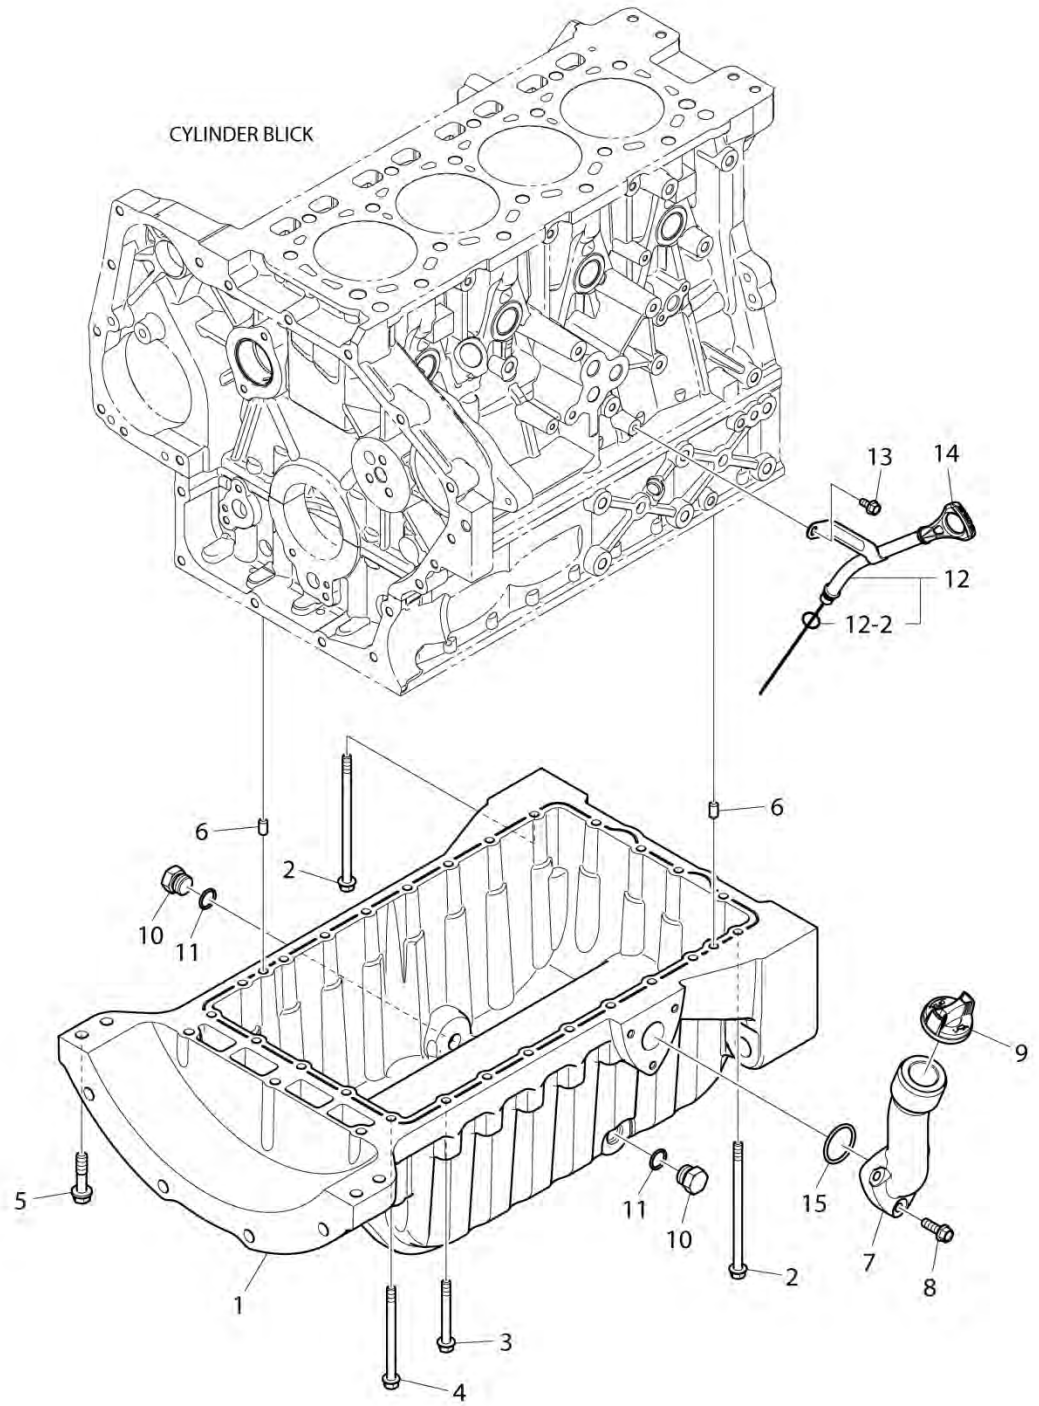

NOTE

FIG 119


T1104SC / T1054SC / T954SC

THERMOSTAT HOUSING ASSY

P1


YEAR

2014

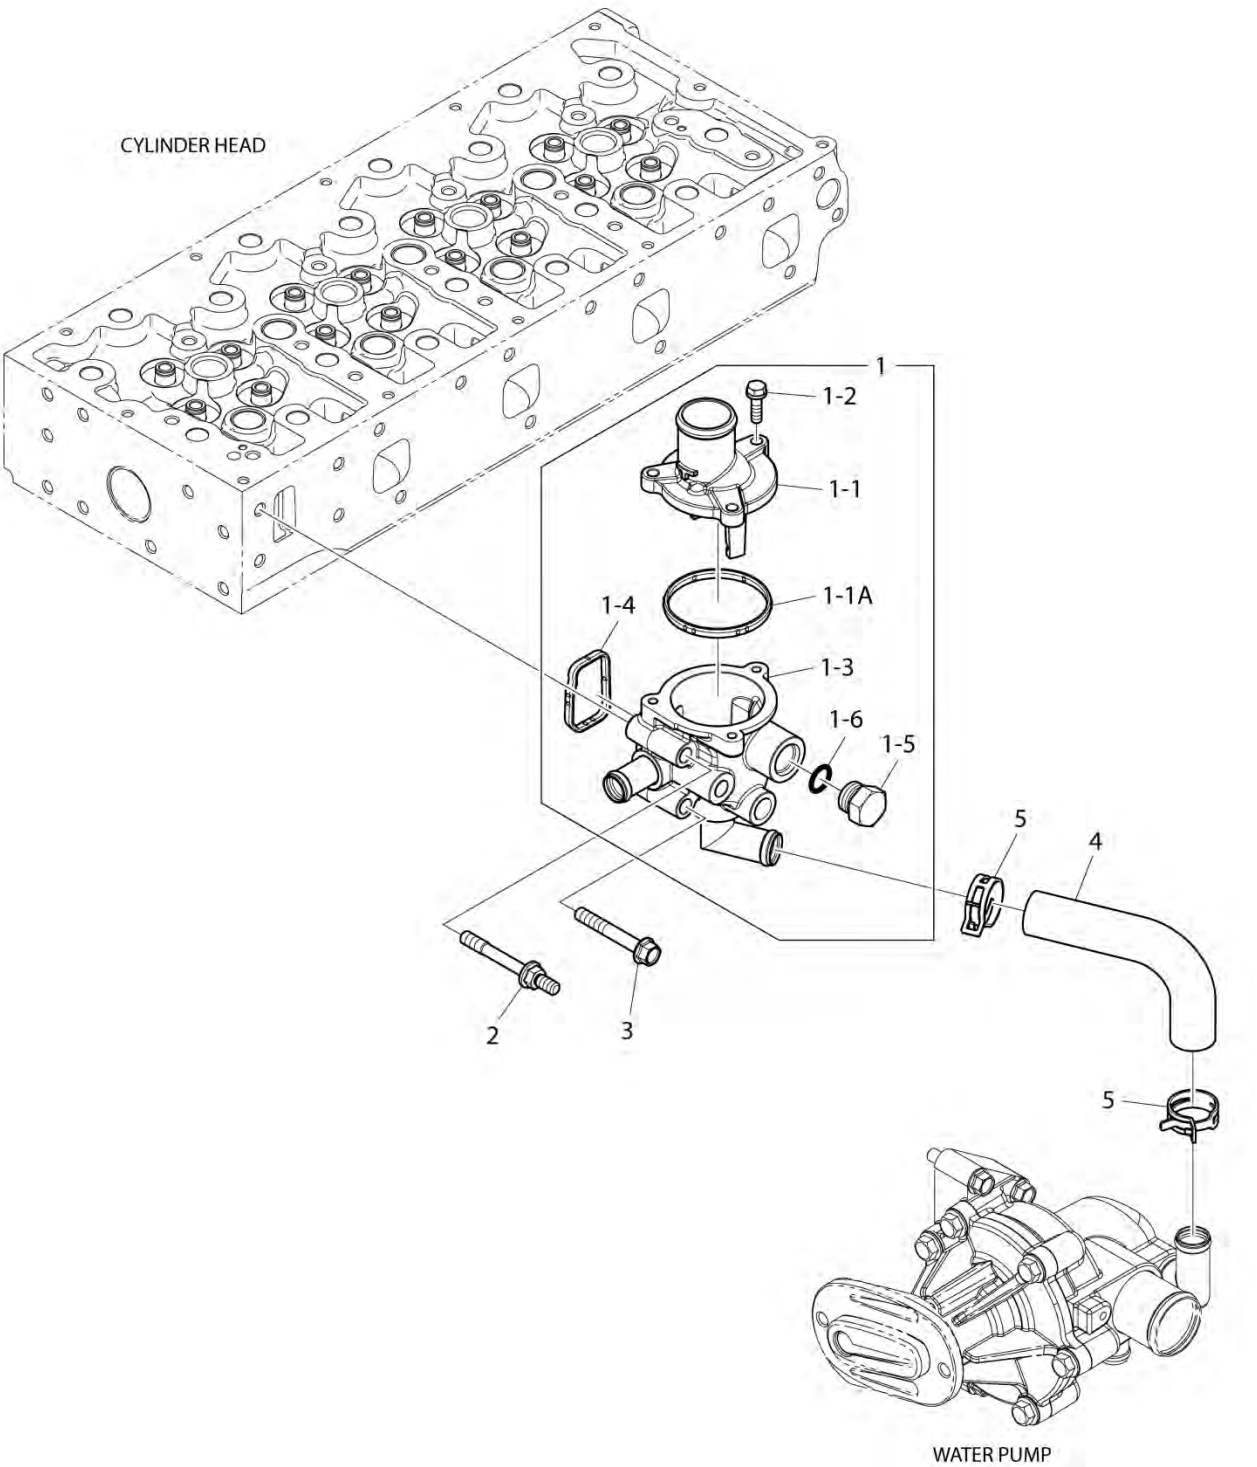

NOTE

FIG 120 T1104SC / T1054SC / T954SC	WATER PUMP ASSY	P1	YEAR 2014	

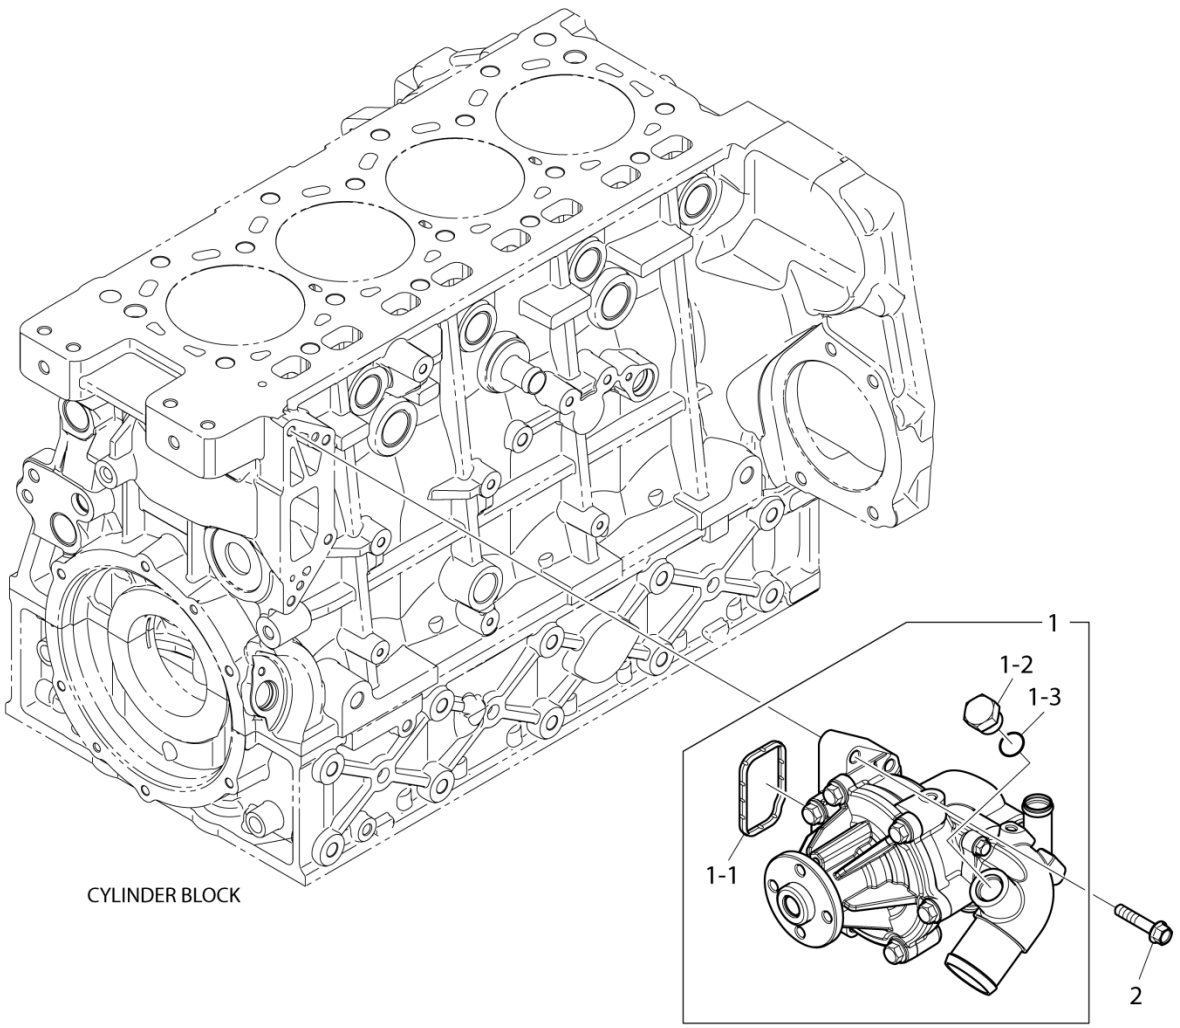

NOTE

FIG 121


T1104SC / T1054SC / T954SC

FAN MOUNTING BRACKET

P1

YEAR

2014

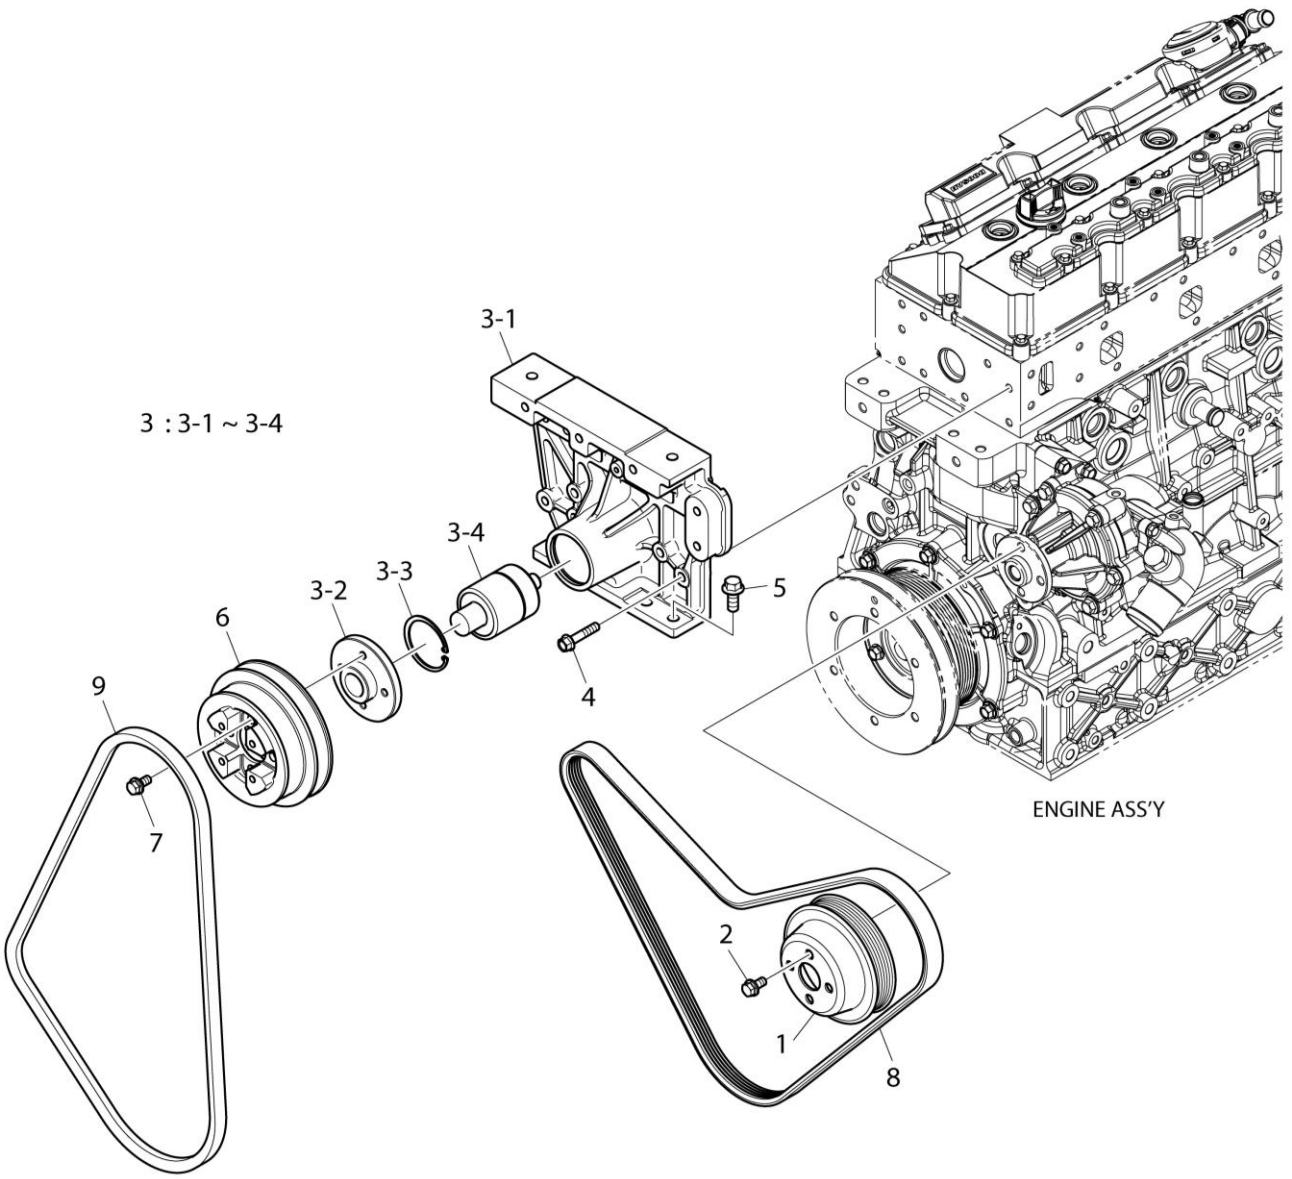

NOTE

https://truckmanualshub.com/

FIG 122


T1104SC / T1054SC / T954SC

EXHAUST MANIFOLD ASSY

P1

YEAR

2014

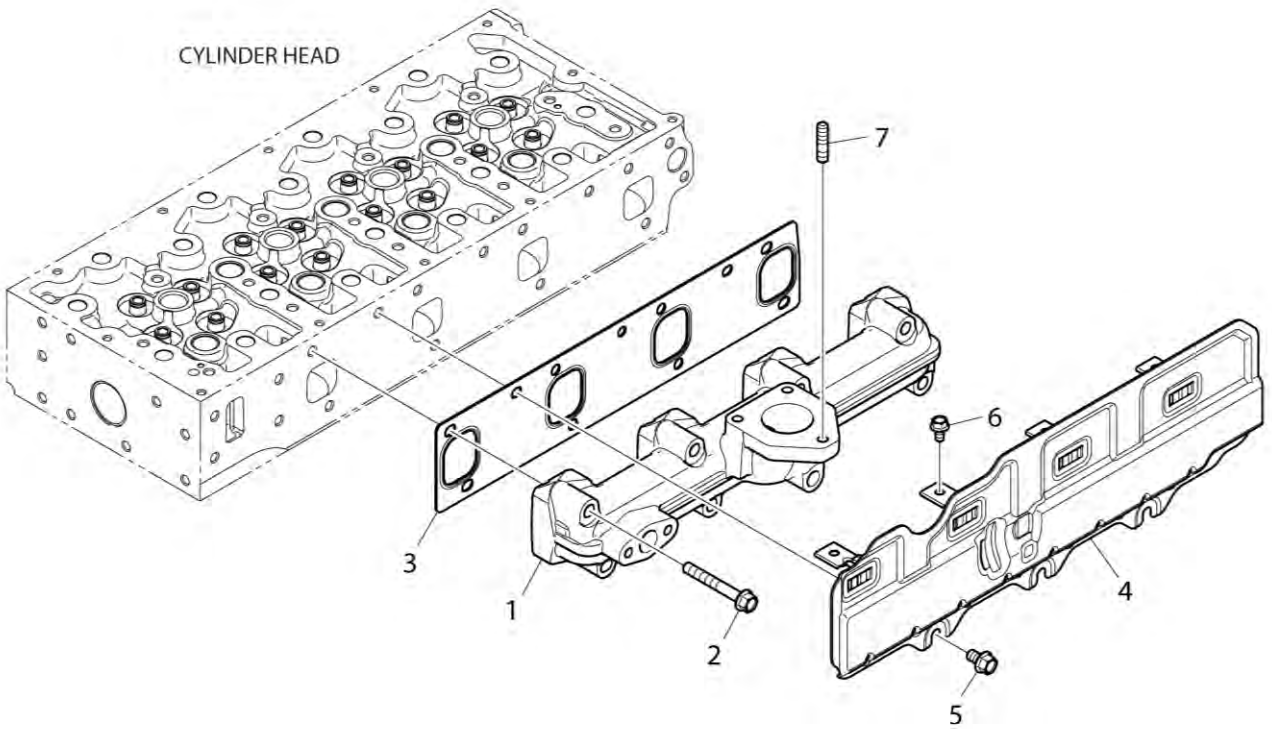

NOTE

FIG 123


T1104SC / T1054SC / T954SC

INTAKE MANIFOLD

P1

YEAR

2014

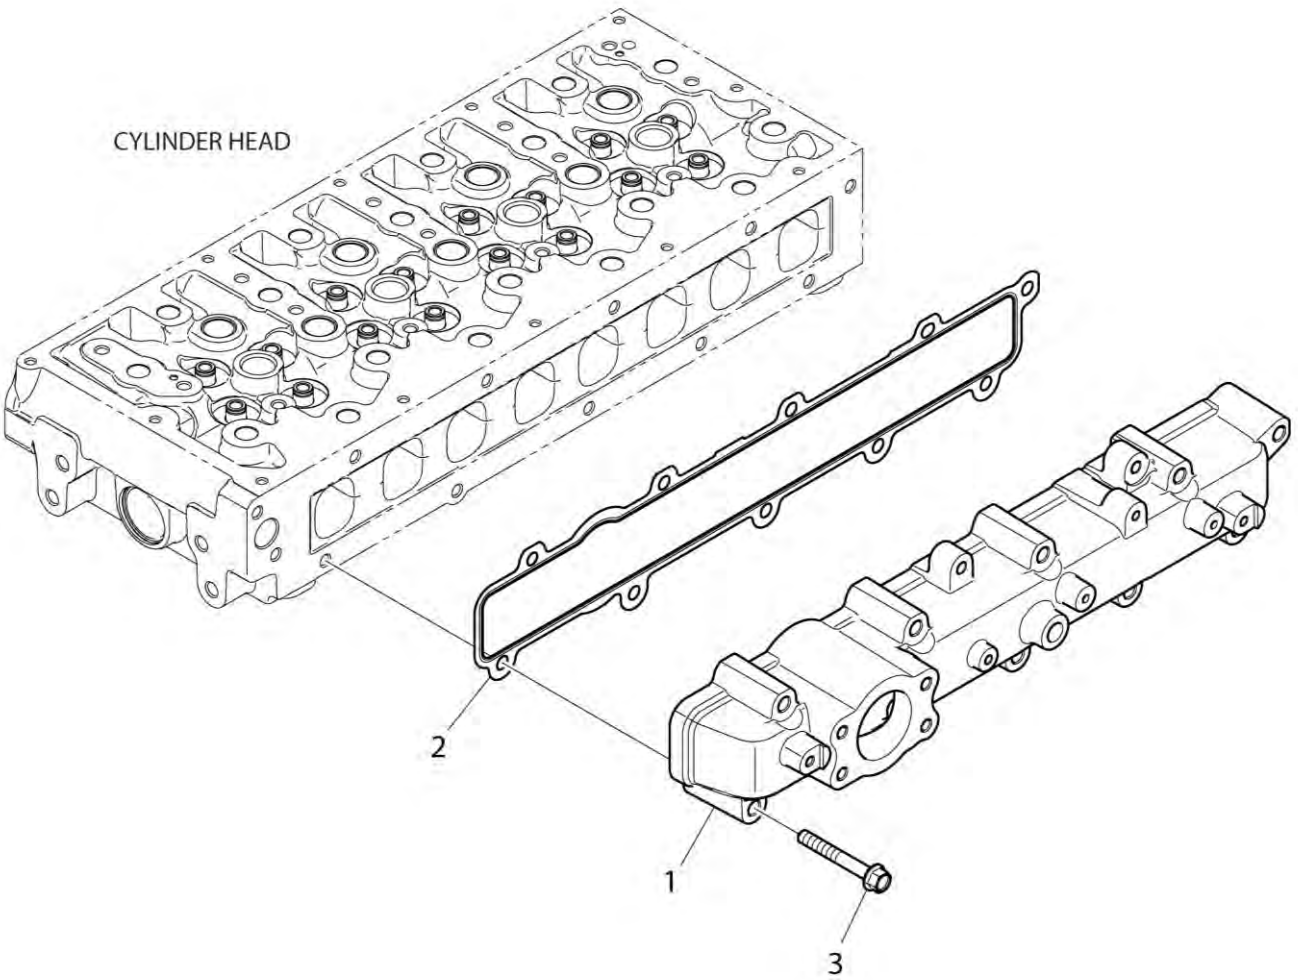

NOTE

https://truckmanualshub.com/

FIG 124


T1104SC / T1054SC / T954SC

TURBO CHARGER ASSY

P1


YEAR

2014

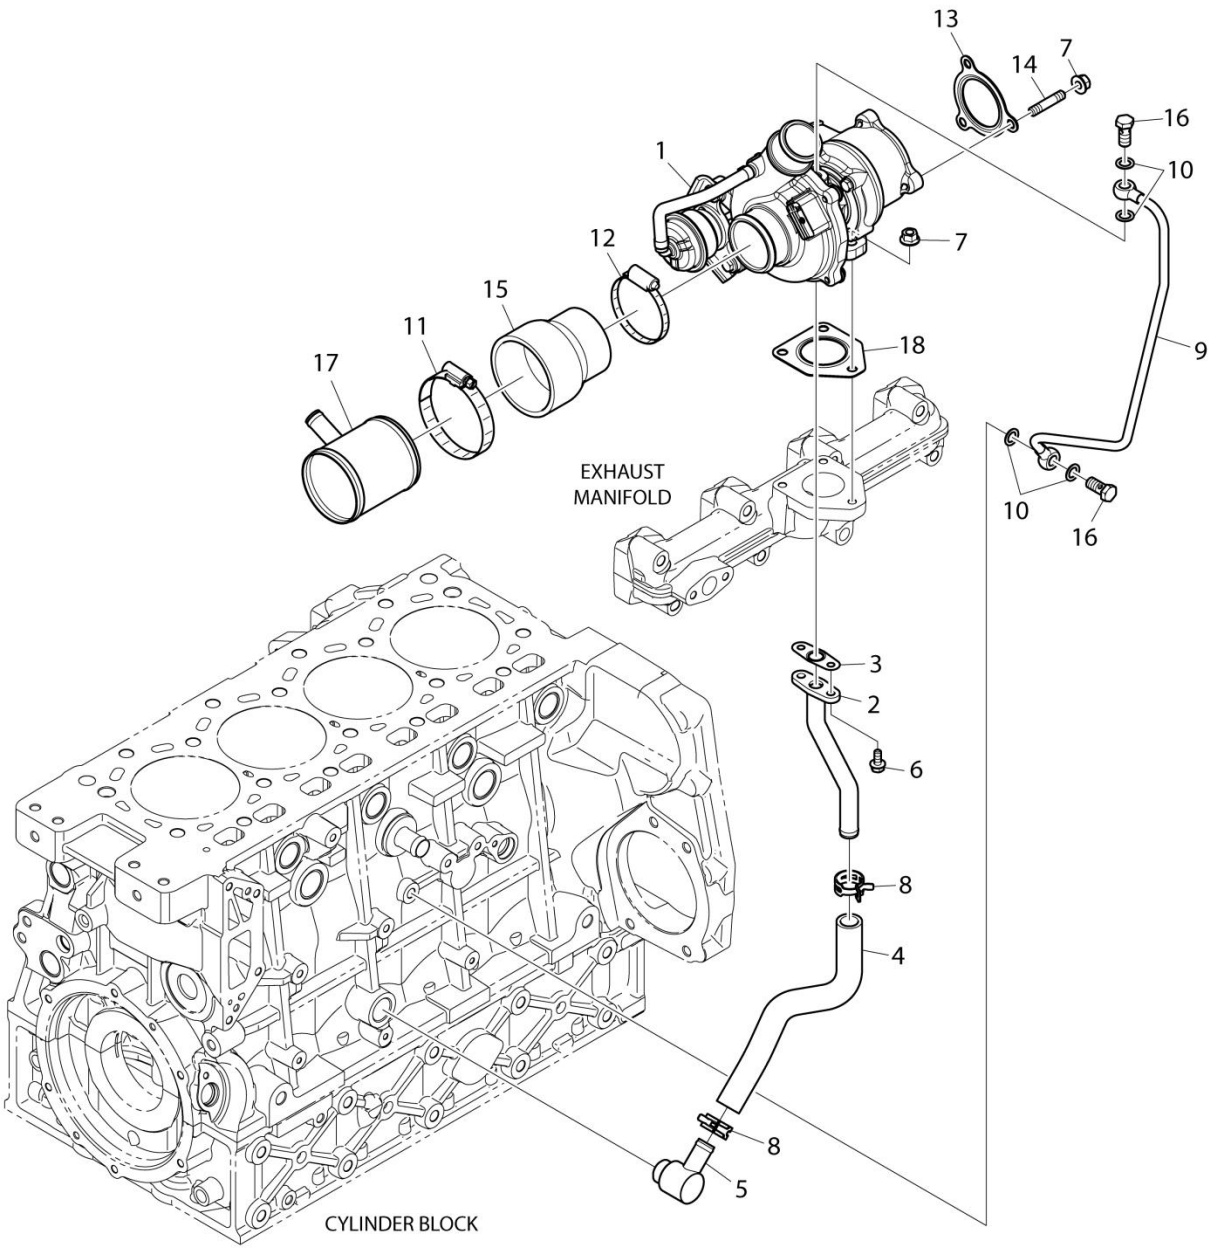


NOTE

FIG 125 T1104SC / T1054SC / T954SC	INTAKE STAKE	P1	YEAR 2014	

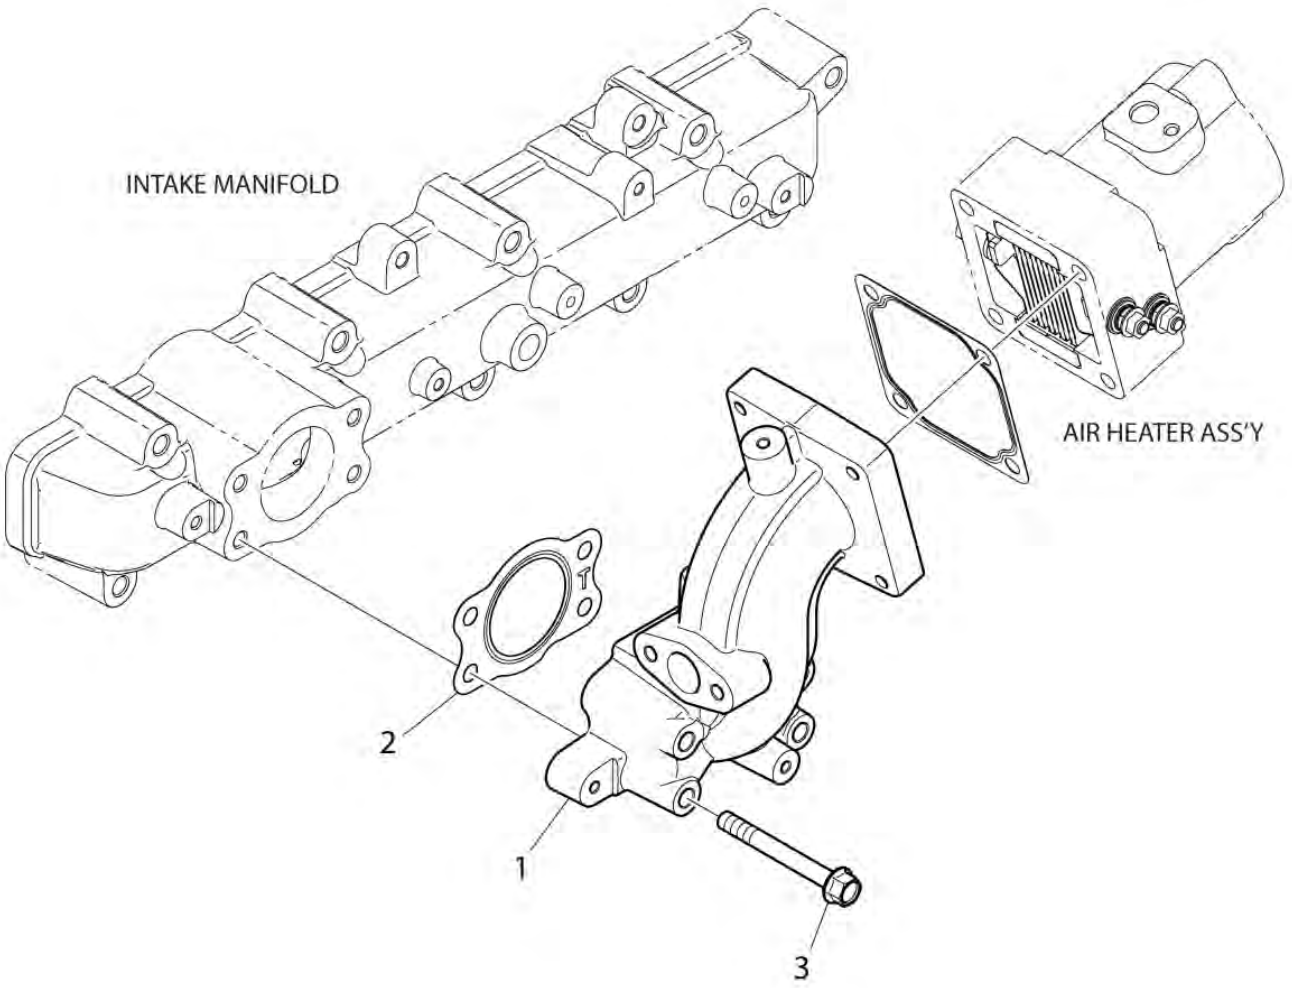

NOTE	

FIG 126 T1104SC / T1054SC / T954SC	INJECTOR	P1	YEAR 2014	

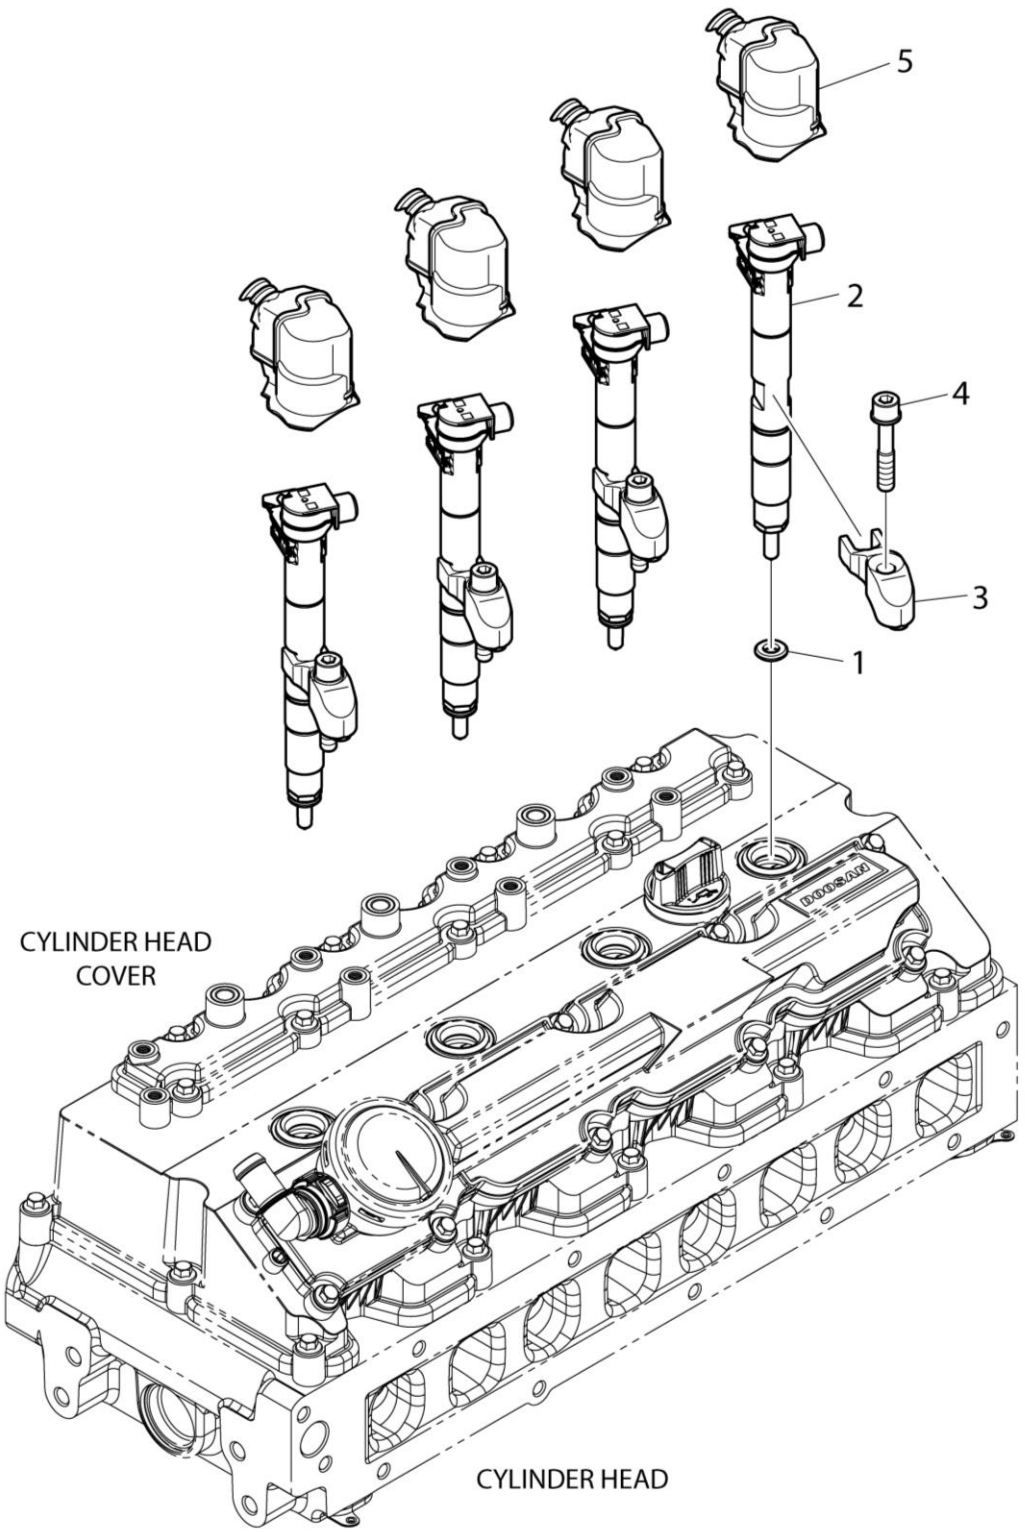

NOTE	

FIG 127


T1104SC / T1054SC / T954SC

COMMON RAIL

P1

YEAR

2014

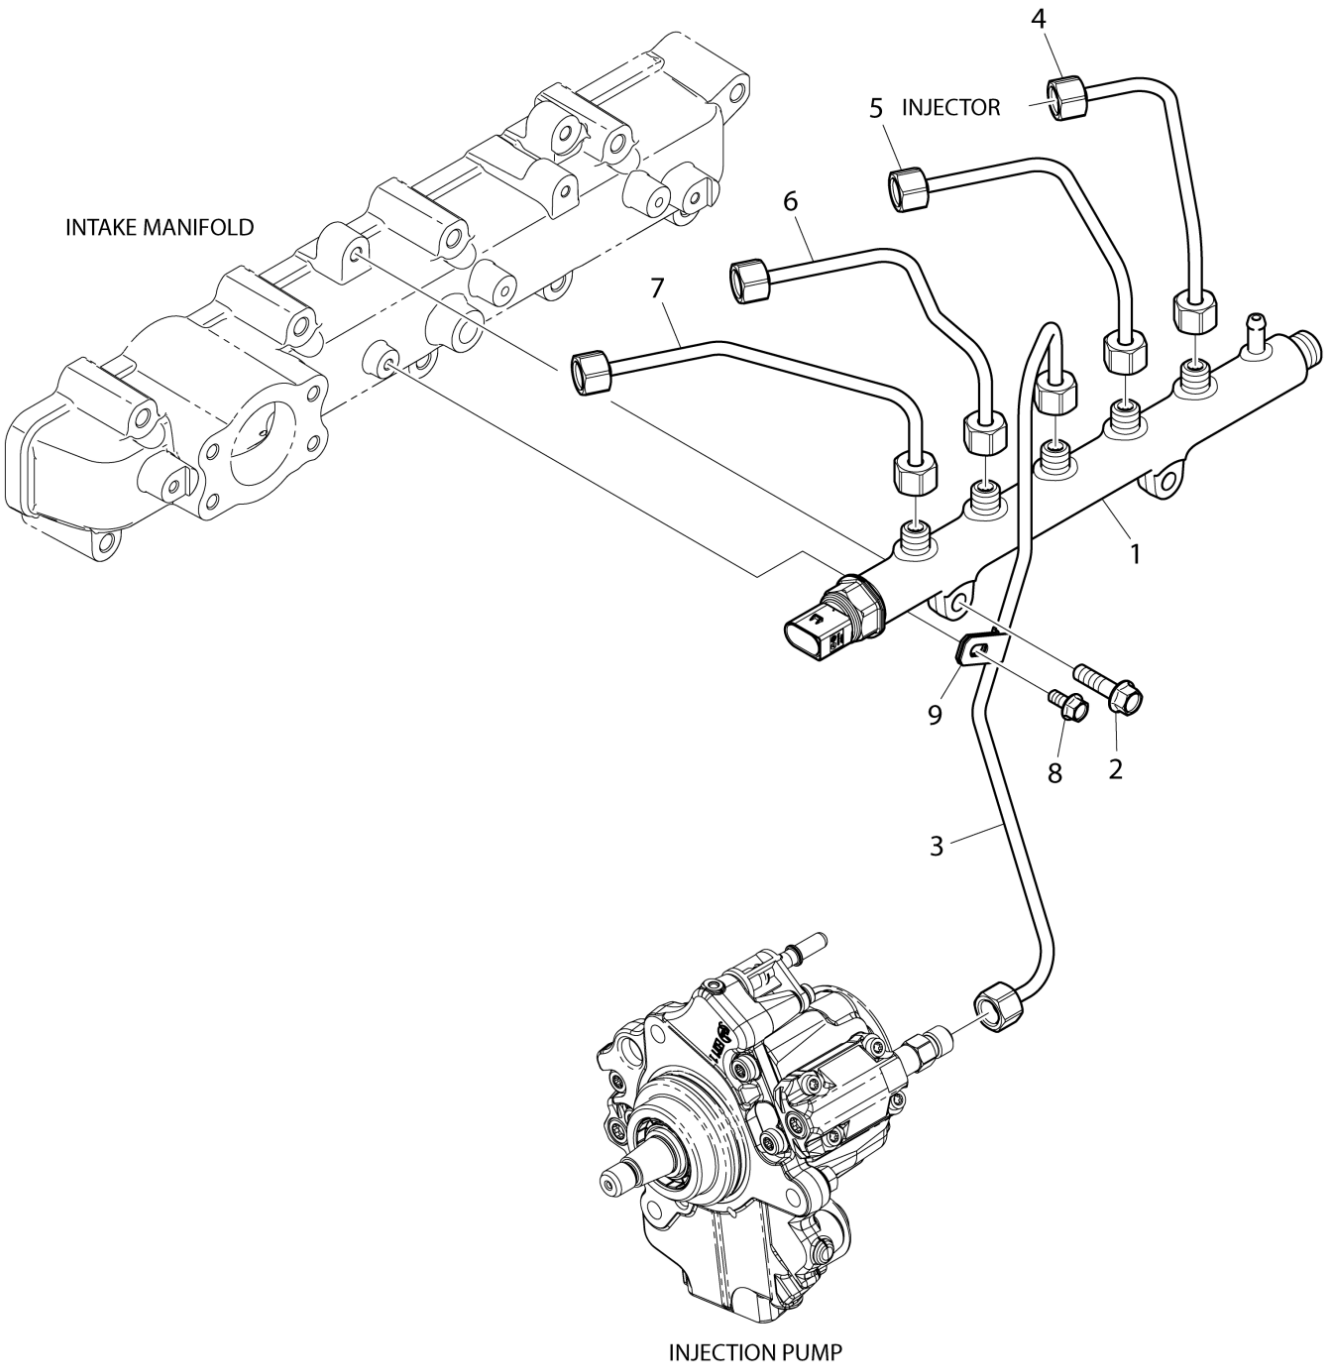

NOTE

https://truckmanualshub.com/

FIG 128


T1104SC / T1054SC / T954SC

FUEL INJECTION PUMP ASSY

P1


YEAR

2014

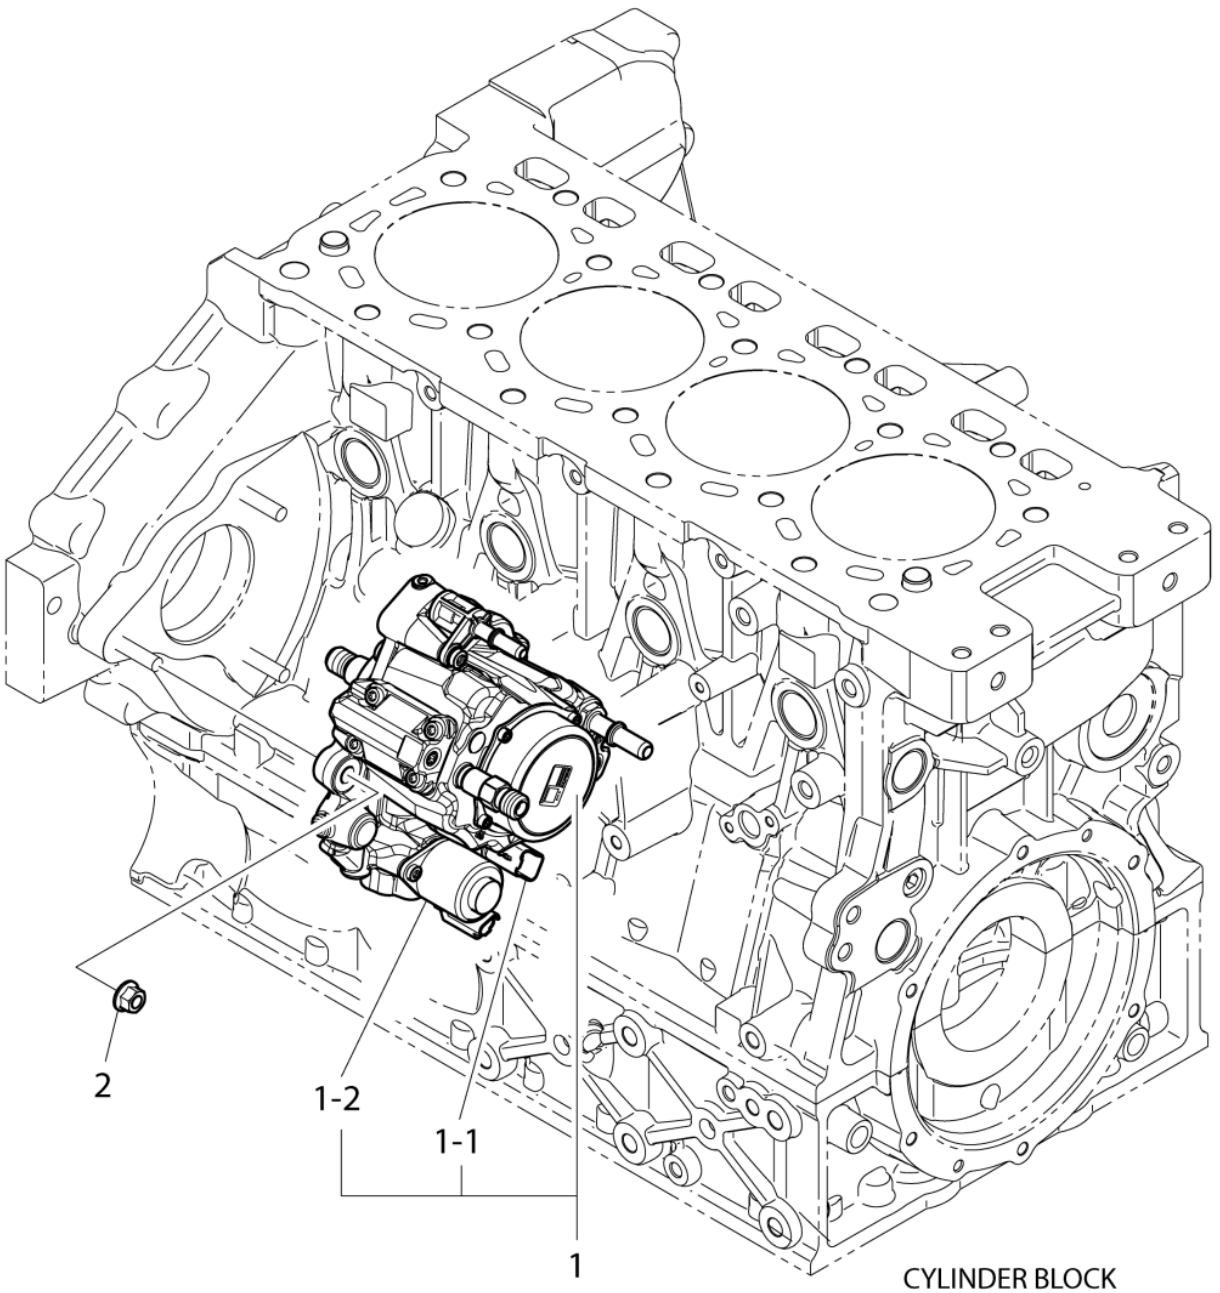



NOTE

FIG 129 T1104SC / T1054SC / T954SC	ECU	P1	YEAR 2014	

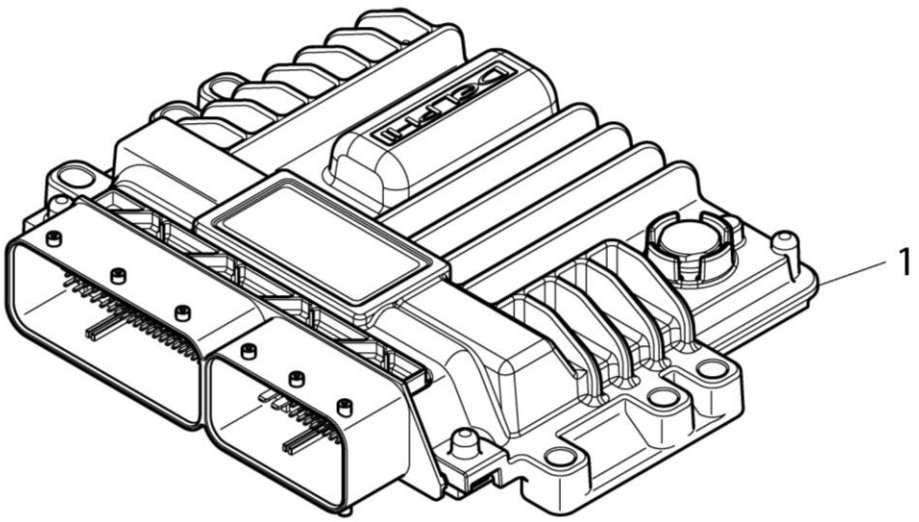


NOTE	

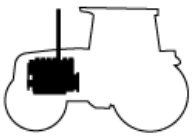
FIG 130 T1104SC / T1054SC / T954SC	INJECTION PUMP DRIVE GEAR	P1	YEAR 2014	

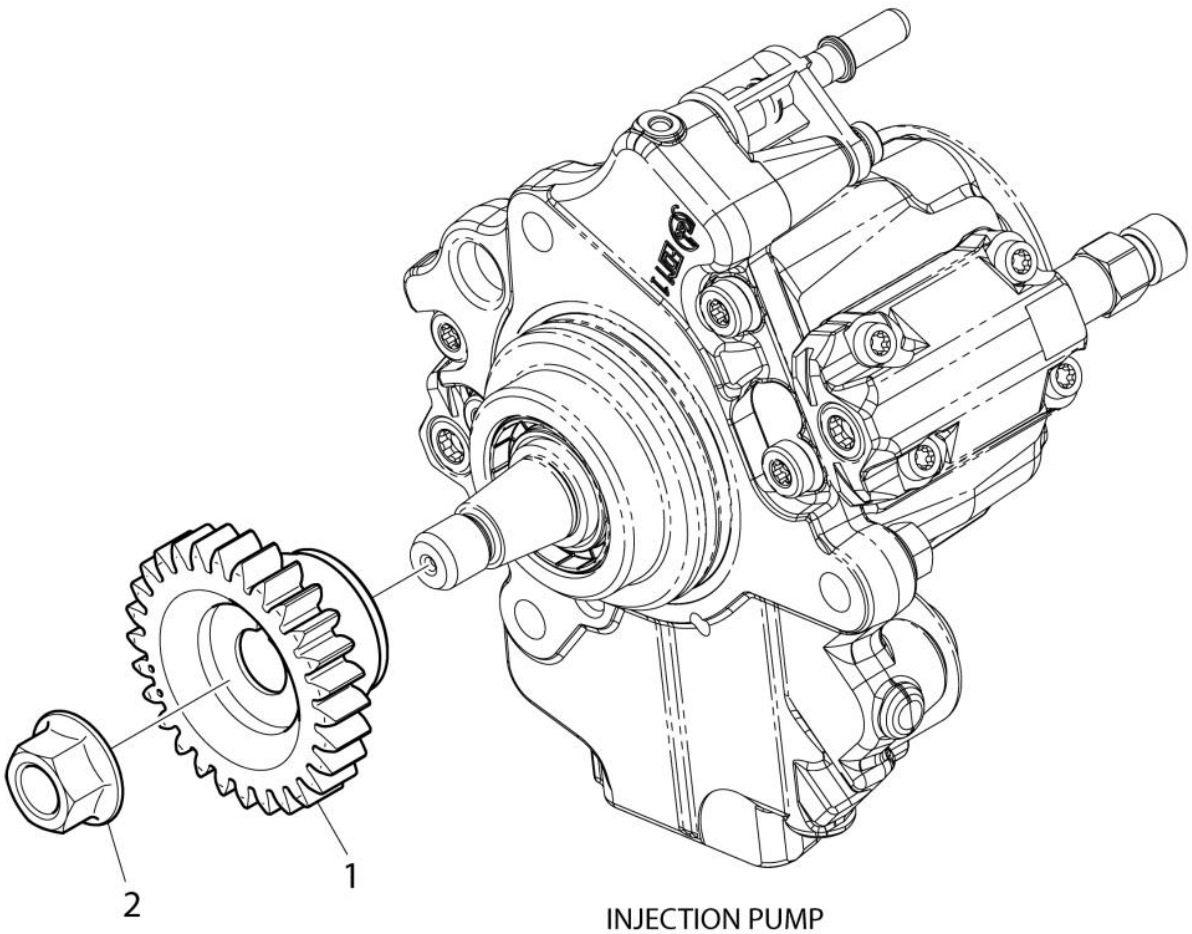

INJECTION PUMP

NOTE	

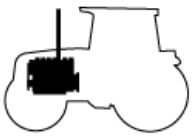FIG 131 T1104SC / T1054SC / T954SC	FUEL TUBE ASSY	P1	YEAR 2014	

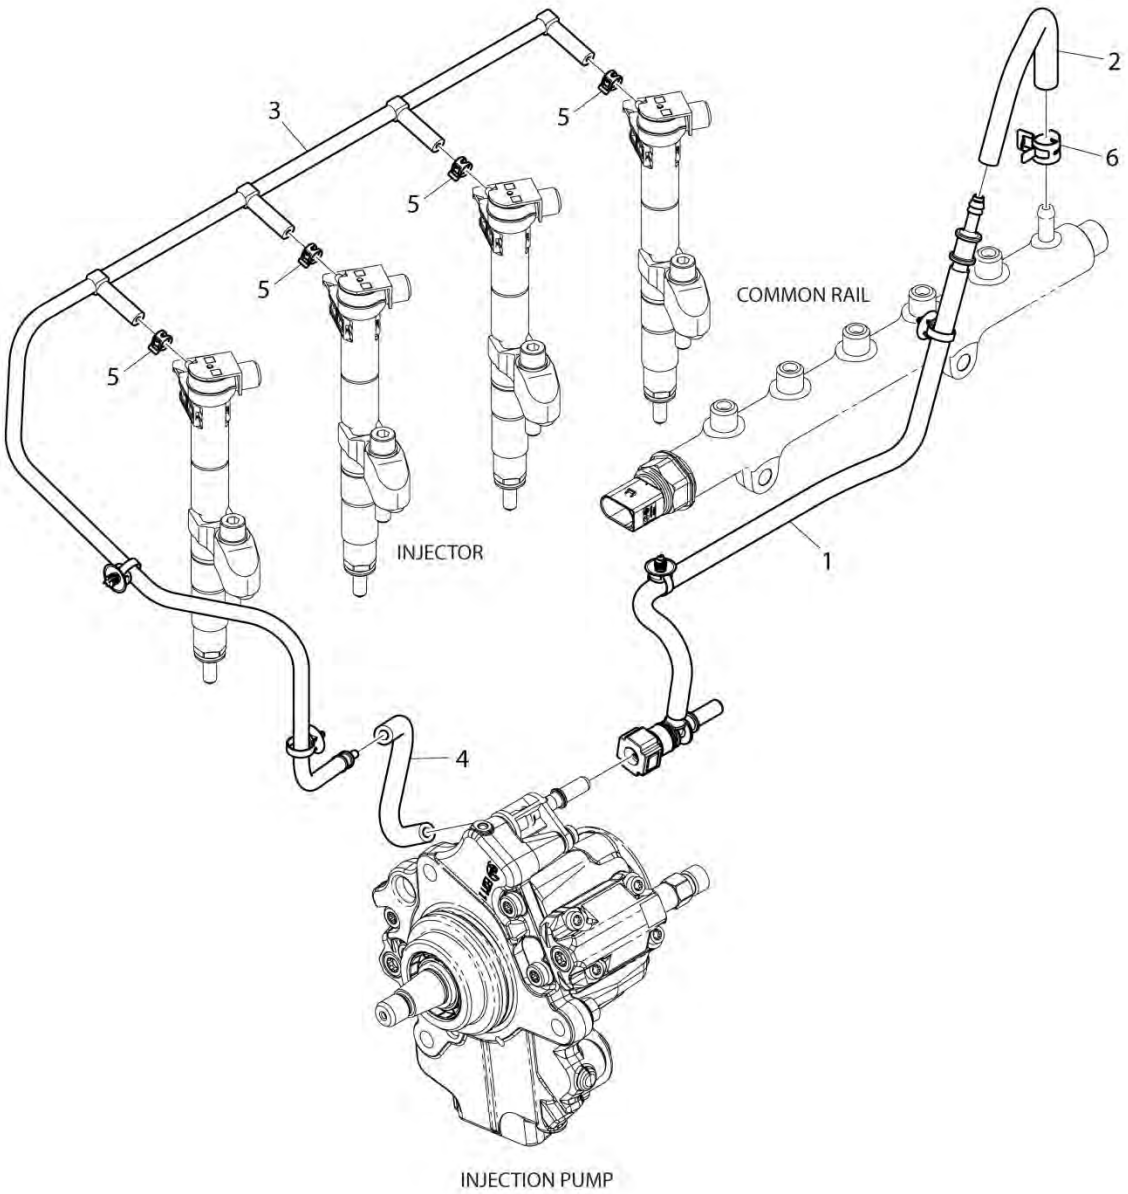

NOTE

https://truckmanualshub.com/

FIG 132


T1104SC / T1054SC / T954SC

FUEL FILTER ASSY

P1

YEAR

2014

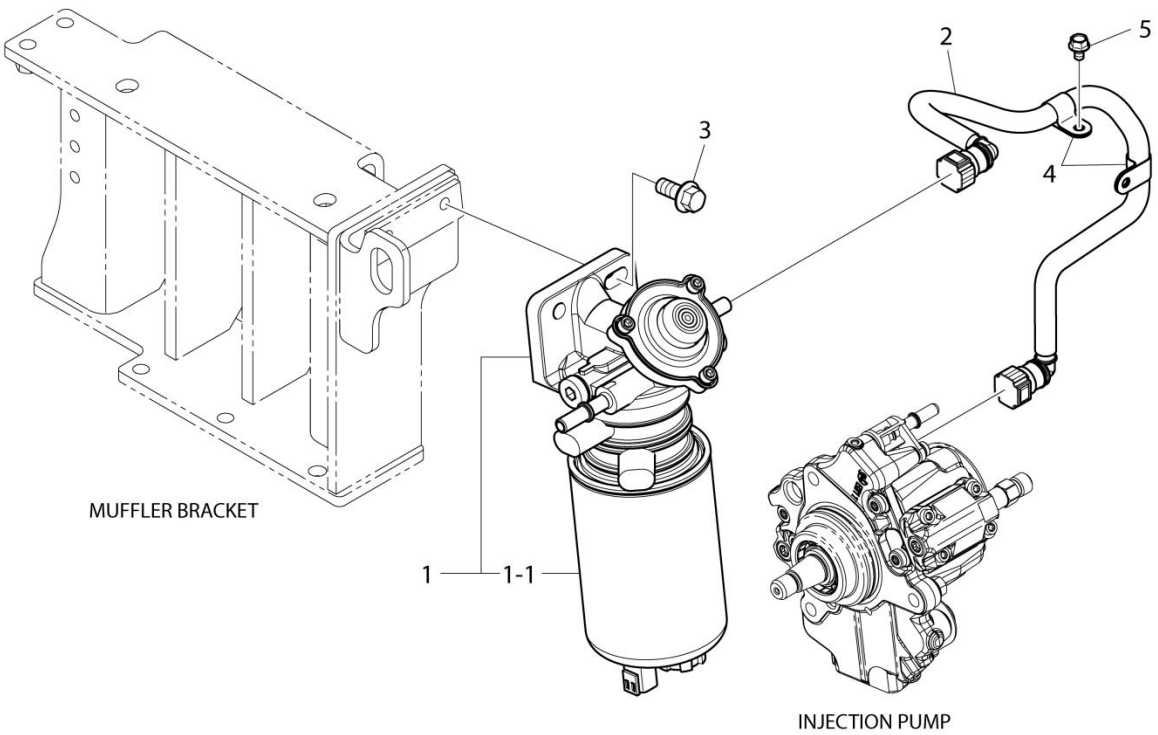

NOTE

https://truckmanualshub.com/

FIG 133


T1104SC / T1054SC / T954SC

EXHAUST FILTERING MUFFLER

P1

YEAR

2014

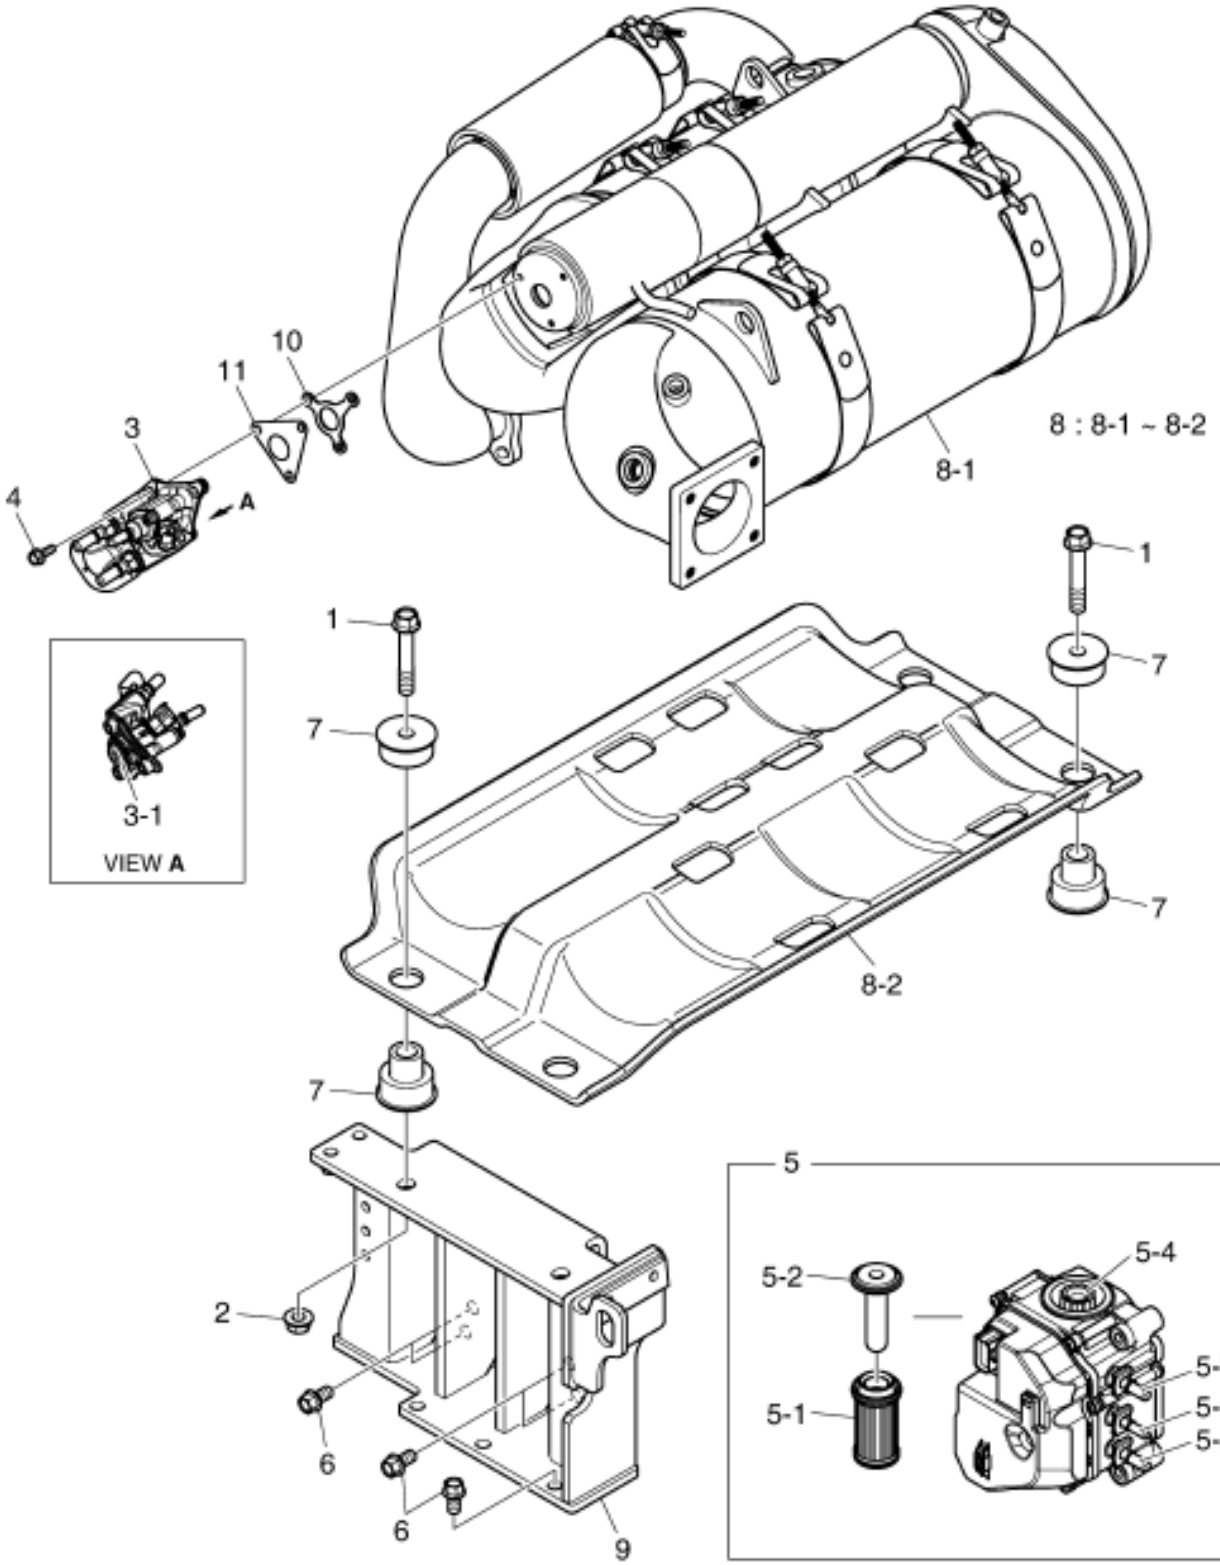

NOTE

FIG 134


T1104SC / T1054SC / T954SC

EGR VALVE

P1

YEAR

2014

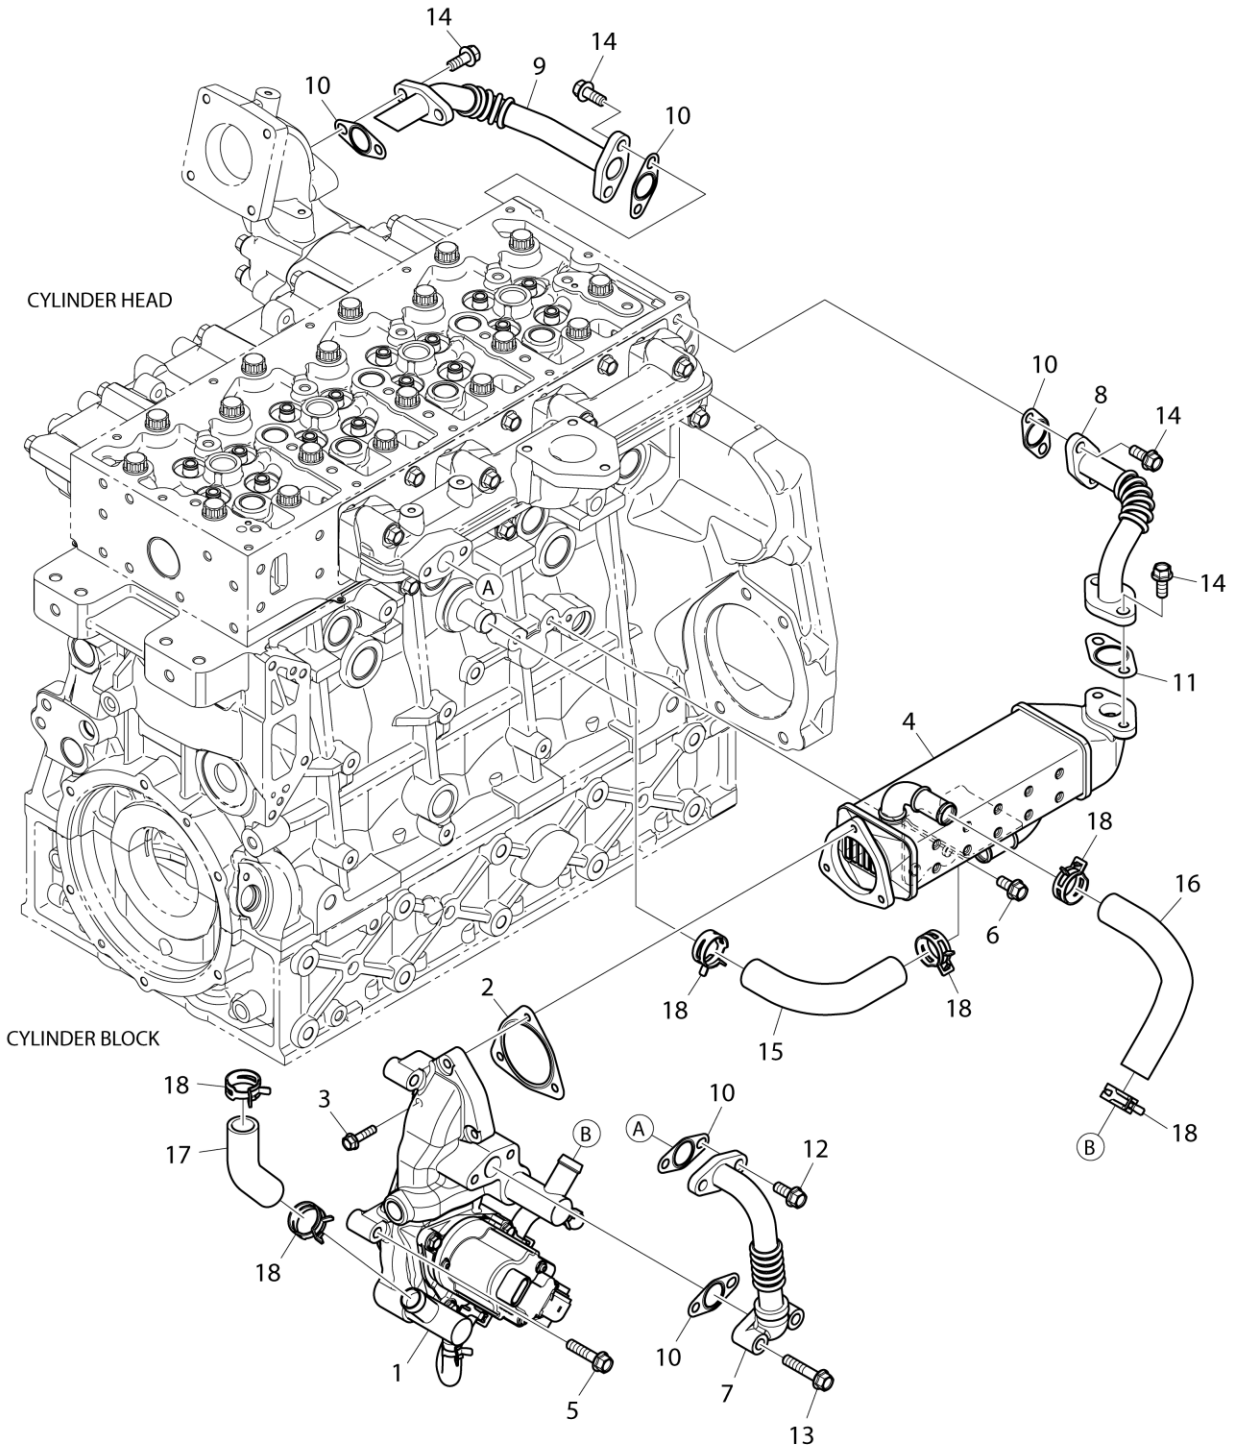

NOTE

FIG 135


T1104SC / T1054SC / T954SC

ALTERNATOR BRACKET

P1

YEAR


2014

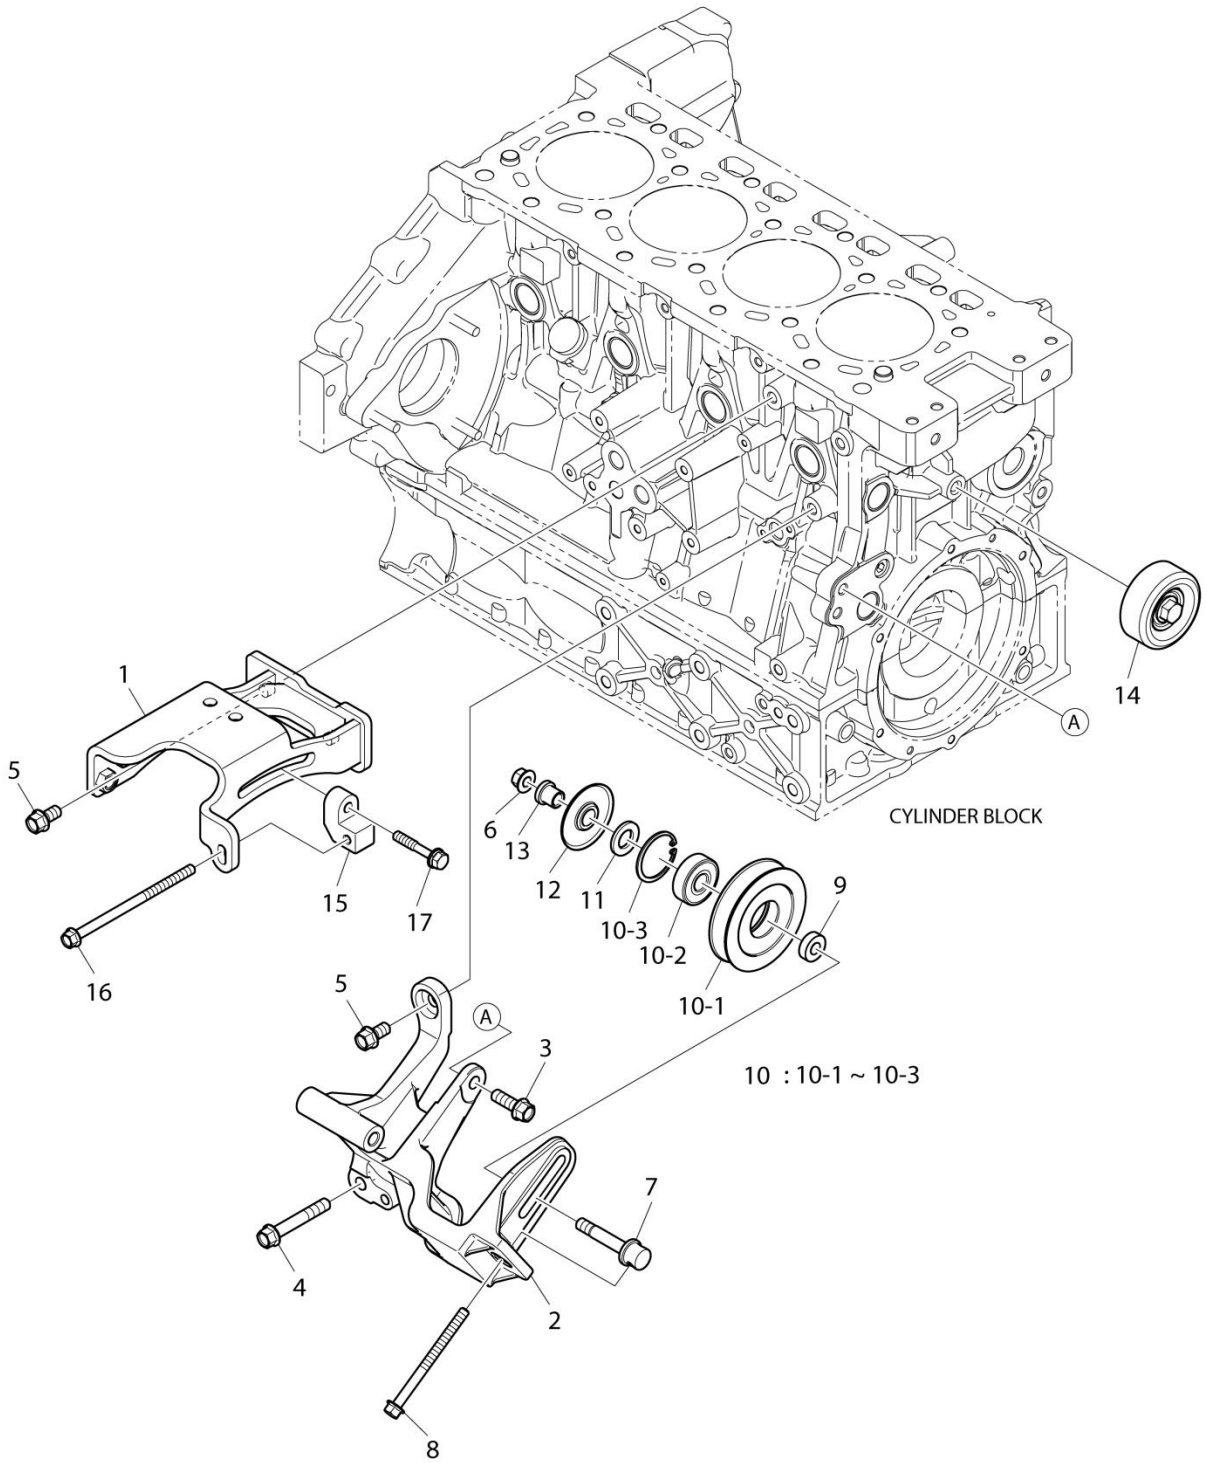

NOTE


https://truckmanualshub.com/

FIG 136 T1104SC / T1054SC / T954SC	LIFTING HOOK	P1	YEAR 2014	

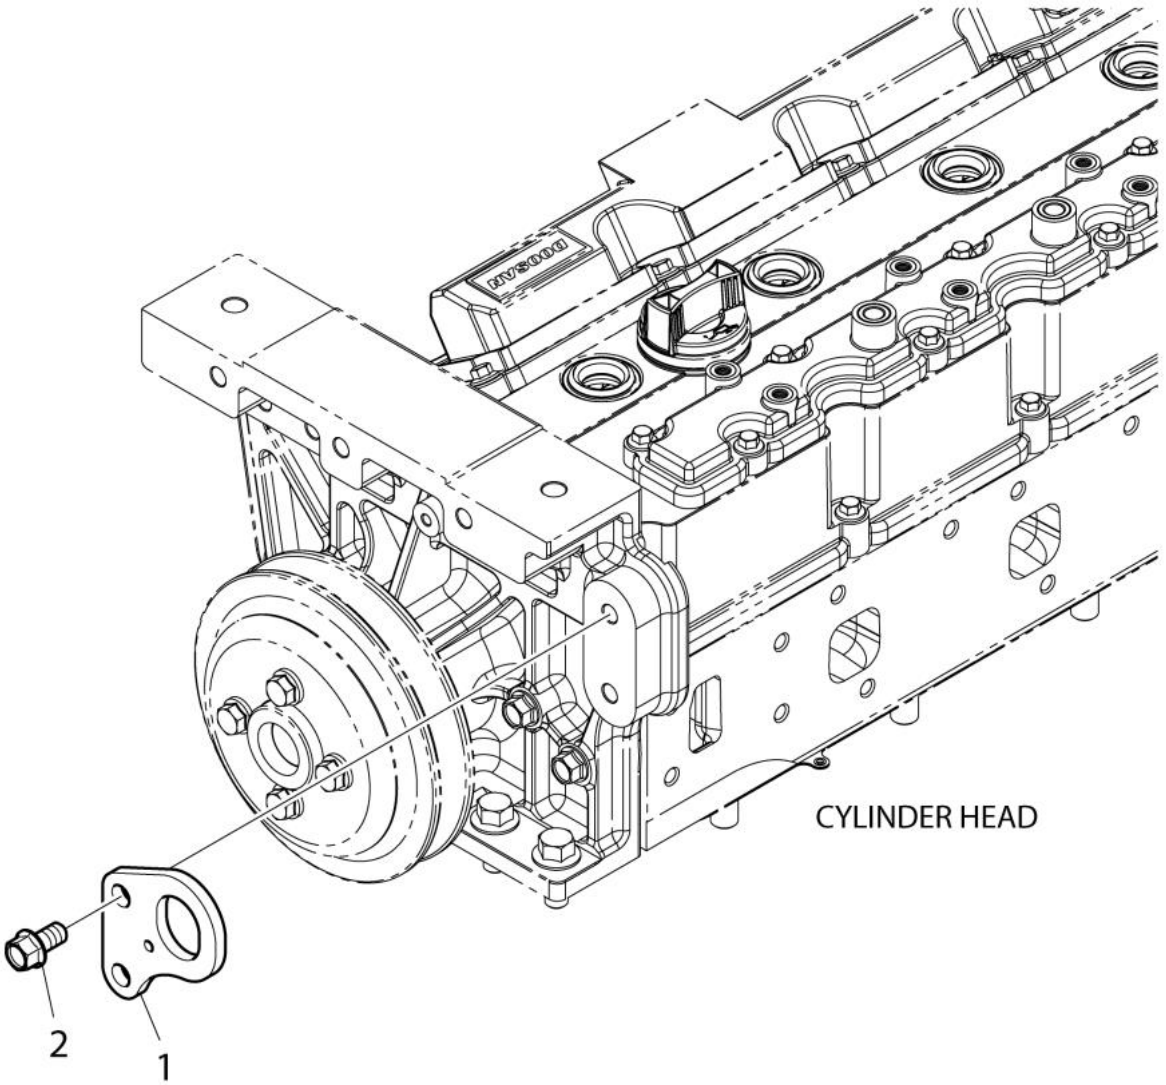


NOTE

FIG 137 T1104SC / T1054SC / T954SC	ALTERNATOR	P1	YEAR 2014	

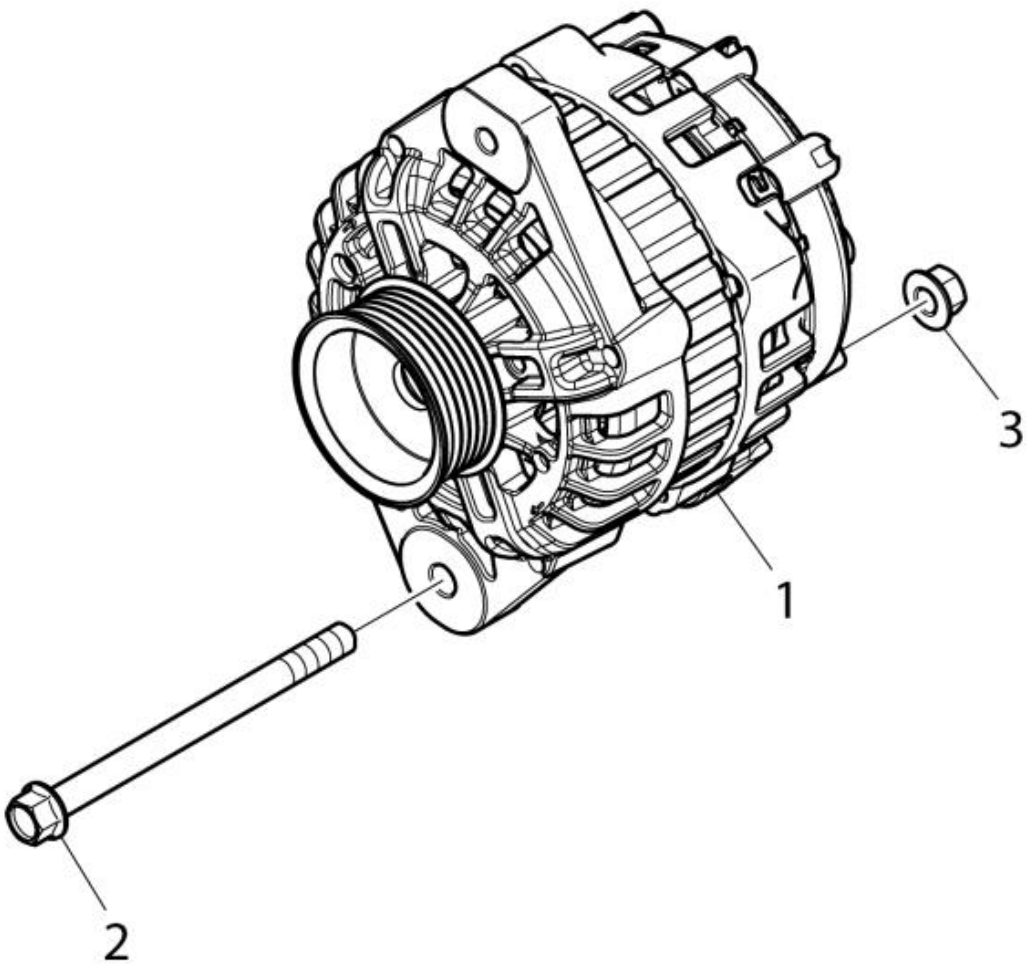

NOTE

FIG 138 T1104SC / T1054SC / T954SC	STARTER	P1	YEAR 2014	

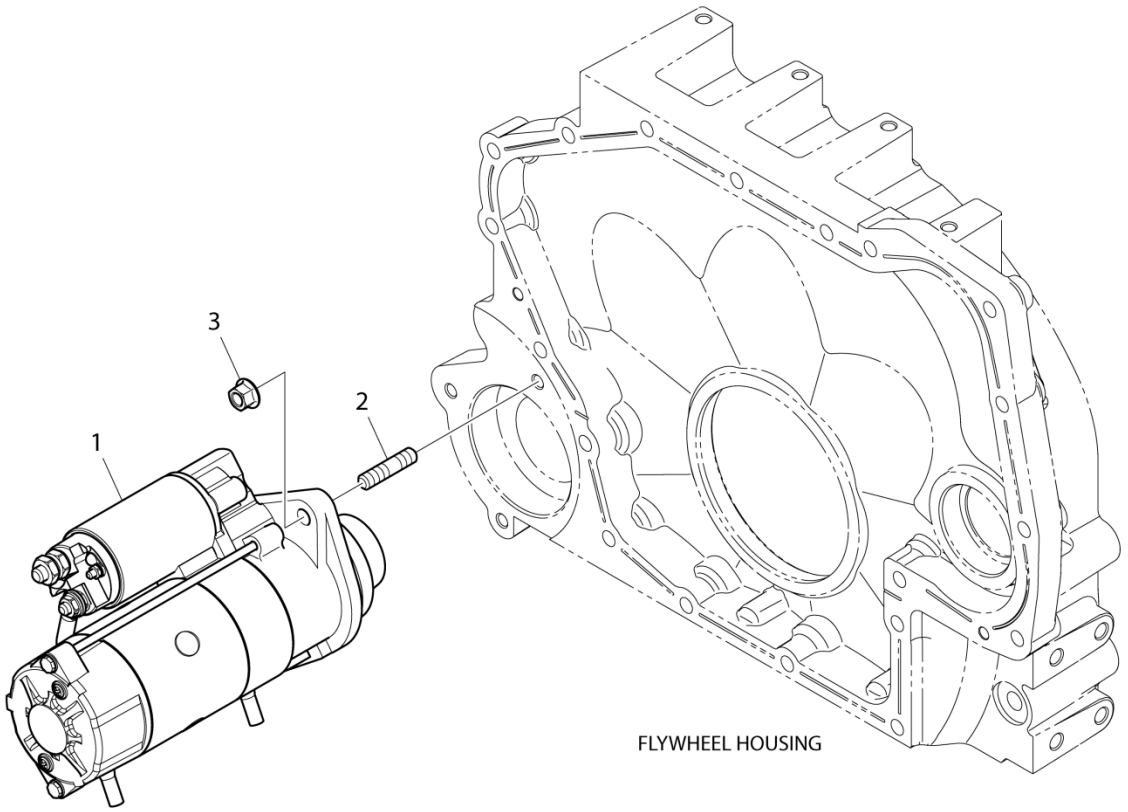

NOTE	

FIG 139


T1104SC / T1054SC / T954SC

AIR HEATER ASSY

P1

YEAR

2014

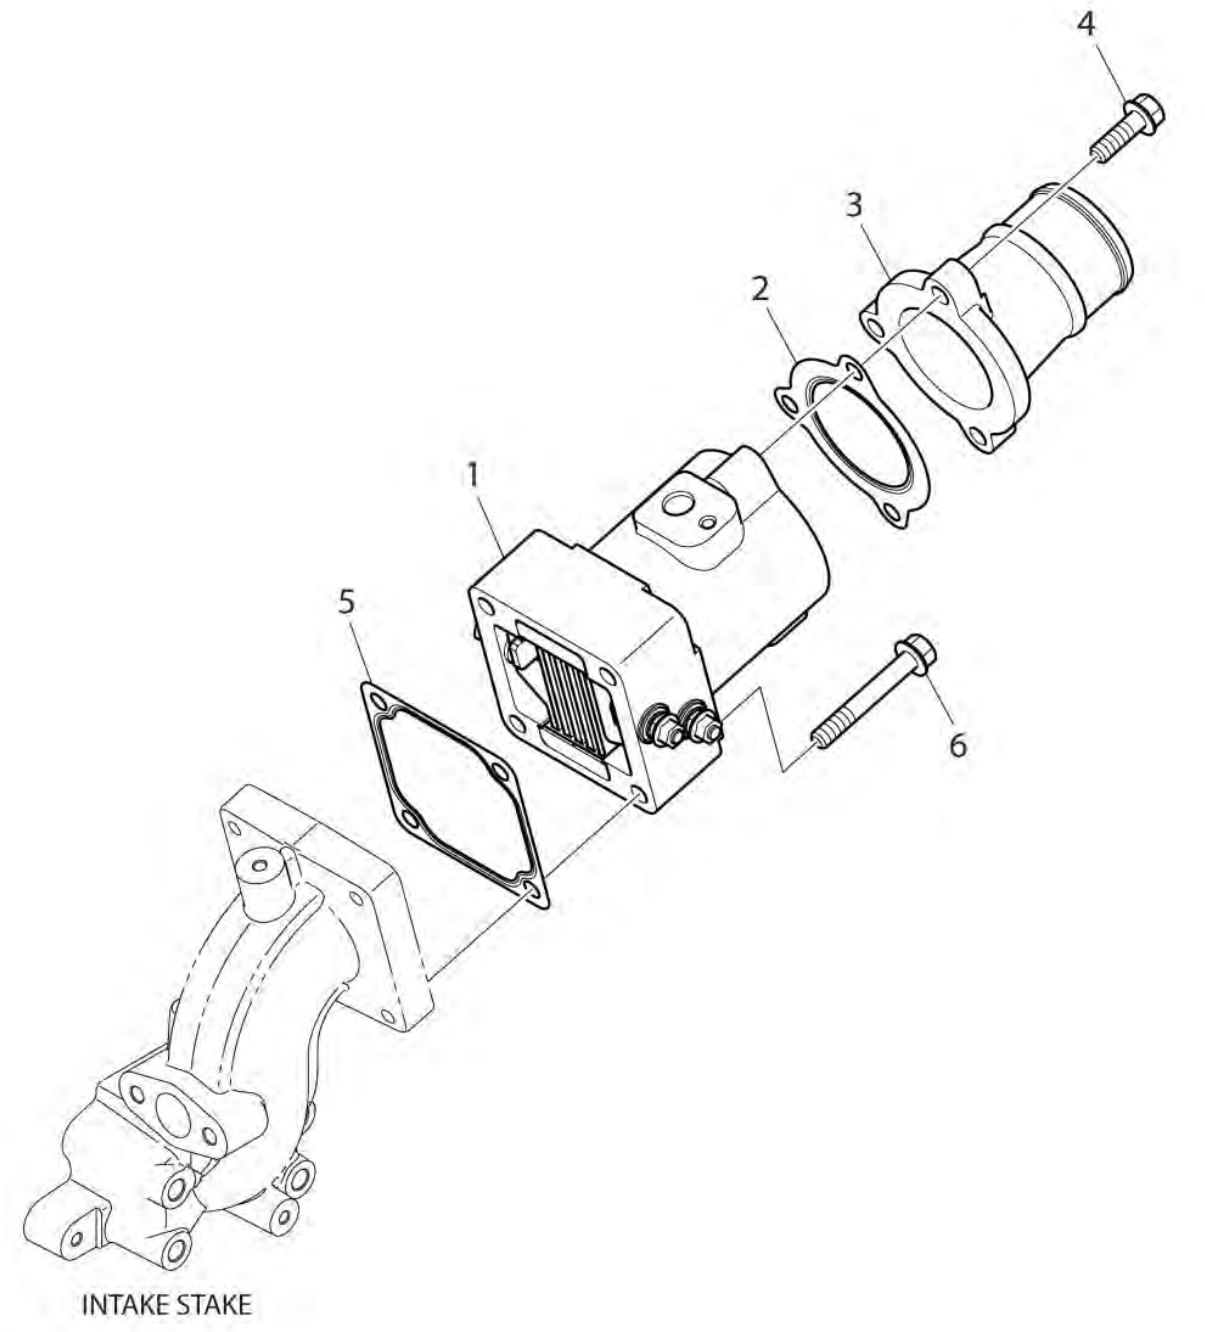

NOTE

https://truckmanualshub.com/

FIG 140


T1104SC / T1054SC / T954SC

SENSOR ASSY

P1


YEAR


2014

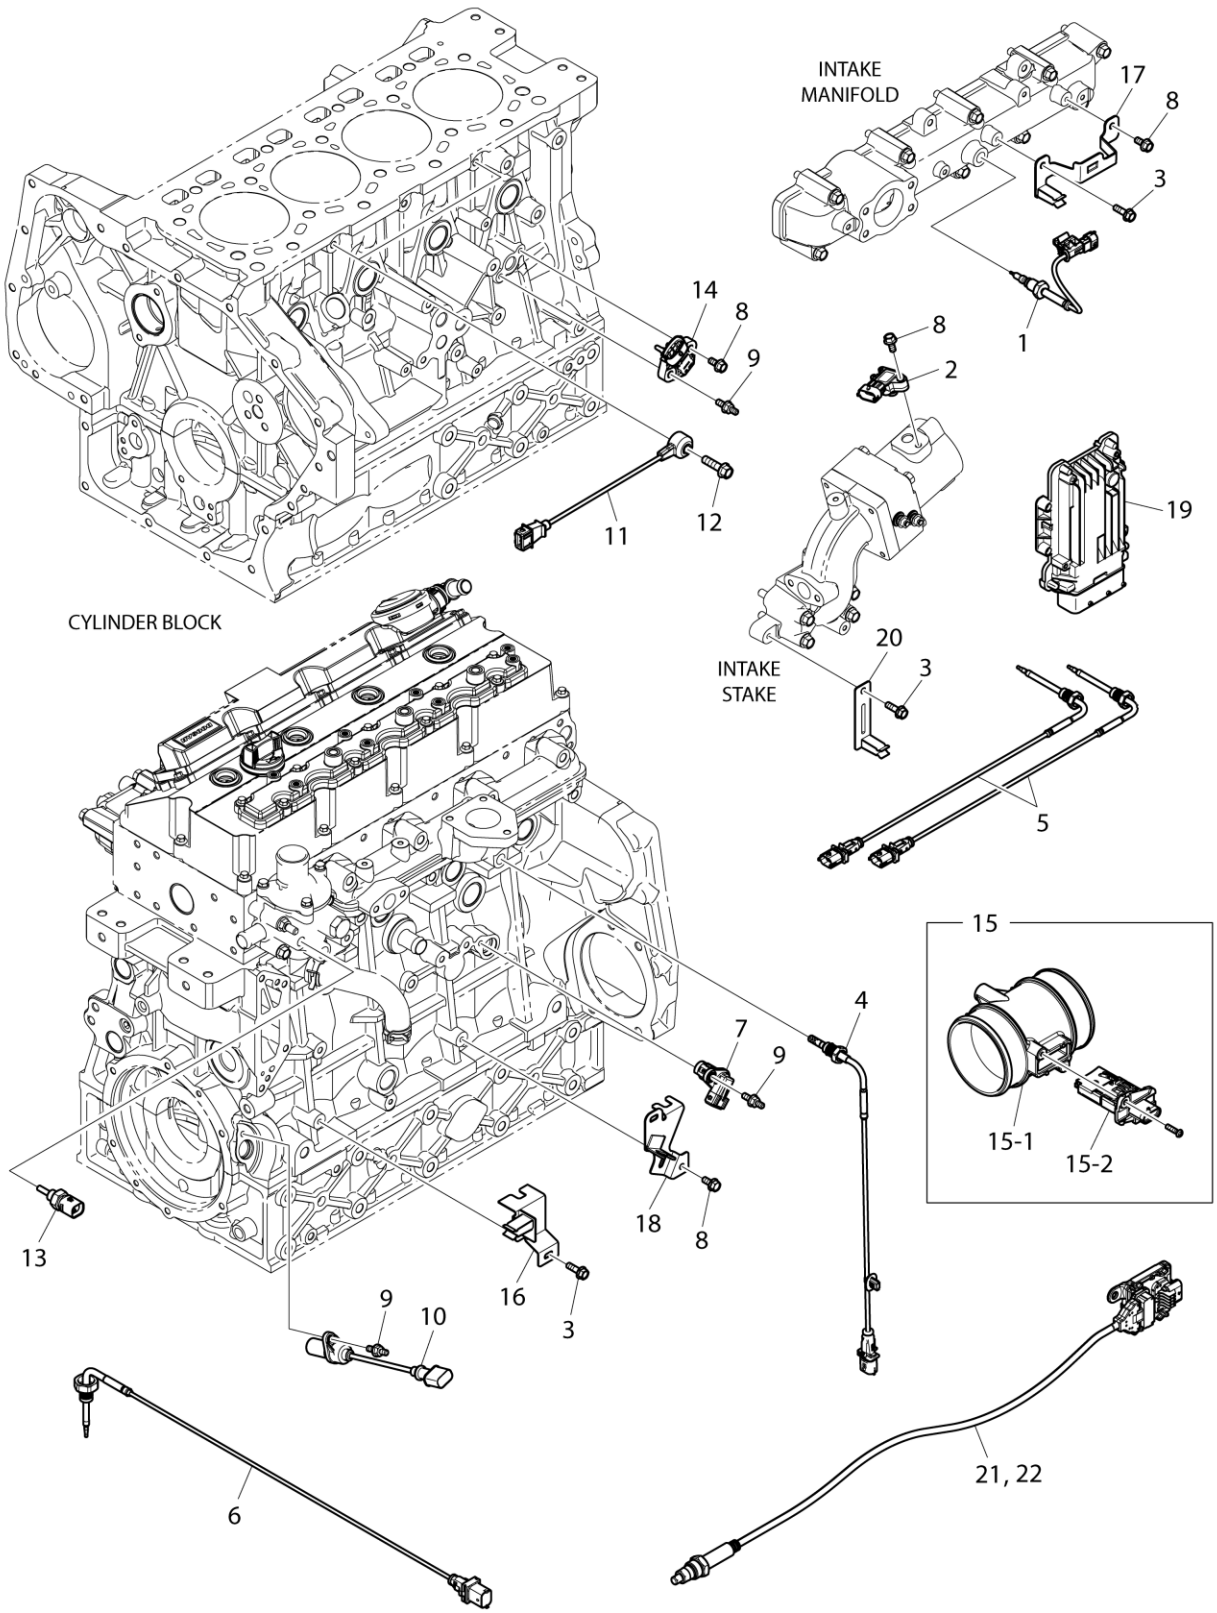

NOTE

https://truckmanualshub.com/

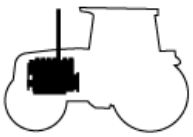FIG 141 T1104SC / T1054SC / T954SC	ENGINE HARNESS ASSY	P1	YEAR 2014	

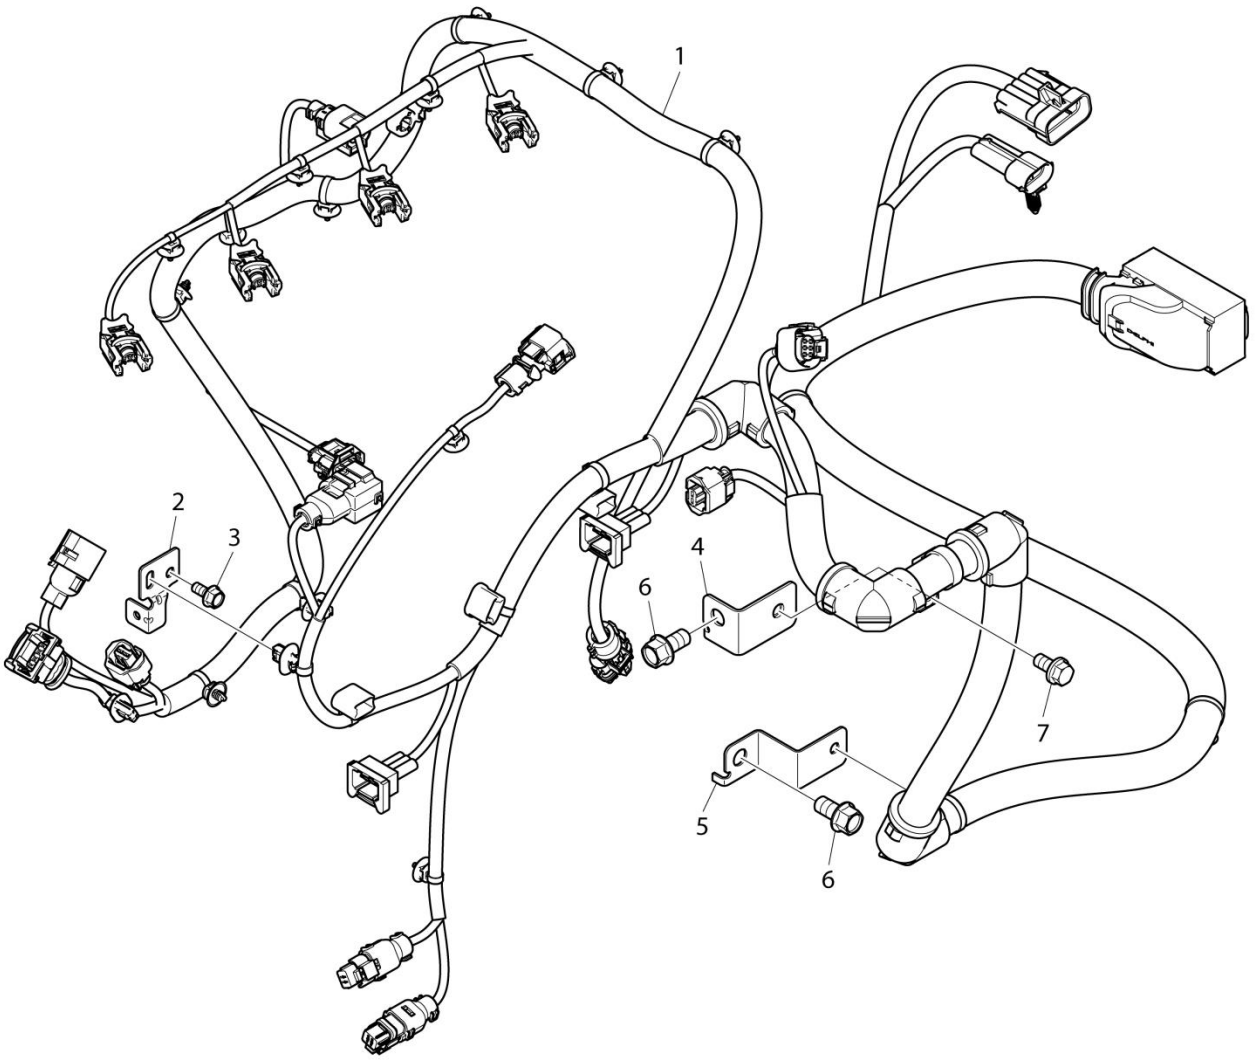

NOTE

FIG 142


T1104SC / T1054SC / T954SC


PTO ASSY

P1

YEAR

2014

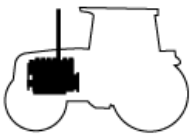

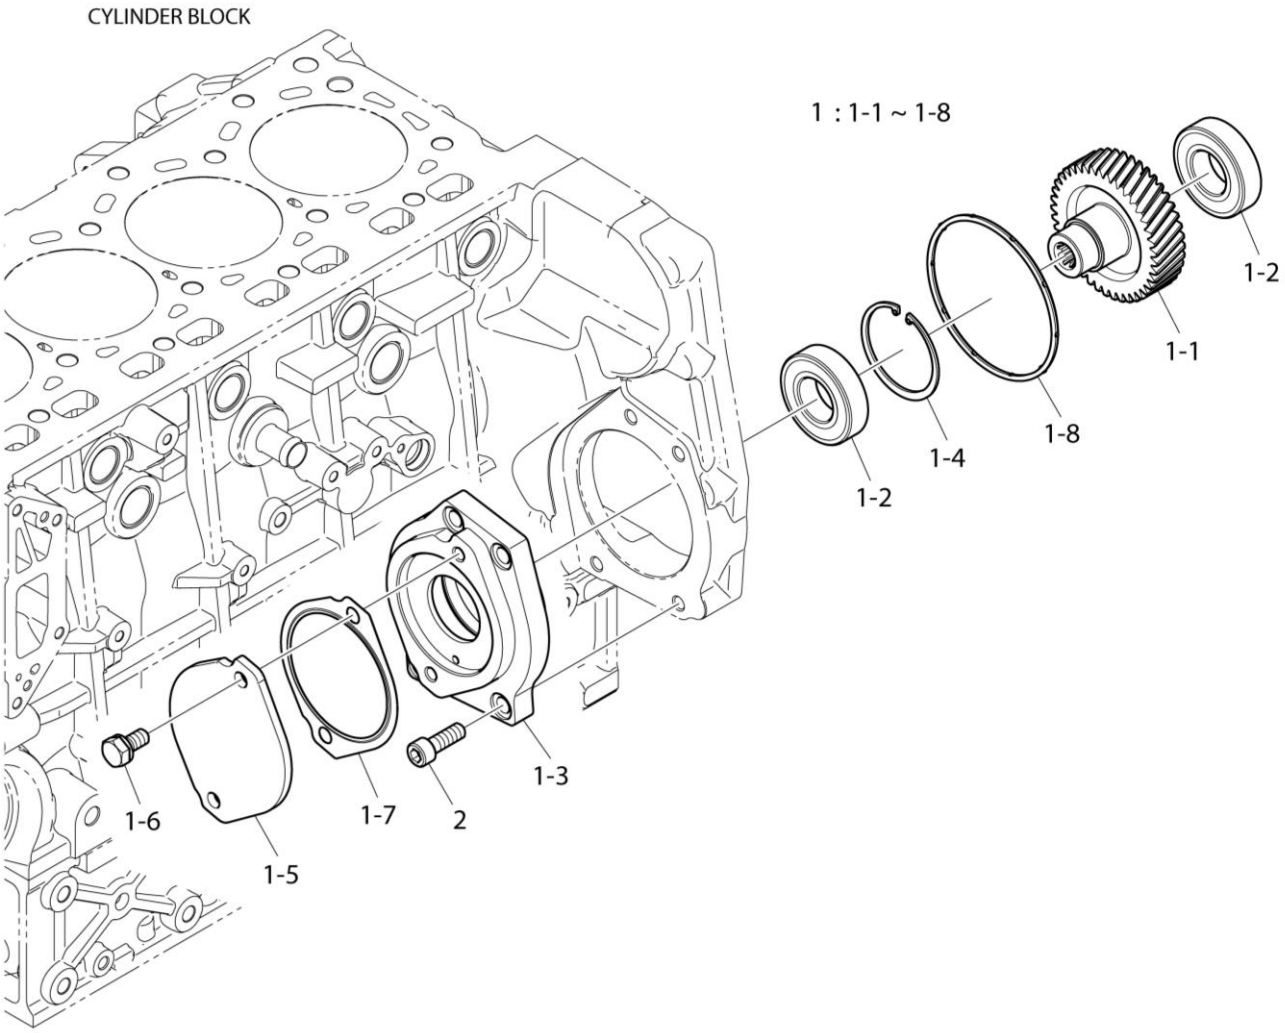

NOTE

https://truckmanualshub.com/

FIG 143


T1104SC / T1054SC / T954SC

MOUNTING BRACKET

P1

YEAR

2014

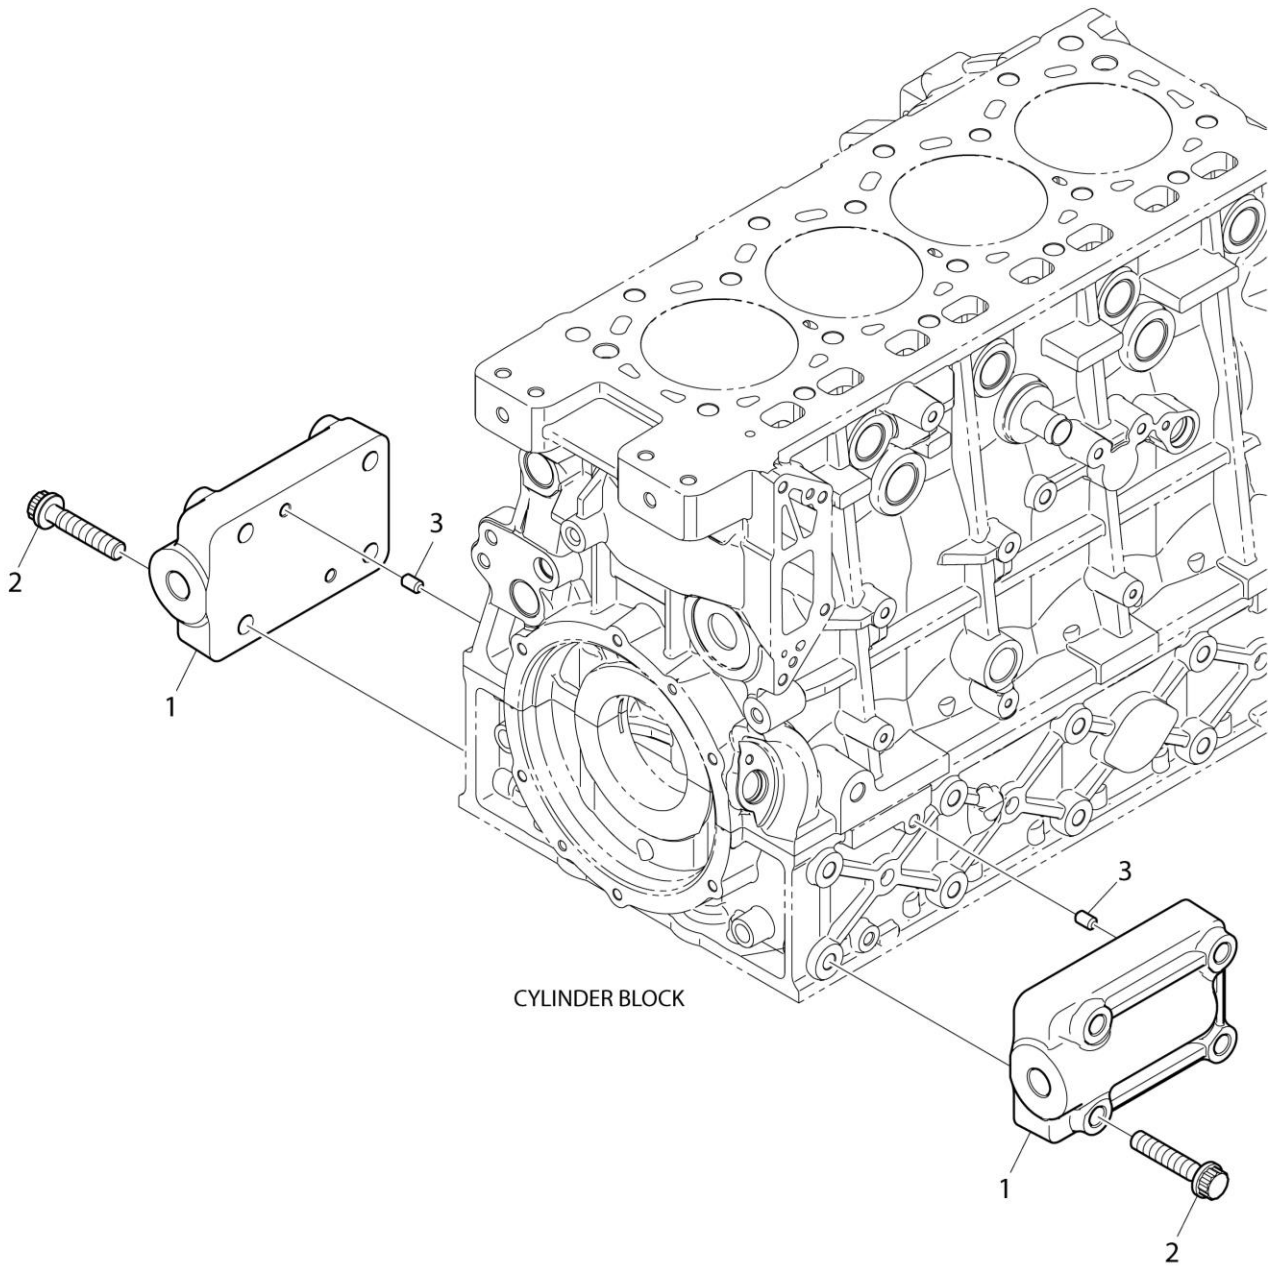

NOTE

FIG 201


T1104SC / T1054SC / T954SC

AIR CLEANER

P1

YEAR

2014

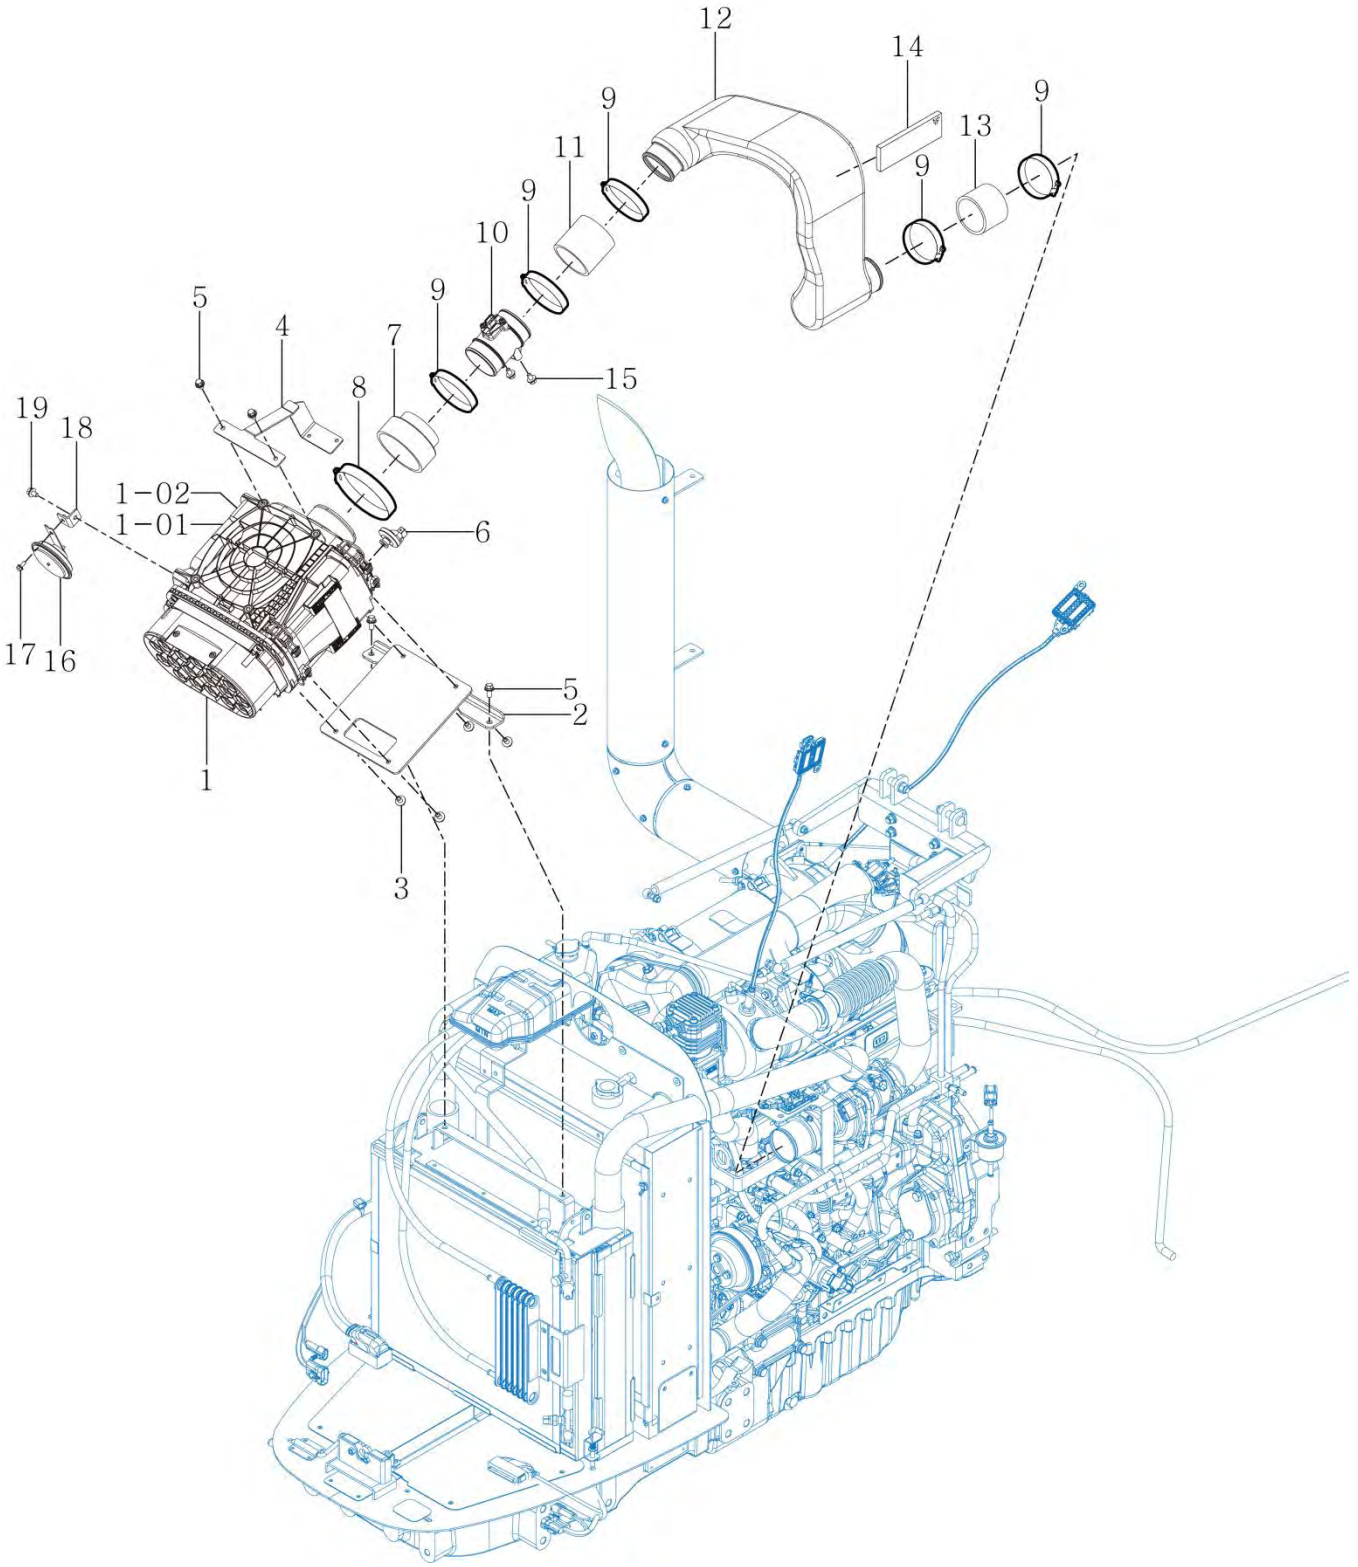

NOTE

FIG 202


T1104SC / T1054SC / T954SC

RADIATOR

P1

YEAR

2014

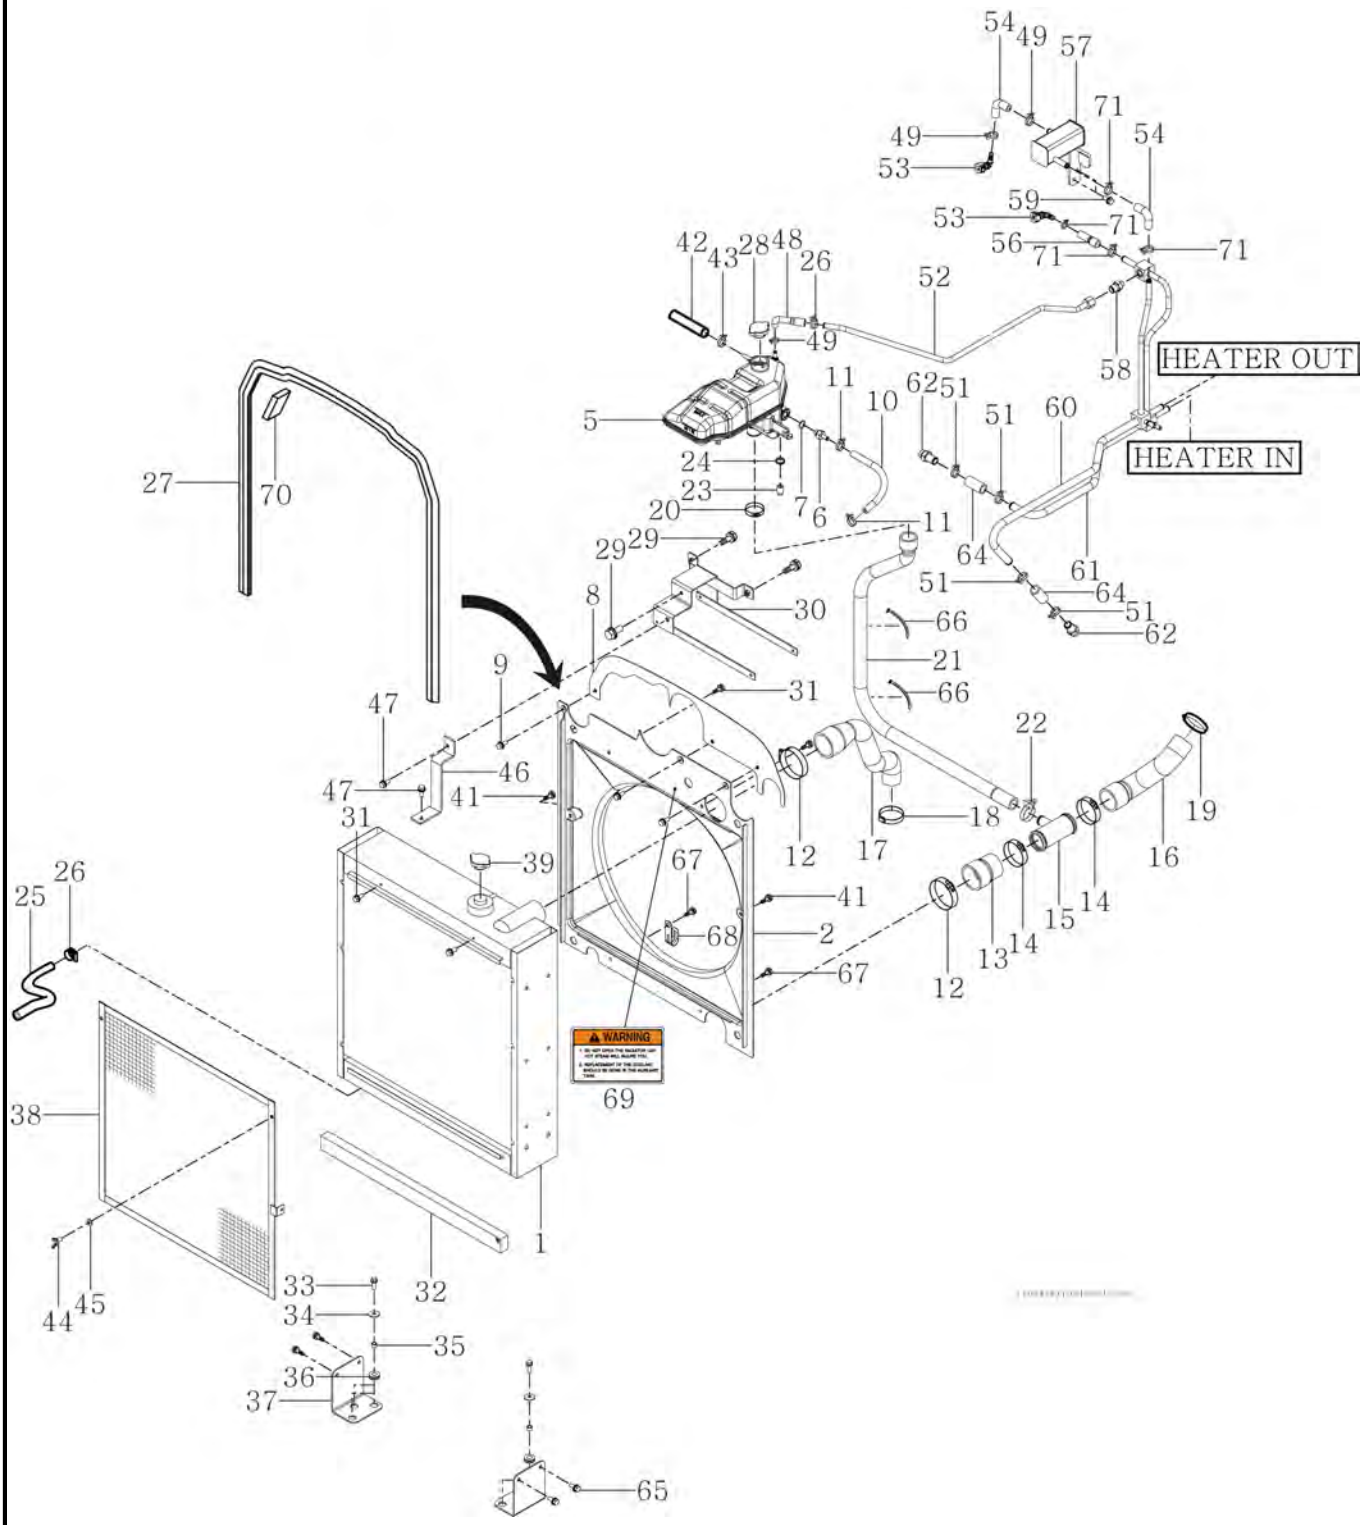

NOTE

FIG 202


T1104SC / T1054SC / T954SC

RADIATOR

P2

YEAR

2014

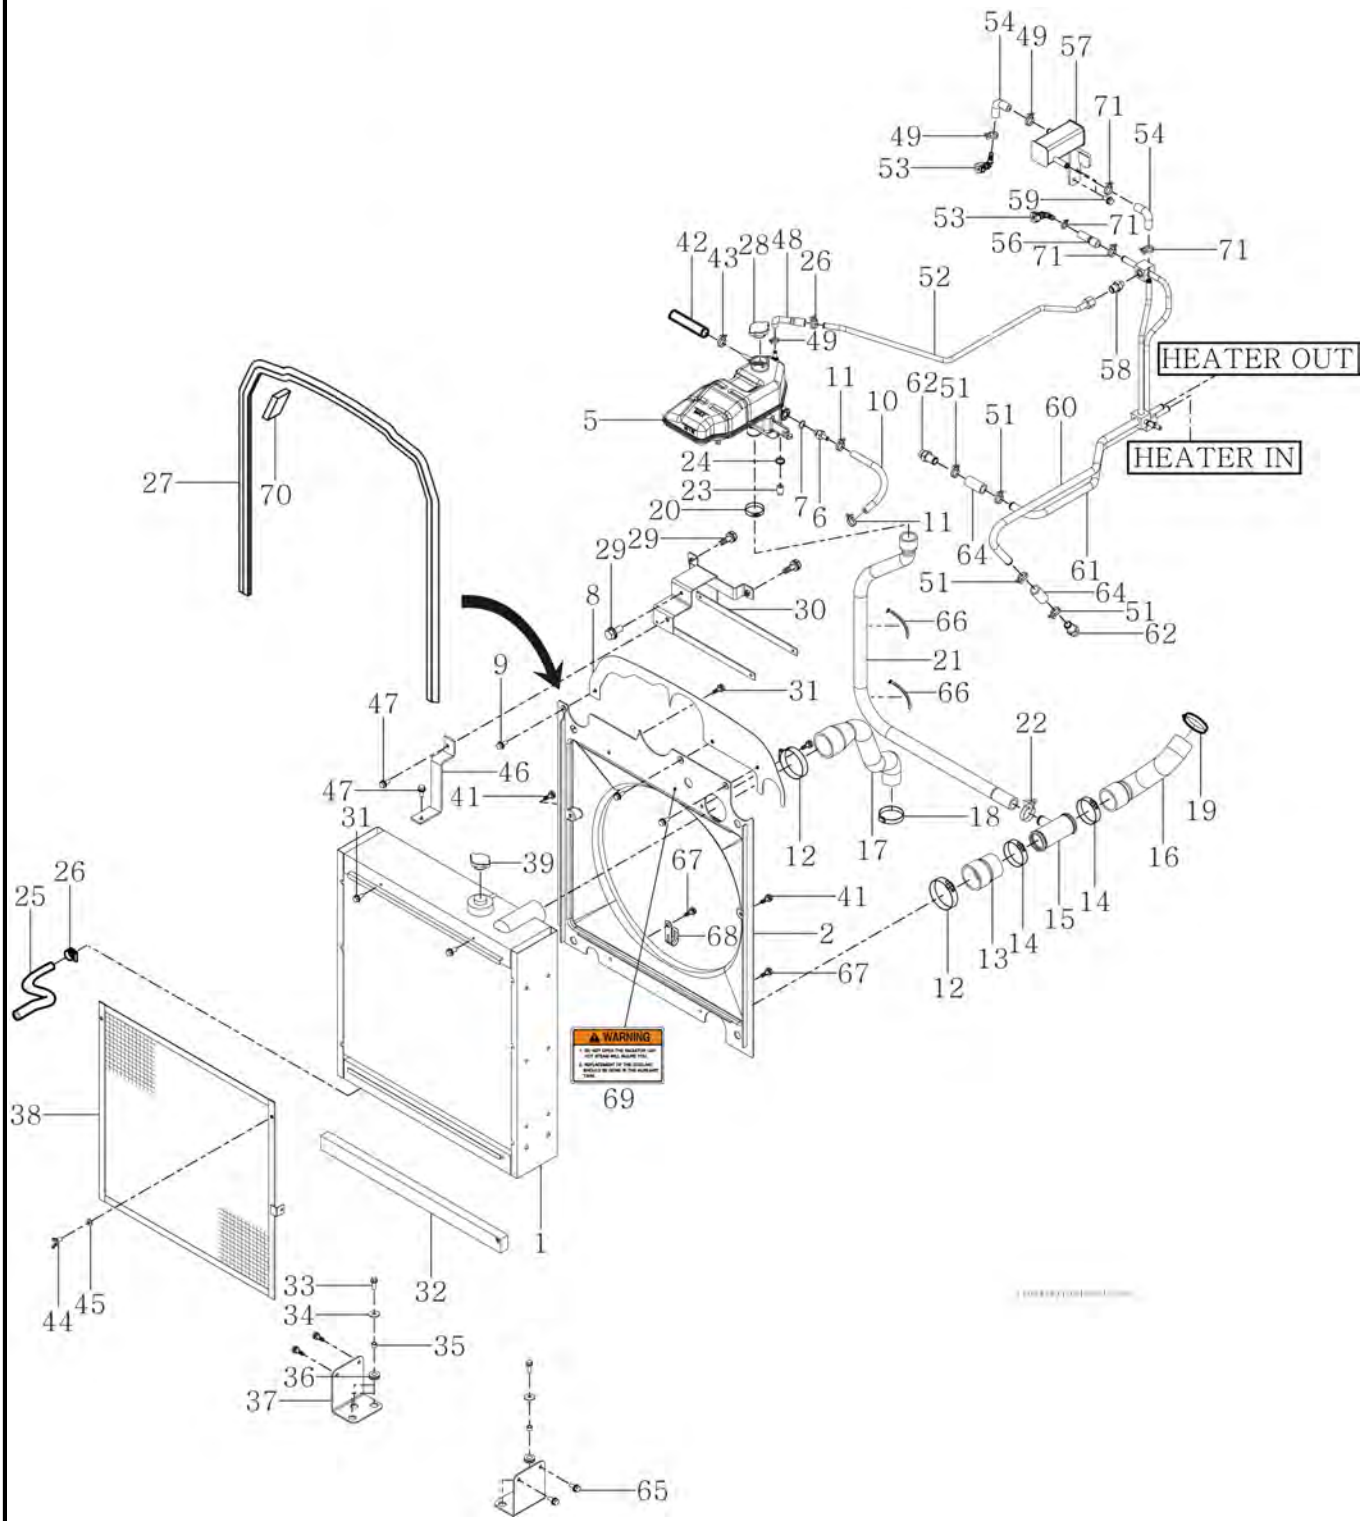

NOTE

FIG 203


T1104SC / T1054SC / T954SC

EXHAUST PIPE

P1

YEAR

2014

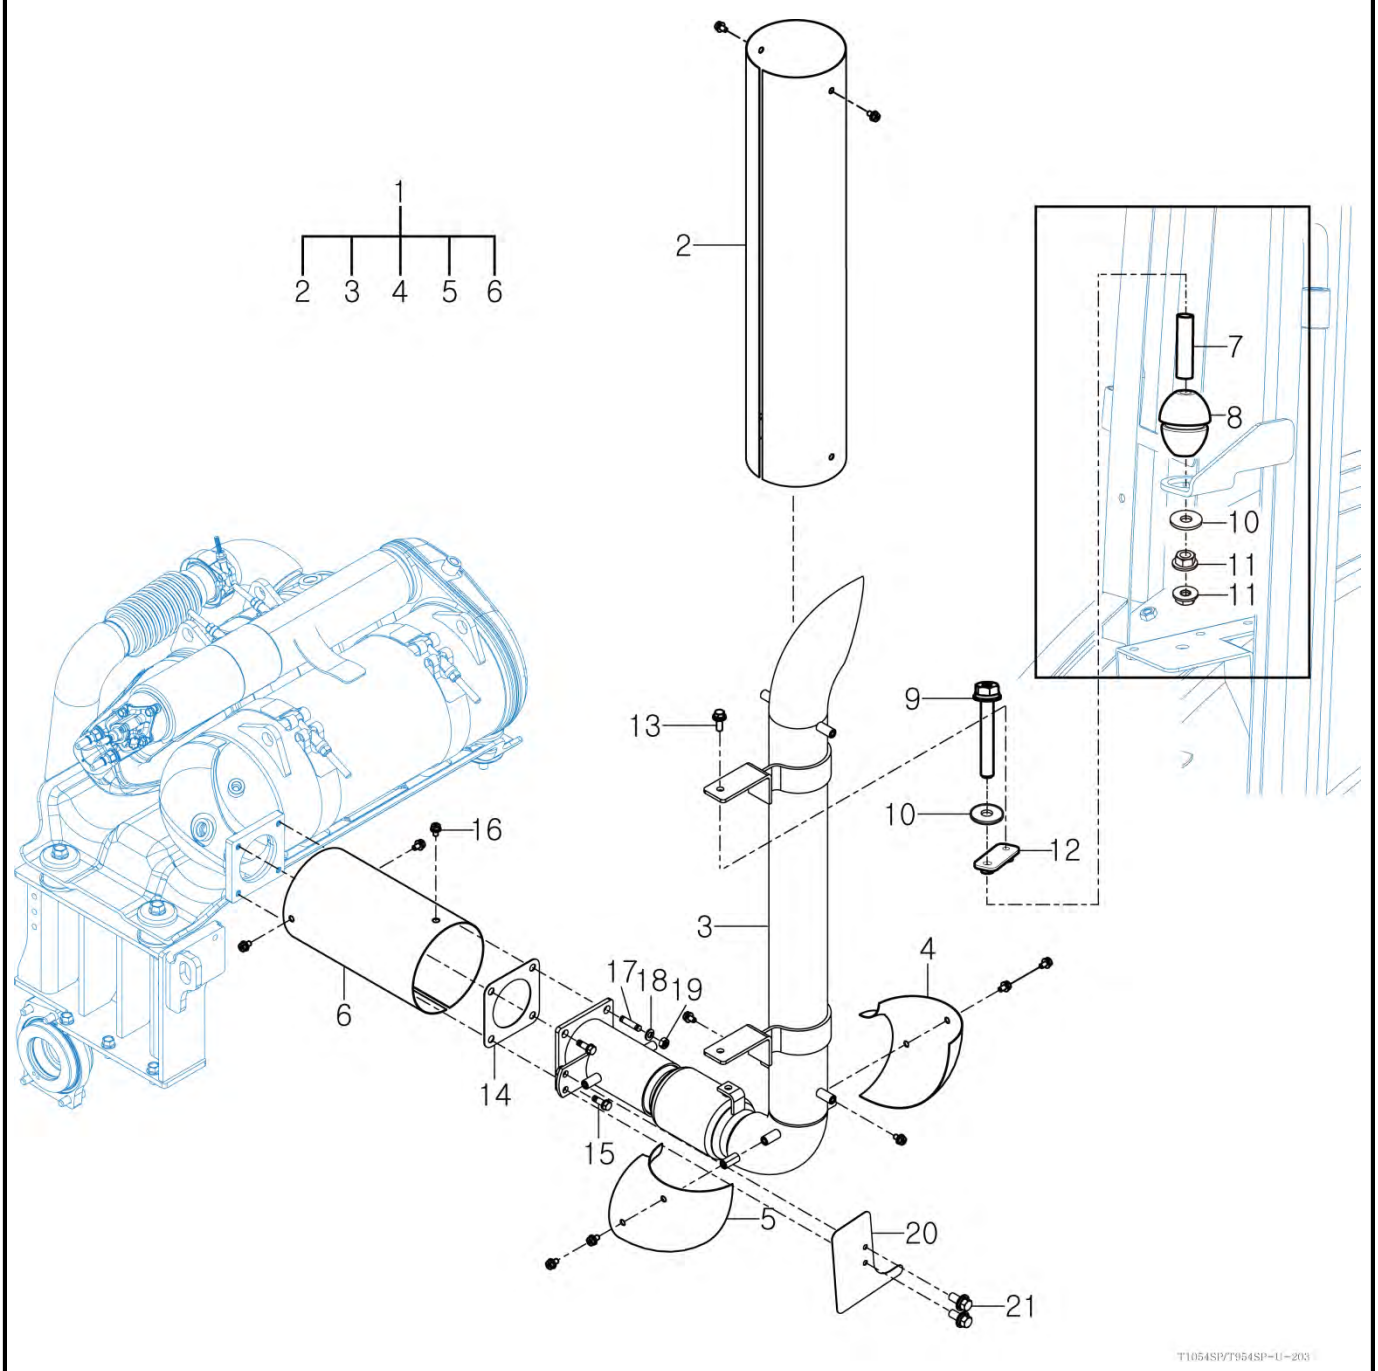

NOTE

FIG 205


T1104SC / T1054SC / T954SC

FUEL TANK & FUEL LINES

P1

YEAR

2014

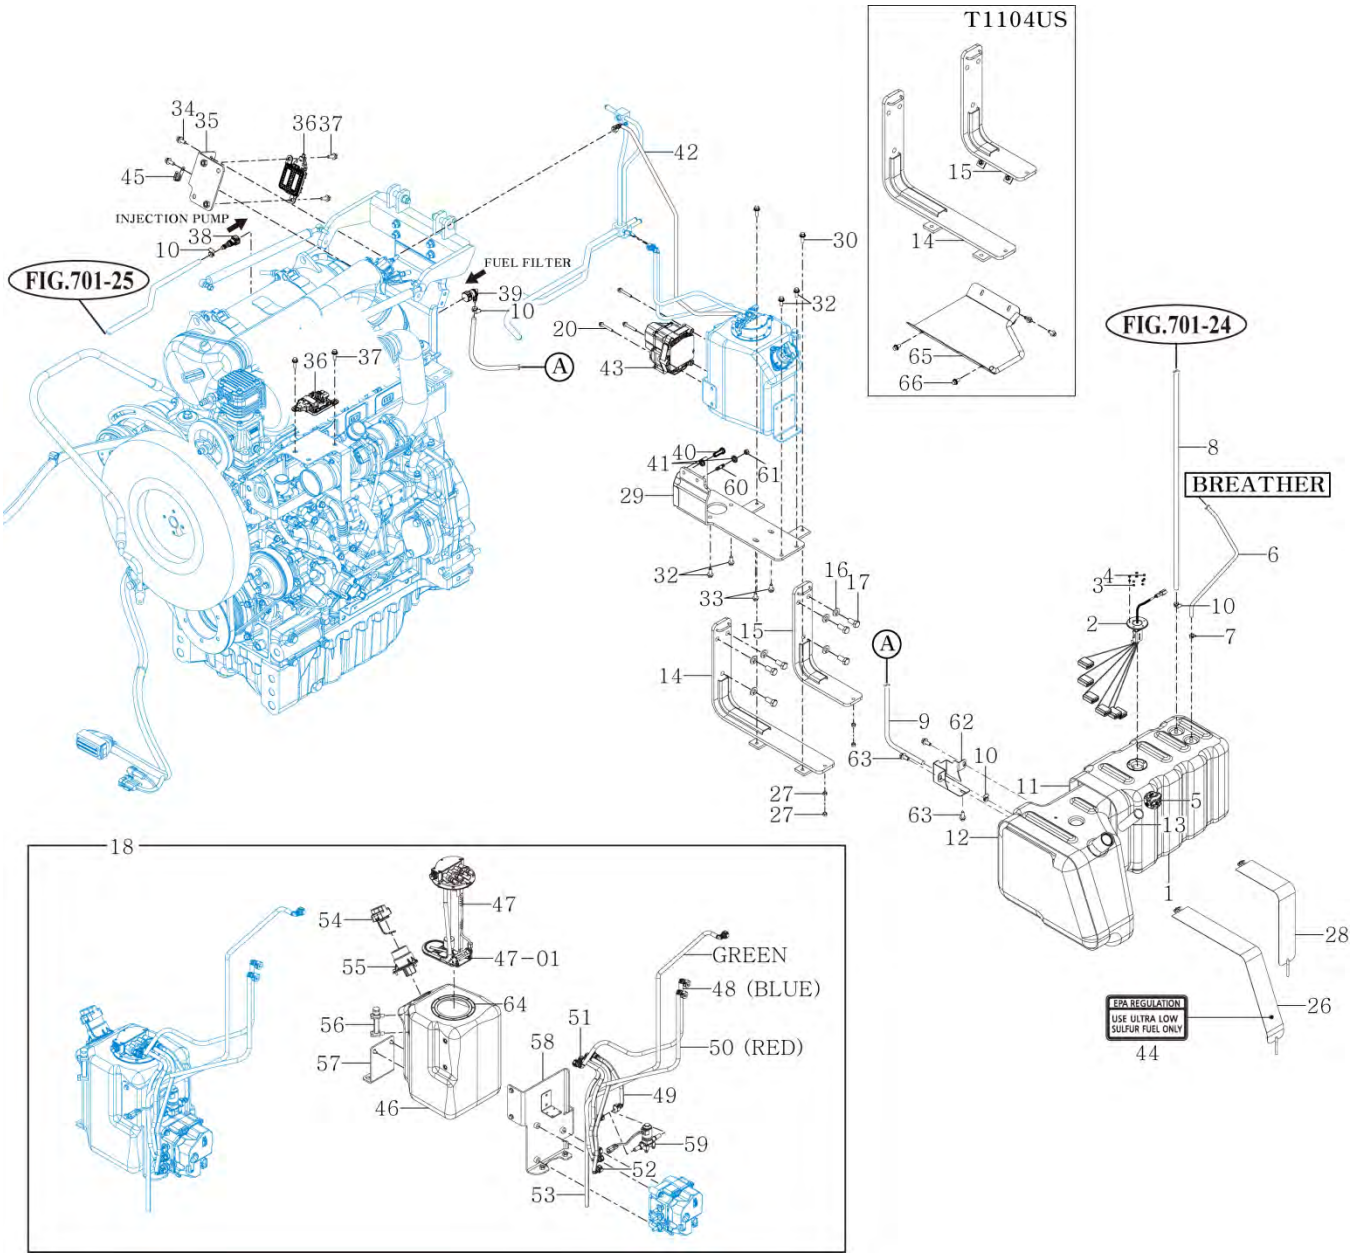

NOTE

FIG 205


T1104SC / T1054SC / T954SC

FUEL TANK & FUEL LINES

P2

YEAR

2014

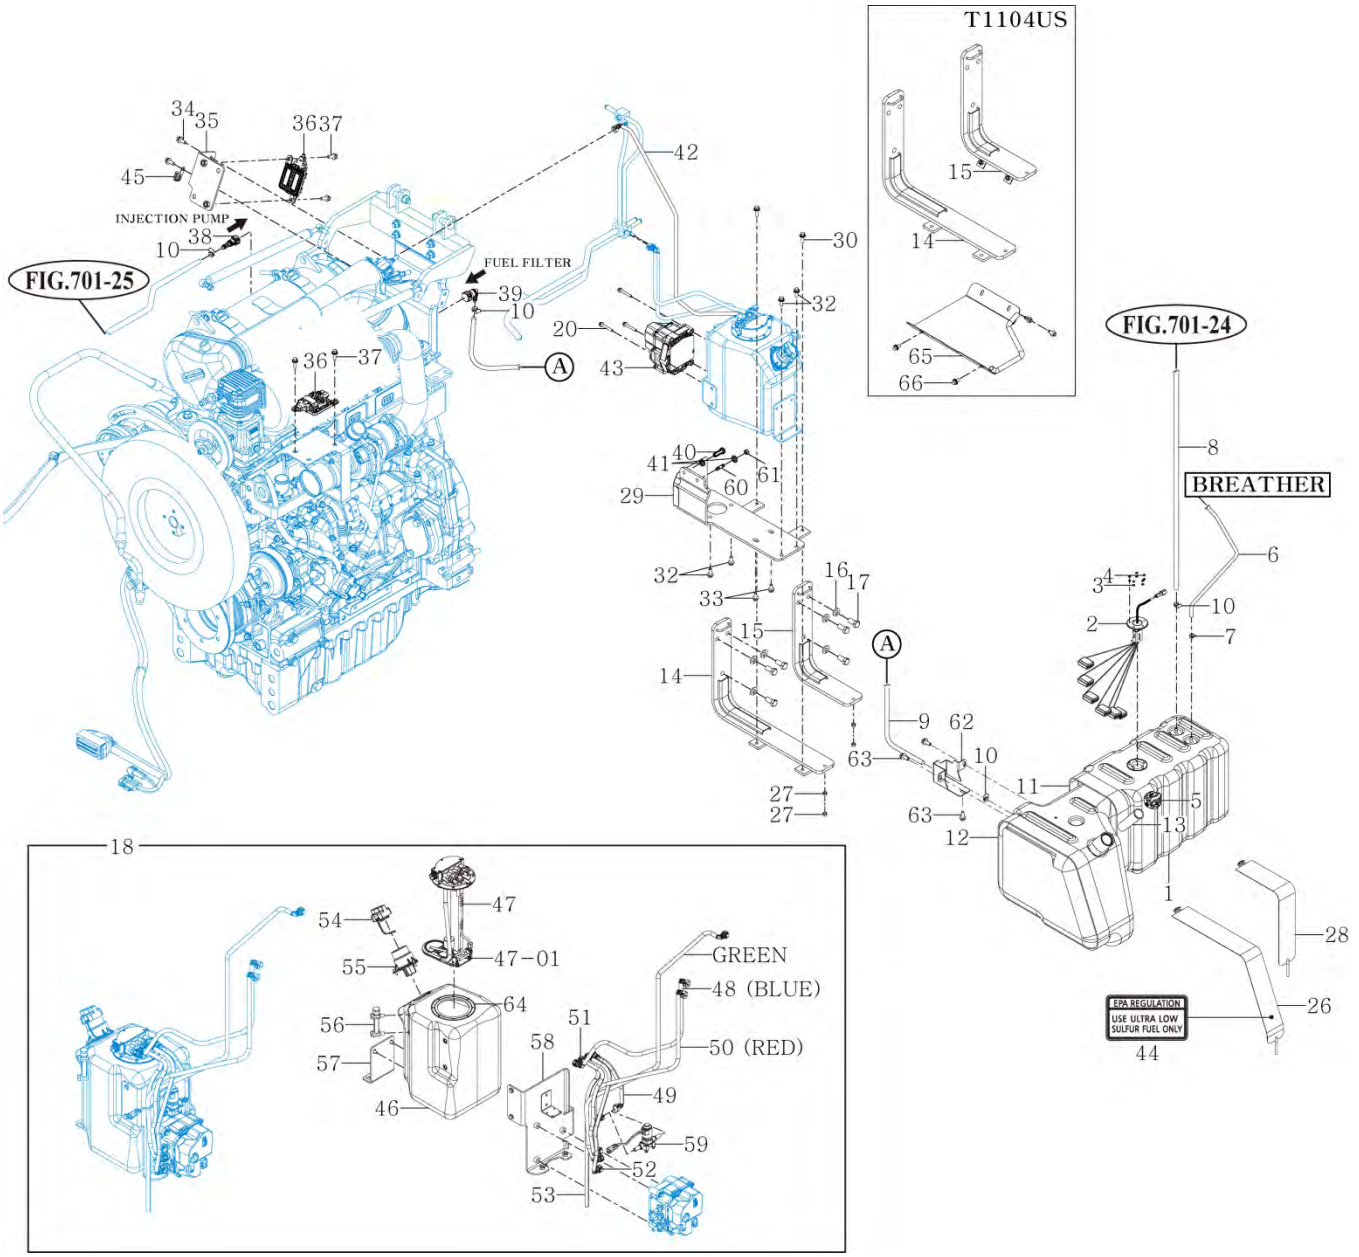

NOTE

FIG 206


T1104SC / T1054SC / T954SC


CABLE,THROTTLE&ACCELERATOR ASSY

P1

YEAR

2014

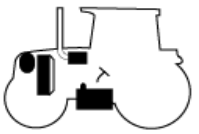

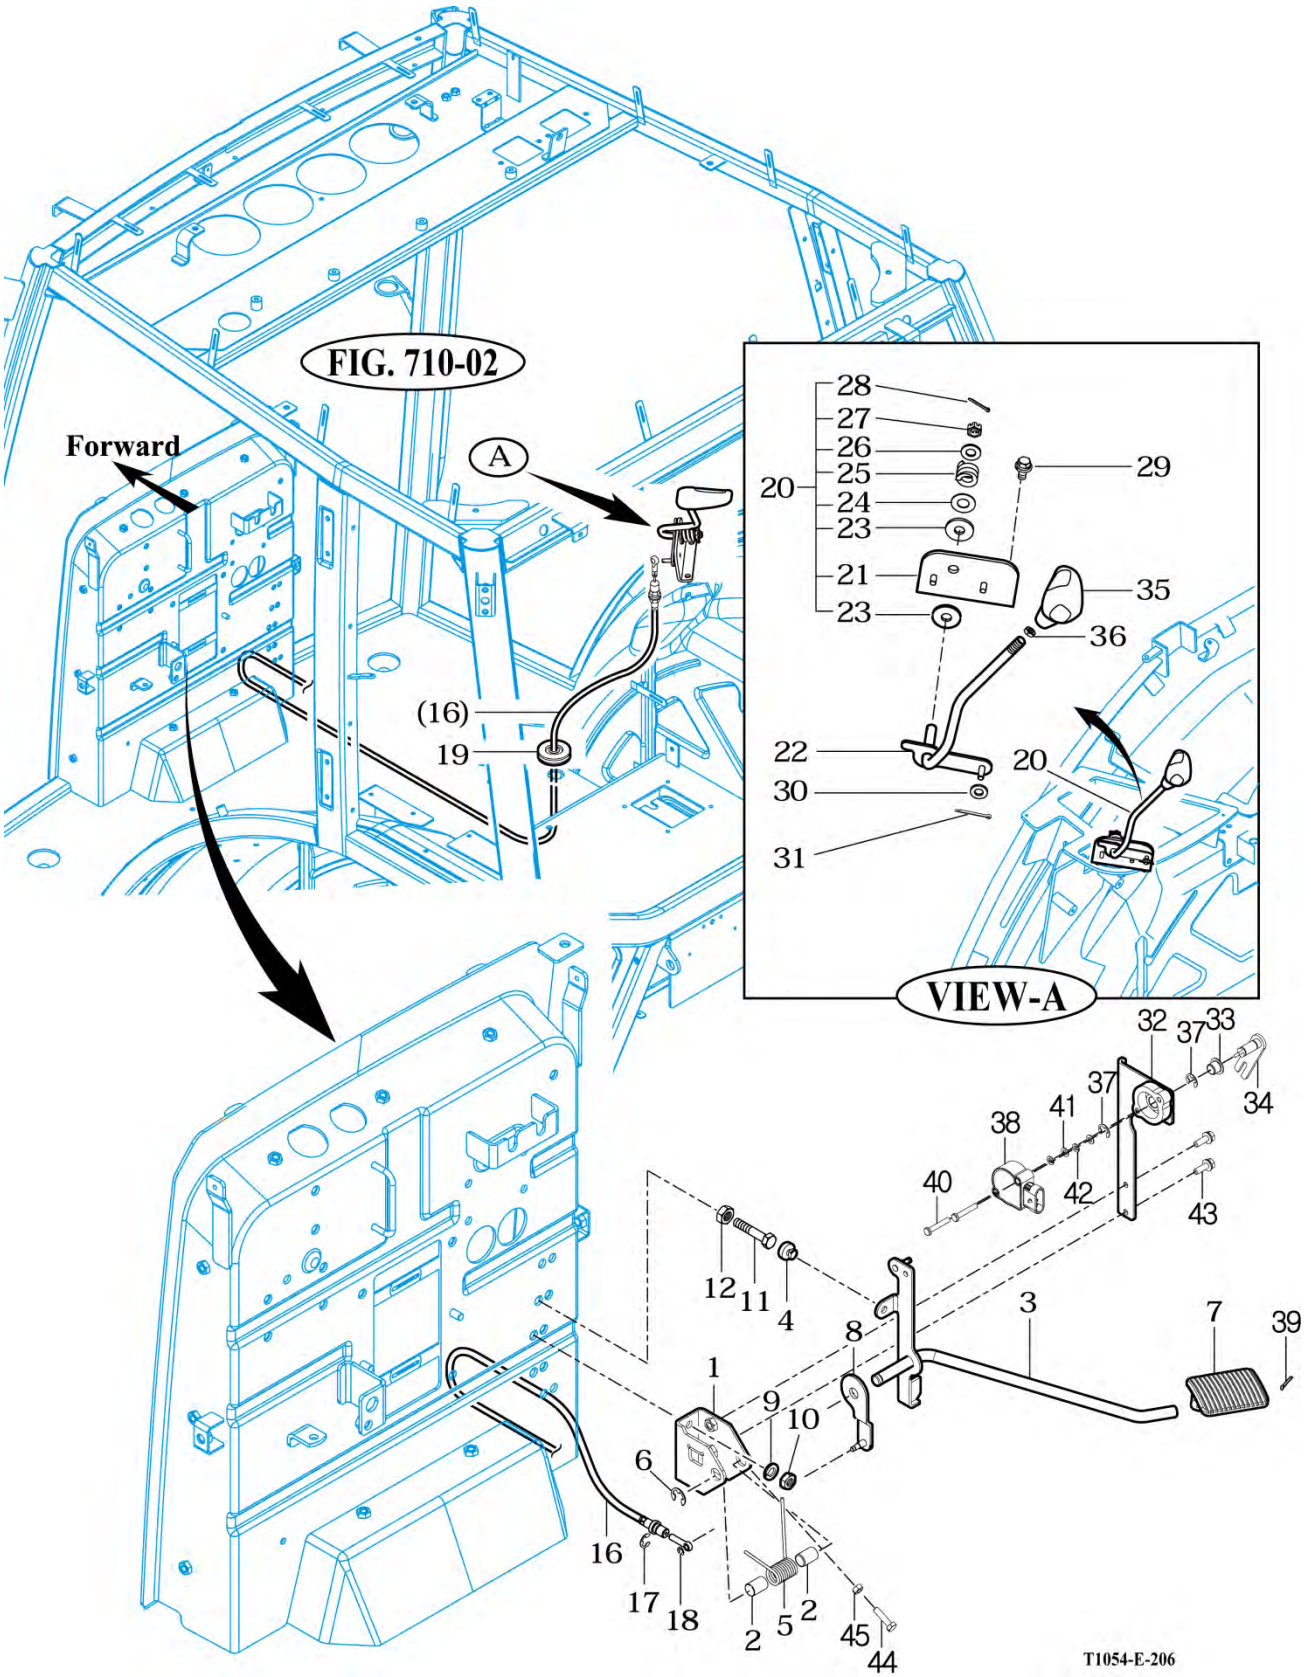

NOTE

FIG 207


T1104SC / T1054SC / T954SC

INTERCOOLER

P1

YEAR

2014

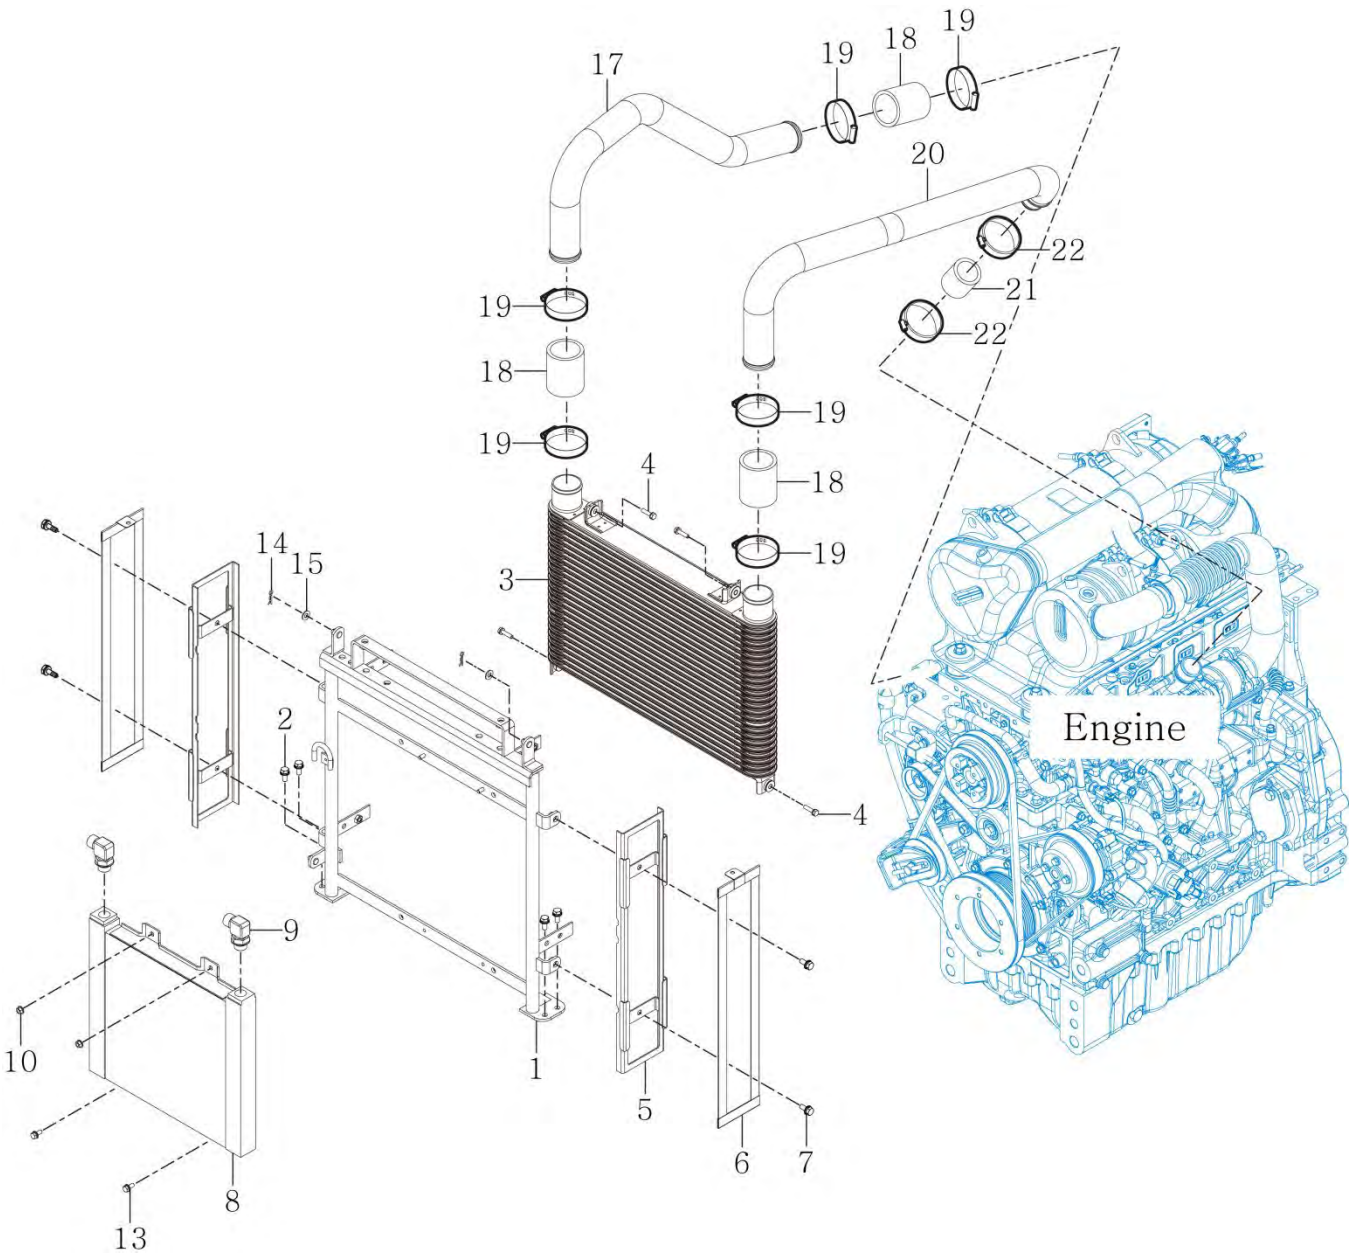

NOTE

FIG 301


T1104SC / T1054SC / T954SC


DAMPER FLANGE ASSY

P1

YEAR

2014

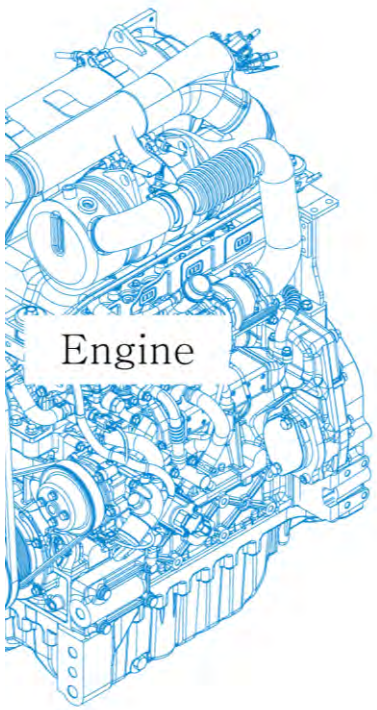

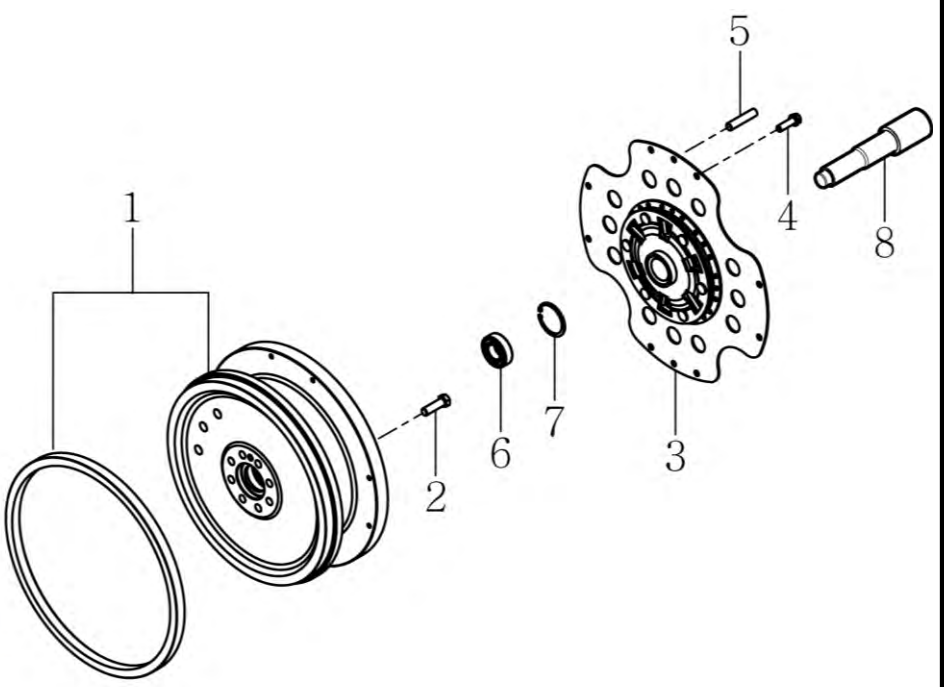

NOTE

FIG 302


T1104SC / T1054SC / T954SC

CASE SUB ASSY, BRAKE

P1

YEAR

2014

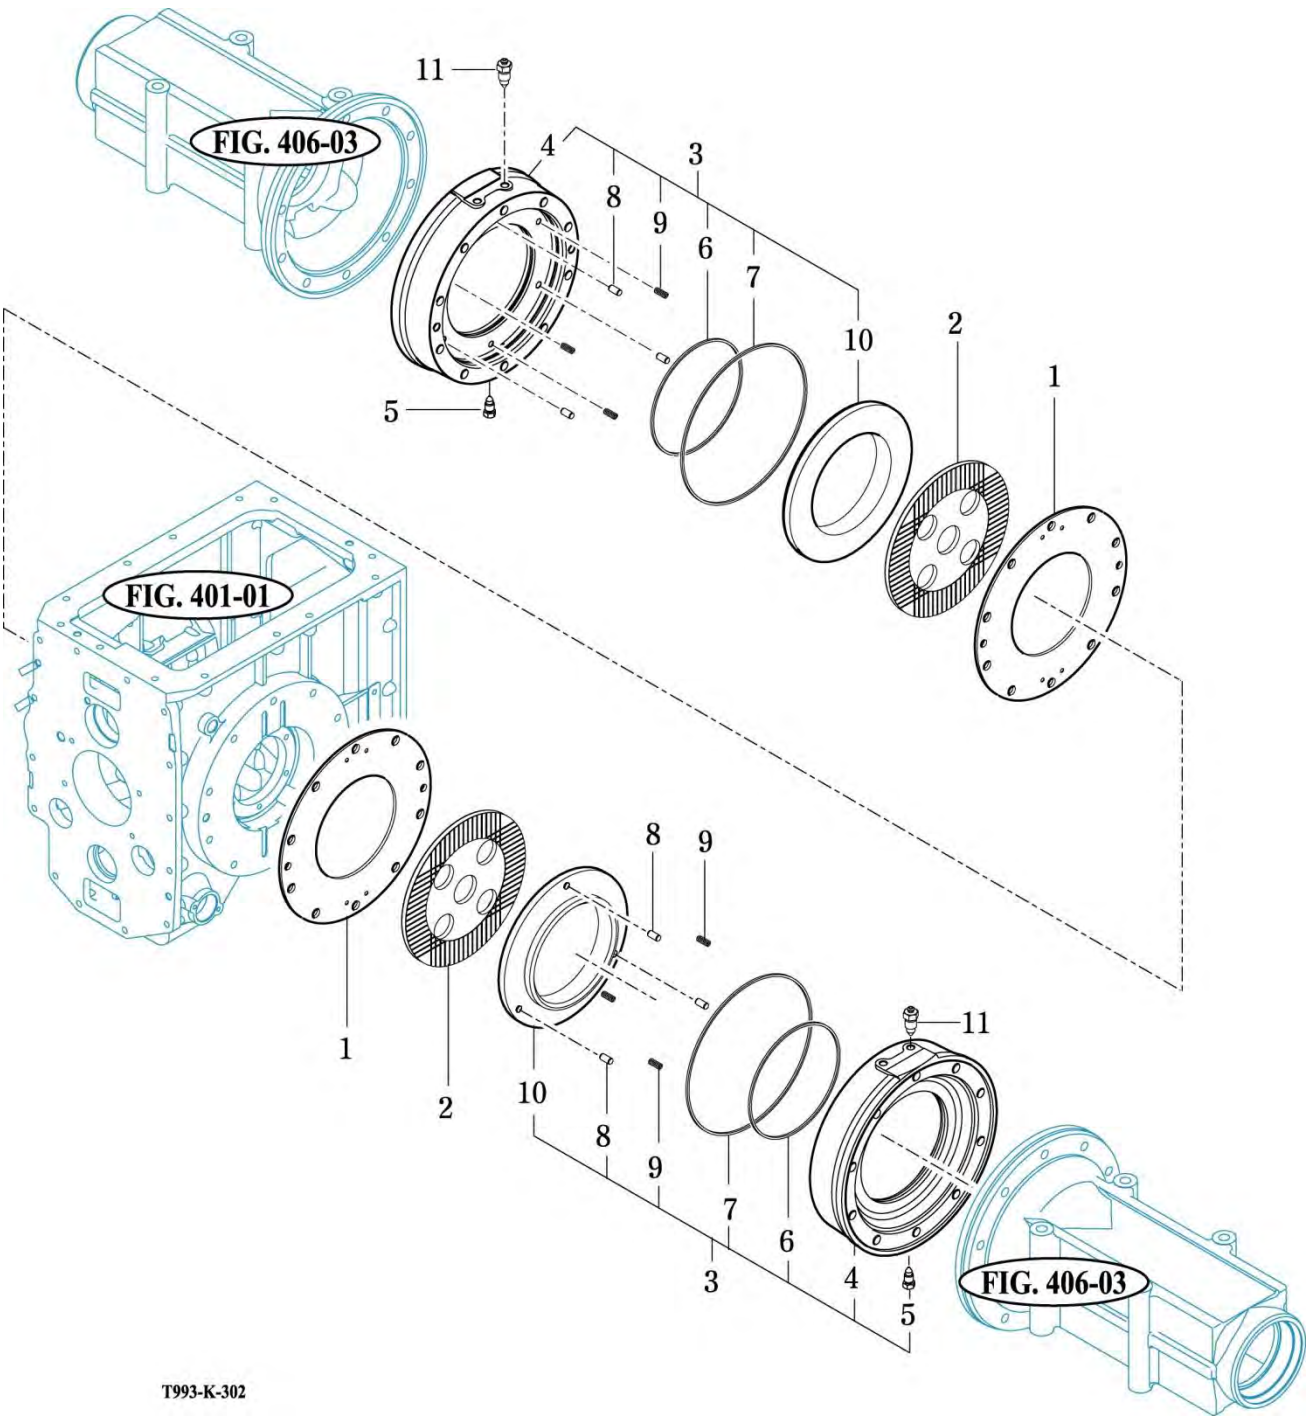

NOTE

FIG 303A


T1104SC / T1054SC / T954SC

BRAKE PIPES

P1

YEAR

2014

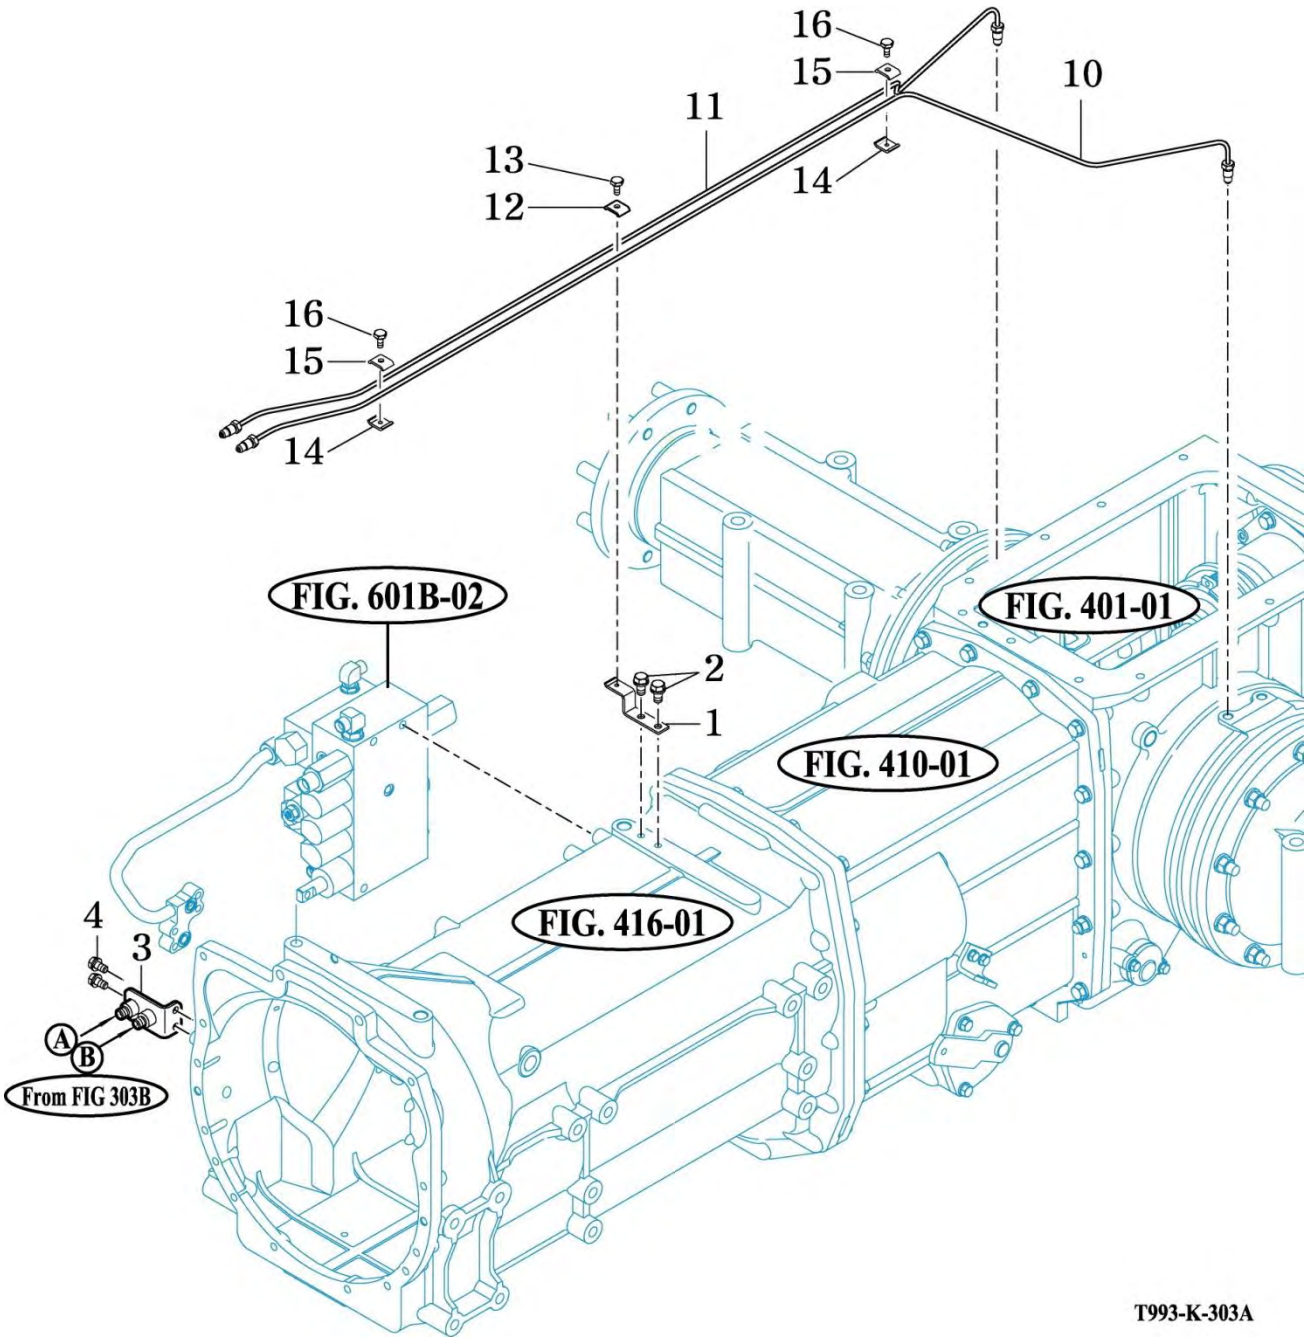

NOTE

FIG 303B


T1104SC / T1054SC / T954SC


BRAKE

P1

YEAR

2014

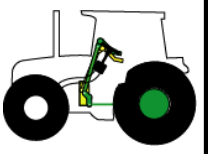

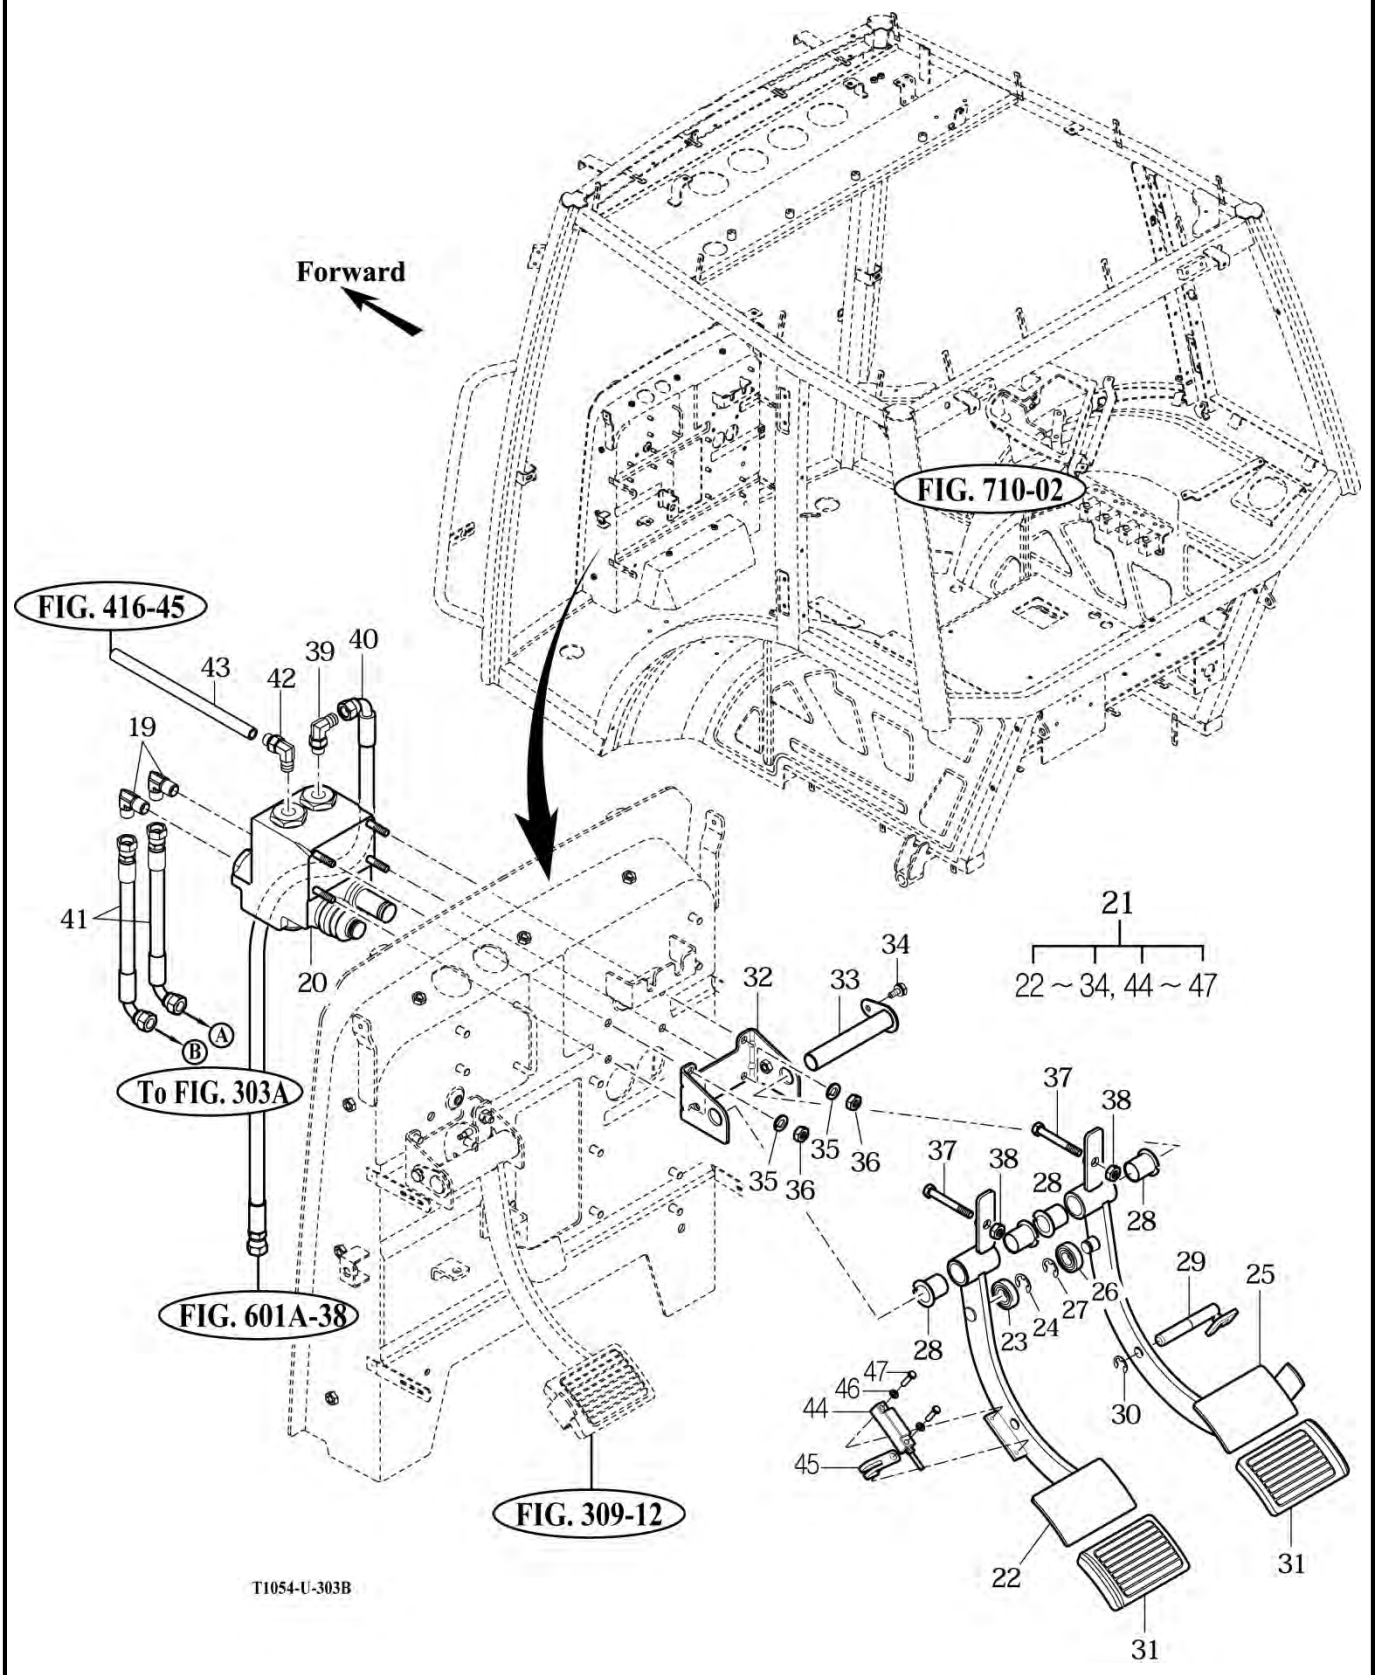

NOTE

FIG 304


T1104SC / T1054SC / T954SC


FRONT WHEEL

P1

YEAR 2014

EU ONLY

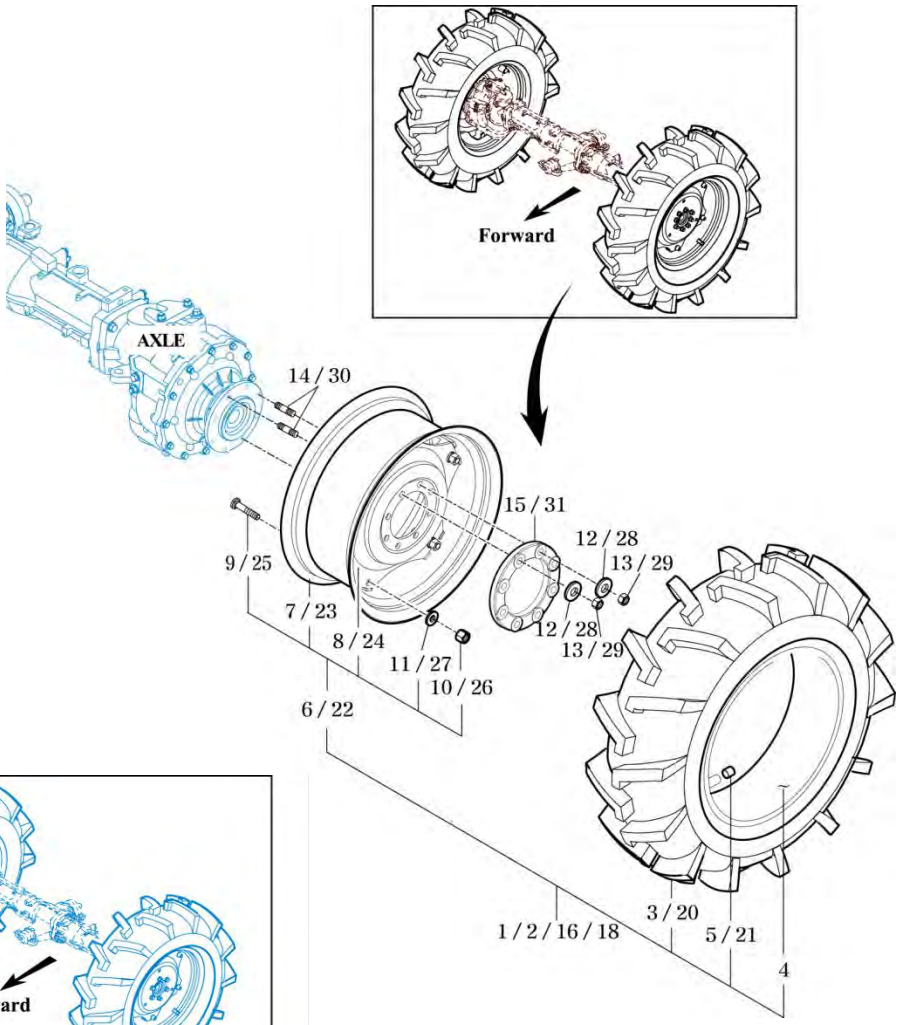


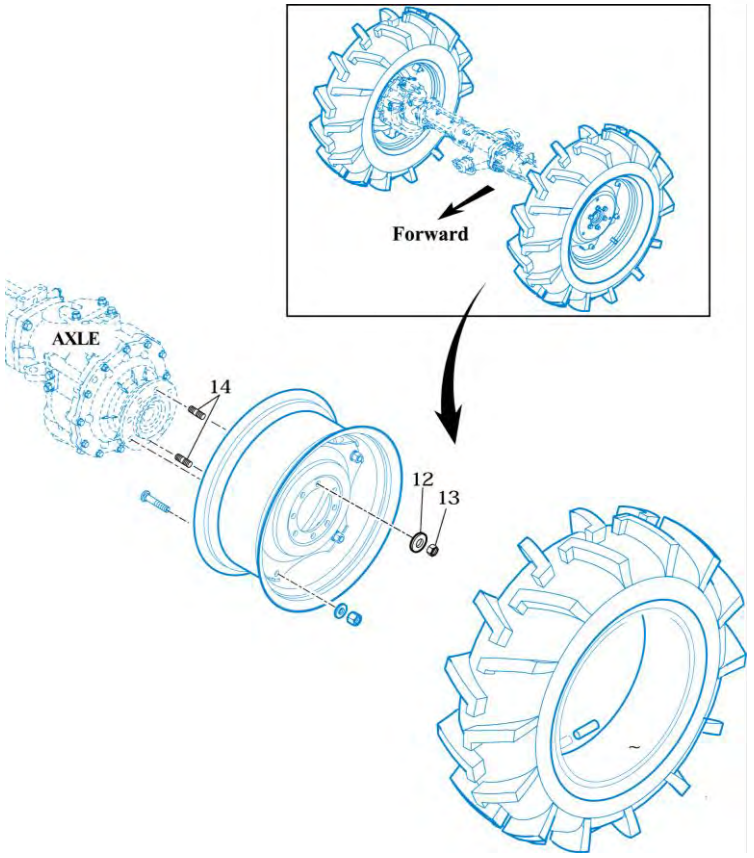


US ONLY

NOTE

EU ONLY

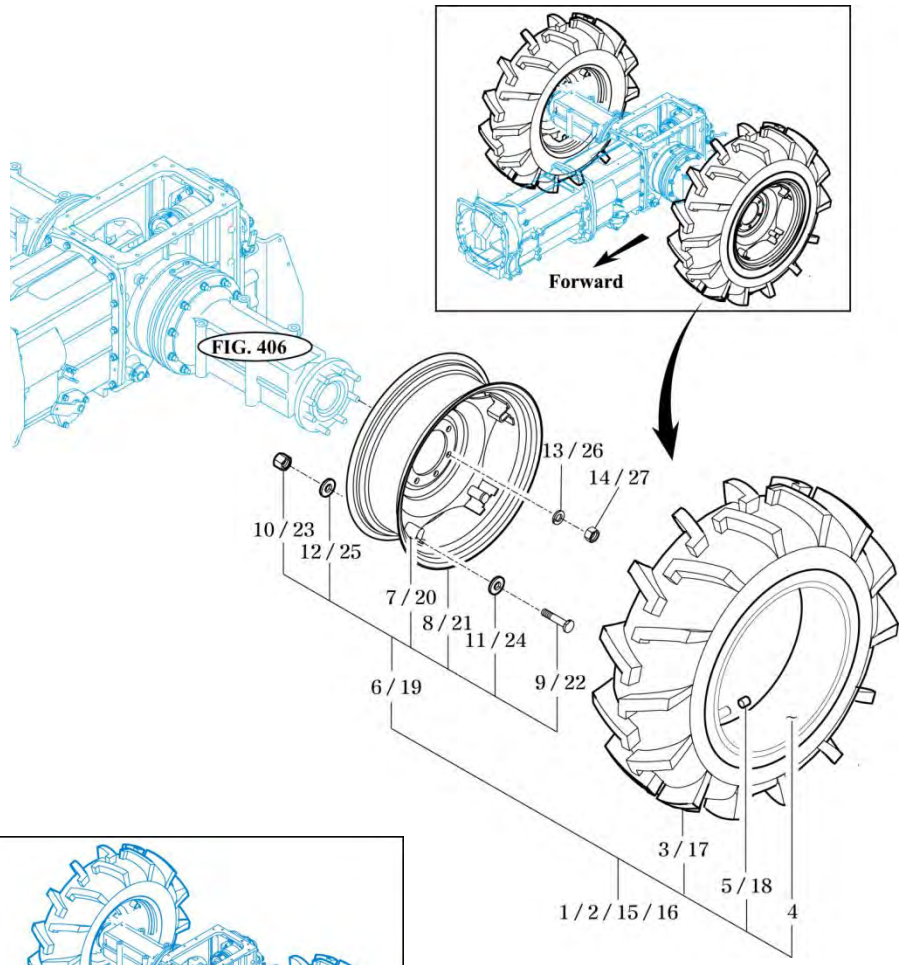

US ONLY

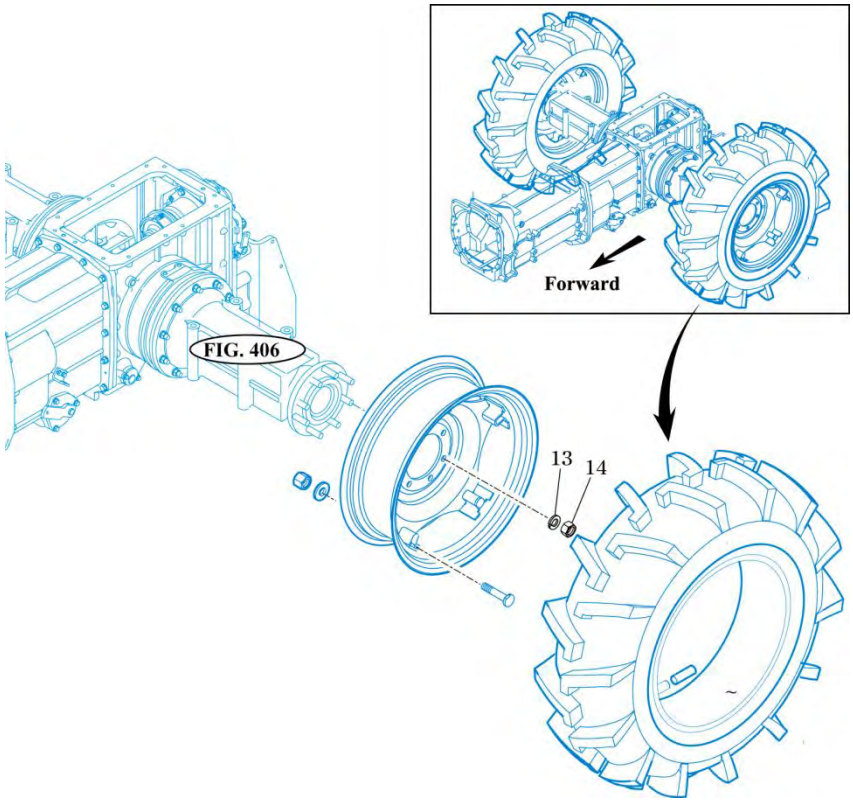

NOTE

FIG 306


T1104SC / T1054SC / T954SC

STEERING WHEEL ASSY

P1

YEAR

2014

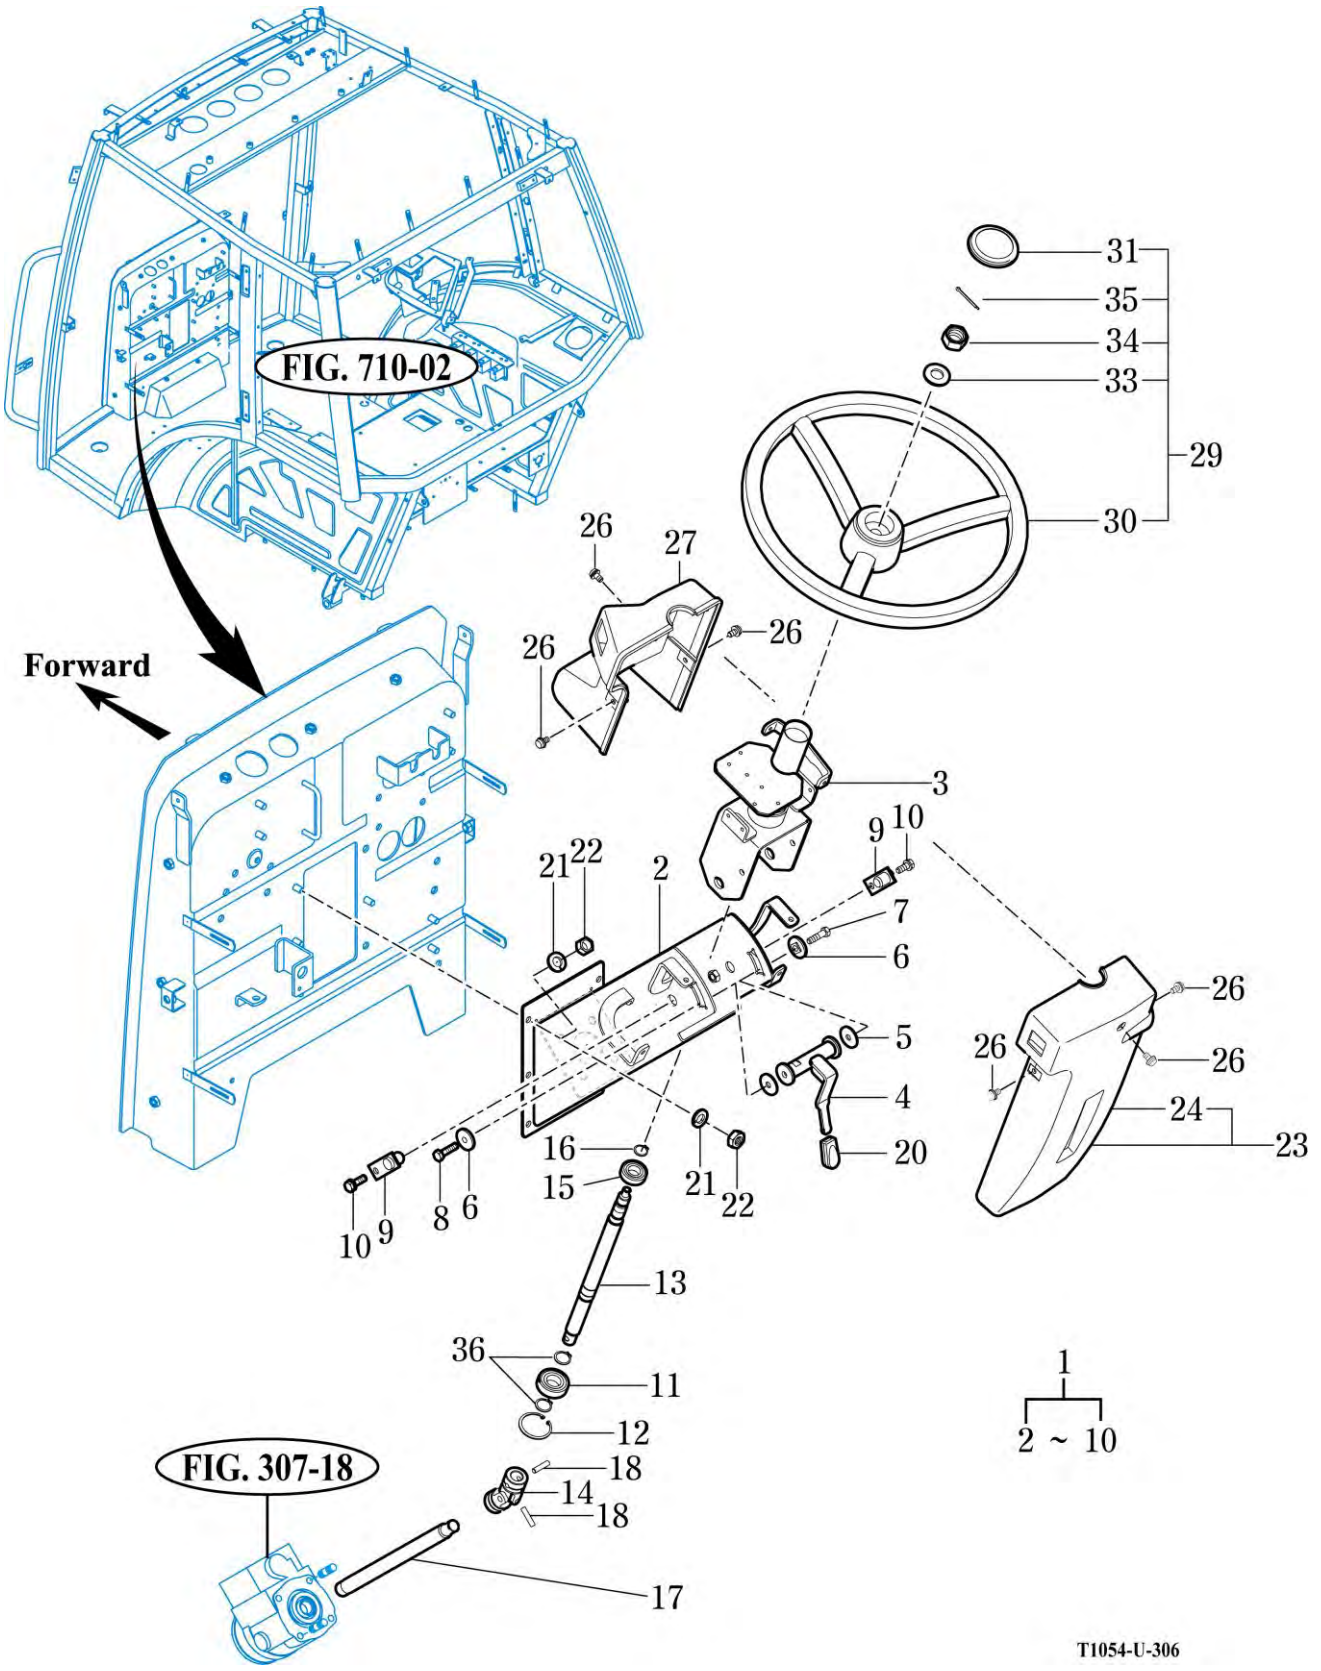

NOTE

FIG 307


T1104SC / T1054SC / T954SC


POWER STEERING VALVE

P1

YEAR

2014

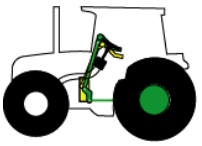

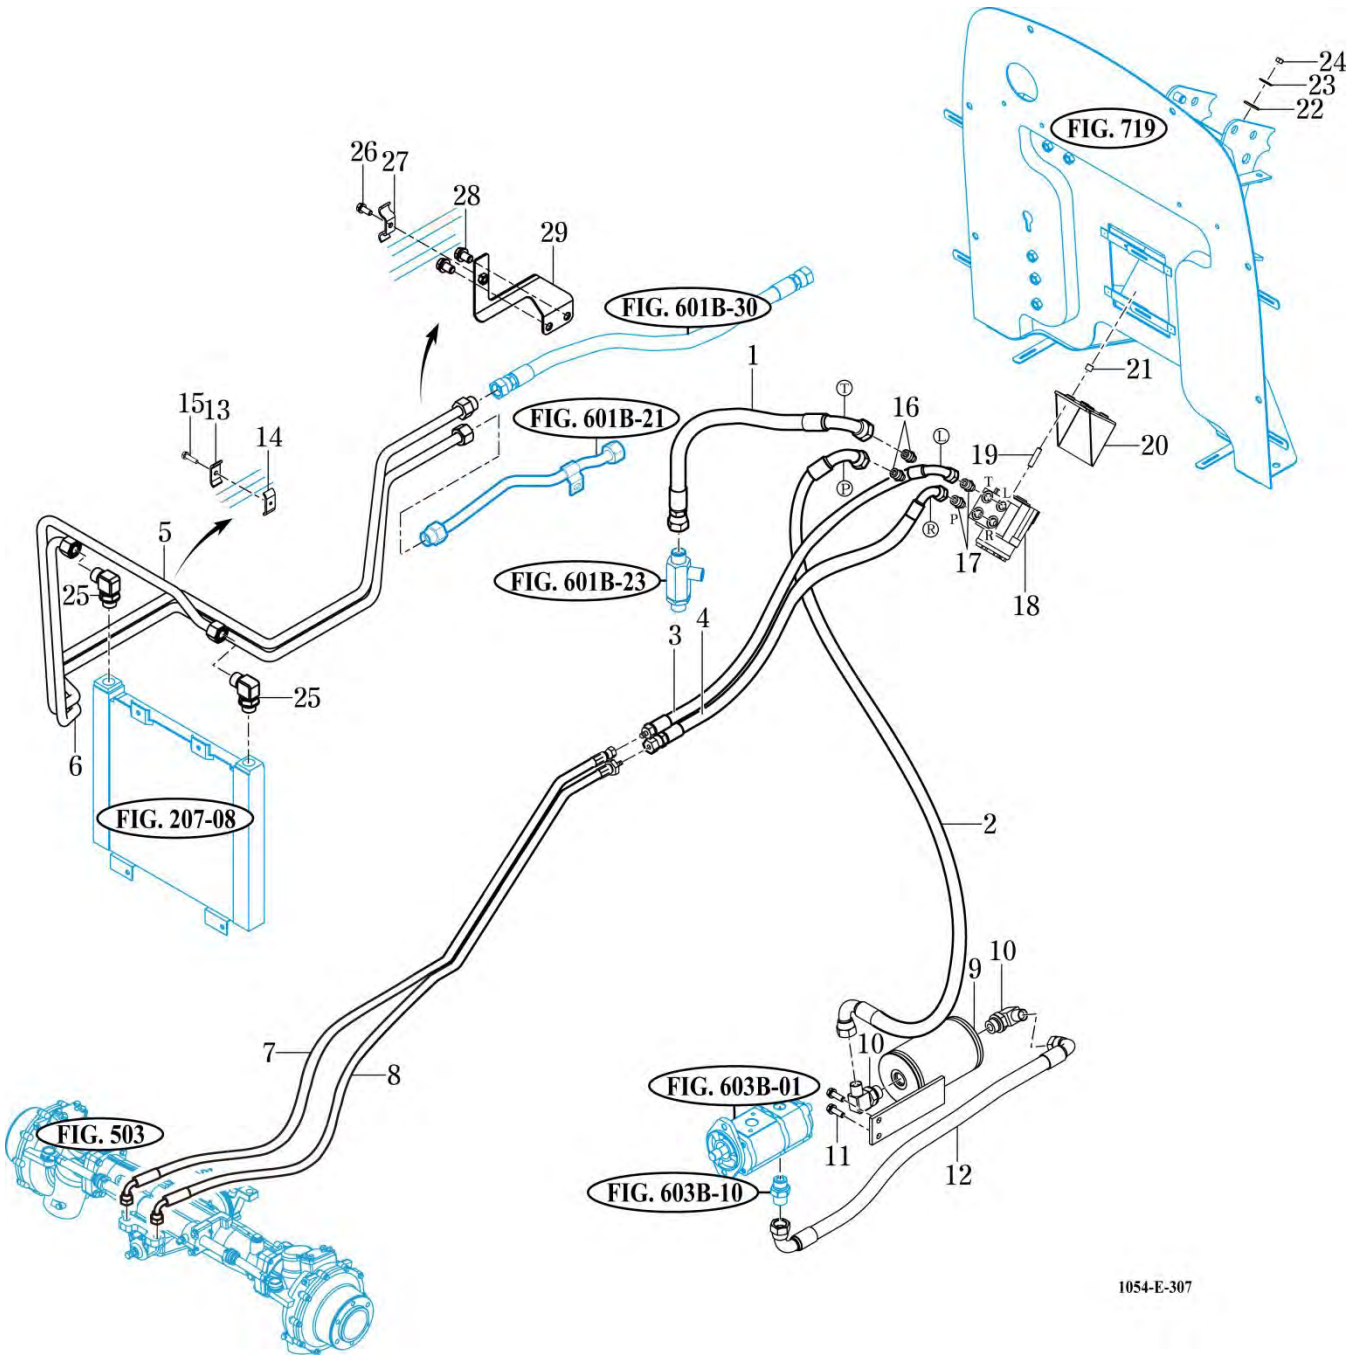

NOTE

FIG 308


T1104SC / T1054SC / T954SC


POWER STEERING CYLINDER


P1

YEAR

2014

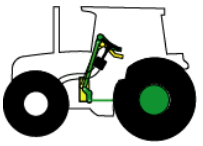

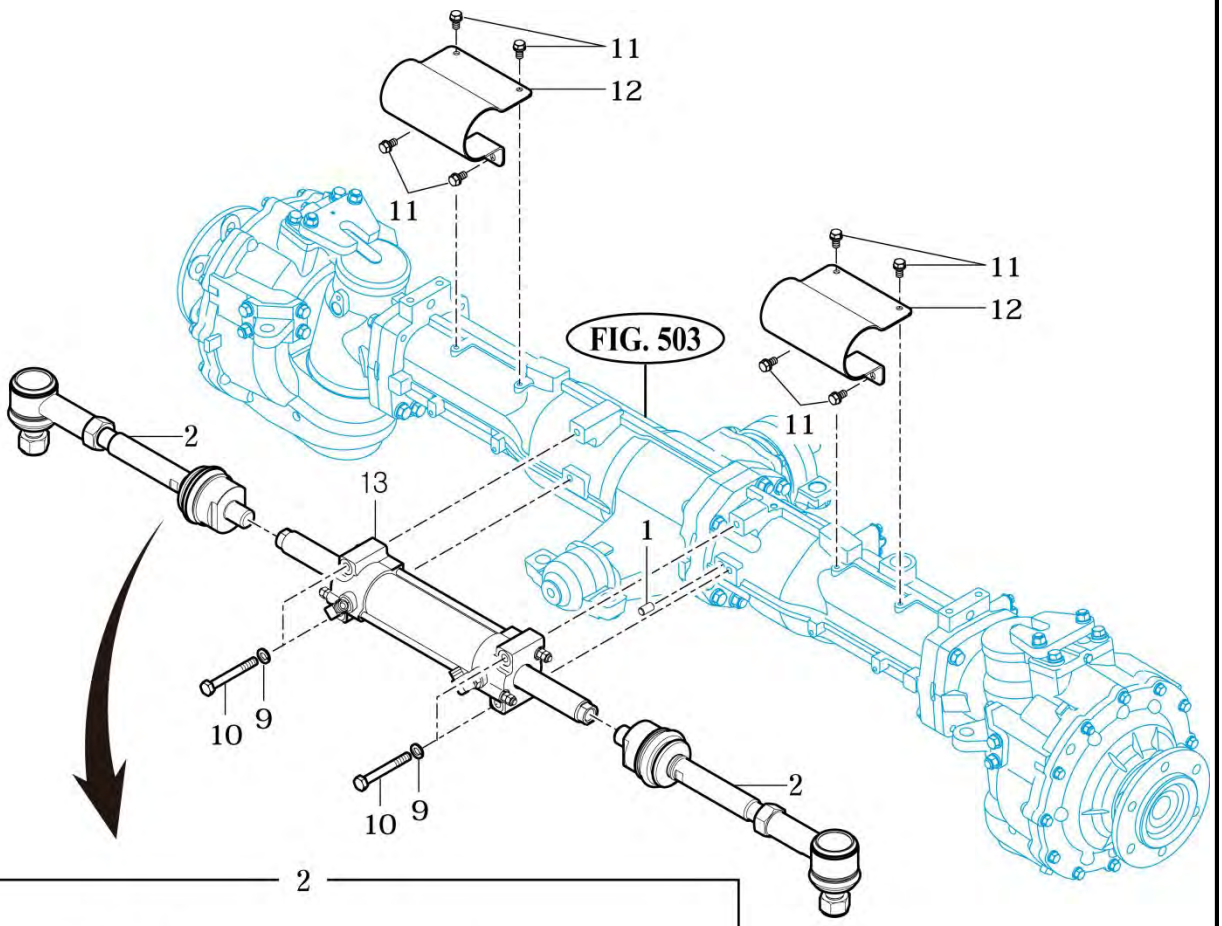

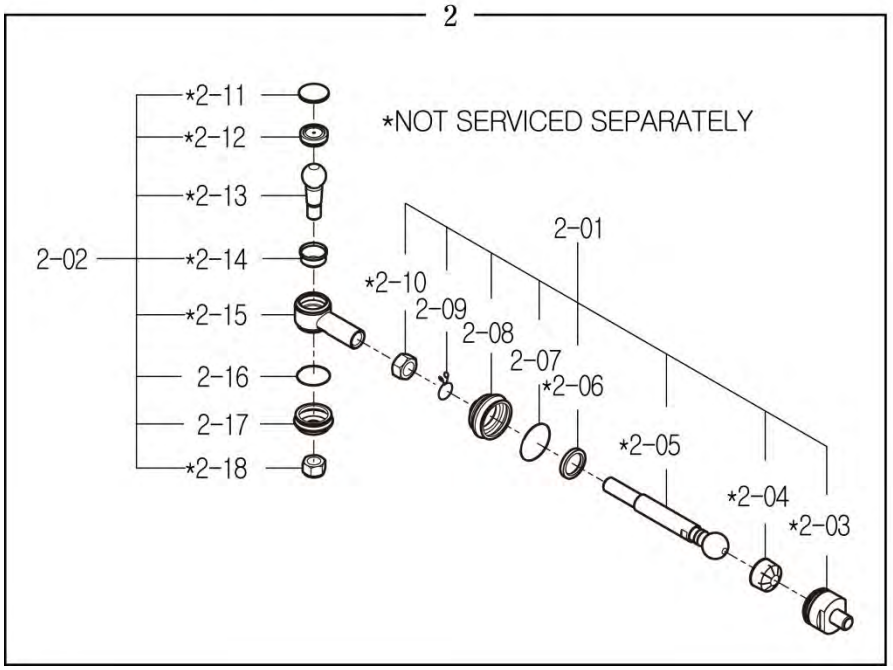

TX1003/903-K-308

NOTE

FIG 309


T1104SC / T1054SC / T954SC


SUB CLUTCH PEDAL

P1

YEAR

2014

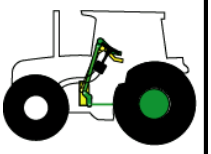

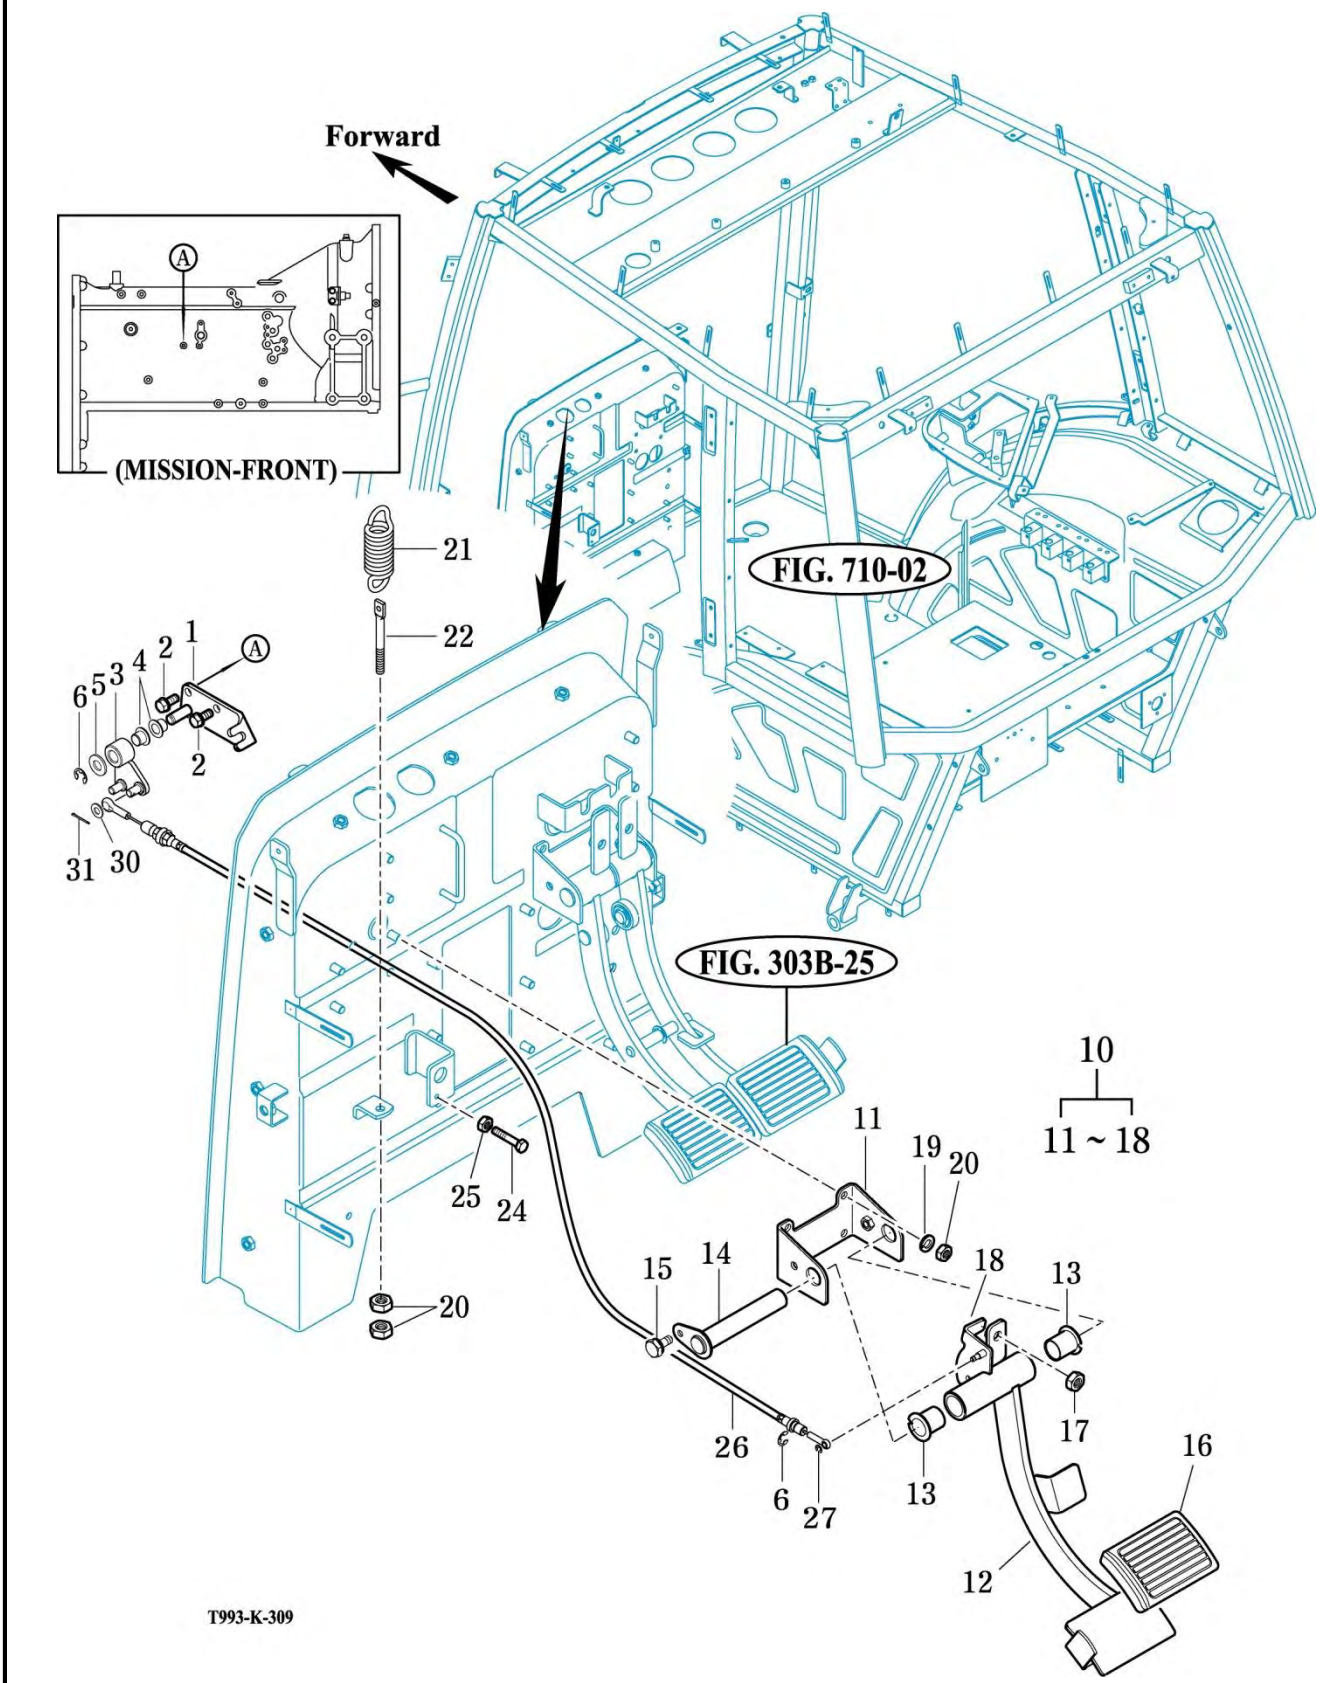

NOTE

FIG 310


T1104SC / T1054SC / T954SC

HAND BRAKE SUB

P1

YEAR

2014

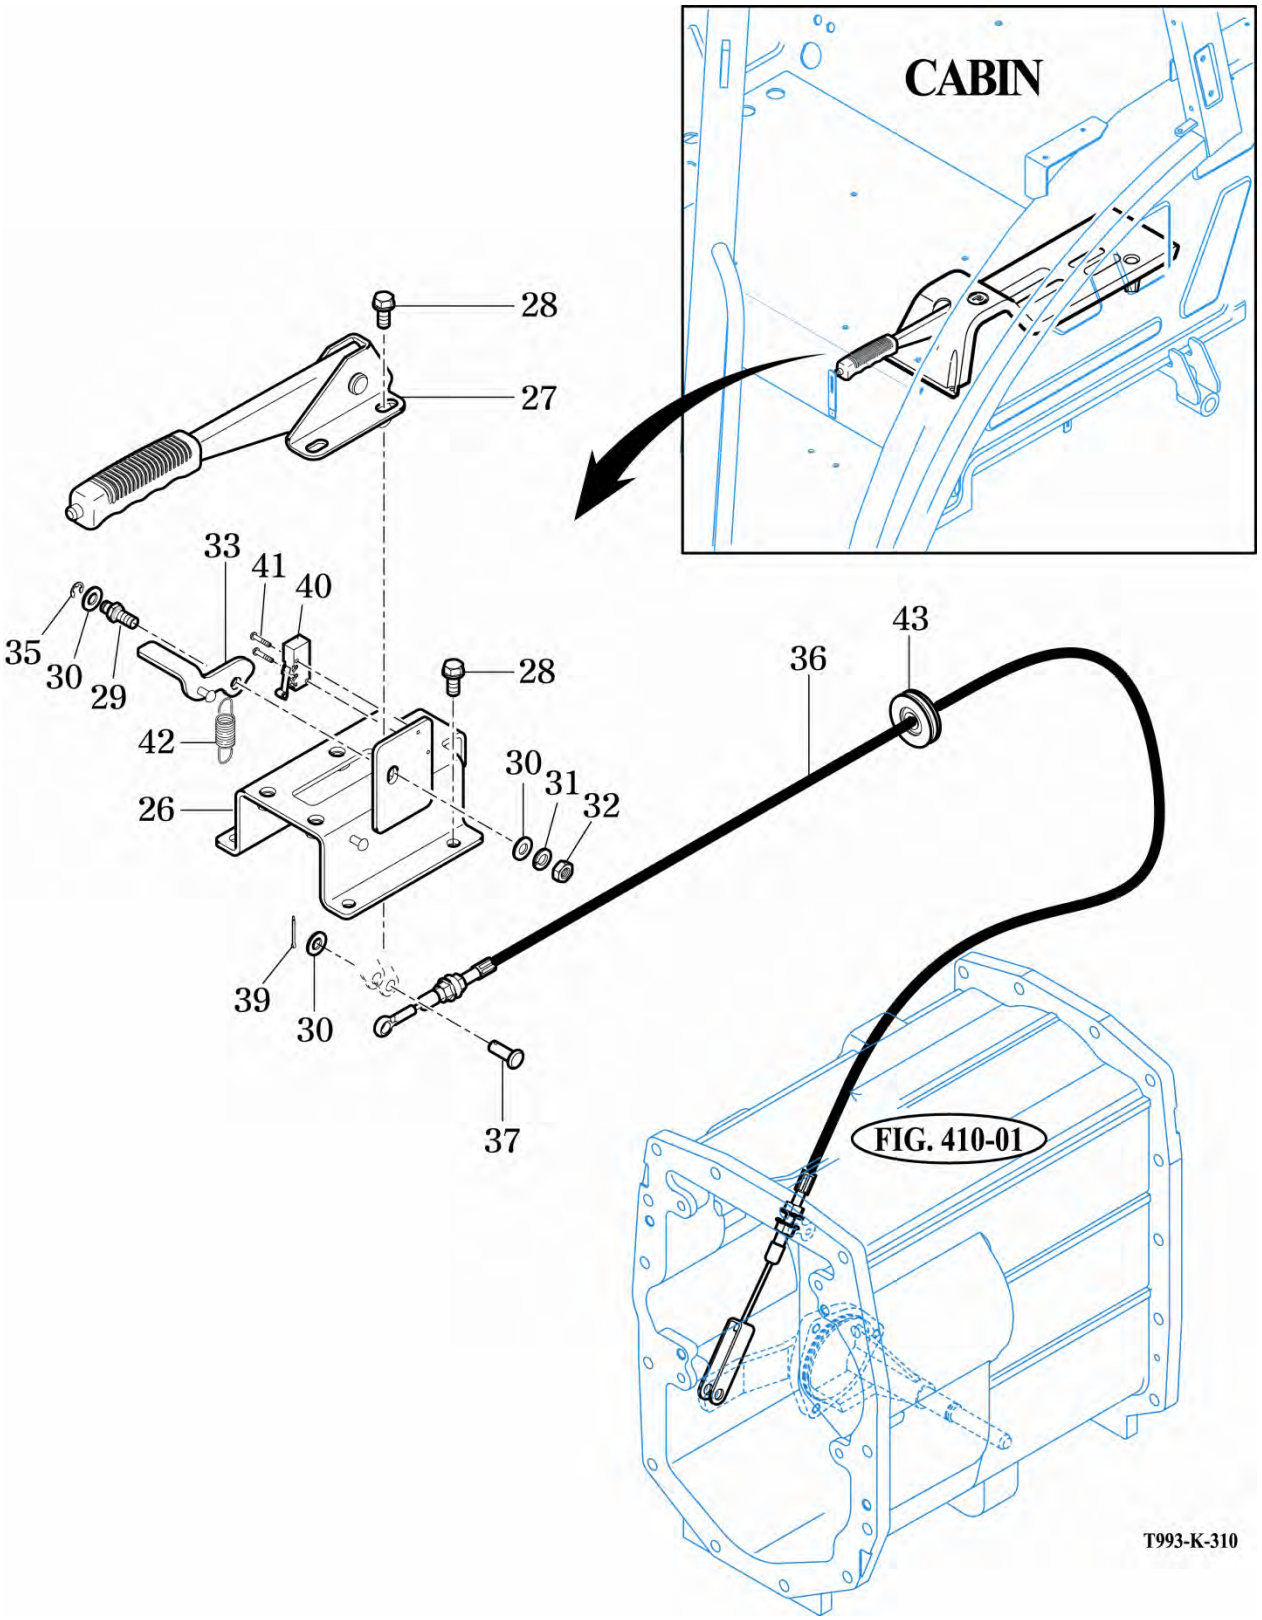

NOTE

FIG 311


T1104SC / T1054SC / T954SC

DIFF-LOCK PEDAL

P1

YEAR

2014

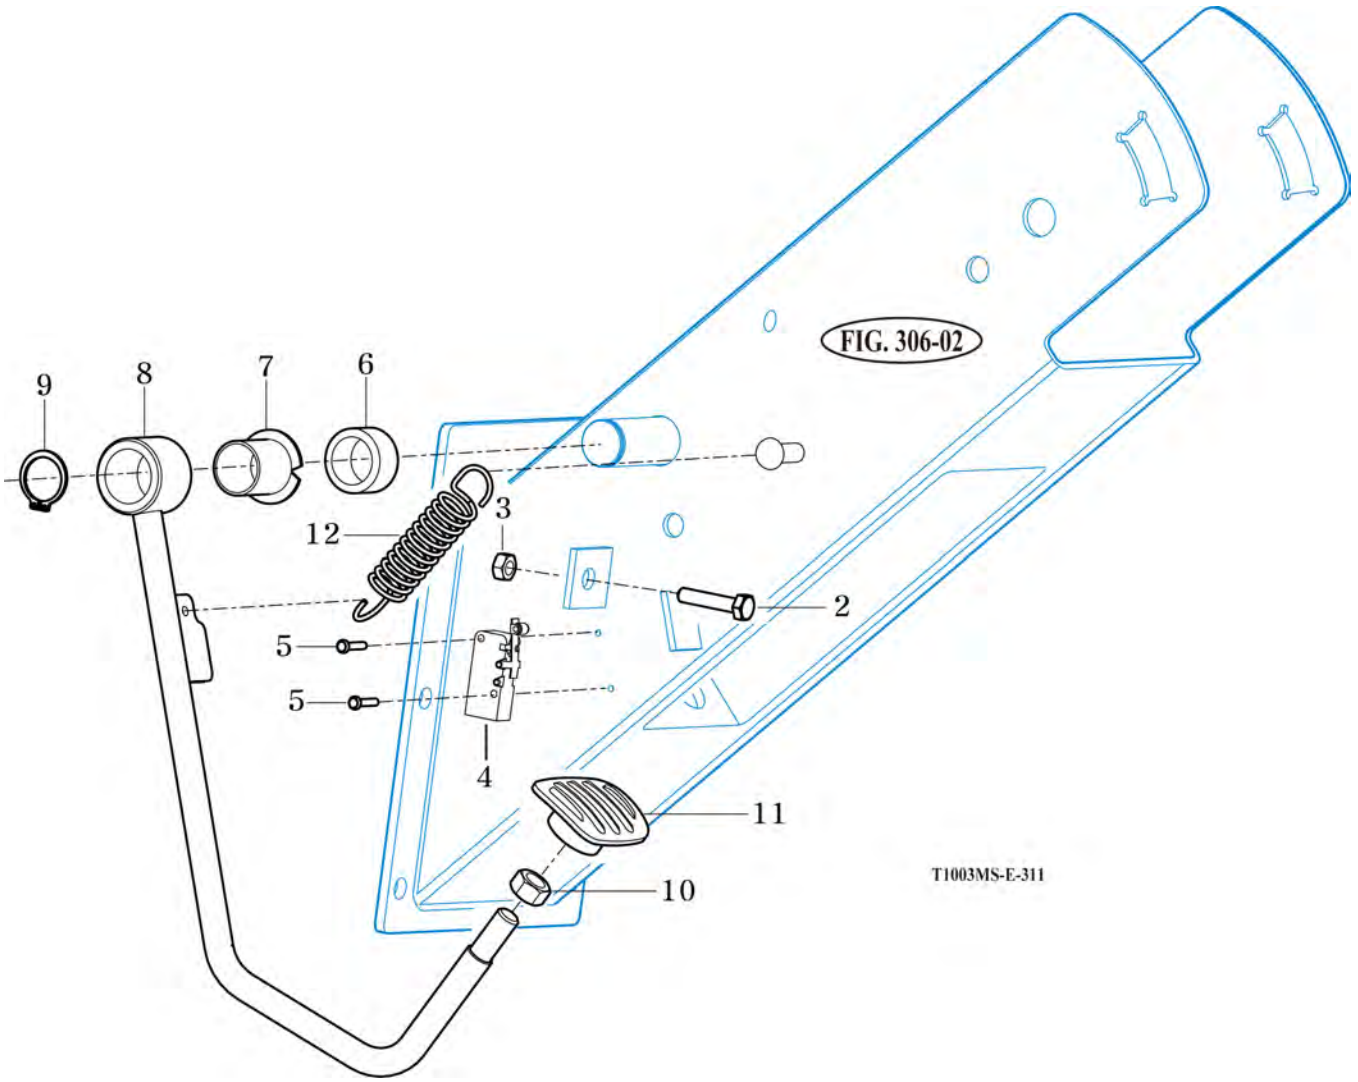

NOTE

FIG 401


T1104SC / T1054SC / T954SC

CASE SUB, RR TRANSMISSION

P1

YEAR

2014

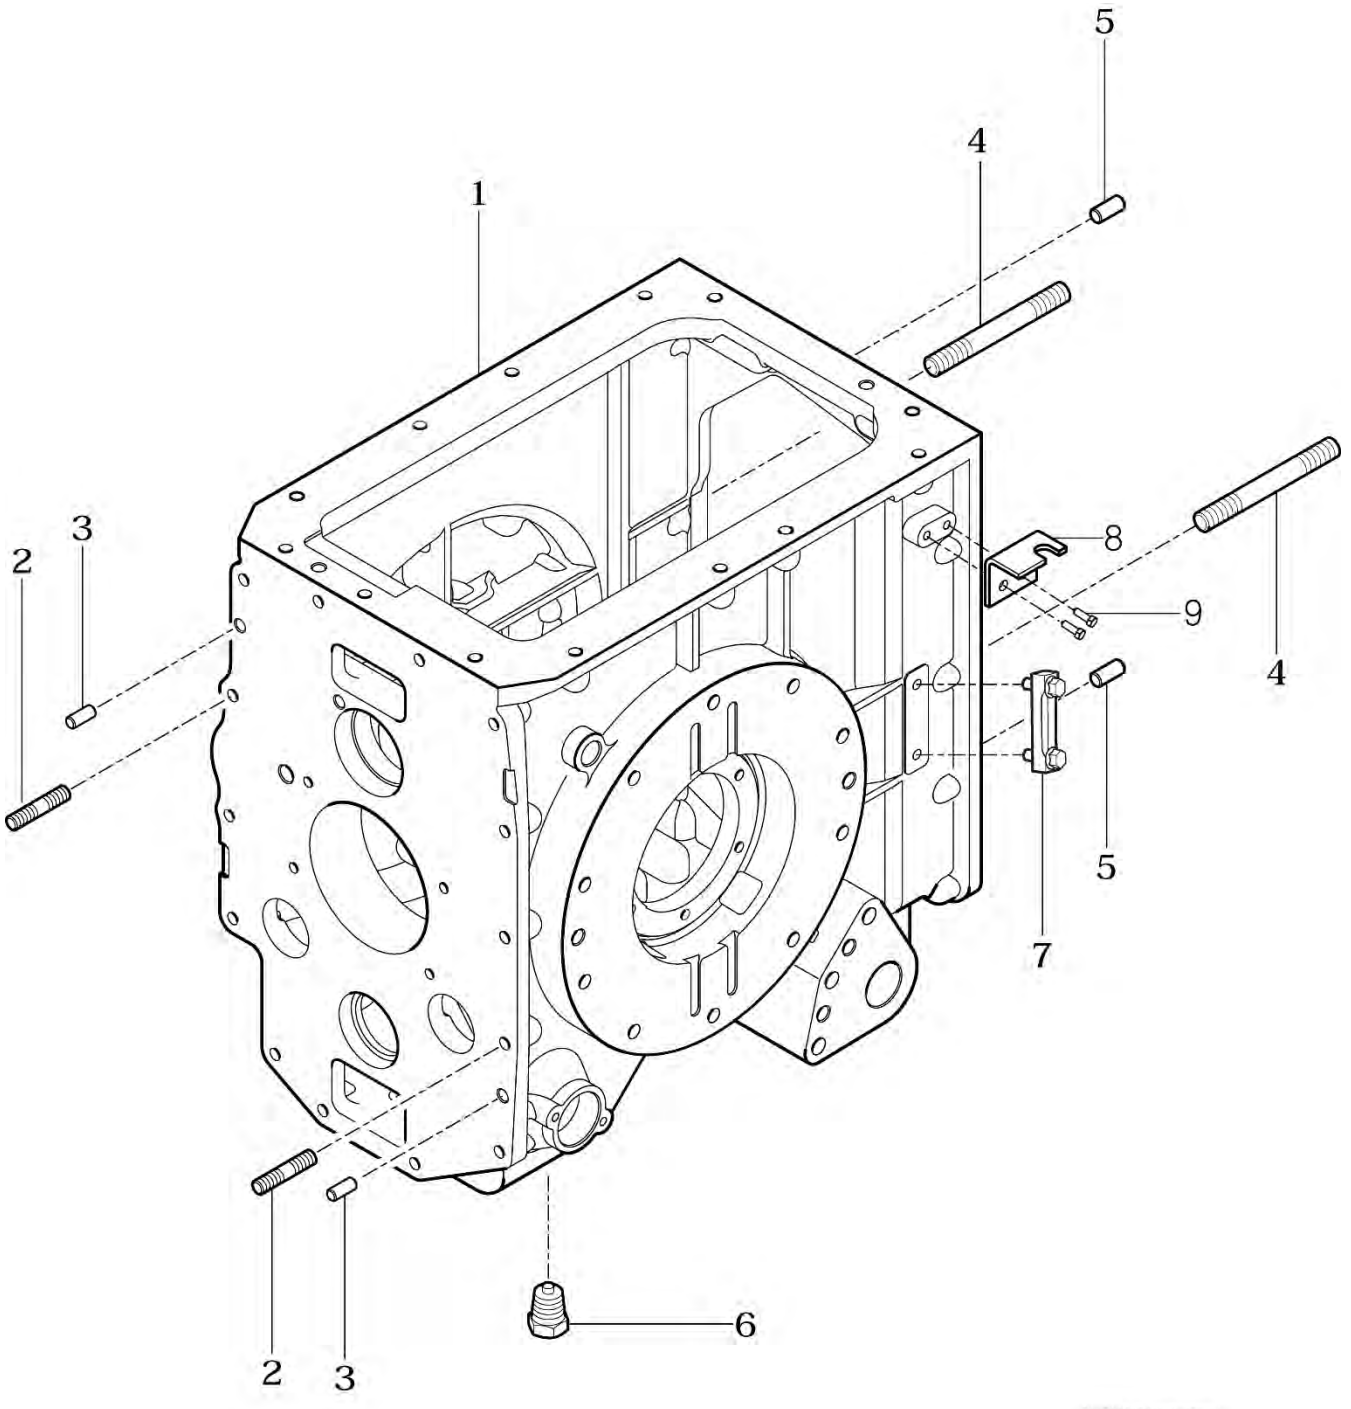

NOTE

FIG 402A


T1104SC / T1054SC / T954SC

METAL SUB ASSY, PINION


P1

YEAR

2014

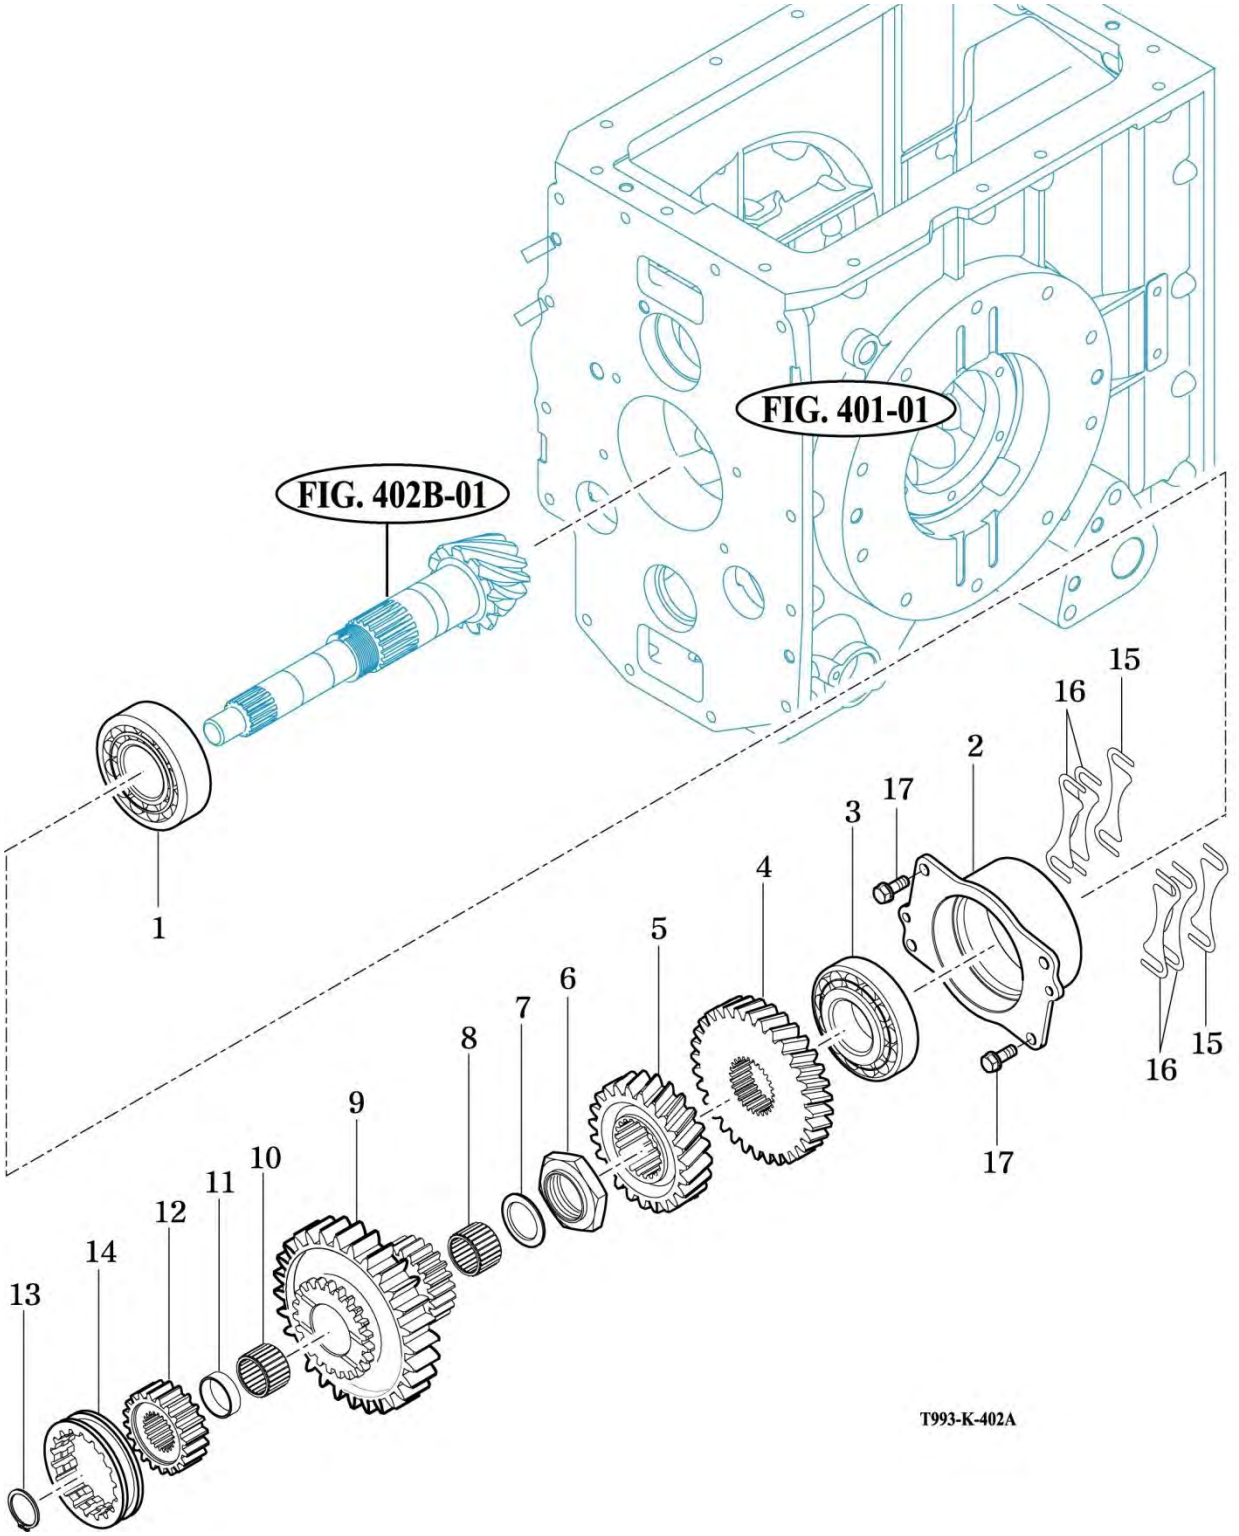

NOTE

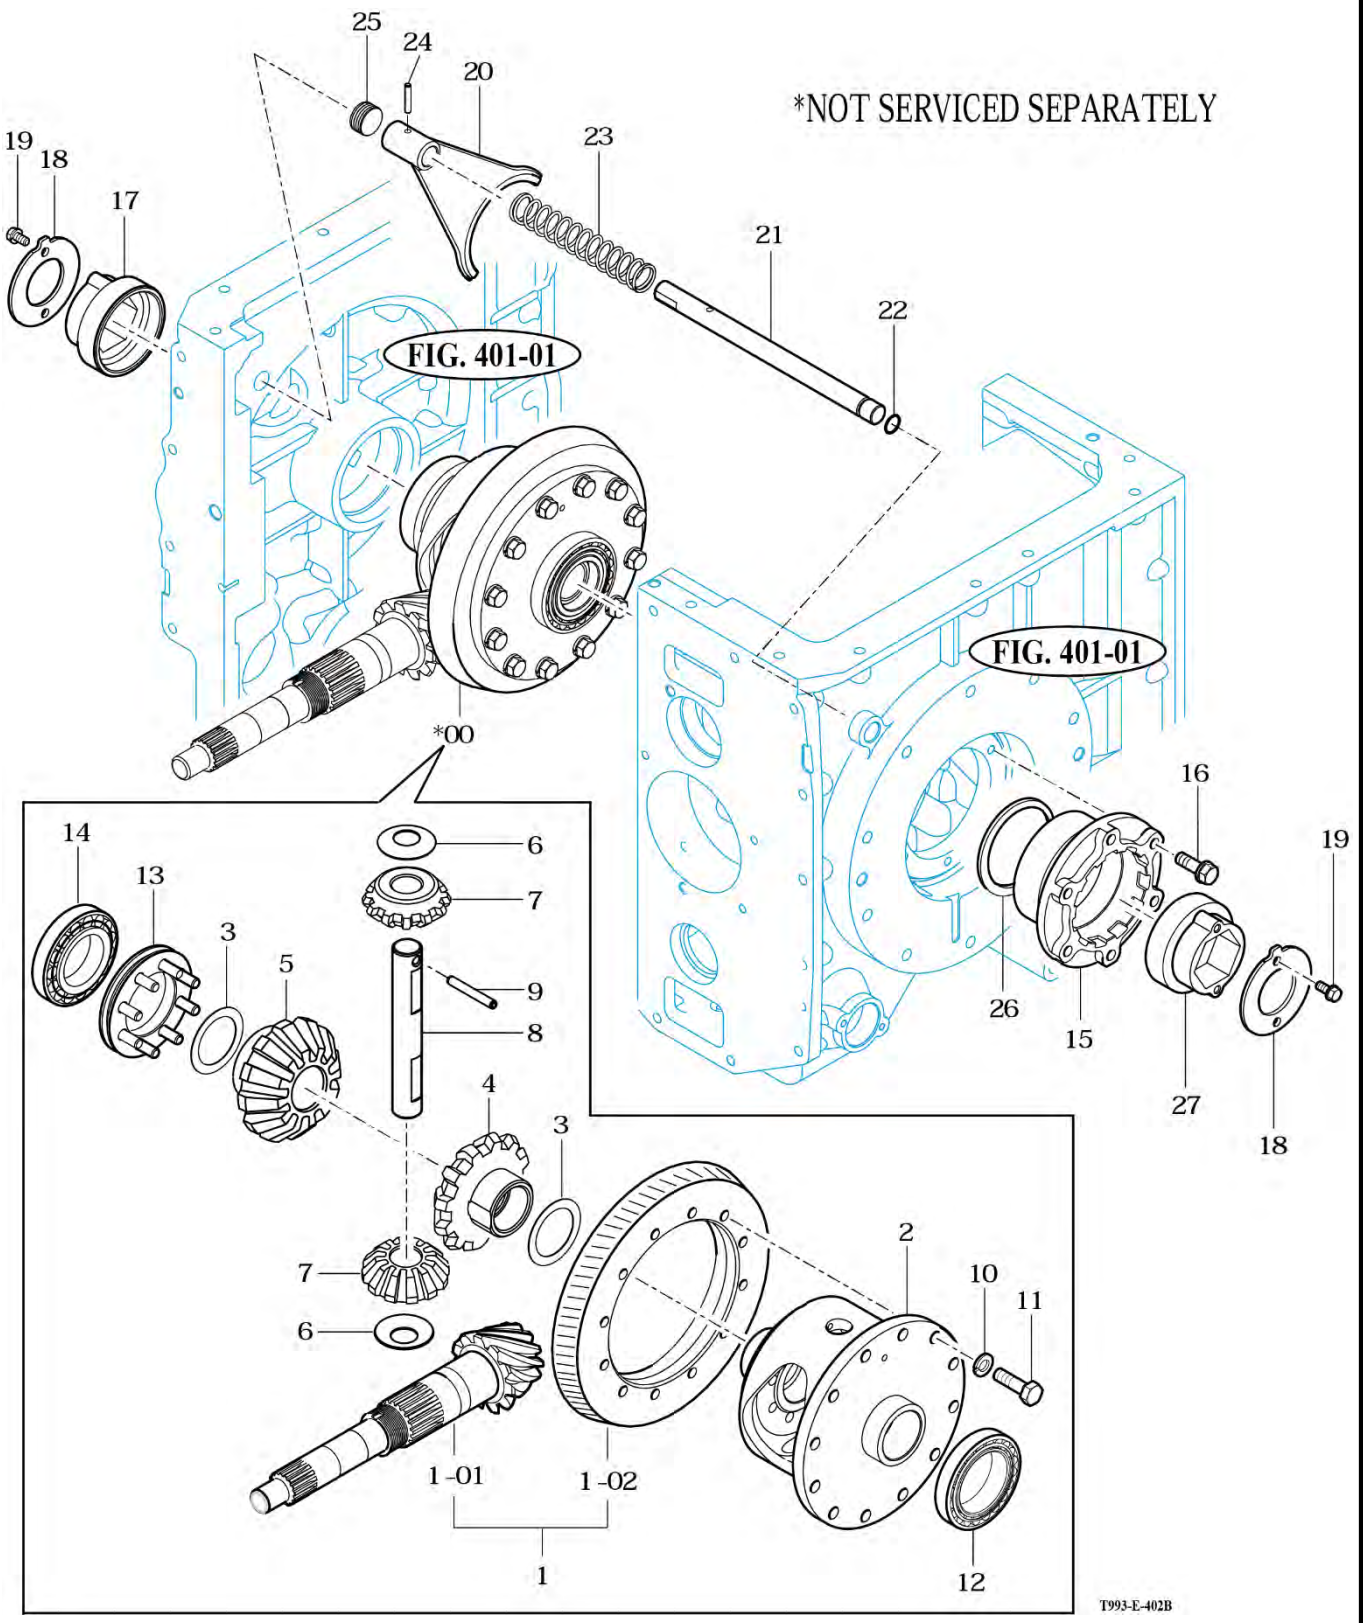

NOTE

FIG 403


T1104SC / T1054SC / T954SC

SUB CHANGE GEARS

P1

YEAR

2014

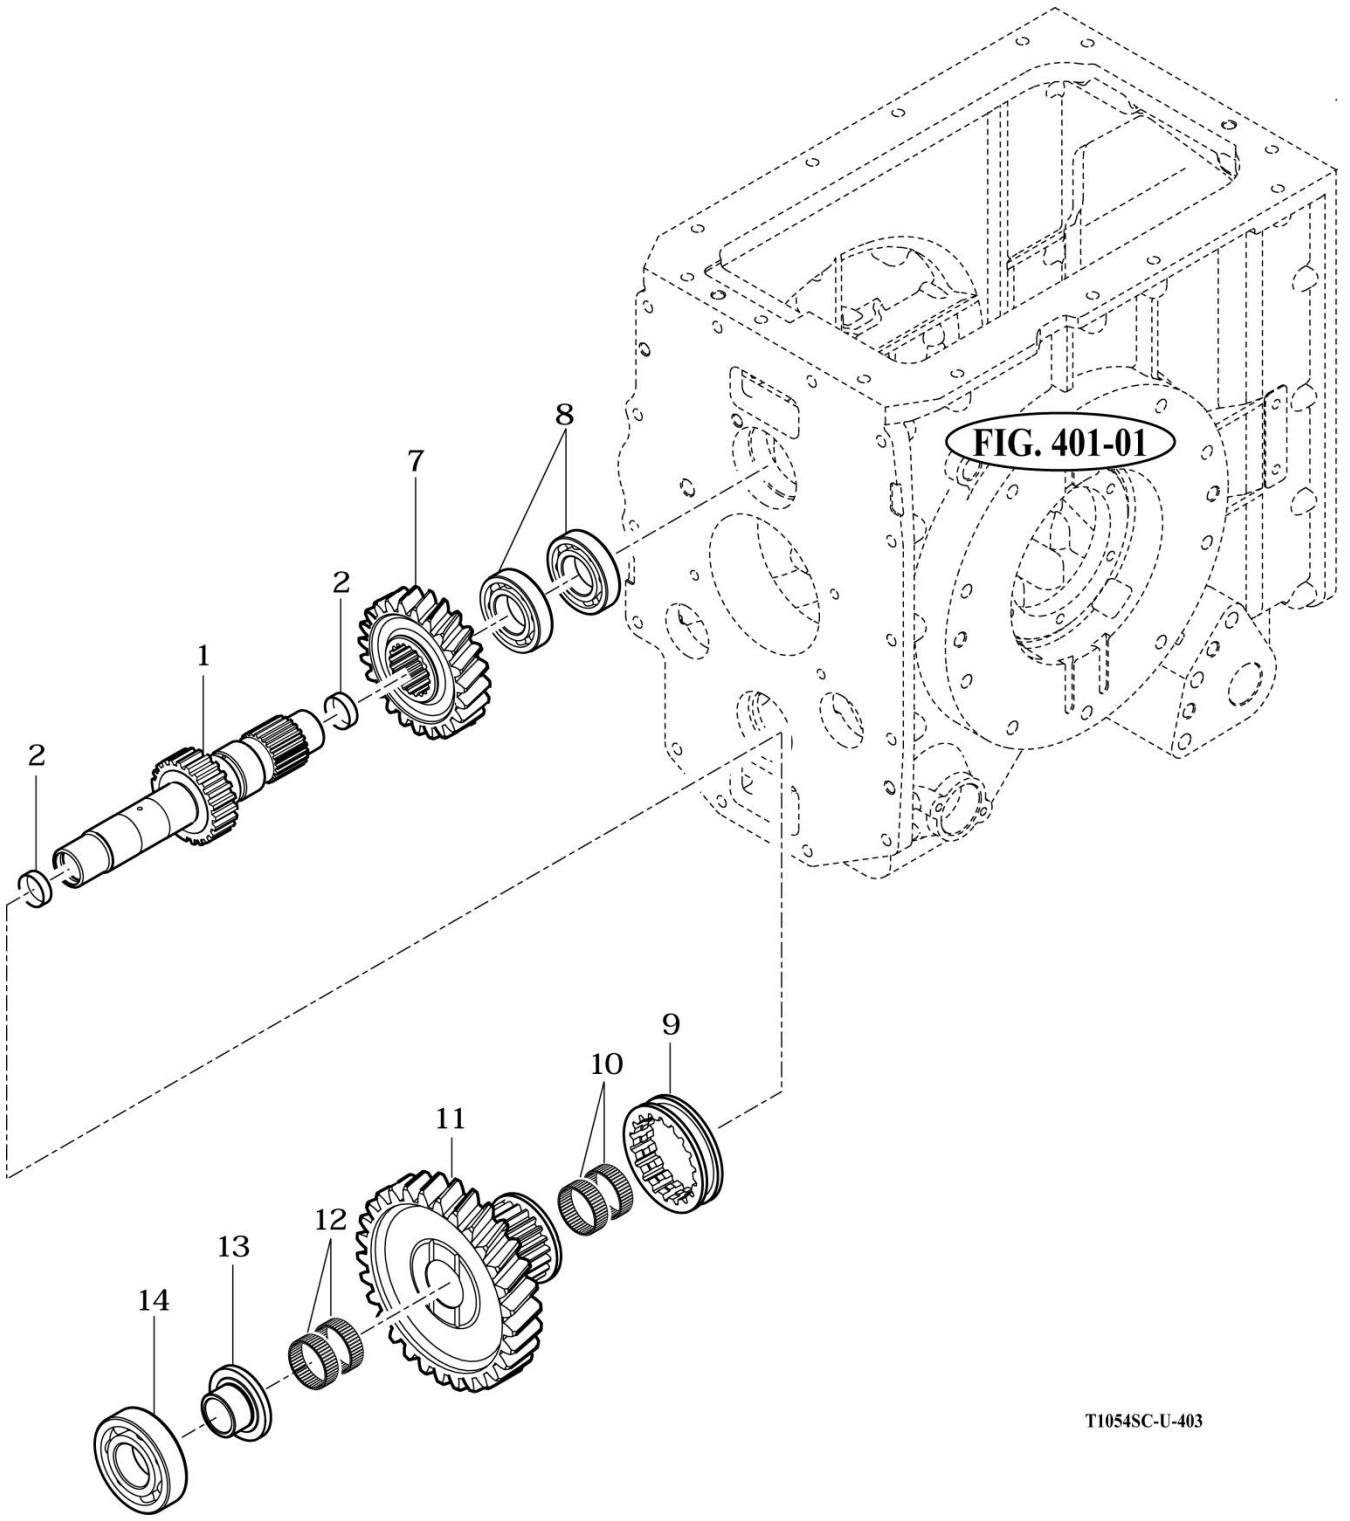

NOTE

FIG 404


T1104SC / T1054SC / T954SC

SUB CHANGE LEVER

P1

YEAR

2014

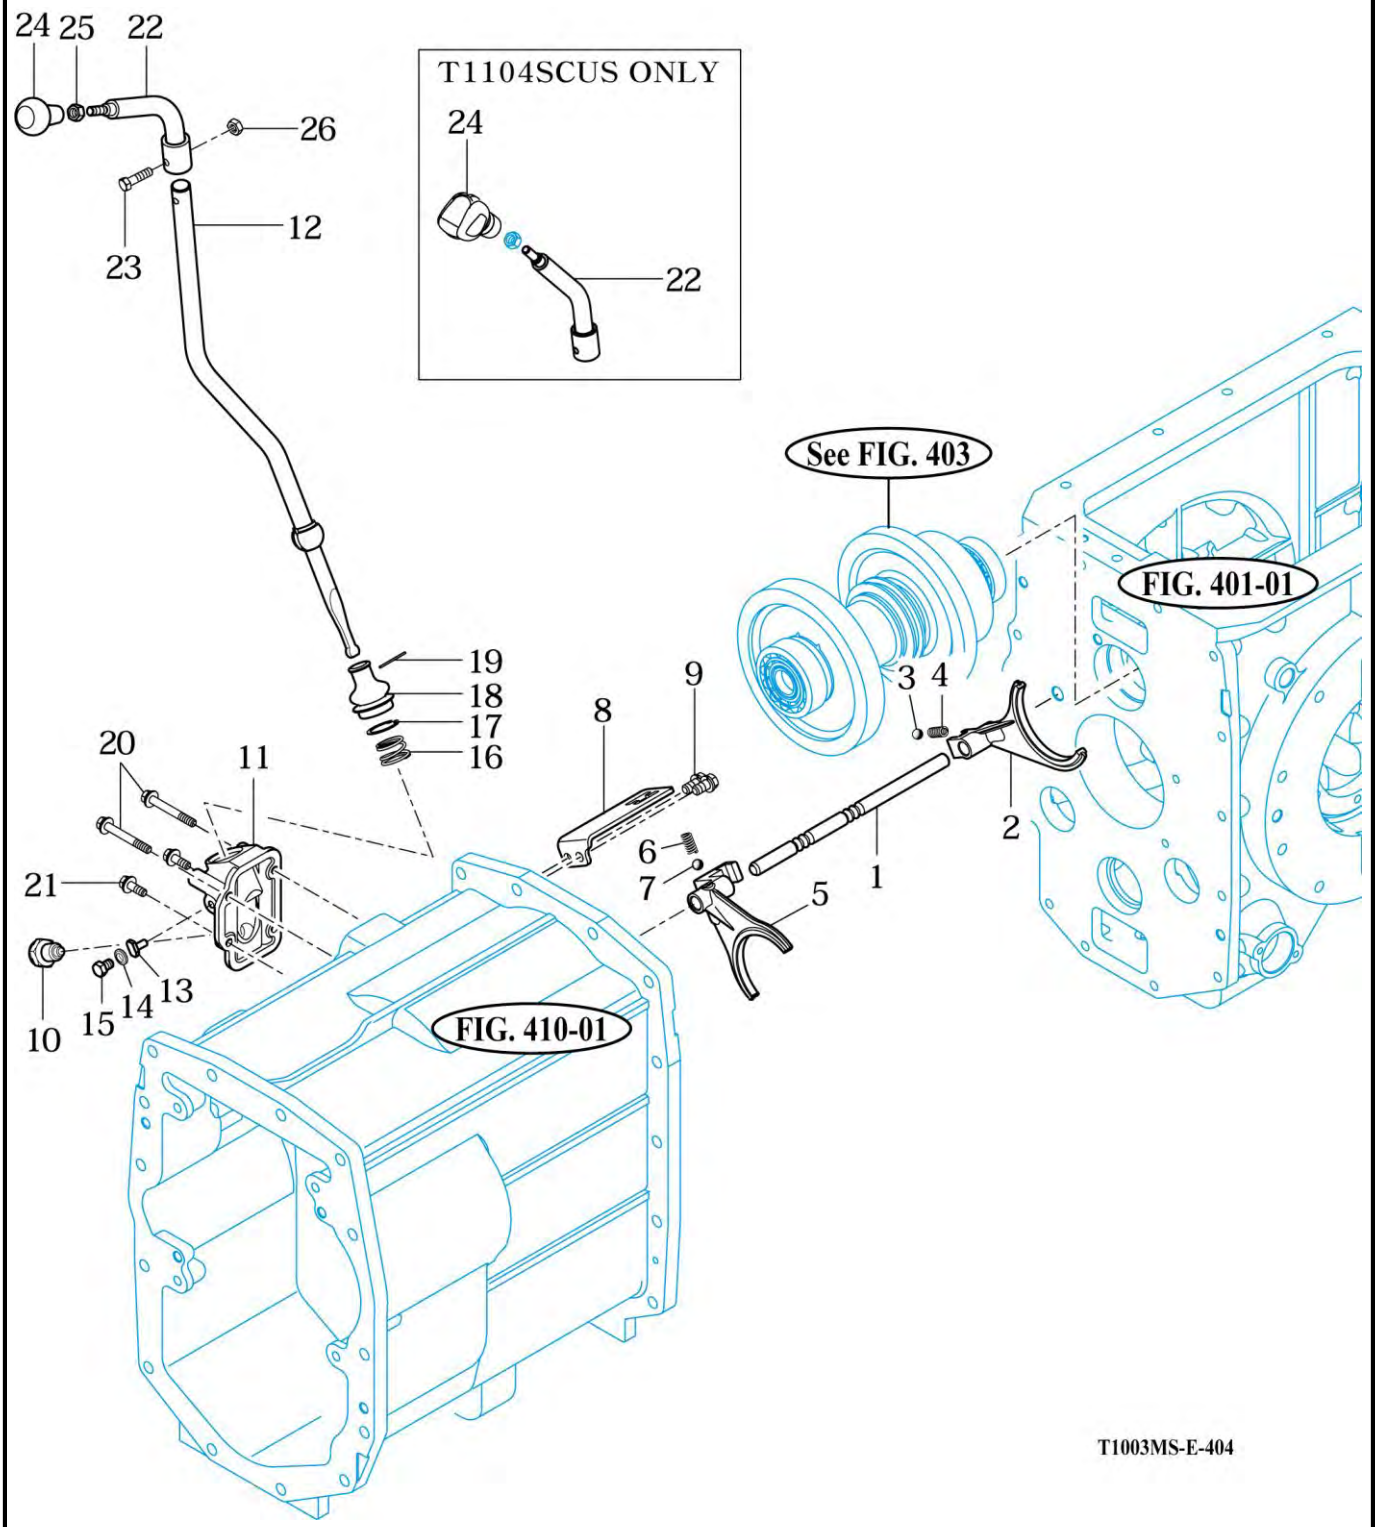

NOTE

FIG 405


T1104SC / T1054SC / T954SC

4WD DRIVE GEARS

P1

YEAR

2014

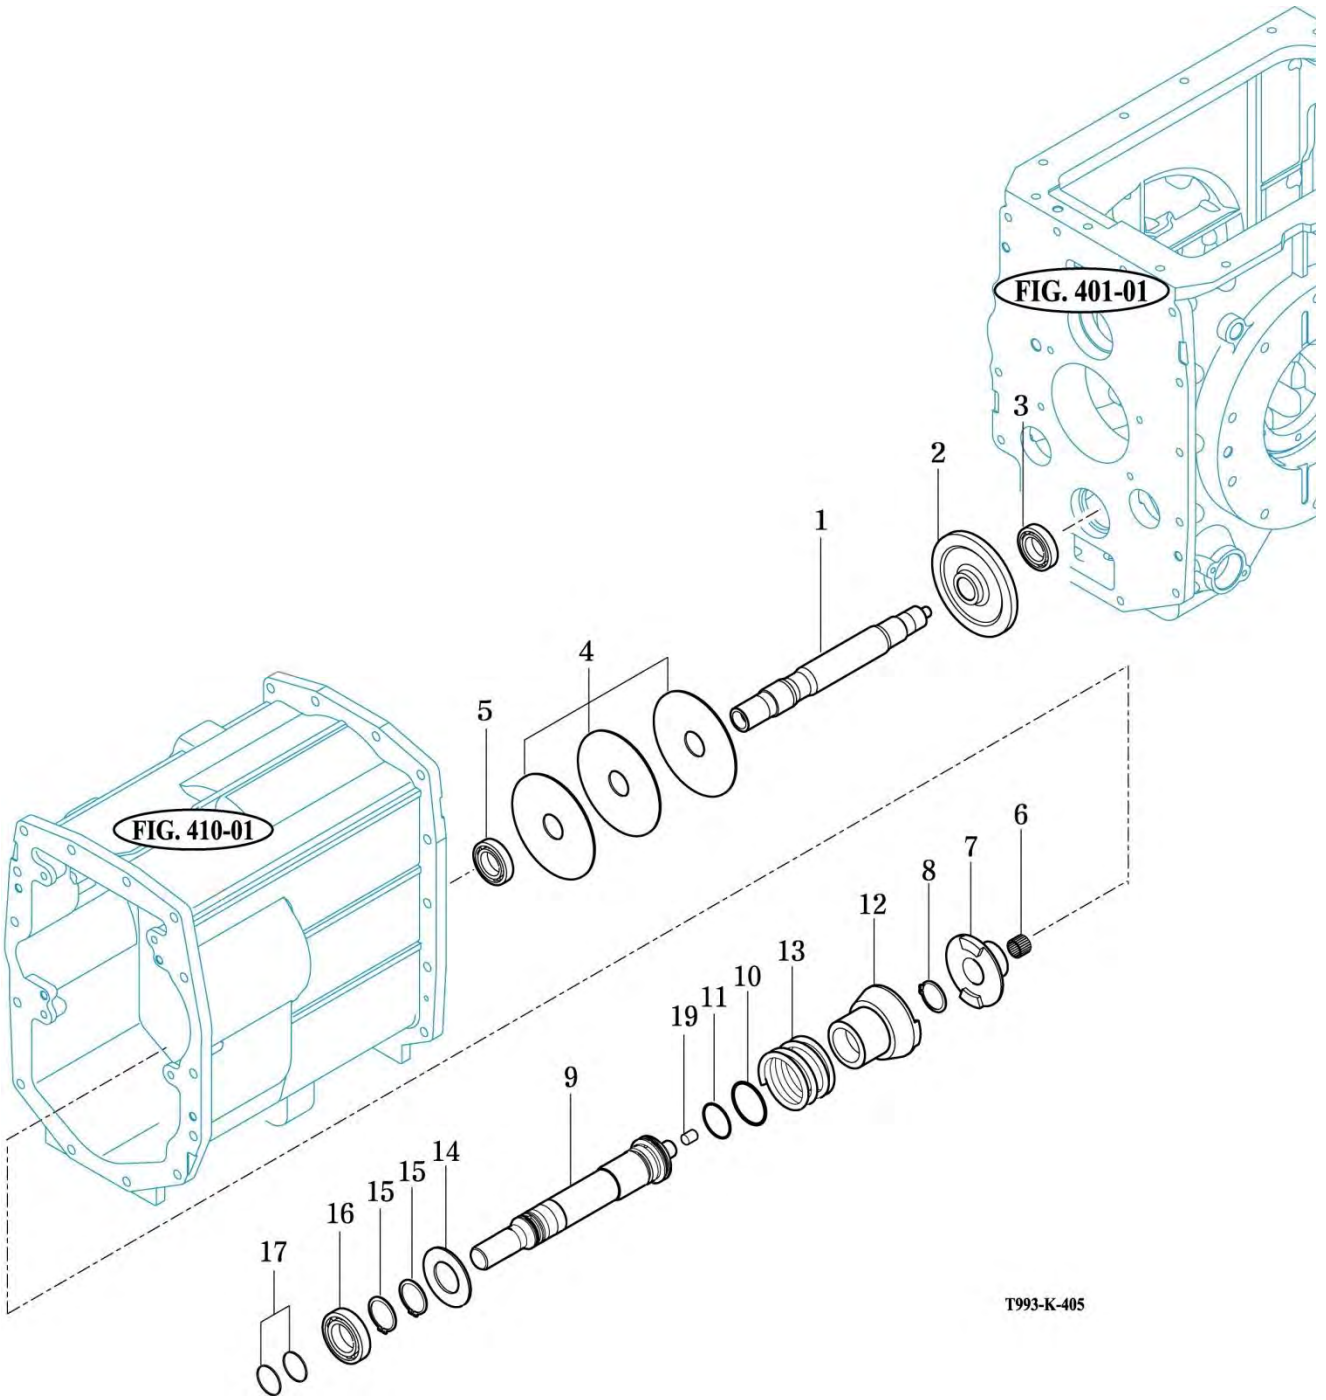

NOTE

FIG 406


T1104SC / T1054SC / T954SC

HOUSING, RR AXLE


P1

YEAR

2014

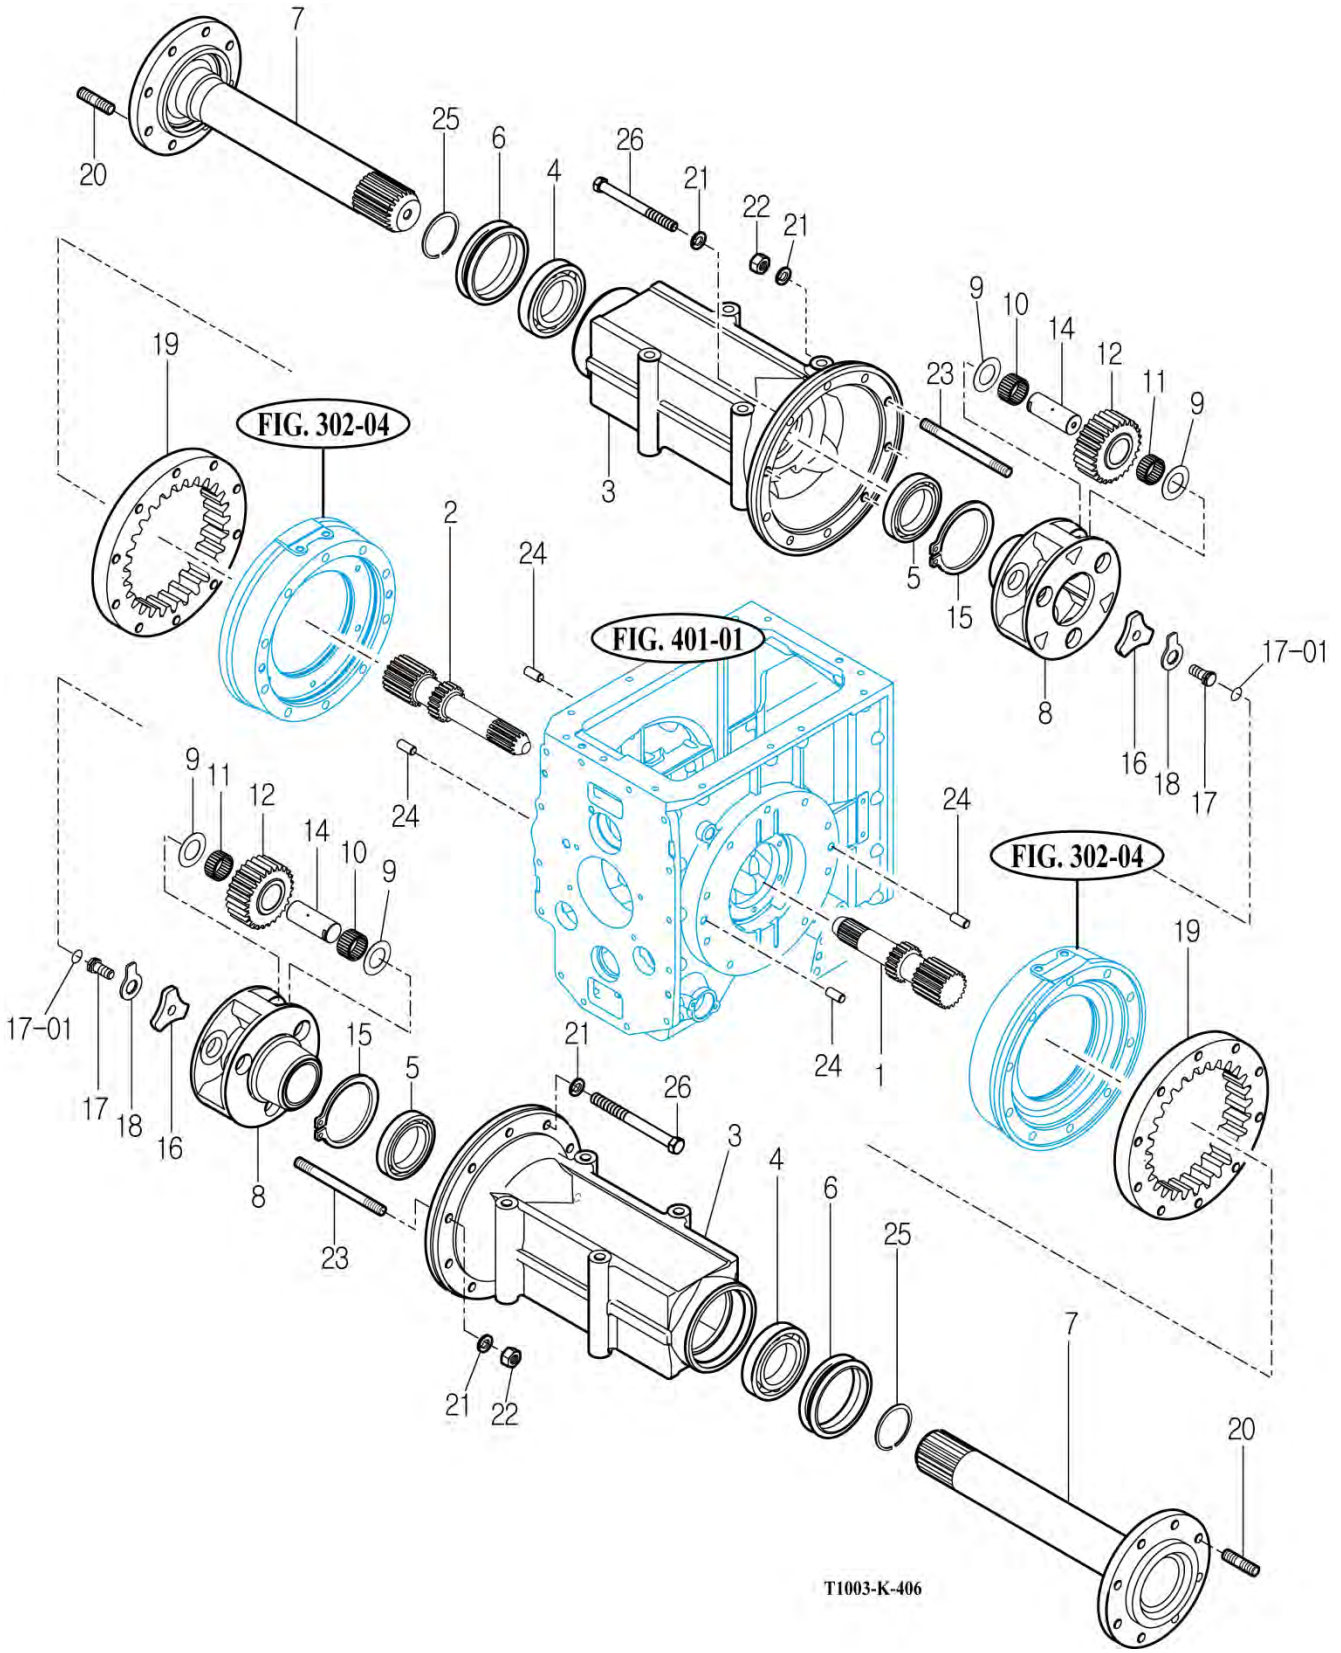

NOTE

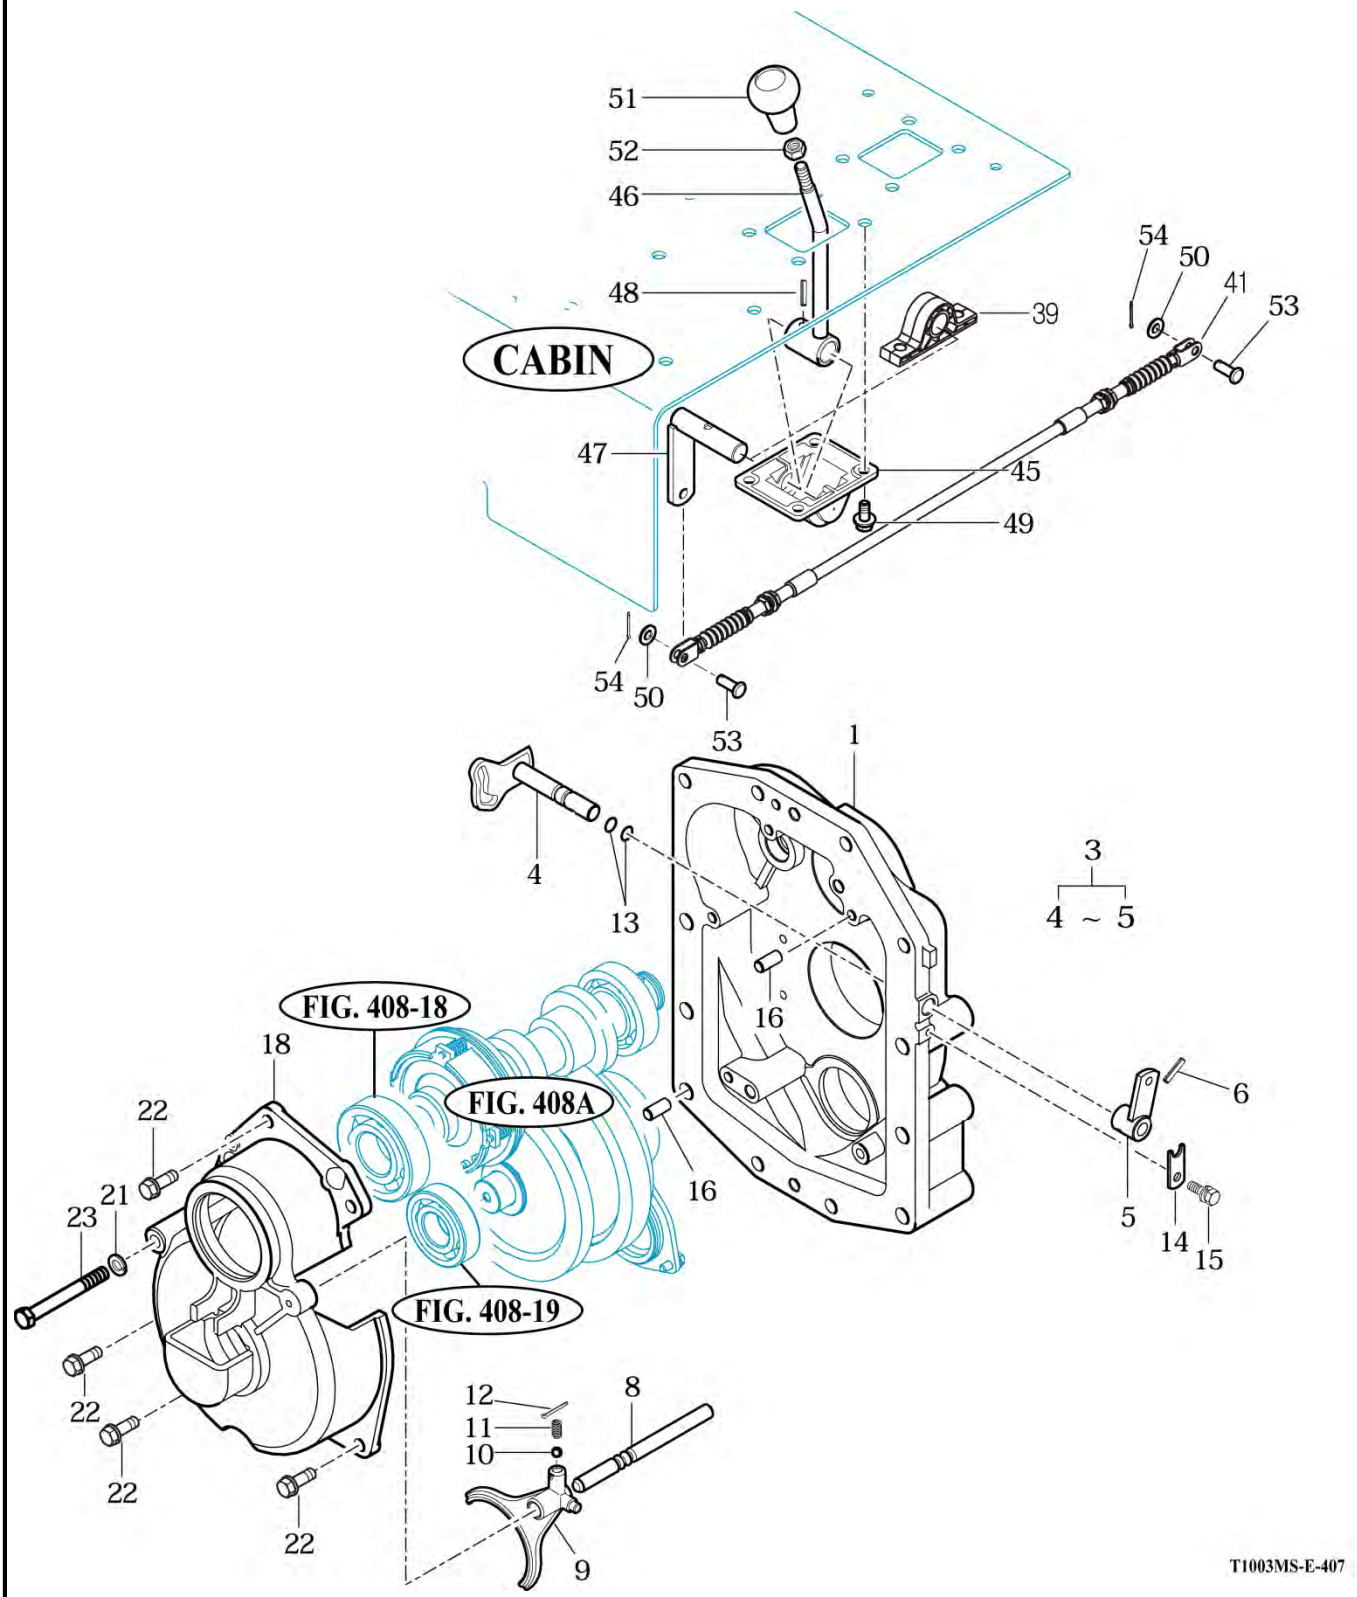
51
52
46
48
39
54
50
41
53
CABIN
47
45
49
54
50
53
1
4
13
3
4 ~ 5
16
FIG. 408-18
18
FIG. 408A
22
21
23
16
6
5
14
15
FIG. 408-19
22
22
22
12
11
10
8
9
T1003MS-E-407

NOTE

FIG 408A


T1104SC / T1054SC / T954SC

SHAFT, PTO

P1

YEAR

2014

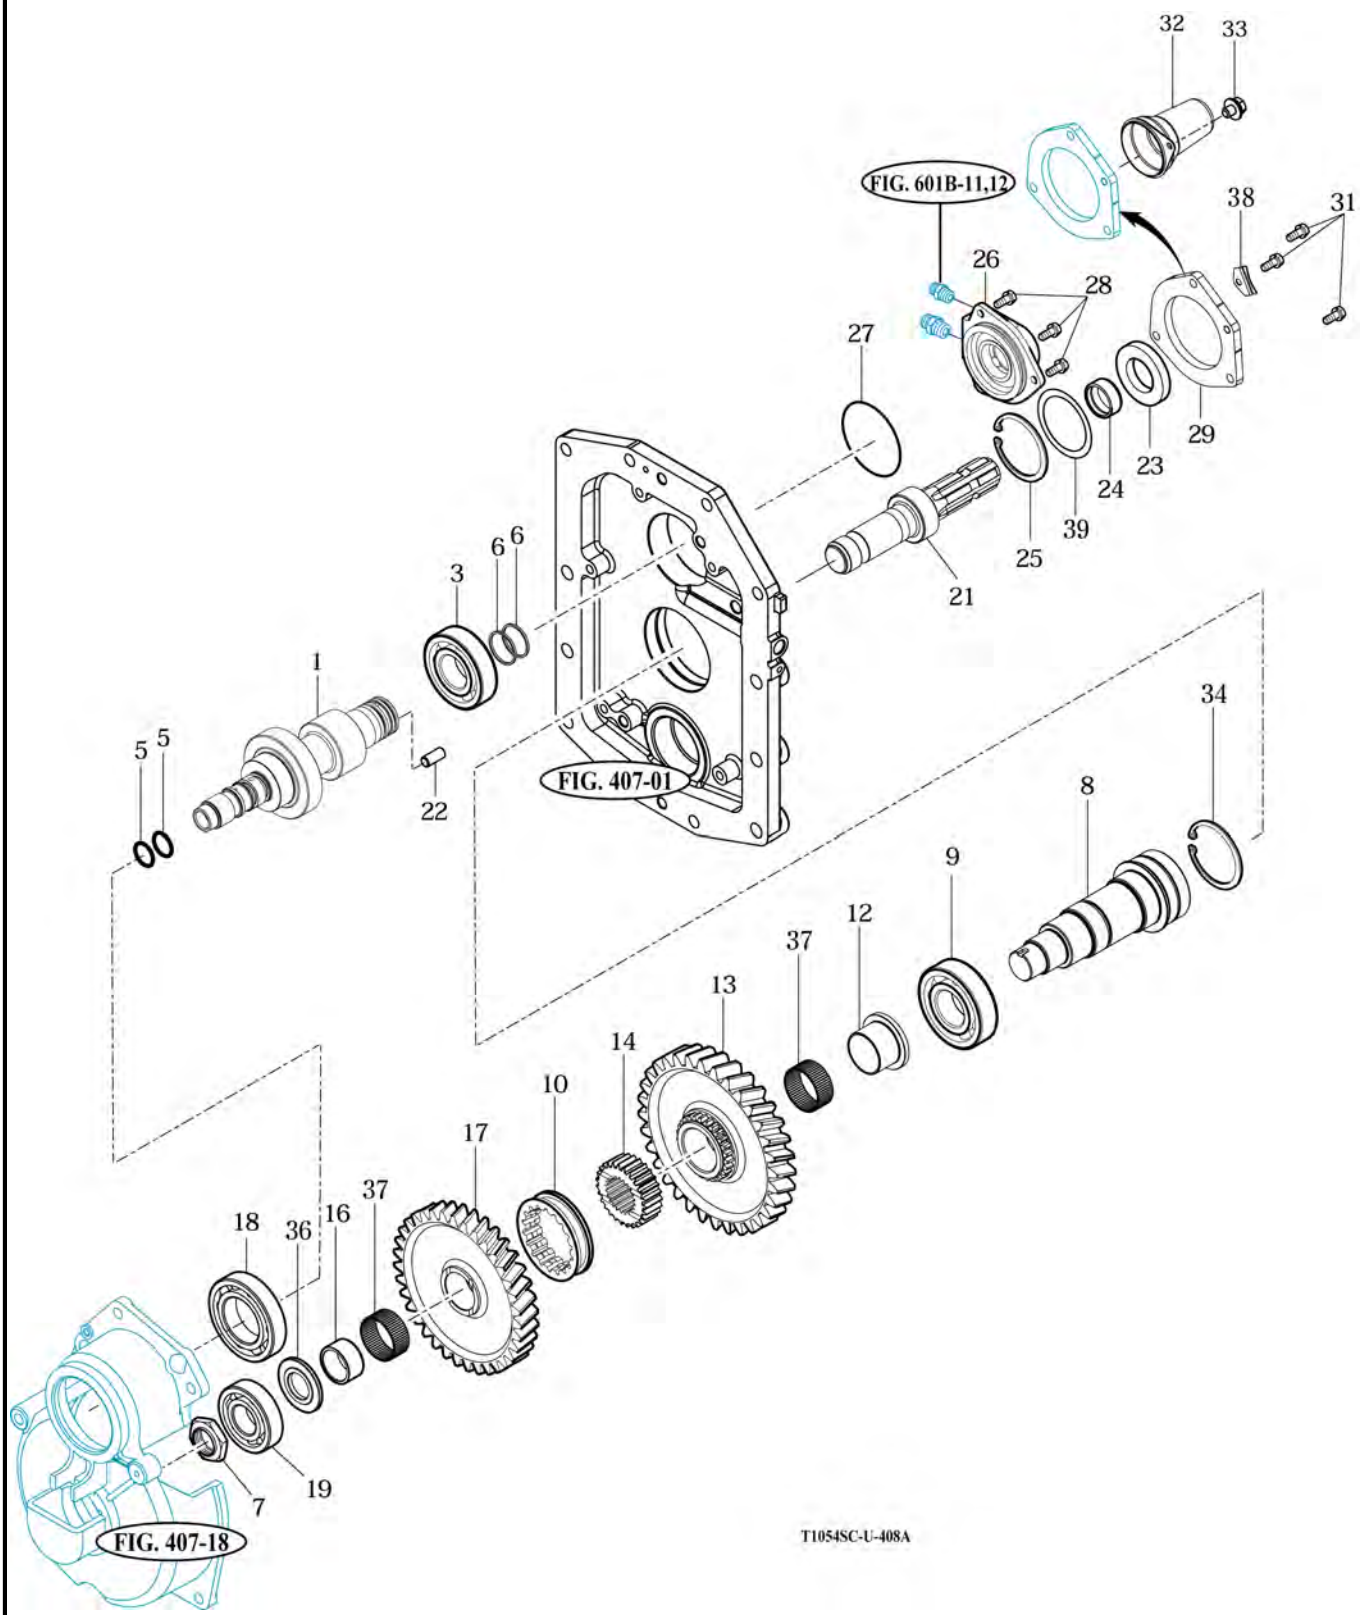

NOTE

FIG 408B


T1104SC / T1054SC / T954SC

PTO CLUTCH ASSY

P1

YEAR

2014

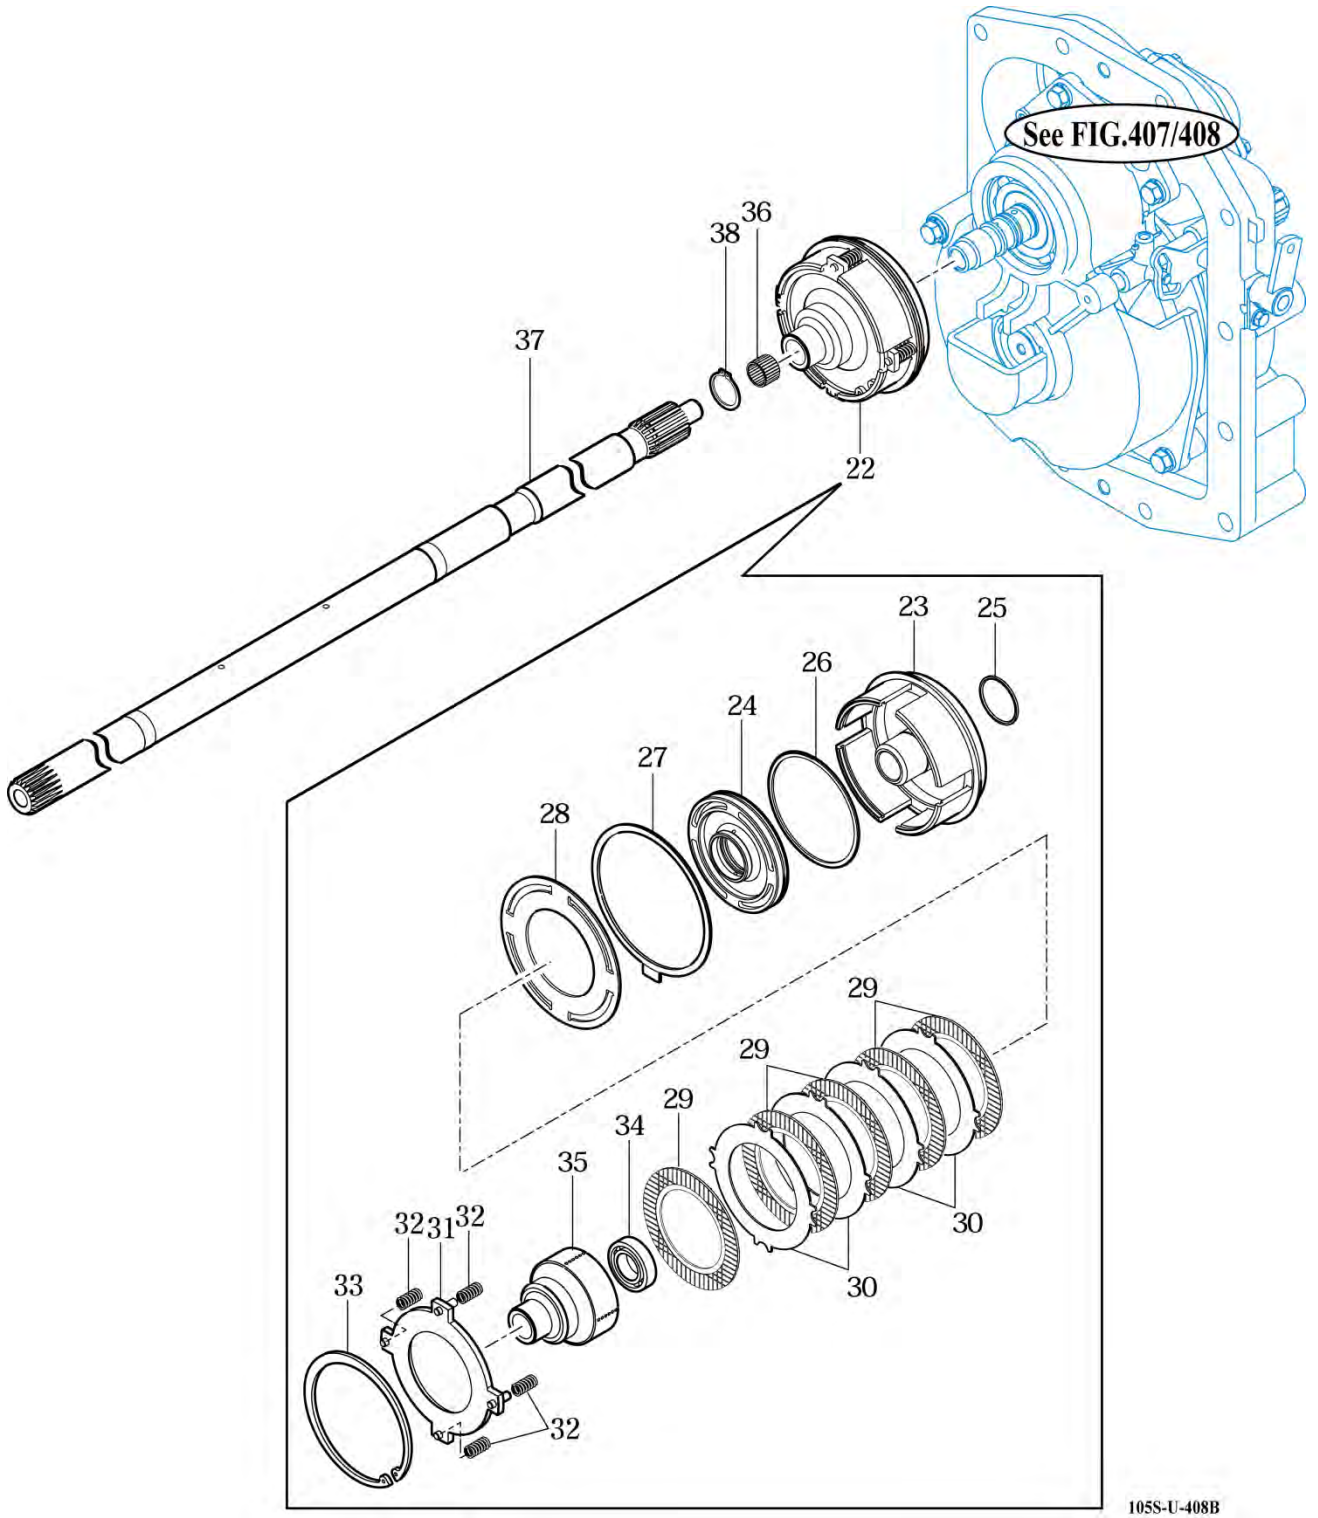

NOTE

FIG 409


T1104SC / T1054SC / T954SC

METAL SUB ASSY


P1

YEAR


2014

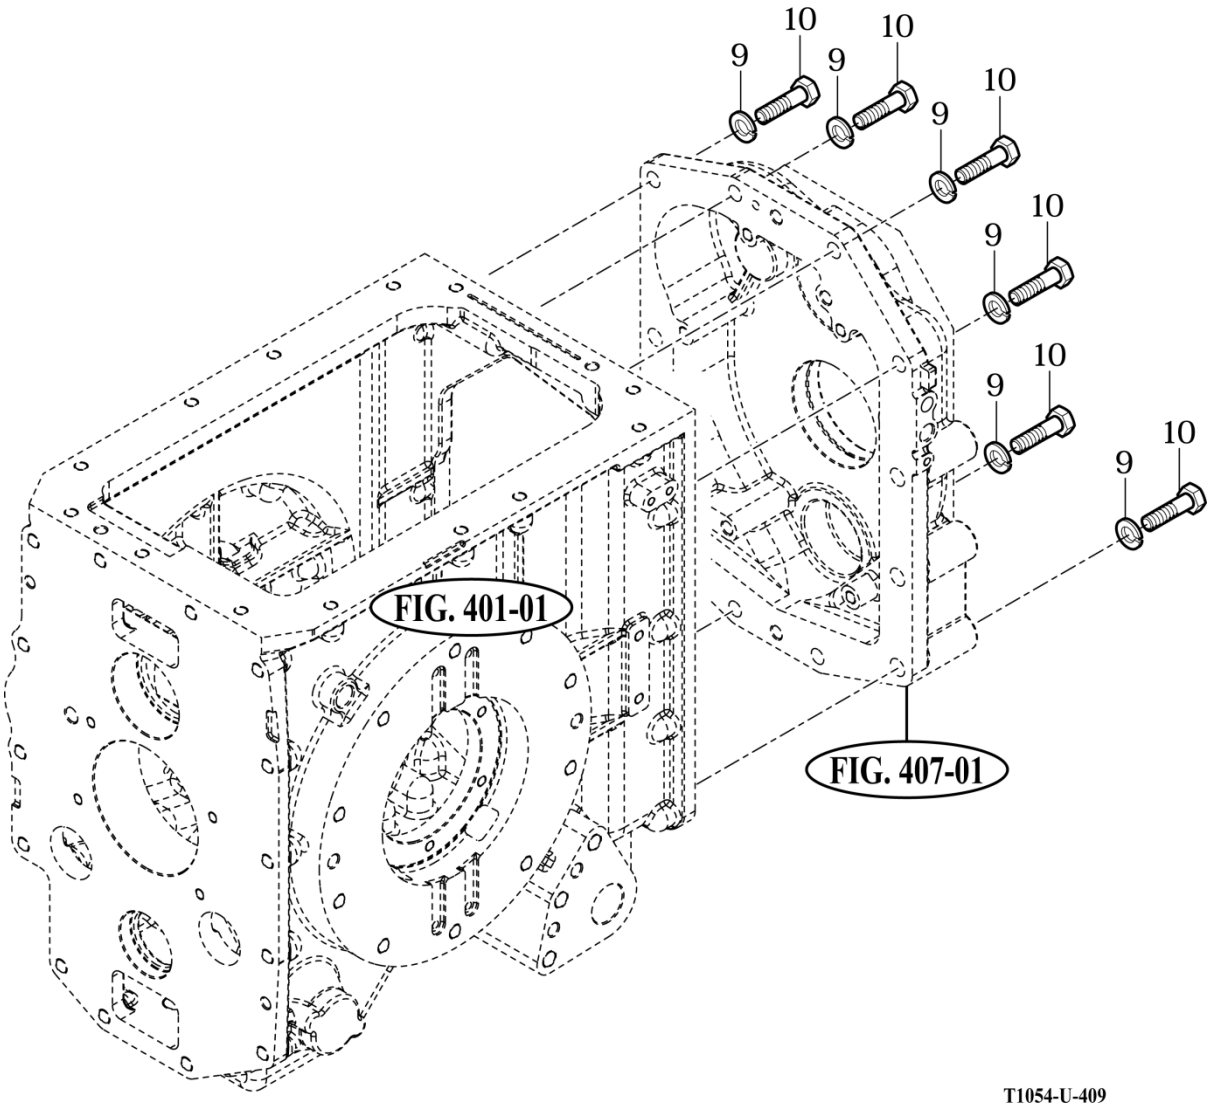

NOTE

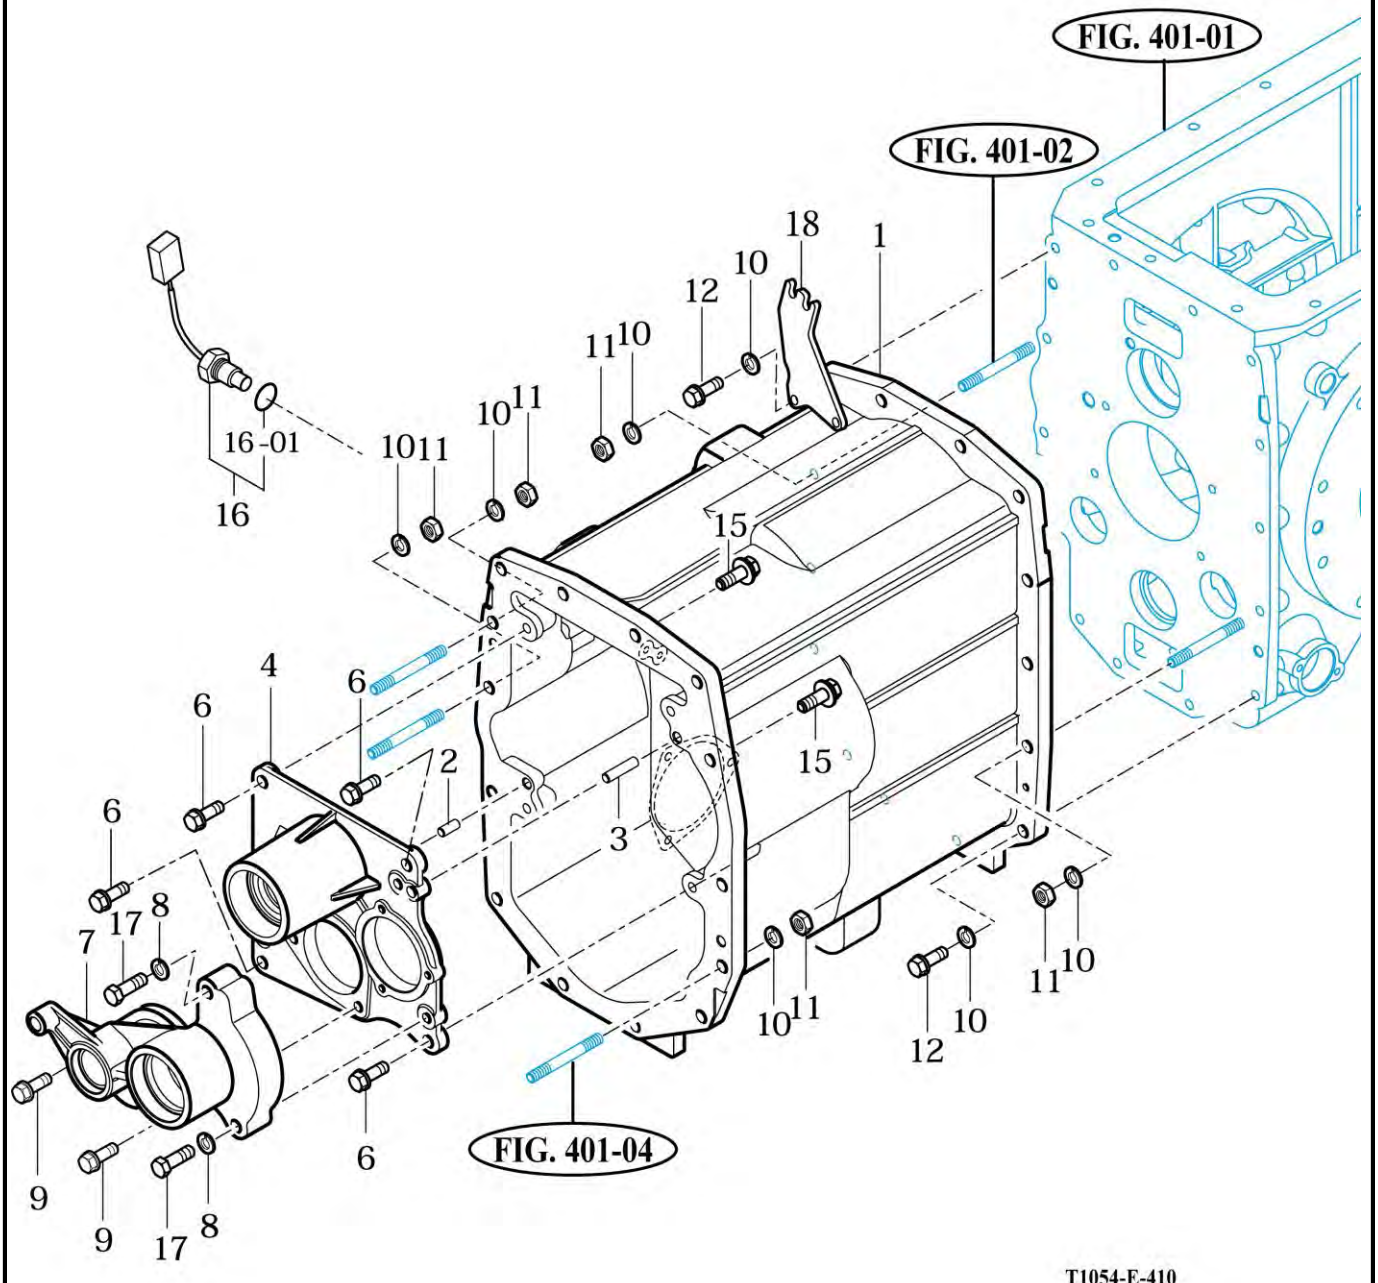
FIG. 401-01
FIG. 401-02
FIG. 401-04
16
16-01
10
11
12
18
1
15
4
6
2
3
7
17
8
9
T1054-E-410

NOTE

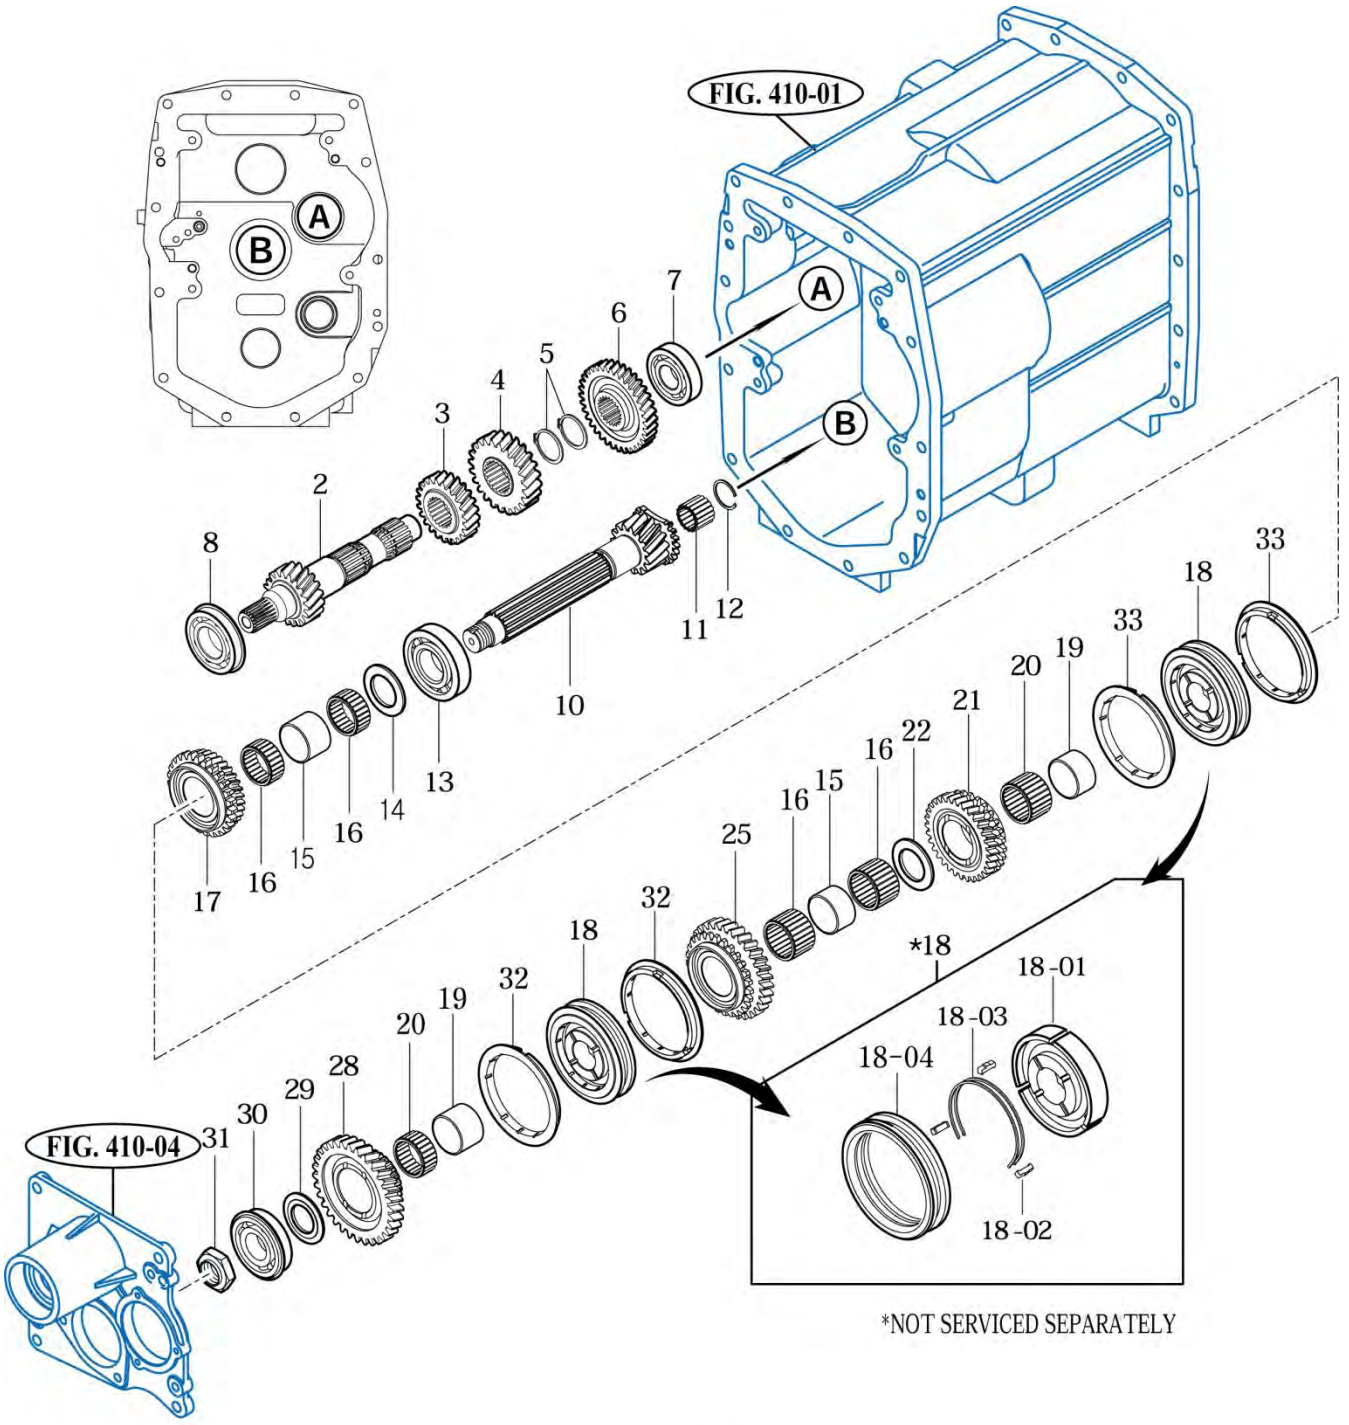

T993-K-411

NOTE

FIG 412


T1104SC / T1054SC / T954SC

MAIN CHANGE LEVER


P1

YEAR

2014

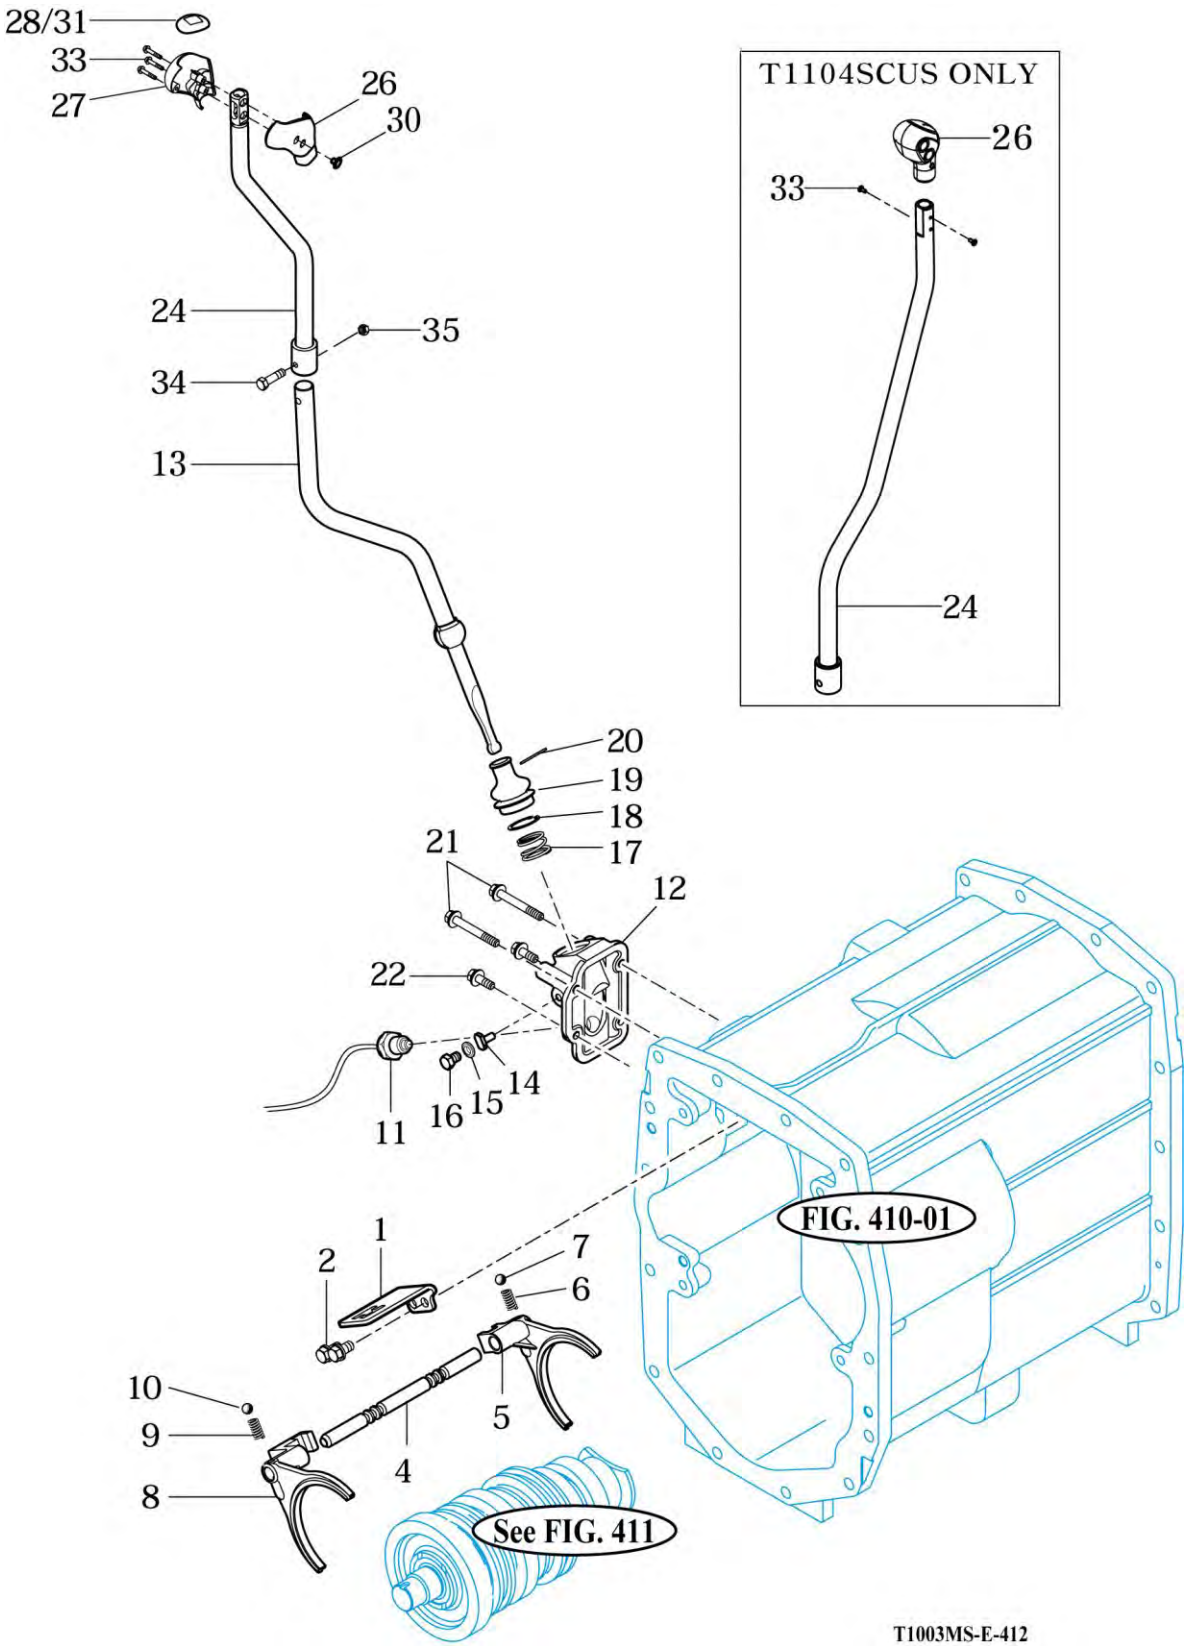

NOTE

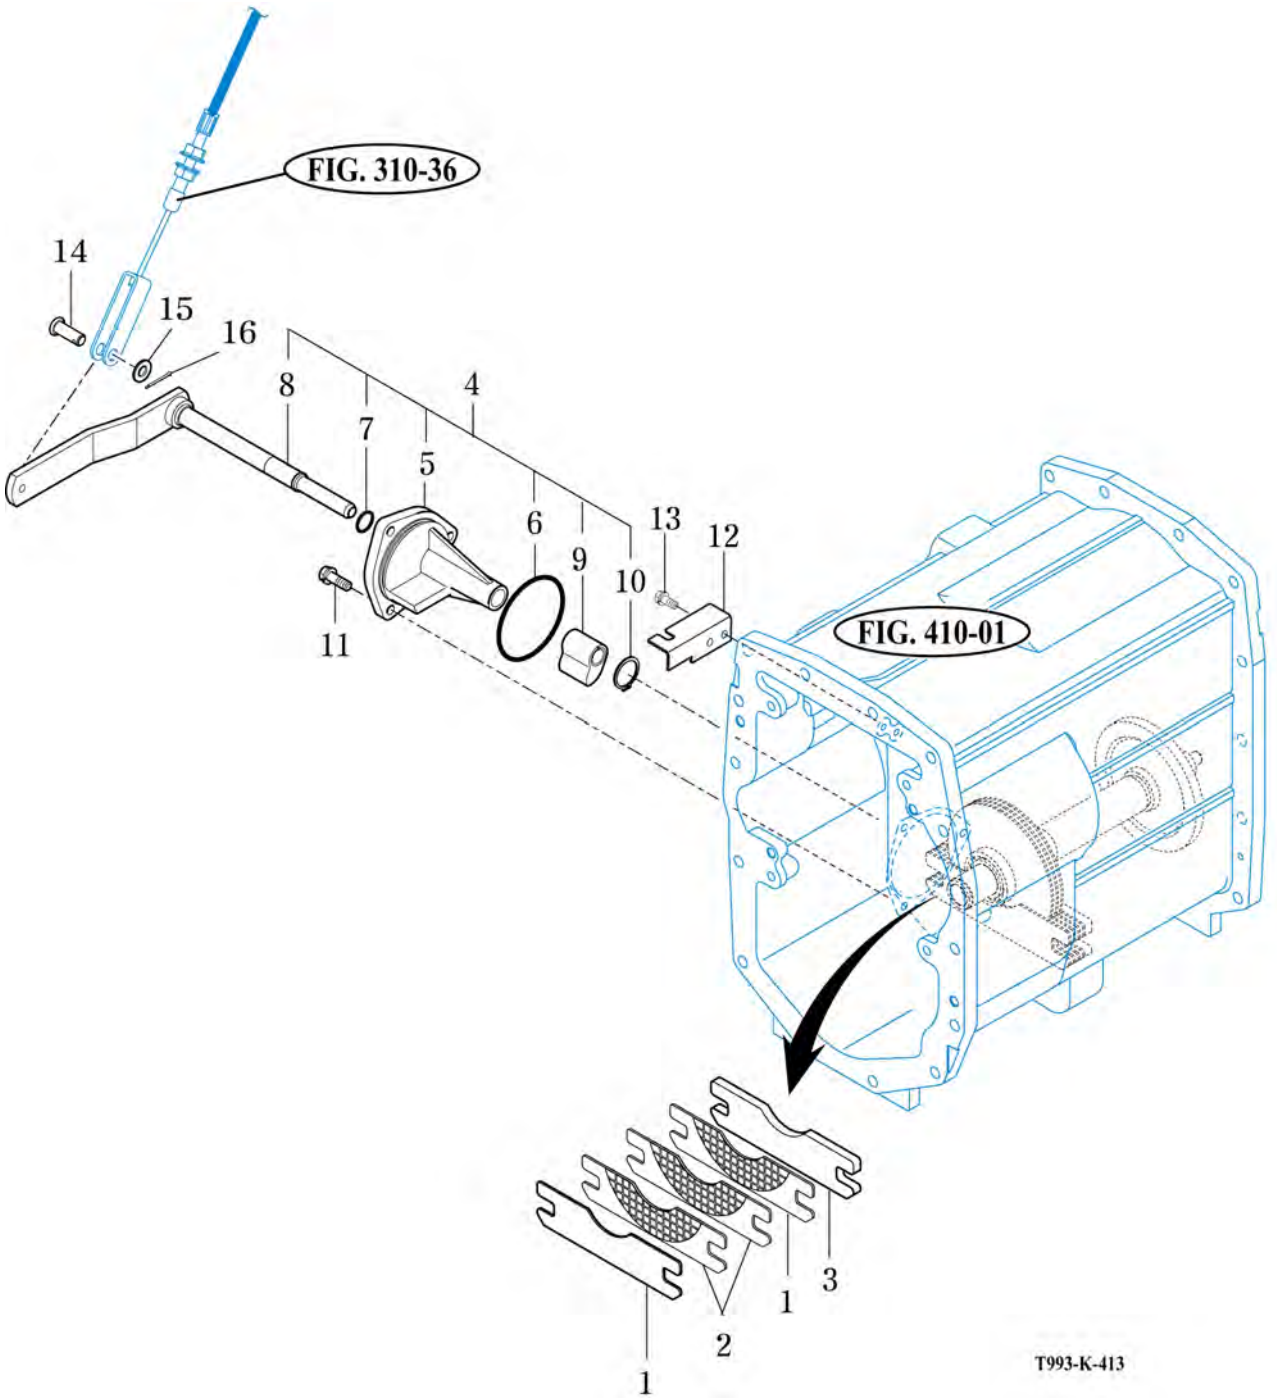

NOTE

FIG 414


T1104SC / T1054SC / T954SC

POWER SHUTTLE GEAR

P1


YEAR

2014

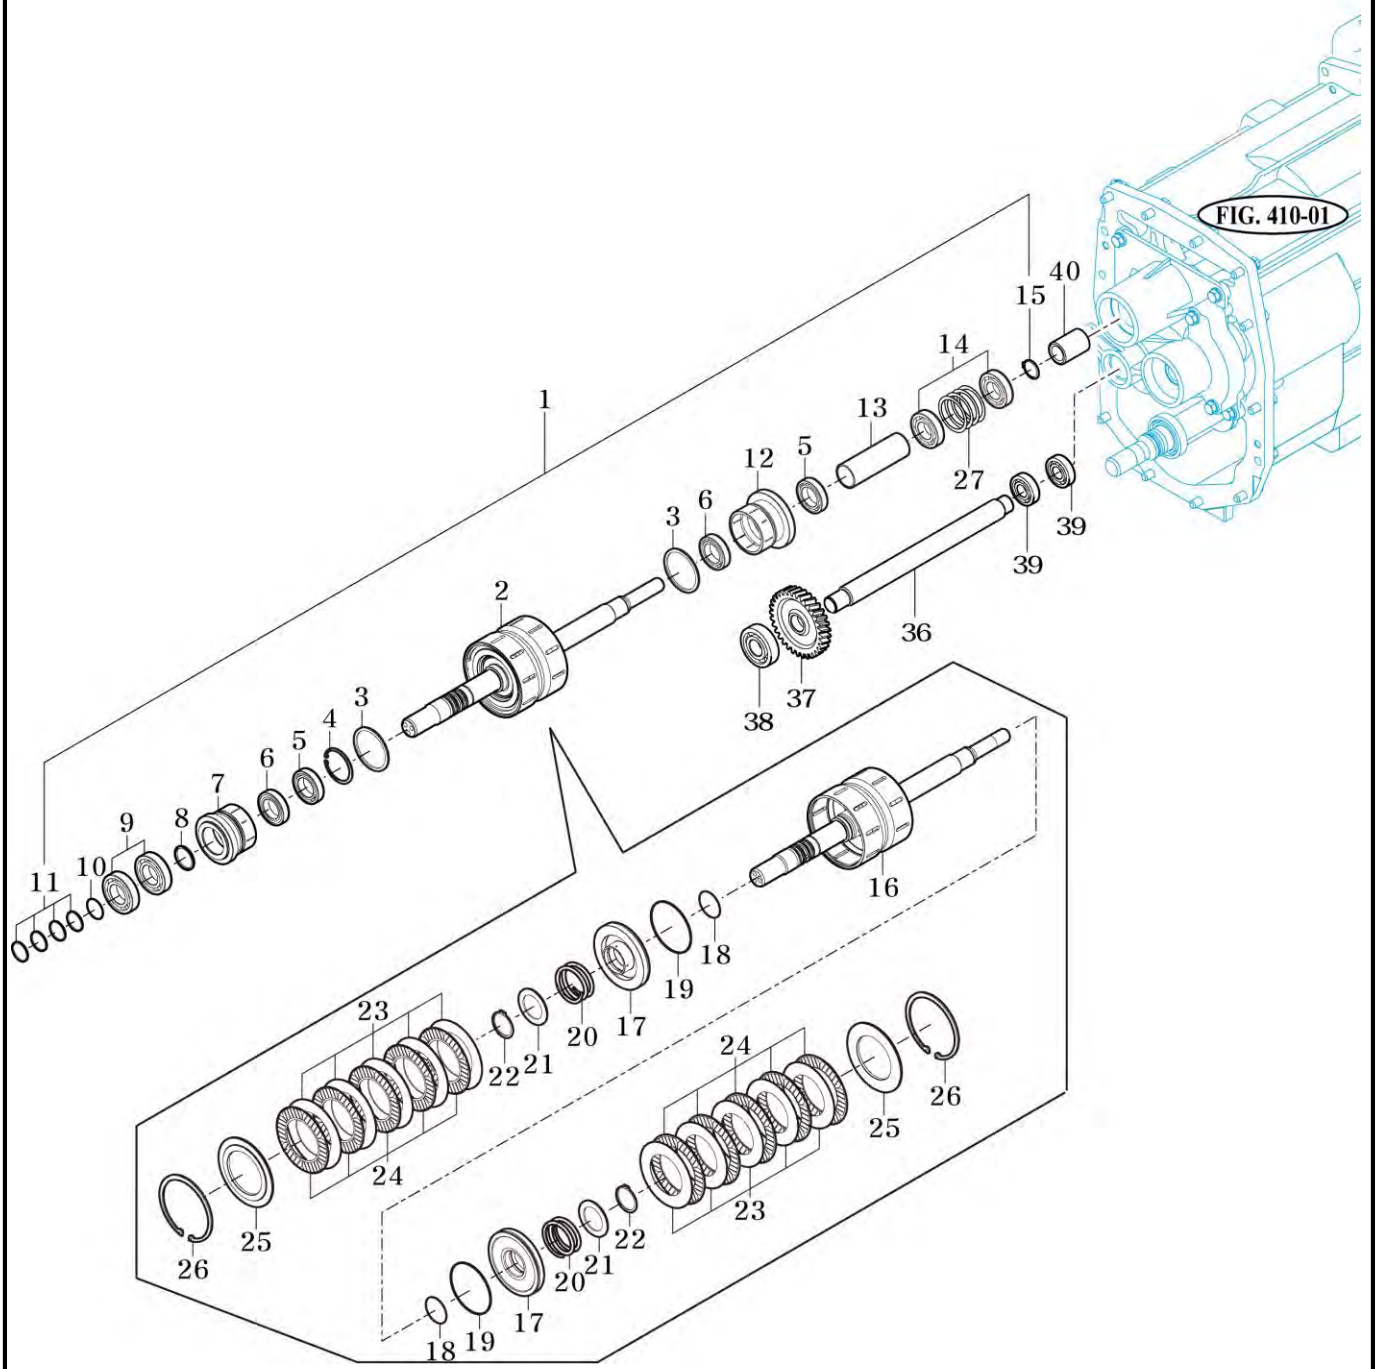

NOTE

FIG 415 T1104SC / T1054SC / T954SC	POWER SHUTTLE COUNT GEAR	P1	YEAR 2014	

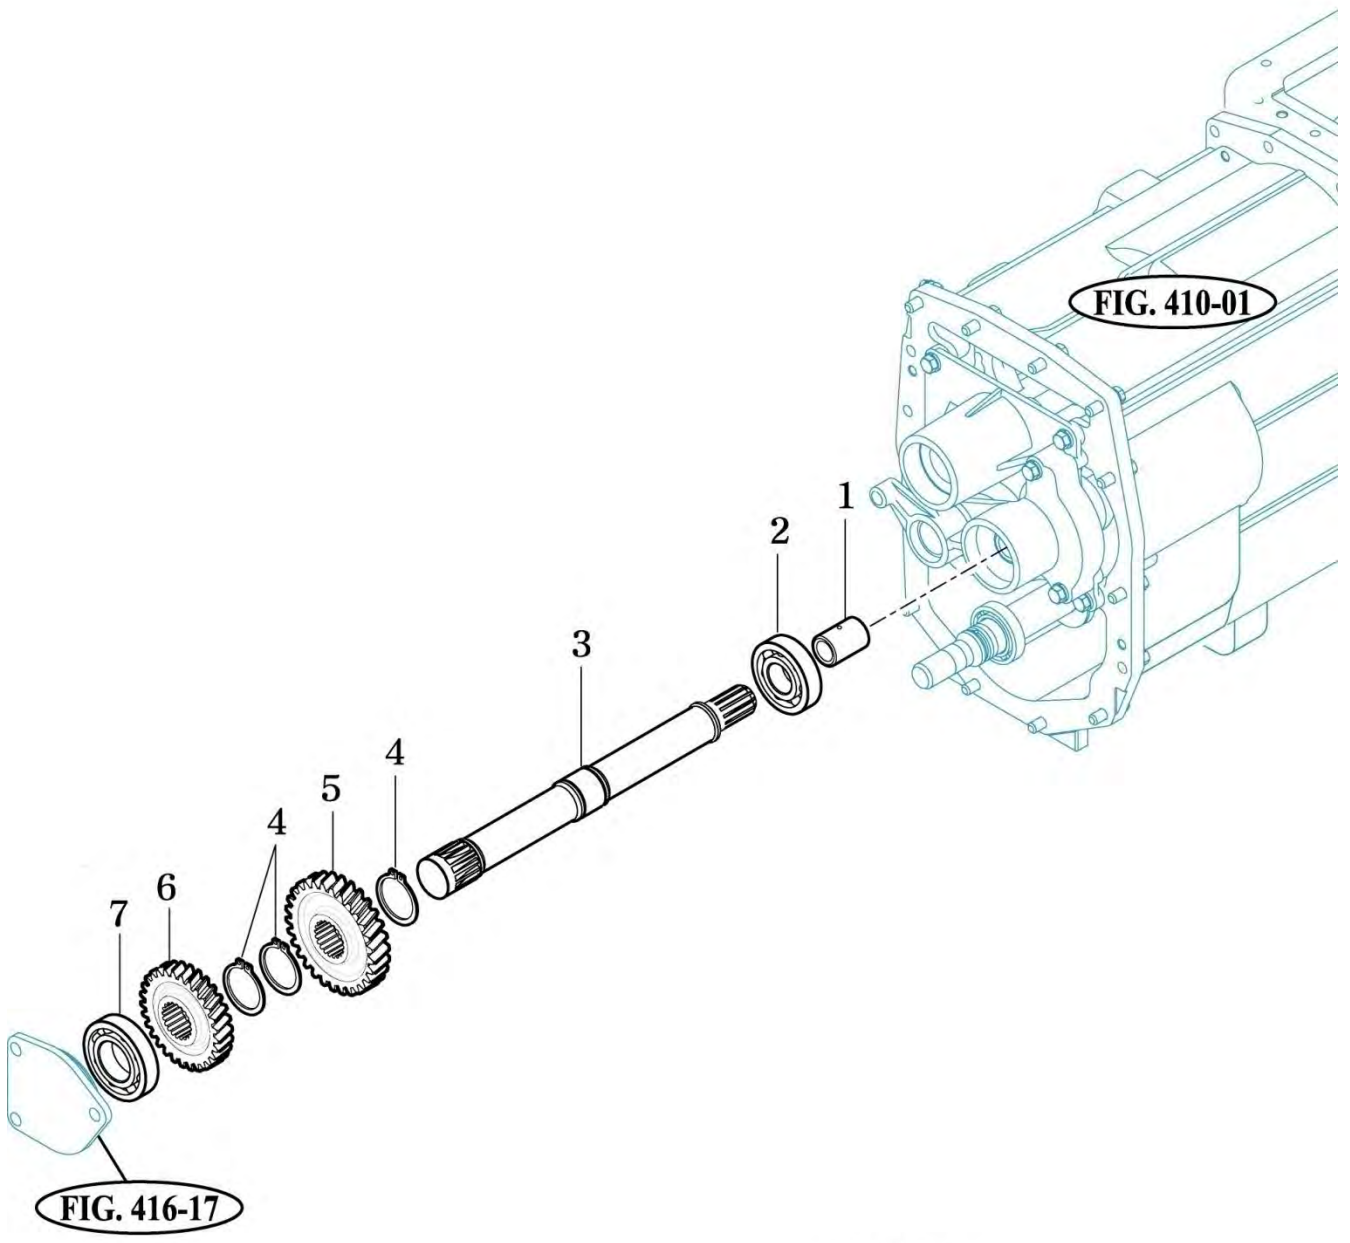

T993-K-415B

NOTE

FIG 416


T1104SC / T1054SC / T954SC

CASE, FR TRANSMISSION

P1

YEAR

2014

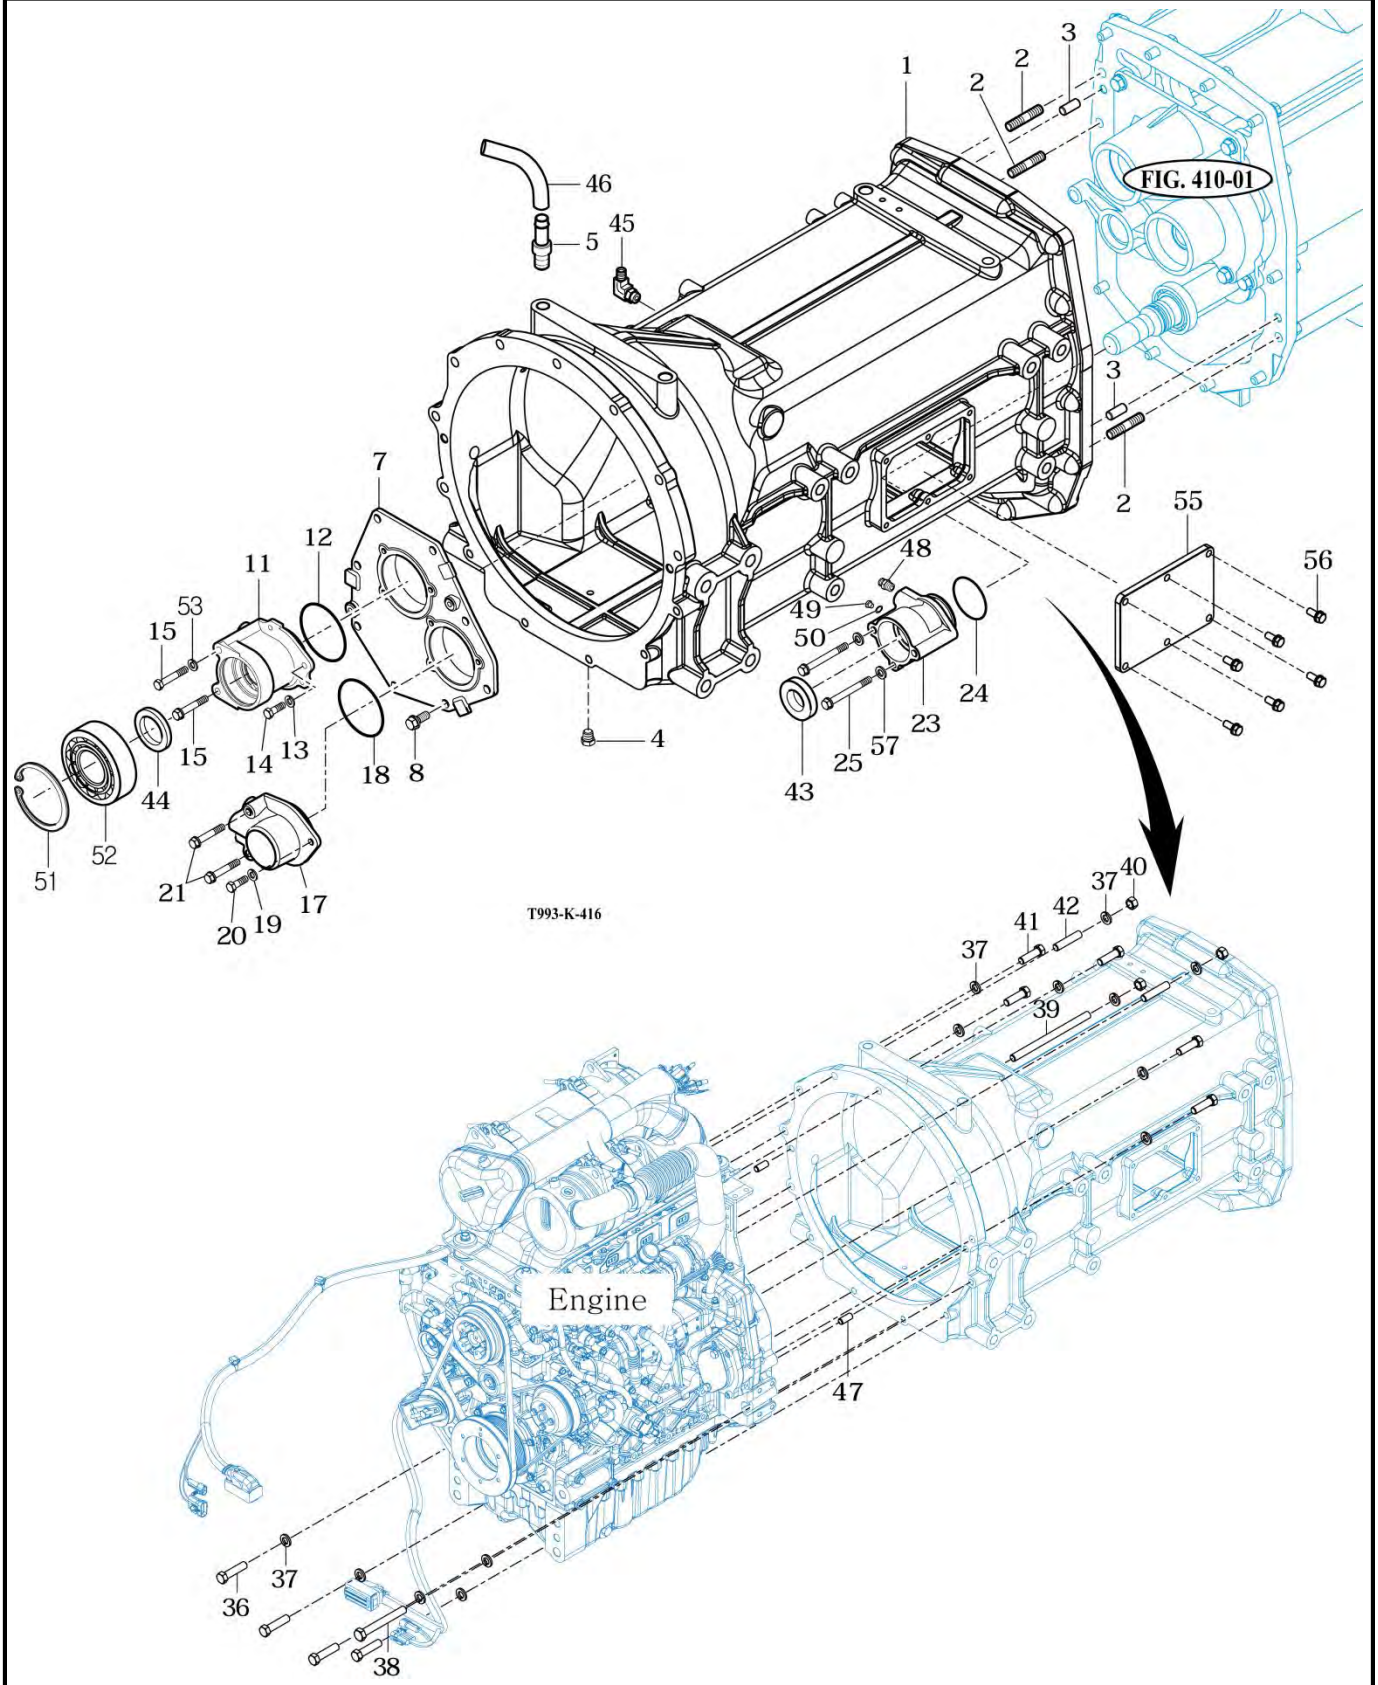

NOTE

FIG 501


T1104SC / T1054SC / T954SC

FRONT AXLE SUPPORTER

P1

YEAR

2014

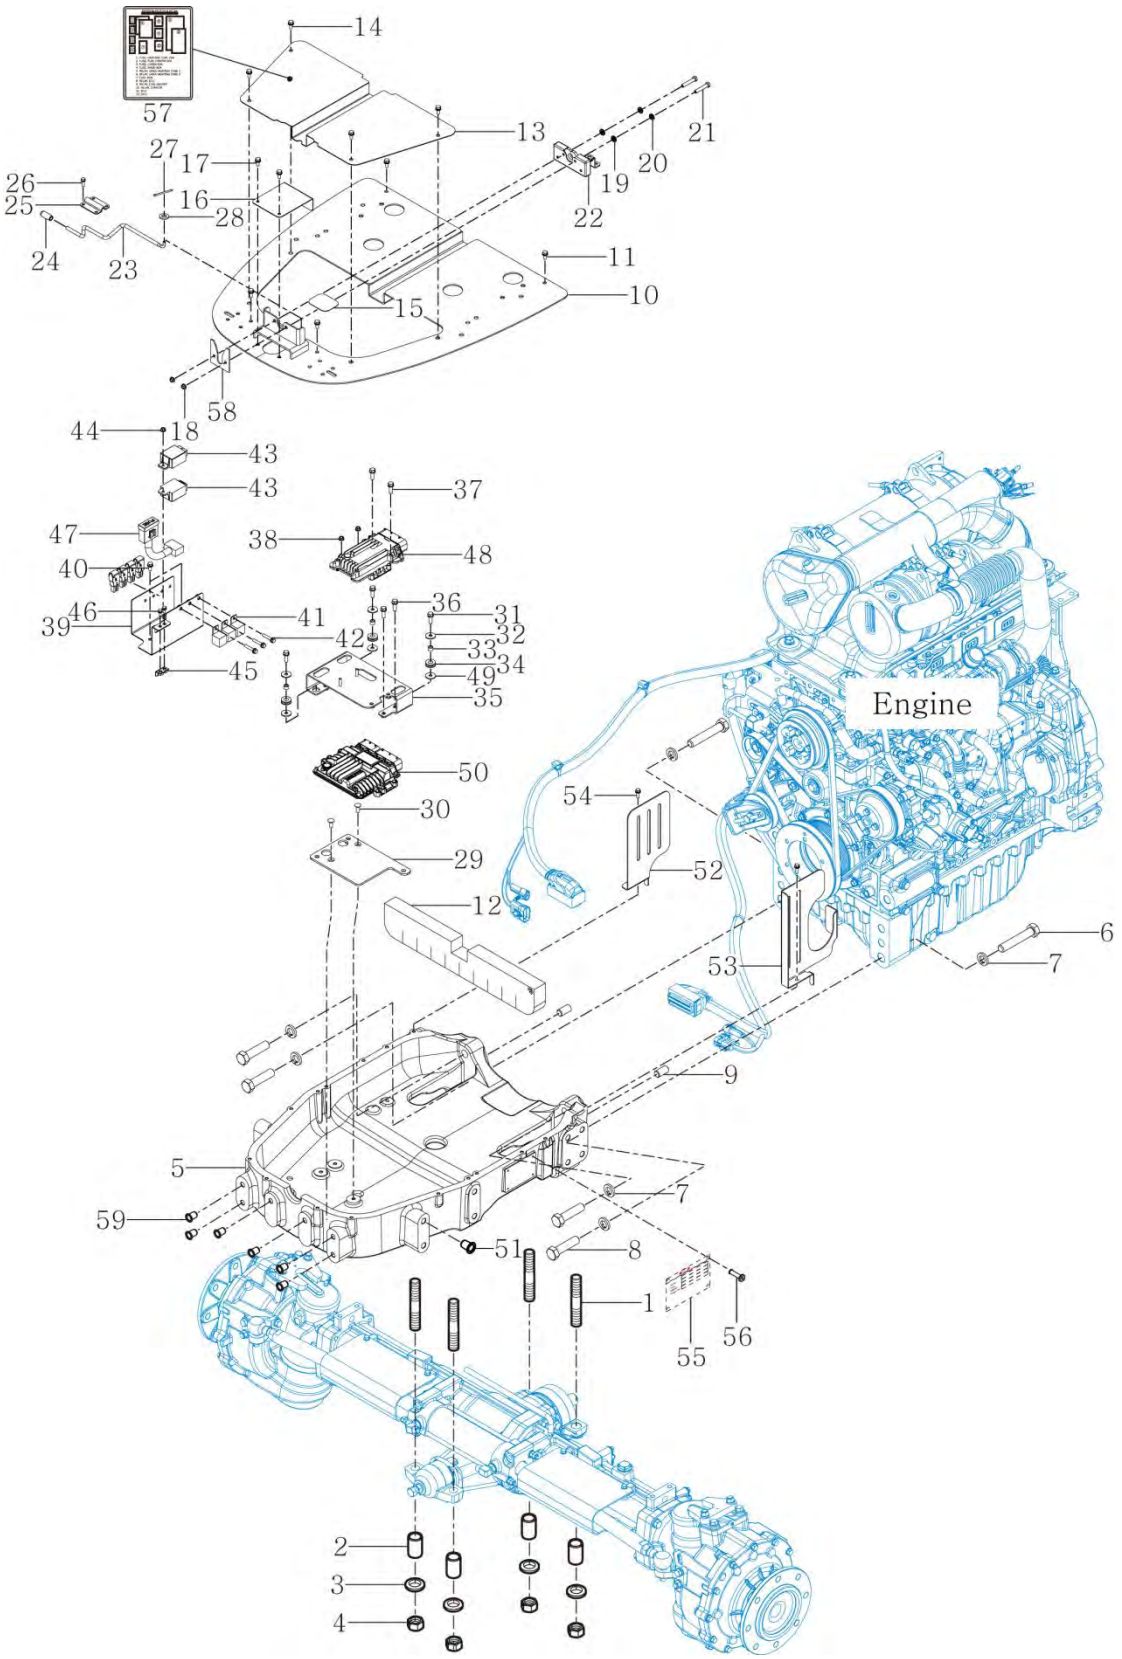

NOTE

FIG 501


T1104SC / T1054SC / T954SC

FRONT AXLE SUPPORTER

P2

YEAR

2014

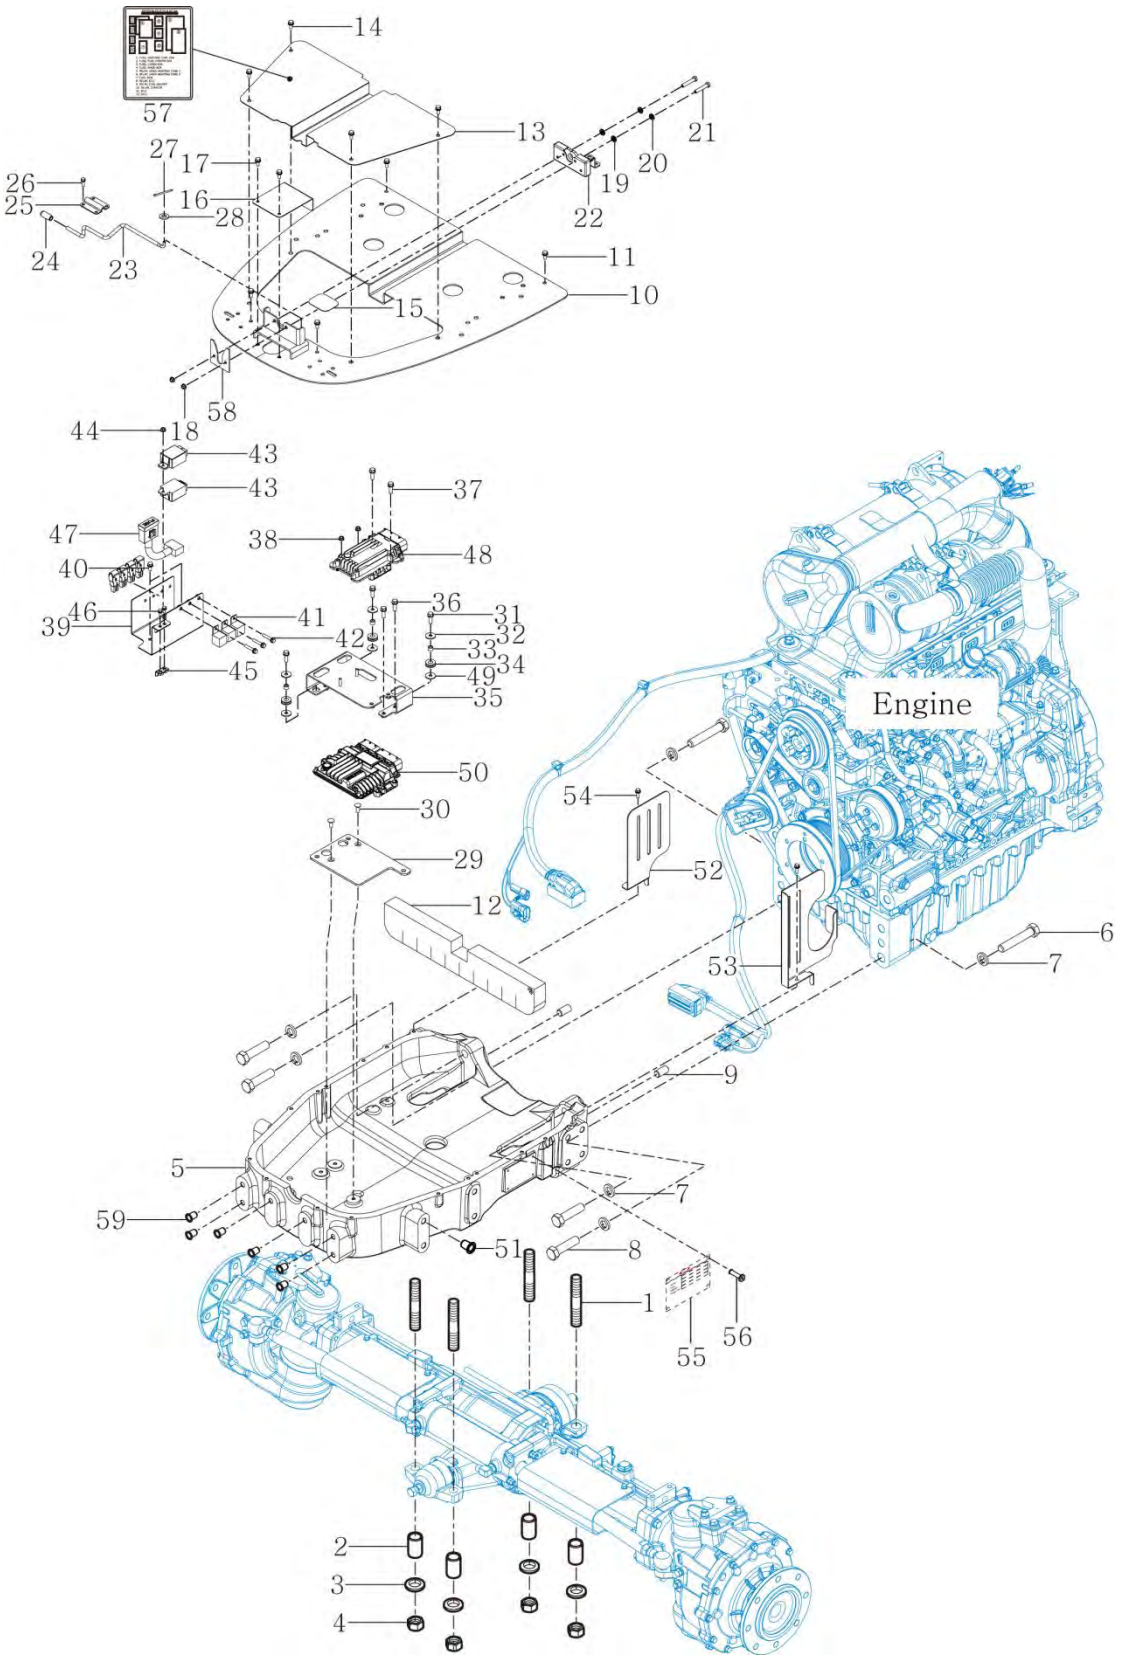

NOTE

FIG 502


T1104SC / T1054SC / T954SC

FRONT DRIVE SHAFT

P1

YEAR

2014

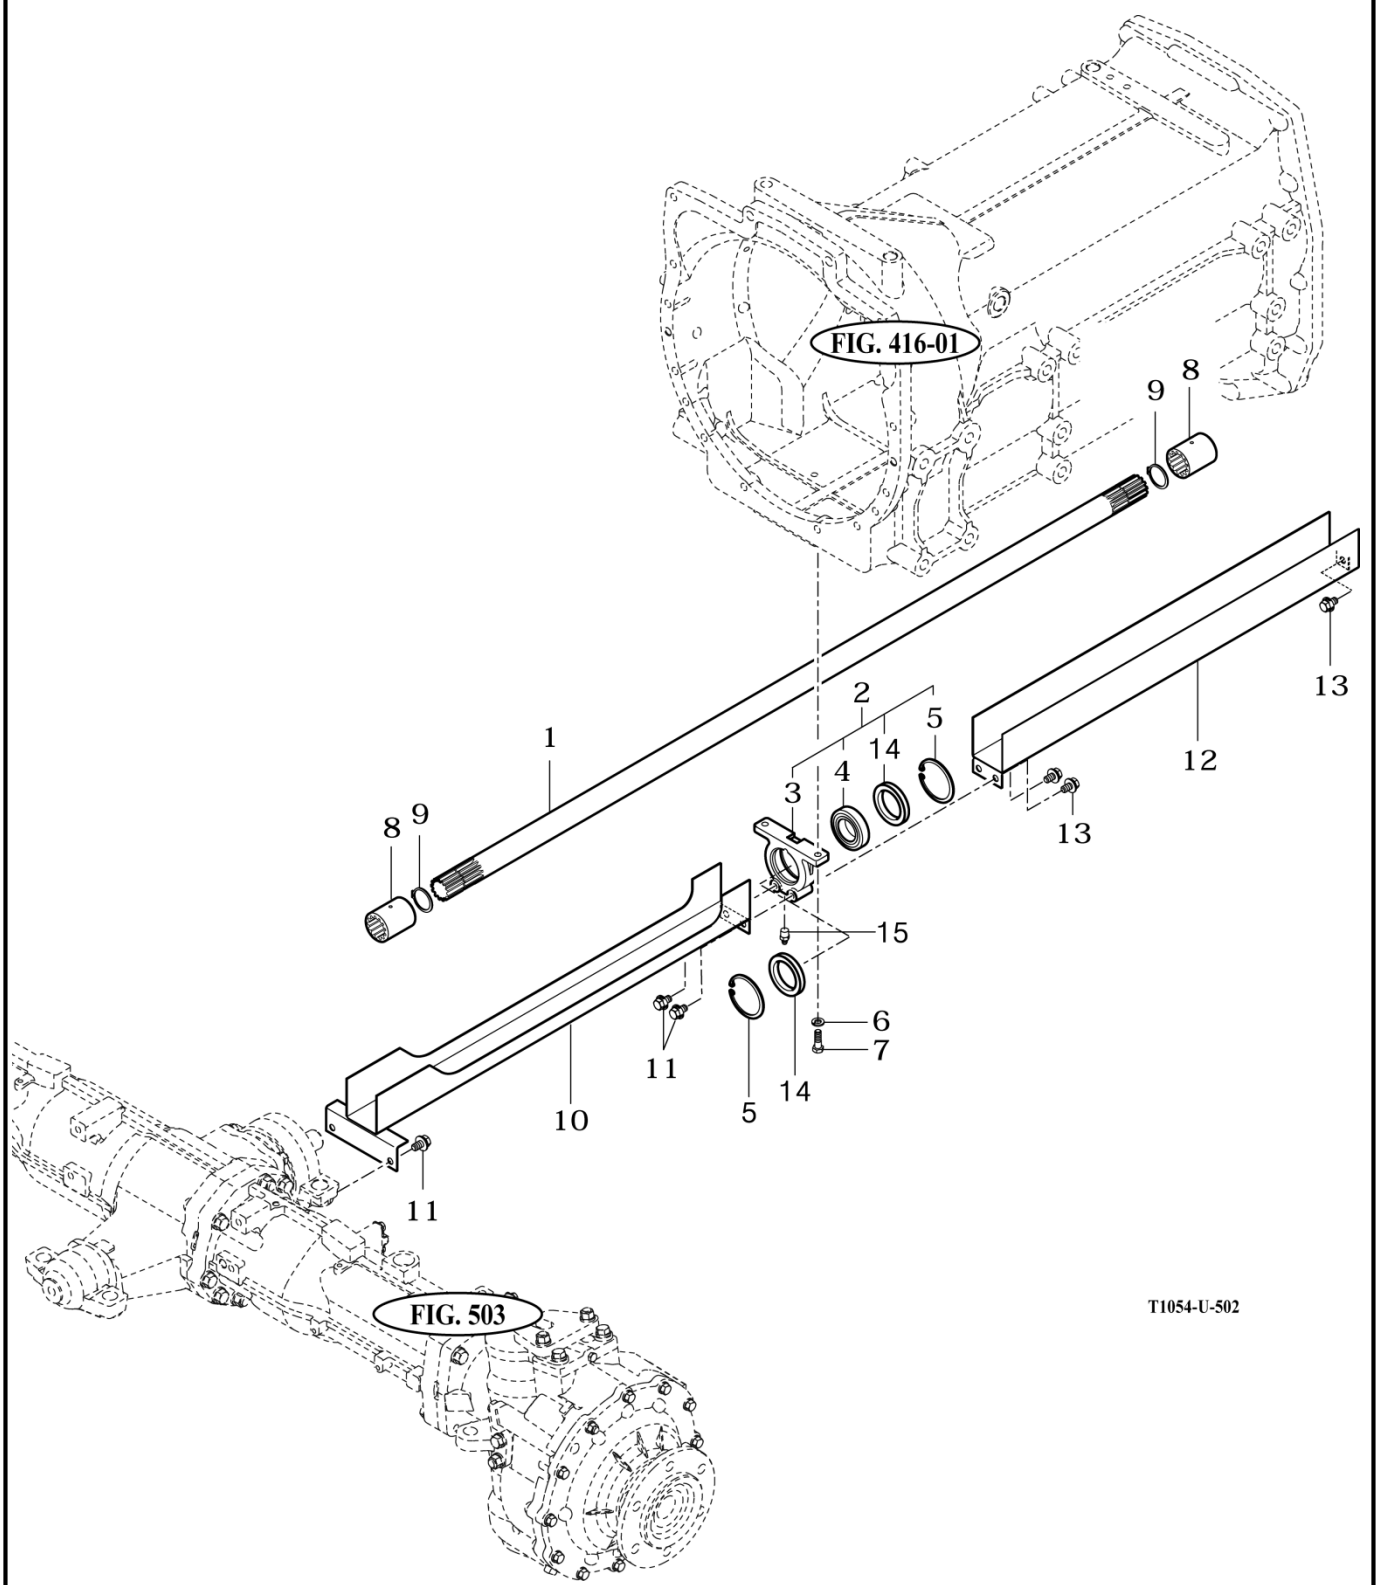

NOTE

FIG 503


T1104SC / T1054SC / T954SC


FRONT AXLE HOUSING

P1

YEAR

2014

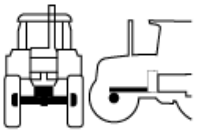

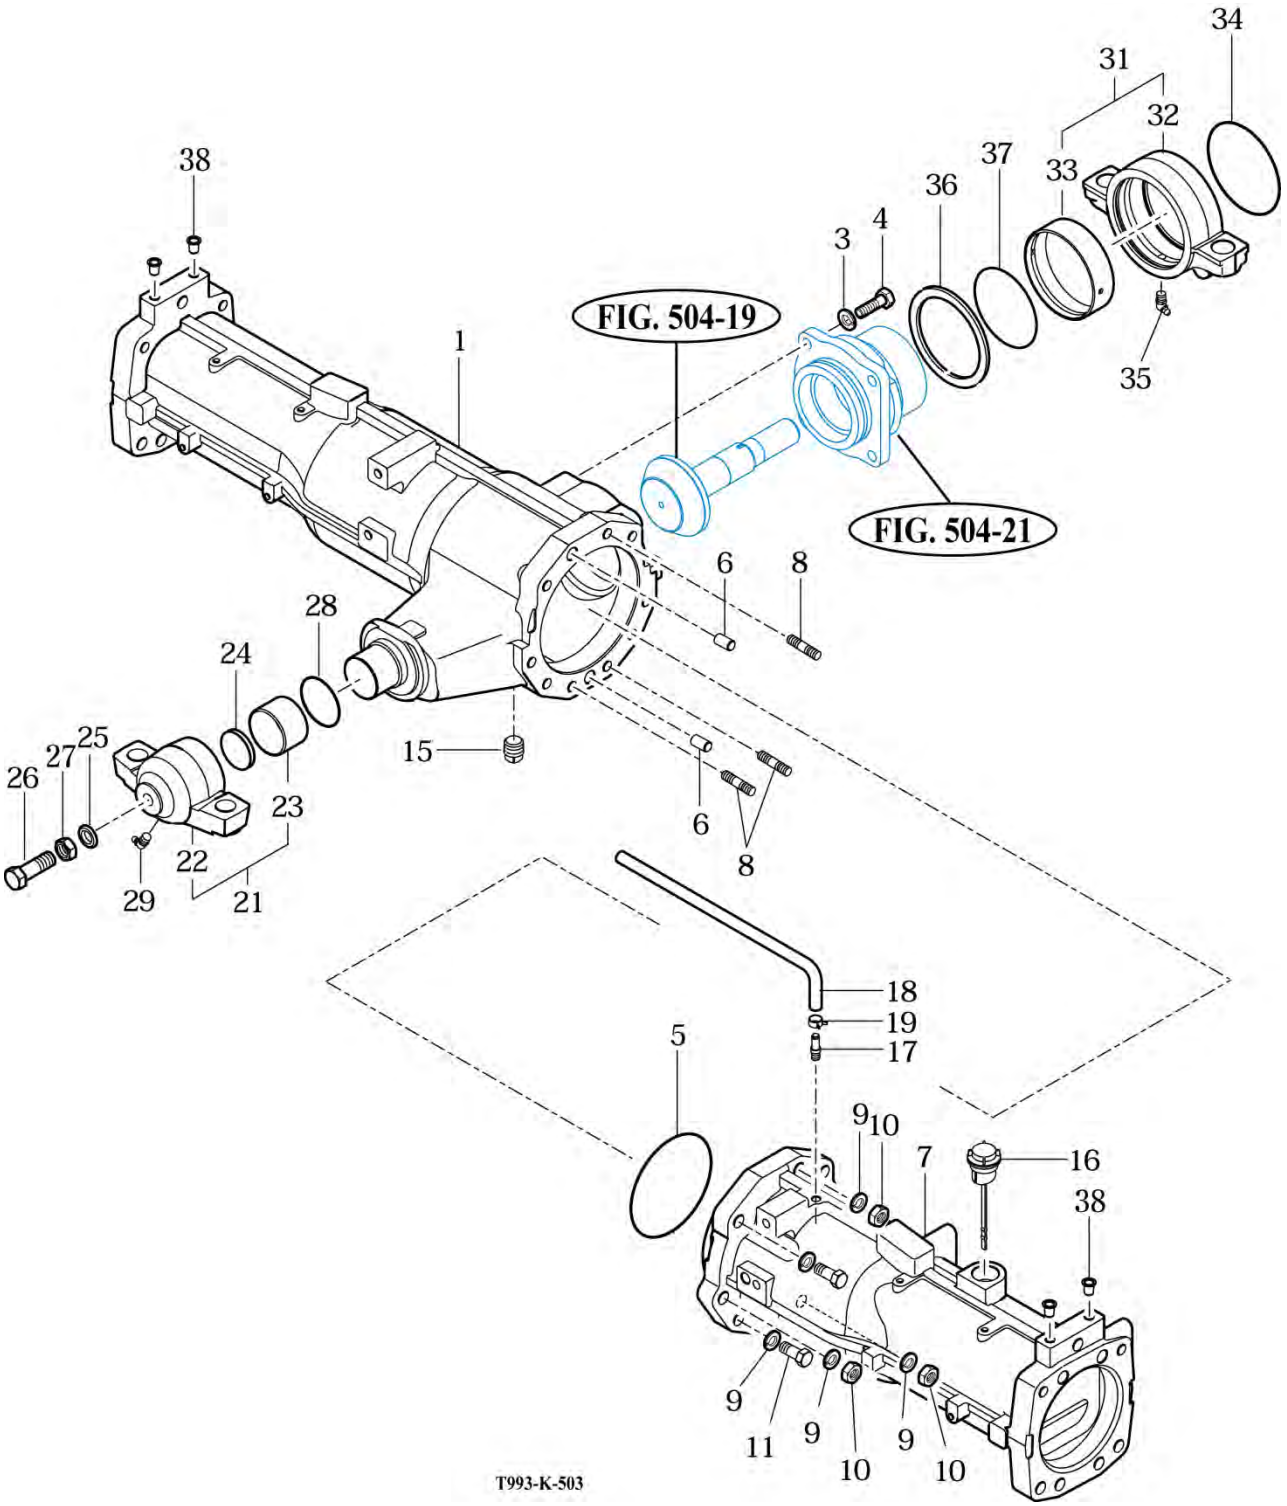

NOTE

FIG 504


T1104SC / T1054SC / T954SC


FRONT DIFFERENTIAL GEARS

P1

YEAR

2014

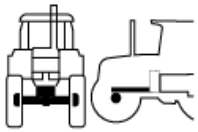

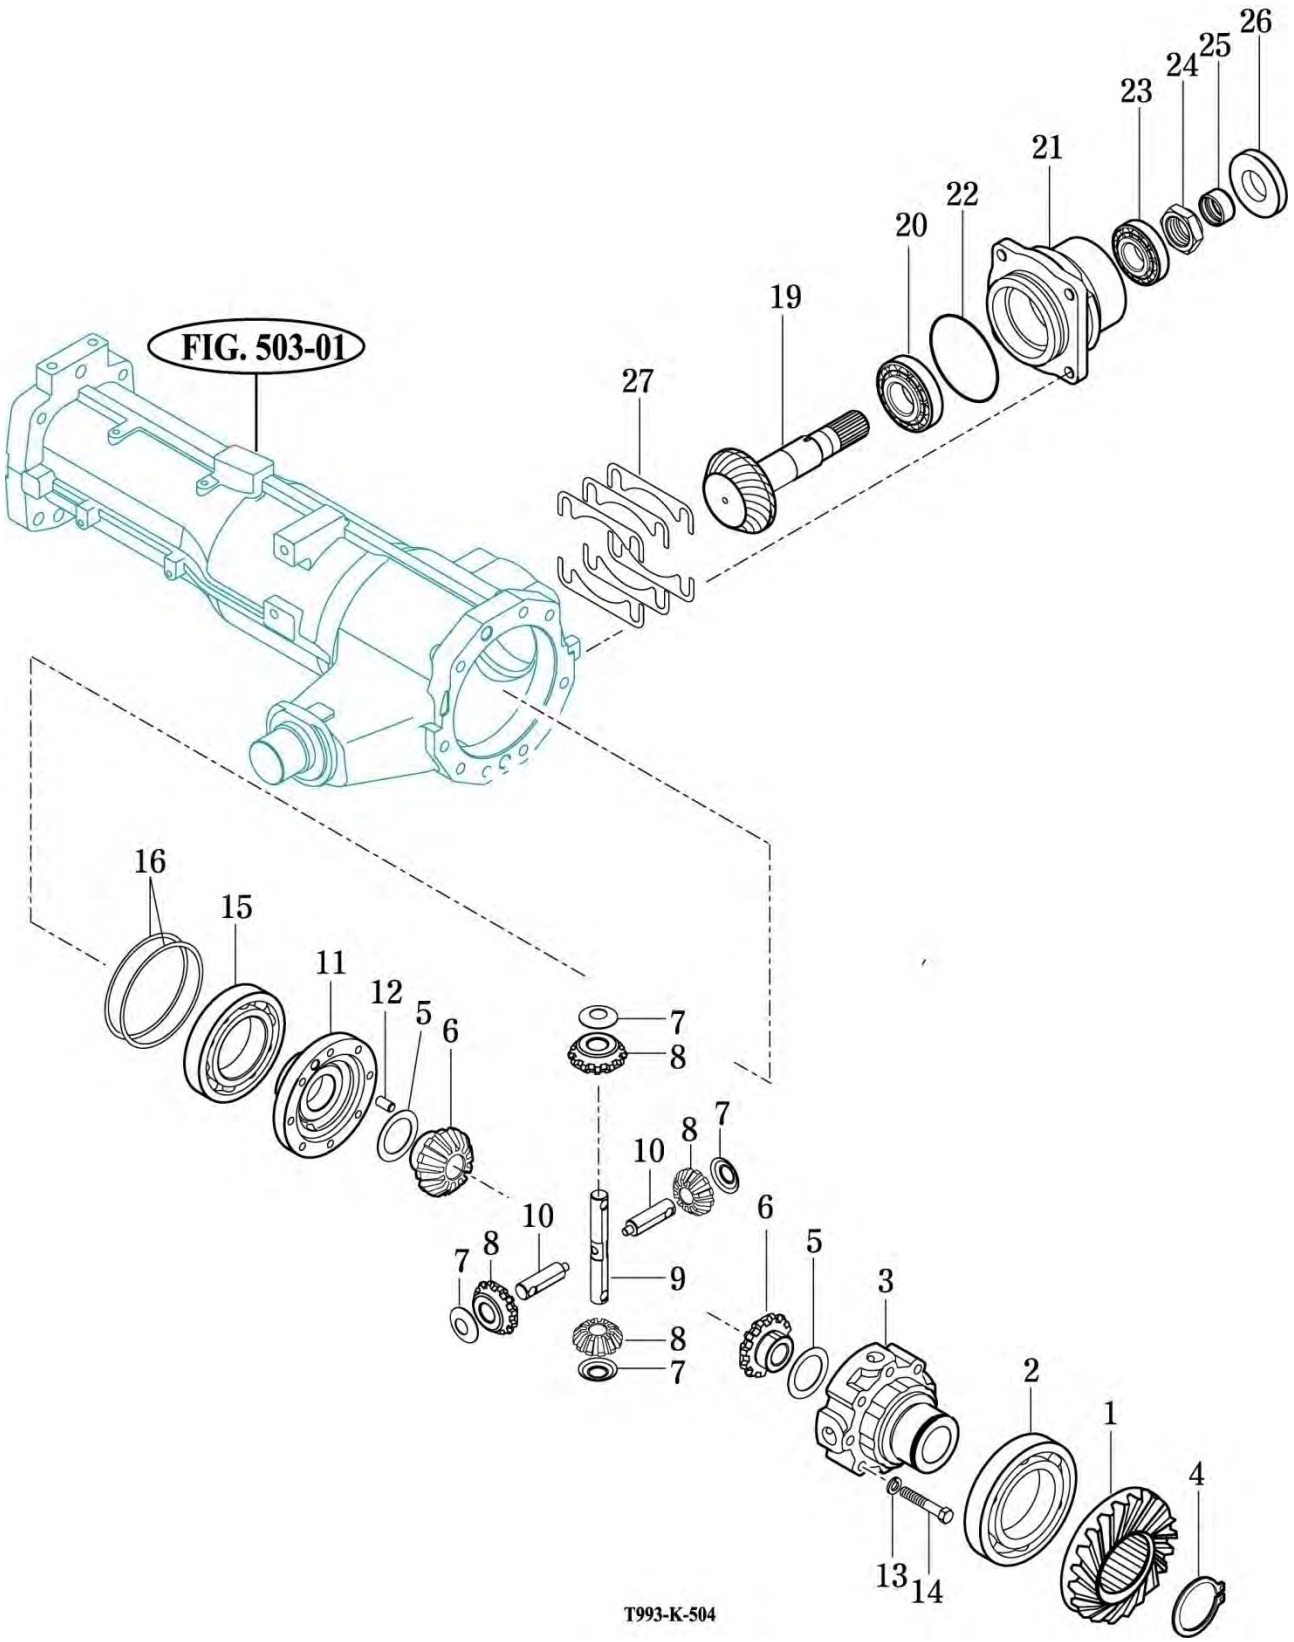

NOTE

FIG 505


T1104SC / T1054SC / T954SC


FRONT GEAR CASE (1)

P1

YEAR

2014

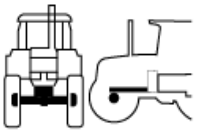

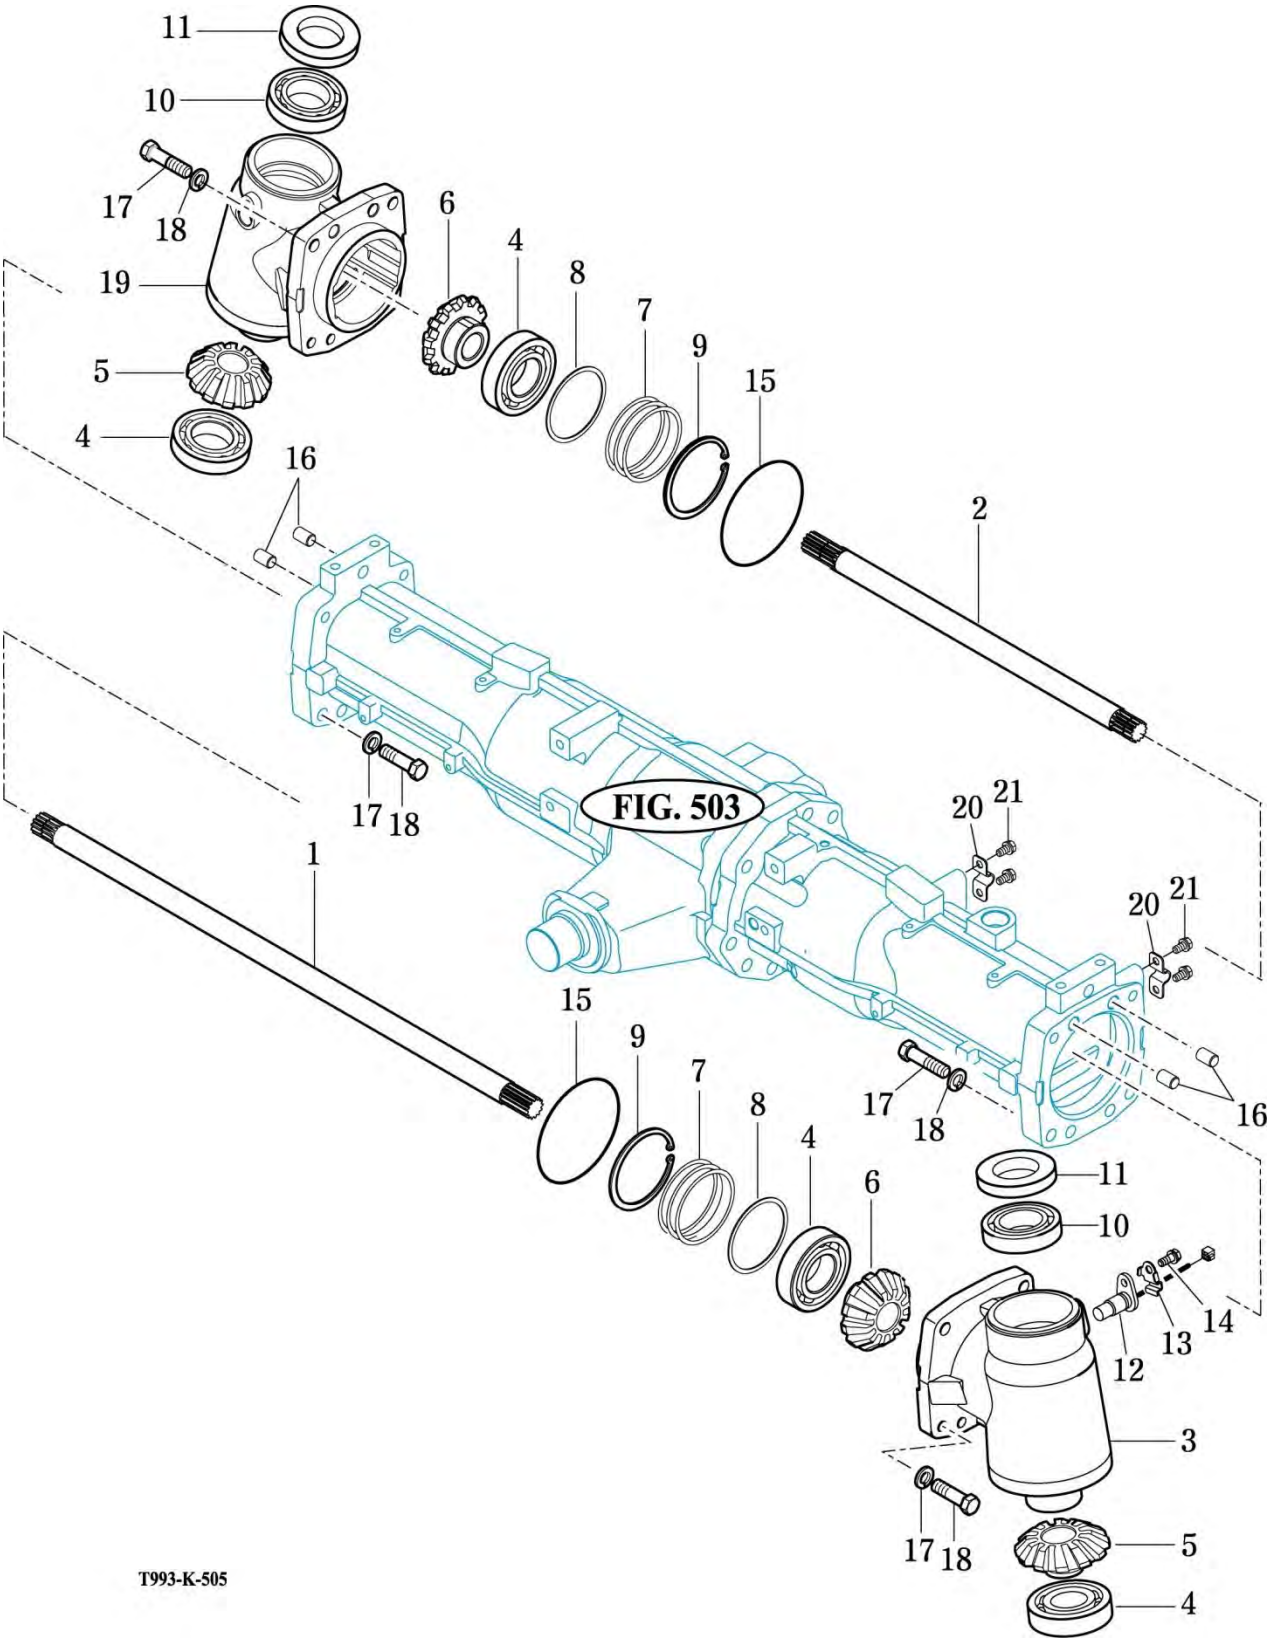

NOTE

FIG 506


T1104SC / T1054SC / T954SC

FRONT GEAR CASE (2)

P1

YEAR

2014

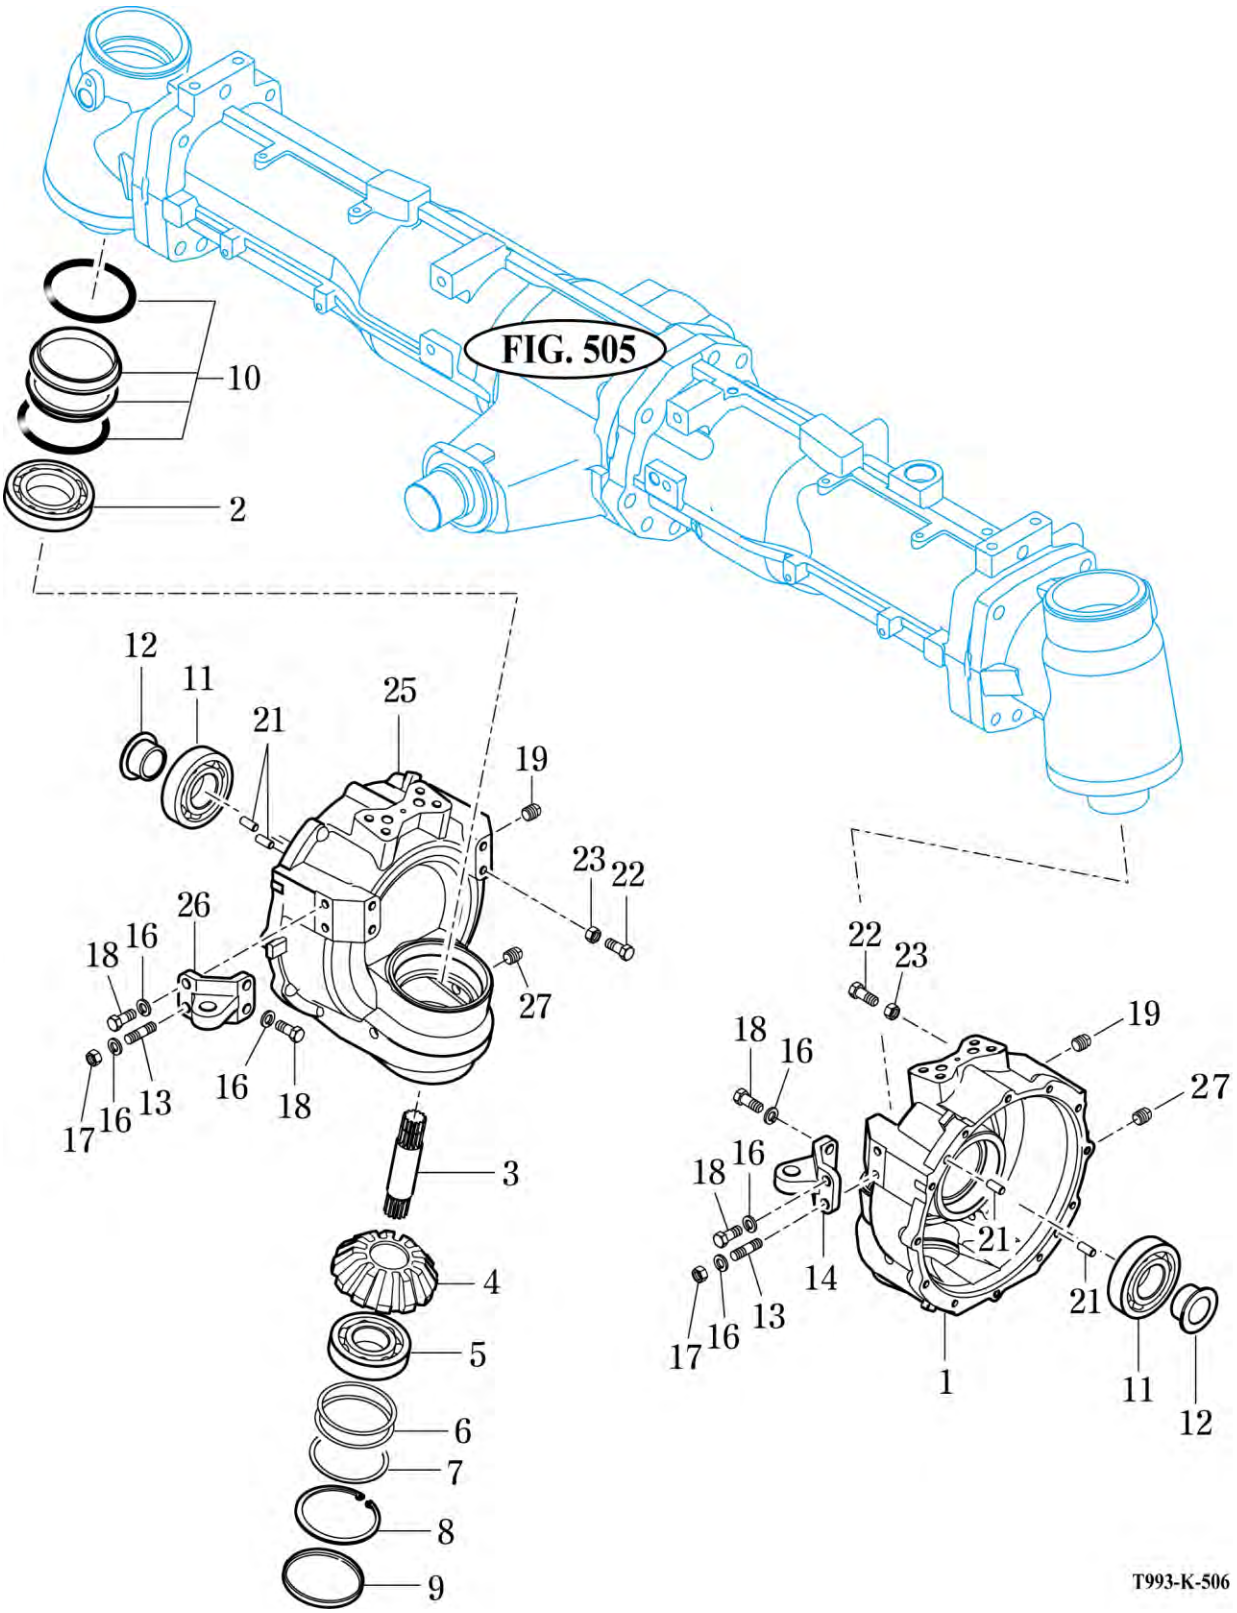

NOTE

FIG 507


T1104SC / T1054SC / T954SC

FRONT GEAR CASE (3)

P1

YEAR

2014

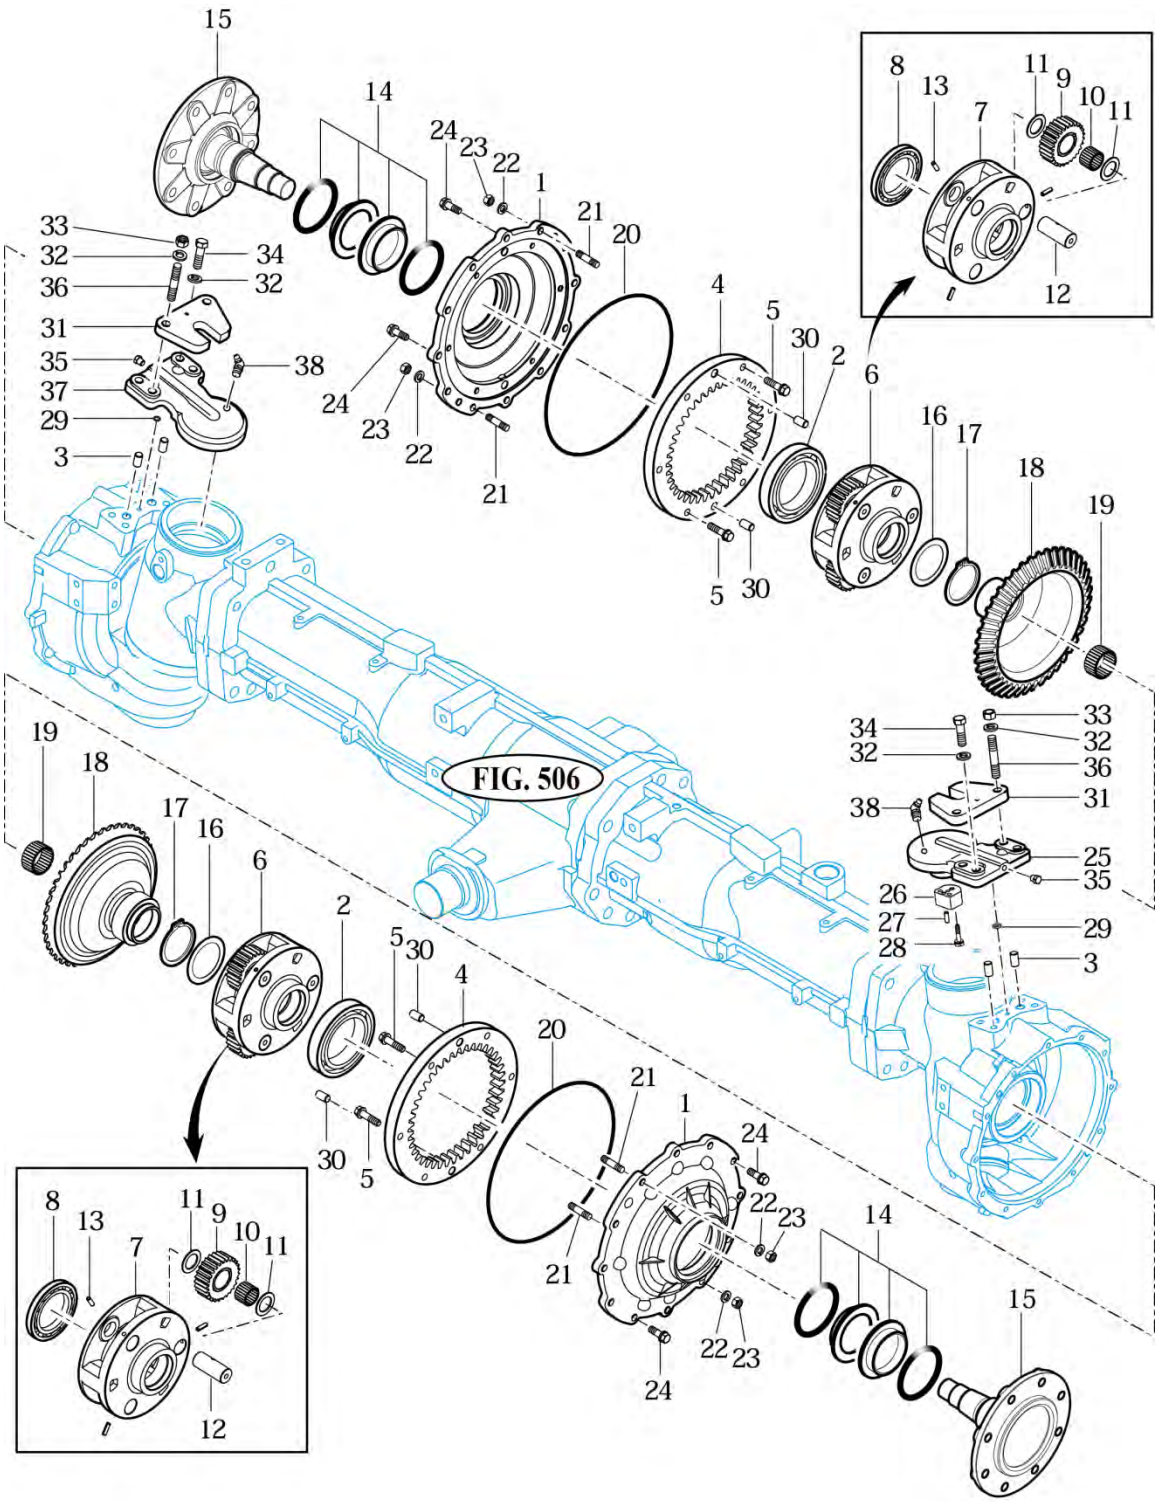

NOTE

FIG 601A


T1104SC / T1054SC / T954SC


VALVE SUB, SHIFT

P1

YEAR

2014

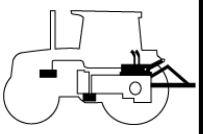

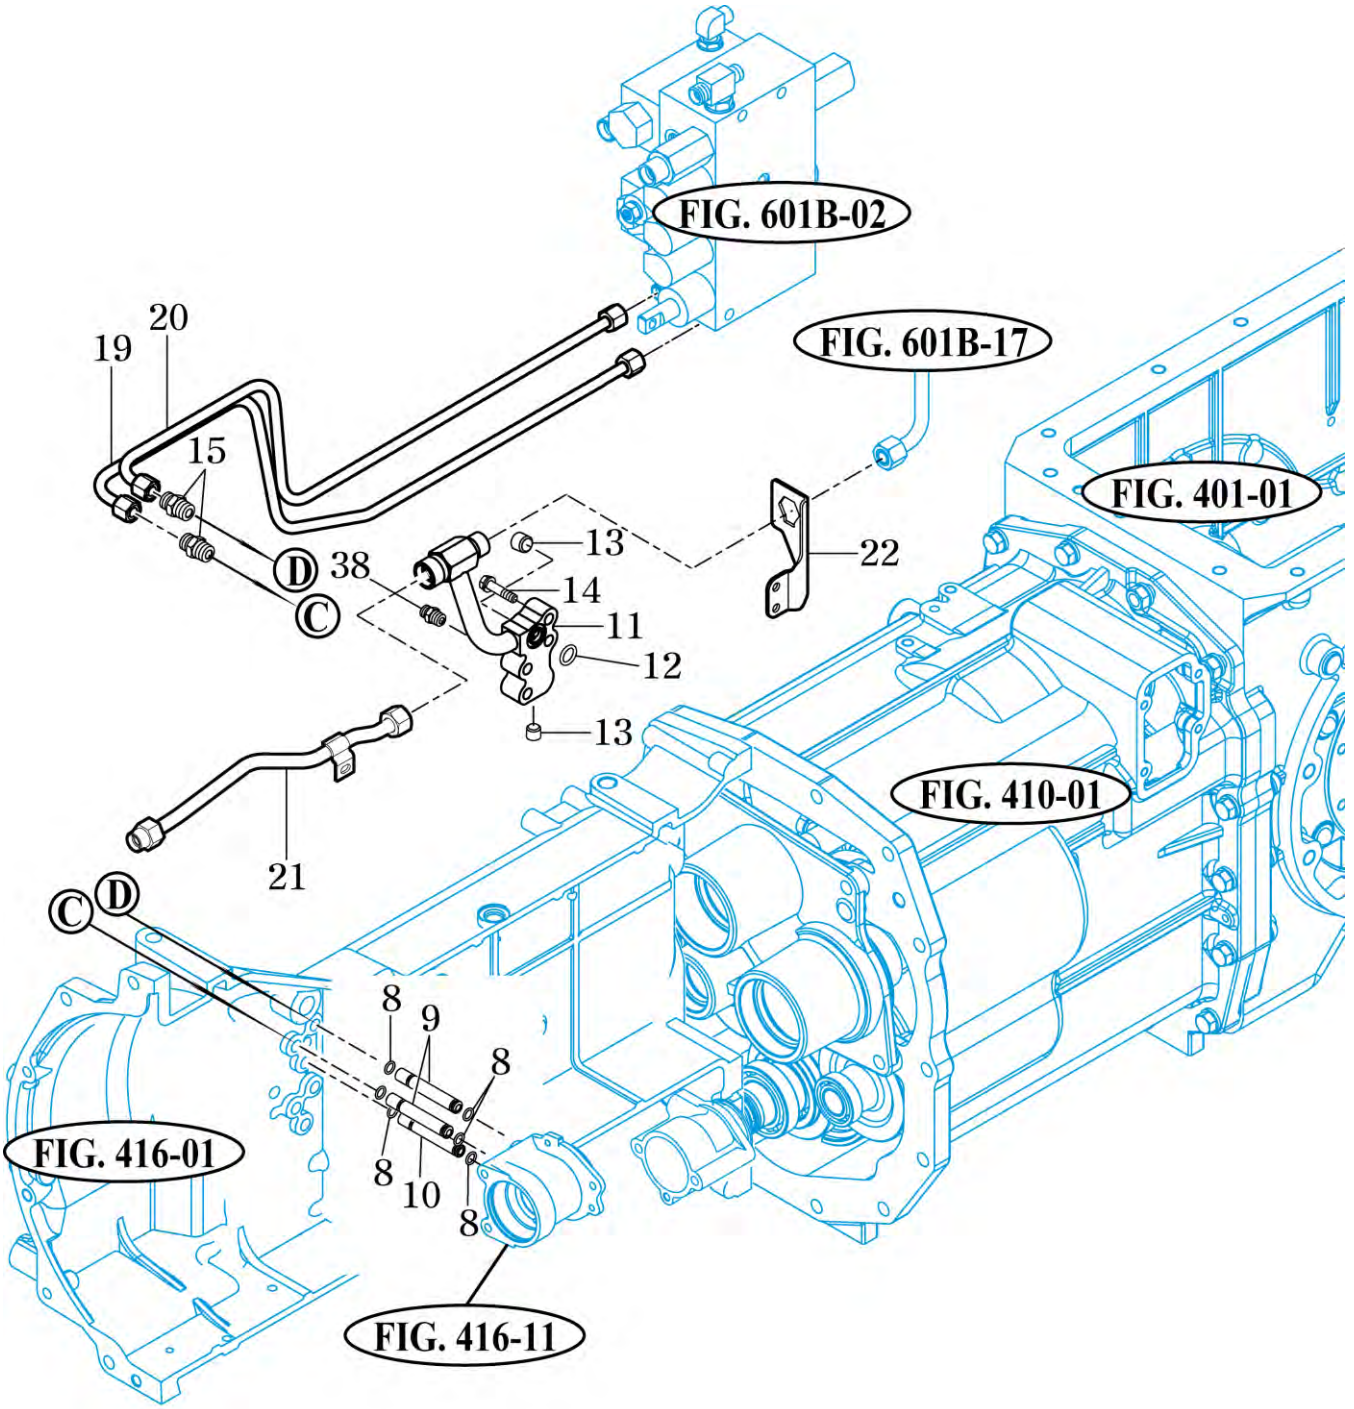

T1054SC-E-601A

NOTE

FIG 601B


T1104SC / T1054SC / T954SC

VALVE SUB, MAIN

P1

YEAR

2014

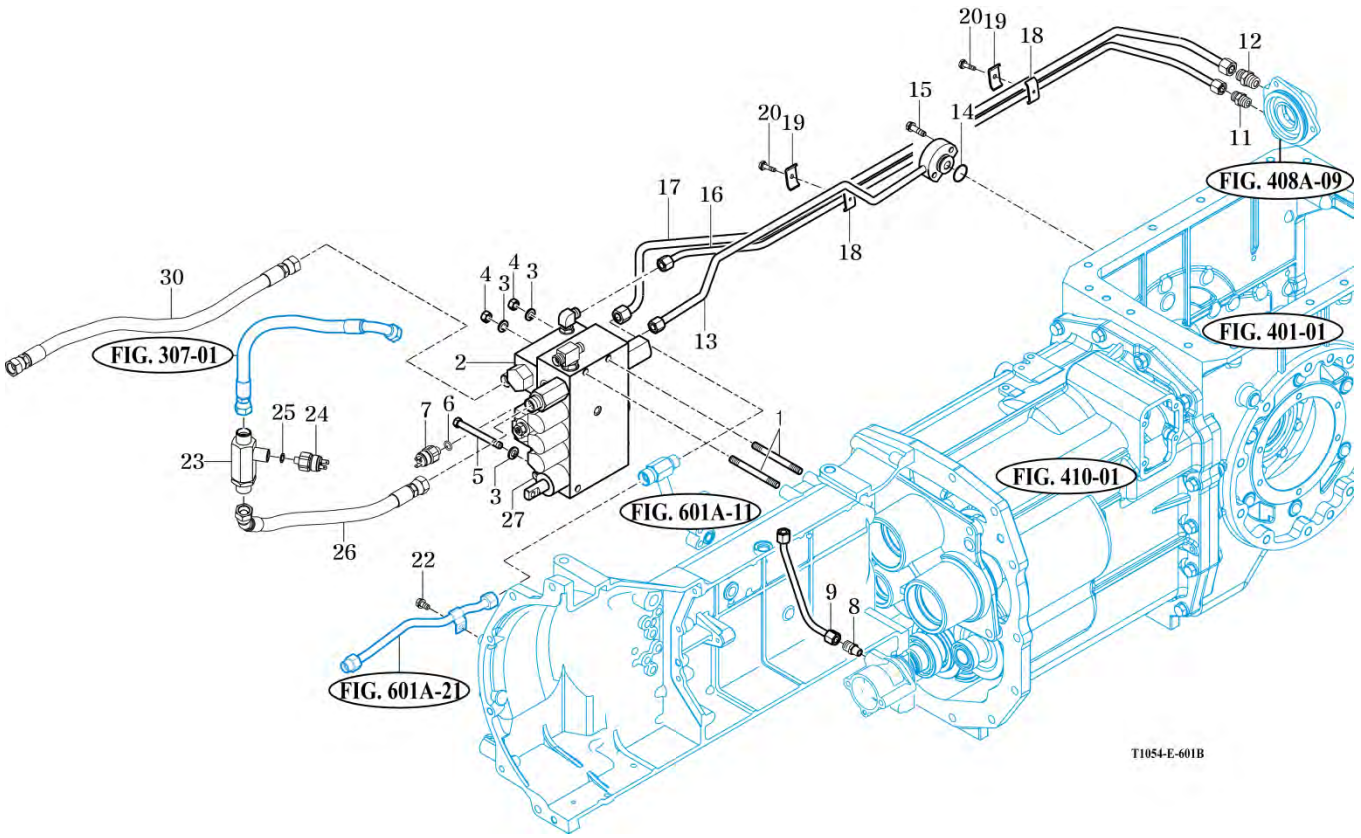

NOTE

FIG 602


T1104SC / T1054SC / T954SC


DRAWBAR ASSY

P1


YEAR

2014

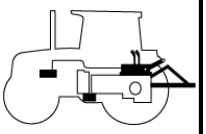

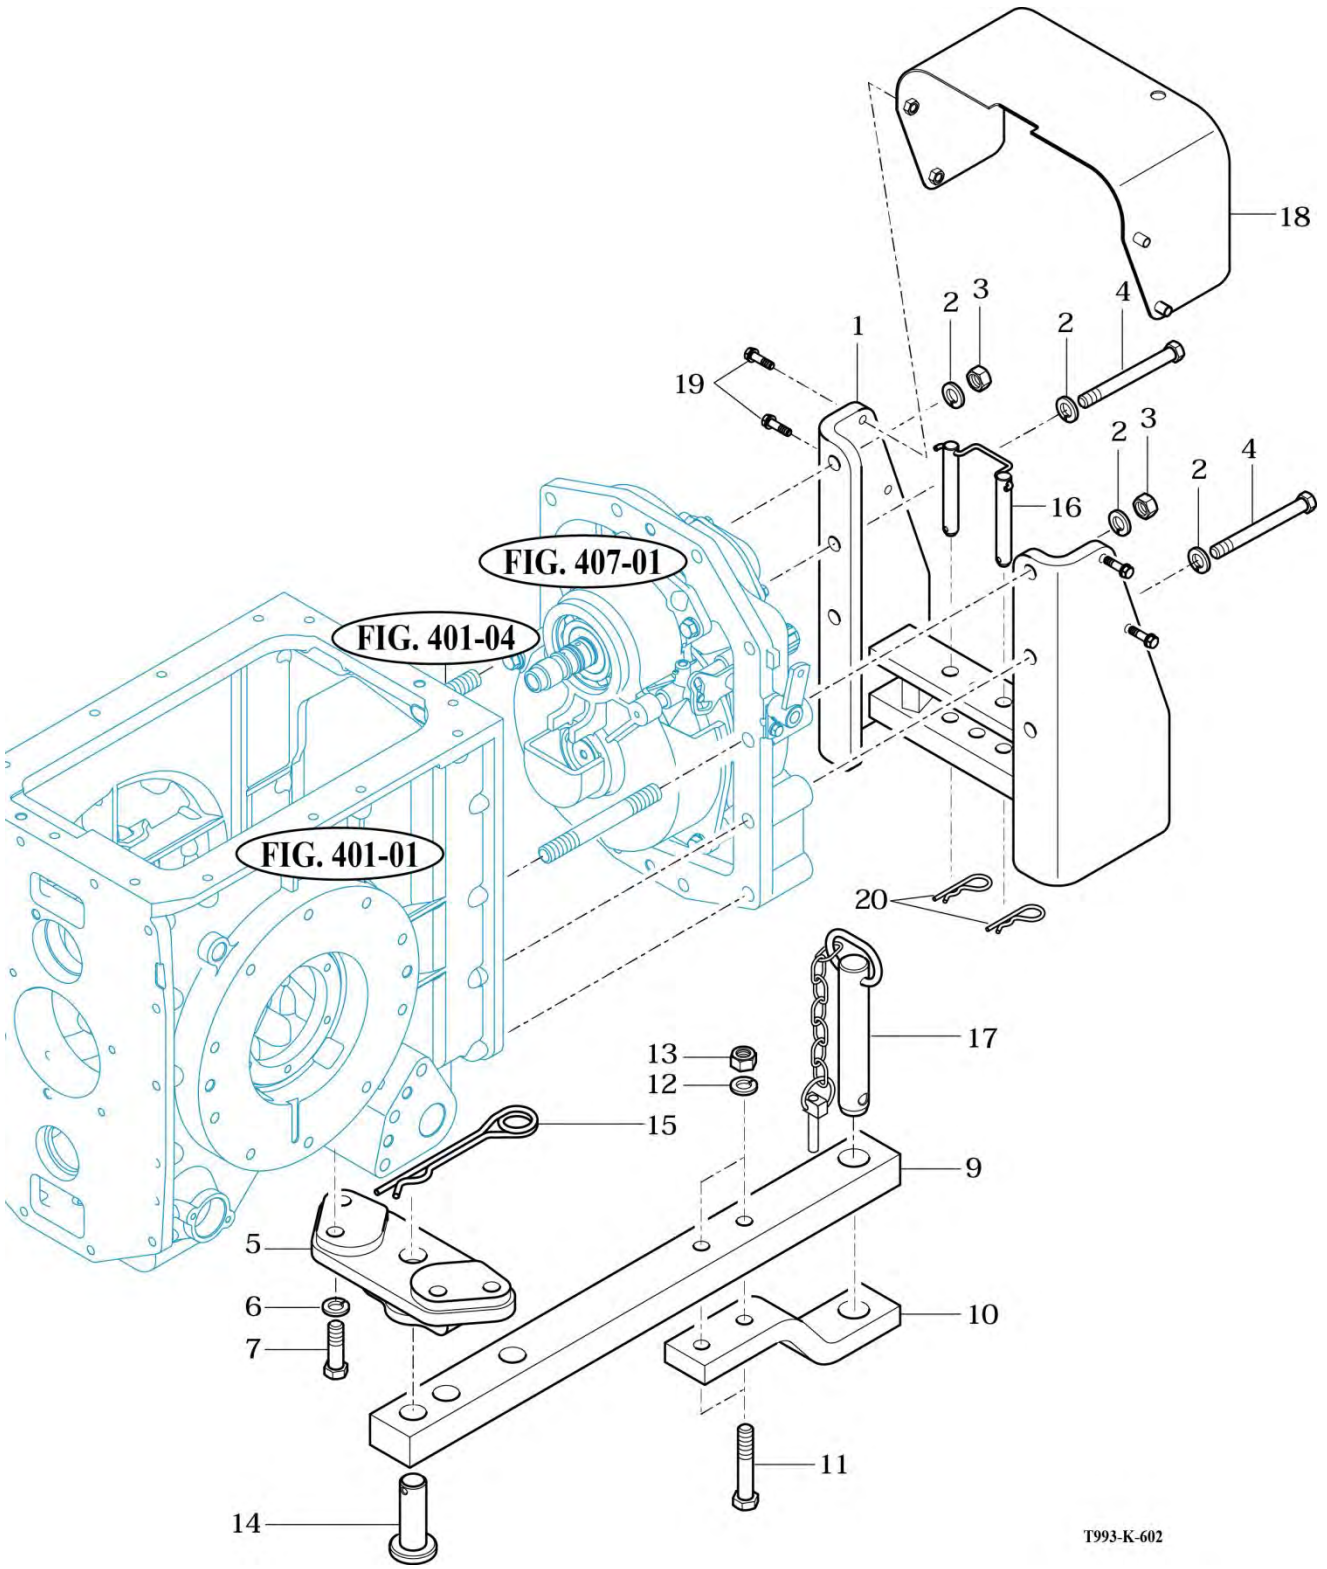

NOTE

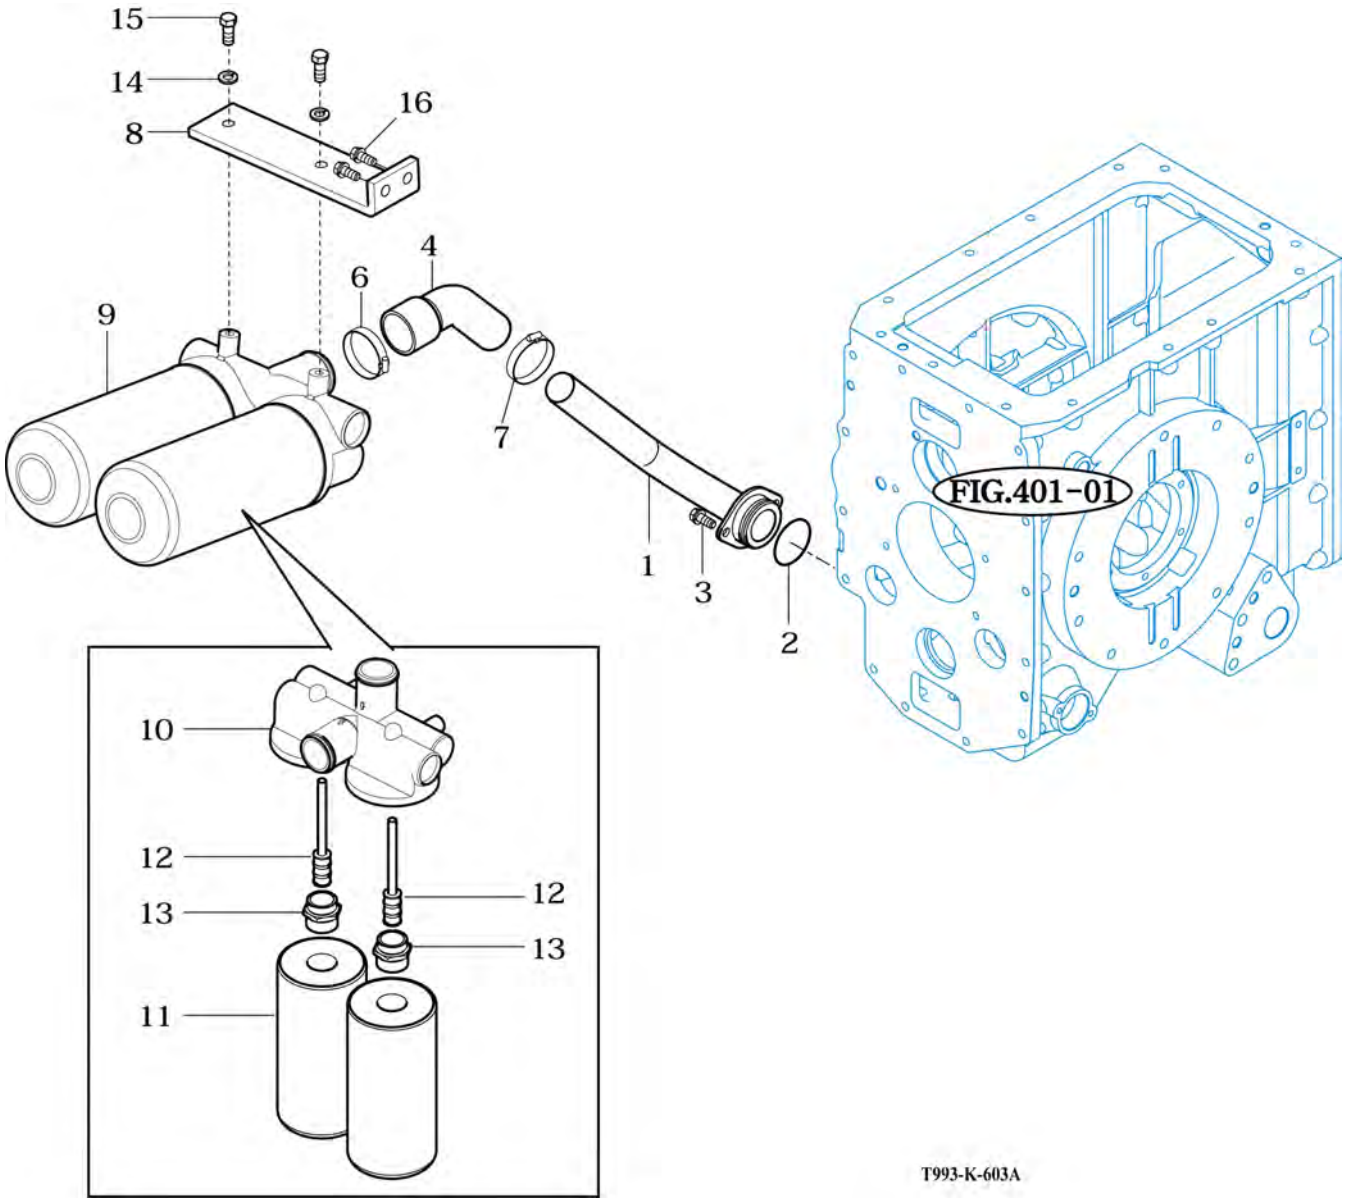

NOTE

FIG 603B


T1104SC / T1054SC / T954SC

GEAR PUMP ASSY

P1

YEAR

2014

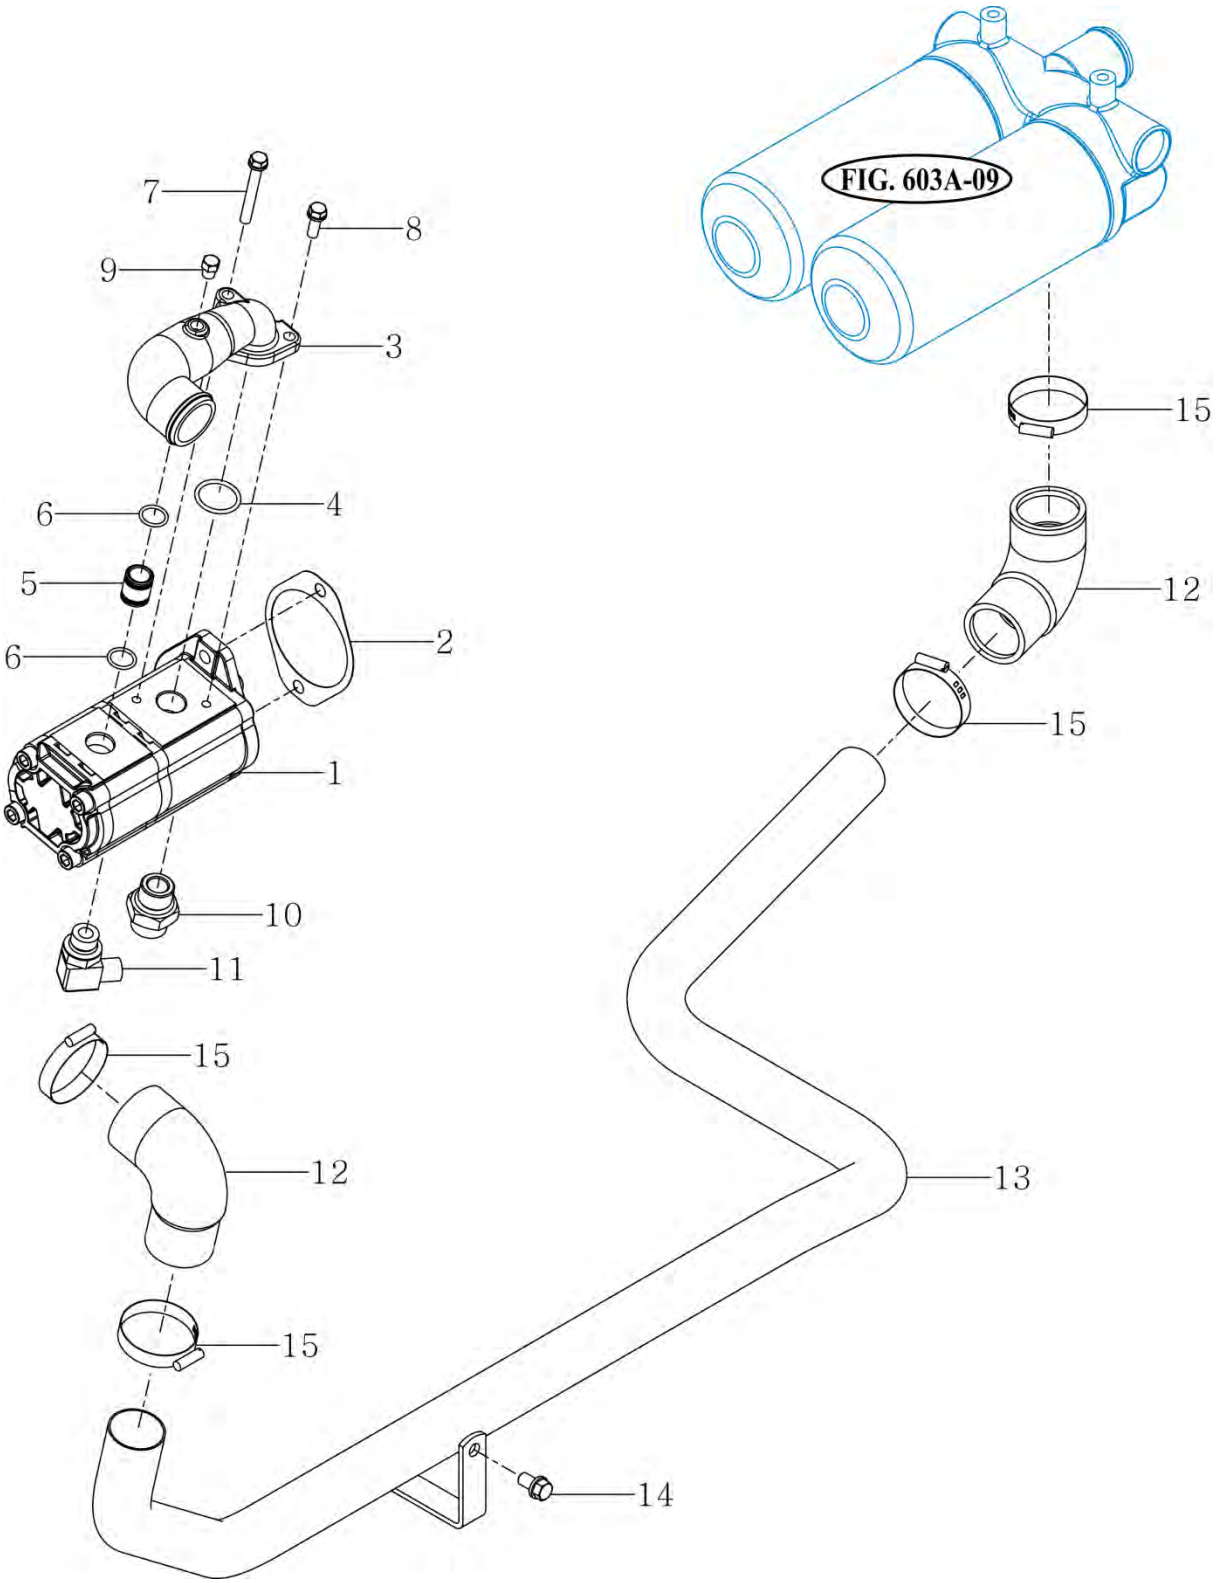

NOTE

FIG 604


T1104SC / T1054SC / T954SC

CASE , CYLINDER

P1

YEAR

2014

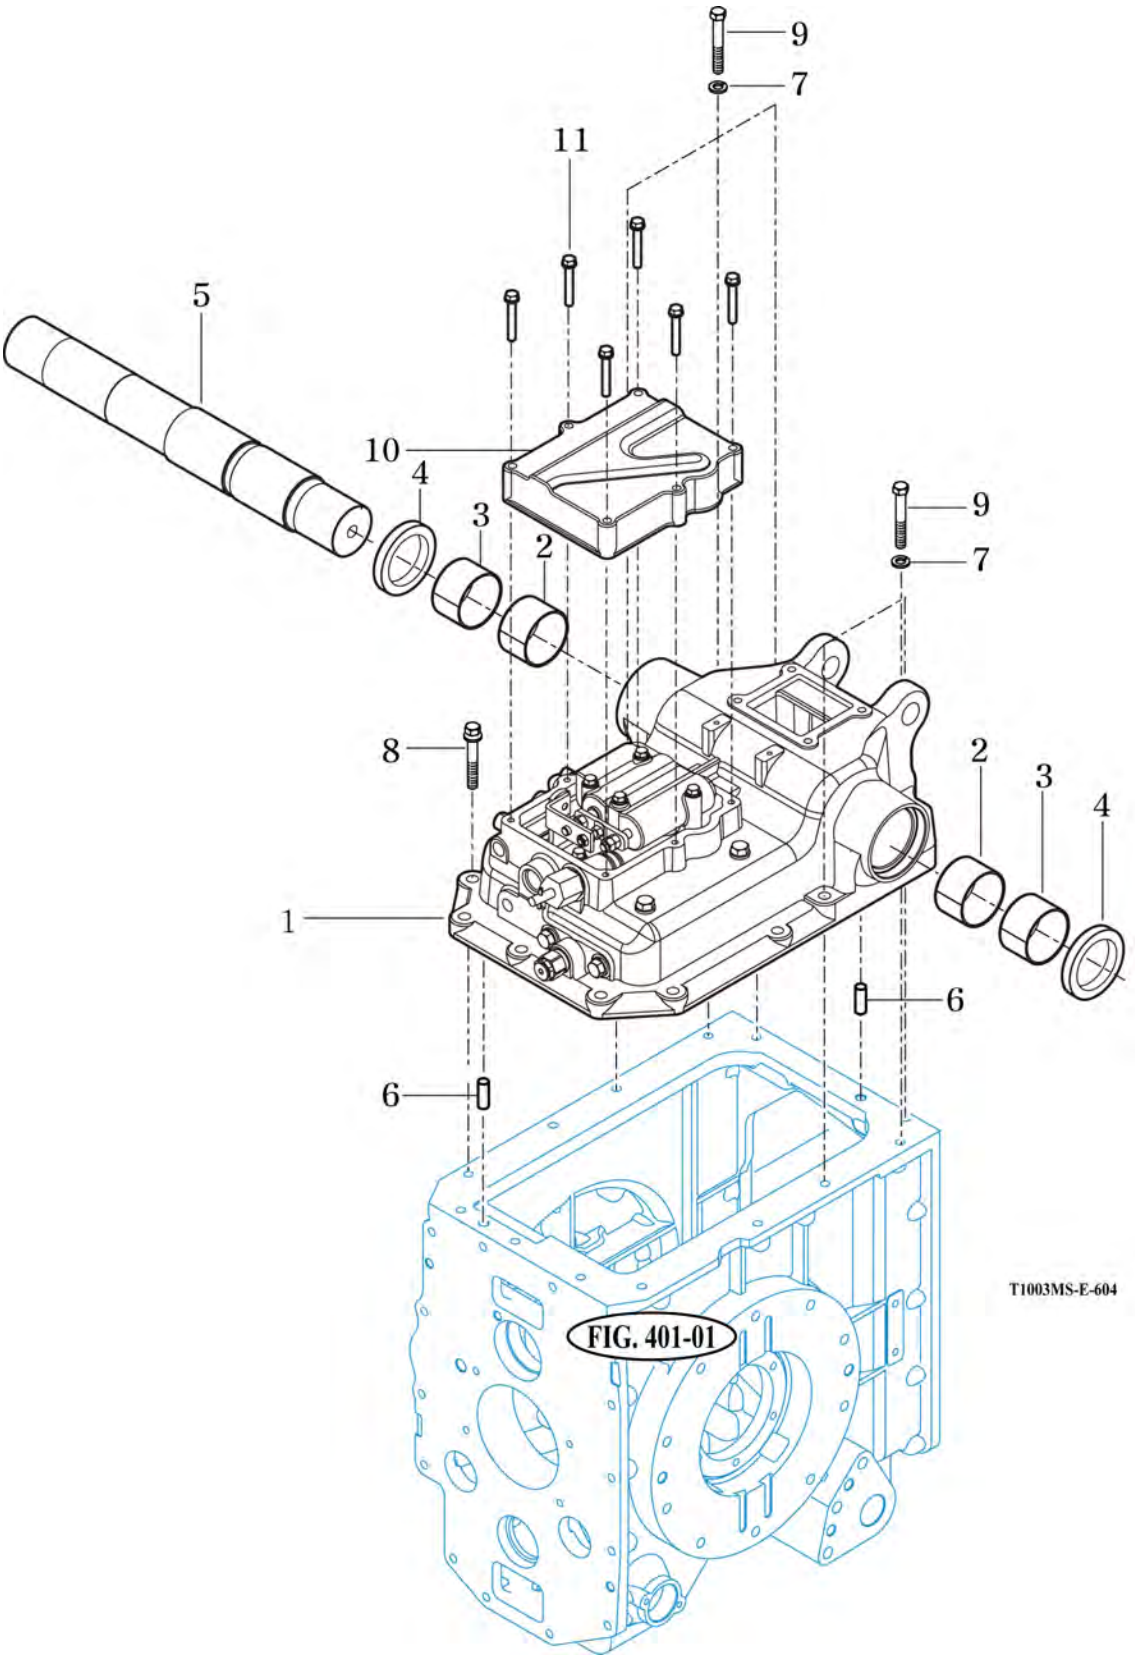

NOTE

FIG 605


T1104SC / T1054SC / T954SC

ARM SUB, LIFT
MAIN CONTROL VALVE SUB

P1

YEAR

2014

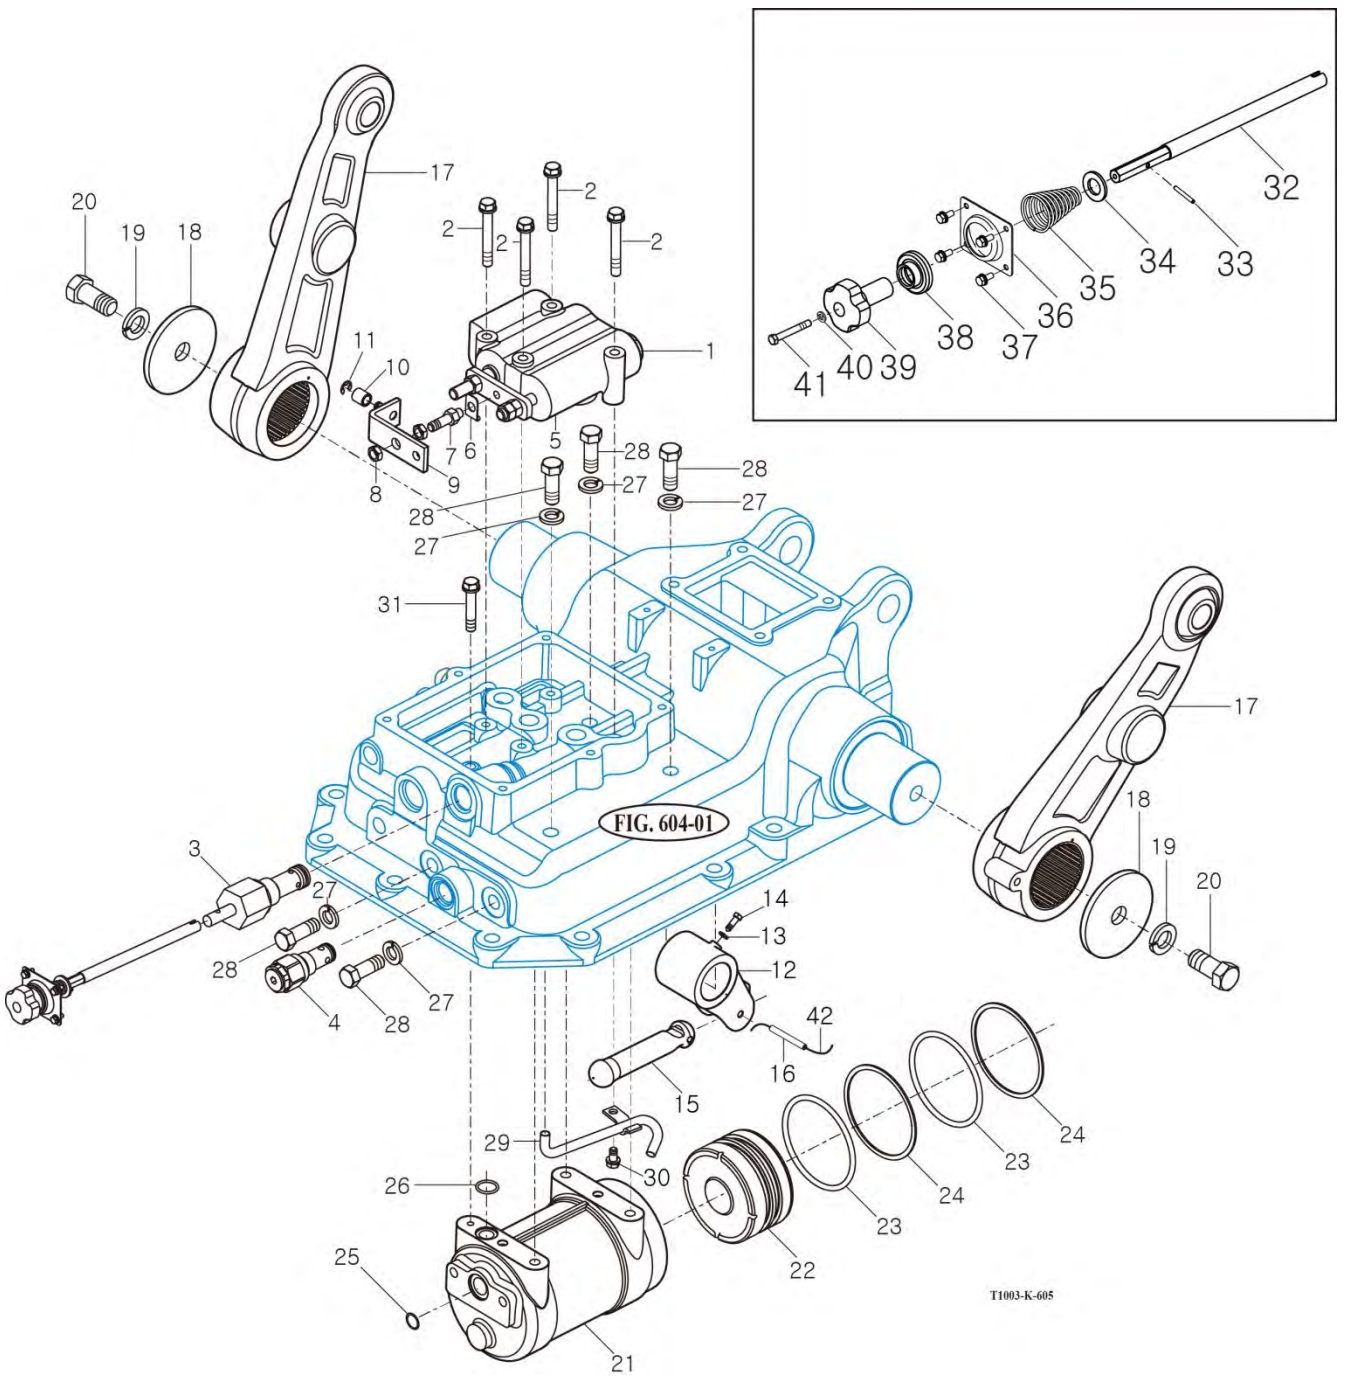

NOTE

FIG 606


T1104SC / T1054SC / T954SC

POSITON & DRAFT LINK

P1

YEAR

2014

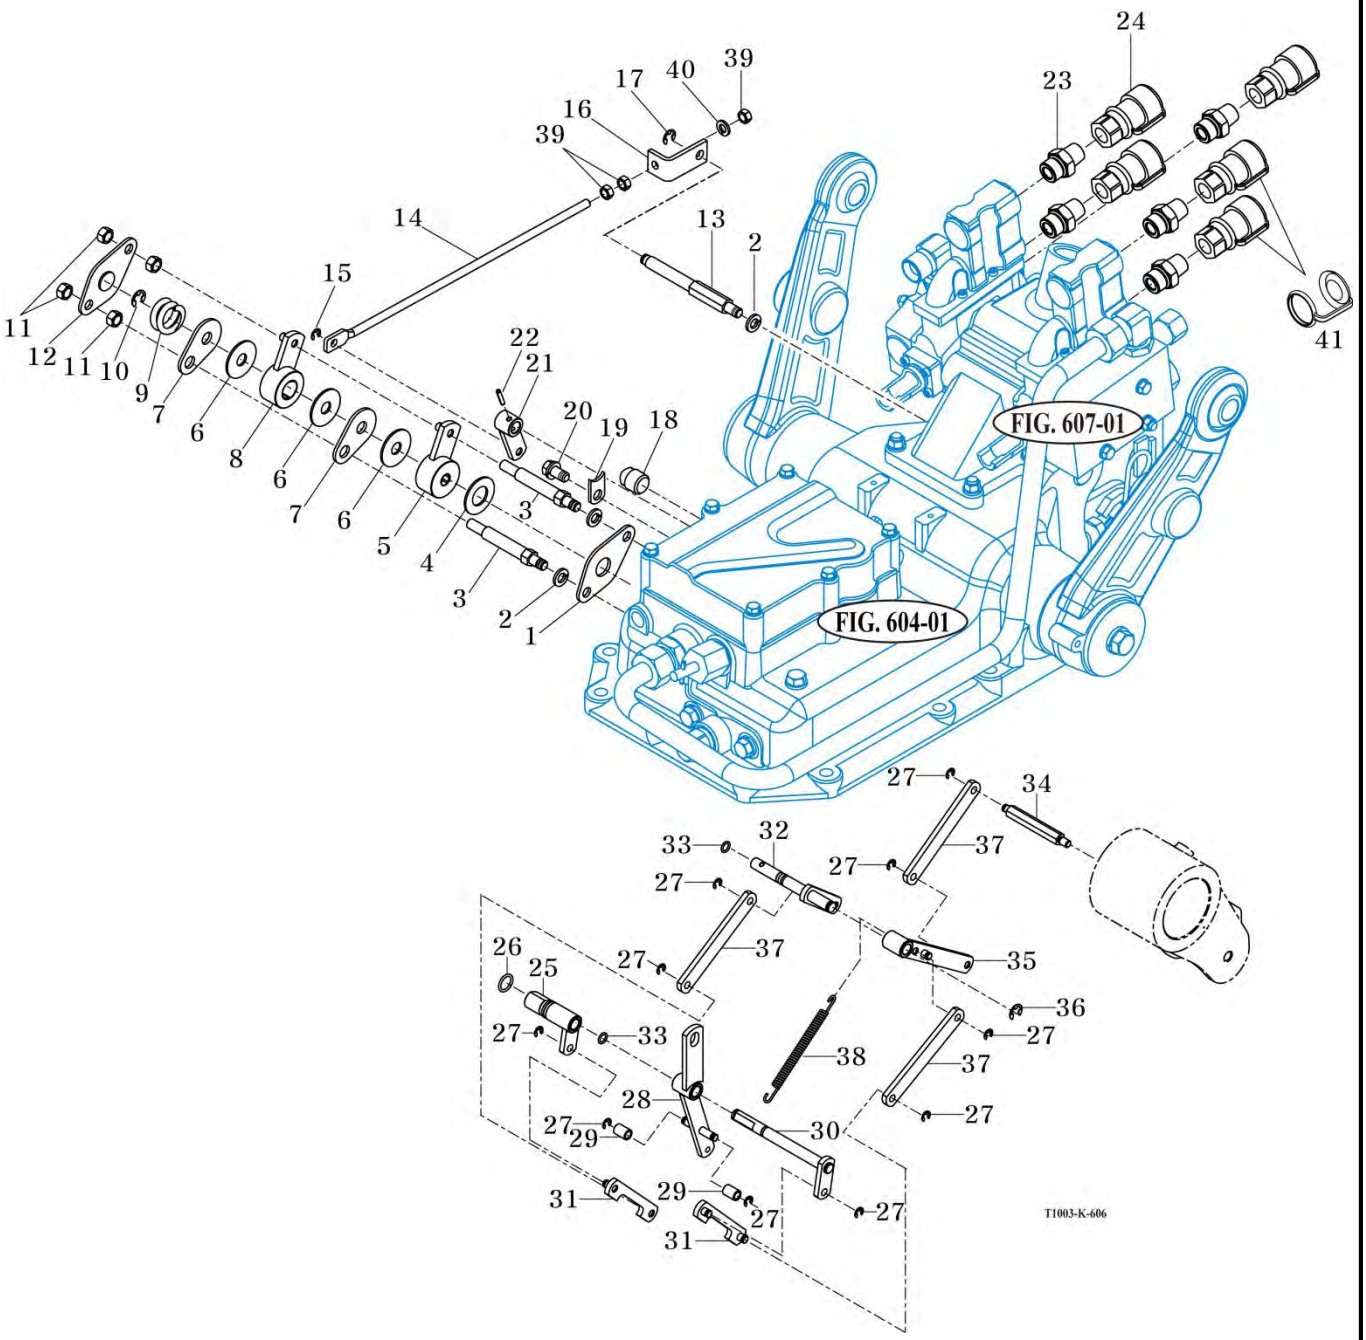

NOTE

FIG 607A


T1104SC / T1054SC / T954SC

AUX VALVE & FILTER SUB


P1


YEAR

2014

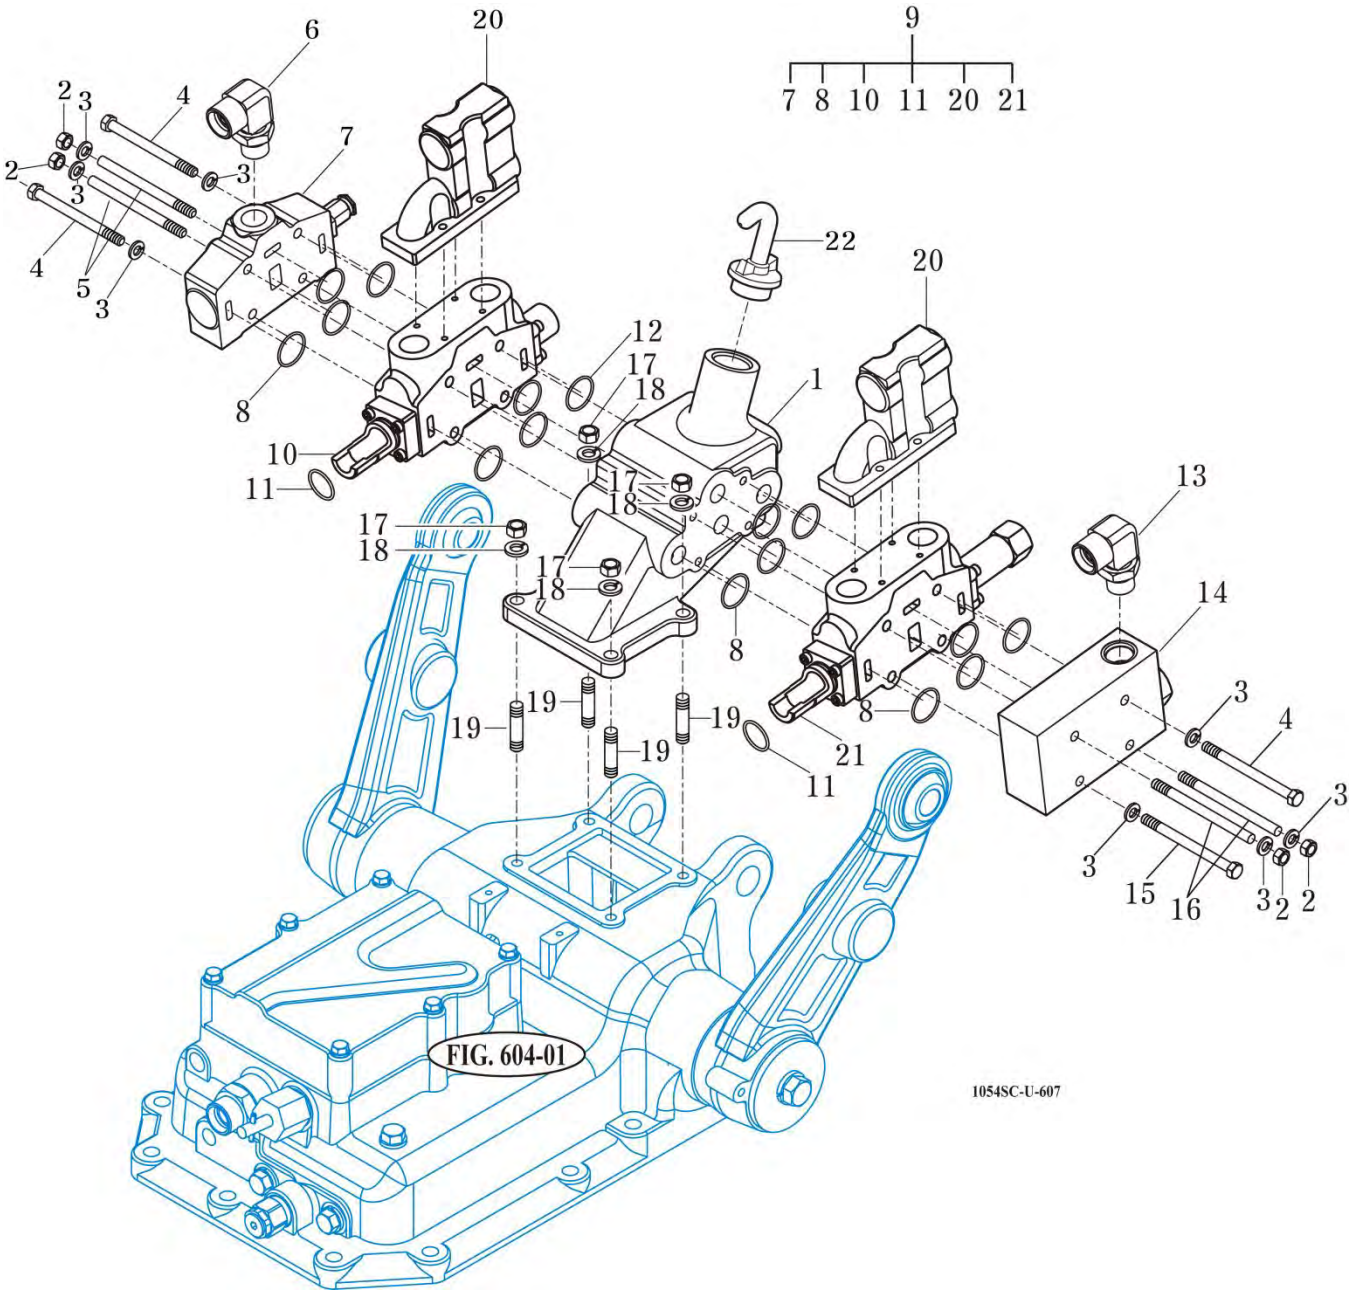


NOTE

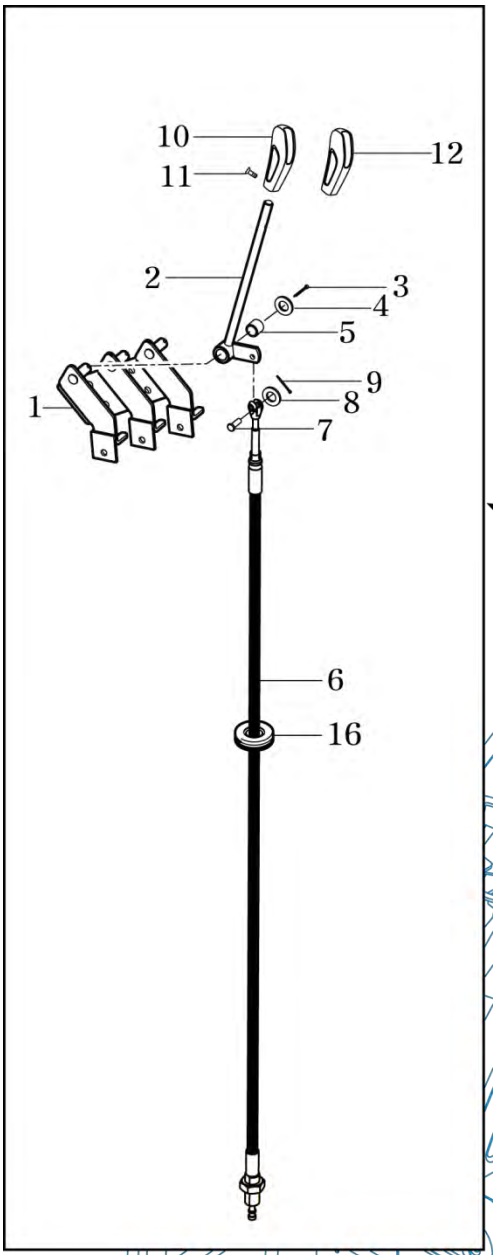
10
11
12
2
3
4
5
1
9
8
7
6
16

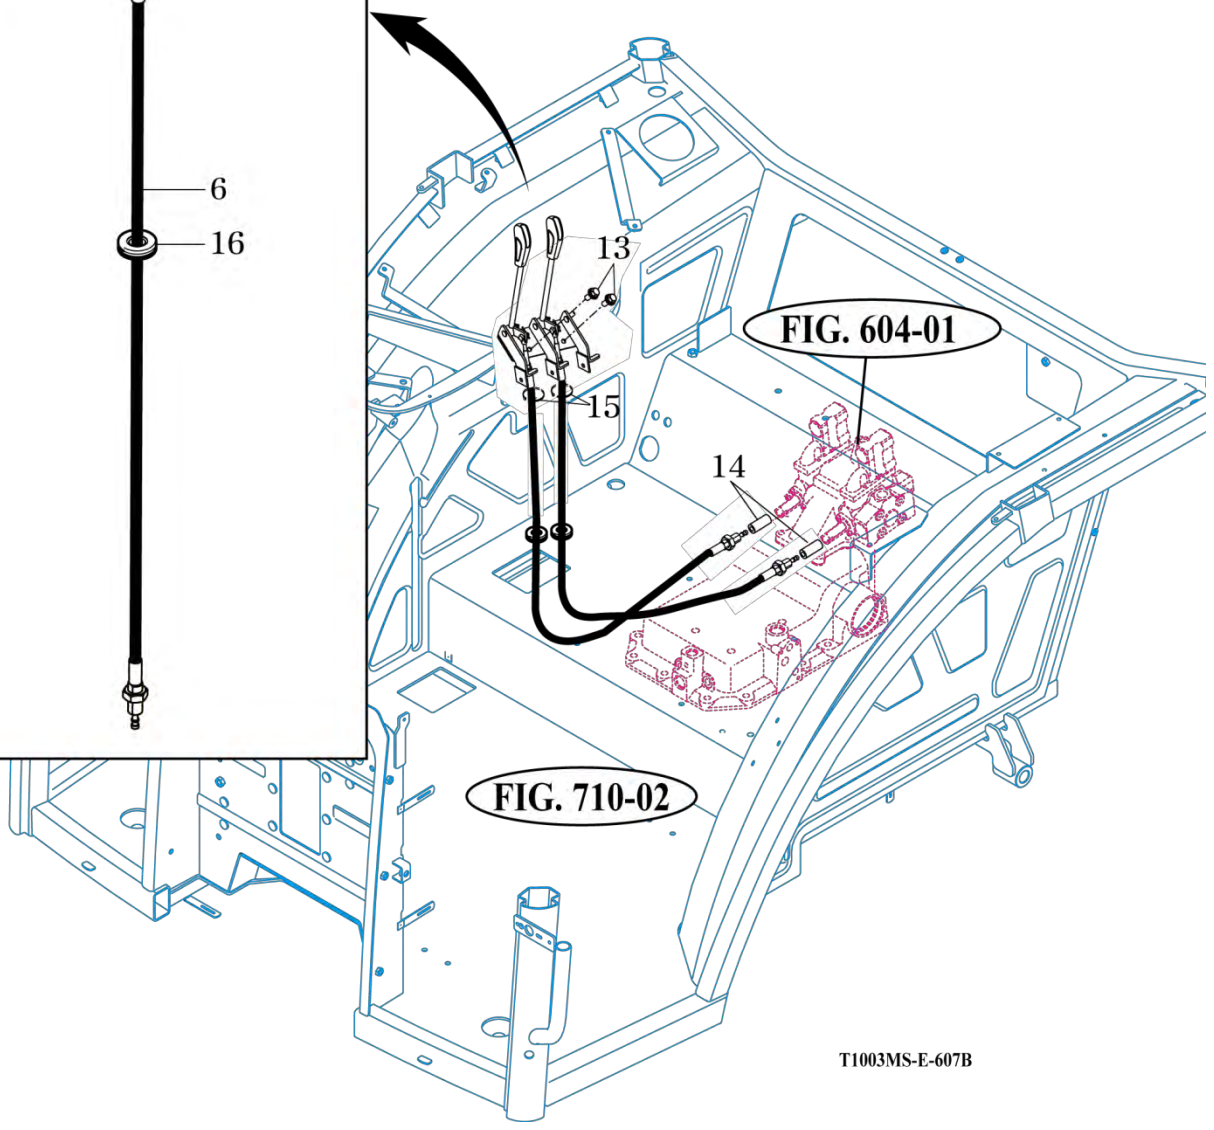
13
FIG. 604-01
15
14
FIG. 710-02
T1003MS-E-607B

NOTE

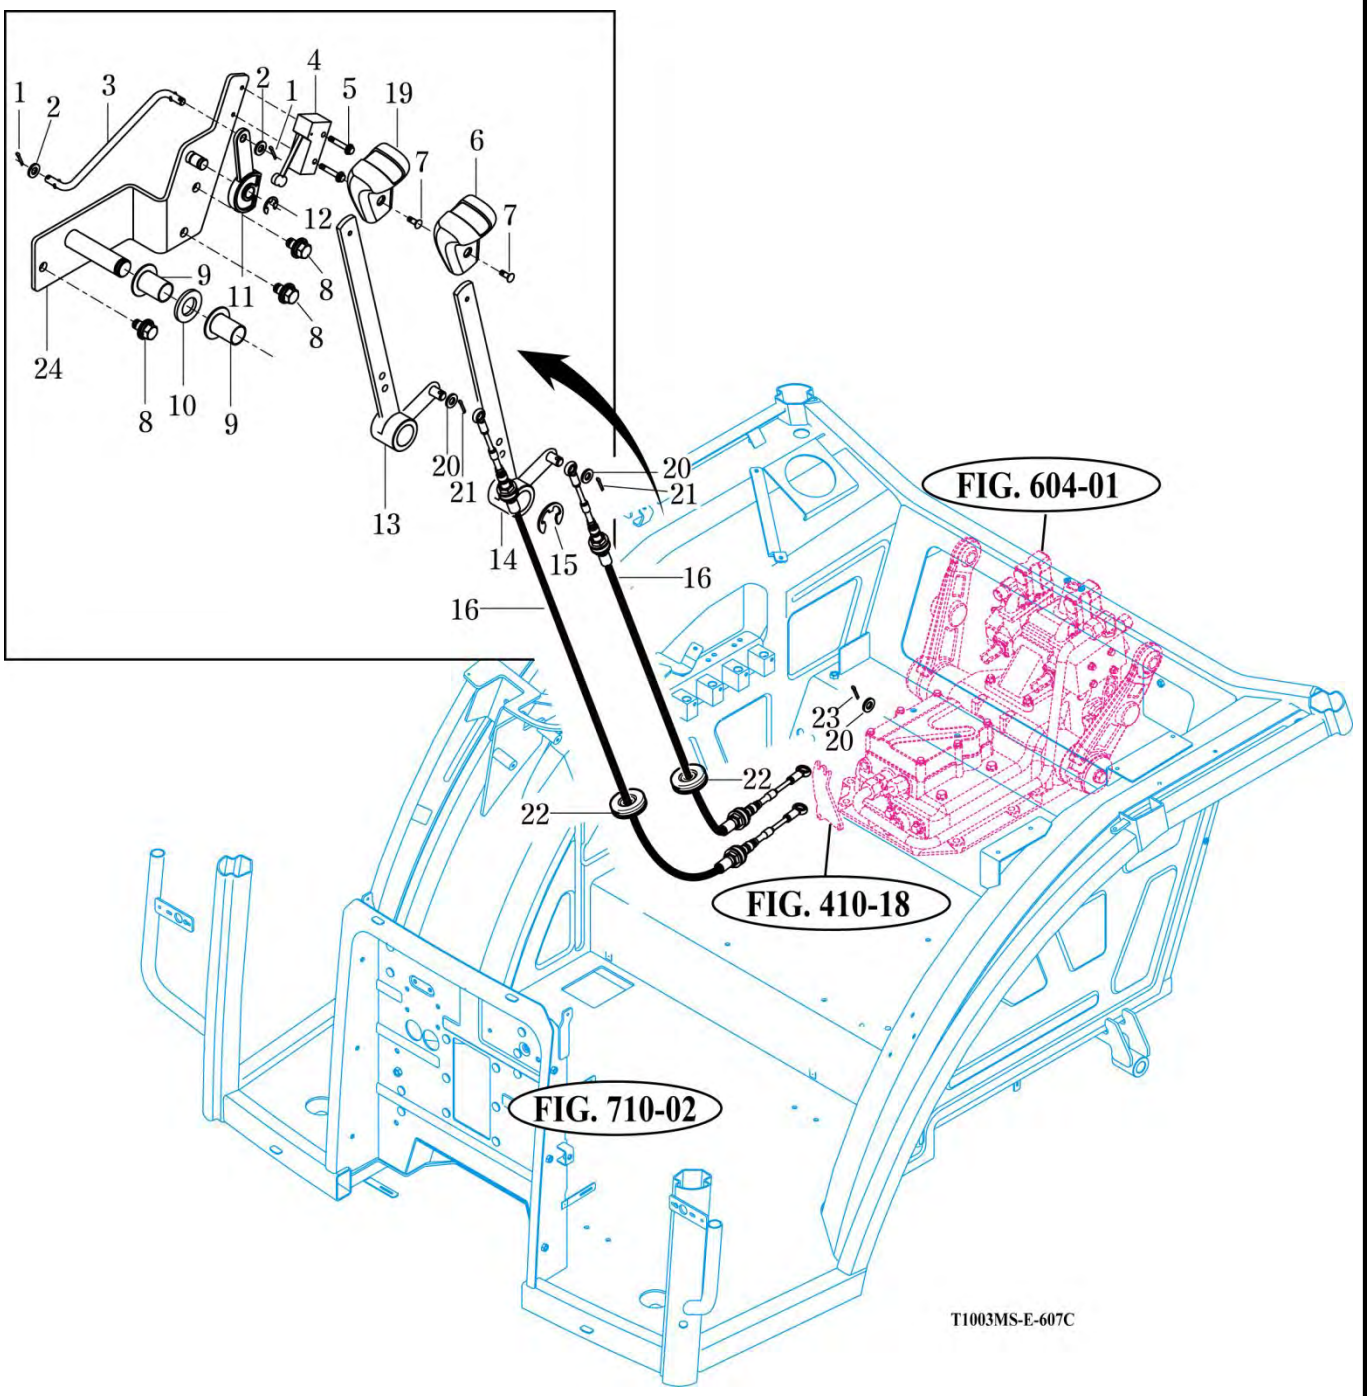
1
2
3
4
2
1
5
19
6
7
7
12
8
9
11
8
8
24
10
9
8
20
21
13
14
15
16
16
20
21
FIG. 604-01
23
20
22
22
FIG. 410-18
FIG. 710-02
T1003MS-E-607C

NOTE

FIG 608A


T1104SC / T1054SC / T954SC

HITCH & 3-POINT LINK

P1

YEAR

2014

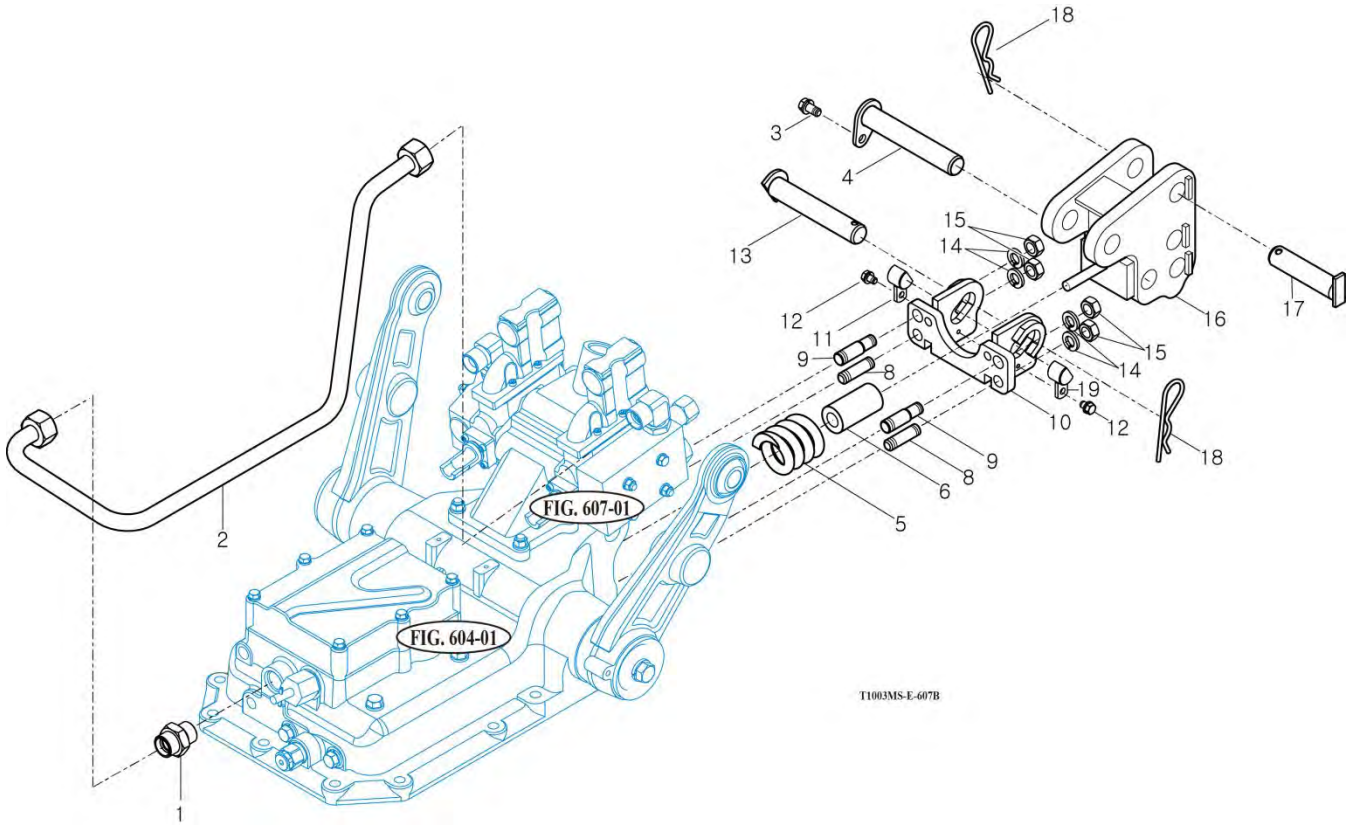

NOTE


FIG 608B


T1104SC / T1054SC / T954SC

HITCH & 3-POINT LINK

P1

YEAR 2014

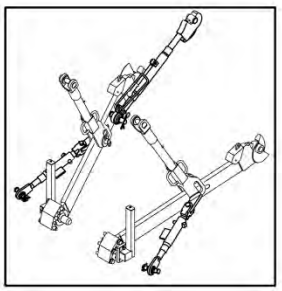

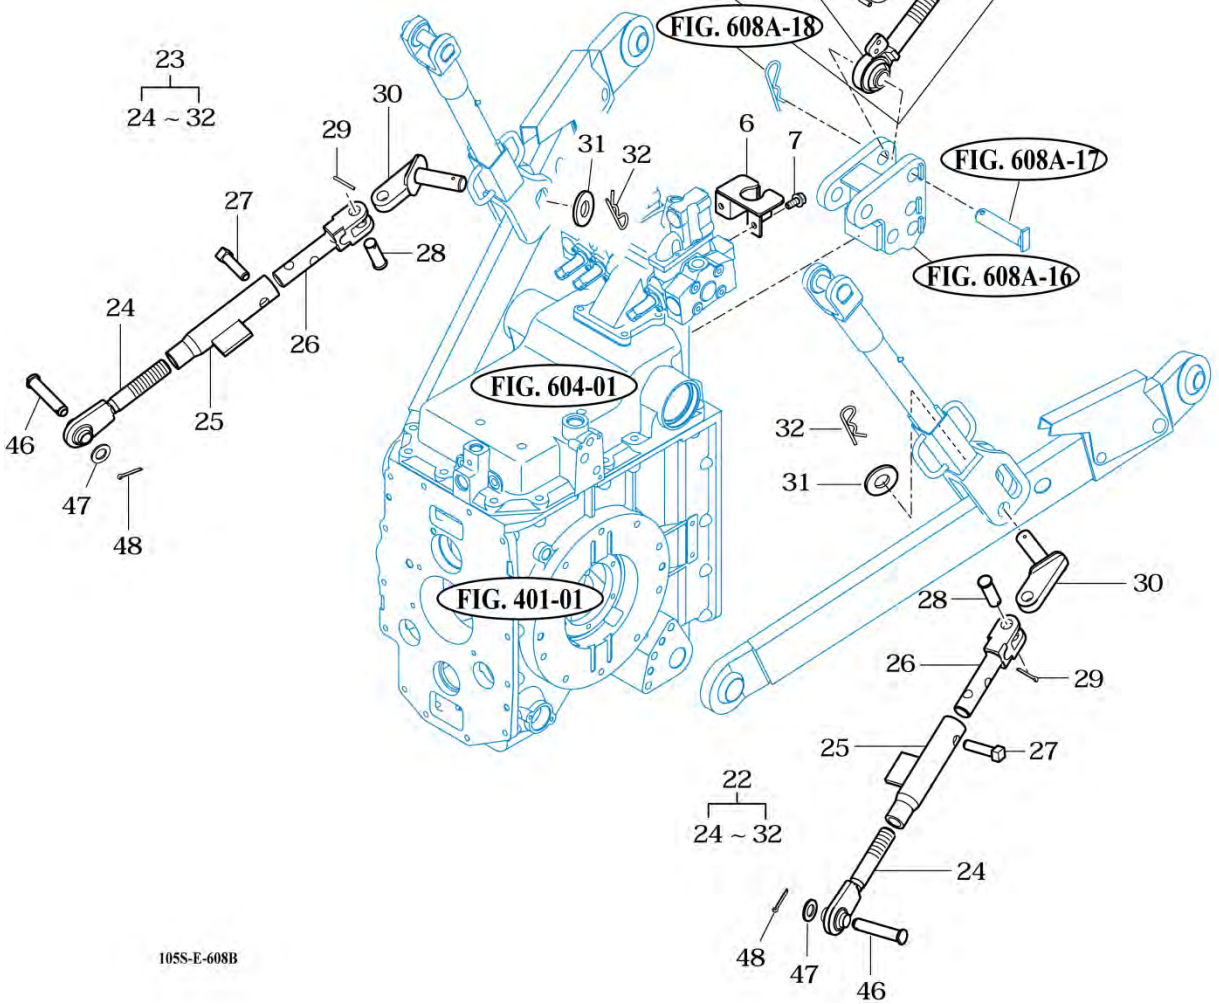

NOTE

FIG 608C


T1104SC / T1054SC / T954SC

LOWER LINK & LIFT ROD

P1

YEAR

2014

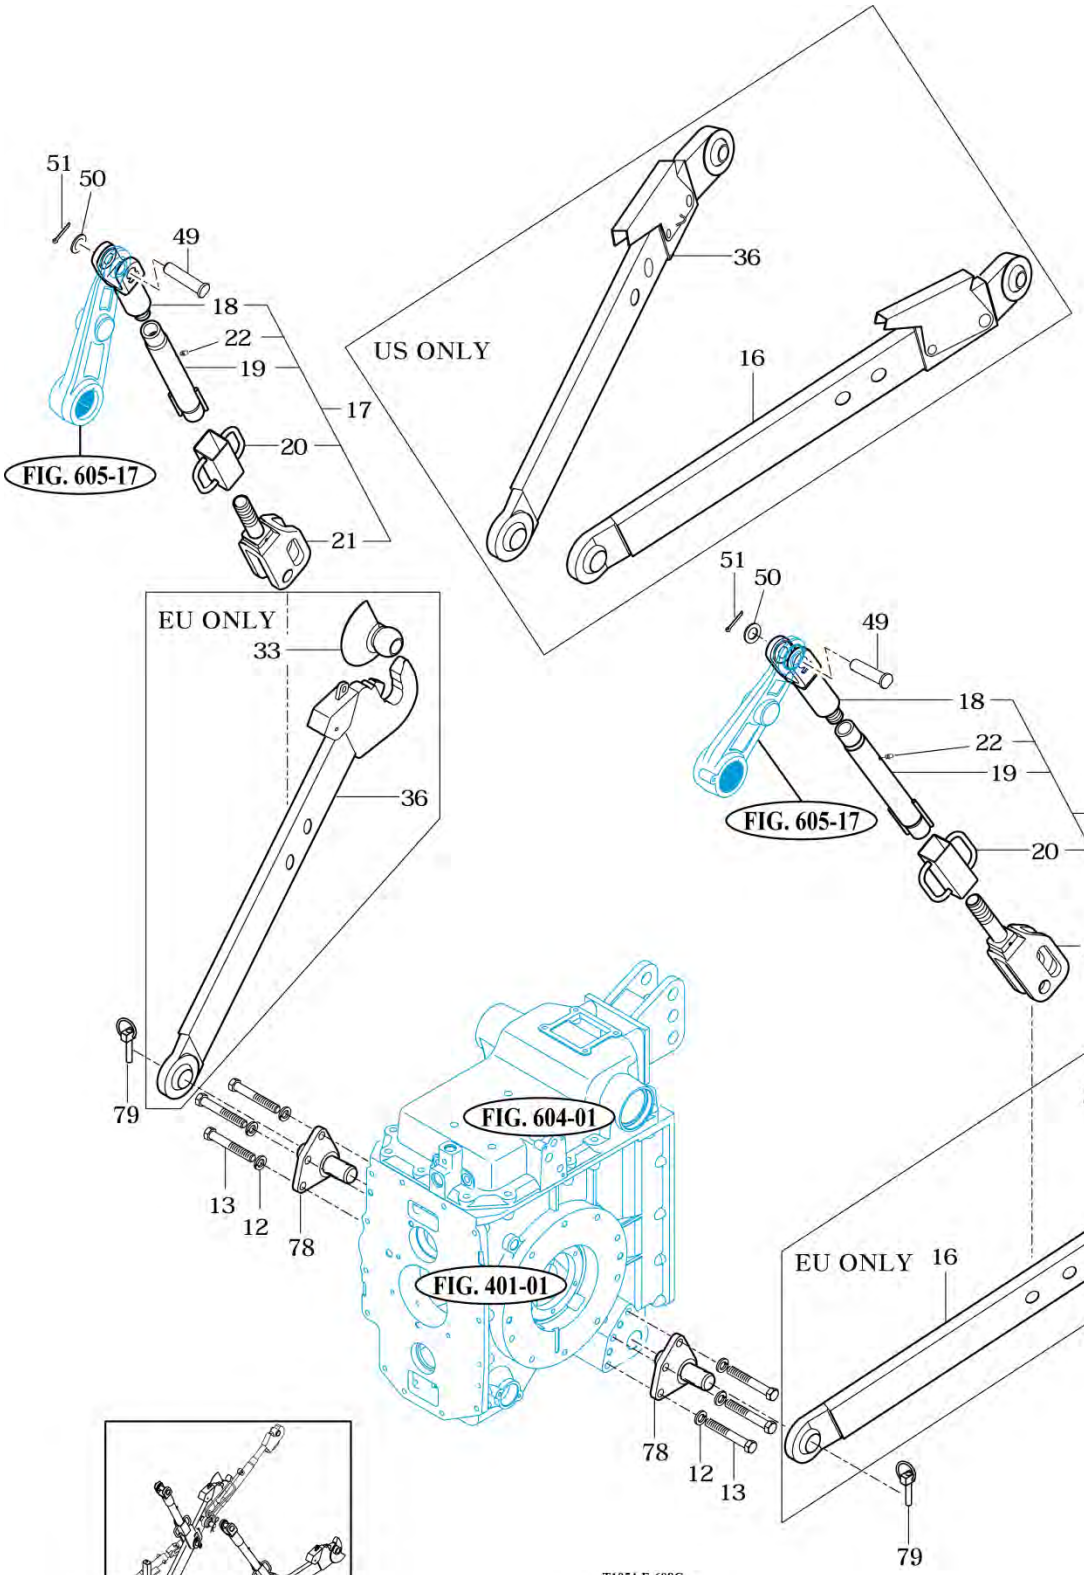

NOTE

FIG 609


T1104SC / T1054SC / T954SC

HYDRAULIC PIPE & HOSES

P1

YEAR

2014

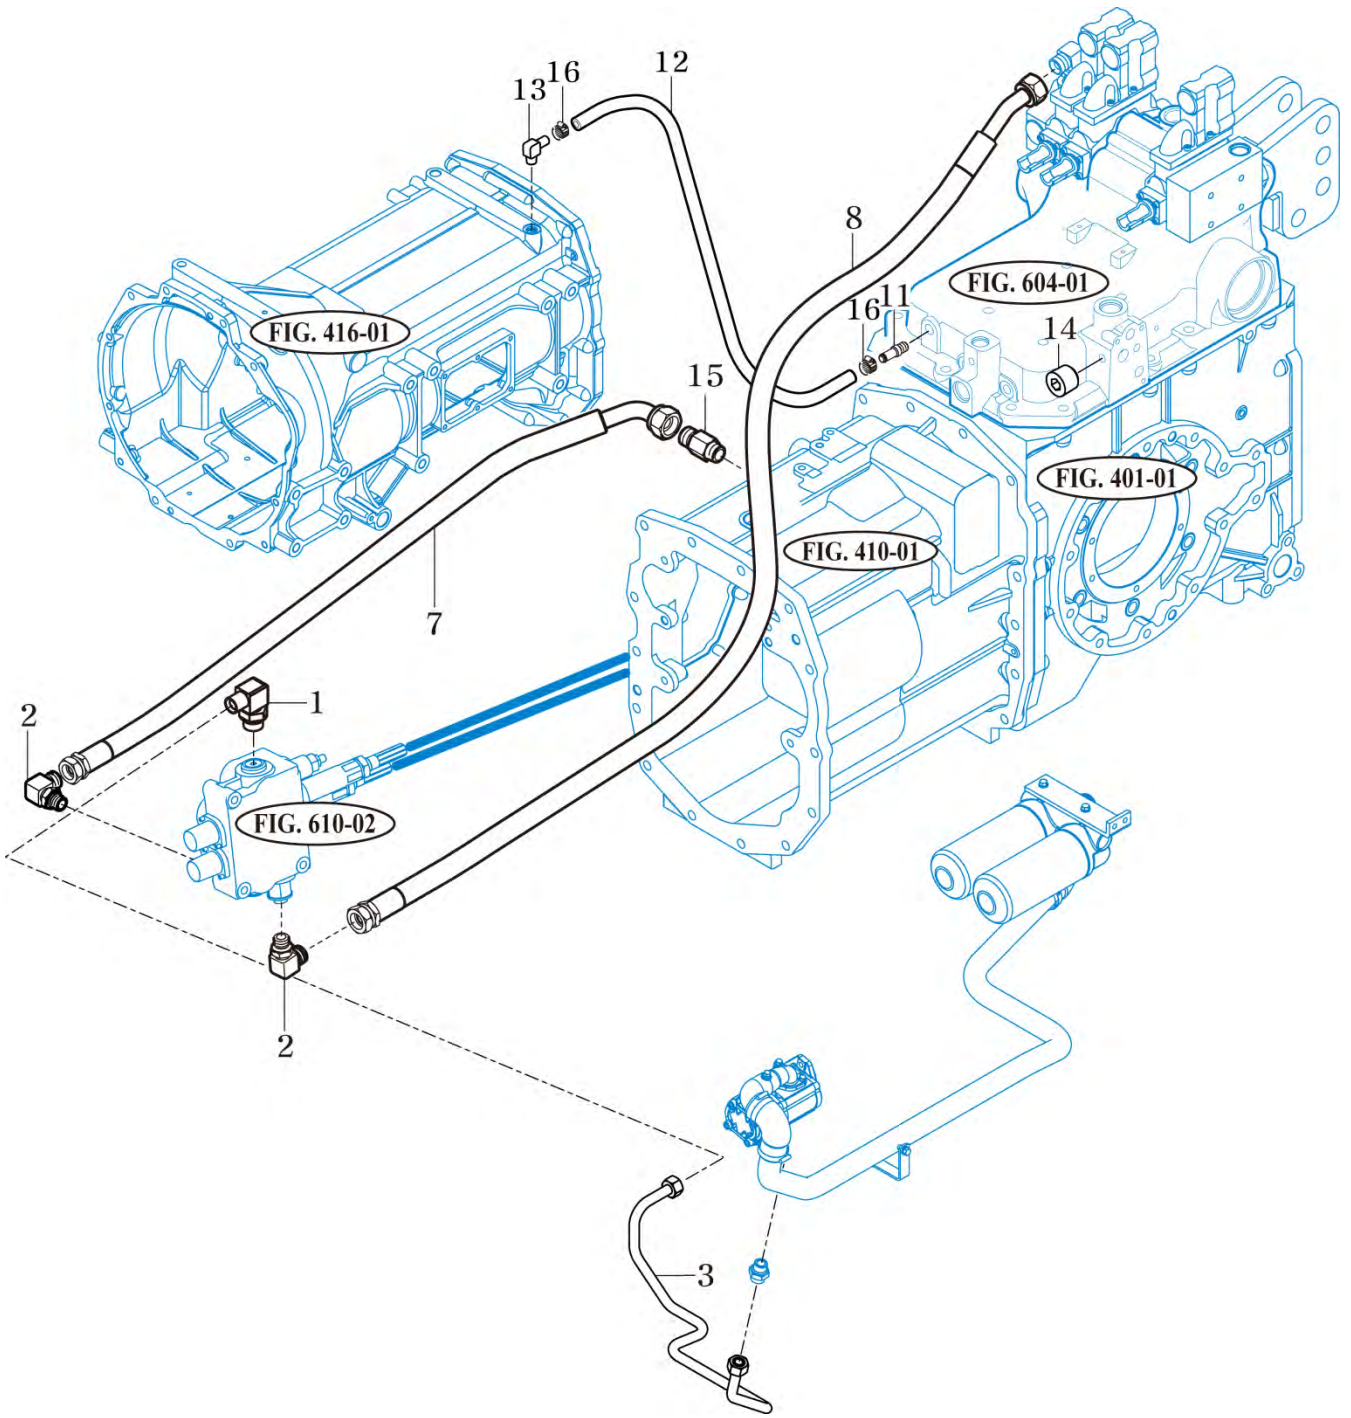

NOTE

https://truckmanualshub.com/

FIG 609


T1104SC / T1054SC / T954SC

HYDRAULIC PIPE & HOSES (T1104SCUS ONLY)

P1

YEAR

2014

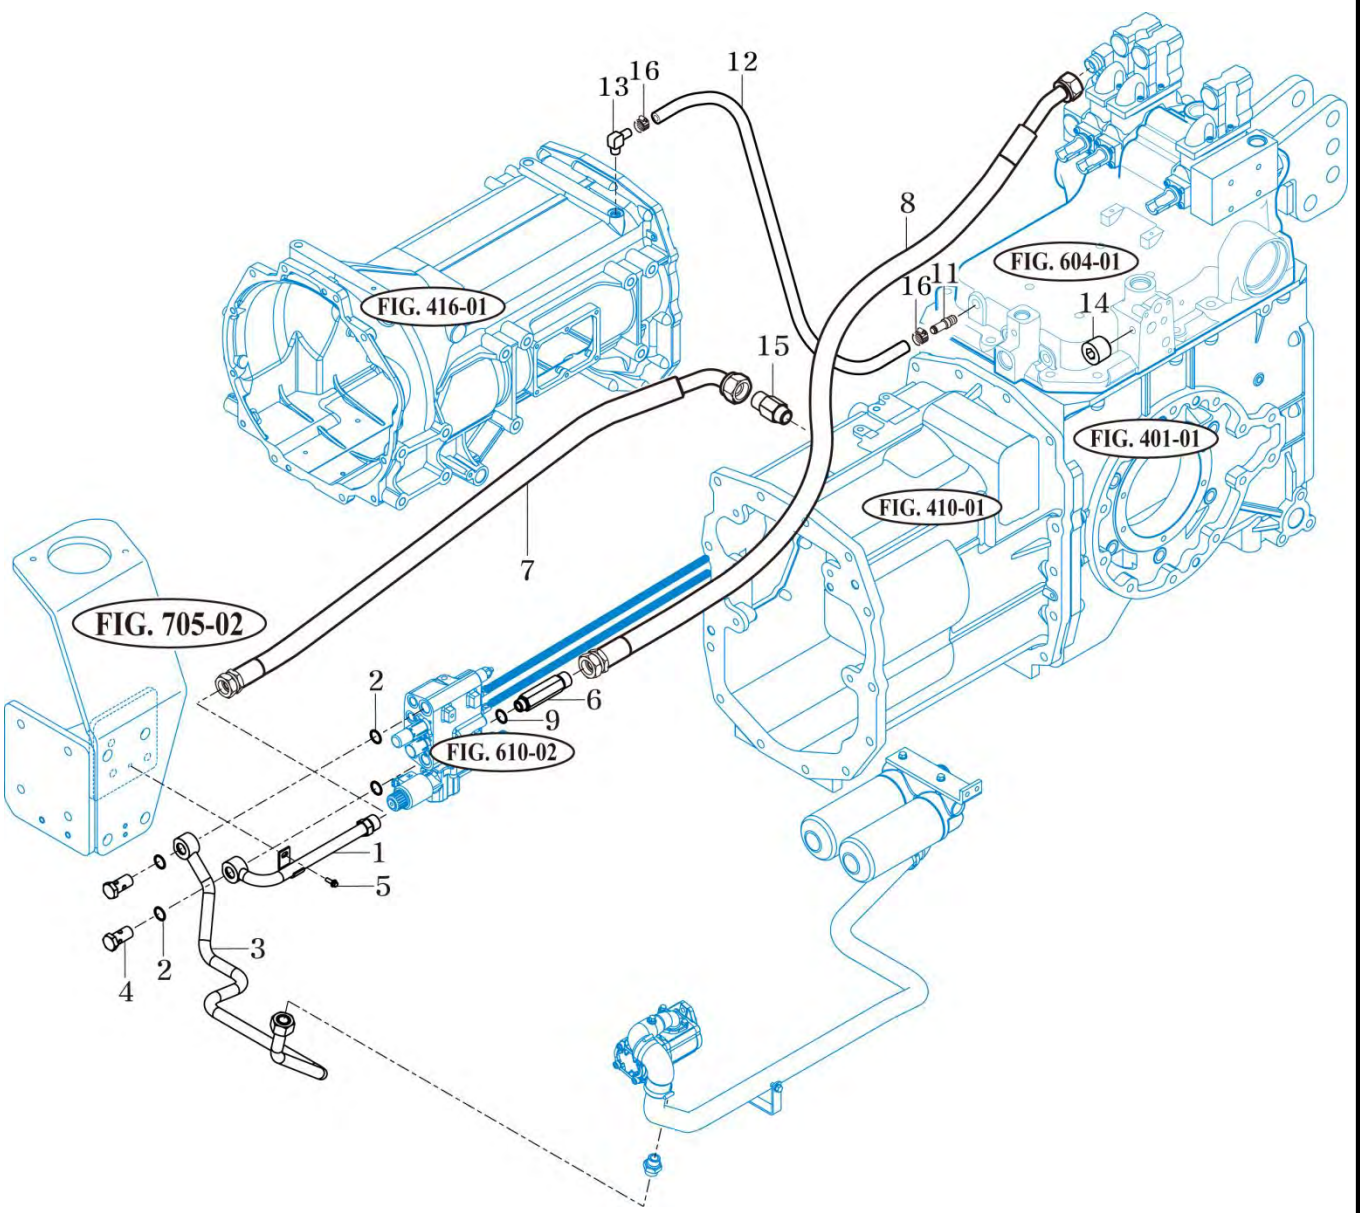

NOTE

FIG 610


T1104SC / T1054SC / T954SC


JOYSTICK

P1


YEAR

2014

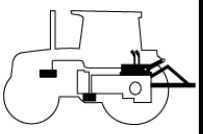

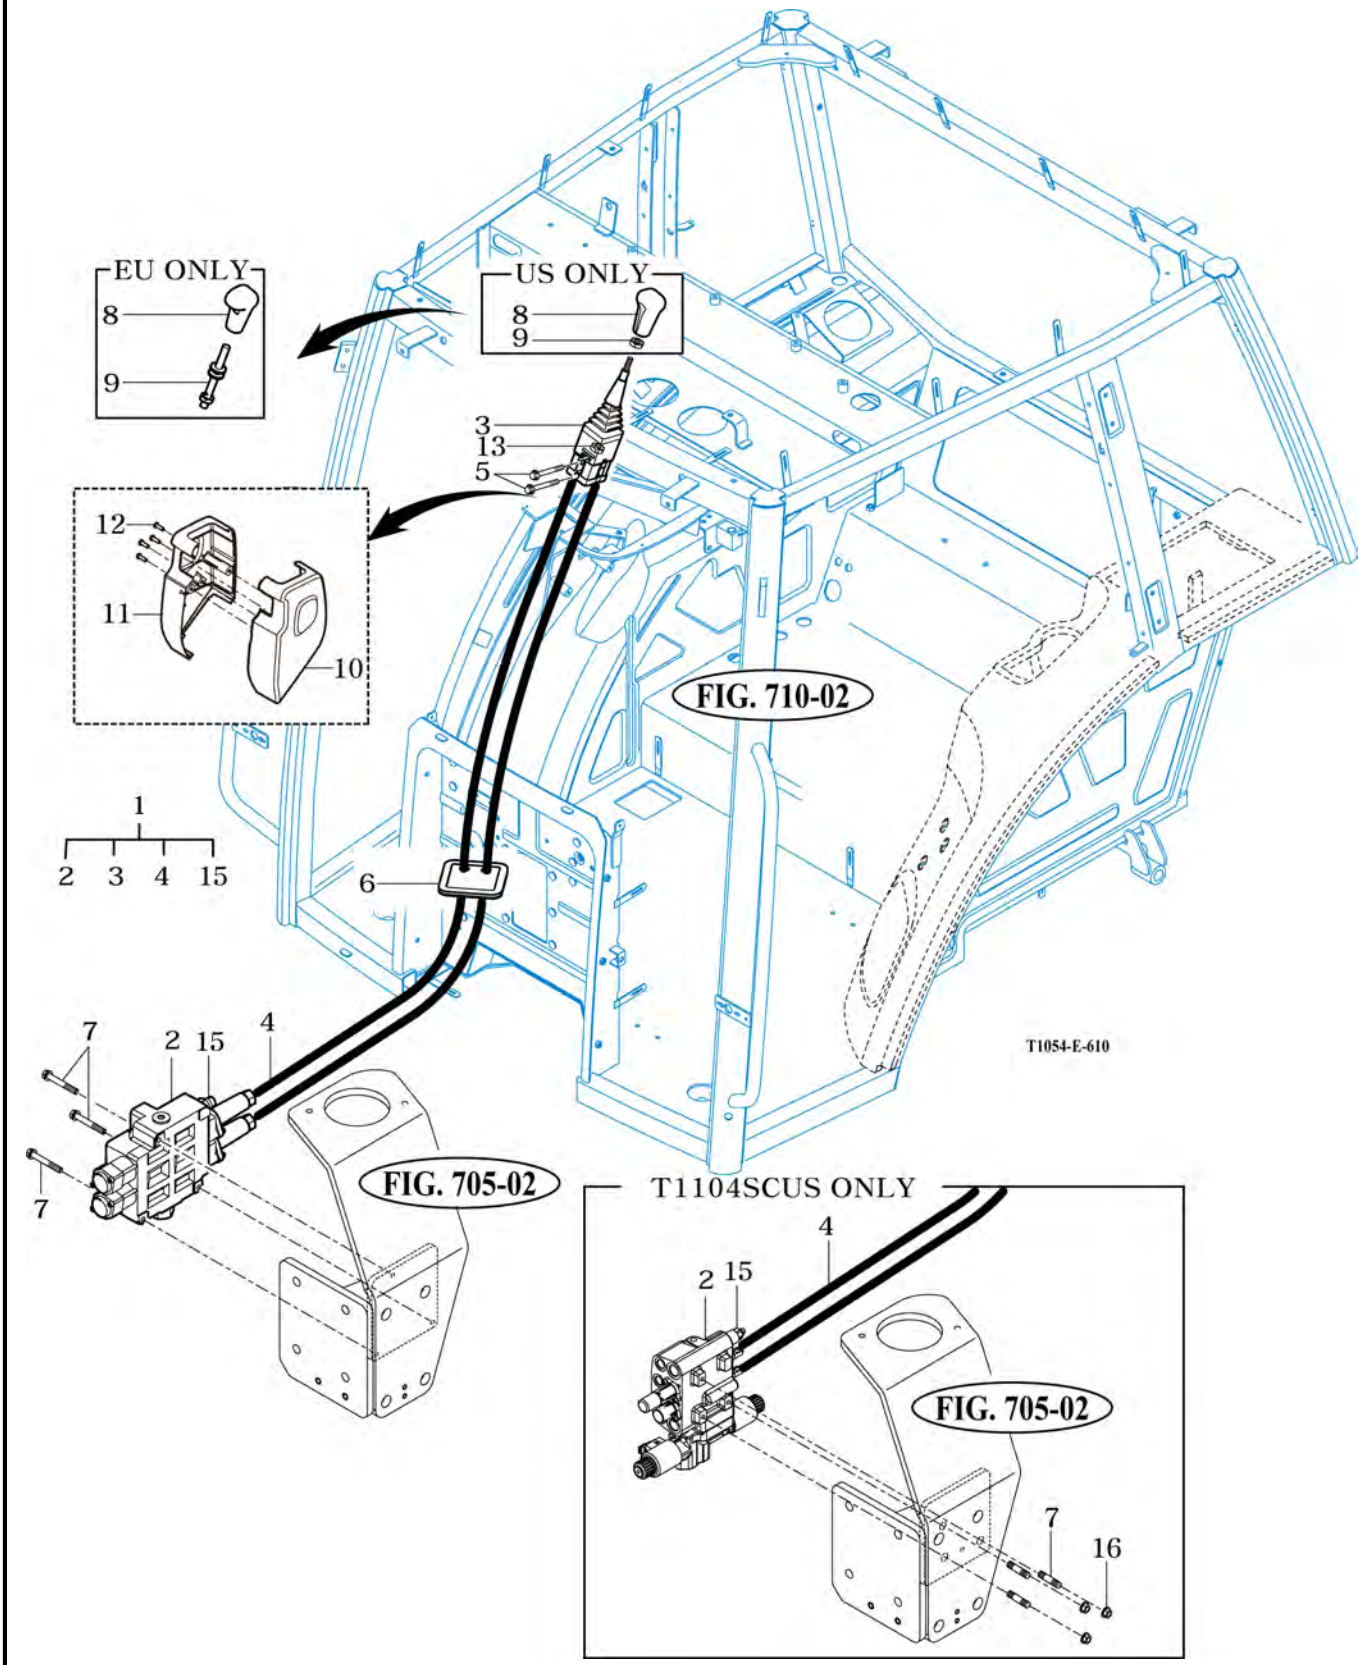

NOTE

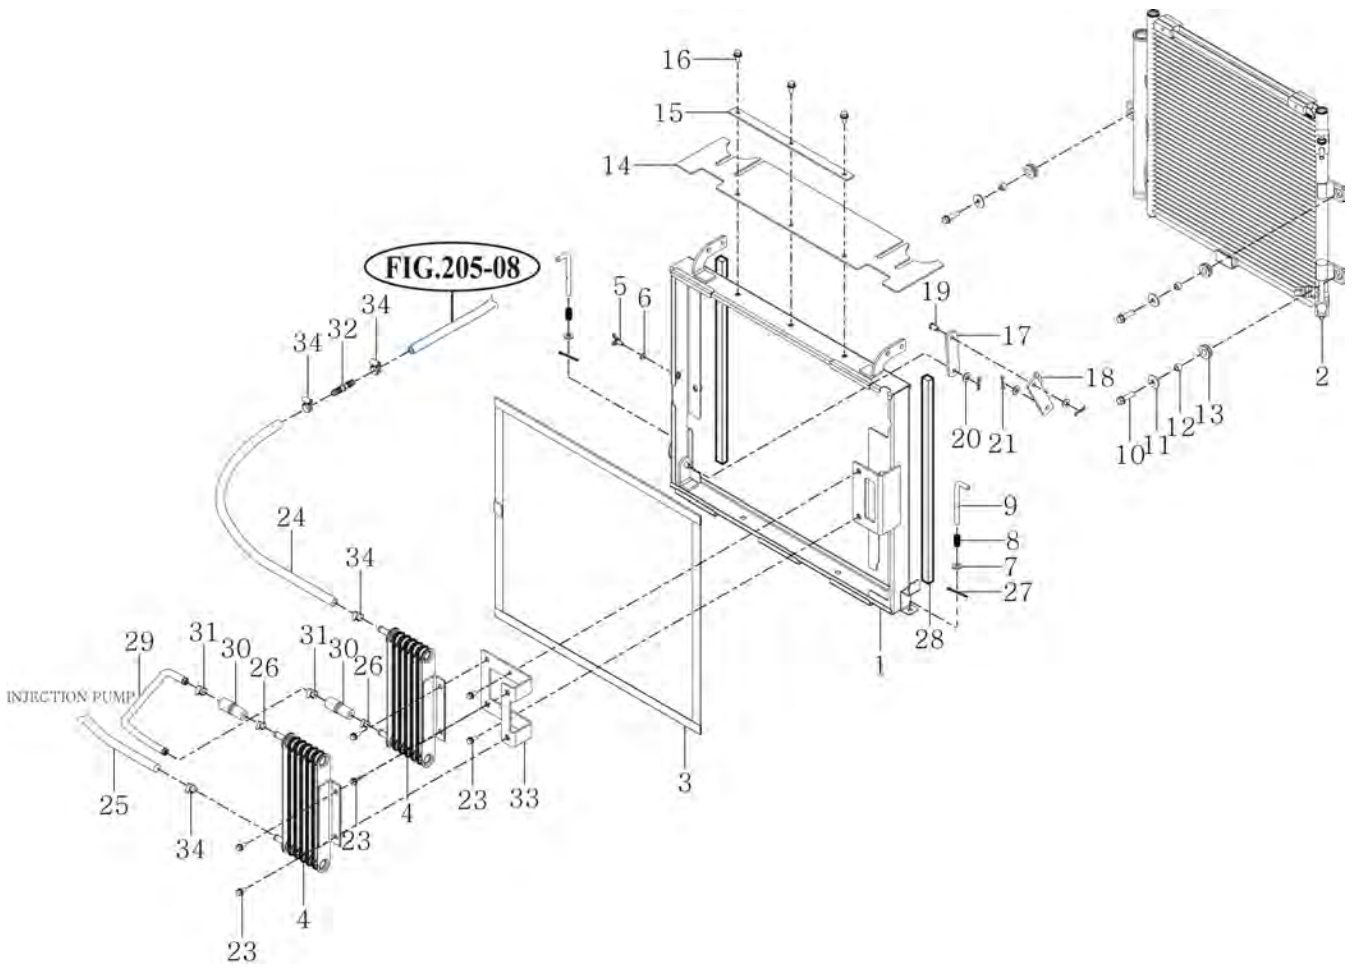
FIG.205-08
INJECTION PUMP
16
15
14
5
6
19
17
18
20
21
2
10
11
12
13
9
8
7
27
28
1
3
34
32
34
24
34
29
31
30
26
31
30
26
25
34
4
23
33
23
4
23

NOTE

FIG 702


T1104SC / T1054SC / T954SC


FRAME , HOOD

P1

YEAR

2014

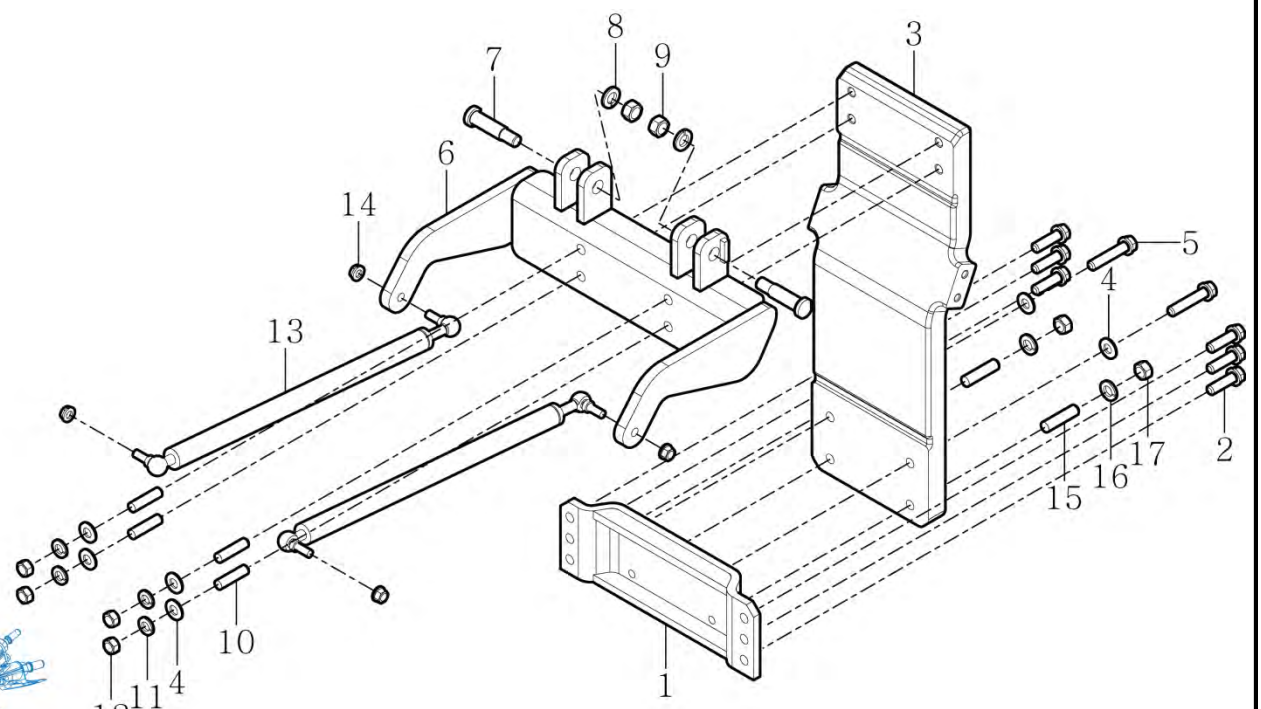

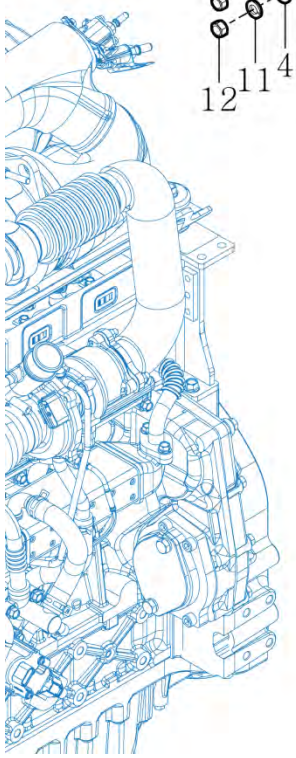

NOTE

FIG 703


T1104SC / T1054SC / T954SC

HOOD

P1

YEAR

2014

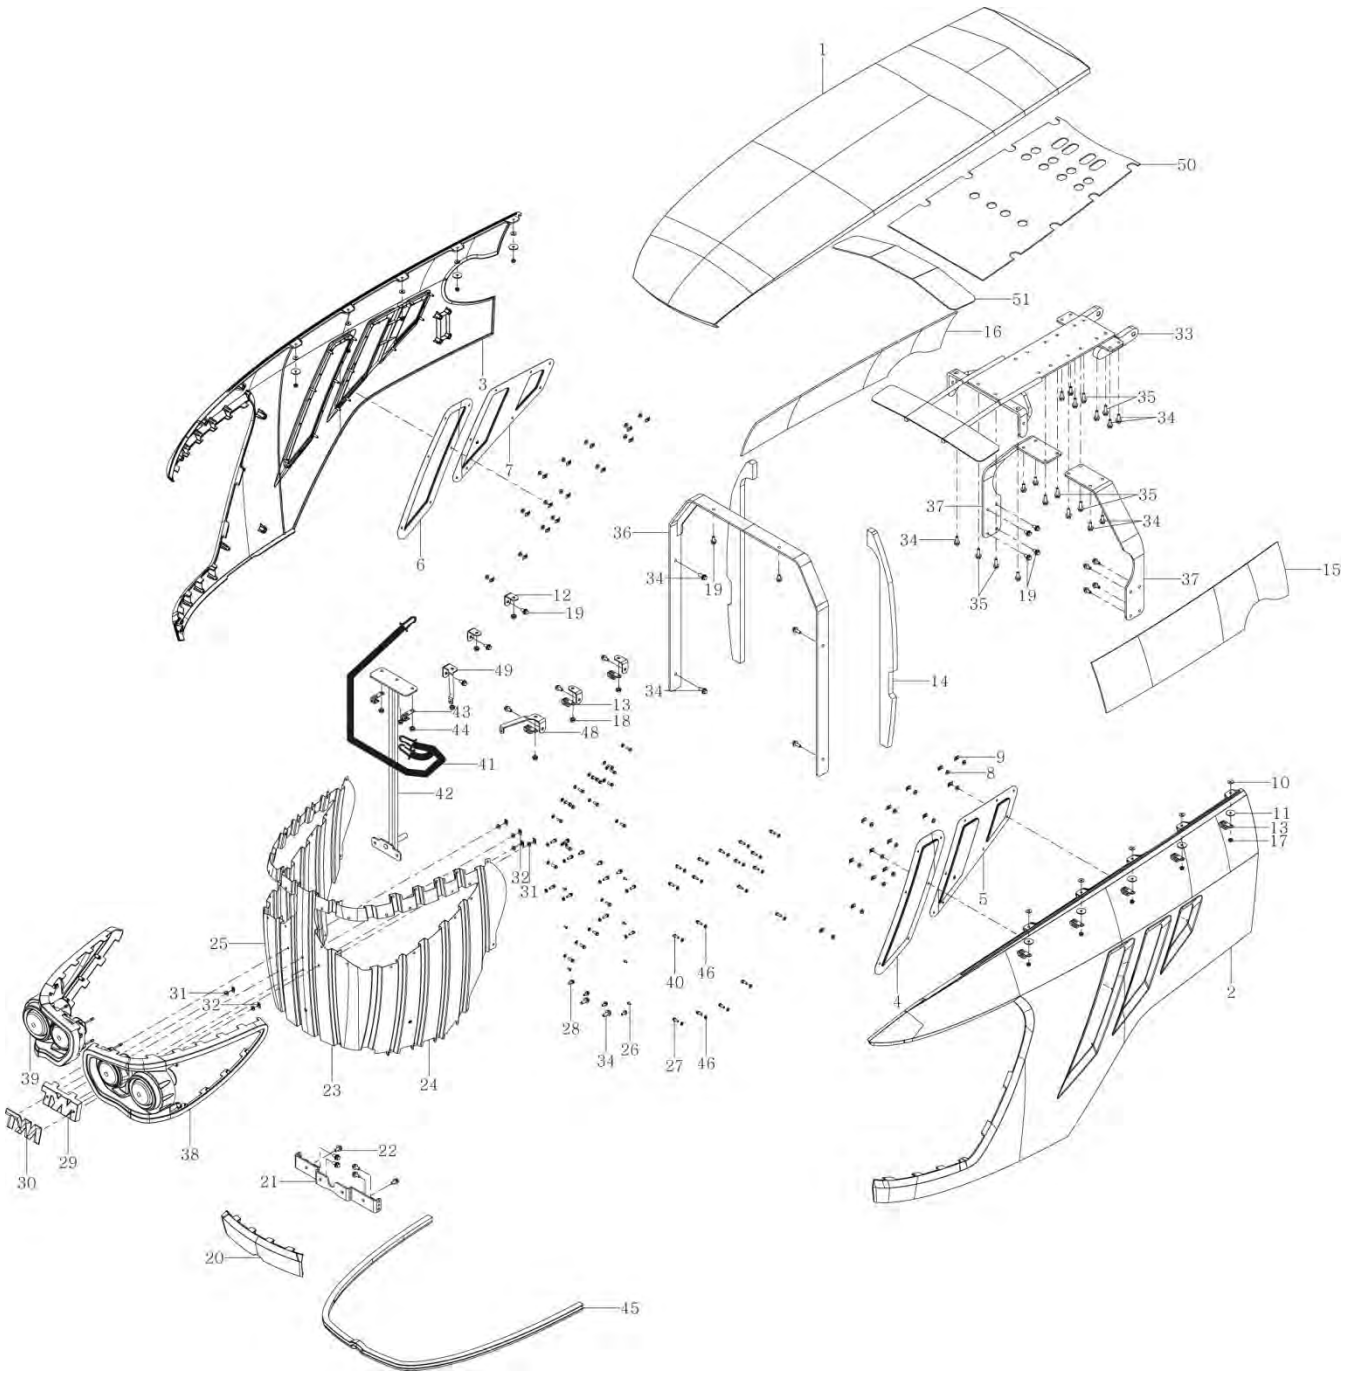

NOTE

FIG 703


T1104SC / T1054SC / T954SC

HOOD


P2

YEAR


2014

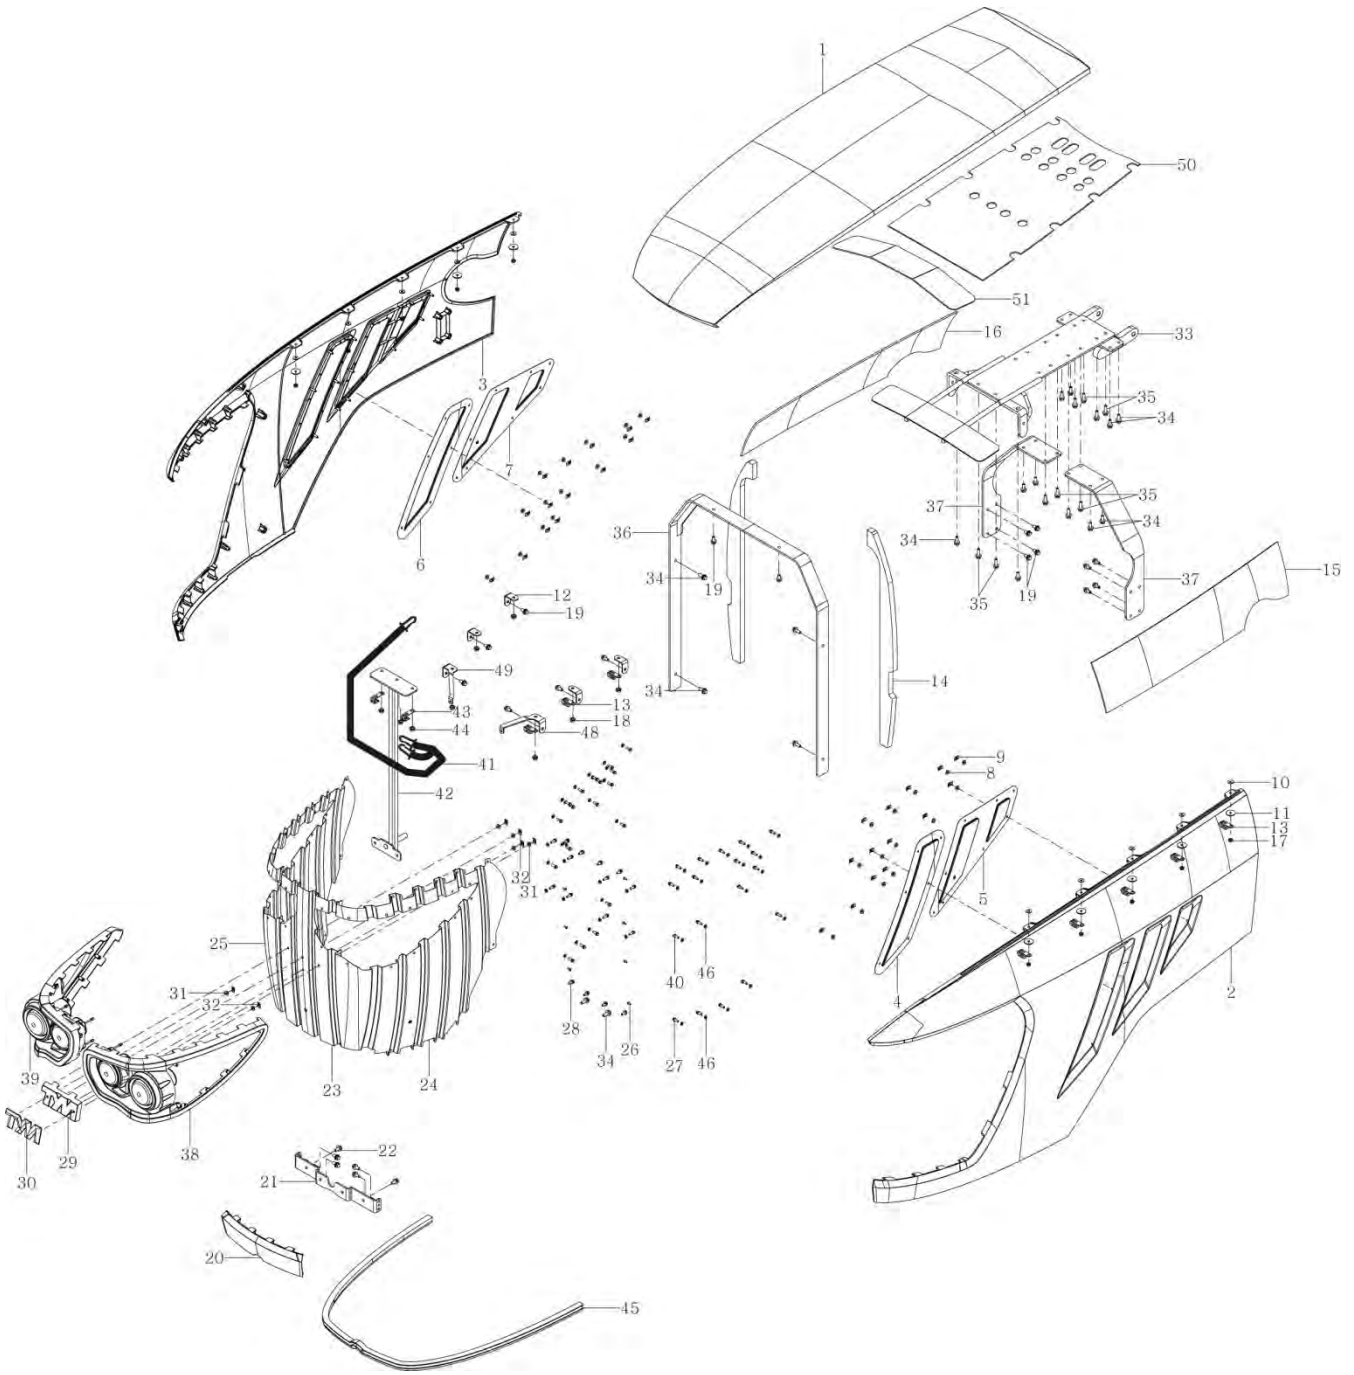

NOTE

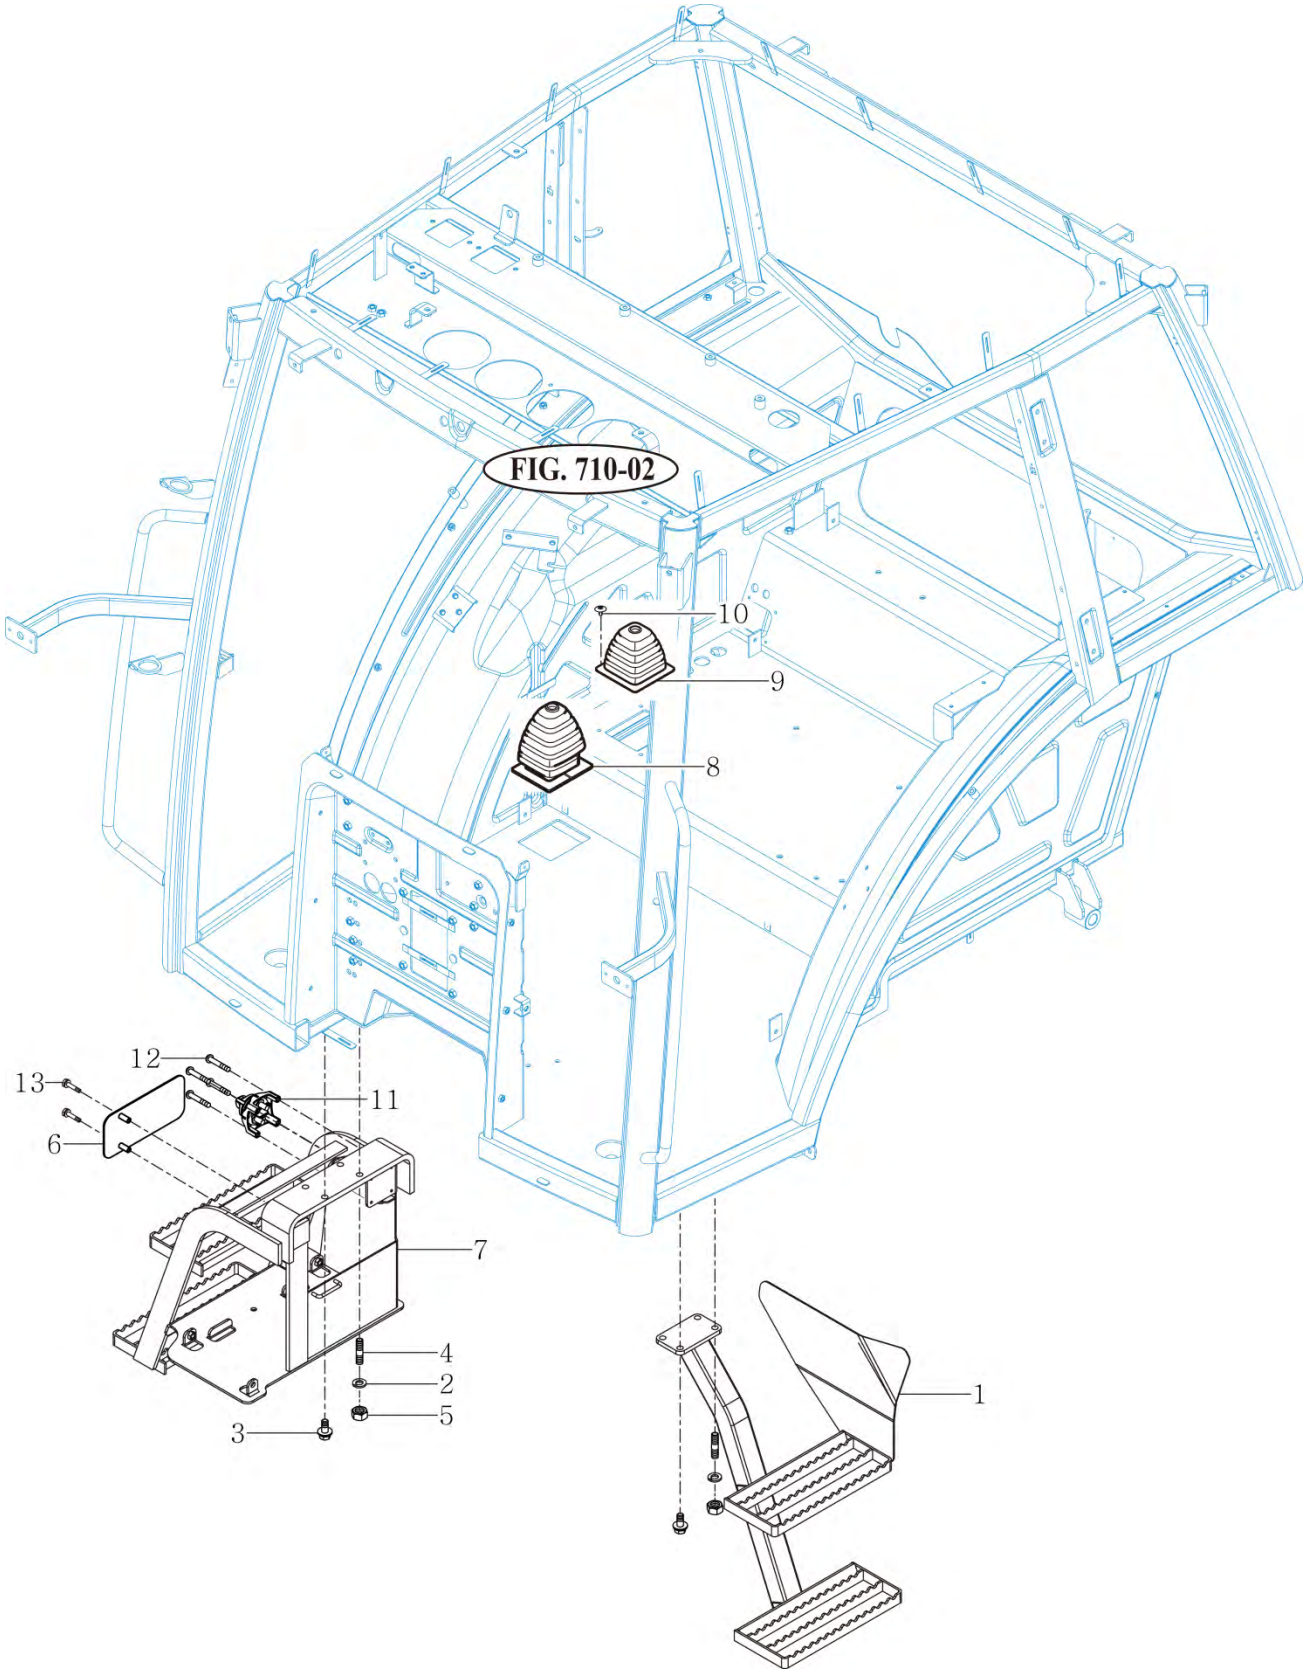

NOTE

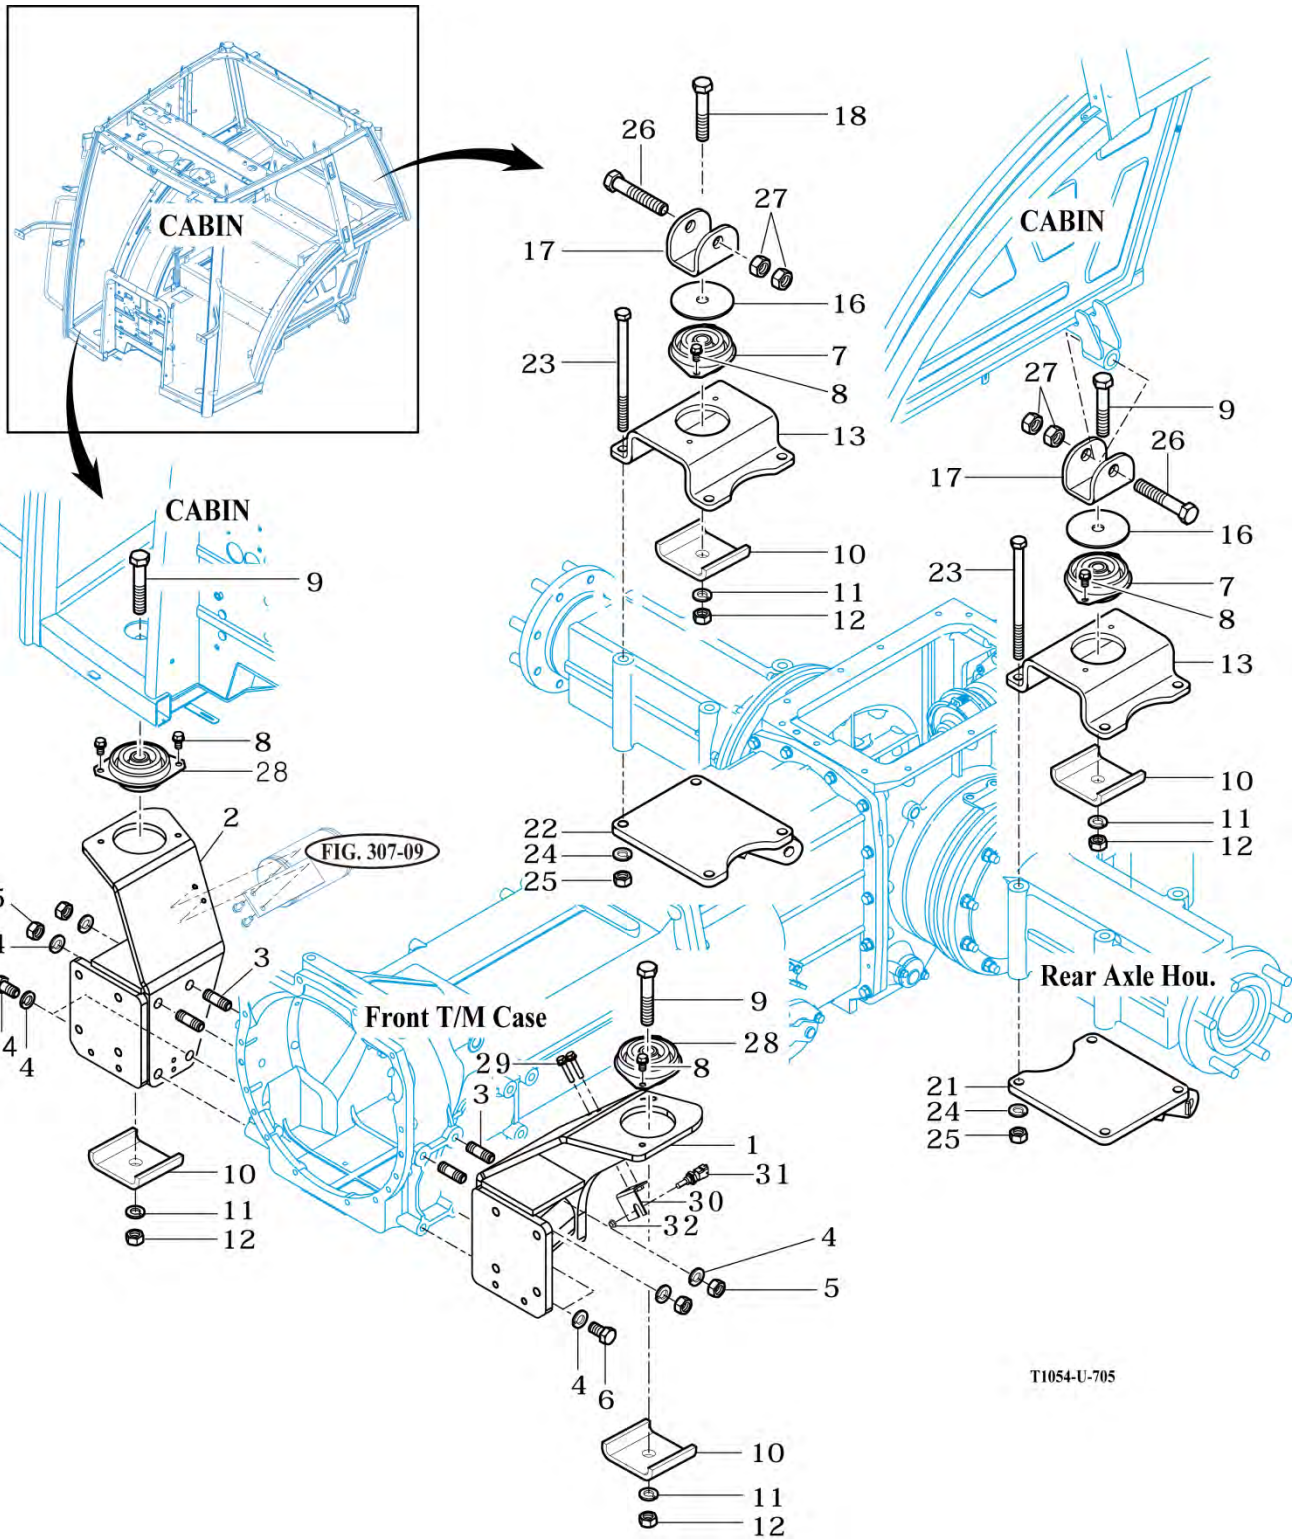
CABIN
CABIN
CABIN
FIG. 307-09
Front T/M Case
Rear Axle Hou.
T1054-U-705

NOTE

FIG 706


T1104SC / T1054SC / T954SC

SEAT & MAT

P1

YEAR

2014

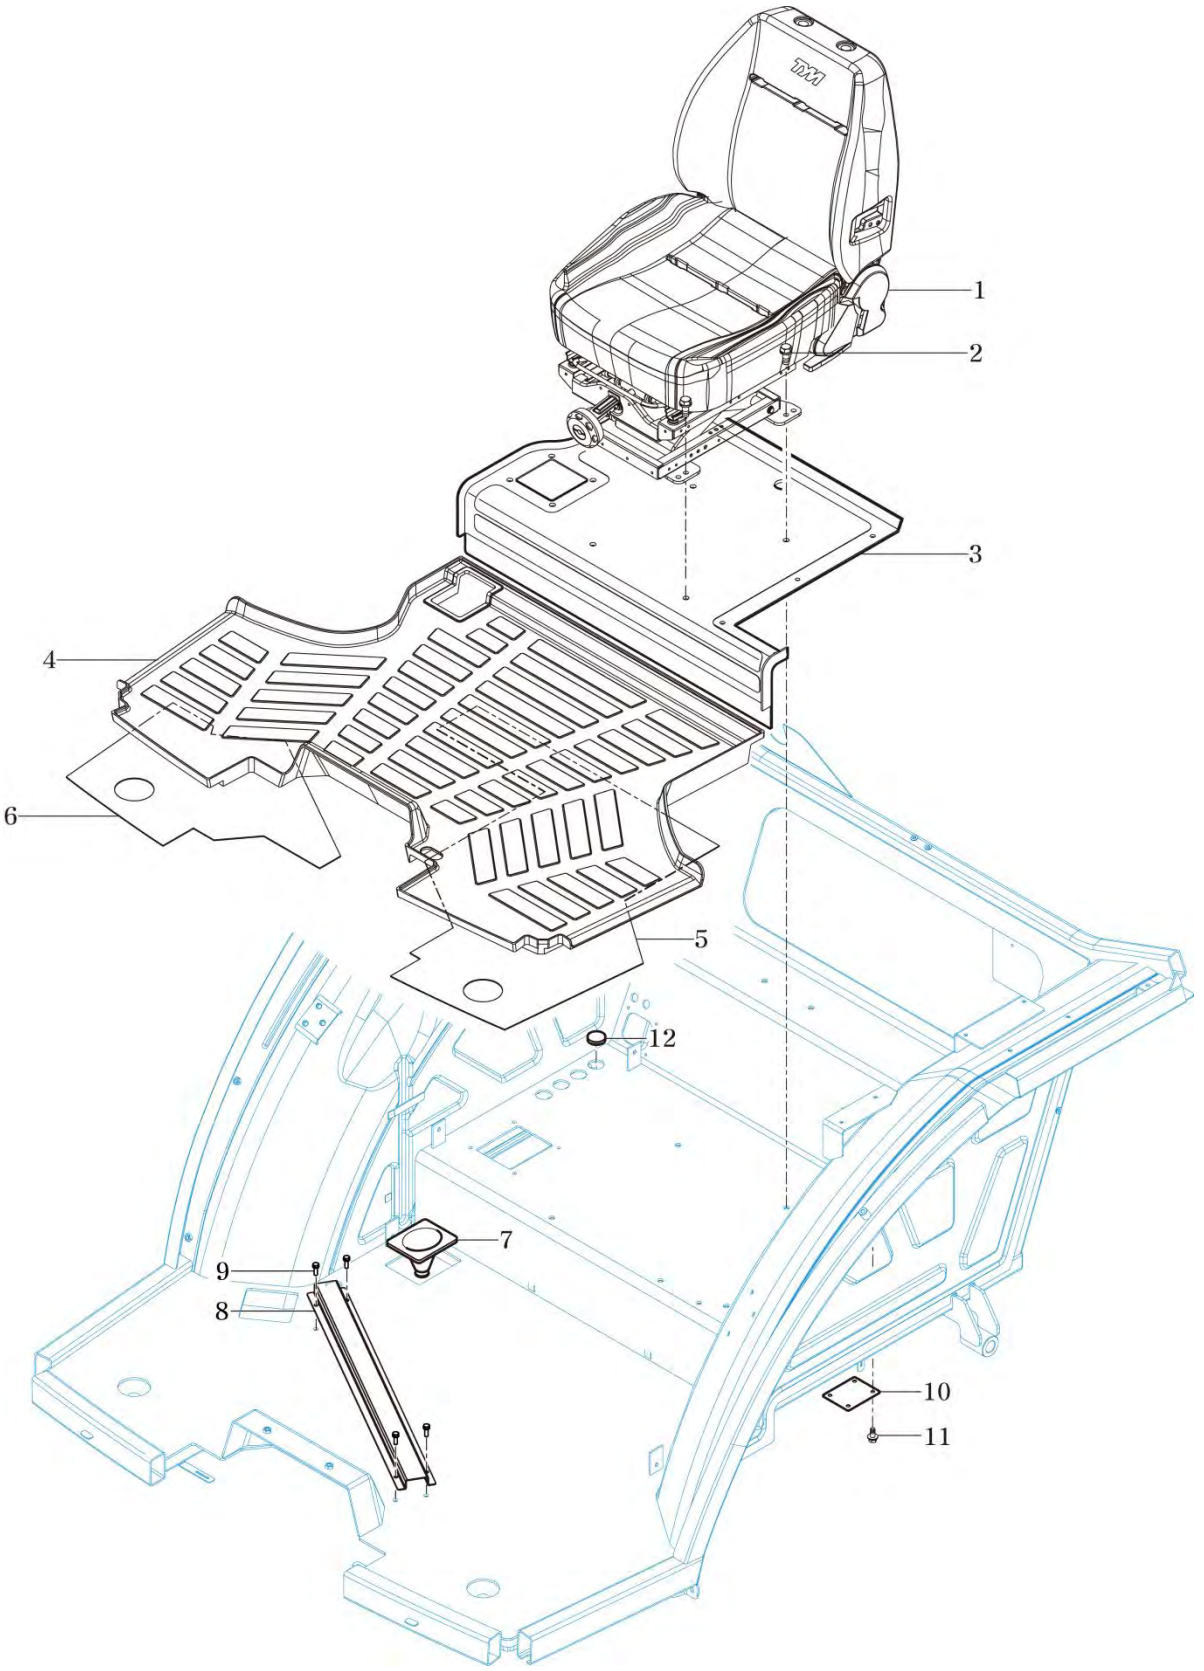

NOTE

FIG 708


T1104SC / T1054SC / T954SC

DOOR-LH

P1

YEAR

2014

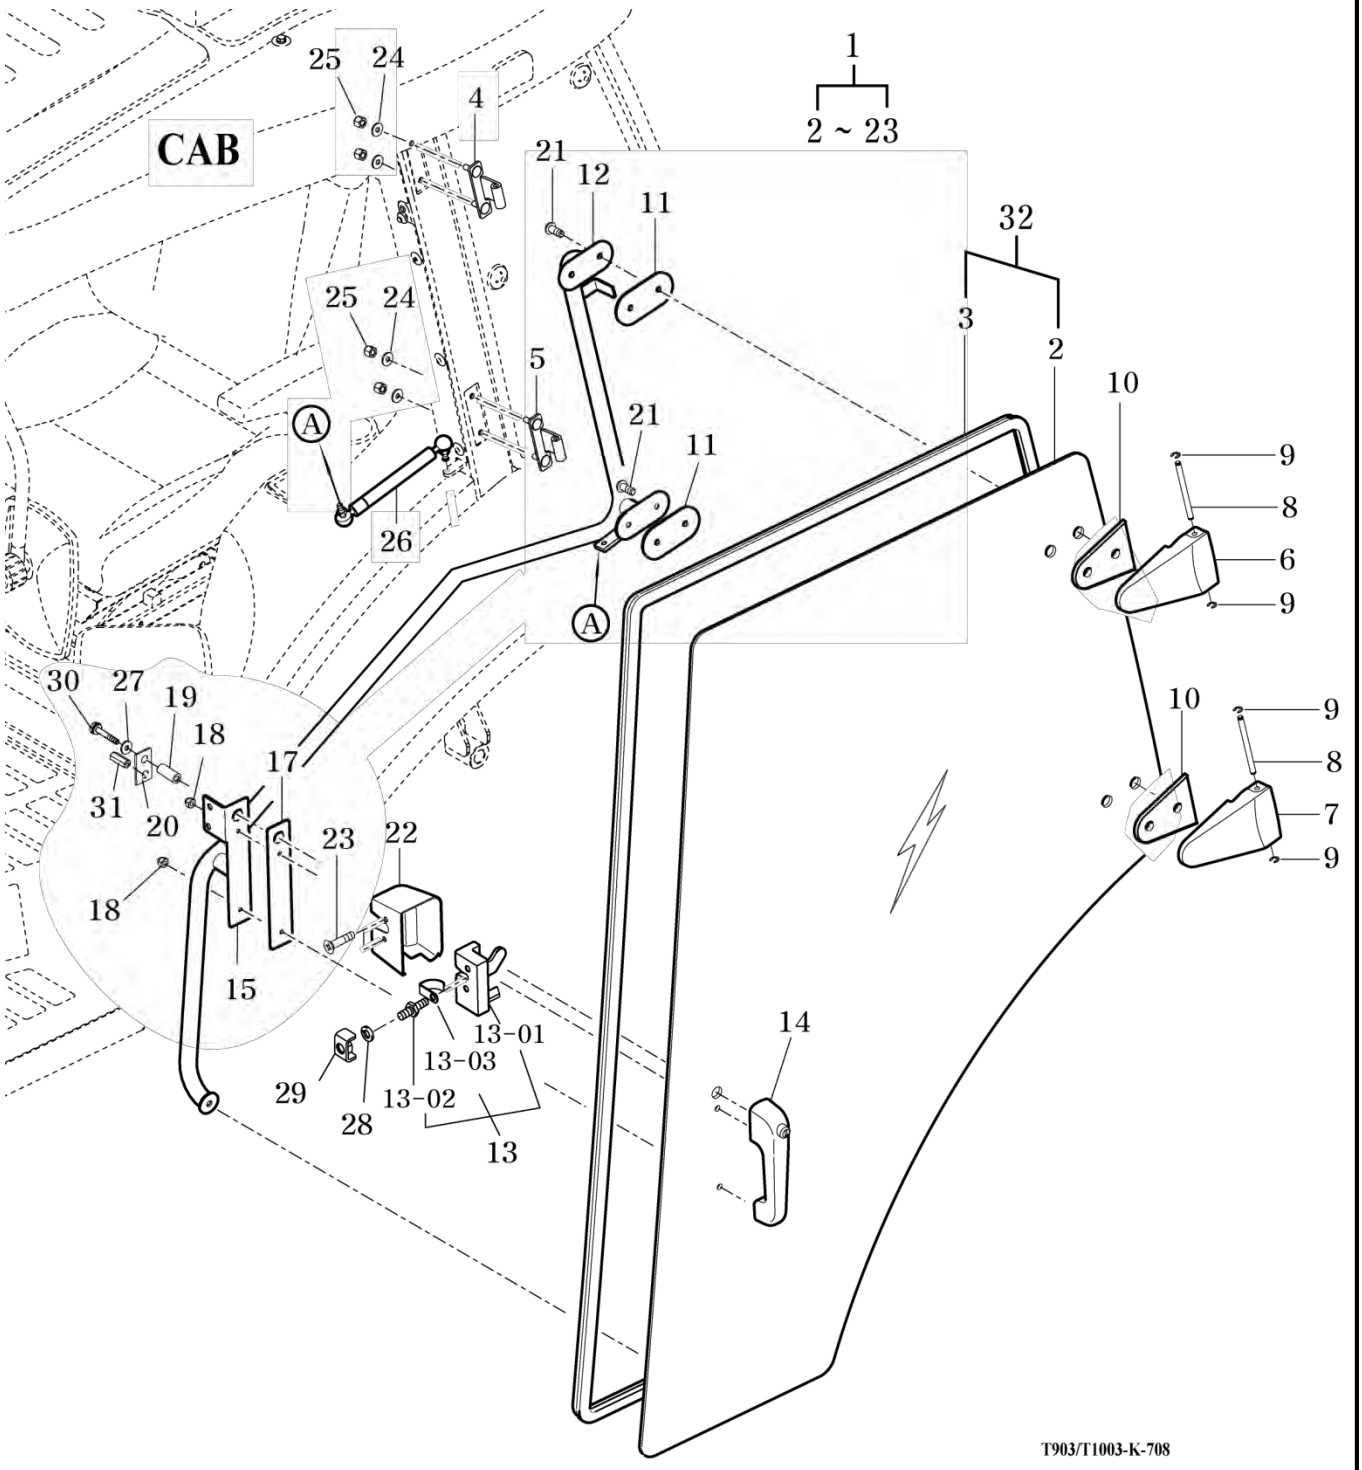

NOTE

FIG 708


T1104SC / T1054SC / T954SC

DOOR-LH

P1

YEAR

2014

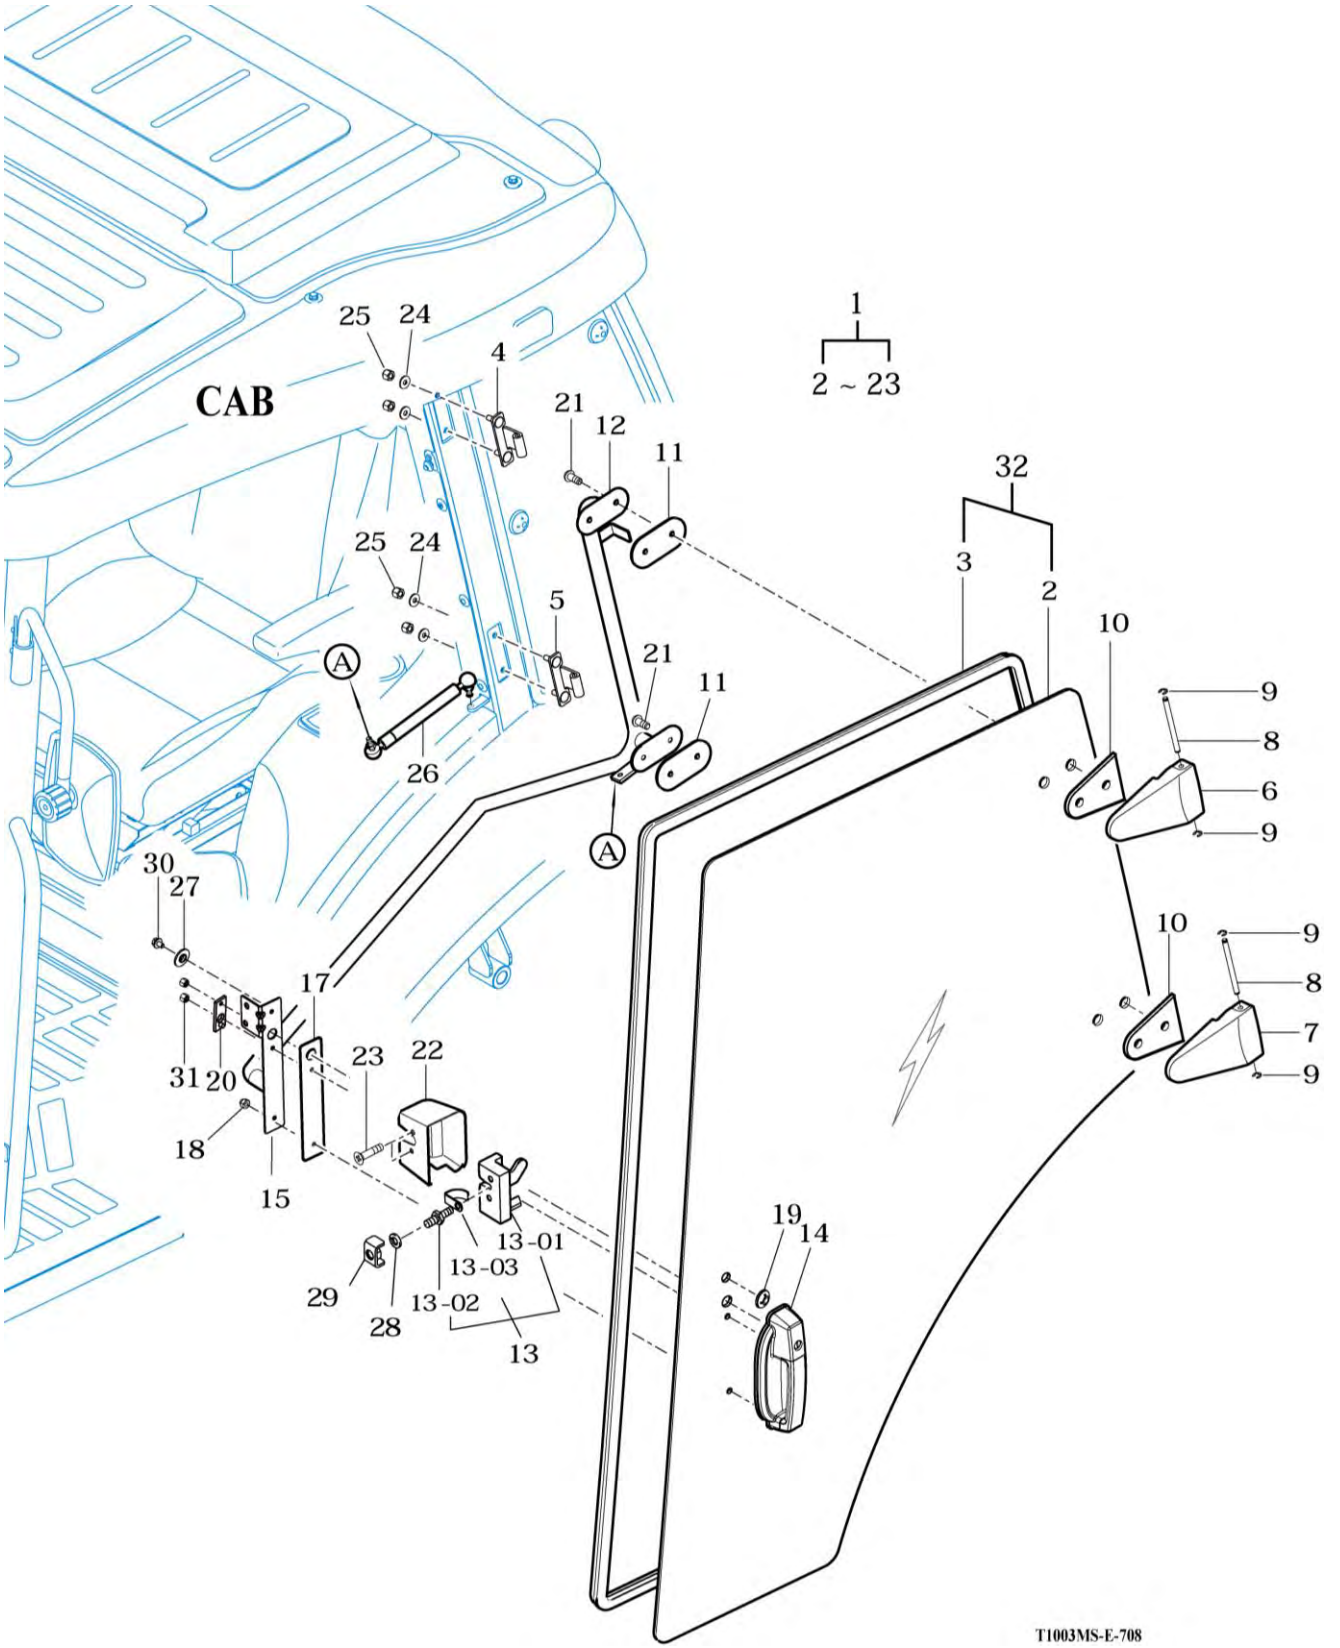

NOTE

FIG 709


T1104SC / T1054SC / T954SC

DOOR-RH

P2

YEAR

2014

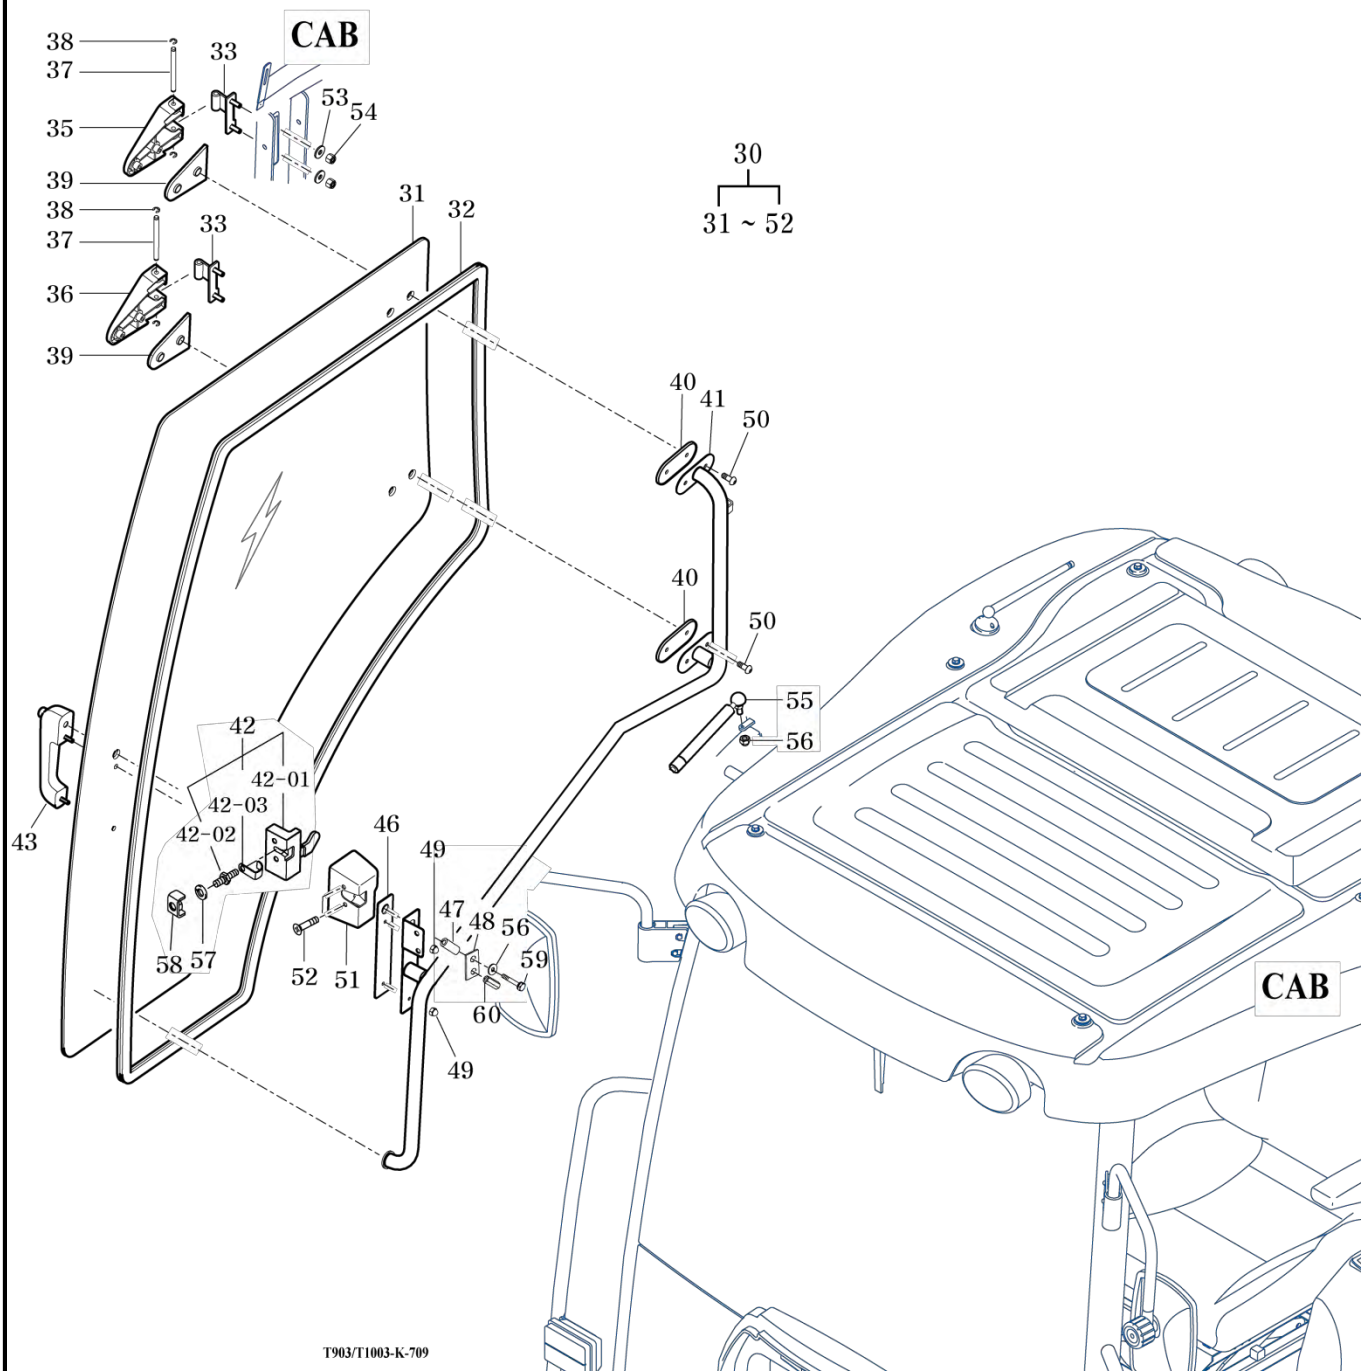

NOTE

FIG 709


T1104SC / T1054SC / T954SC

DOOR-RH


P2

YEAR

2014

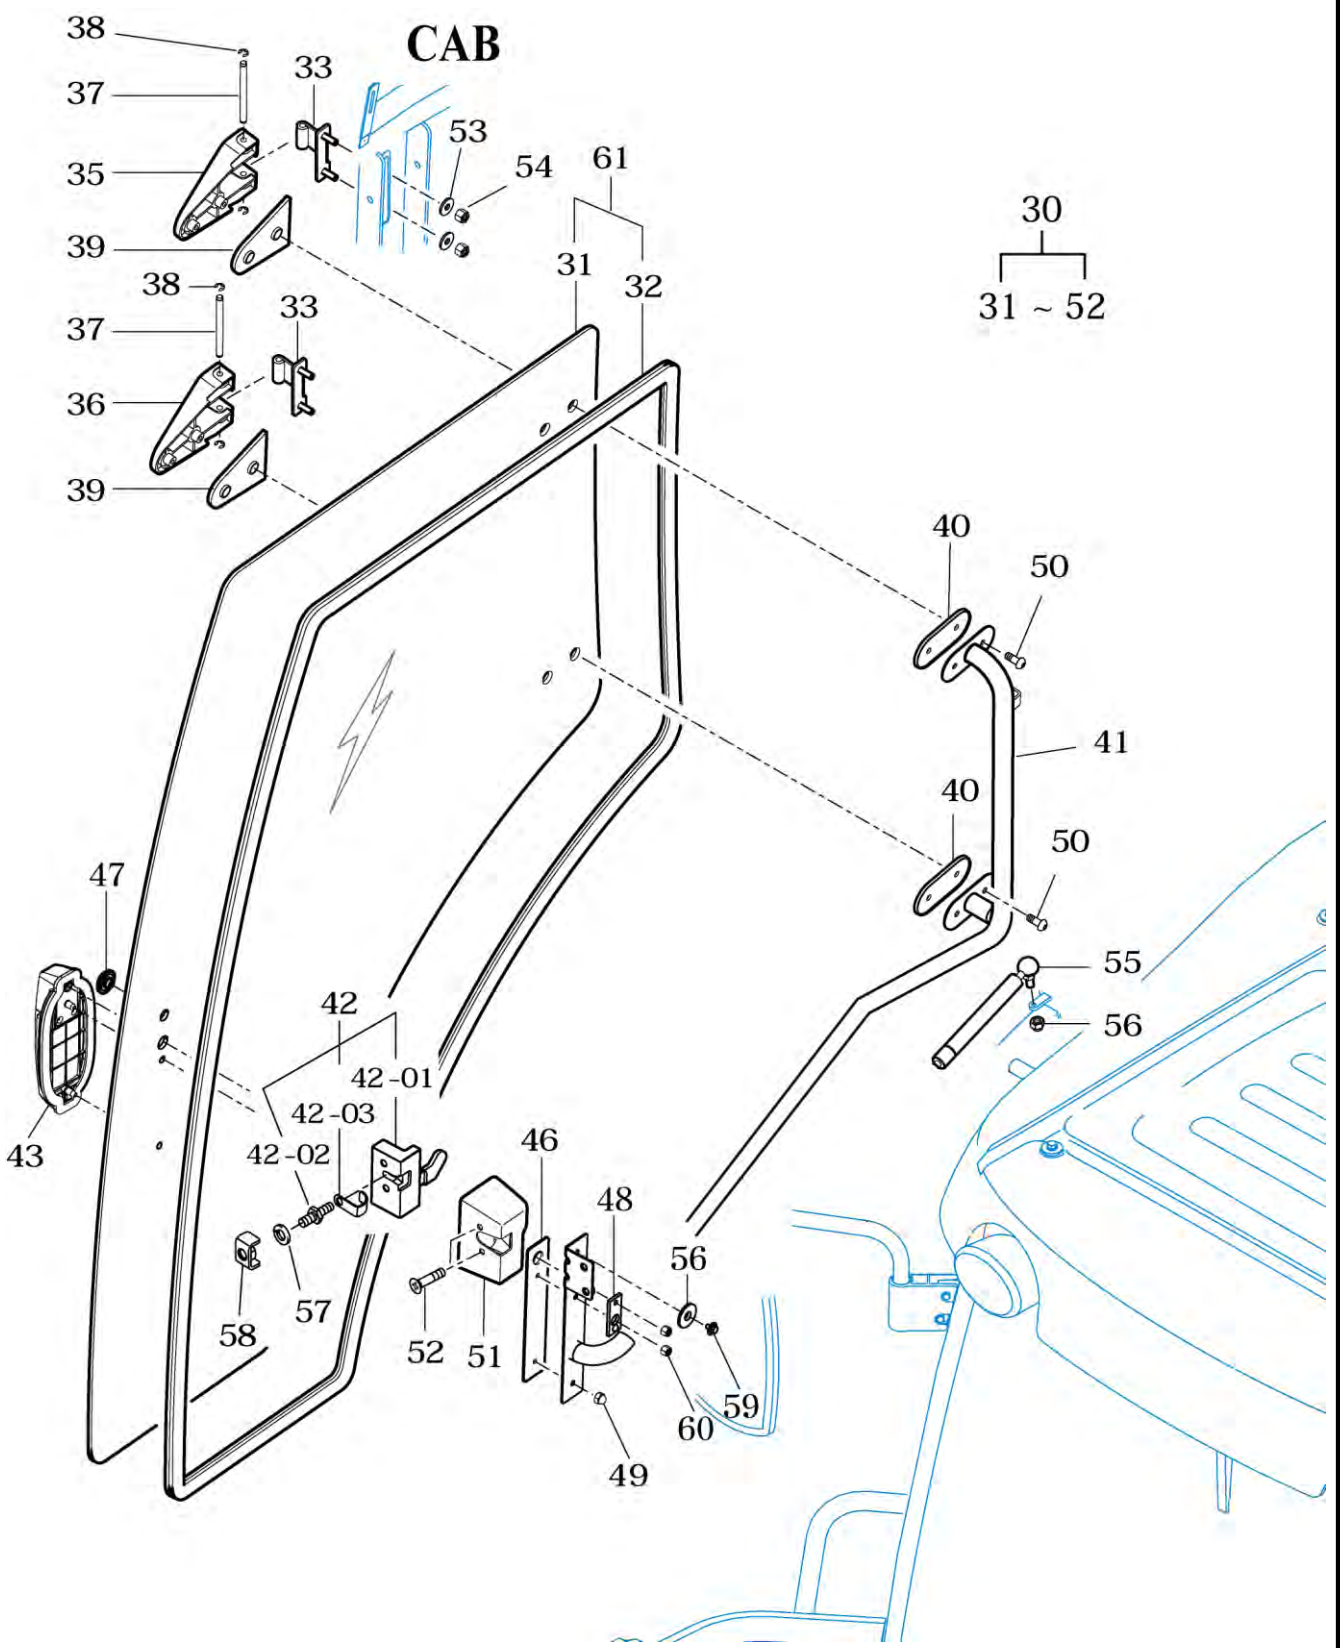

NOTE

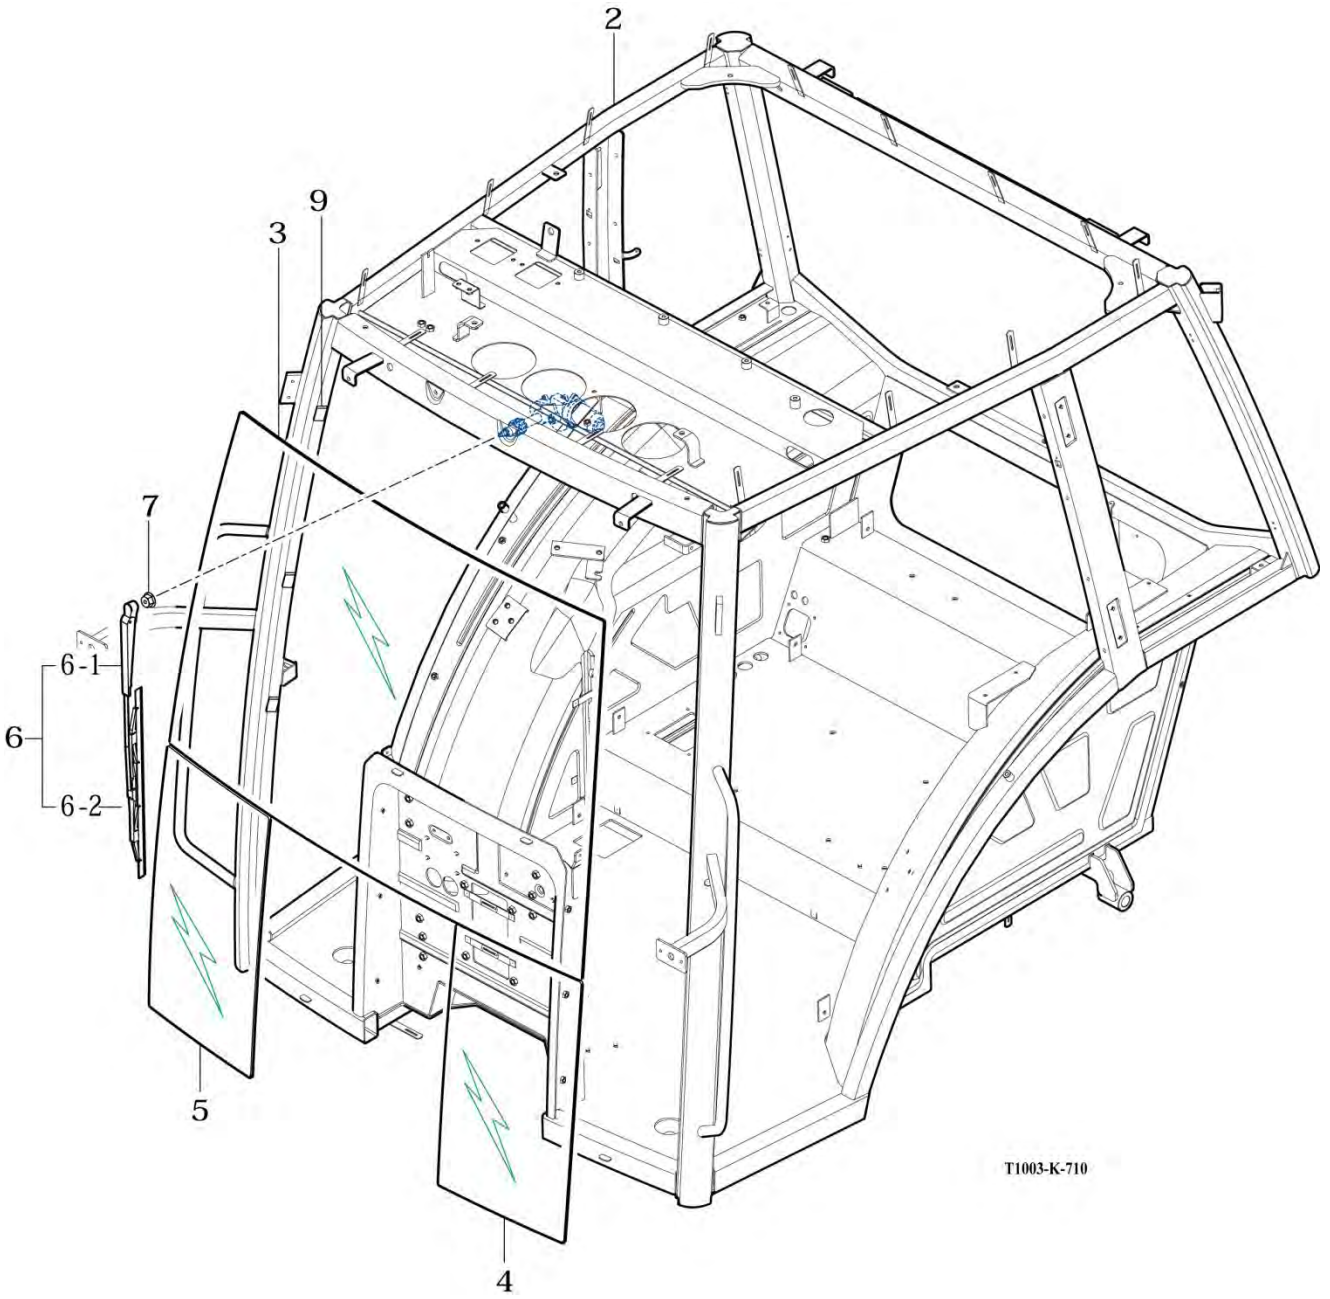

NOTE

FIG 711


T1104SC / T1054SC / T954SC

SIDE GLASS

P1

YEAR

2014

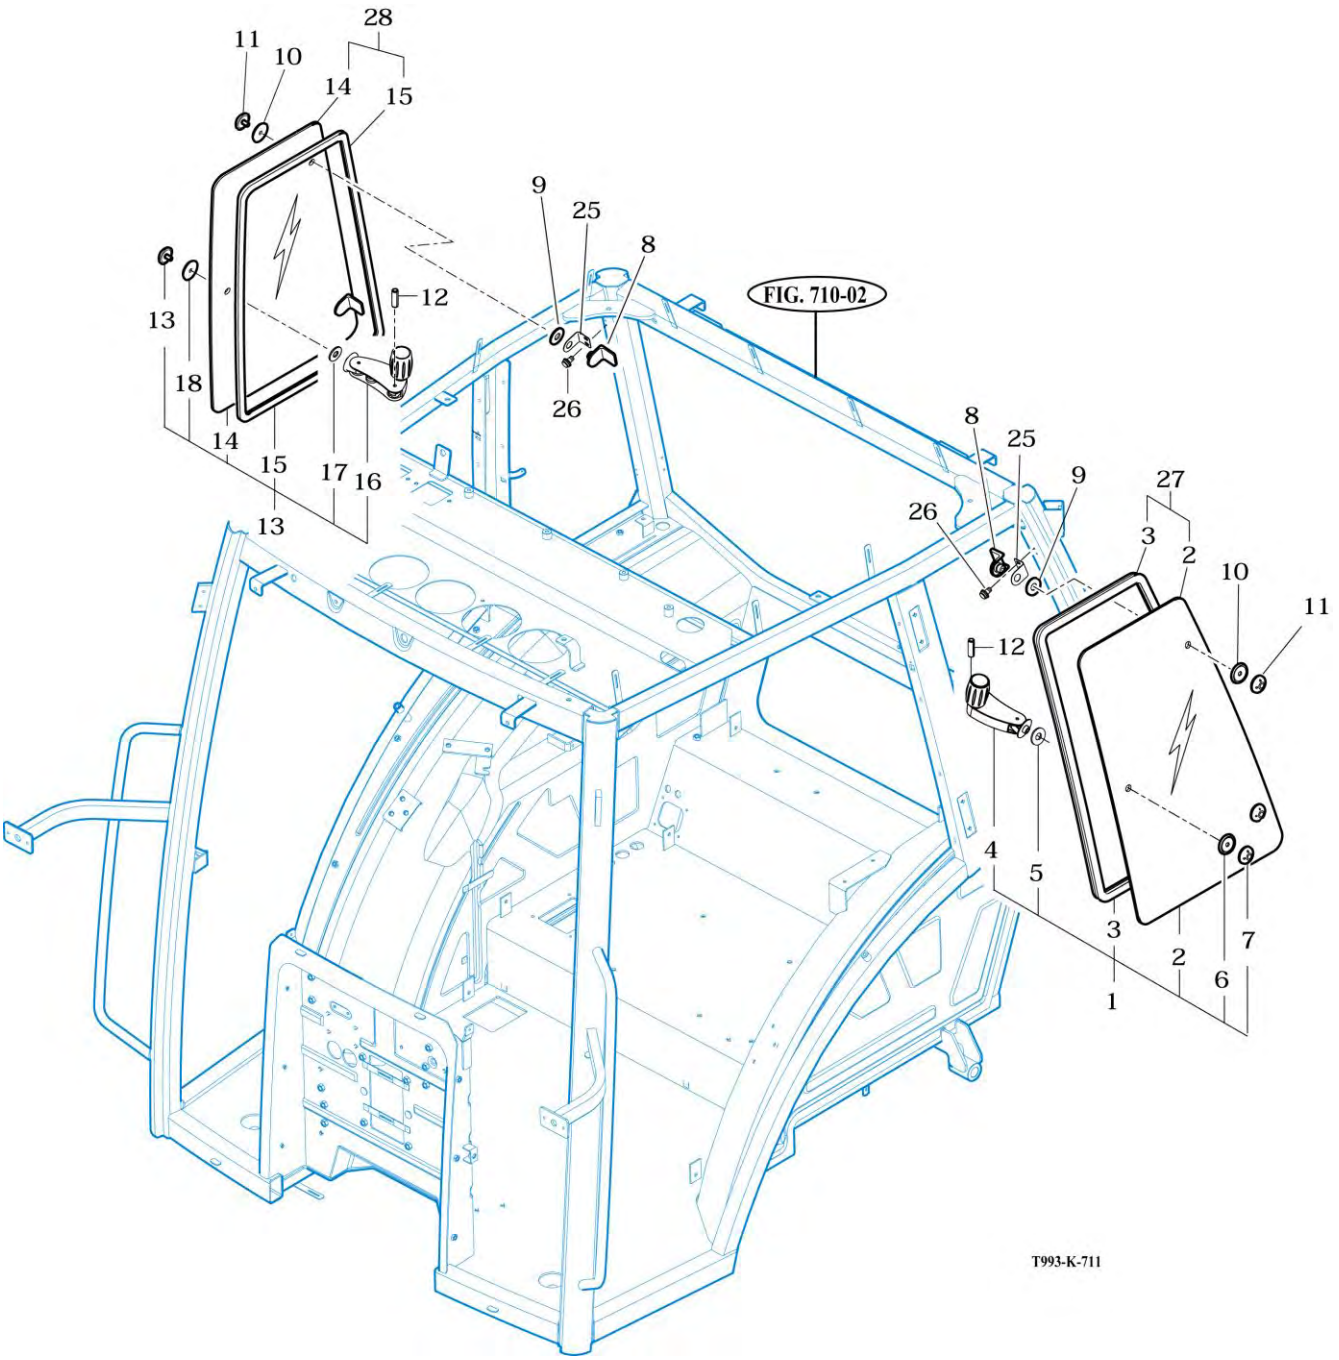

NOTE

FIG 712

T1104SC / T1054SC / T954SC


REAR GLASS

P1

YEAR

2014



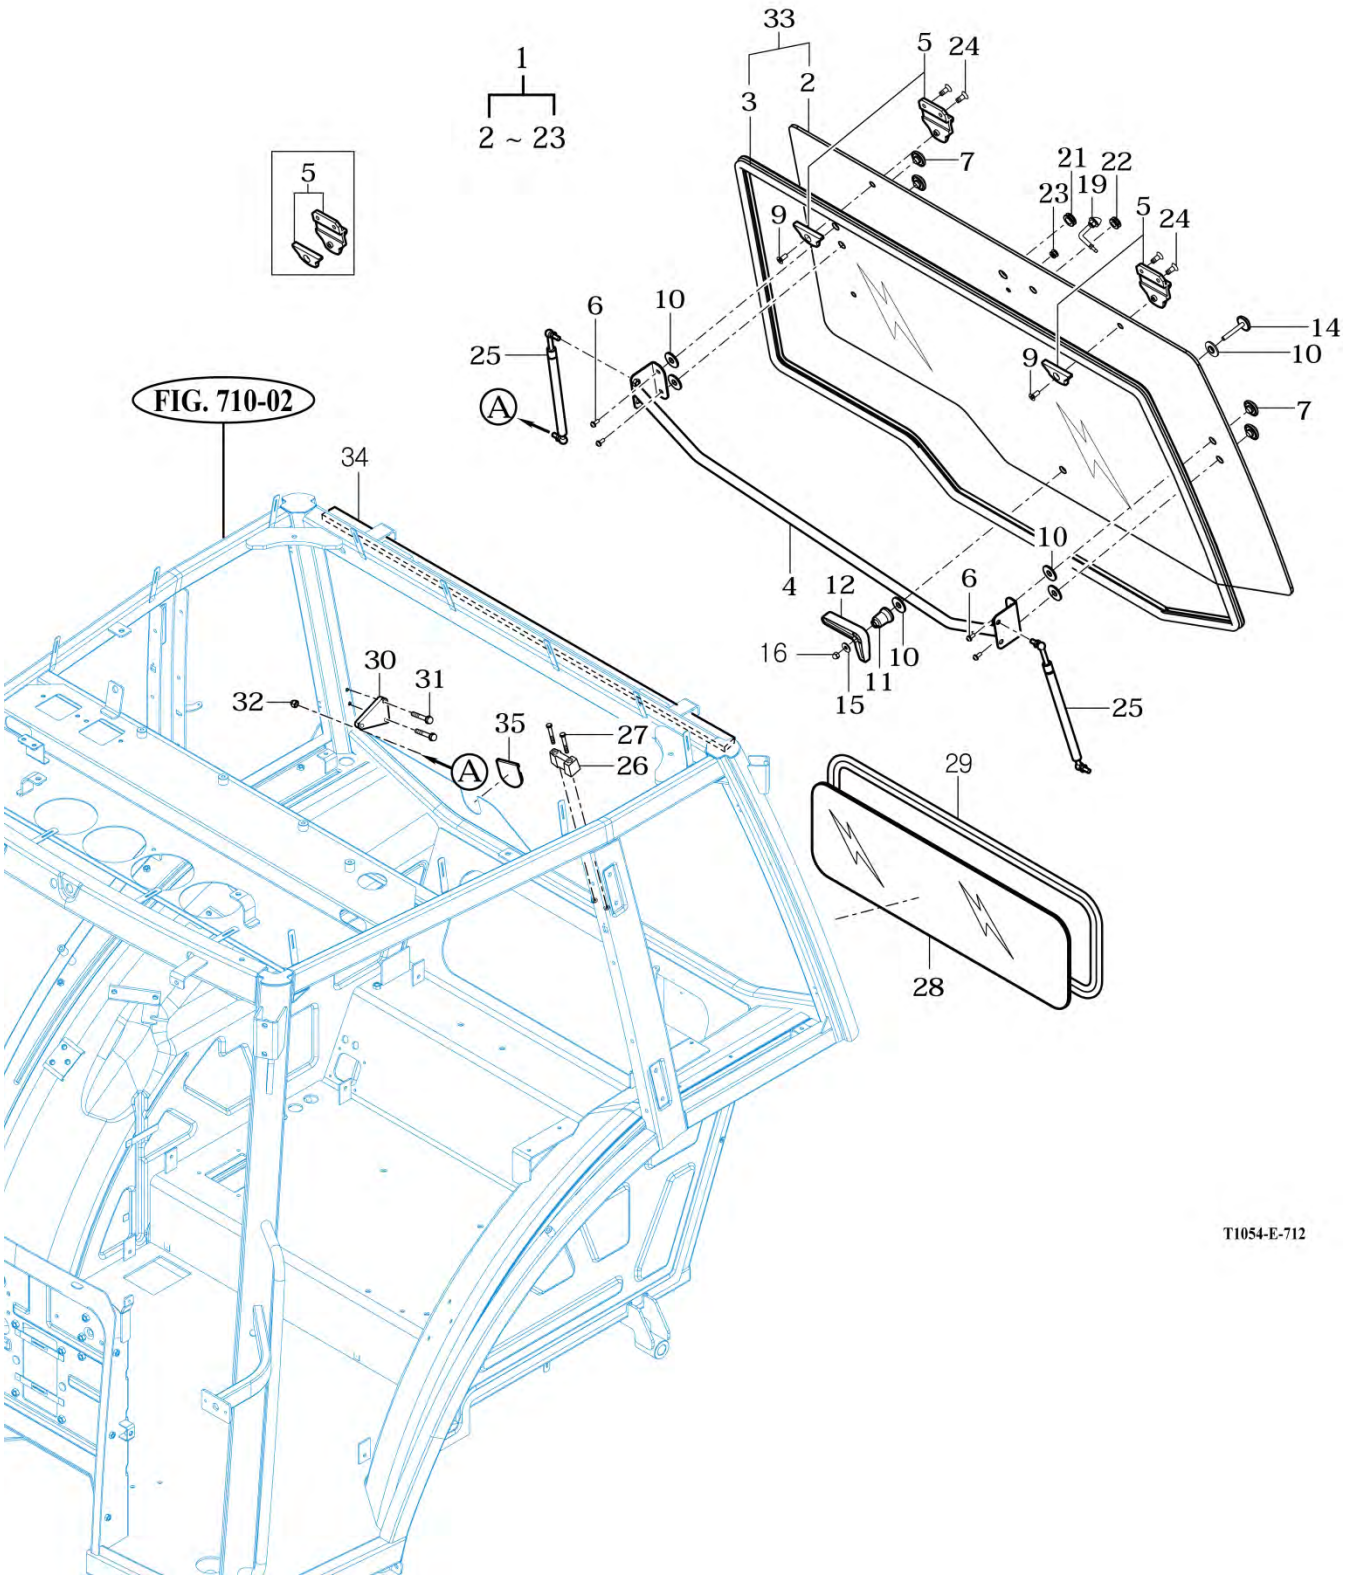

NOTE

FIG 713


T1104SC / T1054SC / T954SC

SUB FENDER & COVER


P1


YEAR

2014

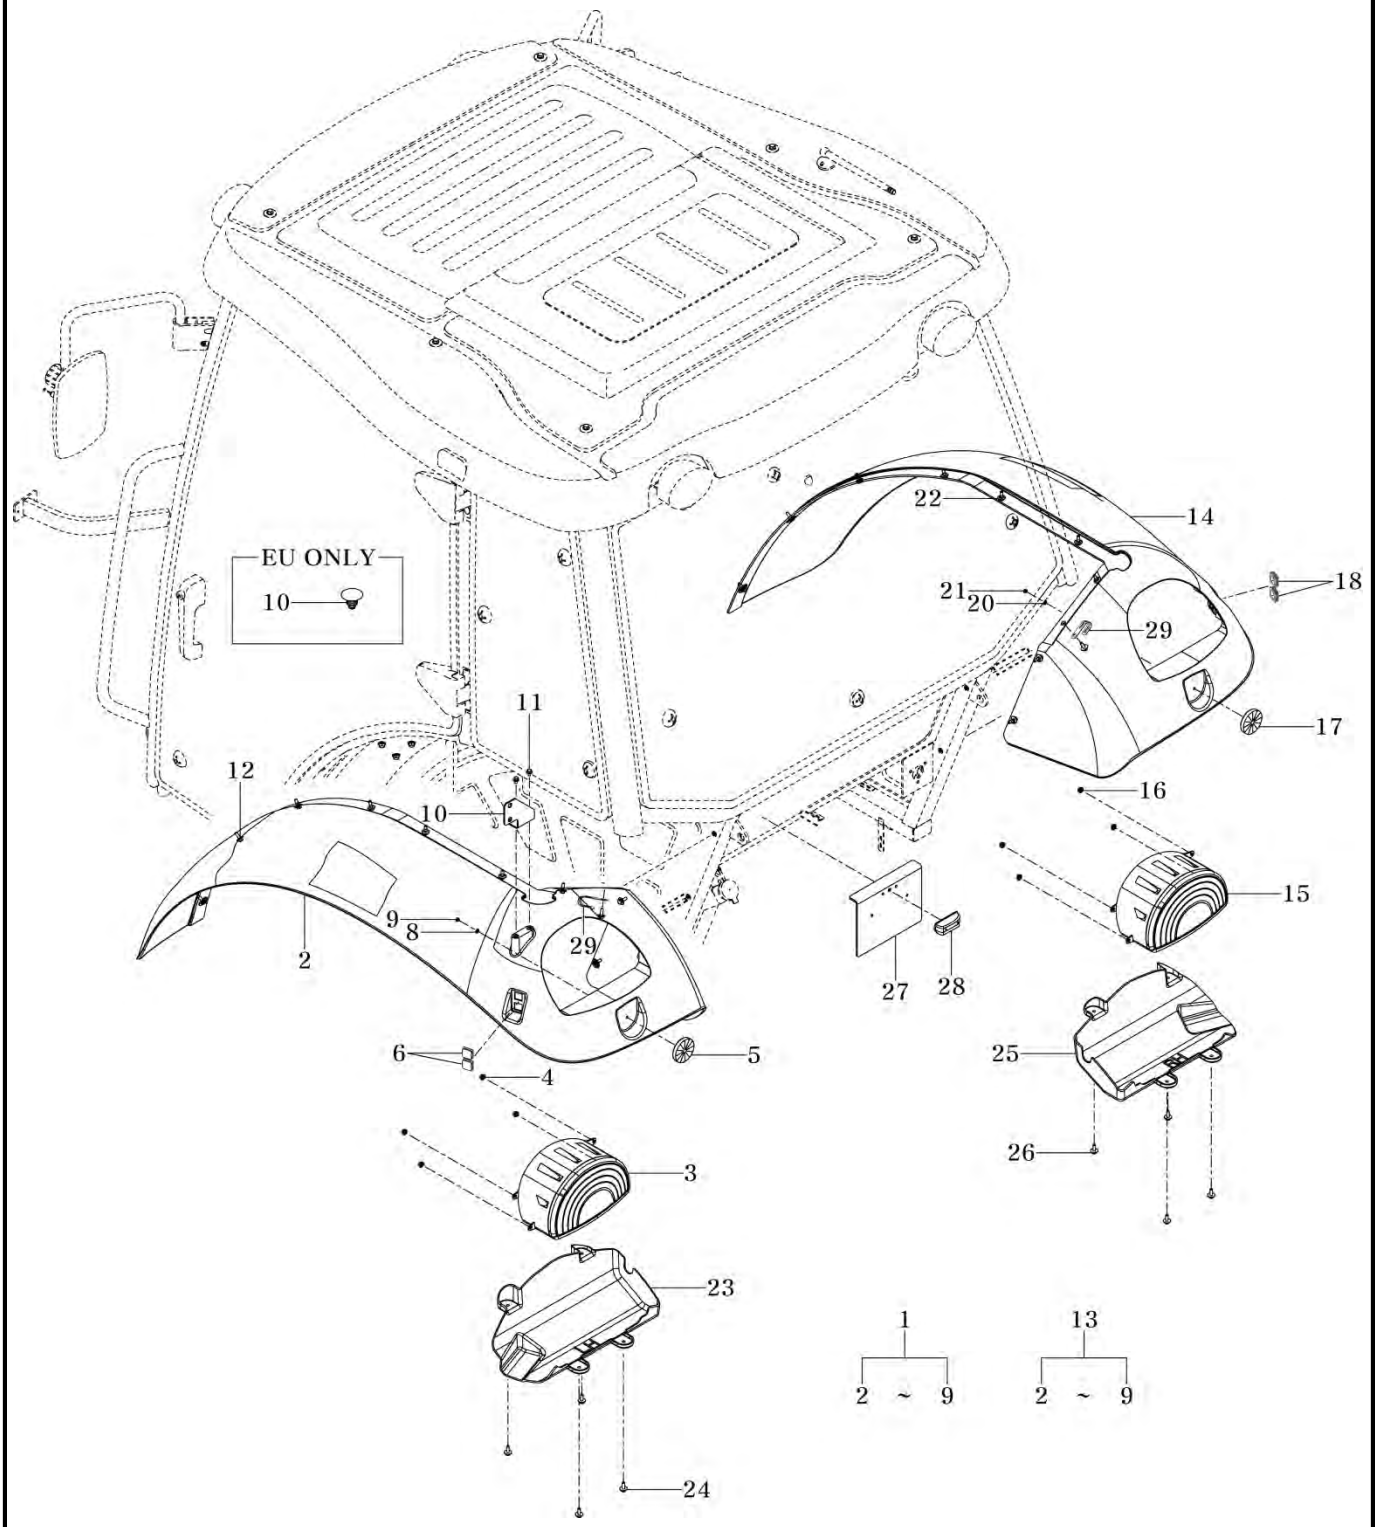


NOTE

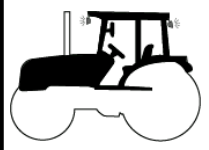

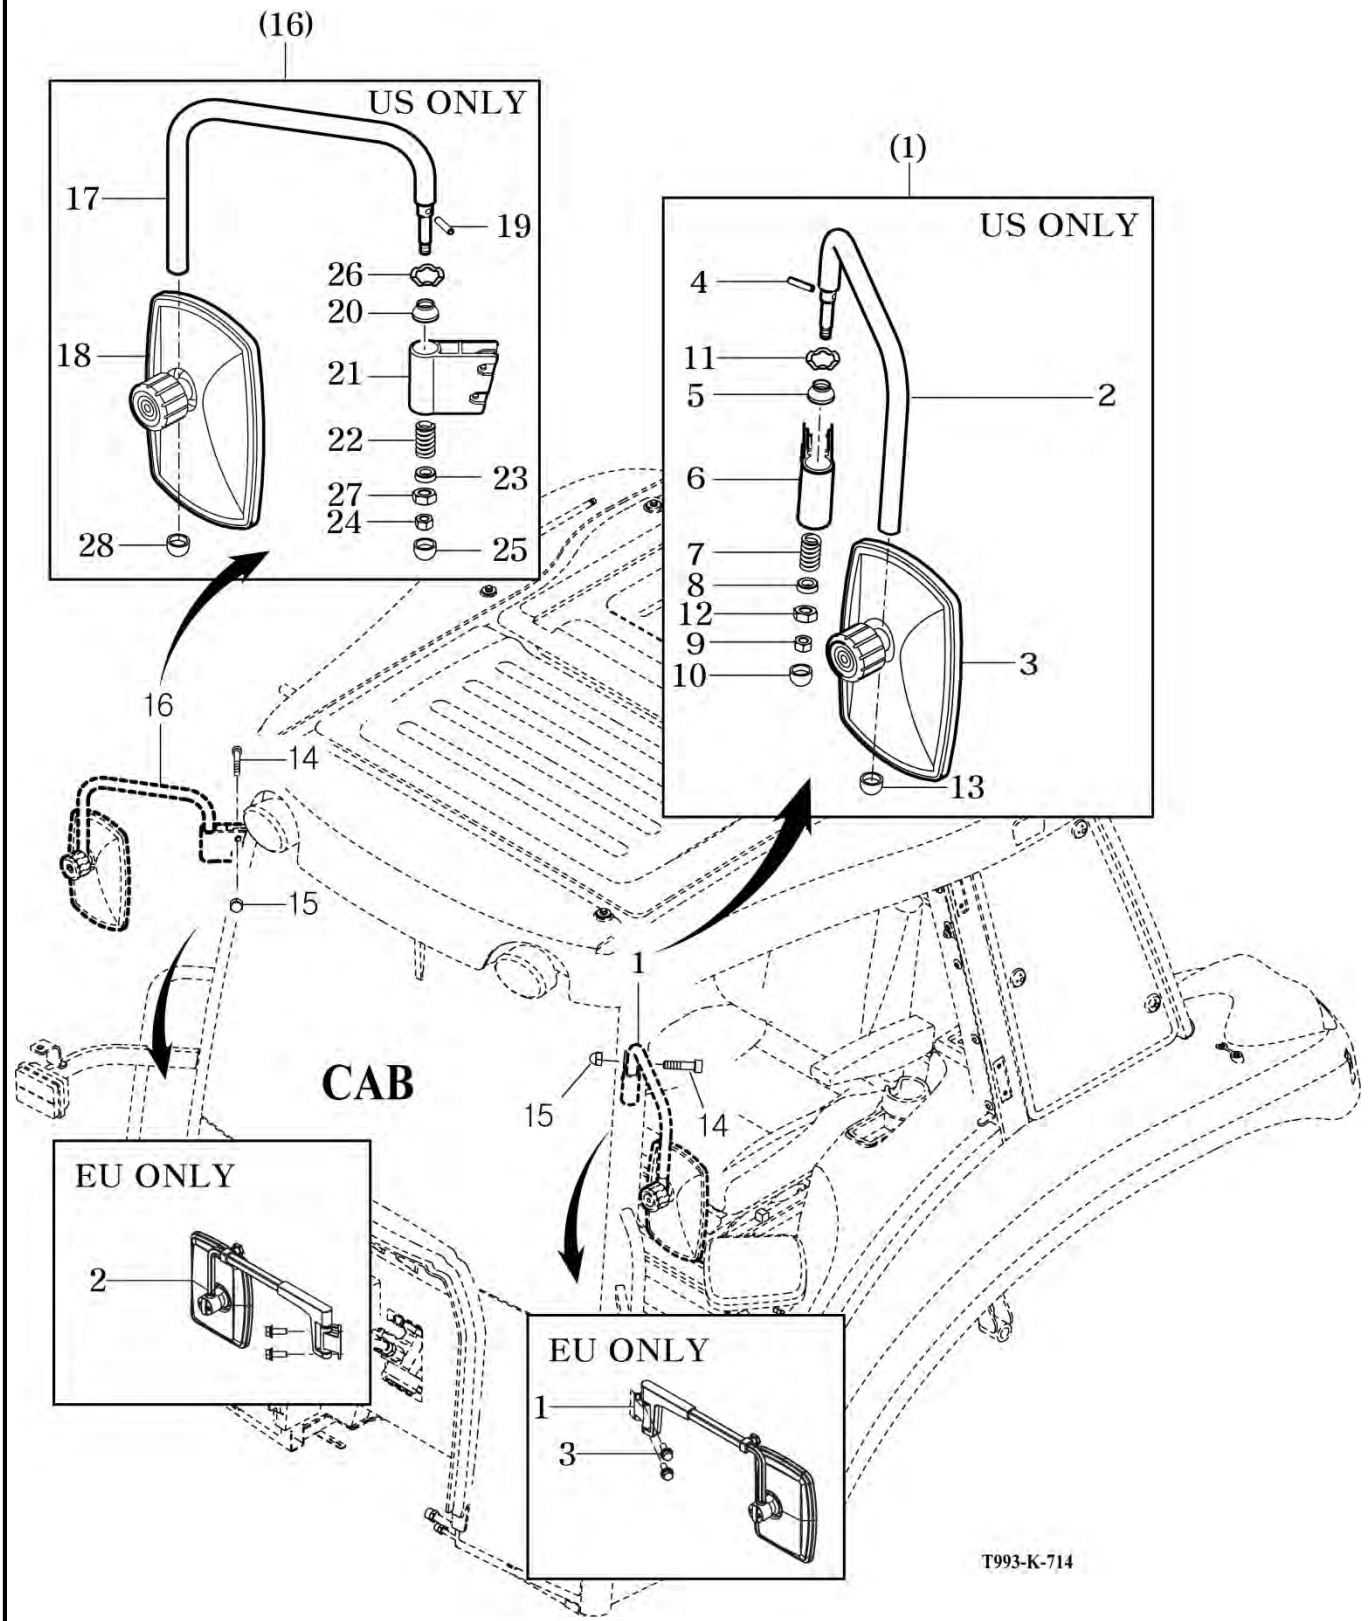
(16)
US ONLY
17
19
26
20
18
21
22
23
27
24
28
25
(1)
US ONLY
4
11
5
2
6
7
8
12
9
10
3
13
16
14
15
1
CAB
15
14
EU ONLY
2
EU ONLY
1
3
T993-K-714

NOTE

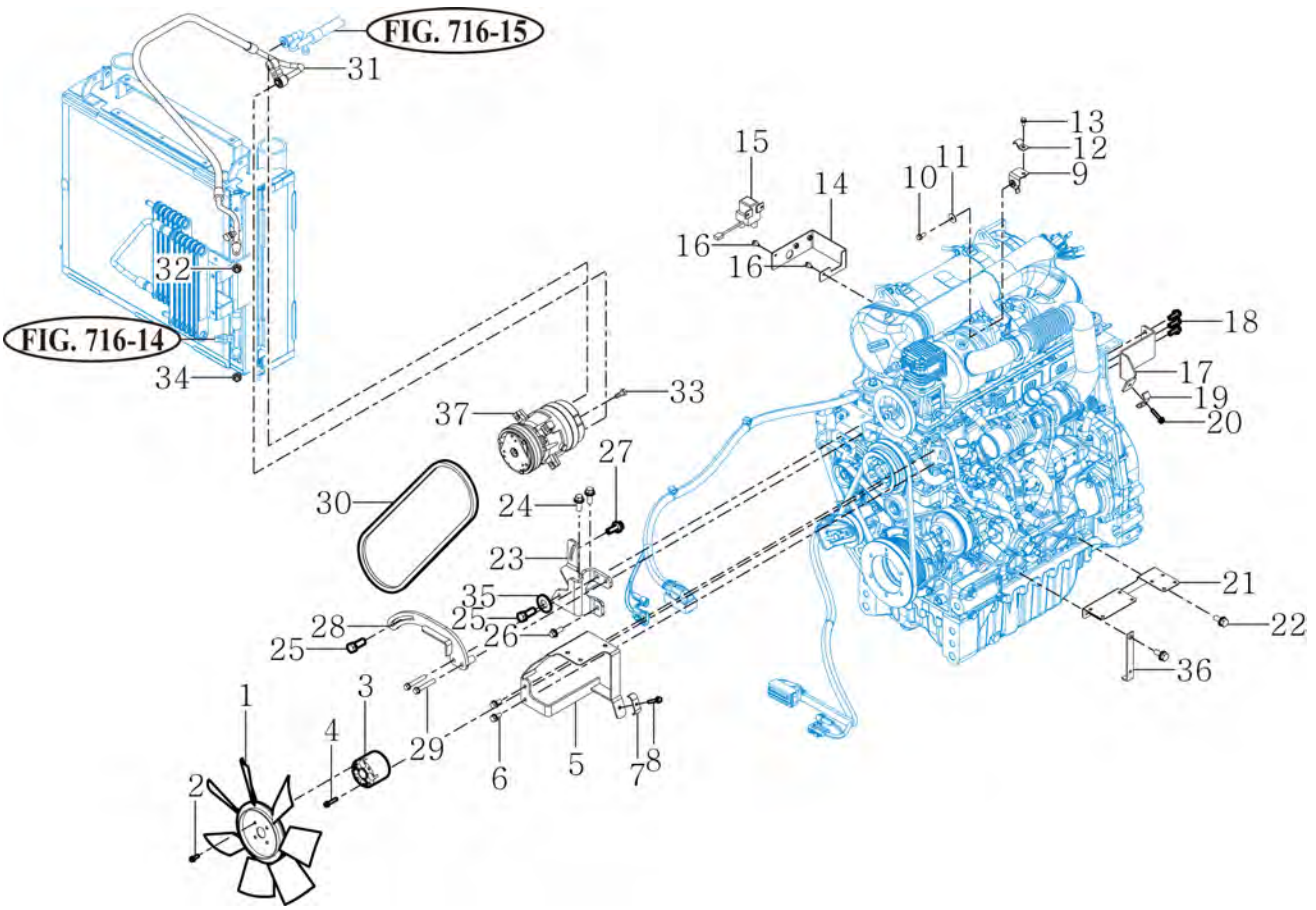
FIG. 716-15
31
32
FIG. 716-14
34
15
16
16
14
10
11
13
12
9
18
17
19
20
37
33
27
30
24
23
35
25
26
28
25
21
22
36
1
2
3
4
29
6
5
7
8

NOTE

FIG 716

T1104SC / T1054SC / T954SC


HEATER & AIR-CON (2)

P1


YEAR

2014




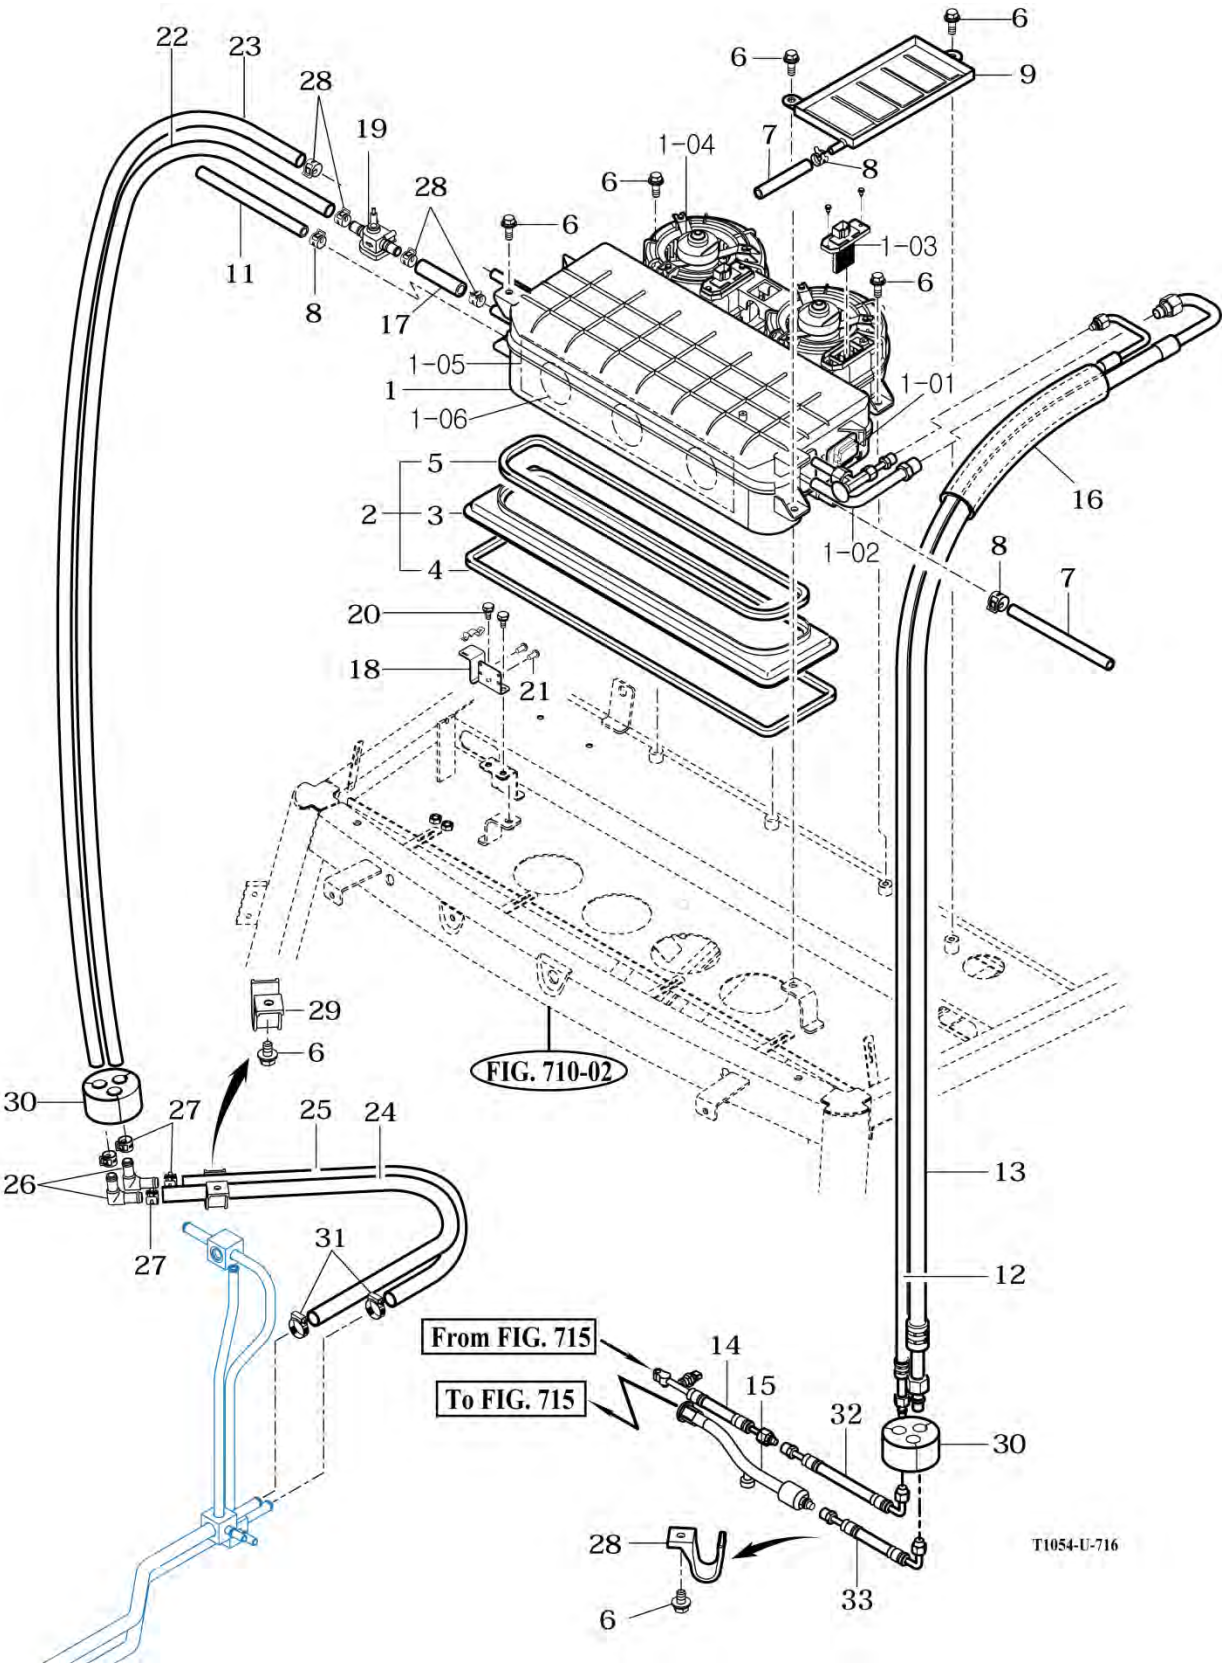

NOTE

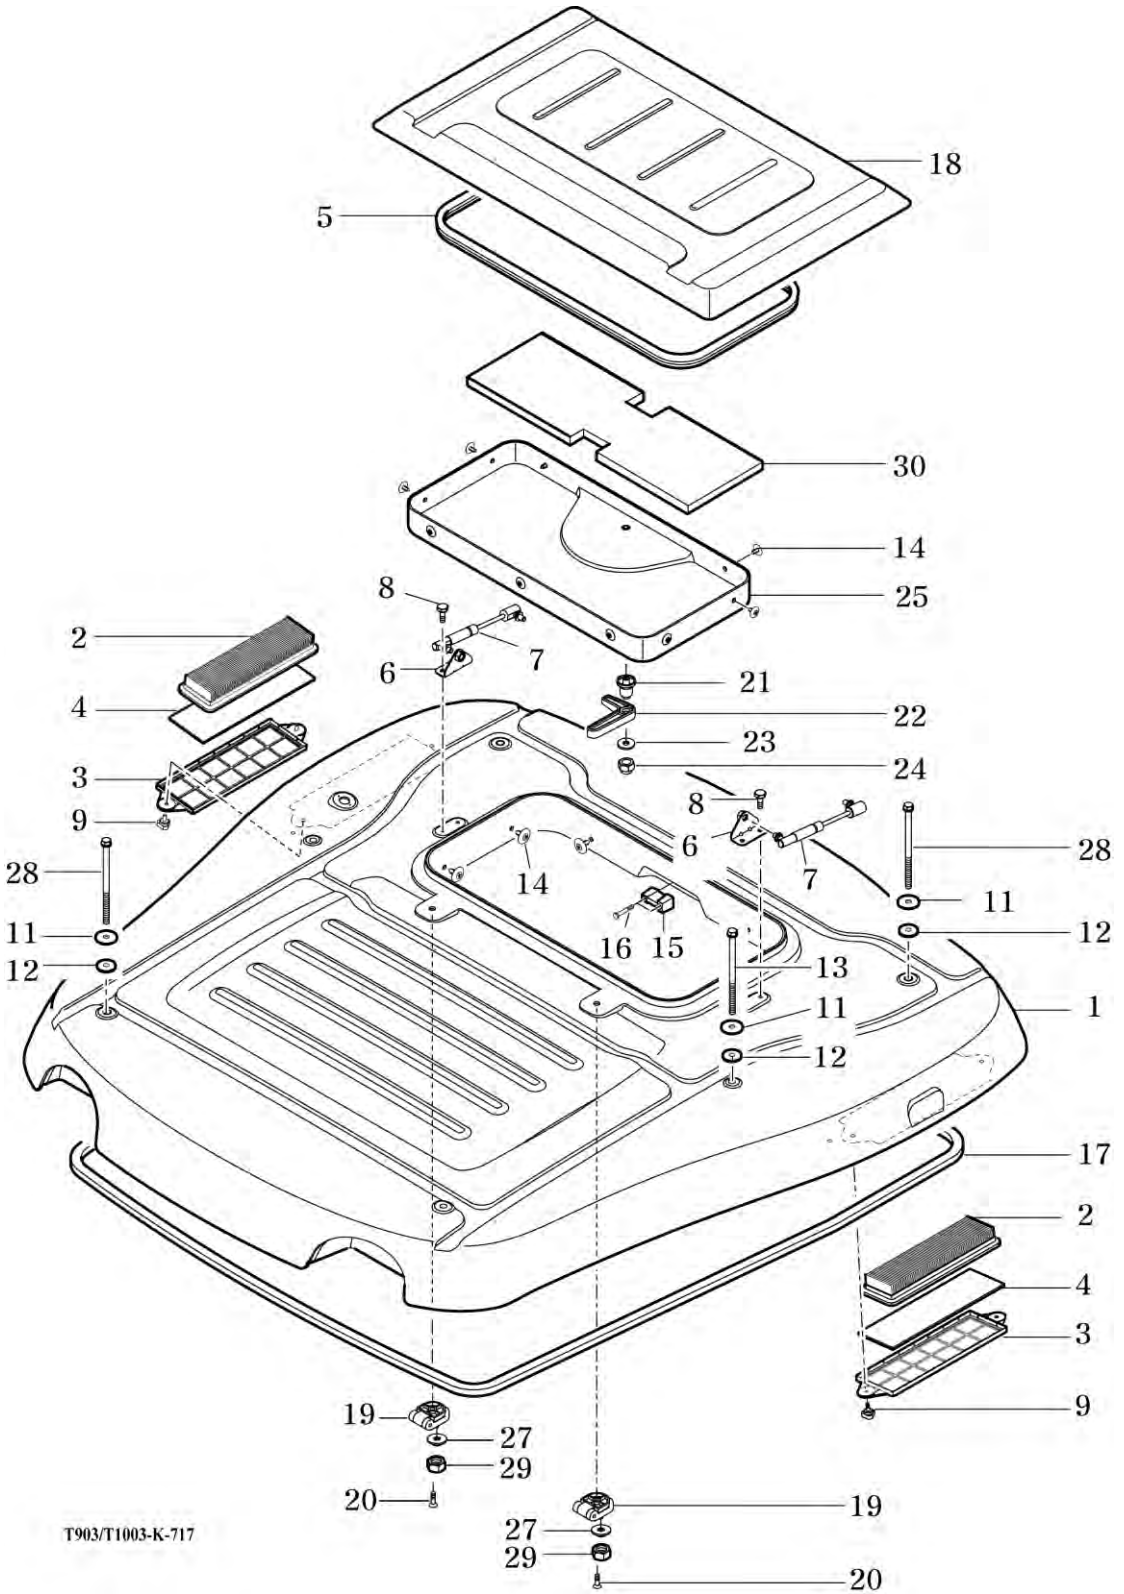
18
5
30
14
25
8
2
7
6
21
4
22
23
3
24
9
8
28
6
14
7
28
11
11
16
15
12
12
13
1
11
12
17
2
4
3
9
19
27
29
20
19
27
29
20
T903/T1003-K-717

NOTE

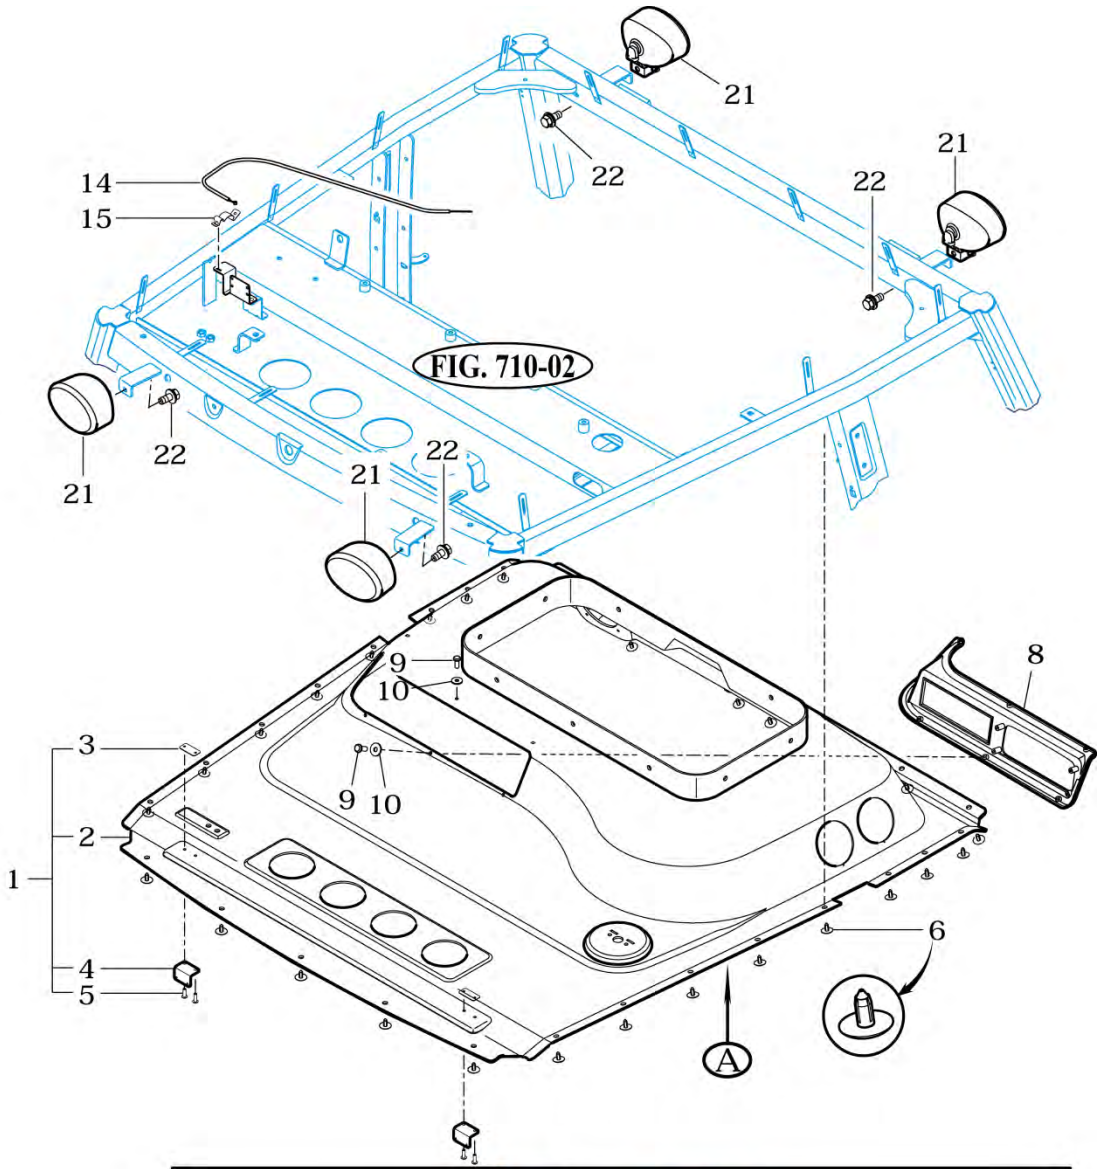
21
22
14
15
FIG. 710-02
1
2
3
4
5
6
7
8
9
10
13
18
19
19-1
20
A
VIEW-A
T1054SC-U-718

NOTE

FIG 719

T1104SC / T1054SC / T954SC


DASHCOVER

P1

YEAR

2014



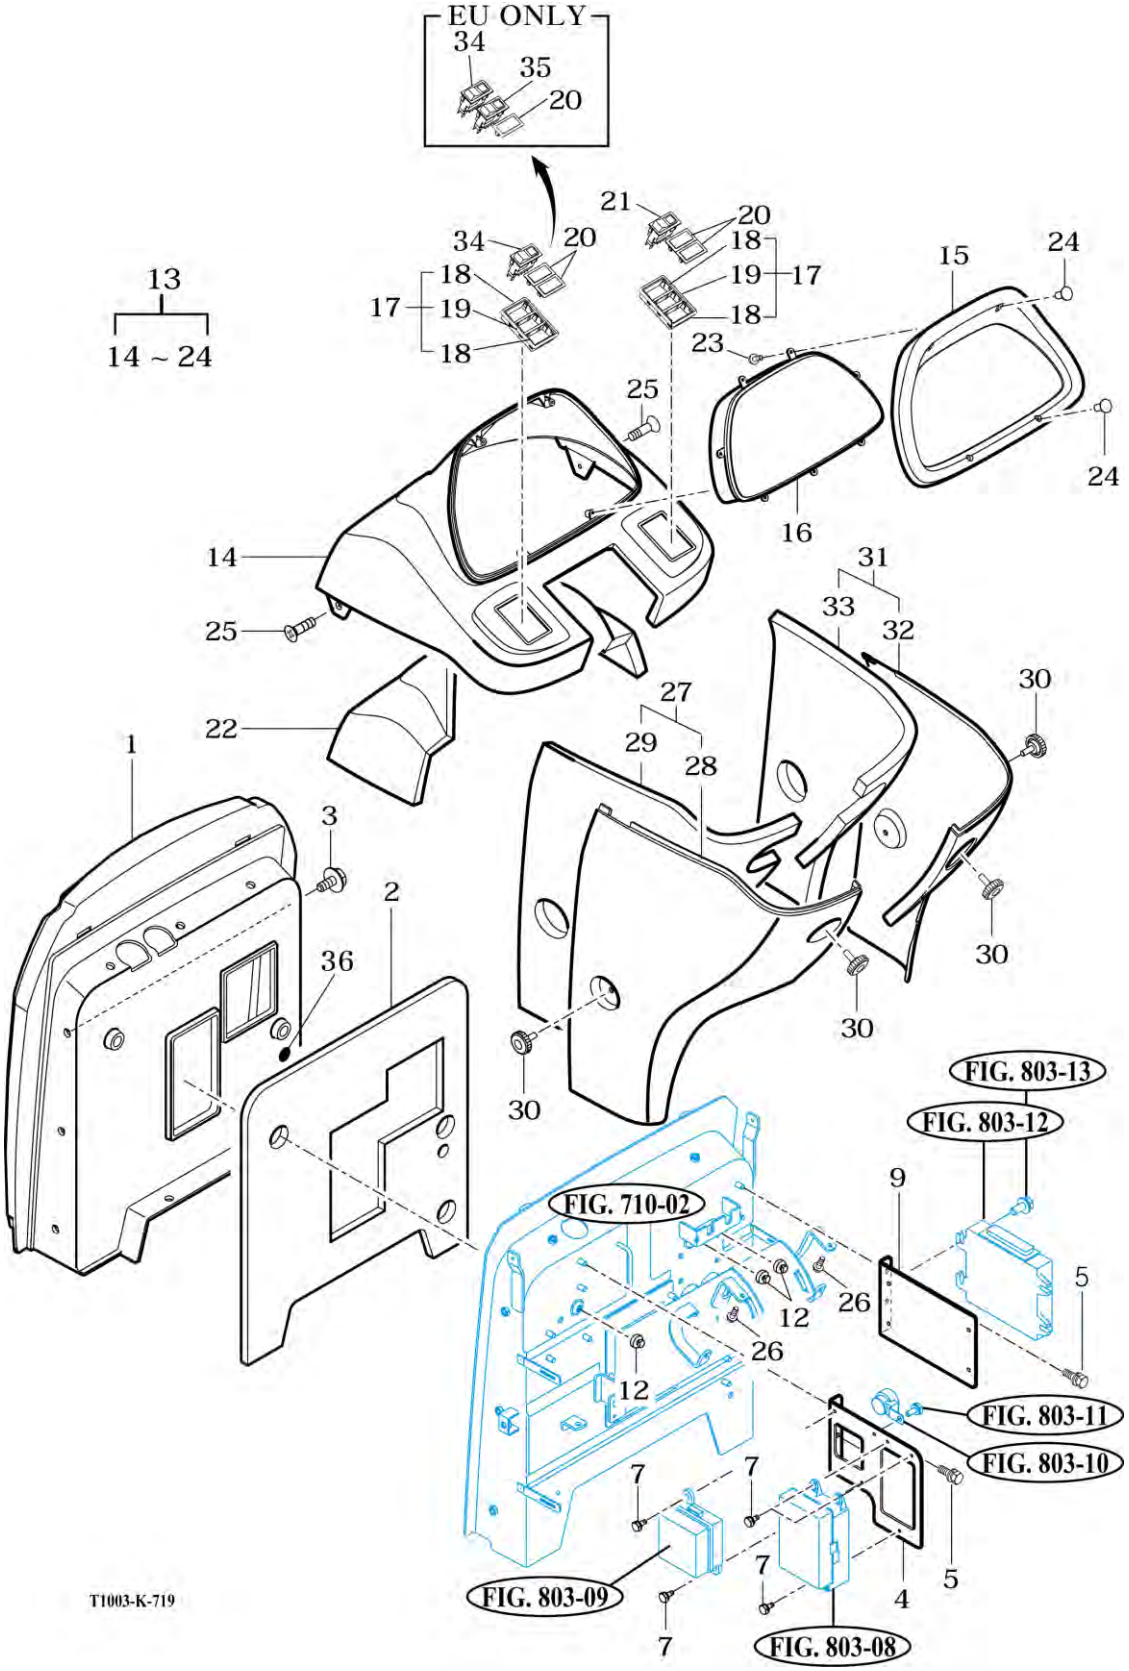

NOTE

FIG 720


T1104SC / T1054SC / T954SC

TANK ASSY, WASH

P1

YEAR

2014

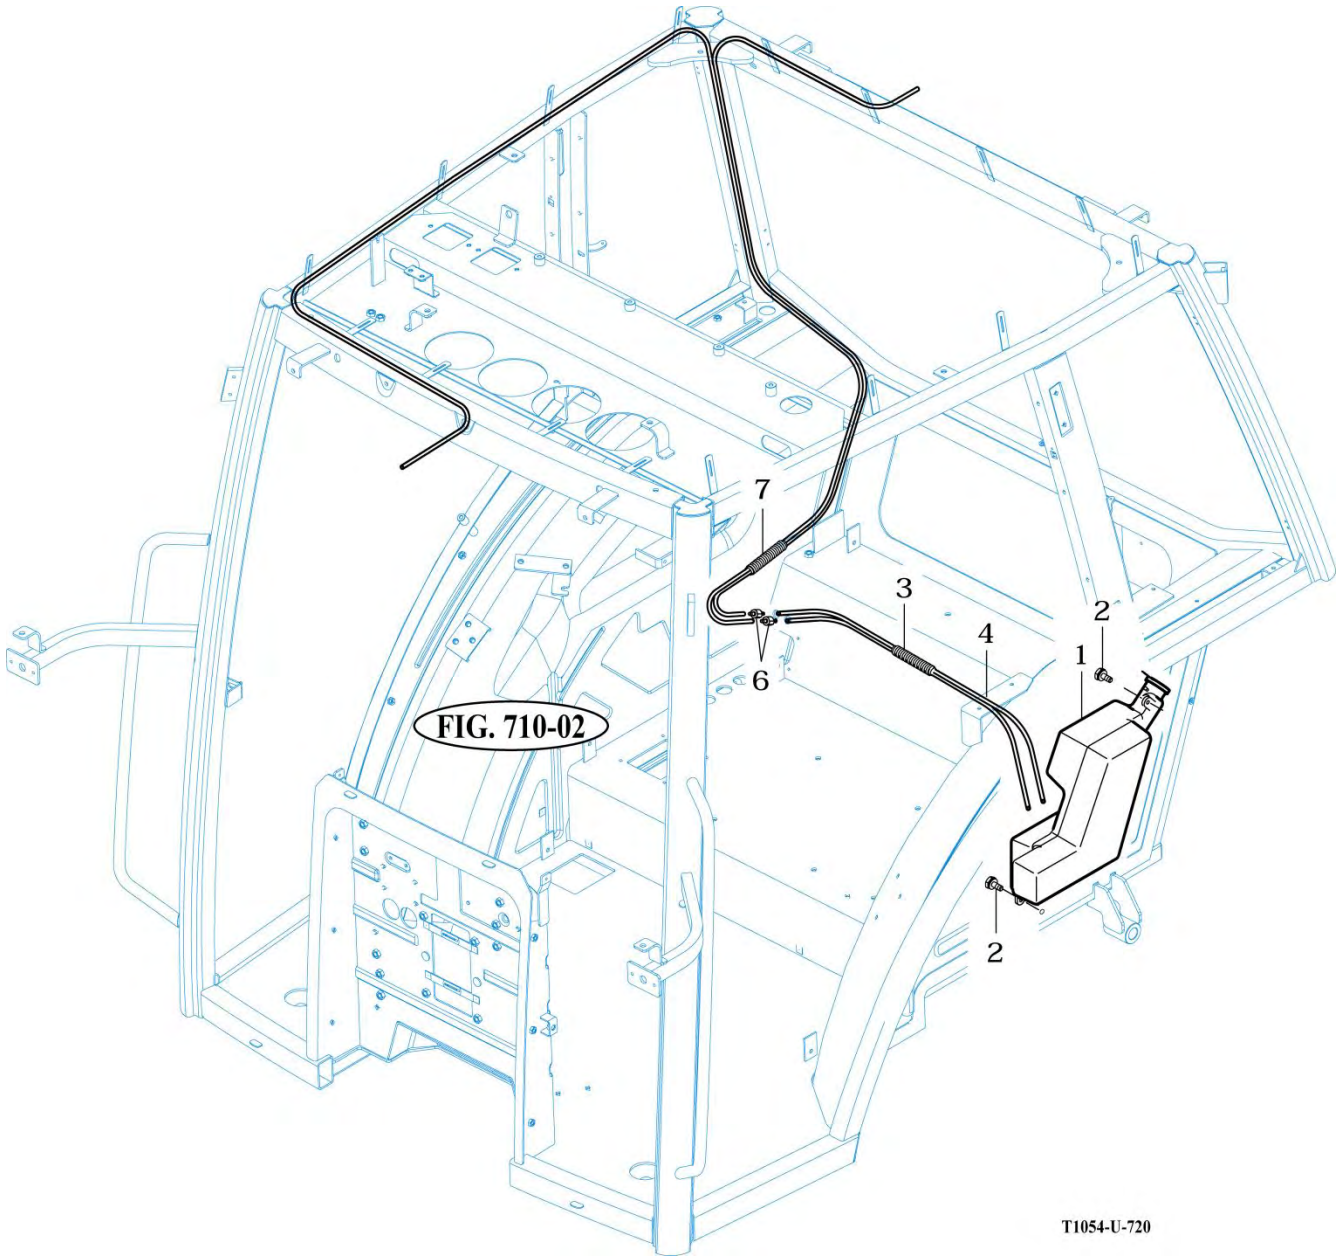

NOTE

FIG 721


T1104SC / T1054SC / T954SC

ROOM MIRROR ASSY

P1

YEAR

2014

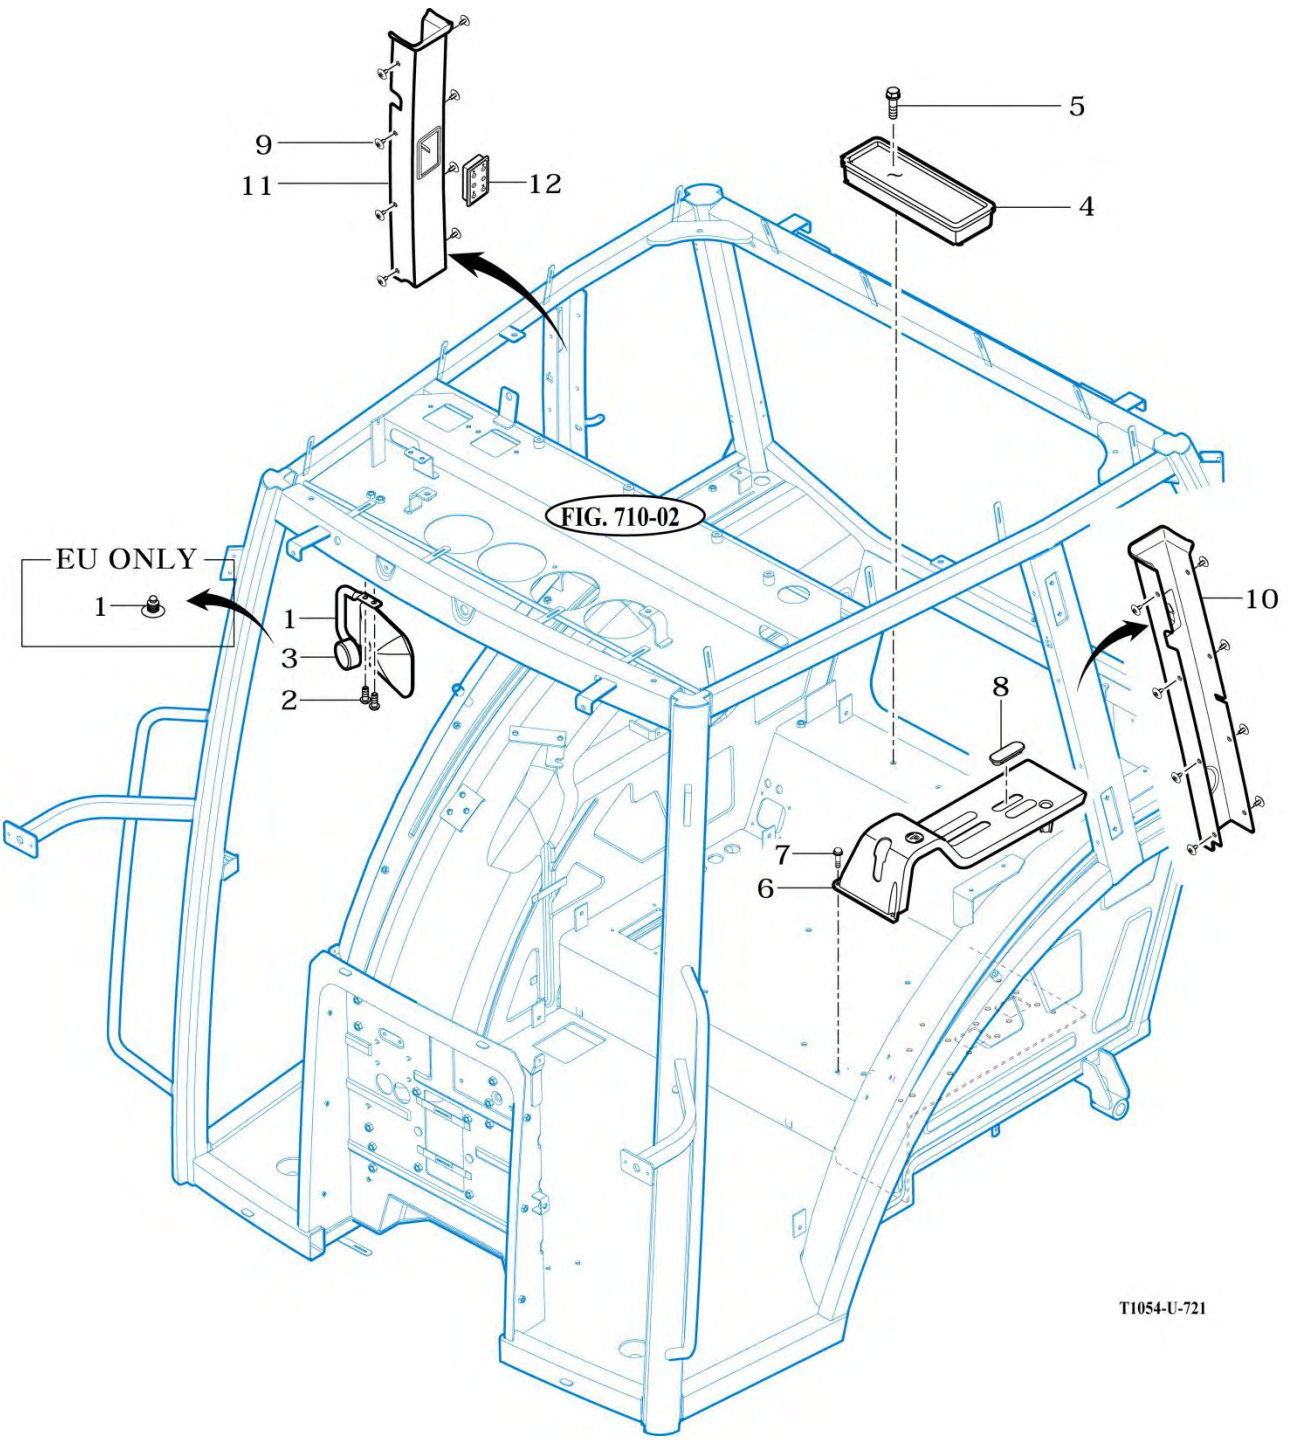

NOTE

FIG 722

T1104SC / T1054SC / T954SC


COVER-FENDER & JOYSTICK LEVER

P1

YEAR

2014



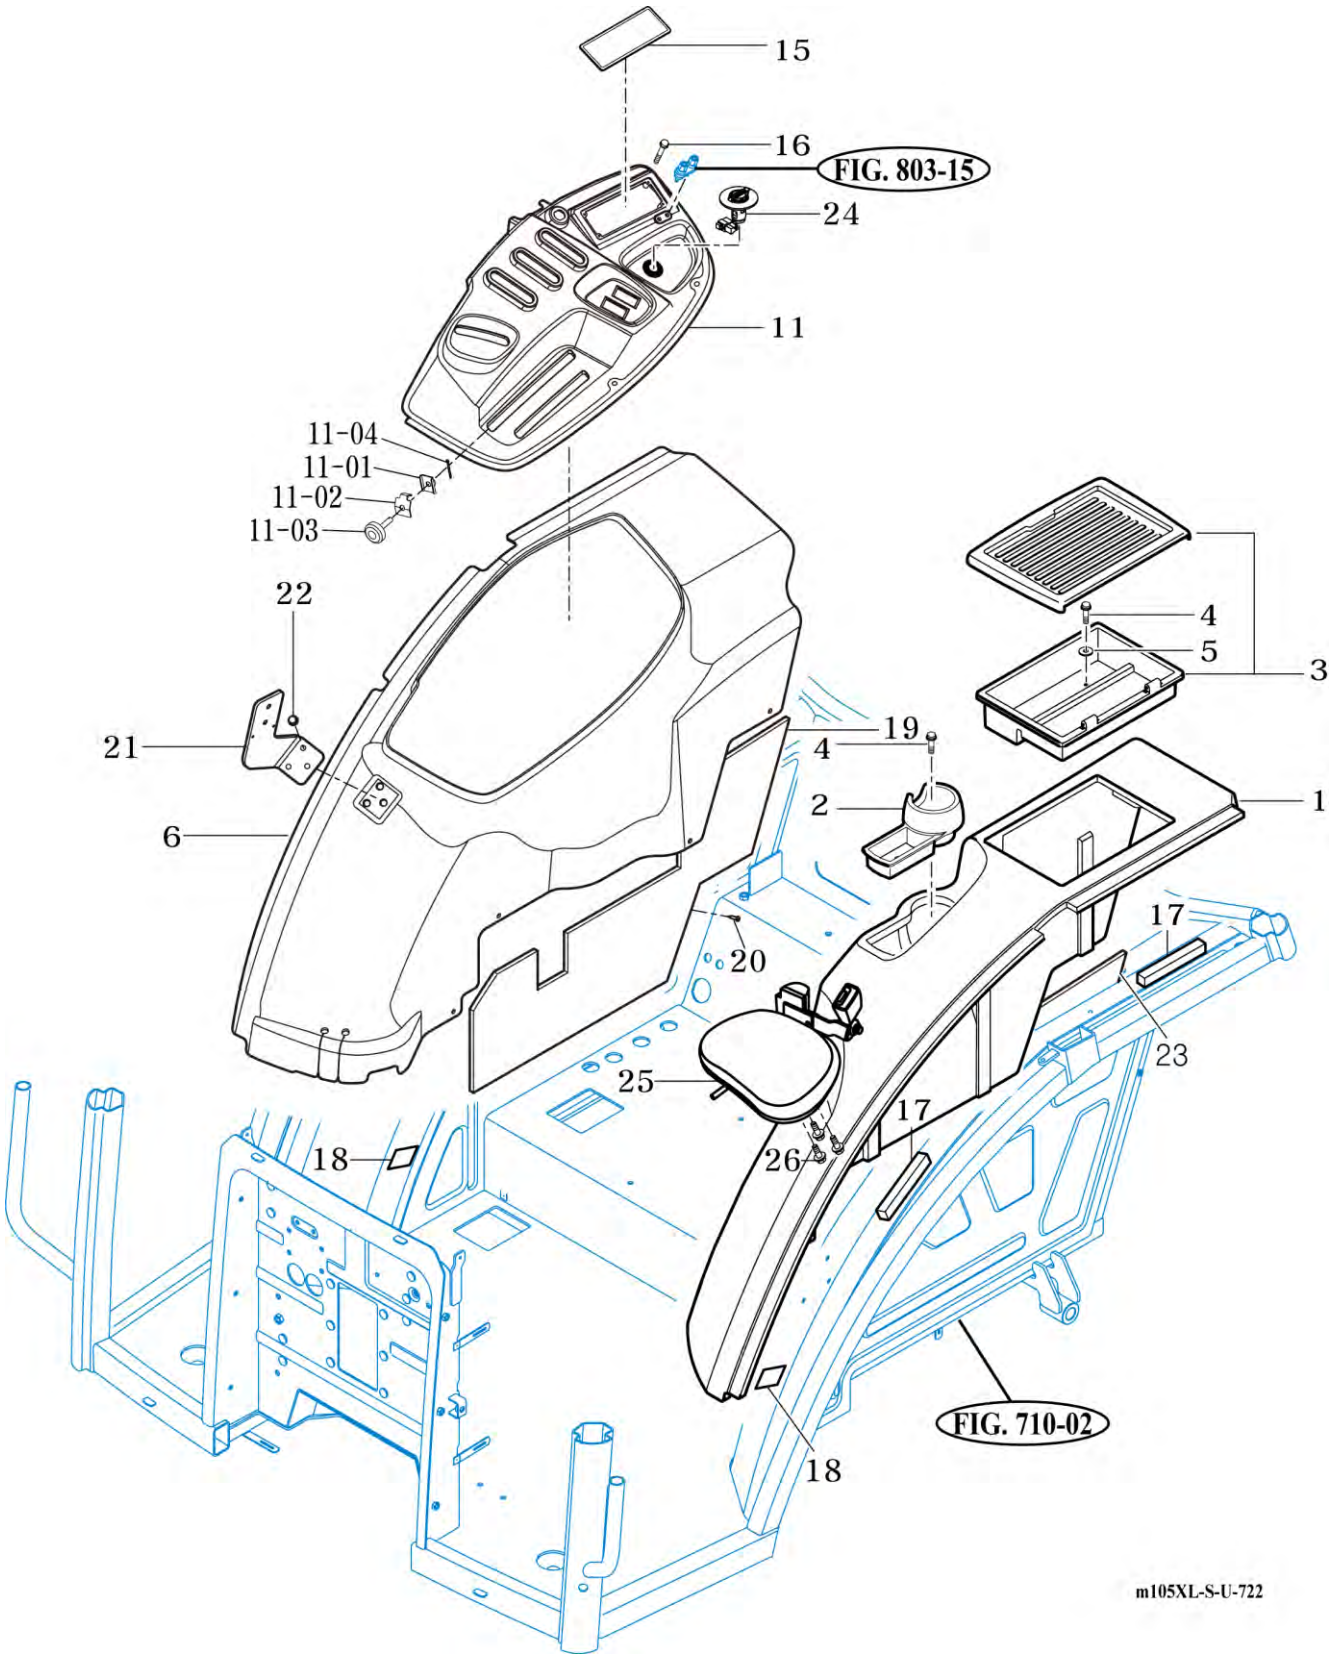

NOTE

FIG 801


T1104SC / T1054SC / T954SC


BATTERY & MOUNTING

P1

YEAR

2014

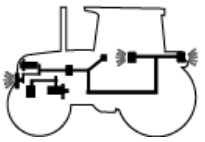

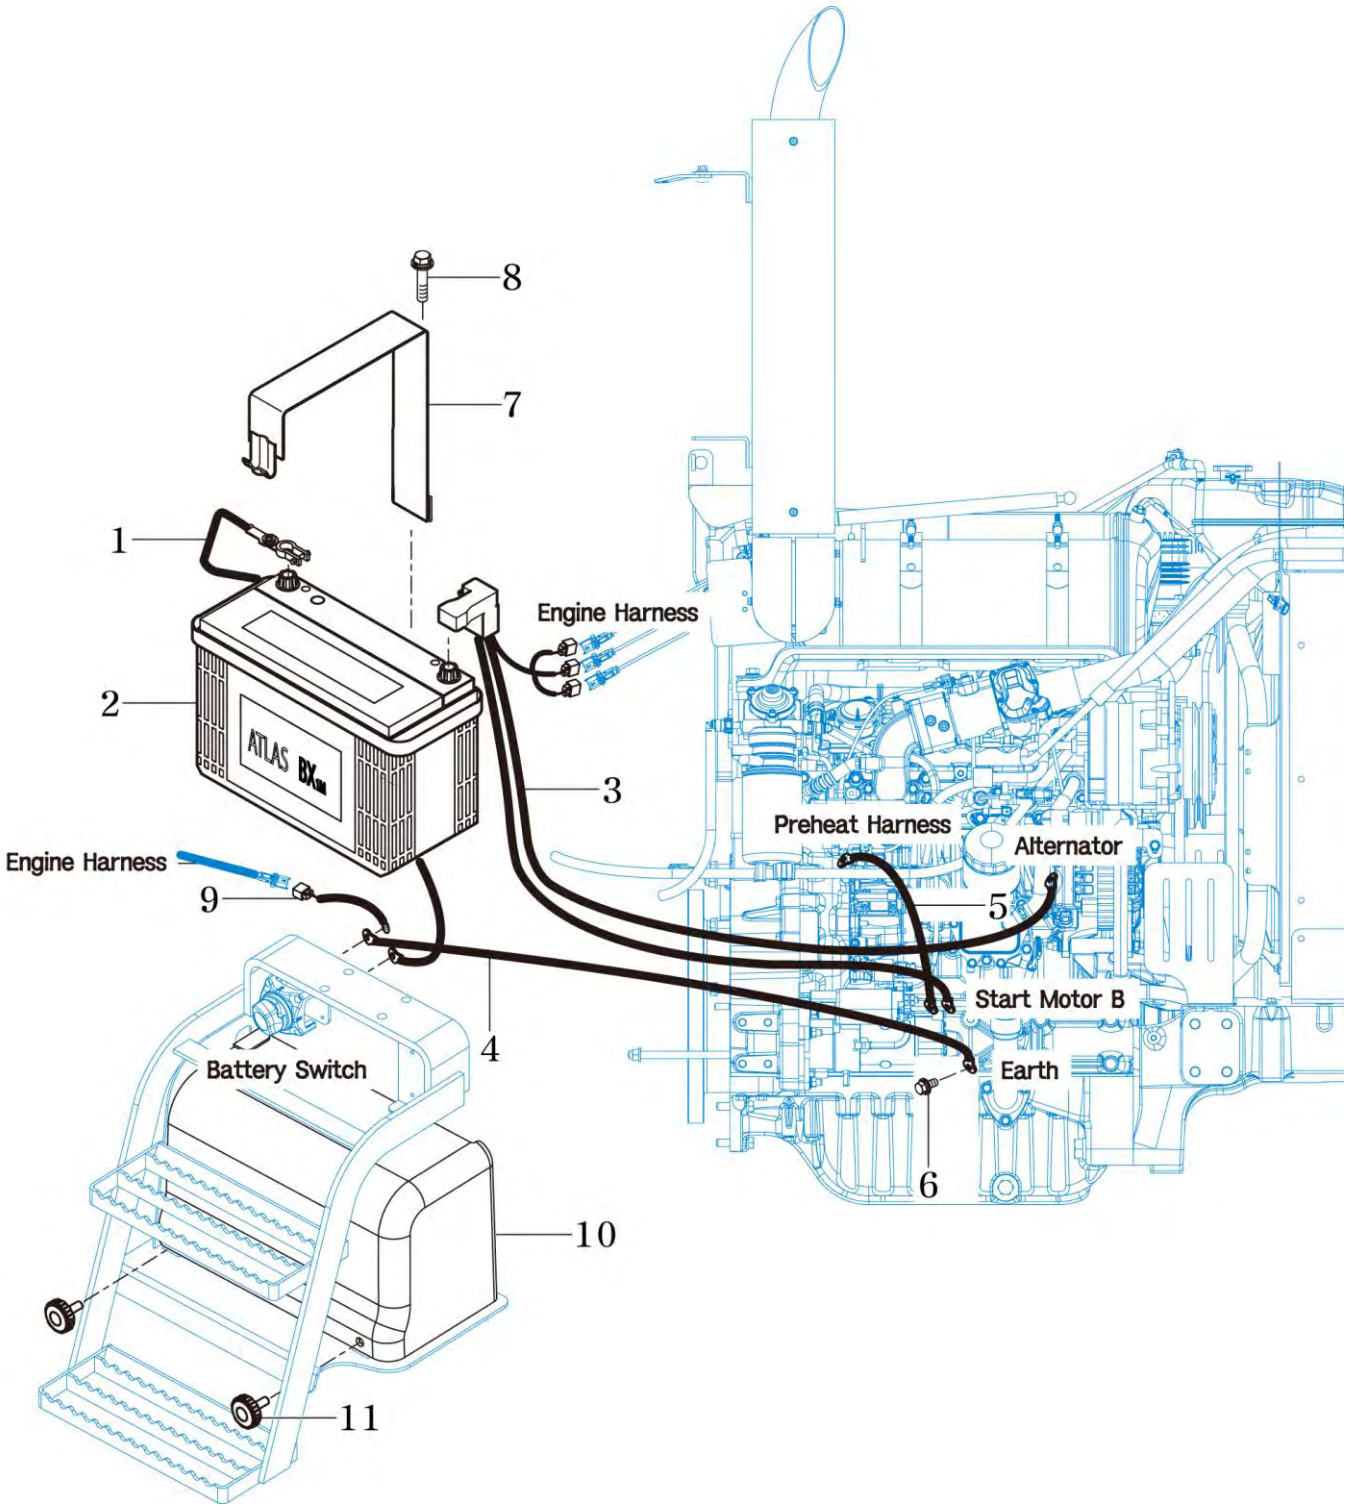

NOTE

FIG 802


T1104SC / T1054SC / T954SC

ELECTRIC SYSTEM (1)


P1

YEAR

2014

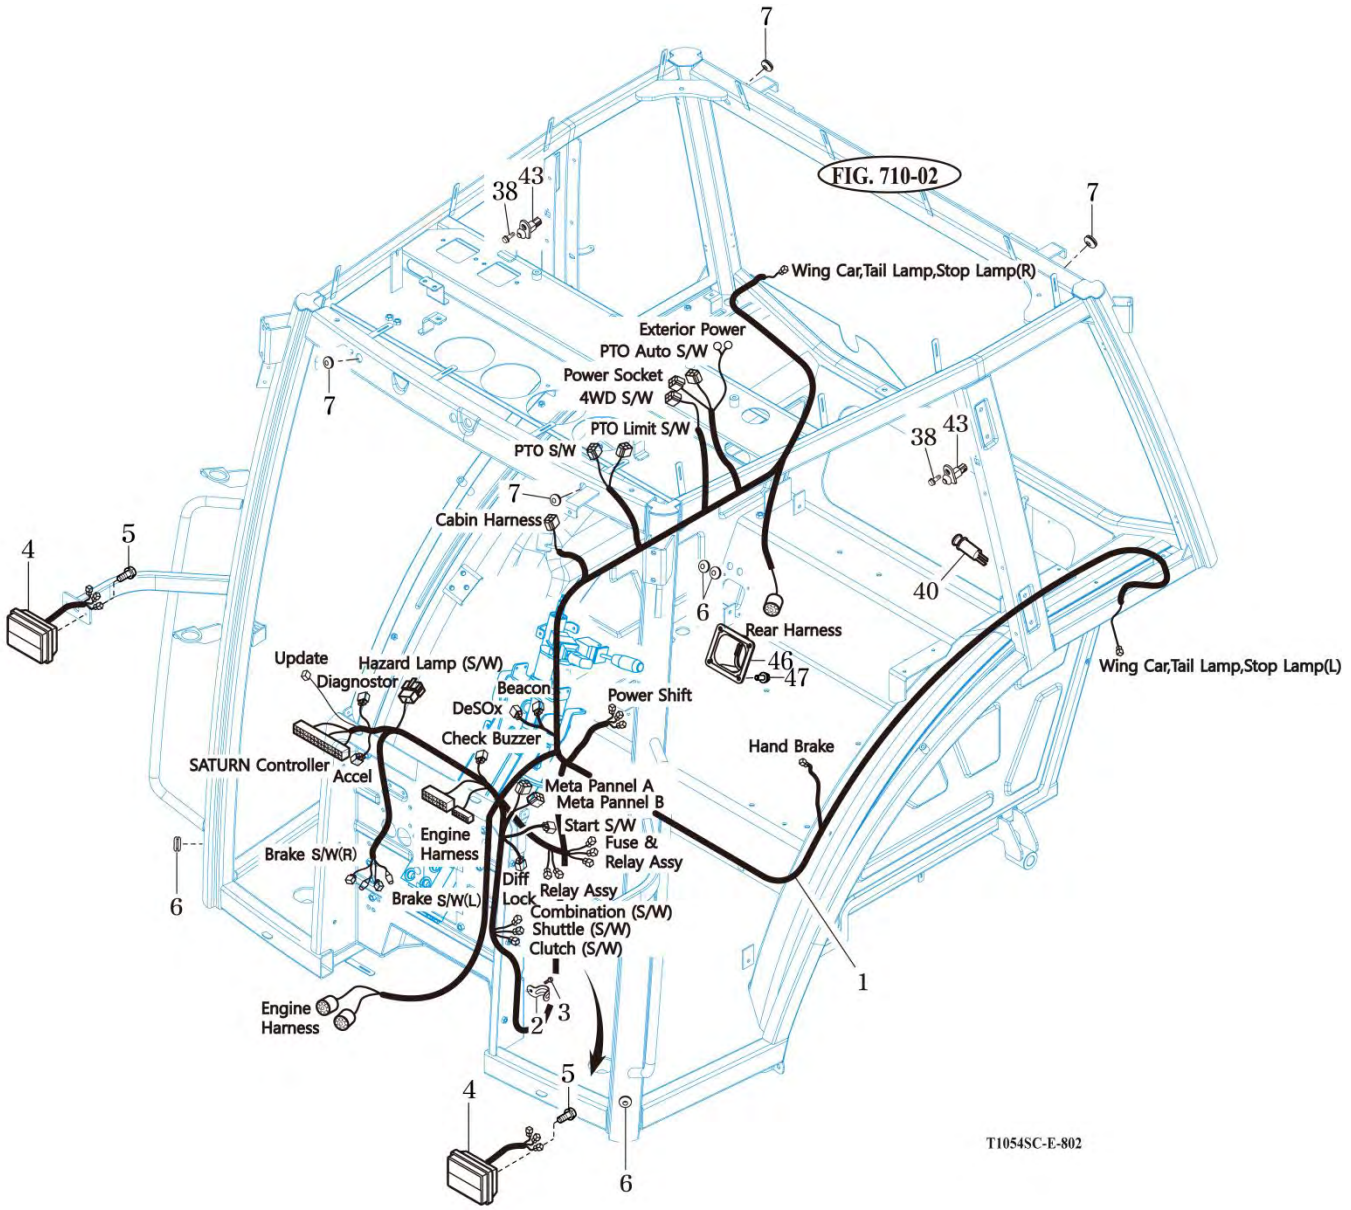


NOTE

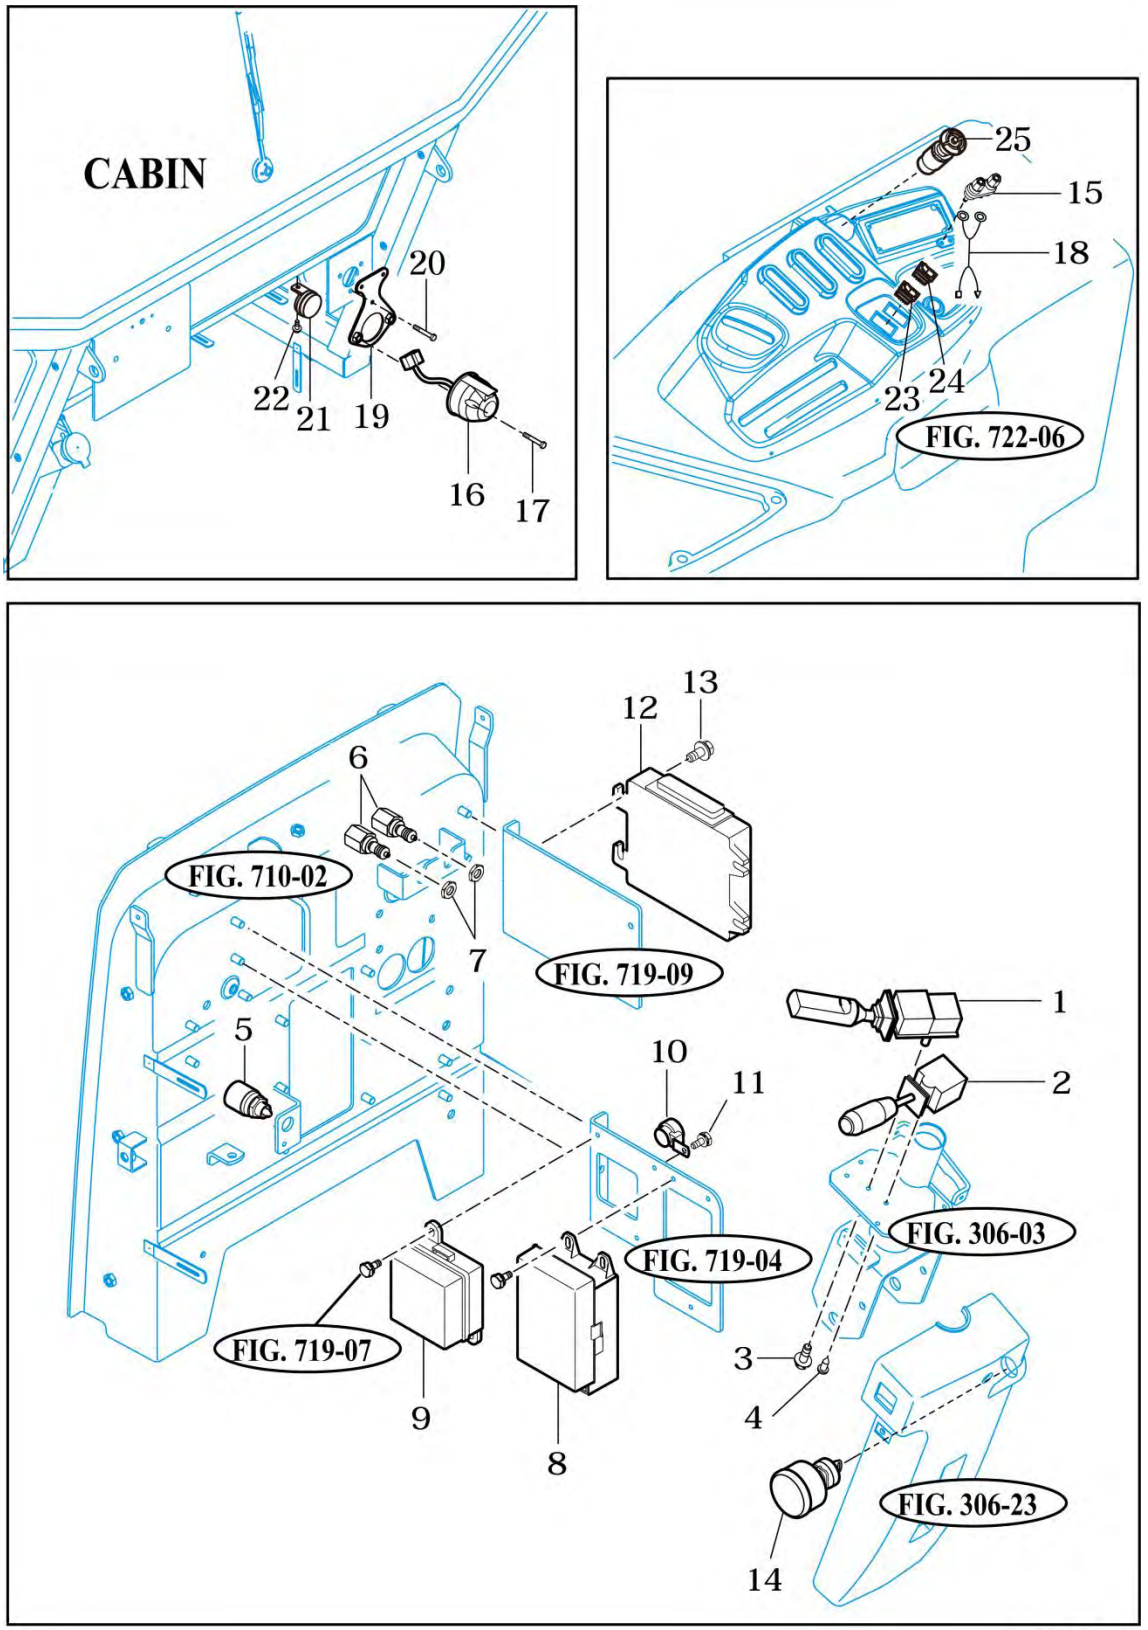

T1054-E-804

NOTE

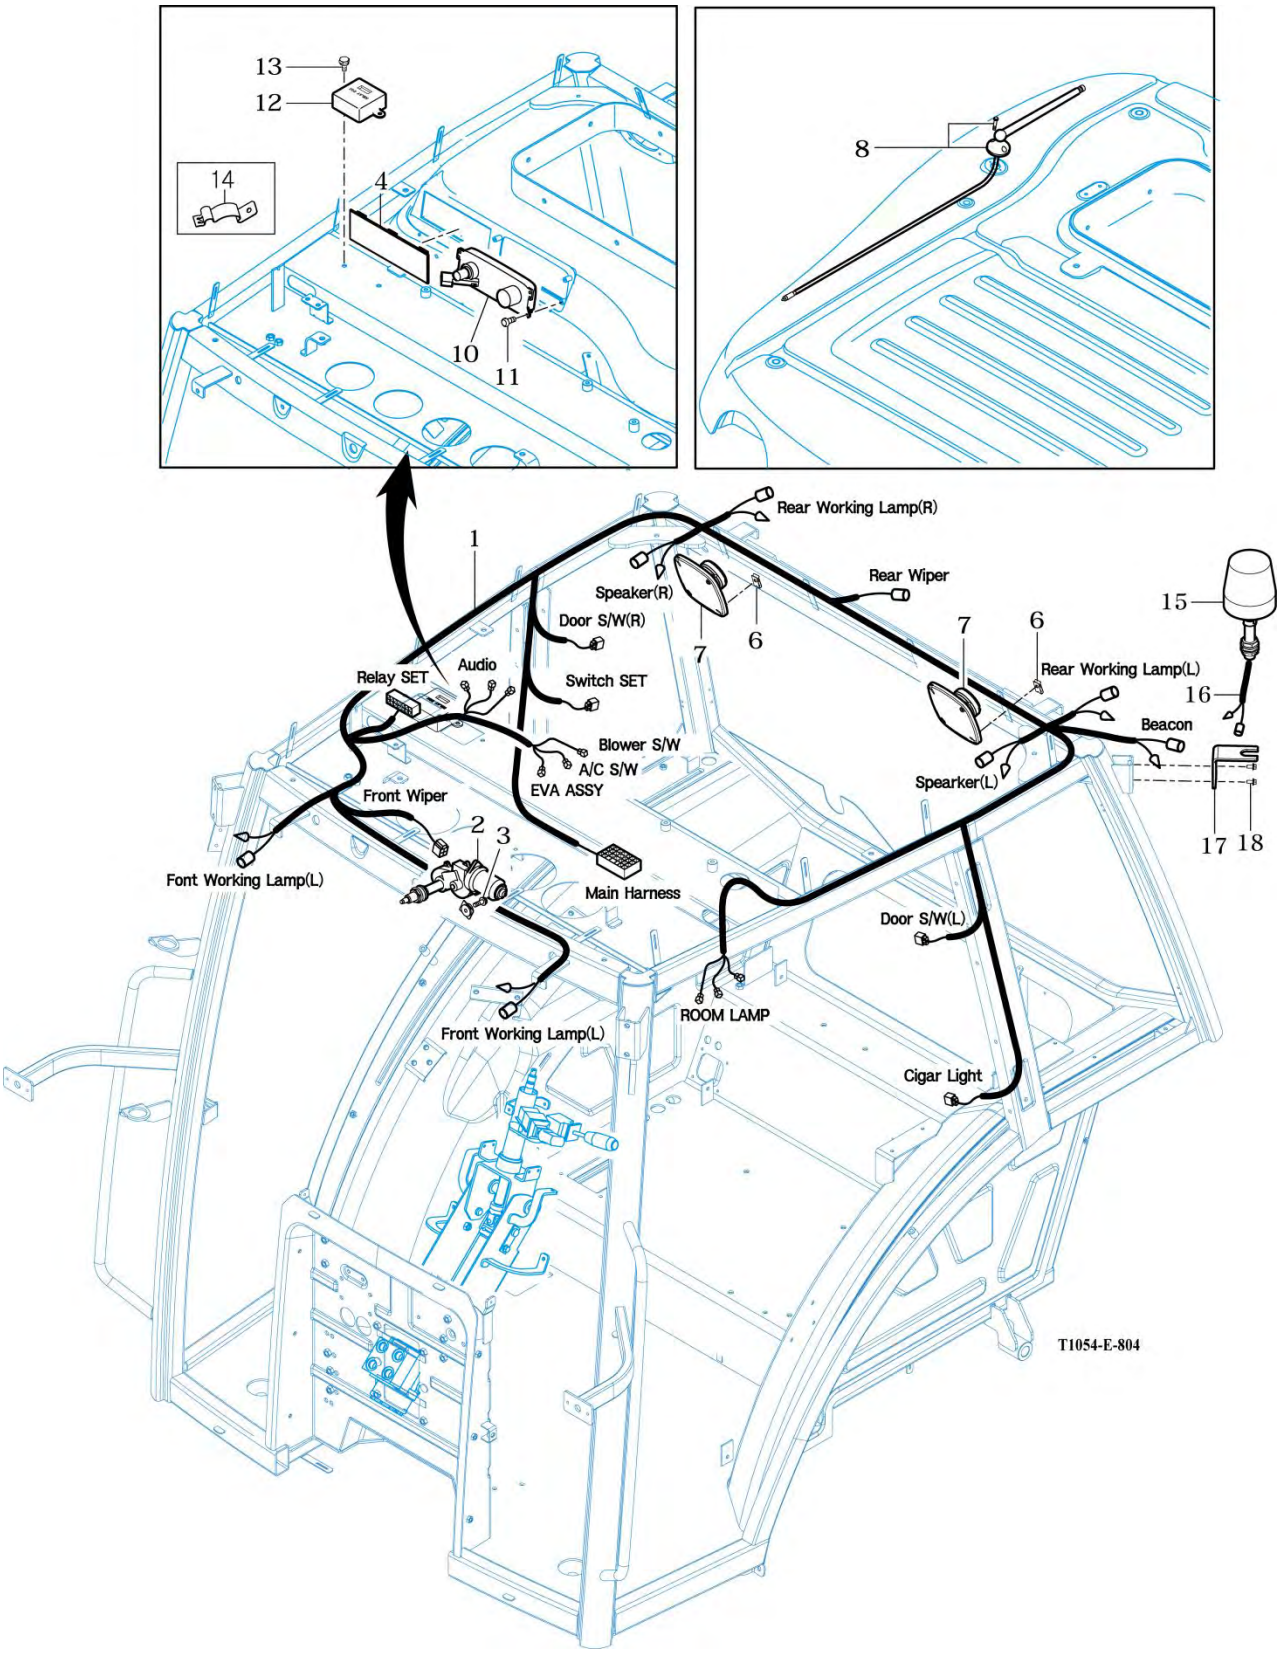
13
12
14
4
10
11
8
1
Rear Working Lamp(R)
Speaker(R)
Door S/W(R)
Rear Wiper
7
6
15
16
Rear Working Lamp(L)
Beacon
Relay SET
Audio
Switch SET
Blower S/W
A/C S/W
EVA ASSY
Front Wiper
Spearker(L)
17
18
2
3
Font Working Lamp(L)
Main Harness
Door S/W(L)
ROOM LAMP
Front Working Lamp(L)
Cigar Light
T1054-E-804

NOTE

FIG 805


T1104SC / T1054SC / T954SC


ELECTRIC SYSTEM (4)

P1


YEAR

2014

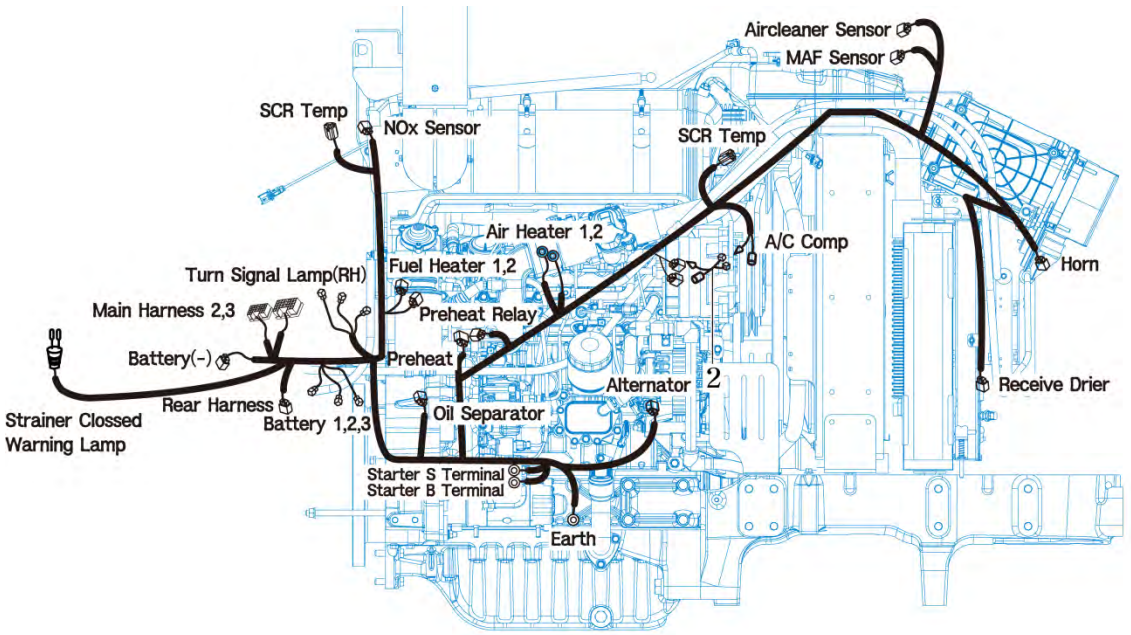

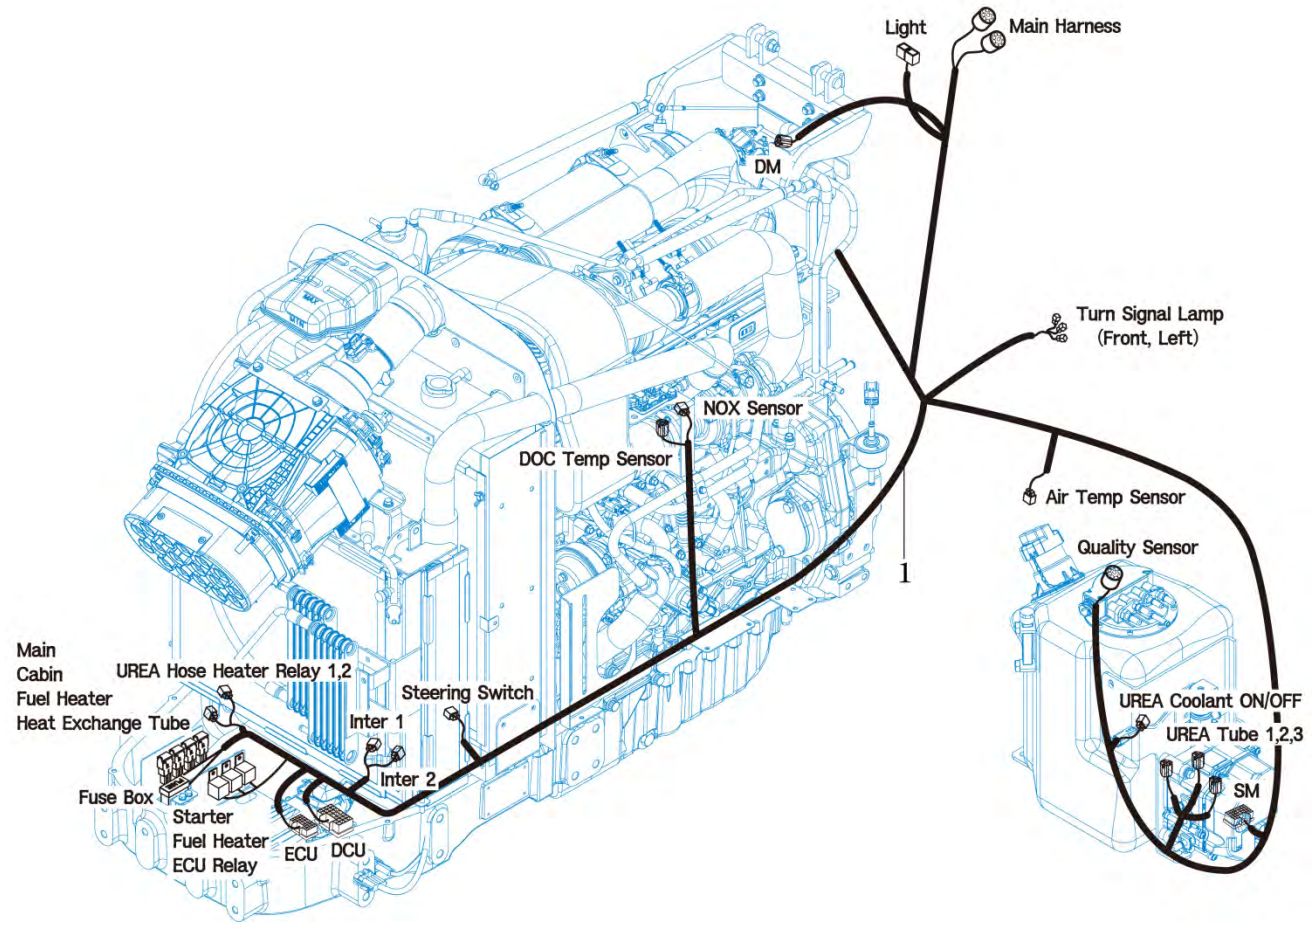

NOTE

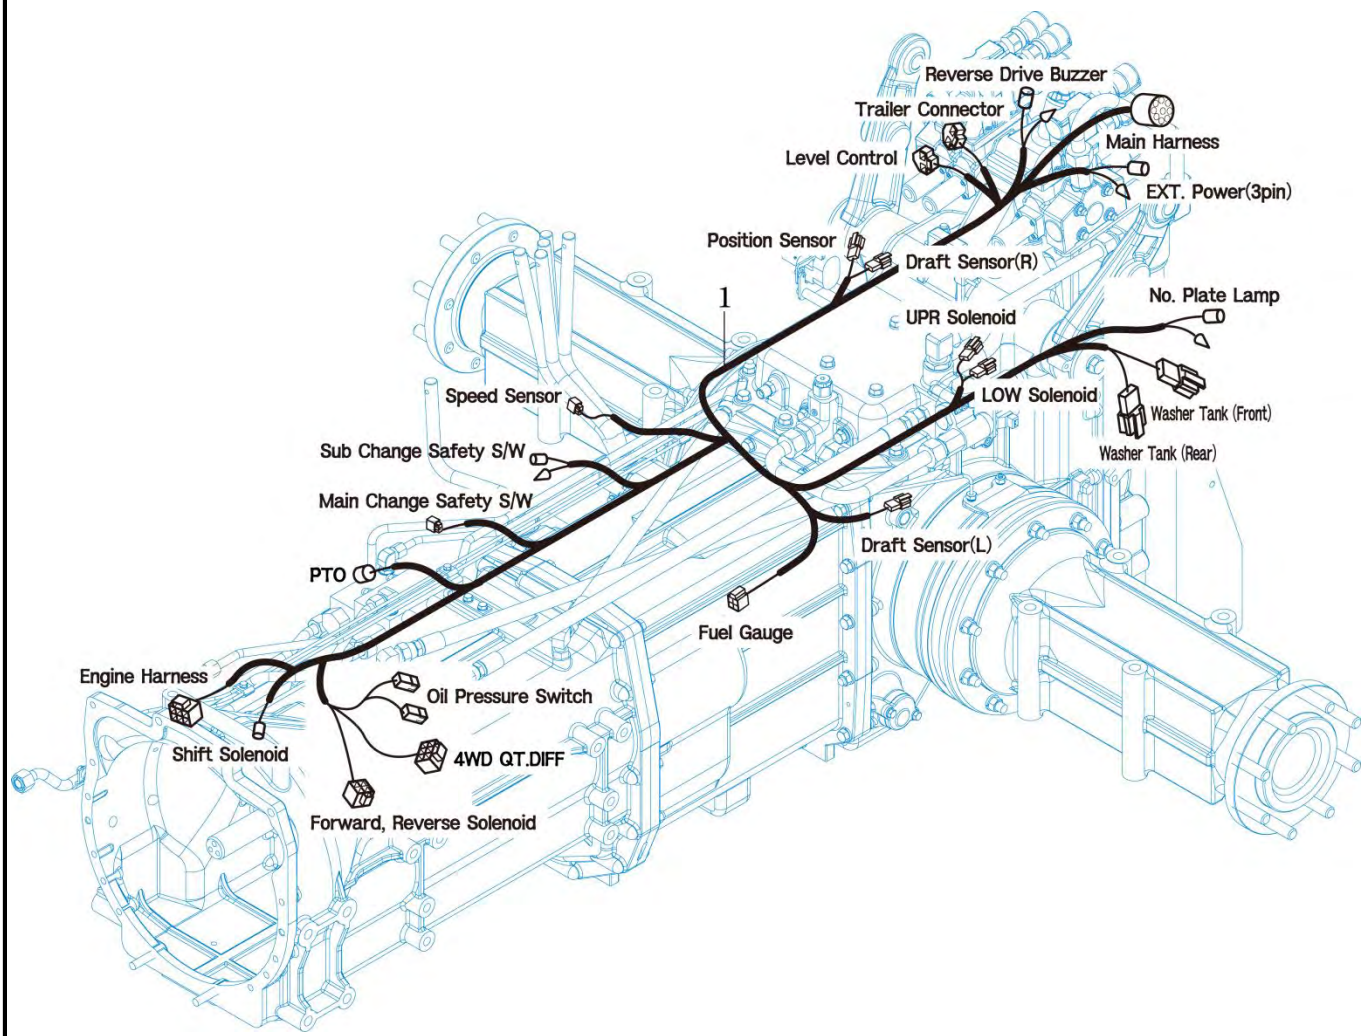
Reverse Drive Buzzer
Trailer Connector
Main Harness
Level Control
EXT. Power(3pin)
Position Sensor
Draft Sensor(R)
1
No. Plate Lamp
UPR Solenoid
Speed Sensor
LOW Solenoid
Washer Tank (Front)
Sub Change Safety S/W
Washer Tank (Rear)
Main Change Safety S/W
Draft Sensor(L)
PTO
Fuel Gauge
Engine Harness
Oil Pressure Switch
Shift Solenoid
4WD QT.DIFF
Forward, Reverse Solenoid

NOTE

FIG 807


T1104SC / T1054SC / T954SC

ELECTRIC SYSTEM (6)

P1

YEAR

2014

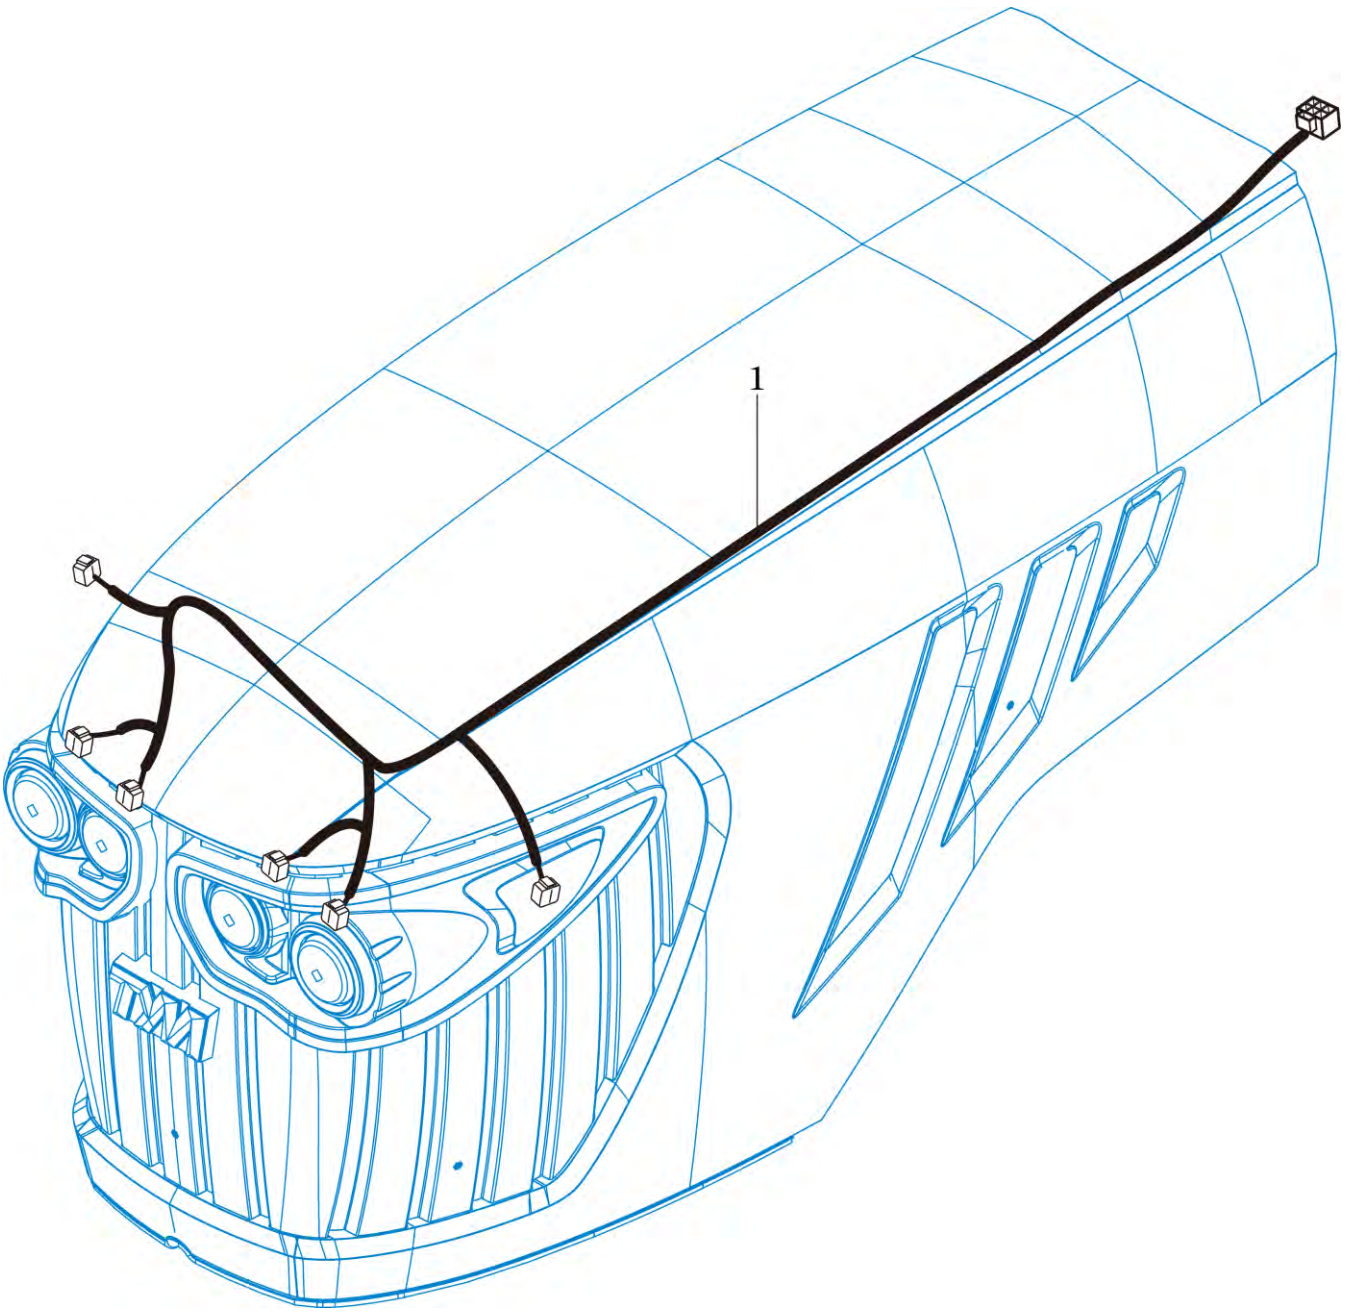

NOTE

FIG 901


T1104SC / T1054SC / T954SC


TOOL & ACCESSORY

P1

YEAR

2014

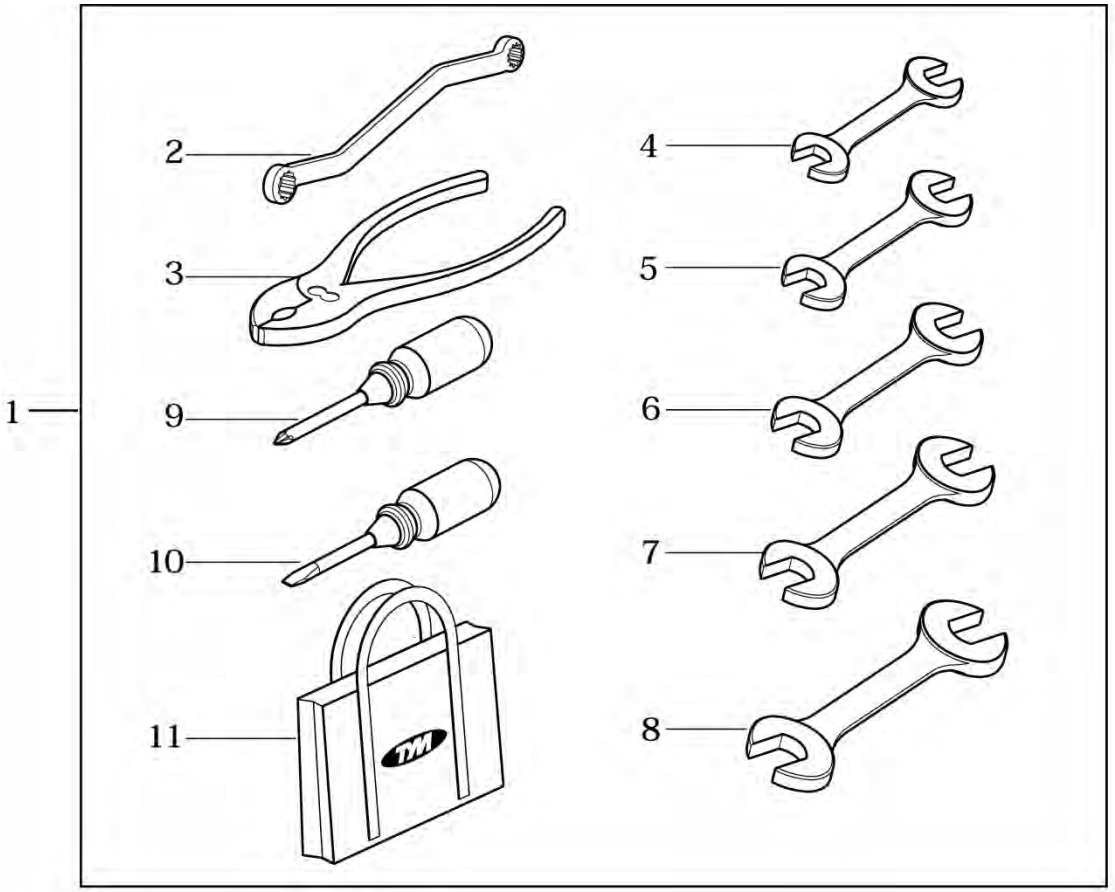

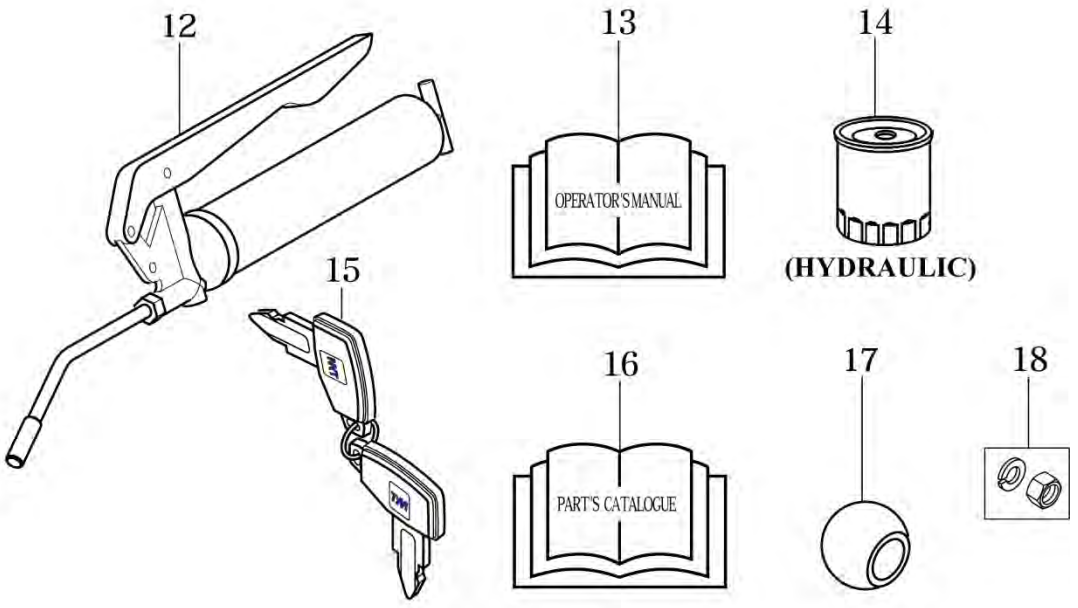

T1054-U-901

NOTE

FIG 902


T1104SC / T1054SC / T954SC


WEIGHT

P1

YEAR

2014

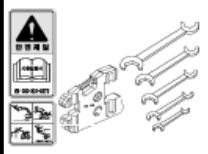

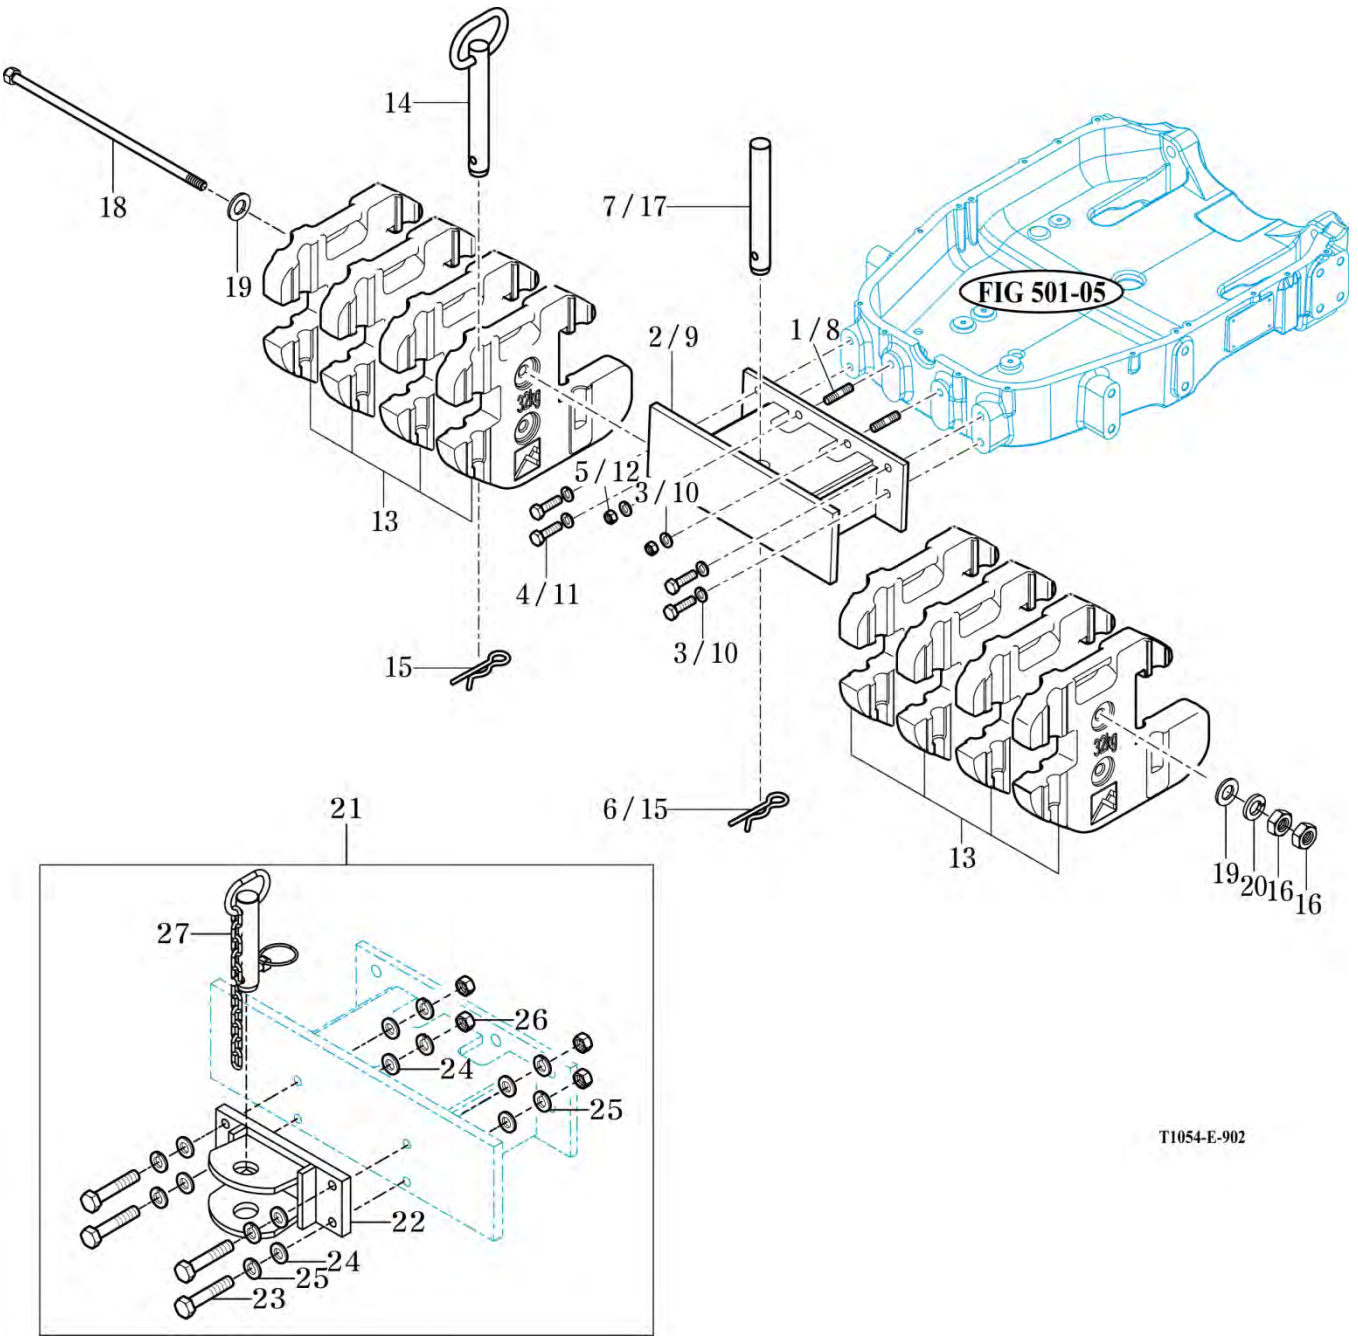

NOTE

FIG 903A


T1104SC / T1054SC / T954SC


LABEL

P1


YEAR


2014

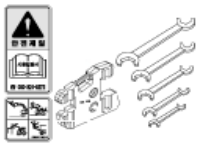

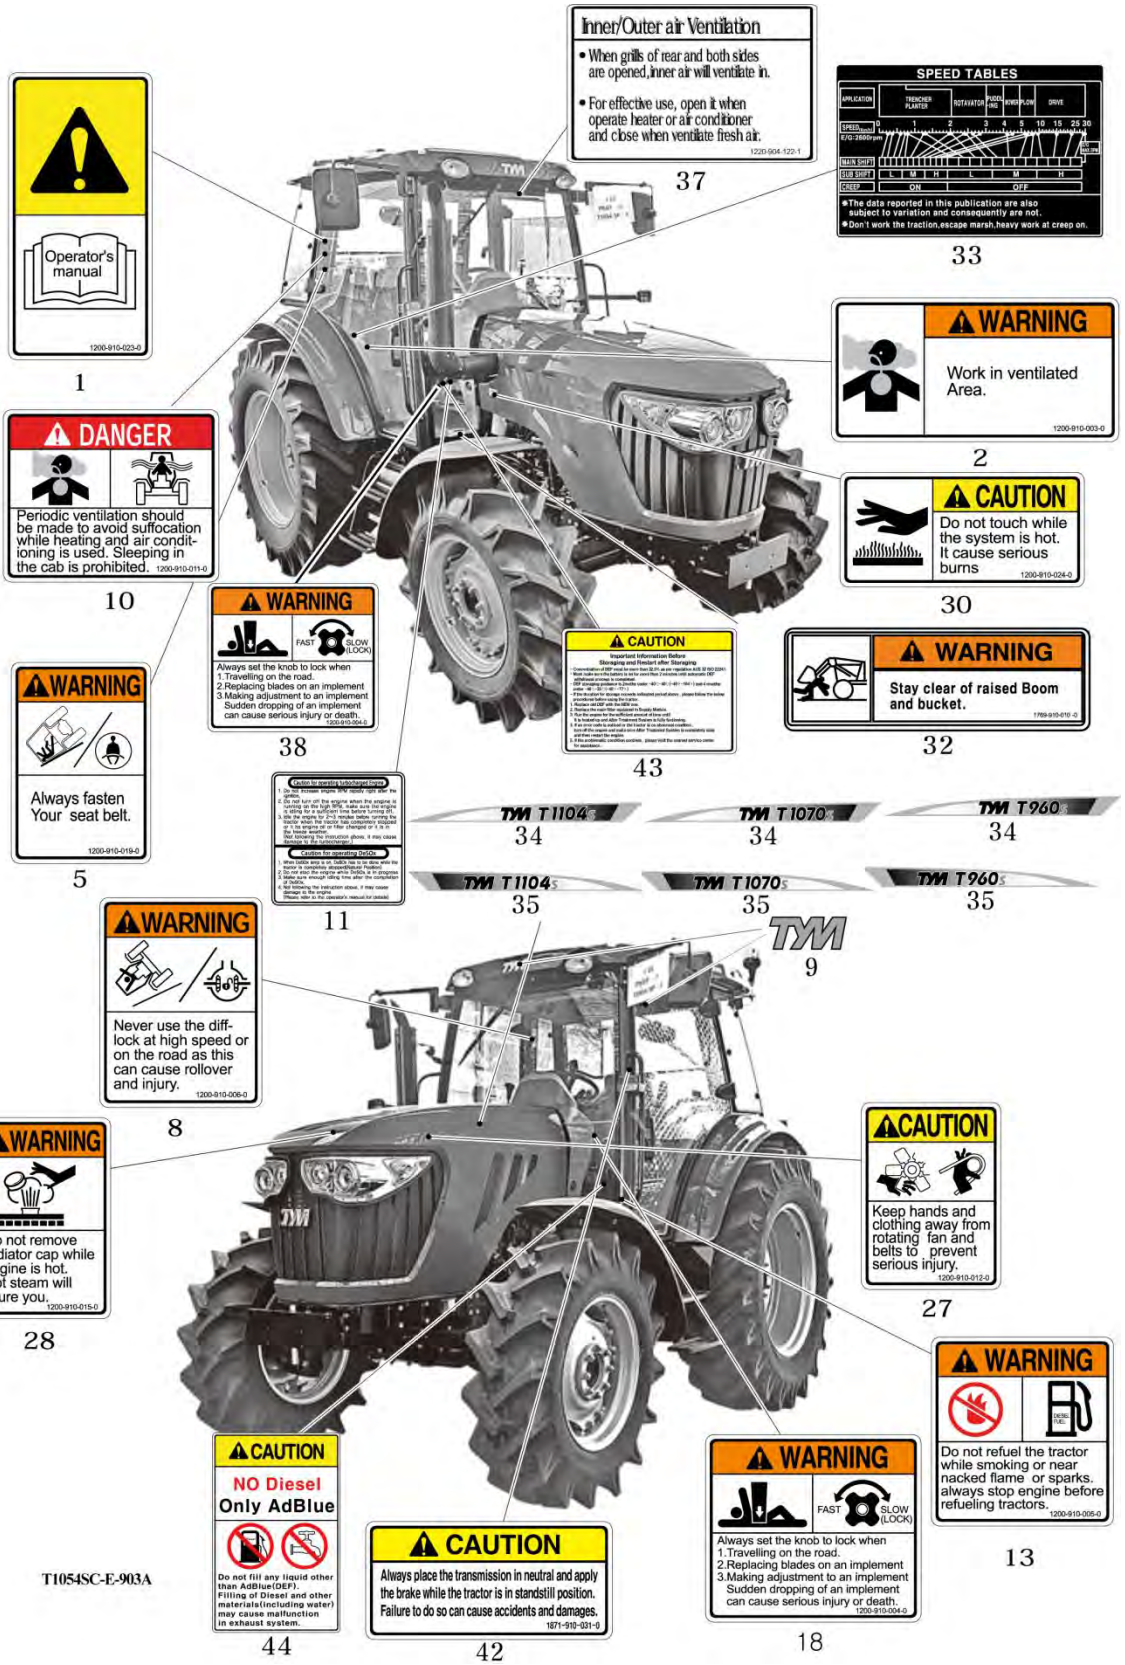

NOTE

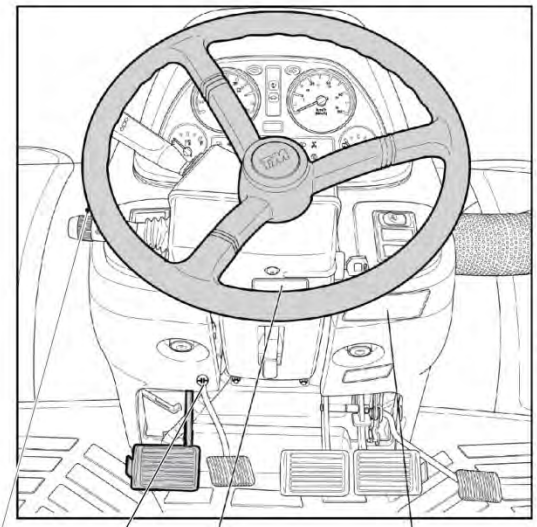

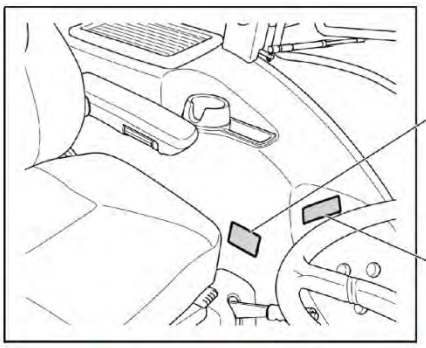

WARNING
Always apply the park brake when parking.
Failure to do so can cause accidents and damages.
1

DANGER
Do not ride except operator.
2

DANGER
Rotating driveline contact can cause death.
KEEP AWAY!
Keep all drive line. Tractor and equipment shields in place during operation.
3

WARNING
Attach implements and trailers to the tractor only using the prescribed drawbar or hitch.
4



WARNING
Do not adjust the tilt handle when traveling.
5

WARNING
Brake pedals must always be locked together when travelling on the highway. This will ensure uniform braking and provide maximum stopping ability sharp turns must only be made at slow speeds.
6



21

REPLACEMENT TIME
If part of green in indicator be changed red.
change filter element.
10

8

5 YEAR Limited Warranty
23

19



22

11




12



13

WARNING
Do not use the accelerator lever execpt working on the field.
9

WARNING
LOCK ⇐ ⇒ UNLOCK
LOCK BUTTEN
Push the butten to lock position with joystick lever is neutral whenever the implement is not operation.
14

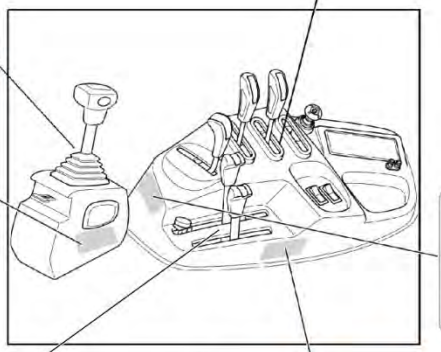


17

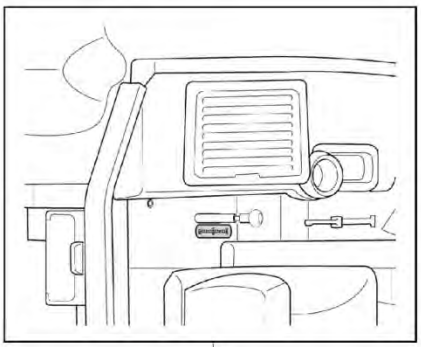



20

WARNING
Do not use the sub shift lever at "H" postion when driving backward.
16



18

NOTE