https://truckmanualshub.com/

GOODSENSE

零 件 目 录

PARTS MANUAL

1-1.8t蓄电池平衡重式叉车

1-1.8t Battery Counter-balanced Forklift

Original instruction


https://truckmanualshub.com/

说　　明

一、本零件目录适用于浙江吉鑫祥叉车制造有限公司的FB10、FB15、FB18零部件名称及数量，并作订货参考。

二、在订货时，必须说明叉车的型号及出厂编号，并根据零部件目录说明零部件的完整代号、详细名称及数量。

三、本目录中叉车型号的表示方法：

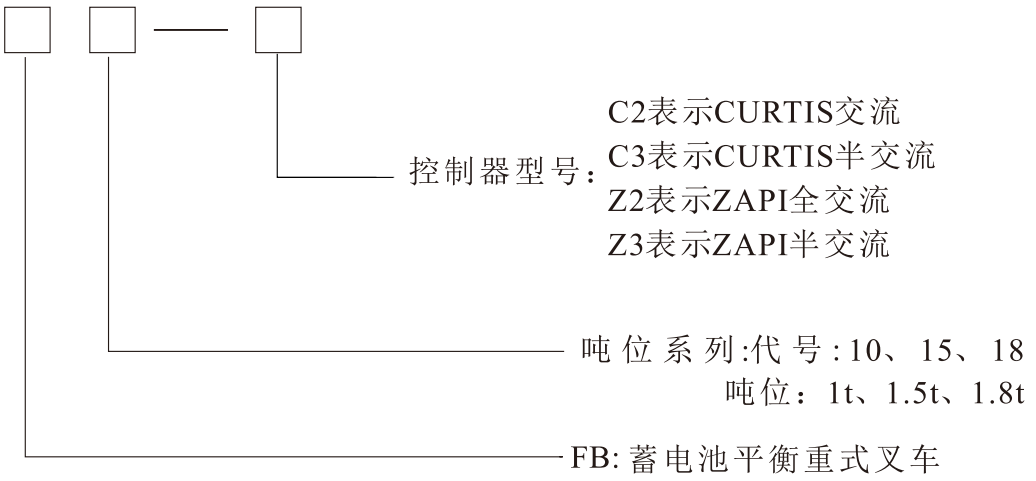

四、产品设计更改，恕不另行通知。

五、缩写说明:

ASS'Y	总成
R.H.	右
L.H.	左
H.P.	高压
L.P.	低压


https://truckmanualshub.com/

FOREWORD

1. This parts list is applied to the “ZHEJIANG GOODSENSE FORKLIFT COMPANY LTD” FB10、FB15、FB18 forklift truck . It is intended for users to identify the name , number and quantity of the parts replaced or repaired and to order them from the suppliers works .

2. When order parts , it is necessary to state the model of the forklift truck , its date of manufacture and according to this Part List , to state the whole number , the whole name and quantity .

3. Among the models of the forklifts truck :

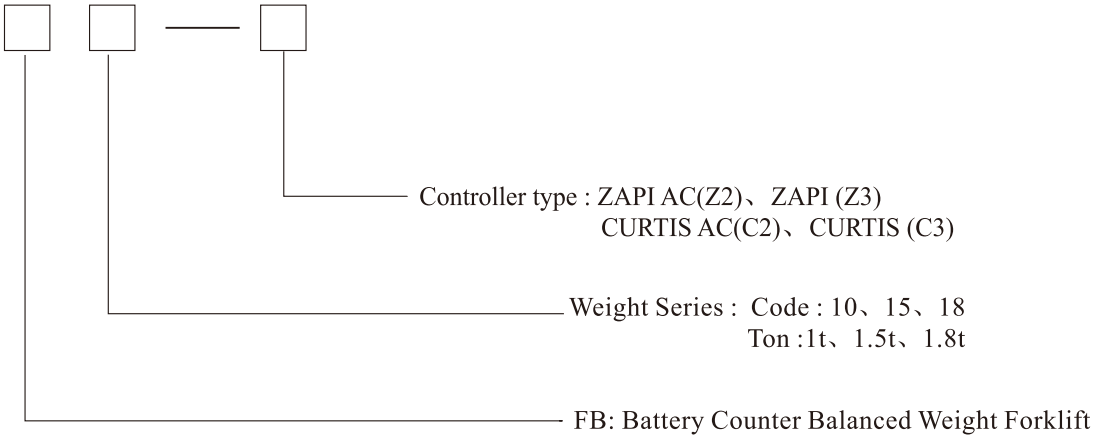

4. If there is any change, we will not notify.
5. Abbreviations in the CATALOGUE.

ASS’Y	assembly
R.H.	right hand
L.H.	left hand
H.P.	high pressure
L.P.	low pressure

https://truckmanualshub.com/

目　录
INDEX

一、传动系统　Driving system
变速箱总成　Transmission ass'y ····· 1-01
差速器　Differential ····· 1-03
驱动桥　Drive axle ····· 1-05
轮式制动器　Wheel brake ····· 1-07
驱动轮总成　Drive wheel assembly ····· 1-11
二、电气系统　Electric system
电气系统　Electric system ····· 2-01
电气原理图 Principle diagram ····· 2-07
左右护顶架线束 Left and right overhead guard wire harness ····· 2-11
整车线束 Vehicle harness ····· 2-13
手制动开关 Hand brake switch ····· 2-17
电源插座总成 Battery socket ass'y ····· 2-19
电控总成　Controller ass'y ····· 2-21
蓄电池组 Battery ass'y ····· 2-29
三、转向系统　Steering system
转向操纵　Steering control ····· 3-01
转向桥 Steering axle ····· 3-03
转向油缸 Steering cylinder ····· 3-07
转向轮 Steering wheel ····· 3-09
四、车身系统　Body system
车架与平衡重　Frame & balance ····· 4-01
机罩底板类及座椅 Hood、 Floor Board & Seat ····· 4-05
护顶架 Overhead guard ····· 4-09
五、液压系统　Hydraulic system
液压油箱　Oil tank ····· 5-01
阀操纵总成（二片） Valve control linkage (two-throw) ····· 5-03
阀操纵总成（三片） Valve control linkage (three-throw) ····· 5-07
阀操纵总成（四片） Valve control linkage (four-throw) ····· 5-11
液压管路　Hydraulic pipe line ····· 5-15

https://truckmanualshub.com/

六、制动系统 Brake system
行车制动装置 Brake control unit ····· 6-01
停车制动 Brake lever ····· 6-03
七、起重系统 Lifting system
门架管路系统(基本型) Hydraulic system mast(Normal mast KM) ····· 7-01
门架管路系统(二节全自由) Hydraulic system mast(Full Free 2-Stage Mast KZM) 7-04
门架管路系统(三节全自由) Hydraulic system mast(Full Free 3-Stage Mast KZM) 7-07
货叉 Fork ····· 7-12
货叉架(基本型) Lift Bracket Normal Mast ····· 7-14
货叉架(二节全自由) Lift Bracket Full Free 2-Stage Mast ····· 7-16
货叉架(三节全自由) Lift Bracket Full Free 3-Stage Mast ····· 7-18
门架(基本型) Mast (Normal mast KM) ····· 7-20
门架(二节全自由) Mast (Full free 2-stage mast KZM) ····· 7-22
门架(三节全自由) Mast (Full free 3-stage mast KZM) ····· 7-24
起升油缸（基本型）Lift Cylinder(Normal Mast KM) ····· 7-26
前起升油缸(二节全自由) Front Lift Cylinder (Full Free 2-Stage Mast KZM) ··· 7-30
前起升油缸(三节全自由) Front Lift Cylinder (Full Free 3-Stage Mast KZM) ··· 7-34
后起升油缸(二节全自由) Rear Lift Cylinder (Full Free 2-Stage Mast KZM) ··· 7-38
后起升油缸(三节全自由) Rear Lift Cylinder (Full Free 3-Stage Mast KZM) ··· 7-42
倾斜油缸Tilt cylinder ····· 7-46
八、标牌 Scutcheon
标牌 Scutcheon ····· 8-01


https://truckmanualshub.com/

一、传动系统

DRIVING SYSTEM

https://truckmanualshub.com/

变速箱总成
Transmission ass'y

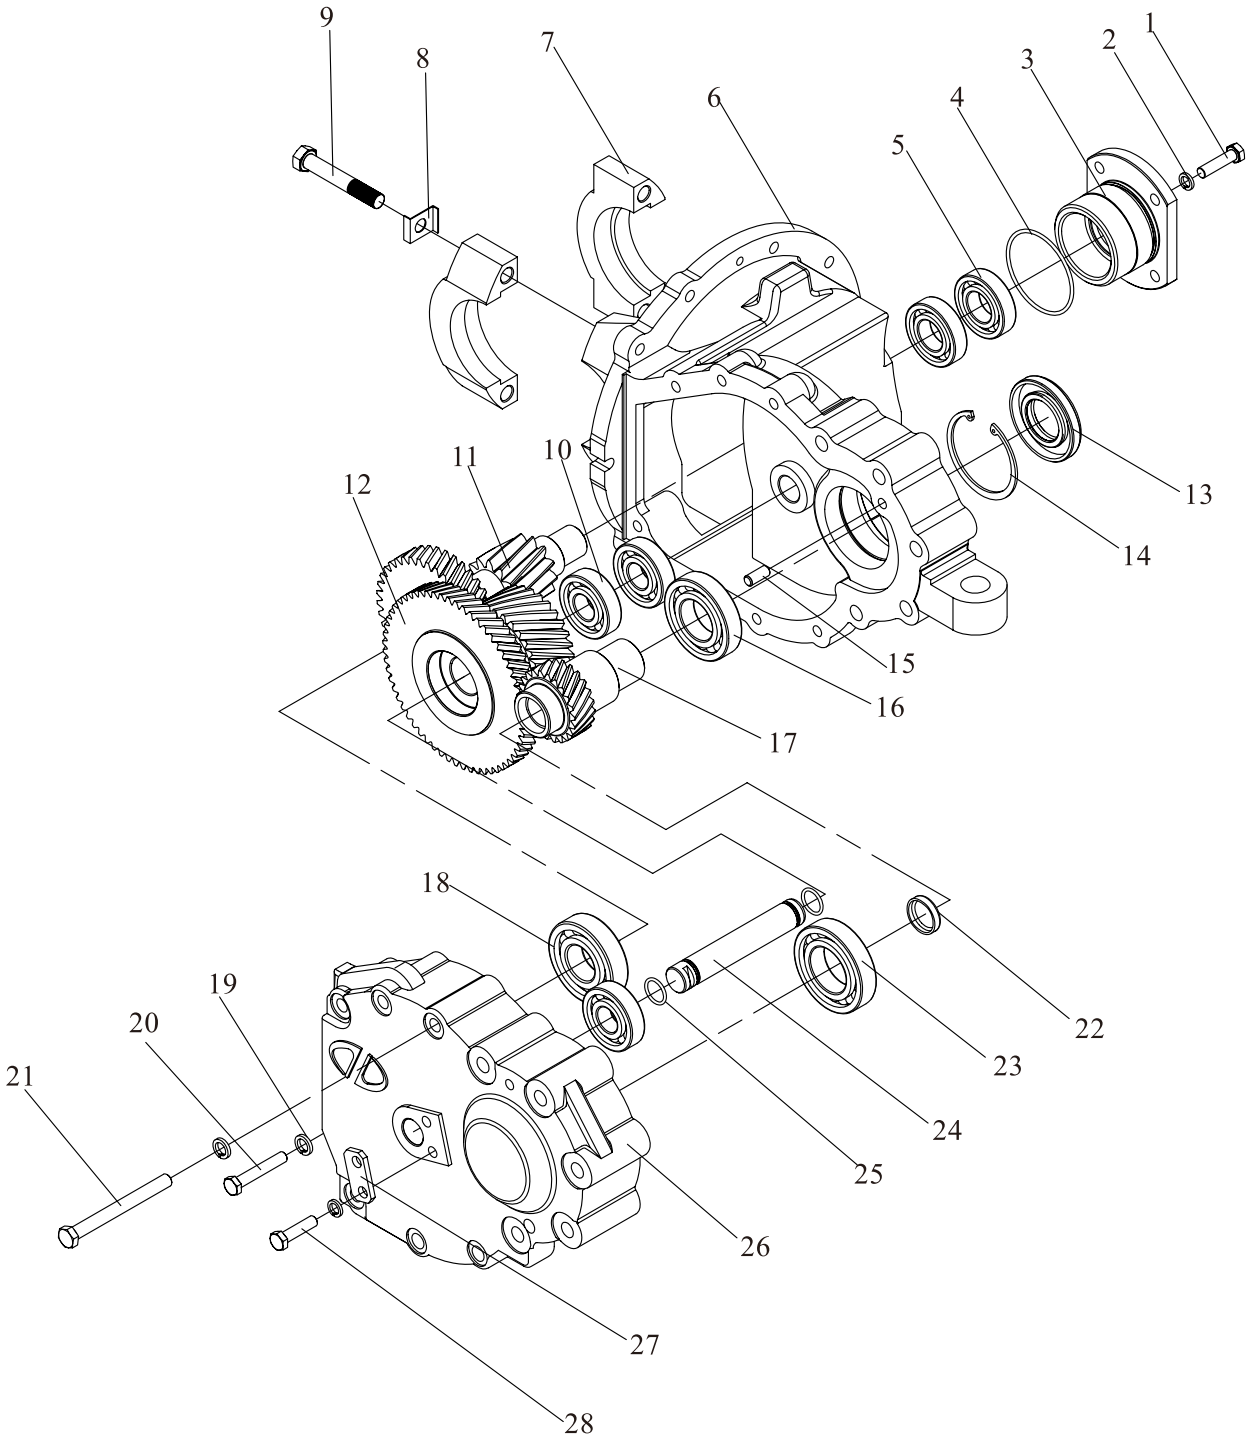


https://truckmanualshub.com/

变速箱总成
Transmission ass'y

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GB/T5783	螺栓M10×25 Bolt	4	
2	GB/T93	弹垫10 Washer,lock	6	
3	A15T5-00201	轴承盖 Cap	1	
4	GB/T1235	O形圈80×3.1 O-ring	1	
5	GB/T276	深沟球轴承6206 Bearing	2	
6	A15T5-00202	箱体组件 Case group	1	
7	A15T5-00203	轴承座 Seat,bearing	1	
8	A15T5-00204	轴承座锁片 Bearing lock plate	4	
9	A15T5-00205	轴承座螺栓 Bolt	1	
10	GB/T276	深沟球轴承6305 Bearing	3	
11	A15T5-00206	齿轴 Shaft	1	
12	A15T5-00207	双联齿轮 Gear	1	
13	GB/T13871.1	油封 FB40×80×12 Ring	1	
14	GB/T893.1	弹性挡圈80 Elastic ring	1	
15	GB/T119.1	圆柱销10×24 Pin	2	
16	GB/T276	深沟球轴承6208 Bearing	1	
17	A15T5-00208	输入轴 Input shaft	1	
18	GB/T276	深沟球轴承6307 Bearing	1	
19	GB/T93	弹垫12 Washer,lock	8	
20	GB/T5786	螺栓M12×1.25×40 Bolt	2	
21	GB/T5785	螺栓M12×1.25×100 Bolt	6	
22	A15T5-00209	密封盖 Seal cover	1	
23	GB/T276	深沟球轴承6209 Bearing	1	
24	A15T5-00210	轴 Shaft	1	
25	GB/T1235	O形圈25×2.4 O-ring	2	
26	A15T5-00211	箱盖 Case cover	1	
27	A15T5-00212	挡板 Baffle	1	
28	GB/T5783	螺栓M10×16 Bolt	2	

https://truckmanualshub.com/

差速器总成
Differential

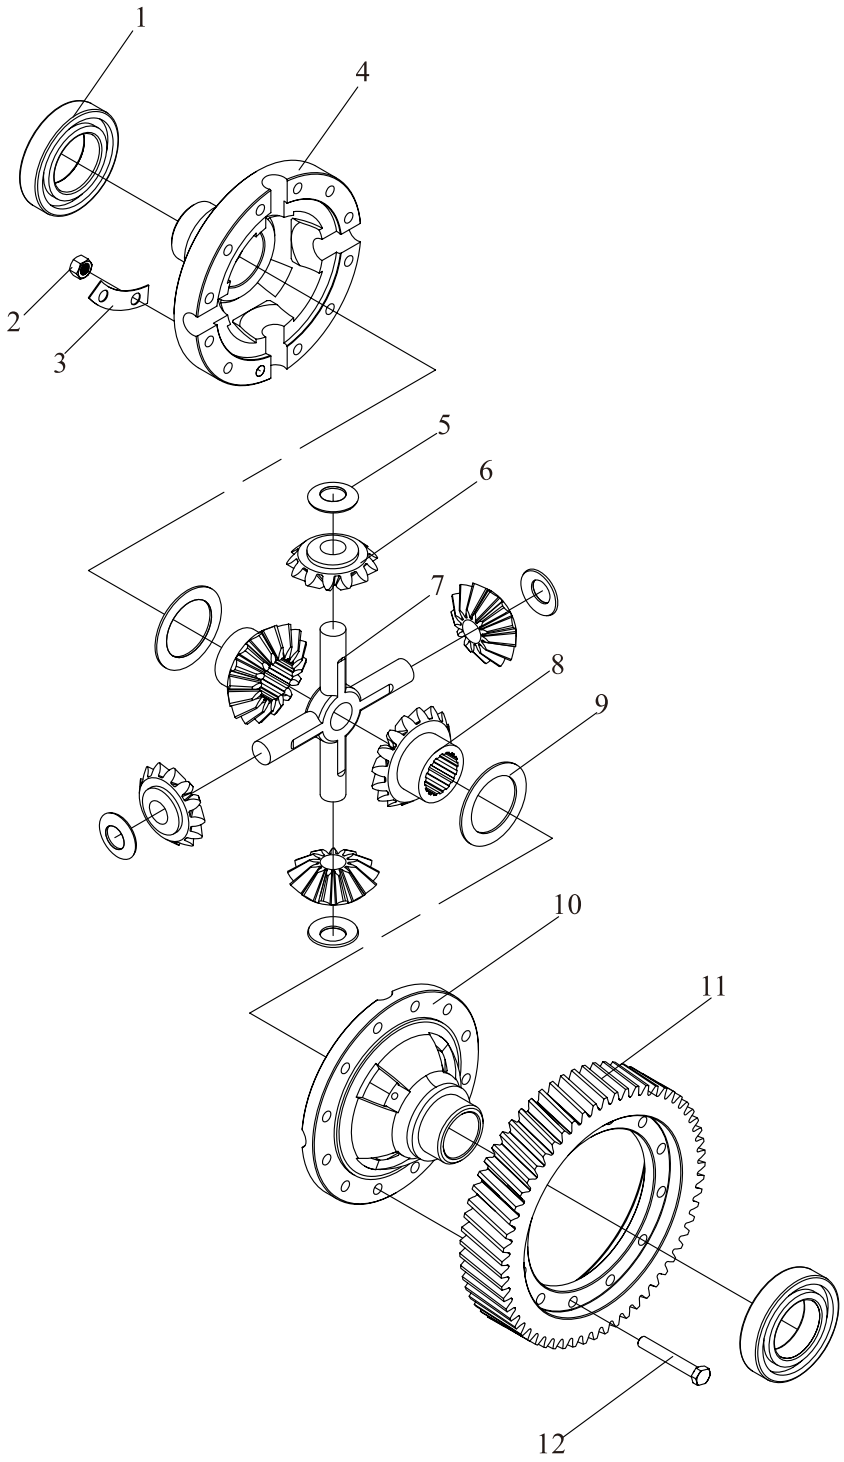


https://truckmanualshub.com/

差速器总成
Differential

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GB/T276	深钩球轴承6211 Bearing	2	
2	GB/T6171	螺母M10×1.25 Nut	12	
3	A15T5-00213	齿圈锁片 Gear,ring lock plate	6	
4	A15T5-00214	左差速器壳 Case,differential L.H.	1	
5	A15T5-00215	行星垫圈 Shim	4	
6	A15T5-00216	行星齿轮 Planet gear	4	
7	A15T5-00217	十字轴 Spider	1	
8	A15T5-00218	半轴齿轮 Gear,side	2	
9	A15T5-00219	半轴垫圈 Shim	2	
10	A15T5-00220	右差速器壳 Case,differential R.H.	1	
11	A15T5-00221	齿圈 Gear,ring	1	
12	A15T5-00222	齿圈螺栓 Bolt	12	

https://truckmanualshub.com/

驱动桥
Drive axle

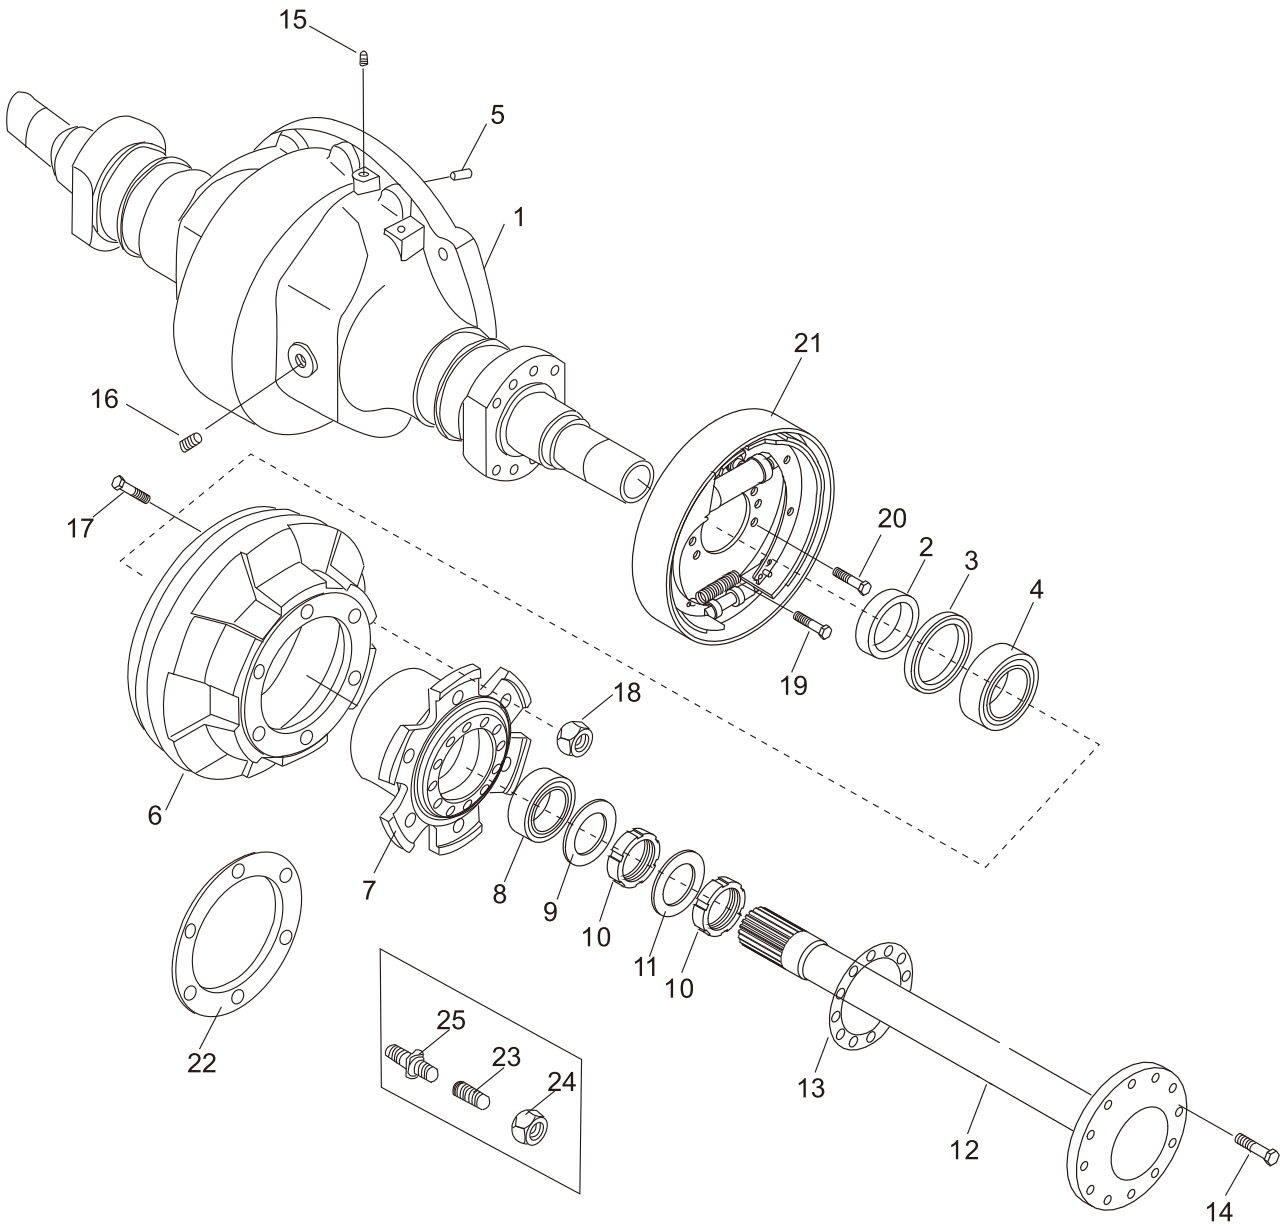


https://truckmanualshub.com/

驱动桥
Drive axle

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15T5-00101	桥壳 Housing, axle	1	
2	A15A5-00102	挡环 Snap,ring	2	
3	GB9877.1	油封 Sd125×100×12 Seal, oil	2	
4	A15A5-00103	轴承7213E Bearing	2	
5	GB/T119.1	销 D8×25 Pin	1	
6	A15A5-00104	制动毂 Drum, brake	2	
7	A15A5-00105	轮毂 Hub, front	2	
8	A15A5-00106	轴承油封总成 Seal, oil ass'y	2	
9	A15A5-00107	挡圈 Snap,ring	2	
10	GB/T810	螺母M60×2 Nut	4	
11	GB/T858	垫圈60 Washer	2	
12	A15A5-00108	半轴 Shaft, drive	2	
13	A15A5-00109	半轴垫 Packing	2	
14	A15A5-00110	螺栓M12×1.25 Bolt	16	
15	A15A5-00111	橡皮塞 Plug,rubber	1	
16	A15A5-00112	堵塞 Plug	2	
17	A15A5-00113	螺栓 Bolt	12	单胎选用
18	A15A5-00114	螺母 Nut	12	单胎选用
19	A15A5-00115	螺栓 Bolt	4	
20	A15A5-00116	螺栓 Bolt	8	
21	A15A5-00400	制动器总成(左) Drum,brake ass'y(left)	1	
-	A15A5-00500	制动器总成(右) Drum,brake ass'y(right)	1	
22	A15T5-00301	连接套Connecting Set	1	双胎选用
23	A15T5-00302	柱螺母 Nut	12	双胎选用
24	A15T5-00303	双胎球螺母 Nut	12	双胎选用
25	A15T5-00304	轮毂螺栓 Bolt	12	双胎选用

https://truckmanualshub.com/

轮式制动器
Wheel brake

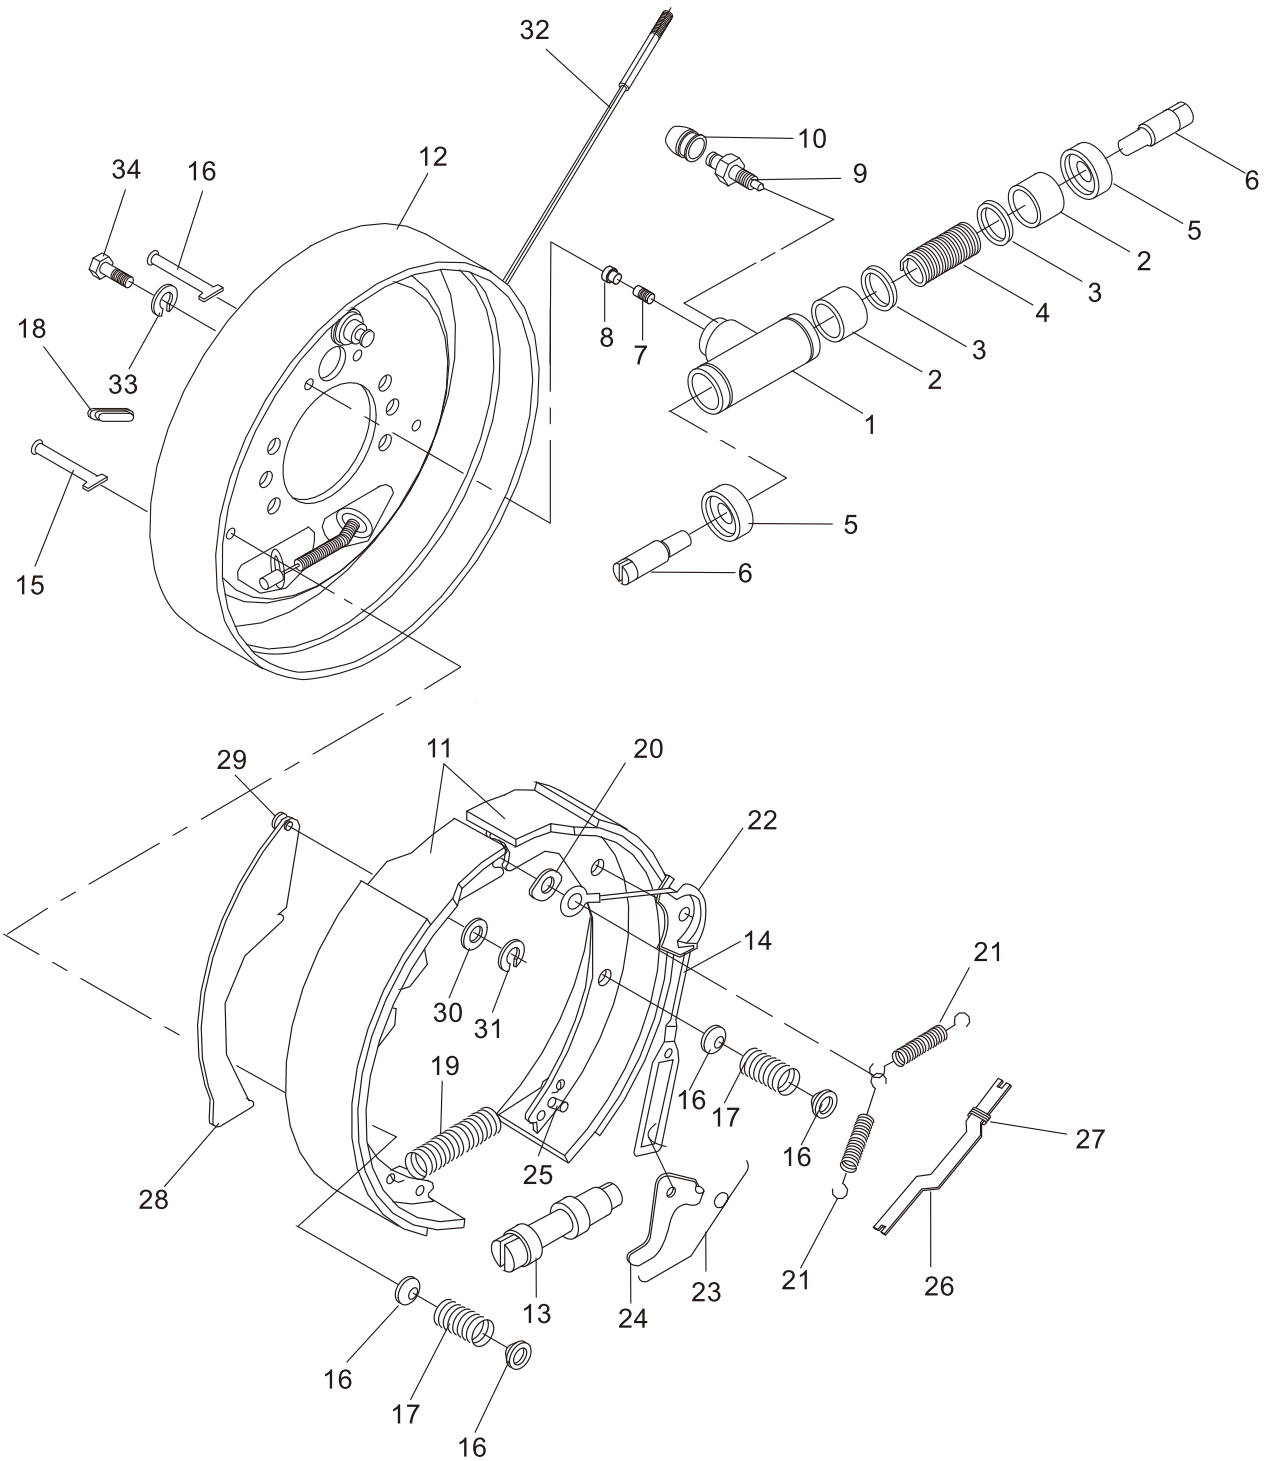


https://truckmanualshub.com/

轮式制动器
Wheel brake

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A5-00400	制动器总成(左) Wheel brake ass'y L.H.	1	
-	A15A5-00500	制动器总成(右) Wheel brake ass'y R.H.	1	
B	A15A5-00600	制动分泵总成 Wheel cylinder ass'y	1	左右对称各一 Left & right types
1	A15A5-00601	制动分泵缸 Cylinder	1	左右对称各一 Left & right types
2	A15A5-00602	分泵活塞 Piston	2	
3	A15A5-00603	分泵皮碗 Cup, piston	2	
4	A15A5-00604	分泵弹簧 Spring	1	
5	A15A5-00605	分泵护罩 Cover, dust	2	
6	A15A5-00606	分泵活塞顶杆 Rod, piston	2	
7	A15A5-00607	制动分泵油塞 Seat,tube	1	
8	A15A5-00608	螺纹防护罩 Shroud	1	
9	A15A5-00609	分泵放气螺钉 Screw,bleeder	1	
10	A15A5-00610	分泵放气螺钉帽 Cap, screw	1	
11	A15A5-00611	制动蹄带摩擦片总成 Brake shoe &friction plate ass'y	2	
12	A15A5-00613	制动器底板总成 Back plate ass'y	1	左右对称各一 Left & right types
13	A15A5-00614	间隙调整器 Clearance adjuster	1	左右旋螺纹各一 Left & right threads
14	A15A5-00615	弹簧拉线装置 Spring & Fitting ass'y	1	
15	A15A5-00616	压簧拉杆 Pin, shoe hold down	2	
16	A15A5-00617	压簧座 Cup, shoe hold down	4	
17	A15A5-00618	压簧 Spring, shoe hold down	2	
18	A15A5-00619	胶堵 Plug, rubber	2	

https://truckmanualshub.com/

轮式制动器
Wheel brake

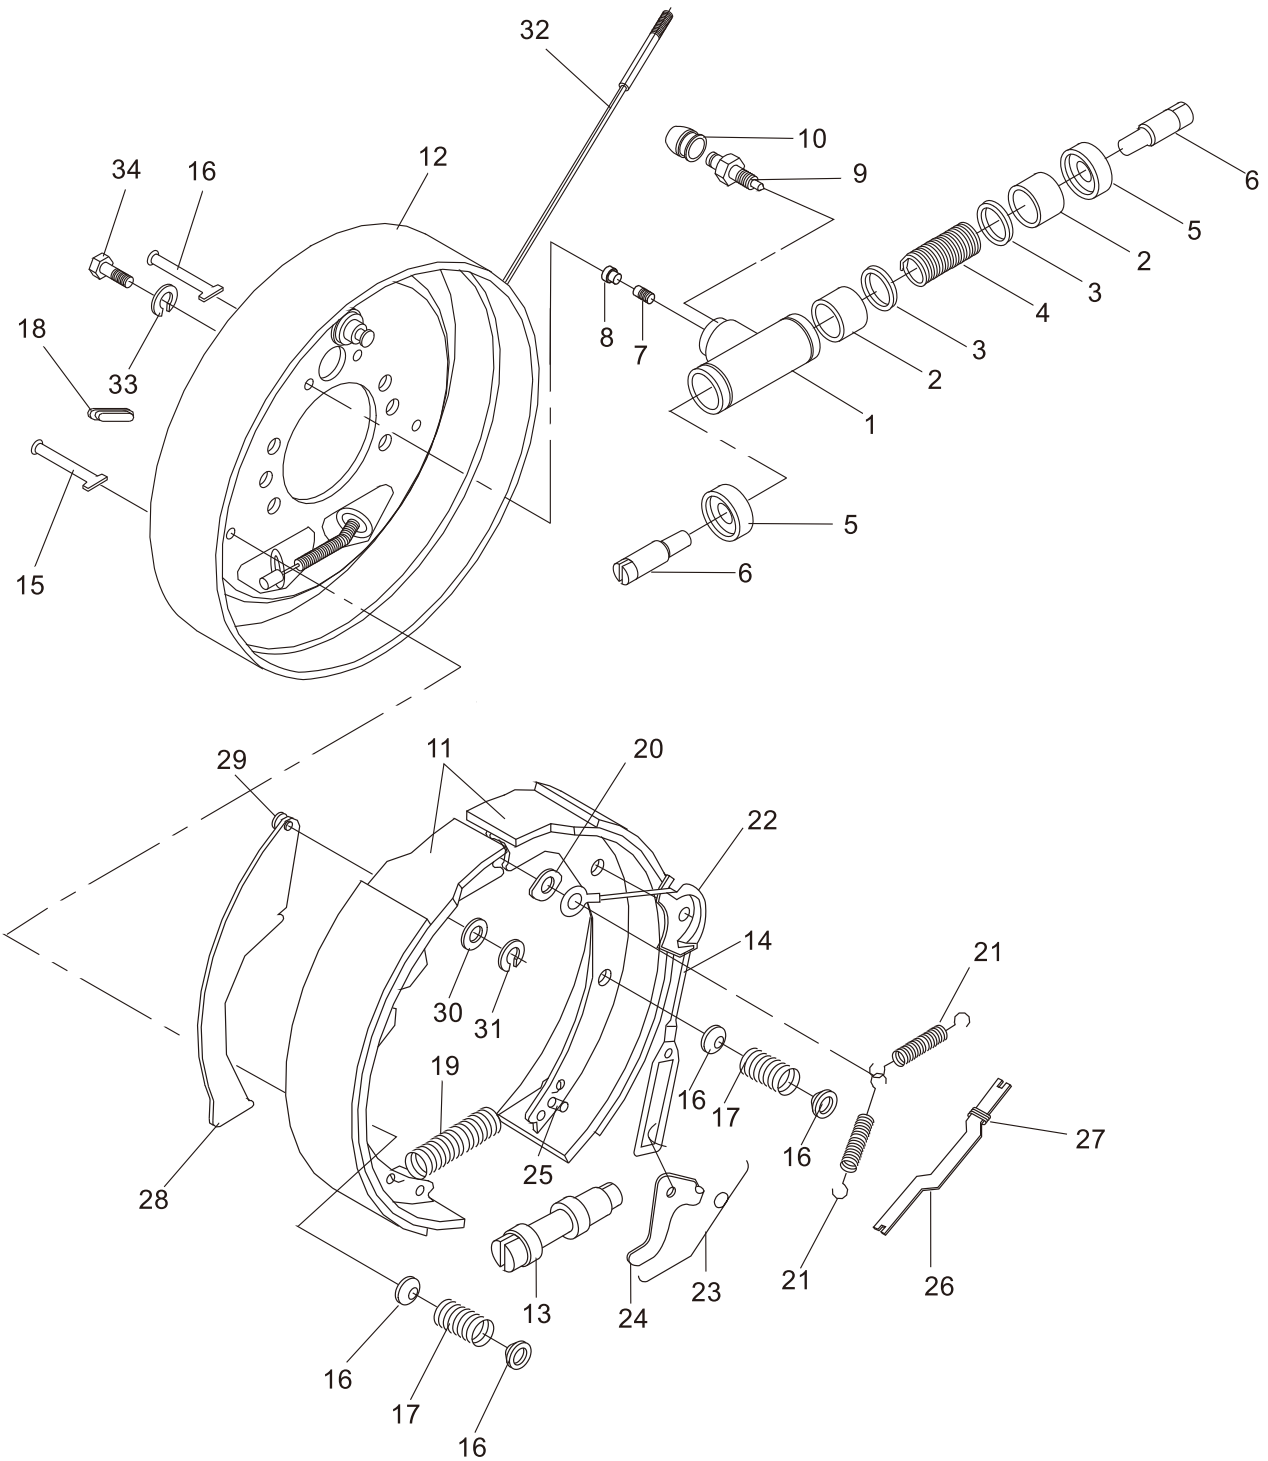


https://truckmanualshub.com/

轮式制动器
Wheel brake

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
19	A15A5-00620	回位弹簧 Return Spring	1	
20	A15A5-00621	导向板 Guide, plate	1	
21	A15A5-00622	制动蹄回位弹簧Return spring, brake shoe	2	
22	A15A5-00623	导向块 Guide, cable	1	
23	A15A5-00624	弹簧 Spring	1	左右对称各一 Left & right types
24	A15A5-00625	棘爪 Lever	1	左右对称各一 Left & right types
25	A15A5-00626	销钉 Pin	1	
26	A15A5-00627	手制动推杆 Strut L. H.	1	左右对称各一 Left & right types
27	A15A5-00628	弹簧 Spring	1	
28	A15A5-00629	手制动拉杆 Lever L.H. brake	1	左右对称各一 Left & right types
29	A15A5-00630	销钉 Pin	1	
30	A15A5-00631	弹性垫片 Washer, spring	1	
31	A15A5-00632	杆销挡圈 Snap, ring, pin axle	1	
32	A15A5-00634	制动钢锁总成(右) Cable R. H	1	
–	A15A5-00633	制动钢锁总成(左) Cable L. H	1	
33	GB/T93	弹垫6 Washer,lock	2	
34	GB/T5783	螺栓M6×16 Bolt	2	

https://truckmanualshub.com/

驱动轮总成
Driving wheel assembly

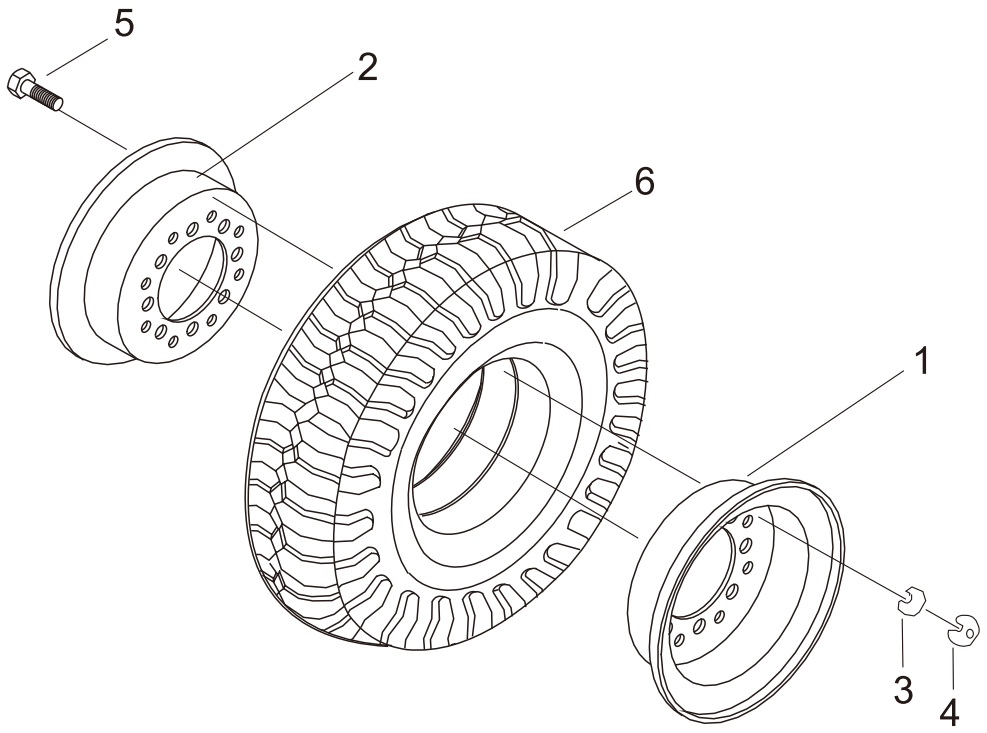


https://truckmanualshub.com/

驱动轮总成
Driving wheel assembly

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15A5-00301	外轮辋 Rim,outside	2	
2	A15A5-00302	内轮辋 Rim,inside	2	
3	GB/T93	弹垫12 Washer,lock	12	
4	GB/T6170	螺母M12 Nut	12	
5	A30A6-10005	轮辋螺栓 Bolt	12	
6	GB/T2982	轮胎6.50-10-10PR Tyre	2	

https://truckmanualshub.com/

双胎驱动轮总成（选用）
Double driving wheel assembly

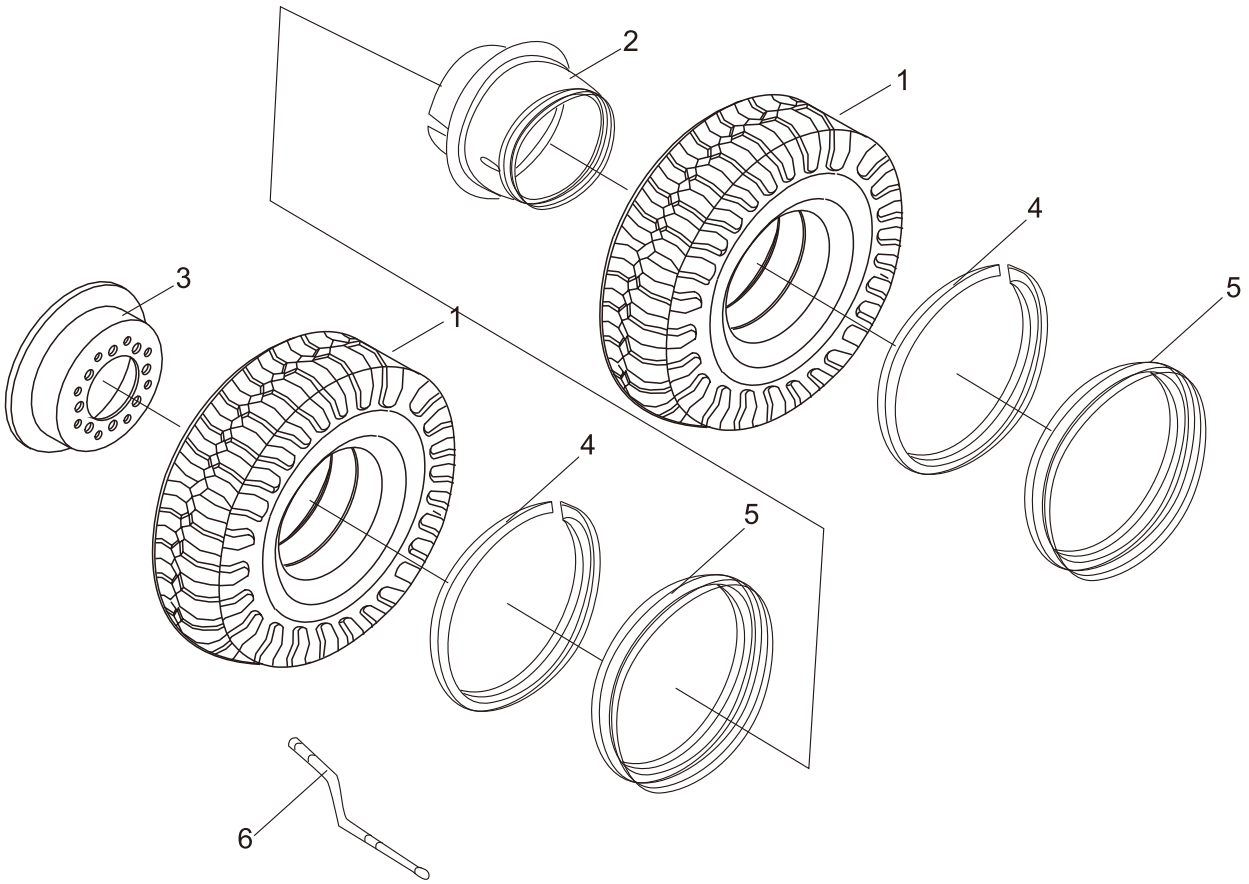

https://truckmanualshub.com/

双胎驱动轮总成（选用）
Double driving wheel assembly

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15I5-00200	外轮辋总成(包含2,4,5) Whell Rim ass'y(Inc.2,4,5)	2	
B	A15I5-00300	内轮辋总成(包含3, 4,5) Whell Rim ass'y(Inc.3,4,5)	2	
1	GB/T2982	轮胎6.50-10-10PR Tyre	4	
2	A15I5-00201	外轮辋 Rim outside	2	
3	A15I5-00301	内轮辋 Rim inside	2	
4	A15I5-00202	锁圈 Lock ring	4	
5	A15I5-00203	挡圈 Snap ring	4	
6	A50A5-00700	充气接管 Pipe	2	


https://truckmanualshub.com/


二、电气系统

ELECTRIC SYSTEM

https://truckmanualshub.com/

电气系统
Electric system

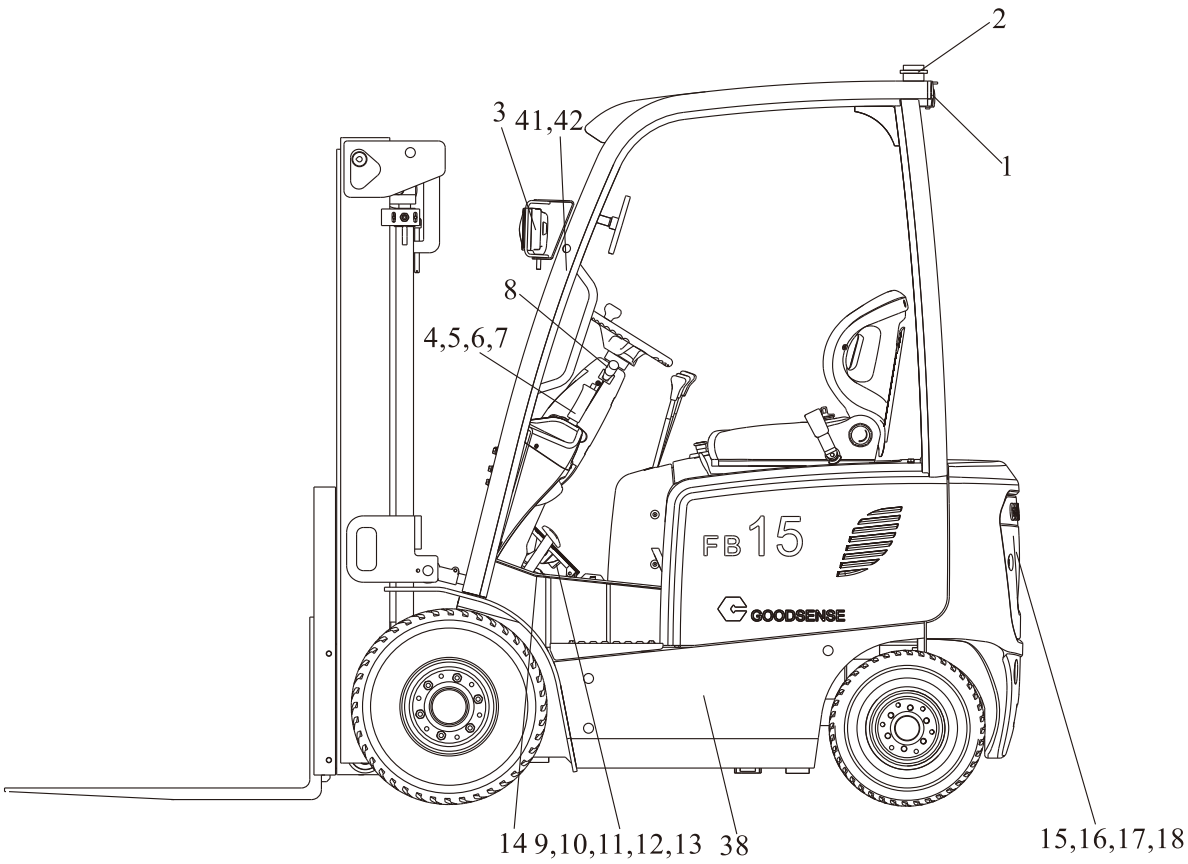

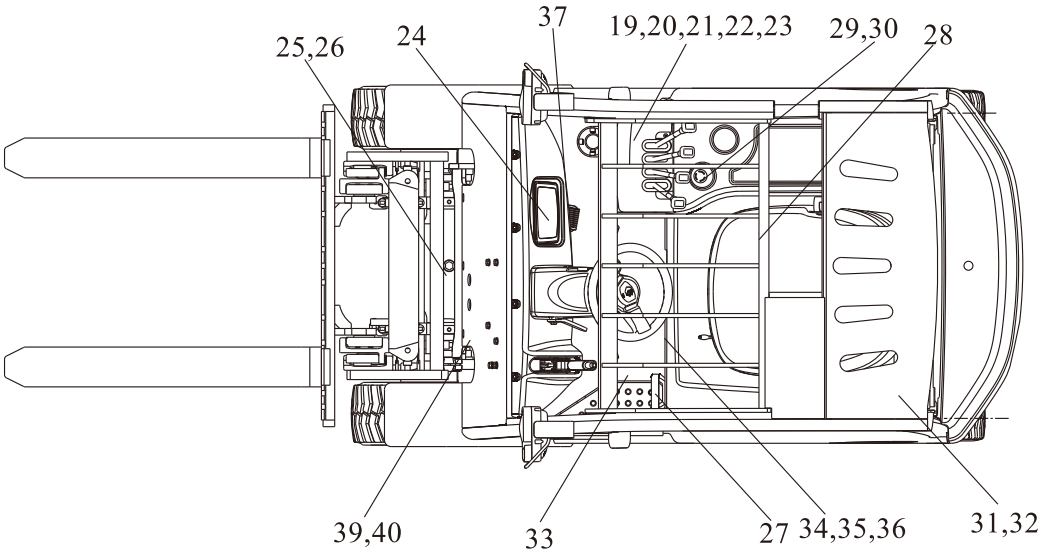


https://truckmanualshub.com/


电气系统
Electric system

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	DT04G-12XH8-2	后排灯 Rear lamp	1	
2	DT04G-LTD152	警示灯 Warning Light	1	
3	A15G2-40200	前组合灯 Front combined lamps	2	
4	A15A2-00202	手制动开关 Hand Brake switch	1	标配
-	A15R2-60300	手制动开关 Hand Brake switch	1	AMP选用
5	GB/T5783	螺栓M5×35 Bolt	4	
6	GB/T97.1	平垫5 Washer	4	
7	GB/T93	弹垫5 Washer,lock	4	
8	DT02G-JK804F	组合开关 Combination switch	1	标配
-	A80A2-60100	组合开关 Combination switch	1	AMP选用
9	A15B2-00204	加速器 Accelerator	1	
10	GB/T5783	螺栓M8×25 Bolt	2	
11	GB/T97.1	平垫8 Washer	2	
12	GB/T93	弹垫8 Washer,lock	2	
13	GB/T6170	螺母M8 Nut	2	
14	DT05G-JK205A	脚制动开关 Stop lamp switch	1	
15	A15K2-10100	控制器总成 Controller unit	1	FB10/15/18-C2
-	A15U2-10100	控制器总成 Controller unit	1	FB10/15/18-C3
-	A15J2-10100	控制器总成 Controller unit	1	FB10/15/18-Z2
-	A15V2-10100	控制器总成 Controller unit	1	FB10/15/18-Z3
16	GB/T5783	螺栓M10×30 Bolt	4	
17	GB/T97.1	平垫10 Washer	4	
18	GB/T93	弹垫10 Washer,lock	4	
19	A15A2-00209	起升开关 Lifting switch	2	两片阀标配选用
-	A15A2-00209	起升开关 Lifting switch	3	三片阀标配选用
-	A15A2-00209	起升开关 Lifting switch	4	四片阀标配选用

https://truckmanualshub.com/

电气系统
Electric system

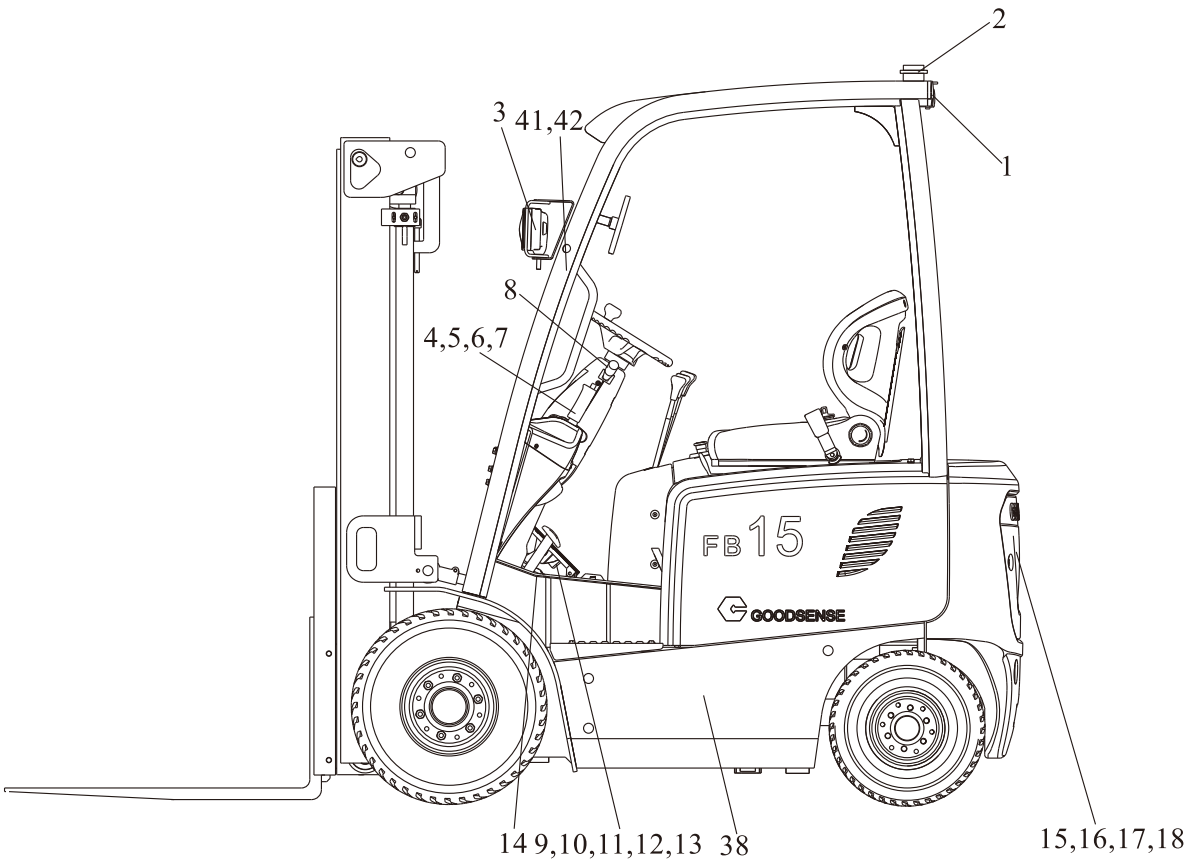

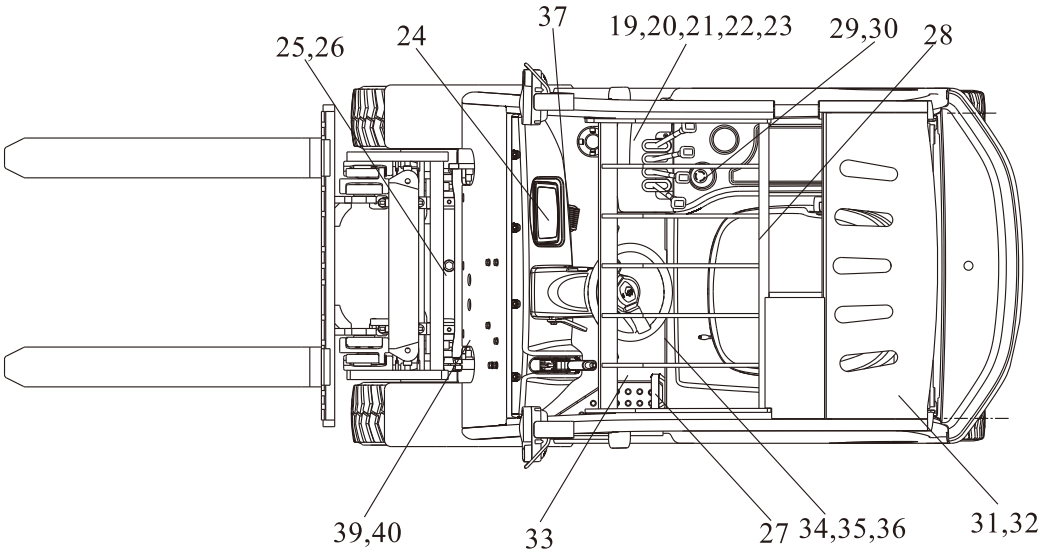


https://truckmanualshub.com/


电气系统
Electric system

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
-	A15R2-60201	起升开关 Lifting switch	1	两片阀AMP选用
-	A15R2-60200	起升开关 Lifting switch	1	三片阀AMP选用
-	A15R2-60201	起升开关 Lifting switch	2	四片阀AMP选用
20	GB/T5783	螺栓M4×35 Bolt	4	两片阀选用
-	GB/T5783	螺栓M4×35 Bolt	6	三片阀选用
-	GB/T5783	螺栓M4×35 Bolt	8	四片阀选用
21	GB/T97.1	平垫4 Washer	4	两片阀选用
-	GB/T97.1	平垫4 Washer	6	三片阀选用
-	GB/T97.1	平垫4 Washer	8	四片阀选用
22	GB/T93	弹垫4 Washer,lock	4	两片阀选用
-	GB/T93	弹垫4 Washer,lock	6	三片阀选用
-	GB/T93	弹垫4 Washer,lock	8	四片阀选用
23	GB/T6170	螺母M4 Nut	4	两片阀选用
-	GB/T6170	螺母M4 Nut	6	三片阀选用
-	GB/T6170	螺母M4 Nut	8	四片阀选用
24	A15B2-00203	仪表总成 Meter ass'y	1	FB10/15/18-C2/C3
-	A16B2-00230	仪表总成 Meter ass'y	1	FB10/15/18-Z2/Z3
25	A15T2-30100	牵引电机 Traction motor	1	
26	A15K2-80400	牵引电机连接线 Connecting cables	1	
27	A15K2-80300	电源插座总成 Battery socket ass'y	1	FB10/15/18-C2
-	A15R2-80300	电源插座 Battery socket	1	FB10/15/18-C3
-	A15A2-00401	电源插座 Battery socket	1	FB10/15/18-Z2/Z3
28	A15T2-20200	蓄电池 Battery	1	1T标配400Ah
-	A15T2-20100	蓄电池 Battery	1	1.5T标配450Ah
-	A15T2-20300	蓄电池 Battery	1	1.8T标配500Ah
29	A15R2-60500	急停开关 Emergency switch	1	

https://truckmanualshub.com/

电气系统
Electric system

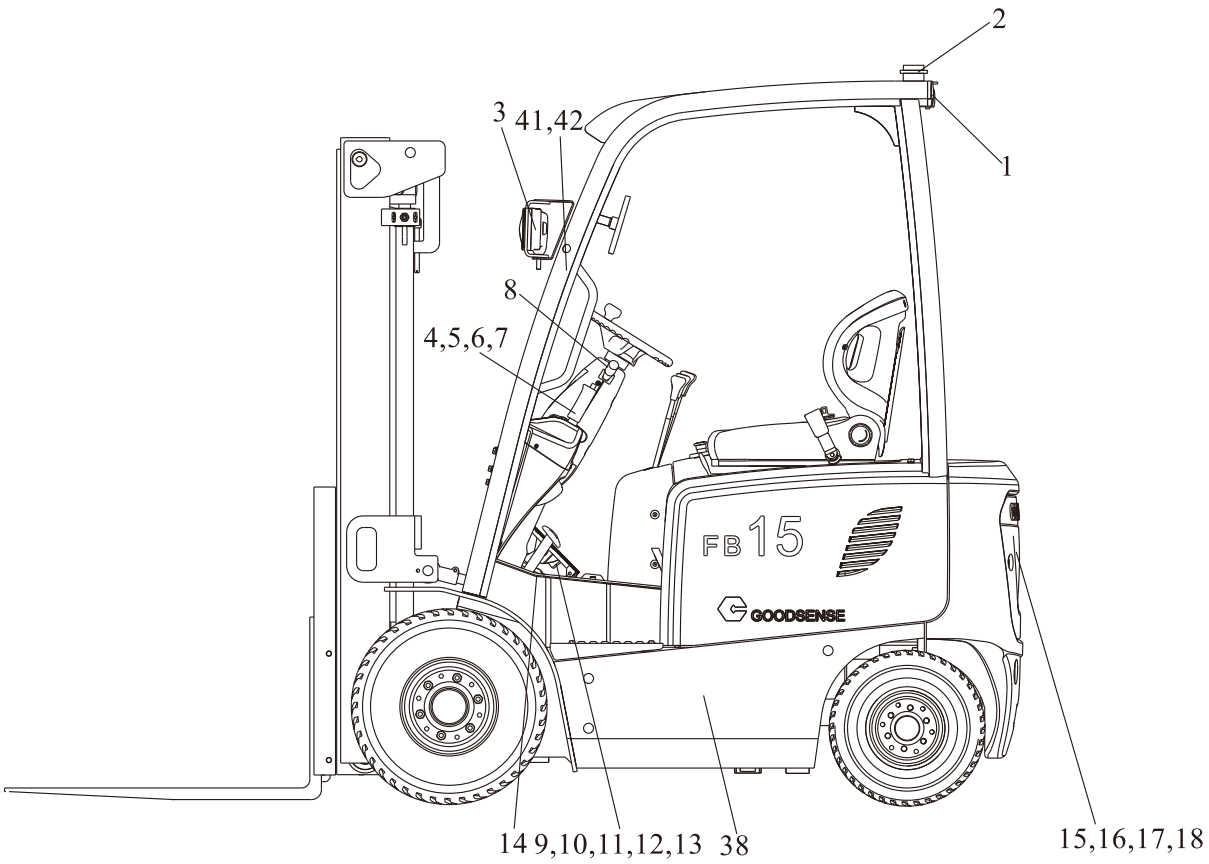

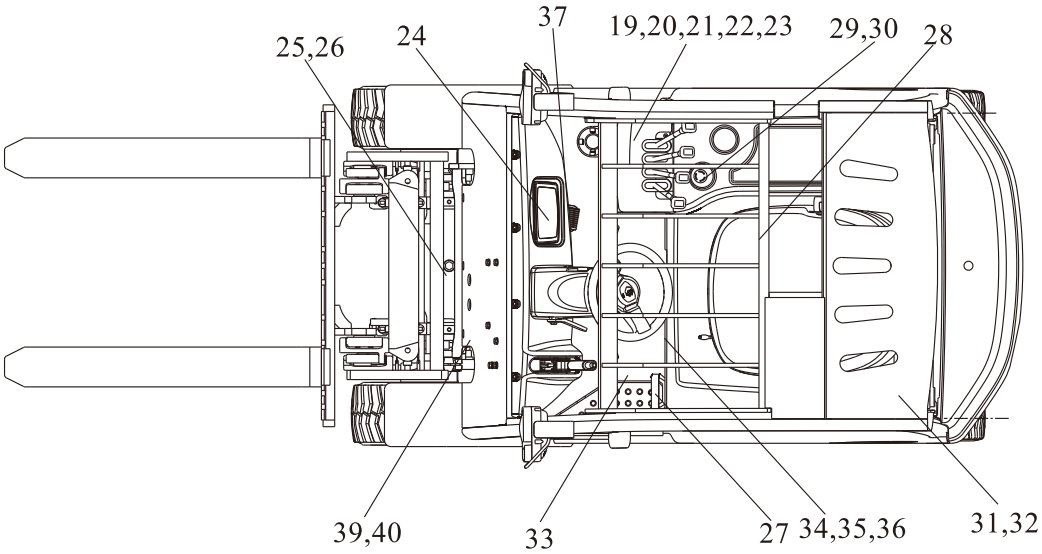

https://truckmanualshub.com/


电气系统
Electric system

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
30	A15R2-60501	急停开关指示牌 Emergency switch sign	1	
31	DT08G-HPB8.6	泵电机 Lift motor	1	FB10/15/18-C2/Z2
-	A15I2-30200	泵电机 Lift motor	1	FB10/15/18-Z3/C3
32	A15K2-80500	泵电机连接线 Connecting cables	1	
33	A15A2-00206	DC隔离转换器 Switch	1	FB10/15/18-C2/C3 标配
-	A15R2-20900	DC隔离转换器 Switch	1	FB10/15/18-Z2/Z3 AMP选用
-	A15V2-10200	DC隔离转换器 Switch	1	FB10/15/18-C2/C3 标配
-	A15V2-10300	DC隔离转换器 Switch	1	FB10/15/18-Z2/Z3 AMP选用
34	A15A2-00210	保险丝盒 Fuse box	1	标配
-	A15G2-00210	保险丝盒 Fuse box	1	AMP选用
35	DT09G-SG152	电子闪光器 Flasher unit	1	FB10/15/18-C2/C3
-	DT09G-SG253	电子闪光器 Flasher unit	1	FB10/15/18-Z2/Z3
36	DT09G-DJB12B	倒车蜂鸣器 Back buzzer	1	FB10/15/18-C2/C3 标配
-	A30C2-60500	倒车蜂鸣器 Back buzzer	1	FB10/15/18-Z2/Z3 AMP选用
-	DT09G-DJB24B	倒车蜂鸣器 Back buzzer	1	FB10/15/18-C2/C3 标配
-	A50C2-60400	倒车蜂鸣器 Back buzzer	1	FB10/15/18-Z2/Z3 AMP选用
37	DT02G-JK422	钥匙开关 Key switch	1	标配
-	A15R2-60400	钥匙开关 Key switch	1	AMP选用
38	A15T2-80100	整车线束 Vehicle harness	1	FB10/15/18-C2 AMP
-	A15U2-80200	整车线束 Vehicle harness	1	FB10/15/18-C3 AMP
-	A15J2-80200	整车线束 Vehicle harness	1	FB10/15/18-Z2 AMP
-	A15V2-80200	整车线束 Vehicle harness	1	FB10/15/18-Z3 AMP
39	A15A2-00205	喇叭滤波器 Horn filter	1	
40	DT09G-DL124ED	电喇叭 Horn	1	FB10/15/18-C2/C3
-	DT09G-DL224ED	电喇叭 Horn	1	FB10/15/18-Z2/Z3
41	A15A2-00500	左护顶架线束 Left head guard harness	1	
42	A15A2-00600	右护顶架线束 Right head guard harness	1	

https://truckmanualshub.com/

电气原理图
Principle diagram


FB10/15/18-C2

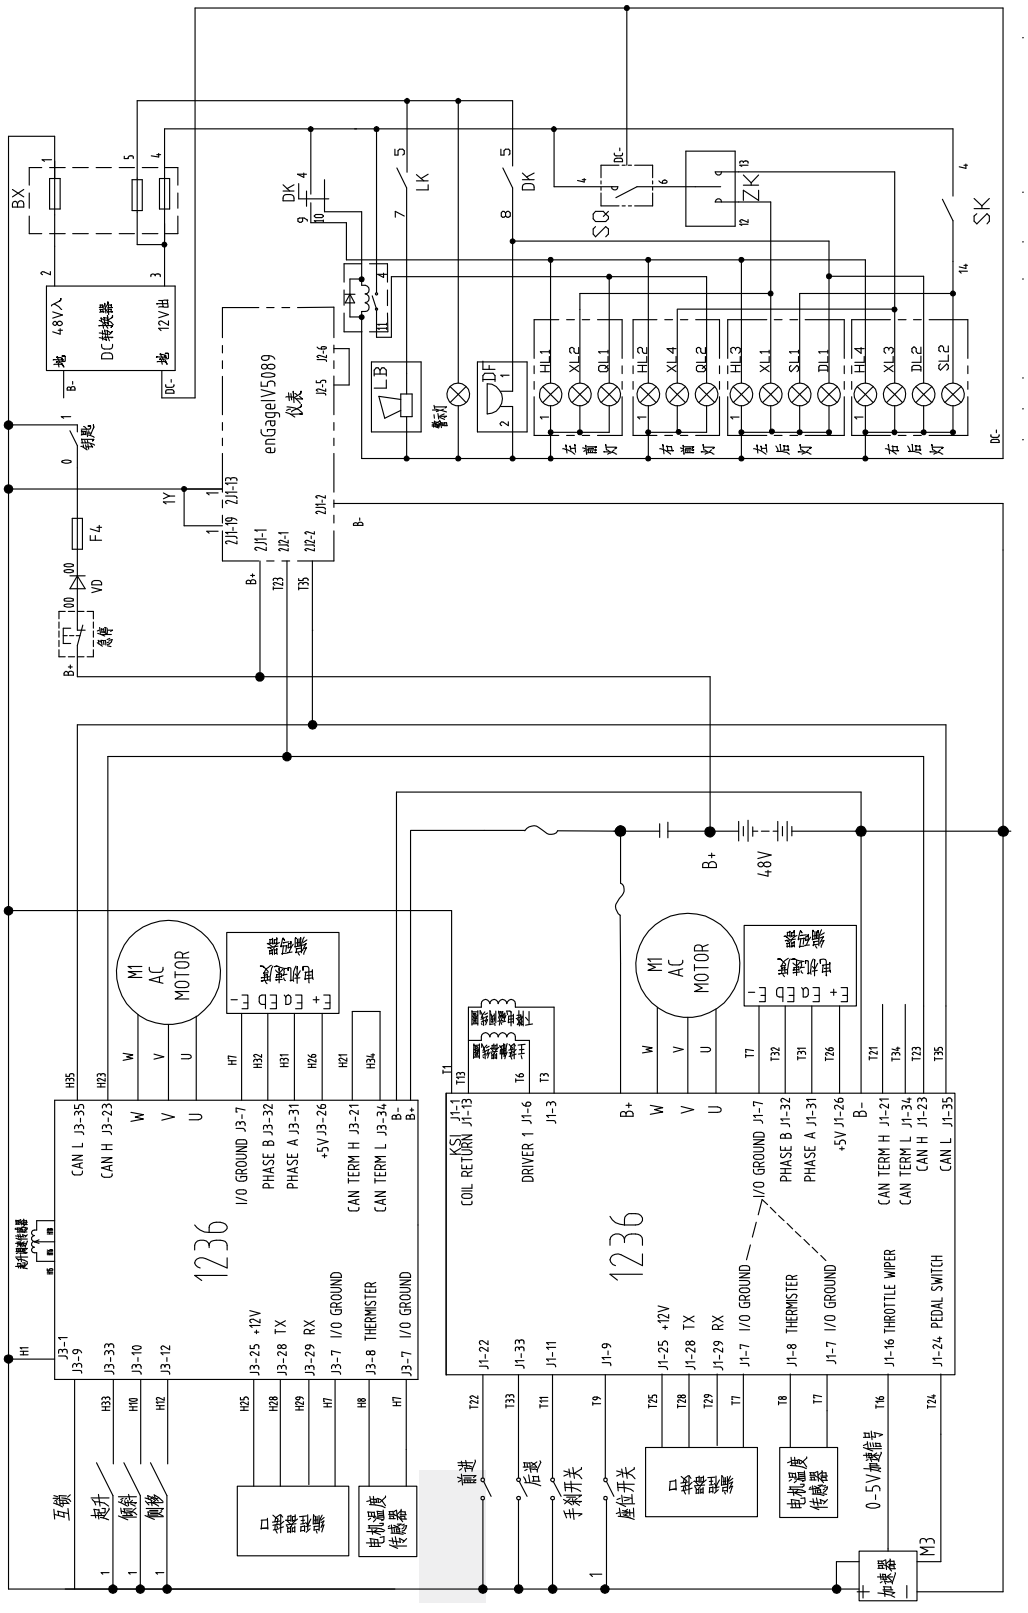

https://truckmanualshub.com/

电气原理图
Principle diagram


FB10/15/18-C3

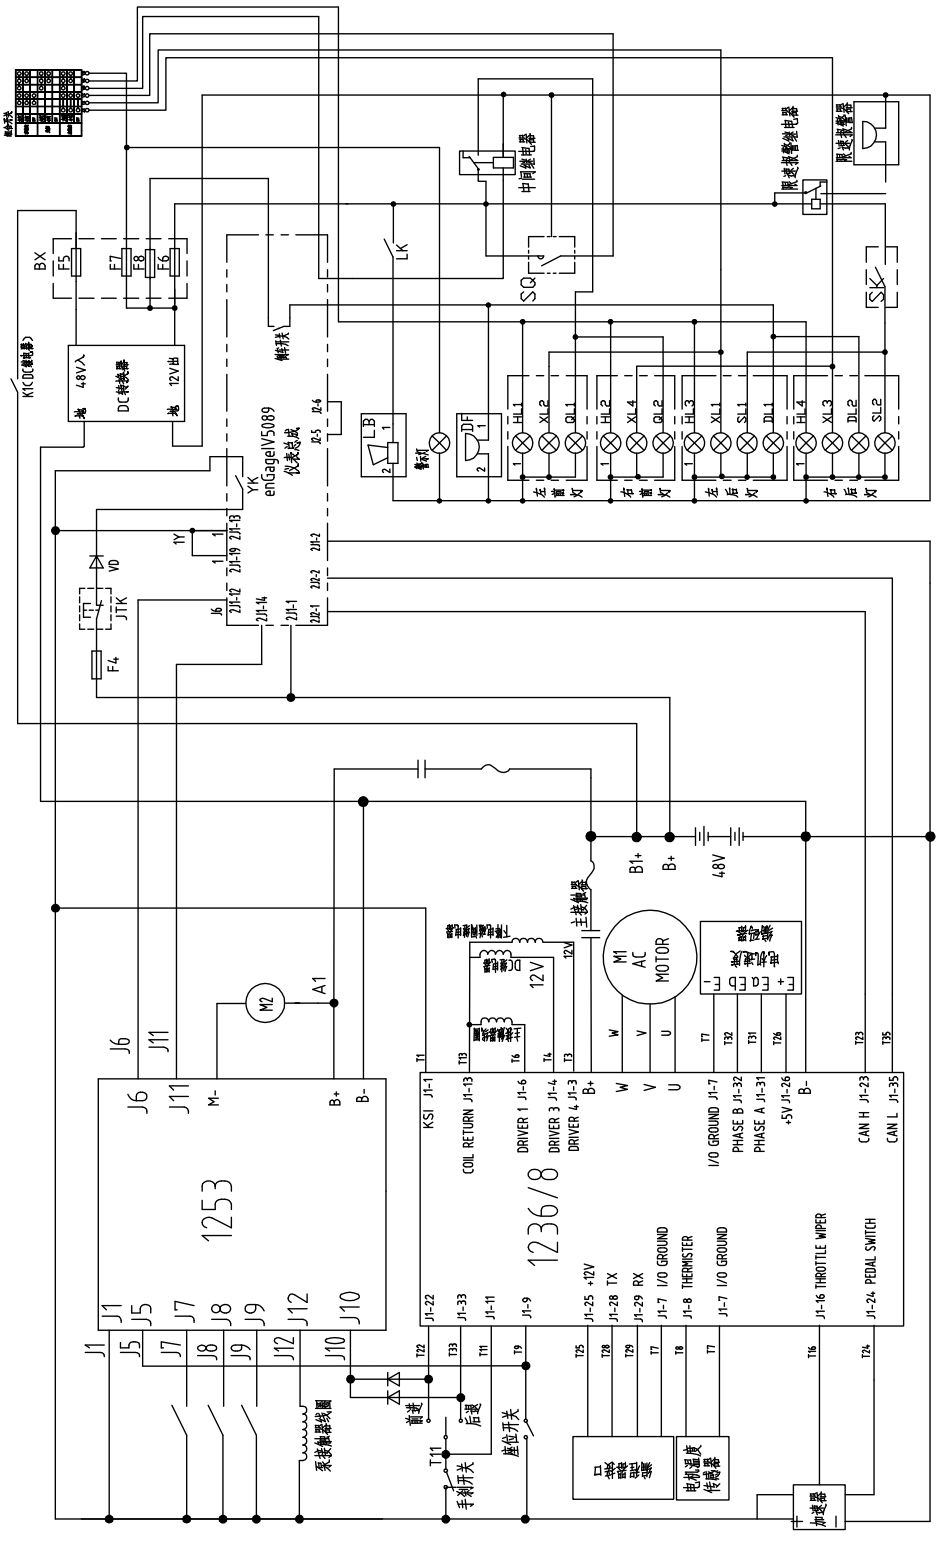

https://truckmanualshub.com/

电气原理图
Principle diagram


FB10/15/18-Z2

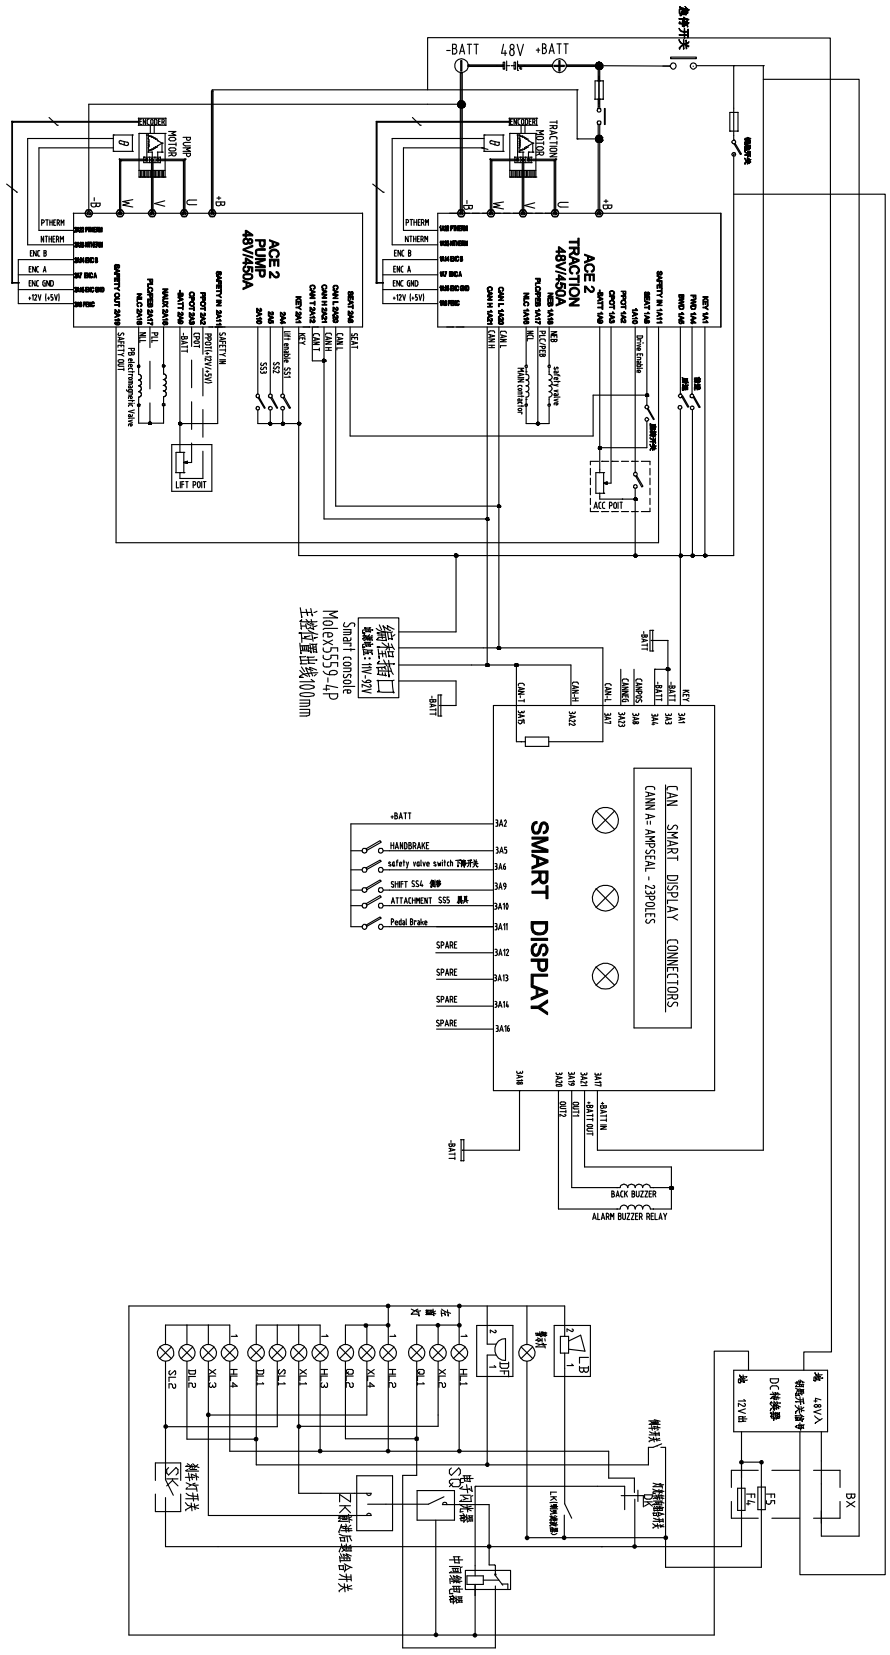

https://truckmanualshub.com/


电气原理图
Principle diagram

FB10/15/18-Z3

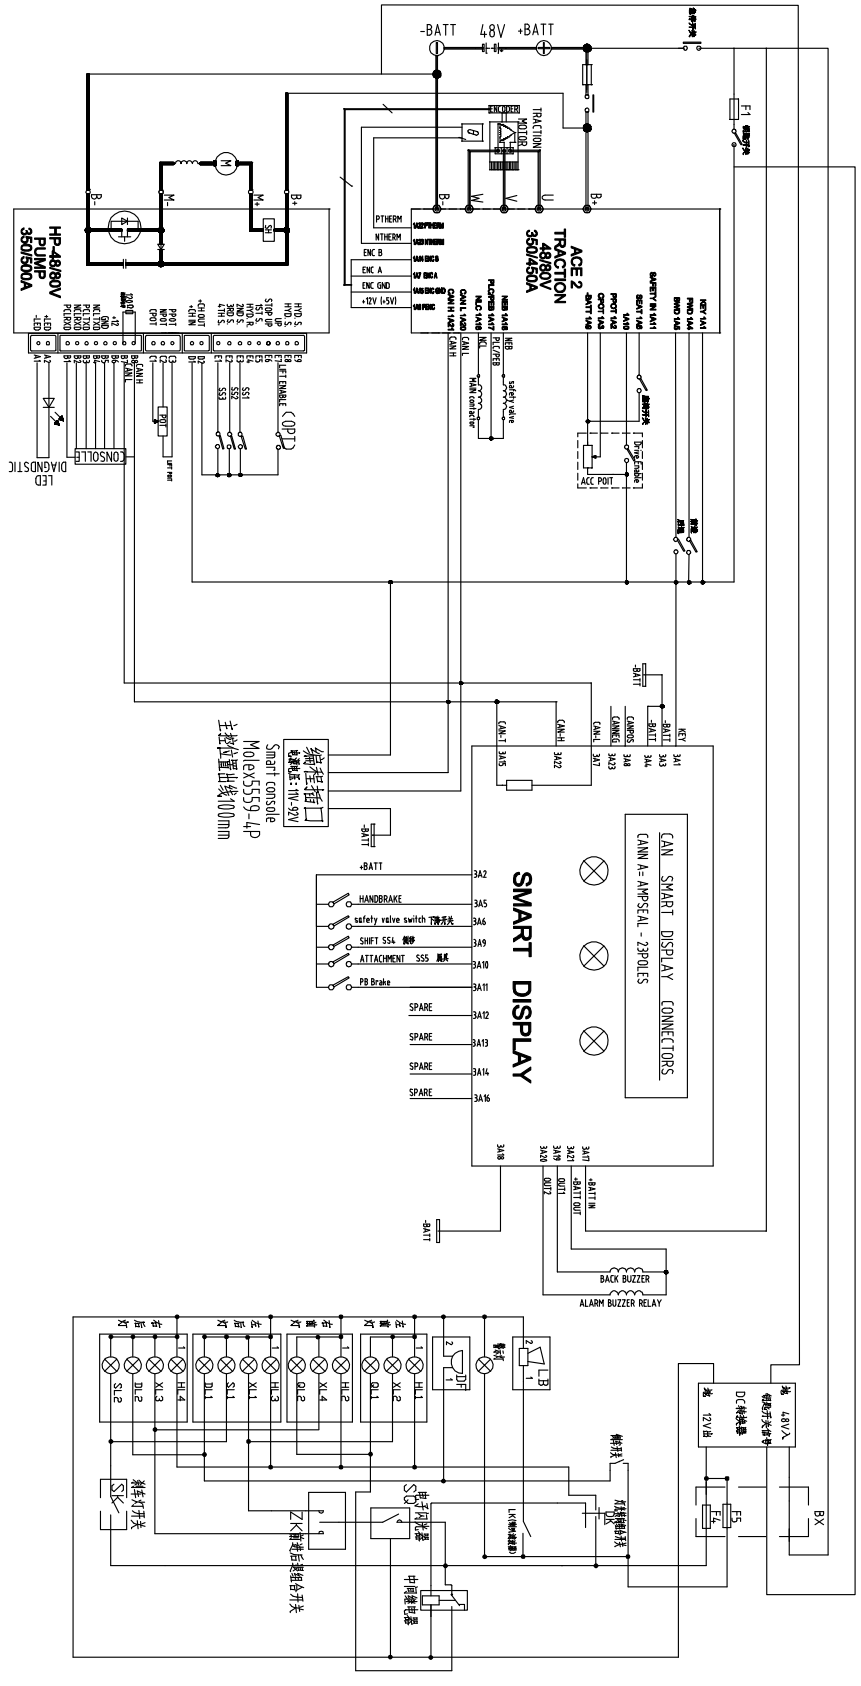

https://truckmanualshub.com/

左右护顶架线束
Left and right overhead guard wire harness

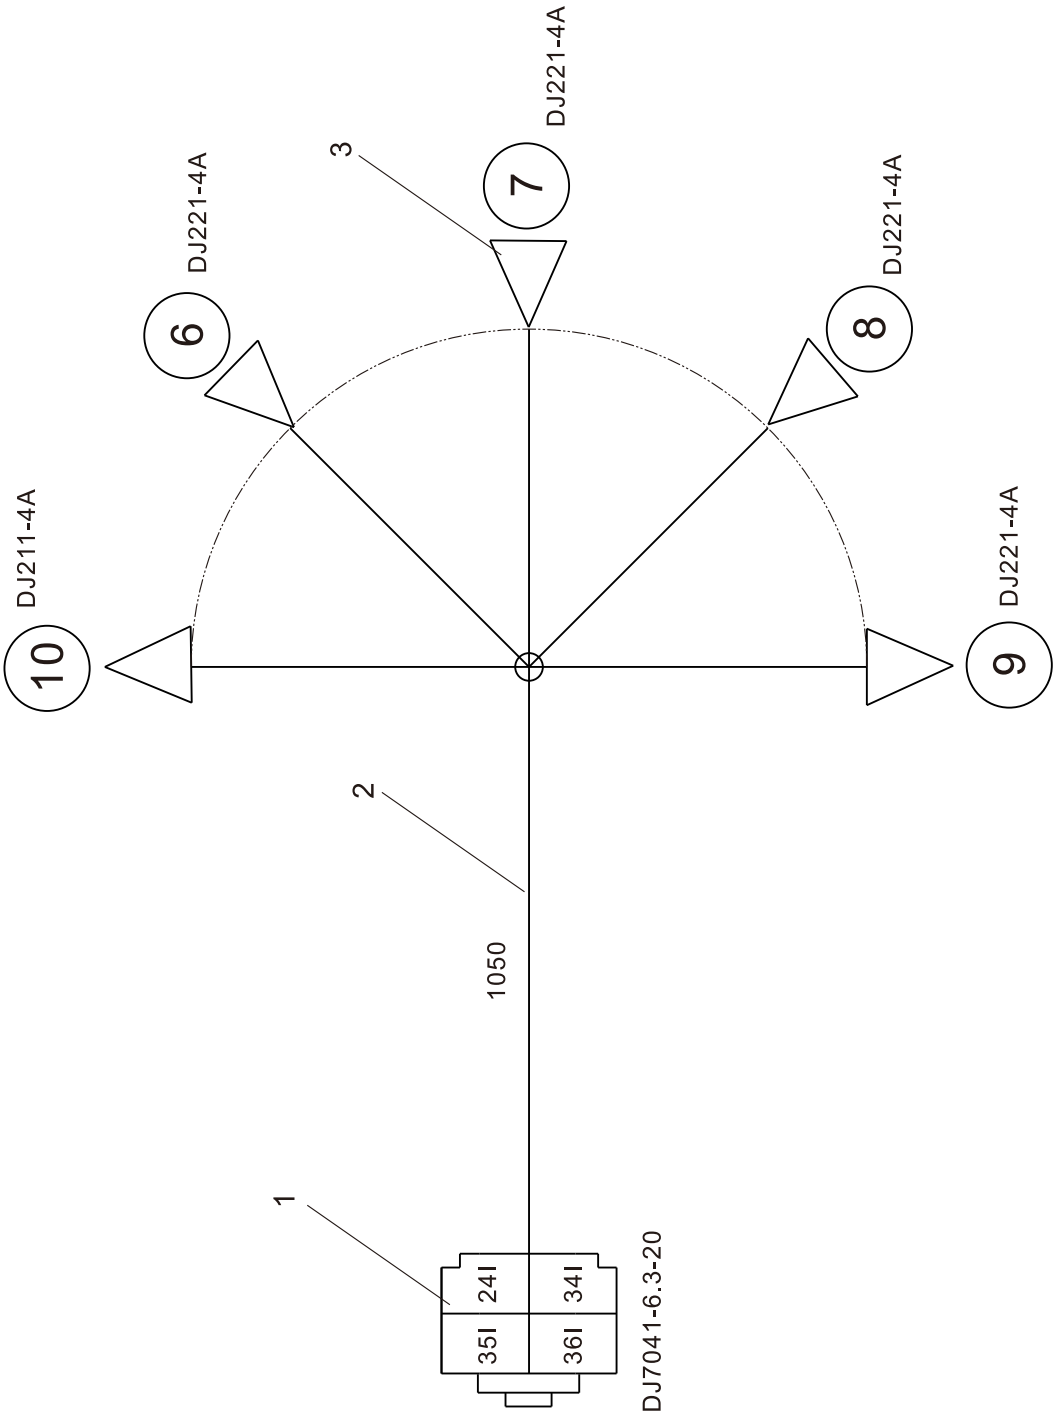

https://truckmanualshub.com/


左右护顶架线束
Left and right overhead guard wire harness

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A2-00500	左护顶架线束 Left overhead guard wire harness	1	
B	A15A2-00600	右护顶架线束 Right overhead guard wire harness	1	
1	DJ7041-6.3-20	四芯复合插座 4-Wire composite socket	1	
2	FJ-81	黑色粘胶带 Black sticky insulated belt	2m	
3	DJ221-4A	圆形插座 Rounded socket	5	

https://truckmanualshub.com/

整车线束
Vehicle harness


FB10/15/18-C2

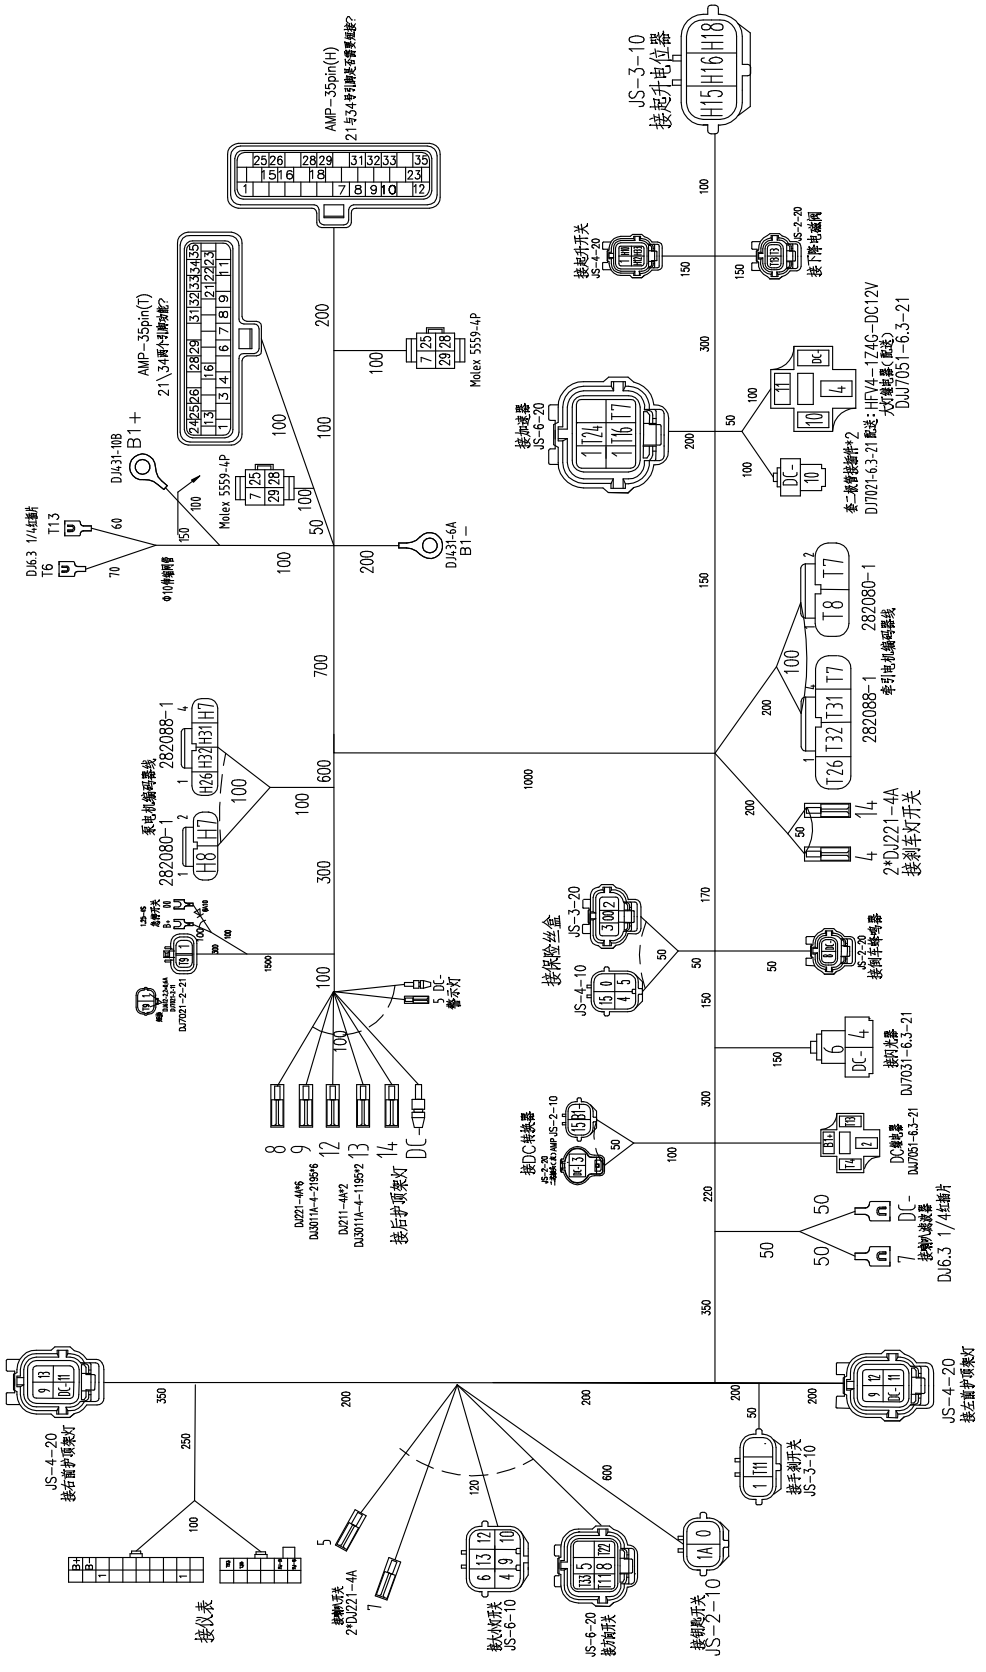

https://truckmanualshub.com/

整车线束
Vehicle harness


FB10/15/18-C3

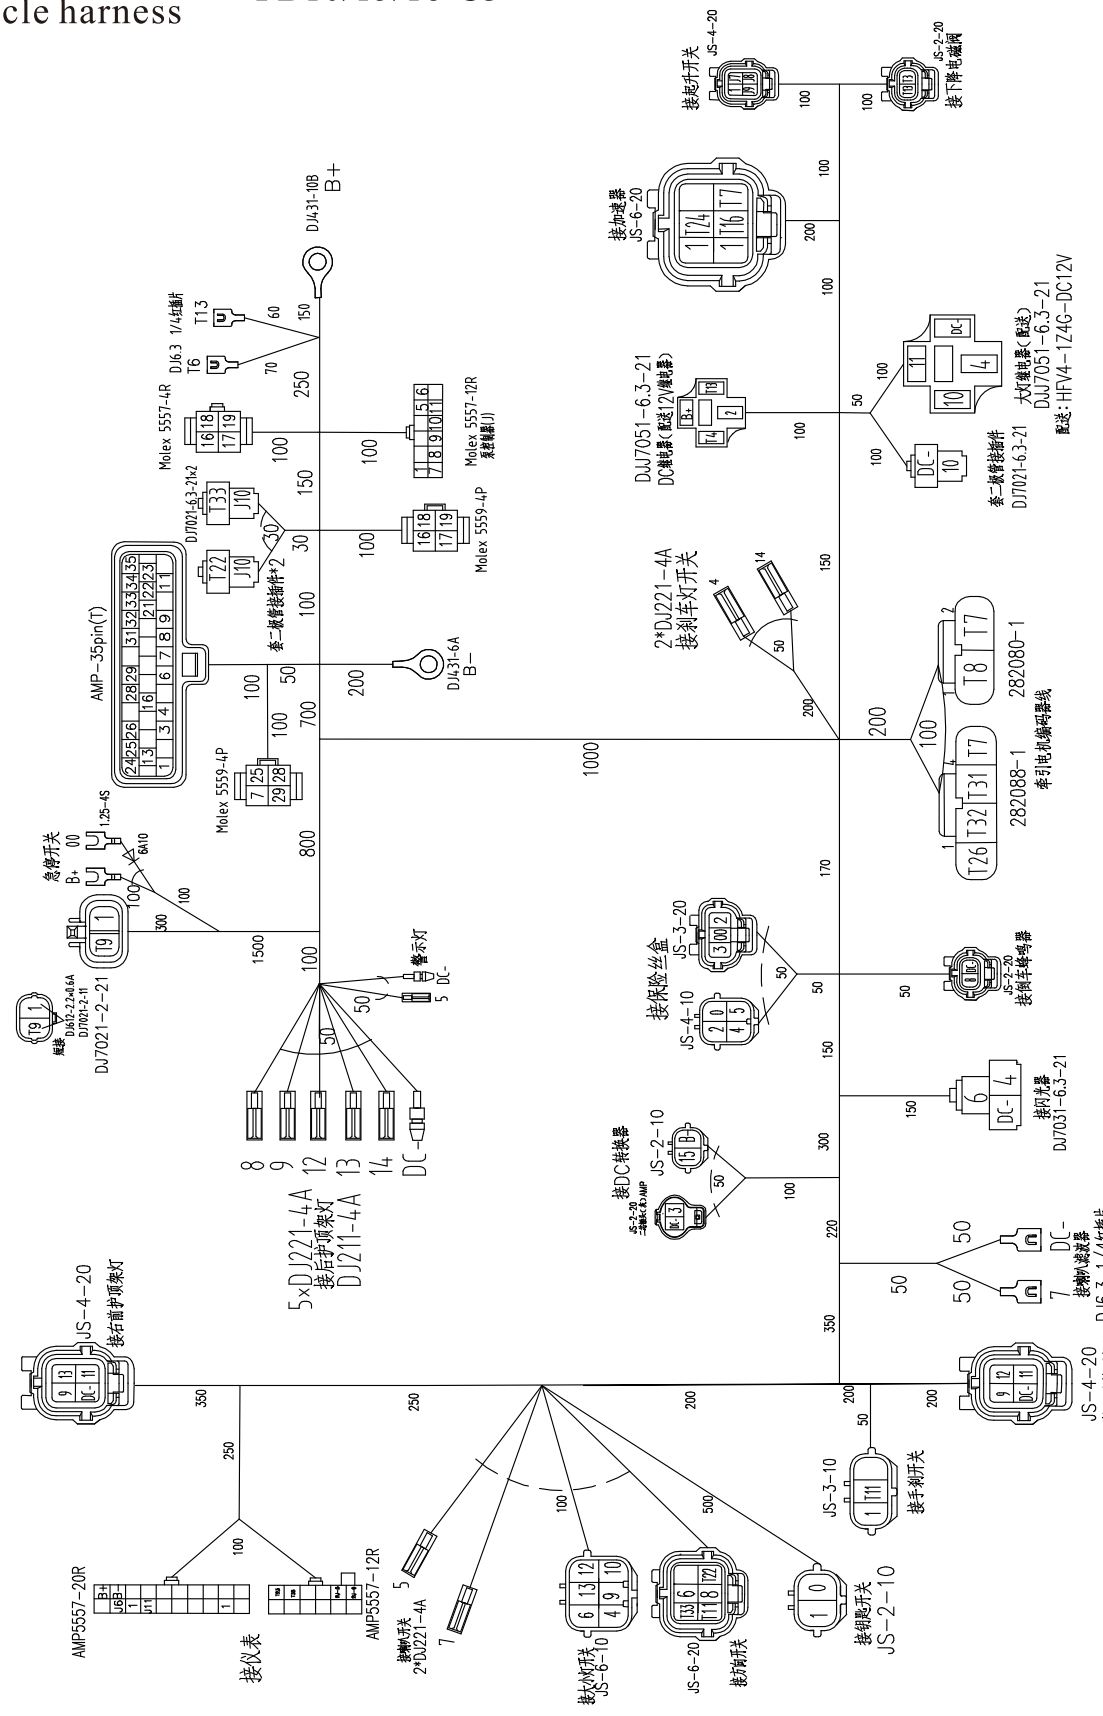

https://truckmanualshub.com/

整车线束
Vehicle harness


FB10/15/18-Z2

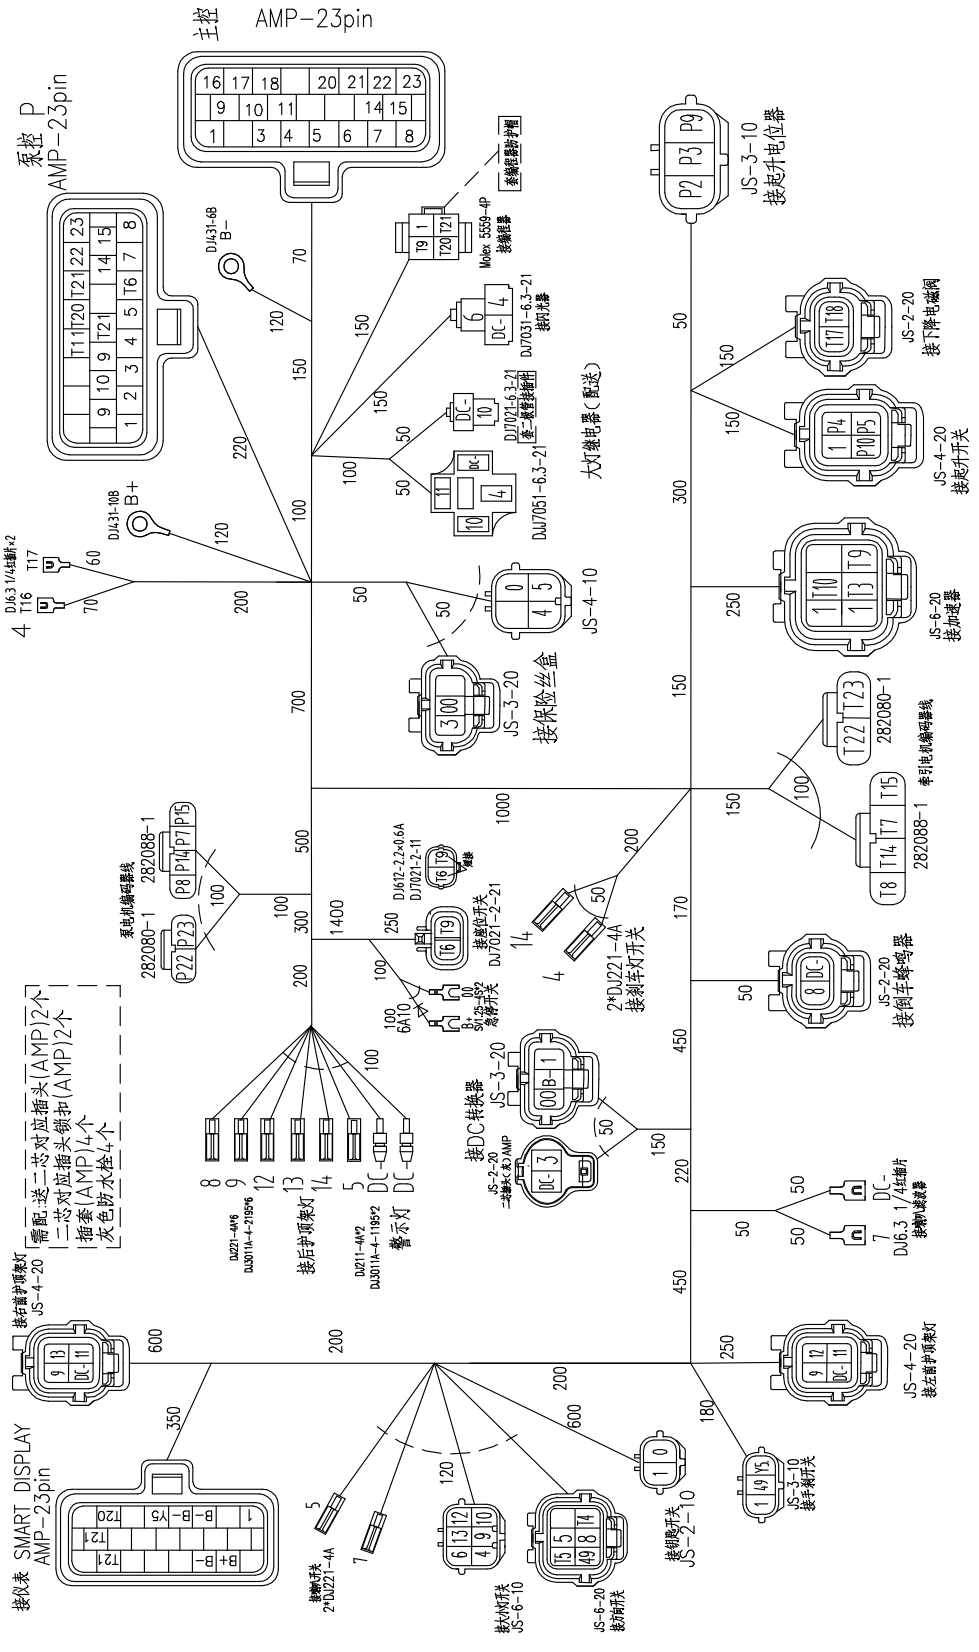

https://truckmanualshub.com/


整车线束
Vehicle harness

FB10/15/18-Z3

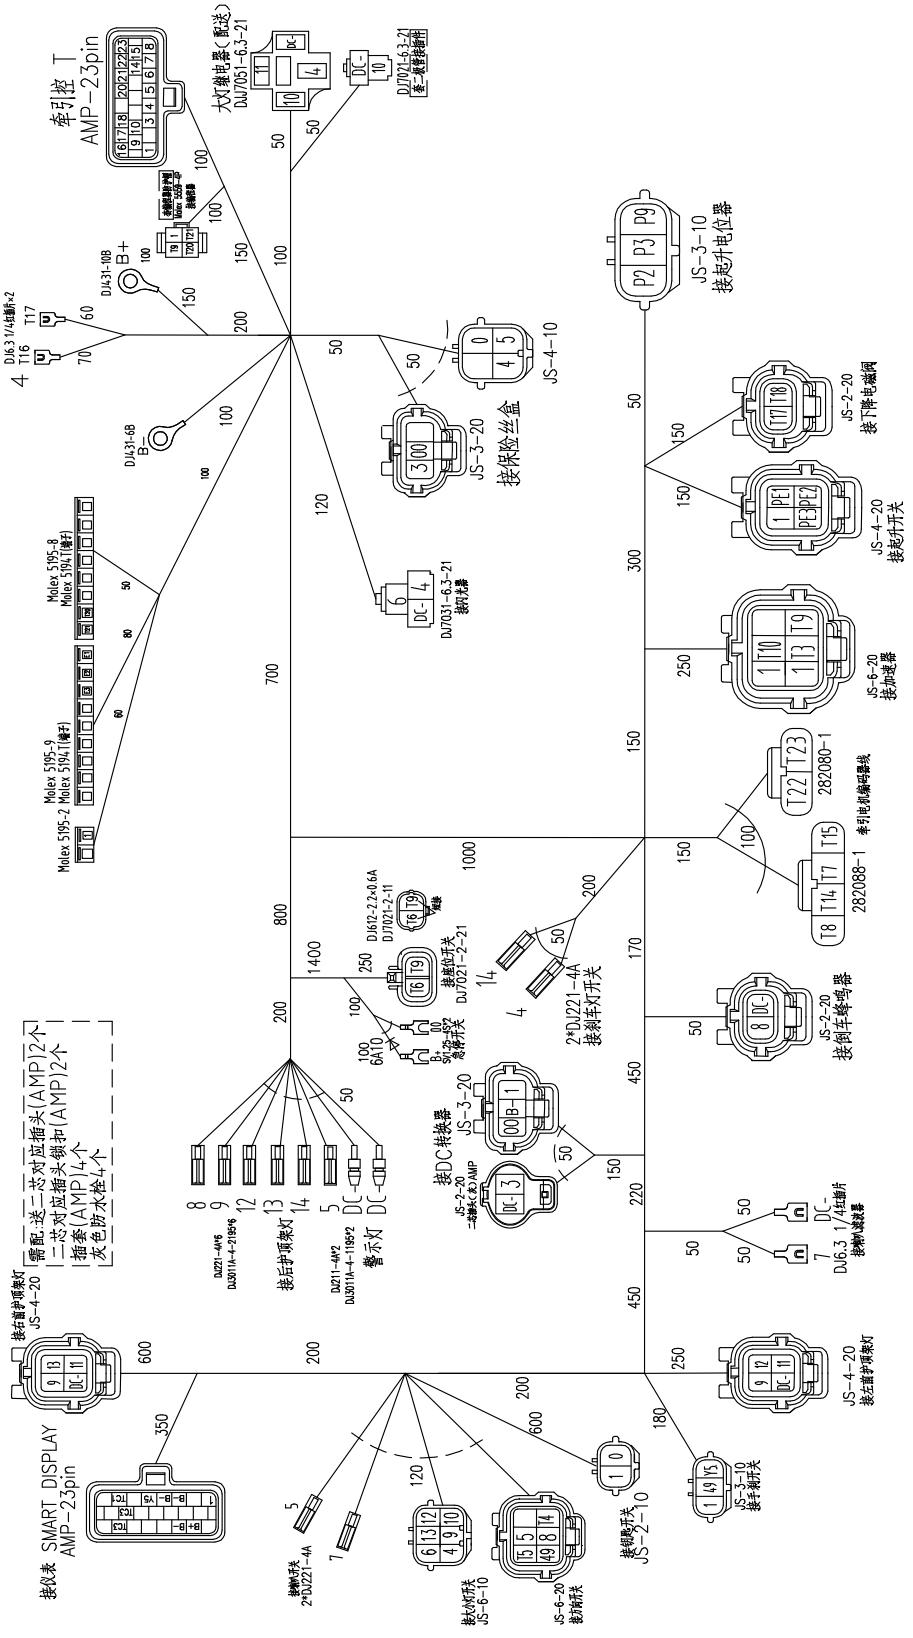

https://truckmanualshub.com/

手制动开关
Hand brake switch

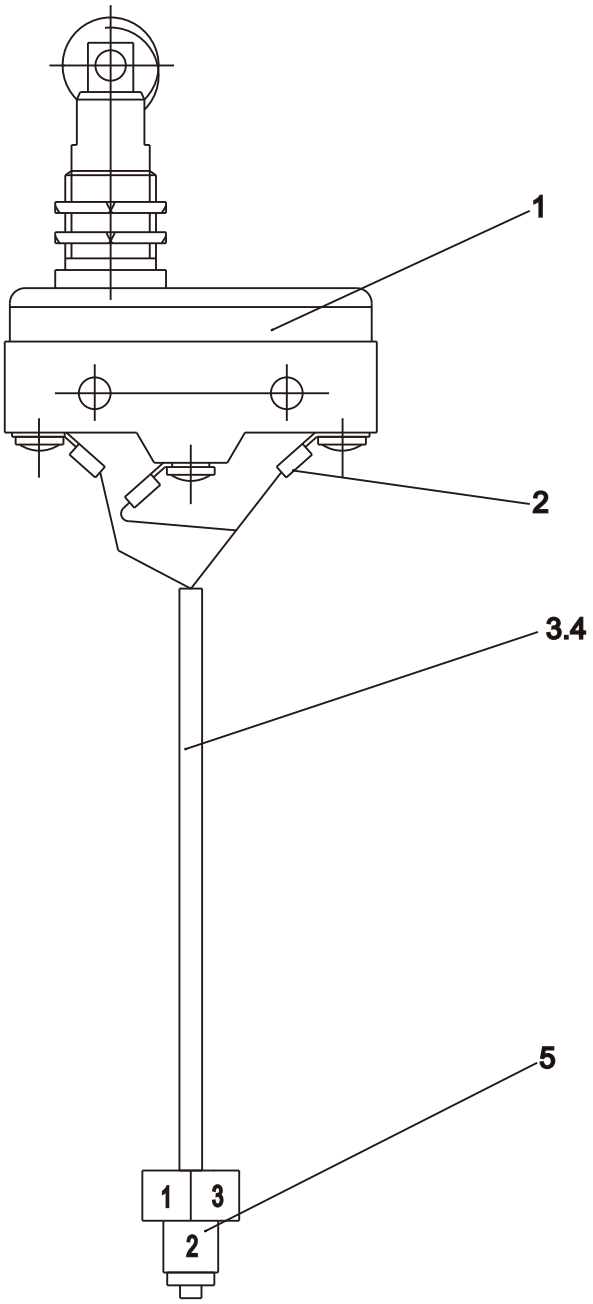


https://truckmanualshub.com/

手制动开关
Hand brake switch

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15A2-00202	微动开关 Micro distance switch	1	
2	DJ431-4	片形孔式接线端子 Connector	3	
3		黑色套管 φ5 L=110 Black casing	1	
4	QVR	软导线（截面1mm）Soft wire(section=1mm)	1	
5	DJ2031-6.3-20	二芯复合插座 2-Wire composite plug	1	

https://truckmanualshub.com/

电源插座总成
Battery socket ass'y

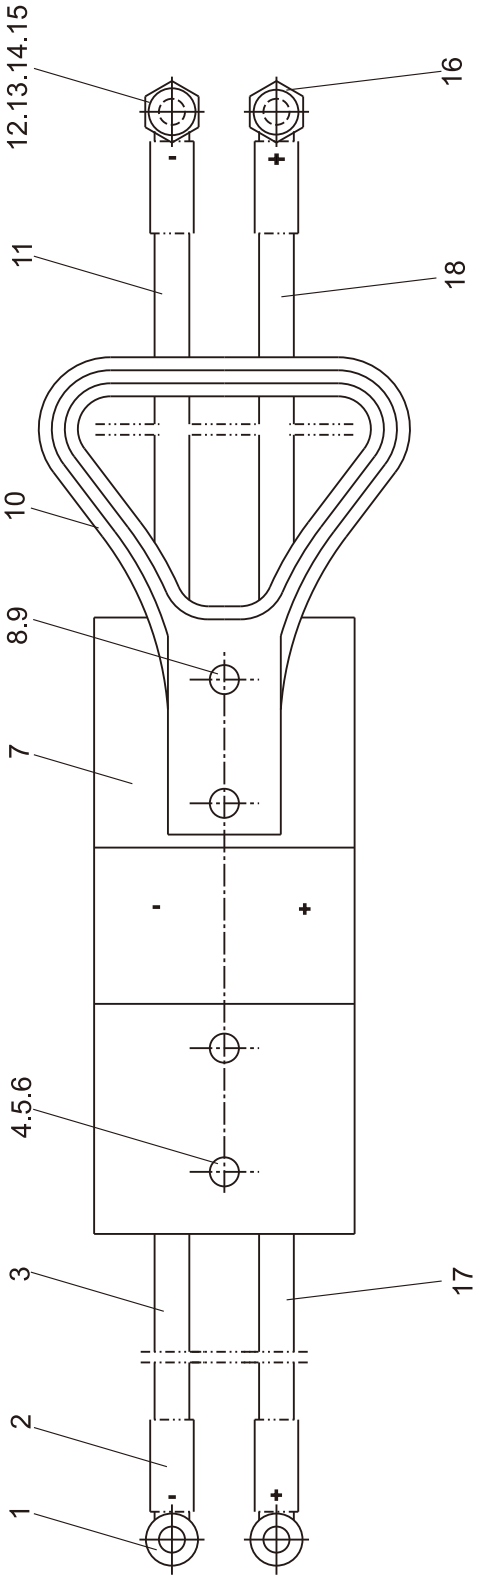

https://truckmanualshub.com/


电源插座总成
Battery socket ass'y

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	QT35-8	冷压接线端子φ8 Connector	3	
2		热缩套管φ16×60 Plastic pipe	4	
3	YHHRD	电缆线35mm^2,L=1530 Cable	1	FB10/15/18-C2
-	YHHRD	电缆线35mm^2,L=1600 Cable	1	FB10/15/18-C3
-	YHHRD	电缆线35mm^2,L=1400 Cable	1	FB10/15/18-Z2/Z3
4	GB/T65	螺钉M6×45-Zn.D Screw	2	
5	GB/T93	弹垫6 Washer,lock	2	
6	GB/T97.1	平垫6 Washer	2	
7	SB175	两芯接插件 2-wire composite socket	2	
8	GB/T65	螺钉M6×40-Zn.D Screw	2	
9	G/TB6170	螺母M6-Zn.D Nut	2	
10	A15A2-00401	拉手 Puller	1	
11	YHHRD	电缆线35mm^2,L=1200 Cable	1	FB10/15/18-C2
-	YHHRD	电缆线35mm^2,L=700 Cable	1	FB10/15/18-C3/Z2/Z3
12	GB/T5783	螺栓M8×25 Bolt	2	
13	GB/T6170	螺母M8 Nut	2	
14	GB/T97.1	平垫8 Washer	2	
15	GB/T93	弹垫8 Washer,lock	2	
16	QT50-10	冷压接线端子φ10 Connector	1	
17	YHHRD	电缆线35mm^2,L=1200 Cable	1	FB10/15/18-C2
-	YHHRD	电缆线35mm^2,L=1400 Cable	1	FB10/15/18-C3
-	YHHRD	电缆线35mm^2,L=1800 Cable	1	FB10/15/18-Z2/Z3
18	YHHRD	电缆线35mm^2,L=550 Cable	1	FB10/15/18-C2
-	YHHRD	电缆线35mm^2,L=700 Cable	1	FB10/15/18-C3/Z2/Z3

https://truckmanualshub.com/

电控总成
Controller ass'y

FB10/15/18-C2

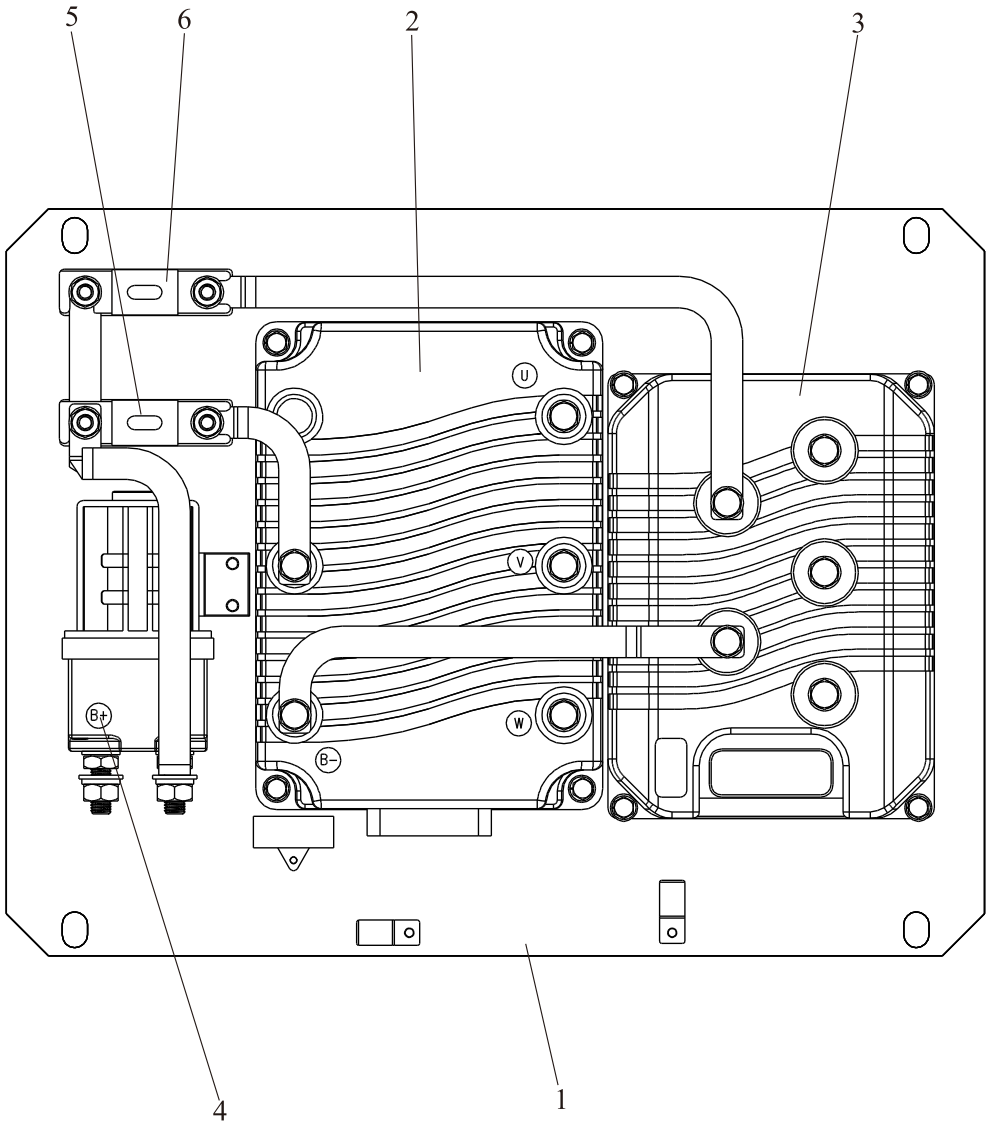

https://truckmanualshub.com/


电控总成 Controller ass'y FB10/15/18-C2

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15K2-10100	电控总成 Controller ass'y	1	
1	A15K2-10102	散热底板 Floor cooling	1	
2	A15K2-10101	牵引控制器 Traction controller	1	
3	A15K2-10103	泵控制器 Pump controller	1	
4	A15K2-10104	主接触器 Main contactor	1	
5	A15K2-10105	350A熔断器 Fuse	1	
6	A15K2-10106	250A熔断器 Fuse	1	

https://truckmanualshub.com/

电控总成
Controller ass'y

FB10/15/18-C3

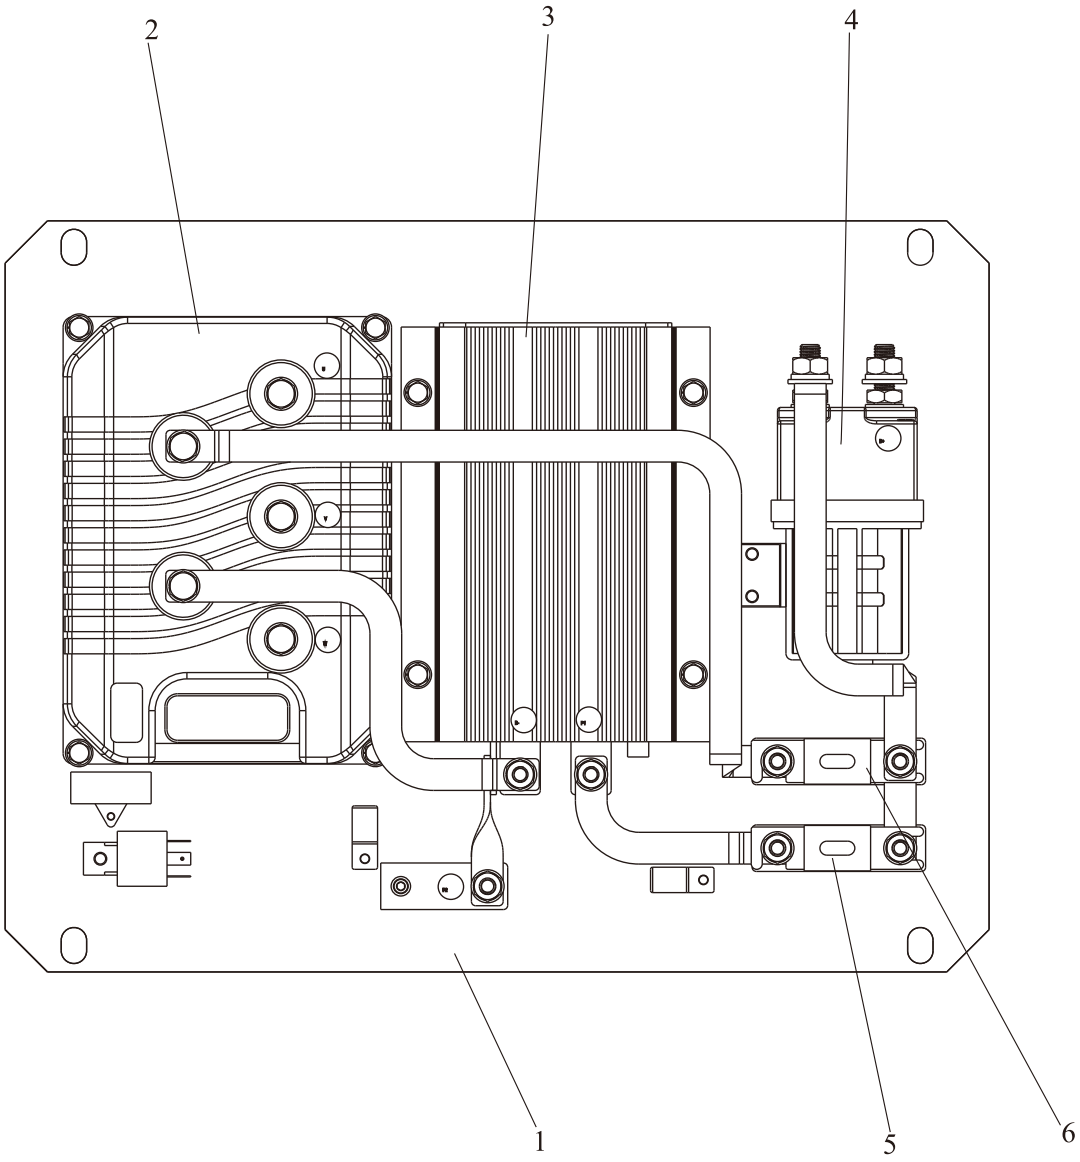

https://truckmanualshub.com/


电控总成 Controller ass'y FB10/15/18-C3

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15U2-10100	电控总成 Controller ass'y	1	
1	A15U2-10102	散热底板 Floor cooling	1	
2	A15U2-10101	牵引控制器 Traction controller	1	
3	A15U2-10103	泵控制器 Pump controller	1	
4	A15U2-10104	主接触器 Main contactor	1	
5	A15U2-10105	350A熔断器 Fuse	1	
6	A15U2-10106	250A熔断器 Fuse	1	

https://truckmanualshub.com/

电控总成
Controller ass'y

FB10/15/18-Z2

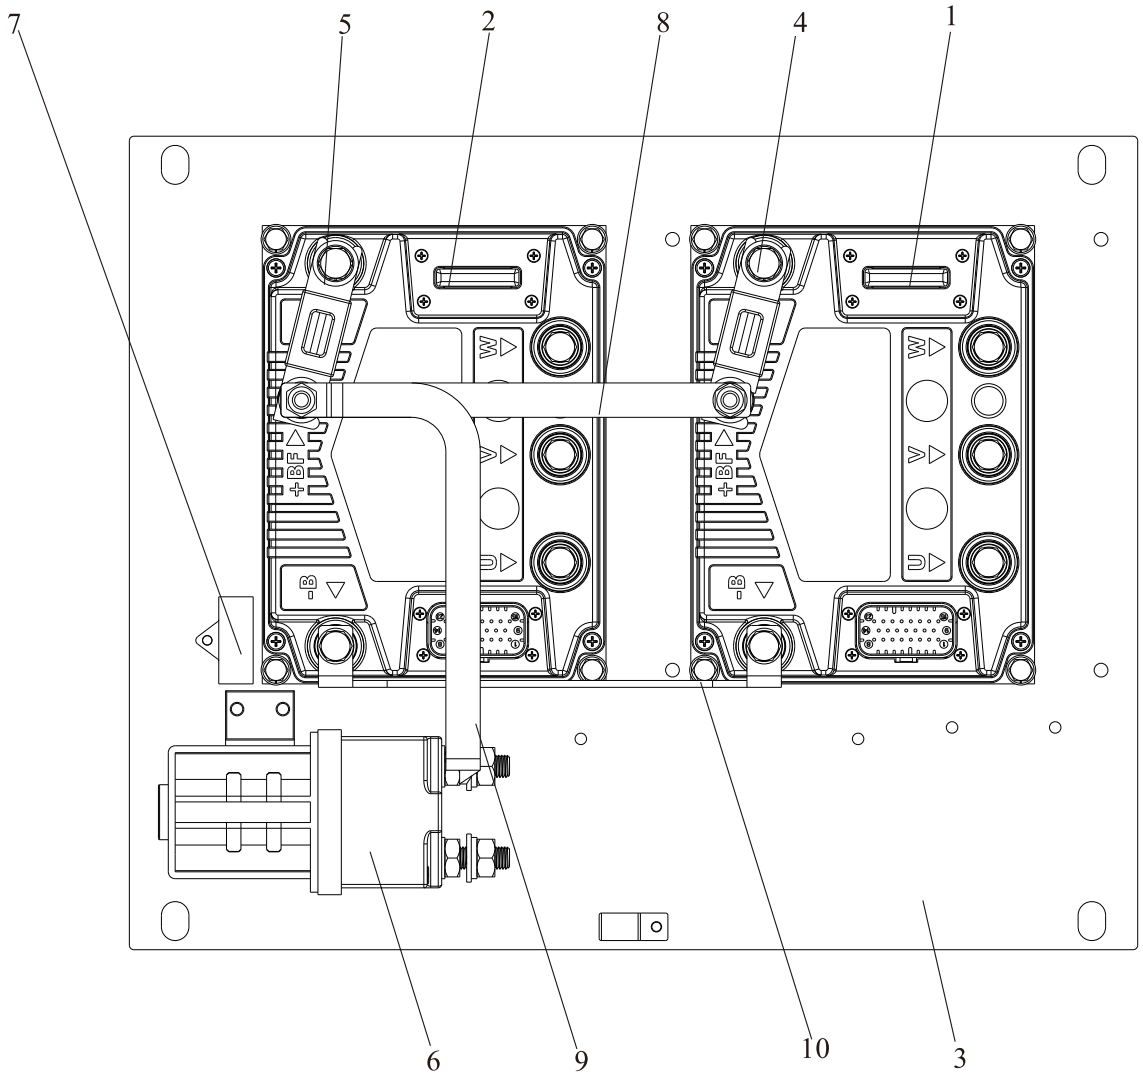

https://truckmanualshub.com/


电控总成 Controller ass'y FB10/15/18-Z2

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15J2-10100	电控总成 Controller ass'y	1	
1	A15J2-10101	牵引控制器 Traction controller	1	
2	A15J2-10102	泵控制器 Pump controller	1	
3	A15J2-10103	散热底板 Floor cooling	1	
4	A15J2-10104	牵引控制器陶瓷式熔断片 Fuse link	1	
5	A15J2-10105	泵控制器陶瓷式熔断片 Fuse link	1	
6	A15J2-10106	主接触器 Main contactor	1	
7	A15J2-10107	绝缘电阻 Insulation resistance	1	
8	A15J2-10108	牵引控制器正极连接铜片 Copper sheet	1	
9	A15J2-10109	泵控制器正极连接铜片 Copper sheet	1	
10	A15J2-10110	泵控制器负极连接铜片 Copper sheet	1	

https://truckmanualshub.com/

电控总成
Controller ass'y

FB10/15/18-Z3

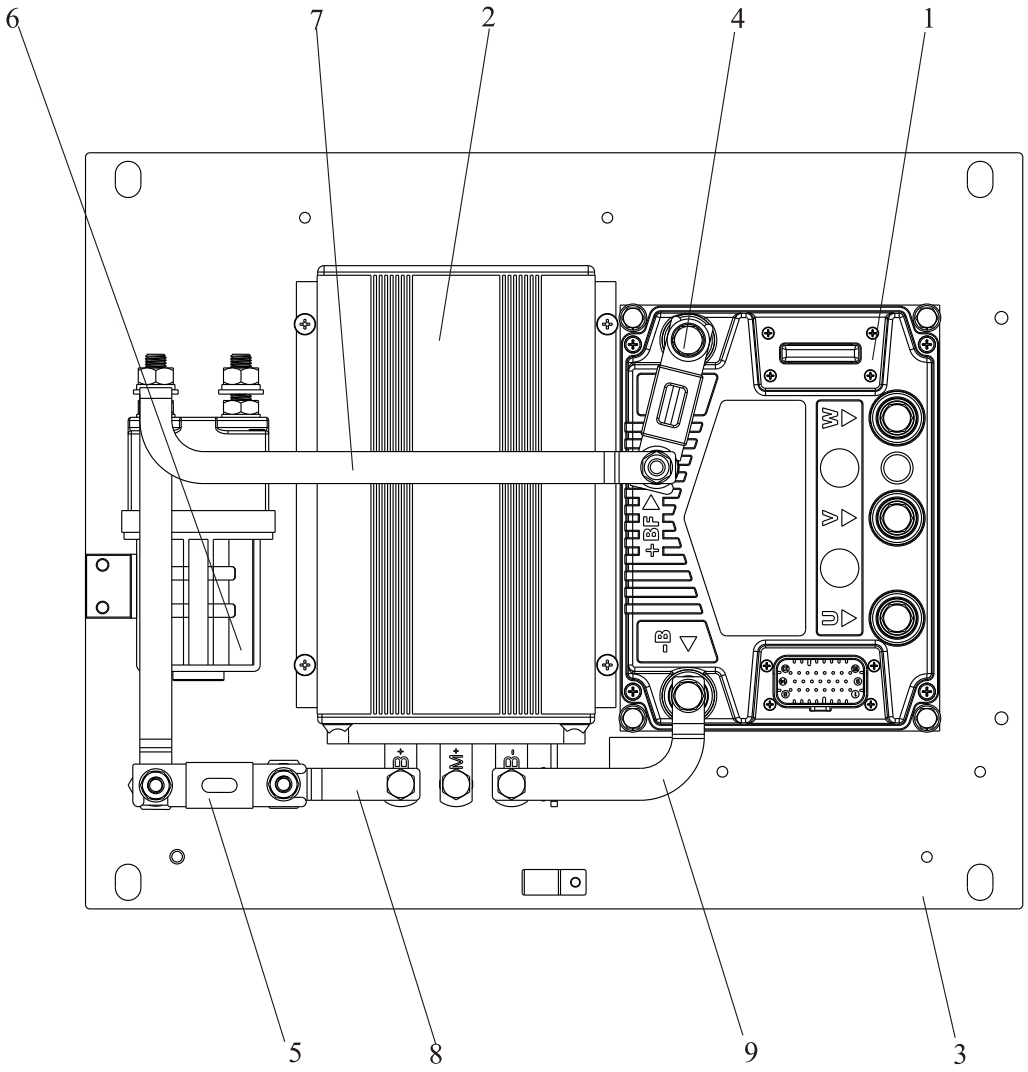


https://truckmanualshub.com/

电控总成 Controller ass'y FB10/15/18-Z3

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15V2-10100	电控总成 Controller ass'y	1	
1	A15V2-10101	牵引控制器 Traction controller	1	
2	A15V2-10102	泵控制器 Pump controller	1	
3	A15V2-10103	散热底板 Floor cooling	1	
4	A15V2-10104	牵引控制器陶瓷式熔断片 Fuse link	1	
5	A15V2-10105	泵控制器陶瓷式熔断片 Fuse link	1	
6	A15V2-10106	主接触器 Main contactor	1	
7	A15V2-10107	牵引控制器正极连接铜片 Copper sheet	1	
8	A15V2-10108	泵控制器正极连接铜片 Copper sheet	1	
9	A15V2-10109	泵控制器负极连接铜片 Copper sheet	1	

https://truckmanualshub.com/

蓄电池组
Battery ass'y

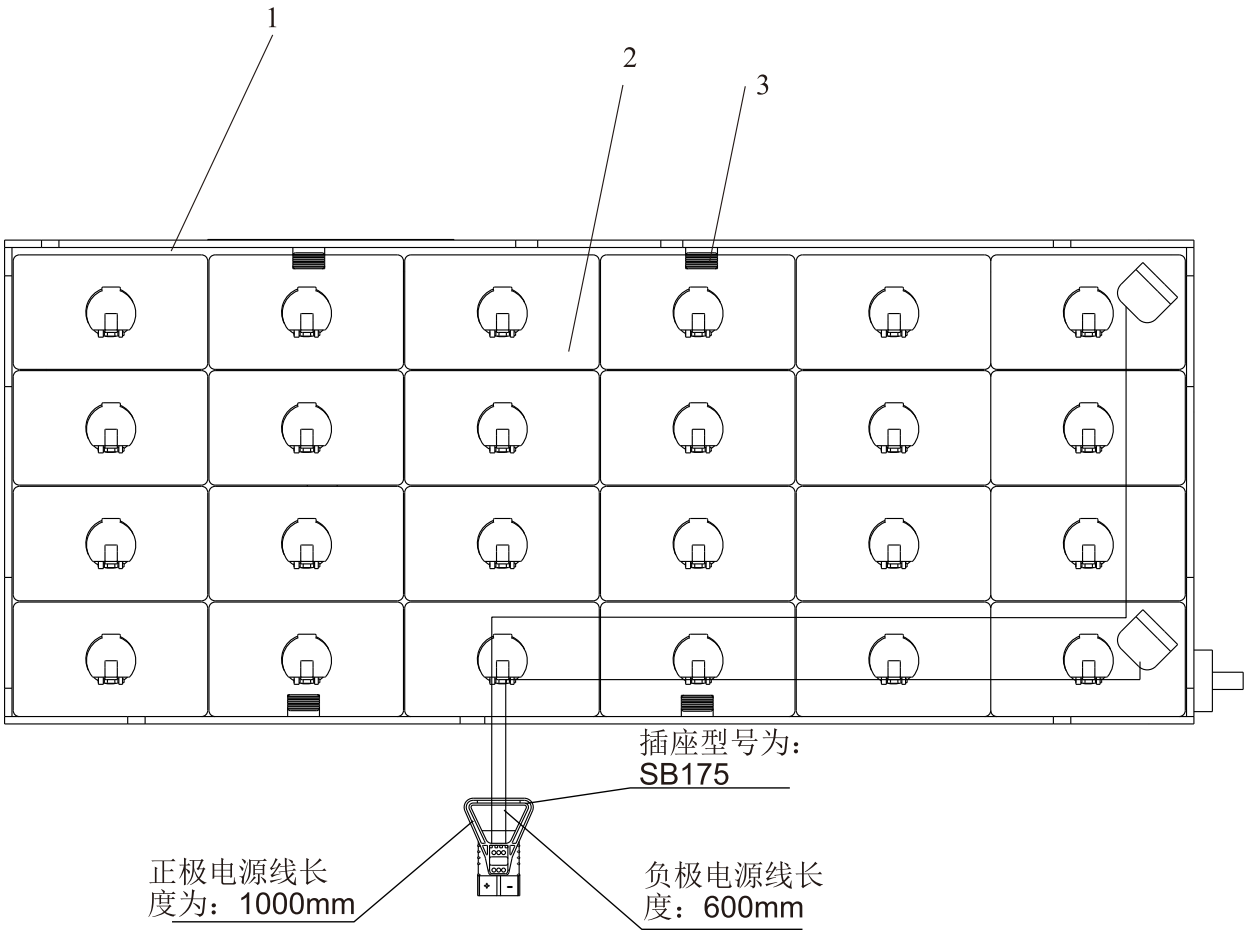

https://truckmanualshub.com/

蓄电池组
Battery ass'y

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15T2-20200	蓄电池 Battery ass'y	1	1t标配
–	A15T2-20100	蓄电池 Battery ass'y	1	1.5t标配
–	A15T2-20300	蓄电池 Battery ass'y	1	1.8t标配
1	A15T2-20110	蓄电池箱体 Box	1	
2	5DB400	蓄电池单体 Battery	24	1t标配
–	5DB450	蓄电池单体 Battery	24	1.5t标配
–	5DB500H	蓄电池单体 Battery	24	1.8t标配
3	D70S1-20006	缓冲垫 Rubber	4	


https://truckmanualshub.com/

三、转向系统

STEERING SYSTEM

https://truckmanualshub.com/

转向操纵
Steering control

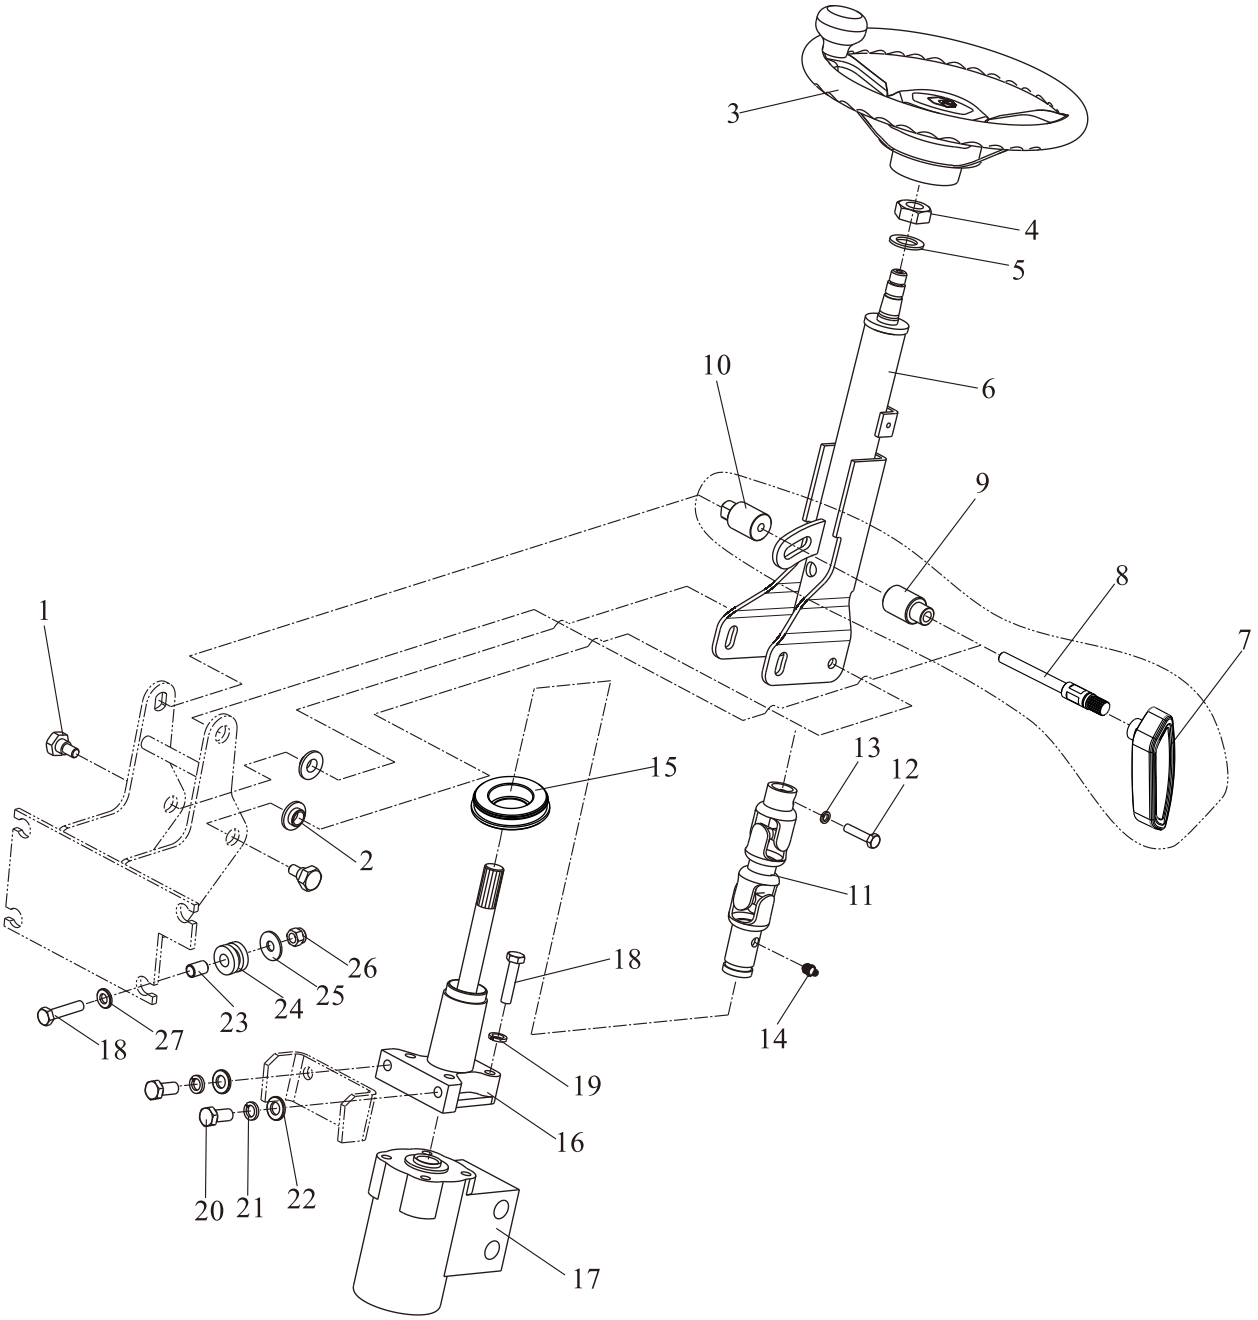


https://truckmanualshub.com/

转向操纵
Steering control

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A30A6-00005	螺栓 Bolt	2	
2	A30A6-00004	垫圈 Washer	2	
3	A15A6-00200	方向盘总成φ300 Wheel,Steering ass'y	1	
4	GB/T6171	螺母M16×1.5 Nut	1	
5	GB/T97.1	平垫16 Washer	1	
6	A15G6-00100	转向管柱总成 Steering column	1	
7	A15G6-00206	锁紧手柄 Lever	1	
8	A15G6-00205	调整螺栓 Bolt	1	
9	A15G6-00202	夹紧套II Clamping sleeve	1	
10	A15G6-00201	夹紧套 Clamping sleeve	1	
11	A30C6-00200	万向节总成 Joint	1	
12	GB/T5783	螺栓M8×45 Bolt	1	
13	GB/T93	弹垫 8 Washer,lock	1	
14	JB/T7940.1	直通式压注油杯M10 Cup, grease	1	
15	A30C6-00004	密封盖 Seal cover	1	
16	A30C6-00300	连接轴总成 Link ass'y	1	
17	A15A4-40000	转向器 Redirector	1	
18	GB/T5783	螺栓M10×45 Bolt	8	
19	GB/T93	弹垫 10 Washer,lock	4	
20	GB/T5786	螺栓M12×1.25×25 Bolt	2	
21	GB/T93	弹垫 12 Washer,lock	2	
22	GB/T97.1	平垫 12 Washer	2	
23	D30A1-20002	减振垫 Rubber	4	
24	A30A7-40001	套管 Pipe	4	
25	A30A5-20003	垫片 Washer	4	
26	GB/T889.1	非金属嵌件六角锁紧螺母M10 Nut	4	
27	GB/T97.1	平垫10 Washer	5	

https://truckmanualshub.com/

转向桥
Steering axle

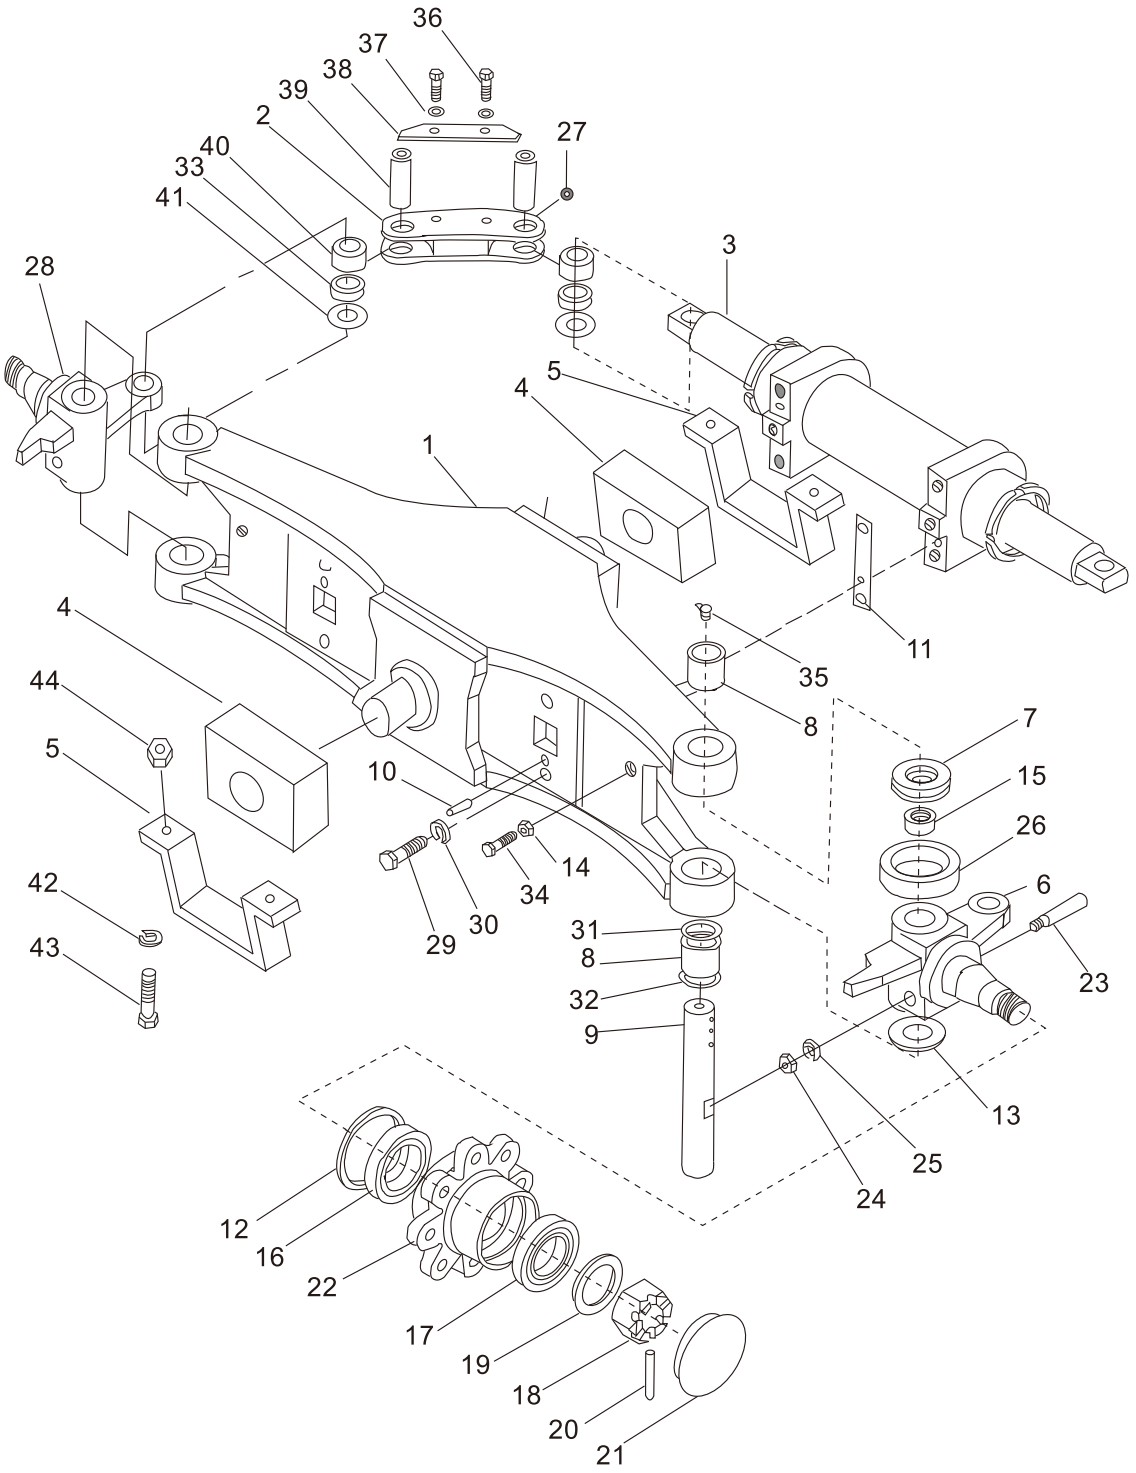


https://truckmanualshub.com/

转向桥
Steering axle

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15C6-10220	转向桥体总成 Axle ass'y	1	
2	A15C6-10201	连杆 Link	2	
3	A15C6-10400	转向油缸总成 Power cylinder ass'y	1	
4	A30A6-10001	减震块 Rubber	2	
5	A30A6-10002	支架盖 Bracket	2	
6	A15C6-10500(R)	右转向节总成 Knuckle R. H. ass'y	1	
7	GB/T301	推力轴承51208 Bearing	2	
8	GB/T290	滚针轴承943/32 Bearing	4	
9	A15C6-10202	转向节主轴 Pin, king	2	
10	GB/T119.1	销10×20 Pin	2	
11	A15C6-10203	调整垫 Shim	4	
12	A15C6-10221	橡胶油封 B85×110×12D Seal, oil	2	
13	A15C6-10204	转向节调整垫 Shim	2	
14	GB/T6170	螺母M12 Nut	2	
15	A15C6-10205	防尘罩 Cap	2	
16	GB/T297	轴承7211E Bearing	2	
17	GB/T297	轴承7207E Bearing	2	
18	A15C6-10206	螺母M30×2 Nut	2	
19	GB/T97. 1	垫圈30 Washer	2	
20	GB/T119.1	销6.3×55 Pin	2	
21	A15C6-10207	轮毂盖 Cap	2	
22	A30A6-10208	轮毂 Hub	2	

https://truckmanualshub.com/

转向桥
Steering axle

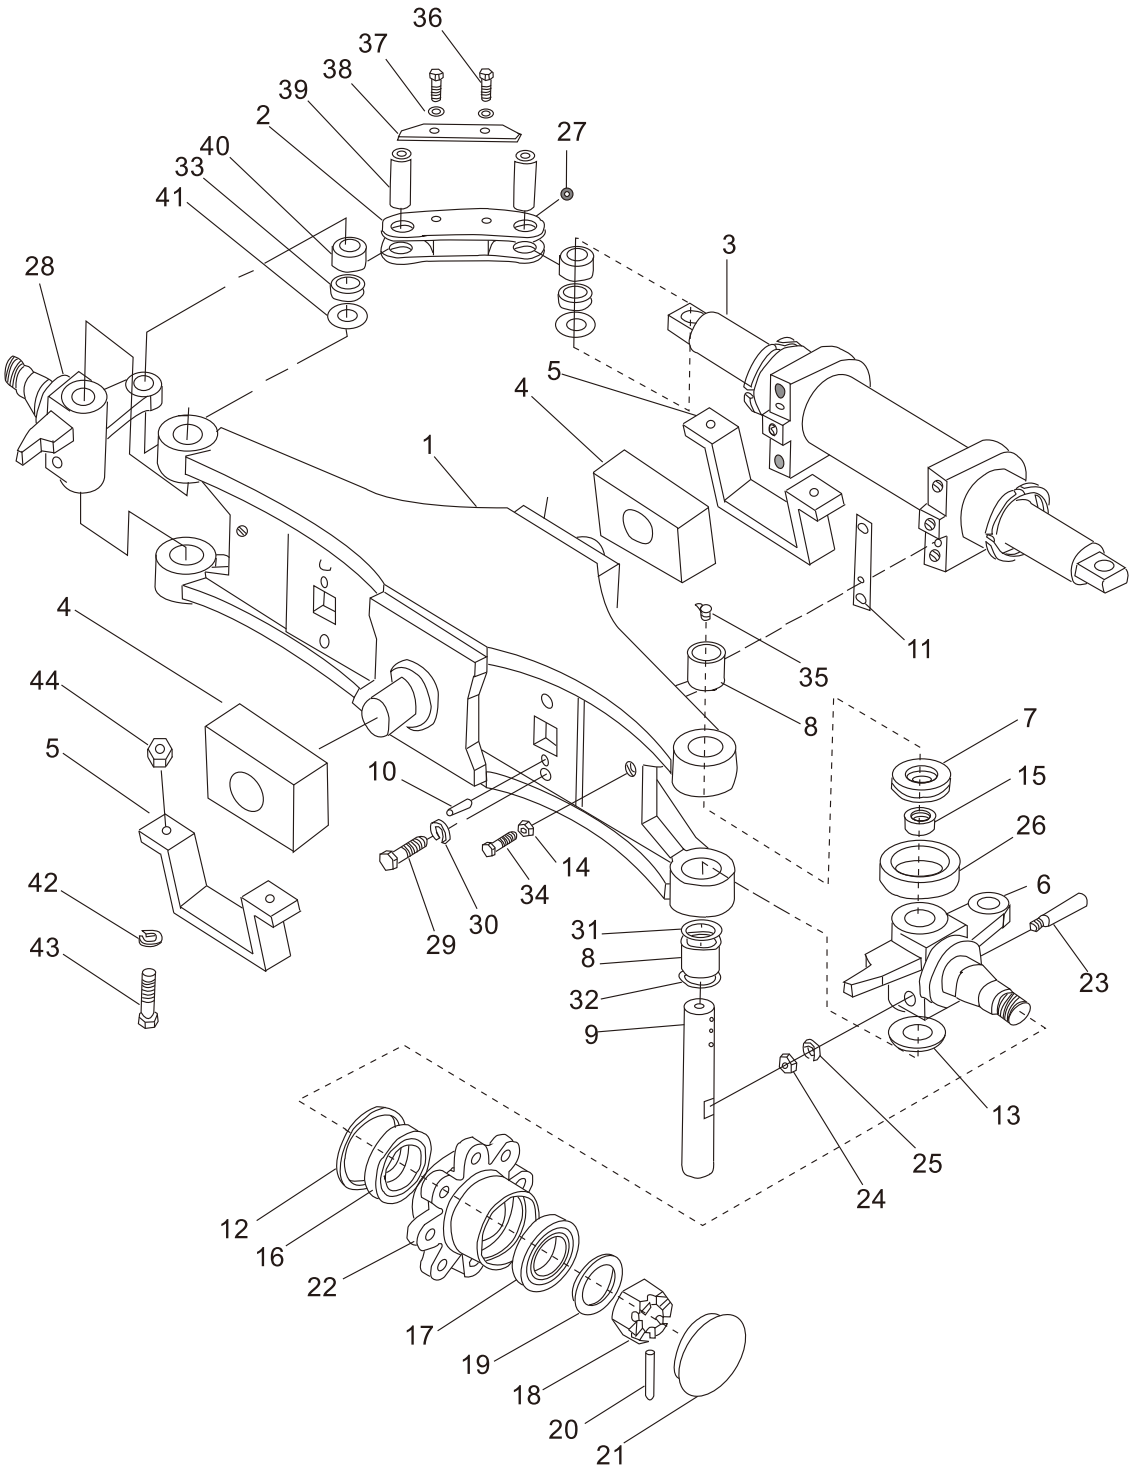


https://truckmanualshub.com/

转向桥
Steering axle

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
23	A15C6-10209	紧固销 Pin	2	
24	GB/T6171	螺母M10×1. 25 Nut	2	
25	GB/T97. 1	垫圈10 Washer	2	
26	A15C6-10210	衬套 Bushing	2	
27	GB/T1152	油杯M6 Cup,grease	4	
28	A15C6-10500(L)	左转向节总成 Knuckle L. H. ass'y	1	
29	GB/T5783	螺栓M14×45 Bolt	4	
30	GB/T93	弹垫14 Washer, lock	4	
31	A15C6-10211	O型圈 O-ring	2	
32	A15C6-10212	油封 Seal, oil	2	
33	A15C6-10213	衬套 Bushing	4	
34	A15C6-10214	限位螺栓 Bolt	2	
35	A15C6-10215	油杯 ZG1/8 Cup,grease	2	
36	GB/T5783	螺栓M8×18 Bolt	4	
37	GB/T93	弹垫8 Washer, lock	4	
38	A15C6-10216	挡板 Baffle	2	
39	A15C6-10217	连杆销 Pin	4	
40	A15C6-10218	ES型向心关节轴承 Bearing	4	
41	A15C6-10219	调整垫 Shim	4	
42	GB/T93	弹垫16 Washer, lock	4	
43	GB/T5783	螺栓 M16×40 Bolt	4	
44	GB/T6170	螺母 M16 Nut	4	

https://truckmanualshub.com/

转向油缸
Steering cylinder

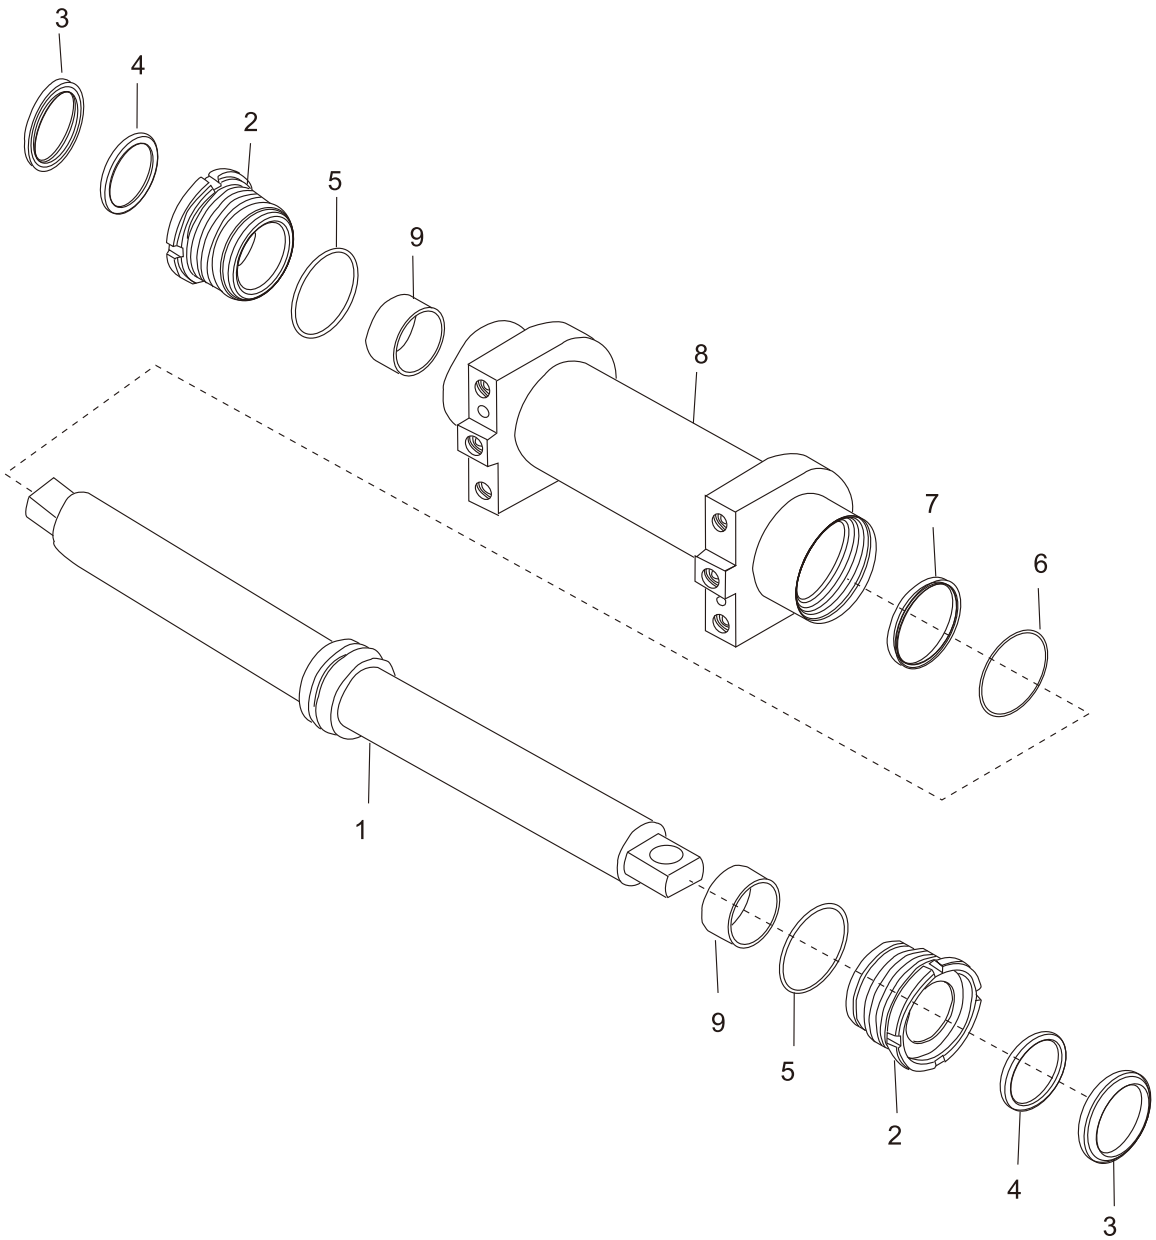


https://truckmanualshub.com/

转向油缸
Steering cylinder

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15C6-10400	转向油缸总成 Power cylinder ass'y	1	
2	A15C6-10600	活塞杆总成 Piston rod ass'y	1	
3	A15C6-10401	缸盖 Cap	2	
4	A15C6-10402	防尘圈50×72 Seal, dust	2	
5	GB/T3452. 1	O型密封圈63×3. 55 O-ring	2	
6	GB/T3452. 1	O型密封圈60×3. 55 O-ring	1	
7	A15C6-10403	支承环 Seal, slipper	1	
8	A15C6-10404	缸筒总成 Body, power steering	1	
9	A15C6-10405	钢背轴承5030 Bearing	2	

https://truckmanualshub.com/

转向轮
Steering wheel

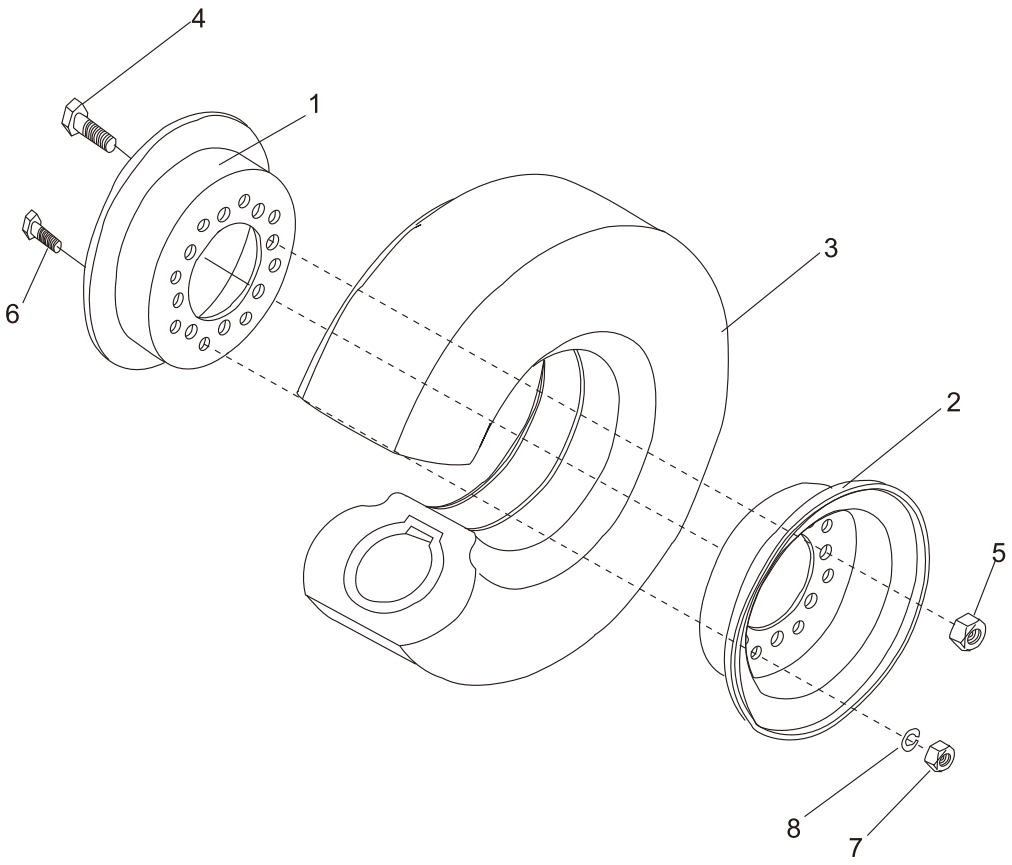

https://truckmanualshub.com/

转向轮
Steering wheel


序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15A6-10101	外轮辋 Rim, outside	2	
2	A15A6-10102	内轮辋 Rim, inside	2	
3	GB/T2982	轮胎5.00-8-10PR Tire	2	
4	A15A6-10002	轮毂螺栓 Bolt	16	
5	A30A6-10004	轮毂螺母 Nut	16	
6	A30A6-10005	轮辋螺栓 Bolt	16	
7	GB/T6170	螺母M12 Nut	16	
8	GB/T93	弹垫 12 Washer,lock	16	

https://truckmanualshub.com/

四、车身系统
BODY SYSTEM

https://truckmanualshub.com/

车架与平衡重
Frame & counter weight

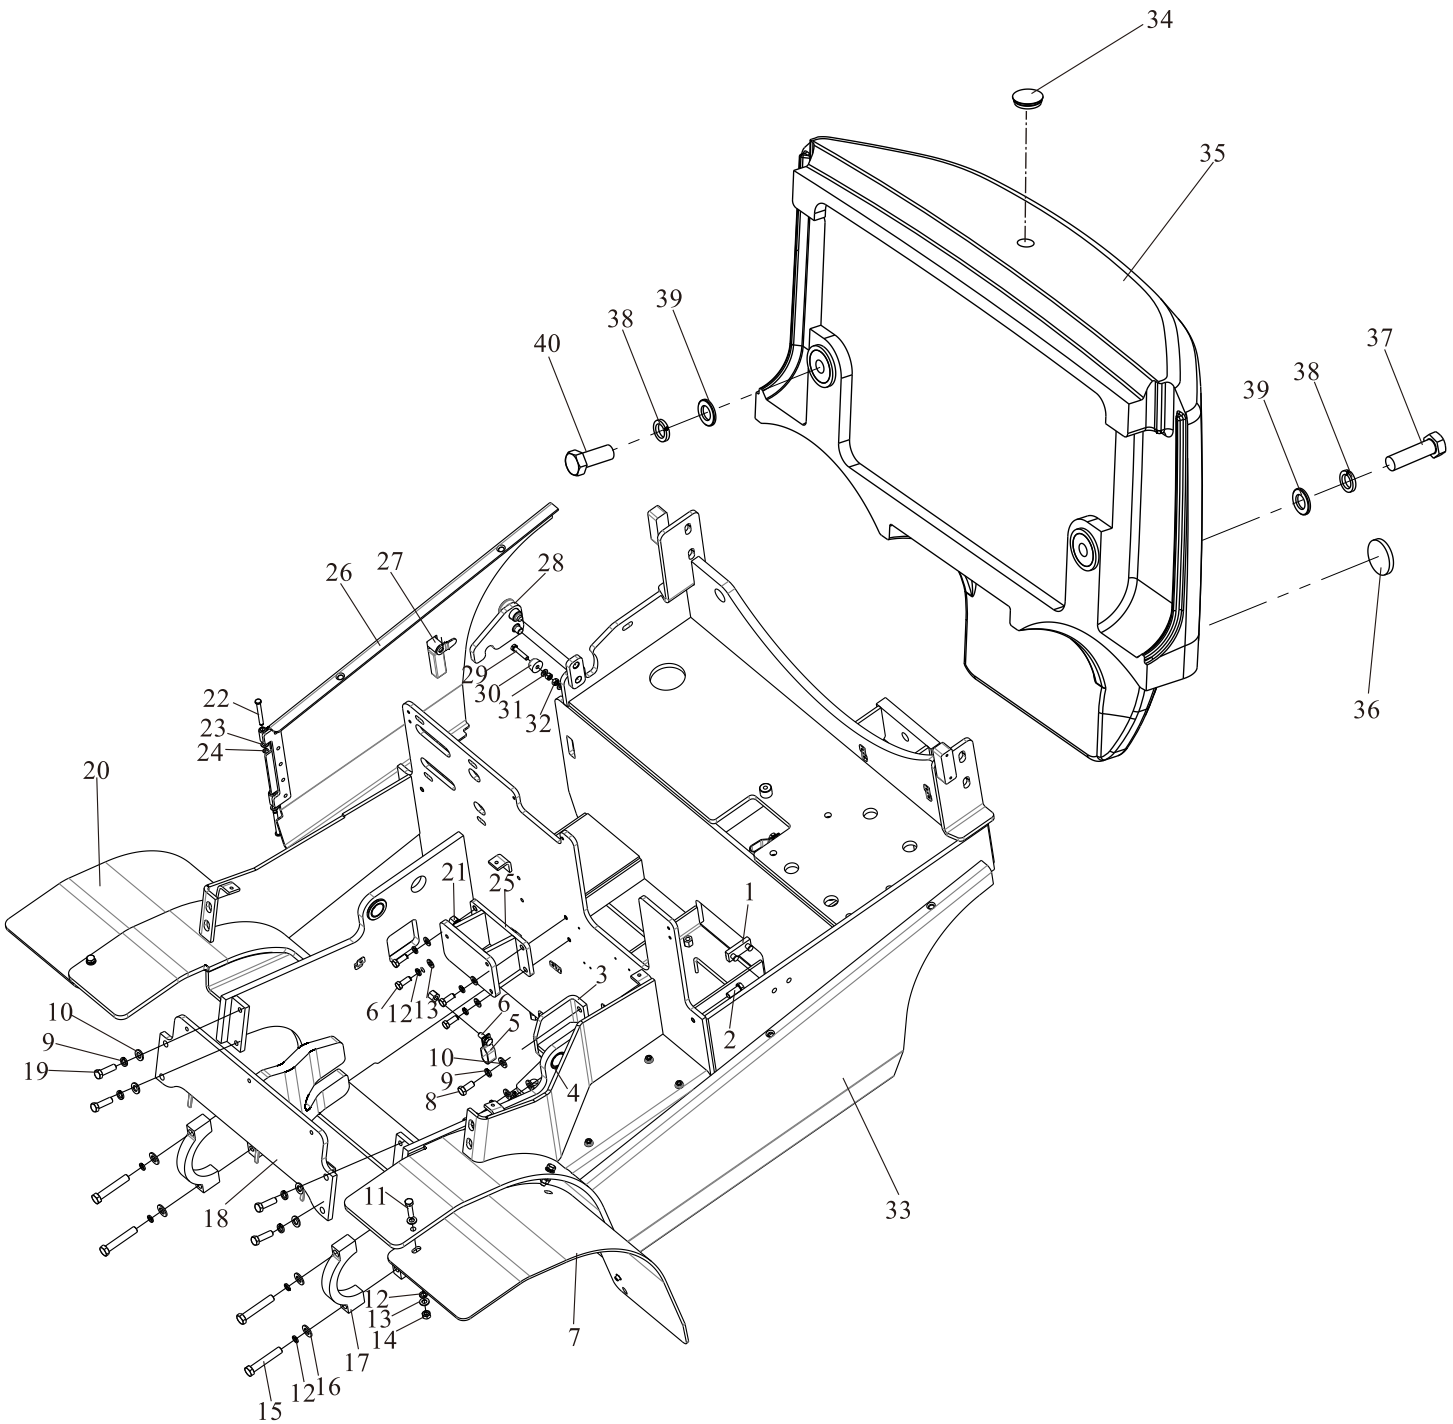


https://truckmanualshub.com/

车架与平衡重
Frame & counter weight

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	D70S1-20006	缓冲垫 Cushion	1	
2	GB/T5783	螺栓M12×30 Bolt	2	
3	D15T1-10600	变速箱支脚 Bracket	1	
4	SF-2-3020	钢背轴承 Bearing	2	
5	D30A1-11008	管夹5 Pipe clamp	4	
6	GB/T5783	螺栓M10×25 Bolt	9	
7	D15T1-10005L	双胎挡泥板(左) Twins fender	1	双胎选用
8	GB/T5783	螺栓M12×25 Bolt	4	
9	GB/T93	弹垫12 Washer, lock	8	
10	GB/T97.1	平垫12 Washer	8	
11	GB/T5783	螺栓M10×40 Bolt	6	
12	GB/T93	弹垫10 Washer,lock	19	
13	GB/T97.1	平垫10 Washer	17	
14	GB/T6170	螺母M10 Nut	6	
15	GB/T5785	螺栓M14×1.5×80 Bolt	4	
16	GB/T97.1	平垫14 Washer	4	
17	M15A3-00001	支座盖 Cap	2	
18	M15A3-00001	前板总成 Front plate ass'y	1	
19	GB/T5783	螺栓M12×40 Bolt	4	
20	D15T1-10005R	双胎挡泥板(右) Twins fender	1	双胎选用
21	D30A1-11002	回油管管夹 Pipe clamp	1	
22	D15T1-10003	销轴 Pin	2	
23	D15T1-10004	垫片 Washer	2	
24	GB/T896	开口挡圈 Split washer	2	
25	D15G1-10600	脚制动安装支架 Bracket	1	

https://truckmanualshub.com/

车架与平衡重
Frame & counter weight

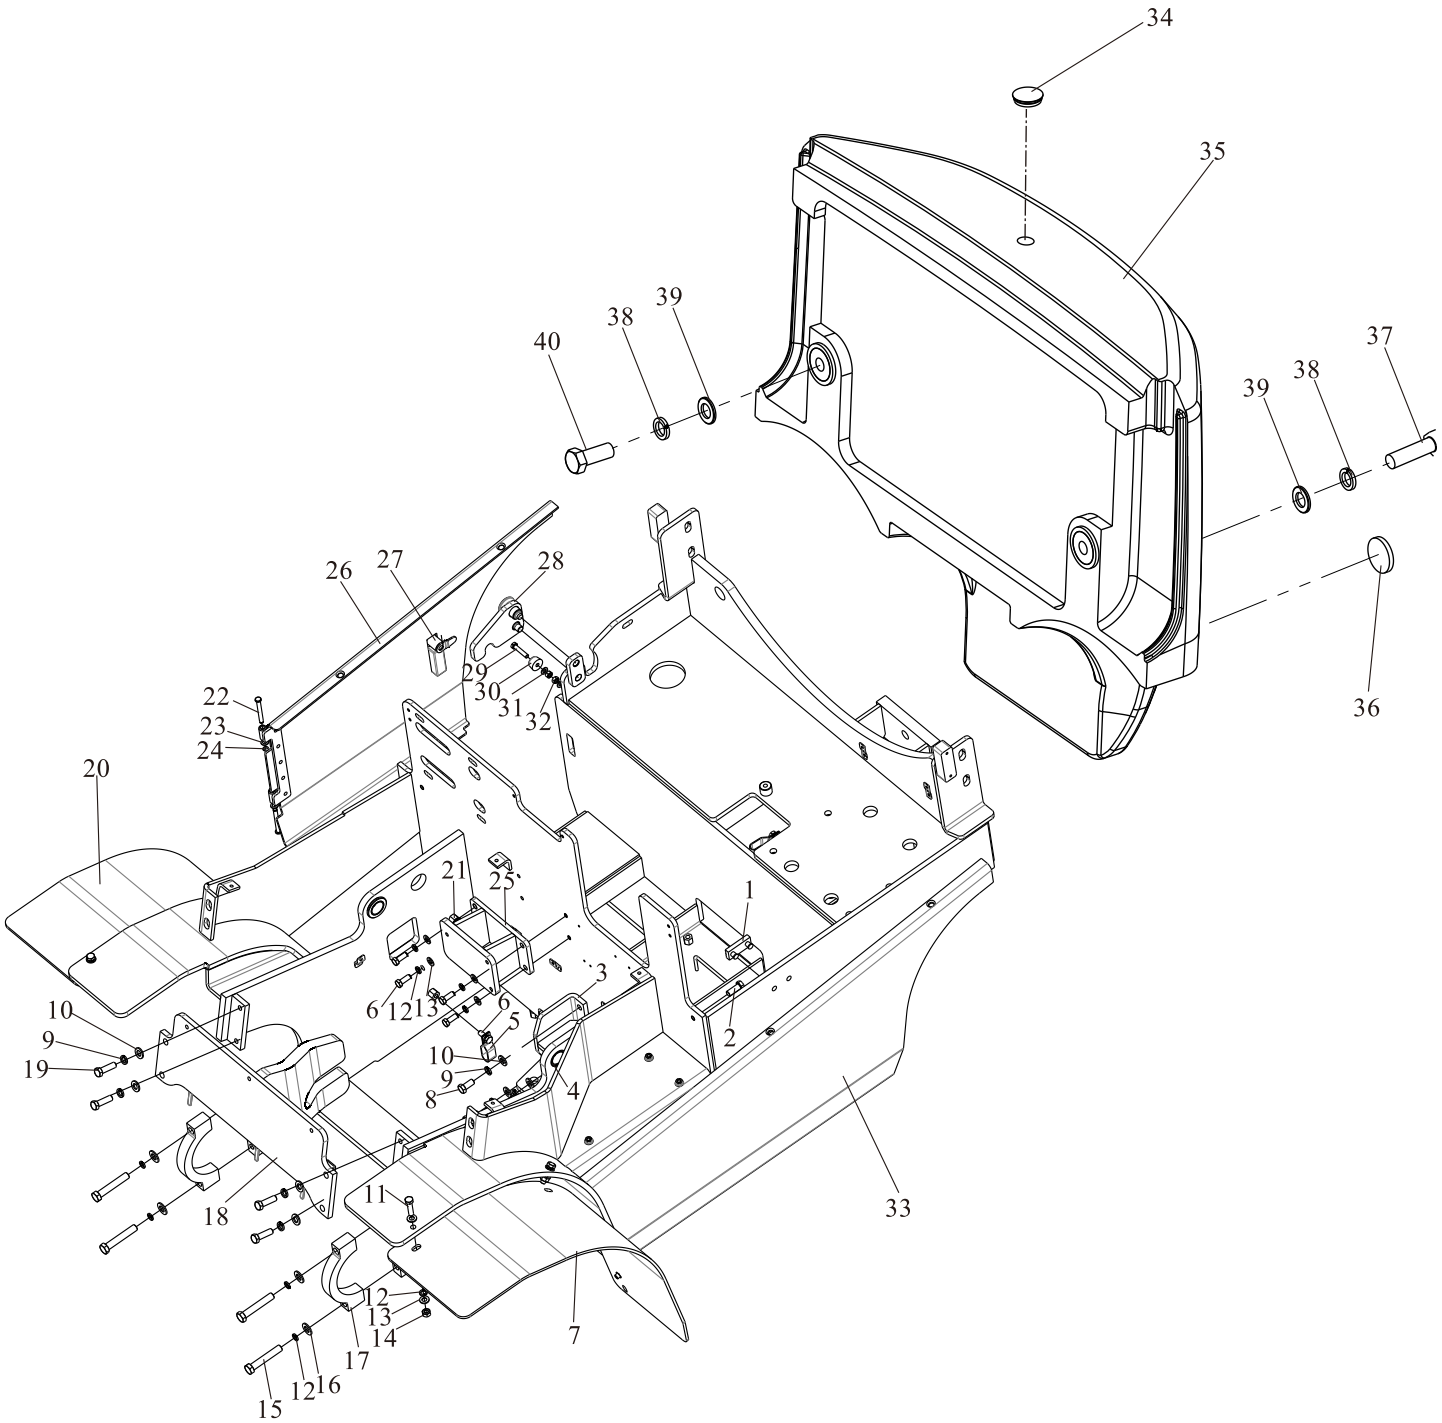


https://truckmanualshub.com/

车架与平衡重
Frame & counter weight

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
26	D15T1-10500	右外壁板总成 Right plate ass'y	1	
27	D25G1-12300	门锁总成 Latch ass'y	1	
28	D15T1-10030	蓄电池固定组件Fixed battery components	1	
29	GB/T5783	螺栓M8×40 Bolt	1	
30	D30A1-20011	缓冲胶垫 Cushion	1	
31	GB/T97.1	平垫8 Washer	2	
32	GB/T6170	螺母M8 Nut	2	
33	D15T1-10100	车架体 Frame	1	
34	D30A1-20001	装饰盖1 Decorative covers	1	
35	D10T1-50001	平衡重 Counterweight	1	1t选用
-	D15T1-50001	平衡重 Counterweight	1	1. 5t选用
-	D18T1-50001	平衡重 Counterweight	1	1. 8t选用
36	D15G1-50002	反射灯 Reflectorlamp	2	
37	GB/T5782	螺栓M24×80 Bolt	1	
38	GB/T93	弹垫24 Washer,lock	3	
39	D15G1-50009	平垫 Washer	3	
40	GB/T5783	螺栓M24×60 Bolt	2	

https://truckmanualshub.com/

机罩底板类及座椅
Hood、Floor Board & Seat

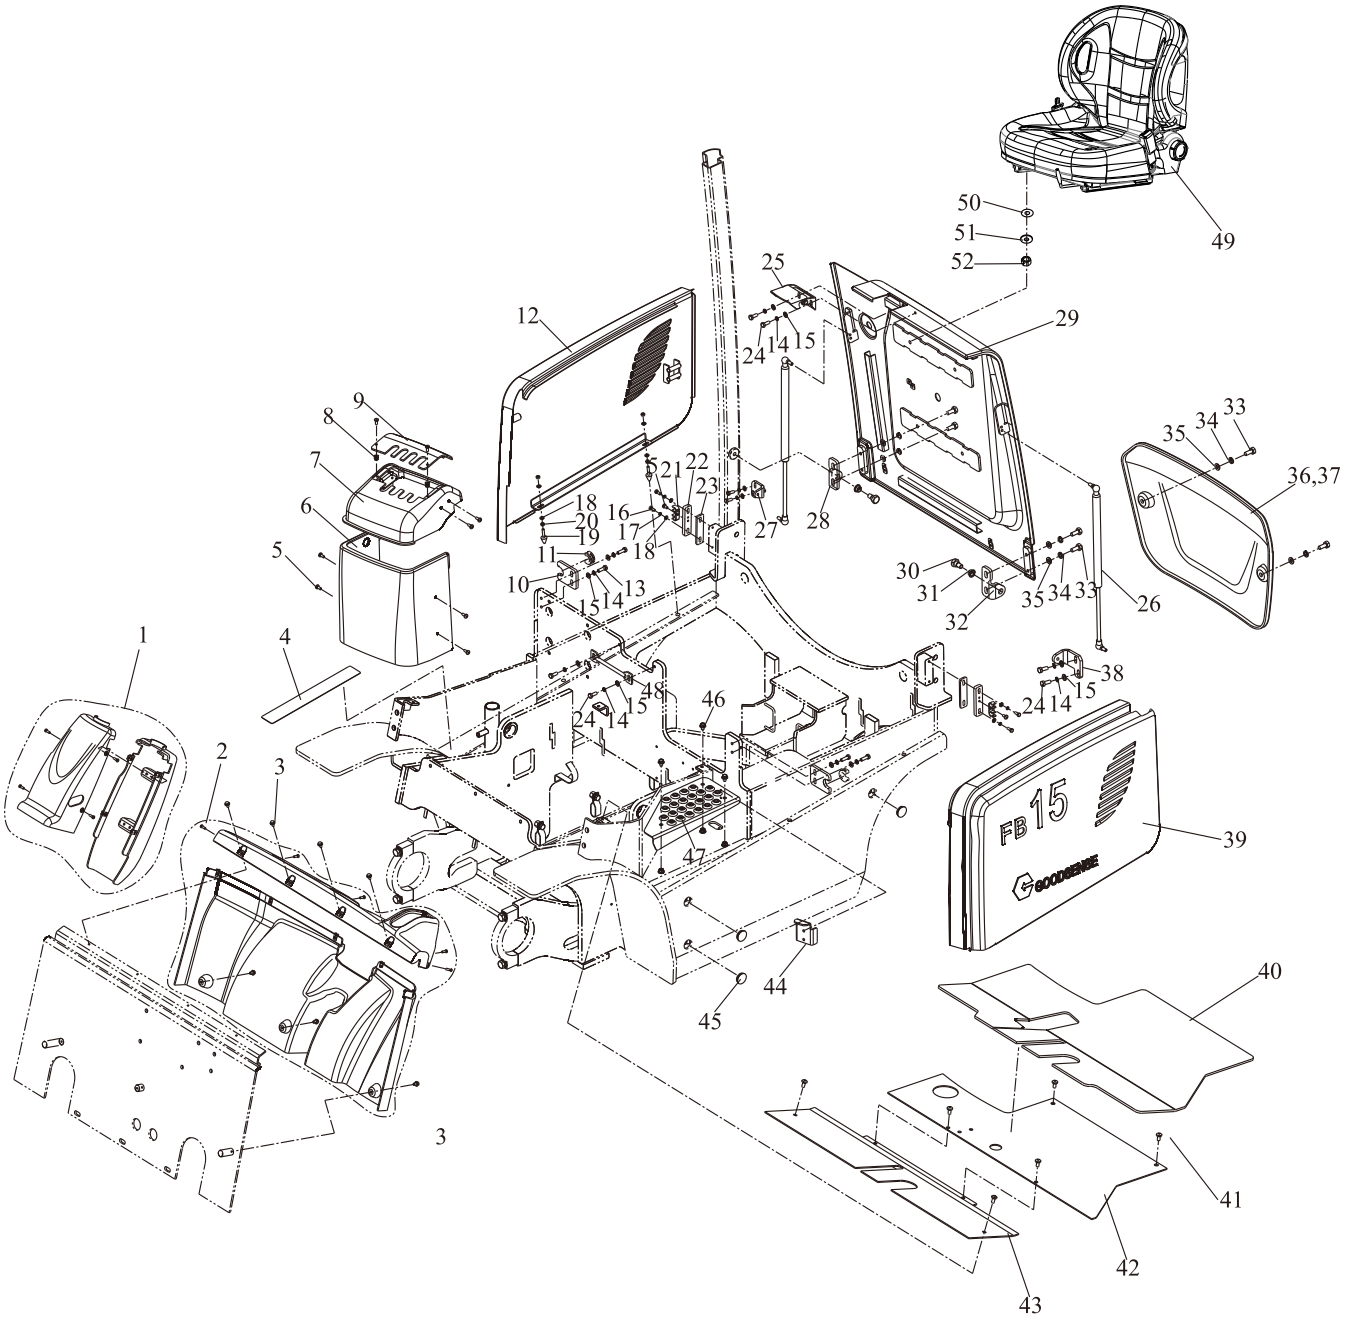


https://truckmanualshub.com/

机罩底板类及座椅
Hood、Floor Board & Seat

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	D15G1-20020	管柱覆盖件总成 String covering ass'y	1	
2	D15G1-20030	仪表台覆盖件总成 Cabinet covering ass'y	1	FB10/15/18-C2/C3
-	D15G1-20040	仪表台覆盖件总成 Cabinet covering ass'y	1	FB10/15/18-Z2/Z3
3	GB/T5789	六角法兰面螺栓M6×12 Bolt	7	
4	D15G1-20019	防滑贴纸 Prevent slippery sticker	1	
5	GB/T818	十字槽盘头螺钉M6×16 Bolt	10	
6	D15H1-20002	前罩(下) Front shade	1	
7	D15H1-20003	前罩(上) Front shade	1	
8	D15G1-20022	前罩嵌件 Front cover insert	2	
9	D15H1-20001	前罩盖 Cover plate	1	
10	D15H1-20023	前卡轴安装板 Mounting plate	2	
11	D15H1-20022	橡胶固定块 Rubber fixed block	2	
12	D15H1-20200	侧罩(右) Side cover R.H.	1	
13	GB/T5783	螺栓M8×25 Bolt	4	
14	GB/T93	弹垫8 Washer,lock	12	
15	GB/T97.1	平垫8 Washer	12	
16	GB/T5783	螺栓M6×25 Bolt	8	
17	GB/T93	弹垫6 Washer,lock	8	
18	GB/T97.1	平垫6 Washer	16	
19	D15G1-20009	锥垫 Cone pad	4	
20	GB/T6170	螺母M6 Nut	4	
21	D15G1-20008	双联管卡 Clamp	4	
22	D15G1-20015	管卡安装板 Mounting plate	4	
23	D15G1-20018	调整垫片 Spacer shim	4	
24	GB/T5783	螺栓M8×20 Bolt	8	
25	D15G1-20400	弹性锁总成 Elastic locking ass'y	1	

https://truckmanualshub.com/

机罩底板类及座椅
Hood、Floor Board & Seat

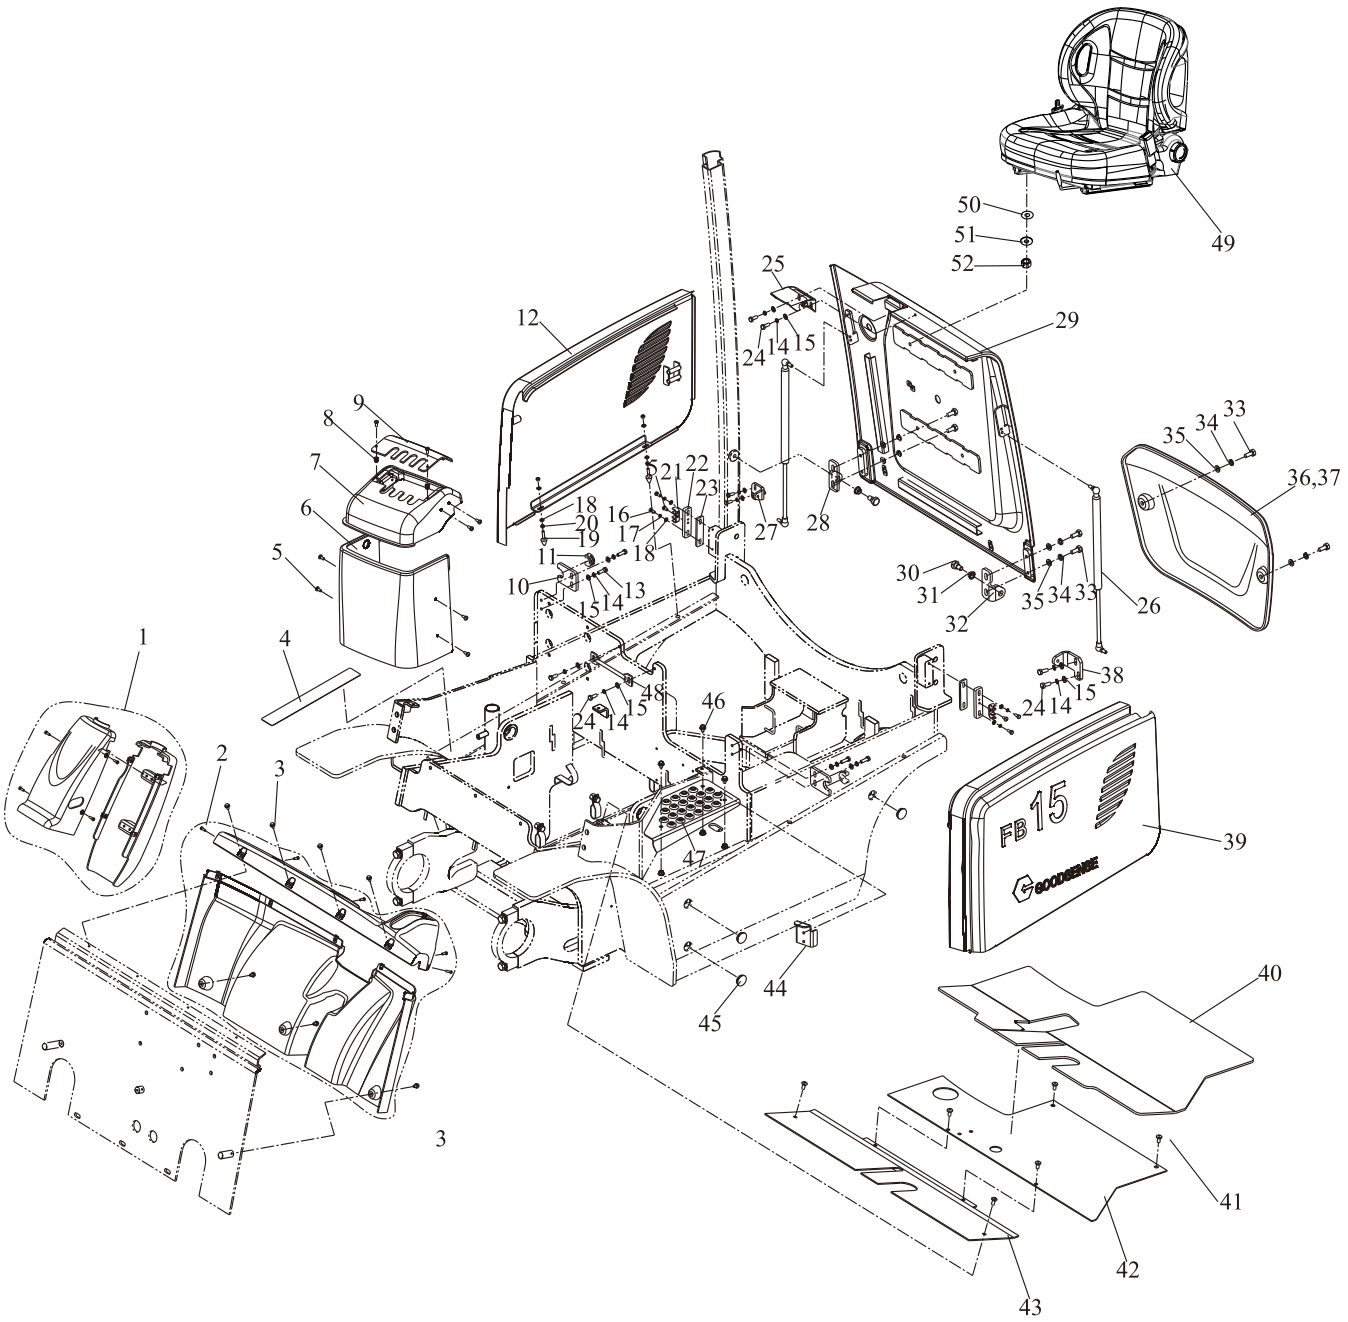


https://truckmanualshub.com/

机罩底板类及座椅
Hood、Floor Board & Seat

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
26	D45A1-20008	气弹簧 Shock,absorber	2	
27	D15G1-20600R	气弹簧支架(右) Gas spring bracket R.H.	1	
28	D15G1-20011R	铰链(右) Hinge R.H.	1	
29	D15H1-20100	机罩 Bonnet	1	
30	D15G1-20012	铰链螺栓 Bolt	2	
31	D15G1-20014	钢背轴承 Bushing	2	
32	D15G1-20011L	铰链(左) Hinge L.H.	1	
33	GB/T5783	螺栓M10×25 Bolt	4	
34	GB/T93	弹垫10 Washer,lock	4	
35	GB/T97.1	平垫10 Washer	4	
36	D25H1-20001	平衡重后罩 Weight cover	1	
37	D25H1-20005	后罩密封条 Sealing strip	1	
38	D15G1-20600L	气弹簧支架(左) Gas spring bracket L.H.	1	
39	D25H1-20005	侧罩(左) Side cover L.H.	1	
40	D15G1-20016	底板垫 Rubber	1	
41	GB/T818	十字槽盘头螺钉M8×16 Bolt	6	
42	D15G1-20603	后底板 Board	1	
43	D15G1-20610	底板前部 Floor board	1	
44	D15G1-20023	电源插头提手 Plug handle	1	
45	D30A1-20001	装饰盖1 Decorative covers	3	
46	GB/T5789	六角法兰面螺栓M8×8 Bolt	3	
47	D15G1-20013	左踏板 Handpedal	1	
48	D15G1-20500	锁销 Pin	1	
49	A30A1-00300	座椅 Seat	1	
50	GB/T97.1	平垫8 Washer	4	座椅附带
51	GB/T93	弹垫8 Washer,lock	4	座椅附带
52	GB/T6170	螺母M8 Nut	4	座椅附带

https://truckmanualshub.com/

护顶架
Head guard

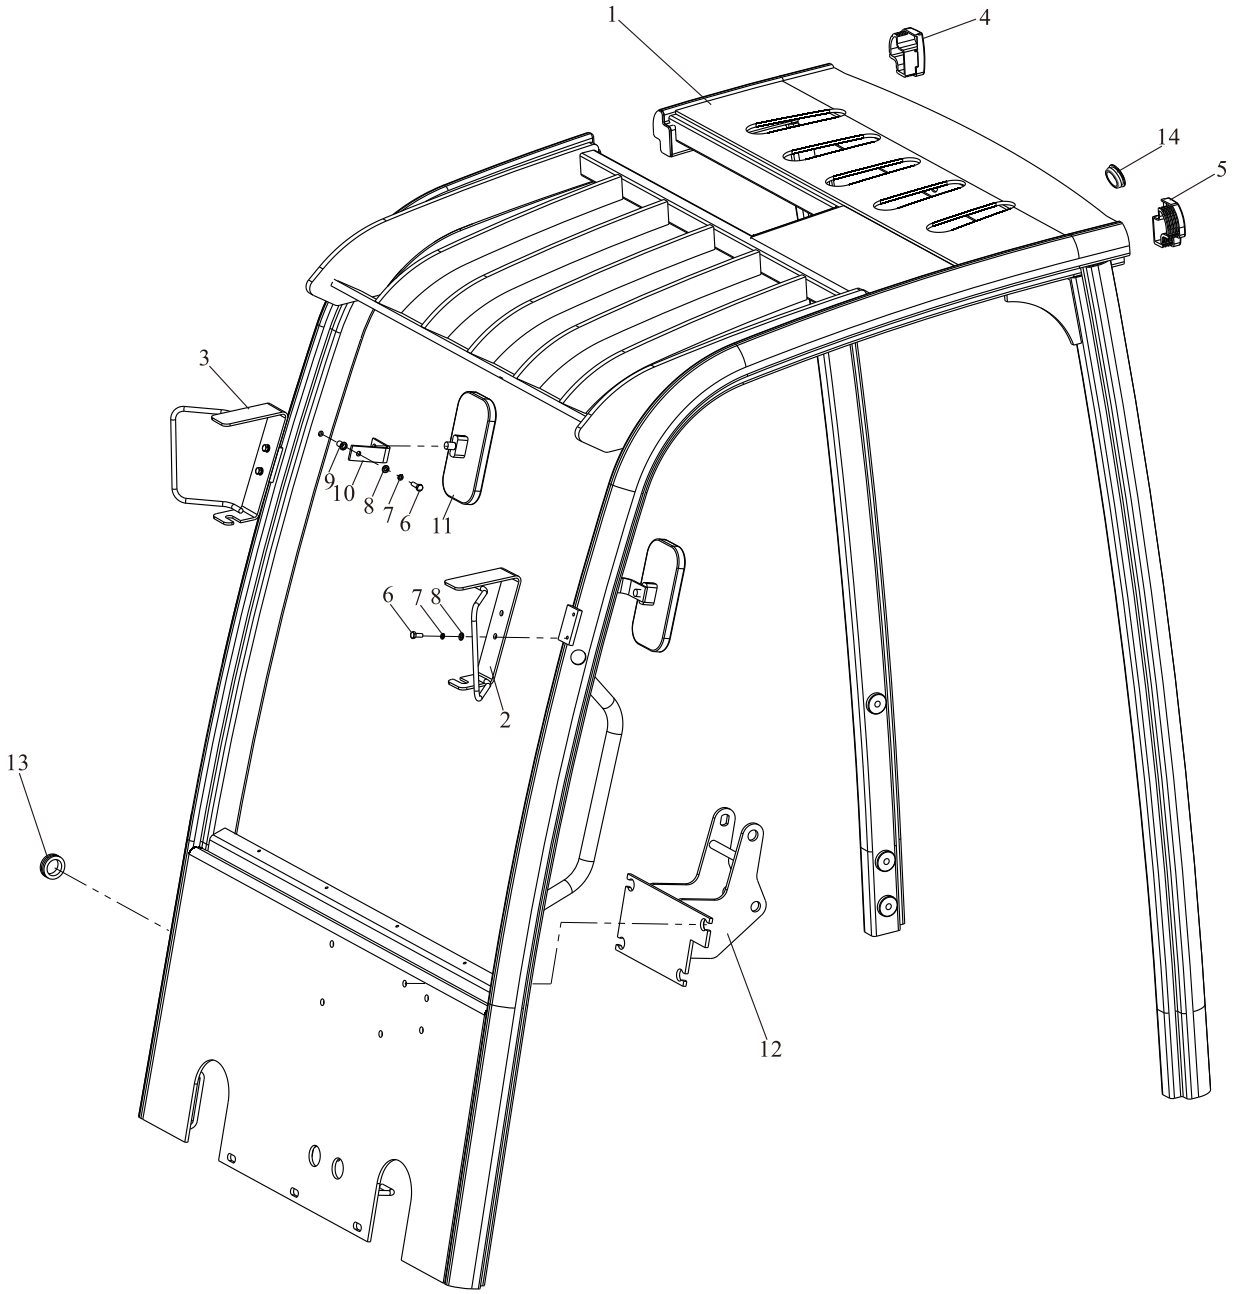

https://truckmanualshub.com/

护顶架
Head guard

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	D15G1-30100	框架总成 Overhead guard	1	
2	D15G1-30500L	前灯架总成(左) Guard,lamp F	1	
3	D15G1-30500R	前灯架总成(右) Guard,lamp F	1	
4	D30D1-30004R	后盖(右) Back cover R.H.	1	
5	D30D1-30004L	后盖(左) Back cover L.H.	1	
6	GB/T5783	螺栓M6×20 Bolt	6	
7	GB/T93	弹垫6 Washer,lock	6	
8	GB/T97.1	平垫6 Washer	6	
9	D30C1-30001	铆螺母 Nut	2	
10	D30A1-30800	倒车镜 Back-mirror	2	
11	D30A1-30002	倒车镜支架 Guard	2	
12	D15G1-30400	转向支架 Guard	1	
13	D30A1-30005	出线胶圈II Grommet	3	
14	D30C1-30004	装饰盖 Decorative covers	2	


https://truckmanualshub.com/

五、液压系统

HYDRAULIC SYSTEM

https://truckmanualshub.com/

液压油箱
Oil tank

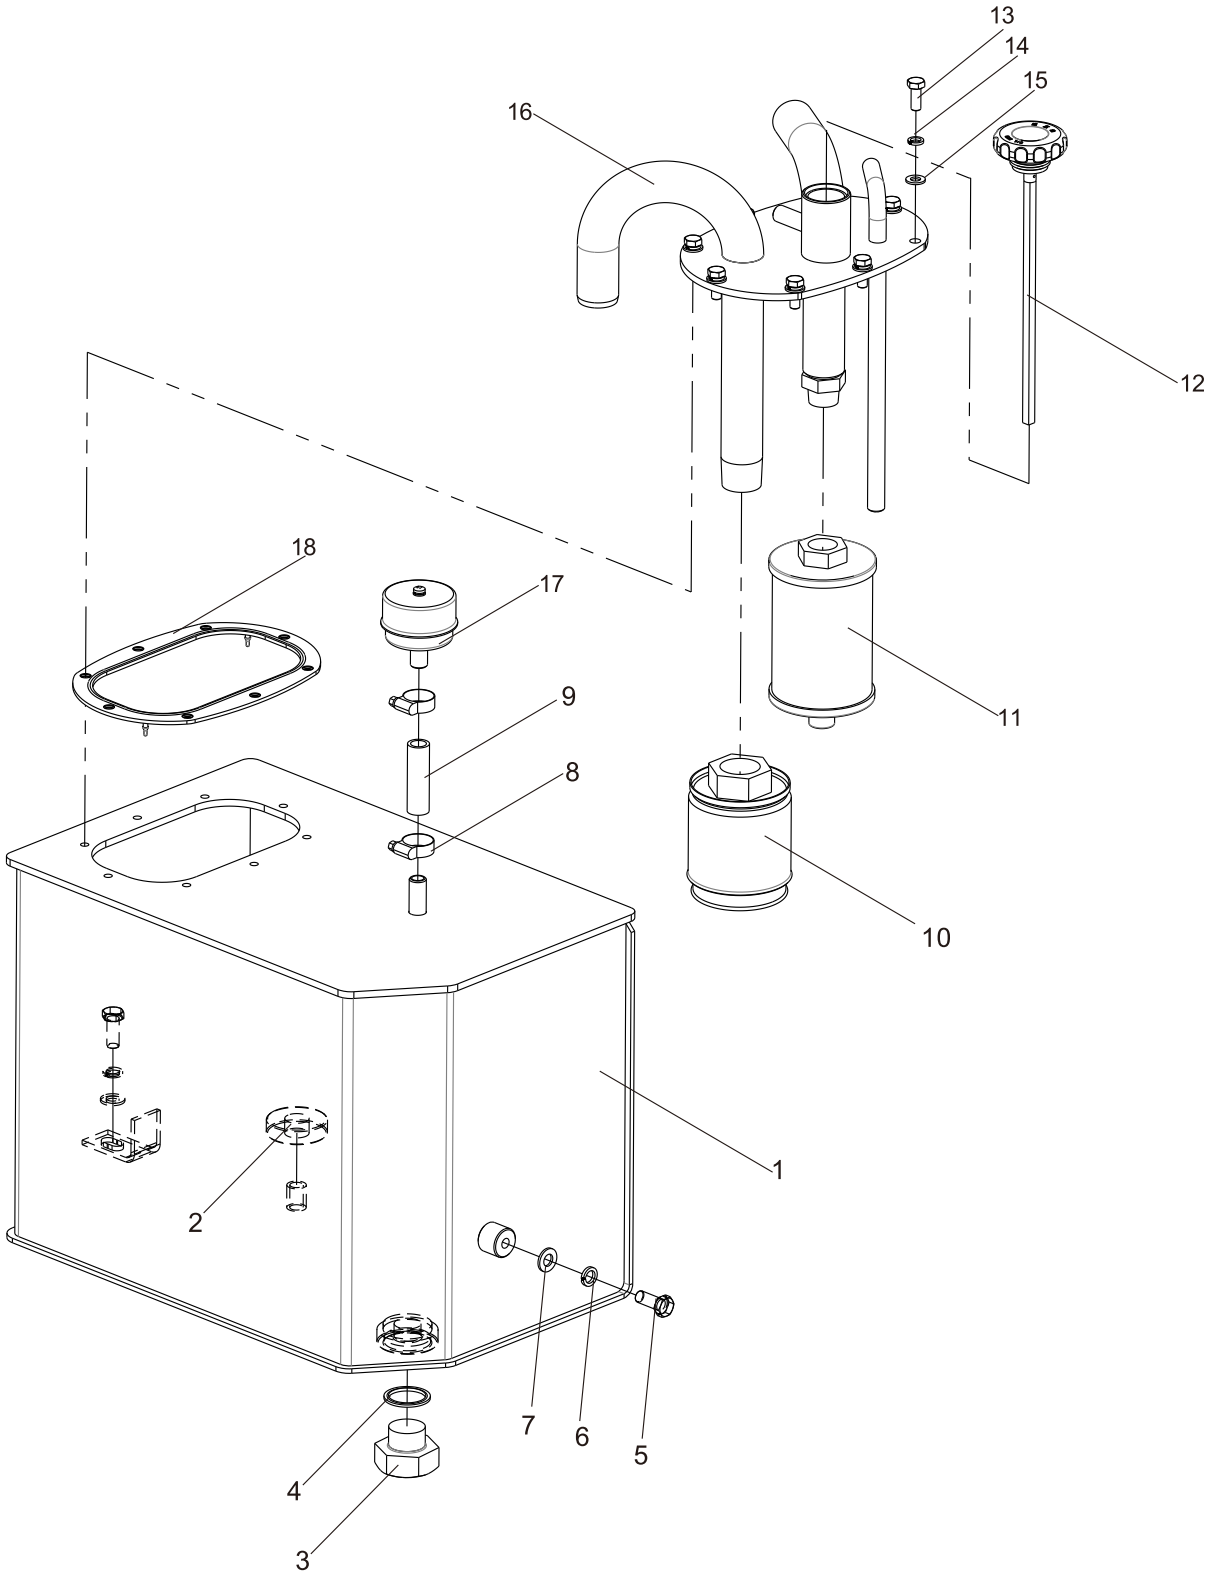


https://truckmanualshub.com/

液压油箱
Oil tank

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15T4-50200	油箱 Tank	1	
2	A30A4-50003	磁铁 Magnet	1	
3	A30A4-50002	放油螺塞 Plug, drain	1	
4	A30A4-50004	ED密封圈26 Washer	1	
5	GB/T5783	螺栓M10×25 Bolt	2	
6	GB/T93	弹垫10 Washer, lock	2	
7	GB/T97.1	平垫10 Washer	2	
8	JB/T8870	喉箍25×16 Clip	2	
9	TG000-13005	耐油胶管Φ13×60 Hose	1	
10	A30A4-50400	吸油滤油器 Strainer	1	
11	A15A4-50200	回油滤油器 Strainer	1	
12	A15T4-50300	加油盖总成 Oiling cap ass'y	1	
13	GB/T5783	螺栓M8×20 Bolt	8	
14	GB/T93	弹垫8 Washer, lock	8	
15	GB/T97.1	平垫8 Washer	8	
16	A15T4-50100	盖板总成 Coverplate ass'y	1	
17	A30A4-50500	呼吸器 Breather	1	
18	A30A5-30003	盖板垫 Cover, gasket	1	

https://truckmanualshub.com/

阀操纵总成（二片）
Valve control(two-throw)

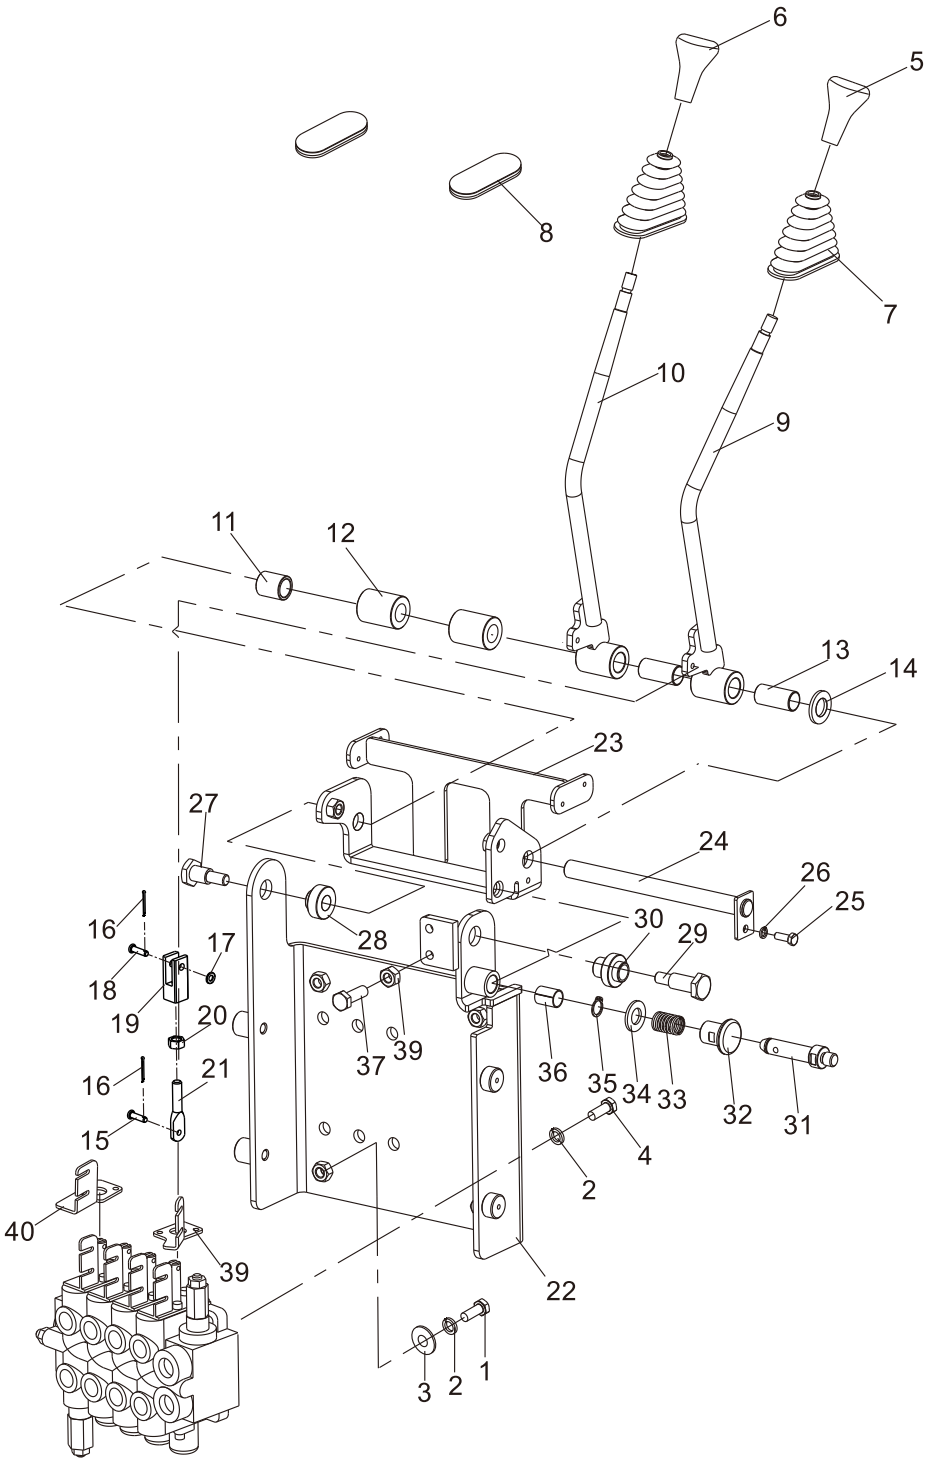


https://truckmanualshub.com/

阀操纵总成（二片）
Valve control(two-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GB/T5783	螺栓M10×35 Bolt	4	
2	GB/T93	弹垫10 Washer , lock	8	
3	GB/T97.1	平垫10 Washer	4	
4	GB/T5786	螺栓M10×1.25×30 Bolt	4	
5	A30A7-40003	起升手柄 Knob, lift	1	
6	A30A7-40004	倾斜手柄 Knob, tilt	1	
7	A15H7-40001	防尘套 Dust Cover	2	
8	A15G7-40001	防尘套 Dust Cover	2	
9	A15H7-40140	升降阀杆 Lever, lift	1	
10	A15H7-40150	倾斜阀杆 Lever, tilt	1	
11	A15H7-40106	套管 Coller	1	
12	SF-1-1638	钢背轴承 Bearing	2	
13	A15G7-40107	调节套 Coller	2	
14	GB/T97.1	平垫16 Washer	1	
15	A30C7-40001	销钉 Pin	2	
16	GB/T119.1	开口销 ϕ2×16 Pin, cotter	4	
17	GB/T97.1	平垫6 Washer	2	
18	A15G7-40002	销钉 Pin	2	
19	A15H7-40181	接头 Joint	2	
20	GB/T6170	螺母M8 Nut	2	
21	A15H7-40182	连杆 Link	2	
22	A15H7-40110	底板总成 Floor ass'y	1	
23	A15H7-40120	支架总成 Bracket ass'y	1	

https://truckmanualshub.com/

阀操纵总成（二片）
Valve control（two-throw）

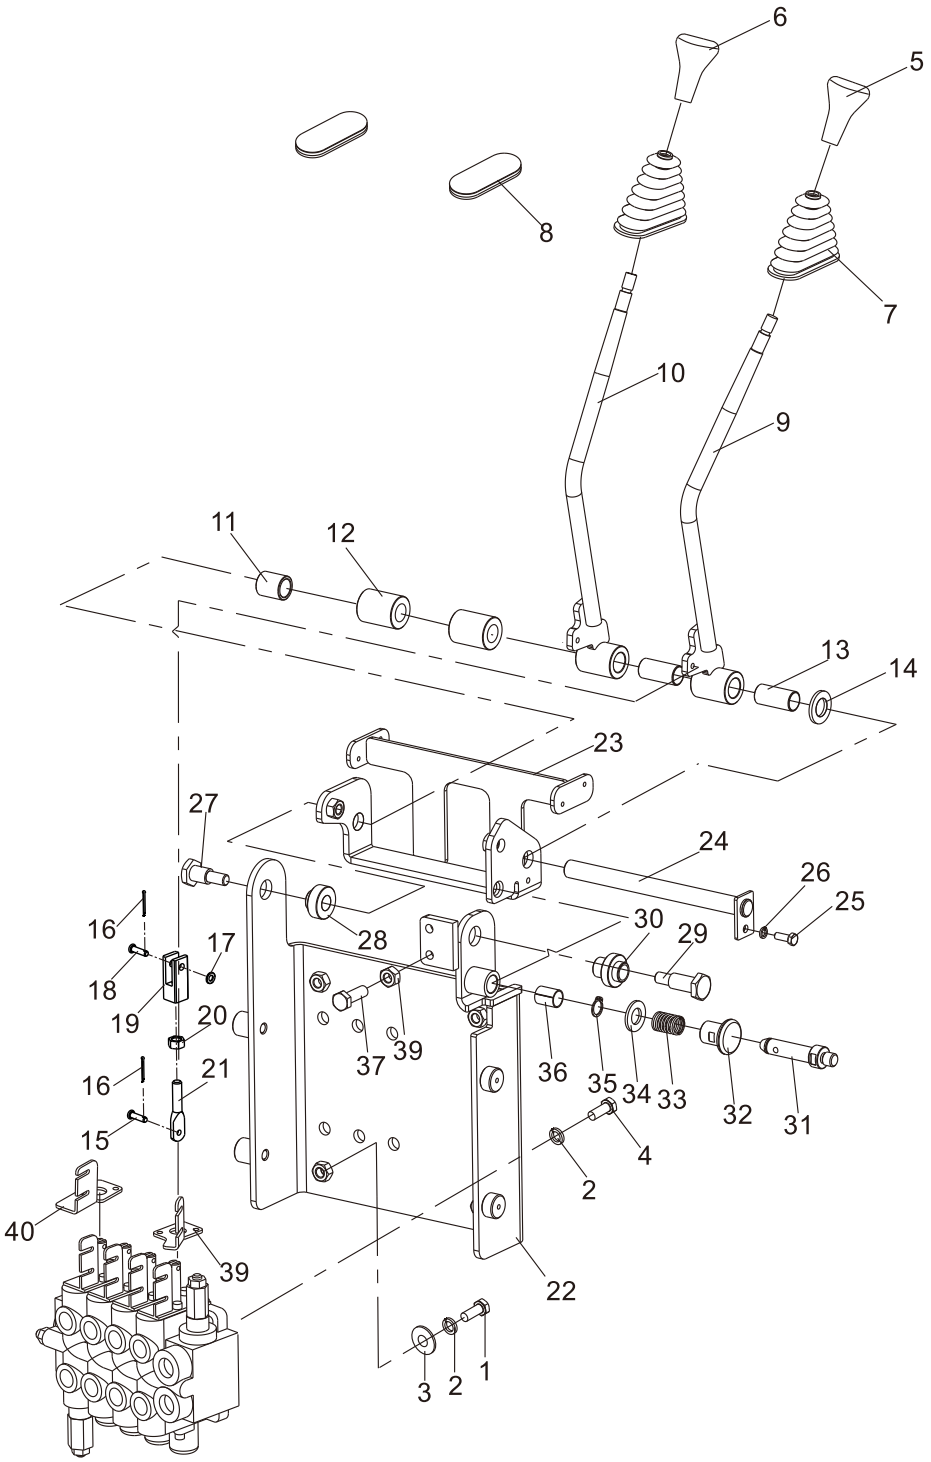


https://truckmanualshub.com/

阀操纵总成（二片）
Valve control(two-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
24	A15H7-40130	支轴总成 Shaft ass'y	1	
25	GB/T5783	螺栓M6×16 Bolt	1	
26	GB/T93	弹垫6 Washer ,lock	1	
27	A15H7-40104	螺栓II Bolt	1	
28	A15G7-40102	尼龙垫圈II Washer	1	
29	A15H7-40103	螺栓I Bolt	1	
30	A15H7-40101	尼龙垫圈I Washer	1	
31	A15H7-40108	拔销手柄 Taper handle	1	
32	A15H7-40105	拔销 Taper	1	
33	A15H7-40107	压缩弹簧 Spring	1	
34	GB/T97.1	平垫14 Washer	1	
35	GB/T894.1	弹性挡圈 Snap ring	1	
36	SF-1-1220	钢背轴承 Bearing	1	
37	GB/T5783	螺栓M10×30 Bolt	2	
38	GB/T93	弹垫10 Washer ,lock	2	
39	A25G7-40001	起升开关支架 Lifting switch bracket	1	欧标车选用
40	A15A7-00409	微动开关支架 Micro switch bracket	2	冷库车选用

https://truckmanualshub.com/

阀操纵总成（三片）
Valve control（three-throw）

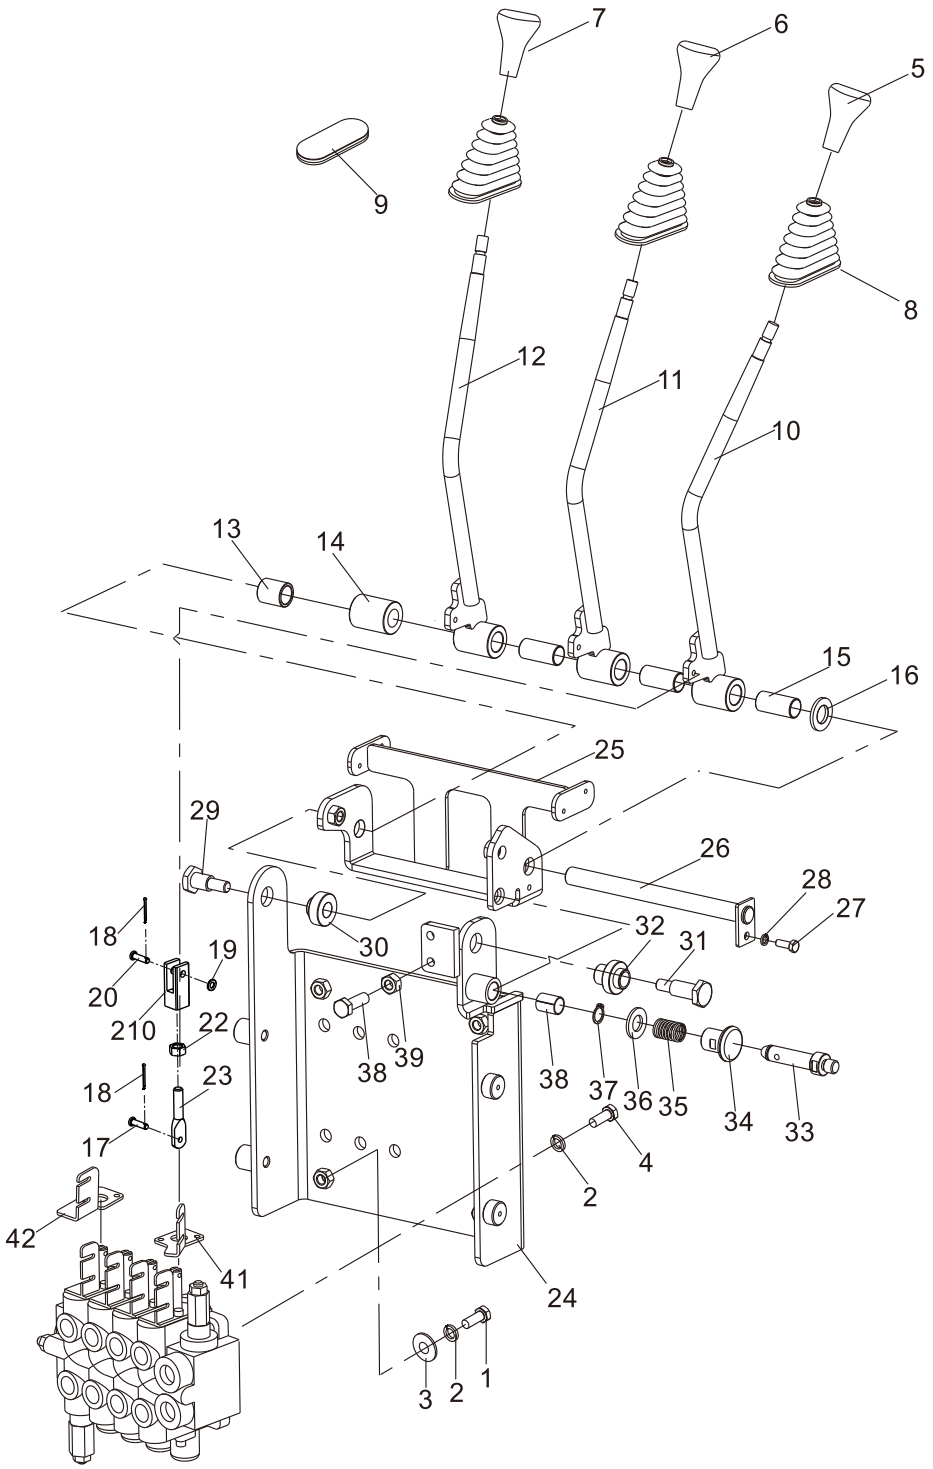


https://truckmanualshub.com/

阀操纵总成（三片）
Valve control(three-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GB/T5783	螺栓M10×35 Bolt	4	
2	GB/T93	弹垫10 Washer , lock	8	
3	GB/T97.1	平垫10 Washer	4	
4	GB/T5786	螺栓M10×1.25×30 Bolt	4	
5	A30A7-40003	起升手柄 Knob, lift	1	
6	A30A7-40004	倾斜手柄 Knob, tilt	1	
7	A30A7-40005	侧移手柄 Knob	1	
8	A15H7-40001	防尘套 Dust Cover	3	
9	A15G7-40001	防尘套 Dust Cover	1	
10	A15H7-40140	升降阀杆 Lever, lift	1	
11	A15H7-40150	倾斜阀杆 Lever, tilt	1	
12	A15H7-40160	第三片阀杆 Lever, third	1	
13	A15H7-40106	套管 Coller	1	
14	SF-1-1638	钢背轴承 Bearing	1	
15	A15G7-40107	调节套 Coller	3	
16	GB/T97.1	平垫16 Washer	1	
17	A30C7-40001	销钉 Pin	3	
18	GB/T119.1	开口销 ϕ2×16 Pin, cotter	6	
19	GB/T97.1	平垫6 Washer	3	
20	A15G7-40002	销钉 Pin	3	
21	A15H7-40181	接头 Joint	3	
22	GB/T6170	螺母M8 Nut	3	
23	A15H7-40182	连杆 Link	3	

https://truckmanualshub.com/

阀操纵总成（三片）
Valve control（three-throw）

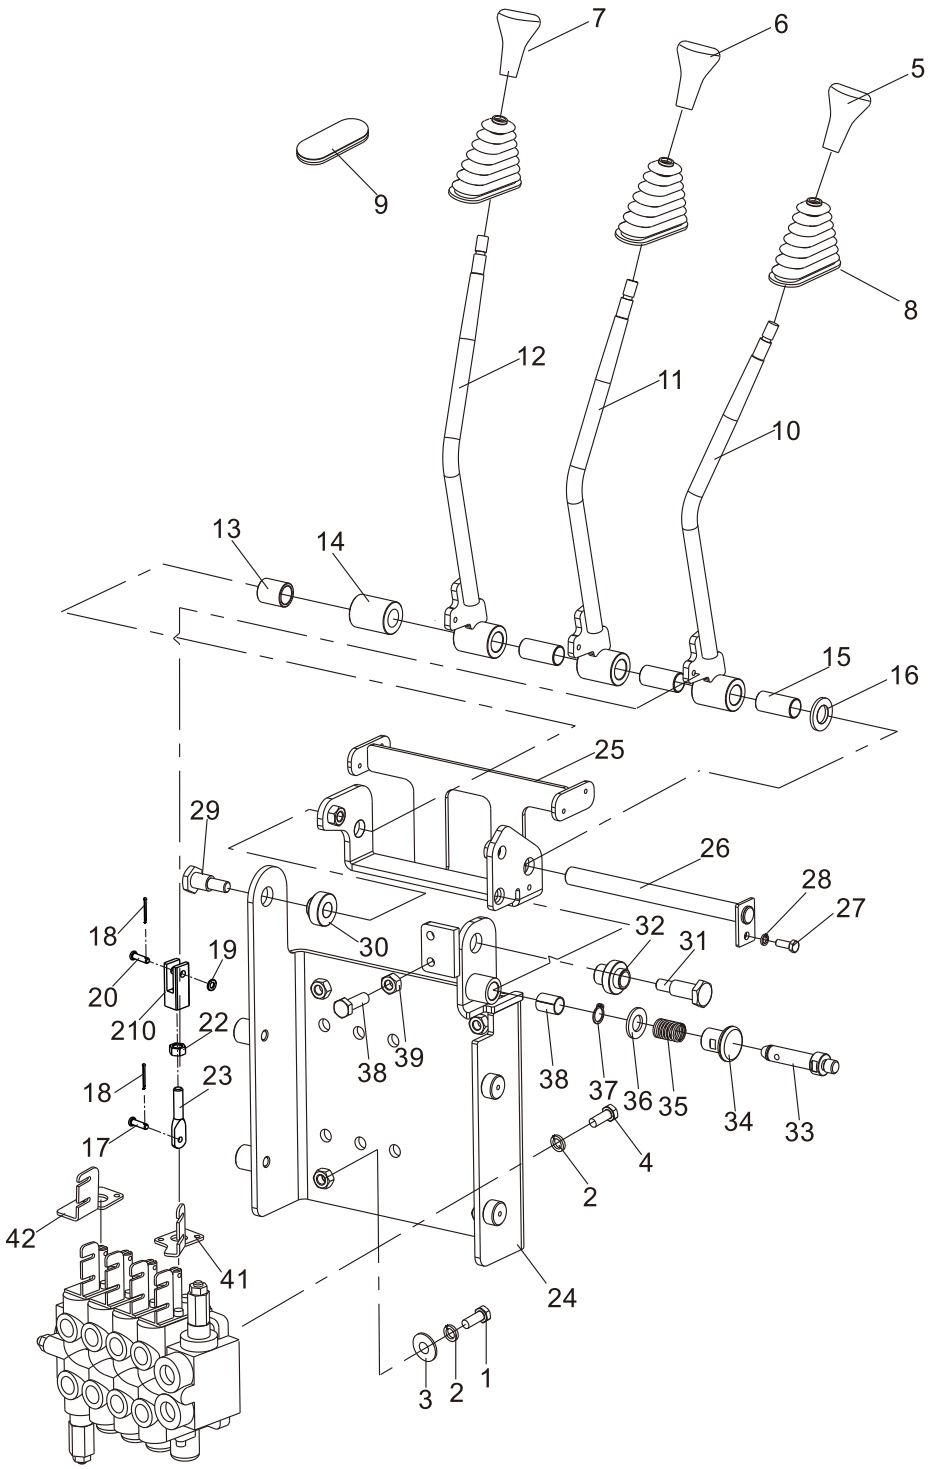


https://truckmanualshub.com/

阀操纵总成（三片）
Valve control(three-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
24	A15H7-40110	底板总成 Floor ass'y	1	
25	A15H7-40120	支架总成 Bracket ass'y	1	
26	A15H7-40130	支轴总成 Shaft ass'y	1	
27	GB/T5783	螺栓M6×16 Bolt	1	
28	GB/T93	弹垫6 Washer ,lock	1	
29	A15H7-40104	螺栓II Bolt	1	
30	A15G7-40102	尼龙垫圈II Washer	1	
31	A15H7-40103	螺栓I Bolt	1	
32	A15H7-40101	尼龙垫圈I Washer	1	
33	A15H7-40108	拔销手柄 Taper handle	1	
34	A15H7-40105	拔销 Taper	1	
35	A15H7-40107	压缩弹簧 Spring	1	
36	GB/T97.1	平垫14 Washer	1	
37	GB/T894.1	弹性挡圈 Snap ring	1	
38	SF-1-1220	钢背轴承 Bearing	1	
39	GB/T5783	螺栓M10×30 Bolt	2	
40	GB/T93	弹垫10 Washer ,lock	2	
41	A25G7-40001	起升开关支架 Lifting switch bracket	1	欧标车选用
42	A15A7-00409	微动开关支架 Micro switch bracket	3	冷库车选用

https://truckmanualshub.com/

阀操纵总成（四片）
Valve control（four-throw）

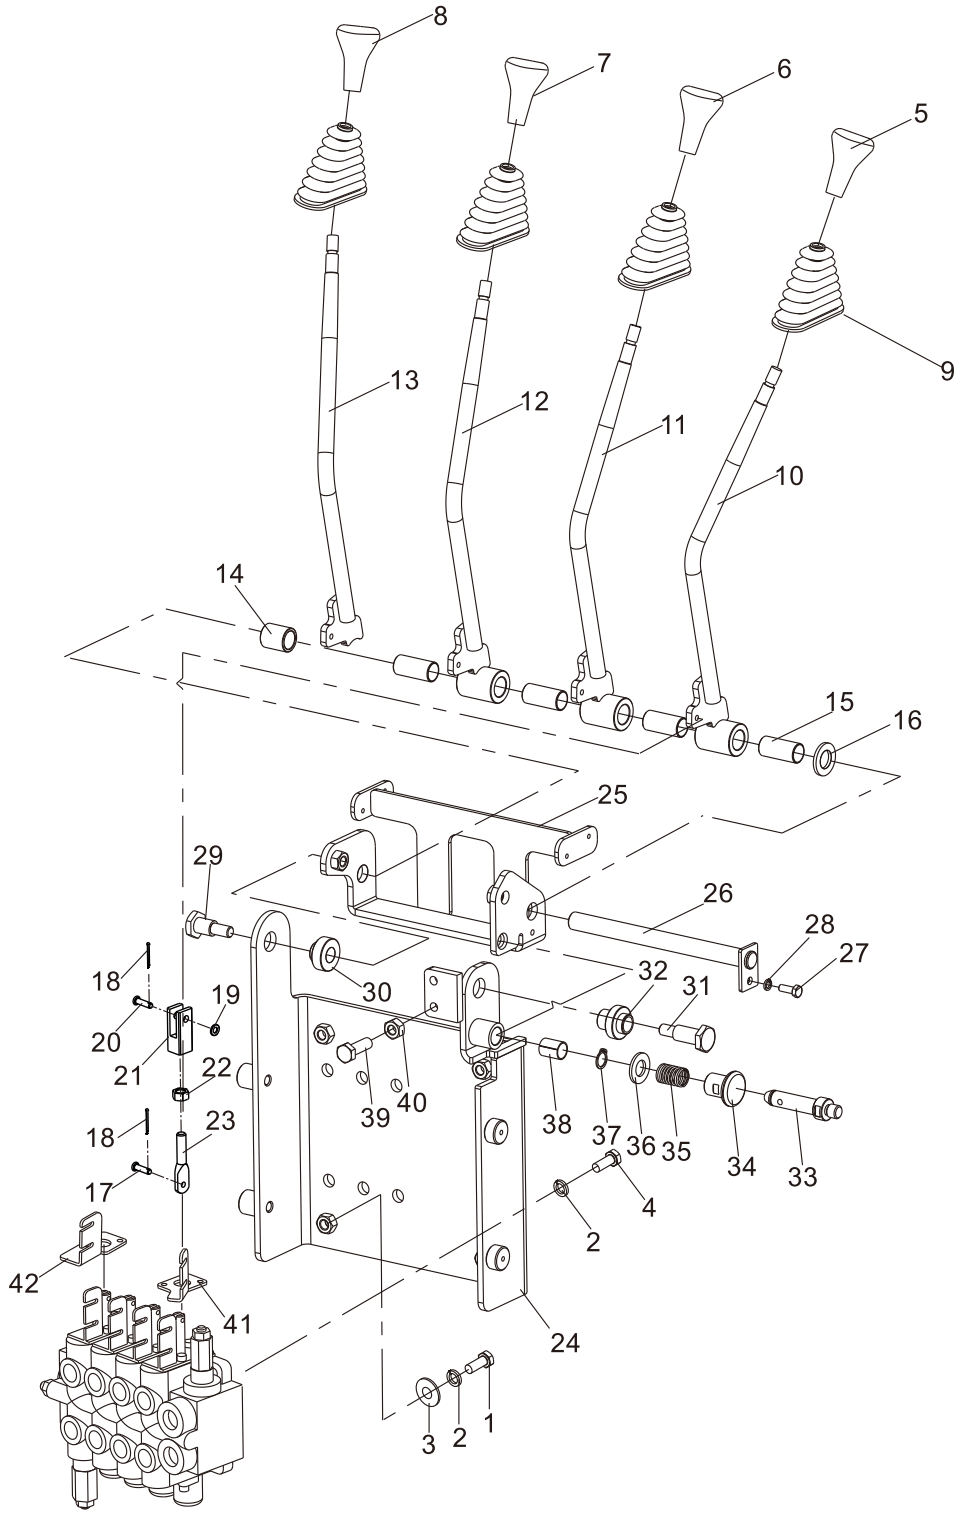


https://truckmanualshub.com/

阀操纵总成（四片）
Valve control(four-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GB/T5783	螺栓M10×35 Bolt	4	
2	GB/T93	弹垫10 Washer , lock	8	
3	GB/T97.1	平垫10 Washer	4	
4	GB/T5786	螺栓M10×1.25×30 Bolt	4	
5	A30A7-40003	起升手柄 Knob, lift	1	
6	A30A7-40004	倾斜手柄 Knob, tilt	1	
7	A30A7-40005	侧移手柄 Knob	1	
8	A30A7-40006	夹紧手柄 Knob	1	
9	A15H7-40001	防尘套 Dust Cover	4	
10	A15H7-40140	升降阀杆 Lever, lift	1	
11	A15H7-40150	倾斜阀杆 Lever, tilt	1	
12	A15H7-40140	升降阀杆 Lever, lift	1	
13	A15H7-40150	倾斜阀杆 Lever, tilt	1	
14	A15H7-40106	套管 Coller	1	
15	SF-1-1638	钢背轴承 Bearing	4	
16	GB/T97.1	平垫16 Washer	1	
17	A30C7-40001	销钉 Pin	4	
18	GB/T119.1	开口销 ϕ2×16 Pin, cotter	8	
19	GB/T97.1	平垫6 Washer	4	
20	A15G7-40002	销钉 Pin	4	
21	A15H7-40181	接头 Joint	4	
22	GB/T6170	螺母M8 Nut	4	
23	A15H7-40182	连杆 Link	4	

https://truckmanualshub.com/

阀操纵总成（四片）
Valve control（four-throw）

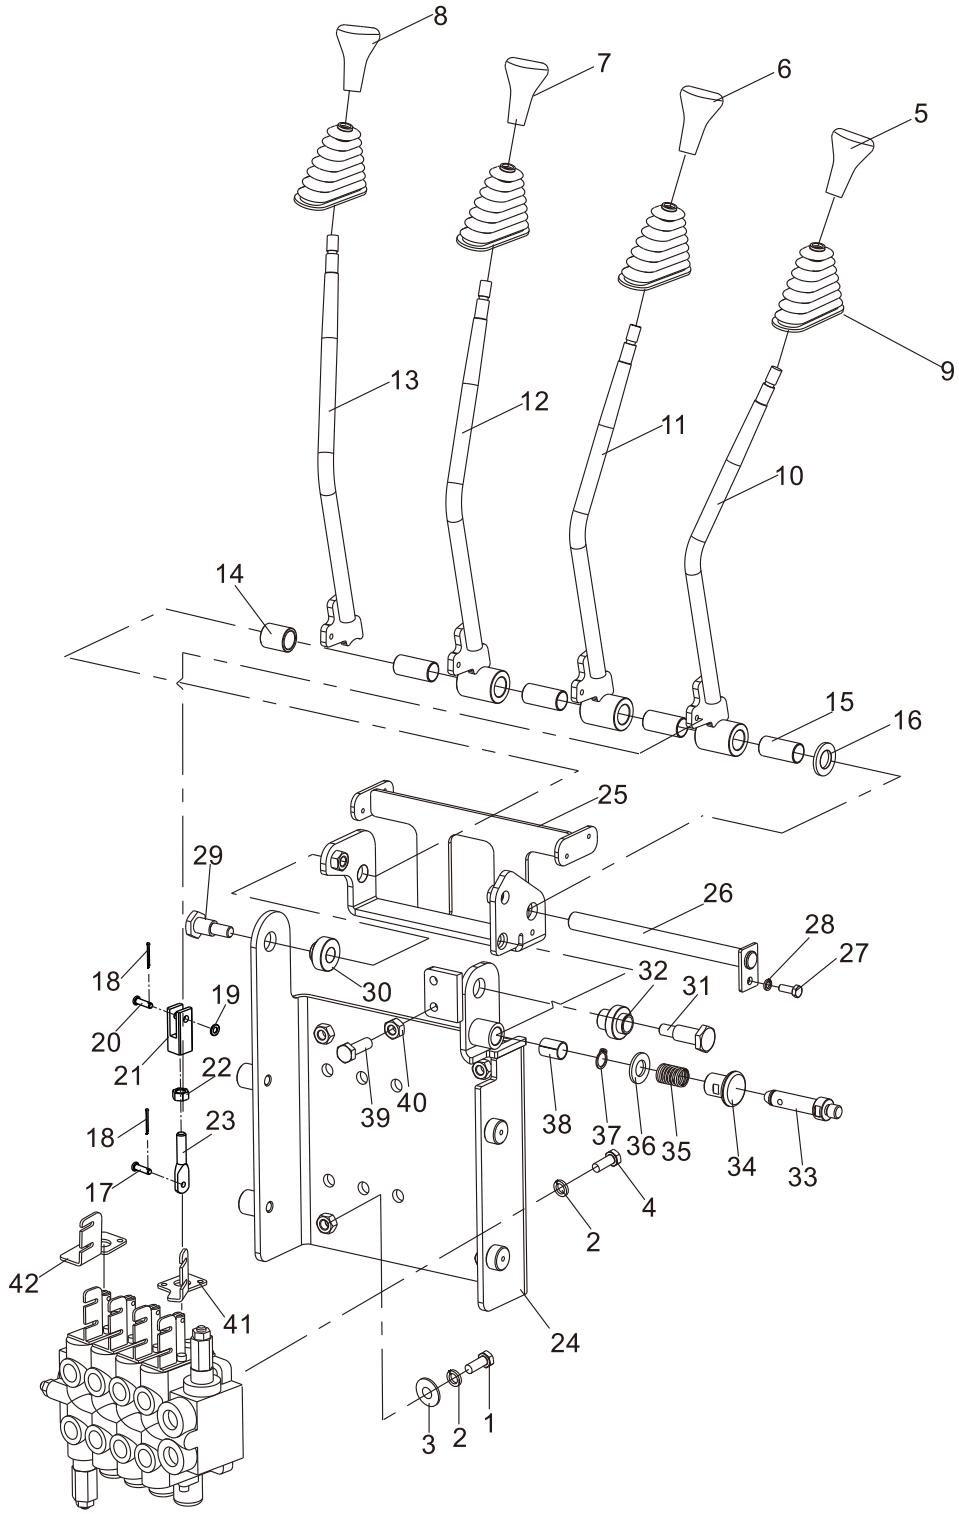


https://truckmanualshub.com/

阀操纵总成（四片）
Valve control(four-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
24	A15H7-40110	底板总成 Floor ass'y	1	
25	A15H7-40120	支架总成 Bracket ass'y	1	
26	A15H7-40130	支轴总成 Shaft ass'y	1	
27	GB/T5783	螺栓M6×16 Bolt	1	
28	GB/T93	弹垫6 Washer ,lock	1	
29	A15H7-40104	螺栓II Bolt	1	
30	A15G7-40102	尼龙垫圈II Washer	1	
31	A15H7-40103	螺栓I Bolt	1	
32	A15H7-40101	尼龙垫圈I Washer	1	
33	A15H7-40108	拔销手柄 Taper handle	1	
34	A15H7-40105	拔销 Taper	1	
35	A15H7-40107	压缩弹簧 Spring	1	
36	GB/T97.1	平垫14 Washer	1	
37	GB/T894.1	弹性挡圈 Snap ring	1	
38	SF-1-1220	钢背轴承 Bearing	1	
39	GB/T5783	螺栓M10×30 Bolt	2	
40	GB/T93	弹垫10 Washer ,lock	2	
41	A25G7-40001	起升开关支架 Lifting switch bracket	1	欧标车选用
42	A15A7-00409	微动开关支架 Micro switch bracket	4	冷库车选用

https://truckmanualshub.com/

液压管路
Hydraulic pipeline

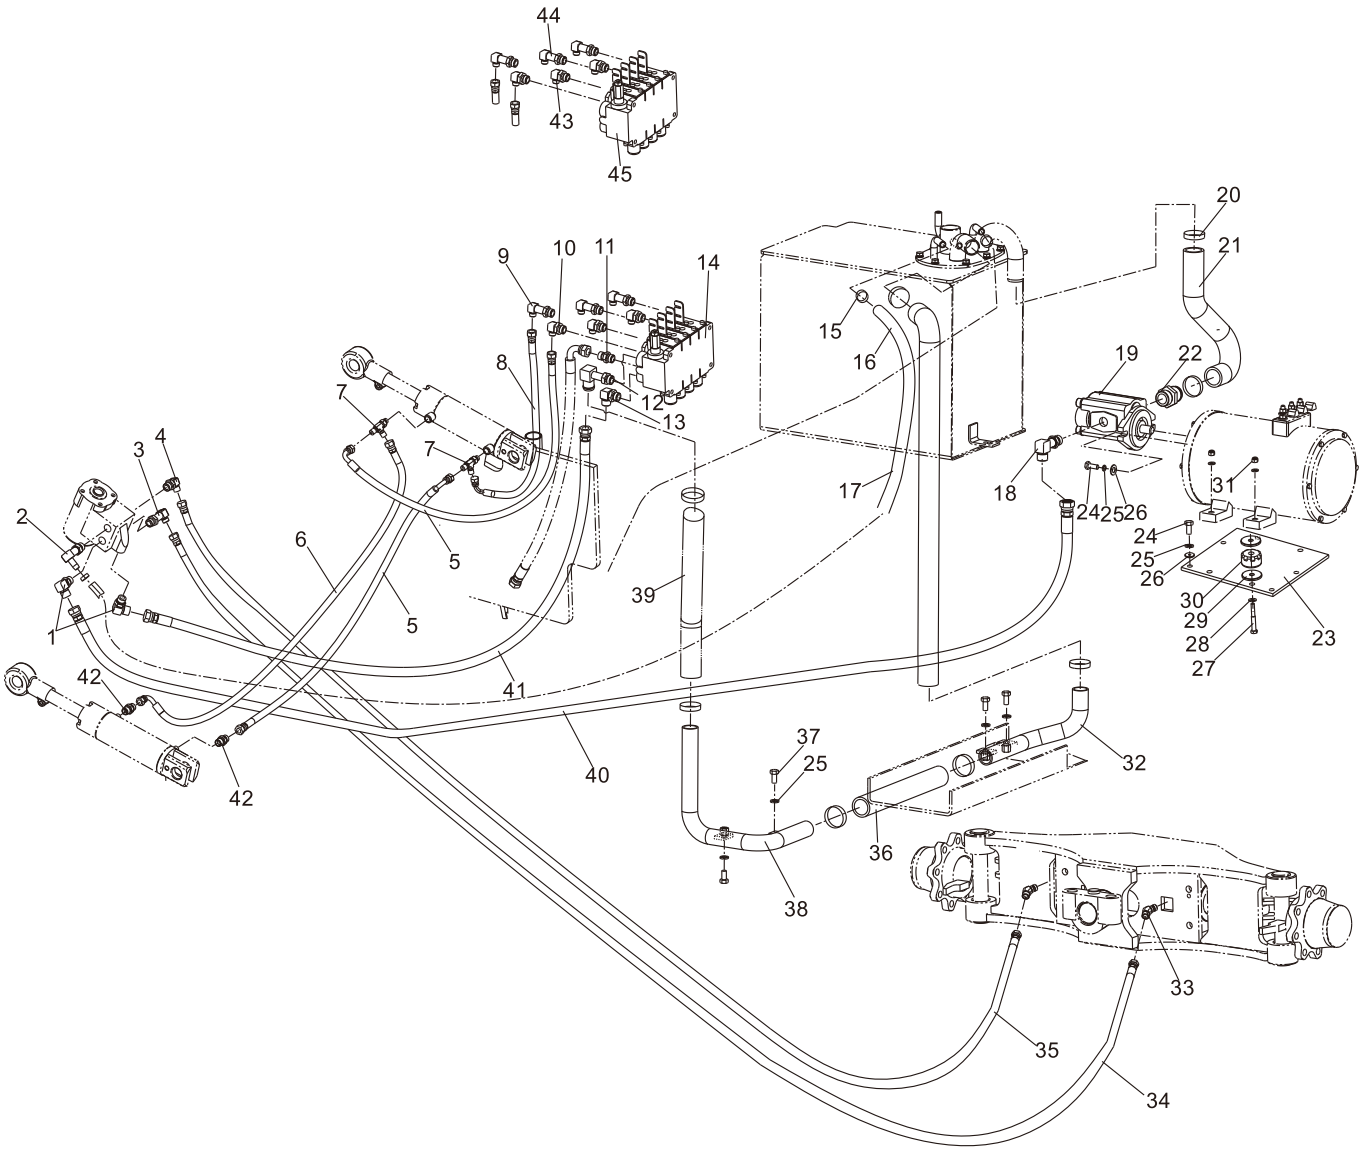


https://truckmanualshub.com/

液压管路
Hydraulic pipeline

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GJT-07-00	直角接头 Elbow	2	
2	GJT-56-00	直角接头 Elbow	1	
3	GJT-68-00	直角接头 Elbow	1	
4	GJT-69-00	直角接头 Elbow	1	
5	TGLBI-08060-H35*J	高压胶管8I×600 Hose H.P.	2	
6	TGLBI-08070-H35*J	高压胶管8I×700 Hose H.P.	1	
7	GJT-416-00	三通接头 Tee coupling	2	
8	TGLBI-08041-H45*J	高压胶管8I×410 Hose H.P.	1	
9	GJT-219-00	直角接头 Elbow	1	
10	GJT-220-00	直角接头 Elbow	1	
11	GJT-70-00	直通接头 Nipple	1	
12	GJT-122-00	直角接头 Elbow	1	
13	GJT-14-00	直角接头 Elbow	1	
14	A16A4-30000	多路阀 Valve	1	
15	JB/T8870	喉箍25×16 Clip	4	
16	TG000-13220	耐油胶管 φ13×2200 Hose	1	
17	A15T4-00002	回油管I Hose	1	
18	GJT-328-00	直角接头 Elbow	1	
19	A15A4-20000	齿轮油泵 Gear pump	1	
20	JB/T8870	喉箍51×35 Clip	8	
21	A15T4-00001	吸油管I Hose	1	
22	GJT-08-00	直通接头 Nipple	1	
23	A15A4-00003	泵电机安装板 Board	1	
24	GB/T5783	螺栓M10×30 Bolt	6	
25	GB/T93	弹垫10 Washer,lock	10	
26	GB/T97.1	平垫10 Washer	14	
27	A15A4-10004	螺栓 Bolt	4	
28	A30A4-10005	垫圈 Washer	4	

https://truckmanualshub.com/

液压管路
Hydraulic pipeline

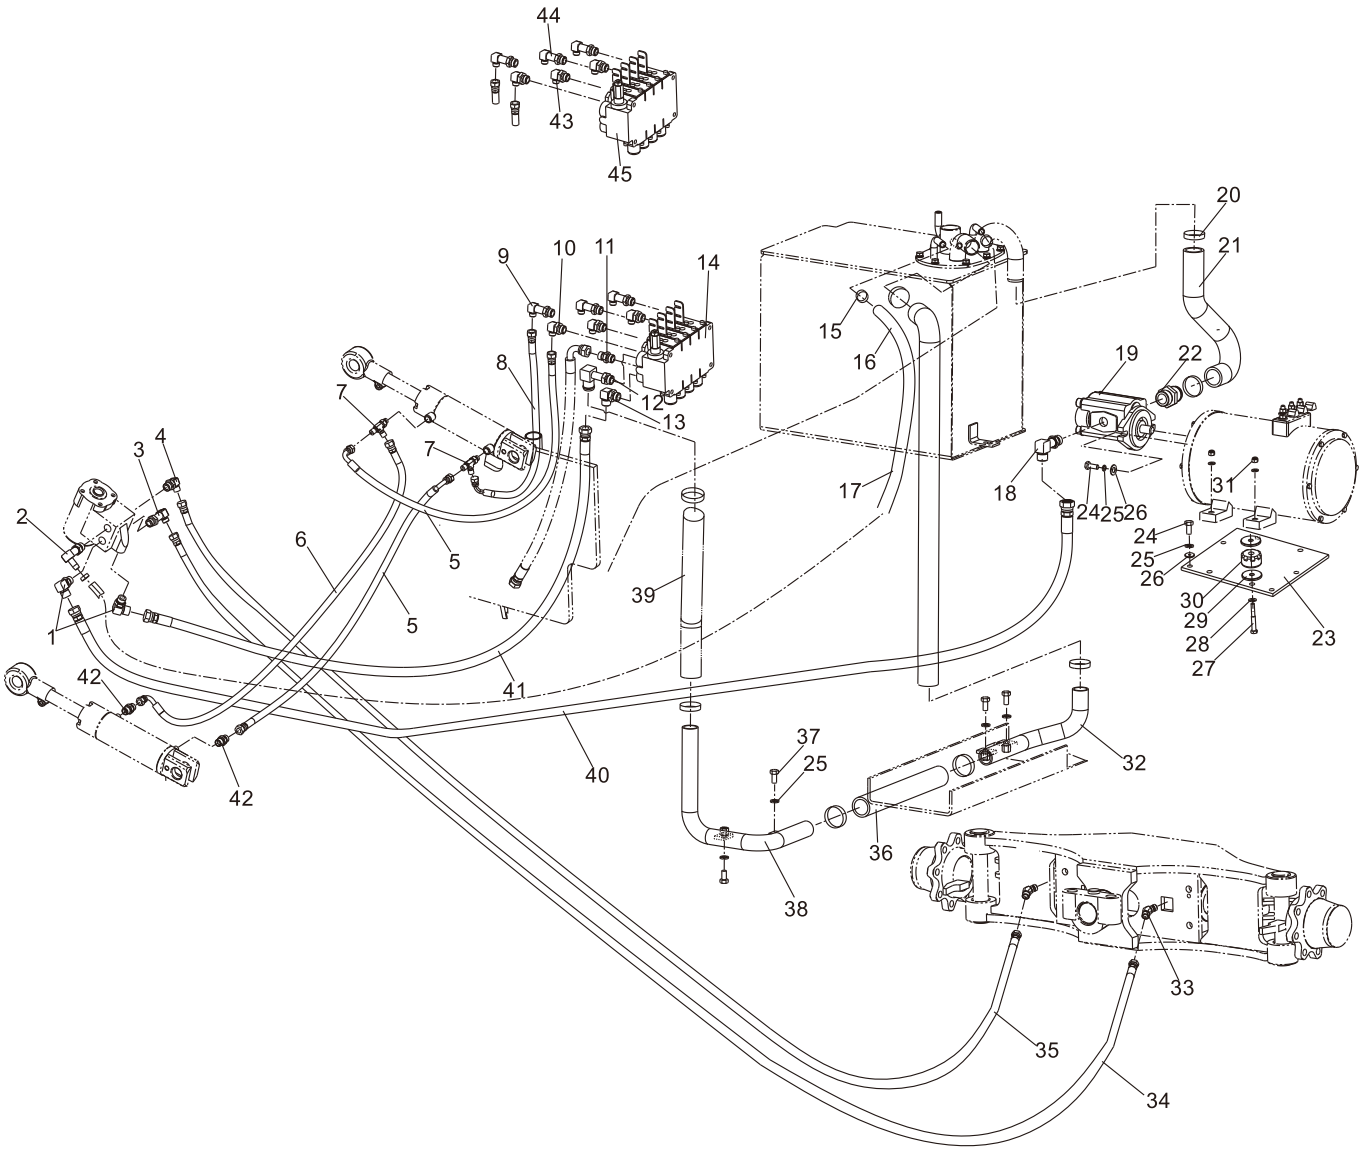

https://truckmanualshub.com/

液压管路
Hydraulic pipeline

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
29	A30A5-10001	垫片 Washer	4	
30	A30A5-10004	橡胶垫 Rubber	4	
31	GB/T889.1	非金属嵌件六角锁紧螺母M10 Nut	4	
32	A30Q4-00100	钢管总成 Pipe ass'y	1	
33	GJT-17-00	转向缸接头 Nipple	2	
34	TGIBI-08160*G	高压胶管8I×1600 Hose H.P.	1	
35	TGIBI-08151*G	高压胶管8I×1510 Hose H.P.	1	
36	A15T4-00003	回油管II Hose	1	
37	GB/T5783	螺栓M10×20 Bolt	4	
38	A15T4-00100	钢管总成 Pipe ass'y	1	
39	A15T4-00004	回油管III Hose	1	
40	TGIBII-13200*J	高压胶管13II×2000 Hose H.P.	1	
41	TGIBII-13067*G	高压胶管13II×670 Hose H.P.	1	
42	GJT-72-00	直通接头 Nipple	2	
43	GJT-11-00	直角接头 Elbow	1	三片阀选用
-	GJT-11-00	直角接头 Elbow	2	四片阀选用
44	GJT-12-00	直角接头 Elbow	1	三片阀选用
-	GJT-12-00	直角接头 Elbow	2	四片阀选用
45	A16A4-30300	电控多路阀 Valve	1	欧标选用


https://truckmanualshub.com/

六、制动系统

BRAKE SYSTEM

https://truckmanualshub.com/

行车制动装置
Brake control unit

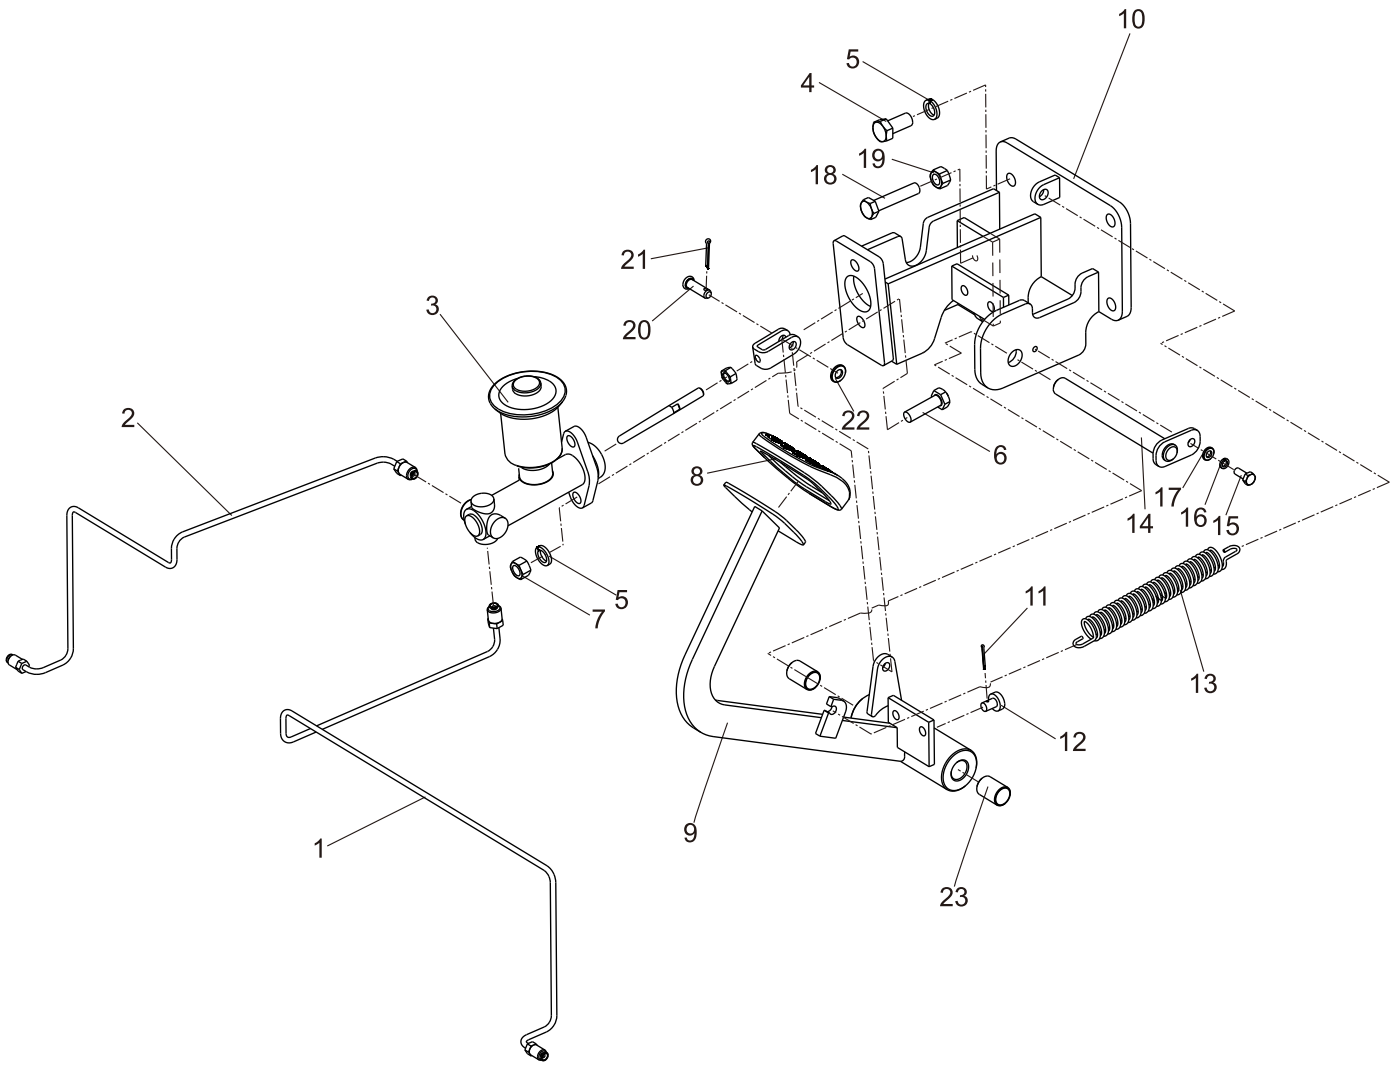


https://truckmanualshub.com/

行车制动装置
Brake control unit

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15G7-10200	制动钢管（左） Brake steel tube(left)	1	
2	A15G7-10100	制动钢管（右） Brake steel tube(right)	1	
3	A16B7-10300	制动总泵 Master cylinder	1	
4	GB/T5783	螺栓M10×25 Bolt	3	
5	GB/T93	弹垫10 Washer,lock	5	
6	GB/T5783	螺栓M10×35 Bolt	2	
7	GB/T6170	螺母M10 Nut	2	
8	A16A7-10102	橡胶垫 Head cover	1	
9	A16B7-10200	制动踏板总成 Brake pedal	1	
10	A16B7-10100	支座 Support	1	
11	GB/T91	开口销2×16 Pin	2	
12	A45A7-11004	尼龙垫 Nylon mat	2	
13	A16B7-11001	回位弹簧 Spring	1	
14	A16B7-10600	支轴 Axis	1	
15	GB/T5783	螺栓M6×16 Bolt	1	
16	GB/T93	弹垫6 Washer,lock	1	
17	GB/T97.1	平垫6 Washer	1	
18	GB/T5783	螺栓M8×40 Bolt	1	
19	GB/T6170	螺母M8 Nut	1	
20	GB/T882	销8×30 Pin	1	
21	GB/T91	开口销2×24 Pin	1	
22	GB/T97.1	平垫8 Washer	1	
23	ZT000-16025	钢背轴承 Bearing	2	

https://truckmanualshub.com/

停车制动
Brake lever

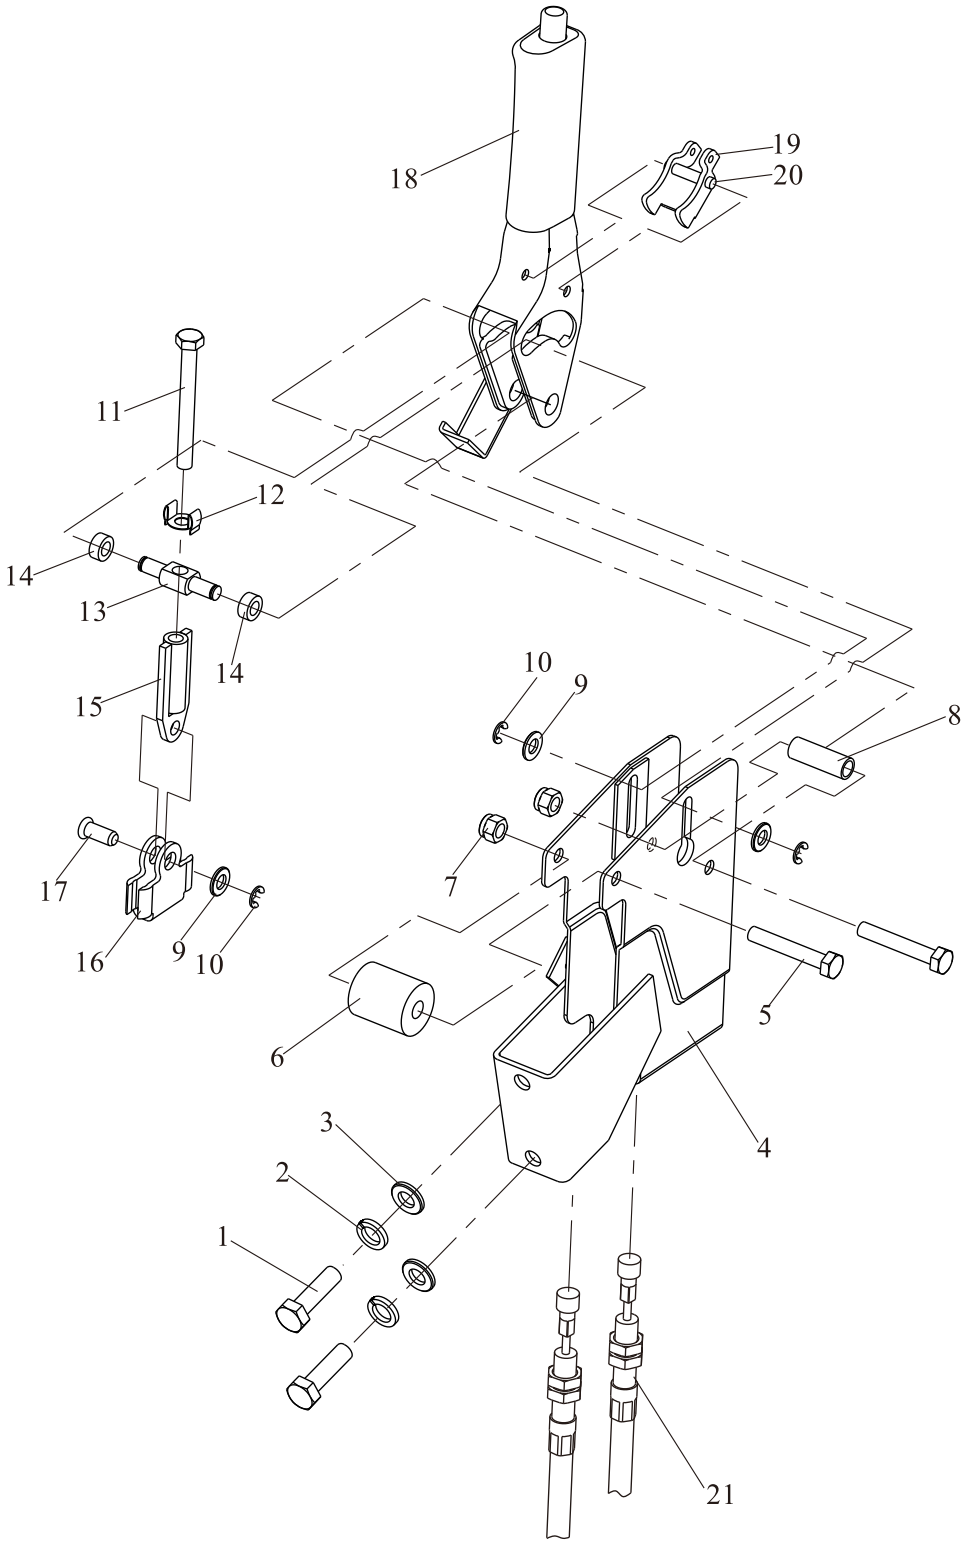

https://truckmanualshub.com/

停车制动
Brake lever

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A7-20200	按钮式手制动总成 Hand brake ass'y	1	
1	GB/T5783	螺栓M10×35 Bolt	2	
2	GB/T93	弹垫10 Washer,lock	2	
3	GB/T97.1	平垫10 Washer	2	
4	A15A7-20201	支架总成 Bracket ass'y	1	
5	GB/T5783	螺栓M8×50 Bolt	2	
6	A15A7-20202	橡胶套 Rubber sleeve	2	
7	GB/T6170	螺母M8 Nut	2	
8	A15A7-20203	轴套 Bushing	1	
9	GB/T97.1	平垫8 Washer	3	
10	GB/T896.1	开口挡圈 Ring	3	
11	GB/T5783	螺栓M8×60 Bolt	1	
12	A15A7-20204	弹簧锁片 Lock plate	1	
13	A15A7-20205	轴 Shaft	1	
14	A15A7-20206	滚轮 Roller	2	
15	A15A7-20207	连接轴 Shaft	1	
16	A15A7-20208	开关板 Switch board	1	
17	GB/T882	销d8×18 Pin	1	
18	A15A7-20209	阀把总成 Lever ass'y	1	
19	A15A7-20210	自锁块 Locking piece	1	
20	A15A7-20211	销轴 Pin	1	
21	A15A7-20212	手刹线头 Hand brake thrum	2	


https://truckmanualshub.com/

七、起重系统

LIFTING SYSTEM

https://truckmanualshub.com/

门架管路系统（基本型）
Hydraulic system mast(Normal mast KM)

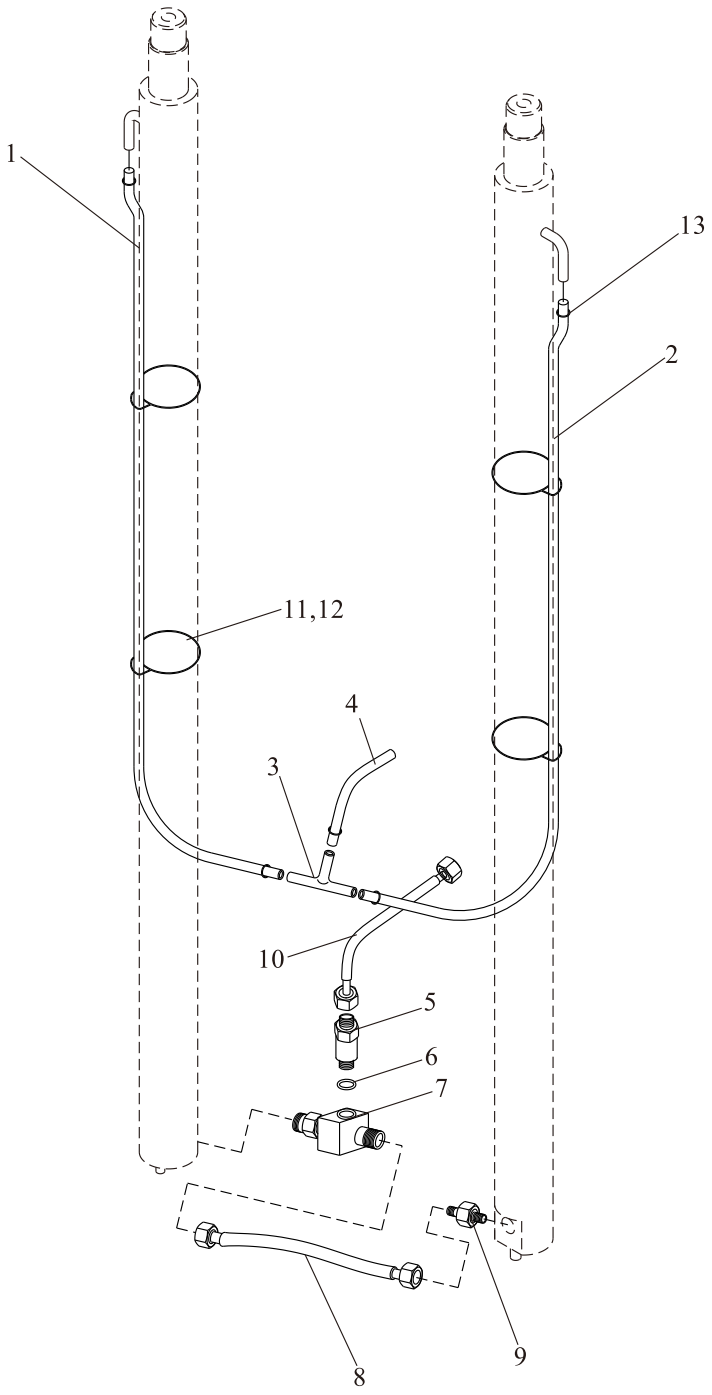

https://truckmanualshub.com/

门架管路系统（基本型）
Hydraulic system mast(Normal mast KM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	TG000-120XX	塑料管d12×L Tube vinyl	1	
2	TG000-120XX	塑料管d12×L Tube vinyl	1	
3	GJT-01-00	回油接头 joint	1	
4	TG000-12100	塑料管d12×1000 Tube vinyl	1	
5	GJT-75-00	限速阀 Flow regulator	1	
6	JB982	组合垫圈22×2.7 Washer	1	
7	GJT-03-00C	三通接头总成 Three way connector ass'y	1	
8	TGIBII-13033*J	高压胶管13II×330 Hose H.P.	1	
9	GJT-04-00	切断阀 Valve,check	1	
10	TGVBII-13060-H25GS*J	高压胶管13II×600 Hose H.P.	1	
-	TGLBII-13100-H25h55GS*J	高压胶管13II×1000 Hose H.P.	1	不装安全阀时用
11	M30A3-70001	管夹片 Band	4	
12	TQ000-05035	扎带5×350 Binding	4	
13	Tk000-10016	卡箍10×16 Clip	6	


https://truckmanualshub.com/

门架管路系统（基本型）
Hydraulic system mast(Normal mast KM)

管路系统选用件（Mast Piping Optional Parts）			
起升高度 Lifting Height	件1长度 Hose(mm)	件2长度 Hose(mm)	备注 Remark
2000	1000	900	
2500	1200	1100	
2700	1300	1200	
3000	1400	1350	标准
3300	1600	1500	
3500	1700	1600	
3700	1800	1700	
4000	2000	1900	
4250	2100	2000	
4500	2300	2150	
4750	2400	2300	
5000	2500	2400	
5500	2800	2700	
6000	3100	2950	

https://truckmanualshub.com/

门架管路系统（二节全自由）
Hydraulic system mast(Full Free 2-Stage Mast KZM)

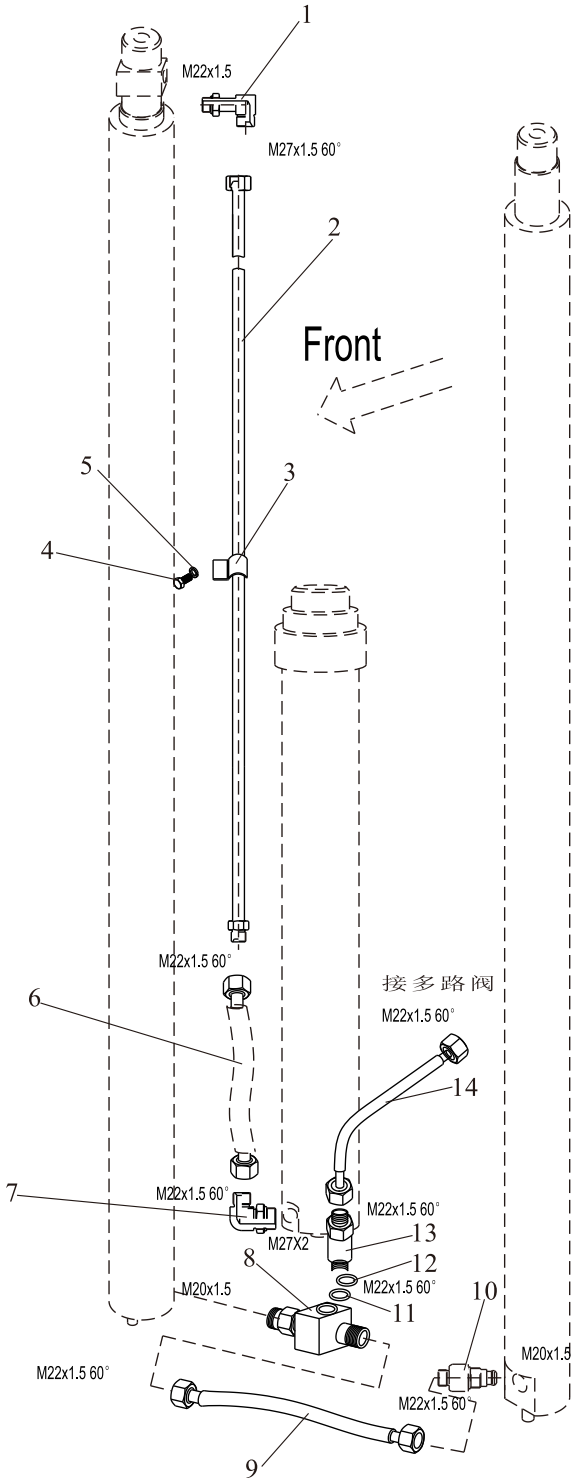

https://truckmanualshub.com/

门架管路系统（二节全自由）
Hydraulic system mast(Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GJT-22-00	直角接头 Elbow	1	
2	GJT-23-00	钢管总成 Steel Pipe ass'y	1	
3	Z30A3-70001	油管固定板 Board	1	
4	GB/T5783	螺栓M8×20 Bolt	2	
5	GB/T93	弹垫 8 Washer,lock	2	
6	TGIBII-13056-GS*J	高压胶管13II×560 Hose H.P.	1	
7	GJT-24-00	直角接头 Elbow	1	
8	GJT-03-00C	三通接头总成 Three way connector ass'y	1	
9	TGIBII-13033*J	高压胶管13II×330 Hose H.P.	1	
10	GJT-04-00	切断阀 Valve,check	1	
11	GB/T3452.1	O型圈 19.3×2.4G O-ring	1	
12	GJT-04-04	垫圈22 Washer	1	
13	GJT-75-00	限速阀 Flow regulator	1	
14	TGVBII-13040-H25NL*J	高压胶管13II×400 Hose H.P.	1	
–	TGVBII-13060-H25NL*J	高压胶管13II×600 Hose H.P.	1	不装安全阀时用


https://truckmanualshub.com/

门架管路系统（二节全自由）
Hydraulic system mast(Full Free 2-Stage Mast KZM)

管路系统选用件（Mast Piping Optional Parts）		
起升高度 Lifting Height	件2长度 Hose(mm)	备注 Remark
2000	628	
2500	878	
3000	1128	标准
3300	1278	
3500	1378	
3700	1478	
4000	1678	
4500	1928	
5000	2178	
5500	2478	
6000	2728	

https://truckmanualshub.com/

门架管路系统（三节全自由）
Hydraulic system mast(Full Free 3-Stage Mast KZM)

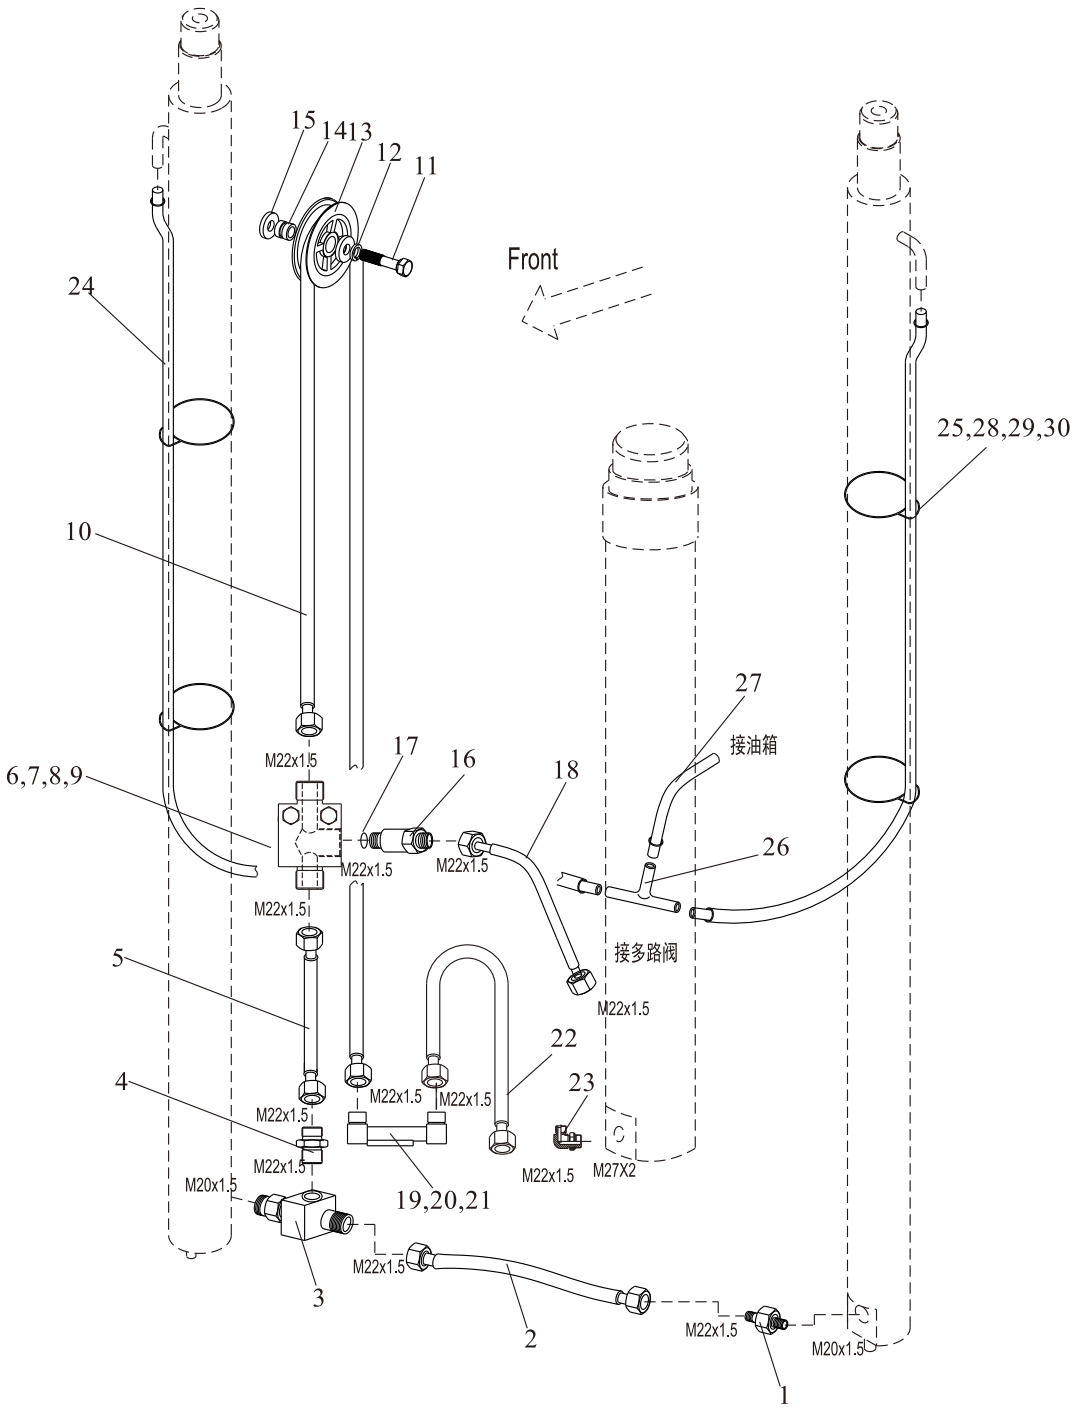


https://truckmanualshub.com/

门架管路系统（三节全自由）
Hydraulic system mast(Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GJT-04-00	切断阀 Valve,check	1	
2	TGIBII-13036*J	高压胶管13II×360 Hose H.P.	1	
3	GJT-476-00	三通接头总成 Three way connector ass'y	1	
4	GJT-26-00	直通接头 Nipple	1	
5	TGIBII-13056*J	高压胶管13II×560 Hose H.P.	1	
6	GJT-28-00	三通接头 Three way connector	1	
7	GB/T5783	螺栓M8×50 Bolt	2	
8	GB/T93	弹垫 8 Washer,lock	2	
9	S15A3-70001	垫板 Board	1	
10	TGIBII-13XXX	高压胶管13IIXXXX Hose H.P.	1	
11	GB/T5786	螺栓M16×1.5×70 Bolt	1	
12	GB/T93	弹垫16 Washer,lock	2	
13	SJM30A-0002	滑轮 Pulley	1	
14	SJM30A-0003	轴套 Spindle collar	1	
15	SJM30A-0001	环 Ring	2	
16	GJT-75-00	限速阀 Flow regulator	1	
17	JB982	组合垫圈22×2.7 Washer	2	
18	TGLBII-13050-H45GS*J	高压胶管13II×500 Hose H.P.	1	
–	TGUBII-13120-H55h55GS*J	高压胶管13II×1200 Hose H.P.	1	不装安全阀时用
19	S15A3-70100	钢管接头 Elbow	1	
20	GB/T5783	螺栓M8×25 Bolt	2	
21	GB/T93	弹垫 8 Washer,lock	2	
22	TGIBII-13040NL*J	高压胶管13II×400 Hose H.P.	1	

https://truckmanualshub.com/

门架管路系统（三节全自由）
Hydraulic system mast(Full Free 3-Stage Mast KZM)

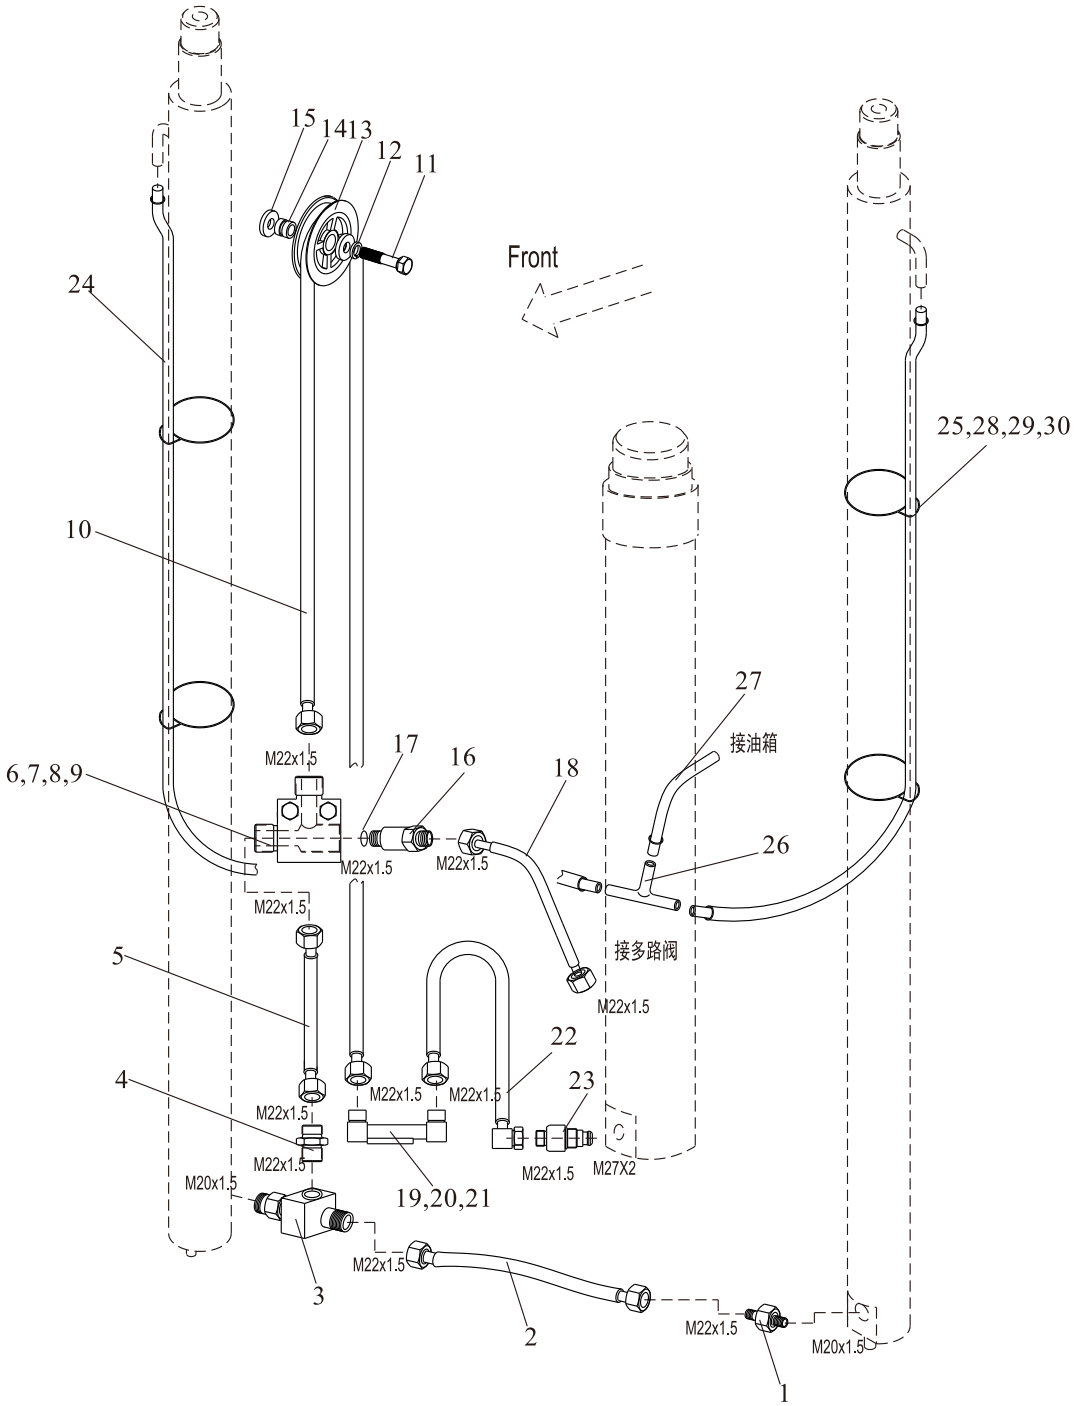

https://truckmanualshub.com/

门架管路系统（三节全自由）
Hydraulic system mast(Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
23	GJT-21-00	直角接头 Elbow	1	
24	TG000-120XX	塑料管d12×L Tube vinyl	1	
25	TG000-120XX	塑料管d12×L Tube vinyl	1	
26	GJT-01-00	回油接头 joint	1	
27	TG000-12100	塑料管d12×1000 Tube vinyl	1	
28	M30A3-70001	管夹片 Band	4	
29	TQ000-05035	扎带5×350 Binding	4	
30	Tk000-10016	卡箍10×16 Clip	6	


https://truckmanualshub.com/

门架管路系统（三节全自由）
Hydraulic system mast(Full Free 3-Stage Mast KZM)

管路系统选用件（Mast Piping Optional Parts）				
起升高度 Lifting Height	件10长度 Hose(mm)	件24长度 Hose(mm)	件25长度 Hose(mm)	备注 Remark
3600	2100	900	900	
4000	2450	1050	1050	
4350	2700	1250	1250	
4500	2860	1350	1350	标准
4800	3000	1450	1450	
5000	3150	1550	1550	
5400	3400	1600	1600	
5500	3400	1650	1650	
6000	3600	2000	2000	

https://truckmanualshub.com/

货叉
Fork

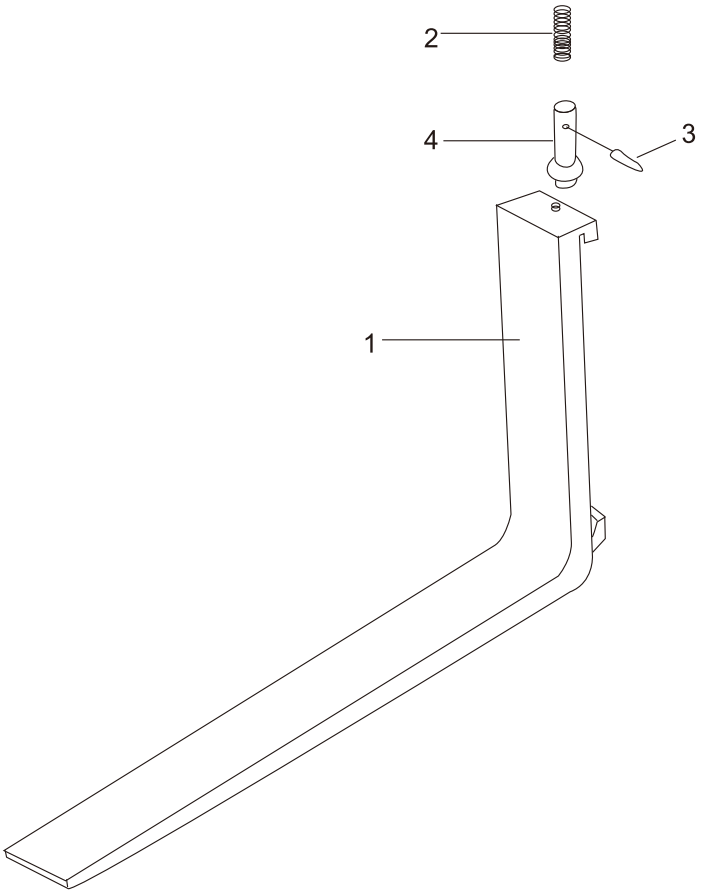


https://truckmanualshub.com/

货叉
Fork

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15A3-90000	货叉总成 Fork ass'y	2	
2	A15A3-90001	弹簧 Spring	2	
3	A15A3-90002	销 Pin	2	
4	A15A3-90003	止动销子 Pin, stopper	2	

https://truckmanualshub.com/

货叉架（基本型）
Lift Bracket Normal Mast

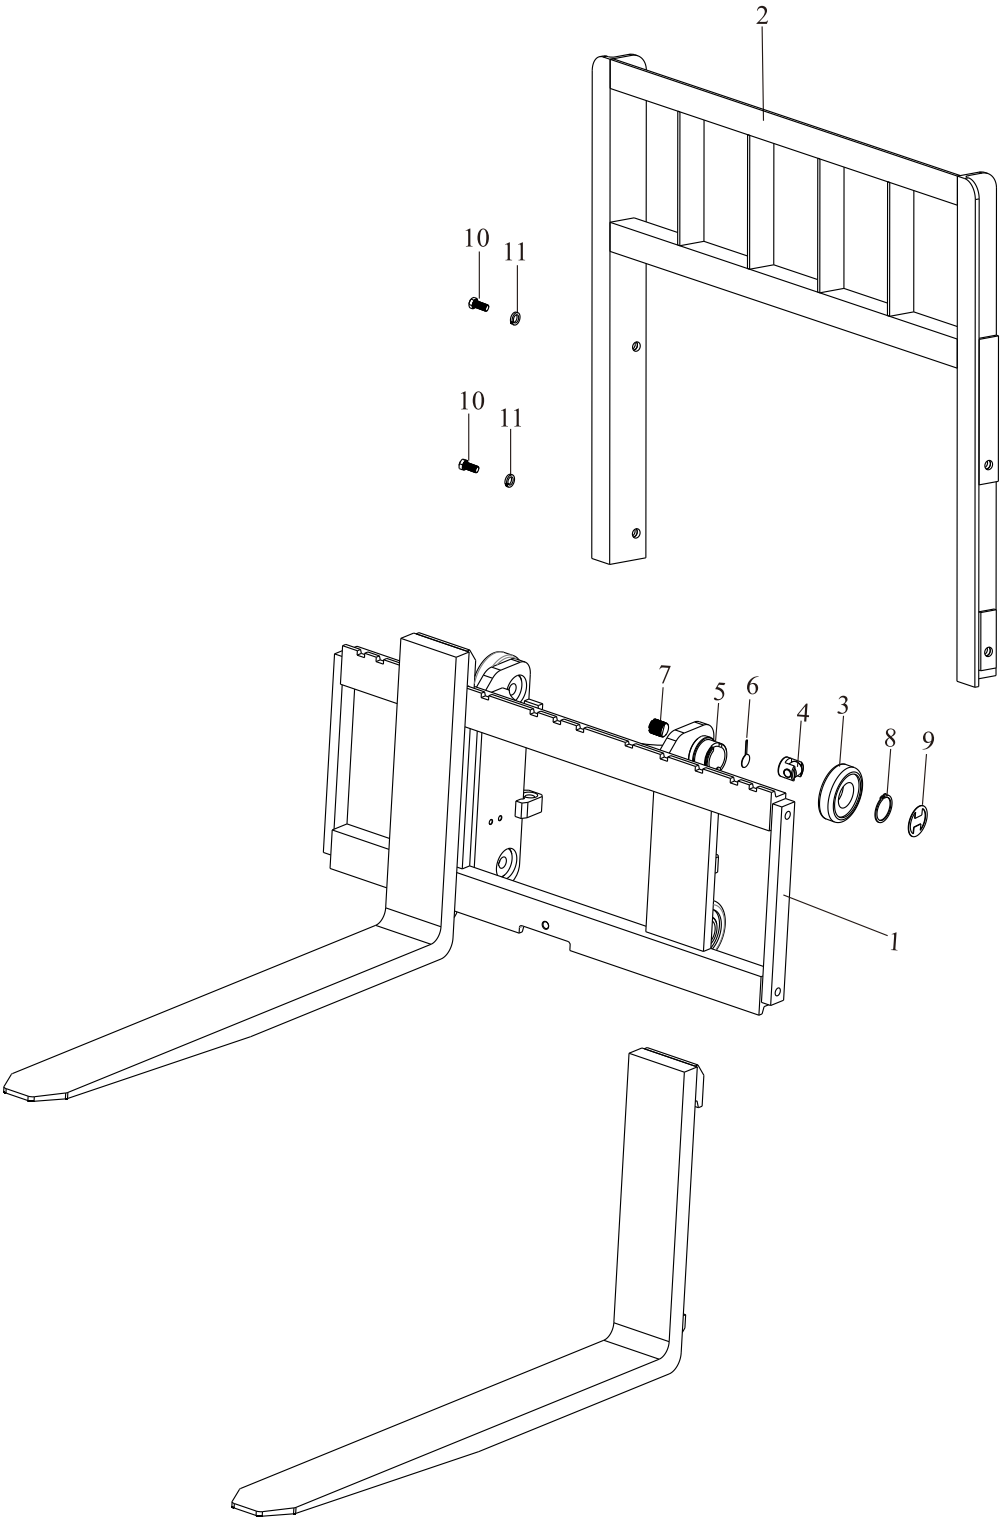


https://truckmanualshub.com/

货叉架（基本型）
Lift Bracket Normal Mast

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	M15C3-50000	货叉架总成 Lifting fork ass'y	1	
2	M15C3-60000	挡货架总成 Backrest ass'y	1	
3	M15C3-40102	主滚轮 End Roller	4	
4	M15C3-40103	侧滚轮 Side roller	4	
5	M15C3-40101	滚轮轴 Spindle head	4	
6	M30A3-40203-1	止松片 Loose slice	4	
7	M15C3-40104	调节螺钉 Screw	4	
8	GB/T894.2	轴用挡圈55 Snap,ring	4	
9	M15C3-40105	防尘片 Dust-Proof ring	4	
10	GB/T5786	螺栓M14×1.5×30 Bolt	4	
11	GB/T93	弹垫14 Washer, lock	4	

https://truckmanualshub.com/

货叉架（二节全自由）
Lift Bracket Full Free 2-Stage Mast

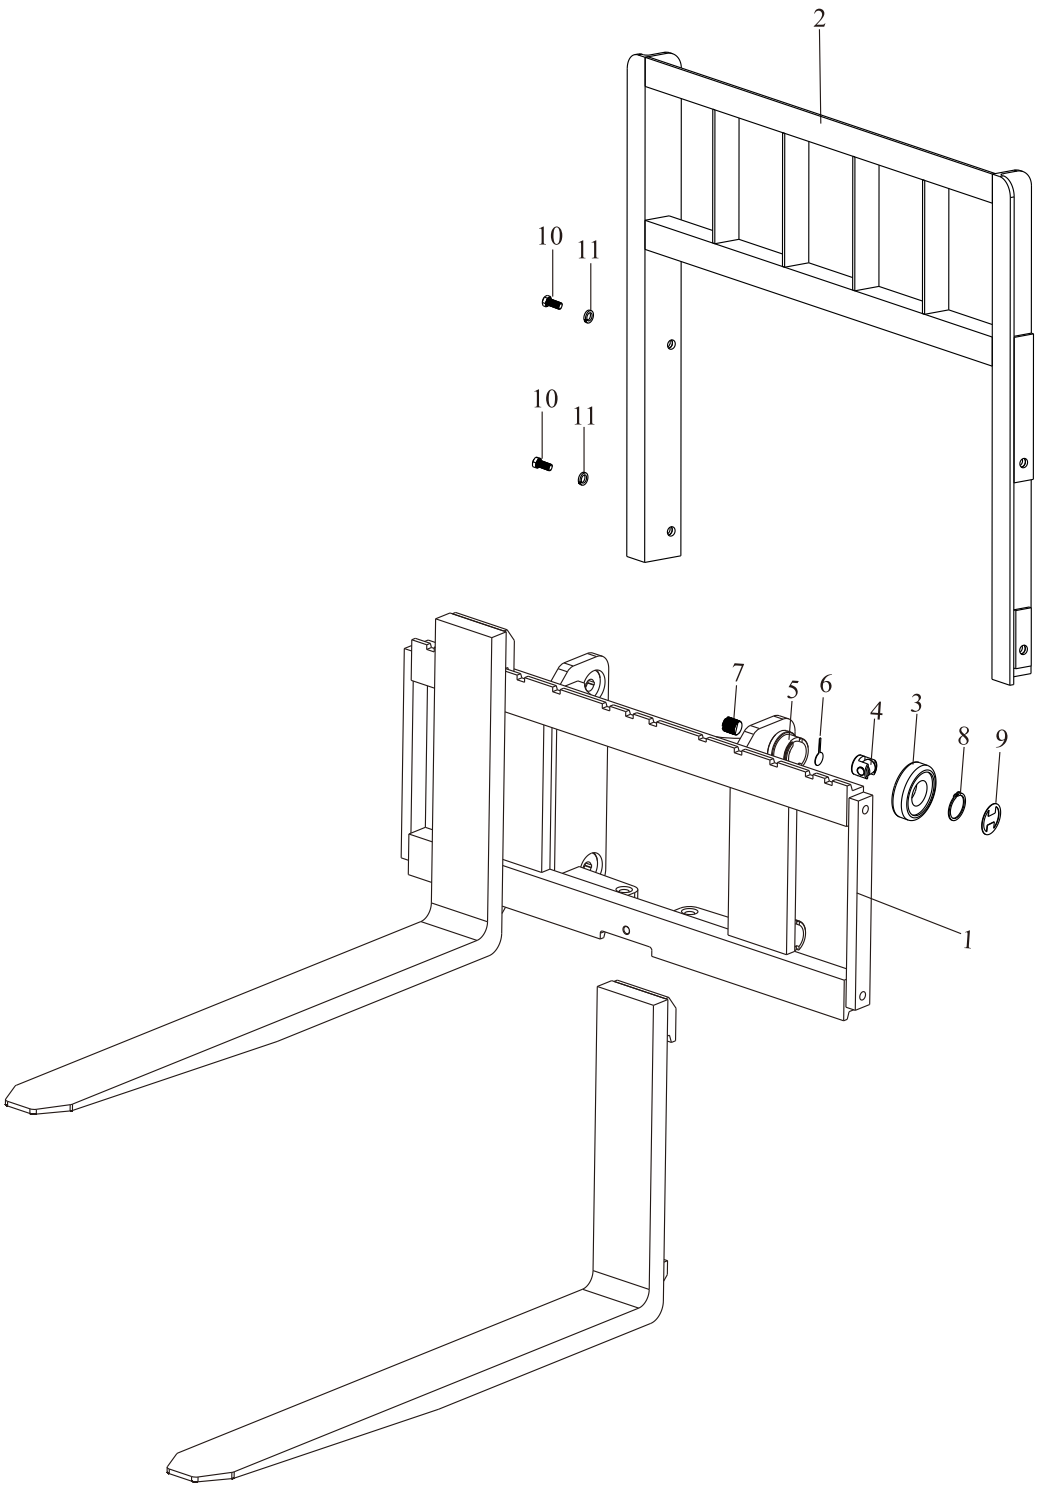


https://truckmanualshub.com/

货叉架（二节全自由）
Lift Bracket Full Free 2-Stage Mast

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	Z15C3-50000	货叉架总成 Lifting fork ass'y	1	
2	M15C3-60000	挡货架总成 Backrest ass'y	1	
3	M15C3-40102	主滚轮 End Roller	4	
4	M15C3-40103	侧滚轮 Side roller	4	
5	M15C3-40101	滚轮轴 Spindle head	4	
6	M30A3-40203-1	止松片 Loose slice	4	
7	M15C3-40104	调节螺钉 Screw	4	
8	GB/T894.2	轴用挡圈55 Snap,ring	4	
9	M15C3-40105	防尘片 Dust-Proof ring	4	
10	GB/T5786	螺栓M14×1.5×30 Bolt	4	
11	GB/T93	弹垫14 Washer, lock	4	

https://truckmanualshub.com/

货叉架（三节全自由）
Lift Bracket Full Free 3-Stage Mast

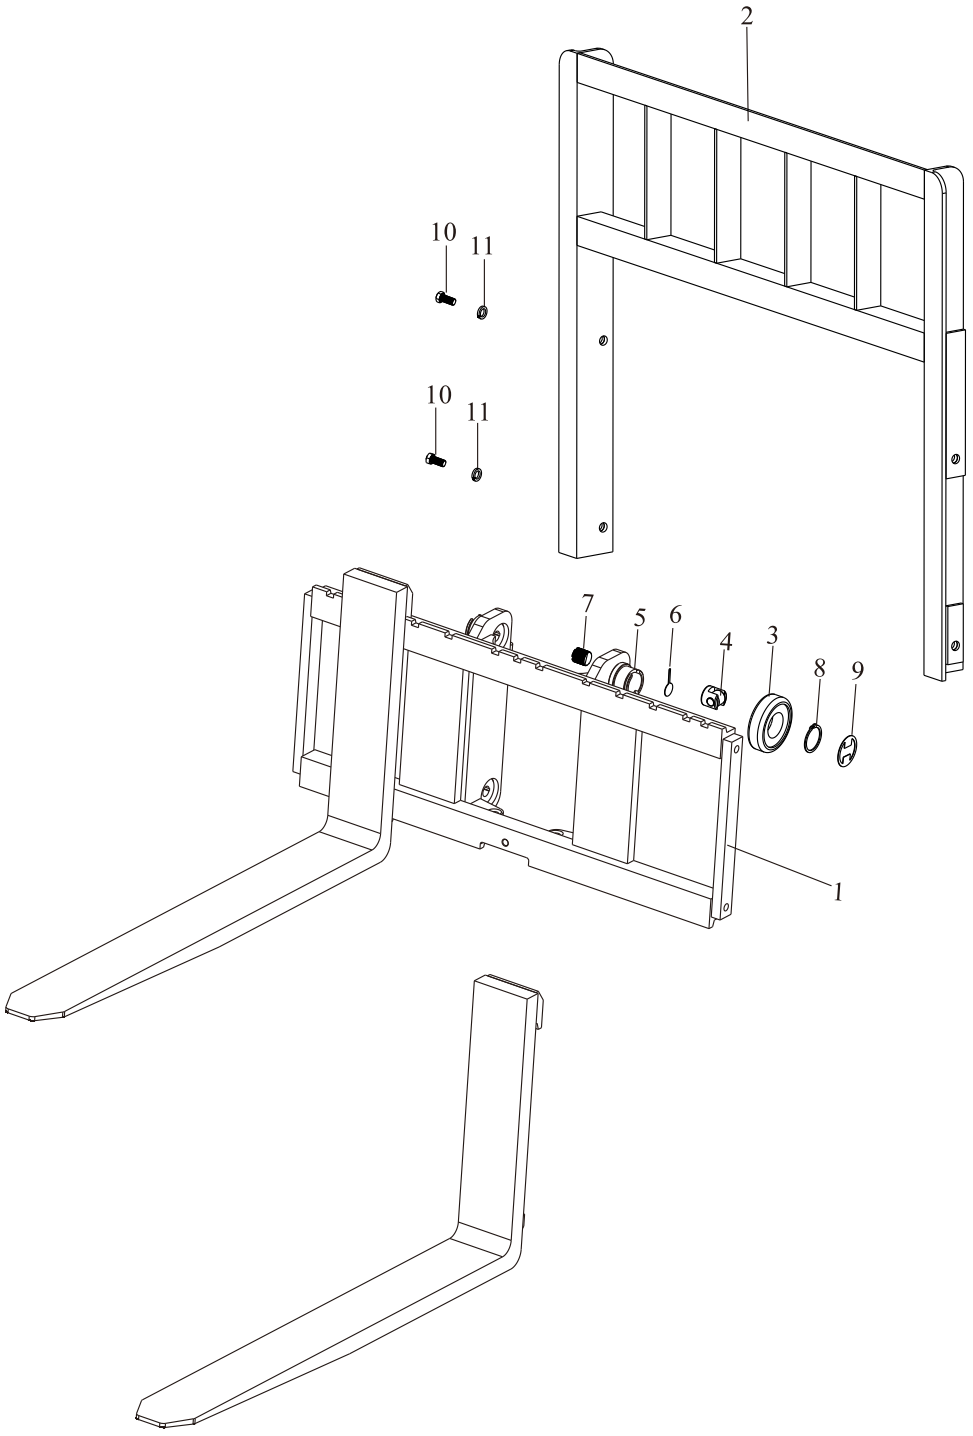


https://truckmanualshub.com/

货叉架（三节全自由）
Lift Bracket Full Free 3-Stage Mast

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	S15C3-50000	货叉架总成 Lifting fork ass'y	1	
2	M15C3-60000	挡货架总成 Backrest ass'y	1	
3	M15C3-40102	主滚轮 End Roller	4	
4	M15C3-40103	侧滚轮 Side roller	4	
5	M15C3-40101	滚轮轴 Spindle head	4	
6	M30A3-40203-1	止松片 Loose slice	4	
7	M15C3-40104	调节螺钉 Screw	4	
8	GB/T894.2	轴用挡圈55 Snap,ring	4	
9	M15C3-40105	防尘片 Dust-Proof ring	4	
10	GB/T5786	螺栓M14×1.5×30 Bolt	4	
11	GB/T93	弹垫14 Washer, lock	4	

https://truckmanualshub.com/

门架(基本型)
Mast (Normal mast KM)

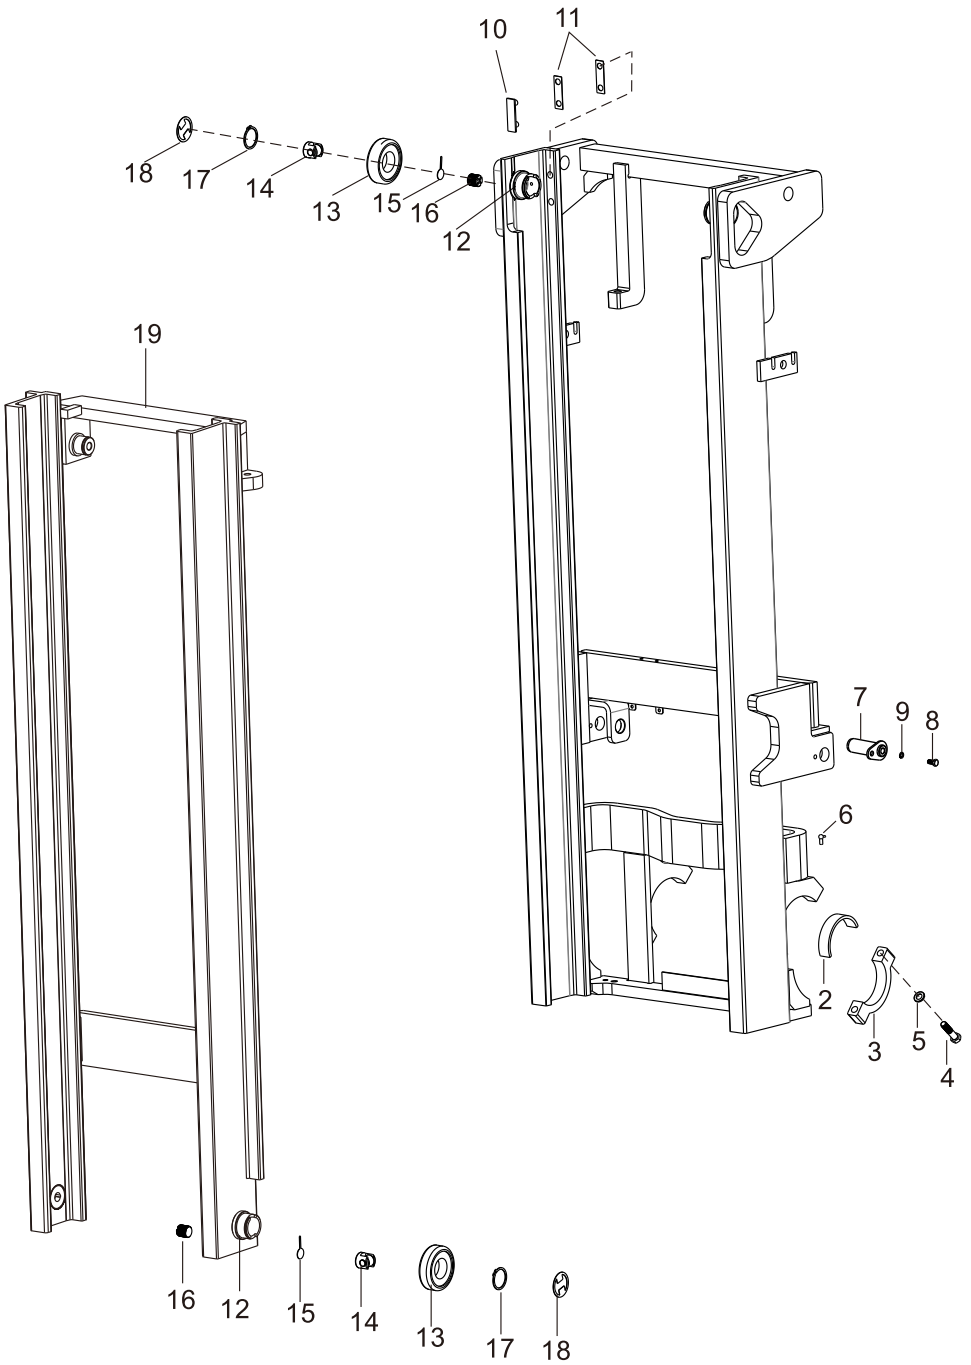


https://truckmanualshub.com/

门架(基本型)
Mast (Normal mast KM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	M15C3-10000	外门架 Mast,outer	1	
2	M15A3-00002	轴衬 Bushing	2	
3	M15A3-00001	支座盖 Cap	4	
4	GB/T5786	螺栓M14×1.5×70 Bolt	4	
5	GB/T93	弹垫14 Washer,lock	4	
6	JB/T7940.1	直通式压注油杯M10×1 Oil cup	4	
7	M30A3-00100	倾斜油缸销轴 Pin axle	2	
8	GB/T5786	螺栓M10×1.25×20 Bolt	2	
9	GB/T93	弹垫10 Washer,lock	2	
10	M30A3-40001	限位滑块 Slipper	2	
11	M30A3-40002/3	调整垫片 Shim	4	
12	M15C3-40101	滚轮轴 Shaft roller	4	
13	M15C3-40102	主滚轮 End Roller	4	
14	M15C3-40103	侧滚轮 Side roller	4	
15	M30A3-40203-1	止松片 Loose slice	4	
16	M15C3-40104	调节螺钉 Screw	4	
17	GB/T894.2	轴用挡圈55 Snap,ring	4	
18	M15C3-40105	防尘片 Dust-Proof ring	4	
19	M15C3-30000	内门架 Mast,inner	1	

https://truckmanualshub.com/

门架(二节全自由)
Mast (Full free 2-stage mast KZM)

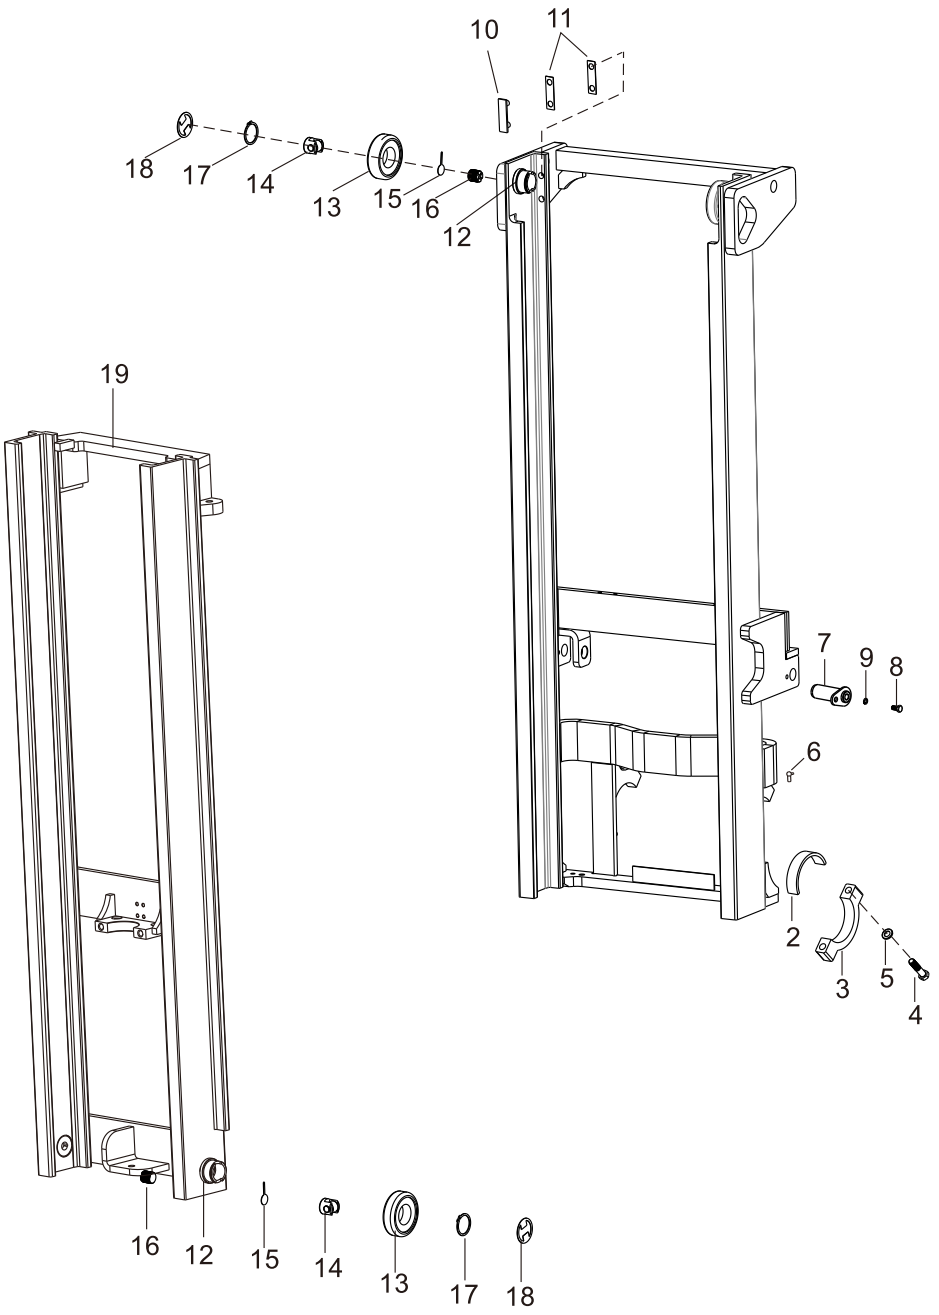


https://truckmanualshub.com/

门架(二节全自由)
Mast (Full free 2-stage mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	Z15C3-10000	外门架 Mast,outer	1	
2	M15A3-00002	轴衬 Bushing	2	
3	M15A3-00001	支座盖 Cap	4	
4	GB/T5786	螺栓M14×1.5×70 Bolt	4	
5	GB/T93	弹垫14 Washer,lock	4	
6	JB/T7940.1	直通式压注油杯M10×1 Oil cup	4	
7	M30A3-00100	倾斜油缸销轴 Pin axle	2	
8	GB/T5786	螺栓M10×1.25×20 Bolt	2	
9	GB/T93	弹垫10 Washer,lock	2	
10	M30A3-40001	限位滑块 Slipper	2	
11	M30A3-40002/3	调整垫片 Shim	4	
12	M15C3-40101	滚轮轴 Shaft roller	4	
13	M15C3-40102	主滚轮 End Roller	4	
14	M15C3-40103	侧滚轮 Side roller	4	
15	M30A3-40203-1	止松片 Loose slice	4	
16	M15C3-40104	调节螺钉 Screw	4	
17	GB/T894.2	轴用挡圈55 Snap,ring	4	
18	M15C3-40105	防尘片 Dust-Proof ring	4	
19	Z15C3-30000	内门架 Mast,inner	1	

https://truckmanualshub.com/

门架(三节全自由)
Mast (Full free 3-stage mast KZM)

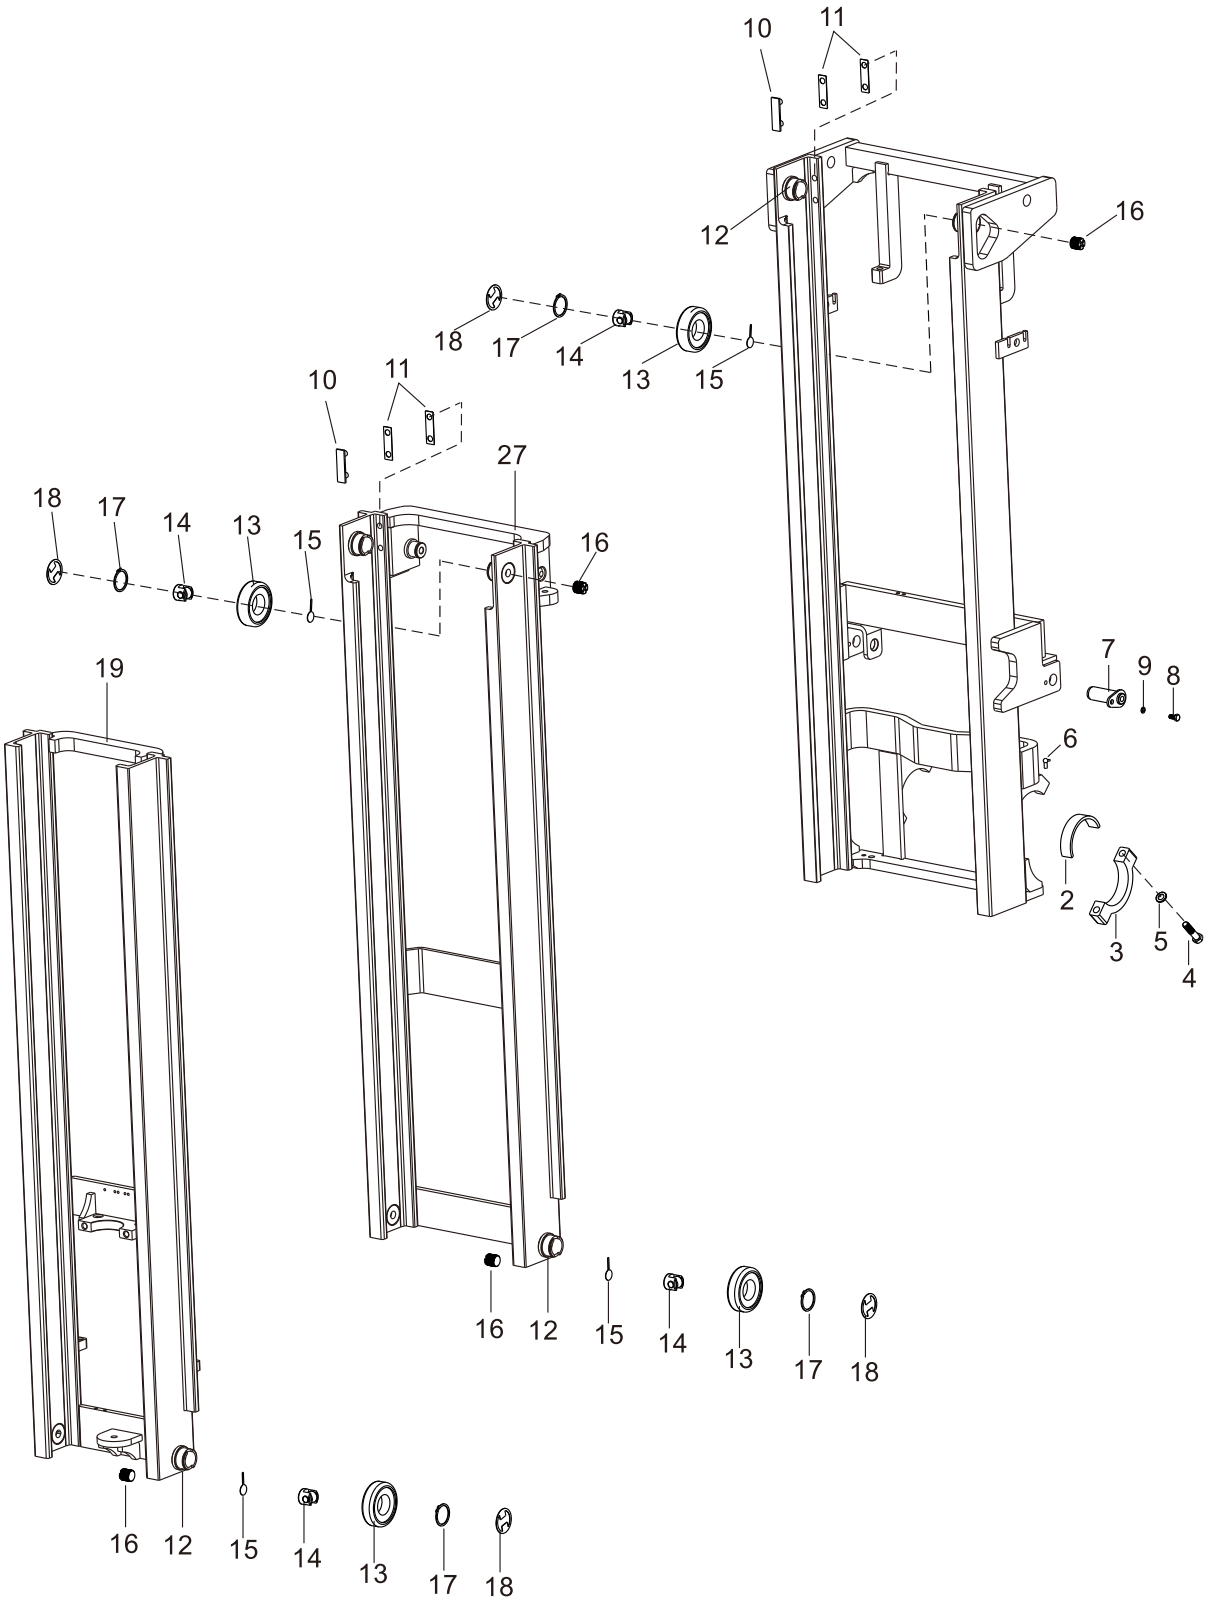


https://truckmanualshub.com/

门架(三节全自由)
Mast (Full free 3-stage mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	S15C3-10000	外门架 Mast,outer	1	
2	M15A3-00002	轴衬 Bushing	2	
3	M15A3-00001	支座盖 Cap	4	
4	GB/T5786	螺栓M14×1.5×70 Bolt	4	
5	GB/T93	弹垫14 Washer,lock	4	
6	JB/T7940.1	直通式压注油杯M10×1 Oil cup	4	
7	M30A3-00100	倾斜油缸销轴 Pin axle	2	
8	GB/T5786	螺栓M10×1.25×20 Bolt	2	
9	GB/T93	弹垫10 Washer,lock	2	
10	M30A3-40001	限位滑块 Slipper	4	
11	M30A3-40002/3	调整垫片 Shim	8	
12	M15C3-40101	滚轮轴 Shaft roller	8	
13	M15C3-40102	主滚轮 End Roller	8	
14	M15C3-40103	侧滚轮 Side roller	8	
15	M30A3-40203-1	止松片 Loose slice	8	
16	M15C3-40104	调节螺钉 Screw	8	
17	GB/T894.2	轴用挡圈55 Snap,ring	8	
18	M15C3-40105	防尘片 Dust-Proof ring	8	
19	S15C3-30000	内门架 Mast,inner	1	
20	S15C3-20000	中门架 Medium Mast	1	

https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)

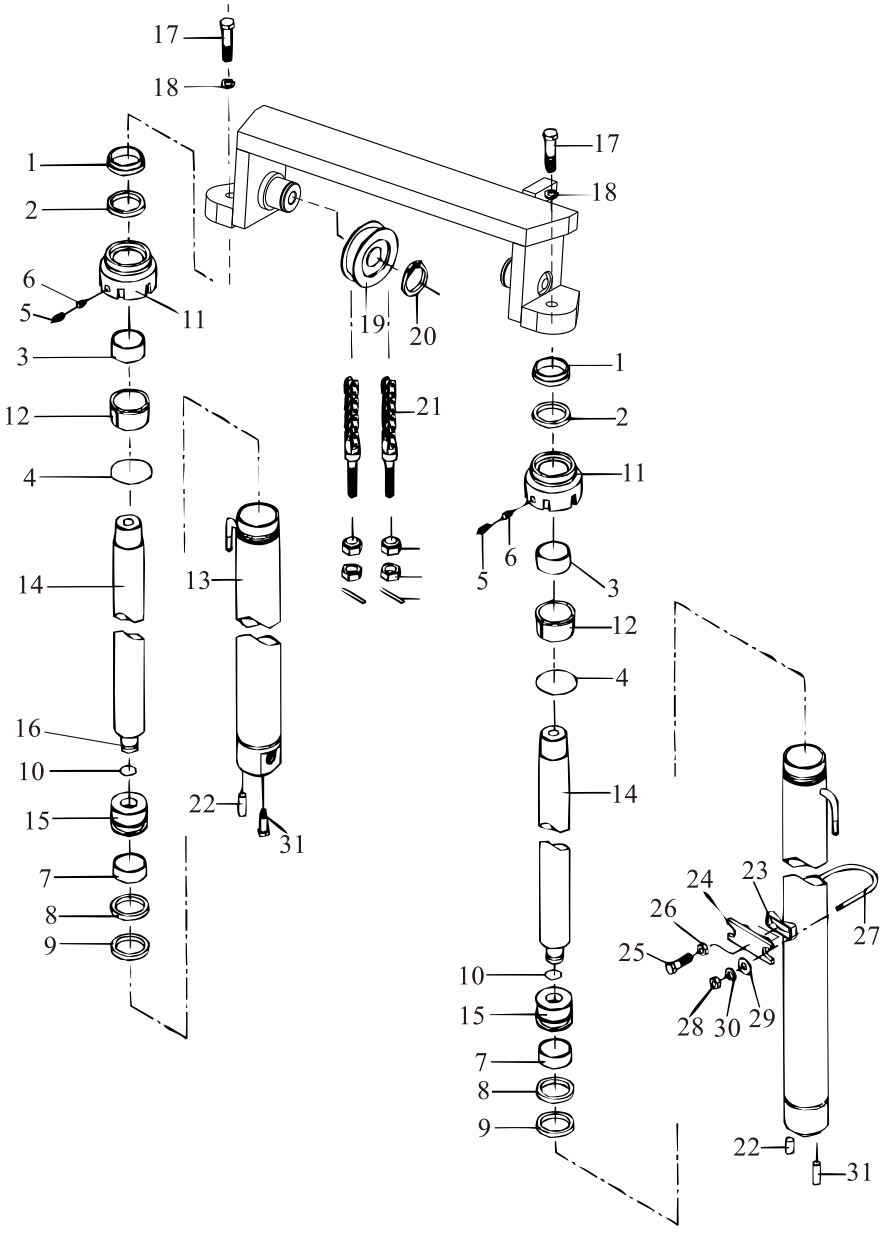


https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A4-10100	起升油缸总成 Lift cylinder ass,y	1	
1	A15A4-10101	防尘圈35×47×7×10 Dust-proof ring	2	
2	A15A4-10102	轴封35×45×6 Ring	2	
3	A15A4-10103	钢背轴承SF-1/35×39×30 Guide bushing	2	
4	GB/T3452.1	O型密封圈47.5×2.65 O-ring	2	
5	GB/T80	螺钉M8×8 Screw	4	
6	A15A4-10104	尼龙垫 Plug	4	
7	A15A4-10105	支承环45×20×2 Backup ring	2	
8	A15A4-10106	挡圈45×35×3 Stopper	2	
9	A15A4-10107	孔封45×35×6 Ring	2	
10	A15A4-10108	钢丝挡圈 Snap ring	2	
11	A15A4-10109	导向套 Guide,Sleeve	2	
12	A15A4-10110	衬套 Sleeve	2	
13	A15A4-10111	缸体 Cylinder	2	
14	A15A4-10112	活塞杆 Piston rod	2	
15	A15A4-10113	活塞 Piston	2	
16	A15A4-10114	调整套 Spacer	2	
17	GB/T5786	螺栓 M14×1.5×40 Bolt	2	
18	GB/T93	弹垫14 Washer,lock	2	
19	M15A3-80100	链轮 Sheave	2	

https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)

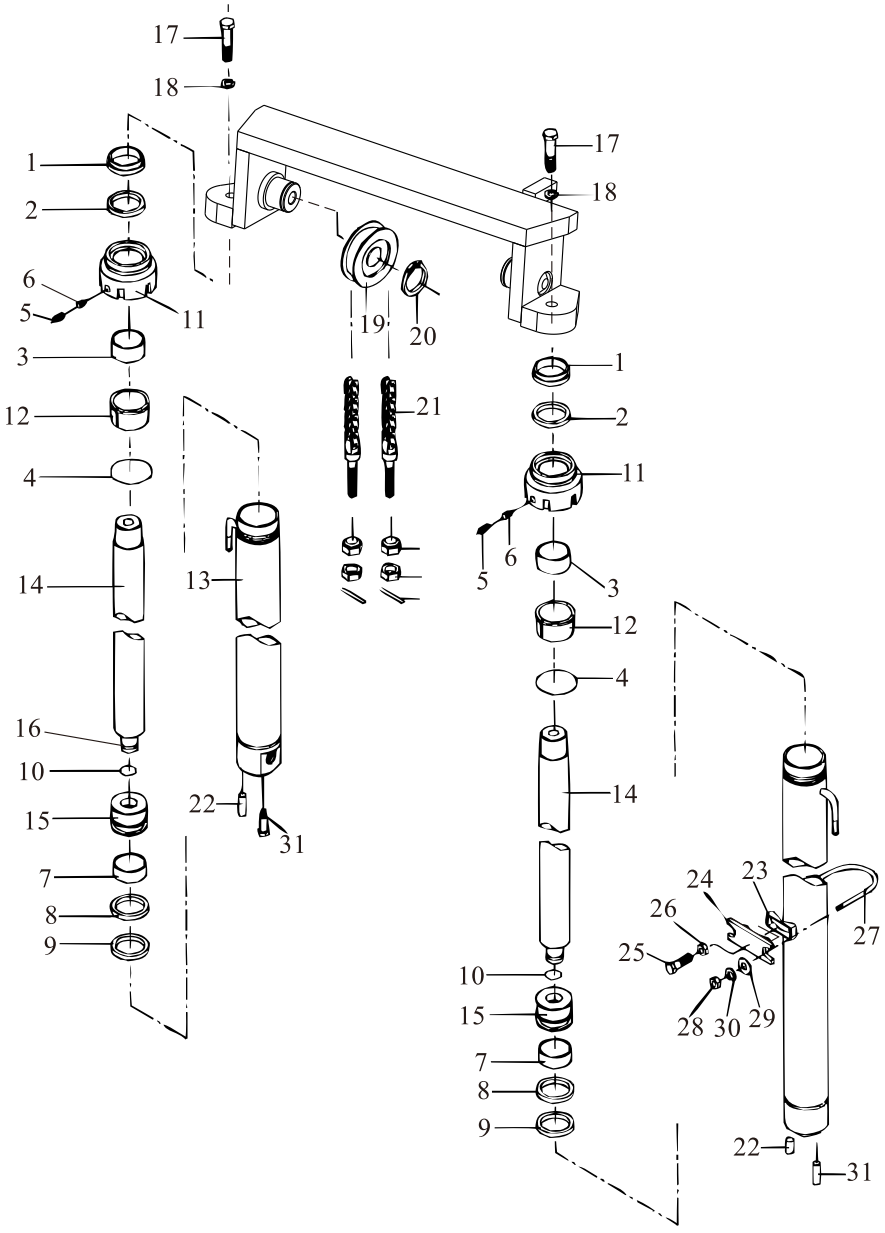


https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
20	GB/T894.1	弹性挡圈40 Snap ring	2	
21	LH1223×N	链条总成 Chain ass'y	2	
22	GB/T119.1	销D10×26 Pin	2	
23	M30A3-80002	调整块 Spacer	2	
24	M30A3-80003	油缸支撑块 Support	2	
25	GB/T5786	螺栓M12×1.25×60 Bolt	2	
26	GB/T3098.2	螺母M12×1.25 Nut	2	
27	M15A3-80001	U型螺栓 U-Bolt	2	
28	GB/T6171	螺母M10×1.25 Nut	4	
29	GB/T97.1	垫圈10 Washer	4	
30	GB/T93	弹性垫圈10 Washer,lock	4	
31	M30A3-80001	台阶螺栓 Bolt	2	

https://truckmanualshub.com/

前起升油缸(二节全自由)
Front Lift Cylinder (Full Free 2-Stage Mast KZM)

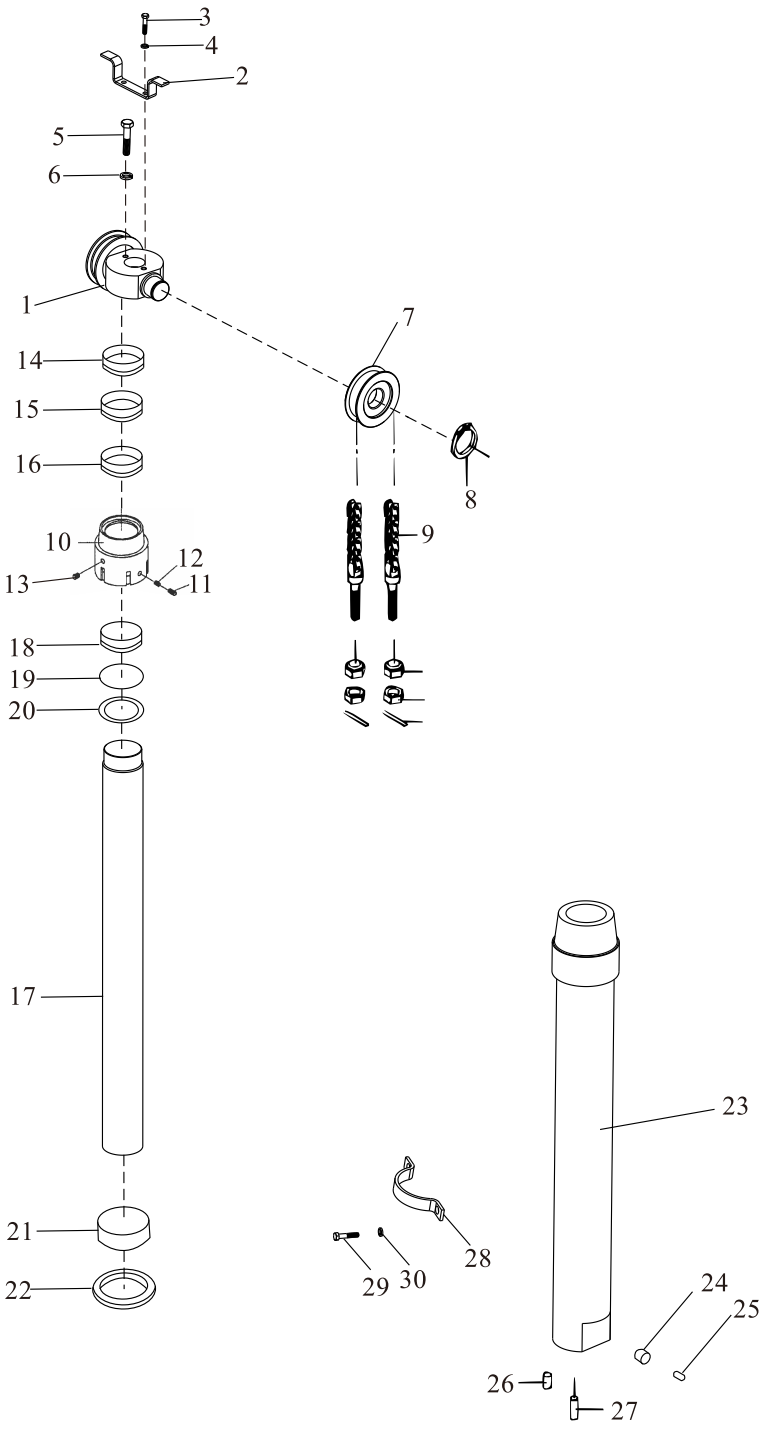


https://truckmanualshub.com/

前起升油缸(二节全自由)
Front Lift Cylinder (Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A4-10300	前起升油缸总成 Front lift cylinder ass'y	1	
1	Z15A3-90100	缸头座总成 Sheave Seat	1	
2	Z15A3-90001	链条挡板 Stopper chain	1	
3	GB/T5783	螺栓 M8×20 Bolt	2	
4	GB/T93	弹垫8 Washer,lock	2	
5	GB/T5783	螺栓 M16 ×40 Bolt	1	
6	GB/T93	弹垫16 Washer,lock	1	
7	M15A3-80100	链轮 Sheave	2	
8	GB/T894.1	弹性挡圈40 Snap ring	2	
9	LH1223×N	链条总成 Chain ass'y	2	
10	A15A4-10301	前缸盖 Cap, lift cylinder	1	
11	GB/T73	螺钉M8×10 Screw	1	
12	A15A4-10302	尼龙垫Φ6×3 Plug	1	
13	A15A4-10314	螺塞ZG1/8〃 Plug	1	
14	A15A4-10303	防尘圈70×84×8/11 Dust ring	1	
15	A15A4-10304	挡圈70×80×3 Snap ring	1	
16	A15A4-10305	轴封70×80×6 Ring	1	
17	A15A4-10306	活塞杆 Piston rod	1	
18	A15A4-10307	钢背轴承 Guide bushing	1	
19	GB/T3452.1	O型密封圈90×3.55 O-ring	1	

https://truckmanualshub.com/

前起升油缸(二节全自由)
Front Lift Cylinder (Full Free 2-Stage Mast KZM)

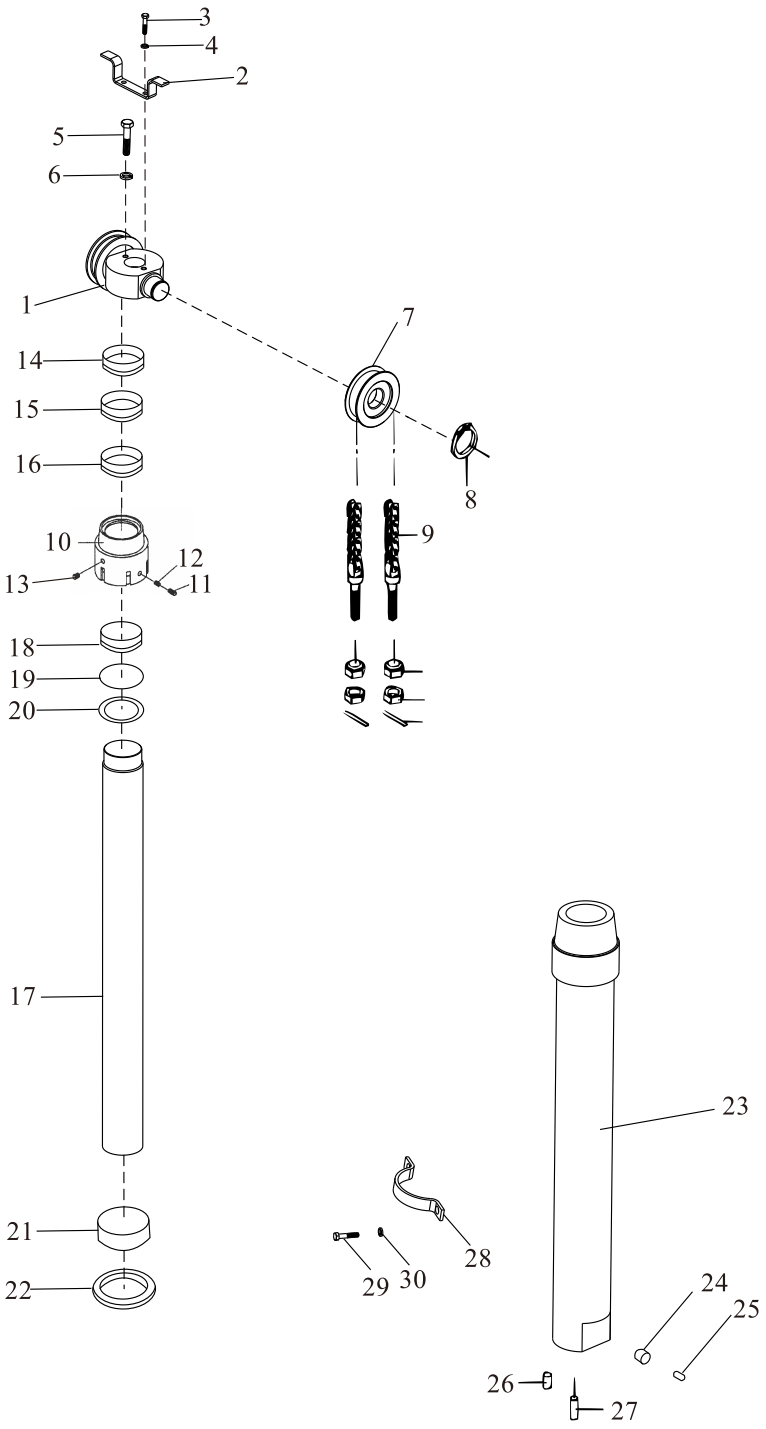


https://truckmanualshub.com/

前起升油缸(二节全自由)
Front Lift Cylinder (Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
20	A15A4-10308	挡圈89×95×1.5 Stopper	1	
21	A15A4-10309	支承环80×25×2.5 Backup ring	1	
22	A15A4-10310	密封环80×72×4 Seal ring	1	
23	A15A4-10311	缸体 Cylinder	1	
24	A15A4-10312	阀芯 Spool	1	
25	A15A4-10313	弹簧 Spring	1	
26	M30A3-80001	台阶螺栓 Bolt	1	
27	GB/T119.1	销D×26 Pin	1	
28	Z15A3-90002	油缸卡环 Support	1	
29	GB/T5786	螺栓 M14×1.5×30 Bolt	2	
30	GB/T93	弹垫14 Washer,lock	2	

https://truckmanualshub.com/

前起升油缸(三节全自由)
Front Lift Cylinder (Full Free 3-Stage Mast KZM)

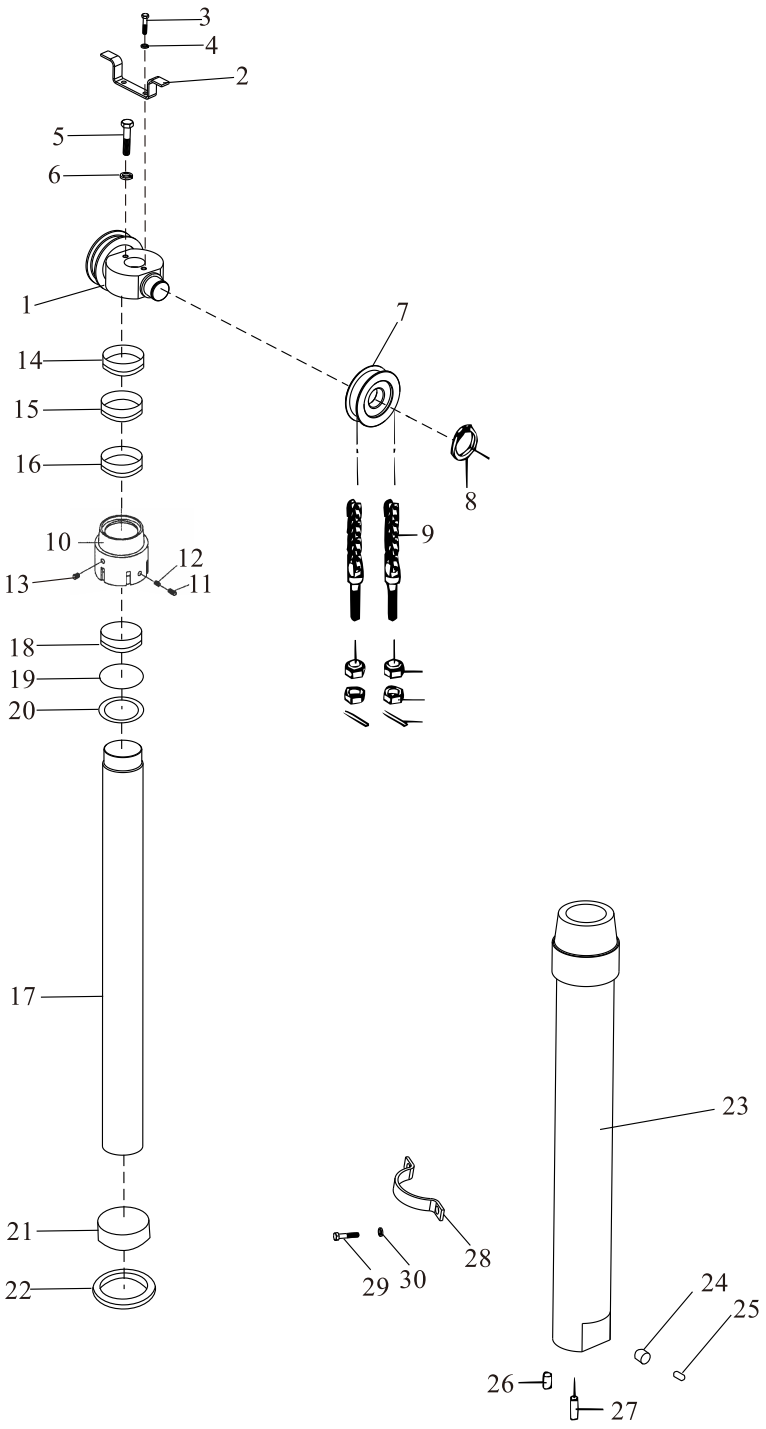


https://truckmanualshub.com/

前起升油缸(三节全自由)
Front Lift Cylinder (Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A4-10500	前起升油缸总成 Front lift cylinder ass'y	1	
1	Z15A3-90100	缸头座总成 Sheave Seat	1	
2	Z15A3-90001	链条挡板 Stopper chain	1	
3	GB/T93	弹垫10 Washer,lock	2	
4	GB/T5783	螺栓 M10×20 Bolt	2	
5	GB/T5783	螺栓 M16×1.5×40 Bolt	1	
6	GB/T93	弹垫16 Washer,lock	1	
7	M15A3-80100	链轮 Sheave	2	
8	GB/T894.1	弹性挡圈40 Snap ring	2	
9	LH1223×N	链条总成 Chain ass'y	2	
10	A15A4-10501	前缸盖 Cap, lift cylinder	1	
11	GB/T73	螺钉M8×10 Screw	1	
12	A15A4-10502	尼龙垫Φ6×3 Plug	1	
13	A15A4-10314	螺塞ZG1/8〃 Plug	1	
14	A15A4-10503	防尘圈 Dust ring	1	
15	A15A4-10504	挡圈 Snap ring	1	
16	A15A4-10505	轴封 Ring	1	
17	A15A4-10506	活塞杆 Piston rod	1	
18	A15A4-10507	钢背轴承 Guide bushing	1	
19	GB/T3452.1	O型密封圈 O-ring	1	

https://truckmanualshub.com/

前起升油缸(三节全自由)
Front Lift Cylinder (Full Free 3-Stage Mast KZM)

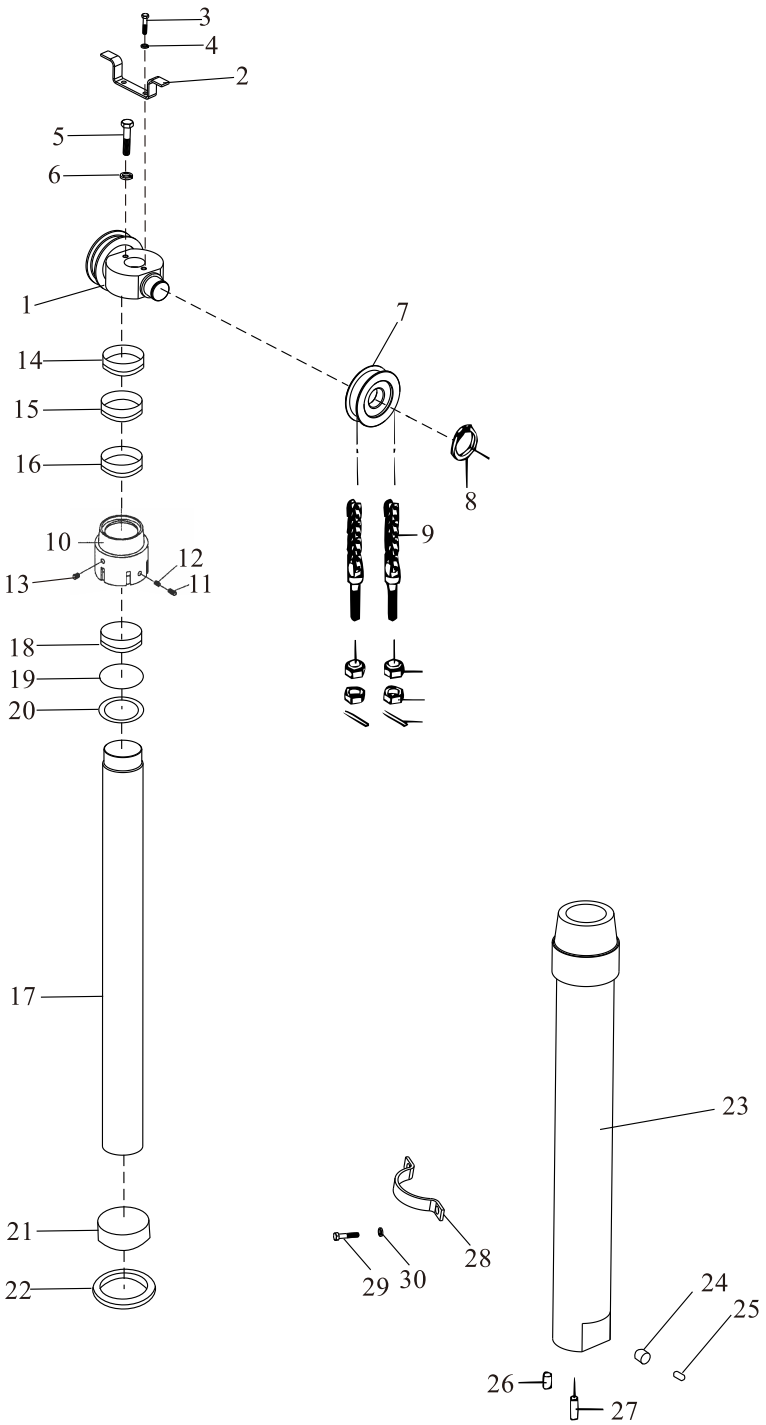


https://truckmanualshub.com/

前起升油缸(三节全自由)
Front Lift Cylinder (Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
20	A15A4-10508	挡圈 Stopper	1	
21	A15A4-10509	支承环 Backup ring	1	
22	A15A4-10510	密封环 Seal ring	1	
23	A15A4-10511	缸体 Cylinder	1	
24	A15A4-10512	滑阀 Spool	1	
25	A15A4-10513	弹簧 Spring	1	
26	GB/T5783	螺栓 M12×1.25×35 Bolt	1	
27	GB/T119.1	销D10×26 Pin	1	
28	Z15A3-90002	油缸卡环 Support	1	
29	GB/T5786	螺栓 M14×1.5×30 Bolt	2	
30	GB/T93	弹垫14 Washer,lock	2	

https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

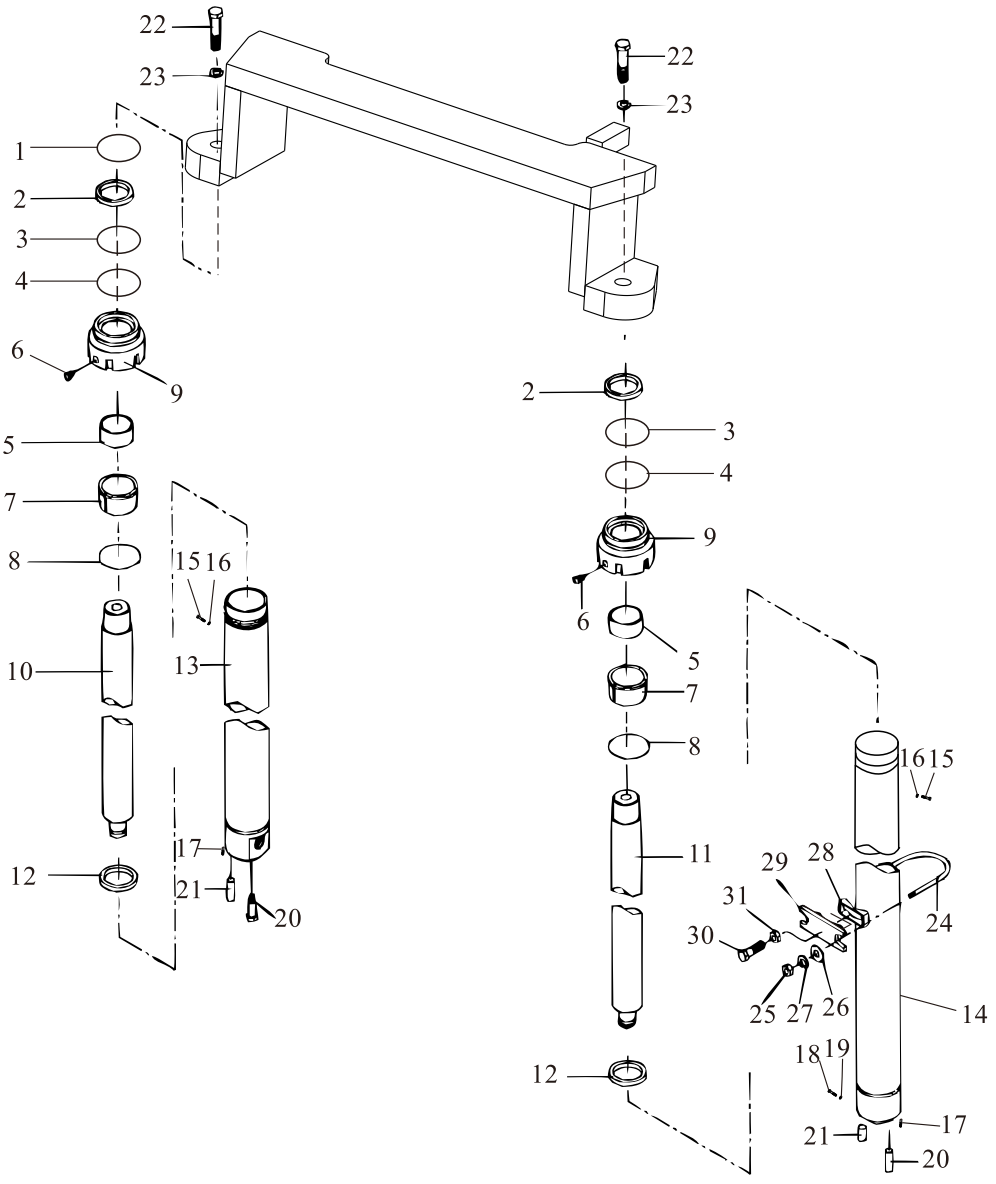


https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A4-10400	后起升油缸总成 Rear lift cylinder ass'y	1	
1	GB1235	O型密封圈22×2.4 O-ring	1	
2	A15A4-10401	防尘圈32×44×7/10 Dust ring	2	
3	A15A4-10402	挡圈32×42×2 Stopper	2	
4	A15A4-10403	轴用密封圈32×42×6 Ring	2	
5	A15A4-10404	钢背轴承32×36×30 Guide bushing	2	
6	A15A4-10405	螺塞 Plug	4	
7	GB/T3452.1	O型密封圈47.5×2.65 O-ring	2	
8	A15A4-10406	挡圈48×51.8×1.5 Stopper	2	
9	A15A4-10407	缸盖 Cap, lift cylinder	2	
10	A15A4-10408	右活塞杆 Piston rod R.H.	1	
11	A15A4-10409	左活塞杆 Piston rod L.H.	1	
12	A15A4-10410	支承环45×20×2 Backup ring	2	
13	A15A4-10411	右缸体 Cylinder R.H.	1	
14	A15A4-10412	左缸体 Cylinder L.H.	1	
15	GB/T73	螺钉M8×10 Screw	2	
16	A15A4-10302	尼龙垫φ6×3 Plug	2	
17	GB/T119.1	销D10×25 Pin	2	
18	A15A4-10414	阀芯 Spool	1	
19	A15A4-10415	弹簧 Spring	1	

https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

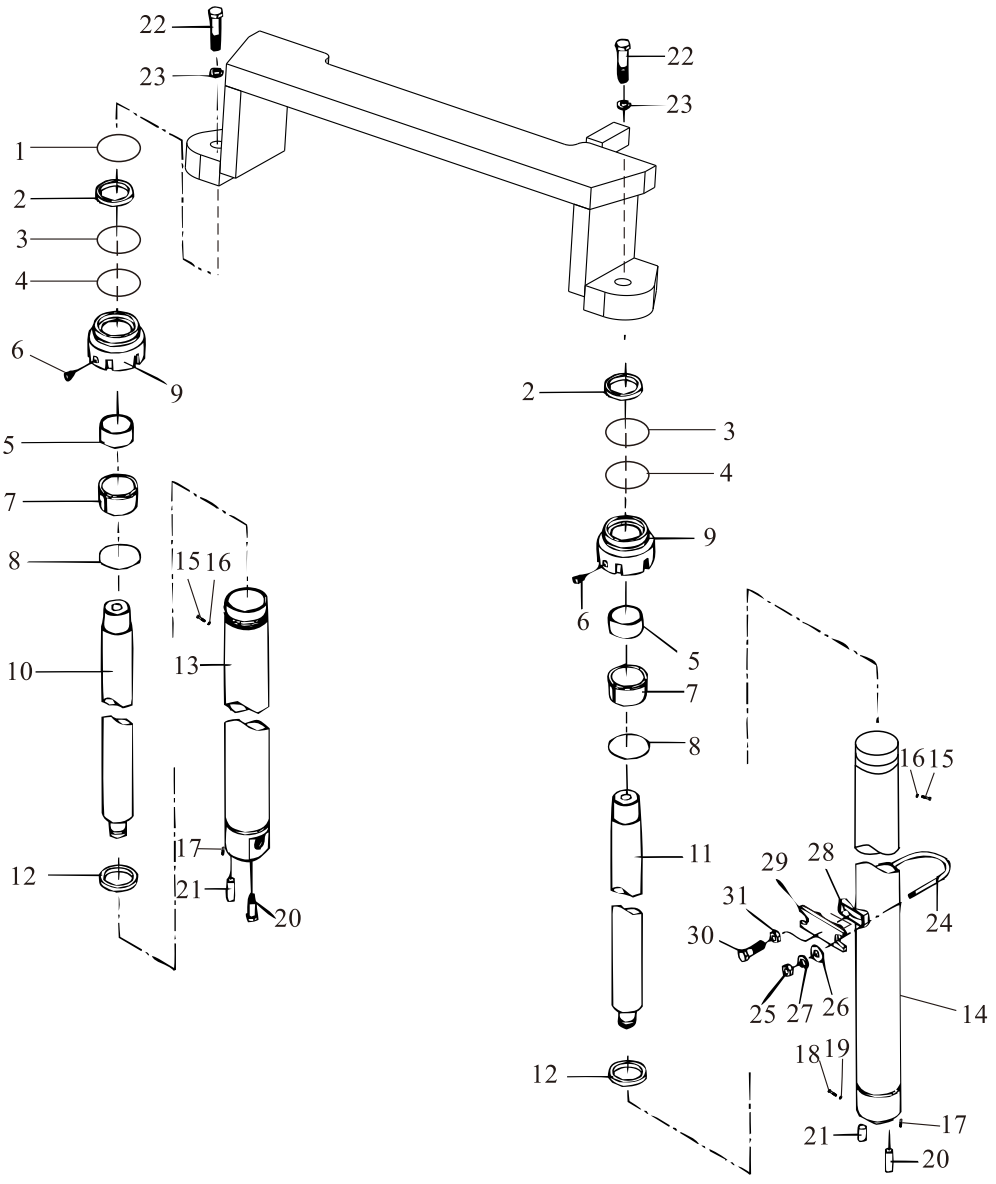


https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
20	M30A3-80001	台阶螺栓 Bolt	2	
21	GB/T119.1	销D10×26 Pin	2	
22	GB/T5783	螺栓 M16×40 Bolt	2	
23	GB/T93	弹垫16 Washer,lock	2	
24	M15A3-80001	U型螺栓 U-Bolt	2	
25	GB/T6171	螺母M10×1.25 Nut	4	
26	GB/T97.1	平垫10 Washer	4	
27	GB/T93	弹垫10 Washer,lock	4	
28	M30A3-80002	调整块 Spacer	2	
29	M30A3-80003	油缸支撑块 Support	2	
30	GB/T5786	螺栓M12×1.25×60 Bolt	2	
31	GB/T3098.2	螺母M12×1.25 Nut	2	

https://truckmanualshub.com/

后起升油缸(三节全自由)
Rear Lift Cylinder (Full Free 3-Stage Mast KZM)

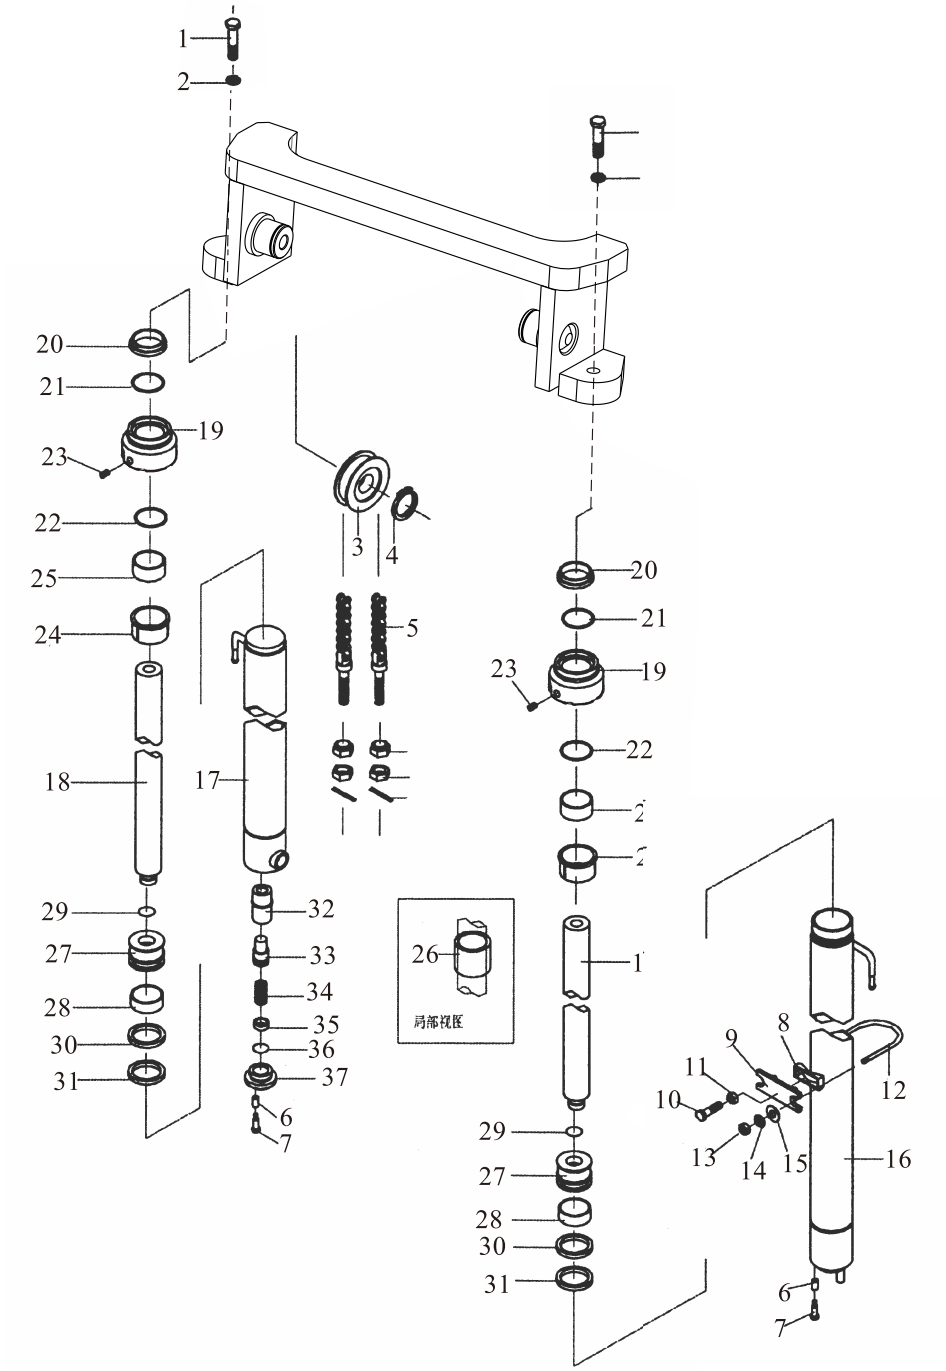


https://truckmanualshub.com/

后起升油缸(三节全自由)
Rear Lift Cylinder (Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A4-10600	后起升油缸总成 Rear lift cylinder ass'y	1	
1	GB/T5786	螺栓 M14×1.5×40 Bolt	2	
2	GB/T93	弹垫14 Washer,lock	2	
3	M15A3-80100	链轮 Sheave	2	
4	GB/T894.1	弹性挡圈40 Snap ring	2	
5	LH1223×N	链条总成 Chain ass'y	2	
6	GB/T119.1	销D10×26 Pin	2	
7	M30A3-80001	台阶螺栓 Bolt	2	
8	M30A3-80002	调整块 Spacer	2	
9	M30A3-80003	油缸支撑块 Support	2	
10	GB/T5786	螺栓M12×1.25×60 Bolt	2	
11	GB/T3098.2	螺母M12×1.25 Nut	2	
12	M15A3-80001	U型螺栓 U-Bolt	2	
13	GB/T6171	螺母M10×1.25 Nut	4	
14	GB/T97.1	平垫10 Washer	4	
15	GB/T93	弹垫10 Washer,lock	4	
16	A15A4-10601	左缸体 Cylinder L.H.	1	
17	A15A4-10602	右缸体 Cylinder R.H.	1	
18	A15A4-10603	活塞杆 Piston rod	2	
19	A15A4-10604	导向套 Guide,Sleeve	2	

https://truckmanualshub.com/

后起升油缸(三节全自由)
Rear Lift Cylinder (Full Free 3-Stage Mast KZM)

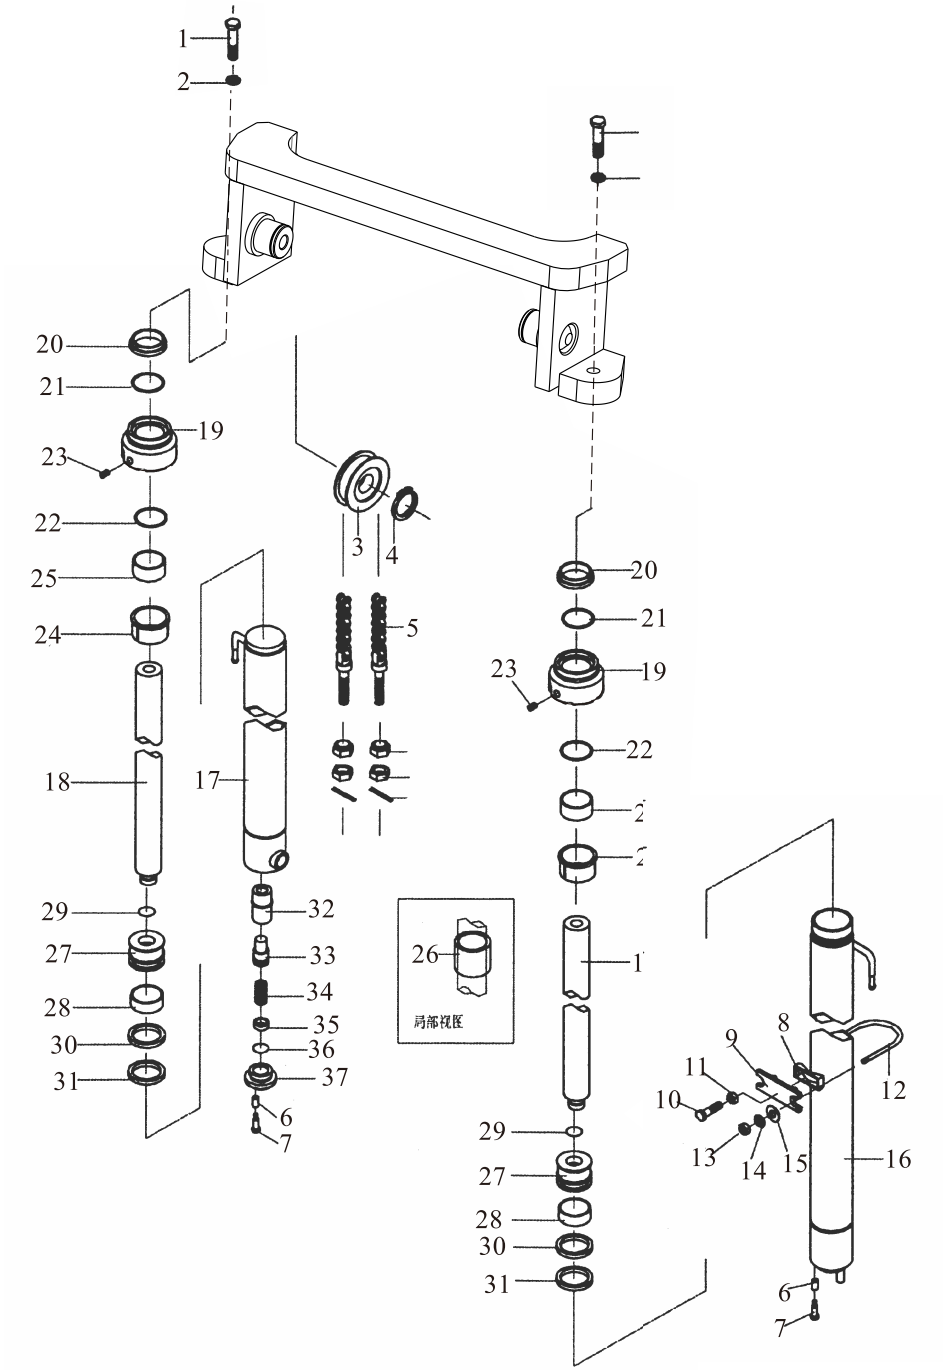


https://truckmanualshub.com/

后起升油缸(三节全自由)
Rear Lift Cylinder (Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
20	A15A4-10605	防尘圈 Dust ring	2	
21	A15A4-10606	轴用密封圈36×46×6 Ring	2	
22	GB/T1235	O型密封圈 O-ring	2	
23	A15A4-10607	塞子 Plug	2	
24	A15A4-10608	衬套 Sleeve	2	
25	A15A4-10609	钢背轴承3630 Guide bushing	2	
26	A15A4-10610	调整套 Spacer	2	
27	A15A4-10611	活塞 Piston	2	
28	A15A4-10612	支承环 Wearing	2	
29	A15A4-10613	钢丝挡圈 Snap ring	2	
30	A15A4-10614	挡片 Ring, back up	2	
31	A15A4-10615	U型密封圈 U-ring	2	
32	A15A4-10616	阀套 Sleeve	1	
33	A15A4-10617	阀芯 Spool	1	
34	A15A4-10618	弹簧 Spring	1	
35	A15A4-10619	弹簧座 Seat, spring	1	
36	GB/T1235	O型密封圈 O-ring	1	
37	A15A4-10620	底座 Seat, valve	1	

https://truckmanualshub.com/

倾斜油缸
Tilt cylinder

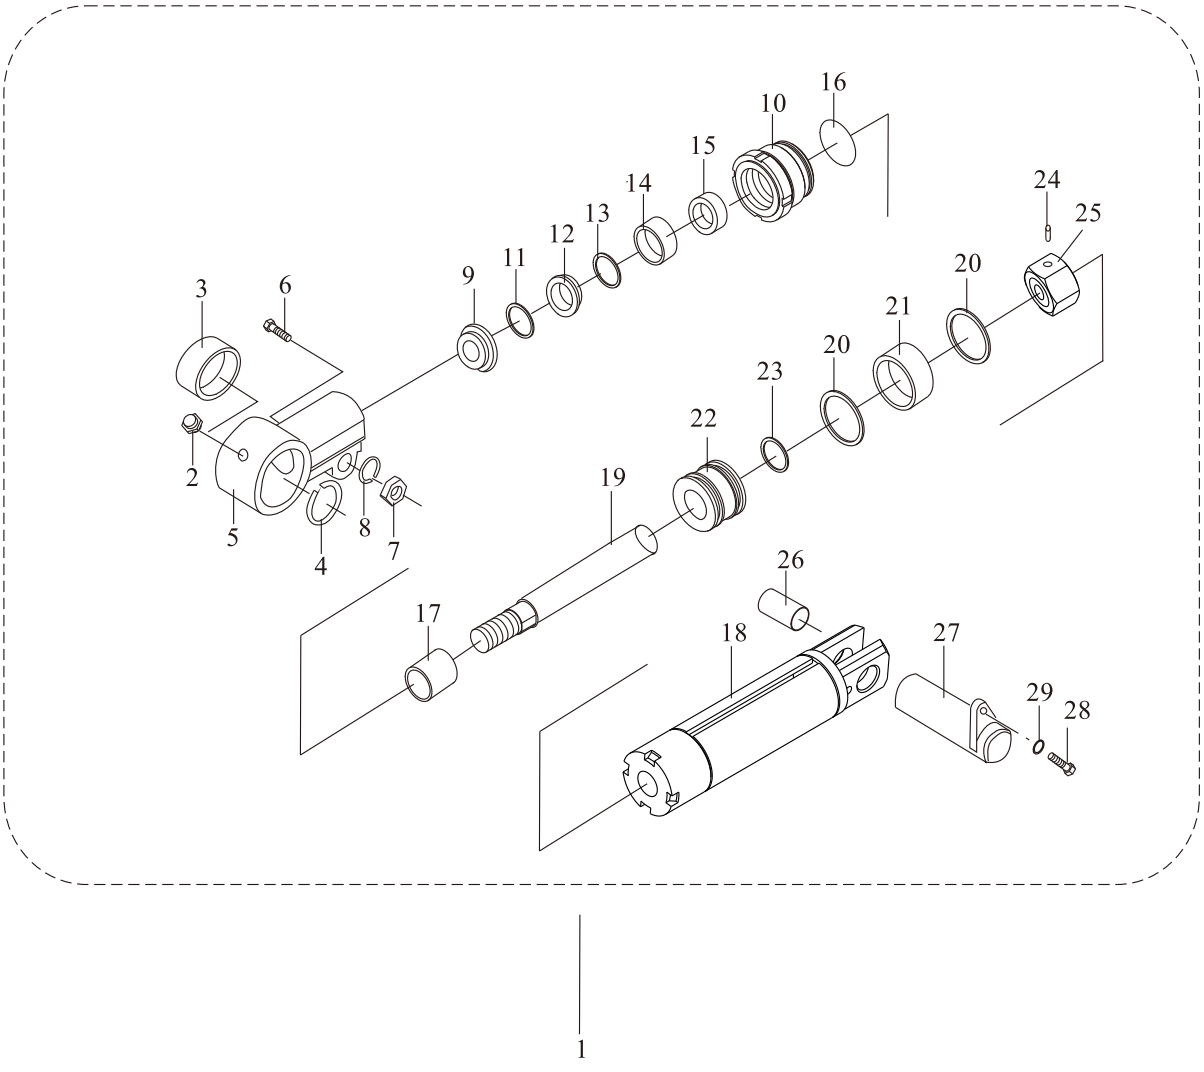


https://truckmanualshub.com/

倾斜油缸
Tilt cylinder

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15C4-10200	倾斜油缸总成 Tilt cylinder assy	2	
2	GB/T1152	油咀M10×1 Nipple grease	2	
3	GB/T304.5	关节轴承GE30ES Bushing	2	
4	GB/T893.1	挡圈47 Ring,snap	2	
5	A15B4-10201	耳环 Ear ring	2	
6	GB/T5786	六角螺栓M14×1.5×55 Bolt	2	
7	GB/T6071	六角螺母M14×1.5 Nut	2	
8	GB/T93	弹簧垫圈14 Washer,lock	2	
9	A15B4-10204	防尘圈30×47×8×10 Seal,dust	2	
10	A15B4-10205	缸盖 Cap, lift cylinder	2	
11	GB/T893.1	挡圈47 Ring,snap	2	
12	A15B4-10206	挡片 Ring, back up	2	
13	A15B4-10207	挡圈30×43×3 Ring,snap	2	
14	A15B4-10208	轴用密封圈30×43×10 Ring	2	
15	A15B4-10209	挡圈57.6×63×1.5 Ring,snap	2	
16	GB/T3452.1	O型密封圈56×3.55 O-ring	2	
17	A15B4-10210	钢背轴承3025 Guide bushing	2	
18	A15C4-10201	缸筒总成 Tube,cylinder ass'y	2	
19	A15C4-10202	活塞体 piston body	2	
20	A15B4-10213	轴用密封圈63×53×6 Ring	4	
21	A15B4-10214	支承环63×14.7×2.5 Wearing	2	

https://truckmanualshub.com/

倾斜油缸
Tilt cylinder

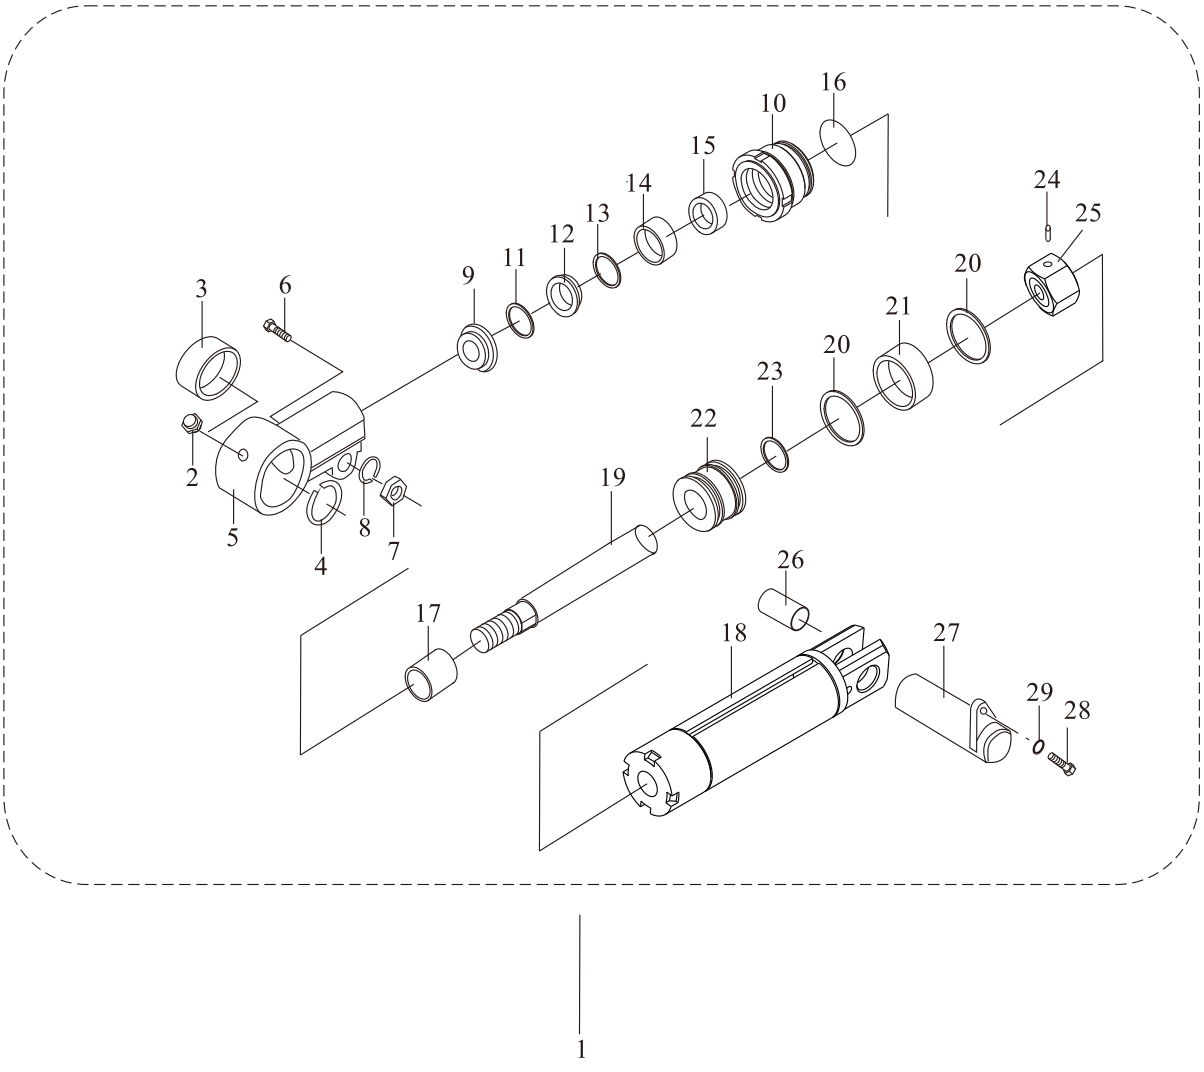

https://truckmanualshub.com/

倾斜油缸
Tilt cylinder


序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
22	A15B4-10215	活塞 Piston	2	
23	GB/T1235	O型密封圈24×2.4 O-ring	2	
24	GB/T91	开口销5×50 Pin	2	
25	GB/T6181	开槽螺母M24×2 Nut	2	
26	A15C3-00001	钢背轴承 Guide bushing	2	
27	M15C3-00100	倾斜油缸销轴 Pin	2	
28	GB/T5786	螺栓M10×1.25×20 Bolt	2	
29	GB/T93	弹垫10 Washer,lock	2	


https://truckmanualshub.com/


八、标牌
SCUTCHEON


https://truckmanualshub.com/

标牌
Decal

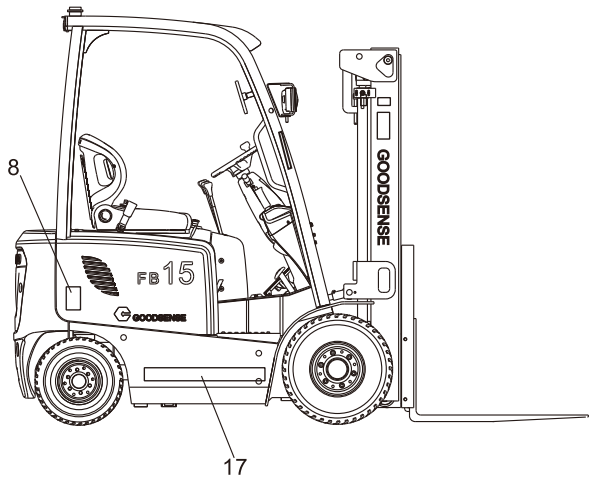

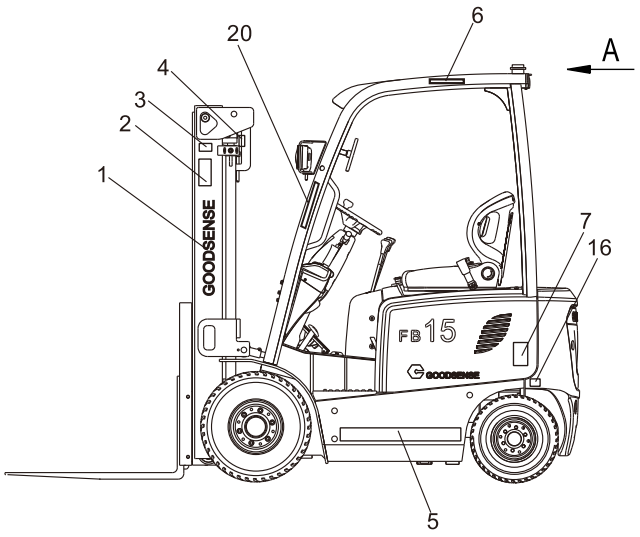

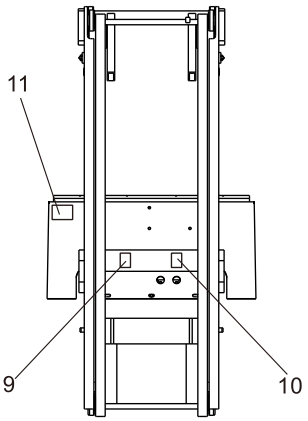

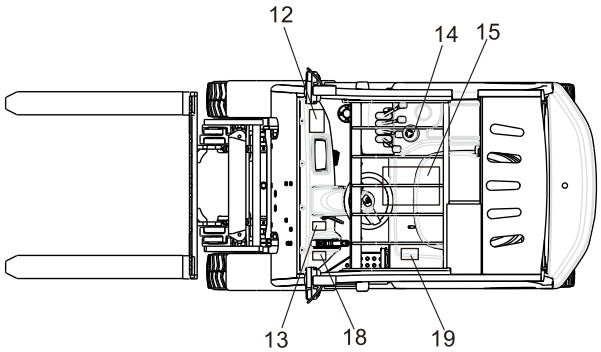


https://truckmanualshub.com/

标牌
Decal

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GCI0170	“吉鑫祥”字样 Decal	2	国内用homeland
-	GCI0040	“GOODSENSE”（中） Decal	2	国外用go abroad
2	GCI0001	安全标志标牌 Decal, safety	2	国内用homeland
-	GCIY053	安全标志标牌 Decal, safety	2	国外用go abroad
3	GCI0022	CE标牌 Decal	2	国外用go abroad
4	GCI0014	起吊标牌 Decal,sling	2	国内用homeland
-	GCIY066	起吊标牌 Decal,sling	2	国外用go abroad
5	GCIY281	GOODSENSE车身标牌(左) Decal	1	
6	GCI0122	警告标识 Warning logo	1	国内用homeland
-	GCIY124	警告标识 Warning logo	1	国外用go abroad
7	GCI0005	启动前检查要领 Decal,caution	1	国内用homeland
-	GCIY057	启动前检查要领 Decal,caution	1	国外用go abroad
8	GCI0013	轮胎安全标牌 Decal,tyre safety	1	国内用homeland
-	GCIY065	轮胎安全标牌 Decal,tyre safety	1	国外用go abroad
9	GCI0016	禁止进入门架后空间Decal, padlod mast space	1	国内用homeland
-	GCIY068	禁止进入门架后空间Decal, padlod mast space	1	国外用go abroad
10	GCI0017	注意伤手 Decal,notice thumb hand	1	国内用homeland
-	GCIY069	注意伤手 Decal,notice thumb hand	1	国外用go abroad
11	GCI0714	蓄电池平衡重式叉车铭牌 Name plate	1	国内用homeland
-	GCIY715	蓄电池平衡重式叉车铭牌 Name plate	1	国外用go abroad
12	GCI0720	负荷曲线标牌1t Decal,Iubrication chart	1	1t国内用homeland
-	GCIY721	负荷曲线标牌1t Decal,Iubrication chart	1	1t国外用go abroad
-	GCI0722	负荷曲线标牌1.5t Decal,Iubrication chart	1	1.5t国内用homeland
-	GCIY723	负荷曲线标牌1.5t Decal,Iubrication chart	1	1.5t国外用go abroad

https://truckmanualshub.com/

标牌
Decal

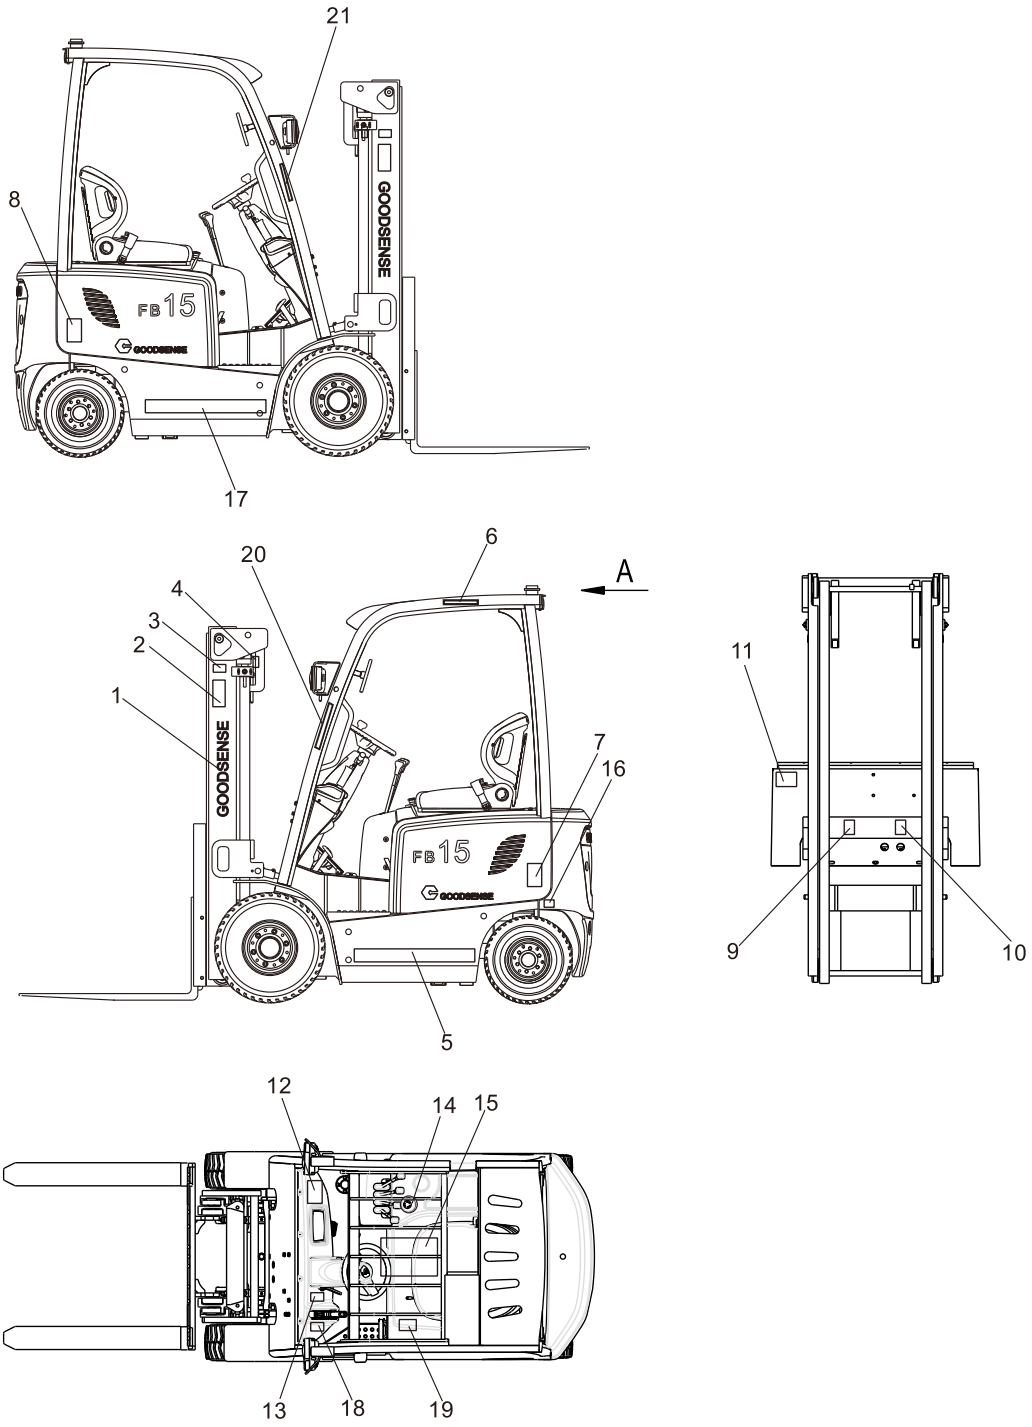

https://truckmanualshub.com/

标牌
Decal

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
-	GCI0724	负荷曲线标牌1.8t Decal,Iubrication chart	1	1.8t国内用homeland
-	GCIY725	负荷曲线标牌1.8t Decal,Iubrication chart	1	1.8t国外用go abroad
13	GCI0412	手刹标识 Decal	1	国内用homeland
-	GCIY411	手刹标识 Decal	1	国外用go abroad
14	GCIY279	紧急停车开关标识 Decal	1	
15	GCI0003	润滑系统图标牌 Decal,Iubrication chart	1	国内用homeland
-	GCIY055	润滑系统图标牌 Decal,Iubrication chart	1	国外用go abroad
16	GCIY408	配重起吊标识 Weight lifting logo	2	
17	GCIY281	GOODSENSE车身标牌(右) Decal	1	
18	GCI0407	下车拉紧手刹Decal,Parking brake adjustment	1	国内用homeland
-	GCIY275	下车拉紧手刹Decal,Parking brake adjustment	1	国外用go abroad
19	GCI0409	禁止载人标牌 Ban manned sign	1	国内用homeland
-	GCIY410	禁止载人标牌 Ban manned sign	1	国外用go abroad
20	GCIY273	阅读说明书警告标志 Read instructions warning	1	
21	GCIY272	系安全带警告标识 Fasten seat belts warning logo	1	

https://truckmanualshub.com/

浙江吉鑫祥叉车制造有限公司
ZHEJIANG GOODSENSE FORKLIFT CO.,LTD
地址:台州经济开发区滨海工业区海昌路1188号
Add:Haichang Road 1188#, Binhai Industrial Zone
Taizhou, Zhejiang, China
电话(Tel):0576-82698896 0086-576-82698897
传真(Fax):0576-82698899 0086-576-82707339
邮箱(E-mail):sales@goodsenseforklift.com
网址Http://www.goodsenseforklift.com
服务热线(Free Service Hot line):400-8802020

NO:A026

2016. 4