https://truckmanualshub.com/

TL2A354-001K

https://truckmanualshub.com/


CONTENTS

◆ 4L22BT-1H3 ENGINE ASSY..... 1
◆ TE354.11 AIR FILTER SYSTEM ASSEMBLY..... 54
◆ TE354.13 COOLING SYSTEM ASSEMBLY..... 57
◆ TE354.201 HAND THROTTLE, FLAMEOUT CABLE ASSEMBLY..... 60
◆ TE354.202 FOOT THROTTLE ASSEMBLY..... 63
◆ TE300.211D CLUTCH SUBASSEMBLY..... 66
◆ TE354.212 CLUTCH CONTROL ASSEMBLY..... 69
◆ TE350.22C EXHAUST SYSTEM ASSEMBLY..... 73
◆ TE254.314G REAR SUPPORTING SEAT ASSEMBLY..... 76
◆ TE254.311G FRONT DRIVING AXLE ASSEMBLY..... 79
◆ TL02312010000K BRACKET ASSEMBLY..... 110
◆ TE254.313G FRONT SUPPORT SEAT ASSEMBLY..... 113
◆ TE354.32F FRONT DRIVING WHEEL ASSEMBLY..... 116
◆ TE354.34F REAR DRIVING WHEEL ASSEMBLY..... 119
◆ TE300.35 TOWING MECHANISM INSTALLATION ASSEMBLY..... 122
◆ TE354.361 SHUTTLE SHIFT ASSEMBLY..... 125
◆ TE250.362M SHUTTLE SHIFT CONTROL MECHANISM ASSEMBLY..... 136
◆ TE354.371 TRANSMISSION CASE ASSEMBLY..... 140
◆ TE354.372A REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE..... 150
◆ TE354.373 TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY..... 158
◆ TE300.391 LEFT HALF SHAFT ASSEMBLY..... 169

◆ TE300.392 RIGHT HALF SHAFT ASSEMBLY..... 172
◆ TE250.401A STEERING WHEEL ASSEMBLY..... 175
◆ TE354.402 STEERING PIPE ASSEMBLY..... 178
◆ TE250.403F STEERING COLUMN MOUNTING ASSEMBLY..... 184
◆ TE300.411A PTO SHAFT ASSEMBLY..... 187
◆ TE354.412 PTO GEAR ASSEMBLY..... 190
◆ TE354.413 PTO CONTROL MECHANISM ASSEMBLY..... 194
◆ TE254.421B TRANSFER CASE ASSEMBLY..... 198
◆ TE354.422 TRANSFER CASE TRANSMISSION SHAFT ASSEMBLY..... 202
◆ TE254.423C TRANSFER CASE CONTROL ASSEMBLY..... 205
◆ TE354.431A BRAKE ASSEMBLY..... 209
◆ TE354.433B BRAKE CONTROL ASSEMBLY..... 212
◆ TE300.44 SEAT INSTALLATION ASSEMBLY..... 222
◆ TE250.455A DRIVER CAB INSTALLATION ASSEMBLY..... 225
◆ TE254.457 FRONT CONNECTING ASSEMBLY..... 231
◆ TE354.458 REAR CONNECTING ASSEMBLY..... 234
◆ TE250.471C BONNET INSTALLATION ASSEMBLY..... 237
◆ TE250.472E FLOOR INSTALLATION ASSEMBLY..... 240
◆ TE250.474B DASHBOARD INSTALLATION ASSEMBLY..... 247
◆ TE250.476D BONNET PNEUMATIC SPRING INSTALLATION ASSEMBLY..... 250
◆ TE250.477 BONNET LOCK INSTALLATION ASSEMBLY..... 253
◆ TE354.481 ENGINE HARNESS INSTALLATION ASSEMBLY..... 256
◆ TE354.482 BODY HARNESS INSTALLATION ASSEMBLY..... 259
◆ TE250.483 FRONT LAMP HARNESS INSTALLATION ASSEMBLY..... 262

◆ TE250.484M REAR LAMP HARNESS INSTALLATION ASSEMBLY..... 265
◆ TE300.485C BATTERY INSTALLATION ASSEMBLY..... 268
◆ TE250.487 COMBINED INSTRUMENT ASSEMBLY..... 271
◆ FT300.49.001 TOOL BOX ASSEMBLY..... 274
◆ TE354.50 OIL TANK INSTALLATION ASSEMBLY..... 277
◆ TE354.55 LIFTER INSTALLATION ASSEMBLY..... 281
◆ TE250.556C HYDRAULIC AUXILIARY OIL TANK ASSEMBLY..... 293
◆ TE354.56 SUSPENSION ASSEMBLY..... 296
◆ TE354.57 DISTRIBUTOR AND CONTROL MECHANISM ASSEMBLY..... 304
◆ TE354.581 OIL PUMP/PIPE/FILTER ASSEMBLY..... 311
◆ TE354.582 MULTI-WAY VALVE OIL PIPE ASSEMBLY..... 315
◆ FT250.62.001 SAFETY BELT INSTALLATION ASSEMBLY..... 322
◆ TE254.742 FRONT BALLAST ASSEMBLY..... 325
◆ TE254.801 BRAKE VALVE ASSEMBLY..... 328
◆ TE254.802 AIR CYLINDER ASSEMBLY..... 331
◆ TE354.803 AIR CONVEYING PIPELINE ASSEMBLY..... 334
◆ TE250.81 HEATER INSTALLATION ASSEMBLY..... 337
◆ FT250.91B.001 REAR BALLAST ASSEMBLY..... 340

4L22BT-1H3 ENGINE ASSY-1

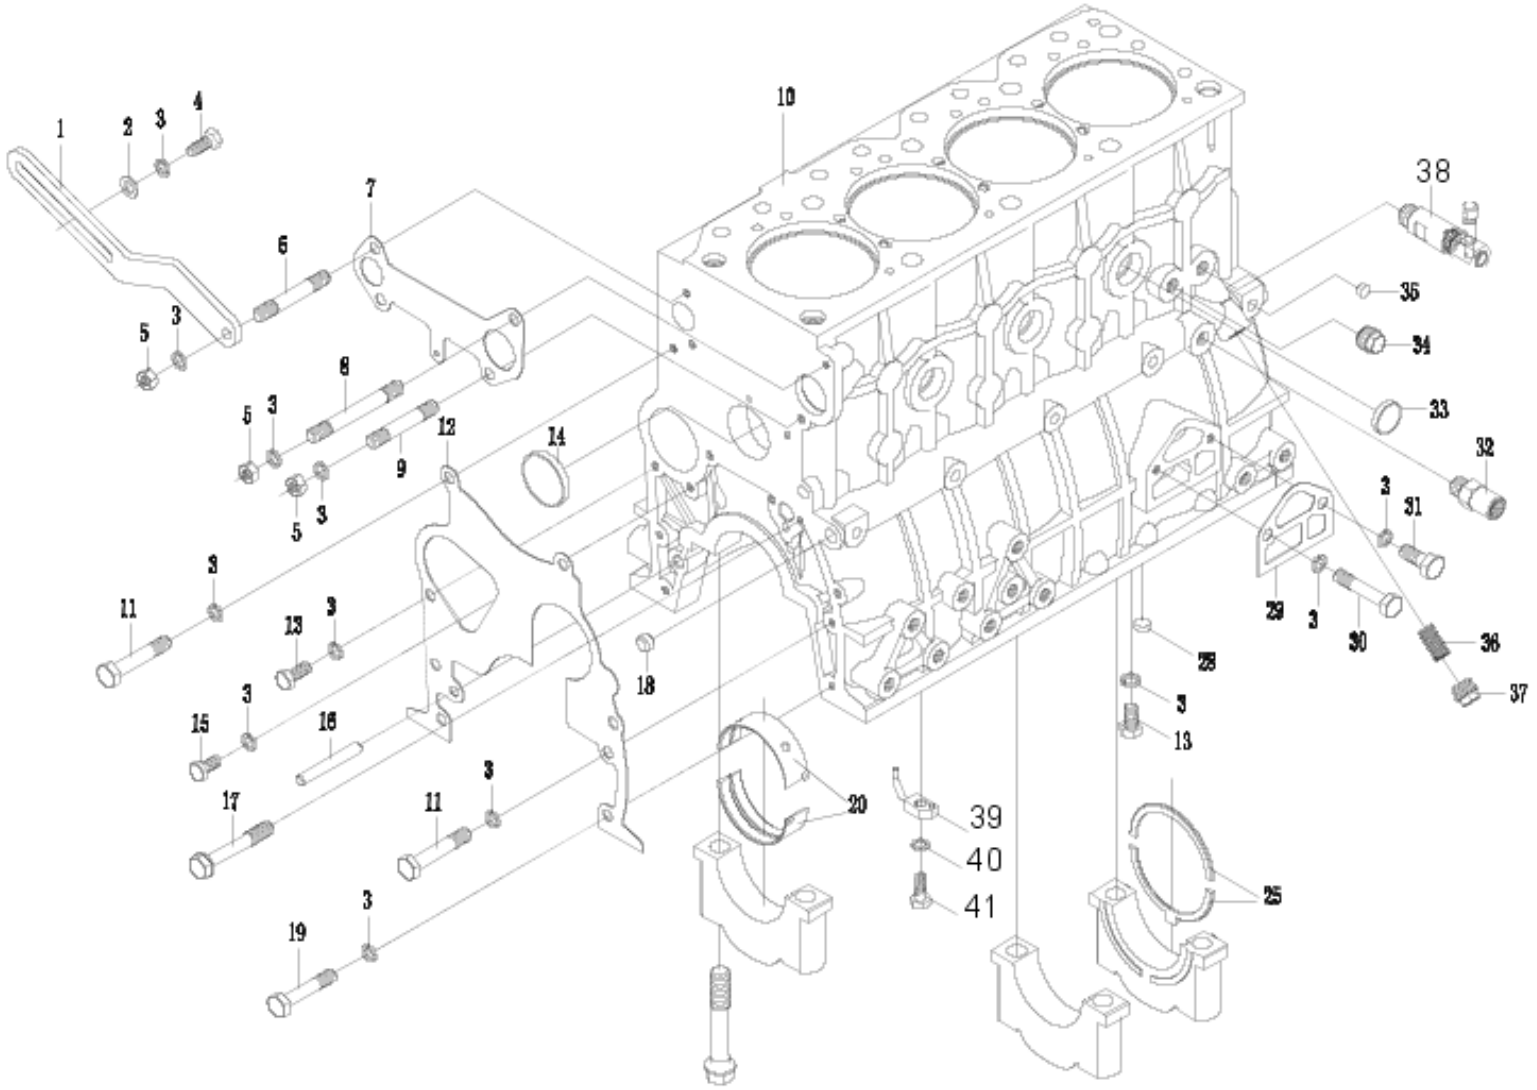

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-1

No.	Part No.	Description	Version	QTY.	Remark
0	4L22BT-1H3	ENGINE ASSY		1	
1	4L22-01029	GENERATOR ADJUSTABLE SPPORT		1	
2	GBT97.1-8	WASHER		1	
3	GBT93-8	WASHER		35	
4	GBT5783-M8X35	BOLT		1	
5	GBT6170-M8	NUT		4	
6	GBT898-AM8X65	STUD		1	
7	4L22BT-01006	WATER PUMP REAR COVER GASKET		1	
8	GBT898-AM8X90-8.8	STUD		1	
9	GBT898-AM8X60	STUD		2	
10	4L22BT-01110	CYLINDER BLOCK		1	
11	GBT5782-M8X55-8.8	STUD		5	
12	L375-01007	GEAR CHAMBER GASKET		1	
13	GBT5783-M8X20	BOLT		2	
14	D495QB-03105	BLIND PLUG Φ42		2	
15	GBT5783-M8X16-8.8(2)	BOLT		2	
16	GBT119-B8X60	PIN		1	
17	4L22BT-01021	BOLT		2	
18	L375-01104	MAIN OIL LINE PLUG		1	
19	GBT5782-M8X55-8.8(2)	STUD		2	
20	4L22-01015/01016	MAIN BEARING		5	
25	4L22-01007/01008	CRANKSHAFT THRUST PIECE		2	
28	D495QB-03109	BOWL SHIM Φ12		1	


https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
29	L375-01027	OIL FILTER GASKET		1	
30	GBT5782-M8X50-8.8	BOLT		1	
31	GBT5783-M8X25	BOLT		1	
32	L375-01035	OIL PRESSURE GAUGE JOINT		1	
33	D495QB-01024	BOWL SHIM Φ32		3	
34	D495QB-06111-1	SCREW PLUG		1	
35	L375-01105-1	TAPER PLUG		5	
36	4L22-01800	OIL PRESSURE ADJUSTING VALVE		1	
37	4L22-01026	SCREW PLUG		1	
38	4L22BT-01600	DRAIN VALVE BLOCK		1	
39	4L22-01700	NOZZLE		4	
40	4L22-01024	WASHER		4	
41	4L22-01025	BOLT FOR NOZZLE		4	

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-2

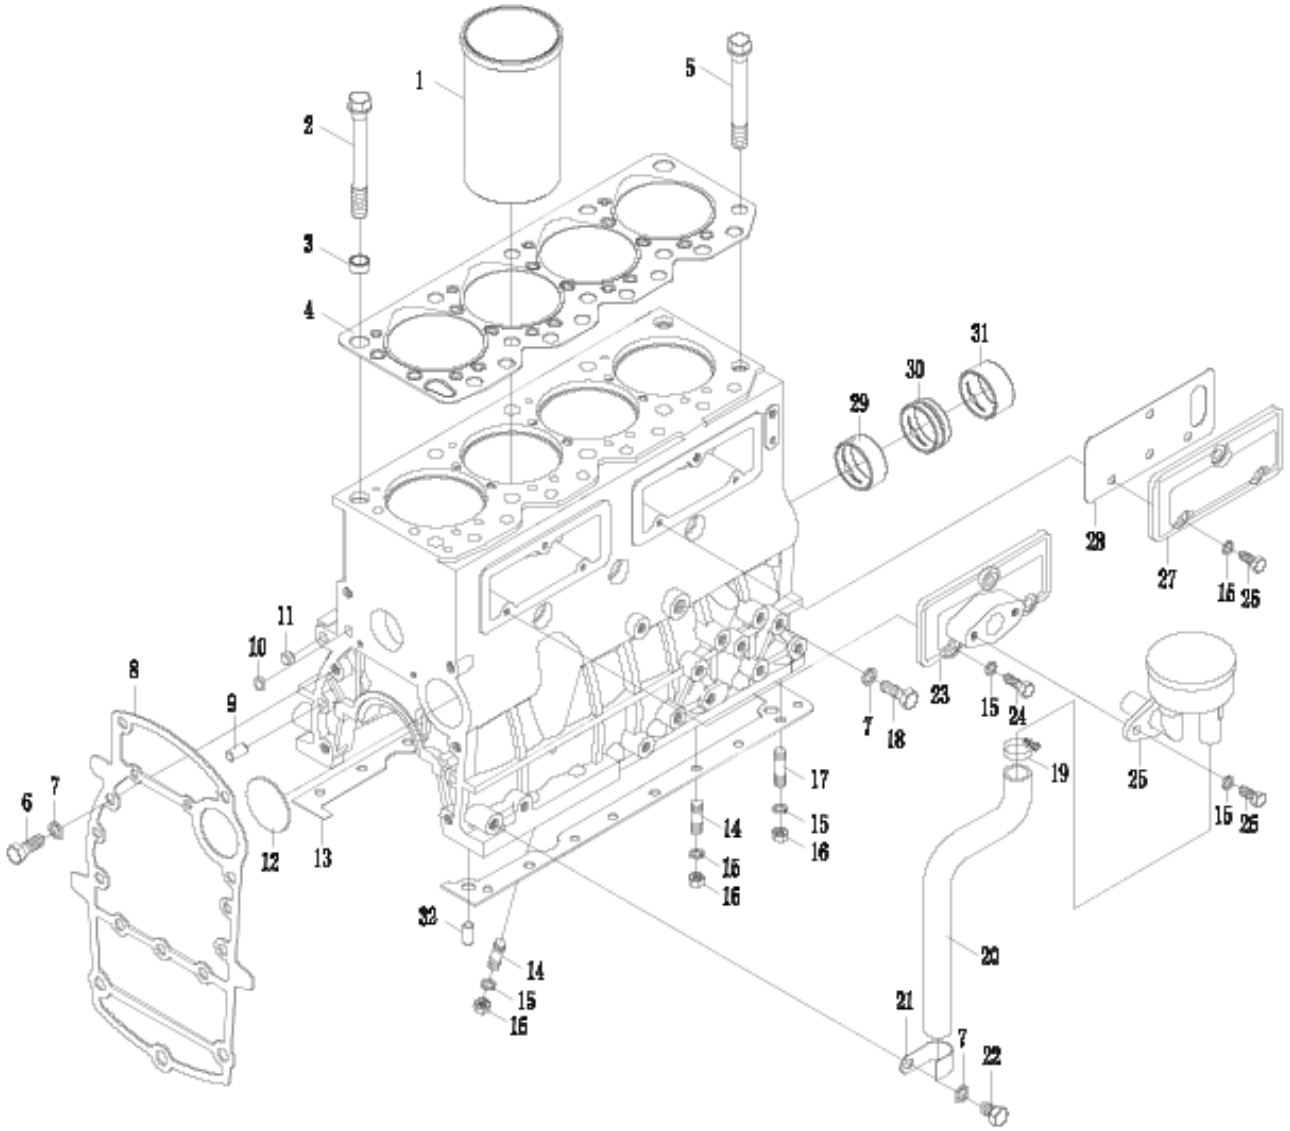

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-2

No.	Part No.	Description	Version	QTY.	Remark
1	4L22-01003	CYLINDER BUSH		4	
2	4L22-01005	CYLINDER COVER BOLT		8	
3	L375-01103	LOCATING SLEEVE		2	
4	4L22-01002-1	CYLINDER COVER GASKET		1	
5	4L22-01005(3)	CYLINDER COVER BOLT		2	
6	GBT5783-M10X30-8.8	BOLT		11	
7	GBT93-10	WASHER		18	
8	LL385BT-01018	FLYWHEEL HOUSING GASKET		1	
9	GBT119-B10X20	PIN		2	
10	L375-01115	PLUG PIECE		2	
11	L375-01104(2)	MAIN OIL LINE PLUG		1	
12	L375-01102	PLUG PIECE		1	
13	4122BT-01017	OIL SUMP GASKET		1	
14	GBT898-AM8X22	STUD		20	
15	GBT93-8(2)	WASHER		30	
16	GBT6170-M8(2)	NUT		22	
17	GBT898-AM8X25	STUD		2	
18	GBT5783-M10X25	BOLT		6	
19	ZBT32005.1-φ27.5	CIRCLE CLAMP		1	
20	LL380-01203-2	BREATHER PIPE		1	
21	4L22BT-01206	FIXING CLAMP		1	
22	GBT5783-M10X25(2)	BOLT		1	
23	4L22-01013	SIDE COVER-2		1	


https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
24	GBT5783-M8X20(2)	BOLT		3	
25	4L22B-01200	BREATHER HOUSING		1	
26	GBT5783-M8X15	BOLT		3	
27	LL480-01012	SIDE COVER-1		1	
28	LL480-01014	SIDE COVER SPACER		2	
29	4L22-01117	REAR BUSH OF CAMSHAFT		1	
30	4L22-01116	MIDDLE BUSH OF CAMSHAFT		1	
31	4L22-01115	FRONT BUSH OR CAMSHAFT		1	
32	GBT119-C12X16	PIN		2	

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-3

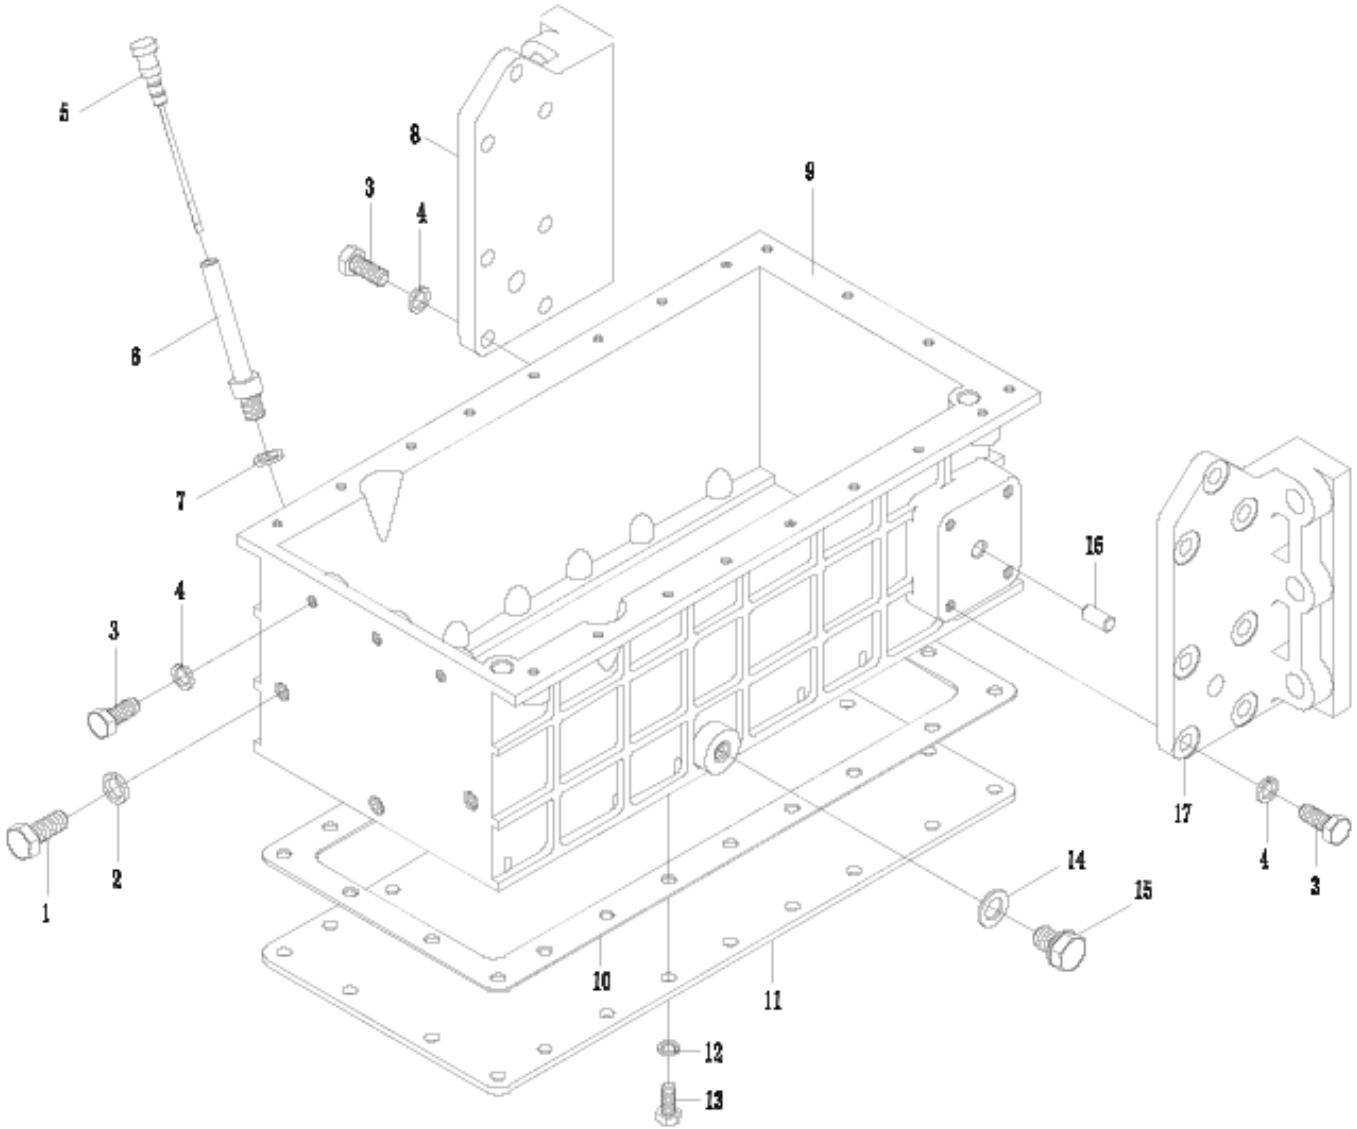


https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-3

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M12X25-8.8	STUD		3	
2	GBT93-12	WASHER		3	
3	GBT5783-M10X25(3)	STUD		17	
4	GBT93-10(2)	WASHER		17	
5	LL385BT-01300	OIL DIPSTICK PARTS		1	
6	LL385BT-01320	OIL DIPSTICK PIPE WELDMENT		1	
7	195-13007	GASKET		1	
8	4L22BT-01016	LEFT BRACKET		1	
9	4L22BT-015101-4	OIL SUMP		1	
10	4L22BT-015111	OIL SUMP COVER GASKET		1	
11	4L22BT-015104	OIL SUMP COVER		1	
12	GBT93-8(3)	WASHER		22	
13	GBT5783-M8X18	STUD		22	
14	LL380-01503	A TYPE COMBINED WASHER		1	
15	LL380-01501	OIL DISCHARGING SCREW PLUG		1	
16	GBT119-B10X20(2)	PIN		2	
17	4L22BT-01019	LEFT BRACKET		1	

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-4

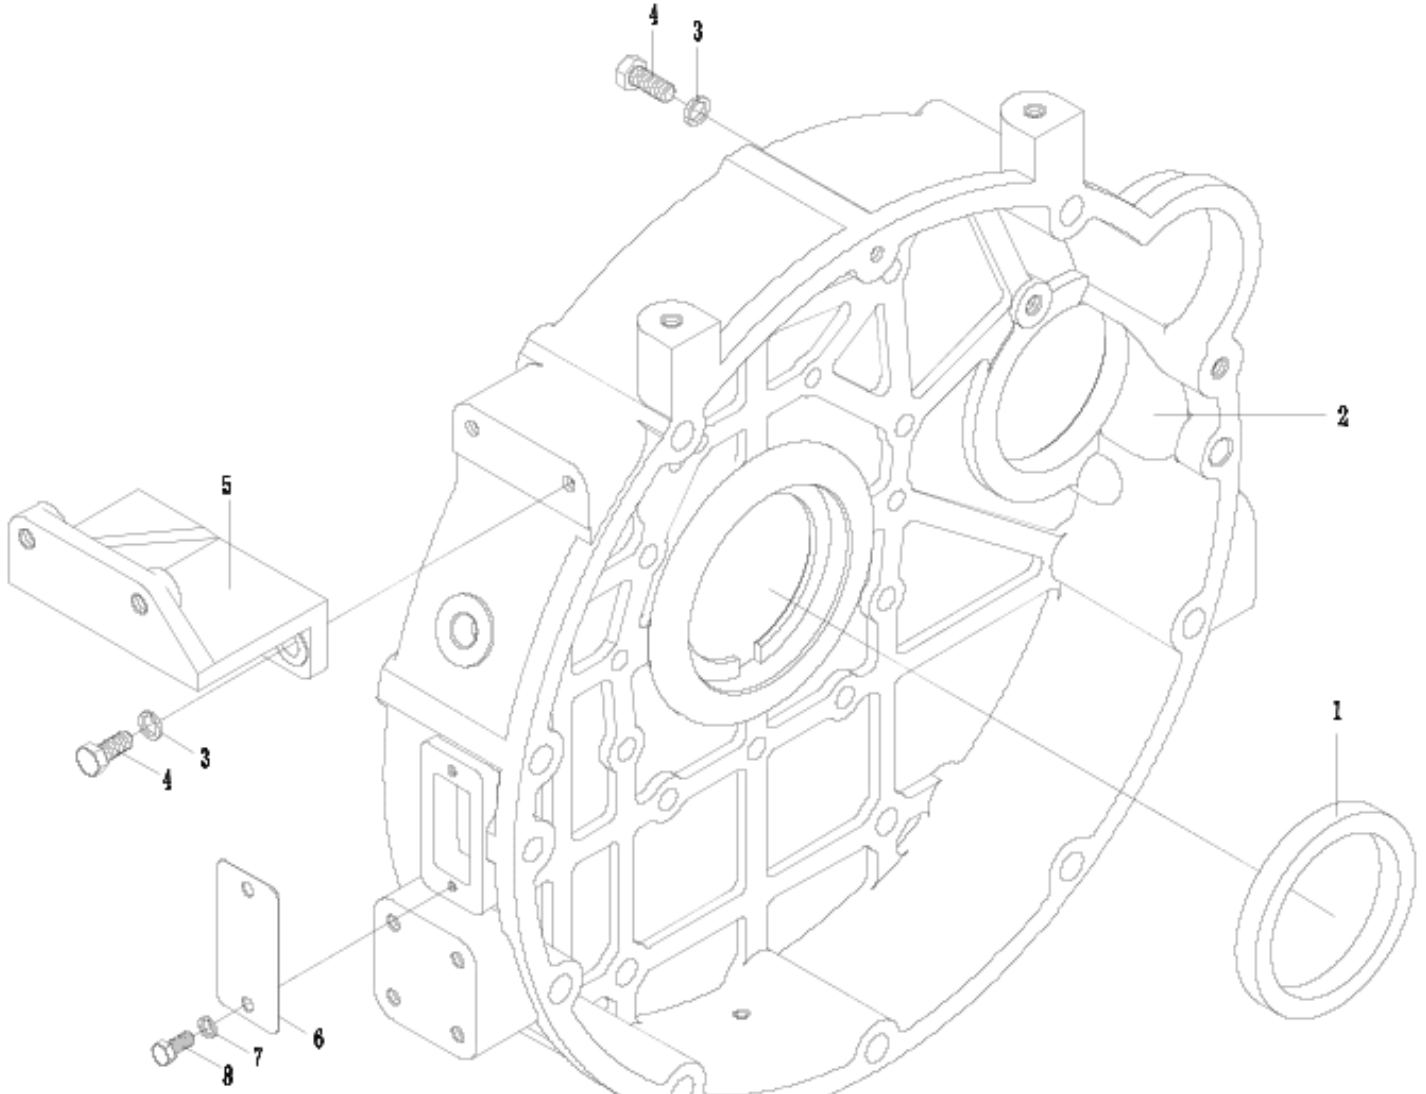


https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-4

No.	Part No.	Description	Version	QTY.	Remark
1	GBT9877-DL80X100X12FJ	OIL SEAL		1	
2	LL385BT-01010	FLYWHEEL HOUSING		1	
3	GBT93-10(3)	WASHER		2	
4	GBT5783-M10X30-8.8(2)	BOLT		2	
5	4L22BT-01014	OIL FILTER BRACKET		1	
6	LL480-01025	COVER PLATE		1	
7	GBT93-8(4)	WASHER		2	
8	GBT5783-M8X18(2)	BOLT		2	

4L22BT-1H3 ENGINE ASSY-5

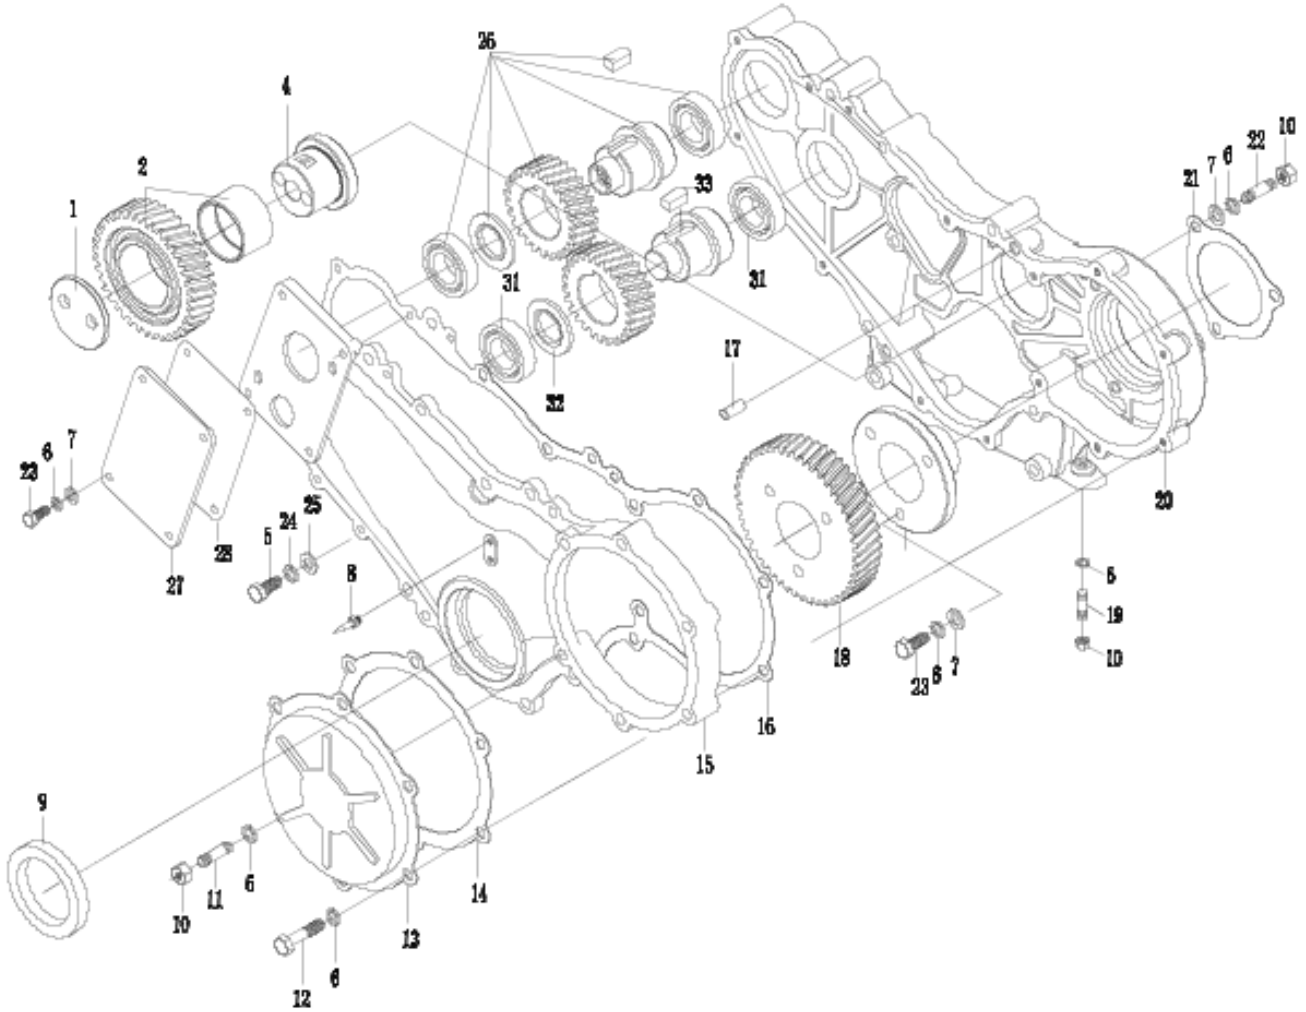

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-5

No.	Part No.	Description	Version	QTY.	Remark
1	4L22BT-01020	IDLE GEAR PRESSURE PLATE		1	
2	4L22BT-01200	IDLE GEAR BUSH WELDMENT		1	
4	4122BT-01015	TIMING IDLE GEAR SHAFT		1	
5	GBT5783-M10X20-8.8	BOLT		10	
6	GBT93-8(5)	WASHER		20	
7	GBT97.1-8(2)	WASHER		17	
8	L375-01034	UPPER DEATH POINT FINGER		1	
9	GBT9877-DR55X75X12FJ	OIL SEAL		1	
10	GBT6170-M8(3)	NUT		5	
11	GBT898-AM8X40	STUD		1	
12	GBT5782-M8X40	BOLT		5	
13	4L22BT-01025	GEAR CASE FRONT COVER		1	
14	4L22BT-01030	GEAR CASE FRONT COVER GASKET		1	
15	4L22BT-01008	TIMING GEAR CASE COVER		1	
16	4L22BT-01009	TIMING GEAR COVER GASKET		1	
17	GBT119-B8X18	PIN		1	
18	4L22BT-01011	OIL INJECTION PUMP TIMING GEAR		1	
19	GBT898-AM8X16	STUD		4	
20	4L22BT-01007	TIMING CASE		1	
21	L375-01010	OIL INJECTION PUMP GASKET		1	
22	GBT898-AM8X30-8.8	STUD		3	
23	GBT5783-M8X20(3)	BOLT		7	
24	GBT93-10(4)	WASHER		10	


https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-5 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
25	GBT97.1-10	WASHER		10	
26	4L22BT-01700	HYDRAULIC TRANSMISSION PARTS		1	
27	KM385T-01040	HYDRAULIC PUMP COVER		1	
28	KM385T-01039-1	HYDRAULIC PUMP WASHER		1	
31	GBT297-6205	DEEP GROOVE BALL BEARING		3	
32	KM385T-01045	BEARING RETAINER RING		2	
33	GBT1096-C8X20	FLAT KEY		2	

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-6

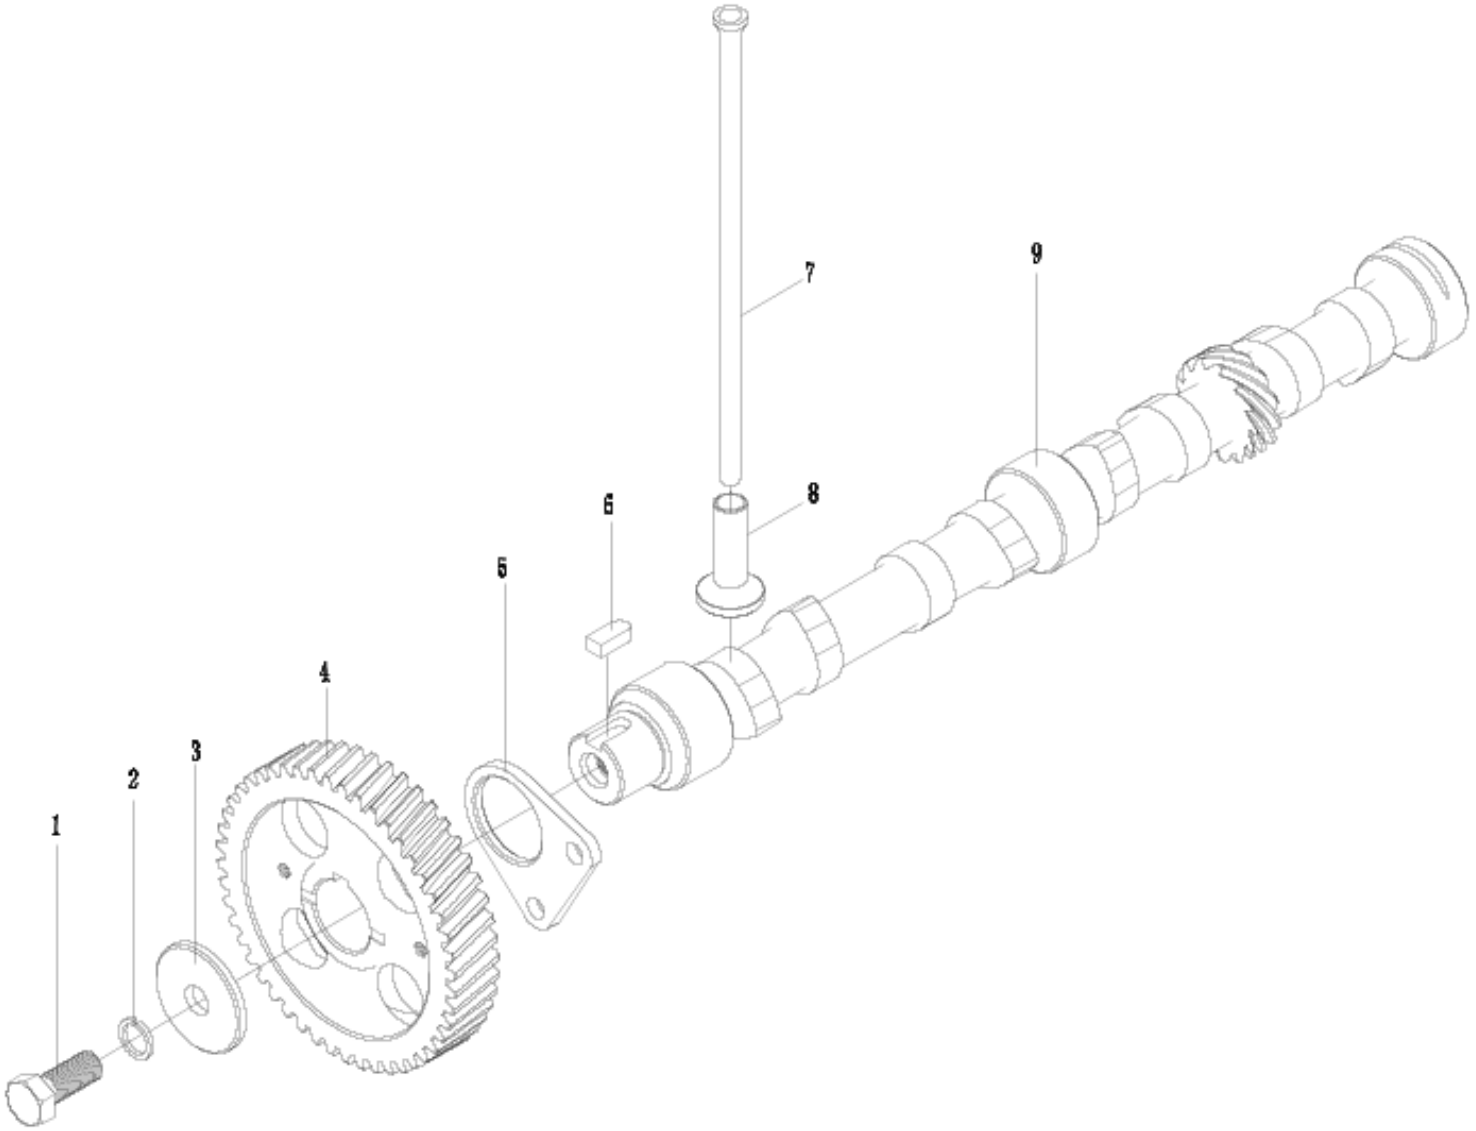


https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-6

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M12X35	BOLT		1	
2	GBT93-12(2)	WASHER		1	
3	L375-02004	CAMSHAFT GEAR CIRCLIP		1	
4	4L22BT-02011	CAMSHAFT TIMING GEAR		1	
5	L375-02002	CAMSHAFT THRUST PLATE		1	
6	GBT1096-C8X18	KEY		1	
7	4L22-02003	PUSH ROD		8	
8	L375-02005	TAPPTE		8	
9	4L22-02001	CAM SHAFT		1	

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-7

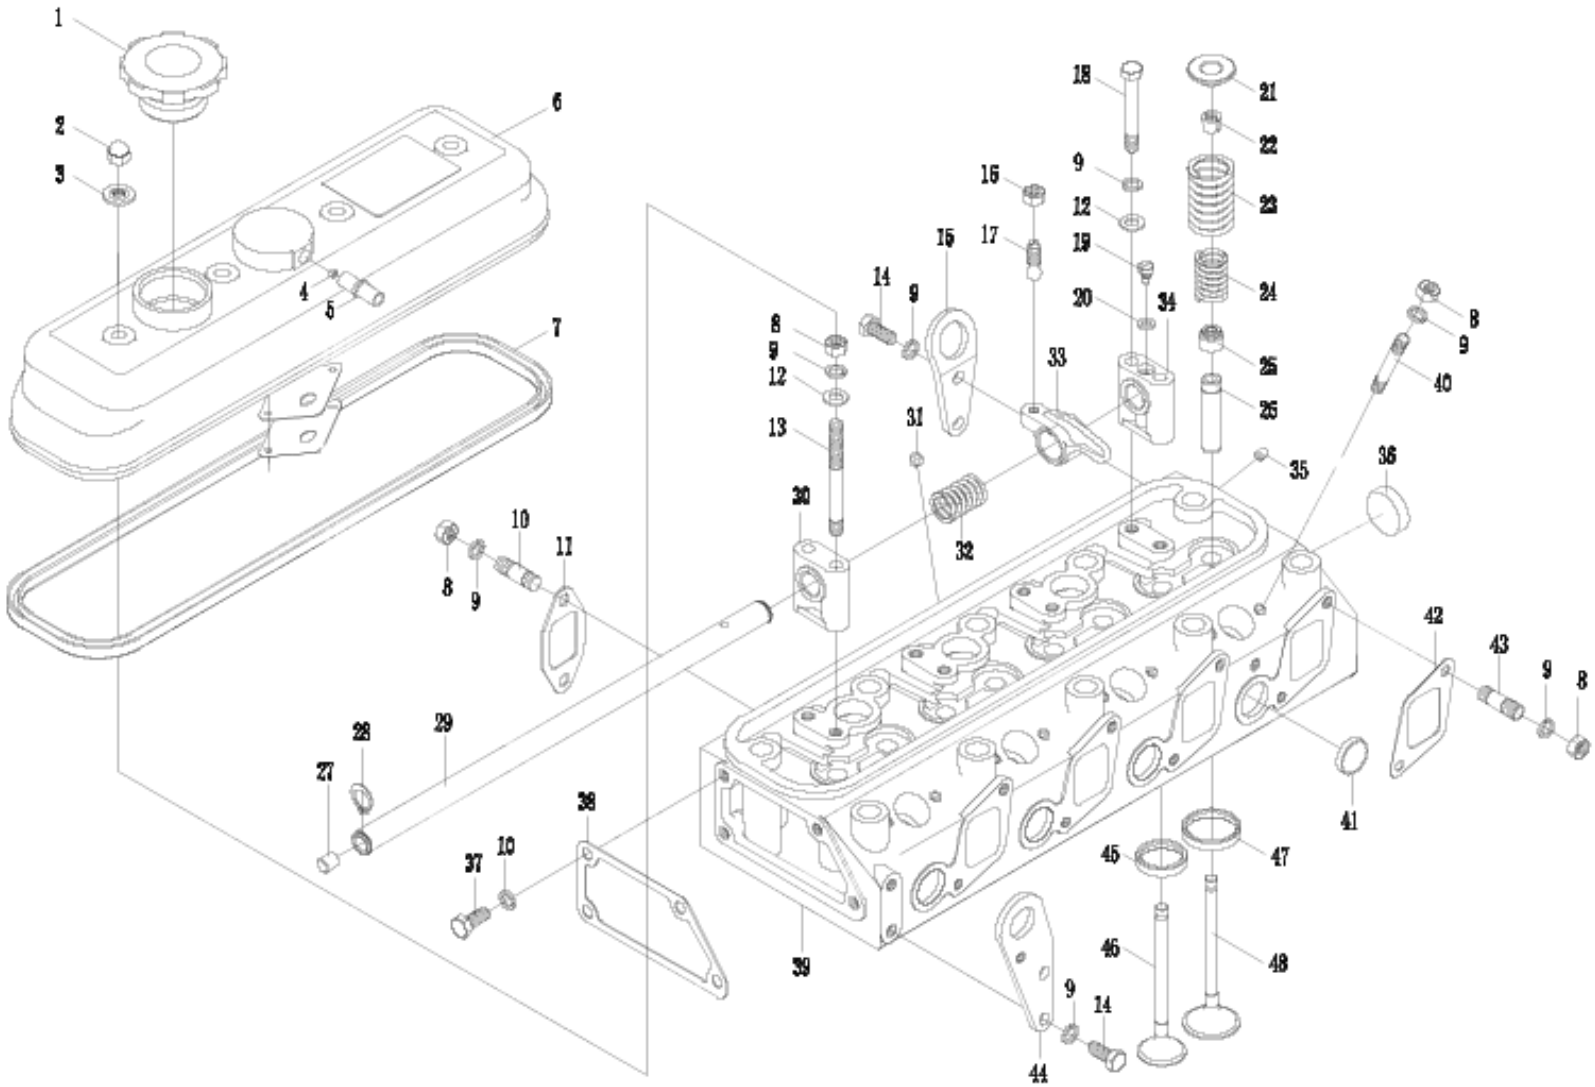

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-7

No.	Part No.	Description	Version	QTY.	Remark
1	L375-03005	FILLING CAP		1	
2	GBT923-M8	CAP NUT		4	
3	L375-03017	ANTILEAK WASHER		4	
4	KM385T-03305	AIR OUTLET PIPE PLUG		1	
5	D495QB-012106	AIR OUTLET PIPE		1	
6	LL480B-03301	CYLINDER COVER		1	
7	LL480B-03002(3)	CYLINDER COVER GASKET		1	
8	GBT6170-M8(4)	NUT		28	
9	GBT93-8(6)	WASHER		44	
10	GBT898-AM8X30-8.8(2)	STUD		8	
11	4L22-03006	EXHAUST PIPE GASKET		4	
12	GBT97.1-8(3)	WASHER		8	
13	L375-03001	ROCKER SEAT FASTENING BOLT		4	
14	GBT5783-M8X20(4)	BOLT		4	
15	L375-03012	REAR HANGING RING		1	
16	GBT6171-M8	NUT		8	
17	LL480B-03201	VALVE CLEARANCE ADJUSTING SCREW		8	
18	GBT5782-M8X60-8.8	BOLT		4	
19	L375-03206	ROCKER SHAFT LOCATING SCREW		1	
20	GBT848-6	WASHER		1	
21	4L22BT-03009	VALVE SPRING UPPER SEAT		8	
22	LL480B-03008	VALVE COLLET		16	

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-7 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	4L22-03015	VALVE OUTER SPRING		8	
24	4L22-03007	VALVE INNER SPRING		8	
25	LL480B-03019	VALVE OIL SEAL		8	
26	KM485QB-03102	VALVE GUIDE PIPE		8	
27	L375-01115(2)	PLUG PIECE		2	
28	GBT894.1-16	RETAINER RING		2	
29	4L22-03205	ROCKER SHAFT		1	
30	L375-03202	ROCKER SHAFT SUPPORT SEAT		3	
31	L375-03107	PLUG PIECE		4	
32	L375-03204	ROCKER SHAFT SPRING		3	
33	4L22B-03220H	AIR INLET VALVE ROCKER UNIT		4	
33	4L22B-03210H	EXHAUST ROCKER UNIT		4	
34	L375-03207	ROCKER SHAFT REAR SEAT		1	
35	D495QB-03110	OIL WAY PLUG		1	
36	D495QB-01024(2)	PLUG PIECE		1	
37	GBT5783-M8X25(2)	BOLT		4	
38	L375-03010	THERMOSTAT HOUSING GASKET		1	
39	4L22B-03101	CYLINDER COVER		1	
40	GBT898-AM8X60(2)	STUD		8	
41	L375-03106	PLUG PIECE		4	
42	4L22BZ-03013	AIR INLET PIPE GASKET		4	
43	GBT898-AM8X25(2)	STUD		8	

https://truckmanualshub.com/


4L22BT-1H3 ENGINE ASSY-7 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
44	LL480-03010	FRONT HOISTING RING		1	
45	4L22-03104	EXHAUST VALVE SEAT		4	
46	4L22B-03004	EXHAUST VALVE		4	
47	4L22-03103	AIR INLET VALVE SEAT		4	
48	4L22-03005	AIR INLET VALVE		4	

https://truckmanualshub.com/

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-8

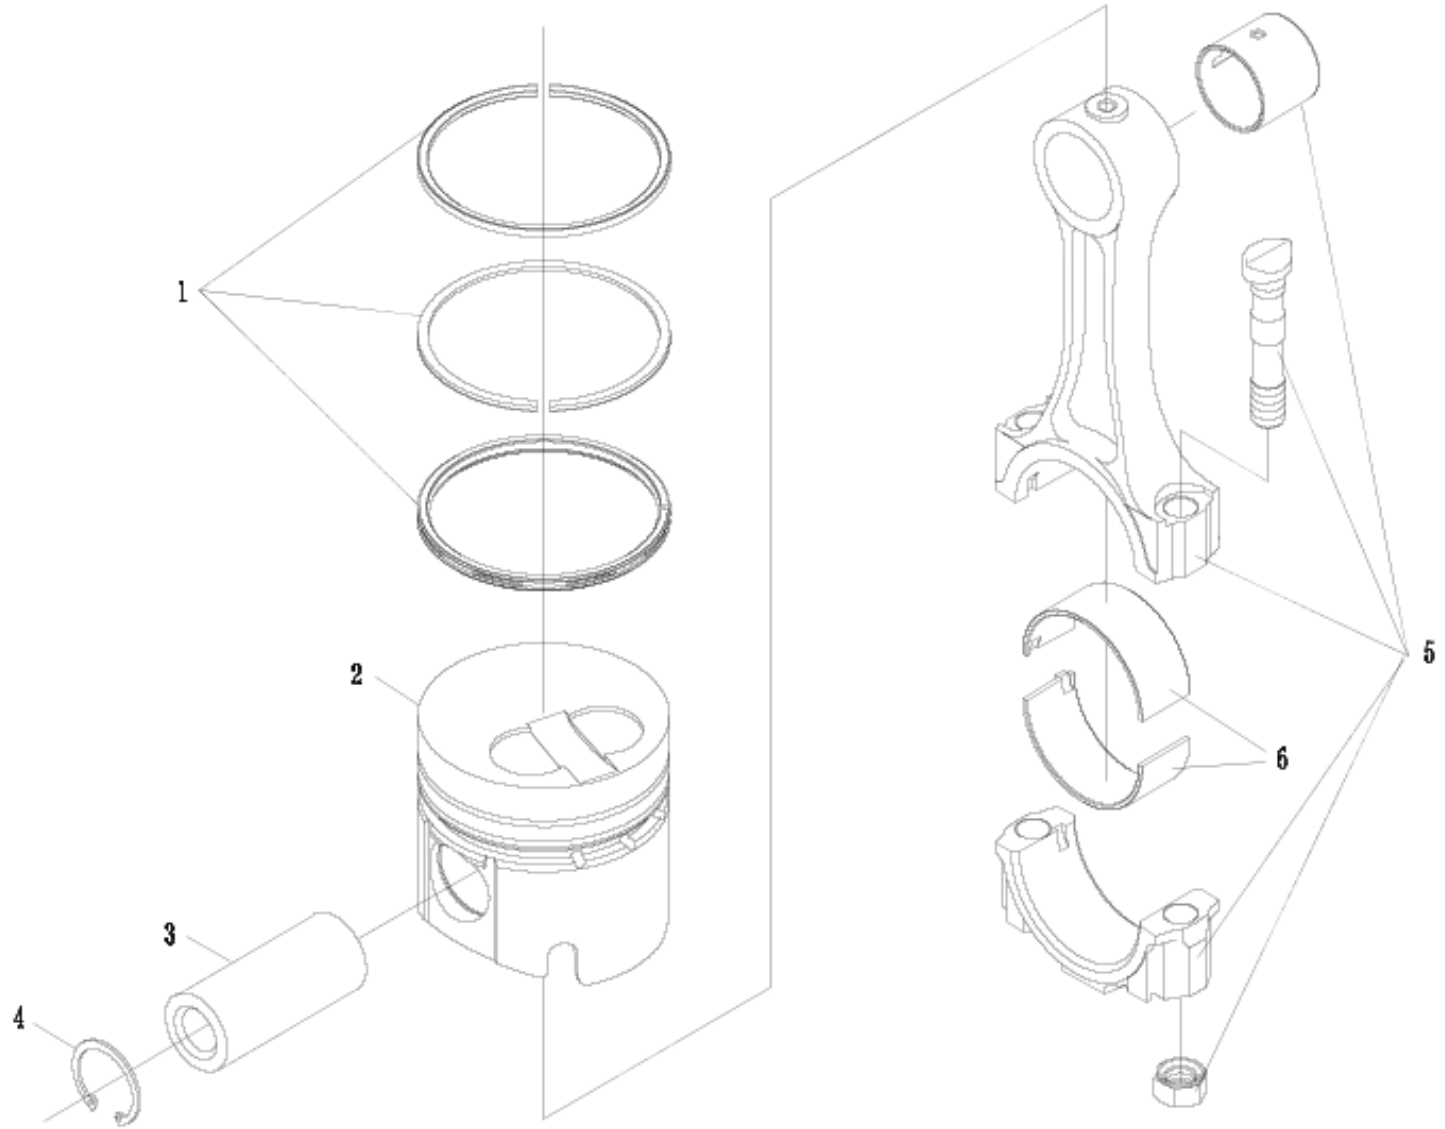

https://truckmanualshub.com/


4L22BT-1H3 ENGINE ASSY-8

No.	Part No.	Description	Version	QTY.	Remark
1	4L22T-04010	PISTON RING ASSEMBLY		1	
2	4L22-04005	PISTON		1	
3	4L22-04004	PISTON PIN		1	
4	4L22-04006	CIRCLIP		2	
5	4L22-04200	CONNECTING ROD ASSEMBLY		1	
6	4L22-04003	CONNECTING ROD BEARING		2	

https://truckmanualshub.com/

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-9

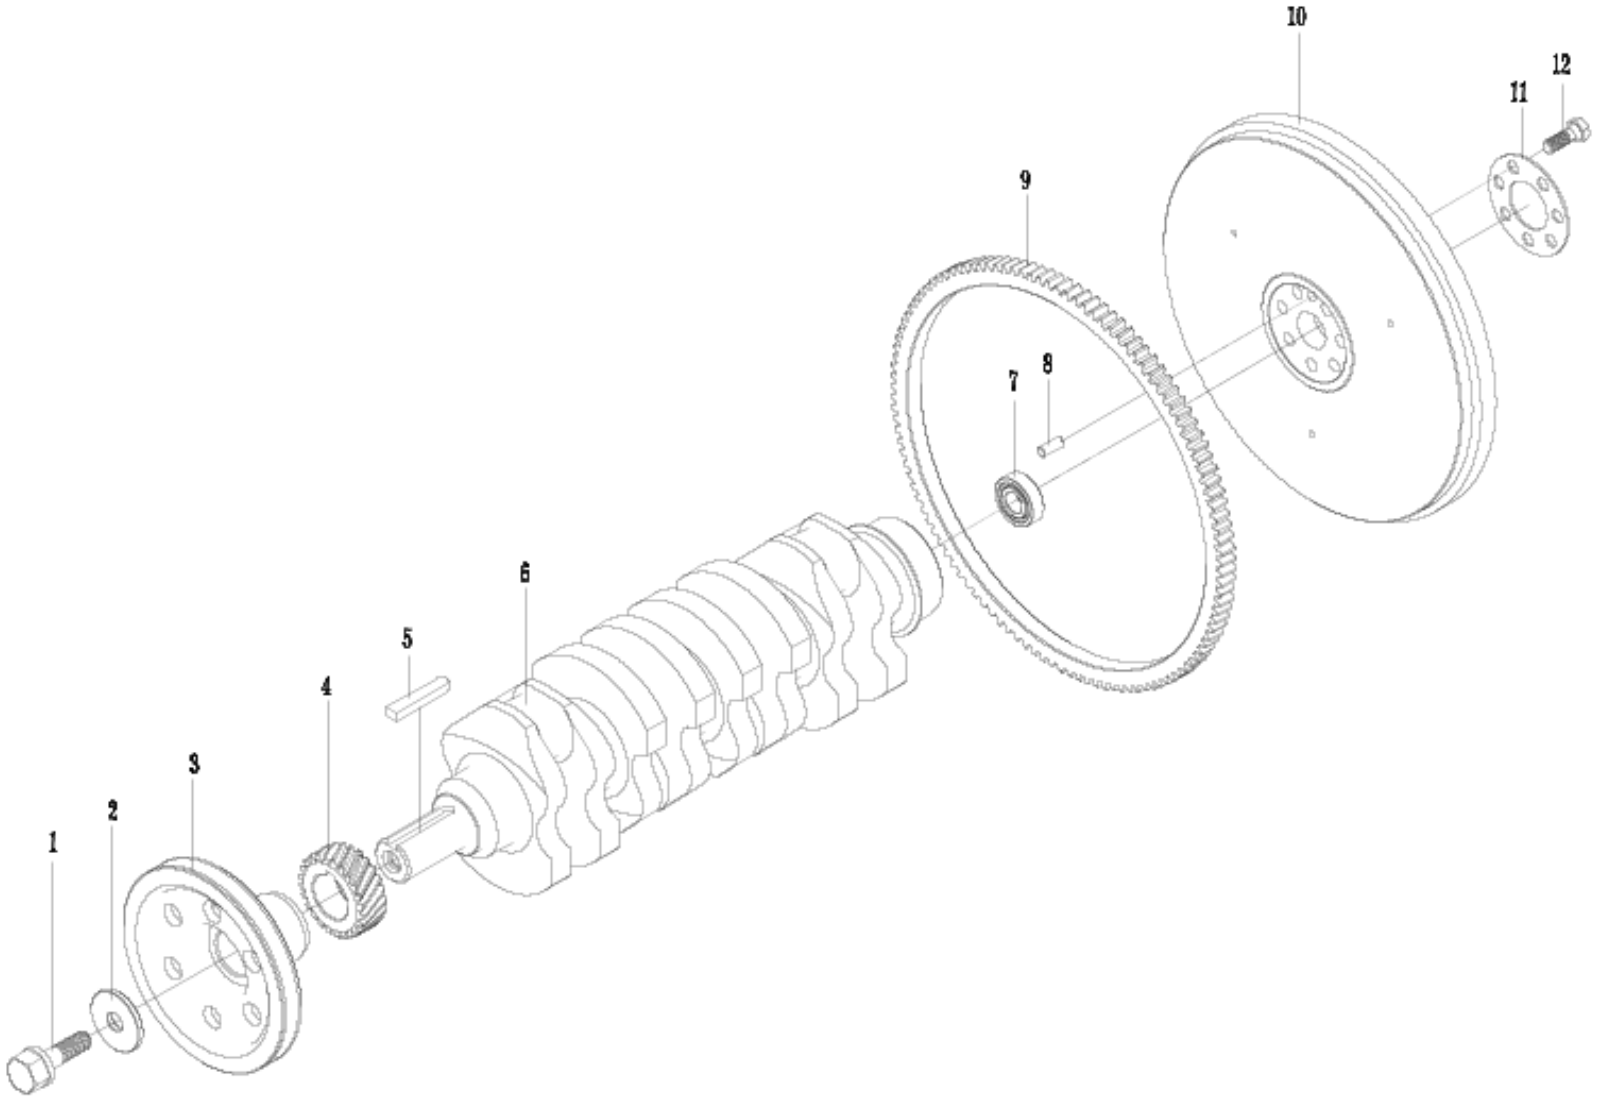

https://truckmanualshub.com/


4L22BT-1H3 ENGINE ASSY-9

No.	Part No.	Description	Version	QTY.	Remark
1	L375-05006	STARTING CLAW		1	
2	L375-05005	STARTING CLAW MAT PLATE		1	
3	4L22BT-05005-4	CRANKSHAFT BELT PULLEY		1	
4	KM385T-05007	CRANKSHAFT TIMING GEAR		1	
5	GBT1096-C10X63	KEY		1	
6	4L22-05003	CRANK SHAFT		1	
7	GBT276-6203-2RS	single-row radial thrust ball bearing		1	
8	GBT119-B8X20	PIN		1	
9	4L22BT-05100-4	FLYWHEEL GEAR RING		1	
10	4L22BT-05101-4	FLY WHEEL		1	
11	4L22-05002	FLYWHEEL BOLT BACKING PLATE		1	
12	KM385T-05001-1	FLYWHEEL BOLT		7	

https://truckmanualshub.com/

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-10

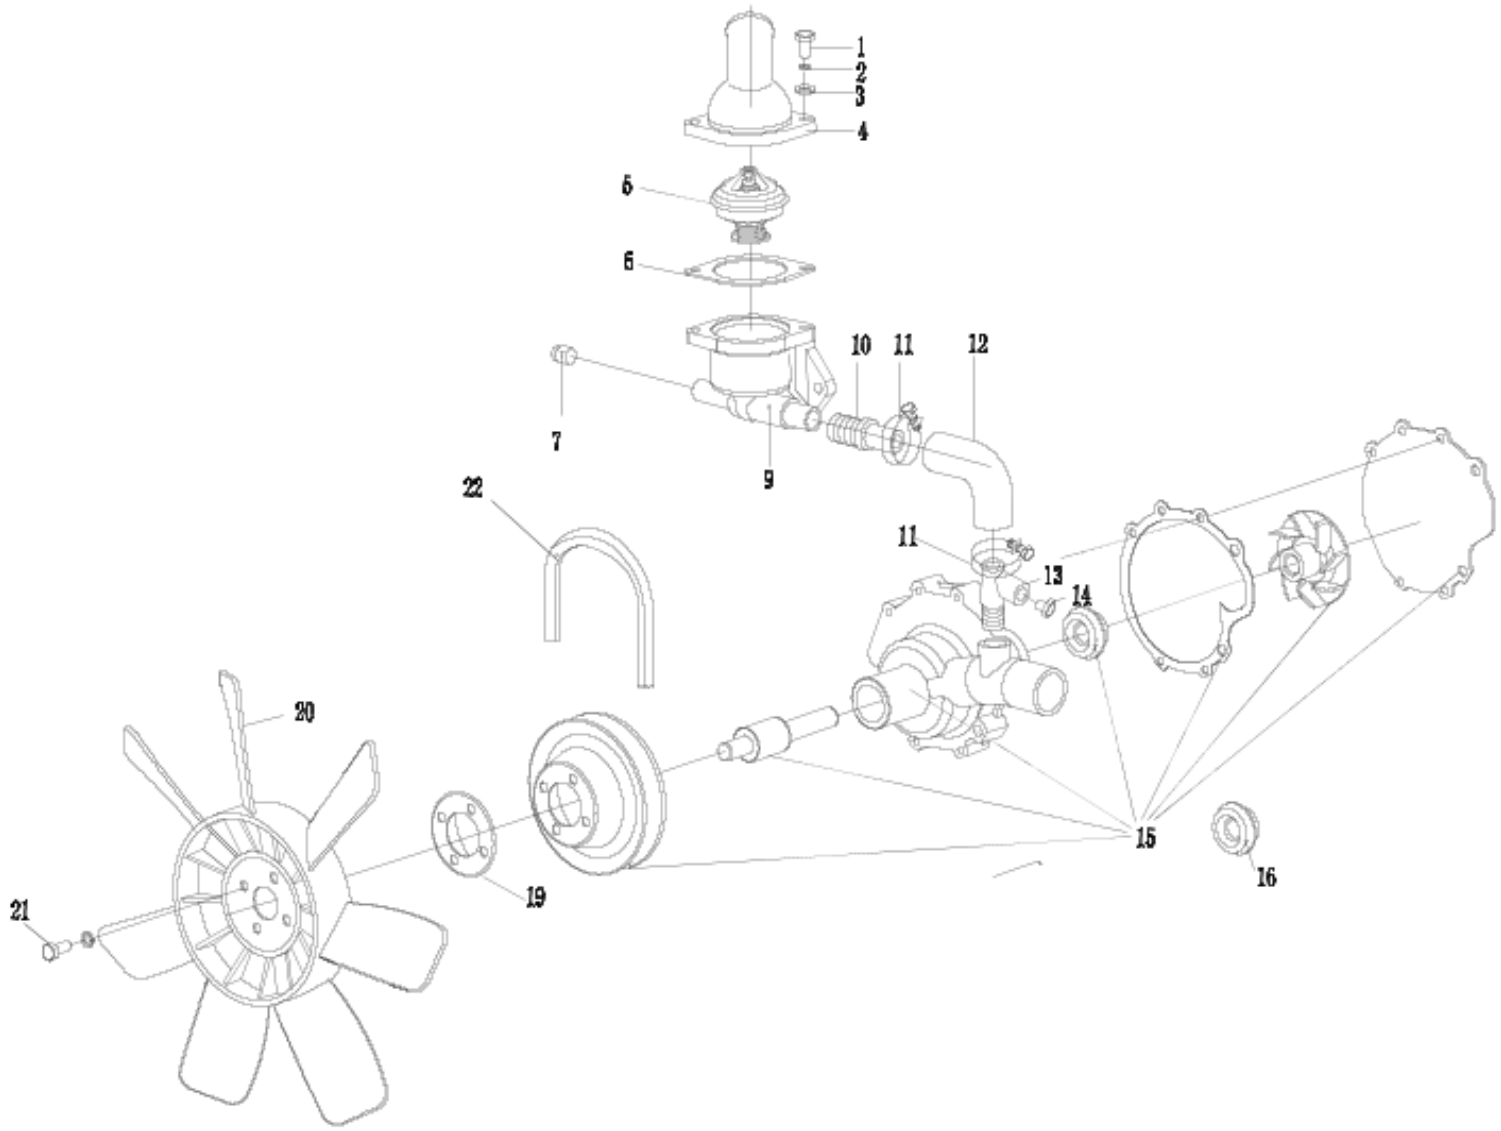

https://truckmanualshub.com/


4L22BT-1H3 ENGINE ASSY-10

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M6X22	BOLT		4	
2	GBT93-6	WASHER		4	
3	GBT848-6(2)	WASHER		4	
4	4L22BT-06201-2	THERMOSTAT COVER		1	
5	L375-06203	THE RMOSTAT		1	
6	L375-06202	THERMOSTAT COVER GASKET		1	
7	D495QB-06111-1(2)	SCREW PLUG		1	
9	L375-06204	THERMOSTAT HOUSING		1	
10	LL380-06001	SMALL CIRCULATING PIPE		1	
11	ZBT32005.1-φ27.5(2)	CLAMP		2	
12	L375-06001	WATER PUMP HOSE		1	
13	4L22-06110	TEE PIPE		1	
14	L375Y3-14-06111	SCREW PLUG		1	
15	4L22BT-06100-2C	WATER PUMP ASSEMBLY		1	
16	4L22-06112	WATER SEAL		1	
19	KM385T-06112-1S	FAN GASKET		1	
20	4D30YB-24-06400	FAN PARTS		1	
21	GBT5780-M8X95	BOLT		4	
22	GBT12732-AV13X1125-c	BELT		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-11

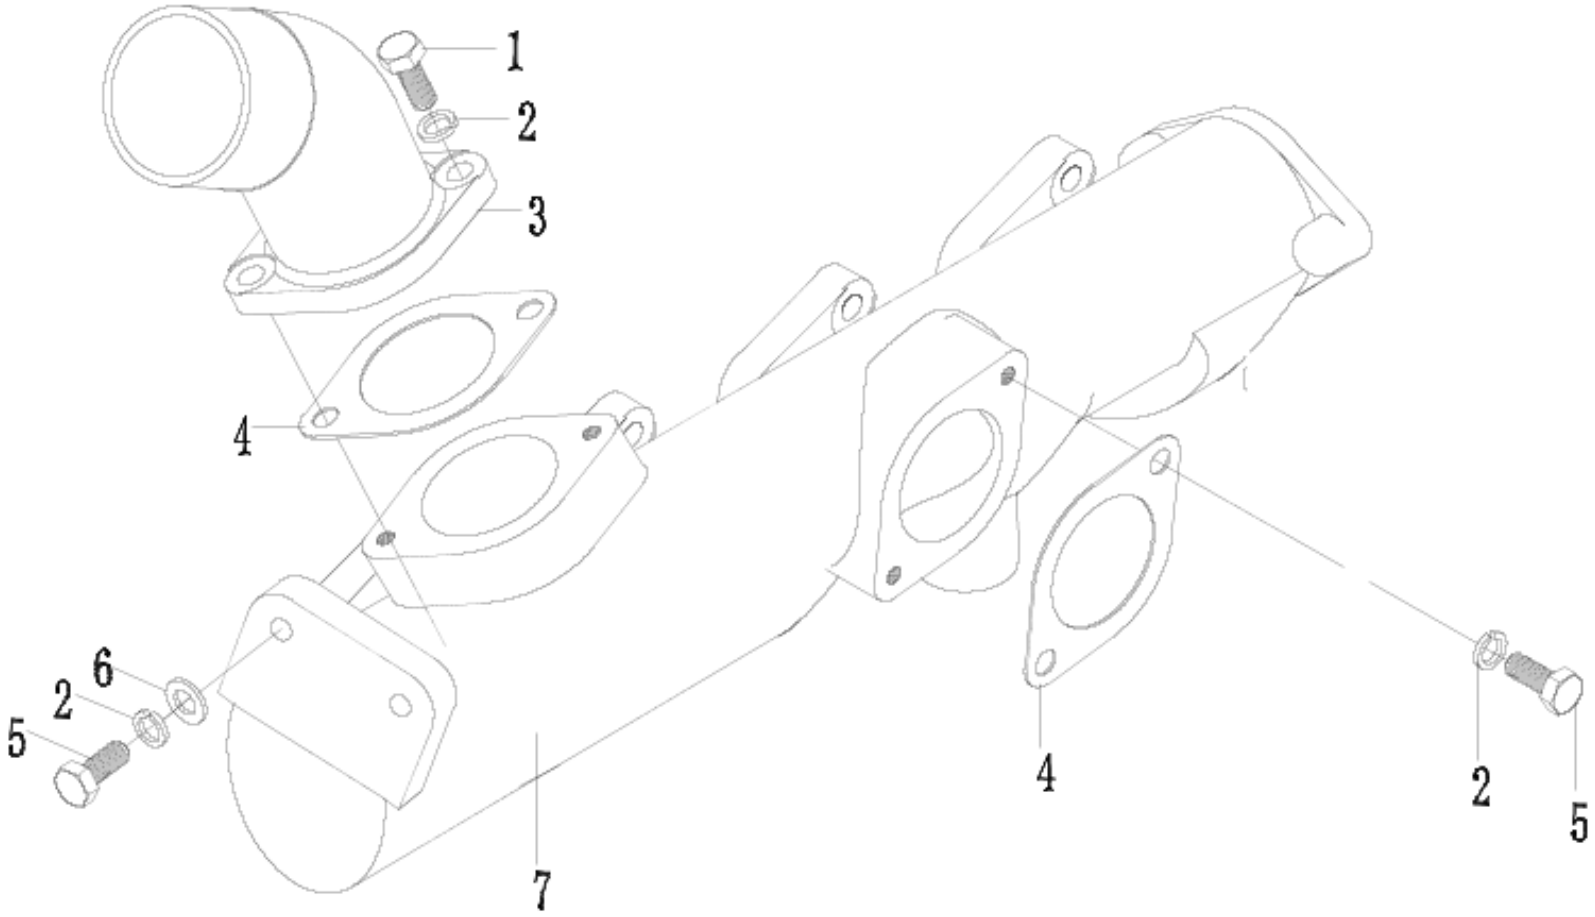

https://truckmanualshub.com/


4L22BT-1H3 ENGINE ASSY-11

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M8X25(3)	BOLT		2	
2	GBT93-8(7)	WASHER		6	
3	4L22BT-07004-1	AIR INLET PIPE JOINT		1	
4	L375Y3-07003	AIR INLET PIPE END COVER GASKET		2	
5	GBT5783-M8X16-8.8	BOLT		4	
6	GBT97.1-8(4)	WASHER		2	
7	4L22BT-07001-1H	AIR INLET PIPE		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-12

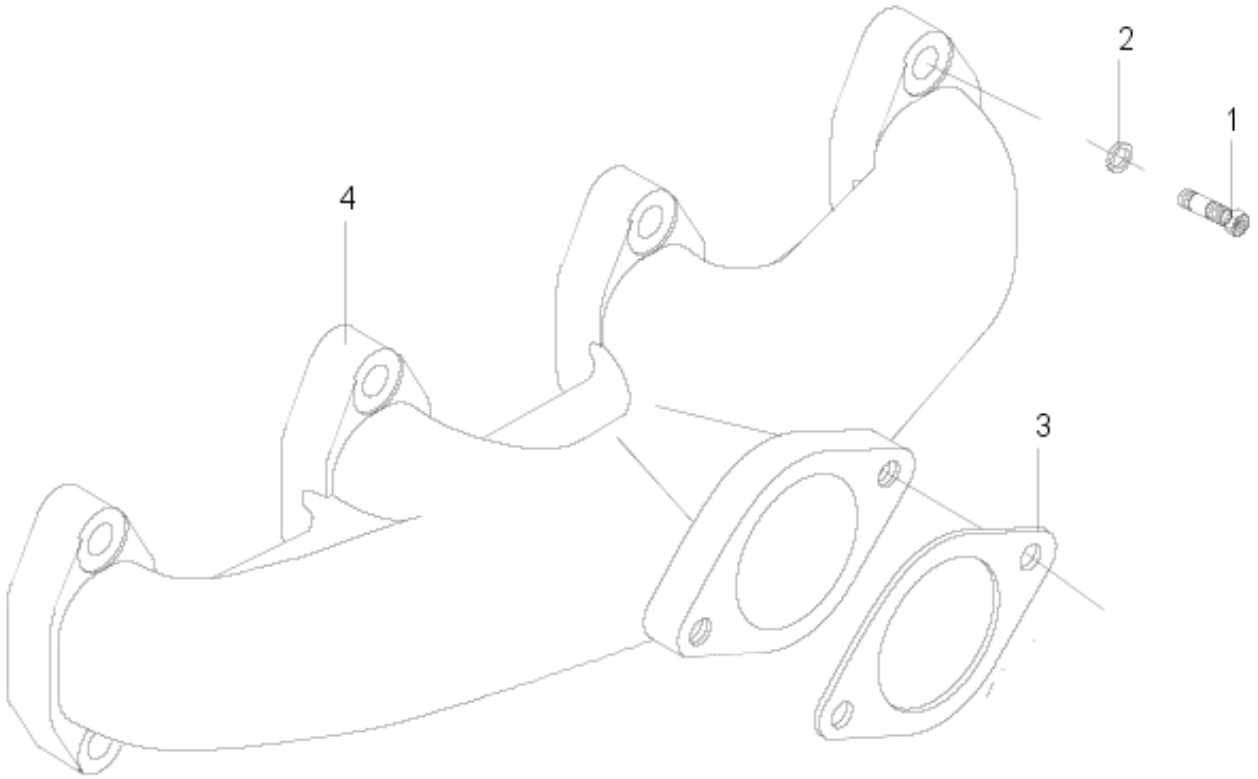


https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-12

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M10X25(4)	BOLT		4	
2	GBT93-10(5)	WASHER		4	
3	KM385T-08002	EXHAUST PIPE GASKET		1	
4	4L22BT-08001-3	EXHAUST PIPE		1	

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-13

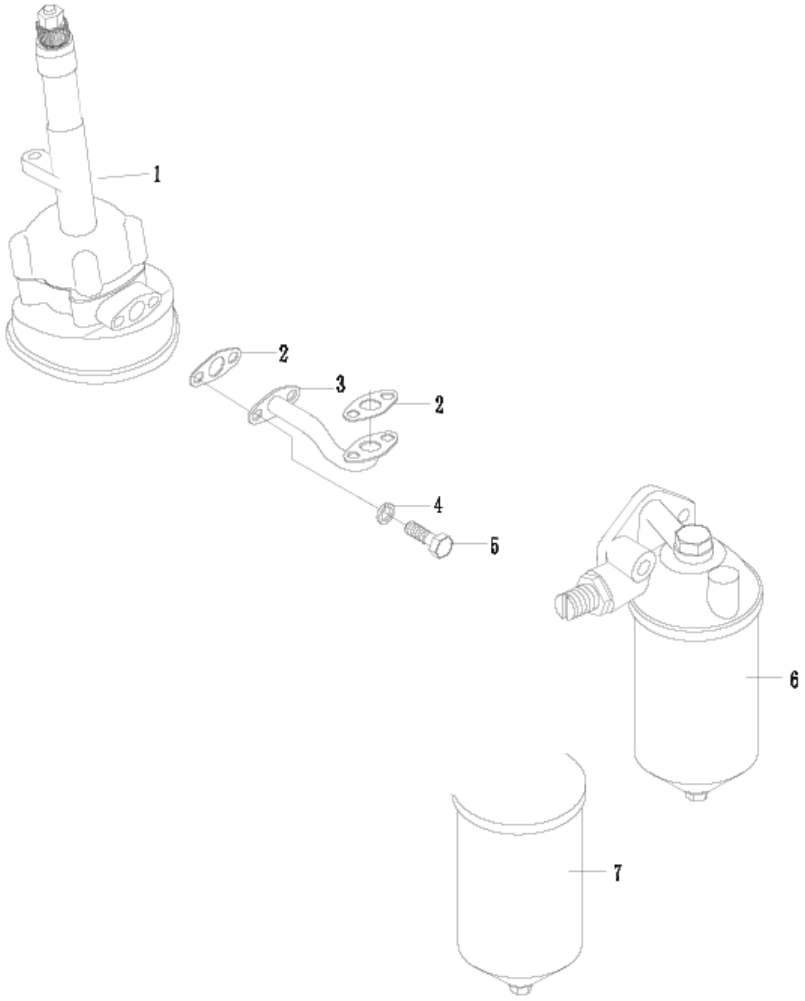

https://truckmanualshub.com/


4L22BT-1H3 ENGINE ASSY-13

No.	Part No.	Description	Version	QTY.	Remark
1	4L22-09100-1C	LUBRICATING OIL PUMP ASSEMBLY		1	
2	4L22-09001	OIL OUTLET PIPE FLANGE GASKET		2	
3	4L22-09200	OIL PIPELINE UNIT		1	
4	GBT93-8(8)	WASHER		4	
5	GBT5783-M8X20(5)	BOLT		4	
6	KM385T-09300-3C	OIL FILTER PARTS		1	
7	KM385T-09305C	OIL FILTER ELEMENT		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-14

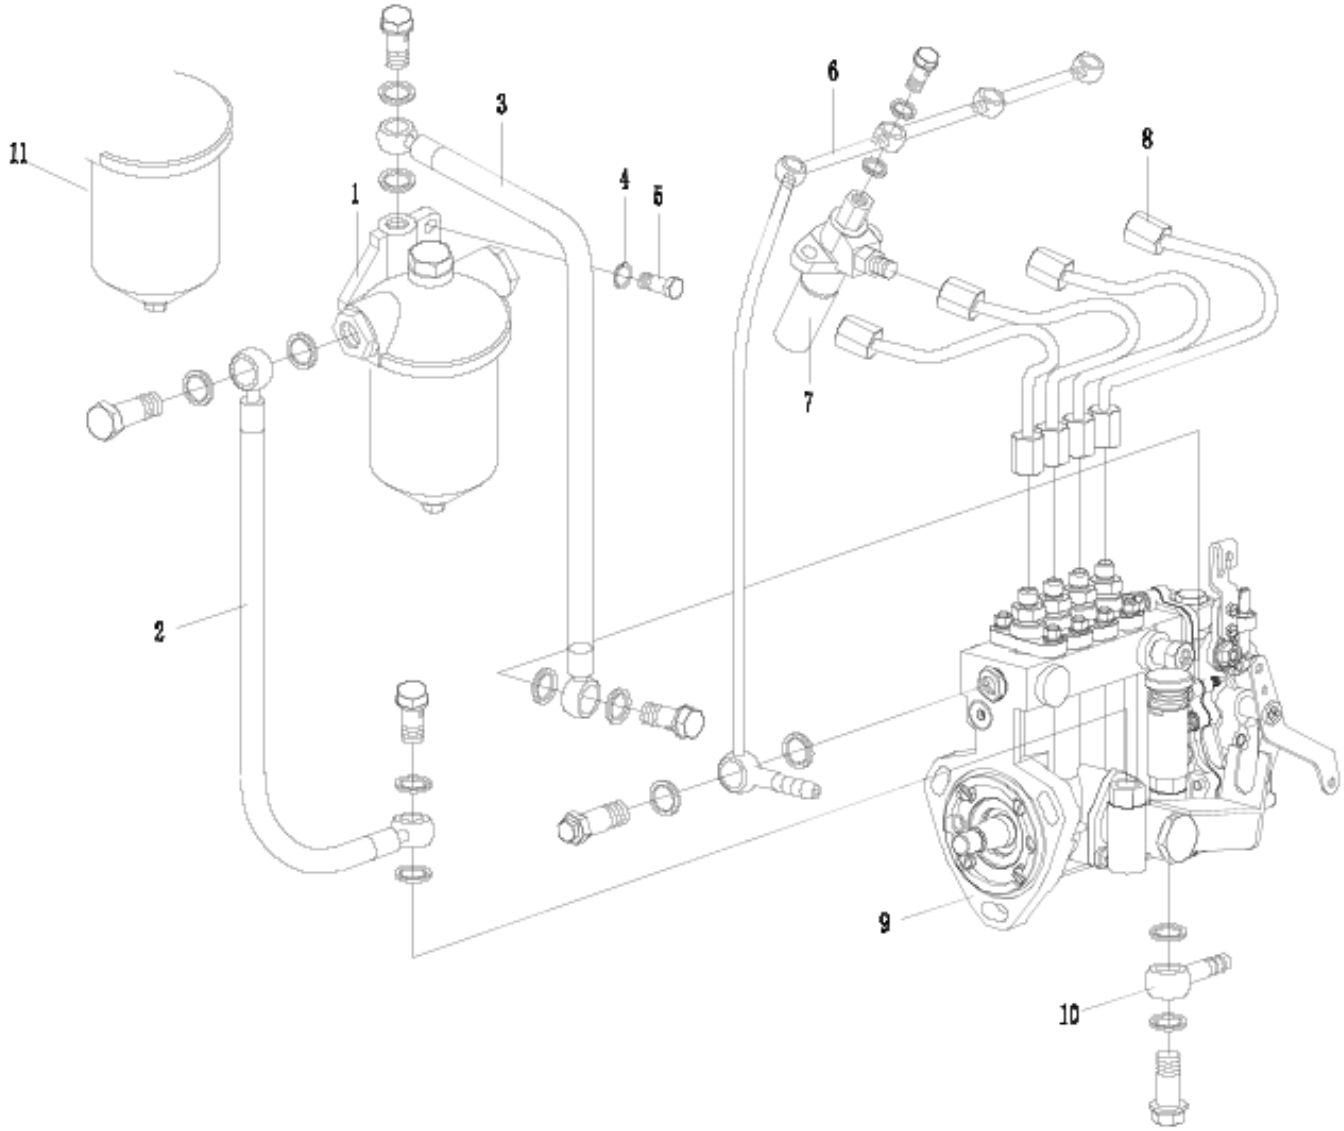


https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-14

No.	Part No.	Description	Version	QTY.	Remark
1	L375-10500-1C	FUEL FILTER PARTS		1	
2	L375-10700-1	PIPE FROM OIL CONVEYING PUMP TO FUEL OIL FILTER		1	
3	L375-10600	OIL PIPE FROM FILTER TO INJECTION PUMP PIPE		1	
4	GBT93.1-10	WASHER		1	
5	GBT5783-M10X30-8.8(3)	BOLT		1	
6	4L22-10400-1	OIL RETURN PIPE PARTS		1	
7	LL388BT-10300-PK158P1	OIL INJECTOR ASSEMBLY		4	
8	LL480B-10200	HIGH PRESSURE OIL PIPE PARTS		1	
9	4L22BT-10100-4QT566B	OIL INJECTION PUMP ASSEMBLY		1	
10	L375-10601	PIPE JOINT		1	
11	KM385T-10501	FUEL FILTER ELEMENT		1	

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-15

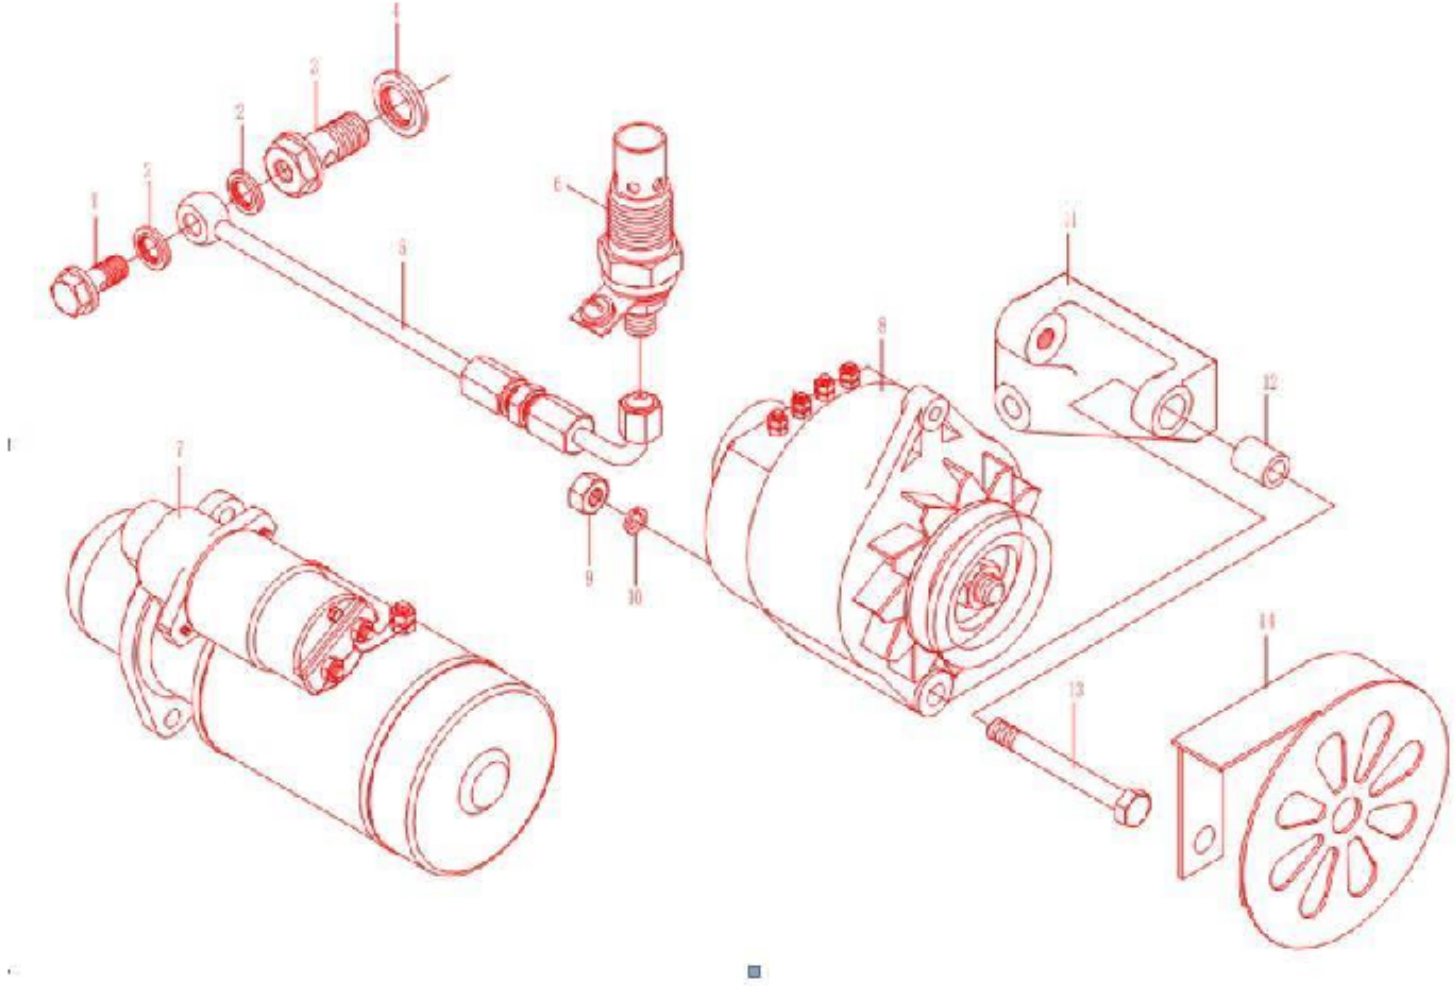

https://truckmanualshub.com/


4L22BT-1H3 ENGINE ASSY-15

No.	Part No.	Description	Version	QTY.	Remark
1	KM485QB-12603	SCREW M8		1	
2	L375-03017(2)	ANTILEAK WASHER		2	
3	KM485QB-12602	BOLT M12		1	
4	KM485QB-12607	COMBINED GASKET		1	
5	KM485QB-12604-1	PREHEATING PLUG OIL PIPE		1	
6	KM485QB-12600	PREHEATING PLUG		1	
7	4L22BT-12300J-1C	STARTIN GMOTOR		1	
8	L480Q-12100J-1C	ALTERNATOR ASSY		1	
9	GBT6170-M10	NUT		1	
10	GBT93-10(6)	WASHER		1	
11	4L22BT-01028	GENERATOR FASTEN BRACKET		1	
12	L375-01031	GENERATOR BRACKET BUSH		1	
13	GBT5782-M10X100	BOLT		1	
14	4L22BT-12110-2	GENERATOR SAFTY COVER		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-16

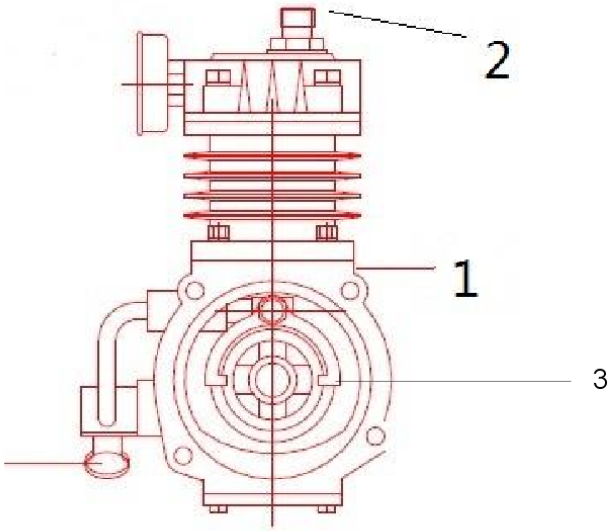

https://truckmanualshub.com/

4L22BT-1H3 ENGINE ASSY-16


No.	Part No.	Description	Version	QTY.	Remark
1	4L22BT-10900-4C	AIR COMPRESSOR		1	
2	4L22BT-09800-1	AIR COMPRESSOR LUBRICTION PIPE		1	
3	4L22BT-01012-1	AIR COMPRESSOR CONNECTING PLATE		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.11 AIR FILTER SYSTEM ASSEMBLY

https://truckmanualshub.com/

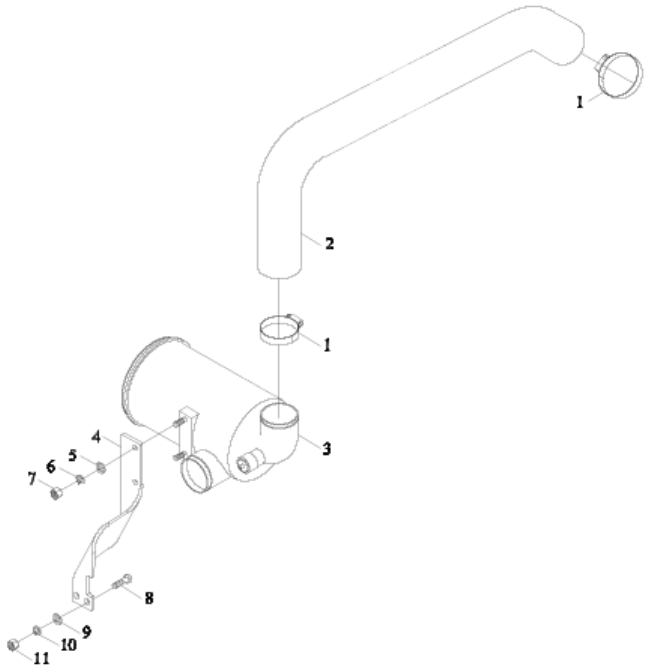

https://truckmanualshub.com/


TE354.11 AIR FILTER SYSTEM ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	Q67676	B-TYPE WORM TRANSMISSION HOSE CLAMP		2	
2	TE354.11-01	AIR INLET HOSE		1	
3	TE250.11F.1	AIR FILTER ASSEMBLY		1	
3.1	TE250.11F.1.1	AIR FILTER CORE		1	
4	TE320.11B-02	AIR FILTER INSTALLATION PLATE		1	
5	GBT97.1-8-A0P	FLAT WASHER		2	
6	GBT93-8-A0P	STANDARD SPRING WASHER		2	
7	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
8	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		2	
9	GBT97.1-10-A0P	FLAT WASHER		2	
10	GBT93-10-A0P	STANDARD SPRING WASHER		2	
11	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		2	

https://truckmanualshub.com/

TE354.13 COOLING SYSTEM ASSEMBLY

https://truckmanualshub.com/

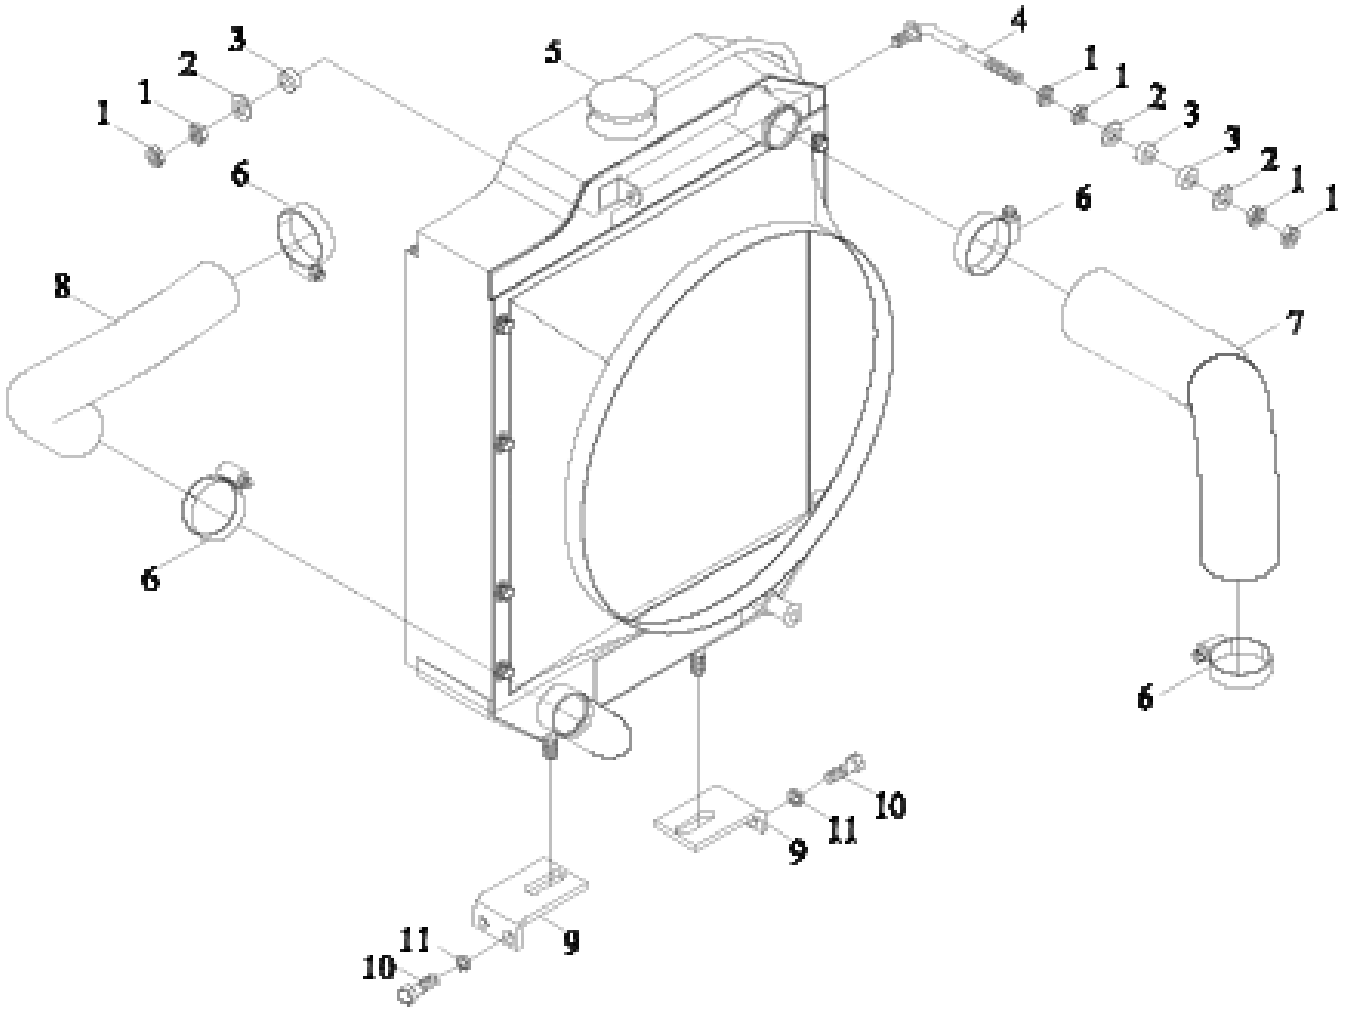

https://truckmanualshub.com/


TE354.13 COOLING SYSTEM ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT6172.1-M8-04-A2L	HEXAGON THIN NUT		6	
2	GBT97.1-8-A0P	FLAT WASHER		3	
3	FT650.13.135	RUBBER PAD		3	
4	TE354.13.2	RADIATOR PULL ROD WELDMENT		1	
5	TE354.13.1	RADIATOR ASSEMBLY		1	
6	Q67657	B-TYPE WORM TRANSMISSION HOSE CLAMP		4	
7	TE354.13-01	WATER TANK INLET HOSE		1	
8	TE250.13-05	WATER TANK OUTLET HOSE		1	
9	TE250.13B.2	RADIATOR BRACKET WELDMENT		2	
10	GBT5783-M8X35-8.8-A2L	HEXAGON BOLT		4	
11	GBT93-8-A0P	STANDARD SPRING WASHER		4	

https://truckmanualshub.com/

TE354.201 HAND THROTTLE, FLAMEOUT CABLE ASSEMBLY

https://truckmanualshub.com/

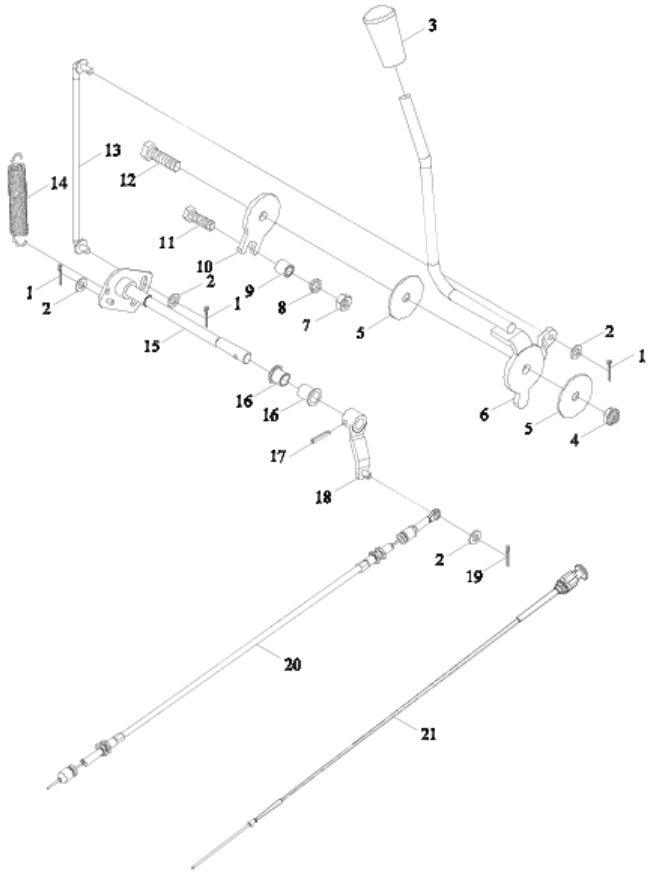

https://truckmanualshub.com/


TE354.201 HAND THROTTLE, FLAMEOUT CABLE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT91-2X10-A0P	SPLIT PIN		3	
2	GBT97.1-6-A0P	FLAT WASHER		4	
3	LA754.201-01	HANDLE		1	
4	GBT1337-M10	HEXAGON SELF-LOCKING NUT		1	
5	LA754.201-03	FRICTION PLATE		2	
6	TE254.201A.2	ROCKER WELDMENT		1	
7	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
8	GBT93-8-A0P	STANDARD SPRING WASHER		1	
9	LA754.201-04	LIMITING SLEEVE		1	
10	LA754.201-02	LIMIT PLATE		1	
11	GBT5783-M8X35-8.8-A2L	HEXAGON BOLT		1	
12	GBT5783-M10X40-8.8-A3L	HEXAGON BOLT		1	
13	TE254.201A.1a	PULL ROD WELDMENT		1	
14	GBT2088-LIIIB-2X16X112	COLUMN SPIRE TENSION SPRING		1	
15	LA754.201.3	ROTARY ARM WELDMENT		1	
16	LA754.201-05	NYLON BUSH		2	
17	GBT879.1-5X20	SPRING COLUMN PIN		1	
18	LA754.201.4	WIRE ROCKER WELDMENT		1	
19	GBT91-2X12-A0P	SPLIT PIN		1	
20	TE354.201-01	ENGINE THROTTLE WIRE		1	
21	FT300.20.018	EXTINGUISH WIRE ASSEMBLY		1	

https://truckmanualshub.com/

TE354.202 FOOT THROTTLE ASSEMBLY

https://truckmanualshub.com/

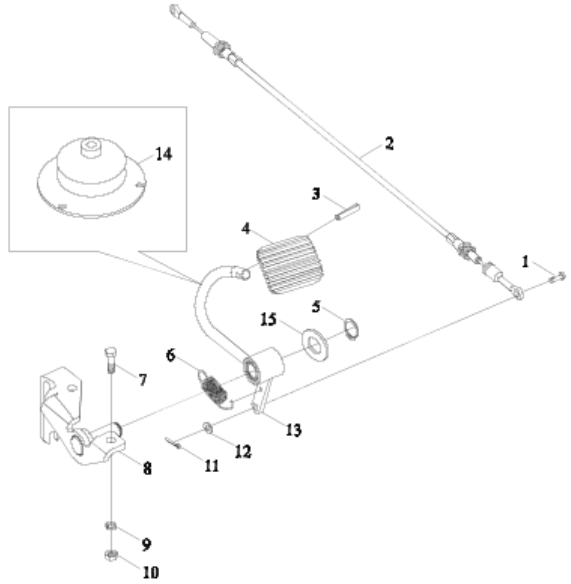

https://truckmanualshub.com/


TE354.202 FOOT THROTTLE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT882-B6X16	PIN SHAFT		1	
2	TE354.202-01	FOOT THROTTLE WIRE ASSEMBLY		1	
3	GBT5783-M5X16-8.8-A2L	SPRING COLUMN PIN		1	
4	TE254.202A-01	FOOT PEDAL		1	
5	GBT894.1-13	CIRCLIP FOR SHAFT		1	
6	TE254.202A-03	FOOT THROTTLE RETURN SPRING		1	
7	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
8	TE254.202A.1	FIXING BRACKET WELDMENT		1	
9	GBT93-8-A0P	STANDARD SPRING WASHER		2	
10	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
11	GBT91-2X12-A0P	SPLIT PIN		1	
12	GBT97.1-6-A0P	FLAT WASHER		1	
13	TE254.202A.2	ROCKER WELDMENT		1	
14	FT65.45.393	THROTTLE PEDAL SEAL SLEEVE		1	
15	GBT97.1-14-A0P	FLAT WASHER		1	

https://truckmanualshub.com/

TE300.211D CLUTCH SUBASSEMBLY

https://truckmanualshub.com/

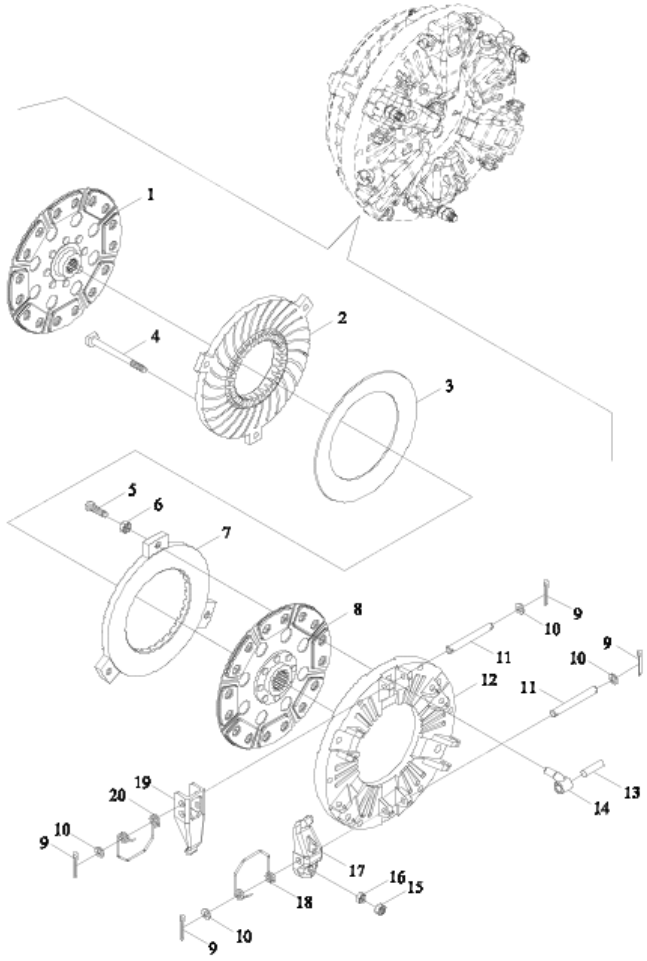

https://truckmanualshub.com/


TE300.211D CLUTCH SUBASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE300.211D.2	AUXILIARY CLUTCH FRICTION PLATE ASSEMBLY		1	
2	FT300.21B.102	AUXILIARY CLUTCH PRESSURE PLATE		1	
3	FT350.21B.103	BUTTERFLY SPRING		1	
4	FT300.21B.104	AUXILIARY CLUTCH PULL ROD		3	
5	FT300.21B.114	MAIN CLUTCH ADJUSTING SCREW		3	
6	GBT6171-M10X1-8-A2L	NUT		3	
7	FT300.21B.113	MAIN CLUTCH PRESSURE PLATE		1	
8	TE300.211D.1	MAIN CLUTCH FRICTION PLATE ASSEMBLY		1	
9	GBT91-3.2X20-A0P	SPLIT PIN		12	
10	GBT848-10-A0P	WASHER		12	
11	FT300.21B.111	LONG PIN		6	
12	FT300.21B.112	CLUTCH COVER		1	
13	FT300.21B.109	PIN SHAFT		3	
14	FT300.21B.110	TOP ROD		3	
15	GBT6171-M8X1-8-A2L	NUT		3	
16	FT300.21B.105	BALL NUT		3	
17	FT300.21B.106	AUXILIARY CLUTCH RELEASE LEVER		3	
18	FT300.21B.120	AUXILIARY RELEASE LEVER SPRING		3	
19	FT300.21B.107	MAIN CLUTCH RELEASE LEVER		3	
20	FT300.21B.108	MAIN RELEASE LEVER SPRING		3	

https://truckmanualshub.com/

TE354.212 CLUTCH CONTROL ASSEMBLY

https://truckmanualshub.com/

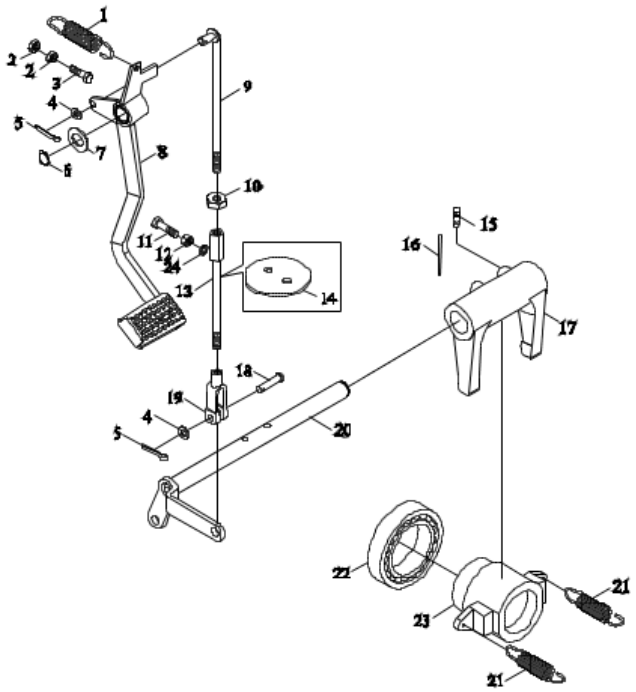

https://truckmanualshub.com/

TE354.212 CLUTCH CONTROL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.212D-05	CLUTCH PEDAL RETURN SPRING		1	
2	GBT6172.1-M10-A3L	HEXAGON THIN NUT		2	
3	GBT5781-M10X40-A3L	HEXAGON BOLT		1	
4	GBT97.1-10-A0P	FLAT WASHER		2	
5	GBT91-3.2X22-A0P	SPLIT PIN		2	
6	GBT894.1-25	CIRCLIP FOR SHAFT		1	
7	GBT97.1-24-A0P	FLAT WASHER		1	
8	TE250.212D.1	CLUTCH PEDAL ROCKER UNIT		1	
9	TE250.212D.3	RELEASE UPPER TIE ROD WELD		1	
10	GBT6171-M101-A2L	HEXAGON NUT, TYPE-1		1	
11	GBT5781-M10X50-A3L	HEXAGON BOLT		1	
12	GBT6170-M10-A3L	HEXAGON NUT, TYPE-1		1	
13	TE250.212D.4	RELEASE LOWER TIE ROD WELD		1	
14	TE250.212D-04a	RUBBER SEALING PLATE		1	
15	FT65.37.109	THRUST SCREW		2	
16	TE250.212-05	LOW CARBON STEEL WIRE		2	
17	FT200.21.107	CLUTCH FORK		1	
18	GBT882-B10X30-A0P	PIN SHAFT		2	
19	FT300.43.110	PULL ROD REAR FORK		1	
20	TE250.212D.2a	CLUTCH RELEASE ROCKER WELDMENT		1	
21	FT200.21.106	RETURN SPRING OF RELEASE BEARING SEAT		2	
22	TA800.212-02	THRUST BEARING 996713		1	

https://truckmanualshub.com/


TE354.212 CLUTCH CONTROL ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	TE300.212B-01	RELEASE BEARING SEAT		1	
24	GBT93-10-A0P	STANDARD SPRING WASHER		1	

https://truckmanualshub.com/

TE350.22C EXHAUST SYSTEM ASSEMBLY

https://truckmanualshub.com/

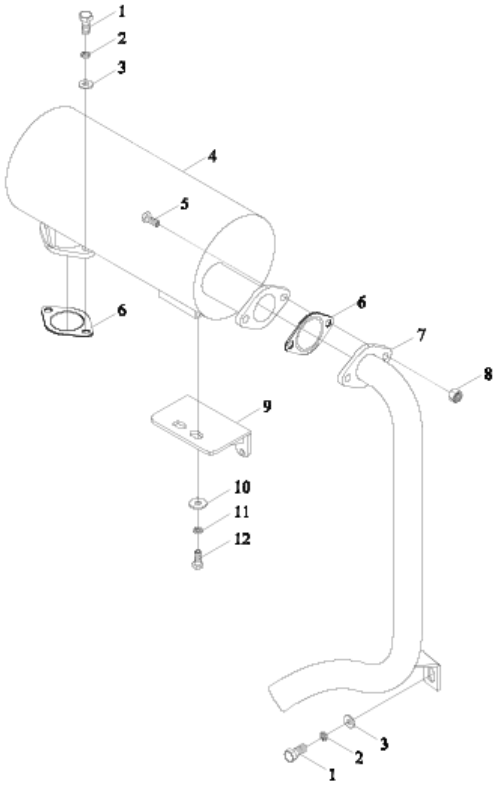

https://truckmanualshub.com/


TE350.22C EXHAUST SYSTEM ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		3	
2	GBT93-10-A0P	STANDARD SPRING WASHER		3	
3	GBT97.1-10-A0P	FLAT WASHER		3	
4	TE350.22C.1	MUFFLE ASSEMBLY		1	
5	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		2	
6	FT250.22C.030	SEAL GASKET UNIT		2	
7	TE350.22B.1	EXHAUST BENDING PIPE WELDMENT		1	
8	SPL6175PT-M10X1.5-8F3	HEXAGON SELF-LOCKING NUT, STYLE 2		2	
9	TE250.22A.2	MUFFLER BRACKET WELDMENT		1	
10	GBT96.1-8-A0P	BIG WASHER		2	
11	GBT93-8-A0P	STANDARD SPRING WASHER		2	
12	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	

https://truckmanualshub.com/

TE254.314G REAR SUPPORTING SEAT ASSEMBLY

https://truckmanualshub.com/

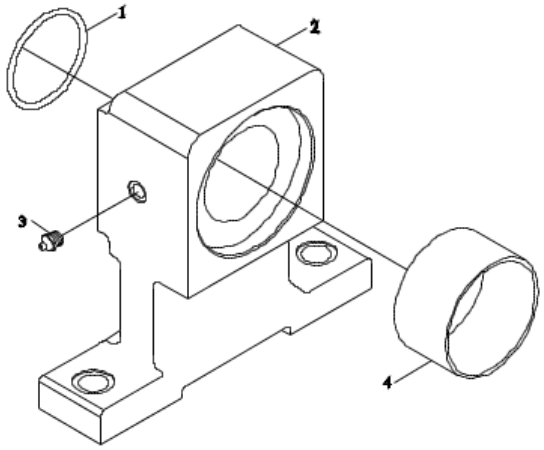

https://truckmanualshub.com/


TE254.314G REAR SUPPORTING SEAT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT3452.1-54.5X3.55G	RUBBER O-SEAL RING		1	
2	TE254.311B.1-01	REAR SUPPORTING SEAT		1	
3	JBT7940.1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
4	FT254.31F.129	SLIDING SHAFT SLEEVE 70X75X40		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-1

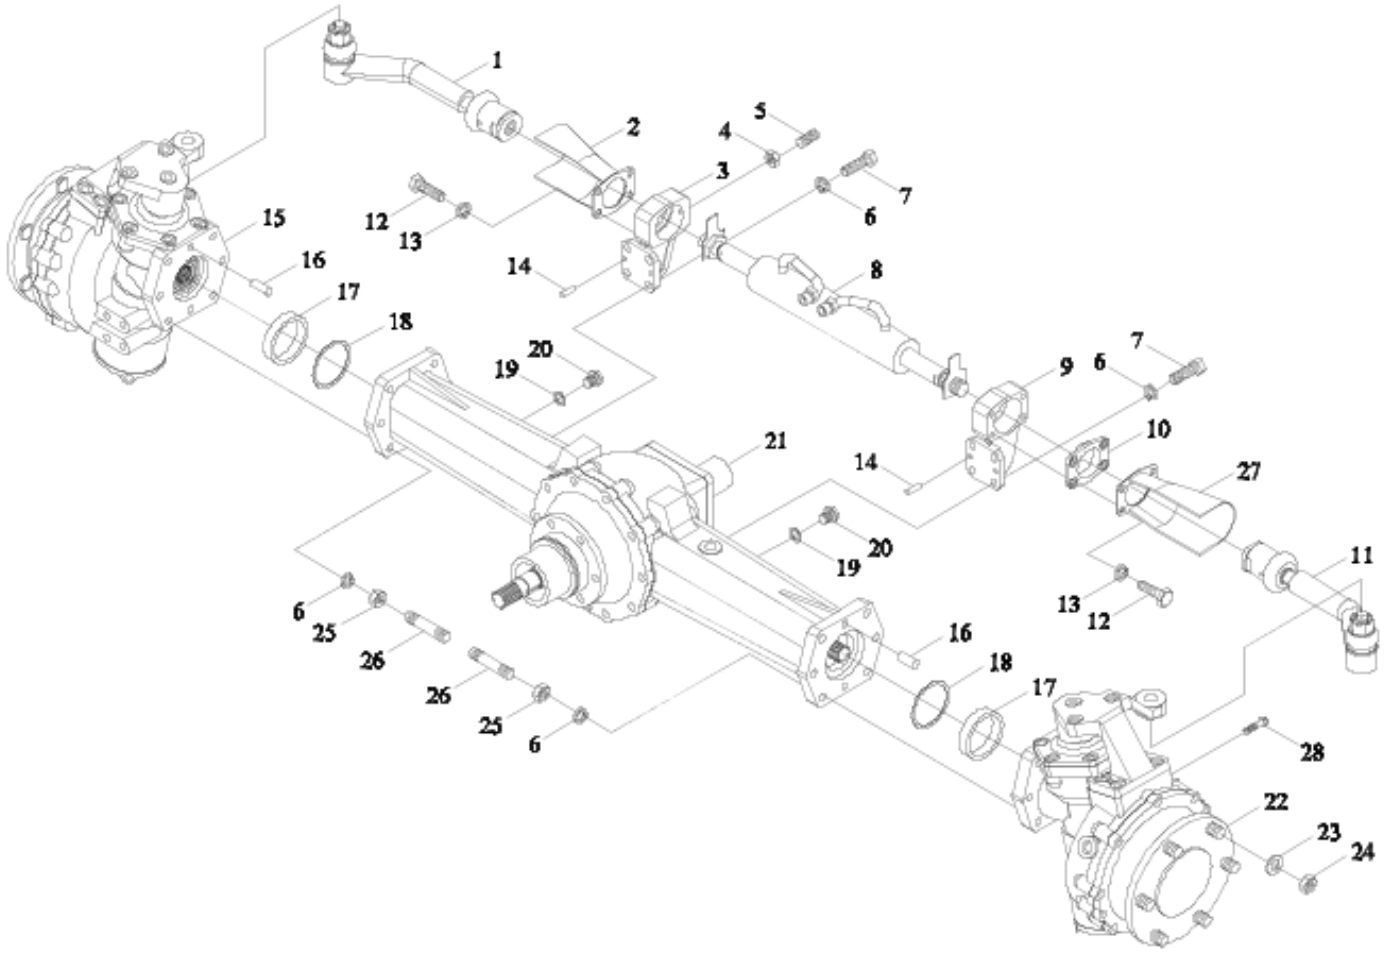

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
1	TE254.311G.5	LEFT STEERING HORIZONTAL PULL ROD ASSEMBLY		1	
2	TE254.311J.6	LEFT OIL CYLINDER BONNET WELDMENT		1	
3	TE254.311G-03	OIL CYLINDER FIXING SEAT II		1	
4	GBT6174-M6-A2L	NUT		1	
5	GBT71-M6X20	SCREW		1	
6	GBT93-10-A0P	SPRING WASHER		12	
7	GBT5783-M10X25-A3L	BOLT		10	
8	TE254.311G.4	HYDRAULIC CYLINDER ASSEMBLY		1	
9	TE254.311G-02	OIL CYLINDER FIXING SEAT		1	
10	TE254.311G-01	SEAT COVER		1	
11	TE254.311G.6	RIGHT STEERING CROSS PULL ROD ASSEMBLY		1	
12	GBT5783-M8X20-A2L	BOLT		8	
13	GBT93-8-A0P	SPRING WASHER		8	
14	GBT119.1-6h8X14-A0P	COLUMN PIN		4	
15	TE254.311G.1	LEFT TRANSMISSION ASSEMBLY		1	
16	GBT119.1-10h8X20-A0P	COLUMN PIN		4	
17	FT254.31F.123	LOCATING SLEEVE		2	
18	FT254.31F.124	ADJUSTING GASKET		999	
19	JBT982-14	WASHER		2	
20	Q617B	HEXAGON SCREW PLUG 14		2	
21	TE254.311G.3	MAIN REDUCER BOX ASSEMBLY		1	
22	TE254.311G.2	RIGHT TRANSMISSION ASSEMBLY		1	
23	GBT97.1-14-A0P	WASHER		12	


https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
24	GBT6176-M14X1.5-A3L	NUT		12	
25	GBT6171-M10X1.25-A2L	NUT		12	
26	GBT899-AM10-M10X1.25X35-8.8-A2 L	STUD		12	
27	TE254.311J.7	RIGHT OIL CYLINDER BONNET WELDMENT		1	
28	TE254.311J-01	LIMIT BOLT		2	

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-2.1

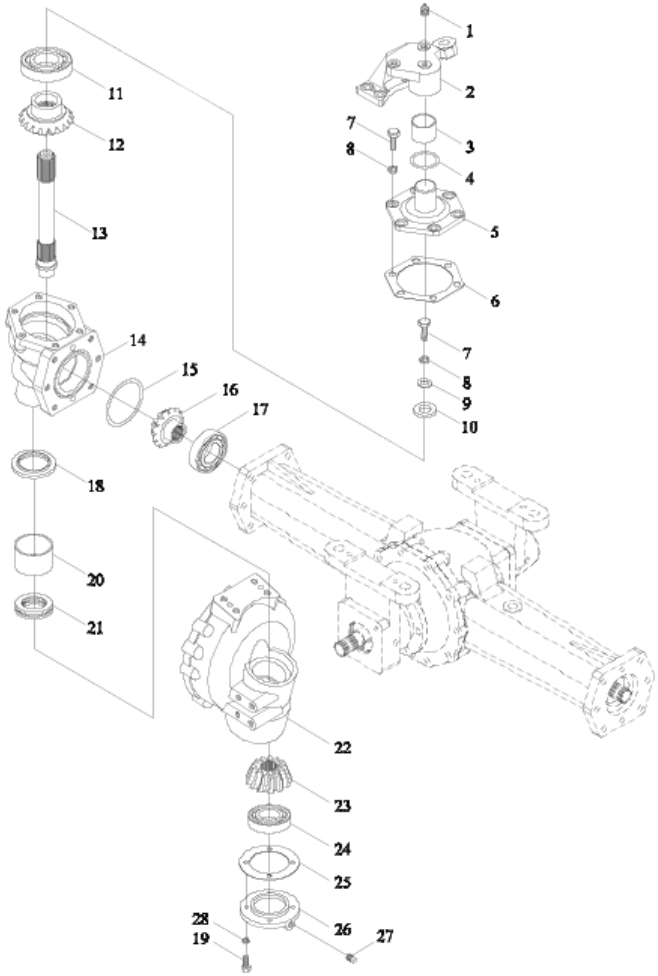

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-2.1

No.	Part No.	Description	Version	QTY.	Remark
1	JBT7940.1-M10X1	OIL CUP		1	
2	TE254.311G.1-01	LEFT STEERING SUPPORT		1	
3	FT254.31F.104	SLIDING SHAFT SLEEVE 35X39X30		1	
4	GBT3452.1-33.5X3.55G	RUBBER O-SEAL RING		1	
5	FT254.31F.105	STEERING SHAFT SEAT		1	
6	FT254.31F.102	SEAL GASKET		999	
7	GBT5783-M10X25-A3L(2)	BOLT		7	
8	GBT93-10-A0P(2)	WASHER		7	
9	GBT96.1-10-A0P	BIG WASHER		1	
10	FT254.31F.106	MAT		1	
11	GBT276-6210	BEARING		1	
12	FT254.31F.108	HALF SHAFT BIG GEAR		1	
13	FT254.31F.119	END PIN SHAFT		1	
14	TE254.311G.1-02	STEERING BURL HOUSING		1	
15	GBT3452.1-80.0X2.65G	RUBBER O-SEAL RING		1	
16	FT254.31F.101	HALF SHAFT PINION		1	
17	GBT276-6207	BEARING		1	
18	FT254.31F.113	DUSTPROOF RING		1	
19	GBT5783-M6X20-A2L	BOLT		4	
20	FT254.31F.122	SLIDING SHAFT SLEEVE 50X55X35		1	
21	GBT301-51106	BEARING		1	
22	FT254.31F.120a	LEFT END HOUSING		1	
23	FT254.31F.118a	END PINION		1	

https://truckmanualshub.com/


TE254.311G FRONT DRIVING AXLE ASSEMBLY-2.1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
24	GBT276-6305	BEARING		1	
25	FT254.31F.117	ADJUSTING GASKET		999	
26	FT254.31F.116	BOTTOM END COVER		1	
27	Q614B01	SQUARE HEAD TAPERED SCREW PLUG		1	
28	GBT93-6	WASHER		4	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-2.2

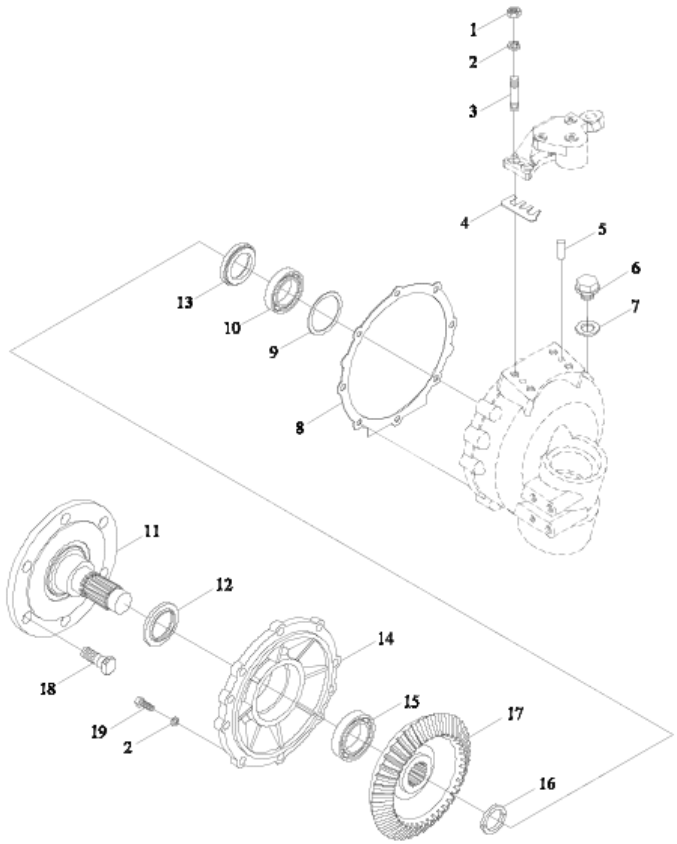


https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-2.2

No.	Part No.	Description	Version	QTY.	Remark
1	GBT6171-M10X1.25-A2L(2)	NUT		4	
2	GBT93-10-A0P(3)	WASHER		12	
3	GBT899-AM10-M10X1.25X30-8.8-A2 L	STUD		4	
4	FT254.31F.107	ADJUSTING GASKET		999	
5	GBT119.2-B8X20-A0P	PIN		2	
6	FT254.31F.175	SCREW PLUG		1	
7	FT254.31F.176	WASHER		1	
8	FT254.31F.114	ADJUSTING GASKET		999	
9	FT254.31F.115	ADJUSTING GASKET		999	
10	GBT276-6206	BEARING		1	
11	FT254.31F.111c	FRONT DRIVING SHAFT		1	
12	FT254.31F.113(2)	DUSTPROOF RING		1	
13	FT254.31F.178c	LOCATING RING		1	
14	FT254.31F.109c	END BIG COVER		1	
15	GBT276-6308	DEEP GROOVE BALL BEARING		1	
16	FT254.31F.112a	STEEL WIRE RETAINER RING		1	
17	FT254.31F.110c	END BIG GEAR		1	
18	FT254.31F.177	BOLT		6	
19	GBT5783-M10X30-A3L	BOLT		8	

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-3.1

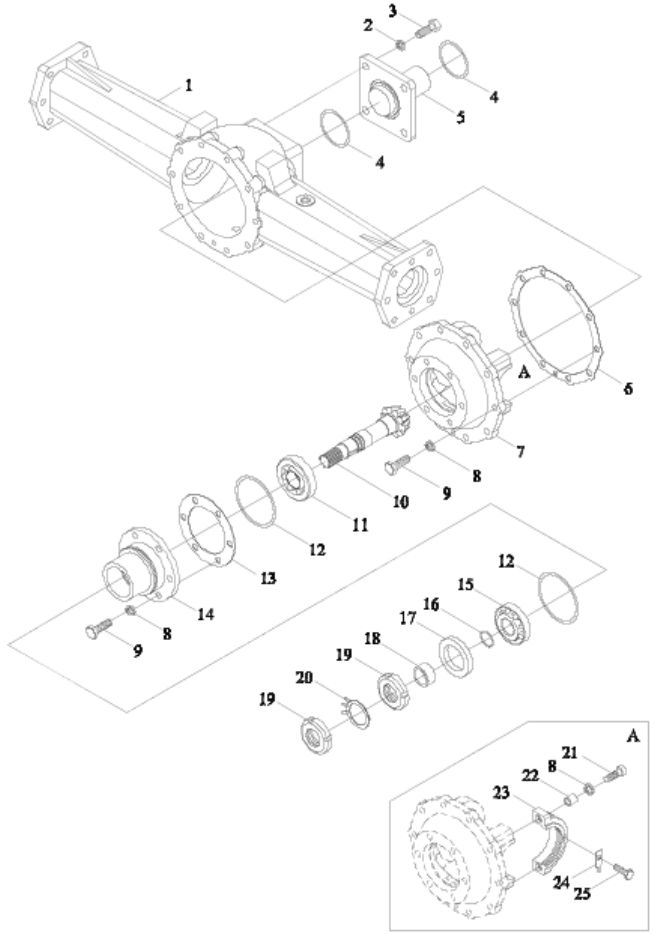

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-3.1

No.	Part No.	Description	Version	QTY.	Remark
1	TE254.311G.3-04	MAIN REDUCER BOX HOUSING		1	
2	GBT93-12-A0P	WASHER		4	
3	GBT5783-M12X30-A3L	BOLT		4	
4	GBT3452.1-63.0X3.55G	O-RING		2	
5	TE254.311G.3-02	FRONT SUPPORT SHAFT		1	
6	FT254.31F.132	ADJUSTING GASKET		999	
7	TE254.311G.3-01	DIFFERENTIAL SEAT		1	
8	GBT93-10-A0P(4)	WASHER		18	
9	GBT5783-M10X30-A3L(2)	BOLT		16	
10	FT254.31F.127	INPUT SPIRAL BEVEL GEAR SHAFT		1	
11	GBT297-31306	BEARING		1	
12	GBT3452.1-73.0X3.55G	O-RING		2	
13	FT254.31F.131	ADJUSTING GASKET		999	
14	FT254.31F.130	REAR SUPPORTING SHAFT		1	
15	GBT297-32006	BEARING		1	
16	GBT3452.1-23.6X2.65G	O-RING		1	
17	GBT9877.1-FB35X55X8B	OIL SEAL		1	
18	FT254.31F.128	OIL SEAL BUSH		1	
19	GBT810-M27X1.5	SMALL ROUND NUT		2	
20	GBT858-27	WASHER		1	
21	GBT70.1-M10X40	SCREW		2	
22	FT254.31F.152	LOCATING SLEEVE		2	
23	FT254.31F.139	BEARING FIXING SLEEVE		1	

https://truckmanualshub.com/


TE254.311G FRONT DRIVING AXLE ASSEMBLY-3.1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
24	FT254.31F.141	THRUST WASHER		1	
25	GBT5783-M8X16-A2L	BOLT		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-3.2

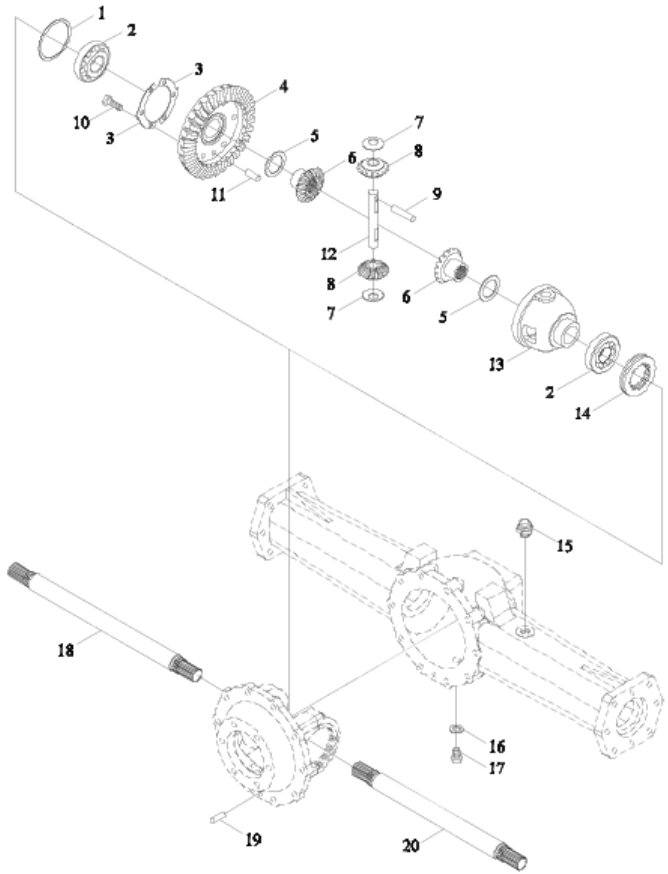

https://truckmanualshub.com/


TE254.311G FRONT DRIVING AXLE ASSEMBLY-3.2

No.	Part No.	Description	Version	QTY.	Remark
1	FT254.31F.134	ADJUSTING GASKET		1	
2	GBT297-32009	BEARING		2	
3	FT254.31F.135	THRUST WASHER		2	
4	FT254.31F.144	BIG BEVEL GEAR		1	
5	FT254.31F.148	FLAT WASHER		2	
6	FT254.31F.143	DIFFERENTIAL BIG GEAR		2	
7	FT254.31F.146	SPHERICAL WASHER		2	
8	FT254.31F.147	PLANET GEAR		2	
9	GBT119.1-8m6X40-A0P	PIN		1	
10	GBT5783-M8X25-A2L	BOLT		6	
11	GBT119.2-8X20-A0P	PIN		1	
12	FT254.31F.145	DIFFERENTIAL PIN SHAFT		1	
13	FT254.31F.149	DIFFERENTIAL HOUSING		1	
14	FT254.31F.140	ADJUSTING NUT		1	
15	TE254.311A.1.1	STEEL BALL VENTILATION PLUG		1	
16	FT304.42.118	WASHER		1	
17	Q617B12	HEXAGON PLUG		1	
18	FT254.31F.142	LEFT HALF SHAFT		1	
19	GBT119.2-8X18-A0P	PIN		1	
20	FT254.31F.151	RIGHT HALF SHAFT		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-4.1

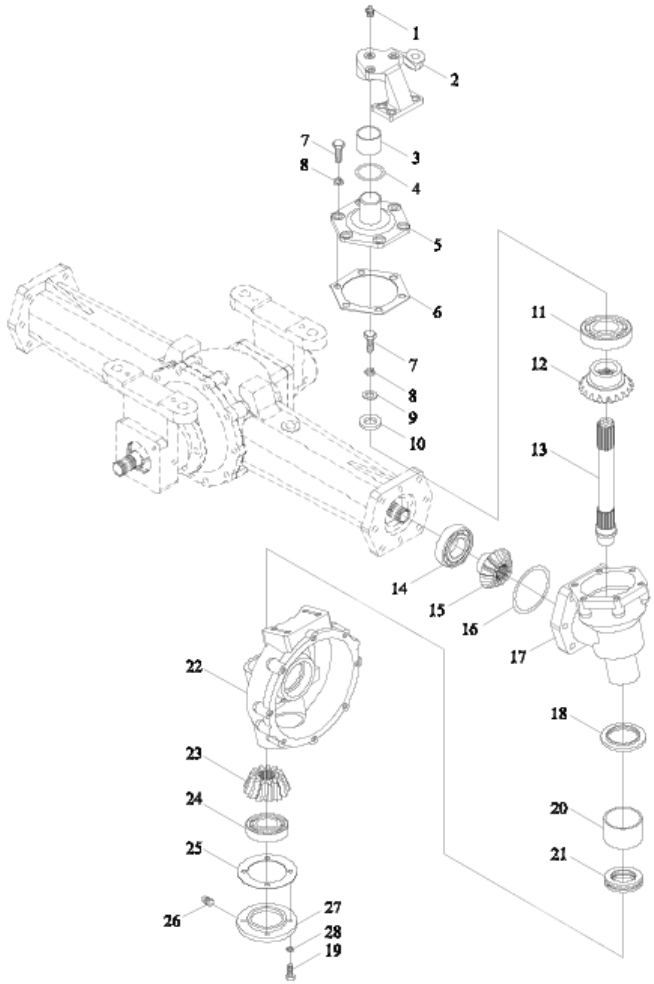

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-4.1

No.	Part No.	Description	Version	QTY.	Remark
1	JBT7940.1-M10X1(2)	OIL CUP		1	
2	TE254.311G.2-01	RIGHT STEERING SUPPORT		1	
3	FT254.31F.104(2)	SLIDING SHAFT SLEEVE 35X39X30		1	
4	GBT3452.1-34.5X3.55G	RUBBER O-SEAL RING		1	
5	FT254.31F.105(2)	STEERING SHAFT SEAT		1	
6	FT254.31F.102(2)	SEAL GASKET		999	
7	GBT5783-M10X25-A3L(3)	BOLT		7	
8	GBT93-10	WASHER		7	
9	GBT96.1-10-A0P(2)	WASHER		1	
10	FT254.31F.106(2)	MAT		1	
11	GBT276-6210(2)	BEARING		1	
12	FT254.31F.108(2)	HALF SHAFT BIG GEAR		1	
13	FT254.31F.119(2)	END PIN SHAFT		1	
14	GBT276-6207(2)	BEARING		1	
15	FT254.31F.101(2)	HALF SHAFT PINION		1	
16	GBT3452.1-80.0X2.65G(2)	RUBBER O-SEAL RING		1	
17	TE254.311G.1-02(2)	STEERING BURL HOUSING		1	
18	FT254.31F.113(3)	DUSTPROOF RING		1	
19	GBT5783-M6X20-A2L(2)	BOLT		4	
20	FT254.31F.122(2)	SLIDING SHAFT SLEEVE 50X55X35		1	
21	GBT301-51106(2)	BEARING		1	

https://truckmanualshub.com/


TE254.311G FRONT DRIVING AXLE ASSEMBLY-4.1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
22	FT254.31F.155a	RIGHT END HOUSING		1	
23	FT254.31F.118a(2)	END PINION		1	
24	GBT276-6305(2)	BEARING		1	
25	FT254.31F.117(2)	ADJUSTING GASKET		999	
26	Q614B01(2)	SQUARE HEAD TAPERED SCREW PLUG		1	
27	FT254.31F.116(2)	BOTTOM END COVER		1	
28	GBT93-6 (2)	WASHER		4	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-4.2

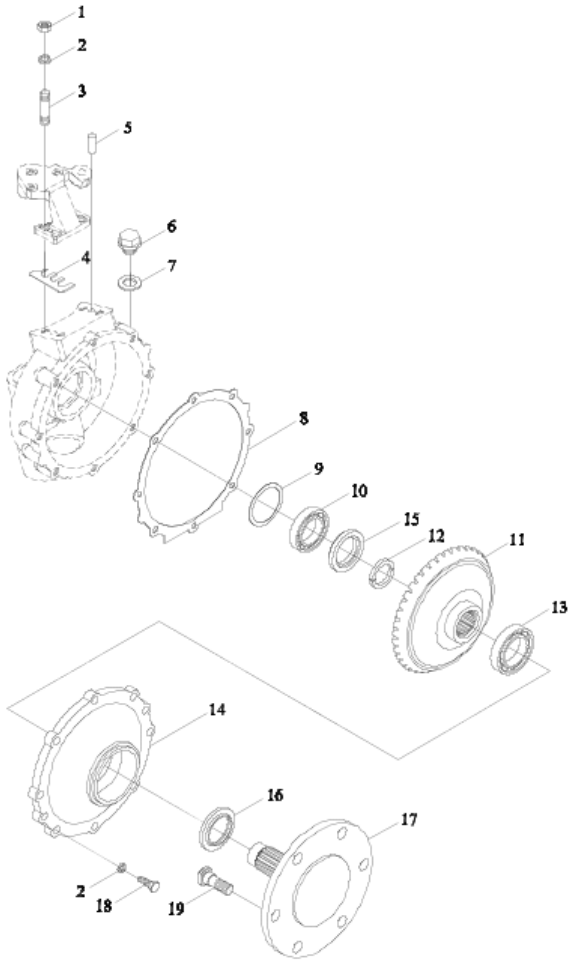

https://truckmanualshub.com/


TE254.311G FRONT DRIVING AXLE ASSEMBLY-4.2

No.	Part No.	Description	Version	QTY.	Remark
1	GBT6171-M10X1.25-A2L(3)	NUT		4	
2	GBT93-10(2)	WASHER		12	
3	GBT899-AM10-M10X1.25X30-A2L	STUD		4	
4	FT254.31F.107(2)	ADJUSTING GASKET		999	
5	GBT119.2-8X20-A0P(2)	COLUMN PIN		2	
6	FT254.31F.175(2)	SCREW PLUG		1	
7	FT254.31F.176(2)	WASHER		1	
8	FT254.31F.114(2)	ADJUSTING GASKET		999	
9	FT254.31F.115(2)	ADJUSTING GASKET		999	
10	GBT276-6206(2)	BEARING		1	
11	FT254.31F.110c(2)	END BIG GEAR		1	
12	FT254.31F.112c	STEEL WIRE RETAINER RING		2	
13	GBT276-6308(2)	DEEP GROOVE BALL BEARING		1	
14	FT254.31F.109c(2)	END BIG COVER		1	
15	FT254.31F.178c(2)	LOCATING RING		1	
16	FT254.31F.113(4)	DUSTPROOF RING		2	
17	FT254.31F.111c(2)	FRONT DRIVING SHAFT		1	
18	GBT5783-M10X30-A3L(3)	BOLT		8	
19	FT254.31F.177(2)	BOLT		6	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-5

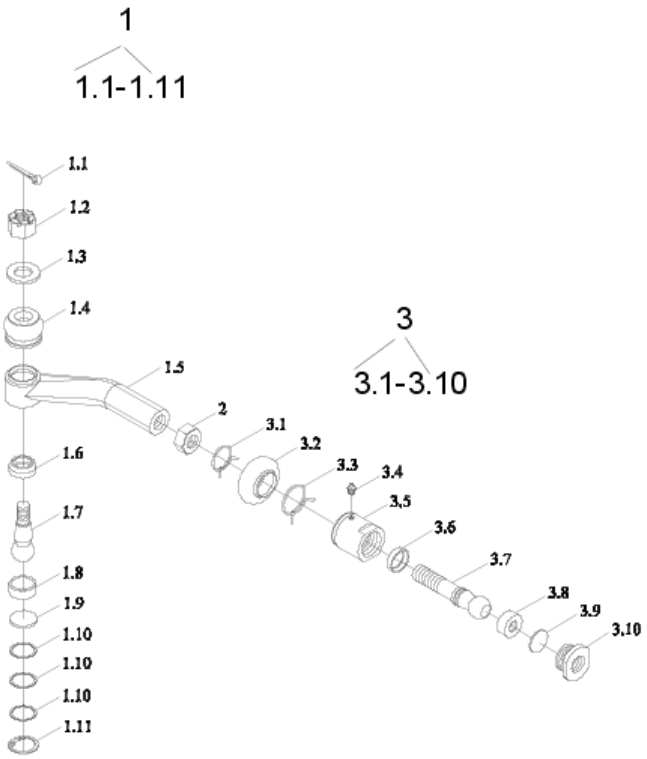


https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-5

No.	Part No.	Description	Version	QTY.	Remark
1	TE254.311G.5.1	LEFT ROCKER JOINT ASSEMBLY		1	
2	GBT6173-M18X1.5-A3L	NUT		1	
3	TE254.311G.5.2	OIL CYLINDER JOINT ASSEMBLY		1	

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-6

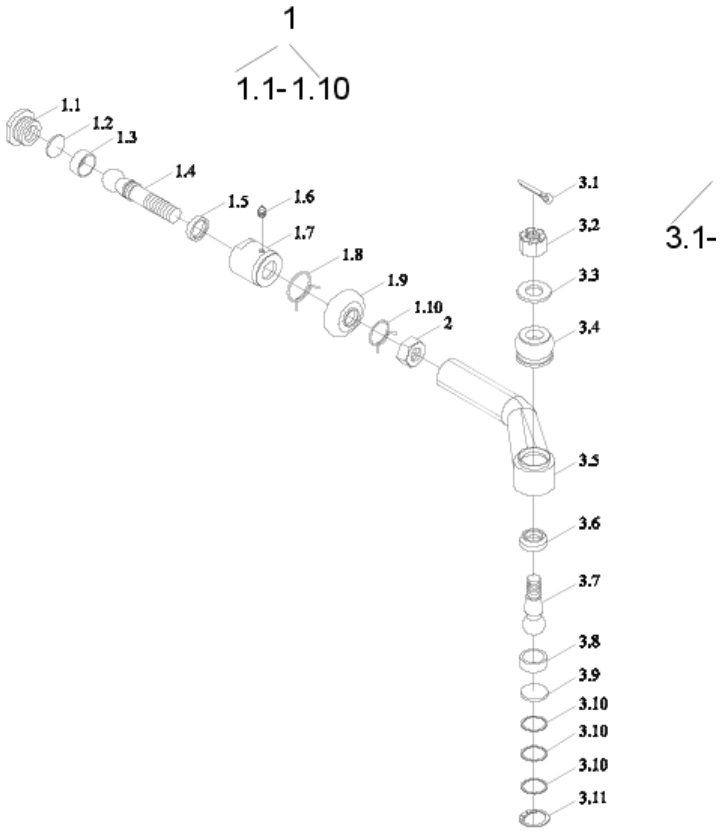

https://truckmanualshub.com/

TE254.311G FRONT DRIVING AXLE ASSEMBLY-6


No.	Part No.	Description	Version	QTY.	Remark
1	TE254.311G.5.2(2)	OIL CYLINDER JOINT ASSEMBLY		1	
2	GBT6173-M18X1.5-A3L(2)	NUT		1	
3	TE254.311G.6.1	RIGHT ROCKER JOINT ASSEMBLY		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TL02312010000K BRACKET ASSEMBLY

https://truckmanualshub.com/

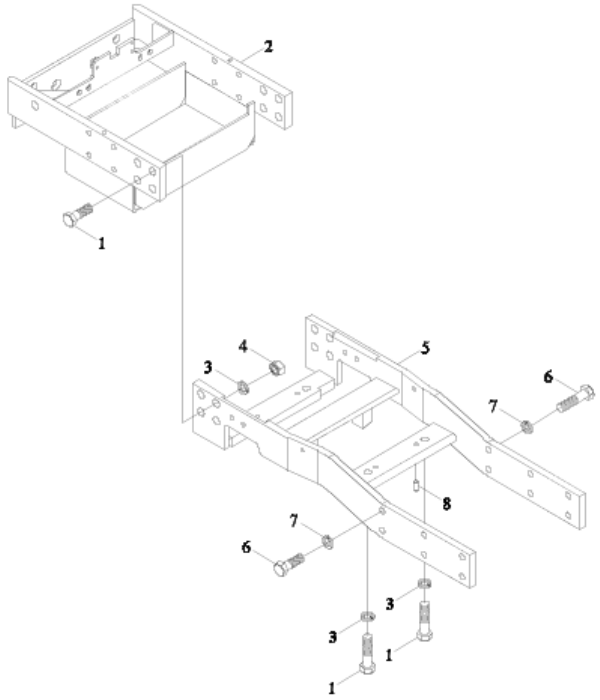

https://truckmanualshub.com/


TL02312010000K BRACKET ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M16X55-8.8-A3L	HEXAGON BOLT		12	
2	TL02312010001K	BATTERY BRACKET WELDMENT		1	
3	GBT93-16-A0P	STANDARD SPRING WASHER		12	
4	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		8	
5	TL02312010002K	HALF-BRACKET WELDMENT		1	
6	GBT5783-M12X35-8.8-A3L	HEXAGON BOLT		12	
7	GBT93-12-A0P	STANDARD SPRING WASHER		12	
8	GBT119.2-8X20-A0P	COLUMN PIN		4	

https://truckmanualshub.com/

TE254.313G FRONT SUPPORT SEAT ASSEMBLY

https://truckmanualshub.com/

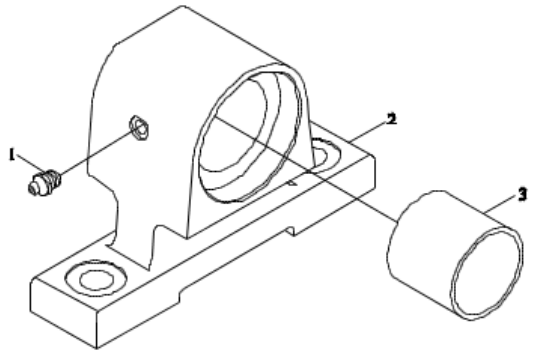

https://truckmanualshub.com/


TE254.313G FRONT SUPPORT SEAT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	JBT7940.1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
2	TE254.313G-01	FRONT SUPPORT SEAT		1	
3	FT254.31F.136	SLIDING SHAFT SLEEVE 45X50X45		1	

https://truckmanualshub.com/

TE354.32F FRONT DRIVING WHEEL ASSEMBLY

https://truckmanualshub.com/

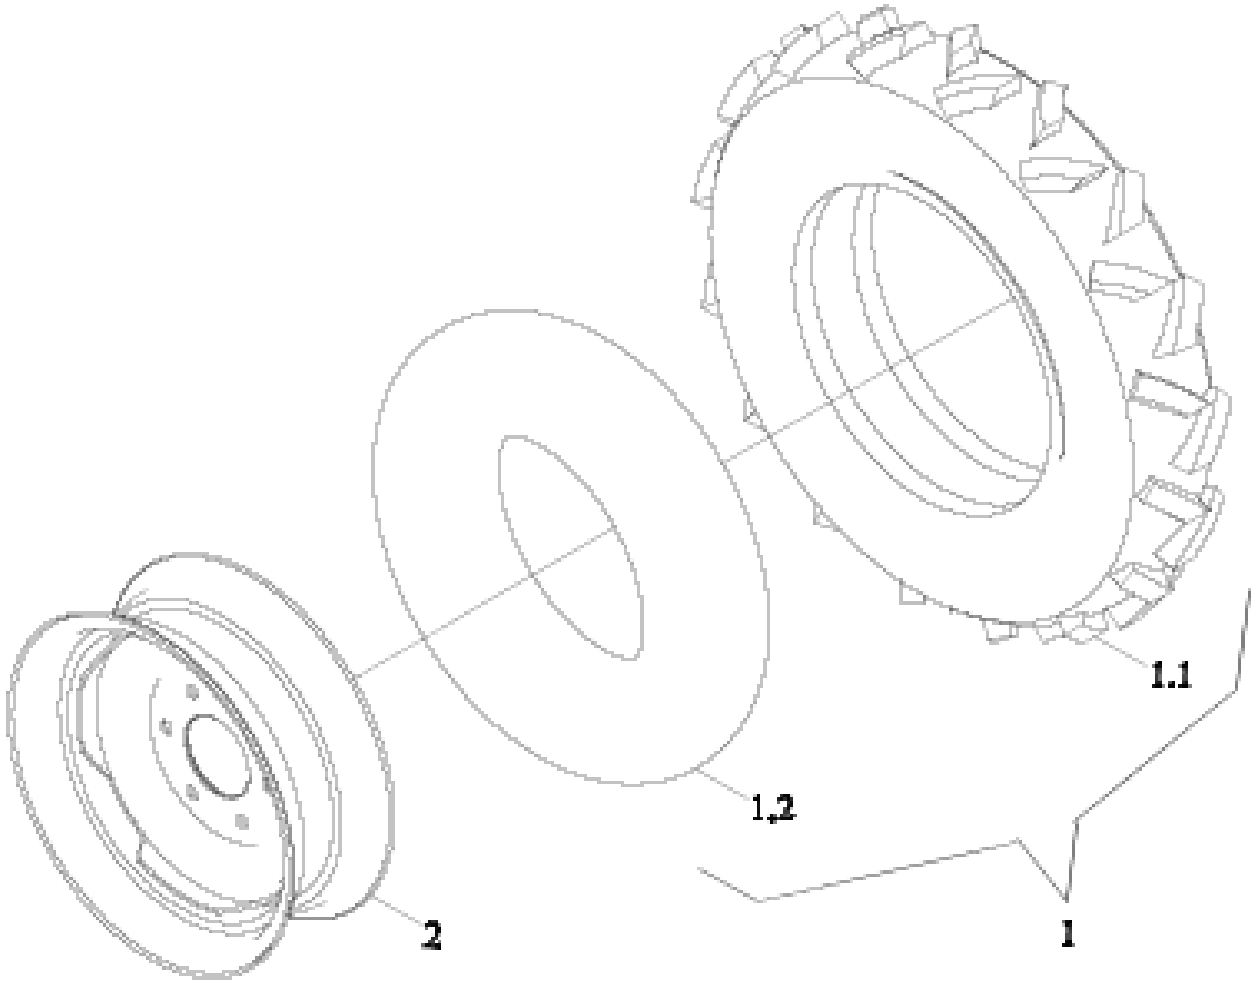

https://truckmanualshub.com/


TE354.32F FRONT DRIVING WHEEL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE354.32F.2	TIRES ASSEMBLY 7.50-16		9	
1.1	GBT2979-7.50-16-6PR-R	OUTER TYRE		9	
1.2	GBT2979-7.50-16-R	DRIVING WHEEL INNER TUBE		1	
2	TE324.32F.1	RIM WELDMENT		1	

https://truckmanualshub.com/

TE354.34F REAR DRIVING WHEEL ASSEMBLY

https://truckmanualshub.com/

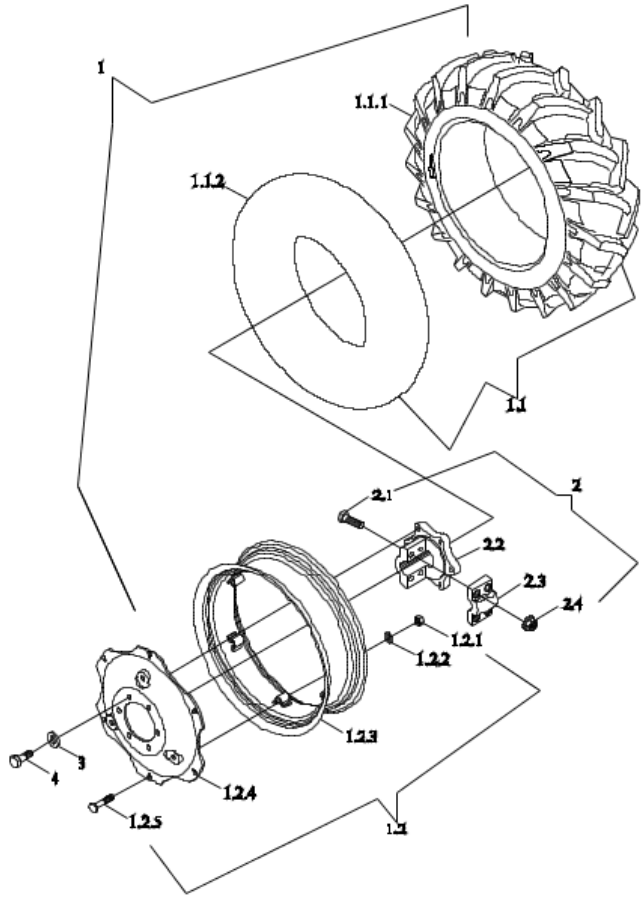

https://truckmanualshub.com/


TE354.34F REAR DRIVING WHEEL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE354.34F.1	REAR WHEEL ASSEMBLY		2	
1.1	TE354.34F.1.2	TIRES ASSEMBLY		2	
1.1.1	GBT2979-12.4-24-6PR-R	DRIVING WHEEL OUTER TUBE		2	
1.1.2	GBT2979-12.4-24-R	DRIVING WHEEL INNER TUBE		2	
1.2	TE354.34F.1.1	RIM SPOKE ASSEMBLY		2	
1.2.1	GBT6171-M16X1.5-8-A3L	HEXAGON NUT, TYPE-1		12	
1.2.2	FT300.34.106	WASHER		12	
1.2.3	TE324.34F.1.1.1	RIM WELDMENT		2	
1.2.4	TE324.34.1.1-01	SPOKE PLATE		2	
1.2.5	FT300.34.102	RIM BOLT		12	
2	TE254.34B.2	HUB INSTALLATION ASSEMBLY		2	
2.1	TE254.34B.2-01	HUB BOLT		8	
2.2	FT250.34.102a	DRIVING WHEEL HUB		2	
2.3	FT250.34.103a	DRIVING WHEEL HUB COVER		2	
2.4	SPL-CO-M14X1.5-10-F3	HEXAGON NUT		8	
3	FT250.34.108	HUB WASHER		12	
4	GBT5786-M14X1.5X35-10.9-A3L	HEXAGON BOLT		12	

https://truckmanualshub.com/

TE300.35 TOWING MECHANISM INSTALLATION ASSEMBLY

https://truckmanualshub.com/

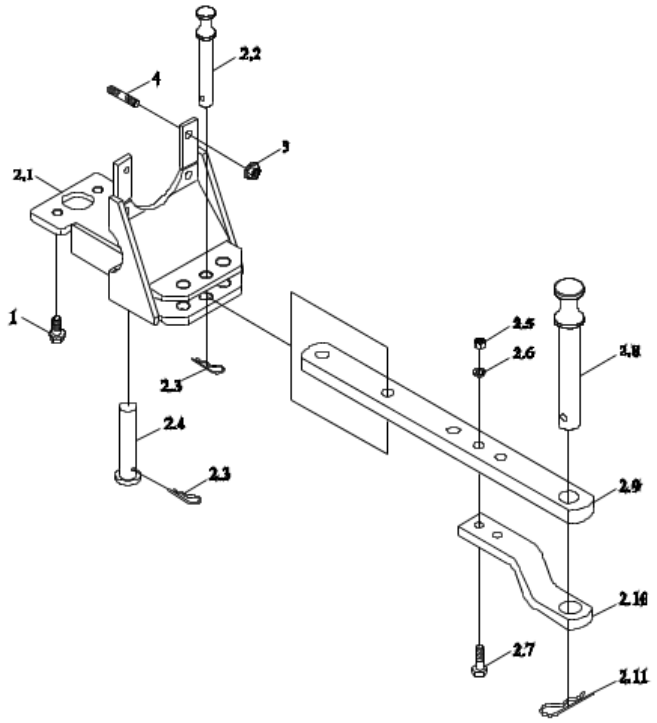


https://truckmanualshub.com/

TE300.35 TOWING MECHANISM INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT16674.1-M16X35-10.9-A3L	HEXAGON FLANGE NUT		2	
2	TE300.35.2	TRACTION DEVICE ASSEMBLY		1	
2.1	TE300.35.2.1	TOWING BRACKET WELDMENT		1	
2.2	FT250.35.103	LIMITING PIN		1	
2.3	FT65.35.103	SPRING LOCK PIN		2	
2.4	FT250.35.101	CONNECTING PIN		1	
2.5	GBT6170-M16-8-A3L	NUT		2	
2.6	GBT93-16	WASHER		2	
2.7	GBT5782-M16X80-8.8-A3L	BOLT		2	
2.8	FT300.35A.105	SWING PIN		1	
2.9	TE300.35.2-01	SWING ROD		1	
2.10	FT300.35A.101	CONNECTING SWING ROD		1	
2.11	FT800.35.112	SPRING LOCK PIN		1	
3	SPL-CO-M12-10-F3	HEXAGON NUT		4	
4	GBT899-GM12-M12X32-10.9-A3L	STUD		4	

https://truckmanualshub.com/

TE354.361 SHUTTLE SHIFT ASSEMBLY-1

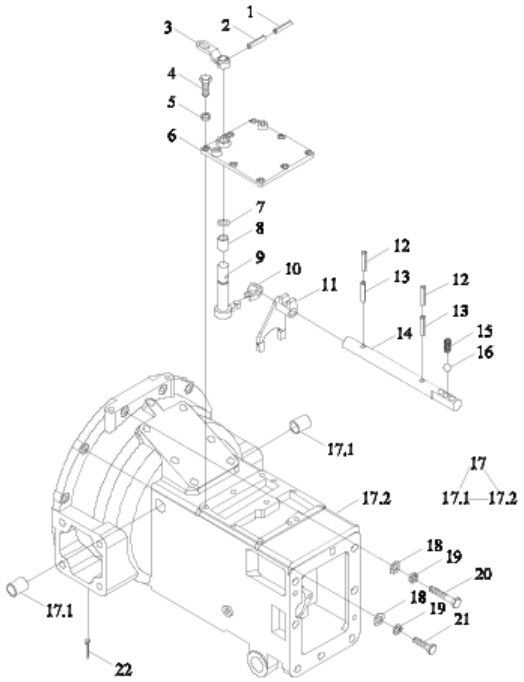

https://truckmanualshub.com/

TE354.361 SHUTTLE SHIFT ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
1	GBT879.1-4X28	PIN		1	
2	GBT879.1-6X28	PIN		1	
3	TE250.361M.2	CONTROL ROCKER WELDMENT		1	
4	GBT5783-M8X25-8.8-A2L	BOLT		8	
5	GBT93-8-A0P	WASHER		8	
6	TE250.361M-02	SHUTTLE SHIFT UPPER COVER		1	
7	GBT3452.1-13.2X2.65G	O-RING		1	
8	TE250.361M-05	LIMITING SLEEVE		1	
9	TE250.361M-01	SHUTTLE SHIFT ROCKER ARM		1	
10	TE250.361M-03	SHUTTLE GEARSHIFT DIAL HEAD		1	
11	TE250.361F-27	SHUTTLE SHIFT FORK		1	
12	GBT879.1-3X26	PIN		2	
13	GBT879.1-5X26	PIN		2	
14	TE250.361M-04	SHUTTLE SHIFT FORK SHAFT		1	
15	FT250.37.139	FORK SHAFT LOCKING SPRING		1	
16	GBT308-8-G100-b	STEEL BALL		1	
17	TE250.361M.1	CLUTCH HOUSING UNIT		1	
17.1	FT250.36.103	ROCKER SHAFT LONG BUSH		2	
17.2	TE250.361M.1-01a	CLUTCH HOUSING		1	
18	GBT97.1-10-A0P	FLAT WASHER		12	
19	TE250.361D-01	WASHER		12	
20	GBT5782-M10X55-8.8-A2L	BOLT		4	


https://truckmanualshub.com/

TE354.361 SHUTTLE SHIFT ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
21	GBT5783-M10X35-8.8-A3L	BOLT		8	
22	GBT91-4X20-A0P	PIN		1	

https://truckmanualshub.com/

TE354.361 SHUTTLE SHIFT ASSEMBLY-2

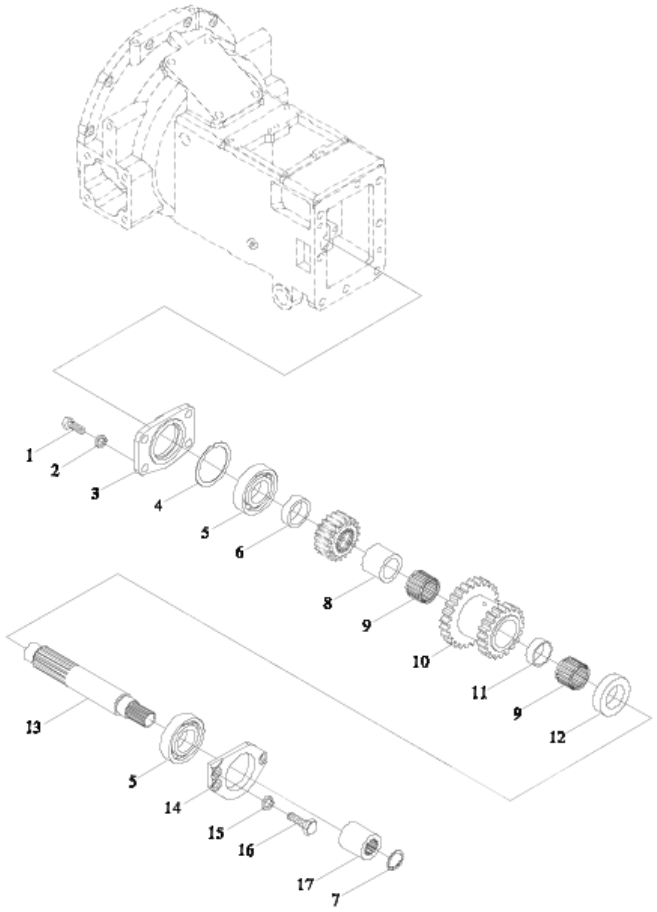


https://truckmanualshub.com/

TE354.361 SHUTTLE SHIFT ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M10X25-8.8-A3L	BOLT		4	
2	TE250.361D-01(2)	WASHER		4	
3	TE250.361F-04	BEARING PRESSURE COVER		1	
4	TE250.361F-21	ADJUSTING WASHER		按需	
5	GBT276-6305	BEARING		2	
6	TE250.361F-05	SPACER BUSH		1	
7	GBT893.1-18	RETAINER RING		1	
8	TE250.361F-25	SPACER BUSH I		1	
9	JBT7918-K30X35X27	ROLLER NEEDLE BEARING		2	
10	TE250.361F-09	SHUTTLE SHIFT DRIVEN DUAL GEAR		1	
11	FT250.37.139(2)	SHORT BUSH		1	
12	TE250.361F-26	SPACER BUSH II		1	
13	TE250.361F-12	SHUTTLE SHIFT MIDDLE SHAFT		1	
14	TE250.361F-22	BEARING PRESSURE COVER		1	
15	GBT93-8-A0P(2)	WASHER		3	
16	GBT5783-M8X20-8.8-A2L	BOLT		3	
17	TE250.361F-13	SPLINE BUSH		1	

https://truckmanualshub.com/

TE354.361 SHUTTLE SHIFT ASSEMBLY-3

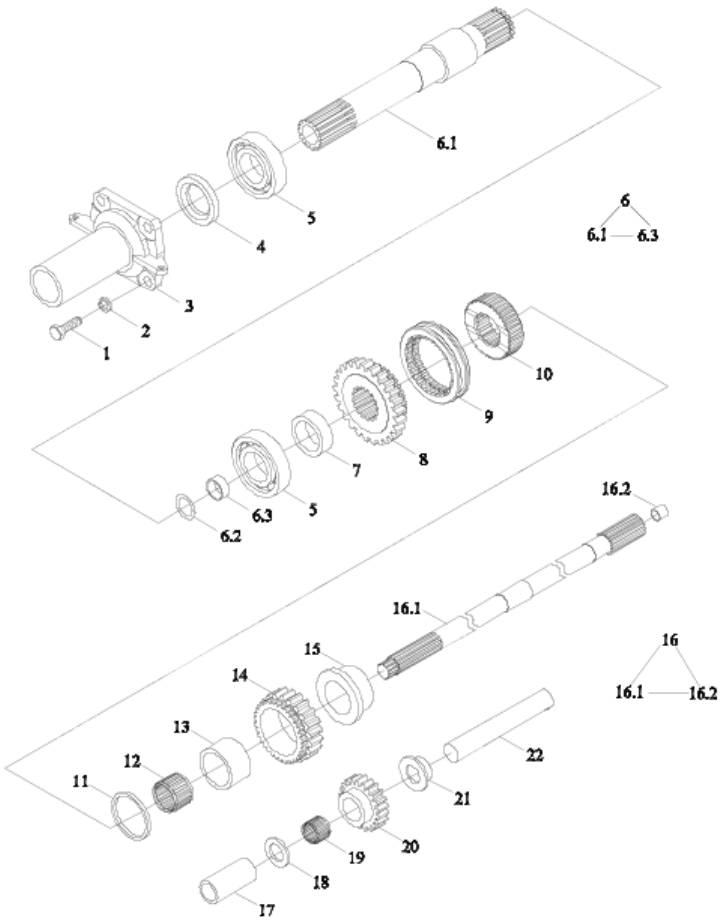

https://truckmanualshub.com/

TE354.361 SHUTTLE SHIFT ASSEMBLY-3

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M10X25-8.8-A3L(2)	BOLT		4	
2	TE250.361D-01(3)	WASHER		4	
3	TE250.361F-01	RELEASE BEARING SEAT SUPPORT		1	
4	GBT9877.1-FB35X55X8D	OIL SEAL		1	
5	GBT276-6207	BEARING		2	
6	TE300.361.1	SHUTTLE SHIFT DRIVING SHAFT ASSEMBLY		1	
6.1	TE300.361.1-01	SHUTTLE SHIFT DRIVING SHAFT		1	
6.2	GBT3452.1-20.0X1.80G	RUBBER O-SEAL RING		1	
6.3	TE250.361F.2-02	SLEEVE		1	
7	TE250.361F-29	DRIVING GEAR SPACER BUSH		1	
8	TE250.361D-05	SHUTTLE SHIFT DRIVING GEAR		1	
9	TE250.361D-24	SHIFT COLLAR		1	
10	TE250.361D-10	MESH GEAR SEAT		1	
11	TE250.361D-13	NEEDLE SPACER BUSH		1	
12	QLWZB120-K42X48X21	ROLLER NEEDLE BEARING		1	
13	TE250.361F-32	DRIVEN GEAR BUSH		1	
14	TE250.361D-09	SHUTTLE SHIFT DRIVEN GEAR		1	
15	TE250.361F-28	DRIVEN GEAR SPACER		1	
16	TE300.361.2	PTO CLUTCH SHAFT ASSEMBLY		1	
16.1	TE300.361.2-01	PTO CLUTCH SHAFT		1	
16.2	FT250.36B.128	SHAFT SLEEVE		1	
17	TE250.361F-31	IDLER SPACER II		1	
18	TE250.361D-01(4)	WASHER		1	

https://truckmanualshub.com/

TE354.361 SHUTTLE SHIFT ASSEMBLY-3 (cont'd.)


No.	Part No.	Description	Version	QTY.	Remark
19	QLWZB120-K20X26X24	ROLLER NEEDLE BEARING		1	
20	TE250.361F-10	SHUTTLE SHIFT IDLE WHEEL		1	
21	TE250.361F-30	IDLER SHAFT SPACER BUSH		1	
22	TE250.361F-14	SHUTTLE SHIFT IDLE SHAFT		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE250.362M SHUTTLE SHIFT CONTROL MECHANISM ASSEMBLY

https://truckmanualshub.com/

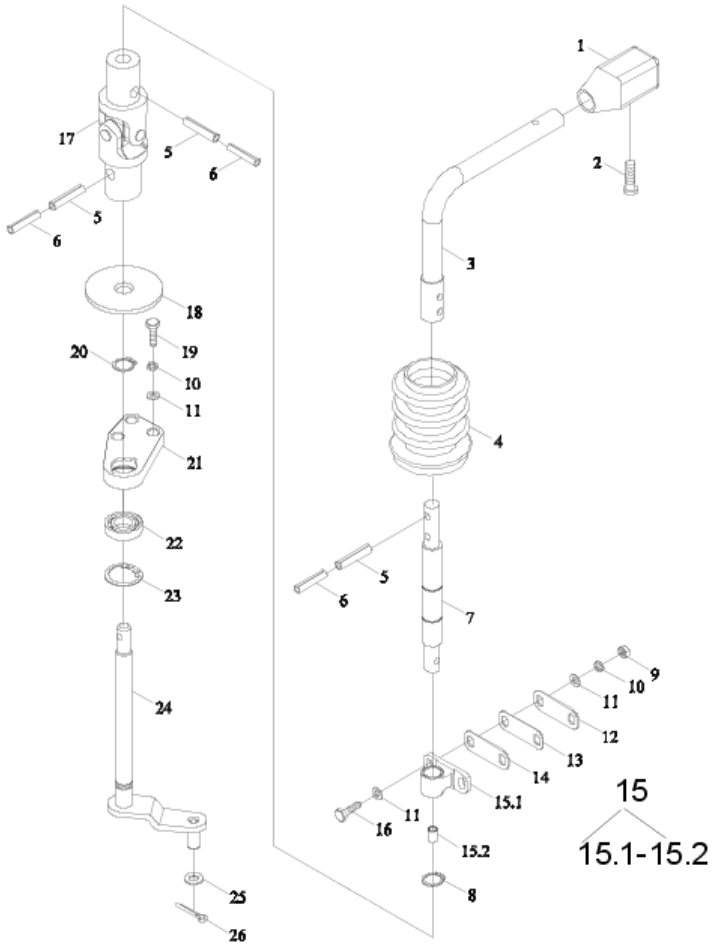

https://truckmanualshub.com/

TE250.362M SHUTTLE SHIFT CONTROL MECHANISM ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.362D-04	PLASTIC HANDLE		1	
2	GBT818-M5X16-A2L	CROSS SCREW		1	
3	TE250.362M.2	GEARSHIFT LEVER WELDMENT		1	
4	TE250.362D-01	DUSTPROOF RING		1	
5	GBT879.1-6X18	SPRING COLUMN PIN		4	
6	GBT879.1-3.5X18	SPRING COLUMN PIN		4	
7	TE250.362M-02b	MIDDLE ROD		1	
8	GBT894.1-16	CIRCLIP FOR SHAFT		1	
9	GBT6170-M10-A3L	HEXAGON NUT, TYPE-1		2	
10	GBT93-10-A0P	STANDARD SPRING WASHER		5	
11	GBT97.1-10-A0P	FLAT WASHER		4	
12	TE250.362M-06	ADJUSTING WASHER		999	
13	TE250.362M-05	ADJUSTING WASHER		999	
14	TE250.362M-04	ADJUSTING WASHER		999	
15	TE250.362M.3	GUIDE SLEEVE UNIT		1	
15.1	TE250.362M.3-01	GUIDE SLEEVE		1	
15.2	TE250.362M.3-02	SLEEVE		1	
16	GBT5783-M10X35-8.8-A3L	HEXAGON BOLT		2	
17	TE250.362D.2	UNIVERSAL JOINT ASSEMBLY		1	
18	TE250.362M-03	SEAL BLOCK		1	
19	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		3	
20	GBT894.1-15	CIRCLIP FOR SHAFT		1	
21	TE250.362M-01a	GUIDE SLEEVE		1	

https://truckmanualshub.com/


TE250.362M SHUTTLE SHIFT CONTROL MECHANISM ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
22	GBT276-6002-2RS	DEEP GROOVE BALL BEARING		1	
23	GBT893.1-32	CIRCLIPS FOR HOLE		1	
24	TE250.362M.1a	CONTROL ROD WELDMENT		1	
25	GBT848-12-A0P	SMALL WASHER		1	
26	GBT91-2.5X20-A0P	SPLIT PIN		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.371 TRANSMISSION CASE ASSEMBLY-1

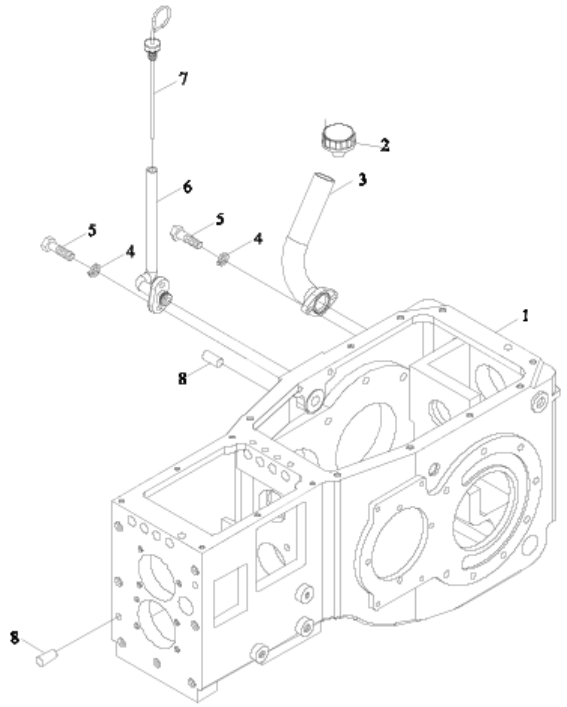


https://truckmanualshub.com/

TE354.371 TRANSMISSION CASE ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
1	TE354.371.1-01a	TRANSMISSION CASE SHELL		1	
2	TB604.384.3.2	PLUG SCREW		1	
3	TE250.371F.1.1	OIL FILLING PIPE WELDMENT		1	
4	GBT93-8-A0P	STANDARD SPRING WASHER		4	
5	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		4	
6	TE250.371F.1.2	OIL DIPSTICK PIPE WELDMENT		1	
7	TE250.371F.1.3	DIPSTICK ASSEMBLY		1	
8	GBT119.1-10m6X26-A0P	COLUMN PIN		4	

https://truckmanualshub.com/

TE354.371 TRANSMISSION CASE ASSEMBLY-2

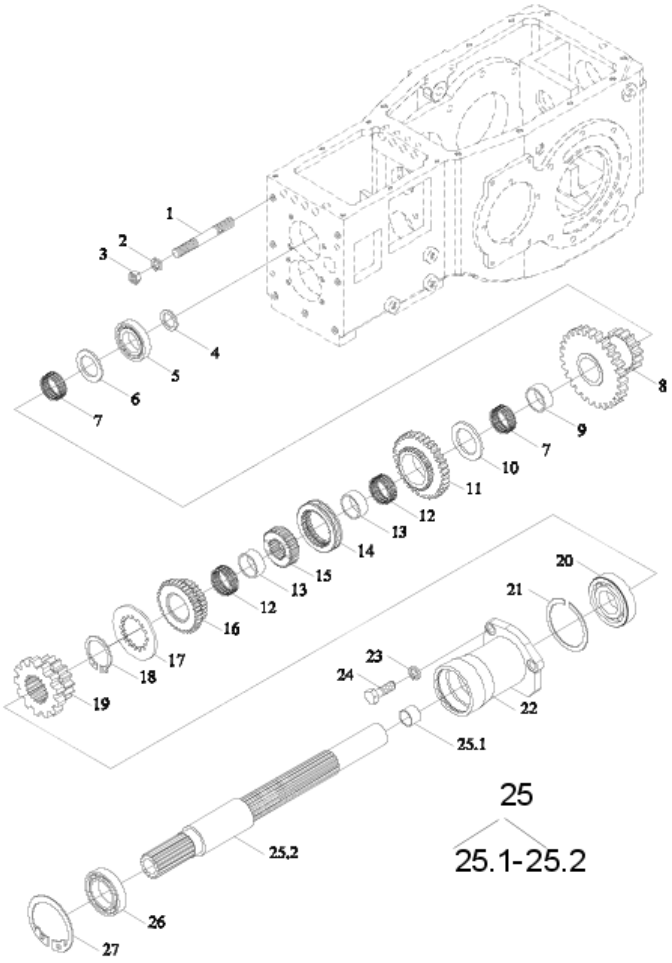

https://truckmanualshub.com/

TE354.371 TRANSMISSION CASE ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
1	GBT898-AM14-M14X1.5X40-8.8-A3L	DOUBLE END STUDS		7	
2	GBT93-14-A0P	STANDARD SPRING WASHER		7	
3	GBT6171-M14X1.5-8-A3L	HEXAGON NUT, TYPE-1		7	
4	FT250.37A.272	THRUST RING		1	
5	GBT283-NJ206E	COLUMN ROLLER BEARING		1	
6	FT250.37A.147	1ST SHAFT ASSISTANT GEARSHIFT SPACER RING		1	
7	JBT7918-K30X35X27	NEEDLE AND CARRIER COMBINATION		2	
8	FT250.37.146	HIGH AND LOW FIXING GEAR		1	
9	FT250.37.139	SHORT SPACER		1	
10	FT250.37.138	IV DRIVING GEAR RETAINING RING		1	
11	TE300.371-08	IV DRIVING GEAR		1	
12	QLWZB120-K42X48X22	ROLLER NEEDLE BEARING		2	
13	FT250.37.134	GEAR SLIDING SLEEVE		2	
14	TE300.371-09	SHIFT COLLAR		1	
15	FT250.37.135	MESHING SEAT		1	
16	TE300.371-07	Ⅲ DRIVING GEAR		1	
17	FT250.37.133	RETAINING RING OF 3RD DRIVING GEAR		1	
18	GBT894.1-34	CIRCLIP FOR SHAFT		1	
19	TE300.371-05	I-II SLIDING GEAR		1	
20	GBT276-6207N	DEEP GROOVE BALL BEARING		1	
21	GBT305-72-78.6	THRUST RING		1	
22	TE250.371B-04	BEARING COVER		1	
23	GBT93-10-A0P	STANDARD SPRING WASHER		3	

https://truckmanualshub.com/


TE354.371 TRANSMISSION CASE ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
24	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		3	
25	TE300.371.2	1ST SHAFT ASSEMBLY		1	
25.1	FT250.37A.137	SHAFT SLEEVE		1	
25.2	TE300.371.2-01	1ST SHAFT		1	
26	GBT276-6007	DEEP GROOVE BALL BEARING		1	
27	GBT893.1-62	CIRCLIPS FOR HOLE		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.371 TRANSMISSION CASE ASSEMBLY-3

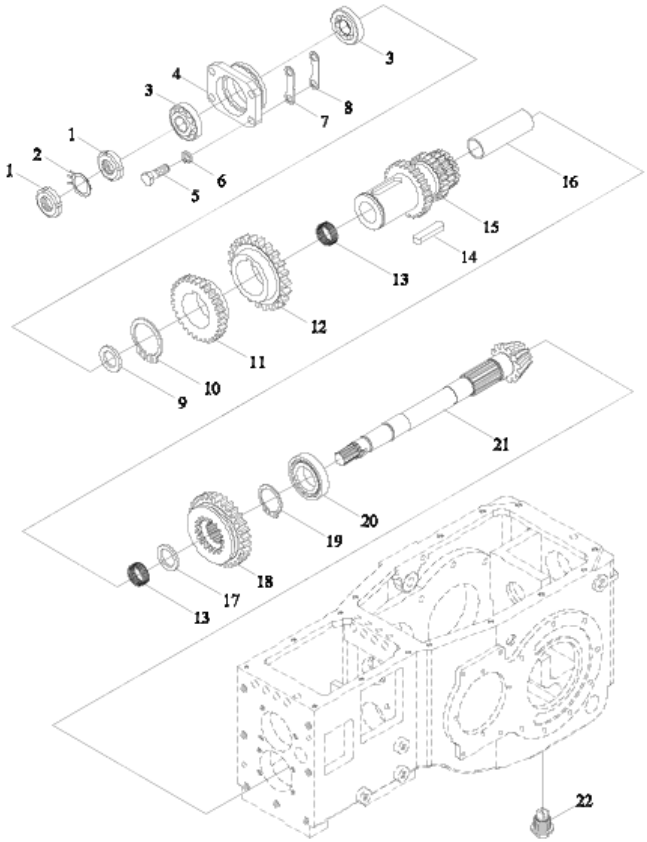

https://truckmanualshub.com/


TE354.371 TRANSMISSION CASE ASSEMBLY-3

No.	Part No.	Description	Version	QTY.	Remark
1	GBT812-M27X1.5	ROUND NUT		2	
2	GBT858-27	THRUST WASHER FOR ROUND NUT		1	
3	GBT297-30206	TAPERED ROLLER BEARING		2	
4	FT250.37.121	SHAFT-2 FRONT BEARING SEAT		1	
5	GBT5783-M10X25-8.8-A3L(2)	HEXAGON BOLT		4	
6	GBT93-10-A0P(2)	STANDARD SPRING WASHER		4	
7	FT250.37.122	SHAFT-2 ADJUSTING WASHER		999	
8	FT250.37.123	SHAFT-2 ADJUSTING WASHER		999	
9	FT250.37.110a	SHAFT-2 FRONT THRUST RING		1	
10	GBT894.1-55	CIRCLIP FOR SHAFT		1	
11	TE300.371-03	Ⅱ DRIVEN GEAR		1	
12	TE300.371-04	I DRIVEN GEAR		1	
13	JBT7918-K32X37X27	NEEDLE AND CARRIER COMBINATION		2	
14	GBT1096-14X9X56	FLAT KEY		1	
15	TE300.371-06a	III-IV DRIVEN GEAR		1	
16	FT250.37.105a	LONG SPACER BUSH		1	
17	FT250.37.104a	SHAFT-2 REAR THRUST RING		1	
18	FT250.37.103a	HIGH AND LOW GEAR FIXING GEAR		1	
19	GBT894.1-38	CIRCLIP FOR SHAFT		1	
20	TE250.371C-02	BEARING		1	
21	TE300.371-01a	SECOND SHAFT		1	
22	FT65.38.026	OIL PLUG ASSEMBLY		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.372A REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-1

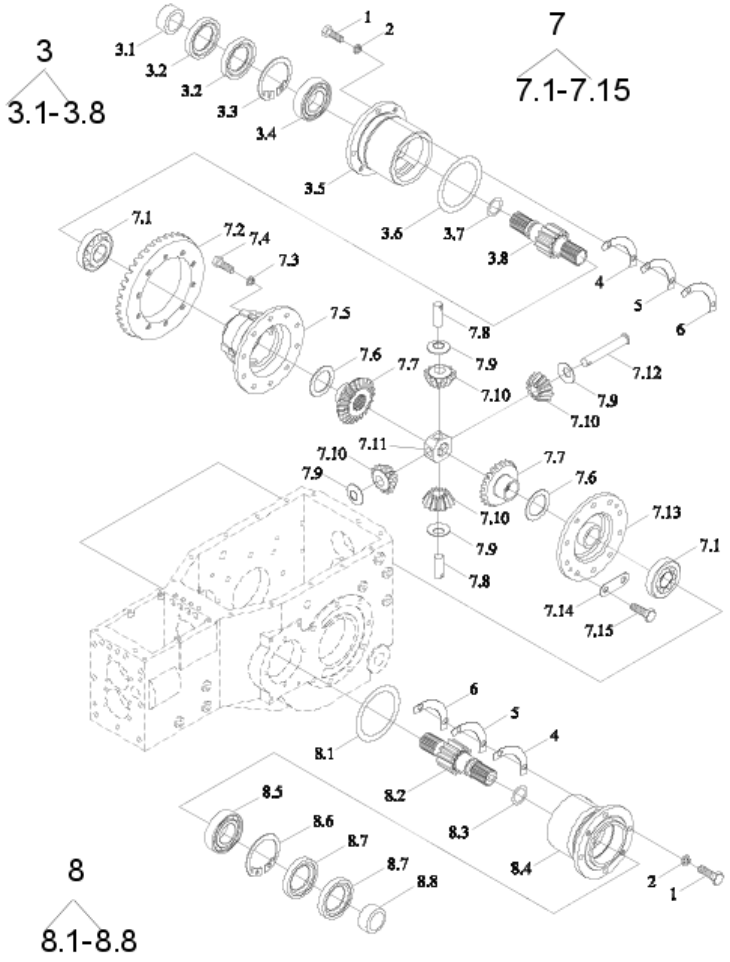

https://truckmanualshub.com/

TE354.372A REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-1

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		8	
2	GBT93-10-A0P	WASHER		8	
3	TE354.372A.2	RIGHT SHORT HALF SHAFT ASSEMBLY		1	
3.1	FT250.37.208	OIL SEAL COLLAR		1	
3.2	GBT9877.1-FB52X80X8D	SEAL RING		2	
3.3	GBT893.1-80	RETAINER RING		1	
3.4	GBT276-6307	DEEP GROOVE BALL BEARING		1	
3.5	TE354.372A.2-01	RIGHT BEARING SEAT		1	
3.6	GBT3452.1-103X3.55G	O-RING		1	
3.7	GBT3452.1-28.0X3.55G	RUBBER O-SEAL RING		1	
3.8	TE300.372.1-02	FINAL TRANSMISSION DRIVING GEAR		1	
4	FT250.37.204	ADJUSTING WASHER		999	
5	FT250.37.205	ADJUSTING WASHER		999	
6	FT250.37.206	ADJUSTING WASHER		999	
7	TE300.372.2	DIFFERENTIAL ASSEMBLY		1	
7.1	GBT297-32011	TAPERED ROLLER BEARING		2	
7.2	TE300.372.2-07	DRIVEN SPIRAL BEVEL GEAR		1	
7.3	GBT93-8-A0P	STANDARD SPRING WASHER		3	
7.4	FT250.37.201	FIXING SCREW		3	
7.5	TE300.372.2-05	DIFFERENTIAL HOUSING		1	
7.6	FT250.37.203	HALF SHAFT GEAR WASHER		2	
7.7	FT250.37.202	HALF SHAFT GEAR		2	
7.8	TE300.372.2-09	SHORT PLANETARY GEAR SHAFT		2	


https://truckmanualshub.com/

TE354.372A REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
7.9	FT250.37.199	PLANET GEAR WASHER		4	
7.10	FT250.37.200	PLANET GEAR		4	
7.11	TE300.372.2-08	CENTRAL RING		1	
7.12	FT250.37.198	PLANET GEAR SHAFT		1	
7.13	TE300.372.2-06	DIFFERENTIAL COVER		1	
7.14	TE300.372.2-03	LOCK WASHER		5	
7.15	GBT5786-M10X1.25X35-8.8-A2L	HEXAGON BOLT		10	
8	TE354.372A.1	LEFT SHORT HALF SHAFT ASSEMBLY		1	
8.1	GBT3452.1-103X3.55G(2)	O-RING		1	
8.2	TE300.372.1-02(2)	FINAL TRANSMISSION DRIVING GEAR		1	
8.3	GBT3452.1-28.0X3.55G(2)	RUBBER O-SEAL RING		1	
8.4	TE354.372A.1-01	LEFT BEARING SEAT		1	
8.5	GBT276-6307(2)	DEEP GROOVE BALL BEARING		1	
8.6	GBT893.1-80(2)	RETAINER RING		1	
8.7	GBT9877.1-FB52X80X8D(2)	SEAL RING		2	
8.8	FT250.37.208(2)	OIL SEAL COLLAR		1	

https://truckmanualshub.com/

TE354.372A REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-2

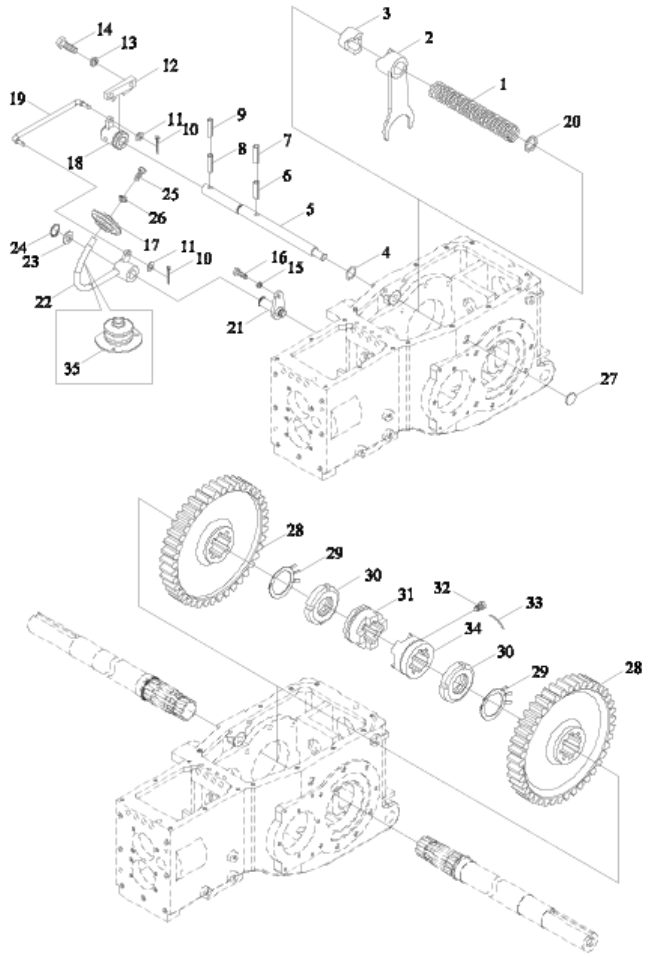

https://truckmanualshub.com/

TE354.372A REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-2

No.	Part No.	Description	Version	QTY.	Remark
1	FT250.37.263	DIFFERENTIAL LOCK SPRING		1	
2	TE354.372-02	DIFFERENTIAL LOCK FORK		1	
3	TE250.372F-05	DIFFERENTIAL LOCK DIAL BLOCK		1	
4	GBT3452.1-15.0X2.65G	O-RING		1	
5	TE354.372-03	DIFFERENTIAL LOCK FORK SHAFT		1	
6	GBT879.1-8X40	SPRING COLUMN PIN		1	
7	GBT879.1-5X40	SPRING COLUMN PIN		1	
8	GBT879.1-8X35	SPRING COLUMN PIN		1	
9	GBT879.1-5X35	SPRING COLUMN PIN		1	
10	GBT91-3.2X16-A0P	SPLIT PIN		2	
11	GBT95-8-A0P	FLAT WASHER		2	
12	TE250.372F-02	RETAINER PLATE		1	
13	GBT93-10-A0P(2)	STANDARD SPRING WASHER		2	
14	GBT5783-M10X30-8.8-A3L(2)	HEXAGON BOLT		2	
15	GBT93-8-A0P(2)	STANDARD SPRING WASHER		1	
16	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		1	
17	TE250.372F-07	DIFFERENTIAL LOCK PEDAL		1	
18	TE250.372F.3	DIFFERENTIAL LOCK FORK SHAFT STEERING HUB WELDMENT		1	
19	TE354.372-01	DIFFERENTIAL LOCK CONTROL PULL ROD		1	
20	GBT95-16-A0P	FLAT WASHER		1	
21	TE250.372F.2	DIFFERENTIAL LOCK STEERING HUB SHAFT WELDMENT		1	
22	TE354.372.1	DIFFERENTIAL LOCK ROCKER WELDMENT		1	

https://truckmanualshub.com/


TE354.372A REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	GBT97.1-20-A0P	FLAT WASHER		1	
24	GBT894.1-20	CIRCLIP FOR SHAFT		1	
25	GBT67-M6X16-4.8-A2L	SLOTTED PAN HEAD SCREW		1	
26	GBT93-6-A0P	STANDARD SPRING WASHER		1	
27	Q72220	PLUG PIECE		1	
28	TE300.372-01	FINAL TRANSMISSION DRIVEN GEAR		2	
29	GBT858-52	WASHER		2	
30	GBT812-M52X1.5	ROUND NUT		2	
31	TE300.372-05	RIGHT JAW		1	
32	FT250.37.264	LOCKING NUT		1	
33	TE250.212-05	LOW CARBON STEEL WIRE		1	
34	TE300.372-04	LEFT JAW		1	
35	TE250.372F-06	DUSTPROOF SLEEVE		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.373 TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-1

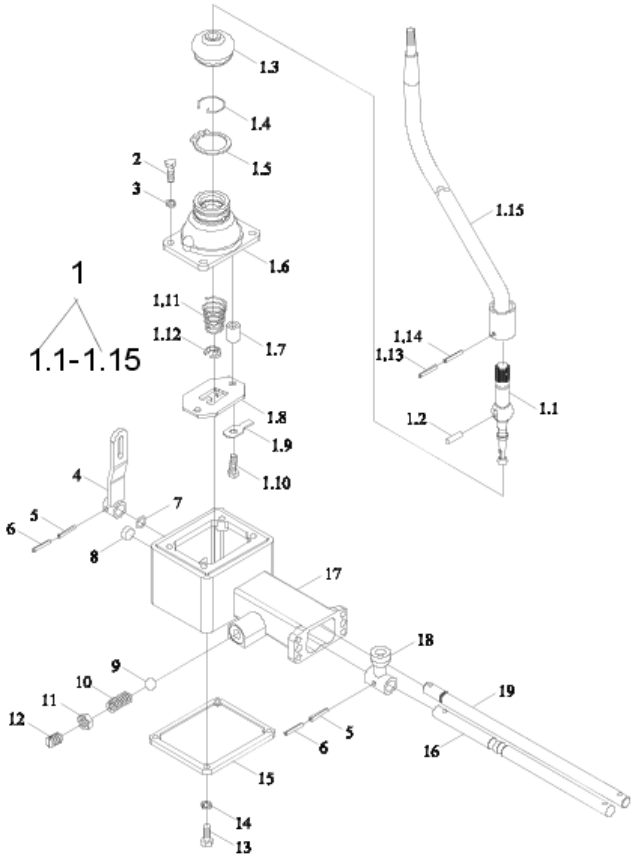

https://truckmanualshub.com/

TE354.373 TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.373F.1.1	MAIN GEARSHIFT CONTROL COVER ASSEMBLY		1	
1.1	TE250.373F.1.1-01a	MAIN GEARSHIFT CONTROL ROD		1	
1.1	GBT5782-M8X40-8.8-A2L	HEXAGON BOLT		2	
1.2	GBT119.1-6h8X40-A0P	COLUMN PIN		1	
1.3	FT800.37.138	GEARLEVER DUSTPROOF BONNET		1	
1.4	FT250.37.248	STEEL WIRE RETAINER RING		1	
1.5	GBT894.1-45	CIRCLIP FOR SHAFT		1	
1.6	FT250.37.211	MAIN GEARLEVER SEAT		1	
1.7	TE250.373F.1.1-03	PAD BLOCK		2	
1.8	TE250.373F.1.1-02	GEARLEVER LOCATING PLATE		1	
1.9	GBT854-8	STOPPING WASHER		2	
1.11	FT250.37.183	GEARLEVER SPRING		1	
1.12	FT300.37.164	GEARLEVER SPRING RETAINER RING		1	
1.13	GBT879.1-5X35	SPRING COLUMN PIN		1	
1.14	GBT879.1-8X35	SPRING COLUMN PIN		1	
1.15	TE250.373F.1.1.1	MAIN GEARLEVER WELDMENT		1	
2	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		4	
3	GBT93-8-A0P	STANDARD SPRING WASHER		4	
4	TE250.373F.1.2	AUXILIARY GEARSHIFT LOWER CONTROL ROCKER WELDMENT		1	
5	GBT879.1-6X24	SPRING COLUMN PIN		2	
6	GBT879.2-3.5X24	SPRING COLUMN PIN		2	
7	GBT3452.1-12.5X1.80G	O-RING		1	
8	Q72218	PLUG PIECE		1	


https://truckmanualshub.com/

TE354.373 TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
9	GBT308-9.5-G200-b	STEEL BALL		1	
10	FT704.42B.163	FORK SHAFT LOCATING SPRING		1	
11	GBT6172.1-M12-04-A3L	HEXAGON THIN NUT		1	
12	GBT73-M12X25-14H-A3L	SLOTTED LOCKING SCREW		1	
13	GBT5783-M6X20-8.8-A2L	HEXAGON BOLT		4	
14	GBT93-6-A0P	STANDARD SPRING WASHER		4	
15	TE250.373F.1-03	SIDE-MOUNTED CONTROL LOWER COVER		1	
16	TE250.373F.1-05	MAIN GEARSHIFT CONTROL TRANSFER ROD		1	
17	TE354.373.1-01	SIDE-MOUNTED CONTROL UPPER COVER		1	
18	TE250.373F.1-02	MAIN GEARSHIFT OUTER CONTROL FORK HEAD		1	
19	TE250.373F.1-04	AUXILIARY GEARSHIFT CONTROL TRANSMISSION ROD		1	

https://truckmanualshub.com/

TE354.373 TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-2

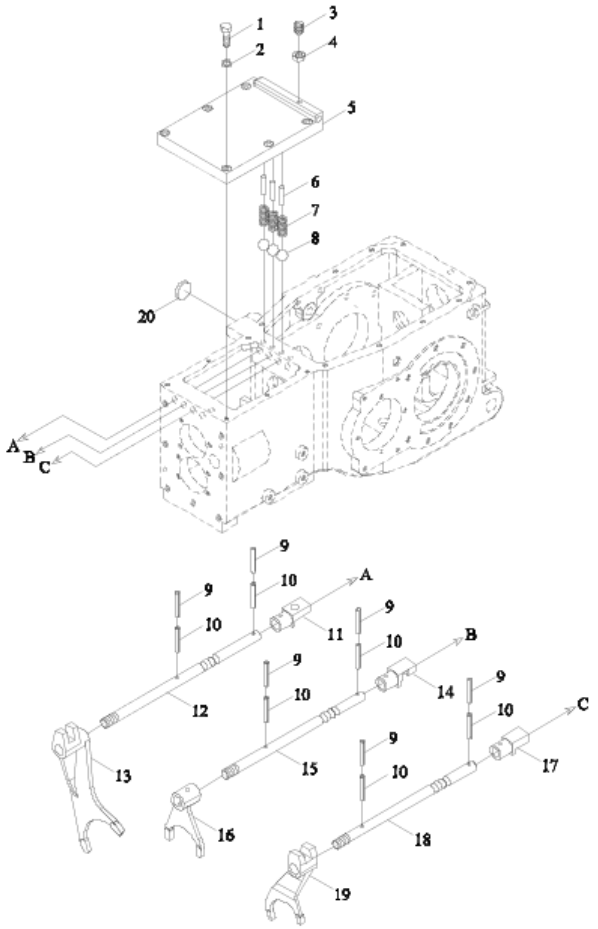


https://truckmanualshub.com/

TE354.373 TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M8X40-8.8-A2L	HEXAGON BOLT		6	
2	GBT93-8-A0P(2)	STANDARD SPRING WASHER		6	
3	FT250.37.249	FIXING SCREW		1	
4	GBT6173-M8X1-05-A2L	HEXAGON THIN NUT		1	
5	TE250.373F-01	GEARBOX INTERLOCK PRESSURE COVER		1	
6	FT250.37.250	FIXING PIN		3	
7	TE354.373A-01	SELF LOCKING SPRING		3	
8	GBT308-8.731-G200-b	STEEL BALL		3	
9	GBT879.1-3X24	SPRING COLUMN PIN		6	
10	GBT879.1-5X24	SPRING COLUMN PIN		6	
11	TE250.373F-11	HIGH AND LOW GEAR DIAL BLOCK		1	
12	TE354.373-03	HIGH AND LOW GEAR FORK SHAFT		1	
13	FT250.37.145	HIGH AND LOW GEAR FORK		1	
14	TE250.373F-10	Ⅲ-ⅣGEAR DIAL BLOCK		1	
15	TE354.373-02	Ⅲ-Ⅳ FORK SHAFT		1	
16	FT250.37.143	Ⅲ-Ⅳ FORK		1	
17	TE250.373F-09	I-II GEAR DIAL BLOCK		1	
18	TE354.373-01	I-II GEAR FORK SHAFT		1	
19	TE300.373-01	I-II GEAR FORK		1	
20	Q72114	PLUG PIECE		1	

https://truckmanualshub.com/

TE354.373 TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-3

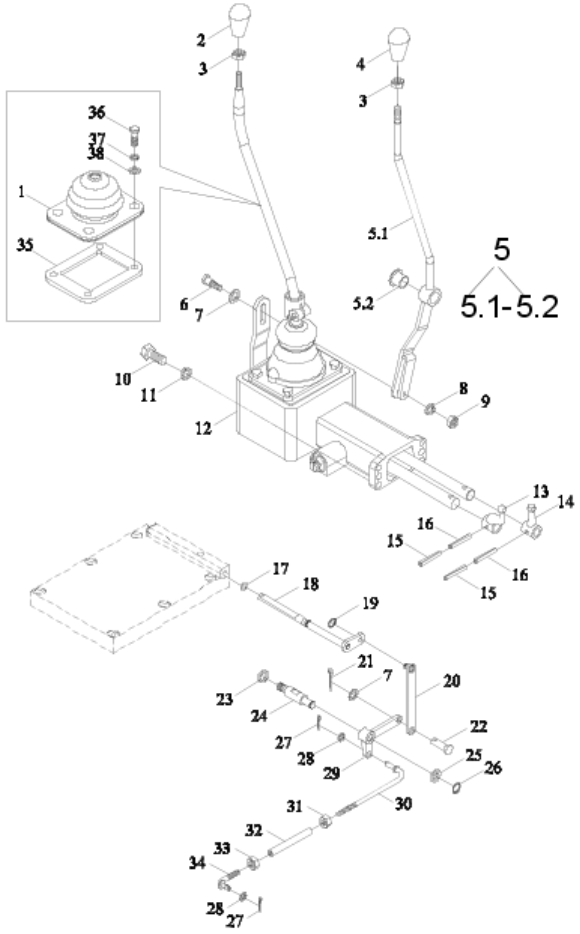

https://truckmanualshub.com/

TE354.373 TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-3

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.373F-15	SHIELD		1	
2	TE250.371G.2.2	MAIN GEARSHIFT CONTROL HANDLE		1	
3	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
4	FT250.37.037	AUXILIARY GEARSHIFT CONTROL HANDLE		1	
5	TE354.373.2	AUXILIARY GEARSHIFT UPPER CONTROL ROD PRESSURE UNIT		1	
5.1	TE354.373.2.1	AUXILIARY GEARSHIFT UPPER CONTROL ROD WELDMENT		1	
5.2	TE254.582H.11-01	NYLON SLEEVE		1	
6	TE250.373F-13	STEP BOLT		1	
7	GBT95-8-A0P	FLAT WASHER		1	
8	GBT93-6-A0P(2)	STANDARD SPRING WASHER		1	
9	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		1	
10	GBT5783-M8X25-8.8-A2L(2)	HEXAGON BOLT		4	
11	GBT93-8-A0P(3)	STANDARD SPRING WASHER		4	
12	TE354.373.1(2)	SIDE-MOUNTED CONTROL MECHANISM ASSEMBLY		1	
13	TE250.373F-02	MAIN GEARSHIFT CONTROL INNER FORK HEAD		1	
14	TE250.373F-03	AUXILIARY GEARSHIFT CONTROL INNER DIAL HEAD		1	
15	GBT879.2-3.5X24(2)	SPRING COLUMN PIN		2	
16	GBT879.1-6X24(2)	SPRING COLUMN PIN		2	
17	GBT3452.1-8.75X1.80G	O-RING		1	
18	TE250.373F.2	INTERLOCKING SHAFT WELDMENT		1	
19	GBT896-6	SPLIT RETAINER RING		1	

https://truckmanualshub.com/

TE354.373 TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-3 (cont'd.)


No.	Part No.	Description	Version	QTY.	Remark
20	TE250.373F.7	PULL PLATE WELD		1	
21	GBT91-3.2X20-A0P	SPLIT PIN		1	
22	GBT882-B8X16-A0P	PIN SHAFT		1	
23	GBT93-12-A0P	STANDARD SPRING WASHER		1	
24	TE250.373F-14	STUD		1	
25	GBT848-12-A0P	SMALL WASHER		1	
26	GBT894.1-12	CIRCLIP FOR SHAFT		1	
27	GBT91-3.2X25-A0P	SPLIT PIN		2	
28	GBT95-10-A0P	FLAT WASHER		2	
29	TE250.373F.4	INTERLOCKING ROTARY SLEEVE WELDMENT		1	
30	TE250.373F.6	PULL ROD WELDMENT		1	
31	GBT6171-M10X1-8-A2L	HEXAGON NUT, TYPE-1		1	
32	TE250.433C-09	CONNECTING ROD		1	
33	GBT6171-M10X1-LH-8-A2L	HEXAGON NUT, TYPE-1		1	
34	TE250.433C.14	BRAKE SHORT TIE ROD WELD (Ⅱ)		1	
35	TE250.373F-12	PRESSURE PLATE		1	
36	GBT5783-M5X20-8.8-A2L	HEXAGON BOLT		4	
37	GBT93-5-A0P	STANDARD SPRING WASHER		4	
38	GBT95-5-A0P	FLAT WASHER		4	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE300.391 LEFT HALF SHAFT ASSEMBLY

https://truckmanualshub.com/

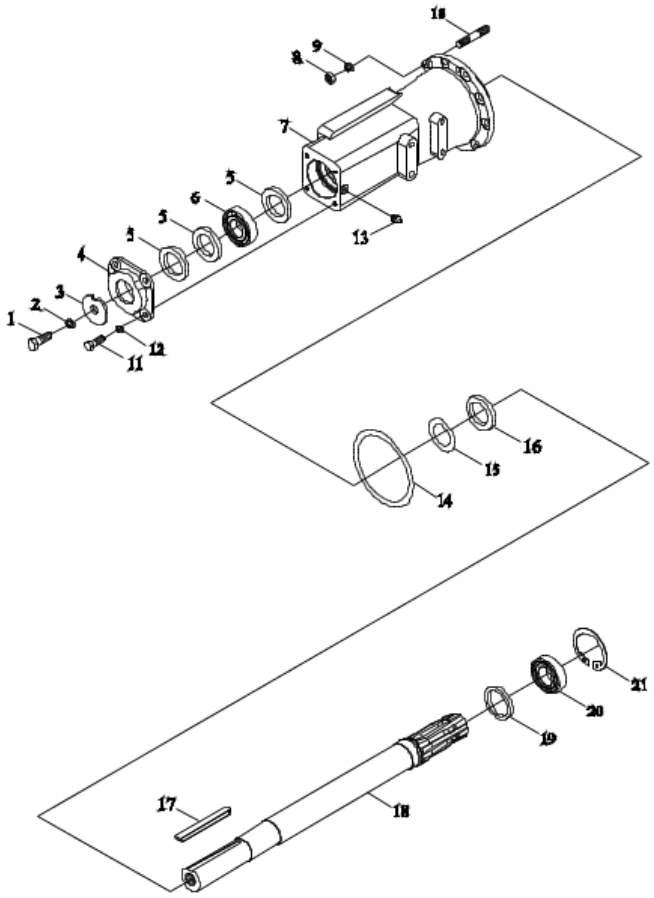

https://truckmanualshub.com/


TE300.391 LEFT HALF SHAFT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M16X35-8.8-A3L	HEXAGON BOLT		1	
2	GBT93-16-A0P	STANDARD SPRING WASHER		1	
3	FT250.37.216	RETAINER RING		1	
4	FT250.37.214	DRIVING SHAFT BEARING COVER		1	
5	GBT9877.1-FB50X72X8D	SEAL RING		3	
6	GBT276-6210	DEEP GROOVE BALL BEARING		1	
7	TE300.391-02	LEFT DRIVING SHAFT SLEEVE		1	
8	GBT6171-M12X1.25-10-A2L	HEXAGON NUT, TYPE-1		8	
9	GBT93-12-A0P	STANDARD SPRING WASHER		8	
10	GBT899-AM12-M12X1.25X35-10.9-A 3L	DOUBLE END STUDS		8	
11	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		4	
12	GBT93-10-A0P	STANDARD SPRING WASHER		4	
13	JBT7940.1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
14	GBT3452.1-112X3.55G	RUBBER O-SEAL RING		1	
15	FT250.37.242	OIL SEAL SPACER RING		1	
16	GBT9877.1-FB55X75X8D	SEAL RING		1	
17	FT250.37.215	FLAT KEY		1	
18	TE300.391-01	DRIVING SHAFT		1	
19	FT250.37.218	BEARING RETAINER RING		1	
20	GBT276-6211	DEEP GROOVE BALL BEARING		1	
21	GBT893.1-100	CIRCLIPS FOR HOLE		1	

https://truckmanualshub.com/

TE300.392 RIGHT HALF SHAFT ASSEMBLY

https://truckmanualshub.com/

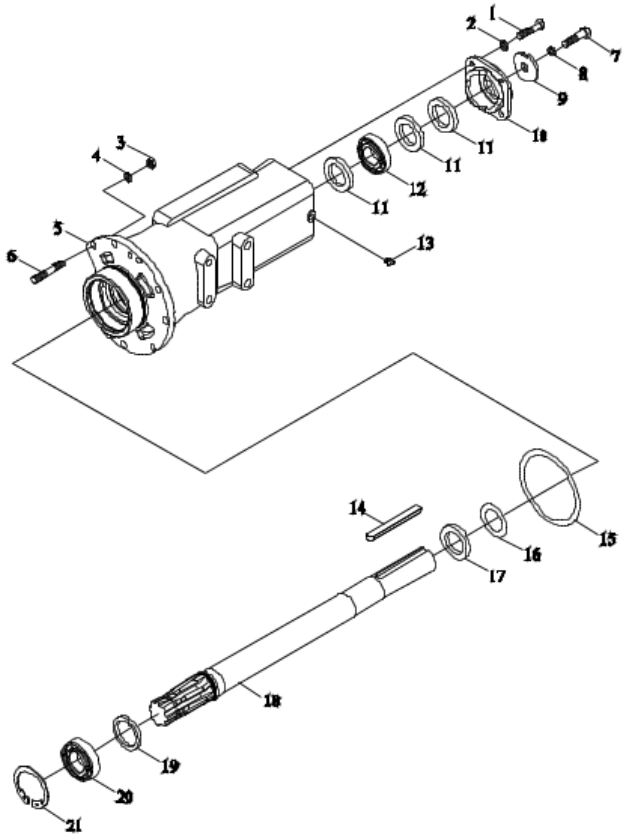

https://truckmanualshub.com/


TE300.392 RIGHT HALF SHAFT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		4	
2	GBT93-10-A0P	STANDARD SPRING WASHER		4	
3	GBT6171-M12X1.25-10-A2L	HEXAGON NUT, TYPE-1		8	
4	GBT93-12-A0P	STANDARD SPRING WASHER		8	
5	TE300.392-01	RIGHT DRIVING SHAFT SLEEVE		1	
6	GBT899-AM12-M12X1.25X35-10.9-A 3L	DOUBLE END STUDS		8	
7	GBT5783-M16X35-8.8-A3L	HEXAGON BOLT		1	
8	GBT93-16-A0P	STANDARD SPRING WASHER		1	
9	FT250.37.216	RETAINER RING		1	
10	FT250.37.214	DRIVING SHAFT BEARING COVER		1	
11	GBT9877.1-FB50X72X8D	SEAL RING		3	
12	GBT276-6210	DEEP GROOVE BALL BEARING		1	
13	JBT7940.1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
14	FT250.37.215	FLAT KEY		1	
15	GBT3452.1-112X3.55G	RUBBER O-SEAL RING		1	
16	FT250.37.242	OIL SEAL SPACER RING		1	
17	GBT9877.1-FB55X75X8D	SEAL RING		1	
18	TE300.391-01	DRIVING SHAFT		1	
19	FT250.37.218	BEARING RETAINER RING		1	
20	GBT276-6211	DEEP GROOVE BALL BEARING		1	
21	GBT893.1-100	CIRCLIPS FOR HOLE		1	

https://truckmanualshub.com/

TE250.401A STEERING WHEEL ASSEMBLY

https://truckmanualshub.com/

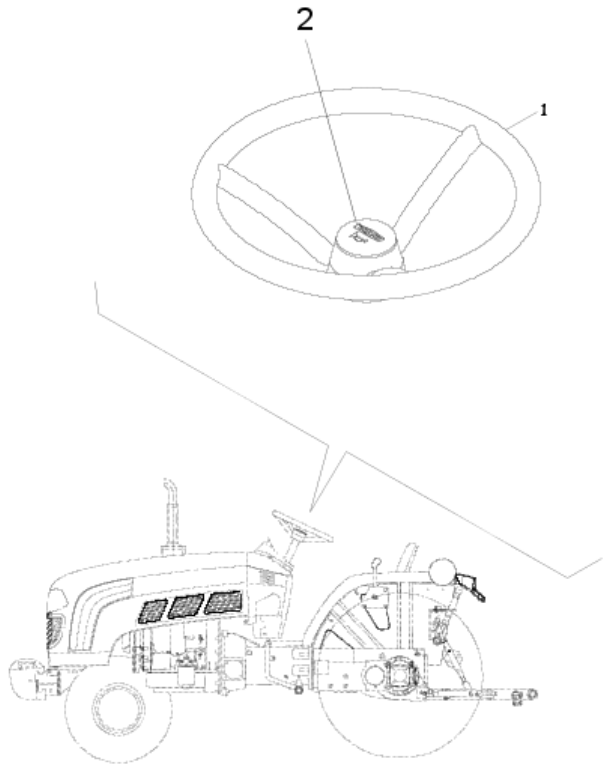

https://truckmanualshub.com/


TE250.401A STEERING WHEEL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.401A	STEERING WHEEL ASSEMBLY		1	
2	TE250.401A.1	COVER OF STEERING WHEEL		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.402 STEERING PIPE ASSEMBLY-1

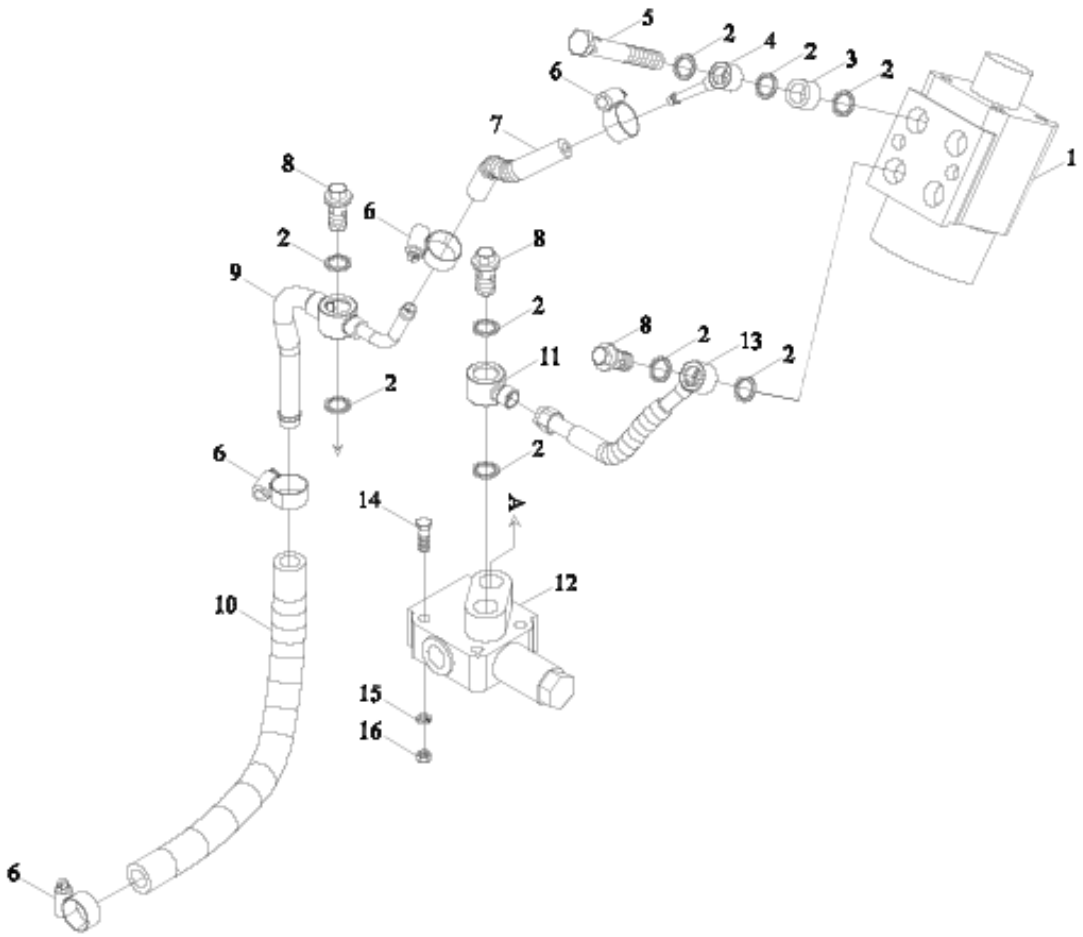


https://truckmanualshub.com/

TE354.402 STEERING PIPE ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
1	FT254.40.028	HYDRAULIC STEERING MECHANISM ASSEMBLY		1	
2	JBT982-20	COMBINED SEAL GASKET		9	
3	TH354.402-03	SPACER BUSH		1	
4	TE354.402.1	REDIRECTOR OIL RETURN PIPE WELDMENT		1	
5	TH354.402-02	HOLLOW BOLT M20X1.5		1	
6	Q67627	B-TYPE WORM TRANSMISSION HOSE CLAMP		4	
7	TE254.402C-01	OIL RETURN RUBBER HOSE		1	
8	FT254.40.102	HOLLOW BOLT		3	
9	TE354.402.2a	SINGLE STEADY VALVE RETURN PIPE WELDMENT		1	
10	TE354.402-01a	OIL RETURN RUBBER HOSE OF SINGLE PATH STA-BILIZER DIVERTER VALVE		1	
11	TE254.402F-04	CONNECTING JOINT		1	
12	FT254.40.030	SINGLE-WAY STABILIZER DIVERTER VALVE		1	
13	TE254.402F.1a	OIL INLET PIPE OF REDIRECTOR		1	
14	GBT5782-M8X55-8.8-A2L	HEXAGON BOLT		3	
15	GBT93-8-A0P	STANDARD SPRING WASHER		3	
16	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		3	

https://truckmanualshub.com/

TE354.402 STEERING PIPE ASSEMBLY-2

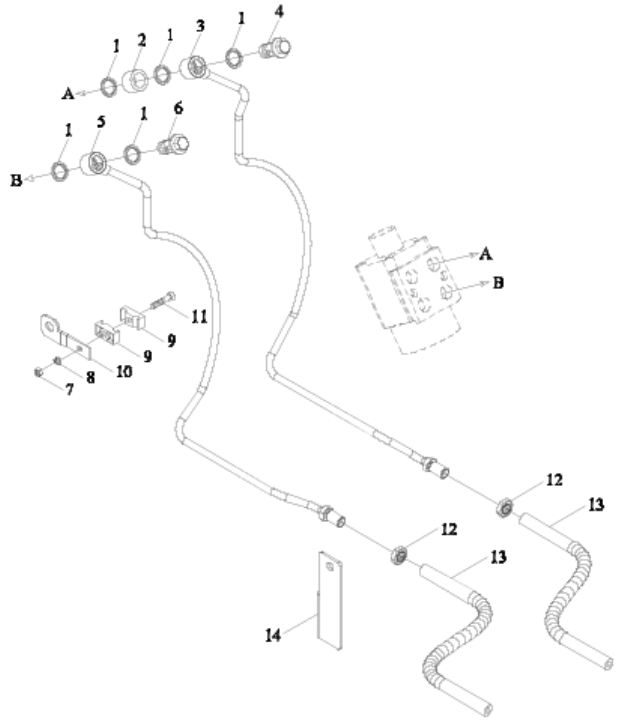

https://truckmanualshub.com/


TE354.402 STEERING PIPE ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
1	JBT982-20(2)	COMBINED SEAL GASKET		5	
2	TH354.402-03(2)	SPACER BUSH		1	
3	TE254.402F.5a	REDIRECTOR LEFT OIL OUTLET PIPE WELDMENT		1	
4	TH354.402-02(2)	HOLLOW BOLT M20X1.5		1	
5	TE254.402F.6a	REDIRECTOR RIGHT OIL OUTLET PIPE WELDMENT		1	
6	FT254.40.102(2)	HOLLOW BOLT		1	
7	GBT6170-M8-8-A2L(2)	HEXAGON NUT, TYPE-1		1	
8	GBT93-8-A0P(2)	STANDARD SPRING WASHER		1	
9	FT354.40C.121	DOUBLE PIPE CLAMP		2	
10	TE254.402F-02	OIL PIPE BRACKET2		1	
11	GBT5782-M8X40-8.8-A2L	HEXAGON BOLT		1	
12	GBT6173-M16X1.5-05-A3L	HEXAGON THIN NUT		2	
13	TE354.402.4a	STEERING OIL TUBE ASSEMBLY Ⅰ		2	
14	TE254.402F-01	OIL PIPE BRACKET1		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE250.403F STEERING COLUMN MOUNTING ASSEMBLY

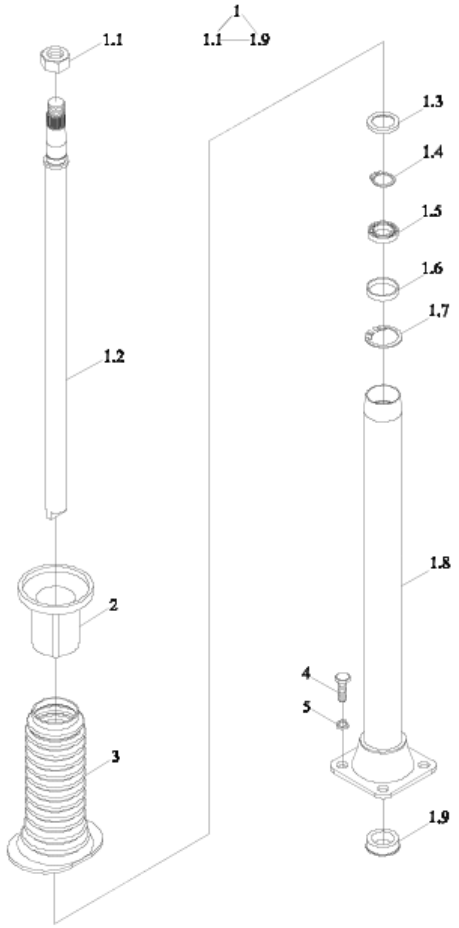
1
1.1
1.1
1.9
1.3
1.4
1.5
1.6
1.7
1.2
1.8
2
4
5
3
1.9

https://truckmanualshub.com/


TE250.403F STEERING COLUMN MOUNTING ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.403F.1	STEERING PIPE COLUMN ASSEMBLY		1	
1.1	GBT6173-M16X1.5-05-A3L	NUT		1	
1.2	TE250.403F.1-01	STEERING ROD		1	
1.3	FT650.40.172(J)	BEARING RETAINER RING		1	
1.4	GBT894.1-20	RETAINER RING		1	
1.5	GBT276-61804-2LS	BEARING		1	
1.6	FT650.40.172(J)(2)	BEARING RETAINER RING 2		1	
1.7	GBT893.1-32	RETAINER RING		1	
1.8	TE250.403F.1.1	STEERING SLEEVE WELDMENT		1	
1.9	FT254.40.114	SPACER BUSH		1	
2	FT650.40.014	HORN BRUSH SEAT ASSEMBLY		1	
3	TE254.403B-01	STEERING ROD SLEEVE		1	
4	GBT5783-M10X30-8.8-A3L	BOLT		4	
5	GBT93-10-A0P	WASHER		4	

https://truckmanualshub.com/

TE300.411A PTO SHAFT ASSEMBLY

https://truckmanualshub.com/

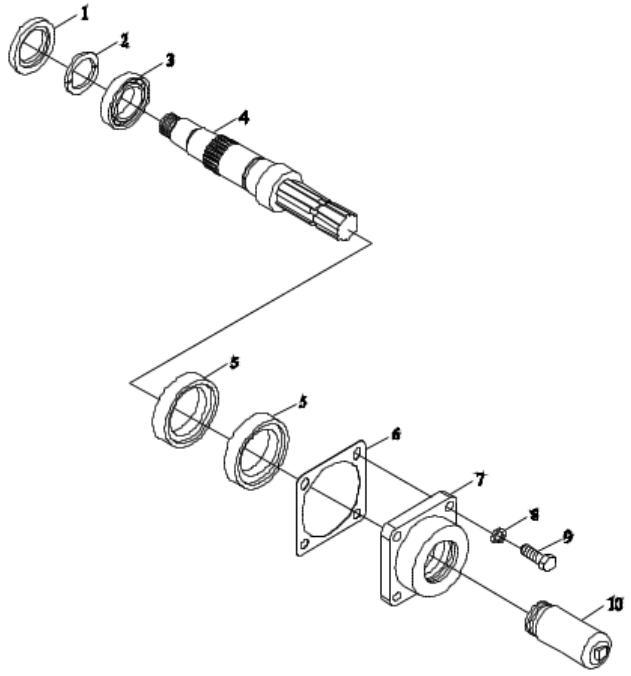

https://truckmanualshub.com/


TE300.411A PTO SHAFT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE300.411-03	THRUST RETAINER RING		1	
2	TE300.411-02	THRUST RING		1	
3	GBT276-6308	DEEP GROOVE BALL BEARING		1	
4	TE300.411A-01	PTO SHAFT		1	
5	GBT9877.1-FB50X72X8D	SEAL RING		2	
6	FT300.41.136	REAR END COVER I GASKET		1	
7	FT300.41.101	REAR END COVER I		1	
8	GBT93-10-A0P	STANDARD SPRING WASHER		4	
9	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		4	
10	TB550.412-02	PTO SHAFT HOOD SHIELD		1	

https://truckmanualshub.com/

TE354.412 PTO GEAR ASSEMBLY

https://truckmanualshub.com/

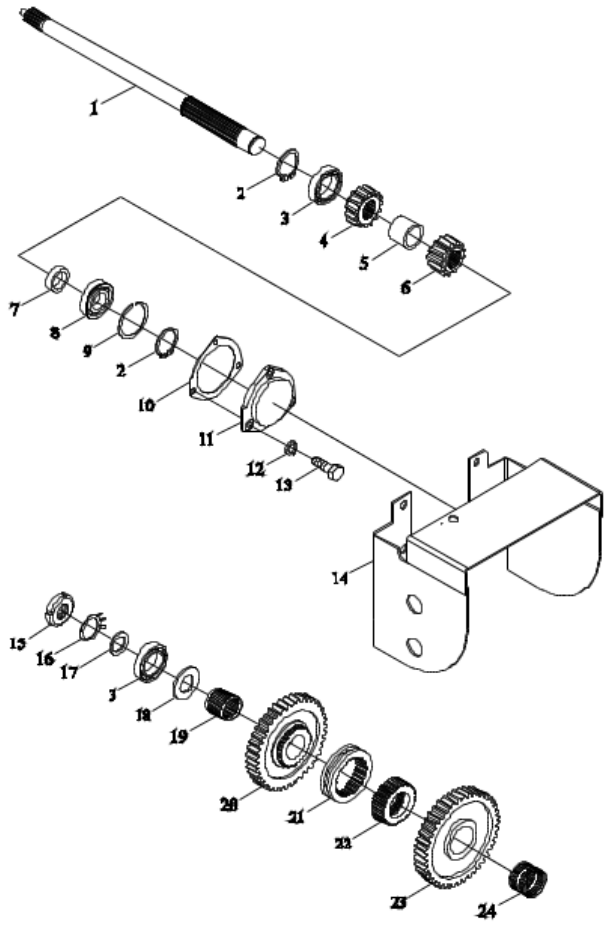

https://truckmanualshub.com/

TE354.412 PTO GEAR ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE300.412-01	PTO TRANSMISSION SHAFT		1	
2	GBT894.1-30	CIRCLIP FOR SHAFT		1	
3	GBT276-6306	DEEP GROOVE BALL BEARING		1	
4	TE300.412-02	PTO HIGH GEAR DRIVING GEAR		1	
5	TE300.412-03	FRONT SPACER BUSH		1	
6	TE300.412-04	PTO LOW GEAR DRIVING GEAR		1	
7	TE300.412-05	REAR SPACER BUSH		1	
8	GBT276-6306N	DEEP GROOVE BALL BEARING		1	
9	GBT305-72-78.6	THRUST RING		1	
10	FT300.41.135	REAR END COVER Ⅱ GASKET		1	
11	TE300.412-09	REAR END COVER Ⅱ		1	
12	GBT93-8-A0P	STANDARD SPRING WASHER		1	
13	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		1	
14	TE354.412.1	PTO BONNET WELDMENT		1	
15	GBT812-M25X1.5	ROUND NUT		1	
16	GBT858-25	THRUST WASHER FOR ROUND NUT		1	
17	FT300.41.122	WASHER		1	
18	FT300.41C.118	OUTPUT SHAFT FRONT RETAINER RING		1	
19	JBT7918-K35X40X27	NEEDLE AND CARRIER COMBINATION		1	
20	TE300.412-08	PTO HIGH GEAR DRIVEN GEAR		1	
21	FT300.41C.116	PTO SHIFT COLLAR		1	
22	FT300.41C.117	PTO MESHING SEAT		1	


https://truckmanualshub.com/

TE354.412 PTO GEAR ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	TE300.412-06	PTO LOW GEAR DRIVEN GEAR		1	
24	TE300.412-07	NEEDLE BEARING		1	

https://truckmanualshub.com/

TE354.413 PTO CONTROL MECHANISM ASSEMBLY

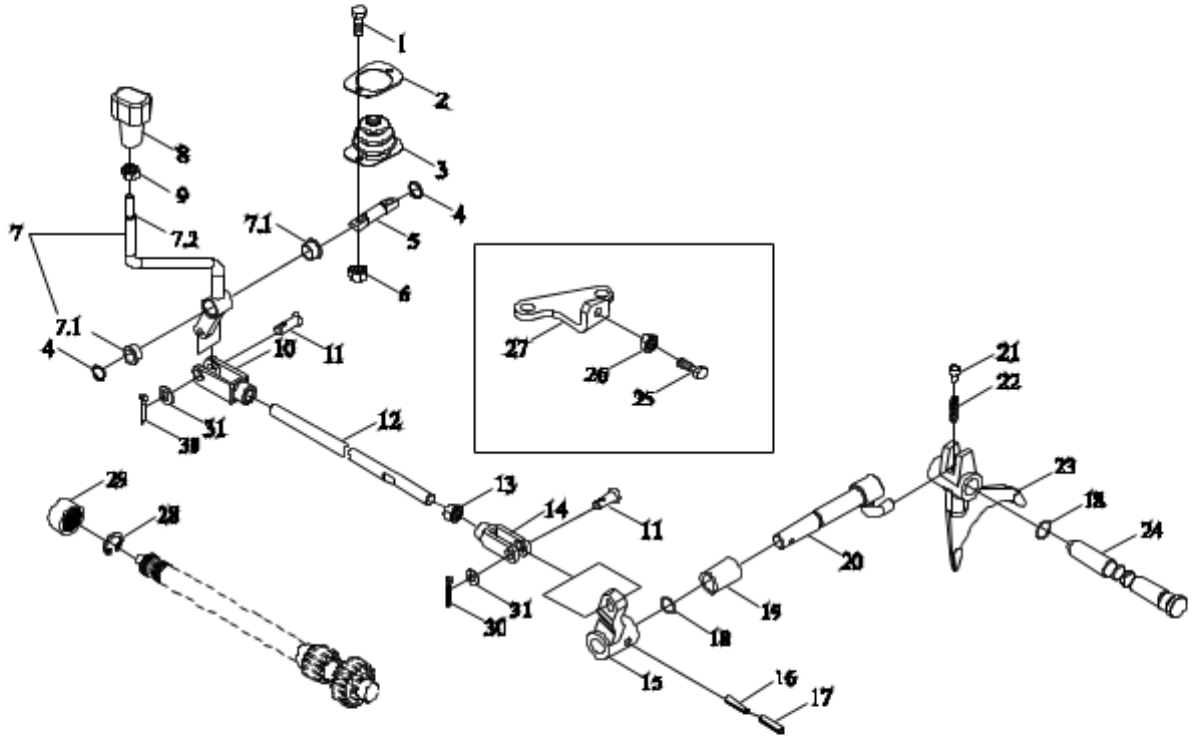
1
2
3
4
5
6
7
7.1
7.2
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31

https://truckmanualshub.com/

TE354.413 PTO CONTROL MECHANISM ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		2	
2	TE250.413D-07	PRESSURE PLATE		1	
3	TE250.413D-03	DUSTPROOF SLEEVE		1	
4	GBT894.1-18	CIRCLIP FOR SHAFT		2	
5	TE250.413D-04	FIXING SHAFT		1	
6	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
7	TE354.413.4	CONTROL ROD PRESSURE UNIT		1	
7.1	TE250.413D.2-01	NYLON SLEEVE		2	
7.2	TE354.413.4.1	CONTROL ROD WELDMENT		1	
8	FT250.41.016	PTO GEARSHIFT HANDLE		1	
9	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
10	FT800A.43B.119	LEFT REVOLVING PULL ROD FORK		1	
11	GBT882-B10X30-A0P	PIN SHAFT		2	
12	TE354.413-01	MIDDLE PULL ROD		1	
13	GBT6172.1-M10-04-A3L	HEXAGON THIN NUT		1	
14	FT800A.43B.116	RIGHT REVOLVING PULL ROD FORK		1	
15	TE354.413.3	ROCKER WELDMENT		1	
16	GBT879.1-6X26	SPRING COLUMN PIN		1	
17	GBT879.1-3.5X26	SPRING COLUMN PIN		1	
18	GBT3452.1-11.8X1.80G	RUBBER O-SEAL RING		2	
19	TE300.413-04	SPACER BUSH		1	
20	TE354.413.1	GEARSHIFT DIAL ROD WELDMENT		1	
21	TE250.413D-05	GEARSHIFT SHAFT LOCK PIN		1	

https://truckmanualshub.com/


TE354.413 PTO CONTROL MECHANISM ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
22	FT250.37.148	FORK SHAFT LOCKING SPRING		1	
23	TE300.413-02a	PTO GEARSHIFT FORK		1	
24	TE300.413-03a	GEARSHIFT FORK SHAFT		1	
25	GBT5783-M8X35-8.8-A2L	HEXAGON BOLT		1	
26	GBT6172.1-M8-04-A2L	HEXAGON THIN NUT		1	
27	TE354.413.2-01	LIMIT PLATE		1	
28	GBT893.1－21	CIRCLIPS FOR HOLE		1	
29	FT300.37.136	CONNECTING SLEEVE		1	
30	GBT91-3.2X20-A0P	SPLIT PIN		2	
31	GBT97.1-10-A0P	FLAT WASHER		2	

https://truckmanualshub.com/

TE254.421B TRANSFER CASE ASSEMBLY

https://truckmanualshub.com/

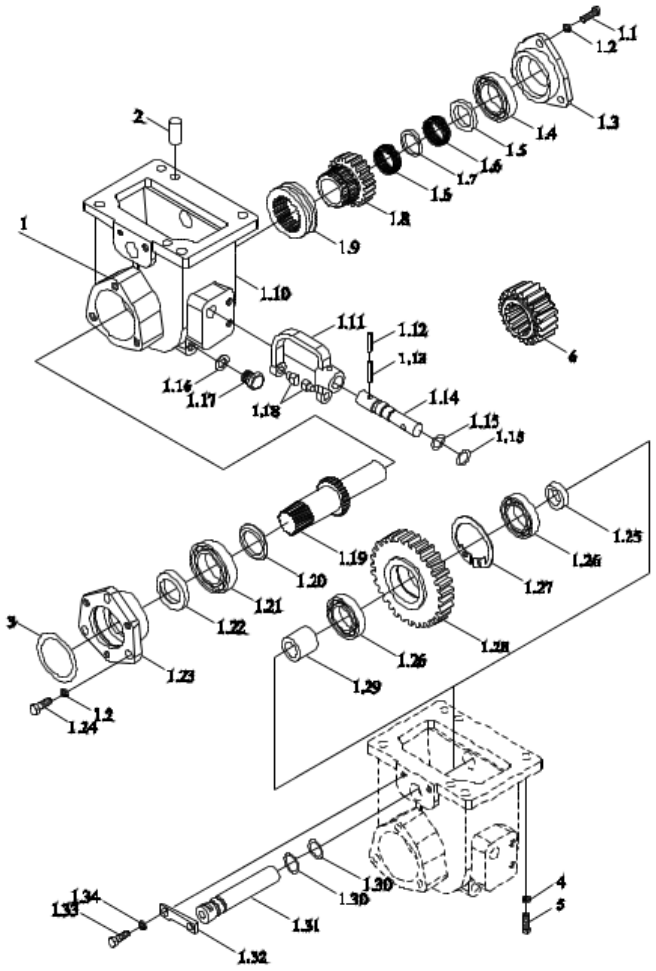

https://truckmanualshub.com/

TE254.421B TRANSFER CASE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE254.421B.1	TRANSFER CASE HOUSING ASSEMBLY		1	
1.1	GBT5783-M10X20-8.8-A3L	HEXAGON BOLT		5	
1.2	GBT93-10-A0P	STANDARD SPRING WASHER		8	
1.3	TE254.421A.1-04	REAR BEARING COVER		1	
1.4	GBT276-6305	DEEP GROOVE BALL BEARING		1	
1.5	FT254.42.107	OUTPUT SHAFT REAR THRUST RING		1	
1.6	JBT7918-K25X31X20	NEEDLE AND CARRIER COMBINATION		2	
1.7	FT254.42.108	OUTPUT SHAFT ROLLING BEARING SPACER BUSH		1	
1.8	TE254.421B.1-01a	TRANSFER CASE DRIVEN GEAR		1	
1.9	FT254.42F.103	SHIFT COLLAR		1	
1.10	TE254.421A.1-01	TRANSFER CASE HOUSING		1	
1.11	TE254.421A.1-02	TRANSFER CASE FORK		1	
1.12	GBT879.1-6X24	SPRING COLUMN PIN		1	
1.13	GBT879.1-4X24	SPRING COLUMN PIN		1	
1.14	TE254.421A.1-03	TRANSFER CASE FORK SHAFT		1	
1.15	GBT3452.1-12.5X1.80G	RUBBER O-SEAL RING		2	
1.16	JBT982-12	COMBINED SEAL GASKET		1	
1.17	Q617B12	HEXAGON PLUG		1	
1.18	FT254.42.121	TRANSFER CASE FORK HEAD		2	
1.19	FT254.42.102	OUTPUT SHAFT		1	
1.20	FT254.42.109	OUTPUT SHAFT FRONT THRUST RING		1	
1.21	GBT276-6206	DEEP GROOVE BALL BEARING		1	
1.22	TE254.421.1.1	OILSEAL FB30X45X8B		1	

https://truckmanualshub.com/


TE254.421B TRANSFER CASE ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
1.23	TE254.421A.1-09	FRONT BEARING COVER		1	
1.24	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		3	
1.25	TE254.421A.1-10	MIDDLE SHAFT SMALL THRUST RING		1	
1.26	GBT276-6204	DEEP GROOVE BALL BEARING		2	
1.27	GBT893.1-47	CIRCLIPS FOR HOLE		1	
1.28	TE254.421B.1-02	TRANSFER CASE MIDDLE GEAR		1	
1.29	TE254.421A.1-11	MIDDLE SHAFT BIG THRUST RING		1	
1.30	GBT3452.1-15.0X2.65G	RUBBER O-SEAL RING		2	
1.31	TE254.421A.1-05	MIDDLE SHAFT		1	
1.32	TE254.421A.1-07	MIDDLE SHAFT LOCATING PLATE		1	
1.33	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
1.34	GBT93-8-A0P	STANDARD SPRING WASHER		2	
2	GBT119.1-10m6X18-A0P	PIN		2	
3	GBT3452.1-53.0X2.65G	O-RING		1	
4	GBT93-10-A0P(2)	SPRING WASHER		4	
5	GBT5783-M10X30-10.9-A3L	BOLT		4	
6	TE300.361-01	FRONT DRIVING GEAR		1	

https://truckmanualshub.com/

TE354.422 TRANSFER CASE TRANSMISSION SHAFT ASSEMBLY

https://truckmanualshub.com/

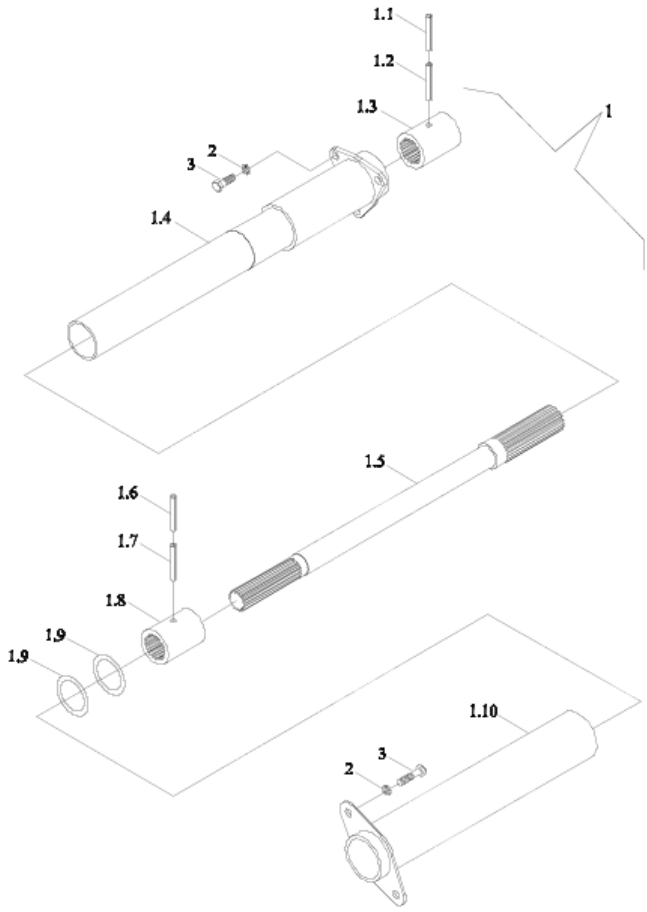

https://truckmanualshub.com/


TE354.422 TRANSFER CASE TRANSMISSION SHAFT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE354.422.1	TRANSFER CASE TRANSMISSION SHAFT INSTALLATION		1	
1.1	GBT879.1-3.5X40	SPRING COLUMN PIN		1	
1.2	GBT879.1-6X40	SPRING COLUMN PIN		1	
1.3	FT254.42.113	SPLINE BUSH		1	
1.4	TE354.422.1.1	REAR SLEEVE PIPE WELDMENT		1	
1.5	TE354.422.1-01	TRANSFER CASE TRANSMISSION SHAFT		1	
1.6	GBT879.1-3.5X35	SPRING COLUMN PIN		1	
1.7	GBT879.1-6X35	SPRING COLUMN PIN		1	
1.8	FT254.42F.120	FRONT SPLINE BUSH		1	
1.9	GBT3452.1-46.2X3.55G	RUBBER O-SEAL RING		1	
1.10	TE254.422A.1.1	FRONT SLEEVE PIPE WELDMENT		1	
2	GBT93-8-A0P	STANDARD SPRING WASHER		5	
3	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		5	

https://truckmanualshub.com/

TE254.423C TRANSFER CASE CONTROL ASSEMBLY

https://truckmanualshub.com/

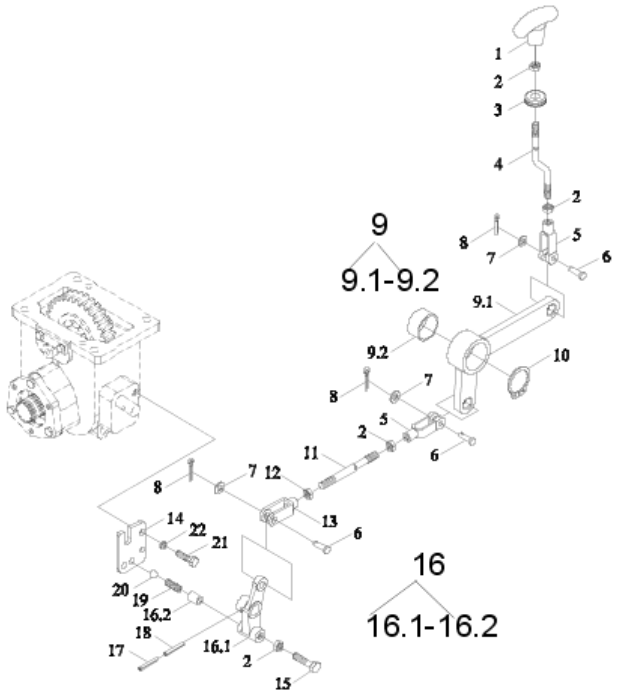

https://truckmanualshub.com/

TE254.423C TRANSFER CASE CONTROL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	FT65.38.051	PULL/PRESS HANDLE		1	
2	GBT6170-M10-8-A3L	NUT		4	
3	TE254.423A-01	THROUGH HARNESS WASHER		1	
4	TE254.423C-01	CONTROL ROD		1	
5	FT300.43.108	PULL ROD FRONT FORK		2	
6	GBT882-B10X30-A0P	PIN SHAFT		3	
7	GBT97.1-10-A0P	FLAT WASHER		3	
8	GBT91-3.2X20-A0P	SPLIT PIN		3	
9	TE254.423C.1	MIDDLE ROCKER UNIT		1	
9.1	TE254.423C.1.1	MIDDLE ROCKER WELDMENT		1	
9.2	TE254.423C.1-01	MIDDLE ROCKER BUSH		1	
10	GBT894.1-20	CIRCLIPS FOR SHAFT		1	
11	TE254.423C-02	MIDDLE PULL ROD		1	
12	GBT6170-M10-LH-8-A3L	NUT		1	
13	FT800A.43B.119	LEFT REVOLVING PULL ROD FORK		1	
14	TE254.423A-05	LOCATING PLATE		1	
15	GBT5783-M10X25-8.8-A3L	BOLT		1	
16	TE254.423A.1	ROCKER UNIT		1	
16.1	TE254.423A.1-01	ROCKER		1	
16.2	FT304.42.135(J)	SLEEVE		1	
17	GBT879.1-3.5X24	PIN		1	
18	GBT879.1-6X24	PIN		1	
19	FT304.42.124	LOCATING SPRING		1	

https://truckmanualshub.com/


TE254.423C TRANSFER CASE CONTROL ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
20	GBT308-8-G100-b	STEEL BALL		1	
21	GBT5783-M8X20-8.8-A2L	BOLT		2	
22	GBT93-8-A0P	WASHER		2	

https://truckmanualshub.com/

TE354.431A BRAKE ASSEMBLY

https://truckmanualshub.com/

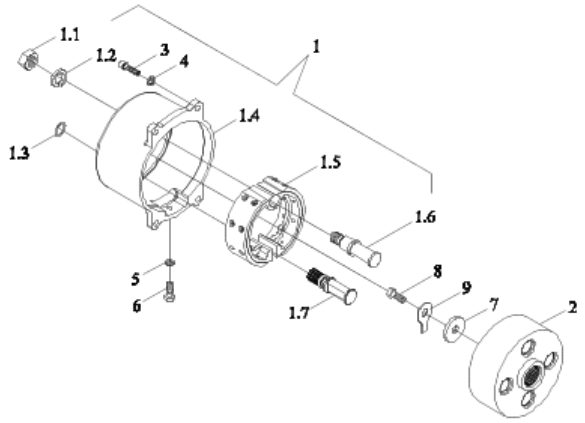

https://truckmanualshub.com/


TE354.431A BRAKE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE354.431A	BRAKE ASSEMBLY	005	1	
1	TE354.431A.2	BRAKE HOUSING		1	
1.1	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		1	
1.2	GBT93-16-A3L	STANDARD SPRING WASHER		1	
1.3	GBT3452.1-15.0X2.65G	RUBBER O-SEAL RING		1	
1.4	TE354.431A-01	BRAKE HOUSING		1	
1.5	TE354.431A.1	BRAKE HOOF ASSEMBLY		1	
1.6	TE354.431A-02	BRAKE HOOF PIN SHAFT		1	
1.7	TE354.431A-04	BRAKE CAM		1	
1.8	TE354.431A-05	RETURN SPRING		2	
2	TE354.431A-03	BRAKE DRUM		1	
3	GBT70.1-M8X20-8.8	INNER HEXAGON SCREW		4	
4	GBT93-8-A3L	STANDARD SPRING WASHER		4	
5	JBT982-8	COMBINED SEAL GASKET		1	
6	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		1	
7	FT250.43.101	WASHER		1	
8	GBT5783-M12X30-8.8-A3L	HEXAGON BOLT		1	
9	FT250.43.104a	STOPPING WASHER		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.433B BRAKE CONTROL ASSEMBLY-1

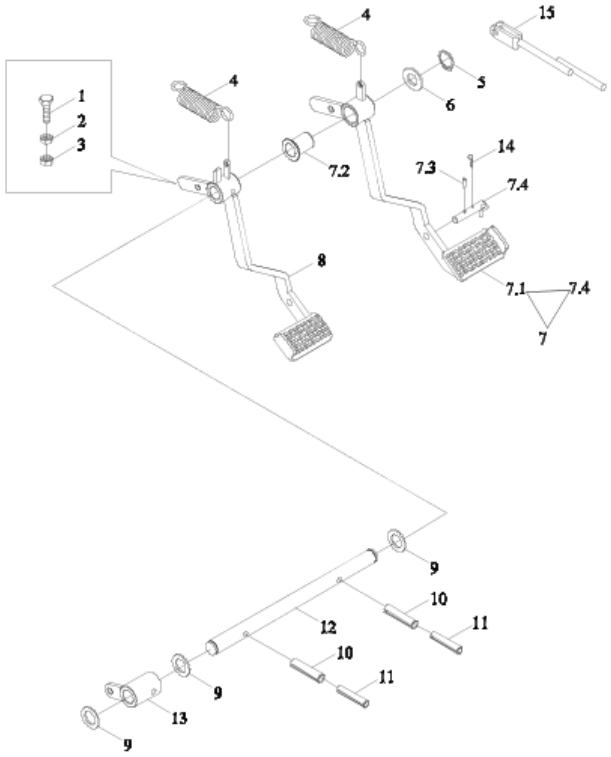


https://truckmanualshub.com/

TE354.433B BRAKE CONTROL ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TE354.433B	BRAKE CONTROL ASSEMBLY		1	
1	GBT5783-M10X35-8.8-A3L	HEXAGON BOLT		2	
2	GBT6172.1-M10-04-A3L	HEXAGON THIN NUT		2	
3	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		2	
4	TE250.212D-05	CLUTCH PEDAL RETURN SPRING		2	
5	GBT894.1-25	CIRCLIP FOR SHAFT		1	
6	GBT97.1-24-A3L	FLAT WASHER		1	
7	TE354.433B.6	RIGHT BRAKE PEDAL ASSEMBLY		1	
7.1	TE354.433B.6.1	RIGHT BRAKE PEDAL WELDMENT		1	
7.2	TE250.433C.2-01	SLEEVE		1	
7.3	GBT879.1-5X16	SPRING COLUMN PIN		1	
7.4	TE250.433C.2.2	BRAKE CONNECTING LOCK ROD WELDMENT		1	
8	TE354.433B.7	LEFT BRAKE PEDAL WELDMENT		1	
9	TE250.433C-02	WASHER		2	
10	GBT879.1-10X40	SPRING COLUMN PIN		2	
11	GBT879.1-6X40	SPRING COLUMN PIN		2	
12	TE250.433C-01a	ROTARY SHAFT OF BRAKE		1	
13	TE250.433C.3a	LEFT ROCKER WELDMENT		1	
14	FT800A.43.401	LOCK PIN		1	
15	TE250.433C-19	LEFT BRAKE UPPER CONNECTING ROD		1	

TE354.433B BRAKE CONTROL ASSEMBLY-2

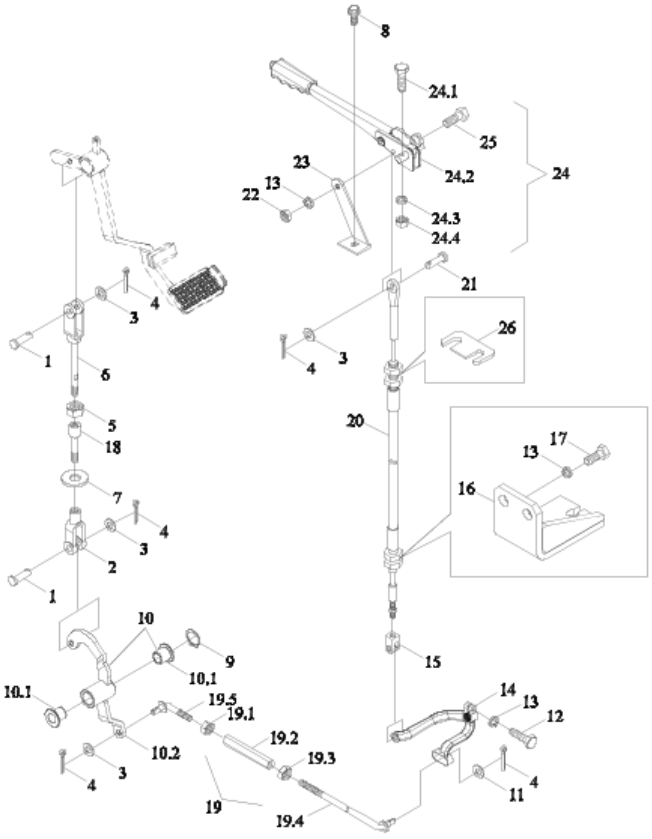

https://truckmanualshub.com/

TE354.433B BRAKE CONTROL ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TE354.433B(2)	BRAKE CONTROL ASSEMBLY		1	
1	GBT882-B10X30-A3L	PIN SHAFT		4	
2	FT300.43.110	PULL ROD REAR FORK		2	
3	GBT97.1-10-A3L	FLAT WASHER		7	
4	GBT91-3.2X22-A3L	SPLIT PIN		11	
5	GBT6171-M10X1-8-A2L	HEXAGON NUT, TYPE-1		2	
6	TE250.433C-14a	BRAKE UPPER CONNECTING ROD		1	
7	TE250.433C-08	RUBBER SEALING PLATE		1	
8	GBT16674.1-M10X20-8.8-A3L	HEXAGON FLANGE NUT		1	
9	GBT894.1-20	CIRCLIP FOR SHAFT		1	
10	TE354.433.6	RIGHT LOWER ROCKER ASSEMBLY		1	
10.1	TE250.433C.4-01	SLEEVE		2	
10.2	TE354.433.6.1	RIGHT LOWER ROCKER WELDMENT		1	
11	GBT97.1-12-A3L	FLAT WASHER		4	
12	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		2	
13	GBT93-8-A3L	STANDARD SPRING WASHER		5	
14	TE354.433-02	RIGHT BRAKE ROCKER		1	
15	TE250.433C-11	CONNECTING FORK		2	
16	TE354.433.1	RIGHT SUPPORT WELD		1	
17	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
18	TE250.433C.17	BRAKE SHORT PULL ROD WELDMENT		2	
19	TE354.433B.4	RIGHT BRAKE PULL ROD		1	
19.1	GBT6171-M12X1.5-LH-8-A3L	HEXAGON NUT, TYPE-1		1	


https://truckmanualshub.com/

TE354.433B BRAKE CONTROL ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
19.2	TE354.433-03	CONNECTING ROD		1	
19.3	GBT6171-M12X1.5-8-A3L	HEXAGON NUT, TYPE-1		1	
19.4	TE354.433B.2	RIGHT BRAKE LONG PULL ROD WELDMENT		1	
19.5	TE354.433B.3	RIGHT BRAKE PULL ROD WELDMENT		1	
20	TE250.433C.8	RIGHT BRAKE PULL WIRE ASSEMBLY		1	
21	GBT882-B10X35-A3L	PIN SHAFT		1	
22	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
23	TE250.433C.13	RATCHET WHEEL BRACKET WELDMENT		1	
24	TA820.213D.3	HAND BRAKE HANDLE ASSEMBLY		1	
24.1	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		2	
24.2	TA820.213D.3.1	HAND BRAKE HANDLE		1	
24.3	GBT93-8-A3L(2)	STANDARD SPRING WASHER		2	
24.4	GBT6170-M8-8-A2L(2)	HEXAGON NUT, TYPE-1		2	
25	GBT5783-M8X35-8.8-A2L	HEXAGON BOLT		1	
26	TE250.433C-12	UPPER FIXING PLATE OF BRAKE PULL WIRE		1	

https://truckmanualshub.com/

TE354.433B BRAKE CONTROL ASSEMBLY-3

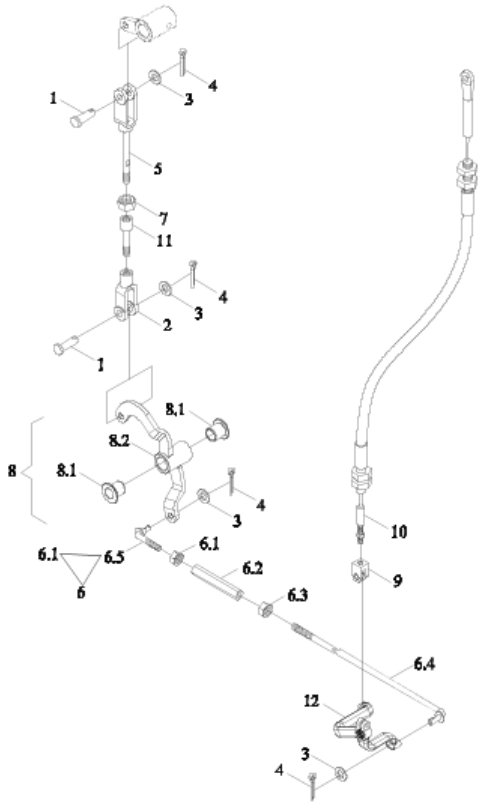

https://truckmanualshub.com/

TE354.433B BRAKE CONTROL ASSEMBLY-3


No.	Part No.	Description	Version	QTY.	Remark
	TE354.433B(3)	BRAKE CONTROL ASSEMBLY		1	
1	GBT882-B10X26-A3L	PIN SHAFT		2	
2	FT300.43.110(2)	PULL ROD REAR FORK		2	
3	GBT97.1-10-A3L(2)	FLAT WASHER		7	
4	GBT91-3.2X22-A3L(2)	SPLIT PIN		11	
5	TE250.433C-14a(2)	BRAKE UPPER CONNECTING ROD		1	
6	TE354.433B.5	LEFT BRAKE PULL ROD		1	
6.1	GBT6171-M12X1.5-LH-8-A3L(2)	HEXAGON NUT, TYPE-1		1	
6.2	TE354.433-03(2)	CONNECTING ROD		1	
6.3	GBT6171-M12X1.5-8-A3L(2)	HEXAGON NUT, TYPE-1		1	
6.4	TE354.433B.1	LEFT BRAKE LONG PULL ROD WELDMENT		1	
6.5	TE354.433.4	BRAKE SHORT PULL ROD WELDMENT		1	
7	GBT6171-M10X1-8-A2L(2)	HEXAGON NUT, TYPE-1		2	
8	TE354.433.5	LEFT LOWER ROCKER ASSEMBLY		1	
8.1	TE250.433C.4-01(2)	SLEEVE		2	
8.2	TE354.433.5.1	LEFT LOWER ROCKER WELDMENT		1	
9	TE250.433C-11(2)	CONNECTING FORK		2	
10	TE250.433C.12	LEFT BRAKE WIRE ASSEMBLY		1	
11	TE250.433C.17(2)	BRAKE SHORT PULL ROD WELDMENT		2	
12	TE354.433-01a	LEFT BRAKE ROCKER		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE300.44 SEAT INSTALLATION ASSEMBLY

https://truckmanualshub.com/

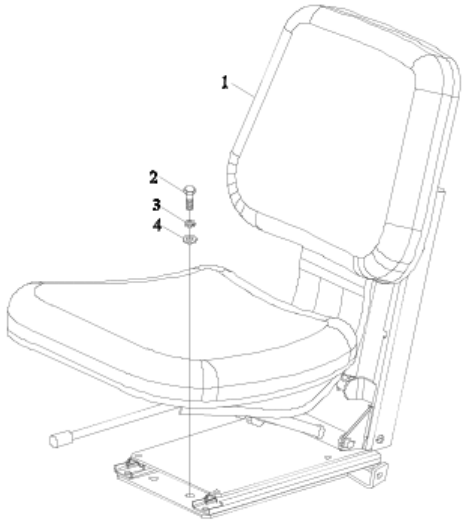


https://truckmanualshub.com/

TE300.44 SEAT INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.44A.1	SEAT ASSEMBLY		1	
2	GBT5783-M8X25-8.8-A2L	BOLT		4	
3	GBT93-8-A0P	WASHER		4	
4	GBT97.1-8-A0P	WASHER		4	

https://truckmanualshub.com/

TE250.455A DRIVER CAB INSTALLATION ASSEMBLY

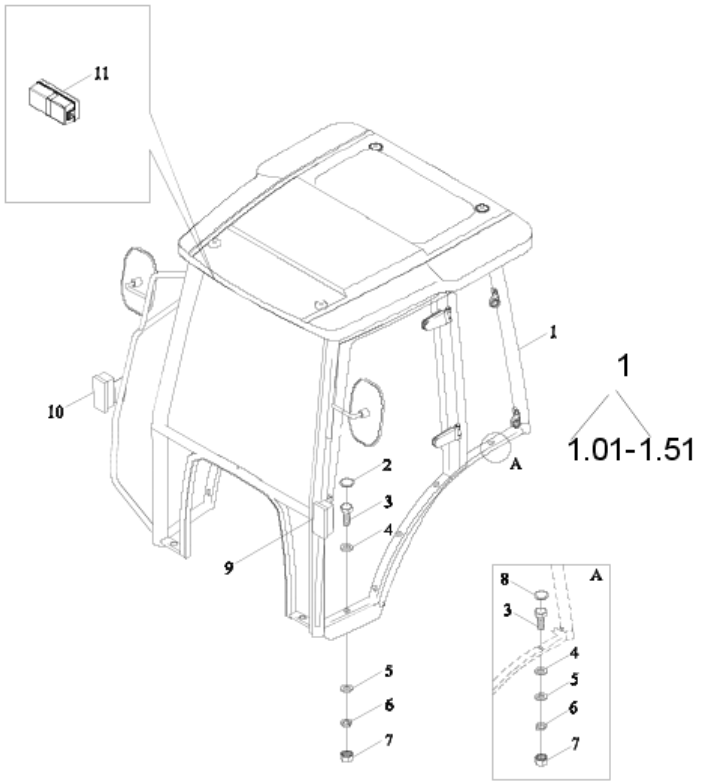
11
1
10
2
3
4
9
5
6
7
A
8
3
4
5
6
7
A
1
1.01-1.51

https://truckmanualshub.com/

TE250.455A DRIVER CAB INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE250.455A	驾驶室装配总成			
1	TE250.455A.1(2)	DRIVER’S CAB ASSEMBLY		1	
1.10	TE250.455.18(2)	WIRING HARNESS		2	
1.11	TE250.455.19(2)	WIND INTER GATE		2	
1.12	TE250.455.20(2)	WIND OUTPUT GATE		5	
1.13	TE250.455.21(2)	HOT AIR SWITCH		1	
1.14	TE250.455.22(2)	HEATERPIPE		2	
1.15	TE250.455.23(2)	RUBBER WASHER		4	
1.16	TE250.455.24(2)	HOSE		2	
1.17	TE250.455.25(2)	INSTALLATION SEAT		2	
1.18	TE250.455.28(2)	PROCESS HOLE COVER		2	
1.19	TE250.455.32(2)	SIGN MARK		1	
1.20	TE250.455.33(2)	SIGN MARK 0148		1	
1.21	TB600.45L.1-35(2)	BELT		2	
1.22	TB600.45L.2-06(2)	SIDE WINDOW WASHER		8	
1.23	TB600.45L-70(2)	RUBBER WASHER		4	
1.24	FT300.45.992(2)	PROCESSHOLECOVER		2	
1.25	TB600.45L-68(2)	SHADOW CURTAIN		1	
1.26	TB600.45L-29(2)	HOOK		2	
1.27	TB600.45L.1-29(2)	HOOK SCREW		2	
1.28	TE250.455.31(2)	FLAT WASHER		8	

https://truckmanualshub.com/

TE250.455A DRIVER CAB INSTALLATION ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
1.29	TE250.455.34(2)	FLAT WASHER		2	
1.30	TE250.455.35(2)	FLAT WASHER		2	
1.31	TB600.45L-30(2)	UPHOLSTERY TOP BUTTON		16	
1.32	TB600.45-05(2)	SUPPORTING PLATE ASSEMBLY		2	
1.33	TE250.455.17(2)	SPONGE		2	
1.34	TE250.455A.1.1(2)	DRIVER' S CAB WELDMENT ASSEMBLY		1	
1.35	TE250.455A.1.3(2)	3-GANG PADDLE SWITCH		1	
1.36	TE250.455.29(2)	SIDE WINDOW INTER MAT		2	
1.37	TB600.45L-54(2)	LEFT RIGHT RUBBER BUSH		2	
1.38	TB600.45L-31	GLASS MAT BLOCK		4	
1.39	TE250.455-01	LEFT FRONT LOWER WINDOW GLASS		1	
1.40	TE250.455-02	RIGHT FRONT LOWER WINDOW GLASS		1	
1.41	TE250.455-04a	FRONT WINDSHIELD		1	
1.42	TE250.455.10-01a	RIGHT DOOR GLASS		1	
1.43	TE250.455.10-04	RIGHT DOOR GLASS SEAL STRIP		1	
1.44	TE250.455.6-01a	REAR WINDOW GLASS		1	
1.45	TE250.455.6-04	REAR WINDOW GLASS SEAL STRIP		1	
1.46	TE250.455.7-01a	LEFT SIDE WINDOW GLASS		1	
1.47	TE250.455.7-02	GLASS SEAL STRIP OF LEFT SIDE WINDOW		1	
1.48	TE250.455.8-02	RIGHT SIDE WINDOW GLASS SEAL STRIP		1	
1.49	TE250.455.8-01a	RIGHT WINDOW GLASS		1	

https://truckmanualshub.com/

TE250.455A DRIVER CAB INSTALLATION ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
1.50	TE250.455.9-01a	LEFT DOOR GLASS		1	
1.51	TE250.455.9-02	SEAL STRIP OF DOOR GLASS		1	
2	TE250.453-08(2)	DRIVER'S CAB PLUG COVER		2	
3	GBT5783-M12X30-8.8-A3L(2)	HEXAGON BOLT		14	
4	GBT848-12-A0P(2)	SMALL WASHER		14	
5	GBT97.1-12-A0P(2)	FLAT WASHER		14	
6	GBT93-12-A0P(2)	STANDARD SPRING WASHER		14	
7	GBT6170-M12-8-A3L(2)	HEXAGON NUT, TYPE-1		14	
8	TG1254.451-10(2)	PROCESS HOLE COVER		12	
9	FT650.48.084(2)	LEFT RAIL LAMP ASSEMBLY		1	
10	FT650.48.085(2)	RIGHT RAIL LIGHT ASSEMBLY		1	
1.01	TB600.45.11(2)	FRONT SCRAPER ASSEMBLY		1	
1.02	TB600.45L-60(2)	REAR SCRAPER ASSEMBLY		1	
1.03	TE250.455.10a(2)	RIGHT DOOR ASSEMBLY		1	
1.04	TE250.455.4(2)	LEFT REAR MIRROR ASSEMBLY		1	
1.05	TE250.455.5(2)	RIGHT REAR MIRROR ASSEMBLY		1	
1.06	TE250.455.6a(2)	REAR WINDOW ASSEMBLY		1	
1.07	TE250.455.7a(2)	LEFT SIDE WINDOW ASSEMBLY		1	
1.08	TE250.455.8a(2)	RIGHT WINDOW ASSEMBLY		1	

https://truckmanualshub.com/


TE250.455A DRIVER CAB INSTALLATION ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
1.09	TE250.455.9a(2)	LEFT DOOR ASSEMBLY		1	
11	FT650.48.082(2)	TOP LIGHT ASSEMBLY		4	

https://truckmanualshub.com/

TE254.457 FRONT CONNECTING ASSEMBLY

https://truckmanualshub.com/

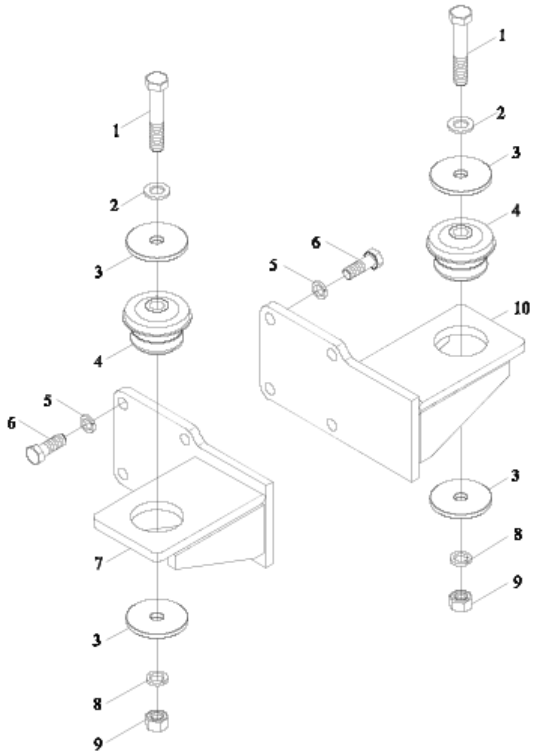

https://truckmanualshub.com/


TE254.457 FRONT CONNECTING ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M16X90-8.8-A2L	HEXAGON BOLT		2	
2	GBT97.1-16-A0P	FLAT WASHER		2	
3	TE254.457-01	RETAINER RING		4	
4	TE254.457.3	SHOCK ABSORBER		2	
5	GBT93-14-A0P	STANDARD SPRING WASHER		8	
6	GBT5783-M14X40-8.8-A3L	HEXAGON BOLT		8	
7	TE254.457.1	LEFT FRONT INSTALLATION BRACKET WELDMENT		1	
8	GBT93-16-A0P	STANDARD SPRING WASHER		2	
9	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		2	
10	TE254.457.2	RIGHT FRONT INSTALLATION BRACKET WELDMENT		1	

https://truckmanualshub.com/

TE354.458 REAR CONNECTING ASSEMBLY

https://truckmanualshub.com/

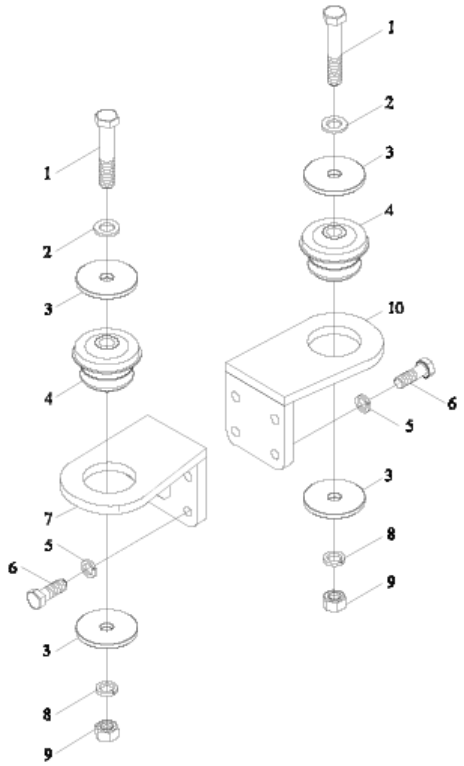

https://truckmanualshub.com/


TE354.458 REAR CONNECTING ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M16X90-8.8-A2L	HEXAGON BOLT		2	
2	GBT97.1-16-A0P	FLAT WASHER		2	
3	TE254.457-01	RETAINER RING		4	
4	TE254.457.3	SHOCK ABSORBER		2	
5	GBT93-12-A0P	STANDARD SPRING WASHER		8	
6	GBT5783-M12X30-8.8-A3L	HEXAGON BOLT		8	
7	TE354.458.1	LEFT REAR INSTALLATION BRACKET WELDMENT		1	
8	GBT93-16-A0P	STANDARD SPRING WASHER		2	
9	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		2	
10	TE354.458.2	RIGHT REAR INSTALLATION BRACKET WELDMENT		1	

https://truckmanualshub.com/

TE250.471C BONNET INSTALLATION ASSEMBLY

https://truckmanualshub.com/

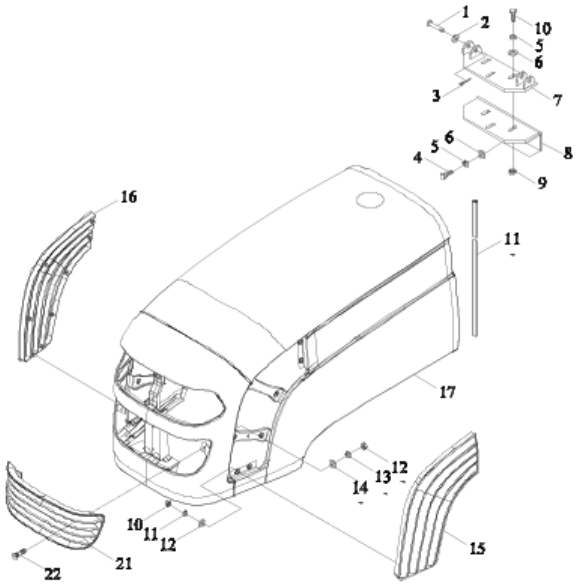

https://truckmanualshub.com/


TE250.471C BONNET INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT882-B12X50	PIN SHAFT		2	
2	GBT97.1-12-A0P	WASHER		2	
3	GBT91-4X20-A0P	PIN		2	
4	GBT5783-M10X30-8.8-A3L	BOLT		3	
5	GBT93-10-A0P	WASHER		6	
6	GBT97.1-10-A0P	WASHER		9	
7	TE250.471C.1	HINGE WELDMENT		1	
8	TE250.471C.2	FIXING BRACKET WELDMENT		1	
9	GBT6170-M10-8-A3L	NUT		3	
10	GBT5783-M10X35-8.8-A3L	BOLT		3	
11	FT250.47C.230	BONNET SEAL STRIP		1	
12	GBT6170-M6-8-A2L	NUT		3	
13	GBT93-6-A0P	WASHER		2	
14	GBT97.1-6-A0P	WASHER		2	
15	FT250B.47.302	LEFT FRONT GRID		1	
16	FT250B.47.303	RIGHT FRONT GRID		1	
17	TE250.471C.4	BONNET WELDMENT		1	
18	GBT97.1-5-A0P	WASHER		18	
19	GBT93-5-A0P	WASHER		18	
20	GBT6172.1-M5-A2L	HEXAGON THIN NUT		18	
21	FT250B.47.301	FRONT GRID		1	
22	GBT818-M6X16-4.8-A2L	CROSS SCREW		2	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE250.472E FLOOR INSTALLATION ASSEMBLY-1

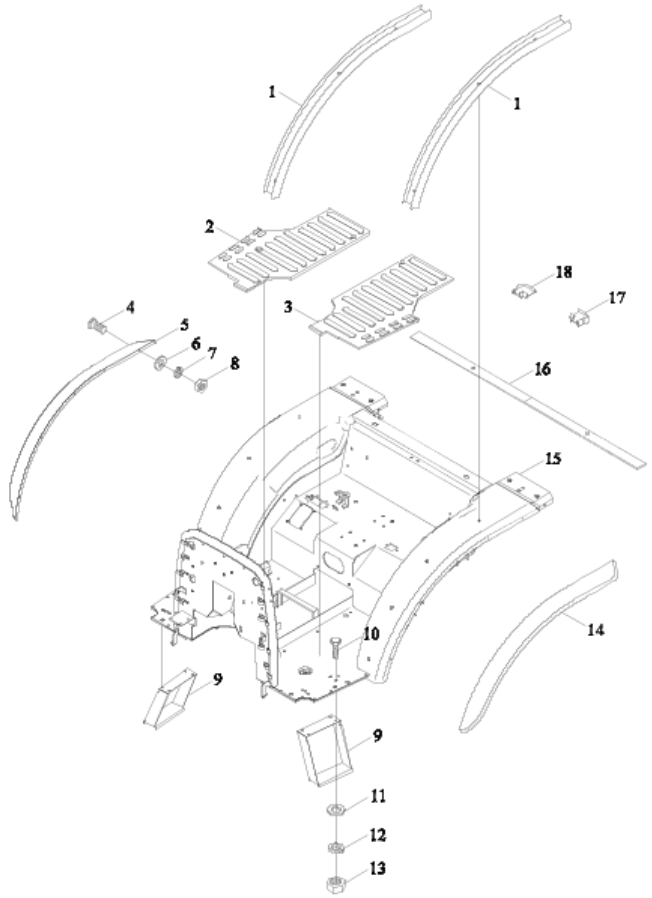


https://truckmanualshub.com/

TE250.472E FLOOR INSTALLATION ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.453-04	SIDE-GIRDER STRIP		2	
2	TE250.472E-02	RIGHT FLOOR MAT		1	
3	TE250.472E-03	LEFT FLOOR MAT		1	
4	GBT818-M5X12-4.8-A2L	CROSS SCREW		10	
5	TE254.472-02	RIGHT MUD GUARD OUTER PART		1	
6	GBT97.1-6-A0P	FLAT WASHER		10	
7	GBT93-6-A0P	STANDARD SPRING WASHER		10	
8	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		10	
9	TE250.453.2	PEDAL WELDMENT		2	
10	GBT5783-M10X35-8.8-A3L	HEXAGON BOLT		8	
11	GBT97.1-10-A0P	FLAT WASHER		8	
12	GBT93-10-A0P	STANDARD SPRING WASHER		8	
13	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		8	
14	TE254.472-01	LEFT MUD GUARD OUTER PART		1	
15	TE250.472E.1	FLOOR WELDMENT		1	
16	TE250.453-05	REAR BEAM RUBBER STRIP		1	
17	TB550.452D-14	LEFT REAR COLUMNIATION SEAL BODY		1	
18	TB550.452D-15	RIGHT REAR COLUMNIATION SEAL BODY		1	

TE250.472E FLOOR INSTALLATION ASSEMBLY-2

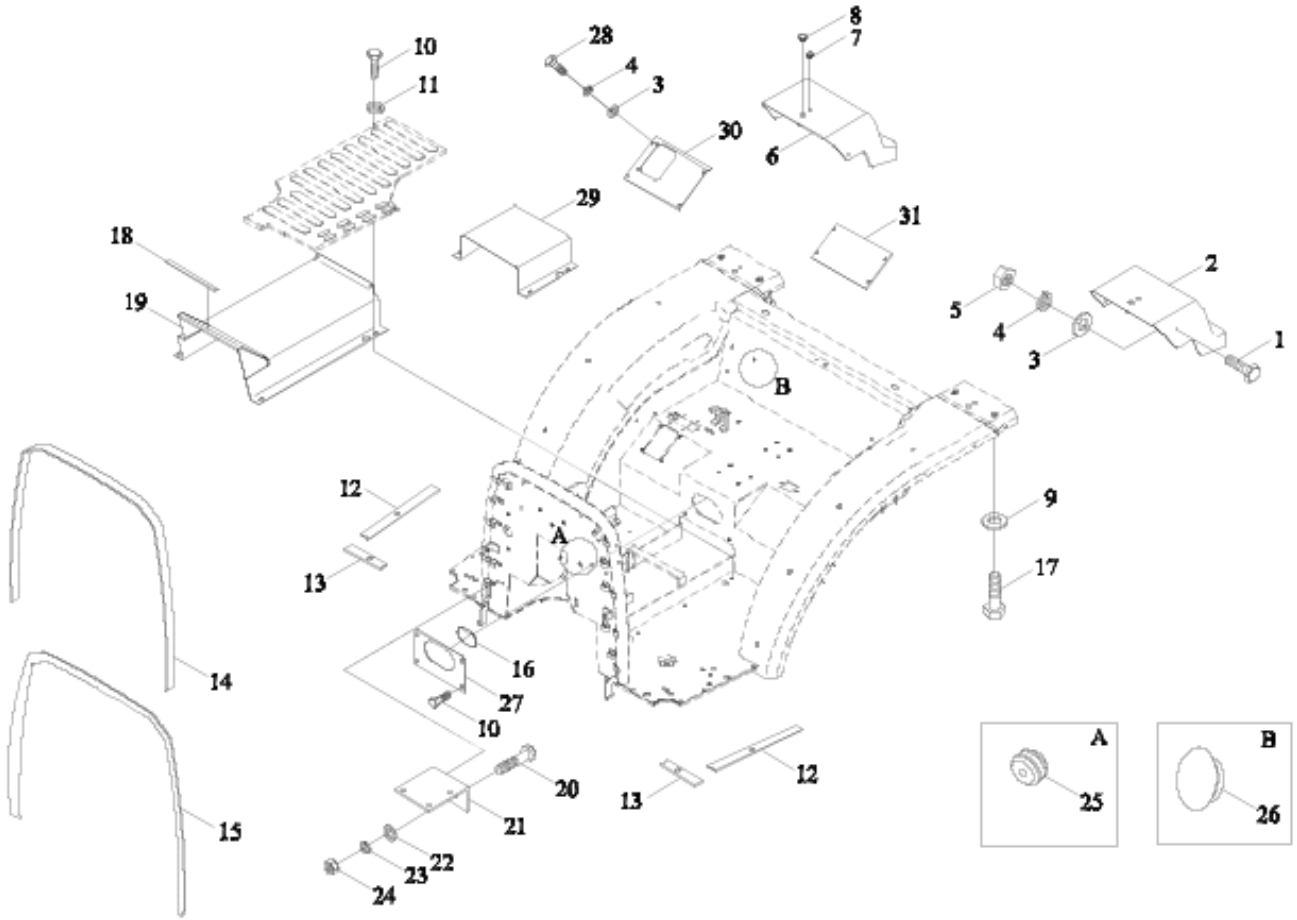

https://truckmanualshub.com/

TE250.472E FLOOR INSTALLATION ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M5X16-8.8-A2L	HEXAGON BOLT		4	
2	TE324.472.1-01	LEFT MUD GUARD REAR PART		1	
3	GBT97.1-6-A0P(2)	FLAT WASHER		12	
4	GBT93-6-A0P(2)	STANDARD SPRING WASHER		12	
5	GBT6170-M8-8-A2L(2)	HEXAGON NUT, TYPE-1		4	
6	TE324.472.2-01	RIGHT MUD GUARD REAR PART		1	
7	TE250.453-10	MUDGUARD PLUG COVER 2		2	
8	TE250.453-09	MUDGUARD PLUG COVER 1		2	
9	GBT97.1-6-A0P(3)	FLAT WASHER		10	
10	GBT5783-M6X16-8.8-A2L	HEXAGON BOLT		10	
11	GBT93-6-A0P(3)	STANDARD SPRING WASHER		8	
12	TE250.453-03	UPPER SIDE-GIRDER RUBBER STRIP		2	
13	TE250.472E-05	FRONT SIDE GIRDER SEAL STRIP		2	
14	TE250.472F-01	SEAL RUBBER STRIP		1	
15	TE250.472E-04	FRONT RUBBER STRIP		1	
16	TE254.472-10	REAR FLOOR COVER		1	
17	GBT5783-M6X12-8.8-A2L	HEXAGON BOLT		4	
18	TE250.472F-05	SEAL STRIP		1	
19	TE250.472F.3	UPPER COVER PLATE WELDMENT		1	
20	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
21	TE250.472F-04	SINGLE STEADY VALVE BRACKET		1	
22	GBT97.1-8-A0P	FLAT WASHER		2	
23	GBT93-8-A0P	STANDARD SPRING WASHER		2	

https://truckmanualshub.com/

TE250.472E FLOOR INSTALLATION ASSEMBLY-2 (cont'd.)


No.	Part No.	Description	Version	QTY.	Remark
24	GBT6170-M8-8-A2L(3)	HEXAGON NUT, TYPE-1		2	
25	TG1204.20A-02	THROUGH HARNESS WASHER		1	
26	TE250.472E-06	PLUG COVER		3	
27	TE250.472F-07	UPPER COVER PLATE		1	
28	GBT5783-M5X12-8.8-A2L	HEXAGON BOLT		8	
29	TE250.472F-06	REAR COVER PLATE		1	
30	TE254.472-13	CONTROL COVER PLATE		1	
31	TE254.472-14	COVER PLATE		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE250.474B DASHBOARD INSTALLATION ASSEMBLY

https://truckmanualshub.com/

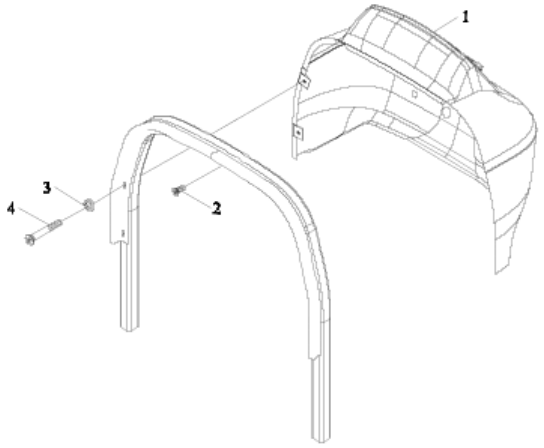

https://truckmanualshub.com/


TE250.474B DASHBOARD INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.474B.1	DASHBOARD		1	
2	GBT819.1-M5X10-4.8-A2L	SCREW		1	
3	GBT93-5-A0P	STANDARD SPRING WASHER		6	
4	GBT819.1-M5X50-4.8-A1L	SCREW		6	

https://truckmanualshub.com/

TE250.476D BONNET PNEUMATIC SPRING INSTALLATION ASSEMBLY

https://truckmanualshub.com/

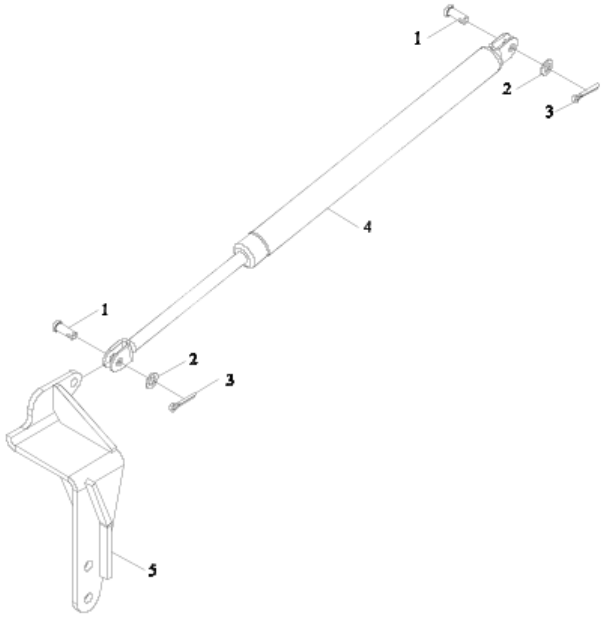

https://truckmanualshub.com/


TE250.476D BONNET PNEUMATIC SPRING INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	GBT882-B8X22	PIN SHAFT		2	
2	GBT95-8-A0P	FLAT WASHER		2	
3	GBT91-3.2X16-A0P	SPLIT PIN		2	
4	TE250.476D-01	BONNET PNEUMATIC SPRING		1	
5	TE254.471.6	PNEUMATIC SPRING FIXING BRACKET WELDMENT		1	

https://truckmanualshub.com/

TE250.477 BONNET LOCK INSTALLATION ASSEMBLY

https://truckmanualshub.com/

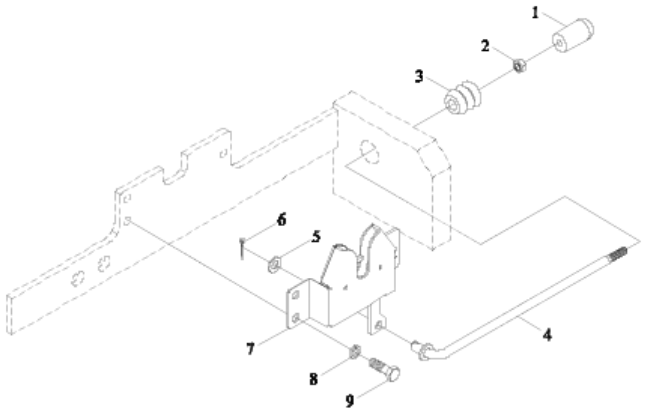

https://truckmanualshub.com/


TE250.477 BONNET LOCK INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE250.477	BONNET LOCK INSTALLATION ASSEMBLY		1	
1	TE250.477.3	HANDLE ASSEMBLY		1	
2	GBT6170-M5-8-A2L	HEXAGON NUT, TYPE-1		1	
3	TE250.477-01	RUBBER RING		1	
4	TE250.477.2	PULL ROD WELDMENT		1	
5	GBT97.1-6-A0P	FLAT WASHER		1	
6	GBT91-2X16-A0P	SPLIT PIN		1	
7	TE250.477.1	BONNET LOCK		1	
8	GBT93-5-A0P	STANDARD SPRING WASHER		3	
9	GBT5783-M5X10-8.8-A2L	HEXAGON BOLT		3	

https://truckmanualshub.com/

TE354.481 ENGINE HARNESS INSTALLATION ASSEMBLY

https://truckmanualshub.com/

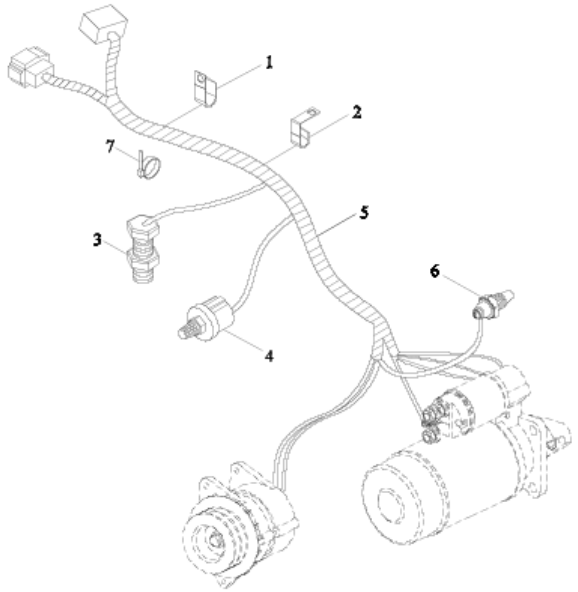


https://truckmanualshub.com/

TE354.481 ENGINE HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	FT304.48L.203	HARNESS TIGHTEN CLIP		1	
2	FT300.48.105	WIRE HARNESS CLIP (3)		2	
3	FT300.48.074	RPM SENSOR		1	
4	FT250.48.036	OIL PRESSURE ALARM		1	
5	TE354.481.1	ENGINE HARNESS ASSEMBLY		1	
6	TE250.481.2	WATER TEMPERATURE SENSOR		1	
7	Q67405100	PLASTIC FASTENING STRIP		1	

https://truckmanualshub.com/

TE354.482 BODY HARNESS INSTALLATION ASSEMBLY

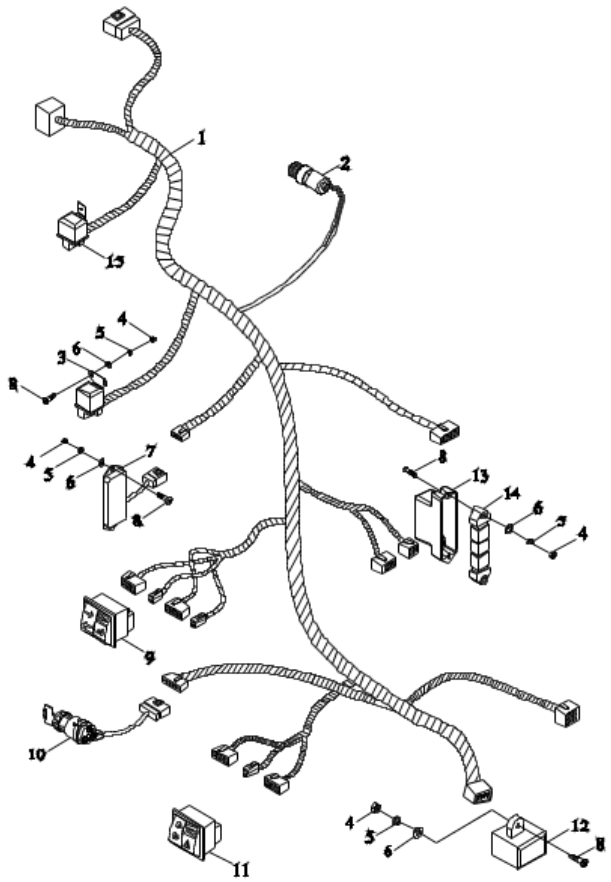
1
2
13
4
5
3
6
8
4
5
6
7
8
8
13
14
6
3
4
9
10
11
4
5
6
12
8


https://truckmanualshub.com/

TE354.482 BODY HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE354.482.1a	BODY HARNESS ASSEMBLY		1	
2	FT300.48.033	BRAKE LIGHT SWITCH		2	
3	FT300.48.055	STARTING RELAY		1	
4	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		8	
5	GBT93-6-A0P	STANDARD SPRING WASHER		10	
6	GBT97.1-6-A0P	FLAT WASHER		10	
7	TE250.482A.3	VOLTAGE ADJUSTER		1	
8	GBT818-M6X20-4.8-A2L	CROSS SCREW		10	
9	TH354.482.4	LEFT PADDLE SWITCH		1	
10	FT300.48.064	IGNITION LOCK		1	
11	TH354.482.5	RIGHT BUTTON SWITCH		1	
12	FT250.48F.043	FUSE BOX ASSEMBLY		1	
13	TE250.482A-02	RELAY BOX COVER		1	
14	TE250.482A.2	RELAY BOX ASSEMBLY		1	
15	FT65.48.055	LIGHT RELAY		1	
16	TE250.482Y-01	RELAY BRACKET		1	

https://truckmanualshub.com/

TE250.483 FRONT LAMP HARNESS INSTALLATION ASSEMBLY

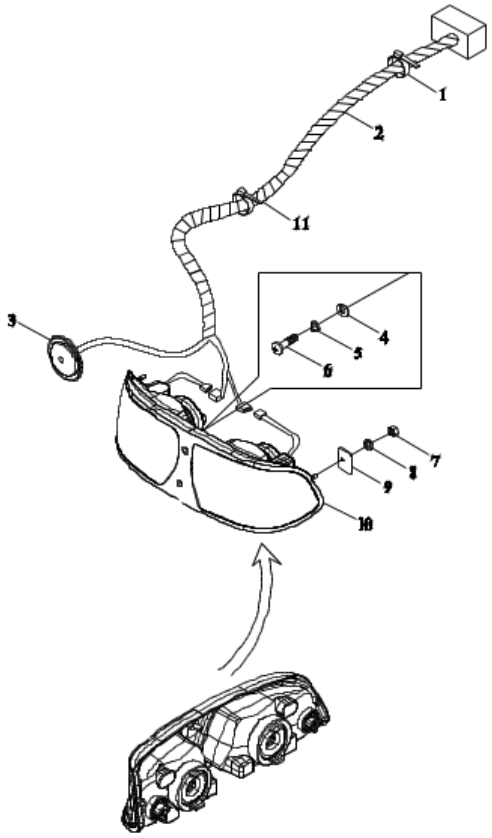
1
2
11
3
4
5
6
7
8
9
10

https://truckmanualshub.com/


TE250.483 FRONT LAMP HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	3724D01-201	RELEASABLE TIE		1	
2	TE250.483.1a	FRONT LAMP HARNESS ASSEMBLY		1	
3	FT65.48.340	HORN ASSEMBLY		1	
4	GBT97.1-8-A0P	WASHER		2	
5	GBT93-8-A0P	WASHER		2	
6	GBT818-M8X16-4.8-A2L	SCREW		2	
7	GBT6170-M6-8-A2L	NUT		2	
8	GBT93-6-A0P	WASHER		2	
9	TE250.483-01	PAD BOARD		2	
10	TE250.483.2	FRONT LAMP COMBINATION ASSEMBLY		1	
11	3203505D9-L	TIE		5	

https://truckmanualshub.com/

TE250.484M REAR LAMP HARNESS INSTALLATION ASSEMBLY

https://truckmanualshub.com/

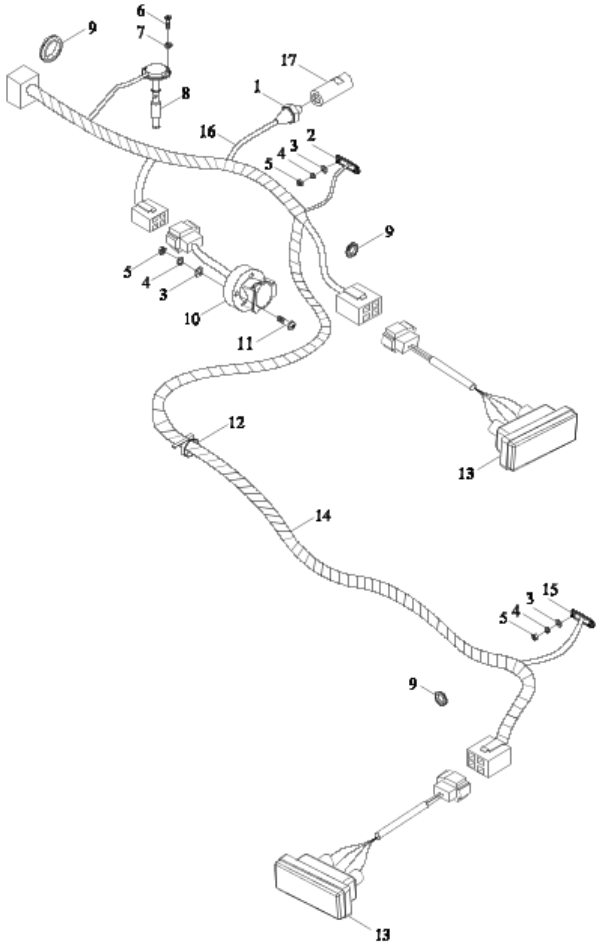

https://truckmanualshub.com/


TE250.484M REAR LAMP HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE250.484M	REAR LAMP HARNESS INSTALLATION ASSEMBLY		1	
1	TD800.484B.7	AIR PRESSURE ALARM		1	
2	TB450.484E.6	RIGHT REFLECTOR		1	
3	GBT97.1-5-A0P	WASHER		4	
4	GBT93-5-A0P	WASHER		4	
5	GBT6170-M5-8-A2L	NUT		4	
6	GBT818-M4X10-4.8-A2L	SCREW		5	
7	GBT93-4-A0P	WASHER		5	
8	TE250.484H.2	OIL QUANTITY SENSOR		1	
9	FT800A.48L.101	RUBBER RING		4	
10	TD900.484.2	REAR TRAILER SOCKET		1	
11	GBT818-M5X35-4.8-A1L	SCREW		3	
12	3724D01-201	RELEASABLE TIE		5	
13	TB404.484.3	TAIL LAMP ASSEMBLY		2	
14	TE250.484L.1	REAR LAMP HARNESS ASSEMBLY		1	
15	TB450.484E.5	LEFT REFLECTOR		1	
16	TE250.484M.2	AIR PRESSURE ALARM WIRE ASSEMBLY		1	
17	TE250.484-01	AIR PRESSURE ALARM JOINT		1	

https://truckmanualshub.com/

TE300.485C BATTERY INSTALLATION ASSEMBLY

https://truckmanualshub.com/

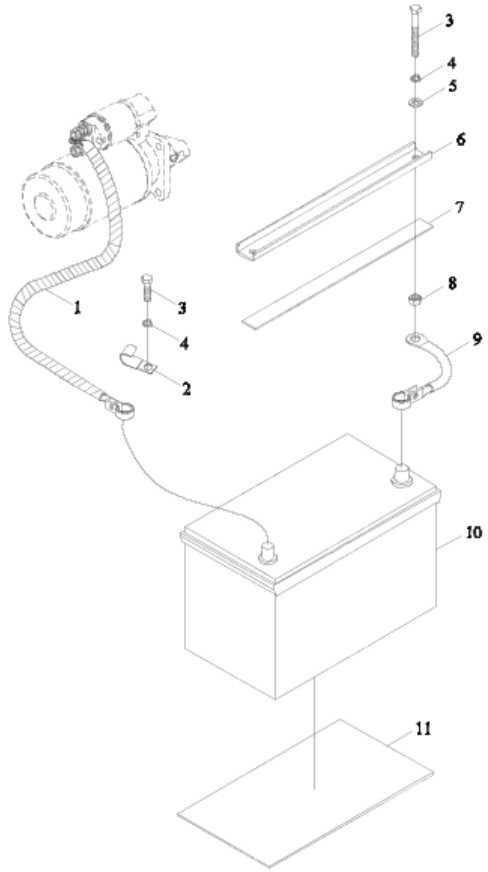

https://truckmanualshub.com/


TE300.485C BATTERY INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	FT300.48.017	POWER WIRE ASSEMBLY		1	
2	FT65.48.095	HARNESS FIXING CLAMP		1	
3	GBT5783-M8X80-8.8-A2L	HEXAGON BOLT		3	
4	GBT93-8-A0P	WASHER		3	
5	GBT97.1-8-A0P	WASHER		2	
6	TE300.485A-01	BATTERY PRESS PLATE		1	
7	TE250.485A-02	PRESSURE GASKET		1	
8	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
9	TE300.485.3	BATTERY CATHODE CABLE ASSEMBLY		1	
10	TE250.24B.1L	BATTERY ASSEMBLY		1	
11	FT250.24B.103	RUBBER SKIN		1	

https://truckmanualshub.com/

TE250.487 COMBINED INSTRUMENT ASSEMBLY

https://truckmanualshub.com/

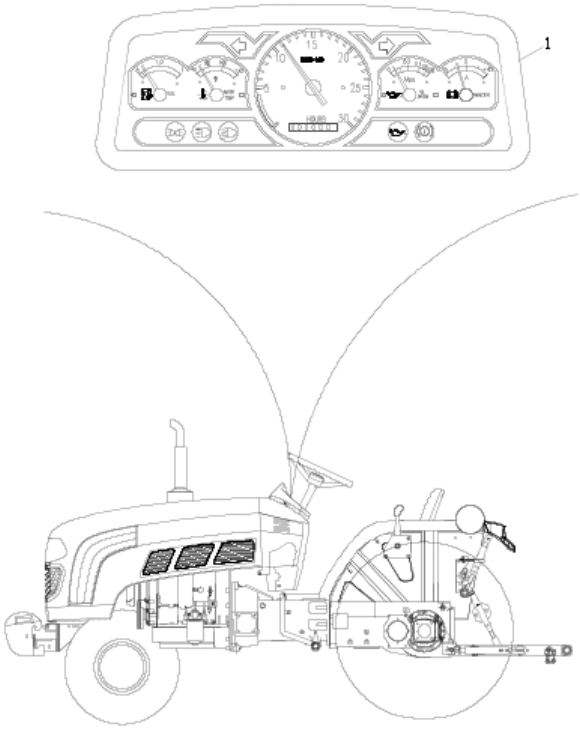

https://truckmanualshub.com/


TE250.487 COMBINED INSTRUMENT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE250.487	COMBINED INSTRUMENT ASSEMBLY		1	

https://truckmanualshub.com/

FT300.49.001 TOOL BOX ASSEMBLY

https://truckmanualshub.com/

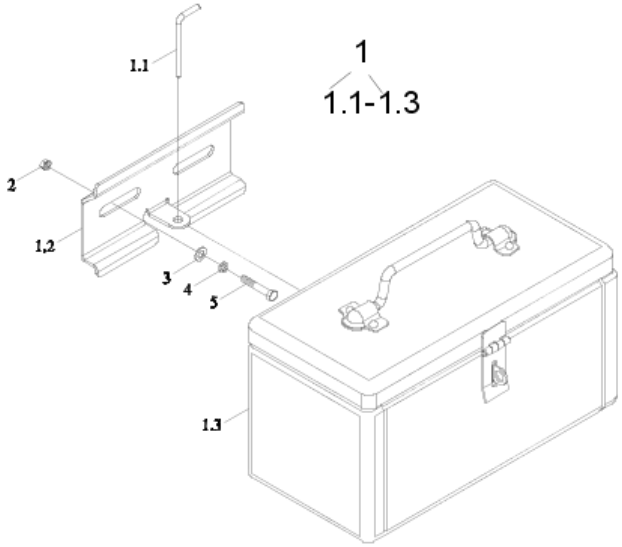


https://truckmanualshub.com/

FT300.49.001 TOOL BOX ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TB400.49.1	TOOL ASSEMBLY		1	
1.1	FT65.49.102	CROSS PIN		1	
1.2	FT65.49.103	FIXING SUPPORT PLATE		1	
1.3	TB400.49.1.1	TOOL ASSEMBLY		1	
2	GBT6170-M12-8-A3L	HEXAGON NUT, TYPE-1		2	
3	GBT97.1-12-A0P	FLAT WASHER		2	
4	GBT93-12-A0P	STANDARD SPRING WASHER		2	
5	GBT5783-M12X35-8.8-A3L	HEXAGON BOLT		2	

https://truckmanualshub.com/

TE354.50 OIL TANK INSTALLATION ASSEMBLY

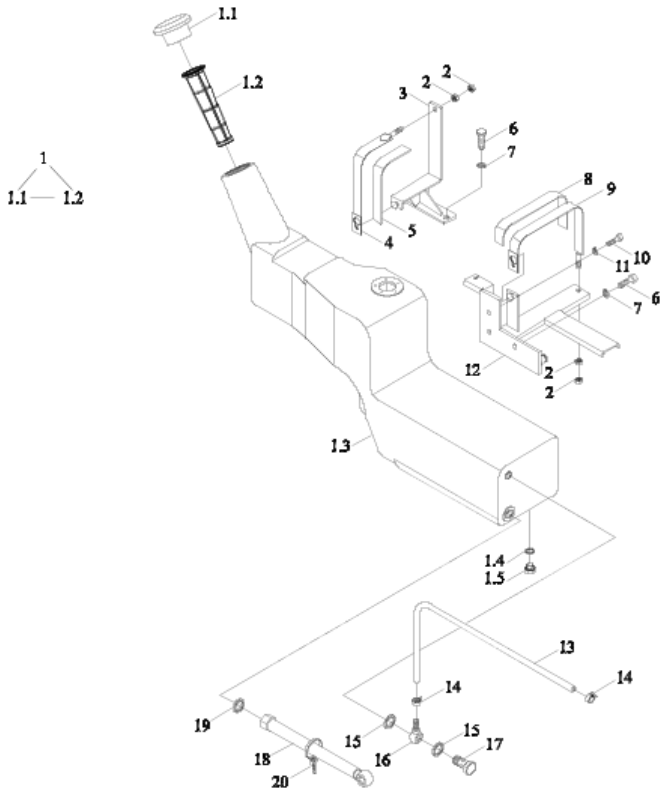
1
1.1
1.2
1.1
1.2
2
2
2
3
4
5
6
7
8
9
10
11
6
7
12
2
2
1.3
1.4
1.5
13
14
14
19
15
15
17
18
16
20

https://truckmanualshub.com/

TE354.50 OIL TANK INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE254.50A.1	OIL TANK ASSEMBLY		1	
1.1	TD800.501A.1.1	OIL TANK COVER		1	
1.2	TF1004.501.1-02	FILTER MESH		1	
1.3	TE254.50A.1-01	OIL TANK HOUSING		1	
1.4	JBT982-16	COMBINED SEAL GASKET		3	
1.5	Q617B16	HEXAGON PLUG		1	
2	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		4	
3	TE354.50.2	OIL TANK REAR BRACKET WELDMENT		1	
4	TE254.50A.4a	REAR FASTENING TIE WELDMENT		1	
5	TE254.50A-01	RUBBER WASHER 1		1	
6	GBT5783-M12X30-8.8-A3L	HEXAGON BOLT		4	
7	GBT93-12-A0P	STANDARD SPRING WASHER		4	
8	TE254.50A-02	RUBBER WASHER 2		1	
9	TE254.50A.5a	FRONT BAND WELDMENT		1	
10	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		1	
11	GBT93-10-A0P	STANDARD SPRING WASHER		1	
12	TE354.50.3	OIL TANK FRONT BRACKET WELDMENT		1	
13	TE354.50-01	BREATH PIPE		1	
14	Q673B13	STEEL STRIP ELASTIC HOOP		2	
15	JBT982-14	COMBINED SEAL GASKET		2	
16	FT800A.50.162	OIL PIPE JOINT		1	
17	FT65.50.106	HOLLOW BOLT		1	
18	TE354.50.6	OIL CONVEYING PIPE ASSEMBLY		1	

https://truckmanualshub.com/


TE354.50 OIL TANK INSTALLATION ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
19	TE254.50A-03	RUBBER WASHER		1	
20	Q67405200	PLASTIC FASTENING STRIP		4	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.55 LIFTER INSTALLATION ASSEMBLY-1

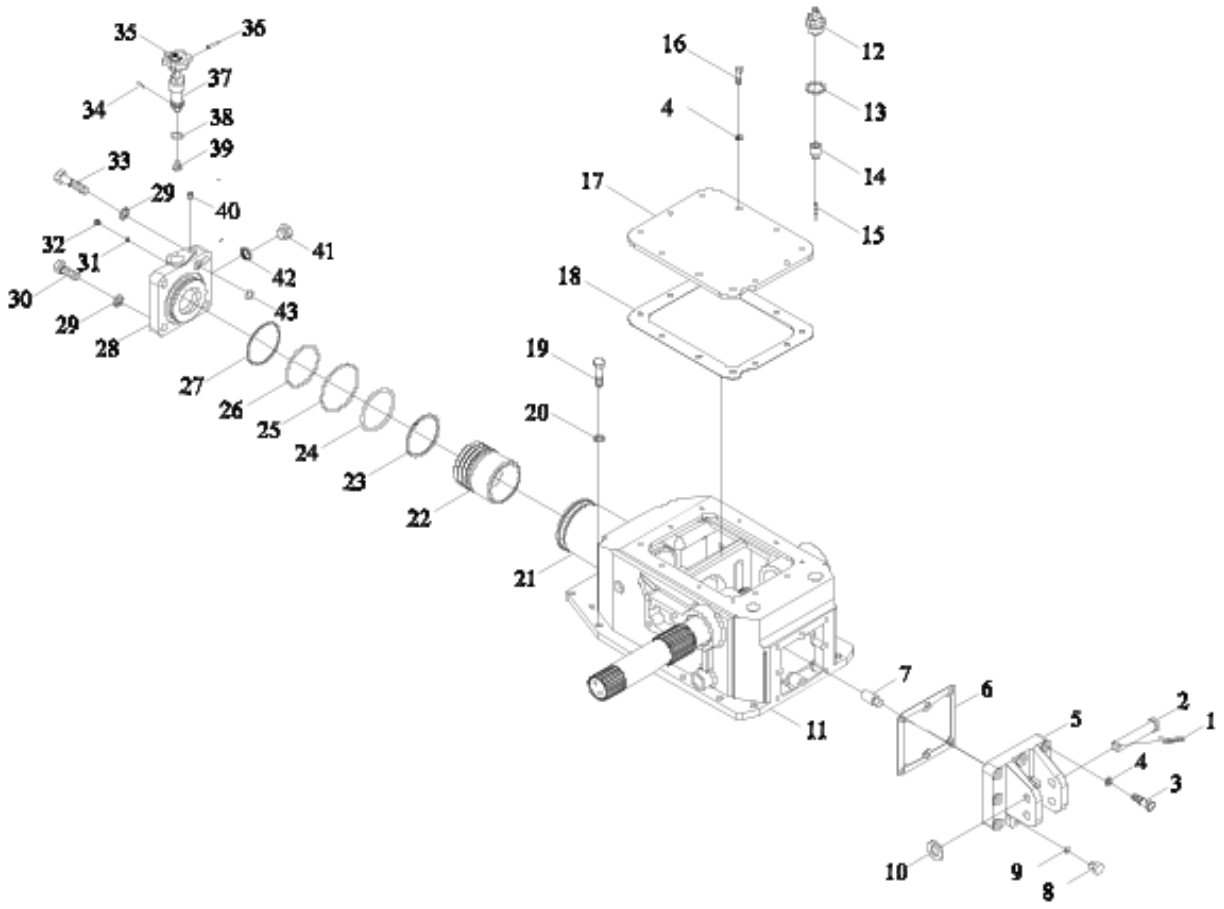

https://truckmanualshub.com/

TE354.55 LIFTER INSTALLATION ASSEMBLY-1


No.	Part No.	Description	Version	QTY.	Remark
1	FT800.55A.237	ELASTIC PIN		1	
2	18.55.107	UPPER PULL ROD FRONT CONNECTING PIN		1	
3	GBT5782-M10X45	BOLT		8	
4	GBT93-8	WASHER		11	
5	TE250.55A.112	REAR END COVER		1	
6	18.55.159	REAR END COVER PAPER GASKET		1	
7	18.55.141	LIMITING PIN		1	
8	18.55.108	OIL DISCHARGING PLUG		1	
9	JBT982-12	COMBINED SEAL GASKET		1	
10	GBT97.1-20	WASHER		1	
11	TE354.55.1	LIFTER ASSEMBLY		1	
12	TE250.55.011	VENTILATION PLUG BODY WELDMENT		1	
13	18.55.104	WASHER		1	
14	18.55.136	OIL FILLING COVER CORE		1	
15	TE354.55.110	DIPSTICK		1	
16	GBT5783-M8X20	BOLT		14	
17	TE354.55.103	UPPER COVER PLATE		1	
18	TE354.55.108	UPPER COVER GASKET		1	
19	GBTT5783-M10X30-A3L	BOLT		12	
20	GBTT93-10-A0P	WASHER		12	
21	YT300B.55.114	CYLINDER TRUNK		1	
22	E300.55.012	PISTON ASSEMBLY		1	
23	E300.55.117	RETAINER RING		1	

https://truckmanualshub.com/

TE354.55 LIFTER INSTALLATION ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
24	GBT3452.1-75X5.3	O-RING		1	
25	GBT3452.1-90X3.55	O-RING		1	
26	GBT3452.1-77.5X3.55	O-RING		1	
27	E300.55.118	RETAINER RING		1	
28	TE354.55.106	CYLINDER HEAD		1	
29	GBT93-14	WASHER		4	
30	GBT5785-M14X1.5X50	BOLT		3	
31	GBT97.1-5	WASHER		1	
32	GBT828-M5X6X4-22H	SCREW		1	
33	GBT5785-M14X1.5X60	BOLT		1	
34	300.55.138	PIN		1	
35	E300.55.140A	SPEED DROP VALVE HAND WHEEL		1	
36	GBT879-4X22	PIN		1	
37	TE354.55.109	ADJUSTING VALVE ROD		1	
38	GBT1235-22X2.4	O-RING		1	
39	YT18.55.129	ADJUSTING VALVE		1	
40	25.55.169	PLUG ZG18		1	
41	25.55.109A	HEXAGON SCREW PLUG		1	
42	JBT982-18	COMBINED SEAL WASHER		1	
43	GBT1235-18X2.4	O-RING		1	

TE354.55 LIFTER INSTALLATION ASSEMBLY-2

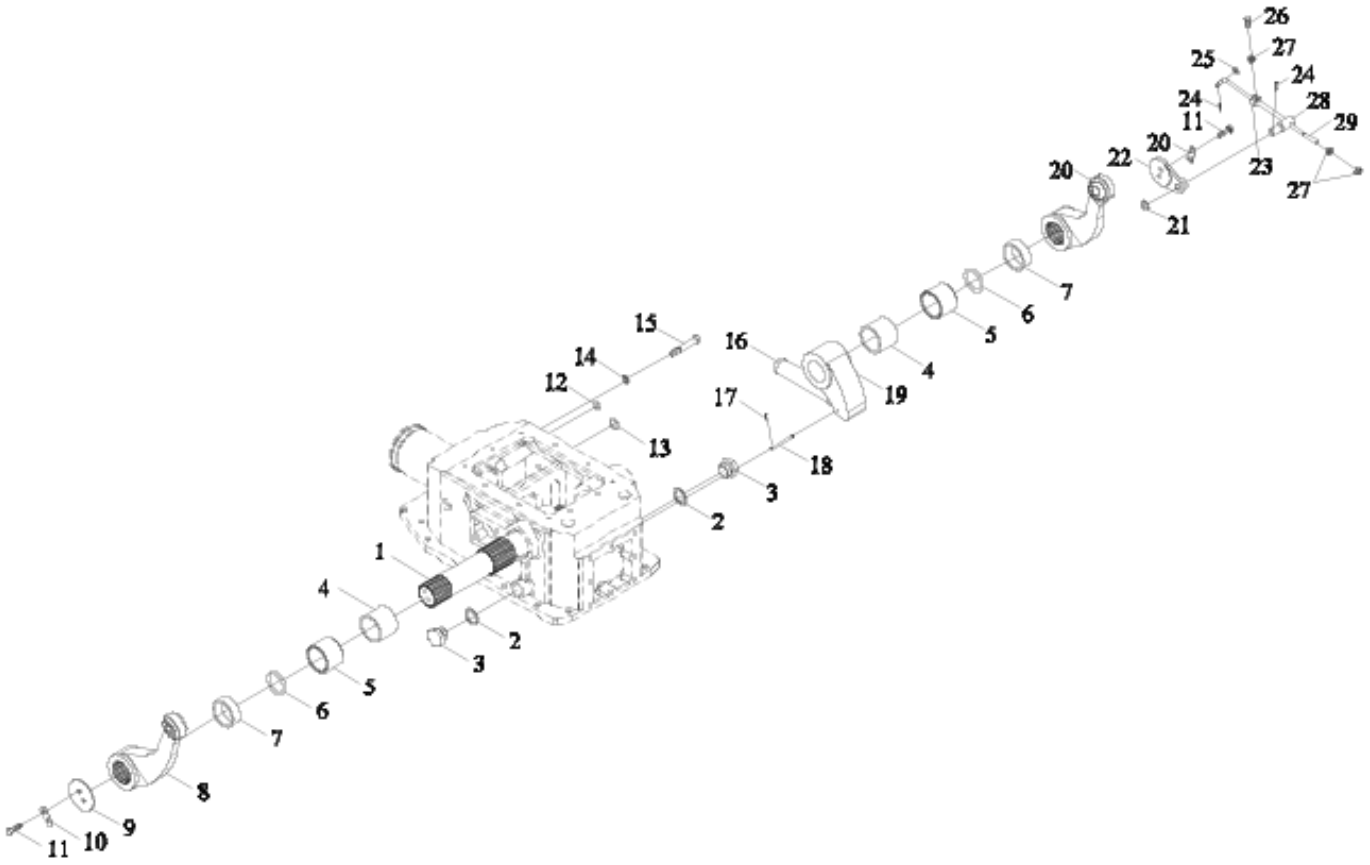

https://truckmanualshub.com/

TE354.55 LIFTER INSTALLATION ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
1	TE354.55.105	LIFTING SHAFT		1	
2	JBT982-27	COMBINED SEAL GASKET		3	
3	TE250.55A.109	PLUG 27X1.5		3	
4	FT500A.55B.105	SPACER BUSH		2	
5	E300.55.116	SHAFT SLEEVE		2	
6	GBT1235-60X5.7	O-RING		2	
7	BY350.55.103A	LIFTING SHAFT SLEEVE		2	
8	TE354.55.011	LEFT LIFTING ARM ASSEMBLY		1	
9	FT500B.55.127	LIFTING SHAFT PRESSURE PLATE		1	
10	GBT93-10	WASHER		12	
11	GBT5781-M10X20	BOLT		1	
12	GBT3452.1-13.2X2.65	O-RING		1	
13	GBT3452.1-19X2.65	O-RING		1	
14	GBT93-10-A0P	WASHER		3	
15	GBT5783-M10X80-A3L	BOLT		3	
16	TE354.55.104	PISTON TOP ROD		1	
17	GBT91-2X12	PIN		1	
18	300.55.148A	PIN SHAFT		1	
19	300.55.151	INNER LIFTING ARM		1	
20	TE354.55.010	RIGHT LIFTING ARM ASSEMBLY		1	
21	GBT97.1-12	WASHER		1	
22	18.55.145	RETURN RETAINER PLATE		1	
23	18.55.110	RETAINER BLOCK		1	

https://truckmanualshub.com/


TE354.55 LIFTER INSTALLATION ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
24	GBT91-2X16	PIN		2	
25	GBT97.1-8	WASHER		1	
26	GBT5783-M8X20(2)	BOLT		14	
27	GBT6170-M8	NUT		3	
28	14.55.107	LIMITING PIN SHAFT		1	
29	TE250.55A.107	LIFTING ADJUSTING ROD		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.55 LIFTER INSTALLATION ASSEMBLY-3

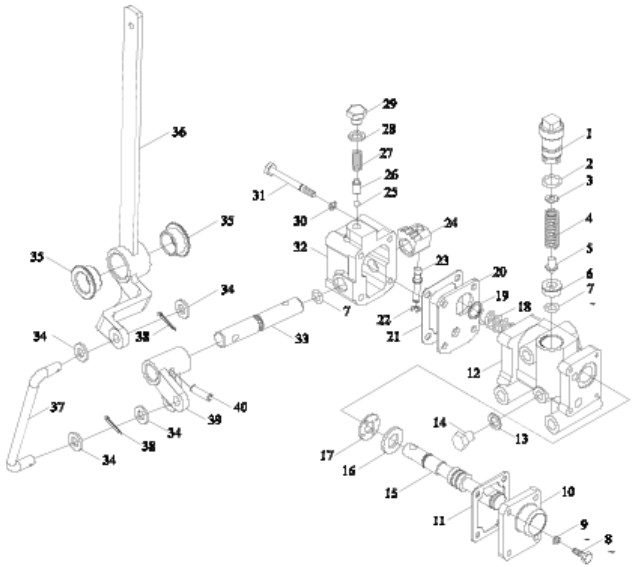

https://truckmanualshub.com/

TE354.55 LIFTER INSTALLATION ASSEMBLY-3

No.	Part No.	Description	Version	QTY.	Remark
1	18FP.57.110	PRESSURE PLUG		1	
2	GBT3452.1-15X2.65G	O-SEAL RING		1	
3	18FP.57.111	ADJUSTING WASHER		1	
4	18FP.57.112	SAFETY VALVE SPRING		1	
5	18FP.57.119	SAFETY VALVE CORE		1	
6	18FP.57.101	SAFETY VALVE SEAT		1	
7	GBT3452.1-9.5X2.65G	O-SEAL RING		2	
8	GBT5783-M5X16	BOLT		4	
9	GBT93-5	WASHER		4	
10	18FP.57.102	FRONT COVER		1	
11	18FP.57.103	FRONT COVER PAPER GASKET		1	
12	18FP.57.104A	DISTRIBUTOR HOUSING		1	
13	150D.55.227-2	SEAL RING		1	
14	JBT1000-M10X1X12	HEXAGON SCREW PLUG		1	
15	18FP.57.113-1	SLIDING VALVE		1	
16	18FP.57.120	WASHER		1	
17	18FP.57.115	WASHER		1	
18	18FP.57.114	SLIDING VALVE RETURN SPRING		1	
19	GBT894.1-15	RETAINER RING		1	
20	18FP.57.106	RETAINER PLATE		1	
21	18FP.57.107	REAR COVER PAPER GASKET		2	
22	GBT896-4	RETAINER RING		1	
23	14FP.57.105	DIAL PIN		1	

https://truckmanualshub.com/

TE354.55 LIFTER INSTALLATION ASSEMBLY-3 (cont'd.)


No.	Part No.	Description	Version	QTY.	Remark
24	14FP.57.104	LOCATING BLOCK		1	
25	GBT308-6V	STEEL BALL		1	
26	14FP.57.118	LOCATING SPRING SEAT		1	
27	14FP.57.119	LOCATING SPRING		1	
28	14FP.57.121	MAT		1	
29	14FP.57.120	SCREW PLUG		1	
30	GBT93-6	WASHER		6	
31	GBT5782-M6X60	BOLT		4	
32	18FP.57.108	REAR COVER		1	
33	TE250.57.102	HANDLE SHAFT		1	
34	GBT97.1-8(2)	FLAT WASHER		2	
35	TE250.57.103	NYLON BUSH		2	
36	TE354.57.1.1	CONTROL ARM WELDMENT		1	
37	TE250.57.106	PULL ROD		1	
38	GBT91-2X18	SPLIT PIN		2	
39	TE250.57.101	CONTROL ROCKER 1		1	
40	GBT879-6X22	ELASTIC PIN		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE250.556C HYDRAULIC AUXILIARY OIL TANK ASSEMBLY

https://truckmanualshub.com/

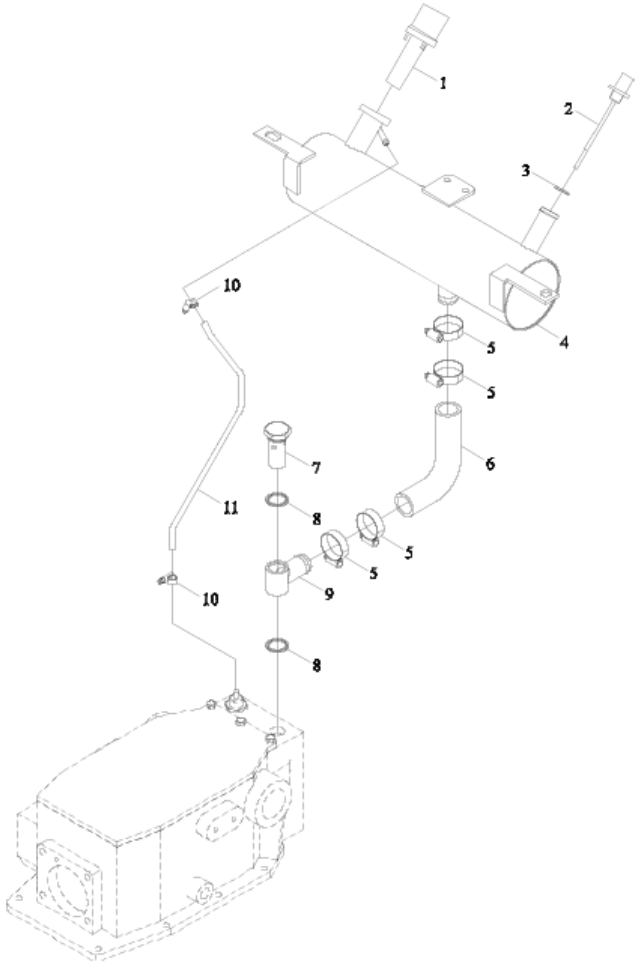


https://truckmanualshub.com/

TE250.556C HYDRAULIC AUXILIARY OIL TANK ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TD800.556.4	OIL TANK AIR FILTER		1	
2	TD800.556.3	OIL DIPSTICK ASSY		1	
3	JBT982-18	COMBINED SEAL GASKET		1	
4	TE250.556C.1	HYDRAULIC AUXILIARY FUEL TANK WELD		1	
5	Q67645	B-TYPE WORM TRANSMISSION HOSE CLAMP		4	
6	TE250.556B-01	OIL INLET RUBBLE HOSE		1	
7	TE250.556B-04	HOLLOW BOLT		1	
8	JBT982-27	COMBINED SEAL GASKET		2	
9	TE250.556B-03	OIL PIPE JOINT		1	
10	Q67512	A-TYPE WORM TRANSMISSION HOSE CLAMP		2	
11	TE250.556B-02	BREATH HOSE		1	

https://truckmanualshub.com/

TE354.56 SUSPENSION ASSEMBLY-1

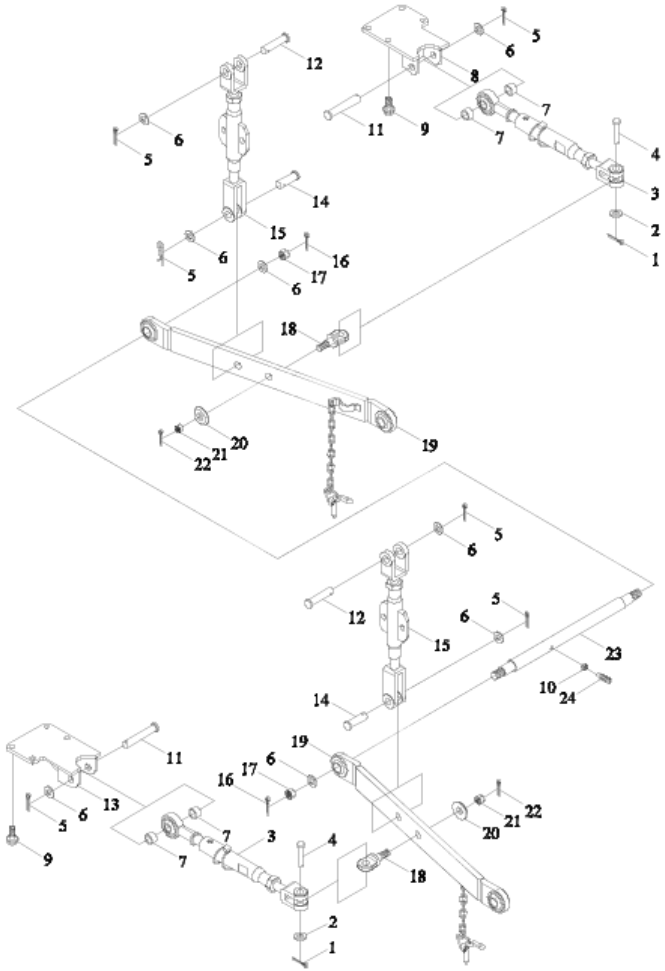

https://truckmanualshub.com/

TE354.56 SUSPENSION ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
1	GBT91-5X32-A0P	PIN		2	
2	GBT97.1-18-A0P	WASHER		2	
3	TE300.56.3a	LIMIT ROD ASSEMBLY		2	
4	GBT882-B18X55	PIN SHAFT		2	
5	GBT91-3.2X36-A0P	PIN		6	
6	GBT97.1-20-A0P	WASHER		8	
7	FT300.56A.103	BUSH		4	
8	TE300.56.4a	RIGHT LIMITING ROD BRACKET WELDMENT		1	
9	GBT16674.1-M14X30-10.9-A3L	HEXAGON FLANGE NUT		8	
10	GBT6172.1-M12-04-A3L	HEXAGON THIN NUT		1	
11	TE300.56-07	LIMITING ROD CONNECTING PIN		2	
12	FT300.56A.101	LIFTING ROD UPPER CONNECTING PIN		2	
13	TE300.56.5a	LEFT LIMITING ROD BRACKET WELDMENT		1	
14	TE300.56-03	LIFTING ROD LOWER CONNECTING PIN		2	
15	TE354.56.1	LIFTING ROD ASSEMBLY		2	
16	GBT91-4X40-A0P	PIN		2	
17	GBT6178-M20-8	HEXAGON SLOTTED NUT, STYLE 1		2	
18	TE300.56-01	LIMITING ROD REAR CONNECTING PIN		2	
19	TE300.56.1	LOWER PULL ROD ASSEMBLY		2	
20	TE300.56-02	CIRCULAR PLATE		2	
21	GBT6178-M16-8	HEXAGON SLOTTED NUT, STYLE 1		2	
22	GBT91-4X36-A0P	PIN		2	


https://truckmanualshub.com/

TE354.56 SUSPENSION ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	TE300.56-04	LOWER PULL ROD FIXING SHAFT		1	
24	FT250.56.125	THRUST SCREW		1	

https://truckmanualshub.com/

TE354.56 SUSPENSION ASSEMBLY-2

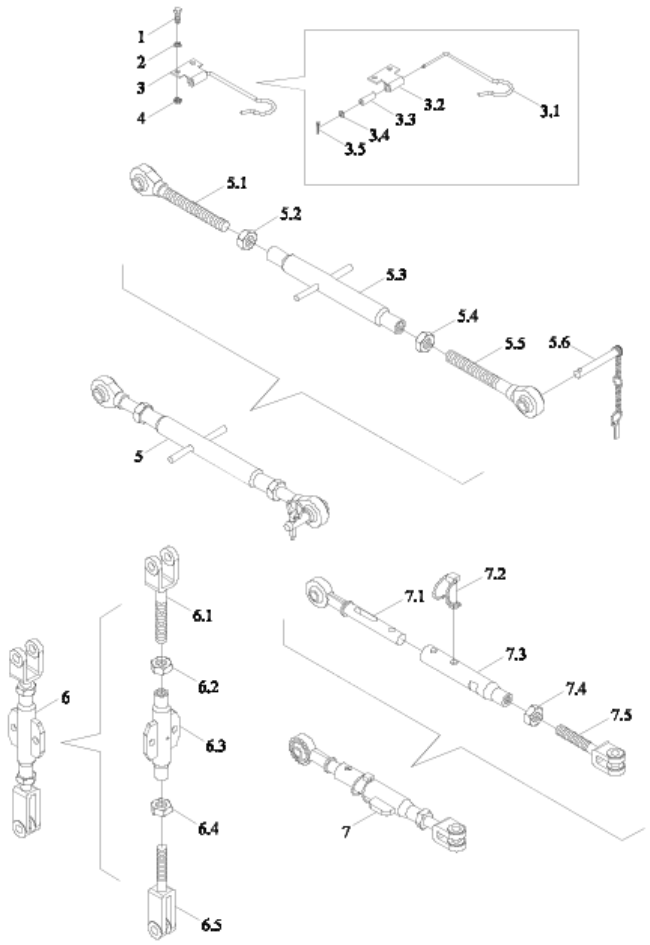

https://truckmanualshub.com/

TE354.56 SUSPENSION ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		1	
2	GBT93-8-A0P	SPRING WASHER		1	
3	TE300.56.6	UPPER PULL ROD FIXED CLIP COMBINATION		1	
3.1	TE300.56.6-02	UPPER PULL ROD FIXING CLIP		1	
3.2	TE300.56.6-01	FIXING SEAT		1	
3.3	TE300.56.6-03	NYLON BUSH		1	
3.4	GBT96.1-6-A0P	BIG WASHER		1	
3.5	GBT91-2X14-A0P	SPLIT PIN		1	
4	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
5	FT250.56.012a	UPPER PULL ROD ASSEMBLY		1	
5.1	FT250.56.017	UPPER PULL ROD FRONT ADJUSTING ROD ASSEMBLY		1	
5.2	GBT6171-M22X1.5-8-A3L	HEXAGON NUT, TYPE-1		1	
5.3	FT250.56.031	ADJUSTING SCREW WELDMENT		1	
5.4	GBT6171-M22X1.5-LH-8-A3L	HEXAGON NUT, TYPE-1		1	
5.5	FT250.56.019	UPPER PULL ROD REAR ADJUSTING ROD ASSEMBLY		1	
5.6	FT300.56A.113	LOCKING PIN CHAIN ASSEMBLY		1	
6	TE354.56.1(2)	LIFTING ROD ASSEMBLY		1	
6.1	TE354.56.1-01	LIFTING ROD UPPER CONNECTING FORK		1	
6.2	TE300.56.2-03	NUT		1	
6.3	TE300.56.2.1a	LIFTING SOLENOID WELDMENT		1	
6.4	TE300.56.2-04	NUT		1	
6.5	TE300.56.2-01a	LIFTING ROD LOWER CONNECTING FORK		1	
7	TE300.56.3a(2)	LIMIT ROD ASSEMBLY		1	

https://truckmanualshub.com/

TE354.56 SUSPENSION ASSEMBLY-2 (cont'd.)


No.	Part No.	Description	Version	QTY.	Remark
7.1	TE300.56.3A.1	EXTENSIBLE ROD BALL ASSEMBLY		1	
7.2	FT300.56A.023(J)	LIMITING ROD LOCK PIN ASSEMBLY		1	
7.3	TE300.56.3A-01	EXTENSIBLE GUIDE PIPE		1	
7.4	GBT6170-M22-8-A9L	HEXAGON NUT, TYPE-1		1	
7.5	TE300.56.3A-02	LIMITING ROD ADJUSTING SCREW		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.57 DISTRIBUTOR AND CONTROL MECHANISM ASSEMBLY-1

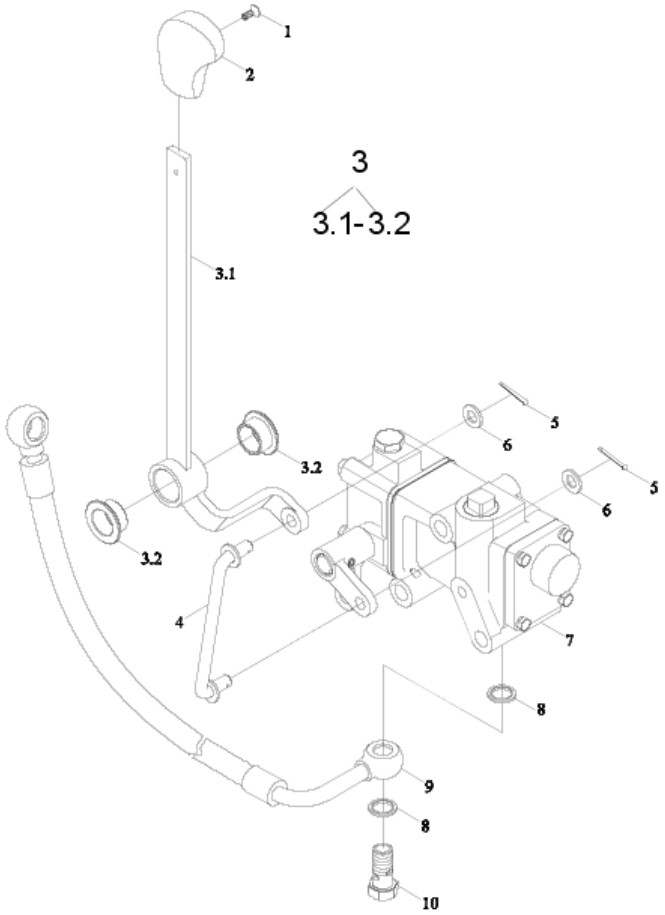


https://truckmanualshub.com/

TE354.57 DISTRIBUTOR AND CONTROL MECHANISM ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
1	GBT68-M4X10-4.8-A2L	SLOTTED SCREW		1	
2	TB504.552-04	HANDLE HEAD		1	
3	TE354.57.1	CONTROL ARM ASSEMBLY		1	
3.1	TE354.57.1.1	CONTROL ARM WELDMENT		1	
3.2	TE250.57.2-01	NYLON BUSH		2	
4	TE250.57.3	PULL ROD WELDMENT		1	
5	GBT91-2X18-A0P	SPLIT PIN		2	
6	GBT97.1-8-A0P	FLAT WASHER		2	
7	TE250.57.1	DISTRIBUTOR ASSEMBLY		1	
8	JBT982-18	COMBINED SEAL GASKET		2	
9	TE354.57.2	DISTRIBUTOR OIL INLET PIPE ASSEMBLY		1	
10	FT654.58.112	HOLLOW BOLT -3		1	

https://truckmanualshub.com/

TE354.57 DISTRIBUTOR AND CONTROL MECHANISM ASSEMBLY-2

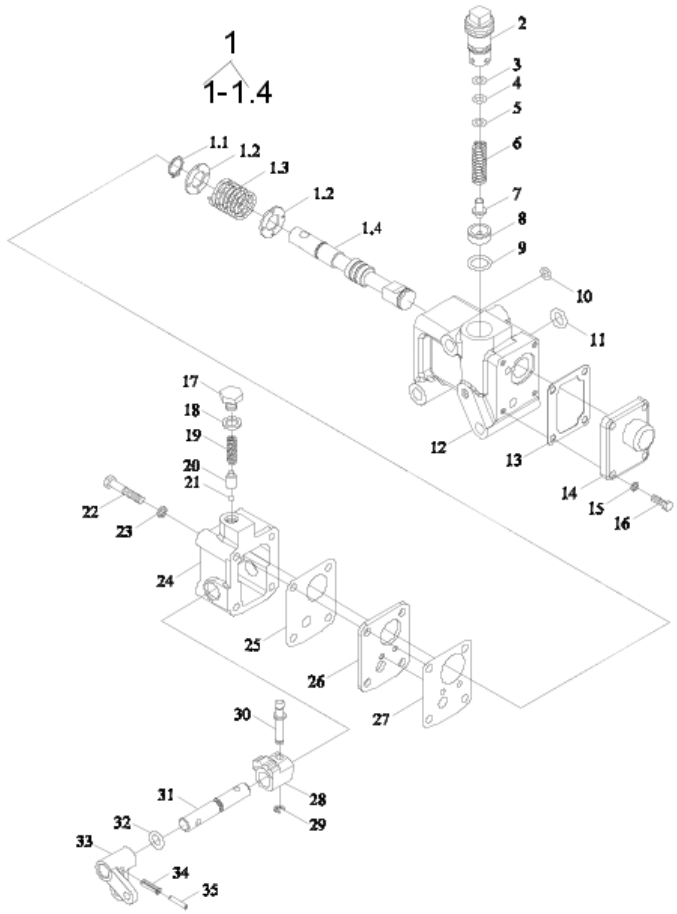

https://truckmanualshub.com/

TE354.57 DISTRIBUTOR AND CONTROL MECHANISM ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TE250.57.1(2)	DISTRIBUTOR ASSEMBLY		1	
1	FT250.57.010	SLIDING VALVE ASSEMBLY		1	
1.1	GBT894.1-15	RETAINER RING		1	
1.2	FT250.57.115	SPRING RETAINER PIECE		2	
1.3	FT250.57.114	SLIDING VALVE RETURN SPRING		1	
1.4	FT250.57.113	SLIDING VALVE		1	
2	FT250.57.128	PRESSURE PLUG		1	
3	FT250.57.110	ADJUSTING WASHER		1	
4	FT250.57.111	ADJUSTING WASHER		1	
5	FT250.57.112	ADJUSTING WASHER		1	
6	FT250.57.129	SAFETY VALVE SPRING		1	
7	FT250.57.131	SAFETY VALVE CORE		1	
8	FT250.57.101	SAFETY VALVE SEAT		1	
9	GBT3452.1-15.0X2.65G	RUBBER O-SEAL RING		1	
10	GBT3452.1-13.2X2.65G	RUBBER O-SEAL RING		1	
11	GBT3452.1-19.0X2.65G	RUBBER O-SEAL RING		1	
12	FT250.57.104	DISTRIBUTOR HOUSING		1	
13	FT250.57.103	FRONT COVER PAPER GASKET		1	
14	FT250.57.102	FRONT COVER		1	
15	GBT93-5-A0P	STANDARD SPRING WASHER		4	
16	GBT5781-M5X16-4.8-A2L	HEXAGON BOLT		4	
17	FT250.57.123	SCREW PLUG		1	
18	FT250.57.124	WASHER		1	

https://truckmanualshub.com/

TE354.57 DISTRIBUTOR AND CONTROL MECHANISM ASSEMBLY-2 (cont'd.)


No.	Part No.	Description	Version	QTY.	Remark
19	FT250.57.122	LOCATING SPRING		1	
20	FT250.57.121	LOCATING SPRING SEAT		1	
21	GBT308-5-G100-B	STEEL BALL		1	
22	GBT5780-M6X55-4.8-A1L	HEXAGON BOLT		4	
23	GBT93-6-A0P	STANDARD SPRING WASHER		4	
24	FT250.57.108	REAR COVER		1	
25	FT250.57.107	REAR COVER PAPER GASKET		1	
26	FT250.57.106	RETAINER PLATE		1	
27	FT250.57.105	RETAINER PLATE PAPER GASKET		1	
28	FT250.57.119	LOCATING BLOCK		1	
29	GBT896-4	SPLIT RETAINER RING		1	
30	FT250.57.120	DIAL PIN		1	
31	TE250.57.1-01	HANDLE SHAFT		1	
32	GBT3452.1-9.50X2.65A	RUBBER O-SEAL RING		1	
33	TE250.57.1-02	CONTROL ROCKER 1		1	
34	GBT879.1-6X22	SPRING COLUMN PIN		1	
35	GBT879.1-4X22	SPRING COLUMN PIN		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.581 OIL PUMP/PIPE/FILTER ASSEMBLY

https://truckmanualshub.com/

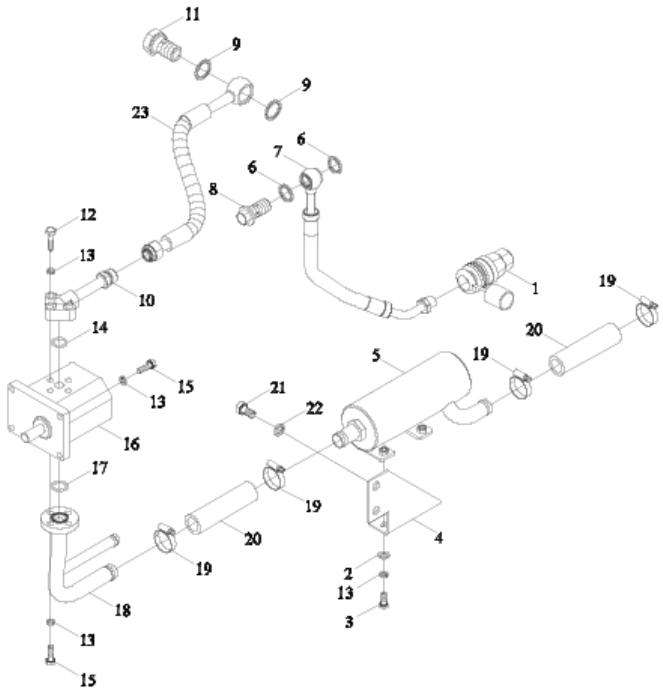

https://truckmanualshub.com/


TE354.581 OIL PUMP/PIPE/FILTER ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	FT354.58A.030	QUICK CHANGING JOINT		1	
2	GBT95-8-A0P	FLAT WASHER		2	
3	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
4	TE354.581-01	OIL FILTER FIXING PLATE WELD		1	
5	TE254.581H.3	OIL SUCTION FILTER ASSEMBLY		1	
6	JBT982-20	COMBINED SEAL GASKET		2	
7	TE254.582H.10	STEADY FLOW VALVE OIL OUTLET PIPE WELDMENT		1	
8	FT254.40.102	HOLLOW BOLT		1	
9	JBT982-24	COMBINED SEAL GASKET		2	
10	TE354.581.2a	OIL OUTLET TUBE WELDMENT OF GEAR PUMP		1	
11	FT254.58.132	HOLLOW BOLT M24X1.5		1	
12	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		3	
13	GBT93-8-A0P	STANDARD SPRING WASHER		13	
14	GBT3452.1-18.0X2.65G	RUBBER O-SEAL RING		1	
15	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		8	
16	FT304.58L.010	GEAR PUMP		1	
17	GBT3452.1-21.2X1.80G	RUBBER O-SEAL RING		1	
18	TE354.581.1	OIL SUCTION PIPE WELDMENT		1	
19	Q67535	A-TYPE WORM TRANSMISSION HOSE CLAMP		4	
20	FT254.58.135	RUBBER HOSE		2	
21	GBT5783-M12X20-8.8-A3L	HEXAGON BOLT		2	
22	GBT93-12-A0P	STANDARD SPRING WASHER		2	
23	TE354.581.4	OIL RETURN RUBBER HOSE OF SINGLE PATH STA-BILIZER DIVERTER VALVE		1	

https://truckmanualshub.com/

https://truckmanualshub.com/

TE354.582 MULTI-WAY VALVE OIL PIPE ASSEMBLY-1

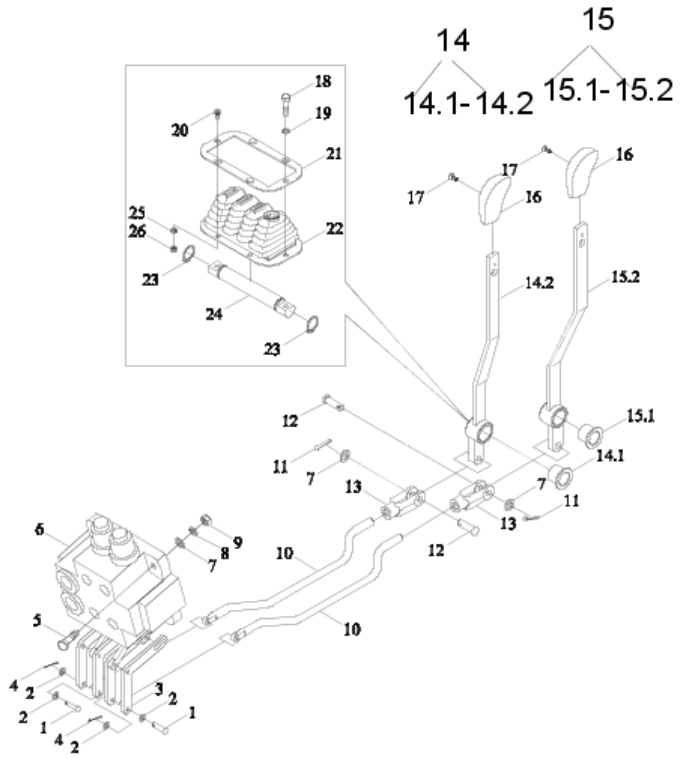

https://truckmanualshub.com/

TE354.582 MULTI-WAY VALVE OIL PIPE ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
1	GBT882-B5X22	PIN SHAFT		6	
2	GBT95-5-A0P	FLAT WASHER		12	
3	TE354.582-01	MULTI-WAY VALVE ROCKER ARM		4	
4	GBT91-1.6X20-A0P	SPLIT PIN		6	
5	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		3	
6	TE254.582H.2	MULTI-WAY VALVE ASSEMBLY		1	
7	GBT95-8-A0P	FLAT WASHER		5	
8	GBT93-8-A0P	STANDARD SPRING WASHER		3	
9	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		3	
10	TE354.582-02	PULL ROD		2	
11	GBT91-3.2X20-A0P	SPLIT PIN		2	
12	GBT882-B8X28	PIN SHAFT		2	
13	TE354.582-05	PULL ROD FORK		2	
14	TE354.582.4	CONTROL HANDLE COMPRESSION Ⅱ		1	
14.1	TE254.582H.11-01	NYLON SLEEVE		1	
14.2	TE354.582.4.1	CONTROL HANDLE WELD Ⅱ		1	
15	TE354.582.2	CONTROL HANDLE COMPRESSION Ⅰ		1	
15.1	TE254.582H.11-01(2)	NYLON SLEEVE		1	
15.2	TE354.582.2.2	CONTROL HANDLE ASSEMBLY OF MULTI-WAY VALVE Ⅱ		1	
16	TB504.552-04	HANDLE HEAD		2	
17	GBT68-M4X10-4.8-A2L	SLOTTED SCREW		2	
18	GBT5783-M6X35-8.8-A1L	HEXAGON BOLT		2	


https://truckmanualshub.com/

TE354.582 MULTI-WAY VALVE OIL PIPE ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
19	GBT93-6-A0P	STANDARD SPRING WASHER		2	
20	GBT819.2-M5X20-8.8-A2L	SCREW		4	
21	TE254.582H-10	STEEL PLATE MAT		1	
22	TE254.582H-09	SEAL SLEEVE		1	
23	GBT894.1-18	CIRCLIP FOR SHAFT		2	
24	TE254.582H-07	ROTARY SHAFT		1	
25	GBT93-5-A0P	STANDARD SPRING WASHER		4	
26	GBT6170-M5-8-A2L	HEXAGON NUT, TYPE-1		4	

https://truckmanualshub.com/

TE354.582 MULTI-WAY VALVE OIL PIPE ASSEMBLY-2

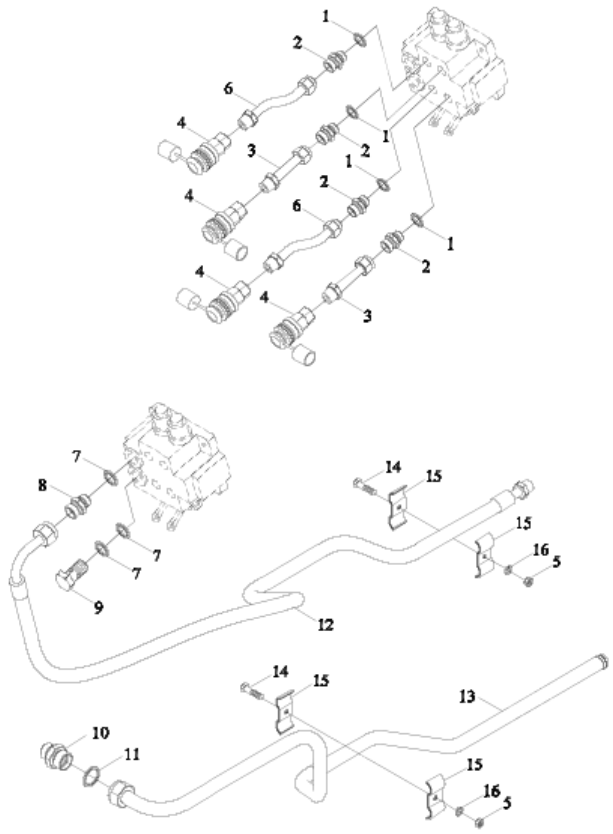

https://truckmanualshub.com/

TE354.582 MULTI-WAY VALVE OIL PIPE ASSEMBLY-2


No.	Part No.	Description	Version	QTY.	Remark
1	JBT982-18	COMBINED SEAL GASKET		4	
2	GBT3733.2-G14	STRAIGHT PIPE JOINT BODY		4	
3	TE354.582.5	TRANSITION RIGID TUBE ASSEMBLY		2	
4	FT354.58A.030	QUICK CHANGING JOINT		4	
5	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		2	
6	TE354.582.6	OIL OUTPUT PIPE ASSEMBLY		2	
7	JBT982-22	COMBINED SEAL GASKET		3	
8	FT654.58B.102	STRAIGHT THREAD JOINT BODY 1		1	
9	FT654.58.107	HOLLOW BOLT -1		1	
10	TE354.582-04	JOINT BODY		1	
11	JBT982-27	COMBINED SEAL GASKET		1	
12	TE354.582.1	OIL INLET TUBE ASSEMBLY OF MULTI-WAY VALVE		1	
13	TE354.582.3	OIL SUCTION PIPE ASSEMBLY		1	
14	GBT5783-M6X30-8.8-A2L	HEXAGON BOLT		2	
15	TE354.582.7	PIPE CLAMP		4	
16	GBT93-6-A0P(2)	STANDARD SPRING WASHER		4	

https://truckmanualshub.com/

https://truckmanualshub.com/

FT250.62.001 SAFETY BELT INSTALLATION ASSEMBLY

https://truckmanualshub.com/

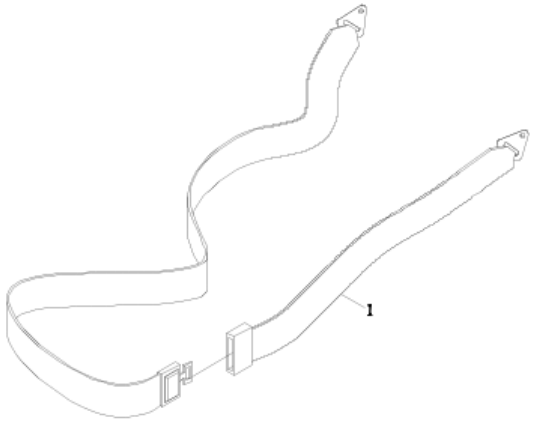

https://truckmanualshub.com/


FT250.62.001 SAFETY BELT INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	FT250.62.001	SAFETY BELT INSTALLATION ASSEMBLY		1	

https://truckmanualshub.com/

TE254.742 FRONT BALLAST ASSEMBLY

https://truckmanualshub.com/

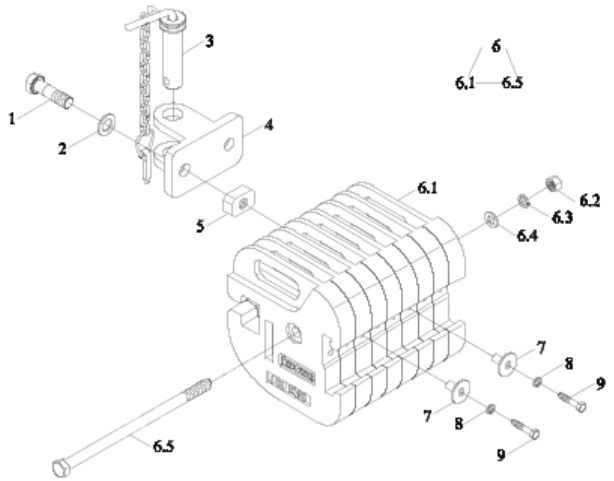

https://truckmanualshub.com/


TE254.742 FRONT BALLAST ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE254.742-04	TOWING BOLT		2	
2	GBT97.1-20-A0P	FLAT WASHER		2	
3	TB400.74A.2	TOWING PIN AND LOCK PIN ASSEMBLY		1	
4	TE254.742-02	TOWING LUG		1	
5	FT650.74.108	TOWING NUT		2	
6	TE254.742.2	FRONT BALLAST SMALL ASSEMBLY		1	
6.1	TE254.742-01	BALLAST BLOCK		8	
6.2	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		1	
6.3	GBT93-16-A0P	STANDARD SPRING WASHER		1	
6.4	GBT97.1-16-A0P	FLAT WASHER		1	
6.5	TE254.742-03	CONNECTING BOLT		1	
7	TE254.742.3	BASE PLATE		2	
8	GBT93-10-A0P	STANDARD SPRING WASHER		2	
9	GBT5783-M10X45-8.8-A3L	HEXAGON BOLT		2	

https://truckmanualshub.com/

TE254.801 BRAKE VALVE ASSEMBLY

https://truckmanualshub.com/

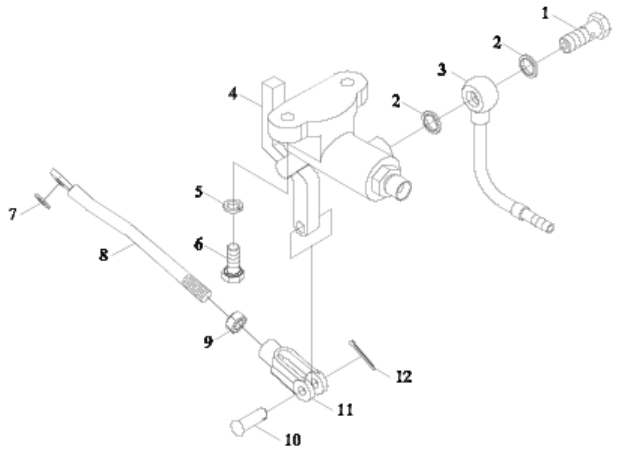

https://truckmanualshub.com/


TE254.801 BRAKE VALVE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	FT354.40E.172	HOLLOW BOLT		1	
2	JBT982-14	COMBINED SEAL GASKET		2	
3	TE254.803.4	TRAILER CONNECTING PIPE WELDMENT		1	
4	TE254.801.1	BRAKE VALVE		1	
5	GBT93-10-A0P	STANDARD SPRING WASHER		2	
6	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		2	
7	GBT97.1-8-A0P	FLAT WASHER		1	
8	TE254.801-01	BRAKE VALVE CONNECTING ROD		1	
9	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
10	GBT882-B10X30	PIN SHAFT		1	
11	FT300.80.105	ADJUSTING FORK		1	
12	GBT91-2.5X25-A0P	SPLIT PIN		1	

https://truckmanualshub.com/

TE254.802 AIR CYLINDER ASSEMBLY

https://truckmanualshub.com/

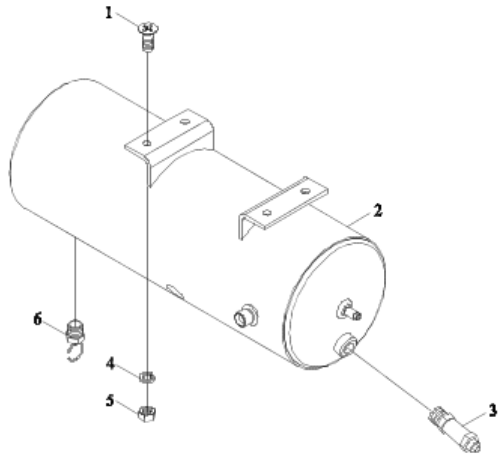

https://truckmanualshub.com/


TE254.802 AIR CYLINDER ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE254.802	AIR CYLINDER ASSEMBLY		1	
1	GBT819.1-M8X20-4.8-A2L	SCREW		4	
2	TE254.802.1	AIR CYLINDER WELDMENT		1	
3	FT300.80.034	SAFETY VALVE ASSEMBLY		1	
4	GBT93-8-A0P	STANDARD SPRING WASHER		4	
5	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		4	
6	FT300.80.033	DRAIN VALVE ASSEMBLY		1	

https://truckmanualshub.com/

TE354.803 AIR CONVEYING PIPELINE ASSEMBLY

https://truckmanualshub.com/

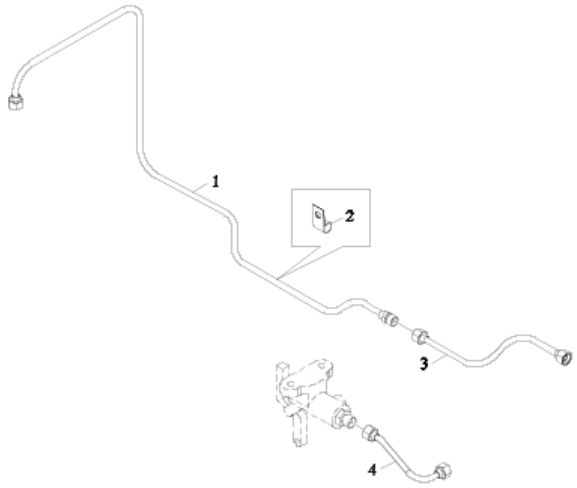

https://truckmanualshub.com/


TE354.803 AIR CONVEYING PIPELINE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE354.803.1	AIR MACHINE OUTLET PIPE WELDMENT		1	
2	FT250.80.142	PIPE CLAMP 1		3	
3	TE254.803.2	AIR CYLINDER INLET PIPE WELDMENT		1	
4	TE254.803.3	AIR CYLINDER OUTLET PIPE WELDMENT		1	

https://truckmanualshub.com/

TE250.81 HEATER INSTALLATION ASSEMBLY

https://truckmanualshub.com/

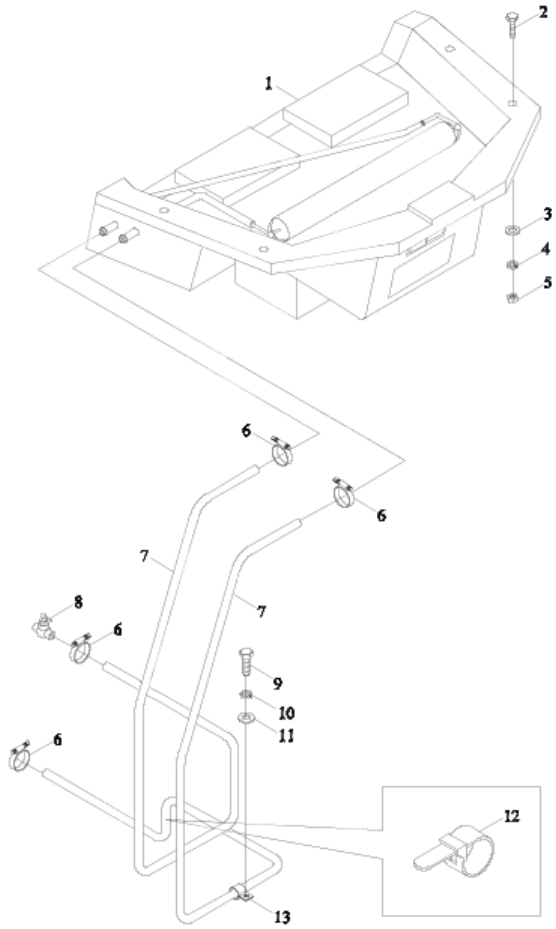

https://truckmanualshub.com/


TE250.81 HEATER INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	FT65.45.990	HEATER ASSEMBLY		1	
2	GBT5783-M6X40-8.8-A1L	BOLT		4	
3	GBT97.1-6-A0P	WASHER		4	
4	GBT93-6-A0P	WASHER		4	
5	GBT6170-M6-8-A2L	NUT		4	
6	Q676B25	C-TYPE WORM TRANSMISSION HOSE CLAMP		4	
7	FT800.45.996	AIR CONDITION WATER INLET PIPE		2	
8	TB400.81.1	HEATER WATER INLET VALVE		1	
9	GBT5783-M8X16-8.8-A2L	BOLT		1	
10	GBT93-8-A0P	WASHER		1	
11	GBT97.1-8-A0P	WASHER		1	
12	Q67405200	PLASTIC FASTENING STRIP		6	
13	FT300.48.202	FASTENING CLIP		1	

https://truckmanualshub.com/

FT250.91B.001 REAR BALLAST ASSEMBLY

https://truckmanualshub.com/

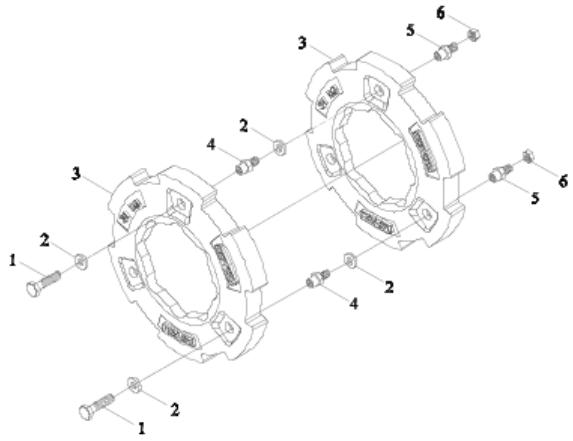

https://truckmanualshub.com/

FT250.91B.001 REAR BALLAST ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	FT250.91B.001	REAR BALLAST ASSEMBLY			
1	TE350.91-04	HEXAGON BOLT		3	
2	FT650.34.104	WASHER		6	
3	FT250.91B.101	REAR BALLAST		2	
4	FT250.91B.103	BALLAST SCREW II		3	
5	FT250.91B.102	BALLAST SCREW I		3	
6	GBT6171-M16X1.5-8-A3L	HEXAGON NUT, TYPE-1		3	