www.truck-freeworkshop.com/clark/

부품 매뉴얼
PARTS MANUAL

CQ 20/25/30 G

TRUCK MODEL : CQ20-30G

SERIAL NUMBER : CQ230G - XXXX - 9752 CNF (MMC)

부품 청구시 항상 장비의 SERIAL NO. 도 함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER WHEN ORDERING PARTS.

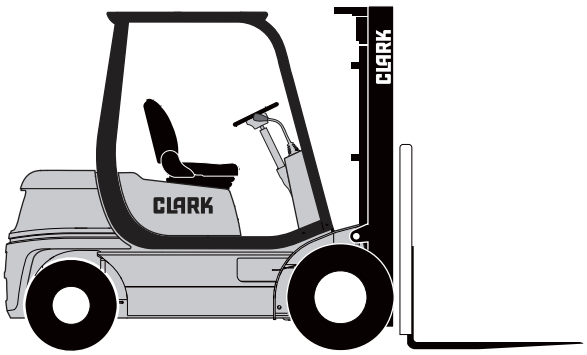

Publication Date : Jan. 2013

CLARK
THE FORKLIFT

(Head office) 202-1 Ojung-Dong, Ojung-Gu,
Bucheon-city, Kyunggi-do, Korea
(Factory) No.18 Huaihedong Road,
Huangdao Economic & Technical Development Area,
Qingdao Shandong Province, China

www.truck-freeworkshop.com/clark/

www.truck-freeworkshop.com/clark/

CLARK
THE FORKLIFT

Index

00-094 SHORT BLOCK AND ENGINE GASKET SETS
숏 블록 & 엔진 가스킷 세트

00-248 CRANKSHAFT
크랭크 축

00-391 ENGINE MOUNTING
엔진 어셈블리

00-395 GOVERNOR
가버너

00-511 ENGINE BALANCER ASSEMBLY
엔진 발란서

00-583 ENGINE SUB-ASSEMBLY MOUNTING
엔진 서브 어셈블리 마운팅

00-586 ENGINE SUB-ASSEMBLY MOUNTING
엔진 서브 어셈블리 마운팅

00-742 ROCKER COVER
로커 커버

00-743 OIL PAN
오일 팬

00-776 CYLINDER HEAD (GAS/LP)
실린더 헤드

00-818 CRANKCASE
크랭크케이스

00-861 CAMSHAFT
캠 축

01-276 COOLING SYSTEM
냉각 장치

01-506 OIL PUMP
오일 펌프

01-901 FAN MOUNTING
팬 마운팅

02-190 CHOKE CABLE
초크 케이블

02-457 ACCELERATOR LINKAGE
악셀레이터 링케이지

03-157 MANIFOLD
매니폴드

03-158 EXHAUST MANIFOLD
배기 매니폴드

03-238 CARBURETOR
기화기

03-545 FUEL SYSTEM
연료 시스템

03-691 INTAKE SYSTEM
흡기 시스템 (듀얼)

03-699 EXHAUST SYSTEM
배기 장치

06-068 HYDRATORK TRANSMISSION
하이드로토크 트랜스미션

06-114 CONTROL VALVE ASSEMBLY
컨트롤 밸브 어셈블리

06-603 HYDRATORK TRANSMISSION
하이드로토크 트랜스미션

06-608 TRANSMISSION CLUTCH PACKS
트랜스미션 클러치 팩

07-045 TRANSAXLE MOUNTING
트랜스액슬 마운팅

10-072 TRANS COOLING LINES
트랜스미션 쿨링 라인

11-040 DISTRIBUTOR
디스트리뷰터

11-099 CRANKING MOTOR ASSEMBLY
크랭킹 모터

11-205 IGNITION SYSTEM
점화 시스템

12-030 ALTERNATOR ASSEMBLY
알터네이터 어셈블리

12-182 BATTERY MOUNTING
베터리 어셈블리

13-035 INSTRUMENT PANEL
계기판

13-238 CLUSTER GROUP
클러스터 그룹

13-240 KEY SWITCH GROUP
키스위치 그룹

13-359 KEY SWITCH GROUP
키스위치 그룹

14-241 ELECTRICAL WIRING
전기장치 와이어링

14-369 ELECTRICAL COMPONENTS
전기장치 구성품

20-423 DRIVE AXLE
드라이브 액슬

20-424 DIFFERENTIAL & CARRIER
차동장치 & 캐리어

22-013 DRIVE WHEEL & TIRE MOUNTING
드라이브휠 & 타이어 마운팅

22-014 STEER WHEEL & TIRE MOUNTING
스티어휠 & 타이어 마운팅

22-026 DRIVE WHEEL & TIRE (SOLID TYPE)
*

22-044 STEER WHEEL & TIRE
스티어링 휠 & 타이어

22-135 BRAKE ASSEMBLY RH
브레이크 어셈블리 - 우

22-136 BRAKE ASSEMBLY LH
브레이크 어셈블리 - 좌

23-214 INCHING MASTER CYLINDER
인칭 마스터 실린더

23-229 PARKING BRAKE MOUNTING
파킹브레이크 마운팅

23-434 BRAKE & INCHING LINES
브레이크 및 인칭라인

23-467 BRAKE LINES
브레이크 라인

25-012 STEERING UNIT
스티어링 유니트

25-044 STEERING COLUMN MOUNTING
스티어링 칼럼 마운팅

26-182 STEERING AXLE
스티어링 액슬

26-240 STEERING CYLINDER
스티어링 실린더

26-280 HYDRAULIC STEERING LINES
스티어링 라인

26-342 STEER AXLE INSTALLATION
스티어링 액슬 조립그룹

29-178 HYDRAULIC PUMP ASSEMBLY
유압 펌프 어셈블리

29-215 HYDRAULIC TANK & COMPONENTS MOUNTING
유압탱크 & 구성품 마운팅

29-244 HYDRAULIC RETURN LINES
유압 리턴 라인

29-576 HYDRAULIC PUMP MOUNTING
유압 펌프 마운팅

30-513 HYDRAULIC CONTROL VALVE-3 SPOOL
유압 컨트롤 밸브 - 3 스풀

30-614 HYDRAULIC VALVE MOUNTING
유압 밸브 마운팅

31-202 AUX. VALVE PLUMBING
보조 밸브 라인

31-360 HYDRAULIC LIFT & TILT LINES
유압 리프트 & 틸트 라인

31-841 HYDRAULIC SUPPLY LINES
유압 공급 라인

32-139 TILT CYLINDER
틸트 실린더

32-142 TILT CYLINDER
틸트 실린더

32-153 TILT CYLINDER
틸트 실린더

32-157 TILT CYLINDER MOUNTING
틸트 실린더 어셈블리

32-167 TILT AMOUNT GROUP
틸트 어마운트 그룹

www.truck-freeworkshop.com/clark/

34-044 LOAD BACK REST
로드 백 레스트

34-134 LIFT CARRIAGE ASSEMBLY
리프트 캐리지 어셈블리

37-076 BACK MIRROR
백미러

37-118 HOOD MOUNTING
후드 마운팅

38-113 FRAME & COUNTERWEIGHT
프레임 & 카운터웨이트

38-270 FRAME TANK BOTTOM PLUG
프레임 탱크 하단 플러그

39-195 SEAT MOUNTING
시트 어셈블리

39-661 SEAT ASSEMBLY
시트 어셈블리

39-771 SEAT MOUNTING
시트 어셈블리

39-912 SHEET METAL
시트 메탈

39-988 OVERHEAD GUARD MOUNTING
오버헤드가드 마운팅

40-260 TRUCK FLUIDS
트럭 유체

40-288 DECALS
데칼

40-289 MODEL & SPECIFICATION DECALS
*

47-000 SEAT WING KIT
시트윙 키트

50-410 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-791 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
작업장치 호스 적용 (캐리지)

53-008 SIDESHIFT CYLINDER
사이드 쉬프트 실린더

53-187 SIDE SHIFT ASSEMBLY
*

66-018 UPRIGHT MOUNTING
업라이트 마운팅

66-058 FORK
포크

66-085 PRIMARY CYLINDER ASSEMBLY
*

66-160 SECONDARY CYLINDER ASSEMBLY
2차 실린더 어셈블리

66-232 TRIPLE STAGE UPRIGHT
3단 업라이트

66-999 EXTENTION FORK
익스텐션 포크

www.truck-freeworkshop.com/clark/

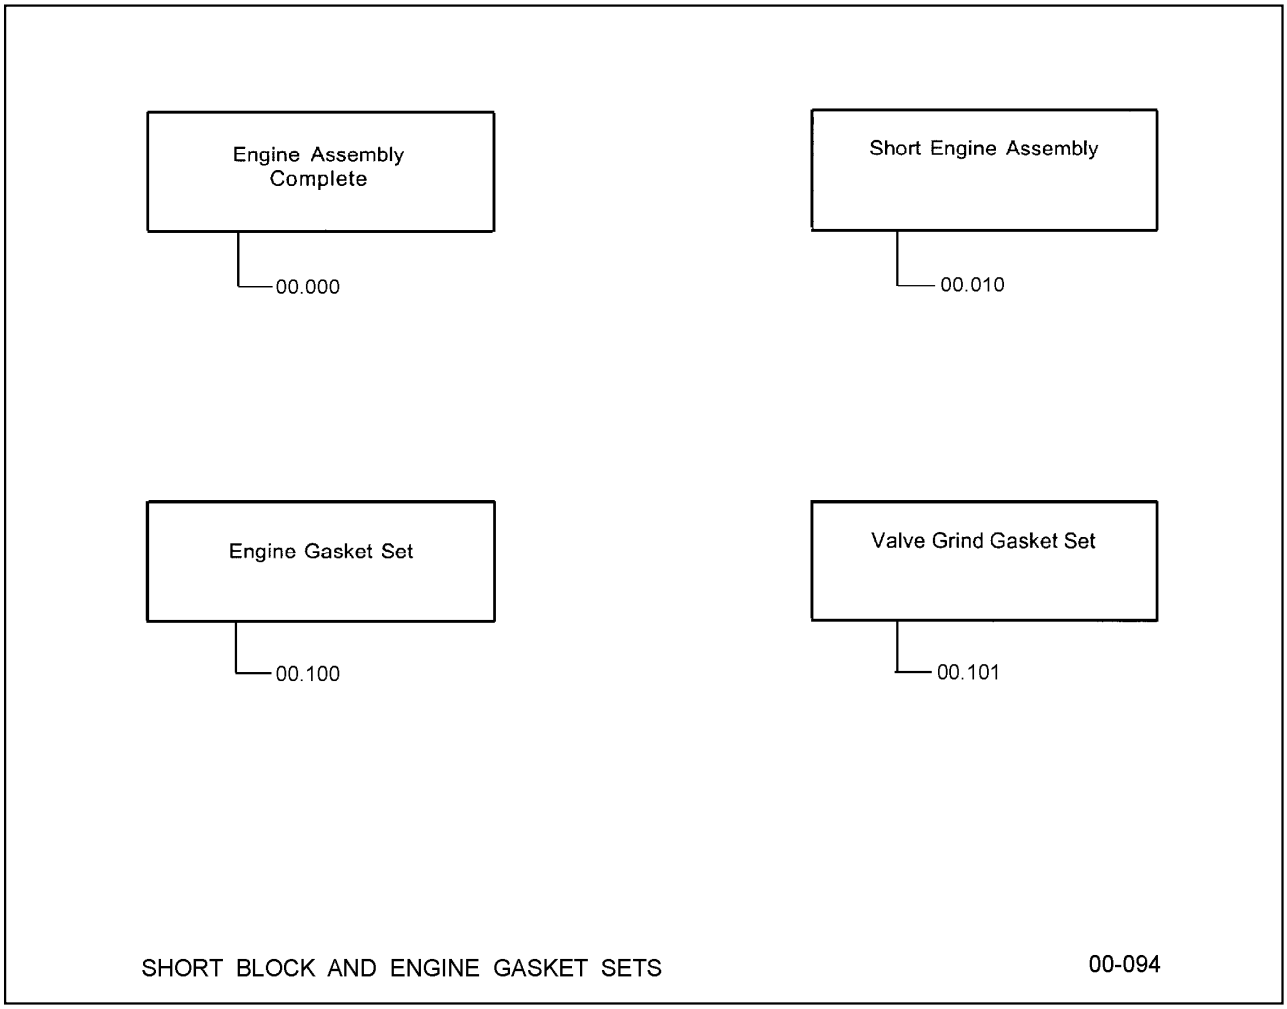

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.010 SHORT ENGINE ASSEMBLY
숏엔진

00.100 GASKET KIT, ENGINE OVERHAUL
가스켓킷

00.101 VALVE GRIND GASKET KIT (TOP SET)
밸브가스켓

www.truck-freeworkshop.com/clark/

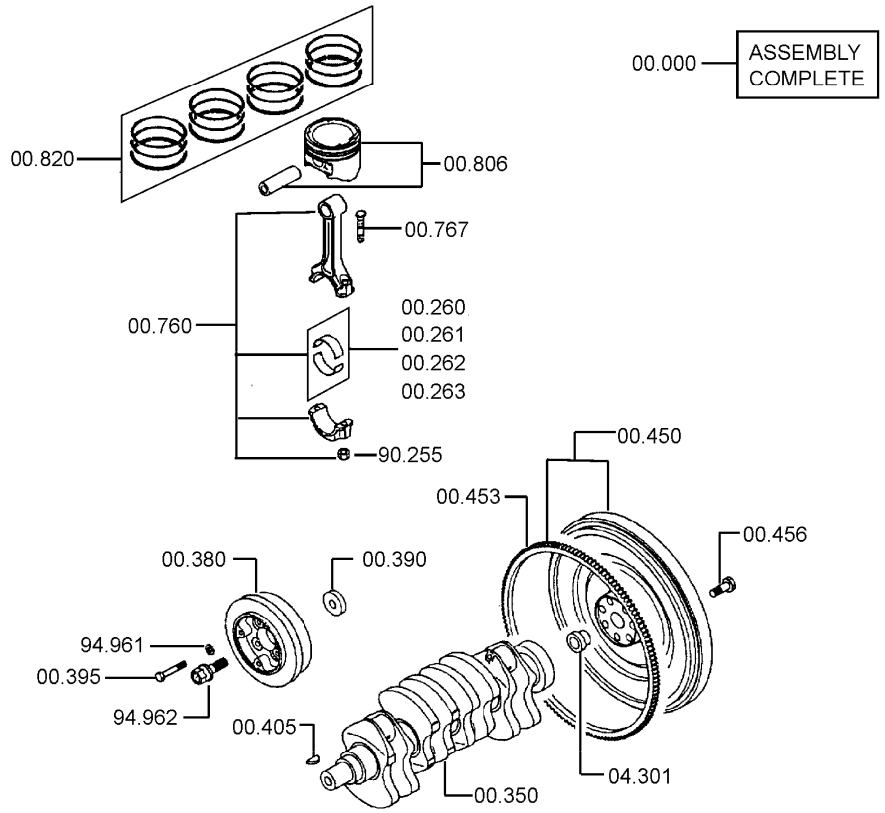

PISTON & CRANKSHAFT

00-248

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.260 BEARING, CONNECTING ROD (CYL. #1)
베어링

00.261 BEARING, CONNECTING ROD (CYL. #2)
베어링

00.262 BEARING, CONNECTING ROD (CYL. #3)
베어링

00.263 BEARING, CONNECTING ROD (CYL. #4)
베어링

00.350 CRANKSHAFT
크랭크샤프트

00.380 PULLEY, CRANKSHAFT
풀리

00.390 WASHER, CRANKSHAFT PULLEY
와셔

00.395 FASTENER, CRANKSHAFT PULLEY
패스너

www.truck-freeworkshop.com/clark/

00.405	KEY, CRANKSHAFT TIMING GEAR 키
00.450	FLYWHEEL 플라이휠
00.453	GEAR, FLYWHEEL RING 기어
00.456	FASTENER, CRANKSHAFT TO FLYWHEEL 패스너
00.760	ROD ASSEMBLY, CONNECTING 로드
00.767	FASTENER, CONNECTING ROD BEARING CAP 패스너
00.806	LOCATOR,CYLINDER SLEEVE 로케이터
00.820	PISTON RING 피스톤링
04.301	BEARING, PILOT (IN FLYWHEEL) 베어링
90.255	NUT, CONNECTING ROD BEARING CAP FASTENER 너트
94.961	LOCKWASHER, CRANKSHAFT ACCESS DRIVE PULLEY FASTENE 로크와셔
94.962	FASTENER, CRANKSHAFT PULLEY SPACER 패스너

www.truck-freeworkshop.com/clark/

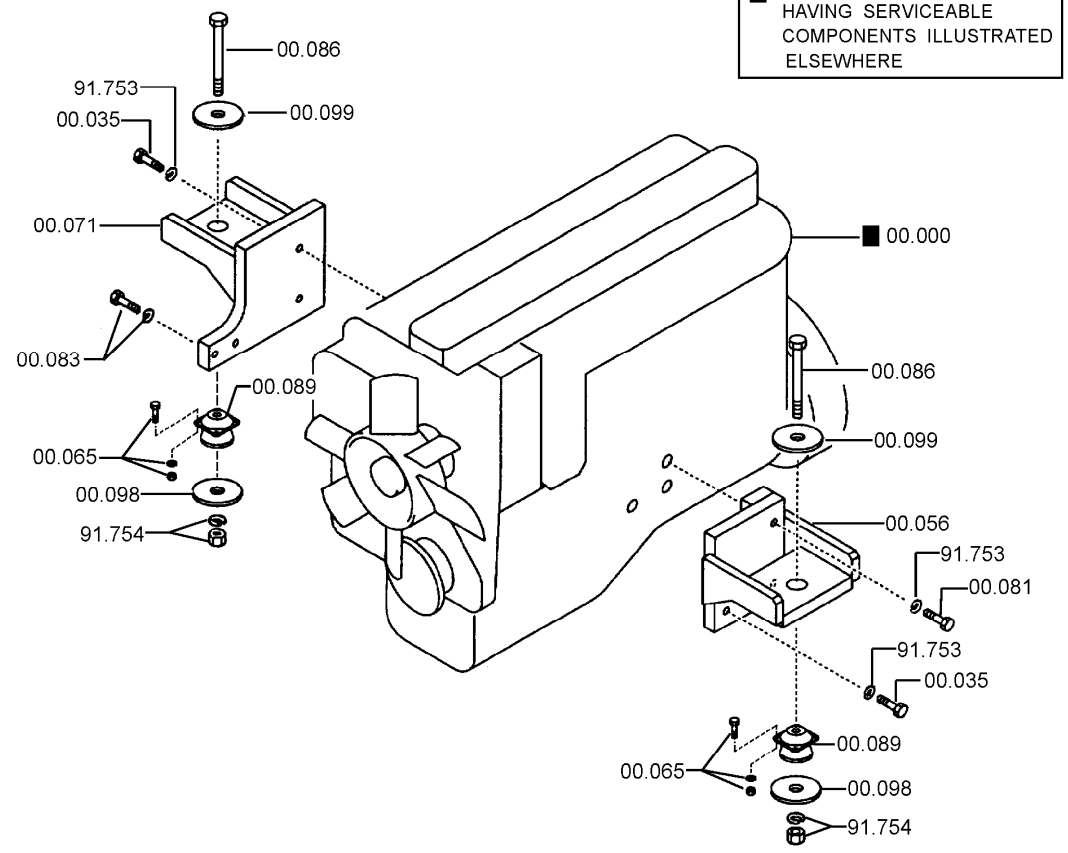

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.035 FASTENER, ENGINE FRONT SUPPORT
패스너

00.056 MOUNT, ENGINE RH
마운트

00.065 FASTENER, ENGINE MOUNT
패스너

00.071 MOUNT, ENGINE LH
마운트

00.081 FASTENER, ENGINE MOUNT (RH)
패스너

00.083 FASTENER, ENGINE MOUNT (LH)
패스너

00.086 FASTENER, RH ENGINE MOUNT
패스너

00.089 DAMPENER, LH ENGINE MOUNT VIBRATION
댐프너

www.truck-freeworkshop.com/clark/

00.098	WASHER, ENGINE MOUNTING TO FRAME RH 와셔
00.099	WASHER, ENGINE MOUNTING TO FRAME RH (LOWER) 와셔
91.753	WASHER, ENGINE MOUNT FASTENER 와셔
91.754	NUT, ENGINE MOUNT FASTENER 너트

www.truck-freeworkshop.com/clark/

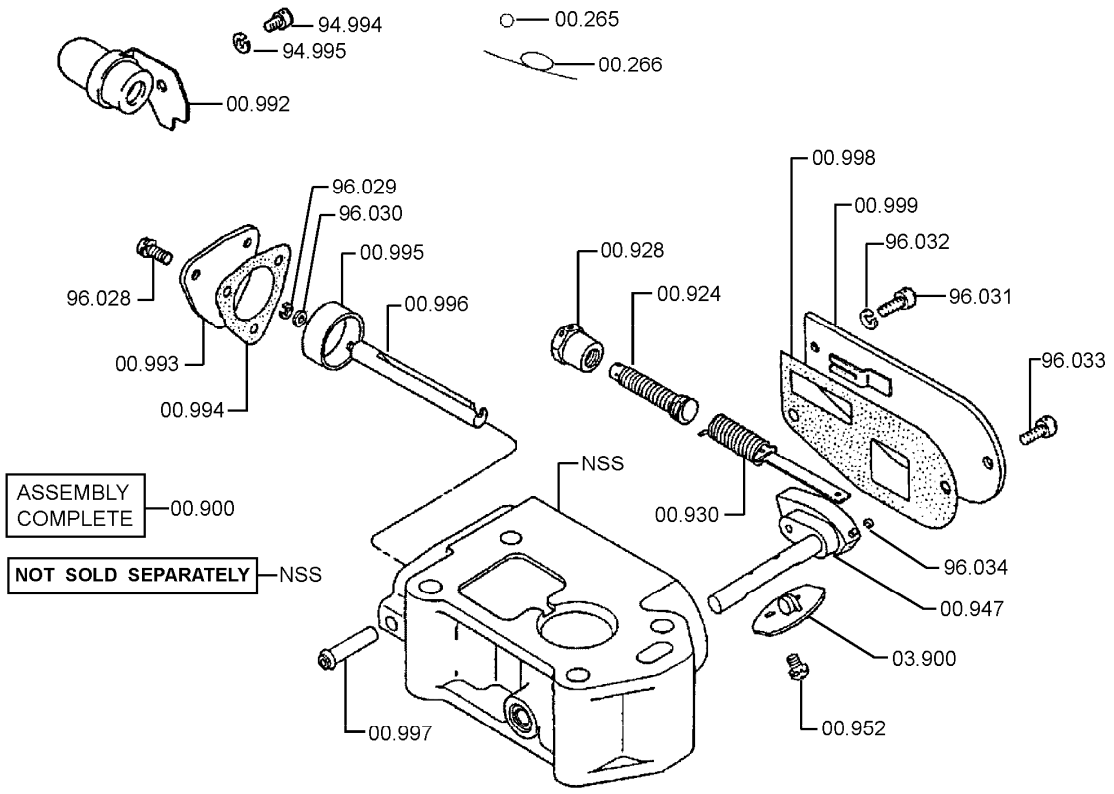

00.265 BALL, ENGINE GOVERNOR LOCKWIRE
볼

00.266 LOCKWIRE, ENGINE GOVERNOR
로크와이어

00.900 GOVERNOR ASSEMBLY , ENGINE
거버너

00.924 ADJUSTOR, GOVERNOR SPRING
어드져스터

00.928 FASTENER, GOVERNOR ADJUSTING LEVER
패스너

00.930 SPRING, GOVERNOR
스프링

00.947 LEVER & SHAFT, GOVERNOR
레버와샤프트

00.952 FASTENER, GOVERNOR THROTTLE
패스너

00.992 CAP, ENGINE GOVERNOR SEAL (SPEED ADJUSTMENT)
캡

www.truck-freeworkshop.com/clark/

00.993	COVER, GOVERNOR ACCESS 커버
00.994	GASKET,GOVERNOR ACCESS COVER 가스켓
00.995	PISTON,GOVERNOR STABILIZER 피스톤
00.996	SHAFT, GOVERNOR STABILIZER PISTON 샤프트
00.997	FITTING,GOVERNOR FUEL 피팅
00.998	GASKET, GOVERNOR ACCESS COVER 가스켓
00.999	COVER, GOVERNOR ACCESS 커버
03.900	THROTTLE PLATE, ENGINE GOVERNOR 트로틀
94.994	FASTENER, ENGINE GOVERNOR SPEED ADJUSTING SEAL CAP 패스너
94.995	LOCKWASHER,ENGINE GOVERNOR SPEED ADJUSTING SEAL CA 로크와셔
96.028	FASTENER, GOVERNOR ACCESS COVER 패스너
96.029	FASTENER, GOVERNOR STABILIZER PISTON 패스너
96.030	WASHER, GOVERNOR STABILIZER PISTON 와셔
96.031	FASTENER, GOVERNOR ACCESS COVER 패스너
96.032	LOCKWASHER, GOVERNOR ACCESS COVER FASTENER 로크와셔
96.033	FASTENER, GOVERNOR ACCESS COVER 패스너
96.034	FASTENER, GOVERNOR SPRING 패스너

www.truck-freeworkshop.com/clark/

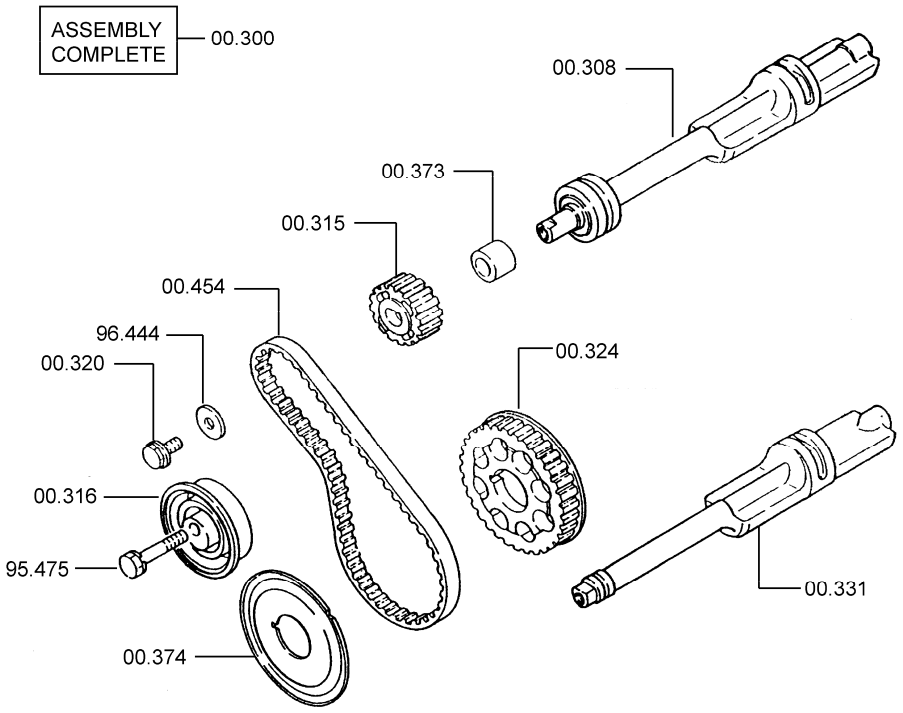

ENGINE BALANCER ASSEMBLY 00-511

00.300 BALANCER ASSEMBLY, ENGINE
발란서

00.308 WEIGHT, ENGINE BALANCER
발란서웨이트

00.315 GEAR, BALANCER WEIGHT DRIVEN
기어

00.316 RETAINER, BALANCER WEIGHT GEARS
리테이너

00.320 FASTENER, ENGINE BALANCER DRIVE GEAR
패스너

00.324 GEAR, BALANCER WEIGHT DRIVE
기어

00.331 WEIGHT, ENGINE BALANCER
발란서웨이트

00.373 SPACER, ENGINE BALANCER WEIGHT DRIVEN GEAR
스페이서

00.374 SEAL, ENGINE BALANCER WEIGHT RETAINER
시일

www.truck-freeworkshop.com/clark/

00.454	CHAIN,ENGINE BALANCER DRIVE 체인
95.475	FASTENER, ENGINE BALANCER WEIGHT RETAINER 패스너
96.444	WASHER, BALANCER DRIVEN GEAR 와셔

www.truck-freeworkshop.com/clark/

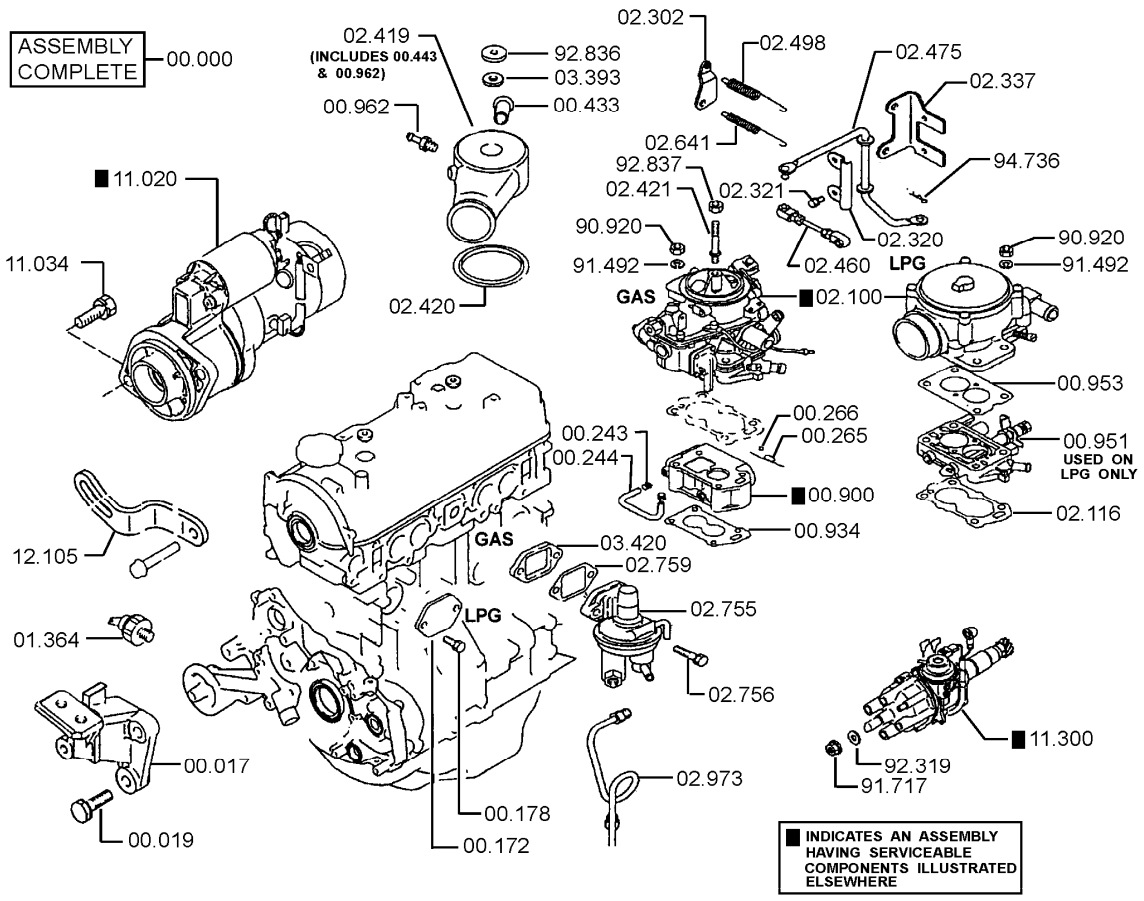

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	01.364	FITTING, OIL PRESSURE GAUGE LINE 피팅
00.017	BRACKET, ENGINE FRONT SUPPORT 브라켓	02.100	CARBURETOR ASSEMBLY 기화기
00.019	FASTENER, ENGINE FRONT SUPPORT BRACKET 패스너	02.116	GASKET, CARBURETOR MOUNTING 가스켓
00.172	COVER, CRANKCASE FUEL PUMP HOLE 커버	02.302	BRACKET, ACCELERATOR RETURN SPRING 브라켓
00.178	FASTENER, CRANKCASE FUEL PUMP HOLE COVER 패스너	02.320	BRACKET, ACCELERATOR LEVER ATTACHING 브라켓
00.243	CLAMP, ENGINE AIR GOVERNOR VENT LINE 클램프	02.321	FASTENER, ACCELERATOR LEVER BRACKET 패스너
00.244	LINE, ENGINE AIR GOVERNOR VENTILATION 라인	02.337	BRACKET, ACCELERATOR LEVER MOUNTING 브라켓
00.265	BALL, ENGINE GOVERNOR LOCKWIRE 볼	02.419	ADAPTOR, ENGINE AIR INTAKE 어댑터
00.266	LOCKWIRE, ENGINE GOVERNOR 로크와이어	02.420	GASKET, ENGINE AIR INTAKE ADAPTOR 가스켓
00.433	FITTING, CRANKCASE BREATHER LINE 피팅	02.421	FASTENER, ENGINE AIR INTAKE ADAPTOR 패스너
00.900	GOVERNOR ASSEMBLY , ENGINE 거버너	02.460	ROD, ACCELERATOR LEVER CARBURETOR CONTROL 로드
00.934	GASKET, GOVERNOR ATTACHING 가스켓	02.475	ROD, ACCELERATOR CONTROL 로드
00.951	THROTTLE ASSEMBLY, GOVERNOR 트로틀	02.498	SPRING, ACCELERATOR RETURN 스프링
00.953	GASKET, GOVERNOR THROTTLE MOUNTING 가스켓	02.641	SPRING, ACCELERATOR RETURN 스프링
00.962	FITTING, GOVERNOR VACUUM LINE 피팅	02.755	PUMP, FUEL 펌프

www.truck-freeworkshop.com/clark/

02.756 FASTENER, FUEL PUMP ATTACHING
패스너

02.759 GASKET, FUEL PUMP ATTACHING
가스켓

02.973 LINE, FUEL PUMP OUTLET
라인

03.393 SEAL, ENGINE AIR INTAKE ADAPTOR FASTENER
시일

03.420 SPACER, FUEL PUMP MOUNTING
스페이서

11.020 MOTOR ASSEMBLY, STARTING
모터

11.034 FASTENER, STARTING MOTOR
패스너

11.300 DISTRIBUTOR ASSEMBLY
디스트리뷰터

12.105 STRAP, ALTERNATOR ADJUSTING
스트랩

90.920 NUT, CARBURETOR MOUNTING FASTENER
너트

91.492 LOCKWASHER, CARBURETOR MOUNTING FASTENER
로크와셔

91.717 NUT, DISTRIBUTOR FASTENER
너트

92.319 WASHER, DISTRIBUTOR MOUNTING CLAMP FASTENER
와셔

92.836 WASHER, ENGINE AIR INTAKE ADAPTOR FASTENER
와셔

92.837 NUT, ENGINE AIR INTAKE ADAPTOR FASTENER
너트

94.736 RETAINER, ACCELERATOR BELLCRANK
리테이너

www.truck-freeworkshop.com/clark/

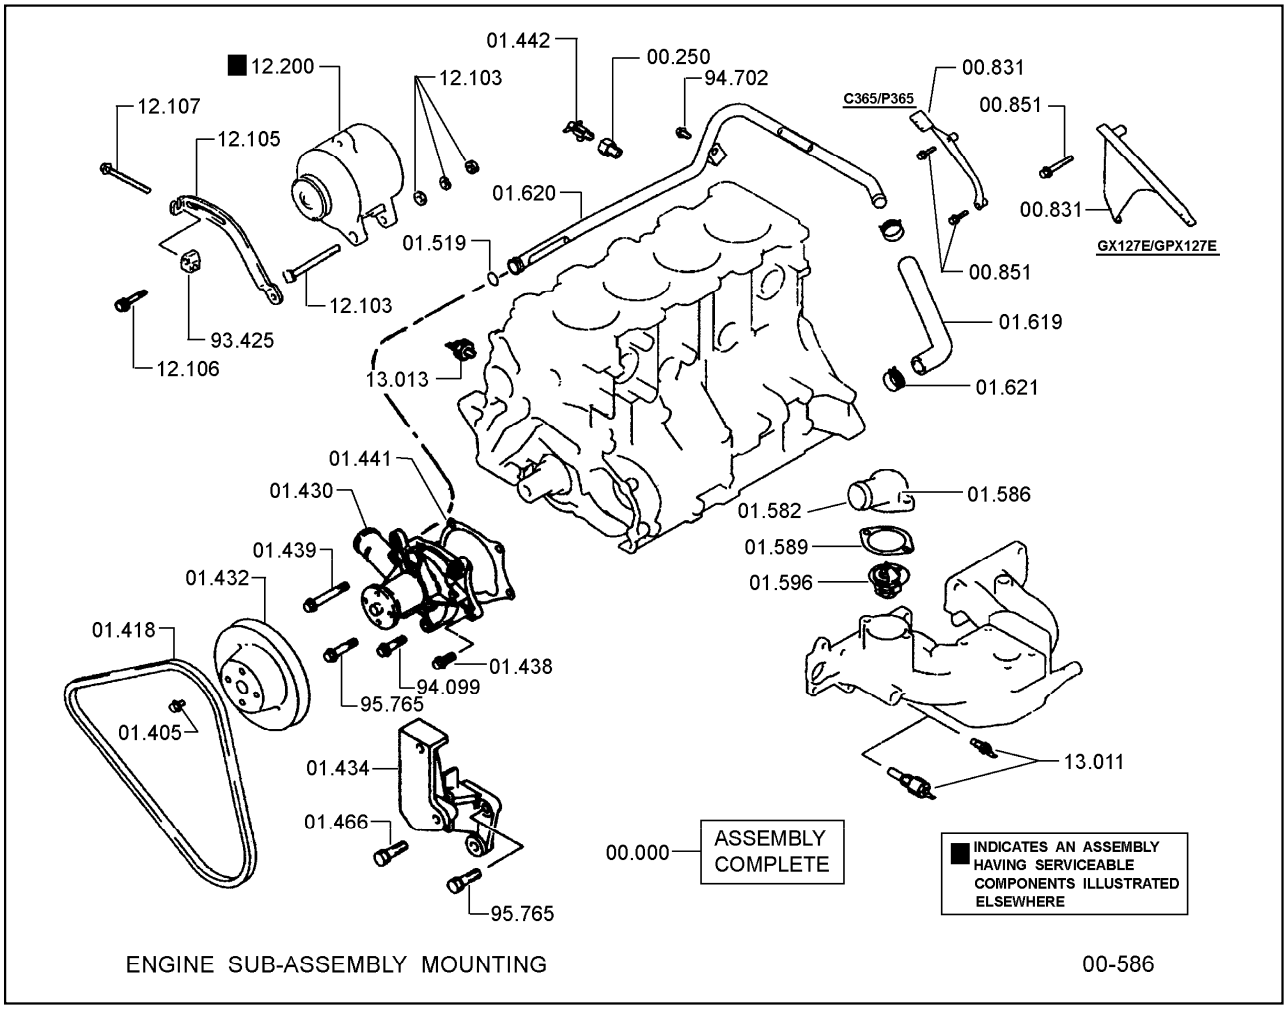

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	01.582	ELBOW, WATER OUTLET 엘보우
00.250	FITTING, WATER PUMP 피팅	01.586	FASTENER, WATER OUTLET ELBOW - FANSIDE 패스너
00.831	TIMING INDICATOR PLATE 타이밍플레이트	01.589	GASKET, WATER OUTLET ELBOW 가스켓
00.851	FASTENER, ENGINE TIMING POINTER 패스너	01.596	THERMOSTAT, ENGINE 써머스태트
01.405	FASTENER, FAN BLADE 패스너	01.619	LINE, WATER PUMP BLEEDER 라인
01.418	BELT, WATER PUMP 벨트	01.620	FITTING, WATER PUMP BLEEDER LINE 피팅
01.430	PUMP ASSEMBLY, ENGINE WATER 펌프	01.621	CLAMP, WATER PUMP BLEEDER LINE 클램프
01.432	PULLEY, WATER PUMP 풀리	12.103	FASTENER, ALTERNATOR TO BRACKET 패스너
01.434	COVER, WATER PUMP 커버	12.105	STRAP, ALTERNATOR ADJUSTING 스트랩
01.438	FASTENER, WATER PUMP 패스너	12.106	FASTENER, ADJUSTING STRAP MOUNTING 패스너
01.439	FASTENER, WATER PUMP 패스너	12.107	FASTENER, ADJUSTING STRAP TO ALTERNATOR 패스너
01.441	GASKET, ENGINE WATER PUMP ATTACHING 가스켓	12.200	ALTERNATOR ASSEMBLY 알터네이터
01.442	DRAIN COCK, ENGINE WATER PUMP 드레인콕	13.011	CONTROL, ENGINE TEMPERATURE INDICATOR 컨트롤
01.466	FASTENER, WATER PUMP COVER 패스너	13.013	CONTROL, ENGINE OIL PRESSURE INDICATOR 컨트롤
01.519	SEAL, WATER PUMP BLEEDER LINE FITTING 시일	94.099	FASTENER, WATER PUMP DISCHARGE FLANGE 패스너

www.truck-freeworkshop.com/clark/

94.702 FASTENER, WATER PUMP BLEEDER LINE CLIP
패스너

95.425 NUT, CONTROL PANEL CAPACITOR MOUNTING
너트

95.765 FASTENER, WATER PUMP
패스너

www.truck-freeworkshop.com/clark/

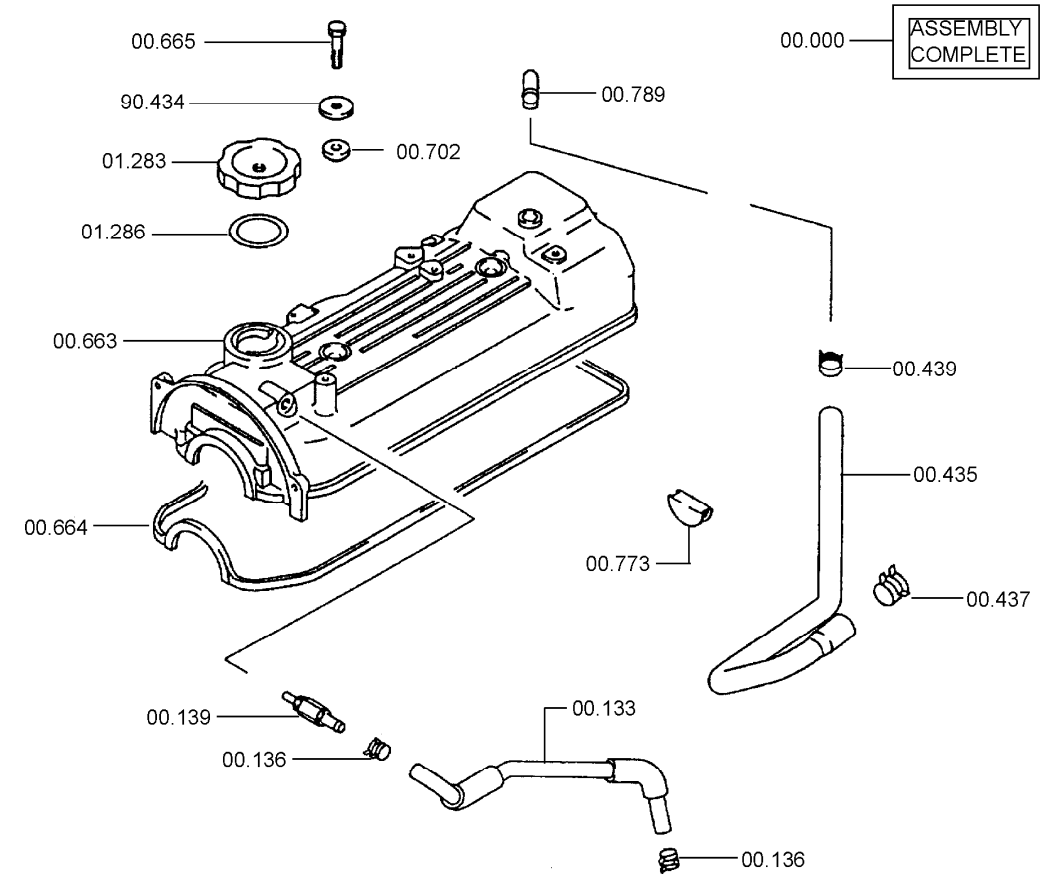

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.133	TUBE, CRANKCASE VENT 튜브
00.136	CLIP, CRANKCASE VENT TUBE 클립
00.139	VALVE, CRANKCASE VENT TUBE 밸브
00.435	LINE, CRANKCASE BREATHER 라인
00.437	CLAMP, CRANKCASE BREATHER LINE 클램프
00.439	CLAMP, CRANKCASE VENT LINE 클램프
00.663	COVER, ROCKER ARM 커버
00.664	GASKET, ROCKER ARM COVER 가스켓

www.truck-freeworkshop.com/clark/

00.665	FASTENER, ROCKER ARM COVER 패스너
00.702	SEAL, ROCKER ARM COVER FASTENER 시일
00.733	PLUG, CRANKCASE HEAD END COVER 플러그
00.789	PLUG, ROCKER ARM COVER 플러그
01.283	CAP, CRANKCASE OIL FILLER 캡
01.286	GASKET, OIL FILLER CAP 가스켓
90.434	WASHER, ROCKER ARM COVER FASTENER 와셔

www.truck-freeworkshop.com/clark/

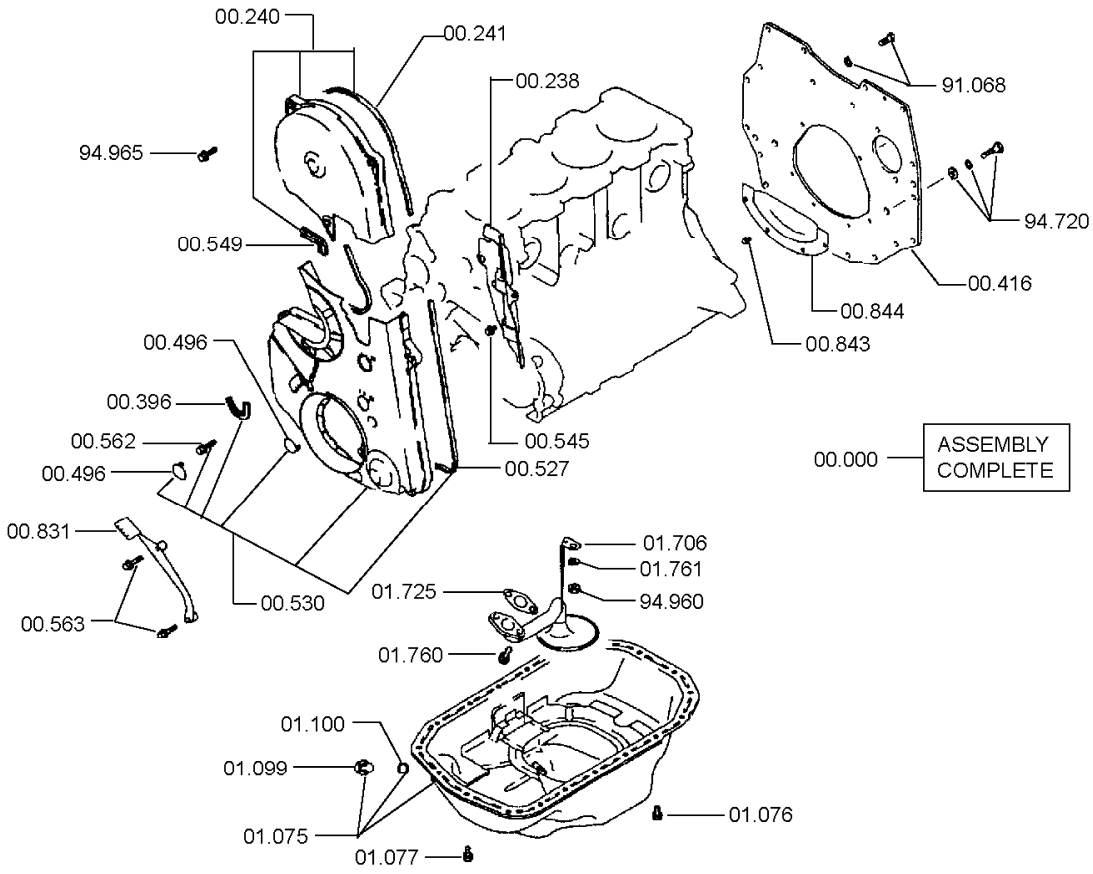

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.238	COVER, TIMING BELT UNDER LOWER 커버
00.240	COVER, TIMING BELT FRONT UPPER 커버
00.241	GASKET, TIMING BELT FRONT UPPER COVER 가스켓
00.396	SEAL, ENGINE FRONT GEAR COVER GASKET 시일
00.416	PLATE, ENGINE REAR 플레이트
00.496	PLUG, ENGINE FRONT GEAR COVER 플러그
00.527	GASKET, ENGINE FRONT GEAR COVER 가스켓
00.530	COVER, ENGINE FRONT GEAR 커버
00.545	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.549	GASKET, ENGINE FRONT GEAR COVER SEAL 가스켓
00.562	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.563	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.831	TIMING INDICATOR PLATE 타이밍플레이트
00.843	FASTENER, FLYWHEEL HOUSING DUST SHIELD 패스너
00.844	SHIELD, FLYWHEEL HOUSING DUST 쉴드
01.075	PAN, CRANKCASE OIL 팬
01.076	FASTENER, CRANKCASE OIL PAN 패스너
01.077	FASTENER, OIL PAN TO CRANKCASE 패스너
01.099	PLUG, CRANKCASE OIL PAN DRAIN 플러그
01.100	GASKET, CRANKCASE OIL PAN DRAIN PLUG 가스켓
01.706	STRAINER, OIL PUMP OIL 스트레이너
01.725	GASKET, OIL STRAINER FRAME 가스켓
01.760	BOLT, OIL PUMP STRAINER FASTENER 볼트
01.761	LOCKWASHER, OIL PUMP STRAINER FASTENER 로크와셔
91.068	BOLT, ENGINE REAR PLATE 볼트
94.720	FASTENER, ENGINE REAR PLATE 패스너
94.960	NUT, OIL PUMP STRAINER FASTENER 너트
94.965	FASTENER, TIMING BELT FRONT UPPER COVER 패스너

www.truck-freeworkshop.com/clark/

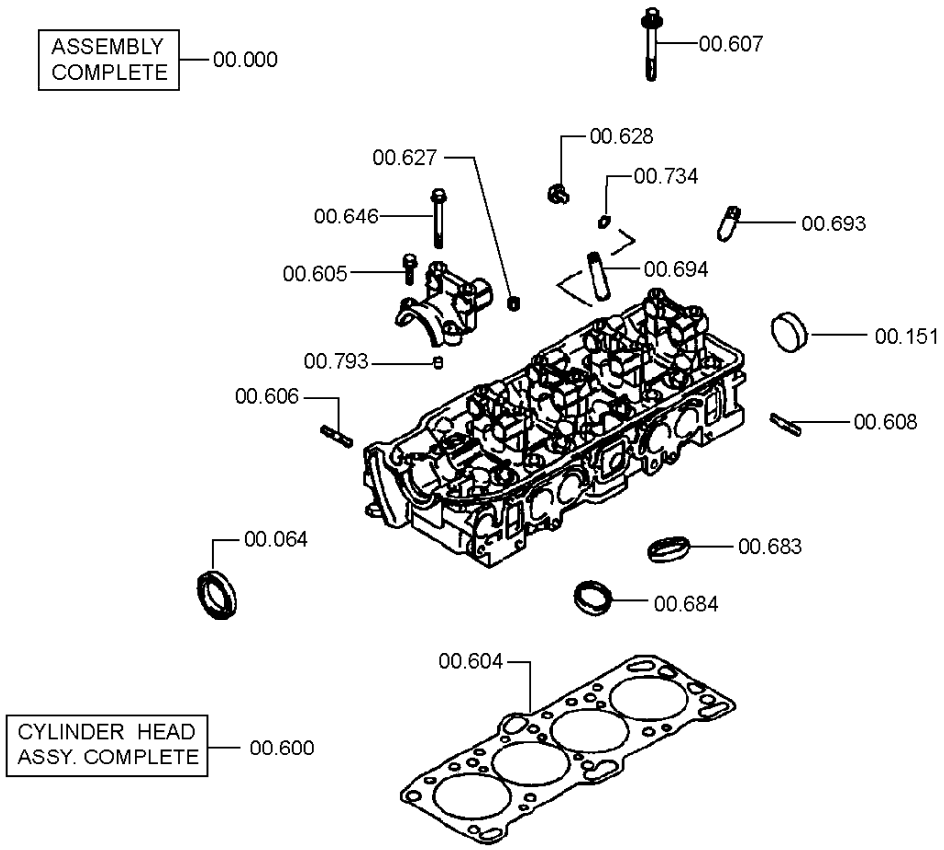

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.064 SEAL, CAMSHAFT OIL
시일

00.151 PLUG, CRANKCASE HEAD REAR
플러그

00.600 HEAD ASSEMBLY, CRANKCASE
헤드

00.604 GASKET, CRANKCASE HEAD
가스켓

00.605 FASTENER, CRANKCASE HEAD
패스너

00.606 FASTENER, CRANKCASE HEAD
패스너

00.607 FASTENER, CRANKCASE HEAD
패스너

00.608 FASTENER, CRANKCASE HEAD
패스너

www.truck-freeworkshop.com/clark/

00.627	PLUG, CRANKCASE HEAD 플러그
00.628	PLUG, CRANKCASE HEAD 플러그
00.646	FASTENER, ENGINE ROCKER ARM PIVOT SUPPORT 패스너
00.683	SEAT, EXHAUST VALVE INSERT 시트
00.684	SEAT, INTAKE VALVE INSERT 시트
00.693	GUIDE, INTAKE VALVE 가이드
00.694	GUIDE, EXHAUST VALVE 가이드
00.734	SEAL, CRANKCASE HEAD PLUG 시일
00.793	BUSHING, ENGINE LOCKER ARM PIVOT SUPPORT 부싱

www.truck-freeworkshop.com/clark/

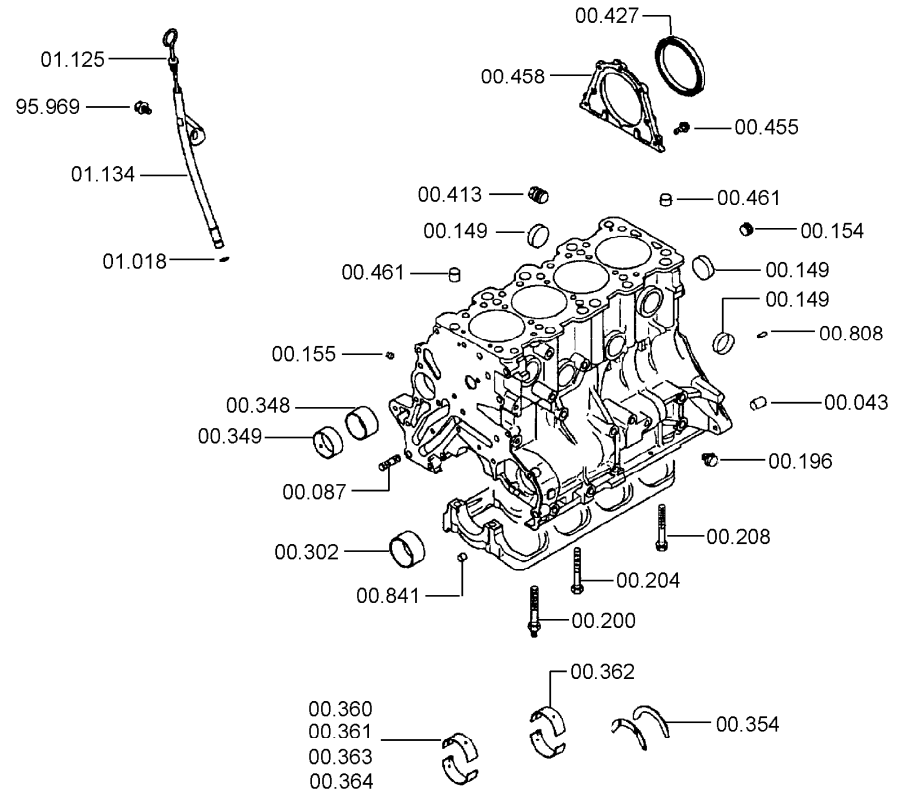

CYLINDER BLOCK 00-818

00.043	BUSHING, ENGINE REAR SUPPORT BRACKET 부싱	00.362	BEARING, NO. 3 MAIN JOURNAL 베어링
00.087	STUD, ENGINE FRONT SUPPORT 스터드	00.363	BEARING, NO. 4 MAIN JOURNAL 베어링
00.149	PLUG - EXPANSION, CRANKCASE SIDE 플러그	00.364	BEARING, NO. 5 MAIN JOURNAL 베어링
00.154	PLUG - EXPANSION, CRANKCASE END 플러그	00.413	PLUG & WASHER, CRANKCASE 플러그와셔
00.155	PLUG - EXPANSION, CRANKCASE END 플러그	00.427	SEAL, CRANKCASE REAR OIL 시일
00.196	PLUG-EXPANSION, CRANKCASE SIDE 플러그	00.455	FASTENER, REAR OIL SEAL HOUSING 패스너
00.200	FASTENER, CRANKSHAFT BEARING NO. 1 CAP 패스너	00.458	HOUSING, REAR OIL SEAL 하우징
00.204	FASTENER, CRANKSHAFT BEARING NO. 2 CAP 패스너	00.461	DOWEL, CRANKCASE HEAD 다웰
00.208	FASTENER, CRANKSHAFT BEARING NO. 3 CAP 패스너	00.808	DOWEL RING, CRANKCASE REAR ADAPTOR PLATE 다웰링
00.302	BEARING, BALANCER WEIGHT REAR 베어링	00.841	DOWEL RING, ENGINE FRONT GEAR COVER 다웰링
00.348	BEARING, ENGINE BALANCER SHAFT REAR 베어링	01.018	SEAL, OIL LEVEL DIPSTICK ADAPTOR 시일
00.349	BEARING, ENGINE BALANCER SHAFT FRONT 베어링	01.125	DIPSTICK, CRANKCASE OIL LEVEL 딥스틱
00.354	WASHER, CRANKSHAFT THRUST 와셔	01.134	ADAPTOR, CRANKCASE OIL LEVEL DIPSTICK 어댑터
00.360	BEARING, NO. 1 MAIN JOURNAL 베어링	95.969	FASTENER, ENGINE OIL LEVEL CONTROL 패스너
00.361	BEARING, NO. 2 MAIN JOURNAL 베어링		

www.truck-freeworkshop.com/clark/

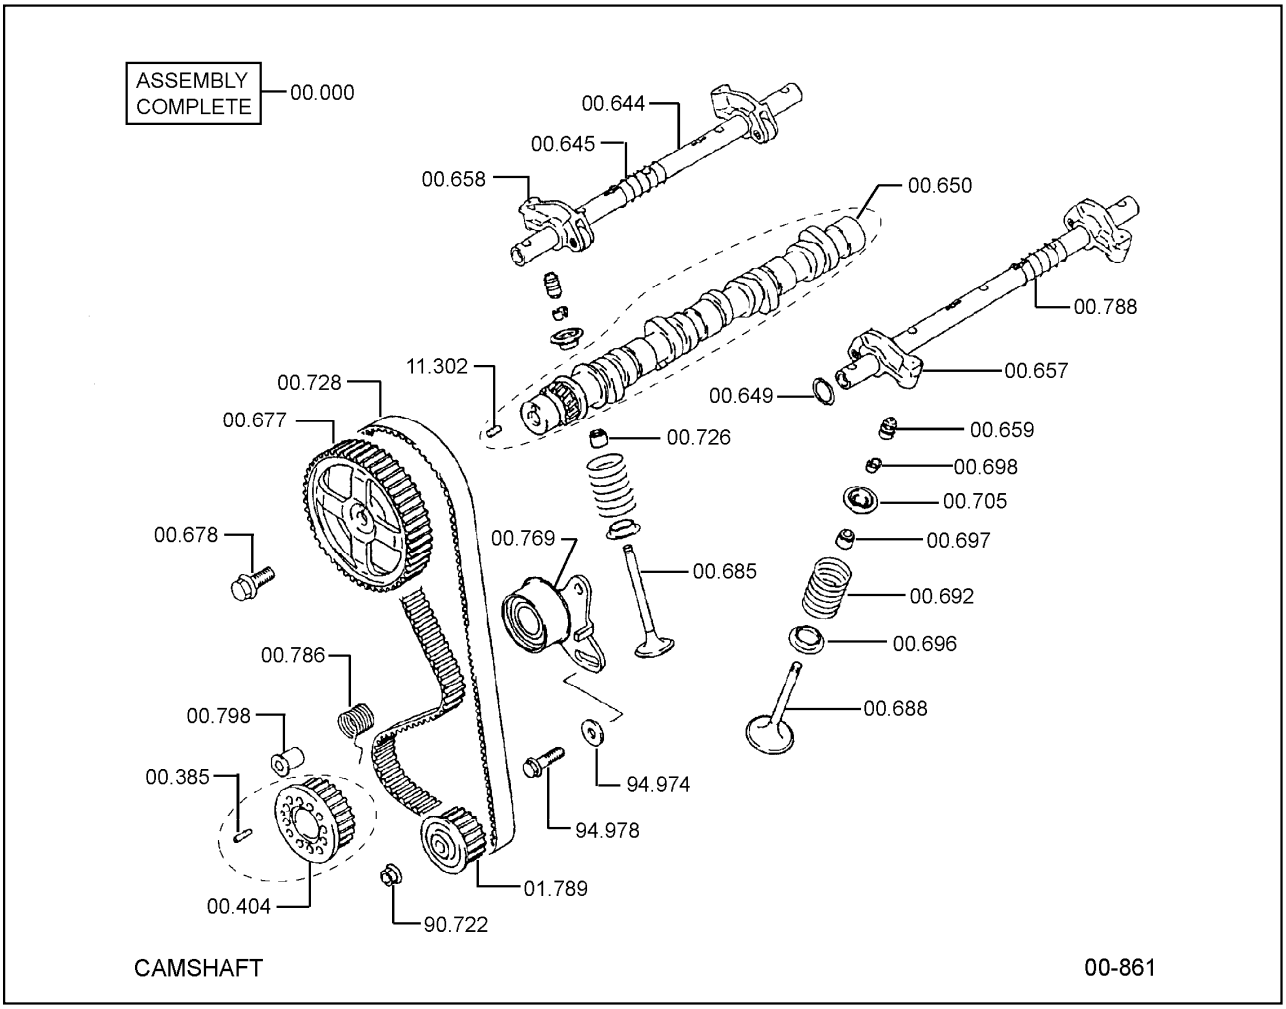

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	00.696	PILOT, ENGINE VALVE SPRING 파일롯
00.385	KEY, CRANKSHAFT PULLEY 키	00.697	SEAL, ENGINE VALVE 시일
00.404	GEAR, CRANKSHAFT TIMING 기어	00.698	LOCK, EXHAUST VALVE SPRING SEAT 로크
00.644	PIVOT, ENGINE ROCKER ARM 피봇	00.705	SEAT, EXHAUST VALVE SPRING 시트
00.645	SPRING, ENGINE ROCKER ARM 스프링	00.726	SEAL, ENGINE VALVE 시일
00.649	WASHER, ENGINE ROCKER ARM PIVOT 와셔	00.728	CHAIN, CAMSHAFT TIMING 체인
00.650	CAMSHAFT 캠샤프트	00.769	TENSIONER, CAMSHAFT TIMING CHAIN 텐셔너
00.657	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커	00.786	SPRING, CAMSHAFT TIMING CHAIN TENSIONER 스프링
00.658	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커	00.788	PIVOT, ENGINE ROCKER ARM (RH) 피봇
00.659	ADJUSTOR, ENGINE VALVE 어드져스터	00.798	DAMPENER, CAMSHAFT TIMING CHAIN TENSIONER SPRING 댐프너
00.677	GEAR, CAMSHAFT TIMING 기어	01.789	GEAR, OIL PUMP DRIVE 기어
00.678	FASTENER, TIMING GEAR TO CAMSHAFT 패스너	11.302	PIN, DISTRIBUTOR GEAR 핀
00.685	VALVE, EXHAUST 밸브	90.722	NUT, OIL PUMP FASTENER 너트
00.688	VALVE, INTAKE 밸브	94.974	WASHER, CAMSHAFT TIMING BELT TENSIONER FASTENER 와셔
00.692	SPRING, ENGINE EXHAUST VALVE 스프링	94.978	FASTENER, CAMSHAFT TIMING BELT TENSIONER 패스너

www.truck-freeworkshop.com/clark/

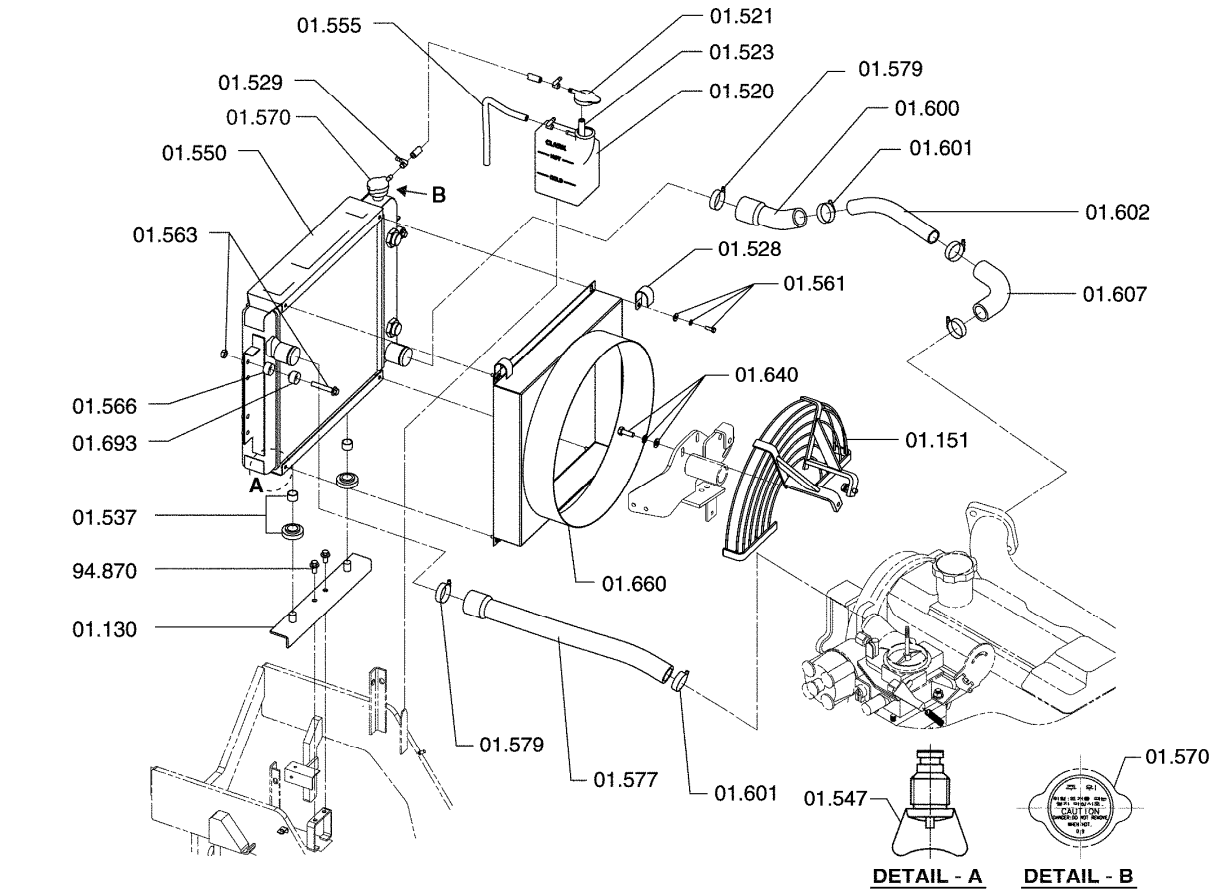

01.130 BRACKET, RADIATOR
브라켓

01.151 GUARD, RADIATOR FAN
가드

01.520 COMPENSATION TANK, COOLING SYSTEM
보상기

01.521 COVER, COMPENSATION TANK
커버

01.523 LINE, COOLING SYSTEM COMPENSATION TANK
라인

01.528 CLIP, RADIATOR OVERFLOW LINE
클립

01.529 CLAMP, RADIATOR OVERFLOW LINE
클램프

01.537 PAD, RADIATOR MOUNTING LOWER
패드

01.547 DRAIN COCK, RADIATOR
드레인콕

www.truck-freeworkshop.com/clark/

01.550	RADIATOR 라디에터
01.555	LINE, RADIATOR OVERFLOW 라인
01.561	FASTENER, RADIATOR MOUNTING 패스너
01.563	FASTENER, RADIATOR MOUNTING BRACKET 패스너
01.566	PAD, RADIATOR MOUNTING 패드
01.570	CAP, RADIATOR 캡
01.577	HOSE, RADIATOR UPPER 호스
01.579	CLAMP, RADIATOR UPPER HOSE 클램프
01.600	HOSE, RADIATOR LOWER 호스
01.601	CLAMP, RADIATOR LOWER HOSE 클램프
01.602	TUBE, RADIATOR LOWER 튜브
01.607	HOSE, ENGINE WATER PUMP INLET 호스
01.640	FASTENER, RADIATOR SHROUD EXTENTION 패스너
01.660	SHROUD, RADIATOR 슈라우드
01.693	DAMPENER, RADIATOR VIBRATION 댐프너
94.870	FASTENER, RADIATOR MOUNTING BRACKET 패스너

www.truck-freeworkshop.com/clark/

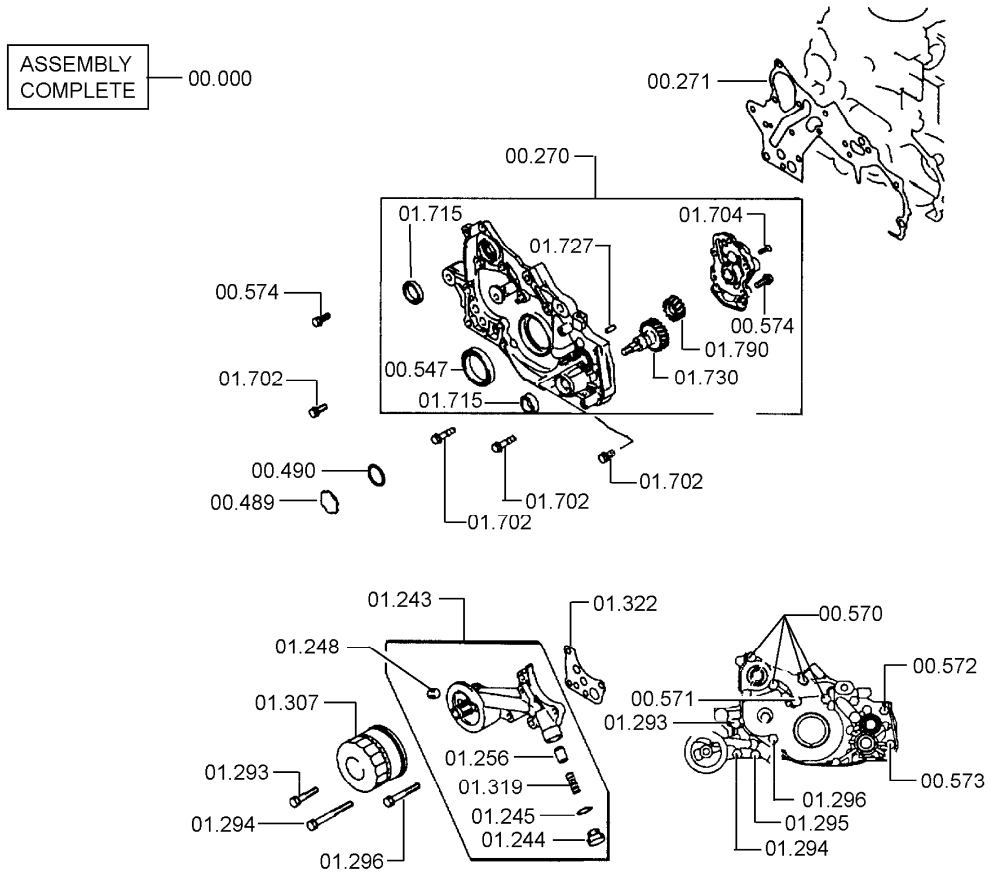

OIL PUMP & OIL FILTER 01-506

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.270	CASE AND OIL PUMP, ENGINE FRONT END 오일펌프케이스
00.271	GASKET, ENG FRONT END CASE AND OIL PUMP ASSY 가스켓
00.489	PLUG, ENGINE FRONT GEAR COVER 플러그
00.490	SEAL, ENGINE FRONT GEAR COVER PLUG 시일
00.547	SEAL, ENGINE FRONT GEAR COVER 시일
00.570	FASTENER, BACKING PLATE 패스너
00.571	FASTENER, BACKING PLATE 패스너
00.572	FASTENER, BACKING PLATE 패스너
00.573	FASTENER, BACKING PLATE 패스너
00.574	FASTENER, BACKING PLATE 패스너
01.243	BASE, ENGINE OIL FILTER 베이스
01.244	PLUG, ENGINE OIL FILTER BASE 플러그
01.245	GASKET, ENGINE OIL FILTER BASE PLUG 가스켓
01.248	PLUG, ENGINE OIL FILTER ADAPTOR 플러그
01.256	SEAT, ENGINE OIL FILTER SPRING 시트
01.293	FASTENER, ENGINE OIL FILTER ATTACHING 패스너
01.294	FITTING, ENGINE OIL FILTER OUTLET 피팅
01.295	FASTENER, ENGINE OIL FILTER ATTACHING 패스너
01.296	FASTENER, ENGINE OIL FILTER ATTACHING 패스너
01.307	CARTRIDGE & GASKET, ENGINE OIL FILTER 카트리지와가스켓
01.319	SPRING, ENGINE OIL FILTER 스프링
01.322	GASKET, ENGINE OIL FILTER ADAPTOR 가스켓
01.702	FASTENER, OIL PUMP 패스너
01.704	FASTENER, OIL PUMP COVER 패스너
01.715	GASKET, OIL PUMP COVER 가스켓
01.727	DOWEL, OIL PUMP BODY 다월
01.730	GEAR, OIL PUMP DRIVE IDLER 기어
01.790	GEAR, OIL PUMP DRIVEN 기어

www.truck-freeworkshop.com/clark/

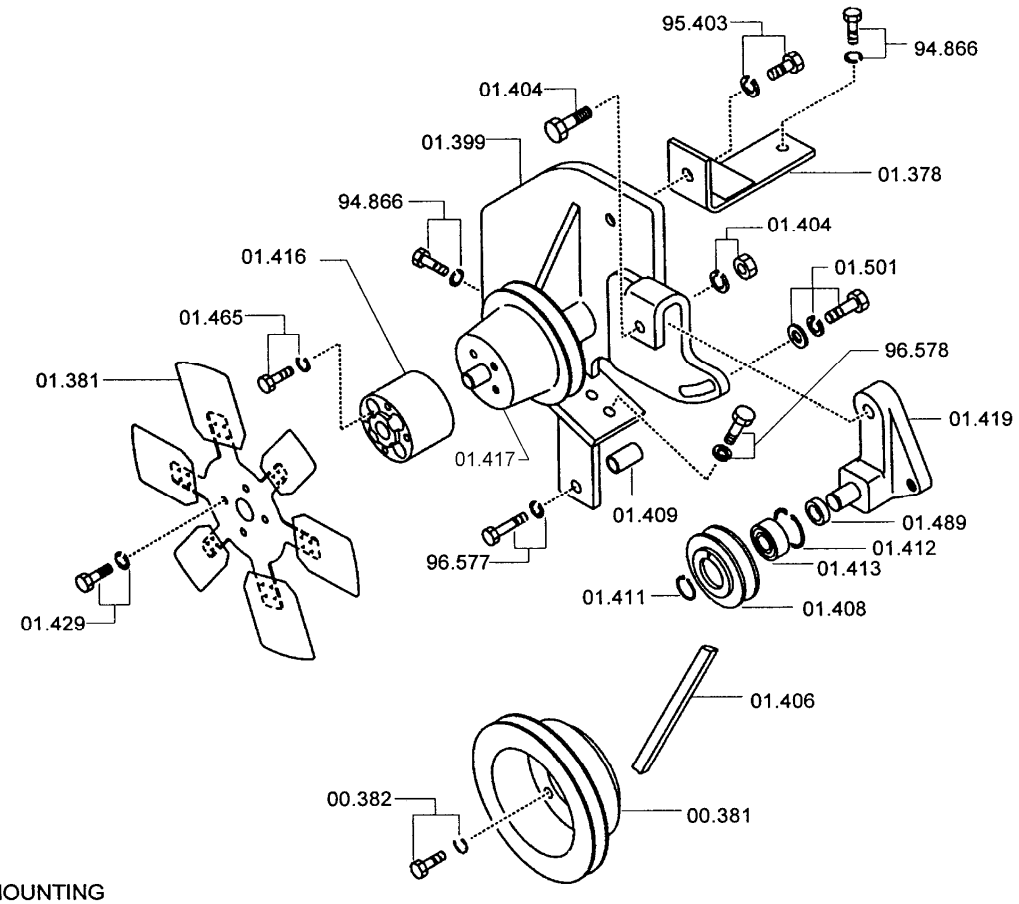

00.381 PULLEY, CRANKSHAFT ACCESSORY DRIVE
풀리

00.382 FASTENER, CRANKSHAFT ACCESS DR PULLEY
패스너

01.378 BRACE, FAN BRACKET
브레이스

01.381 BLADE, FAN
블레이드

01.399 BRACKET, FAN MOUNTING
브라켓

01.404 FASTENER, FAN BRACKET
패스너

01.406 BELT, FAN
븜트셋

01.408 SHEAVE ASSEMBLY, IDLER
쉬브

01.409 SPACER, IDLER ADJUSTMENT
스페이서

www.truck-freeworkshop.com/clark/

01.411	RETAINER, IDLER SHEAVE 리테이너
01.412	RETAINER, IDLER SHEAVE BEARING 리테이너
01.413	BEARING, BELT IDLER SHEAVE 베어링
01.416	SPACER, FAN BLADE 스페이서
01.417	PULLEY, FAN 풀리
01.419	BRACKET, IDLER SHEAVE 브라켓
01.429	FASTENER, FAN CONTROL 패스너
01.465	FASTENER, FAN BLADE SPACER 패스너
01.489	SHIM, WATER PUMP PULLEY FASTENER 심
01.501	PIVOT, FAN DRIVE IDLER SHEAVE BRACKET 피봇
94.866	FASTENER, FAN BLADE MOUNTING BRACKET GUIDE 패스너
95.403	FASTENER, RADIATOR SHROUD BRACKET 패스너
96.577	FASTENER, FAN MOUNTING BRACKET 패스너
96.578	FASTENER, FAN MOUNTING BRACKET 패스너

www.truck-freeworkshop.com/clark/

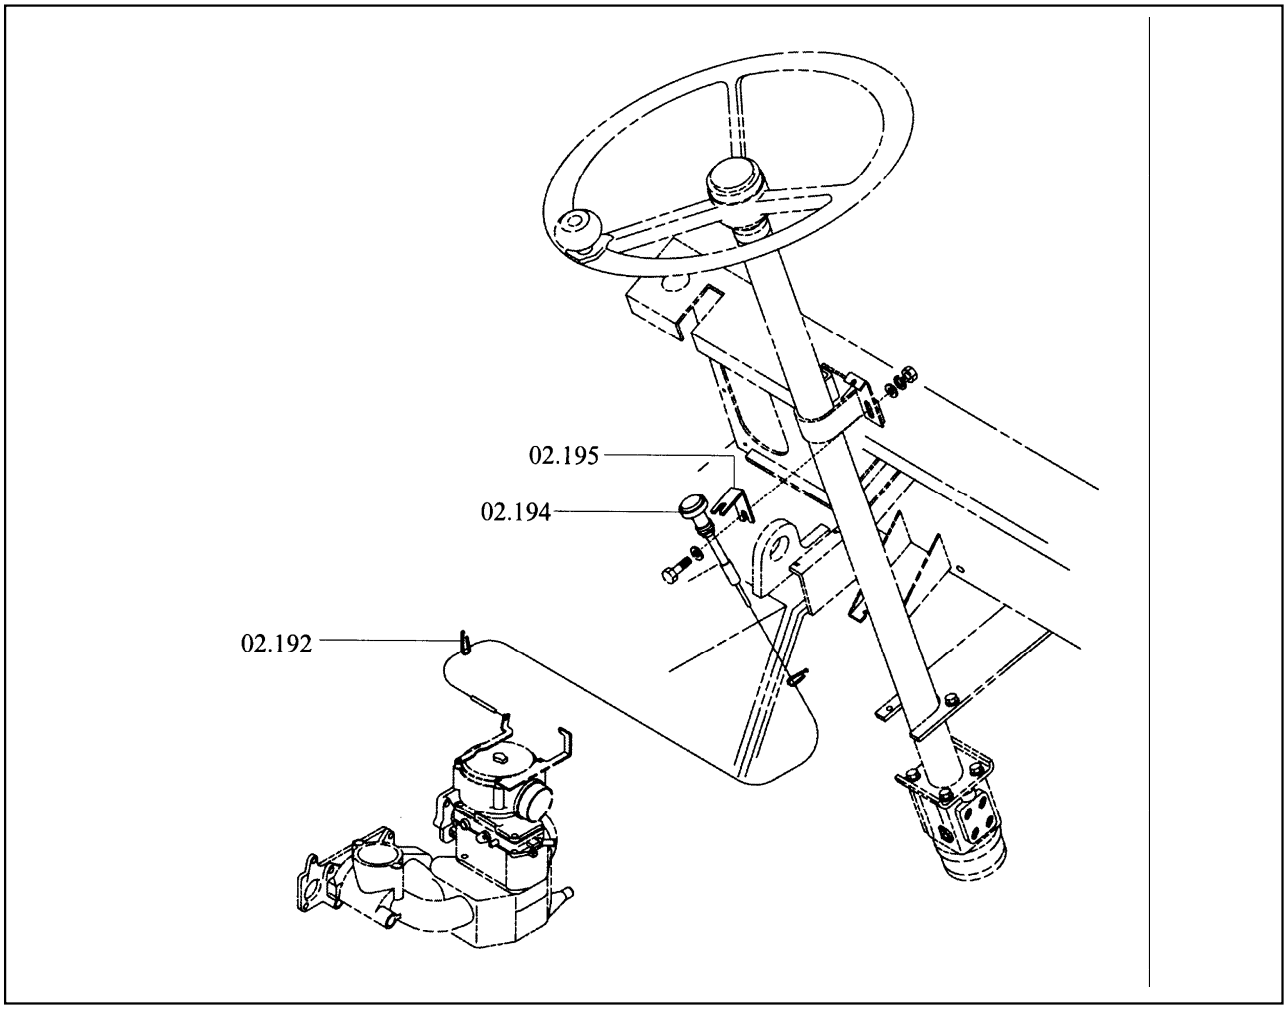

02.192 CLIP, CHOKE CABLE
클립

02.194 CONTROL, CHOKE
컨트롤

02.195 BRACKET, CHOKE CABLE MOUNTING
브라켓

www.truck-freeworkshop.com/clark/

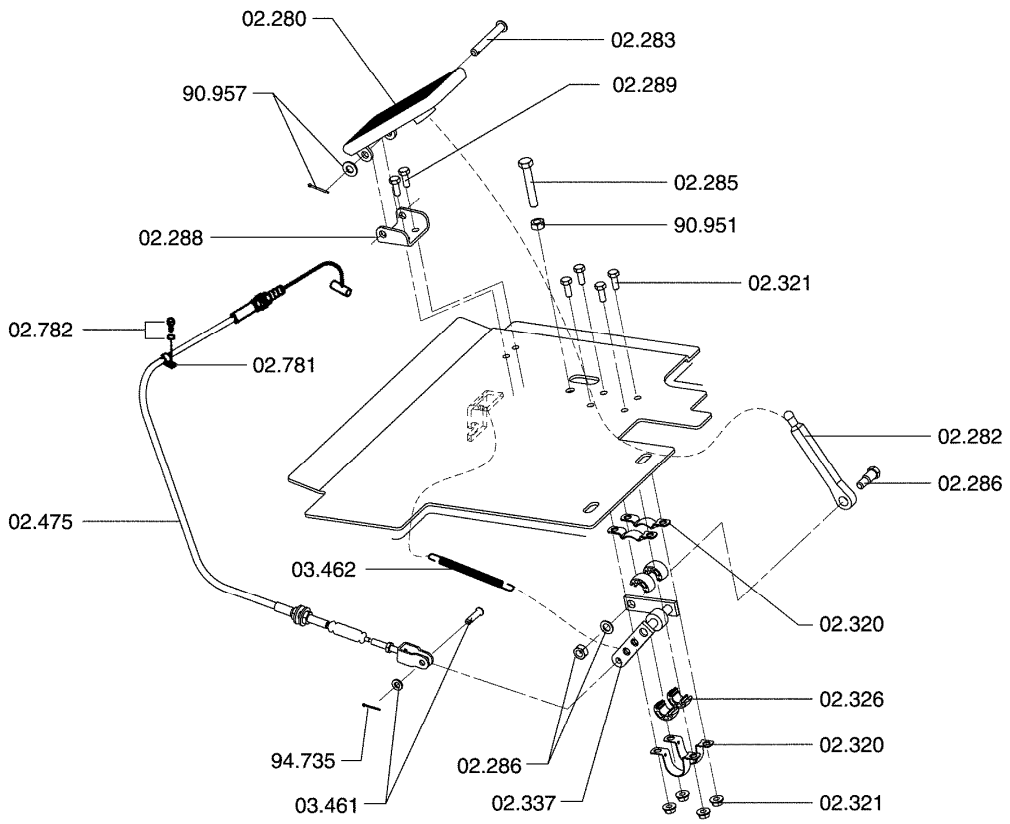

ACCELERATOR LINKAGE **02-457**

02.280 PEDAL, ACCELERATOR
페달

02.282 ROD, ACCELERATOR PUSH
로드

02.283 PIN, ACCELERATOR PEDAL TO BRACKET PIVOT
핀

02.285 STOP, ACCELERATOR PEDAL LINKAGE
스톱

02.286 FASTENER, PUSH ROD
패스너

02.288 BRACKET, ACCELERATOR PEDAL ATTACHING
브라켓

02.289 FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING
패스너

02.320 BRACKET, ACCELERATOR LEVER ATTACHING
브라켓

02.321 FASTENER, ACCELERATOR LEVER BRACKET
패스너

www.truck-freeworkshop.com/clark/

02.326	BEARING, ACCELERATOR LEVER 베어링
02.337	BRACKET, ACCELERATOR LEVER MOUNTING 브라켓
02.475	ROD, ACCELERATOR CONTROL 로드
02.781	CLIP, ACCELERATOR CABLE TO BRACKET 클립
02.782	FASTENER, BRACKET CLIP 패스너
03.461	PIN, ACCELERATOR CONTROL ROD END 핀
03.462	SPRING, ACCELERATOR PEDAL RETURN 스프링
90.951	RETAINER, ACCELERATOR PEDAL STOP 리테이너
90.957	RETAINER, ACCELERATOR LINKAGE LEVER PIN 리테이너
94.735	RETAINER, ACCELERATOR CONTROL ROD END PIN 리테이너

www.truck-freeworkshop.com/clark/

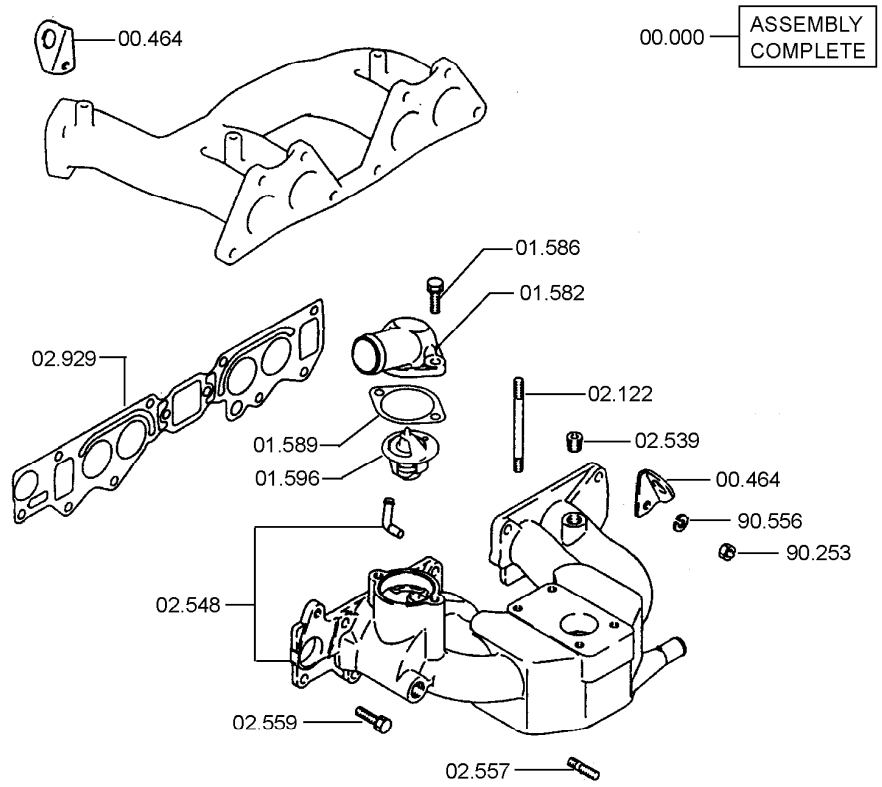

MANIFOLD 03-157

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.464 BRACKET, ENGINE LIFTING
브라켓

01.582 ELBOW, WATER OUTLET
엘보우

01.586 FASTENER, WATER OUTLET ELBOW - FANSIDE
패스너

01.589 GASKET, WATER OUTLET ELBOW
가스켓

01.596 THERMOSTAT, ENGINE
써머스태트

02.122 FASTENER, CARBURETOR
패스너

02.539 PLUG - PIPE, MANIFOLD
플러그

02.548 MANIFOLD, INTAKE
매니폴드

www.truck-freeworkshop.com/clark/

02.557	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.559	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.929	GASKET, INTAKE MANIFOLD 가스켓
90.253	NUT, MANIFOLD FASTENER 너트
90.556	LOCKWASHER, MANIFOLD FASTENER 로크와셔

www.truck-freeworkshop.com/clark/

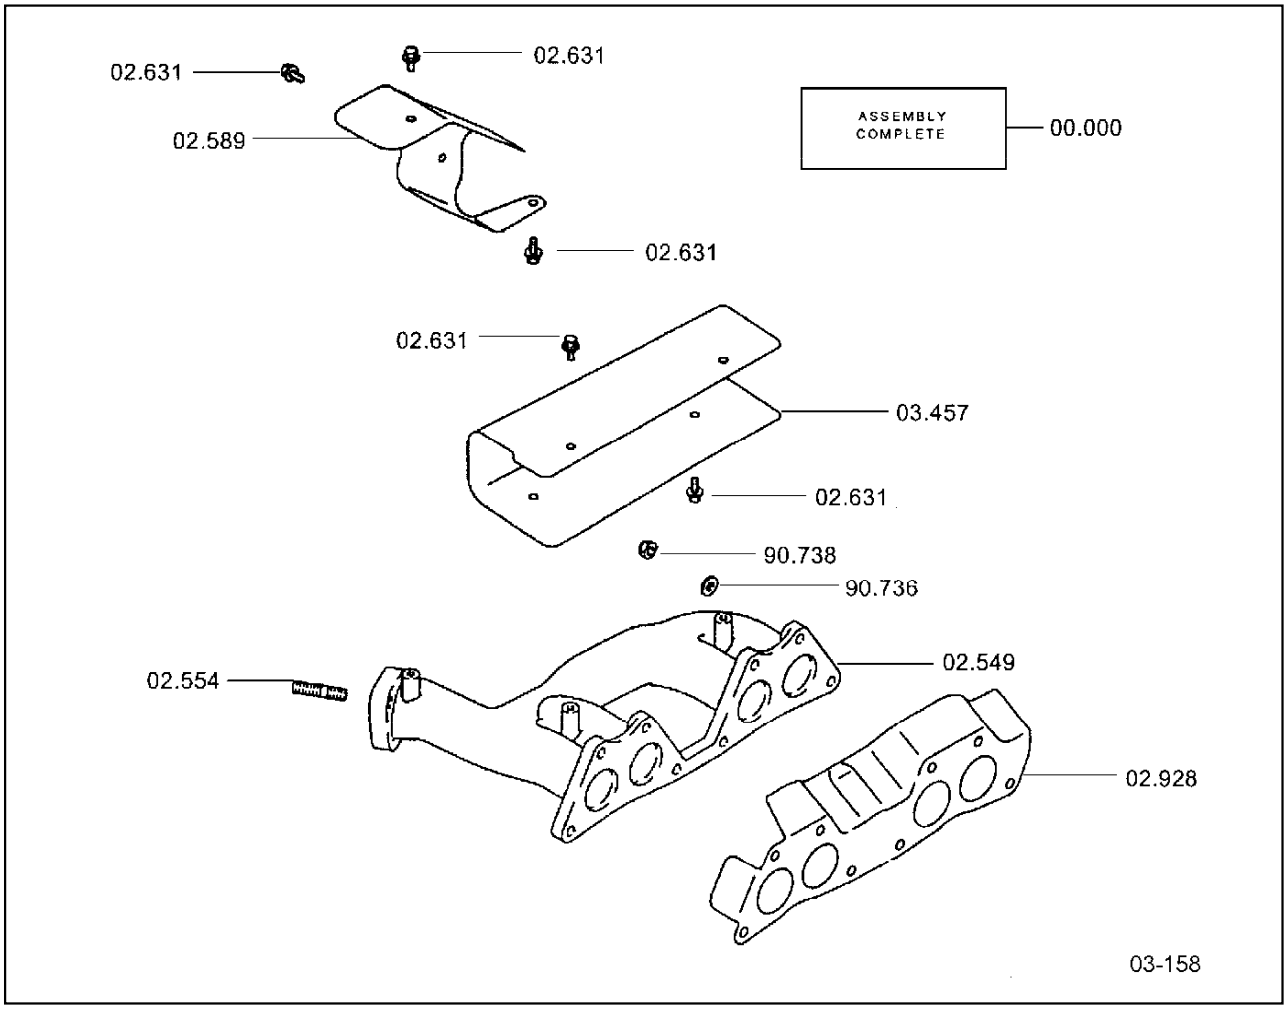

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
02.549	MANIFOLD, EXHAUST 매니폴드
02.554	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.589	SHIELD, HEAT (AT MANIFOLD) 쉴드
02.631	FASTENER, HEAT SHIELD 패스너
02.928	GASKET, EXHAUST MANIFOLD 가스켓
03.457	SHIELD, MANIFOLD HEAT 쉴드
90.736	WASHER, MANIFOLD FASTENER 와셔
90.738	NUT, MANIFOLD FASTENER 너트

www.truck-freeworkshop.com/clark/

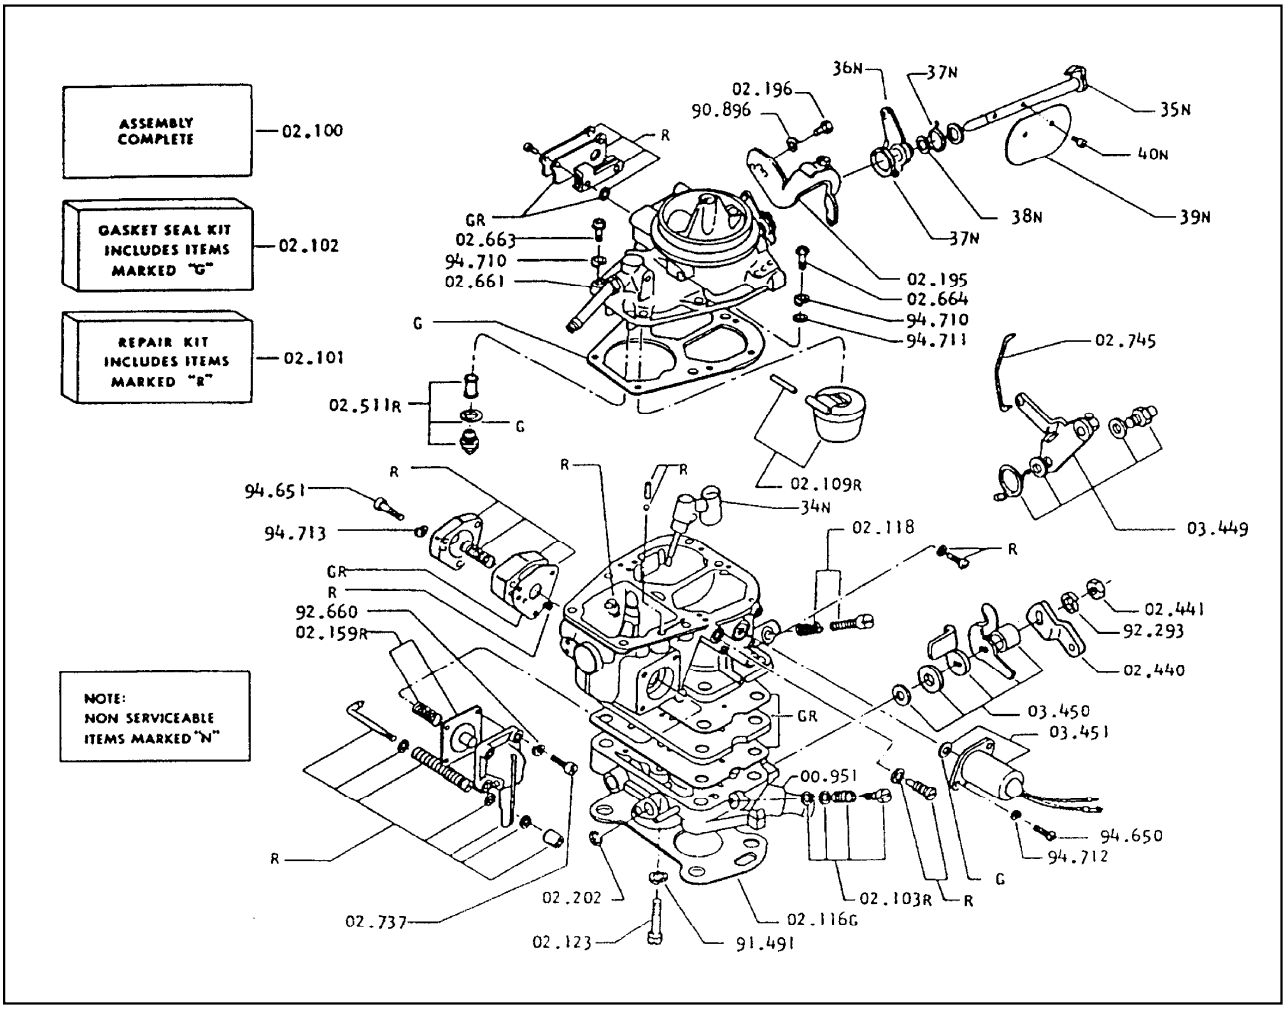

00.951	THROTTLE ASSEMBLY, GOVERNOR 트로틀
02.100	CARBURETOR ASSEMBLY 기화기
02.101	REPAIR KIT, CARBURETOR 리페어킷
02.102	GASKET KIT, CARBURETOR 가스켓킷
02.103	SCREW, CARBURETOR IDLE ADJUST 스크류
02.109	FLOAT ASSEMBLY 플로트
02.116	GASKET, CARBURETOR MOUNTING 가스켓
02.118	SCREW, THROTTLE STOP 스크류
02.123	FASTENER, CARBURETOR INTAKE TO BOWL 패스너
02.159	ROD & PISTON ASSEMBLY, PUMP 로드와피스톤
02.195	BRACKET, CHOKE CABLE MOUNTING 브라켓
02.196	FASTENER, CHOKE CABLE MOUNTING BRACKET 패스너
02.202	RETAINER, CARBURETOR THROTTLE SHAFT SEAL 리테이너
02.440	LEVER, THROTTLE 레버
02.441	FASTENER, THROTTLE LEVER 패스너
02.511	VALVE & SEAT ASSEMBLY 밸브와시트
02.661	COVER, BOWL ASSEMBLY 커버
02.663	FASTENER, CARBURETOR COVER 패스너
02.664	FASTENER, CARBURETOR COVER 패스너
02.737	FASTENER, ACCELERATOR PUMP LEVER 패스너
02.745	ROD, AIR SHUTTER CONTROL 로드
03.449	KIT, CHOKE CONTROL LINKAGE LEVER 킷
03.450	KIT, THROTTLE CONTROL LINKAGE LEVER 킷
03.451	SOLENOID, IDLE CIRCUIT CONTROL 솔레노이드
90.896	LOCKWASHER, CHOKE CONTROL FAST 로크와셔
91.491	LOCKWASHER, BOWL TO THROTTLE FASTENER 로크와셔
92.293	LOCKWASHER, THROTTLE LEVER FASTENER 로크와셔
92.660	LOCKWASHER, CARBURETOR ACCELERATING PUMP COVER F 로크와셔
94.650	FASTENER, IDLE CIRCUIT CONTROL SOLENOID 패스너
94.651	FASTENER, ENRICHMENT VALVE 패스너

www.truck-freeworkshop.com/clark/

94.710 LOCKWASHER, CARBURETOR COVER FASTENER
로크와셔

94.711 WASHER, CARBURETOR COVER FASTENER
와셔

94.712 LOCKWASHER, IDLE CIRCUIT CONTROL SOLENOID FASTEN
로크와셔

94.713 LOCKWASHER, ENRICHMENT VALVE FASTENER
로크와셔

www.truck-freeworkshop.com/clark/

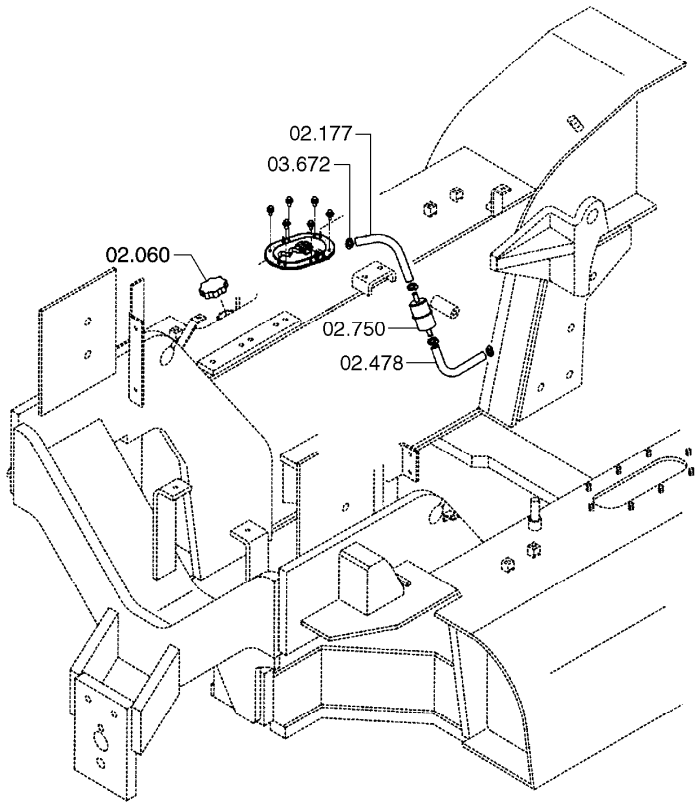

FUEL SYSTEM **03-545**

02.060	CAP, FUEL TANK 캡
02.177	LINE, FILTER INLET 라인
02.478	NUT, ACCELERATOR CONTROL ROD 너트
02.750	FILTER ASSEMBLY, FUEL 필터
03.672	CLIP, FUEL RETURN LINE 클립

www.truck-freeworkshop.com/clark/

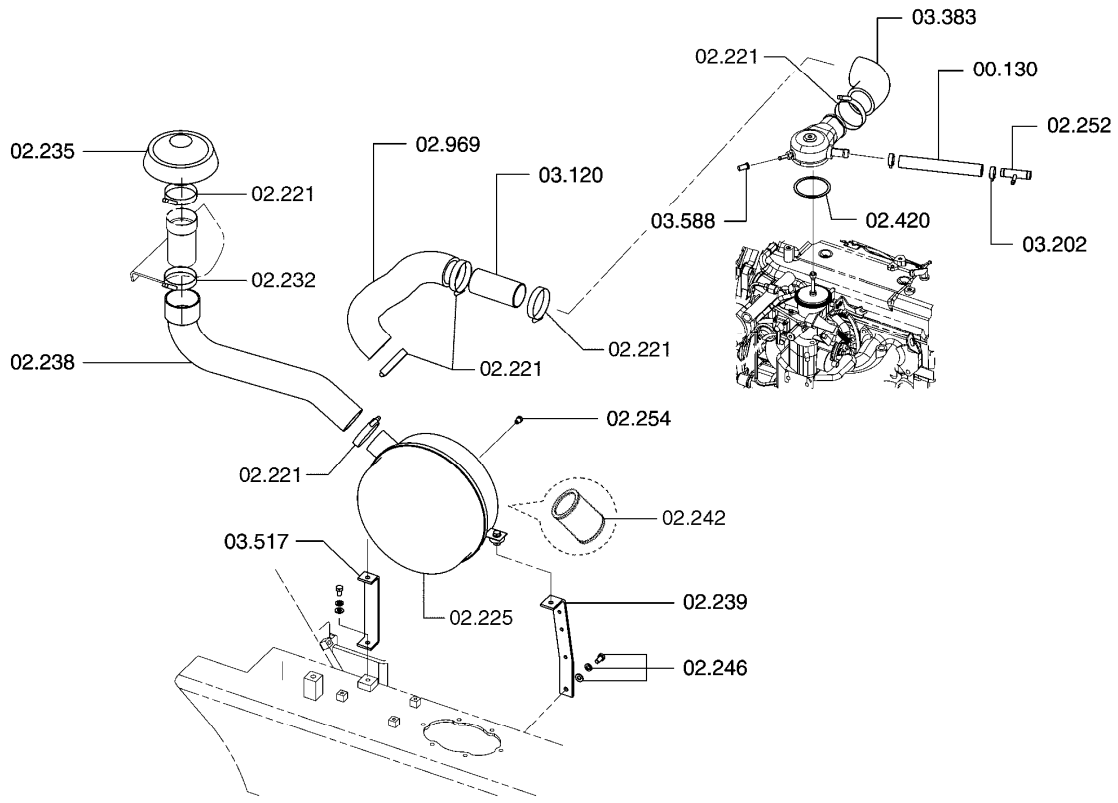

INTAKE SYSTEM **03-691**

00.130 LINE, CRANKCASE VENT
라인

02.221 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프

02.225 CLEANER ASSEMBLY, ENGINE INTAKE AIR
에어클리너

02.232 CLAMP, INTAKE AIR CLEANER
클램프

02.235 CAP, ENGINE INTAKE AIR CLEANER INLET
캡

02.238 TUBE, MAIN AIR CLEANER INLET
튜브

02.239 BAND, ENGINE INTAKE AIR CLEANER
밴드

02.242 ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER
엘리먼트와가스켓

02.246 FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING
패스너

www.truck-freeworkshop.com/clark/

02.252	FITTING, MAIN AIR CLEANER OUTLET TUBE 피팅
02.254	FITTING, MAIN AIR CLEANER AIR RES IND BULKHEAD 피팅
02.420	GASKET, ENGINE AIR INTAKE ADAPTOR 가스켓
02.969	HOSE, MAIN AIR CLEANER INLET 호스
03.120	TUBE, AIR CLEANER DRAIN LINE 튜브
03.202	CLAMP, ENGINE AIR INTAKE ADAPTOR 클램프
03.383	LINE, MAIN AIR CLEANER INLET LINE 라인
03.517	BRACKET, AIR CLEANER MOUNTING 브라켓
03.588	PLUG, ADAPTOR AIR INTAKE HOSE 플러그

www.truck-freeworkshop.com/clark/

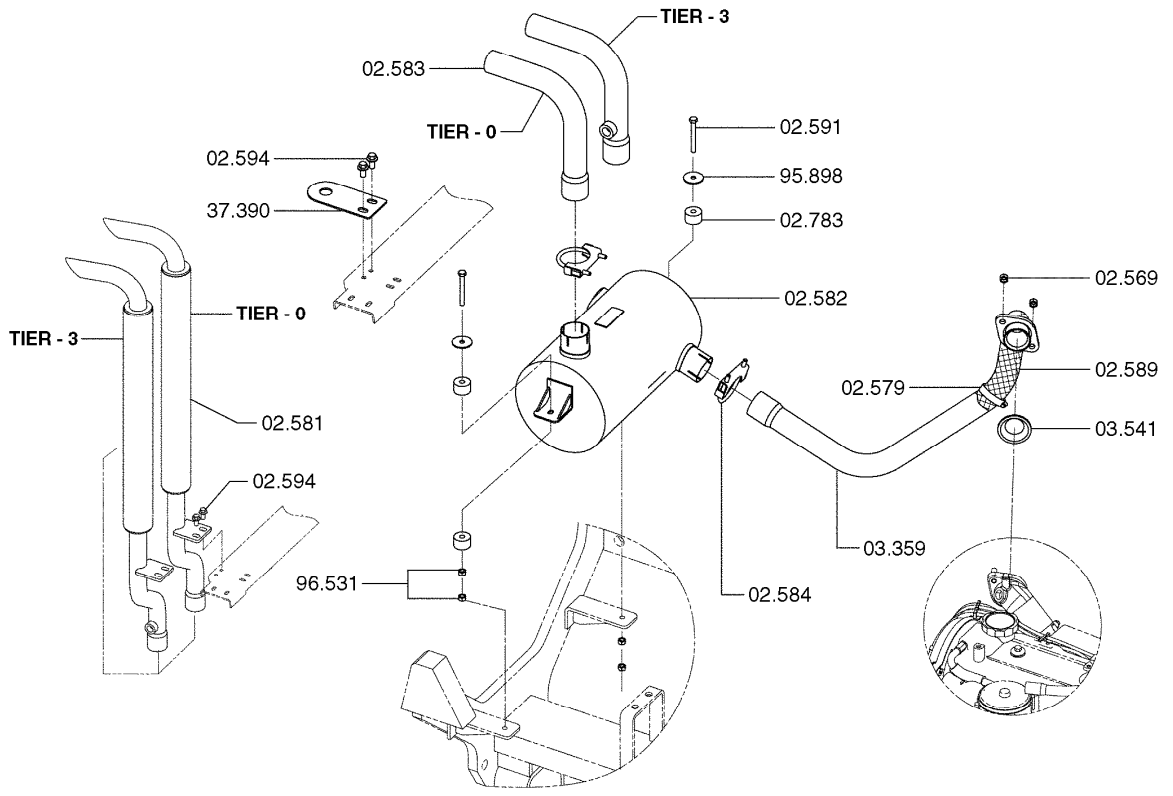

EXHAUST SYSTEM **03-699**

02.569 FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD
패스너

02.579 CLAMP, EXHAUST PIPE TO MUFFLER
클램프

02.581 EXTENSION, TAIL PIPE
익스텐션

02.582 MUFFLER
머플러

02.583 PIPE, TAIL
파이프

02.584 CLAMP, TAIL PIPE TO MUFFLER
클램프

02.589 SHIELD, HEAT (AT MANIFOLD)
쉴드

02.591 FASTENER, MUFFLER MOUNTING
패스너

02.594 FASTENER, TAIL PIPE MOUNTING BRACKET
패스너

www.truck-freeworkshop.com/clark/

02.783	DAMPENER, MUFFLER MOUNTING VIBRATION 댐프너
03.359	PIPE, EXHAUST 파이프
03.541	RING, EXHAUST PIPE MANIFOLD FLANGE SEALING 링
37.390	PLATE, OVERHEAD GUARD REINFORCING 플레이트
95.898	WASHER, MUFFLER ATTACHING FASTENER 와셔
96.531	NUT, MUFFLER MOUNTING BRACKET FASTENER 너트

www.truck-freeworkshop.com/clark/

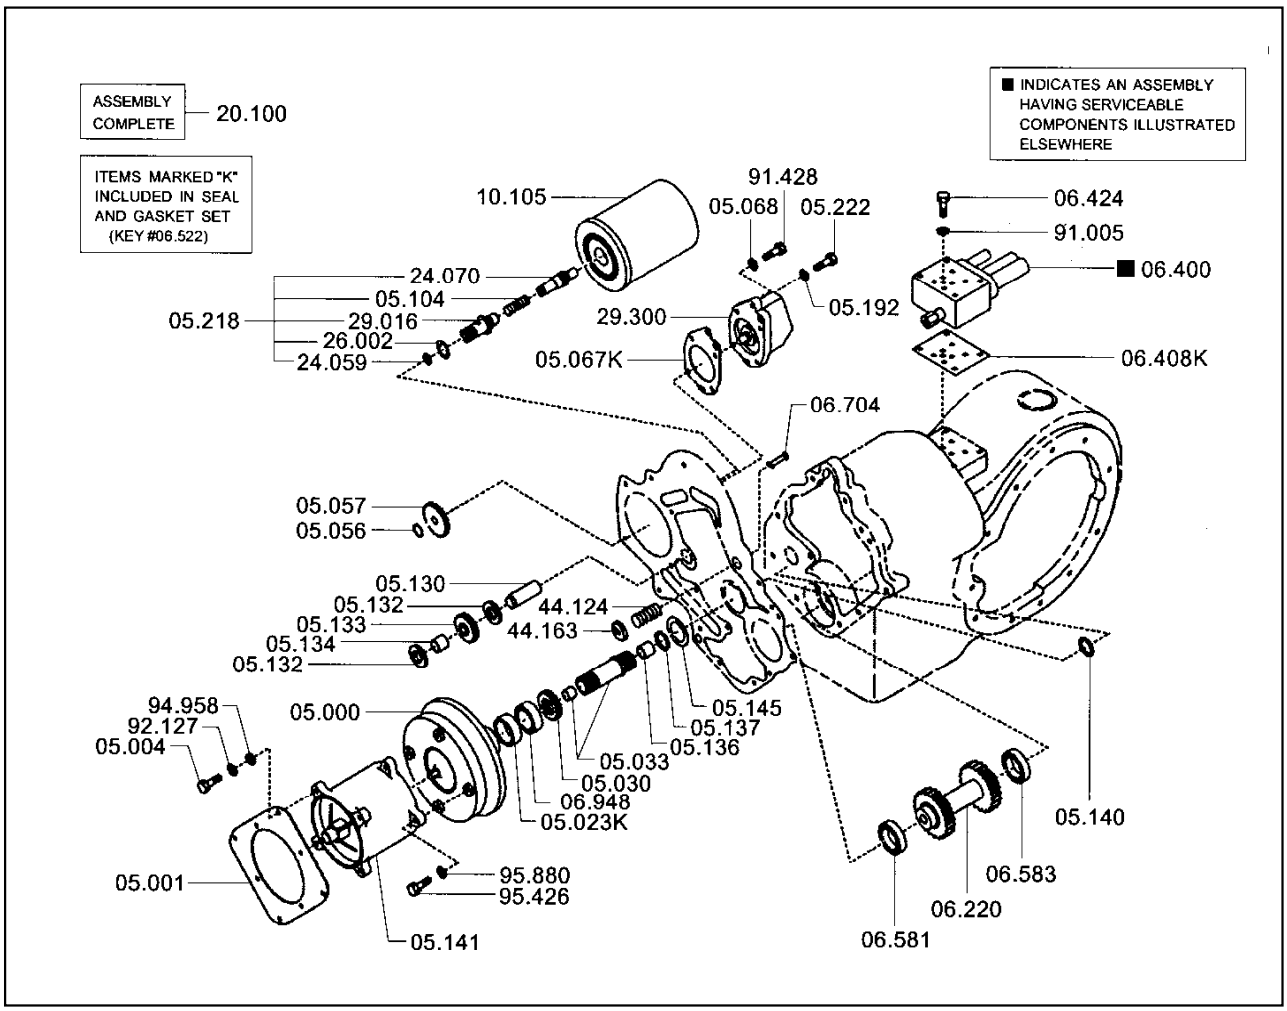

05.000	CONVERTER ASSEMBLY, TORQUE 컨버터	05.136	BEARING, CONVERTER STATOR SUPPORT 베어링
05.001	GEAR, CONVERTER RING 기어	05.137	LOCATOR, CONVERTER STATOR SUPPORT (OUTER) 로케이터
05.004	FASTENER, CONVERTER DRIVE & REINFORCING PLATE 패스너	05.140	LOCATOR, CONVERTER STATOR SUPPORT (INNER) 로케이터
05.023	SEAL, CONVERTER IMPELLER HUB 시일	05.141	ADAPTOR, CONVERTER DRIVE 어댑터
05.030	GEAR, IMPELLER HUB 기어	05.145	WASHER, CONVERTER STATOR SUPPORT 와셔
05.033	STATOR SUPPORT ASSEMBLY, CONVERTER 스테이터	05.192	LOCKWASHER, CONVERTER PUMP FASTENER 로크와셔
05.056	RING-RETAINING, PUMP DRIVE GEAR 링	05.218	BODY, PRESSURE REGULATING VALVE 바디
05.057	GEAR, PUMP DRIVE 기어	05.222	CAPSCREW, CONVERTOR PUMP MOUNTING 캡스크류
05.067	GASKET, CONVERTER PUMP 가스켓	06.220	GEAR, REVERSE IDLER 기어
05.068	FASTENER, CONVERTER CHARGING PUMP 패스너	06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버와밸브
05.104	SPRING, INNER 스프링	06.408	GASKET, CONTROL COVER ATTACHING 가스켓
05.130	SHAFT, CONVERTER PUMP IDLER GEAR 샤프트	06.424	FASTENER, CONTROL COVER 패스너
05.132	THRUST WASHER, CONVERTOR PUMP IDLER GEAR 트러스트와셔	06.581	BEARING, REVERSE GEAR 베어링
05.133	GEAR, CONVERTOR PUMP IDLER 기어	06.583	BEARING, REVERSE GEAR 베어링
05.134	BEARING, CONVERTOR PUMP IDLER GEAR 베어링	06.704	VALVE, TRANSMISSION PRESSURE RELIEF 밸브

www.truck-freeworkshop.com/clark/

06.948	SLEEVE, CLUTCH OIL DISTRIBUTION 슬리브
10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트와가스켓
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
24.059	SHIM, OIL PUMP PISTON BUSHING 심
24.070	PISTON, OIL PUMP 피스톤
26.002	SNAP RING, PISTON ROD SEAL RETAINING 스냅링
29.016	VALVE, OIL FILTER CHECK 밸브
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
44.124	SPRING, TRANSMISSION SAFETY VALVE 스프링
44.163	STOP, TRANSMISSION SAFETY VALVE 스톱
91.005	LOCKWASHER, CONTROL COVER FASTENER 로크와셔
91.428	LOCKWASHER, CONVERTER CHARGING PUMP FAST 로크와셔
92.127	LOCKWASHER, CONVERTER DRIVE AND REINFORCING PLAT 로크와셔
94.958	WASHER, CONVERTER DRIVE & REINFORCING PLATE FAST 와셔
95.426	FASTENER, CONVERTER DRIVE ADAPTOR 패스너
95.880	LOCKWASHER, CONVERTER DRIVE ADAPTOR FASTENER 로크와셔

www.truck-freeworkshop.com/clark/

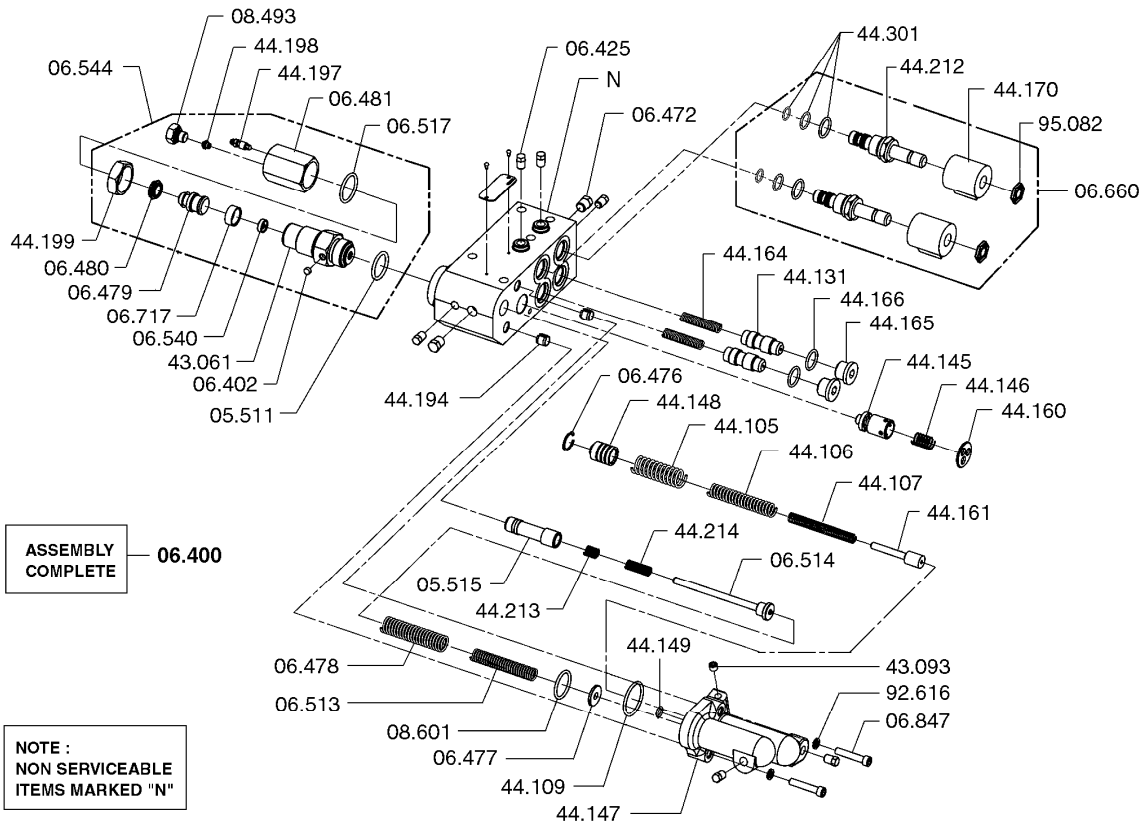

05.511	SEAL, INCHING PISTON HOUSING 시일
05.515	SPOOL, INCHING 스풀
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버와밸브
06.402	VENT, CONTROL COVER AIR 벤트
06.425	PLUG, CONTROL COVER OIL PASSAGE 플러그
06.472	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그
06.476	RETAINER, INCHING VALVE PISTON 리테이너
06.477	WASHER, INCHING VALVE PISTON 와셔
06.478	SPRING, INCHING PISTON RETURN 스프링
06.479	PISTON, INCHING 피스톤
06.480	SEAL, INCHING PISTON 시일
06.481	FITTING, INCHING VALVE PISTON PORT 피팅
06.513	SPRING, INCHING VALVE 스프링
06.514	ROD, INCHING VALVE 로드
06.517	SEAL, INCHING VALVE PISTON PORT FITTING 시일
06.540	SEAL, INCHING PISTON HOUSING 시일
06.544	HOUSING, INCHING PISTON 하우징
06.660	SOLENOID ASSEMBLY, TRANSMISSION 솔레노이드
06.717	SEAL, CONTROL COVER OIL PASSAGE 시일
06.847	FASTENER, ACCUMULATOR HOUSING 패스너
08.493	PLUG, SPEED CHANGE NEEDLE VALVE HOUSING 플러그
08.601	GASKET, MODULATION VALVE 가스켓
43.061	HOUSING, CONTROL VALVE INCHING PISTON 하우징
43.093	PLUG, CONTROL VALVE HOUSING 플러그
44.105	SPRING, TRANSMISSION ACCUMULATOR OUTER 스프링
44.106	SPRING, TRANSMISSION ACCUMULATOR MIDDLE 스프링
44.107	SPRING, TRANSMISSION ACCUMULATOR INNER 스프링
44.109	SEAL, TRANSMISSION ACCUMULATOR BORE PLUG 시일
44.131	SPOOL, FORWARD & REVERSE 스풀
44.145	SPOOL, MODULATOR 스풀

www.truck-freeworkshop.com/clark/

44.146 SPRING, MODULATOR SPOOL
스프링

44.147 HOUSING, TRANSMISSION CONTROL ACCUMULATOR
하우징

44.148 SPOOL, ACCUMULATOR
스풀

44.149 SEAL, ACCUMULATOR HOUSING TO CONTROL VALVE
시일

44.160 SEAT, TRANSMISSION SHIFT MODULATOR SPOOL SPRING
시트

44.161 STOP, TRANSMISSION ACCUMULATOR SPOOL
스톱

44.164 SPRING, TRANSMISSION FORWARD & REVERSE VALVE SPO
스프링

44.165 CAP, TRANSMISSION FORWARD & REVERSE VALVE SPOOL
캡

44.166 SEAL, TRANSMISSION FORWARD & REVERSE VALVE SPOOL
시일

44.170 COIL, TRANSMISSION CONTROL COVER SOLENOID
코일

44.194 LOCATOR, CONTROL COVER
로케이터

44.197 BLEEDER, CONTROL VALVE SLAVE CYLINDER
블리더

44.198 SEAT, SLAVE CYLINDER BRAKE LINE
시트

44.199 NUT, SLAVE CYLINDER ADJUSTING
너트

44.212 CARTRIDGE, CONTROL VALVE SHIFT SOLENOID
카트리지

44.213 SPRING, INCHING SPOOL BALANCE- OUTER
스프링

44.214 SPRING, INCHING SPOOL BALANCE- INNER
스프링

44.301 SEAL KIT, SOLENOID VALVE
시일킷

92.616 LOCKWASHER, ACCUMULATOR HOUSING FASTENER
로크와셔

95.082 FASTENER, CONTROL SELECTOR SOLENOID RELAY
패스너

www.truck-freeworkshop.com/clark/

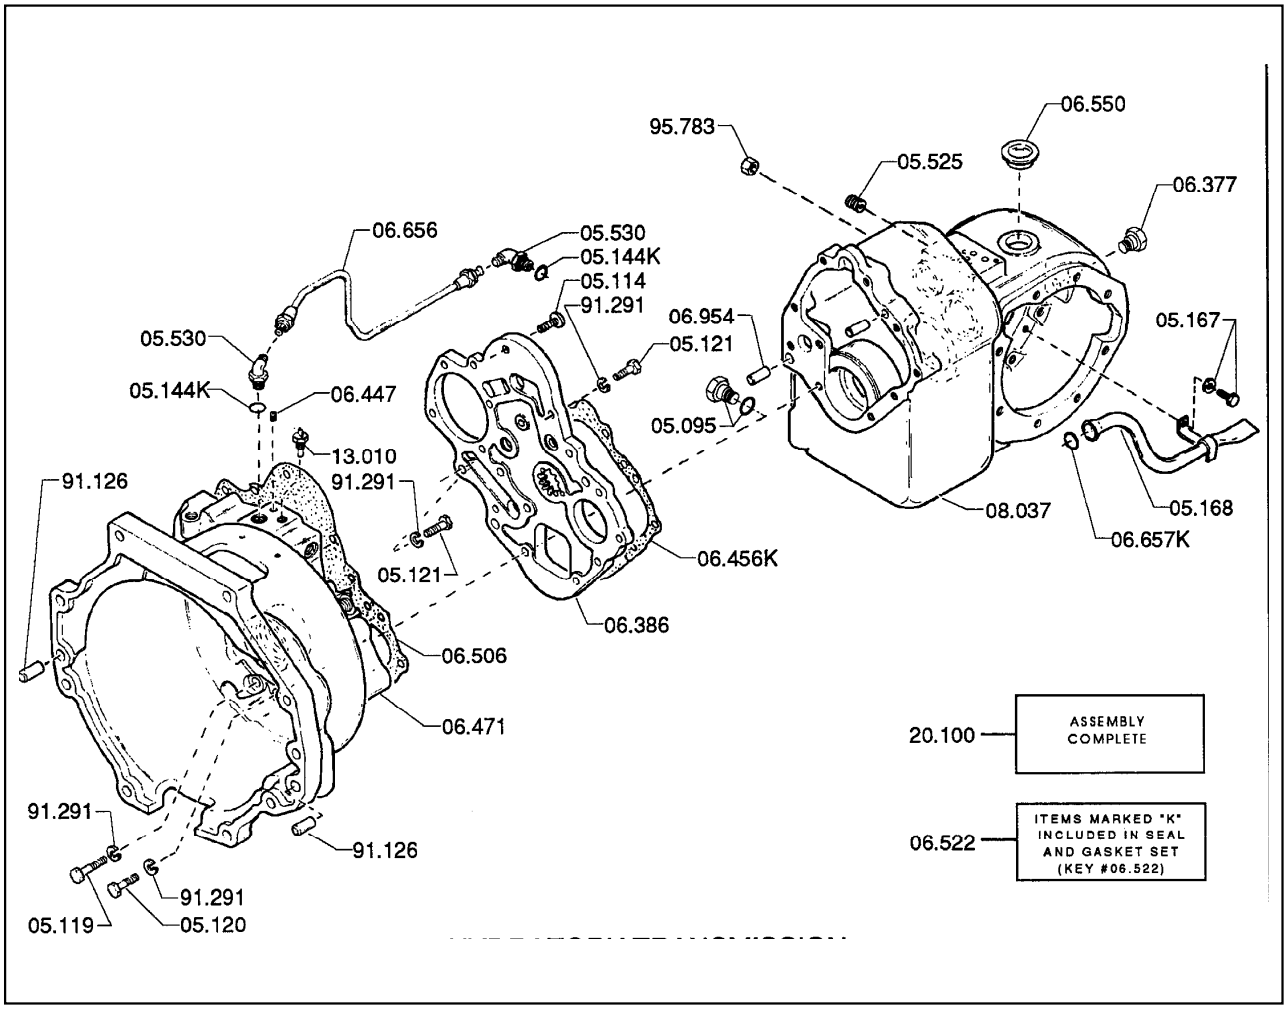

05.095 PLUG, CONVERTER HOUSING OIL PASSAGE
플러그

05.114 FASTENER, CONVERTER TO CASE
패스너

05.119 FASTENER, CONVERTER CASE
패스너

05.120 FASTENER, CONVERTER TO CASE
패스너

05.121 FASTENER, CONVERTER TO CASE
패스너

05.144 SEAL, CONVERTER PUMP SUPPLY LINE FITTING
시일

05.167 FASTENER, CONVERTER PUMP INLET LINE
패스너

05.168 LINE, CONVERTER PUMP INLET
라인

05.525 PLUG, TRANSMISSION CASE
플러그

www.truck-freeworkshop.com/clark/

05.530	FITTING, TORQUE CONVERTER INLET LINE 피팅
06.377	PLUG, TRANSMISSION SUMP OIL LEVEL 플러그
06.386	ADAPTOR, CONVERTER END 어댑터
06.447	PLUG, TRANSMISSION CASE 플러그
06.456	GASKET, TRANSMISSION ADAPTOR 가스켓
06.471	HOUSING, CONVERTER 하우징
06.506	SEAL, CONVERTER HOUSING TO CASE-INNER 시일
06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
06.550	COVER, TRANSMISSION HOUSING INSPECTION 커버
06.656	LINE, TRANS VALVE PRESS PUMP INLET 라인
06.657	SEAL, TRANS VALVE PRESS PUMP INLET LINE 시일
06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다월
08.037	CASE, TRANSMISSION 케이스
13.010	CONTROL, CONVERTOR TEMPERATURE INDICATOR 컨트롤
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
91.126	DOWEL RING, FLYWHEEL HOUSING FASTENER 다월링
91.291	LOCKWASHER, CONVERTER TO CASE FASTENER 로크와셔
95.783	NUT, CONVERTER OIL SUCTION TUBE FASTENER 너트

www.truck-freeworkshop.com/clark/

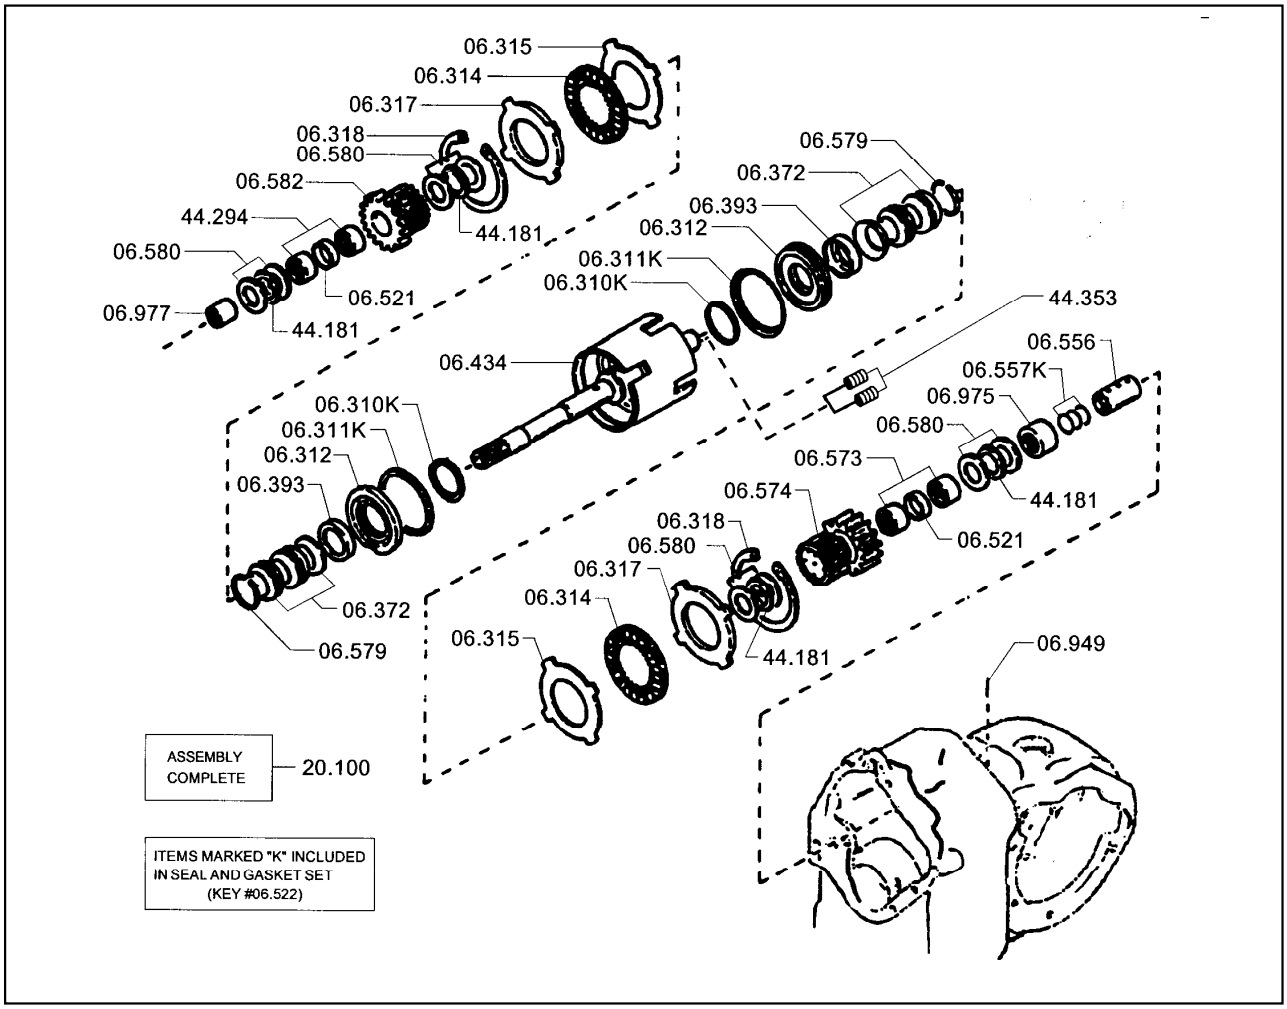

06.310 SEAL, FORWARD CLUCH PISTON INNER
시일

06.311 SEAL, FORWARD CLUTCH PISTON OUTER
시일

06.312 PISTON, FORWARD CLUTCH
피스톤

06.314 DISC, FORWARD CLUTCH INNER
디스크

06.315 DISC, FORWARD CLUTCH OUTER
디스크

06.317 PLATE, FORWARD CLUTCH DISC END
플레이트

06.318 RING, FORWARD CLUTCH DISC END PLATE RET
링

06.372 SPRING, REVERSE CLUTCH DISC RELEASE
스프링

06.393 WASHER KIT, FORWARD CLUTCH CYLINDER THRUST
와셔킷

www.truck-freeworkshop.com/clark/

06.434	SHAFT & GEAR, CLUTCH DRIVE 샤프트와기어
06.521	BALL, INCHING RELIEF VALVE 볼
06.556	DISTRIBUTOR, TRANSMISSION DIRECTION SEL OIL 디스트리뷰터
06.557	SEAL, TRANSMISSION DIRECTION SELECTOR OIL DIST 시일
06.573	BEARING, FORWARD GEAR 베어링
06.574	GEAR & BEARING FORWARD 기어와베어링
06.579	FASTENER, REVERSE CLUTCH SPRING RETAINER 패스너
06.580	THRUST WASHER, REVERSE CLUTCH HUB & DRUM 트러스트와셔
06.582	GEAR & BEARING, REVERSE 기어욱뷩어링
06.949	RETAINER, CLUTCH OIL DISTRIBUTION SLEEVE 리테이너
06.975	BEARING, REVERSE CLUTCH HUB (AXLE END) 베어링
06.977	BEARING, REVERSE CLUTCH HUB (ENGINE END) 베어링
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
44.181	BEARING, CLUTCH SHAFT THRUST 베어링
44.294	BEARING, REVERSE CLUTCH GEAR 베어링
44.353	PLUG, CLUTCH DRIVE SHAFT AND GEAR 플러그

www.truck-freeworkshop.com/clark/

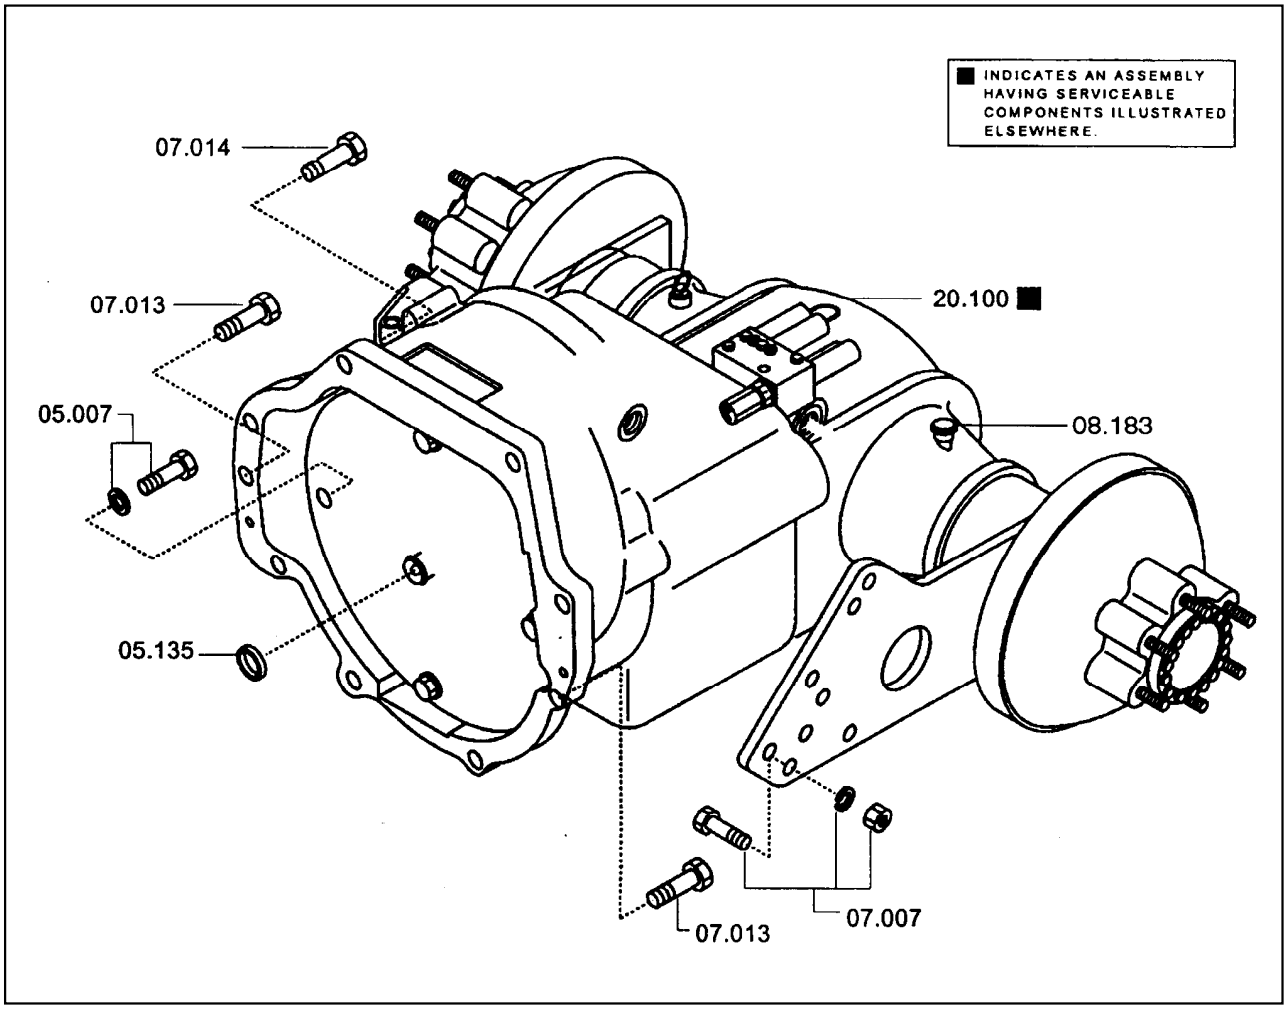

05.007	FASTENER, CONVERTER TO FLYWHEEL 패스너
05.135	SPACER, CONVERTER PILOT SHAFT 스페이서
07.007	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.013	FASTENER, TRANSMISSION TO ENGINE 패스너
07.014	FASTENER, TRANSMISSION TO ENGINE 패스너
08.183	VENT, TRANSMISSION CASE 벤트
20.100	TRANSAXLE ASSEMBLY 트랜스액슬

www.truck-freeworkshop.com/clark/

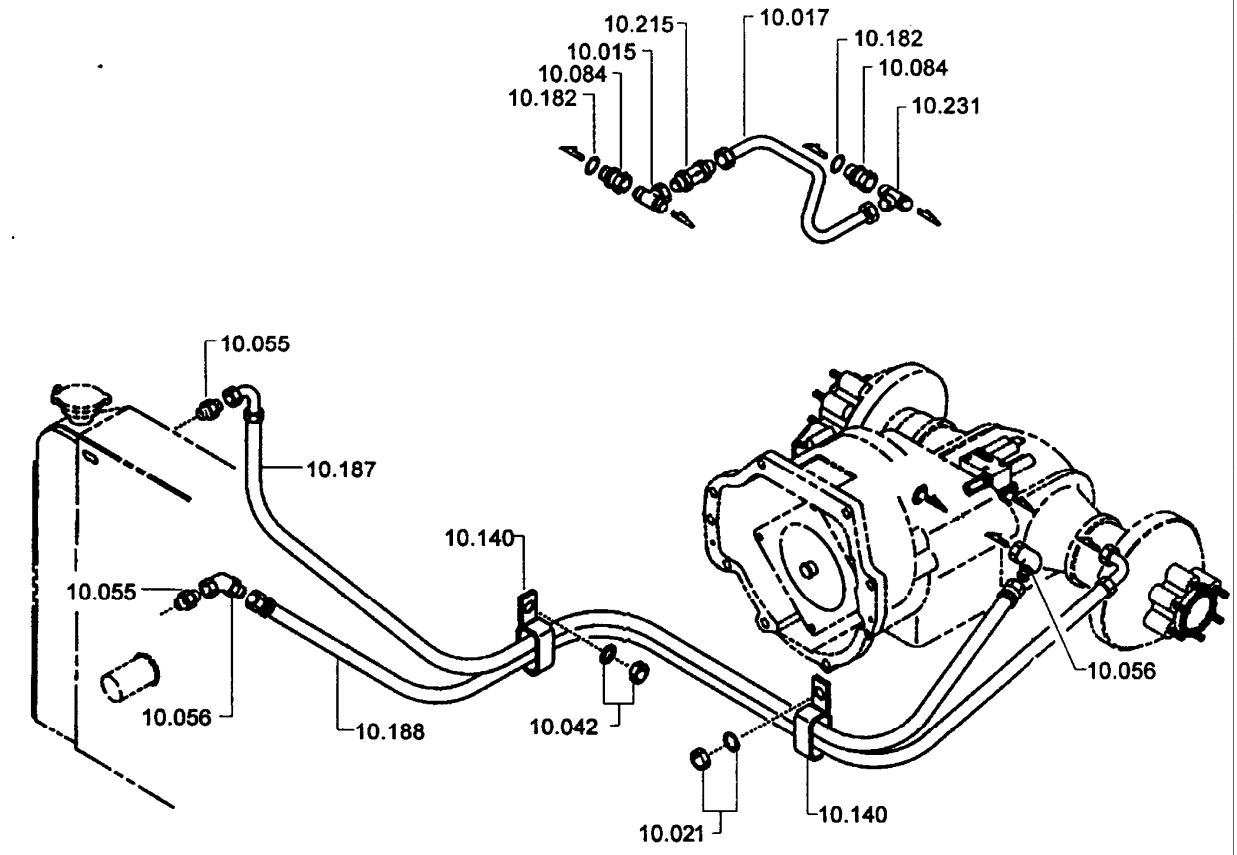

TRANS COOLING LINES 10-072

10.015 FITTING, CONVERTOR SUMP INLET
피팅

10.017 LINE, COOLER OUTLET
라인

10.021 FASTENER, COOLER OUTLET LINE CLAMP
패스너

10.042 FASTENER, COOLER INLET LINE CLAMP
패스너

10.055 FITTING, COOLER OUTLET
피팅

10.056 FITTING, COOLER OUTLET
피팅

10.084 FITTING, COOLER INLET LINE
피팅

10.140 CLAMP, COOLER LINE
클램프

10.182 SEAL, TRANSMISSION COOLER OUTLET LINE FITTING
시일

www.truck-freeworkshop.com/clark/

10.187	LINE, TRANSMISSION COOLER INLET 라인
10.188	LINE, TRANSMISSION COOLER OUTLET 라인
10.215	VALVE, TRANSMISSION COOLER LINE RELIEF 밸브
10.231	FITTING, OIL COOLING LINES 피팅

www.truck-freeworkshop.com/clark/

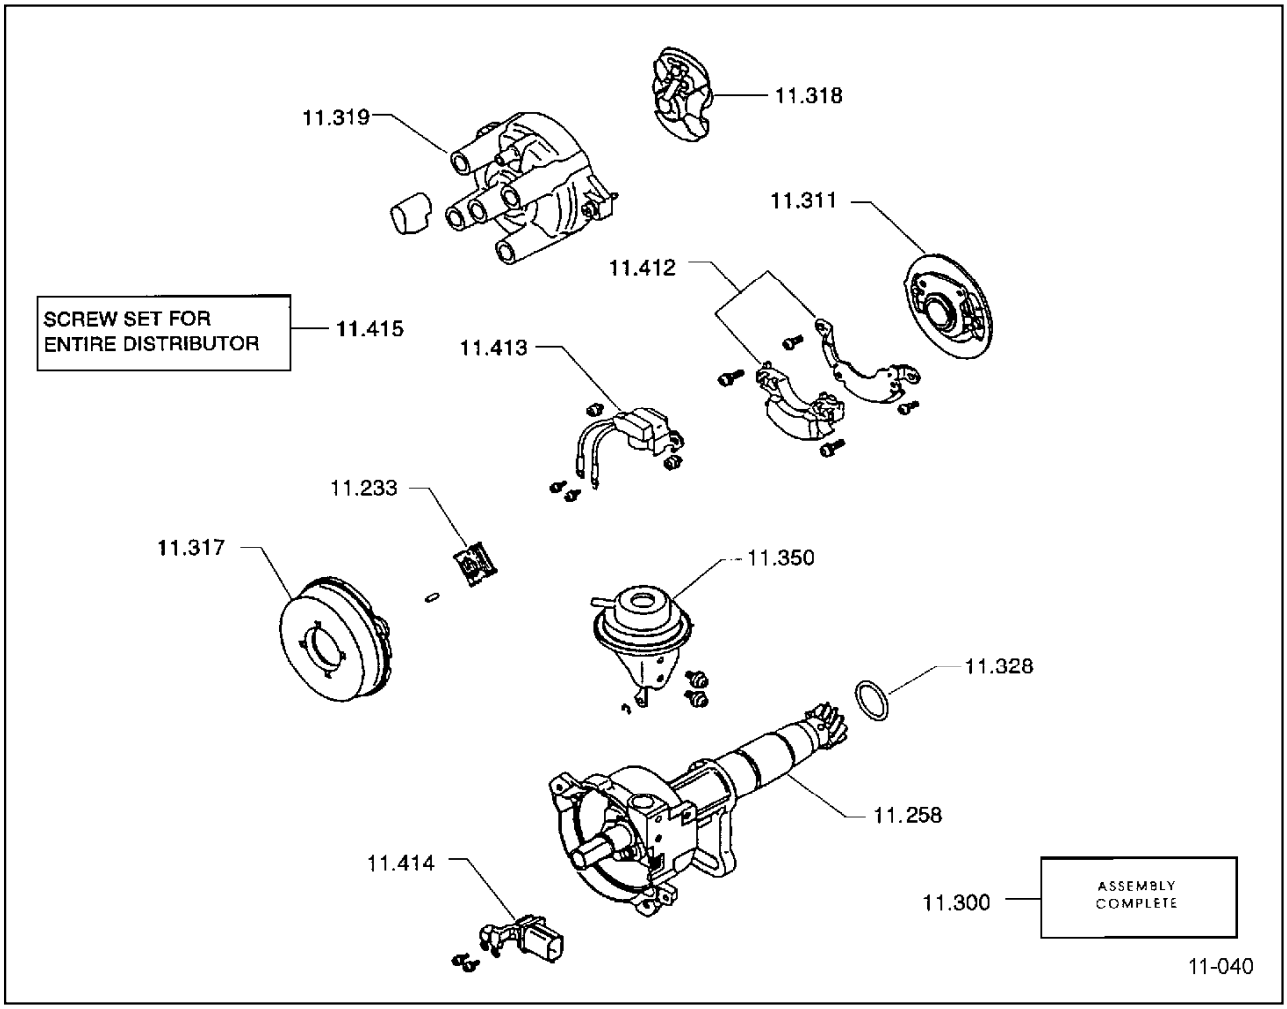

11.233 INDUCTOR, DISTRIBUTOR ELECTRONIC TIMER
인덕터

11.258 HOUSING, DISTRIBUTOR
하우징

11.300 DISTRIBUTOR ASSEMBLY
디스트리뷰터

11.311 PLATE, DISTRIBUTOR BREAKER
플레이트

11.317 COVER - GASKET - SEAL, DISTRIBUTOR HOUSING
커버

11.318 ROTOR, DISTRIBUTOR
로터

11.319 CAP, DISTRIBUTOR
캡

11.328 SEAL, DISTRIBUTOR HOUSING
시일

11.350 ASSEMBLY, DISTRIBUTOR VACUUM ADVANCE
진공어드밴스

www.truck-freeworkshop.com/clark/

11.412 IGNITER KIT, DISTRIBUTOR
시동킷

11.413 PICKUP KIT, DISTRIBUTOR
픽업킷

11.414 CONNECTOR KIT, DISTRIBUTOR
커넥터킷

11.415 SCREW SET, DISTRIBUTOR
스크류셋

www.truck-freeworkshop.com/clark/

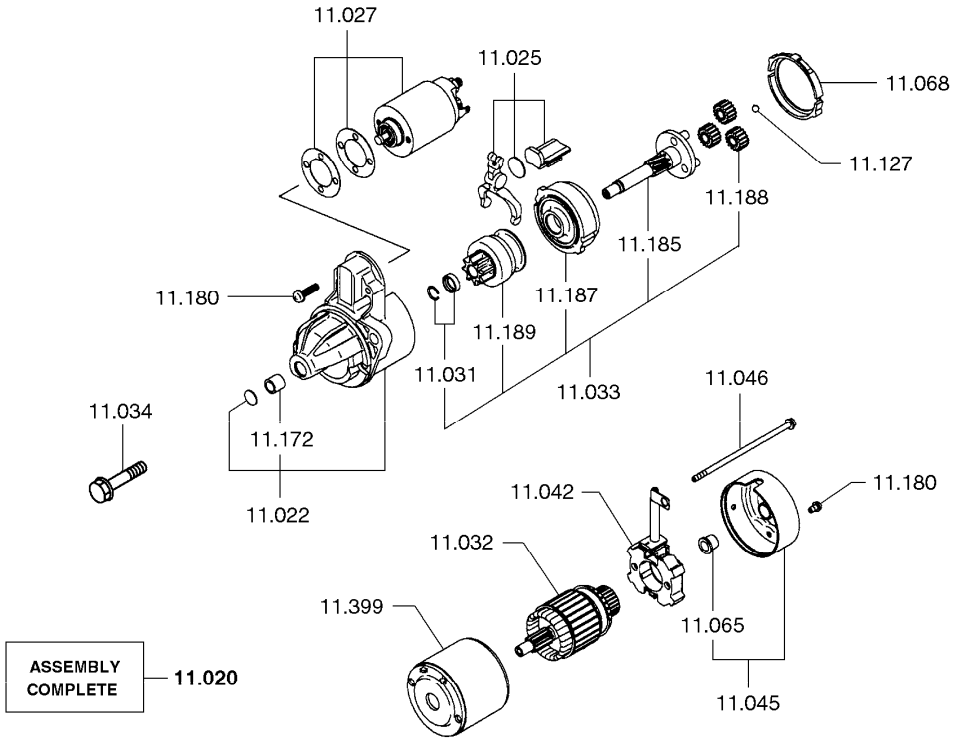

11.020 MOTOR ASSEMBLY, STARTING
모터

11.022 HOUSING & BUSHING, DRIVE END
하우징와부싱

11.025 LEVER, DRIVE SHIFT FORK
레버

11.027 SWITCH, SOLENOID
스위치

11.031 COLLAR, PINION STOP
칼라

11.032 ARMATURE, STARTING MOTOR
아마츄어

11.033 DRIVE ASSEMBLY, STARTING MOTOR
드라이브

11.034 FASTENER, STARTING MOTOR
패스너

11.042 BRUSH HOLDER & BRUSH (KIT)
브러쉬홀더

www.truck-freeworkshop.com/clark/

11.045	FRAME, COMMUTATOR END 프레임
11.046	FASTENER, THRU 패스너
11.065	BEARING, COMMUTATOR END FRAME 베어링
11.068	GASKET, STARTER MOTOR CENTER BEARING 가스켓
11.127	BALL, CRANKING MOTOR DRIVE 볼
11.172	BEARING, CRANKING MOTOR CENTER 베어링
11.180	KIT, CRANKING MOTOR ARMATURE SHAFT 킷
11.185	GEAR, PINION SHAFT DRIVE 기어
11.187	GEAR, STARTER REDUCTION INTERNAL 기어
11.188	GEAR, STARTER REDUCTION PINION 기어
11.189	CLUTCH, STARTER OVERRUNNING 클러치
11.399	HOUSING ASSEMBLY, CRANKING MOTOR 하우징

www.truck-freeworkshop.com/clark/

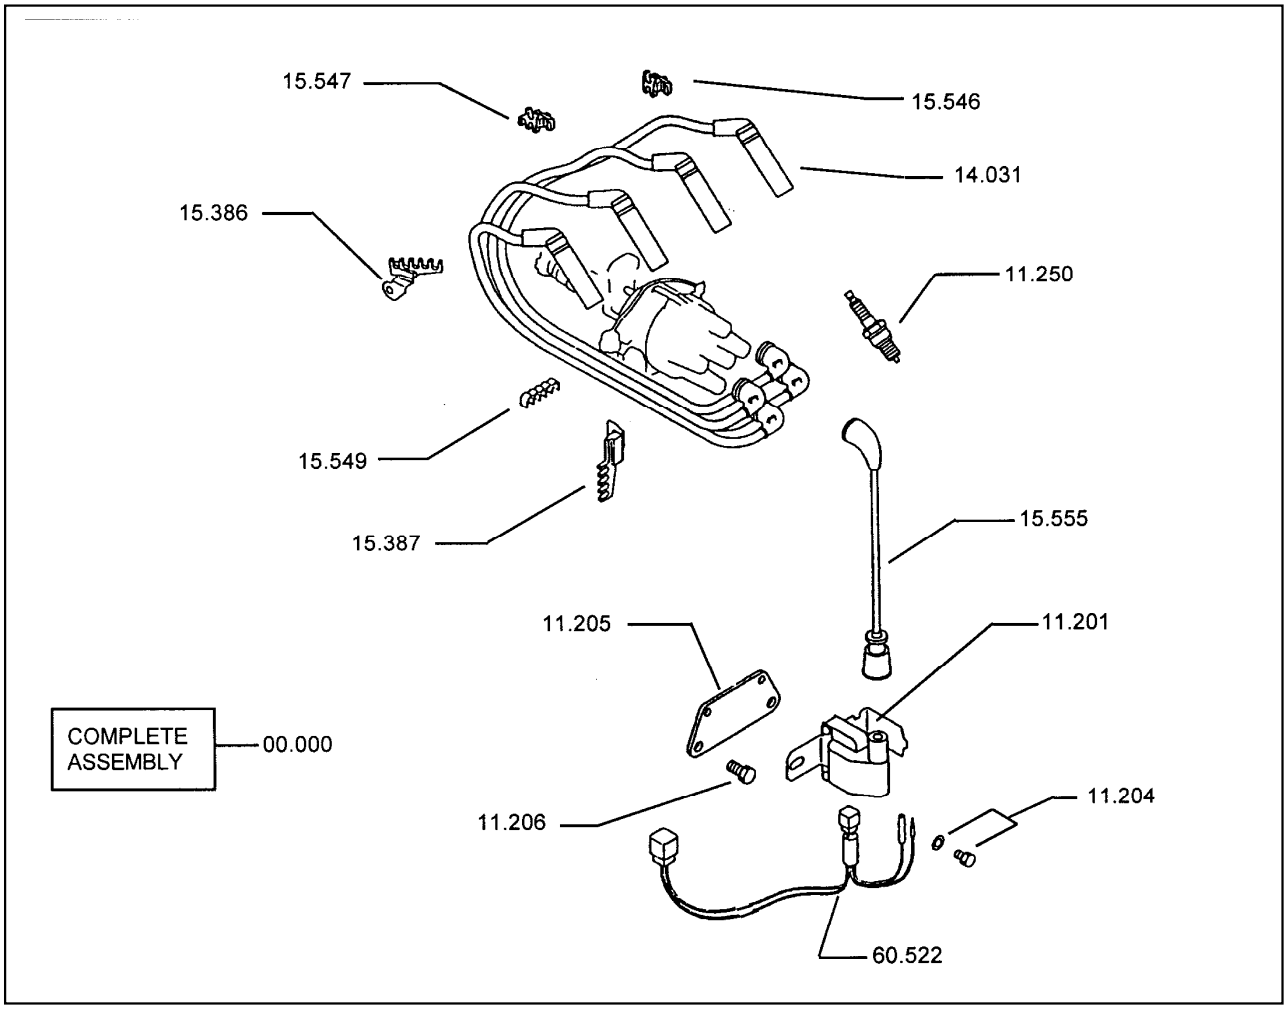

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
11.201	COIL, IGNITION 코일
11.204	FASTENER, COIL STRAP 패스너
11.205	BRACKET, COIL MOUNTING 브라켓
11.206	FASTENER, COIL MOUNTING BRACKET 패스너
11.250	SPARK PLUG 스파크
14.031	KIT, HIGH TENSION WIRES & BOOTS 킷
15.386	BRACKET, SPARK PLUG WIRES 브라켓
15.387	BRACKET, SPARK PLUG WIRES 브라켓

www.truck-freeworkshop.com/clark/

15.546	SUPPORT, SPARK PLUG WIRES 서포트
15.547	SUPPORT, SPARK PLUG WIRES 서포트
15.549	SUPPORT, SPARK PLUG WIRES 서포트
15.555	WIRE, IGNITION LEAD 와이어
60.522	HARNESS, COIL TO DISTRIBUTOR 하네스

www.truck-freeworkshop.com/clark/

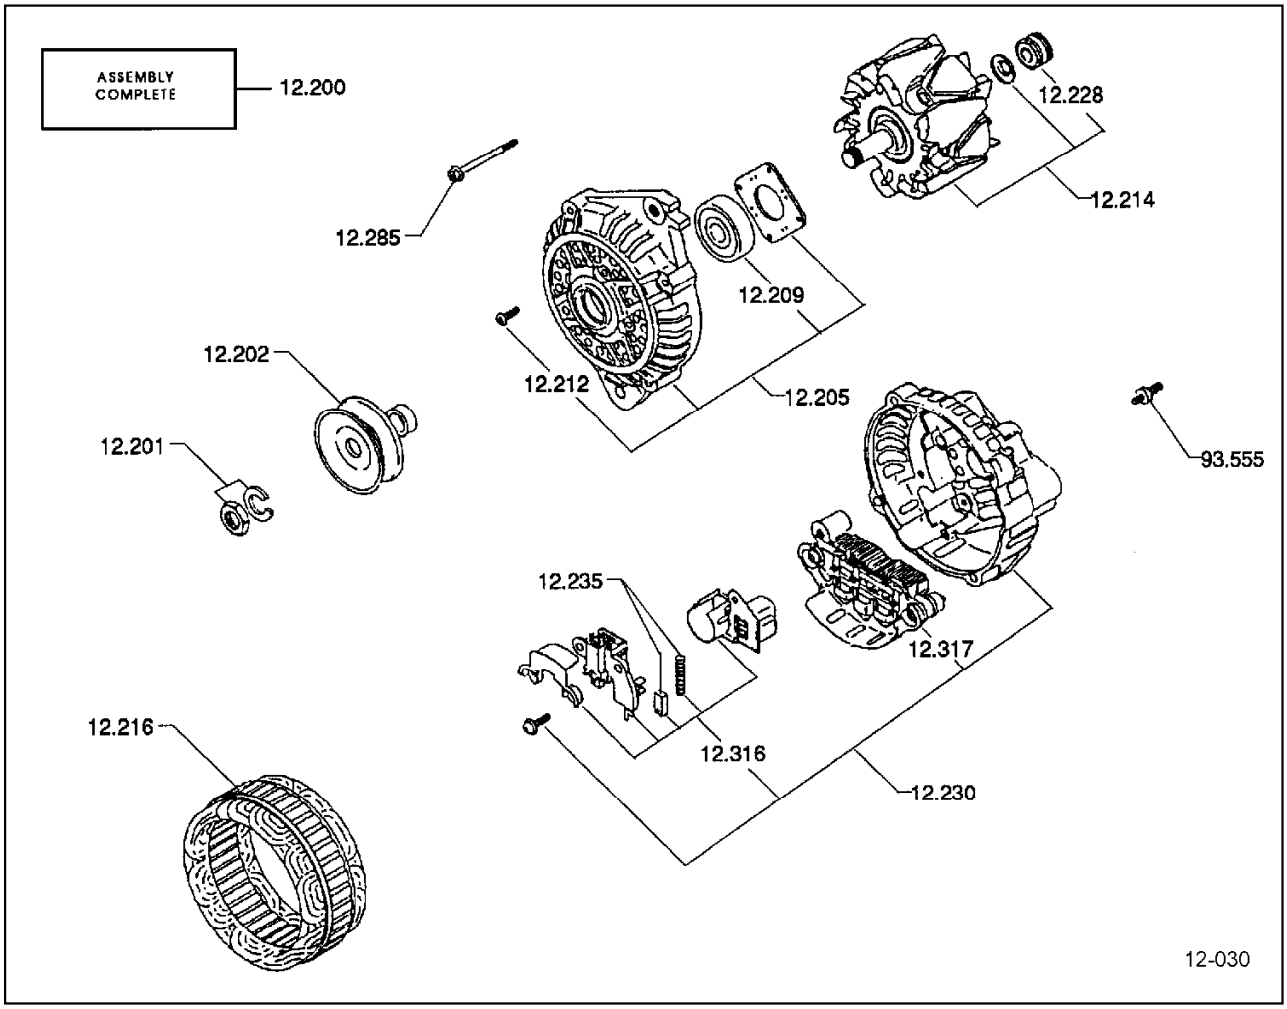

12.200	ALTERNATOR ASSEMBLY 알터네이터
12.201	FASTENER, ALTERNATOR PULLEY TO SHAFT 패스너
12.202	PULLEY, ALTERNATOR 풀리
12.205	FRAME, ALTERNATOR DRIVE END 프레임
12.209	BEARING, ALTERNATOR DRIVE END 베어링
12.212	FASTENER, ALTERNATOR DRIVE END BEARING RETAINER PL 패스너
12.214	ROTOR ASSEMBLY, ALTERNATOR 로터
12.216	STATOR ASSEMBLY, ALTERNATOR 스테이터
12.228	BEARING, ALTERNATOR SLIP RING FRAME END 베어링

www.truck-freeworkshop.com/clark/

12.230	FRAME, ALTERNATOR SLIP RING END 프레임
12.235	BRUSH KIT, ALTERNATOR 브러쉬킷
12.285	FASTENER, THROUGH 패스너
12.316	REGULATOR, ALTERNATOR VOLTAGE OUTPUT 레귤레이터
12.317	RECTIFIER ASSEMBLY, ALTERNATOR 정류기
93.555	FASTENER, ALTERNATOR RECTIFIER HOUSING COVER 패스너

www.truck-freeworkshop.com/clark/

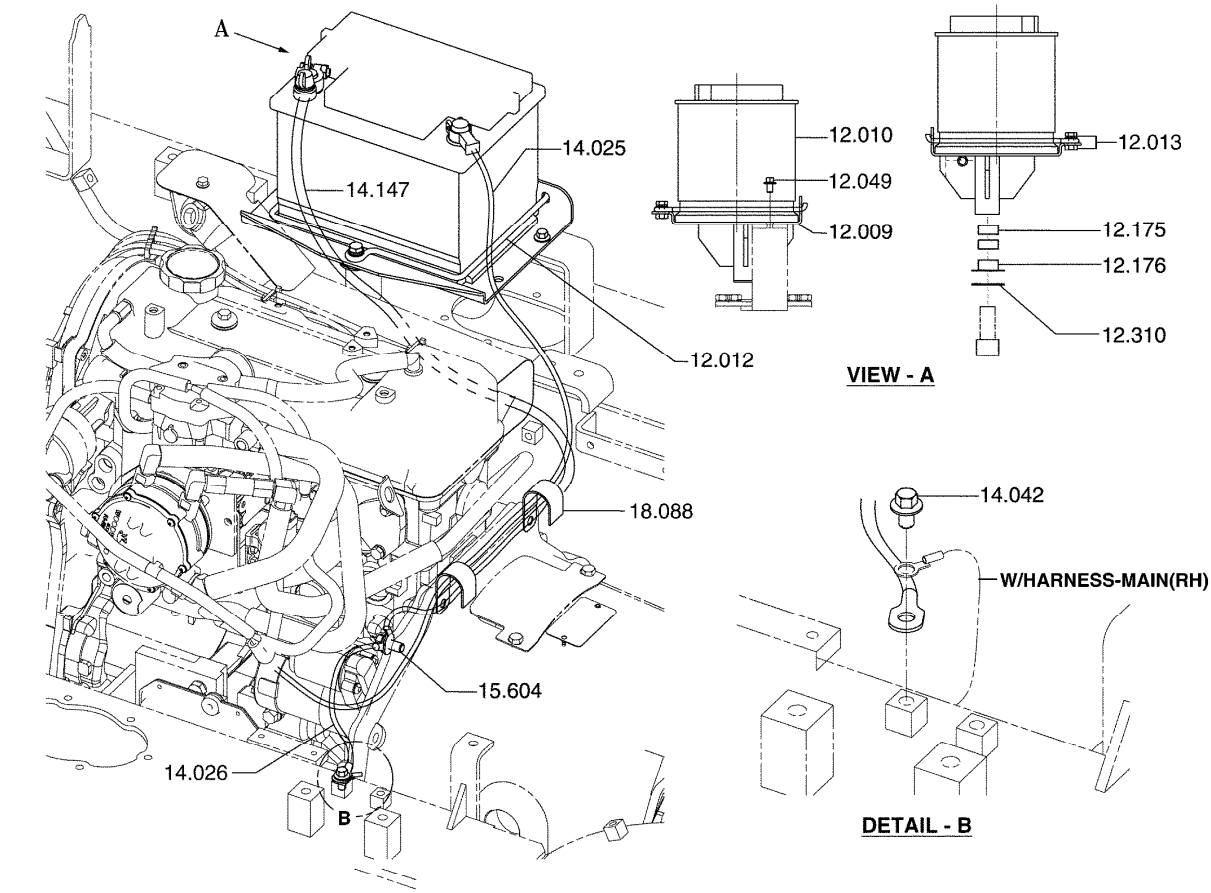

12.009 SUPPORT, BATTERY
서포트

12.010 BATTERY
배터리

12.012 STUD, BATTERY HOLD DOWN
스터드

12.013 FASTENER, BATTERY HOLD DOWN (AT CLAMP)
패스너

12.049 FASTENER, BATTERY SUPPORT
패스너

12.175 BUSHING, BATTERY SUPPORT PIVOT POST
부싱

12.176 BEARING, BATTERY SUPPORT PIVOT POST
베어링

12.310 SPACER, BATTERY COMPARTMENT
스페이서

14.025 CABLE, BATTERY TO STARTER
케이블

www.truck-freeworkshop.com/clark/

14.026	CABLE, BATTERY GROUND 케이블
14.042	FASTENER, BATTERY GROUND CABLE 패스너
14.147	CABLE, BATTERY NEGATIVE 케이블
15.604	FASTENER, BATTERY NEGATIVE CABLE 패스너
18.088	CLAMP, BATTERY CABLE 클램프

www.truck-freeworkshop.com/clark/

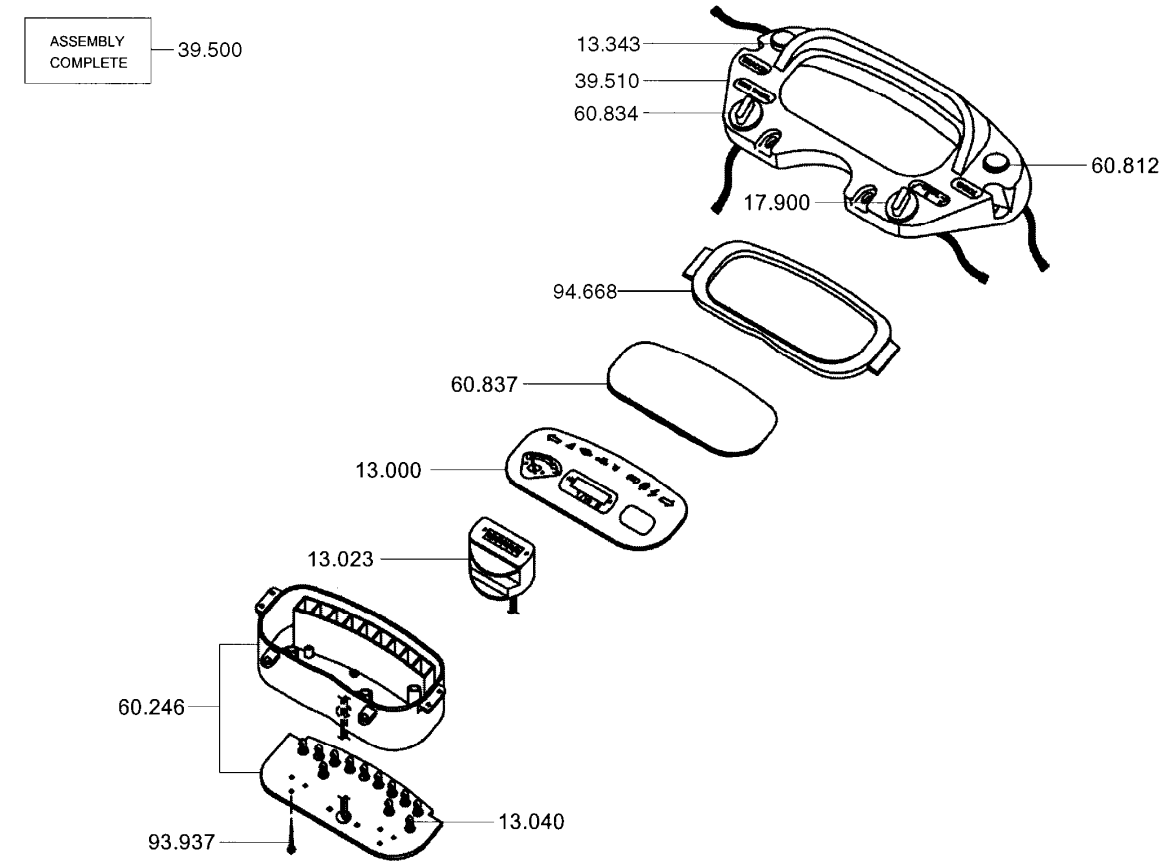

INSTRUMENT PANEL **13-035**

13.000	PANEL, INSTRUMENT CLUSTER 판넬
13.023	METER, TRUCK HOUR 미터
13.040	BULB, PANEL LIGHT 전구
13.343	SWITCH, WARNING LIGHT/PREHEAT 스위치
17.900	SWITCH, DIRECTION CONTROL 스위치
39.500	PANEL, INSTRUMENT 판넬
39.510	HOUSING, INSTRUMENT PANEL 하우징
60.246	HOUSING, PANEL GAUGE CLUSTER 하우징
60.812	SWITCH, DASH PANEL ON-OFF 스위치

www.truck-freeworkshop.com/clark/

60.834 SWITCH, CLUSTER AUTO MANUAL
스위치

60.837 GLASS, CLUSTER WINDOW
글래스

93.937 FASTENER, PANEL GAUGE CLUSTER LENS
패스너

94.668 RETAINER, INSTRUMENT PANEL SIGNAL CLUSTER
리테이너

www.truck-freeworkshop.com/clark/

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

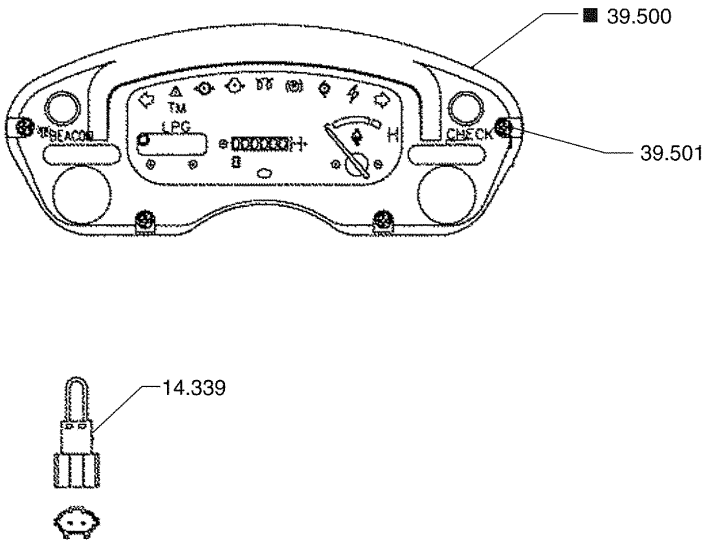

CLUSTER GROUP **13-238**

14.339	WIRE, ELECTRICAL INSTALLATION 와이어
39.500	PANEL, INSTRUMENT 판넬
39.501	FASTENER, INSTRUMENT PANEL 패스너

www.truck-freeworkshop.com/clark/

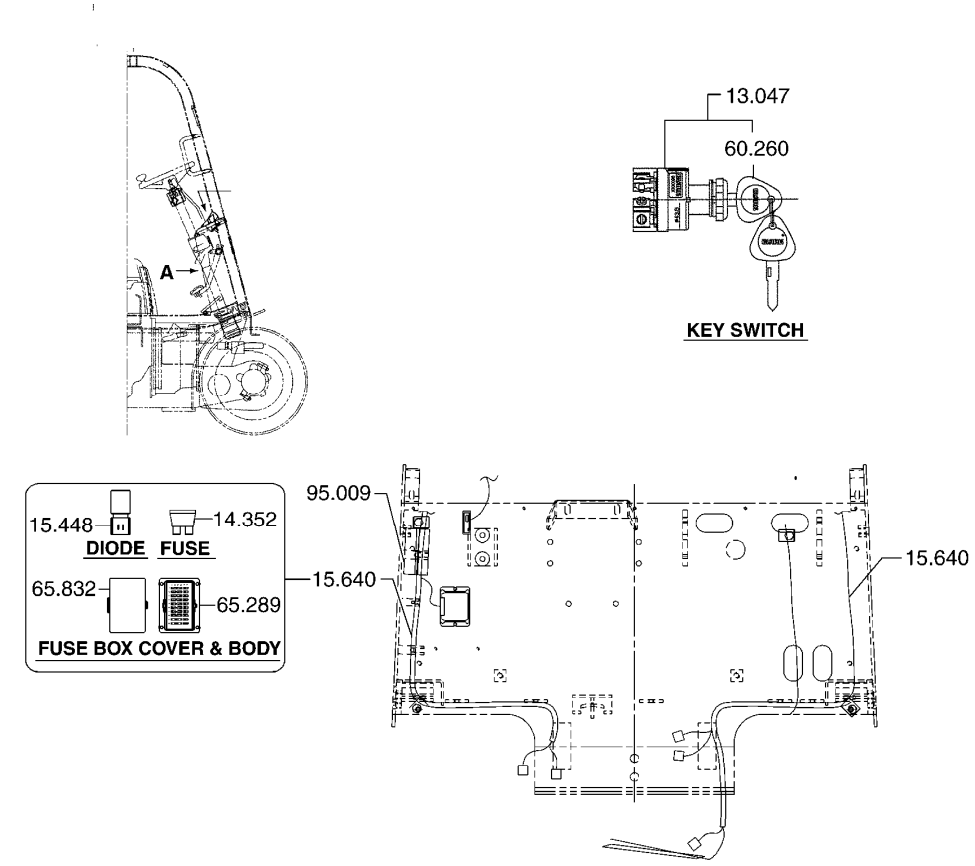

KEY SWITCH GROUP **13-240**

13.047	SWITCH, CIRCUIT LOCKING 스위치
14.352	FUSE, CONTROL CIRCUIT 퓨즈
15.448	DIODE, HARNESS 다이오드
15.640	WIRING HARNESS, MACHINE COWL 와이어하네스
60.260	KEY, CIRCUIT LOCKING SWITCH 키
65.289	BODY, FUSE BOX *
65.832	COVER, FUSE BOX 커버
95.009	FASTENER, FUSE BOX MOUNTING 패스너

www.truck-freeworkshop.com/clark/

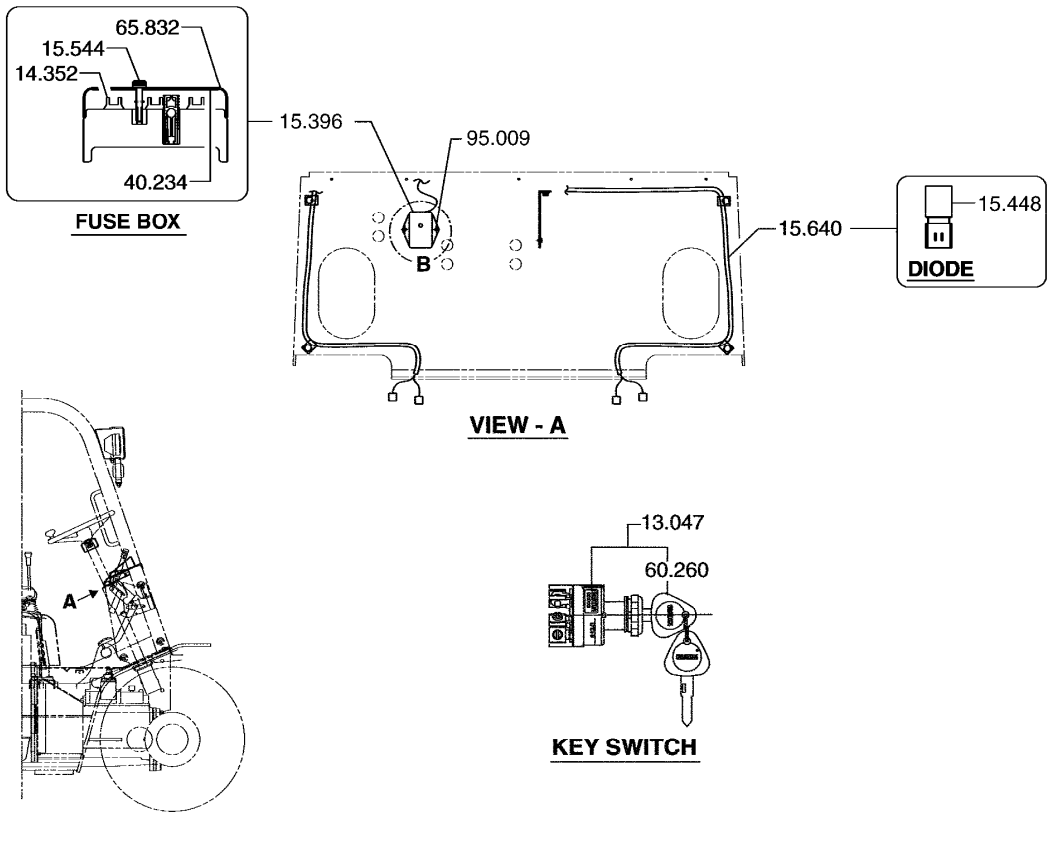

KEY SWITCH GROUP **13-359**

13.047	SWITCH, CIRCUIT LOCKING 스위치
14.352	FUSE, CONTROL CIRCUIT 퓨즈
15.396	BOX, FUSE MOUNTING 박스
15.448	DIODE, HARNESS 다이오드
15.544	FASTENER, FUSE BOX COVER 패스너
15.640	WIRING HARNESS, MACHINE COWL 와이어하네스
40.234	DECAL, FUSE 데칼
60.260	KEY, CIRCUIT LOCKING SWITCH 키
65.832	COVER, FUSE BOX 커버

www.truck-freeworkshop.com/clark/

95.009 FASTENER, FUSE BOX MOUNTING
패스너

www.truck-freeworkshop.com/clark/

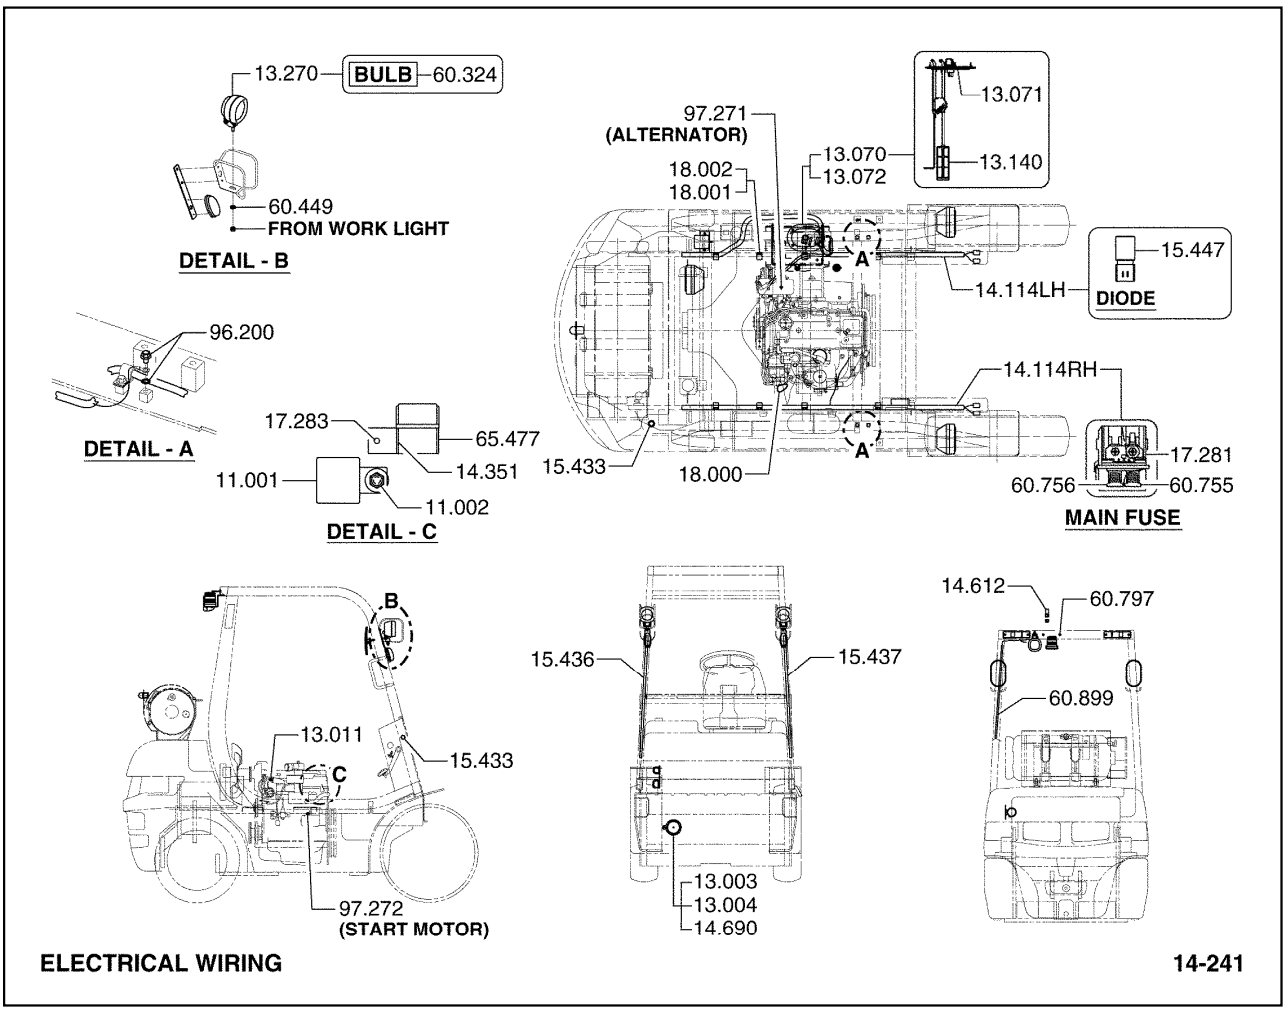

11.001	RELAY, STARTER 릴레이	15.436	HARNESS, RH HEADLAMP WIRING 하네스
11.002	FASTENER, STARTER RELAY 패스너	15.437	HARNESS, HEADLAMP WIRING 하네스
13.003	HORN 혼	15.447	DIODE, HARNESS 다이오드
13.004	FASTENER, HORN MOUNTING BRACKET 패스너	17.281	BLOCK, MAIN FUSE 블록
13.011	CONTROL, ENGINE TEMPERATURE INDICATOR 컨트롤	17.283	FASTENER, MAIN FUSE BLOCK 패스너
13.070	SENDER, FUEL GAUGE 센더	18.000	CLIP, WIRING HARNESS 클립
13.071	GASKET, FUEL GAUGE SENDER 가스켓	18.001	FASTENER, WIRING HARNESS CLIP 패스너
13.072	FASTENER, FUEL GAUGE SENDER 패스너	18.002	CLIP, WIRING HARNESS 클립
13.140	STRAINER, FUEL GAGE SENDER *	60.324	BULB, HEADLAMP 전구
13.270	HEADLAMP, ADJUSTABLE 헤드램프	60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
14.114	HARNESS, MACHINE WIRING 하네스	60.755	FUSE, WIRING HARNESS 40AMP 퓨즈
14.351	BRACKET, CONTROL CIRCUIT FUSE HOLDER 브라켓	60.756	FUSE, WIRING HARNESS 60AMP 퓨즈
14.612	CONNECTOR, WARNING LIGHT WIRE 커넥터	60.797	GROMMET, REAR ACCESSORY WIRE 그롱멧
14.690	WIRE, HORN FILTER 와이어	60.899	WIRING HARNESS, REAR ACCESSORY 욱J潔紂電膠
15.433	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧	65.477	BRACKET, POWER FUSE MOUNTING 브라켓

www.truck-freeworkshop.com/clark/

96.200	FASTENER, WIRING HARNESS GROUND 패스너	
97.271	FASTENER, CABLE & WIRE TO ALTERNATOR *	
97.272	FASTENER, CABLE & WIRE TO STARTER *	

www.truck-freeworkshop.com/clark/

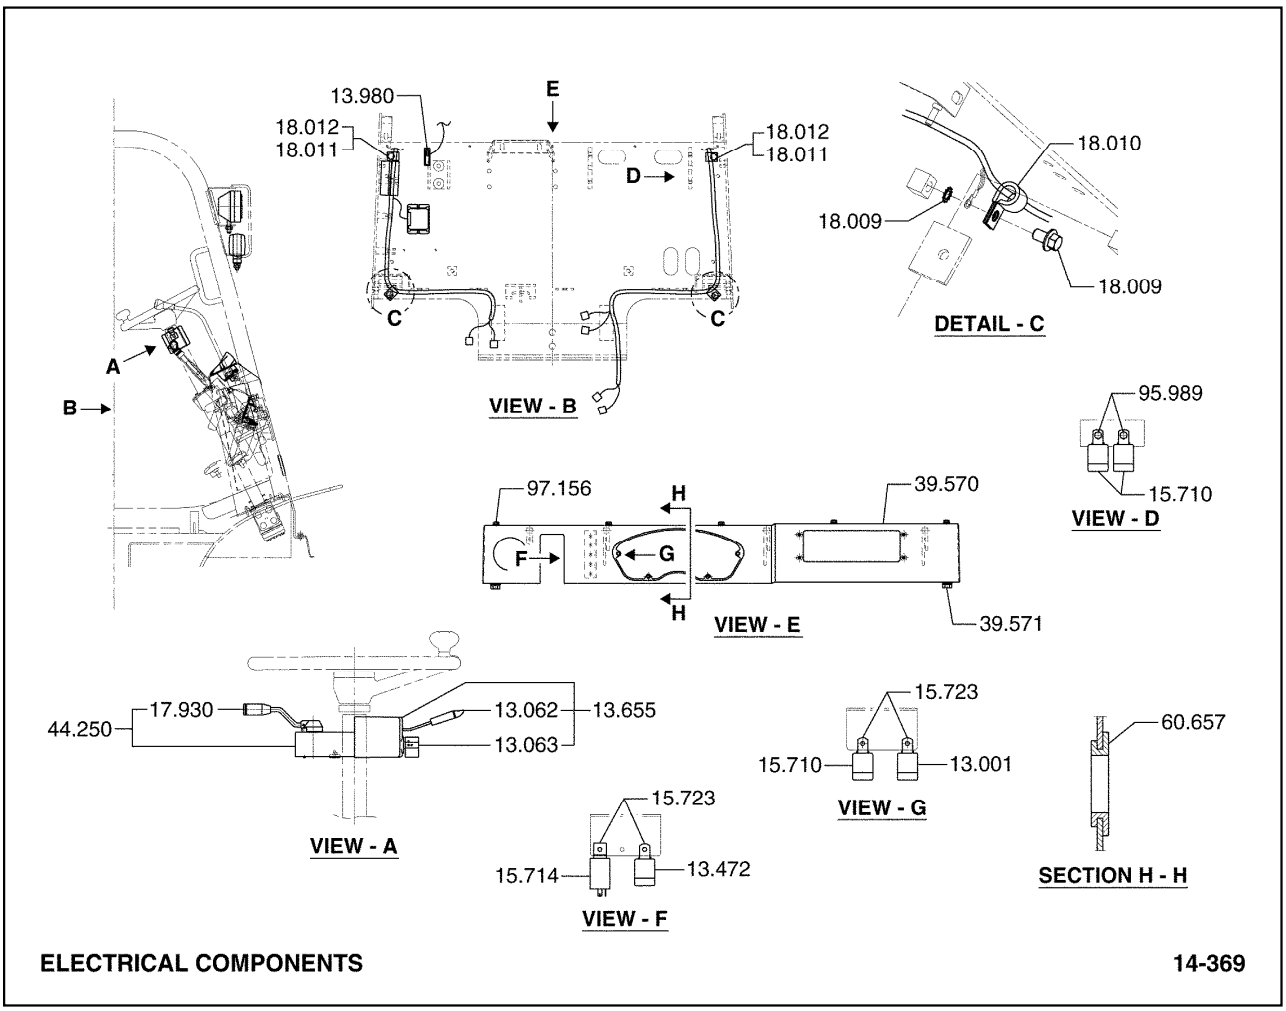

13.001 RELAY, HORN
릴레이

13.062 SWITCH, LIGHT
스위치

13.063 KNOB, LIGHT SWITCH
노브

13.472 RELAY, MAIN POWER
*

13.655 SWITCH, TURN INDICATOR
스위치

13.980 SWITCH, PARK/SAFETY INTERLOCK
스위치

15.710 RELAY, ELECTRICAL
릴레이

15.714 FLASHER, UNIT
플래셔

15.723 FASTENER, ELECTRICAL RELAY
패스너

www.truck-freeworkshop.com/clark/

17.930	KNOB, FORWARD & REVERSE LEVER 노브
18.009	FASTENER, HARNESS CLIP 패스너
18.010	CLIP, HARNESS 클립
18.011	FASTENER, HARNESS CLIP 패스너
18.012	CLIP, WIRE HARNESS 클립
39.570	COVER ASSEMBLY, DASH 커버
39.571	FASTENER, DASH COVER 패스너
44.250	DIRECTIONAL CONTROL ASSEMBLY 방향컨트롤
60.657	SEAL, INSTRUMENT PANEL 시일
95.989	FASTENER, RELAY MOUNTING 패스너
97.156	FASTENER, DASH COVER 패스너

www.truck-freeworkshop.com/clark/

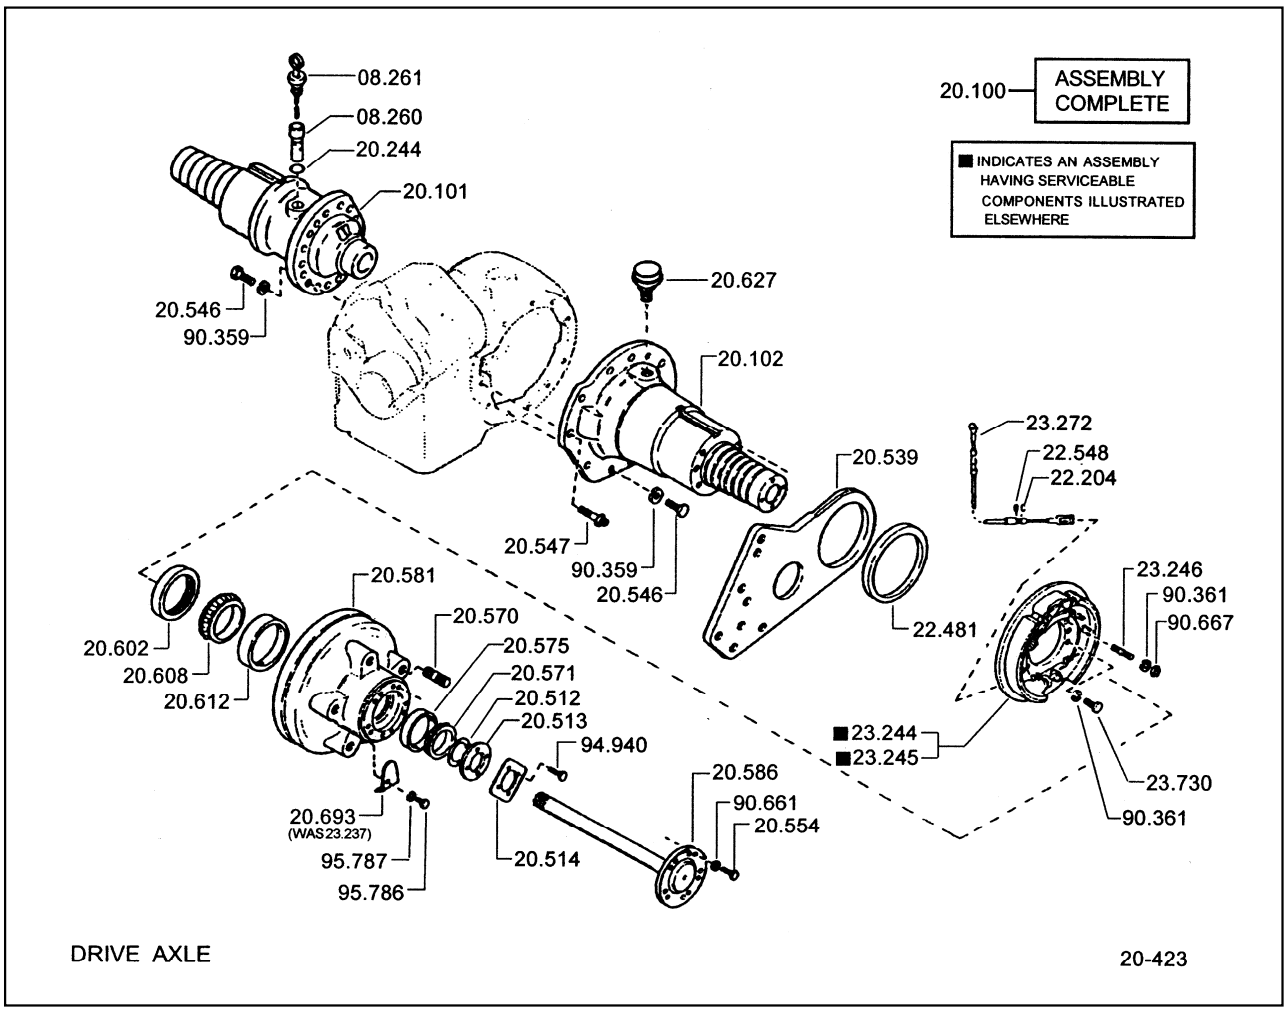

08.260	TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT 튜브
08.261	DIPSTICK, TRANSMISSION OIL LEVEL 딥스틱
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
20.101	HOUSING, TRANSAXLE WHEEL END - LH 하우징
20.102	HOUSING, TRANSAXLE WHEEL END - RH 하우징
20.244	SEAL, DIFFERENTIAL OIL LEVEL DIPSTICK SUPPORT 시일
20.512	SHIM, DRIVE AXLE HUB BEARING 심
20.513	RETAINER, DRIVE AXLE HUB BEARING 리테이너
20.514	LOCKPLATE, DRIVE AXLE HUB BEARING RETAINER 로크플레이트
20.539	SUPPORT, DRIVE AXLE SPINDLE (RH) 서포트
20.546	FASTENER, DRIVE AXLE END 패스너
20.547	FASTENER, DRIVE AXLE END 패스너
20.554	FASTENER, DRIVE AXLE HUB CAP 패스너
20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너
20.571	CONE, DRIVE AXLE HUB OUTER BEARING 콘
20.575	CUP, DRIVE AXLE HUB OUTER BEARING 컵
20.581	HUB ASSEMBLY, DRIVE AXLE 허브
20.586	SHAFT, DRIVE AXLE 샤프트
20.602	SEAL, DRIVE AXLE HUB INNER OIL 시일
20.608	CONE, DRIVE AXLE HUB INNER BEARING 콘
20.612	CUP, DRIVE AXLE HUB INNER BEARING 컵
20.627	VENT, DIFFERENTIAL & AXLE 벤트
20.693	COVER, BRAKE ADJUSTER 커버
22.204	CLIP, BRAKE CABLE 클립
22.481	SPACER, WHEEL BRAKE ASSEMBLY 스페이서
22.548	SEAL, PARKING BRAKE CABLE 시일
23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
23.246	FASTENER, BRAKE ASSEMBLY 패스너
23.272	CABLE, PARKING BRAKE 케이블

www.truck-freeworkshop.com/clark/

23.730	FASTENER, BRAKE ASSEMBLY 패스너
90.359	LOCKWASHER, DRIVE AXLE END FASTENER 로크와셔
90.361	LOCKWASHER, BRAKE ASSEMBLY FASTENER 로크와셔
90.661	LOCKWASHER, DRIVE AXLE HUB CAP FASTENER 로크와셔
90.667	NUT, WHEEL BRAKE ASSEMBLY FASTENER 너트
94.940	FASTENER, DRIVE AXLE HUB BEARING RETAINER 패스너
95.786	FASTENER, BRAKE ADJUSTOR ACCESS HOLE COVER 패스너
95.787	LOCKWASHER, BRAKE ADJUSTOR ACCESS HOLE COVER FAS 로크와셔

www.truck-freeworkshop.com/clark/

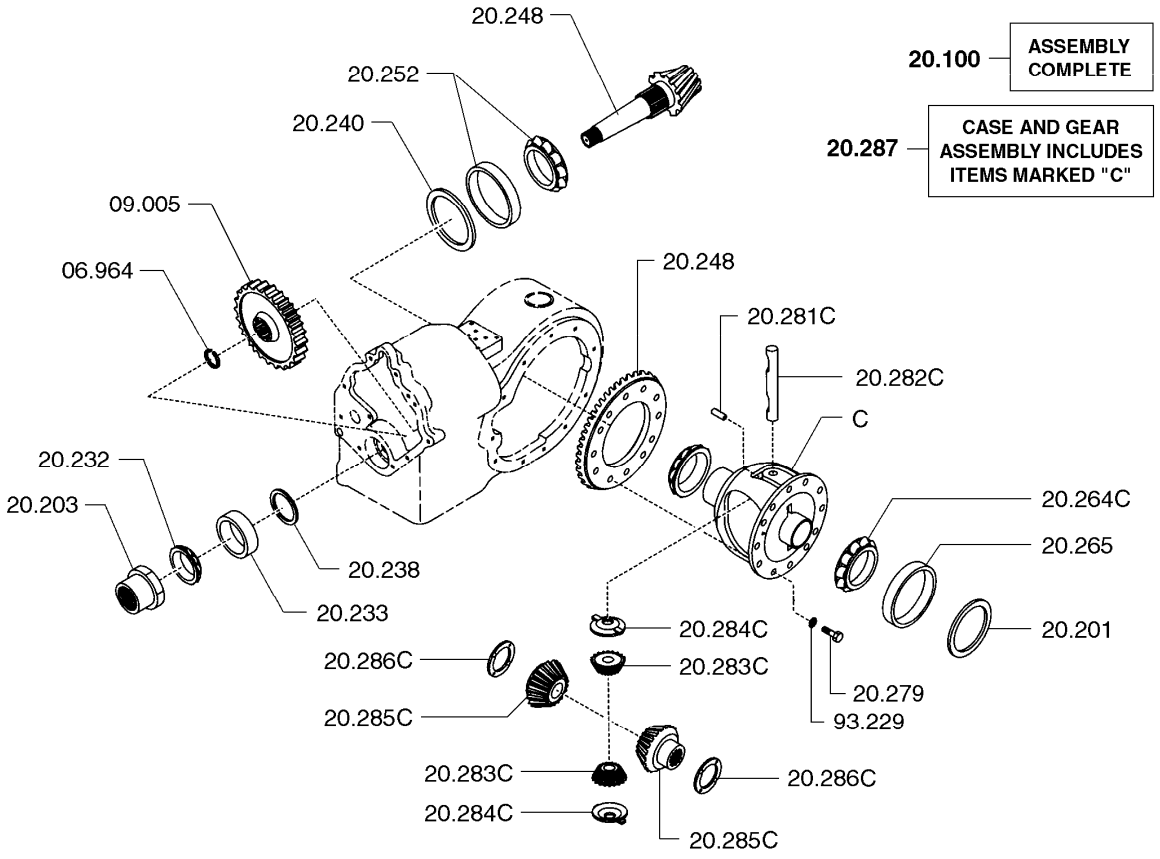

06.964 RING, OUTPUT SHAFT GEAR LOCATING
링

09.005 GEAR, OUTPUT
기어

20.100 TRANSAXLE ASSEMBLY
트랜스액슬

20.201 SHIM, DIFF BRG CARRIER TO AXLE HOUSING
심

20.203 NUT, DIFFERENTIAL PINION COMPANION FLANGE
너트

20.232 CONE, DIFFERENTIAL PINION OUTER BEARING
콘

20.233 CUP, DIFFERENTIAL PINION OUTER BEARING
컵

20.238 SHIM KIT, DIFFERENTIAL PINION BEARING CAGE
심

20.240 SPACER, DIFFERENTIAL PINION BEARING
스페이서

www.truck-freeworkshop.com/clark/

20.248	RING GEAR & PINION SET, DIFFERENTIAL 링
20.252	BEARING, DIFFERENTIAL PINION INNER 베어링
20.264	CONE, DIFFERENTIAL BEARING 콘
20.265	CUP, DIFFERENTIAL BEARING 컵
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너
20.281	FASTENER, DIFF SIDE PINION PIN 패스너
20.282	SPIDER, DIFFERENTIAL PINION 스파이더
20.283	GEAR, DIFFERENTIAL SIDE PINION 기어
20.284	WASHER, DIFF SIDE PINION GEAR THRUST 와셔
20.285	GEAR, DIFFERENTIAL SIDE 기어
20.286	WASHER, DIFFERENTIAL SIDE GEAR THRUST 와셔
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스와기어
93.229	WASHER, DIFFERENTIAL CASE TO RING GEAR FASTENER 와셔

www.truck-freeworkshop.com/clark/

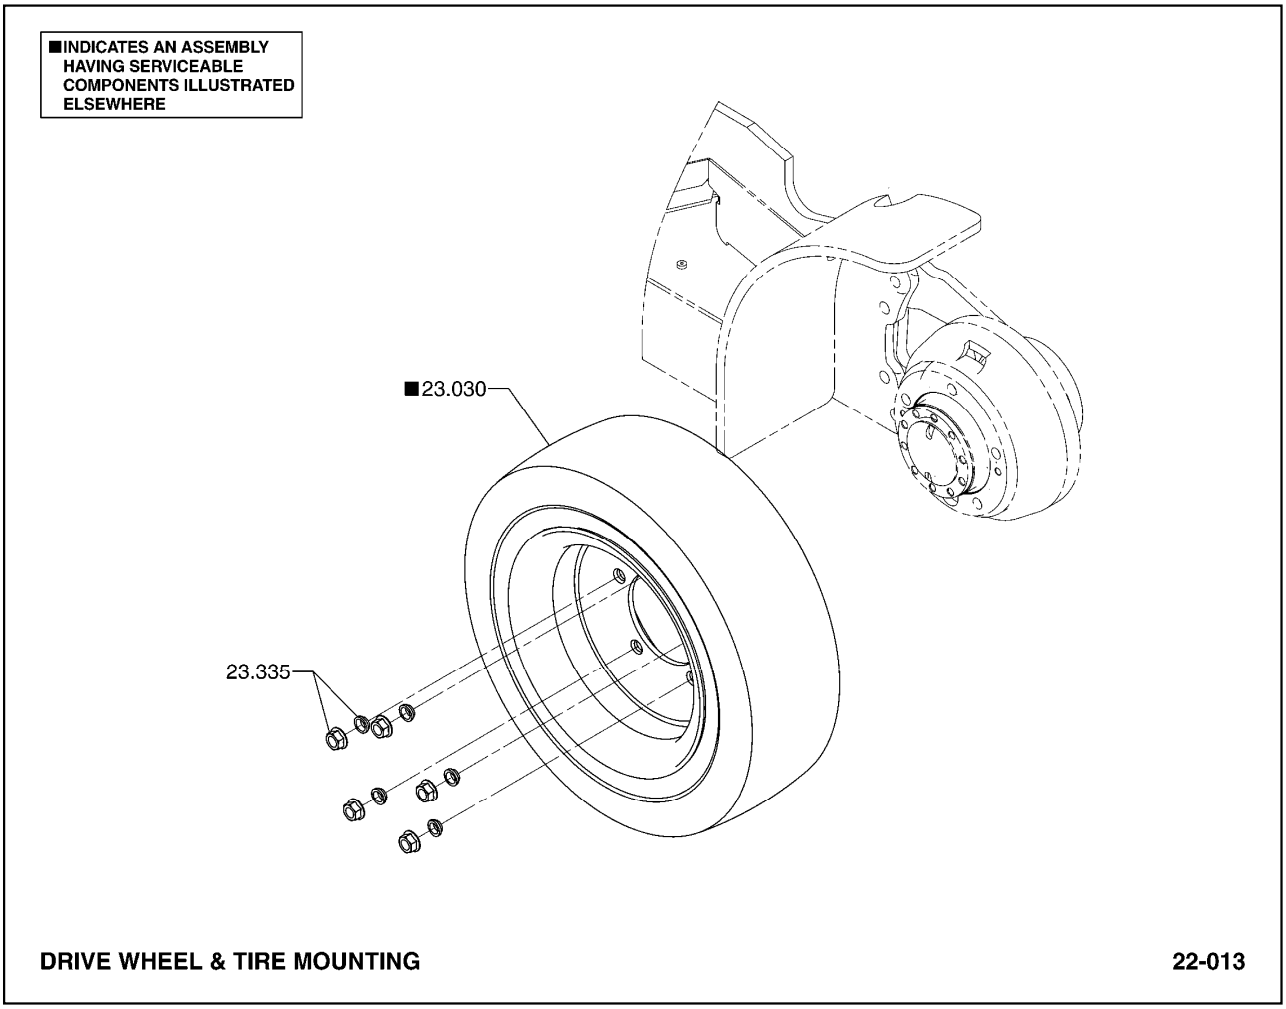

23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠타이어
23.335	FASTENER, DRIVE WHEEL 패스너

www.truck-freeworkshop.com/clark/

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

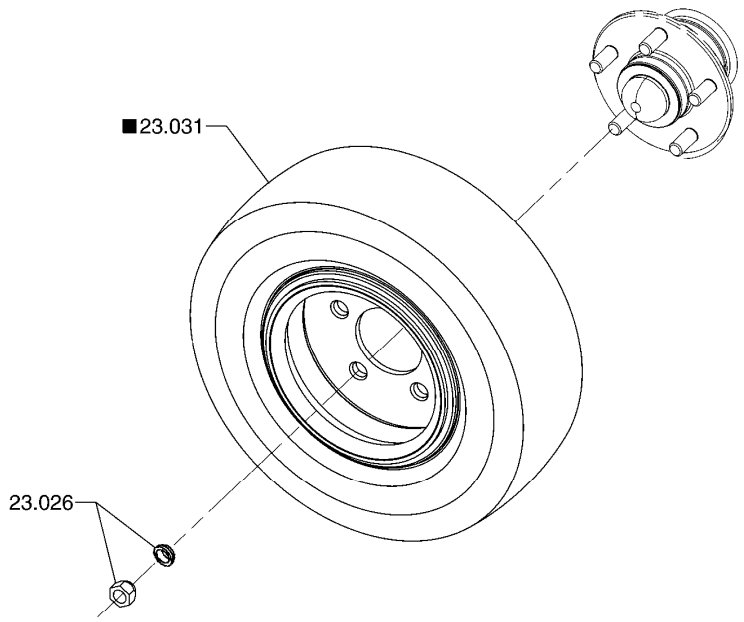

STEER WHEEL & TIRE MOUNTING 22-014

23.026 FASTENER, STEER WHEEL
패스너

23.031 STEER WHEEL AND TIRE ASSEMBLY
휠

www.truck-freeworkshop.com/clark/

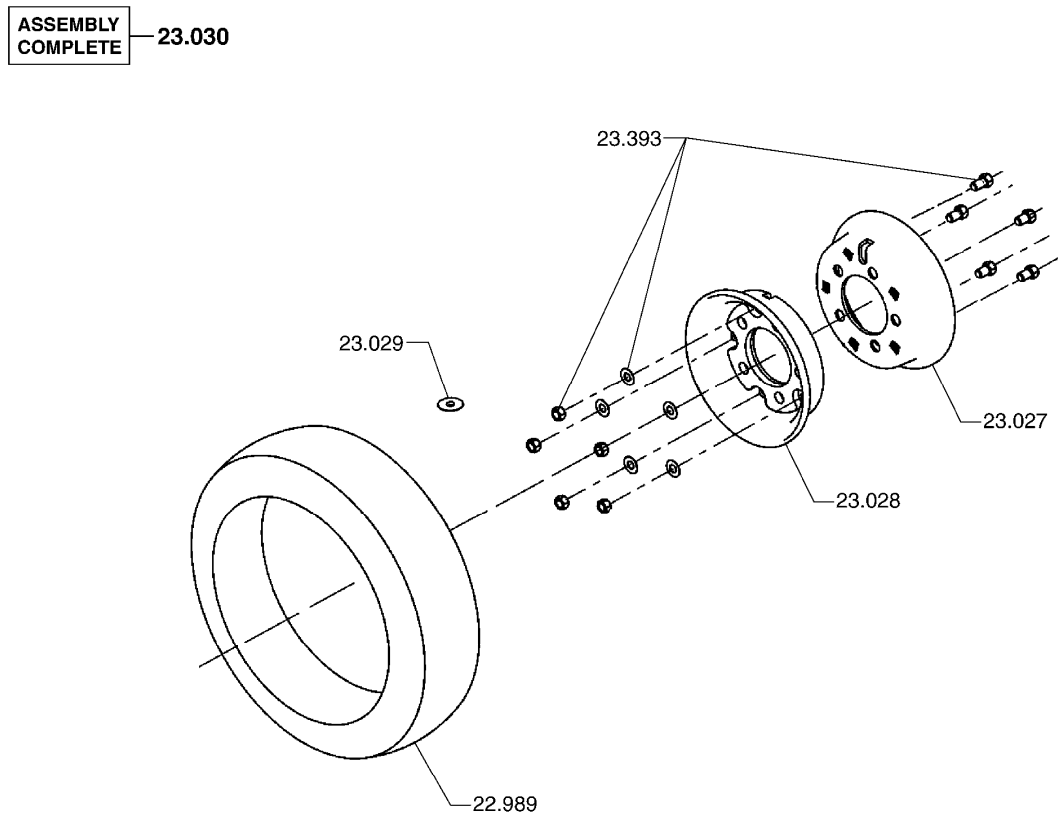

22.989	TIRE ASSEMBLY, DRIVE *
23.027	OUTER HALF, DRIVE WHEEL 아웃하프
23.028	INNER HALF, DRIVE WHEEL 인너하프
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠타이어
23.393	FASTENER, DRIVE WHEEL 패스너

www.truck-freeworkshop.com/clark/

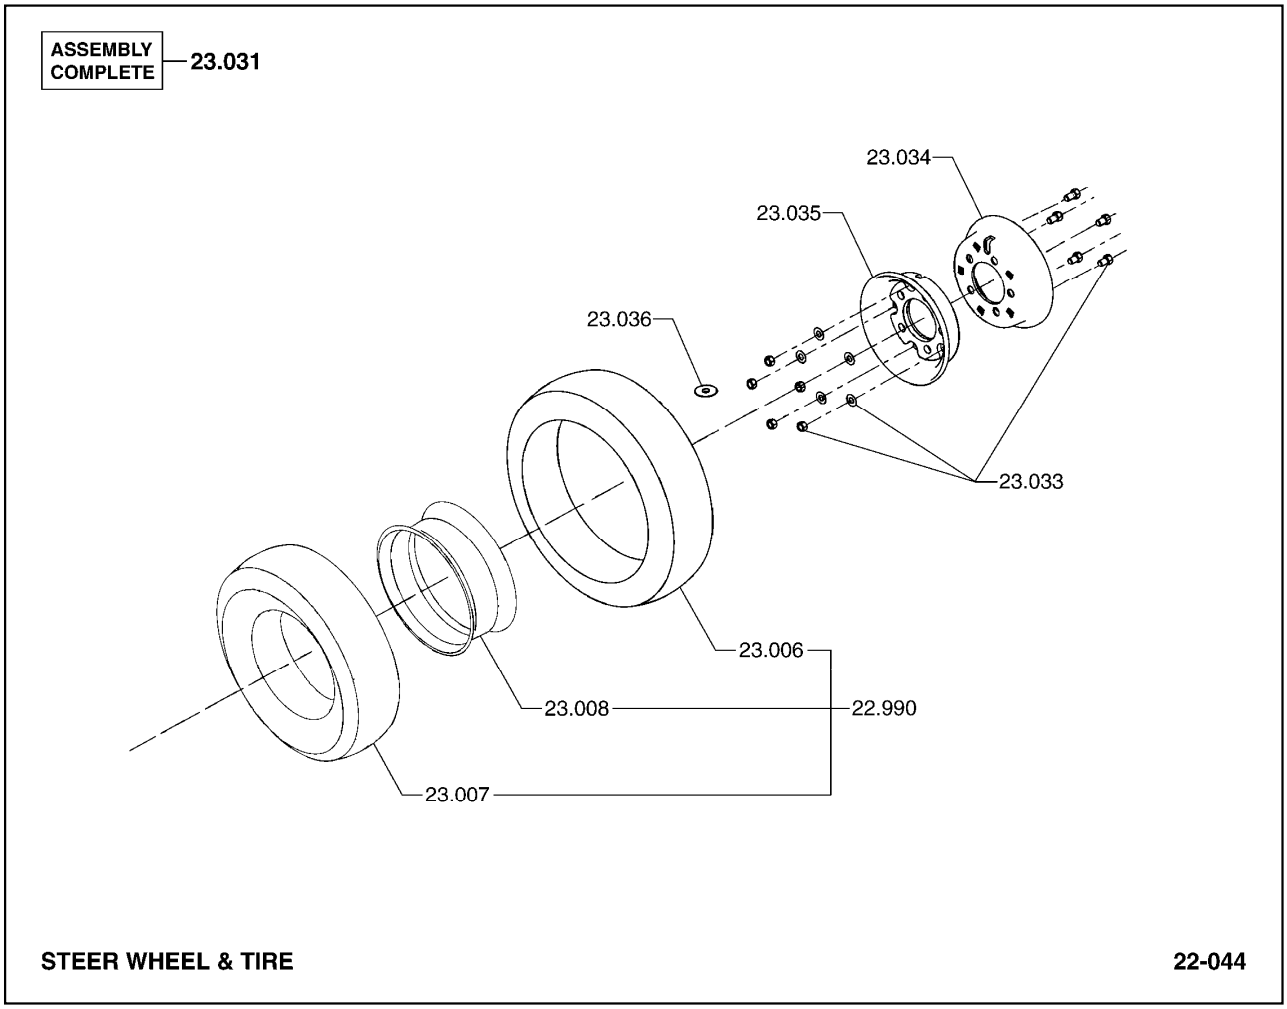

22.990	TIRE ASSEMBLY, STEER *
23.006	TIRE, STEER WHEEL 타이어
23.007	TUBE, STEER WHEEL 튜브
23.008	FLAP, STEER WHEEL 플랩
23.031	STEER WHEEL AND TIRE ASSEMBLY 휠
23.033	FASTENER, STEER WHEEL 패스너
23.034	OUTER HALF, STEER WHEEL 아웃하프
23.035	INNER HALF, STEER WHEEL 인너하프
23.036	FASTENER, STEER WHEEL ASSEMBLY 패스너

www.truck-freeworkshop.com/clark/

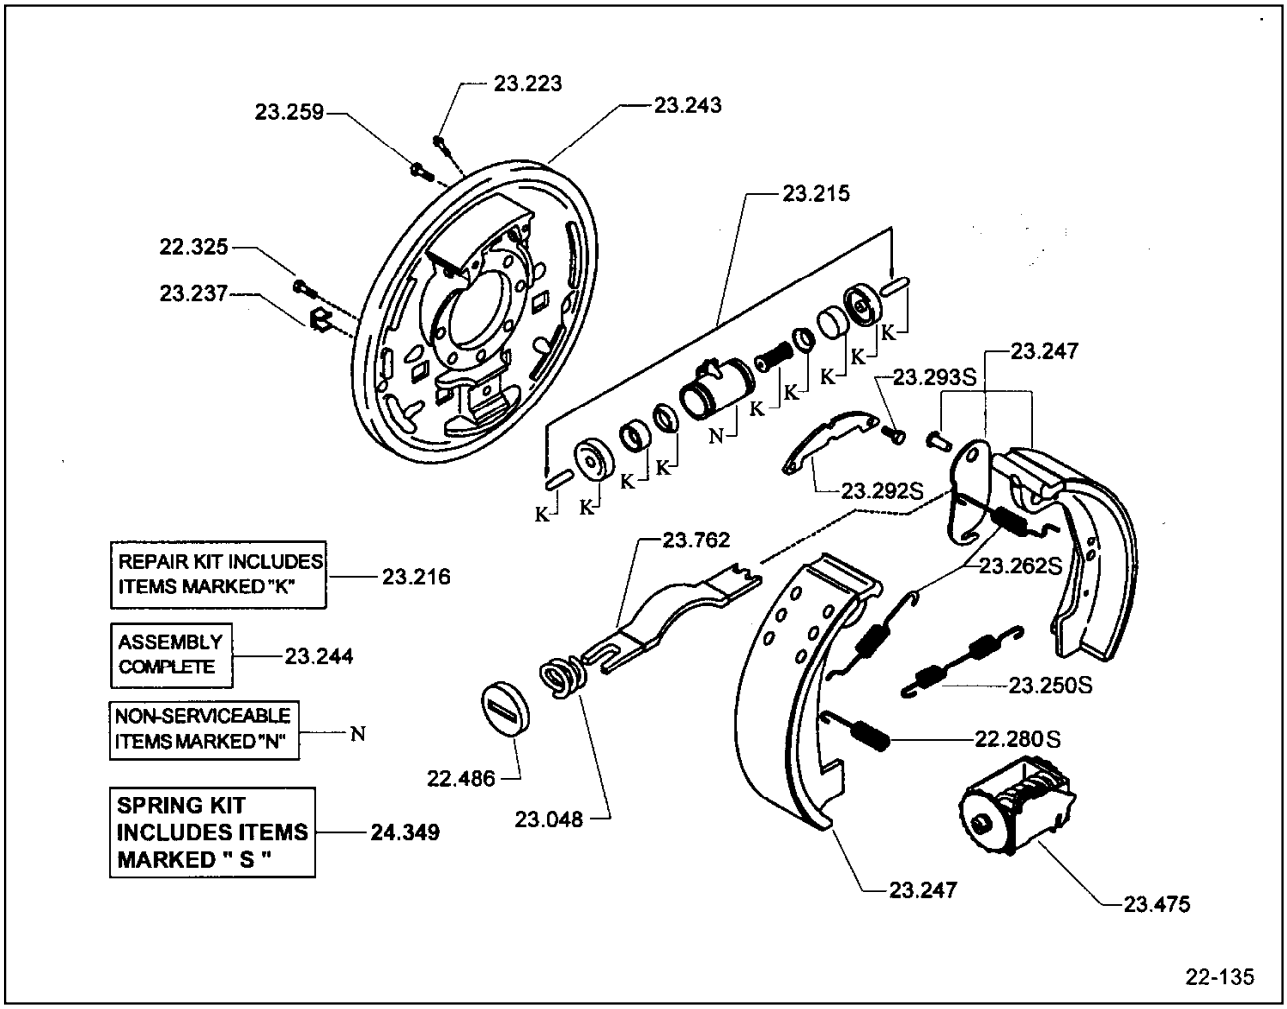

22.280 SPRING, BRAKE SHOE GUIDE PIN
스프링

22.325 FASTENER, BRAKE SHOE ADJUSTOR
패스너

22.486 SEAT, PARKING BRAKE OPERATING ARM ANTI-RATTLE SPRI
시트

23.048 SPRING, PARKING BRAKE OPERATING ARM ANTI-RATTLE
스프링

23.215 CYLINDER ASSEMBLY, RH BRAKE
실린더

23.216 REPAIR KIT, BRAKE CYLINDER (LH)
리페어킷

23.223 BLEEDER, BRAKE WHEEL CYLINDER
블리더

23.237 COVER, RH BRAKE ADJUSTOR
커버

23.243 PLATE, RH BRAKE BACKING
플레이트

www.truck-freeworkshop.com/clark/

23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
23.247	SHOE SET, BRAKE LINING 슈
23.259	FASTENER, RH WHEEL CYLINDER 패스너
23.262	SPRING, BRAKE SHOE RETURN 스프링
23.292	ANCHOR, BRAKE SHOE 앵커
23.293	RING-RETAINING, BRAKE SHOE ANCHOR PIN 링
23.475	ADJUSTOR, BRAKE SHOE 어드져스터
23.762	ARM, PARKING BRAKE OPERATING 암
24.349	SPRING KIT, BRAKE SHOE 스프링킷

www.truck-freeworkshop.com/clark/

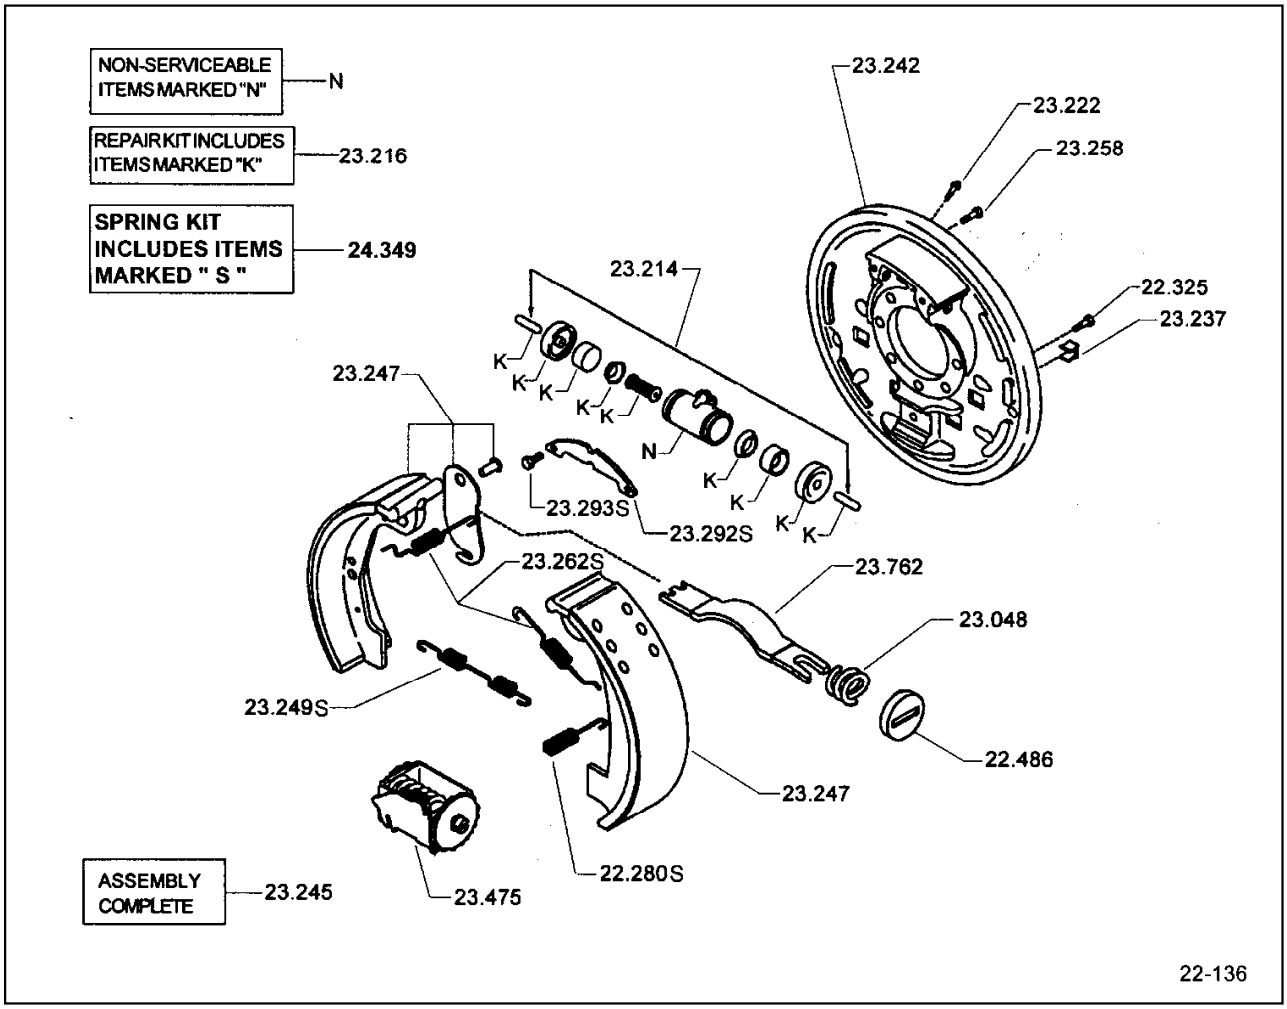

22.280 SPRING, BRAKE SHOE GUIDE PIN
스프링

22.325 FASTENER, BRAKE SHOE ADJUSTOR
패스너

22.486 SEAT, PARKING BRAKE OPERATING ARM ANTI-RATTLE SPRI
시트

23.048 SPRING, PARKING BRAKE OPERATING ARM ANTI-RATTLE
스프링

23.214 CYLINDER ASSEMBLY, LH BRAKE
실린더

23.216 REPAIR KIT, BRAKE CYLINDER (LH)
리페어킷

23.222 SCREW, BRAKE CYLINDER BLEEDER (LH)
스크류

23.237 COVER, RH BRAKE ADJUSTOR
커버

23.242 PLATE, LH BRAKE BACKING
플레이트

www.truck-freeworkshop.com/clark/

23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
23.247	SHOE SET, BRAKE LINING 슈
23.249	SPRING, LH BRAKE RETURN 스프링
23.258	FASTENER, LH WHEEL CYLINDER 패스너
23.262	SPRING, BRAKE SHOE RETURN 스프링
23.292	ANCHOR, BRAKE SHOE 앵커
23.293	RING-RETAINING, BRAKE SHOE ANCHOR PIN 링
23.475	ADJUSTOR, BRAKE SHOE 어드져스터
23.762	ARM, PARKING BRAKE OPERATING 암
24.349	SPRING KIT, BRAKE SHOE 스프링킷

www.truck-freeworkshop.com/clark/

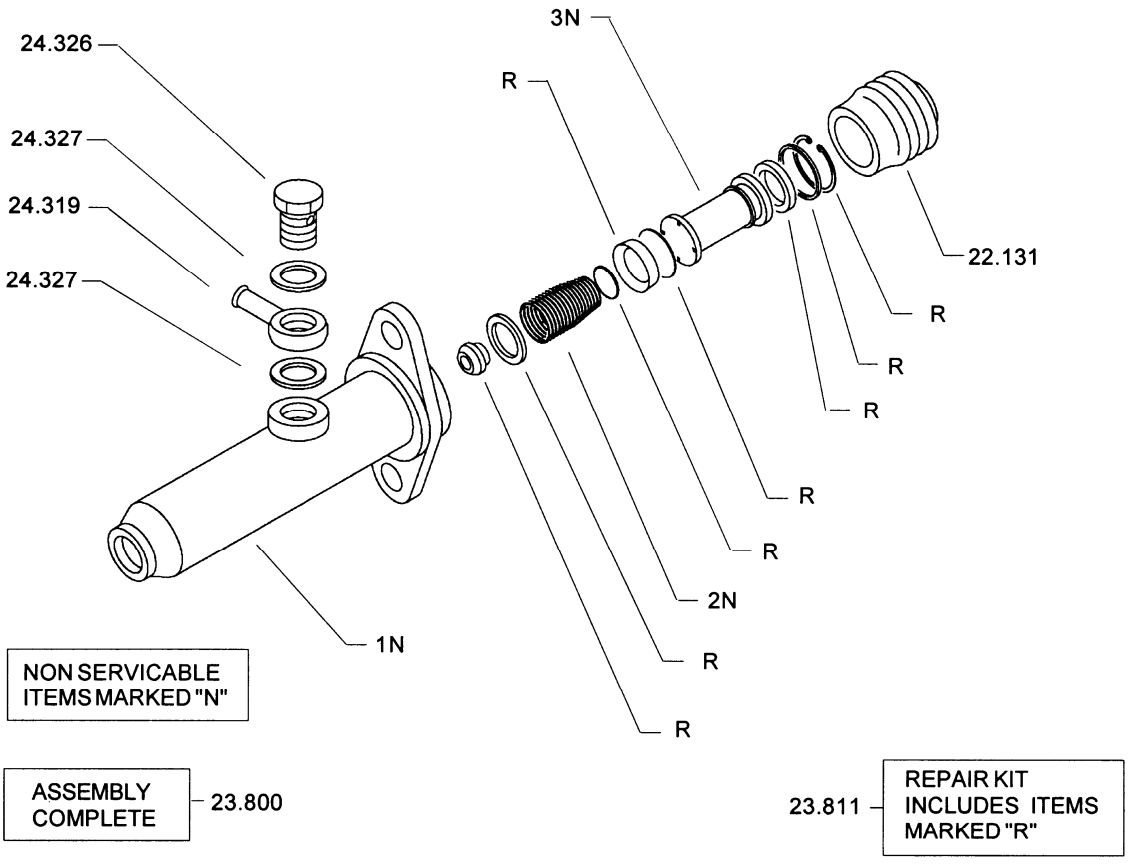

22.131 BOOT, INCHING MASTER CYLINDER
부트

23.800 CYLINDER ASSEMBLY, INCHING MASTER COMPLETE
실린더

23.811 REPAIR KIT, INCHING MASTER CYLINDER
리페어킷

24.319 FITTING,INCHING MASTER CYLINDER INLET
피팅

24.326 BOLT, INCHING MASTER CYLINDER INLET FITTING
볼트

24.327 SEAL, INCHING MASTER CYLINDER INLET FITTING
시일

www.truck-freeworkshop.com/clark/

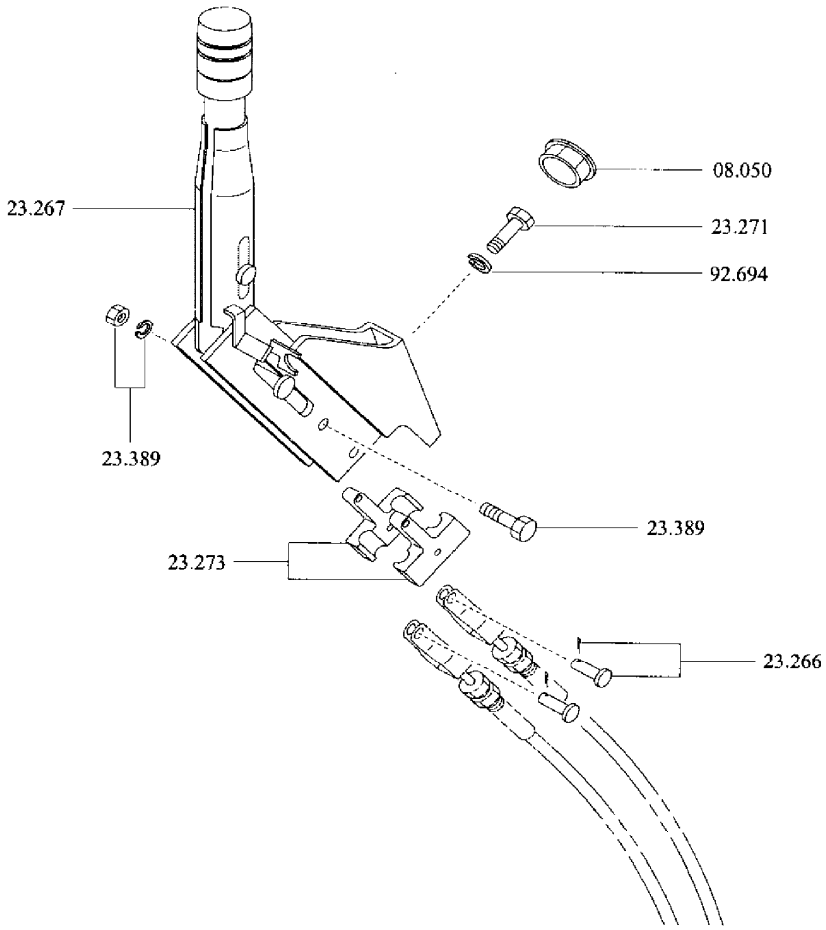

08.050	PLUG, BRAKE LEVER HOLE 플러그
23.266	FASTENER, PARKING BRAKE CABLE CLAMP 패스너
23.267	LEVER, PARKING BRAKE 레버
23.271	FASTENER, PARKING BRAKE LEVER 패스너
23.273	CLAMP, PARKING BRAKE LEVER TO CABLE 클램프
23.389	RETAINER, PARKING BRAKE CABLE 리테이너
92.694	WASHER, PARKING BRAKE LEVER FASTENER 와셔

www.truck-freeworkshop.com/clark/

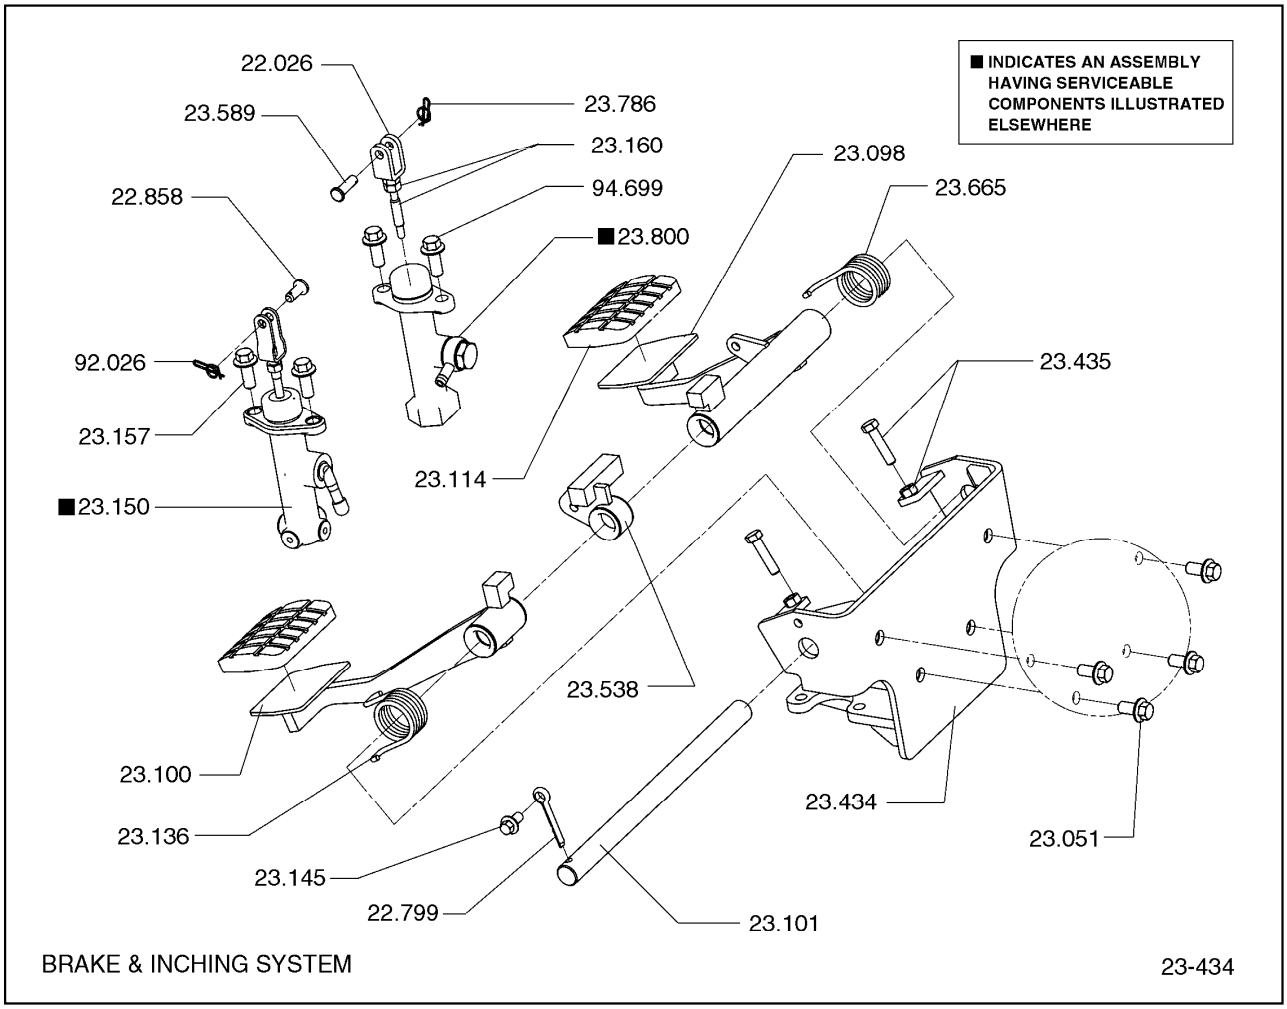

22.026 ROD END, BRAKE PEDAL LINKAGE
로드엔드

22.799 FASTENER, BRAKE PEDAL PIVOT BRACKET
패스너

22.858 FASTENER, BRAKE MASTER CYLINDER ACTUATING ROD ADJU
패스너

23.051 FASTENER, MASTER CYLINDER MOUNTING BRACKET
패스너

23.098 PEDAL, AUX BRAKE
페달

23.100 PEDAL, BRAKE
페달

23.101 SHAFT, BRAKE PEDAL
샤프트

23.114 PAD & FASTENER, BRAKE PEDAL
패드와패스너

23.136 SPRING, BRAKE PEDAL RETURN
스프링

www.truck-freeworkshop.com/clark/

23.145	FASTENER, BRAKE PEDAL SHAFT 패스너
23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.157	FASTENER, BRAKE MASTER CYLINDER ATTACHING 패스너
23.160	ROD, PUSH 로드
23.434	BRACKET, BRAKE PEDAL PIVOT 브라켓
23.435	FASTENER, BRAKE PEDAL PIVOT BRACKET 패스너
23.538	ARM, BRAKE LINKAGE PIVOT 암
23.589	RETAINER, BRAKE ACTUATING LEVER 리테이너
23.665	SPRING, INCHING PEDAL RETURN 스프링
23.786	FASTENER, INCHING BRAKE PEDAL 패스너
23.800	CYLINDER ASSEMBLY, INCHING MASTER COMPLETE 실린더
92.026	RETAINER, BRAKE MASTER CYLINDER ACTUATING ROD PIN 리테이너
94.699	FASTENER, BRAKE MASTER CYLINDER SUPPORT BRACKET 패스너

www.truck-freeworkshop.com/clark/

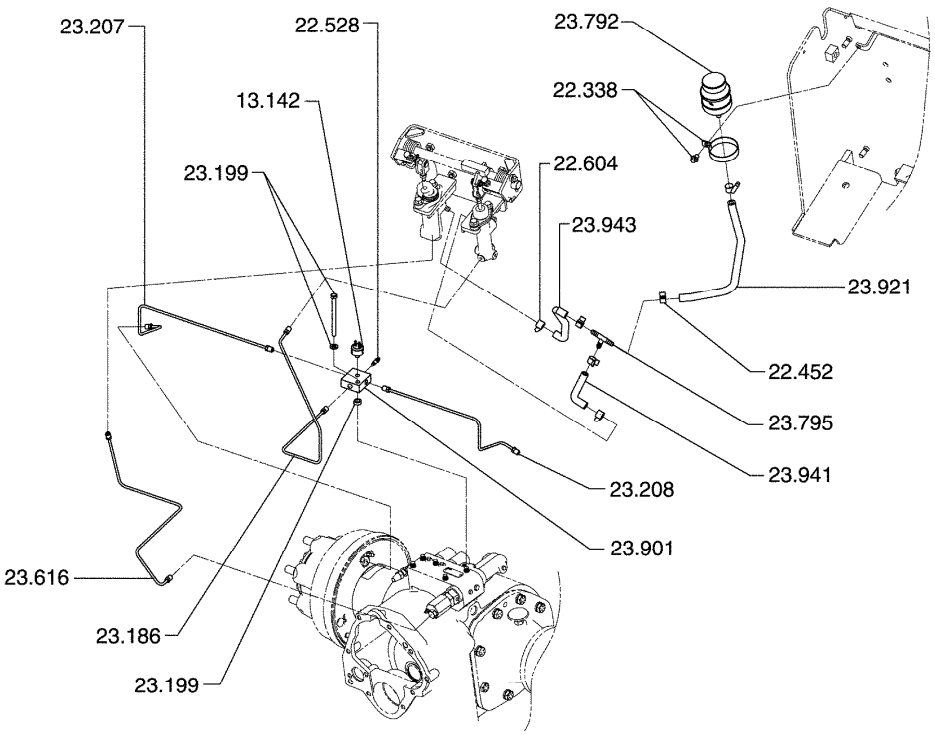

BRAKE LINES **23-467**

13.142 SWITCH, BRAKE INTERLOCK
스위치

22.338 CLAMP, BRAKE FLUID RESERVOIR
클룻프

22.452 CLAMP, BRAKE MASTER CYLINDER FILLER LINE
클램프

22.528 BLEEDER, BRAKE LINES ADAPTOR
블리더

22.604 CLAMP, BRAKE FLUID RESERVOIR LINE
클램프

23.186 LINE, BRAKE MASTER CYLINDER OUTLET
라인

23.199 FASTENER, BRAKE LINE TEE
패스너

23.207 LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인

23.208 LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인

www.truck-freeworkshop.com/clark/

23.616	LINE, BRAKE MASTER CYLINDER OUTLET 라인
23.792	RESERVOIR, BRAKE FLUID 리저버
23.795	FITTING, BRAKE MASTER CYLINDER INLET 피팅
23.901	FASTENER, SEAT BRAKE ACTUATING CYLINDER 패스너
23.921	LINE, RESERVOIR OUTLET 라인
23.941	LINE, BRAKE CYLINDER (LH) 라인
23.943	LINE, BRAKE CYLINDER LINE (RH) 라J

www.truck-freeworkshop.com/clark/

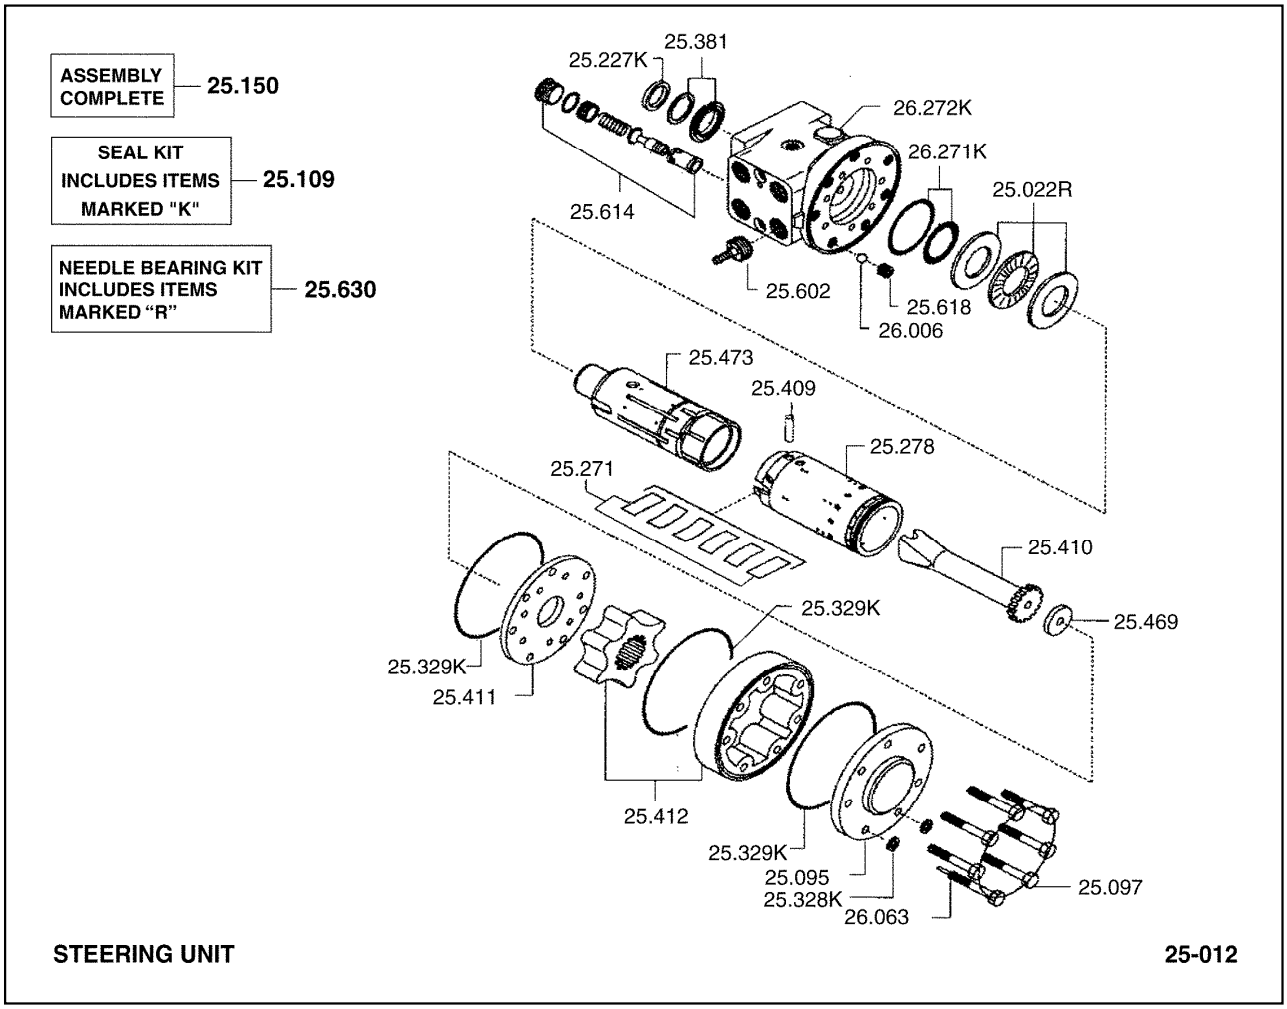

25.022 BEARING, STEER GEAR SPOOL
베어링

25.095 COVER, END
커버

25.097 FASTENER, END COVER
패스너

25.109 KIT, STEER GEAR SEAL
킷

25.150 GEAR BOX ASSEMBLY, STEERING
기어박스

25.227 DUST SEAL, STRG INPUT SHAFT BEARING
더스트시일

25.278 SLEEVE, STEERING HANDWHEEL
슬리브

25.328 WASHER, STEERING DRIVE IDLER
와셔

25.329 SEAL, STEERING DRIVE IDLER
시일

www.truck-freeworkshop.com/clark/

25.409	TRUNNION, STEER GEAR PUMP DRIVE 트러니언
25.410	SHAFT, STEER GEAR PUMP DRIVE 샤프트
25.411	WEAR PLATE, STEER GEAR PUMP 웨어플레이트
25.412	PUMP CARTRIDGE, STEER GEAR 펌프카트리지
25.469	SPACER, STEER GEAR PUMP DRIVE SHAFT 스페이서
25.473	SPLINE, STEER GEAR PUMP DRIVE SHAFT 스플라인
25.602	CHECK VALVE, STEER GEAR VALVE 체크밸브
25.614	RELIEF VALVE, STEER GEAR PRESSURE 릴리프밸브
25.618	BUSHING, STEER GEAR CHECK VALVE 부싱
25.630	REPAIR KIT, STEERING COLUMN 리페어킷
25.721	SHIELD, STABILIZER WHEEL TRUNNION BEARING GREASE 쉴드
25.831	FASTENER,STEERING ADJUSTER 패스너
26.006	BALL, CHECK VALVE 볼
26.063	PLUG, CHECK VALVE CHANNEL 플러그
26.271	SEAL, STEERING VALVE END HOUSING 시일
26.272	HOUSING, STEERING VALVE END 하우징

www.truck-freeworkshop.com/clark/

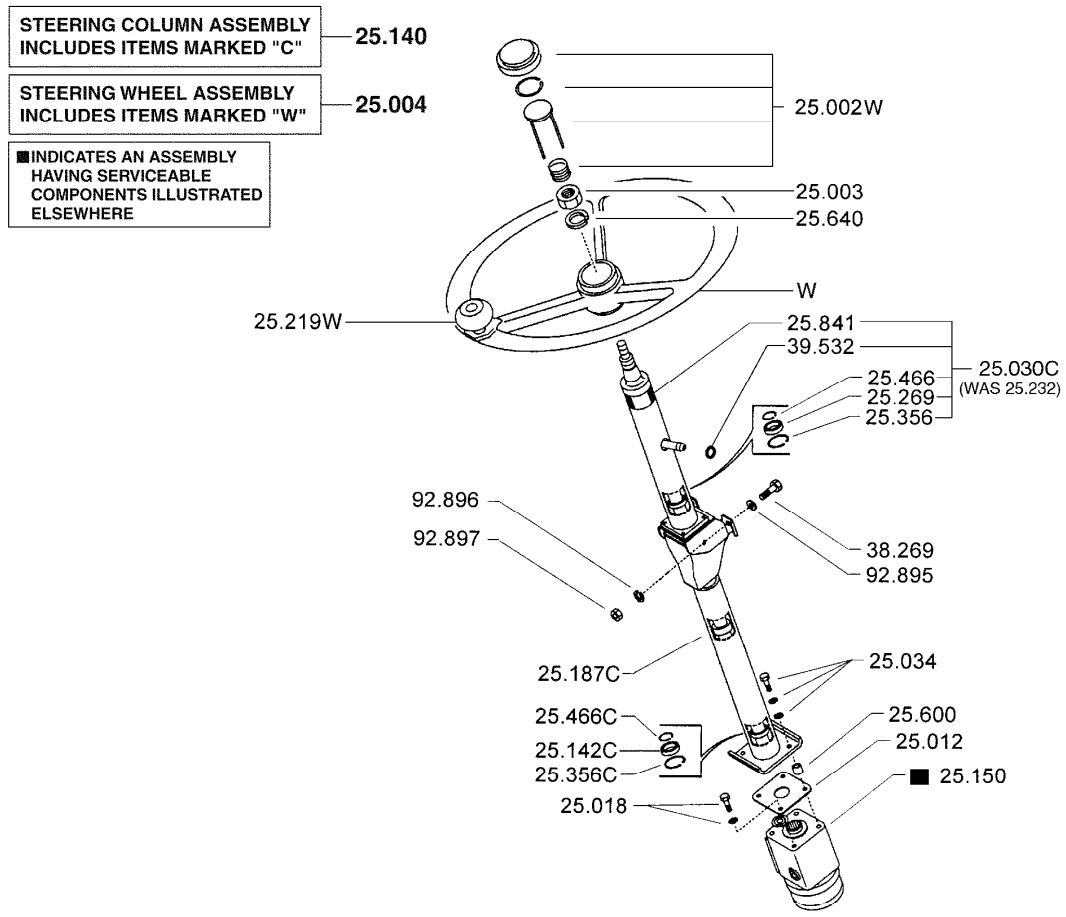

STEERING COLUMN MOUNTING **25-044**

25.002 HORN BUTTON KIT
혼버튼킷

25.003 NUT, HANDWHEEL
너트

25.004 HAND WHEEL, STEERING GEAR
핸드휠

25.012 CUSHION, STEERING COLUMN
쿠션

25.018 FASTENER, COLUMN JACKET
패스너

25.030 SHAFT ASSEMBLY, STEERING COLUMN
샤프트

25.034 FASTENER, STEERING GEAR ATTACHING
패스너

25.140 SHAFT & COLUMN ASSEMBLY, POWER STEERING
샤프트와컬럼

25.142 BEARING, STEERING GEAR SHAFT (LOWER)
베어링

www.truck-freeworkshop.com/clark/

25.150	GEAR BOX ASSEMBLY, STEERING 기어박스
25.187	BEARING, STEER SHAFT 베어링
25.219	KNOB, STEERING HAND WHEEL SPINNER 노브
25.269	BEARING, STEERING GEAR SHAFT (UPPER) 베어링
25.356	RETAINER, STEERING SHAFT BEARING 리테이너
25.466	RETAINER, STEERING SHAFT BEARING 리테이너
25.600	SPACER, STEERING COLUMN MOUNTING 스페이서
25.640	LOCKWASHER, HORN CONNECTOR FASTENER 로크와셔
25.841	BUSHING, STEERING GEAR SHAFT 부싱
38.269	FASTENER, STEERING COLUMN SUPPORT 패스너
39.532	GROMMET, STEERING COLUMN 그로멧
92.895	WASHER, STEERING COLUMN SUPPORT FASTENER 와셔
92.896	LOCKWASHER, STEERING COLUMN SUPPORT FASTENER 로크와셔
92.897	NUT, STEERING COLUMN SUPPORT FASTENER 너트

www.truck-freeworkshop.com/clark/

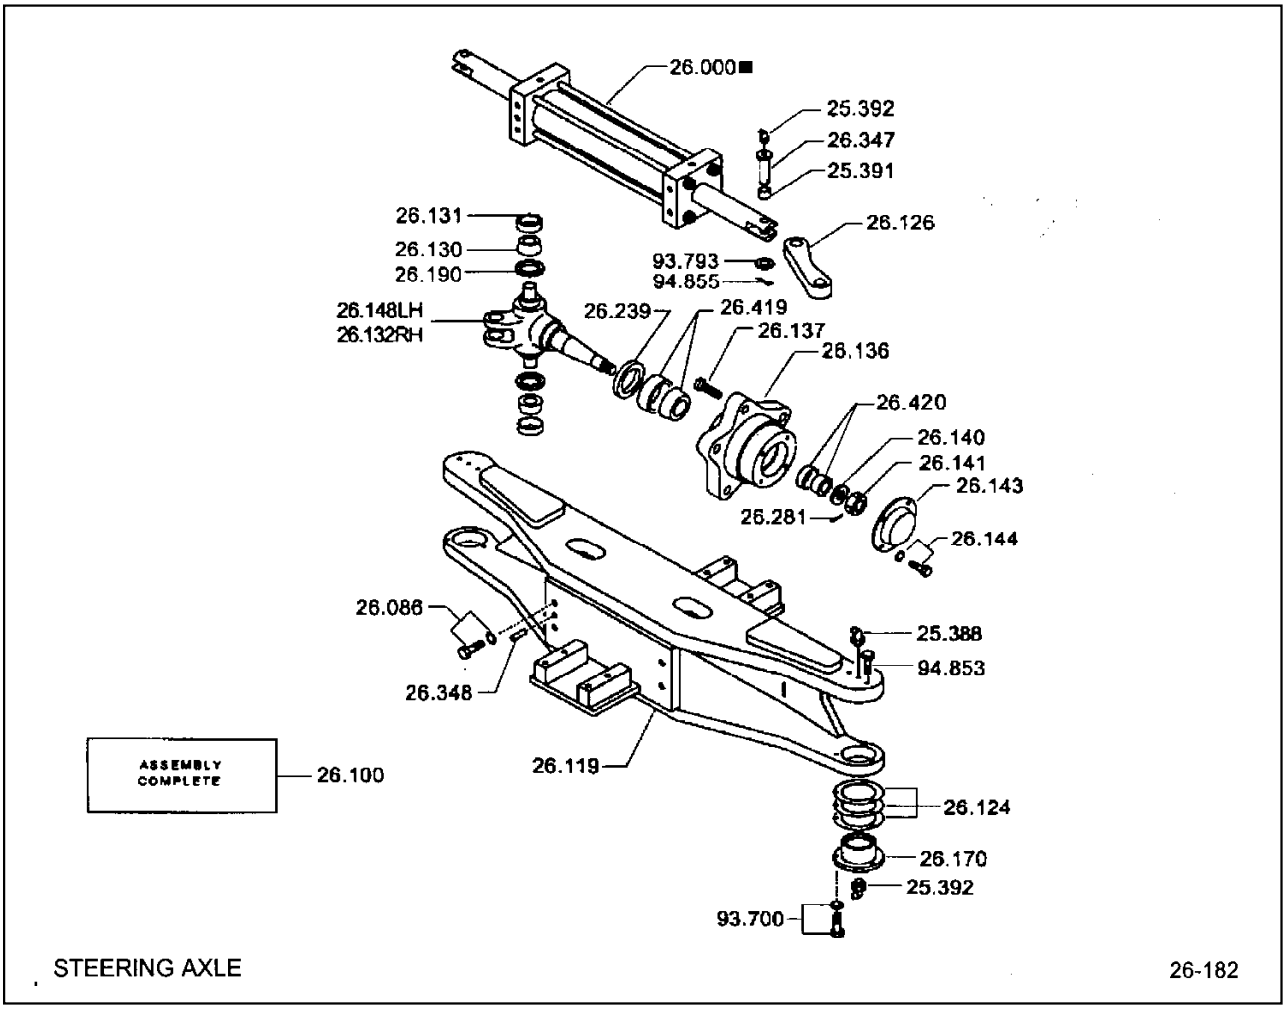

25.388	FITTING-LUB, STEERING ARM PIVOT 피팅	26.141	FASTENER, STEER WHEEL HUB 패스너
25.391	BEARING, STEERING ARM 베어링	26.143	CAP, STEER WHEEL HUB 캡
25.392	FITTING-LUB, STEERING ARM 피팅	26.144	FASTENER, STEER AXLE HUB CAP 패스너
26.000	CYLINDER ASSEMBLY, STEERING 실린더	26.148	KNUCKLE, STEER AXLE (LH) 너트
26.086	FASTENER, STEERING CYLINDER ANCHOR END 패스너	26.170	PLUG - EXPANSION, STEER AXLE KNUCKLE PIN 플러그
26.100	AXLE ASSEMBLY, STEERING 스티어액슬	26.190	SEAL, STEER AXLE KNUCKLE OIL 시일
26.119	AXLE, STEER 액슬	26.239	SEAL, STEER AXLE FORK COVER 시일
26.124	SHIM, STEER AXLE KNUCKLE 심	26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.126	ARM, RH STEERING 암	26.347	PIN, STEER ARM 핀
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링	26.348	LOCATOR, STEER CYLINDER 로케이터
26.131	BEARING, STEER AXLE KNUCKLE PIN LOWER 베어링	26.419	CUP & CONE, STEER WHEEL HUB BEARING (INNER) 컵과콘
26.132	KNUCKLE, STEER AXLE (RH) 너트	26.420	CUP & CONE, STEER WHEEL HUB BEARING (OUTER) 컵과콘
26.136	HUB & CUP, STEER WHEEL 허브와컵	93.700	FASTENER, STEER AXLE KNUCKLE PIN COVER 패스너
26.137	FASTENER, STEER WHEEL 패스너	93.793	WASHER, STEERING ARM PIVOT FASTENER 와셔
26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔	94.853	FASTENER, STEER AXLE KNUCKLE PIN 패스너

www.truck-freeworkshop.com/clark/

94.855 RETAINER, STEERING ARM PIN
리테이너

www.truck-freeworkshop.com/clark/

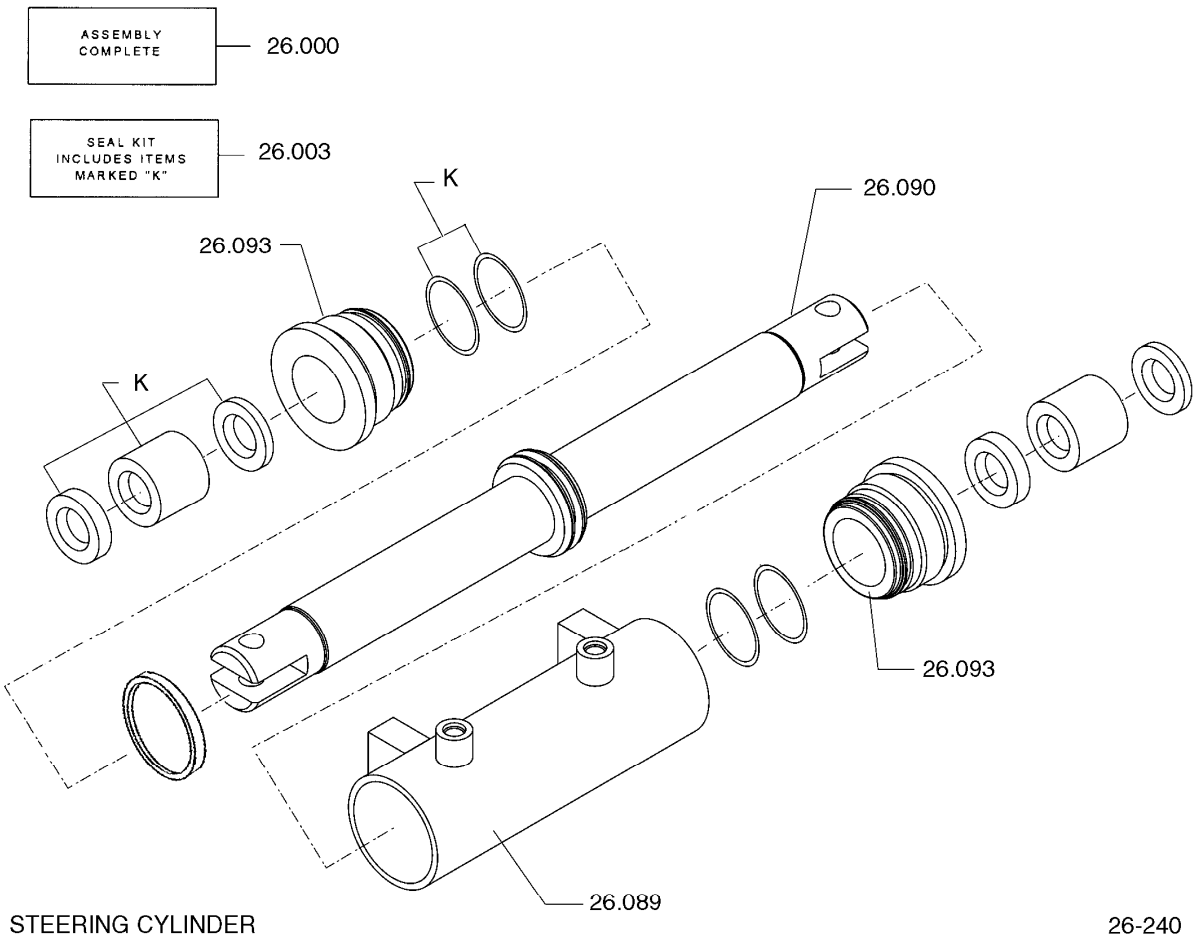

26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 시일킷
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 룽드욱피스톤
26.093	GLAND, STEERING CYLINDER 그랜드

www.truck-freeworkshop.com/clark/

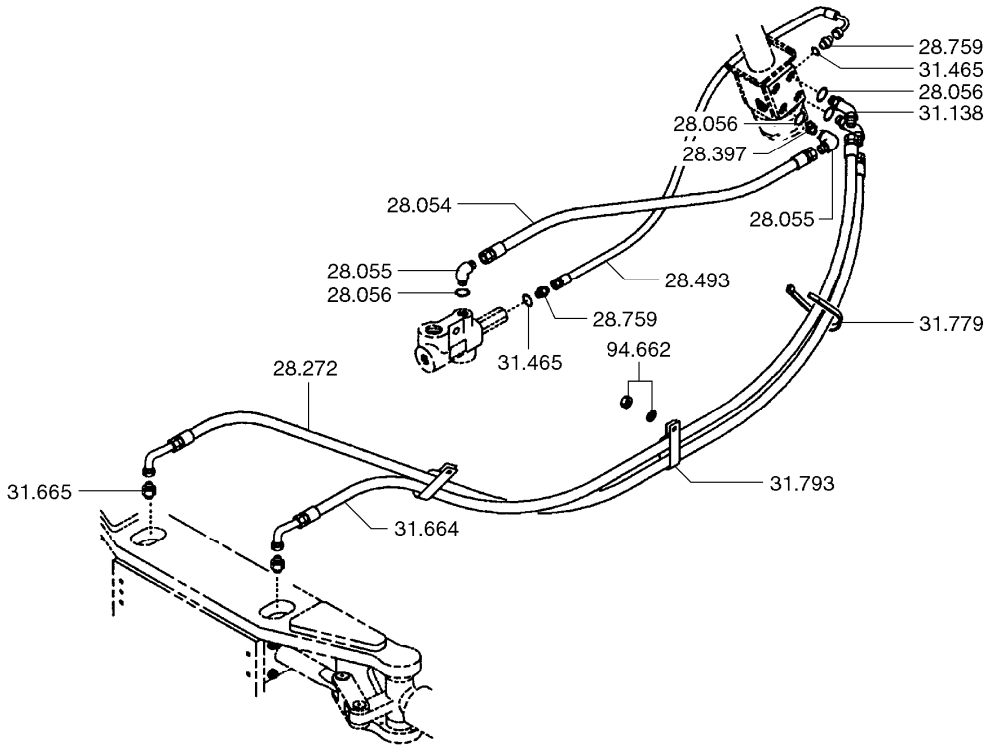

STEERING LINES **26-280**

28.054 LINE, STEERING GEAR
라인

28.055 FITTING, STEERING GEAR
피팅

28.056 SEAL, STEERING GEAR FITTING
시일

28.272 LINE, STEER CYLINDER INLET
라인

28.397 FITTING, STEERING GEAR LINE
피팅

28.493 LINE, PRESSURE SENSING
라인

28.759 FITTING, STEER VALVE OUTLET PORT
피팅

31.138 FITTING, STEER VALVE OUTLET UPPER PORT
피팅

31.465 SEAL, STEER VALVE OUTLET PORT
시일

www.truck-freeworkshop.com/clark/

31.664	LINE, STEERING CYLINDER ANCHOR PORT 라인
31.665	FITTING, STEERING CYLINDER ANCHOR PORT 피팅
31.779	CLAMP, POWER STEERING LINES 클램프
31.793	CLAMP, POWER STEERING LINES 클램프
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

www.truck-freeworkshop.com/clark/

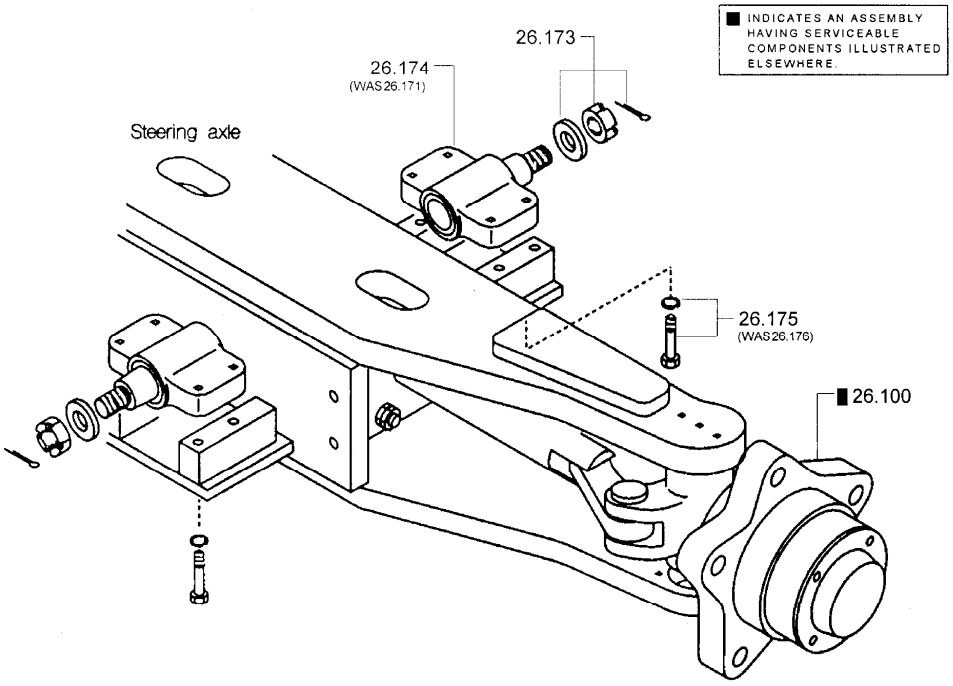

STEER AXLE MOUNTING

26-342

26.100	AXLE ASSEMBLY, STEERING 스티어액슬
26.173	FASTENER, SILENT BLOCK TO FRAME (FRONT) 패스너
26.174	SILENT BLOCK, AXLE MOUNTING (REAR) 사일런트블록
26.175	FASTENER, SILENT BLOCK TO FRAME (REAR) 패스너

www.truck-freeworkshop.com/clark/

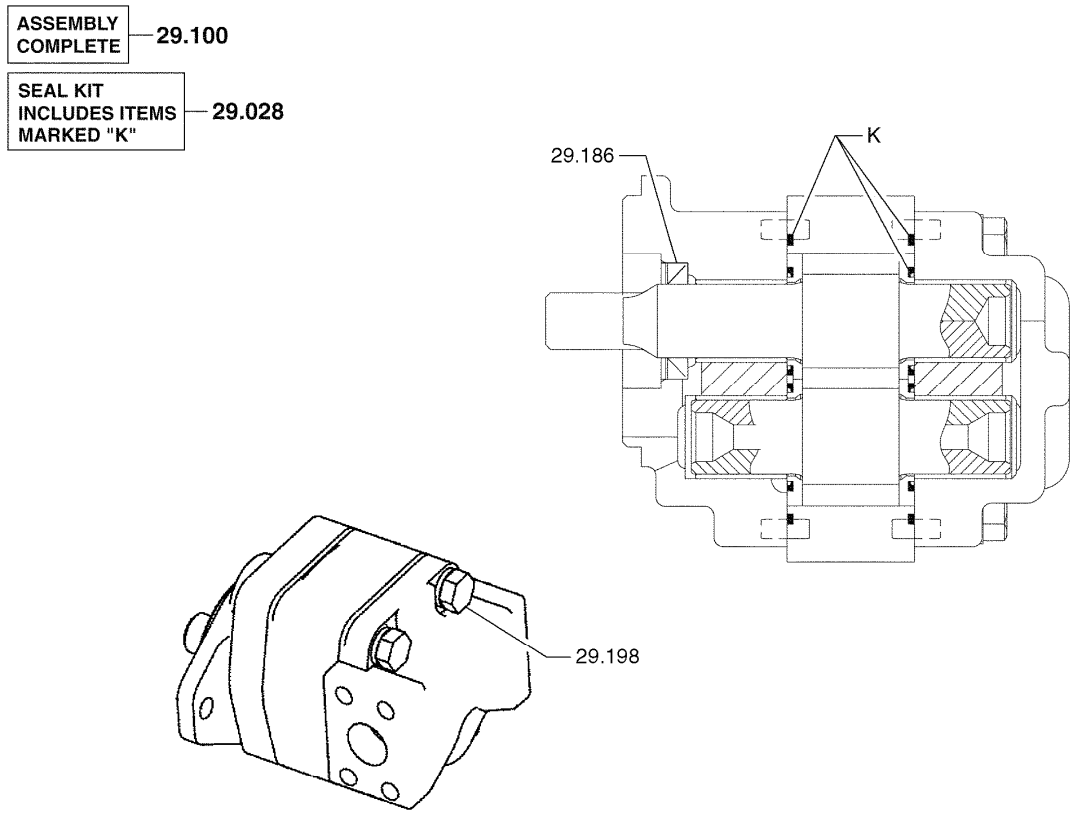

HYDRAULIC PUMP ASSEMBLY **29-178**

29.028	SEAL KIT, HYDRAULIC UNIT PUMP 시일킷
29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.186	SEAL, PUMP SHAFT 시일
29.198	FASTENER, PUMP HOUSING 패스너

www.truck-freeworkshop.com/clark/

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

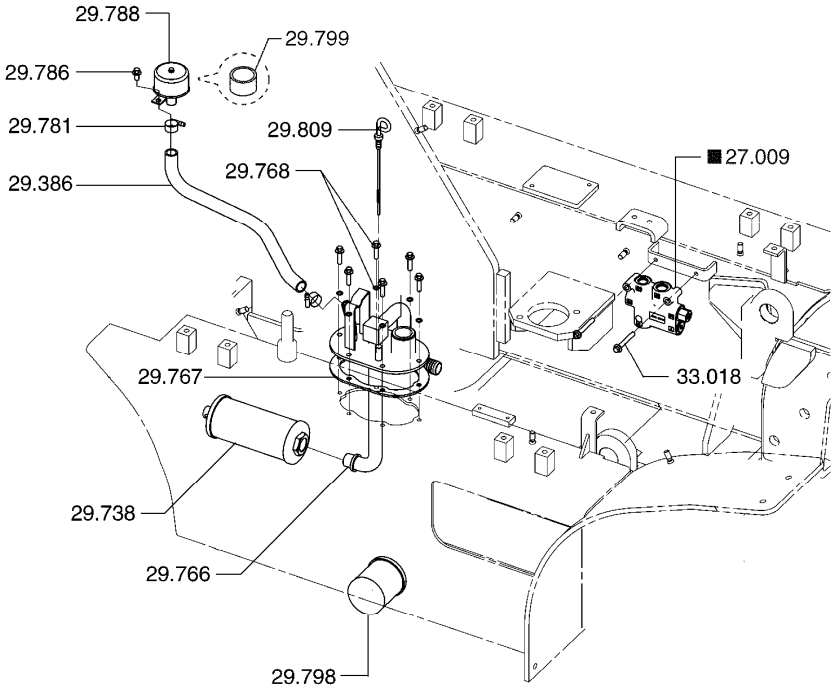

HYDRAULIC SUMP **29-215**

27.009	VALVE ASSEMBLY, HYDRAULIC PRIORITY 벨브
29.386	LINE, SUMP BREATHER 라인
29.738	FILTER ASSEMBLY, HYDRAULIC SUMP 필터
29.766	COVER, SUMP TANK 커버
29.767	SEAL, SUMP TANK COVER 시일
29.768	FASTENER, SUMP TANK COVER 패스너
29.781	CLAMP, SUMP BREATHER LINE 클램프
29.786	FASTENER, SUMP BREATHER 패스너
29.788	BREATHER, SUMP 브리더

www.truck-freeworkshop.com/clark/

29.798	SCREEN, HYDRAULIC SUMP PRE FILTER 스크린
29.799	ELEMENT, SUMP BREATHER 엘리먼트
29.809	DIPSTICK, SUMP LEVEL 딥스틱
33.018	FASTENER, FLOW VALVE 패스너

www.truck-freeworkshop.com/clark/

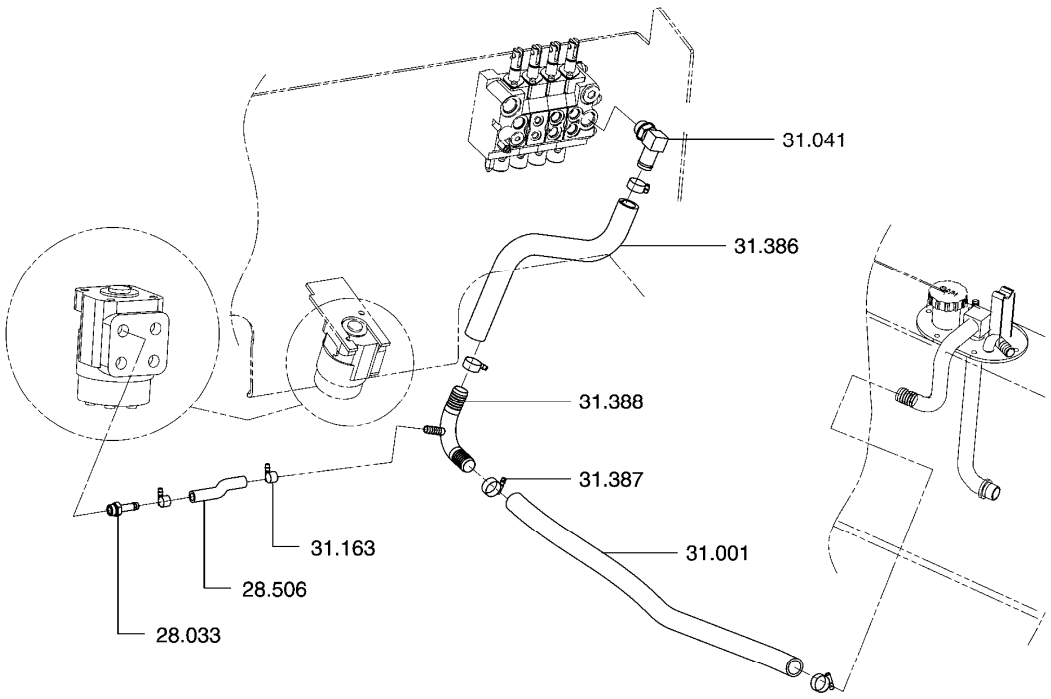

HYDRAULIC RETURN LINES **29-244**

28.033	FITTING, SUMP RETURN 피팅
28.506	LINE, SUMP RETURN 라인
31.001	LINE, SUMP OUTLET 라인
31.041	LINE, VALVE DISCHARGE 라인
31.163	CLAMP, SUMP RETURN LINE 클램프
31.386	LINE, VALVE TO SUMP RETURN 라인
31.387	CLAMP, MAIN VALVE TO SUMP LINE 클램프
31.388	LINE, VALVE SUMP RETURN 라인

www.truck-freeworkshop.com/clark/

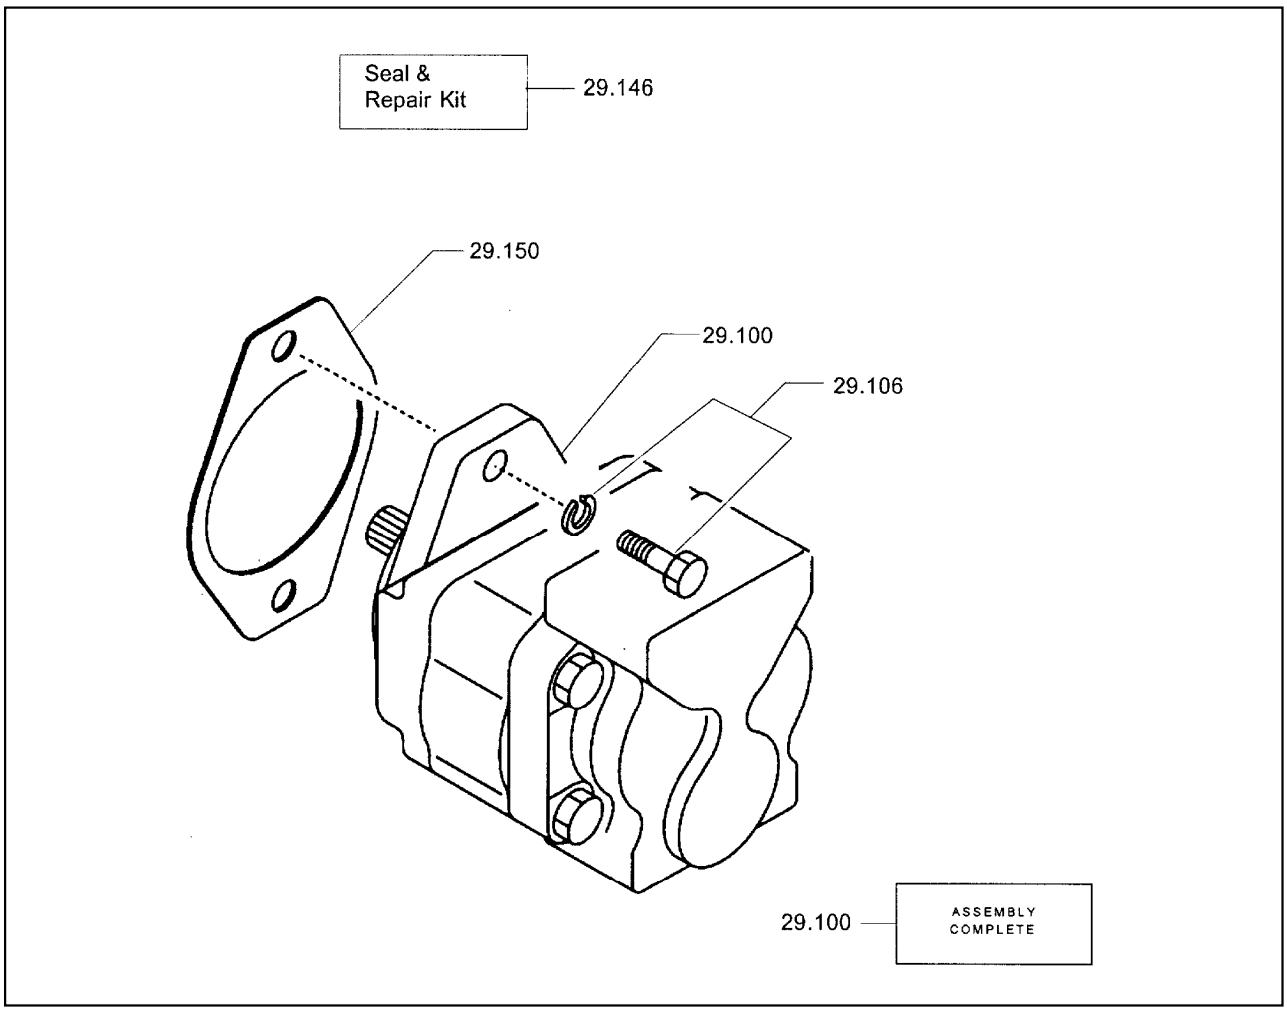

29.100 PUMP ASSEMBLY, HYDRAULIC
펌프

29.106 FASTENER, PUMP TO PLATE
패스너

29.146 GASKET & SEAL KIT, PUMP
가스켓과시일

29.150 GASKET, HYDRAULIC PUMP MOUNTING
가스켓

www.truck-freeworkshop.com/clark/

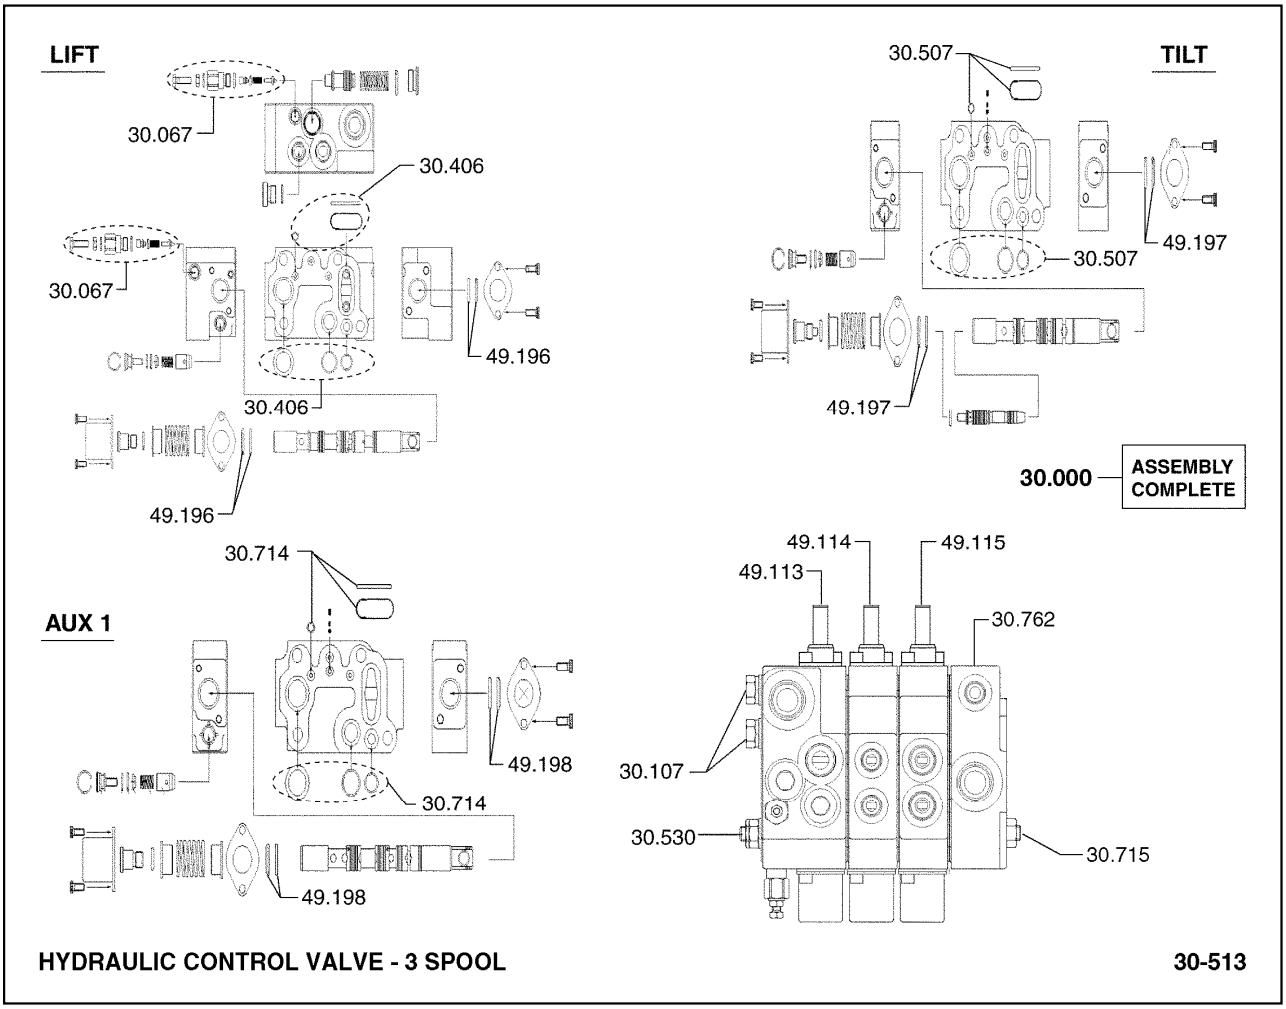

30.000	VALVE ASSEMBLY, HYDRAULIC 벨브
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.107	FASTENER, VALVE THRU 패스너
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 시일킷
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 시일킷
30.530	FASTENER, VALVE THRU 패스너
30.714	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 시일킷
30.715	FASTENER, VALVE THRU 패스너
30.762	END COVER, HYDRAULIC VALVE 엔드커버

www.truck-freeworkshop.com/clark/

49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀실킷
49.197	SPOOL SEAL KIT, TILT SECTION 스풀실킷
49.198	SPOOL SEAL KIT, AUX SECTION 스풀실킷

www.truck-freeworkshop.com/clark/

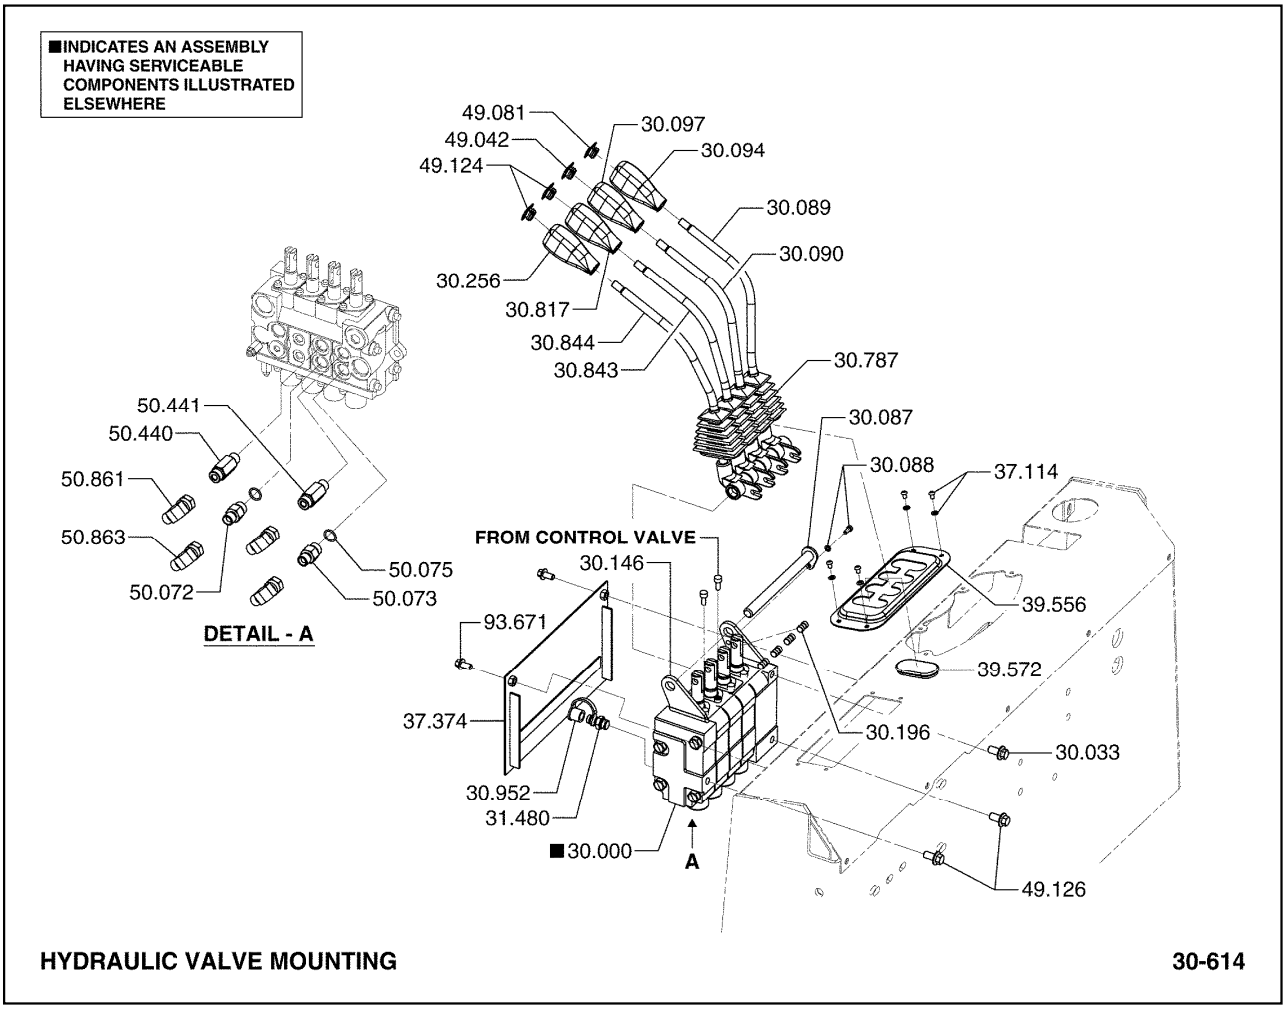

30.000	VALVE ASSEMBLY, HYDRAULIC 벨브	30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너	31.480	PLUG, PRESSURE GAUGE PORT 플러그
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀	37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
30.088	FASTENER, VALVE CONTROL LEVER PIVOT PIN 패스너	37.374	COVER, HYDRAULIC VALVE 커버
30.089	LEVER, LIFT CONTROL 레버	39.556	COVER, VALVE LINKAGE ACCESS 커버
30.090	LEVER, TILT CONTROL 레버	39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
30.094	KNOB, LIFT CONTROL LEVER 노브	49.042	CAP, TILT CONTROL LEVER 캡
30.097	KNOB, TILT CONTROL LEVER 노브	49.081	CAP, LIFT CONTROL LEVER 캡
30.146	BRACKET, CONTROL LINKAGE LOWER 브라켓	49.124	CAP, AUXILIARY CONTROL LEVER 캡
30.196	FASTENER, SPOOL CENTERING SPRING GUIDE 패스너	49.126	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브	50.072	FITTING, 1ST AUXILIARY VALVE "B" PORT 피팅
30.787	BOOT, VALVE CONTROL LEVER 부트	50.073	FITTING, 2ND AUXILIARY VALVE "B" PORT 피팅
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브	50.075	SEAL, AUXILIARY VALVE PORT FITTING 시일
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버	50.440	FITTING, 1ST AUXILIARY VALVE "A" PORT 피팅
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버	50.441	FITTING, 2ND AUXILIARY VALVE "A" PORT 피팅

www.truck-freeworkshop.com/clark/

50.861 FITTING, AUXILIARY VALVE A PORT
피팅

50.863 FITTING, AUXILIARY VALVE B PORT
피팅

93.671 FASTENER, HYDRAULIC VALVE COVER
패스너

www.truck-freeworkshop.com/clark/

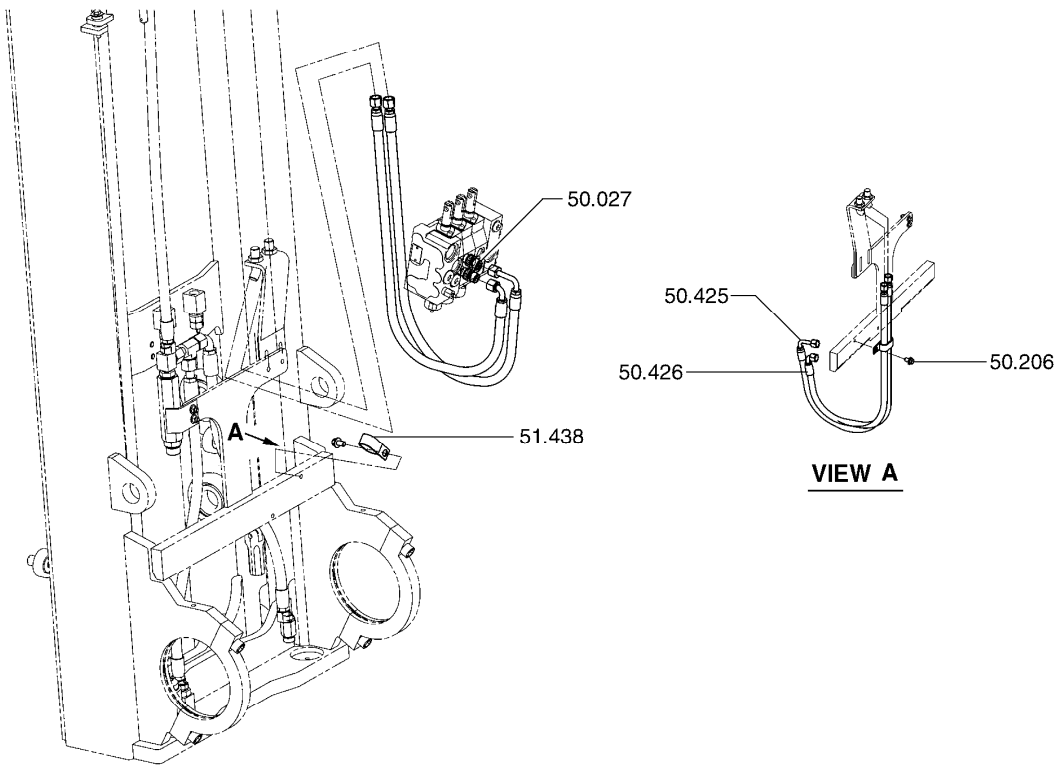

AUX.VALVE PLUMBING (SINGLE) **31-202**

50.027	FITTING, 1ST AUXILIARY VALVE A PORT 피팅
50.206	FASTENER, DEVICE RH LINE CLAMP 패스너
50.425	LINE, 1ST AUXILIARY VALVE "A" PORT 라인
50.426	LINE, 1ST AUXILIARY VALVE "B" PORT 라인
51.438	CLIP, DEVICE HOSE 클립

www.truck-freeworkshop.com/clark/

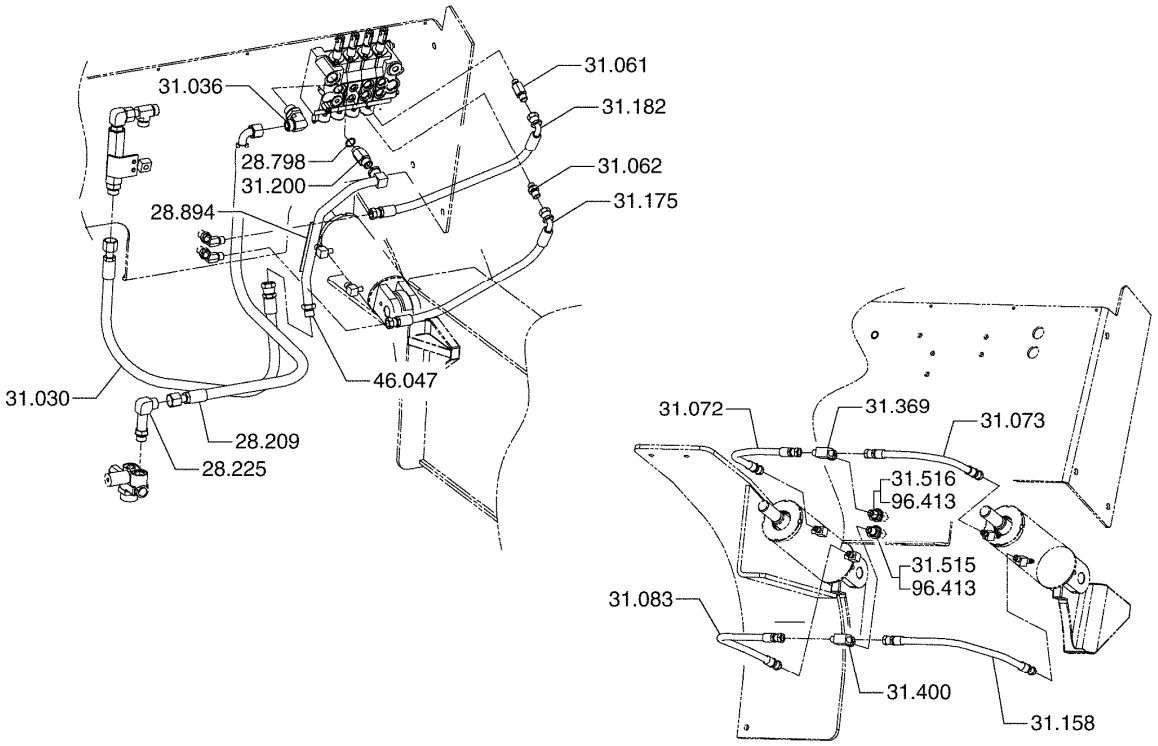

HYDRAULIC LIFT & TILT LINES **31-360**

28.209	LINE, MAIN VALVE INLET 라인
28.225	FITTING, FLOW CONTROL VALVE BY-PASS PORT 피팅
28.798	SEAL, MAIN VALVE LIFT PORT LINE FITTING 시일
28.894	PROTECTOR, LIFT LINE 보호장치
31.030	LINE, VALVE TO LIFT CYLINDER 라인
31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.061	FITTING, VALVE TILT PORT "A" 피팅
31.062	FITTING, VALVE TILT PORT "B" 피팅
31.072	LINE, RH TILT CYLINDER ROD PORT 라인

www.truck-freeworkshop.com/clark/

31.073	LINE, LH TILT CYLINDER ROD PORT 라인
31.083	LINE, RH TILT CYLINDER ANCHOR PORT 라인
31.158	LINE, LH TILT CYLINDER ANCHOR PORT 라인
31.175	LINE, VALVE TILT PORT "B" 라인
31.182	LINE, VALVE TILT PORT "A" 라인
31.200	FITTING, MAIN VALVE LIFT PORT 피팅
31.369	FITTING, VALVE TILT PORT "A" LINE 피팅
31.400	FITTING, VALVE TILT PORT "B" LINE 피팅
31.515	FITTING, VALVE TILT PORT "B" LINE 피팅
31.516	FITTING, VALVE TILT PORT "A" LINE 피팅
46.047	PIPE, VALVE TO LIFT CYLINDER 파이프
96.413	WASHER, TILT LINE FITTING 와셔

www.truck-freeworkshop.com/clark/

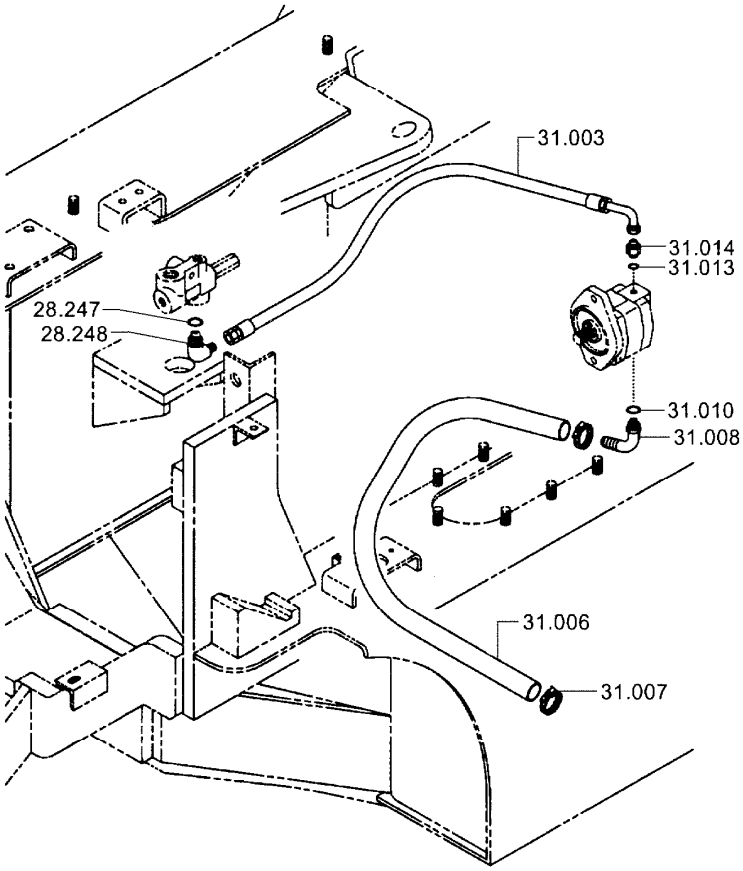

HYDRAULIC SUPPLY LINES **31-841**

28.247 SEAL, PS FLOW CONTROL VAL OUTLET PORT FTG
시일

28.248 FITTING, FLOW CONTROL VALVE OUTLET PORT
피팅

31.003 LINE, PUMP INLET
라인

31.006 LINE, PUMP INLET
라인

31.007 CLAMP, PUMP INLET LINE
클램프

31.008 FITTING, PUMP INLET
피팅

31.010 SEAL, PUMP INLET PORT
시일

31.013 SEAL, PUMP OUTLET
시일

31.014 FITTING, PUMP OUTLET
피팅

www.truck-freeworkshop.com/clark/

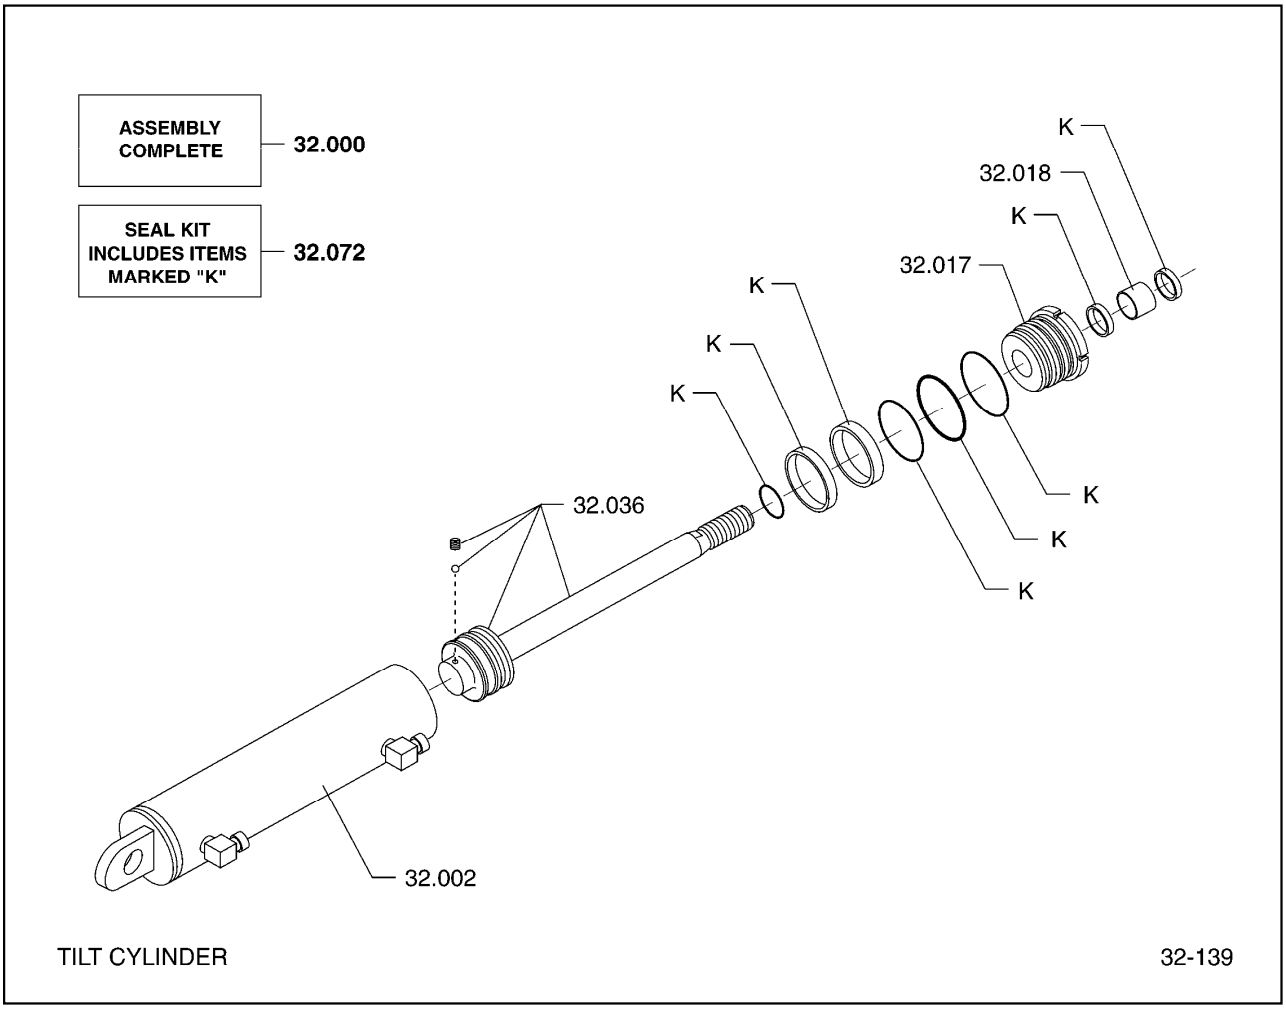

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드와피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹킷

www.truck-freeworkshop.com/clark/

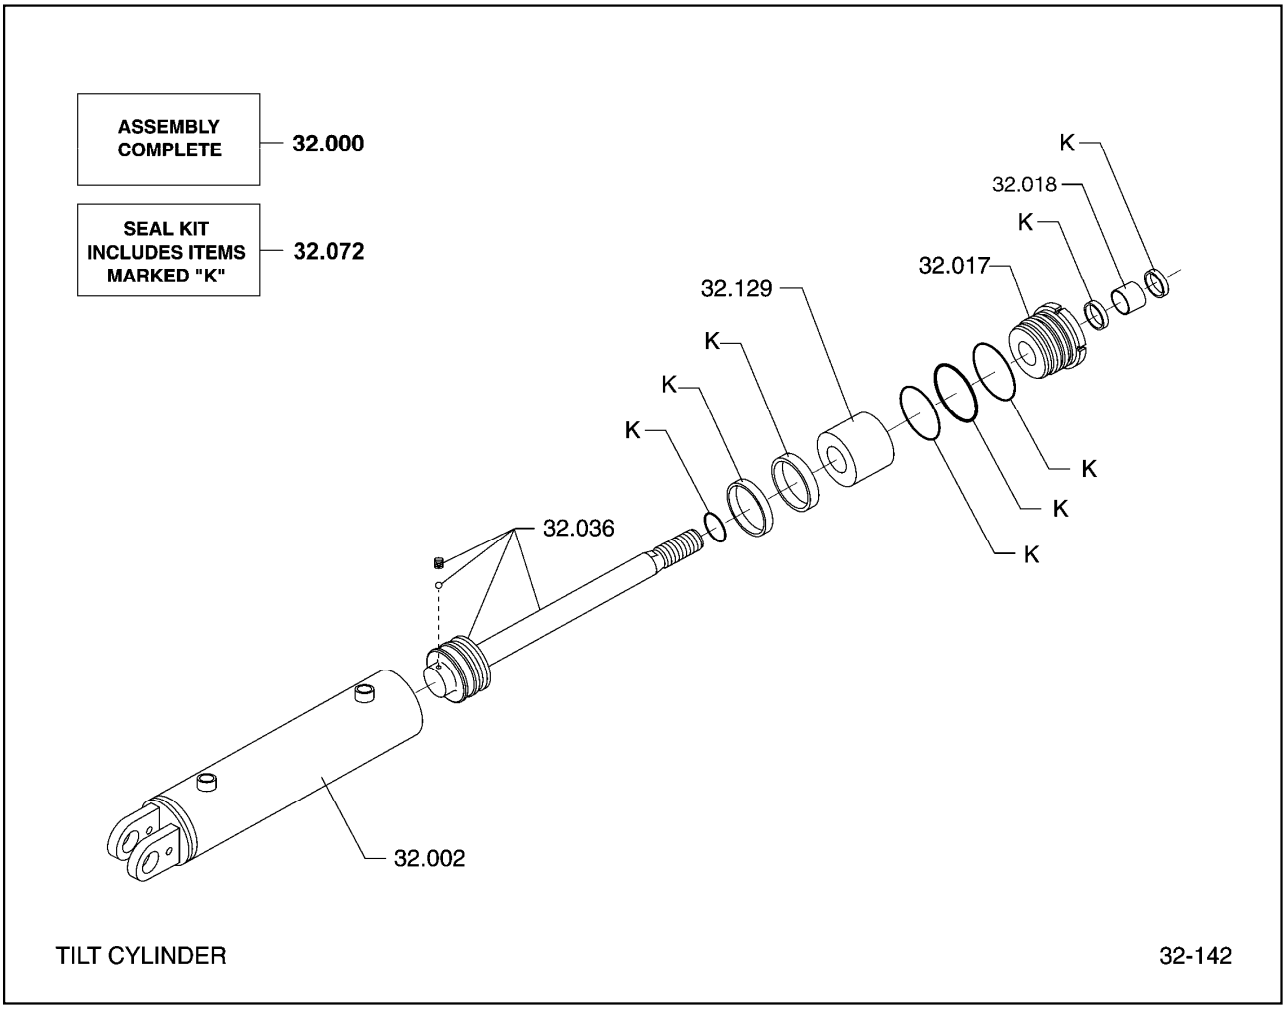

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드와피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹킷
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

www.truck-freeworkshop.com/clark/

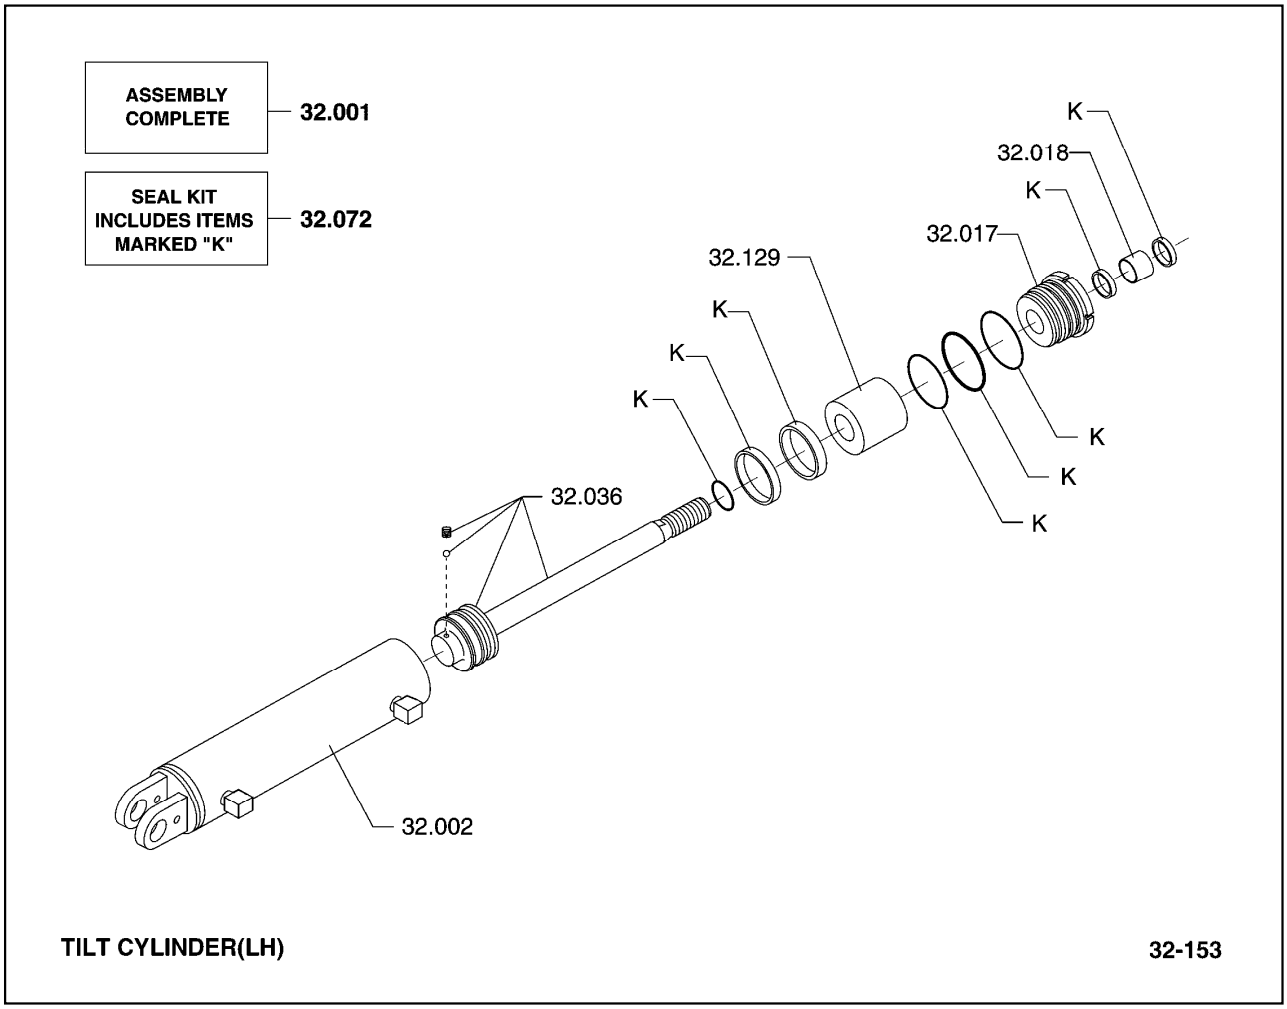

32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드와피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹킷
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

www.truck-freeworkshop.com/clark/

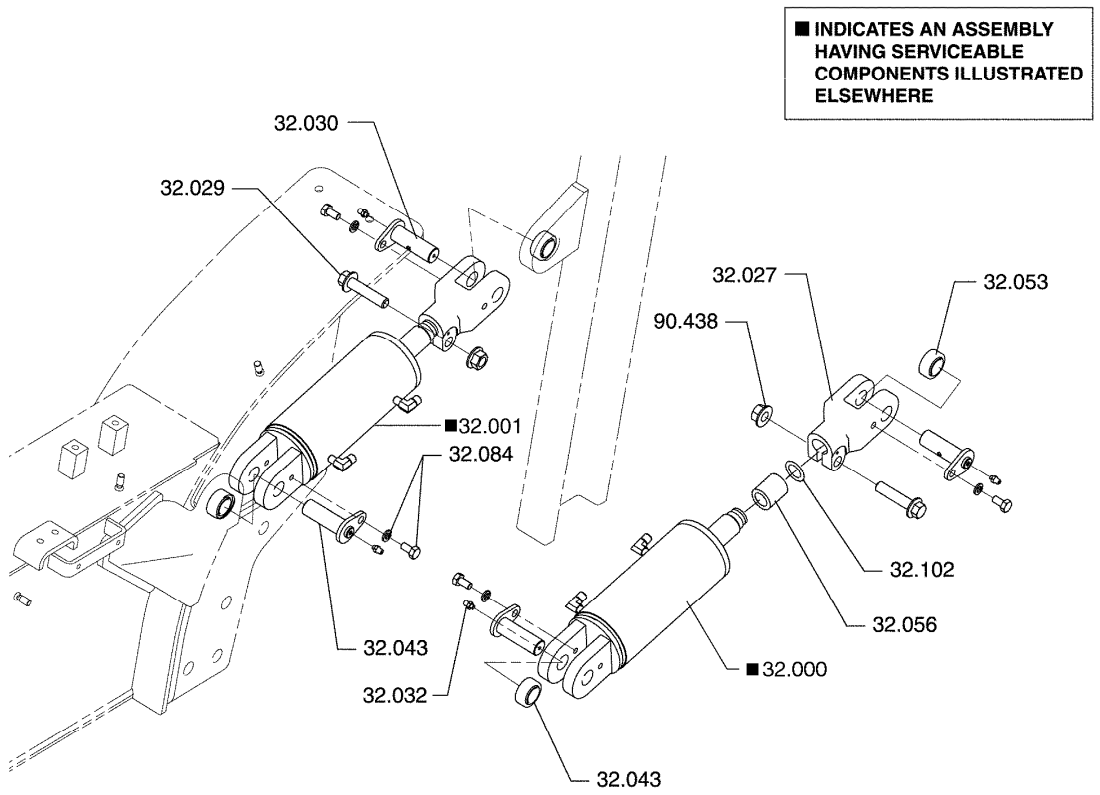

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.030	PIN, TILT CYLINDER TO UPRIGHT 핀
32.032	FITTING, TILT CYLINDER TO UPRIGHT PIN LUB 피팅
32.043	BEARING, TILT CYLINDER FRAME MOUNTING 베어링
32.053	BEARING, TILT CYLINDER ROD END 베어링
32.056	SPACER, TILT CYLINDER ROD END 스페이서

www.truck-freeworkshop.com/clark/

32.084	CAPSCREW, TILT CYLINDER ROD END PIN RETAINER 캡스크류
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심
90.438	NUT, TILT CYLINDER ROD END FASTENER 너트

www.truck-freeworkshop.com/clark/

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

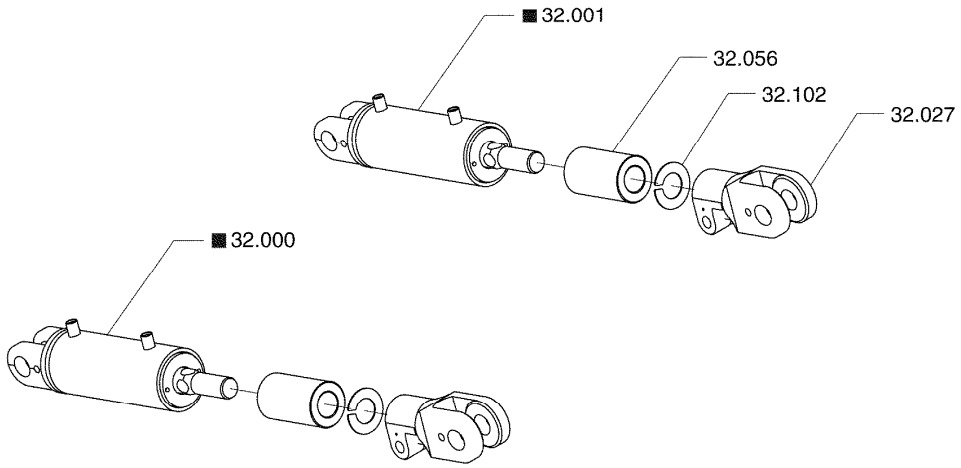

TILT AMOUNT GP **32-167**

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심

www.truck-freeworkshop.com/clark/

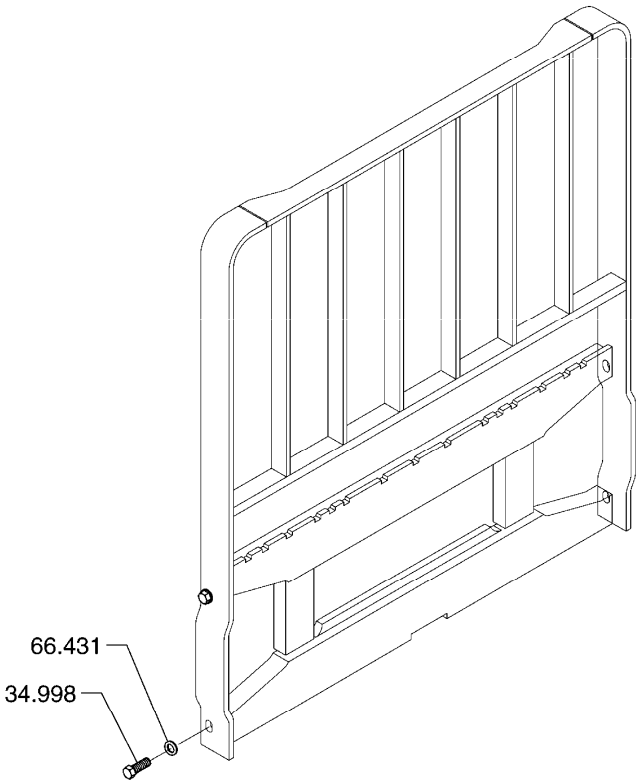

LOAD BACK REST **34-044**

34.998	FASTENER, LOAD SAFETY BACK REST 패스너
66.431	RETAINER, LBR CAPSCREW 리테이너

www.truck-freeworkshop.com/clark/

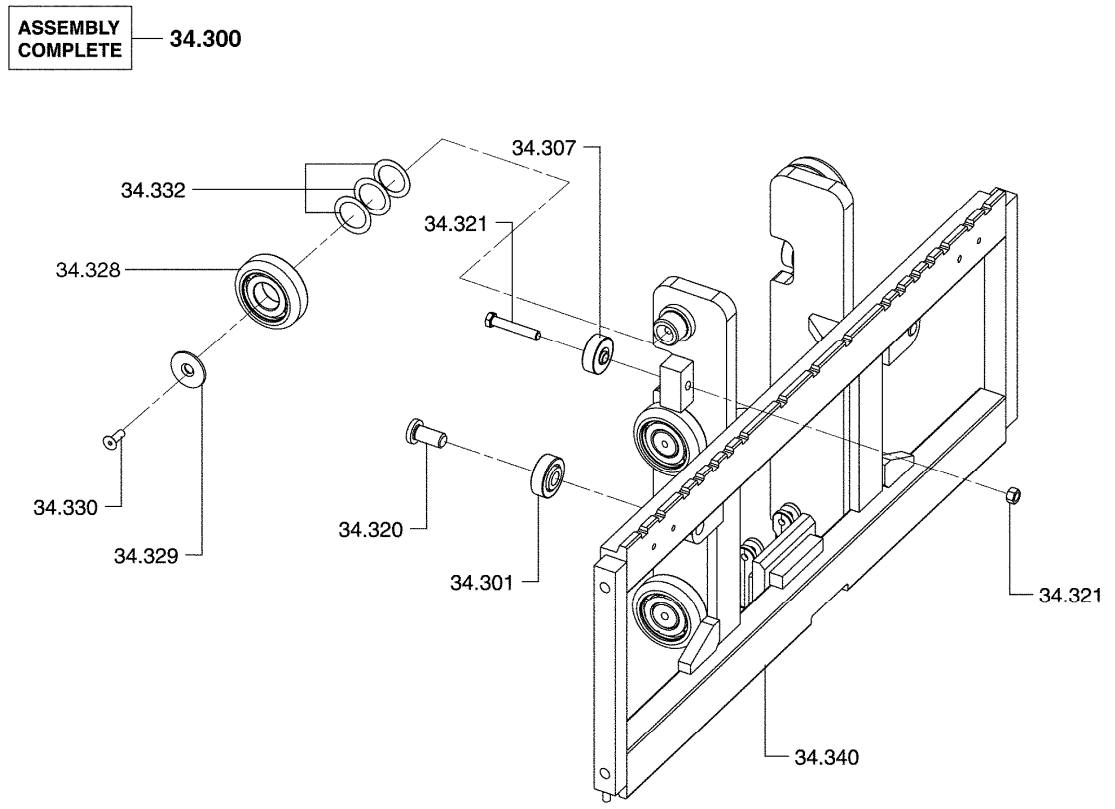

LIFT CARRIAGE ASSEMBLY **34-134**

34.300 ASSEMBLY, FORK BARS & CARRIAGE
캐리지

34.301 ROLLER, CARRIAGE OUTER THRUST
롤러

34.307 ROLLER, CARRIAGE INNER THRUST
롤러

34.320 SHAFT, CARRIAGE OUTER THRUST ROLLER
샤프트

34.321 FASTENER, CARRIAGE ROLLER SHAFT
패스너

34.328 ROLLER, CARRIAGE CAPTIVE
롤러

34.329 RETAINER, CARRIAGE CAPTIVE ROLLER
리테이너

34.330 FASTENER, CARRIAGE CAPTIVE ROLLER RETAINER
패스너

34.332 SHIM, CARRIAGE CAPTIVE ROLLER
심

www.truck-freeworkshop.com/clark/

34.340 CARRIAGE WELDED ASSEMBLY
캐리지용접물

www.truck-freeworkshop.com/clark/

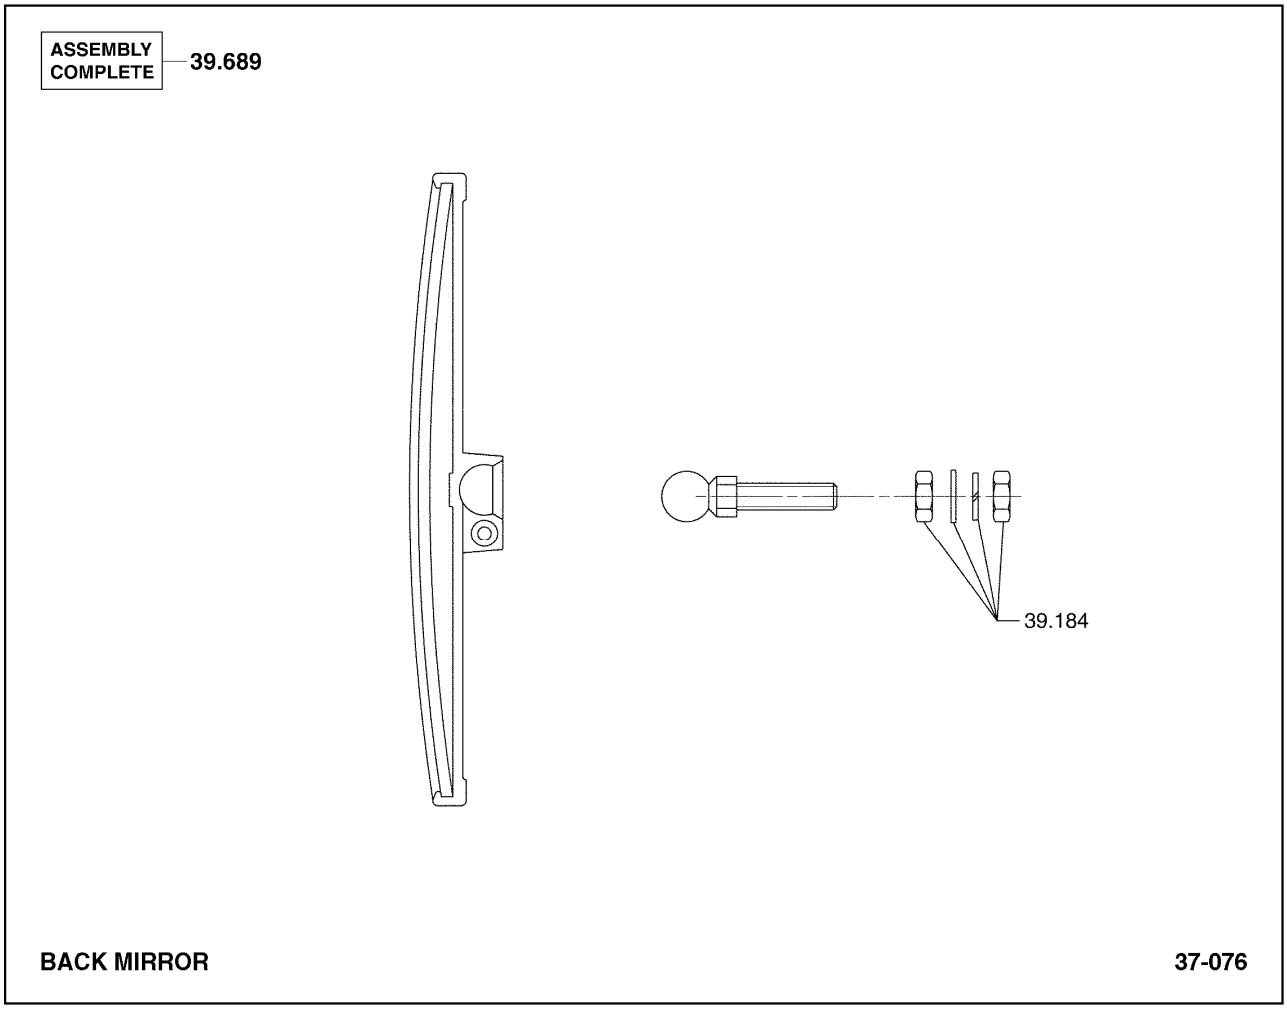

39.184 FASTENER, REAR VIEW MIRROR
패스너

39.689 MIRROR, REAR VIEW
미러

www.truck-freeworkshop.com/clark/

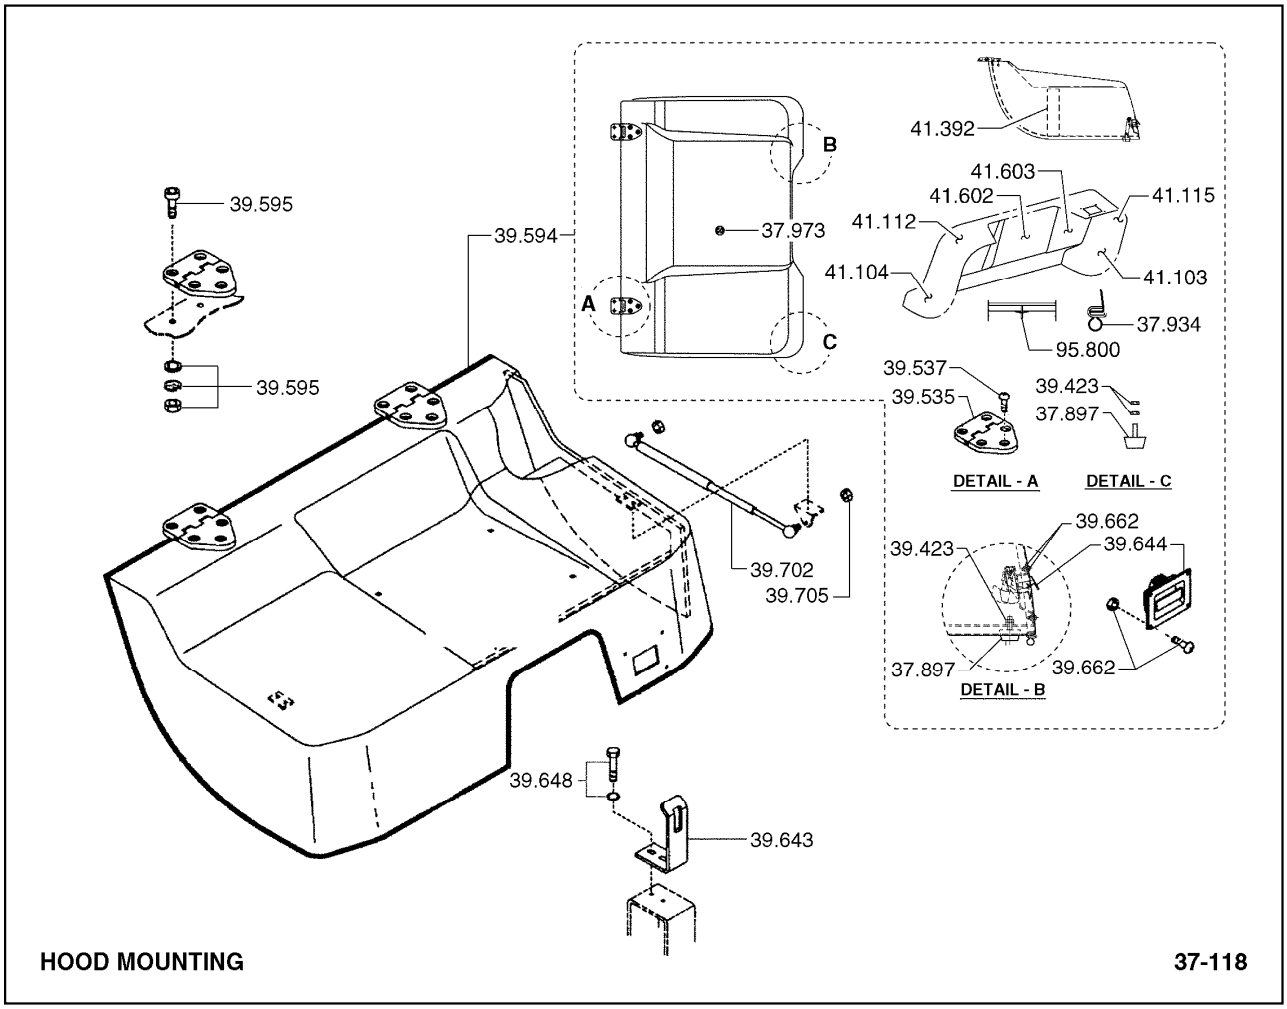

37.897 BUMPER, TOP HOOD
범퍼

37.934 SEAL, HOOD ACCESS COVER
시일

37.973 GROMMET, SEAT WIRING HARNESS
그로멧

39.423 FASTENER, TOP HOOD
패스너

39.535 BRACKET, TOP HOOD MOUNTING
브라켓

39.537 FASTENER, TOP HOOD MOUNTING BRACKET
패스너

39.594 HOOD, TOP
후드

39.595 FASTENER, TOP HOOD
패스너

39.643 CATCH, TOP HOOD LATCH
캐치

www.truck-freeworkshop.com/clark/

39.644	LATCH, TOP HOOD 래치
39.648	FASTENER, TOP HOOD LATCH CATCH 패스너
39.662	FASTENER, TOP HOOD LATCH BRACKET 패스너
39.702	PROP, HOOD 프롭
39.705	FASTENER, HOOD PROP 패스너
41.103	BACKING PLATE, FILLER OPENING SOUND SEAL 백킹플레이트
41.104	SOUND SEAL, RH SIDE HOOD 사운드시일
41.112	SOUND SEAL, RH SIDE HOOD FRONT 사운드시일
41.115	SCUFF PLATE, FLOOR PAD 스커프플레이트
41.392	SOUND SEAL, TOP HOOD 사운드시일
41.602	SOUND SEAL, ENGINE HOOD 사운드시일
41.603	SOUND SEAL, ENGINE HOOD 사운드시일
95.800	FASTENER, SOUND SEAL 패스너

www.truck-freeworkshop.com/clark/

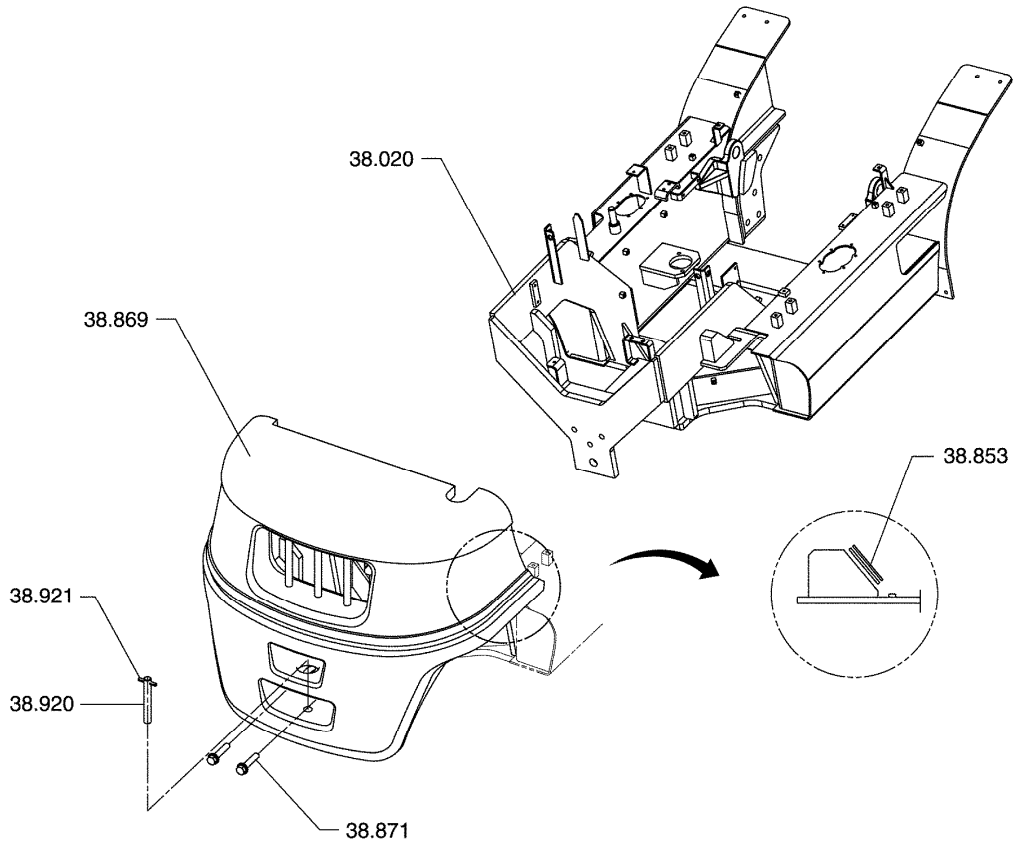

FRAME & COUNTERWEIGHT **38-113**

38.020	FRAME ASSEMBLY 프레임
38.853	SHIM, COUNTERWEIGHT 심
38.869	COUNTERWEIGHT 카운터웨이트
38.871	FASTENER, COUNTERWEIGHT (UPPER) CONTINUED 패스너
38.920	PIN, COUPLER 핀
38.921	PIN, COUPLER PIN CROSS 핀

www.truck-freeworkshop.com/clark/

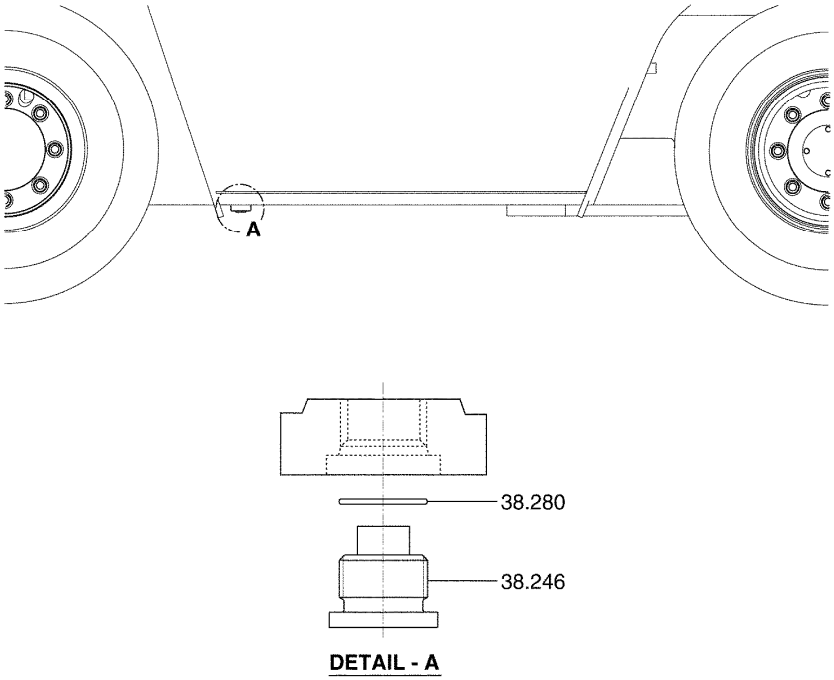

FRAME TANK BOTTOM PLUG **38-270**

38.246 PLUG, FRAME BOTTOM MAGNETIC
플러그

38.280 SEAL, FRAME BOTTOM MAGNETIC PLUG
실

www.truck-freeworkshop.com/clark/

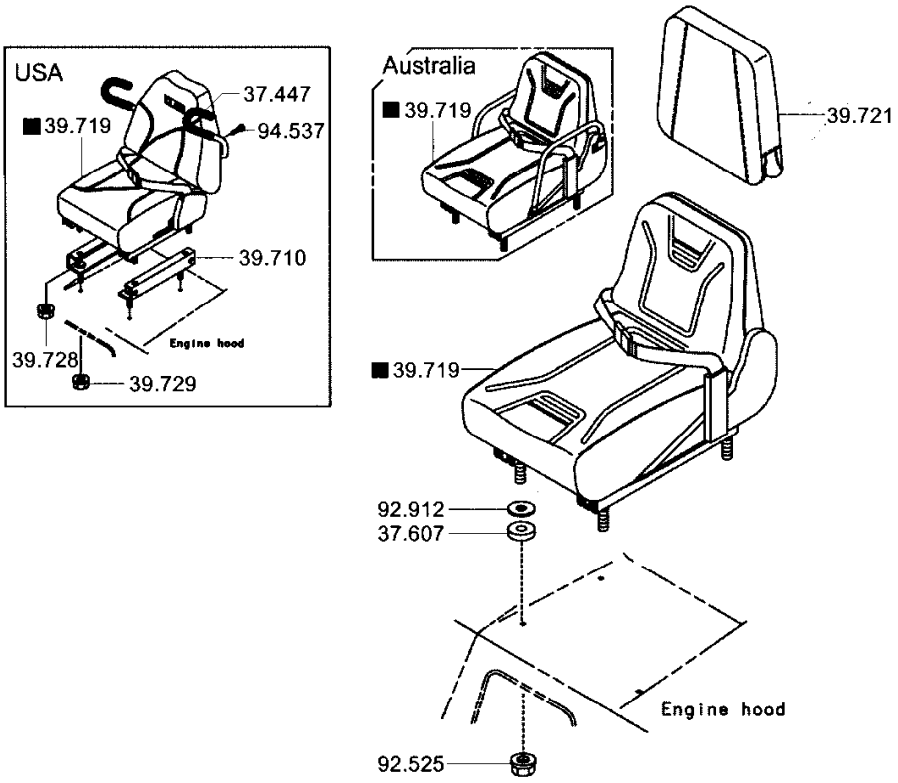

SEAT MONUTING 39-195

37.447	RESTRAINT, OPERATOR SEAT LATERAL 레스트레인트
37.607	RUBBER, SEAT CUSHION MOUNTING PLATE 러버
39.710	SUPPORT, SEAT ADJUSTOR (RH) 서포트
39.719	SEAT ASSEMBLY 시트
39.721	CUSHION, SEAT BACK REST 쿠션
39.728	FASTENER, SEAT FRAME TO ADJUSTOR 패스너
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
92.525	NUT, SEAT SUPPORT FASTENER 너트
92.912	WASHER, SEAT SUPPORT FASTENER 와셔

www.truck-freeworkshop.com/clark/

94.537 FASTENER, OPERATOR SEAT LATERAL RESTRAINT
패스너

www.truck-freeworkshop.com/clark/

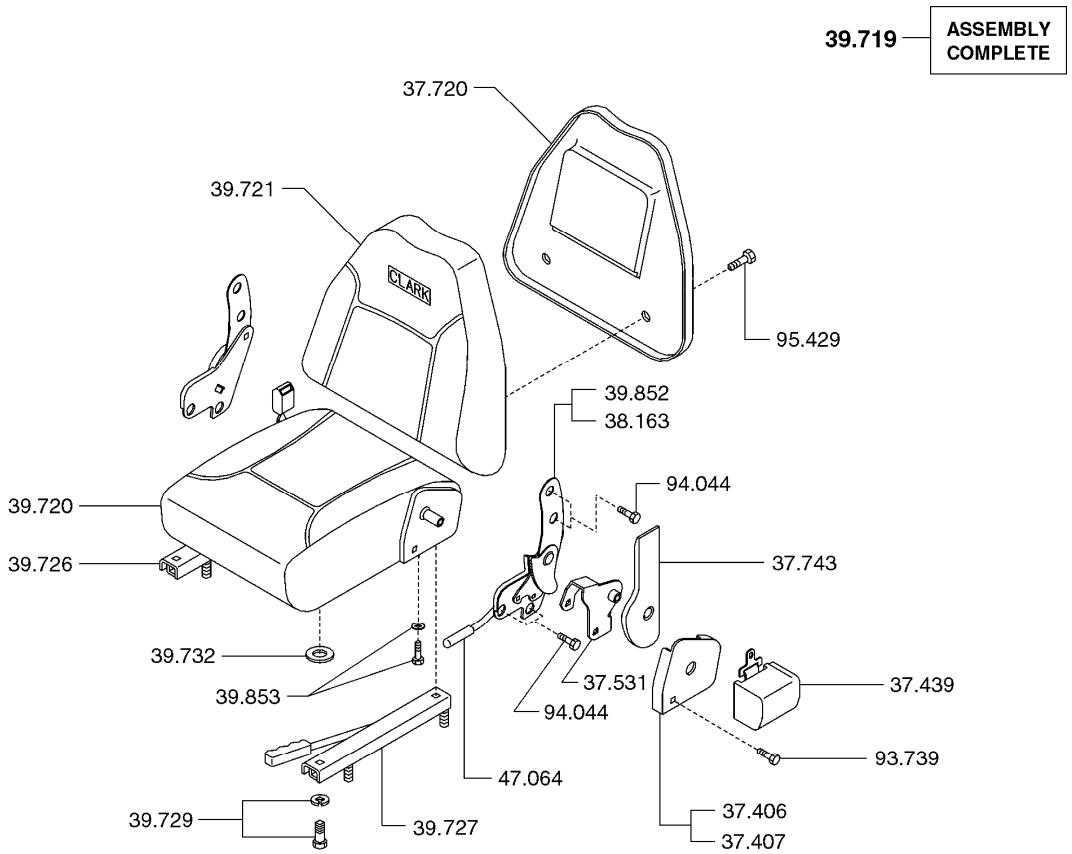

SEAT ASSEMBLY **39-661**

37.406 BRACKET, SEAT BACK REST COVER LH
브라켓

37.407 BRACKET, SEAT BACK REST COVER RH
브라켓

37.439 SAFETY BELT, SEAT
세이프티벨트

37.531 BRACKET, SEAT SAFETY BELT MOUNTING
브라켓

37.720 COVER, OPERATOR SEAT LATERAL RESTRAINT
커버

37.743 COVER, SEAT SUPPORT LATCH
커버

38.163 BRACKET, SEAT SUPPORT RH
브라켓

39.719 SEAT ASSEMBLY
시트

39.720 CUSHION, SEAT
쿠션

www.truck-freeworkshop.com/clark/

39.721	CUSHION, SEAT BACK REST 쿠션
39.726	ADJUSTOR, SEAT 어드져스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.732	SPACER, SEAT FRAME TO ADJUSTOR 스페이서
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
95.429	FASTENER, SEAT LATERAL RESTRAINT COVER 패스너

www.truck-freeworkshop.com/clark/

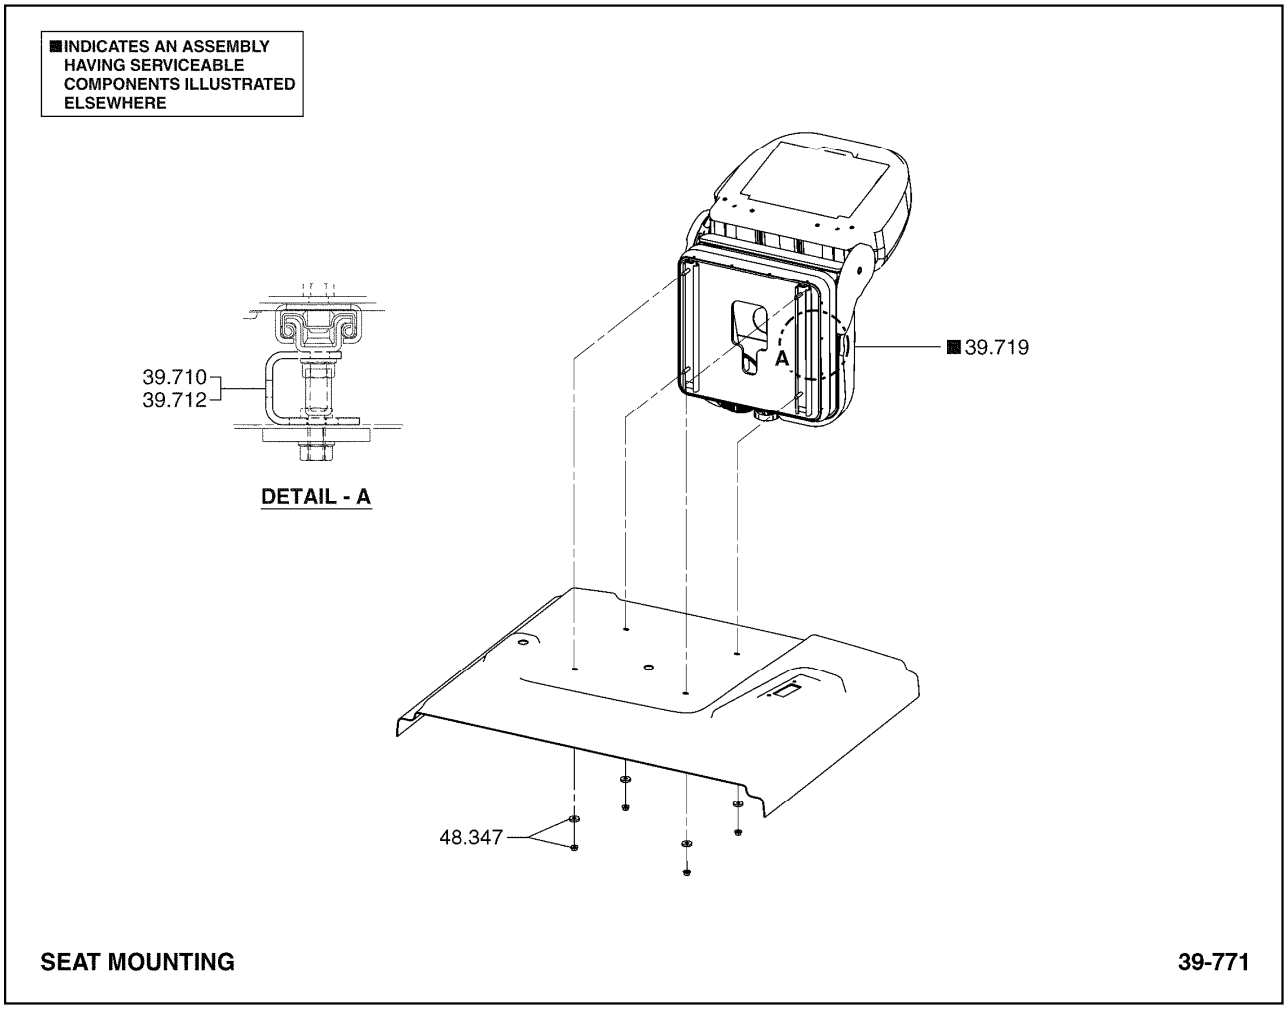

39.710 SUPPORT, SEAT ADJUSTOR (RH)
서포트

39.712 SUPPORT, SEAT ADJUSTOR (LH)
서포트

39.719 SEAT ASSEMBLY
시트

48.347 FASTENER, SEAT ASSEMBLY
패스너

www.truck-freeworkshop.com/clark/

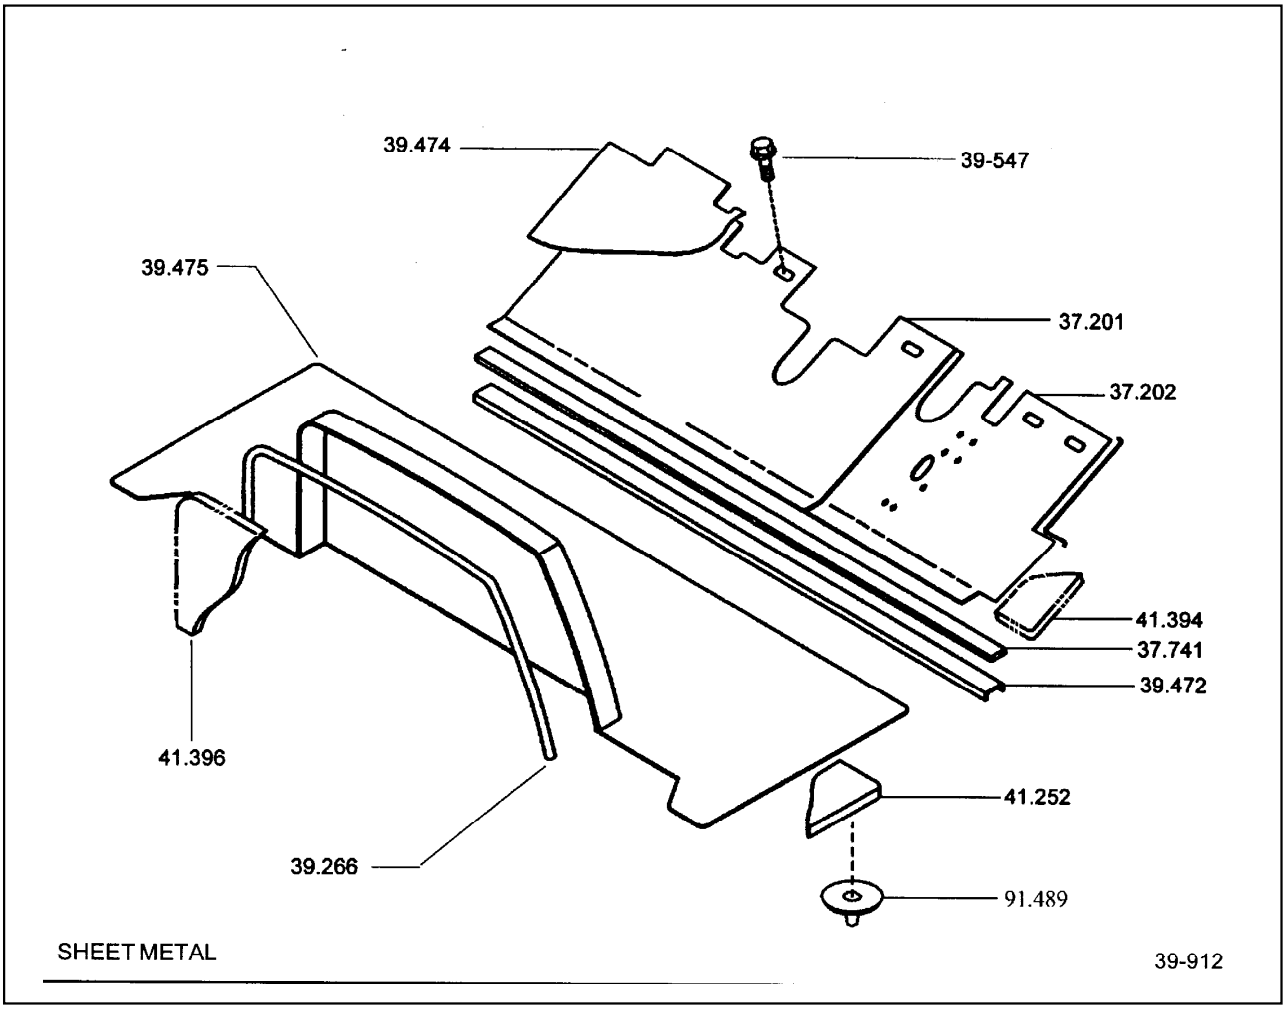

37.201	PANEL, LH SIDE 판넬
37.202	PANEL, RH SIDE 판넬
37.741	SOUND ABSORBER, FLOOR PLATE 흡음재
39.266	WEATHERSEAL, CENTER FLOOR PLATE 웨더시일
39.472	PLATE, FRONT FLOOR LH 플레이트
39.474	PAD, FLOOR BOARD NON-SLIP 패드
39.475	PLATE, FRONT FLOOR 플레이트
39.547	FASTENER, COWL ASSEMBLY 패스너
41.252	SOUND SEAL, FLOOR PLATE FRONT 사운드시일

www.truck-freeworkshop.com/clark/

41.394	SOUND ABSORBER, FLOOR PLATE - REAR 흡음재
41.396	SOUND ABSORBER, SEAT SUPPORT PANEL 흡음재
91.489	FASTENER, FLOOR PLATE 패스너

www.truck-freeworkshop.com/clark/

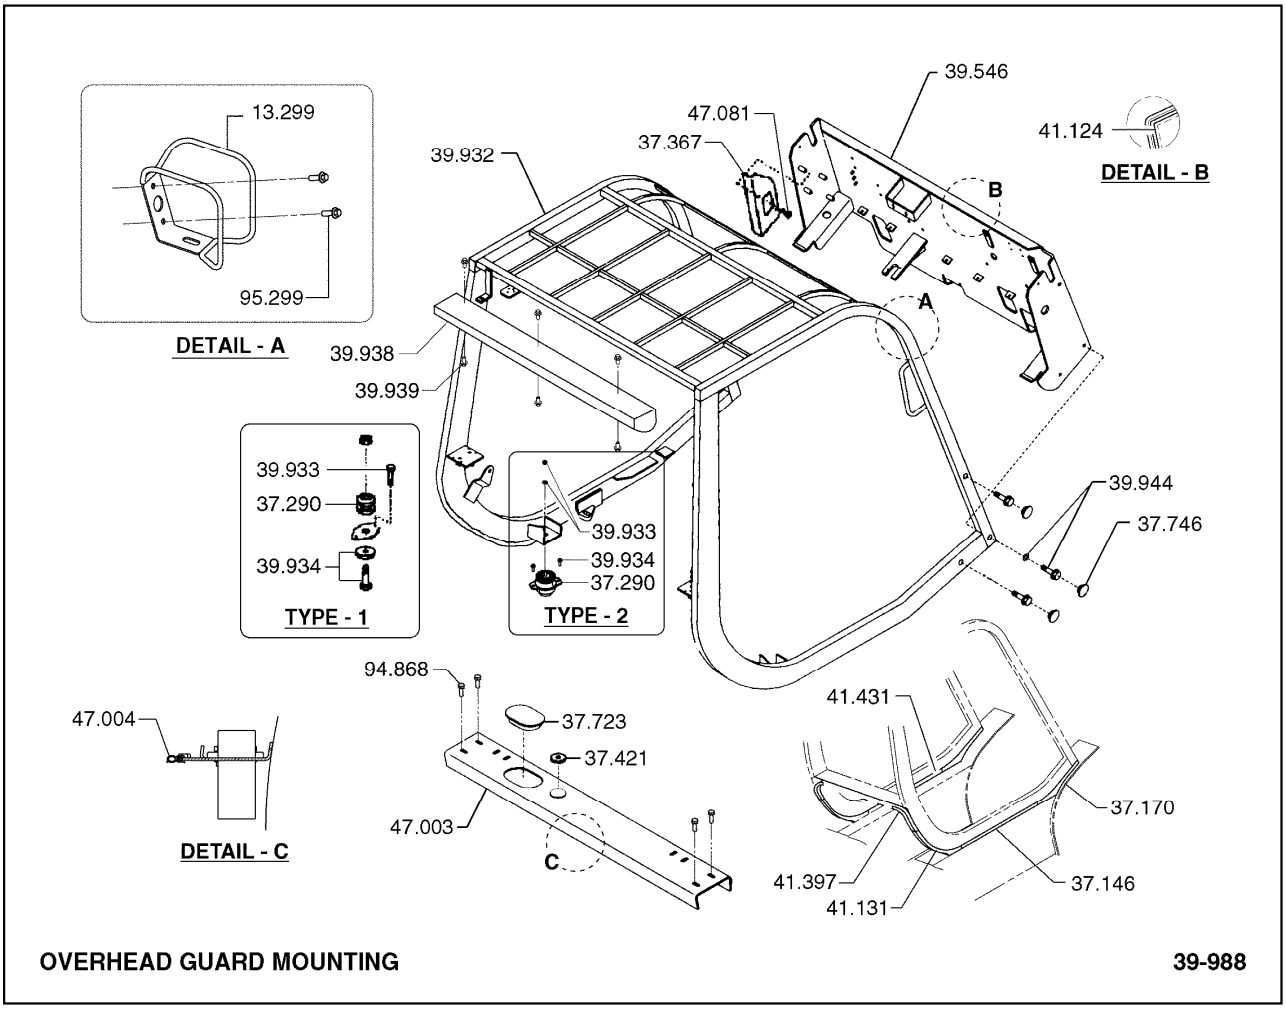

13.299	GUARD, HEADLIGHT 가드
37.146	SOUND ABSORBER, OVERHEAD GUARD 흡음재
37.170	SOUND ABSORBER, FRONT SIDE PANEL 흡음재
37.290	DAMPENER, OVERHEAD GUARD VIBRATION 댐프너
37.367	FILLER, COWL (LH) 필러
37.421	GROMMET, OVERHEAD GUARD REAR SUPPORT PIVOT 그로멧
37.723	PLUG, RADIATOR COVER HOLE 플러그
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
39.546	COWL ASSEMBLY 카울

www.truck-freeworkshop.com/clark/

39.932	GUARD, OVERHEAD 가드
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
39.944	FASTENER, OVERHEAD GUARD BRACKET 패스너
41.124	SOUND ABSORBER, COWL 흡음재
41.131	SOUND ABSORBER, LOWER REAR PANEL 흡음재
41.397	SOUND ABSORBER, RADIATOR COVER 흡음재
41.431	SOUND SEAL, FRAME UPPER LH 사운드시일
47.003	COVER, RADIATOR 커버
47.004	SEAL, RADIATOR COVER 시일
47.081	FASTENER, COWL COVER MOUNTING BRACKET 패스너
94.868	FASTENER, RADIATOR SUPPORT 패스너
95.299	FASTENER, HEADLAMP GUARD 패스너

www.truck-freeworkshop.com/clark/

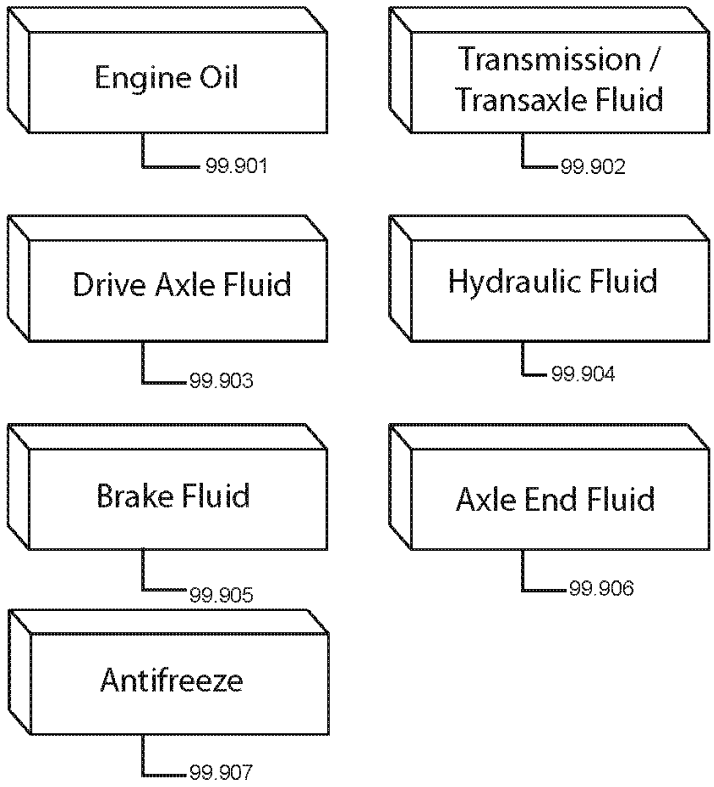

NOTE: All Trucks Do Not Use All Fluid Key Numbers

TRUCK FLUIDS 40-260

99.901 ENGINE OIL
엔진오일

99.902 TRANSMISSION FLUID
트랜스미션오일

99.903 DRIVE AXLE FLUID
드라이브액슬

99.904 HYDRAULIC SUMP OIL
유압섬프오일

99.905 BRAKE FLUID
브레이크오일

99.906 AXLE END FLUID
액슬엔드오일

99.907 ENGINE ANTIFREEZE
부동액

www.truck-freeworkshop.com/clark/

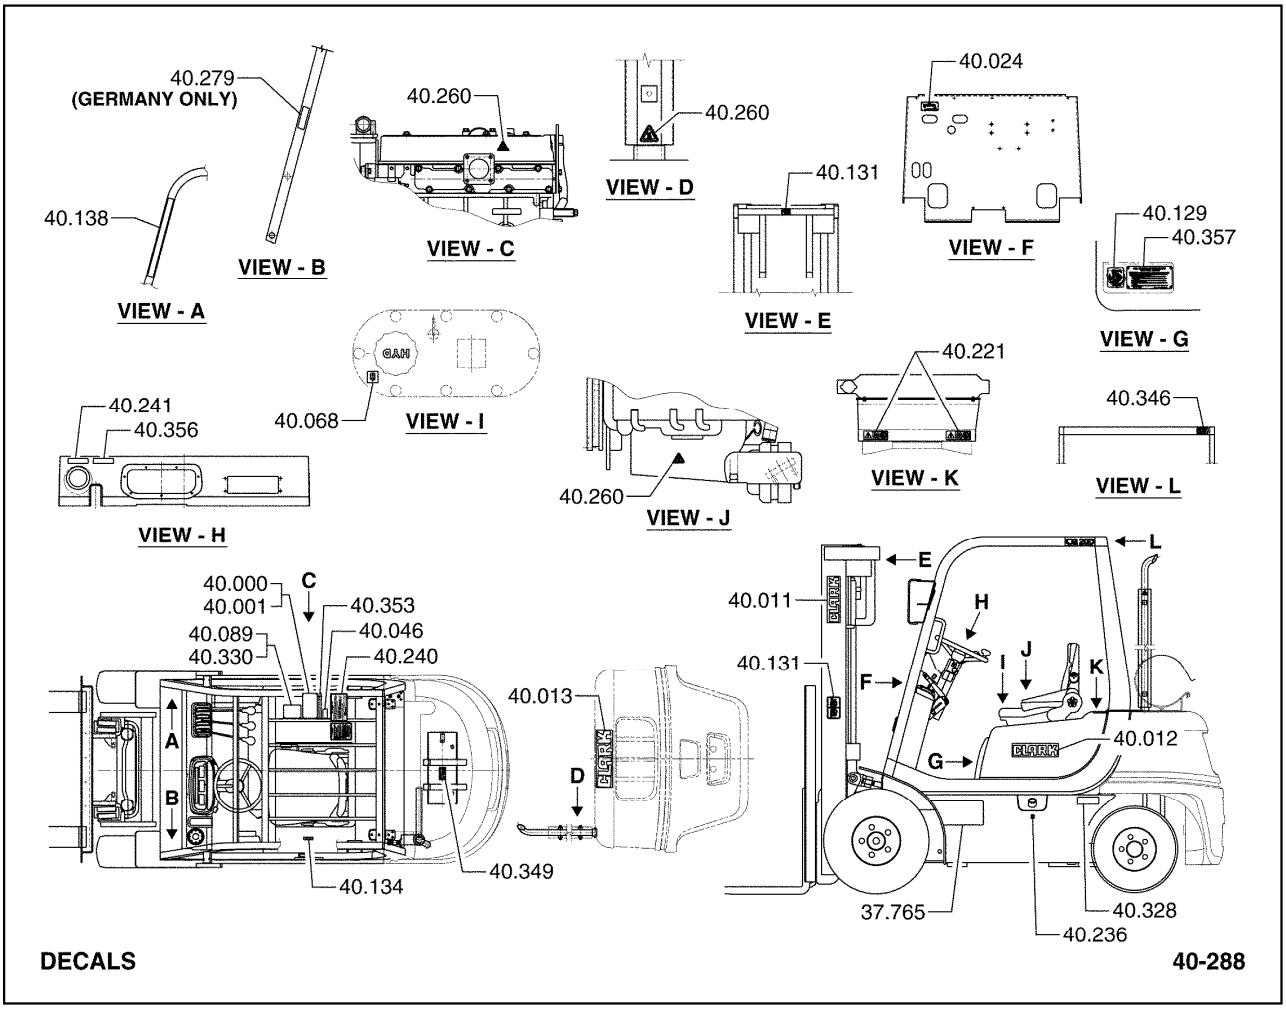

37.765 TAPE, CAB FRONT FRAME
테이프

40.000 PLATE, CAPACITY & SERIAL NUMBER
플레이트

40.001 FASTENER, CAPACITY & SERIAL PLATE
패스너

40.011 DECAL, UPRIGHT
데칼

40.012 DECAL, CLARK LOGO-SMALL
데칼

40.013 DECAL, CLARK LOGO-LARGE
데칼

40.024 PLATE, UNDERWRITERS LABEL
플레이트

40.046 DECAL, TIRE PRESSURE
데칼

40.068 DECAL, HYD-SYSTEM OIL
데칼

www.truck-freeworkshop.com/clark/

40.089	PLATE, SAFETY INSTRUCTION 플레이트
40.129	PLATE, DUEL FUEL SELECTOR SWITCH 플레이트
40.131	LEGEND, SAFETY 범례
40.134	DECAL, OPERATORS MANUAL LOCATION 데칼
40.138	DECAL, SAFETY 데칼
40.221	DECAL, FAN 데칼
40.236	DECAL, FUEL 데칼
40.240	DECAL, FUEL WARNING 데칼
40.241	DECAL, BRAKE OIL SPEC 데칼
40.260	DECAL, HOT SURFACE WARNING 데칼
40.279	DECAL, STARTING PROCEDURE 데칼
40.328	DECAL, WHEEL NUT WARNING 데칼
40.330	PLATE. ATTACHMENT NAME 플레이트
40.346	DECAL, OVERHEAD GUARD DROP TEST *
40.349	PLATE, LESS LP TANK *
40.353	DECAL, AUTHORIZED REPRESENTATIVE *
40.356	DECAL-FUEL WARNING *
40.357	DECAL, FUEL SELECTOR *

www.truck-freeworkshop.com/clark/

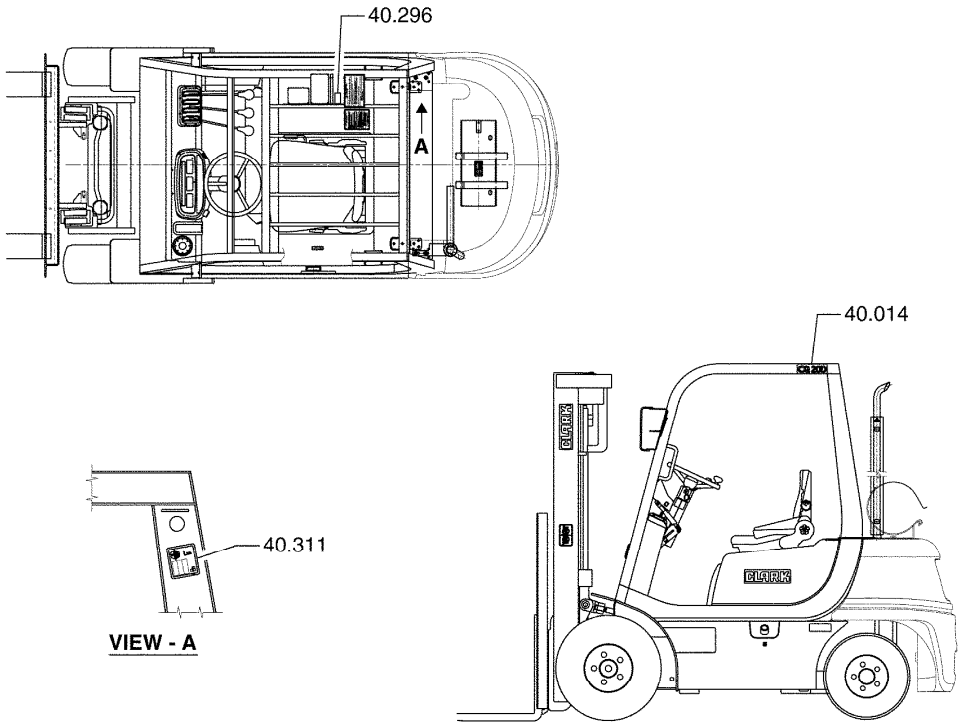

MODEL & SPECIFICATION DECAL **40-289**

40.014	DECAL, MODEL NAME 데칼
40.296	DECAL, TIRE PRESSURE 데칼
40.311	DECAL, SOUND POWER LEVEL 데칼

www.truck-freeworkshop.com/clark/

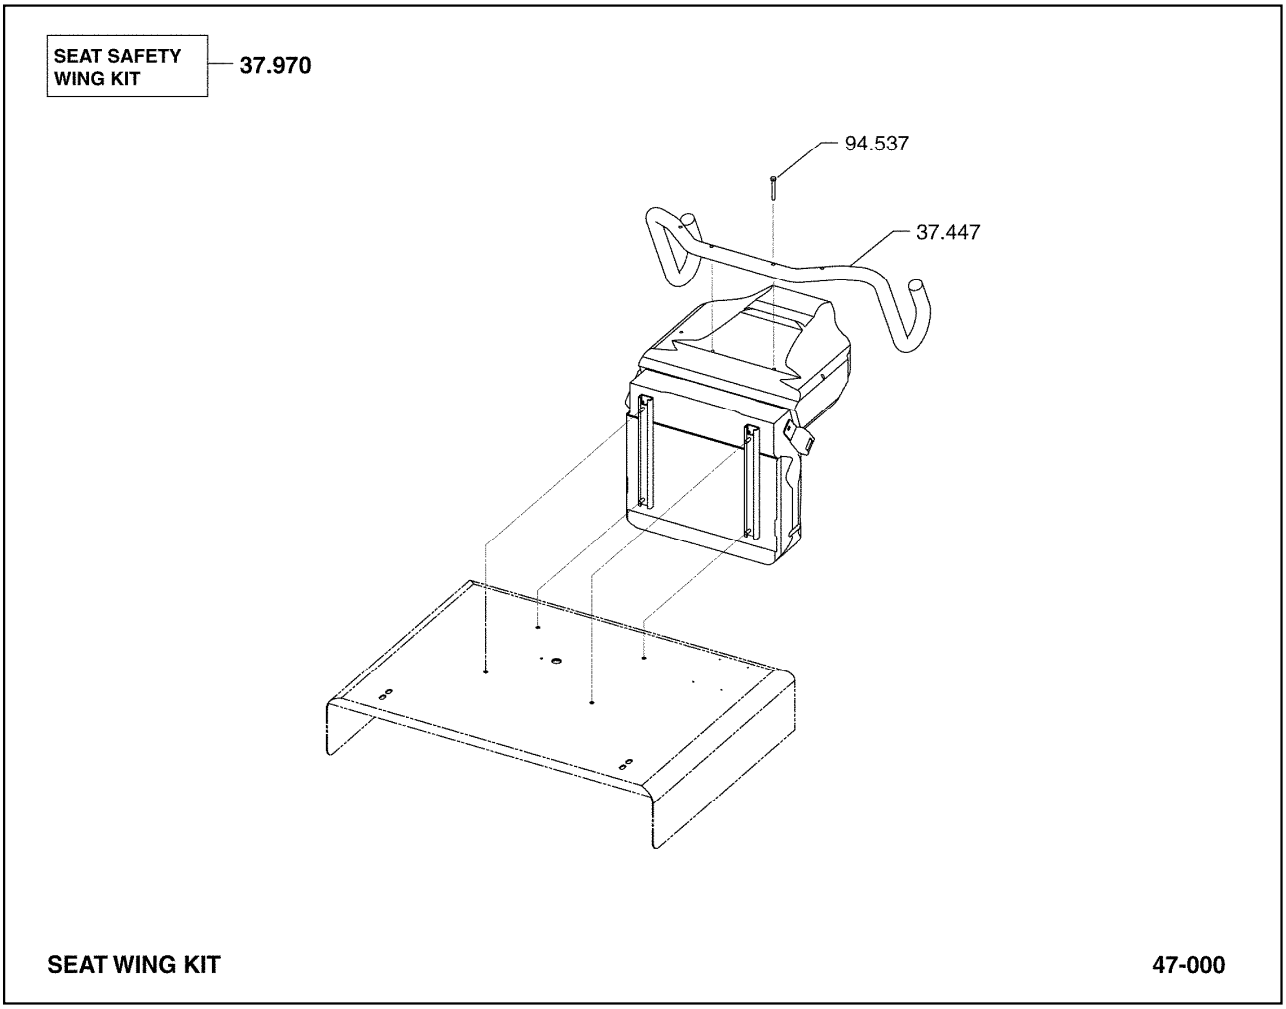

37.447	RESTRAINT, OPERATOR SEAT LATERAL 레스트레인트
37.970	KIT, SEAT SAFETY 킷
94.537	FASTENER, OPERATOR SEAT LATERAL RESTRAINT 패스너

www.truck-freeworkshop.com/clark/

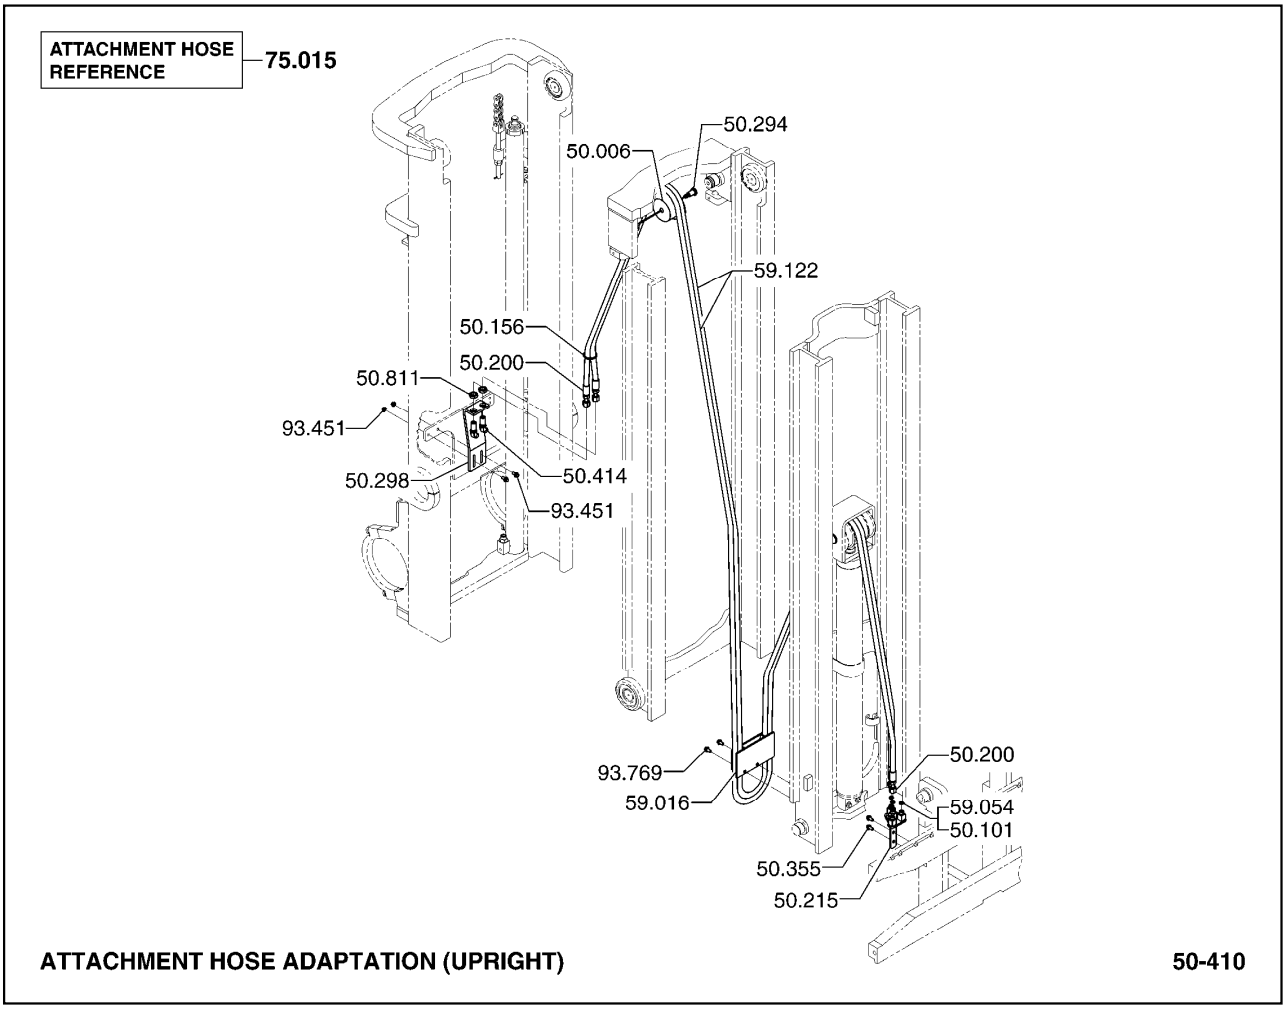

50.006 SHEAVE, DEVICE HOSE UPPER
쉬브

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
시일

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.294 PIVOT, DEVICE HOSE UPPER SHEAVE
피봇

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓

50.355 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너

50.414 FITTING, DEVICE HOSE CONNECTOR
피팅

www.truck-freeworkshop.com/clark/

50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 연결블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
75.015	MODULE, ATTACHMENT HOSE LINES *
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

www.truck-freeworkshop.com/clark/

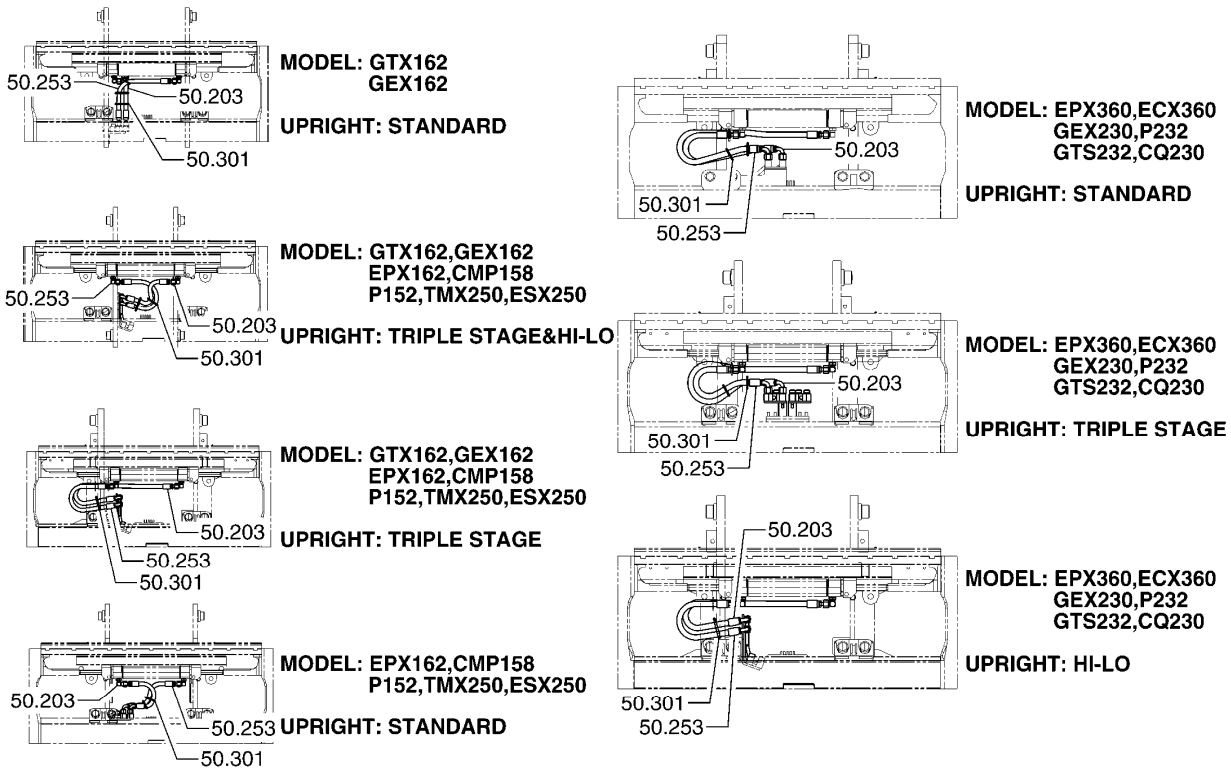

50.203 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.253 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.301 CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립

www.truck-freeworkshop.com/clark/

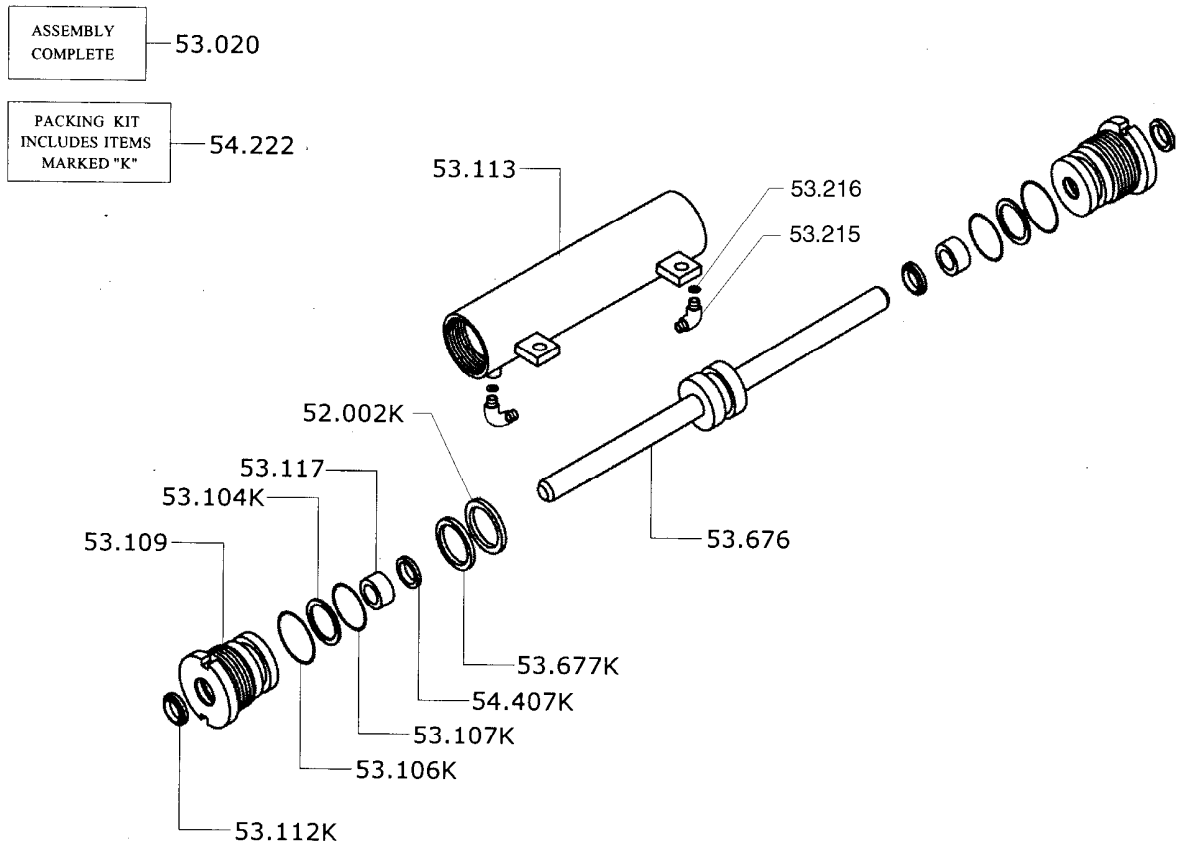

SIDESHIFT CYLINDER **53-008**

52.002	RING, CLAMP SIDE SHIFT LIMIT CYL PISTON WEAR 링
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.104	RING, SIDE SHIFTER CYL PISTON PACKING BACK-UP 링
53.106	SEAL, SIDE SHIFTER CYLINDER GLAND 시일
53.107	RING, SIDE SHIFT CYL GLAND SEAL BACK-UP 링
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.112	WIPER, SIDE SHIFTER CYLINDER PISTON ROD 와이퍼
53.113	CYLINDER ASSEMBLY, WELDED SIDE SHIFTER 실린더
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱

www.truck-freeworkshop.com/clark/

53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.216	SEAL, SIDE SHIFTER CYLINDER ROD PORT FITTING 시일
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
53.677	SEAL, SIDE SHIFTER CYLINDER PISTON 시일
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹킷
54.407	SEAL, SIDE SHIFTER CYLINDER PORT ROD 시일

www.truck-freeworkshop.com/clark/

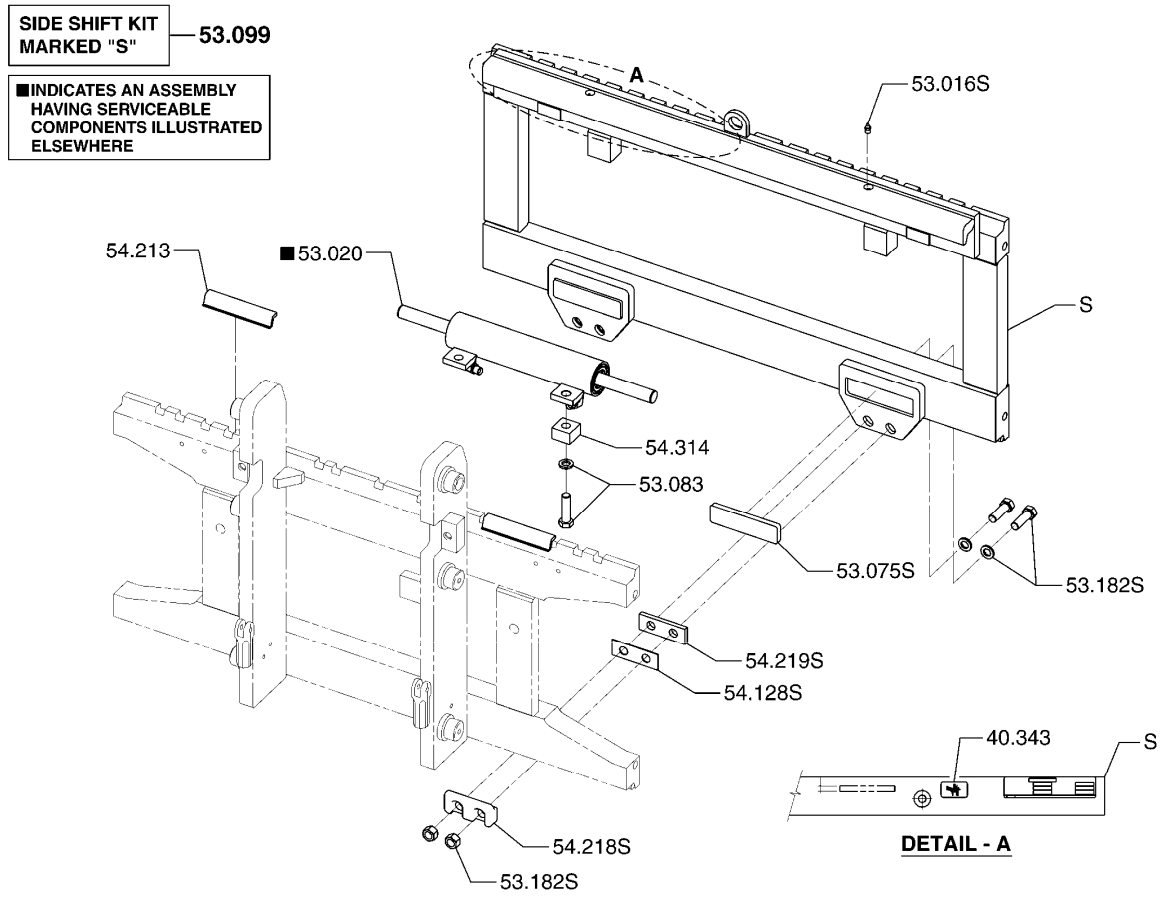

40.343	DECAL, ATTACHMENT SAFETY *
53.016	FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH 피팅
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.099	SIDE SHIFTER, DEVICE 사이드쉬프트
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
54.128	SPACER, SIDE SHIFTER MOVEABLE FRAME BEARING 스페이서
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링

www.truck-freeworkshop.com/clark/

54.218 HOOK, SIDE SHIFTER HANGER
후크

54.219 SPACER, SIDE SHIFTING BASE PLATE HANGER
스페이서

54.314 SPACER, SIDE SHIFTER CYLINDER REAR
스페이서

www.truck-freeworkshop.com/clark/

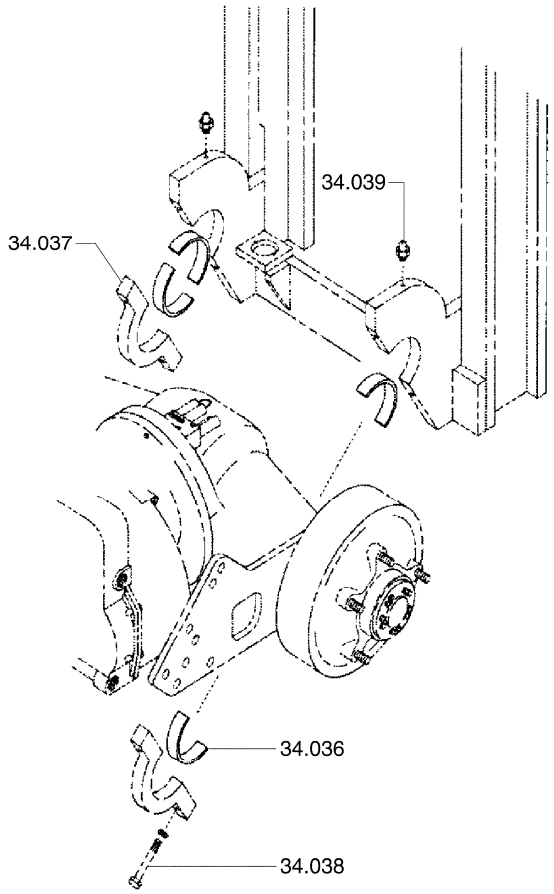

UPRIGHT MOUNTING **66-018**

34.036 BUSHING, UPRIGHT TRUNNION
부싱

34.037 CAP, UPRIGHT TRUNNION
캡

34.038 FASTENER, UPRIGHT TRUNNION CAP
패스너

34.039 FITTING-LUB, UPRIGHT TRUNNION
피팅

www.truck-freeworkshop.com/clark/

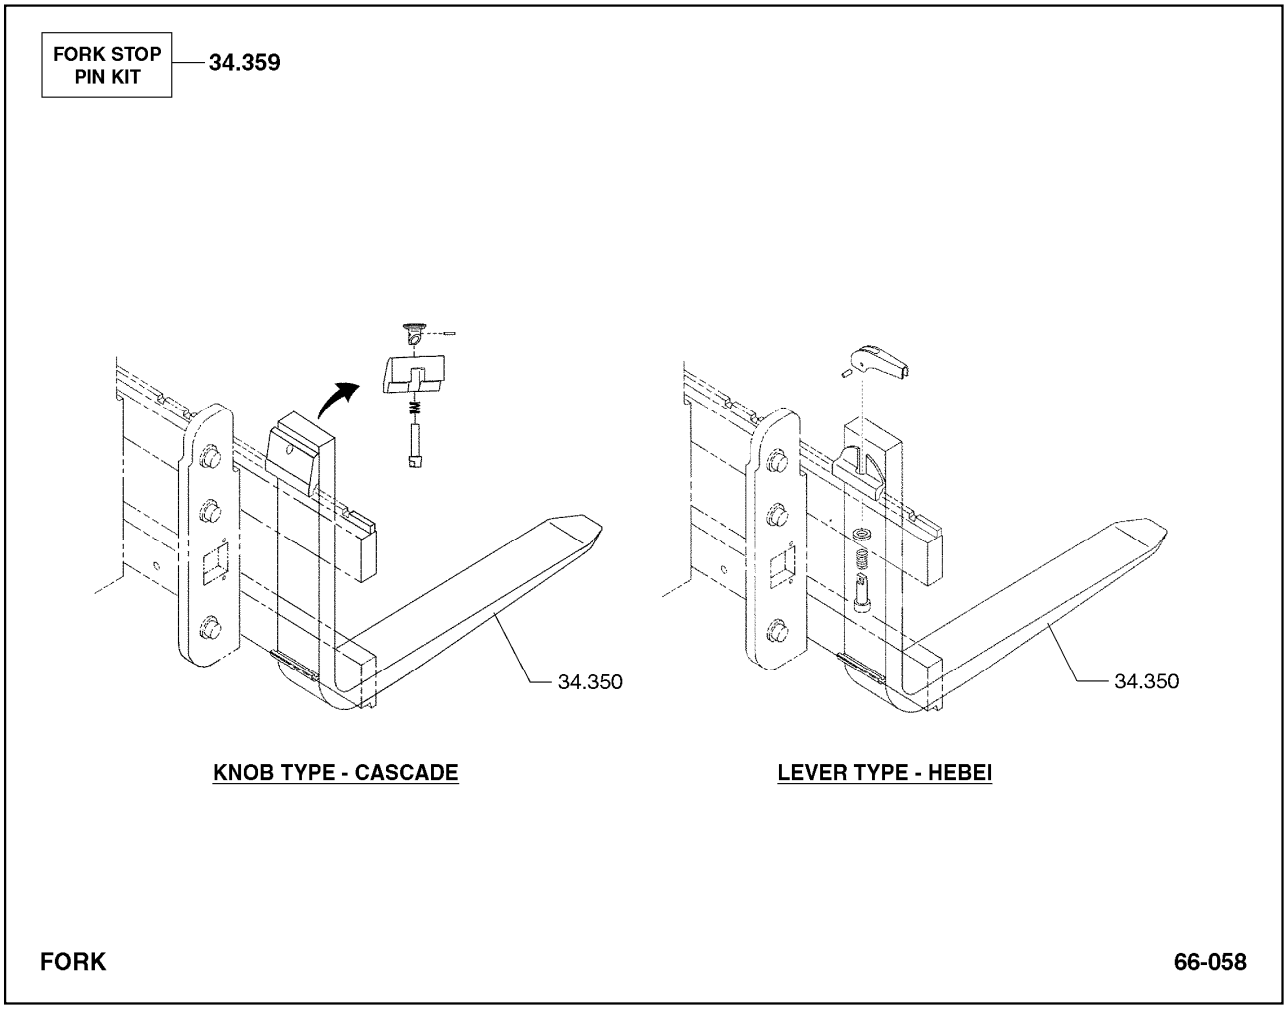

34.350 FORK ASSEMBLY
포크

34.359 KIT, FORK STOP PIN (CAPTIVE)
킷

www.truck-freeworkshop.com/clark/

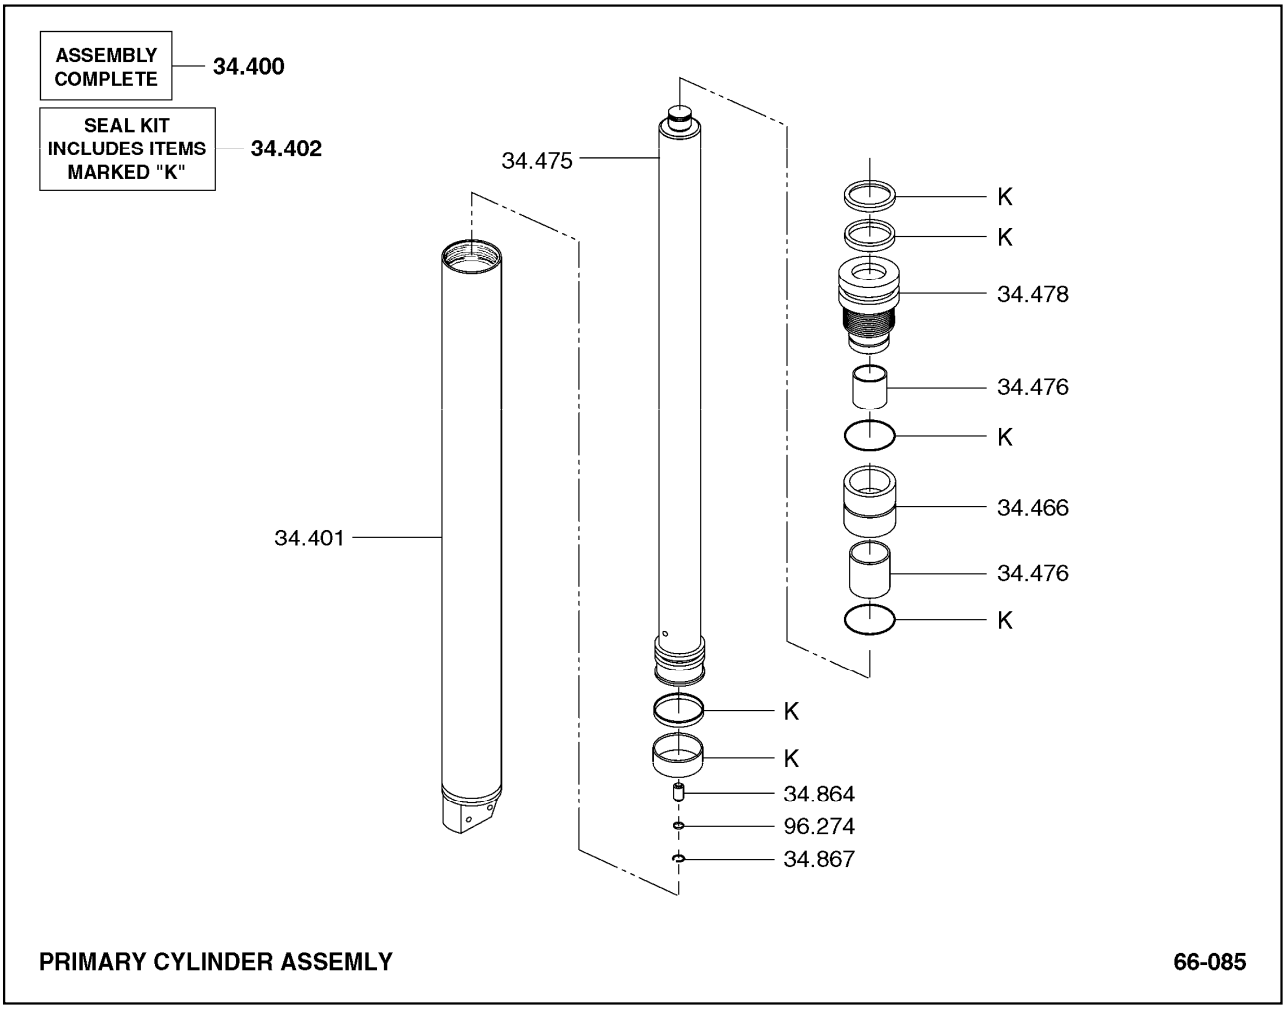

34.400 CYLINDER ASSEMBLY, LIFT
실린더

34.401 BARREL, LIFT CYLINDER
배럴

34.402 SEAL & PACKING KIT, LIFT CYLINDER
시일과팩킹킷

34.466 SPACER, LIFT CYLINDER FEED TUBE
스페이서

34.475 ROD, LIFT CYLINDER
로드

34.476 BEARING, LIFT CYLINDER ROD
베어링

34.478 GLAND, LIFT CYLINDER
그랜드

34.864 CHECK VALVE, LIFT CYLINDER
체크밸브

34.867 RETAINER, LIFT CYLINDER CHECK VALVE
리테이너

www.truck-freeworkshop.com/clark/

96.274 WASHER, LIFT CYLINDER CHECK VALVE
욱셔

www.truck-freeworkshop.com/clark/

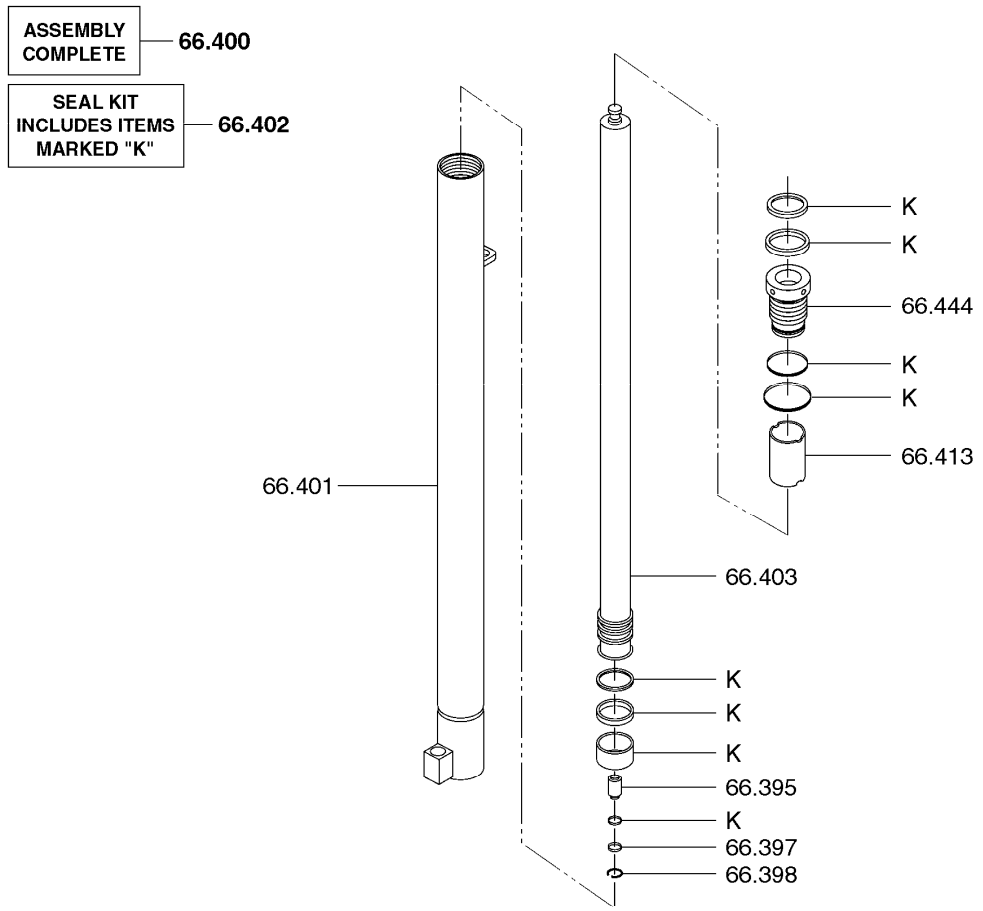

SECONDARY CYLINDER ASSEMBLY **66-160**

66.395 CHECK VALVE, FINAL LIFT CYLINDER
체크밸브

66.397 WASHER, FINAL LIFT CYLINDER CHECK VALVE
와셔

66.398 SNAP RING, FINAL LIFT CYLINDER CHECK VALVE
스냅링

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

66.401 BARREL, FINAL LIFT CYLINDER
배럴

66.402 PACKING KIT, FINAL LIFT CYLINDER
패킹킷

66.403 PISTON ROD, FINAL LIFT CYLINDER
피스톤로드

66.413 SPACER, FINAL LIFT CYLINDER PISTON ROD
스페이서

66.444 GLAND, FINAL LIFT CYLINDER
그룹드

www.truck-freeworkshop.com/clark/

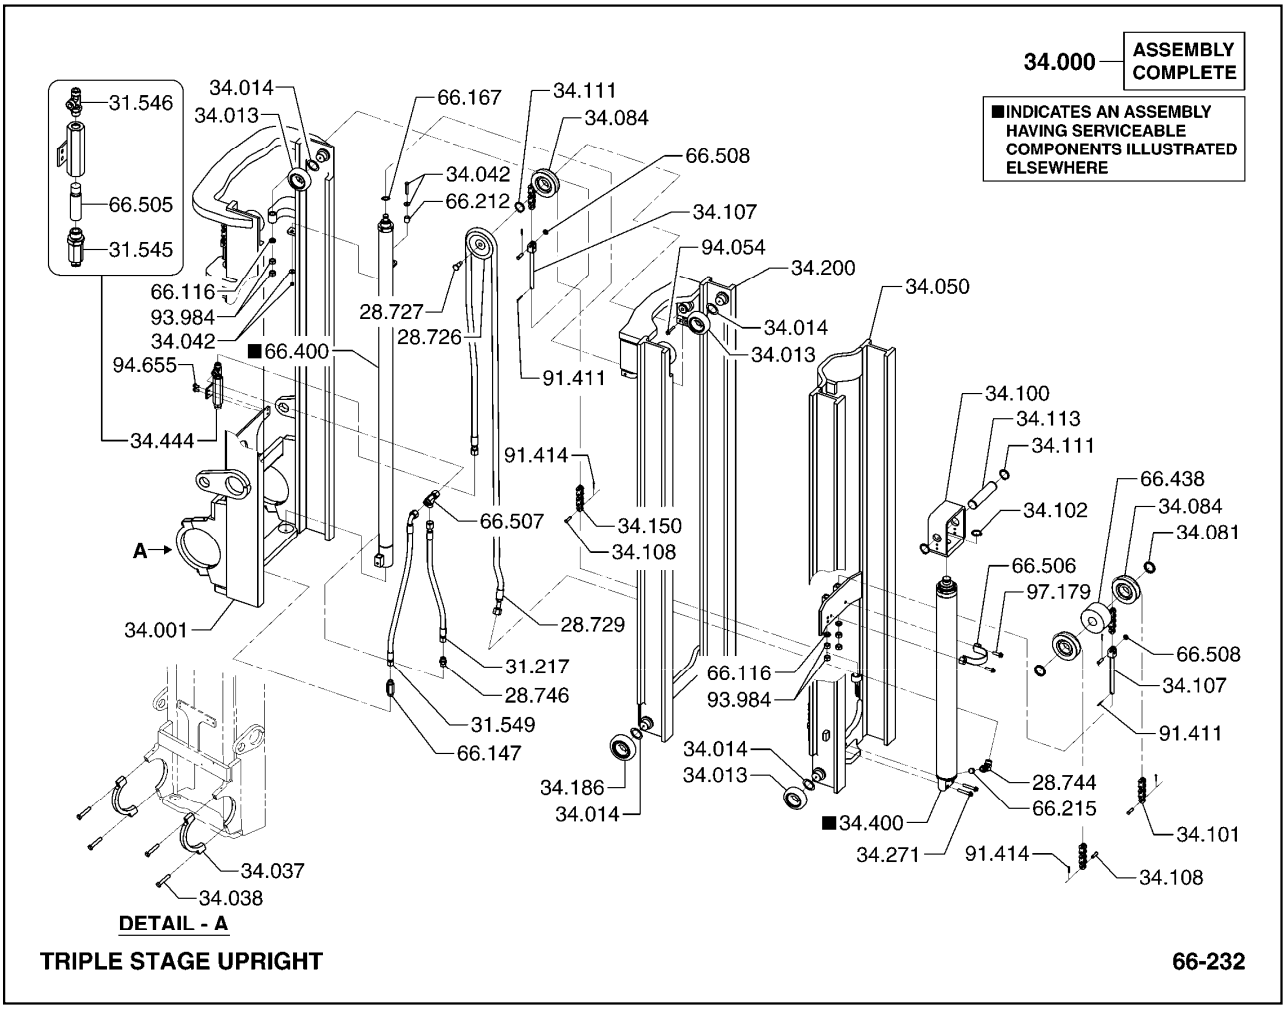

28.726	SHEAVE, LIFT CYLINDER HOSE 쉬브	34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너
28.727	PIVOT, LIFT CYLINDER HOSE SHEAVE 피봇	34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
28.729	LINE, LIFT CYLINDER 라인	34.081	SPACER, LIFT CHAIN SHEAVE CARRIER 스페이서
28.744	FITTING, LIFT CYLINDER LINE 피팅	34.084	SHEAVE, LIFT CHAIN 쉬브
28.746	FITTING, LIFT CYLINDER LINE 피팅	34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.101	CHAIN, LIFT 체인
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅	34.102	FASTENER, SHEAVE CARRIER 패스너
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅	34.107	ANCHOR, LIFT CHAIN 앵커
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.000	UPRIGHT & LIFT CYL ASSEMBLY 업라이트와실린더	34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아웃레일	34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.013	ROLLER, UPRIGHT 롤러	34.150	CHAIN, UPRIGHT RAIL LIFT 체인
34.014	SHIM, UPRIGHT ROLLER 심	34.186	ROLLER, UPRIGHT 롤러
34.037	CAP, UPRIGHT TRUNNION 캡	34.200	INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT 인터레일
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너	34.271	FASTENER, LIFT CYLINDER LOWER 패스너

www.truck-freeworkshop.com/clark/

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 벨브
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.167	SHIM, LIFT CYLINDER UPPER 심
66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
66.215	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.438	SHEAVE, HOSE 쉬브
66.505	CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE *
66.506	CLAMP, LIFT CYLINDER *
66.507	TEE, LIFT CYLINDER LINE *
66.508	SPACER, LIFT CHAIN ANCHOR FASTENER *
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너
94.655	FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK 패스너
97.179	FASTENER, LIFT CYLINDER CLAMP *

www.truck-freeworkshop.com/clark/

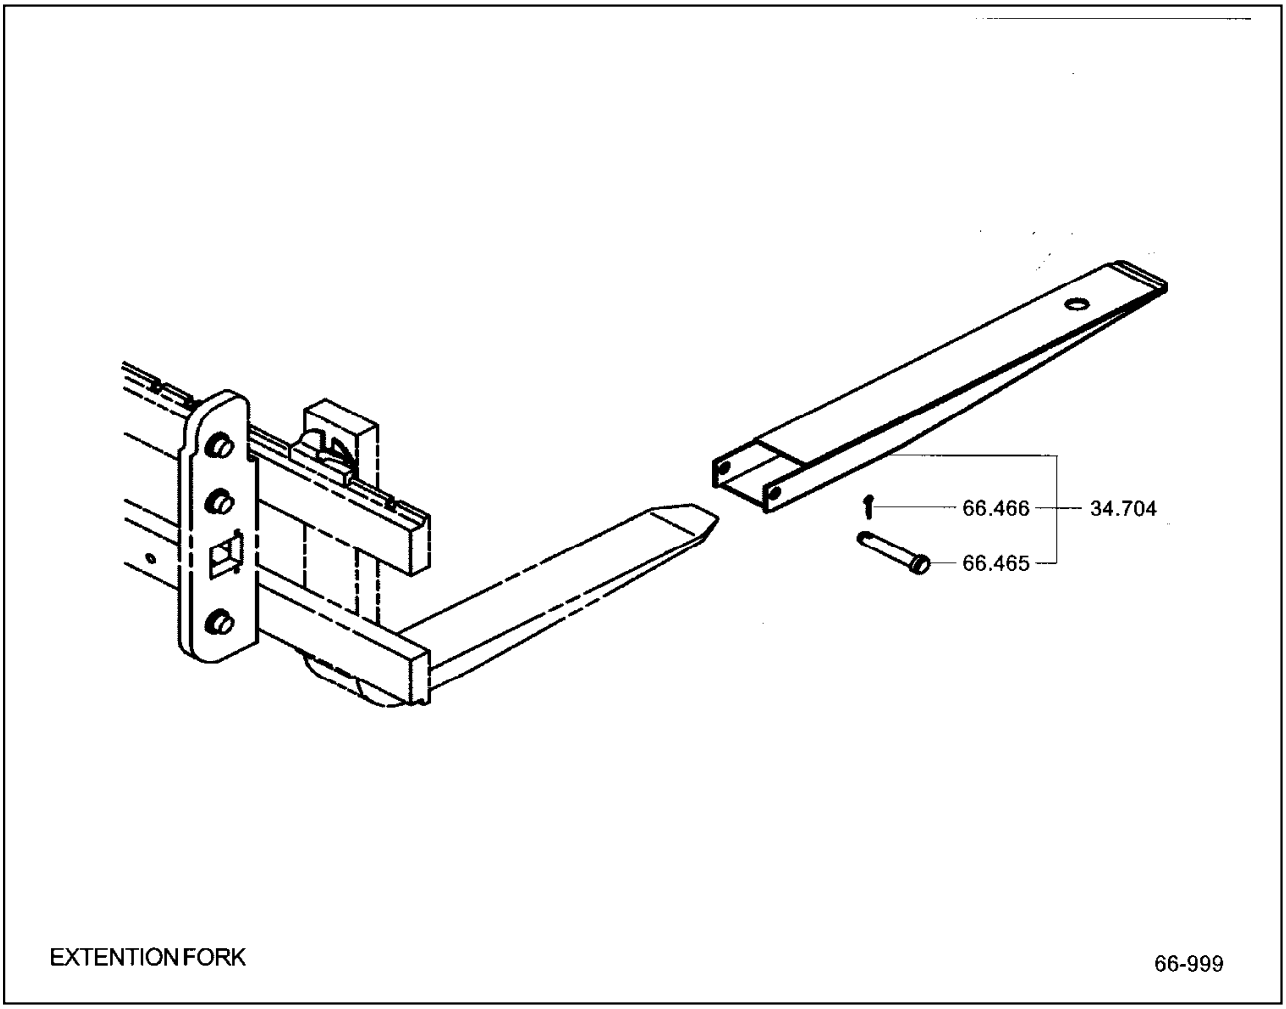

34.704	EXTENSION, FORK ASSEMBLY COMPLETE 익스텐션
66.465	PIN, EXTENTION FORK 핀
66.466	PIN, EXTENTION FORK 핀