https://truckmanualshub.com/

GOODSENSE

零 件 目 录

PARTS MANUAL

3-3.5t蓄电池平衡重式叉车

3-3.5t Battery Counter-balanced Forklift

Original instruction


https://truckmanualshub.com/

说　　明

一、本零件目录适用于浙江吉鑫祥叉车制造有限公司的FB30、FB35零部件名称及数量，并作订货参考。

二、在订货时，必须说明叉车的型号及出厂编号，并根据零部件目录说明零部件的完整代号、详细名称及数量。

三、本目录中叉车型号的表示方法：

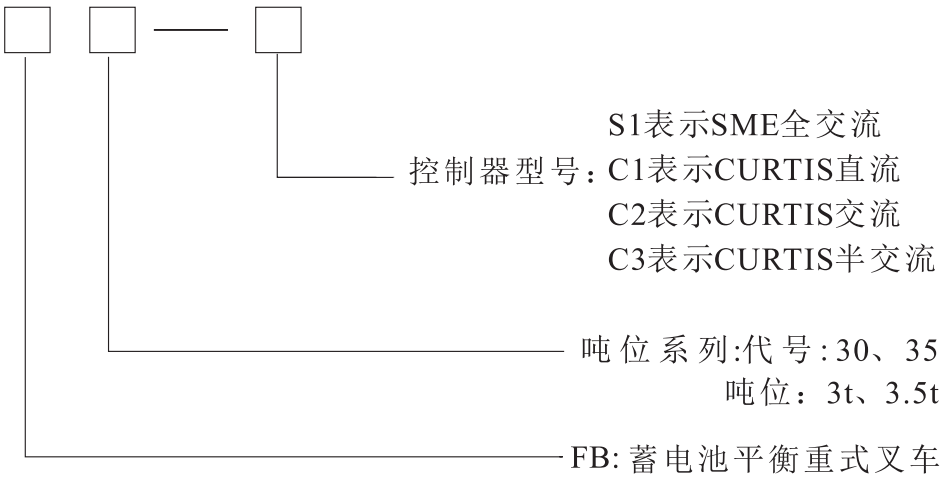

四、产品设计更改，恕不另行通知。

五、缩写说明:

ASS'Y	总成
R.H.	右
L.H.	左
H.P.	高压
L.P.	低压

注：EX-A表示向美国和加拿大出口而制造的专用零件

EX-B表示面向一般市场而制造的专用零件


https://truckmanualshub.com/

FOREWORD

1. This parts list is applied to the “ZHEJIANG GOODSENSE FORKLIFT COMPANY LTD” FB30、FB35 forklift truck . It is intended for users to identify the name , number and quantity of the parts replaced or repaired and to order them from the suppliers works .

2. When order parts , it is necessary to state the model of the forklift truck , its date of manufacture and according to this Part List , to state the whole number , the whole name and quantity .

3. Among the models of the forklifts truck :

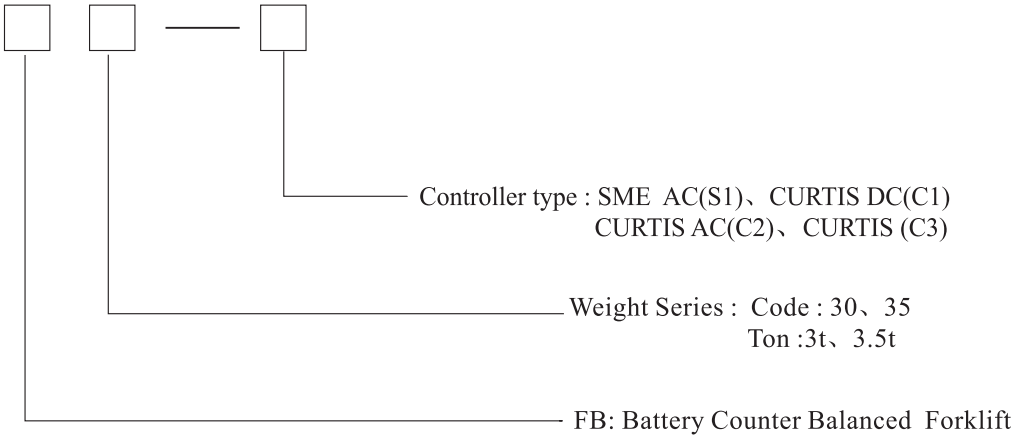

4. If there is any change, we will not notify.

5. Abbreviations in the CATALOGUE.

ASS’Y	assembly
R.H.	right hand
L.H.	left hand
H.P.	high pressure
L.P.	low pressure

Note: EX-A: Special parts made for the forklift trucks exported to US and Canada .

EX-B: Parts made for common forklift trucks markets .

https://truckmanualshub.com/

目　录
INDEX

一、传动系统　Driving system
减速器总成　Reduction ass'y ····· 1-01
差速器　Differential ····· 1-05
驱动桥　Drive axle ····· 1-07
轮式制动器　Wheel brake ····· 1-09
驱动轮总成　Drive wheel assembly ····· 1-13
二、电气系统　Electric system
电气系统　Electric system ····· 2-01
电气原理图 Principle diagram ····· 2-07
左右护顶架线束 Left and right overhead guard wire harness ····· 2-11
整车线束 Vehicle harness ····· 2-13
手制动开关 Hand brake switch ····· 2-17
电源插座总成 Battery socket ass'y ····· 2-19
电控总成　Controller ass'y ····· 2-21
蓄电池组 Battery ass'y ····· 2-29
三、转向系统　Steering system
转向操纵　Steering control ····· 3-01
转向桥 Steering axle ····· 3-05
转向油缸 Steering cylinder ····· 3-09
转向轮 Steering wheel ····· 3-11
四、车身系统　Body system
车架与平衡重　Frame & balance ····· 4-01
机罩底板类及座椅 Hood、 Floor Board & Seat ····· 4-05
护顶架 Overhead guard ····· 4-09
五、液压系统　Hydraulic system
液压油箱　Oil tank ····· 5-01
阀操纵总成（二片） Valve control linkage (two-throw) ····· 5-03
阀操纵总成（三片） Valve control linkage (three-throw) ····· 5-07
阀操纵总成（四片） Valve control linkage (four-throw) ····· 5-11
液压管路　Hydraulic pipe line ····· 5-15

https://truckmanualshub.com/

六、制动系统 Brake system
行车制动装置 Brake control unit ····· 6-01
停车制动 Brake lever ····· 6-03
七、起重系统 Lifting system
门架管路系统(基本型) Hydraulic system mast(Normal mast KM) ····· 7-01
门架管路系统(二节全自由) Hydraulic system mast(Full Free 2-Stage Mast KZM) 7-04
门架管路系统(三节全自由) Hydraulic system mast(Full Free 3-Stage Mast KZM) 7-07
货叉 Fork ····· 7-10
货叉架(基本型) Lift Bracket Normal Mast ····· 7-12
货叉架(二节全自由) Lift Bracket Full Free 2-Stage Mast ····· 7-14
货叉架(三节全自由) Lift Bracket Full Free 3-Stage Mast ····· 7-16
门架(基本型) Mast (Normal mast KM) ····· 7-18
门架(二节全自由) Mast (Full free 2-stage mast KZM) ····· 7-20
门架(三节全自由) Mast (Full free 3-stage mast KZM) ····· 7-22
起升油缸（基本型）Lift Cylinder(Normal Mast KM) ····· 7-24
前起升油缸(二节全自由) Front Lift Cylinder (Full Free 2-Stage Mast KZM) ··· 7-32
前起升油缸(三节全自由) Front Lift Cylinder (Full Free 3-Stage Mast KZM) ··· 7-36
后起升油缸(二节全自由) Rear Lift Cylinder (Full Free 2-Stage Mast KZM) ··· 7-40
后起升油缸(三节全自由) Rear Lift Cylinder (Full Free 3-Stage Mast KZM) ··· 7-46
倾斜油缸Tilt cylinder ····· 7-50
八、标牌 Scutcheon
标牌 Scutcheon ····· 8-01


https://truckmanualshub.com/

一、传动系统

DRIVING SYSTEM

https://truckmanualshub.com/

减速器总成
Reduction ass'y

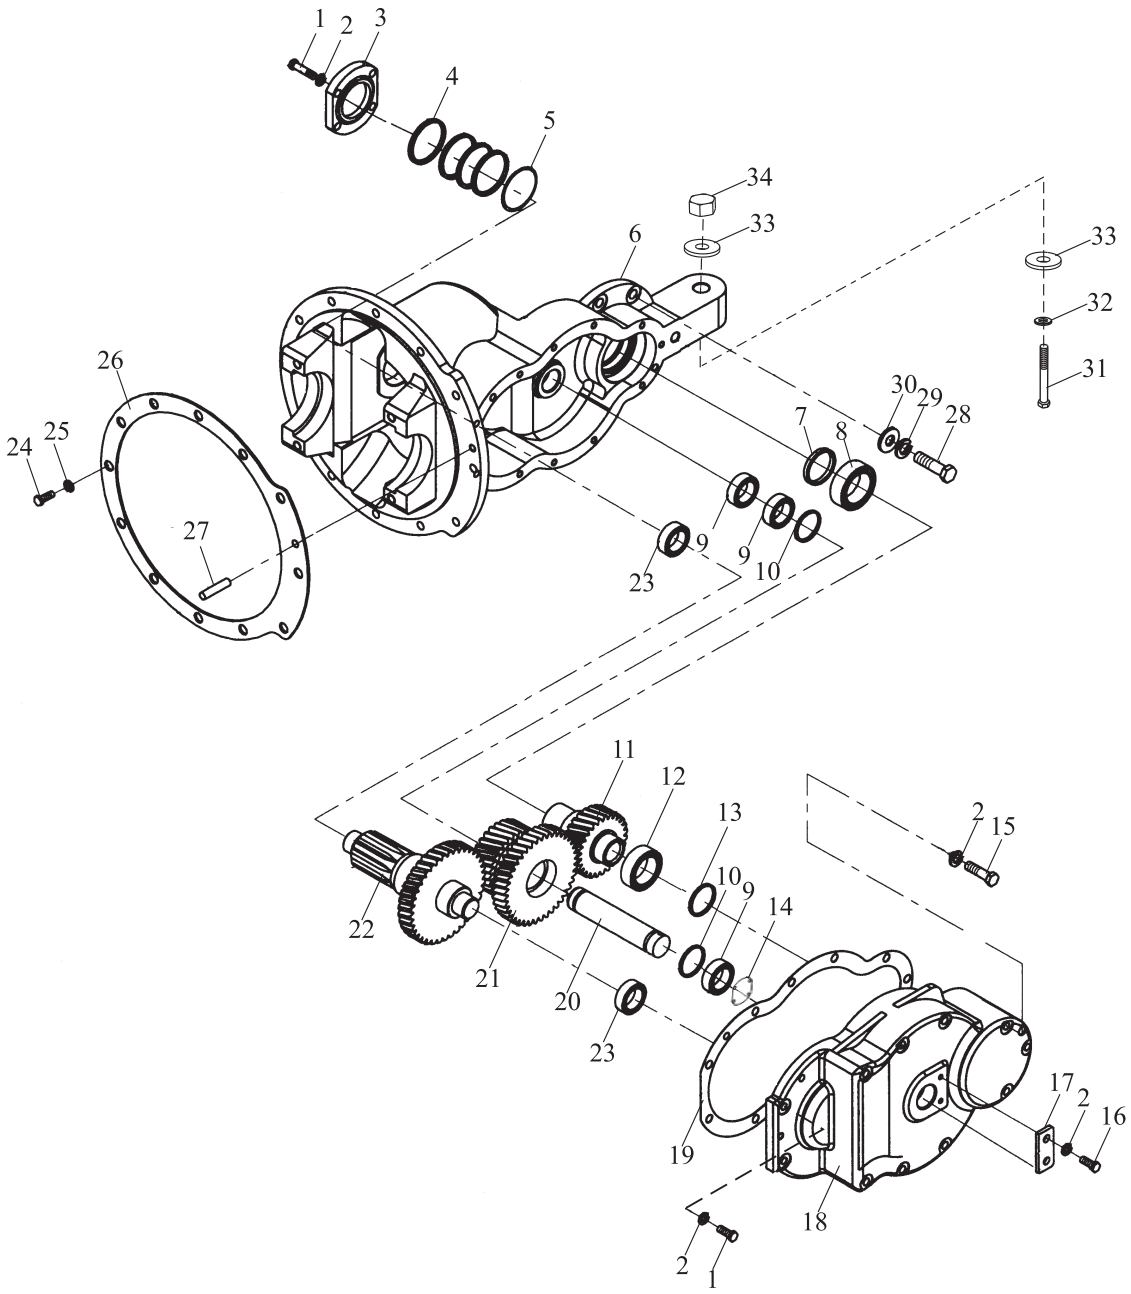


https://truckmanualshub.com/

减速器总成
Reduction ass'y

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GB/T5783	螺栓M10×25 Bolt	4	
2	GB/T93	弹垫10 Washer,lock	18	
3	A25G5-00106	轴承盖 Cap	1	
4	A25G5-00107	垫片 Shim	4	
5	GB/T1235	O形密封圈75×3.1 O-ring	1	
6	A25G5-00101	箱体 Case	1	FB30-S1/C2/C3 配合普牵引电机
-	A25I5-00501	箱体 Case	1	FB30/35-C1
-	A35G5-00101	箱体 Case	1	FB35-S1/C2/C3 配合普牵引电机
-	A30JS5-00101	箱体 Case	1	FB30-S1 配SME牵引电机
-	A35H5-00101	箱体 Case	1	FB35-S1 配SME牵引电机
7	A25G5-00108	密封盖 Seal cover	1	
8	GB/T276	深沟球轴承6210 Bearing	1	
9	GB/T276	深沟球轴承6207 Bearing	3	
10	GB/T3452.1	O形密封圈30×2.65 O-ring	2	
11	A25G5-00102	输入轴 Shaft	1	FB30/35-S1/C2/C3
-	A25I5-00502	输入轴 Shaft	1	FB30/35-C1
12	GB/T276	深沟球轴承6209 Bearing	1	
13	A25G5-00109	调整垫 Shim	3/4	
14	A25G5-00110	调整垫 Shim	3/4	
15	A25G5-00111	箱盖螺栓 Bolt	12	
16	GB/T5783	螺栓M10×16 Bolt	2	
17	A25G5-00112	挡块 Stoppe	1	
18	A25G5-00103	箱盖 Cap	1	FB30-S1/C2/C3 配合普牵引电机
-	A25I5-00503	箱盖 Cap	1	FB30/35-C1

https://truckmanualshub.com/

减速器总成
Reduction ass'y

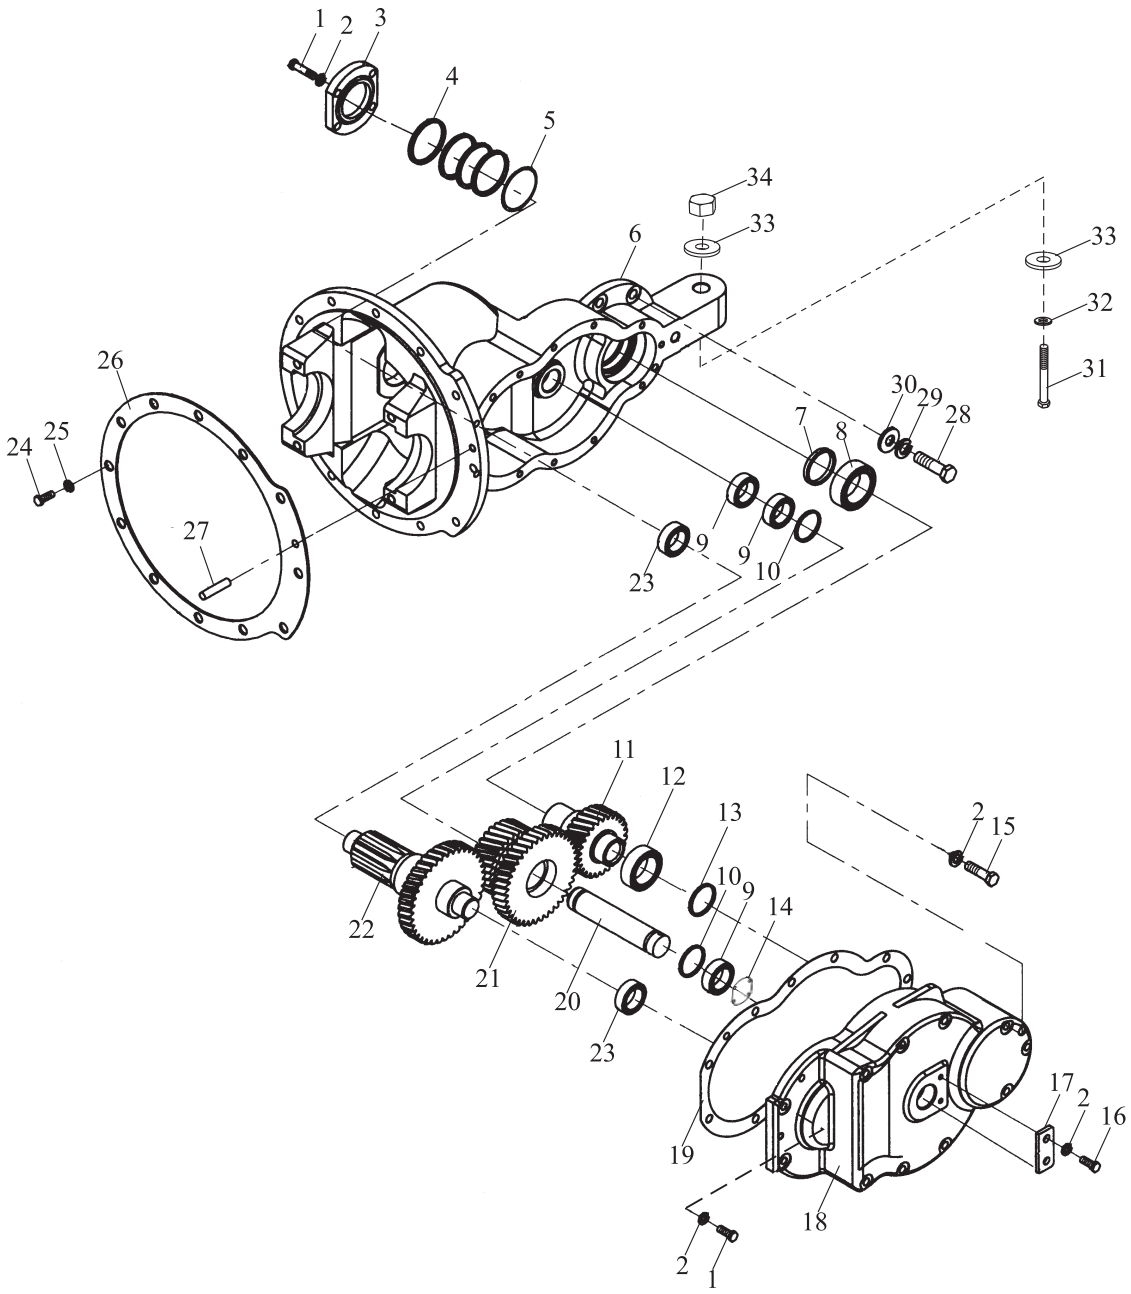


https://truckmanualshub.com/

减速器总成
Reduction ass'y

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
–	A35G5-00102	箱盖 Cap	1	FB35-S1/C2/C3 配合普牵引电机
–	A30JS5-00102	箱盖 Cap	1	FB30-S1 配SME牵引电机
–	A35H5-00102	箱盖 Cap	1	FB35-S1 配SME牵引电机
19	A25G5-00104	纸垫 Packing	1	
20	A25G5-00113	轴 Shaft	1	
21	A25G5-00105	双联齿轮 Gear	1	FB30/35-S1/C2/C3
–	A25I5-00504	双联齿轮 Gear	1	FB30/35-C1
22	A25G5-00114	齿轴 Shaft,pinion	1	
23	GB/T297	圆锥滚子轴承32207 Bearing	2	
24	GB/T5783	螺栓M12×1.25×40 Bolt	12	
25	GB/T93	弹垫12 Washer,lock	12	
26	A30A5-02001	密封胶垫 Packing	1	
27	GB/T119.1	圆柱销 B10×20 Pin	1	
28	GB/T5785	螺栓M14×1.5×180×40 Bolt	5	FB30/35-C1/C2/C3 FB30/35-S1 配合普牵引电机
–	GB/T5785	螺栓M12×35 Bolt	6	FB30/35-S1 配SME牵引电机
29	GB/T93	弹垫14 Washer,lock	5	FB30/35-C1/C2/C3 FB30/35-S1 配合普牵引电机
–	GB/T93	弹垫12 Washer,lock	6	FB30/35-S1 配SME牵引电机
30	GB/T97.1	平垫14 Washer	5	FB30/35-C1/C2/C3 FB30/35-S1 配合普牵引电机
–	GB/T97.1	平垫12 Washer	6	FB30/35-S1 配SME牵引电机
31	GB/T5785	螺栓M16×1.5×75×40 Bolt	1	
32	GB/T97.1	弹垫16 Washer, lock	1	
34	GB/T97.1	平垫16 Washer	2	
35	GB/T6171	螺母M16×1.5 Nut	1	

https://truckmanualshub.com/

差速器总成
Differential

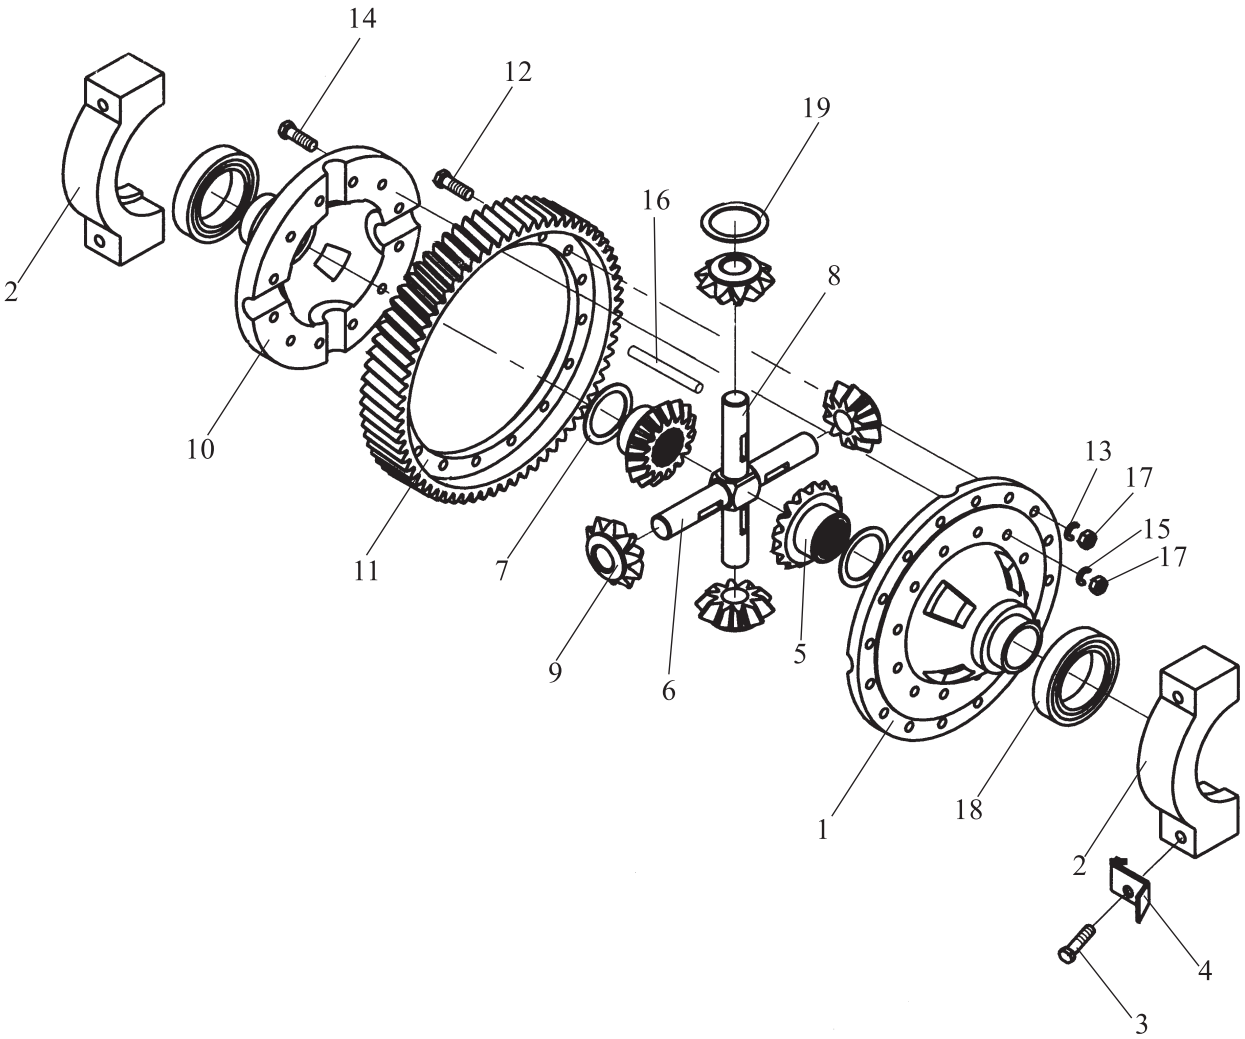


https://truckmanualshub.com/

差速器总成
Differential

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A25G5-00115	左差速器壳 Case,differential L	1	
2	A25G5-00116	轴承座 Seat,bearing	2	
3	A25G5-00117	螺栓 Bolt	4	
4	A25G5-00118	锁片 Plate,lock	4	
5	A25G5-00119	半轴齿轮 Gear,side	2	FB30-S1/C1/C2/C3
-	A35G5-00103	半轴齿轮 Gear,side	2	FB35-S1/C1/C2/C3
6	A25G5-00120	齿轮轴I Shaft,pinion I	1	
7	A25G5-00121	垫圈 Shim	1/3×2	
8	A25G5-00122	齿轮轴II Shaft,pinion II	1	
9	A25G5-00123	行星齿轮 Planet gear	4	
10	A25G5-00124	右差速器壳 Case,differential R	1	
11	A25G5-00125	齿圈 Gear ring	1	
12	A25G5-00126	螺栓 Bolt	16	
13	A25G5-00127	锁片 Plate,lock	8	
14	A25G5-00128	螺栓 Bolt	12	
15	A25G5-00129	锁紧垫片 Shim	6	
16	GB/T119.1	圆柱销6×30 Pin	1	
17	GB/T6171	螺母M10×1.25 Nut	28	
18	GB/T276	深沟球轴承6213 Bearing	2	
19	A25G5-00130	止推垫圈 Shim	4	

https://truckmanualshub.com/

驱动桥
Drive axle

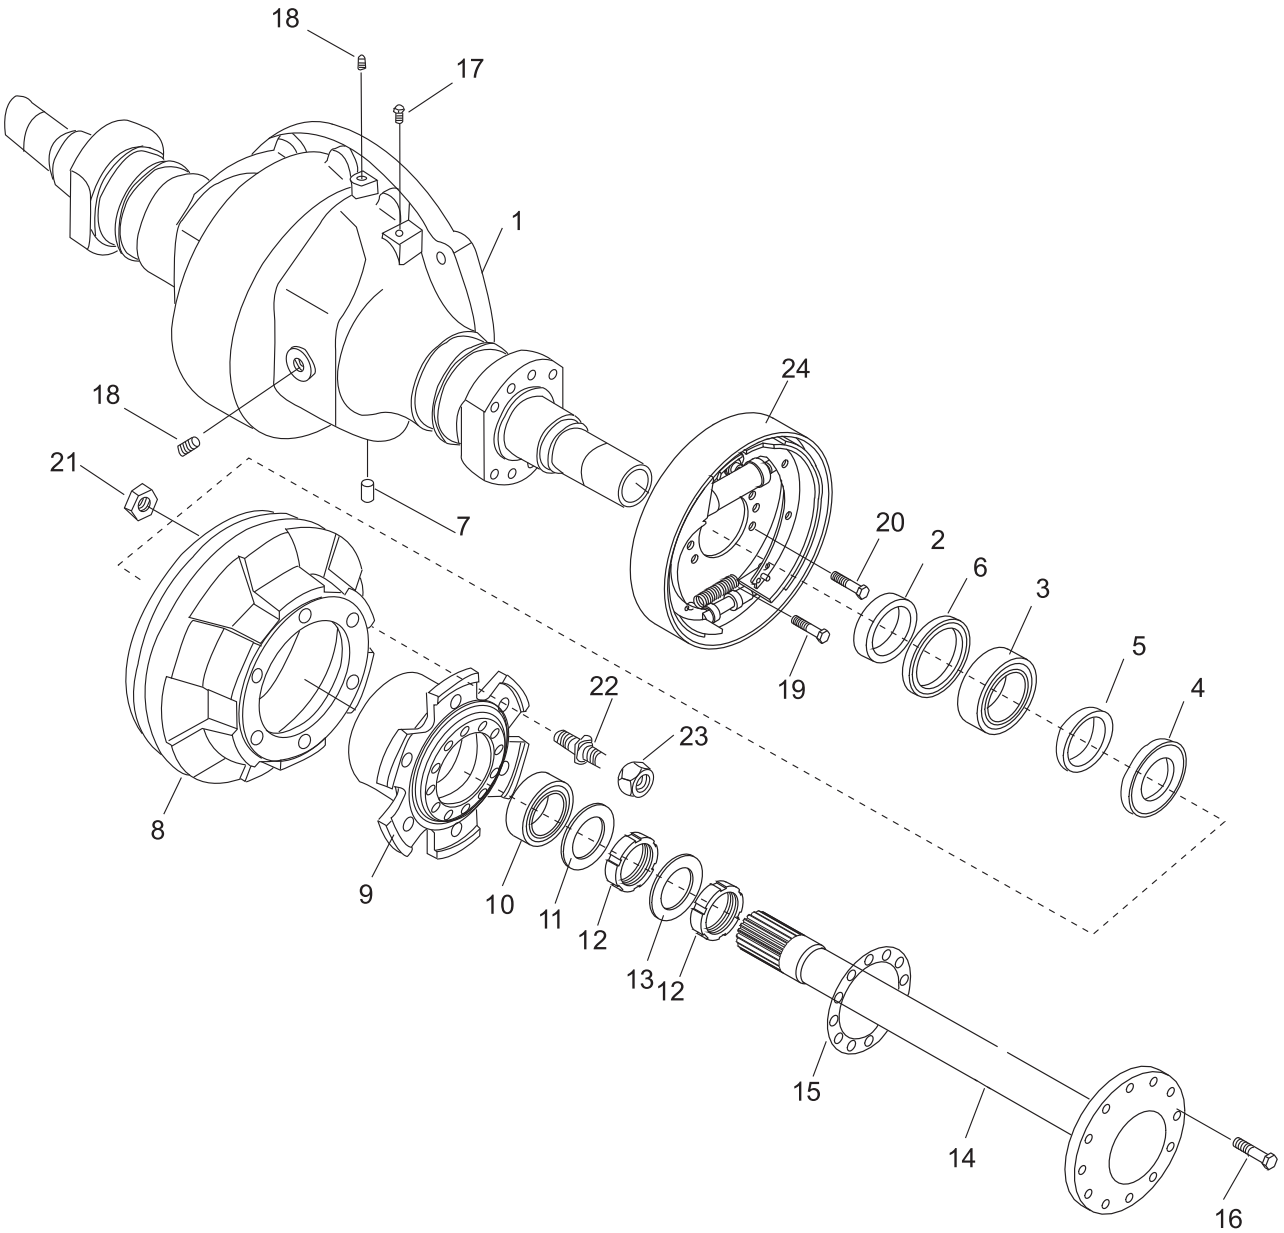


https://truckmanualshub.com/

驱动桥
Drive axle

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A30Q5-00202	桥壳 Housing, axle	1	FB30-S1/C1/C2/C3 FB35-C1
–	A35G5-00201	桥壳 Housing, axle	1	FB35-S1/C2/C3
2	A30A5-02111	油封挡圈100×72×16 Retainer, oil seal	2	
3	GB/T9877.1	油封 Sd100×125×12 Seal, oil	2	
4	A30A5-02119	挡油圈111×72.5×1 Retainer	2	
5	A30A5-02120	备用垫125×119×7.5 Washer	2	
6	GB/T307	轴承30214 Bearing	2	
7	A30A5-02121	销 D10×30 Pin	1	
8	A30A5-02101	制动毂 Drum, brake	2	
9	A30A5-02102	轮毂 Hub, front	2	
10	GB/T307.1-2005	轴承油封总成 Seal, oil ass'y	2	
11	A30A5-02105	垫 Packing	2	
12	GB/T810	螺母M60×2 Nut	4	
13	GB/T858	垫圈60 Washer	2	
14	A30Q5-00201	半轴 Shaft, drive	2	FB30-S1/C1/C2/C3 FB35-C1
–	A30A5-02106	半轴 Shaft, drive	2	FB35-S1/C2/C3
15	A30A5-02107	半轴垫 Packing	2	
16	A30A5-02104	半轴螺栓 Bolt	24	
17	A30A5-02113	通气塞总成 Breather, air	1	
18	A30A5-02114	堵塞 Plug	3	
19	A30A5-02115	螺栓M14×1.5×30 Bolt	12	
20	A30A5-02116	螺栓M14×1.5×38 Bolt	4	
21	GB/T6171	螺母M20×1.5 Nut	12	
22	A30A5-02108	轮毂螺栓 Bolt	12	
23	A30A5-02109	轮毂螺母 Nut	12	
24	A30A5-02800	制动器总成 Wheel brake	1	

https://truckmanualshub.com/

轮式制动器
Wheel brake

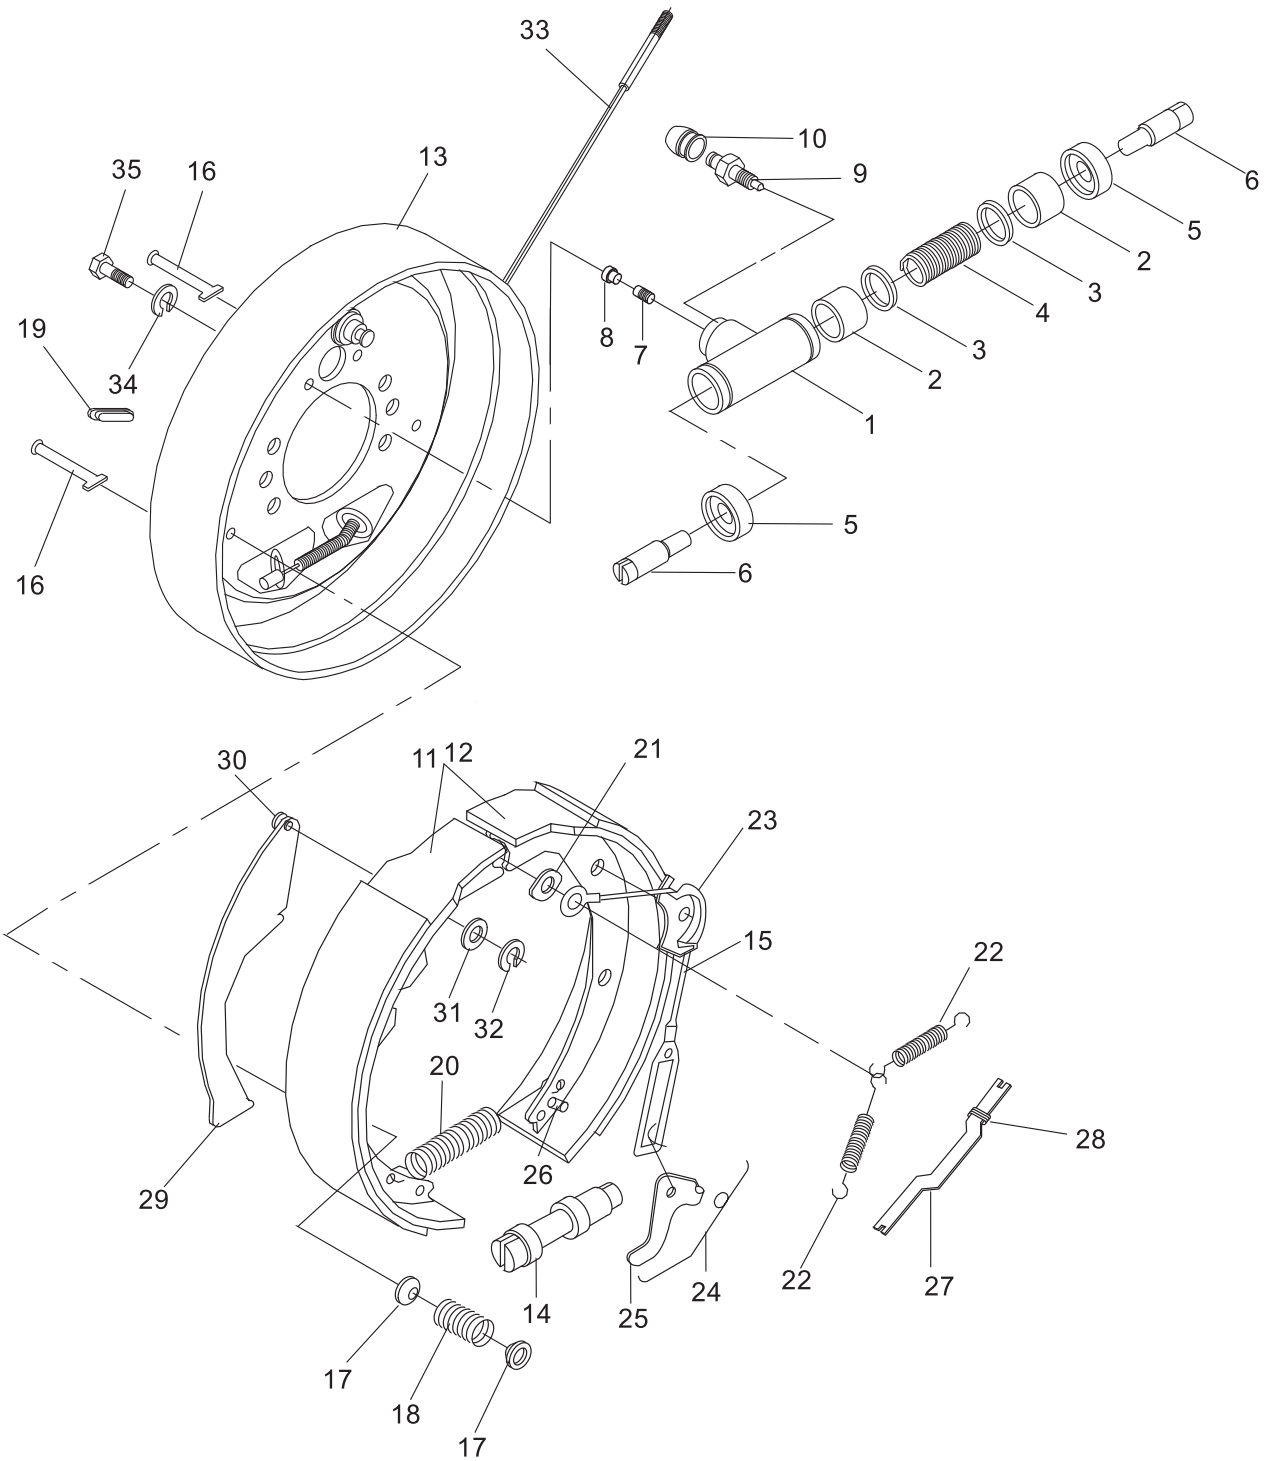


https://truckmanualshub.com/

轮式制动器
Wheel brake

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A30A5-02800(L)	制动器总成(左) Wheel brake ass'y L.H.	1	
–	A30A5-02800(R)	制动器总成(右) Wheel brake ass'y R.H.	1	
B	A30A5-02900	制动分泵总成 Wheel cylinder ass'y	1	左右对称各一 Left & right types
1	A30A5-02901	制动分泵缸 Cylinder	1	左右对称各一 Left & right types
2	A30A5-02902	分泵活塞 Piston	2	
3	A30A5-02903	分泵皮碗 Cup, piston	2	
4	A30A5-02904	分泵弹簧 Spring	1	
5	A30A5-02905	分泵护罩 Cover, dust	2	
6	A30A5-02906	分泵活塞顶杆 Rod, piston	2	
7	A30A5-02907	制动分泵油塞 Seat, tube	1	
8	A30A5-02908	螺纹防护罩 Shroud	1	
9	A30A5-02909	分泵放气螺钉 Screw, bleeder	1	
10	A30A5-02910	分泵放气螺钉帽 Cap, screw	1	
11	A30A5-02911	制动蹄带摩擦片总成(前) Pin, shoe & lining ass'y	1	
12	A30A5-02912	制动蹄带摩擦片总成(后) Pin, shoe & lining ass'y	1	
13	A30A5-02913	制动器底板总成 Back plate ass'y	1	左右对称各一 Left & right types
14	A30A5-02914	间隙调整器 Clearance adjuster	1	左右旋螺纹各一 Left & right threads
15	A30A5-02915	弹簧拉线装置 Spring & Fitting ass'y	1	
16	A30A5-02916	压簧拉杆 Pin, shoe hold down	2	
17	A30A5-02917	压簧座 Cup, shoe hold down	4	

https://truckmanualshub.com/

轮式制动器
Wheel brake

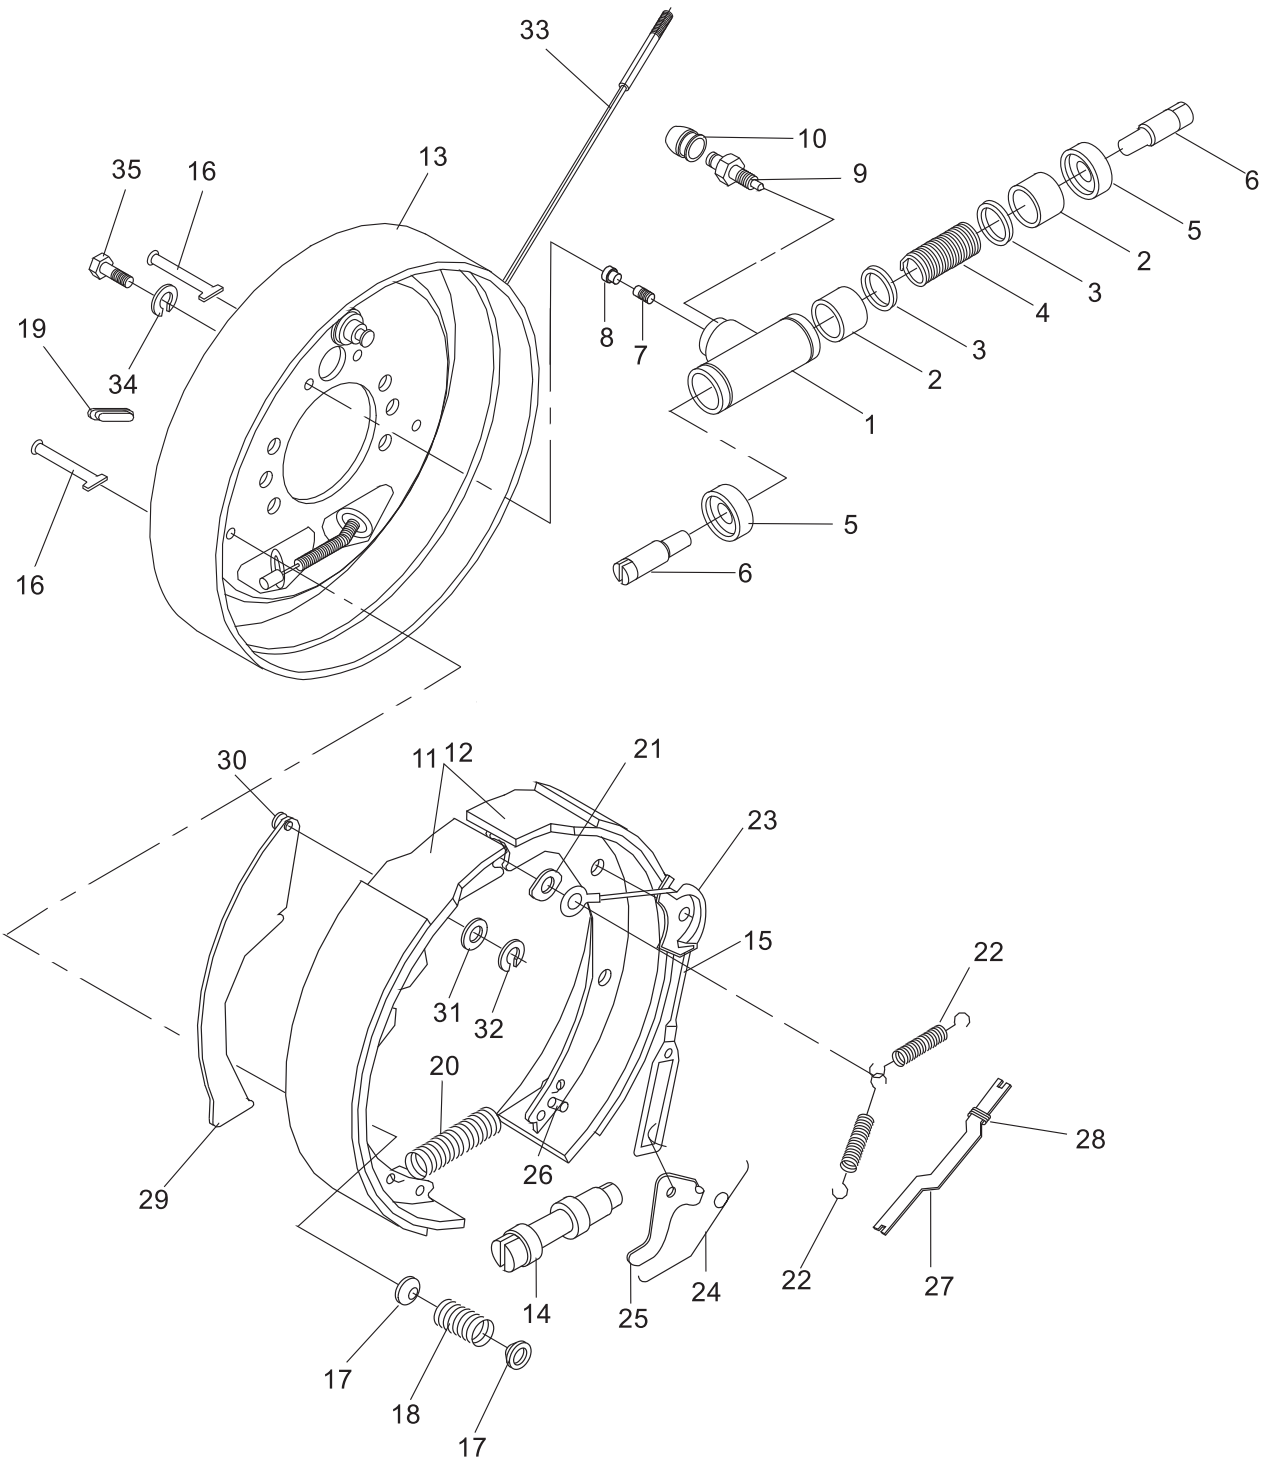


https://truckmanualshub.com/

轮式制动器
Wheel brake

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
18	A30A5-02918	压簧 Spring, shoe hold down	2	
19	A30A5-02919	胶堵 Plug, rubber	1	
20	A30A5-02920	回位弹簧 Spring return	1	
21	A30A5-02921	导向板 Guide, plate	1	
22	A30A5-02922	制动蹄回位弹簧Return spring, brake shoe	2	
23	A30A5-02923	导向块 Guide, cable	1	
24	A30A5-02924	弹簧 Spring	1	左右对称各一 Left & right types
25	A30A5-02925	棘爪 Lever	1	左右对称各一 Left & right types
26	A30A5-02926	销钉 Pin	1	
27	A30A5-02927	手制动推杆 Strut L. H.	1	左右对称各一 Left & right types
28	A30A5-02928	弹簧 Spring	1	
29	A30A5-02929	手制动拉杆 Lever L.H. brake	1	左右对称各一 Left & right types
30	A30A5-02930	销钉 Pin	1	
31	A30A5-02931	弹性垫片 Washer, spring	1	
32	A30A5-02932	杆销挡圈 Snap, ring, pin axle	1	
33	A30A5-02933	制动钢锁总成（左） Cable L. H	1	
–	A30A5-02934	制动钢锁总成（右） Cable R. H	1	
34	GB/T93	弹垫8 Washer,lock	2	
35	GB/T5783	螺栓M8×1.25×20 Bolt	2	

https://truckmanualshub.com/

驱动轮总成
Driving wheel assembly

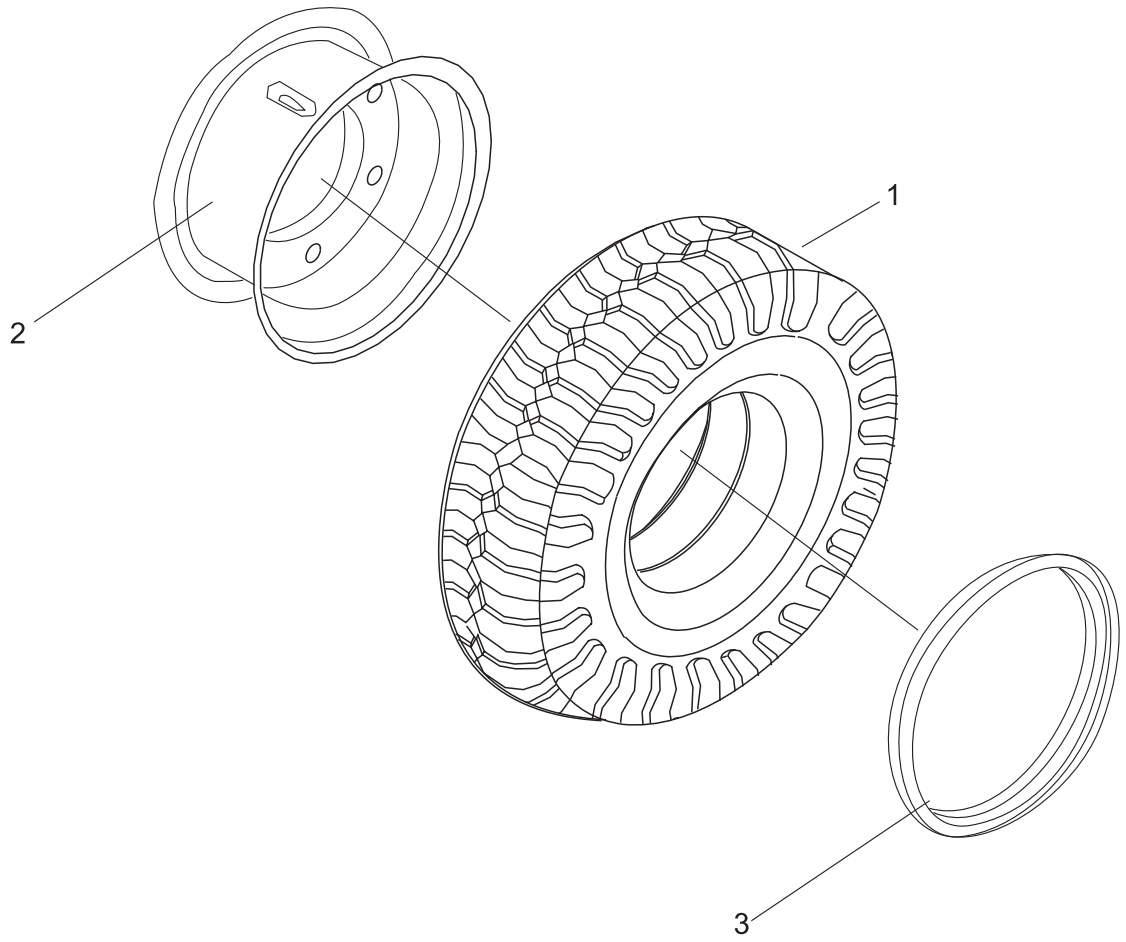

https://truckmanualshub.com/

驱动轮总成
Driving wheel assembly

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A30A5-01000	轮辋总成(包含2,3) Whell Rim ass'y(Inc.2,3)	2	
1	GB/T2982	轮胎28×9-15-12PR Tyre	2	
2	A30A5-01001	轮辋体总成 Whell Rim	2	
3	A30A5-01002	挡圈 Snap ring	2	


https://truckmanualshub.com/


二、电气系统

ELECTRIC SYSTEM

https://truckmanualshub.com/

电气系统
Electric system

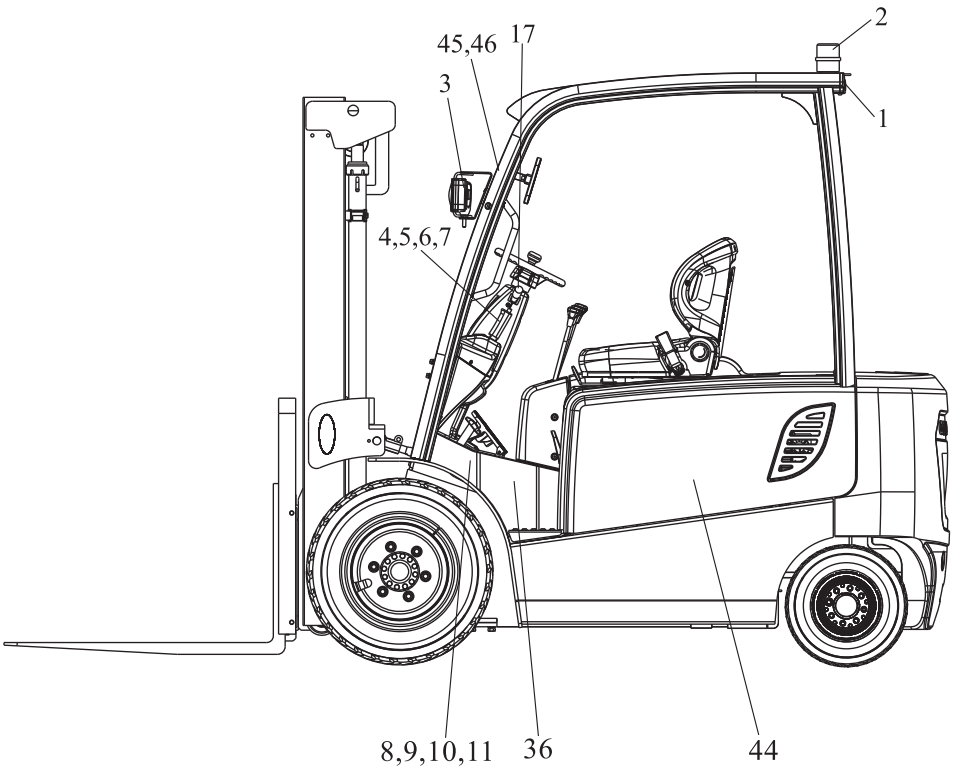

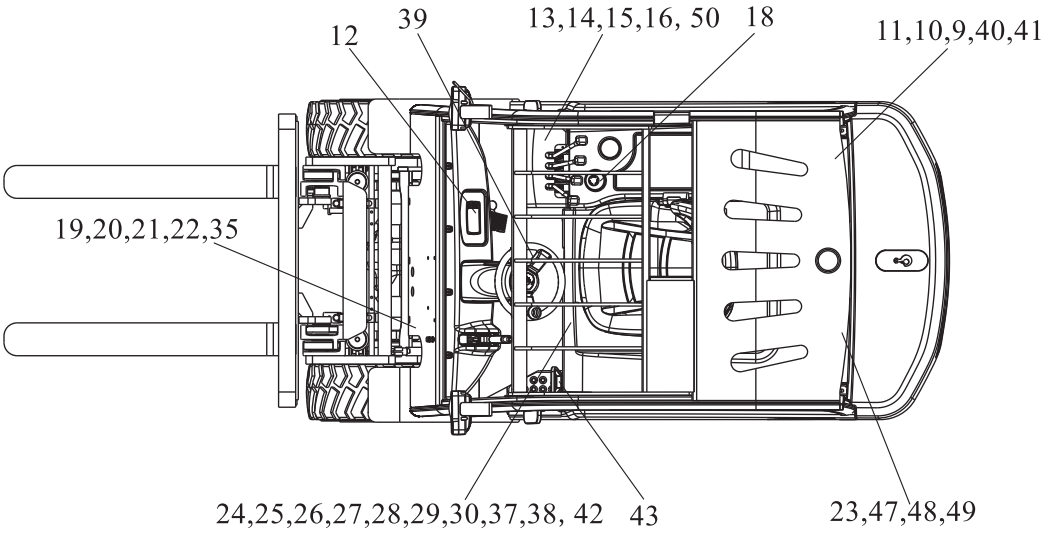


https://truckmanualshub.com/


电气系统
Electric system

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	DT04G-12XH8-2	后排灯 Rear lamp	1	
2	DT04G-LTD152	警示灯 Warning Light	1	
3	A15G2-40100	前组合灯 Front combined lamps	2	
4	A15A2-00202	手制动开关 Hand Brake switch	1	
5	GB/T5783	螺栓M5×35 Bolt	4	
6	GB/T97.1	平垫5 Washer	4	
7	GB/T93	弹垫5 Washer,lock	4	
8	A15J2-00204	加速器 Accelerator	1	FB30/35-S1
-	A30Q2-00204	加速器 Accelerator	1	FB30/35-C1/C2/C3
9	GB/T5783	螺栓M10×25 Bolt	1	
10	GB/T97.1	平垫10 Washer	1	
11	GB/T93	弹垫10 Washer,lock	1	
12	A16A2-00230	仪表总成 Meter ass'y	1	FB30/35-S1
-	A15B2-00203	仪表总成 Meter ass'y	1	FB30/35-C1/C2/C3
13	A15A2-00209	起升开关 Lifting switch	2	两片阀选用
-	A15A2-00209	起升开关 Lifting switch	3	三片阀选用
-	A15A2-00209	起升开关 Lifting switch	4	四片阀选用
14	GB/T5783	螺栓M5×25 Bolt	2	
15	GB/T97.1	平垫5 Washer	2	
16	GB/T93	弹垫5 Washer,lock	2	
17	DT02G-JK804F	组合开关 Combination switch	1	
18	A15A2-00211	急停开关 Switch	1	
19	DT09G-DL124ED	电喇叭 Horn	1	
20	GB/T5783	螺栓M8×16 Bolt	1	
21	GB/T97.1	平垫8 Washer	1	
22	GB/T93	弹垫8 Washer,lock	1	

https://truckmanualshub.com/

电气系统
Electric system

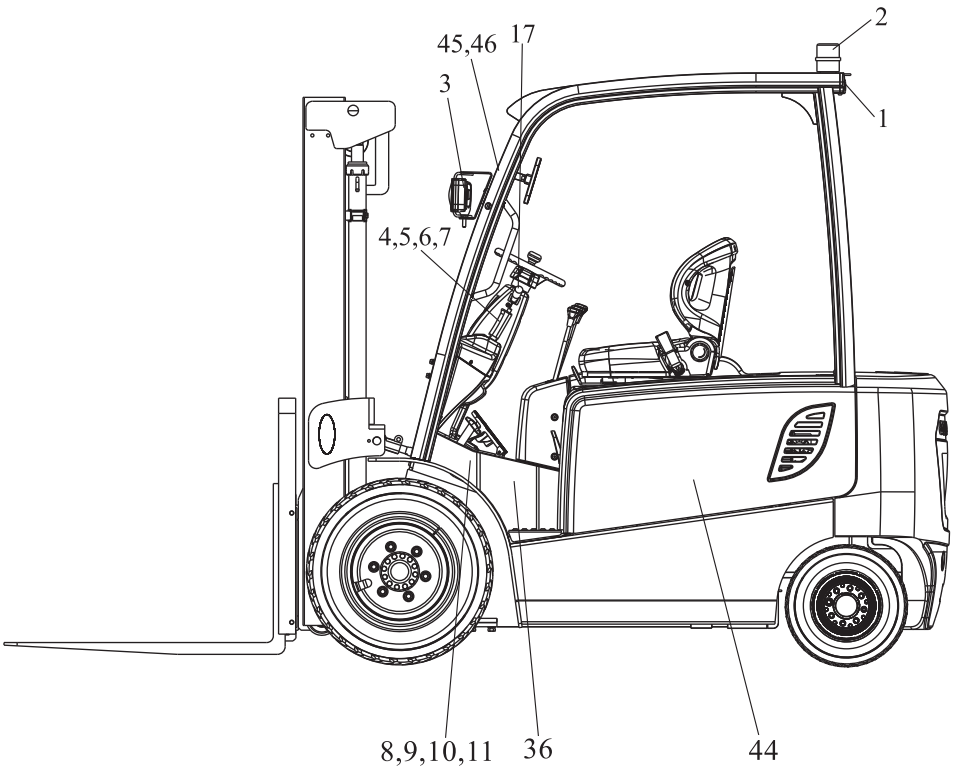

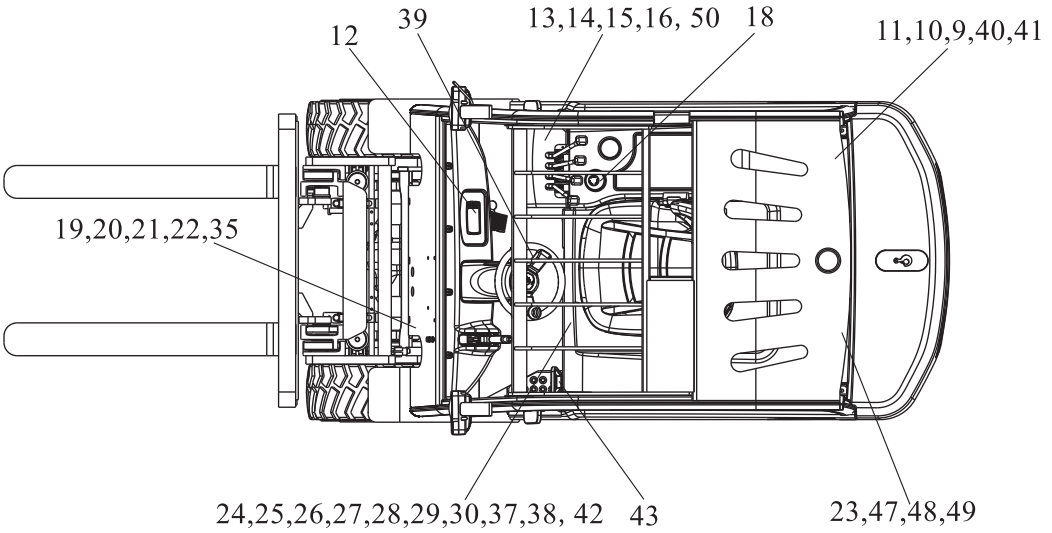


https://truckmanualshub.com/


电气系统
Electric system

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
23	A30X2-30200	泵电机 Lift motor	1	FB30/35-C1/C3
-	DT08G-HPB12	泵电机 Lift motor	1	FB30/35-S1/C2 合普电机(标配)
-	A30JS2-02000	泵电机 Lift motor	1	FB30/35-S1 SME电机(选配)
24	A30Q2-00206	DC隔离转换器 Switch	1	
25	GB/T5783	螺栓M6×15 Bolt	7	
26	GB/T97.1	平垫6 Washer	7	
27	GB/T93	弹垫6 Washer,lock	7	
28	A15A2-00210	保险丝盒 Fuse box	1	
29	DT09G-SG152	电子闪光器 Flasher unit	1	
30	DT09G-DJB12B	倒车蜂鸣器 Back buzzer	1	
31	DT08G-HPQ15	牵引电机 Traction motor	1	FB30/35-S1/C2/C3 合普电机(标配)
-	A30X2-30100	牵引电机 Traction motor	1	FB30/35-C1
-	A30JS2-03000	牵引电机 Traction motor	1	FB30/35-S1 SME电机(选配)
32	A35G2-30110	牵引电机连接线U端 Connecting cables	1	FB30/35-S1/C2/C3
33	A35G2-30120	牵引电机连接线V端 Connecting cables	1	FB30/35-S1/C2/C3
34	A35G2-30130	牵引电机连接线W端 Connecting cables	1	FB30/35-S1/C2/C3
35	A15A2-00205	喇叭滤波器 Horn filter	1	
36	DT05G-JK205A	脚制动开关 Stop lamp switch	2	FB30/35-S1
-	DT05G-JK205A	脚制动开关 Stop lamp switch	1	FB30/35-C1/C2/C3
37	A35G2-00200	整车线束 Vehicle harness(SME全交流)	1	FB30/35-S1
-	A35I2-00200	整车线束 Vehicle harness(CURTIS直流)	1	FB30/35-C1
-	A35K2-80100	整车线束 Vehicle harness(CURTIS交流)	1	FB30/35-C2
-	A35R2-80100	整车线束 Vehicle harness(CURTIS半交流)	1	FB30/35-C3
38	DT06G-JD1914	中间继电器 Auxiliary relay	1	
39	DT02G-JK422	钥匙开关 Key switch	1	

https://truckmanualshub.com/

电气系统
Electric system

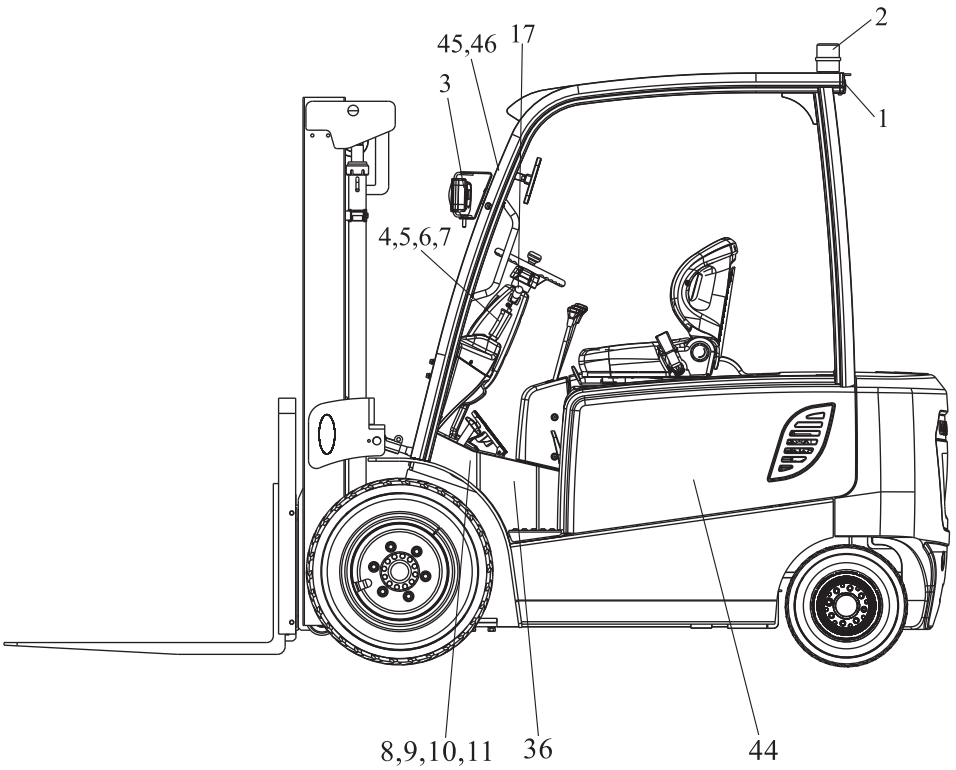

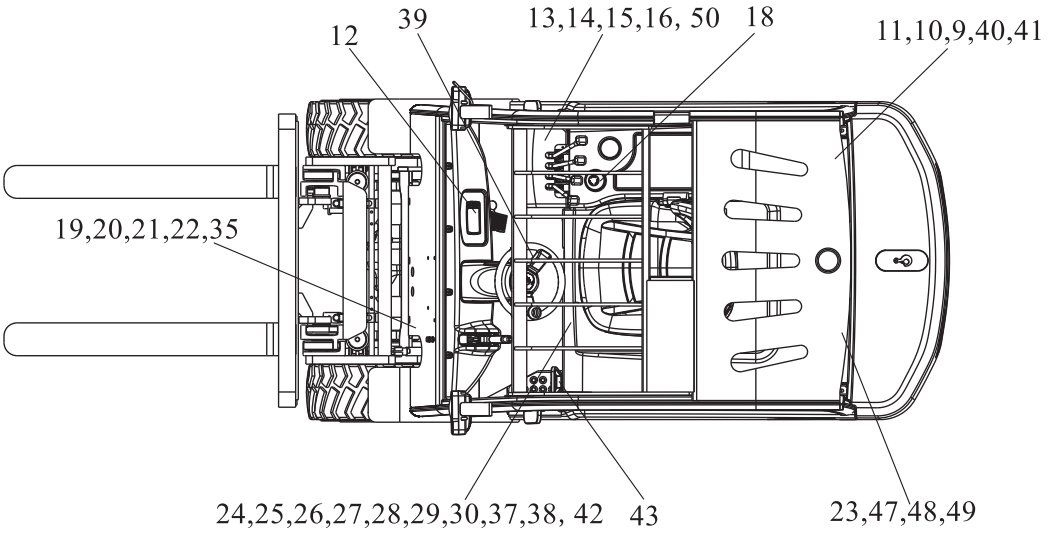

https://truckmanualshub.com/


电气系统
Electric system

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
40	A30JS2-00700	控制器总成 Controller unit	1	FB30/35-S1
-	A30Y2-00700	控制器总成 Controller unit	1	FB30/35-C1
-	A35K2-00700	控制器总成 Controller unit	1	FB30/35-C2
-	A35R2-10100	控制器总成 Controller unit	1	FB30/35-C3
41	A25R2-60100	散热风扇 Cooling fan	2	
42	DT06G-HD4195A	转向继电器 Relay	1	FB30/35-C1
43	A30Q2-00400	电源插座总成 Battery socket ass'y	1	
44	A35G2-20100	蓄电池 Battery	1	3T标配500Ah
-	A35G2-20300	蓄电池 Battery	1	3.5T标配550Ah
45	A15A2-00500	左护顶架线束 Left head guard harness	1	
46	A15A2-00600	右护顶架线束 Right head guard harness	1	
47	A35G2-30210	泵电机连接线U端 Connecting cables	1	FB30/35-S1/C2
48	A35G2-30220	泵电机连接线V端 Connecting cables	1	FB30/35-S1/C2
49	A35G2-30230	泵电机连接线W端 Connecting cables	1	FB30/35-S1/C2
50	A15A2-00209×1	起升开关支架 Lifting switch bracket	2	两片阀选用
-	A15A2-00209×1	起升开关支架 Lifting switch bracket	3	三片阀选用
-	A15A2-00209×1	起升开关支架 Lifting switch bracket	4	四片阀选用

https://truckmanualshub.com/

电气原理图
Principle diagram


FB30/35-S1

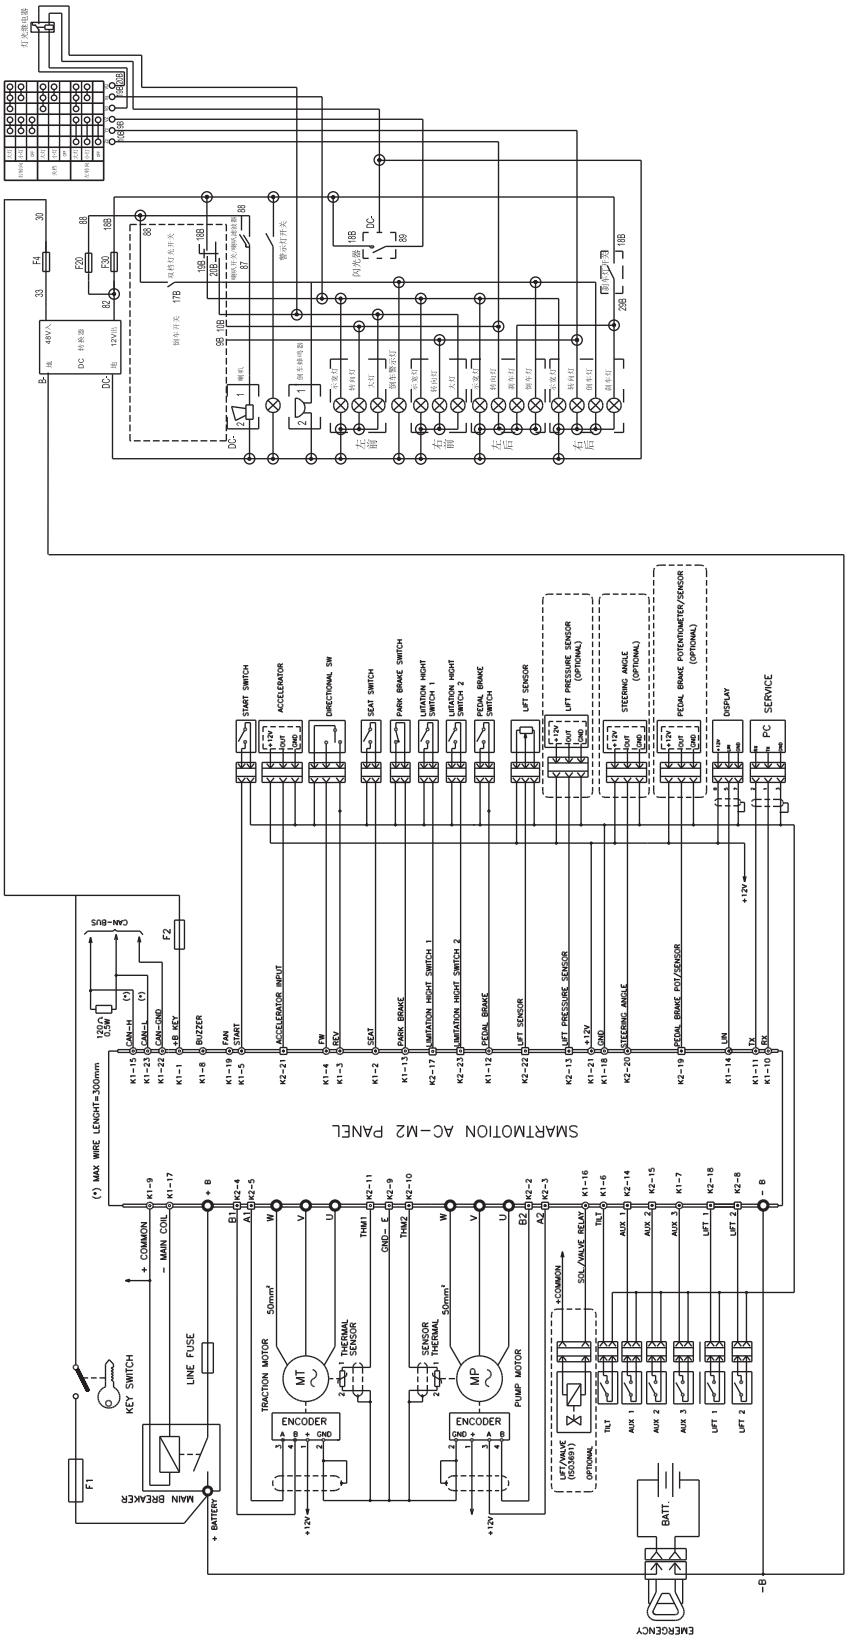

https://truckmanualshub.com/

电气原理图
Principle diagram


FB30/35-C1

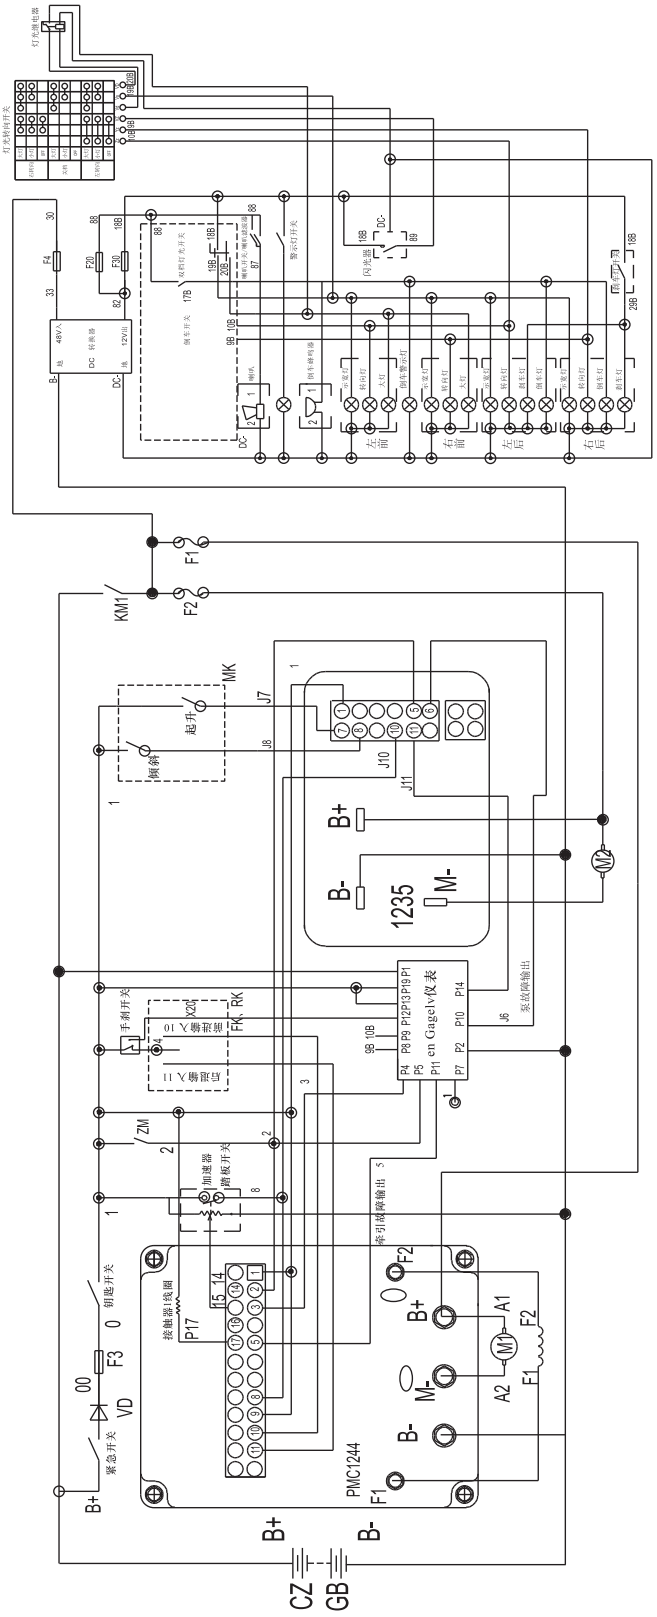

https://truckmanualshub.com/

电气原理图
Principle diagram


FB30/35-C2

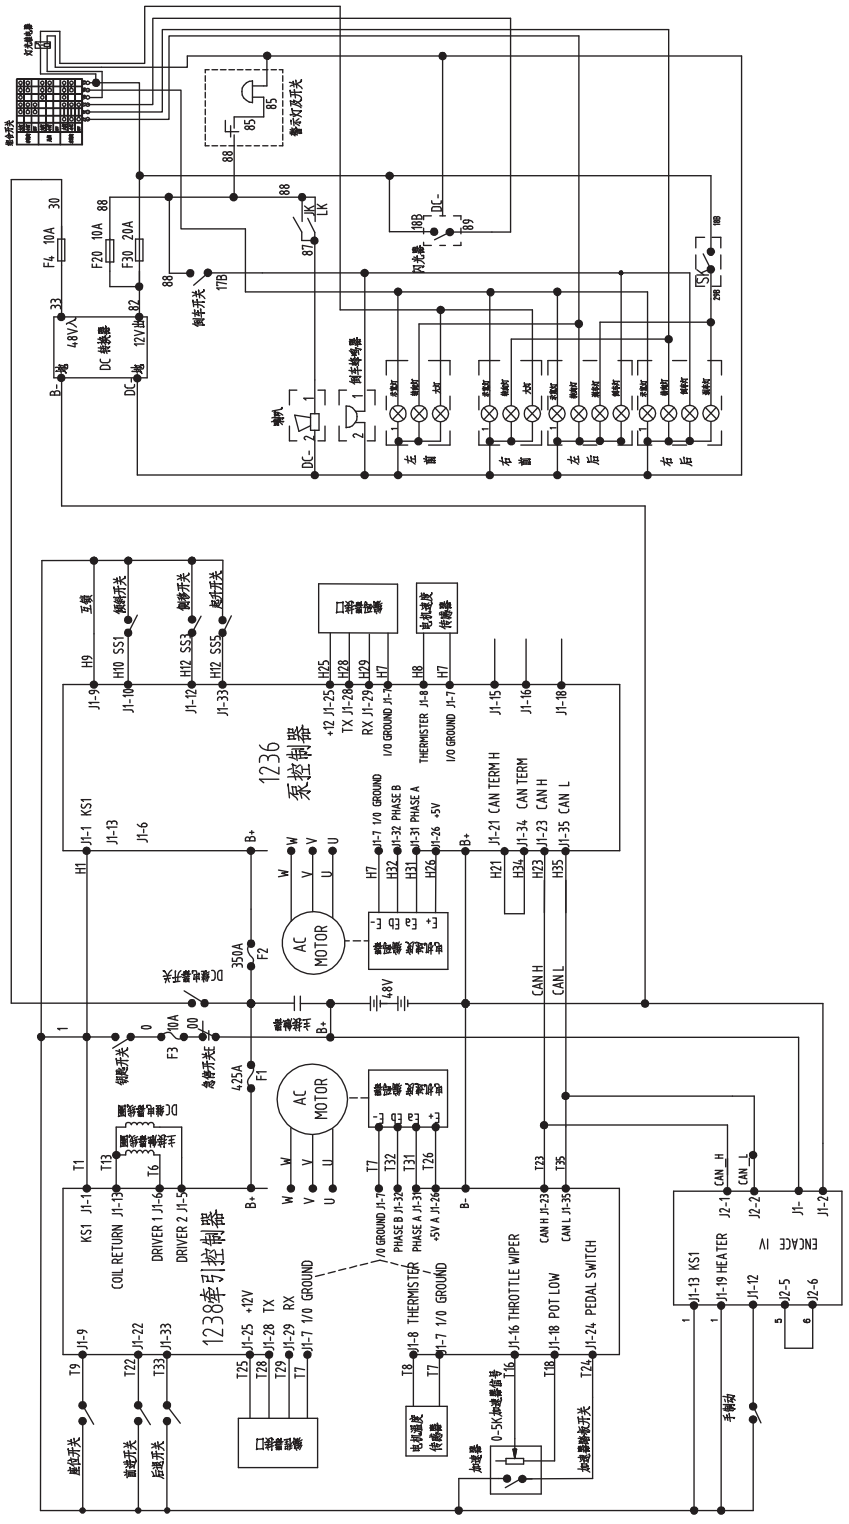

https://truckmanualshub.com/


电气原理图
Principle diagram

FB20/25-C3

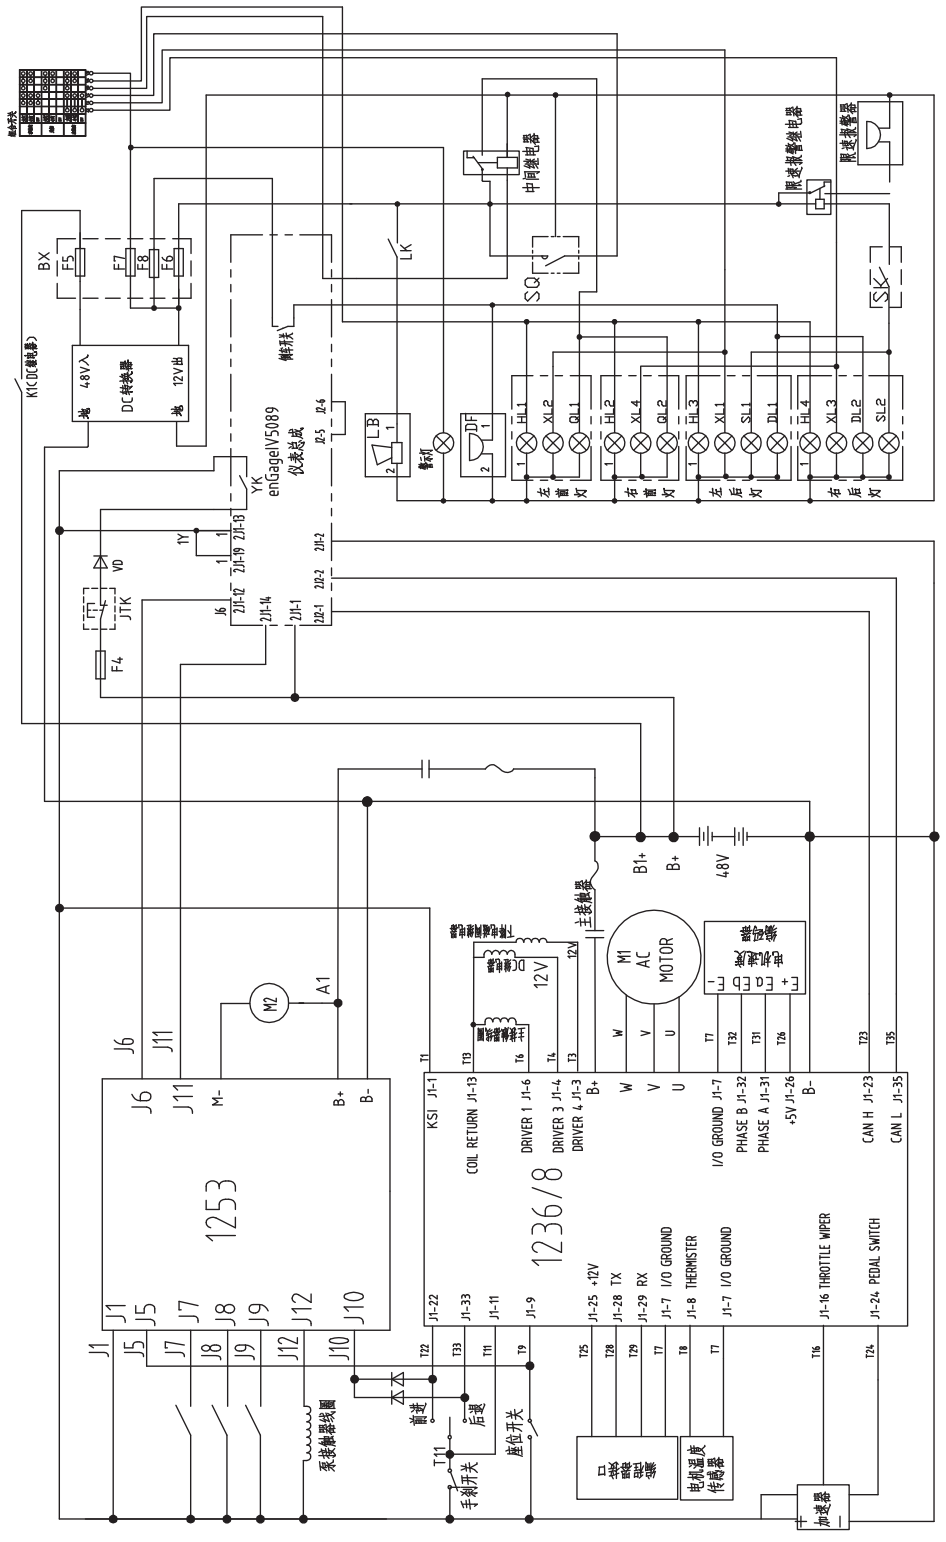

https://truckmanualshub.com/

左右护顶架线束
Left and right overhead guard wire harness

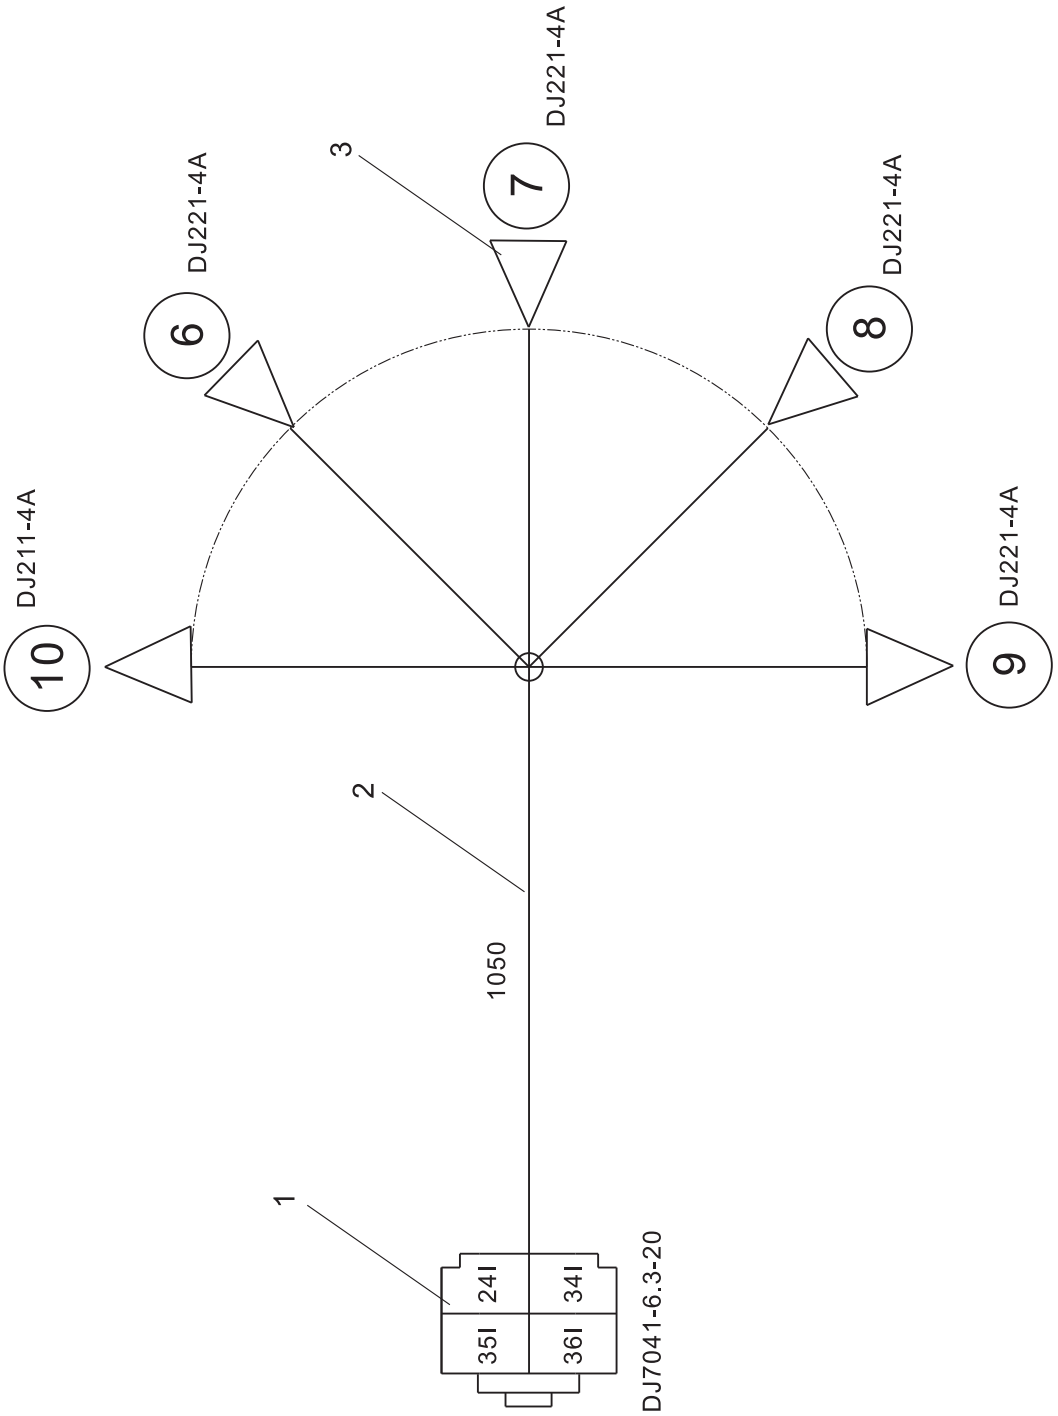

https://truckmanualshub.com/


左右护顶架线束
Left and right overhead guard wire harness

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A2-00500	左护顶架线束 Left overhead guard wire harness	1	
B	A15A2-00600	右护顶架线束 Right overhead guard wire harness	1	
1	DJ7041-6.3-20	四芯复合插座 4-Wire composite socket	1	
2	FJ-81	黑色粘胶带 Black sticky insulated belt	2m	
3	DJ221-4A	圆形插座 Rounded socket	5	

https://truckmanualshub.com/

整车线束
Vehicle harness


FB30/35-S1

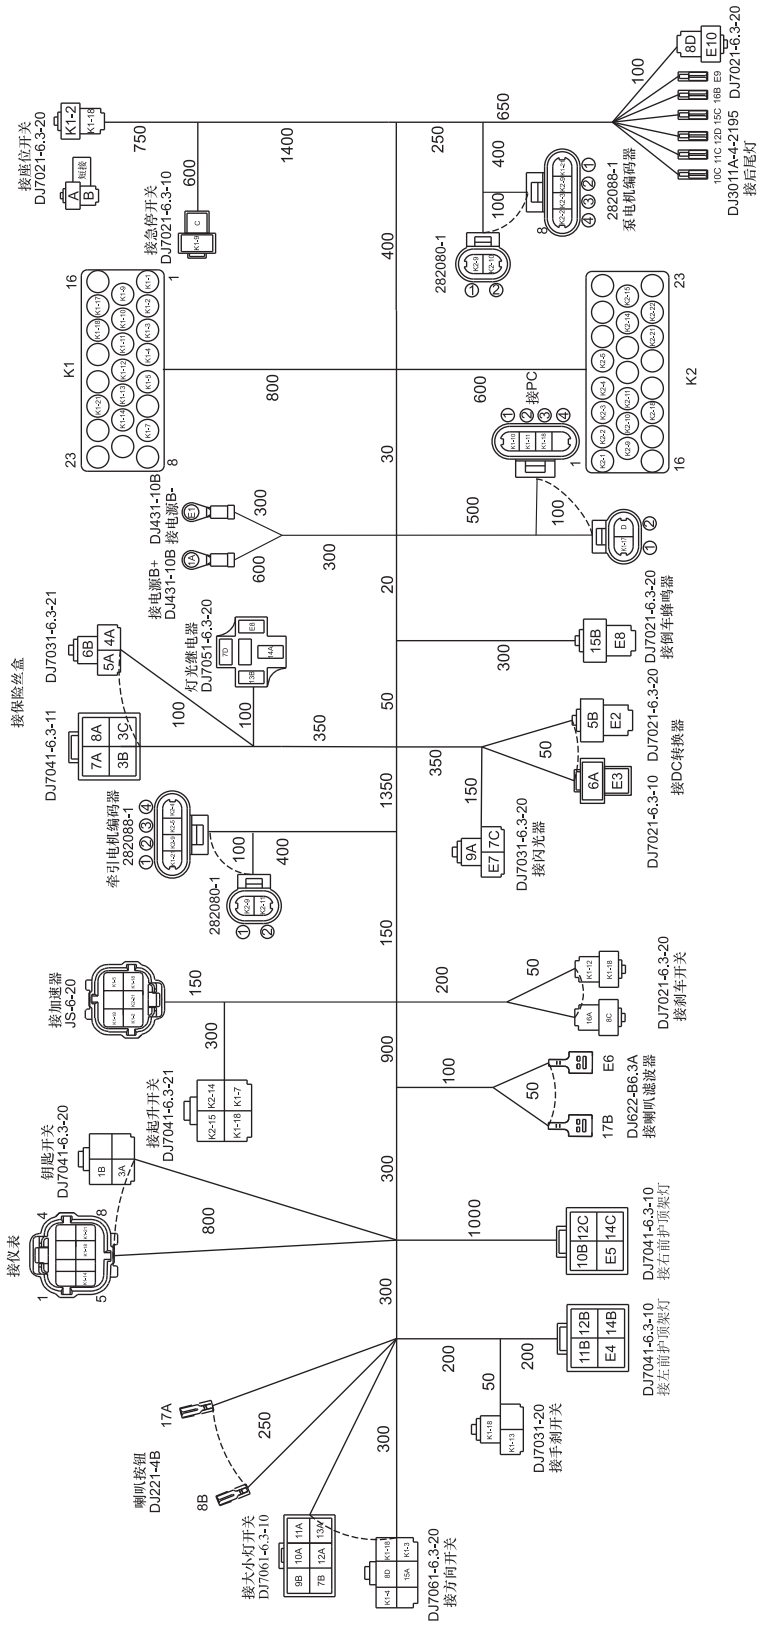

https://truckmanualshub.com/

整车线束
Vehicle harness


FB30/35-C1

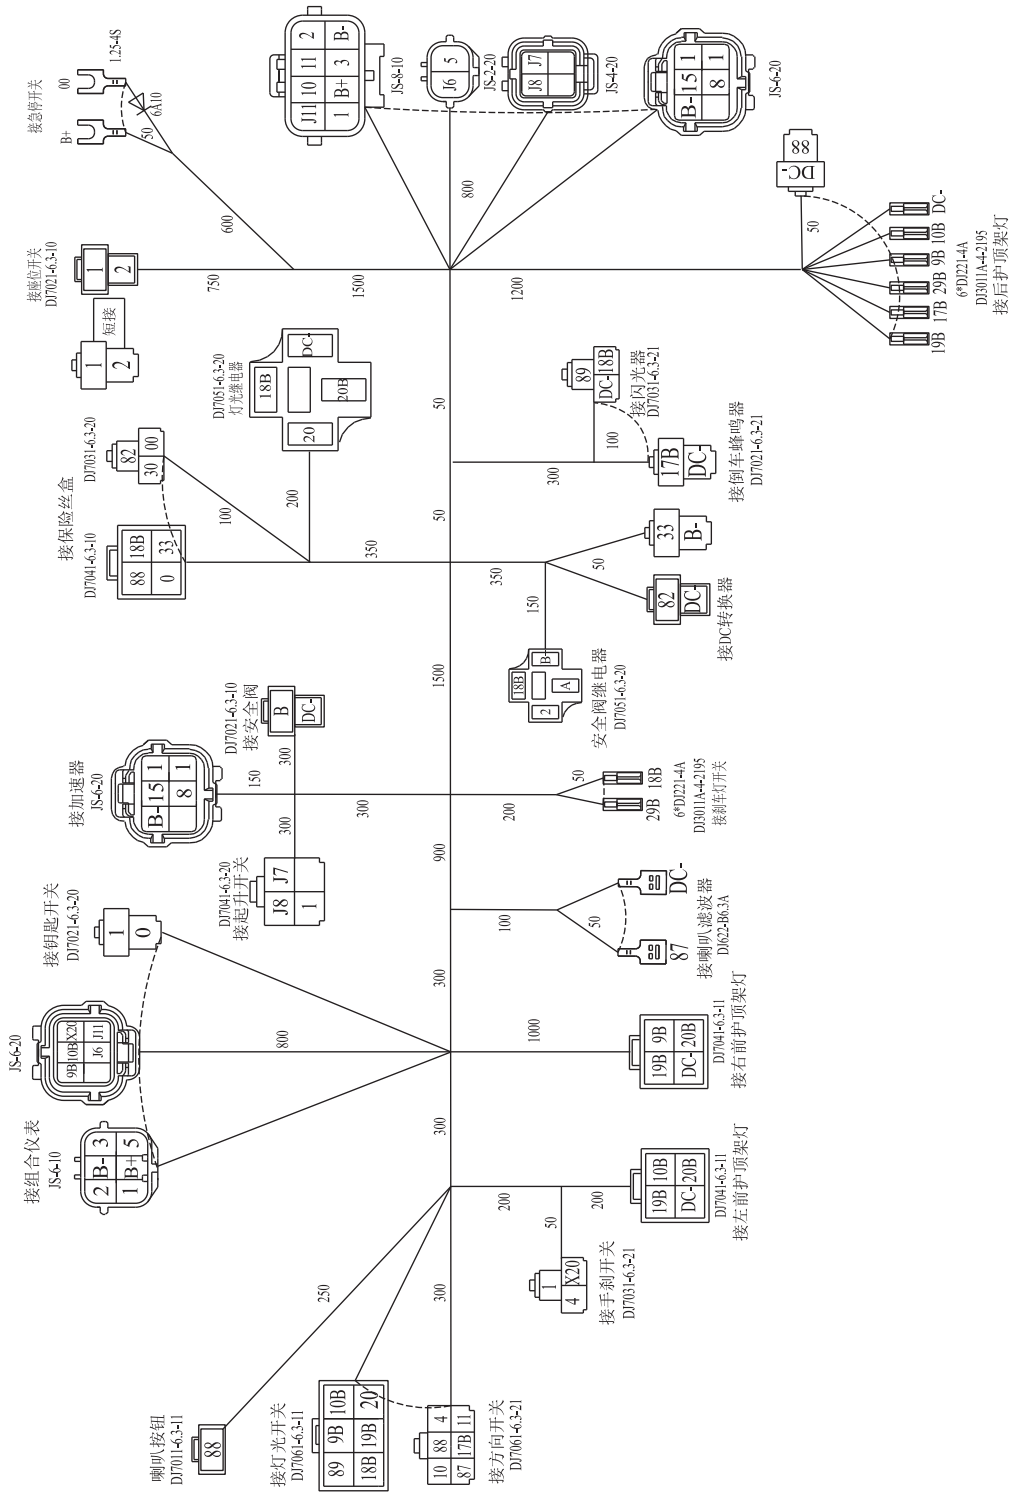

https://truckmanualshub.com/

整车线束
Vehicle harness


FB30/35-C2

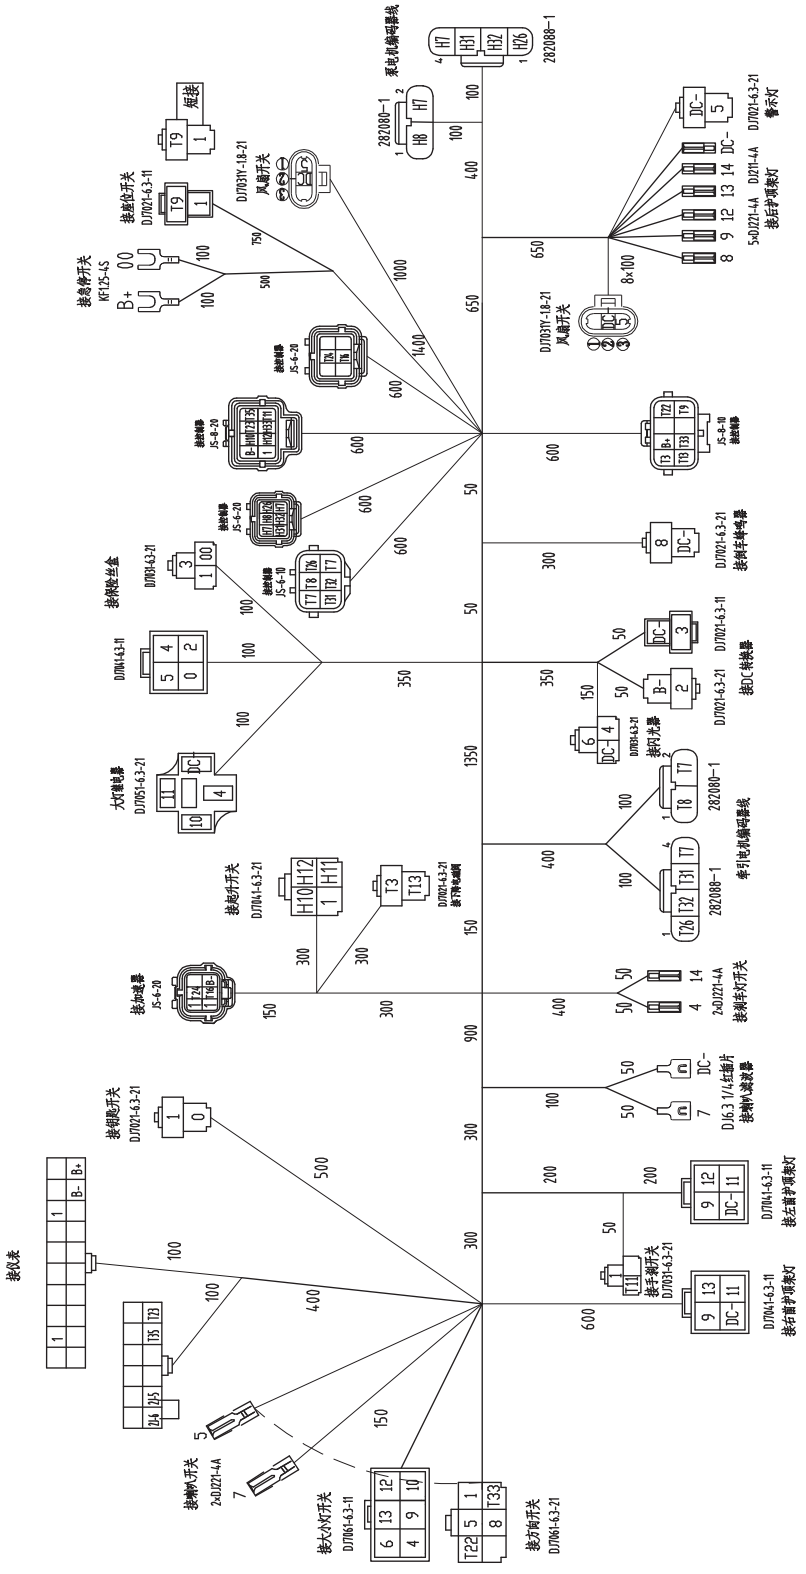

https://truckmanualshub.com/


整车线束
Vehicle harness

FB30/35-C3

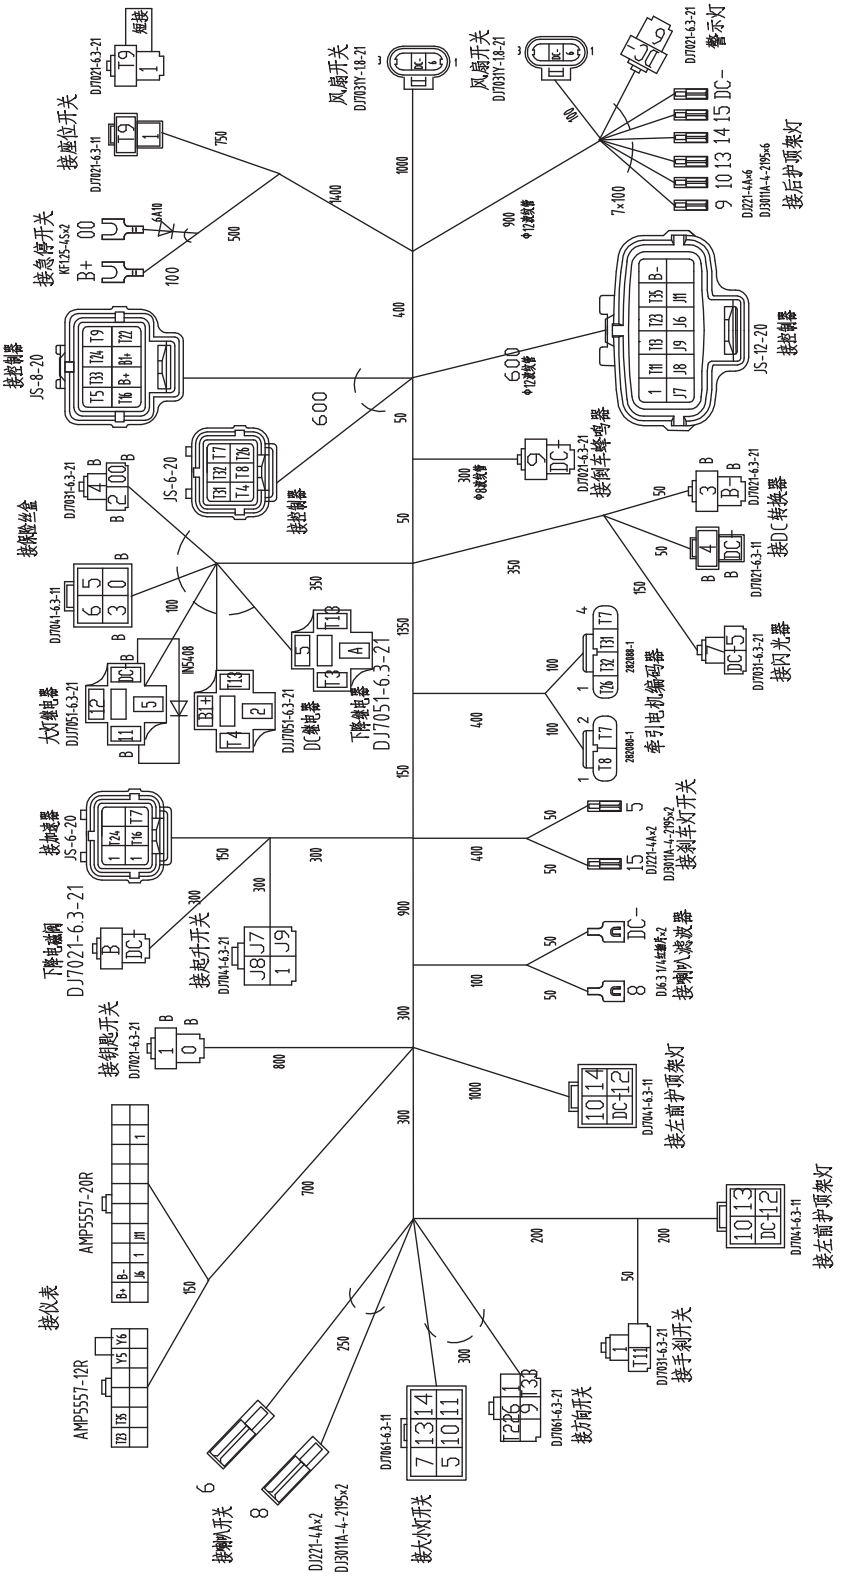

https://truckmanualshub.com/

手制动开关
Hand brake switch

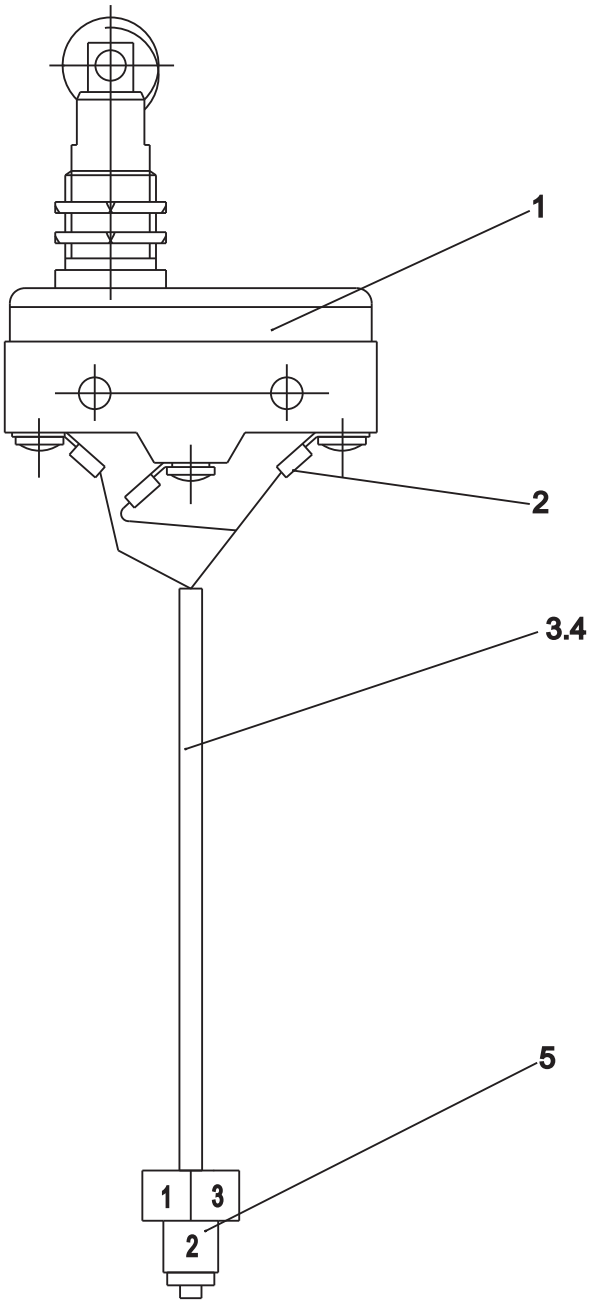


https://truckmanualshub.com/

手制动开关
Hand brake switch

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A15A2-00202	微动开关 Micro distance switch	1	
2	DJ431-4	片形孔式接线端子 Connector	3	
3		黑色套管 φ5 L=110 Black casing	1	
4	QVR	软导线（截面1mm）Soft wire(section=1mm)	1	
5	DJ2031-6.3-20	二芯复合插座 2-Wire composite plug	1	

https://truckmanualshub.com/

电源插座总成
Battery socket ass'y

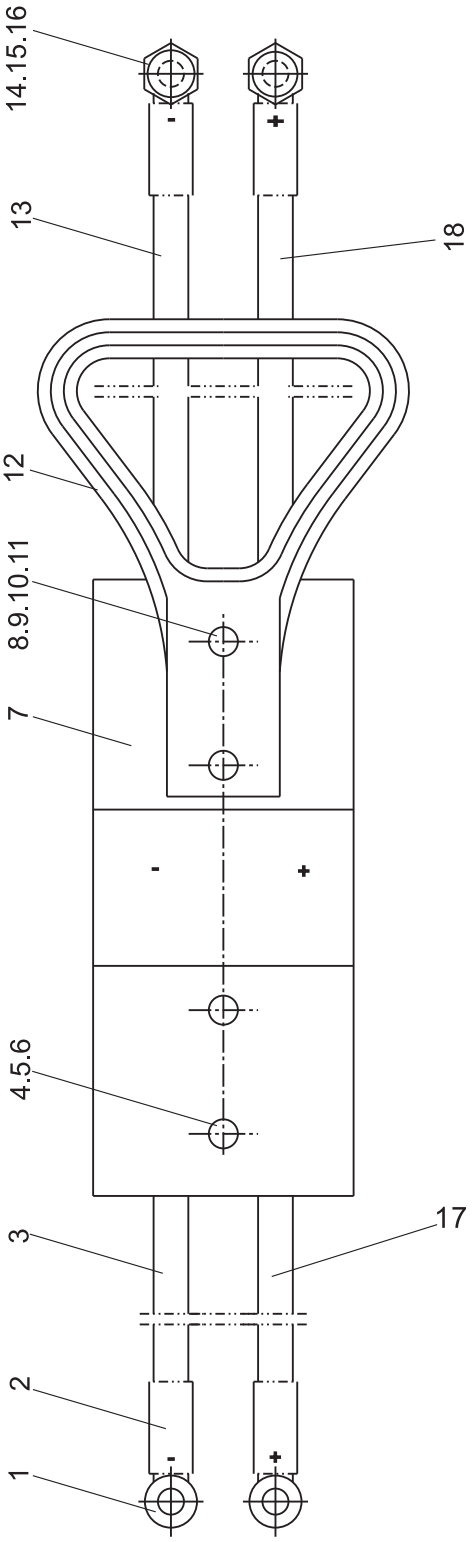

https://truckmanualshub.com/


电源插座总成
Battery socket ass'y

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	QT35-8	冷压接线端子φ8 Connector	3	
2		热缩套管φ16×60 Plastic pipe	4	
3	YHHRD	电缆线50mm^2,L=2600 Cable	1	
4	GB/T65	螺钉M6×45-Zn.D Screw	2	
5	GB/T93	弹垫6 Washer,lock	4	
6	GB/T97.1	平垫6 Washer	4	
7	SB350	两芯接插件 2-wire composite socket	2	
8	GB/T65	螺钉M6×40-Zn.D Screw	2	
9	G/TB6170	螺母M6-Zn.D Nut	2	
10	C1Q01-25101	拉手 Puller	1	
11	YHHRD	电缆线50mm^2,L=1100 Cable	1	
12	GB/T5783	螺栓M8×25 Bolt	2	
13	GB/T6170	螺母M8 Nut	2	
14	GB/T97.1	平垫8 Washer	2	
15	GB/T93	弹垫8 Washer,lock	2	
16	QT50-10	冷压接线端子φ10 Connector	1	
17	YHHRD	电缆线50mm^2,L=2500 Cable	1	
18	YHHRD	电缆线50mm^2,L=1350 Cable	1	

https://truckmanualshub.com/

电控总成
Controller ass'y

FB30/35-S1

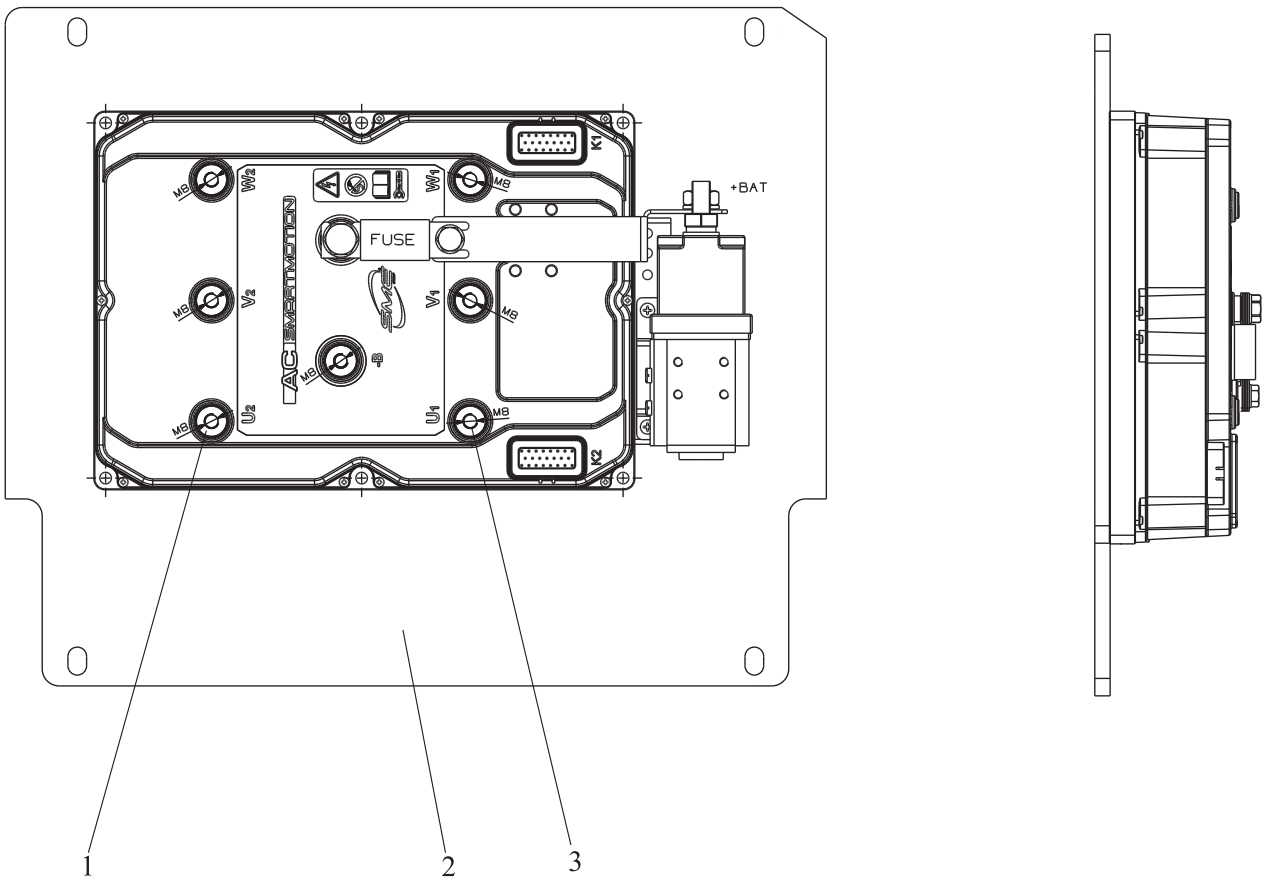

https://truckmanualshub.com/


电控总成 Controller ass'y FB30/35-S1

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A30JS2-00700	电控总成 Controller ass'y	1	
1	A30JS2-00701	泵控制器 Pump controller	1	
2	A30JS2-00702	散热底板 Floor cooling	1	
3	A30JS2-00703	牵引控制器 Traction controller	1	

https://truckmanualshub.com/

电控总成
Controller ass'y

FB30/35-C1

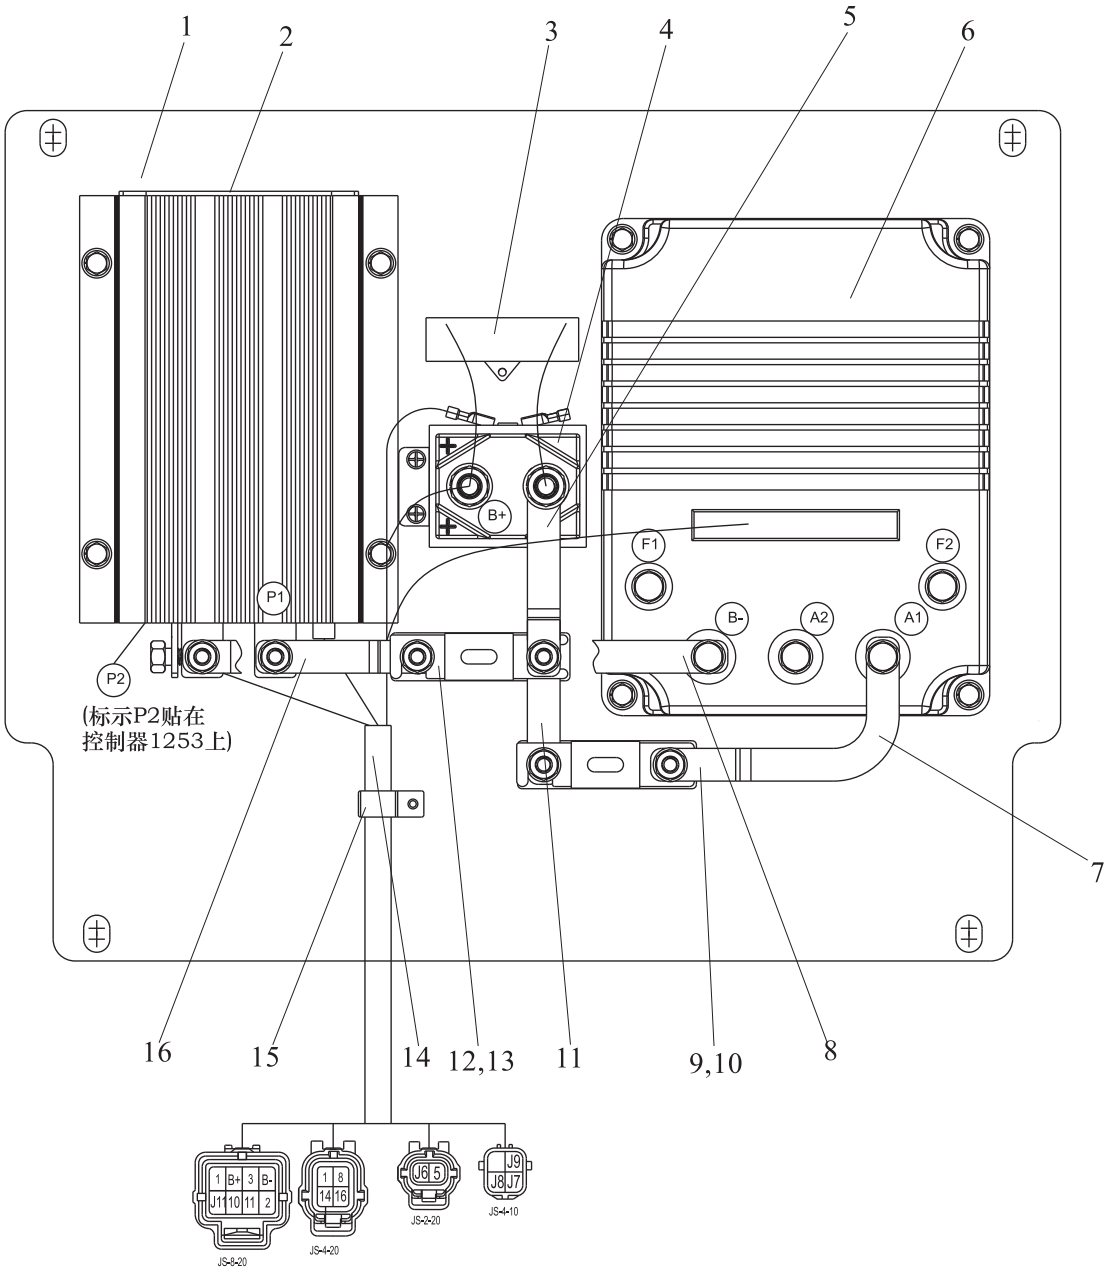

https://truckmanualshub.com/


电控总成 Controller ass'y FB30/35-C1

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A30Y2-00700	电控总成 Controller ass'y	1	
1	A30Y2-00707	散热底板 Floor cooling	1	
2	A30Y2-00702	泵控制器 PumpSmart	1	
3	A30Y2-00703	1244保护器盒 1244 protector box	1	
4	A30Y2-00704	主接触器 Main contactor	1	
5	A30Y2-00714	铜排一 Tblp	1	
6	A30Y2-00705	牵引控制器 Traction controller	1	
7	A30Y2-00715	铜排二 Tblp	1	
8	A30Y2-00716	铜排三 Tblp	1	
9	A30Y2-00717	熔断器 Fuse	1	
10	A30Y2-00706	250A熔断器 Fuse	1	
11	A30Y2-00711	铜排四 Tblp	1	
12	A30Y2-00710	熔断器 Fuse	1	
13	A30Y2-00708	350A熔断器 Fuse	1	
14	A30Y2-00701	控制线束 Control wire	1	
15	A30Y2-00713	R6半线卡 Wireclamp	1	
16	A30Y2-00712	铜排五 Tblp	1	

https://truckmanualshub.com/

电控总成
Controller ass'y

FB30/35-C2

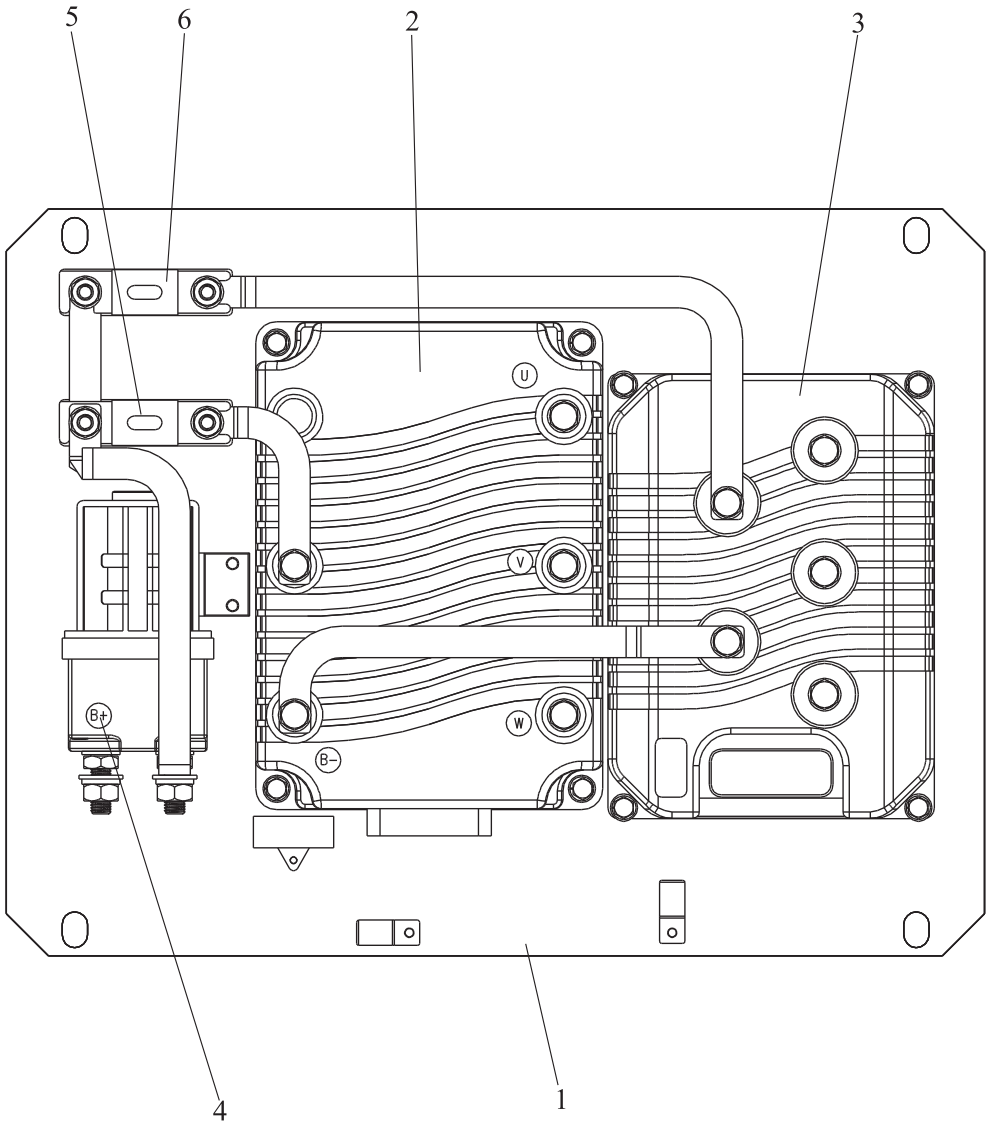

https://truckmanualshub.com/


电控总成 Controller ass'y FB30/35-C2

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A35K2-10100	电控总成 Controller ass'y	1	
1	A35K2-10102	散热底板 Floor cooling	1	
2	A35K2-10101	牵引控制器 Traction controller	1	
3	A35K2-10103	泵控制器 Pump controller	1	
4	A35K2-10104	主接触器 Main contactor	1	
5	A35K2-10105	350A熔断器 Fuse	1	
6	A35K2-10106	250A熔断器 Fuse	1	

https://truckmanualshub.com/

电控总成
Controller ass'y

FB30/35-C3

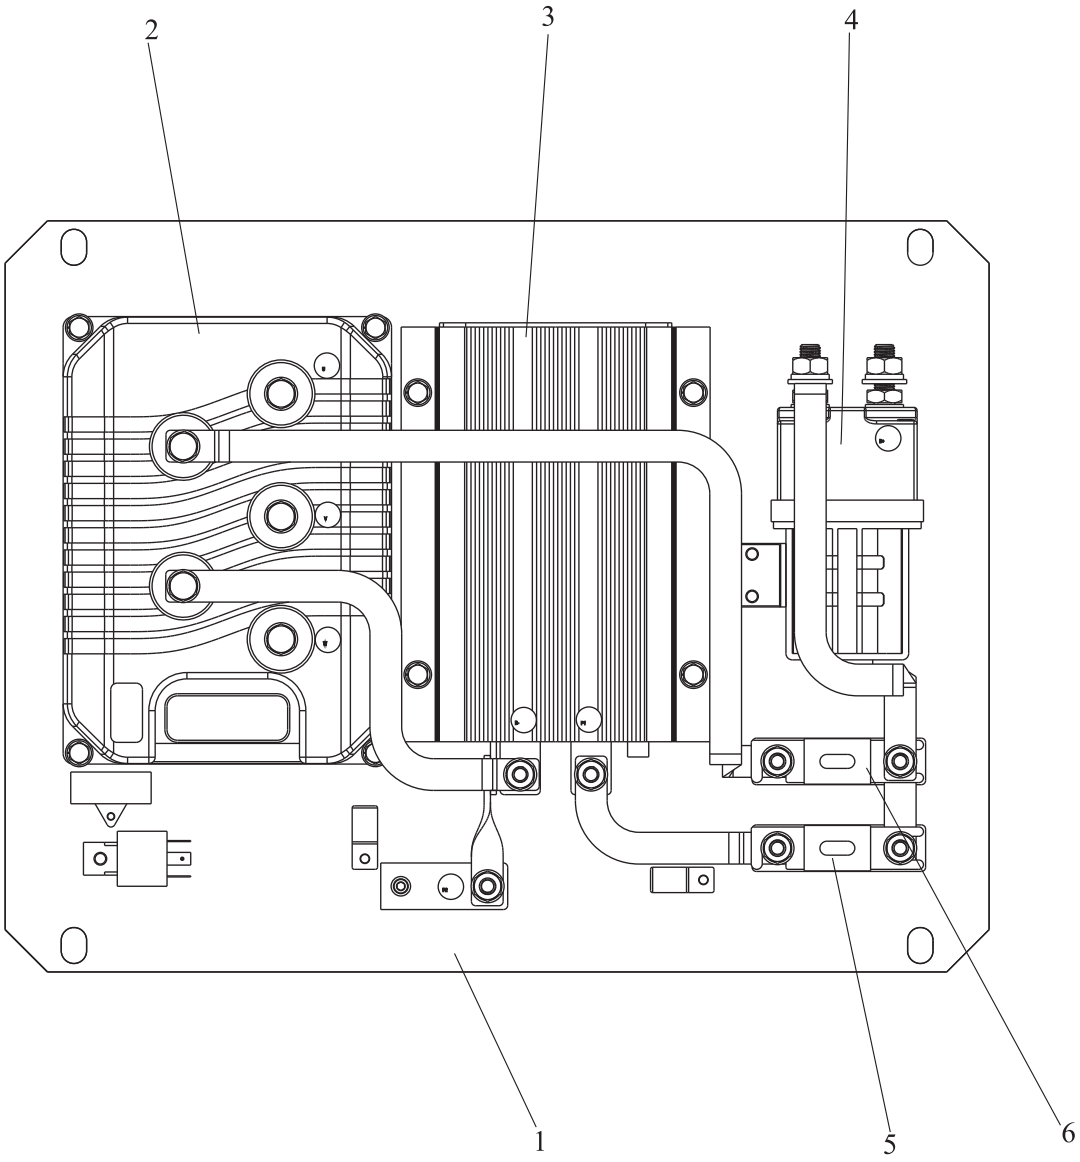


https://truckmanualshub.com/

电控总成 Controller ass'y FB30/35-C3

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A35R2-10100	电控总成 Controller ass'y	1	
1	A35R2-10102	散热底板 Floor cooling	1	
2	A35R2-10101	牵引控制器 Traction controller	1	
3	A35R2-10103	泵控制器 Pump controller	1	
4	A35R2-10104	主接触器 Main contactor	1	
5	A35R2-10105	350A熔断器 Fuse	1	
6	A35R2-10106	250A熔断器 Fuse	1	

https://truckmanualshub.com/

蓄电池组
Battery ass'y

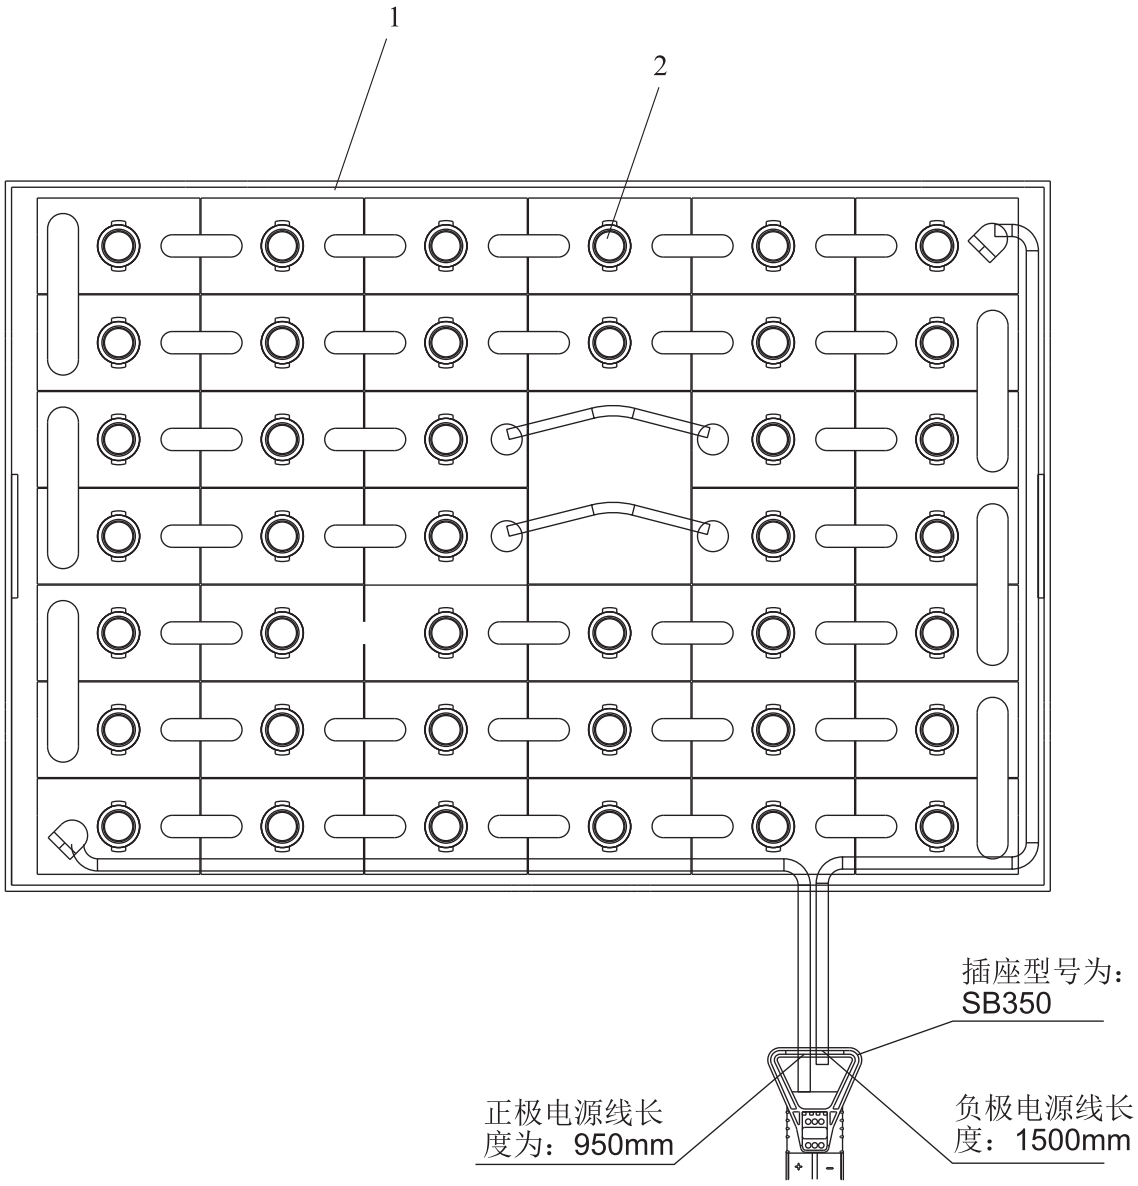

https://truckmanualshub.com/

蓄电池组
Battery ass'y

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A35G2-20100	蓄电池 Battery ass'y	1	3t标配
-	A35G2-20300	蓄电池 Battery ass'y	1	3.5t标配
1	A35G2-20110	蓄电池箱体 Box	1	
2	5DB500	蓄电池单体 Battery	1	3t标配
-	5DB550H	蓄电池单体 Battery	1	3.5t标配


https://truckmanualshub.com/

三、转向系统

STEERING SYSTEM

https://truckmanualshub.com/

转向操纵
Steering control

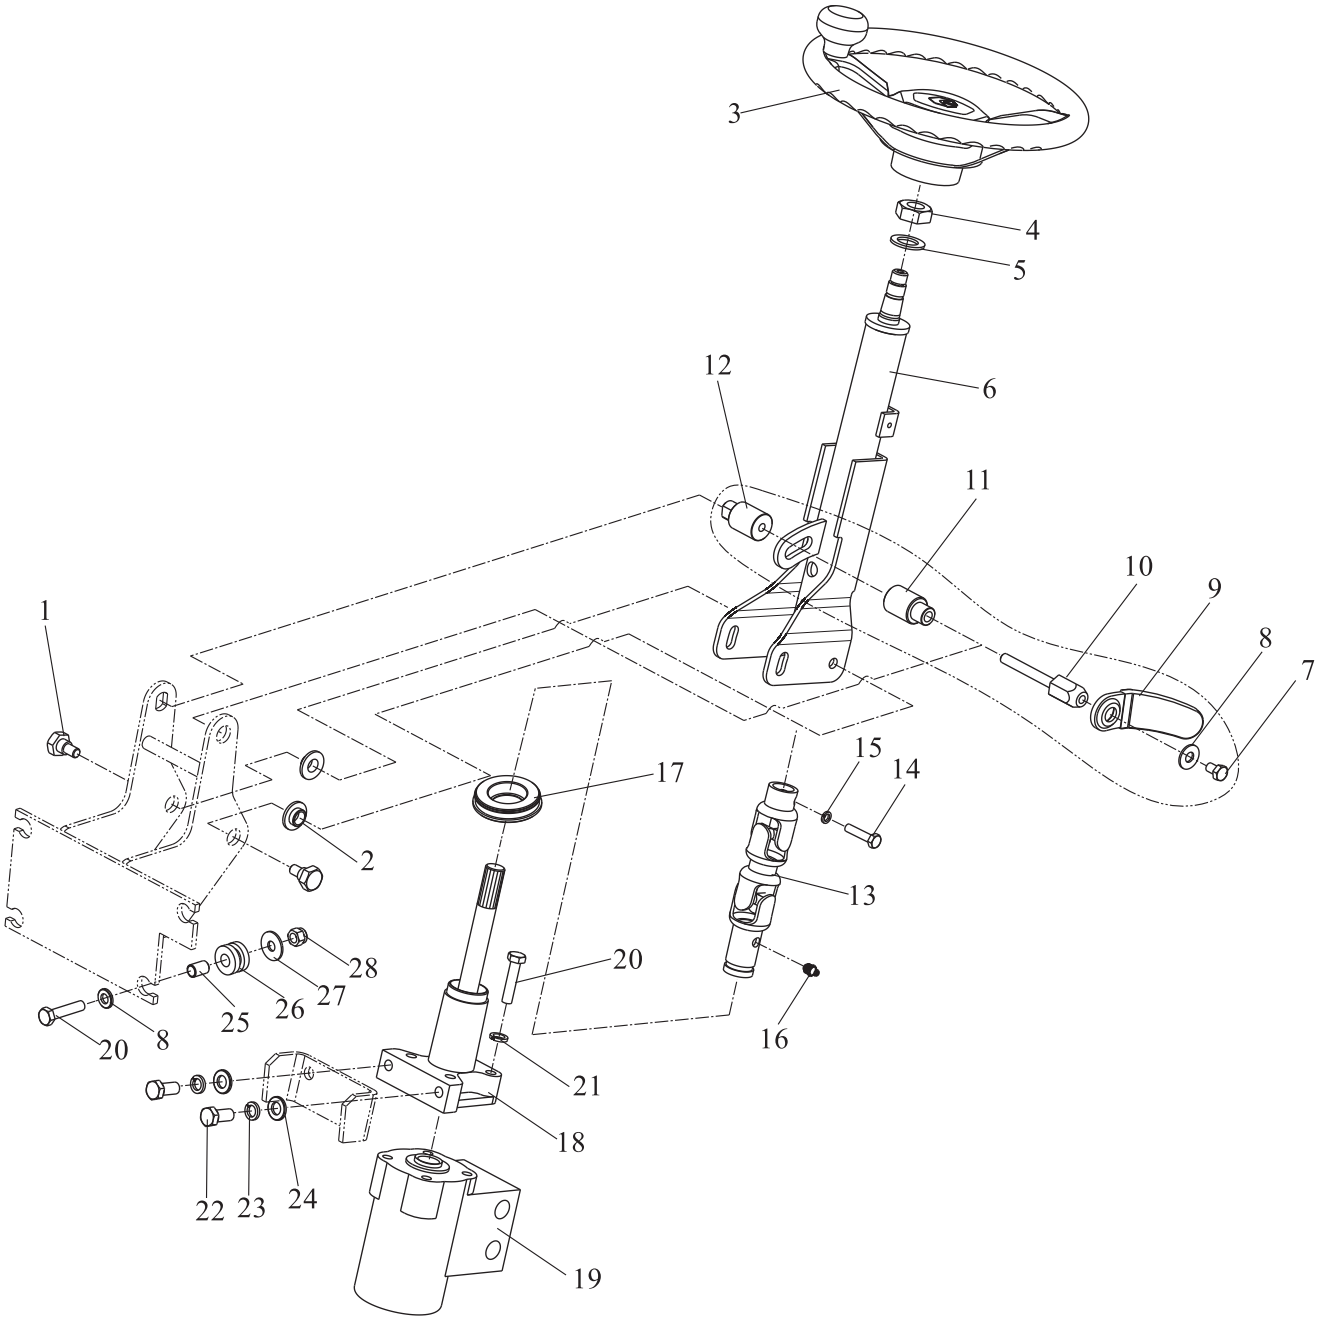


https://truckmanualshub.com/

转向操纵
Steering control

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A30A6-00005	螺栓 Bolt	2	
2	A30A6-00004	垫圈 Washer	2	
3	A15A6-00200	方向盘总成φ300 Wheel,Steering ass'y	1	
4	GB/T6171	螺母M16×1.5 Nut	1	
5	GB/T97.1	平垫16 Washer	1	
6	A15G6-00100	转向管柱总成 Steering column	1	
7	GB/T5783	螺栓M10×65 Bolt	1	
8	GB/T97.1	平垫10 Washer	5	
9	A15G6-00204	手柄 Lever	1	
10	A15G6-00203	调整螺栓 Bolt	1	
11	A15G6-00202	夹紧套II Clamping sleeve	1	
12	A15G6-00201	夹紧套 Clamping sleeve	1	
13	A30C6-00200	万向节总成 Joint	1	
14	GB/T5783	螺栓M8×45 Bolt	1	
15	GB/T93	弹垫 8 Washer,lock	1	
16	JB/T7940.1	直通式压注油杯 Cup, grease	1	
17	A30C6-00004	密封盖 Seal cover	1	
18	A30C6-00300	连接轴总成 Link ass'y	1	
19	A25A4-40000	转向器 Redirector	1	
20	GB/T5783	螺栓M10×45 Bolt	8	
21	GB/T93	弹垫 10 Washer,lock	4	

https://truckmanualshub.com/

转向操纵
Steering control

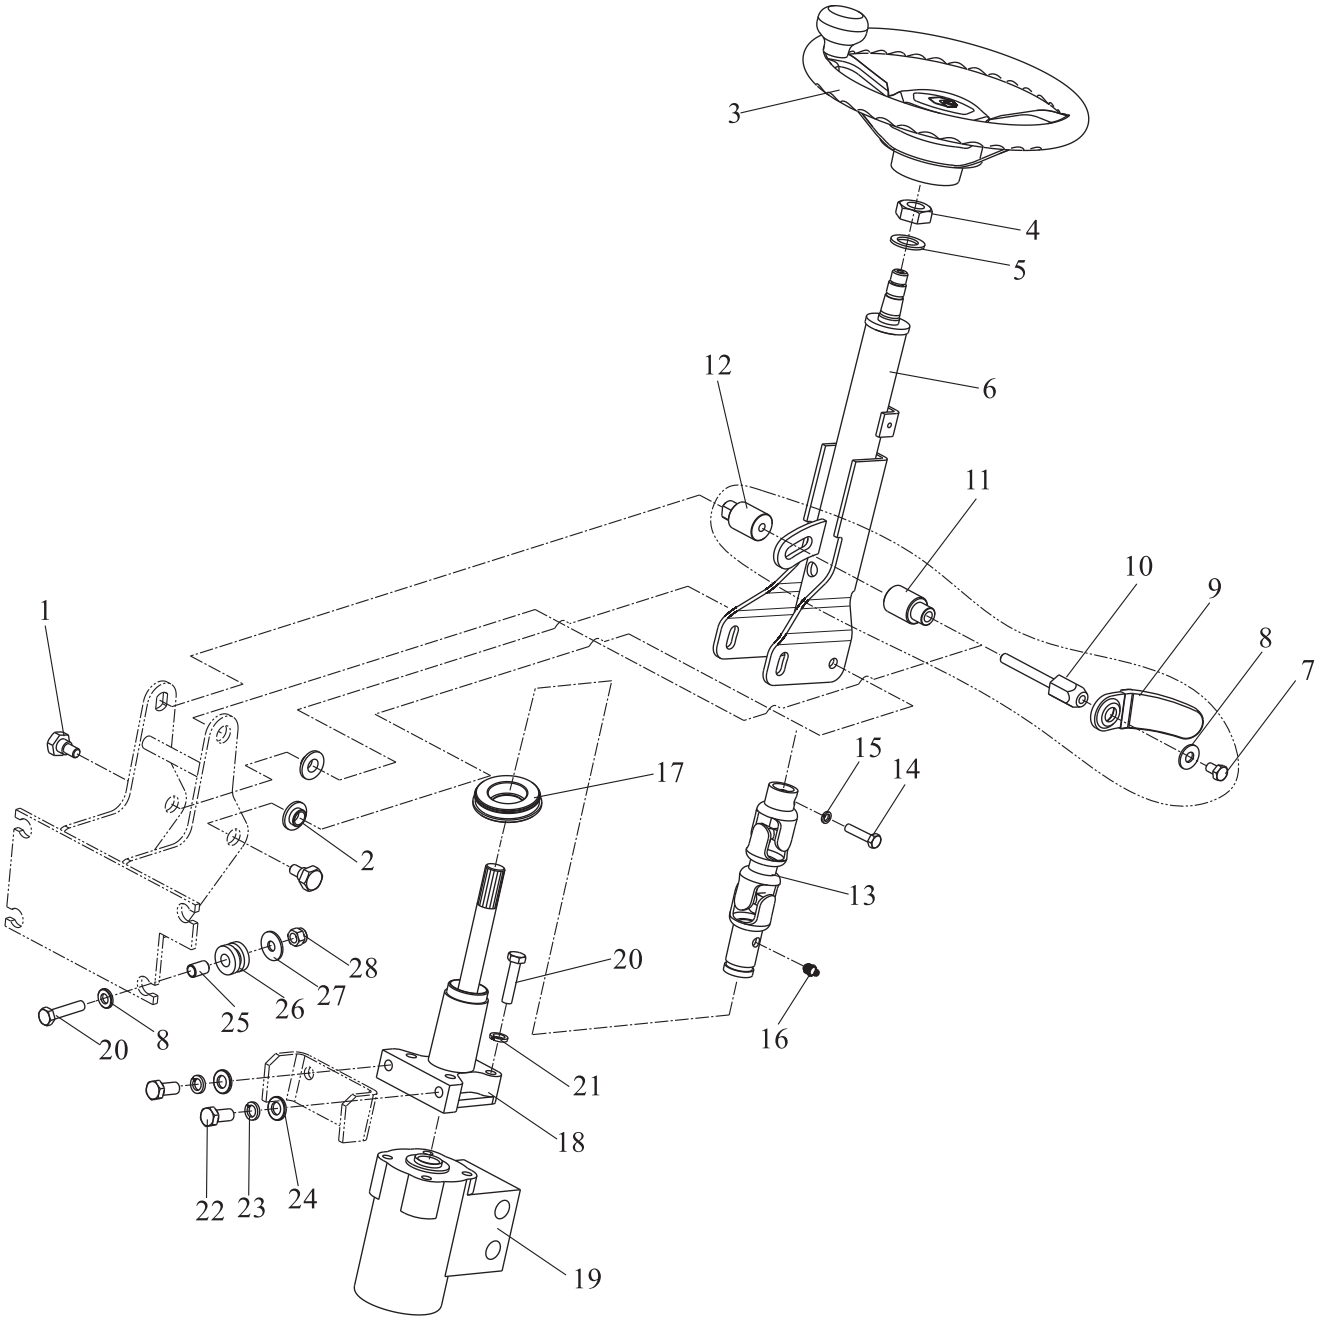


https://truckmanualshub.com/

转向操纵
Steering control

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
22	GB/T5786	螺栓M12×1.25×25 Bolt	2	
23	GB/T93	弹垫 12 Washer,lock	2	
24	GB/T97.1	平垫 12 Washer	2	
25	D30A1-20002	减振垫 Rubber	4	
26	A30A7-40001	套管 Pipe	4	
27	A30A5-20003	垫片 Washer	4	
28	GB/T889.1	非金属嵌件六角锁紧螺母M10 Nut	4	

https://truckmanualshub.com/

转向桥
Steering axle

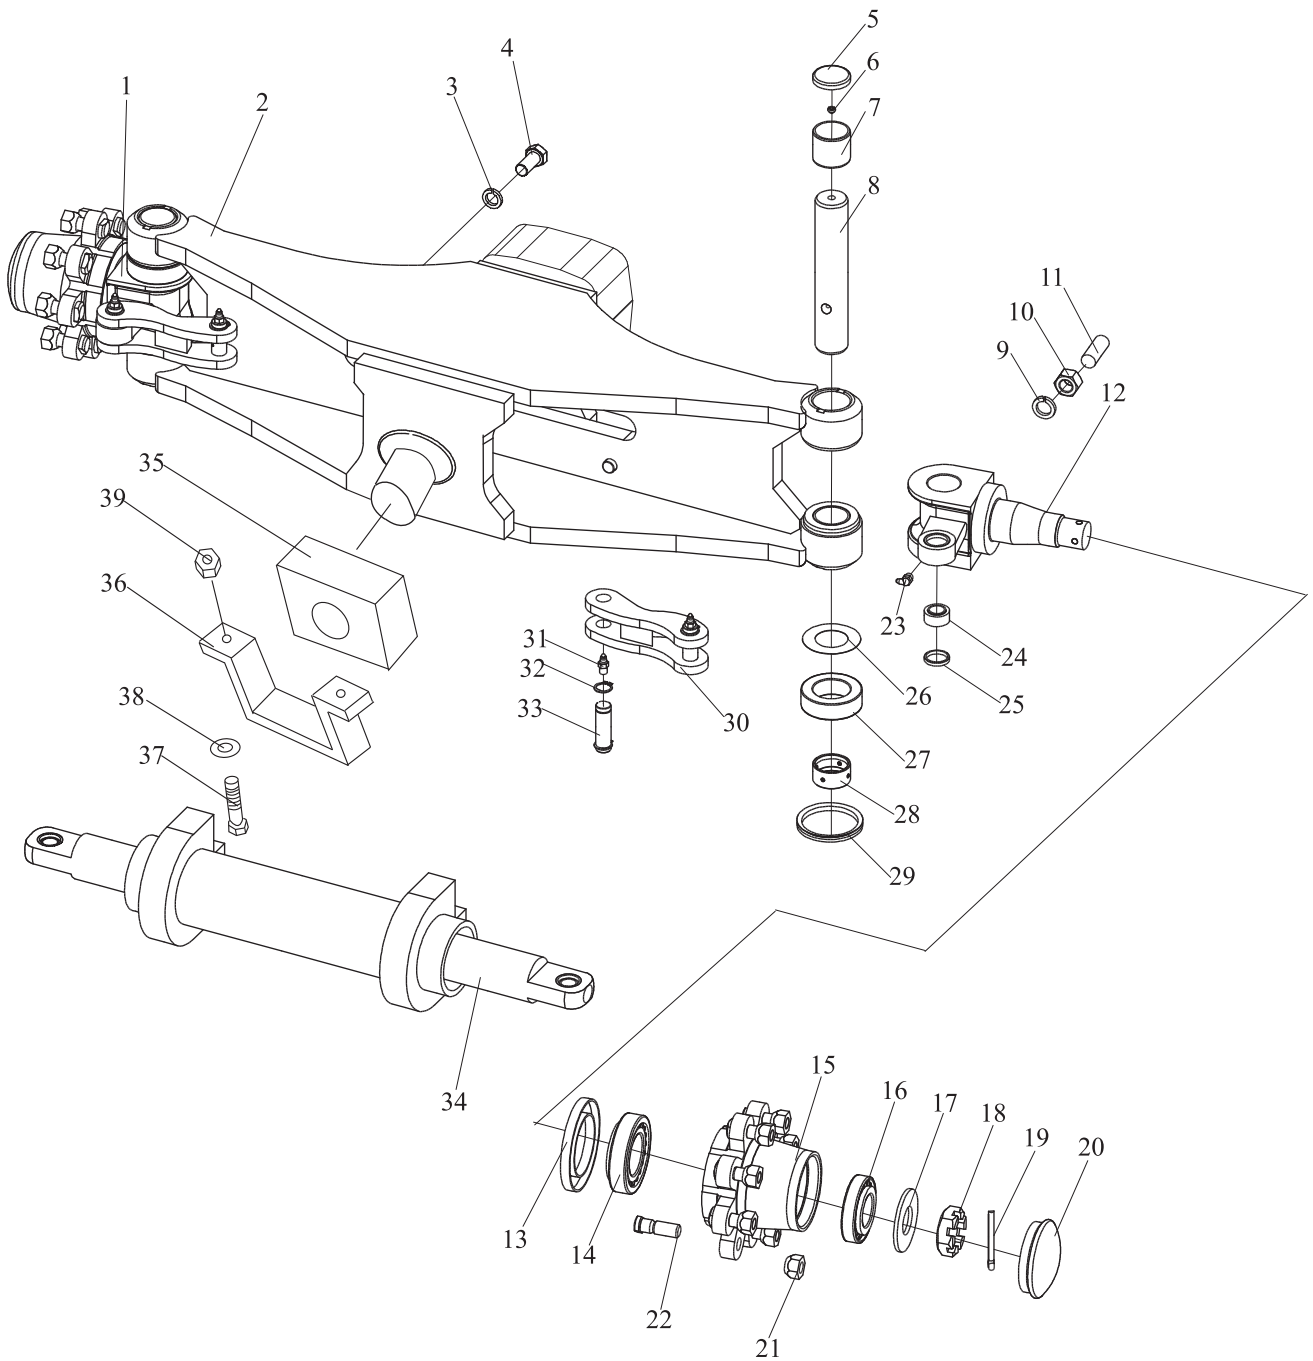


https://truckmanualshub.com/

转向桥
Steering axle

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A35G6-10102	左转向节总成 Knuckle L. H. ass'y	1	
2	A35G6-10101	转向桥体总成 Steering Axle ass'y	1	
3	GB/T93	弹垫14 Washer,lock	4	
4	GB/T5783	螺栓M14×45 Bolt	4	
5	A35G6-10101	封盖 Cover	4	
6	GB/T818	十字槽盘头螺钉M8×6 Screw	2	
7	A35G6-10103	轴套 Bushing	4	
8	A35G6-10104	主销 Pin	2	
9	GB/T93	弹垫16 Washer,lock	2	
10	GB/T6170	螺母M16 Nut	2	
11	GB/T5783	螺栓M16×50 Bolt	2	
12	A35G6-10105	右转向节总成 Knuckle R. H. ass'y	1	
13	GB/T13871	密封圈B75×100×10D Ring seal	2	
14	GB/T297-84	轴承30209 Bearing	2	
15	A35G6-10106	轮毂 Hub	2	
16	GB/T297	轴承30207 Bearing	2	
17	GB/T97. 1	垫圈30 Washer	2	
18	GB/T6171	螺母M30×2 Nut	2	
19	GB/T91	销6.3×50 Pin	2	
20	A35G6-10107	轮毂盖 Cap	2	
21	A15A6-10001	轮毂螺母 Nut	16	
22	A15A6-10002	轮毂螺栓 Bolt	16	

https://truckmanualshub.com/

转向桥
Steering axle

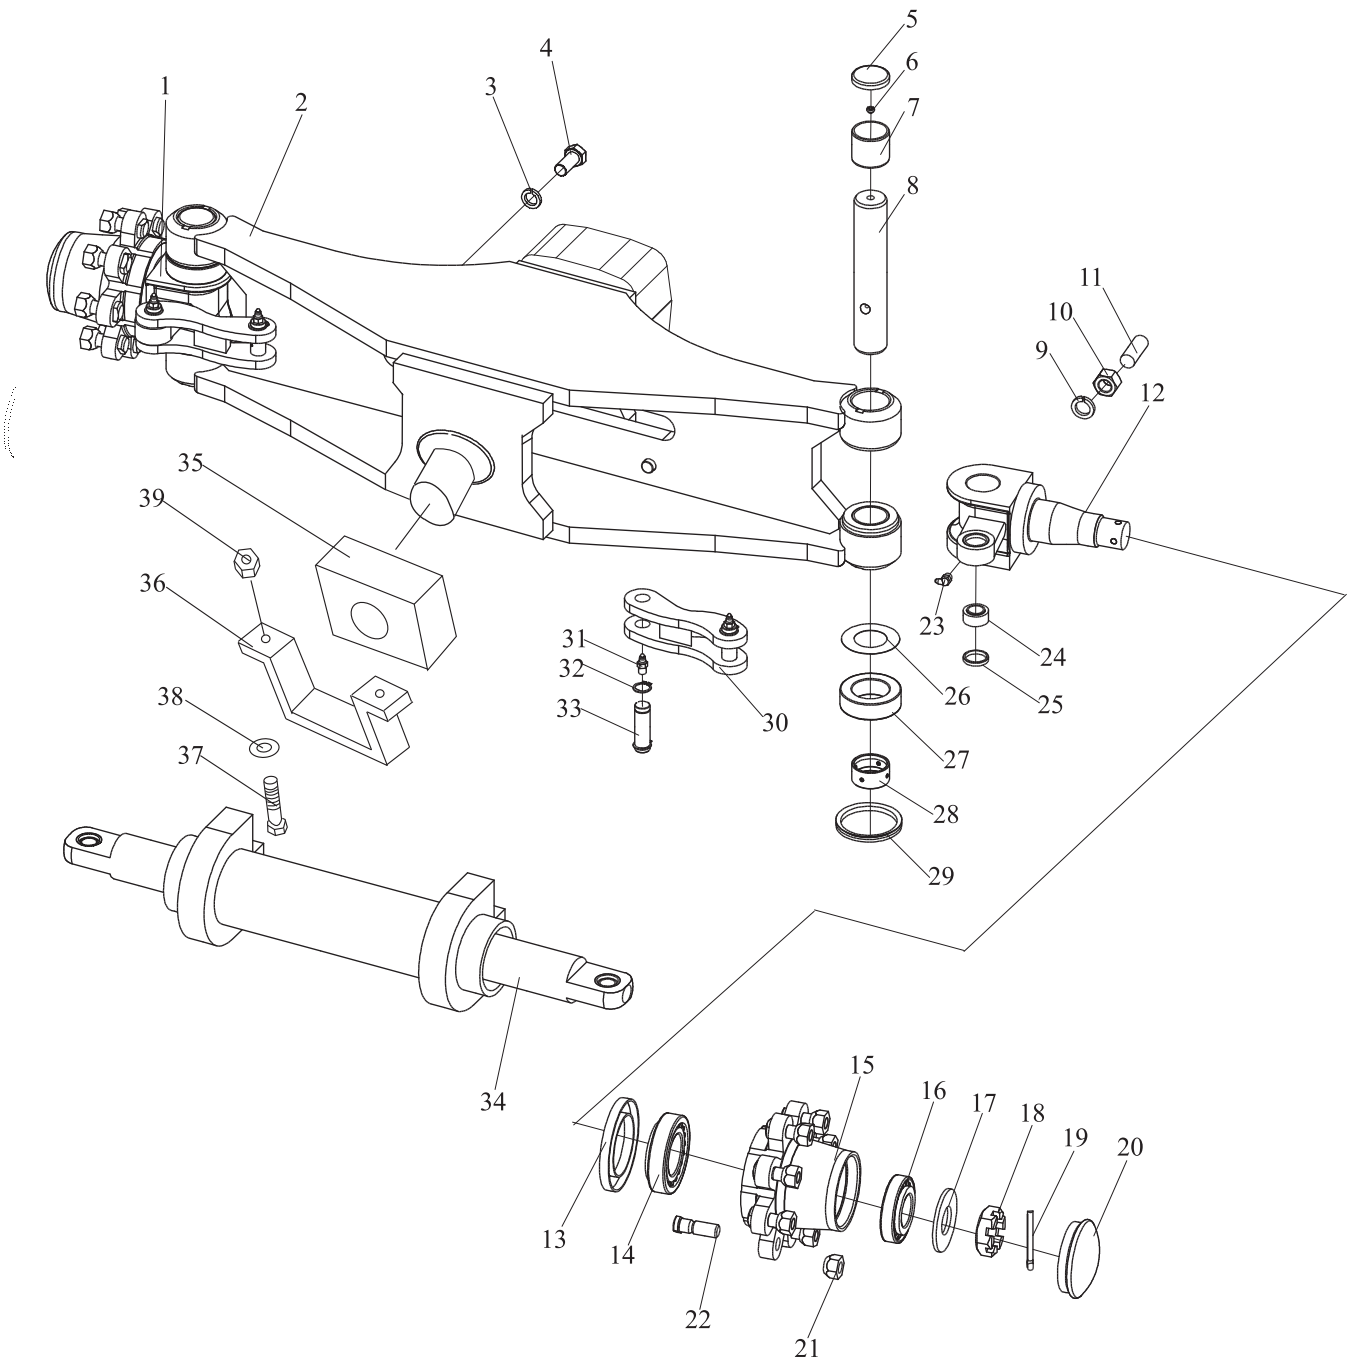


https://truckmanualshub.com/

转向桥
Steering axle

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
23	ZBT33001.2	弯颈式油杯Z1/8" Fitting	2	
24	A30A6-10218	ES型向心关节轴承 Bearing	4	
25	A30A6-10213	衬套 Bushing	6	
26	A35G6-10108	密封垫 Shim	2	
27	GB/T297	轴承51208 Bearing	2	
28	A35G6-10109	衬套 Bushing	2	
29	A35G6-10110	V型密封圈 Ring	2	
30	A35G6-10111	连杆 Link	2	
31	ZBT33001.2	直通式滑脂嘴M6 Fitting	4	
32	GB/T894.1	挡圈16 Link	8	
33	A35G6-10112	连杆销 Pin	4	
34	A35G6-10200	转向油缸总成 Power cylinder ass'y	1	
35	A30A6-10001	减震块 Rubber	2	
36	A30A6-10002	支架盖 Bracket	2	
37	GB/T5783	螺栓 M16×40 Bolt	4	
38	GB/T97.1	平垫16 Washer	8	
39	GB/T899.1	锁紧螺母 M16 Nut	4	

https://truckmanualshub.com/

转向油缸
Steering cylinder

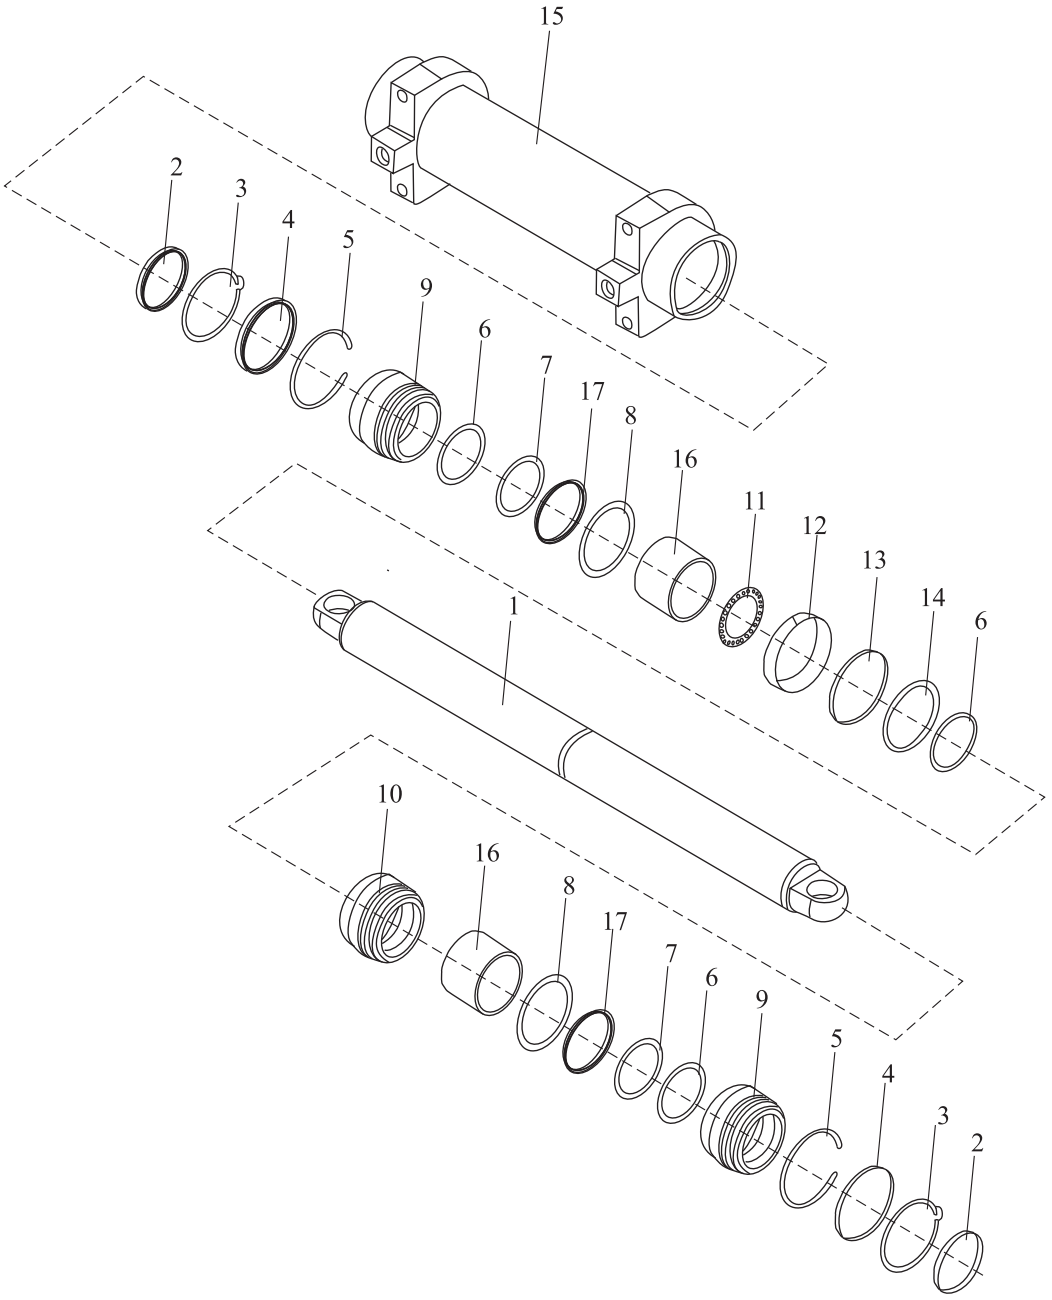


https://truckmanualshub.com/

转向油缸
Steering cylinder

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A35G6-10200	转向油缸总成 Power cylinder ass'y	1	
1	A35G6-10201	活塞杆 Piston rod	2	
2	A35G6-10202	防尘圈 50×58×5/6 Ring	2	
3	GB/T894.1	挡圈65 Snap ring	2	
4	A35G6-10203	肩套 Sleeve	2	
5	GB/T895.2	孔用钢丝挡圈 Snap ring	2	
6	GB/T3452.1	O型密封圈50×30×5.5 O-ring	2	
7	A35G6-10204	挡片50×60×3 Plate	2	
8	GB/T1235	O型密封圈70×3.1 O-ring	2	
9	A35G6-10205	缸头 Guade	2	
10	A35G6-10206	活塞 Piston	1	
11	GB/T308	钢球 Steel ball	25	
12	A35G6-10207	支撑环 Wearing	1	
13	A35G6-10208	支撑环 Wearing	1	
14	GB/T3452.1	O型密封圈60×3.55 O-ring	2	
15	A35G6-10209	缸筒总成 Cylinder body	1	
16	A35G6-10210	调节套 Sleeve	2	
17	A35G6-10211	U型密封圈50×60×6 U-ring	2	

https://truckmanualshub.com/

转向轮
Steering wheel

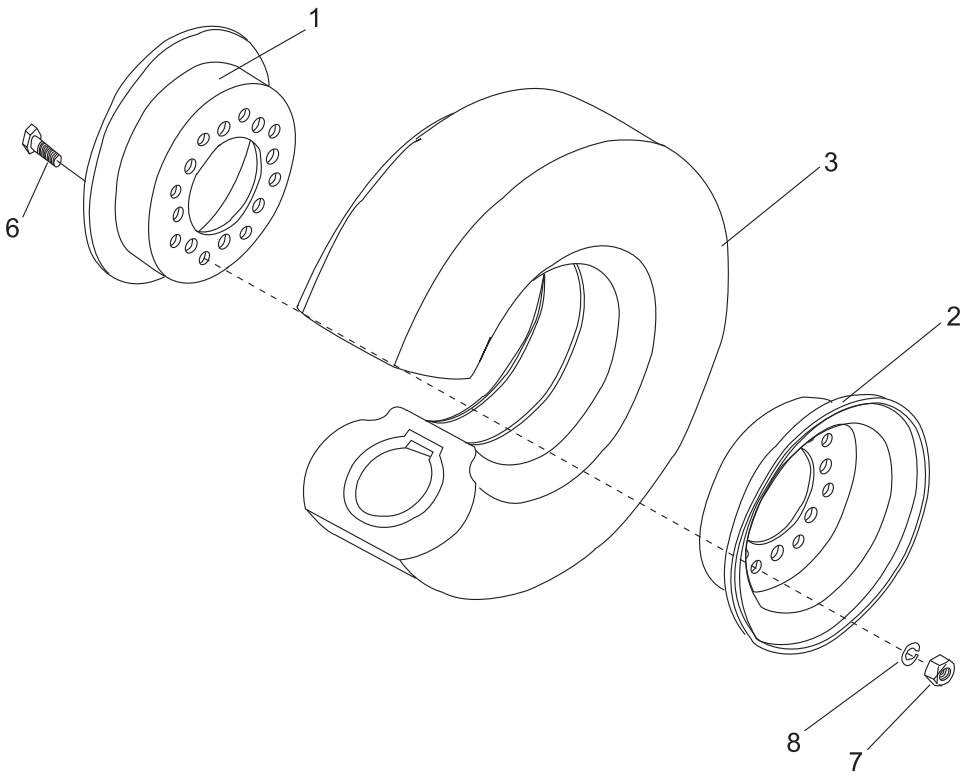

https://truckmanualshub.com/

转向轮
Steering wheel


序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A25A6-10101	外轮辋 Rim, outside	2	
2	A25A6-10102	内轮辋 Rim, inside	2	
3	GB/T2982	轮胎18×7-8-14PR Tire	2	
4	A30A6-10005	轮辋螺栓 Bolt	16	
5	GB/T6170	螺母M12 Nut	16	
6	GB/T93	弹垫 12 Washer,lock	16	

https://truckmanualshub.com/

四、车身系统
BODY SYSTEM

https://truckmanualshub.com/

车架与平衡重
Frame & counter weight

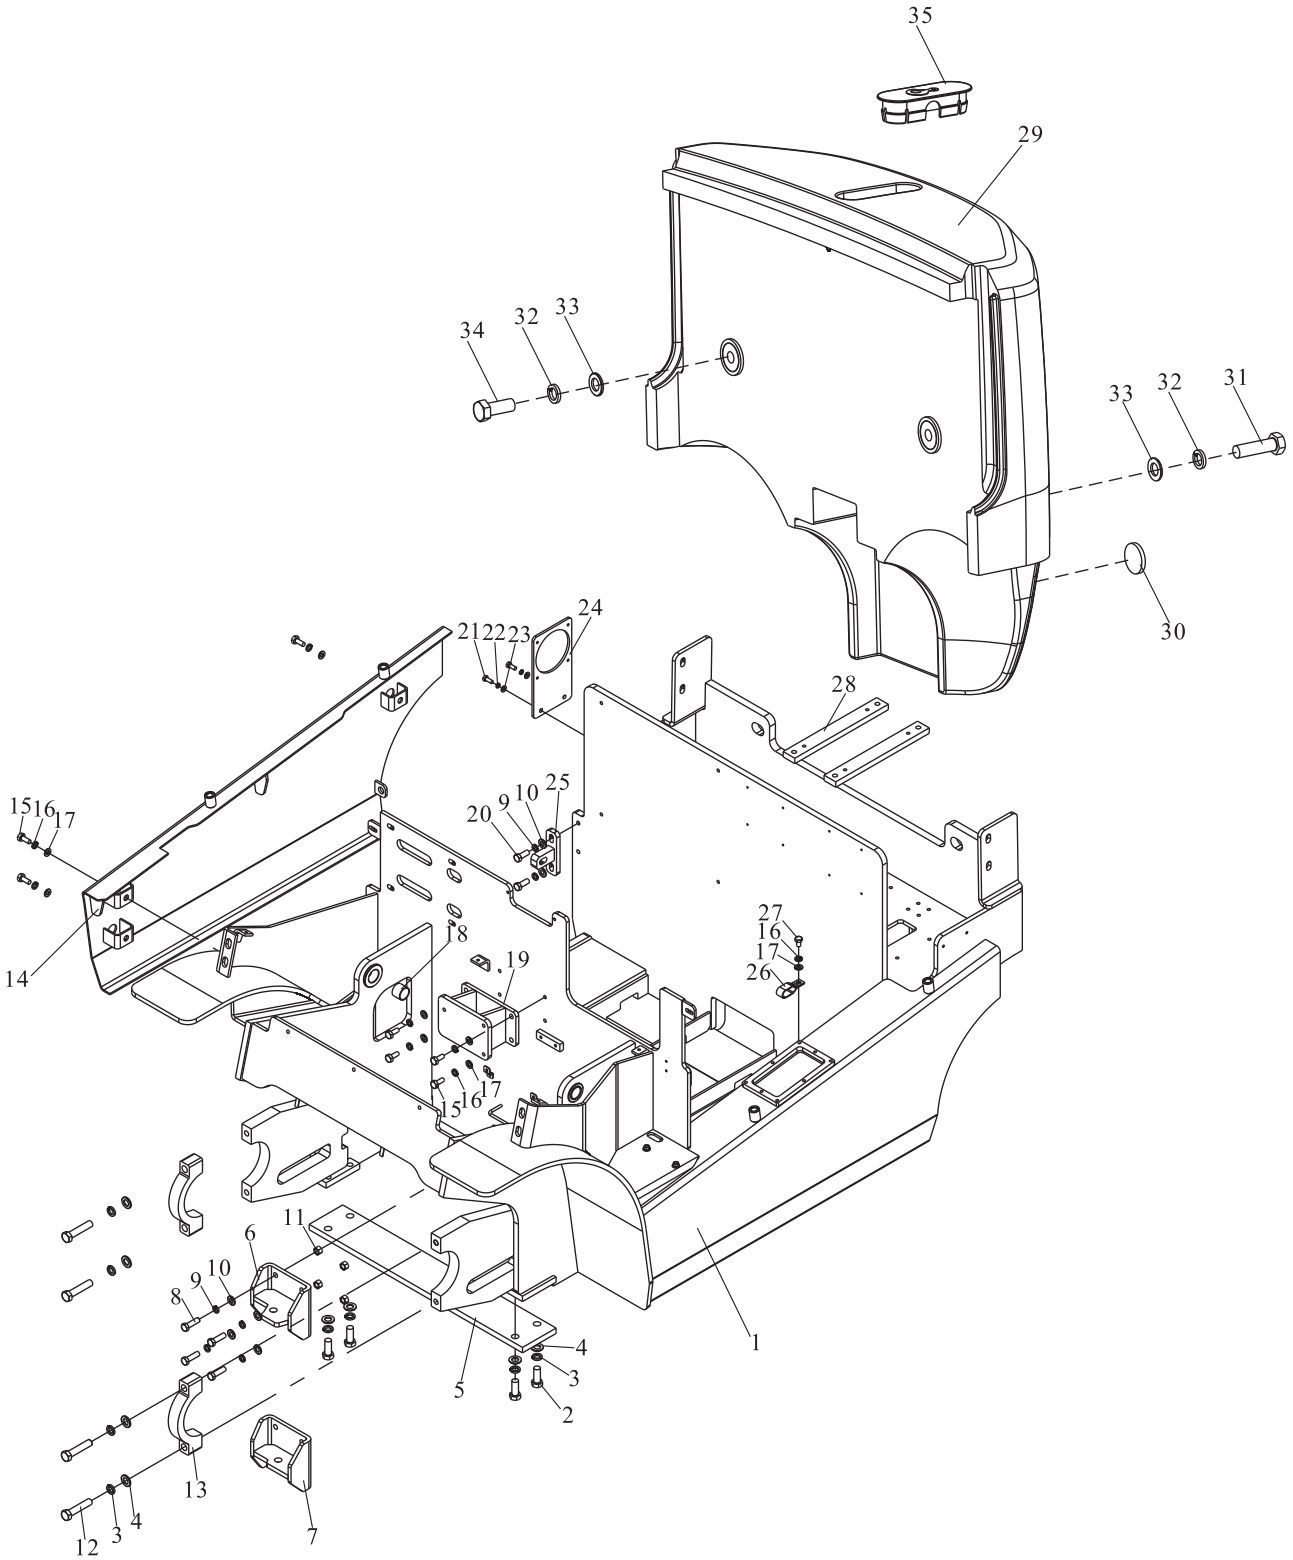


https://truckmanualshub.com/

车架与平衡重
Frame & counter weight

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	D35G1-10100	车架体 Frame	1	
2	GB/T5786	螺栓M16×1.5×40 Bolt	4	
3	GB/T93	弹垫16 Washer,lock	8	
4	GB/T97.2	平垫16 Washer	8	
5	D25G1-10001	前底板 Board	1	
6	D35G1-10700	变速箱支脚总成 Bracket	1	A30Q2-00600 辽源电机除外
7	D30G1-10800	变速箱支脚总成 Bracket	1	配A30Q2-00600 辽源电机
8	GB/T5783	螺栓M12×40 Bolt	4	
9	GB/T93	弹垫12 Washer,lock	6	
10	GB/T97.1	平垫12 Washer	6	
11	GB/T6170	螺母M12 Nut	4	
12	GB/T5785	螺栓M16×1.5×75×38 Bolt	4	
13	M30A3-00001	支座盖 Cap	2	
14	D35G1-10600	右外壁板总成 Right plate ass'y	1	
15	GB/T5783	螺栓M10×25 Bolt	7	
16	GB/T93	弹垫10 Washer,lock	10	
17	GB/T97.1	平垫10 Washer	10	
18	SF-2-3025	钢背轴承 Bearing	2	
19	D15G1-10600	脚制动安装支架 Bracket	1	
20	GB/T5783	螺栓M12×30 Bolt	4	
21	GB/T5783	螺栓M8×20 Bolt	2	
22	GB/T93	弹垫8 Washer,lock	2	

https://truckmanualshub.com/

车架与平衡重
Frame & counter weight

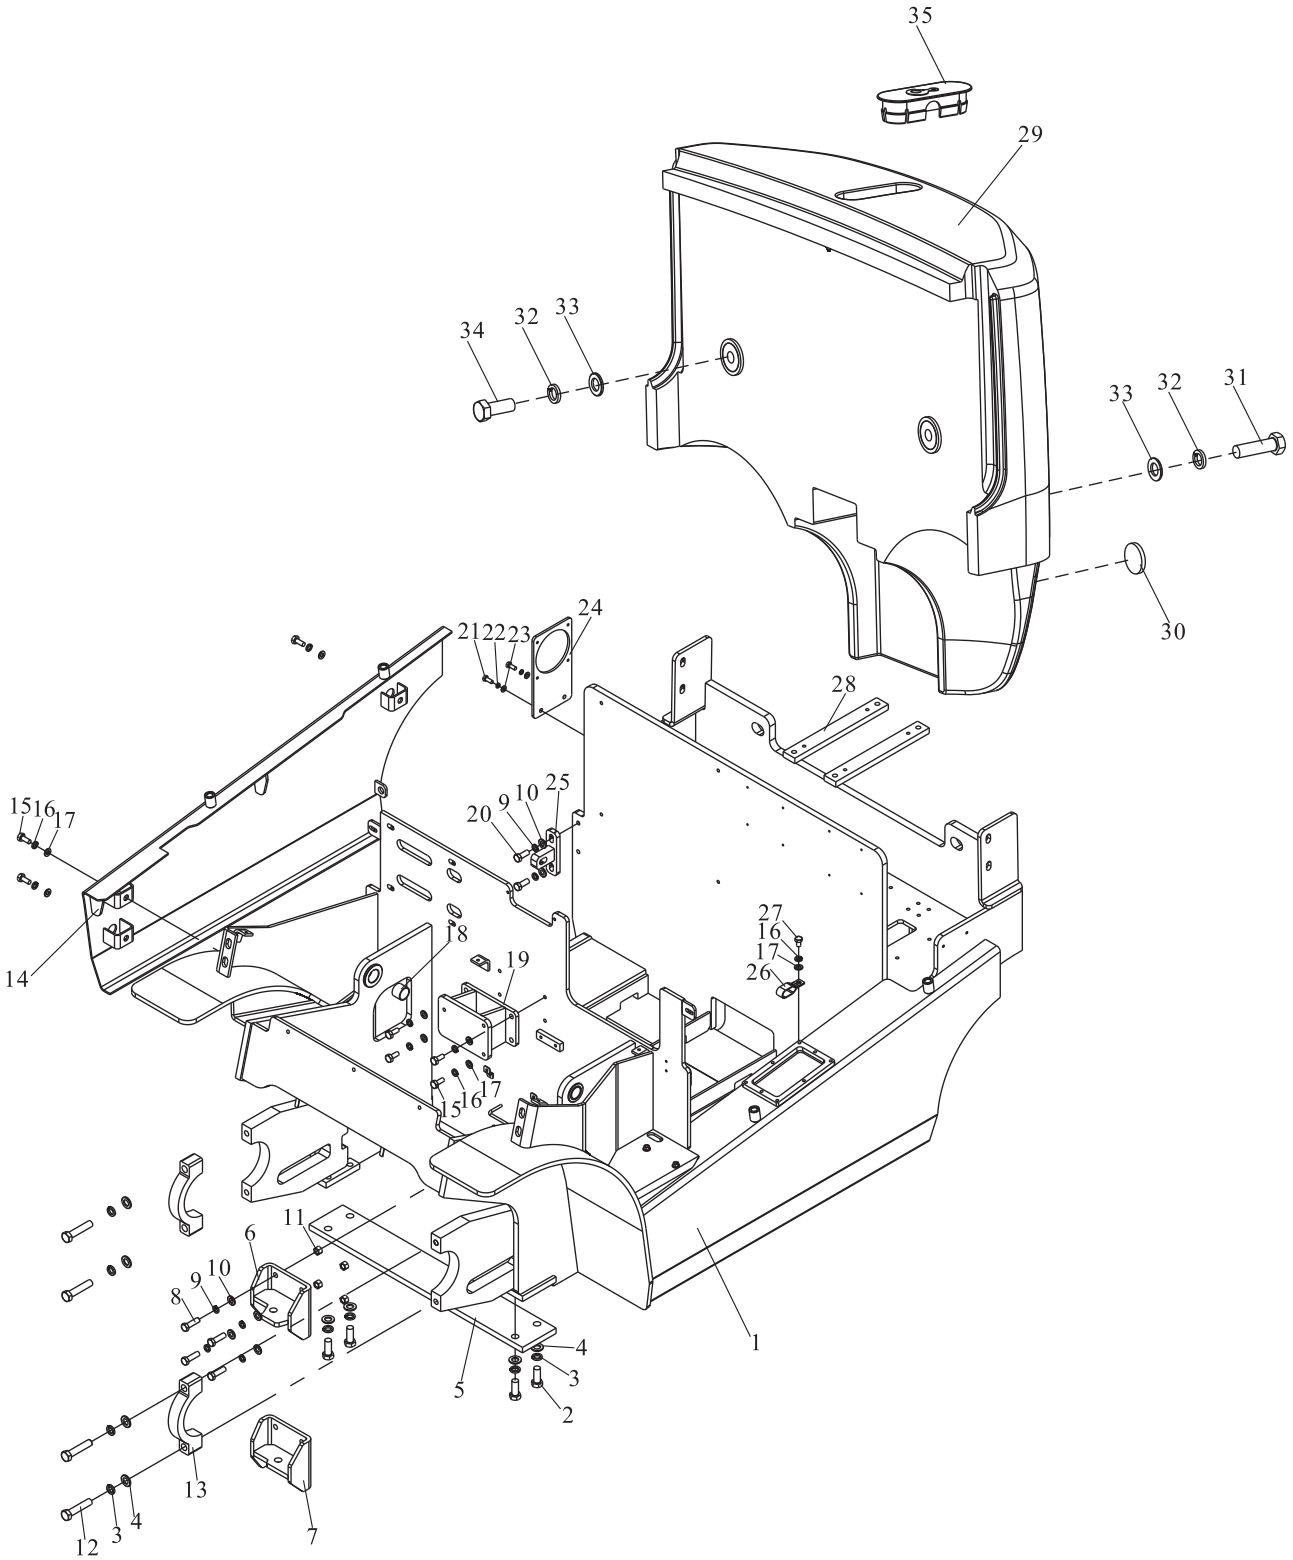


https://truckmanualshub.com/

车架与平衡重
Frame & counter weight

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
23	GB/T97.1	平垫8 Washer	2	
24	D25G1-10002	风扇安装板 Fan plate	1	
25	D25G1-10800	蓄电池支架 Bracket	1	
26	D30A1-11008	管夹5 Pipe clamp	3	
27	GB/T5783	螺栓M10×15 Bolt	3	
28	D30X1-10001	电机垫板 Motor plate	2	A30Q2-00500 辽源电机除外
-	D30X1-10001	电机垫板 Motor plate	0	A30Q2-00500 辽源电机
29	D30G1-50001	平衡重 Balanced Counter Weight	1	3t选用
-	D35G1-50001	平衡重 Balanced Counter Weight	1	3.5t选用
30	D15G1-50002	反射灯 Reflectorlamp	2	
31	GB/T5783	螺栓M24×100 Bolt	1	
32	GB/T93	弹垫24 Washer,lock	3	
33	D15G1-50009	平垫 Washer	3	
34	GB/T5783	螺栓M24×60 Bolt	2	
35	D25G1-20002	装饰盖 Decorative covers	1	

https://truckmanualshub.com/

机罩底板类及座椅
Hood、Floor Board & Seat

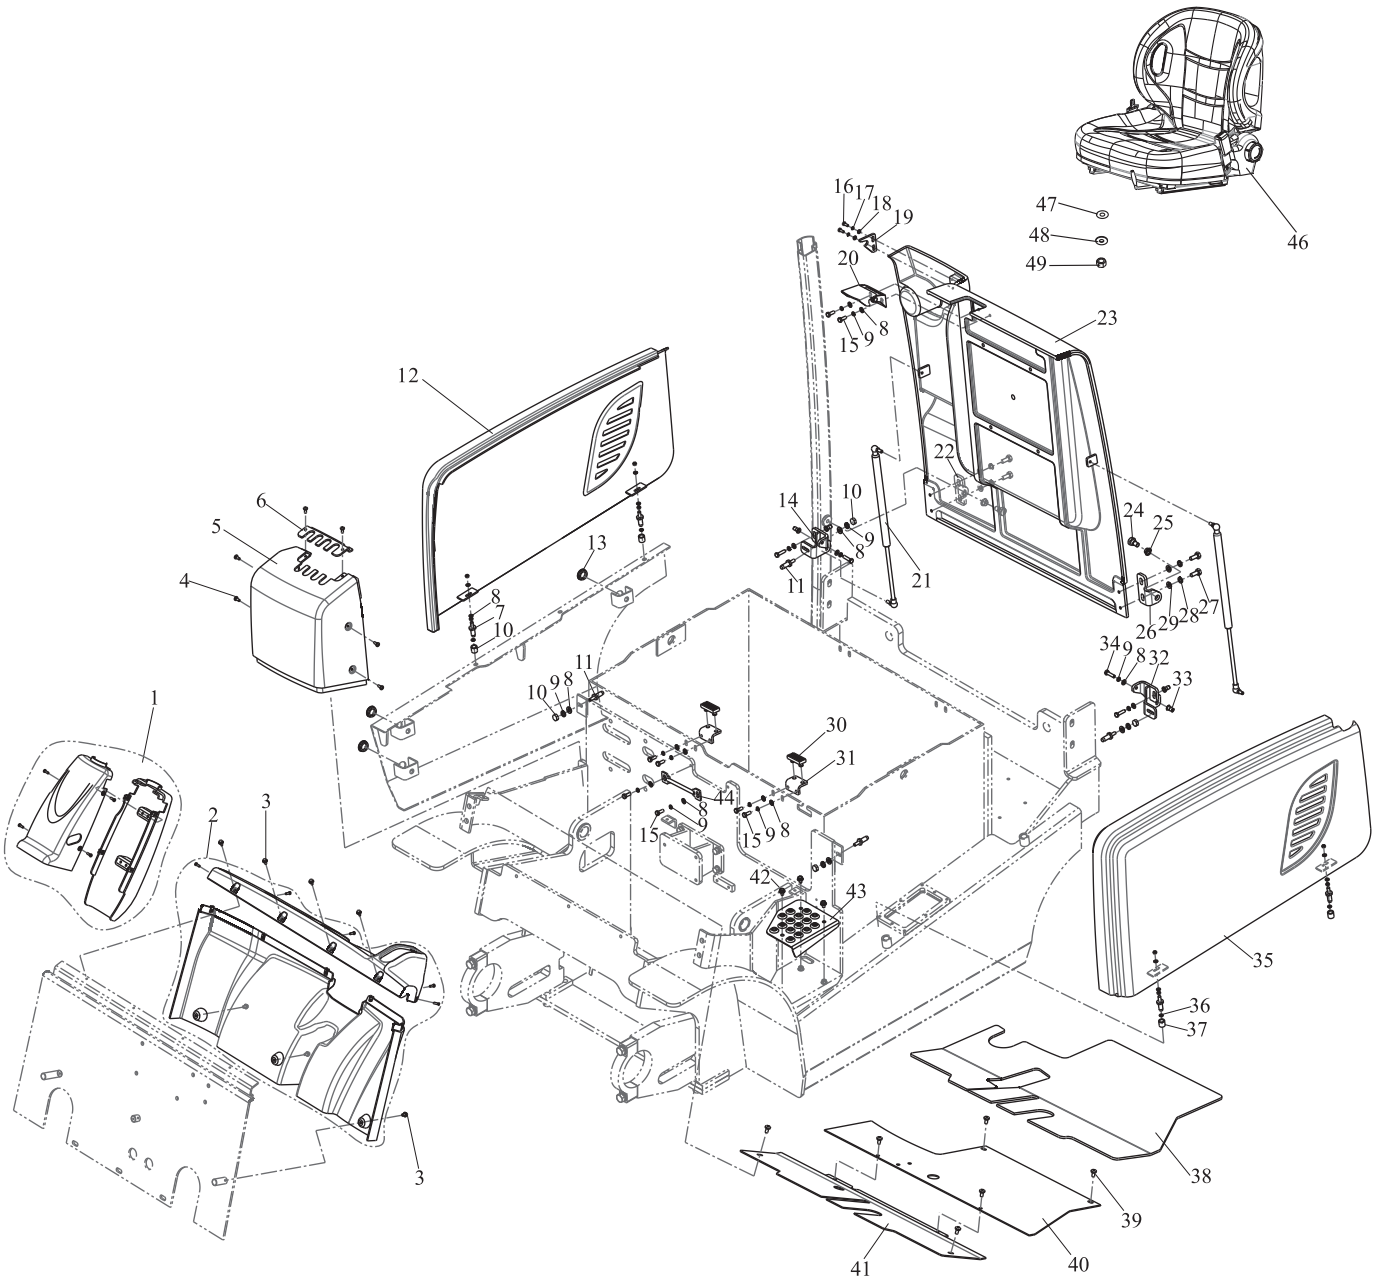


https://truckmanualshub.com/

机罩底板类及座椅
Hood、Floor Board & Seat

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	D15G1-20020	管柱覆盖件总成 String covering ass'y	1	
2	D35G1-20410	仪表台覆盖件总成 Cabinet covering ass'y	1	SME选用
-	D35G1-20420	仪表台覆盖件总成 Cabinet covering ass'y	1	CURTIS选用
3	GB/T5789	六角法兰面螺栓M6×12 Bolt	7	
4	GB/T818	十字槽盘头螺钉M6×12 Bolt	12	
5	D25G1-20002	前罩 Front shade	1	
6	D25G1-20003	前罩盖板 Cover plate	1	
7	D25G1-20013	插销 Pin	4	
8	GB/T97.2	平垫8 Washer	20	
9	GB/T93	弹垫8 Washer,lock	16	
10	GB/T6170	螺母M8 Nut	12	
11	D25G1-20012	固定销 Pin	4	
12	D35G1-20200	侧罩(右) Side cover R.H.	1	
13	D30A1-20001	装饰盖1 Decorative covers	3	
14	D35G1-20700R	气弹簧支架(右) Gas spring bracket R.H.	1	
15	GB/T5783	螺栓M8×20 Bolt	8	
16	GB/T5783	螺栓M6×25 Bolt	2	
17	GB/T93	弹垫6 Washer,lock	2	
18	GB/T97.1	平垫6 Washer	2	
19	D15G1-20017	卡板 Catch plate	1	
20	D15G1-20400	弹性锁总成 Elastic locking ass'y	1	
21	D30C1-20008	气弹簧 Shock,absorber	2	
22	D15G1-20011R	铰链(右) Hinge R.H.	1	
23	D35G1-20100	机罩 Bonnet	1	
24	D15G1-20012	铰链螺栓 Bolt	2	

https://truckmanualshub.com/

机罩底板类及座椅
Hood、Floor Board & Seat

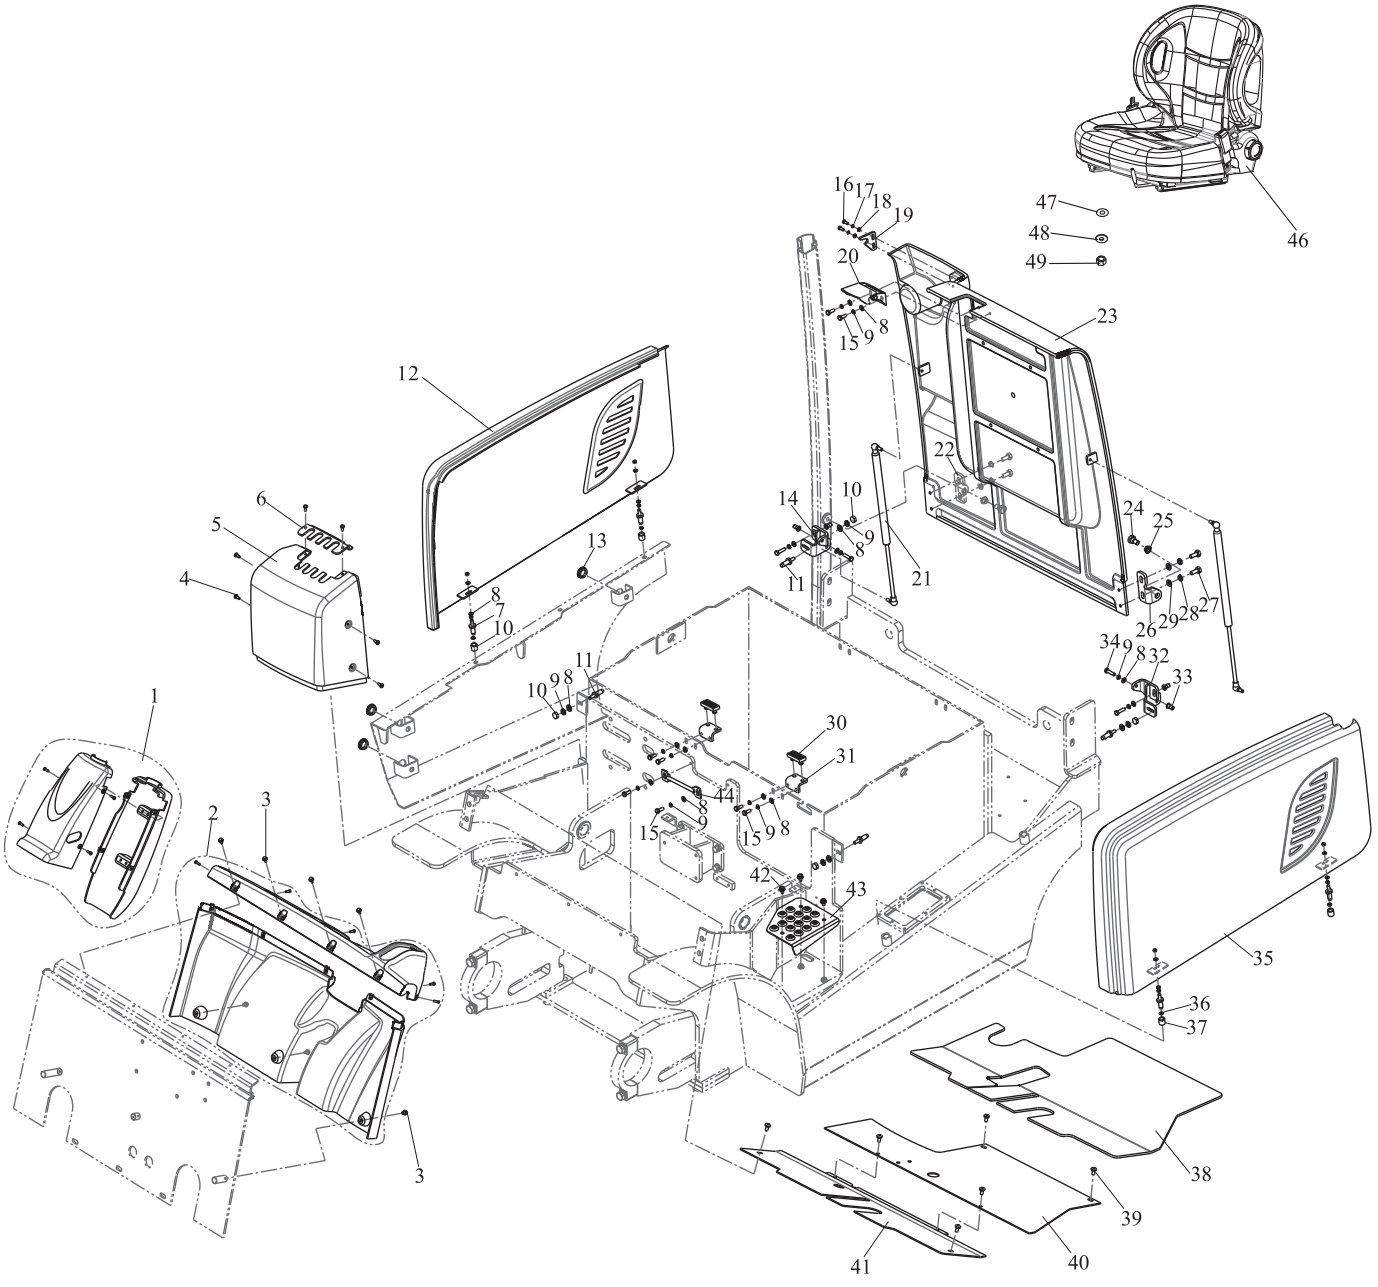


https://truckmanualshub.com/

机罩底板类及座椅
Hood、Floor Board & Seat

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
25	D15G1-20014	钢背轴承 Bushing	2	
26	D15G1-20011L	铰链(左) Hinge L.H.	1	
27	GB/T5783	螺栓M10×25 Bolt	4	
28	GB/T93	弹垫10 Washer,lock	4	
29	GB/T97.1	平垫10 Washer	4	
30	D70S1-20006	缓冲垫 Cushion rubber	2	
31	D25G1-20006	胶垫支架 Bracket	2	
32	D35G1-20700L	气弹簧支架(左) Gas spring bracket L.H.	1	
33	D35G1-30001	铆螺母M8 Nut	4	
34	GB/T5783	螺栓M8×30 Bolt	4	
35	D35G1-20300	侧罩(左) Side cover L.H.	1	
36	GB/T893.1	孔用弹性挡圈 Circlips for holes-type	4	
37	D25G1-20015	橡胶套 Rubber boot	4	
38	D35G1-20005	底板垫 Floor mat	1	
39	GB/T818	十字槽盘头螺钉M8×16 Bolt	6	
40	D35G1-20503	后底板 Board	1	配铅酸蓄电池选用
-	D35G1-20504	后底板 Board	1	配锂电池选用
41	D35G1-20510	底板前部 Floor board	1	
42	GB/T5789	六角法兰面螺栓M8×10 Bolt	3	
43	D35G1-20001	左踏板 Handpedal	1	
44	D15G1-20500	锁销 Pin	1	
45	A30A1-00300	座椅 Seat	1	
46	GB/T97.1	平垫8 Washer	4	座椅附带
47	GB/T93	弹垫8 Washer,lock	4	座椅附带
48	GB/T6170	螺母M8 Nut	4	座椅附带

https://truckmanualshub.com/

护顶架
Head guard

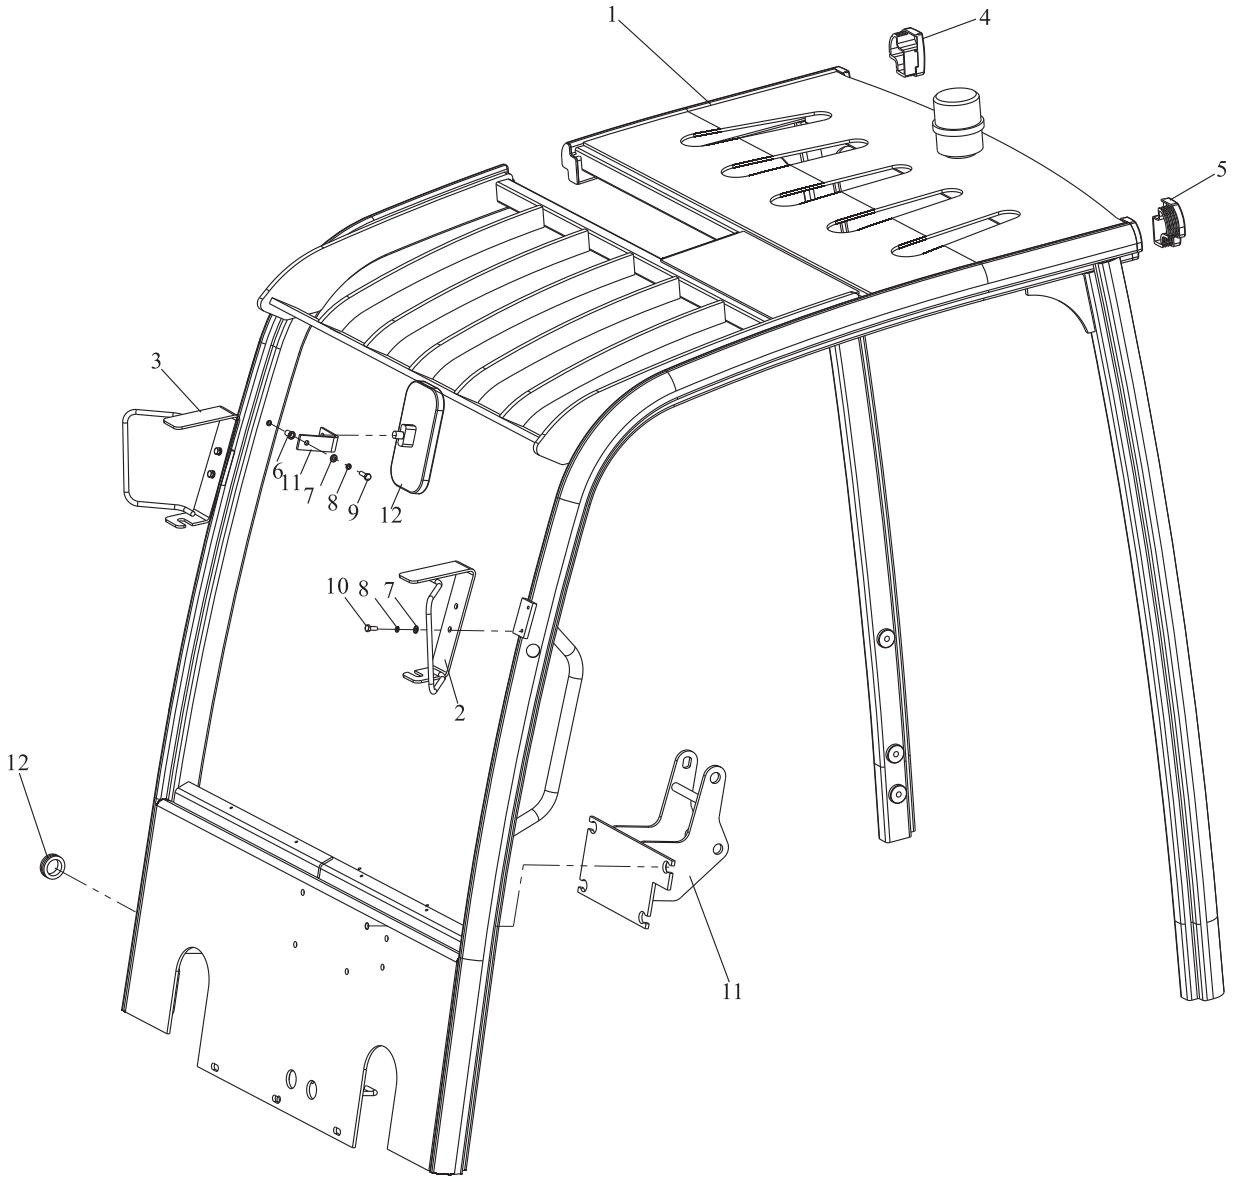

https://truckmanualshub.com/

护顶架
Head guard

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	D35G1-30100	框架总成 Overhead guard	1	
2	D15G1-30500L	前灯架总成(左) Guard,lamp F	1	
3	D15G1-30500R	前灯架总成(右) Guard,lamp F	1	
4	D30D1-30004R	后盖(右) Back cover R.H.	1	
5	D30D1-30004L	后盖(左) Back cover L.H.	1	
6	D30C1-30001	铆螺母M6 Nut	2	
7	GB/T97.1	平垫6 Washer	4	
8	GB/T93	弹垫6 Washer,lock	4	
9	GB/T5783	螺栓M6×20 Bolt	2	
10	GB/T5783	螺栓M6×15 Bolt	2	
11	D30A1-30002	倒车镜支架 Guard	2	
12	D30A1-30800	倒车镜 Back-mirror	2	
13	D15G1-30400	转向支架 Guard	1	
14	D30A1-30005	出线胶圈II Grommet	3	


https://truckmanualshub.com/

五、液压系统

HYDRAULIC SYSTEM

https://truckmanualshub.com/

液压油箱
Oil tank

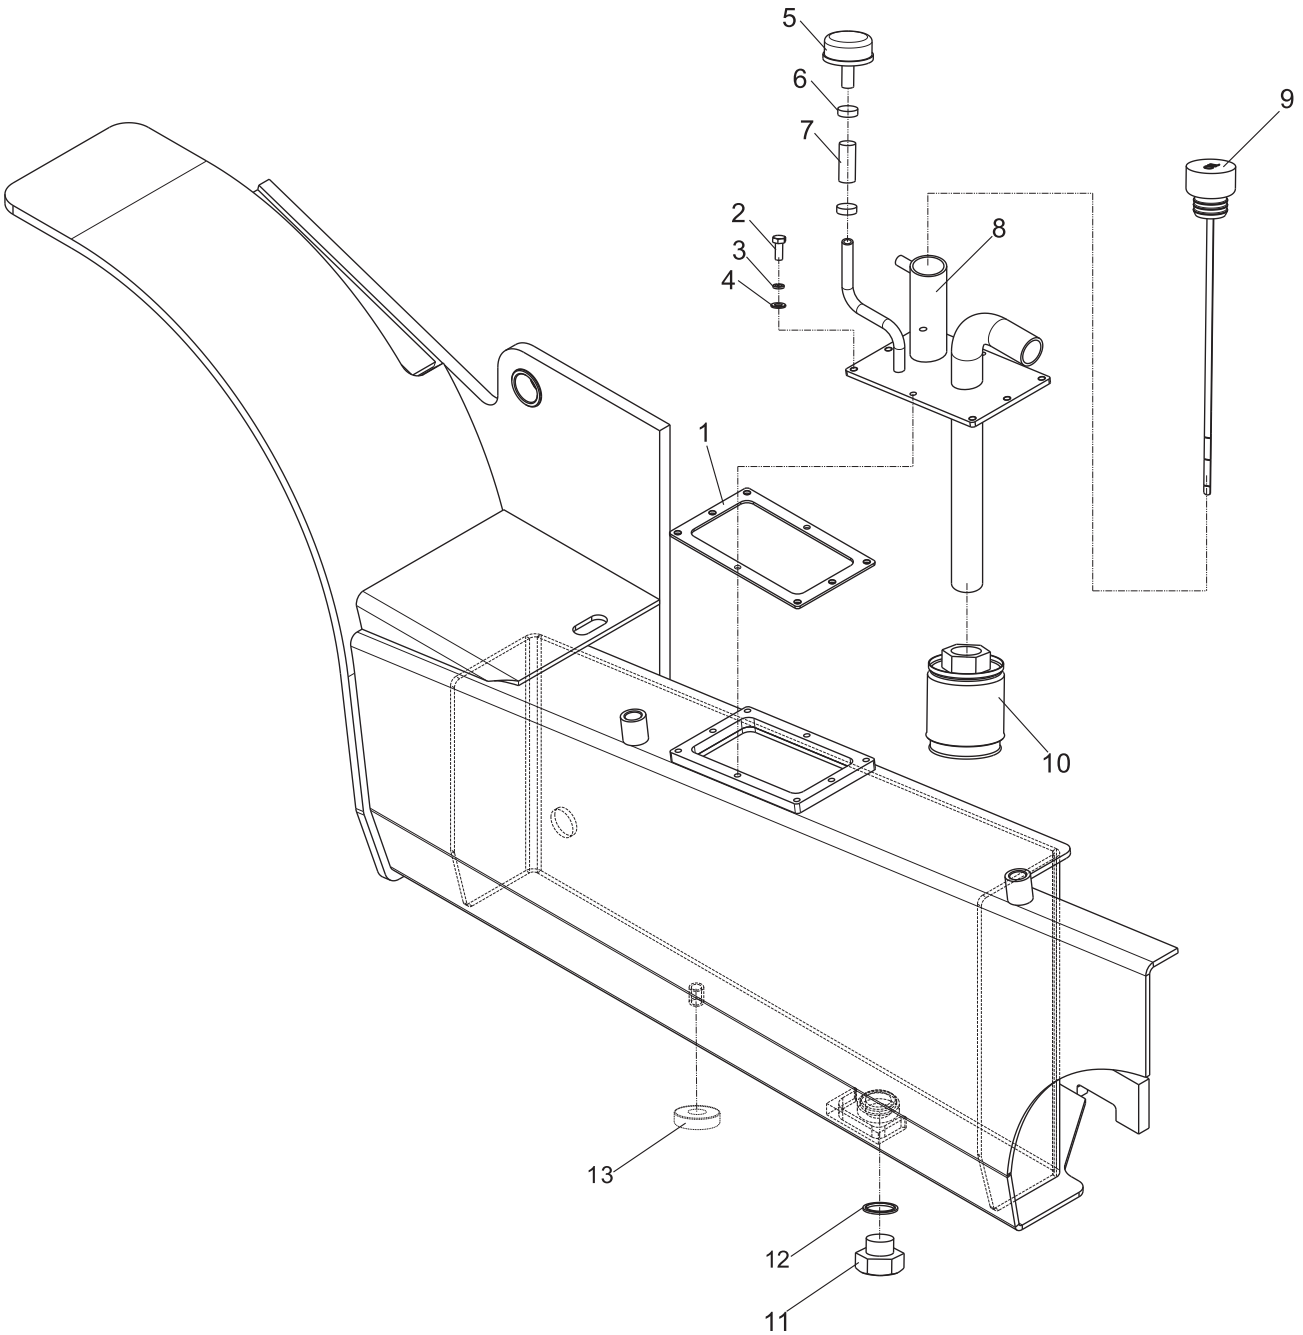


https://truckmanualshub.com/

液压油箱
Oil tank

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A35G4-50001	盖板垫 Cover, gasket	1	
2	GB/T5783	螺栓M8×20 Bolt	8	
3	GB/T93	弹垫8 Washer, lock	8	
4	GB/T97.1	平垫8 Washer	8	
5	A30A4-50500	呼吸器 Breather	1	
6	TK000-16025	卡箍Φ16～Φ25 Clip	2	
7	TG000-10007	耐油胶管Φ10×70 Breather Hose	1	
8	A35G4-50100	盖板总成 Coverplate ass'y	1	
9	A30A4-50100	加油盖总成 Oiling cap ass'y	1	
10	A30A4-50400	吸油滤油器 Strainer	1	
11	A30A4-50002	放油螺塞 Plug, drain	1	
12	JB982	组合垫30 Washer	1	
13	A30A4-50003	磁铁 Magnet	1	

https://truckmanualshub.com/

阀操纵总成（二片）
Valve control(two-throw)

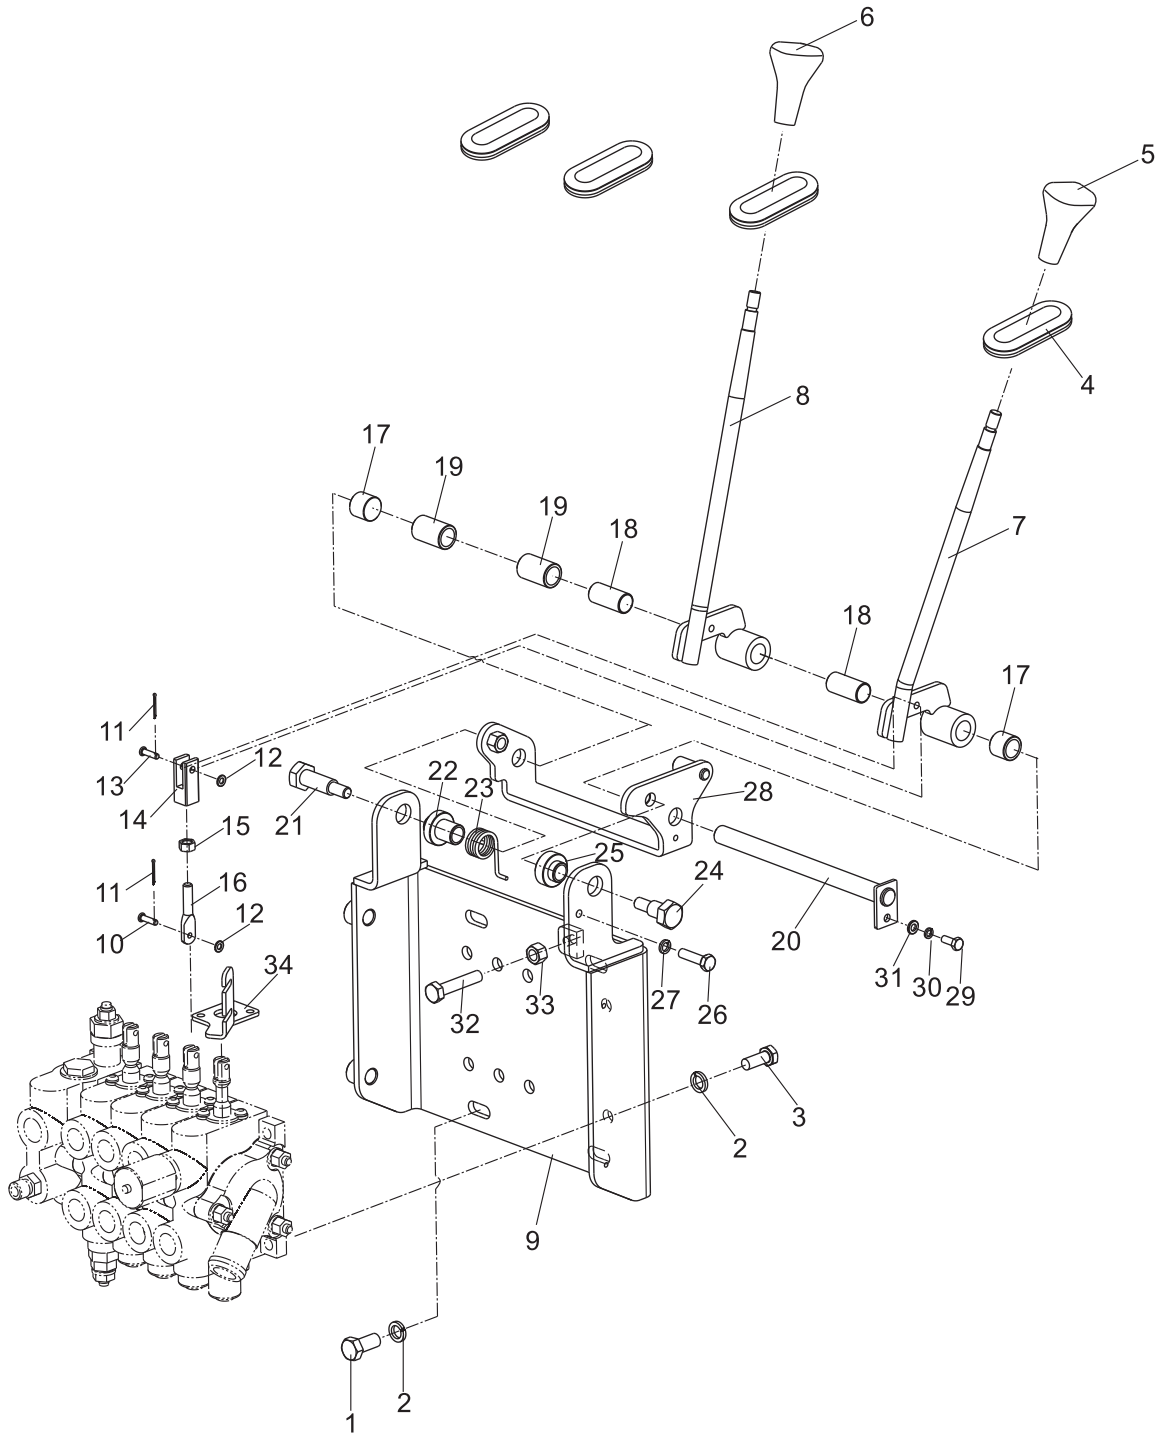


https://truckmanualshub.com/

阀操纵总成（二片）
Valve control(two-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GB/T5783	螺栓M10×25 Bolt	4	
2	GB/T93	弹垫10 Washer , lock	8	
3	GB/T5786	螺栓M10×1.25×25 Bolt	4	
4	A15G7-40001	防尘套 Dust Cover	4	
5	A30A7-40003	起升手柄 Knob, lift	1	
6	A30A7-40004	倾斜手柄 Knob, tilt	1	
7	A25G7-40140	升降阀杆 Lever, lift	1	
8	A25G7-40150	倾斜阀杆 Lever, tilt	1	
9	A25G7-40110	底板总成 Floor ass'y	1	
10	A30C7-40001	销钉 Pin	2	
11	GB/T91	开口销 Φ2×18 Pin, cotter	4	
12	GB/T97.1	平垫6 Washer	4	
13	A15G7-40002	销钉 Pin	2	
14	A15G7-40181	接头 Joint	2	
15	GB/T6170	螺母M8 Nut	2	
16	A15G7-40182	连杆 Link	2	
17	A25G7-40101	套管 Coller	2	
18	ZT000-16038	钢背轴承 Bearing	2	
19	A15G7-40107	调节套 Coller	2	
20	A25G7-40130	支轴总成 Shaft ass'y	1	
21	A15G7-40103	螺栓I Bolt	1	
22	A15G7-40101	尼龙垫圈I Washer	1	
23	A15G7-40105	扭力弹簧 Spring	1	

https://truckmanualshub.com/

阀操纵总成（二片）
Valve control(two-throw)

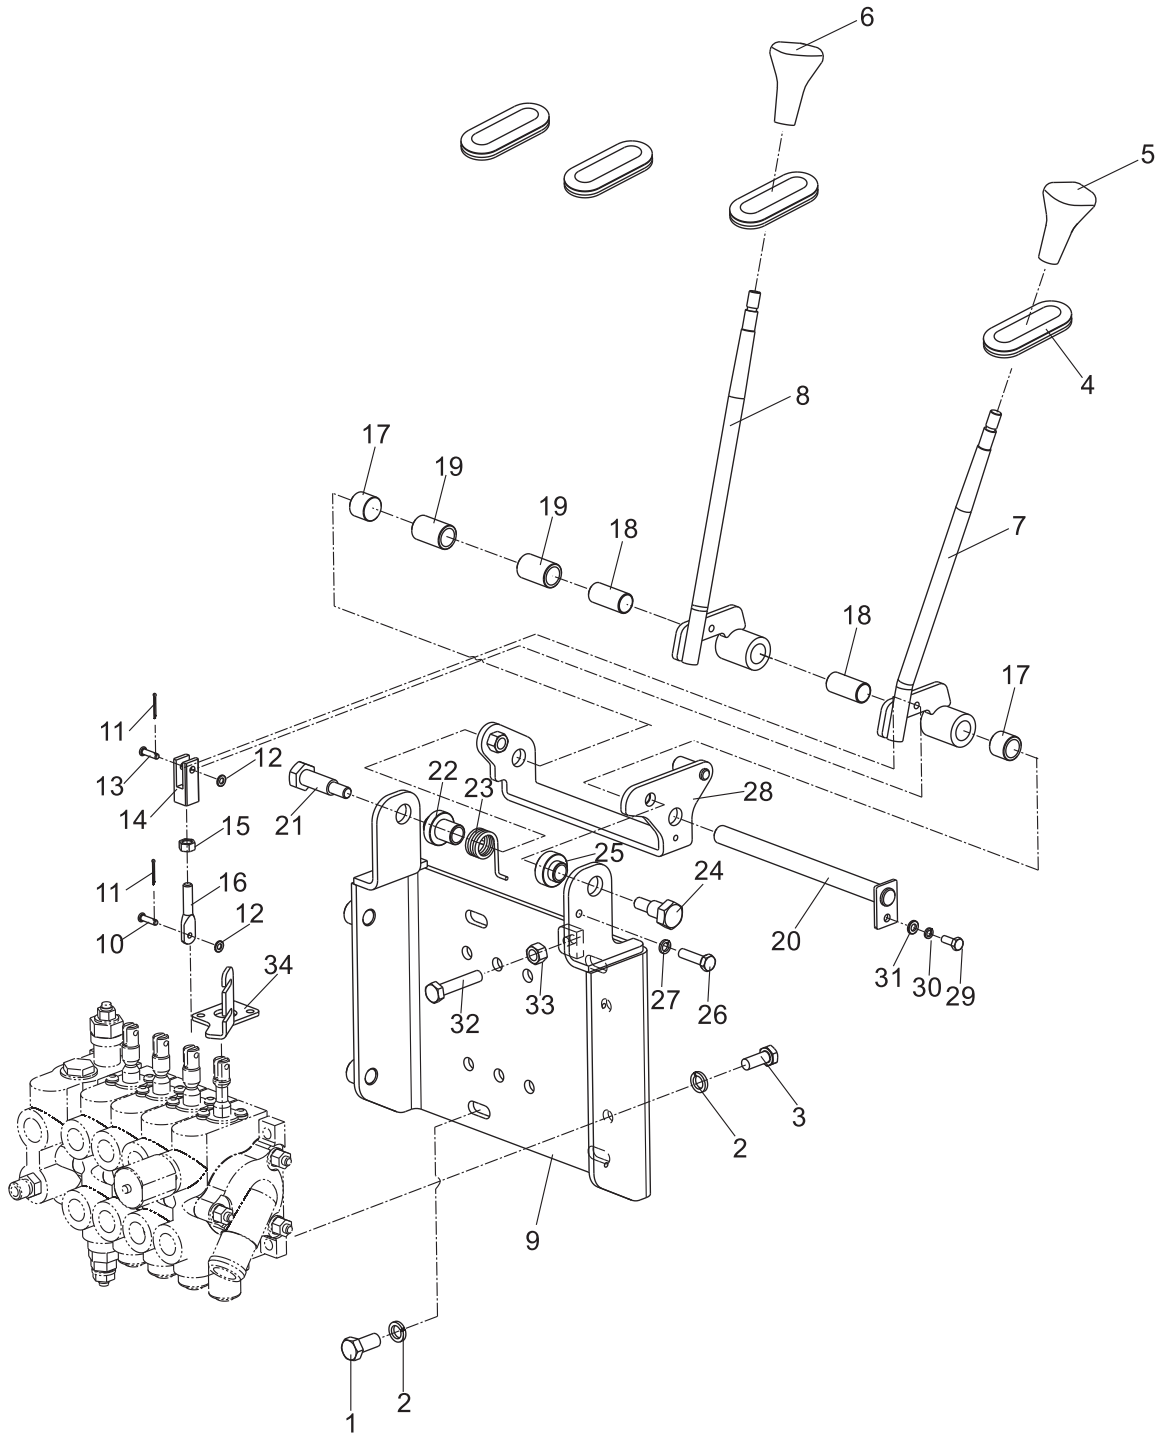


https://truckmanualshub.com/

阀操纵总成（二片）
Valve control(two-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
24	A15G7-40104	螺栓II Bolt	1	
25	A15G7-40102	尼龙垫圈II Washer	1	
26	GB/T5783	螺栓M8×30 Bolt	1	
27	GB/T93	弹垫8 Washer ,lock	1	
28	A25G7-40120	支架总成 Bracket ass'y	1	
29	GB/T5783	螺栓M6×10 Bolt	1	
30	GB/T93	弹垫6 Washer ,lock	1	
31	GB/T97.1	平垫6 Washer	1	
32	GB/T5783	螺栓M10×50 Bolt	1	
33	GB/T6170	螺母M10 Nut	1	
34	A25G7-40001	起升开关支架 Lifting switch bracket	1	

https://truckmanualshub.com/

阀操纵总成（三片）
Valve control(three-throw)

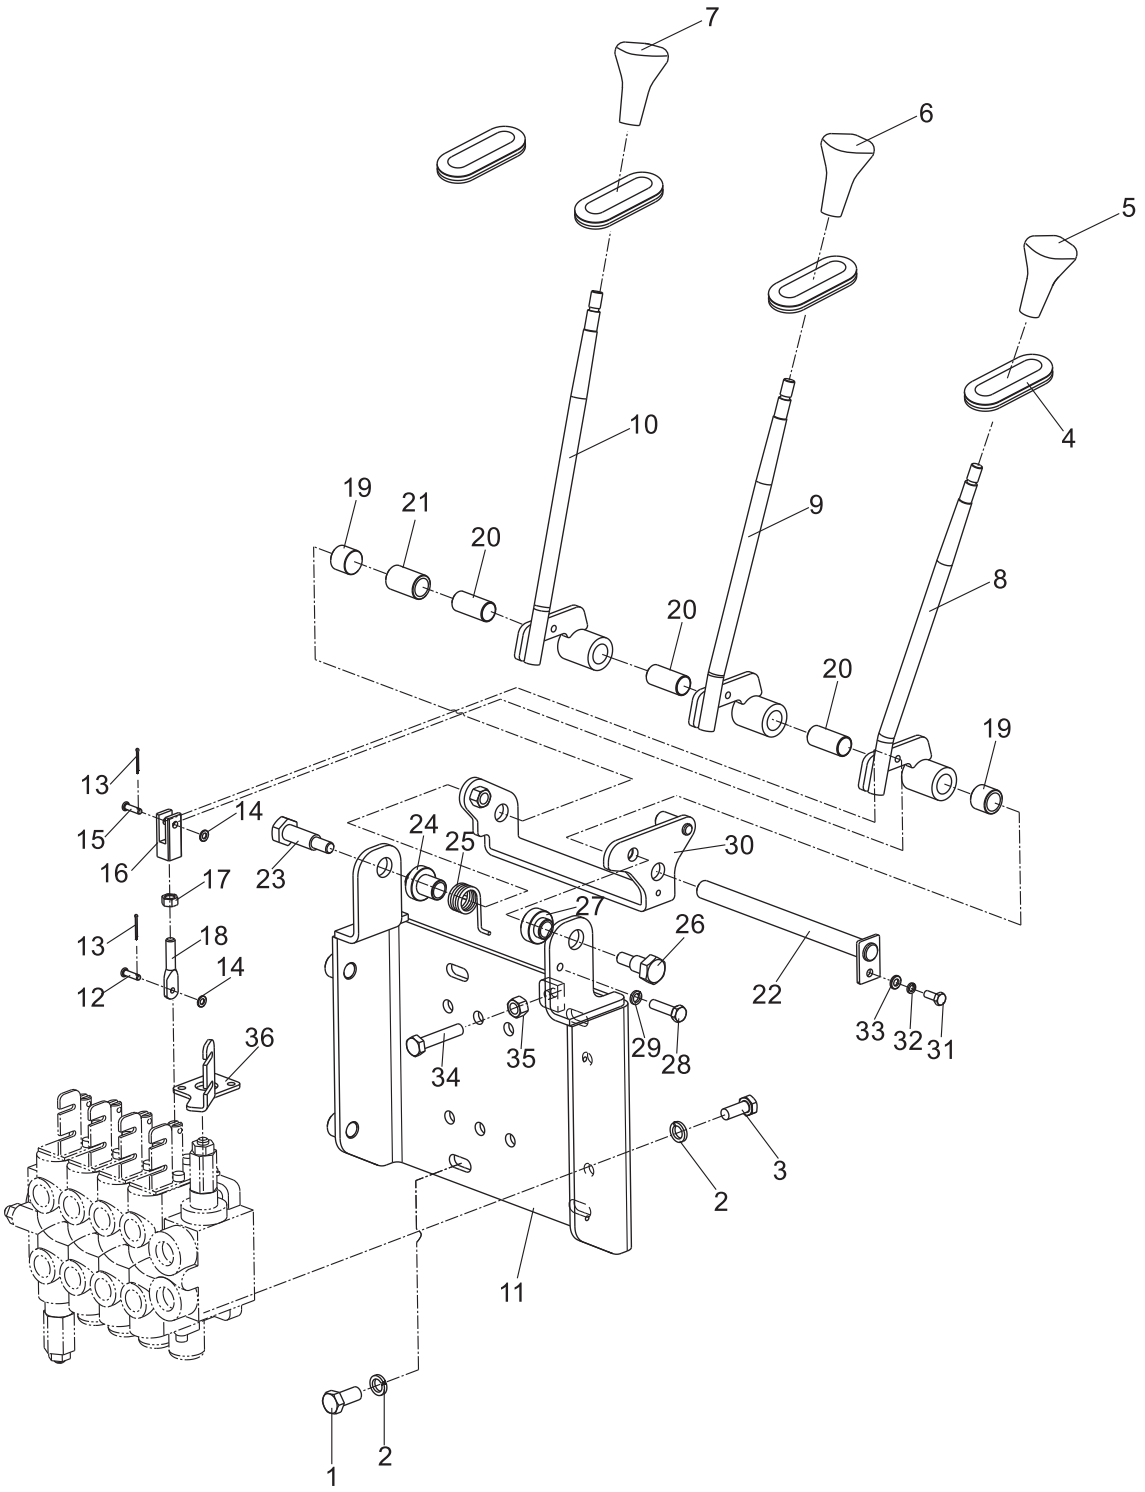


https://truckmanualshub.com/

阀操纵总成（三片）
Valve control(three-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GB/T5783	螺栓M10×25 Bolt	4	
2	GB/T93	弹垫10 Washer , lock	8	
3	GB/T5786	螺栓M10×1.25×25 Bolt	4	
4	A15G7-40001	防尘套 Dust Cover	4	
5	A30A7-40003	起升手柄 Knob, lift	1	
6	A30A7-40004	倾斜手柄 Knob, tilt	1	
7	A30A7-40005	侧移手柄 Knob	1	
8	A25G7-40140	升降阀杆 Lever, lift	1	
9	A25G7-40150	倾斜阀杆 Lever, tilt	1	
10	A25G7-40160	第三片阀杆 Lever, third	1	
11	A25G7-40110	底板总成 Floor ass'y	1	
12	A30C7-40001	销钉 Pin	3	
13	GB/T91	开口销 ϕ2×18 Pin, cotter	6	
14	GB/T97.1	平垫6 Washer	6	
15	A15G7-40002	销钉 Pin	3	
16	A15G7-40181	接头 Joint	3	
17	GB/T6170	螺母M8 Nut	3	
18	A15G7-40182	连杆 Link	3	
19	A25G7-40101	套管 Coller	2	
20	ZT000-16038	钢背轴承 Bearing	3	
21	A15G7-40107	调节套 Coller	1	
22	A25G7-40130	支轴总成 Shaft ass'y	1	
23	A15G7-40103	螺栓I Bolt	1	

https://truckmanualshub.com/

阀操纵总成（三片）
Valve control(three-throw)

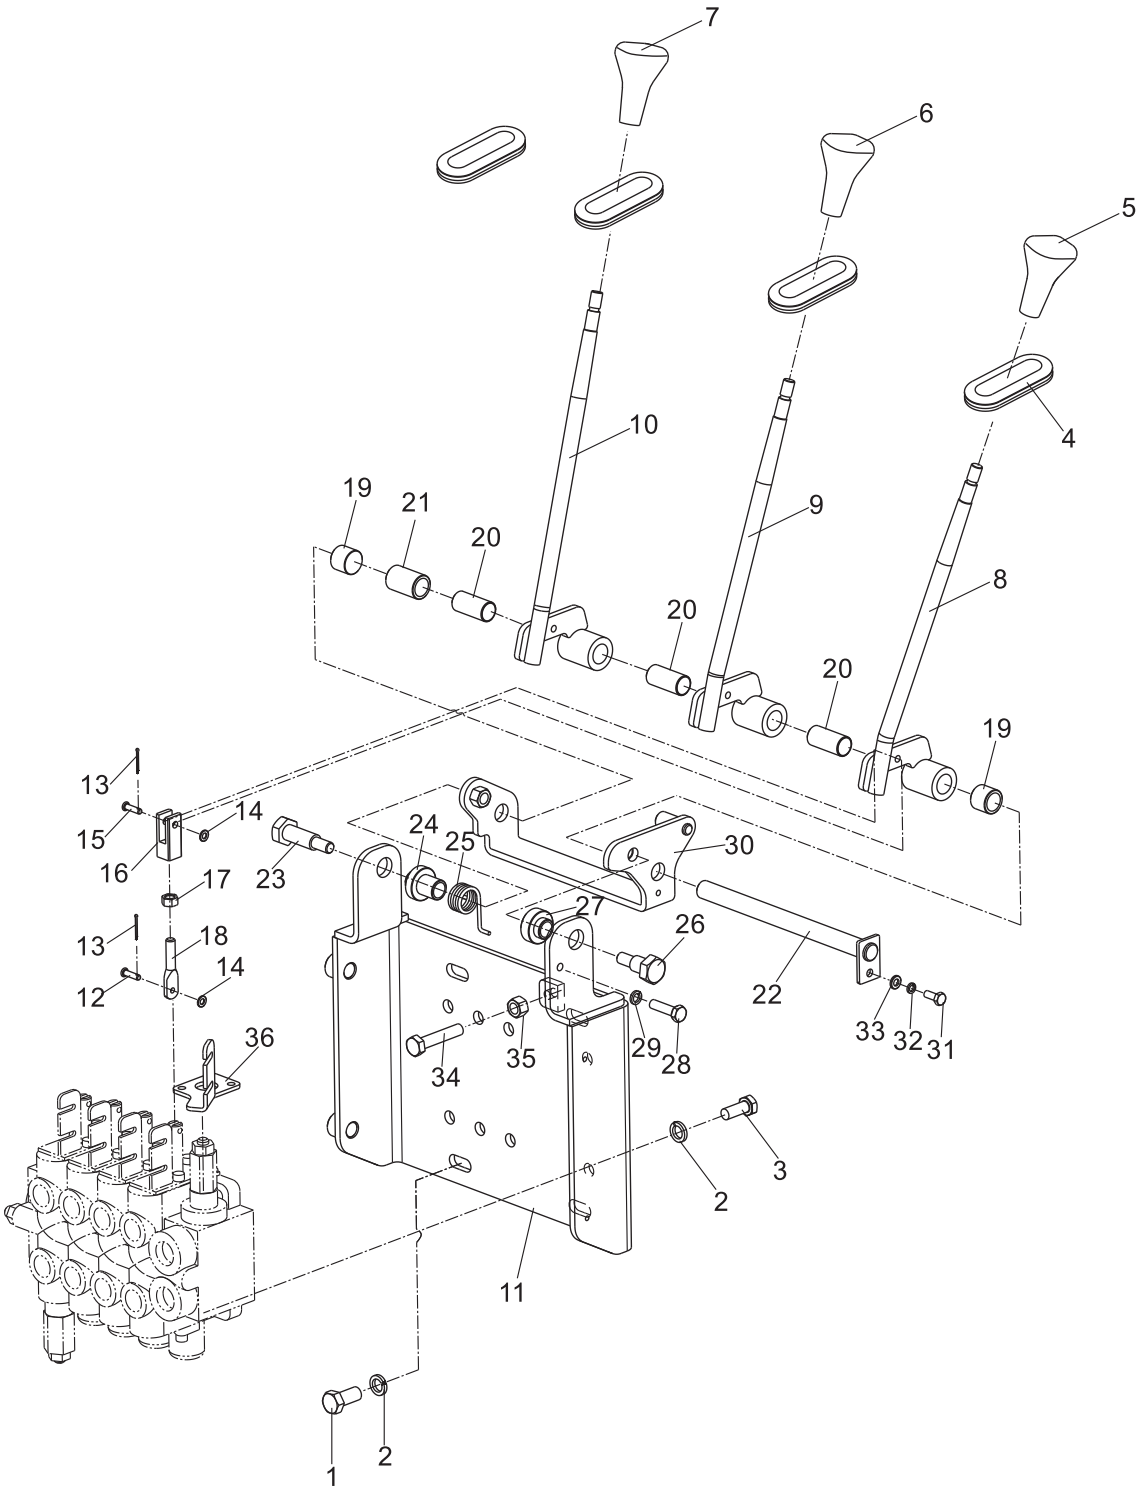


https://truckmanualshub.com/

阀操纵总成（三片）
Valve control(three-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
24	A15G7-40101	尼龙垫圈I Washer	1	
25	A15G7-40105	扭力弹簧 Spring	1	
26	A15G7-40104	螺栓II Bolt	1	
27	A15G7-40102	尼龙垫圈II Washer	1	
28	GB/T5783	螺栓M8×30 Bolt	1	
29	GB/T93	弹垫8 Washer ,lock	1	
30	A25G7-40120	支架总成 Bracket ass'y	1	
31	GB/T5783	螺栓M6×10 Bolt	1	
32	GB/T93	弹垫6 Washer ,lock	1	
33	GB/T97.1	平垫6 Washer	1	
34	GB/T5783	螺栓M10×50 Bolt	1	
35	GB/T6170	螺母M10 Nut	1	
36	A25G7-40001	起升开关支架 Lifting switch bracket	1	

https://truckmanualshub.com/

阀操纵总成（四片）
Valve control（four-throw）

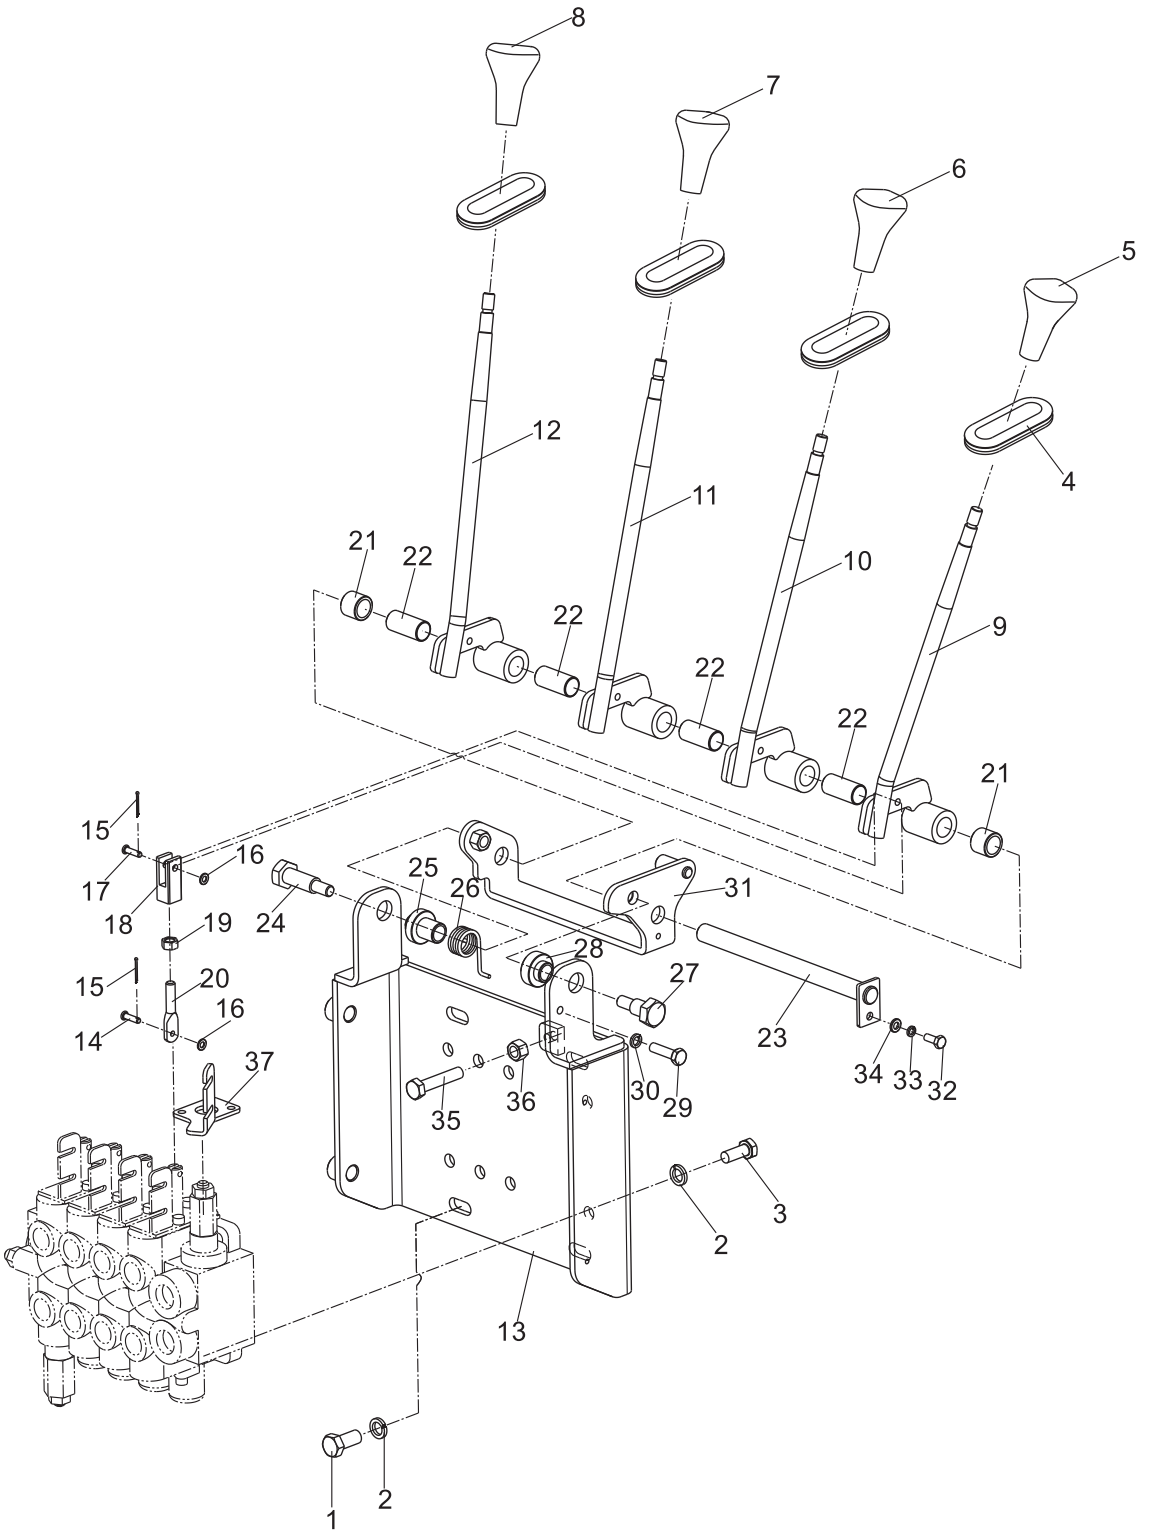


https://truckmanualshub.com/

阀操纵总成（四片）
Valve control(four-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GB/T5783	螺栓M10×25 Bolt	4	
2	GB/T93	弹垫10 Washer , lock	8	
3	GB/T5786	螺栓M10×1.25×25 Bolt	4	
4	A15G7-40001	防尘套 Dust Cover	4	
5	A30A7-40003	起升手柄 Knob, lift	1	
6	A30A7-40004	倾斜手柄 Knob, tilt	1	
7	A30A7-40005	侧移手柄 Knob	1	
8	A30A7-40006	夹紧手柄 Knob	1	
9	A25G7-40140	升降阀杆 Lever, lift	1	
10	A25G7-40150	倾斜阀杆 Lever, tilt	1	
11	A25G7-40160	第三片阀杆 Lever, third	1	
12	A25G7-40170	第四片阀杆 Lever, fourth	1	
13	A25G7-40110	底板总成 Floor ass'y	1	
14	A30C7-40001	销钉 Pin	4	
15	GB/T91	开口销 ϕ2×18 Pin, cotter	8	
16	GB/T97.1	平垫6 Washer	8	
17	A15G7-40002	销钉 Pin	4	
18	A15G7-40181	接头 Joint	4	
19	GB/T6170	螺母M8 Nut	4	
20	A15G7-40182	连杆 Link	4	
21	A25G7-40101	套管 Coller	2	
22	ZT000-16038	钢背轴承 Bearing	4	
23	A25G7-40130	支轴总成 Shaft ass'y	1	

https://truckmanualshub.com/

阀操纵总成（四片）
Valve control（four-throw）

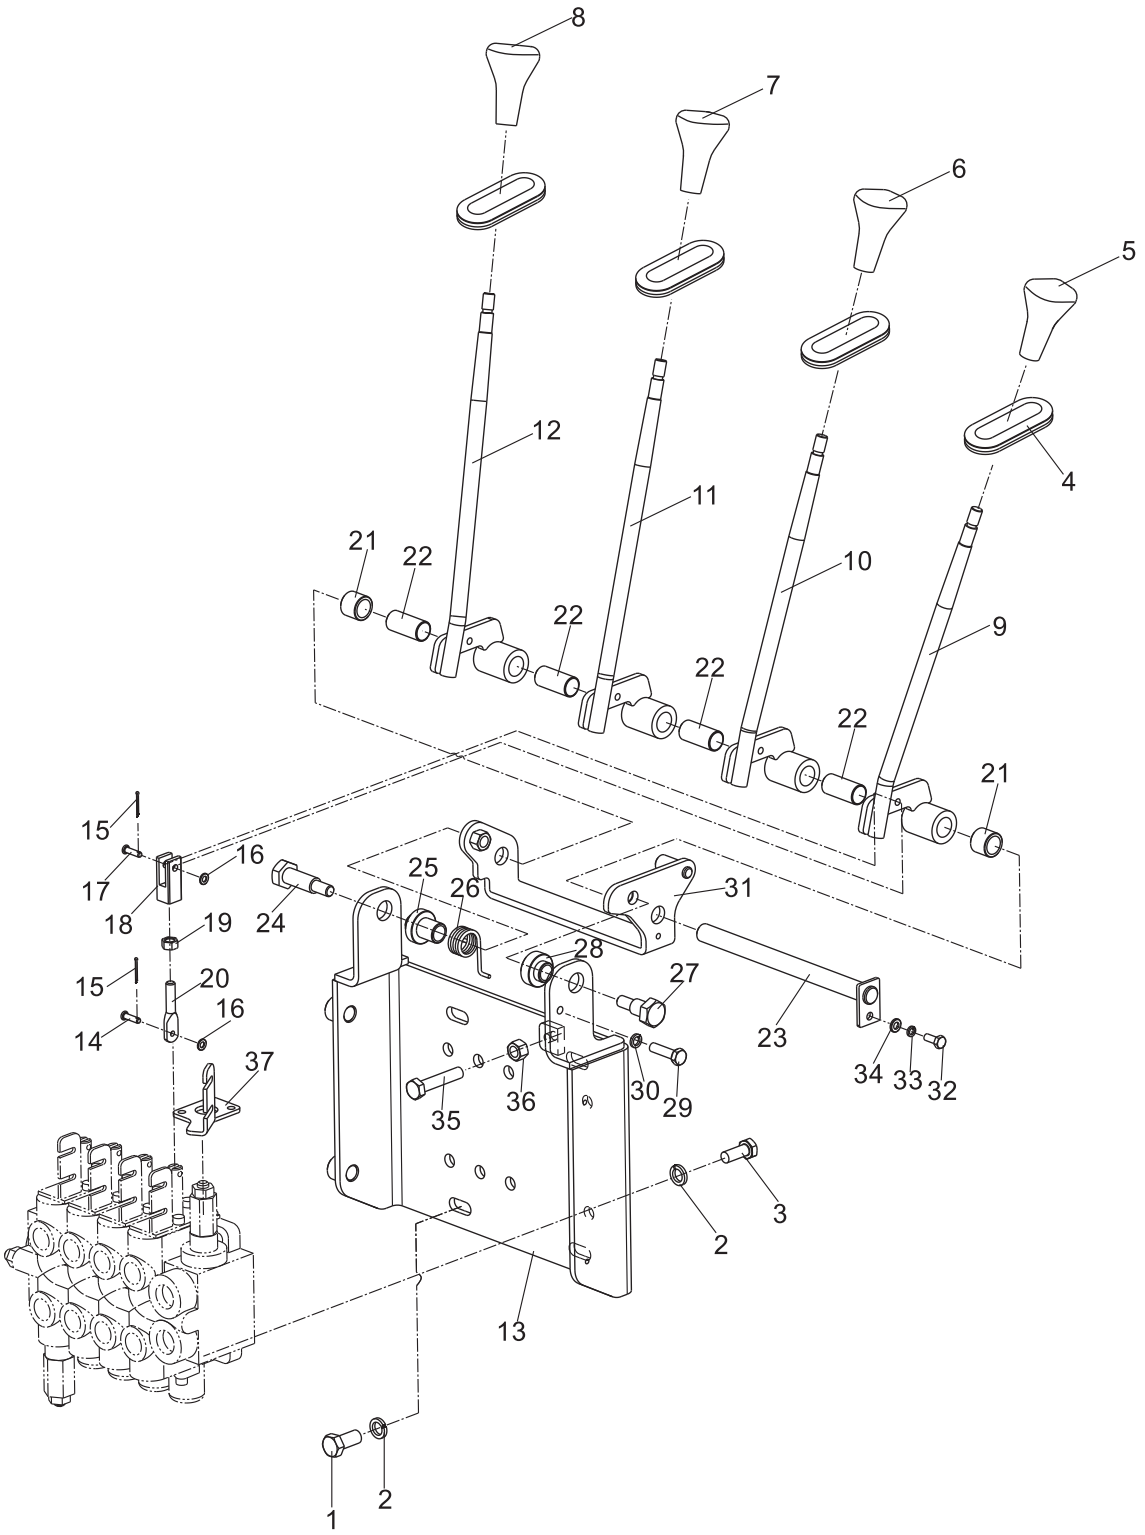


https://truckmanualshub.com/


阀操纵总成（四片）
Valve control(four-throw)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
24	A15G7-40103	螺栓I Bolt	1	
25	A15G7-40101	尼龙垫圈I Washer	1	
26	A15G7-40105	扭力弹簧 Spring	1	
27	A15G7-40104	螺栓II Bolt	1	
28	A15G7-40102	尼龙垫圈II Washer	1	
29	GB/T5783	螺栓M8×30 Bolt	1	
30	GB/T93	弹垫8 Washer ,lock	1	
31	A25G7-40120	支架总成 Bracket ass'y	1	
32	GB/T5783	螺栓M6×10 Bolt	1	
33	GB/T93	弹垫6 Washer ,lock	1	
34	GB/T97.1	平垫6 Washer	1	
35	GB/T5783	螺栓M10×50 Bolt	1	
36	GB/T6170	螺母M10 Nut	1	
37	A25G7-40001	起升开关支架 Lifting switch bracket	1	

https://truckmanualshub.com/

液压管路
Hydraulic pipeline

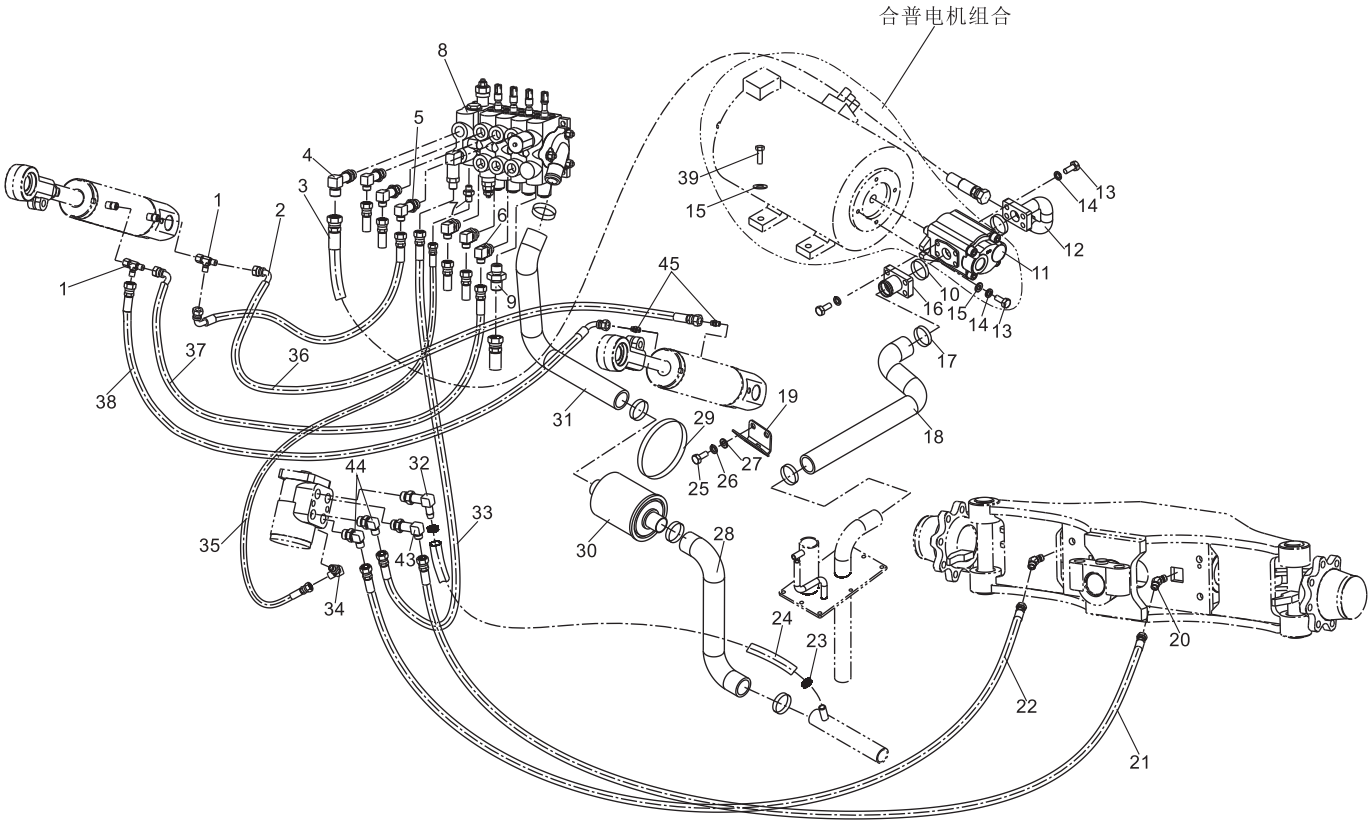

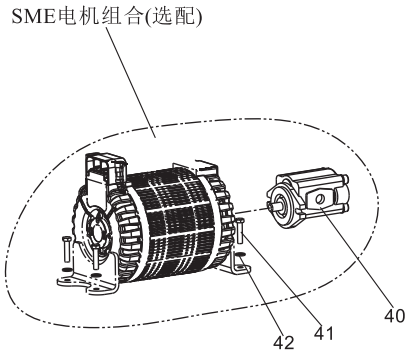


https://truckmanualshub.com/


液压管路
Hydraulic pipeline

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GJT-416-00	三通接头 Tee coupling	2	
2	TGLBI-08070-H35*J	高压胶管8I×700 Hose H.P.	1	
3	TGIBII-13280*J	高压胶管13II×2800 Hose H.P.	1	
4	GJT-327-00	直角接头 Elbow	1	
5	GJT-219-00	直角接头 Elbow	1	标准车/欧标车配海宏多路阀选用
-	GJT-219-00	直角接头 Elbow	2	欧标车配中盛鑫/晨光多路阀选用
6	GJT-220-00	直角接头 Elbow	1	标准车/欧标车配海宏多路阀选用
-	GJT-220-00	直角接头 Elbow	2	欧标车配中盛鑫/晨光多路阀选用
7	GJT-173-00	直通接头 Nipple	1	
8	A25G4-30100	多路阀 Valve	1	标准车选用
-	A25G4-30200	电控多路阀 Valve	1	欧标车选用
9	GJT-70-00	直通接头 Nipple	1	标准车/欧标配海宏多路阀选用
-	GJT-444-00	直角接头 Elbow	1	欧标车配中盛鑫/晨光多路阀选用
10	GB/T3452.1	O型圈φ25×3.55 O-ring	2	
11	A35G4-20000	齿轮油泵 Gear pump	1	配合普电机选用
-	A30Q4-00200	齿轮油泵 Gear pump	1	配辽源电机选用
12	GJT-337-00	出油口接头 Nipple	1	
13	GB/T5783	螺栓M10×30 Bolt	10	
14	GB/T93	弹垫10 Washer,lock	10	
15	GB/T97.1	平垫10 Washer	6	
16	GJT-166-00	吸油管接头 Nipple	1	
17	TK000-35051	卡箍φ35-φ51 Clip	6	
18	A35G4-00002	吸油管 Hose	1	
19	A50A4-00004	滤油器支架 Bracket	1	
20	GJT-17-00	转向缸接头 Nipple	2	
21	TGIBI-08190*G	高压胶管8I×1900 Hose H.P.	1	

https://truckmanualshub.com/

液压管路
Hydraulic pipeline

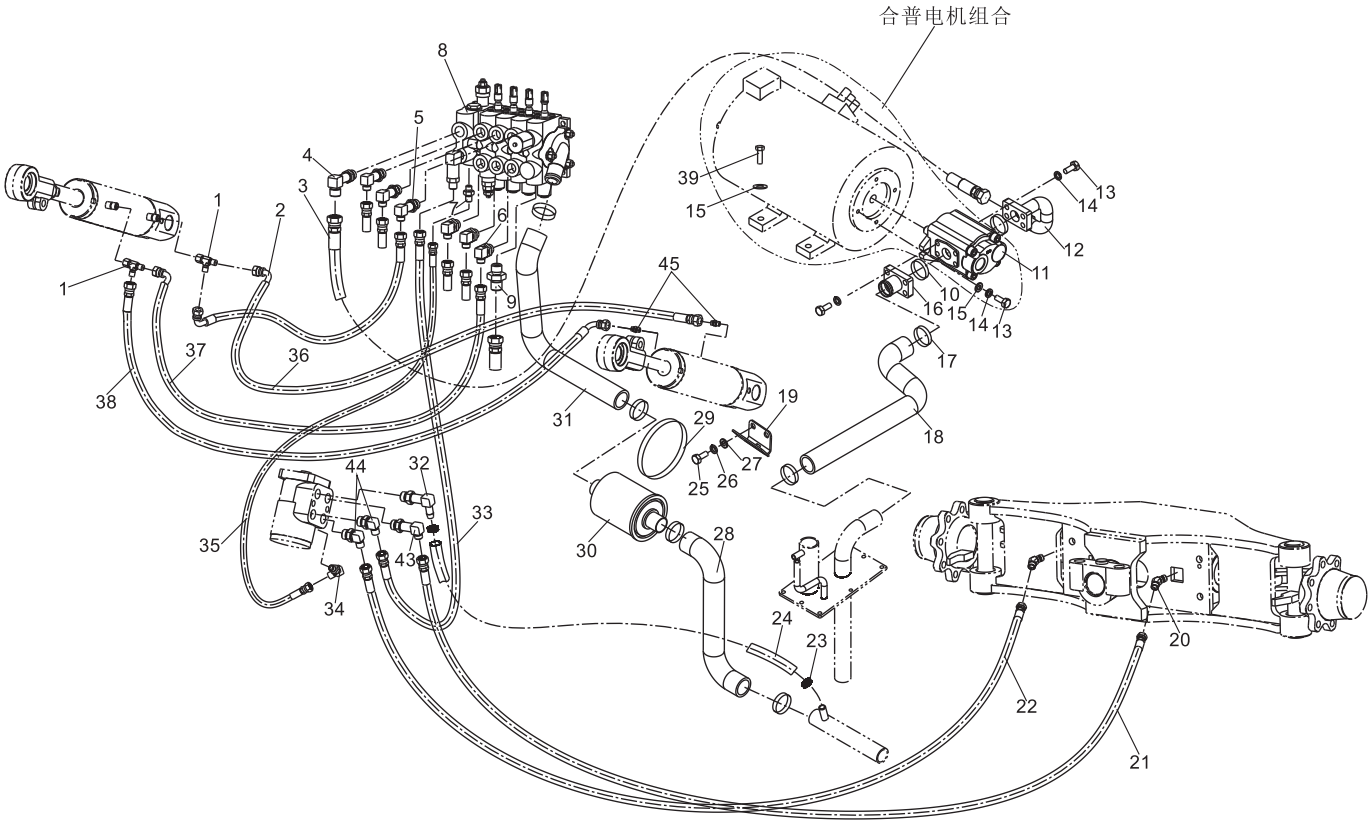

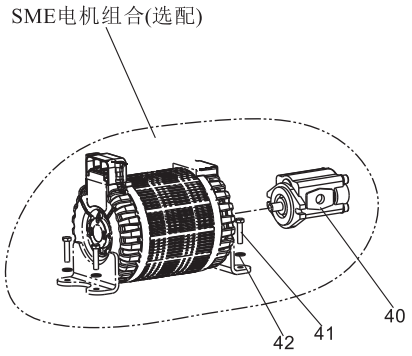

https://truckmanualshub.com/

液压管路
Hydraulic pipeline

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
22	TGIBI-08200*G	高压胶管8I×2000 Hose H.P.	1	
23	TK000-16025	卡箍Φ16-Φ25 Clip	2	
24	TG000-13100	耐油胶管 Φ13×1000 Hose	1	
25	GB/T5783	螺栓M8×20 Bolt	2	
26	GB/T93	弹垫8 Washer,lock	2	
27	GB/T97.1	平垫8 Washer	2	
28	A35G4-00003	回油管I Hose	1	
29	TK000-90110	卡箍Φ90-Φ110 Clip	1	
30	A35G4-00001	回油滤清器 Oil filter	1	
31	A35G4-00004	回油管II Hose	1	
32	GJT-13-00	直角接头 Elbow	1	
33	TGIBI-08096*G	高压胶管8I×960 Hose H.P.	1	
34	GJT-174-00	直角接头 Elbow	1	
35	TGIBI-06088*J	高压胶管6I×880 Hose H.P.	1	
36	TGLBI-08041-H45*J	高压胶管8I×410 Hose H.P.	1	
37	TGLBI-08060-H35*G	高压胶管8I×600 Hose H.P.	1	
38	TGLBI-08074-H35*G	高压胶管8I×740 Hose H.P.	1	
39	GB/T5783	螺栓M10×35 Bolt	4	配合普电机选用
-	GB/T5783	螺栓M10×40 Bolt	4	配辽源电机选用
40	A30JS4-20000	齿轮油泵 Gear pump	1	配SME电机选用
41	GB/T5783	螺栓M10×25 Bolt	4	配SME电机选用
42	GB/T97.1	平垫10 Washer	4	配SME电机选用
43	GJT-11-00	直角接头 Elbow	1	两片阀选用
-	GJT-11-00	直角接头 Elbow	2	三片阀选用
-	GJT-11-00	直角接头 Elbow	3	四片阀选用
44	GJT-12-00	直角接头 Elbow	1	两片阀选用
-	GJT-12-00	直角接头 Elbow	2	三片阀选用
-	GJT-12-00	直角接头 Elbow	3	四片阀选用
45	GJT-72-00	直通接头 Nipple	2	


https://truckmanualshub.com/

六、制动系统

BRAKE SYSTEM

https://truckmanualshub.com/

行车制动装置
Brake control unit

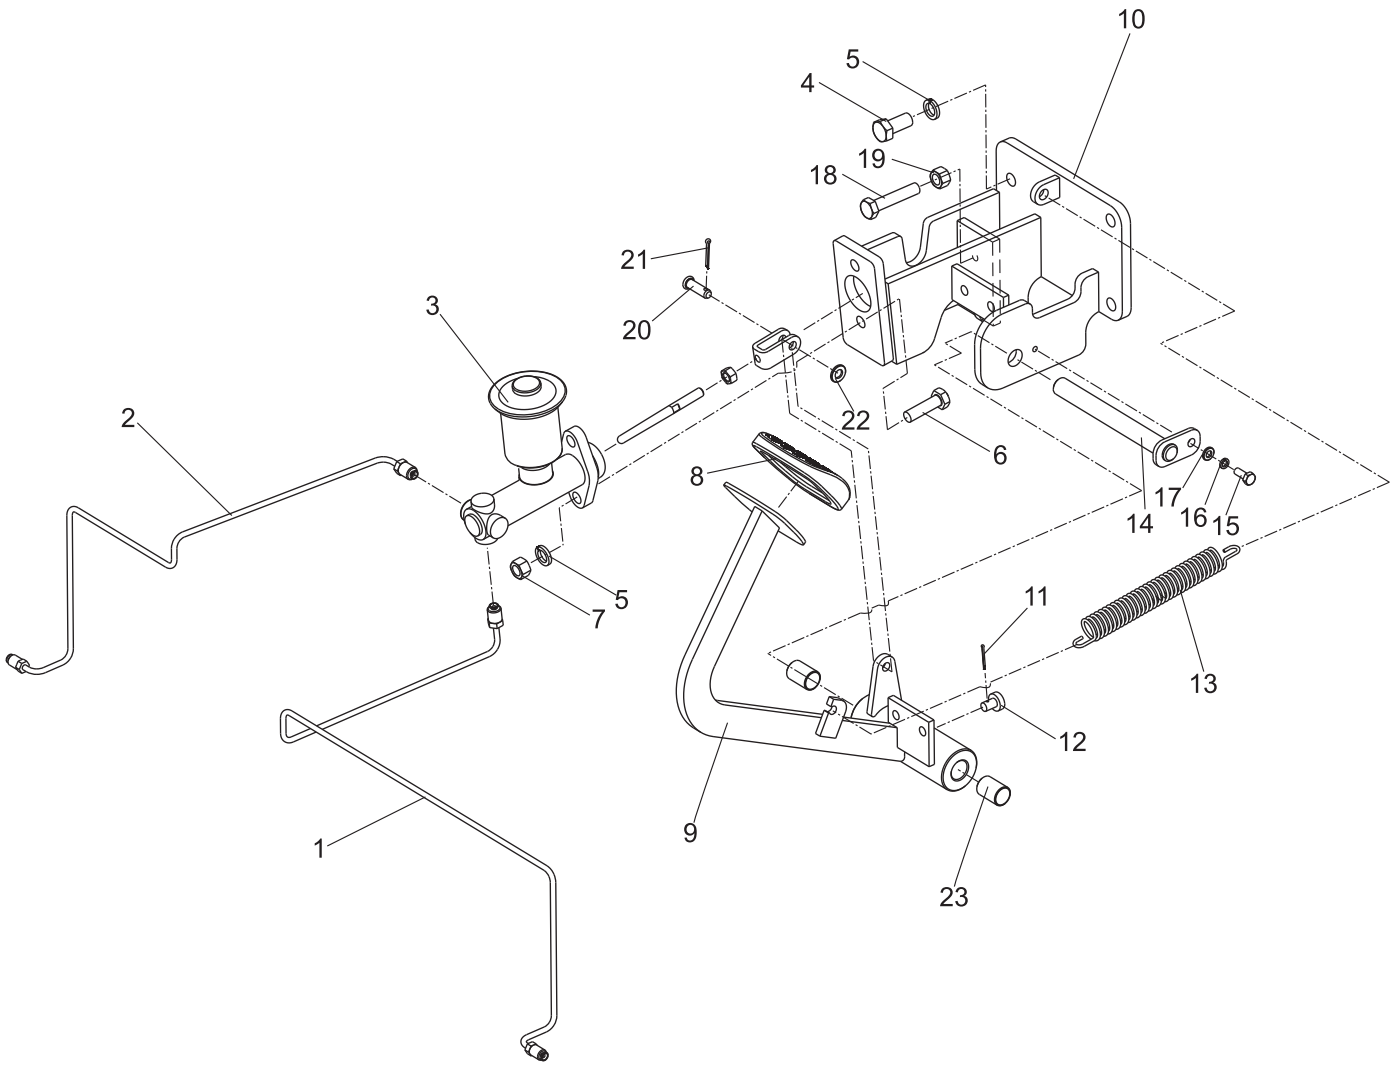


https://truckmanualshub.com/

行车制动装置
Brake control unit

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A35G7-10200	制动钢管（左） Brake steel tube(left)	1	
2	A35G7-10100	制动钢管（右） Brake steel tube(right)	1	
3	A16B7-10300	制动总泵 Master cylinder	1	
4	GB/T5783	螺栓M10×25 Bolt	3	
5	GB/T93	弹垫10 Washer,lock	5	
6	GB/T5783	螺栓M10×35 Bolt	2	
7	GB/T6170	螺母M10 Nut	2	
8	A16A7-10102	橡胶垫 Head cover	1	
9	A16B7-10200	制动踏板总成 Brake pedal	1	
10	A16B7-10100	支座 Support	1	
11	GB/T91	开口销2×16 Pin	2	
12	A45A7-11004	尼龙垫 Nylon mat	2	
13	A16B7-11001	回位弹簧 Spring	1	
14	A16B7-10600	支轴 Axis	1	
15	GB/T5783	螺栓M6×16 Bolt	1	
16	GB/T93	弹垫6 Washer,lock	1	
17	GB/T97.1	平垫6 Washer	1	
18	GB/T5783	螺栓M8×40 Bolt	1	
19	GB/T6170	螺母M8 Nut	1	
20	GB/T882	销轴8×26 Pin	1	
21	GB/T91	开口销2. 5×22 Pin	1	
22	GB/T97.1	平垫8 Washer	1	
23	ZT000-16025	钢背轴承 Bearing	2	

https://truckmanualshub.com/

停车制动
Brake lever

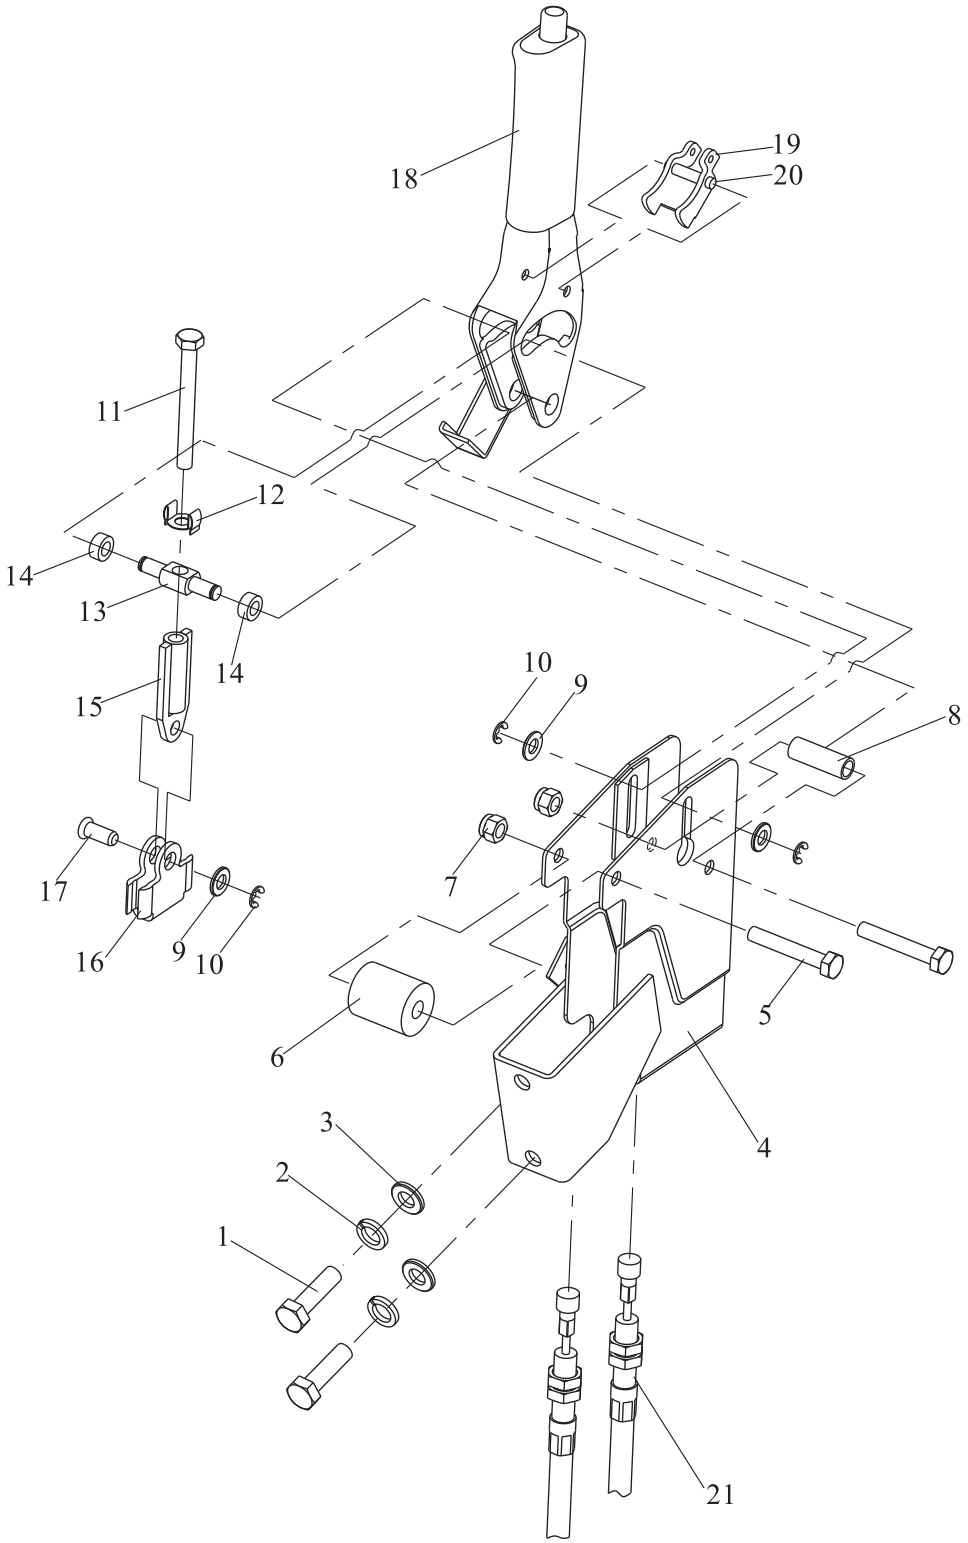

https://truckmanualshub.com/

停车制动
Brake lever

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A15A7-20200	按钮式手制动总成 Hand brake ass'y	1	
1	GB/T5783	螺栓M10×35 Bolt	2	
2	GB/T93	弹垫10 Washer,lock	2	
3	GB/T97.1	平垫10 Washer	2	
4	A15A7-20201	支架总成 Bracket ass'y	1	
5	GB/T5783	螺栓M8×50 Bolt	2	
6	A15A7-20202	橡胶套 Rubber sleeve	2	
7	GB/T6170	螺母M8 Nut	2	
8	A15A7-20203	轴套 Bushing	1	
9	GB/T97.1	平垫8 Washer	3	
10	GB/T896	开口挡圈 Ring	3	
11	GB/T5783	螺栓M8×60 Bolt	1	
12	A15A7-20204	弹簧锁片 Lock plate	1	
13	A15A7-20205	轴 Shaft	1	
14	A15A7-20206	滚轮 Roller	2	
15	A15A7-20207	连接轴 Shaft	1	
16	A15A7-20208	开关板 Switch board	1	
17	GB/T882	销d8×18 Pin	1	
18	A15A7-20209	阀把总成 Lever ass'y	1	
19	A15A7-20210	自锁块 Locking piece	1	
20	A15A7-20211	销轴 Pin	1	
21	A15A7-20212	手刹线头 Hand brake thrum	2	


https://truckmanualshub.com/

七、起重系统

LIFTING SYSTEM

https://truckmanualshub.com/

门架管路系统（基本型）
Hydraulic system mast(Normal mast KM)

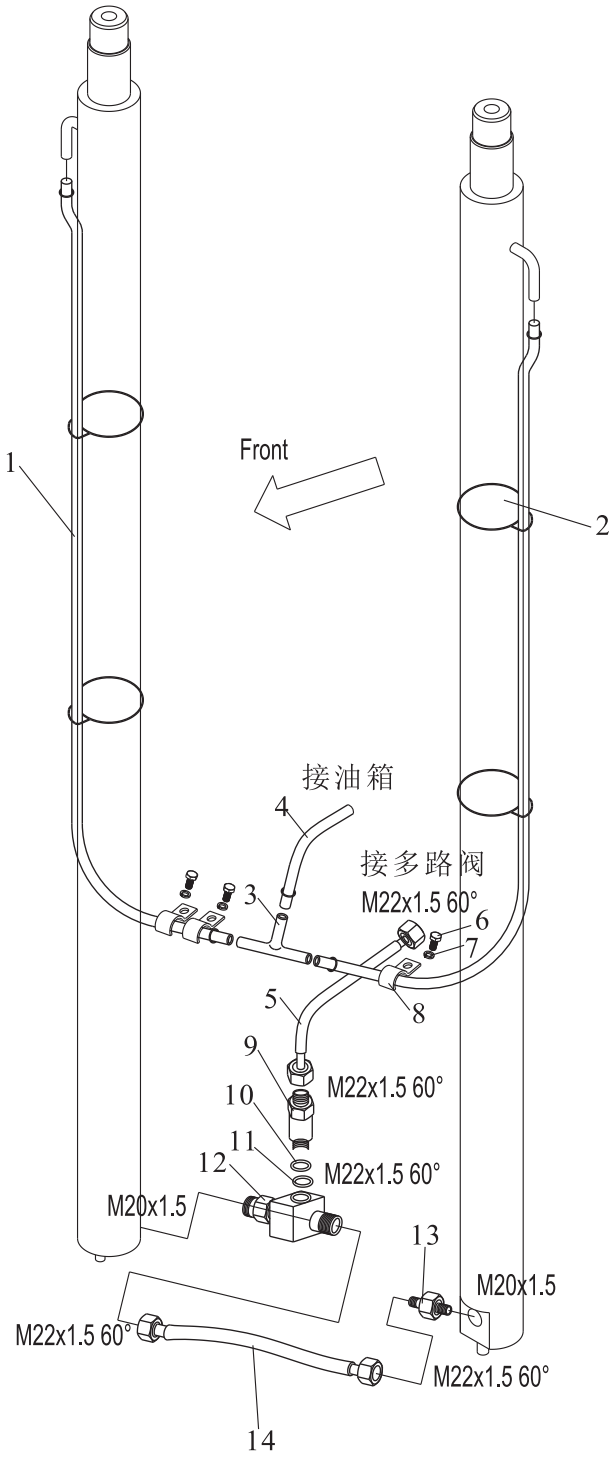

https://truckmanualshub.com/

门架管路系统（基本型）
Hydraulic system mast(Normal mast KM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	TG000-120XXX	塑料管d12×L Tube vinyl	1	
2	TG000-120XXX	塑料管d12×L Tube vinyl	1	
3	GJT-01-00	回油接头 joint	1	
4	TG000-12110	塑料管d12×1100 Tube vinyl	1	
5	TGIBII-13080-GS*J	高压胶管13II×800 Hose H.P.	1	3t带安全阀
-	TGIBII-130100-GS*J	高压胶管13II×1000 Hose H.P.	1	3t不带安全阀
-	TGIBII-130100-GS*J	高压胶管13II×1000 Hose H.P.	1	3.5t带安全阀
-	TGIBII-130100-H35GS*J	高压胶管13II×1000 Hose H.P.	1	3.5t不带安全阀
6	GB/T93	弹垫6 Washer,lock	3	
7	GB/T5783	螺栓M6×20 Bolt	3	
8	D30A1-11009	线卡 Clip	3	
9	GJT-02-00-3	限速阀 Flow regulator	1	3t
-	GJT-02-00-4	限速阀 Flow regulator	1	3.5t
10	GJT-04-04	垫圈22 Washer	1	
11	GB/T3452.1	O型圈19.3×2.4G Washer	1	
12	GJT-03-00C	三通接头总成 Three way connector ass'y	1	3t
-	GJT-80-00	三通接头总成 Three way connector ass'y	1	3.5t
13	GJT-04-00	切断阀 Valve,check	1	3t
-	GJT-77-00	切断阀 Valve,check	1	3.5t
14	TGIBII-13039*J	高压胶管13II×390 Hose H.P.	1	3t
-	TGIBII-13037*J	高压胶管13II×370 Hose H.P.	1	3.5t


https://truckmanualshub.com/

门架管路系统（基本型）
Hydraulic system mast(Normal mast KM)

管路系统选用件（Mast Piping Optional Parts）					
起升高度 Lifting Height	件1长度 Hose(mm)		件2长度 Hose(mm)		备注 Remark
	3t	3. 5t	3t	3. 5t	
2000	1000	1150	900	1050	
2500	1200	1350	1100	1150	
2700	1300	1450	1200	1350	
3000	1400	1550	1350	1500	标准
3300	1600	1750	1500	1550	
3500	1700	1850	1600	1750	
3700	1800	1950	1700	1850	
4000	2000	2150	1900	20500	
4250	2100	2250	2000	2150	
4500	2300	2450	2150	2300	
4750	2400	2550	2300	2450	
5000	2500	2650	2400	2550	
5500	2800	2950	2700	2850	
6000	3100	3250	2950	3050	

https://truckmanualshub.com/

门架管路系统（二节全自由）
Hydraulic system mast(Full Free 2-Stage Mast KZM)

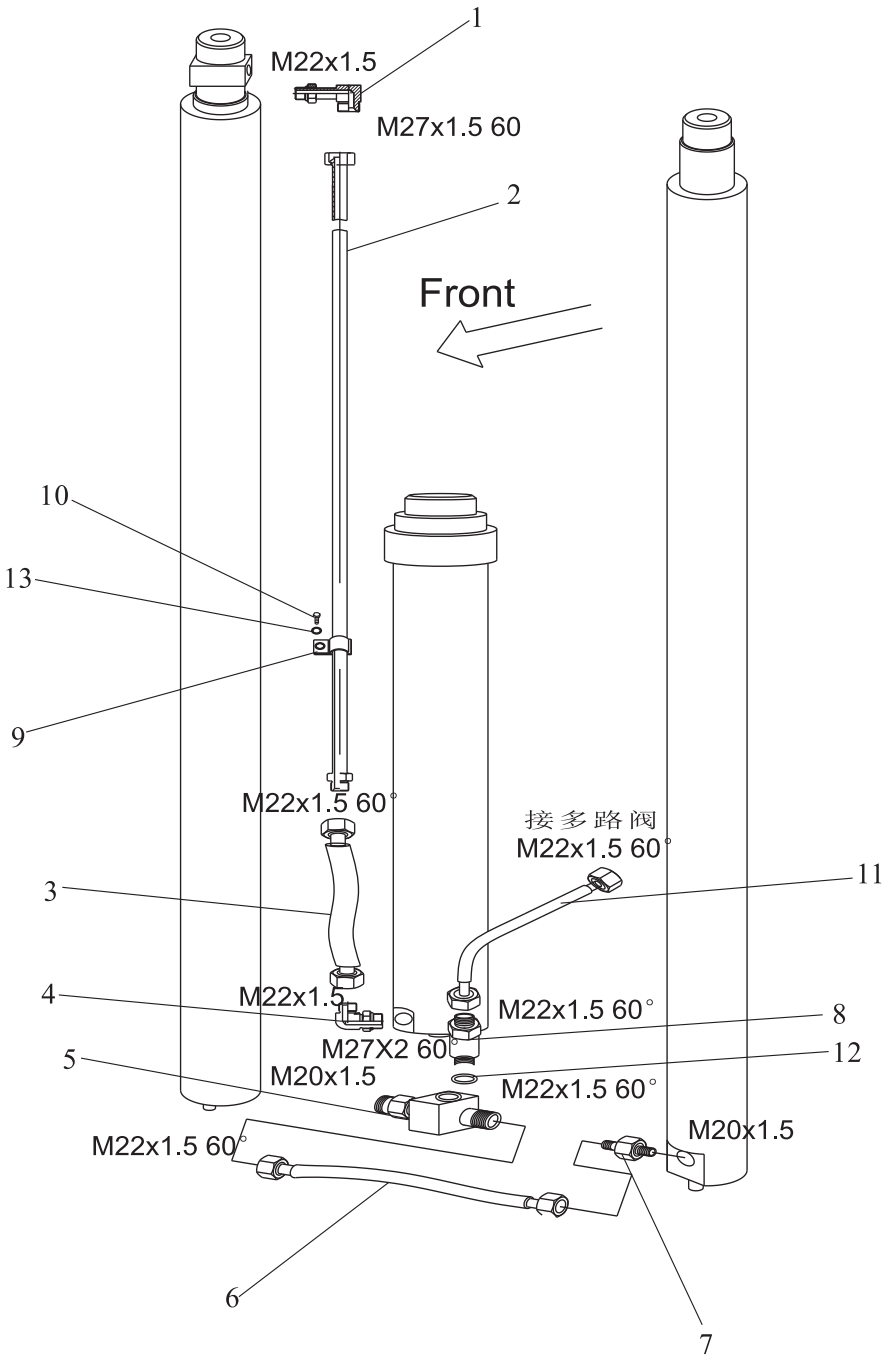

https://truckmanualshub.com/

门架管路系统（二节全自由）
Hydraulic system mast(Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GJT-22-00	直角接头 Elbow	1	
2	GJT-23-00	钢管总成 Steel Pipe ass'y	1	
3	TGIBII-13056GS*J	高压胶管13II×560 Hose H.P.	1	
4	GJT-24-00	直角接头 Elbow	1	
5	GJT-03-00C	三通接头总成 Three way connector ass'y	1	
6	TGIBII-13039*J	高压胶管13II×390 Hose H.P.	1	
7	GJT-04-00	切断阀 Valve,check	1	
8	GJT-02-00-3	限速阀 Flow regulator	1	3t
-	GJT-02-00-4	限速阀 Flow regulator	1	3.5t
9	Z30A3-70001	油管固定板 Board	1	
10	GB/T5783	螺栓M8×20 Bolt	1	
11	TGIBII-13060GS*J	高压胶管13II×600 Hose H.P.	1	
12	JB982	组合垫圈22×2.7 Washer	1	
13	GB/T93	弹垫 8 Washer,lock	1	


https://truckmanualshub.com/

门架管路系统（二节全自由）
Hydraulic system mast(Full Free 2-Stage Mast KZM)

管路系统选用件（Mast Piping Optional Parts）		
起升高度 Lifting Height	件2长度 Hose(mm)	备注 Remark
2700	978	
3000	1128	标准
3300	1278	
3500	1378	
3700	1478	
4000	1678	

https://truckmanualshub.com/

门架管路系统（三节全自由）
Hydraulic system mast(Full Free 3-Stage Mast KZM)

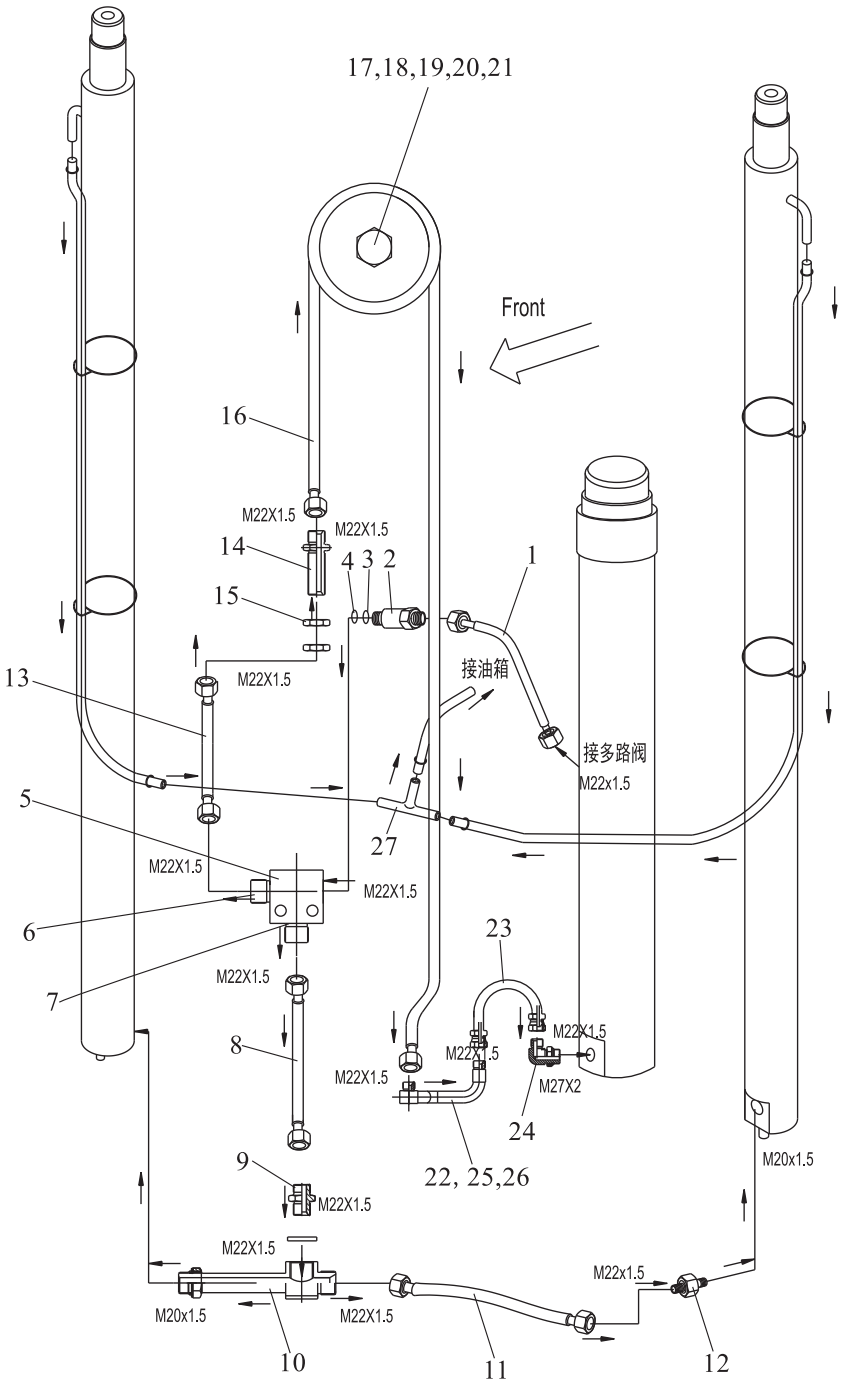

https://truckmanualshub.com/

门架管路系统（三节全自由）
Hydraulic system mast(Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	TGLBII-13075-H45GS*J	高压胶管13II×750 Hose H.P.	1	
2	GJT-02-00-3	限速阀 Flow regulator	1	3t
–	GJT-02-00-4	限速阀 Flow regulator	1	3.5t
3	GJT-04-04	垫圈22 Washer	1	
4	GB/T3452.1	O型圈19.3×2.4G O-ring	1	
5	GJT-61-00	三通接头 Three way connector	1	
6	GB/T6171	螺母M8×1.25 Nut	2	
7	GB/T5785	螺栓M8×1.25×50 Bolt	2	
8	TGIBII-13054NL*J	高压胶管13II×540 Hose H.P.	1	
9	GJT-26-00	直通接头 Nipple	1	
10	GJT-84-00	三通接头总成 Three way connector ass'y	1	
11	TGIBII-13033*J	高压胶管13II×330 Hose H.P.	1	
12	GJT-04-00	切断阀 Valve,check	1	
13	TGIBII-13041NL*J	高压胶管13II×410 Hose H.P.	1	
14	GJT-179-00	直通接头 Nipple	1	
15	GB/T6171	螺母M22×1.25 Nut	2	
16	TGIBII-13XXX	高压胶管13IIXXX Hose H.P.	1	
17	S30C3-70001	滑轮 Pulley	1	
18	S30C3-70002	轴头 Spindle head	1	
19	GB/T894.1	弹性挡圈Φ20 Ring	1	
20	GB/T5785	螺栓M12×1.25×55 Bolt	2	
21	GB/T276	轴承61904-2Z Bushing	1	
22	GJT-110-00	钢管总成 Steel Pipe ass'y	1	
23	TGIBII-13040NL*J	高压胶管13II×400 Hose H.P.	1	
24	GJT-24-00	直角接头 Elbow	1	
25	GB/T5785	螺栓M10×1.5×30 Bolt	2	
26	GB/T93	弹垫 10 Washer,lock	2	
27	GJT-01-00	回油接头 joint	1	


https://truckmanualshub.com/

门架管路系统（三节全自由）
Hydraulic system mast(Full Free 3-Stage Mast KZM)

管路系统选用件（Mast Piping Optional Parts）		
起升高度 Lifting Height	件16长度 Hose(mm)	备注 Remark
3700	2000	
4000	2100	
4350	2450	
4500	2550	标准
4800	2700	
5000	2850	
5500	3250	
6000	3550	

https://truckmanualshub.com/

货叉
Fork

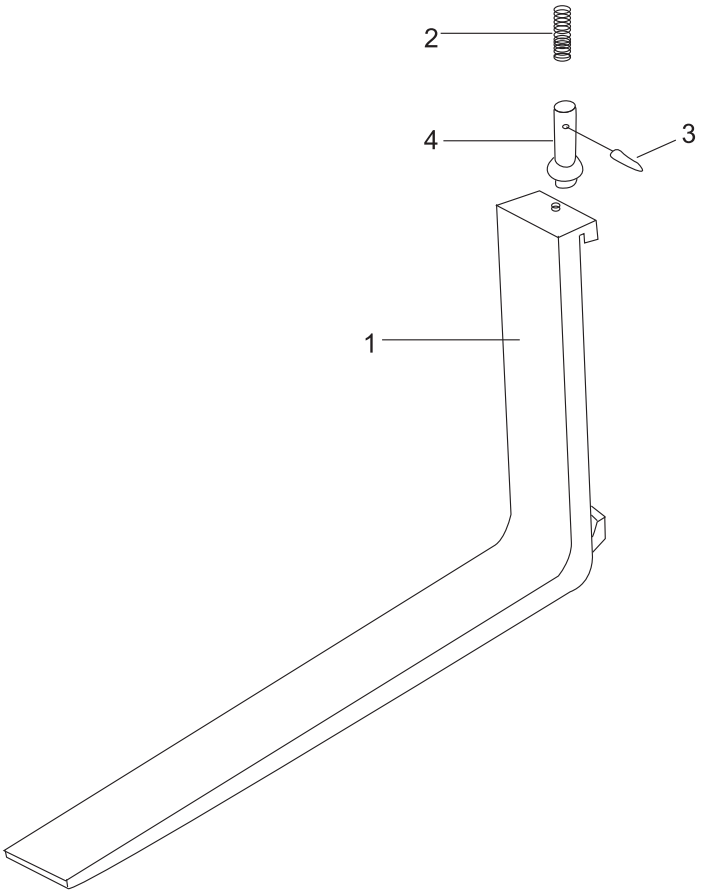


https://truckmanualshub.com/

货叉
Fork

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A30A3-90000	货叉总成 Fork ass'y	2	3t
-	A35A3-90000	货叉总成 Fork ass'y	2	3.5t
2	A30A3-90001	弹簧 Spring	2	3t
-	A35A3-90001	弹簧 Spring	2	3.5t
3	A30A3-90002	销 Pin	2	3t
-	A35A3-90002	销 Pin	2	3.5t
4	A30A3-90003	止动销子 Pin, stopper	2	3t
-	A35A3-90003	止动销子 Pin, stopper	2	3.5t

https://truckmanualshub.com/

货叉架（基本型）
Lift Bracket Normal Mast

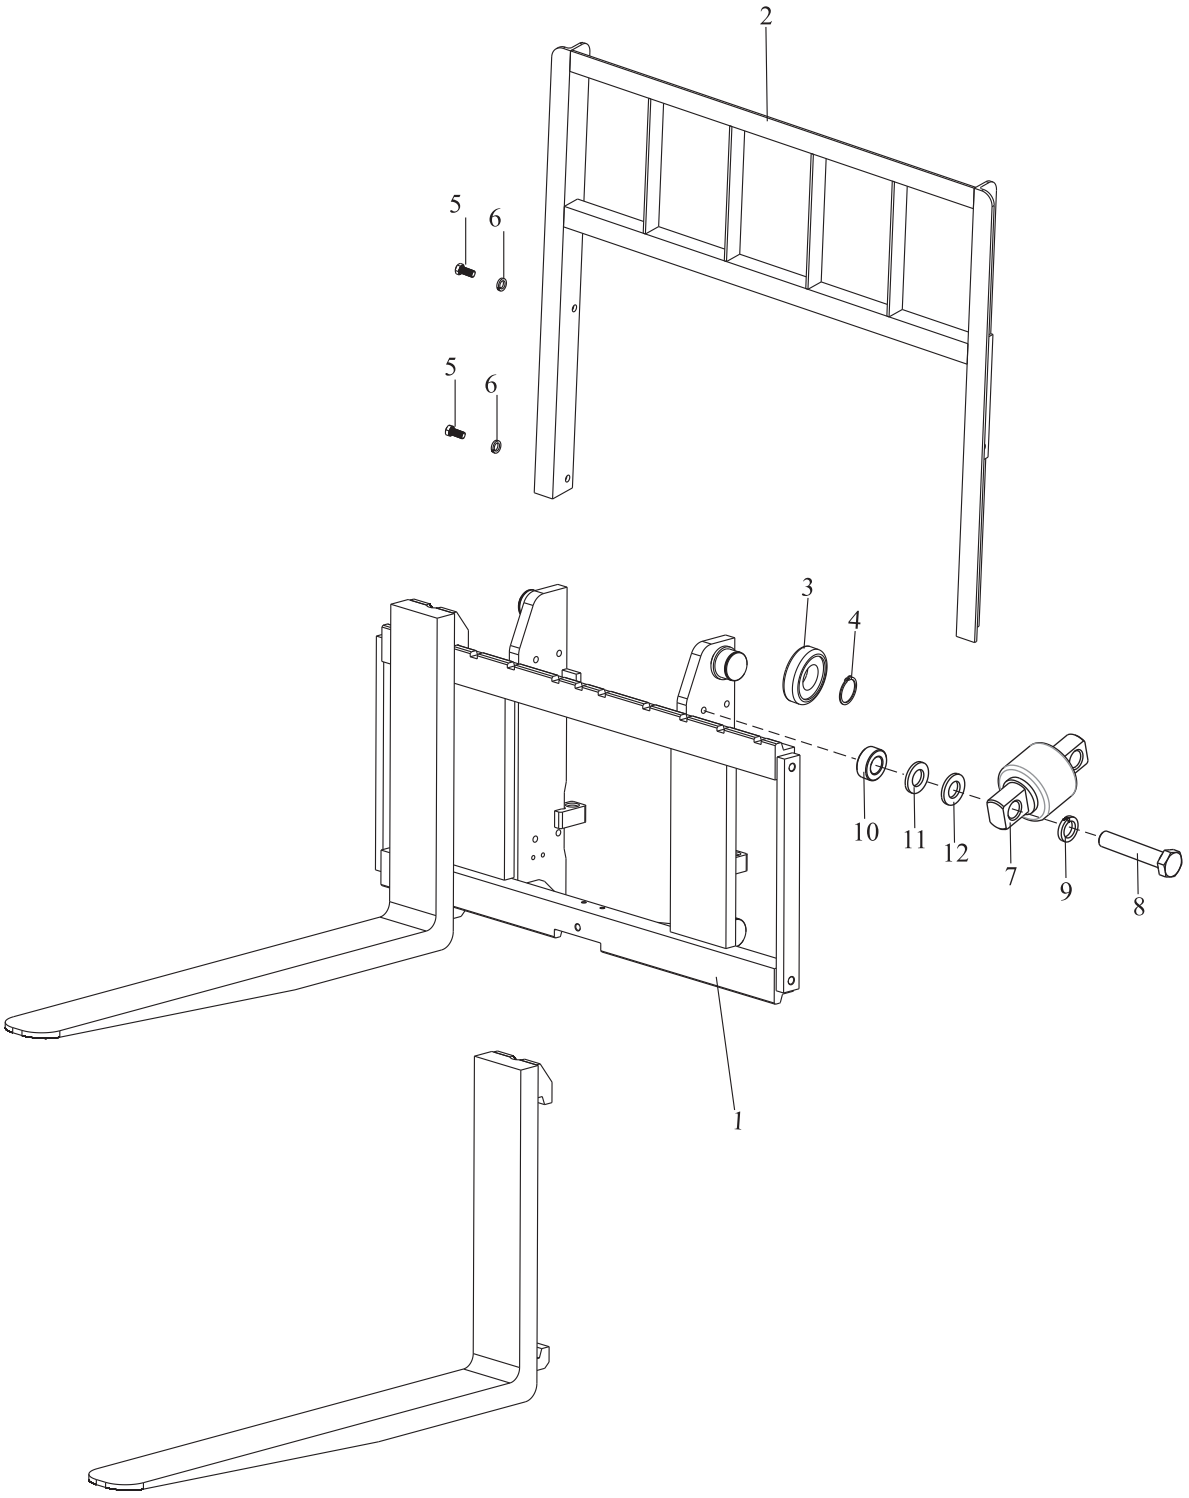


https://truckmanualshub.com/

货叉架（基本型）
Lift Bracket Normal Mast

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	M30F3-50000	货叉架总成 Lifting fork ass'y	1	3t
–	M35B3-50000	货叉架总成 Lifting fork ass'y	1	3.5t
2	M30A3-60000	挡货架总成 Backrest ass'y	1	
3	M30A3-40301	主滚轮 ф119.3 End Roller	6	
4	GB/T849.2	弹性挡圈55 Ring	6	
5	GB/T5786	螺栓M14×1.5×30 Bolt	4	
6	GB/T93	弹垫14 Washer, lock	4	
7	S30F3-40100	轴连轴承 Bearing	4	
8	GB/T5786	螺栓M10×1.25×50 Bolt	8	
9	GB/T93	弹垫10 Washer, lock	8	
10	S30F3-40001	垫块 Spacer	16	
11	S30F3-40002	垫片 Shim	16	
12	S30F3-40003	垫片 Shim	16	

https://truckmanualshub.com/

货叉架（二节全自由）
Lift Bracket Full Free 2-Stage Mast

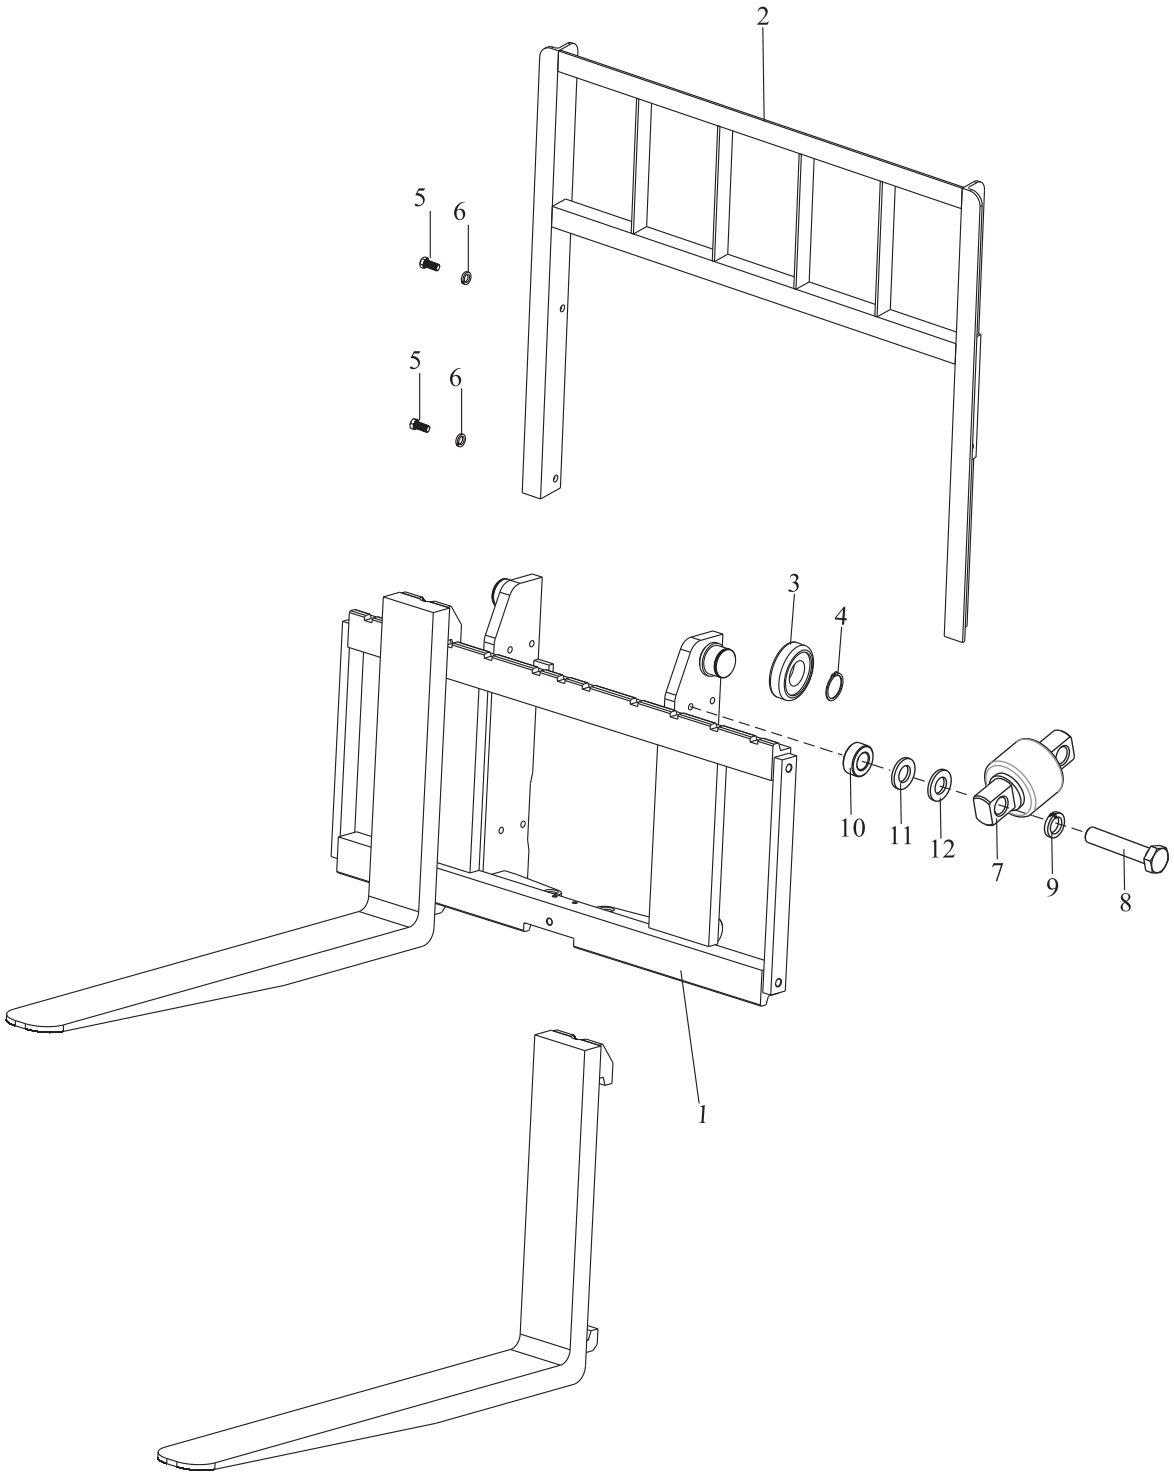


https://truckmanualshub.com/

货叉架（二节全自由）
Lift Bracket Full Free 2-Stage Mast

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	Z30F3-50000	货叉架总成 Lifting fork ass'y	1	3t
-	Z35B3-50000	货叉架总成 Lifting fork ass'y	1	3.5t
2	M30A3-60000	挡货架总成 Backrest ass'y	1	
3	M30A3-40301	主滚轮 φ119.3 End Roller	6	
4	GB/T894.1	弹性挡圈55 Ring	6	
5	GB/T5786	螺栓M14×1.5×30 Bolt	4	
6	GB/T93	弹垫14 Washer, lock	4	
7	S30F3-40100	轴连轴承 Bearing	4	
8	GB/T5786	螺栓M10×1.25×50 Bolt	8	
9	GB/T93	弹垫10 Washer, lock	8	
10	S30F3-40001	垫块 Spacer	16	
11	S30F3-40002	垫片 Shim	16	
12	S30F3-40003	垫片 Shim	16	

https://truckmanualshub.com/

货叉架（三节全自由）
Lift Bracket Full Free 3-Stage Mast

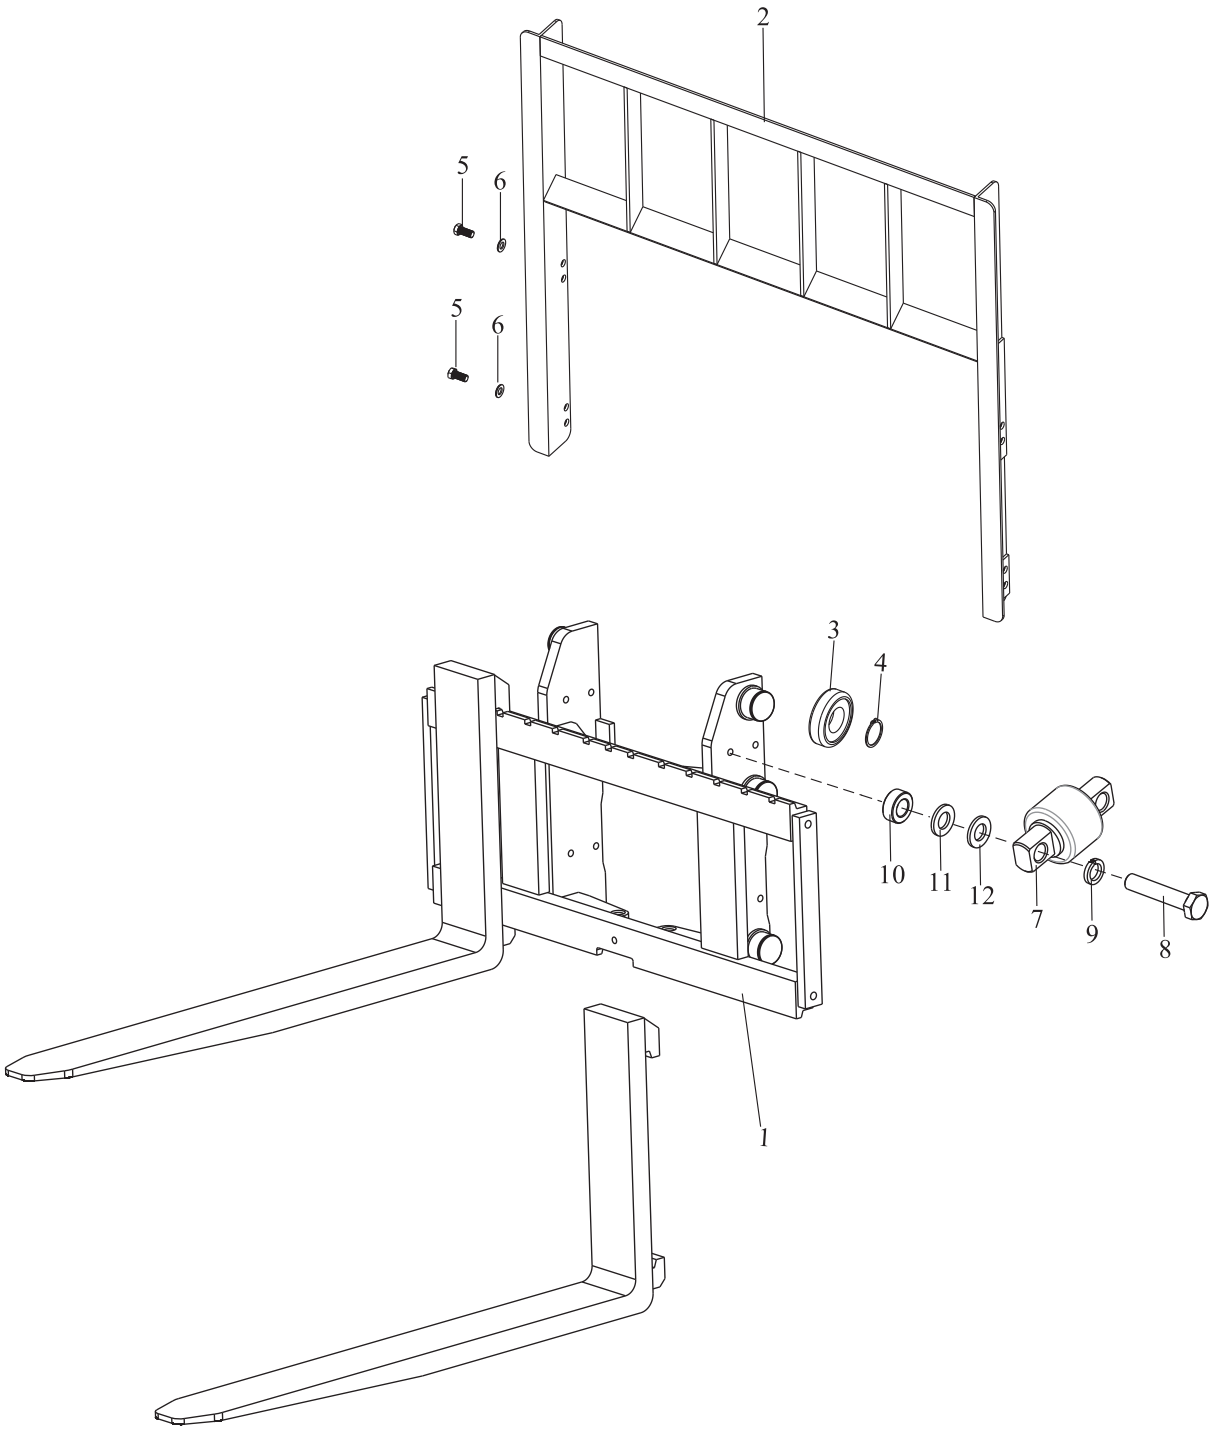


https://truckmanualshub.com/

货叉架（三节全自由）
Lift Bracket Full Free 3-Stage Mast

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	S30F3-50000	货叉架总成 Lifting fork ass'y	1	
2	M30A3-60000	挡货架总成 Backrest ass'y	1	
3	M30A3-40301	主滚轮 ϕ119.3 End Roller	6	
4	GB/T894.1	弹性挡圈55 Ring	6	
5	GB/T5786	螺栓M14×1.5×30 Bolt	4	
6	GB/T93	弹垫14 Washer, lock	4	
7	S30F3-40100	轴连轴承 Bearing	4	
8	GB/T5786	螺栓M10×1.25×50 Bolt	8	
9	GB/T93	弹垫10 Washer, lock	8	
10	S30F3-40001	垫块 Spacer	16	
11	S30F3-40002	垫片 Shim	16	
12	S30F3-40003	垫片 Shim	16	

https://truckmanualshub.com/

门架(基本型)
Mast (Normal mast KM)

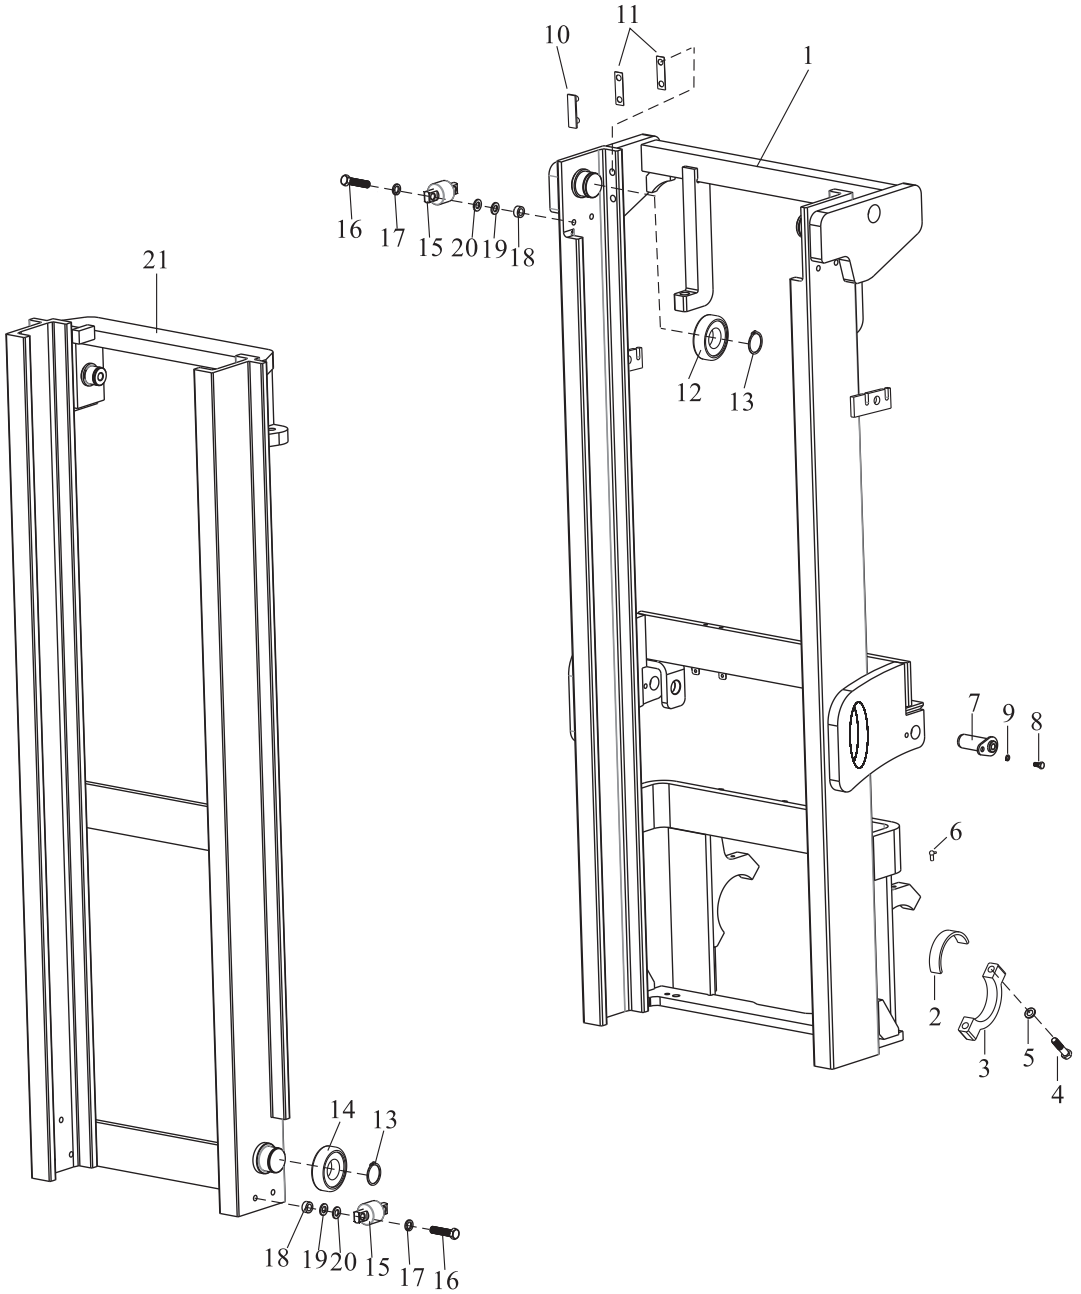


https://truckmanualshub.com/

门架(基本型)
Mast (Normal mast KM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	M30F3-10000	外门架 Mast,outer	1	3t
-	M35B3-10000	外门架 Mast,outer	1	3.5t
2	M30A3-00002	轴衬 Bushing	2	
3	M30A3-00001	支座盖 Cap	2	
4	GB/T5786	螺栓M16×1.5×70 Bolt	4	
5	GB/T93	弹垫16 Washer,lock	4	
6	JB/T7940.1	直通式压注油杯M10×1 Oil cup	6	
7	M30F3-00100	倾斜油缸销轴 Pin axle	2	
8	GB/T5786	螺栓M10×1.25×20 Bolt	2	
9	GB/T93	弹垫10 Washer,lock	2	
10	M30A3-40001	限位滑块 Slipper	2	
11	M30A3-40002/3	调整垫片 Shim	4	
12	M30A3-40201	主滚轮 φ111.3 End Roller	2	
13	GB/T894.1	弹性挡圈55 Ring	2	
14	M30A3-40301	主滚轮 φ119.3 End Roller	2	
15	S30F3-40100	轴连轴承 Bearing	4	
16	GB/T5786	螺栓M10×1.25×50 Bolt	8	
17	GB/T93	弹垫10 Washer, lock	8	
18	S30F3-40001	垫块 Spacer	16	
19	S30F3-40002	垫片 Shim	16	
20	S30F3-40003	垫片 Shim	16	
21	M30F3-30000	内门架 Mast,inner	1	3t
-	M35B3-30000	内门架 Mast,inner	1	3.5t

https://truckmanualshub.com/

门架(二节全自由)
Mast (Full free 2-stage mast KZM)

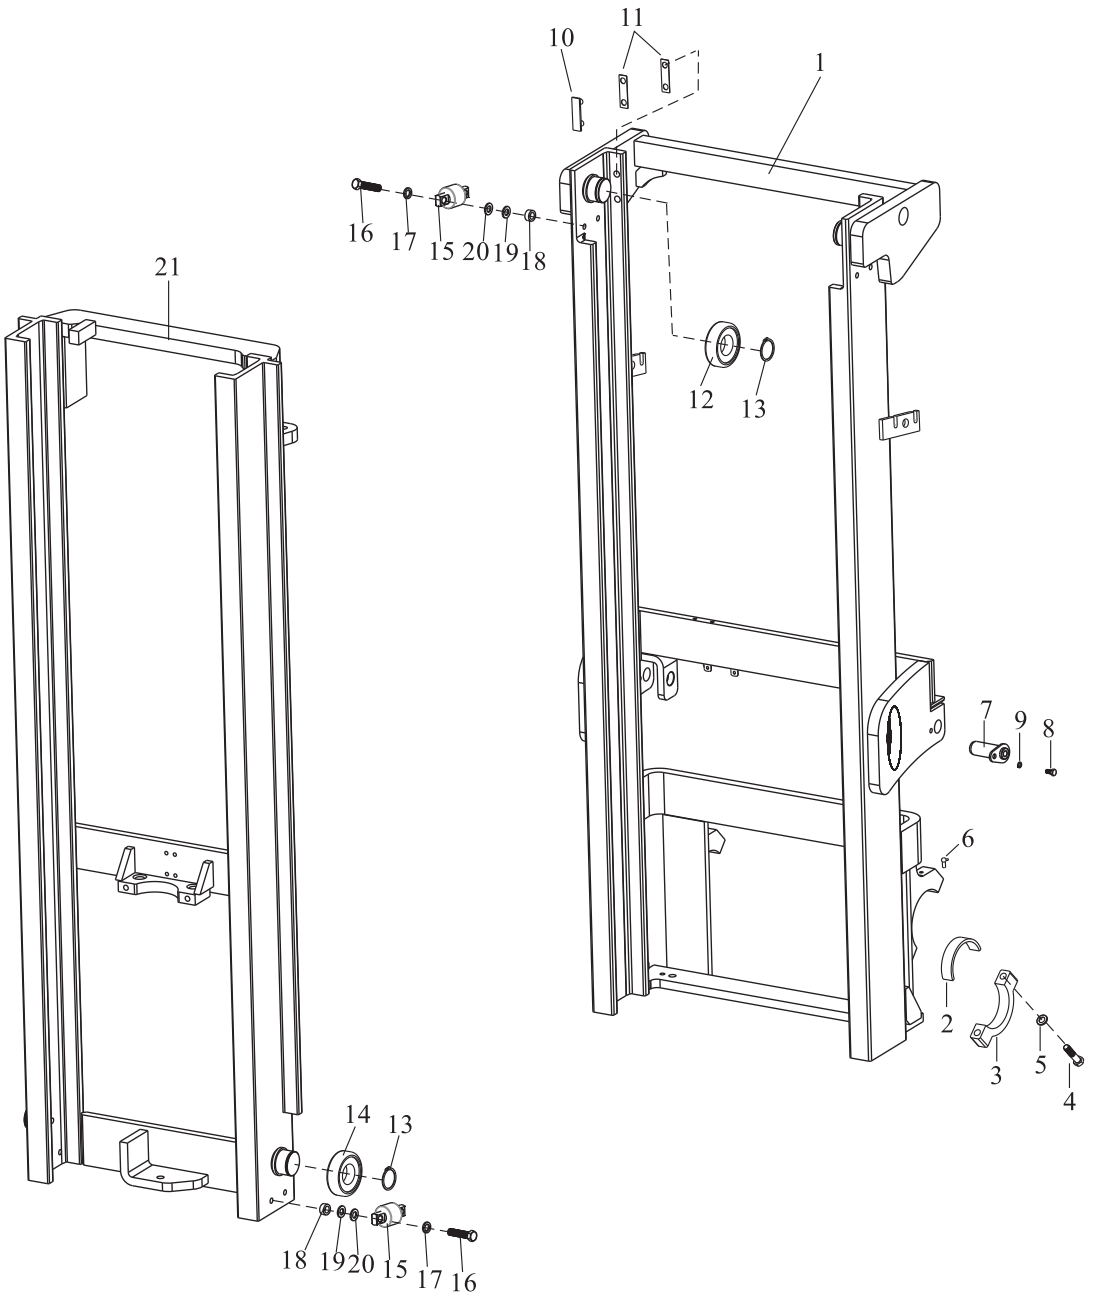


https://truckmanualshub.com/

门架(二节全自由)
Mast (Full free 2-stage mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	Z30F3-10000	外门架 Mast,outer	1	3t
-	Z35B3-10000	外门架 Mast,outer	1	3.5t
2	M30A3-00002	轴衬 Bushing	2	
3	M30A3-00001	支座盖 Cap	2	
4	GB/T5786	螺栓M16×1.5×70 Bolt	4	
5	GB/T93	弹垫16 Washer,lock	4	
6	JB/T7940.1	直通式压注油杯M10×1 Oil cup	6	
7	M30F3-00100	倾斜油缸销轴 Pin axle	2	
8	GB/T5786	螺栓M10×1.25×20 Bolt	2	
9	GB/T93	弹垫10 Washer,lock	2	
10	M30A3-40001	限位滑块 Slipper	2	
11	M30A3-40002/3	调整垫片 Shim	4	
12	M30A3-40201	主滚轮φ111.3 End Roller	2	
13	GB849.2-1986	弹性挡圈55 Ring	2	
14	M30A3-40301	主滚轮φ119.3 End Roller	2	
15	S30F3-40100	轴连轴承 Bearing	4	
16	GB/T5786	螺栓M10×1.25×50 Bolt	8	
17	GB/T93	弹垫10 Washer, lock	8	
18	S30F3-40001	垫块 Spacer	16	
19	S30F3-40002	垫片 Shim	16	
20	S30F3-40003	垫片 Shim	16	
21	Z30F3-30000	内门架 Mast,inner	1	3t
-	Z35B3-30000	内门架 Mast,inner	1	3.5t

https://truckmanualshub.com/

门架(三节全自由)
Mast (Full free 3-stage mast KZM)

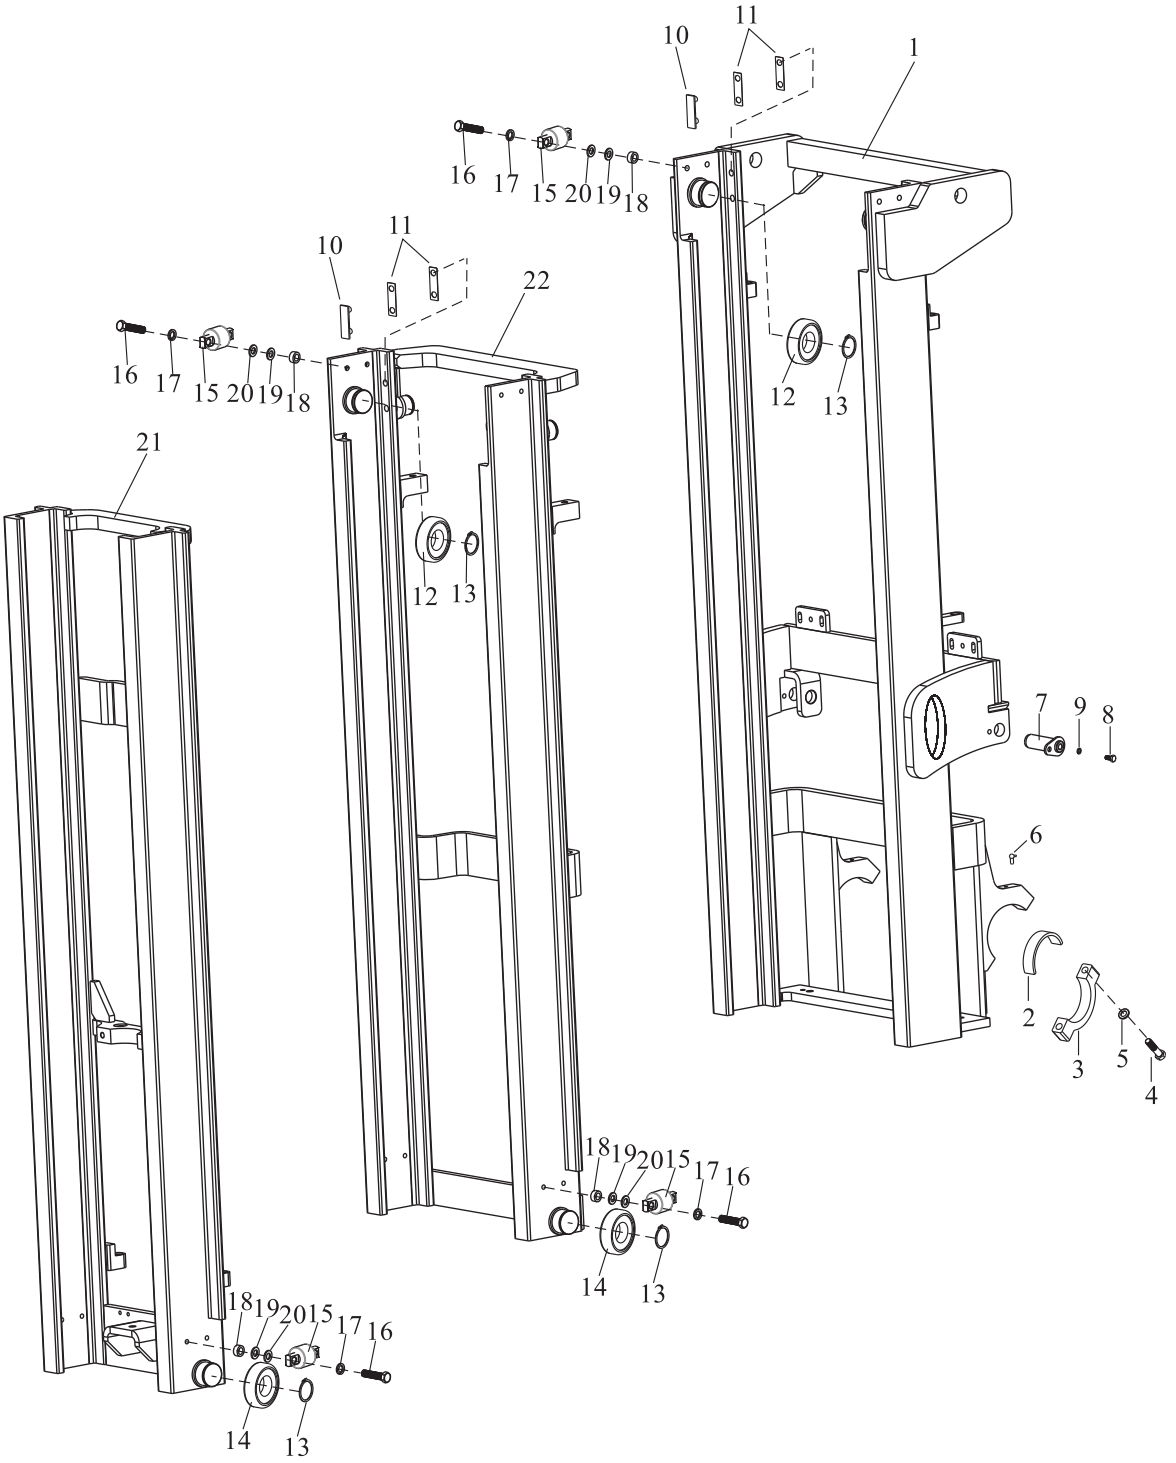

https://truckmanualshub.com/


门架(三节全自由)
Mast (Full free 3-stage mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	S30F3-10000	外门架 Mast,outer	1	
2	M30A3-00002	轴衬 Bushing	2	
3	M30A3-00001	支座盖 Cap	2	
4	GB/T5786	螺栓M16×1.5×70 Bolt	4	
5	GB/T93	弹垫16 Washer,lock	4	
6	JB/T7940.1	直通式压注油杯M10×1 Oil cup	2	
7	M30F3-00100	倾斜油缸销轴 Pin axle	2	
8	GB/T5786	螺栓M10×1.25×20 Bolt	2	
9	GB/T93	弹垫10 Washer,lock	2	
10	M30A3-40001	限位滑块 Slipper	2	
11	M30A3-40002/3	调整垫片 Shim	4	
12	M30A3-40201	主滚轮 φ111.3 End Roller	4	
13	GB/T894.1	弹性挡圈55 Ring	2	
14	M30A3-40301	主滚轮 φ119.3 End Roller	4	
15	S30F3-40100	轴连轴承 Bearing	4	
16	GB/T5786	螺栓M10×1.25×50 Bolt	8	
17	GB/T93	弹垫10 Washer, lock	8	
18	S30F3-40001	垫块 Spacer	16	
19	S30F3-40002	垫片 Shim	16	
20	S30F3-40003	垫片 Shim	16	
21	S30F3-30000	内门架 Mast,inner	1	
22	S30F3-20000	中门架 Medium Mast	1	

https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)

FB30-S1/C1/C2/C3

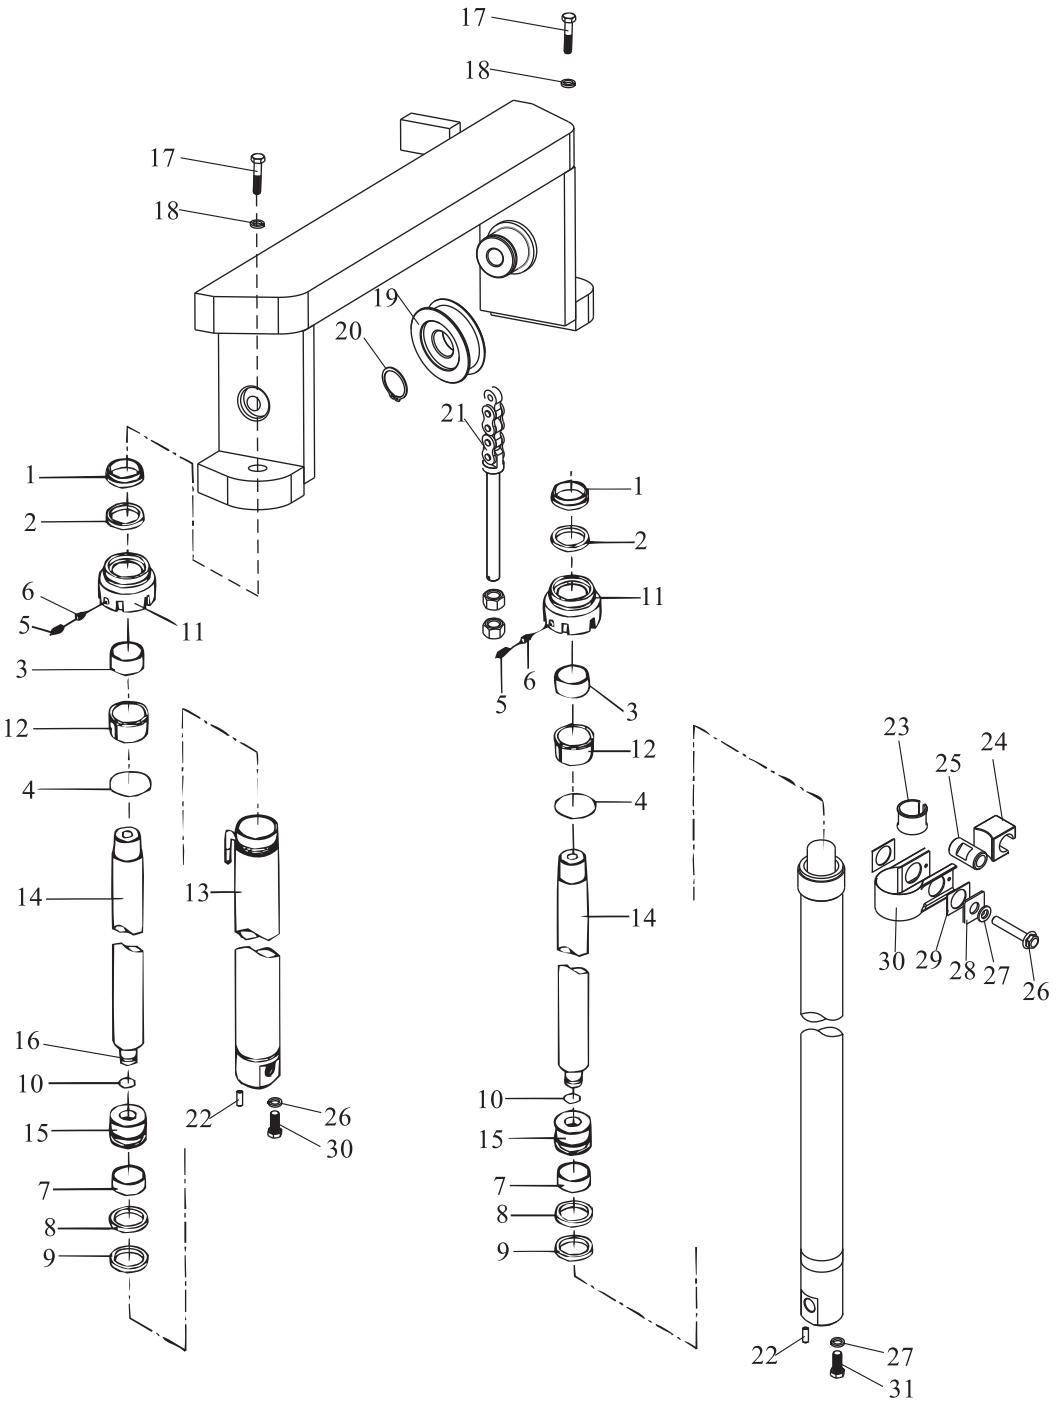

https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)


FB30-S1/C1/C2/C3

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A30A4-10100	起升油缸总成 Lift cylinder ass,y	1	
1	A30A4-10101	防尘圈45×57×7/10 Dust ring	2	
2	A30A4-10102	密封圈45×55×6 Ring	2	
3	A30A4-10103	钢背轴承4530 Guide bushing	2	
4	GB/T1235	O型密封圈68×3. 1 O-ring	2	
5	GB/T80	螺钉M8×8 Screw	4	
6	A30A4-10104	塞子 Plug	4	
7	A30A4-10105	支承环56×20×2.5 Wearing	2	
8	A30A4-10106	挡片56×45×3 Ring, back up	2	
9	A30A4-10107	U型密封圈56×45×7 Ring	2	
10	A30A4-10108	钢丝挡圈 Snap ring	2	
11	A30A4-10109	导向套 Guide,Sleeve	2	
12	A30A4-10110	衬套 Sleeve	2	
13	A30A4-10111	缸体 Cylinder	2	
14	A30A4-10112	活塞杆 Piston rod	2	
15	A30A4-10113	活塞 Piston	2	
16	A30A4-10114	调整套 Spacer	2	
17	GB/T5786	螺栓 M16×1.5×40 Bolt	2	
18	GB/T93	弹垫16 Washer,lock	2	
19	M30A3-80100	链轮 Sheave	2	

https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)

FB30-S1/C1/C2/C3

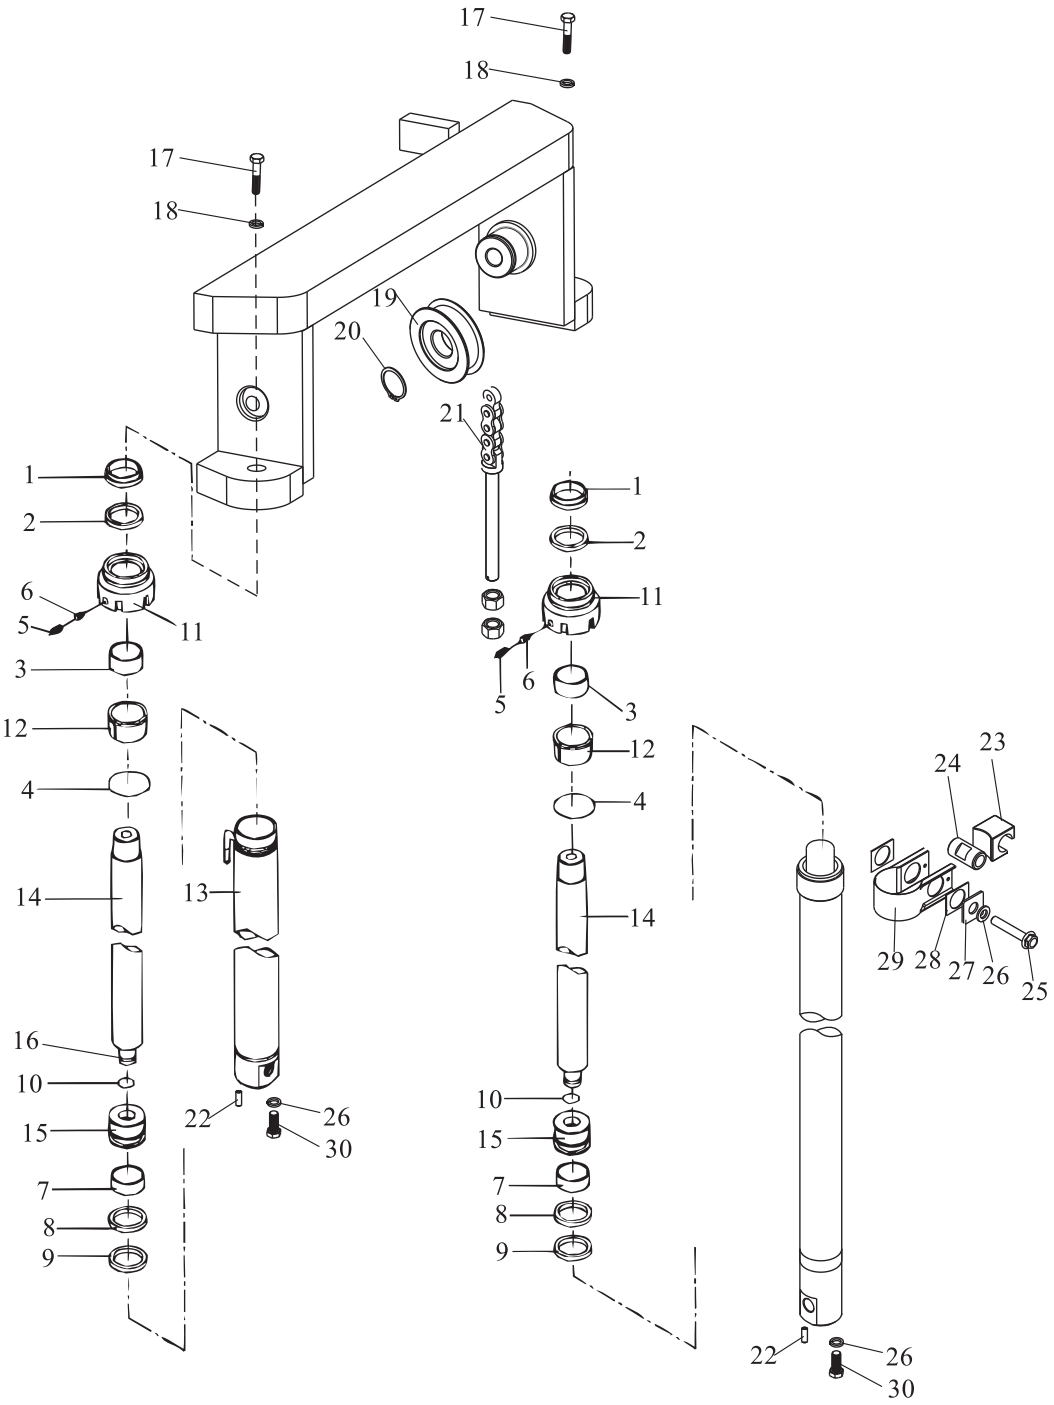

https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)


FB30-S1/C1/C2/C3

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
20	GB/T894.1	弹性挡圈40 Snap ring	2	
21	LH1623×N	链条总成 Chain ass'y	2	
22	GB/T119.1	销D10×26 Pin	2	
23	S30F3-80004	橡胶块 Block rubber	2	
24	S30F3-80003	套管 Casing	2	
25	GB/T5786	螺栓M12×1.25×75 Bolt	2	
26	GB/T93	弹垫12 Washer,lock	4	
27	S30F3-80005	垫板 Underboarding	2	
28	S30F3-80001	橡胶块 Block rubber	4	
29	S30F3-80002	卡箍 Clip	2	
30	GB/T5786	螺栓M12×1.25×30 Bolt	2	

https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)

FB35-S1/C1/C2/C3

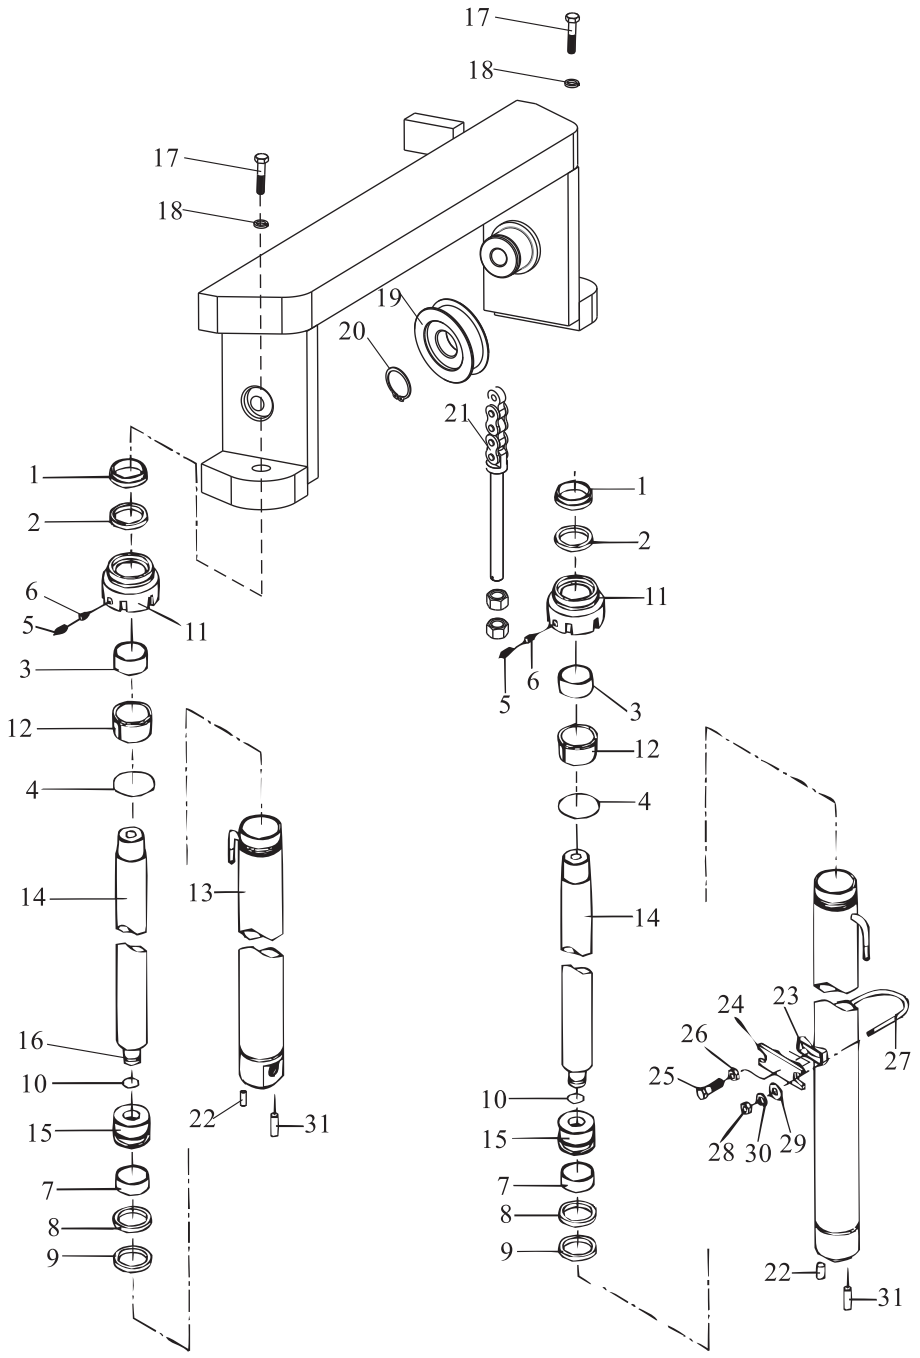

https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)


FB35-S1/C1/C2/C3

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A35A4-10100	起升油缸总成 Lift cylinder ass,y	1	
1	A35A4-10103	防尘圈50×62×7/10 Dust ring	2	
2	A35A4-10104	密封圈50×60×6 Ring	2	
3	A35A4-10105	钢背轴承5040 Guide bushing	2	
4	GB/T1235	O型密封圈75×3. 1 O-ring	2	
5	GB/T80	螺钉M8×8 Screw	4	
6	A35A4-10106	塞子6×3 Plug	4	
7	A35A4-10107	支承环60×20×2.5 Wearing	2	
8	A35A4-10108	挡片63×53×3 Ring, back up	2	
9	A35A4-10109	孔用密封圈63×53×6 Ring	2	
10	A35A4-10110	钢丝挡圈 Snap ring	2	
11	A35A4-10111	缸盖 Cap, lift cylinder	2	
12	A35A4-10112	衬套 Sleeve	2	
13	A35A4-10101	缸体 Cylinder	2	
14	A35A4-10102	活塞杆 Piston rod	2	
15	A35A4-10113	活塞 Piston	2	
16	A35A4-10114	调整套 Spacer	2	
17	GB/T5786	螺栓 M20×1.5×50 Bolt	2	
18	GB/T93	弹垫20 Washer,lock	2	
19	M35A3-80100	链轮 Sheave	2	

https://truckmanualshub.com/

起升油缸（基本型）
Lift Cylinder(Normal Mast KM)

FB35-S1/C1/C2/C3

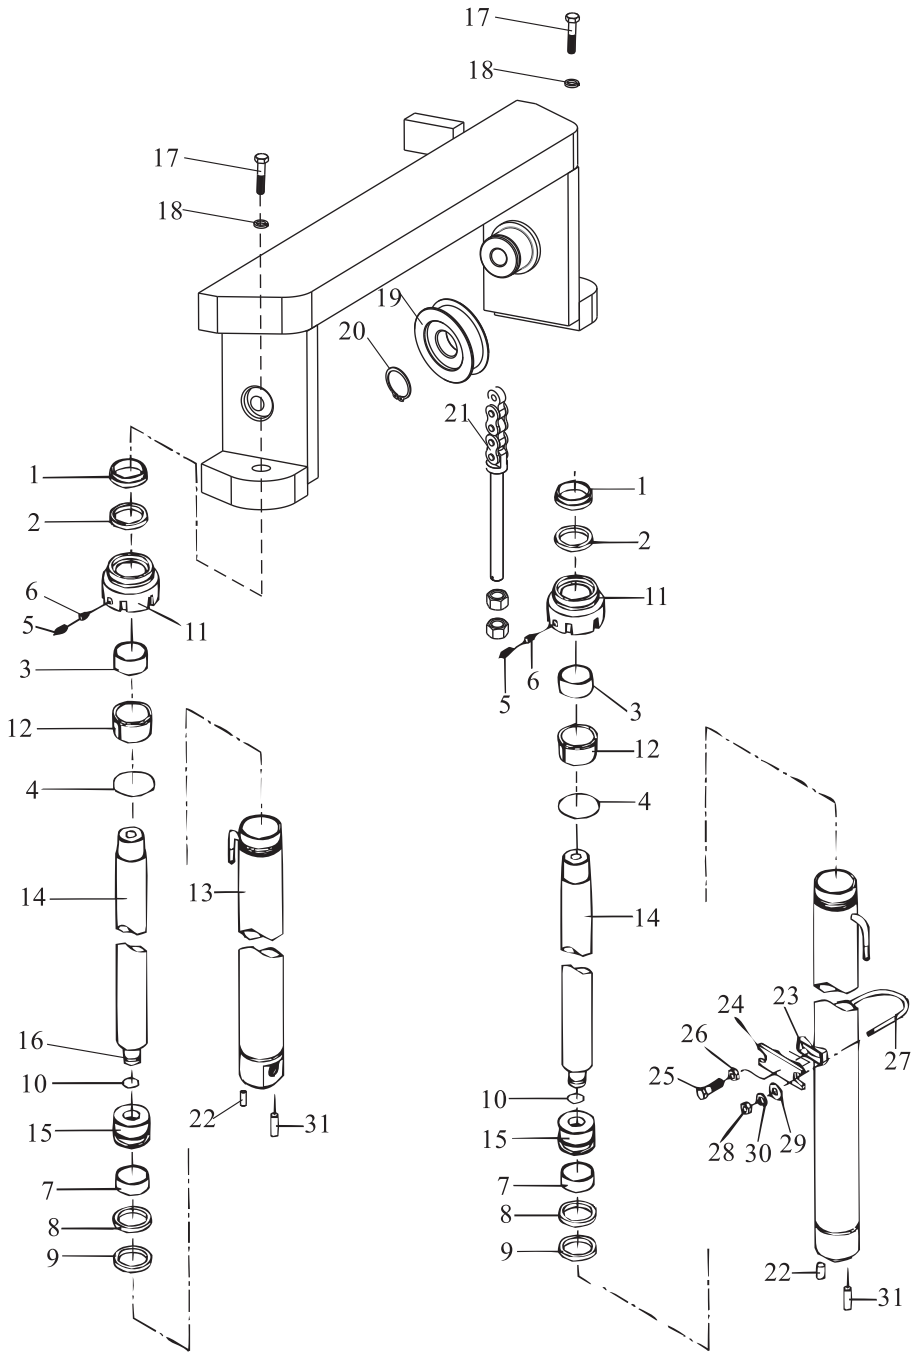

https://truckmanualshub.com/


起升油缸（基本型）
Lift Cylinder(Normal Mast KM)

FB35-S1/C1/C2/C3

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
20	GB/T894.1	弹性挡圈45 Snap ring	2	
21	LH1634×N	链条总成 Chain ass'y	2	
22	GB/T119.1	销D10×26 Pin	2	
23	M30A3-80002	调整块 Spacer	2	
24	M30A3-80003	油缸支撑块 Support	2	
25	GB/T5786	螺栓M12×1.25×50 Bolt	2	
26	GB/T6171	螺母M12×1.25 Nut	2	
27	M35A3-80001	U型螺栓 U-Bolt	2	
28	GB/T6173	螺母M10 Nut	4	
29	GB/T97.1	平垫10 Washer	4	
30	GB/T93	弹垫10 Washer,lock	4	
31	M30A3-80001	台阶螺栓 Bolt	2	

https://truckmanualshub.com/

前起升油缸(二节全自由)
Front Lift Cylinder (Full Free 2-Stage Mast KZM)

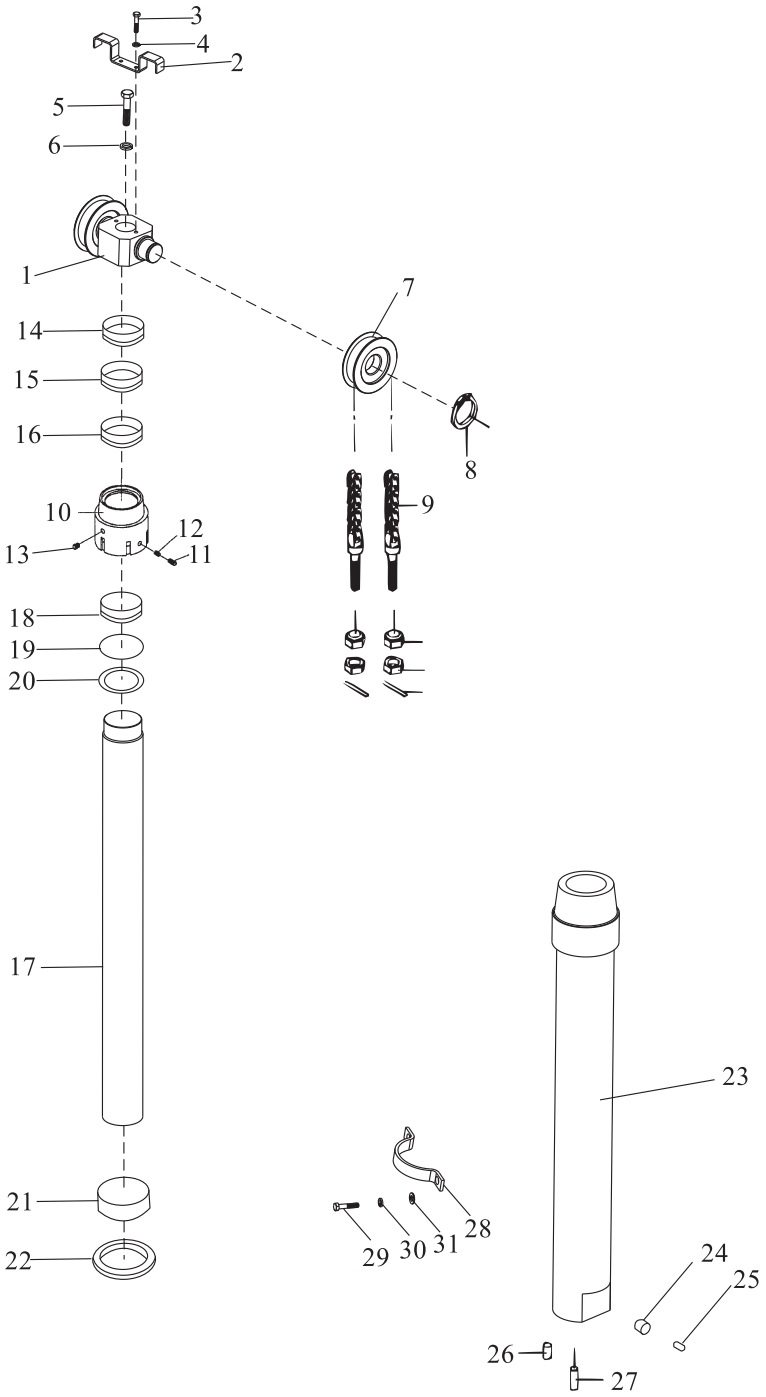


https://truckmanualshub.com/

前起升油缸(二节全自由)
Front Lift Cylinder (Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A30A4-10300	前起升油缸总成 Front lift cylinder ass'y	1	3t
-	A35A4-10300	前起升油缸总成 Front lift cylinder ass'y	1	3.5t
1	Z30A3-90100	链轮支座 Sheave Seat	1	3t
-	Z35A3-90100	链轮支座 Sheave Seat	1	3.5t
2	Z30A3-90103	链条挡板 Stopper chain	1	3t
-	Z35A3-90002	链条挡板 Stopper chain	1	3.5t
3	GB/T93	弹垫8 Washer,lock	2	
4	GB/T5783	螺栓 M8×20 Bolt	2	
5	GB/T5783	螺栓 M16×45 Bolt	1	
6	GB/T93	弹垫16 Washer,lock	1	
7	M30A3-80100	链轮 Sheave	2	3t
-	M35A3-80100	链轮 Sheave	2	3.5t
8	GB/T894.1	弹性挡圈40 Snap ring	2	
9	LH1623×N	链条总成 Chain ass'y	2	3t
-	LH1634×N	链条总成 Chain ass'y	2	3.5t
10	A30A4-10301	前缸盖 Cap, lift cylinder	1	3t
-	A35A4-10301	前缸盖 Cap, lift cylinder	1	3.5t
11	GB/T80	螺钉M8×8 Screw	1	
12	A30A4-10302	塞子 Plug	1	
13	A30A4-10314	螺塞ZG1/4〃 Plug	1	
14	A30A4-10303	防尘圈85×99×8/11 Dust ring	1	3t
-	A35A4-10303	防尘圈95×109×8/11 Dust ring	1	3.5t
15	A30A4-10304	挡圈85×100×3 Snap ring	1	3t
-	A35A4-10304	挡圈95×110×3 Snap ring	1	3.5t
16	A30A4-10305	Yx型密封圈85×100×9 Yx-ring	1	3t

https://truckmanualshub.com/

前起升油缸(二节全自由)
Front Lift Cylinder (Full Free 2-Stage Mast KZM)

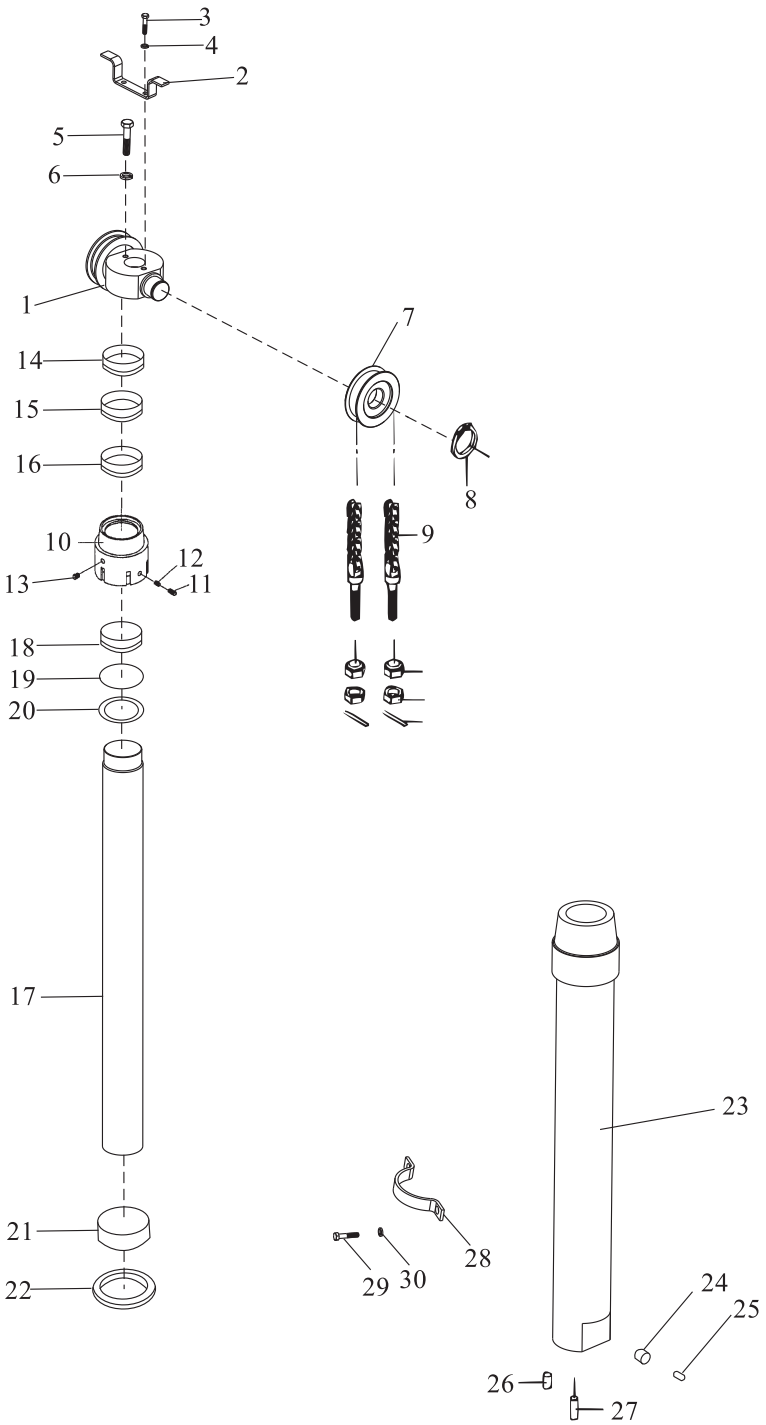


https://truckmanualshub.com/

前起升油缸(二节全自由)
Front Lift Cylinder (Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
–	A35A4-10305	Yx型密封圈95×110×9 Yx-ring	1	3.5t
17	A30A4-10306	柱塞杆总成 Piston rod ass'y	1	3t
–	A35A4-10306	柱塞杆总成 Piston rod ass'y	1	3.5t
18	A30A4-10307	钢背轴承8540 Guide bushing	1	3t
–	A35A4-10307	钢背轴承9535 Guide bushing	1	3.5t
19	GB/T1235-76	O型密封圈110×3.1 O-ring	1	3t
–	GB/T1235-76	O型密封圈116.8×5.33 O-ring	1	3.5t
20	A30A4-10308	挡圈110×105×1.25 Stopper	1	3t
–	A35A4-10308	挡圈125.5×116.8×1.7 Stopper	1	3.5t
21	A30A4-10309	支承环100×25×3 Backup ring	1	3t
–	A35A4-10309	支承环110×104×25 Backup ring	1	3.5t
22	A30A4-10310	密封环100×92.4×4.3 Seal ring	1	3t
–	A35A4-10310	密封环110×102.4×4.3 Seal ring	1	3.5t
23	A30A4-10311	前缸体 Cylinder	1	3t
–	A35A4-10311	前缸体 Cylinder	1	3.5t
24	A30A4-10312	滑阀 Spool	1	3t
–	A35A4-10312	滑阀 Spool	1	3.5t
25	A30A4-10313	弹簧 Spring	1	
26	M30A3-80001	台阶螺栓 Bolt	1	
27	GB/T119.1	销D×26 Pin	1	
28	Z30A3-90001	油缸卡环 Support	1	3t
–	Z35A3-90001	油缸卡环 Support	1	3.5t
29	GB/T5783	螺栓 M14×30 Bolt	2	
30	GB/T93	弹垫14 Washer,lock	2	
31	GB/T97.1	平垫14 Washer	2	

https://truckmanualshub.com/

前起升油缸(三节全自由)
Front Lift Cylinder (Full Free 3-Stage Mast KZM)

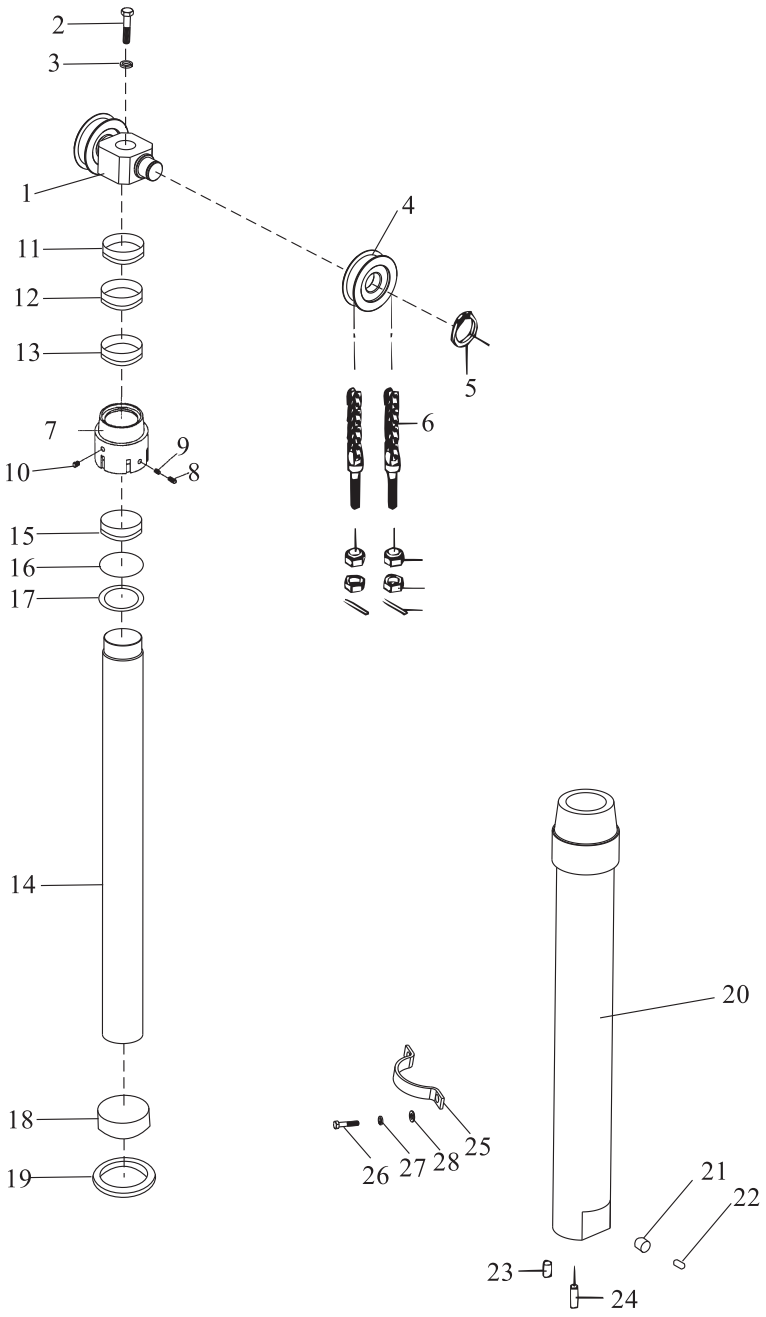


https://truckmanualshub.com/

前起升油缸(三节全自由)
Front Lift Cylinder (Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A30A4-10500	前起升油缸总成 Front lift cylinder ass'y	1	
1	Z30A3-90100	链轮支座 Sheave Seat	1	
2	GB/T5783	螺栓 M16×45 Bolt	1	
3	GB/T93	弹垫16 Washer,lock	1	
4	M30A3-80100	链轮 Sheave	2	
5	GB/T894.1	弹性挡圈40 Snap ring	2	
6	LH1623×N	链条总成 Chain ass'y	2	
7	A30A4-10301	前缸盖 Cap, lift cylinder	1	
8	GB/T80	螺钉M8×8 Screw	1	
9	A30A4-10302	塞子 Plug	1	
10	A30A4-10314	螺塞ZG1/4〃 Plug	1	
11	A30A4-10303	防尘圈85×99×8/11 Dust ring	1	
12	A30A4-10304	挡圈85×100×3 Snap ring	1	
13	A30A4-10305	Yx型密封圈85×100×9 Yx-ring	1	
14	A30A4-10501	柱塞杆总成 Piston rod ass'y	1	
15	A30A4-10307	钢背轴承8540 Guide bushing	1	
16	GB/T1235	O型密封圈110×3.1 O-ring	1	
17	A30A4-10308	挡圈110×105×1.25 Stopper	1	
18	A30A4-10309	支承环100×25×3 Backup ring	1	
19	A30A4-10310	密封环100×92.4×4.3 Seal ring	1	

https://truckmanualshub.com/

前起升油缸(三节全自由)
Front Lift Cylinder (Full Free 3-Stage Mast KZM)

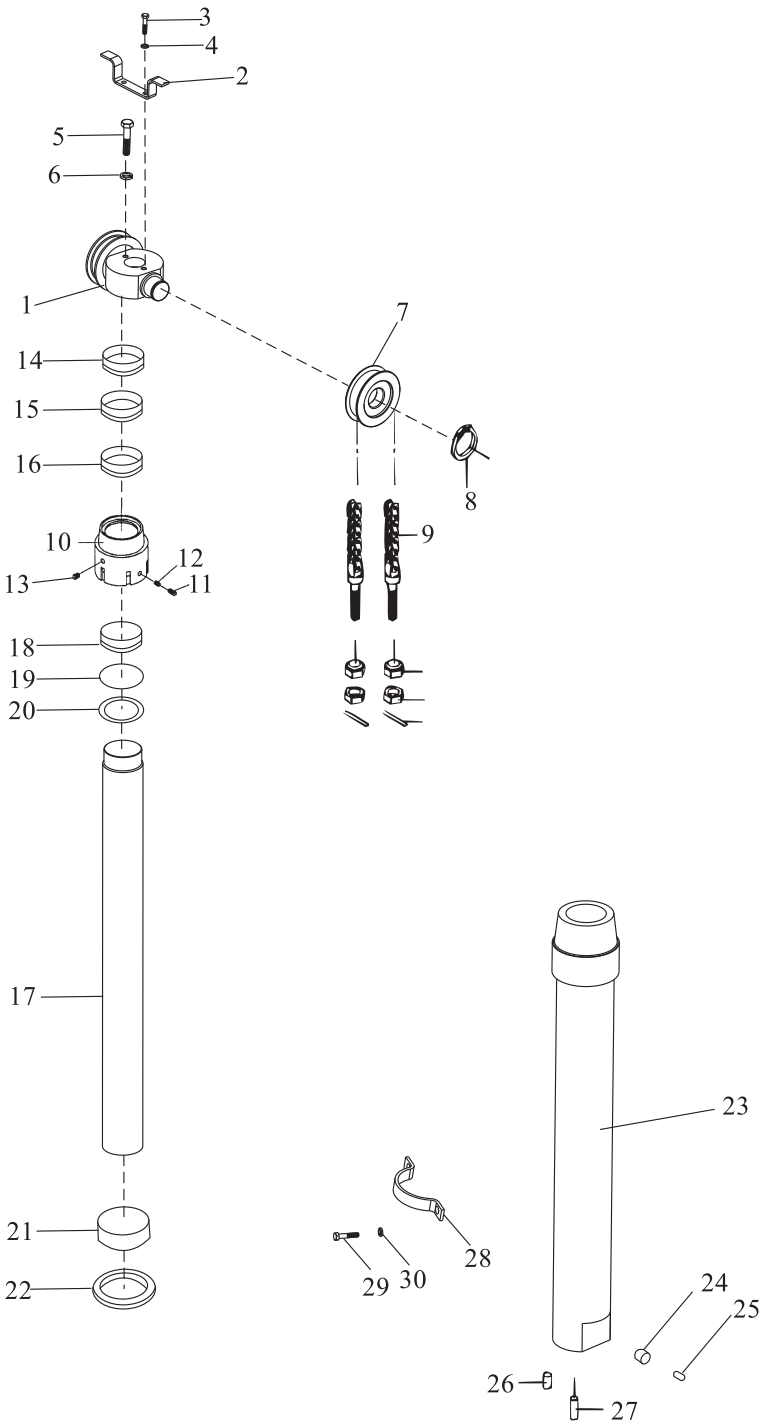


https://truckmanualshub.com/

前起升油缸(三节全自由)
Front Lift Cylinder (Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
20	A30A4-10502	缸体 Cylinder	1	
21	A30A4-10312	滑阀 Spool	1	
22	A30A4-10313	弹簧 Spring	1	
23	GB/T5783	螺栓 M12×1.25×35 Bolt	1	
24	GB/T119.1	销D10×26 Pin	1	
25	Z30A3-90001	油缸卡环 Support	1	
26	GB/T5783	螺栓 M14×30 Bolt	2	
27	GB/T93	弹垫14 Washer,lock	2	
28	GB/T97.1	平垫14 Washer	2	

https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

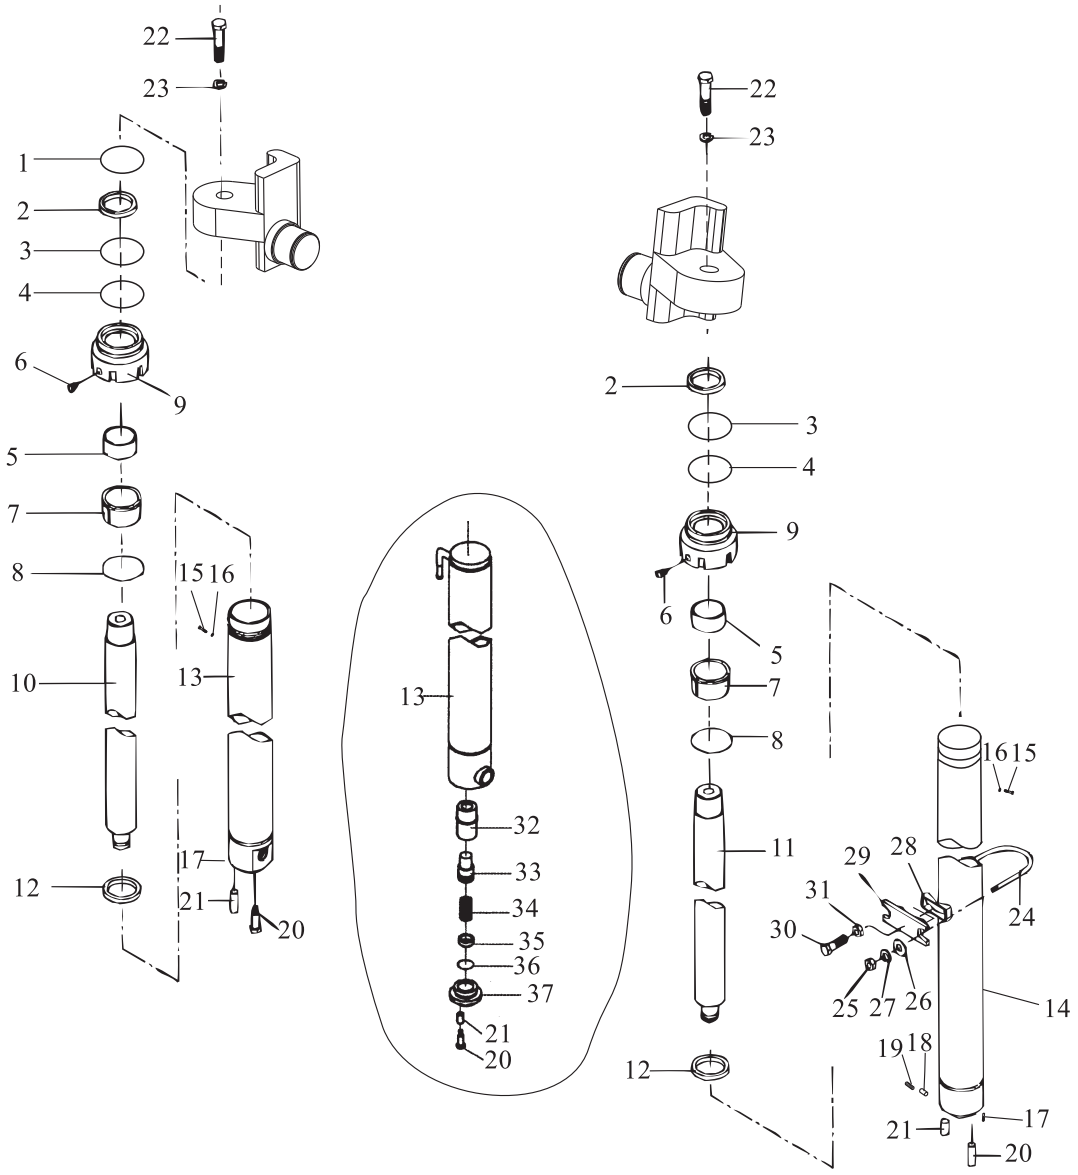


https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A30A4-10400	后起升油缸总成 Rear lift cylinder ass'y	2	3t
-	A35A4-10400	后起升油缸总成 Rear lift cylinder ass'y	2	3.5t
1	GB/T1235	O型密封圈26×2.4 O-ring	1	
2	A30A4-10401	防尘圈40×52×7/10 Dust ring	2	3t
-	A35A4-10401	防尘圈45×57×7/10 Dust ring	2	3.5t
3	A30A4-10402	挡片50×40×3 Ring, back up	2	3t
-	A35A4-10402	挡片45×55×3 Ring, back up	2	3.5t
4	A30A4-10403	轴用密封圈40×50×6 Ring	2	3t
-	A35A4-10403	U型密封圈45×55×6 U-ring	2	3.5t
5	A30A4-10404	钢背轴承4030 Guide bushing	2	3t
-	A35A4-10404	钢背轴承4530 Guide bushing	2	3.5t
6	A30A4-10405	螺塞 Plug	4	
7	GB/T1235	O型密封圈 O-ring	2	3t
-	GB/T1235	O型密封圈68×3.1 O-ring	2	3.5t
8	A30A4-10406	挡片 Ring, back up	2	3t
-	A35A4-10406	挡片62.8×68×1.6 Ring, back up	2	3.5t
9	A30A4-10407	缸盖 Cap, lift cylinder	2	3t
-	A35A4-10407	导向套 Guide,sleeve	2	3.5t
10	A30A4-10408	右活塞杆 Piston rod R.H.	1	3t
-	A35A4-10408	右活塞杆 Piston rod R.H.	1	3.5t
11	A30A4-10409	左活塞杆 Piston rod L.H.	1	3t
-	A35A4-10409	左活塞杆 Piston rod L.H.	1	3.5t

https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

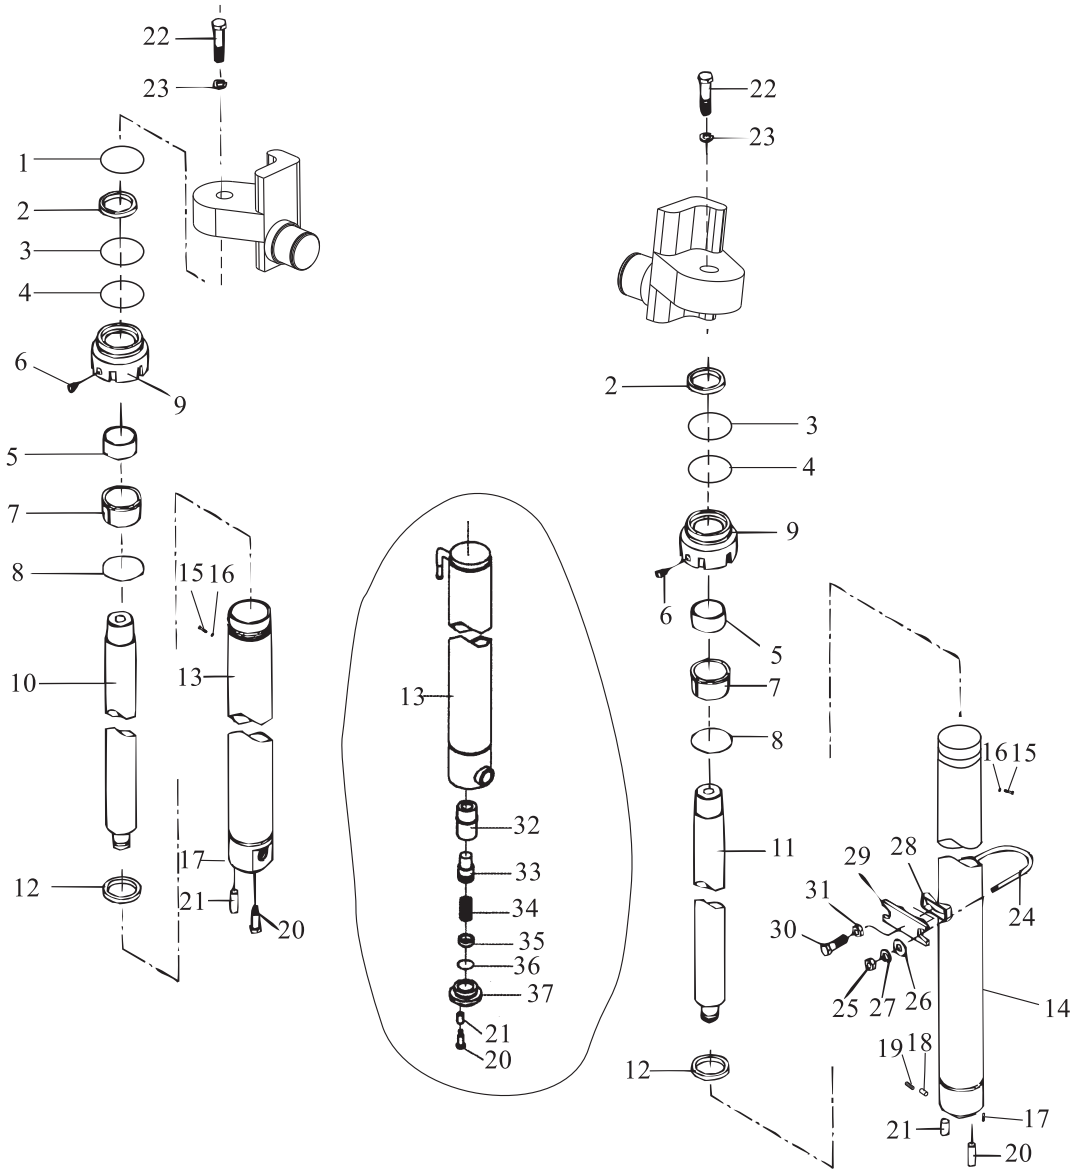


https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
12	A30A4-10410	支承环50×20×2.5 Backup ring	2	3t
-	A35A4-10410	支承环 Backup ring	2	3.5t
13	A30A4-10411	右缸体 Cylinder R.H.	1	3t
-	A35A4-10411	右缸体 Cylinder R.H.	1	3.5t
14	A30A4-10412	左缸体 Cylinder L.H.	1	3t
-	A35A4-10412	左缸体 Cylinder L.H.	1	3.5t
15	GB/T805	螺钉M6×10 Screw	2	3t
-	GB/T80	螺钉M8×8 Screw	2	3.5t
16	A30A4-10413	塞子 Plug	2	
17	GB/T119.1	销D10×25 Pin	2	
18	A30A4-10414	阀芯 Spool	1	3t
19	A30A4-10415	弹簧 Spring	1	3t
20	M30A3-80001	台阶螺栓 Bolt	2	
21	GB/T119.1	销D10×26 Pin	2	
22	GB/T5786	螺栓 M16×1.5×40 Bolt	2	
23	GB/T93	弹垫16 Washer,lock	2	
24	M30A3-80004	U型螺栓 U-Bolt	2	3t
-	M35A3-80001	U型螺栓 U-Bolt	2	3.5t
25	GB/T6173	螺母M10×1.25 Nut	4	
26	GB/T97.1	平垫10 Washer	4	
27	GB/T93	弹垫10 Washer,lock	4	
28	M30A3-80002	调整块 Spacer	2	

https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

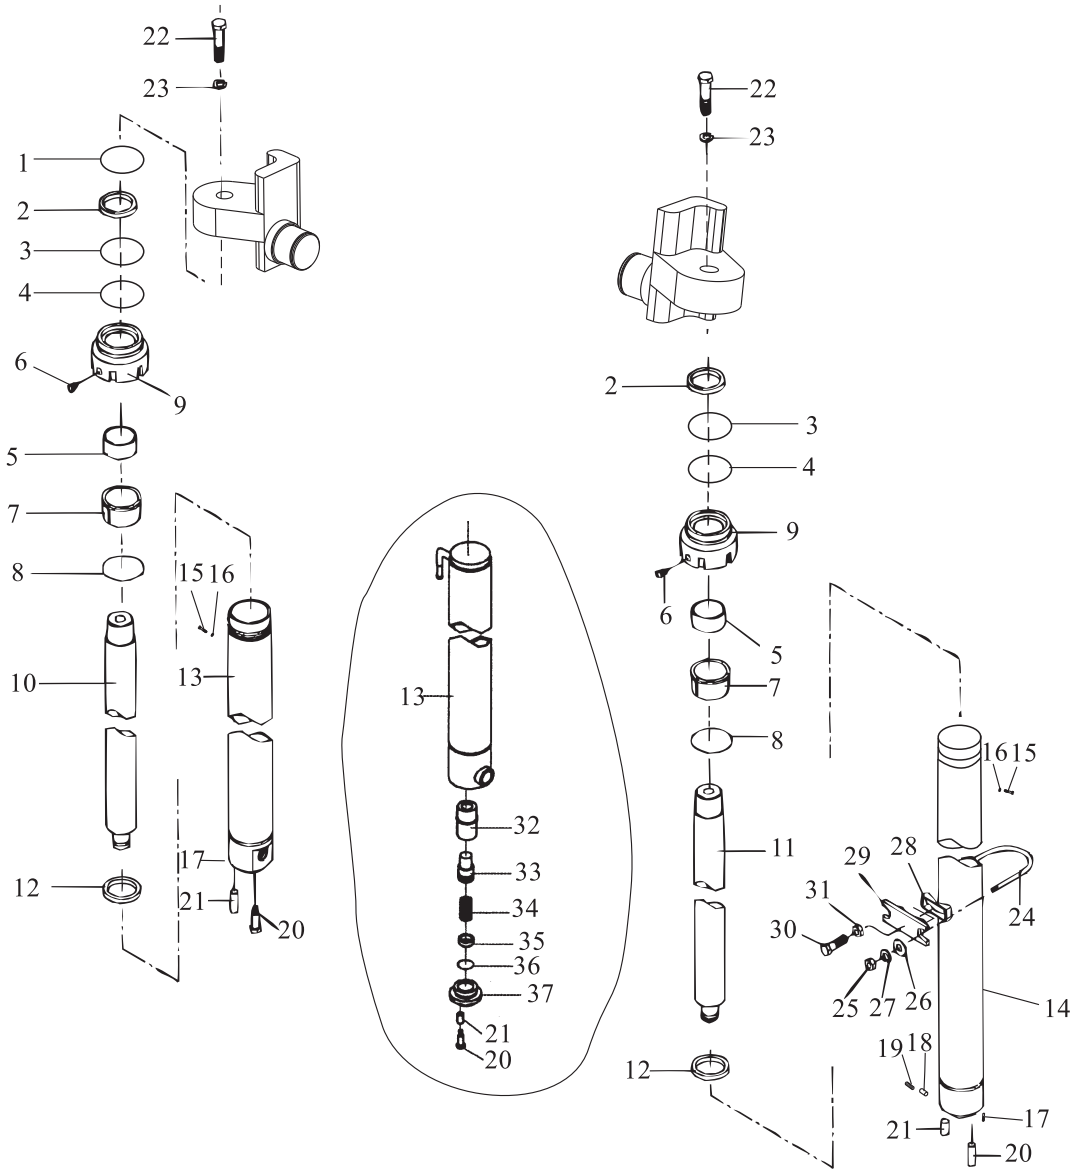


https://truckmanualshub.com/

后起升油缸(二节全自由)
Rear Lift Cylinder (Full Free 2-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
29	M30A3-80003	油缸支撑块 Support	2	
30	GB/T5786	螺栓M12×1.25×50 Bolt	2	
31	GB/T6171	螺母M12×1.25 Nut	2	
32	A35A4-10414	阀套 Sleeve	1	3.5t
33	A35A4-10415	阀芯 Spool	1	3.5t
34	A35A4-10416	弹簧 Spring	1	3.5t
35	A35A4-10417	弹簧座 Seat, spring	1	3.5t
36	GB/T1235	O型密封圈40×3.5 O-ring	1	3.5t
37	A35A4-10418	底座 Seat, valve	1	3.5t

https://truckmanualshub.com/

后起升油缸(三节全自由)
Rear Lift Cylinder (Full Free 3-Stage Mast KZM)

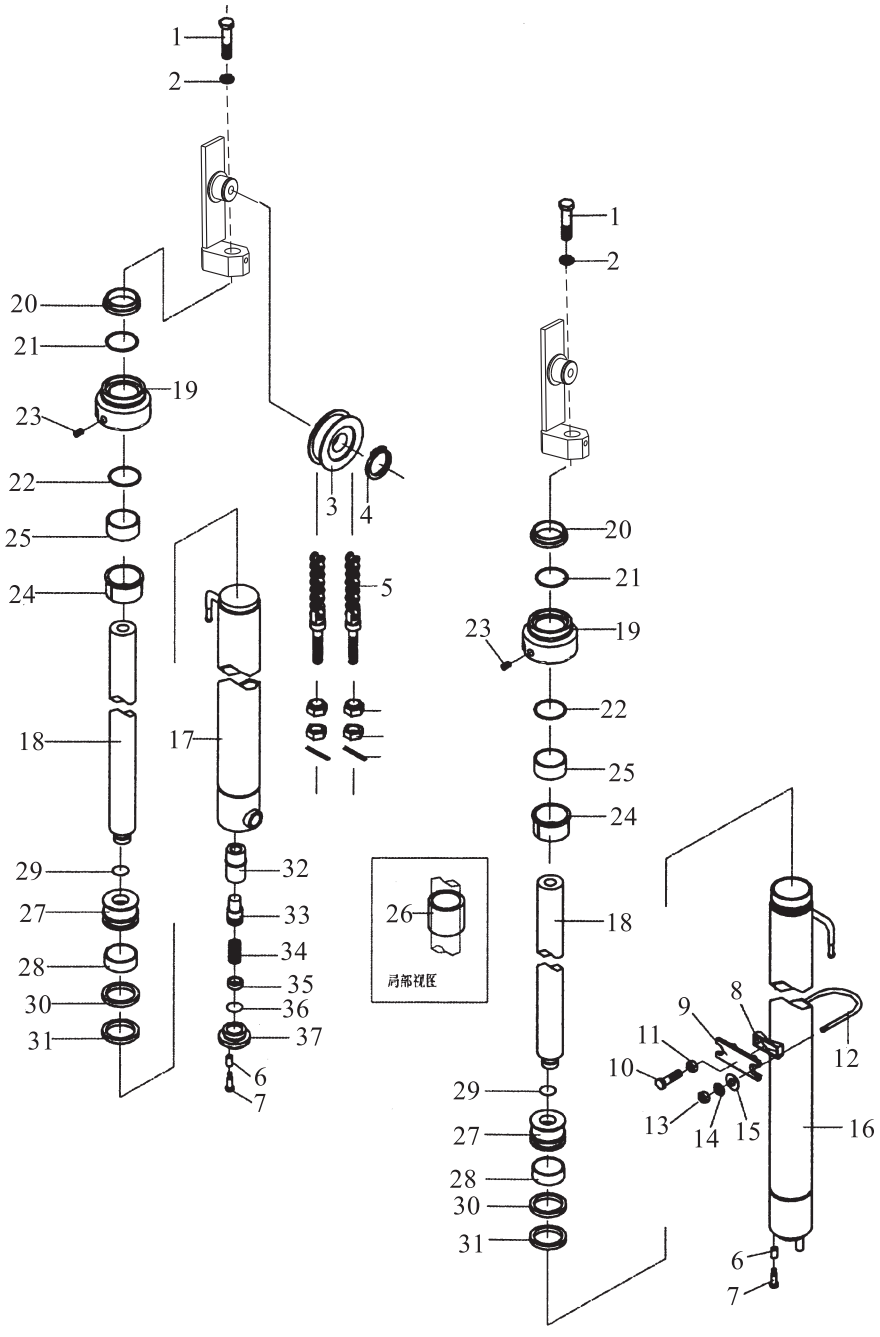


https://truckmanualshub.com/

后起升油缸(三节全自由)
Rear Lift Cylinder (Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
A	A30A4-10600	后起升油缸总成 Rear lift cylinder ass'y	1	
1	GB/T5786	螺栓 M10×1.5×30 Bolt	2	
2	GB/T93	弹垫10 Washer,lock	2	
3	S30F3-80100	链轮 Sheave	2	
4	GB/T894.1	弹性挡圈40 Snap ring	2	
5	LH1623×N	链条总成 Chain ass'y	2	
6	GB/T93	弹垫10 Washer,lock	4	
7	GB/T5786	螺栓M10×1.25×30 Bolt	2	
8	M30A3-80002	调整块 Spacer	2	
9	M30A3-80003	油缸支撑块 Support	2	
10	GB/T5786	螺栓M12×1.25×50 Bolt	2	
11	GB/T6171	螺母M12×1.25 Nut	2	
12	M30A3-80004	U型螺栓 U-Bolt	2	
13	GB/T6173	螺母M10×1.25 Nut	4	
14	GB/T97.1	平垫10 Washer	4	
15	GB/T93	弹垫10 Washer,lock	4	
16	A30A4-10601	左缸体 Cylinder L.H.	1	
17	A30A4-10602	右缸体 Cylinder R.H.	1	
18	A30A4-10603	活塞杆 Piston rod	2	
19	A30A4-10604	导向套 Guide,Sleeve	2	

https://truckmanualshub.com/

后起升油缸(三节全自由)
Rear Lift Cylinder (Full Free 3-Stage Mast KZM)

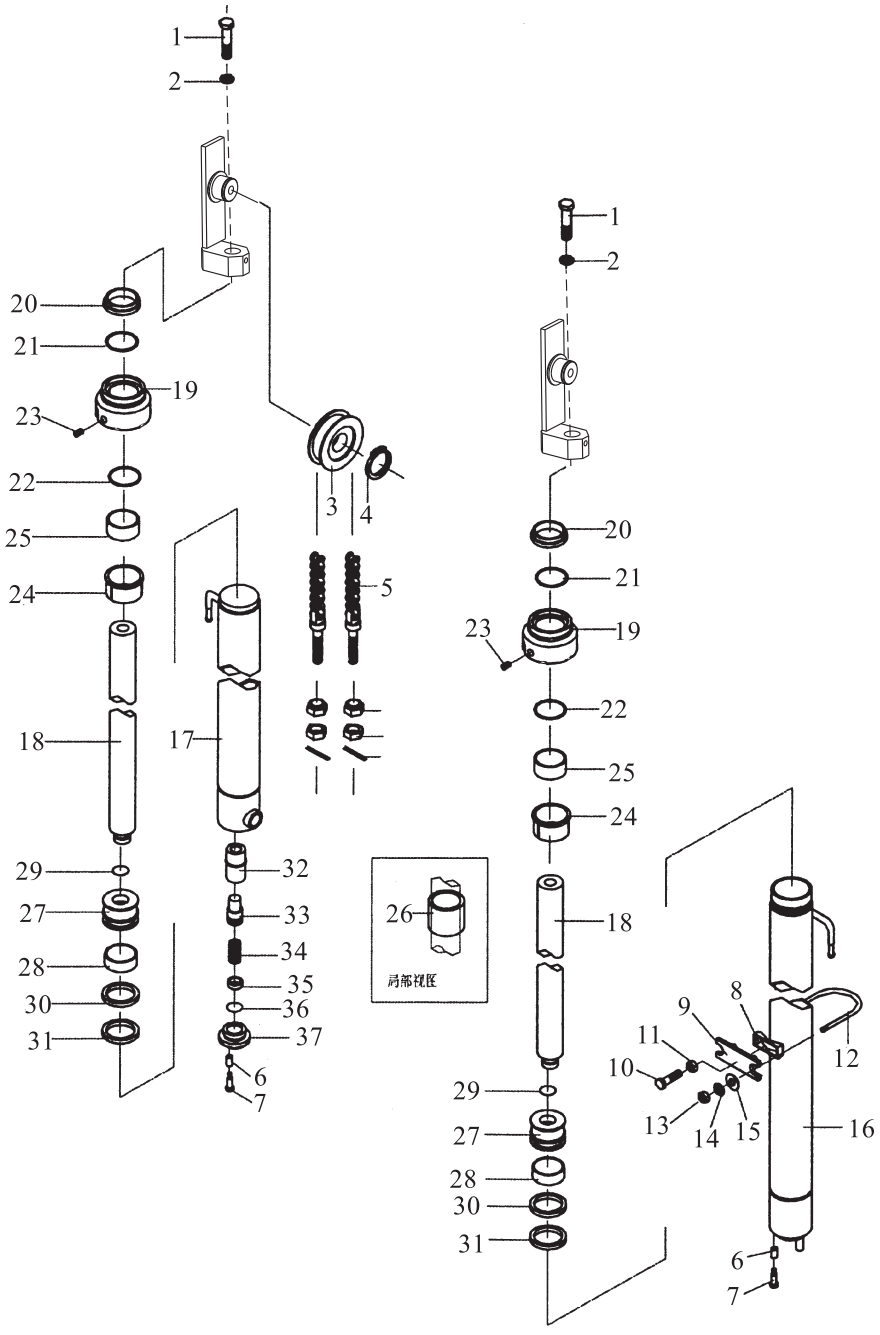


https://truckmanualshub.com/

后起升油缸(三节全自由)
Rear Lift Cylinder (Full Free 3-Stage Mast KZM)

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
20	A30A4-10101	防尘圈45×57×7/10 Dust ring	2	
21	A30A4-10102	轴用密封圈45×55×6 Ring	2	
22	GB/T1235	O型密封圈55.6×2.4 O-ring	2	
23	A30A4-10104	塞子 Plug	2	
24	A30A4-10110	衬套 Sleeve	2	
25	A30A4-10103	钢背轴承4530 Guide bushing	2	
26	A30A4-10605	调整套 Spacer	2	
27	A30A4-10113	活塞 Piston	2	
28	A30A4-10105	支承环56×20×2.5 Wearing	2	
29	A30A4-10108	钢丝挡圈 Snap ring	2	
30	A30A4-10106	挡片56×45×3 Ring, back up	2	
31	A30A4-10107	孔用密封圈56×45×7 Ring	2	
32	A30A4-10606	阀套 Sleeve	1	
33	A30A4-10607	阀芯 Spool	1	
34	A30A4-10608	弹簧 Spring	1	
35	A30A4-10609	弹簧座 Seat, spring	1	
36	GB/T1235	O型密封圈40×3.5 O-ring	1	
37	A30A4-10610	底座 Seat, valve	1	

https://truckmanualshub.com/

倾斜油缸
Tilt cylinder

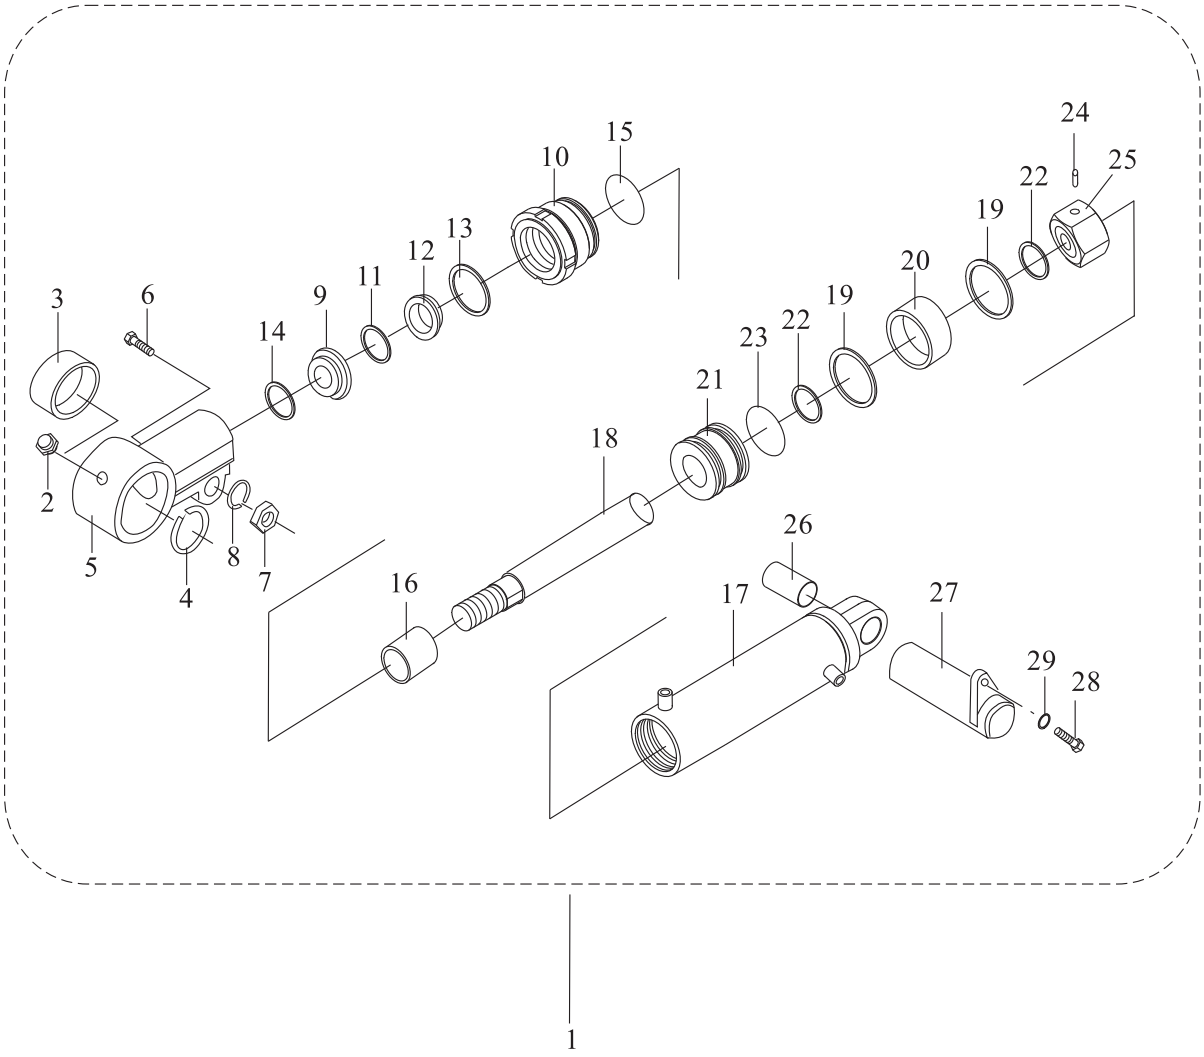


https://truckmanualshub.com/

倾斜油缸
Tilt cylinder

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	A30F4-10200	倾斜油缸总成 Tilt cylinder ass'y	2	3t
-	A35B4-10200	倾斜油缸总成 Tilt cylinder ass'y	2	3.5t
2	GB/T1152	油咀M10×1 Nipple grease	2	
3	GB/T304.5	关节轴承GE30ES Bushing	2	
4	GB/T893.1	孔用挡圈47 Ring,snap	2	
5	A30F4-10201	耳环 Ear ring	2	
6	GB/T5786	螺栓M14×1.5×55 Bolt	2	
7	GB/T6171	螺母M14×1.5 Nut	2	
8	GB/T93	弹垫14 Washer,lock	2	
9	A30F4-10202	钢架防尘圈32×48×8×10 Seal,dust	2	
10	A30F4-10203	缸盖 Cap, lift cylinder	2	
11	A30F4-10204	挡圈32×48×3 Ring,snap	2	
12	GB/T893.1	孔用挡圈52 Ring,snap	2	
13	A30F4-10205	挡圈65.2×70×1.5 Ring,snap	2	
14	A30F4-10206	挡片 Ring,snap	2	
15	GB/T1235	O型密封圈70×3.1 O-ring	2	
16	A30F4-10207	钢背轴承36×32×25 Bushing	2	
17	A30F4-10208	缸体 Tube,cylinder	2	3t
-	A35B4-10201	缸体 Tube,cylinder	2	3.5t
18	A30F4-10209	活塞杆 piston rod	2	3t
-	A35B4-10202	活塞杆 piston rod	2	3.5t

https://truckmanualshub.com/

倾斜油缸
Tilt cylinder

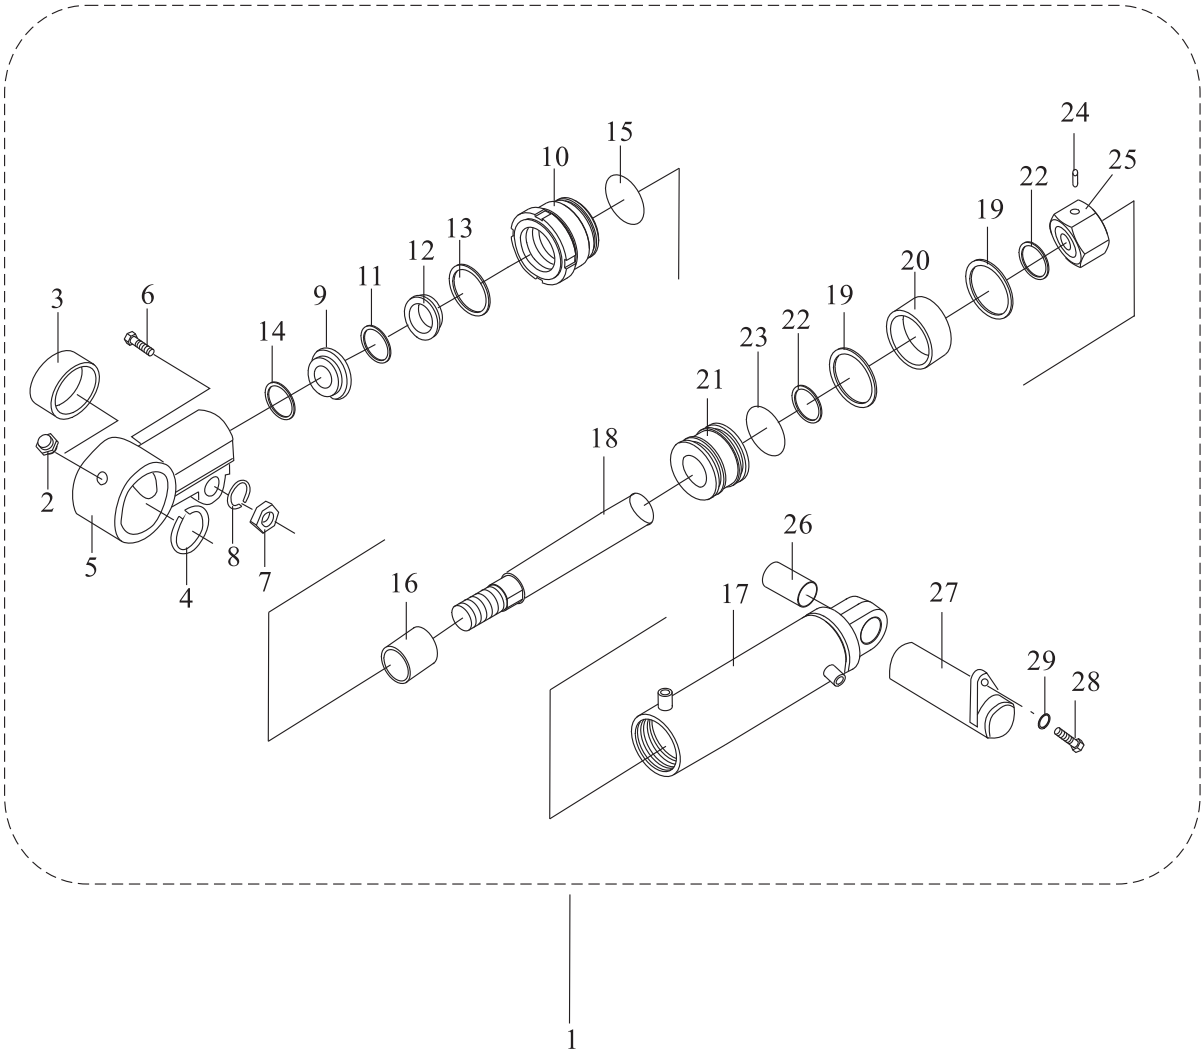

https://truckmanualshub.com/

倾斜油缸
Tilt cylinder


序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
19	A30F4-10210	孔用密封圈70×60×6 Ring	4	
20	A30F4-10211	支承环70×15.7×2.5 Wearing	2	
21	A30F4-10212	活塞 Piston	2	
22	A30F4-10213	挡圈70×60×1.5 Ring,snap	4	
23	GB/T1235	O型密封圈24×2.4 O-ring	2	
24	GB/T91	开口销5×50 Pin	2	
25	GB/T6181	开槽螺母M24×2 Nut	2	
26	A30F4-10214	钢背轴承 Guide bushing	2	
27	M30F3-00200	倾斜油缸销轴 Pin	2	
28	GB/T5786	螺栓M10×1.25×20 Bolt	2	
29	GB/T93	弹垫10 Washer,lock	2	


https://truckmanualshub.com/


八、标牌
SCUTCHEON


https://truckmanualshub.com/


标牌
Decal

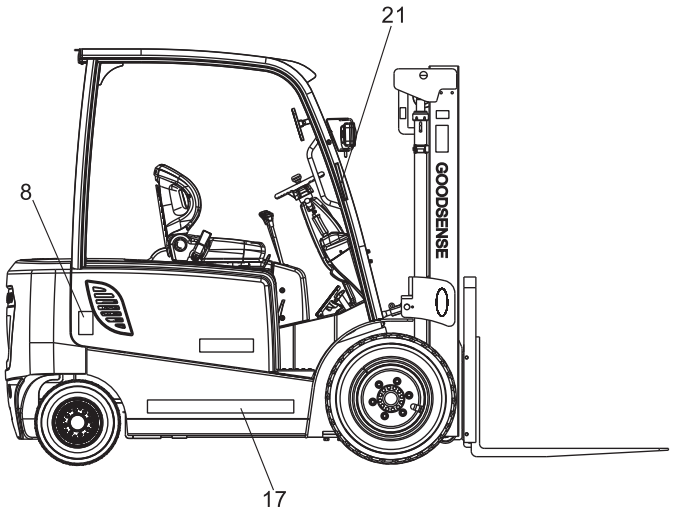

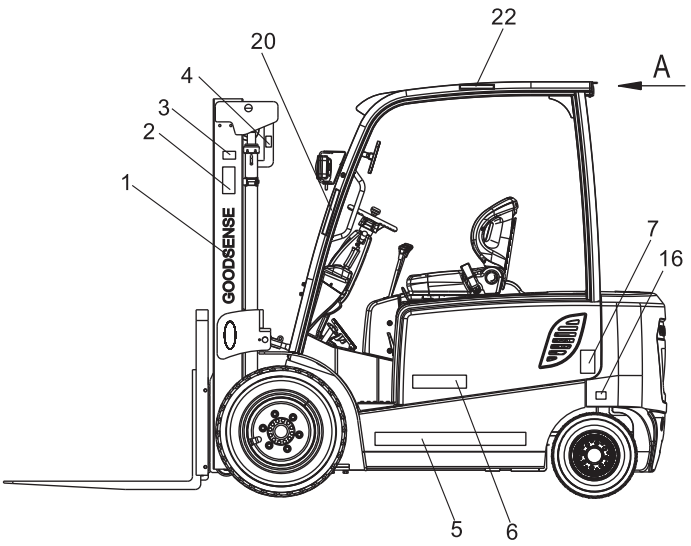

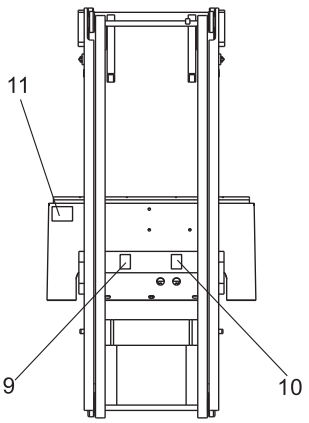

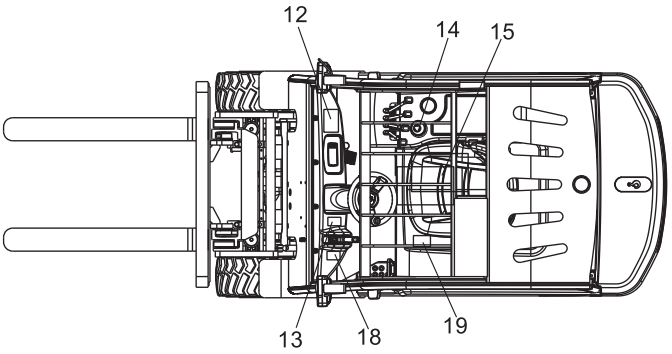

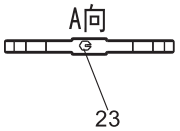


https://truckmanualshub.com/


标牌
Decal


序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
1	GCI0170	“吉鑫祥”字样 Decal	2	国内用homeland
-	GCI0040	“GOODSENSE”（中） Decal	2	国外用go abroad
2	GCI0001	安全标志标牌 Decal, safety	2	国内用homeland
-	GCIY053	安全标志标牌 Decal, safety	2	国外用go abroad
3	GCI0022	CE标牌 Decal	2	国外用go abroad
4	GCI0014	起吊标牌 Decal,sling	2	国内用homeland
-	GCIY066	起吊标牌 Decal,sling	2	国外用go abroad
5	GCIY281	GOODSENSE车身标牌(左) Decal	1	
6	GCI0476	AC标牌 Decal	2	
-	GCI0030	30字样 Decal	2	3t
-	GCI0031	35字样 Decal	2	3.5t
7	GCI0005	启动前检查要领 Decal,caution	1	国内用homeland
-	GCIY057	启动前检查要领 Decal,caution	1	国外用go abroad
8	GCI0013	轮胎安全标牌 Decal,tyre safety	1	国内用homeland
-	GCIY065	轮胎安全标牌 Decal,tyre safety	1	国外用go abroad
9	GCI0016	禁止进入门架后空间Decal, padlod mast space	1	国内用homeland
-	GCIY068	禁止进入门架后空间Decal, padlod mast space	1	国外用go abroad
10	GCI0017	注意伤手 Decal,notice thumb hand	1	国内用homeland
-	GCIY069	注意伤手 Decal,notice thumb hand	1	国外用go abroad
11	GCI0189	蓄电池平衡重式叉车铭牌 Name plate	1	国内用homeland
-	GCIY093	蓄电池平衡重式叉车铭牌 Name plate	1	国外用go abroad
12	GCI0048	负荷曲线标牌3t Decal,Iubrication chart	1	国内用homeland
-	GCI0050	负荷曲线标牌3.5t Decal,Iubrication chart	1	国内用homeland


https://truckmanualshub.com/


标牌
Decal

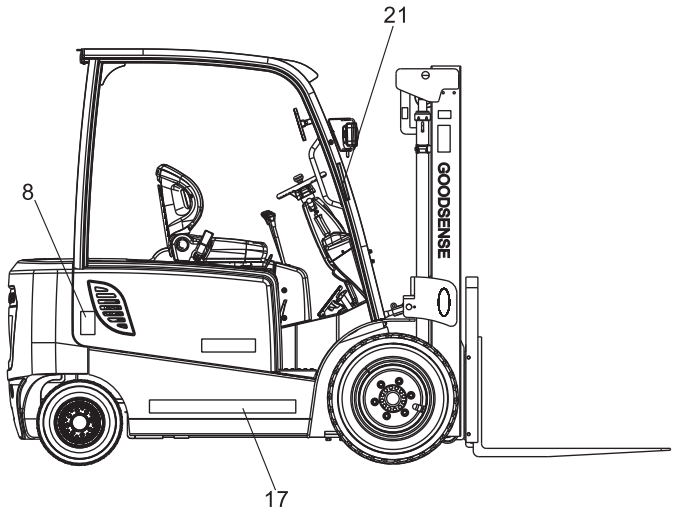

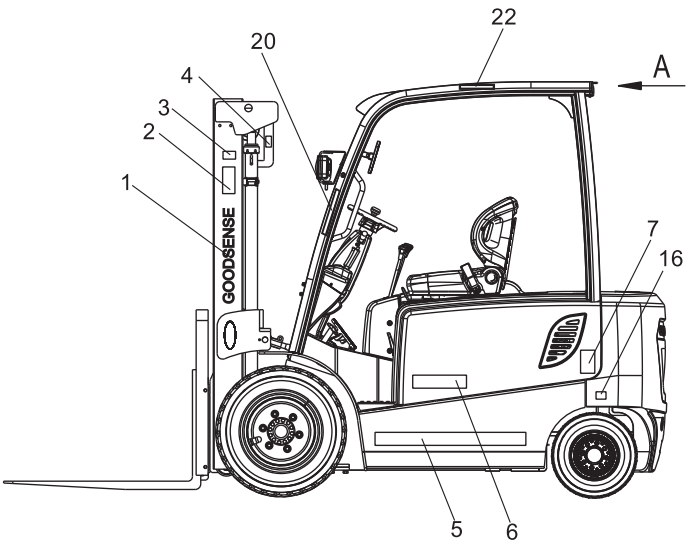

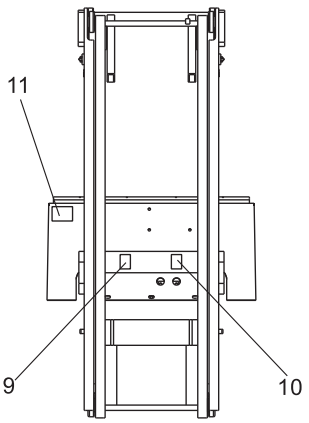

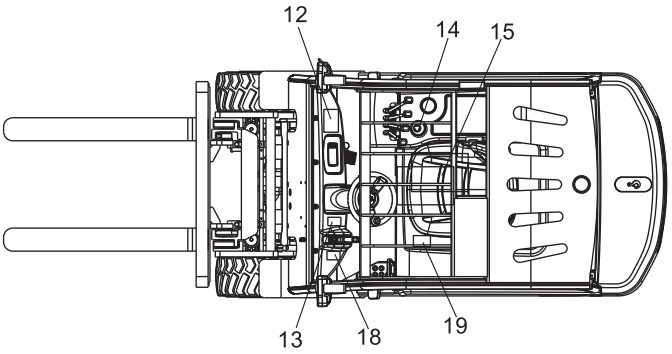

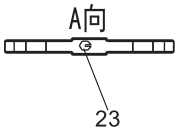

https://truckmanualshub.com/

标牌
Decal

序号 Item	零件号 Part No	零部件名称 Description	数量 Q'ty	备注 Remark
-	GCIY080	负荷曲线标牌3t Decal,Iubrication chart	1	国内用homeland
-	GCIY082	负荷曲线标牌3.5t Decal,Iubrication chart	1	国外用go abroad
13	GCI0412	手刹标识 Decal	1	国内用homeland
-	GCIY411	手刹标识 Decal	1	国外用go abroad
14	GCIY279	紧急停车开关标识 Decal	1	
15	GCI0003	润滑系统图标牌 Decal,Iubrication chart	1	国内用homeland
-	GCIY055	润滑系统图标牌 Decal,Iubrication chart	1	国外用go abroad
16	GCIY408	配重起吊标识 Weight lifting logo	2	
17	GCIY281	GOODSENSE车身标牌(右) Decal	1	
18	GCI0407	下车拉紧手刹Decal,Parking brake adjustment	1	国内用homeland
-	GCIY275	下车拉紧手刹Decal,Parking brake adjustment	1	国外用go abroad
19	GCI0409	禁止载人标牌 Ban manned sign	1	国内用homeland
-	GCIY410	禁止载人标牌 Ban manned sign	1	国外用go abroad
20	GCIY273	阅读说明书警告标志 Read instructions warning	1	
21	GCIY272	系安全带警告标识 Fasten seat belts warning logo	1	
22	GCI0122	警告标识 Warning logo	1	国内用homeland
-	GCIY124	警告标识 Warning logo	1	国外用go abroad
23	GCI0099	Logo(小)标牌 Decal	1	

https://truckmanualshub.com/

浙江吉鑫祥叉车制造有限公司
ZHEJIANG GOODSENSE FORKLIFT CO.,LTD
地址:台州经济开发区滨海工业区海昌路1188号
Add:Haichang Road 1188#, Binhai Industrial Zone
Taizhou, Zhejiang, China
电话(Tel):0576-82698896 0086-576-82698897
传真(Fax):0576-82698899 0086-576-82707339
邮箱(E-mail):sales@goodsenseforklift.com
网址Http://www.goodsenseforklift.com
服务热线(Free Service Hot line):400-8802020

NO:A032