https://truckmanualshub.com/

ZAPI SMART CONSOLE Introduction for WRT60

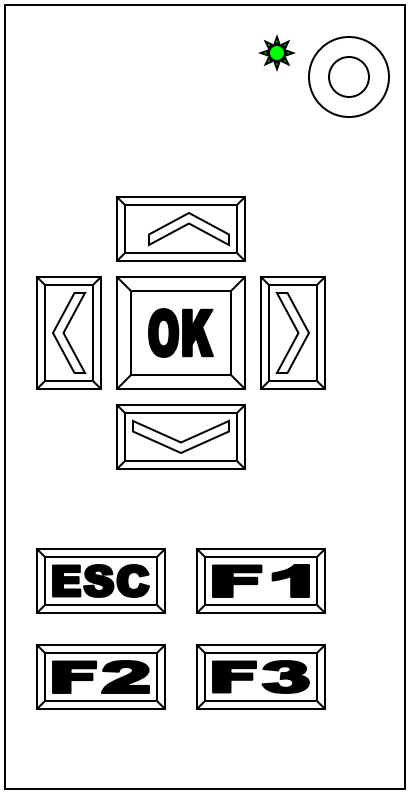

Location of CAN Connection

https://truckmanualshub.com/

Traction VACC

Turn on ZAPI Handset

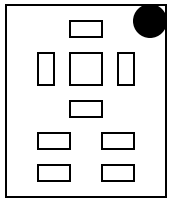

Push and hold the power button for 3s

The Display will show:

Cons AFG ZP021*

Press ^ or v button until CAN CONSOLE shows on the display

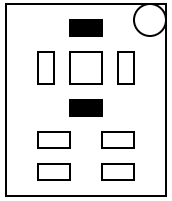

The Display will show :

Cons AFG ZP021*
CAN CONSOLE

Press OK to go into the CANCONSOLE Menu

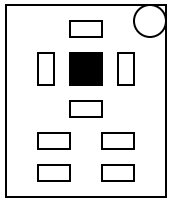

https://truckmanualshub.com/

The Display will show:

CANCONSOLE
SELECT NODE

Push 》, or 《
To select Node 2

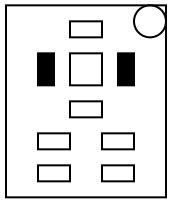

The Display will show:

SELECT NODE
NODE 2

Press OK to go into the
Traction controller

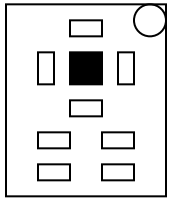

The Display will show:

AD0T2B WF6EP1.11
24V 320A 0H

Press OK to go into the
Main Menu

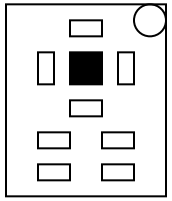

The Display will show:

Main Menu

https://truckmanualshub.com/

Press ^ or v button until
PROGRAM VACC shows on the display

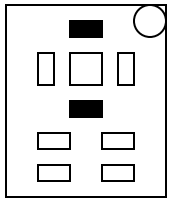

MAIN MENU
PROGRAM VACC

The Display will show:

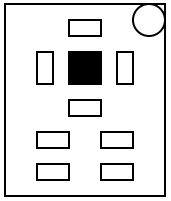

Press ENTER to go into the PROGRAM VACC function

VACC SETTING
CURRENT VALUE

The Display will show the minimum and maximum values of throttle voltage. Both directions are shown

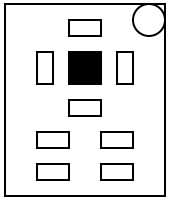

Press ENTER to clear these values.
Display will show 0.0

FORWARD x.xV x.xV

Select Forward Direction

https://truckmanualshub.com/

Slowly depress the accelerator to its maximum value. The new minimum and maximum voltages will be displayed on the Console.

Select the Reverse Direction and repeat the item above

BACKWARD x.xV x.xV

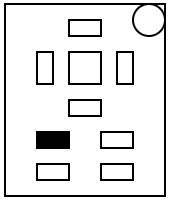

When finished , press ESC

The Display will ask : APPLY CHANGES ?

APPLY CHANGES?
YES= OK NO=ESC

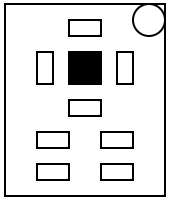

Press OK for yes

https://truckmanualshub.com/

When finished, the Console shows :

Main Menu

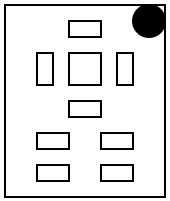

Press and hold power button 3s to turn off the Console