www.truck-freeworkshop.com/forklift/clark/

부품 매뉴얼
PARTS MANUAL

C 15/18/20s D

SERIAL NUMBER : P152D - XXXX - 9676 KF (Tier3)

부품 청구시 항상 장비의 SERIAL NO. 도 함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER WHEN ORDERING PARTS.

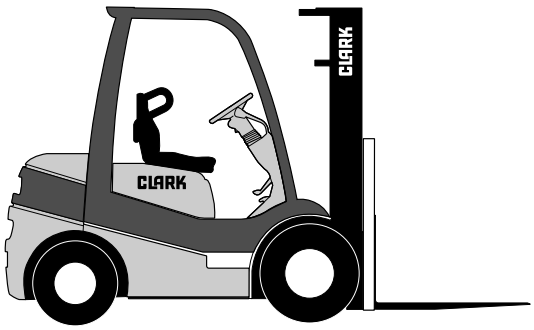

Part No. 8035812
Jan. 2013

CLARK
THE FORKLIFT

(본사) 경기도 부천시 오정구 오정동 202-1
(Head office) 202-1 Ojung-Dong, Ojung-Gu, Bucheon-city, Kyunggi-do, Korea
(공장) 경남 창원시 웅남동 40-1
(Factory) 40-1 Ungnam-dong, Changwon-city, Kyungnam, Korea

www.truck-freeworkshop.com/forklift/clark/

www.truck-freeworkshop.com/forklift/clark/

CLARK
THE FORKLIFT

Index

00-420 CAMSHAFT
캠 축

00-422 CRANKSHAFT
크랭크 축

00-546 ENGINE MOUNTING
엔진 어셈블리

00-566 CRANKCASE
크랭크케이스

00-567 GEAR COVER
기어 커버

00-568 CYLINDER HEAD
실린더 헤드

00-600 GOVERNOR
가버너

00-627 GASKETS
가스킷

01-083 FLYWHEEL HOUSING
플라이휠 하우징

01-142 FAN GUARD MOUNTING
팬 가드 마운팅

01-298 LUBRICATION SYSTEM
윤활 오일 시스템

01-300 WATER PUMP MOUNTING
워터 펌프 마운팅

01-359 COOLING SYSTEM
냉각 장치

02-154 NON PRE-CLEANER GP
논-프리크리너 그룹

02-198 ACCELERATOR LINKAGE
악셀레이터 링케이지

02-287 FUEL INJECTION PUMP
연료 분사 펌프

02-296 FUEL INJECTION LINE
연료 분사 라인

02-459 FUEL LINE
연료 라인

02-474 AIR CLEANER ASSEMBLY
에어 크리너 어셈블리

02-478 INDICATOR LIGHT INSTALLATION
지시등 조립그룹

02-489 FUEL CAP WITH KEY
연료캡 - 키포함

03-149 LICENSE PLATE MOUNTING
번호판 마운팅

03-188 EXHAUST MANIFOLD
배기 매니폴드

03-248 FUEL SYSTEM
연료 시스템

03-281 INTAKE SYSTEM
흡기 시스템 (듀얼)

03-369 EXHAUST SYSTEM
배기 장치

03-371 EXHAUST SYSTEM-VERTICAL
배기 장치 (수직형)

03-531 INTAKE MANIFOLD
흡기 매니폴드

03-558 SWING DOWN BRACKET ASSEMBLY
*

03-559 SWING DOWN BRACKET ASSEMBLY
*

03-581 SWITCH INSTALLATION
스위치 조립그룹

03-641 SWING DOWN LPG TANK MTG
스윙 다운 LPG 탱크 조립그룹

05-043 TRANSMISSION PUMP & HYDRAULICS
트랜스미션 펌프 & 유압

05-044 DIFFERENTIAL & DRIVE AXLE
차동장치 및 드라이브 액슬

06-113 TRANSMISSION CLUTCH PACK
트랜스미션 클러치 팩

06-114 CONTROL VALVE ASSEMBLY
컨트롤 밸브 어셈블리

07-049 TRANSAXLE MOUNTING
트랜스액슬 마운팅

10-097 TRANS COOLING LINES
트랜스미션 쿨링 라인

11-049 STARTER MOTOR
시동 모터

12-011 ALTERNATOR MOUNTING
알터네이터 어셈블리

12-251 BATTERY MOUNTING
베터리 어셈블리

12-257 ALTERNATOR
알터네이터

13-033 KEY & DIRECTIONAL SWITCH INSTALLATION
키 & 다이렉트스위치 조립그룹

13-162 STROBE LIGHT MOUNTING
경광등 어셈블리

13-182 STROBE LIGHT
경광등

13-183 STROBE LIGHT MOUNTING
경광등 어셈블리

13-228 BACK-UP ALARM INSTALLATION
백-업 알람 조립그룹

13-230 HEAD & T/SIGNAL LIGHT INSTALLATION
헤드 & 턴시그널라이트 조립그룹

13-236 COMBINATION & REAR WORK LIGHT INSTALLATION
컴비네이션 & 후방작업등 조립그룹

13-312 SOLENOID VALVE ELECTRIC MOUNTING
솔레노이드 벨브 전기 마운팅

13-336 STATIC ELECTRICITY DISCHARGER
전압 방전기

13-338 HEAD & T/SIGNAL LIGHT INSTALLATION
헤드 & 턴시그널라이트 조립그룹

14-428 ELECTRICAL WIRING (INSTRUMENT)
*

14-436 ELECTRICAL WIRING (MAIN)
*

14-577 LPS CONSTRUCTION
LPS 구성품

15-074 DELAY TIMER MOUNTING
타임 딜레이 마운팅

22-009 BRAKE ASSEMBLY LH
브레이크 어셈블리 - 좌

22-010 BRAKE ASSEMBLY RH
브레이크 어셈블리 - 우

22-013 DRIVE WHEEL & TIRE MOUNTING
드라이브휠 & 타이어 마운팅

22-014 STEER WHEEL & TIRE MOUNTING
스티어휠 & 타이어 마운팅

22-024 DRIVE WHEEL & TIRE (SOLID TYPE)
*

22-025 STEER WHEEL & TIRE (SOLID TYPE)
*

22-041 DRIVE WHEEL AND TIRE
드라이브 휠 및 타이어

22-042 STEER WHEEL & TIRE
스티어링 휠 & 타이어

23-242 BRAKE MASTER CYLINDER
브레이크 마스터 실린더

23-390 BRAKE & INCHING LINES
브레이크 및 인칭라인

23-392 BRAKE LINES
브레이크 라인

23-545 PARKING BRAKE LINKAGE
주차 브레이크 링케이지

25-050 STEER COLUMN & GEAR MOUNTING
*

25-076 STEERING UNIT
스티어링 유니트

25-144 STEERING COLUMN
스티어링 칼럼

25-250 STEERING WHEEL MOUNTING
*

www.truck-freeworkshop.com/forklift/clark/

26-030 HYDRAULIC RETURN LINES
유압 리턴 라인

26-218 STEER LINES
스티어링 라인

26-219 STEER AXLE MOUNTING
스티어링 액슬 마운팅

26-255 STEERING AXLE
스티어링 액슬

26-256 STEERING CYLINDER
스티어링 실린더

29-140 HYDRAULIC SUMP FILTER
유압 섬프 필터

29-230 HYDRAULIC PUMP MOUNTING
유압 펌프 마운팅

29-252 HYDRAULIC SUMP
유압 섬프

30-206 MAIN CONTROL VALVE 2-SPOOL
메인 컨트롤 밸브 - 2 스풀

30-207 MAIN CONTROL VALVE 3-SPOOL
메인 컨트롤 밸브 - 3 스풀

30-208 MAIN CONTROL VALVE 4-SPOOL
메인 컨트롤 밸브 - 4 스풀

30-209 HYDRAULIC VALVE MOUNTING (2SPOOL)
유압벨브 마운팅 (2스풀)

30-210 HYDRAULIC VALVE MOUNTING (3SPOOL)
유압벨브 마운팅 (3스풀)

30-211 HYDRAULIC VALVE MOUNTING (4SPOOL)
유압벨브 마운팅 (4스풀)

30-370 HYDRAULIC VALVE MOUNTING (4SPOOL)
유압벨브 마운팅 (4스풀)

30-513 HYDRAULIC CONTROL VALVE-3 SPOOL
유압 컨트롤 밸브 - 3 스풀

30-567 MAIN CONTROL VALVE 2-SPOOL
메인 컨트롤 밸브 - 2 스풀

30-568 MAIN CONTROL VALVE 3-SPOOL
메인 컨트롤 밸브 - 3 스풀

30-569 MAIN CONTROL VALVE 4-SPOOL
메인 컨트롤 밸브 - 4 스풀

30-604 HYDRAULIC CONTROL VALVE-2 SPOOL
유압 컨트롤 밸브 - 2 스풀

30-605 HYDRAULIC CONTROL VALVE-3 SPOOL
유압 컨트롤 밸브 - 3 스풀

30-606 HYDRAULIC CONTROL VALVE-4 SPOOL
유압 컨트롤 밸브 - 4 스풀

31-128 HYDRAULIC LIFT & TILT LINES
유압 리프트 & 틸트 라인

31-130 TILT LIMIT WITH OVERRIDE
틸트 제한해제

31-222 HYDRAULIC RETURN LINES
유압 리턴 라인

31-323 HYDRAULIC SUPPLY LINES
유압 공급 라인

32-124 TILT CYLINDER
틸트 실린더

32-147 TILT CYLINDER MOUNTING
틸트 실린더 어셈블리

32-167 TILT AMOUNT GROUP
틸트 어마운트 그룹

32-850 ACCUMULATOR
어큐물레이터

33-014 SOLENOID VALVE
솔레노이드 밸브

33-028 CLAMP LEVER LOCK SYSTEM
*

33-069 RELIEF VALVE ASSEMBLY
릴리프 밸브 어셈블리

33-130 SELECTOR SOLENOID VALVE
셀렉터 솔레노이드 밸브

34-044 LOAD BACK REST
로드 백 레스트

34-050 UPRIGHT MOUNTING
업라이트 마운팅

34-109 CARRIAGE ASSEMBLY
캐리지 어셈블리

37-003 OVERHEAD GUARD COVER
오버헤드가드 커버

37-050 REAR WIPER INSTALLATION
리어 와이퍼 조립그룹

37-054 CAB DOOR SASH ASSEMBLY
*

37-056 ENCLOSED CAB
캡 (박스형)

37-076 BACK MIRROR
백미러

37-082 OVERHEAD GUARD MOUNTING
오버헤드가드 마운팅

37-124 SEAT ARMREST ASSEMBLY
아암레스트 어셈블리

38-221 FRAME & COUNTERWEIGHT
프레임 & 카운터웨이트

38-270 FRAME TANK BOTTOM PLUG
프레임 탱크 하단 플러그

39-012 LEAD WIRE GROUND
접지선

39-235 ELECTRICAL COMPONENTS (CAB)
*

39-510 OVERHEAD GUARD MOUNTING
오버헤드가드 마운팅

39-514 SEAT MOUNTING
시트 마운팅

39-519 LOAD BACK REST
로드 백 레스트

39-547 LOAD BACK REST
로드 백 레스트

39-585 SEAT ASSEMBLY (SUSPENSION)
시트 어셈블리

39-586 SEAT ASSEMBLY (STATIC)
시트 어셈블리

39-597 CAB MOUNTING
캐빈 마운팅

39-626 ENCLOSED CAB
캡 (박스형)

39-640 SPONGE MOUNTING
스폰지 마운팅

39-646 COWL MOUNTING
카울 마운팅

39-661 SEAT ASSEMBLY
시트 어셈블리

39-674 FLOOR PLATE MOUNTING
플로어 플레이트 마운팅

39-784 SHEET METAL & TRIM
시트 메탈 & 트림

39-829 SEAT MOUNTING
시트 어셈블리

39-831 ENCLOSED CAB
캡 (박스형)

39-834 SEAT ASSEMBLY (SUSPENSION)
시트 어셈블리

39-969 POD INSTALLATION
파드 조립그룹

39-978 HOOD MOUNTING
후드 마운팅

40-069 DECALS
데칼

40-285 MODEL & SPECIFICATION DECALS
*

41-008 STORAGE CONSOLE
저장 콘솔

41-041 HEATER INSTALLATION
히터 조립그룹

47-000 SEAT WING KIT
시트윙 키트

47-005 REAR HAND GRIP MOUNTING
*

www.truck-freeworkshop.com/forklift/clark/

50-780 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-781 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-782 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-783 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-784 ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)
*

50-785 ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)
*

50-786 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-787 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-791 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
작업장치 호스 적용 (캐리지)

50-794 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
작업장치 호스 적용 (캐리지)

50-796 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
작업장치 호스 적용 (캐리지)

50-798 QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION
퀵 차단 (호스 어댑션 장치용)

50-799 HIGH TERMINATION FOR DEVICE HOSE ADAPTATION
*

50-800 HIGH TERMINATION FOR DEVICE HOSE ADAPTATION
*

50-807 SOLENOID VALVE FOR DEVICE HOSE ADAPTATION
*

50-818 HIGH TERMINATION FOR DEVICE HOSE ADAPTATION
*

50-819 DEIVCE LINE ADAPTORS
*

53-187 SIDE SHIFT ASSEMBLY
*

53-198 SIDESHIFT CYLINDER
사이드 쉬프트 실린더

54-015 FORK POSITIONER (BASIC)
포크 포지셔너 (기본)

62-001 SPEED LIMIT INSTALLATION
속도 제한장치 조립그룹

66-058 FORK
포크

66-060 LIFT CYLINDER PIPING
리프트 실린더 파이핑

66-062 LIFT CYLINDER PIPING
리프트 실린더 파이핑

66-065 LIFT CYLINDER PIPING
리프트 실린더 파이핑

66-072 STANDARD UPRIGHT
표준 업라이트

66-073 LIFT CHAIN
리프트 체인

66-076 LIFT CHAIN
리프트 체인

66-078 PRIMARY CYLINDER
1차 실린더

66-082 HI-LO UPRIGHT
하이로 업라이트

66-083 HI-LO SECONDARY CYLINDER
하이로 2차 실린더

66-157 LIFT CYLINDER ASSEMBLY
리프트 실린더 어셈블리

66-158 SECONDARY CYLINDER ASSEMBLY
2차 실린더 어셈블리

66-240 TRIPLE STAGE UPRIGHT
3단 업라이트

66-335 LIFT CHAIN
리프트 체인

66-999 EXTENTION FORK
익스텐션 포크

75-(30)264 AUXILIARY VALVE LINES
보조 밸브 라인

75-(30)266 AUXILIARY VALVE LINES
보조 밸브 라인

75-(33)014 VARIABLE RELIEF VALVE INSTALLATION
가변 릴리프 밸브 어셈블리

75-(33)045 DEVICE HYDRAULIC PRESSURE GAUGE INSTALLATION
디바이스 유압 압력게이지 조립그룹

75-004 SEAT OPERATED BRAKE
시트 조작 브레이크

75-012 SEAT OPERATED BRAKE SWITCH
시트 조작 브레이크 스위치

www.truck-freeworkshop.com/forklift/clark/

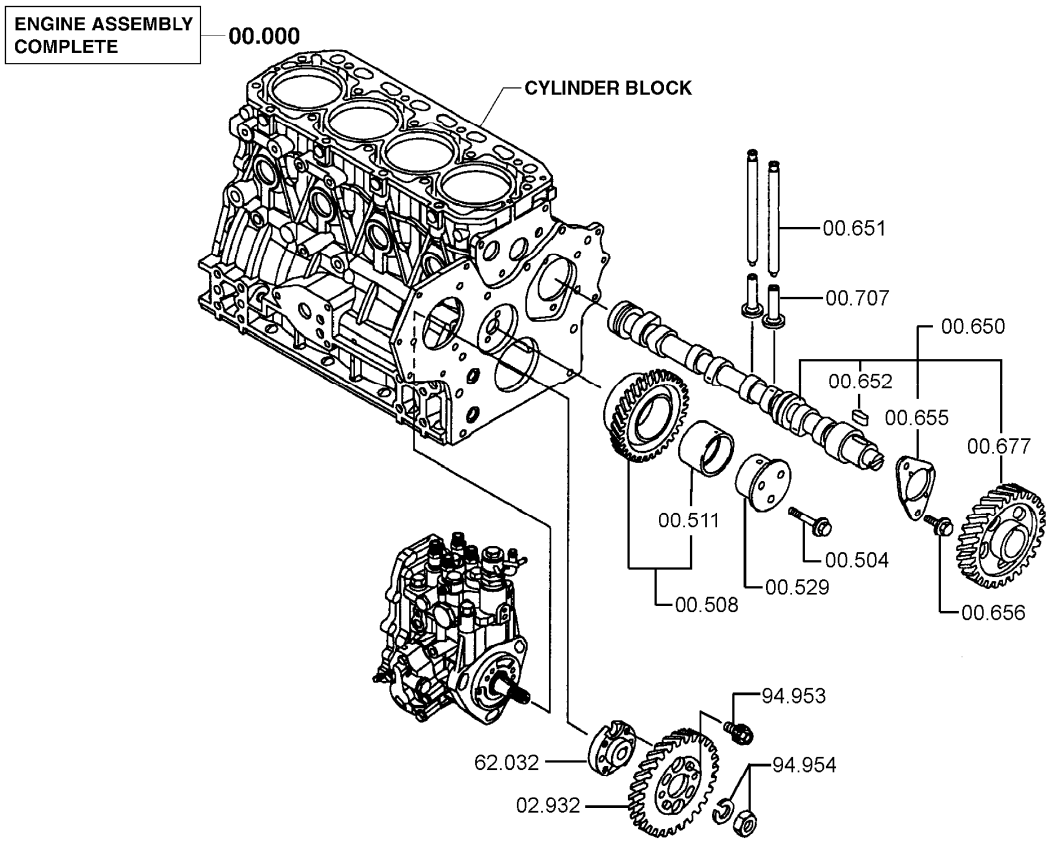

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.504 FASTENER, UPPER IDLER GEAR SPINDLE
패스너

00.508 GEAR, ENGINE LOWER IDLER
기어

00.511 BEARING, IDLER GEAR SHAFT OUTER
베어링

00.529 SPINDLE, IDLER GEAR
스핀들

00.650 CAMSHAFT
캠샤프트

00.651 PUSH ROD, ENGINE ROCKET ARM
푸시로드

00.652 KEY, CAMSHAFT TIMING GEAR WOODRUFF
키

00.655 PLATE, CAMSHAFT THRUST
플레이트

www.truck-freeworkshop.com/forklift/clark/

00.656	FASTENER, CAMSHAFT THRUST PLATE 패스너
00.677	GEAR, CAMSHAFT TIMING 기어
00.707	LIFTER, ENGINE VALVE 리프터
02.932	GEAR, FUEL INJECTION PUMP DRIVE 기어
62.032	FLANGE, FUEL INJECTION PUMP DRIVE 플랜지
94.953	FASTENER, FUEL INJECTION PUMP ADAPTOR 패스너
94.954	FASTENER, FUEL INJECTION PUMP ADAPTOR 패스너

www.truck-freeworkshop.com/forklift/clark/

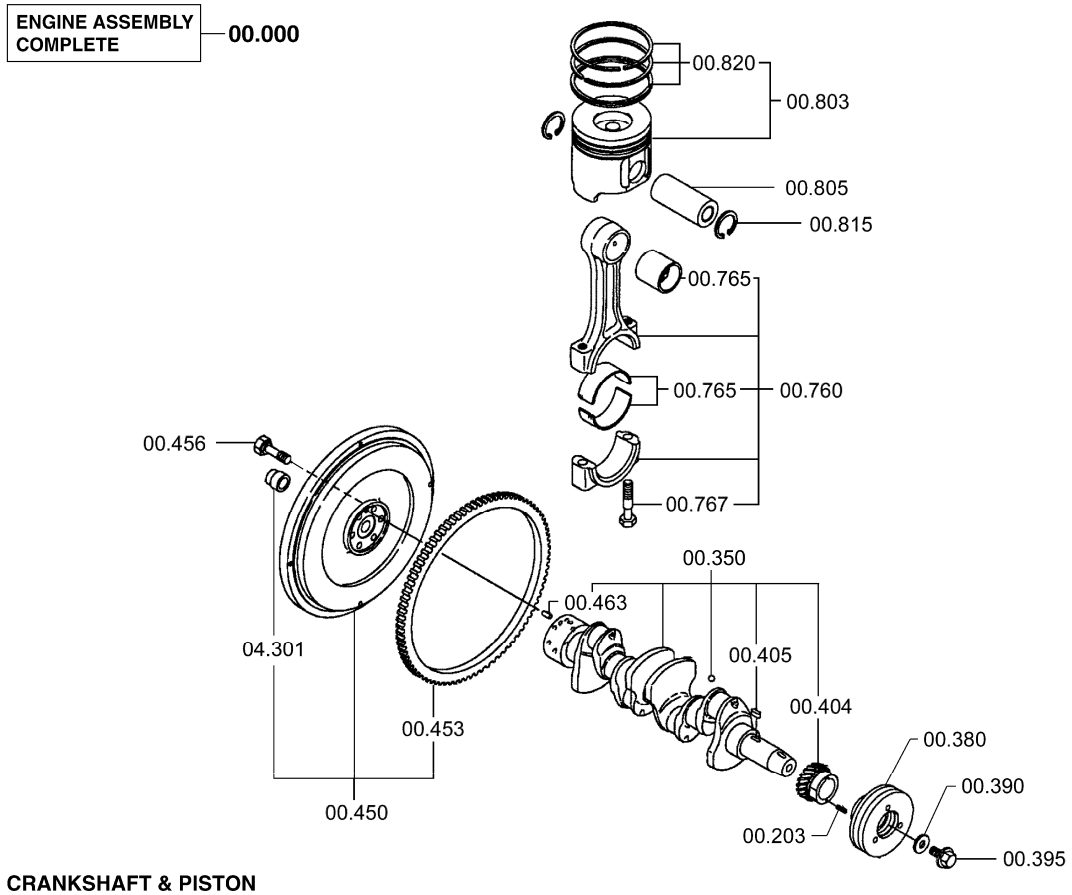

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.203 DOWEL, CRANKSHAFT BEARING CAP
다월

00.350 CRANKSHAFT
크랭크샤프트

00.380 PULLEY, CRANKSHAFT
풀리

00.390 WASHER, CRANKSHAFT PULLEY
와셔

00.395 FASTENER, CRANKSHAFT PULLEY
패스너

00.404 GEAR, CRANKSHAFT TIMING
기어

00.405 KEY, CRANKSHAFT TIMING GEAR
키

00.450 FLYWHEEL
플라이휠

www.truck-freeworkshop.com/forklift/clark/

00.453	GEAR, FLYWHEEL RING 기어
00.456	FASTENER, CRANKSHAFT TO FLYWHEEL 패스너
00.463	DOWEL, CRANKSHAFT 다웰
00.760	ROD ASSEMBLY, CONNECTING 로드
00.765	BEARING, CONNECTING ROD 베어링
00.767	FASTENER, CONNECTING ROD BEARING CAP 패스너
00.803	PISTON (ONE CYLINDER) 피스톤과핀
00.805	PIN, PISTON 핀
00.815	RETAINER, PISTON PIN 리테이너
00.820	PISTON RING 피스톤링
04.301	BEARING, PILOT (IN FLYWHEEL) 베어링

www.truck-freeworkshop.com/forklift/clark/

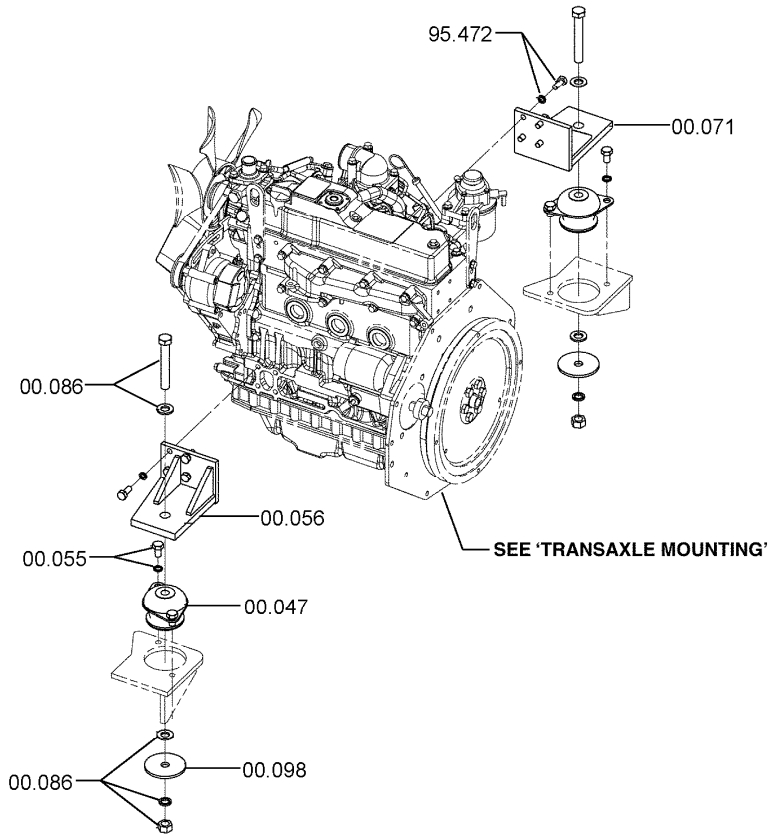

ENGINE MOUNTING **00-546**

00.047 DAMPENER, ENGINE FRONT VIBRATION
댐프너

00.055 FASTENER, ENGINE FRONT VIBRATION DAMPENER
패스너

00.056 MOUNT, ENGINE RH
마운트

00.071 MOUNT, ENGINE LH
마운트

00.086 FASTENER, RH ENGINE MOUNT
패스너

00.098 WASHER, ENGINE MOUNTING TO FRAME RH
와셔

95.472 FASTENER, ENGINE MOUNT
패스너

www.truck-freeworkshop.com/forklift/clark/

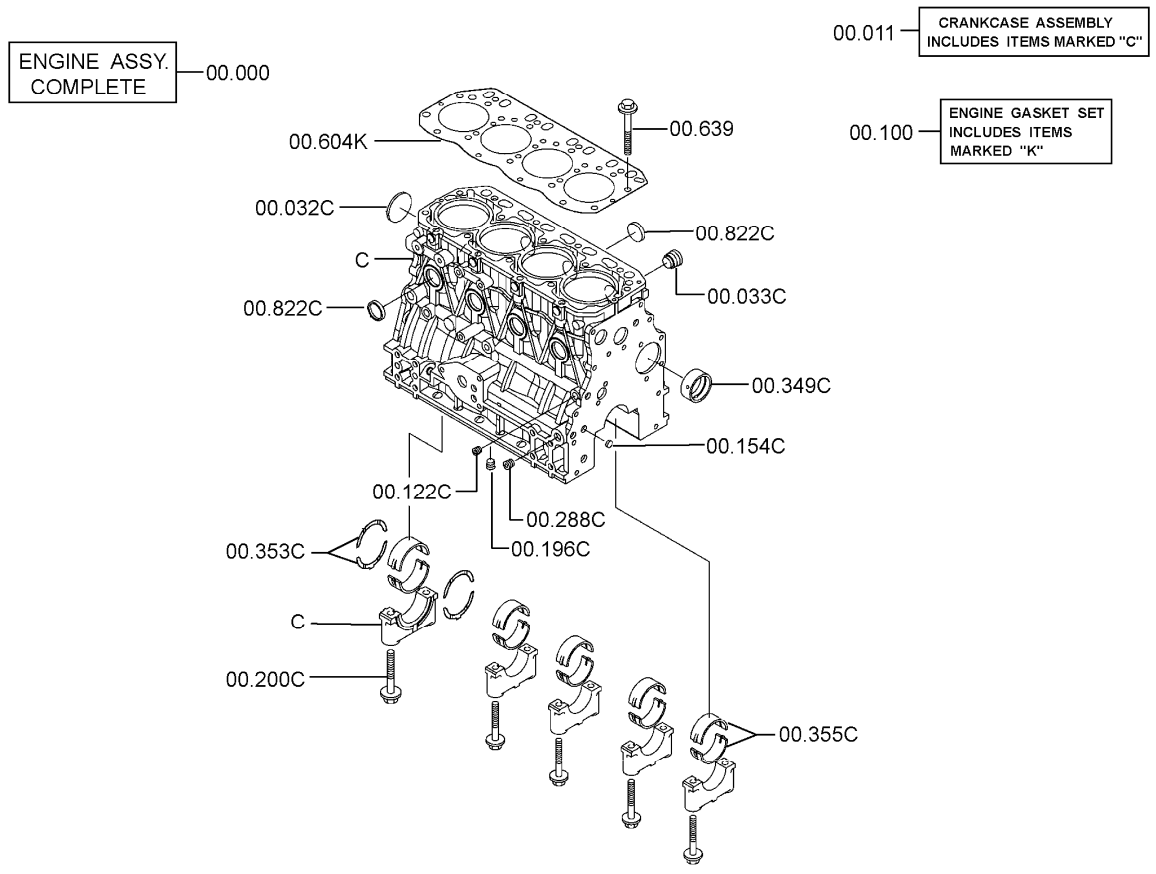

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.011 CRANKCASE
크랭크케이스

00.032 PLUG, CRANKCASE
플러그

00.033 PLUG, CRANKCASE
플러그

00.100 GASKET KIT, ENGINE OVERHAUL
가스켓킷

00.122 PLUG, CRANKCASE
플러그

00.154 PLUG - EXPANSION, CRANKCASE END
플러그

00.198 COVER, CRANKCASE OIL FILTER HOLE
커버

00.200 FASTENER, CRANKSHAFT BEARING NO. 1 CAP
패스너

www.truck-freeworkshop.com/forklift/clark/

00.288	PLUG, CRANKCASE 플러그
00.349	BEARING, ENGINE BALANCER SHAFT FRONT 베어링
00.353	PLATE, CRANKSHAFT THRUST 플레이트
00.355	BEARING, MAIN JOURNAL (ENGINE SET) 베어링
00.604	GASKET, CRANKCASE HEAD 가스켓
00.639	FASTENER, CRANKCASE HEAD 패스너
00.822	PLUG, CRANKCASE 플러그

www.truck-freeworkshop.com/forklift/clark/

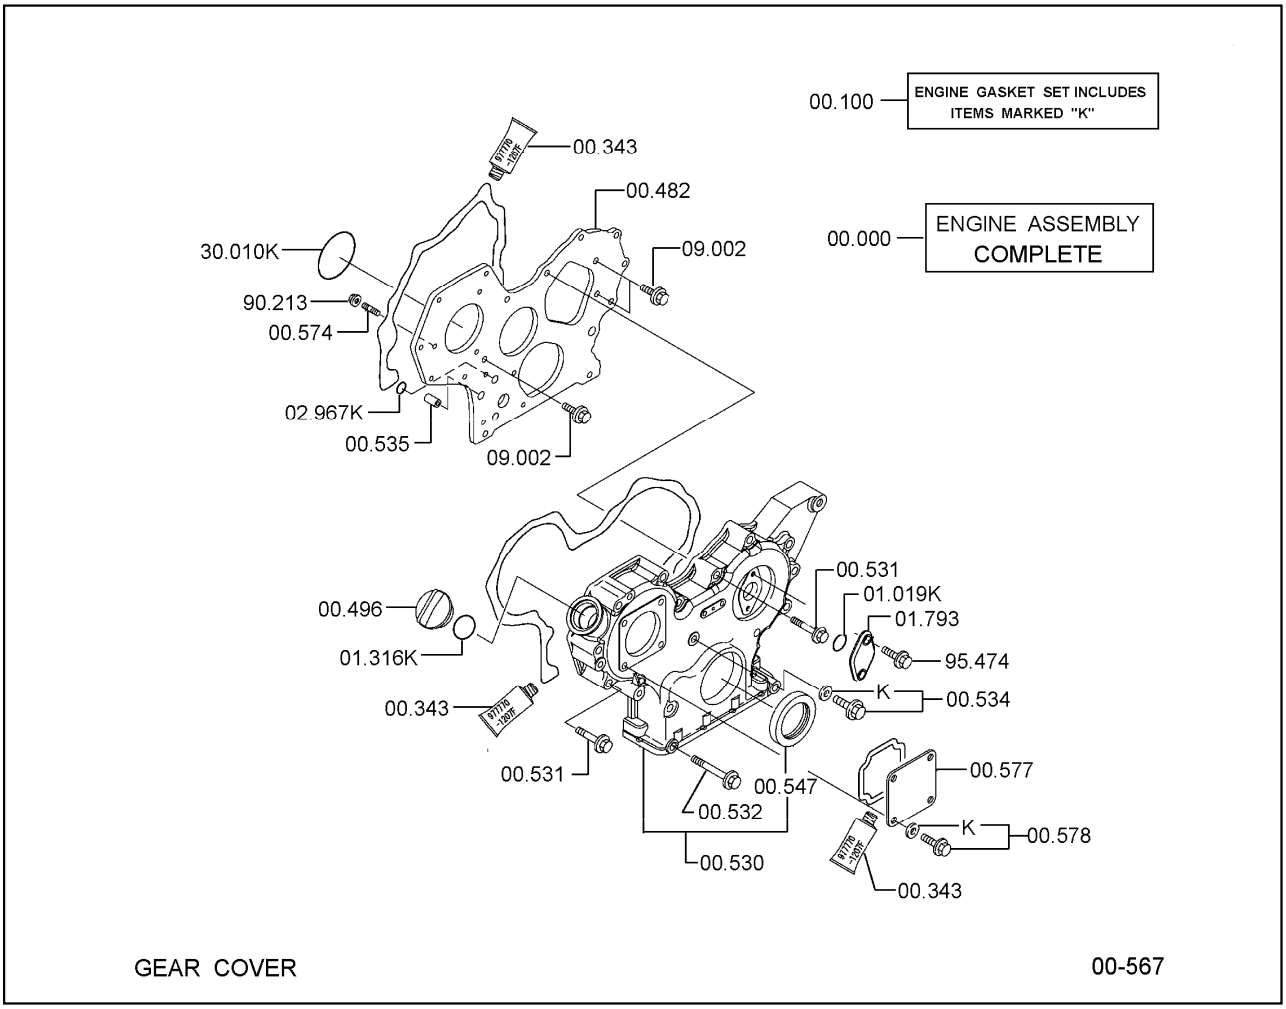

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.100 GASKET KIT, ENGINE OVERHAUL
가스켓킷

00.343 GASKET, LIQUID
가스켓

00.482 PLATE, GEAR COVER BACKING
플레이트

00.496 PLUG, ENGINE FRONT GEAR COVER
플러그

00.530 COVER, ENGINE FRONT GEAR
커버

00.531 FASTENER, ENGINE FRONT GEAR COVER
패스너

00.532 FASTENER, ENGINE FRONT GEAR COVER
패스너

00.534 FASTENER, ENGINE FRONT GEAR COVER
패스너

www.truck-freeworkshop.com/forklift/clark/

00.535	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.547	SEAL, ENGINE FRONT GEAR COVER 시일
00.574	FASTENER, BACKING PLATE 패스너
00.577	COVER, INJECTION PUMP GEAR ACCESS 커버
00.578	FASTENER, INJECTION PUMP GEAR ACCESS COVER 패스너
01.019	SEAL, ENGINE OIL PUMP BODY 시일
01.316	SEAL, ENGINE OIL FILTER DRAIN COCK 시일
01.793	COVER, ENGINE OIL PUMP DRIVE CHAIN ACCESS HOLE 커버
02.967	SEAL, FUEL FILTER DRAIN PLUG 시일
09.002	FASTENER, GEAR CASE COVER 패스너
30.010	SEAL, HOUSING COVER 시일
90.213	NUT, ENGINE FRONT GEAR COVER FASTENER 너트
95.474	FASTENER, ENGINE OIL PUMP DRIVE CHAIN ACCESS HOLE 패스너

www.truck-freeworkshop.com/forklift/clark/

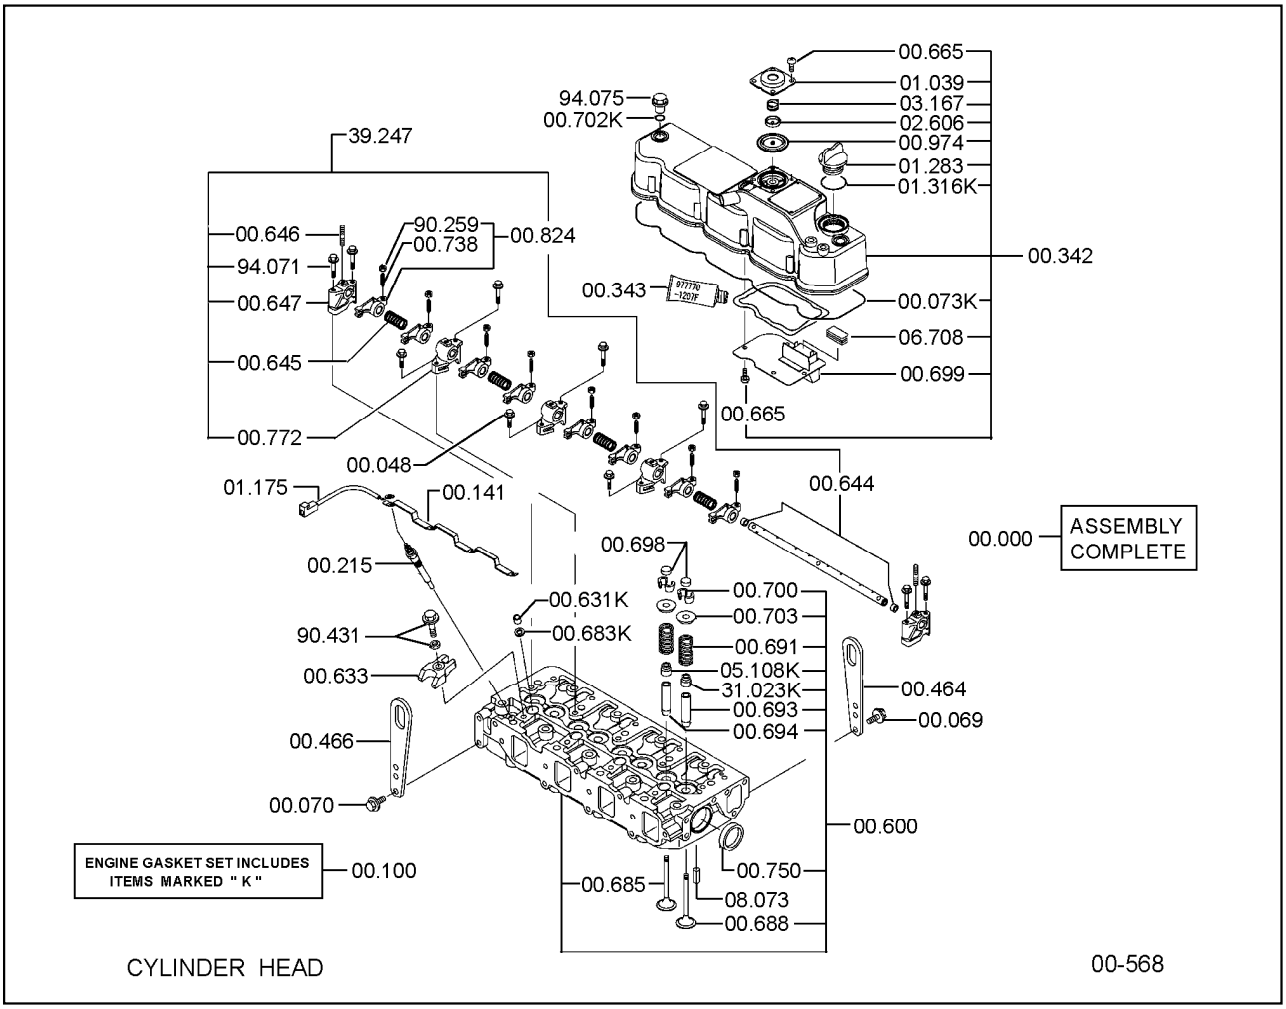

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	00.644	PIVOT, ENGINE ROCKER ARM 피봇
00.048	FASTENER, ENGINE REAR SUPPORT BRACKET 패스너	00.645	SPRING, ENGINE ROCKER ARM 스프링
00.069	FASTENER, ENGINE LIFTING BRACKET 패스너	00.646	FASTENER, ENGINE ROCKER ARM PIVOT SUPPORT 패스너
00.070	FASTENER, ENGINE LIFTING BRACKET 패스너	00.647	SUPPORT, ENGINE ROCKER ARM PIVOT 서포트
00.073	GASKET, CRANKCASE HEAD END COVER 가스켓	00.665	FASTENER, ROCKER ARM COVER 패스너
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓킷	00.683	SEAT, EXHAUST VALVE INSERT 시트
00.141	CONNECTOR, CRANKCASE VENT TUBE 커넥터	00.685	VALVE, EXHAUST 밸브
00.215	GLOW PLUG, CRANKCASE HEAD HEATER 글로우플러그	00.688	VALVE, INTAKE 밸브
00.342	BONNET ASSY 보닛	00.691	SPRING, ENGINE INTAKE VALVE 스프링
00.343	GASKET, LIQUID 가스켓	00.693	GUIDE, INTAKE VALVE 가이드
00.464	BRACKET, ENGINE LIFTING 브라켓	00.694	GUIDE, EXHAUST VALVE 가이드
00.466	BRACKET, ENGINE LIFTING 브라켓	00.698	LOCK, EXHAUST VALVE SPRING SEAT 로크
00.600	HEAD ASSEMBLY, CRANKCASE 헤드	00.699	OIL BAFFLE,CAMSHAFT 오일
00.631	FASTENER, CRANKCASE HEAD 패스너	00.700	LOCK, INTAKE VALVE SPRING SEAT 로크
00.633	FASTENER, CRANKCASE HEAD 패스너	00.702	SEAL, ROCKER ARM COVER FASTENER 시일

www.truck-freeworkshop.com/forklift/clark/

00.703	SEAT, INTAKE VALVE SPRING 시트
00.738	STUD, ENGINE ROCKER ARM PIVOT SUPPORT 스터드
00.750	PLUG, CRANKCASE HEAD 플러그
00.772	SUPPORT, ENGINE ROCKER ARM PIVOT 서포트
00.824	ARM ASSY, ENGINE ROCKER 암
00.974	DIAPHRAGM, BONNET PLATE 다이어프램
01.039	COVER, CRANKCASE VENT 커버
01.175	HARNESS, CYLINDER HEAD GLOW PLUG 하네스
01.283	CAP, CRANKCASE OIL FILLER 캡
01.316	SEAL, ENGINE OIL FILTER DRAIN COCK 시일
02.606	PLATE, DIAPHRAGM RETAINER 플레이트
03.167	SPRING, DIAPHRAGM RETURN 스프링
05.108	SEAL, VALVE OUTLET PORT 시일
06.708	BAFFLE, CONTROL COVER OIL 배플
08.073	PIN, ARM PIVOT SECURING 핀
31.023	SEAL, VALVE INLET PORT 시일
39.247	SHAFT, ARMREST PIVOT 샤프트
90.259	NUT, ENGINE ROCKER ARM PIVOT SUPPORT FASTENER 너트
90.431	NUT, CRANKCASE HEAD FASTENER 너트
94.071	FASTENER, ROCKER ARM PIVOT SUPPORT 패스너
94.075	FASTENER, ROCKER ARM COVER HOLE COVER 패스너

www.truck-freeworkshop.com/forklift/clark/

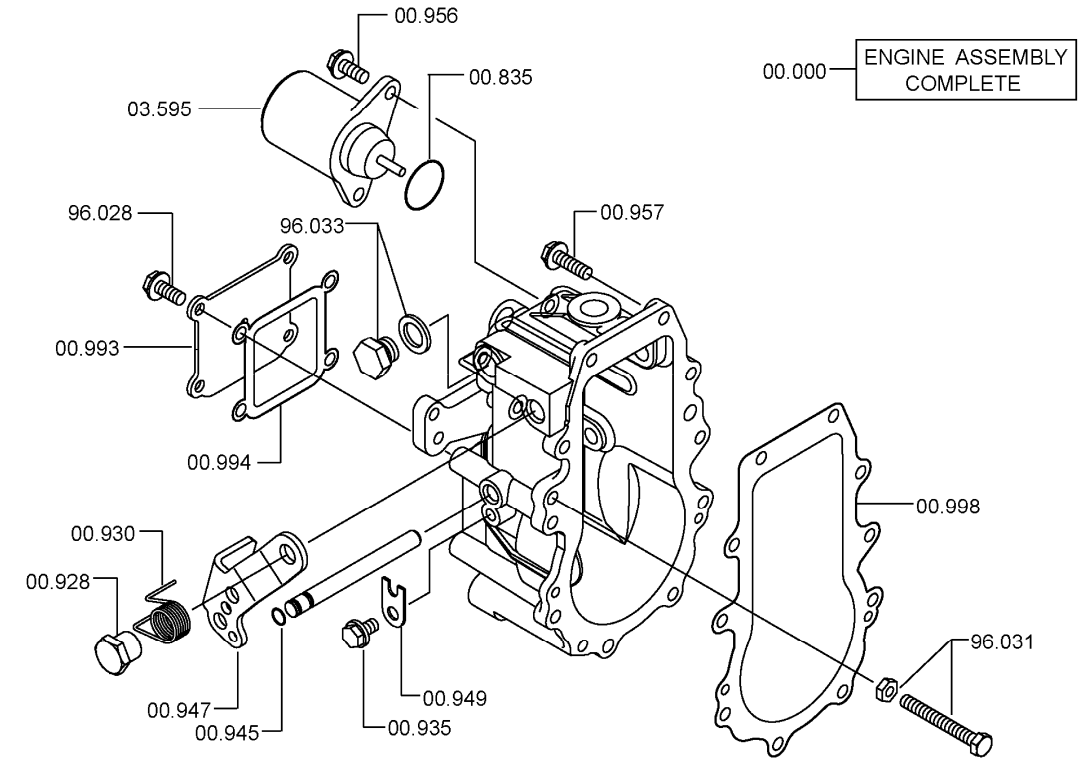

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.835 SEAL, GOVERNOR BODY WASHER
시일

00.928 FASTENER, GOVERNOR ADJUSTING LEVER
패스너

00.930 SPRING, GOVERNOR
스프링

00.935 FASTENER, GOVERNOR
패스너

00.945 SEAL, GOVERNOR ROCKER SHAFT
시일

00.947 LEVER & SHAFT, GOVERNOR
레버와샤프트

00.949 RETAINER, GOVERNOR DRIVE BEARING
리테이너

00.956 FASTENER, GOVERNOR
패스너

www.truck-freeworkshop.com/forklift/clark/

00.957	FASTENER, GOVERNOR 패스너
00.993	COVER, GOVERNOR ACCESS 커버
00.994	GASKET,GOVERNOR ACCESS COVER 가스켓
00.998	GASKET, GOVERNOR ACCESS COVER 가스켓
03.595	SOLENOID VALVE, INJECTION PUMP COLD ADVANCE DEVICE 솔레노이드밸브
96.028	FASTENER, GOVERNOR ACCESS COVER 패스너
96.031	FASTENER, GOVERNOR ACCESS COVER 패스너
96.033	FASTENER, GOVERNOR ACCESS COVER 패스너

www.truck-freeworkshop.com/forklift/clark/

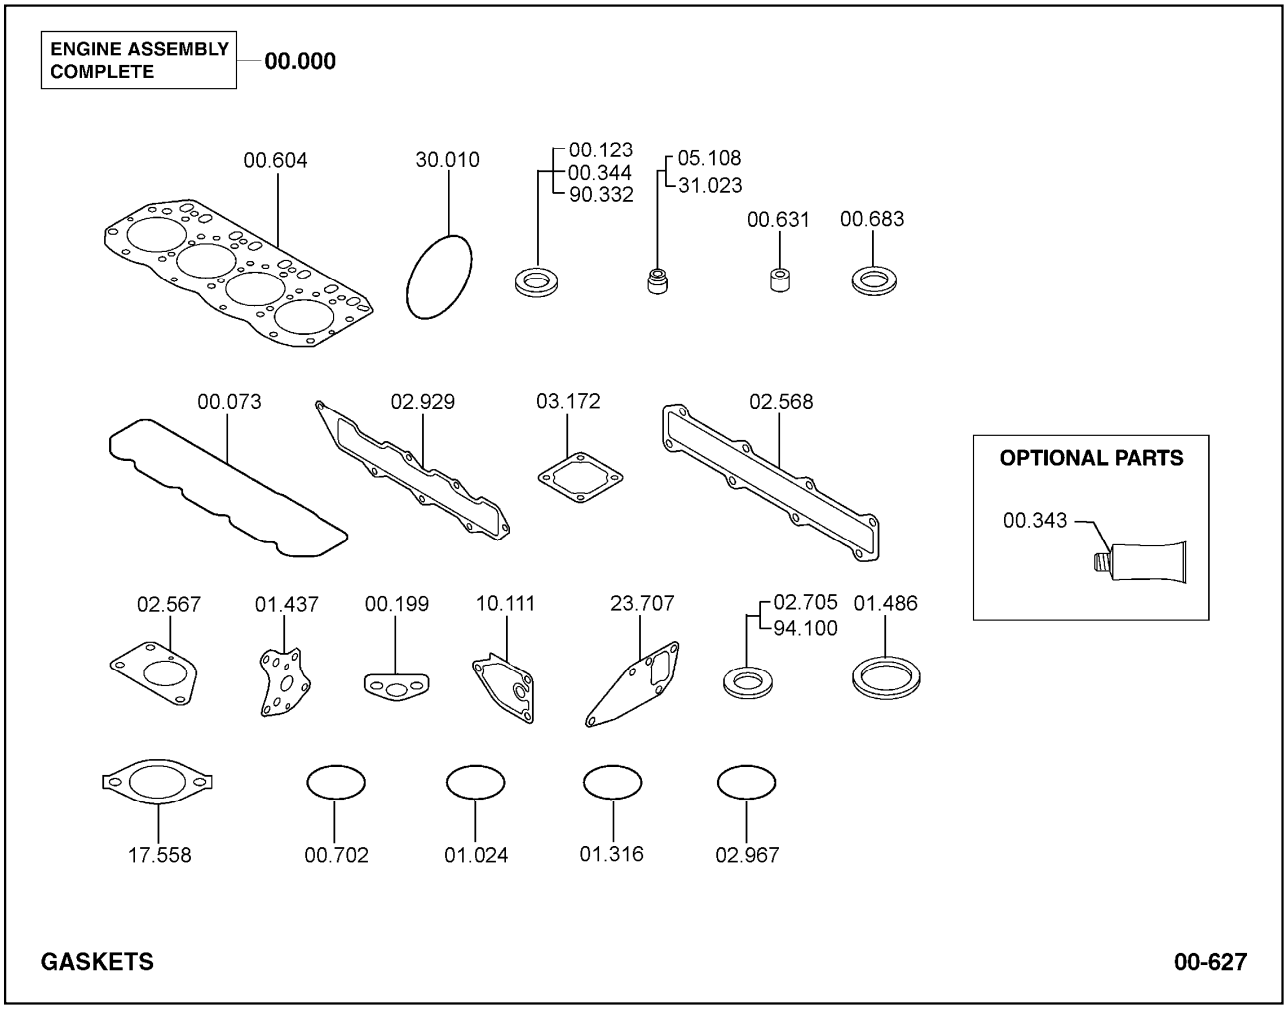

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.073 GASKET, CRANKCASE HEAD END COVER
가스켓

00.123 GASKET, CRANKCASE VENT TUBE FITTING
가스켓

00.199 GASKET, CRANKCASE OIL FILTER HOLE COVER
가스켓

00.343 GASKET, LIQUID
가스켓

00.344 GASKET, ENGINE OIL LINE
가스켓

00.604 GASKET, CRANKCASE HEAD
가스켓

00.631 FASTENER, CRANKCASE HEAD
패스너

00.683 SEAT, EXHAUST VALVE INSERT
시트

www.truck-freeworkshop.com/forklift/clark/

00.702	SEAL, ROCKER ARM COVER FASTENER 시일
01.024	SEAL, ENGINE OIL PUMP FASTENER 시일
01.316	SEAL, ENGINE OIL FILTER DRAIN COCK 시일
01.437	GASKET, PUMP TO CRANKCASE 가스켓
01.486	GASKET, WATER PUMP FRONT TO REAR BODY 가스켓
02.567	GASKET, EXHAUST PIPE FLANGE TO MANIFOLD 가스켓
02.568	GASKET, INTAKE TO EXHAUST MANIFOLD 가스켓
02.705	GASKET, WATER CORE PLUG 가스켓
02.929	GASKET, INTAKE MANIFOLD 가스켓
02.967	SEAL, FUEL FILTER DRAIN PLUG 시일
03.172	GASKET, COLD START RESERVOIR COVER 가스켓
05.108	SEAL, VALVE OUTLET PORT 시일
10.111	GASKET, OIL FILTER COVER BOLT 가스켓
17.558	GASKET, THERMOSTAT 가스켓
23.707	GASKET, PUMP END PLATE 가스켓
30.010	SEAL, HOUSING COVER 시일
31.023	SEAL, VALVE INLET PORT 시일
90.332	WASHER, CRANKCASE OIL PAN FASTENER 와셔
94.100	FASTENER, WATER PUMP DISCHARGE FLANGE 패스너

www.truck-freeworkshop.com/forklift/clark/

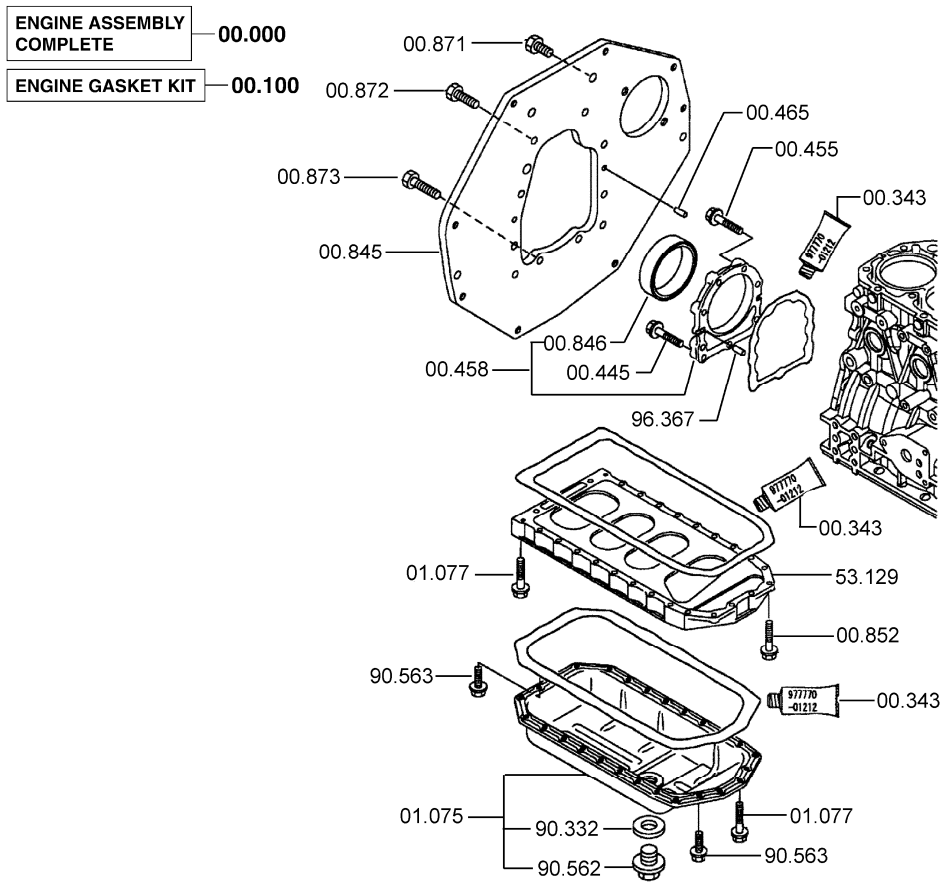

FLYWHEEL HOUSING & OIL SUMP **01-083**

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.100 GASKET KIT, ENGINE OVERHAUL
가스켓킷

00.343 GASKET, LIQUID
가스켓

00.445 FASTENER, REAR OIL SEAL HOUSING
패스너

00.455 FASTENER, REAR OIL SEAL HOUSING
패스너

00.458 HOUSING, REAR OIL SEAL
하우징

00.465 DOWEL, FLYWHEEL
다월

00.845 HOUSING, FLYWHEEL
하우징

00.846 SEAL, FLYWHEEL HOUSING
시일

www.truck-freeworkshop.com/forklift/clark/

00.852	FASTENER, OIL PAN TO FLYWHEEL HOUSING 패스너
00.871	FASTENER, FLYWHEEL HOUSING 패스너
00.872	FASTENER, FLYWHEEL HOUSING 패스너
00.873	FASTENER, FLYWHEEL HSG TO CRANKCASE 패스너
01.075	PAN, CRANKCASE OIL 팬
01.077	FASTENER, OIL PAN TO CRANKCASE 패스너
53.129	REINFORCEMENT, DEVICE FRAME 보강판
90.332	WASHER, CRANKCASE OIL PAN FASTENER 와셔
90.562	BOLT, CRANKCASE OIL PAN 볼트
90.563	BOLT, CRANKCASE OIL PAN 볼트
96.367	DOWEL PIN, FLYWHEEL HOUSING 다웰핀

www.truck-freeworkshop.com/forklift/clark/

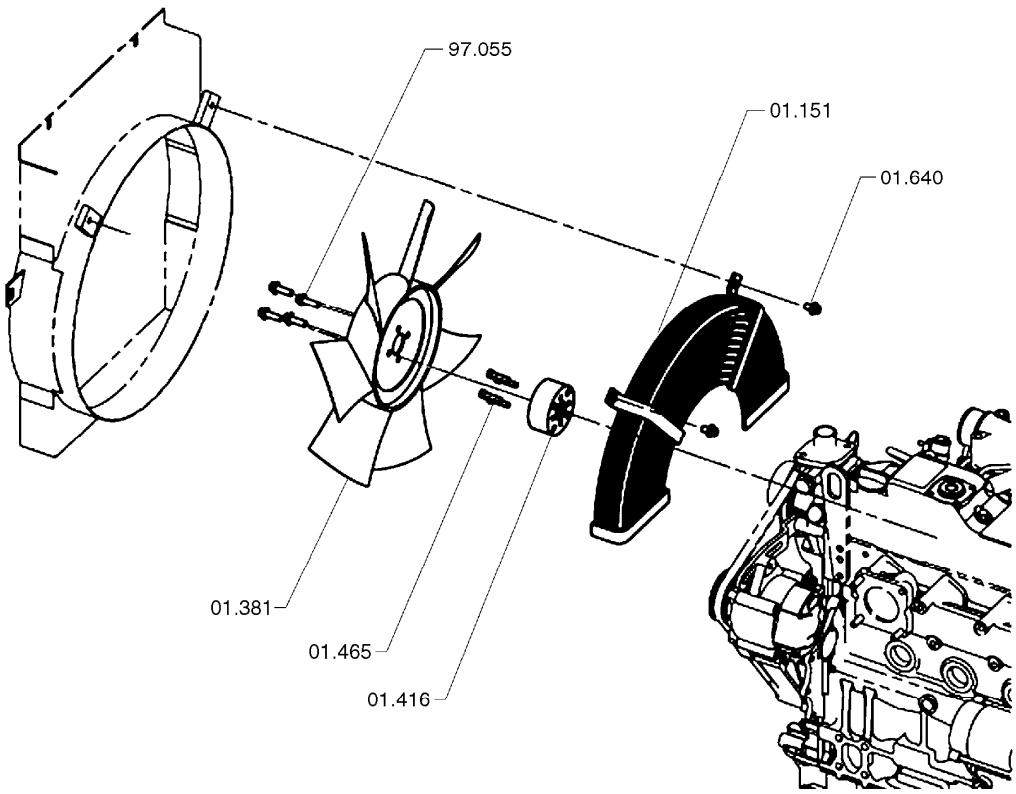

FAN GUARD MOUNTING **01-142**

01.151	GUARD, RADIATOR FAN 가드
01.381	BLADE, FAN 블레이드
01.416	SPACER, FAN BLADE 스페이서
01.465	FASTENER, FAN BLADE SPACER 패스너
01.640	FASTENER, RADIATOR SHROUD EXTENTION 패스너
97.055	FASTENER, FAN BRACKET MOUNTING 패스너

www.truck-freeworkshop.com/forklift/clark/

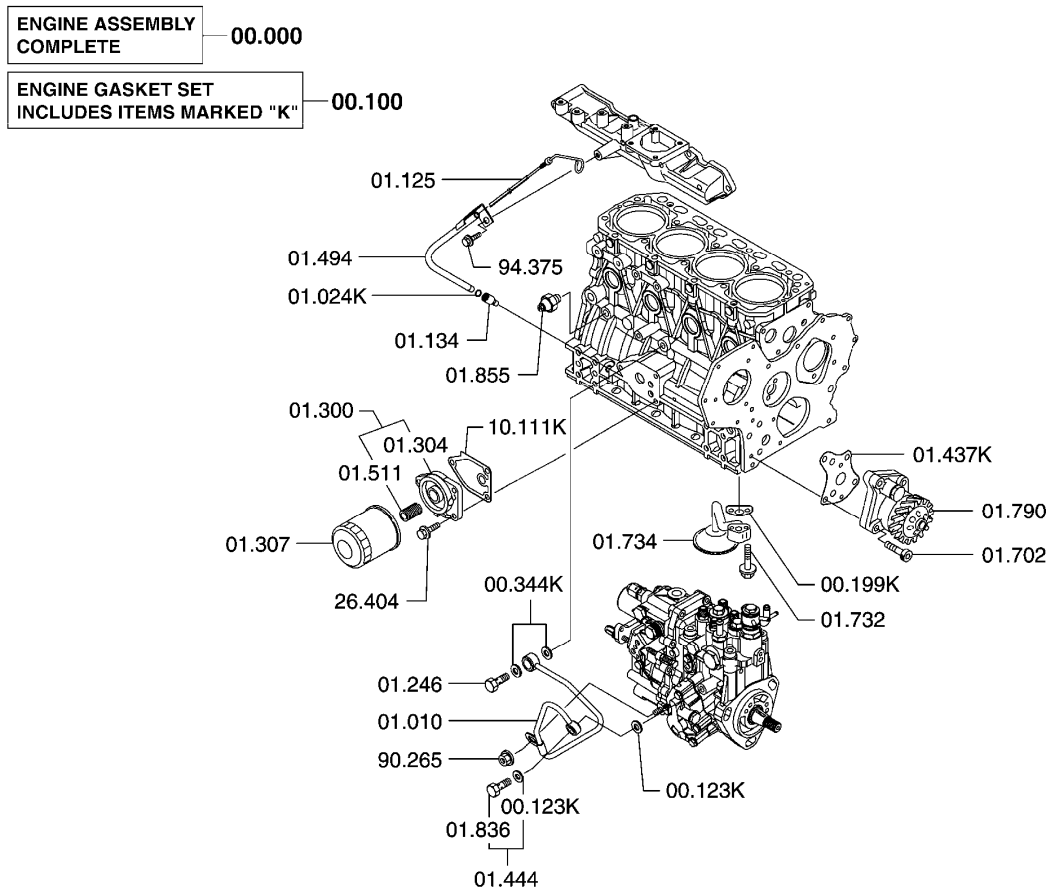

LUBRICATION SYSTEM **01-298**

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.100 GASKET KIT, ENGINE OVERHAUL
가스켓킷

00.123 GASKET, CRANKCASE VENT TUBE FITTING
가스켓

00.199 GASKET, CRANKCASE OIL FILTER HOLE COVER
가스켓

00.344 GASKET, ENGINE OIL LINE
가스켓

01.010 LINE, ENGINE OIL
라인

01.024 SEAL, ENGINE OIL PUMP FASTENER
시일

01.125 DIPSTICK, CRANKCASE OIL LEVEL
딥스틱

01.134 ADAPTOR, CRANKCASE OIL LEVEL DIPSTICK
어댑터

www.truck-freeworkshop.com/forklift/clark/

01.246	FASTENER, ENGINE OIL LINE 패스너
01.300	BRACKET, ENGINE OIL FILTER MOUNTING 브라켓
01.304	BRACKET, ENGINE OIL FILTER 브라켓
01.307	CARTRIDGE & GASKET, ENGINE OIL FILTER 카트리지와가스켓
01.437	GASKET, PUMP TO CRANKCASE 가스켓
01.444	FASTENER, PUMP TO CRANKCASE (THICK FLANGE) 패스너
01.494	TUBE, OIL LEVEL DIPSTICK ADAPTOR 튜브
01.511	ADAPTOR, ENGINE OIL FILTER 어댑터
01.702	FASTENER, OIL PUMP 패스너
01.732	FASTENER, OIL PUMP STRAINER TUBE 패스너
01.734	LINE, OIL PUMP STRAINER 라인
01.790	GEAR, OIL PUMP DRIVEN 기어
01.836	BOLT, ENGINE OIL BY-PASS FILTER OUTLET LINES 볼트
01.855	SENSOR, OIL PRESSURE 센서
10.111	GASKET, OIL FILTER COVER BOLT 가스켓
26.404	FASTENER, OIL FILTER COVER 패스너
90.265	NUT, INJECTOR LINE CLIP FASTENER 너트
94.375	FASTENER, CRANKCASE OIL LEVEL DIPSTICK ADAPTOR BRA 패스너

www.truck-freeworkshop.com/forklift/clark/

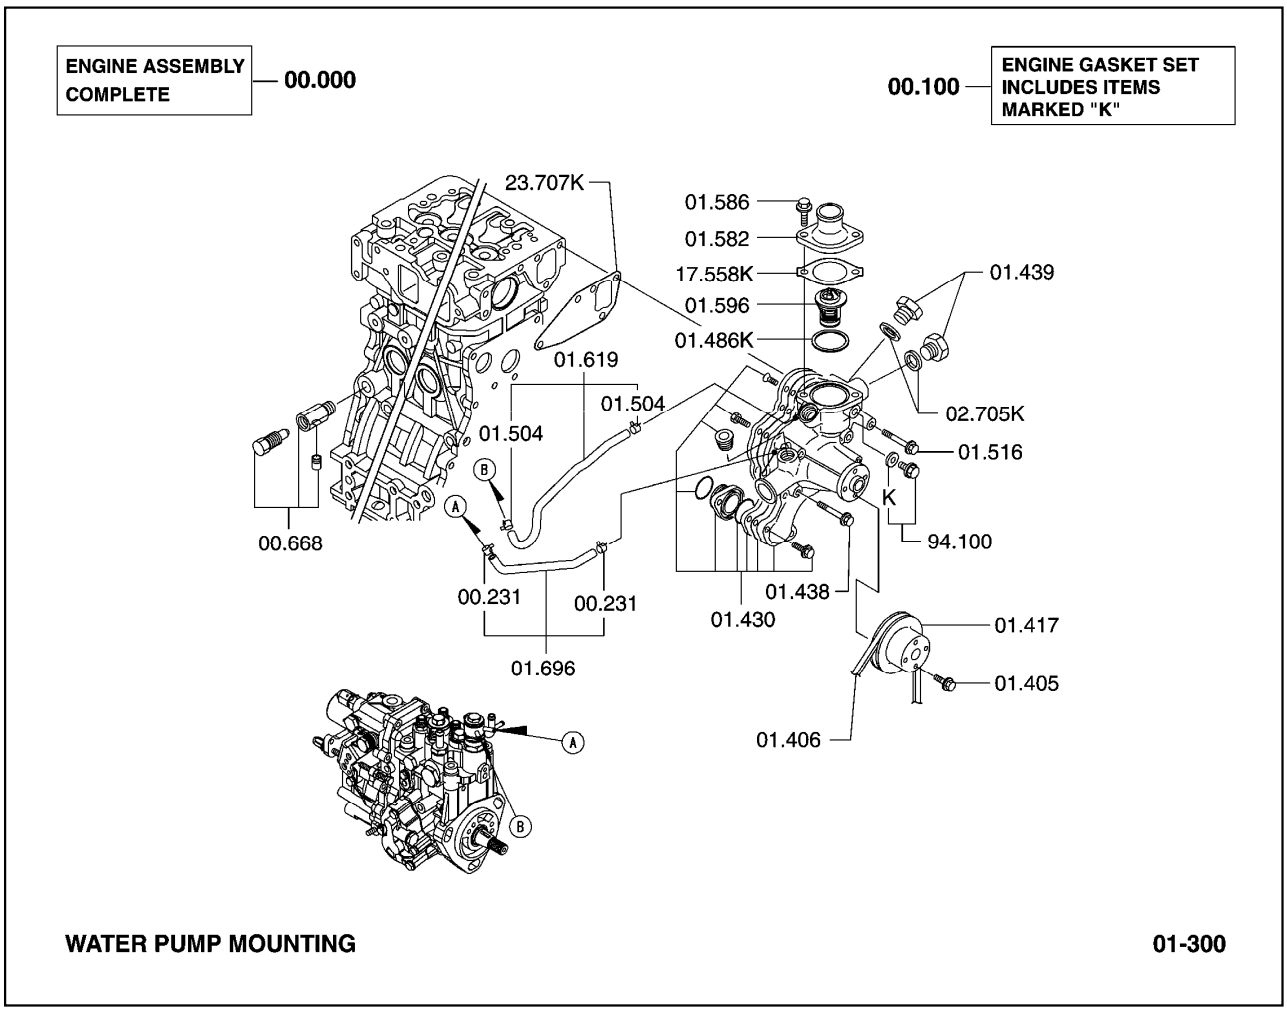

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.100 GASKET KIT, ENGINE OVERHAUL
가스켓킷

00.231 CLAMP, WATER PUMP BLEEDER HOSE
클램프

00.668 PLUG, CRANKCASE WATER
플러그

01.405 FASTENER, FAN BLADE
패스너

01.406 BELT, FAN
븜트셋

01.417 PULLEY, FAN
풀리

01.430 PUMP ASSEMBLY, ENGINE WATER
펌프

01.438 FASTENER, WATER PUMP
패스너

www.truck-freeworkshop.com/forklift/clark/

01.439	FASTENER, WATER PUMP 패스너
01.486	GASKET, WATER PUMP FRONT TO REAR BODY 가스켓
01.504	PIPE, ENGINE WATER PUMP INLET 파이프
01.516	FASTENER, ENGINE WATER PUMP DISCHARGE FLANGE 패스너
01.582	ELBOW, WATER OUTLET 엘보우
01.586	FASTENER, WATER OUTLET ELBOW - FANSIDE 패스너
01.596	THERMOSTAT, ENGINE 써머스태트
01.619	LINE, WATER PUMP BLEEDER 라인
01.696	LINE, WATER PUMP BLEEDER 라인
02.705	GASKET, WATER CORE PLUG 가스켓
17.558	GASKET, THERMOSTAT 가스켓
23.707	GASKET, PUMP END PLATE 가스켓
94.100	FASTENER, WATER PUMP DISCHARGE FLANGE 패스너

www.truck-freeworkshop.com/forklift/clark/

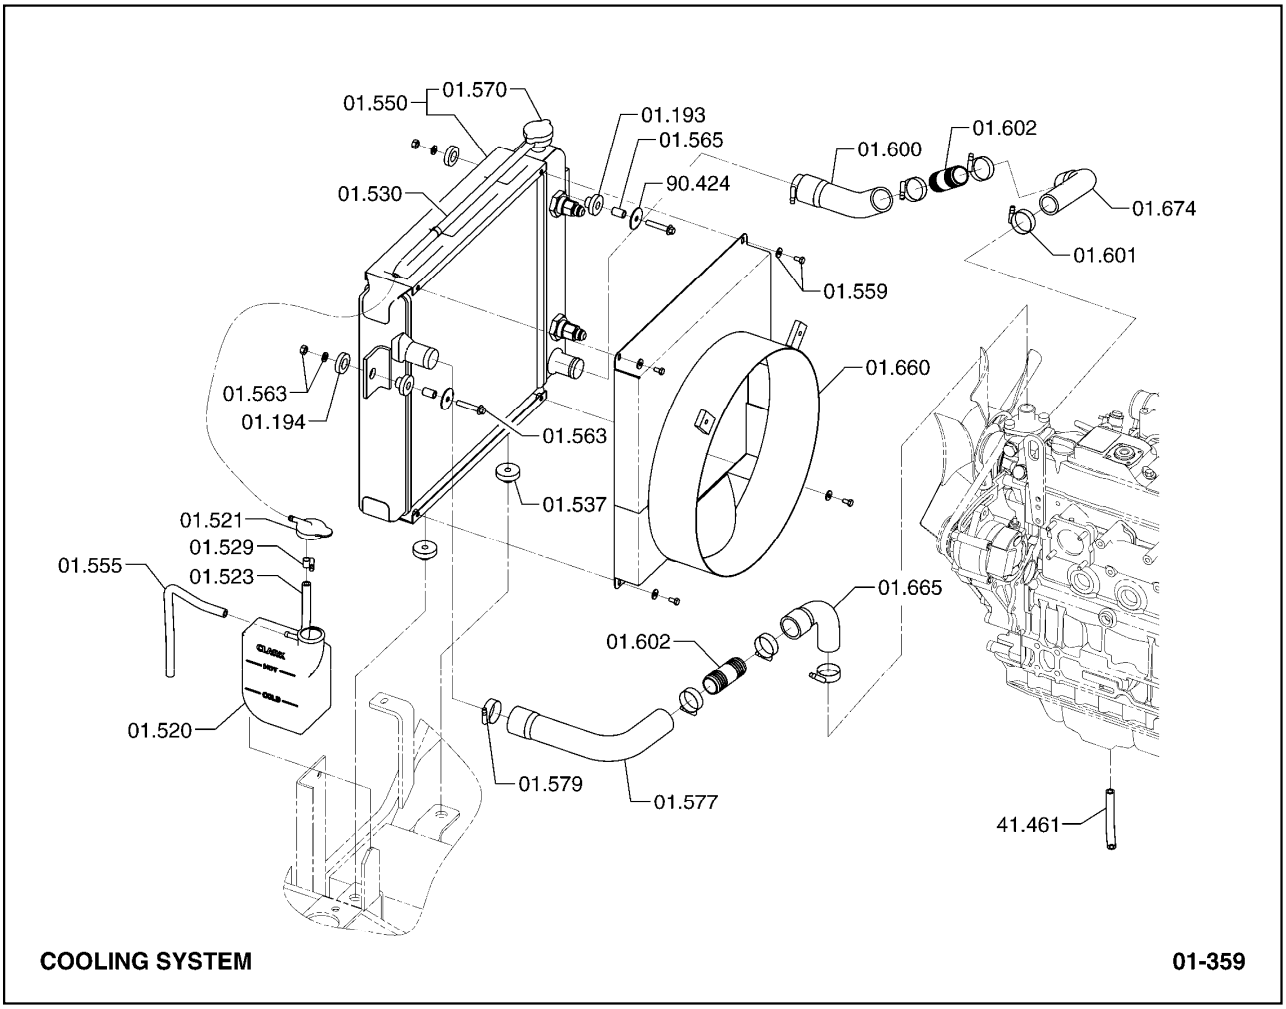

01.193 ISOLATOR, RADIATOR MOUNTING
절연재

01.194 ISOLATOR, RADIATOR MOUNTING
절연재

01.520 COMPENSATION TANK, COOLING SYSTEM
보상기

01.521 COVER, COMPENSATION TANK
커버

01.523 LINE, COOLING SYSTEM COMPENSATION TANK
라인

01.529 CLAMP, RADIATOR OVERFLOW LINE
클램프

01.530 LINE, RADIATOR FILLER
라인

01.537 PAD, RADIATOR MOUNTING LOWER
패드

01.550 RADIATOR
라디에터

www.truck-freeworkshop.com/forklift/clark/

01.555	LINE, RADIATOR OVERFLOW 라인
01.559	FASTENER, RADIATOR UPPER SUPPORT (RADIATOR END) 패스너
01.563	FASTENER, RADIATOR MOUNTING BRACKET 패스너
01.565	SPACER, RADIATOR MOUNTING 스페이서
01.570	CAP, RADIATOR 캡
01.577	HOSE, RADIATOR UPPER 호스
01.579	CLAMP, RADIATOR UPPER HOSE 클램프
01.600	HOSE, RADIATOR LOWER 호스
01.601	CLAMP, RADIATOR LOWER HOSE 클램프
01.602	TUBE, RADIATOR LOWER 튜브
01.660	SHROUD, RADIATOR 슈라우드
01.665	HOSE, RADIATOR WATER FLOW 호스
01.674	HOSE, RADIATOR WATER FLOW 호스
41.461	TUBE, DRAIN 튜브
90.424	WASHER, RADIATOR MOUNTING FASTENER 와셔

www.truck-freeworkshop.com/forklift/clark/

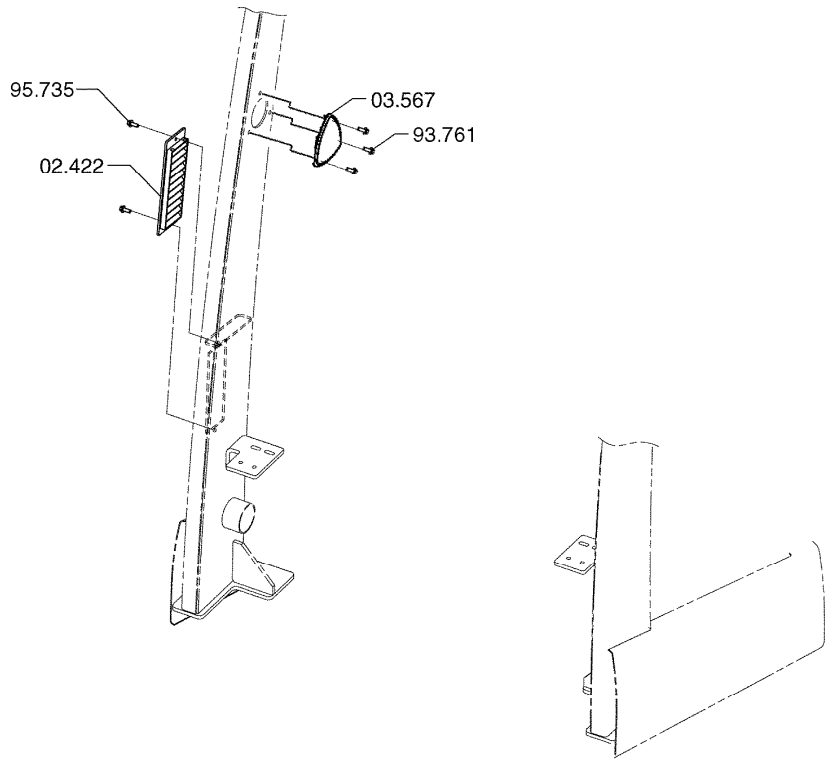

NON PRE-CLEANER GP **02-154**

02.422	SCREEN, ENGINE INTAKE AIR 스크린
03.567	PLUG, AIR INTAKE DRIVER OVERHEAD GUARD 플러그
93.761	FASTENER, DRIVERS OVERHEAD GUARD TOP SECTION COVER 패스너
95.735	FASTENER, ENGINE AIR INTAKE SCREEN 패스너

www.truck-freeworkshop.com/forklift/clark/

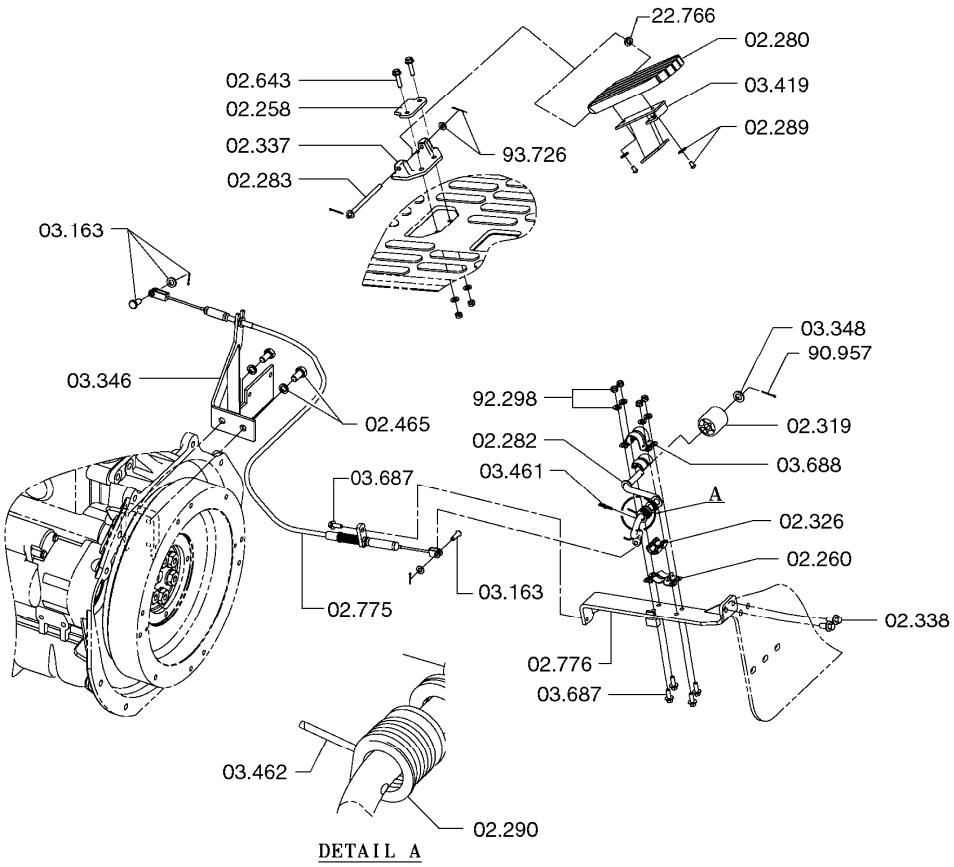

ACCELERATOR LINKAGE **02-198**

02.258 STOP, ACCELERATOR PEDAL
스톱

02.260 BRACKET, ACCELERATOR LINKAGE MOUNTING
브라켓

02.280 PEDAL, ACCELERATOR
페달

02.282 ROD, ACCELERATOR PUSH
로드

02.283 PIN, ACCELERATOR PEDAL TO BRACKET PIVOT
핀

02.289 FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING
패스너

02.290 BUSHING, ACCELERATOR BELLCRANK
부싱

02.319 BUSHING, ACCELERATOR LINKAGE LEVER
부싱

02.326 BEARING, ACCELERATOR LEVER
베어링

www.truck-freeworkshop.com/forklift/clark/

02.337	BRACKET, ACCELERATOR LEVER MOUNTING 브라켓
02.338	FASTENER, ACCELERATOR LEVER MOUNTING BRACKET 패스너
02.465	FASTENER, ACCELERATOR CONTROL LINKAGE 패스너
02.643	FASTENER, ACCELERATOR PEDAL HEEL SUPPORT 패스너
02.775	CABLE, ACCELERATOR CONTROL 케이블
02.776	BRACKET, ACCELERATOR CONTROL CABLE 브라켓
03.163	FASTENER, ACCELERATOR CONTROL ROD END 패스너
03.346	BRACKET, ACCELERATOR LINKAGE 브라켓
03.348	WASHER, ACCELERATOR LINKAGE RETURN LEVER FAST 와셔
03.419	WEAR PLATE, ACCELERATOR PEDAL ROLLER 웨어플레이트
03.461	PIN, ACCELERATOR CONTROL ROD END 핀
03.462	SPRING, ACCELERATOR PEDAL RETURN 스프링
03.687	FASTENER, ACC CONTROL CABLE BRACKET MTG 패스너
03.688	BRACKET, ACCELERATOR LEVER ATTACHING 브라켓
22.726	REGULATED POWER SUPPLY ENCODER 레귤레이터
90.957	RETAINER, ACCELERATOR LINKAGE LEVER PIN 리테이너
92.298	NUT, ACCELERATOR LEVER ATTACHING BRACKET FASTENER 너트
93.726	WASHER, ACCELERATOR PEDAL PIVOT RETAINER 와셔

www.truck-freeworkshop.com/forklift/clark/

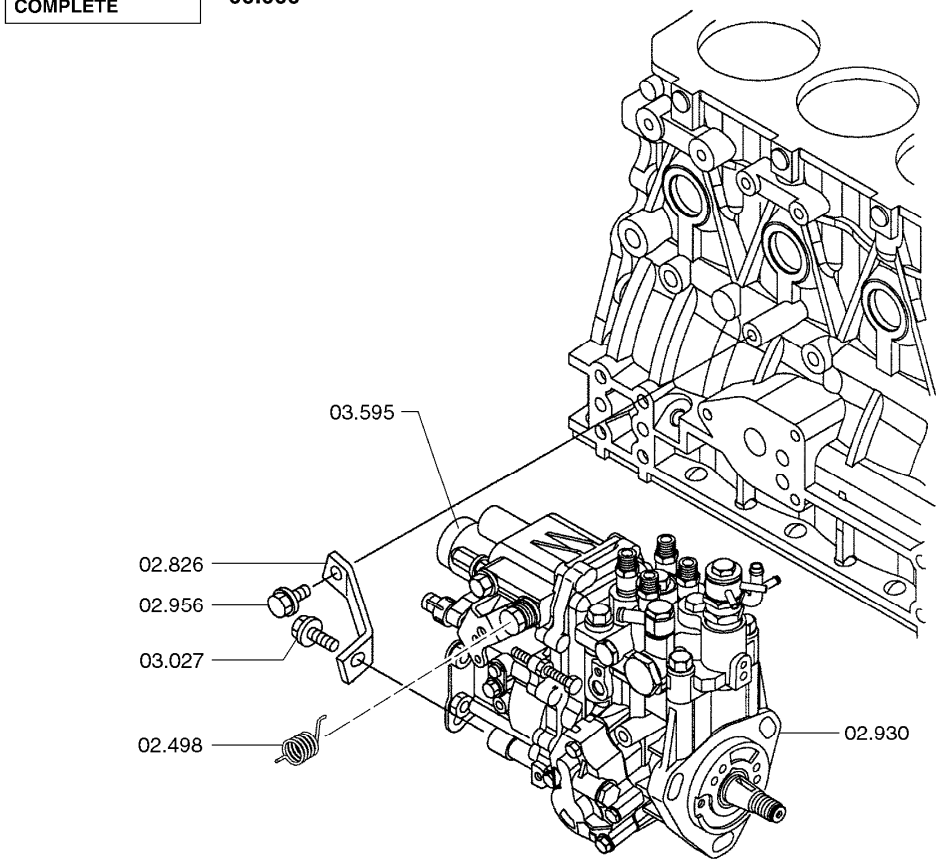

FUEL INJECTION PUMP MOUNTING **02-287**

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

02.498 SPRING, ACCELERATOR RETURN
스프링

02.826 BRACKET, FUEL LINE CLIP
브라켓

02.930 PUMP ASSEMBLY, FUEL INJECTION
펌프

02.956 FASTENER, FUEL INJECTION PUMP
패스너

03.027 FASTENER, FUEL INJECTION PUMP
패스너

03.595 SOLENOID VALVE, INJECTION PUMP COLD ADVANCE DEVICE
솔레노이드밸브

www.truck-freeworkshop.com/forklift/clark/

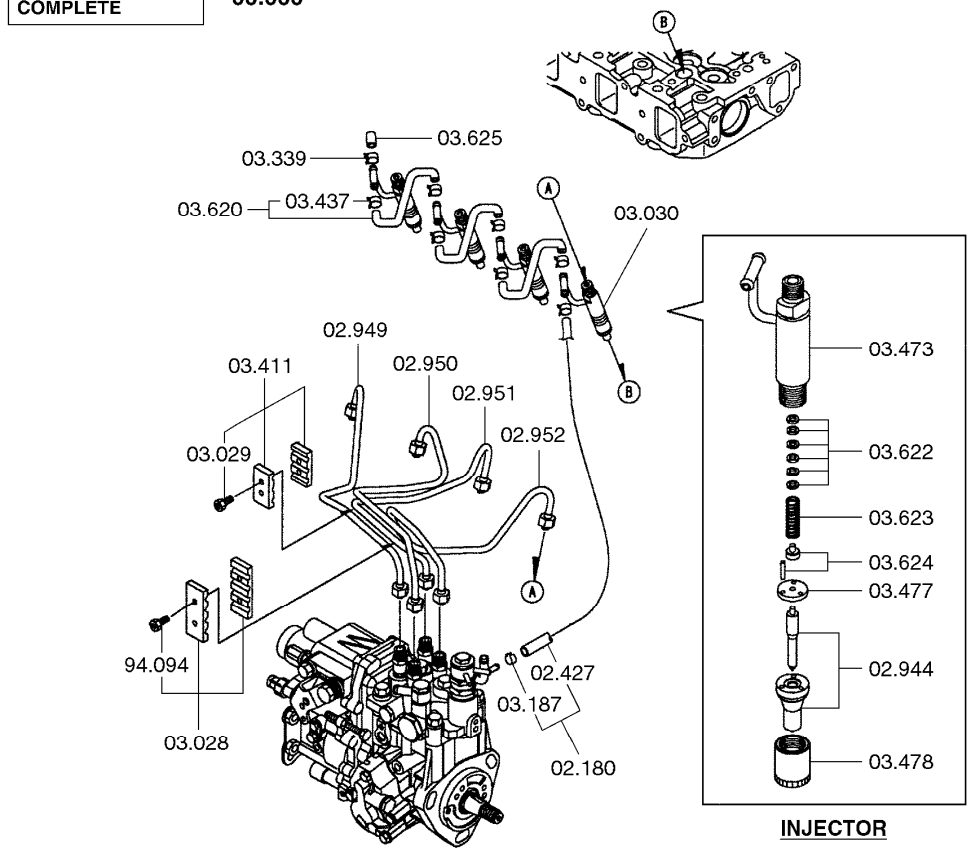

FUEL INJECTION LINES **02-296**

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

02.180 LINE, FUEL RETURN
라인

02.427 LINE, FUEL RETURN
라인

02.944 NOZZLE, FUEL INJECTOR
노즐

02.949 LINE, INJECTOR (NO 1 CYLINDER)
라인

02.950 LINE, INJECTOR (NO 2 CYLINDER)
라인

02.951 LINE, INJECTOR (NO 3 CYLINDER)
라인

02.952 LINE, INJECTOR (NO 4 CYLINDER)
라인

03.028 CLIP, INJECTOR LINE
클립

www.truck-freeworkshop.com/forklift/clark/

03.029	FASTENER, INJECTION LINE CLIP 패스너
03.030	INJECTOR ASSEMBLY, FUEL 인젝터
03.187	CLIP, FUEL LINE 클립
03.339	CLIP, FUEL INJECTOR LINE 클립
03.411	CLIP, INJECTOR LINE 클립
03.437	CLAMP, FUEL INJECTOR LINE 클램프
03.473	BODY, FUEL INJECTOR 바디
03.477	SPACER, FUEL INJECTOR PRESSURE PIN 스페이서
03.478	NUT, FUEL INJECTOR BODY RETAINING 너트
03.620	LINE, FUEL RETURN 라인
03.622	SHIM, FUEL INJECTOR HOUSING 심
03.623	SPRING, FUEL INJECTOR HOUSING 스프링
03.624	RETAINER, FUEL INJECTOR HOUSING SPRING 리테이너
03.625	CAP, FUEL INJECTOR HOUSING 캡
94.094	FASTENER, FUEL LINE CLIP 패스너

www.truck-freeworkshop.com/forklift/clark/

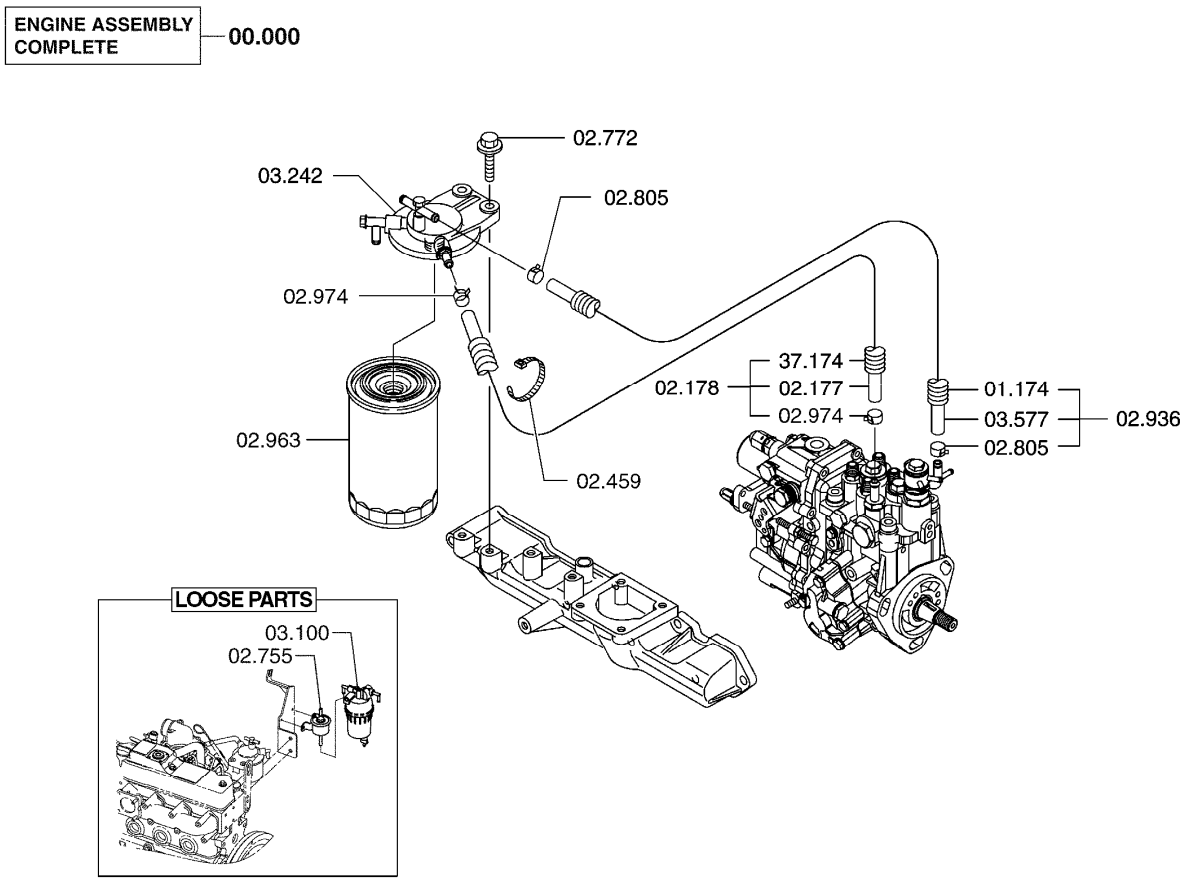

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

01.174 PROTECTOR, FUEL LINE
보호장치

02.177 LINE, FILTER INLET
라인

02.178 LINE, FILTER OUTLET
라인

02.459 CLAMP, FUEL FILTER
클램프

02.755 PUMP, FUEL
펌프

02.772 FASTENER, FUEL FILTER COVER
패스너

02.805 CLAMP, FUEL RETURN LINE
클램프

02.936 LINE, INJECTION PUMP RETURN
라인

www.truck-freeworkshop.com/forklift/clark/

02.963	ELEMENT, FUEL FILTER 엘리먼트
02.974	CLAMP, FUEL PUMP OUTLET LINE 클램프
03.100	STRAINER ASSEMBLY, FUEL 스트레이너
03.242	FITTING BODY, FUEL FILTER INLET 피팅
03.577	LINE, ENGINE FUEL FILTER 라인
37.174	PROTECTOR, OIL SUMP BREATHER LINE 보호장치

www.truck-freeworkshop.com/forklift/clark/

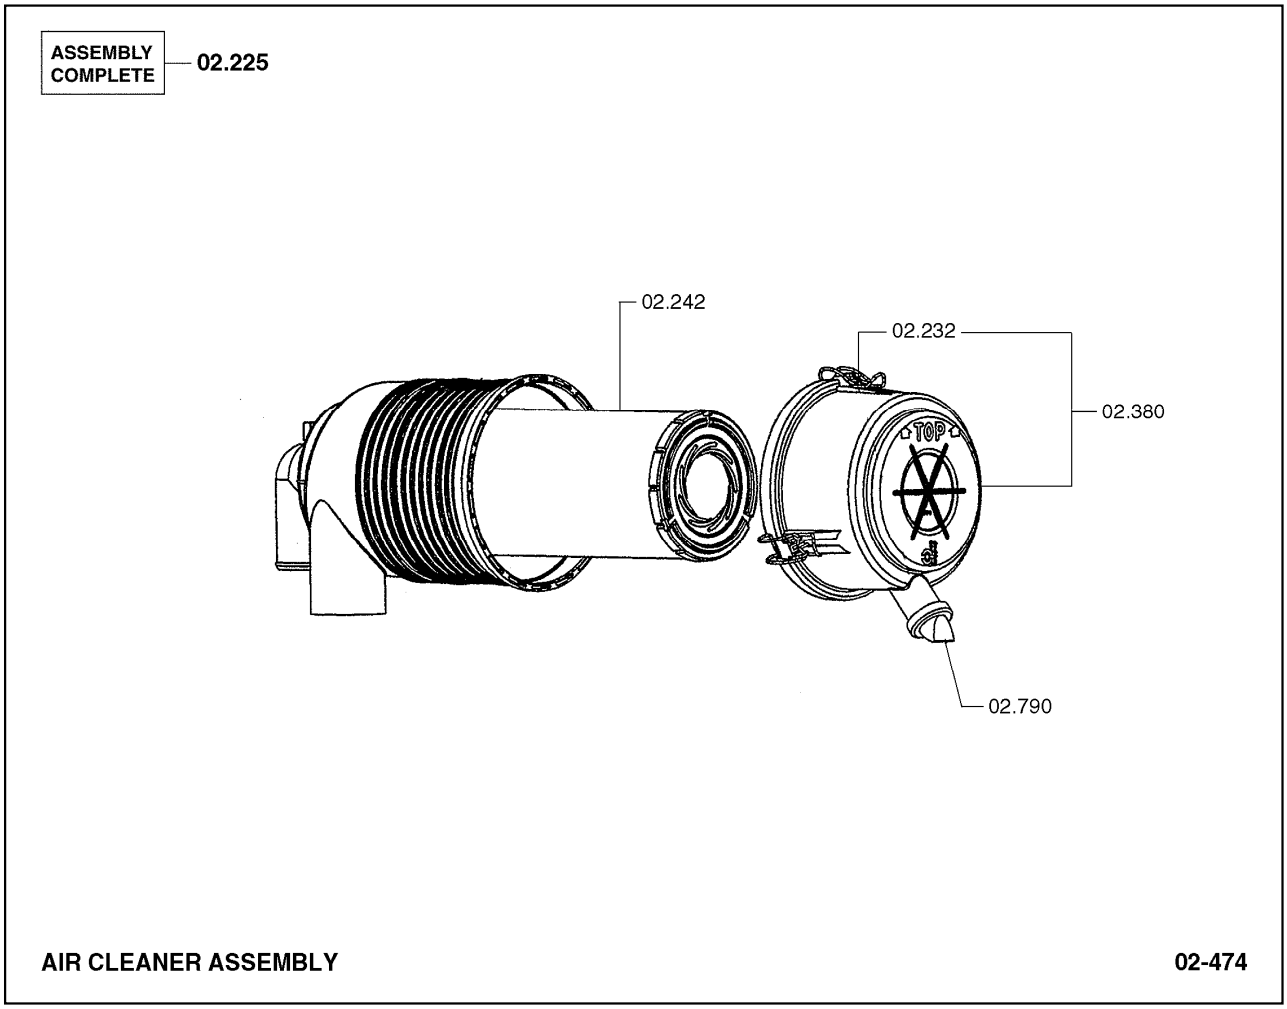

02.225	CLEANER ASSEMBLY, ENGINE INTAKE AIR 에어클리너
02.232	CLAMP, INTAKE AIR CLEANER 클램프
02.242	ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER 엘리먼트와가스켓
02.380	CAP,FILTER 캡
02.790	VALVE, ENGINE INTAKE AIR CLEANER DUST UNLDR 밸브

www.truck-freeworkshop.com/forklift/clark/

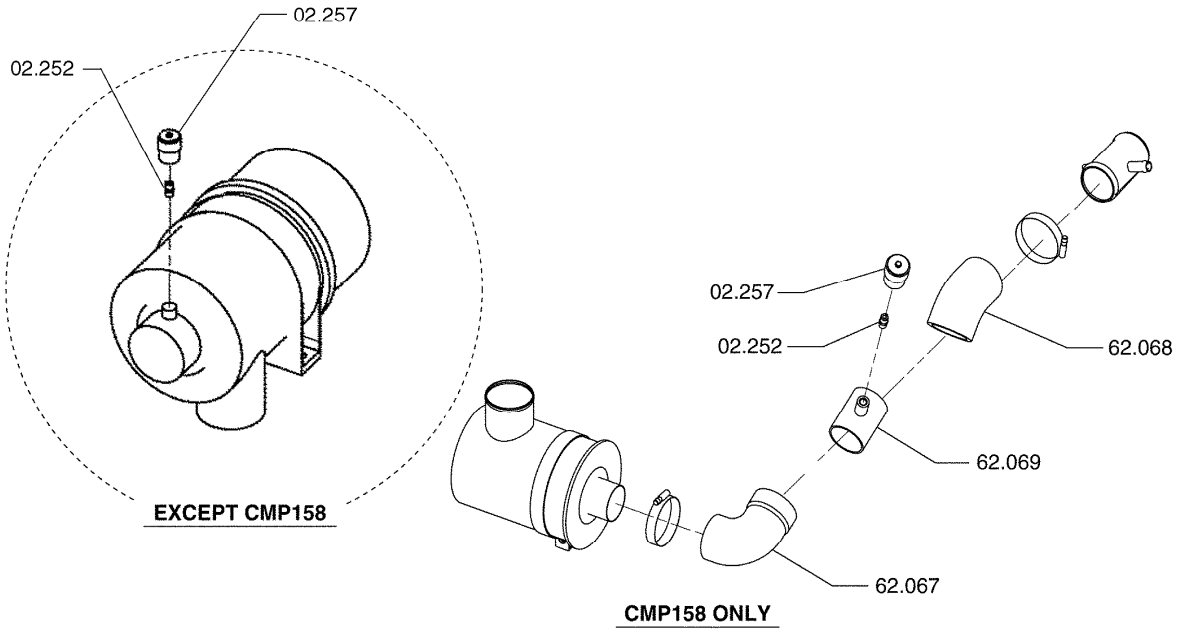

INDICATOR LIGHT INSTALLATION **02-478**

02.252	FITTING, MAIN AIR CLEANER OUTLET TUBE 피팅
02.257	INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES 인디케이터
62.067	HOSE, AIR CLEANER INTAKE 호스
62.068	HOSE, AIR CLEANER INTAKE 호스
62.069	TUBE, AIR CLEANER INTAKE 튜브

www.truck-freeworkshop.com/forklift/clark/

NOTE :
NON SERVICEABLE
ITEMS MARKED “N”

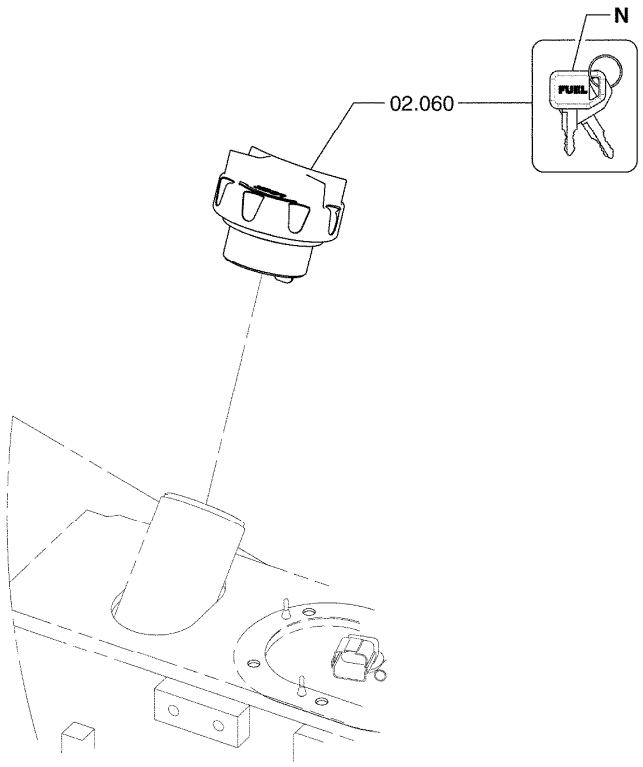

FUEL CAP WITH KEY 02-489

02.060 CAP, FUEL TANK
캡

www.truck-freeworkshop.com/forklift/clark/

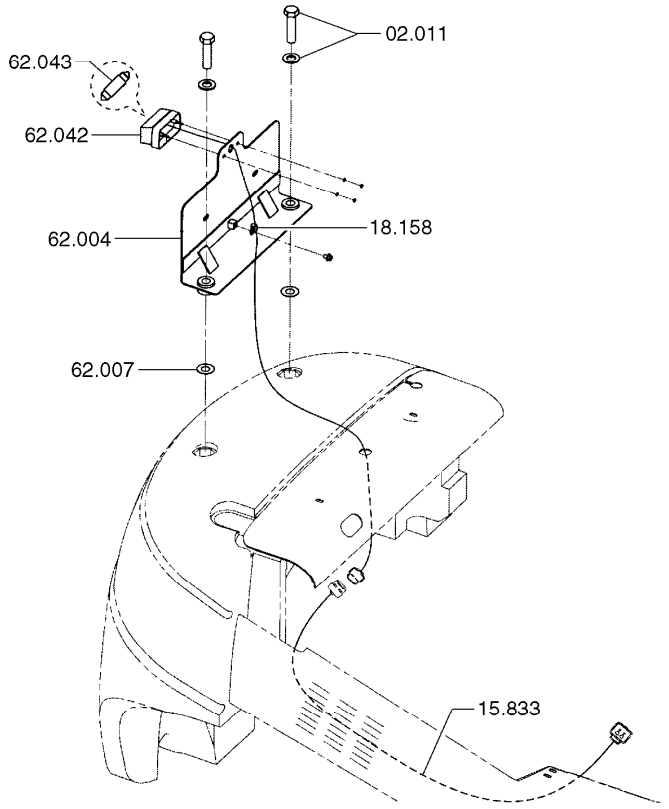

LICENSE PLATE MOUNTING **03-149**

02.011	FASTENER, TANK REAR MOUNTING BRACKET 패스너
15.833	WIRE HARNESS, LICENCE LAMP *
18.158	CLAMP,WIRE HARNESS 클램프
62.004	PLATE, LICENSE 플레이트
62.007	SHIM, TANK BRACKET 심
62.042	LAMP ASSEMBLY, LICENSE PLATE 램프
62.043	BULB, LICENSE PLATE LAMP 전구

www.truck-freeworkshop.com/forklift/clark/

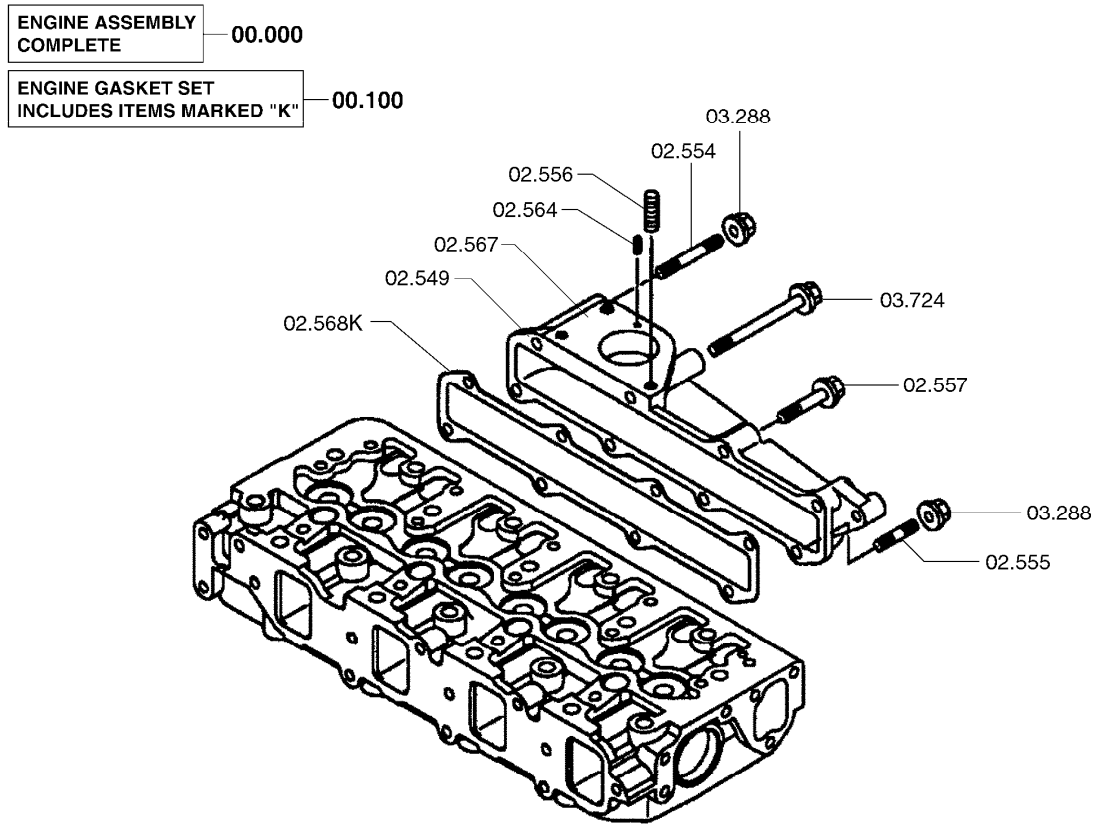

EXHAUST MANIFOLD **03-188**

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓킷
02.549	MANIFOLD, EXHAUST 매니폴드
02.554	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.555	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.556	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.557	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.564	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.567	GASKET, EXHAUST PIPE FLANGE TO MANIFOLD 가스켓

www.truck-freeworkshop.com/forklift/clark/

02.568	GASKET, INTAKE TO EXHAUST MANIFOLD 가스켓
03.288	NUT, EXHAUST MANIFOLD EXTENSION 너트
03.724	FASTENER, EXHAUST MANIFOLD 패스너

www.truck-freeworkshop.com/forklift/clark/

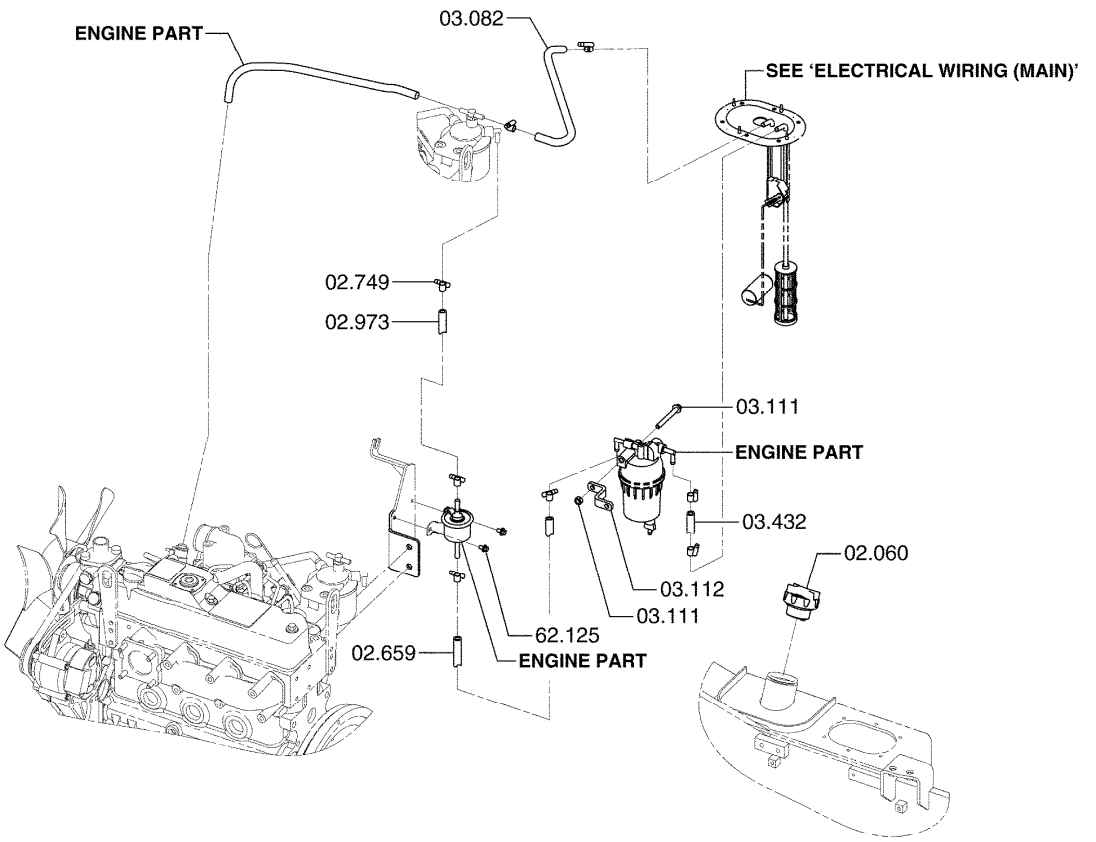

02.060 CAP, FUEL TANK
캡

02.659 LINE, FUEL PUMP INLET
*

02.749 CLAMP, TANK TO FUEL PUMP LINE
클램프

02.973 LINE, FUEL PUMP OUTLET
라인

03.082 LINE, FUEL TANK RETURN
라인

03.111 FASTENER, FUEL STRAINER
패스너

03.112 BRACKET, FUEL STRAINER MOUNTING
브라켓

03.432 LINE, FUEL STRAINER INLET
라인

62.125 FASTENER, FUEL FEED PUMP
패스너

www.truck-freeworkshop.com/forklift/clark/

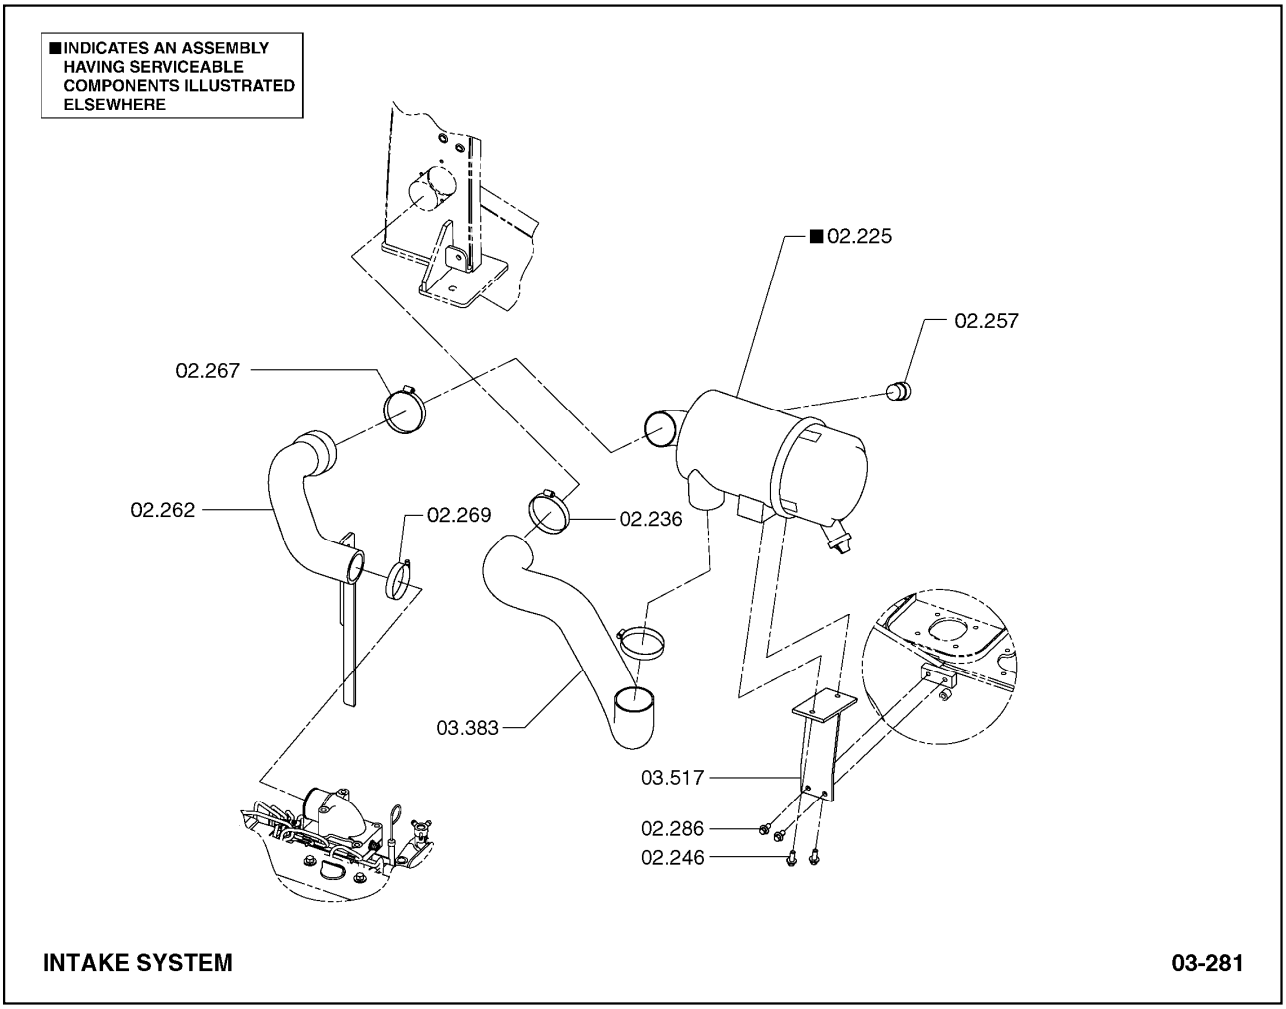

02.225 CLEANER ASSEMBLY, ENGINE INTAKE AIR
에어클리너

02.236 CLAMP, MAIN AIR CLEANER INLET HOSE
클램프

02.246 FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING
패스너

02.257 INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES
인디케이터

02.262 HOSE, MAIN AIR CLEANER OUTLET
호스

02.267 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프

02.269 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프

02.286 FASTENER, PUSH ROD
패스너

03.383 LINE, MAIN AIR CLEANER INLET LINE
라인

www.truck-freeworkshop.com/forklift/clark/

03.517 BRACKET, AIR CLEANER MOUNTING
브라켓

www.truck-freeworkshop.com/forklift/clark/

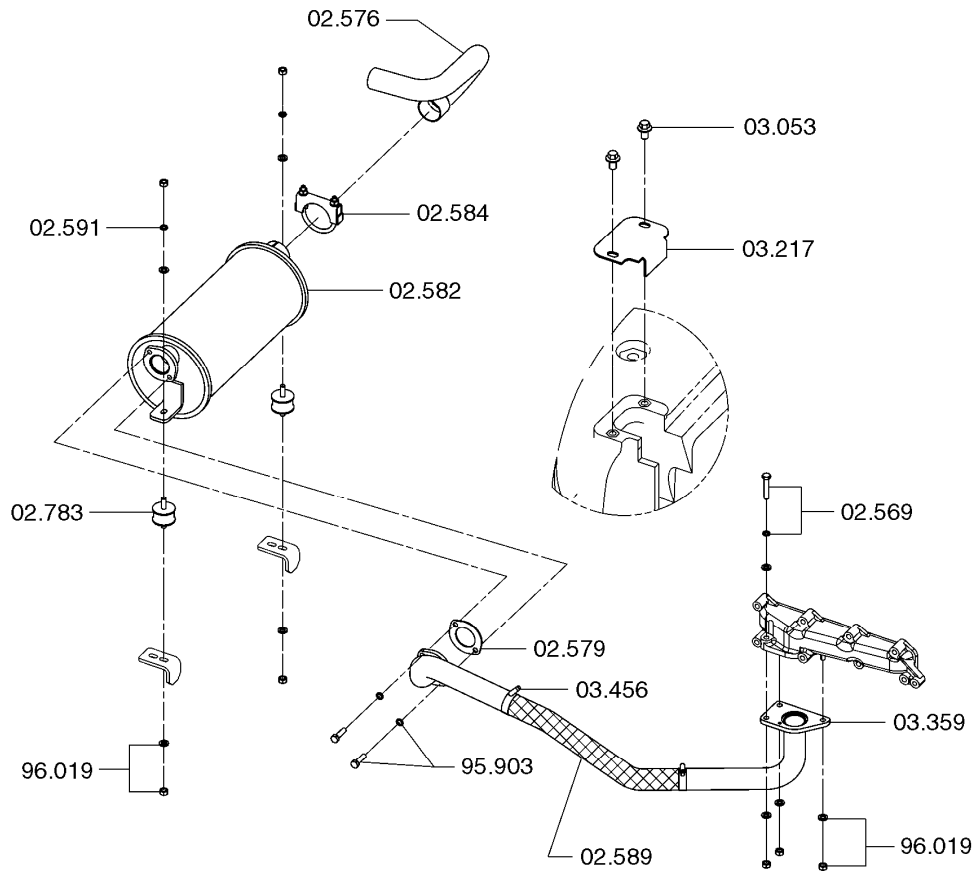

EXHAUST SYSTEM 03-369

02.569 FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD
패스너

02.576 PIPE, EXHAUST
파이프

02.579 CLAMP, EXHAUST PIPE TO MUFFLER
클램프

02.582 MUFFLER
머플러

02.584 CLAMP, TAIL PIPE TO MUFFLER
클램프

02.589 SHIELD, HEAT (AT MANIFOLD)
쉴드

02.591 FASTENER, MUFFLER MOUNTING
패스너

02.783 DAMPENER, MUFFLER MOUNTING VIBRATION
댐프너

03.053 RETAINER, TAIL PIPE GUARD
리테이너

www.truck-freeworkshop.com/forklift/clark/

03.217	PLATE, MUFFLER END 플레이트
03.359	PIPE, EXHAUST 파이프
03.456	CLAMP, EXHAUST PIPE HEAT SHIELD 클램프
95.903	FASTENER, EXHAUST PIPE BRACKET 패스너
96.019	FASTENER, EXHAUST PIPE BRACKET 패스너

www.truck-freeworkshop.com/forklift/clark/

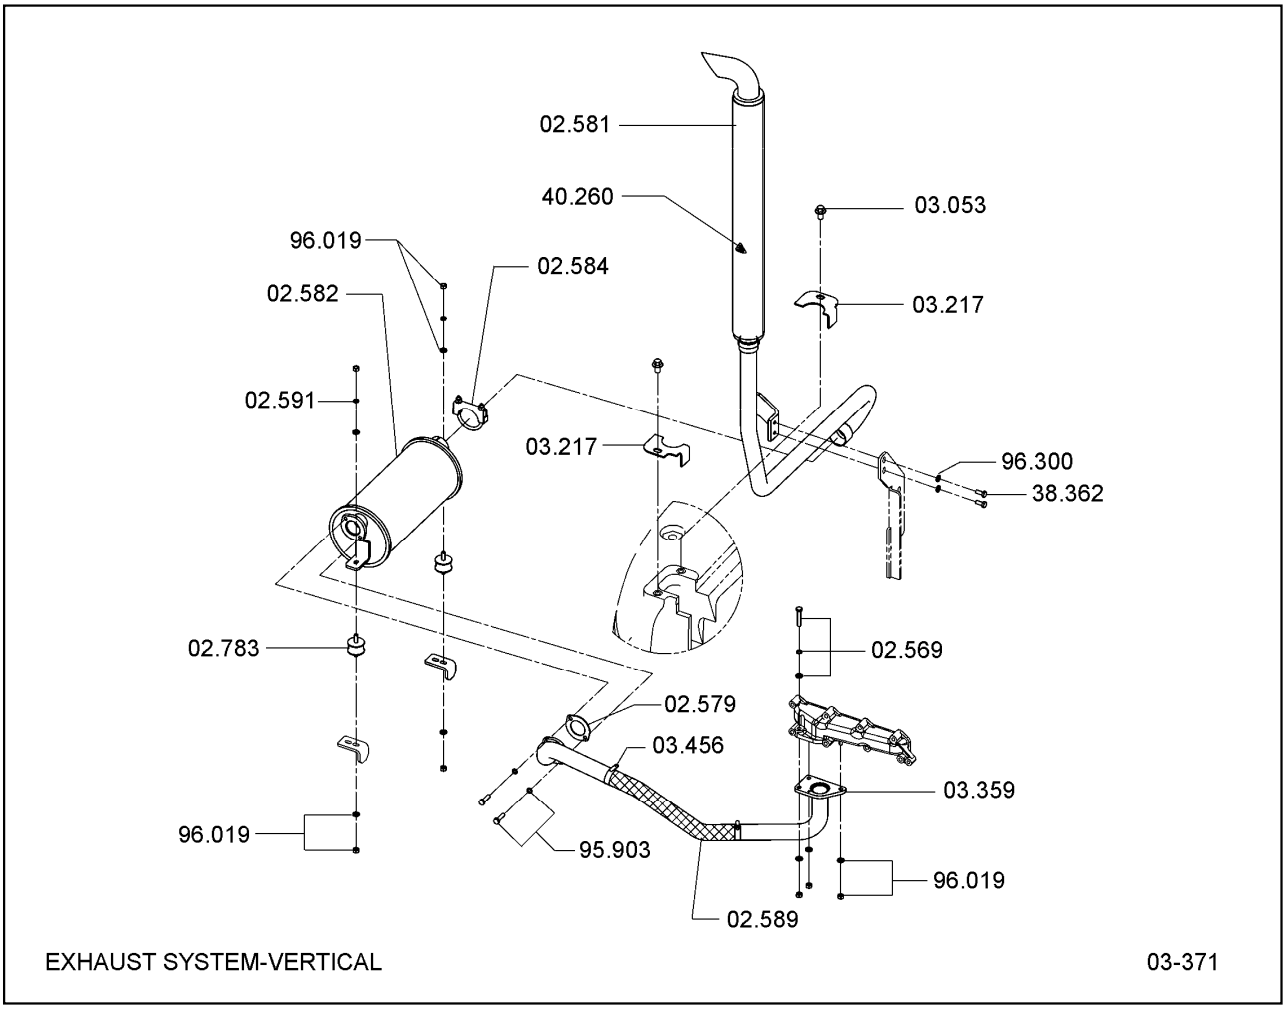

02.569 FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD
패스너

02.579 CLAMP, EXHAUST PIPE TO MUFFLER
클램프

02.581 EXTENSION, TAIL PIPE
익스텐션

02.582 MUFFLER
머플러

02.584 CLAMP, TAIL PIPE TO MUFFLER
클램프

02.589 SHIELD, HEAT (AT MANIFOLD)
쉴드

02.591 FASTENER, MUFFLER MOUNTING
패스너

02.783 DAMPENER, MUFFLER MOUNTING VIBRATION
댐프너

03.053 RETAINER, TAIL PIPE GUARD
리테이너

www.truck-freeworkshop.com/forklift/clark/

03.217	PLATE, MUFFLER END 플레이트
03.359	PIPE, EXHAUST 파이프
03.456	CLAMP, EXHAUST PIPE HEAT SHIELD 클램프
38.362	FASTENER, COUNTERWEIGHT COMPARTMENT COVER 패스너
40.260	DECAL, HOT SURFACE WARNING 데칼
95.903	FASTENER, EXHAUST PIPE BRACKET 패스너
96.019	FASTENER, EXHAUST PIPE BRACKET 패스너
96.300	FASTENER, COUNTERWEIGHT COVERING 패스너

www.truck-freeworkshop.com/forklift/clark/

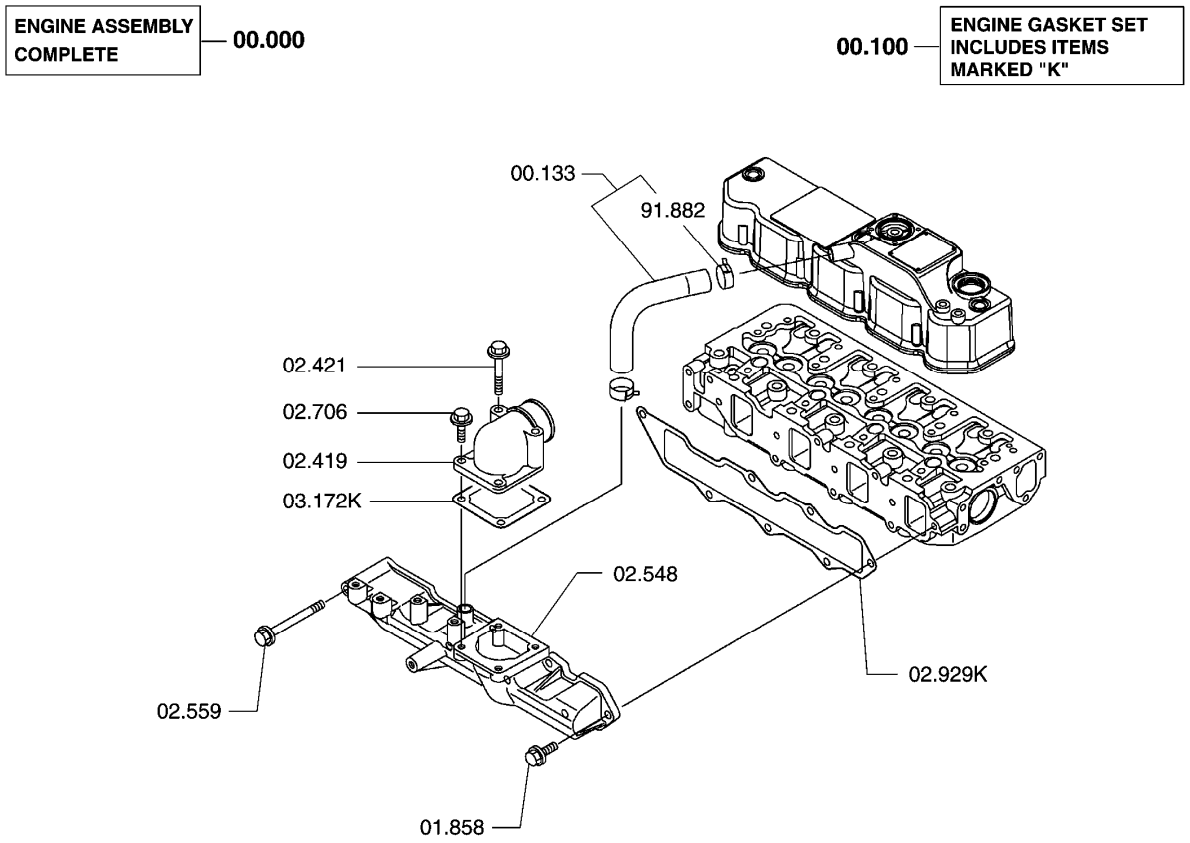

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.100 GASKET KIT, ENGINE OVERHAUL
가스켓킷

00.133 TUBE, CRANKCASE VENT
튜브

01.858 FASTENER, INTAKE MANIFOLD
패스너

02.419 ADAPTOR, ENGINE AIR INTAKE
어댑터

02.421 FASTENER, ENGINE AIR INTAKE ADAPTOR
패스너

02.548 MANIFOLD, INTAKE
매니폴드

02.559 FASTENER, MANIFOLD TO CRANKCASE
패스너

02.706 FASTENER, AIR INTAKE ADAPTOR
패스너

www.truck-freeworkshop.com/forklift/clark/

02.929	GASKET, INTAKE MANIFOLD 가스켓
03.172	GASKET, COLD START RESERVOIR COVER 가스켓
91.882	CLAMP, INTAKE MANIFOLD FASTENER 클램프

www.truck-freeworkshop.com/forklift/clark/

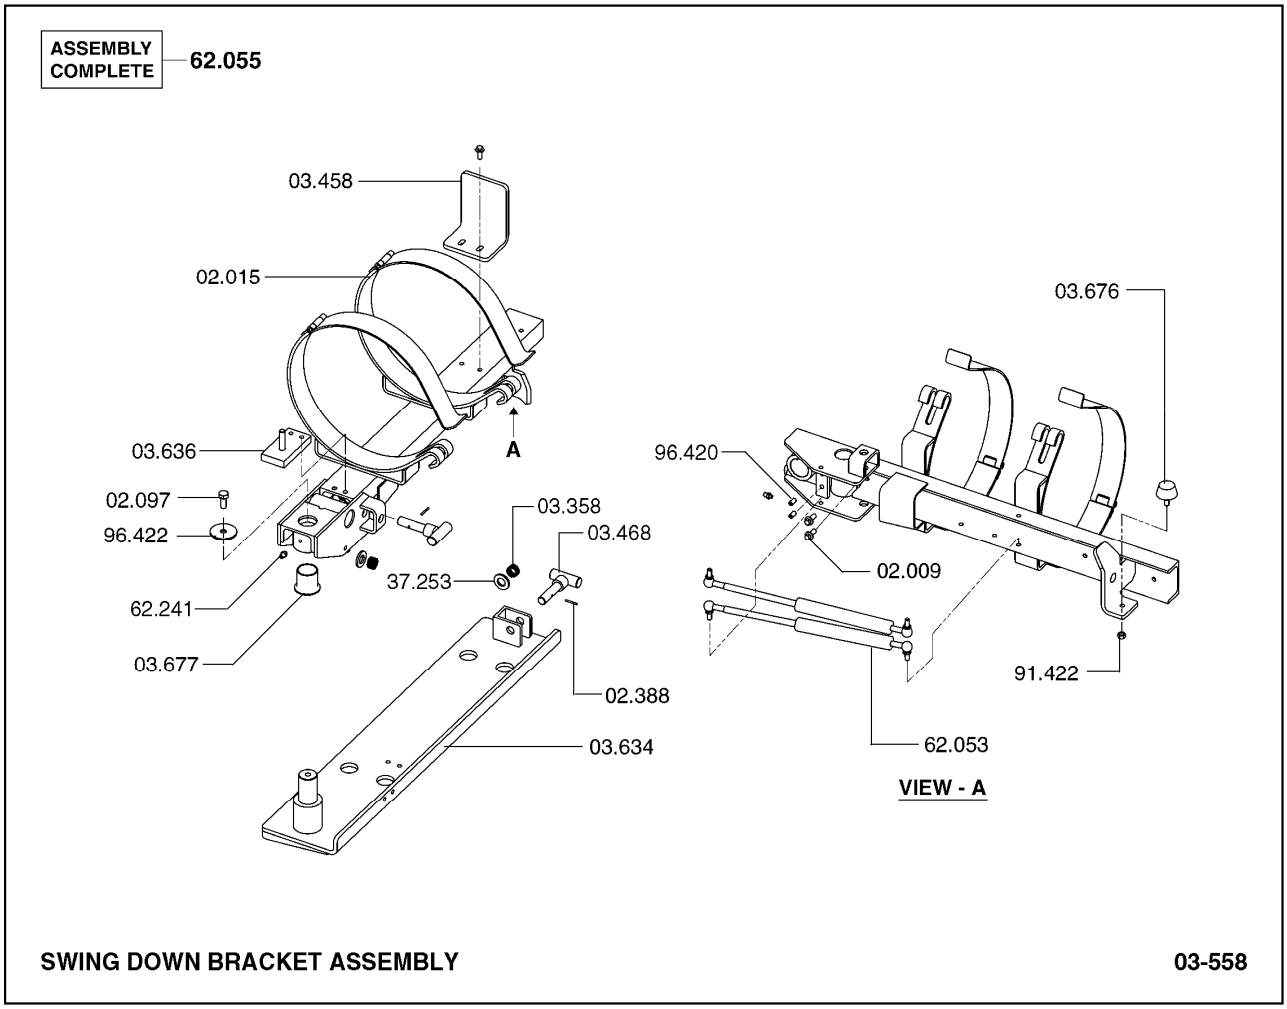

SWING DOWN BRACKET ASSEMBLY **03-558**

02.009	FASTENER, LPG TANK GUARD MOUNTING 패스너
02.015	STRAP, LPG TANK CLAMP 스트랩
02.097	FASTENER, TANK GUARD PIVOT ROD 패스너
02.388	PIN, TANK LOCATING 핀
03.358	CAP, FUEL TANK 캡
03.458	BRACKET, LPG TANK LOCATING PIN 브라켓
03.468	HANDLE, LPG TANK MOUNTING BRACKET 핸들
03.634	SUPPORT, LPG TANK BRACKET 서포트
03.636	SUPPORT, LPG TANK MOUNTING BRACKET 서포트

www.truck-freeworkshop.com/forklift/clark/

03.676	STOP, LPG TANK PIVOT 스톱
03.677	BUSHING, LPG TANK PIVOT 부싱
37.253	WASHER, GAS TANK SHIELD FASTENER 와셔
62.053	PROP, SWING DOWN LPG TANK MTG 프롭
62.055	BRACKET, SWING DOWN LPG TANK MTG 브라켓
62.241	FITTING-LUB, LPG TANK BRACKET PIVOT *
91.422	NUT, LPG TANK SUPPORT 너트
96.420	FASTENER, LPG TANK MOUNTING BRACKET 패스너
96.422	WASHER, LPG TANK BRACKET PIVOT 와셔

www.truck-freeworkshop.com/forklift/clark/

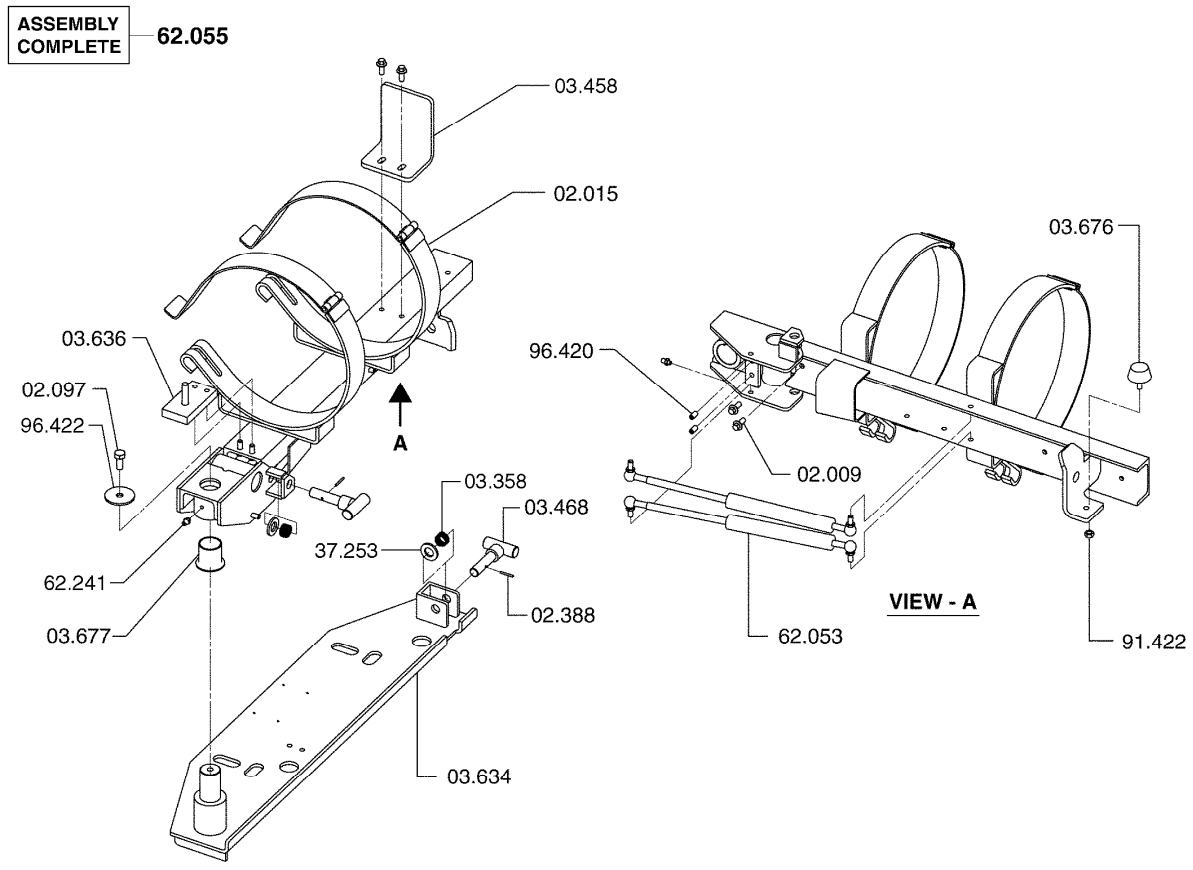

SWING DOWN BRACKET ASSEMBLY **03-559**

02.009	FASTENER, LPG TANK GUARD MOUNTING 패스너
02.015	STRAP, LPG TANK CLAMP 스트랩
02.097	FASTENER, TANK GUARD PIVOT ROD 패스너
02.388	PIN, TANK LOCATING 핀
03.358	CAP, FUEL TANK 캡
03.458	BRACKET, LPG TANK LOCATING PIN 브라켓
03.468	HANDLE, LPG TANK MOUNTING BRACKET 핸들
03.634	SUPPORT, LPG TANK BRACKET 서포트
03.636	SUPPORT, LPG TANK MOUNTING BRACKET 서포트

www.truck-freeworkshop.com/forklift/clark/

03.676	STOP, LPG TANK PIVOT 스톱
03.677	BUSHING, LPG TANK PIVOT 부싱
37.253	WASHER, GAS TANK SHIELD FASTENER 와셔
62.053	PROP, SWING DOWN LPG TANK MTG 프롭
62.055	BRACKET, SWING DOWN LPG TANK MTG 브라켓
62.241	FITTING-LUB, LPG TANK BRACKET PIVOT *
91.422	NUT, LPG TANK SUPPORT 너트
96.420	FASTENER, LPG TANK MOUNTING BRACKET 패스너
96.422	WASHER, LPG TANK BRACKET PIVOT 와셔

www.truck-freeworkshop.com/forklift/clark/

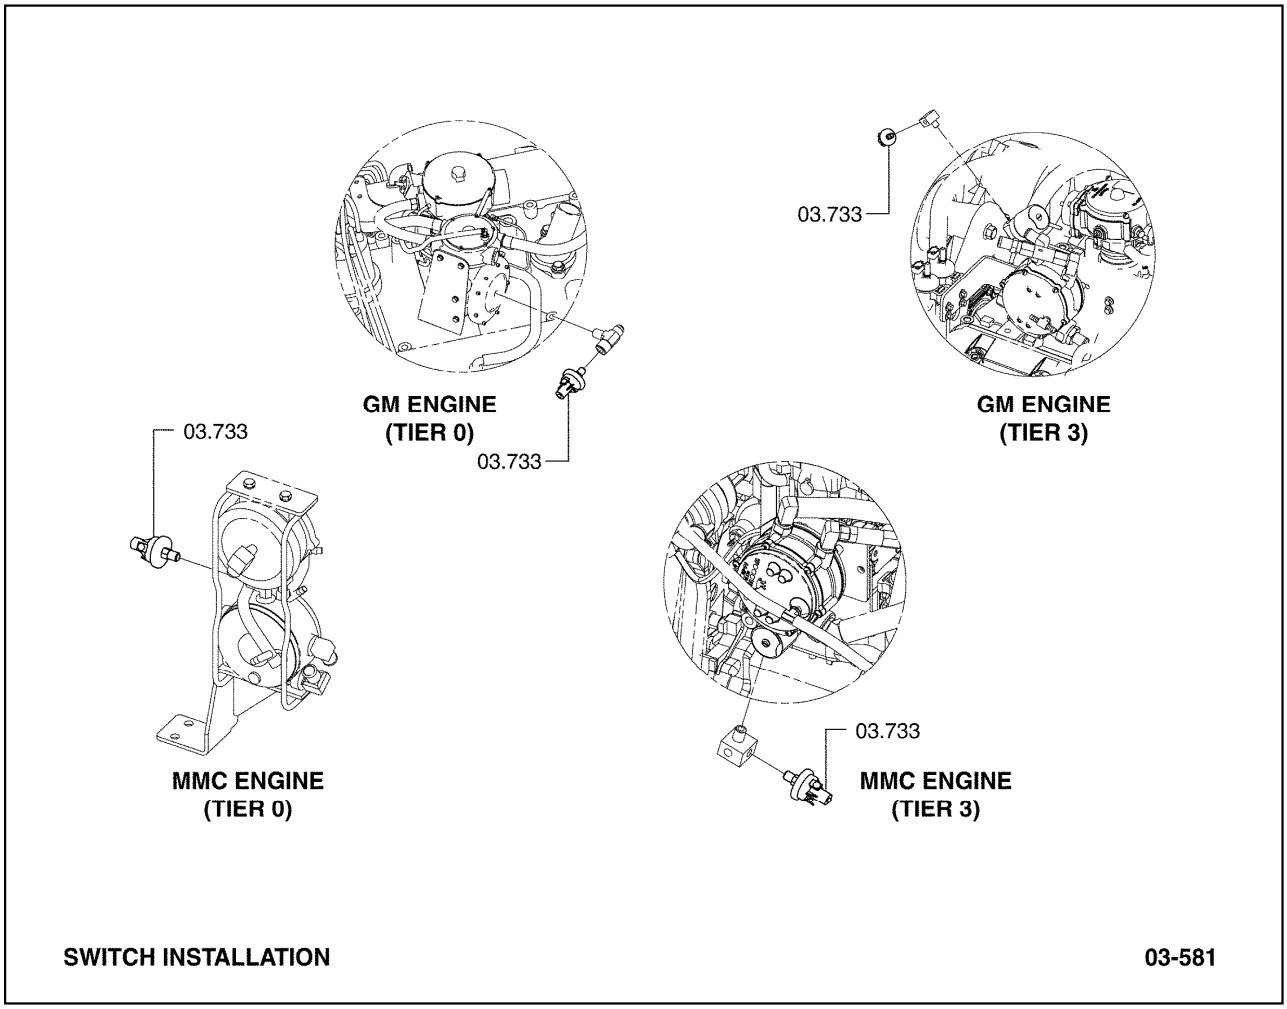

03.733 SWITCH,LPG PRESSURE
스위치

www.truck-freeworkshop.com/forklift/clark/

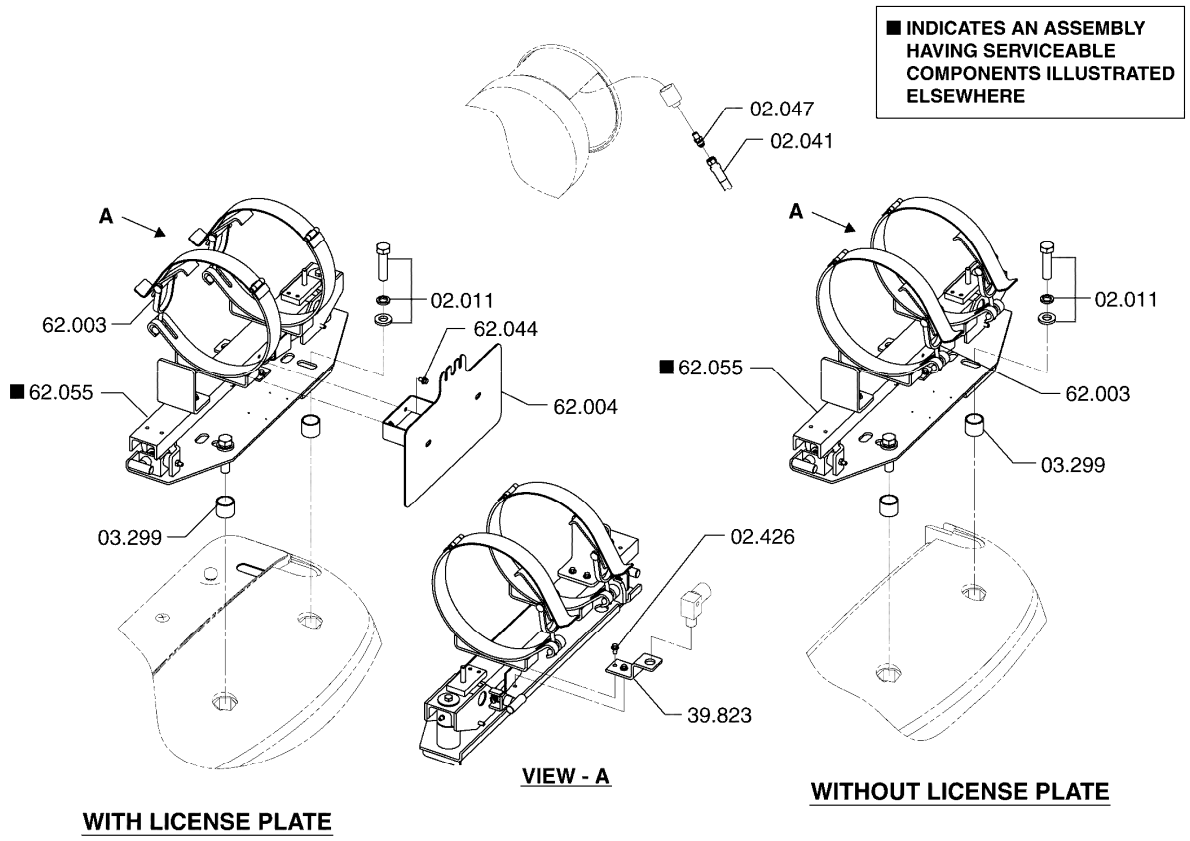

02.011	FASTENER, TANK REAR MOUNTING BRACKET 패스너
02.041	LINE, LP GAS TANK OUTLET 라인
02.047	FITTING, LPG ADAPTOR OUTLET 피팅
02.426	FASTENER, FUEL FILTER BRACKET 패스너
03.299	SPACER, LPG TANK GUARD MOUNTING FASTENER 스페이서
39.823	BRACKET, FUEL FILTER 브라켓
62.003	CLAMP, LPG TANK 클램프
62.004	PLATE, LICENSE 플레이트
62.044	FASTENER, LICENSE PLATE MOUNTING 패스너

www.truck-freeworkshop.com/forklift/clark/

62.055 BRACKET, SWING DOWN LPG TANK MTG
브라켓

www.truck-freeworkshop.com/forklift/clark/

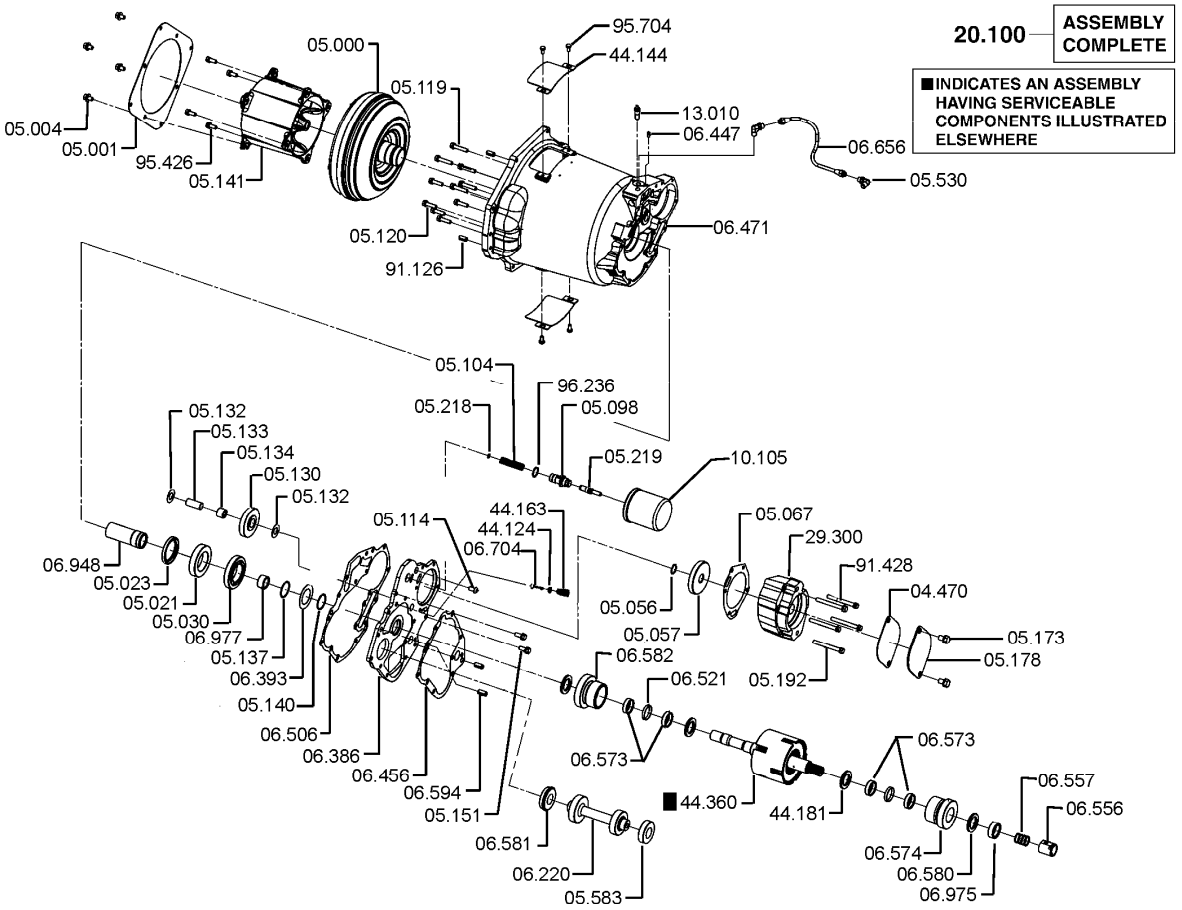

04.470	GASKET, HYDRAULIC PUMP MOUNTING 가스켓	05.130	SHAFT, CONVERTER PUMP IDLER GEAR 샤프트
05.000	CONVERTER ASSEMBLY, TORQUE 컨버터	05.132	THRUST WASHER, CONVERTOR PUMP IDLER GEAR 트러스트와셔
05.001	GEAR, CONVERTER RING 기어	05.133	GEAR, CONVERTOR PUMP IDLER 기어
05.004	FASTENER, CONVERTER DRIVE & REINFORCING PLATE 패스너	05.134	BEARING, CONVERTOR PUMP IDLER GEAR 베어링
05.021	BEARING, IMPELLER HUB 베어링	05.137	LOCATOR, CONVERTER STATOR SUPPORT (OUTER) 로케이터
05.023	SEAL, CONVERTER IMPELLER HUB 시일	05.140	LOCATOR, CONVERTER STATOR SUPPORT (INNER) 로케이터
05.030	GEAR, IMPELLER HUB 기어	05.141	ADAPTOR, CONVERTER DRIVE 어댑터
05.056	RING-RETAINING, PUMP DRIVE GEAR 링	05.151	BREATHER, CONVERTER AIR 브리더
05.057	GEAR, PUMP DRIVE 기어	05.173	FASTENER, CONVERTER PUMP COVER 패스너
05.067	GASKET, CONVERTER PUMP 가스켓	05.178	COVER, CONVERTER PUMP 커버
05.098	SLEEVE, IMPELLER COVER 슬리브	05.192	LOCKWASHER, CONVERTER PUMP FASTENER 로크와셔
05.104	SPRING, INNER 스프링	05.218	BODY, PRESSURE REGULATING VALVE 바디
05.114	FASTENER, CONVERTER TO CASE 패스너	05.219	PISTON, PRESSURE REGULATING VALVE 피스톤
05.119	FASTENER, CONVERTER CASE 패스너	05.530	FITTING, TORQUE CONVERTER INLET LINE 피팅
05.120	FASTENER, CONVERTER TO CASE 패스너	06.220	GEAR, REVERSE IDLER 기어

www.truck-freeworkshop.com/forklift/clark/

06.386	ADAPTOR, CONVERTER END 어댑터
06.393	WASHER KIT, FORWARD CLUTCH CYLINDER THRUST 와셔킷
06.447	PLUG, TRANSMISSION CASE 플러그
06.456	GASKET, TRANSMISSION ADAPTOR 가스켓
06.471	HOUSING, CONVERTER 하우징
06.506	SEAL, CONVERTER HOUSING TO CASE-INNER 시일
06.521	BALL, INCHING RELIEF VALVE 볼
06.556	DISTRIBUTOR, TRANSMISSION DIRECTION SEL OIL 디스트리뷰터
06.557	SEAL, TRANSMISSION DIRECTION SELECTOR OIL DIST 시일
06.573	BEARING, FORWARD GEAR 베어링
06.574	GEAR & BEARING FORWARD 기어와베어링
06.580	THRUST WASHER, REVERSE CLUTCH HUB & DRUM 트러스트와셔
06.581	BEARING, REVERSE GEAR 베어링
06.582	GEAR & BEARING, REVERSE 기어욱붕어링
06.594	GEAR & BEARING, 2ND 기어와베어링
06.656	LINE, TRANS VALVE PRESS PUMP INLET 라인
06.704	VALVE, TRANSMISSION PRESSURE RELIEF 밸브
06.948	SLEEVE, CLUTCH OIL DISTRIBUTION 슬리브
06.975	BEARING, REVERSE CLUTCH HUB (AXLE END) 베어링
06.977	BEARING, REVERSE CLUTCH HUB (ENGINE END) 베어링
10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트와가스켓
13.010	CONTROL, CONVERTOR TEMPERATURE INDICATOR 컨트롤
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
44.124	SPRING, TRANSMISSION SAFETY VALVE 스프링
44.144	COVER, CONVERTER HOUSING 커버
44.163	STOP, TRANSMISSION SAFETY VALVE 스톱
44.181	BEARING, CLUTCH SHAFT THRUST 베어링
44.360	TURBINE SHAFT, DRUM & CLUTCH ASSY 터빈샤프트
91.126	DOWEL RING, FLYWHEEL HOUSING FASTENER 다월링
91.428	LOCKWASHER, CONVERTER CHARGING PUMP FAST 로크와셔
95.426	FASTENER, CONVERTER DRIVE ADAPTOR 패스너
95.704	FASTENER, CONVERTER HOUSING PLATE 패스너
96.236	SPACER, CONVERTER PRESSURE REGULATING VALVE 스페이서

www.truck-freeworkshop.com/forklift/clark/

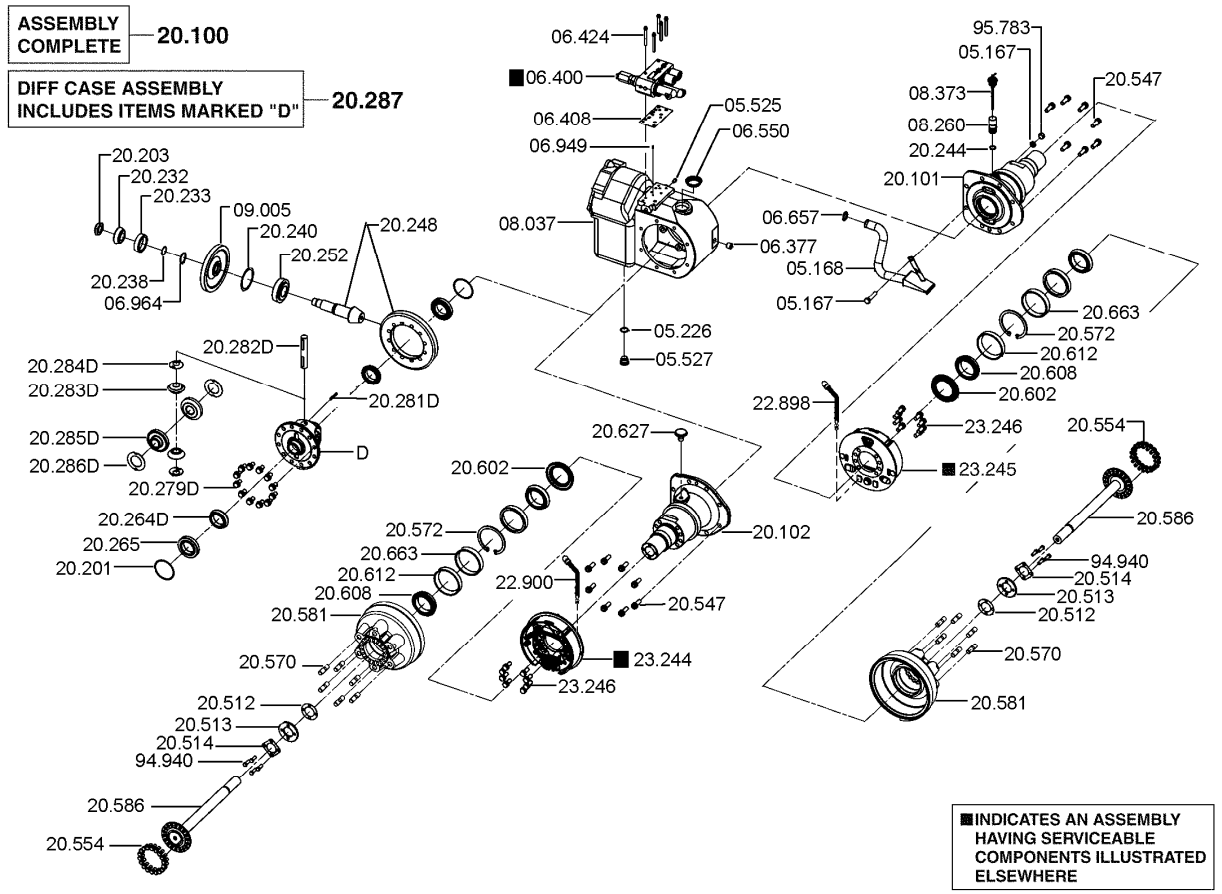

05.167	FASTENER, CONVERTER PUMP INLET LINE 패스너
05.168	LINE, CONVERTER PUMP INLET 라인
05.226	SEAL, CONVERTER PRESSURE PORT PLUG 시일
05.525	PLUG, TRANSMISSION CASE 플러그
05.527	PLUG, TRANSMISSION CASE 플러그
06.377	PLUG, TRANSMISSION SUMP OIL LEVEL 플러그
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버와밸브
06.408	GASKET, CONTROL COVER ATTACHING 가스켓
06.424	FASTENER, CONTROL COVER 패스너
06.550	COVER, TRANSMISSION HOUSING INSPECTION 커버
06.657	SEAL, TRANS VALVE PRESS PUMP INLET LINE 시일
06.949	RETAINER, CLUTCH OIL DISTRIBUTION SLEEVE 리테이너
06.964	RING, OUTPUT SHAFT GEAR LOCATING 링
08.037	CASE, TRANSMISSION 케이스
08.260	TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT 튜브
08.373	DIPSTICK, TRANSMISSION 딥스틱
09.005	GEAR, OUTPUT 기어
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
20.101	HOUSING, TRANSAXLE WHEEL END - LH 하우징
20.102	HOUSING, TRANSAXLE WHEEL END - RH 하우징
20.201	SHIM, DIFF BRG CARRIER TO AXLE HOUSING 심
20.203	NUT, DIFFERENTIAL PINION COMPANION FLANGE 너트
20.232	CONE, DIFFERENTIAL PINION OUTER BEARING 콘
20.233	CUP, DIFFERENTIAL PINION OUTER BEARING 컵
20.238	SHIM KIT, DIFFERENTIAL PINION BEARING CAGE 심
20.240	SPACER, DIFFERENTIAL PINION BEARING 스페이서
20.244	SEAL, DIFFERENTIAL OIL LEVEL DIPSTICK SUPPORT 시일
20.248	RING GEAR & PINION SET, DIFFERENTIAL 링
20.252	BEARING, DIFFERENTIAL PINION INNER 베어링
20.264	CONE, DIFFERENTIAL BEARING 콘

www.truck-freeworkshop.com/forklift/clark/

20.265	CUP, DIFFERENTIAL BEARING 컵
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너
20.281	FASTENER, DIFF SIDE PINION PIN 패스너
20.282	SPIDER, DIFFERENTIAL PINION 스파이더
20.283	GEAR, DIFFERENTIAL SIDE PINION 기어
20.284	WASHER, DIFF SIDE PINION GEAR THRUST 와셔
20.285	GEAR, DIFFERENTIAL SIDE 기어
20.286	WASHER, DIFFERENTIAL SIDE GEAR THRUST 와셔
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스와기어
20.512	SHIM, DRIVE AXLE HUB BEARING 심
20.513	RETAINER, DRIVE AXLE HUB BEARING 리테이너
20.514	LOCKPLATE, DRIVE AXLE HUB BEARING RETAINER 로크플레이트
20.547	FASTENER, DRIVE AXLE END 패스너
20.554	FASTENER, DRIVE AXLE HUB CAP 패스너
20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너
20.572	LOCATOR, DRIVE AXLE SHAFT BEARING 로케이터
20.581	HUB ASSEMBLY, DRIVE AXLE 허브
20.586	SHAFT, DRIVE AXLE 샤프트
20.602	SEAL, DRIVE AXLE HUB INNER OIL 시일
20.608	CONE, DRIVE AXLE HUB INNER BEARING 콘
20.612	CUP, DRIVE AXLE HUB INNER BEARING 컵
20.627	VENT, DIFFERENTIAL & AXLE 벤트
20.663	SPACER, DRIVE AXLE HUB BEARING 스페이서
22.898	CABLE, PARKING BRAKE DRAW - LH 케이블
22.900	CABLE, PARKING BRAKE DRAW - RH 케이블
23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
23.246	FASTENER, BRAKE ASSEMBLY 패스너
94.940	FASTENER, DRIVE AXLE HUB BEARING RETAINER 패스너
95.783	NUT, CONVERTER OIL SUCTION TUBE FASTENER 너트

www.truck-freeworkshop.com/forklift/clark/

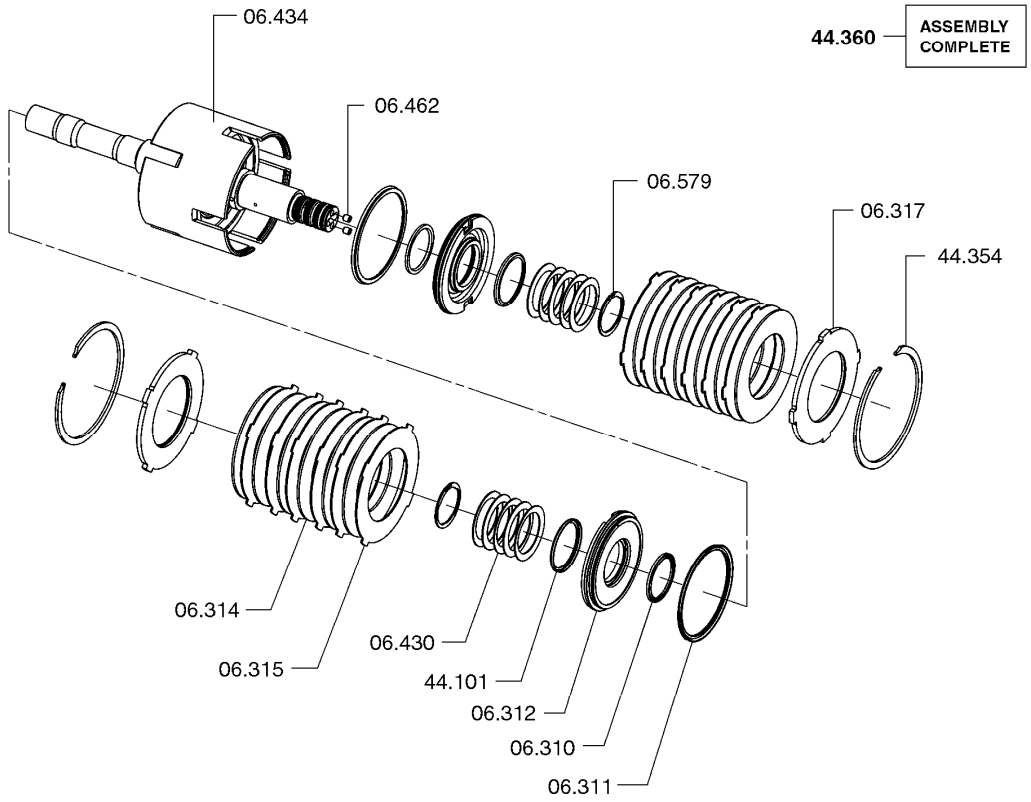

TRANSMISSION CLUTCH PACK **06-113**

06.310 SEAL, FORWARD CLUCH PISTON INNER
시일

06.311 SEAL, FORWARD CLUTCH PISTON OUTER
시일

06.312 PISTON, FORWARD CLUTCH
피스톤

06.314 DISC, FORWARD CLUTCH INNER
디스크

06.315 DISC, FORWARD CLUTCH OUTER
디스크

06.317 PLATE, FORWARD CLUTCH DISC END
플레이트

06.430 SPRING, FORWARD CLUTCH PISTON RETURN
스프링

06.434 SHAFT & GEAR, CLUTCH DRIVE
샤프트와기어

06.462 PLUG, REVERSE UNIT
플러그

www.truck-freeworkshop.com/forklift/clark/

06.579	FASTENER, REVERSE CLUTCH SPRING RETAINER 패스너
44.101	THRUST WASHER, CLUTCH SHAFT PILOT BEARING 트러스트와셔
44.354	RING, CLUTCH PACK RETAINING 링
44.360	TURBINE SHAFT, DRUM & CLUTCH ASSY 터빈샤프트

www.truck-freeworkshop.com/forklift/clark/

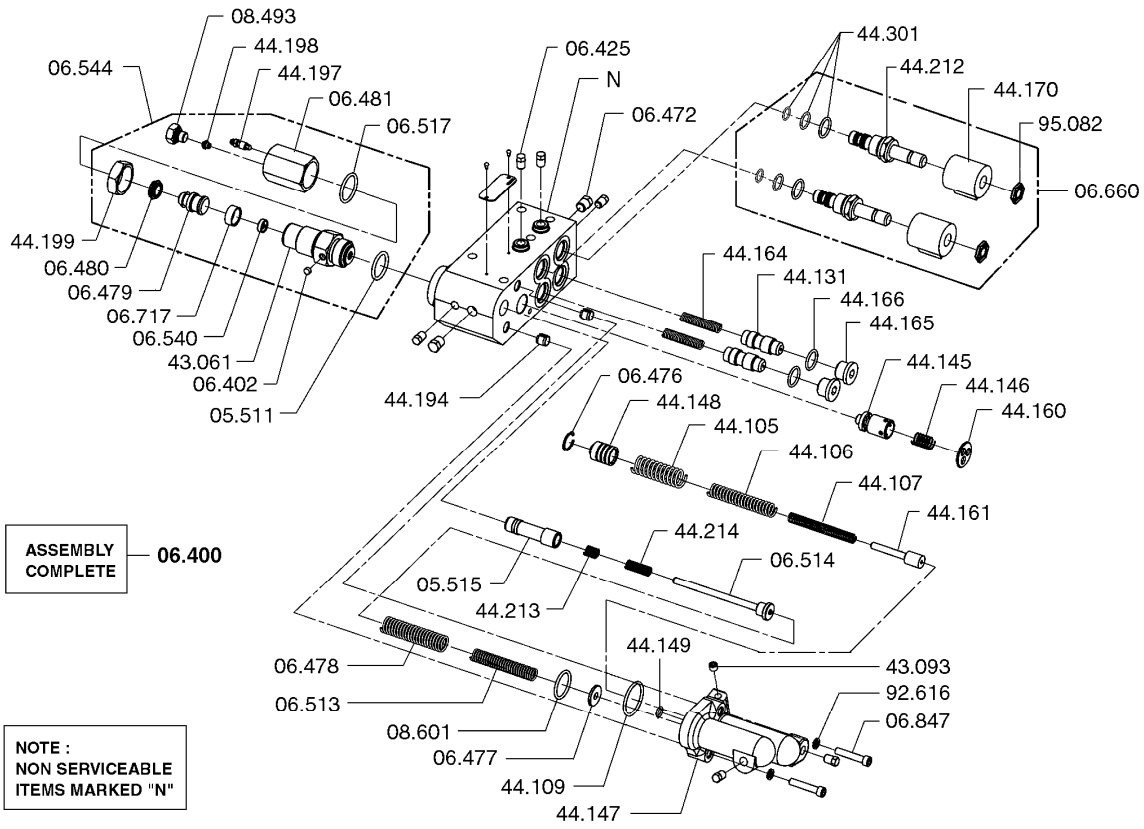

05.511	SEAL, INCHING PISTON HOUSING 시일
05.515	SPOOL, INCHING 스풀
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버와밸브
06.402	VENT, CONTROL COVER AIR 벤트
06.425	PLUG, CONTROL COVER OIL PASSAGE 플러그
06.472	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그
06.476	RETAINER, INCHING VALVE PISTON 리테이너
06.477	WASHER, INCHING VALVE PISTON 와셔
06.478	SPRING, INCHING PISTON RETURN 스프링
06.479	PISTON, INCHING 피스톤
06.480	SEAL, INCHING PISTON 시일
06.481	FITTING, INCHING VALVE PISTON PORT 피팅
06.513	SPRING, INCHING VALVE 스프링
06.514	ROD, INCHING VALVE 로드
06.517	SEAL, INCHING VALVE PISTON PORT FITTING 시일
06.540	SEAL, INCHING PISTON HOUSING 시일
06.544	HOUSING, INCHING PISTON 하우징
06.660	SOLENOID ASSEMBLY, TRANSMISSION 솔레노이드
06.717	SEAL, CONTROL COVER OIL PASSAGE 시일
06.847	FASTENER, ACCUMULATOR HOUSING 패스너
08.493	PLUG, SPEED CHANGE NEEDLE VALVE HOUSING 플러그
08.601	GASKET, MODULATION VALVE 가스켓
43.061	HOUSING, CONTROL VALVE INCHING PISTON 하우징
43.093	PLUG, CONTROL VALVE HOUSING 플러그
44.105	SPRING, TRANSMISSION ACCUMULATOR OUTER 스프링
44.106	SPRING, TRANSMISSION ACCUMULATOR MIDDLE 스프링
44.107	SPRING, TRANSMISSION ACCUMULATOR INNER 스프링
44.109	SEAL, TRANSMISSION ACCUMULATOR BORE PLUG 시일
44.131	SPOOL, FORWARD & REVERSE 스풀
44.145	SPOOL, MODULATOR 스풀

www.truck-freeworkshop.com/forklift/clark/

44.146 SPRING, MODULATOR SPOOL
스프링

44.147 HOUSING, TRANSMISSION CONTROL ACCUMULATOR
하우징

44.148 SPOOL, ACCUMULATOR
스풀

44.149 SEAL, ACCUMULATOR HOUSING TO CONTROL VALVE
시일

44.160 SEAT, TRANSMISSION SHIFT MODULATOR SPOOL SPRING
시트

44.161 STOP, TRANSMISSION ACCUMULATOR SPOOL
스톱

44.164 SPRING, TRANSMISSION FORWARD & REVERSE VALVE SPO
스프링

44.165 CAP, TRANSMISSION FORWARD & REVERSE VALVE SPOOL
캡

44.166 SEAL, TRANSMISSION FORWARD & REVERSE VALVE SPOOL
시일

44.170 COIL, TRANSMISSION CONTROL COVER SOLENOID
코일

44.194 LOCATOR, CONTROL COVER
로케이터

44.197 BLEEDER, CONTROL VALVE SLAVE CYLINDER
블리더

44.198 SEAT, SLAVE CYLINDER BRAKE LINE
시트

44.199 NUT, SLAVE CYLINDER ADJUSTING
너트

44.212 CARTRIDGE, CONTROL VALVE SHIFT SOLENOID
카트리지

44.213 SPRING, INCHING SPOOL BALANCE- OUTER
스프링

44.214 SPRING, INCHING SPOOL BALANCE- INNER
스프링

44.301 SEAL KIT, SOLENOID VALVE
시일킷

92.616 LOCKWASHER, ACCUMULATOR HOUSING FASTENER
로크와셔

95.082 FASTENER, CONTROL SELECTOR SOLENOID RELAY
패스너

www.truck-freeworkshop.com/forklift/clark/

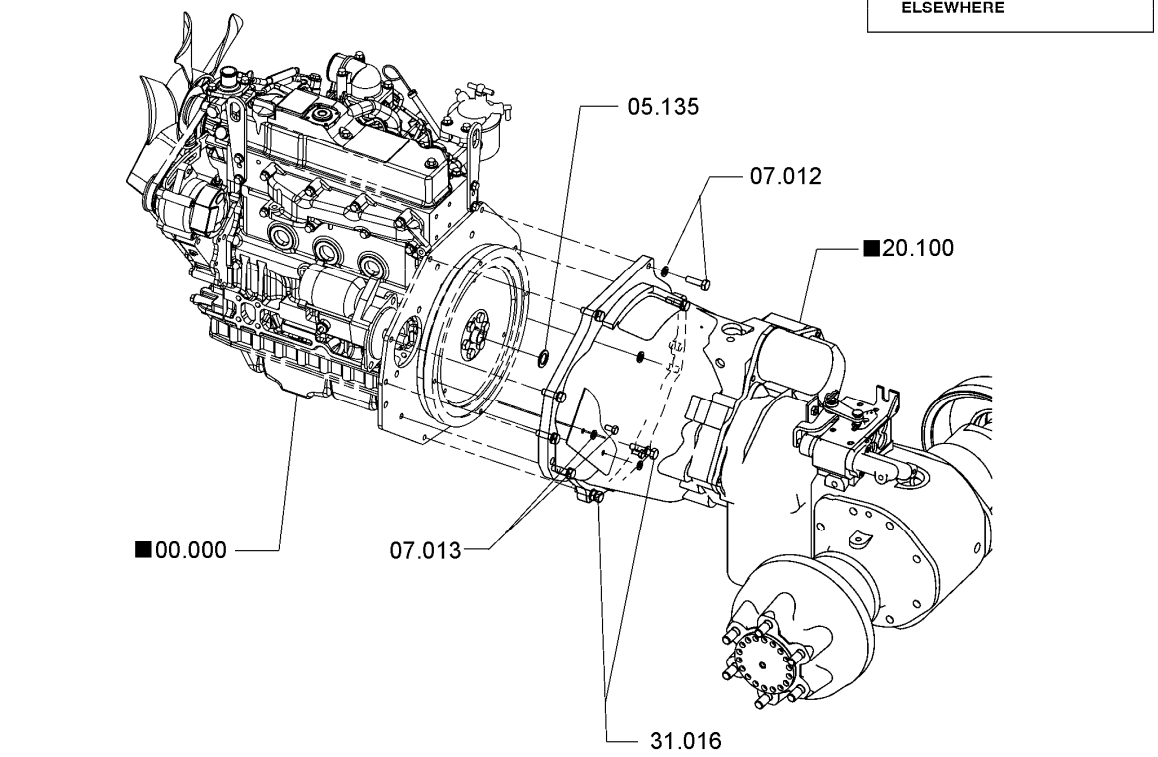

TRANAXLE MOUNTING 07-049

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
05.135	SPACER, CONVERTER PILOT SHAFT 스페이서
07.012	FASTENER, TRANSMISSION TO ENGINE 패스너
07.013	FASTENER, TRANSMISSION TO ENGINE 패스너
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
31.016	FASTENER, PUMP OUTLET COUPLING 패스너

www.truck-freeworkshop.com/forklift/clark/

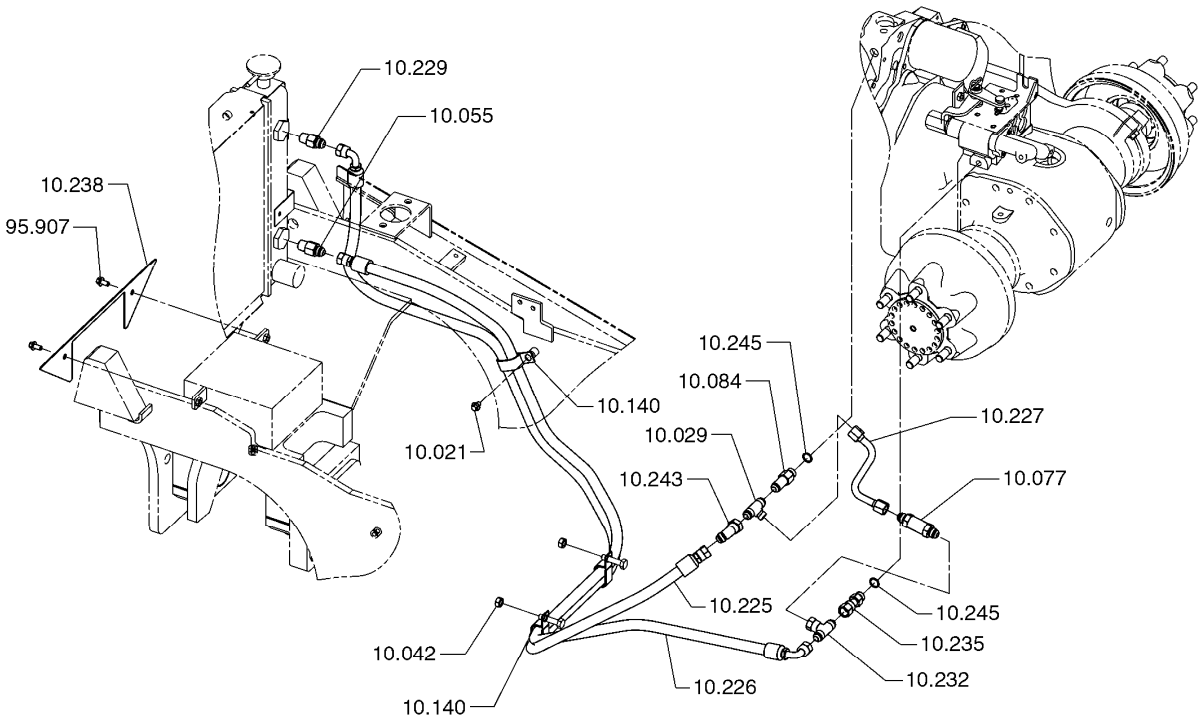

TRANS COOLING LINES **10-097**

10.021 FASTENER, COOLER OUTLET LINE CLAMP
패스너

10.029 FITTING, TRANSMISSION COOLING LINE
피팅

10.042 FASTENER, COOLER INLET LINE CLAMP
패스너

10.055 FITTING, COOLER OUTLET
피팅

10.077 CHECK VALVE, OIL COOLING LINES
체크밸브

10.084 FITTING, COOLER INLET LINE
피팅

10.140 CLAMP, COOLER LINE
클램프

10.225 LINE, OIL COOLING
라인

10.226 LINE, OIL COOLING
라인

www.truck-freeworkshop.com/forklift/clark/

10.227	LINE, OIL COOLING 라인
10.229	CHECK VALVE, OIL COOLING 체크밸브
10.232	FITTING, CHECK VALVE OIL COOLING 피팅
10.235	FITTING, OIL COOLING 피팅
10.238	SHIELD, OIL COOLER HEAT 쉴드
10.243	FITTING, COOLING LINE 피팅
10.245	SEAL, COOLING LINE FITTING 시일
95.907	FASTENER, HEAT SHIELD 패스너

www.truck-freeworkshop.com/forklift/clark/

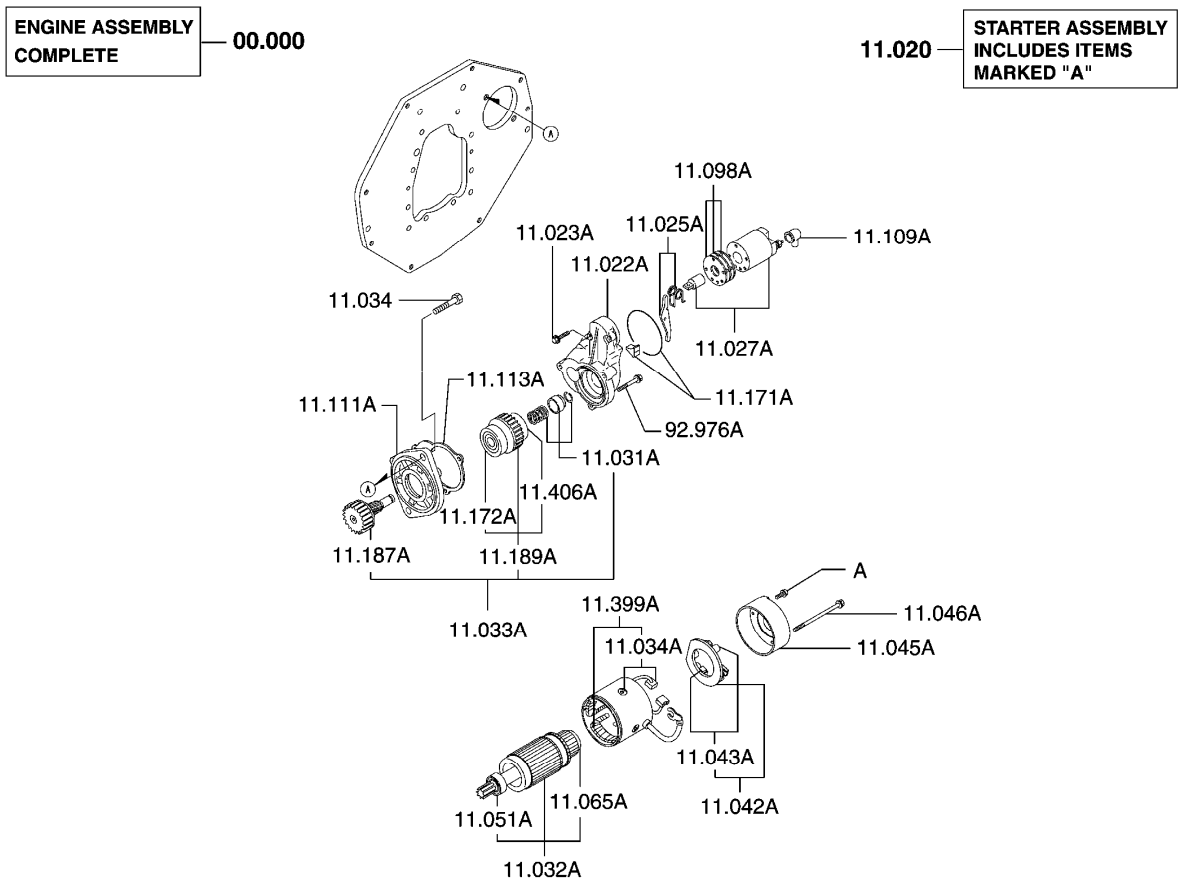

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

11.020 MOTOR ASSEMBLY, STARTING
모터

11.022 HOUSING & BUSHING, DRIVE END
하우징와부싱

11.023 FASTENER, DRIVE SHIFT FORK LEVER TO HOUSING
패스너

11.025 LEVER, DRIVE SHIFT FORK
레버

11.027 SWITCH, SOLENOID
스위치

11.031 COLLAR, PINION STOP
칼라

11.032 ARMATURE, STARTING MOTOR
아마츄어

11.033 DRIVE ASSEMBLY, STARTING MOTOR
드라이브

www.truck-freeworkshop.com/forklift/clark/

11.034	FASTENER, STARTING MOTOR 패스너
11.042	BRUSH HOLDER & BRUSH (KIT) 브러쉬홀더
11.043	BRUSH SET, STARTING MOTOR 브러쉬셋
11.045	FRAME, COMMUTATOR END 프레임
11.046	FASTENER, THRU 패스너
11.051	BEARING, STARTER MOTOR CENTER PLATE 베어링
11.065	BEARING, COMMUTATOR END FRAME 베어링
11.098	SPACER, CRANKING MOTOR DRIVE SHIFT LEVER RETURN SP 스페이서
11.109	FITTING, STARTER SOLENOID INTERLOCK 피팅
11.111	HOUSING, CRANKING MOTOR DRIVE LINKAGE 하우징
11.113	RETAINER, CRANKING MOTOR DRIVE SHIFT LEVER FULCRUM 리테이너
11.171	SEAL, CRANKING MOTOR CENTER BEARING 시일
11.172	BEARING, CRANKING MOTOR CENTER 베어링
11.187	GEAR, STARTER REDUCTION INTERNAL 기어
11.189	CLUTCH, STARTER OVERRUNNING 클러치
11.399	HOUSING ASSEMBLY, CRANKING MOTOR 하우징
11.406	BEARING, CRANKING MOTOR PLANET GEAR 베어링
92.976	FASTENER, CRANKING MOTOR DRIVE LINKAGE HOUSING 패스너

www.truck-freeworkshop.com/forklift/clark/

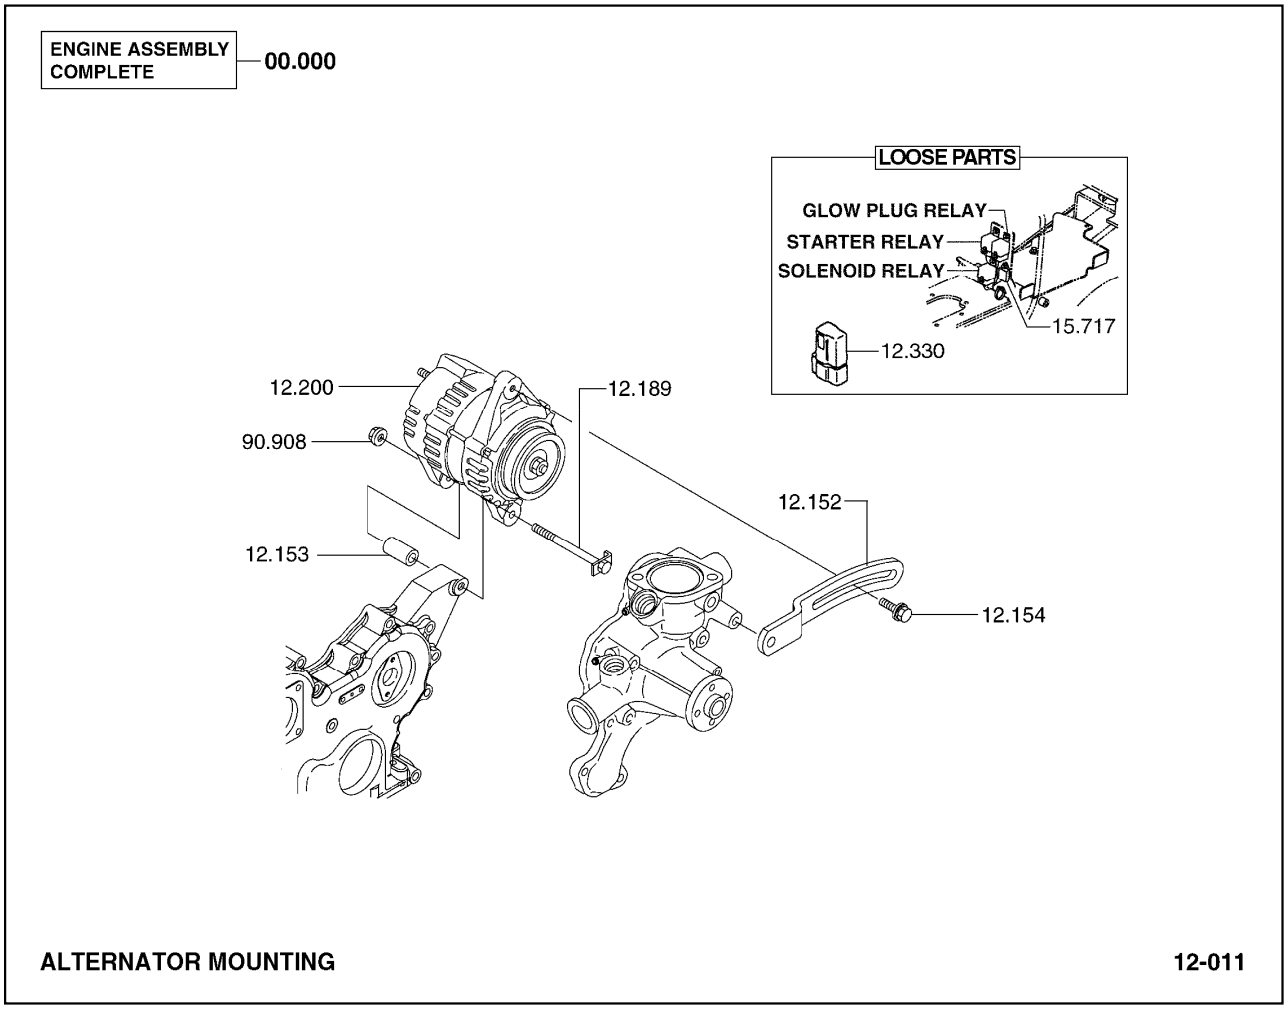

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

12.152 BRACKET, ALTERNATOR ADJUSTING STRAP
브라켓

12.153 SPACER, ALTERNATOR MOUNTING
스페이서

12.154 FASTENER, ALTERNATOR MOUNTING
패스너

12.189 FASTENER, ALTERNATOR MOUNTING
패스너

12.200 ALTERNATOR ASSEMBLY
알터네이터

12.330 DIODE, ALTERNATOR FIELD CURRENT
다이오드

15.717 TIME DELAY, ENGINE SHUTDOWN SYSTEM
타이머유닛

90.908 WASHER, ALT TO BRACKET FASTENER
와셔

www.truck-freeworkshop.com/forklift/clark/

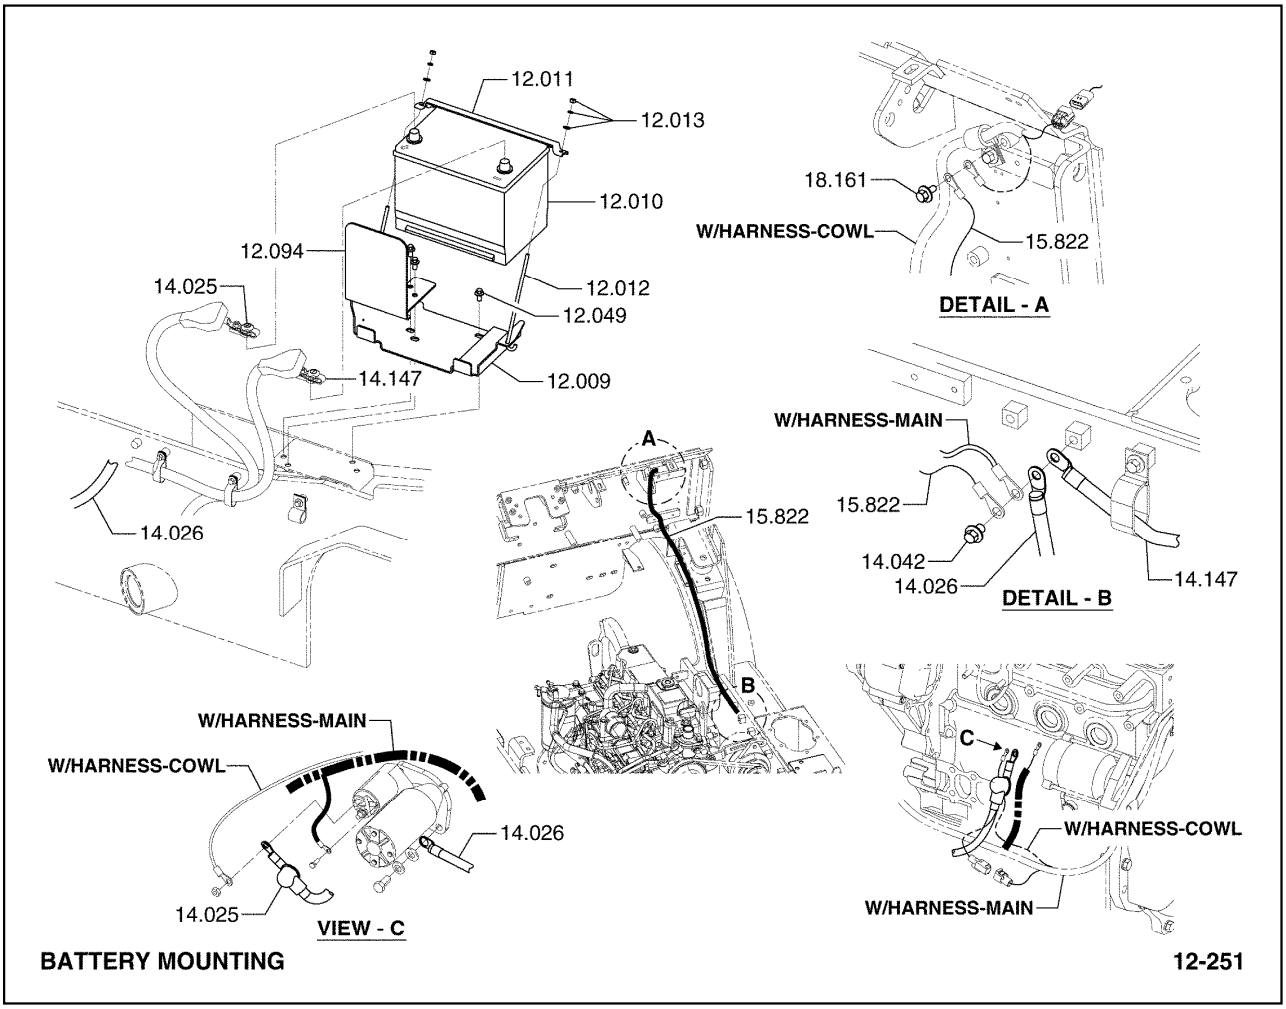

12.009 SUPPORT, BATTERY
서포트

12.010 BATTERY
배터리

12.011 CLAMP, BATTERY HOLD DOWN
클램프

12.012 STUD, BATTERY HOLD DOWN
스터드

12.013 FASTENER, BATTERY HOLD DOWN (AT CLAMP)
패스너

12.049 FASTENER, BATTERY SUPPORT
패스너

12.094 BRACKET, BATTERY SUPPORT
브라켓

14.025 CABLE, BATTERY TO STARTER
케이블

14.026 CABLE, BATTERY GROUND
케이블

www.truck-freeworkshop.com/forklift/clark/

14.042	FASTENER, BATTERY GROUND CABLE 패스너
14.147	CABLE, BATTERY NEGATIVE 케이블
15.822	WIRE, MACHINE GROUND EXTENSION 욱J潔紂電謬
18.161	FASTENER, GROUND WIRE 패스너

www.truck-freeworkshop.com/forklift/clark/

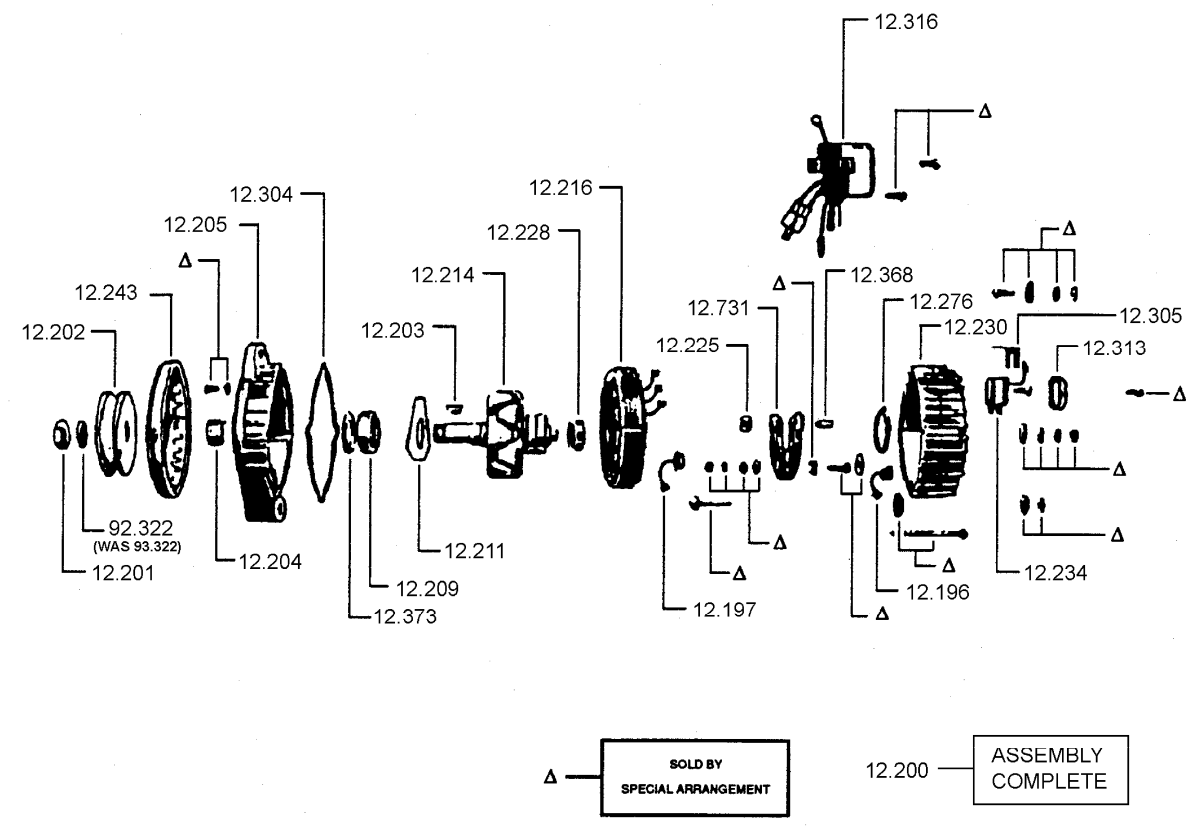

ALTERNATOR ASSEMBLY 12-257

12.196 DIODE REC NEGATIVE
다이오드

12.197 DIODE REC POSITIVE
다이오드

12.200 ALTERNATOR ASSEMBLY
알터네이터

12.201 FASTENER, ALTERNATOR PULLEY TO SHAFT
패스너

12.202 PULLEY, ALTERNATOR
풀리

12.203 KEY, ALTERNATOR PULLEY
키

12.204 COLLAR, ALTERNATOR DRIVE END
칼라

12.205 FRAME, ALTERNATOR DRIVE END
프레임

12.209 BEARING, ALTERNATOR DRIVE END
베어링

www.truck-freeworkshop.com/forklift/clark/

12.211	RETAINER, ALTERNATOR DRIVE END BEARING 리테이너
12.214	ROTOR ASSEMBLY, ALTERNATOR 로터
12.216	STATOR ASSEMBLY, ALTERNATOR 스테이터
12.225	INSULATOR, ALTERNATOR HEAT SINK 절연체
12.228	BEARING, ALTERNATOR SLIP RING FRAME END 베어링
12.230	FRAME, ALTERNATOR SLIP RING END 프레임
12.234	BRUSH HOLDER, ALTERNATOR 브러쉬홀더
12.243	FAN, ALTERNATOR 팬
12.276	RETAINER, SLIP RING FRAME END BEARING 리테이너
12.304	SEAL, ALTERNATOR HOUSING 시일
12.305	INSULATOR, ALTERNATOR BRUSH LEAD 절연체
12.313	COVER, ALTERNATOR BRUSH ACCESS 커버
12.316	REGULATOR, ALTERNATOR VOLTAGE OUTPUT 레귤레이터
12.368	INSULATOR, TERMINAL 절연체
12.373	SEAL, ALTERNATOR DRIVE END BEARING 시일
12.731	SEAL, ALTERNATOR DRIVE END BEARING 시일
92.322	LOCKWASHER, ALTERNATOR PULLEY FASTENER 로크와셔

www.truck-freeworkshop.com/forklift/clark/

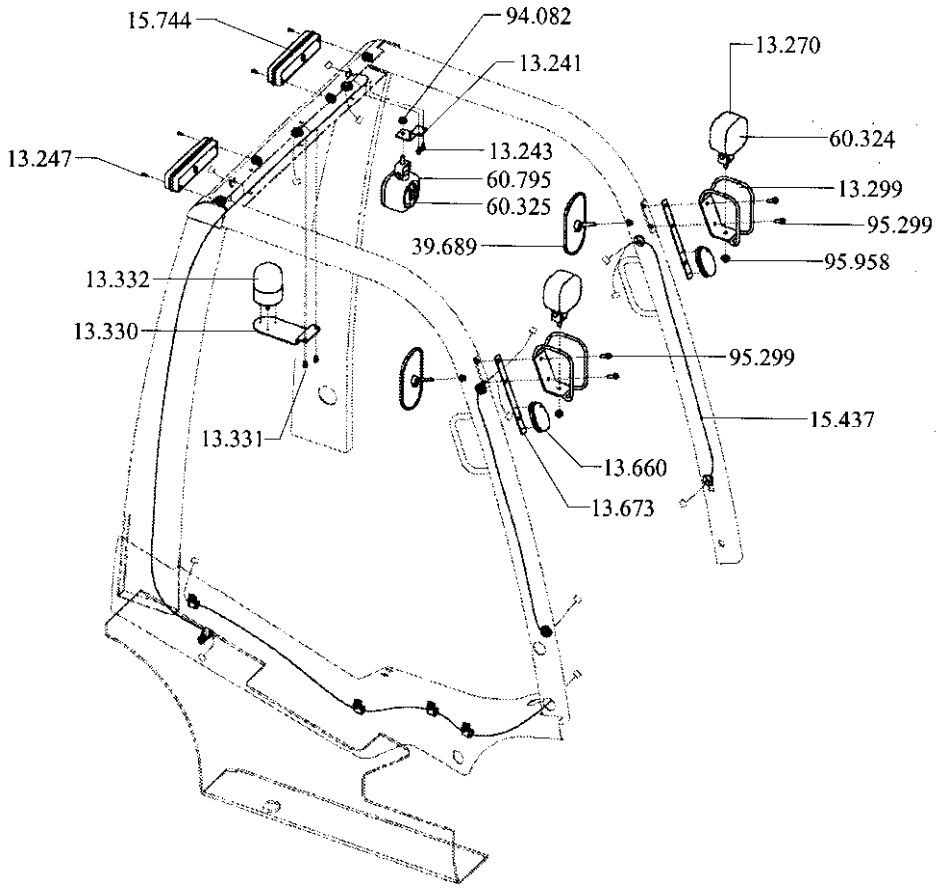

13.047	SWITCH, CIRCUIT LOCKING 스위치
14.238	HARNESS, DIRECTION CONTROL SWITCH WIRING 하네스
14.502	WIRE, IGNITION SWITCH TO ENGINE HARNESS 와이어
60.260	KEY, CIRCUIT LOCKING SWITCH 키

www.truck-freeworkshop.com/forklift/clark/

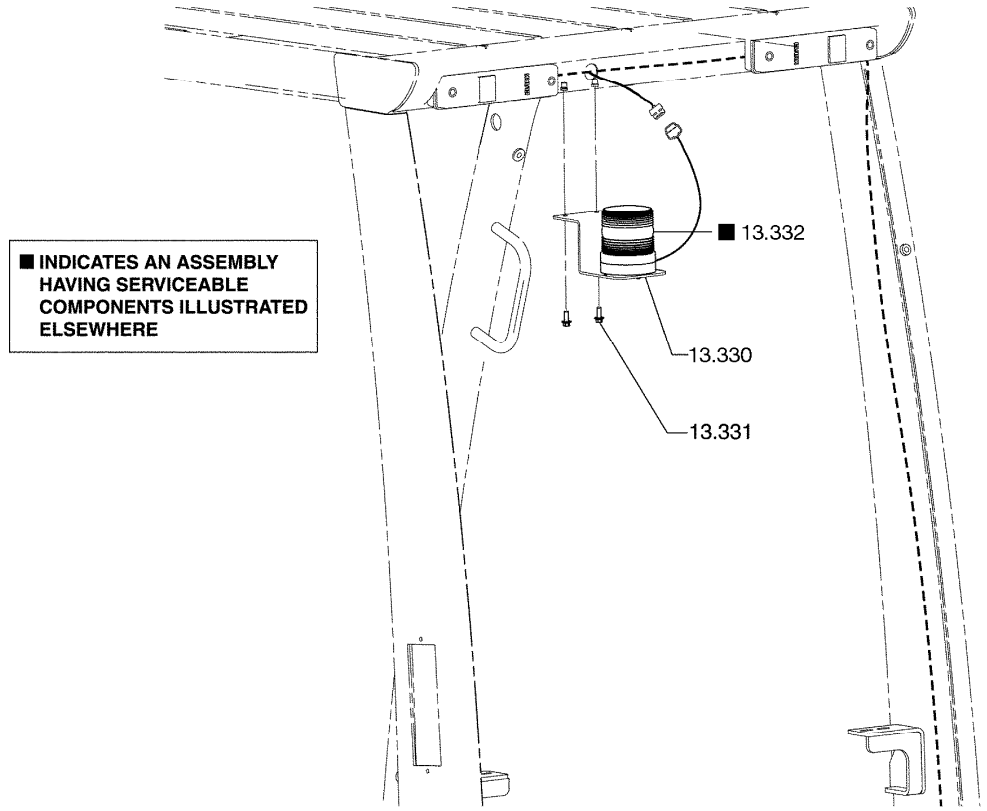

STROBE LIGHT MOUNTING **13-162**

13.330 BRACKET, WARNING LIGHT
브라켓

13.331 FASTENER, WARNING LIGHT BRACKET
패스너

13.332 ASSEMBLY, WARNING LIGHT
경고등

www.truck-freeworkshop.com/forklift/clark/

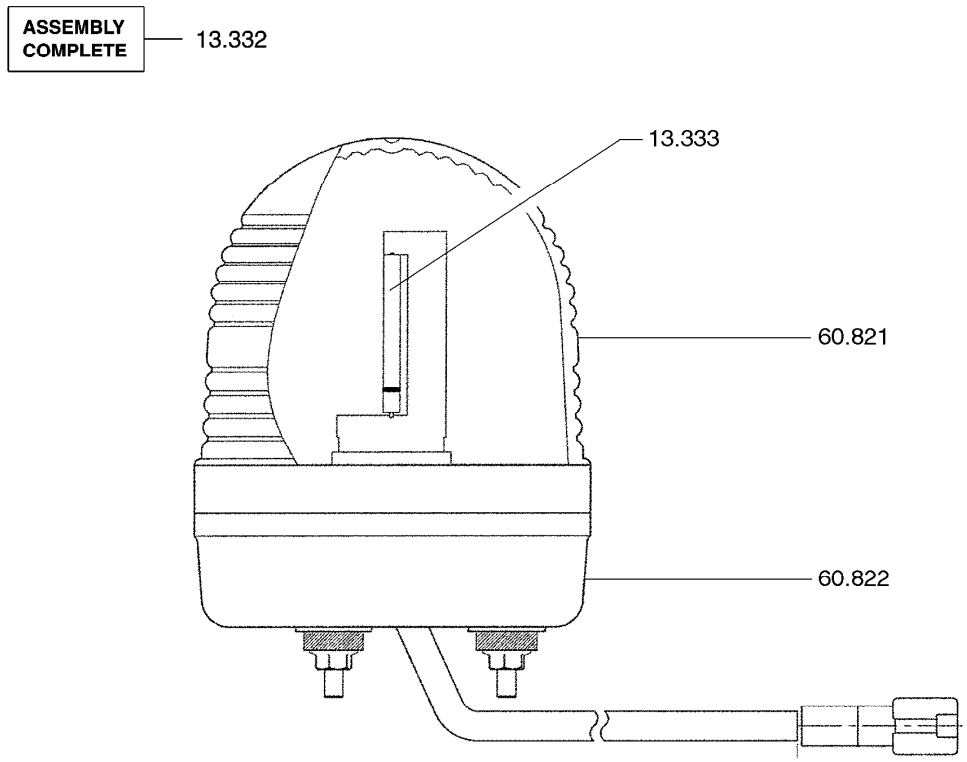

STROBE LIGHT **13-182**

13.332 ASSEMBLY, WARNING LIGHT
경고등

13.333 BULB, WARNING LIGHT
전구

60.821 GLOBE, STROBE LIGHT
글로브

60.822 BASE, STROBE LIGHT
베이스

www.truck-freeworkshop.com/forklift/clark/

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

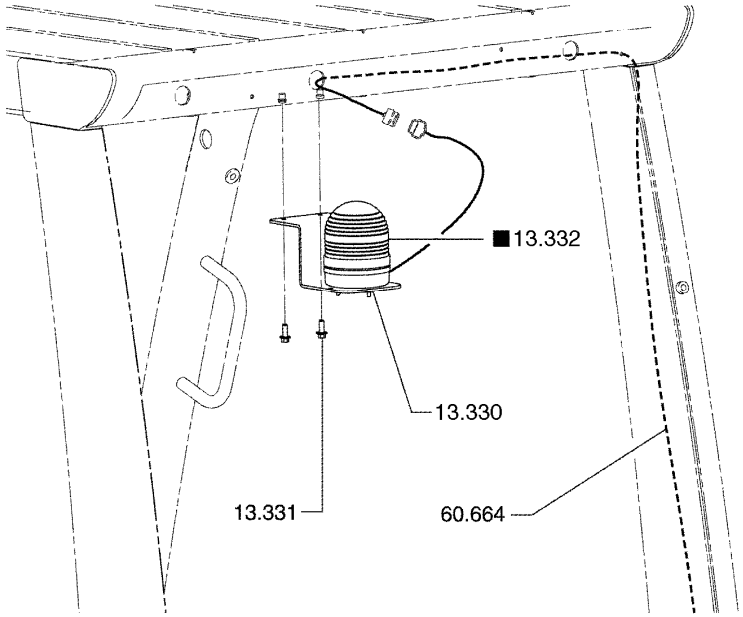

STROBE LIGHT MOUNTING **13-183**

13.330	BRACKET, WARNING LIGHT 브라켓
13.331	FASTENER, WARNING LIGHT BRACKET 패스너
13.332	ASSEMBLY, WARNING LIGHT 경고등
60.664	HARNESS, WARNING DEVICE 하네스

www.truck-freeworkshop.com/forklift/clark/

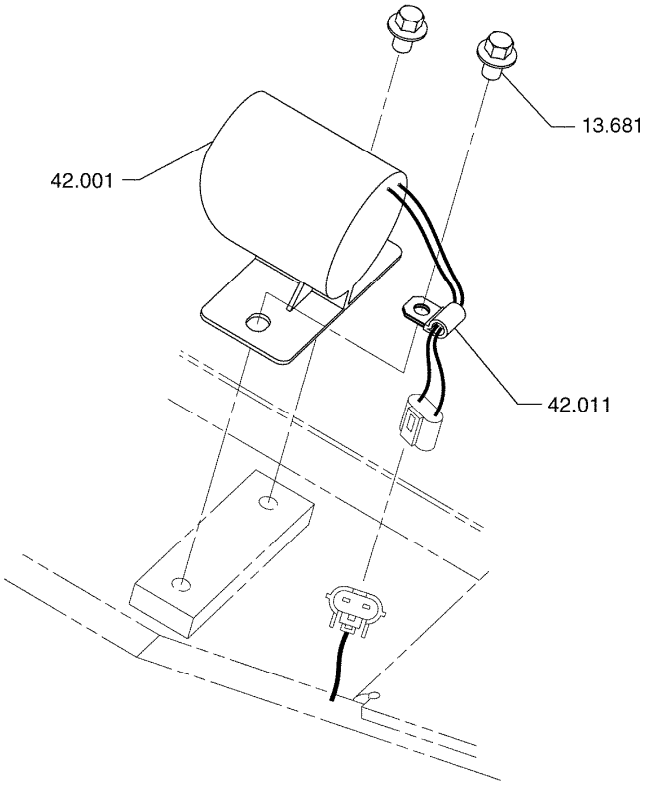

BACK-UP ALARM INSTALLATION **13-228**

13.681 FASTENER, WARNING DEVICE
패스너

42.001 WARNING DEVICE, AUDIBLE (AIR OPER)
경보장치

42.011 CLIP, AUDIBLE WARNING DEVICE CABLE
클립

www.truck-freeworkshop.com/forklift/clark/

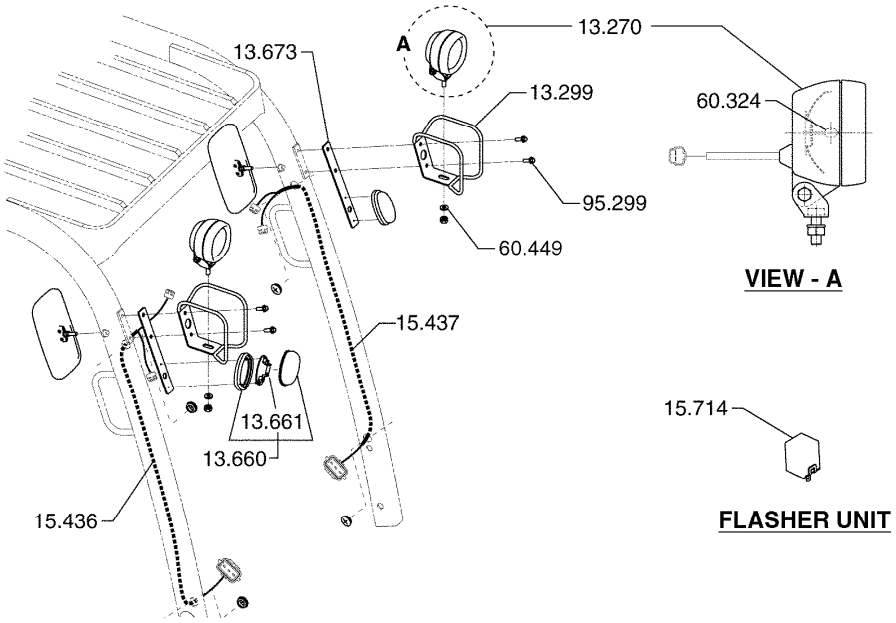

HEAD & T/SIGNAL LIGHT INSTALLATION **13-230**

13.270	HEADLAMP, ADJUSTABLE 헤드램프
13.299	GUARD, HEADLIGHT 가드
13.660	LIGHT, TURN SIGNAL 라이트
13.661	BULB, TURN SIGNAL LIGHT 전구
13.673	BRACKET, TURN LIGHT 브라켓
15.436	HARNESS, RH HEADLAMP WIRING 하네스
15.437	HARNESS, HEADLAMP WIRING 하네스
15.714	FLASHER, UNIT 플래셔
60.324	BULB, HEADLAMP 전구

www.truck-freeworkshop.com/forklift/clark/

60.449 SPACER, HEAD LAMP BRACKET MOUNTING
스페이서

95.299 FASTENER, HEADLAMP GUARD
패스너

www.truck-freeworkshop.com/forklift/clark/

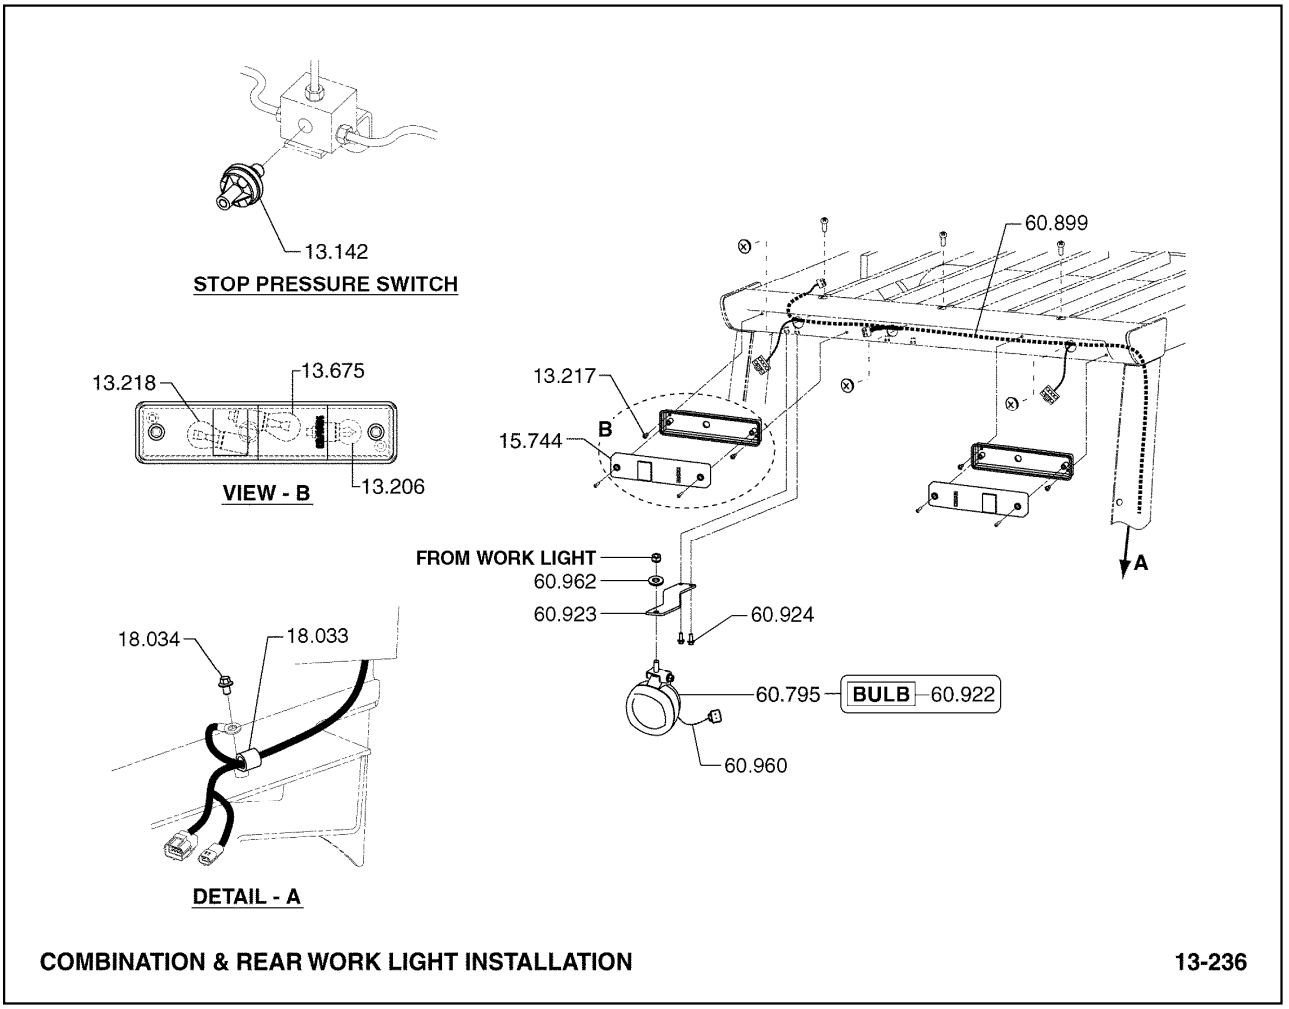

COMBINATION & REAR WORK LIGHT INSTALLATION **13-236**

13.142	SWITCH, BRAKE INTERLOCK 스위치
13.206	BULB, BACK-UP LAMP 전구
13.217	FASTENER, COM STOP & TAIL LAMP ASSY MTG 패스너
13.218	BULB, STOP & TAIL LAMP 전구
13.675	BULB, TURN LIGHT 전구
15.744	LAMP ASSEMBLY, COMBINATION STOP & TAIL 램프
18.033	CLIP, HARNESS 클립
18.034	FASTENER, HARNESS CLIP 패스너
60.795	LIGHT, REAR WORK 라이트

www.truck-freeworkshop.com/forklift/clark/

60.899 WIRING HARNESS, REAR ACCESSORY
욱J潔紂電謬

60.922 BULB, REAR WORK LAMP
전구

60.923 BRACKET, REAR WORK LAMP MOUNTING
브라켓

60.924 FASTENER, REAR WORK LAMP MOUNTING
패스너

60.960 HARNESS, REAR WORK LAMP EXTENSION
*

60.962 SPACER, REAR WORK LAMP MOUNTING
*

www.truck-freeworkshop.com/forklift/clark/

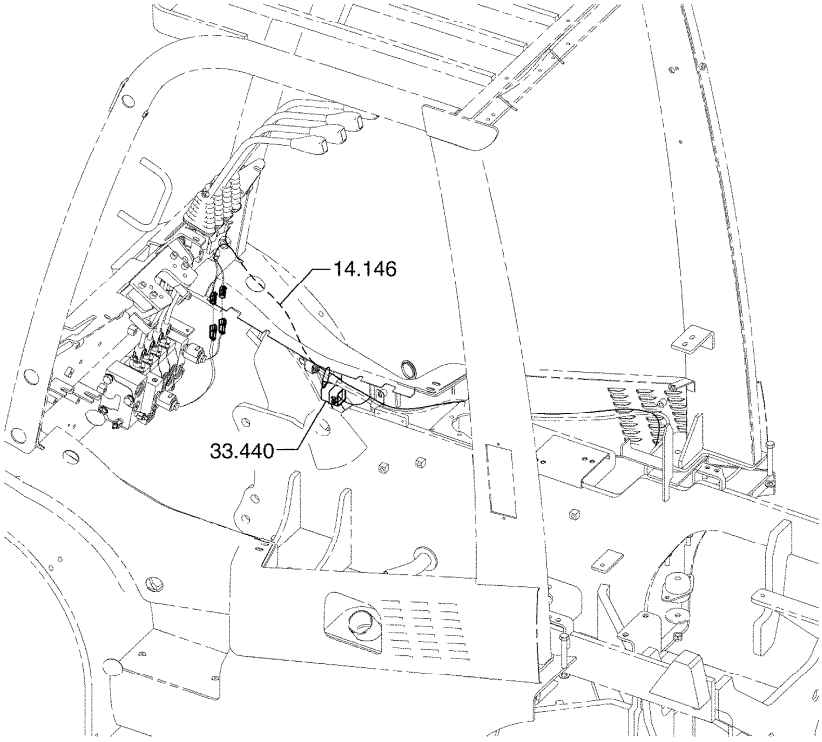

SOLENOID VALVE ELECTRIC MOUNTING **13-312**

14.146 HARNESS, VALVE SWITCH WIRING
하네스

33.440 RELAY, SOLENOID VALVE
릴레이

www.truck-freeworkshop.com/forklift/clark/

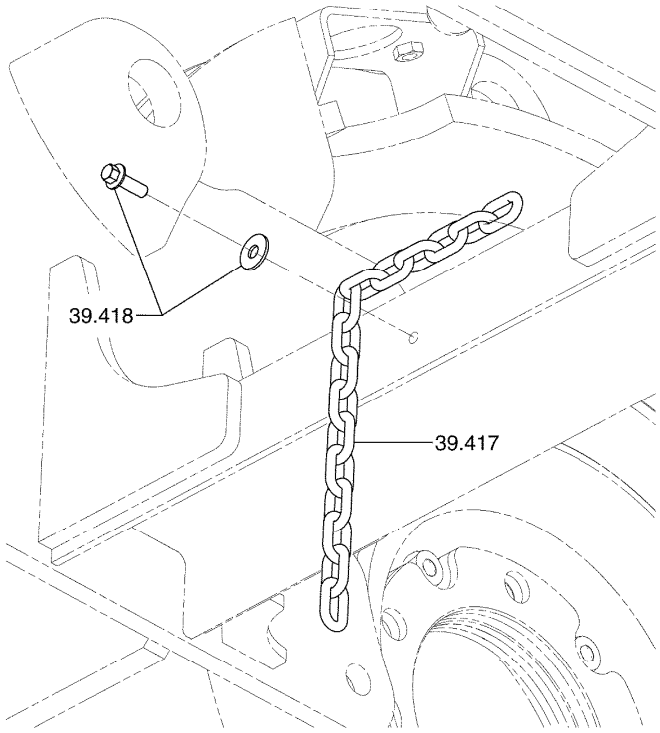

STATIC ELECTRICITY DISCHARGER **13-336**

39.417 GROUND STRAP, ELECTRIC TRUCK
접지케이블

39.418 FASTENER, ELECTRIC TRUCK GROUND STRAP
패스너

www.truck-freeworkshop.com/forklift/clark/

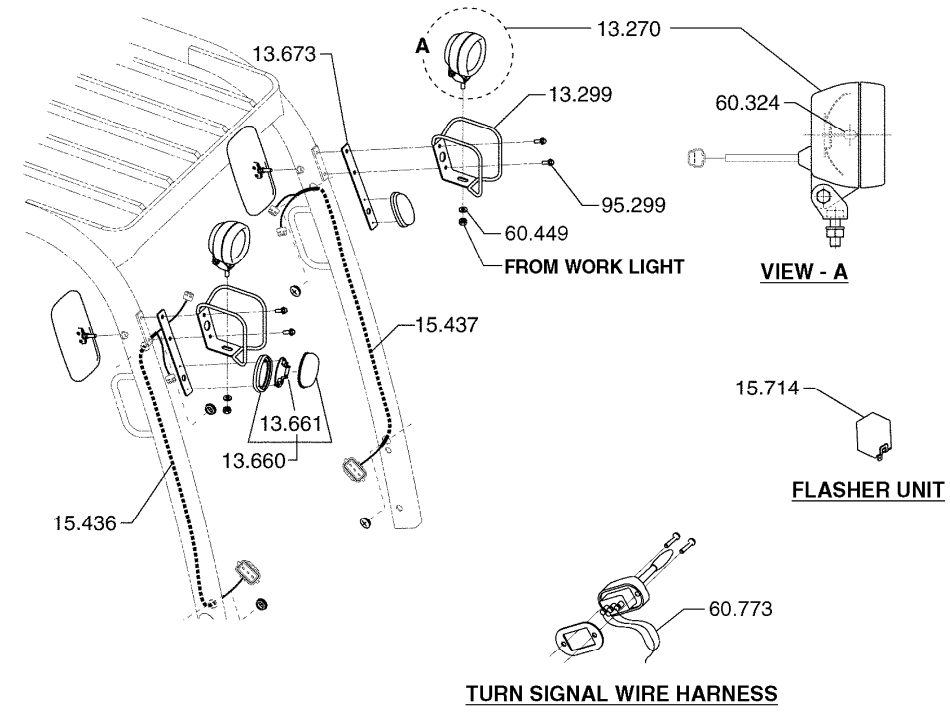

HEAD & T/SIGNAL LIGHT INSTALLATION **13-338**

13.270	HEADLAMP, ADJUSTABLE 헤드램프
13.284	BRACKET, ADJUSTABLE HEADLAMP 브라켓
13.285	FASTENER, ADJUSTABLE HEADLAMP BRACKET 패스너
13.299	GUARD, HEADLIGHT 가드
13.660	LIGHT, TURN SIGNAL 라이트
13.661	BULB, TURN SIGNAL LIGHT 전구
13.673	BRACKET, TURN LIGHT 브라켓
15.436	HARNESS, RH HEADLAMP WIRING 하네스
15.437	HARNESS, HEADLAMP WIRING 하네스

www.truck-freeworkshop.com/forklift/clark/

15.714	FLASHER, UNIT 플래셔
60.324	BULB, HEADLAMP 전구
60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
60.773	HARNESS, TURN SIGNAL 하네스
95.299	FASTENER, HEADLAMP GUARD 패스너

www.truck-freeworkshop.com/forklift/clark/

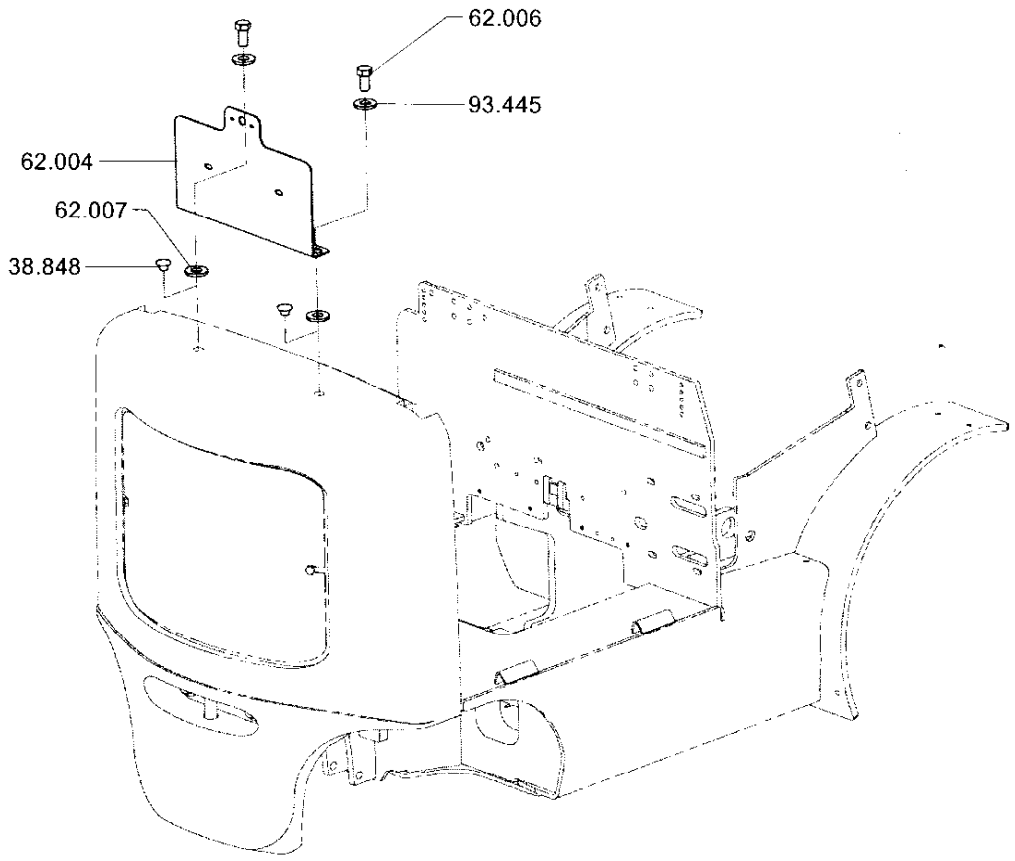

13.000	PANEL, INSTRUMENT CLUSTER 판넬
13.003	HORN 혼
13.004	FASTENER, HORN MOUNTING BRACKET 패스너
13.079	FASTENER, INSTRUMENT CLUSTER TO INST PANEL 패스너
14.352	FUSE, CONTROL CIRCUIT 퓨즈
14.690	WIRE, HORN FILTER 와이어
15.433	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
15.447	DIODE, HARNESS 다이오드
15.640	WIRING HARNESS, MACHINE COWL 와이어하네스

www.truck-freeworkshop.com/forklift/clark/

15.710	RELAY, ELECTRICAL 릴레이
18.009	FASTENER, HARNESS CLIP 패스너
18.010	CLIP, HARNESS 클립
18.020	CLIP, HARNESS 클립
60.383	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
65.289	BODY, FUSE BOX *
65.832	COVER, FUSE BOX 커버
95.009	FASTENER, FUSE BOX MOUNTING 패스너

www.truck-freeworkshop.com/forklift/clark/

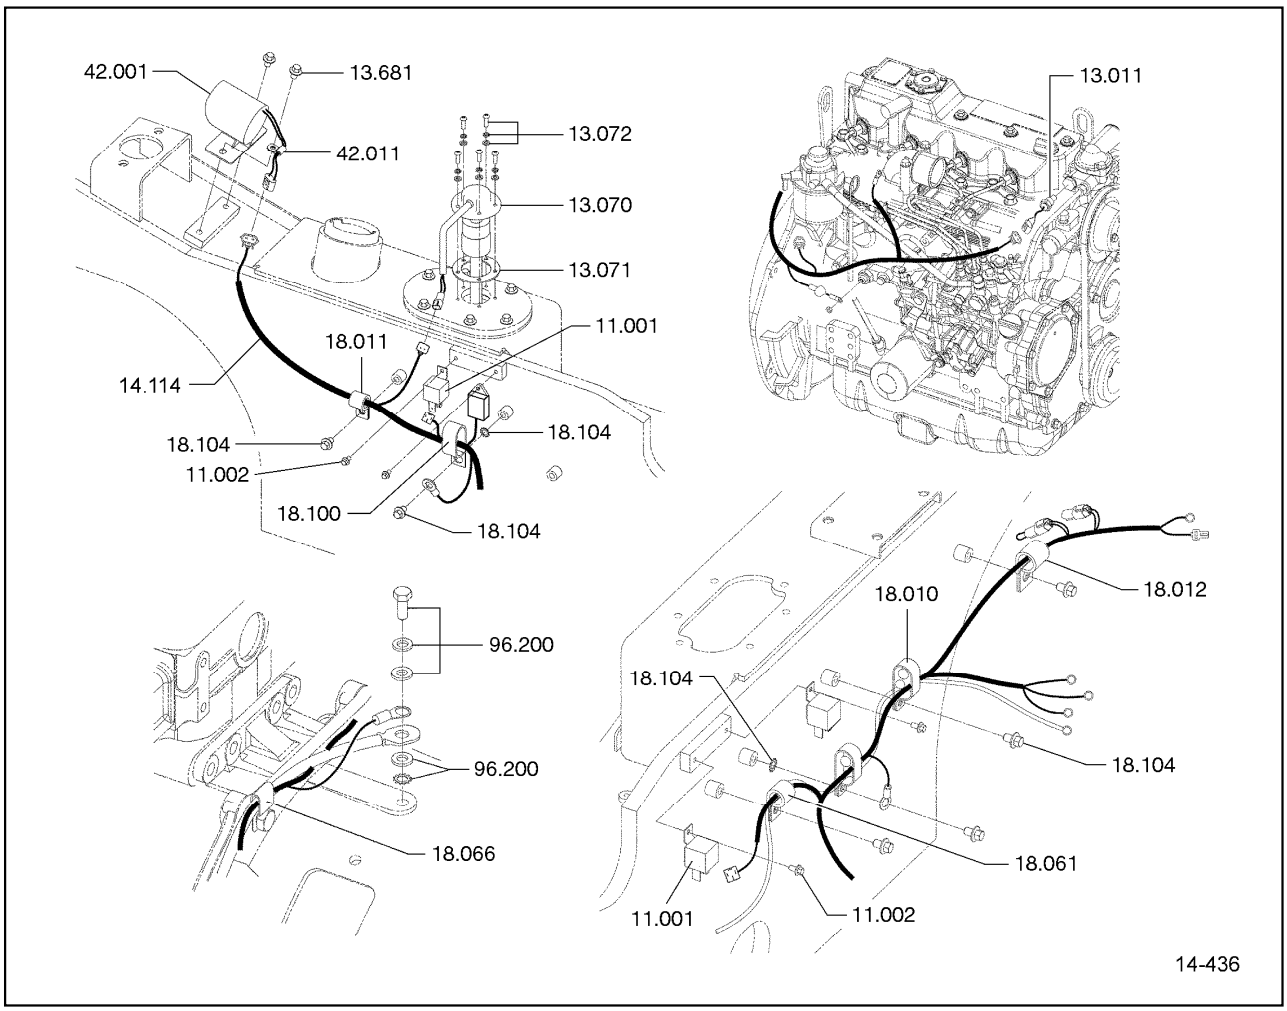

01.854	SENSOR, ENGINE COOLANT TEMPERATURE 센서
11.001	RELAY, STARTER 릴레이
11.002	FASTENER, STARTER RELAY 패스너
13.070	SENDER, FUEL GAUGE 센더
13.071	GASKET, FUEL GAUGE SENDER 가스켓
13.072	FASTENER, FUEL GAUGE SENDER 패스너
13.140	STRAINER, FUEL GAGE SENDER *
14.114	HARNESS, MACHINE WIRING 하네스
15.469	RELAY, FUEL SHUT OFF SOLENOID 릴레이

www.truck-freeworkshop.com/forklift/clark/

15.816	FASTENER, FUEL BLOCK SOLENOID TIMER 패스너
18.000	CLIP, WIRING HARNESS 클립
18.001	FASTENER, WIRING HARNESS CLIP 패스너
18.002	CLIP, WIRING HARNESS 클립
18.006	CLIP, WIRING HARNESS 클립
18.008	CLIP, WIRING HARNESS 클립
60.866	RELAY,GLOW PLUG 릴레이
97.271	FASTENER, CABLE & WIRE TO ALTERNATOR *
97.272	FASTENER, CABLE & WIRE TO STARTER *
97.273	FASTENER, GLOW PLUG RELAY *
97.274	FASTENER, FUEL SHUT OFF SOLENOID RELAY *

www.truck-freeworkshop.com/forklift/clark/

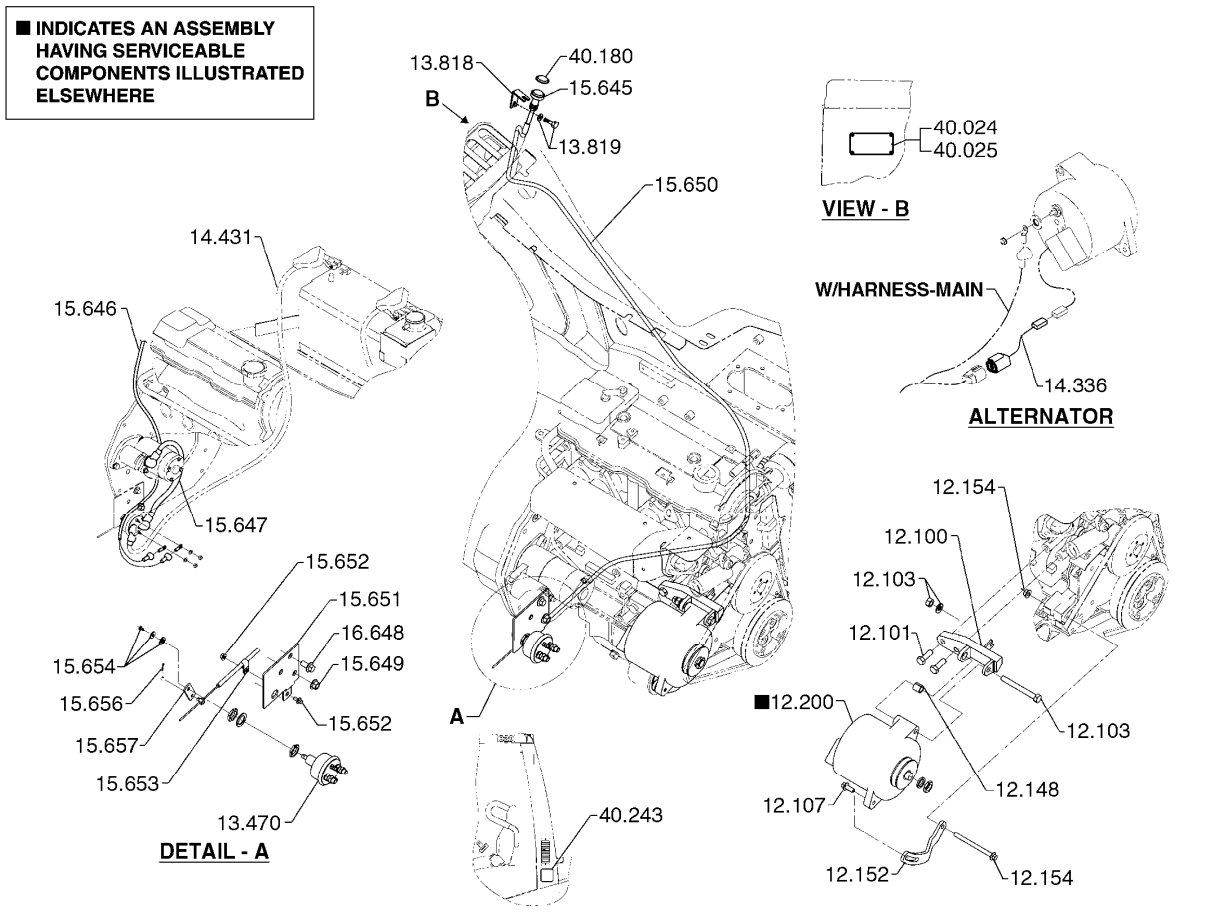

12.100	BRACKET, ALTERNATOR MOUNTING 브라켓	15.647	CABLE, DISCONNECT SWITCH TO STARTER 케이블
12.101	FASTENER, ALTERNATOR BRACKET 패스너	15.649	FASTENER, DISCONNECT SWITCH MOUNTING BRACKET 패스너
12.103	FASTENER, ALTERNATOR TO BRACKET 패스너	15.650	CABLE, DISCONNECT SWITCH TO KNOB 케이블
12.107	FASTENER, ADJUSTING STRAP TO ALTERNATOR 패스너	15.651	BRACKET, DISCONNECT SWITCH MOUNTING 브라켓
12.148	SPACER, ALTERNATOR MOUNTING 스페이서	15.652	FASTENER, DISCONNECT SWITCH CLAMP ?스너
12.152	BRACKET, ALTERNATOR ADJUSTING STRAP 브라켓	15.653	CLAMP, DISCONNECT SWITCH CABLE 클룻프
12.154	FASTENER, ALTERNATOR MOUNTING 패스너	15.654	FASTENER, DISCONNECT SWITCH BRACKET TO LEVER 패스너
12.200	ALTERNATOR ASSEMBLY 알터네이터	15.656	PIN, DISCONNECT SWITCH CABLE LEVER 핀
13.470	SWITCH, DISCONNECT 스위치	15.657	LEVER, DISCONNECT SWITCH ACTUATING 레버
13.818	BRACKET, MAIN DISCONNECT SWITCH MOUNTING 브라켓	16.648	FASTENER, AUXILIARY PUMP MOTOR FAN TO SHAFT 패스너
13.819	FASTENER, MAIN DISCONNECT SWITCH MTG BRACKET 패스너	40.024	PLATE, UNDERWRITERS LABEL 플레이트
14.336	HARNESS, ALTERNATOR 하네스	40.025	FASTENER, UNDERWRITERS LABEL PLATE 패스너
14.431	CABLE, BATTERY TO DISCONNECT SWITCH 케이블	40.180	DECAL, BATTERY DISCONNECT SWITCH 데칼
15.645	KNOB, DISCONNECT SWITCH ACTUATING 노브	40.243	DECAL, LPS 데칼
15.646	HARNESS, ENGINE DISCONNECT 하네스		

www.truck-freeworkshop.com/forklift/clark/

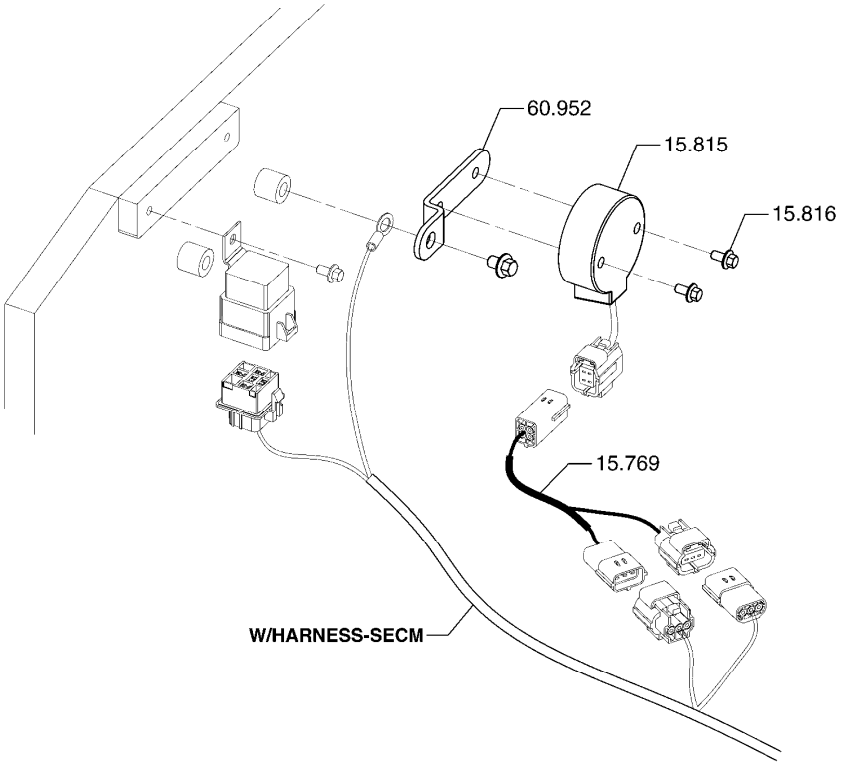

DELAY TIMER MOUNTING **15-074**

15.769	WIRE HARNESS, TIMER DELAY 와이어하네스
15.815	TIMER, FUEL BLOCK SOLENOID 타이머
15.816	FASTENER, FUEL BLOCK SOLENOID TIMER 패스너
60.952	BRACKET, ENGINE CONDITION SIGNAL RELAY SUPPORT 브라켓

www.truck-freeworkshop.com/forklift/clark/

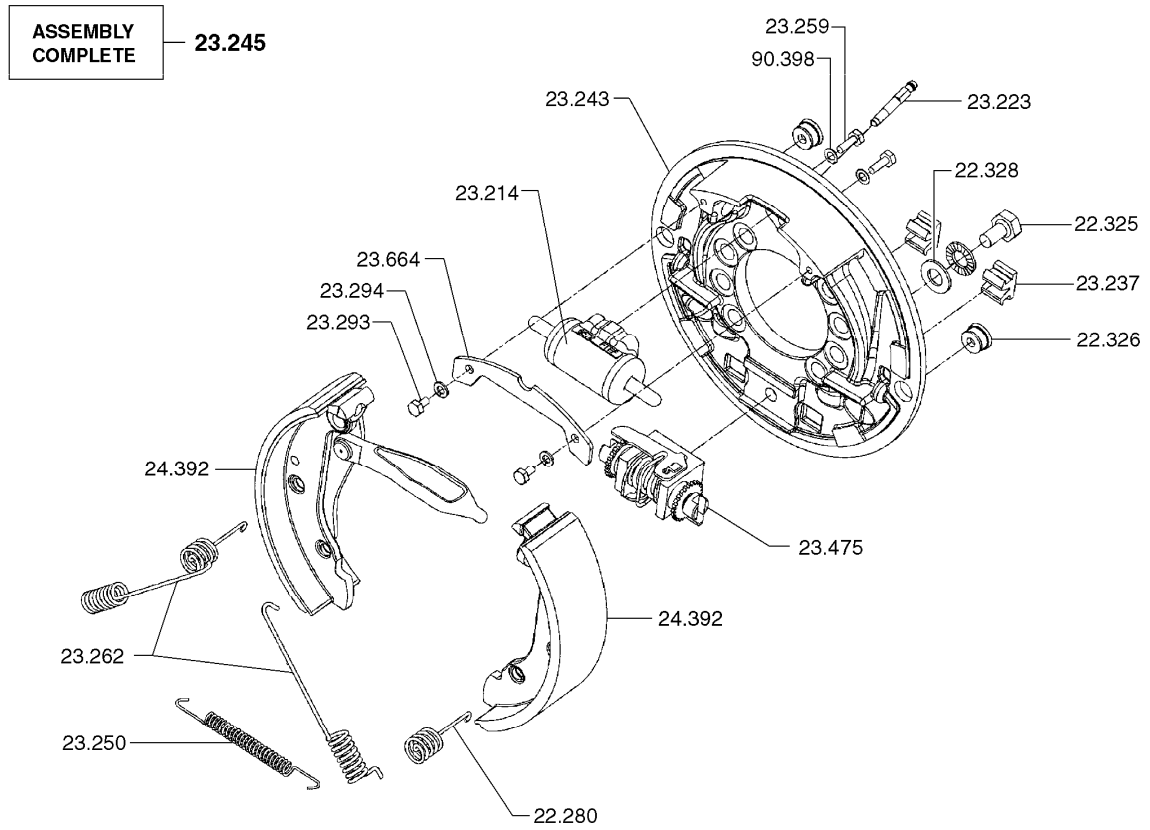

BRAKE ASSEMBLY-LH **22-009**

22.280	SPRING, BRAKE SHOE GUIDE PIN 스프링
22.325	FASTENER, BRAKE SHOE ADJUSTOR 패스너
22.326	PLUG, BRAKE LINING INSPECTION 플러그
22.328	LOCKWASHER, BRAKE SHOE ADJUSTOR FASTENER 로크와셔
23.214	CYLINDER ASSEMBLY, LH BRAKE 실린더
23.223	BLEEDER, BRAKE WHEEL CYLINDER 블리더
23.237	COVER, RH BRAKE ADJUSTOR 커버
23.243	PLATE, RH BRAKE BACKING 플레이트
23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크

www.truck-freeworkshop.com/forklift/clark/

23.250	SPRING, RH BRAKE RETURN 스프링
23.259	FASTENER, RH WHEEL CYLINDER 패스너
23.262	SPRING, BRAKE SHOE RETURN 스프링
23.293	RING-RETAINING, BRAKE SHOE ANCHOR PIN 링
23.294	WASHER, BRAKE SHOE GUIDE PIN 와셔
23.475	ADJUSTOR, BRAKE SHOE 어드져스터
23.664	PLATE, BRAKE SHOE RETAINER 플레이트
24.392	SHOE & LINING, BRAKE (AXLE SET) 슈와라이닝
90.398	LOCKWASHER, WHEEL CYLINDER FASTENER 로크와셔

www.truck-freeworkshop.com/forklift/clark/

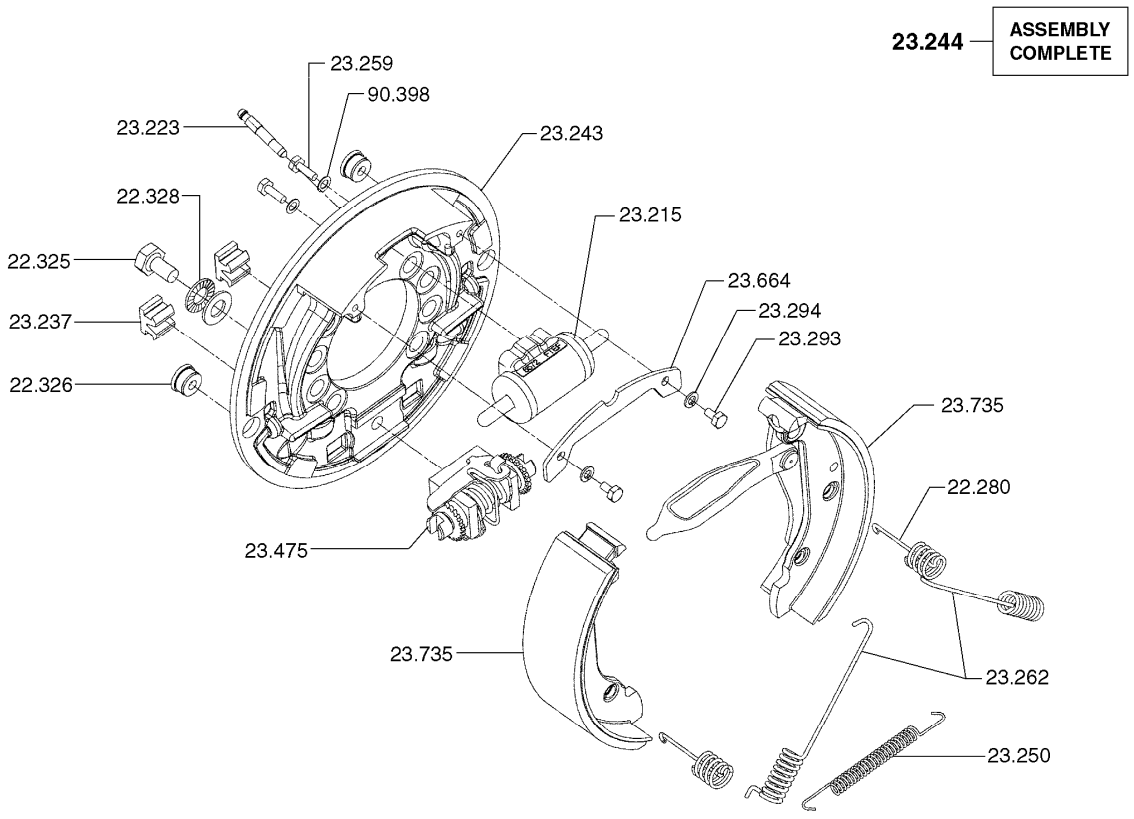

BRAKE ASSEMBLY-RH **22-010**

22.280 SPRING, BRAKE SHOE GUIDE PIN
스프링

22.325 FASTENER, BRAKE SHOE ADJUSTOR
패스너

22.326 PLUG, BRAKE LINING INSPECTION
플러그

22.328 LOCKWASHER, BRAKE SHOE ADJUSTOR FASTENER
로크와셔

23.215 CYLINDER ASSEMBLY, RH BRAKE
실린더

23.223 BLEEDER, BRAKE WHEEL CYLINDER
블리더

23.237 COVER, RH BRAKE ADJUSTOR
커버

23.243 PLATE, RH BRAKE BACKING
플레이트

23.244 BRAKE ASSEMBLY, RH DRIVE WHEEL
브레이크

www.truck-freeworkshop.com/forklift/clark/

23.247	SHOE SET, BRAKE LINING 슈
23.259	FASTENER, RH WHEEL CYLINDER 패스너
23.262	SPRING, BRAKE SHOE RETURN 스프링
23.293	RING-RETAINING, BRAKE SHOE ANCHOR PIN 링
23.294	WASHER, BRAKE SHOE GUIDE PIN 와셔
23.475	ADJUSTOR, BRAKE SHOE 어드져스터
23.664	PLATE, BRAKE SHOE RETAINER 플레이트
23.735	SHOE & LINING SET, BRAKE 슈와라이닝
90.398	LOCKWASHER, WHEEL CYLINDER FASTENER 로크와셔

www.truck-freeworkshop.com/forklift/clark/

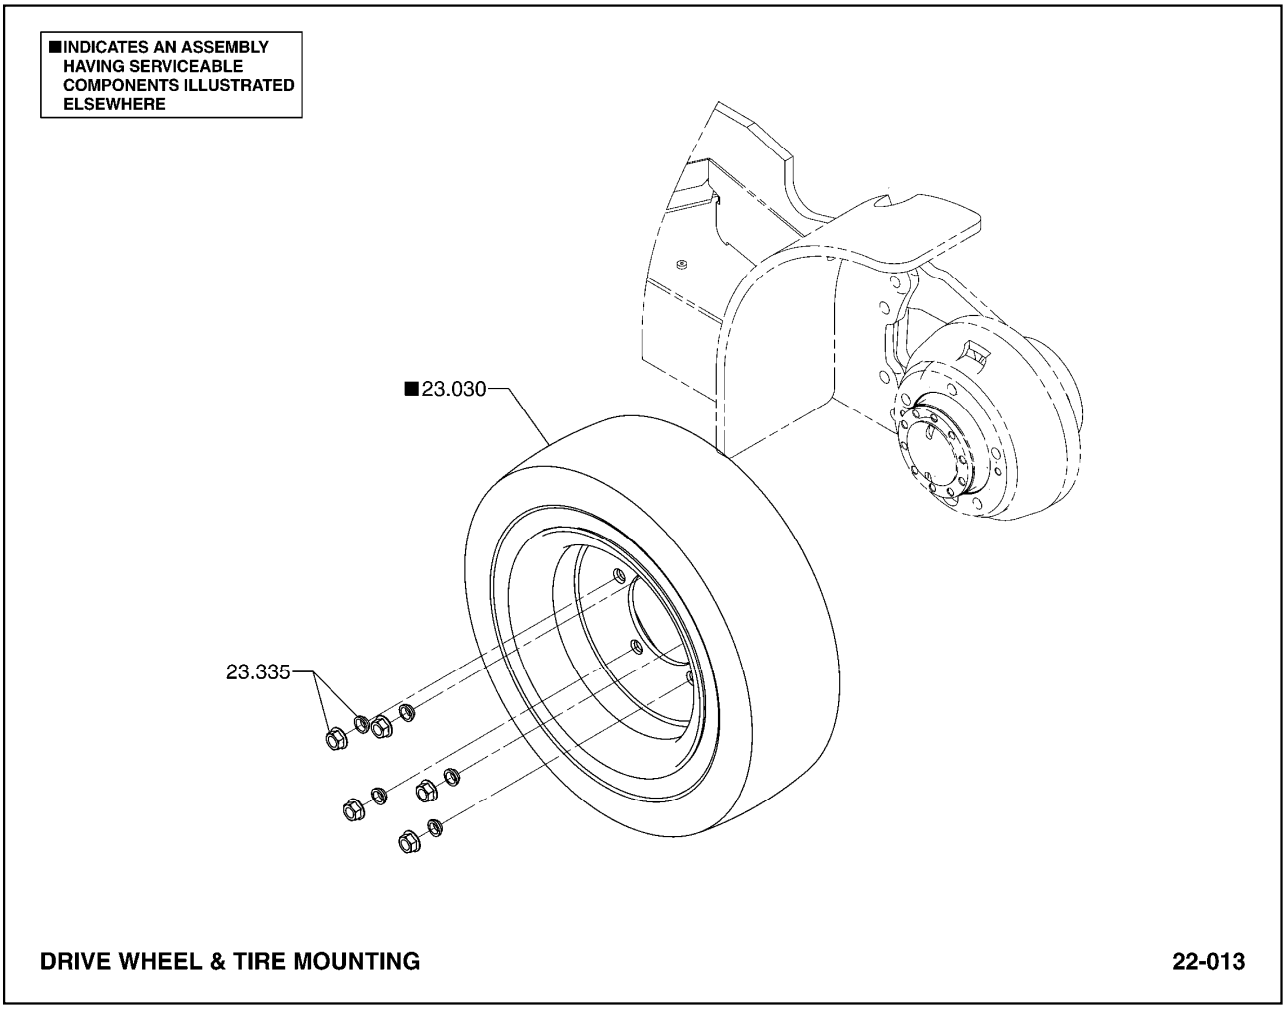

23.030 DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠타이어

23.335 FASTENER, DRIVE WHEEL
패스너

www.truck-freeworkshop.com/forklift/clark/

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

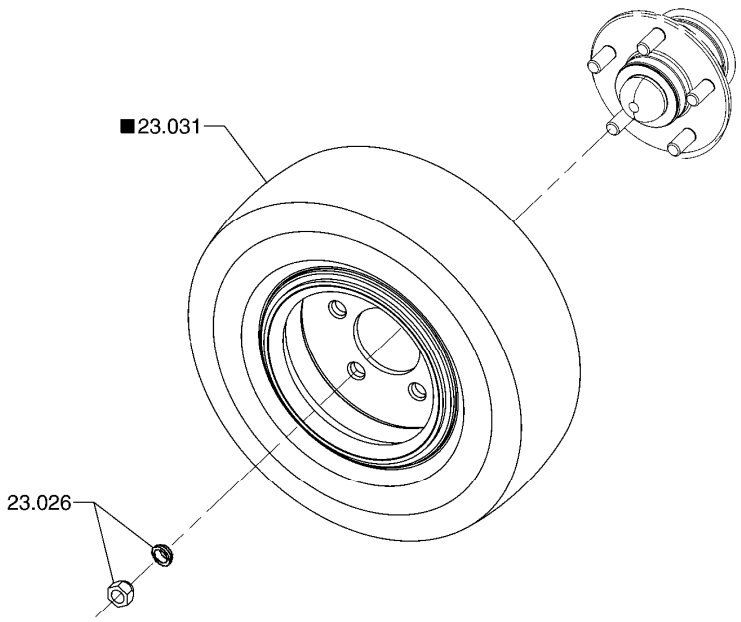

STEER WHEEL & TIRE MOUNTING 22-014

23.026 FASTENER, STEER WHEEL
패스너

23.031 STEER WHEEL AND TIRE ASSEMBLY
휠

www.truck-freeworkshop.com/forklift/clark/

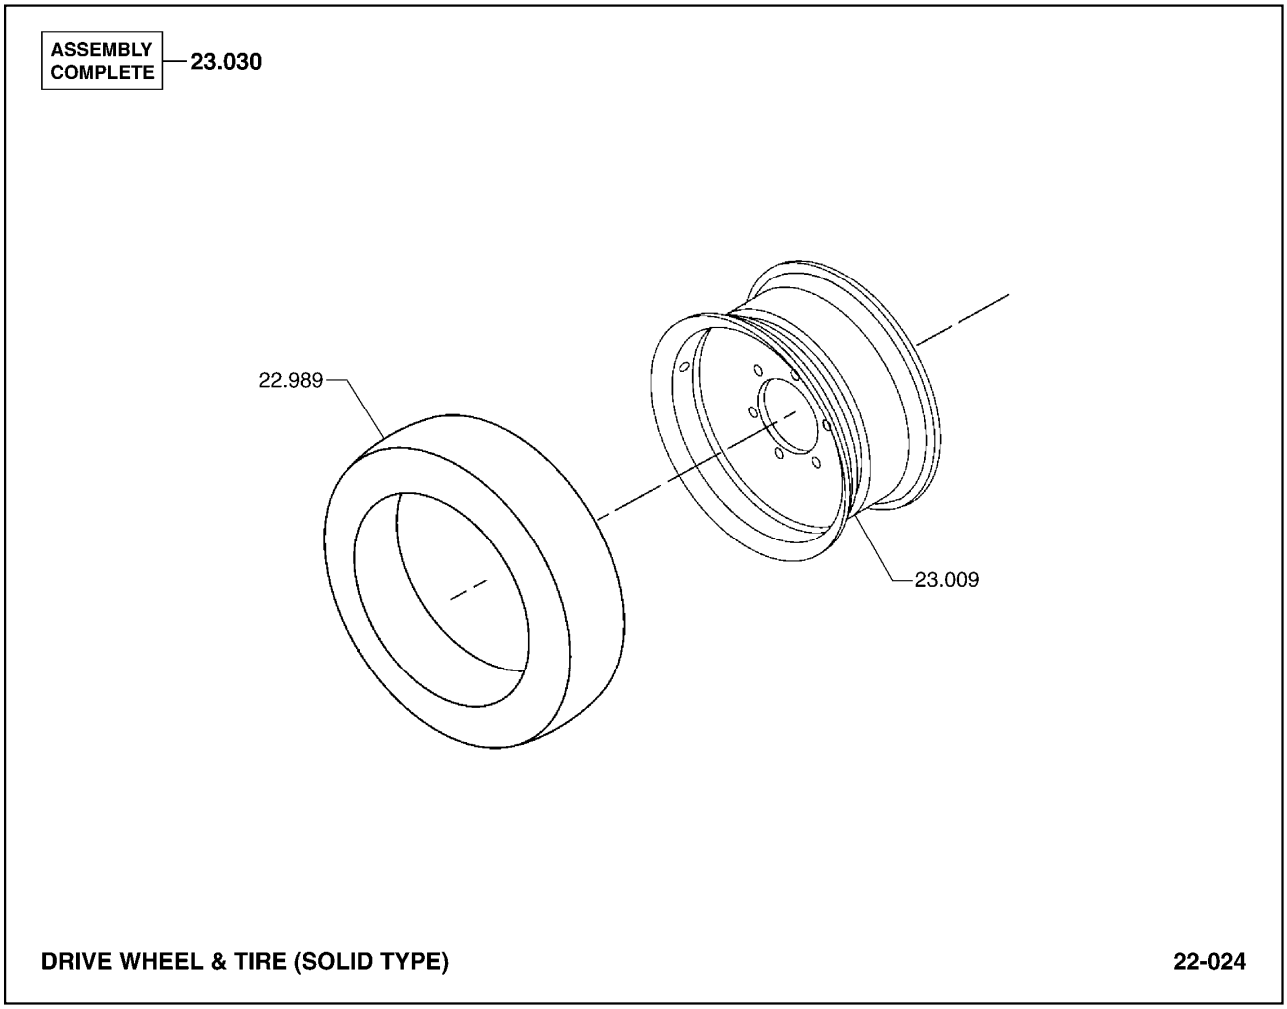

22.989	TIRE ASSEMBLY, DRIVE *
23.009	RIM ASSEMBLY, DRIVE WHEEL 림
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠타이어

www.truck-freeworkshop.com/forklift/clark/

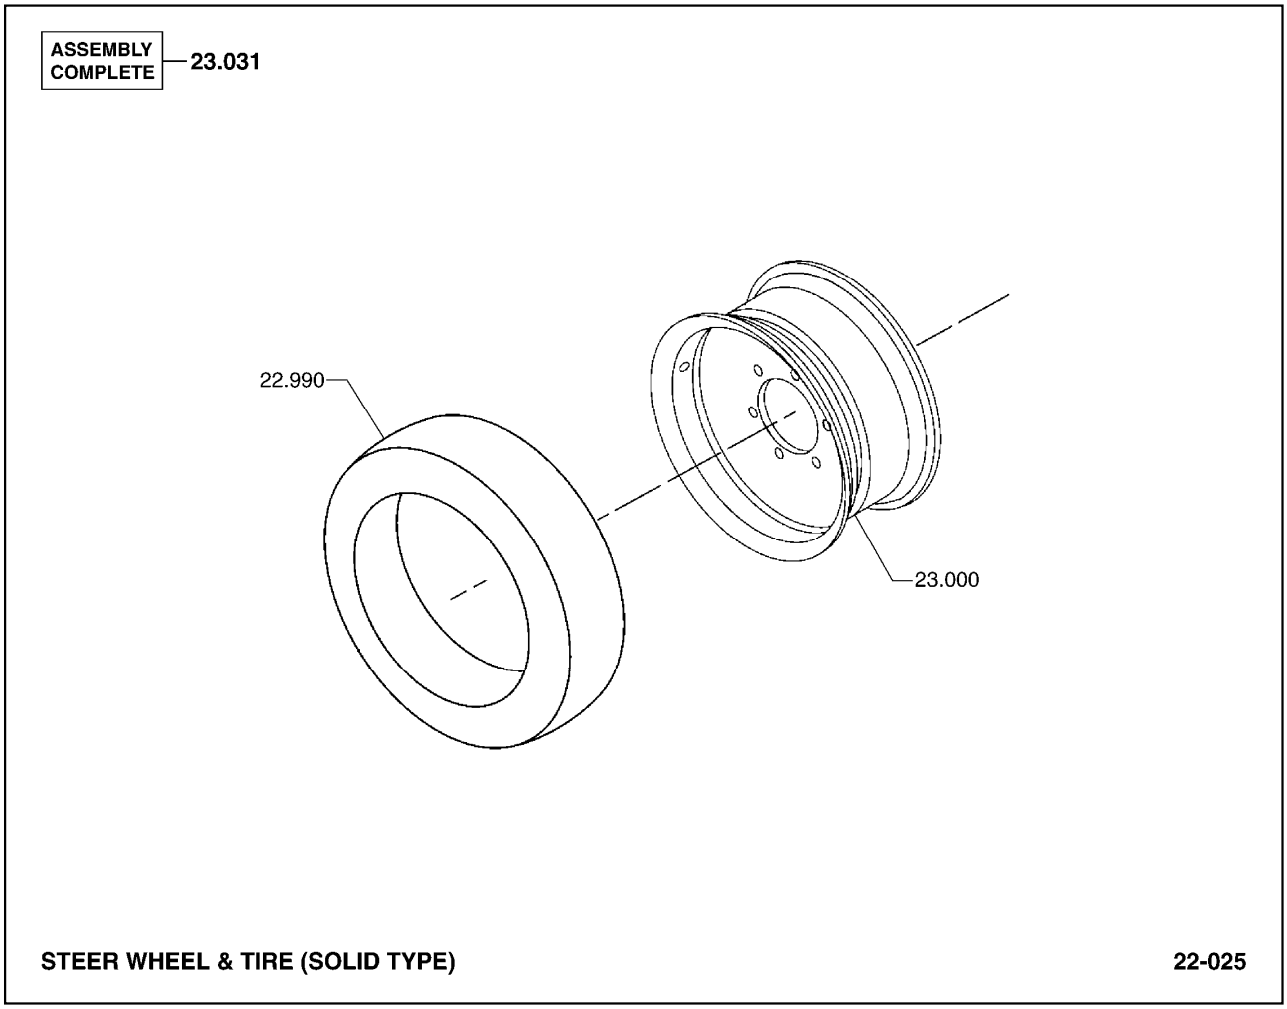

22.990	TIRE ASSEMBLY, STEER *
23.000	RIM ASSEMBLY, STEER WHEEL 림
23.031	STEER WHEEL AND TIRE ASSEMBLY 휠

www.truck-freeworkshop.com/forklift/clark/

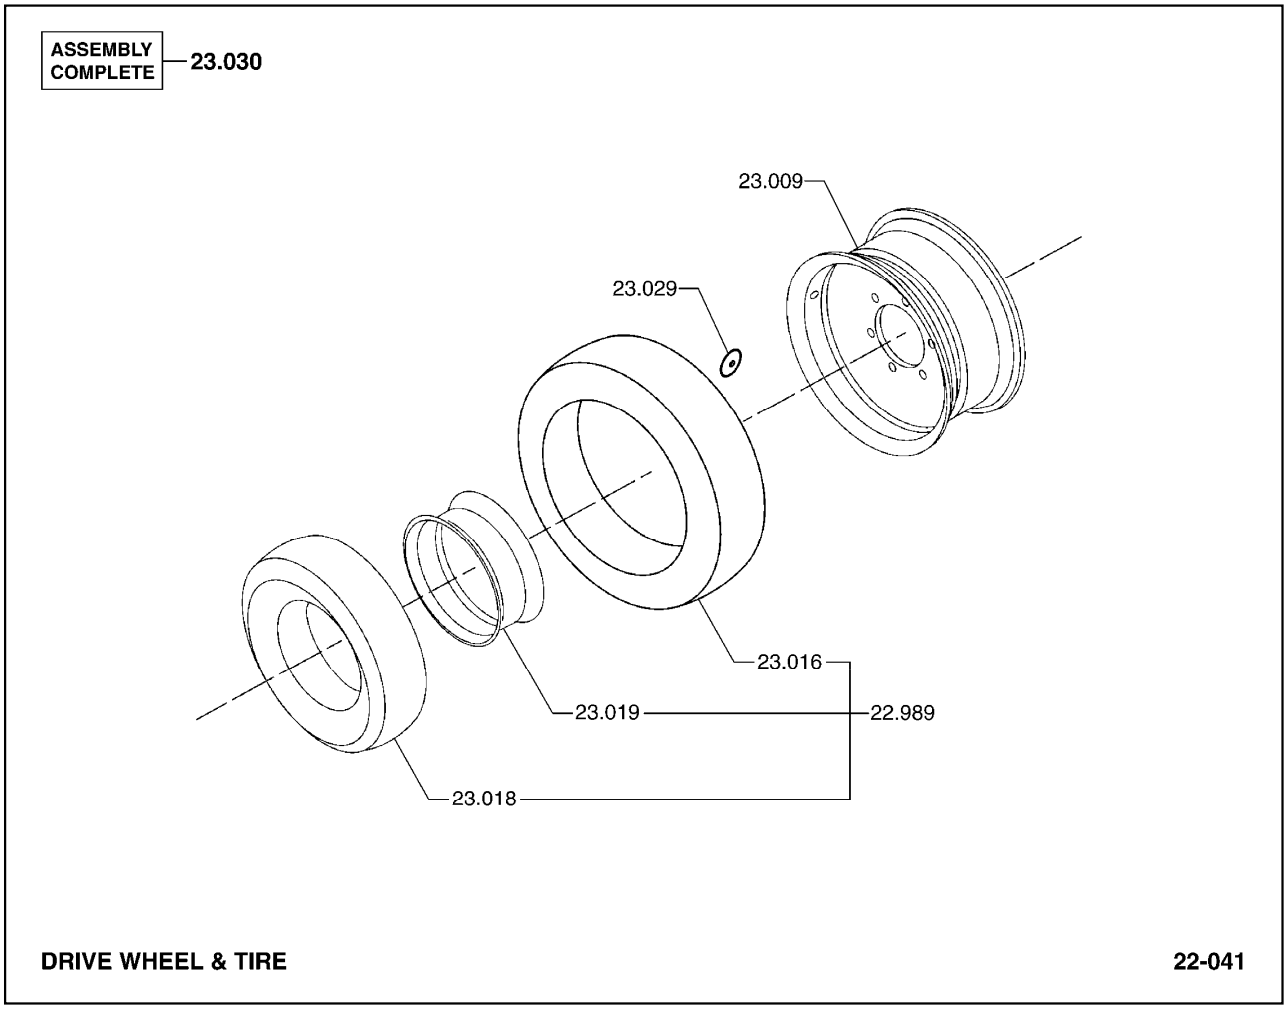

22.989	TIRE ASSEMBLY, DRIVE *
23.009	RIM ASSEMBLY, DRIVE WHEEL 림
23.016	TIRE, DRIVE WHEEL 타이어
23.018	TUBE, DRIVE WHEEL 튜브
23.019	FLAP, DRIVE WHEEL TUBE 플랩
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠타이어

www.truck-freeworkshop.com/forklift/clark/

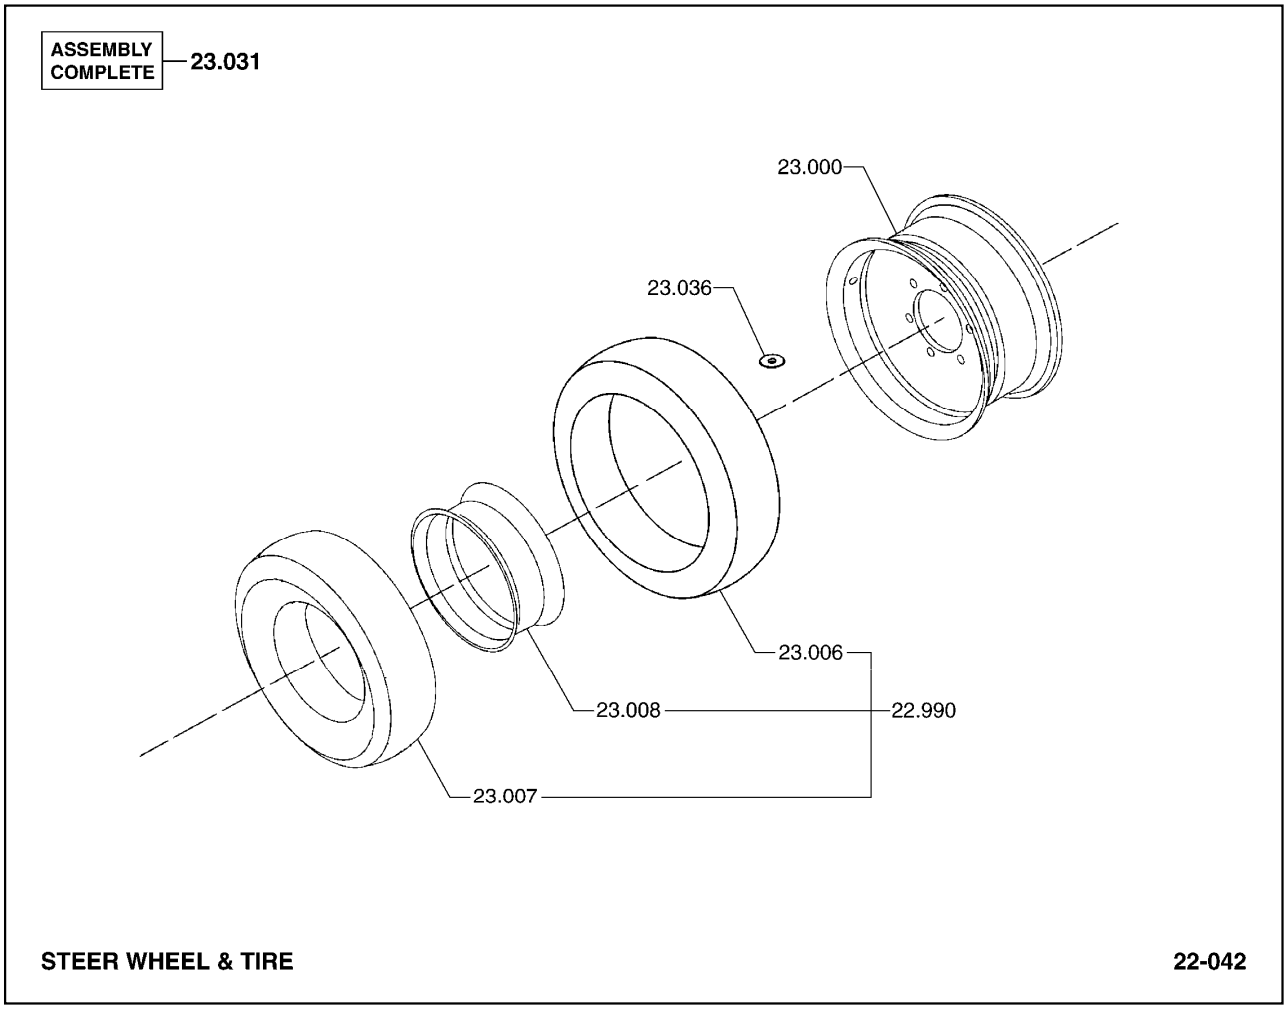

22.990	TIRE ASSEMBLY, STEER *
23.000	RIM ASSEMBLY, STEER WHEEL 림
23.006	TIRE, STEER WHEEL 타이어
23.007	TUBE, STEER WHEEL 튜브
23.008	FLAP, STEER WHEEL 플랩
23.031	STEER WHEEL AND TIRE ASSEMBLY 휠
23.036	FASTENER, STEER WHEEL ASSEMBLY 패스너

www.truck-freeworkshop.com/forklift/clark/

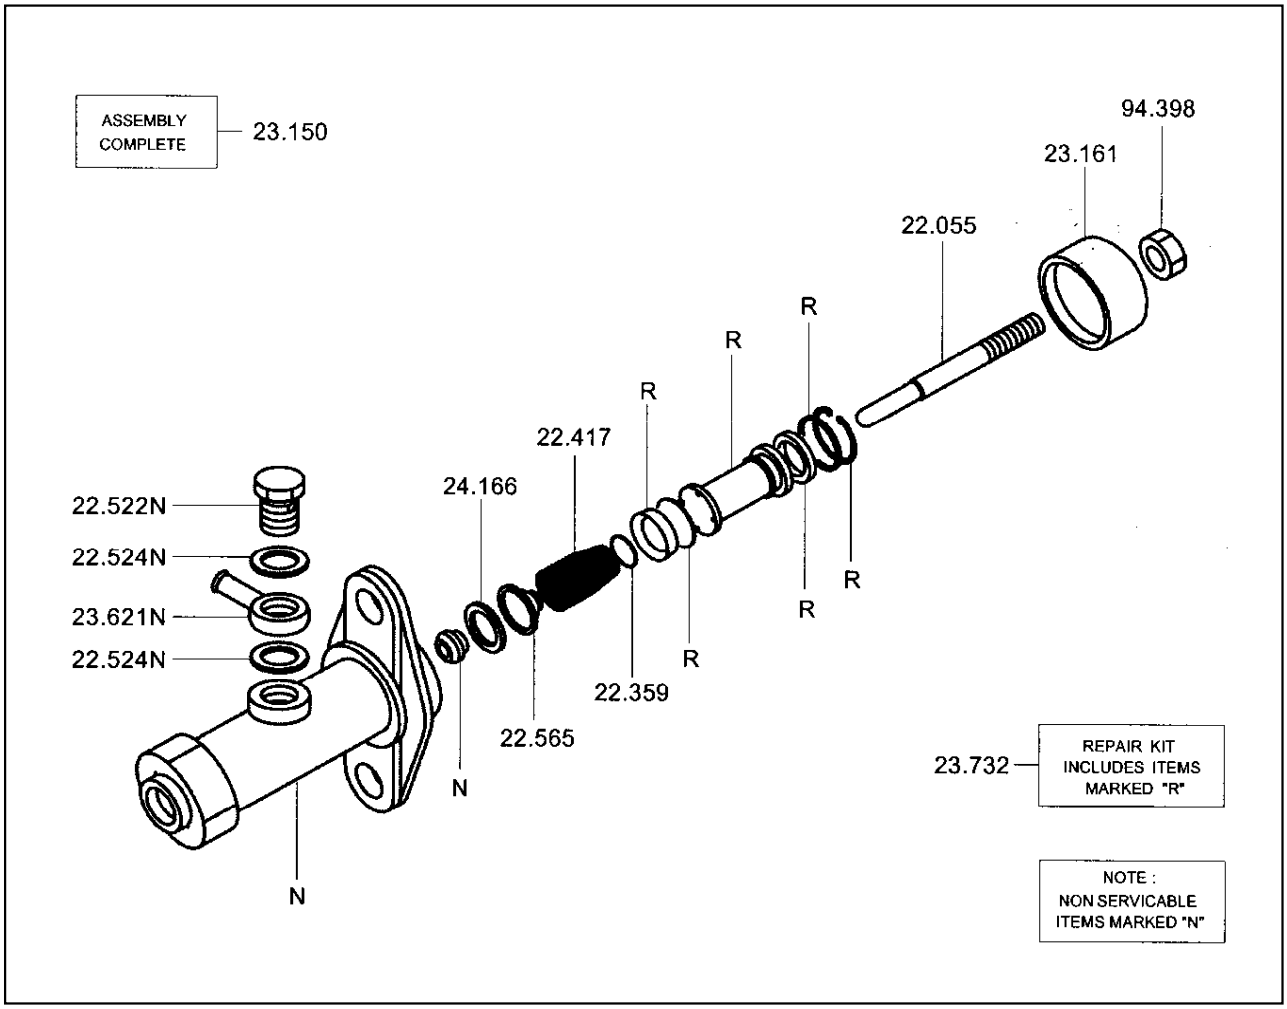

22.055	ROD, MASTER CYLINDER ACTUATING 로드
22.359	SEAT, MASTER CYLINDER BRAKE LINE PORT 시트
22.417	SPRING, MASTER CYLINDER PISTON RETURN 스프링
22.522	FITTING-BOLT, BRAKE CYLINDER INLET 피팅
22.524	SEAL, BRAKE CYLINDER INLET FITTING-BOLT 시일
22.565	VALVE ASSY, BRAKE ENERGIZER ASSY 벨브
23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.161	BOOT, MASTER CYLINDER 부트
23.621	FITTING, MASTER CYLINDER CAP 피팅

www.truck-freeworkshop.com/forklift/clark/

23.732	REPAIR KIT, BRAKE CYLINDER 리페어킷
24.166	SEAT, BRAKE VALVE PISTON SPRING 시트
94.398	NUT, BRAKE MASTER CYLINDER ACTUATING ROD FASTENER 너트

www.truck-freeworkshop.com/forklift/clark/

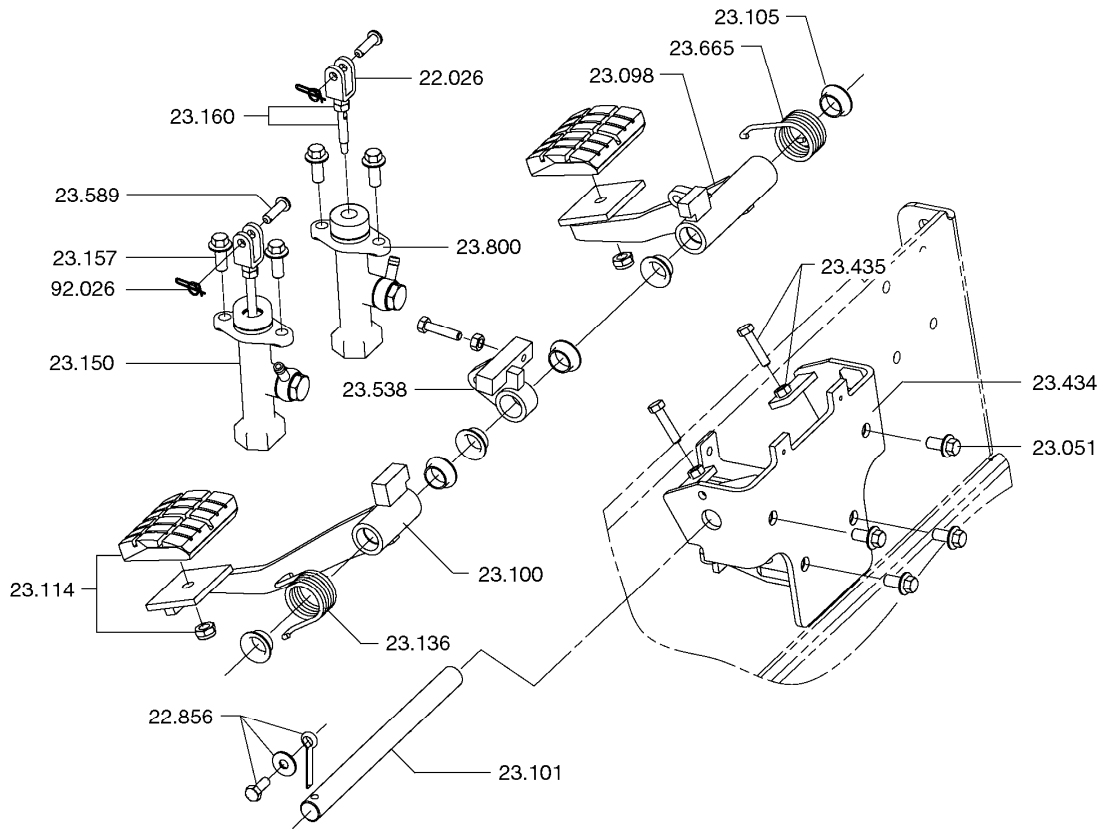

BRAKE & INCHING LINES

23-390

22.026 ROD END, BRAKE PEDAL LINKAGE
로드엔드

22.856 RETAINER, PARKING BRAKE PEDAL PIVOT
리테이너

23.051 FASTENER, MASTER CYLINDER MOUNTING BRACKET
패스너

23.098 PEDAL, AUX BRAKE
페달

23.100 PEDAL, BRAKE
페달

23.101 SHAFT, BRAKE PEDAL
샤프트

23.105 BEARING, BRAKE PEDAL
베어링

23.114 PAD & FASTENER, BRAKE PEDAL
패드와패스너

23.136 SPRING, BRAKE PEDAL RETURN
스프링

www.truck-freeworkshop.com/forklift/clark/

23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.157	FASTENER, BRAKE MASTER CYLINDER ATTACHING 패스너
23.160	ROD, PUSH 로드
23.434	BRACKET, BRAKE PEDAL PIVOT 브라켓
23.435	FASTENER, BRAKE PEDAL PIVOT BRACKET 패스너
23.538	ARM, BRAKE LINKAGE PIVOT 암
23.589	RETAINER, BRAKE ACTUATING LEVER 리테이너
23.665	SPRING, INCHING PEDAL RETURN 스프링
23.800	CYLINDER ASSEMBLY, INCHING MASTER COMPLETE 실린더
92.026	RETAINER, BRAKE MASTER CYLINDER ACTUATING ROD PIN 리테이너

www.truck-freeworkshop.com/forklift/clark/

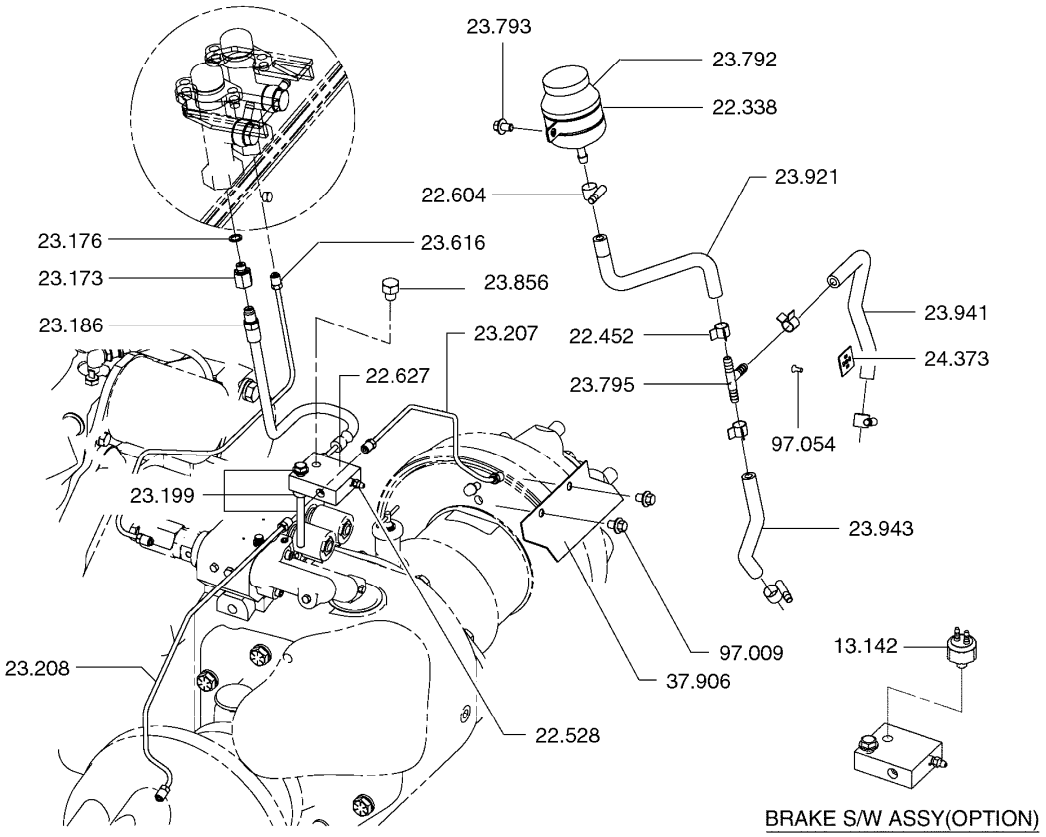

BRAKE LINES

13.142 SWITCH, BRAKE INTERLOCK
스위치

22.338 CLAMP, BRAKE FLUID RESERVOIR
클룻프

22.452 CLAMP, BRAKE MASTER CYLINDER FILLER LINE
클램프

22.528 BLEEDER, BRAKE LINES ADAPTOR
블리더

22.604 CLAMP, BRAKE FLUID RESERVOIR LINE
클램프

22.627 TEE, BRAKE LINE
티

23.173 FITTING, BRAKE MASTER CYLINDER OUTLET
피팅

23.176 GASKET, BRAKE MASTER CYLINDER OUTLET FTG BOLT
가스켓

23.186 LINE, BRAKE MASTER CYLINDER OUTLET
라인

www.truck-freeworkshop.com/forklift/clark/

23.199	FASTENER, BRAKE LINE TEE 패스너
23.207	LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.208	LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.616	LINE, BRAKE MASTER CYLINDER OUTLET 라인
23.792	RESERVOIR, BRAKE FLUID 리저버
23.793	FASTENER, BRAKE FLUID RESERVOIR 패스너
23.795	FITTING, BRAKE MASTER CYLINDER INLET 피팅
23.856	PLUG, BRAKE LINE TEE 플러그
23.921	LINE, RESERVOIR OUTLET 라인
23.941	LINE, BRAKE CYLINDER (LH) 라인
23.943	LINE, BRAKE CYLINDER LINE (RH) 라J
24.373	ADHESIVE, BRAKE FITTING MOUNTING TO COWL 접착제
37.906	PLATE, COWL 플레이트
97.009	FASTENER, COWL PLATE 패스너
97.054	FASTENER, ADHESIVE TIE MOUNTING 패스너

www.truck-freeworkshop.com/forklift/clark/

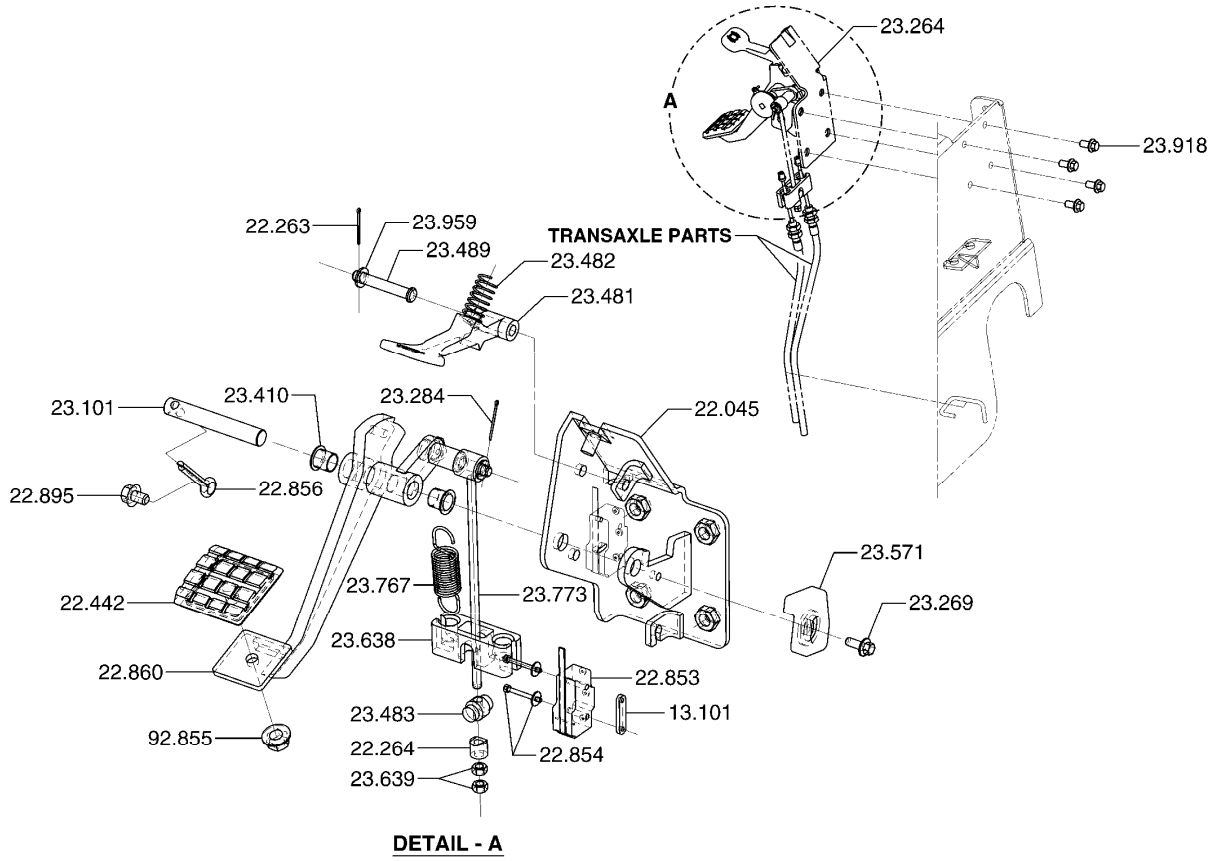

13.101 PLATE, BRAKE LOCK ACTUATING SWITCH
플레이트

22.045 BRACKET, PARKING BRAKE PEDAL PIVOT MTG
브라켓

22.263 RETAINER, PARKING BRAKE RELEASE LEVER PIVOT
리테이너

22.264 ADJUSTOR, PARKING BRAKE
어드져스터

22.442 PAD, PARKING BRAKE PEDAL
패드

22.853 SWITCH, PARKING BRAKE PEDAL ACTUATING
스위치

22.854 FASTENER, PARKING BRAKE PEDAL ACTUATING
패스너

22.855 PIVOT, PARKING BRAKE PEDAL
피봇

22.856 RETAINER, PARKING BRAKE PEDAL PIVOT
리테이너

www.truck-freeworkshop.com/forklift/clark/

22.860	PEDAL, PARKING BRAKE 페달
22.895	FASTENER, PARKING BRAKE PEDAL PIVOT RETAINER 패스너
23.264	BRAKE ASSEMBLY, PARKING 브레이크
23.269	FASTENER, PARKING BRAKE LEVER 패스너
23.284	FASTENER, PARKING BRAKE CABLE BRACKET 패스너
23.410	BEARING, PARKING BRAKE CAM ROLLER 베어링
23.481	LEVER, PARKING BRAKE RELEASE 레버
23.482	SPRING, PARKING BRAKE RELEASE LEVER 스프링
23.483	PIVOT, PARKING BRAKE RELEASE LEVER 피봇
23.489	PIVOT, PARKING BRAKE RELEASE LEVER 피봇
23.571	BUMPER, PARKING BRAKE LEVER 범퍼
23.638	ANCHOR, PARKING BRAKE CABLE 앵커
23.639	FASTENER, PARKING BRAKE CABLE ANCHOR 패스너
23.767	SPRING, PARKING BRAKE DRAW 스프링
23.851	LINK, PARKING BRAKE 링크
23.918	FASTENER, PARKING BRAKE PEDAL PIVOT BRACKET 패스너
23.959	FASTENER, PARKING BRAKE RELEASE VALVE 패스너
92.855	NUT, PARKING BRAKE FASTENER 너트

www.truck-freeworkshop.com/forklift/clark/

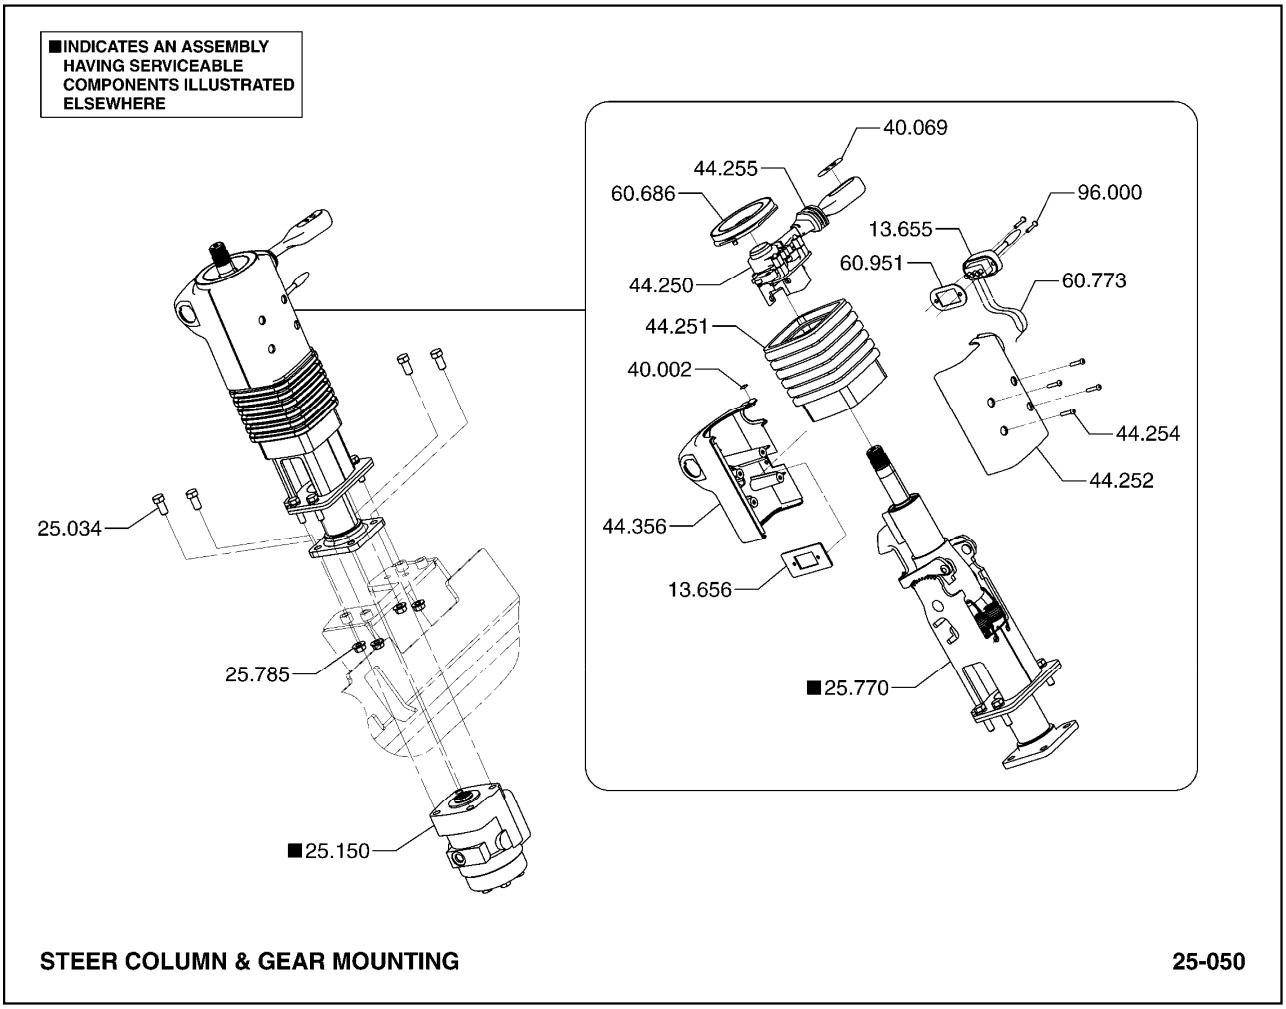

05.185 BASE, DIRECTIONAL SELECTOR LEVER
베이스

06.101 LEVER ASSEMBLY, FORWARD & REVERSE
레버

13.110 SWITCH, DIRECTIONAL CONTROL (FORWARD)
스위치

13.111 FASTENER, DIRECTIONAL CONTROL SWITCH
패스너

13.130 FASTENER, DIRECTION CONTROL LEVER
패스너

13.655 SWITCH, TURN INDICATOR
스위치

13.656 BRACKET, TURN INDICATOR SWITCH
브라켓

25.034 FASTENER, STEERING GEAR ATTACHING
패스너

25.150 GEAR BOX ASSEMBLY, STEERING
기어박스

www.truck-freeworkshop.com/forklift/clark/

25.770	SHAFT & COLUMN ASSY, POWER STEERING (TILT) 샤프트와컬럼
25.785	FASTENER, TILT STEERING SHAFT & COLUMN ASSEMBLY 패스너
40.002	LEGEND, SHIFT PATTERN 범례
40.069	DECAL, FORWARD-BACKWARD 드칼
44.250	DIRECTIONAL CONTROL ASSEMBLY 방향컨트롤
44.251	HOUSING, DIRECTIONAL CONTROL ASSEMBLY 하우징
44.252	COVER, DIRECTIONAL CONTROL ASSEMBLY HOUSING 커버
44.254	FASTENER, DIRECTIONAL CONTROL ASSY HOUSING COVER 패스너
44.255	SEAL, DIRECTIONAL CONTROL ASSY LEVER 시일
44.356	COVER, DIRECTIONAL CONTROL ASSEMBLY HOUSING REAR 커버
60.483	RETAINER, DIRECTIONAL CONTROL LEVER 리테이너
60.686	RING, HORN CONTACT 링
60.773	HARNESS, TURN SIGNAL 하네스
60.951	GROMMET, TURN INDICATOR SWITCH 그로멧
67.017	FASTENER, DIRECTIONAL CONTROL DETENT SUPPORT 패스너
67.018	SPRING, DIRECTIONAL CONTROL DETENT 스프링
96.000	FASTENER, TURN INDICATOR SWITCH 패스너

www.truck-freeworkshop.com/forklift/clark/

ASSEMBLY COMPLETE — 25.150

SEAL KIT INCLUDES ITEMS MARKED "K" — 25.109

NEEDLE BEARING KIT INCLUDES ITEMS MARKED "R" — 25.972

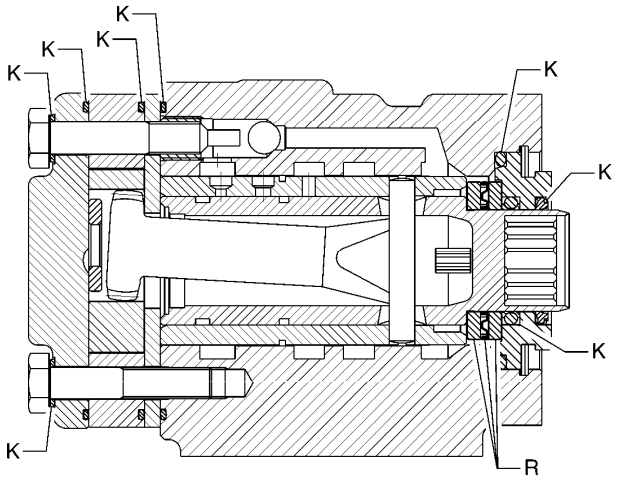

STEERING UNIT **25-076**

25.109	KIT, STEER GEAR SEAL 킷
25.150	GEAR BOX ASSEMBLY, STEERING 기어박스
25.972	BEARING KIT, STEERING GEAR *

www.truck-freeworkshop.com/forklift/clark/

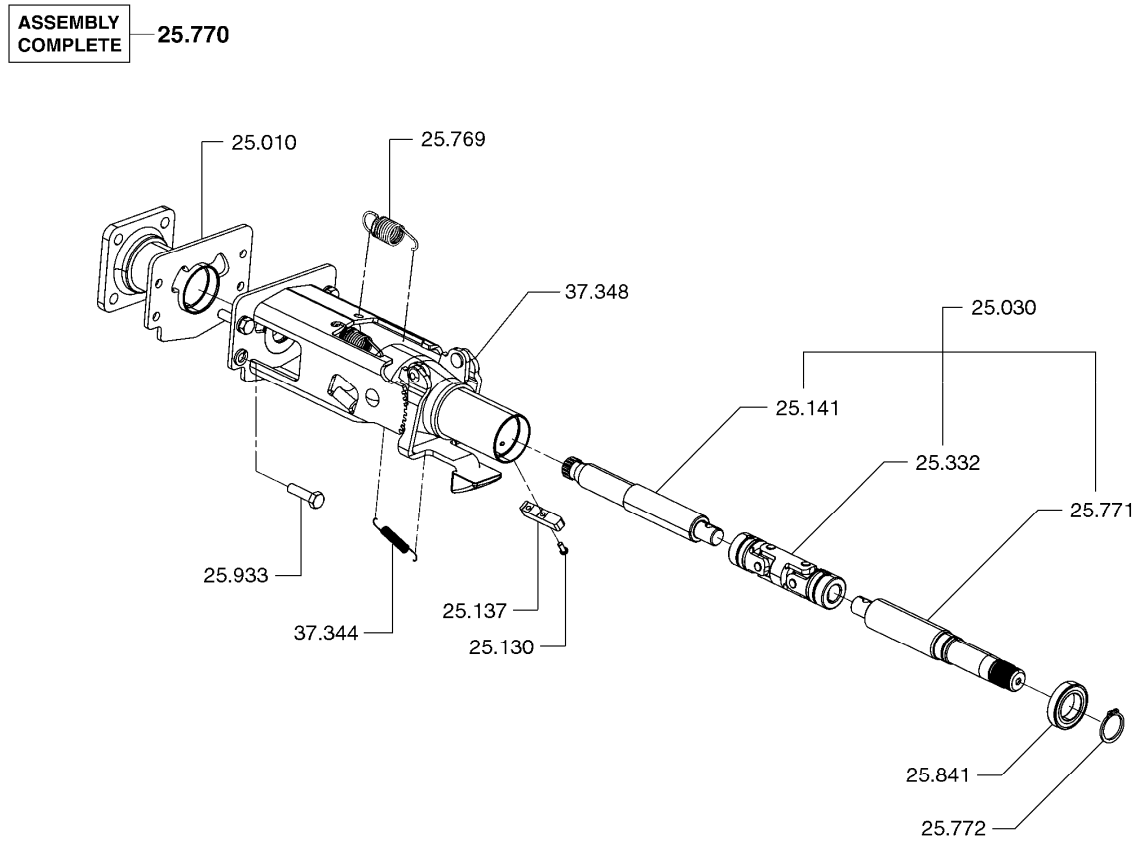

25.010 JACKET, STEERING COLUMN
자켓

25.030 SHAFT ASSEMBLY, STEERING COLUMN
샤프트

25.130 FASTENER, DIRECTIONAL ASSEMBLY
패스너

25.137 KEY, DIRECTIONAL ASSEMBLY
키

25.141 SHAFT, STEERING GEAR
샤프트

25.332 YOKE, STEER UNIVERSAL JOINT CLAMP
요크

25.769 SPRING, STEERING COLUMN TILTING (LOWER)
스프링

25.770 SHAFT & COLUMN ASSY, POWER STEERING (TILT)
샤프트와컬럼

25.771 SHAFT, STEERING COLUMN (TILT)
샤프트

www.truck-freeworkshop.com/forklift/clark/

25.772	RETAINER, STEERING COLUMN SHAFT 리테이너
25.841	BUSHING, STEERING GEAR SHAFT 부싱
25.933	FASTENER, STEERING COLUMN 패스너
37.344	SPRING, STEERING COLUMN TILTING 스프링
37.348	PYLON, STEERING COLUMN 파일런

www.truck-freeworkshop.com/forklift/clark/

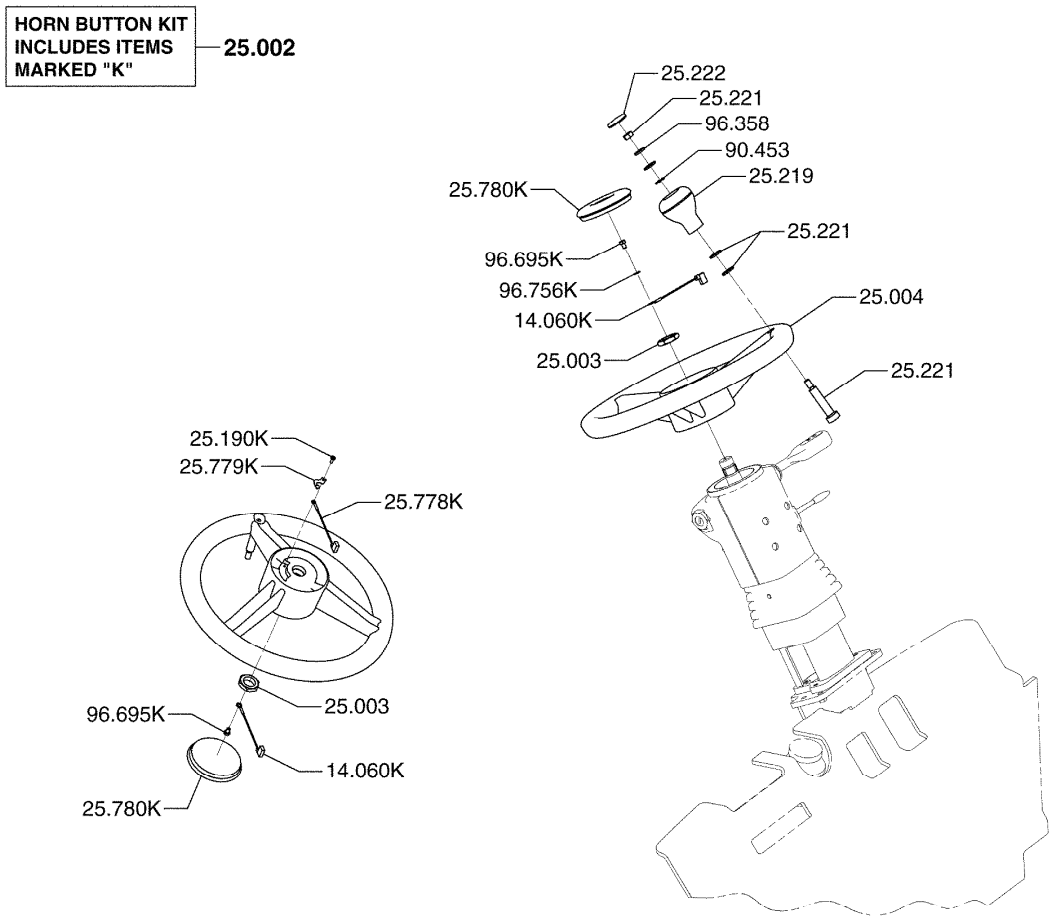

STEERING WHEEL MOUNTING **25-250**

14.060	WIRE, HORN BUTTON TERM TO CONNECTOR 와이어
25.002	HORN BUTTON KIT 혼버튼킷
25.003	NUT, HANDWHEEL 너트
25.004	HAND WHEEL, STEERING GEAR 핸드휠
25.190	FASTENER, HORN BUTTON 패스너
25.219	KNOB, STEERING HAND WHEEL SPINNER 노브
25.221	FASTENER, STEERING SPINNER KNOB 패스너
25.222	CAP, STEERING SPINNER KNOB 캡
25.778	WIRE, CONTACT HORN 와이어

www.truck-freeworkshop.com/forklift/clark/

25.779	CONTACT, HORN 컨택트
25.780	HORN BUTTON 혼버튼
90.453	WASHER, STEERING SPINNER KNOB FASTENER 와셔
96.358	WASHER, STEERING HANDWHEEL SPINNER KNOB FASTENER 와셔
96.695	FASTENER, WIRE MOUNTING 패스너
96.756	WASHER, WIRE MOUNTING FASTENER 와셔

www.truck-freeworkshop.com/forklift/clark/

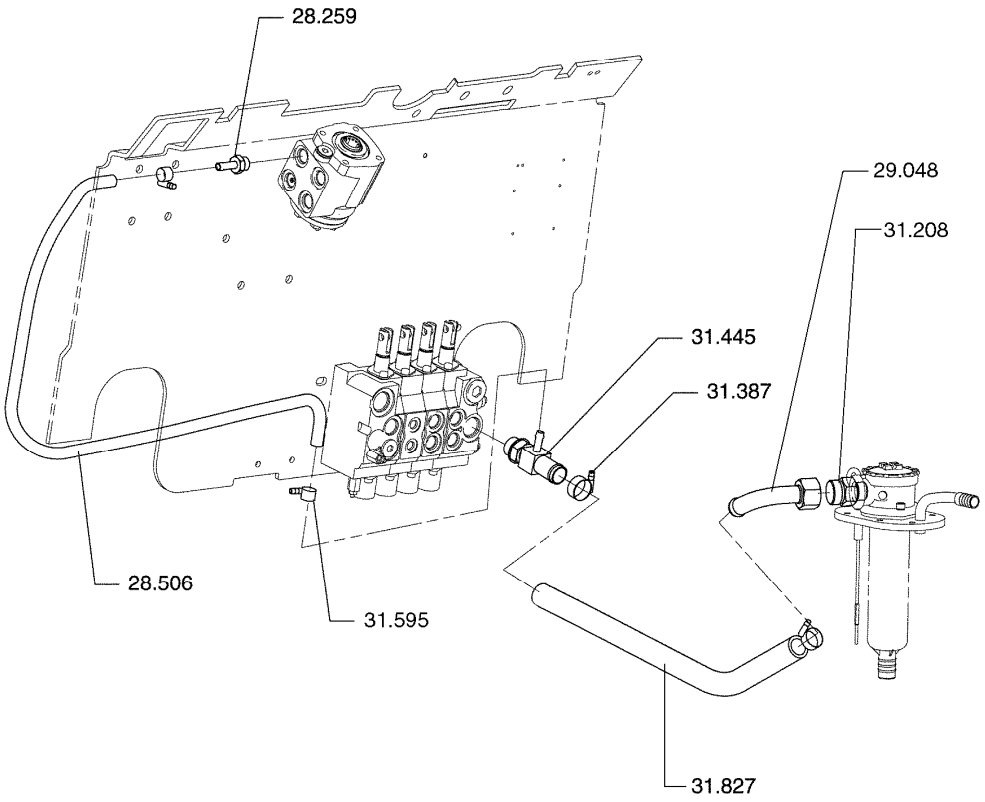

HYDRAULIC RETURN LINES **26-030**

28.259	FITTING, SUMP RETURN LINE 피팅
28.506	LINE, SUMP RETURN 라인
29.048	PIPE, HYDRAULIC FILTER 파이프
31.208	FITTING, MAIN VALVE LIFT PORT (LOWER) 피팅
31.387	CLAMP, MAIN VALVE TO SUMP LINE 클램프
31.445	FITTING, MAIN VALVE TO FILTER LINE 피팅
31.595	CLAMP, SUMP RETURN LINE FITTING 클램프
31.827	LINE, FILTER INLET 라인

www.truck-freeworkshop.com/forklift/clark/

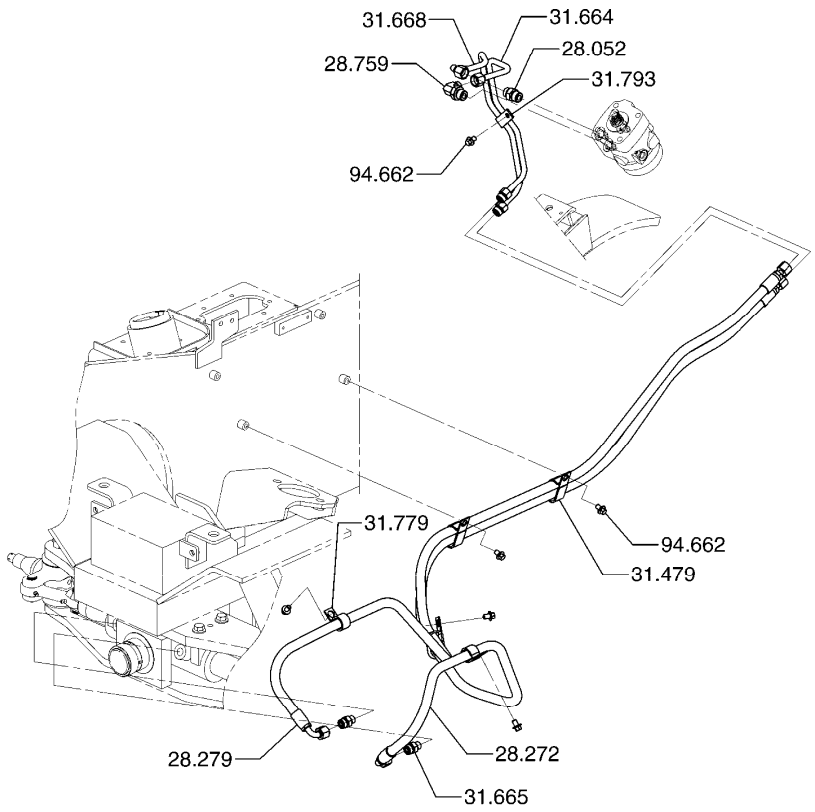

STEER LINE **26-218**

28.052 FITTING, STEERING GEAR
피팅

28.272 LINE, STEER CYLINDER INLET
라인

28.279 LINE, STEER CYLINDER INLET
라인

28.759 FITTING, STEER VALVE OUTLET PORT
피팅

31.479 CLAMP, STEERING LINES
클램프

31.664 LINE, STEERING CYLINDER ANCHOR PORT
라인

31.665 FITTING, STEERING CYLINDER ANCHOR PORT
피팅

31.668 LINE, STEERING CYLINDER ROD PORT
라인

31.779 CLAMP, POWER STEERING LINES
클램프

www.truck-freeworkshop.com/forklift/clark/

31.793	CLAMP, POWER STEERING LINES 클램프
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

www.truck-freeworkshop.com/forklift/clark/

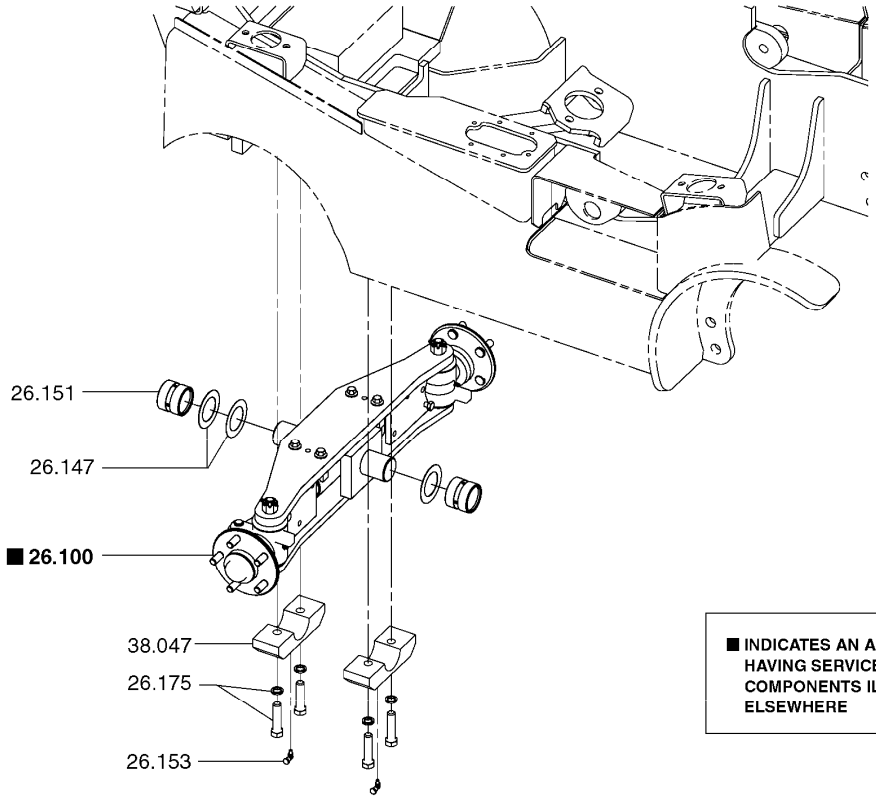

STEER AXLE MOUNTING 26-219

26.100	AXLE ASSEMBLY, STEERING 스티어액슬
26.147	WASHER, STEER AXLE PIVOT PIN THRUST 와셔
26.151	BUSHING, STEER AXLE TO SUPPORT 부싱
26.153	FITTING, STEER AXLE TO FRAME LUBRICATION 피팅
26.175	FASTENER, SILENT BLOCK TO FRAME (REAR) 패스너
38.047	BRACKET, STEER AXLE MOUNTING 브라켓

www.truck-freeworkshop.com/forklift/clark/

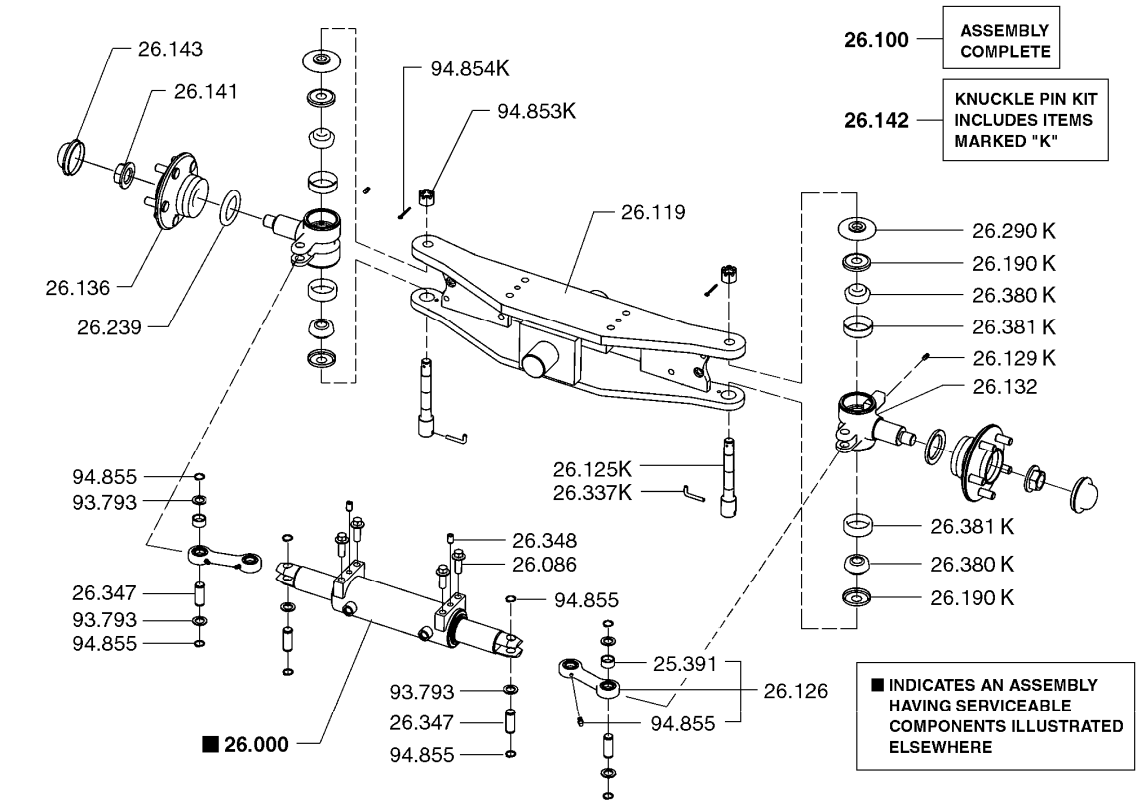

25.391	BEARING, STEERING ARM 베어링
26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.086	FASTENER, STEERING CYLINDER ANCHOR END 패스너
26.100	AXLE ASSEMBLY, STEERING 스티어액슬
26.119	AXLE, STEER 액슬
26.125	PIN, STEER AXLE KNUCKLE 핀
26.126	ARM, RH STEERING 암
26.129	FITTING - LUB, STEER AXLE KNUCKLE 피팅
26.132	KNUCKLE, STEER AXLE (RH) 너트

www.truck-freeworkshop.com/forklift/clark/

26.136	HUB & CUP, STEER WHEEL 허브와컵
26.141	FASTENER, STEER WHEEL HUB 패스너
26.142	PIN KIT, STEER AXLE KNUCKLE 핀킷
26.143	CAP, STEER WHEEL HUB 캡
26.190	SEAL, STEER AXLE KNUCKLE OIL 시일
26.239	SEAL, STEER AXLE FORK COVER 시일
26.290	RETAINER, STEER AXLE KNUCKLE PIN LOWER BEARING 리테이너
26.337	LOCATOR, STEER AXLE KNUCKLE PIN 로케이터
26.347	PIN, STEER ARM 핀
26.348	LOCATOR, STEER CYLINDER 로케이터
26.380	CUP, STEER AXLE KNUCKLE PIN 컵
26.381	CONE, STEER AXLE KNUCKLE 콘
93.793	WASHER, STEERING ARM PIVOT FASTENER 와셔
94.853	FASTENER, STEER AXLE KNUCKLE PIN 패스너
94.854	COTTER, STEER AXLE KNUCKLE PIN FASTENER 커터
94.855	RETAINER, STEERING ARM PIN 리테이너

www.truck-freeworkshop.com/forklift/clark/

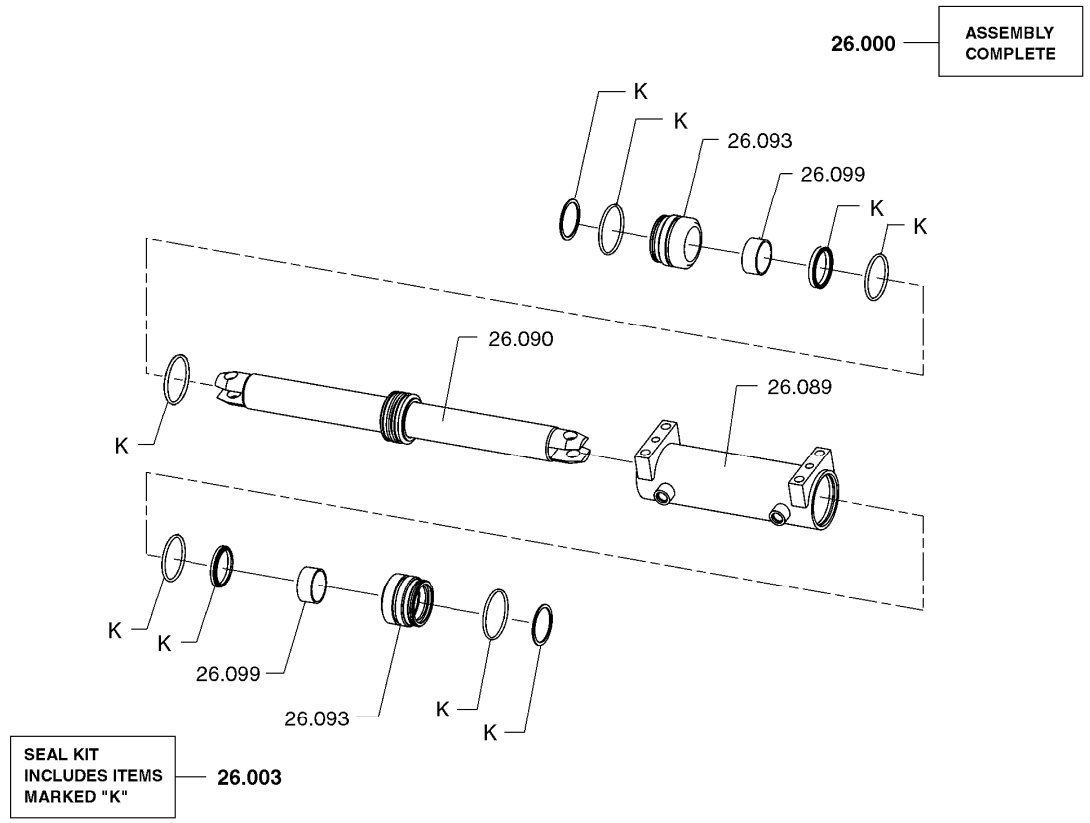

STEERING CYLINDER 26-256

26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 시일킷
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 룽드욱피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.099	BUSHING, STEERING CYLINDER GLAND 부싱

www.truck-freeworkshop.com/forklift/clark/

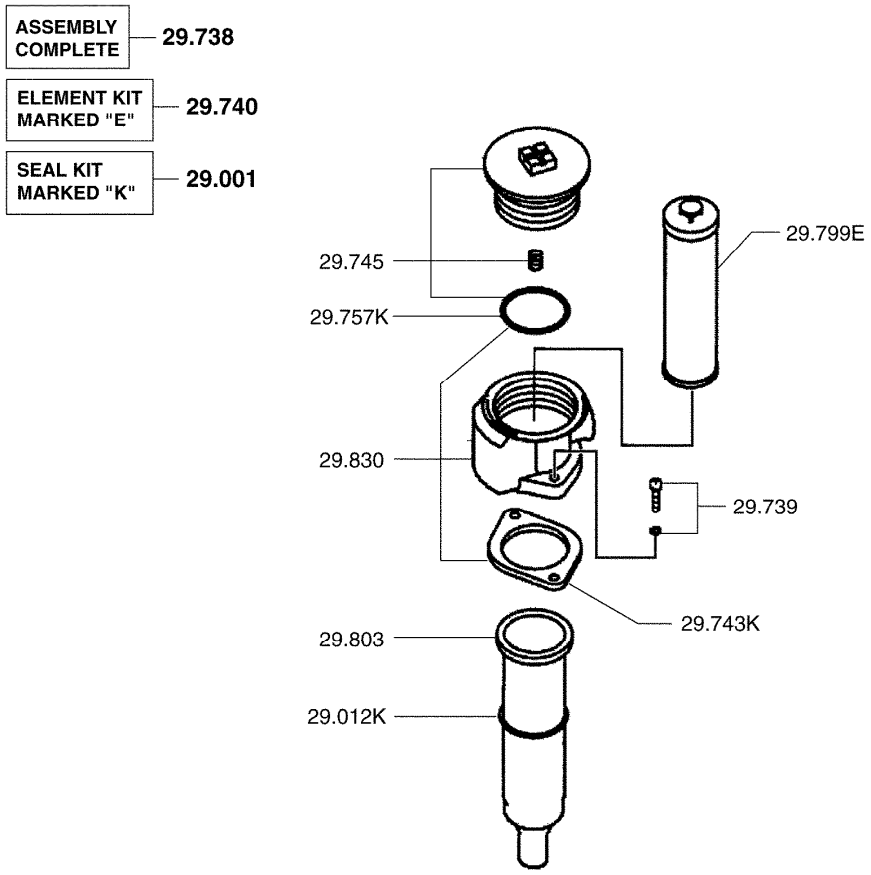

HYDRAULIC SUMP FILTER **29-140**

29.001	GASKET SET, HYDRAULIC OIL FILTER 가스켓셋
29.012	SEAL, HYDRAULIC OIL FILTER BODY 시일
29.738	FILTER ASSEMBLY, HYDRAULIC SUMP 필터
29.739	FASTENER, HYDRAULIC SUMP FILTER 패스너
29.740	CARTRIDGE KIT, SUMP FILTER GASKET 카트리지킷
29.743	GASKET, HYDRAULIC SUMP FILTER 가스켓
29.745	COVER, HYDRAULIC SUMP FILTER INLET 커버
29.757	SEAL, HYDRAULIC SUMP FILTER INLET COVER 시일
29.799	ELEMENT, SUMP BREATHER 엘리먼트

www.truck-freeworkshop.com/forklift/clark/

29.803	GUARD, SUMP FILLER 가드
29.830	ADAPTOR, HYDRAULIC FILTER MTG 어댑터

www.truck-freeworkshop.com/forklift/clark/

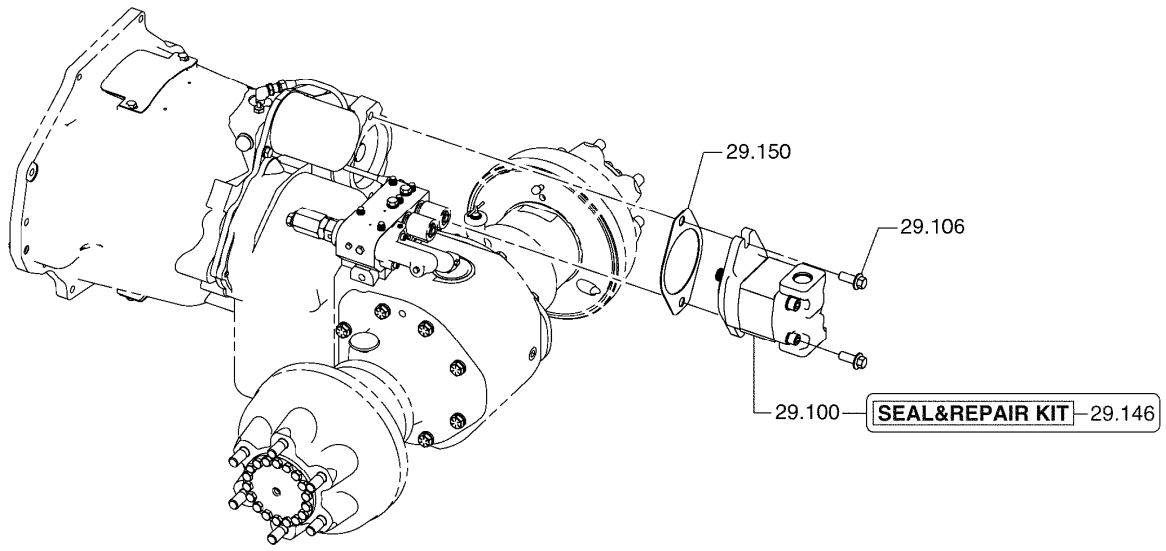

HYDRAULIC PUMP MOUNTING **29-230**

29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.106	FASTENER, PUMP TO PLATE 패스너
29.146	GASKET & SEAL KIT, PUMP 가스켓과시일
29.150	GASKET, HYDRAULIC PUMP MOUNTING 가스켓

www.truck-freeworkshop.com/forklift/clark/

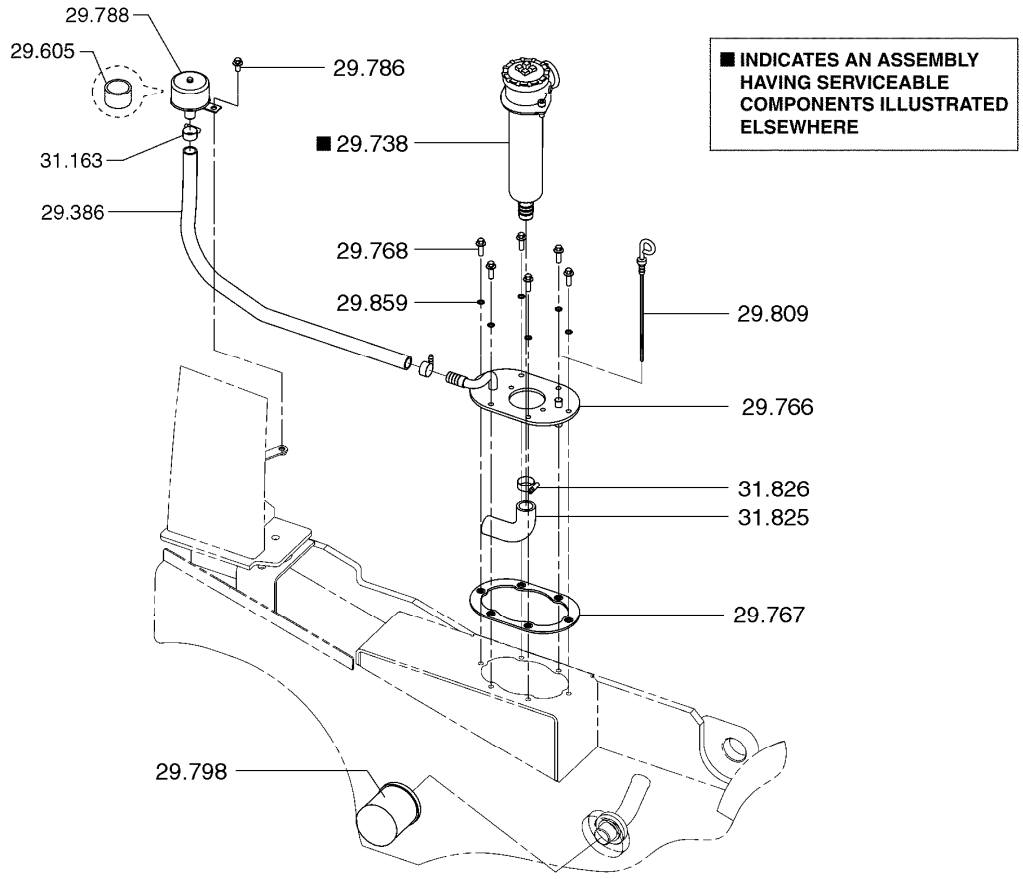

HYDRAULIC SUMP **29-252**

29.386	LINE, SUMP BREATHER 라인
29.605	FILTER, AIR BREATHER 필터
29.738	FILTER ASSEMBLY, HYDRAULIC SUMP 필터
29.766	COVER, SUMP TANK 커버
29.767	SEAL, SUMP TANK COVER 시일
29.768	FASTENER, SUMP TANK COVER 패스너
29.786	FASTENER, SUMP BREATHER 패스너
29.788	BREATHER, SUMP 브리더
29.798	SCREEN, HYDRAULIC SUMP PRE FILTER 스크린

www.truck-freeworkshop.com/forklift/clark/

29.809	DIPSTICK, SUMP LEVEL 딥스틱
29.859	SEAL, DIPSTICK SUMP LEVEL ADAPTOR 시일
31.163	CLAMP, SUMP RETURN LINE 클램프
31.825	LINE, FILTER INLET 라인
31.826	CLAMP, FILTER INLET LINE 클램프

www.truck-freeworkshop.com/forklift/clark/

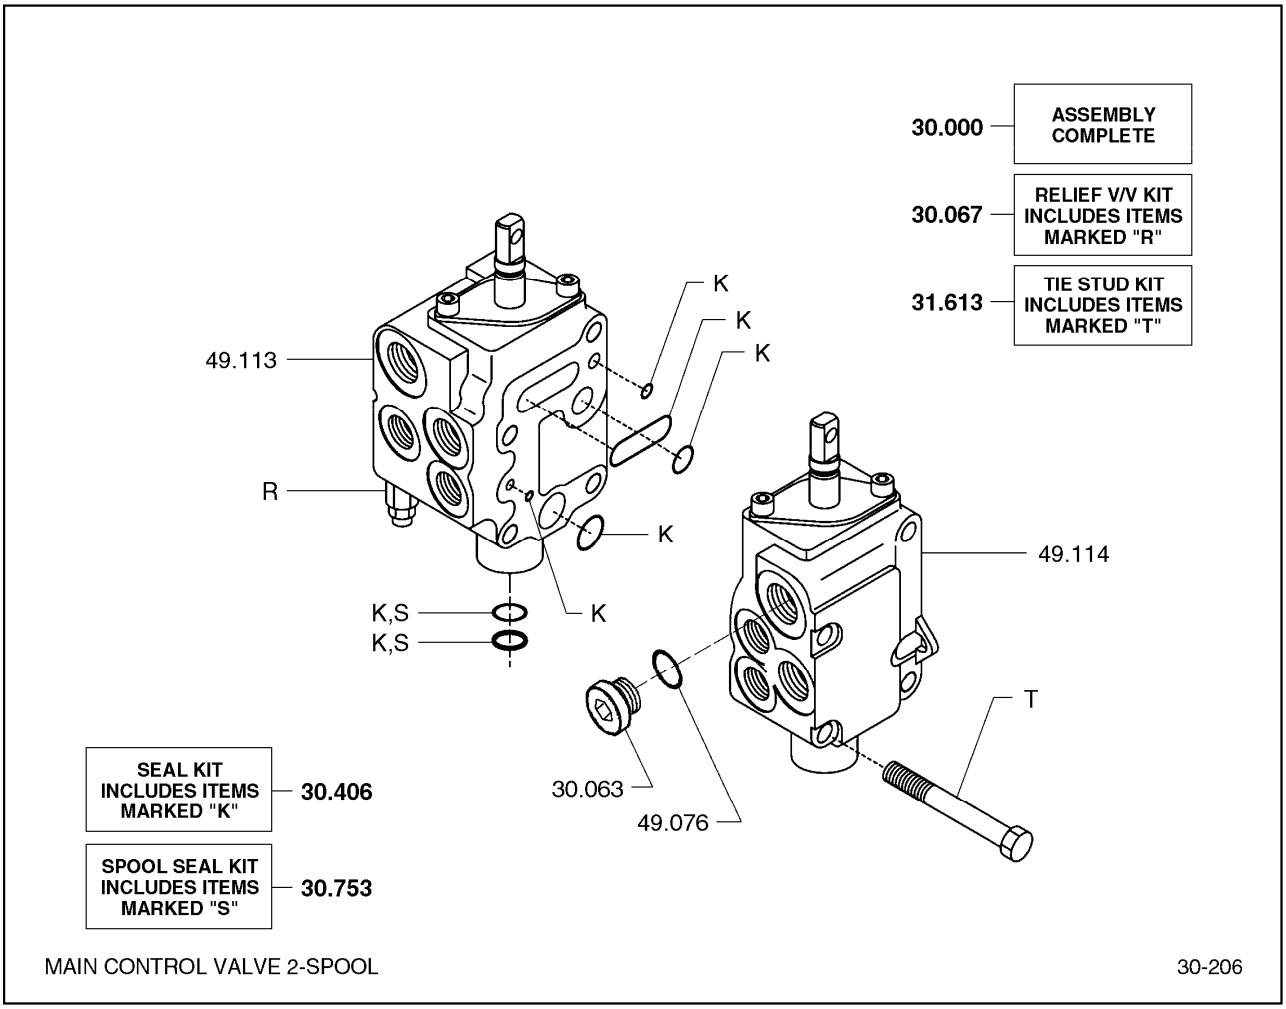

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.063 PLUG, INLET SECTION PRESSURE PORT
플러그

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.753 SPOOL SEAL KIT
스풀시일킷

31.613 TIE STUD KIT, HYDRAULIC VALVE
타이스터드킷

49.076 SEAL, MAIN HYDRAULIC VALVE INLET SECTION
시일

49.113 LIFT SECTION, HYDRAULIC VALVE
리프트섹션

49.114 TILT SECTION, HYDRAULIC VALVE
틸트섹션

www.truck-freeworkshop.com/forklift/clark/

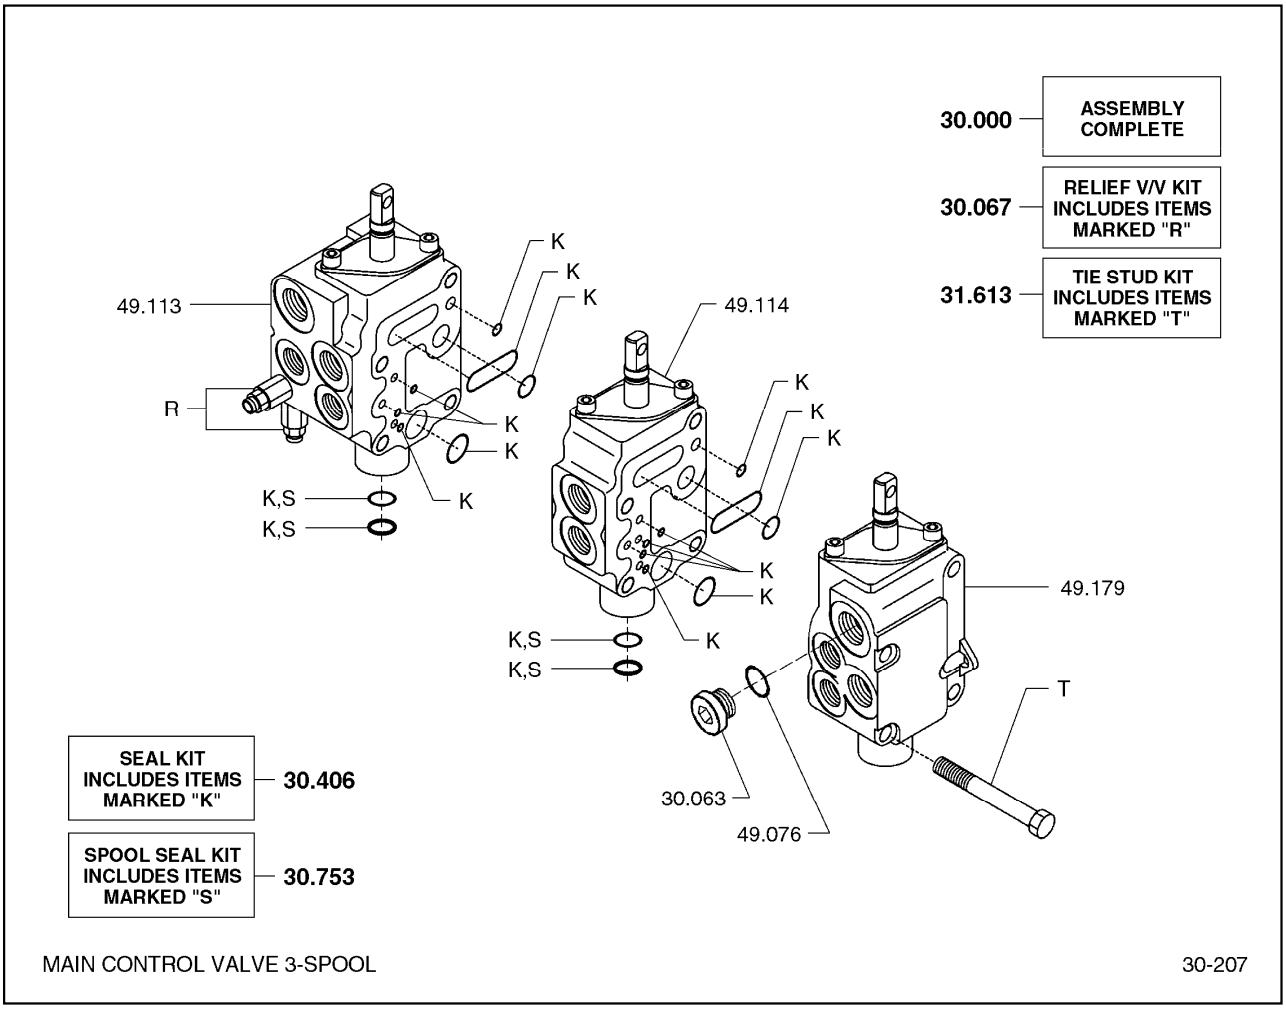

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.063 PLUG, INLET SECTION PRESSURE PORT
플러그

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.753 SPOOL SEAL KIT
스풀시일킷

31.613 TIE STUD KIT, HYDRAULIC VALVE
타이스터드킷

49.076 SEAL, MAIN HYDRAULIC VALVE INLET SECTION
시일

49.113 LIFT SECTION, HYDRAULIC VALVE
리프트섹션

49.114 TILT SECTION, HYDRAULIC VALVE
틸트섹션

www.truck-freeworkshop.com/forklift/clark/

49.179 AUX SECTION, HYDRAULIC VALVE
보조섹션

www.truck-freeworkshop.com/forklift/clark/

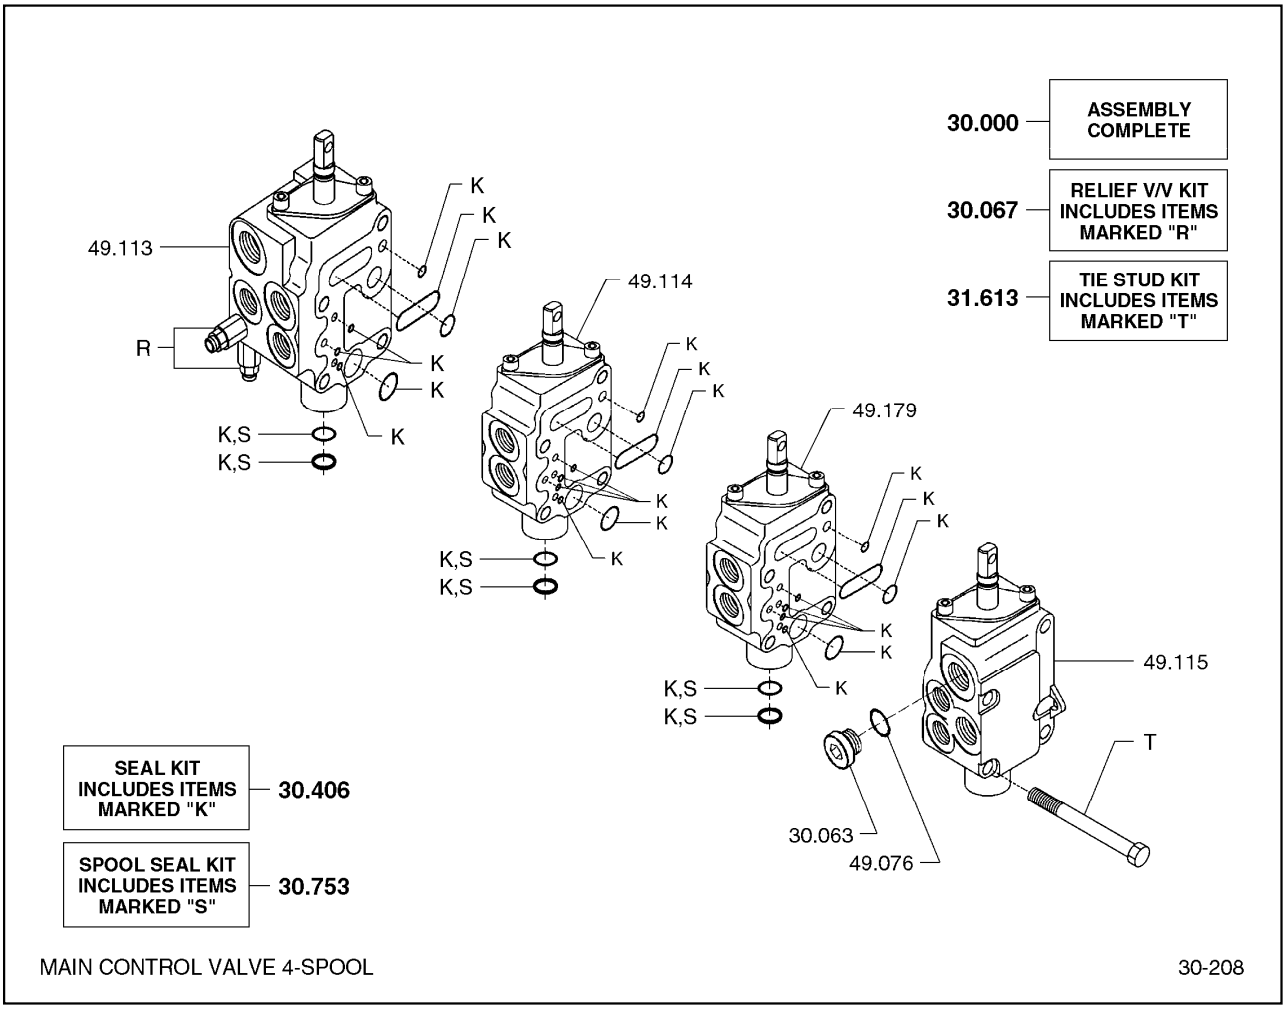

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.063 PLUG, INLET SECTION PRESSURE PORT
플러그

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.753 SPOOL SEAL KIT
스풀시일킷

31.613 TIE STUD KIT, HYDRAULIC VALVE
타이스터드킷

49.076 SEAL, MAIN HYDRAULIC VALVE INLET SECTION
시일

49.113 LIFT SECTION, HYDRAULIC VALVE
리프트섹션

49.114 TILT SECTION, HYDRAULIC VALVE
틸트섹션

www.truck-freeworkshop.com/forklift/clark/

49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.179	AUX SECTION, HYDRAULIC VALVE 보조섹션

www.truck-freeworkshop.com/forklift/clark/

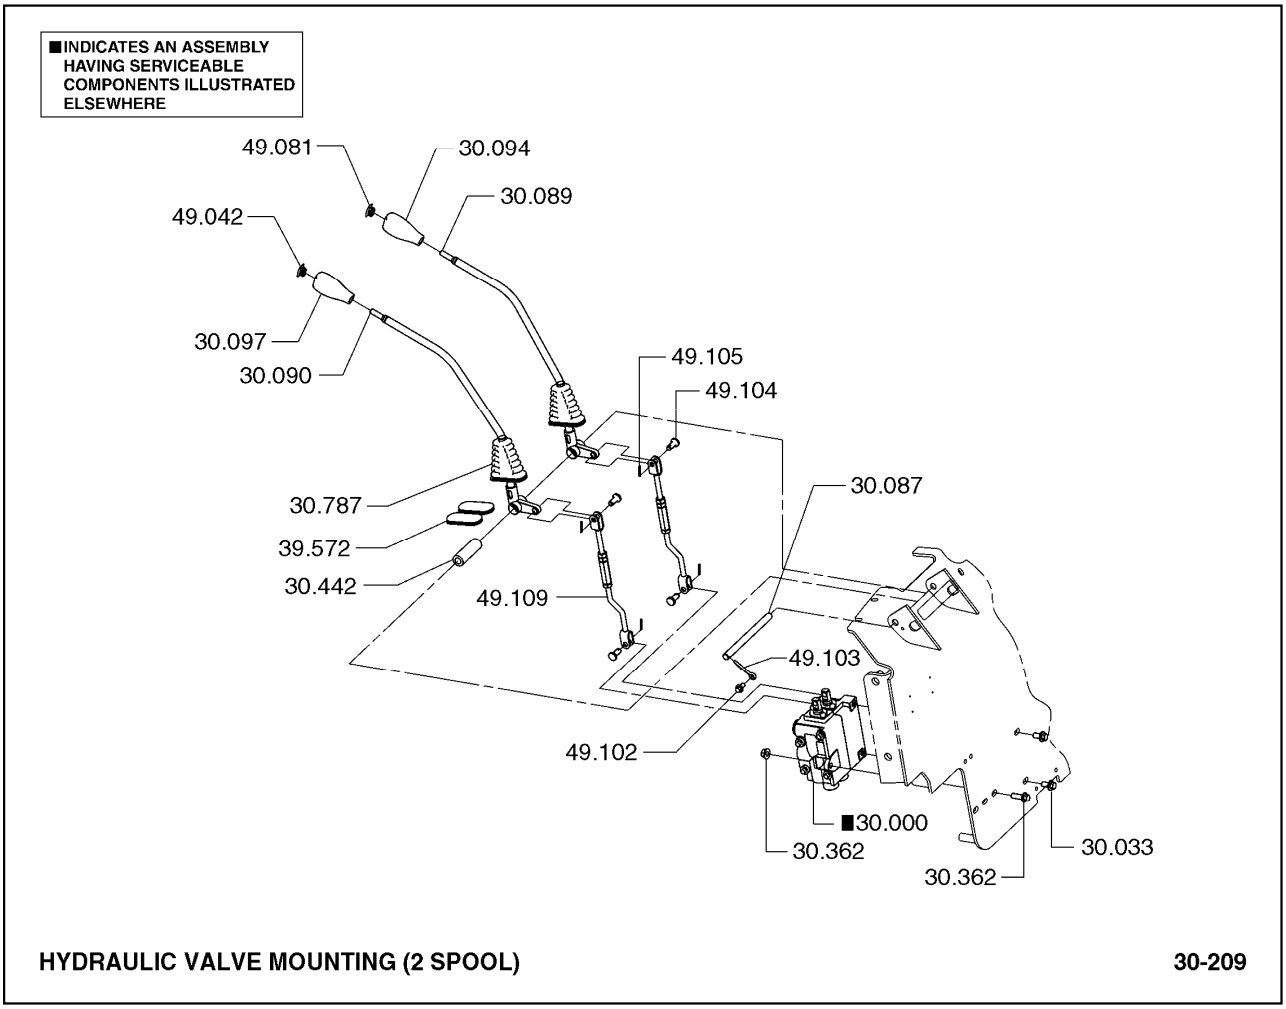

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버

30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.362 FASTENER, VALVE MOUNTING PLATE
패스너

30.442 SPACER, CONTROL LEVERS
스페이서

www.truck-freeworkshop.com/forklift/clark/

30.787	BOOT, VALVE CONTROL LEVER 부트
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.103	RETAINER, VALVE CONTROL LEVER PIVOT PIN 리테이너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

www.truck-freeworkshop.com/forklift/clark/

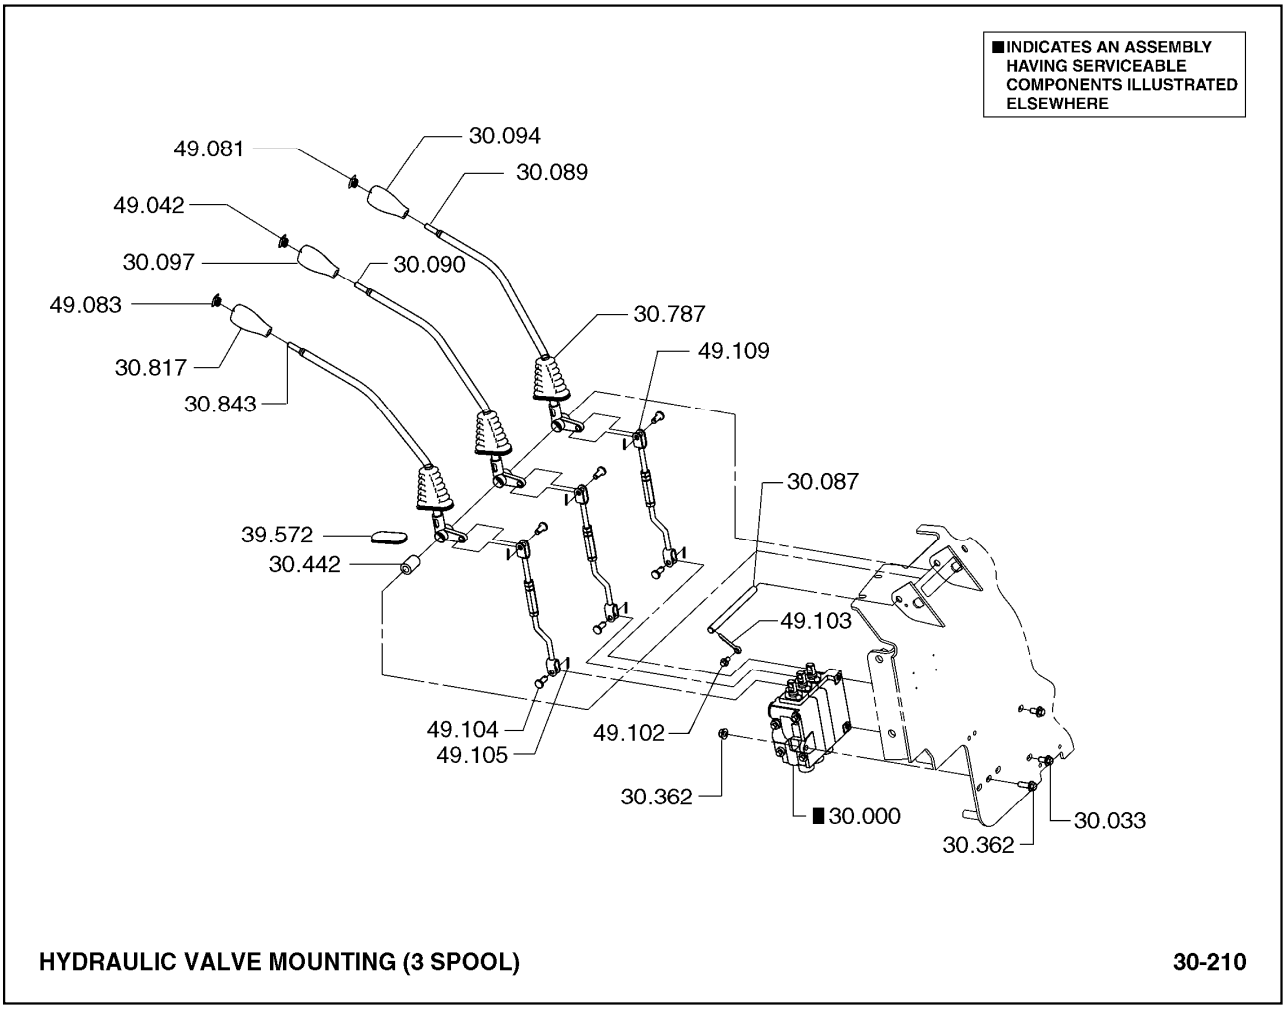

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버

30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.362 FASTENER, VALVE MOUNTING PLATE
패스너

30.442 SPACER, CONTROL LEVERS
스페이서

www.truck-freeworkshop.com/forklift/clark/

30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.103	RETAINER, VALVE CONTROL LEVER PIVOT PIN 리테이너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

www.truck-freeworkshop.com/forklift/clark/

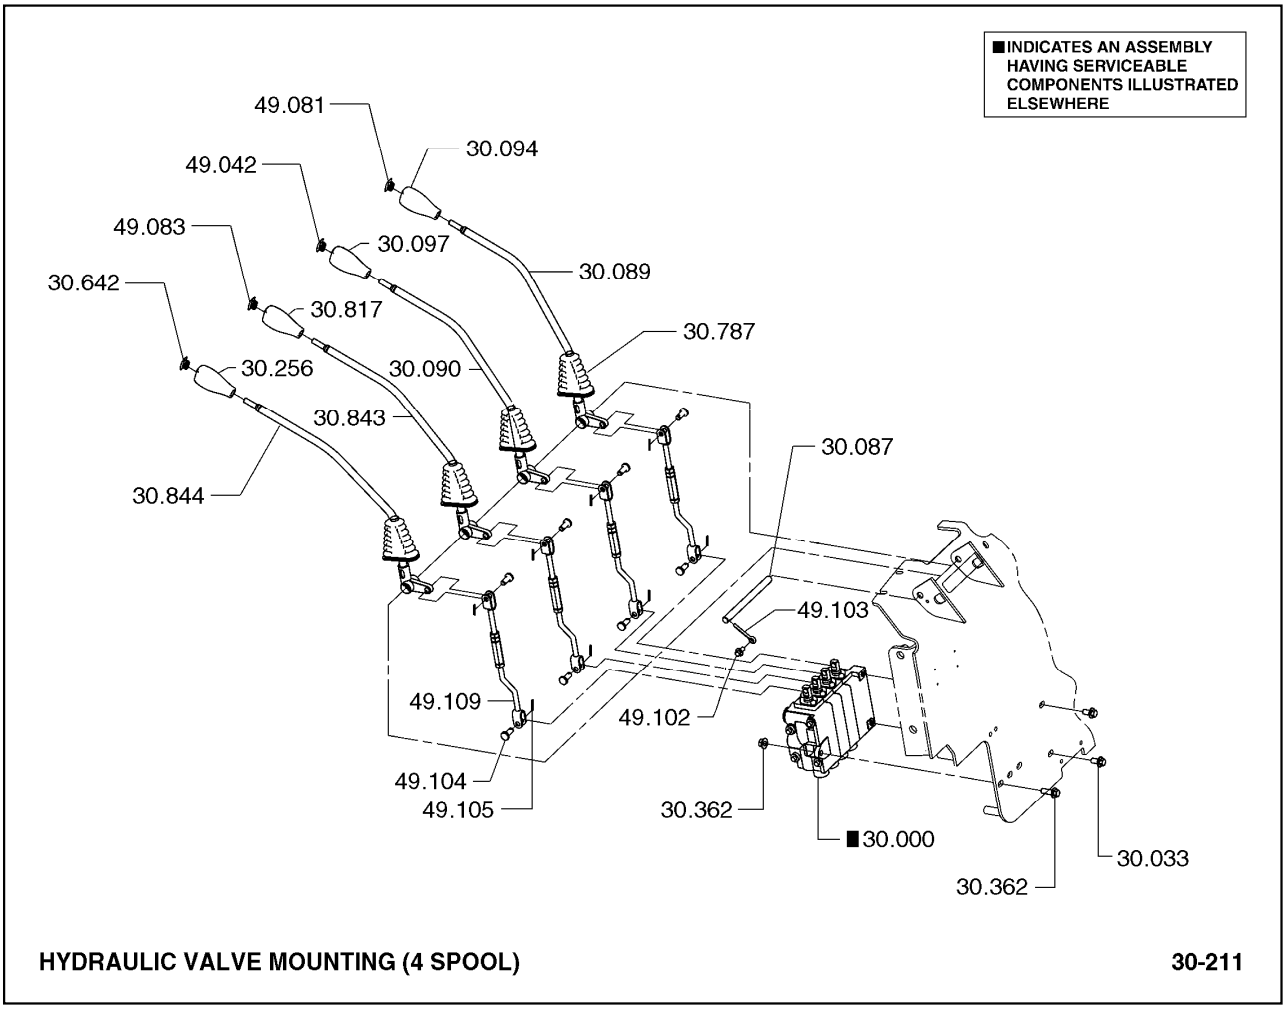

HYDRAULIC VALVE MOUNTING (4 SPOOL) **30-211**

30.000	VALVE ASSEMBLY, HYDRAULIC 벨브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너

www.truck-freeworkshop.com/forklift/clark/

30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.103	RETAINER, VALVE CONTROL LEVER PIVOT PIN 리테이너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

www.truck-freeworkshop.com/forklift/clark/

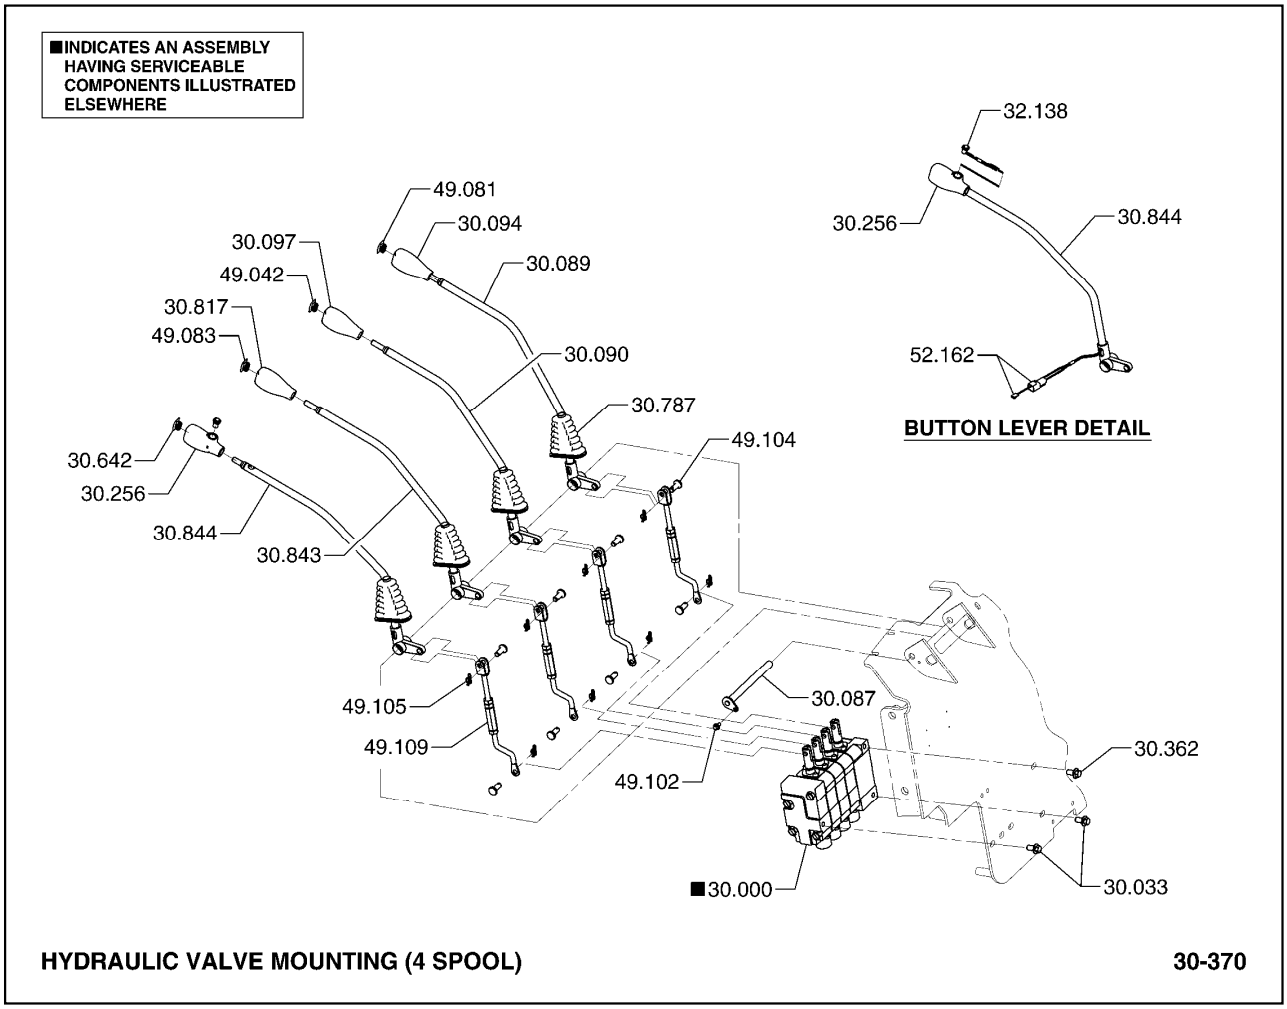

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버

30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.256 KNOB, AUXILIARY VALVE CONTROL LEVER
노브

30.362 FASTENER, VALVE MOUNTING PLATE
패스너

www.truck-freeworkshop.com/forklift/clark/

30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
32.138	SWITCH, PUSH BUTTON 스위치
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터

www.truck-freeworkshop.com/forklift/clark/

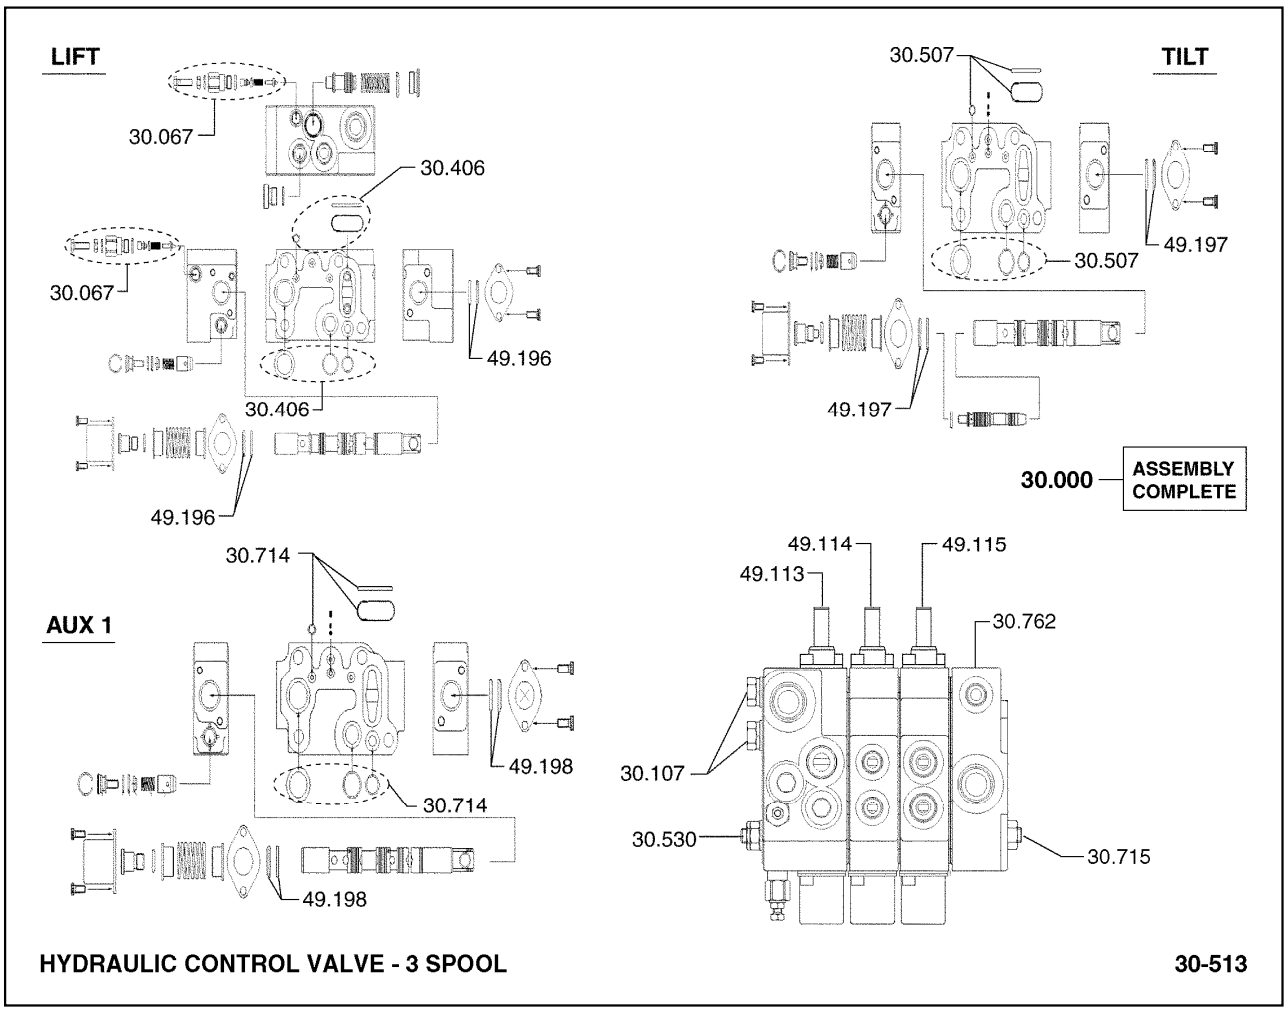

30.000	VALVE ASSEMBLY, HYDRAULIC 벨브
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.107	FASTENER, VALVE THRU 패스너
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 시일킷
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 시일킷
30.530	FASTENER, VALVE THRU 패스너
30.714	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 시일킷
30.715	FASTENER, VALVE THRU 패스너
30.762	END COVER, HYDRAULIC VALVE 엔드커버

www.truck-freeworkshop.com/forklift/clark/

49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀실킷
49.197	SPOOL SEAL KIT, TILT SECTION 스풀실킷
49.198	SPOOL SEAL KIT, AUX SECTION 스풀실킷

www.truck-freeworkshop.com/forklift/clark/

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

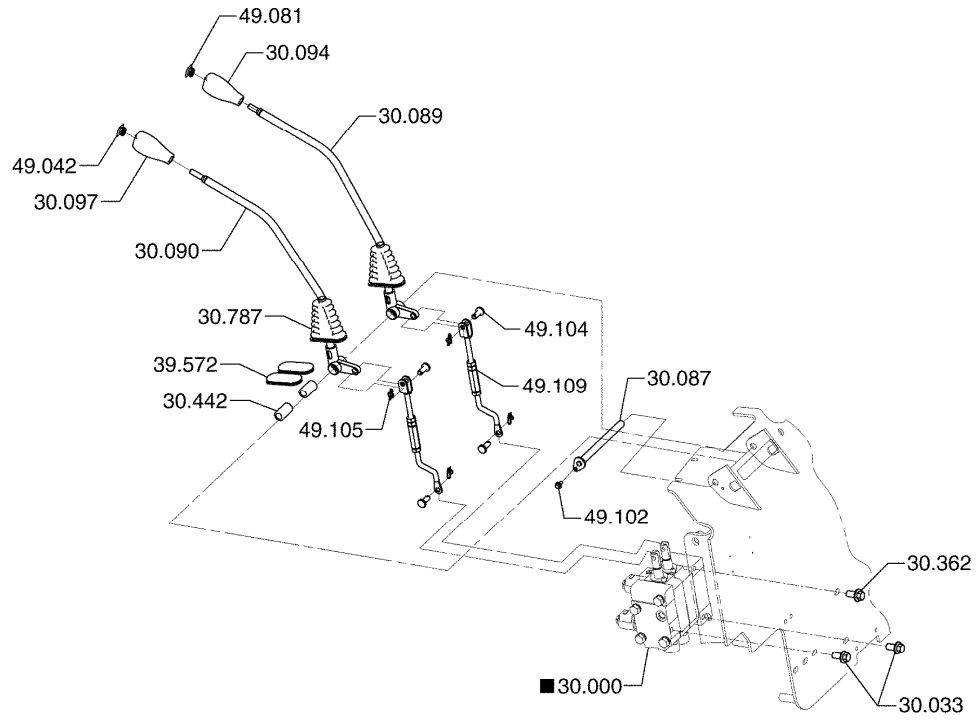

MAIN CONTROL VALVE 2-SPOOL **30-567**

30.000	VALVE ASSEMBLY, HYDRAULIC 벨브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너
30.442	SPACER, CONTROL LEVERS 스페이서

www.truck-freeworkshop.com/forklift/clark/

30.787	BOOT, VALVE CONTROL LEVER 부트
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

www.truck-freeworkshop.com/forklift/clark/

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

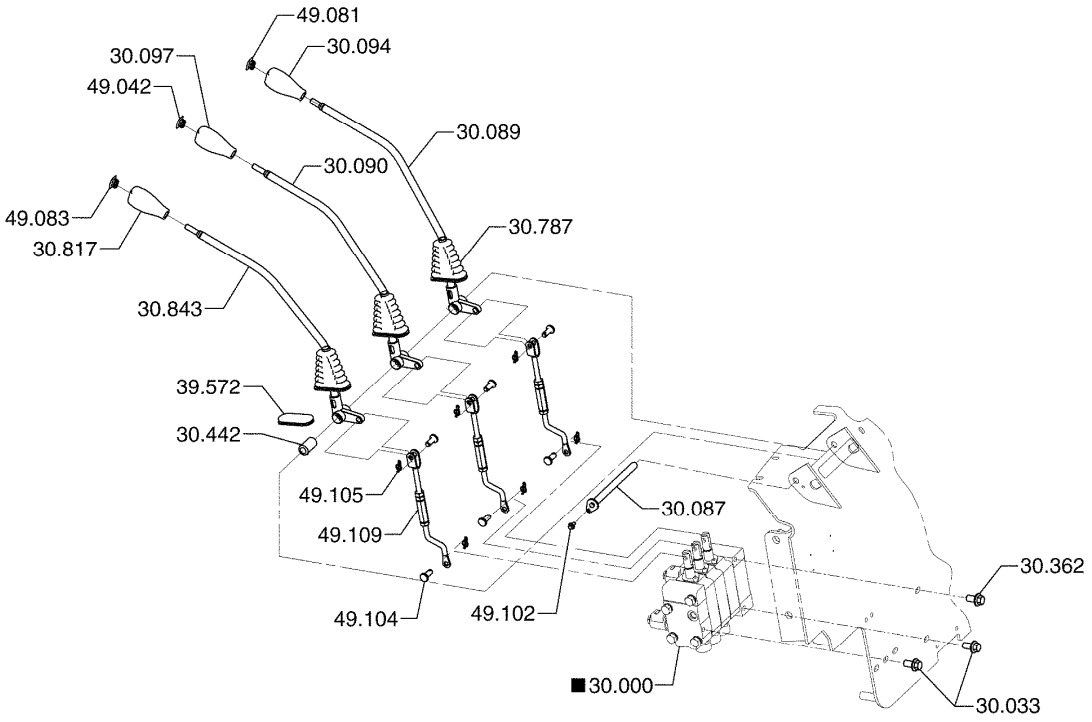

MAIN CONTROL VALVE 3-SPOOL **30-568**

30.000	VALVE ASSEMBLY, HYDRAULIC 벨브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너
30.442	SPACER, CONTROL LEVERS 스페이서

www.truck-freeworkshop.com/forklift/clark/

30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

www.truck-freeworkshop.com/forklift/clark/

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

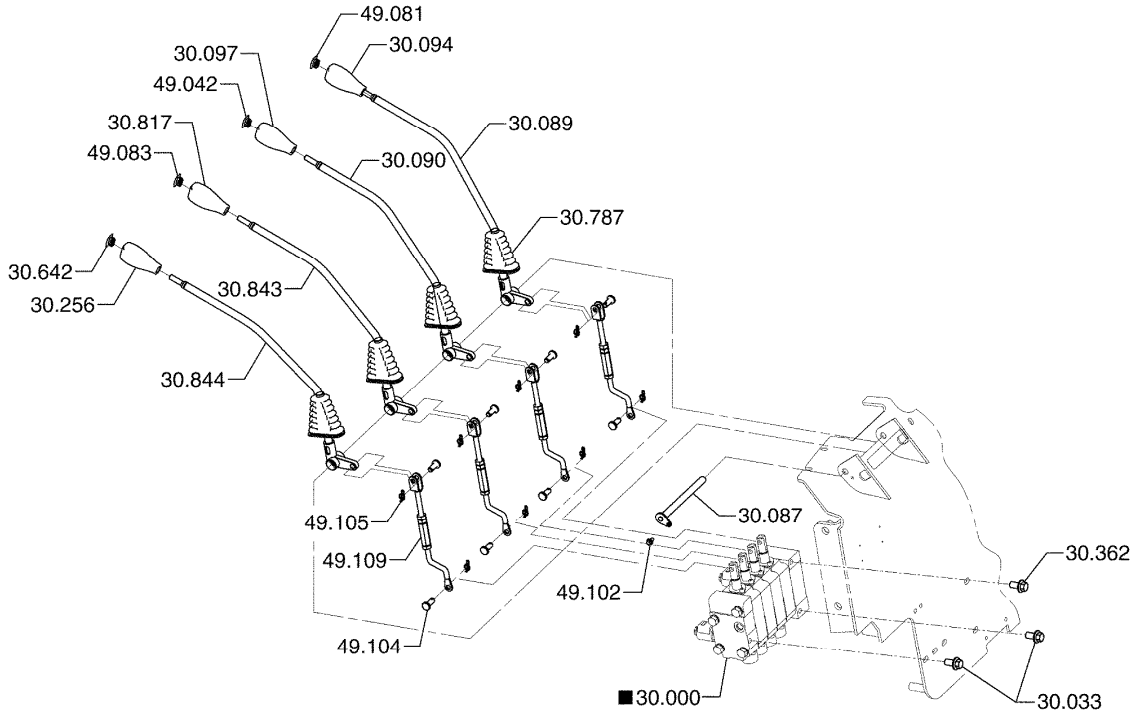

MAIN CONTROL VALVE 4-SPOOL **30-569**

30.000	VALVE ASSEMBLY, HYDRAULIC 벨브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너

www.truck-freeworkshop.com/forklift/clark/

30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

www.truck-freeworkshop.com/forklift/clark/

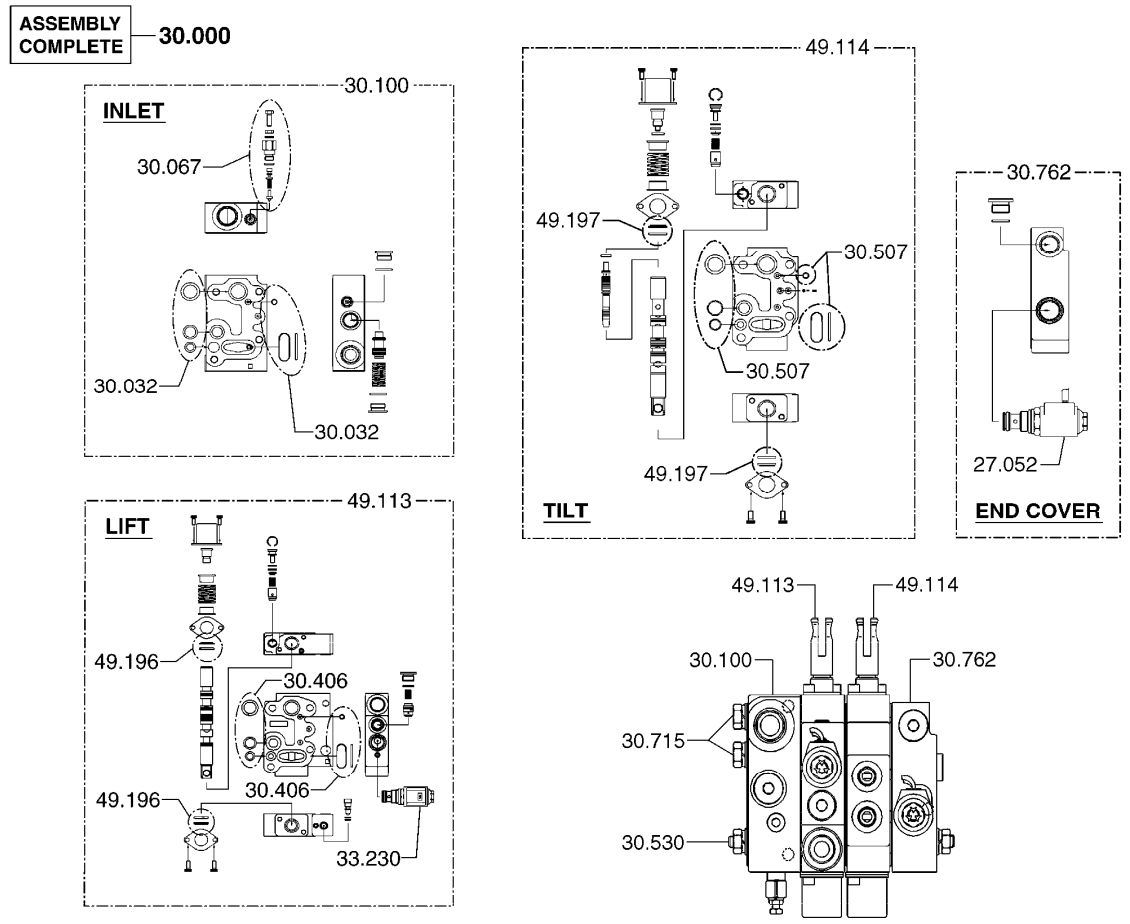

27.052 VALVE ASSEMBLY, AUXILIARY SOLENOID
벨브

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.032 SEAL KIT, HYDRAULIC VALVE SECTION (INLET)
시J霑

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.100 INLET SECTION, HYDRAULIC VALVE
인렛섹션

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.507 SEAL KIT, HYDRAULIC VALVE (TILT)
시일킷

30.530 FASTENER, VALVE THRU
패스너

30.715 FASTENER, VALVE THRU
패스너

www.truck-freeworkshop.com/forklift/clark/

30.762	END COVER, HYDRAULIC VALVE 엔드커버
33.230	VALVE ASSEMBLY, LIFT SOLENOID 벨브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀실킷
49.197	SPOOL SEAL KIT, TILT SECTION 스풀실킷

www.truck-freeworkshop.com/forklift/clark/

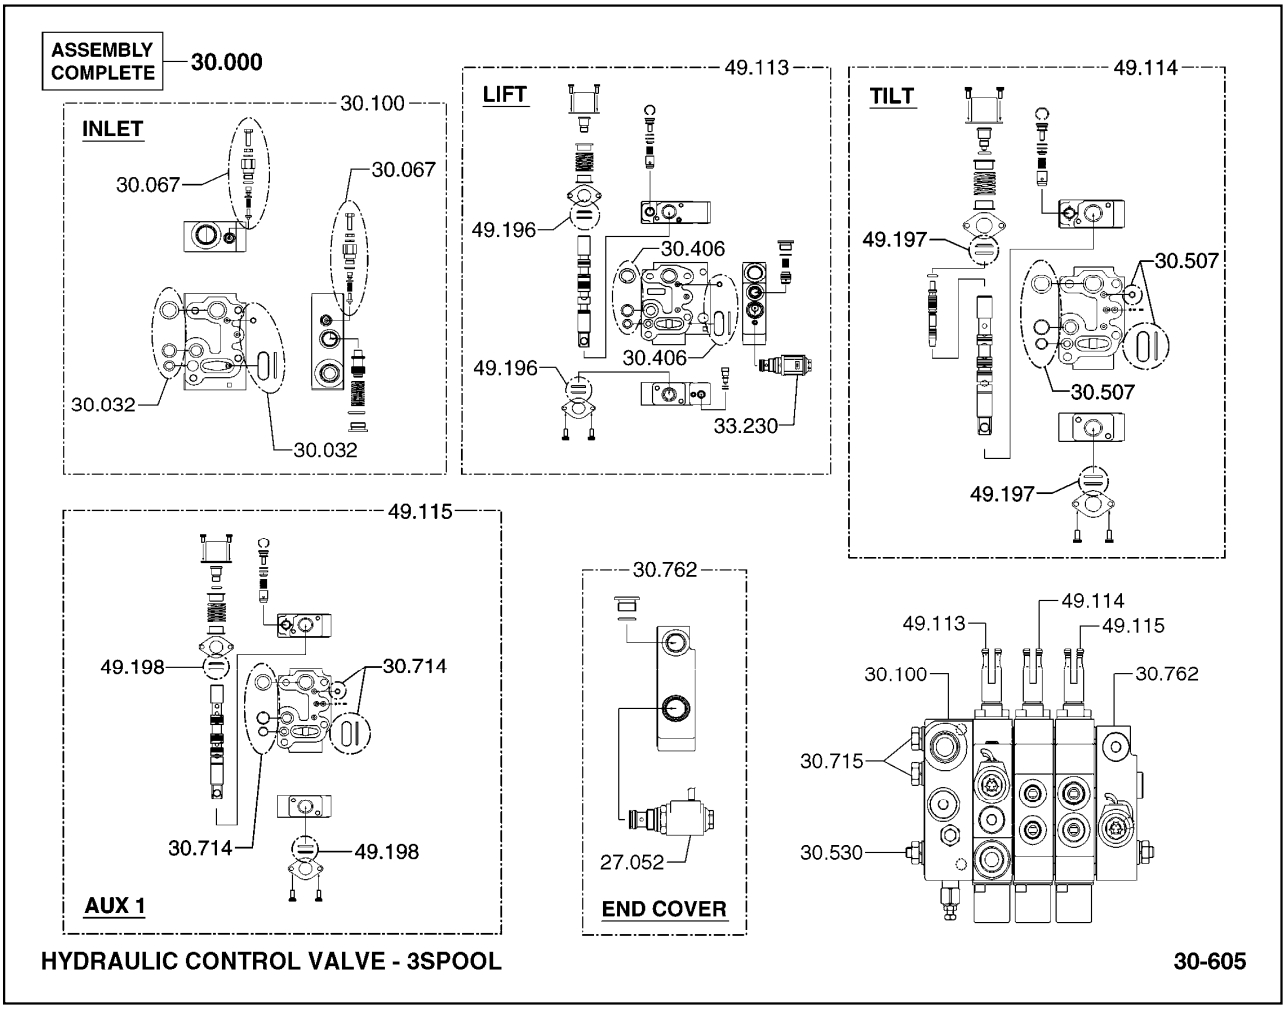

27.052 VALVE ASSEMBLY, AUXILIARY SOLENOID
벨브

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.032 SEAL KIT, HYDRAULIC VALVE SECTION (INLET)
시J霑

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.100 INLET SECTION, HYDRAULIC VALVE
인렛섹션

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.507 SEAL KIT, HYDRAULIC VALVE (TILT)
시일킷

30.530 FASTENER, VALVE THRU
패스너

30.714 SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
시일킷

www.truck-freeworkshop.com/forklift/clark/

30.715	FASTENER, VALVE THRU 패스너
30.762	END COVER, HYDRAULIC VALVE 엔드커버
33.230	VALVE ASSEMBLY, LIFT SOLENOID 벨브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀실킷
49.197	SPOOL SEAL KIT, TILT SECTION 스풀실킷
49.198	SPOOL SEAL KIT, AUX SECTION 스풀실킷

www.truck-freeworkshop.com/forklift/clark/

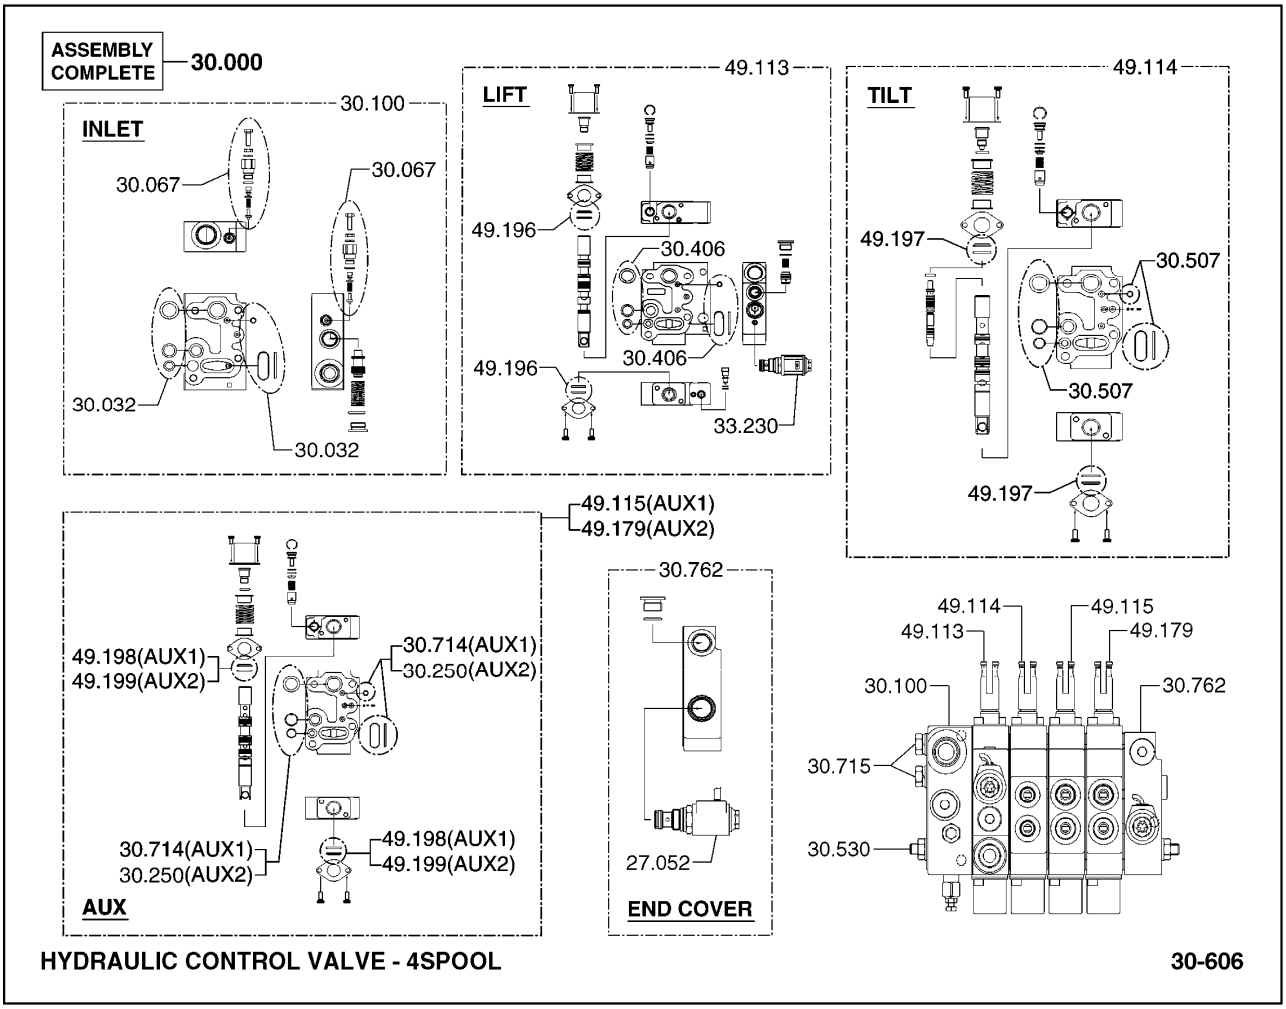

27.052	VALVE ASSEMBLY, AUXILIARY SOLENOID 벨브
30.000	VALVE ASSEMBLY, HYDRAULIC 벨브
30.032	SEAL KIT, HYDRAULIC VALVE SECTION (INLET) 시J霑
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.100	INLET SECTION, HYDRAULIC VALVE 인렛섹션
30.250	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 시일킷
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 시일킷
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 시일킷
30.530	FASTENER, VALVE THRU 패스너

www.truck-freeworkshop.com/forklift/clark/

30.714	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 시일킷
30.715	FASTENER, VALVE THRU 패스너
30.762	END COVER, HYDRAULIC VALVE 엔드커버
33.230	VALVE ASSEMBLY, LIFT SOLENOID 벨브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.179	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀실킷
49.197	SPOOL SEAL KIT, TILT SECTION 스풀실킷
49.198	SPOOL SEAL KIT, AUX SECTION 스풀실킷
49.199	SPOOL SEAL KIT, AUX SECTION 스풀실킷

www.truck-freeworkshop.com/forklift/clark/

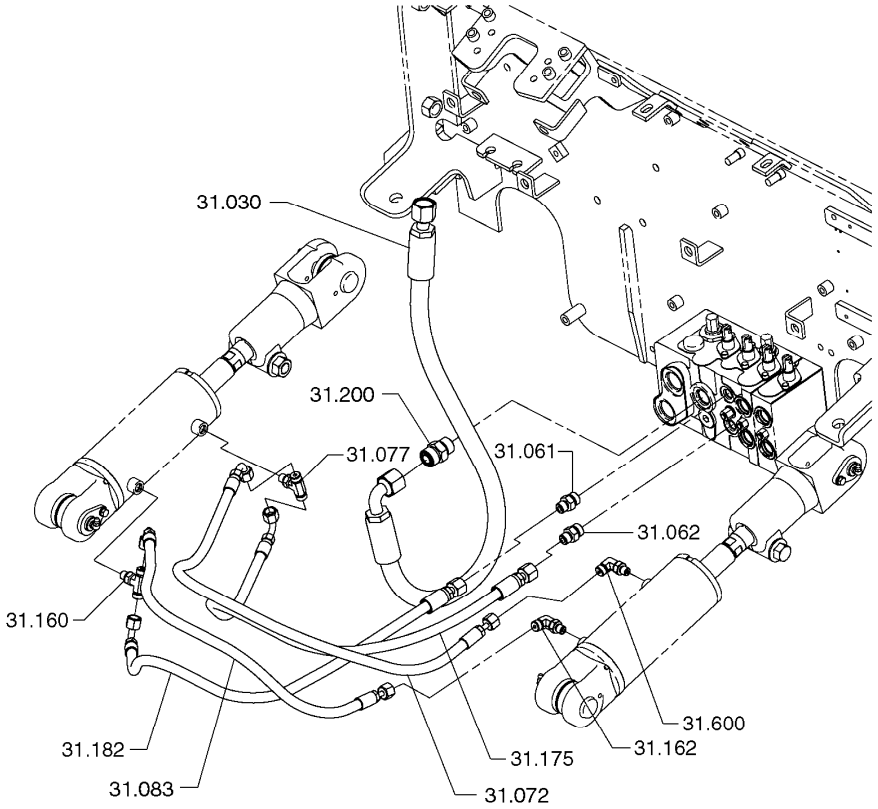

HYDRAULIC LIFT & TILT LINES **31-128**

31.030	LINE, VALVE TO LIFT CYLINDER 라인
31.061	FITTING, VALVE TILT PORT "A" 피팅
31.062	FITTING, VALVE TILT PORT "B" 피팅
31.072	LINE, RH TILT CYLINDER ROD PORT 라인
31.077	FITTING, LH TILT CYLINDER ROD PORT 피팅
31.083	LINE, RH TILT CYLINDER ANCHOR PORT 라인
31.160	FITTING, LH TILT CYLINDER ANCHOR PORT 피팅
31.162	FITTING, RH TILT CYLINDER ANCHOR PORT 피팅
31.175	LINE, VALVE TILT PORT "B" 라인

www.truck-freeworkshop.com/forklift/clark/

31.182	LINE, VALVE TILT PORT "A" 라인
31.200	FITTING, MAIN VALVE LIFT PORT 피팅
31.600	FITTING, RH TILT CYLINDER ROD PORT 피팅

www.truck-freeworkshop.com/forklift/clark/

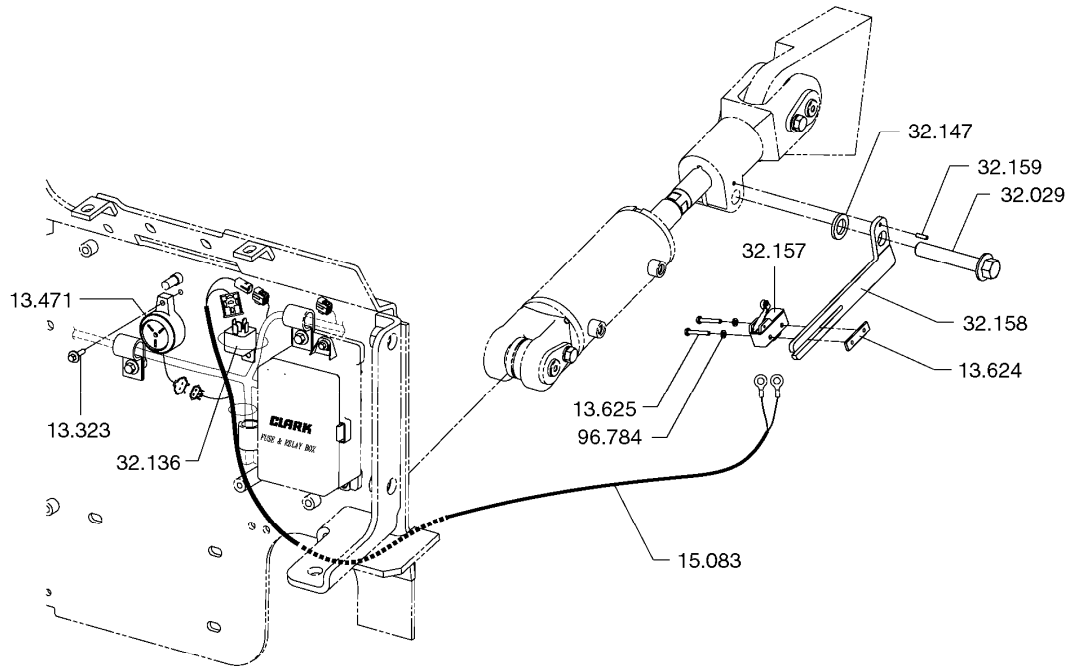

TILT LIMIT WITH OVERRIDE 31-130

13.323	FASTENER, WARNING BUZZER 패스너
13.471	BUZZER, WARNING 부져
13.624	BRACKET, TILT LIMIT SWITCH 브라켓
13.625	FASTENER, TILT LIMIT SWITCH 패스너
15.083	CONDUCTOR, TILT LIMIT DEVICE FEED 컨덕터
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.136	RELAY, TILT LIMIT DEVICE 릴레이
32.147	WASHER, TILT LIMIT FASTENER 와셔
32.157	SWITCH, TILT LIMIT 스위치

www.truck-freeworkshop.com/forklift/clark/

32.158	BRACKET, TILT LIMIT SWITCH 브라켓
32.159	RETAINER, TILT LIMIT SWITCH BRACKET 리테이너
96.784	WASHER, TILT LIMIT SWITCH FASTENER 와셔

www.truck-freeworkshop.com/forklift/clark/

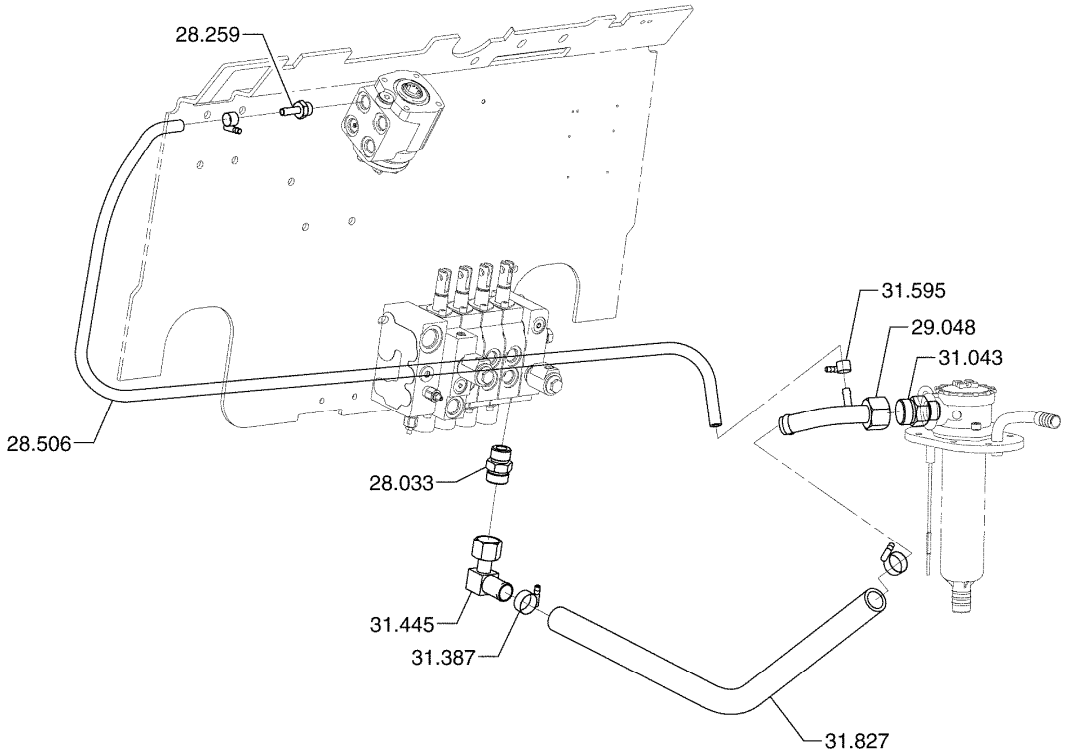

HYDRAULIC RETURN LINES **31-222**

28.033	FITTING, SUMP RETURN 피팅
28.259	FITTING, SUMP RETURN LINE 피팅
28.506	LINE, SUMP RETURN 라인
29.048	PIPE, HYDRAULIC FILTER 파이프
31.043	CONNECTOR, FILTER INLET PORT 커넥터
31.387	CLAMP, MAIN VALVE TO SUMP LINE 클램프
31.445	FITTING, MAIN VALVE TO FILTER LINE 피팅
31.595	CLAMP, SUMP RETURN LINE FITTING 클램프
31.827	LINE, FILTER INLET 라인

www.truck-freeworkshop.com/forklift/clark/

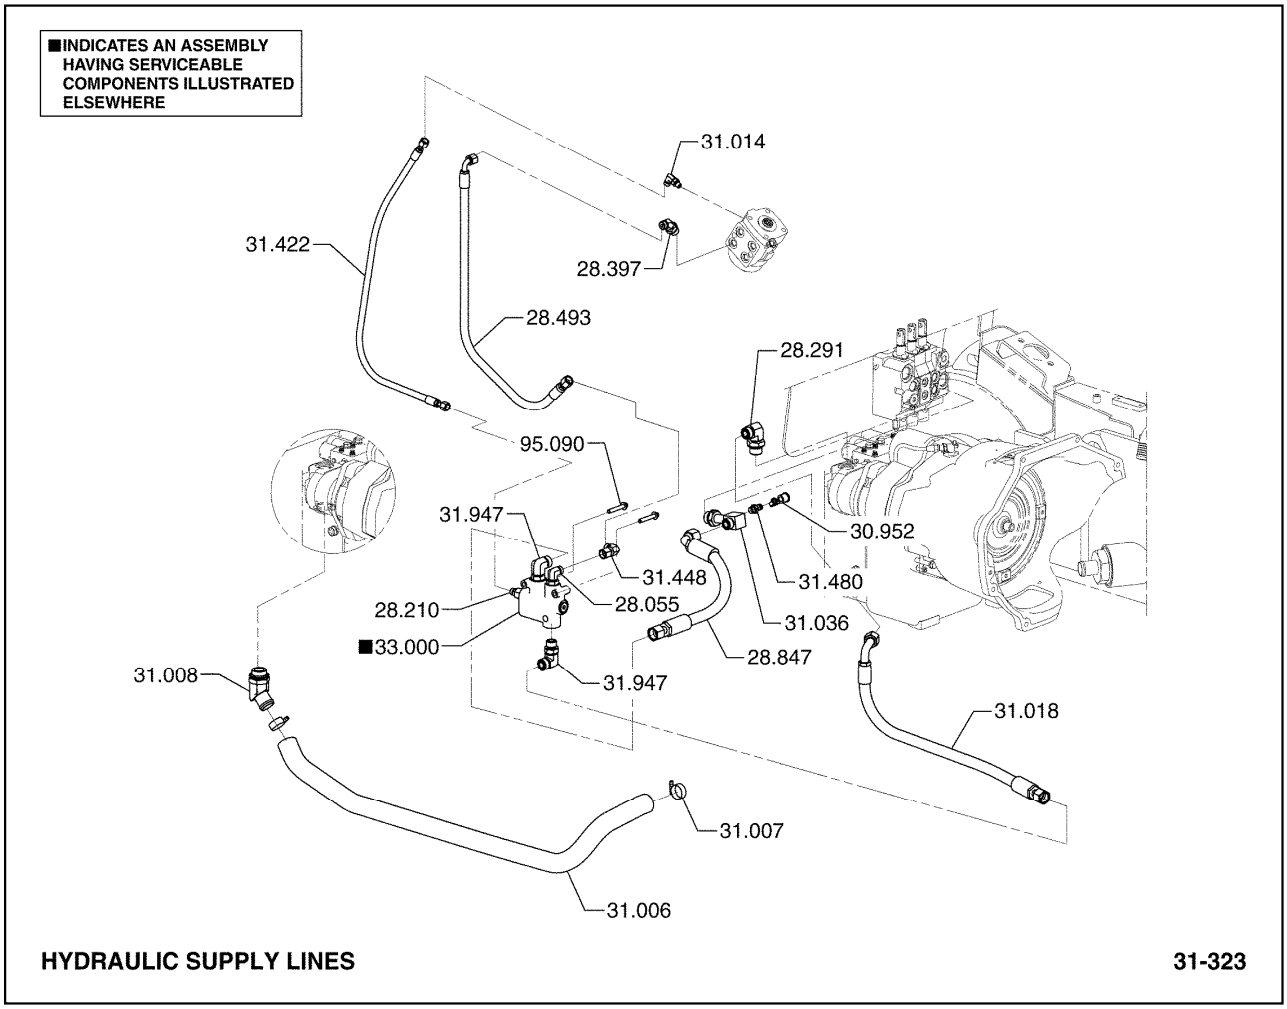

28.055 FITTING, STEERING GEAR
피팅

28.210 FITTING, MAIN VALVE INLET LINE
피팅

28.291 FITTING, PUMP OUTLET
피팅

28.397 FITTING, STEERING GEAR LINE
피팅

28.493 LINE, PRESSURE SENSING
라인

28.847 LINE, MAIN VALVE INLET
라인

30.952 DUST CAP, PRESSURE GAUGE PORT FITTING
더스트캡

31.006 LINE, PUMP INLET
라인

31.007 CLAMP, PUMP INLET LINE
클램프

www.truck-freeworkshop.com/forklift/clark/

31.008	FITTING, PUMP INLET 피팅
31.014	FITTING, PUMP OUTLET 피팅
31.018	LINE, PUMP OUTLET 라인
31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.422	LINE, PUMP OUTLET (COVER END) 라인
31.448	FITTING, PUMP OUTLET LINE 피팅
31.480	PLUG, PRESSURE GAUGE PORT 플러그
31.947	FITTING, PRIORITY VALVE 피팅
33.000	VALVE ASSEMBLY, FLOW CONTROL 벨브
95.090	FASTENER, HYDRAULIC PRIORITY VALVE 패스너

www.truck-freeworkshop.com/forklift/clark/

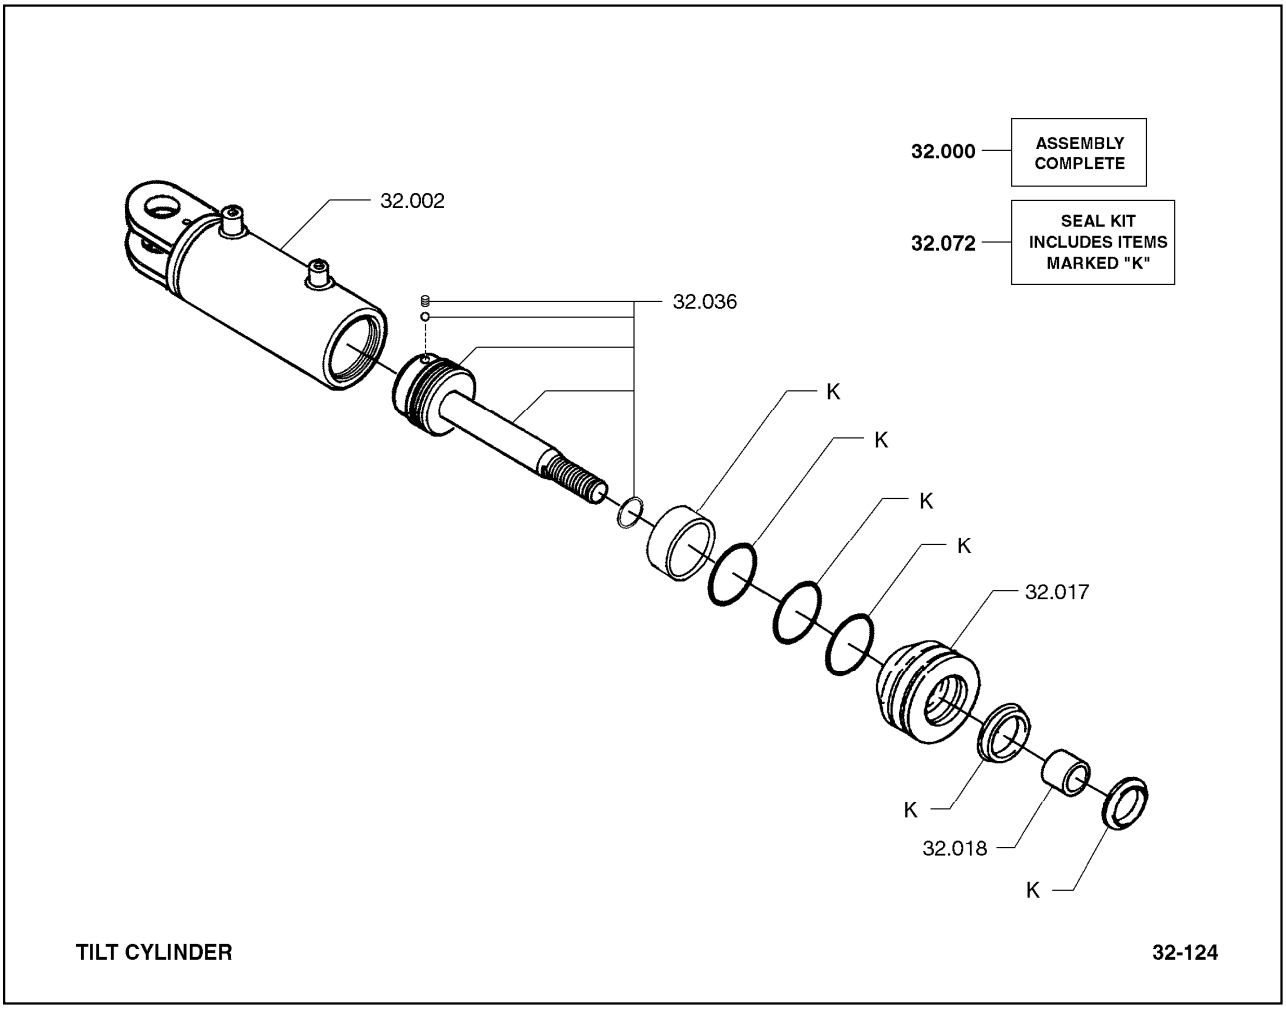

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드와피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹킷

www.truck-freeworkshop.com/forklift/clark/

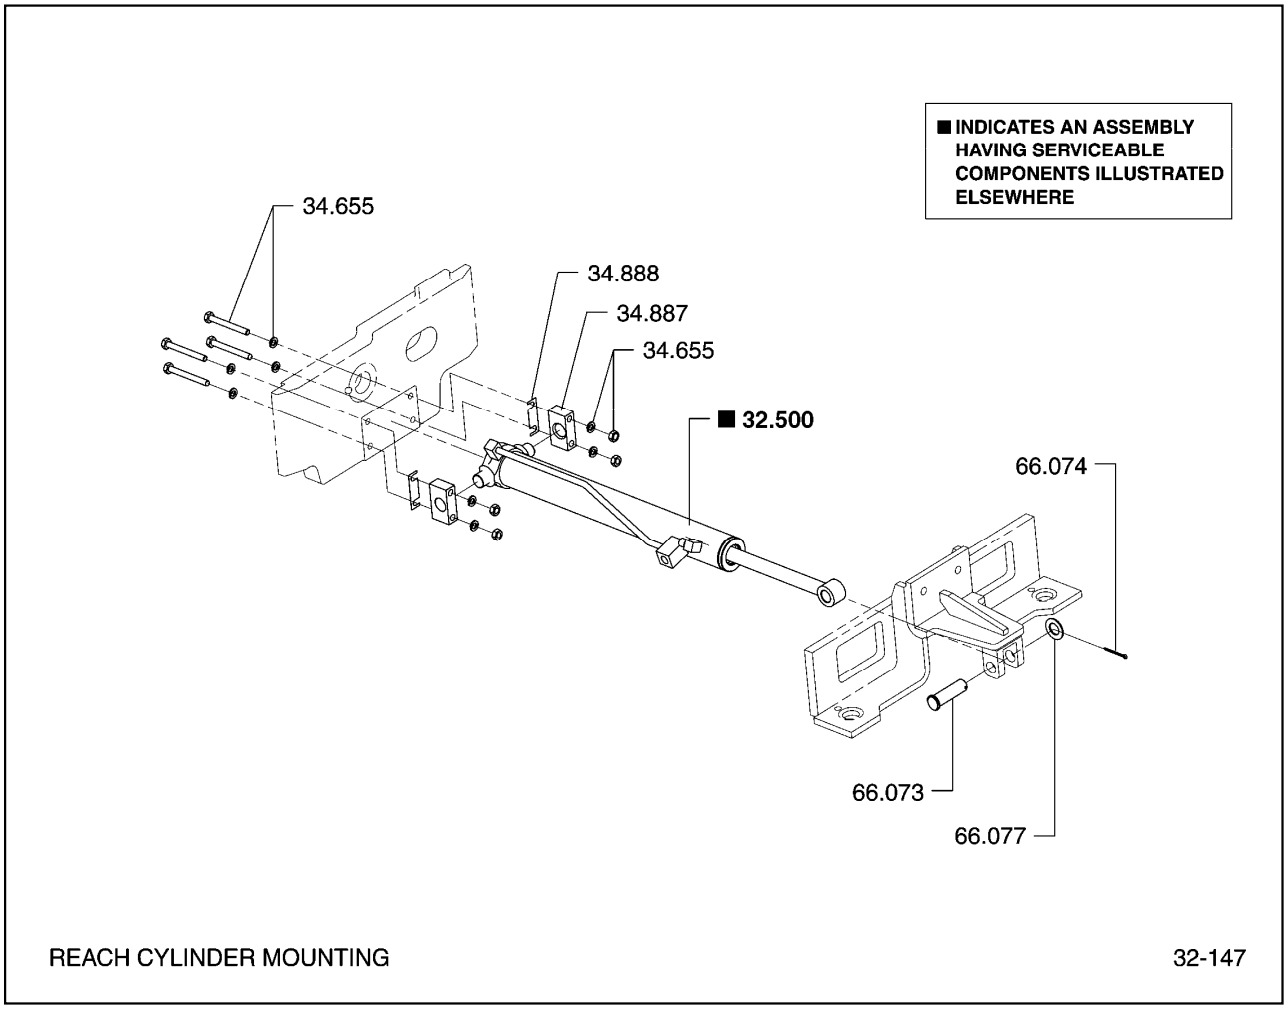

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.030	PIN, TILT CYLINDER TO UPRIGHT 핀
32.032	FITTING, TILT CYLINDER TO UPRIGHT PIN LUB 피팅
32.033	PIN, TILT CYLINDER REAR MOUNTING RH 핀
32.035	FITTING, TILT CYLINDER TO FRAME PIN LUB 피팅
32.043	BEARING, TILT CYLINDER FRAME MOUNTING 베어링

www.truck-freeworkshop.com/forklift/clark/

32.053	BEARING, TILT CYLINDER ROD END 베어링
97.214	FASTENER, TILT CYLINDER TO FRAME PIN *
97.224	FASTENER, TILT CYLINDER TO UPRIGHT PIN *

www.truck-freeworkshop.com/forklift/clark/

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

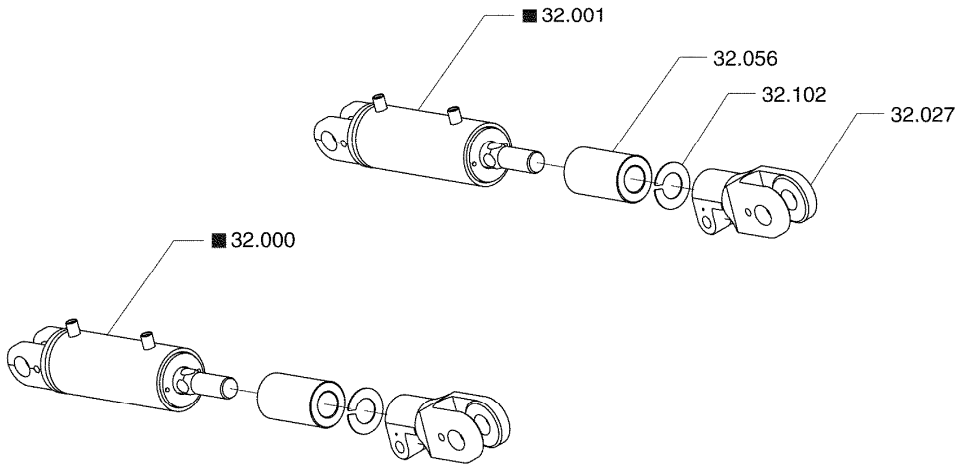

TILT AMOUNT GP **32-167**

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심

www.truck-freeworkshop.com/forklift/clark/

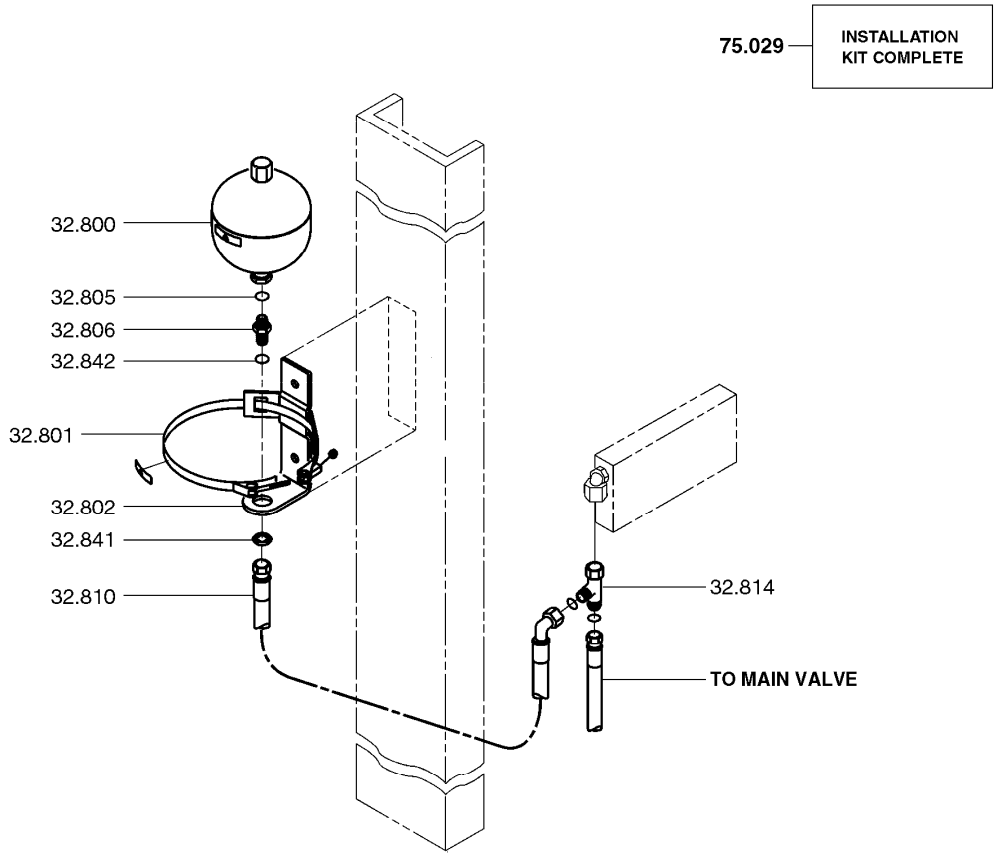

ACCUMULATOR INSTALLATION **32-850**

32.800	ACCUMULATOR, HYDRAULIC 어큐뮬레이터
32.801	CLAMP, HYDRAULIC ACCUMULATOR MOUNTING 클램프
32.802	BRACKET, HYDRAULIC ACCUMULATOR 브라켓
32.805	SEAL, HYDRAULIC ACCUMULATOR CONNECTOR 시일
32.806	CONNECTOR, HYDRAULIC ACCUMULATOR 커넥터
32.810	LINE, HYDRAULIC ACCUMULATOR 라인
32.814	FITTING, HYDRAULIC ACCUMULATOR LINE 피팅
32.841	NUT, HYDRAULIC ACCUMULATOR FITTING 너트
32.842	SEAL, HYDRAULC ACCUMULATOR FITTING 시일

www.truck-freeworkshop.com/forklift/clark/

75.029 HYDRAULIC ACCUMULATOR INSTALLATION
유압어큐뮬레이터

www.truck-freeworkshop.com/forklift/clark/

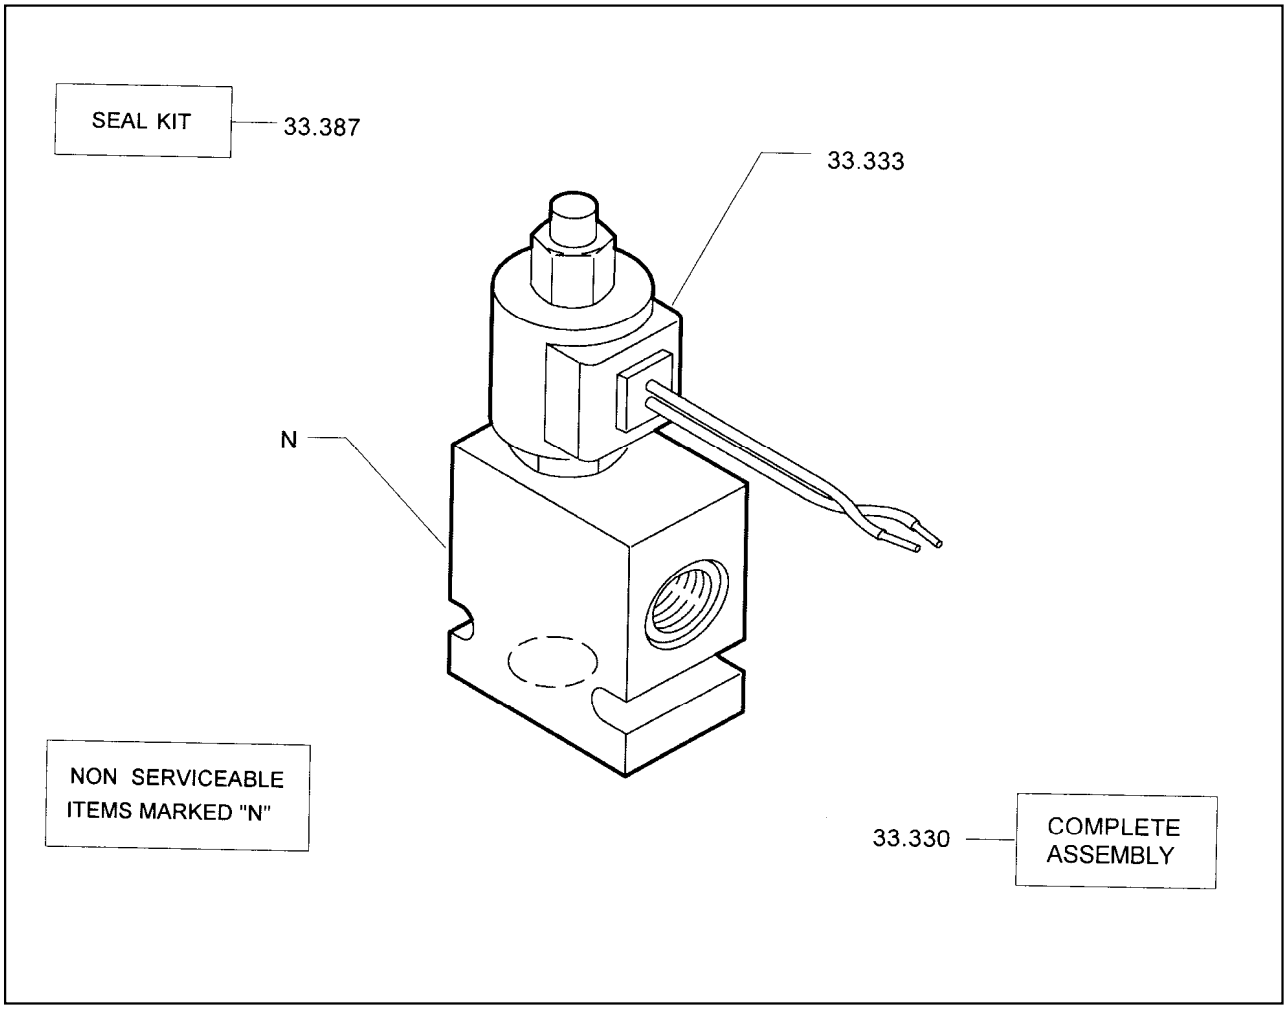

33.330	VALVE ASSEMBLY, CLAMP SOLENOID 벨브
33.333	COIL, CLAMP VALVE SOLENOID 코일
33.387	SEAL KIT, DEVICE SELECTOR VALVE 시일킷

www.truck-freeworkshop.com/forklift/clark/

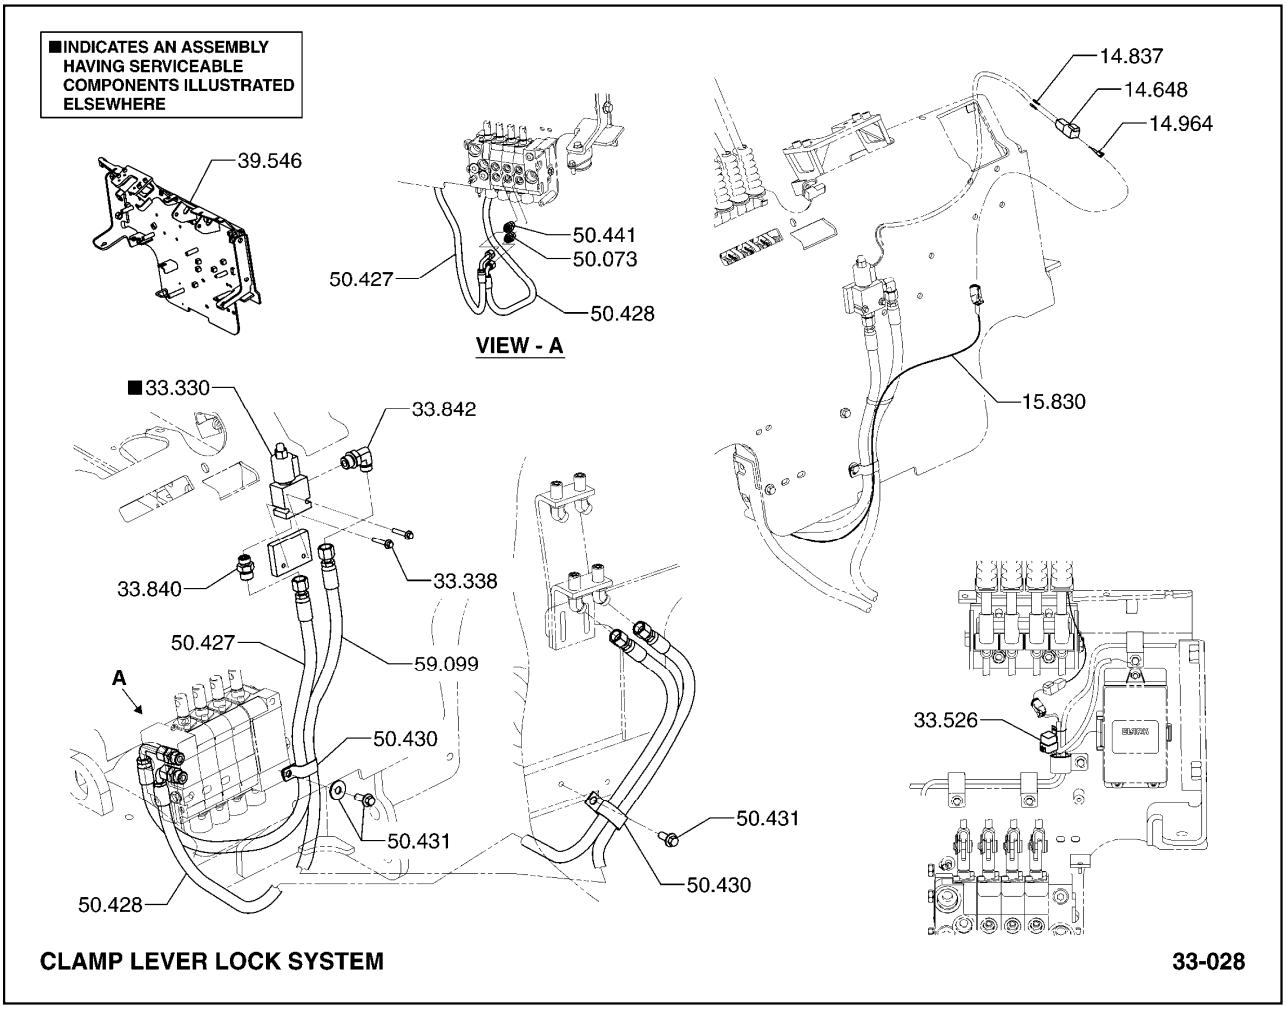

14.648 CONNECTOR, SOLENOID VALVE FEED WIRE
커넥터

14.837 TERMINAL, SOLENOID VALVE WIRING CONNECTOR
터미널

14.964 LOCK, SOLENOID VALVE FEED WIRE CONNECTOR
*

15.830 WIRING HARNESS, CLAMP SOLENOID VALVE
*

33.330 VALVE ASSEMBLY, CLAMP SOLENOID
벨브

33.338 FASTENER, CLAMP SOLENOID VALVE
패스너

33.526 RELAY, CLAMP SOLENOID VALVE
*

33.840 FITTING, CLAMP SOLENOID VALVE INLET PORT
피팅

33.842 FITTING, CLAMP SOLENOID VALVE OUTLET PORT
피팅

www.truck-freeworkshop.com/forklift/clark/

39.546	COWL ASSEMBLY 카울
50.073	FITTING, 2ND AUXILIARY VALVE "B" PORT 피팅
50.427	LINE, 2ND AUXILIARY VALVE "A" PORT 라인
50.428	LINE, 2ND AUXILIARY VALVE "B" PORT 라인
50.430	CLAMP, AUXILIARY VALVE LINES 클램프
50.431	FASTENER, AUX VALVE LINES CLAMP 패스너
50.441	FITTING, 2ND AUXILIARY VALVE "A" PORT 피팅
59.099	LINE, 2ND AUXILIARY FUNCTION 라인

www.truck-freeworkshop.com/forklift/clark/

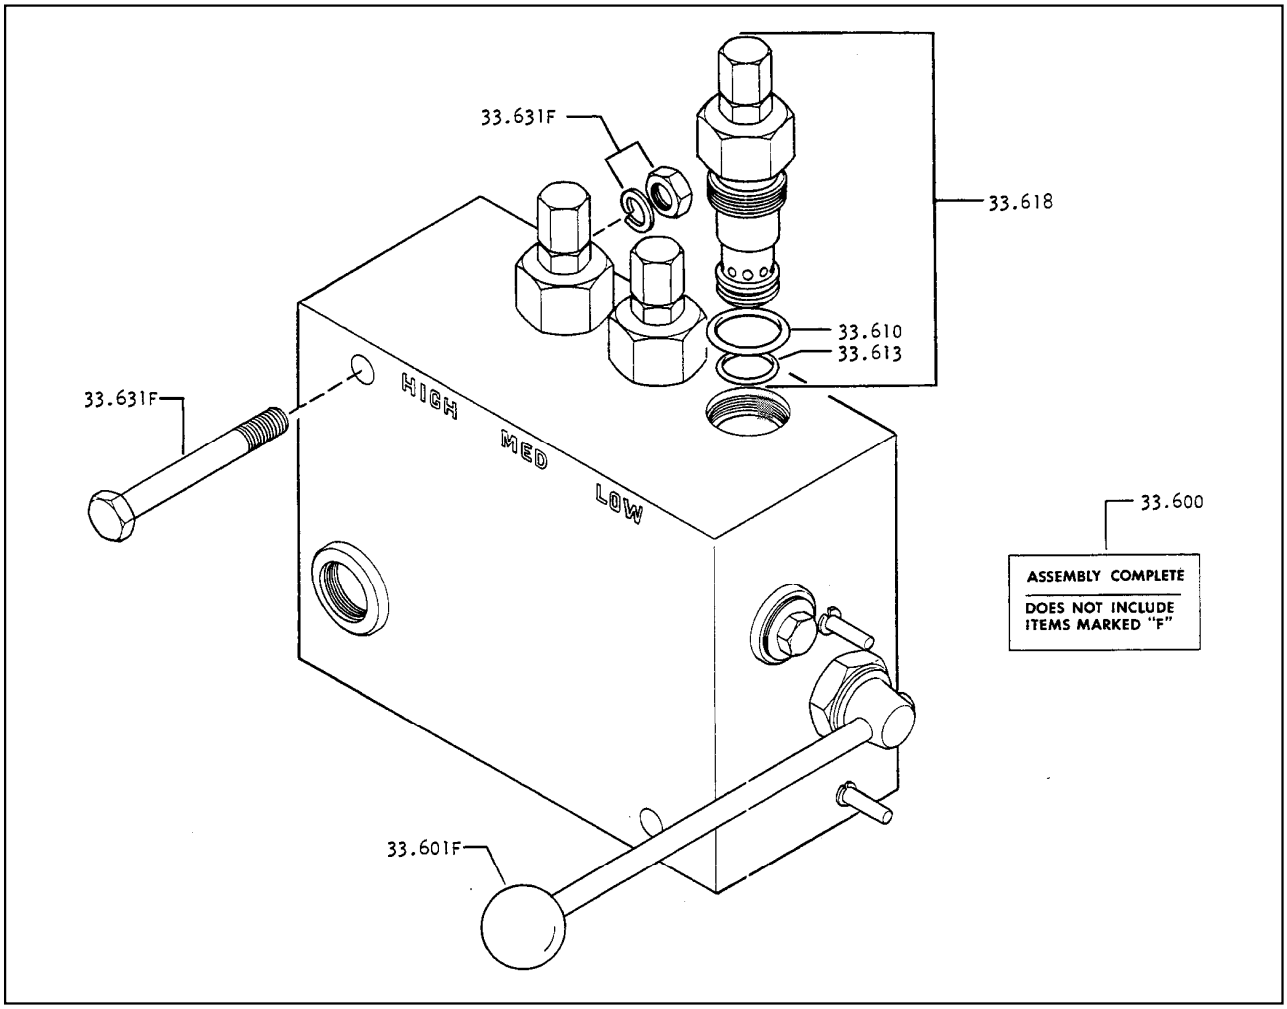

33.600 RELIEF VALVE, DEVICE VARIABLE PRESSURE
릴리프밸브

33.601 LEVER, DEVICE VARIABLE RELIEF VALVE
레버

33.610 SEAL, DEVICE PRESS RELIEF VAL CHECK PORT PLUG
시일

33.613 SEAL, DEVICE RELIEF VALVE PISTON ADJ END
시일

33.618 CARTRIDGE KIT, DEVICE VARIABLE RELIEF VALVE
카트리지킷

33.631 FASTENER, DEVICE RELIEF VALVE
패스너

www.truck-freeworkshop.com/forklift/clark/

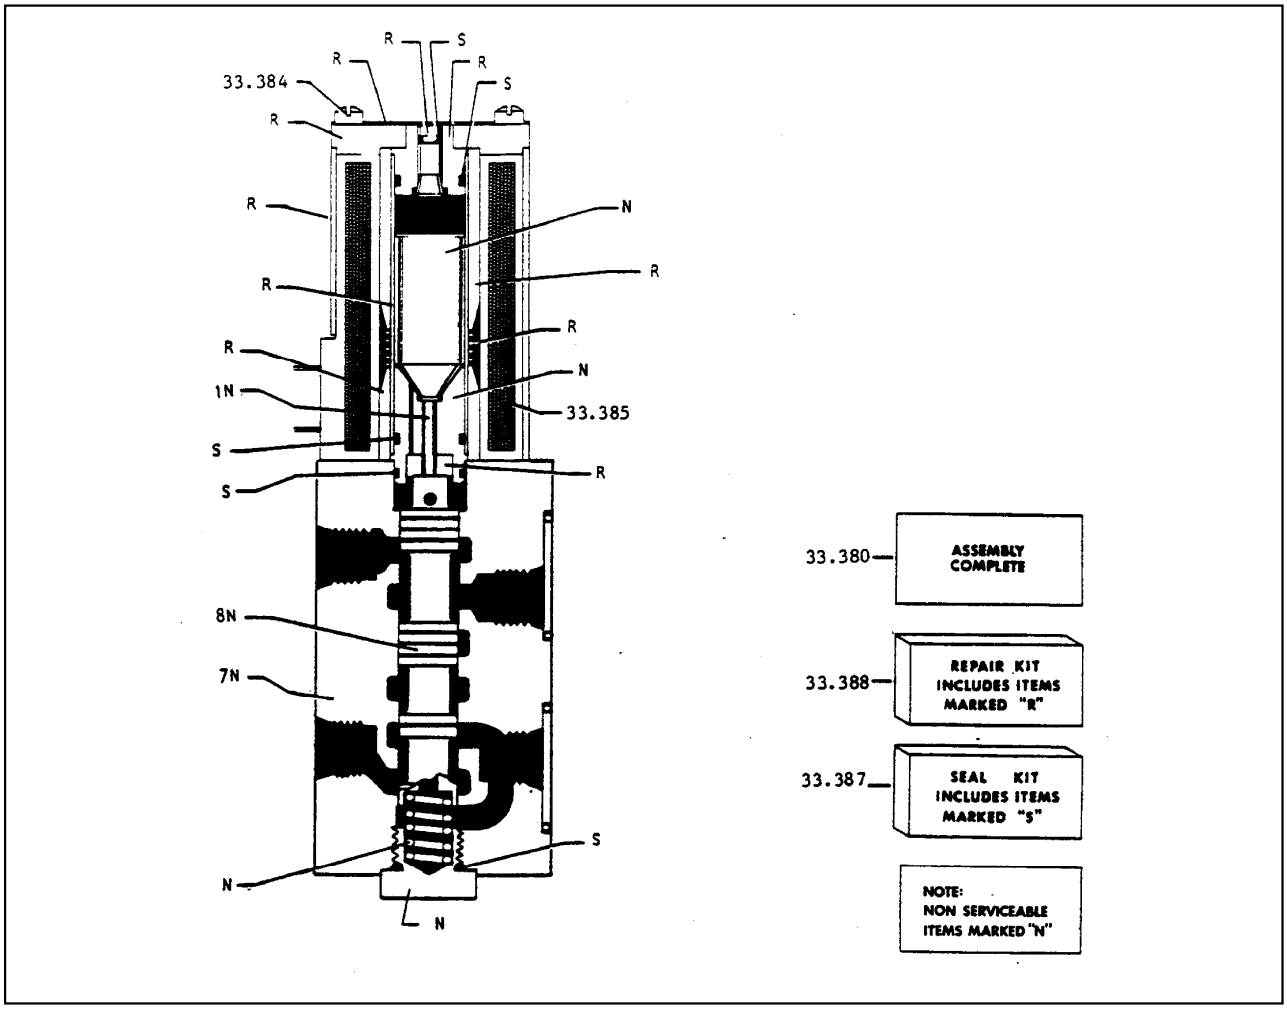

33.380 VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID
벨브

33.384 FASTENER, DEV SELECTOR VALVE SOLENOID COIL
패스너

33.385 COIL, DEVICE SELECTOR VALVE SOLENOID
코일

33.387 SEAL KIT, DEVICE SELECTOR VALVE
시일킷

33.388 REPAIR KIT, DEVICE SELECTOR VALVE
리페어킷

www.truck-freeworkshop.com/forklift/clark/

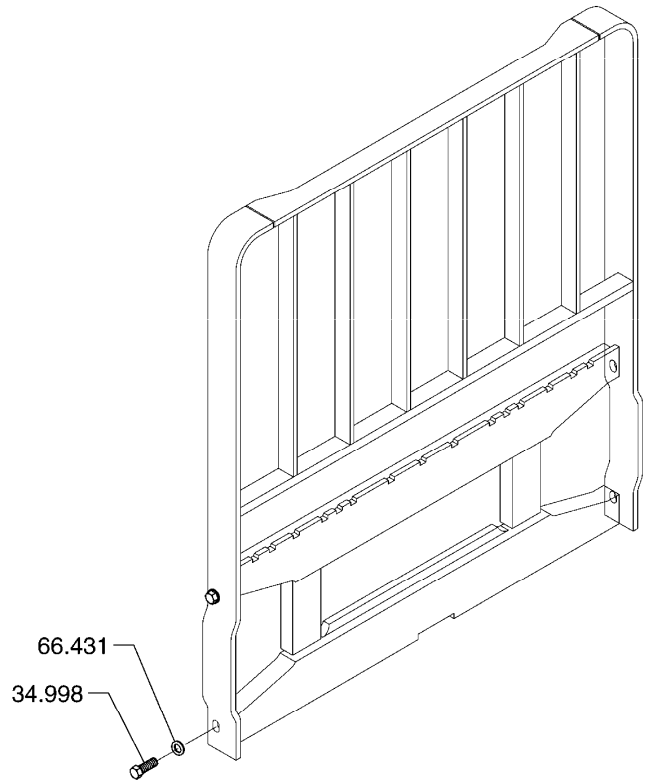

LOAD BACK REST **34-044**

34.998	FASTENER, LOAD SAFETY BACK REST 패스너
66.431	RETAINER, LBR CAPSCREW 리테이너

www.truck-freeworkshop.com/forklift/clark/

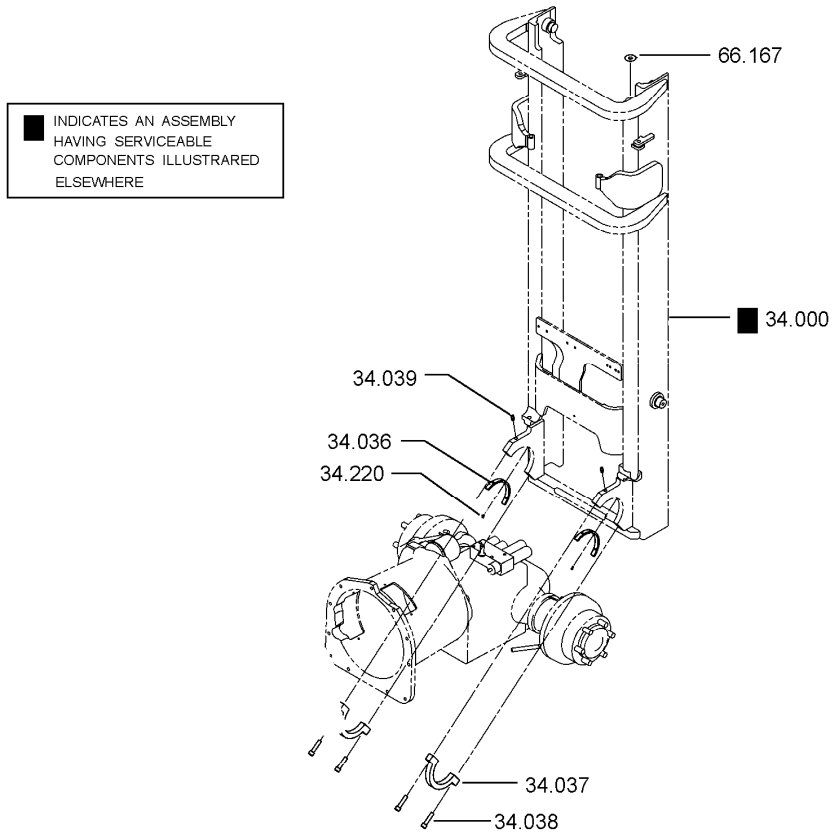

UPRIGHT MOUNTING 34-050

34.000	UPRIGHT & LIFT CYL ASSEMBLY 업라이트와실린더
34.036	BUSHING, UPRIGHT TRUNNION 부싱
34.037	CAP, UPRIGHT TRUNNION 캡
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너
34.039	FITTING-LUB, UPRIGHT TRUNNION 피팅
34.220	FASTENER, UPRIGHT TRUNNION CAP DOWEL 패스너
66.167	SHIM, LIFT CYLINDER UPPER 심

www.truck-freeworkshop.com/forklift/clark/

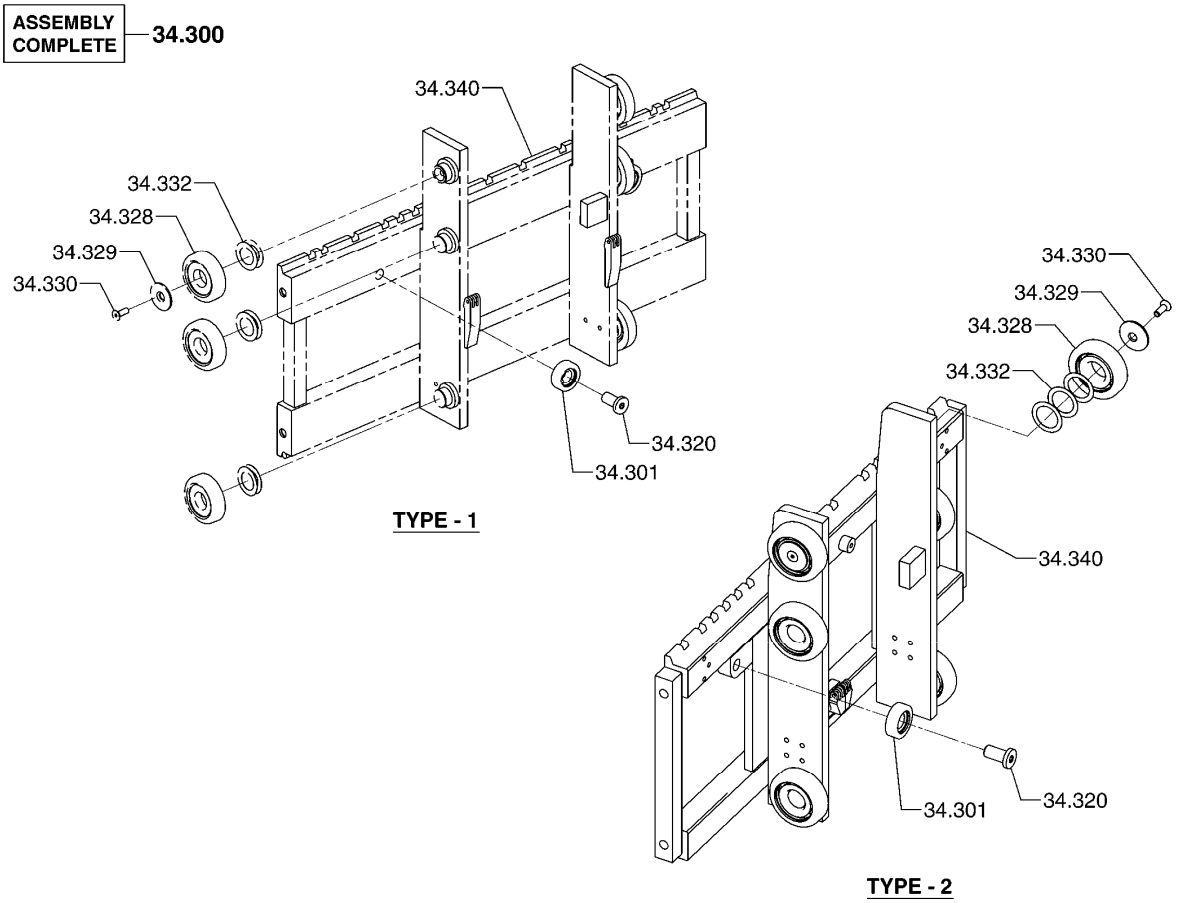

34.300 ASSEMBLY, FORK BARS & CARRIAGE
캐리지

34.301 ROLLER, CARRIAGE OUTER THRUST
롤러

34.320 SHAFT, CARRIAGE OUTER THRUST ROLLER
샤프트

34.328 ROLLER, CARRIAGE CAPTIVE
롤러

34.329 RETAINER, CARRIAGE CAPTIVE ROLLER
리테이너

34.330 FASTENER, CARRIAGE CAPTIVE ROLLER RETAINER
패스너

34.332 SHIM, CARRIAGE CAPTIVE ROLLER
심

34.340 CARRIAGE WELDED ASSEMBLY
캐리지용접물

www.truck-freeworkshop.com/forklift/clark/

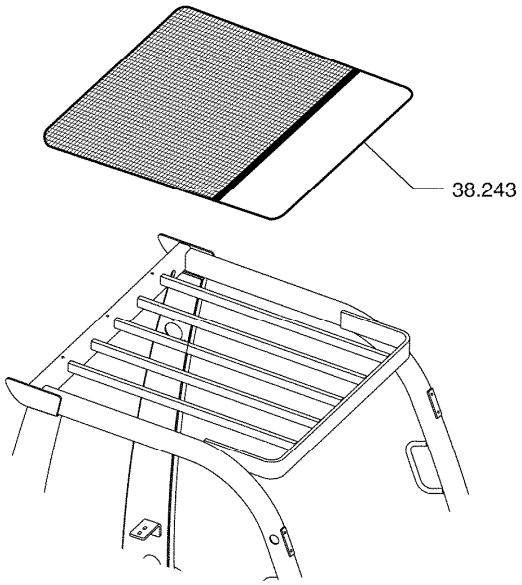

OVERHEAD GUARD COVER **37-003**

38.243 COVER ASSEMBLY, OVERHEAD GUARD TOP
커버

www.truck-freeworkshop.com/forklift/clark/

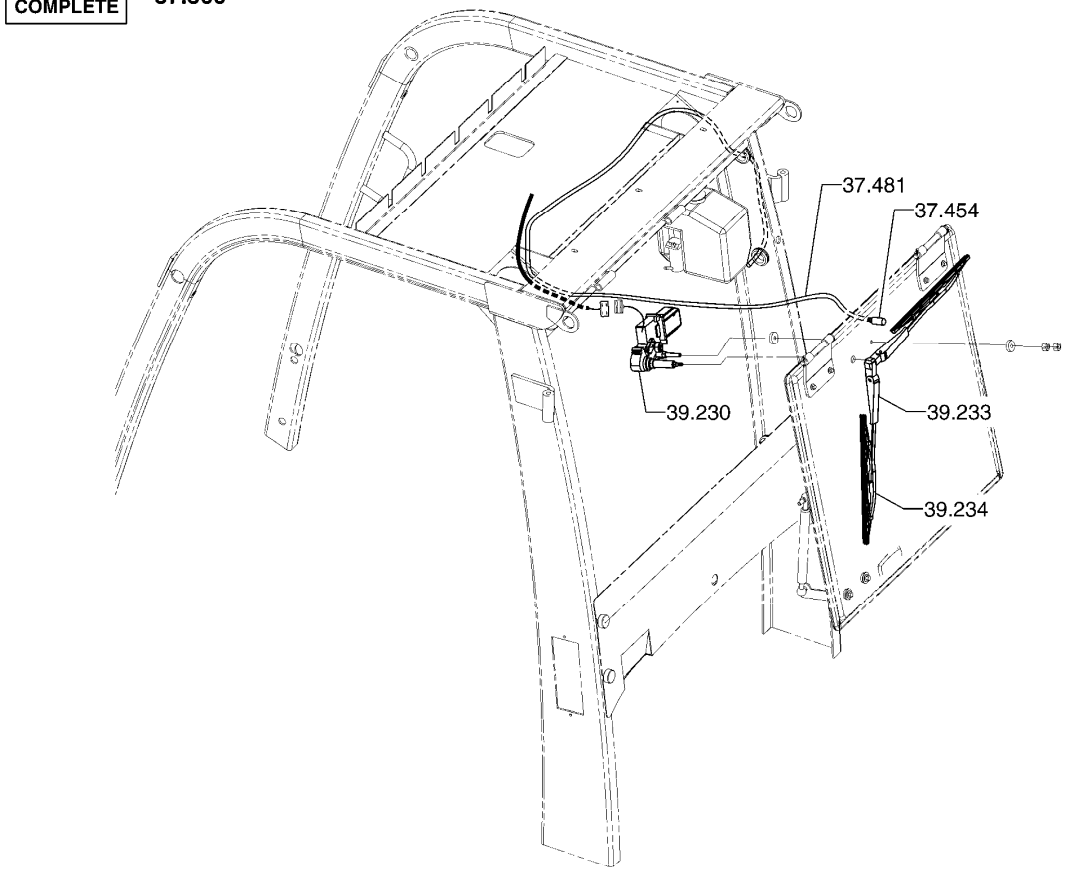

REAR WIPER INSTALLATION **37-050**

37.300	CAB ASSEMBLY 캐빈
37.454	NOZZLE, REAR WINDOW GLASS WASHER 노즐
37.481	LINE, WINDOW GLASS WASHER 라인
39.230	MOTOR, REAR WINDOW WIPER 모터
39.233	ARM, REAR WINDOW WIPER 암
39.234	BLADE, REAR WINDOW WIPER 블레이드

www.truck-freeworkshop.com/forklift/clark/

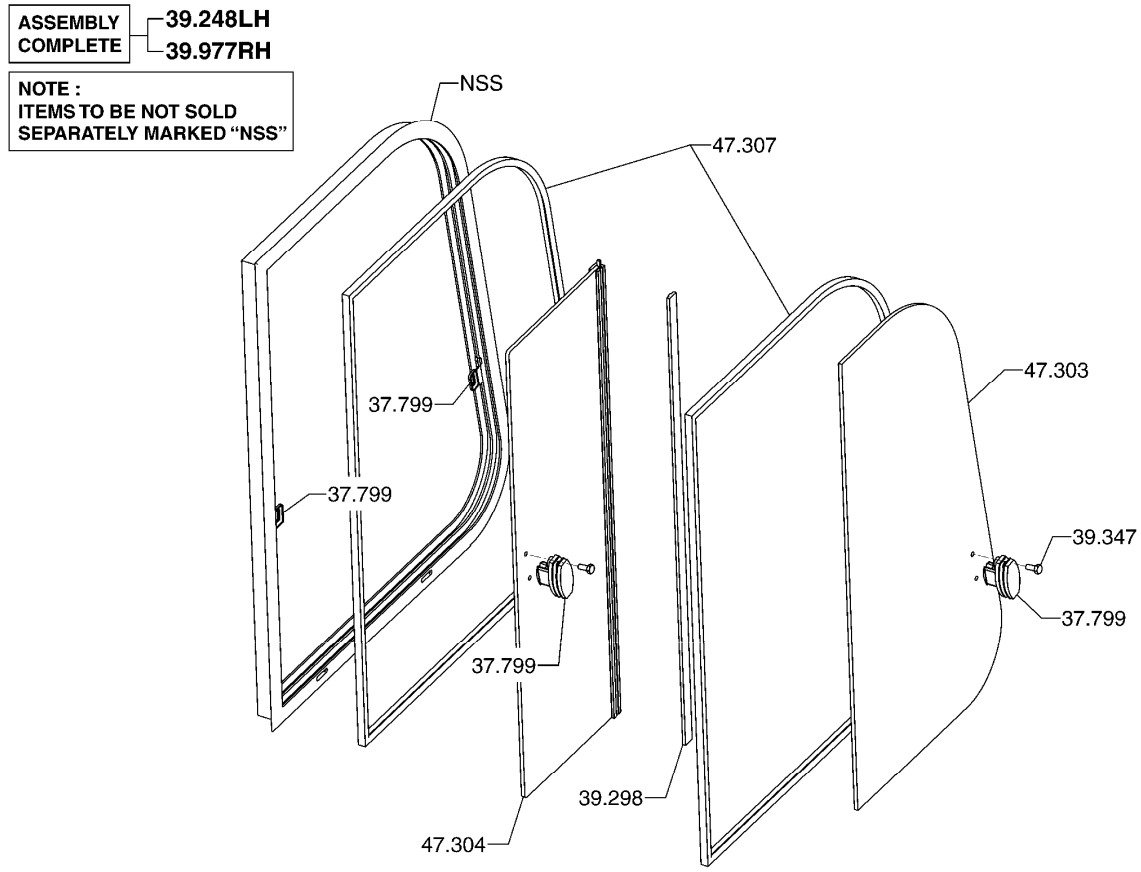

37.799	LATCH, CAB DOOR WINDOW ASSEMBLY 래치
39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
39.298	CHANNEL, FRONT DOOR GLASS - FRONT 채널
39.347	FASTENER, CAB REAR WINDOW LATCH 패스너
39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우
47.303	GLASS, CAB DOOR (FRONT) 글래스
47.304	GLASS, CAB DOOR (REAR) 글래스
47.307	CHANNEL, CAB SIDE DOOR WINDOW 채널

www.truck-freeworkshop.com/forklift/clark/

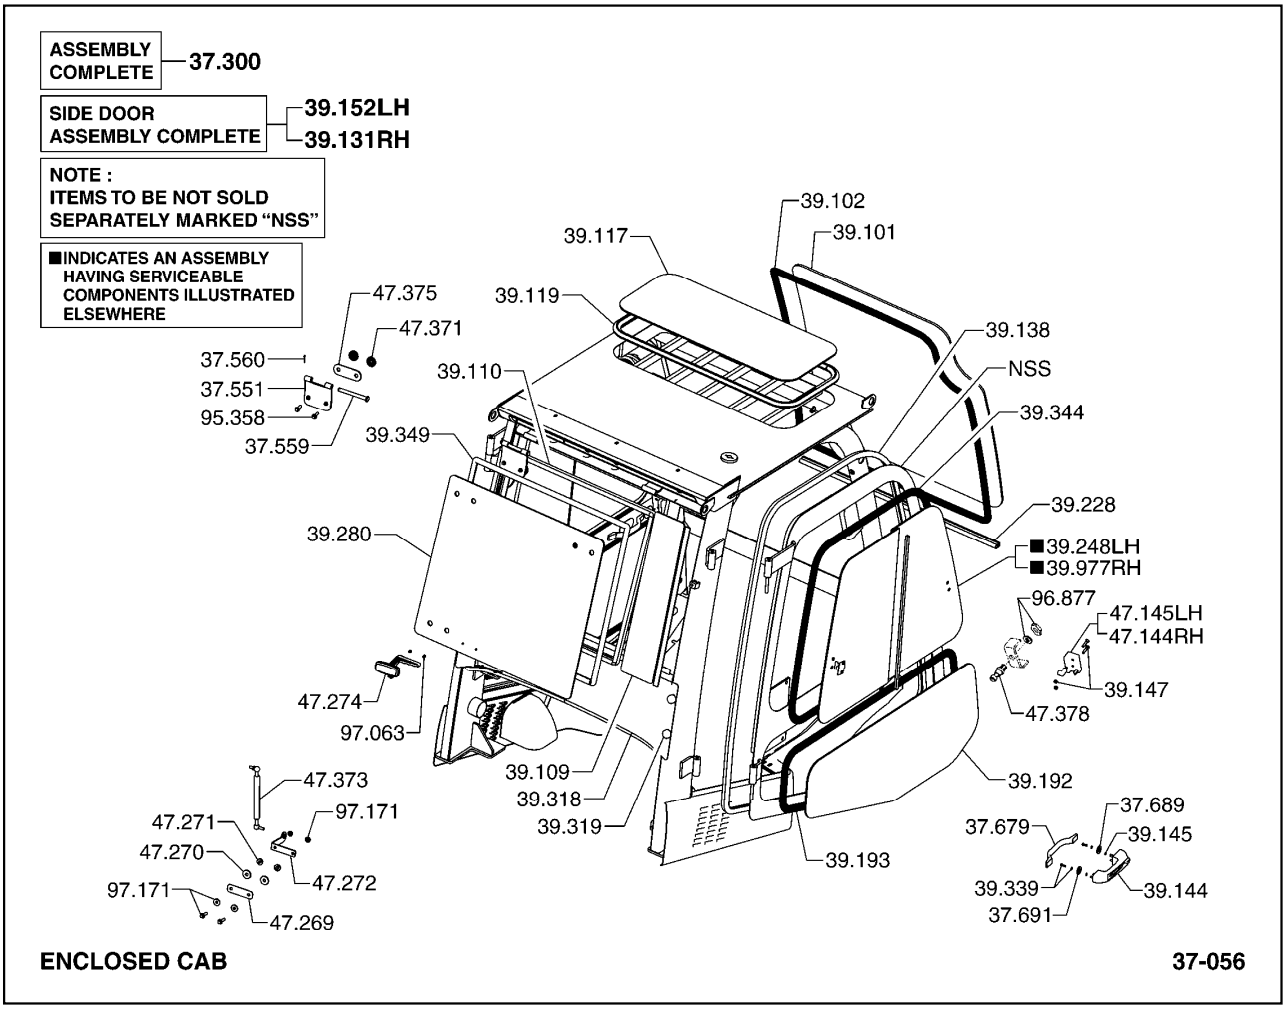

37.300	CAB ASSEMBLY 캐빈	39.144	HANDLE, RH DOOR OUTSIDE 핸들
37.551	HANGER, CAB REAR GLASS 행거	39.145	FASTENER, RH DOOR HANDLE 패스너
37.559	PIN, CABIN REAR GLASS HANGER 핀	39.147	FASTENER, RIGHT HAND DOOR LATCH 패스너
37.560	RETAINER, CAB REAR GLASS HANGER PIN 리테이너	39.152	DOOR ASSEMBLY, LEFT HAND 도어
37.679	HANDLE, RH DOOR INSIDE 핸들	39.192	GLASS, RIGHT HAND DOOR (LOWER) 글래스
37.689	SEAL, DOOR OUTSIDE HANDLE 시일	39.193	WEATHERSEAL, RH DOOR GLASS (LOWER) 웨더시일
37.691	SEAL, DOOR OUTSIDE HANDLE 시일	39.228	WEATHERSEAL, WINDSHIELD SETTING 웨더시일
39.101	GLASS, WINDSHIELD 글래스	39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
39.102	WEATHERSEAL, WINDSHIELD SETTING 웨더시일	39.280	GLASS, REAR WINDOW - MOVEABLE 글래스
39.109	GLASS, REAR 글래스	39.318	PANEL, REAR LOWER 판넬
39.110	WEATHERSEAL, REAR GLASS SETTING 웨더시일	39.319	FASTENER, LOWER REAR PANEL 패스너
39.117	ROOF SCREEN 루프스크린	39.339	FASTENER, RH DOOR INSIDE HANDLE 패스너
39.119	SEAL STRIP, ROOF WINDOW 시일스트립	39.344	WEATHERSEAL, RH DOOR WINDOW ASSEMBLY 웨더시일
39.131	DOOR ASSEMBLY, RIGHT HAND 도어	39.349	WEATHERSEAL, CAB REAR WINDOW 웨더시일
39.138	WEATHERSEAL, RIGHT HAND DOOR 웨더시일	39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우

www.truck-freeworkshop.com/forklift/clark/

47.144 LATCH, RH DOOR INSIDE
래치

47.145 LATCH, LH DOOR INSIDE
래치

47.269 BRACKET, CAB REAR GLASS GAS SPRING SUPPORT
브라켓

47.270 RUBBER, CAB REAR GLASS GAS SPRING MOUNTING
러버

47.271 RUBBER, CAB REAR GLASS GAS SPRING MOUNTING
러버

47.272 BRACKET, CAB REAR GLASS GAS SPRING MOUNTING
브라켓

47.274 HANDLE, CAB REAR GLASS
핸들

47.371 CAP, CAB REAR GLASS GAS SPRING MOUNTING FASTENER
*

47.373 SHOCK ABSORBER, CAB REAR GLASS
*

47.375 BRACKET, CAB REAR GLASS HANGER
*

47.378 SUPPORT, CAB DOOR INSIDE LATCH
*

95.358 FASTENER, REAR GLASS HANGER
패스너

96.877 FASTENER, DOOR INSIDE LATCH STRIKER
패스너

97.063 FASTENER, REAR DOOR HANDLE MOUNTING
패스너

97.171 FASTENER, CAB REAR GLASS GAS SPRING MOUNTING
*

www.truck-freeworkshop.com/forklift/clark/

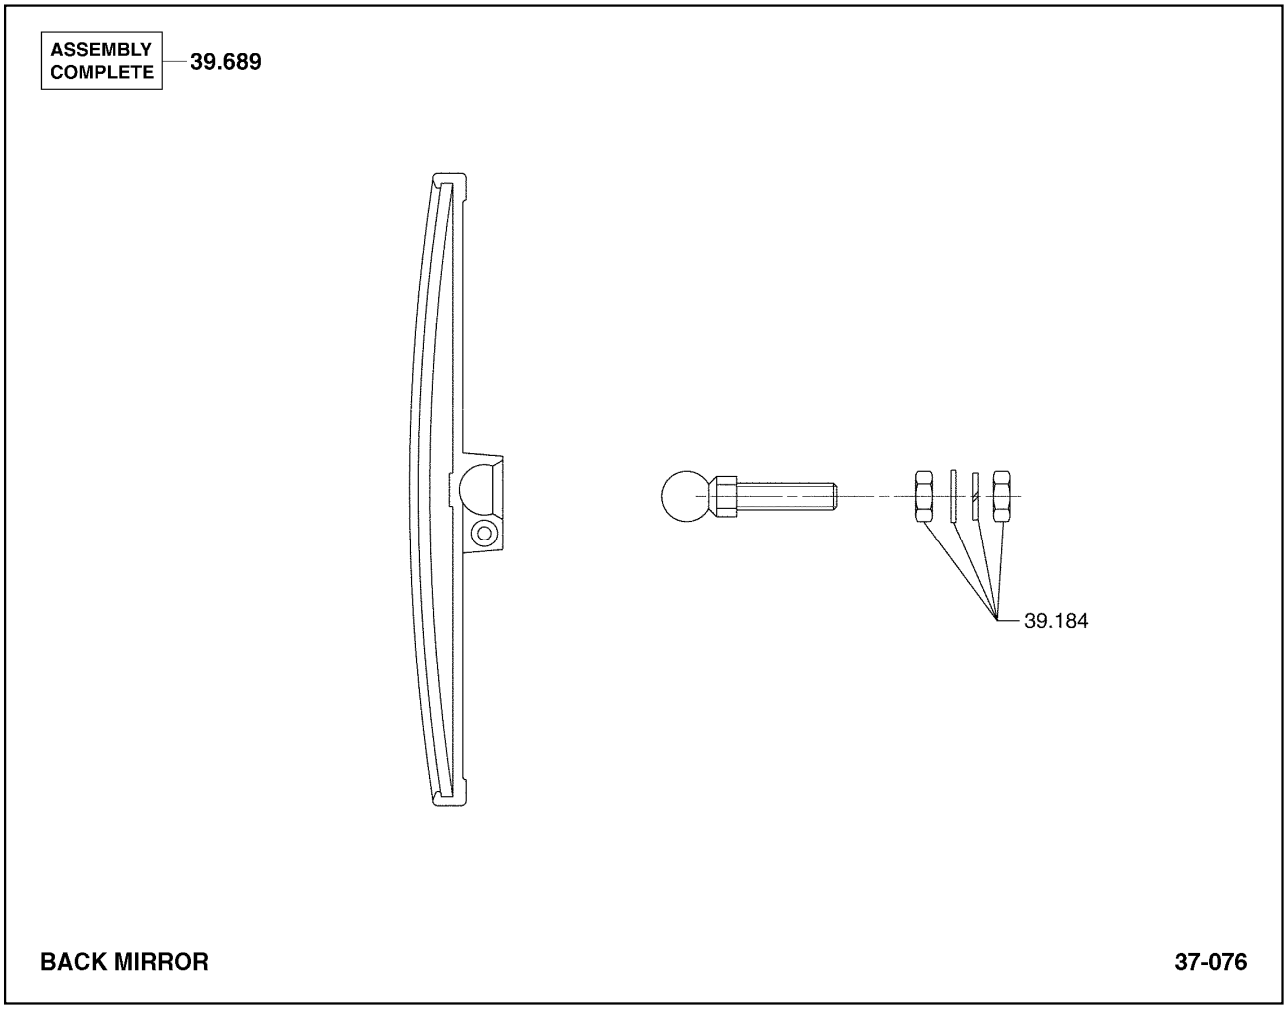

39.184	FASTENER, REAR VIEW MIRROR 패스너
39.689	MIRROR, REAR VIEW 미러

www.truck-freeworkshop.com/forklift/clark/

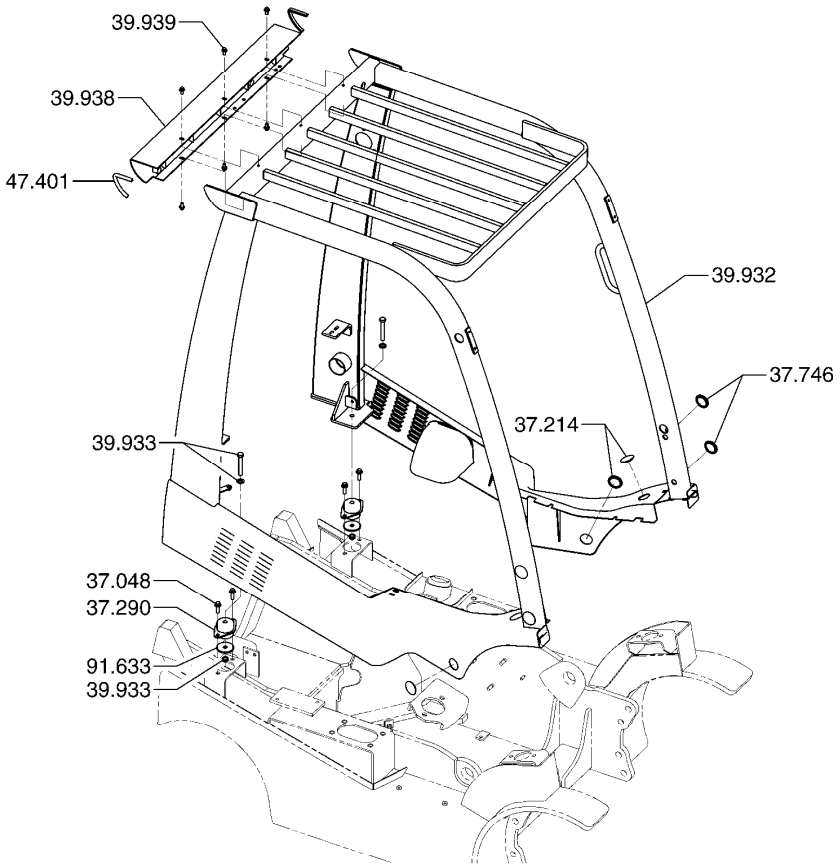

OVERHEAD GUARD MOUNTING **37-082**

37.048	FASTENER, OVERHEAD GUARD BUMPER 패스너
37.214	PLUG-BUTTON 플러그
37.290	DAMPENER, OVERHEAD GUARD VIBRATION 댐프너
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
39.932	GUARD, OVERHEAD 가드
39.933	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
47.401	WEATHERSTRIP, OVERHEAD GUARD REAR SUPPORT *

www.truck-freeworkshop.com/forklift/clark/

91.633 WASHER, OVERHEAD GUARD FASTENER
와셔

www.truck-freeworkshop.com/forklift/clark/

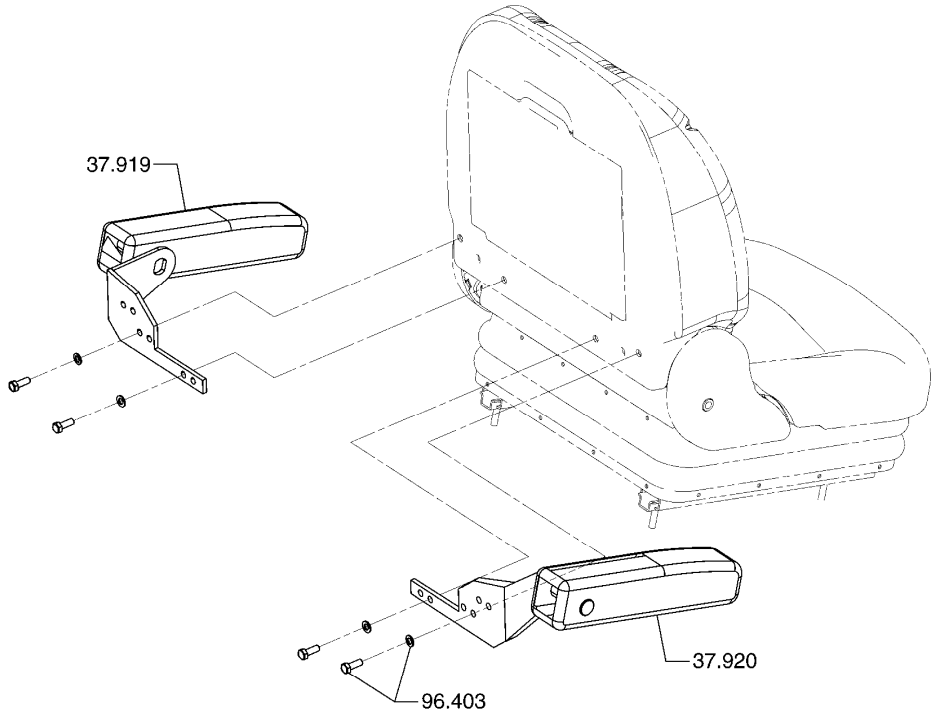

SEAT ARMREST ASSEMBLY **37-124**

37.919	ARMREST LH, SEAT 암레스트
37.920	ARMREST RH, SEAT 암레스트
96.403	FASTENER, SEAT ARMREST BRACKET 패스너

www.truck-freeworkshop.com/forklift/clark/

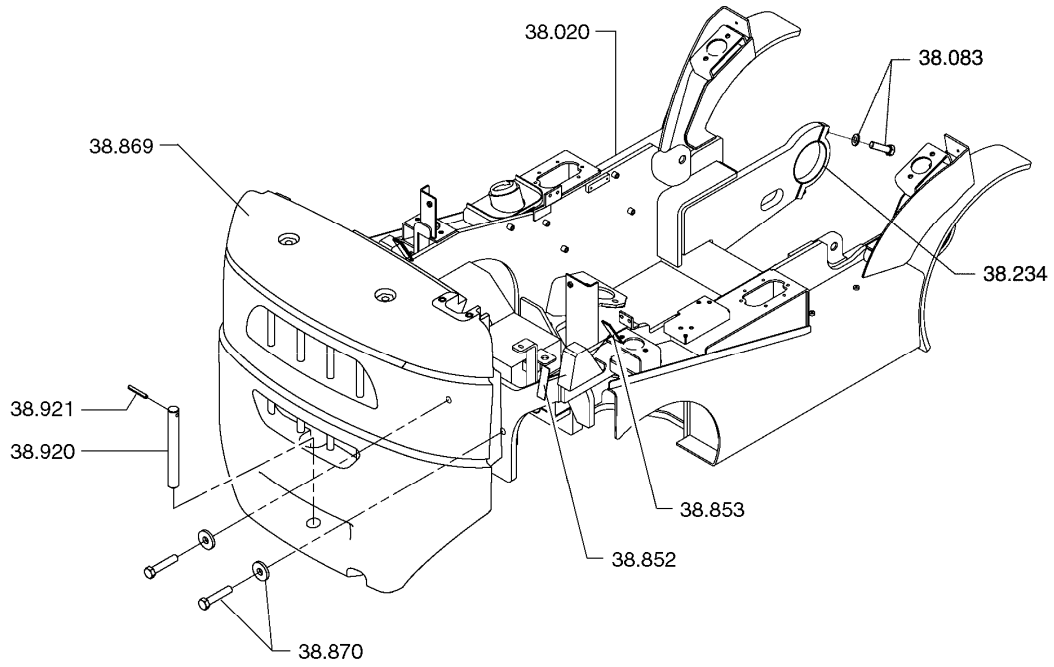

FRAME & COUNTERWEIGHT 38-221

38.020	FRAME ASSEMBLY 프레임
38.083	FASTENER, DRIVE AXLE SUPPORT CAP 패스너
38.234	CAP, FRAME TRUNNION 캡
38.852	SPACER, COUNTERWEIGHT 스페이서
38.853	SHIM, COUNTERWEIGHT 심
38.869	COUNTERWEIGHT 카운터웨이트
38.870	FASTENER, COUNTERWEIGHT (LOWER) 패스너
38.920	PIN, COUPLER 핀
38.921	PIN, COUPLER PIN CROSS 핀

www.truck-freeworkshop.com/forklift/clark/

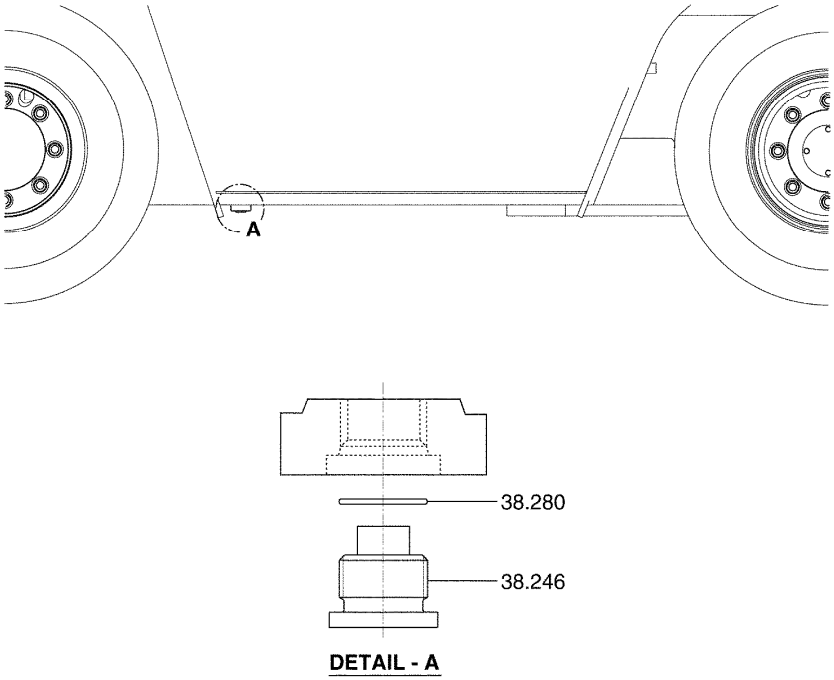

FRAME TANK BOTTOM PLUG **38-270**

38.246 PLUG, FRAME BOTTOM MAGNETIC
플러그

38.280 SEAL, FRAME BOTTOM MAGNETIC PLUG
실

www.truck-freeworkshop.com/forklift/clark/

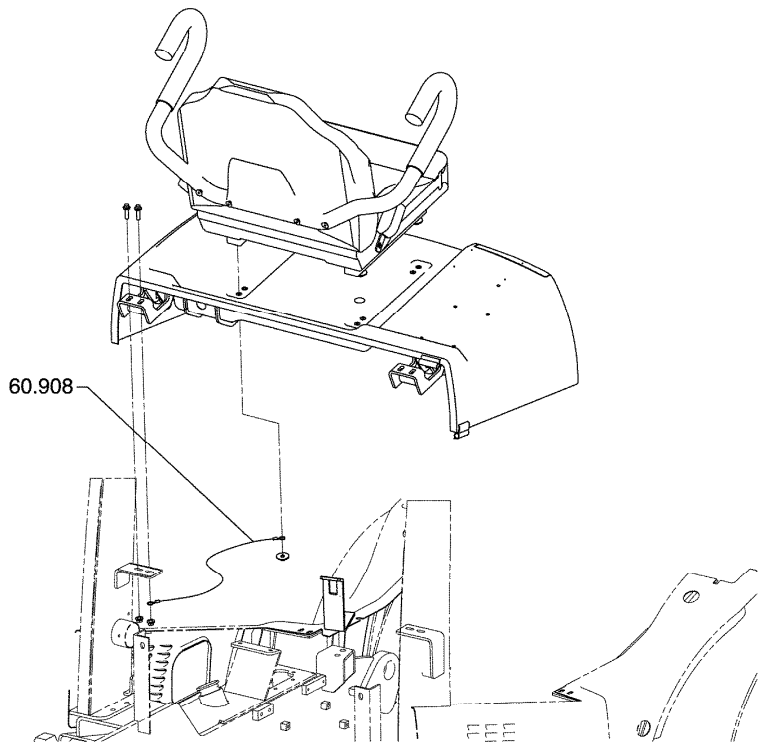

LEAD WIRE GROUND **39-012**

60.908 WIRE, LEAD GROUND
와이어

www.truck-freeworkshop.com/forklift/clark/

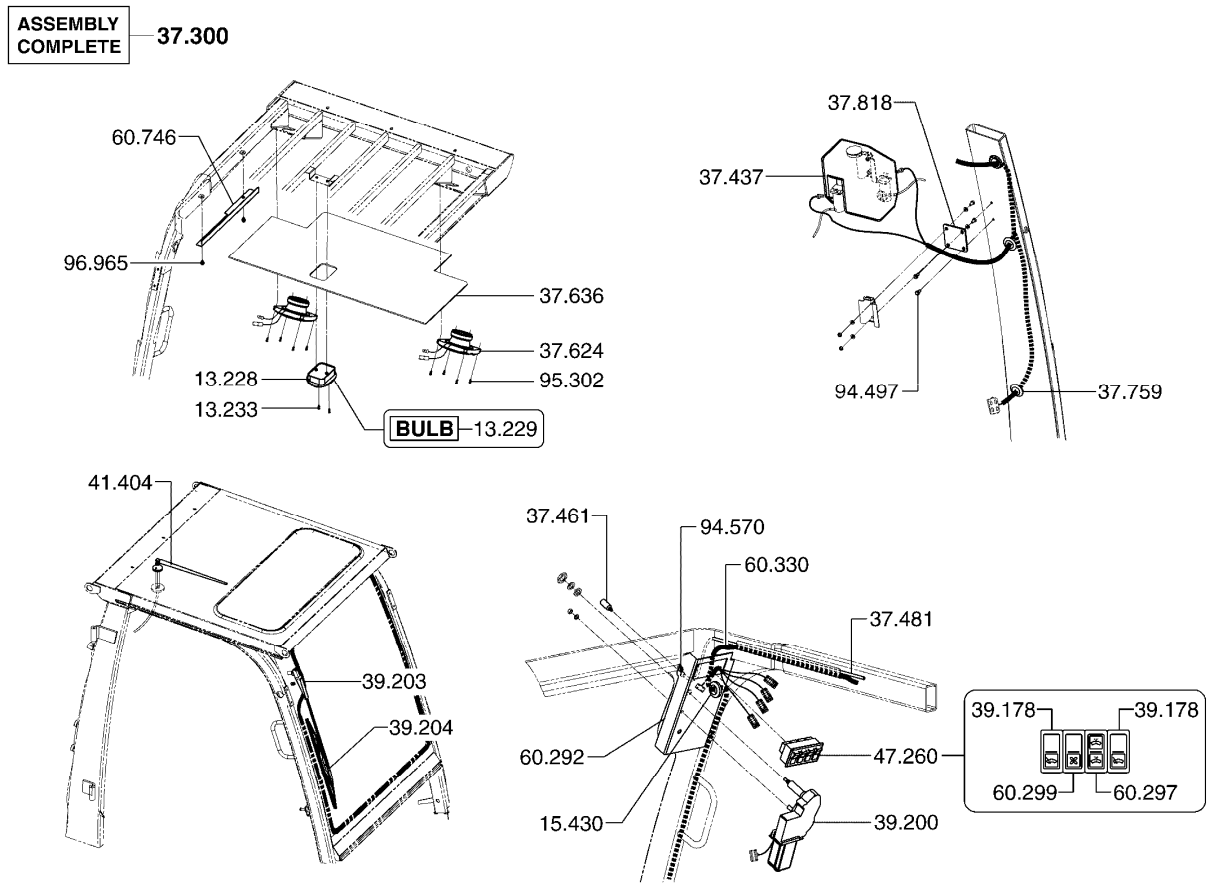

13.228	LAMP ASSEMBLY, DOME 램프
13.229	BULB, DOME LAMP 전구
13.233	FASTENER, DOME LAMP 패스너
15.430	GROMMET, CABIN WIRING HARNESS 그로멧
37.300	CAB ASSEMBLY 캐빈
37.437	PUMP & TANK, WINDSHIELD WASHER 펌프와탱크
37.461	NOZZLE, WINDSHIELD GLASS WASHER 노즐
37.481	LINE, WINDOW GLASS WASHER 라인
37.624	SPEAKER, CABIN 스피커

www.truck-freeworkshop.com/forklift/clark/

37.636	COVERING, CAB INSIDE ROOF 커버링
37.759	GROMMET, COVER WINDSHIELD WIPER MOTOR 그로멧
37.818	BRACKET, WINDSHIELD WASHER TANK 브라켓
39.178	SWITCH, WINDSHIELD WIPER 스위치
39.200	MOTOR, WINDSHIELD WIPER 모터
39.203	ARM, WINDSHIELD WIPER 암
39.204	BLADE, WINDSHIELD WIPER 블레이드
41.404	ANTENNA, AUDIO 안테나
47.260	SWITCH ASSY, CABIN 스위치
60.292	COVER, CAB SWITCH PANEL 커버
60.297	SWITCH, WINDSHIELD WASHER 스위치
60.299	SWITCH, HEATER ON/OFF 스위치
60.330	WIRING HARNESS, CAB 와이어하네스
60.746	PROTECTION,HARNESS 보호장치
94.497	FASTENER, WINDSHIELD WASHER TANK 패스너
94.570	FASTENER, CAB SWITCH PANEL COVER 패스너
95.302	FASTENER, LOUDSPEAKER 패스너
96.965	FASTENER, REAR WINDOW WIPER BRACKET 패스너

www.truck-freeworkshop.com/forklift/clark/

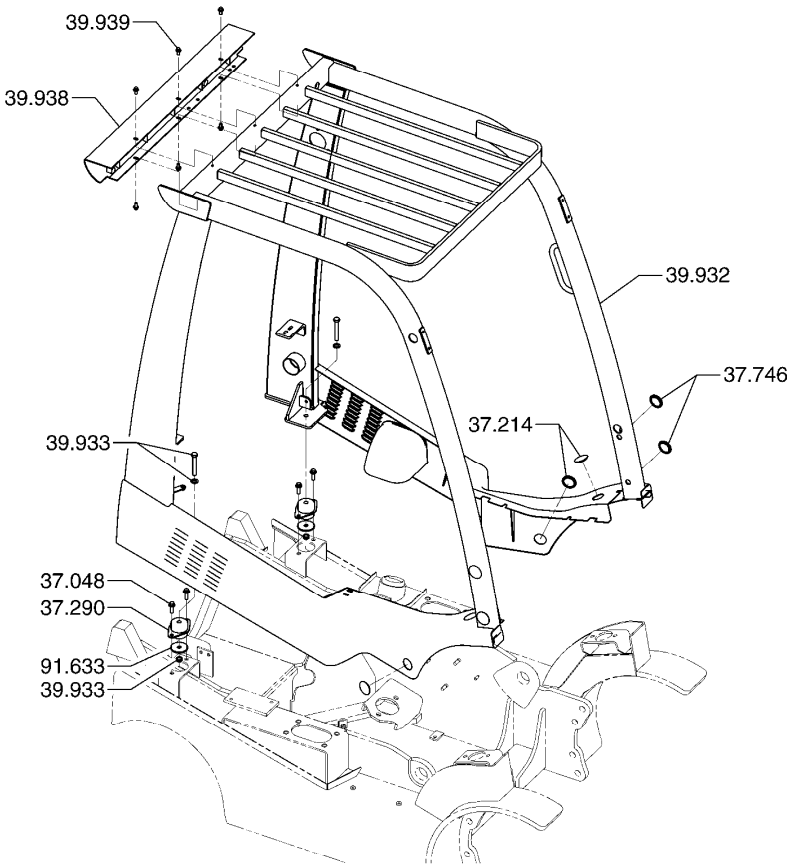

OVERHEAD GUARD MOUNTING **39-510**

37.048	FASTENER, OVERHEAD GUARD BUMPER 패스너
37.214	PLUG-BUTTON 플러그
37.290	DAMPENER, OVERHEAD GUARD VIBRATION 댐프너
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
39.932	GUARD, OVERHEAD 가드
39.933	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
91.633	WASHER, OVERHEAD GUARD FASTENER 와셔

www.truck-freeworkshop.com/forklift/clark/

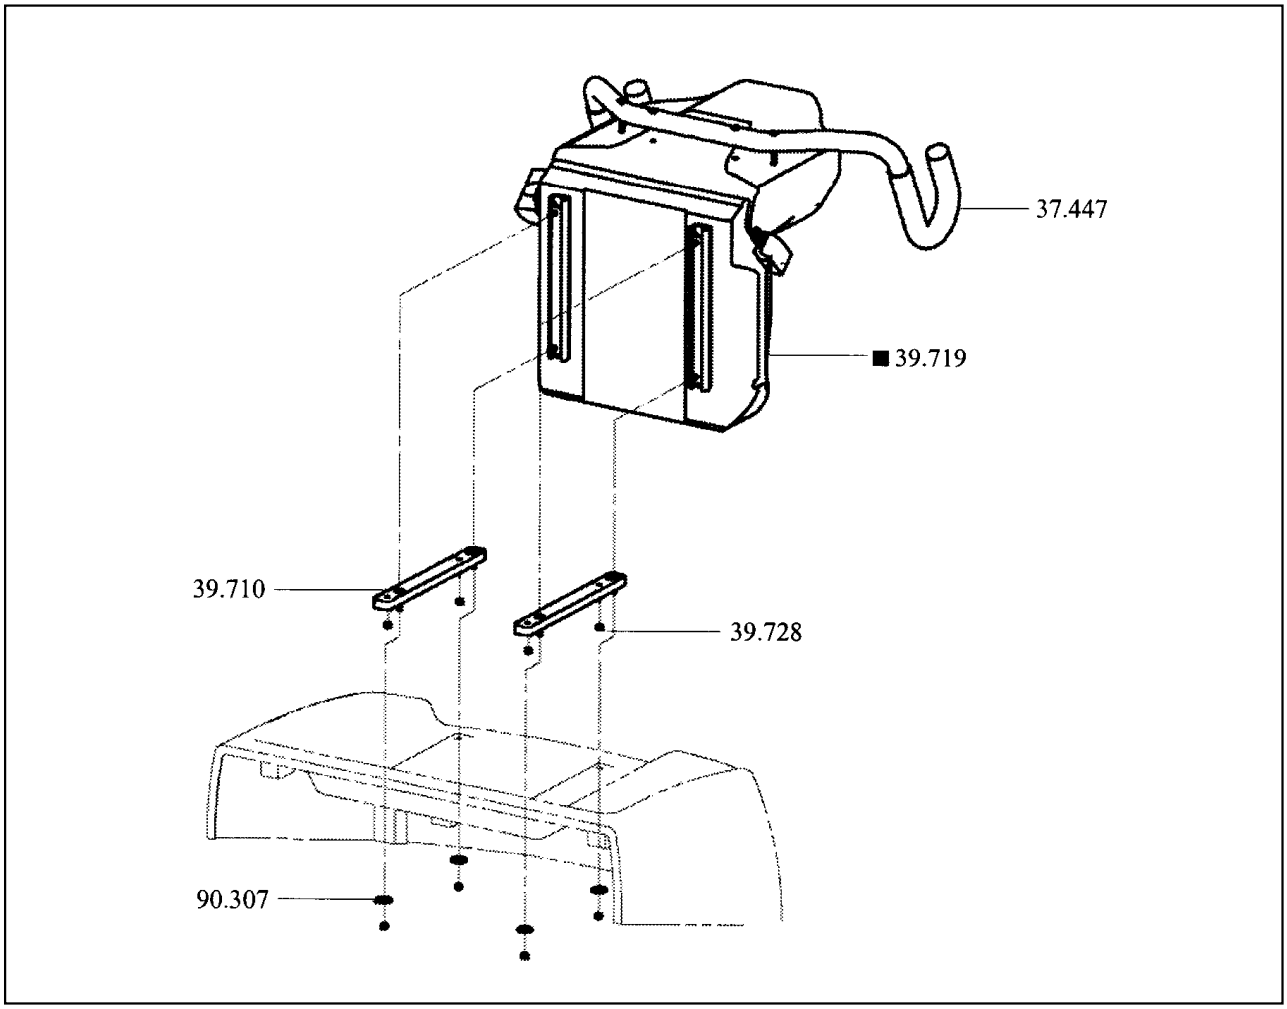

37.447	RESTRAINT, OPERATOR SEAT LATERAL 레스트레인트
39.710	SUPPORT, SEAT ADJUSTOR (RH) 서포트
39.719	SEAT ASSEMBLY 시트
39.728	FASTENER, SEAT FRAME TO ADJUSTOR 패스너
90.307	LOCKWASHER, ADJUSTOR TO SEAT SUPPORT FASTENER 로크와셔

www.truck-freeworkshop.com/forklift/clark/

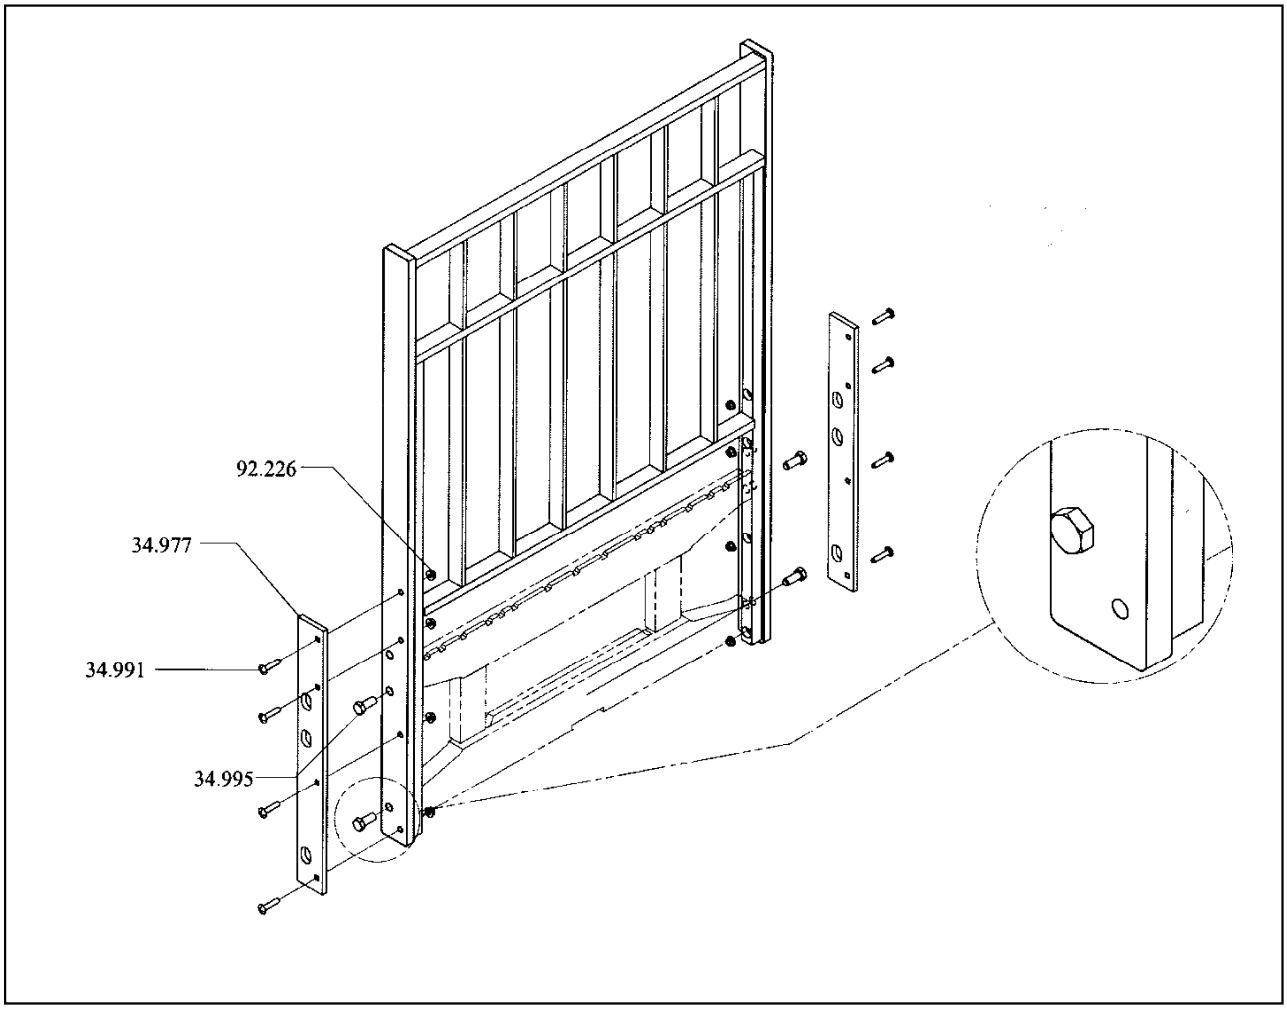

34.977	RETAINER, LOAD BACK REST TRUNNION PIN 리테이너
34.991	FASTENER, LOAD SAFETY BACK REST EXT 패스너
34.995	FASTENER, LOAD SAFETY BACK REST 패스너
92.226	NUT, LOAD SAFETY BACK REST FASTENER 너트

www.truck-freeworkshop.com/forklift/clark/

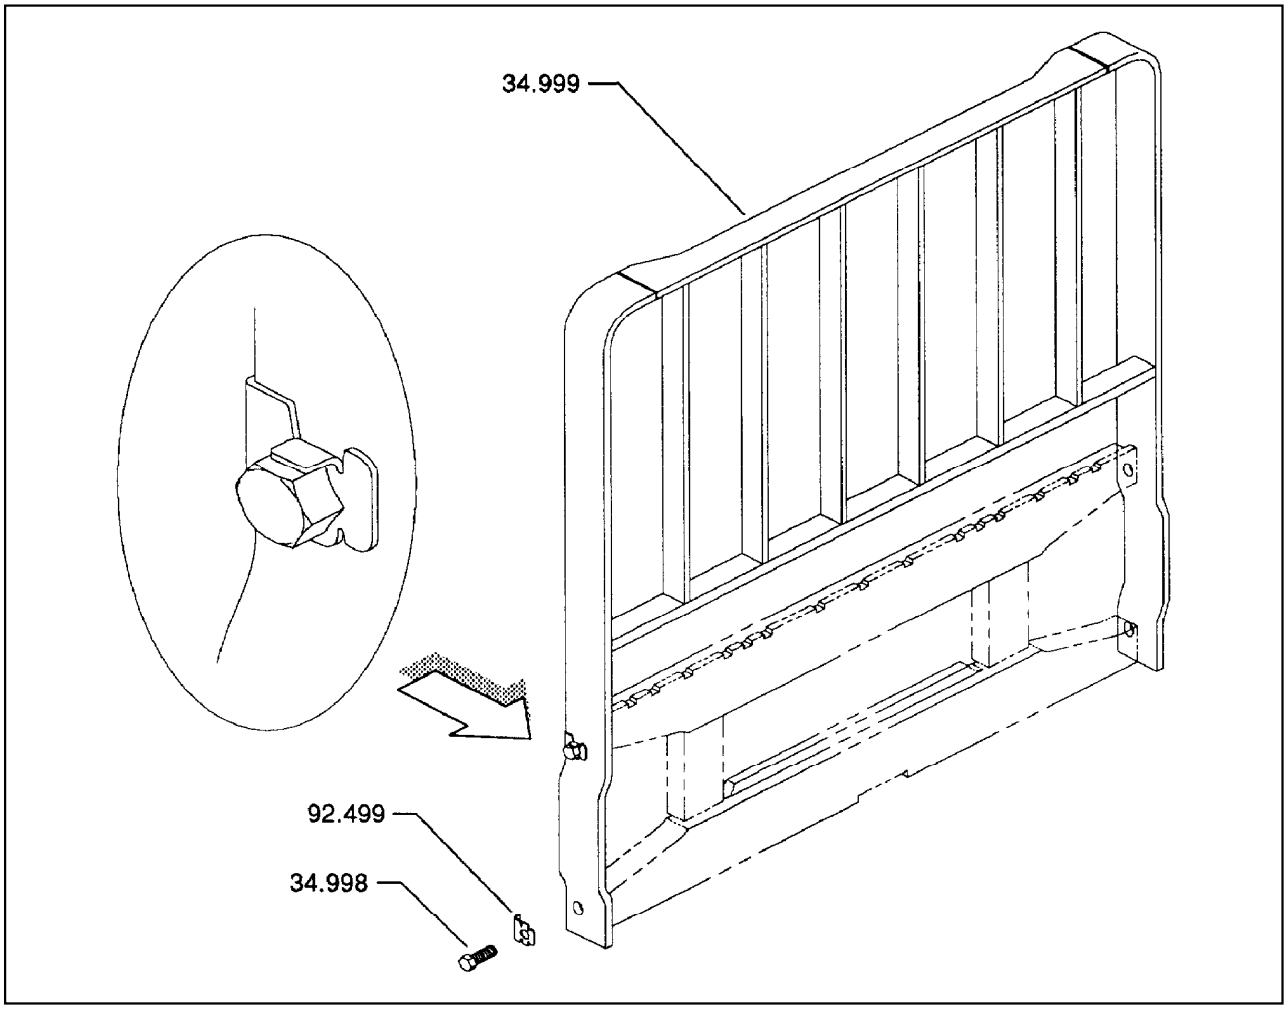

34.998	FASTENER, LOAD SAFETY BACK REST 패스너
34.999	BACK REST, LOAD SAFETY-COMPLETE 백레스트
92.499	LOCKWASHER, LOAD SAFETY BACK REST FASTENER 로크와셔

www.truck-freeworkshop.com/forklift/clark/

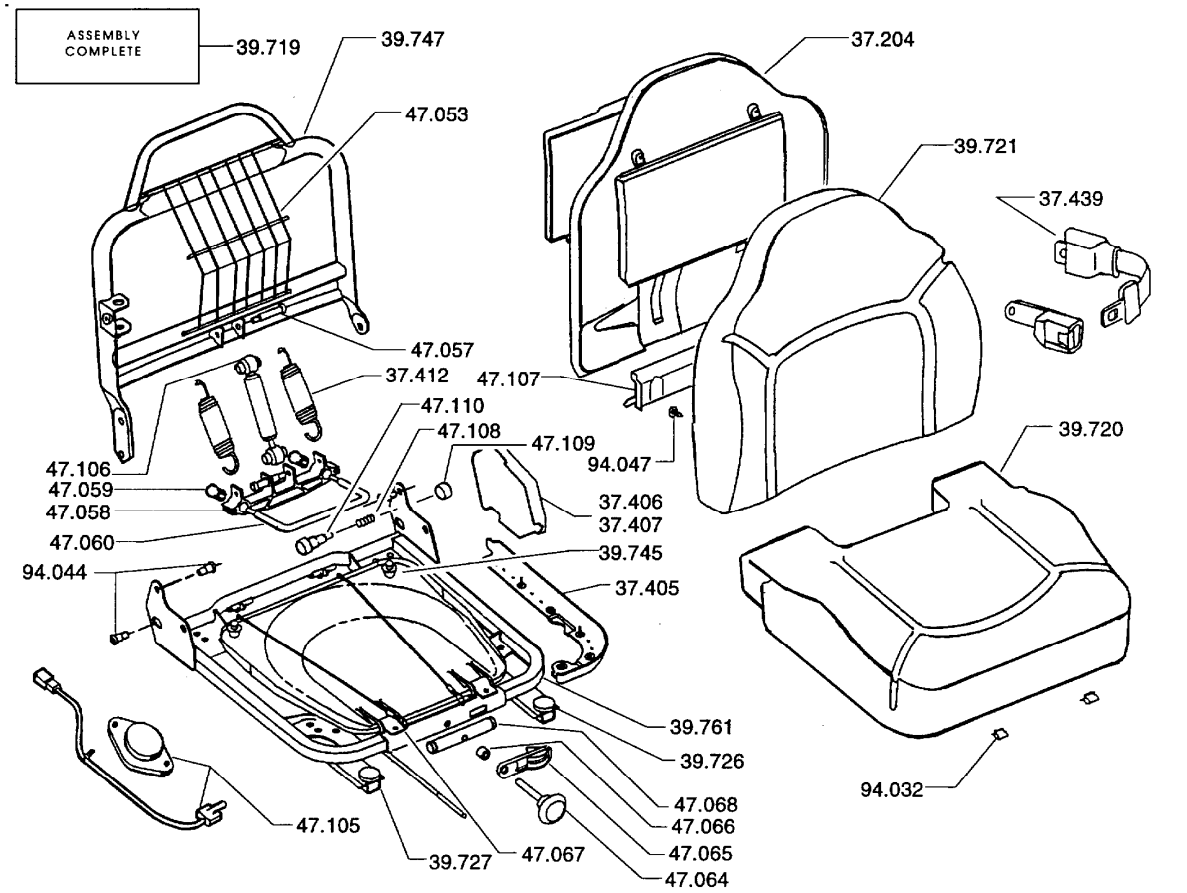

37.204	COVER, SEAT BACK REST CUSHION 커버	47.057	PIN, BACK FRAME SHOCK 핀
37.405	TRIM, SEAT MOUNTING PLATE 트림	47.058	SADDLE SPRING, SPRING ARM 샤들스프링
37.406	BRACKET, SEAT BACK REST COVER LH 브라켓	47.059	SADDLE BUSHING, SPRING ARM 샤들부싱
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓	47.060	SPRING ARM, SUSPENSION SEAT 스프링
37.412	SPRING, SEAT SUSPENSION TENSION 스프링	47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
37.439	SAFETY BELT, SEAT 세이프티벨트	47.065	WEIGHT INDICATOR ASSEMBLY 웨이트인디케이터
39.719	SEAT ASSEMBLY 시트	47.066	SPACER, SEAT ASSEMBLY WEIGHT ADJUST SCREW 스페이서
39.720	CUSHION, SEAT 쿠션	47.067	CLIP, FRONT SEAT FRAME 클립
39.721	CUSHION, SEAT BACK REST 쿠션	47.068	BAR, WEIGHT ADJUSTER 바
39.726	ADJUSTOR, SEAT 어드져스터	47.105	SWITCH KIT, SEAT 스위치킷
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터	47.106	SHOCK ABSORBER, SUSPENSION SEAT 쇽압쇼버
39.745	BUMPER, SEAT SUPPORT 범퍼	47.107	COVER, MECHANISM 커버
39.747	PLATE, SEAT BACK REST CUSHION MOUNTING 플레이트	47.108	SPRING, SEAT ASSEMBLY PLUNGER 스프링
39.761	PLATE, SEAT CUSHION MOUNTING 플레이트	47.109	KNOB, FOLD DOWN SEAT 노브
47.053	LUMBAR FLEXOLATOR 룸바	47.110	PLUNGER, FOLD DOWN SEAT 플런저

www.truck-freeworkshop.com/forklift/clark/

94.032 RETAINER, SEAT FRAME
리테이너

94.044 FASTENER, SEAT CUSHION MOUNTING PLATE
패스너

94.047 FASTENER, SEAT BACK REST CUSHION
패스너

www.truck-freeworkshop.com/forklift/clark/

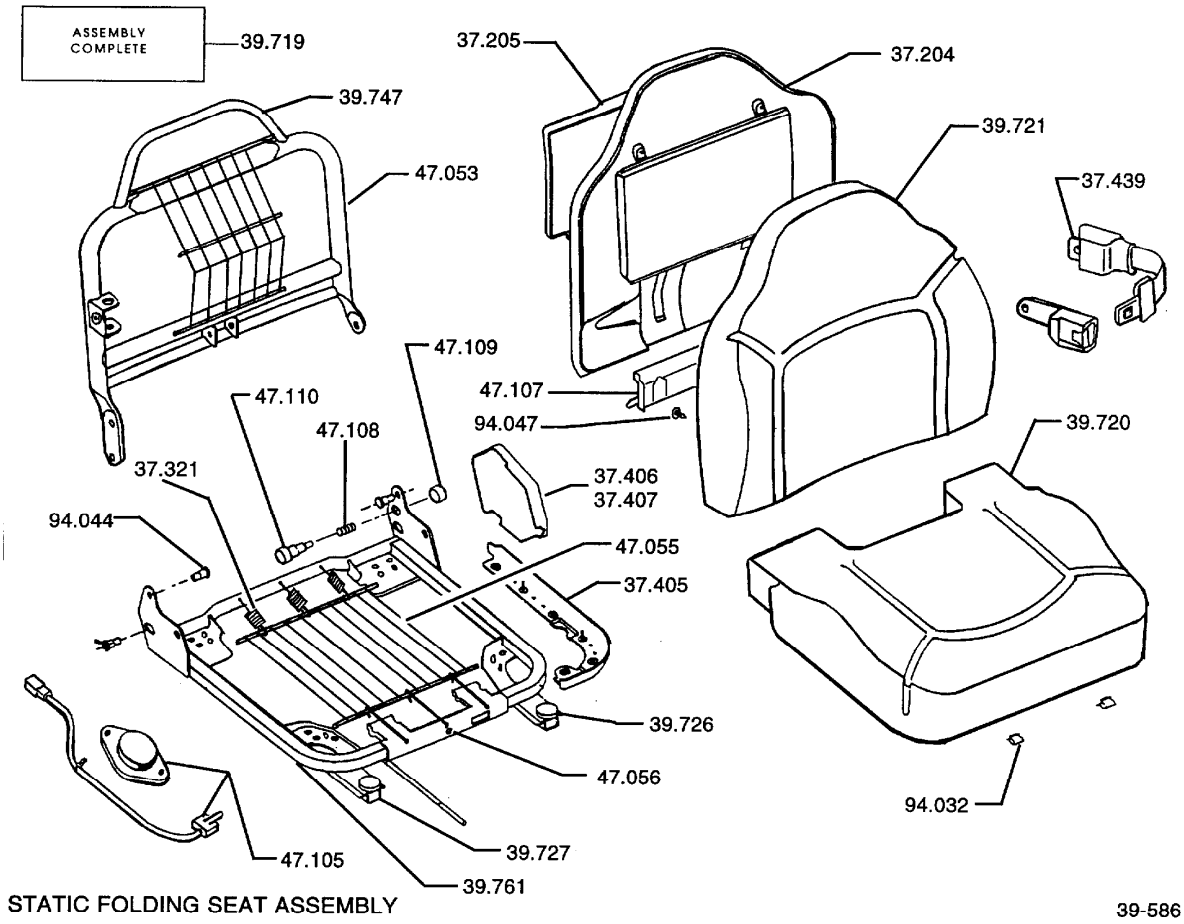

37.204 COVER, SEAT BACK REST CUSHION
커버

37.205 TRAY, LITERATURE
트레이

37.321 SPRING, SEAT SUSPENSION
스프링

37.405 TRIM, SEAT MOUNTING PLATE
트림

37.406 BRACKET, SEAT BACK REST COVER LH
브라켓

37.407 BRACKET, SEAT BACK REST COVER RH
브라켓

37.439 SAFETY BELT, SEAT
세이프티벨트

39.719 SEAT ASSEMBLY
시트

39.720 CUSHION, SEAT
쿠션

www.truck-freeworkshop.com/forklift/clark/

39.721	CUSHION, SEAT BACK REST 쿠션
39.726	ADJUSTOR, SEAT 어드져스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터
39.747	PLATE, SEAT BACK REST CUSHION MOUNTING 플레이트
39.761	PLATE, SEAT CUSHION MOUNTING 플레이트
47.053	LUMBAR FLEXOLATOR 룸바
47.055	SEAT FLEXOLATOR 시트
47.056	CLIP, SPRING 클립
47.105	SWITCH KIT, SEAT 스위치킷
47.107	COVER, MECHANISM 커버
47.108	SPRING, SEAT ASSEMBLY PLUNGER 스프링
47.109	KNOB, FOLD DOWN SEAT 노브
47.110	PLUNGER, FOLD DOWN SEAT 플런저
94.032	RETAINER, SEAT FRAME 리테이너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.047	FASTENER, SEAT BACK REST CUSHION 패스너

www.truck-freeworkshop.com/forklift/clark/

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

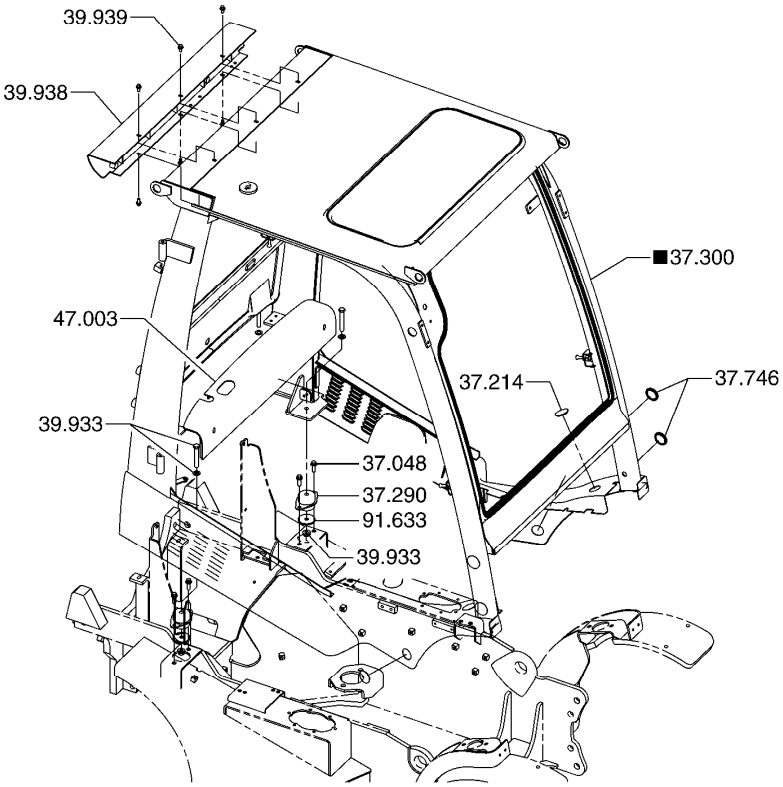

CAB MOUNTING **39-597**

37.048 FASTENER, OVERHEAD GUARD BUMPER
패스너

37.214 PLUG-BUTTON
플러그

37.290 DAMPENER, OVERHEAD GUARD VIBRATION
댐프너

37.300 CAB ASSEMBLY
캐빈

37.746 PLUG, DRIVER OVERHEAD GUARD
플러그

39.933 FASTENER, OVERHEAD GUARD
패스너

39.938 BRACKET, OVERHEAD GUARD REAR SUPPORT
브라켓

39.939 FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET
패스너

47.003 COVER, RADIATOR
커버

www.truck-freeworkshop.com/forklift/clark/

91.633 WASHER, OVERHEAD GUARD FASTENER
와셔

www.truck-freeworkshop.com/forklift/clark/

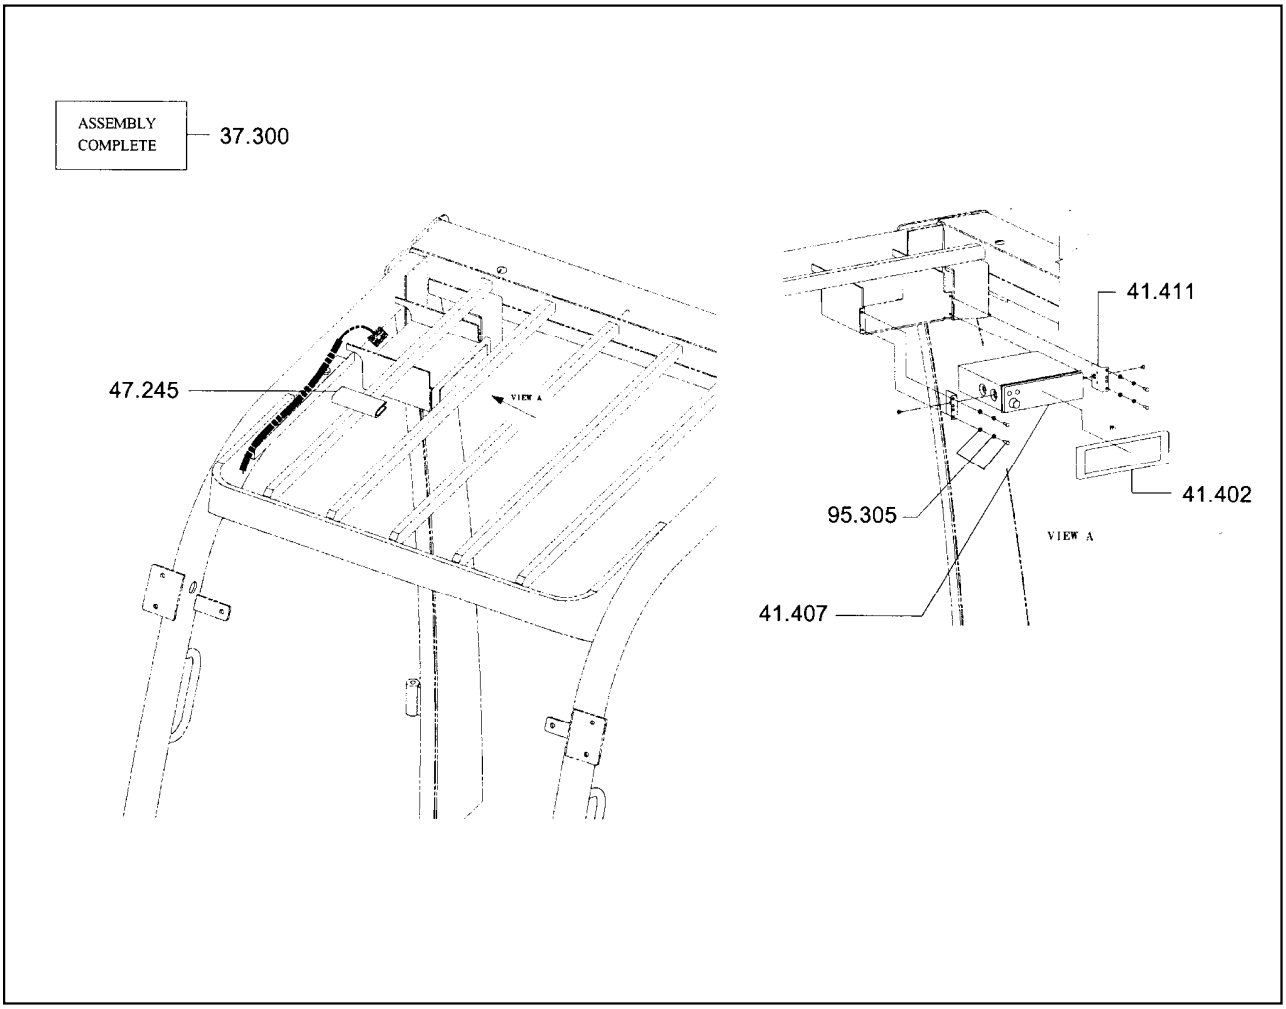

37.300	CAB ASSEMBLY 캐빈
41.402	COVER, AUDIO AND TRANSCEIVER MOUNTING BOX 커버
41.407	AUDIO 라디오
41.411	BRACKET, AUDIO AND TRANSCEIVER BOX MOUNTING 브라켓
47.245	MANUAL, CASSETTE 매뉴얼
95.305	FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING BR 패스너

www.truck-freeworkshop.com/forklift/clark/

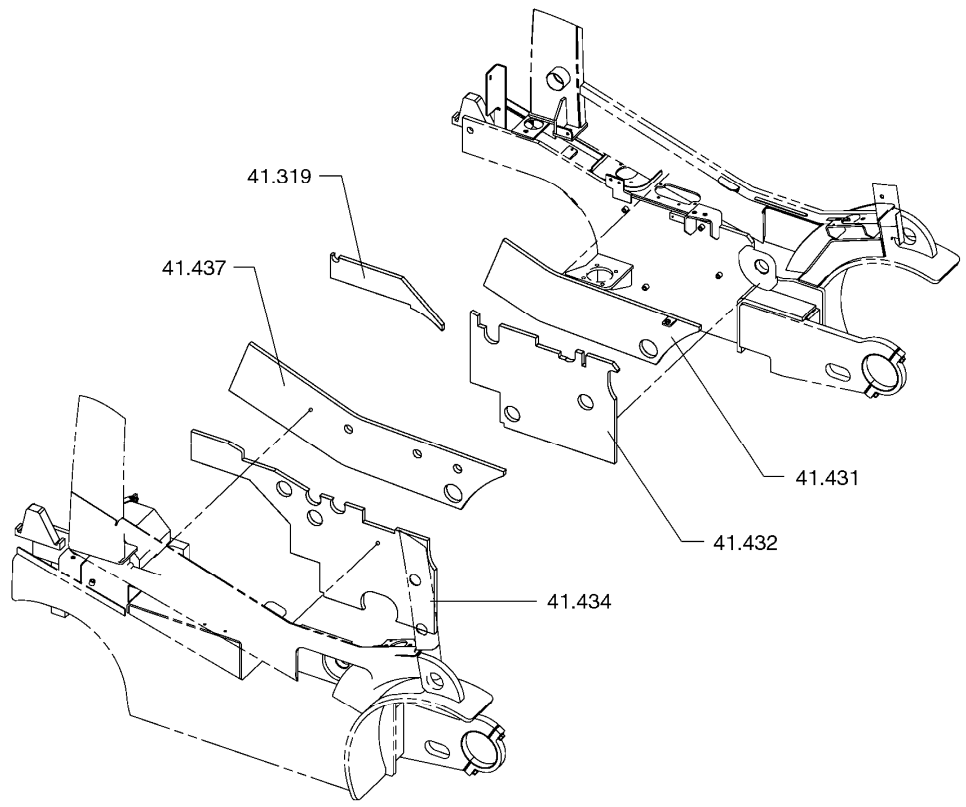

SPONGE MOUNTING **39-640**

41.319 SOUND SEAL, REAR FRAME LOWER
사운드시일

41.431 SOUND SEAL, FRAME UPPER LH
사운드시일

41.432 SOUND SEAL, FRAME LOWER LH
사운드시일

41.434 SOUND SEAL, FRAME LOWER RH
사운드시일

41.437 SOUND SEAL,FRAME RH UPPER
사운드시일

www.truck-freeworkshop.com/forklift/clark/

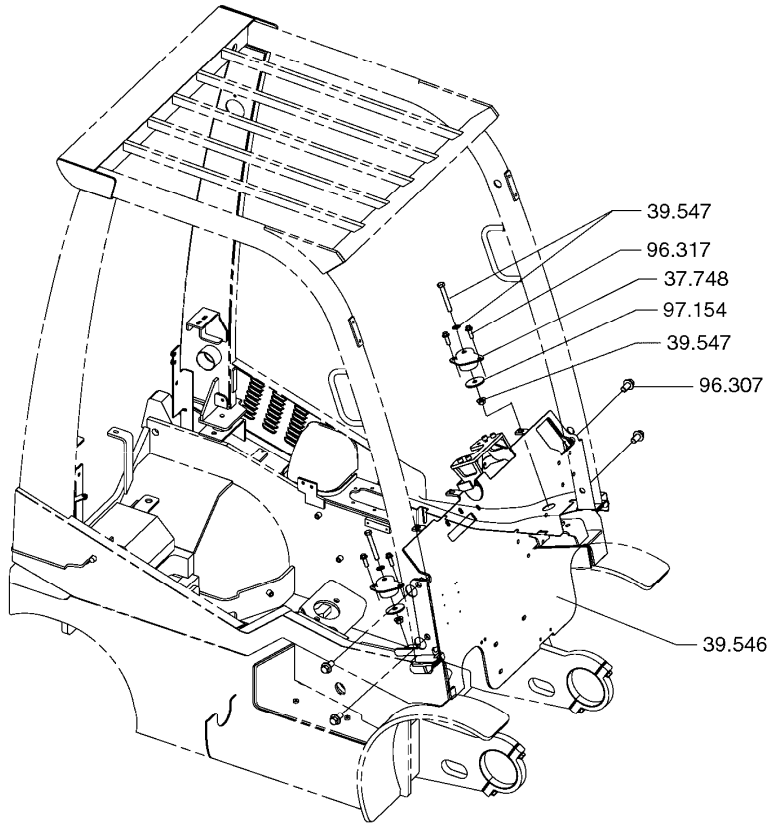

COWL MOUNTING **39-646**

37.748	DAMPENER, COWL VIBRATION 댐프너
39.546	COWL ASSEMBLY 카울
39.547	FASTENER, COWL ASSEMBLY 패스너
96.307	FASTENER, COWL PLATE 패스너
96.317	FASTENER, COWL PLATE SOUND SEAL 패스너
97.154	FASTENER, COWL DAMPENER MOUNTING 패스너

www.truck-freeworkshop.com/forklift/clark/

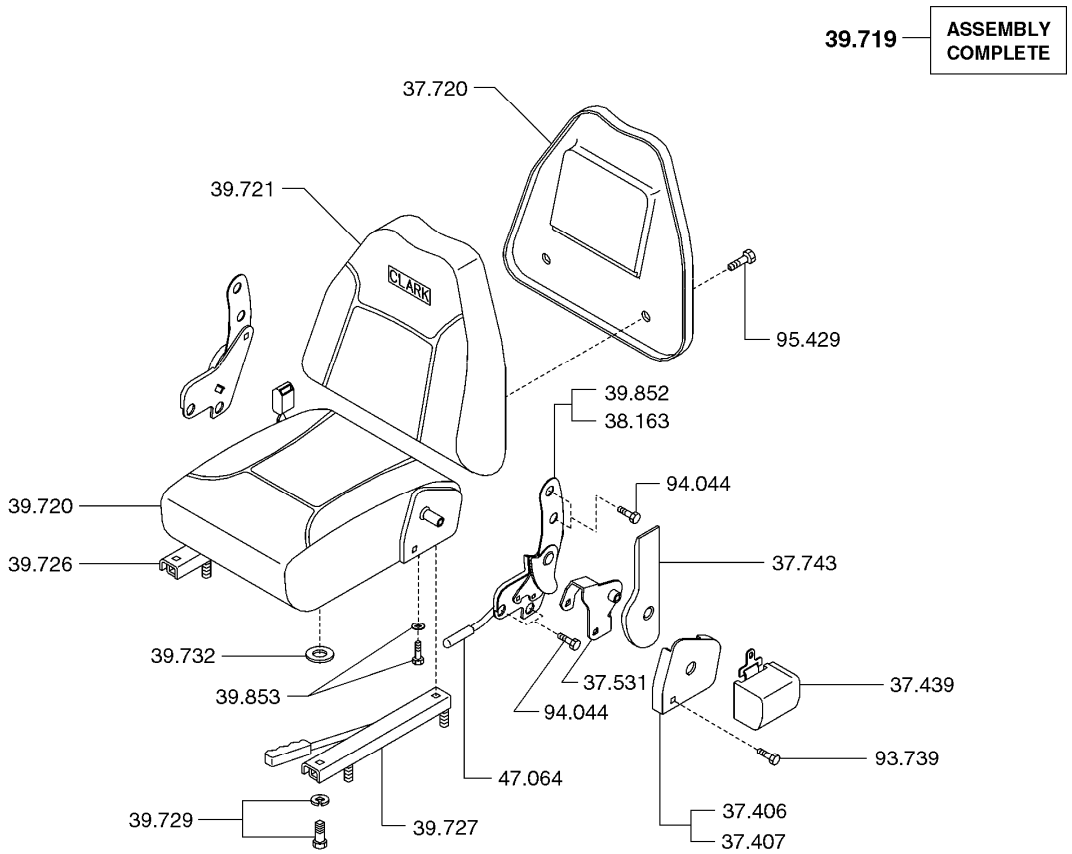

SEAT ASSEMBLY **39-661**

37.406 BRACKET, SEAT BACK REST COVER LH
브라켓

37.407 BRACKET, SEAT BACK REST COVER RH
브라켓

37.439 SAFETY BELT, SEAT
세이프티벨트

37.531 BRACKET, SEAT SAFETY BELT MOUNTING
브라켓

37.720 COVER, OPERATOR SEAT LATERAL RESTRAINT
커버

37.743 COVER, SEAT SUPPORT LATCH
커버

38.163 BRACKET, SEAT SUPPORT RH
브라켓

39.719 SEAT ASSEMBLY
시트

39.720 CUSHION, SEAT
쿠션

www.truck-freeworkshop.com/forklift/clark/

39.721	CUSHION, SEAT BACK REST 쿠션
39.726	ADJUSTOR, SEAT 어드져스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.732	SPACER, SEAT FRAME TO ADJUSTOR 스페이서
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
95.429	FASTENER, SEAT LATERAL RESTRAINT COVER 패스너

www.truck-freeworkshop.com/forklift/clark/

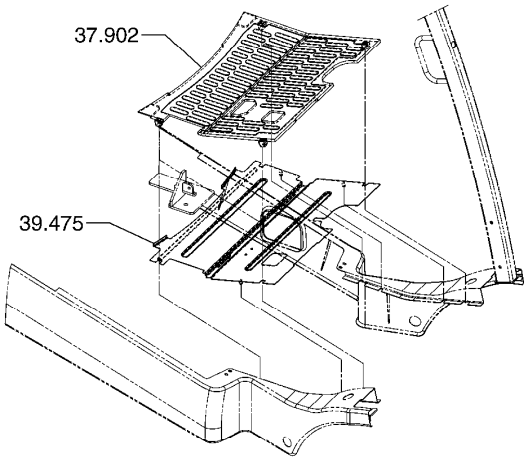

FOR CAB

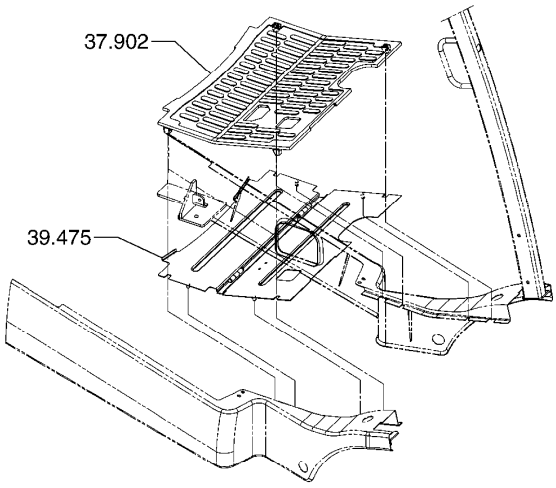

FOR OVERHEAD GUARD

FLOOR PLATE MOUNTING **39-674**

37.902	MAT, FLOORPLATE 매트
39.475	PLATE, FRONT FLOOR 플레이트

www.truck-freeworkshop.com/forklift/clark/

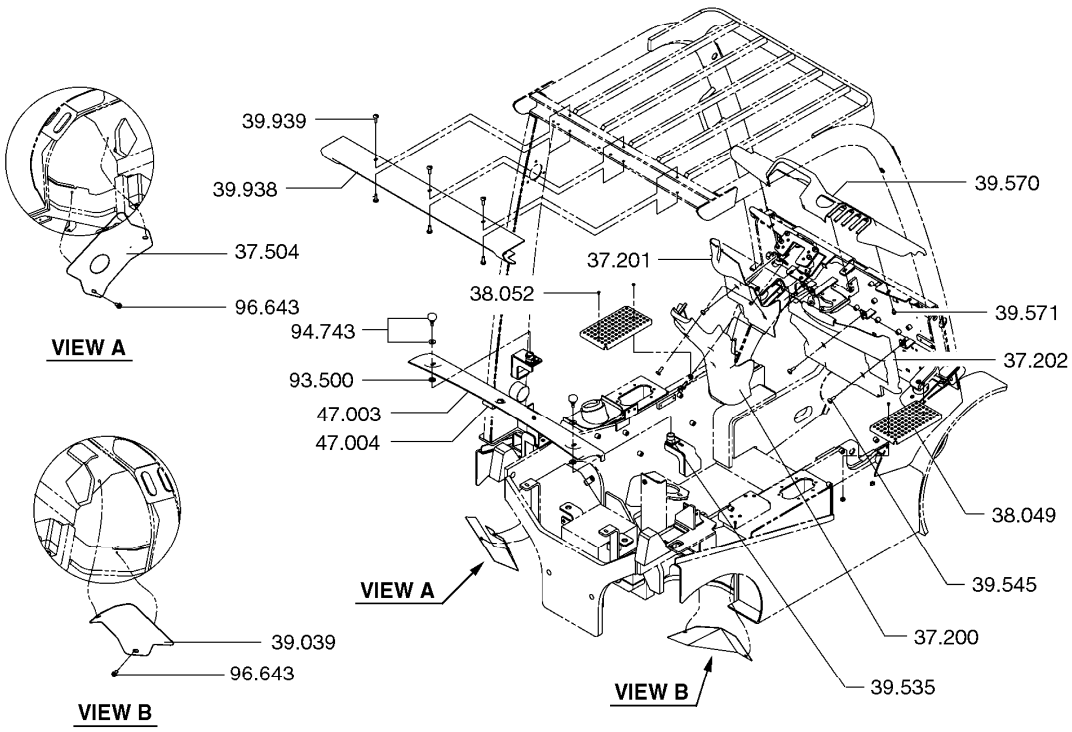

SHEET METAL & TRIM 39-784

37.200 PANEL, FRONT
판넬

37.201 PANEL, LH SIDE
판넬

37.202 PANEL, RH SIDE
판넬

37.504 SHIELD, FRAME SIDE COMPARTMENT
쉴드

38.049 STEP ASSEMBLY, RH
스텝

38.052 FASTENER, STEP FRONT
패스너

39.039 SHIELD, FRAME SIDE COMPARTMENT
쉴드

39.535 BRACKET, TOP HOOD MOUNTING
브라켓

39.545 FASTENER, COWL ACCESS HOLE COVER
패스너

www.truck-freeworkshop.com/forklift/clark/

39.570	COVER ASSEMBLY, DASH 커버
39.571	FASTENER, DASH COVER 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
47.003	COVER, RADIATOR 커버
47.004	SEAL, RADIATOR COVER 시일
93.500	NUT, TOP HOOD MOUNTING BRACKET FASTENER 너트
94.743	FASTENER, RADIATOR COVER TRIM 패스너
96.643	FASTENER, FRAME SIDE COMPARTMENT SHIELD 패스너

www.truck-freeworkshop.com/forklift/clark/

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

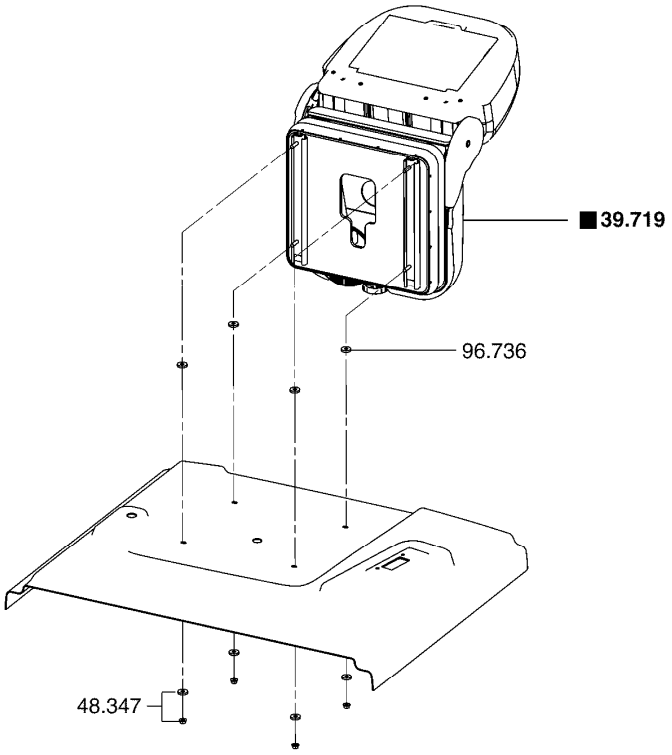

SEAT MOUNTING 39-829

39.719	SEAT ASSEMBLY 시트
48.347	FASTENER, SEAT ASSEMBLY 패스너
96.736	WASHER, SEAT ASSEMBLY FASTENER 와셔

www.truck-freeworkshop.com/forklift/clark/

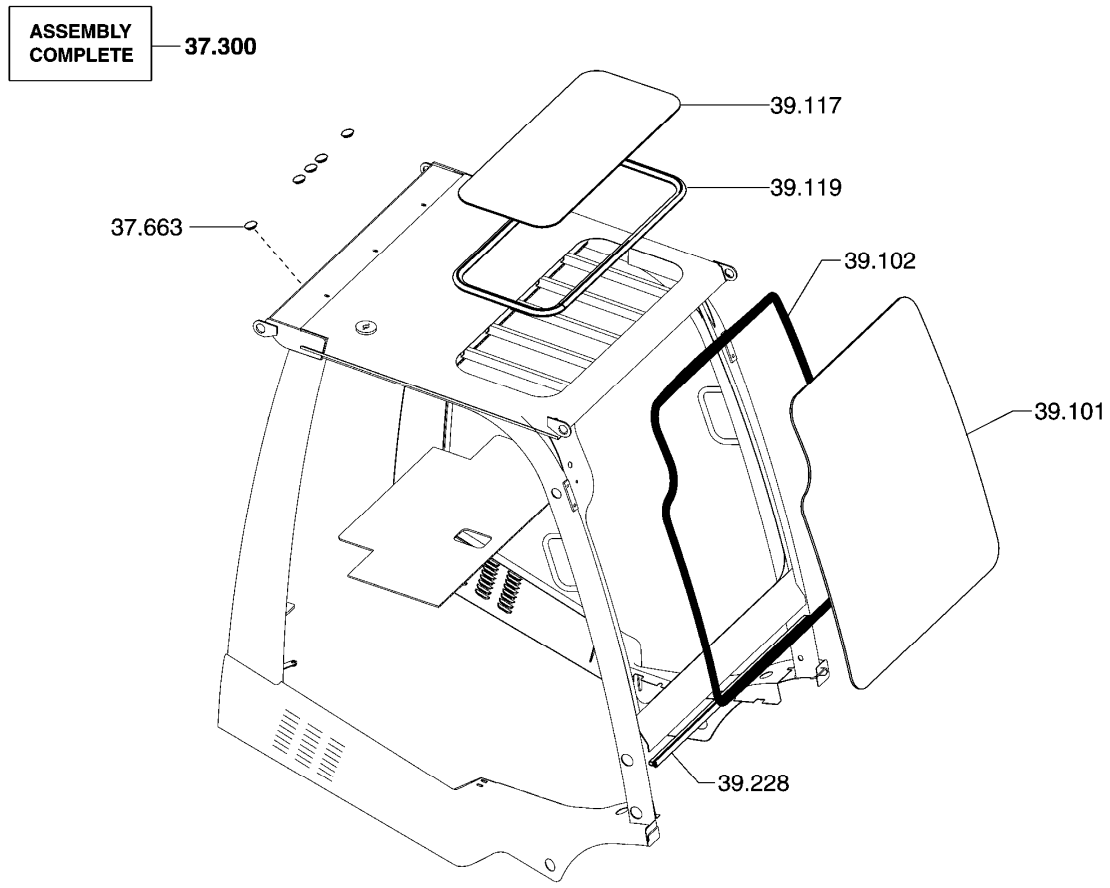

ENCLOSED CAB **39-831**

37.300	CAB ASSEMBLY 캐빈
37.663	PLUG, CAB FRAME 플러그
39.101	GLASS, WINDSHIELD 글래스
39.102	WEATHERSEAL, WINDSHIELD SETTING 웨더시일
39.117	ROOF SCREEN 루프스크린
39.119	SEAL STRIP, ROOF WINDOW 시일스트립
39.228	WEATHERSEAL, WINDSHIELD SETTING 웨더시일

www.truck-freeworkshop.com/forklift/clark/

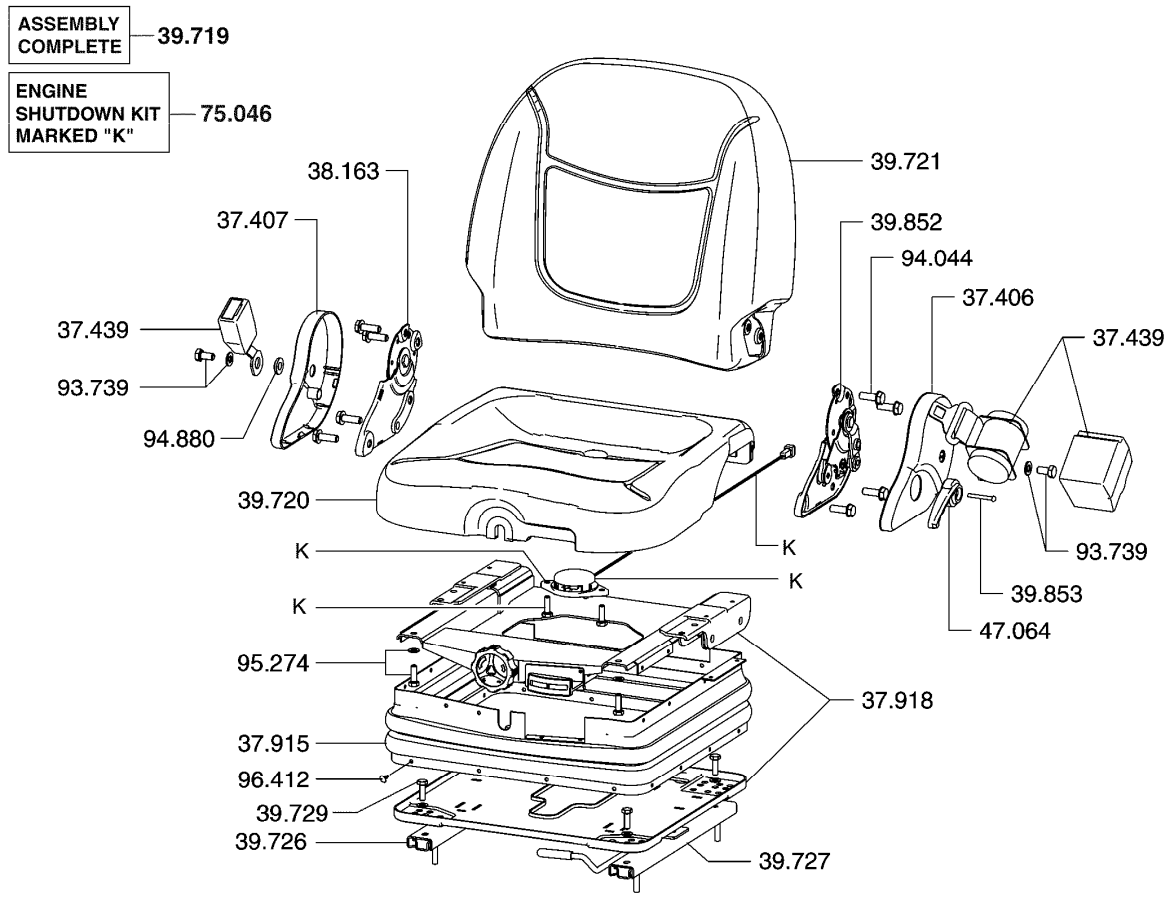

37.406 BRACKET, SEAT BACK REST COVER LH
브라켓

37.407 BRACKET, SEAT BACK REST COVER RH
브라켓

37.439 SAFETY BELT, SEAT
세이프티벨트

37.915 SUSPENSION COVER, SEAT SUSPENSION
서스펜션

37.918 SUSPENSION ASSEMBLY, SEAT
서스펜션

38.163 BRACKET, SEAT SUPPORT RH
브라켓

39.719 SEAT ASSEMBLY
시트

39.720 CUSHION, SEAT
쿠션

39.721 CUSHION, SEAT BACK REST
쿠션

www.truck-freeworkshop.com/forklift/clark/

39.726	ADJUSTOR, SEAT 어드져스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 킷
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.880	FASTENER, SEAT SUPPORT CATCH BRACKET 패스너
95.274	FASTENER, SEAT CUSHION SUSPENSION SUPPORT 패스너
96.412	FASTENER, SEAT SUSPENSION BACK SIDE COVER 패스너

www.truck-freeworkshop.com/forklift/clark/

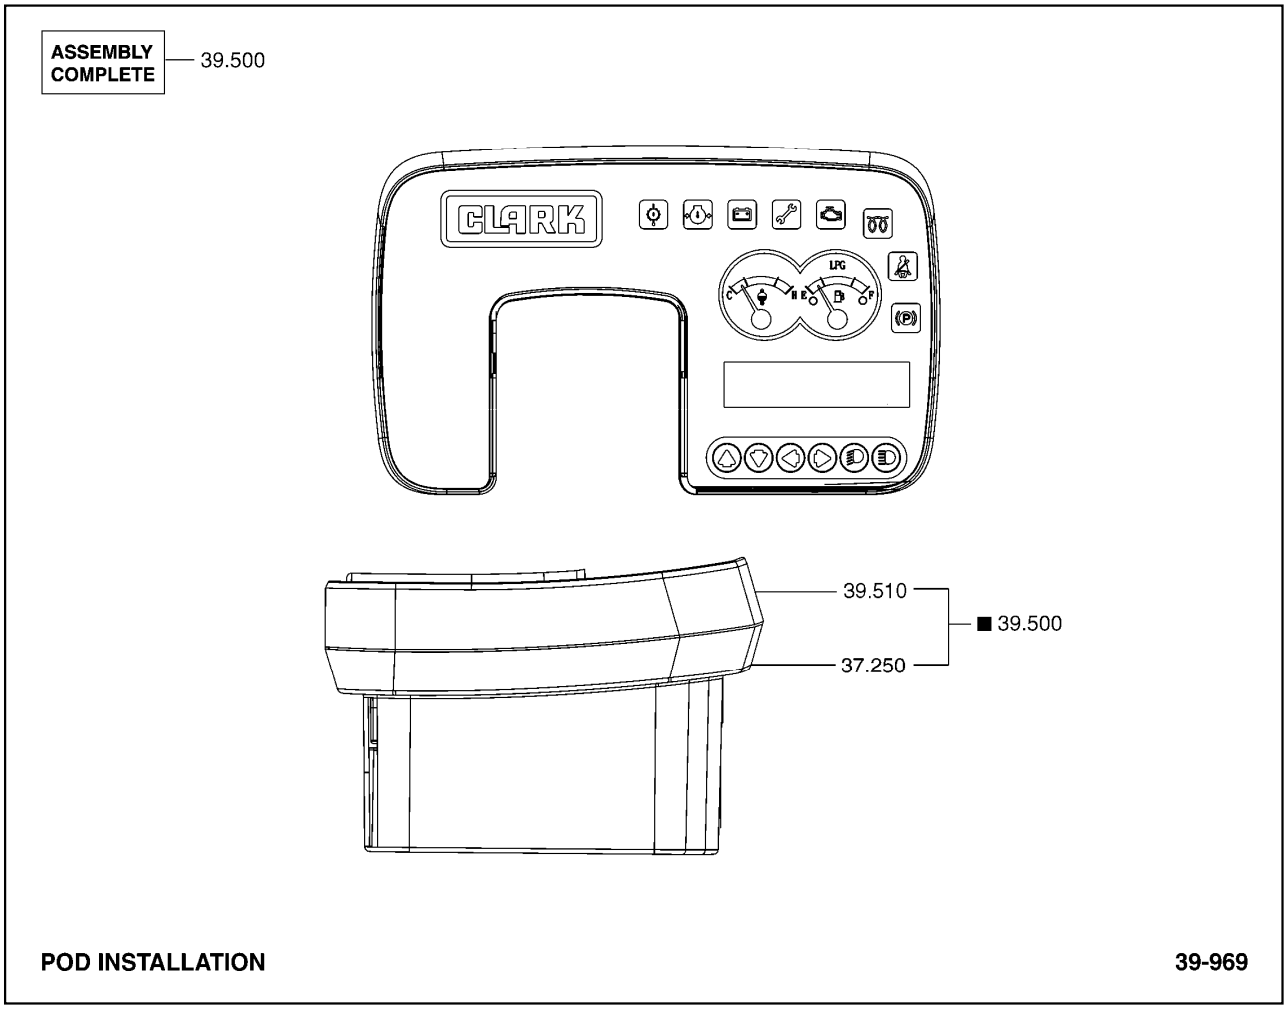

13.000	PANEL, INSTRUMENT CLUSTER 판넬
37.250	HOUSING, INSTRUMENT PANEL 하우징
39.510	HOUSING, INSTRUMENT PANEL 하우징

www.truck-freeworkshop.com/forklift/clark/

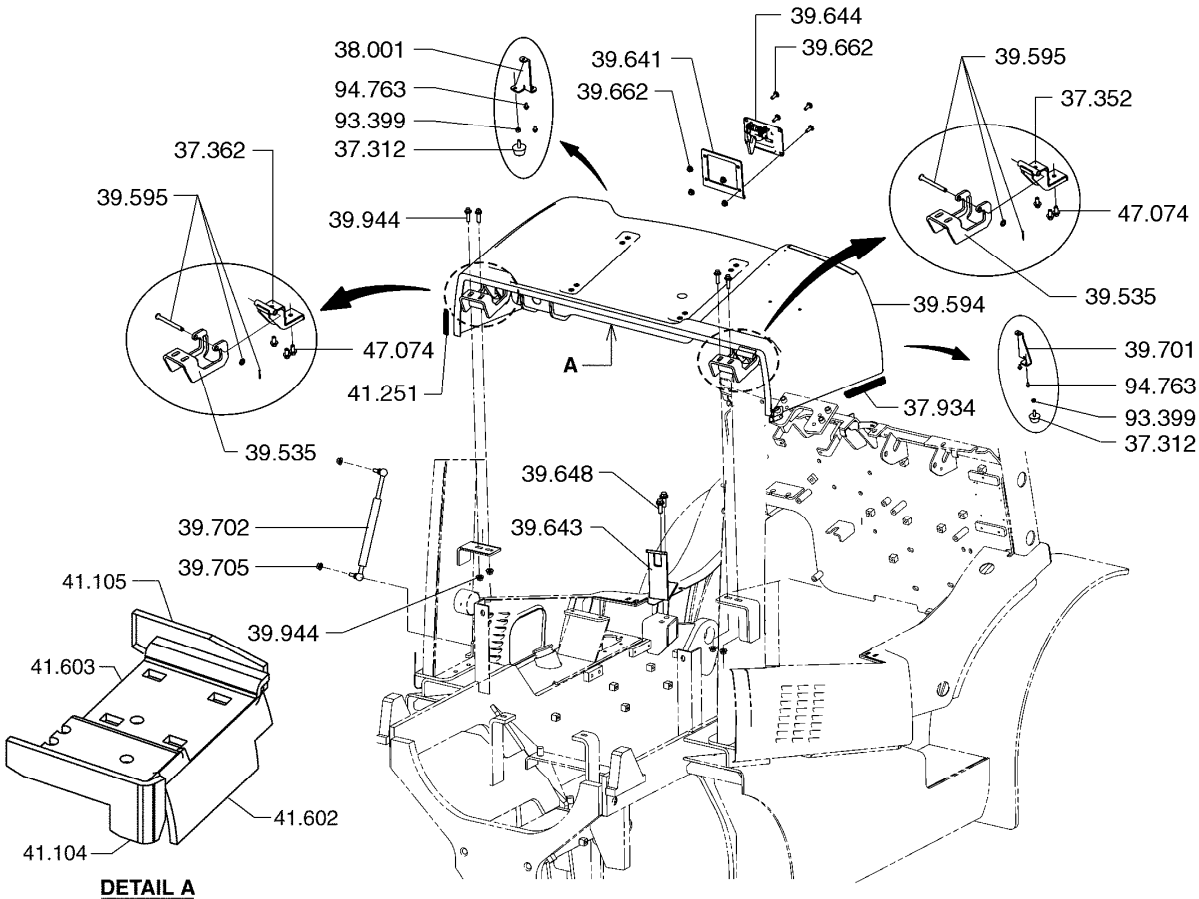

37.312 STOP, TOP HOOD
스톱

37.352 BRACKET, TOP HOOD SPRING (RH)
브라켓

37.362 BRACKET, TOP HOOD SPRING (LH)
브라켓

37.934 SEAL, HOOD ACCESS COVER
시일

38.001 BRACKET, HOOD SUPPORT
브라켓

39.535 BRACKET, TOP HOOD MOUNTING
브라켓

39.594 HOOD, TOP
후드

39.595 FASTENER, TOP HOOD
패스너

39.641 PLATE, TOP HOOD LATCH MOUNTING
플레이트

www.truck-freeworkshop.com/forklift/clark/

39.643	CATCH, TOP HOOD LATCH 캐치
39.644	LATCH, TOP HOOD 래치
39.648	FASTENER, TOP HOOD LATCH CATCH 패스너
39.662	FASTENER, TOP HOOD LATCH BRACKET 패스너
39.701	STOP, HOOD PROP 스톱
39.702	PROP, HOOD 프롭
39.705	FASTENER, HOOD PROP 패스너
39.944	FASTENER, OVERHEAD GUARD BRACKET 패스너
41.104	SOUND SEAL, RH SIDE HOOD 사운드시일
41.105	SOUND SEAL, LH SIDE HOOD 사운드시일
41.251	SOUND SEAL, TOP HOOD 사운드시일
41.602	SOUND SEAL, ENGINE HOOD 사운드시일
41.603	SOUND SEAL, ENGINE HOOD 사운드시일
47.074	FASTENER, TOP HOOD SPRING BRACKET 패스너
93.399	FASTENER, TOP HOOD STOP 패스너
94.763	FASTENER, HOOD SUPPORT 패스너

www.truck-freeworkshop.com/forklift/clark/

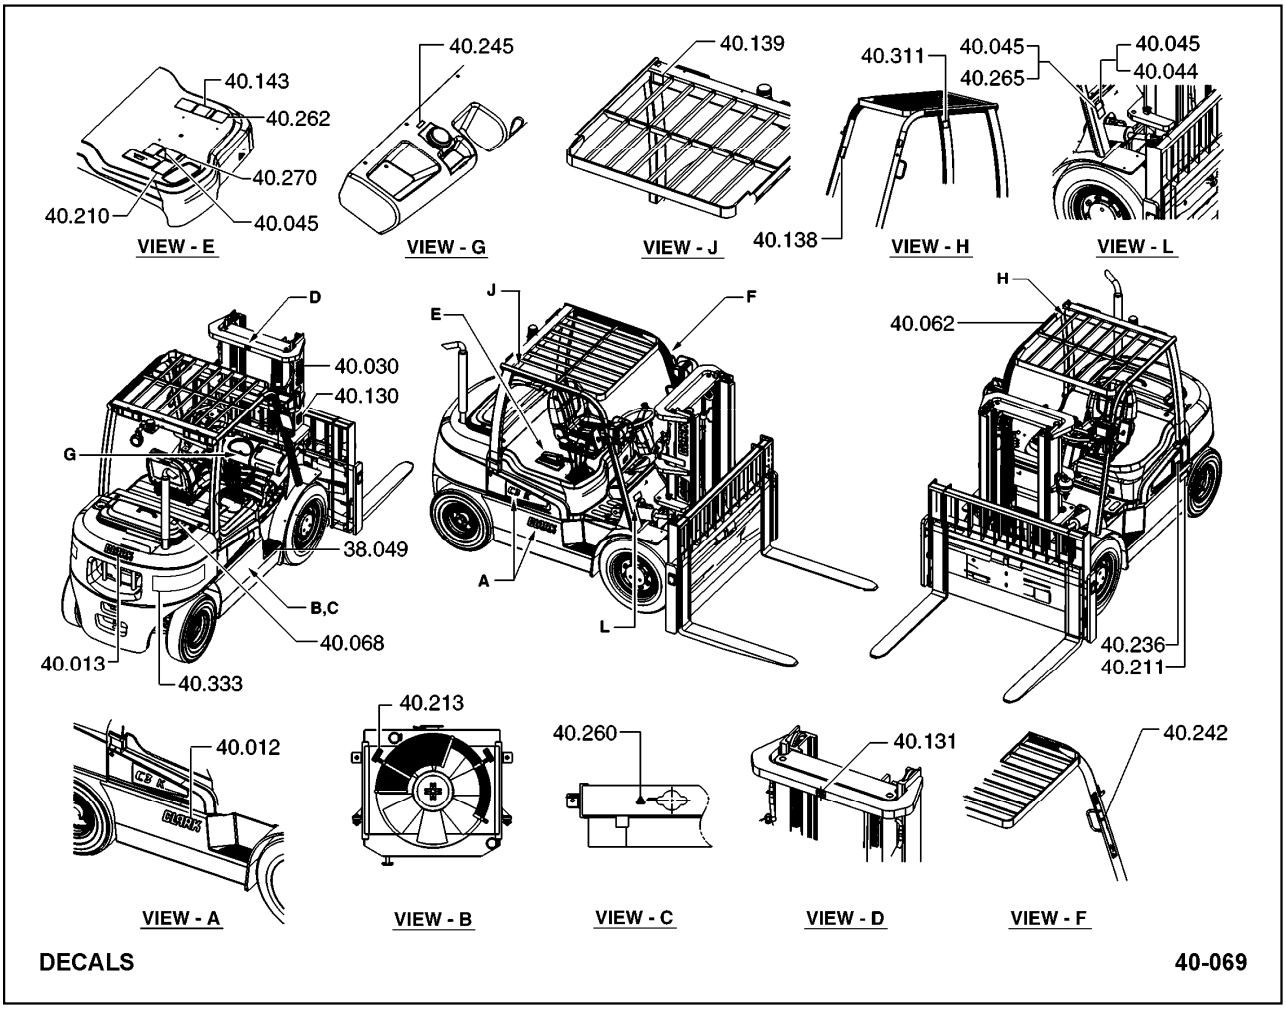

40.000	PLATE, CAPACITY & SERIAL NUMBER 플레이트	40.158	DECAL, WARNING INDICATOR 데칼
40.001	FASTENER, CAPACITY & SERIAL PLATE 패스너	40.206	DECAL, SLING EYE 데칼
40.010	DECAL, CLARK 데칼	40.236	DECAL, FUEL 데칼
40.012	DECAL, CLARK LOGO-SMALL 데칼	40.240	DECAL, FUEL WARNING 데칼
40.024	PLATE, UNDERWRITERS LABEL 플레이트	40.241	DECAL, BRAKE OIL SPEC 데칼
40.025	FASTENER, UNDERWRITERS LABEL PLATE 패스너	40.247	DECAL, LPG FUEL CYL REPLACEMENT PROCEDURE 데칼
40.030	DECAL, CLARK VERTICAL 데칼	40.248	DECAL, SERVICE CHART 데칼
40.062	DECAL, DRIVERS CAUTION 플레J鉗	40.260	DECAL, HOT SURFACE WARNING 데칼
40.068	DECAL, HYD-SYSTEM OIL 데칼	40.271	DECAL, LP GAS 데칼
40.089	PLATE, SAFETY INSTRUCTION 플레이트	40.279	DECAL, STARTING PROCEDURE 데칼
40.130	LEGEND, SAFETY 범례	40.310	DECAL, EXHAUST GAS 데칼
40.131	LEGEND, SAFETY 범례	40.327	DECAL, FAN WARNING 데칼
40.134	DECAL, OPERATORS MANUAL LOCATION 데칼	40.328	DECAL, WHEEL NUT WARNING 데칼
40.138	DECAL, SAFETY 데칼	40.333	REFLECTOR, COUNTERWEIGHT *
40.143	DECAL, OPERATORS INSTRUCTIONS 데칼	40.346	DECAL, OVERHEAD GUARD DROP TEST *

www.truck-freeworkshop.com/forklift/clark/

40.349 PLATE, LESS LP TANK
*

40.350 FASTENER, PLATE LESS LP TANK
*

40.352 DECAL, USE LOW SULFUR FUEL
*

40.353 DECAL, AUTHORIZED REPRESENTATIVE
*

www.truck-freeworkshop.com/forklift/clark/

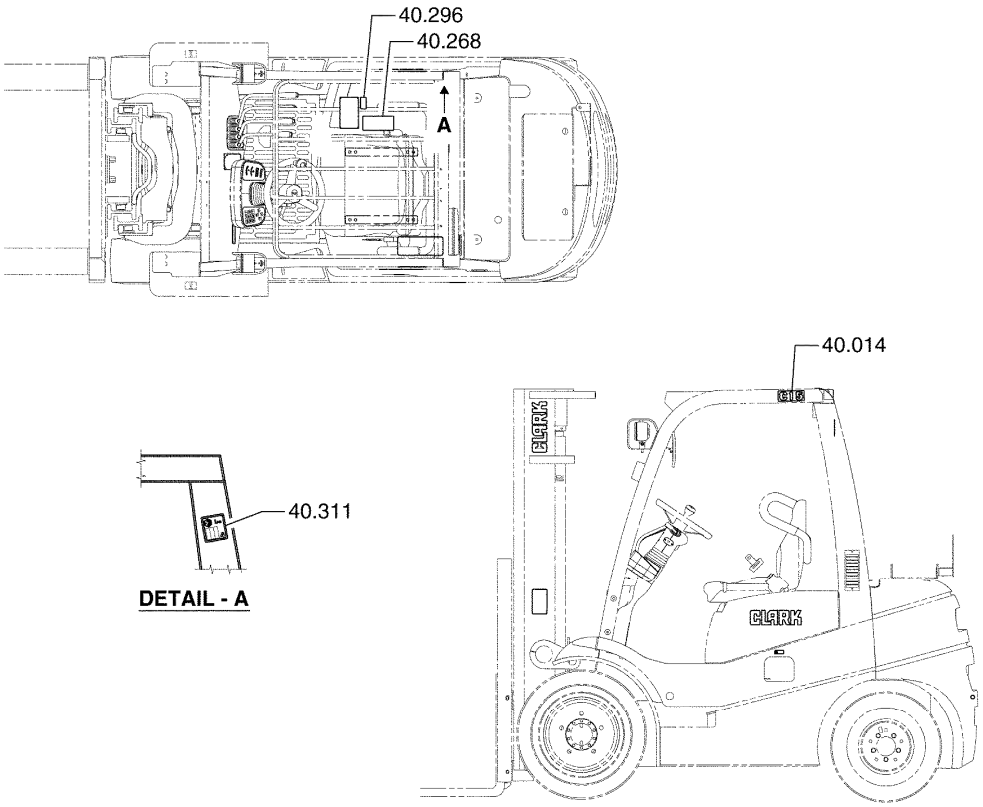

MODEL & SPECIFICATION DECALS **40-285**

40.014 DECAL, MODEL NAME
데칼

40.268 DECAL, SPEC
데칼

40.296 DECAL, TIRE PRESSURE
데칼

40.311 DECAL, SOUND POWER LEVEL
데칼

www.truck-freeworkshop.com/forklift/clark/

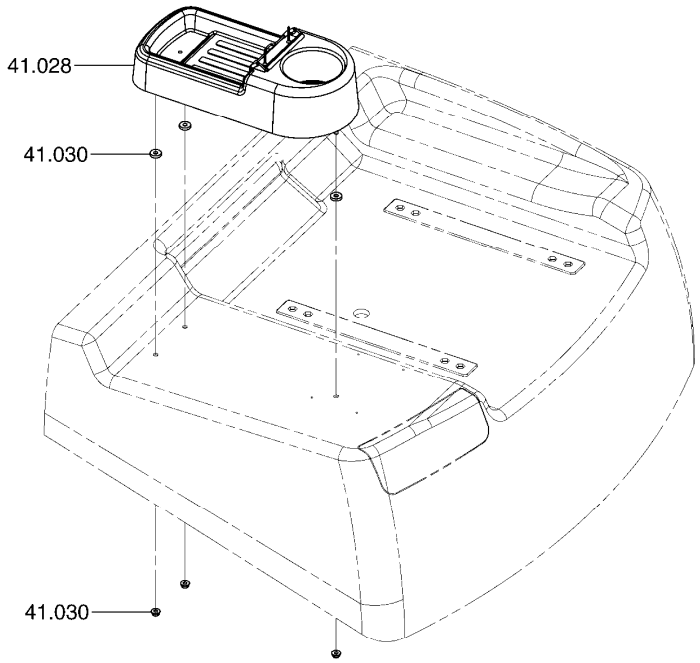

STORAGE CONSOLE MOUNTING **41-008**

41.028 CONSOLE, OPERATOR STORAGE CONSOLE
콘솔

41.030 FASTENER, STORAGE CONSOLE
패스너

www.truck-freeworkshop.com/forklift/clark/

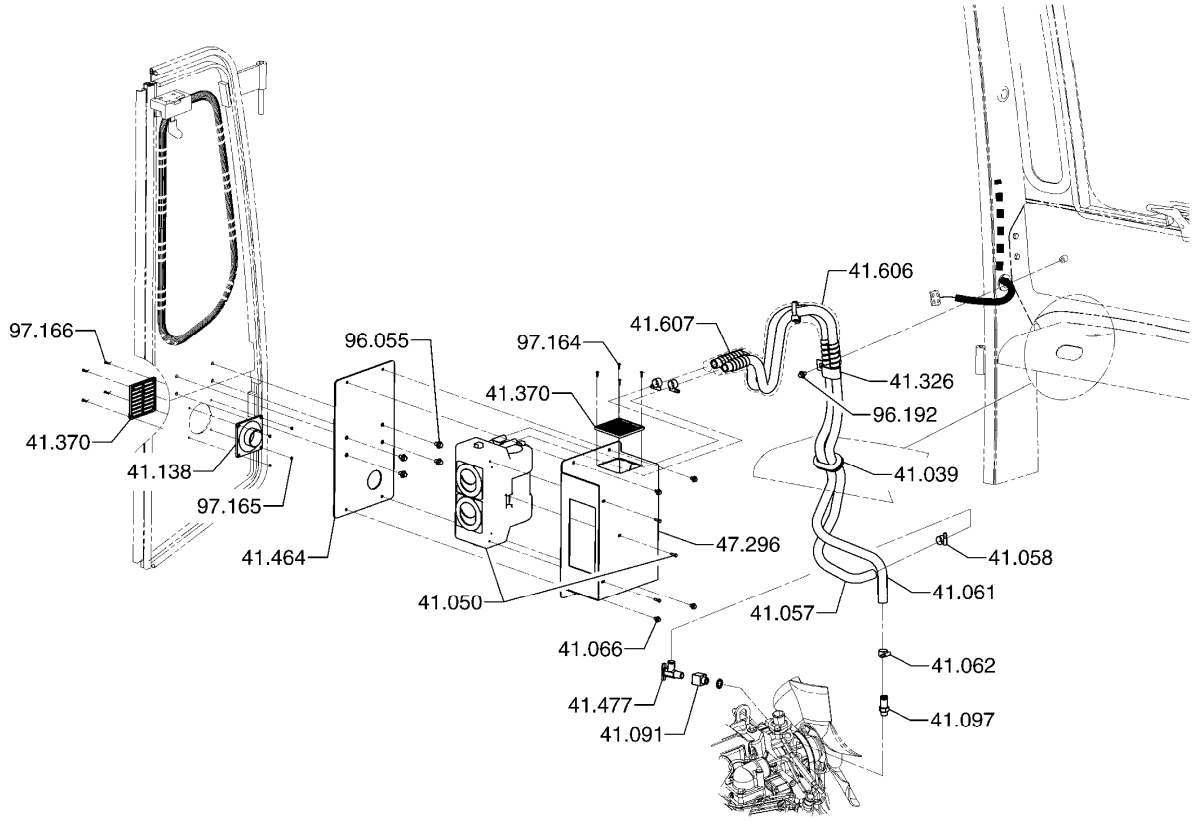

HEATER INSTALLATION **41-041**

41.039 GROMMET, HEATER LINE
그로멧

41.050 HEATER ASSEMBLY
히터

41.057 LINE, HEATER INLET
라인

41.058 CLAMP, HEATER INLET LINE
클램프

41.061 LINE, HEATER OUTLET
라인

41.062 CLAMP, HEATER OUTLET LINE
클램프

41.066 FASTENER, HEATER MOUNTING BRACKET
패스너

41.091 FITTING, HEATER INLET LINE ENGINE
피팅

41.097 FITTING, HEATER OUTLET LINE
피팅

www.truck-freeworkshop.com/forklift/clark/

41.138	ADAPTOR, HEATER AIR INTAKE LINE 어댑터
41.326	CLAMP, HEATER HOSE PROTECTOR 클램프
41.370	SCREEN, HEATER AIR INTAKE 스크린
41.464	BRACKET, HEATER 브라켓
41.477	VALVE, HEATER LINE 밸브
41.606	SLEEVE, HEATER HOSE *
41.607	GUARD, HEATER HOSE *
47.296	COVER ASSEMBLY, HEATER 커버
96.055	FASTENER, HEATER MOUNTING BRACKET 패스너
96.192	FASTENER, HEATER INLET LINE CLAMP 패스너
97.164	FASTENER, HEATER AIR INTAKE SCREEN *
97.165	FASTENER, HEATER AIR INTAKE LINE ADAPTOR *
97.166	FASTENER, HEATER AIR INTAKE SCREEN *

www.truck-freeworkshop.com/forklift/clark/

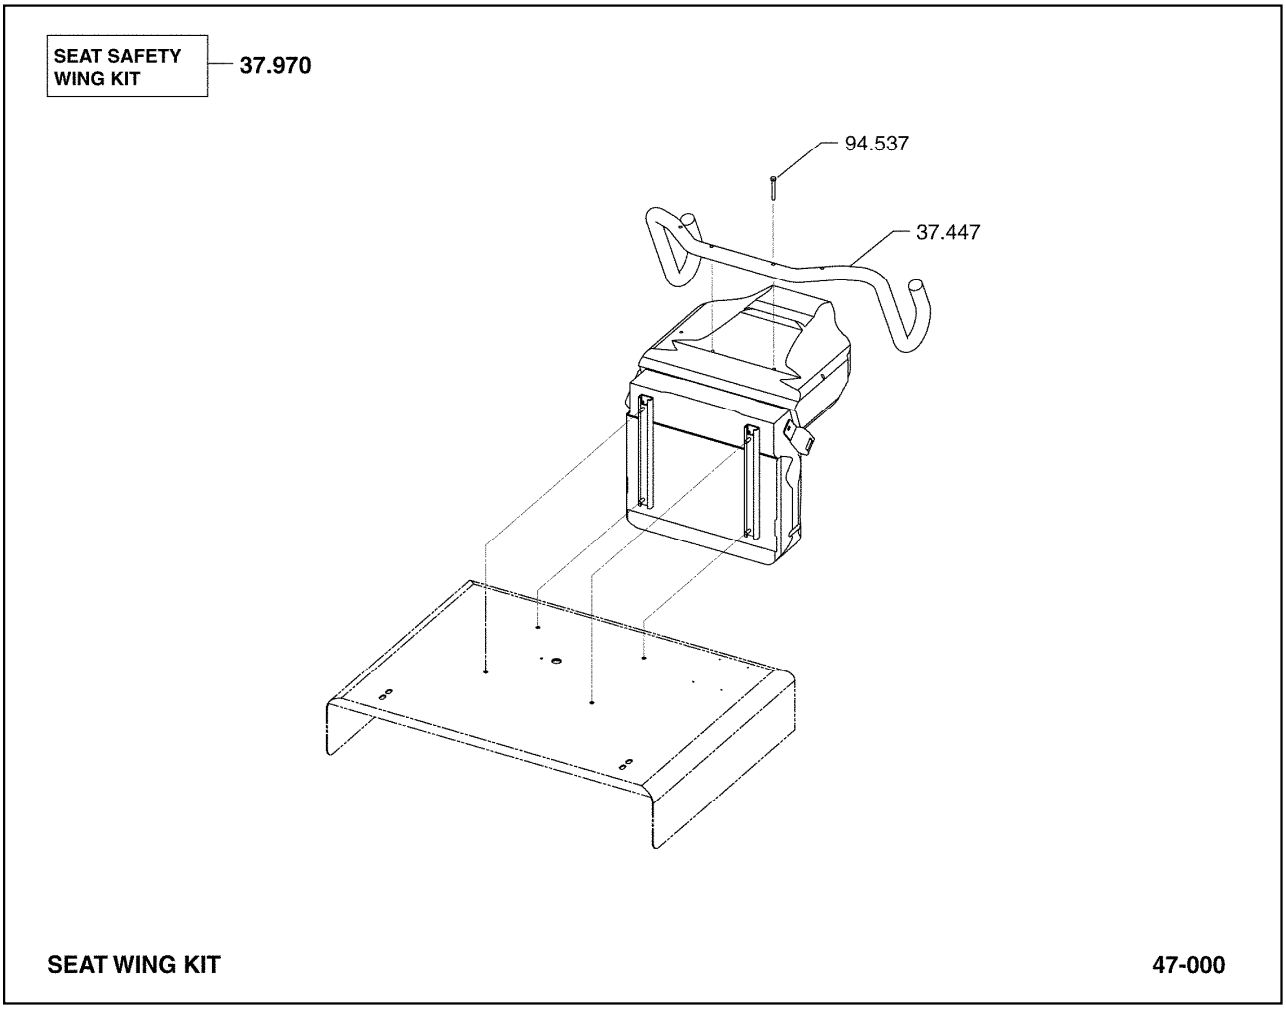

37.447	RESTRAINT, OPERATOR SEAT LATERAL 레스트레인트
37.970	KIT, SEAT SAFETY 킷
94.537	FASTENER, OPERATOR SEAT LATERAL RESTRAINT 패스너

www.truck-freeworkshop.com/forklift/clark/

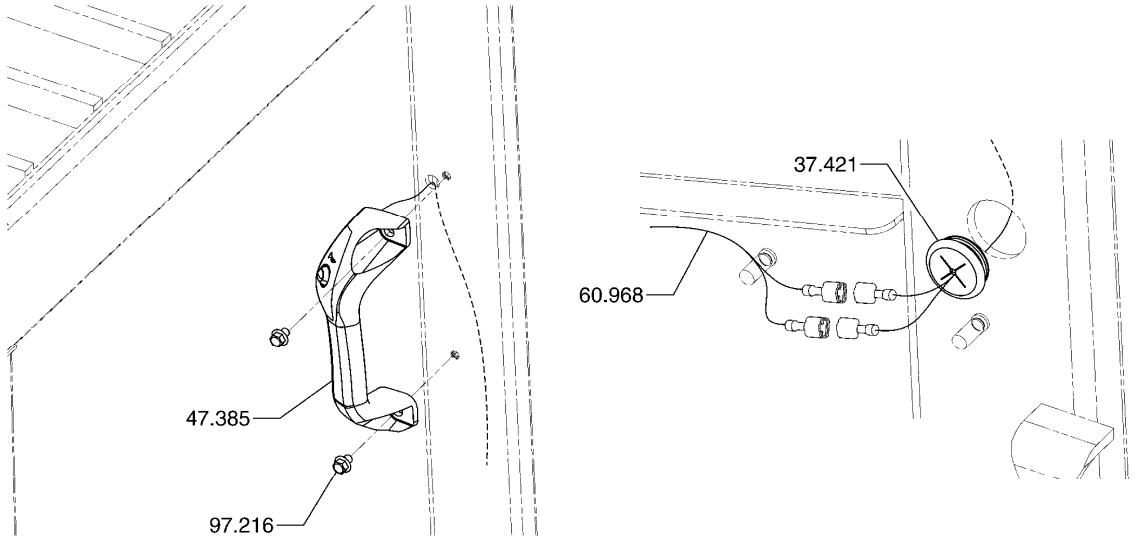

REAR HAND GRIP MOUNTING **47-005**

37.421 GROMMET, OVERHEAD GUARD REAR SUPPORT PIVOT
그로멧

47.385 GRIP, OVERHEAD GUARD REAR HAND
*

60.968 WIRE, OVERHEAD GUARD REAR HAND GRIP SWITCH
*

97.216 FASTENER, OVERHEAD GUARD REAR HAND GRIP
*

www.truck-freeworkshop.com/forklift/clark/

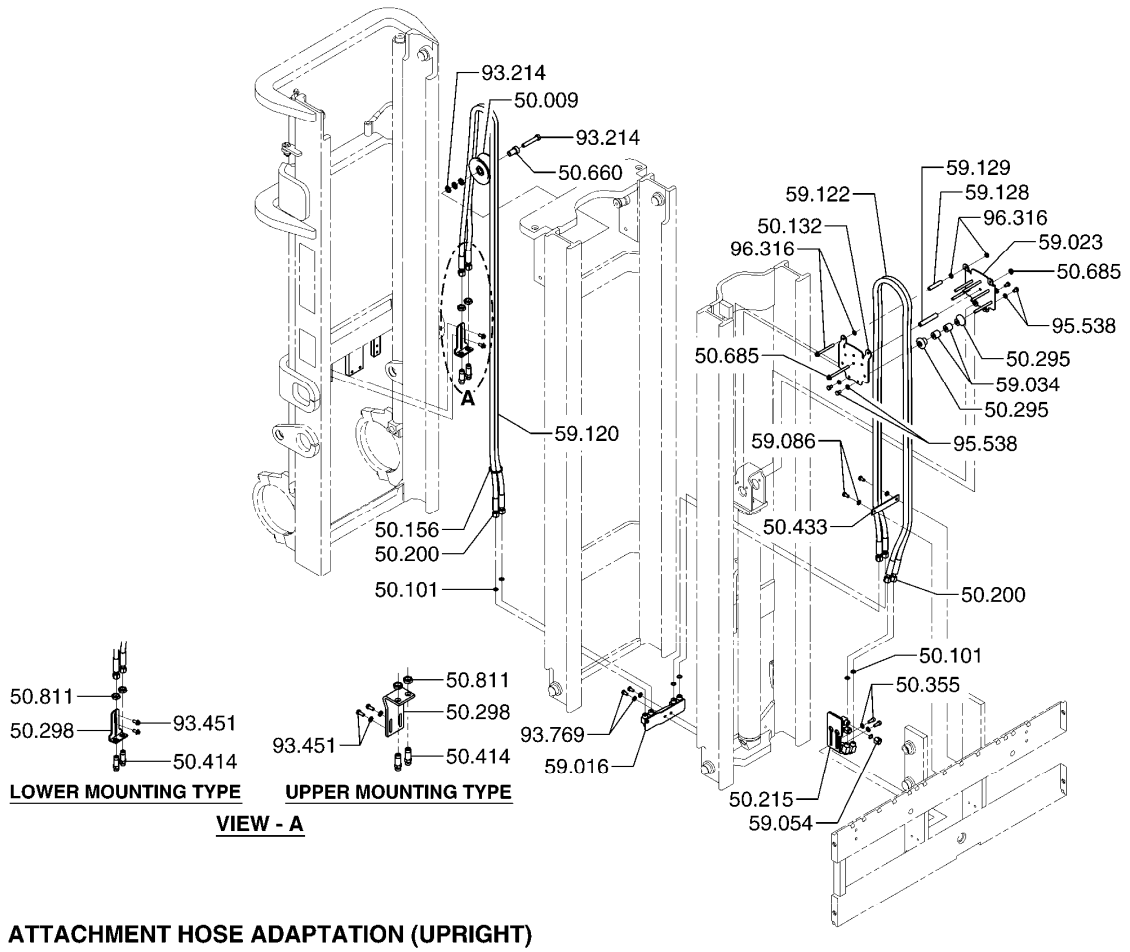

ATTACHMENT HOSE ADAPTATION (UPRIGHT) **50-780**

50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 시일
50.132	BRACKET, DEVICE HOSE REEL 브라켓
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.295	ROLLER, DEVICE HOSE UPPER 롤러
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너

www.truck-freeworkshop.com/forklift/clark/

50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓
50.660	BEARING, DEVICE HOSE LOWER SHEAVE 베어링
50.685	FASTENER, DEVICE HOSE REEL BASE 패스너
50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 연결블록
59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라J
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
59.128	TUBE, DEVICE HOSE REEL BRACKET *
59.129	TUBE, DEVICE HOSE REEL BRACKET *
93.214	FASTENER, DEVICE HOSE SHEAVE PIVOT 패스너
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너
96.316	FASTENER, DEVICE HOSE REEL 패스너

www.truck-freeworkshop.com/forklift/clark/

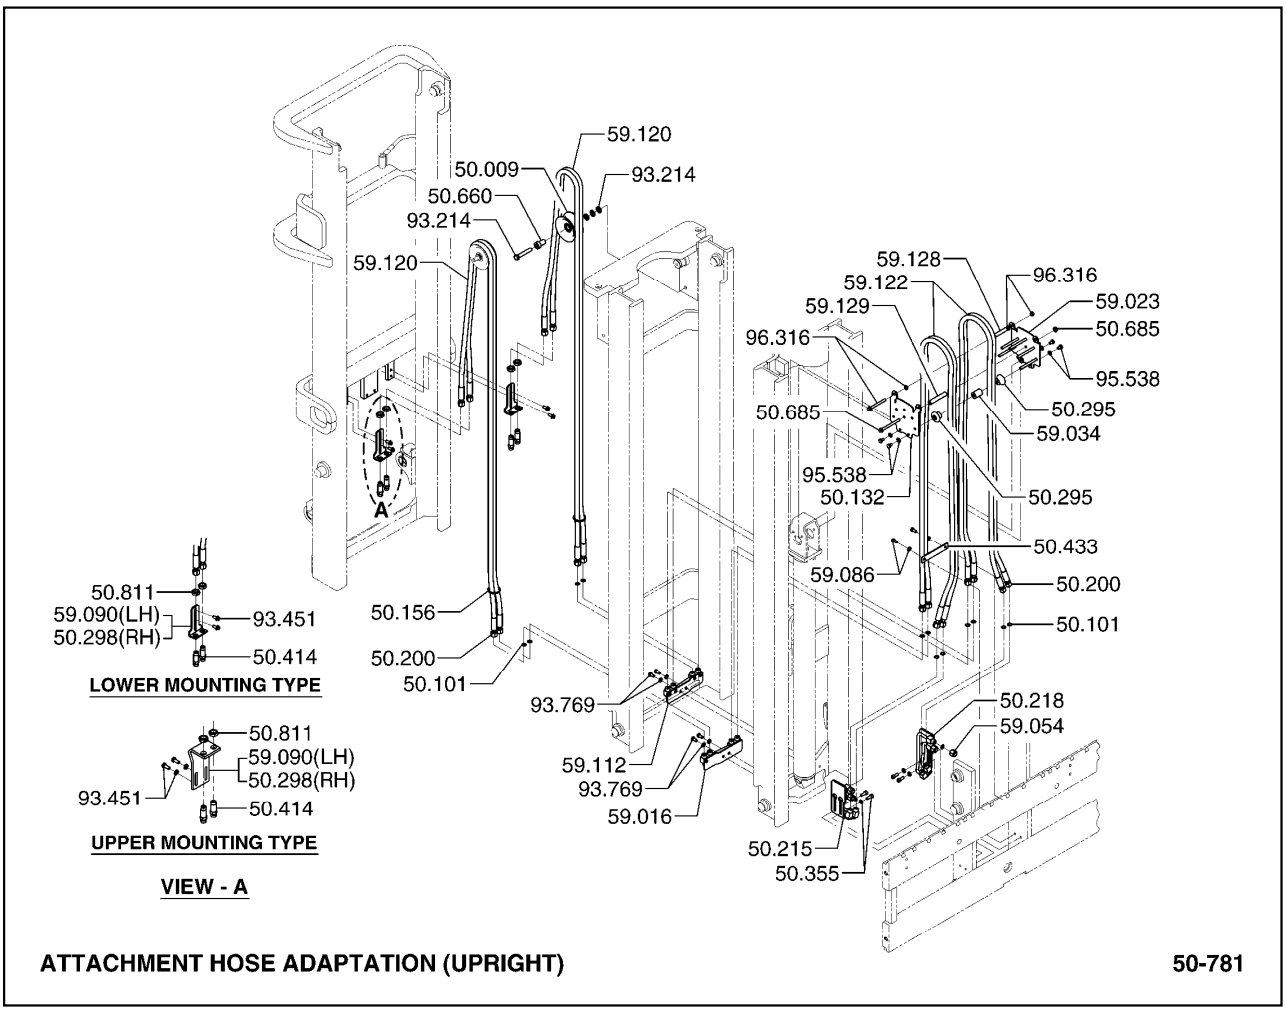

50.009	SHEAVE, DEVICE HOSE LOWER 쉬브	59.016	JUNCTION BLOCK, DEVICE HOSE 연결블록
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 시일	59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
50.132	BRACKET, DEVICE HOSE REEL 브라켓	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.156	CLIP, DEVICE HOSE 클립	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.200	COUPLING, DEVICE HOSE 커플링	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	59.112	JUNCTION BLOCK, DEVICE HOSE 연결블록
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라J
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.128	TUBE, DEVICE HOSE REEL BRACKET *
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.129	TUBE, DEVICE HOSE REEL BRACKET *
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	93.214	FASTENER, DEVICE HOSE SHEAVE PIVOT 패스너
50.660	BEARING, DEVICE HOSE LOWER SHEAVE 베어링	93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
50.685	FASTENER, DEVICE HOSE REEL BASE 패스너	93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
50.811	NUT, DEVICE HOSE FITTING 너트	95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너

www.truck-freeworkshop.com/forklift/clark/

96.316 FASTENER, DEVICE HOSE REEL
패스너

www.truck-freeworkshop.com/forklift/clark/

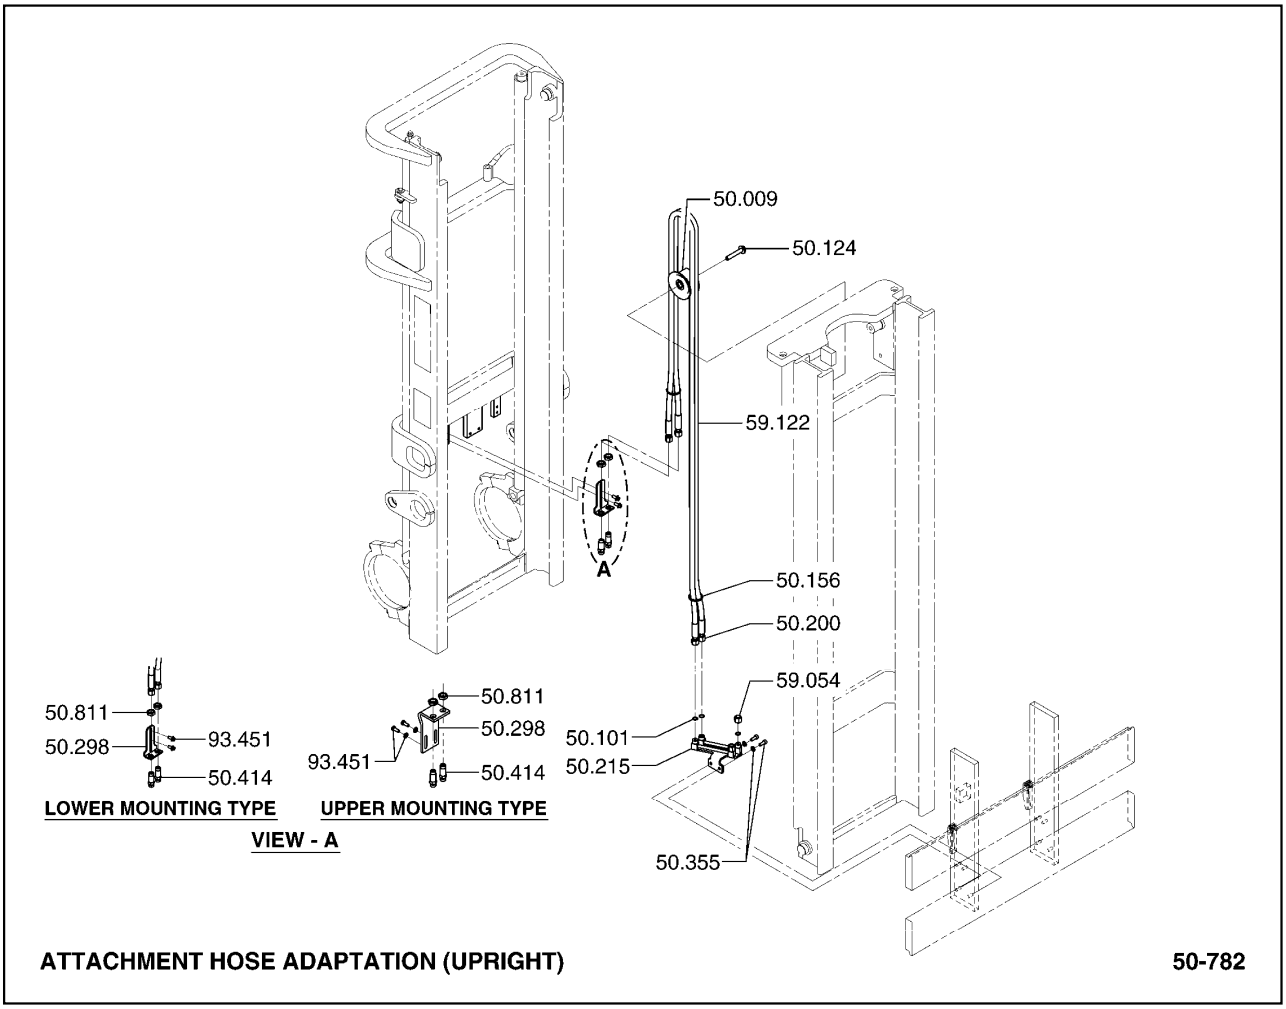

50.009 SHEAVE, DEVICE HOSE LOWER
쉬브

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
시일

50.124 PIVOT, DEVICE HOSE LOWER RH SHEAVE
피봇

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓

50.355 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너

50.414 FITTING, DEVICE HOSE CONNECTOR
피팅

www.truck-freeworkshop.com/forklift/clark/

50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

www.truck-freeworkshop.com/forklift/clark/

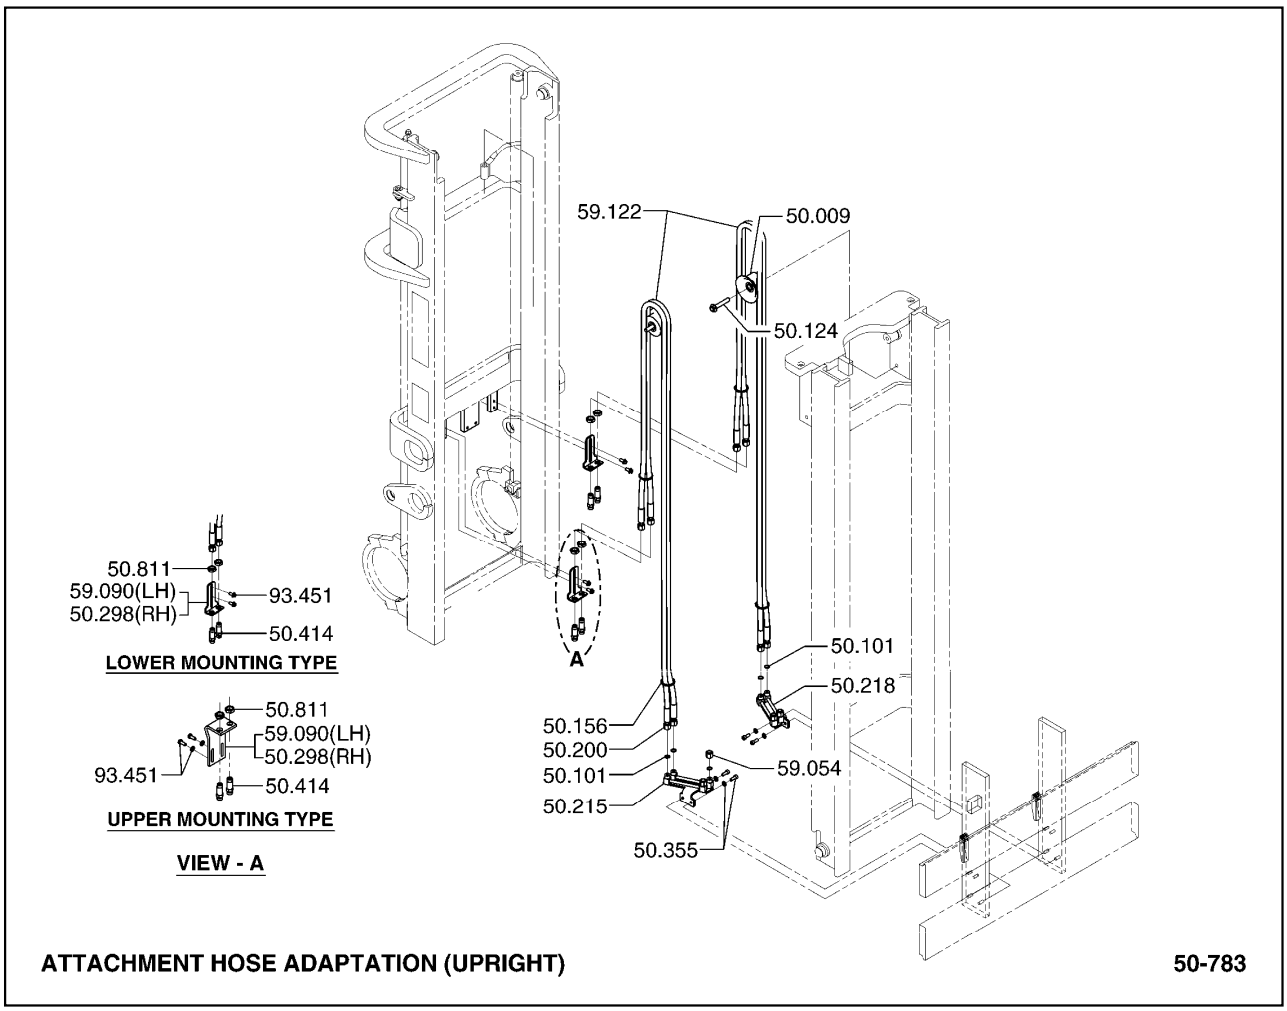

50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 시일
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피봇
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너

www.truck-freeworkshop.com/forklift/clark/

50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

www.truck-freeworkshop.com/forklift/clark/

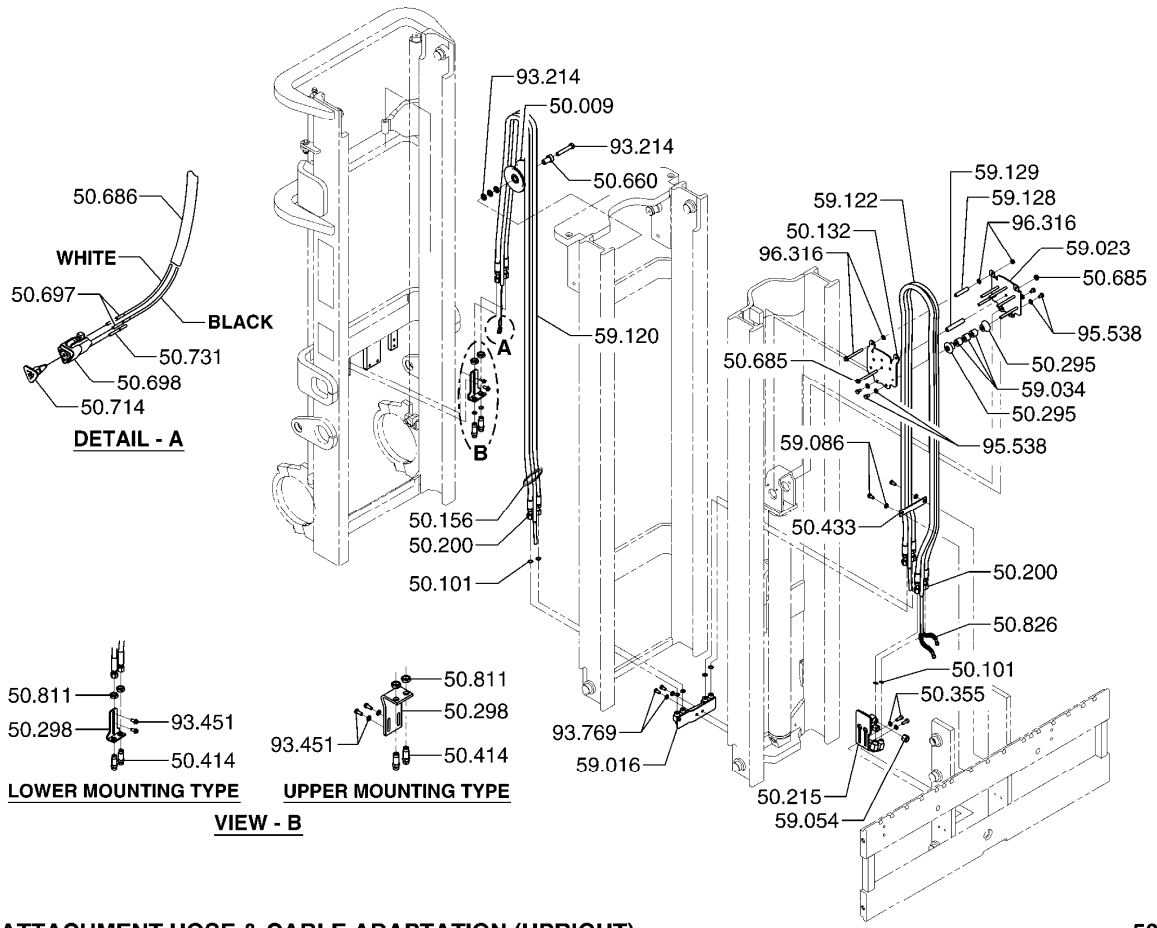

50.009	SHEAVE, DEVICE HOSE LOWER 쉬브	50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 시일	50.714	LOCK, DEVICE CABLE CONNECTOR *
50.132	BRACKET, DEVICE HOSE REEL 브라켓	50.731	PLUG, DEVICE CABLE CONNECTOR *
50.156	CLIP, DEVICE HOSE 클립	50.811	NUT, DEVICE HOSE FITTING 너트
50.200	COUPLING, DEVICE HOSE 커플링	50.826	TERMINAL, DEVICE CABLE 터미널
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	59.016	JUNCTION BLOCK, DEVICE HOSE 연결블록
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라J
50.660	BEARING, DEVICE HOSE LOWER SHEAVE 베어링	59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
50.685	FASTENER, DEVICE HOSE REEL BASE 패스너	59.128	TUBE, DEVICE HOSE REEL BRACKET *
50.686	WIRE, DEVICE 와이어	59.129	TUBE, DEVICE HOSE REEL BRACKET *
50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터	93.214	FASTENER, DEVICE HOSE SHEAVE PIVOT 패스너

www.truck-freeworkshop.com/forklift/clark/

93.451 FASTENER, DEVICE HOSE TERMINAL BRACKET
패스너

93.769 FASTENER, DEVICE LINE JUNCTION BLOCK
패스너

95.538 FASTENER, DEVICE HOSE REEL BRACKET
패스너

96.316 FASTENER, DEVICE HOSE REEL
패스너

www.truck-freeworkshop.com/forklift/clark/

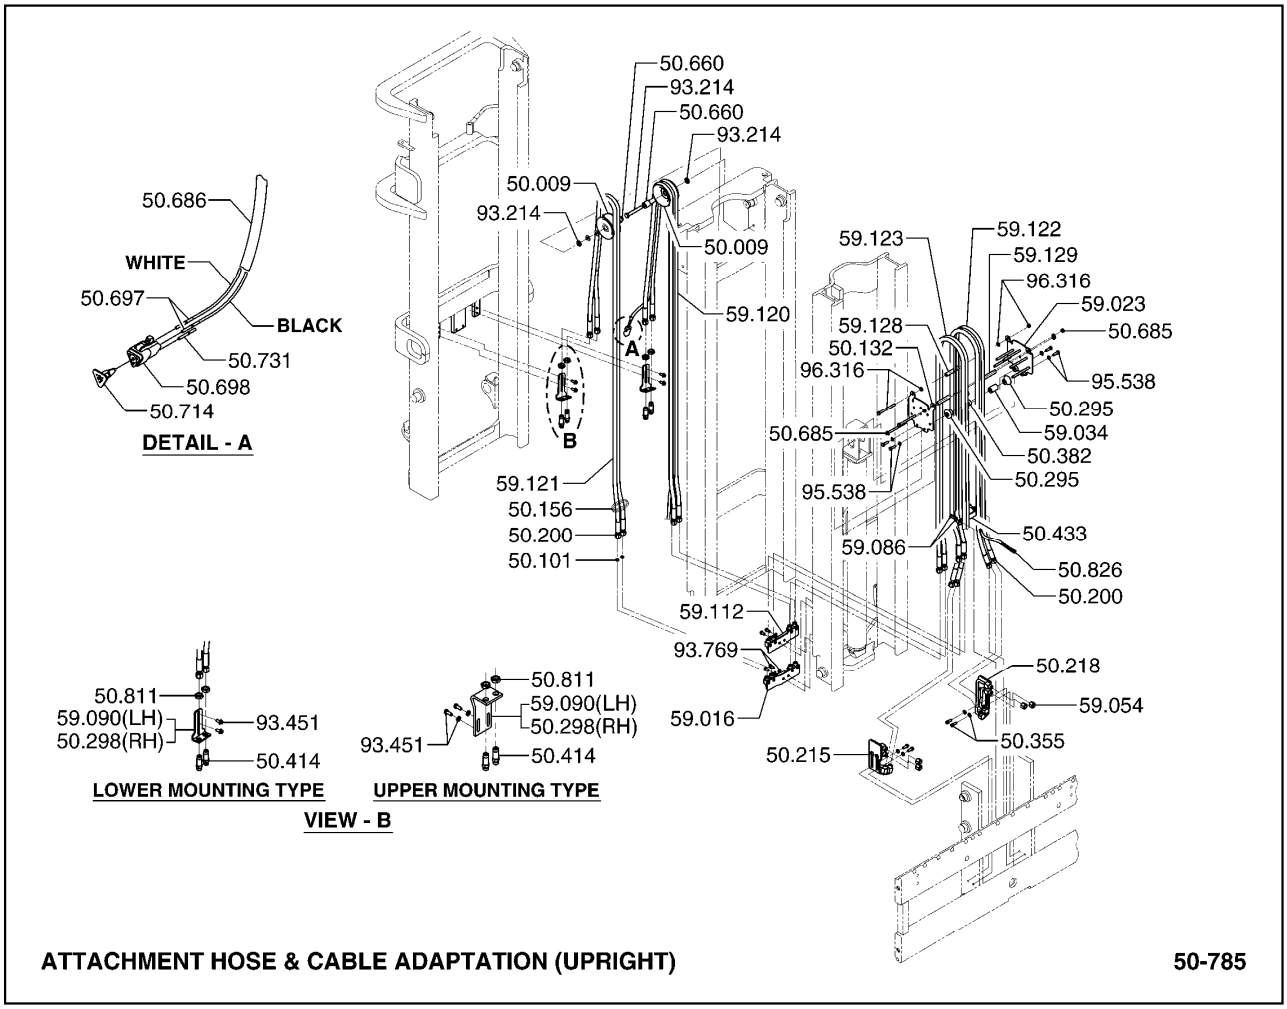

50.009	SHEAVE, DEVICE HOSE LOWER 쉬브	50.686	WIRE, DEVICE 와이어
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 시일	50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.132	BRACKET, DEVICE HOSE REEL 브라켓	50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.156	CLIP, DEVICE HOSE 클립	50.714	LOCK, DEVICE CABLE CONNECTOR *
50.200	COUPLING, DEVICE HOSE 커플링	50.731	PLUG, DEVICE CABLE CONNECTOR *
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	50.811	NUT, DEVICE HOSE FITTING 너트
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	50.826	TERMINAL, DEVICE CABLE 터미널
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.016	JUNCTION BLOCK, DEVICE HOSE 연결블록
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.382	ROLLER, DEVICE HOSE 롤러	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.660	BEARING, DEVICE HOSE LOWER SHEAVE 베어링	59.112	JUNCTION BLOCK, DEVICE HOSE 연결블록
50.685	FASTENER, DEVICE HOSE REEL BASE 패스너	59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라J

www.truck-freeworkshop.com/forklift/clark/

59.121	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라J
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
59.128	TUBE, DEVICE HOSE REEL BRACKET *
59.129	TUBE, DEVICE HOSE REEL BRACKET *
93.214	FASTENER, DEVICE HOSE SHEAVE PIVOT 패스너
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너
96.316	FASTENER, DEVICE HOSE REEL 패스너

www.truck-freeworkshop.com/forklift/clark/

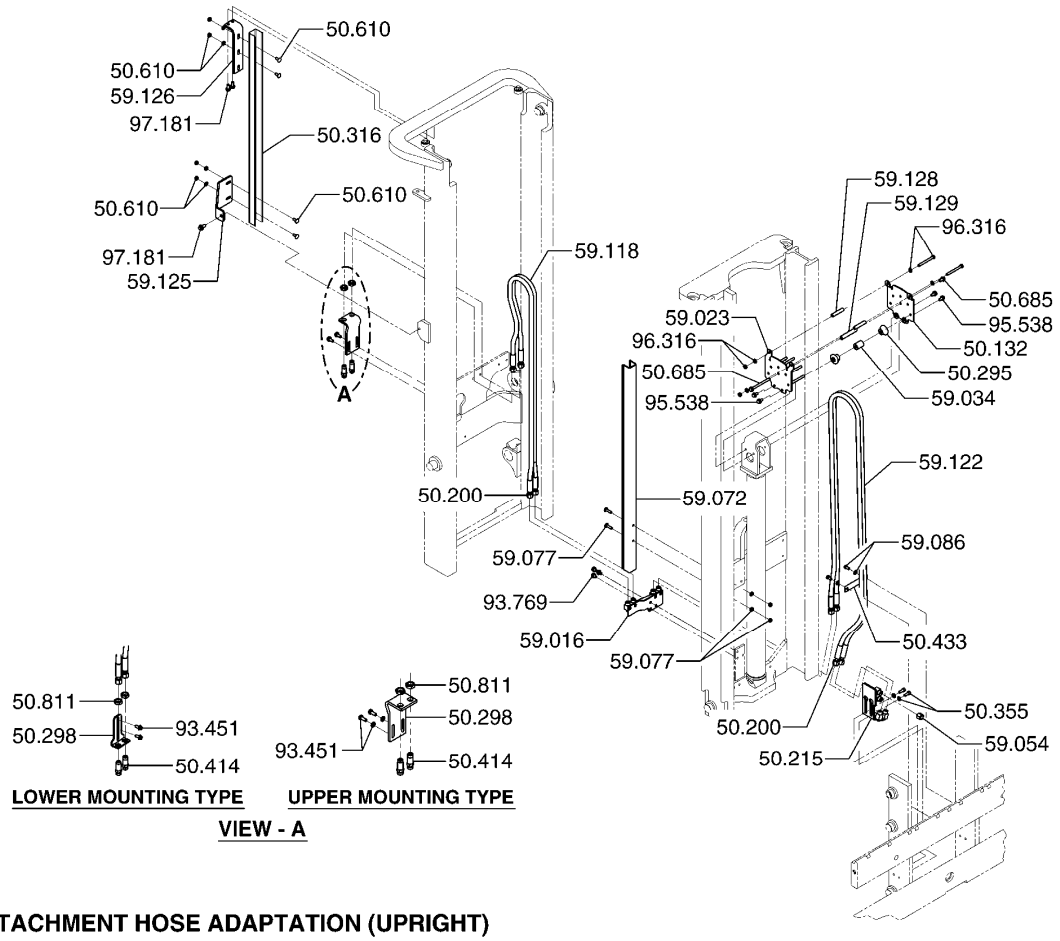

ATTACHMENT HOSE ADAPTATION (UPRIGHT) **50-786**

50.132	BRACKET, DEVICE HOSE REEL 브라켓	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.200	COUPLING, DEVICE HOSE 커플링	59.072	GUARD, DEVICE HOSE 가드
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	59.077	FASTENER, DEVICE HOSE GUARD 패스너
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라J
50.316	GUARD, DEVICE RH HOSE 가드	59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.125	BRACKET, DEVICE HOSE GUARD MOUNTING *
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.126	BRACKET, DEVICE HOSE GUARD MOUNTING *
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.128	TUBE, DEVICE HOSE REEL BRACKET *
50.610	FASTENER, DEVICE HOSE GUARD 패스너	59.129	TUBE, DEVICE HOSE REEL BRACKET *
50.685	FASTENER, DEVICE HOSE REEL BASE 패스너	93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
50.811	NUT, DEVICE HOSE FITTING 너트	93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
59.016	JUNCTION BLOCK, DEVICE HOSE 연결블록	95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너
59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓	96.316	FASTENER, DEVICE HOSE REEL 패스너
59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브	97.181	FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET *

www.truck-freeworkshop.com/forklift/clark/

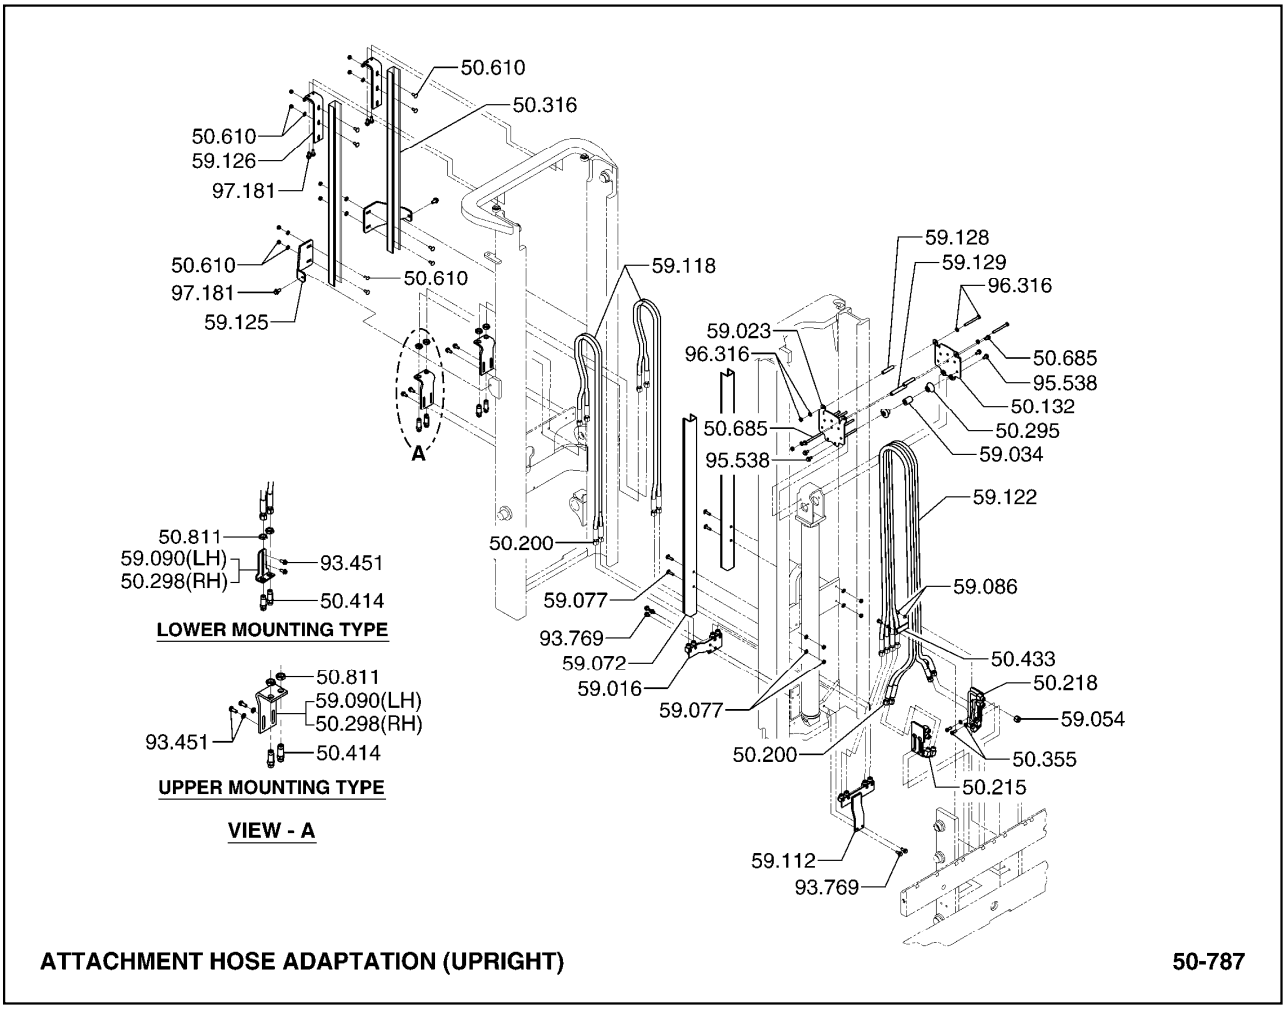

50.132	BRACKET, DEVICE HOSE REEL 브라켓	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.200	COUPLING, DEVICE HOSE 커플링	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	59.072	GUARD, DEVICE HOSE 가드
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	59.077	FASTENER, DEVICE HOSE GUARD 패스너
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.316	GUARD, DEVICE RH HOSE 가드	59.112	JUNCTION BLOCK, DEVICE HOSE 연결블록
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라J
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.125	BRACKET, DEVICE HOSE GUARD MOUNTING *
50.610	FASTENER, DEVICE HOSE GUARD 패스너	59.126	BRACKET, DEVICE HOSE GUARD MOUNTING *
50.685	FASTENER, DEVICE HOSE REEL BASE 패스너	59.128	TUBE, DEVICE HOSE REEL BRACKET *
50.811	NUT, DEVICE HOSE FITTING 너트	59.129	TUBE, DEVICE HOSE REEL BRACKET *
59.016	JUNCTION BLOCK, DEVICE HOSE 연결블록	93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓	93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

www.truck-freeworkshop.com/forklift/clark/

95.538 FASTENER, DEVICE HOSE REEL BRACKET
패스너

96.316 FASTENER, DEVICE HOSE REEL
패스너

97.181 FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET
*

www.truck-freeworkshop.com/forklift/clark/

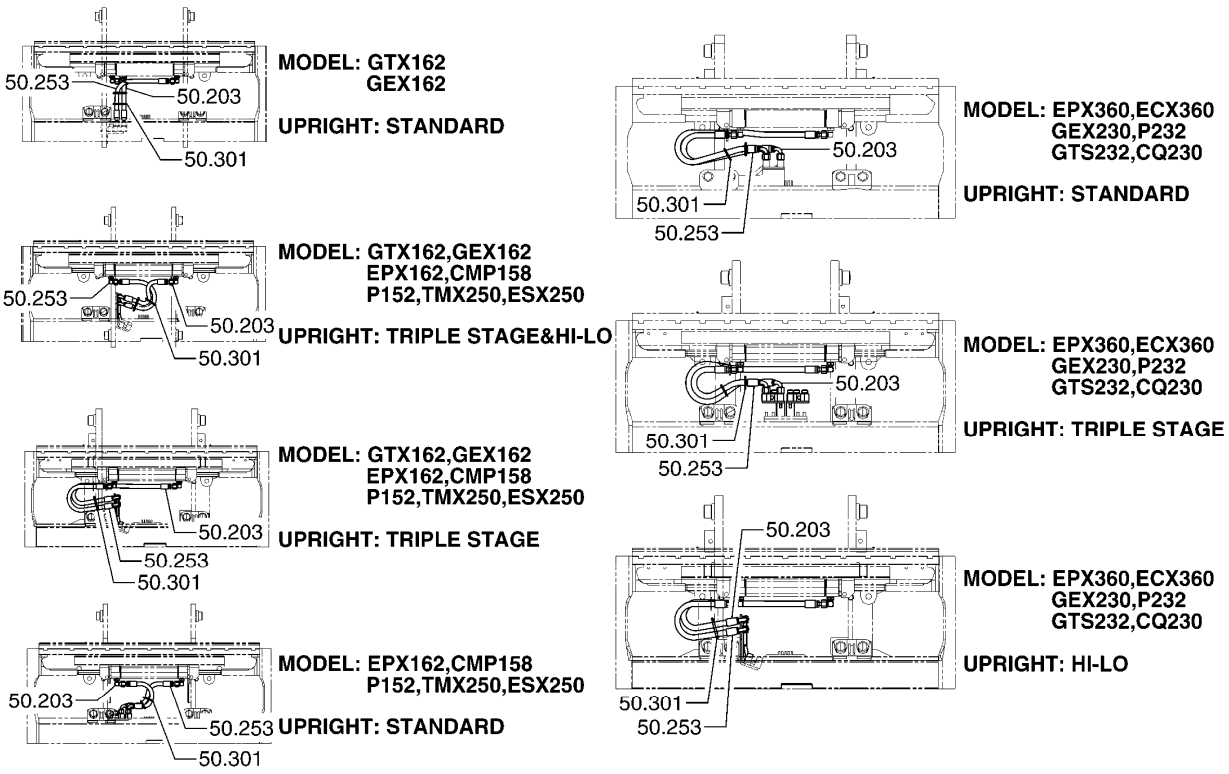

50.203 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.253 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.301 CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립

www.truck-freeworkshop.com/forklift/clark/

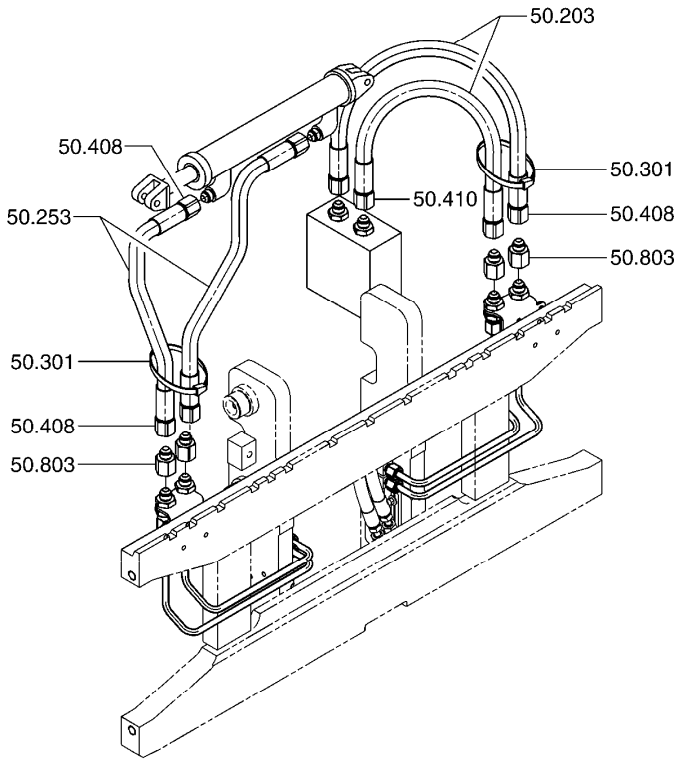

ATTACHMENT HOSE ADAPTATION (CARRIAGE) **50-794**

50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.253	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅

www.truck-freeworkshop.com/forklift/clark/

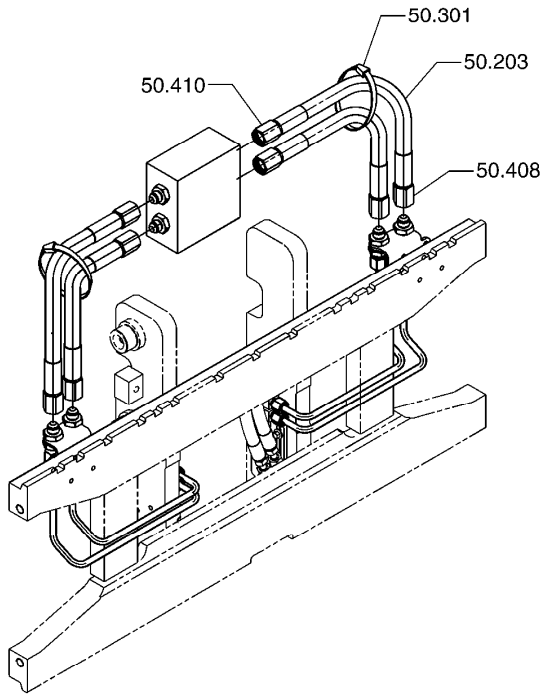

ATTACHMENT HOSE ADAPTATION (CARRIAGE) **50-796**

50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링

www.truck-freeworkshop.com/forklift/clark/

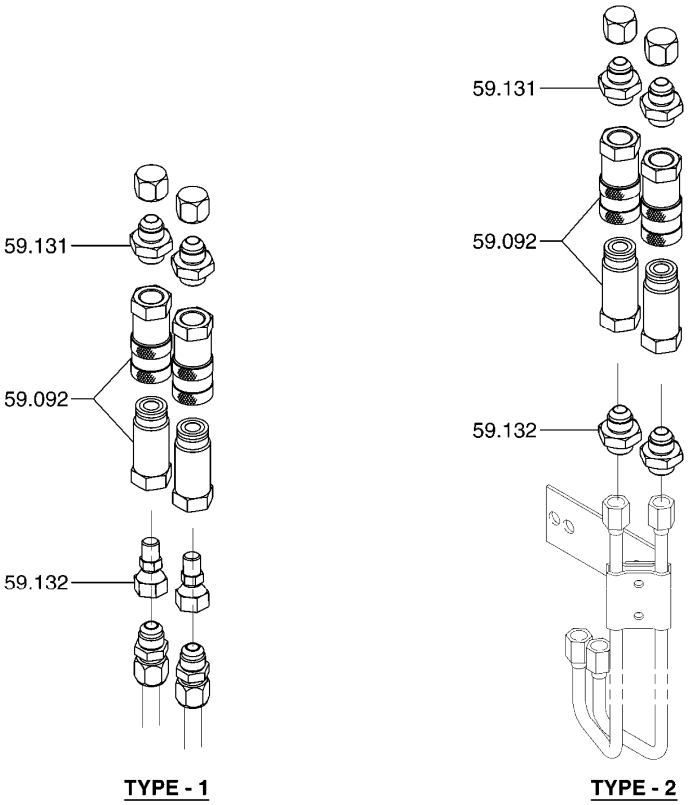

QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION **50-798**

59.092	QUICK DISCONNECT, DEVICE HOSE 퀵디스커넥트
59.131	FITTING, DEVICE LINE QUICK DISCONNECT *
59.132	FITTING, DEVICE LINE QUICK DISCONNECT *

www.truck-freeworkshop.com/forklift/clark/

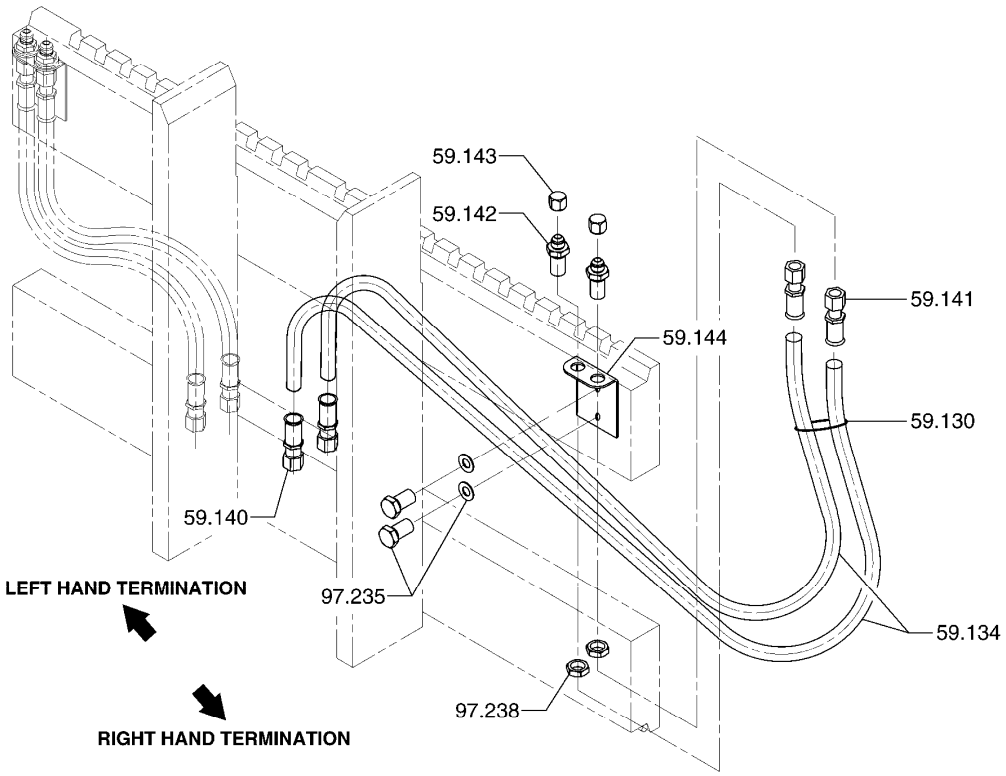

HIGH TERMINATION FOR DEVICE HOSE ADAPTATION **50-799**

59.130 TIE STRAP, DEVICE LINE FOR HIGH TERMINATION
*

59.134 LINE, DEVICE LH LINE FOR HIGH TERMINATION
*

59.140 COUPLING, DEVICE LINE FOR HIGH TERMINATION
*

59.141 COUPLING, DEVICE LINE FOR HIGH TERMINATION
*

59.142 FITTING, DEVICE LINE FOR HIGH TERMINATION
*

59.143 CAP, DEVICE LINE FITTING FOR HIGH TERMINATION
*

59.144 BRACKET, DEVICE LINE FOR HIGH TERMINATION
*

97.235 FASTENER, DEVICE LINE CLAMP FOR HIGH TERMINATION
*

97.238 FASTENER, DEVICE LINE FITTING FOR HIGH TERMINATION
*

www.truck-freeworkshop.com/forklift/clark/

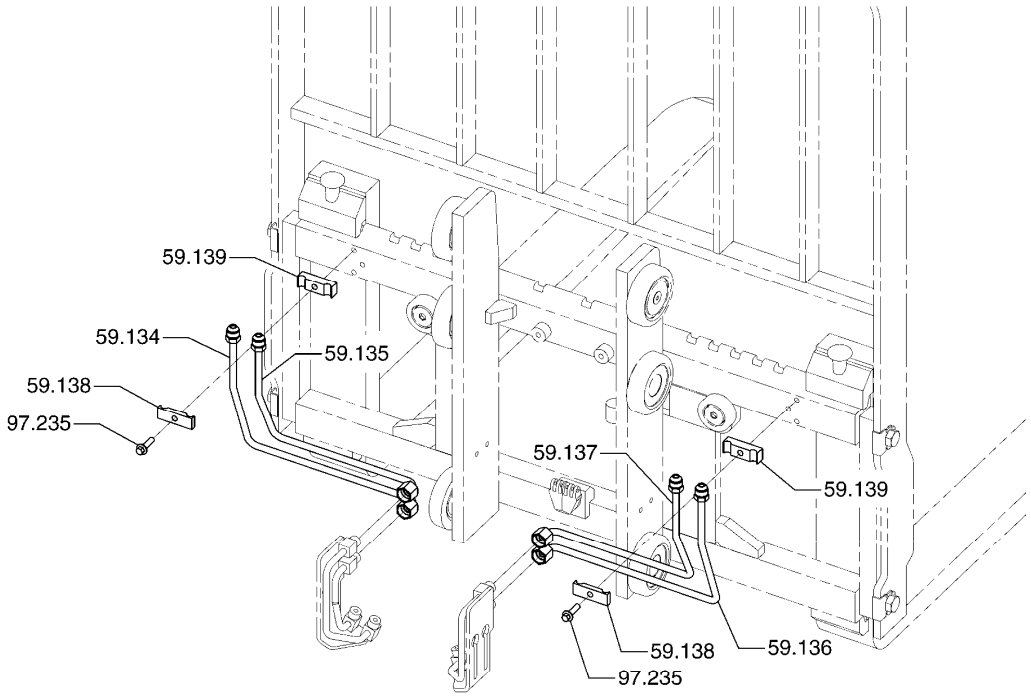

HIGH TERMINATION FOR DEVICE HOSE ADAPTATION **50-800**

59.134	LINE, DEVICE LH LINE FOR HIGH TERMINATION *
59.135	LINE, DEVICE LH LINE FOR HIGH TERMINATION *
59.136	LINE, DEVICE RH LINE FOR HIGH TERMINATION *
59.137	LINE, DEVICE RH LINE FOR HIGH TERMINATION *
59.138	CLAMP, DEVICE LINE FOR HIGH TERMINATION *
59.139	CLAMP, DEVICE LINE FOR HIGH TERMINATION *
97.235	FASTENER, DEVICE LINE CLAMP FOR HIGH TERMINATION *

www.truck-freeworkshop.com/forklift/clark/

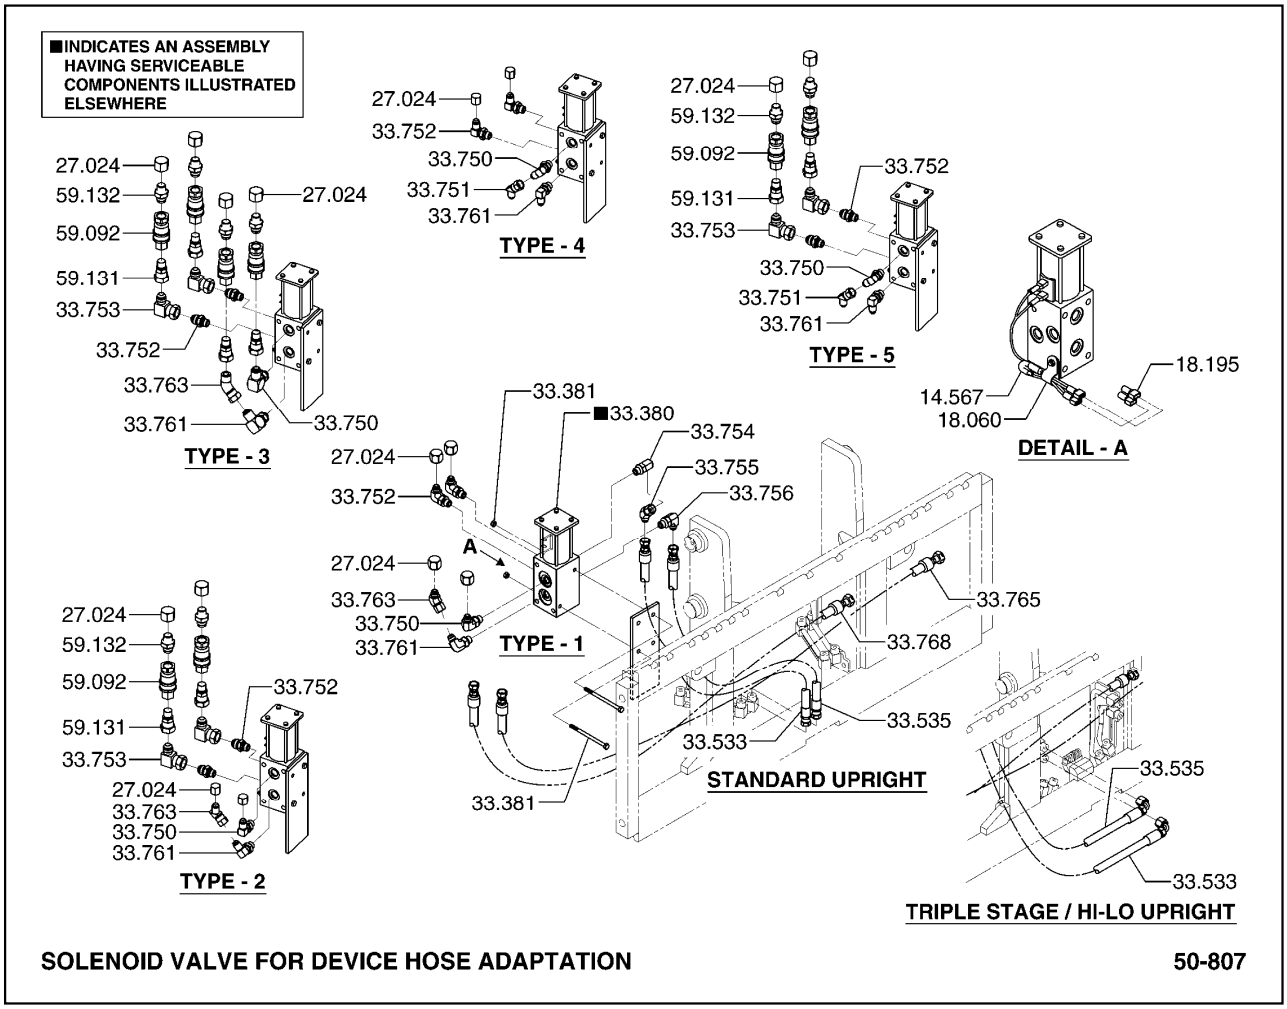

14.567	WIRE, DEVICE SELECTOR VALVE SWITCH FEED 와이어
18.060	CLAMP, DEVICE SELECTOR VALVE CABLE 클램프
18.195	TERMINAL, DEVICE SELECTOR VALVE SWITCH FEED WIRE *
27.024	PLUG, DEVICE SELECTOR VALVE OPTIONAL OUTLET PORT 플러그
33.380	VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID 벨브
33.381	FASTENER, DEVICE SELECTOR VALVE 패스너
33.533	LINE, DEVICE SELECTOR VALVE "P" PORT HYDRAULIC *
33.535	LINE, DEVICE SELECTOR VALVE "R" PORT HYDRAULIC *
33.750	FITTING, DEVICE SELECTOR VALVE C1 PORT 피팅

www.truck-freeworkshop.com/forklift/clark/

33.751	FITTING, DEVICE SELECTOR VALVE C1 PORT 피팅
33.752	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.753	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.754	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.755	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.756	FITTING, DEVICE SELECTOR VALVE "R" PORT 피팅
33.761	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.763	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.765	LINE, DEVICE SELECTOR VALVE C4 PORT HYDRAULIC 라인
33.768	LINE, DEVICE SELECTOR VALVE C1 PORT HYDRAULIC 라인
59.092	QUICK DISCONNECT, DEVICE HOSE 퀵디스커넥트
59.131	FITTING, DEVICE LINE QUICK DISCONNECT *
59.132	FITTING, DEVICE LINE QUICK DISCONNECT *

www.truck-freeworkshop.com/forklift/clark/

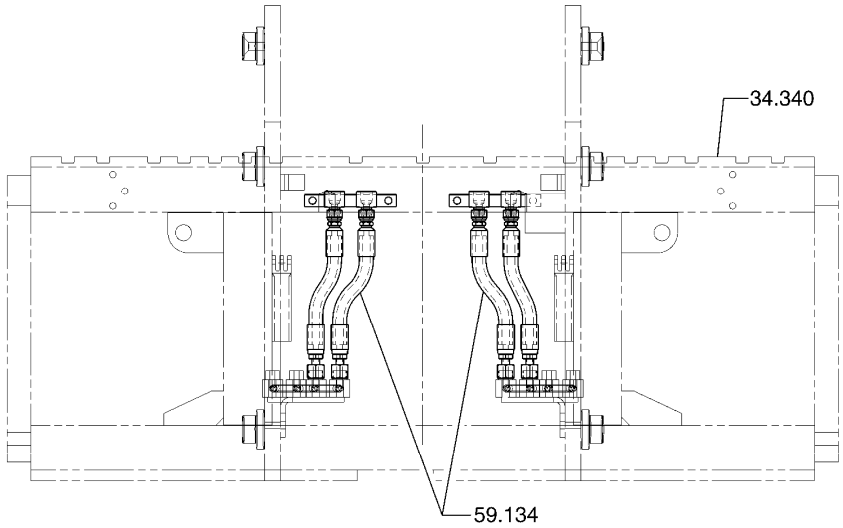

HIGH TERMINATION FOR DEVICE HOSE ADAPTATION **50-818**

34.340	CARRIAGE WELDED ASSEMBLY 캐리지용접물
59.134	LINE, DEVICE LH LINE FOR HIGH TERMINATION *

www.truck-freeworkshop.com/forklift/clark/

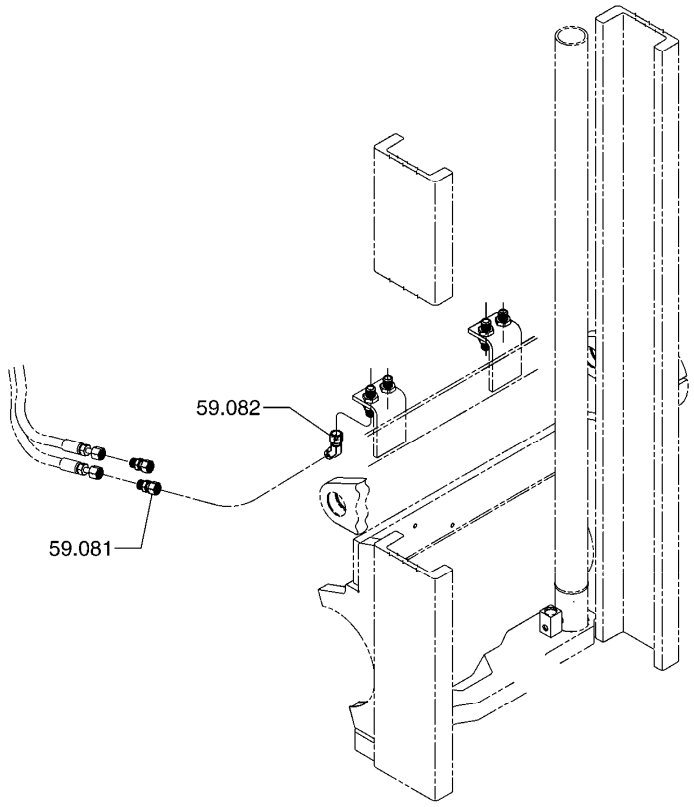

DEVICE LINE ADAPTORS **50-819**

59.081 FITTING, DEVICE HOSE ADAPTOR (AT UPRIGHT)
피팅

59.082 FITTING, DEVICE HOSE ADAPTOR (AT UPRIGHT)
피팅

www.truck-freeworkshop.com/forklift/clark/

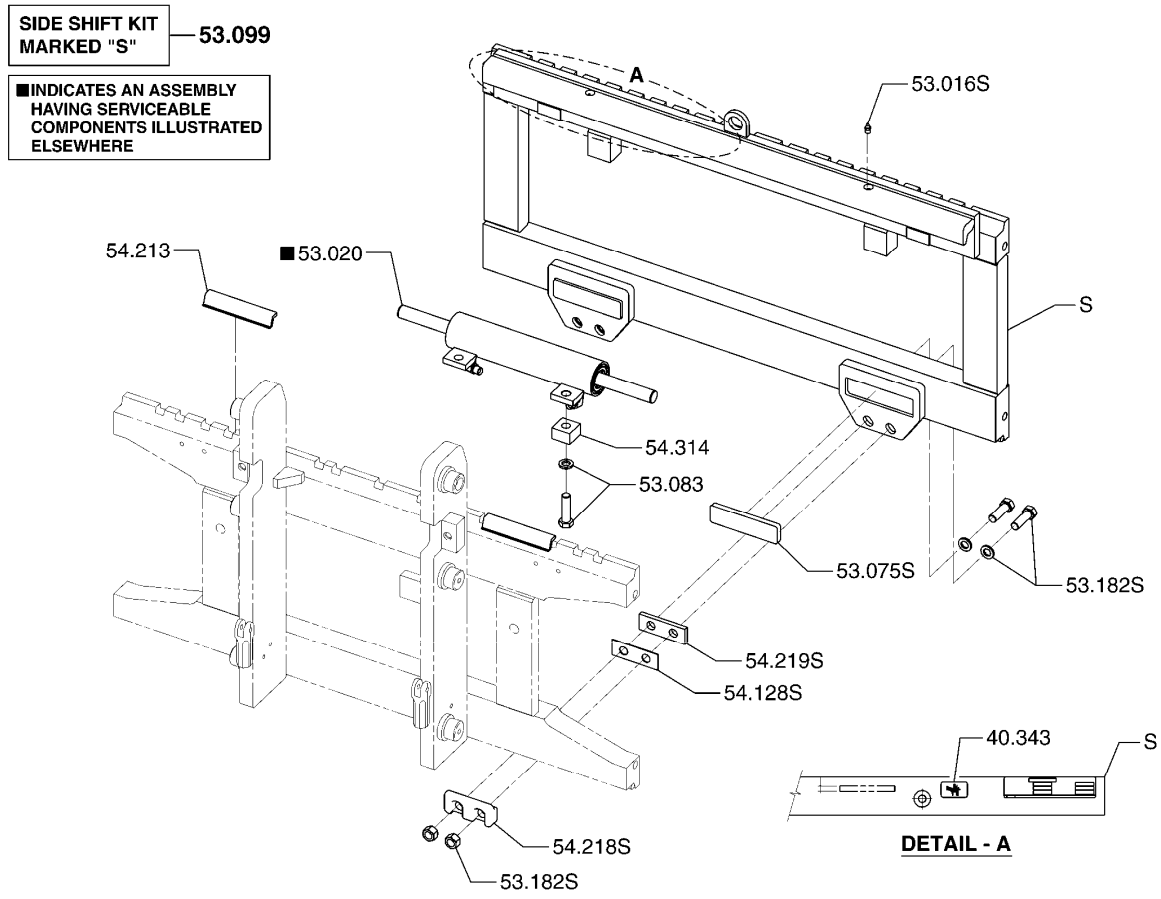

40.343	DECAL, ATTACHMENT SAFETY *
53.016	FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH 피팅
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.099	SIDE SHIFTER, DEVICE 사이드쉬프트
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
54.128	SPACER, SIDE SHIFTER MOVEABLE FRAME BEARING 스페이서
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링

www.truck-freeworkshop.com/forklift/clark/

54.218 HOOK, SIDE SHIFTER HANGER
후크

54.219 SPACER, SIDE SHIFTING BASE PLATE HANGER
스페이서

54.314 SPACER, SIDE SHIFTER CYLINDER REAR
스페이서

www.truck-freeworkshop.com/forklift/clark/

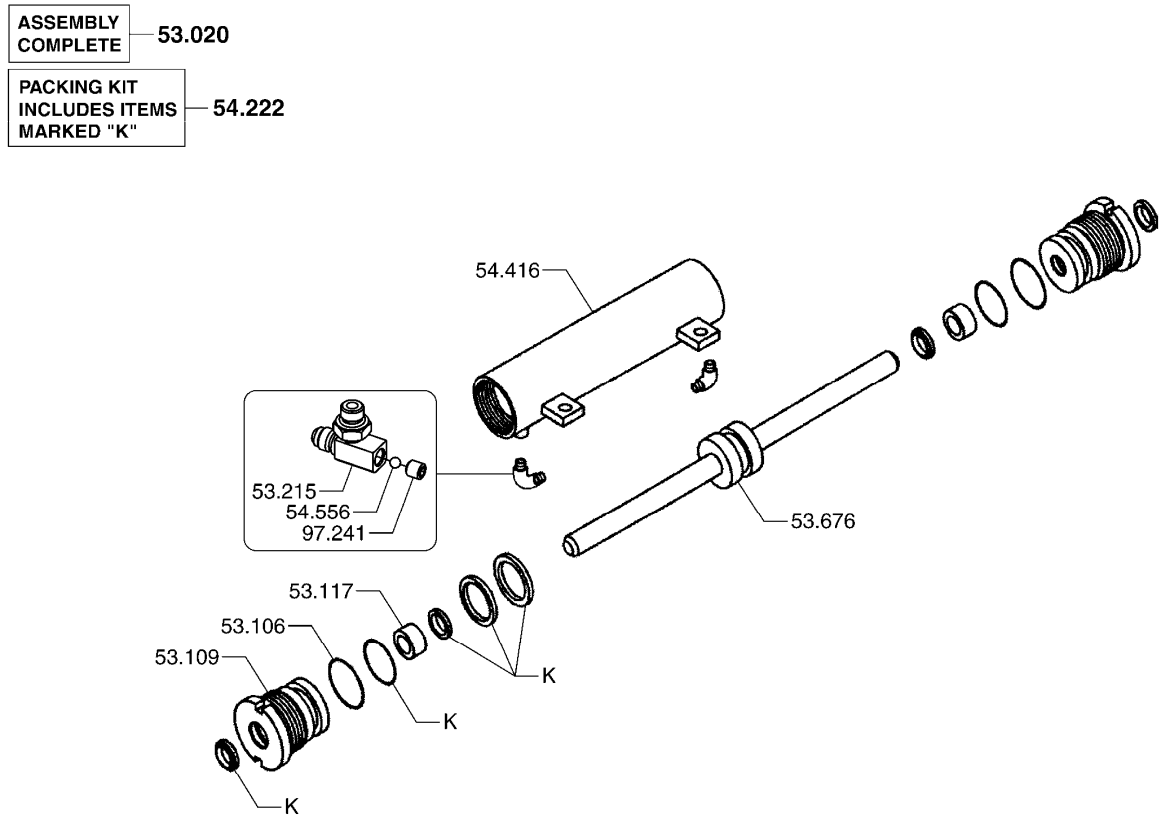

SIDESHIFT CYLINDER **53-198**

53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.110	RETAINER, SIDE SHIFTER CYLINDER GLAND 리테이너
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱
53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹킷
54.416	BARREL, SIDE SHIFT CYLINDER 배럴
54.556	BALL, SIDE SHIFTER CYLINDER ROD PORT *

www.truck-freeworkshop.com/forklift/clark/

97.241	SET SCREW, SIDE SHIFTER CYLINDER ROD PORT *

www.truck-freeworkshop.com/forklift/clark/

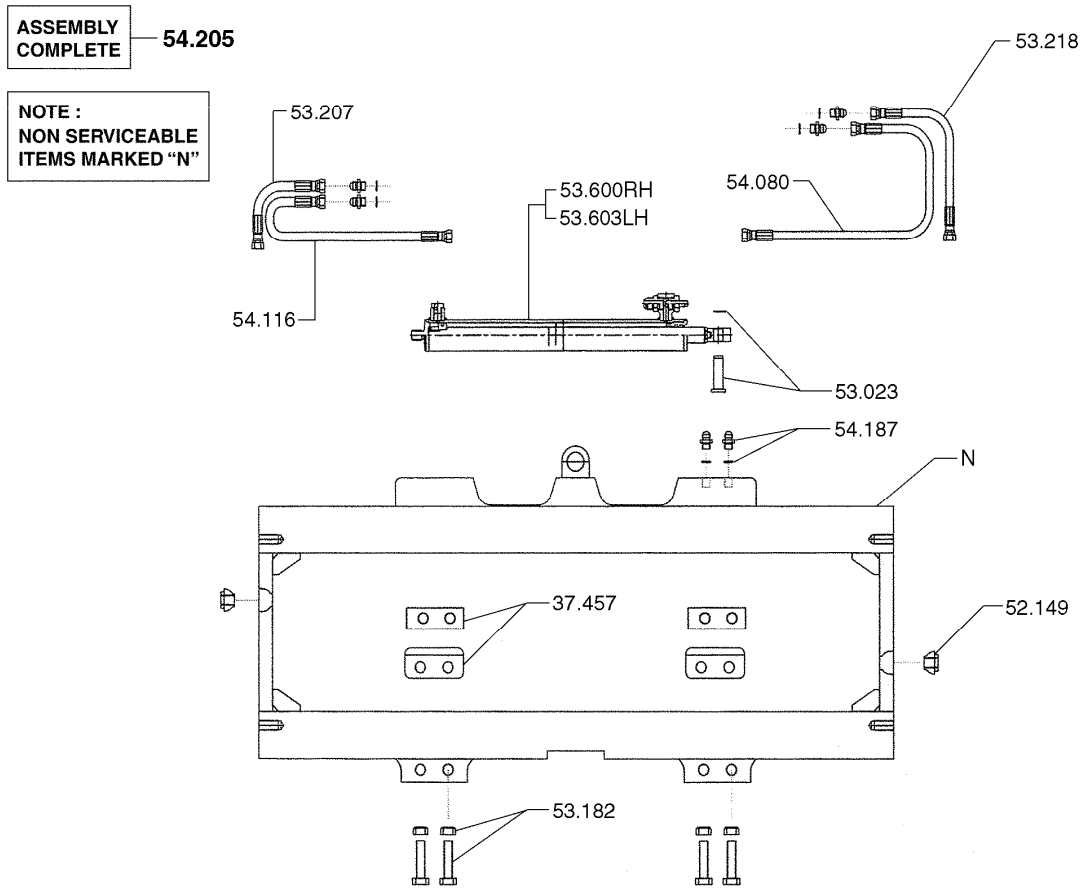

52.149 NUT, SIDE SHIFT CYLINDER ANCHOR PORT LINE FITTING
너트

53.023 ANCHOR, SIDE SHIFTER CYLINDER ROD END
앵커

53.182 FASTENER, SIDE SHIFTER HANGER
패스너

53.207 LINE, SIDE SHIFTER CYLINDER ANCHOR PORT
라인

53.218 LINE, SIDE SHIFTER CYLINDER ROD PORT
라인

53.600 CYLINDER ASSEMBLY, INBOARD RH FORK
실린더

53.603 CYLINDER ASSEMBLY, INBOARD LH FORK
실린더

54.080 LINE, SIDE SHIFT CYLINDER ANCHOR PORT
라인

54.116 LINE, SIDE SHIFT CYLINDER ROD PORT
라인

www.truck-freeworkshop.com/forklift/clark/

54.187 FITTING, SIDE SHIFTER ANCHOR PORT LINE
피팅

54.205 ATTACHMENT, FORK POSITIONER
어태치먼트

www.truck-freeworkshop.com/forklift/clark/

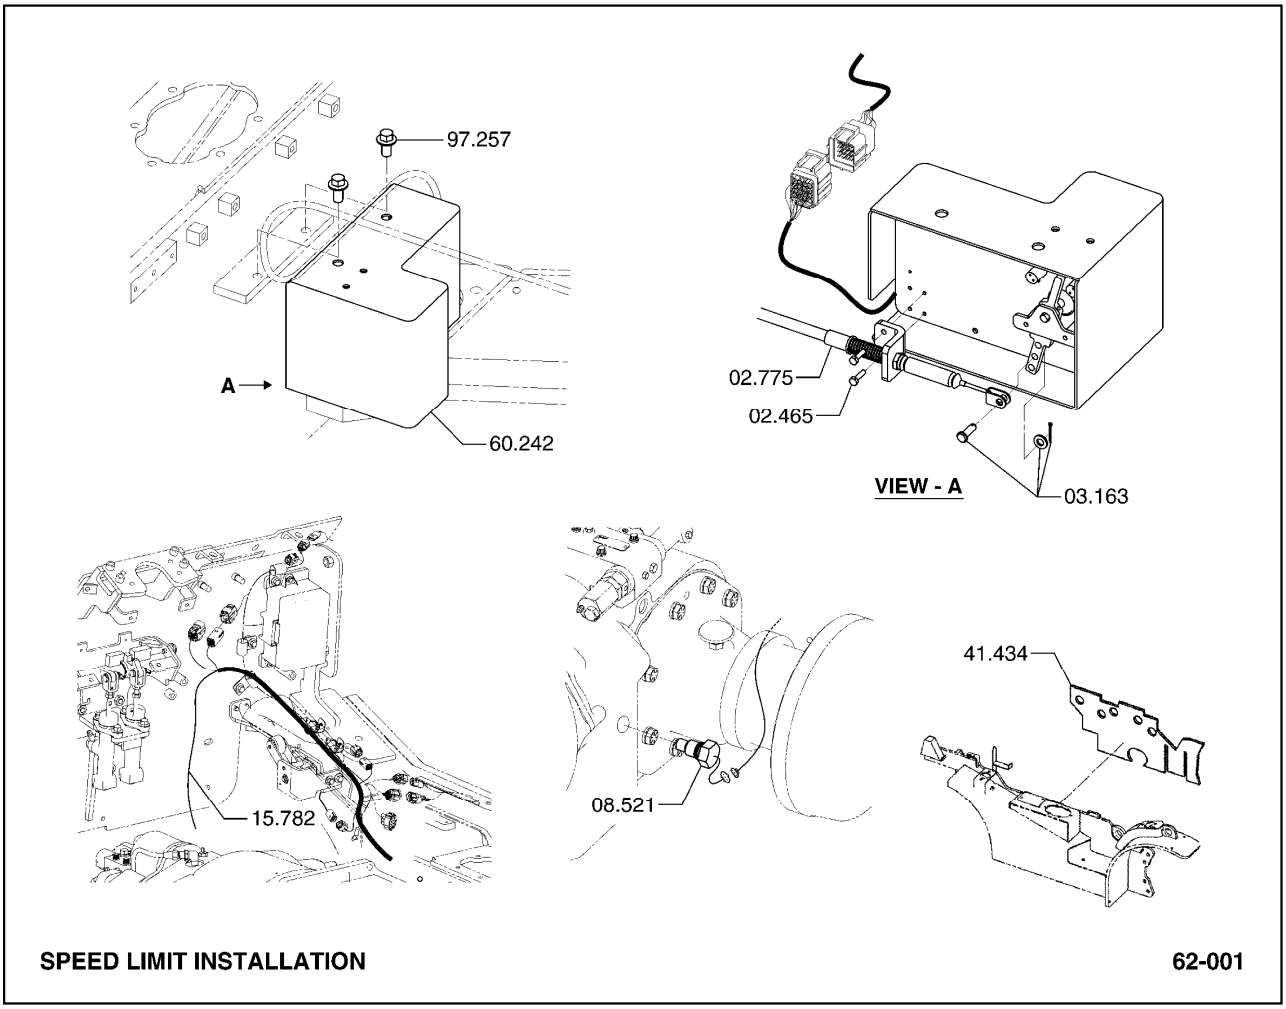

02.465	FASTENER, ACCELERATOR CONTROL LINKAGE 패스너
02.775	CABLE, ACCELERATOR CONTROL 케이블
03.163	FASTENER, ACCELERATOR CONTROL ROD END 패스너
08.521	SENSOR, TRANSMISSION SPEED TURBINE 센서
15.782	HARNESS, SPEED SENSOR 하네스
41.434	SOUND SEAL, FRAME LOWER RH 사운드시일
60.242	SOCKET, WARNING INDICATOR BULB 소켓
97.257	FASTENER, SPEED LIMIT CONTROLLER MOUNTING *

www.truck-freeworkshop.com/forklift/clark/

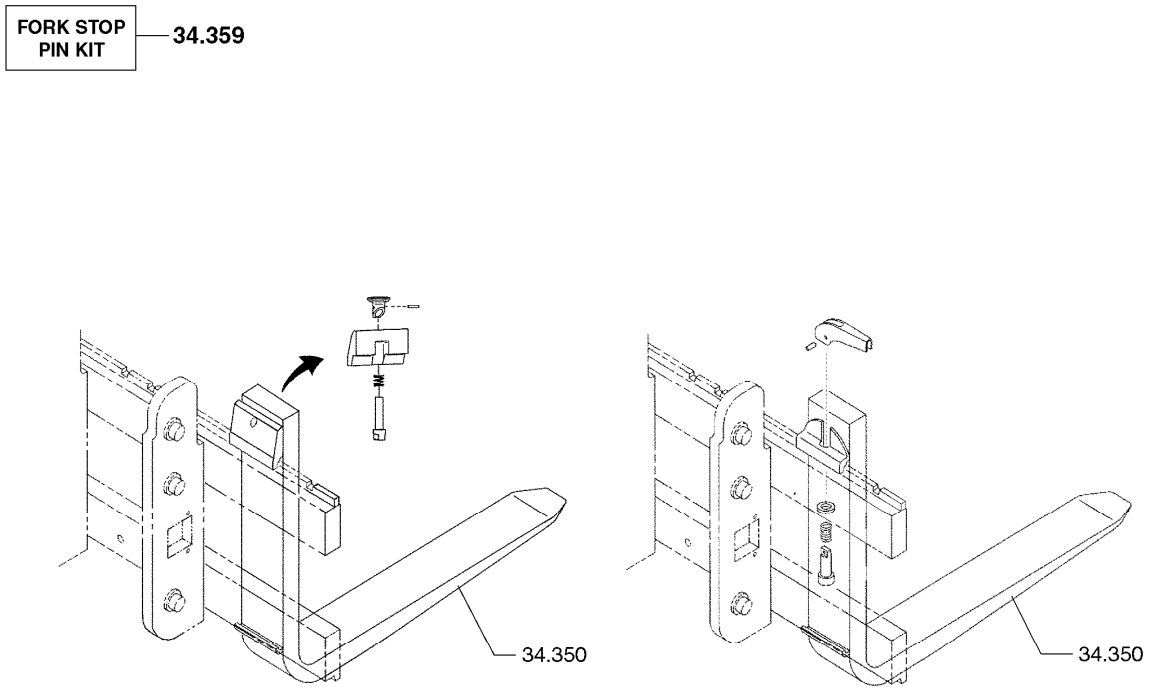

34.350 FORK ASSEMBLY
포크

34.359 KIT, FORK STOP PIN (CAPTIVE)
킷

www.truck-freeworkshop.com/forklift/clark/

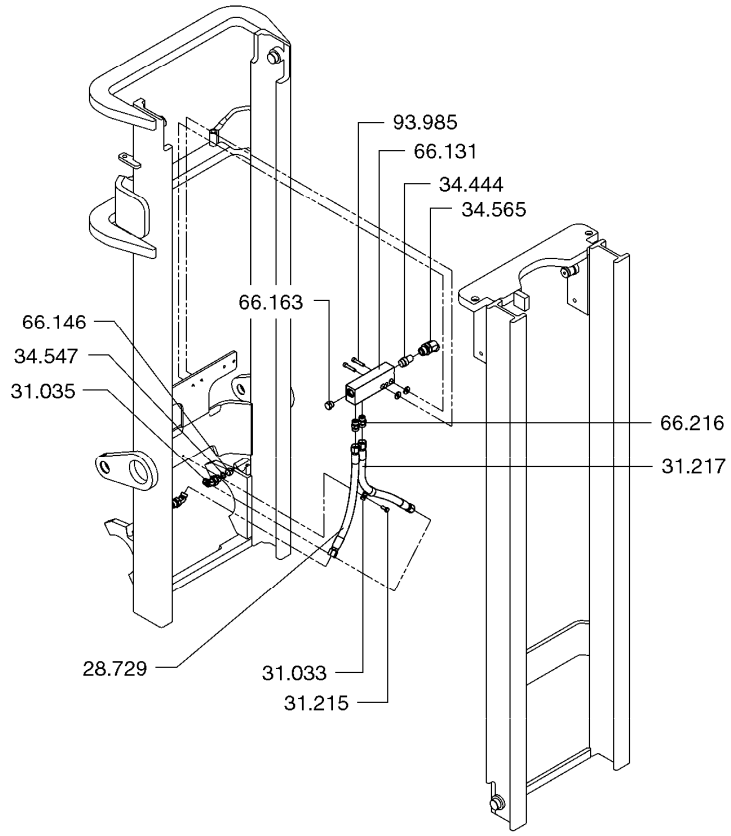

LIFT CYLINDER PIPING 66-060

28.729	LINE, LIFT CYLINDER 라인
31.033	CLAMP, LIFT CYLINDER LINE TO SUPPORT 클램프
31.035	FITTING, LIFT CYLINDER PORT 피팅
31.215	FASTENER, LIFT LINE CLAMP 패스너
31.217	LINE, LIFT CYLINDER INLET FITTING 라인
34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 벨브
34.547	SEAL, LIFT CYLINDER INLET PORT 시일
34.565	FITTING, LIFT CYLINDER FLOW CONTROL VALVE INLET PO 피팅
66.131	MANIFOLD, LIFT CYLINDER FLOW CONTROL VALVE 매니폴드

www.truck-freeworkshop.com/forklift/clark/

66.146 VALVE, LIFT CYLINDER PORT FLOW CONTROL
밸브

66.163 PLUG, LIFT CYLINDER FLOW CONTROL VALVE MANIFOLD PO
플러그

66.216 FITTING, FLOW CONTROL VALVE MANIFOLD PORT
피팅

93.985 FASTENER, LIFT CYLINDER FLOW CONTROL VALVE MANIFOL
패스너

www.truck-freeworkshop.com/forklift/clark/

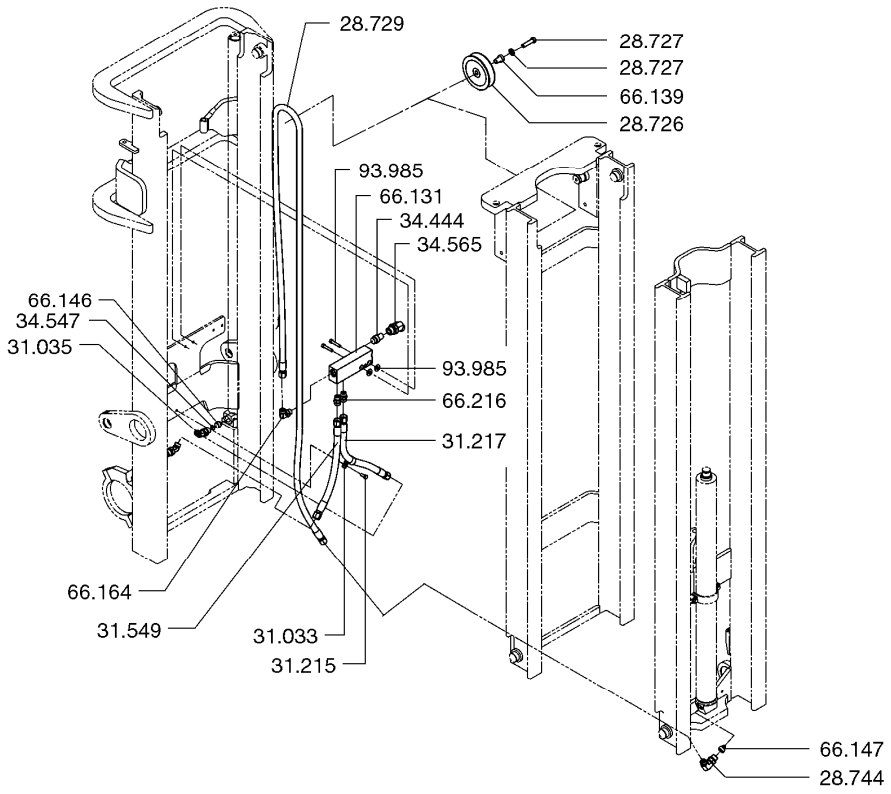

LIFT CYLINDER PIPING 66-062

28.726 SHEAVE, LIFT CYLINDER HOSE
쉬브

28.727 PIVOT, LIFT CYLINDER HOSE SHEAVE
피봇

28.729 LINE, LIFT CYLINDER
라인

28.744 FITTING, LIFT CYLINDER LINE
피팅

31.033 CLAMP, LIFT CYLINDER LINE TO SUPPORT
클램프

31.035 FITTING, LIFT CYLINDER PORT
피팅

31.215 FASTENER, LIFT LINE CLAMP
패스너

31.217 LINE, LIFT CYLINDER INLET FITTING
라인

31.549 LINE, LIFT CYL FLOW CONTROL VALVE INLET
라인

www.truck-freeworkshop.com/forklift/clark/

34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 벨브
34.547	SEAL, LIFT CYLINDER INLET PORT 시일
34.565	FITTING, LIFT CYLINDER FLOW CONTROL VALVE INLET PO 피팅
66.131	MANIFOLD, LIFT CYLINDER FLOW CONTROL VALVE 매니폴드
66.139	BUSHING, LIFT CHAIN HOSE SHEAVE 부싱
66.146	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.164	FITTING, LIFT CYLINDER FLOW CONTROL VALVE MANIFOLD 피팅
66.216	FITTING, FLOW CONTROL VALVE MANIFOLD PORT 피팅
93.985	FASTENER, LIFT CYLINDER FLOW CONTROL VALVE MANIFOL 패스너

www.truck-freeworkshop.com/forklift/clark/

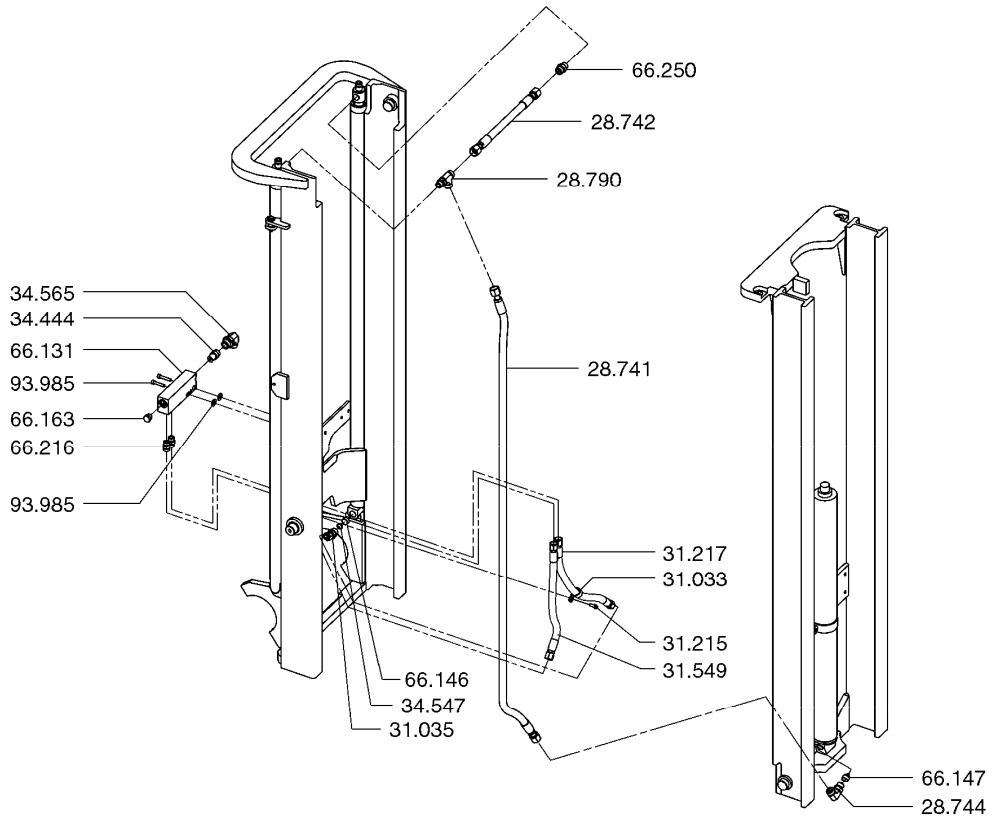

LIFT CYLINDER PIPING 66-065

28.741 LINE ASSY, LIFT CYLINDER
라인

28.742 LINE, LIFT CYLINDER LEFT HAND
라인

28.744 FITTING, LIFT CYLINDER LINE
피팅

28.790 FITTING, FINAL LIFT CYLINDER LINE
피팅

31.033 CLAMP, LIFT CYLINDER LINE TO SUPPORT
클램프

31.035 FITTING, LIFT CYLINDER PORT
피팅

31.215 FASTENER, LIFT LINE CLAMP
패스너

31.217 LINE, LIFT CYLINDER INLET FITTING
라인

31.549 LINE, LIFT CYL FLOW CONTROL VALVE INLET
라인

www.truck-freeworkshop.com/forklift/clark/

34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 벨브
34.547	SEAL, LIFT CYLINDER INLET PORT 시일
34.565	FITTING, LIFT CYLINDER FLOW CONTROL VALVE INLET PO 피팅
66.131	MANIFOLD, LIFT CYLINDER FLOW CONTROL VALVE 매니폴드
66.146	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.163	PLUG, LIFT CYLINDER FLOW CONTROL VALVE MANIFOLD PO 플러그
66.216	FITTING, FLOW CONTROL VALVE MANIFOLD PORT 피팅
66.250	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
93.985	FASTENER, LIFT CYLINDER FLOW CONTROL VALVE MANIFOL 패스너

www.truck-freeworkshop.com/forklift/clark/

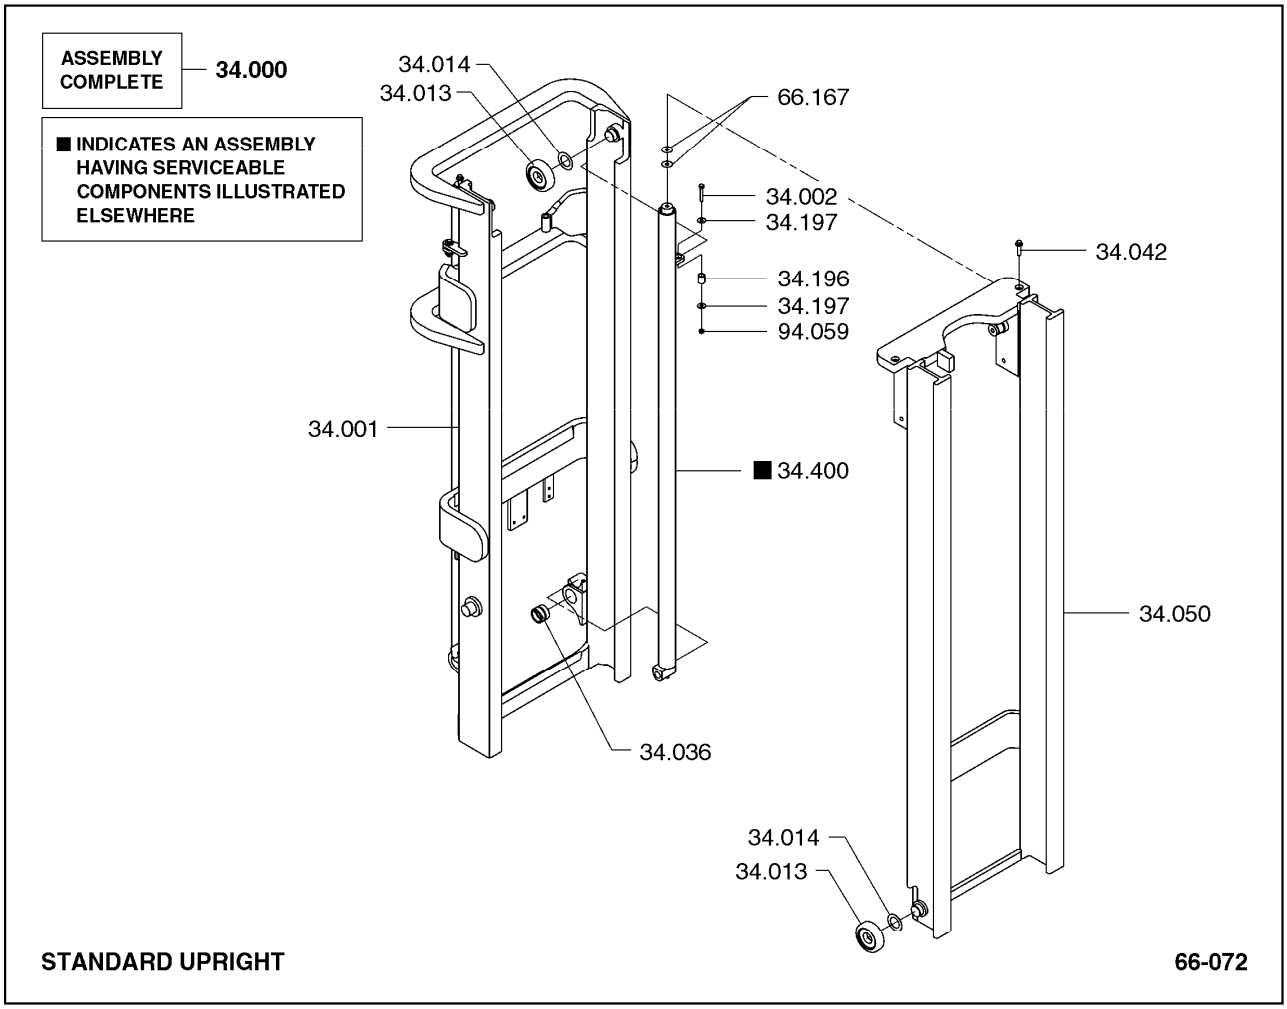

34.000 UPRIGHT & LIFT CYL ASSEMBLY
업라이트와실린더

34.001 OUTER RAIL WELDER ASSEMBLY, UPRIGHT
아웃레일

34.002 FASTENER, LIFT CYLINDER TO SUPPORT
패스너

34.013 ROLLER, UPRIGHT
롤러

34.014 SHIM, UPRIGHT ROLLER
심

34.036 BUSHING, UPRIGHT TRUNNION
부싱

34.042 FASTENER, LIFT CYLINDER (UPPER)
패스너

34.050 INNER RAIL WELDED ASSEMBLY, UPRIGHT
인너레일

34.196 RETAINER, LIFT CYLINDER UPPER RING SEGMENT
리테이너

www.truck-freeworkshop.com/forklift/clark/

34.197	FASTENER, LIFT CYLINDER UPPER RING SEGMENT RETAINE 패스너
34.400	CYLINDER ASSEMBLY, LIFT 실린더
66.167	SHIM, LIFT CYLINDER UPPER 심
94.059	NUT, LIFT CYLINDER FASTENER 너트

www.truck-freeworkshop.com/forklift/clark/

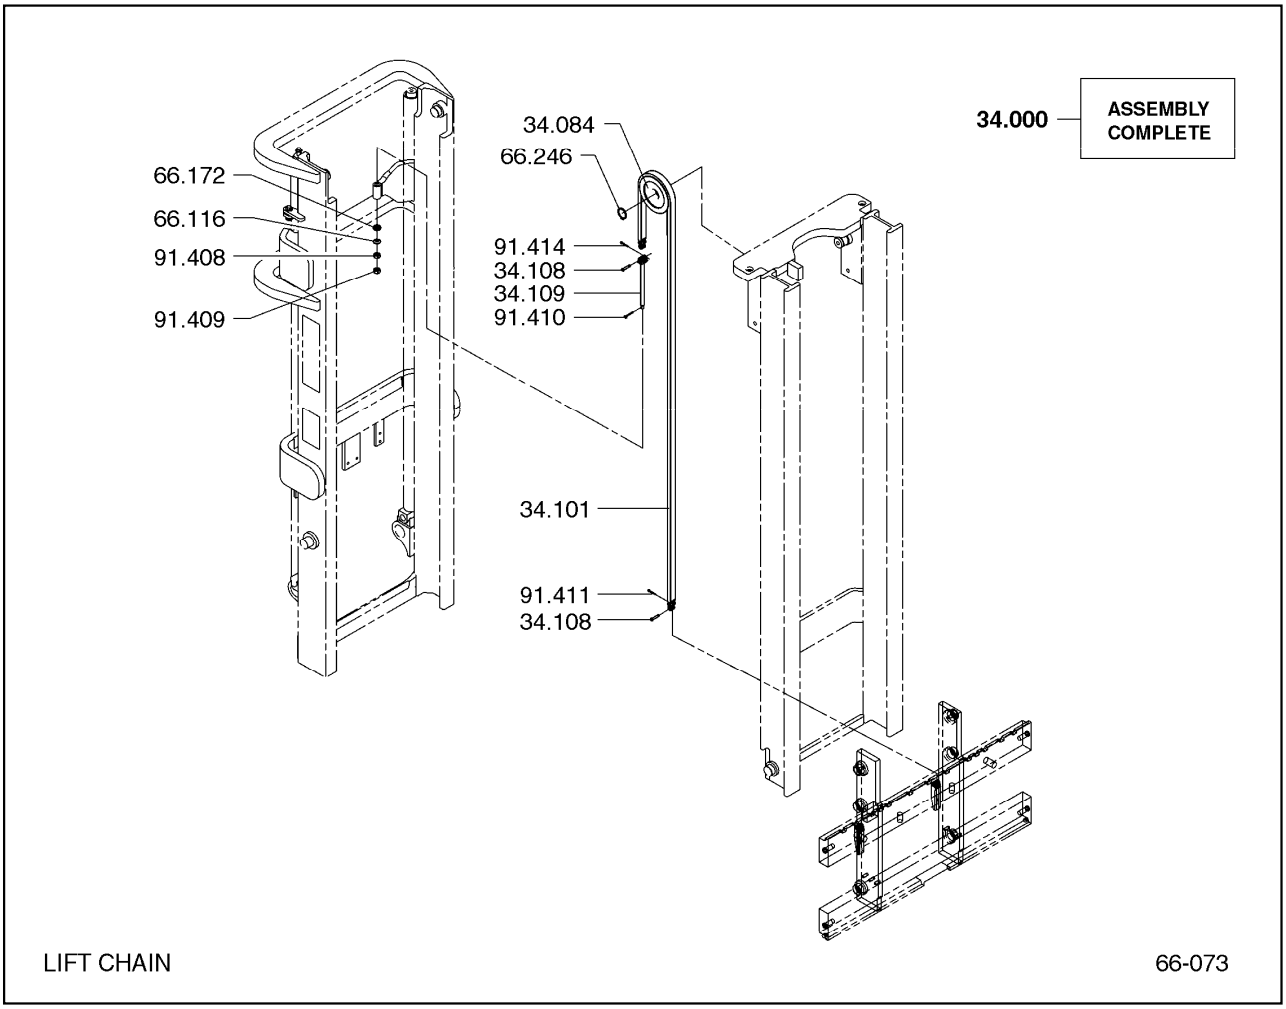

34.000 UPRIGHT & LIFT CYL ASSEMBLY
업라이트와실린더

34.084 SHEAVE, LIFT CHAIN
쉬브

34.101 CHAIN, LIFT
체인

34.108 FASTENER, LIFT CHAIN TO ANCHOR
패스너

34.109 ANCHOR, LIFT CHAIN CARRIAGE END
앵커

66.116 SPACER, LIFT CHAIN ANCHOR
스페이서

66.172 BEARING, LIFT CYLINDER ANCHOR SELF ALIGNING
베어링

66.246 SPACER, LIFT CHAIN SHEAVE
스페이서

91.408 NUT-SPHERICAL, LIFT CHAIN FASTENER (CYL END)
너트

www.truck-freeworkshop.com/forklift/clark/

91.409	NUT, LIFT CHAIN FASTENER (CYLINDER END) 너트
91.410	RETAINER, LIFT CHAIN FASTENER (CYLINDER END) 리테이너
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너

www.truck-freeworkshop.com/forklift/clark/

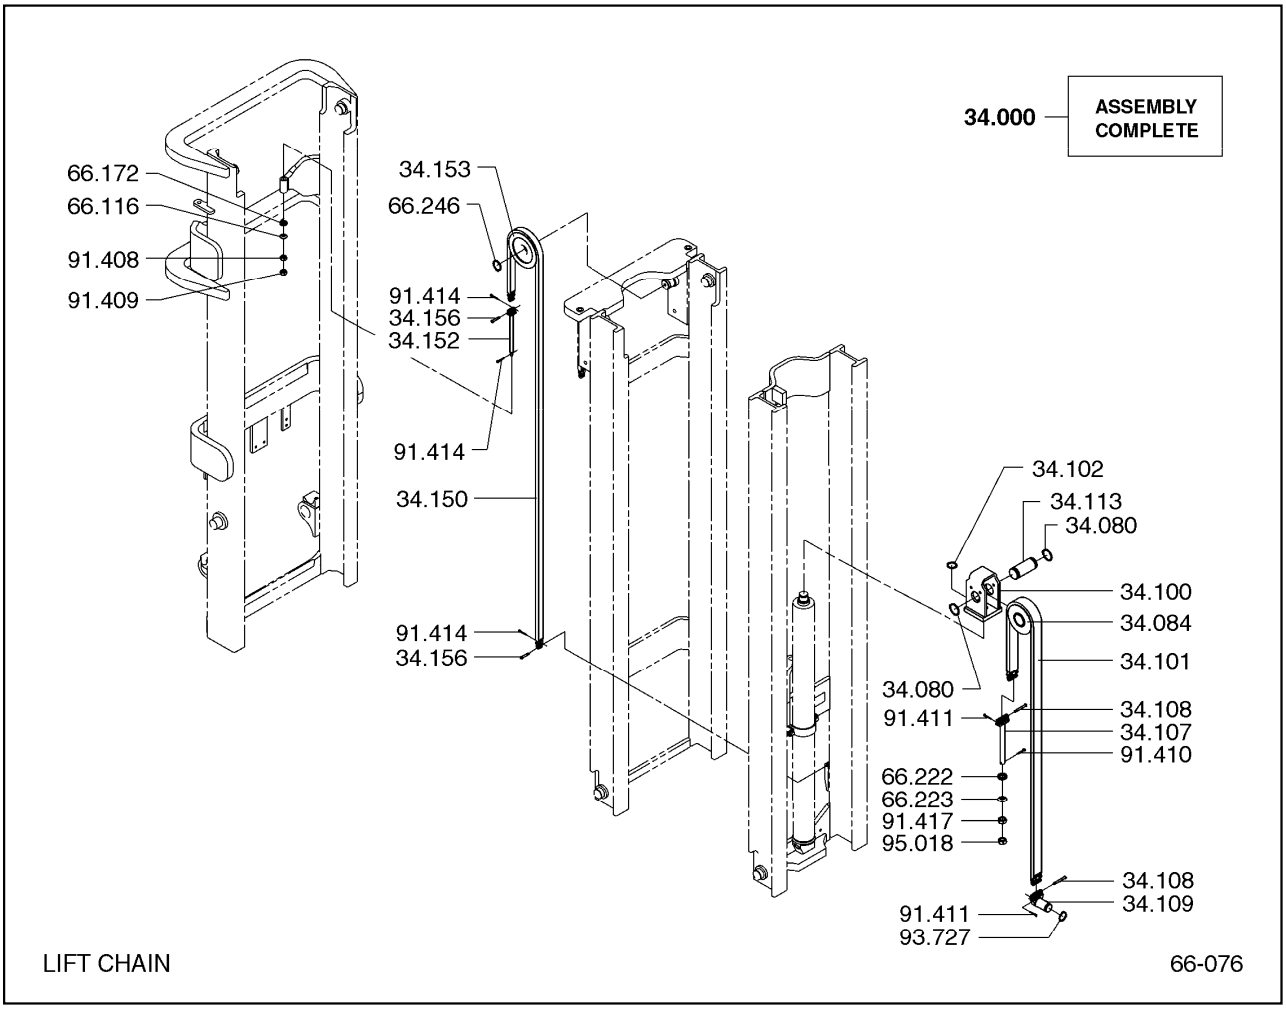

34.000 UPRIGHT & LIFT CYL ASSEMBLY
업라이트와실린더

34.080 FASTENER, LIFT CHAIN SHEAVE
패스너

34.084 SHEAVE, LIFT CHAIN
쉬브

34.100 CARRIER, LIFT CYLINDER CHAIN SHEAVE
캐리어

34.101 CHAIN, LIFT
체인

34.102 FASTENER, SHEAVE CARRIER
패스너

34.107 ANCHOR, LIFT CHAIN
앵커

34.108 FASTENER, LIFT CHAIN TO ANCHOR
패스너

34.109 ANCHOR, LIFT CHAIN CARRIAGE END
앵커

www.truck-freeworkshop.com/forklift/clark/

34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.150	CHAIN, UPRIGHT RAIL LIFT 체인
34.152	ANCHOR, RAIL LIFT CHAIN 앵커
34.153	SHEAVE, UPRIGHT RAIL CHAIN 쉬브
34.156	FASTENER, RAIL CHAIN TO ANCHOR 패스너
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.172	BEARING, LIFT CYLINDER ANCHOR SELF ALIGNING 베어링
66.222	SPACER, LIFT CHAIN ANCHOR 스페이서
66.223	BEARING, LIFT CHAIN ANCHOR SELF ALIGNING 베어링
66.246	SPACER, LIFT CHAIN SHEAVE 스페이서
91.408	NUT-SPHERICAL, LIFT CHAIN FASTENER (CYL END) 너트
91.409	NUT, LIFT CHAIN FASTENER (CYLINDER END) 너트
91.410	RETAINER, LIFT CHAIN FASTENER (CYLINDER END) 리테이너
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.417	NUT, RAIL LIFT CHAIN FAST (CYL END) 너트
93.727	RETAINER, LIFT CHAIN ANCHOR 리테이너
95.018	NUT, LIFT CHAIN FASTENER 너트

www.truck-freeworkshop.com/forklift/clark/

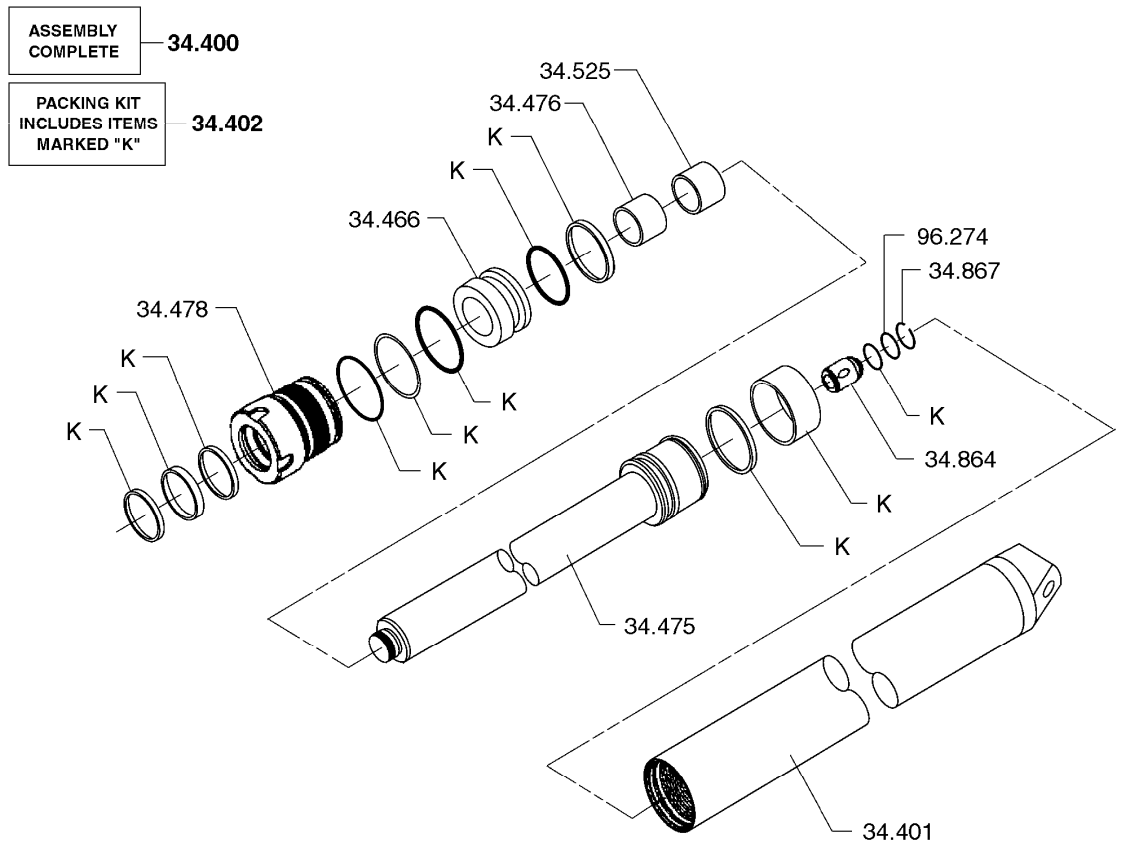

PRIMARY CYLINDER ASSEMBLY **66-078**

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 시일과팩킹킷
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.525	BEARING, LIFT CYLINDER ROD 베어링
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브

www.truck-freeworkshop.com/forklift/clark/

34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너
96.274	WASHER, LIFT CYLINDER CHECK VALVE 옥셔

www.truck-freeworkshop.com/forklift/clark/

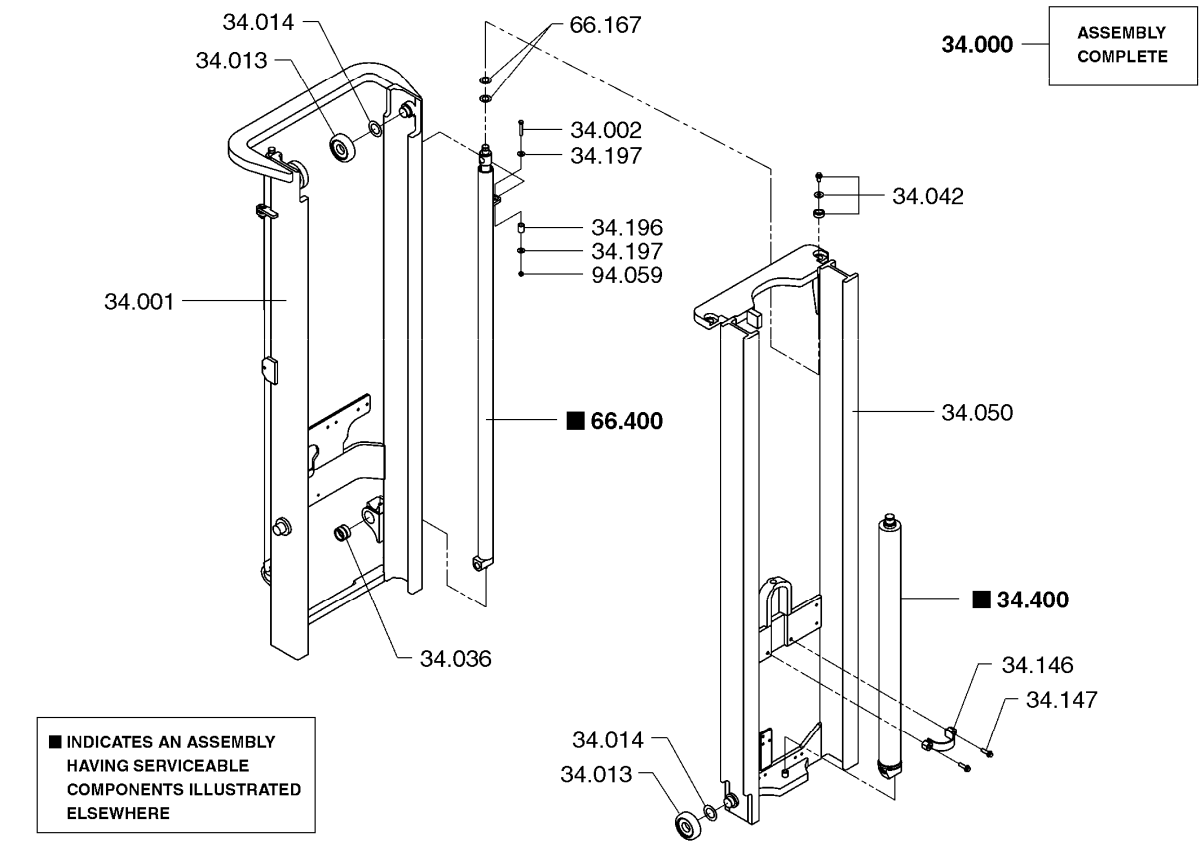

34.000 UPRIGHT & LIFT CYL ASSEMBLY
업라이트와실린더

34.001 OUTER RAIL WELDER ASSEMBLY, UPRIGHT
아웃레일

34.002 FASTENER, LIFT CYLINDER TO SUPPORT
패스너

34.013 ROLLER, UPRIGHT
롤러

34.014 SHIM, UPRIGHT ROLLER
심

34.036 BUSHING, UPRIGHT TRUNNION
부싱

34.042 FASTENER, LIFT CYLINDER (UPPER)
패스너

34.050 INNER RAIL WELDED ASSEMBLY, UPRIGHT
인너레일

34.146 SUPPORT, LIFT CYLINDER BARREL
서포트

www.truck-freeworkshop.com/forklift/clark/

34.147	FASTENER, CYLINDER LIFTING BRACKET 패스너
34.196	RETAINER, LIFT CYLINDER UPPER RING SEGMENT 리테이너
34.197	FASTENER, LIFT CYLINDER UPPER RING SEGMENT RETAINE 패스너
34.400	CYLINDER ASSEMBLY, LIFT 실린더
66.167	SHIM, LIFT CYLINDER UPPER 심
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
94.059	NUT, LIFT CYLINDER FASTENER 너트

www.truck-freeworkshop.com/forklift/clark/

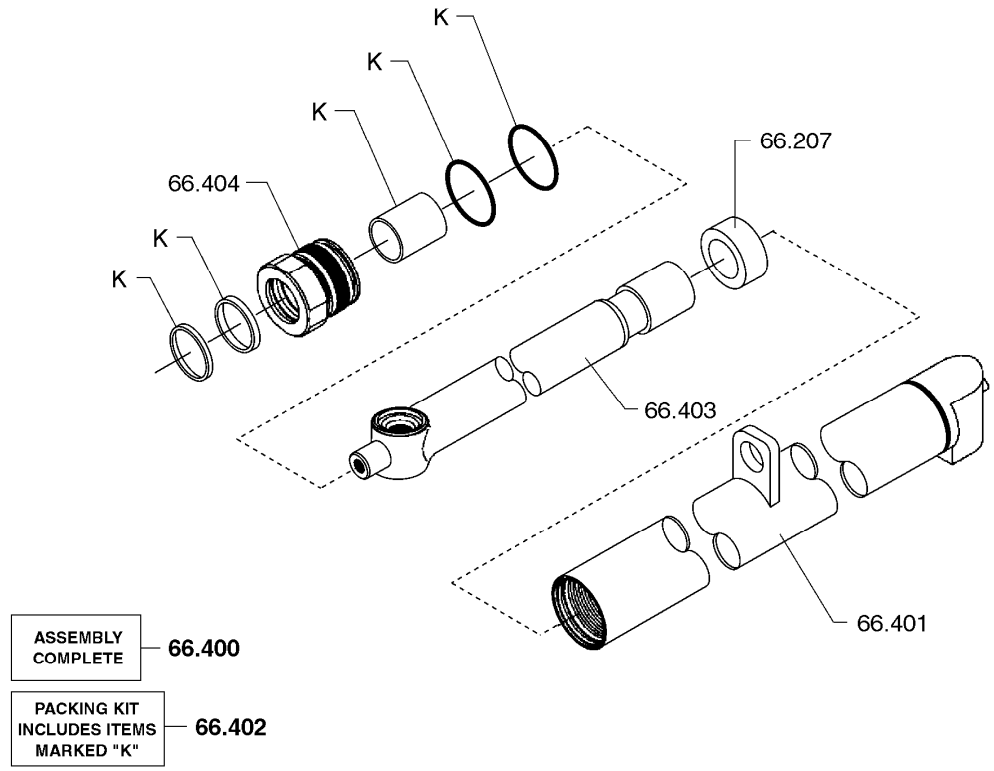

HI-LO SECONDARY CYLINDER 66-083

66.207 PISTON, FINAL LIFT CYLINDER
피스톤

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

66.401 BARREL, FINAL LIFT CYLINDER
배럴

66.402 PACKING KIT, FINAL LIFT CYLINDER
패킹킷

66.403 PISTON ROD, FINAL LIFT CYLINDER
피스톤로드

66.404 CAP, FINAL LIFT CYLINDER GLAND
캡

www.truck-freeworkshop.com/forklift/clark/

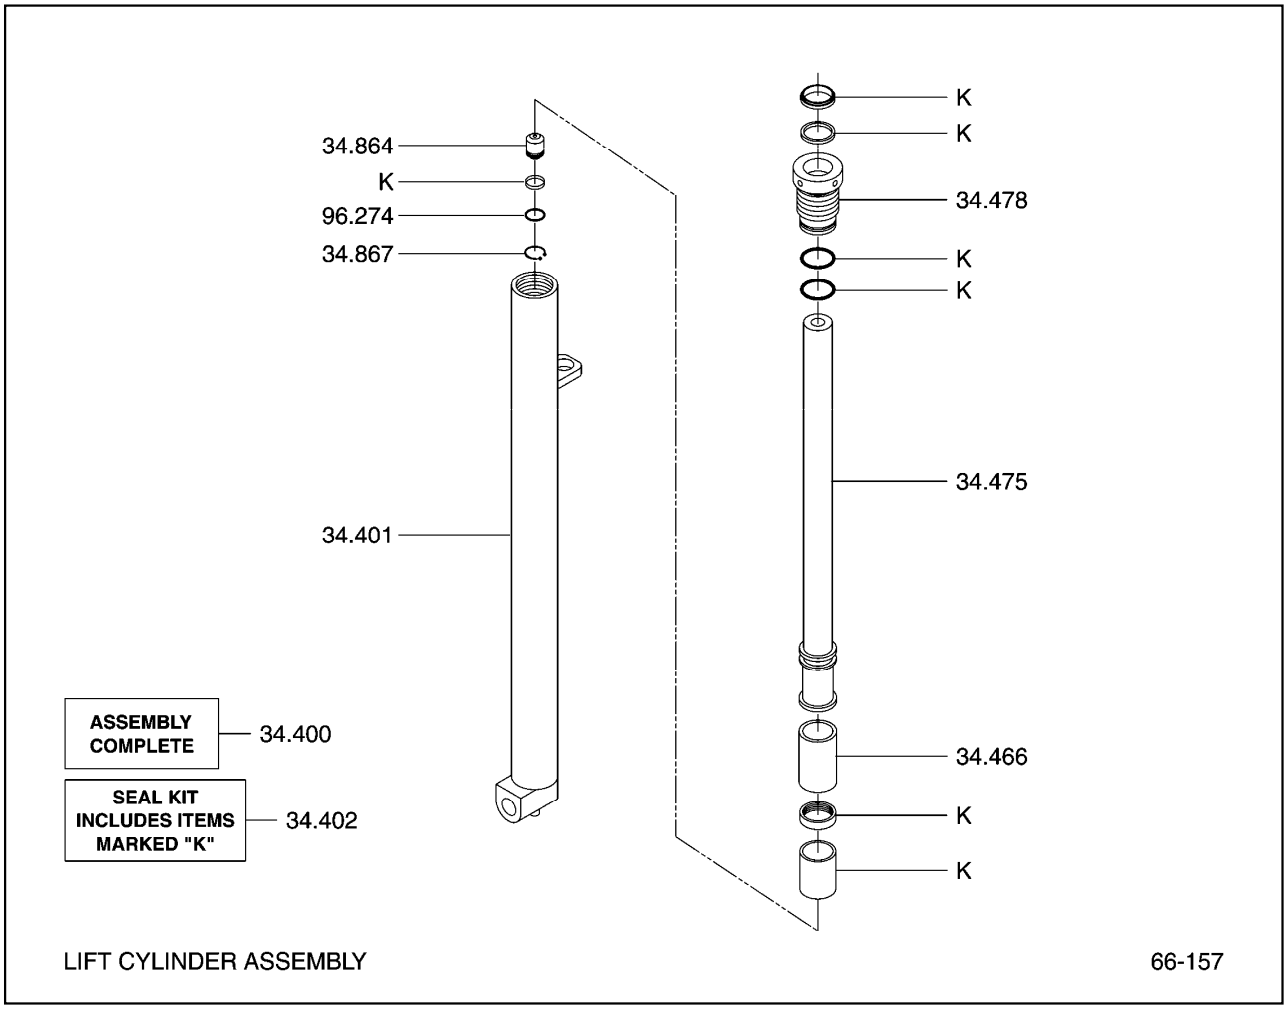

34.400 CYLINDER ASSEMBLY, LIFT
실린더

34.401 BARREL, LIFT CYLINDER
배럴

34.402 SEAL & PACKING KIT, LIFT CYLINDER
시일과팩킹킷

34.466 SPACER, LIFT CYLINDER FEED TUBE
스페이서

34.475 ROD, LIFT CYLINDER
로드

34.478 GLAND, LIFT CYLINDER
그랜드

34.864 CHECK VALVE, LIFT CYLINDER
체크밸브

34.867 RETAINER, LIFT CYLINDER CHECK VALVE
리테이너

96.274 WASHER, LIFT CYLINDER CHECK VALVE
웍셔

www.truck-freeworkshop.com/forklift/clark/

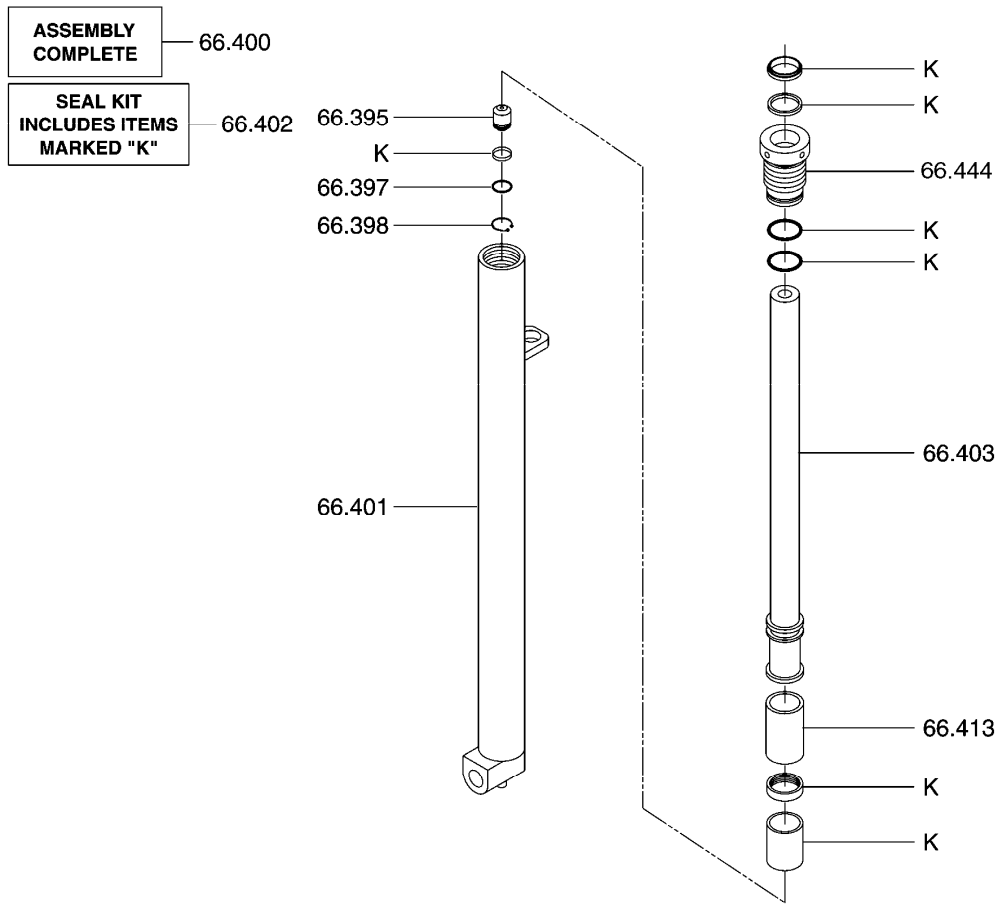

SECONDARY CYLINDER ASSEMBLY **66-158**

66.395 CHECK VALVE, FINAL LIFT CYLINDER
체크밸브

66.397 WASHER, FINAL LIFT CYLINDER CHECK VALVE
와셔

66.398 SNAP RING, FINAL LIFT CYLINDER CHECK VALVE
스냅링

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

66.401 BARREL, FINAL LIFT CYLINDER
배럴

66.402 PACKING KIT, FINAL LIFT CYLINDER
패킹킷

66.403 PISTON ROD, FINAL LIFT CYLINDER
피스톤로드

66.413 SPACER, FINAL LIFT CYLINDER PISTON ROD
스페이서

66.444 GLAND, FINAL LIFT CYLINDER
그룹드

www.truck-freeworkshop.com/forklift/clark/

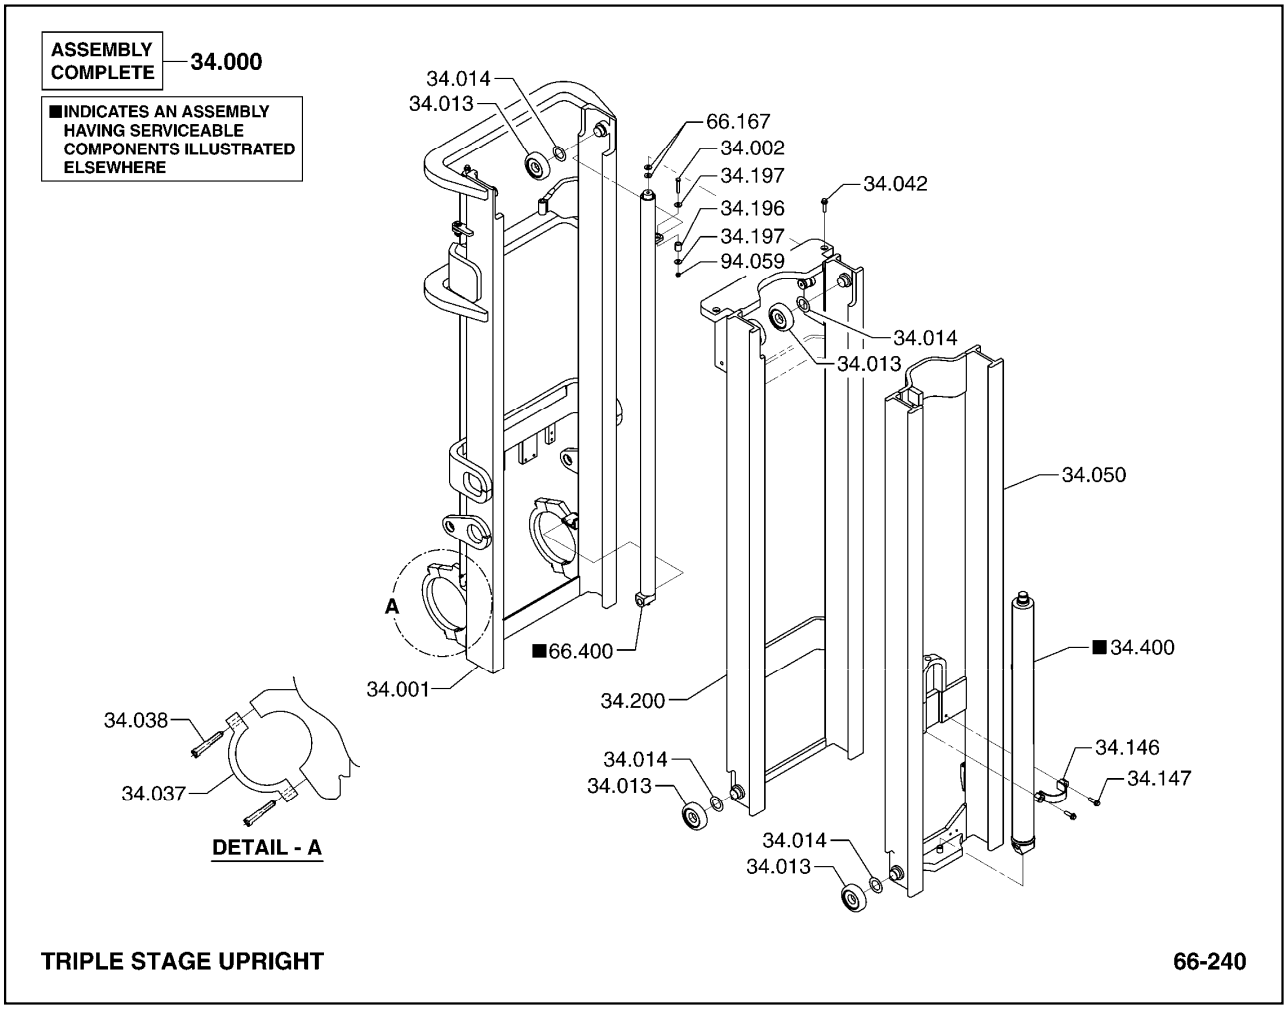

34.000 UPRIGHT & LIFT CYL ASSEMBLY
업라이트와실린더

34.001 OUTER RAIL WELDER ASSEMBLY, UPRIGHT
아웃레일

34.002 FASTENER, LIFT CYLINDER TO SUPPORT
패스너

34.013 ROLLER, UPRIGHT
롤러

34.014 SHIM, UPRIGHT ROLLER
심

34.037 CAP, UPRIGHT TRUNNION
캡

34.038 FASTENER, UPRIGHT TRUNNION CAP
패스너

34.042 FASTENER, LIFT CYLINDER (UPPER)
패스너

34.050 INNER RAIL WELDED ASSEMBLY, UPRIGHT
인너레일

www.truck-freeworkshop.com/forklift/clark/

34.146	SUPPORT, LIFT CYLINDER BARREL 서포트
34.147	FASTENER, CYLINDER LIFTING BRACKET 패스너
34.196	RETAINER, LIFT CYLINDER UPPER RING SEGMENT 리테이너
34.197	FASTENER, LIFT CYLINDER UPPER RING SEGMENT RETAINE 패스너
34.200	INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT 인터레일
34.400	CYLINDER ASSEMBLY, LIFT 실린더
66.167	SHIM, LIFT CYLINDER UPPER 심
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
94.059	NUT, LIFT CYLINDER FASTENER 너트

www.truck-freeworkshop.com/forklift/clark/

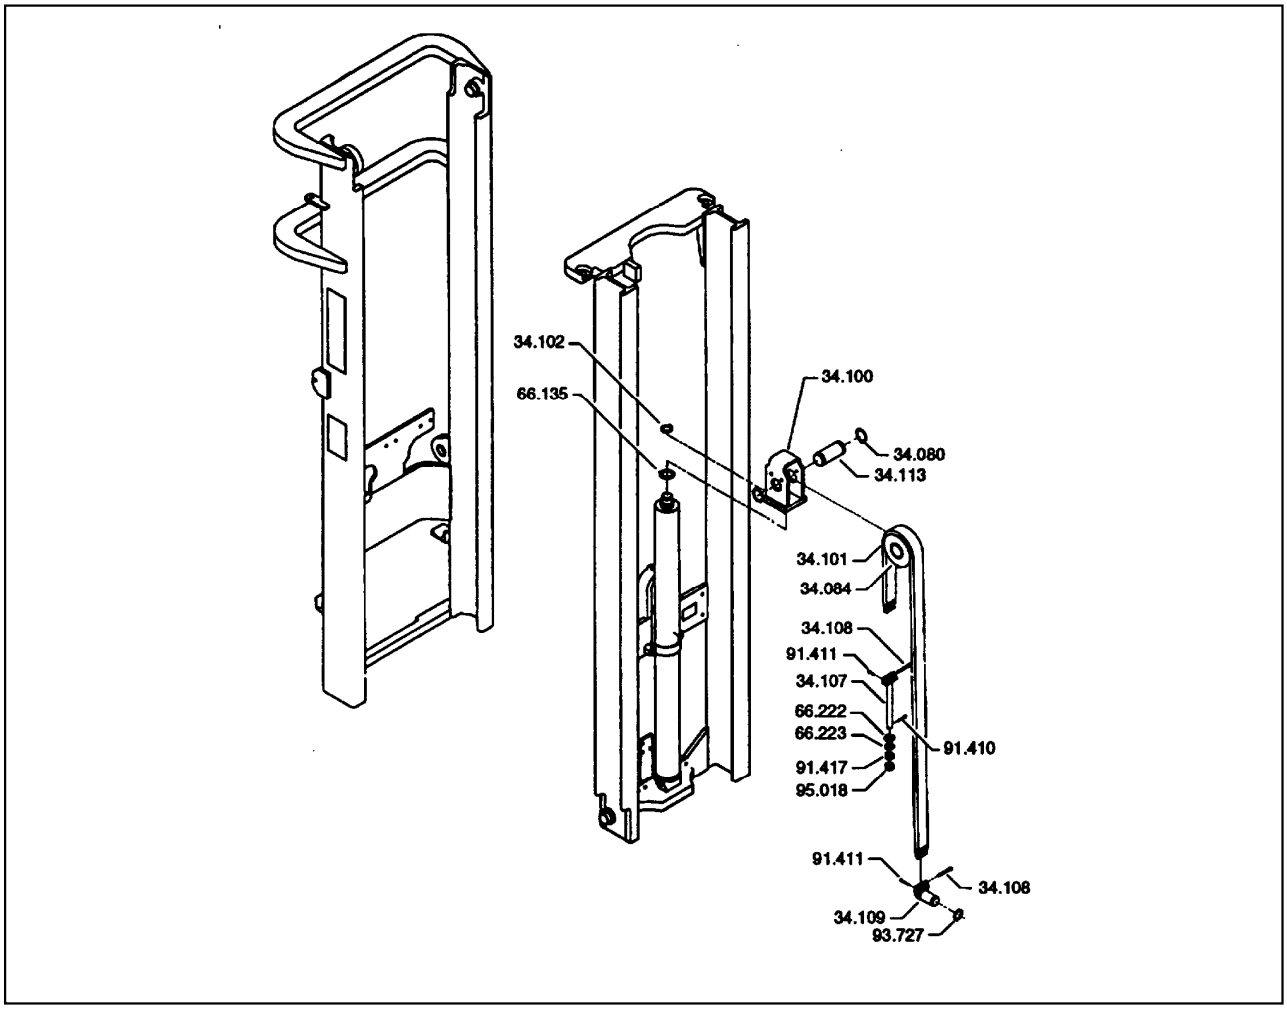

34.080 FASTENER, LIFT CHAIN SHEAVE
패스너

34.084 SHEAVE, LIFT CHAIN
쉬브

34.100 CARRIER, LIFT CYLINDER CHAIN SHEAVE
캐리어

34.101 CHAIN, LIFT
체인

34.102 FASTENER, SHEAVE CARRIER
패스너

34.107 ANCHOR, LIFT CHAIN
앵커

34.108 FASTENER, LIFT CHAIN TO ANCHOR
패스너

34.109 ANCHOR, LIFT CHAIN CARRIAGE END
앵커

34.113 SHAFT, LIFT CHAIN SHEAVE (CARRIER)
샤프트

www.truck-freeworkshop.com/forklift/clark/

66.135	SPACER, SHEAVE CARRIER GUIDE 스페이서
66.222	SPACER, LIFT CHAIN ANCHOR 스페이서
66.223	BEARING, LIFT CHAIN ANCHOR SELF ALIGNING 베어링
91.410	RETAINER, LIFT CHAIN FASTENER (CYLINDER END) 리테이너
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.417	NUT, RAIL LIFT CHAIN FAST (CYL END) 너트
93.727	RETAINER, LIFT CHAIN ANCHOR 리테이너
95.018	NUT, LIFT CHAIN FASTENER 너트

www.truck-freeworkshop.com/forklift/clark/

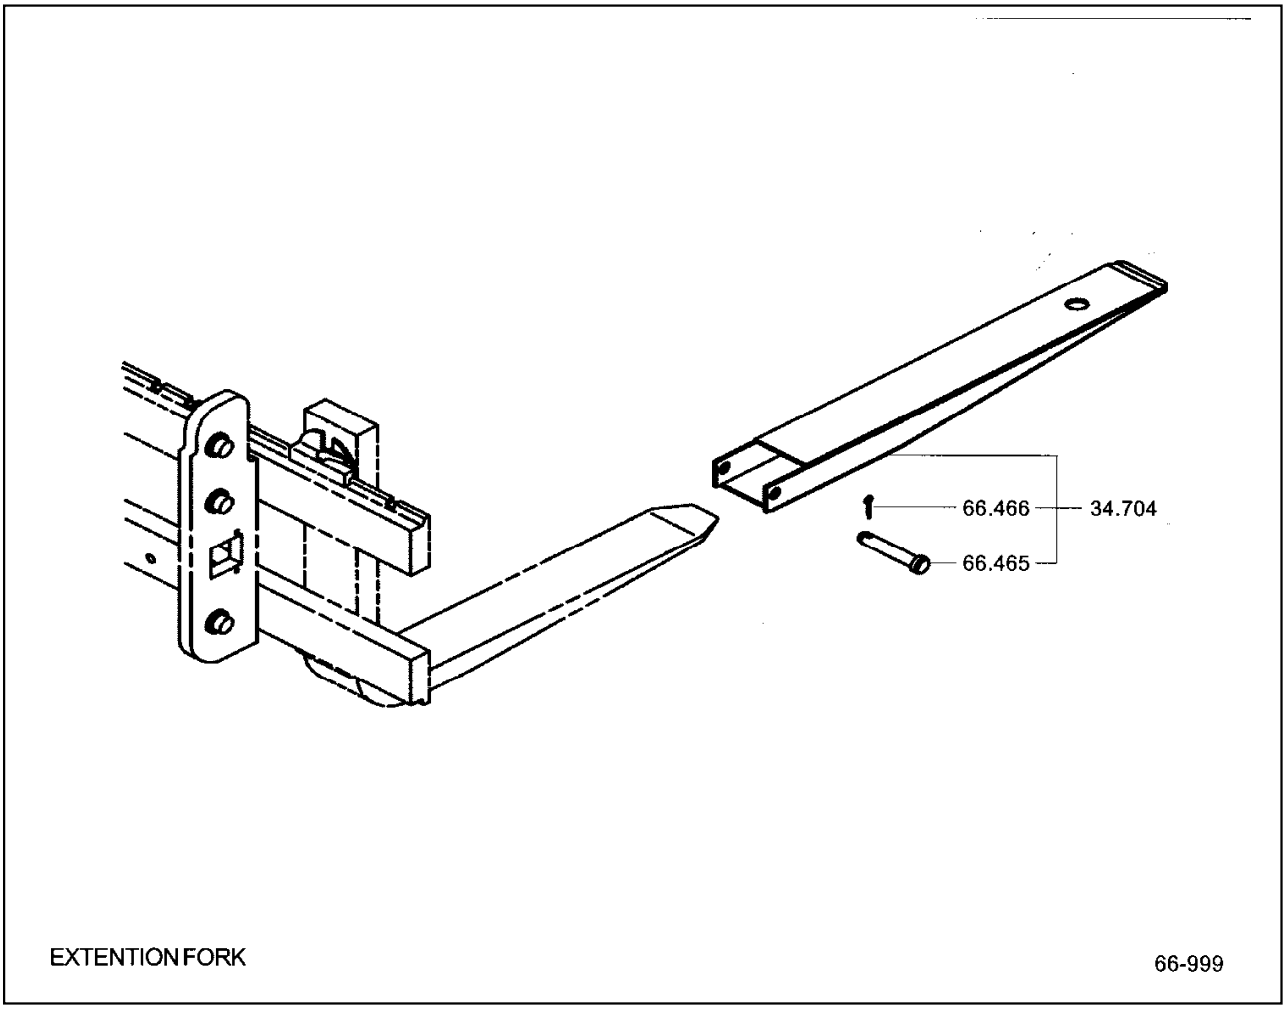

34.704	EXTENSION, FORK ASSEMBLY COMPLETE 익스텐션
66.465	PIN, EXTENTION FORK 핀
66.466	PIN, EXTENTION FORK 핀

www.truck-freeworkshop.com/forklift/clark/

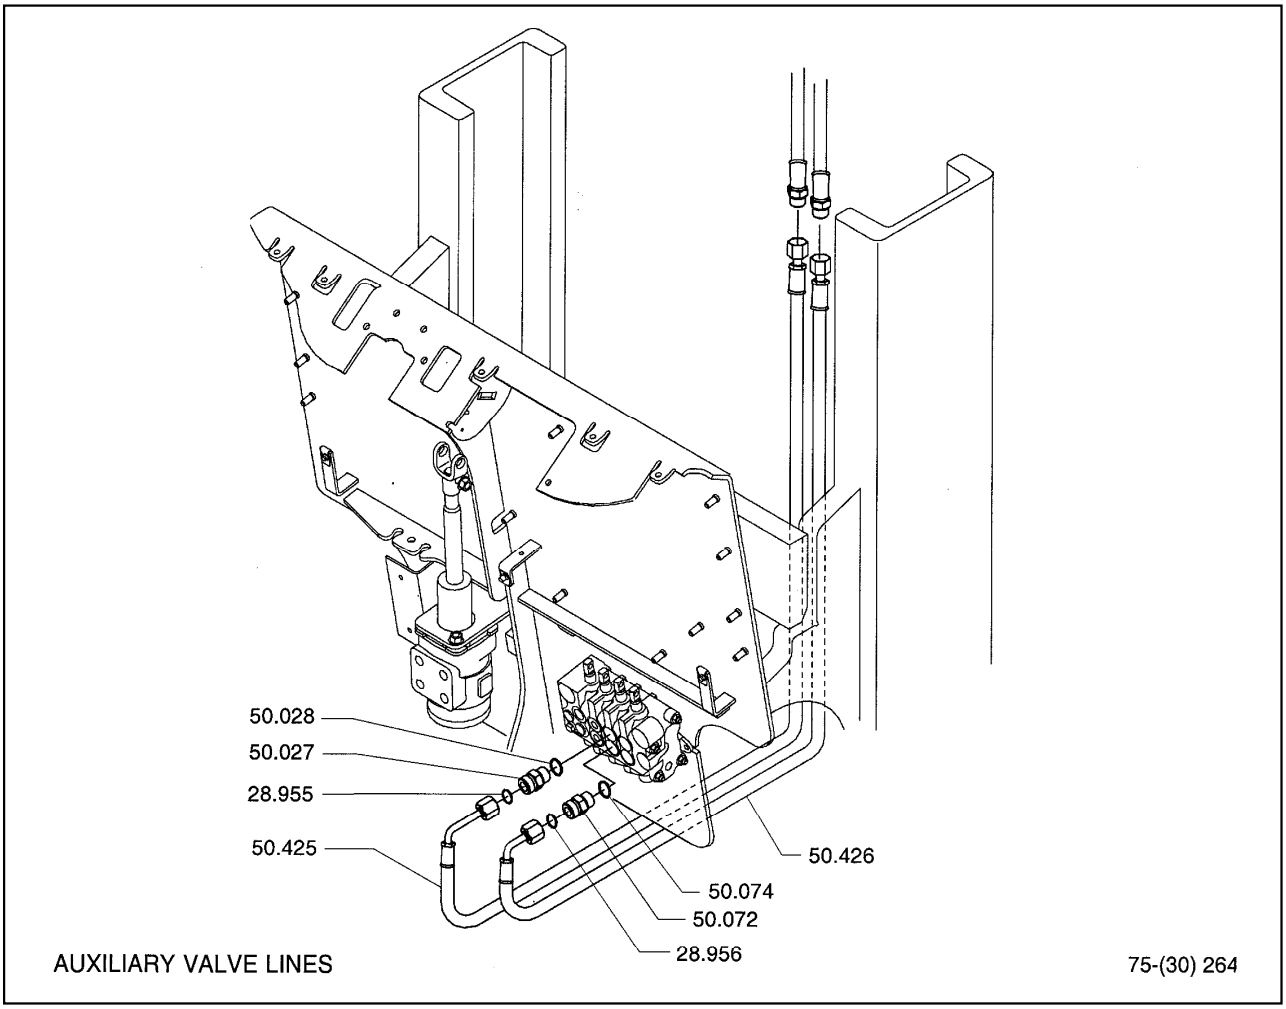

28.955	SEAL, AUXILIARY VALVE "A" PORT FITTING 시일
28.956	SEAL, AUXILIARY VALVE "B" PORT FITTING 시일
50.027	FITTING, 1ST AUXILIARY VALVE A PORT 피팅
50.028	SEAL, 1ST AUXILIARY VALVE "A" PORT FITTING 시일
50.072	FITTING, 1ST AUXILIARY VALVE "B" PORT 피팅
50.074	SEAL, 1ST AUX VALVE "B" PORT FITTING 시일
50.425	LINE, 1ST AUXILIARY VALVE "A" PORT 라인
50.426	LINE, 1ST AUXILIARY VALVE "B" PORT 라인

www.truck-freeworkshop.com/forklift/clark/

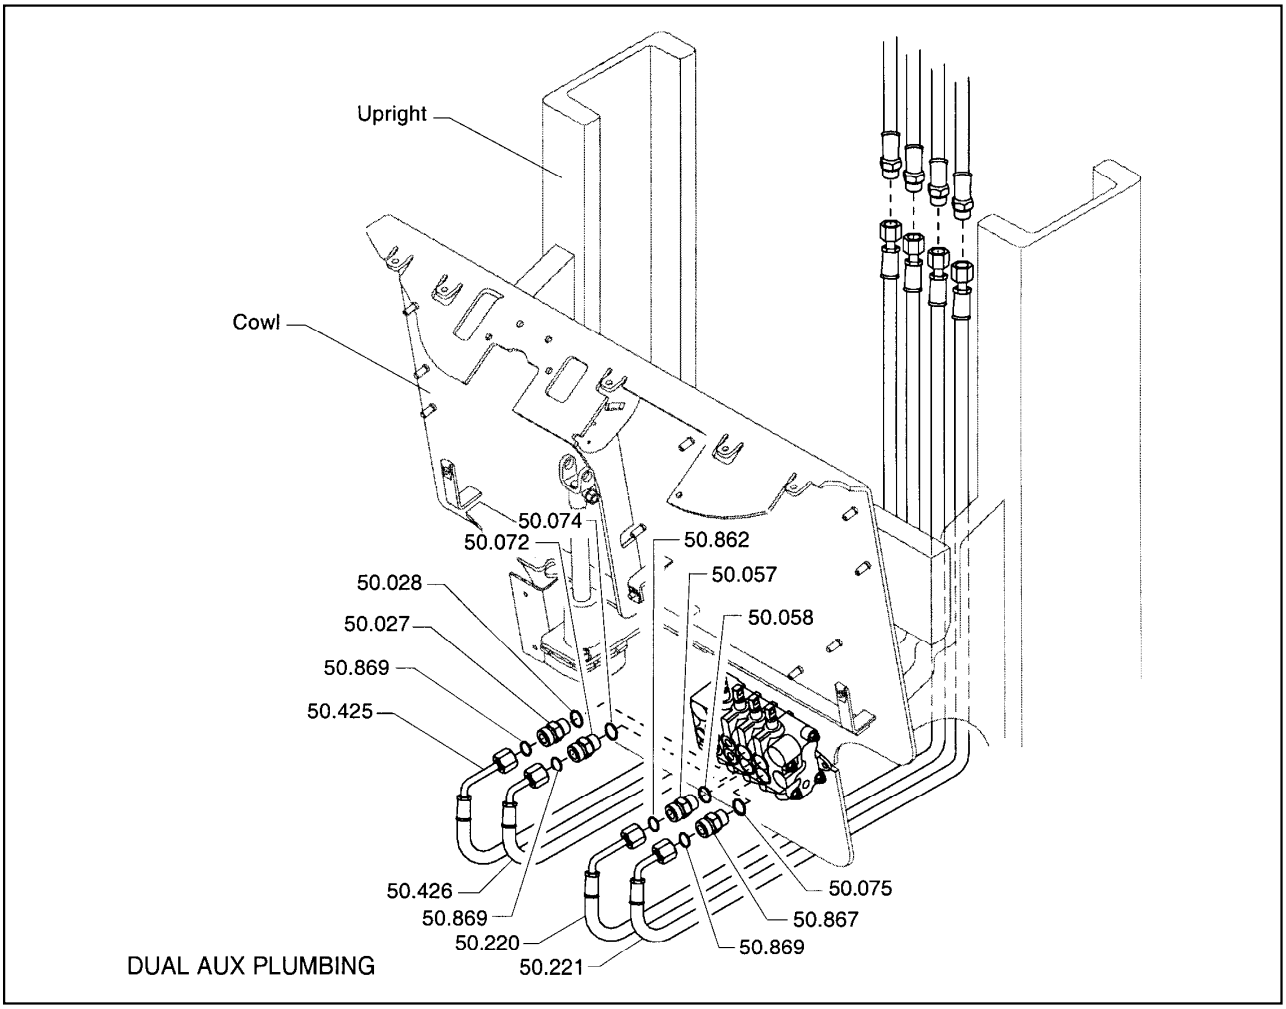

50.027 FITTING, 1ST AUXILIARY VALVE A PORT
피팅

50.028 SEAL, 1ST AUXILIARY VALVE "A" PORT FITTING
시일

50.057 FITTING, 2ND AUX VALVE "A" PORT
피팅

50.058 SEAL, 1ST AUX VALVE "B" PORT FITTING
시일

50.072 FITTING, 1ST AUXILIARY VALVE "B" PORT
피팅

50.074 SEAL, 1ST AUX VALVE "B" PORT FITTING
시일

50.075 SEAL, AUXILIARY VALVE PORT FITTING
시일

50.220 LINE, 2ND AUXILIARY VALVE "A" PORT
라인

50.221 LINE, 2ND AUXILIARY VALVE "B" PORT
라인

www.truck-freeworkshop.com/forklift/clark/

50.425	LINE, 1ST AUXILIARY VALVE "A" PORT 라인
50.426	LINE, 1ST AUXILIARY VALVE "B" PORT 라인
50.862	SEAL, AUXILIARY VALVE A PORT 시일
50.867	FITTING, AUXILIARY VALVE B PORT LINE 피팅
50.869	SEAL, AUXILIARY VALVE B PORT 시일

www.truck-freeworkshop.com/forklift/clark/

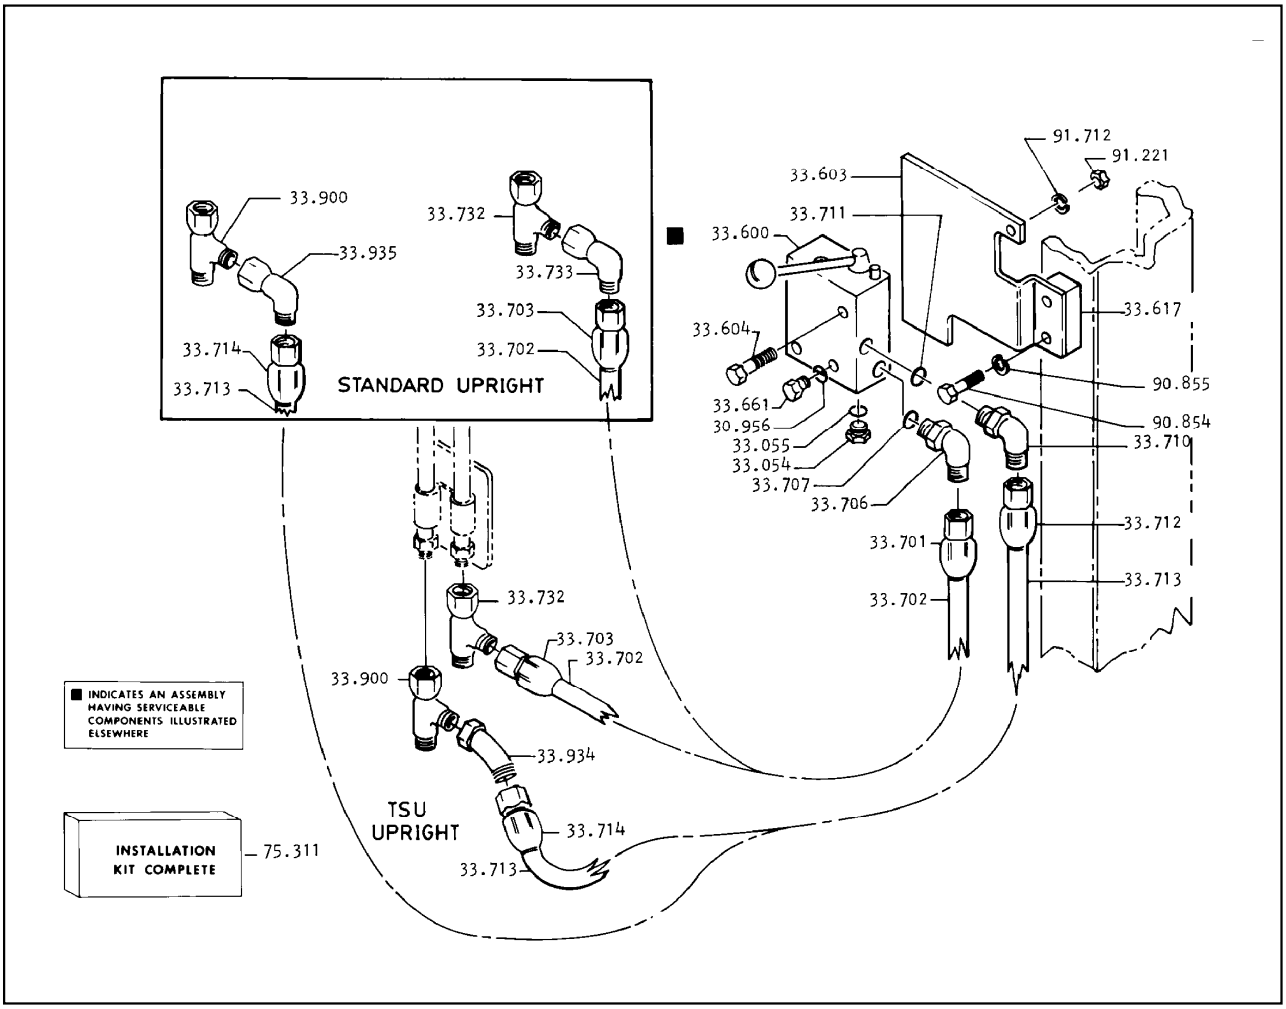

30.956	SEAL, RELIEF VALVE PLUG 시일
33.054	PLUG, RELIEF VALVE PORT 플러그
33.055	SEAL, RELIEF VALVE PORT PLUG 시일
33.600	RELIEF VALVE, DEVICE VARIABLE PRESSURE 릴리프밸브
33.603	BRACKET, DEVICE CARIABLE RELIEF VALVE 브라켓
33.604	FASTENER, DEVICE VARIABLE RELIEF VALVE 패스너
33.617	SPACER, DEV VARIABLE RELIEF VAL BRKT 스페이서
33.661	FITTING, DEVICE RELIEF VALVE OUTLET PORT 피팅
33.701	COUPLING, DEVICE RELIEF VALVE INLET LINE 커플링
33.702	LINE, DEVICE RELIEF VALVE INLET 라인
33.703	COUPLING, DEVICE RELIEF VALVE INLET LINE 커플링
33.706	FITTING, DEVICE RELIEF VALVE INLET PORT 피팅
33.707	SEAL, DEVICE RELIEF VALVE INLET PORT FITTING 시일
33.710	FITTING, DEVICE RELIEF VALVE DISCHARGE PORT 피팅
33.711	SEAL, DEVICE RELIEF VALVE DISCHARGE PORT FTG 시일
33.712	COUPLING, DEVICE RELIEF VALVE DISCHARGE HOSE 커플링
33.713	LINE, DEVICE RELIEF VALVE DISCHARGE 라인
33.714	COUPLING, DEVICE RELIEF VALVE DISCHARGE LINE 커플링
33.732	FITTING, DEVICE RELIEF VALVE INLET 피팅
33.733	FITTING, DEVICE RELIEF VALVE INLET 피팅
33.900	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.934	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.934	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.935	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
75.311	KIT, RELIEF VALVE INSTALLATION 킷
90.854	BOLT, DEVICE MOUNTING BRACKET FASTENER 볼트
90.855	LOCKWASHER, DEVICE MOUNTING BRACKET FASTENER 로크와셔
91.221	NUT, DEV VARIABLE RELIEF VALVE FASTENER 너트
91.712	LOCKWASHER, DEVICE RELIEF VALVE FASTENER 로크와셔

www.truck-freeworkshop.com/forklift/clark/

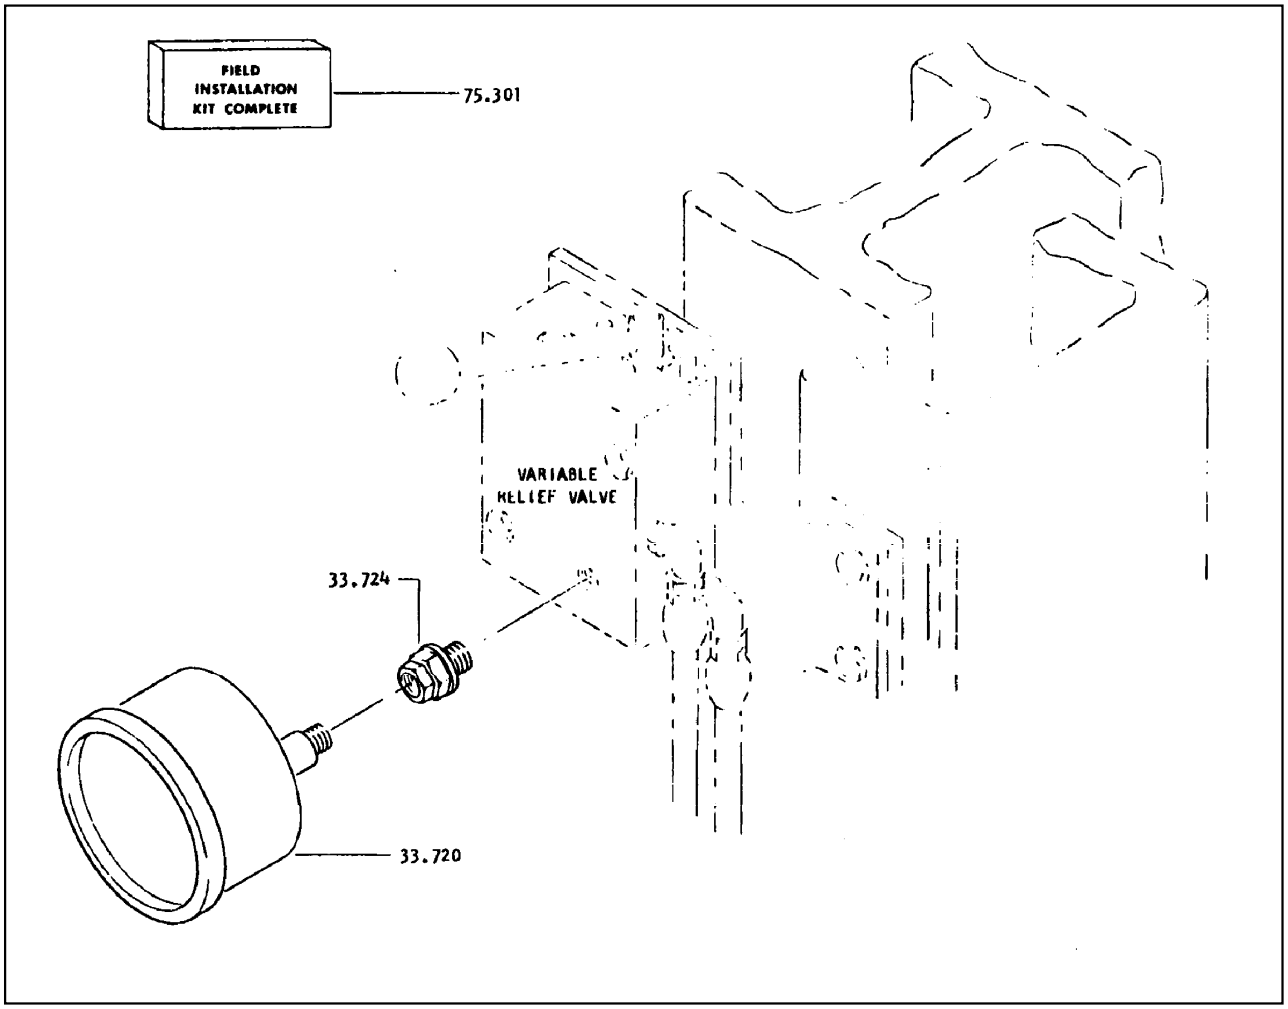

33.720	GAUGE, DEVICE HYDRAULIC PRESSURE 게이지
33.724	FITTING, DEVICE HYD PRESSURE GAUGE 피팅
75.301	DEVICE, HYDRAULIC PRESSURE GAUGE 디바이스

www.truck-freeworkshop.com/forklift/clark/

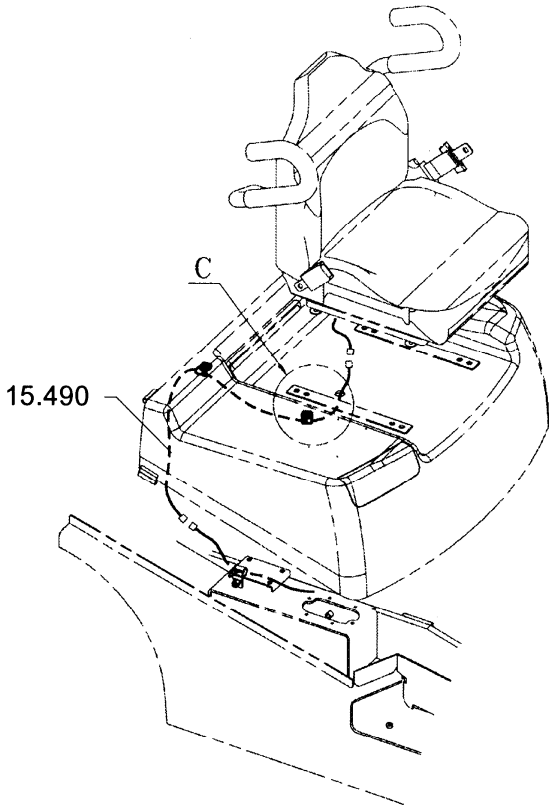

STANDARD SEAT

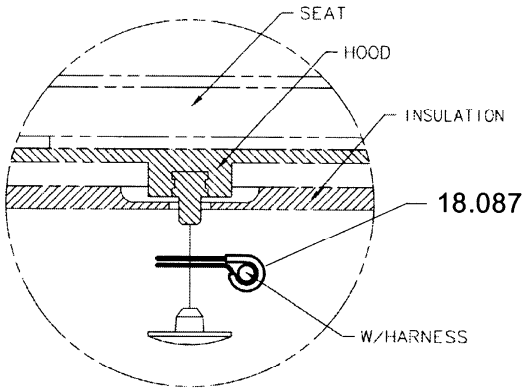

DETAIL C

15.490 HARNESS, SEAT ACTUATED ENGINE SHUTDOWN WIRING
하네스

18.087 CLIP, SEAT SAFETY SWITCH WIRE
클립

www.truck-freeworkshop.com/forklift/clark/

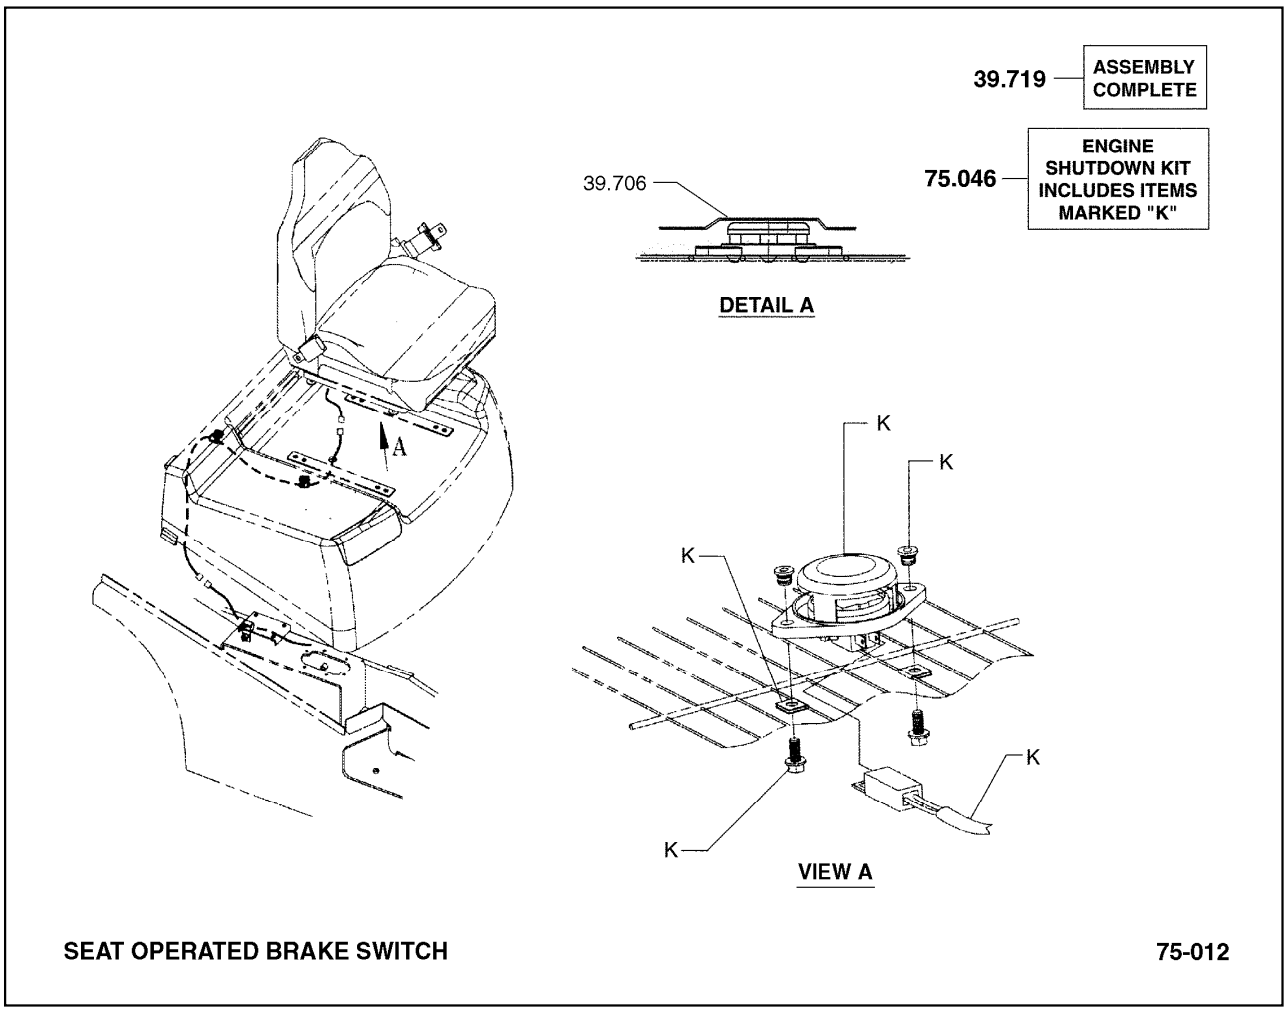

39.706	SUPPORT, SEAT 서포트
39.719	SEAT ASSEMBLY 시트
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 킷