PDSR Troubleshooting

Index

Code	Name (Main Controller)	Page	Name (eps Controller)	Page
6			SERIAL ERR#1	62
11	STALL ROTOR	9		
13	PARAM RESTORE	10	EEPROM KO	63
16			LOGIC FAILURE #4	64
17			LOGIC FAILURE #3	65
18			LOGIC FAILURE #2	66
19			LOGIC FAILURE #1	67

Code	Name (Main Controller)	Page	Name (eps Controller)	Page
32			VMN NOT OK	68
48	EVP DRIVER OPEN	15	MAIN CONT.OPEN	69
49	MANY PUMP REQS	16		
51	TILLER OPEN	17		
52	PUMP I=0 EVER	18		
53			STBY I HIGH	70
56	PUMP I NO ZERO	19		
61	THERMIC SENSOR KO	20	HIGH TEMPERATURE	71
62	TH. PROTECTION	21		
65	BATTERY LOW MOTOR TEMPERATURE	22	MOTOR TEMPERAT	72
67	SENS. MOT. TEMP. KO	24		
68	WAITING FOR NODE	25		

Code	Name (Main Controller)	Page	Name (eps Controller)	Page
70			HIGH CURRENT	73
71	EEPROM KO	26	POWER FAILURE #3	74
72			POWER FAILURE #2	75
73			POWER FAILURE #1	76
74	EV1 DRIVER SHORTED EV2 DRIVER SHORTED EV3 DRIVER SHORTED	27		
75	CONTACT. DRV. EV1 CONTACT. DRV. EV2 CONTACT. DRV. EV3	30		
76	VALVE COIL SHORTED	33		
78	VACC NOT OK	34		
79	PUMP INC START INCORRECT START	35		
80	FORW + BACK	45		

Code	Name (Main Controller)	Page	Name (eps Controller)	Page
83			BAD ENCODER SIGN	77
84			STEER SENSOR KO	78
85	VACC OUT RANGE	50		
89	PUMP VACC NOT OK	51		
90	PUMP VACC RANGE	52		
92	CURRENT GAIN	53		
99	SLIP PROFILE	54	INPUT ERROR#1	79
212			MICRO SLAVE #8	80
218			CLOCK PAL NOT KO	81
219			STEPPER MOTOR MISM	82
220			MOTOR LOCKED	83
221			MICRO SLAVE #4	84
222			FB POT LOCKED	85
223			JERKING FB POT	86
225			CURRENT GAIN	87
226			NO SYNC	88
227			SLAVE COM. ERROR	89

Code	Name (Main Controller)	Name (eps Controller)	Page
228		POSITION ERROR	90
237		WAITING DATA	91
238		EPS NOT ALIGNED	97
239		WAITING FOR TRACTION	98
241		ENCODER ERROR	99
242		Q LINE SENSOR KO	100
243		D LINE SENSOR KO	101
244		GAIN EEPROM KO	102

Code	Name (Main Controller)	Name (eps Controller)	Page
246		MICRO SLAVE KO	103
247		CAN BUS KO	104
248		S.P OUT OF RANGE	105
249		F.B OUT OF RANGE	106
250		MICRO SLAVE	107
251		KM OPEN	108
252		KS OPEN	109
253		KM CLOSED	110
254		KS CLOSED	111

Appendix A: Parts Photo ---------- Page 112-115
Appendix B: Check Wires and Cables detail ---------- Page 116

Main Controller

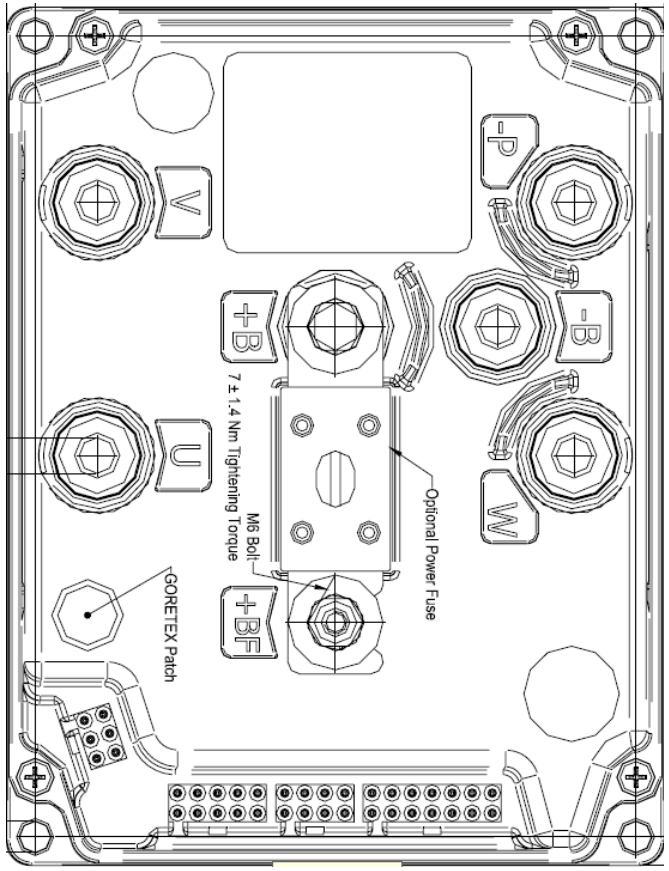

ALARM #11 on NODE #2 STALL ROTOR

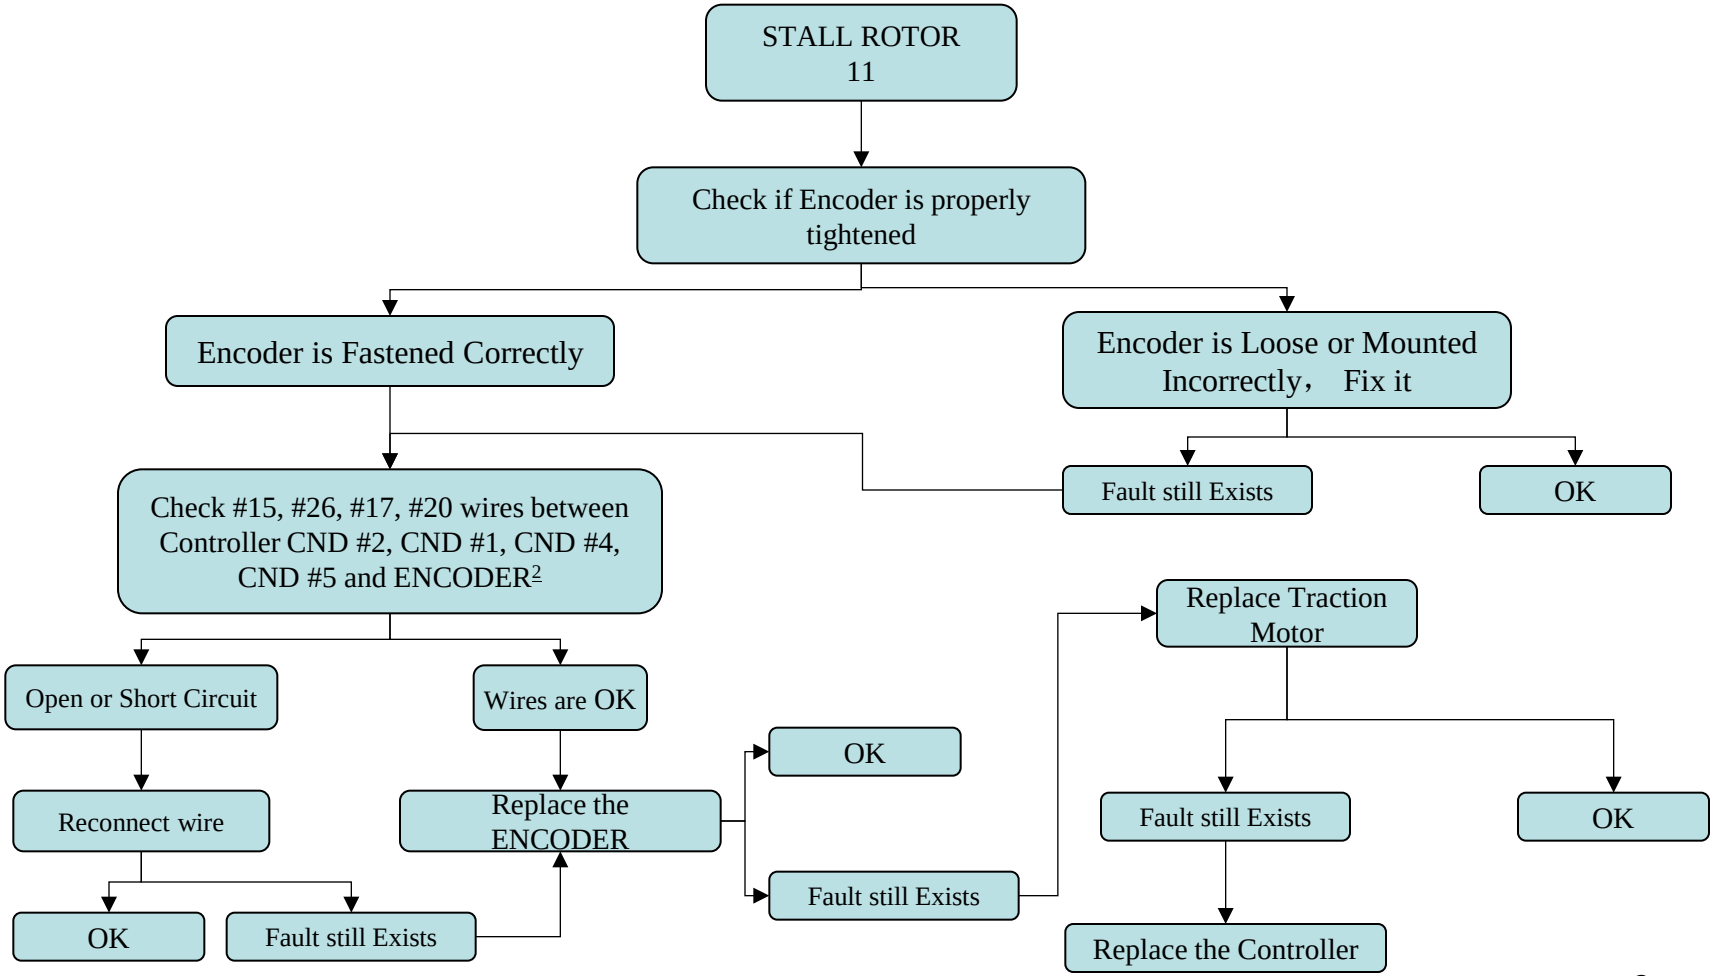

ALARM #13 on NODE #2 PARAM RESTORE

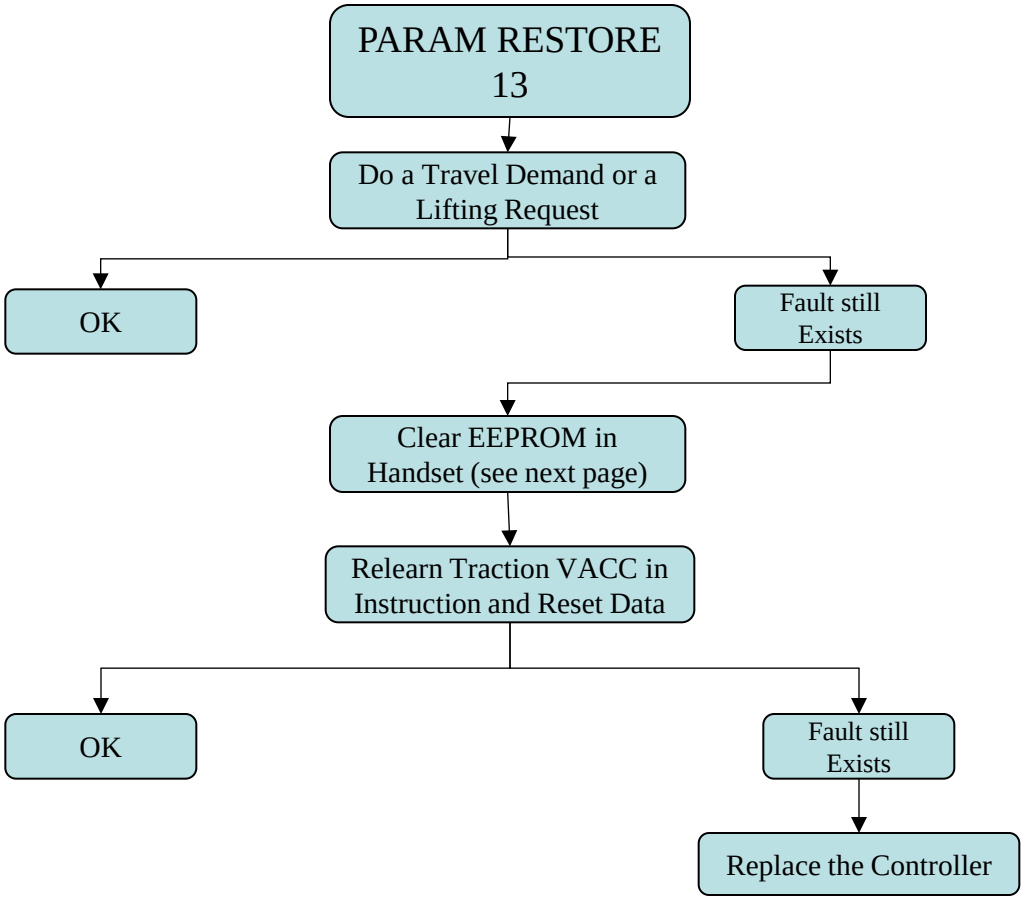

Clear Eeprom in Handset

Turn on ZAPI Handset

Push and hold the power button for 3s

Cons AFG ZP021*

The Display will show:

Press ^ or v button until CAN CONSOLE shows on the display

Cons AFG ZP021*
CAN CONSOLE

The Display will show :

Press OK to go into the CANCONSOLE Menu

The Display will show:

CANCONSOLE
SELECT NODE

Push 》, or 《
To select Node 2

The Display will show:

SELECT NODE
NODE 2

Press OK to go into the
Traction controller

The Display will show:

ACOT2BESK EP0.45
24V 150A 0H

Press OK to go into the
Main Menu

The Display will show:

Main Menu

Press ^ or v button until CLEAR EEPROM on the display

The Display will show:

MAIN MENU
CLEAR EEPROM

Press OK to go into the CLEAR EEPROM function

The Display will ask:
ARE YOU SURE?

ARE YOU SURE?
YES= OK NO=ESC

Press OK to CLEAR EEPROM

The display will show:

EEPROM CLEARED!
KEY OFF, PLEASE

Rekey truck, and restart handset

ALARM #48 on NODE #2 EVP DRIVER OPEN

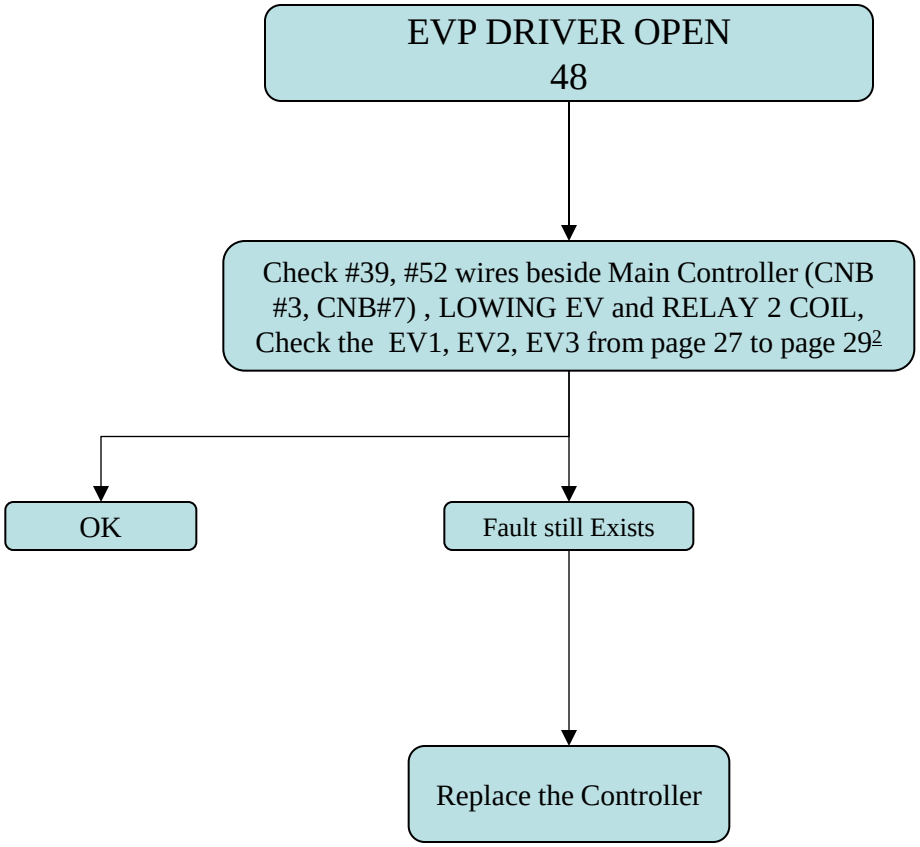

ALARM #49 on NODE #2 MANY PUMP REQS

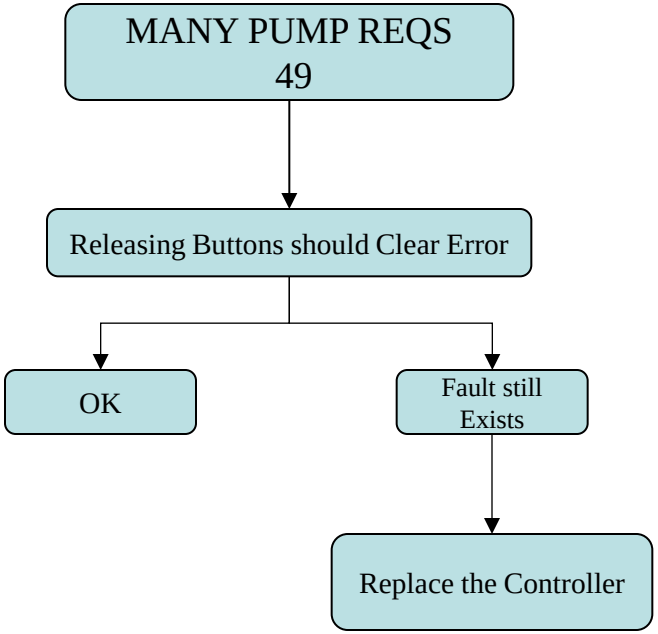

ALARM #51 on NODE #2 TILLER OPEN

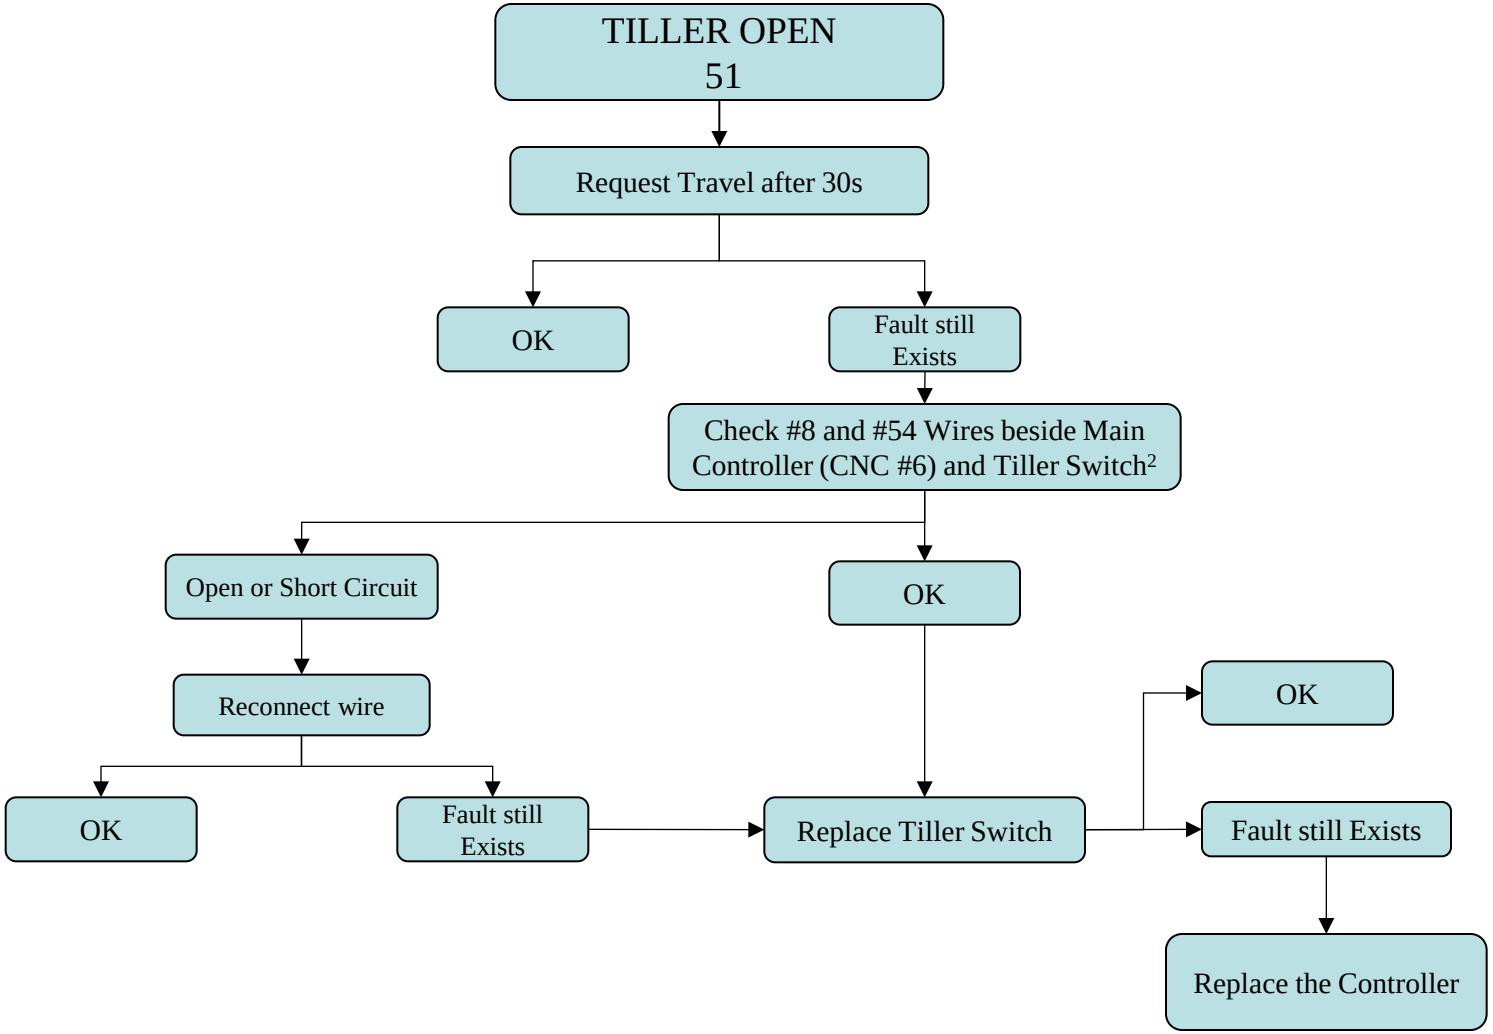

ALARM #52 on NODE #2 PUMP I=0 EVER

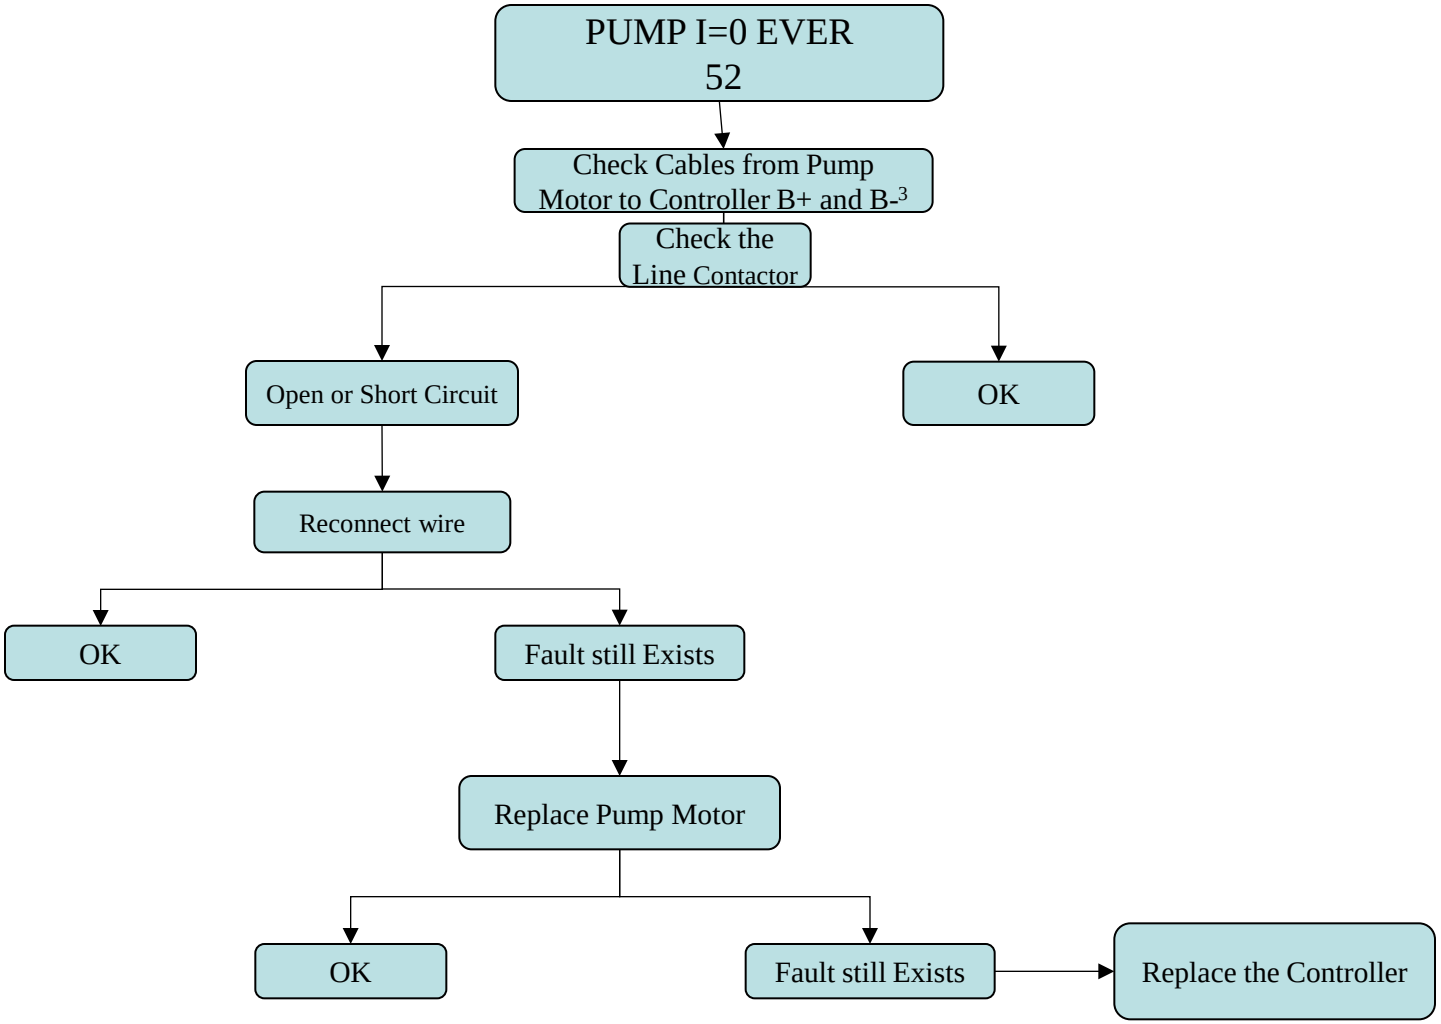

ALARM #56 on NODE #2 PUMP I NO ZERO

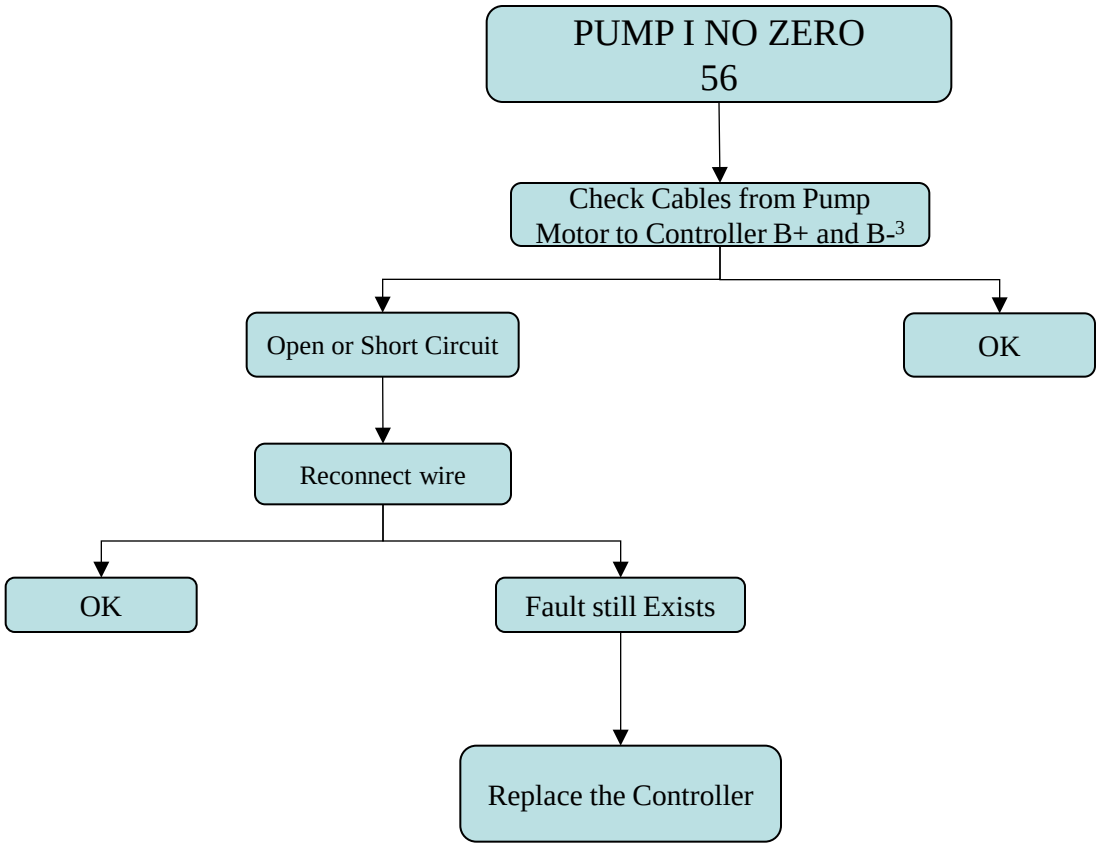

ALARM #61 on NODE #2 THERMIC SENSOR KO

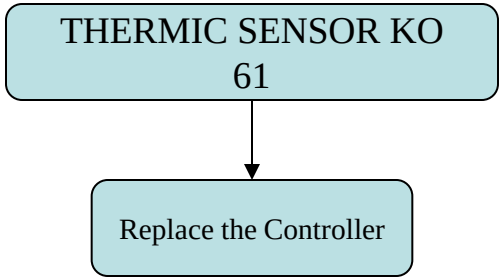

ALARM #62 on NODE #2 TH. PROTECTION

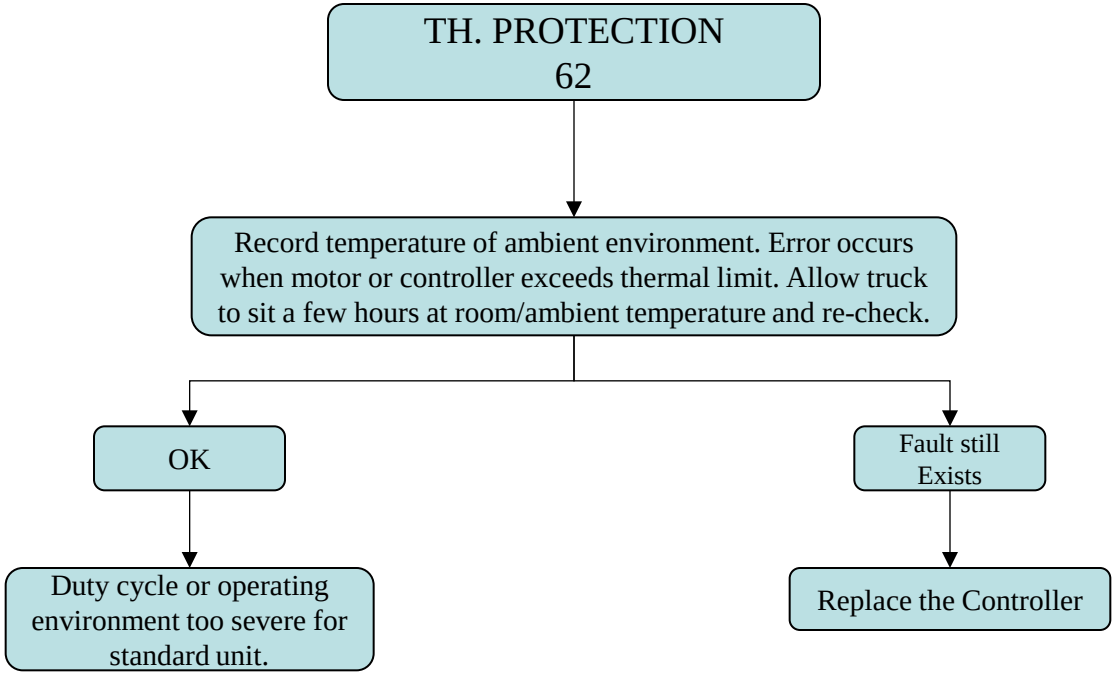

ALARM #65 on NODE #2 BATTERY LOW

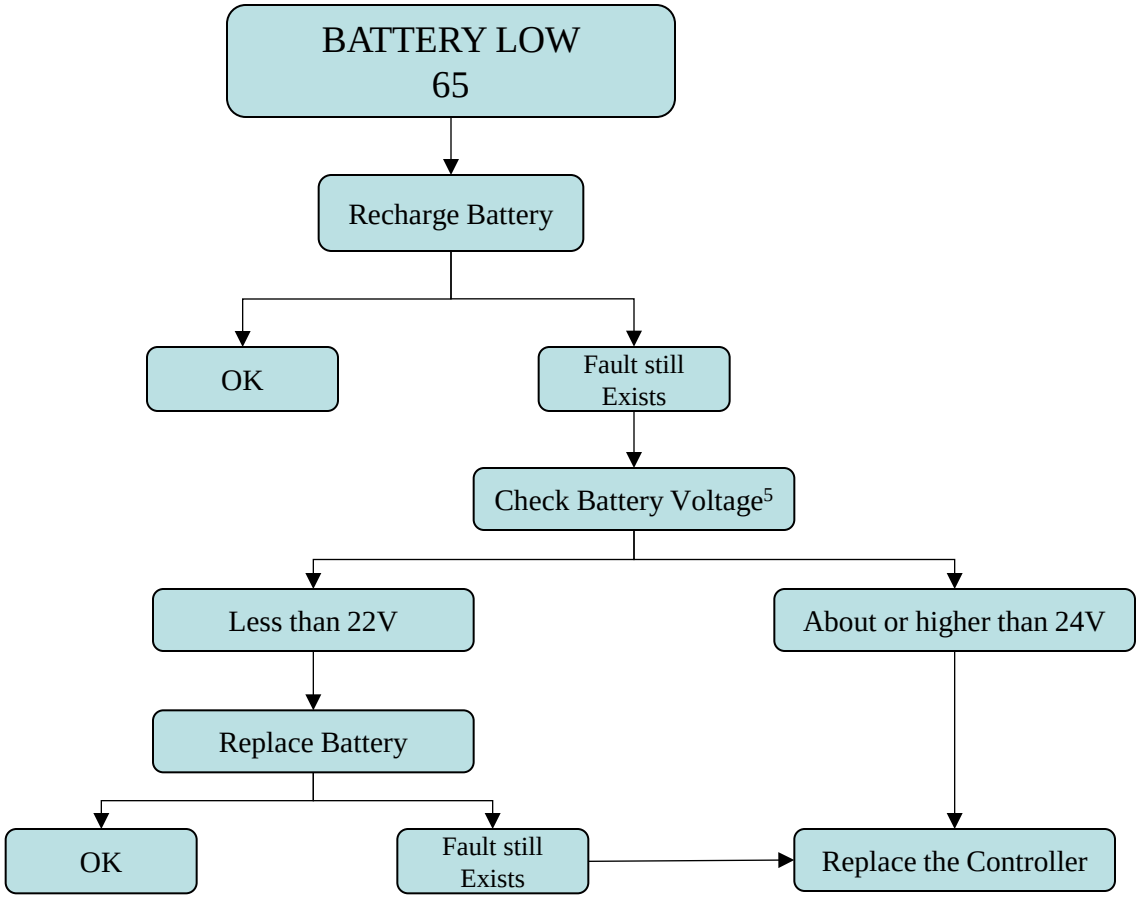

ALARM #65 on NODE #2 MOTOR TEMPERAT

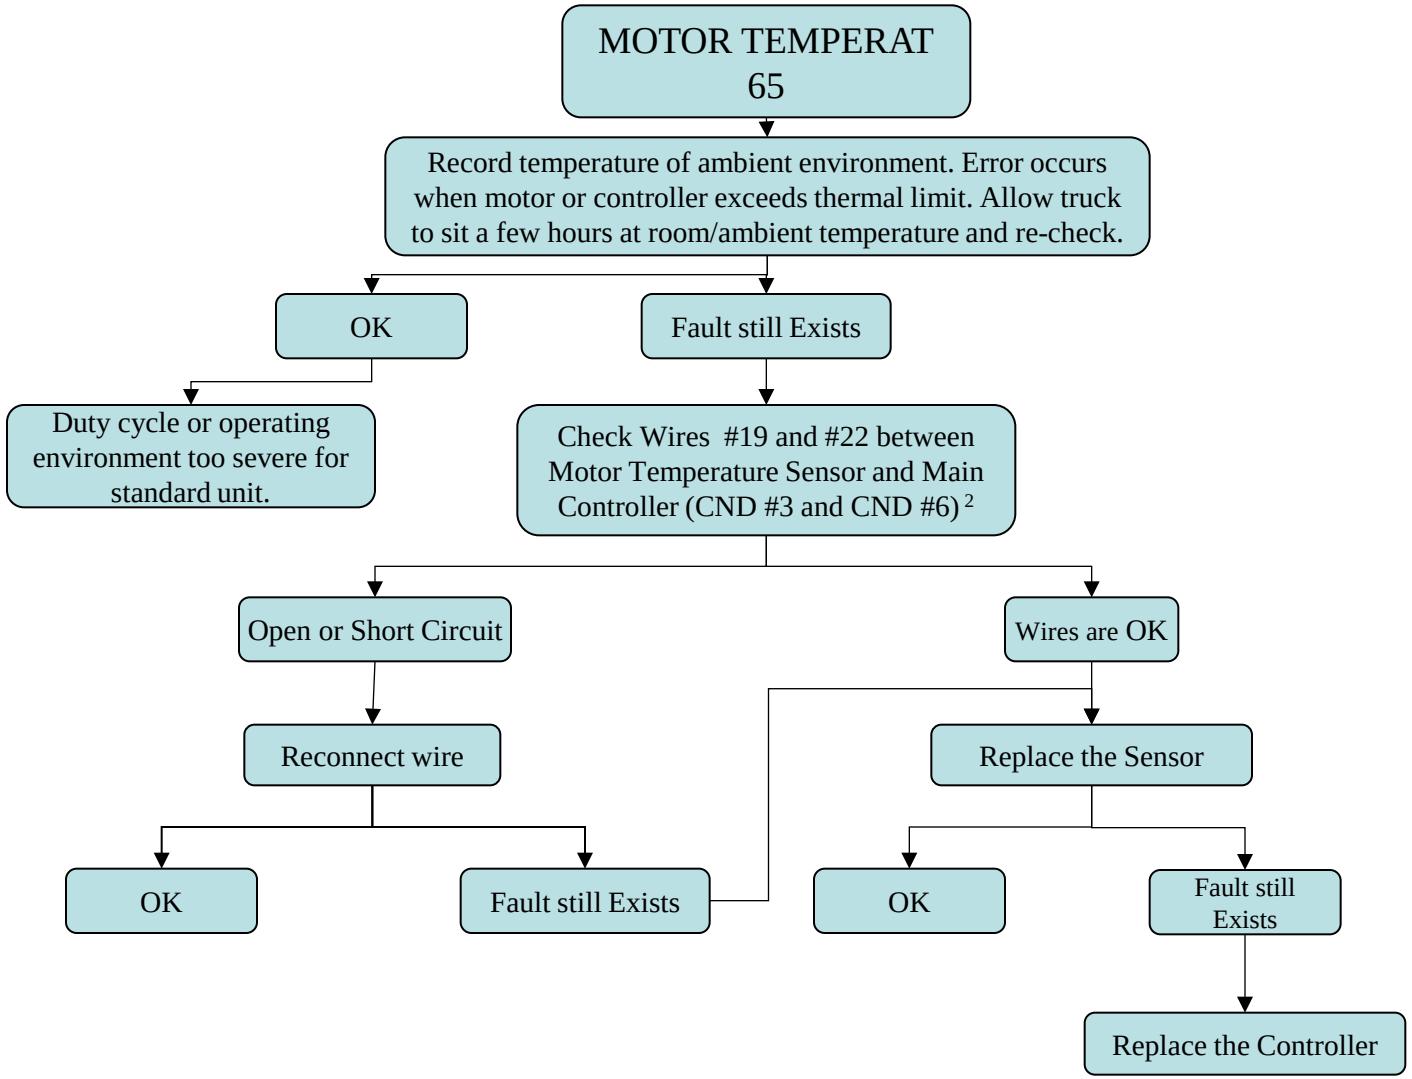

ALARM #67 on NODE #2 SENS. MOT. TEMP. KO

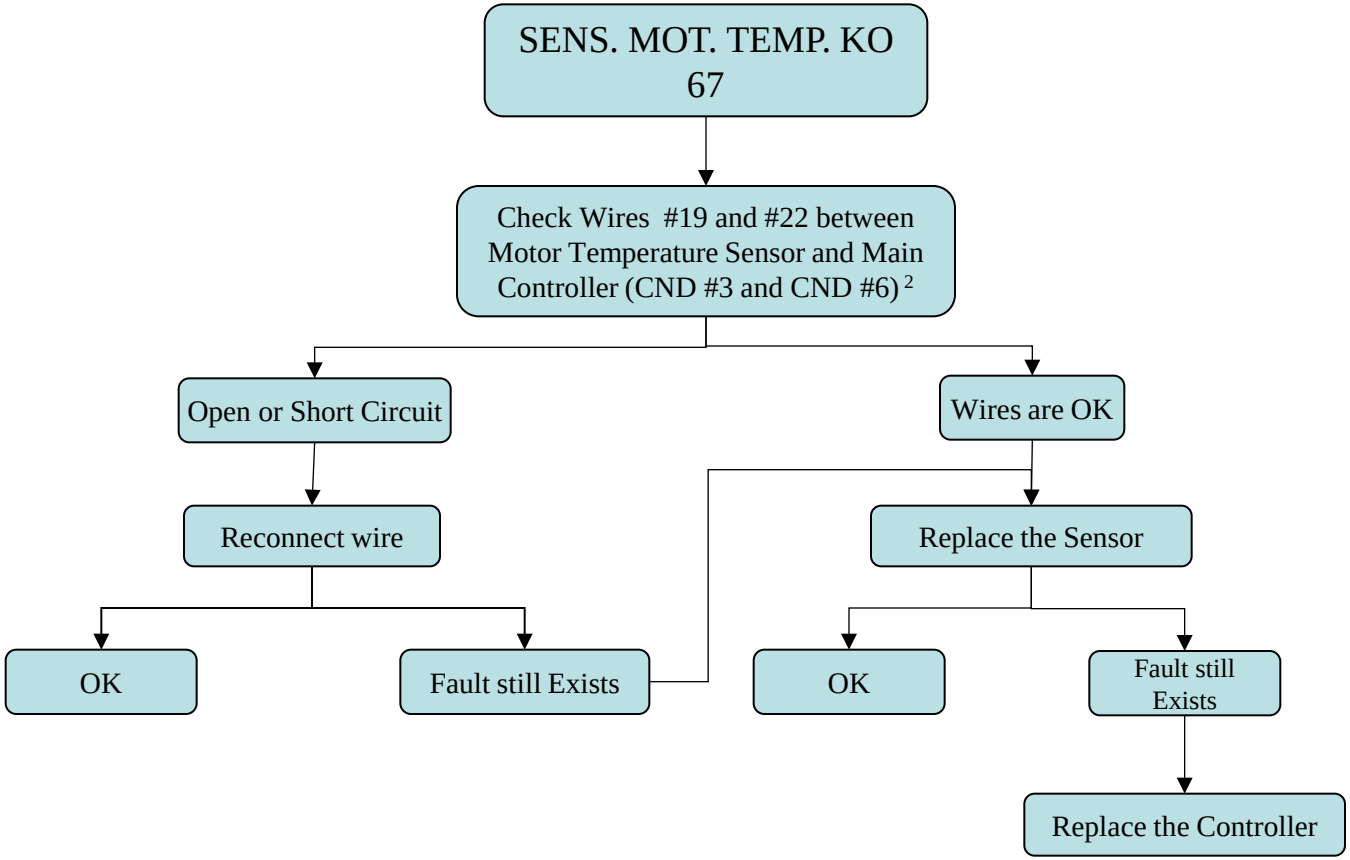

ALARM #68 on NODE #2 WAITING FOR NODE

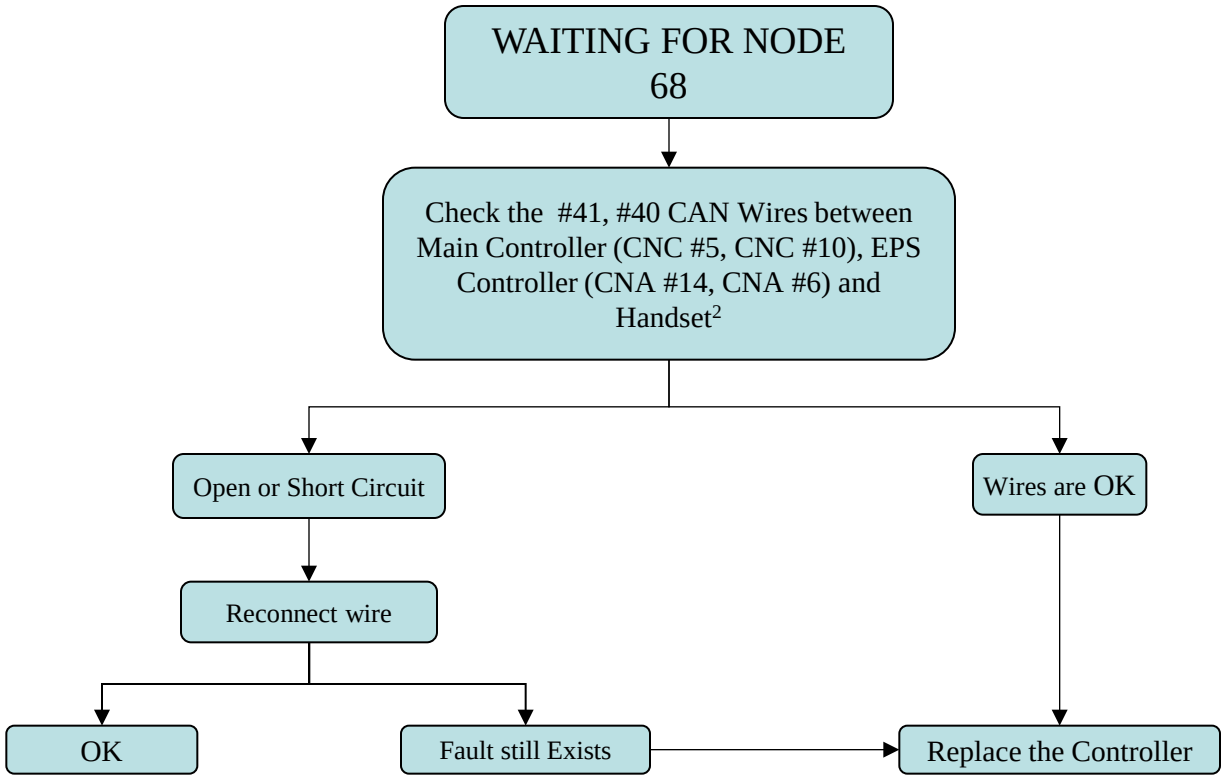

ALARM #71 on NODE #2 EEPROM KO

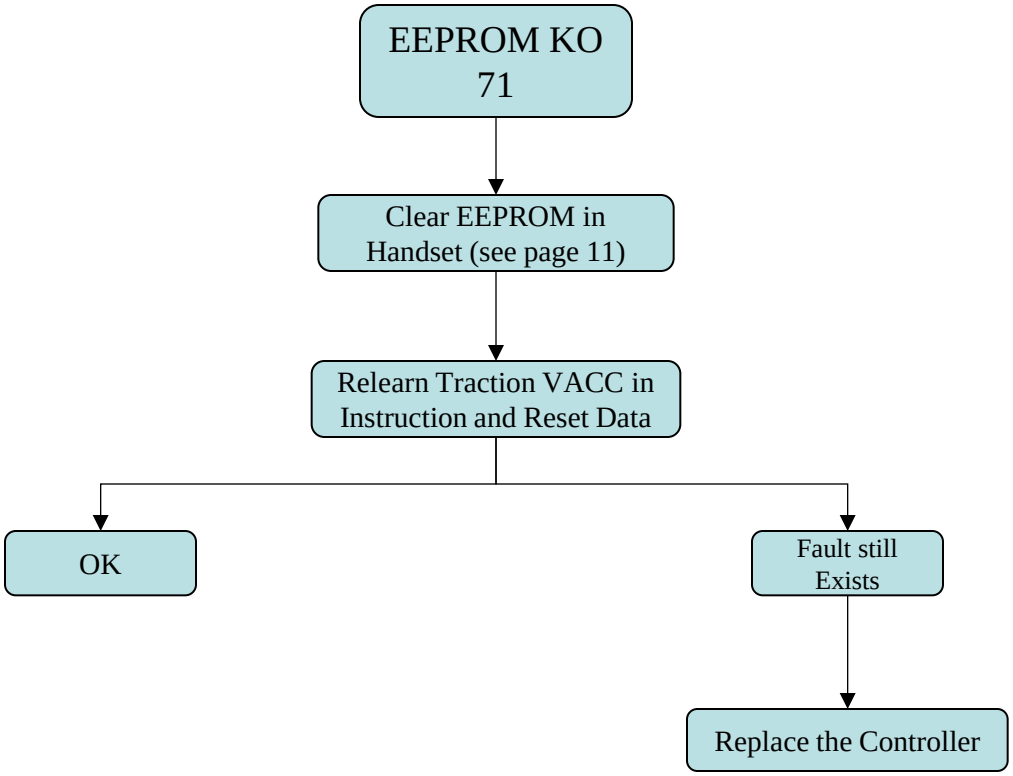

ALARM #74 on NODE #2 EV1 DRIVER SHORTED

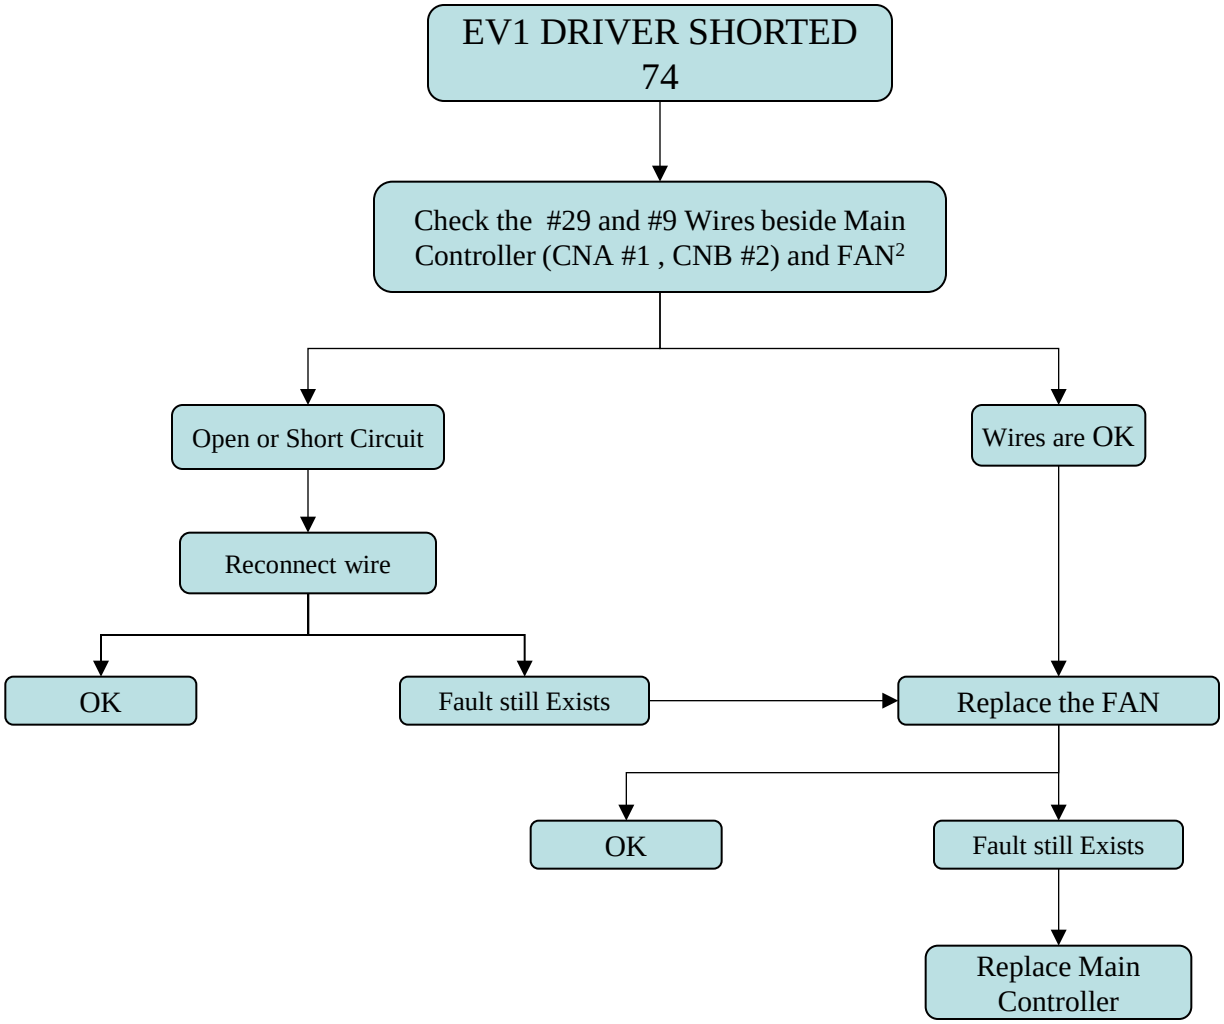

ALARM #74 on NODE #2 EV2 DRIVER SHORTED

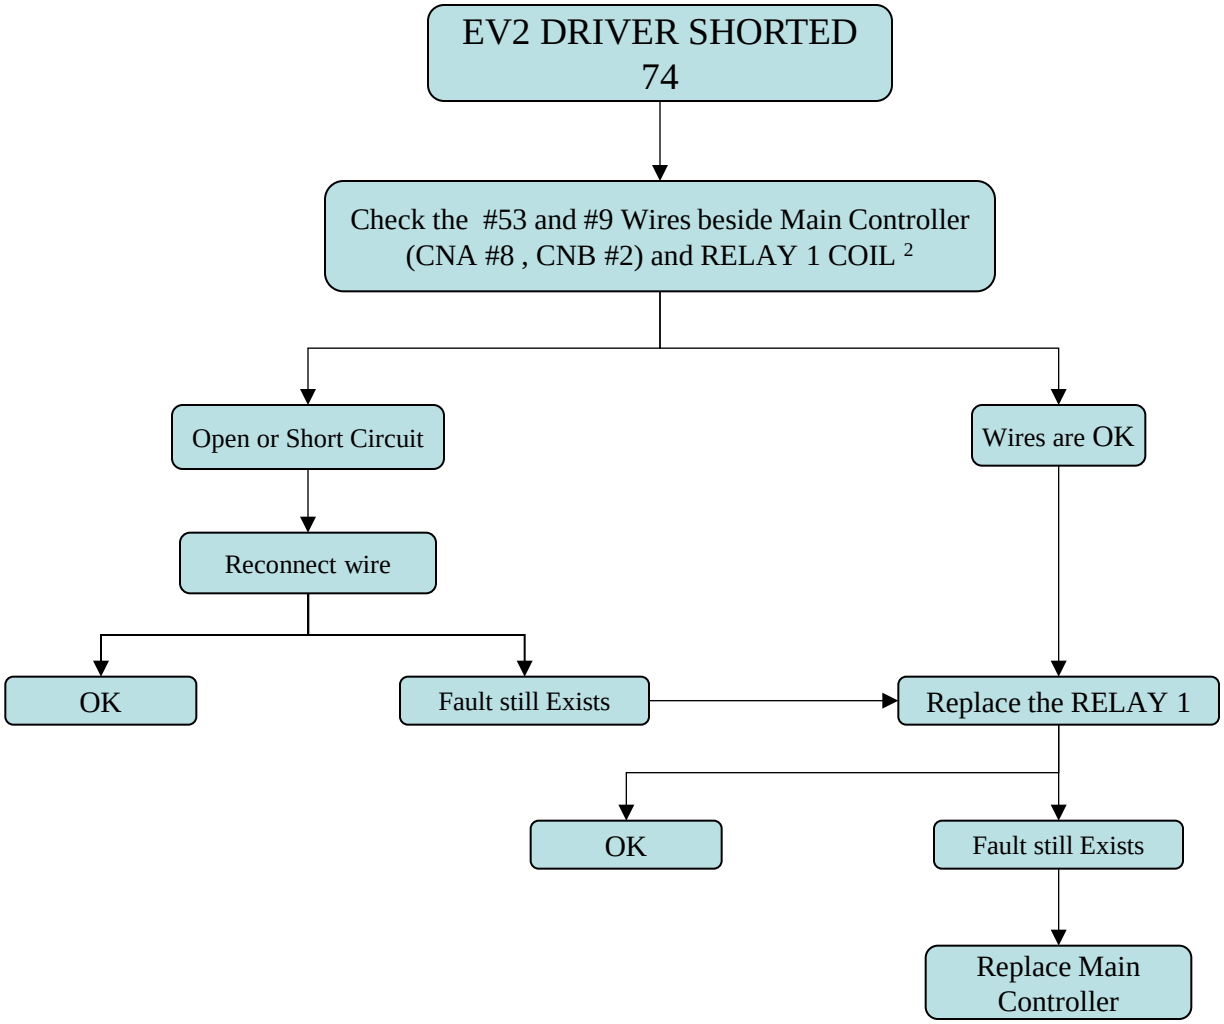

ALARM #74 on NODE #2 EV3 DRIVER SHORTED

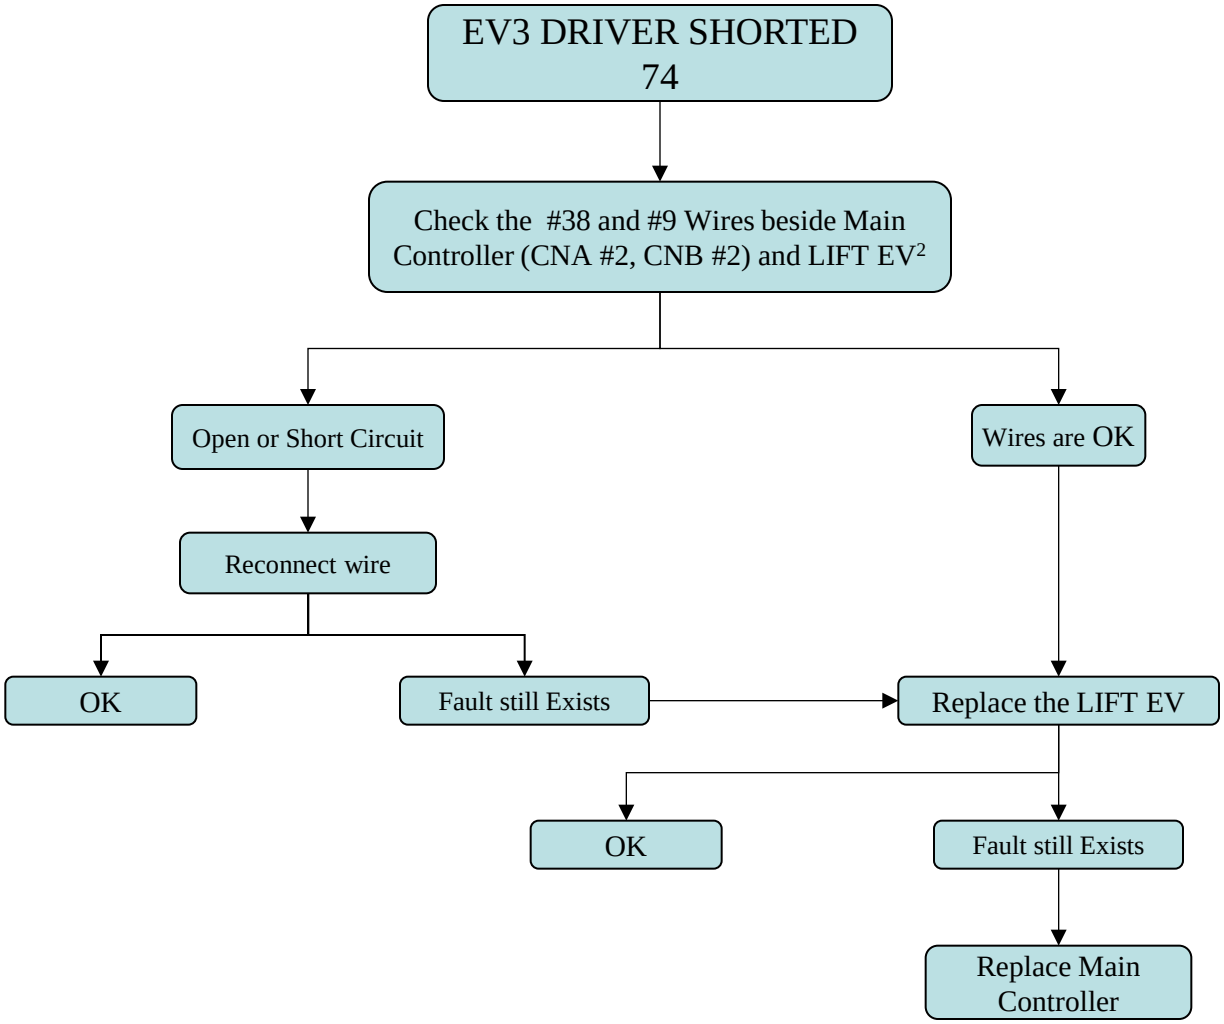

ALARM #75 on NODE #2 CONT. DRV. EV1

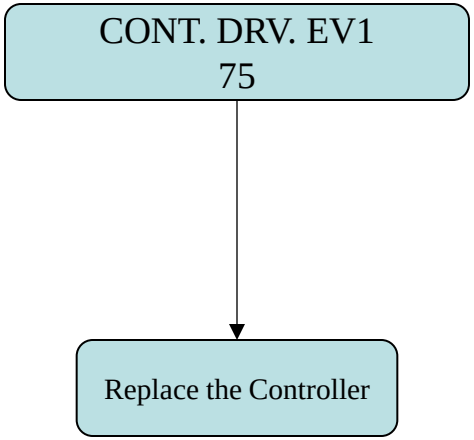

ALARM #75 on NODE #2 CONT. DRV. EV2

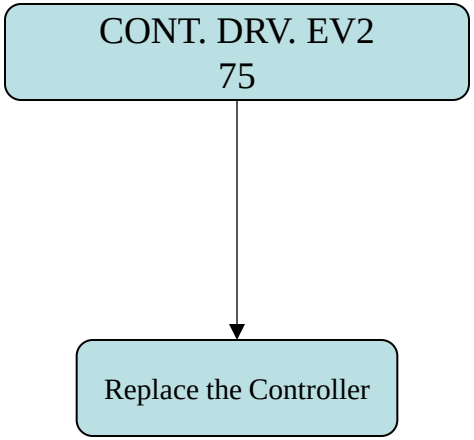

ALARM #75 on NODE #2 CONT. DRV. EV3

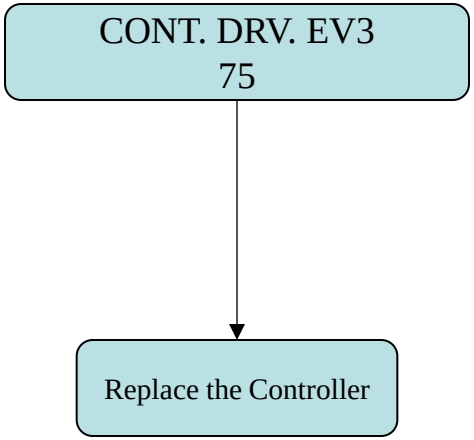

ALARM #76 on NODE #2 VALVE COIL SHORTED

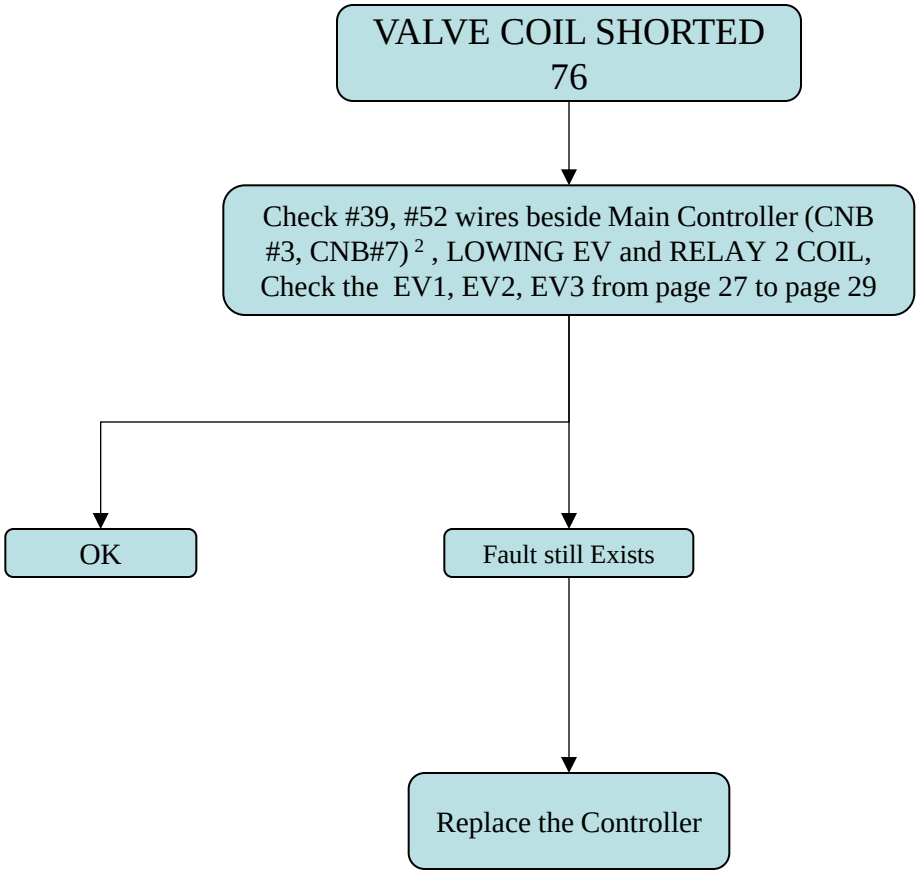

ALARM #78 on NODE #2 VACC NOT OK

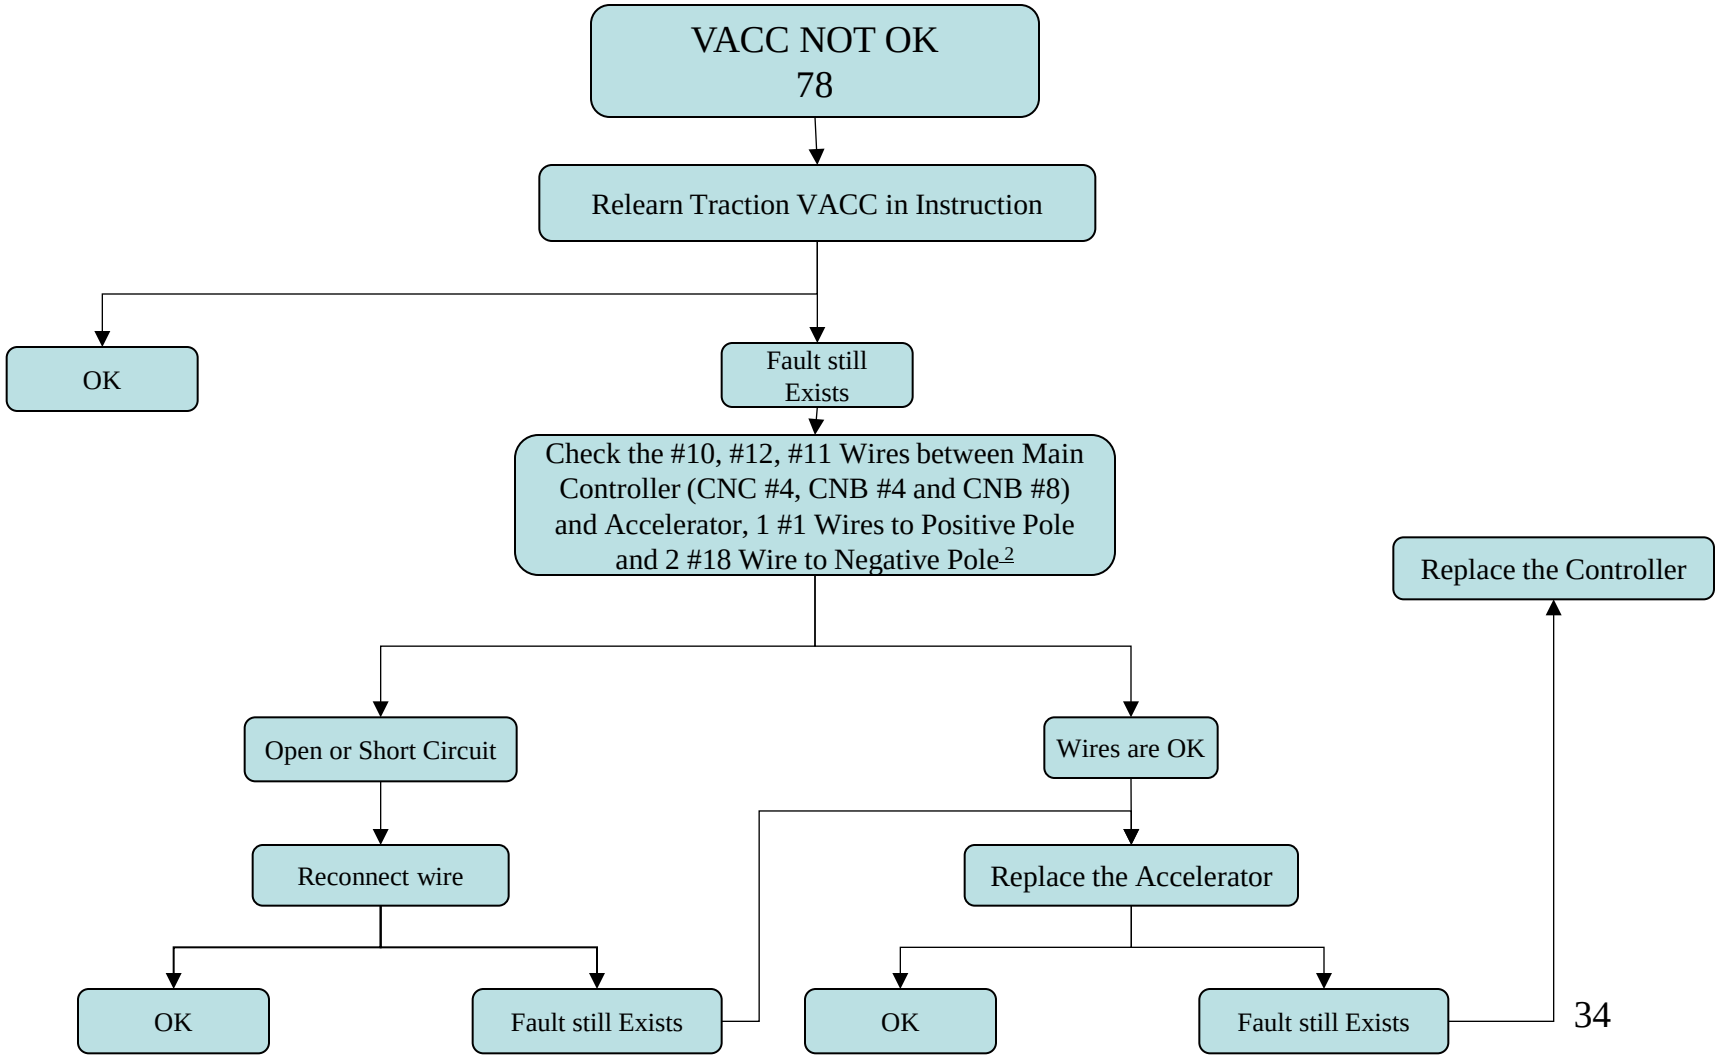

ALARM #79 on NODE #2 PUMP INC START

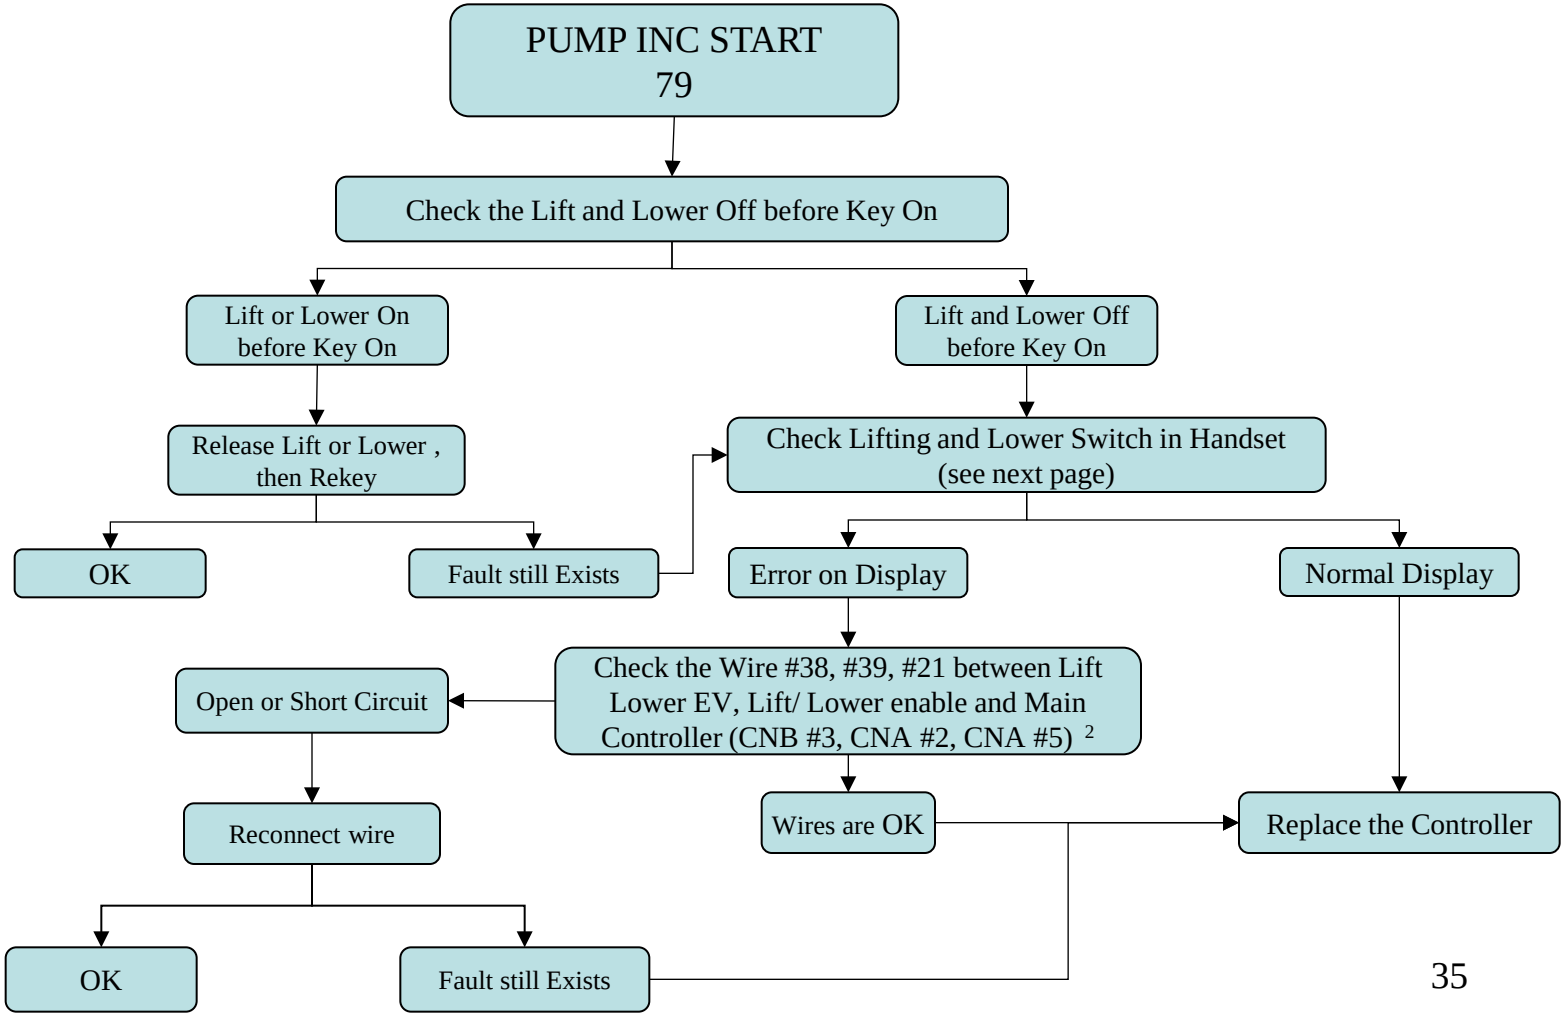

Check Lift and Lower Switch in Handset

Turn on ZAPI Handset

Push and hold the power button for 3s

Cons AFG ZP021*

The Display will show:

Press ^ or v button until CAN CONSOLE shows on the display

Cons AFG ZP021*
CAN CONSOLE

The Display will show :

Press OK to go into the CANCONSOLE Menu

The Display will show:

CANCONSOLE
SELECT NODE

Push 》, or 《
To select Node 2

The Display will show:

SELECT NODE
NODE 2

Press OK to go into the
Traction controller

The Display will show:

ADXT2B 5 EP0.07
24V 240A 0H

Press OK to go into the
Main Menu

The Display will show:

Main Menu

Press ^ or v button until TEST shows on the display

The Display will show:

MAIN MENU
TEST

Press OK to go into the TEST function

The Display will show:

TEST

Press ^ or v button until LIFT SW shows on the display

The display will show:

LIFT EV SW OFF

Press the Lift Switch and hold on

The display will show:

LIFT EV SW ON

Repeat Step for Lower Switch:

LOWER EV SW OFF

LOWER EV SW ON

When finished , press and hold power button for 3s to turn off the Console

ALARM #79 on NODE #2 INCORRECT START

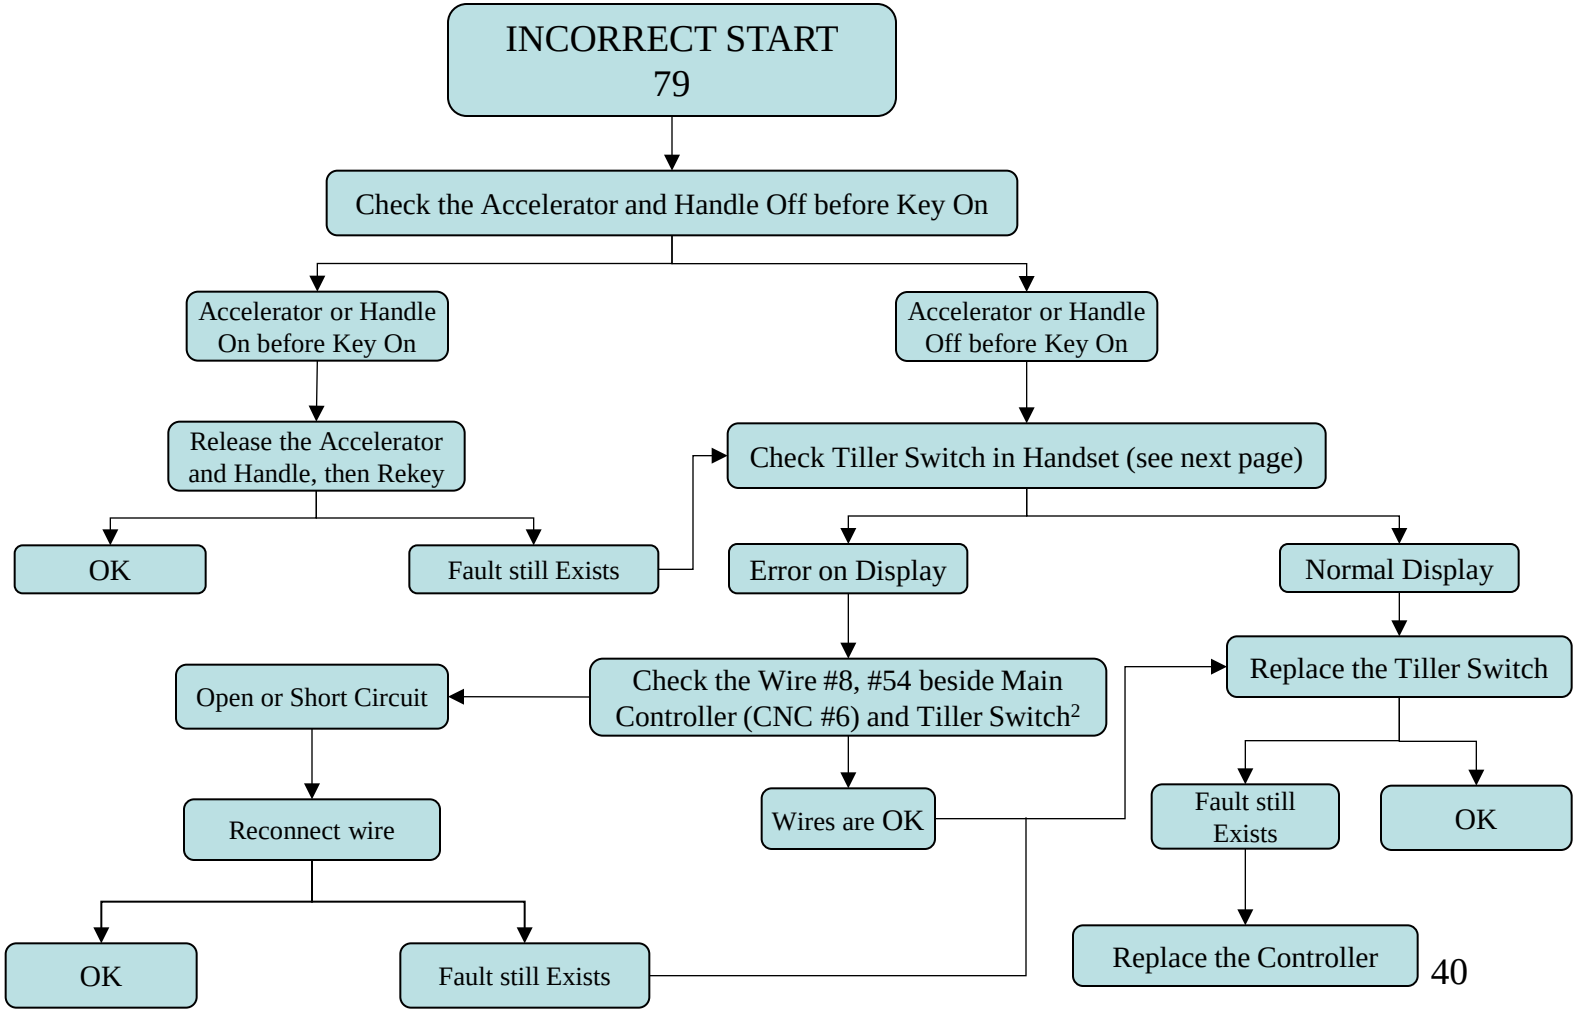

Check Tiller Switch in Handset

Turn on ZAPI Handset

Push and hold the power button for 3s

Cons AFG ZP021*

The Display will show:

Press ^ or v button until CAN CONSOLE shows on the display

Cons AFG ZP021*
CAN CONSOLE

The Display will show :

Press OK to go into the CANCONSOLE Menu

The Display will show:

CANCONSOLE
SELECT NODE

Push 》, or 《
To select Node 2

The Display will show:

SELECT NODE
NODE 2

Press OK to go into the
Traction controller

The Display will show:

ADXT2B 5 EP0.07
24V 240A 0H

Press OK to go into the
Main Menu

The Display will show:

Main Menu

Press ^ or v button until TEST shows on the display

The Display will show:

MAIN MENU
TEST

Press OK to go into the TEST function

The Display will show:

TEST

Press ^ or v button until HANDLE/ SEAT SW shows on the display

The display will show:

HANDLE/ SEAT SW OFF

Pull down the handle, Push the accelerator and hold on

The display will show:

HANDLE/ SEAT SW ON

When finished , press and hold power button for 3s to turn off the Console

ALARM #80 on NODE #2 FORW+BACK

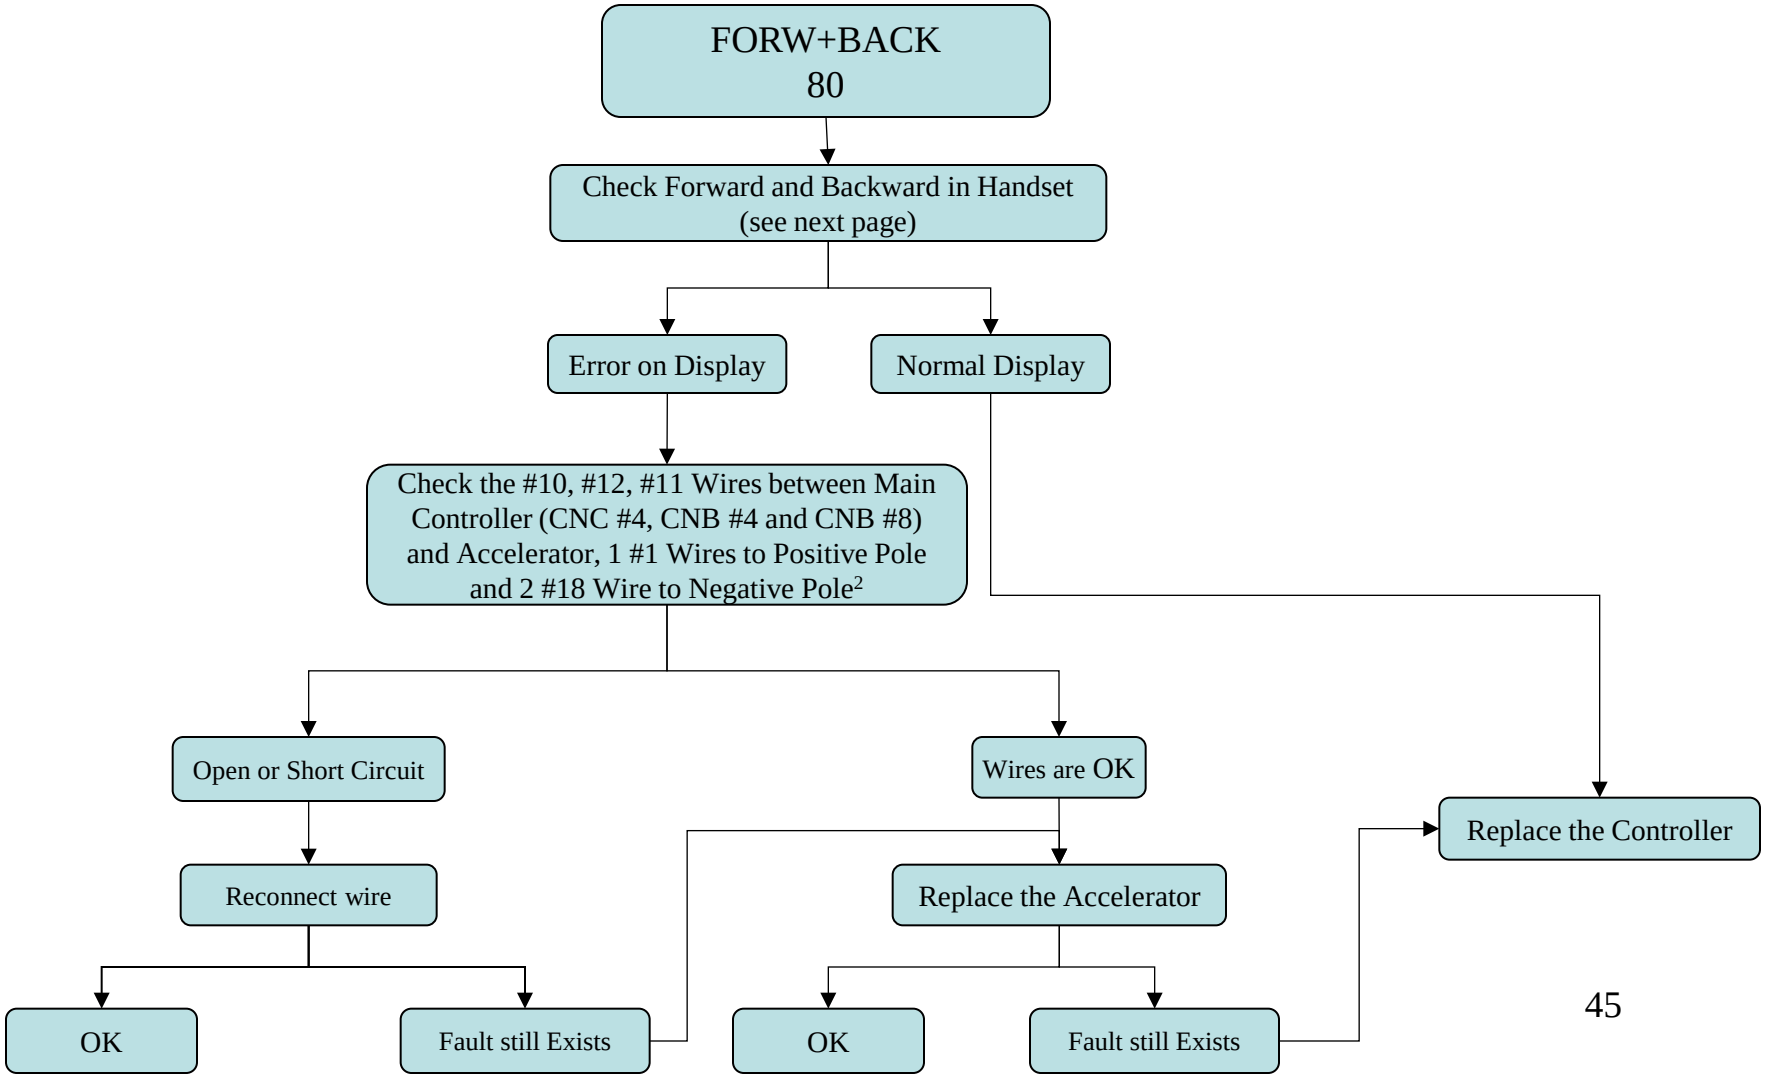

Check Forward and Backward in Handset

Turn on ZAPI Handset

Push and hold the power button for 3s

Cons AFG ZP021*

The Display will show:

Press ^ or v button until CAN CONSOLE shows on the display

Cons AFG ZP021*
CAN CONSOLE

The Display will show :

Press OK to go into the CANCONSOLE Menu

The Display will show:

CANCONSOLE
SELECT NODE

Push 》, or 《
To select Node 2

The Display will show:

SELECT NODE
NODE 2

Press OK to go into the
Traction controller

The Display will show:

ADXT2B 5 EP0.07
24V 240A 0H

Press OK to go into the
Main Menu

The Display will show:

Main Menu

Press ^ or v button until TEST shows on the display

The Display will show:

MAIN MENU
TEST

Press OK to go into the TEST function

The Display will show:

TEST

Press ^ or v button until FORWARD shows on the display

The display will show:

FORWARD OFF

Push the accelerator forward and hold on

The display will show:

FORWARD ON

Repeat step for reverse direction

BACKWARD OFF
BACKWARD ON

When finished , press and hold power button for 3s to turn off the Console

ALARM #85 on NODE #2 VACC OUT RANGE

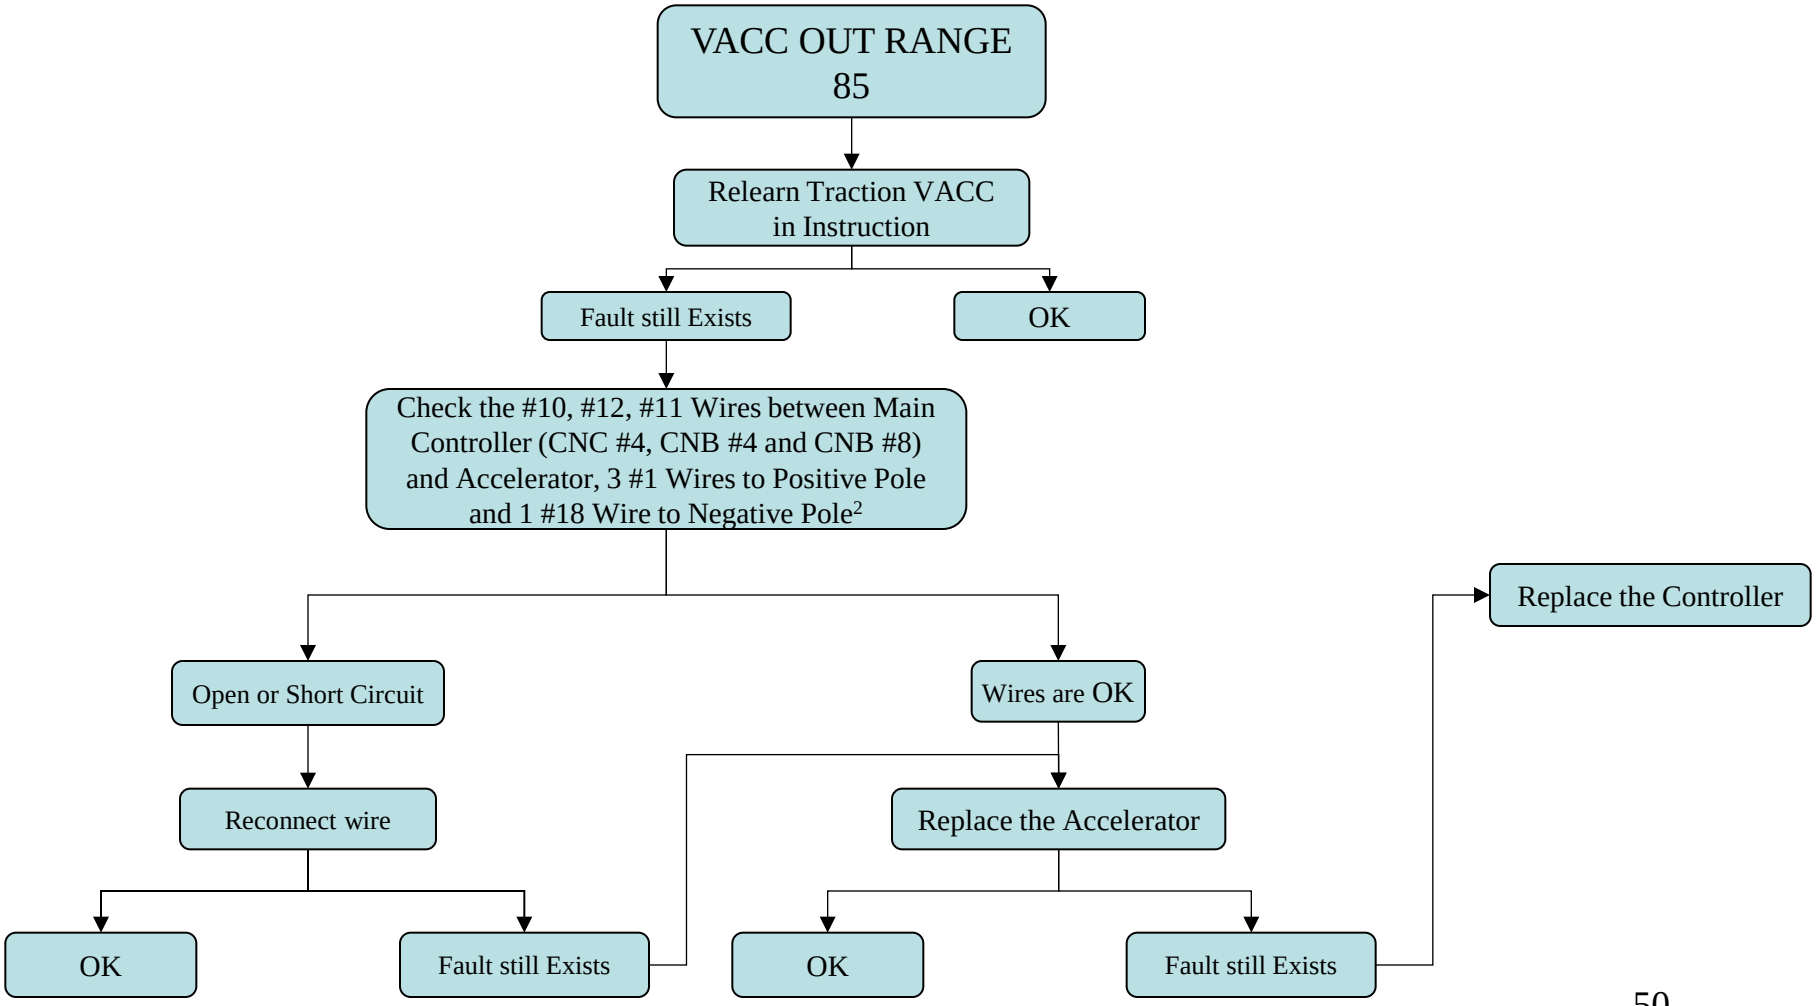

ALARM #89 on NODE #2 PUMP VACC NOT OK

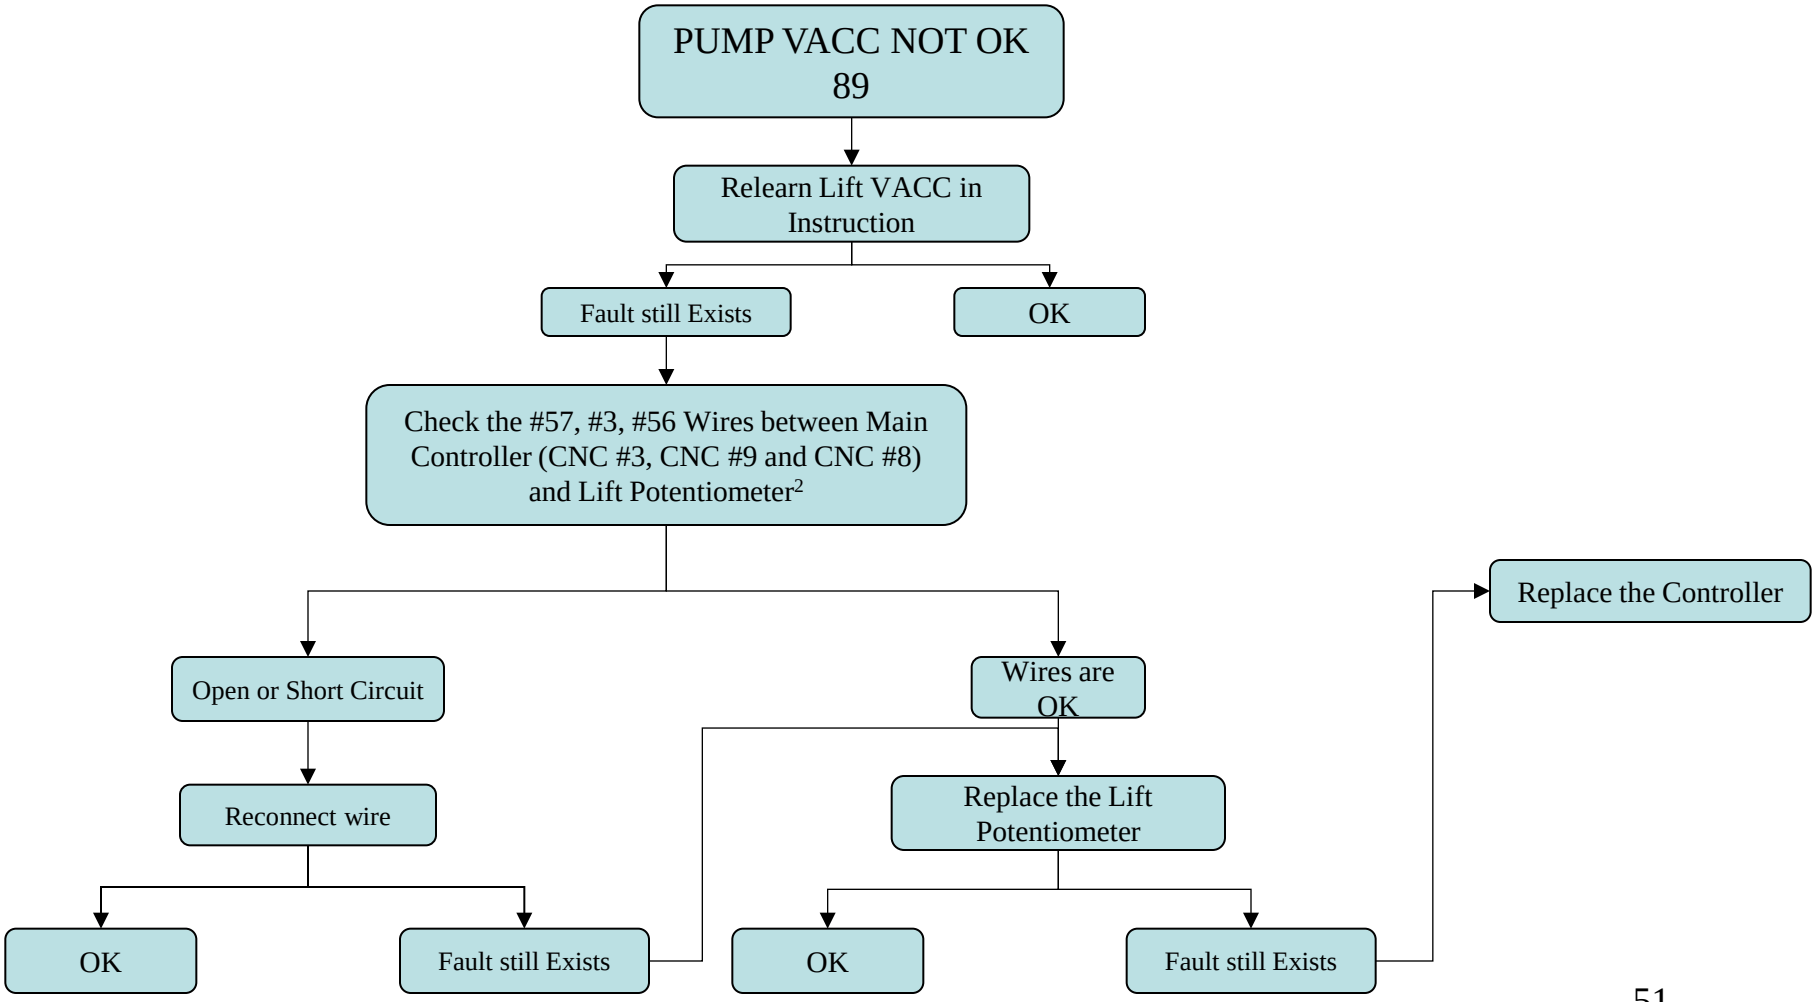

ALARM #90 on NODE #2 PUMP VACC RANGE

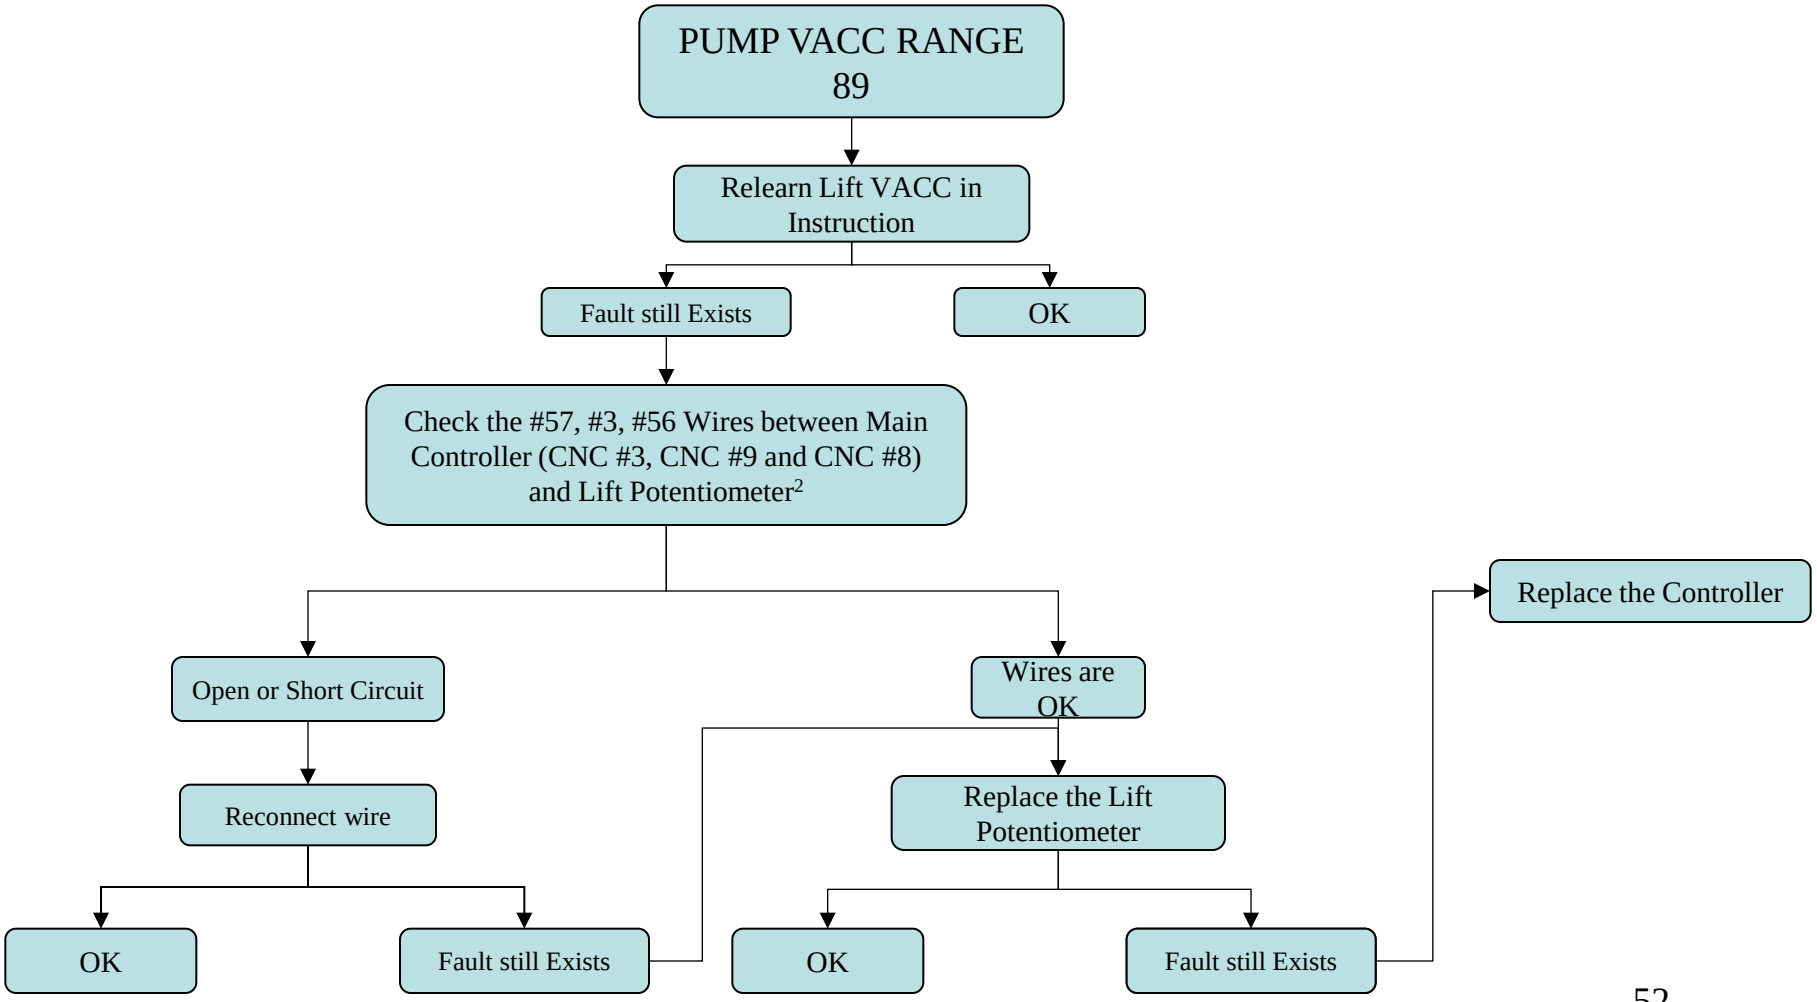

ALARM #92 on NODE #2 CURRENT GAIN

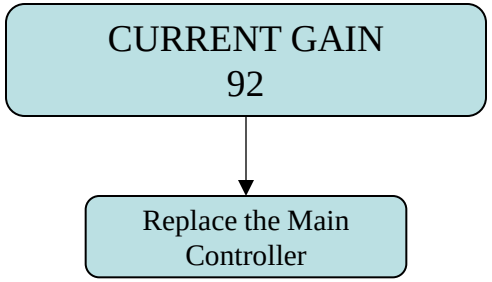

ALARM #99 on NODE #2 SLIP PROFILE

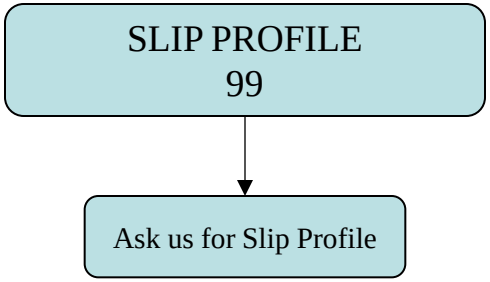

ALARM #??? on NODE #2 NO CAN MSG.06

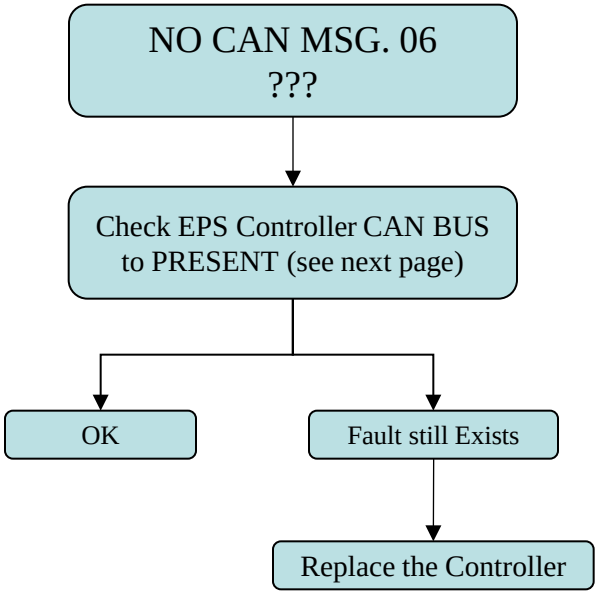

Check CAN BUS in Handset

Turn on ZAPI Handset

Push and hold the power button for 3s

Cons AFG ZP021*

The Display will show:

Press ^ or v button until CAN CONSOLE shows on the display

Cons AFG ZP021*
CAN CONSOLE

The Display will show :

Press OK to go into the CANCONSOLE Menu

The Display will show:

CANCONSOLE
SELECT NODE

Push 》, or 《
To select Node 6

The Display will show:

SELECT NODE
NODE 6

Press OK to go into the
Traction controller

The Display will show:

EPSDOERA20EP0.13
24V 50A 0H

Press OK to go into the
Main Menu

The Display will show:

Main Menu

Press ^ or v button until HARDWARE SETTING shows on the display

The Display will show:

MAIN MENU
HARDWARE SETTING

Press OK to go into the HARDWARE SETTING function

The Display will show:

HARDWARE SETTING

Press ^ or v button until CAN BUS. shows on the display

The display will show:

CAN BUS
ABASENT

Push 》, or 《
To select PRESENT

The display will show:

CAN BUS
PRESENT

When finished , press ESC

The Display will ask : APPLY CHANGES ?

APPLY CHANGES?
YES= OK NO=ESC

Press OK for yes

When finished, the Console shows :

Main Menu

When finished , press and hold power button for 3s to turn off the Console

EPS Controller

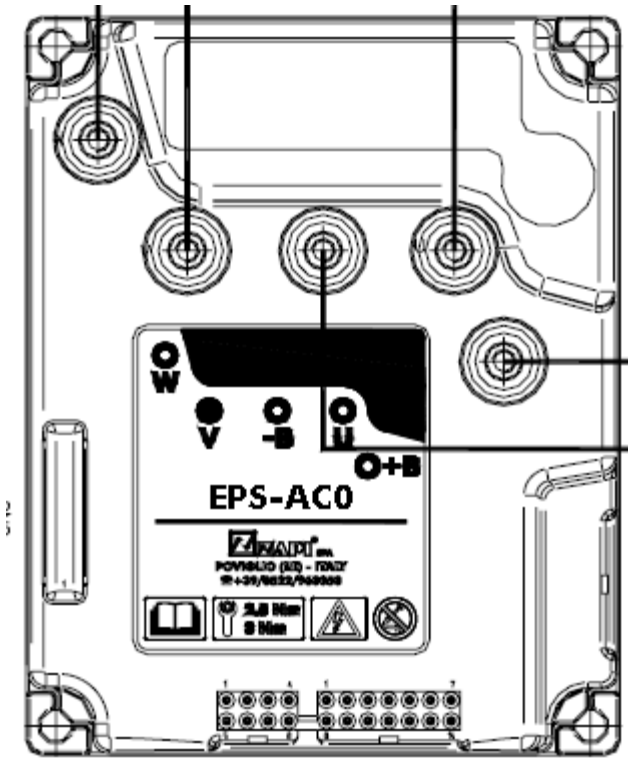

ALARM #6 on NODE #6 SERIAL ERR #1

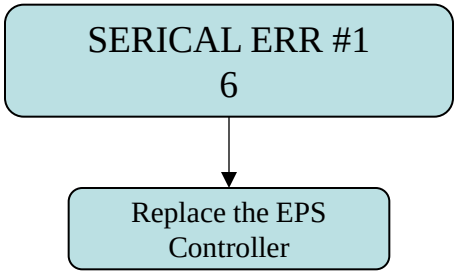

ALARM #13 on NODE #6 EEPROM KO

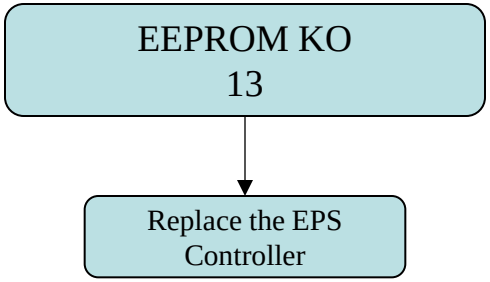

ALARM #16 on NODE #6 LOGIC FAILURE #4

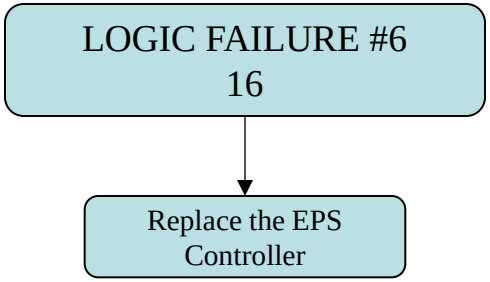

ALARM #17 on NODE #6 LOGIC FAILURE #3

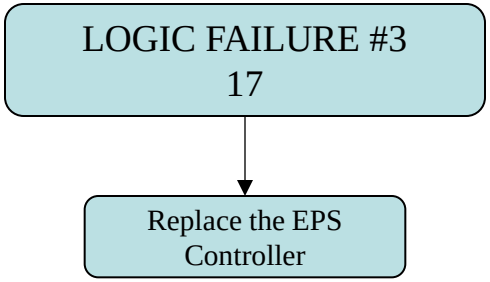

ALARM #18 on NODE #6 LOGIC FAILURE #2

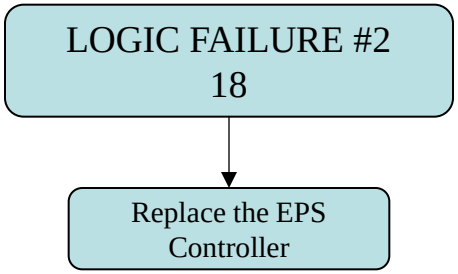

ALARM #19 on NODE #6 LOGIC FAILURE #1

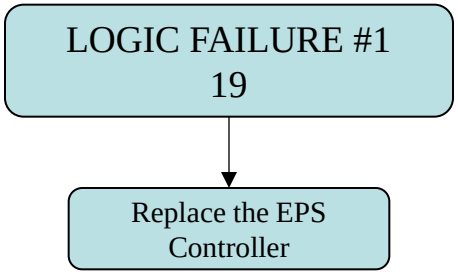

ALARM #32 on NODE #6 VMN NOT OK

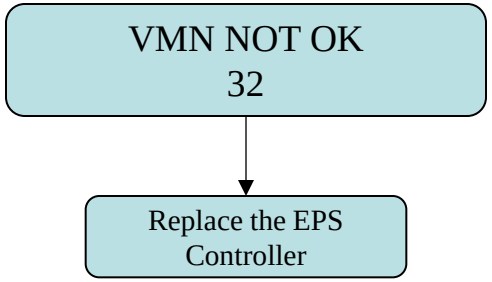

ALARM #48 on NODE #6 MAIN CONT. OPEN

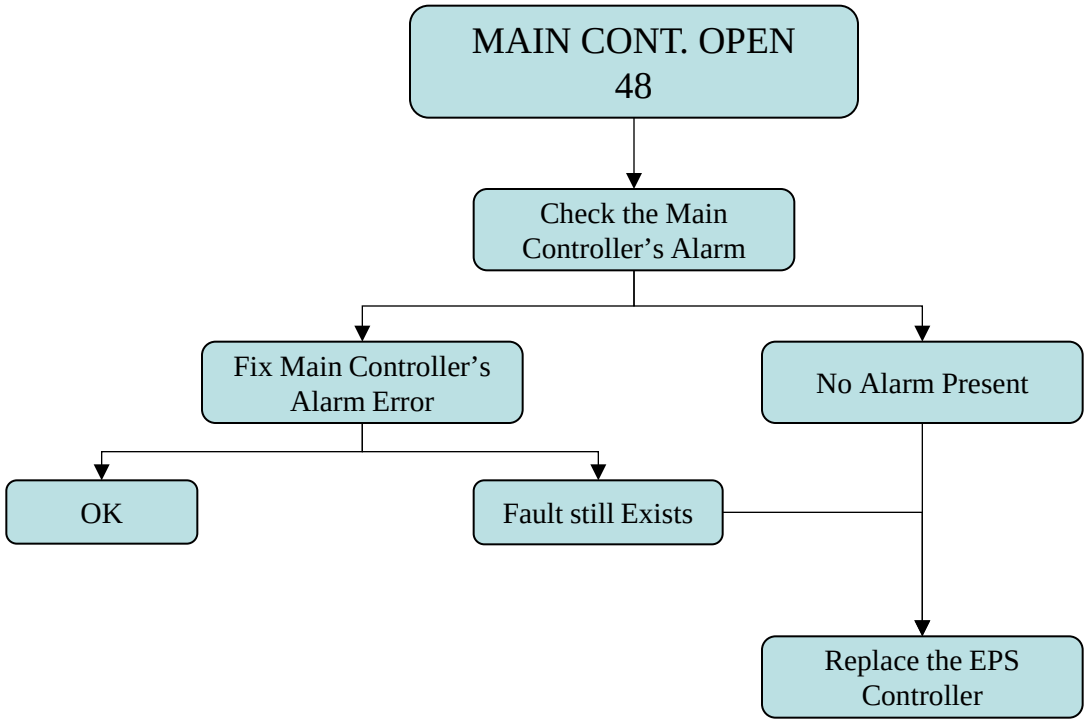

ALARM #53 on NODE #6 STBY I HIGH

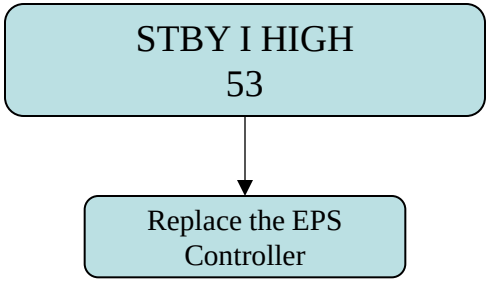

ALARM #61 on NODE #6 HIGH TEMPERATURE

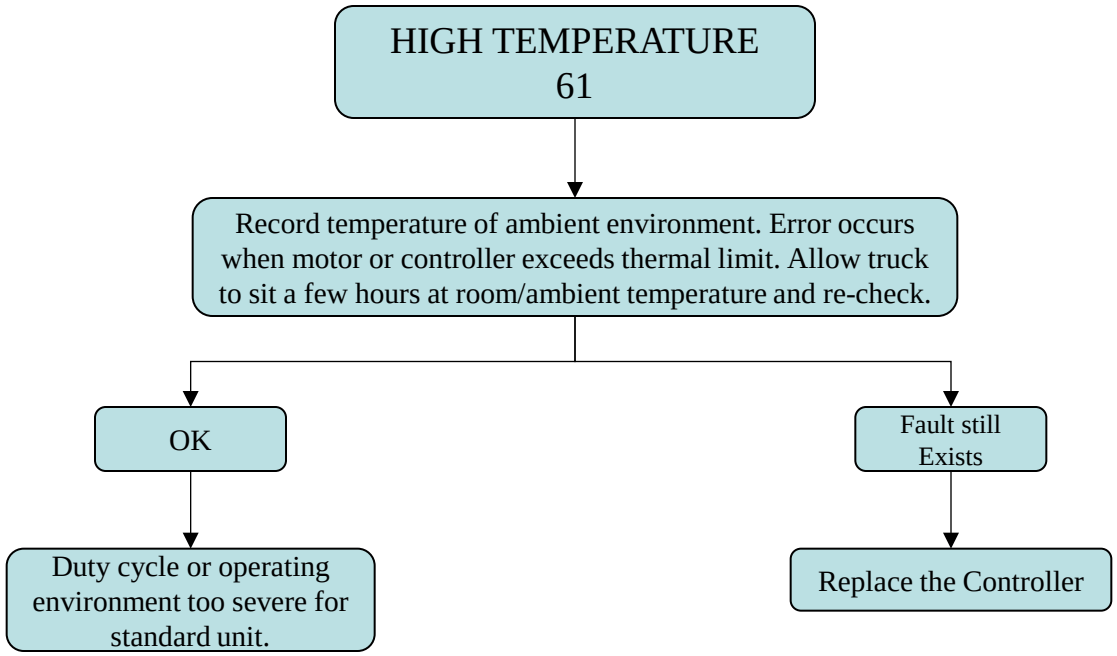

ALARM #65 on NODE #6 MOTOR TEMPERAT

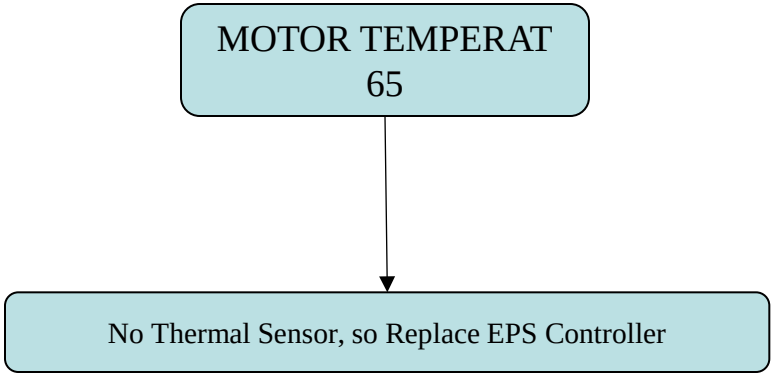

ALARM #70 on NODE #6 HIGH CURRENT

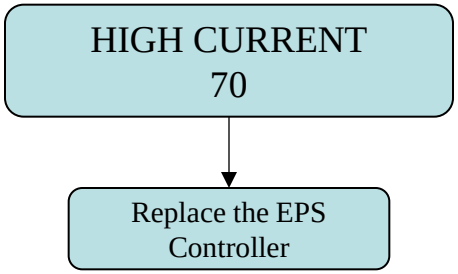

ALARM #71 on NODE #6 POWER FAILURE #3

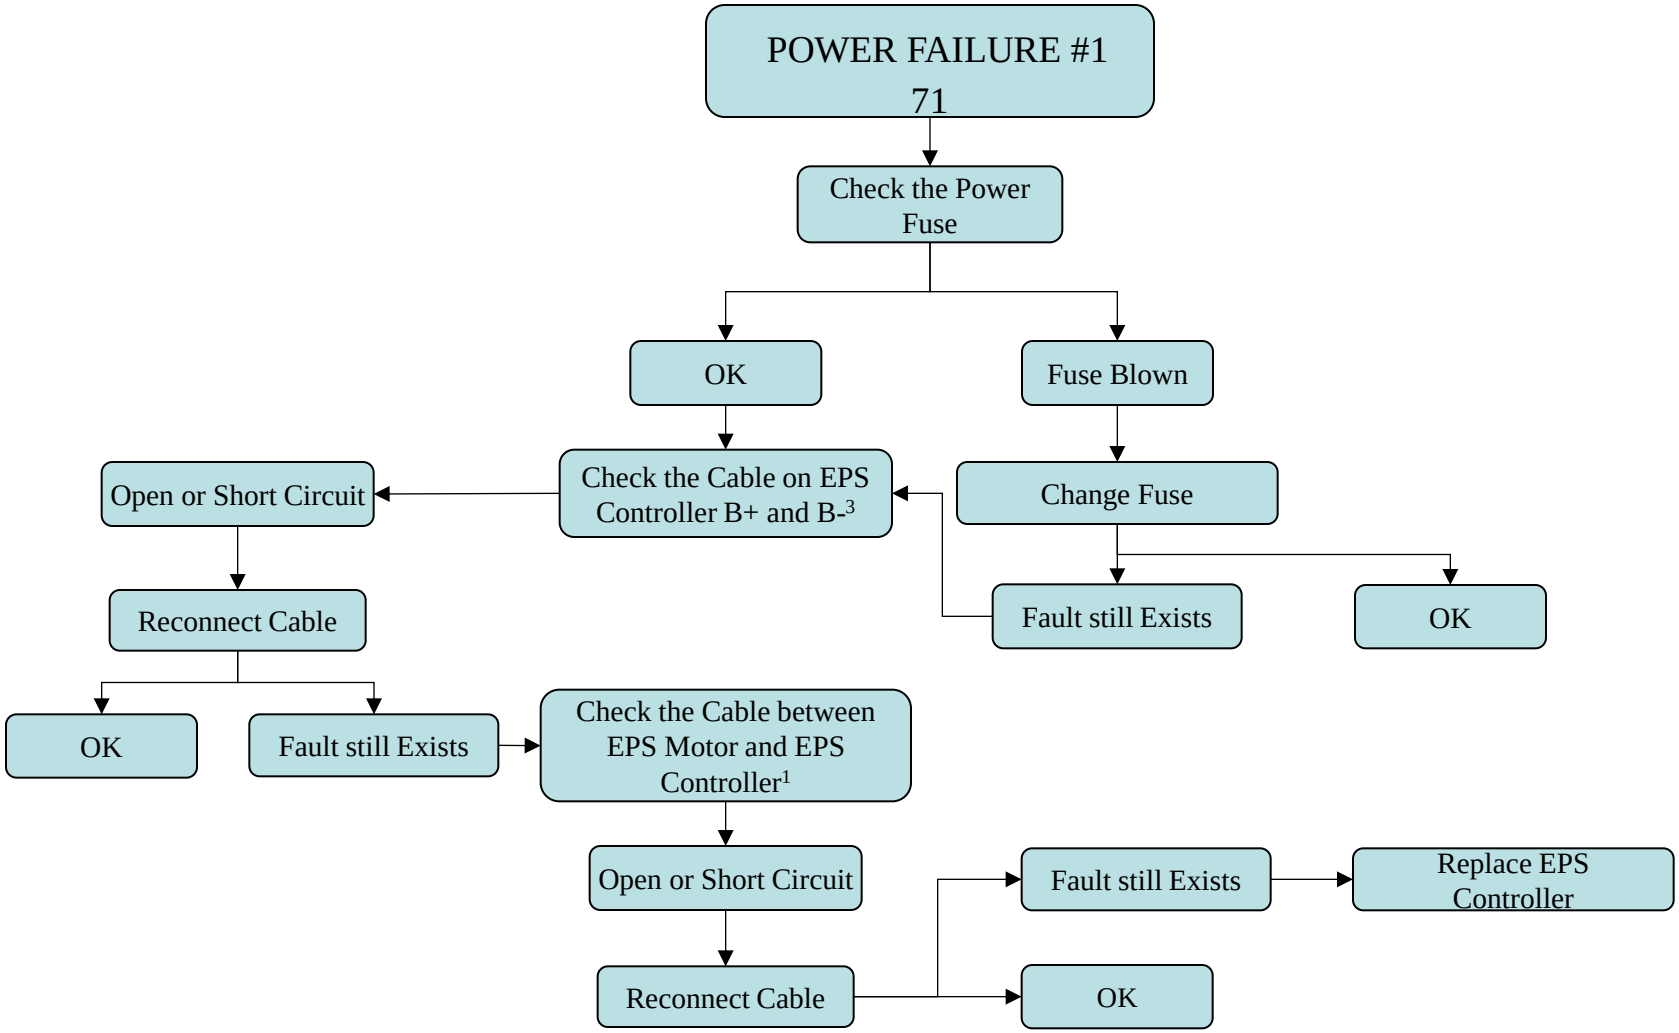

ALARM #72 on NODE #6 POWER FAILURE #2

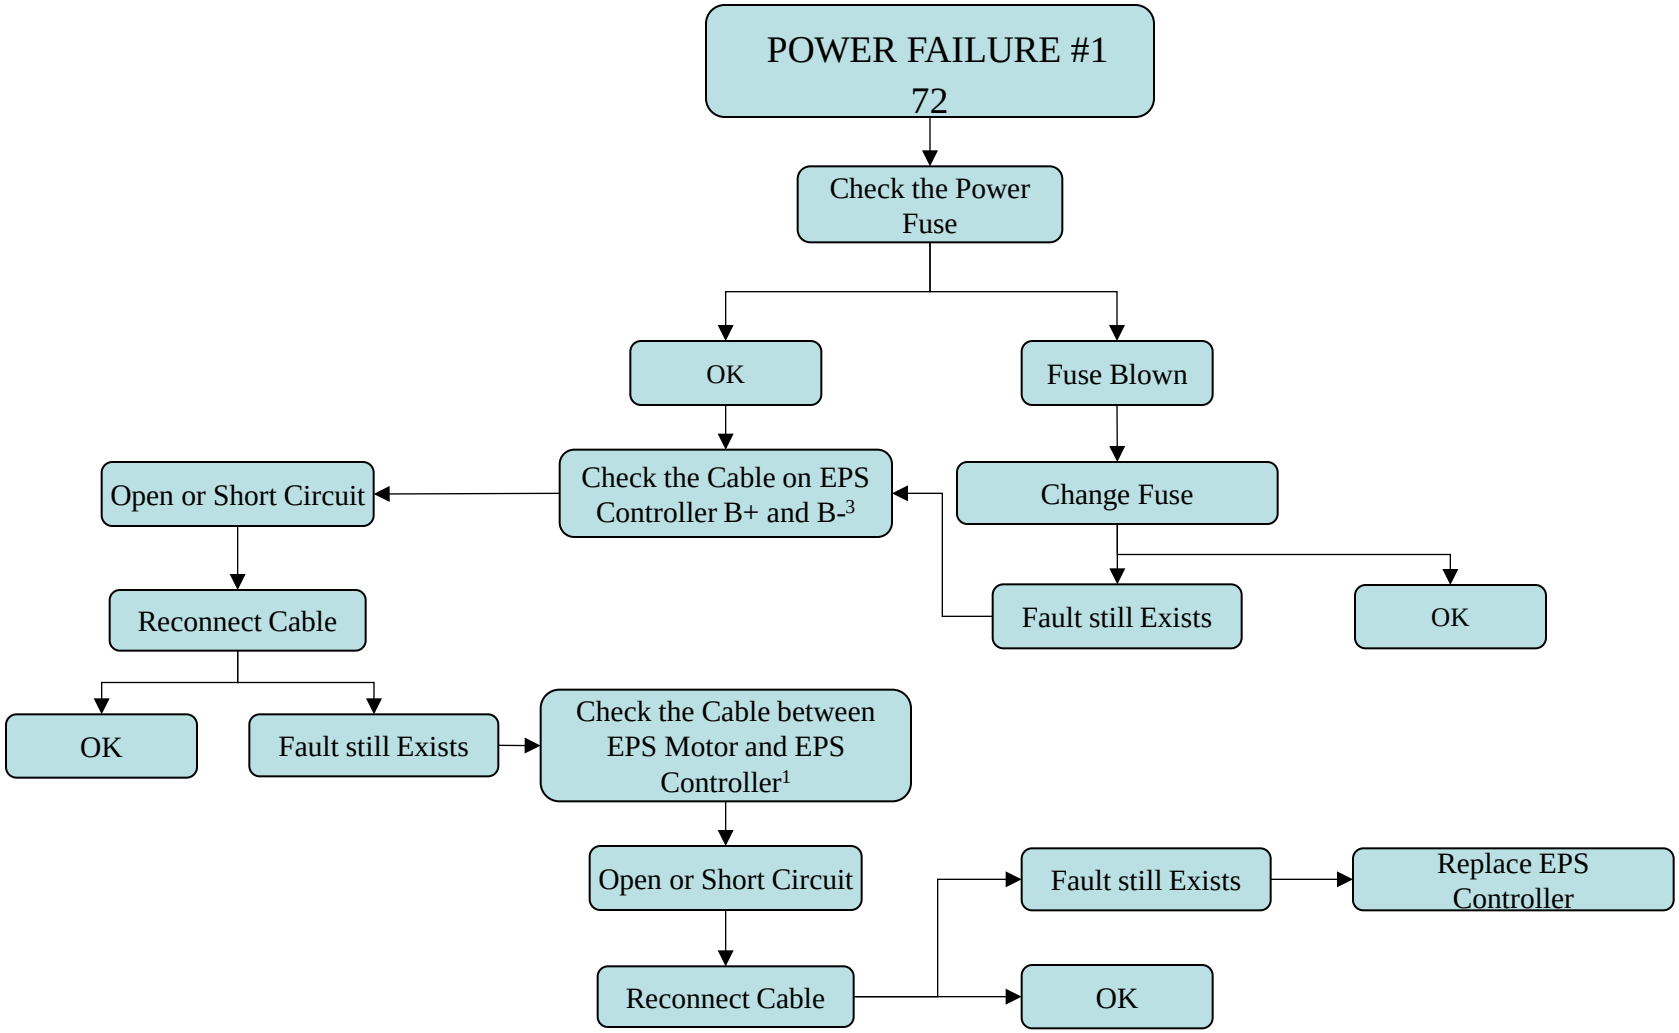

ALARM #73 on NODE #6 POWER FAILURE #1

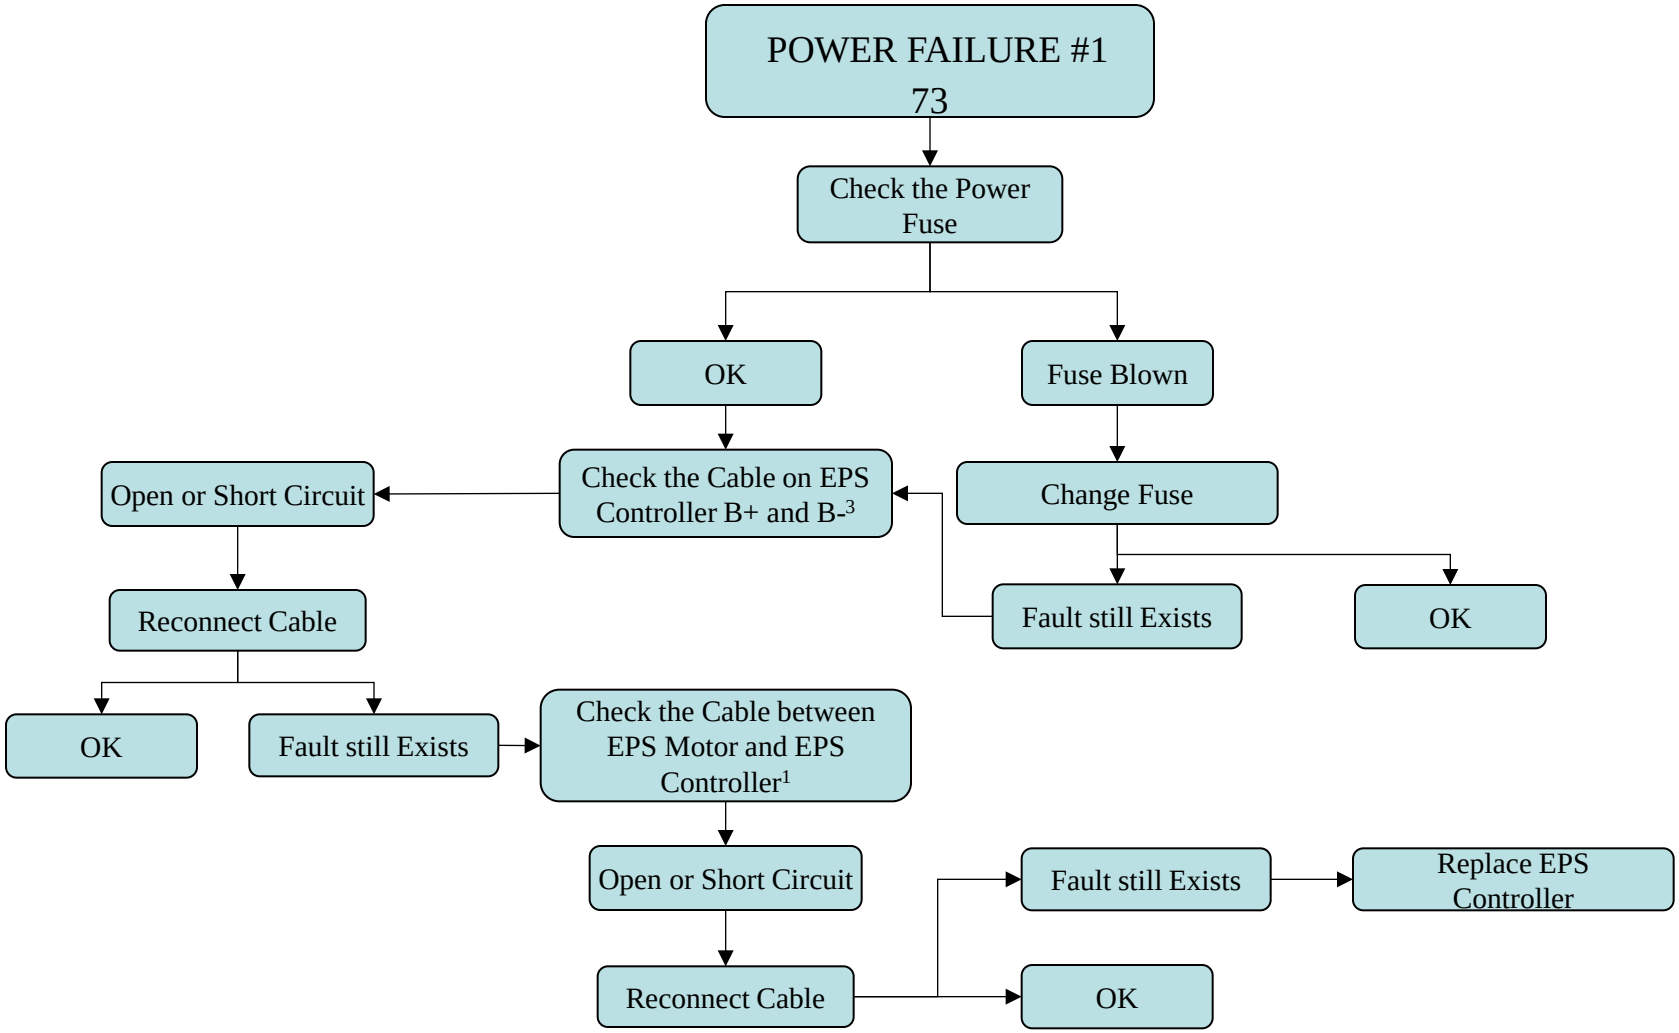

ALARM #83 on NODE #6 BAD ENCODER SIGN

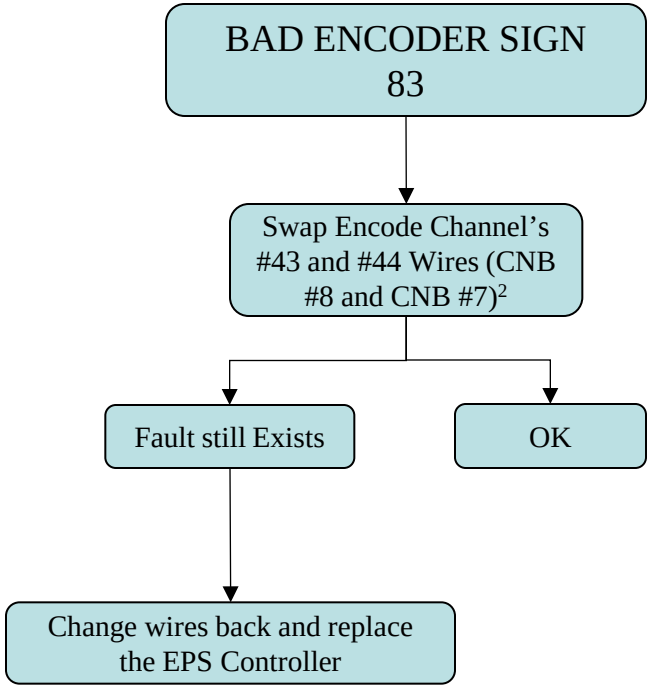

ALARM #84 on NODE #6 STEER SENSOR KO

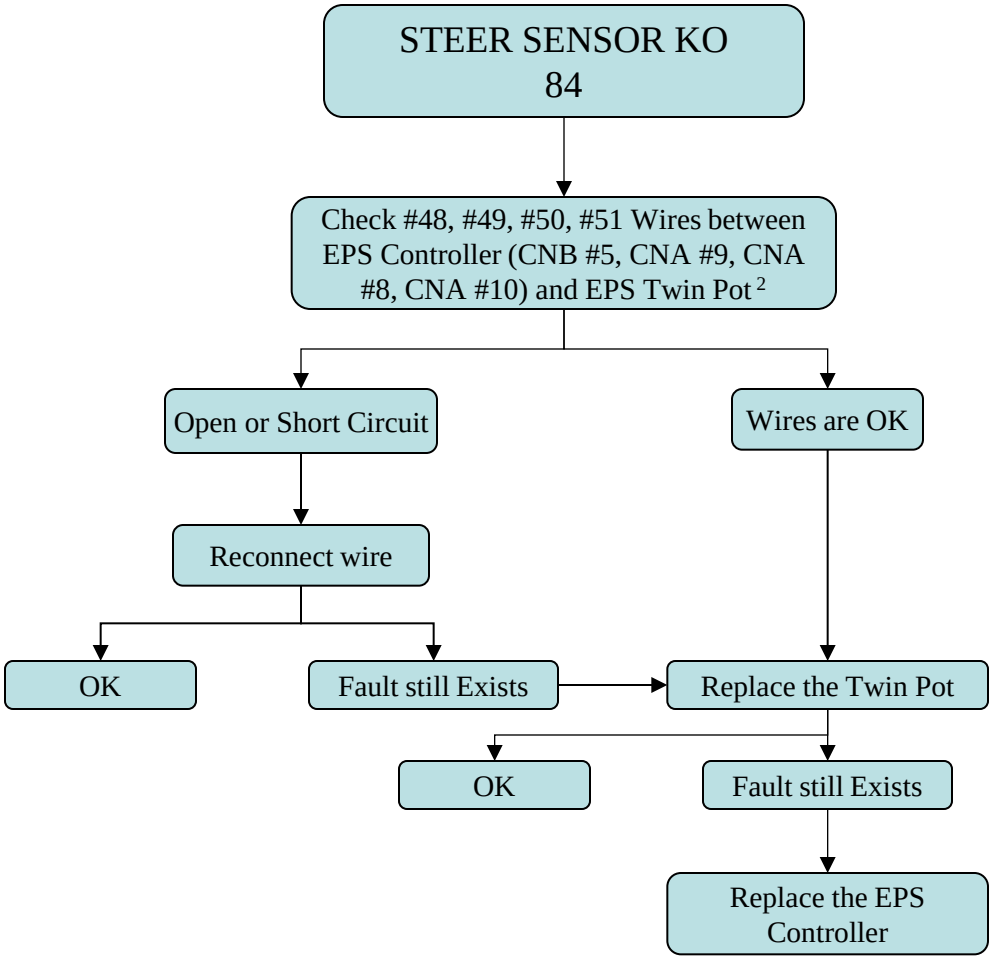

ALARM #99 on NODE #6 INPUT ERROR #1

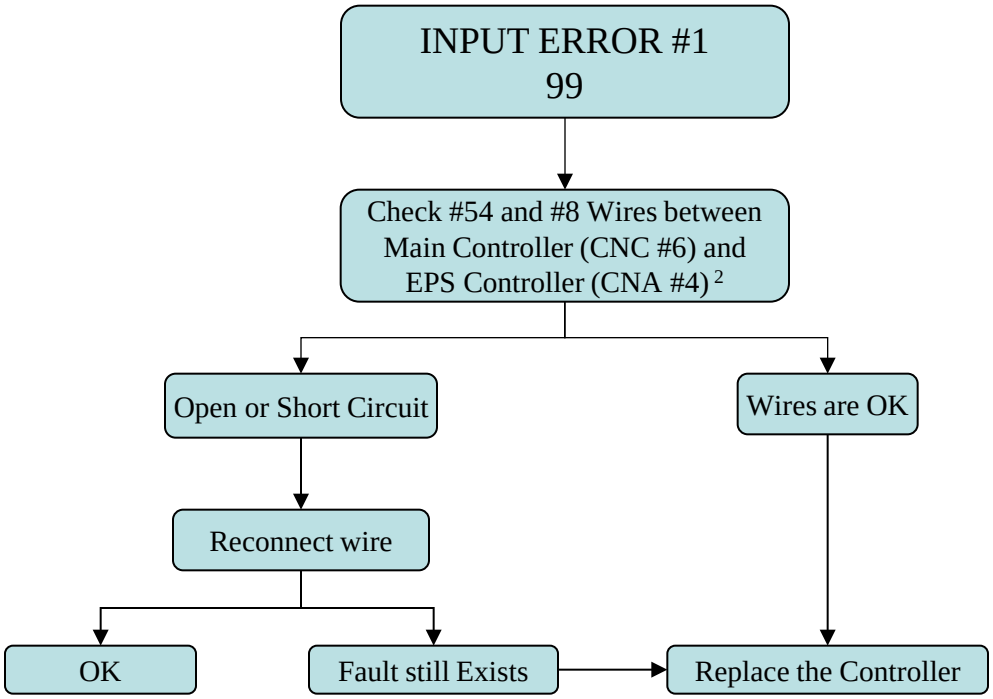

ALARM #212 on NODE #6 MICRO SLAVE #8

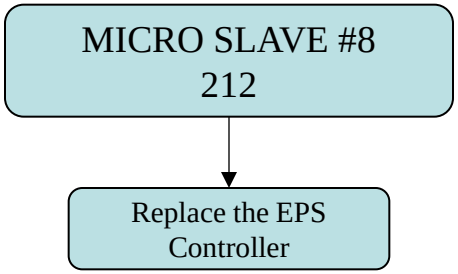

ALARM #218 on NODE #6 CLOCK PAL NOT KO

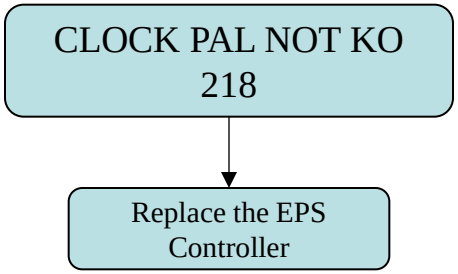

ALARM #219 on NODE #6 STEPPER MOTOR MISM

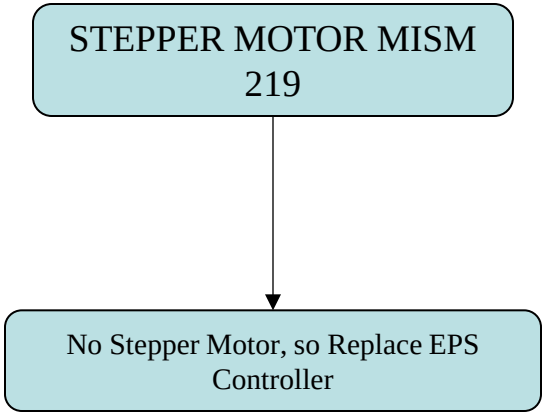

ALARM #220 on NODE #6 MOTOR LOCKED

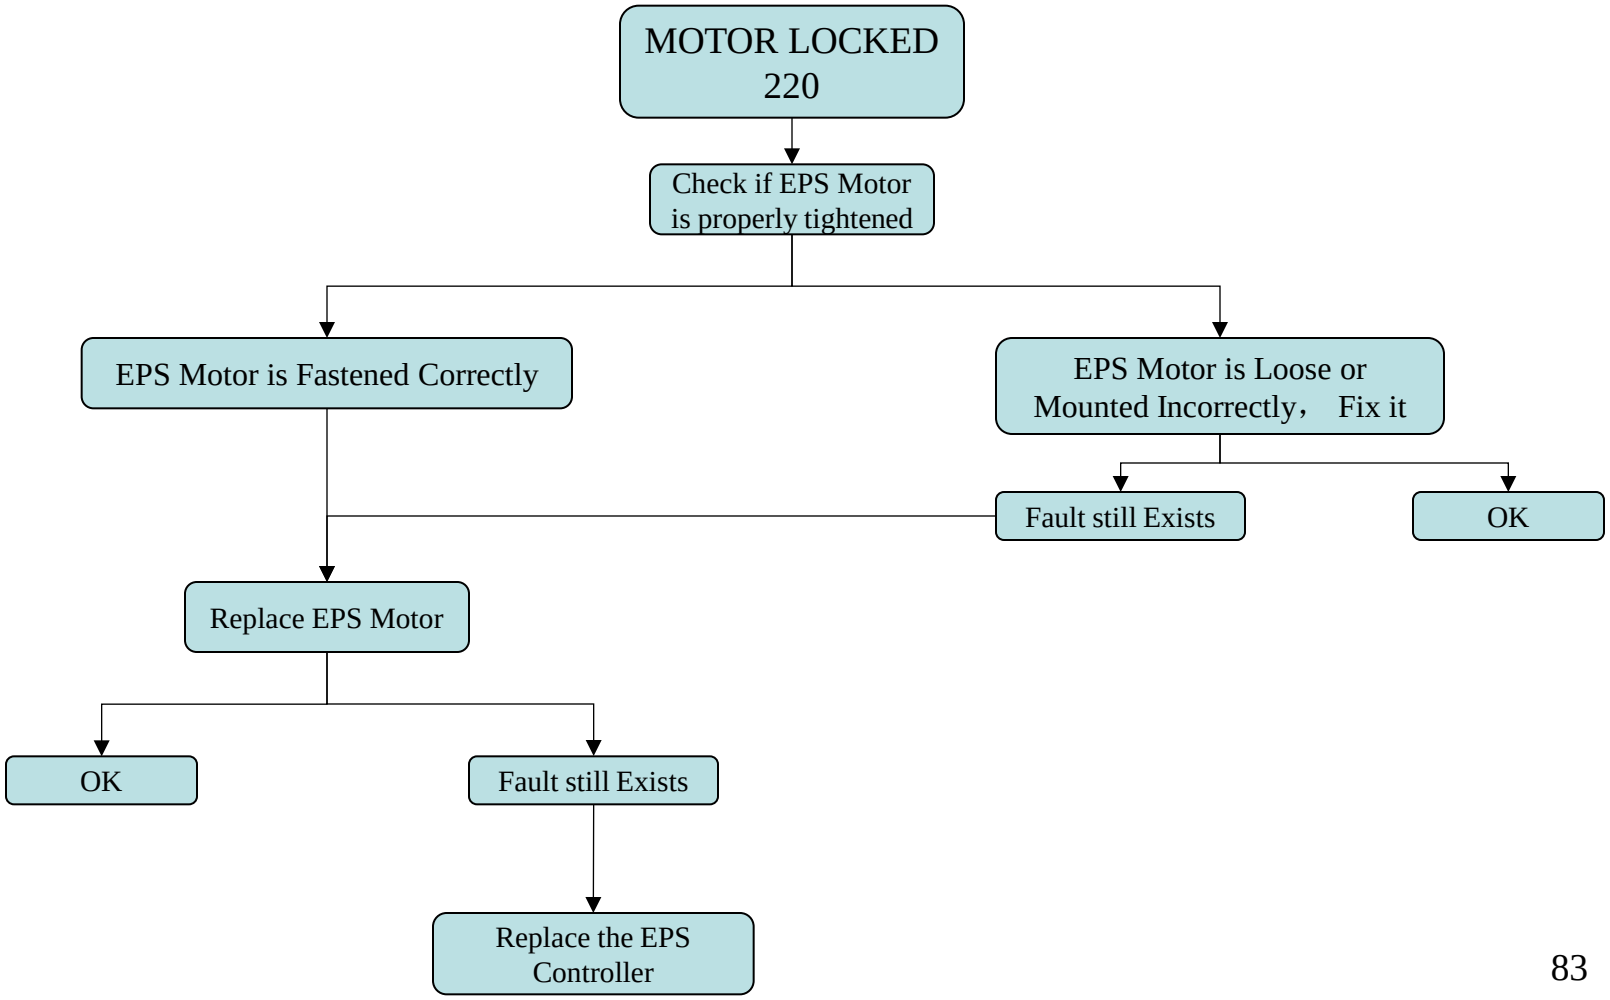

ALARM #221 on NODE #6 MICRO SLAVE #4

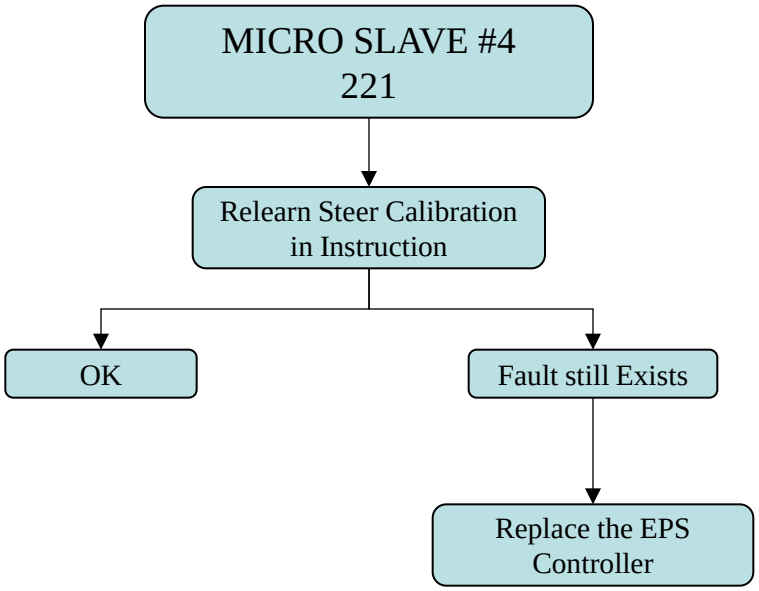

ALARM #222 on NODE #6 FB SENS LOCKED

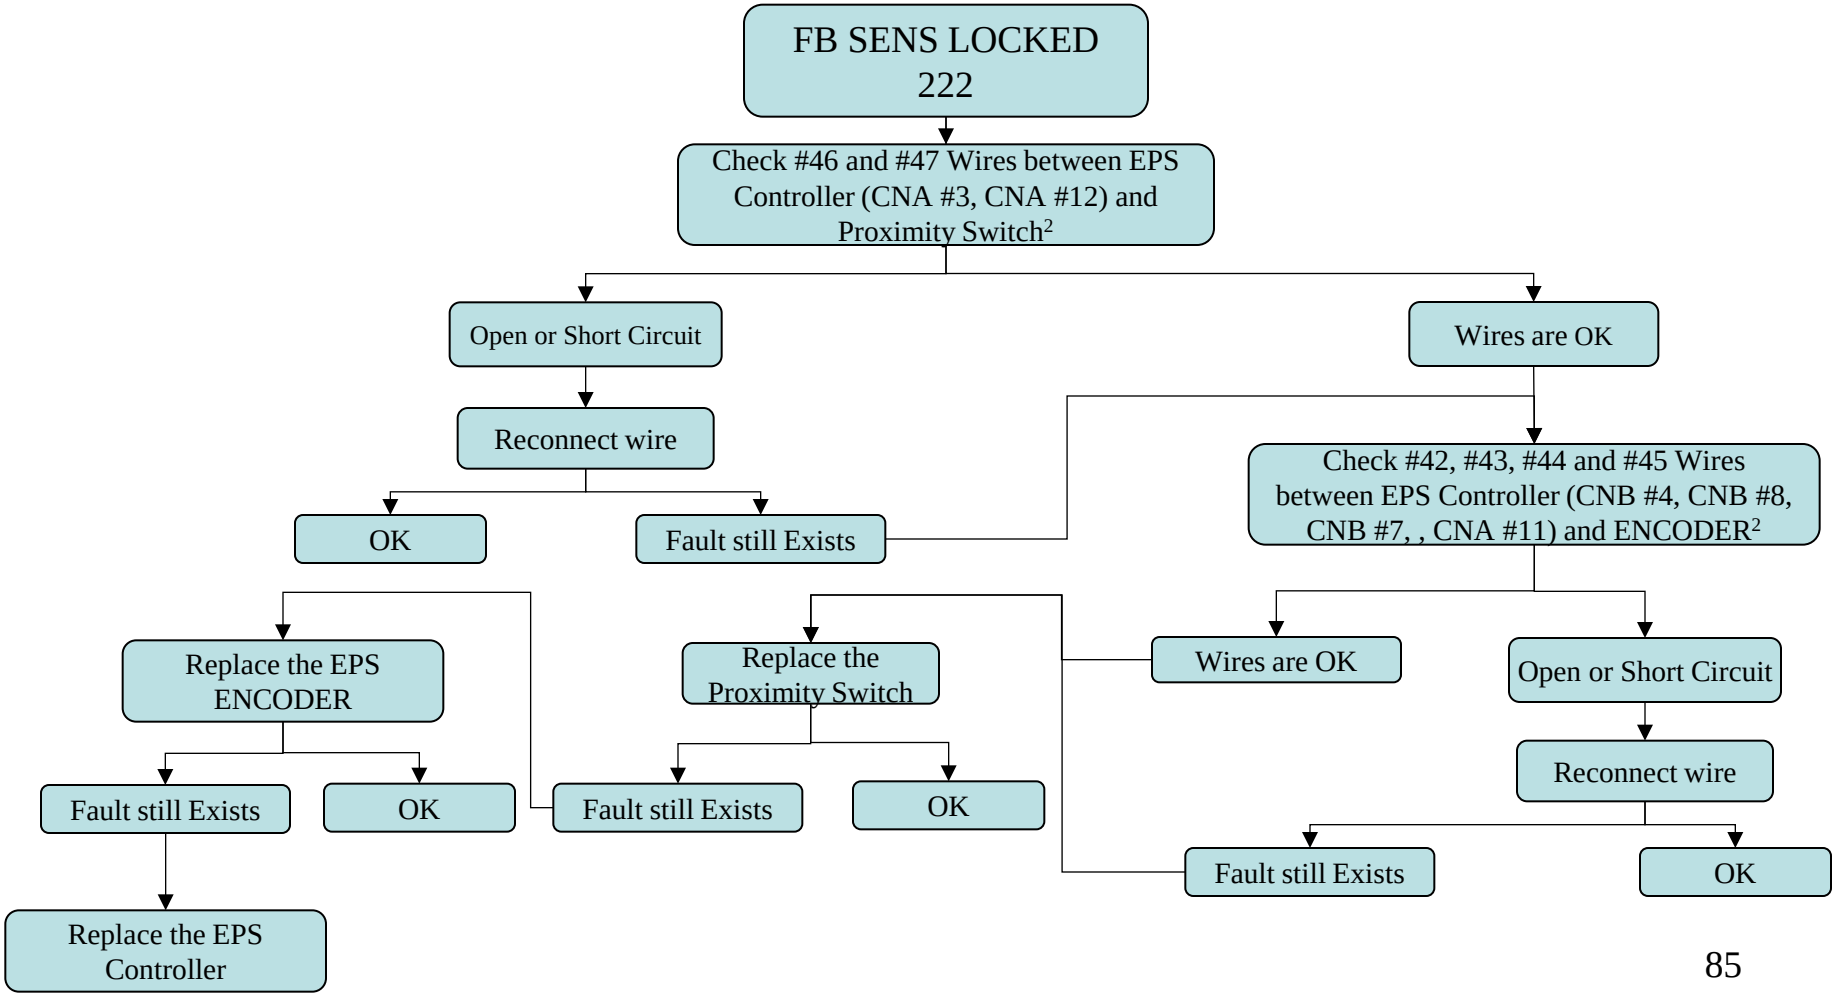

ALARM #223 on NODE #6 JERKING FB POT

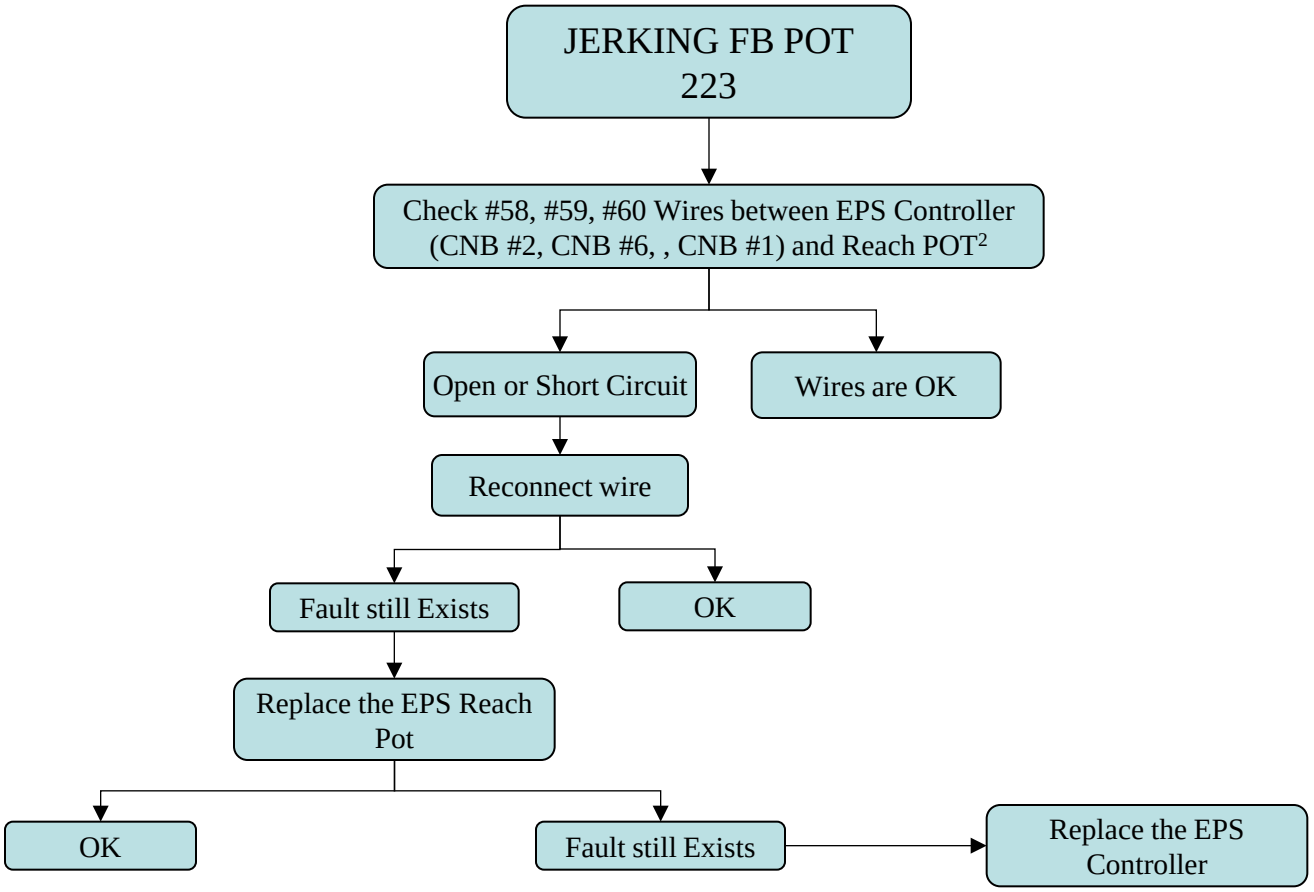

ALARM #225 on NODE #6 CURRENT GAIN

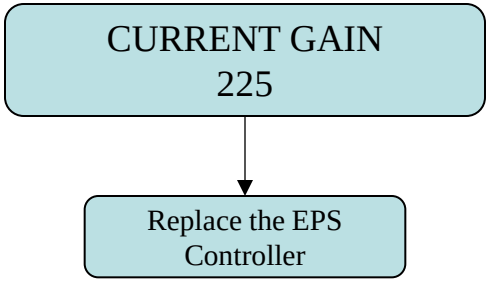

ALARM #226 on NODE #6 NO SYNC

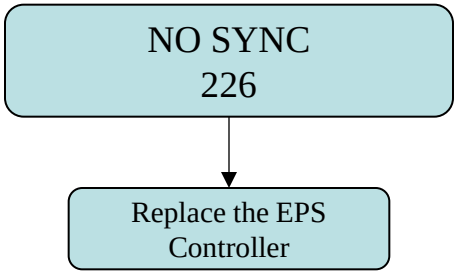

ALARM #227 on NODE #6 SLAVE COM. ERROR

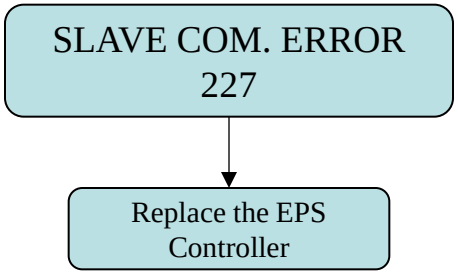

ALARM #228 on NODE #6 POSITION ERROR

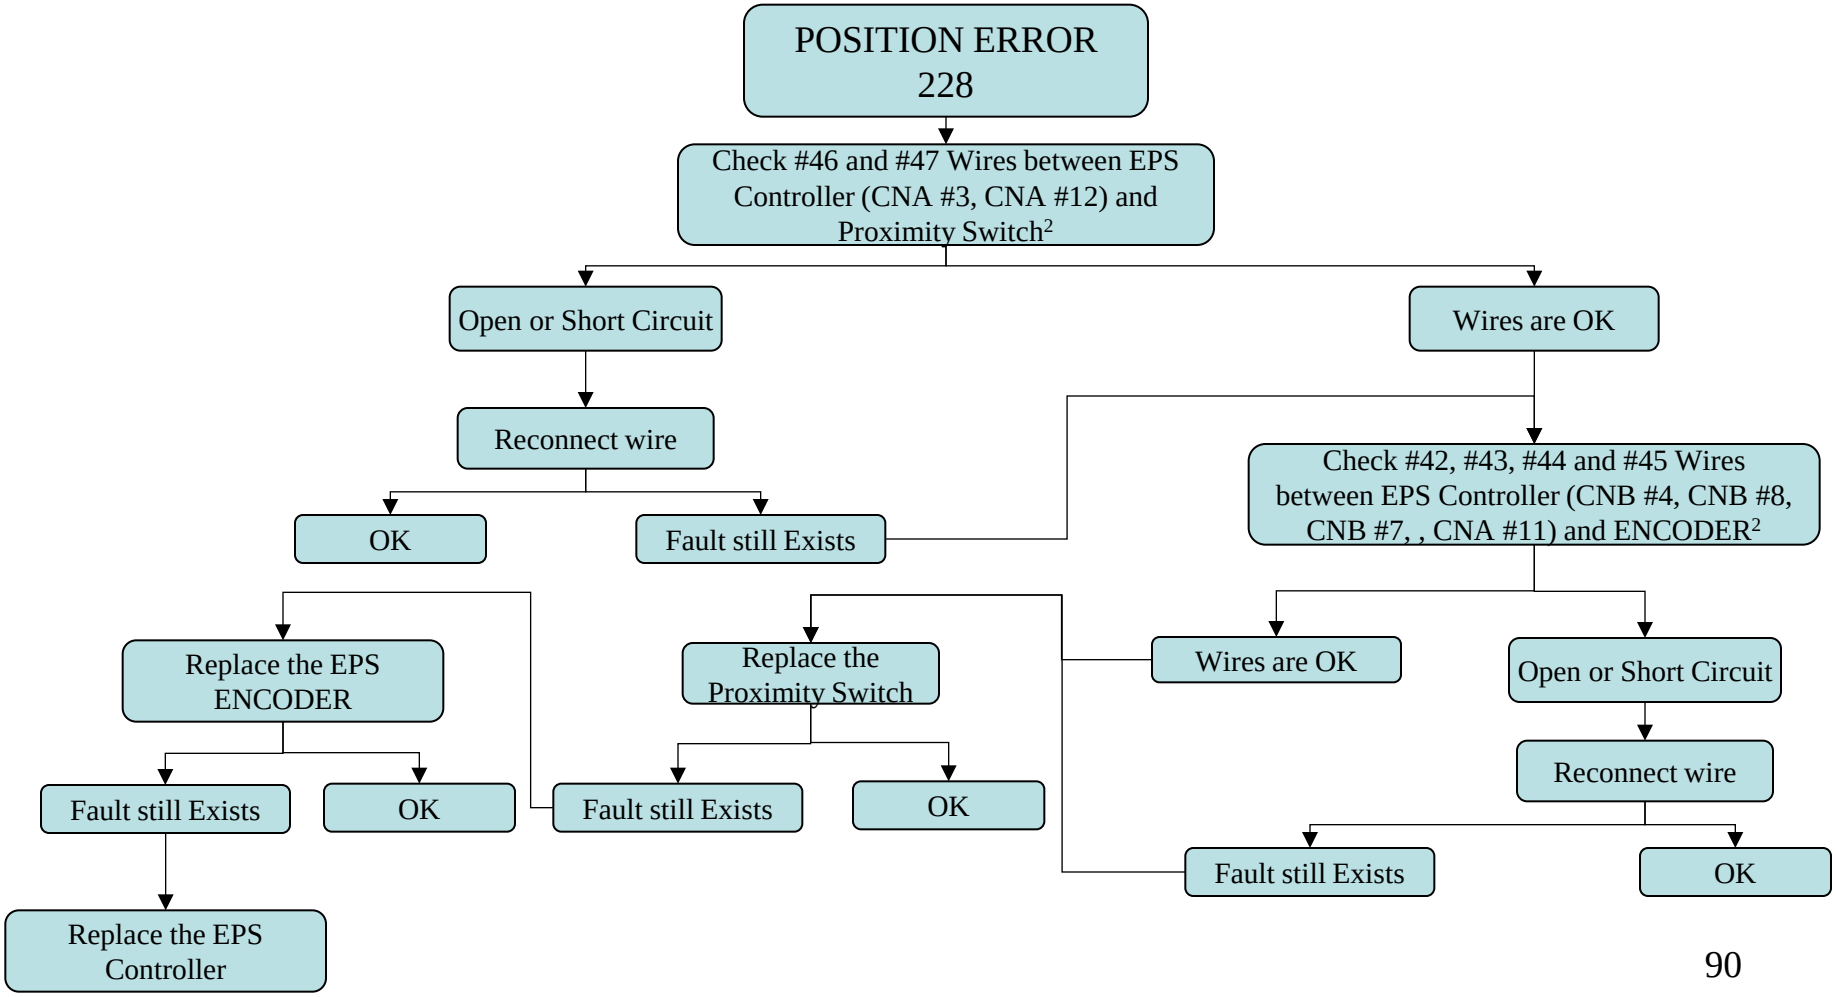

ALARM #237 on NODE #6 WAITING DATA

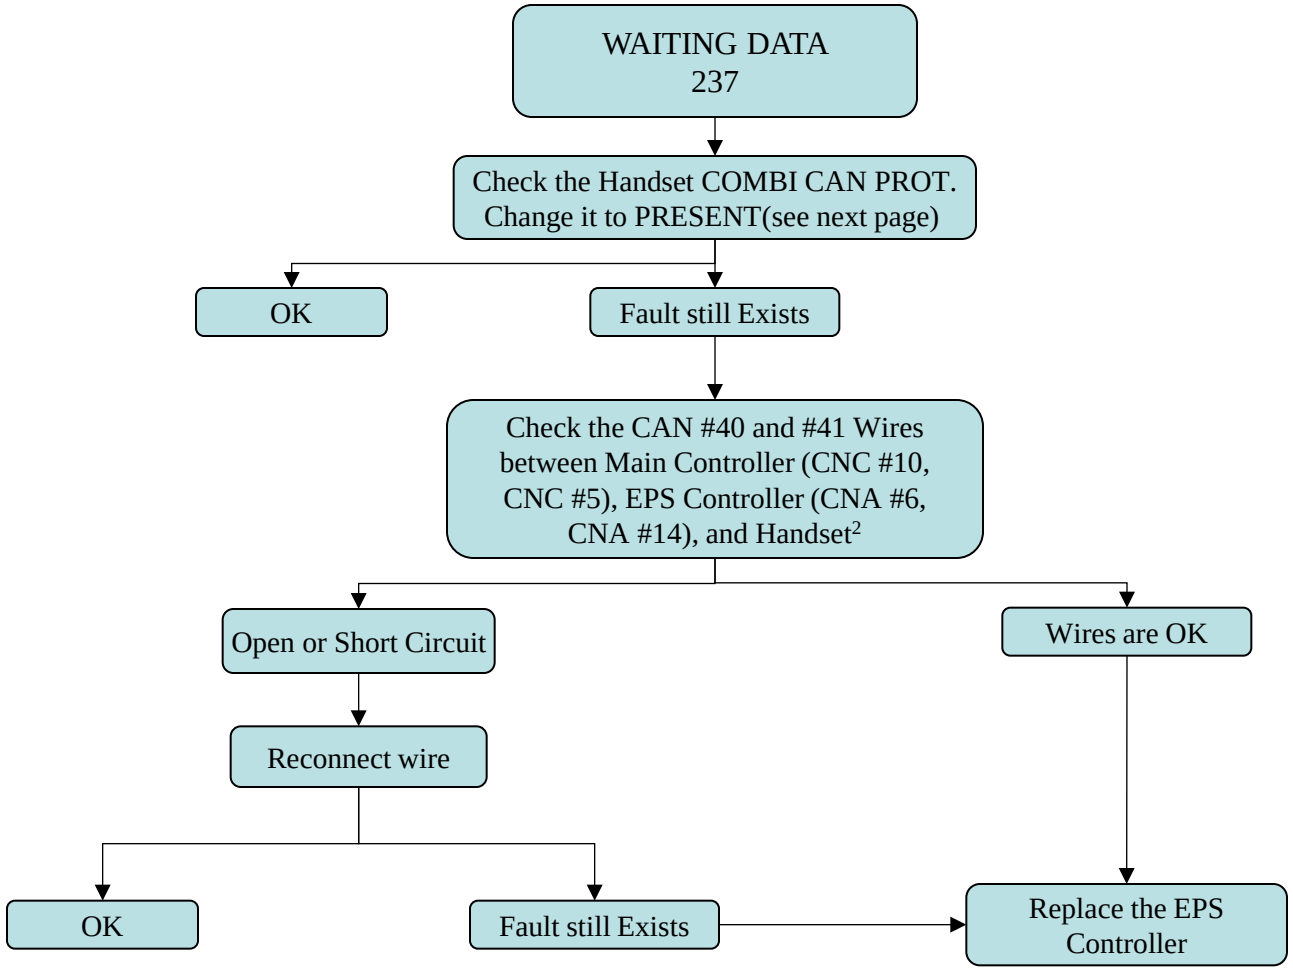

Check COMBI CAN PROT. in Handset

Turn on ZAPI Handset

Push and hold the power button for 3s

Cons AFG ZP021*

The Display will show:

Press ^ or v button until CAN CONSOLE shows on the display

Cons AFG ZP021*
CAN CONSOLE

The Display will show :

Press OK to go into the CANCONSOLE Menu

The Display will show:

CANCONSOLE
SELECT NODE

Push 》, or 《
To select Node 6

The Display will show:

SELECT NODE
NODE 6

Press OK to go into the
Traction controller

The Display will show:

EPSDOERA20EP0.13
24V 50A 0H

Press OK to go into the
Main Menu

The Display will show:

Main Menu

Press ^ or v button until SET OPTION shows on the display

The Display will show:

MAIN MENU
SET OPTION

Press OK to go into the SET OPTION function

The Display will show:

SET OPTION

Press ^ or v button until COMBI CAN PROT. shows on the display

The display will show:

COMBI CAN PROT.
ABASENT

Push 〉, or 〈
To select PRESENT

The display will show:

COMBI CAN PROT.
PRESENT

When finished , press ESC

The Display will ask : APPLY CHANGES ?

APPLY CHANGES?
YES= OK NO=ESC

Press OK for yes

When finished, the Console shows :

Main Menu

When finished , press and hold power button for 3s to turn off the Console

ALARM #238 on NODE #6 EPS NOT ALIGNED

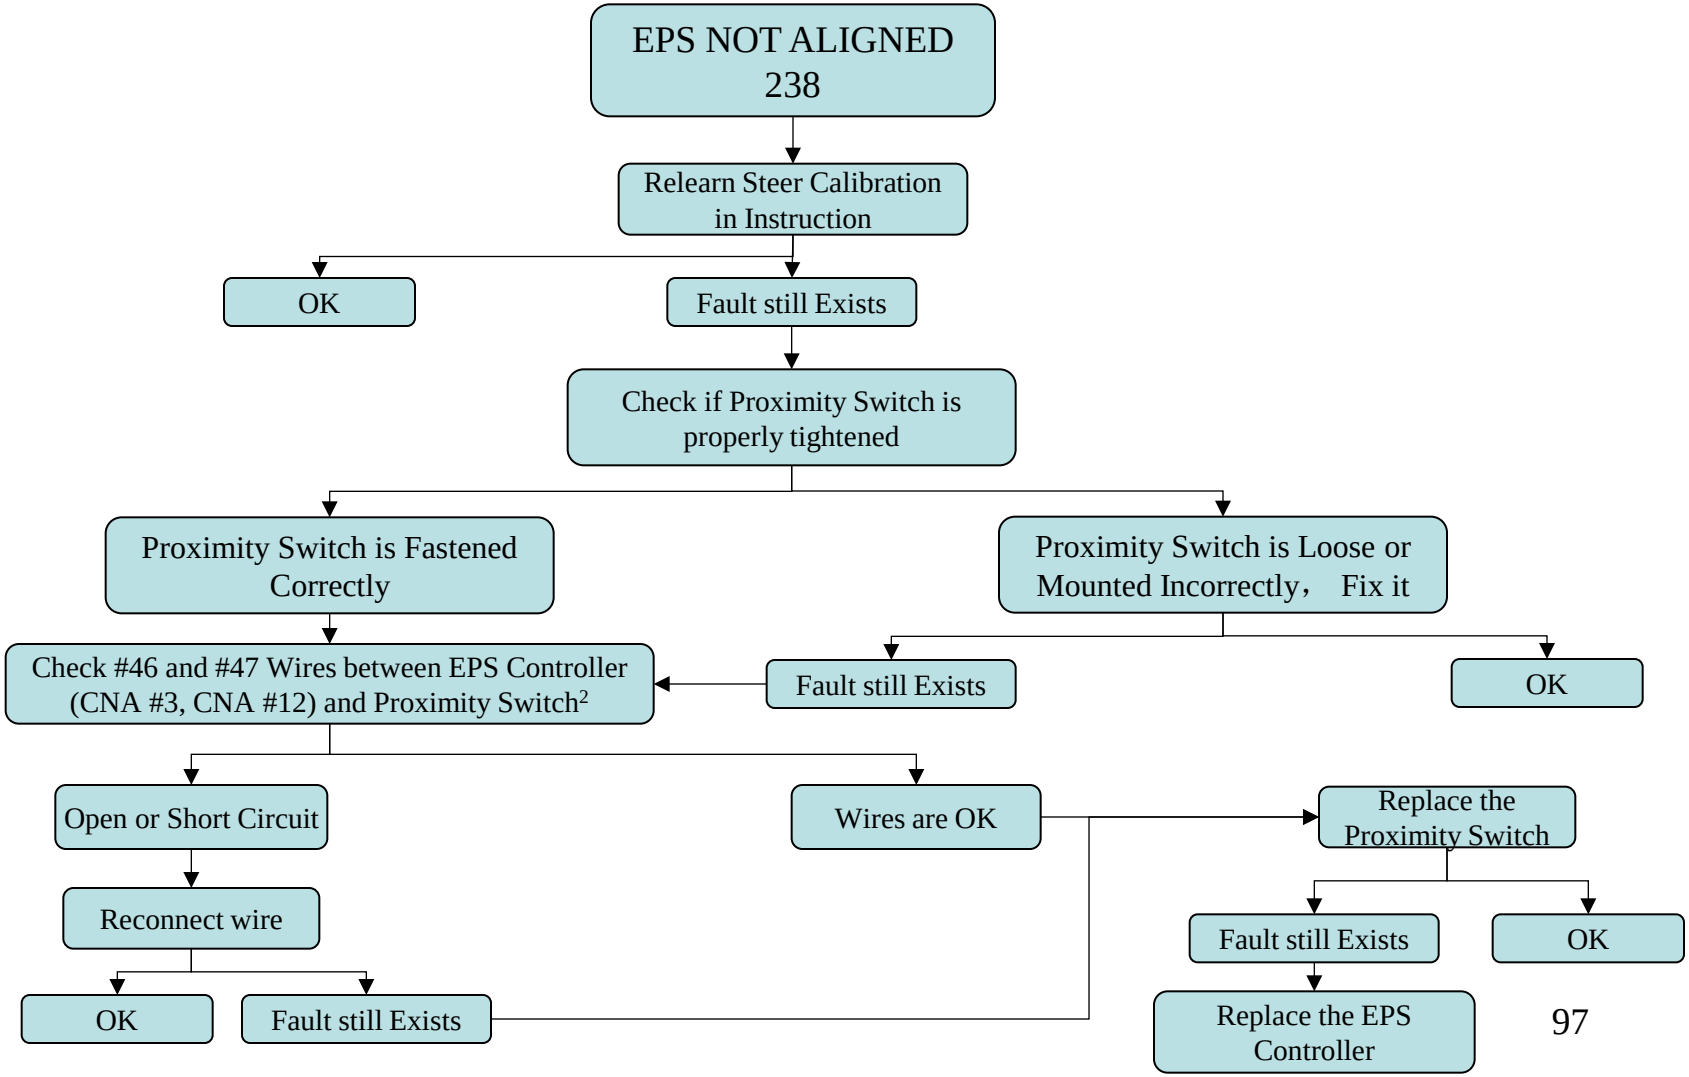

ALARM #239 on NODE #6 WAITING FOR TRAC

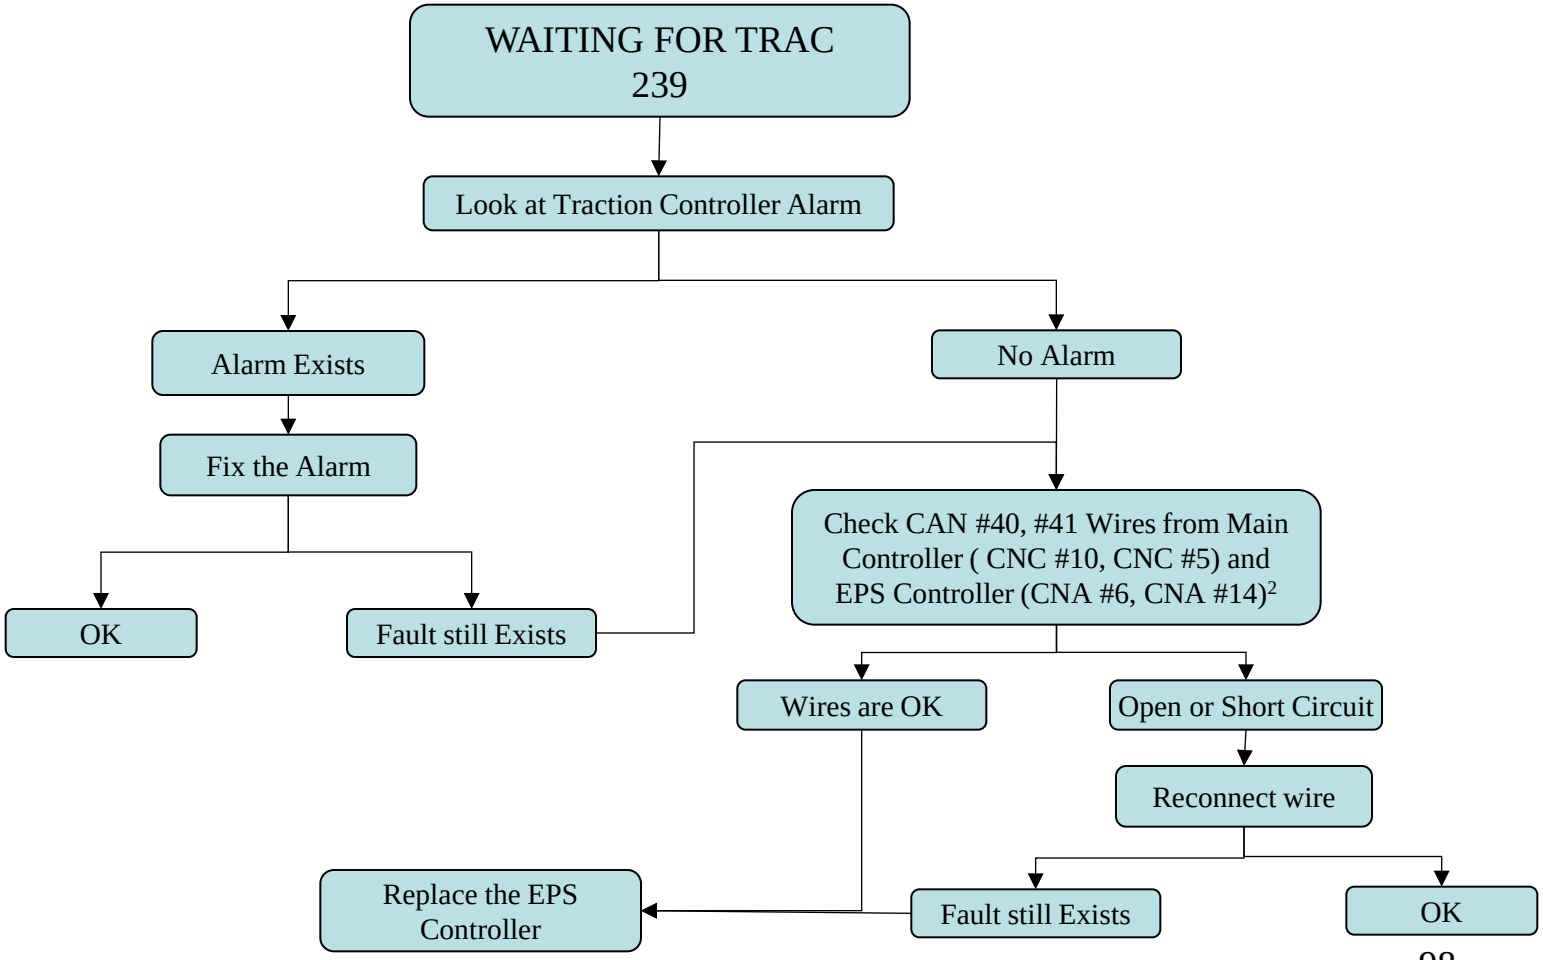

ALARM #241 on NODE #6 ENCODER ERROR

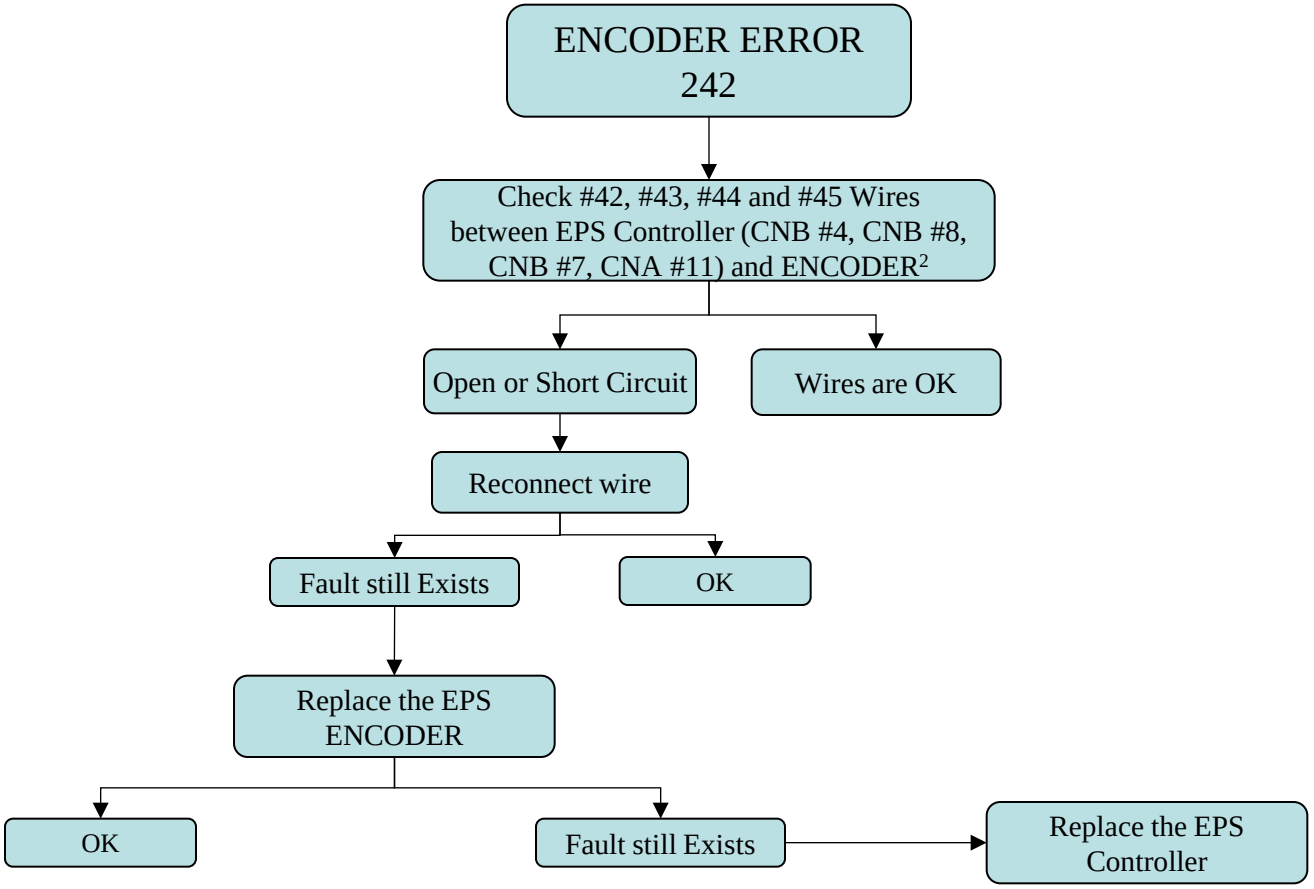

ALARM #242 on NODE #6 Q LINE SENSOR KO

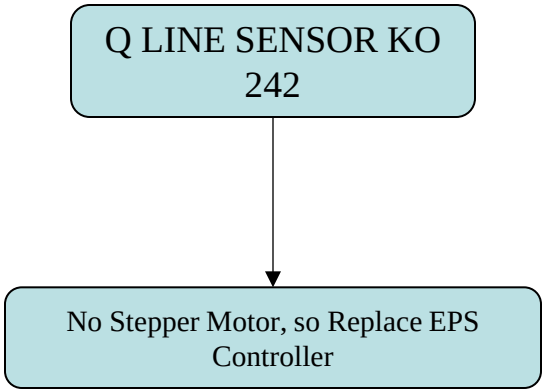

ALARM #243 on NODE #6 D LINE SENSOR KO

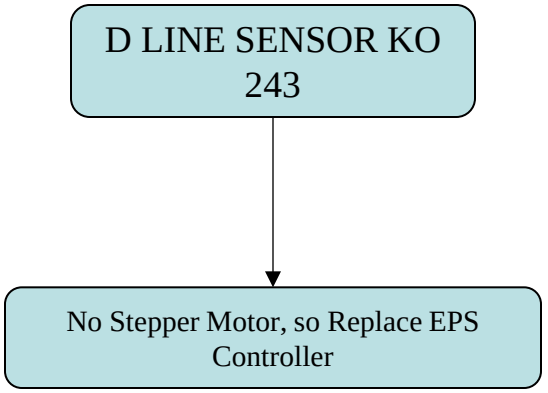

ALARM #244 on NODE #6 GAIN EEPROM KO

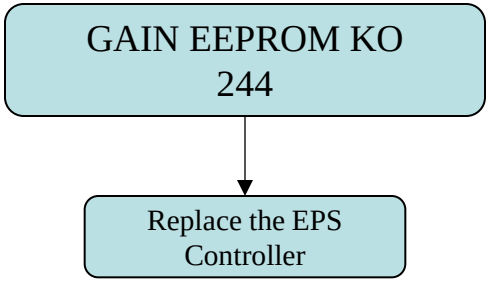

ALARM #246 on NODE #6 MICRO SLAVE KO

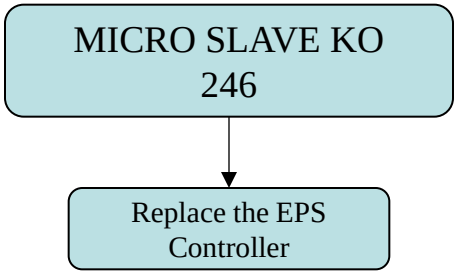

ALARM #247 on NODE #6 CAN BUS KO

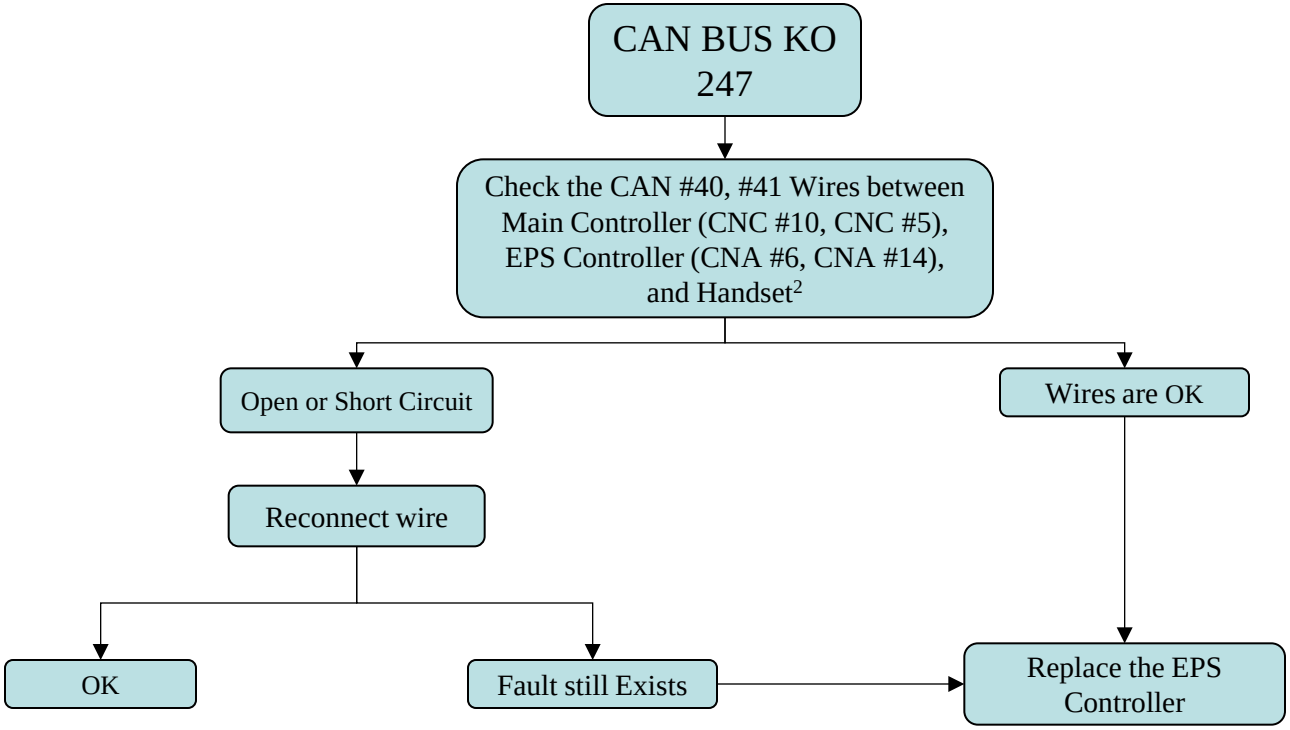

ALARM #248 on NODE #6 S.P OUT OF RANGE

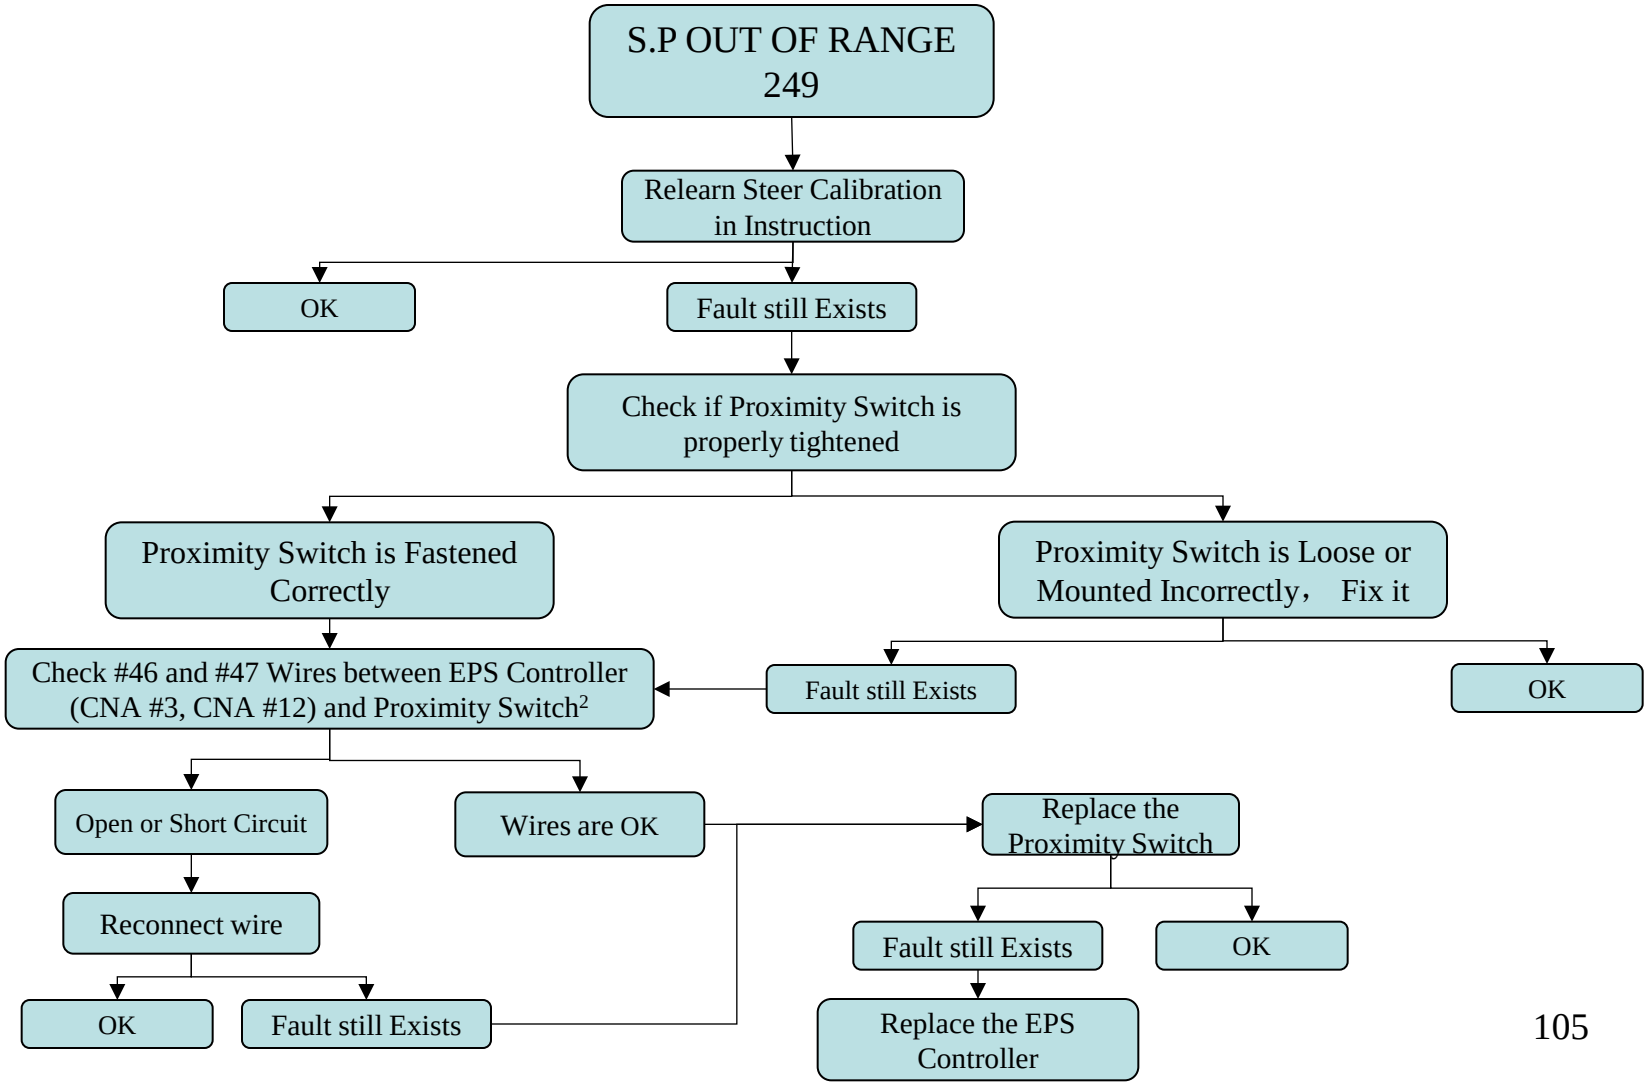

ALARM #249 on NODE #6 F.B OUT OF RANGE

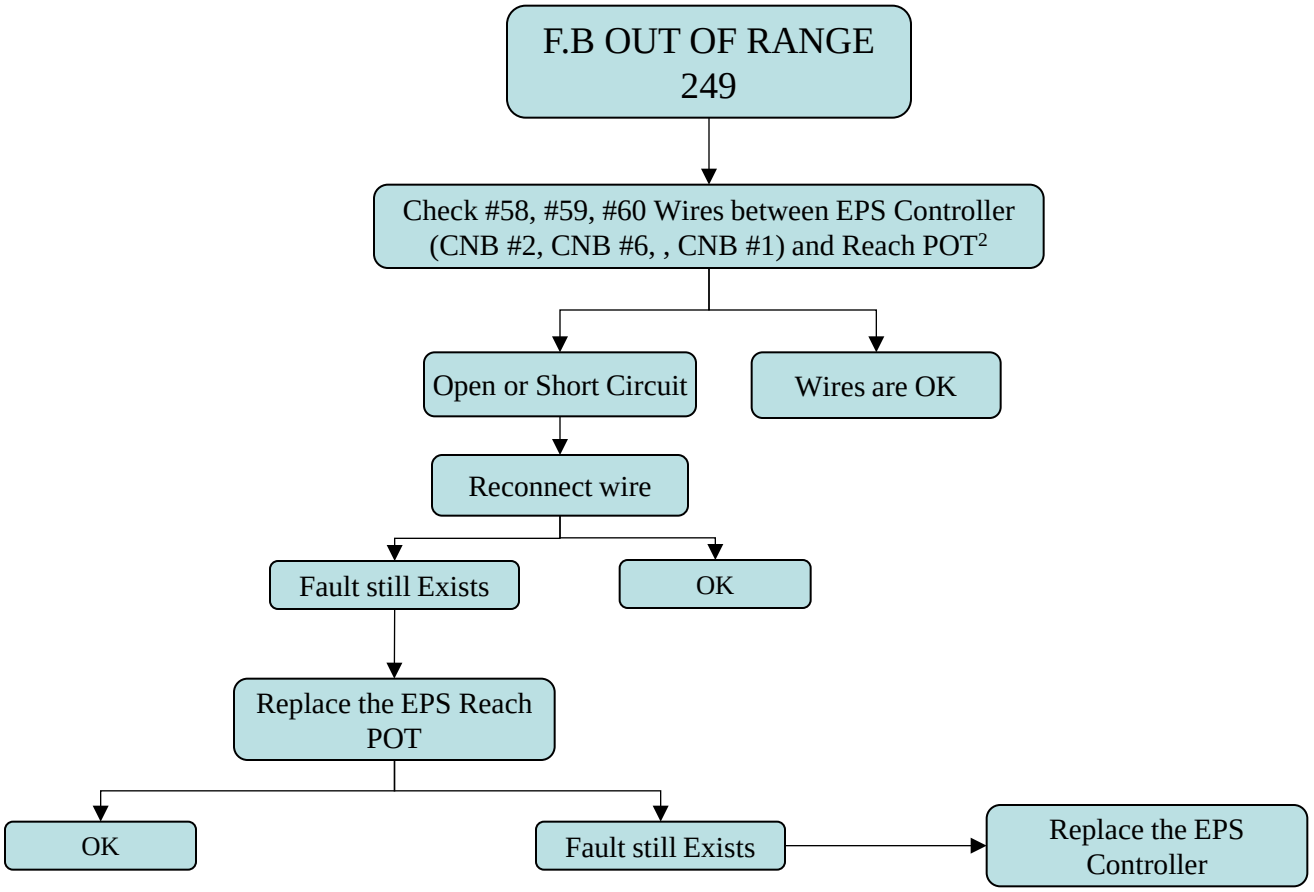

ALARM #250 on NODE #6 MICRO SLAVE

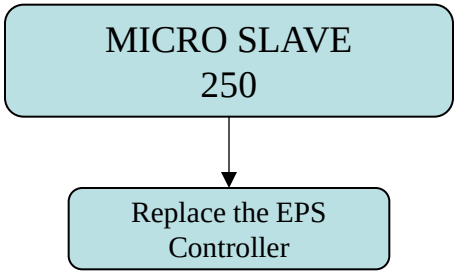

ALARM #251 on NODE #6 KM OPEN

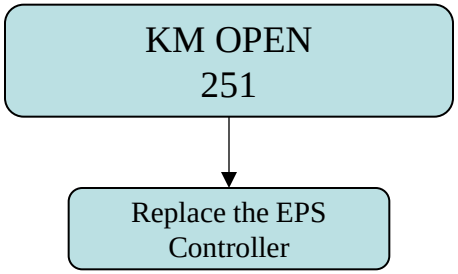

ALARM #252 on NODE #6 KS OPEN

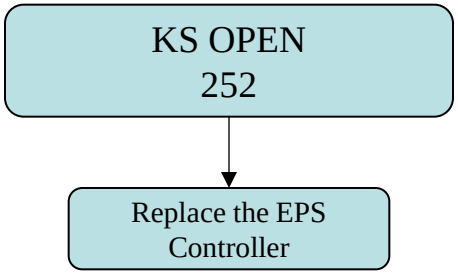

ALARM #253 on NODE #6 KM CLOSED

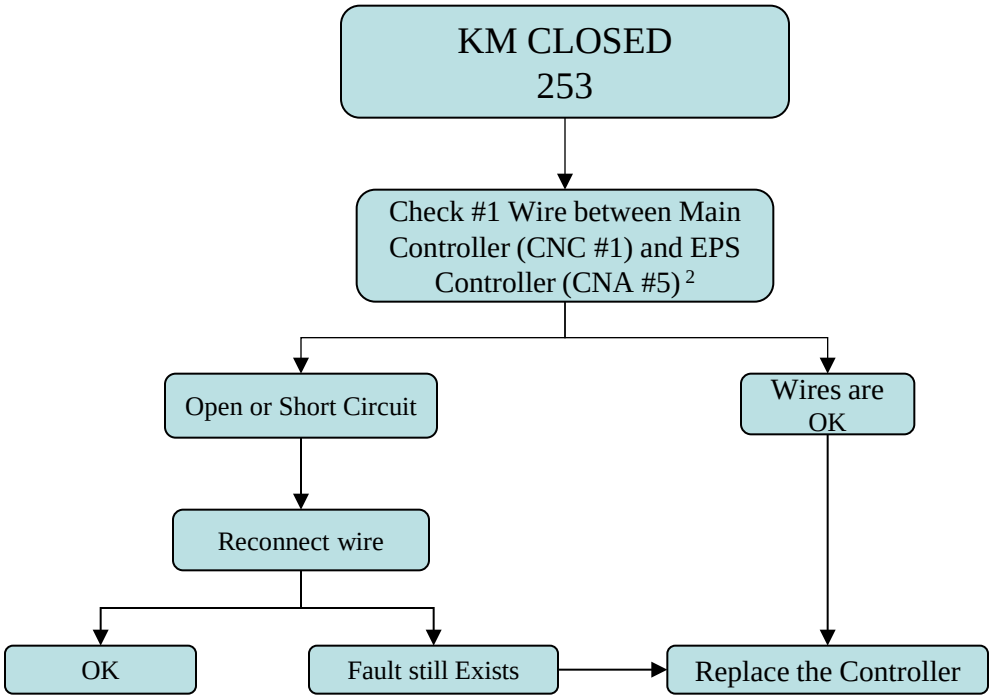

ALARM #254 on NODE #6 KS CLOSED

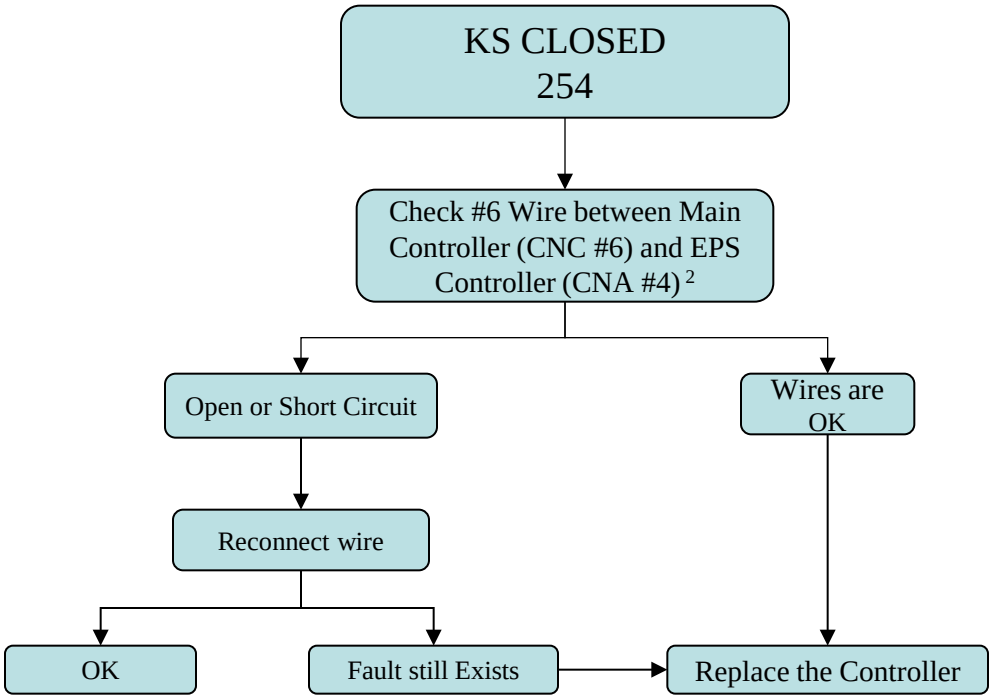

Appendix A

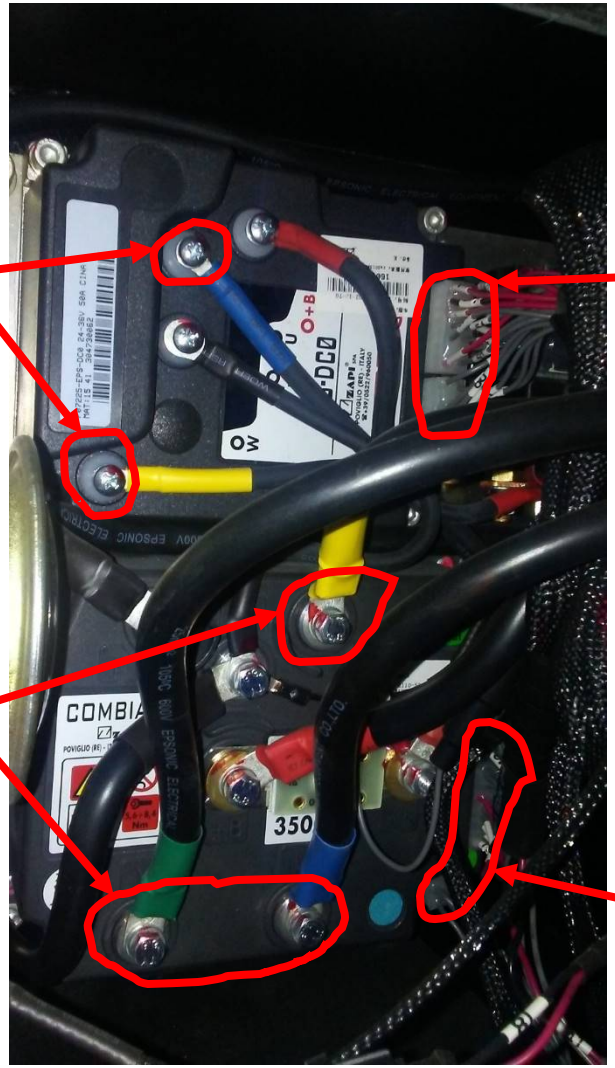
EPS Controller UVW Cables
EPS Controller Wires
Main Controller UVW Cables
Main Controller Wires

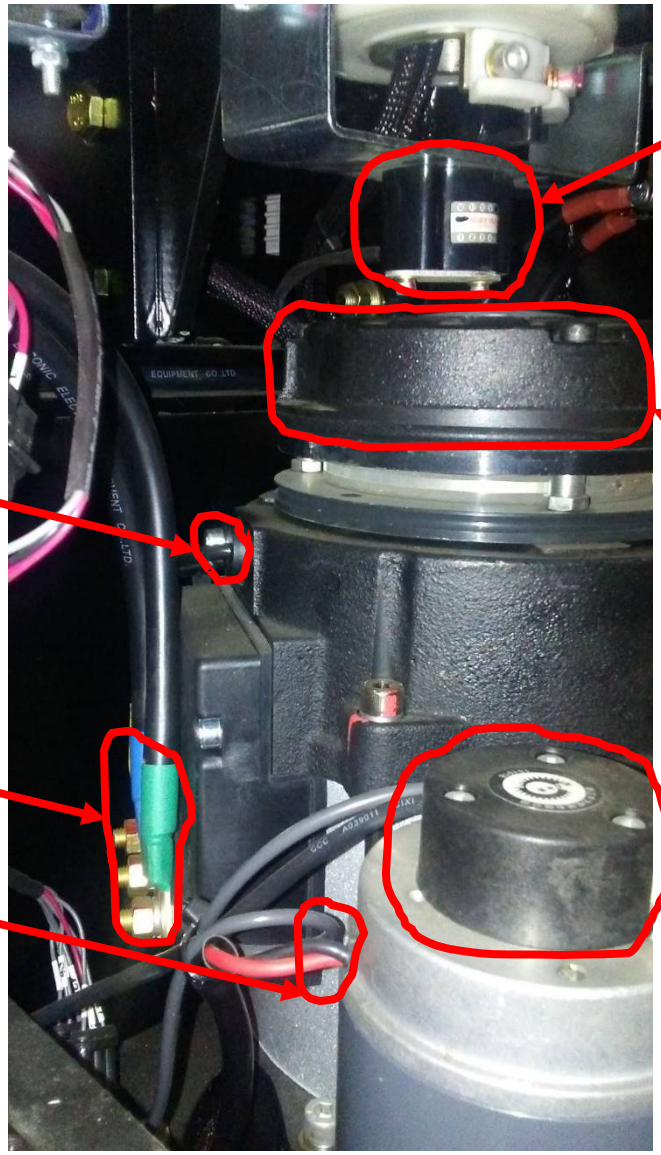
Twin Potentiometer
Electrical Brake
Traction Motor Temperature Sensor and Encoder
Traction Motor UVW Cables
EPS Motor Cables
EPS Motor Encode

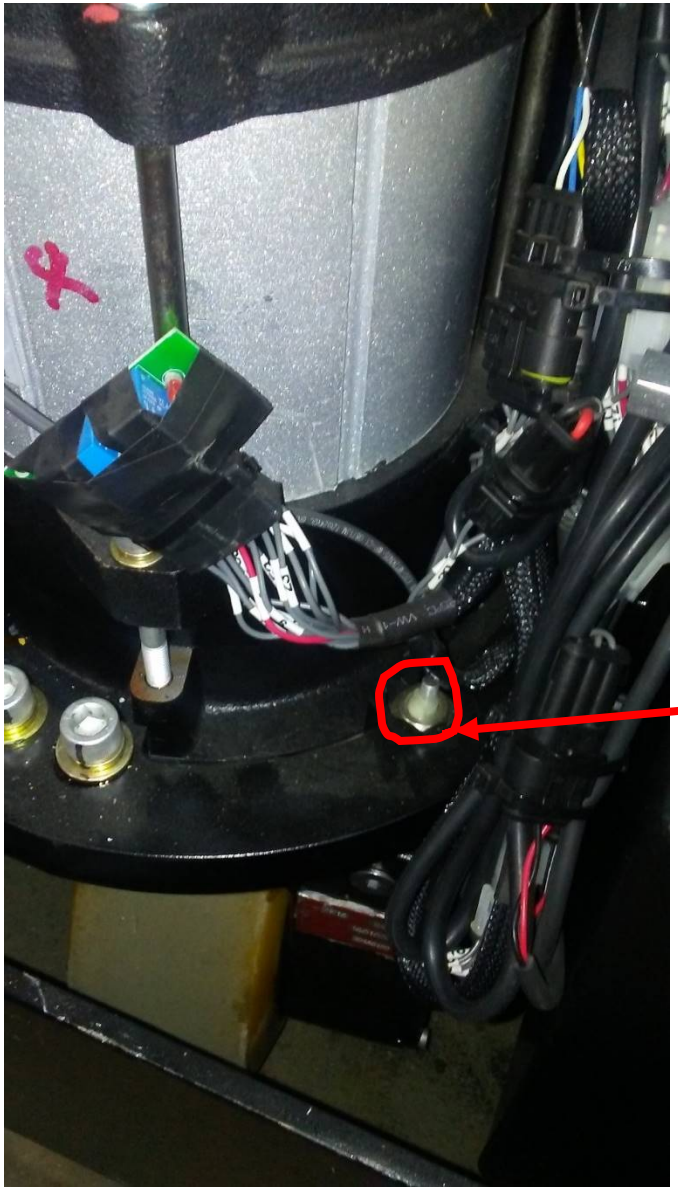
Toggle Switch

Tilting Button
Forward and Reverse SW
Accelerator
Side Shift Button
Lift and Lower Switch
Horn
Belly

Appendix B

1. Check if cables are opened or shorted. A shorted cable means the cable jacketing is damaged and it is shorting to another cable or it is in contact with a metal object like the frame. An open cable means one of the inside metal wires are cut/damaged. If you are not sure, pleasure measure the resistance of the individual wire or cable. If the resistance is more than 1 ohm, it is open.

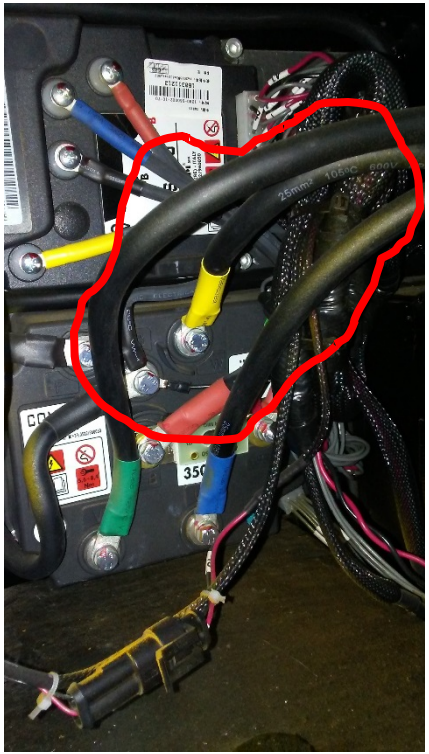

Check the connection points of the motor cables, and controller cables. Check the cable terminals for burn marks. Check if hardware is loose or burned. Ensure connections re tightened properly.

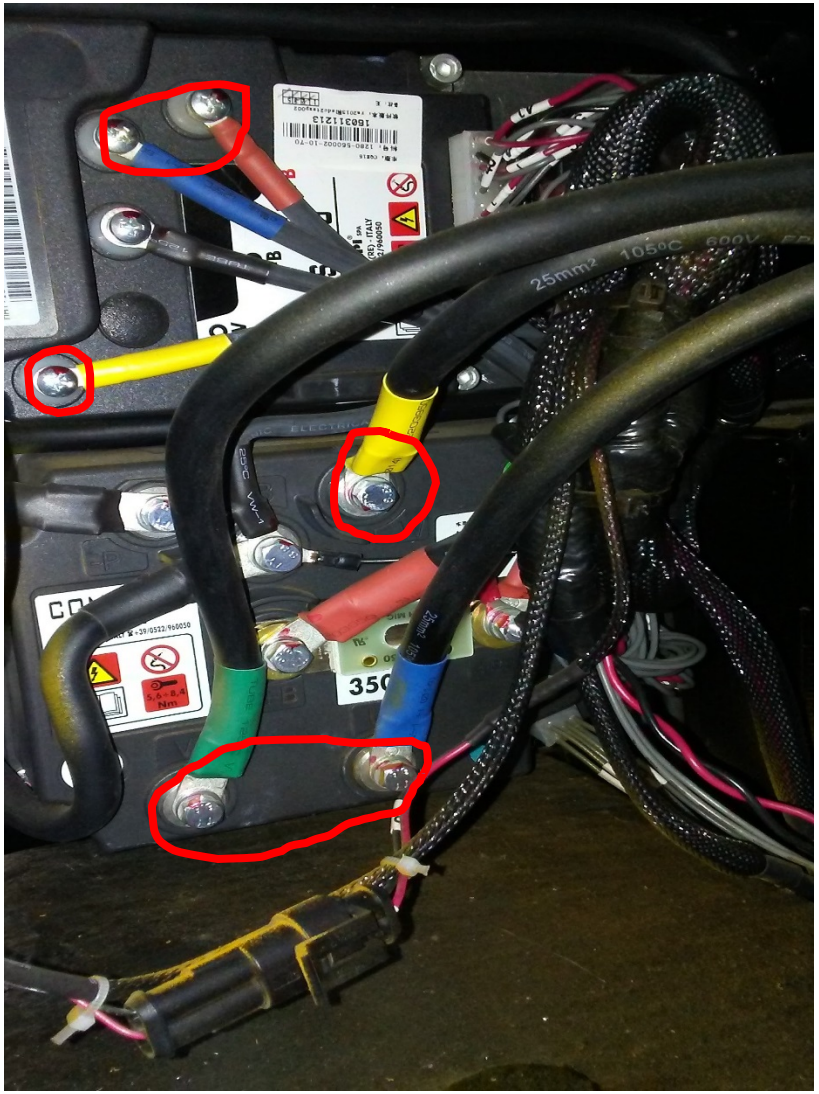

2. Check if cables are opened or shorted. A shorted cable means the cable jacketing is damaged and it is shorting to another cable or it is in contact with a metal object like the frame. An open cable means one of the inside metal wires are cut/damaged. If you are not sure, pleasure measure the resistance of the individual wire or cable. If the resistance is more than 1 ohm, it is open.

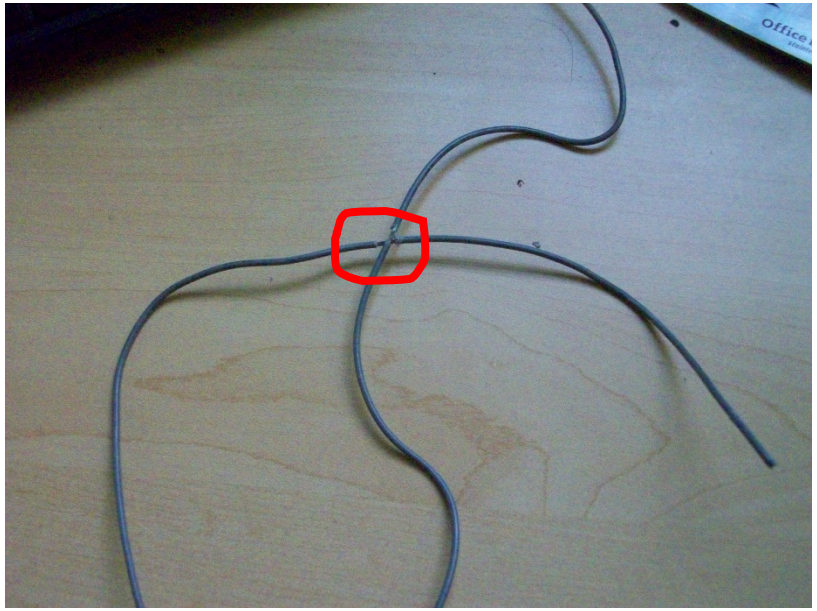

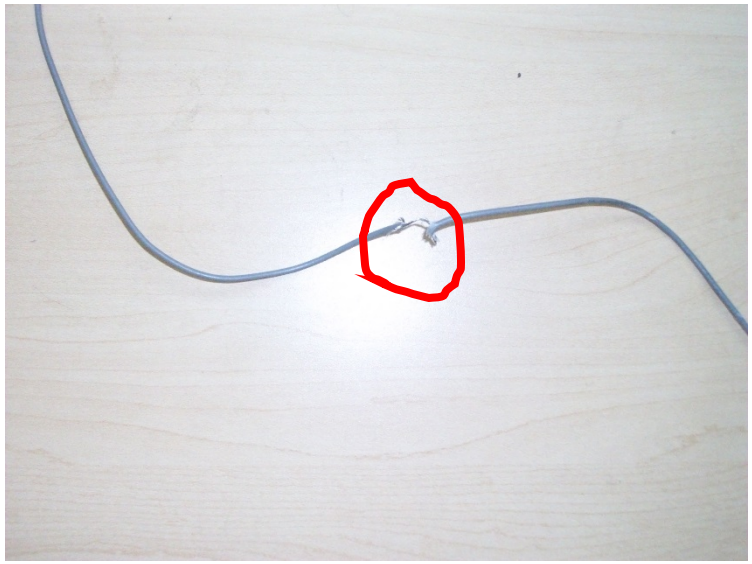

Check the connectors and pins on the Controller. Ensure connector locks are not damaged and no pins are broken or pushed out of the connector. Ensure no wires at pin terminations are cut/damaged

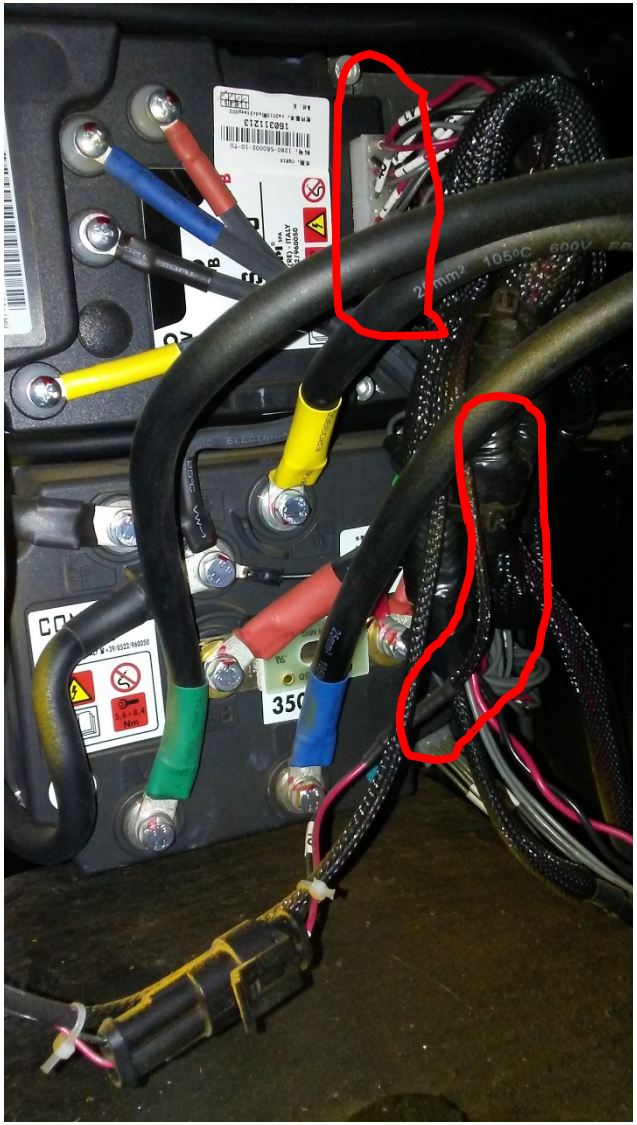

Check the connections between Controller wires and switches/sensors. Ensure wires are not cut or damaged.

Check if connectors are loose or burned (such as the 2 pin connectors on the Main Contact). Ensure the parts are properly tightened.

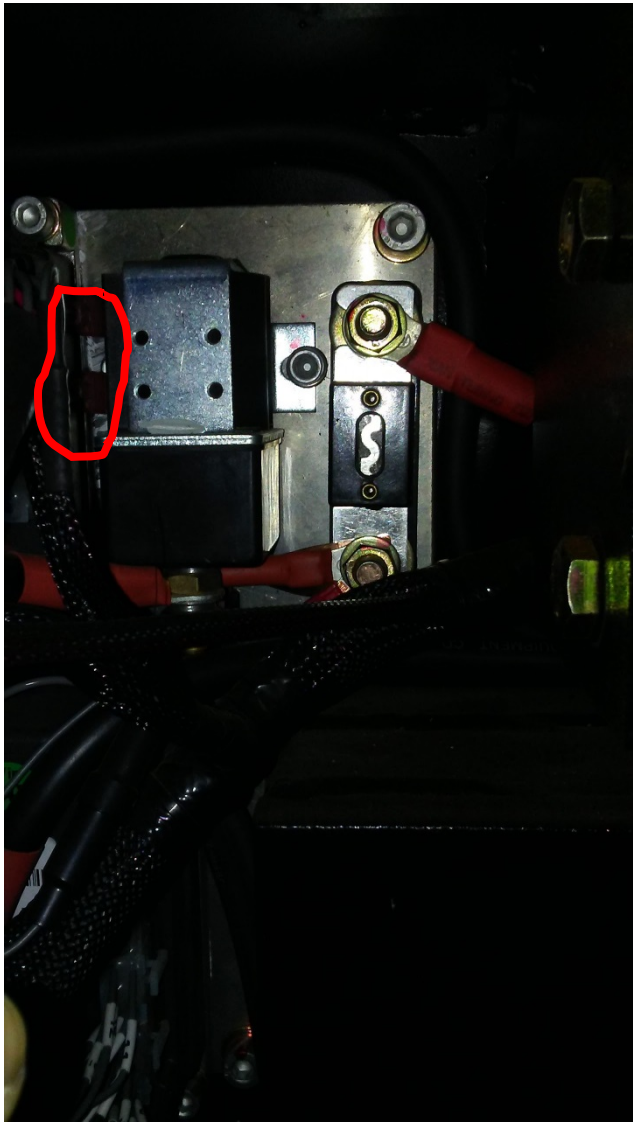

3. Check if cables are opened or shorted. A shorted cable means the cable jacketing is damaged and it is shorting to another cable or it is in contact with a metal object like the frame. An open cable means one of the inside metal wires are cut/damaged. If you are not sure, pleasure measure the resistance of the individual wire or cable. If the resistance is more than 1 ohm, it is open

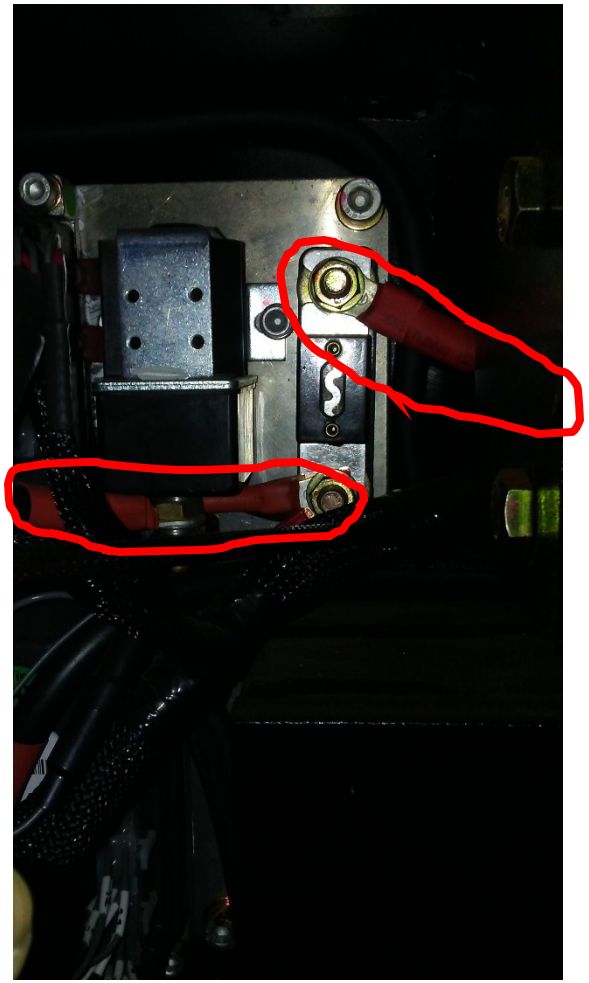

Check the Connectors between Battery and truck to see if they fit loose or are burned (Concentrate on the inside of the connector). If they do not fit correctly, replace cable lugs and/or connector housing to correct the issue.

Check if the fuses are blown out or not.

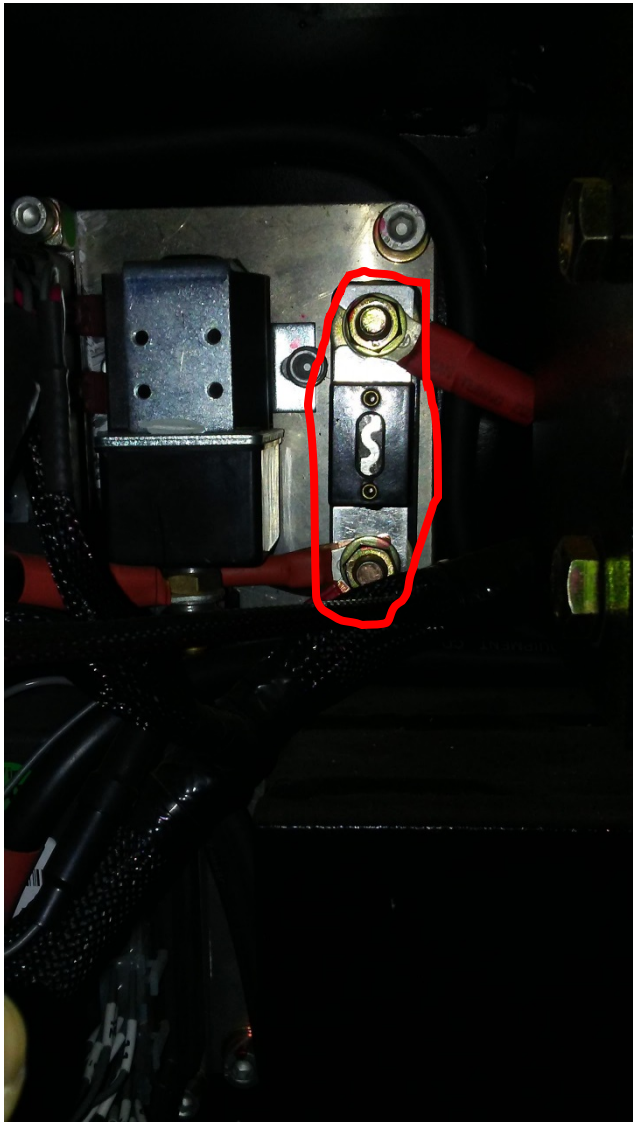

4. Check the voltage from the wire you want to check to the Controller negative (red circled).

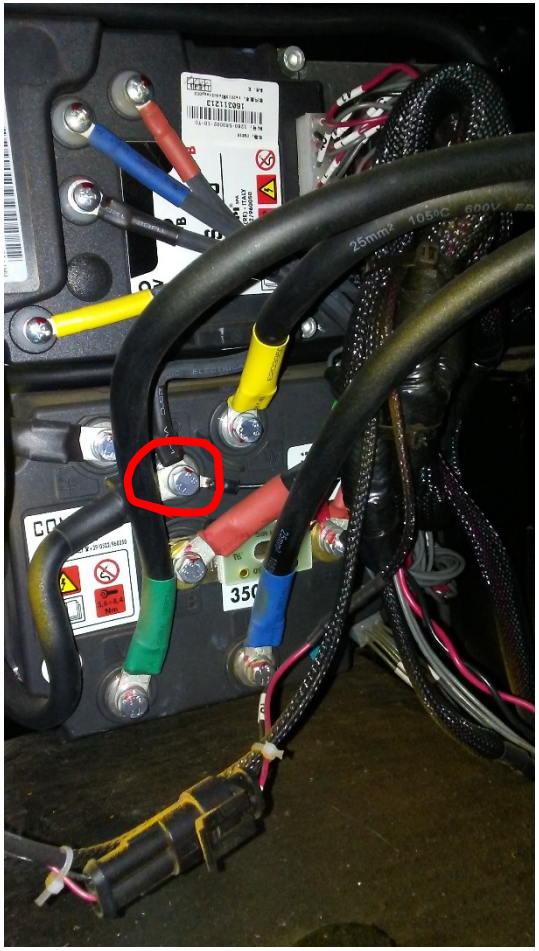

5. Open the battery case. Check the no load battery voltage for every battery.

- Check the no load voltage when the truck is lifting.

- Check the load voltage when the truck is lifting empty.
- Then check the load voltage when the truck is lifting with a load (red circled load, load should be no more than 500 pound). If the voltage difference between the empty lifting and loaded lifting is more than 5V. Please replace battery.