https://truckmanualshub.com/



MISTRAL AMERICA

40 - 45 - 50

TRAINING MANUAL
P/N 3676163M1 - EDITION 07-2004

Landini

https://truckmanualshub.com/

INTRODUCTION

This manual refers to tractor **MISTRAL AMERICA 40 - 45 - 50** manufactured by **LANDINI S.P.A.**. It is divided into sections identified by numbers with three/four figures. The pages of each section are numbered separately.

- The subjects described are listed in the general index and appear in more detail in the specific index of the section in question.
- The date of the relative edition/update is printed at the bottom of each page.
- Pages where future updates are made will have the same print number but the new date of issue.
  These pages will be supplied by a reprint of the duly updated index.
- The information in this manual was up to date on the date printed on the page. Since **LANDINI** constantly updates its range of products, some of the information could no longer be up to date following modifications made for technical or commercial reasons, or to adapt the machines to the laws in force in the various countries of use. Consult our Dealers and Assistance Centres if discrepancies are found.

LIABILITY

LANDINI S.p.A. declines all liability for incorrect servicing operations, use of spurious spare parts and tampering with parts of the product.

The person in charge of the personnel is responsible for ensuring that the safety regulations described in the manual are applied. This person must be qualified to carry out the operations required, be familiar and strictly comply with the prescriptions in this manual and the general safety regulations applicable. Failure to comply with the safety regulations may lead to persons being injured and damage to machine components.

PURPOSE OF THE MANUAL

This manual is mainly dedicated to workshop staff.
This manual contains all the necessary technical information concerning the machine, allowing the servicing technicians to work in safety and guarantee that the product remains perfectly efficient throughout its working life. However, it is not a substitute for thorough professional training.

To correctly carry out the servicing activities, it is assumed that the place of work conforms to the current standards governing safety and hygiene.
This manual contains all the information required to correctly carry out modifications, tune ups, repairs and overhauls.

Read this manual carefully before proceeding with any work. Correct repairs are guaranteed and the operators safeguarded from accidents by compliance with the instructions supplied and by using the right tools.

The illustrations and descriptions in this publication are purely indicative.
The Manufacturer reserves the right to make any modifications to the machines considered necessary at any moment for improvement purposes or for manufacturing and marketing requirements, without being obliged to give prior notice.

LANDINI S.p.A.
VIA G. MATTEOTTI, 7 - 42042 FABBRICO (RE) - ITALY
PRINTED S/N 3676163M1 - EDITION 07-2004
COMPILED BY SST s.r.l. - TURIN

https://truckmanualshub.com/

TABLE OF CONTENTS





2 ENGINE

Engine..... .....200 07-2004

3 CLUTCH

Clutch..... .....300 07-2004

4 GEARBOX

(12 + 12) and (16 + 16) Mechanical gearbox..... .....400 07-2004

5 TRANSMISSION

Rear differential axle..... .....500 07-2004
Front axle..... .....510 07-2004

6 POWER TAKE-OFF

Power take-off..... .....600 07-2004

7 HYDRAULIC CIRCUITS

Hydraulic circuits - Rear power lift..... .....700 07-2004
Hydraulic circuits - Auxiliary control valves..... .....710 07-2004

8 STEERING SYSTEM

Steering system..... .....800 07-2004

9 BRAKES

Brakes..... .....900 07-2004

10 ELECTRICAL SYSTEMS

Electrical system - Instruments..... .....1000 07-2004

Electrical system - Components..... .....1010 07-2004
Electrical system - Ignition system..... .....1020 07-2004
Electrical system - Recharging system..... .....1030 07-2004

Electrical system - Battery..... .....1040 07-2004

Electrical system - Electrical circuits..... .....1050 07-2004

https://truckmanualshub.com/

0^ SECTION100 - GENERAL INFORMATION <LŁ

INDEX

Description **Page**

SAFETY NOTES....100-3
Personal risk 100-3
Avoid accidents 100-3
General rules....100-3
Starting....100-5
Engine....100-5
Electrical systems....100-5
Hydraulic circuits 100-5
Wheels and tyres....100-6
Splitting and remounting parts....100-6

GENERAL INSTRUCTIONS 100-7
Battery 100-7
Adjuster shims....100-7
Spinning shaft seals 100-7
"O-ring" seals....100-7
Bearings 100-7
Spring pins 100-7
Notes about spare parts 100-8
Specific equipment....100-8

SYMBOLS 100-9
Meaning and use 100-9

DANGER SIGNS....100-11
Positions of the danger decals - WEO markets 100-11
Positions of the danger decals - NAO markets....100-16

SEALING AND FIXING SEALANTS 100-21

LUBRICANTS AND FUELS....100-22

CONVENTIONAL UNITS OF MEASUREMENT....100-23
Units of measurement (international system) 100-23
Conversion values for Imperial measurement system....100-23

STANDARD DRIVING TORQUE VALUES 100-24
Screws with metric threads....100-24
Nuts with metric threads....100-25

https://truckmanualshub.com/

SAFETY NOTES

Personal risk

This warning symbol draws your attention to mes- sages that are important for your safety.
Read the safety notes carefully and comply with the recommended precautions to avoid potential dan- gers and safeguard your health and personal safety.
This symbol appears in the text along with the fol- lowing key words:
WARNING - To warn of unsuitable repair opera- tions with potential consequences that could affect the repair technician's safety.
DANGER - To indicate warnings that specifically denote potential dangers for the operator's safety or for other directly or indirectly involved persons.



1

Avoid accidents

The majority of accidents that occur in workshops are caused by failure to comply with some simple and fun- damental rule of caution and safety. This is why ACCIDENTS CAN BE AVOIDED IN MOST CASES: all that's needed is to foresee the possible causes and consequently act with due care and caution.
However well a machine is designed and built, it is never possible to absolutely exclude all hazardous situa- tions.
A careful and prudent mechanic is the best guarantee against accidents.
Strict compliance with even only one elementary safety rule would be sufficient to avoid many serious acci- dents.
DANGER. Never carry out any cleaning, lubricating or servicing operations whilst the engine is running.

General rules

- Carefully comply with the prescribed maintenance and repair procedures.
- Never wear rings, wrist watches, jewellery, loose or flapping garments such as, for example: ties, torn clothing, scarves, unbuttoned jackets or with open zip-fasteners that could become caught in moving parts. You are advised to wear approved safety garments, such as: non-slip footwear, gloves, safety gog- gles, helmets, etc.
- Never carry out repair work on the machine whilst someone is sitting in the driver's seat, unless this per- son is an authorized operator who is helping with the operations in progress.
- Only operate the machine and use the relative implements when you are sitting in the driver's seat.
- Do not carry out any work on the machine when the engine is running, unless this is specifically pre- scribed.
- Stop the engine and make sure that the pressure has been relieved from the hydraulic circuits before removing any caps, covers, valves, etc.
- All servicing work must be carried out with the utmost care and attention.
- Ladders and platforms used in workshops or in the field must comply with the current safety regulations.
- Disconnect the batteries and label all the controls to warn others that work is being carried out. Block the machine and all implements that must be raised.
- Do not check or fill fuel tanks, batteries, or use ignition fluid when smoking or near naked flames as these liquids are inflammable.
- The brakes are disengaged when released by hand for servicing work: in these cases, the machine must be kept under control by means of chocks or similar.

https://truckmanualshub.com/

- The fuel pump nozzle must always remain in contact with the filier: Keep it there until you finish filling so as to prevent sparks from being created through an accumulation of static electricity.
- Only use the prescribed hitching points when towing. Make the connections with care: make sure that the provided pins and/or latches are firmly fixed in place before beginning to tow. Keep well away from tow bars, ropes or chains that are pulling a load.
- If possible, use a trailer or truck with a lowered loading platform when transferring a faulty machine.
- When a machine must be loaded on to or unloaded from the transport vehicle, choose flat ground able to provide a solid bearing surface for the wheels of the trailer or truck. Fasten the machine to the truck or trailer platform firmly and block the wheels as required by the haulage contractor.
- Only use auxiliary power sources with grounding circuits able to prevent electric shocks for electric heat- ers, battery chargers and similar equipment.
- Use hoists and similar equipment with an adequate carrying capacity if heavy parts must be lifted or transported.
- Pay particular attension to bystanders.
- Never pour petrol or diesel fuel into wide and shallow open vessels.
- Never use petrol, diesel fuel or other inflammable fluids as detergents: use the nonflammable and non- toxic solvents available in the shops.
- Protect your eyes by wearing goggles with side guards when using compressed air to clean parts.
- Limit the pressure to 2.1 bar at most, in compliance with the local or national laws in force.
- Do not run the engine in a closed room without adequate ventilation.
- Do not smoke, use naked flames or create sparks in the vicinity when refuelling or handling easily inflammable materials.
- Do not use flames as a means of lighting when repairing the machine or searching for "leaks".
- Move with the greatest care when working under, on or near the machine. Wear the recommended safety garments: a helmet, goggles and special safety footwear.
- When the engine must be running in order to make the inspections, ask for help from an operator who must remain in the driver's seat and keep the mechanic under visual control at all times.
- If servicing is required away from the workshop, park the machine on flat ground and block it. If work on slopes is unavoidable, block the machine and move it to a horizontal surface as soon as this can be done within a certain safety margin.
- Do not use crushed or bent chains or ropes: when lifting or towing are required. Always wear suitably thick gloves to handle them.
- Chains must be firmly fixed in place: make sure that the fastening is sufficiently strong to bear the load in question. Have all bystanders move well clear of the connection, chains or ropes used for lifting or towing.
- The area where the servicing operations are carried out must always be kept CLEAN and DRY. Puddles or water or oil stains must be cleaned up immediately.
- Do not form heaps of rags soaked in grease or oil: they could catch fire very easily. Always put them in a closed metal container.
  Check, regulate and lock the driver's seat before starting the machine or implements. Make sure that there are no bystanders within the range of action of the machine or implements.
- Do not carry objects in your pockets that could drop unseen into the internal mechanisms of the machine.
- Wear goggles with side guards, helmets, special safety footwear and gloves when you could be struck by metal objects and similar, thrown up during the servicing work.
- Use the necessary safety protections when welding operations are carried out: dark glasses, helmets, dungarees, special gloves and footwear. Dark glasses should also be worn by the people not actually doing the work but who are in the vicinity when welding is being carried out. NEVER LOOK AT THE WELDING ARC WITHOUT ADEQUATE EYE PROTECTION.
- Metal ropes become frayed with wear: always protect yourself in an adequate way when handling them (wear gloves, goggles, etc.).

https://truckmanualshub.com/

- Handle all parts with the utmost care. Keep your hands and fingers well away from gaps, wheelwork and similar. Always use approved personal protection devices such as safety goggles, gloves and safety footwear.

Before you get on to the tractor, it is essential for you to have read and strictly complied with the instructions in the operation and maintenance manual.

Starting

- Do not allow the engine to run in a closed room without adequate ventilation systems able to dispose of the exhaust gas.
- Never put your head, body, limbs, feet, hands or fingers near spinning fans or belts.

Engine

- Before removing the radiator plug completely, turn it very slowly to relieve the pressure in the circuit. Coolant fluid must only be topped up with the engine at a standstill or idling, if hot.
- Do not refuel whilst the engine is running, particularly if it is hot. This could lead to the risk of a fire outbreak if fuel were to be spilt.
- Do not attempt to check or adjust the tension of the fan belts with the engine running.
  Do not regulate the fuel injection pump whilst the machine is on the move.
- Never lubricate the machine when the engine is running.

Electrical systems

- If auxiliary batteries must be used, remember that the cables must be connected in the prescribed way at both ends: (+) with (+) and (-) with (-). Do not short-circuit the terminals. THE GAS ISSUED BY BATTERIES IS HIGHLY INFLAMMABLE. Always leave the battery housing uncovered when recharging, to ensure a more efficient ventilation. Never ever check the battery charge using the "jumpers" obtained by placing metal objects on the terminals. Prevent sparks or flames in the battery area. Do not smoke as this could cause explosions.
- Before proceeding with any work, make sure that there are no fuel or electricity leaks: repair these leaks before proceeding.
- Do not recharge batteries in closed places: make sure that there is adequate ventilation to prevent accidental explosions from occurring due to an accumulation of the gas issued when recharging.
- Always disconnect the batteries before working on the electrical system.

Hydraulic circuits

- Fluid leaking from a very small hole can be almost invisible yet have sufficient force to penetrate under the skin. Use a piece of cardboard or wood if you must check for such leaks. NEVER CHECK FOR LEAKS WITH THE HANDS: immediately seek medical help if fluid penetrates under the skin. Serious infections or dermatitis may occur if you fail to receive prompt medical treatment.
- Use the right tools to check the pressure in the circuits.

0^ SECTION100 - GENERAL INFORMATION <LŁ

Wheels and tyres

- Make sure that the tyres are correctly inflated to the pressure indicated by the manufacturer.
  Periodically check the rims and tyres to make sure that they are not damaged.
- Keep to the side of the tyre when correcting the inflation pressure.
- Only check the pressure with the machine unloaded and the tyres cold, to prevent incorrect measurements and overpressures. Do not reuse repaired wheel parts as badly made welds, brazing or heating could have weakened them and cause breakage.
- Never cut or weld a rim with a tyre mounted and inflated.
- Block the machine at the front and rear on all wheels before demounting these latter. After you have jacked up the machine, prevent it from dropping by placing supports underneath, in compliance with the current laws in force.
- Deflate the tyres before removing any objects jammed between the treads.

- Never inflate the tyres with inflammable gas. This could lead to explosions and injure bystanders.

Splitting and remounting parts

- Lift and handle all heavy parts with lifting equipment of an adequate capacity. Make sure that the parts are supported by appropriate harness and hooks. Use the lifting eyelets provided. Take care of bystanders near the load being lifted.
- Handle all parts with the utmost care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.
- Do not twist metal ropes or chains. Always wear safety gloves when handling cables or chains.

GENERALINSTRUCTIONS

IMPORTANT

WARNING

All the maintenance operations and repairs described in this manual must be carried out by the LAN DI NI assistance network only, in strict compliance with the indications given and using special tools if necessary.
Anyone who carries out the described operations without strictly complying with the instructions becomes personally responsible for any consequent damage.

Battery

Before proceeding with any work, disconnect and insulate the negative battery cable unless other instruc- tions are given for the specific operation required (for example: an operation where the engine must be run- ning). After the operation has been terminated, detach this cable in order to finish the work.

Adjuster shims

Whenever adjustments are made, select the adjuster shims by measuring them one by one with a micrometre and then adding the values gauged: do not trust in the erroneous measurement of the complete pack or in the nominal value given for each ring.

Spinning shaft seals

Comply with the following instructions to correct mount the spinning shaft seals:

- before they are mounted, allow the seals to soak for at least half an hour in a bath of the same type of oil as the one they will be sealing;
- thoroughly clean the shaft and make sure that its operating surfaces are not damaged;
- position the sealing lip towards the fluid. If the lip is the hydrodynamic type, the direction in which the scoring points (considering the direction in which the shaft spins) must tend to make the fluid flow towards the internal part of the seal;
- spread a film of lubricant (oil is preferable to grease) on the sealing lip and fill the gap between the sealing lip and dust guard lip of double-lipped seals with grease;
- fit the seal into its housing by pressing or use a punch with a flat contact surface. Never hit the seal with a hammer or mallet;
- when a seal is mounted, make sure that it is inserted perpendicular to its seat. After mounting, make sure that it touches the supporting ridge (if applicable);
- to prevent the seal lip from being damaged by the shaft, fit an adequate guard whilst the two parts are being assembled.

"O-ring" seals

Lubrificate the O-RING seals before they are fitted into their seats to prevent them from rolling around themselves and becoming twisted as they are mounted, something that would compromise their sealing ability.

Bearings

It is advisable to proceed in the following way when mounting bearings:

https://truckmanualshub.com/

- heat them to 80 - 90 °C before fitting them on to their respective shafts;
- cool them before externally fitting them into their seats.

Spring pins

When mounting split tube spring pins, make sure that their notches point in the direction of the force exercised on the pin itself.

Spiral spring pins do not need to be set in any direction when mounted

Notes about spare parts

Only use genuine LANDINI spare parts as only these are able to guarantee the same quality, life and safety as the original components mounted on your machine.

Only **genuine LANDINI spare parts** can provide this guarantee.

Give the following information when ordering spare parts:

- tractor model (commercial denomination) and chassis number;
- engine type and number;
- order number of the required part, which can be found in the "Spare Parts Catalogue", according to which the orders are fulfilled.

Specific equipment

The equipment that LANDINI proses and illustrates in this manual is:

- explicitly researched and designed for work on LANDINI tractors;
- necessary for reliable repairs;
- carefully made and thoroughly tested to provide efficient and long-lasting tools.

Repairers should also remember that using the right equipment means:

- working in technically optimum conditions;
- obtaining the best result;
- saving time and effort;
- working in greater safety.



https://truckmanualshub.com/

SYMBOLS

Meaning and use

Certain symbols are used in this manual to underline and draw the reader's attention to certain particular aspects of the description, or to indicate the type of operation being illustrated.

The meanings of the various symbols used are described in the table below.

SYMBOLS	MEANING	NOTES
	Warning: personal risk	Indicates a danger with the risk of even mortal accident for the user. Pay the utmost attention to the texts indicated with this symbol.
	Warning: environmental hazard	Indicates a danger with the risk of damage to the natural environment. Pay the utmost attention to the texts indicated with this symbol.
		Warns that the machine or some other personal property of the user could be damaged.
		Indicates a warning, a note about key functions or some other useful information.
	Prevent damage to material	This indication means that there is a considerable risk of damage to a part, e.g. when the wrong tool is used or an assembly made by means of an incorrect procedure.
	Special tool/ specific equipment	A special tool or specific equipment must be used for the operations.
	Visual observation	A visual inspection must be made. The user must read a measurement value, check an indication, etc...
	Listen	The operator must listen to a noise made when the machine operates. The inspection serves to identify abnormal noise.
	Tighten and torque	Symbol associated with a value: use a torque wrench to suit the value given.
	Torquing with angle	Symbol associated with two values: use a torque wrench to suit the value given and measure the dwell angle at that torque value.
	Adjustment/Regulation	Operation carried out in order to obtain precise values (pressure, preload, relative distance, etc.).
	Measuring/Gauging	Operation carried out in order to measure a value required to restore optimum functional conditions in the correct way.


SYMBOLS	MEANING	NOTES
r-$	Lubrication	Lubrication (oiling, greasing, etc...) of a part/ device.
	Sealing/Glueing	Sealant required in order to couple two parts together.
▸4	Positioning	Coupling with relative position references.
	LANDINI Spares.	Indicates that only LANDINI spare parts must be used.

DANGER SIGNS

If a tractor part bearing a decal with a safety note (yellow colour) is replaced, it is ESSENTIAL to affix the same decal to the spare part.
A complete list of all the places where decals are applied is given below.

Positions of the danger decals - WEO markets

https://truckmanualshub.com/

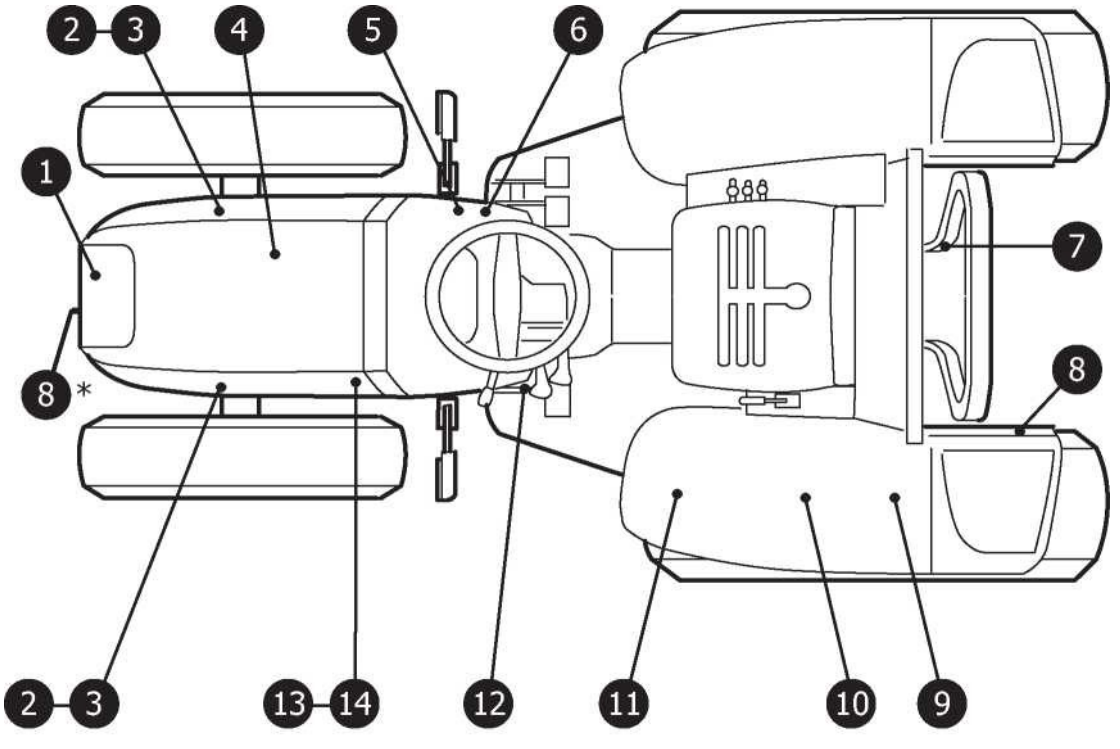

2LA0732





* Only with front PTO

Positions of the danger decals
Complete set of danger decals WEO 4203959M91


https://truckmanualshub.com/

REF.	CODE	POSITION	DESCRIPTION	SYMBOL		
1	3647 158 M1	Positioned near the battery cover.	**WARNING:**Danger of electric shock. Always disconnect the negative battery terminal before removing the battery or before servicing the electri- cal system.		A	
2	3559 556 M1	Positioned on the left and right sides of the radiator.	**WARNING:**Danger of entangle- ment. Keep your hands well clear of the fan blades when the engine is running. Always keep the guards and screens mounted.		/ w\ ^.0	
3	3559 559 M1	Positioned on both sides of the radiator.	**WARNING:** Very hot surfaces. The hands and fingers could be scorched. Warning: keep well clear of hot parts. Keep at a safety distance. **WARNING:**Danger of entangle- ment. Keep your hands well clear of spinning parts. Take care not to become entangled in the belts or pul- leys whilst the engine is running. Keep the guards in place.		0-f A uP *0	




https://truckmanualshub.com/

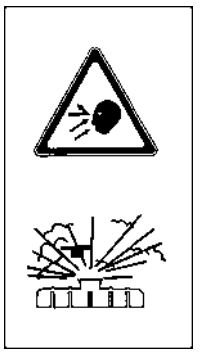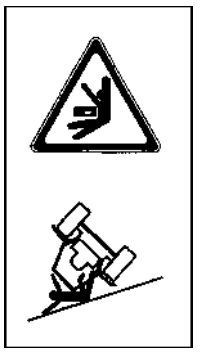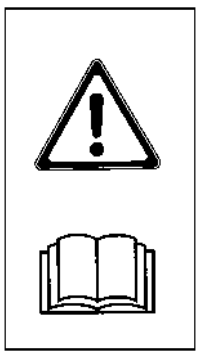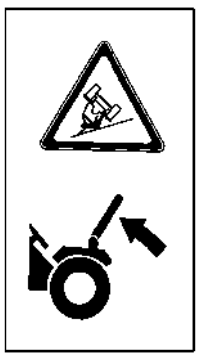REF.	CODE	POSITION	DESCRIPTION	SYMBOL
4	**4203 963 M1**	Positioned under the cover of the radiator plug.	**DANGER.** Jets of hot steam or hot water. Protect the face. The radiator will be under pressure when the engine is hot. Remove the plug with caution when the engine is cold.	
5	**3559 557 M1**	Affixed to the bonnet.	**DANGER.** The tractor could overturn and crush the chest. Hold firmly on to the steering wheel if the tractor is overturning. DO NOT leave your seat or jump out of the tractor.	
6	**3559 558 M1**	Affixed to the dashboard.	**WARNING:** Take care. Consult the operation and maintenance manual for information about safety and how to use the tractor.	
7	**3647 033 M1**	Affixed to the safety frame on footstep tractors.	**WARNING:** Danger of overturning and crushing. Always keep the safety frame mounted. NEVER work, NEVER remove, NEVER overturn, NEVER bend, NEVER repair and NEVER con- nect any implement to the safety frame. When necessary, only lower or remove the safety frame for servicing work. In this case, drive with the utmost care as the frame will no longer provide any protection.	

https://truckmanualshub.com/

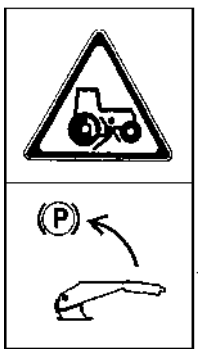
REF.	CODE	POSITION	DESCRIPTION	SYMBOL
8	3559 553 M1	Positioned on the inside of the left mudguard.	**DANGER.**Danger of entanglement. Keep well away from spinning shafts. Take care NOT to get caught up by the PTO driveline. Keep all the guards mounted on the transmission shafts of the tractor or implements.	
9	3648 447 M1	Affixed to the safety frame on tractors with seat belts.	**WARNING:**Danger of being crushed. Always wear the seat belt when the safety frame is in the vertical position.	
10	3647 032 M1	On the rear left mudguard on tractors without 2nd passenger seat and for tractors with safety frames.	**WARNING:**Danger of being crushed. DO NOT allow anyone to sit on the mudguards or on any other part of the tractor or towed implements.	
11	4203 962 M1	On the left mud-guard.	**WARNING:**Danger of being crushed. Before leaving the tractor unattended, apply the parking brake, lower the implement, stop the engine and remove the igni-tion key. If the engine must be left running, apply the parking brake, lower the implement and move the reverse shuttle lever to the neutral position.	

https://truckmanualshub.com/

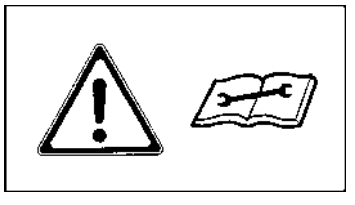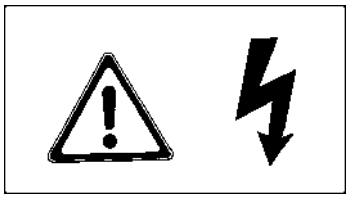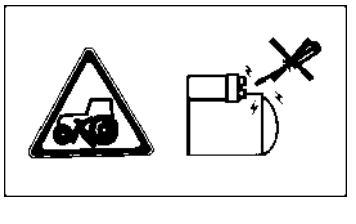REF.	CODE	POSITION	DESCRIPTION	SYMBOL
12	**3647 157 M1**	Positioned near the dashboard or battery.	**WARNING:** Risk of causing damage. Read the operation and maintenance manual before proceeding with any work on the tractor.	
13	**3559 555 M1**	On the starter motor.	**WARNING:** Electrocution. Always disconnect the negative battery terminal before removing the cover of the solenoid and before serv- icing the electrical system.	
14	**3648 152 M1**	On the starter motor.	**DANGER.**Danger of being crushed. DO NOT start the engine by shorting across the terminals of the starter motor. This operation will place your life in danger. Only start the engine when you are sitting in the driving seat.	

https://truckmanualshub.com/





Positions of the danger decals - NAO markets

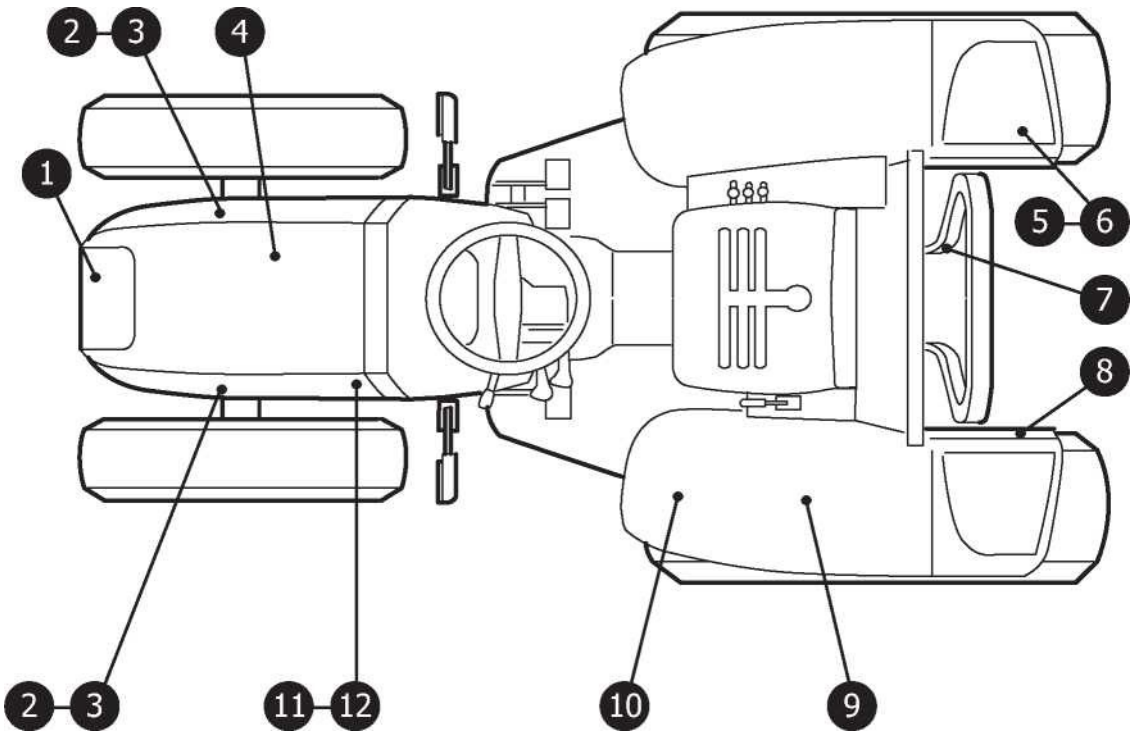

2LA0733



Positions of the danger decals
Complete set of danger decals NAO 3558702M95

https://truckmanualshub.com/

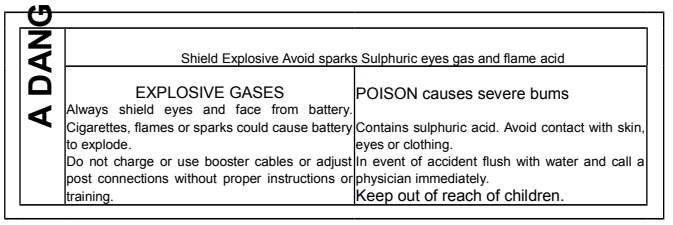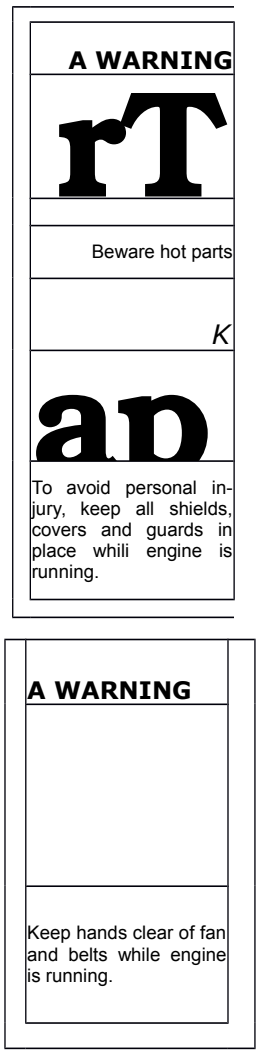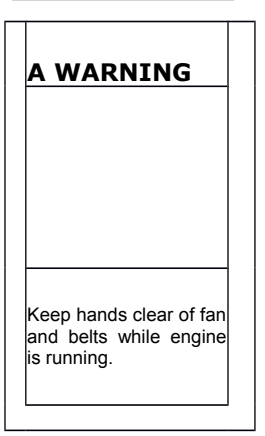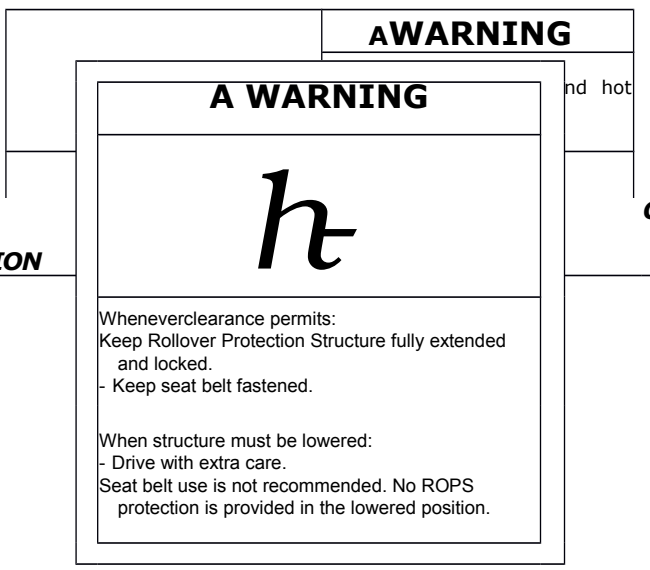REF.	CODE	POSITION	SYMBOL
1	3558 711 M1	Located near the battery cover.	
2	3558 706 M1	Located on right and left-hand side of radiator, or on the air conveyor.	
3	3558 712 M1	Located right and left-hand side of radiator.	
4	3558 708 M1	Located near the battery cap.	
7	3647 053 M1	Located inside cab on the left hand pillar or on Located on the safety ROPS for footstep tractors.	

https://truckmanualshub.com/

https://truckmanualshub.com/

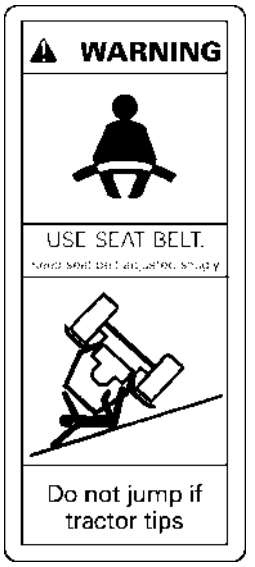REF.	CODE	POSITION	SYMBOL
8	**3558 709 M1**	Located at rear of cab on the inner side of the left fender.	▲ **WARIMING** Persona! injury could result from PTO driveline separation. 1. Drawbar supplied provides standard distance "A". Do not change. PTO / SHAFT SIZE / DISTANCE "A" 540 / 35mm (1.38 in) / 356mm (14.0 in) 1000 / 35mm (1.38 in) / 406mm (16.0 in) *---------■ 2. Three-point link distance "C" and mounter implement distance "D" may not be standard. Measure distance "B" over complete lift range for tractor and implement combination. Select driveline length to ensure that driveline will not bottom out at minimum distance "B" and will have sufficient overlap at maximum distance. 
9	***3558 707 M1***	Located inside cab or on the right fender for footstep tractors.	

https://truckmanualshub.com/

REF.	CODE	POSITION	SYMBOL
10	3558 703 M1	Located inside cab or on the left-hand fender for platform tractors.	A CAUTION Read the operator instruetion Book for safety information and operating instruetions. Fasten your seat belt be- fore traetor operation. Start engine only when seated in operator's seat. Make sure everyone is elear of traetor and equpement before starting engine or operation. Keep all shields, eovers and guards and plaee and stay away from moving parts while engine is run- ning. Plaee transmission shift lever in neutral and apply parking brake before us- ing external 3-point hiteh eontrols. Apply parking brake, lower equpment, stop engine and remove key before leaving the traetor unattended. Wait for all movement to stop before servieing trae- tor or equpment. Seeurely support or bloek lifted implements whieh must be in the raised po- sition for servieing or ad- justment. Couple brake pedals together for road travel. Use flashing warning lights and SMV emblem when on publie roads, exeept where prohibited by law. Always drive with eare and attention.
11	3558 705 M1	Located on the starter motor.	A WARNING Remove negative ca- bles from batteries before removing solenoid cover and before servicing the electrical system.
12	3648 153 M1	Located on the starter motor.	ADANGER Start only from seat with transmission and PTO in neutral. Starting in gear kills.

https://truckmanualshub.com/

SEALING AND FIXING SEALANTS

Apply the sealants given in the table to the surfaces to couple.

Prepare the surfaces in the following way before applying the sealants:

- remove any deposits with a metal brush;
- thoroughly degrease the surfaces with one of the following detergents: trichloroethylene, wash oil or water and soda.

	DENOMINATION	TYPE	USE
Threaded couplings locking	Weak locking	Loctite 222	Weak locking and sealing of screws, adjuster screws.
	Medium-strong thread locking	Loctite 242	Medium-strong locking and sealing of threaded parts in general.
	Strong thread locking	Loctite 270	Highly resistant fixing, locking and sealing of stud bolts, nuts, screws.
	Penetrating thread locking	Loctite 290	Capillary locking and sealing of already mounted parts. Microporosity sealing.
Smooth couplings	Locker	Loctite 601	Highly resistant fixing of coupling surfaces.
	Fixer	Loctite 641	Medium-strong resistance fixing of bushes, bearings, etc. Demounting possible using normal tools.
	Super-locker	Loctite 638	Highly resistant fast fixing of cylindrical parts. Dynamic work.
	High-temperature locker	Loctite 648	Fast fixing of cylindrical parts highly resist- ant to heat.
Hydraulic unions	Hydraulic-hermetic	Loctite 542	Sealing of threaded unions on hydraulic or pneumatic pipes up to %" in diameter
	Pipe-hermetic	Loctite 572	Sealing of threaded unions in general.
Sealing of surfaces	Thick flat-hermetic	Loctite 510	Sealing of flat surfaces. Manual application.
	Flat-hermetic	Loctite 573	Sealing of precise flat surfaces. Applied by hand or by screen-print systems.
Engine	Hermetic plastic - spray type	Perkins power part hylomar	Sealing of cylinder head surfaces.
	Hermetic - paste type		Sealing of sump surfaces, covers.

https://truckmanualshub.com/

LUBRICANTS AND FUELS

Component supplied	Quantity dm³ (litres) MISTRAL AMERICA 40	45	50	Specifications	Ambient temperaturę	SINCLAIR	MOBIL	ESSO	SHELL	BP	LAND OIL	AGIP
Engine with filter	4.7	5.8	5.8	SAE CD	Below 0°C	HY VIS HD EXTRA S3 Plus 10 W	DELVAC 1310	Essolube D / 3 Plus 10 W	RIMULA CT Oil 10 W	BP Vanellus C3 10 W	HDL S3 10 W	DIESEL SIGMA 10W
				API CD - SF API CE - SF	from 0 to 27°C	HY VIS HD EXTRA S3 Plus 20 W 20	DELVAC 1320	Essolube D / 3 Plus 20 W	RIMULA CT Oil 20 W	BP Vanellus C3 20 W	HDL S3 20 W 20	DIESEL SIGMA 20W
				MIL-L-2104D MIL-L-2104E	Over27°C	HY VIS HD EXTRA S3 Plus 30	DELVAC 1330	Essolube D / 3 Plus 30 W	RIMULA CT Oil 30 W	BP Vanellus C3 30 W	HDL S330	DIESEL SIGMA 30
				CCMCD2/D4				Essolube XD / 3 EXTRA	Universal Farm	BP Super tractor Oil Universal	UNILAND 15 W 40	SIGMA TURBO UMITRACOTR S
					Any temperaturę	HY VIS HD EXTRA S3 Plus 15 W 40	Mobiland Super Universal	Unifarm	Oil Shell Agrarna	-	SUPERLAND UNIVERSAL15 W 40	SUPER TRACTOR UNIVERSAL
Change ^ steering and hydra ulic circuits and rear finał drives.	24	24	24	API GL 4 MF 1135	Any temperaturę	TRANSFLUID AS/B	Mobilfluid 422 (1)	Torque fluid 62 (1)	Donax TD (1)	Tractran 8 (1)	LOT OTRAS/B (1)	ROTRA MULTITHT
Front axle and front finał drives	3.5	3.5	3.5	API GL 5 MIL-L-2105D	Any temperaturę EP 90 -140	HD GEAR OIL MOBILUBE HD 90	MOBILUBE GX 90 GP 80 W 90	GEAR OIL HD 80 W 90	SPIRAX Oil 80 W 90	BP Hypogear 80 W 90	LOT CX	ROTRA HP
Cooling Circuit	2.0	2.7	2.7	AGROLUBE MANTOS Antifreeze fluid in the foliowing percentages				Degrees °C	-8°	-15°	-25°	-35°
								%	20	30	40	50
Fuel tank	50	50	50	Decanted and filtered diesel fuel				ISO 8217 DMA, SB2869 Al or A2 (cetane N.: 45 min)				

(1) Use only lubricants that comply with MF, FORD ESEM M 2 86 A and B, M-F 1135 specifications, with additives and anti-noise proper- ties. The use of different types of oil, or mixing other types of oil into the oil supplied with the tractor can lead to increased noise.

https://truckmanualshub.com/

CONVENTIONAL UNITS OF MEASUREMENT

Units of measurement (International system)
Force in (Newtons)
Power in kW (kilowatts)
Torque in Nm (Newton meter)

Conversion:

1 N	1 kg	= 0.1019 kg	9.81 N

Specific consumption in g/kWh (grams per kilowatthour)

Conversion:

1 kW	=	1.36 HP	Other units of measurement used:
1 kW	=	1.34 HP	
1 CV	=	0.736 kW	HP (Horsepower)
1 HP	=	0.986 HP	HP (Horsepower)
1 HP	=	0.746 kW	
1 HP	=	1.014 HP	

Pressure in kPa (kilopascal)

Conversion:

1 Nm	=	0.1019 kgm	
1 kgm	=	9.81 Nm	
1 kgm	=	10 Nm *	

Conversion:

1 g/kWh	=	0.736 g/HPh	Other units of measurement used: g/HPh (grams per horsepower hour)
1 g/HPh	=	1.36 g/kWh	

Conversion:

1 kg/cm^2	=	1 Atm	Other units of measurement used: kg/cm^2 (kilogram/square centimeter) Atm (Technical atmosphere) psi (Pounds per square inch)
1 kg/cm^2	=	98.1 kPa	
1 kg/cm^2	=	0.981 bar	
1 kg/cm^2	=	1 bar *	
1 kg/cm^2	=	14.22 psi	
1 bar	=	100 kPa	
1 bar	=	1.02 kg/cm^2	
1 bar	=	14.51 psi	
1 psi	=	6.9 kPa	
1 psi	=	0.069 bar	

* For the sake of simplicity, the Nm and bar units are converted according to ratios 10:1 and 1:1.

Conversion values for Imperial measurement system

0.1 mm	= 3.937 mils
1 mm	= 0.039 inch
1 m	= 3.281 ft
1 km	= 0.621 miles
1 cm^3	= 0.061 cu.in
1 l	= 1.759 pts (0.88 imp. qts)
1 bar	= 14.5038 psi
1 g	= 0.035 oz. (0.564 dr)
1 kg	= 2.205 lbs
1 t	= 1.102 short ton (0.9842 long ton)
0° C	= 32° F

(In the case of temperature differences 1 °C = 1.8 °F)

STANDARD DRIVING TORQUE VALUES

Screws with metric threads

Maximum driving torque values for metric threads in kgm.

https://truckmanualshub.com/

Diameter x pitch d x p (mm)	Class 8.8 screw			Class 10.9 screw			Class 12.9 screw		
	Normal	Galva-nized	Cadmium plated	Normal	Galva-nized	Cadmium plated	Normal	Galva-nized	Cadmium plated
3x5	0.153	0.137	0.122	0.193	0.173	0.15	0.234	0.21	0.187
4x0.7	0.316	0.284	0.252	0.438	0.394	0.35	0.53	0.477	0.424
5x0.8	0.612	0.55	0.49	0.87	0.78	0.69	1.03	0.93	0.82
6x1	1.06	0.95	0.85	1.48	1.33	1.18	1.78	1.60	1.42
8x1.25	2.51	2.25	2.00	3.54	3.18	2.83	4.24	3.02	3.39
8x1	2.65	2.38	2.12	3.73	3.35	2.98	4.47	4.03	3.57
10x1.5	5.11	4.60	4.08	7.19	6.47	5.75	8.63	7.76	6.90
10x1.25	5.34	4.81	4.27	7.51	6.75	6.00	9.02	8.11	7.21
12x1.75	8.65	7.78	6.02	12.14	10.92	9.71	14.59	13.13	11.67
12x1.25	9.24	8.32	7.39	12.95	11.66	10.36	15.61	14.05	12.48
14x2	13.77	12.39	11.01	19.38	17.44	15.50	23.26	20.93	18.60
14x1.5	14.59	13.13	11.67	20.61	18.55	16.48	24.69	22.20	19.75
16x2	20.91	18.82	16.72	29.38	26.44	23.50	35.30	31.77	28.24
16x1.5	21.83	19.65	17.46	30.81	27.73	24.64	36.93	33.24	29.54
18x2.5	28.87	25.98	23.09	40.61	36.55	32.48	48.77	43.69	39.00
18x1.5	31.42	28.28	25.13	44.28	39.85	35.42	53.06	47.75	42.44
20x2.5	40.81	36.73	32.64	57.34	51.61	45.87	68.77	61.89	56.00
20x2.5	40.81	36.73	32.64	57.34	51.61	45.87	68.77	61.89	56.00
20x1.5	43.97	39.58	35.17	61.93	55.74	49.54	74.28	66.25	59.42
22x2.5	54.23	48.85	43.42	76.32	68.69	61.05	91.53	82.37	73.22
22x1.5	58.26	54.43	46.60	81.93	73.74	65.54	98.36	88.53	78.68
24x3	70.51	63.45	56.40	99.08	89.17	79.26	119.33	107.44	95.50
24x2	74.53	67.13	59.67	105.10	94.59	84.08	125.51	112.95	100.40
27x3	100.36	92.75	82.44	144.89	130.40	115.91	173.46	156.12	138.76
27x2	109.18	98.26	87.34	153.06	137.75	122.44	183.67	165.30	140.97
30x3.5	130.79	125.81	111.03	198.93	177.24	157.54	235.71	212.14	183.60
30x2	151.02	135.91	120.81	212.24	191.02	169.79	254.08	228.67	203.26

https://truckmanualshub.com/



Nuts with metric threads

Maximum driving torque values for metric threads in kgm.

Diameter x pitch d x p (mm)	Standard nuts galvanized		Dropped nuts galvanized		Diameter x pitch d x p (mm)	Standard nuts galvanized		Dropped nuts galvanized	
	MAT. 5S	MAT. 8G	MAT. 5S	MAT. 8G		MAT. 5S	MAT. 8G	MAT. 5S	MAT. 8G
5x0.8	0.55	-	0.35	-	**18x2.5**	27.00	39.00	17.00	24.50
6x1	0.95	1.30	0.60	0.80	**18x1.5**	30.50	42.50	19.00	26.50
8x1.25	2.30	3.20	1.40	2.00	**20x2.5**	30.50	54.00	19.00	34.00
8x1	2.50	3.50	1.60	2.20	**20x1.5**	42.50	60.00	26.00	37.50
10x1.5	4.60	6.40	2.90	4.00	**22x2.5**	51.00	72.00	32.00	45.00
10x1.25	4.90	6.80	3.10	4.20	**22x1.5**	57.00	80.00	36.00	50.00
12x1.75	8.00	11.00	5.00	6.90	**24x3**	66.00	93.00	41.00	58.00
12x1.25	8.80	12.50	5.50	7.80	**24x2**	72.00	100.00	45.00	63.00
14x2	12.50	18.00	7.80	11.00	**77x3**	98.00	140.00	61.00	88.00
14x1.5	14.00	19.50	8.80	12.00	**27x3**	105.00	150.00	66.00	94.00
16x2	19.50	27.50	12.00	17.00	**30x3.5**	135.00	185.00	85.00	116.00
16x1.5	21.00	29.50	13.00	18.50	**30x2**	145.00	205.00	91.00	128.00

https://truckmanualshub.com/

ENGINE

https://truckmanualshub.com/

Q

INDEX

Description **Page**

GENERAL FEATURES 200-5

MAIN SPECIFICATIONS 200-10

DRIVING TORQUES..... 200-17

SPECIFIC EQUIPMENT..... 200-18

SECTIONS 200-19

LUBRICATION, COOLING AND FUELLING CIRCUIT DIAGRAMS 200-21

ENGINE TROUBLESHOOTING..... 200-24

ENGINE SPLITTING AND REMOUNTING..... 200-32
- Splitting..... 200-32
- Remounting..... 200-35

COMPRESSION TEST..... 200-36
- Compression degree..... 200-36
- Measuring procedure 200-36

ENGINE - OVERHAUL..... 200-39
- Demounting..... 200-39
- Assembly of tappets and drive shaft with main bearing caps, bearings and bearing rings . . . 200-51 Assembly of pistons complete with piston rings, pins, connecting rods, caps and bearings . . . 200-52
- Assembly of timing, lubrication, starting, recharging, cooling and fuelling components..... 200-54
- Valve play adjustment..... 200-57
- How to check the belt tension 200-58

INJECTOR NOZZLE AND INJECTION PRESSURE MEASURING AND MONITORING 200-59
- Injection pressure measurement 200-59
- Jet inspection..... 200-60
- Atomizer valve sliding test..... 200-61
- Identification number of the atomizer casing..... 200-61

INJECTION TIMING ADJUSTMENT AND MONITORING 200-61

IDLING RATE ADJUSTMENT (MINIMUM AND MAXIMUM)..... 200-63

HOW TO CHECK THE COOLING SYSTEM AND RADIATOR TO FIND LEAKS 200-63

SENSOR INSPECTION 200-64
- Thermostat 200-64
- Thermal switch 200-64
- Hydraulic switch..... 200-65

CYLINDER HEAD INSPECTIONS, MEASUREMENTS AND REPAIRS..... 200-65
- Warping and inspection of the combustion surfaces..... 200-65
- Valve impression 200-66
- Valve housing width and angle 200-66
- Valve housing interventionprocedure..... 200-67
- Grinding and milling tool use procedure 200-67
- Valve housing removal 200-68
- Valve housing insertion..... 200-68

https://truckmanualshub.com/

Description **Page**

Valve stem wear and warping..... 200-69
Valve stem and valve guide 200-69
Valve head thickness..... 200-69
Valve guide replacement 200-70
Valve stem seal..... 200-70
Valve spring inspection 200-71
Spring cap and cotter inspection..... 200-71

CRANKCASE AND CYLINDER LINER INSPECTIONS, MEASUREMENTS AND REPAIRS..... 200-72
Crankcase inspection..... 200-72
Measurement of cylinder liner bore and warping 200-73
Lapping 200-73

ROCKER ARM INSPECTIONS, MEASUREMENTS AND REPAIRS 200-75
Measurement of the outer diameter of the rocker arm pin and inner diameter of the rocker arm 20075
Tappet rod curve inspection, measurement of the outer diameter of the tappets and inspection of the contacting surfaces 200-76
Other inspections 200-76

PISTON AND PISTON RING INSPECTIONS, MEASUREMENTS AND REPAIRS..... 200-77
Piston inspection..... 200-77
Measurement of the outer piston diameter 200-77
Shape of the piston rings..... 200-78
Measurement of the groove width of the piston ring, the piston ring and the distance between ends..... 200-78
Piston ring assembly..... 200-80
Measurement of the outer diameter of the pin and relative hole 200-81

CONNECTION ROD INSPECTIONS, MEASUREMENTS AND REPAIRS 200-82
Visual inspection..... 200-82
Twist and parallelism measurement 200-82
Measurement of the bush and connecting rod pin play..... 200-83
Measure the play between the pin bush and the pin itself..... 200-83
Checking the connecting rod pin bearing contact..... 200-84
Mounting the piston and connecting rod 200-84
Connecting rod side play 200-85

CAMSHAFT INSPECTIONS, MEASUREMENTS AND REPAIRS 200-86
Camshaft float 200-86
Visual inspection of the camshaft 200-86
Camshaft incurvation measurement 200-87
Intake/exhaust cam height measurement 200-87
Measurement of the play between the camshaft pins and their relative bushes..... 200-88

DRIVE SHAFT INSPECTIONS, MEASUREMENTS AND REPAIRS 200-88
Drive shaft float 200-88
Checking the colour of the drive shaft..... 200-89
Bearing inspection..... 200-89
Drive shaft incurvation..... 200-89
Measurement of the connecting rod pin and main bearing 200-90
Precautions for bearing assembly..... 200-91

GEAR INSPECTIONS, MEASUREMENTS AND REPAIRS 200-92
Gear inspections..... 200-92
Play measurement..... 200-92

SECTION200 - ENGINE

Q

Description **Page**

Checking and measuring the intermediate gear shaft and the gear itself..... 200-92
Gear train 200-93

OIL PUMP INSPECTIONS, MEASUREMENTS AND REPAIRS 200-94

https://truckmanualshub.com/

Play between the external rotor and pump casing 200-94
Play between inner and outer rotor 200-94
Float between the pump casing and the inner and outer rotor 200-95
Play between the rotor shaft and housing hole 200-95
Miscellaneous 200-95

YANMAR INJECTION PUMP 200-96
How to bleed air from the fuel circuit 200-96

INJECTION PUMP - OVERHAUL 200-97
Demounting 200-97
Assembly 200-102
Plunger inspection 200-108
Delivery valve inspection 200-108
Plunger guide, plunger cylinder inspection 200-109
Camshaft and bearing inspection 200-109
Fuel regulating pinion and rack inspection 200-109

REGULATOR UNIT - OVERHAUL 200-110
Demounting 200-110
Assembly 200-116
Checking the centrifugal weights of the regulator 200-121
Regulator sleeve inspection 200-121
Regulator lever shaft assembly inspection 200-122
Spring inspection 200-122
Checking the torque adjuster spring assembly 200-123
Checking the torsion spring assembly 200-123

https://truckmanualshub.com/

GENERAL FEATURES

https://truckmanualshub.com/

	MISTRAL AMERICA 40
Engine	
- Version/Position.....	3TNE88 - ELAN
- Manufacturer.....	Yanmar
- Cycle.....	diesel, four-stroke
- Injection.....	direct
- Number of cylinders in line.....	3
- Cylinder liners.....	formed in the crankcase
- Bore..... .....(mm)	88
- Piston stroke..... .....(mm)	90
- Total swept volume..... ..... (cc.)	1642
- Firing order.....	1 - 3 - 2
- Compression ratio.....	18:1
- Power DIN 70020 (ISO 3046/1)..... .....(HP/kW)	34/25 (37.5/27.5)
- Top rate on load..... .....(RPM)	2800
- Idling rate..... .....(RPM)	2995
- Maximum torque..... ..... (Nm)	103
- Maximum torque rate..... .....(RPM)	1800
- Idling rate..... .....(RPM)	1000
- Rotation direction.....	Anti-clockwise (viewed from flywheel)
- Number of main bearings.....	4
Recommended diesel fuel.....	ISO 8217 DMA, BS 2869 A1 or A2 (cetane N.: 45 min)
- Lubrication system.....	Forced lubrication with trochoid pump
- Capacity of lubricating oil reservoir..... .....(litres)	4.7
- Recommended lubricating oil.....	See section 100
- Cooling system.....	Coolant/Radiator
- Capacity of cooling fluid reservoir..... ..... (litres)	2.0
- Cooling fan.....	Fan with 6 blades, 0 335 mm
- Regulator.....	Centrifugal mechanical type (all speeds)
- Ignition system.....	Electrical

-Q

https://truckmanualshub.com/

GENERAL FEATURES		MISTRAL AMERICA 50
Engine		
- Version/Position.....		4TNE88 - ELAN
- Manufacturer.....		Yanmar
- Cycle.....		diesel, four-stroke water cooled
- Injection.....		direct
- Number of cylinders in line.....		4
- Cylinder liners.....		formed in the crankcase
- Bore.....	.....(mm)	88
- Piston stroke.....	.....(mm)	90
- Total swept volume.....	..... (cc.)	2189
- Firing order.....		1 - 3 - 4 - 2
- Compression ratio.....		18:1
- Power DIN 70020 (ISO 3046/1).....	.....(HP/kW)	45/33 (49.5/36.5)
- Top rate on load.....	.....(RPM)	2800
- Idling rate.....	.....(RPM)	3025
- Maximum torque.....	..... (Nm)	135.8
- Maximum torque rate.....	.....(RPM)	1600
- Idling rate.....	.....(RPM)	1000
- Rotation direction.....		Anti-clockwise (viewed from flywheel)
- Number of main bearings.....		5
Recommended diesel fuel.....		ISO 8217 DMA, BS 2869 A1 or A2 (cetane N.: 45 min)
- Lubrication system.....		Forced lubrication with trochoid pump
- Capacity of lubricating oil reservoir.....	.....(liters)	5.8
- Recommended lubricating oil.....		See section 100
- Cooling system.....		Coolant/Radiator
- Capacity of cooling fluid reservoir.....	.....(liters)	2.7
- Cooling fan.....		Fan with 6 blades, 0 370 mm
- Regulator.....		Centrifugal mechanical type (all speeds)
- Ignition system.....		Electrical

https://truckmanualshub.com/

(continued)

GENERAL FEATURES		MISTRAL AMERICA		
		40	45	50
Timing system				
Type.....		With overhead valves controlled by tappets		
Intake:				
- start: before T.D.C.....			10° - 20°	
- end: after B.D.C.....			40° - 50°	
Exhaust:				
- start: before T.D.C.....			51° - 61°	
- end: after B.D.C.....			13° - 23°	
Gap between valves and tappets with engine cold:				
- intake.....	(mm)		0.15 - 0.25	
- exhaust	(mm)		0.15 - 0.25	
For further technical data about the timing system				
Fuel system				
Type.....				
Air cleaning.....			Aspirated	
Fuel pump			5" dry filter with two elements removable for maintenance	
Fuel cleaning.....			Yanmar	
Control.....			Paper filter on injection pump delivery	
Injection pump			By eccentric	
Speed governor, at all rates, built into the pump. .			Yanmar	
Automatic lead variator, built into the pump.....			Yanmar	
Cold starting device.....			Yanmar	
For further technical data about the fuel system			Thermostarter	
- Fixed lead.....			16°	
- Firing order			1 - 3 - 2	1 - 3 - 4 - 2
Injectors.....			Yanmar	
- Pressure setting.....	(bar)		216 - 226	196 - 206

https://truckmanualshub.com/

MAIN SPECIFICATIONS

MAIN SPECIFICATIONS		Nominal value	Value at limit of wear
Cylinder head			
Cylinder head combustion surface warp.....	. . . . (mm)	< 0.05	0.15
Valve housing angle			
- Intake.....		120°	-
- Exhaust.....		90°	-
Valve housing width			
- Intake.....	. . . . (mm)	1.07 - 1.24	1.74
- Exhaust.....	. . . . (mm)	1.24 - 1.45	1.94
Intake valve			
- Outer diameter of valve stem.....	. . . . (mm)	7.955 - 7.975	7.9
- Inner diameter of valve guide.....	. . . . (mm)	8.010 - 8.025	8.1
- Assembly play between valve stem and guide	. . . . (mm)	0.035 - 0.070	0.2
Exhaust valve			
- Outer diameter of valve stem.....	. . . . (mm)	7.955 - 7.970	7.9
- Inner diameter of valve guide.....	. . . . (mm)	8.015 - 8.030	8.1
- Assembly play between valve stem and guide	. . . . (mm)	0.045 - 0.075	0.2
Valve guide projection.....	. . . . (mm)	15	-
Depth of valve impression			
- Intake valve.....	. . . . (mm)	0.306 - 0.506	1.0
- Exhaust valve.....	. . . . (mm)	0.3 - 0.5	
Valve head thickness			
- Intake valve.....	. . . . (mm)	1.244 - 1.444	0.5
- Exhaust valve.....	. . . . (mm)	1.35 - 1.55	
Intake valve timing			
- Open b. TDC		10° - 20°	-
- Closed a. BDC		40° - 50°	
Exhaust valve timing			
- Open b. BDC		51° - 61°	
- Closed a. TDC.....		13° - 23°	
Valve spring			
- Free length.....	. . . . (mm)	42	-
- Slant.....		-	1.1
- Tension (when compressed 1 mm in length).....	.....(kg)	2.36 (variable pitch)/3.101	-
Intake and exhaust valve play.....	. . . . (mm)	0.15 - 0.25	-

AMERICA

5	50
eans of pump	
n pump intake)	
n engine delivery)	
- 4	
tion 100	
ed circu	
rated b	
g syste	
.7	lation by / the gears of m
, 0 373	2.7 mm
370	x 6
section	

Value at limit of wear (mm)
84.20
88.20
84.20

https://truckmanualshub.com/

- Mod. MISTRAL AMERICA 40 and 50.....	88.020 - 88.030	88.20
Bore - Mark M		
- Mod. MISTRAL AMERICA 45.....	84.010 - 84.020	84.20
- Mod. MISTRAL AMERICA 40 and 50.....	88.010 - 88.020	88.20
Bore - Mark S		
- Mod. MISTRAL AMERICA 45.....	84.000 - 84.010	84,20
- Mod. MISTRAL AMERICA 40 and 50.....	88.000 - 88.010	88.20
Cylinder roundness		
- Mod. MISTRAL AMERICA 45.....	0.00 - 0.01	0.03
- Mod. MISTRAL AMERICA 40 and 50.....	0.00 - 0.01	0.03
Cylindricity		
- Mod. MISTRAL AMERICA 45.....	0.00 - 0.01	0.03
- Mod. MISTRAL AMERICA 40 and 50.....	0.00 - 0.01	0.03

(continued)

MAIN SPECIFICATIONS	Nominal value (mm)	Value at limit of wear (mm)
Rocker arms		
Intake and exhaust valve rocker arms		
- Outer diameter of rocker arm pin.....	15.966 - 15.984	15.95
- Inner diameter of rocker arm bush.....	16.000 - 16.020	16.09
- Assembly play between pin and bush.....	0.016 - 0.054	0.14
Rocker arm rod incurvation.....	< 0.03	-
Tappets		
- Outer diameter of tappet stem..... . . . . (mm)	11.975 - 11.990	84.20
- Inner diameter of tappet guide hole..... . . . . (mm)	12.000 - 12.018	88.20
- Assembly play between tappet guide and stem . . . . (mm)	0.010 - 0.043	0.12

https://truckmanualshub.com/

(continued)

MAIN SPECIFICATIONS	Nominal value (mm)	Limit value of wear (mm)
Pistons		
Outer diameter of piston		
- Mod. MISTRAL AMERICA 45.....	83.945 - 83.975	83.90
- Mod. MISTRAL AMERICA 40 and 50.....	87.945 - 87.975	87.90
Outer diameter of piston - Mark L		
- Mod. MISTRAL AMERICA 45.....	83.965 - 83.975	83.90
- Mod. MISTRAL AMERICA 40 and 50.....	87.965 - 87.975	87.90
Outer diameter of piston - Mark ML		
- Mod. MISTRAL AMERICA 45.....	83.960 - 83.965	83.90
- Mod. MISTRAL AMERICA 40 and 50.....	87.960 - 87.965	87.90
Outer diameter of piston - Mark MS		
- Mod. MISTRAL AMERICA 45.....	83.955 - 83.960	83.90
- Mod. MISTRAL AMERICA 40 and 50.....	87.955 - 87.960	87.90
Outer diameter of piston - Mark S		
- Mod. MISTRAL AMERICA 45.....	83.945 - 83.955	83.90
- Mod. MISTRAL AMERICA 40 and 50.....	87.945 - 87.955	87.90
Minimum play between piston and cylinder		
- Mod. MISTRAL AMERICA 45.....	0.040 - 0.070	-
- Mod. MISTRAL AMERICA 40 and 50.....	0.040 - 0.070	-
Upper play		
- Mod. MISTRAL AMERICA 45.....	0.660 - 0.780	-
- Mod. MISTRAL AMERICA 40 and 50.....	0.660 - 0.780	-
Piston and pin		
- Outer diameter of pin		
- Mod. MISTRAL AMERICA 45.....	25.987 - 26.000	25.90
- Mod. MISTRAL AMERICA 40 and 50.....	25.987 - 26.000	25.90
- Pin hole diameter		
- Mod. MISTRAL AMERICA 45.....	26.000 - 26.009	26.02
- Mod. MISTRAL AMERICA 40 and 50.....	26.000 - 26.009	26.02
- Assembly play between pin and hole		
- Mod. MISTRAL AMERICA 45.....	0.000 - 0.022	0.12
- Mod. MISTRAL AMERICA 40 and 50.....	0.000 - 0.022	0.12

https://truckmanualshub.com/

MAIN SPECIFICATIONS	Nominal value (mm)	Value at limit of wear (mm)
Piston rings		
Upper ring		
- Width of ring groove		
- Mod. MISTRAL AMERICA 45.....	2.065 - 2.080	-
- Mod. MISTRAL AMERICA 40 and 50.....	2.060 - 2.075	-
- Ring width		
- Mod. MISTRAL AMERICA 45.....	1.970 - 1.990	-
- Mod. MISTRAL AMERICA 40 and 50.....	1.970 - 1.990	-
- Minimum side play		
- Mod. MISTRAL AMERICA 45.....	0.075 - 0.110	-
- Mod. MISTRAL AMERICA 40 and 50.....	0.070 - 0.105	-
- Gap between ends		
- Mod. MISTRAL AMERICA 45.....	0.200 - 0.400	1.5
- Mod. MISTRAL AMERICA 40 and 50.....	0.200 - 0.400	1.5
2nd piston ring		
- Width of ring groove		
- Mod. MISTRAL AMERICA 45.....	2.035 - 2.050	-
- Mod. MISTRAL AMERICA 40 and 50.....	2.025 - 2.040	-
- Ring width		
- Mod. MISTRAL AMERICA 45.....	1.970 - 1.990	-
- Mod. MISTRAL AMERICA 40 and 50.....	1.970 - 1.990	-
- Minimum side play		
- Mod. MISTRAL AMERICA 45.....	0.045 - 0.080	-
- Mod. MISTRAL AMERICA 40 and 50.....	0.035 - 0.070	-
- Gap between ends		
- Mod. MISTRAL AMERICA 45.....	0.200 - 0.400	1.5
- Mod. MISTRAL AMERICA 40 and 50.....	0.200 - 0.400	1.5

https://truckmanualshub.com/



(continued)

MAIN SPECIFICATIONS	Nominal value (mm)	Value at limit of wear (mm)
Piston rings		
Oil scraper ring		
- Width of ring groove		
- Mod. MISTRAL AMERICA 45.....	4.015 - 4.030	-
- Mod. MISTRAL AMERICA 40 and 50.....	4.015 - 4.030	-
- - Ring width		
- Mod. MISTRAL AMERICA 45.....	3.970 - 3.990	-
- Mod. MISTRAL AMERICA 40 and 50.....	3.970 - 3.990	-
- Minimum side play		
- Mod. MISTRAL AMERICA 45...		
- Mod. MISTRAL AMERICA 40 a		
- Gap between ends		
- Mod. MISTRAL AMERICA 45...		
- Mod. MISTRAL AMERICA 40 a		

MAIN S
Connecting rods
Connecting rod pivot side
- Inner diameter of connecting
- Thickness of connecting rod p
- Outer diameter of connecting
- Assembly play between pivot

(continued)

MAIN S
Camshaft
Gear side
- Outer diameter of camshaft m
- Assembly play between journa
Intermediate
- Outer diameter of camshaft m
- Assembly play between journa
Flywheel side
- Outer diameter of camshaft m
- Assembly play between journa
Incurvation.....

DRIVING TORQUES

PARTS TO TORQUE	Thread	Driving torque	
		Nm	kgm
Cylinder head fixing bolts C[1]).....	M10 x 1.25	85.3 - 91.2	8.7 - 9.3
Connecting rod cap fixing bolts C[1]).....	M9 x 1.0	44.1 - 54.0	4.5 - 5.5
Flywheel fixing bolts C[1]).....	M10 x 1.25	83.4 - 88.3	8.5 - 9.0
Main bearing cap fixing bolts C[1]).....	M12 x 1.5	96.1 - 100.1	9.8 - 10.2
Drive shaft V-pulley fixing bolts C[1]).....	M14 x 1.5	112.8 - 122.6	11.5 - 12.5
Injector nuts C[2]).....	M6 x 1.0	6.9 - 8.8	0.7 - 0.9
Automatic lead fixing nuts C[2]).....	M12 x 1.75	58.9 - 68.7	6.0 - 7.0
Bearing nut nut centrifugal weights of governor C[2]).....	M12 x 1.25	44.1 - 49.1	4.5 - 5.0
Fixing nut of high pressure diesel fuel pipe sleeve C[2]).....	M12 x 1.5	29.4 - 34.3	3.0 - 3.5
Hex bolts C7T) and nut C[2]) C[3]).....	M6 x 1	9.8 - 11.8	1.0 - 1.2
	M8 x 1.25	22.6 - 28.4	2.3 - 2.9
	M10 x 1.5	44.1 - 54.0	4.5 - 5.5
	M12 x 1.75	78.5 - 98.1	8.0 - 10.0
PT plugs C[2]).....	1/8"	9.8	1.0
	1/4"	19.6	2.0
	3/8"	29.4	3.0
	1/2"	58.9	6.0
Pipe joining bolts C[2]).....	M8	12.8 - 16.7	1.3 - 1.7
	M12	24.5 - 34.3	2.5 - 3.5
	M14	39.2 - 49.1	4.0 - 5.0
	M16	49.1 - 54.0	5.0 - 5.5

https://truckmanualshub.com/

C[1]) Parts spread with lubricating oil.

(2) Parts not spread with lubricating oil.

(3) a. When aluminium parts are mounted, tighten the bolts to 80% of the driving torque value given in the table.


b. 4T bolts and check nuts must be tightened to 60% of the torque value given in the table.

SPECIFIC EQUIPMENT

Code	Description
001 MT MIS	Dummy injector
002 MT MIS	Compression test equipment
003 MT MIS	Valve spring compression tool
004 MT MIS	Tool to mount the piston rings
005 MT MIS	Tool to mount the piston complete with liners
006 MT MIS	Valve guide puller
007 MT MIS	Valve guide seating tool
008 MT MIS	Puller to remove the eccentric weights of the injector regulator - MISTRAL AMERICA 40
009 MT MIS	Puller to remove the eccentric weights from the injection regulator - MISTRAL AMERICA 45/50
010 MT MIS	Bracket to support the injection pump tappets
011 MT MIS	Tool to seat the injection pump plunger
012 MT MIS	Injection pump float tool

https://truckmanualshub.com/


SECTIONS

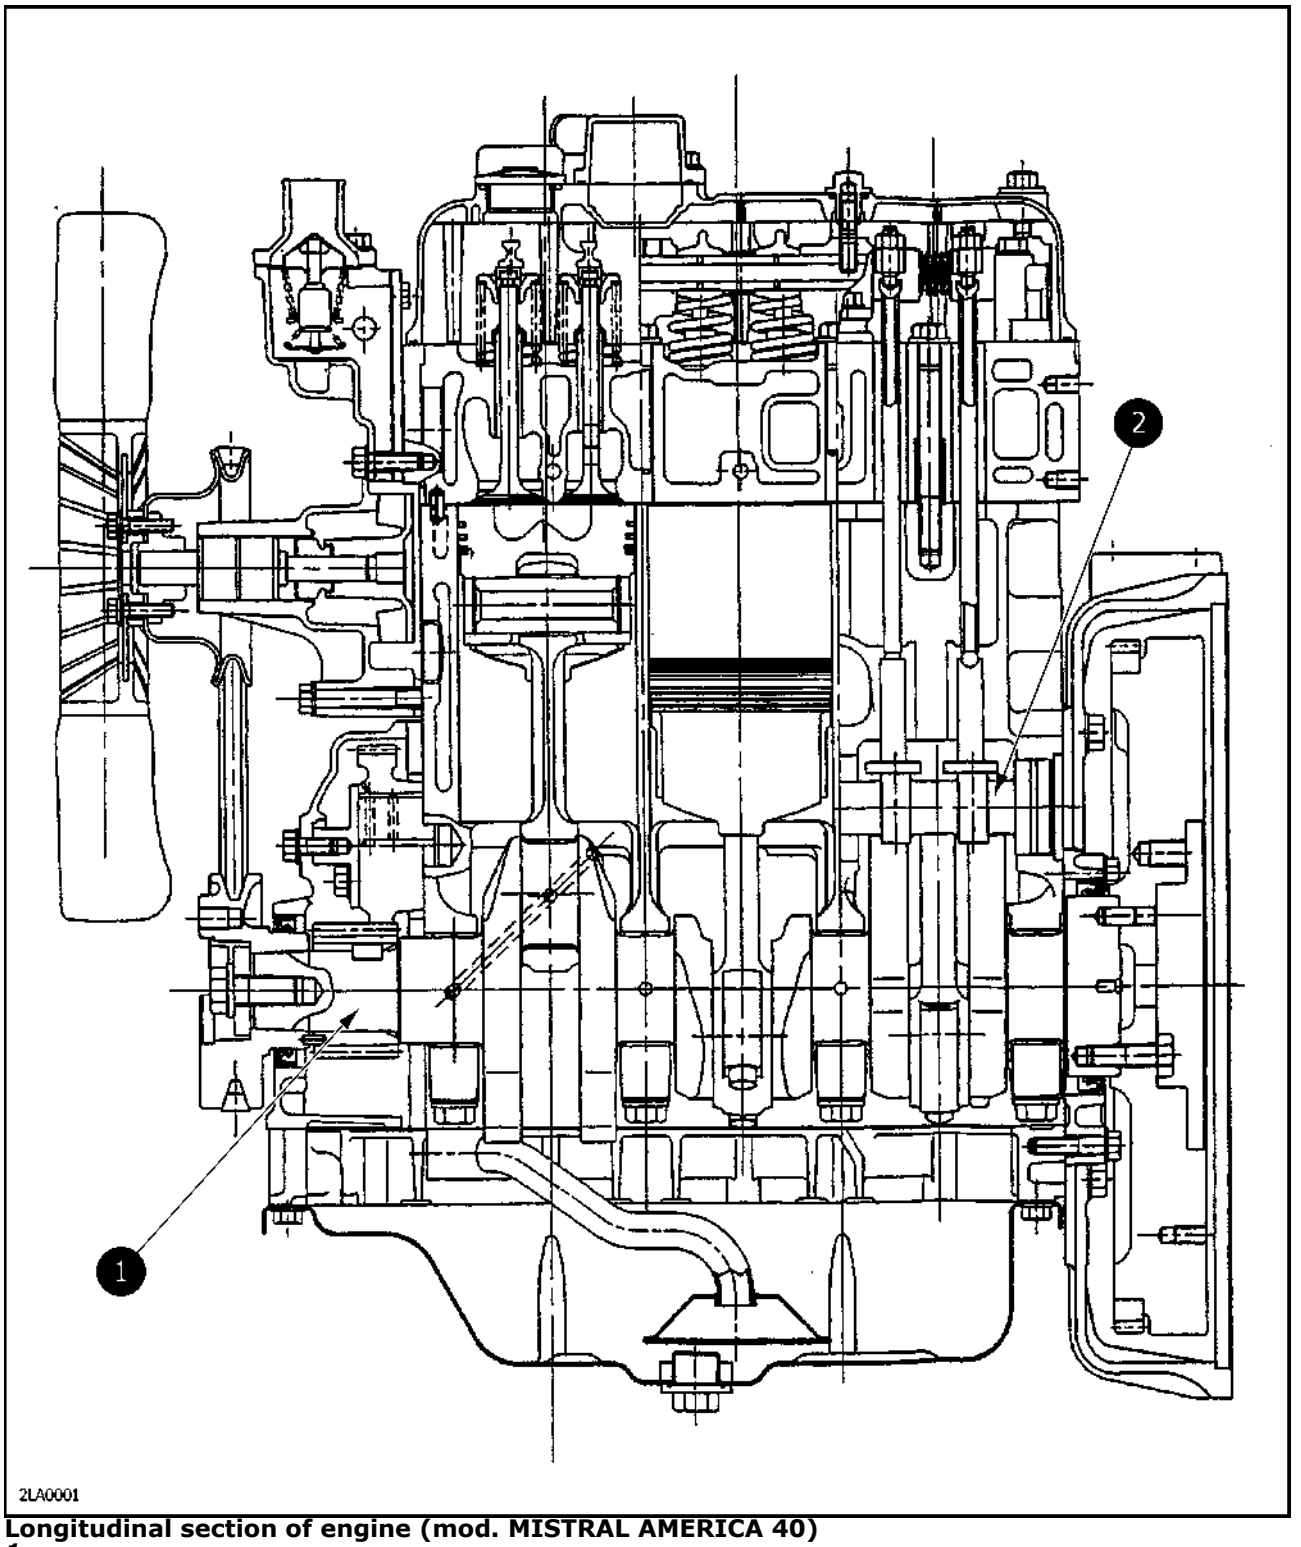

Longitudinal section of engine (mod. MISTRAL AMERICA 40)
1

1. Drive shaft
2. Cams haft

https://truckmanualshub.com/

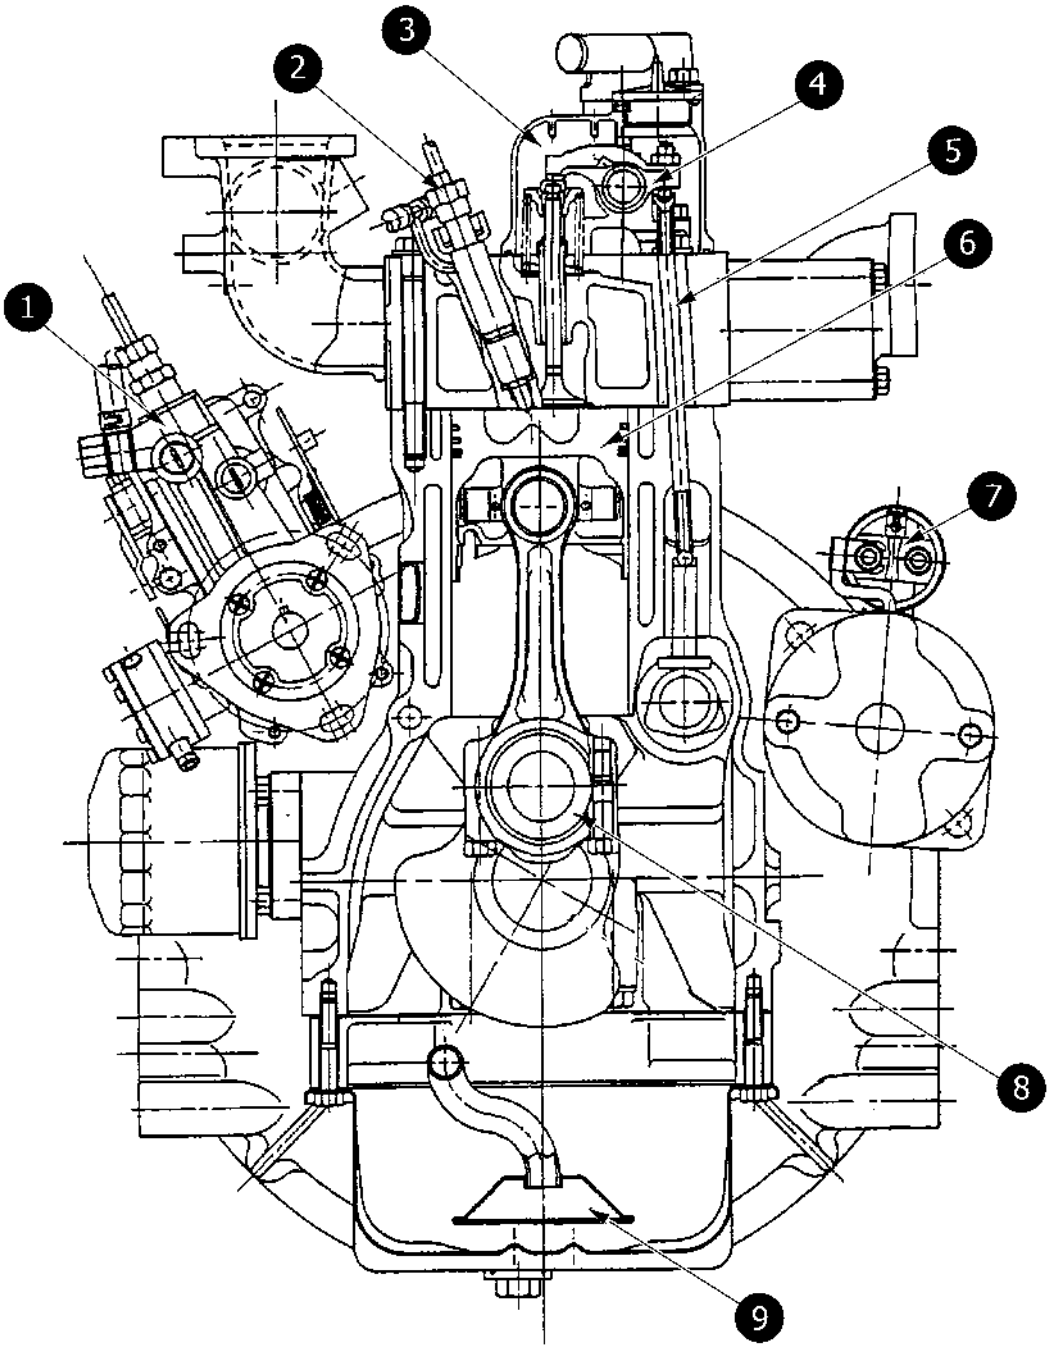


2LA0002

Cross-section of engine (mod. MISTRAL AMERICA 40)

1. Injection pump
2. Injector
3. Tappet cover
4. Rocker arms
5. Cylinder head
6. Piston
7. Starter motor
8. Connecting rod
9. Lubricating oil suction pipe

https://truckmanualshub.com/

LUBRICATION, COOLING AND FUELLING CIRCUIT DIAGRAMS

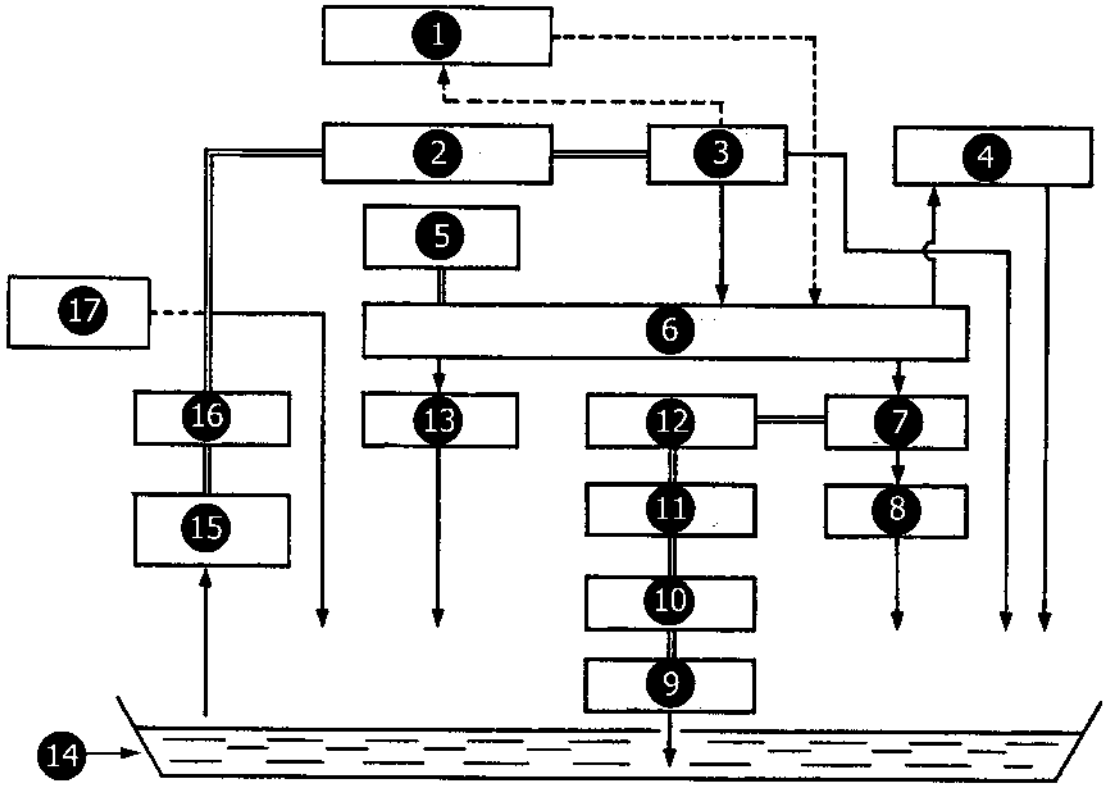


2LA0003

Engine lubrication circuit diagram.

1. Heat exchanger (on request)
2. Oil filter (with bypass valve)
3. Pressure governor valve
4. Injection pump
5. Pressure switch
6. Main cylinder block duct
7. Main bearing
8. Big end bearing
9. Tappets/cam surfaces
10. Rocker arms
11. Rocker arm pin
12. Camshaft bearing
13. Intermediate gear pin
14. Oil sump
15. Oil intake pipe (with gauze filter)
16. Oil pump
17. Safety valve

https://truckmanualshub.com/

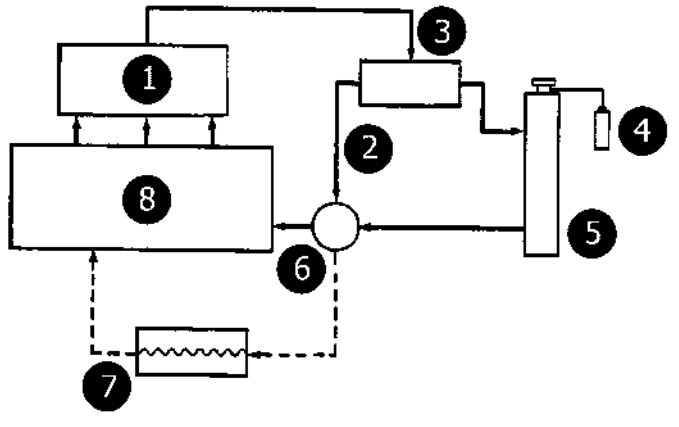


2LA0004

Engine cooling circuit diagram.

1. Cylinder head	**5.** Radiator
2. By-pass	**6.** Water pump
3. Thermostat	**7.** Heat exchanger for oil (on request)
4. Secondary tank	**8.** Cylinder block

https://truckmanualshub.com/

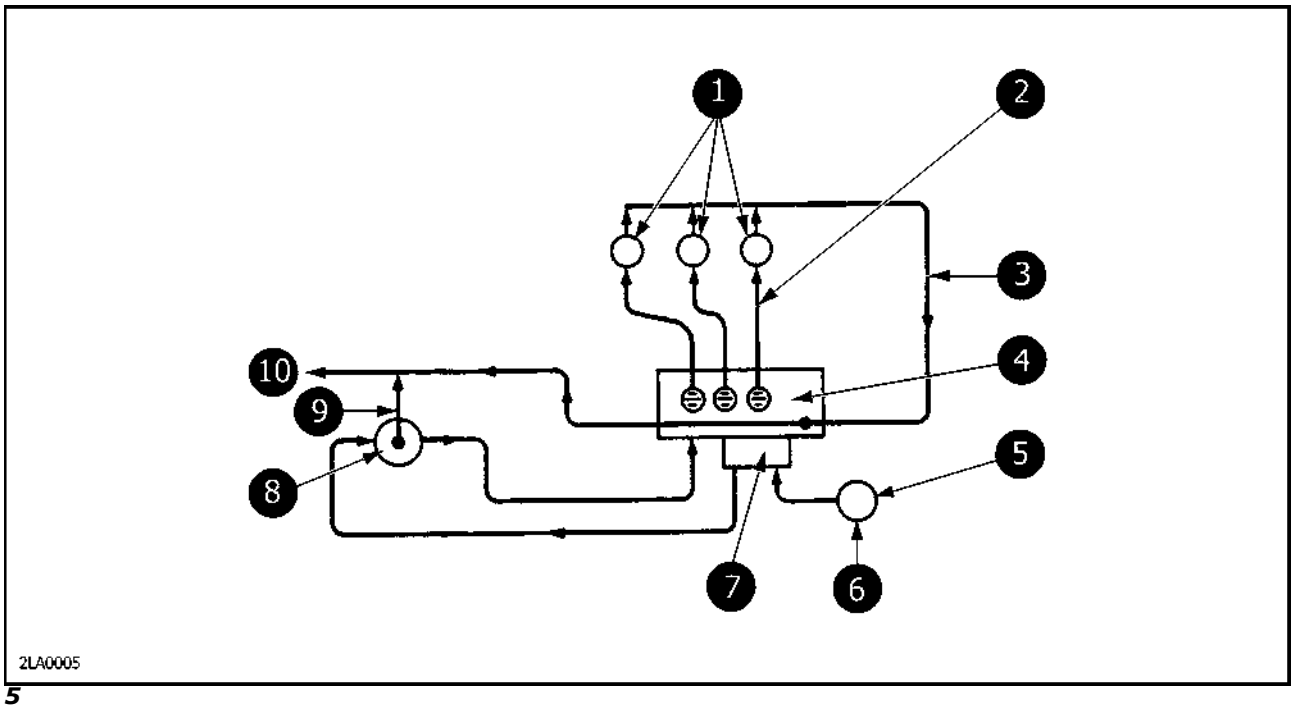

5

Engine fuelling circuit diagram.

1. Injector
2. High pressure injection tube
3. Fuel return tube
4. Injection pump
5. Oil separator (on request)
6. From fuel tank
7. Fuel pump
8. Fuel filter
9. Breather pipe
10. To fuel tank

https://truckmanualshub.com/

Faults	Possible causes	Remedies
The engine fails to		
Excessive vibration in engine.		
	2. Spring rings jammed or damaged.	Replace.
	3. Big end pin and bearings jammed.	Repair or replace.
	4. Big end bearings and main bearings worn.	Measure or replace.
	5. Big end fixing bolts slackened.	Tighten to the prescribed torque value.
	6. Injection pump regulator damaged.	Repair or replace.
	7. Excessive injection pump lead.	Check and adjust.
Excessive fuel consumption.	**1.** Loss of compression from valve housing.	Lap valve housing.
	2. Radiator cools too much.	Thermostat defective.
	3. Excessive injection pump delay	Check and adjust.
Excessive consumption of lubricating oil.	**1.** Piston rings seized or broken.	Replace.
	2. Cylinder and piston rings worn.	Lap and use larger size parts.
	3. Incorrect alignment of piston ring gap.	Correct gap alignment.
	4. Inverted assembly of piston rings	Mount correctly.
	5. Impurities in combustion chamber.	Demount and remove the impurities.
	6. Intake/exhaust valve guide worn.	Measure or replace.
	7. Lubricating oil with wrong specifications.	Use suitable lubricating oil.
	8. Leaks from lubricating oil pipes.	Repair/replace.
Water in the lubricating oil.	**1.** Damaged cylinder head housing seal.	Replace.
	2. Cylinder liners cracked	Replace.
Fuel in the lubricating oil.	**1.** Intake/exhaust valves seized.	Replace.
	2. Piston rings seized or broken.	Replace.
	3. Cylinder and piston rings worn.	Lap and use larger size parts.
Lubricating oil pressure too low.	**1.** Big end bearings and main bearings worn.	Measure/replace.
	2. Big end bolts slackened.	Tighten bolts.
	3. Cylinder liner cracked	Replace.

(continued)

Faults	Possible causes	Remedies
	Fuel pump damaged.	Replace fuel pump.
	Air filter clogged.	Clean the unit and replace the filter element if necessary.
	10. Length of rod between acceler- ator and injection pump badly regulated.	Adjust rod length.

(continued)

Faults	Possible causes	Remedies
	Repair/replace.	
	Replace.	
	Clean, adjust or replace.	
	Top up to maximum oil level.	
	Adjust valve play.	
	Lap valve housing.	
	Replace piston rings.	
	Check/replace thermostat.	
	Check/adjust fan belt slip.	
	Check for leaks from the system/ repair.	
	Adjust tension.	
	Replace the piston rings.	
	Repair or replace.	
	Measure or replace.	
	Repair or replace.	
	Clean and repair.	
	Replace.	
	Repair or replace.	
	Measure or replace.	
	Repair or replace.	
	Clean and repair.	

https://truckmanualshub.com/

ENGINE SPLITTING AND REMOUNTING

WARNING

Lift and handle all heavy parts with lifting equipment of a suitable capacity.
Make sure that the units or parts are supported by appropriate harness and hooks. Make sure that there are no bystanders near the load being lifted.


WARNING

Handle all parts with the utmost care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.


Splitting

Proceed in the following way:

1. Split the clutch assembly (see section 300).
2. Disconnect the electrical connection (1) from the horn.
3. Unscrew the clamps (1, 2) and remove the intake sleeve (3).

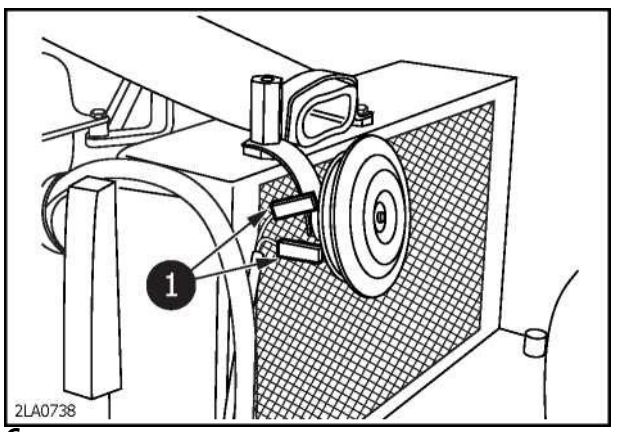


6

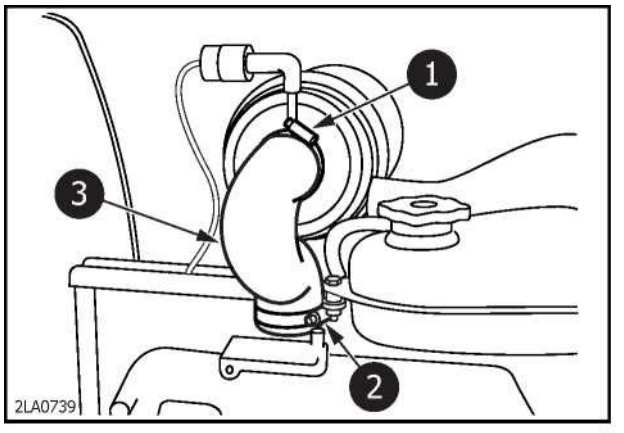


7

https://truckmanualshub.com/

4. Remove the air intake filter (1).

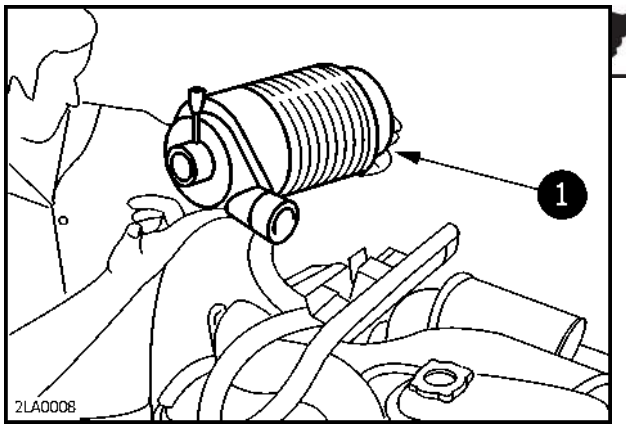


5. Unscrew the bolts (1) that fix the silencer to the exhaust manifold. Unscrew the bolt (2) that fixes the exhaust pipe under the platform and remove the exhaust pipe.

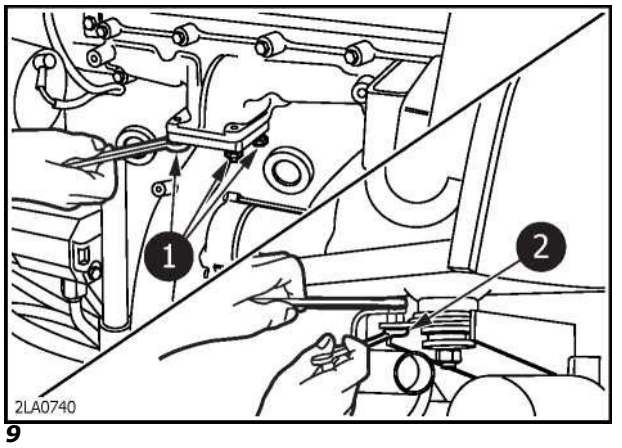


9

6. Disconnect the lubrication intake pipe (1) from the pump (2).

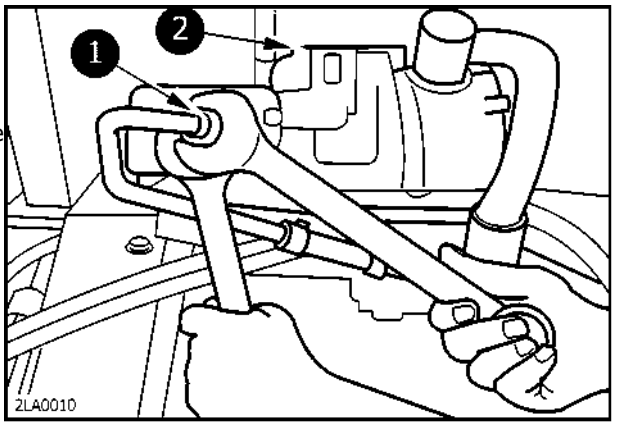

10


7. Disconnect the return pipe (1) of the lubrication system.

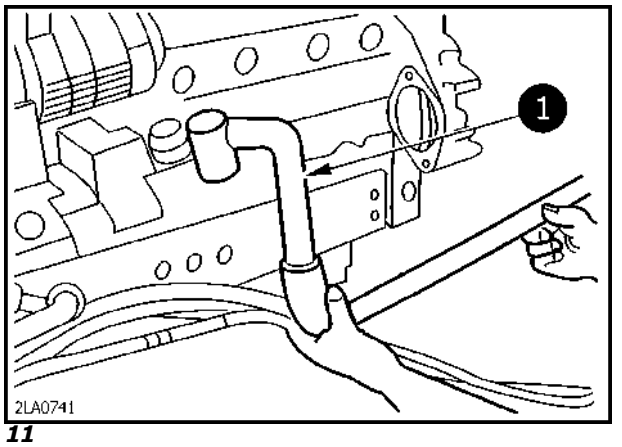

11

8. Unscrew the relative clamps and detach the upper (1), central (2) and lower (3) sleeves from the radiator.


9. Place two fixed stands under the axle support and one under the engine. Hook on the chains so that the engine is well balanced as it is lifted and fit two wooden chocks between the support and axle to prevent the load from swing- ing.

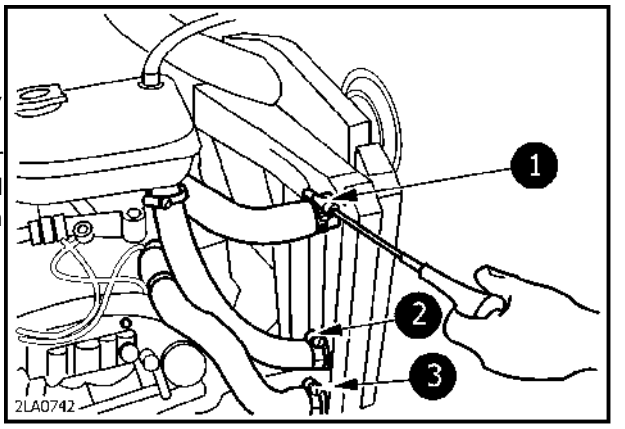


12

10. Unscrew the union (1) and detach the pipe of the front diff lock.

11. Unscrew the bolts (1) that fix the engine to the front axle support (2).

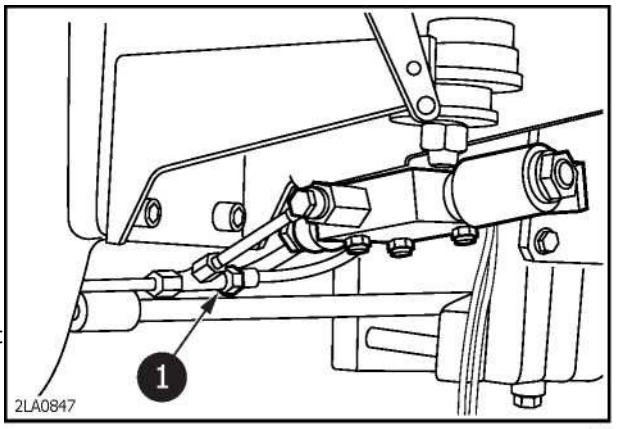

13

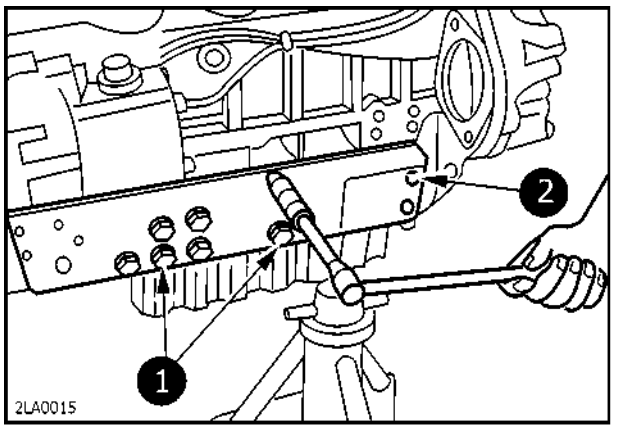


14

https://truckmanualshub.com/

12. Using a hoist (1), split the engine from the support - front axle assembly.

WARNING

Lift and handle all heavy parts with lifting equipment of a suitable capacity.
Make sure that the units or parts are supported by appropriate harness and hooks. Make sure that there are no bystanders near the load being lifted.

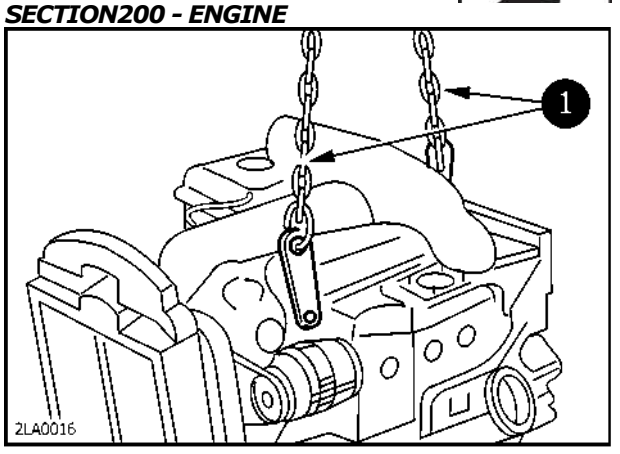

15

Remounting

Bear in mind the following recommendations when remounting the engine:

- Apply the driving torque values given on page 17.

WARNING

Handle all parts with the utmost care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

- Fit the support-front axle assembly back on the engine.
- Connect the pipe of the front differential lock.
- Connect and fix the upper, central and lower sleeves of the radiator and the connection bracket.
- Connect the return pipe (1) of the lubrication system.
- Position and fix the support and filter of the transmission lubricating circuit.
- Connect the intake pipe to the lubrication system.
- Position and fix the exhaust pipe.
- Position the air intake filter.
- Mount and fix the intake sleeve.
- Connect the horn connections.
- Remount the clutch assembly (see section 300).

Compression degree

The compression degree is a value that indicates the quantity of air intaken and the condition of the

COMPRESSION TEST

If the engine performances are insufficient, check the compression value of each cylinder besides the injection appa- ratus (overhaul the atomizers and injec- tion pump).

WARNING

Do not use matches, cigarette lighters or torches as light source near the machine as it contains inflammable fluids.

sealing parts of the cylinder (rings and valves).

https://truckmanualshub.com/

The compression value in the cylinders ensures that the cylinders themselves operate correctly in the condition where the same amount of fuel is injected per cylinder per phase.
Insufficient compression not only lowers the engine performance but also prevents the fuel from burning completely as there is not enough air to achieve a perfect combustion.
In this case, the engine will no longer operate efficiently and will consume too much fuel. This leads to smoke at the exhaust and a reduction in the exhaust orifices.
Since the compression degree **also depends on the engine temperature** (there are lower compression values with a cold engine, higher ones with a hot engine), the compression value must only be measured when the engine has reached its operating temperature.


Measuring procedure

1. Bring the engine to operating temperature.
2. Turn off the engine.
3. Turn the regulator knob to the STOP position to prevent fuel from flowing to the injectors.
4. Remove the injector that corresponds to the cylinder being examined.
5. Allow the internal combustion engine to turn over a few times by means of the starter motor in order to expel any carbon residues.



6. Mount the dummy injector **001 MT MIS** in place of the one demounted previously and fit a copper washer in between.
7. Connect the compression tester **002 MT MIS** (with an adapter and pressure gauge (1)) to the tested cylinder and take the measurements by allowing the internal combustion engine to run by means of the starter motor until the pressure gauge reading becomes stable.



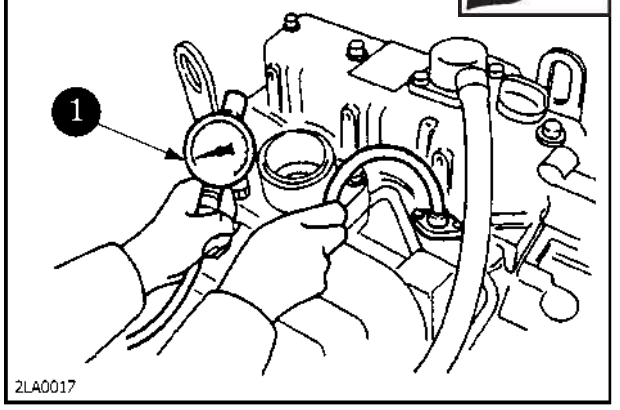

16

8. Test the compression in the remaining cylinders by repeating the previously described operations 4-5-6-7.
Compare the measured values with the ones in the table below:


Model MISTRAL AMERICA	Compression pressure at 250 RPM. (kg/cm^2)		Difference in the compression pressure off the various cylinders (kg/cm^2)
	Normal	Limit	
40	35 ± 1	28 ± 1	2 - 3
45	33 ± 1	26 ± 1	2 - 3
50	35 ± 1	28 ± 1	2 - 3

https://truckmanualshub.com/

Also consider that the compression decreases by about 1% for each 100 meters of altitude above sea level and that, depending on the engine rate, the pressure variation presents the trends indicated in the fig. 17.

2LA0743

17

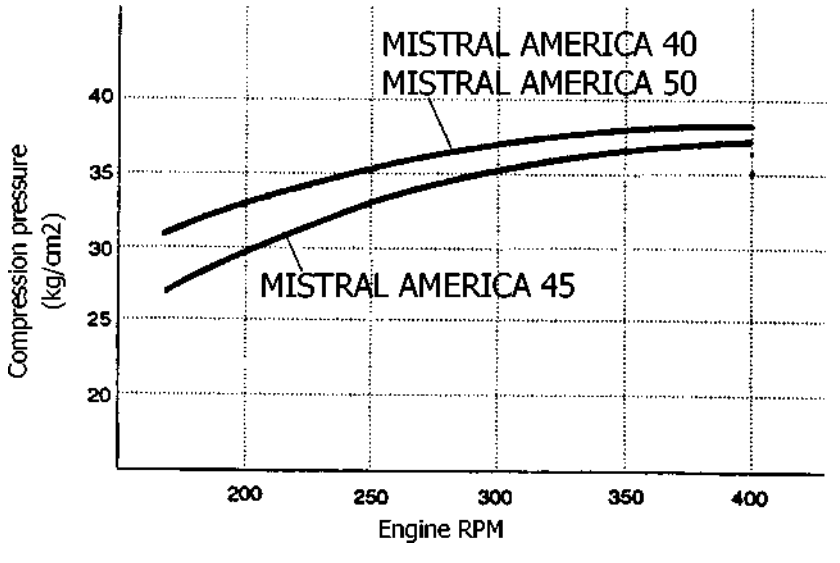

https://truckmanualshub.com/

EU[3]

Although the aim is to always obtain the highest compression values, the important thing is to make sure that the compression in the cylinders is uniform as this allows the engine to operate in a regular way.

It is advisable to check a second time if considera- ble drops in the compression in a cylinder are noted.
Before measuring, pour normal engine oil (about a spoonful) through the injector hole, into the cylinder.
Allow the engine to run so that the oil spreads over the walls of the cylinder, then repeat the test and compare the two test values obtained.
If higher values are recorded d u ring the second test, this means that the piston rings could be worn and/or the cylinder liners could be ovalized or dam- aged.
If the values are not higher than the previous ones, the fault will be due to the valves.
Only a slight improvement in the compression will indicate that both the valves and piston rings are in order.
Whatever the case, also consult "Troubleshooting" on page 24 - 31.

https://truckmanualshub.com/

ENGINE - OVERHAUL Demounting


The following procedure assumes that the external parts (such as the air filter, exhaust pipe and radia- tors, which differ as to type and installation) have already been demounted and that:

WARNING

Handle all parts with the utmost care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.


- all sand, dust and dirt have been removed from the surface of the engine;
- the lubricating oil and coolant have been drained from the engine.

1. Remove the exhaust manifold (1).

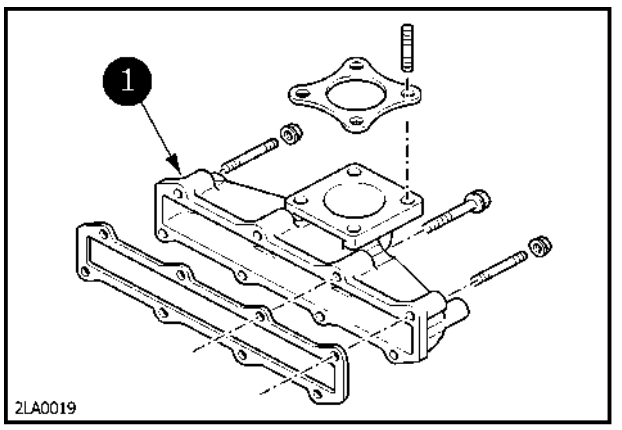

18


2. Detach the intake manifold (1).

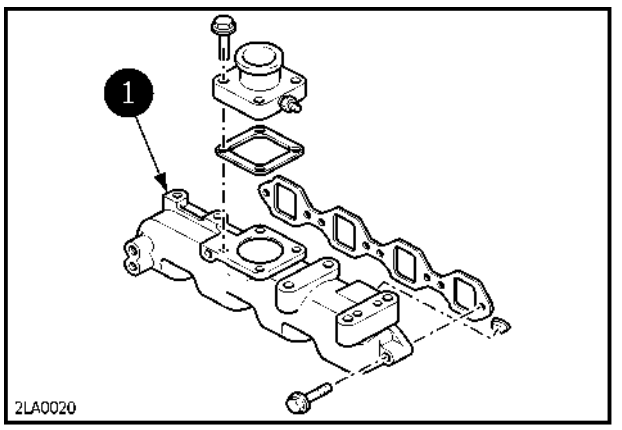

19


3. Shut off the fuel tank cock.
4. Remove the high pressure fuel hose (1).
5. Remove the fuel return hose (1).
6. Slacken off the fastening nut on the injector (3) retainer (2) and remove both.

If the injector housing (3) has remained on the cylinder head, detach this latter before removing the injector (3) housing.
Seal the respective threads with tape or some other material to prevent dust from penetrating into the injector (4), injection pump (5) and high pressure hose (1).
Replace the protective element (2) with a new one whenever the injector (4) is removed.

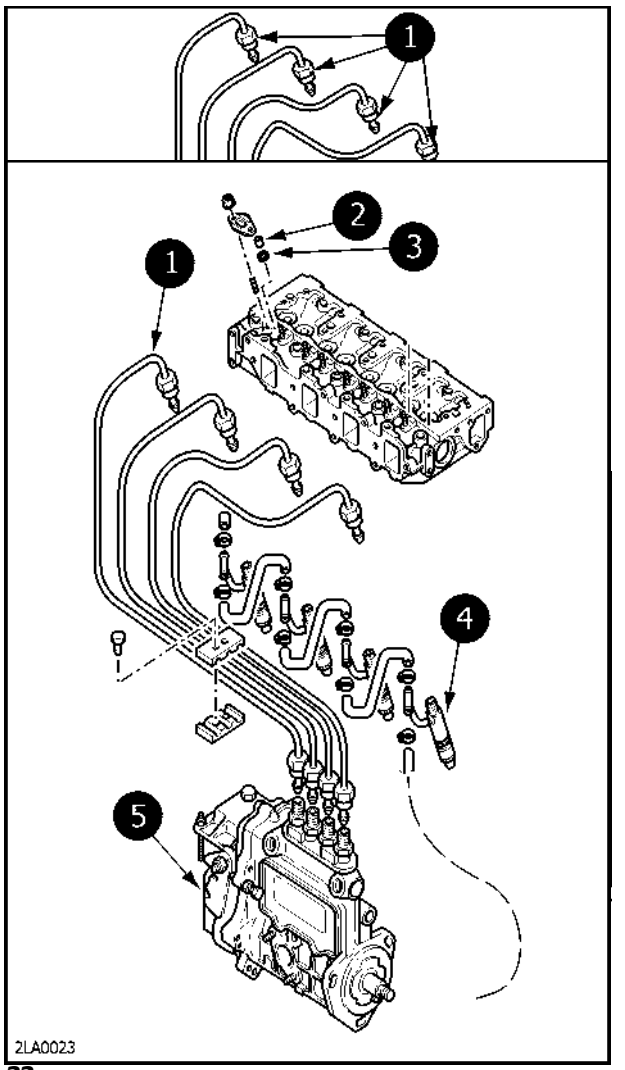

https://truckmanualshub.com/


7. Remove the valve cover unit (1).

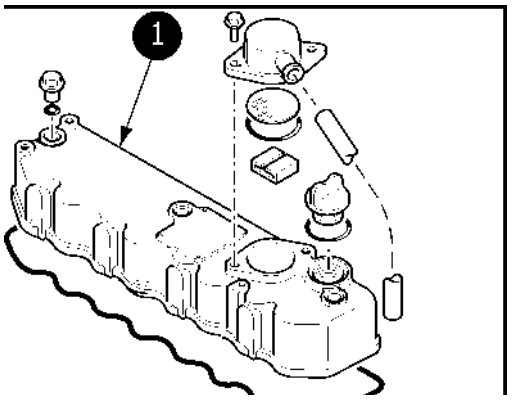


8. Remove the rocker arm/shaft assembly (1).
9. Remove the rocker arm rod (2).

Apply a label to the rocker arm rod (2) for each cylinder to ensure that the rods are remounted in the right order.

10. Remove the cap (3) of the valve from the head of the intake/exhaust valves.

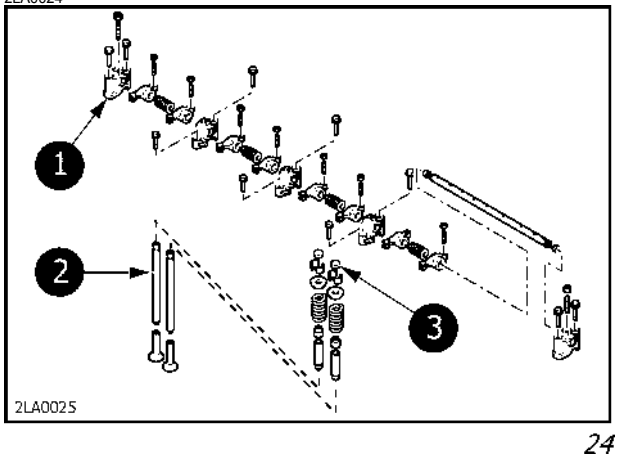


11. Unscrew the fixing bolts and remove the fan (2).
12. Slacken off the fixing bolt (1, fig. 26) from the adjuster bracket of the alternator belt, then detach the belt itself (1).

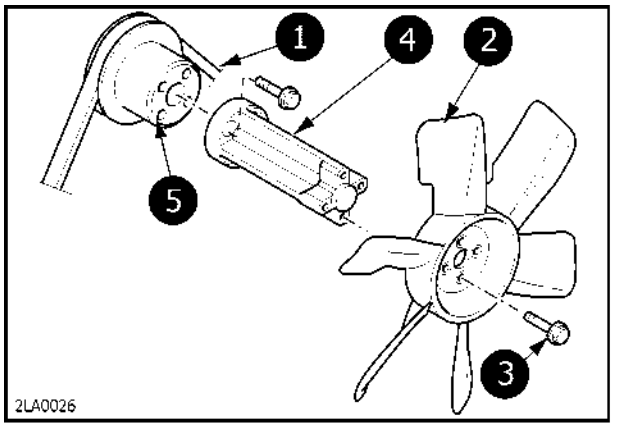


13. Remove the alternator (2).
14. Remove the spacer of the cooling fan (4, fig. 25) and the pulley (5, fig. 25).

Do not force the alternator (2) towards the cylinder block as it could be damaged.

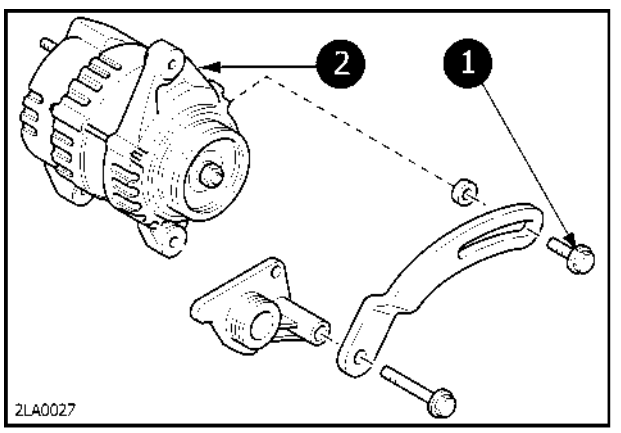


https://truckmanualshub.com/

15. Remove the lubricating oil filter unit (1).
16. Take the oil level dipstick (2) from its hole.

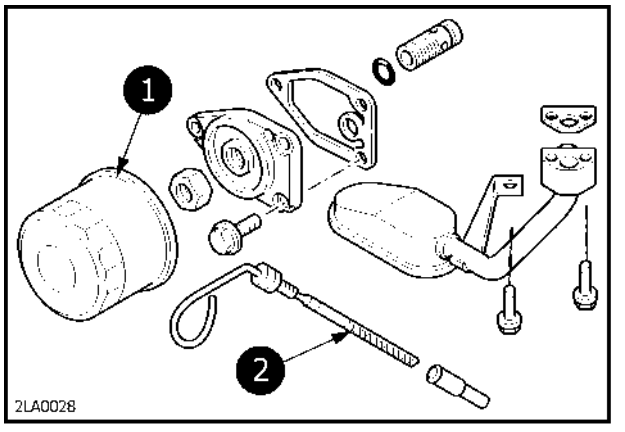


27

17. Remove the fuel return hose (2) and (3).
18. Remove the fuel filter (1).

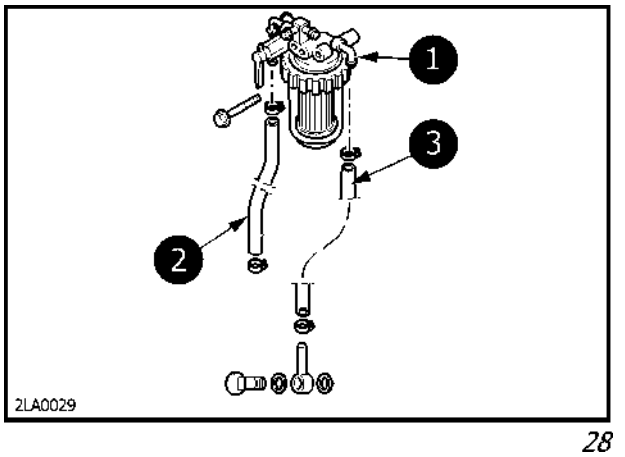

28

19. Remove the thermostat unit (1).
20. Remove the pump of the cooling system (2).

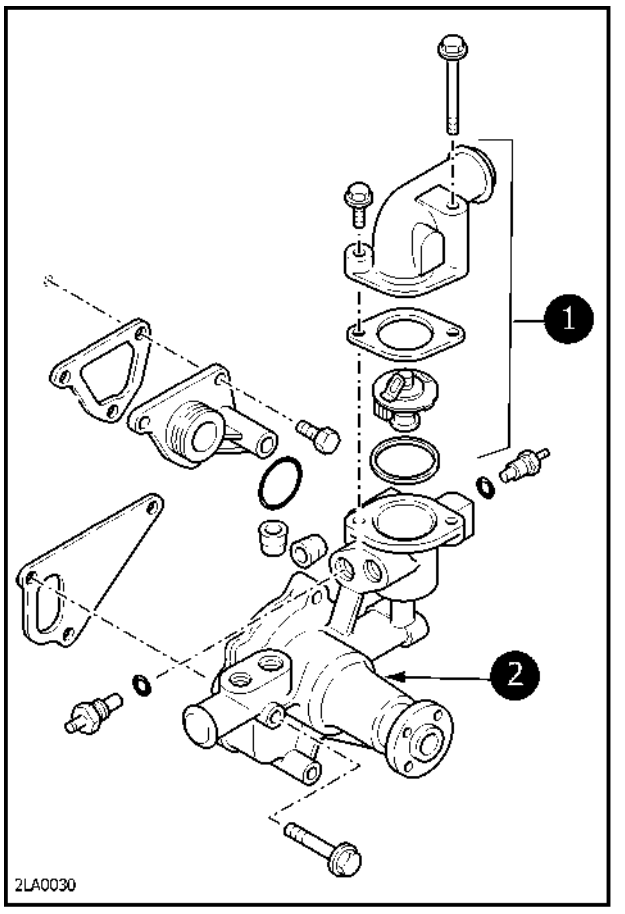


29

https://truckmanualshub.com/


21. Unscrew the fixing bolts (1, fig. 32) from the cylinder head (2, fig. 32). Take particular care to prevent the components from being dam- aged and slacken off the bolts in the order indi- cated below:

- in the figure on the right (fig. 30) for the three-cylinder engine (Mod. MISTRAL AMERICA 40)

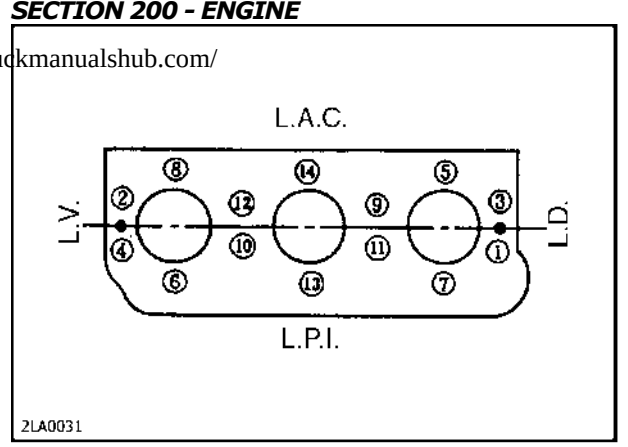

30

- in the figure on the right (fig. 31) for the four-cylinder engine (Mod. MISTRAL AMERICA 45/50).

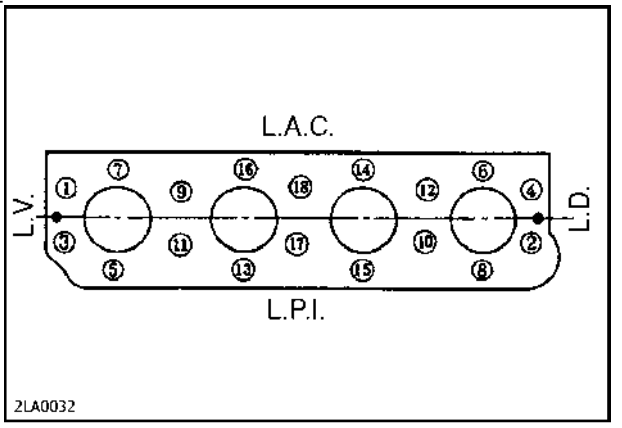


31

22. Remove the cylinder head assembly (2).

23. Remove the head gasket (3).

L.V. = Flywheel side L.D. = Timing system side L.A.C. = Camshaft side L.P.I. = Injection pump side

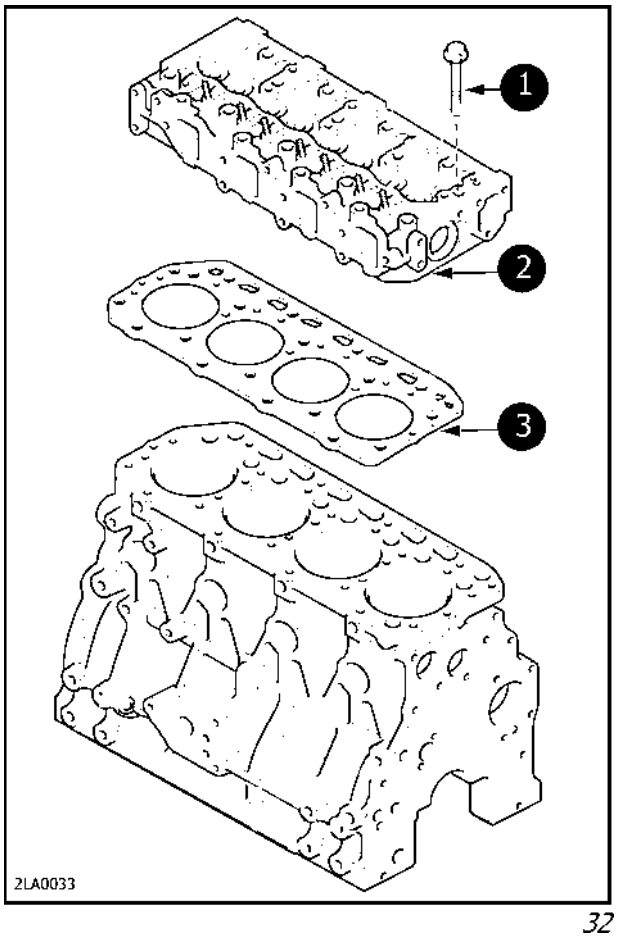


32

https://truckmanualshub.com/

24. Remove the intake/exhaust valves from the cylinder head in the following way:


Using a compression tool (1) **003 MT MIS**, compress the valve spring (3, fig. 34) and remove the cotters (1, fig. 34).

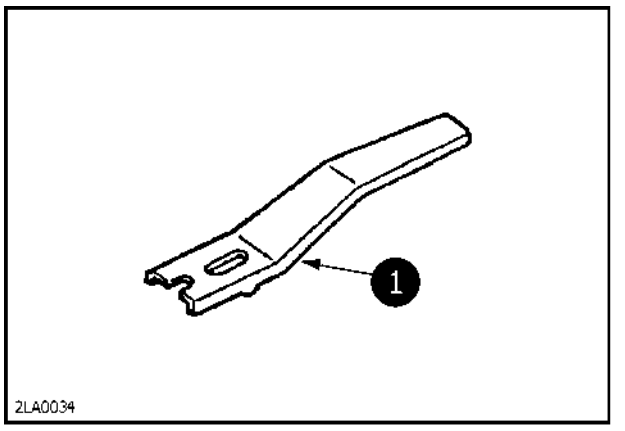

33

- Remove the valve retainer (2) and the spring (3).
- Remove the intake valve (6) and exhaust valve (5).

Repeat the sequence of operations for the remaining valves.

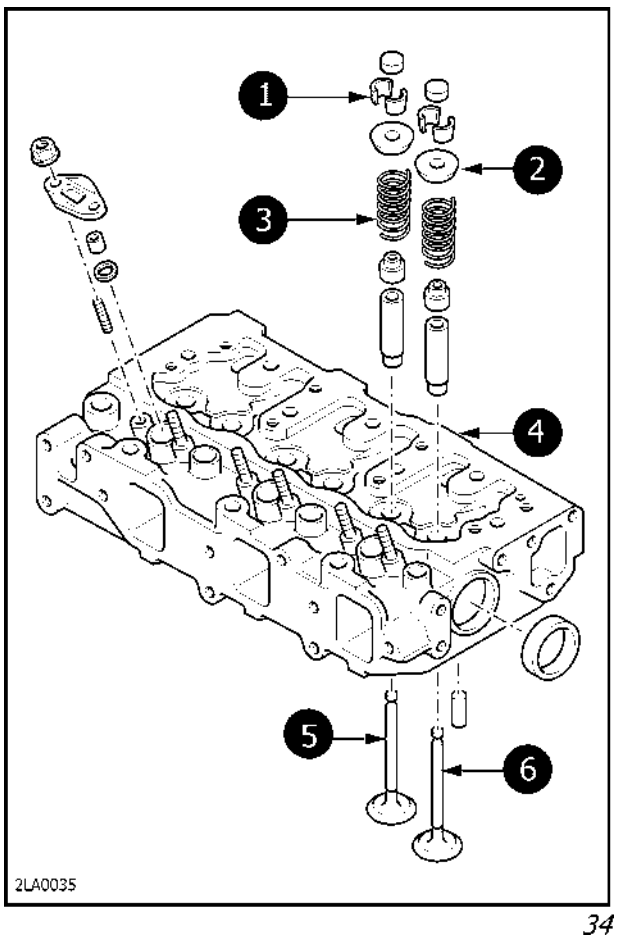


34

25. Remove the bolt (2) that connects the V-pulley of the drive shaft (1).

26. Use a puller to take out the drive shaft pulley (1).


Tap on the bolt (2) with a plastic mallet or some similar tool in order to remove the pulley (1).

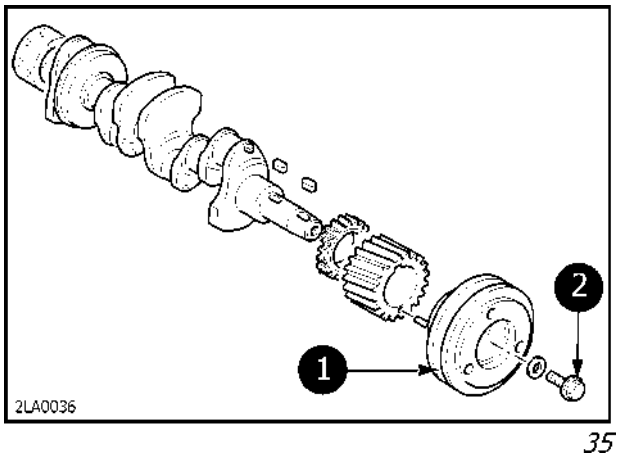

35

https://truckmanualshub.com/

27. Remove the screws (2) that fix the spacer (1) between the crankcase and oil sump (3).

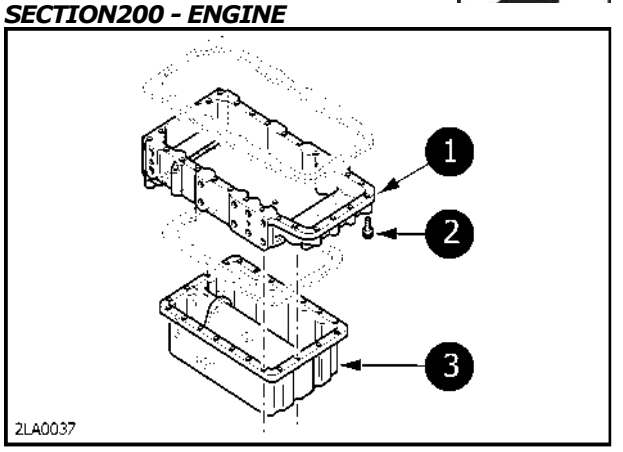


36

28. Unscrew the fixing bolts (4) from the gearbox (1).

Always remove the bolt from the reinforc- ! ing element (3) in the center of the gear- box.

When the gearbox is removed, remember to protect the retainer seal (2) in an adequate way to prevent it from being damaged.

29. Remove the gearbox (1).

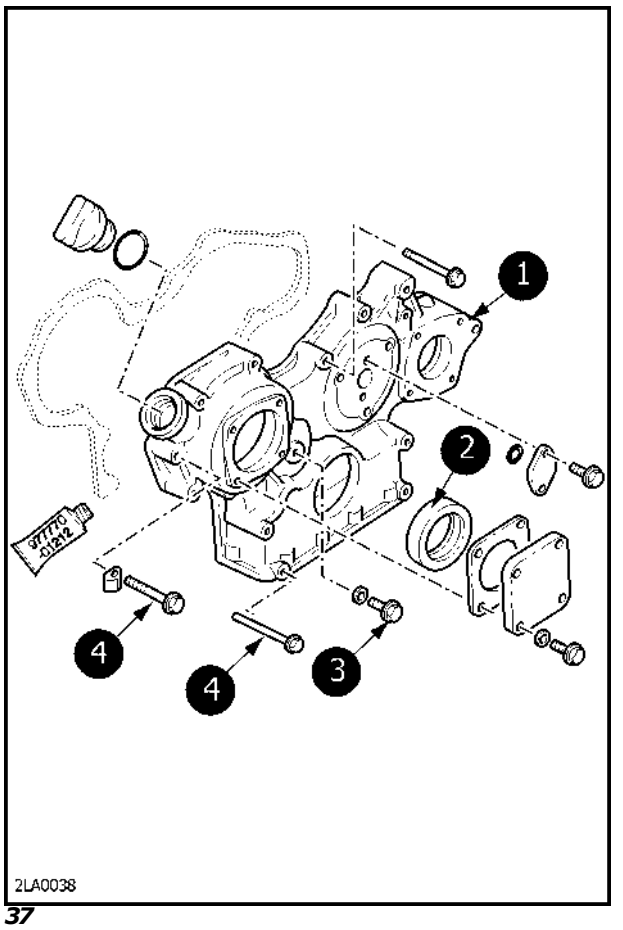


37

https://truckmanualshub.com/

Before the injection pump (1) is removed, check the position of the arrow on the body of the pump used to time the injection phase and the position of the line marked on the gearbox flange.

30. Remove the nut from the driven gear (2) of the injection pump (1). Take the gear out with an appropriate puller.


31. Remove the injection pump (1). Remove the lubricating oil pump (3).

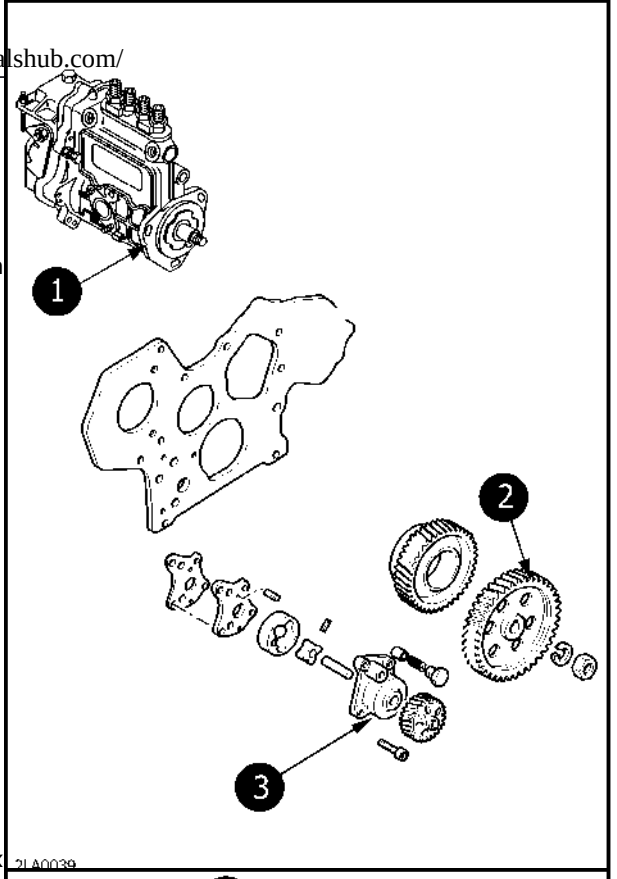

32. Remove the starter motor (2) from the gearbox flange (1).


33. Remove the fixing bolts (1) from the flywheel on the drive shaft (3).

34. Remove the flywheel (2).

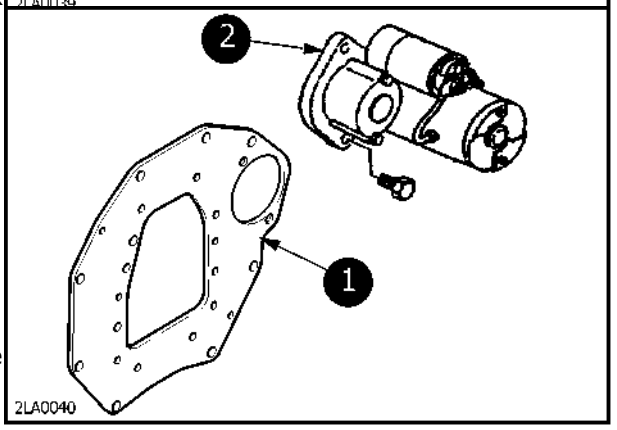

39

Protect the ring gear in an adequate way to prevent it from being damaged.

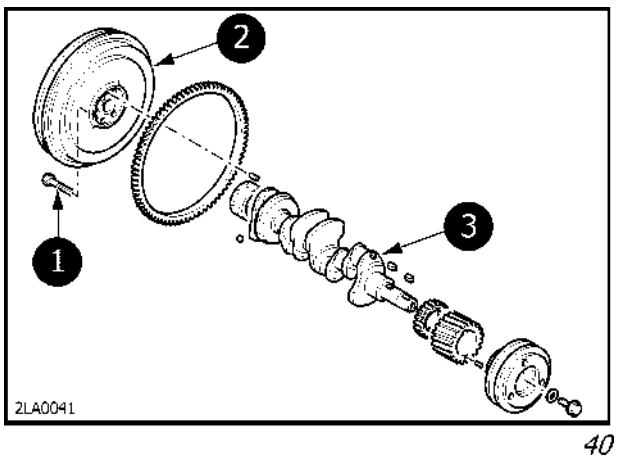


40

https://truckmanualshub.com/

35. Remove the retention seal box (1) by inserting a screwdriver into the grooves on both sides of the box itself.


Take care to protect the seal to prevent it from being damaged.

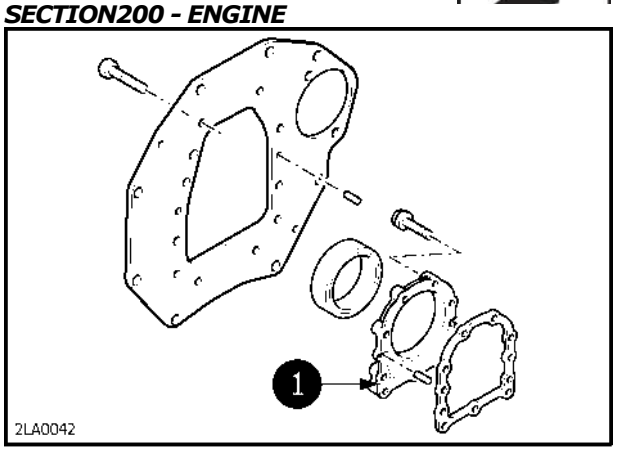

41

36. Remove the spacer (1) and the oil sump (2).

Position the cylinder block assembly with the surface pointing downwards.
Take care to protect the combustion surface to prevent it from being damaged.

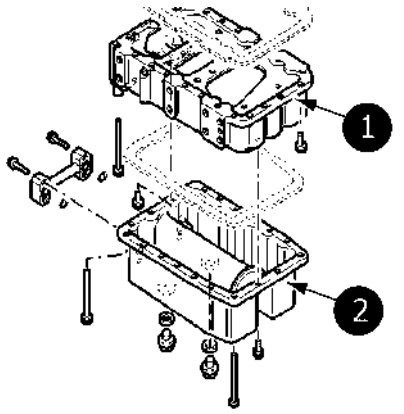


42

37. Remove the intermediate gear shaft (7), then remove the gear itself (3).

38. Remove the bolt (5) that fixes the thrust bearing (4) through the hole of the camshaft gear (6). Remove the camshaft assembly (1).

Move the cylinder block to one side to prevent the tappets (1, fig. 44) from jamming on the cam.
Heat the gear (5) and the camshaft assembly (1) to 180°C - 200°C (they are shrunk-on) before splitting them.

39. Remove the gearbox (2) flange.

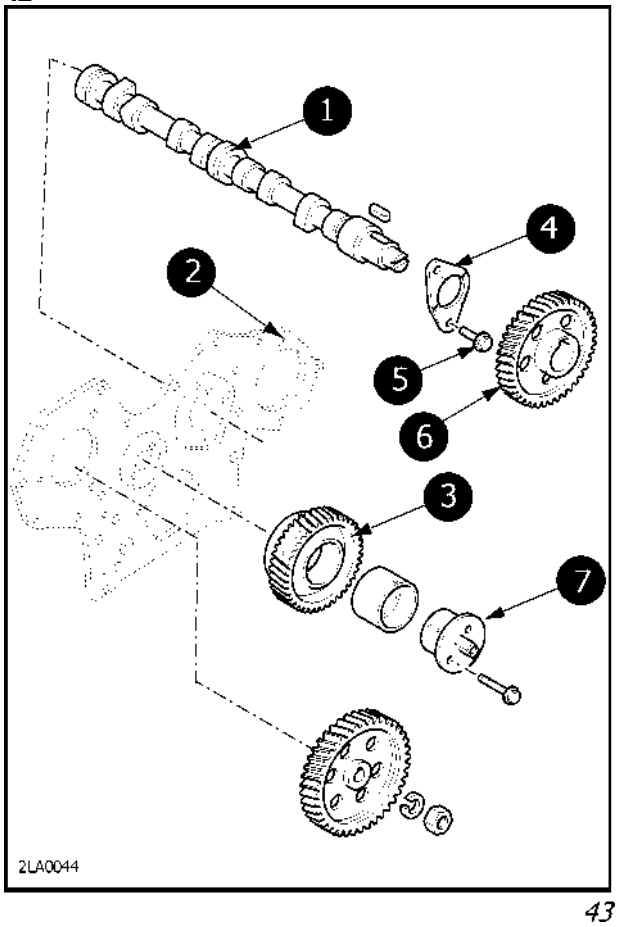

43

https://truckmanualshub.com/


40. Remove the oil pump filter (2).

41. Remove the big end pin cap (4).

> Make sure that the number of the big end cap (2, fig. 45) matches the number of the cylinder.
> Make sure that the big end pin bearing (3) does not drop off when the cap (4) is removed.

42. Remove the piston (1, fig. 45) and connecting rod (2, fig. 45) without having to take out the drive shaft. To do this, proceed in the following way:


- Turn the drive shaft (3) and move the piston to bottom dead center (B.D.C.).
- Remove the carbon deposits from the upper wall of the cylinder using fine grain glass pa per. Take care to prevent the inner sur- faces of the cylinder from being damaged.
- After having detached the cap of the big end pin (5), turn the drive shaft and bring the piston to bottom dead center (B.D.C.).
- Take out the piston/connecting rod assem- bly by lightly tapping on the big-end (2, fig. 45) with the handle of a plastic mallet.

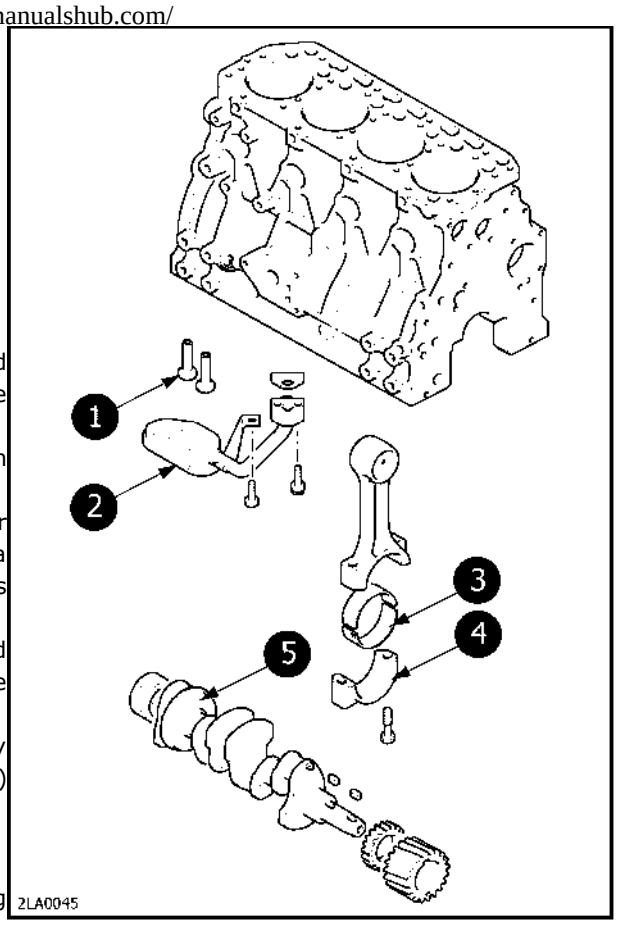

44

43. Remove the bolt (7) from the main bearing support (6). Detach the cap (6) along with the lower half bearing (5) of the main bearing.

Before taking out the drive shaft, measure the float from this latter by placing a comparator (1, fig. 46) on its end (3). Now proceed as described in "Drive shaft inspections, measurements and repairs - Drive shaft float".

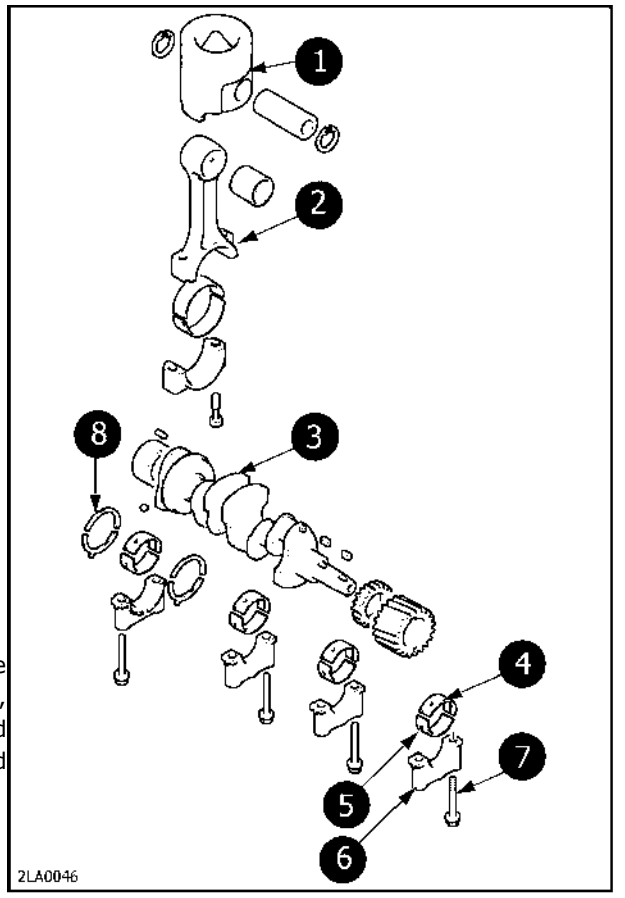


45

https://truckmanualshub.com/


Alternatively, insert a thickness gauge straight between the bearing ring (8, fig. 45) and the thrusting surface on the drive shaft in order to measure the float, which must be 0.090 - 0.271 mm (for all models).
If the value measured is higher than the above limit, replace the bearing ring (8, fig. 45) as described below:

1. When the ring is removed (8, fig. 45), check and note down its position and mounting direction in relation to the cap.
2. Make sure that the groove in the bearing ring points outwards in relation to the cap.

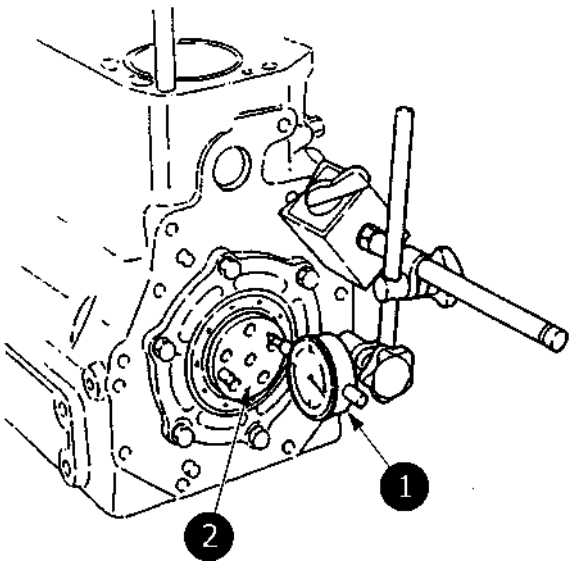

44. Take out the drive shaft (3, fig. 45), taking care to prevent it from being damaged.
45. Remove the upper half bearing (4, fig. 45) of the main bearing.
46. Remove the piston (1, fig. 45) and connecting rod (2, fig. 45) assembly if it is still mounted.
47. Remove the tappets (1, fig. 47).

2LA0047
46

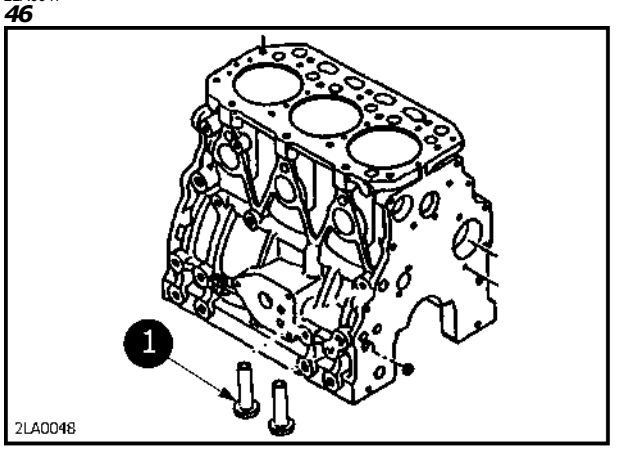

47

Apply a label to the tappets (1) for each cylinder to ensure that they are remounted in the right order.


https://truckmanualshub.com/

DANGER

! Do not use matches, cigarette lighters or torches as light source near the machine as it contains inflammable fluids.

Bear in mind the following recommendations when remounting the engine:


- Thoroughly clean all parts if the engine must be demounted.

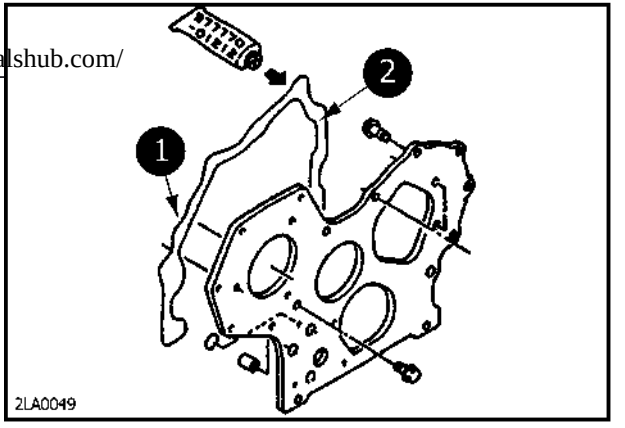

48

Work through the engine demounting opera- tions in reverse order when remounting the engine.
The following descriptions illustrate assembly operations where greater attention is required in order to mount the parts in the correct way.
The driving torques of the parts are given on page 17.

Replace all the gaskets during the remounting phase when total or partial demounting operations are carried out.

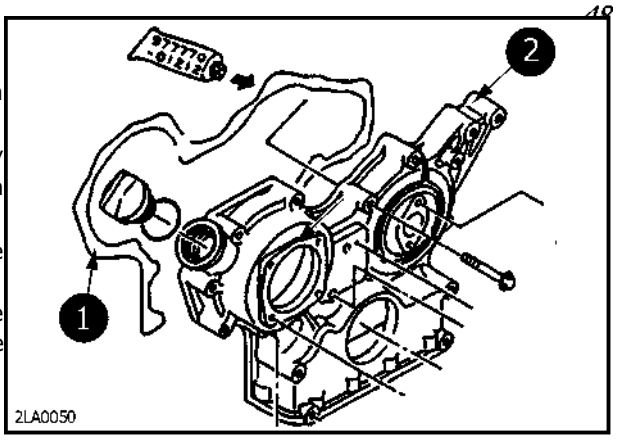

49


r-%

Lubricate the parts with engine oil before the rotating components and gaskets are fitted during the coupling phase.
Liquid seals must be used for specific coupling surfaces when the parts are remounted:

- Figure 48 - seal (1) between crankcase - gearbox flange (2).
- Figure 49 - seal (1) between flange - gear- box cover (2).
- Figure 50 - seal (1) on oil sump (2) contact surface.

Lubricate the gasket with engine oil when the oil filter is remounted.

i-*

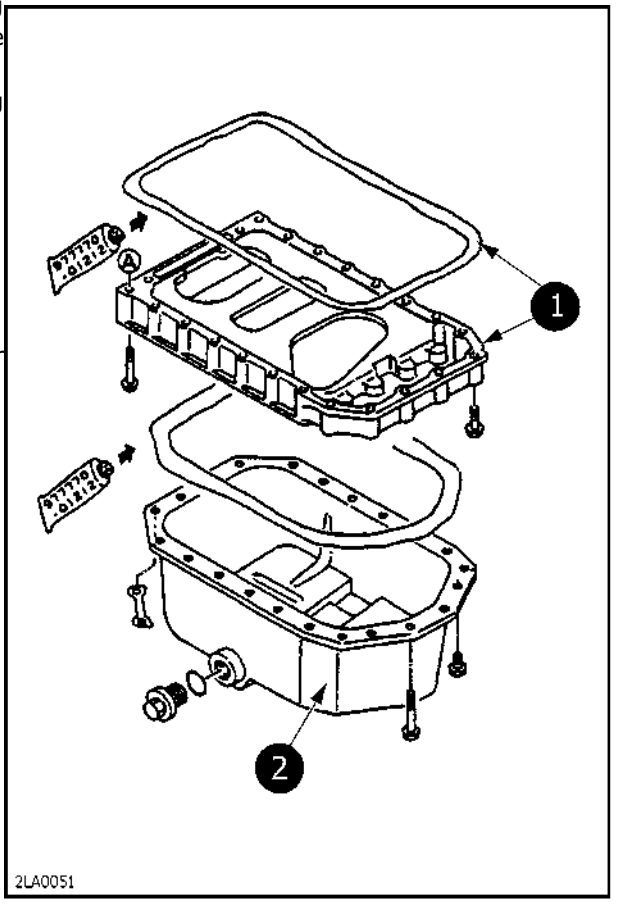

50


https://truckmanualshub.com/

Assembly of tappets and drive shaft with main bearing caps, bearings and bearing rings

Proceed in the following way:

r-%

- Mount the tappets in their relative housings in the crankcase.
- Lubricate the housings in the crankcase with engine oil and position the main half bearings.
  - Insert the lower drive shaft bearing half rings and apply grease to the shims of the second from last main bearing to facilitate the opera- tion.
- Lubricate the upper part of the main half bearings with engine oil and mount the drive shaft, taking care to prevent the previously mounted bearing half rings from being damaged.
- Lubricate the main journals with engine oil. Position the main bearing caps along with the relative half bearings and mount the upper bearing half rings (on the second from last main bearing cap).
- Turn the drive shaft a few times in order to allow the various components to adapt.
- Mount the bolts (1) that fix the main bearing caps, bringing them into contact with the same, then tighten them to the prescribed torque value.
- After the drive shaft has more or less been mounted, check the float in compliance with the procedure described in "Drive shaft inspec- tions, measurements and repairs - Drive shaft float".
- Apply liquid seal to prevent gaps from forming in the centre. Failure to do this could lead to oil leaks, etc... (see section 100).

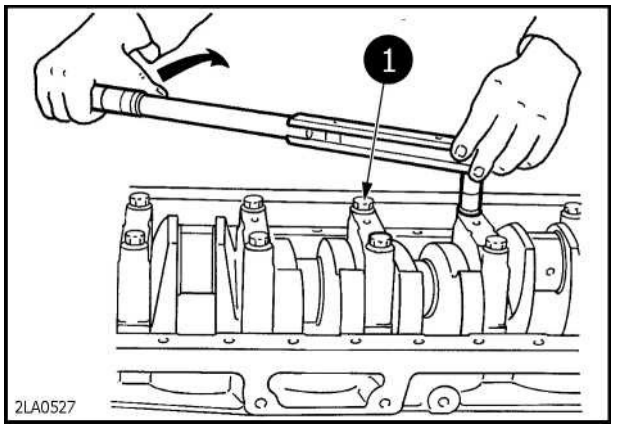


https://truckmanualshub.com/

Proceed in the following way:


Lubricate the pistons, piston rings and cylinder liners with engine oil before mounting them.

Mount the piston rings on the piston housings with the manufacturer's mark (1) near the indentation, pointing upwards (combustion chamber) and using tool **004 MT MIS**.

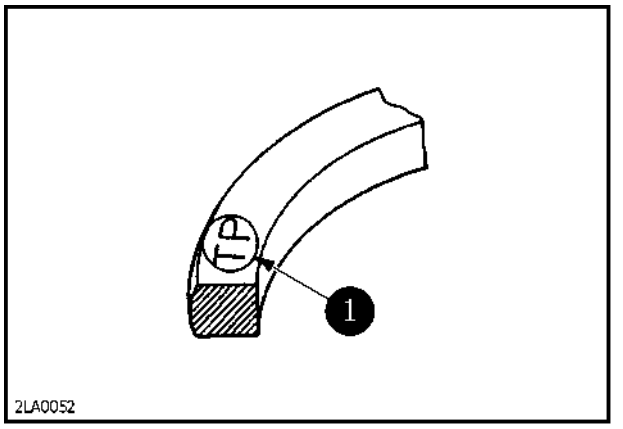

52

- Make sure that the piston rings (1, 2 and 3) are free to move in their housings and that the indentations are staggered 120° in relation to each other.
- Mount the pistons complete with connecting rods into the crankcase. Make sure that the connecting rod matches the right cylinder.

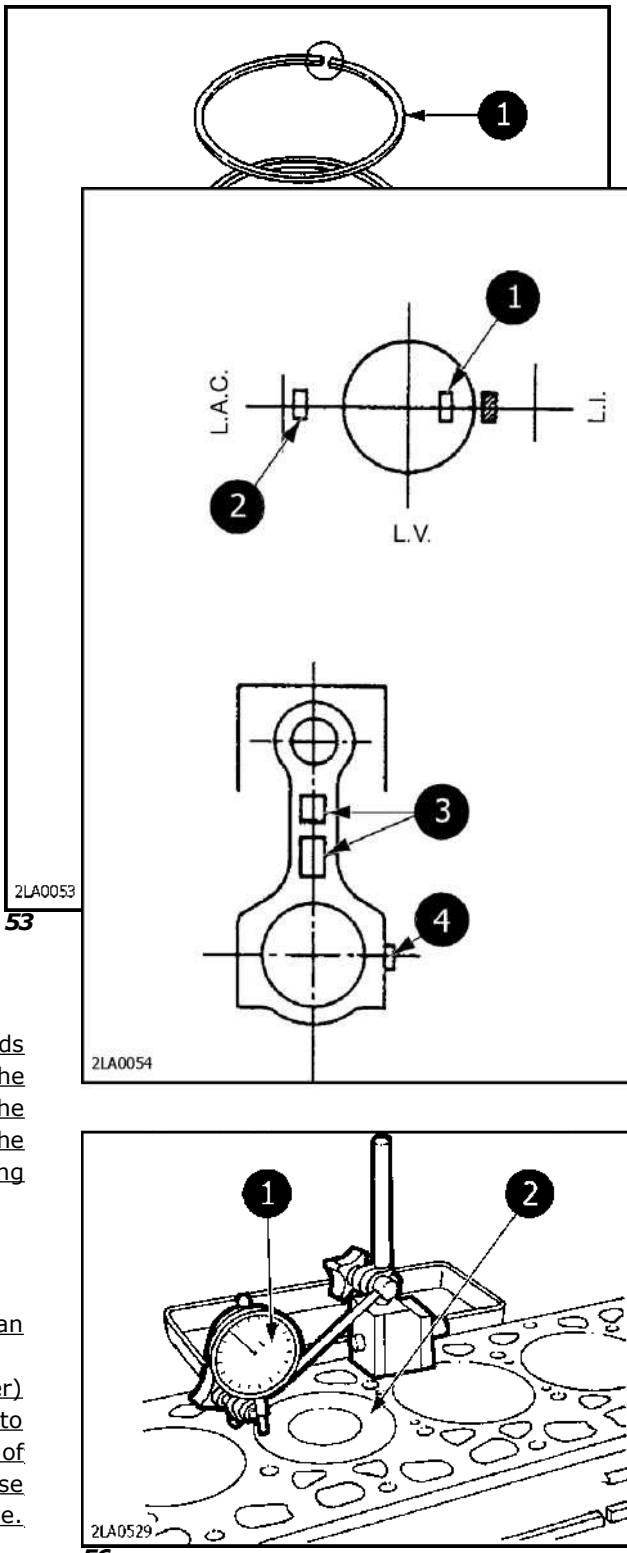

53

54

Mount tool **005 MT MIS** in order to fit the pistons into the cylinder liners. Proceed with care to prevent the indentations described in the previous step from being staggered.

<S>


Mount the pistons complete with connecting rods into the crankcase. Make sure that the connecting rods and cylinders match and that the positions of the connecting rods comply with the indications given by the marks on the connecting rods themselves.

Key:

Turn the rotating stand through 180° and clean the top surface of the crankcase.

Bring the pistons (2) to TDC (top dead center) and use a comparator with magnetic base (l) to check that the extent to which the top surface of the pistons projects in relation to the crankcase does not exceed the prescribed toler- ance value.

L.A
L.I. = Fl

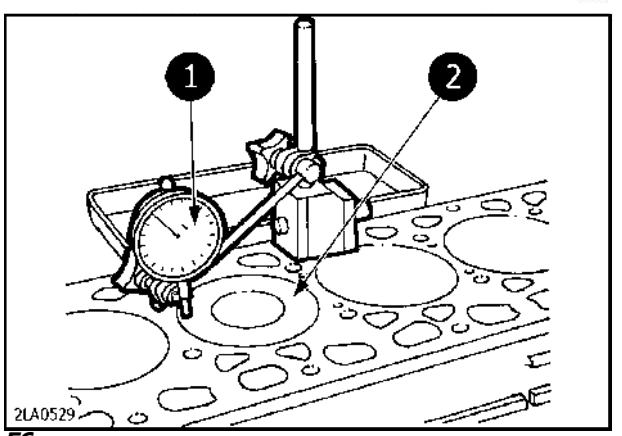


56

https://truckmanualshub.com/

Assembly of timing, lubrication, starting, recharging, cooling and fuelling components

- Remove the gearbox flange.
- Shrink-on the camshaft gear to the shaft itself.
- Fit the camshaft assembly back into the crank-case and fix the relative crankcase thrust bear-ing with the bolts.
- Fit the intermediate gear back on the relative shaft.
- Fit the intermediate gear back shaft into the crankcase.
- Fix the spacer between the crankcase and oil sump, to the crankcase itself, then fix the sump to the spacer and tighten the relative bolt. Remount the drive shaft gasket box.
- Fit the flywheel back on to the drive shaft and tighten the fixing bolts to a 83.4 - 88.3 Nm (8.5 - 9 kgm) torque value.
- Fit the starter motor back on to the gearbox flange.
- Remount the lubricating oil pump.
- Mount the driving gear of the injection pump back on to the pump itself.
- Remount the injection pump and proceed with the timing operation.
- Mount the gearbox back on to the crankcase with the flange in between.
- Remount the screws that fix the spacer (crank-case-oil sump) to the gearbox.
- Fit the V-pulley back on to the drive shaft and fix it in place by tightening the relative bolt to a 112.8 - 122.6 Nm (11.5 - 12.5 kgm) torque value.
- After the gears have been mounted, check to make sure that the gear train has been cor- rectly timed as indicated in "Gear Inspections, Measurements and Repairs - Gear Train".
- Apply lubricating oil through to the lower sur- face (dotted part in the figure) of the valve guide (1) before inserting the valve stem.
- Fit the springs and cotters back into the cylinder head and valves (intake and exhaust).

r-fc

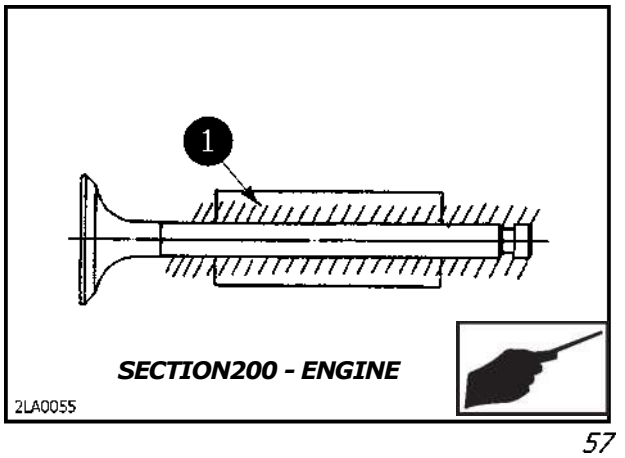

57


Proceed by mounting (and correctly position- ing) the cylinder head, thoroughly cleaning and eliminating the grease from the top part of the crankcase.
Fit the cylinder head assembly and tighten the fixing bolts to a 85.3 - 91.2 Nm (8.7 - 9.3 kgm) torque value in the indicated sequence:


- in the figure on the right (58) for the three- cylinder engine (mod. MISTRAL AMERICA 40)

- in the figure on the right (59) for the four- cylinder engine (mods. MISTRAL AMERICA 45/50).

Key:
L.A.C. = Camshaft side
L.S.I. = Gearbox side
L.P.I. = Injection pump side
L.V. = Flywheel side


- Remount the pump of the cooling system and the thermostat unit.
- Re-connect the coolant delivery hose to the pump.
- Remount the fuel filter.
- Remount the fuel return hoses.
- Fit the dipstick back in place.
- Remount the lubricating oil assembly.
- Remount the spacer of the cooling fan and the V-pulley.
- Remount the alternator.
- Remount the cooling fan-alternator belt, then remount the fan. Consult "Belt tension inspection" to establish the correct belt tension.

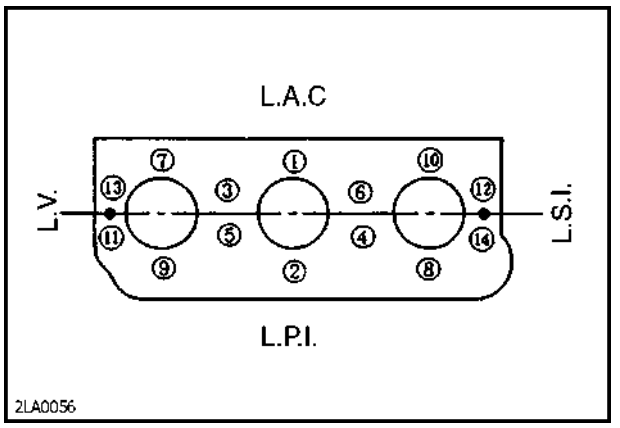

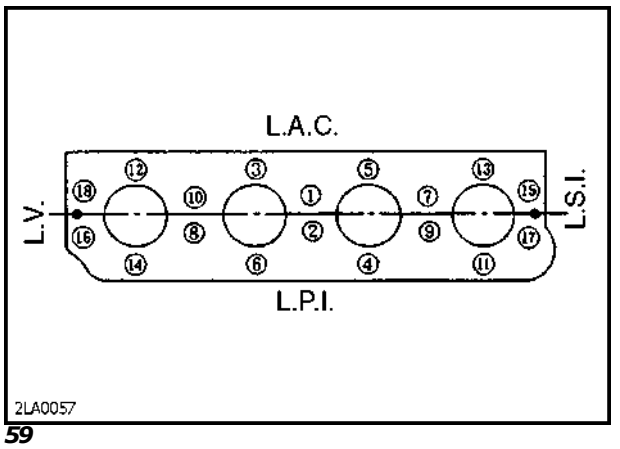

59

https://truckmanualshub.com/

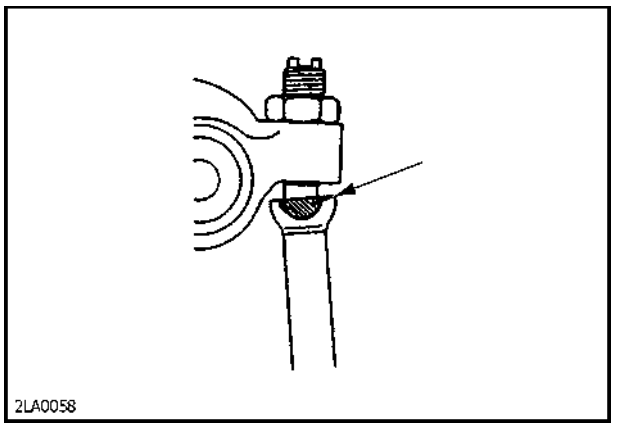

60

- Remount the rocker arm rods in compliance with the rods-cylinders matches defined by labelling during the demounting phase and by first applying a film of lubricating oil in the hatched part of the rocker arm rod as shown in the figure.
- Remount the rocker arm/shaft assembly.
- Remount the injector retainers and lock them to the injectors with the retainer nuts (also replace their protection elements).
- Remount the fuel return hose.
- Remount the high pressure fuel hose.
- Re-open the fuel tank cock.
- Remount the intake manifold.
- Remount the exhaust manifold.
- Top up the level of the lubricating oil and coolant.


After the engine has been completely remounted and the fluid levels topped up, proceed with the adjustments and inspections described in the following sections:

- "Valve play adjustment",
- "Checking the cooling circuit and radiator for leaks",
- "Idling rate adjustment (minimum and maximum)"

https://truckmanualshub.com/

Valve play adjustment

1. Check the valve play when the engine is cold.
2. Move the piston to top dead center (TDC) in the cylinder where the measurements are being taken.
3. Using a spanner (2), slacken off the lock nut and then the adjuster screw, using a screw- driver (1). Make sure that the valve cap is cor- rectly positioned and free from dirt deposits.

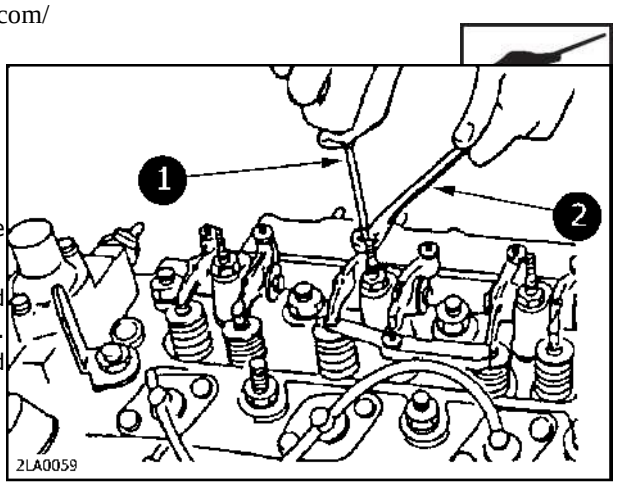


61

^E37

4. Insert a thickness gauge with a play value (G) of:

   1. 15 - 0.25 mm


   between the rocker arm and cap of the intake/ exhaust valve.
   Tighten the adjuster screw (1) until the rocker arm pad touches the thickness gauge and fix with the lock nut (2).

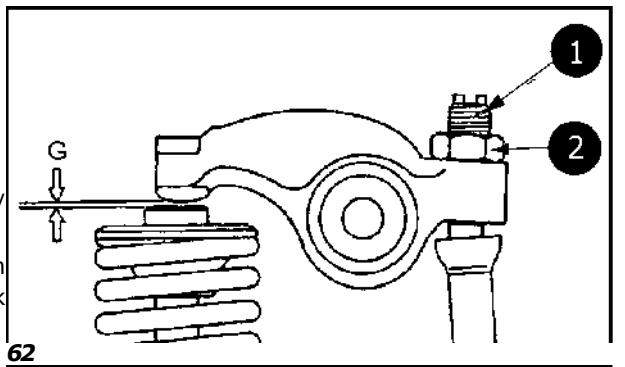

62

na³

Replace the valve cap (1) if it is worn or damaged.
Make sure that the cap is correctly positioned on the top of the intake/ exhaust valves.

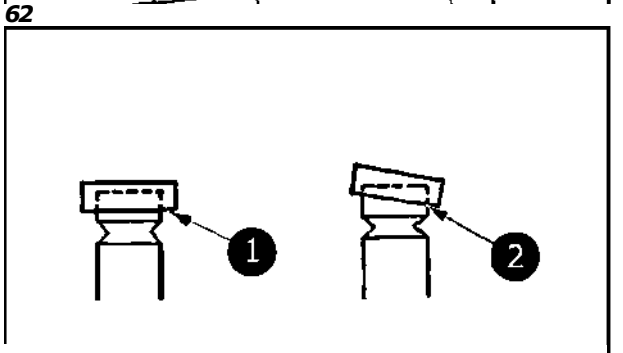


Key:


How to check the belt tension

2. Press with the hand in the middle of the belt between the alternator (3) and the cooling pump (1) in the direction shown by the arrow. If the belt gives (F):

   F = 10 - 15 mm

   the belt tension is correct.

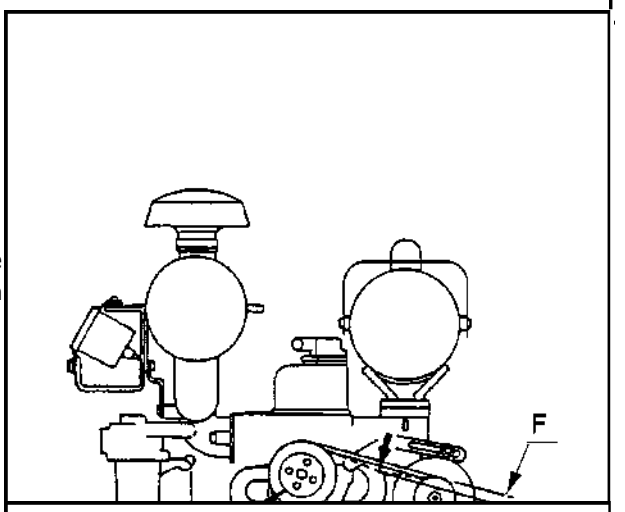

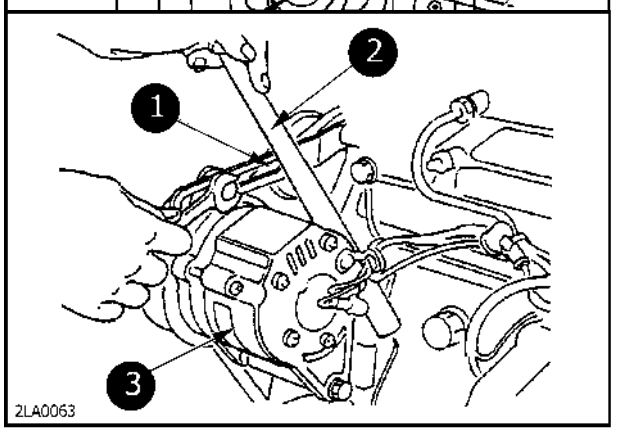

65


https://truckmanualshub.com/

2. If the belt fails to give to the prescribed values, adjust the tension by changing the position of the alternator (3) by means of the adjuster bracket (1) and bar (2).

https://truckmanualshub.com/

INJECTOR NOZZLE AND INJECTION PRESSURE

Carefully remove the carbon deposits from the injector before proceeding with the inspections.

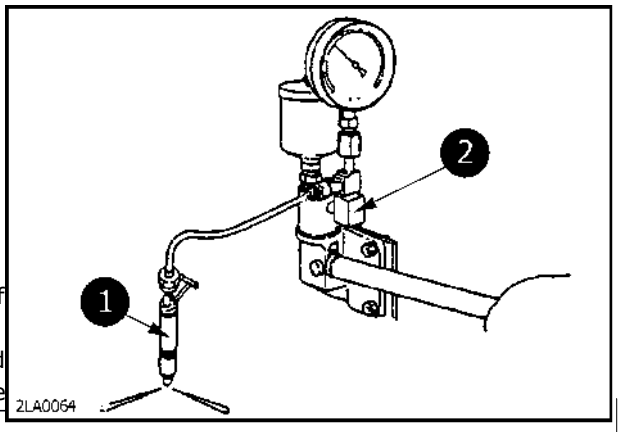

66


MEASURING AND MONITORING

Injection pressure measurement

1. Connect the injector (1) to the high pressure hose of the injector test instrument (2).
2. Slowly operate the lever of the instrument (2) and note down the value indicated by the pressure gauge when the injector (1) starts to spray.

Consult the table on page 8 for the injection pressure values of each engine.

3. If the pressure measured is less than the pre- scribed value, replace the adjuster ring of the injector with a thicker one calculated according to the indications given in the table below:

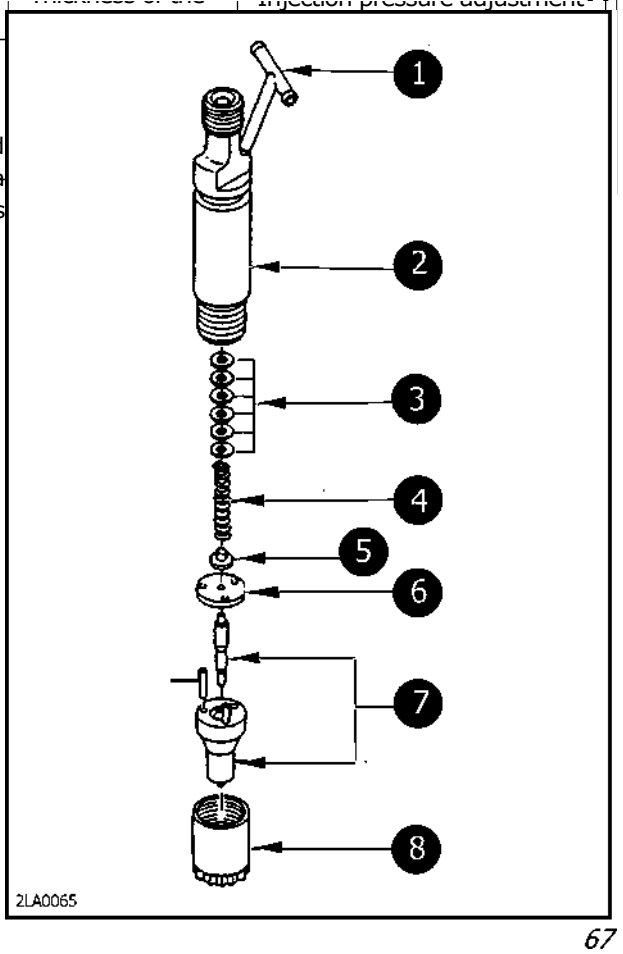

67

View of the injector parts:


1. Fuel return hose coupling.
2. Injector body.
3. Adjuster ring
4. Spring
5. Spring housing
6. Atomizer retaining spacer.
7. Atomizer
8. Atomizer housing

https://truckmanualshub.com/

Jet inspection

Operate the lever (3) of the injector test instrument (2) 4 - 6 times, depending on the prescribed injec- tion pressure (See page 8) while checking the jets.

- Make sure that the jet is neither a continuous nor fragmentary flow. Clean or replace the atomizer (7, fig. 67) if this is the case.
- Make sure that the jet of fuel around the median line of the injector is tapered in shape and that the delivery angle is about 150°. Clean or replace the atomizer if this is not the case.
- Check the injector with the relative measuring instrument. Tighten and repeat the test if there is an excessive fuel return from the recovery joint. Replace the entire atomizer unit if the leaks persist.

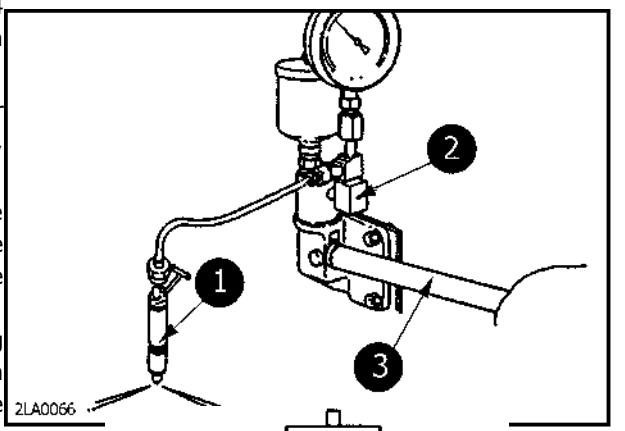

68


Refer to the figure on the right in order to define the shape of the jet:

- normal jet see fig. 69;
- abnormal jet see fig. 70;

Place a sheet of white paper 30 cm under the atomizer and make sure that the jet forms a perfect circle.

After injection, make sure that no fuel drips from the injector.

Make sure that there are no fuel leaks from the injection hole if the pressure is slightly lower than the prescribed value.

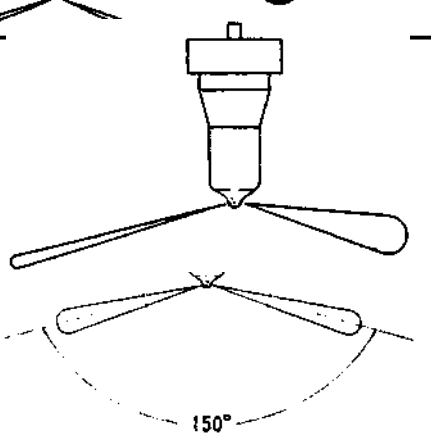

2LA0067

69


2LA0068

70

https://truckmanualshub.com/

Atomizer valve sliding test

1. Thoroughly clean the atomizer valve (1) with clean diesel fuel.
2. Keep the body (2) of the atomizer in a vertical position and lift the valve about 1/3rd of its length.
3. Make sure that the valve drops back easily by itself when released. In this case, the valve is in a perfect condition.

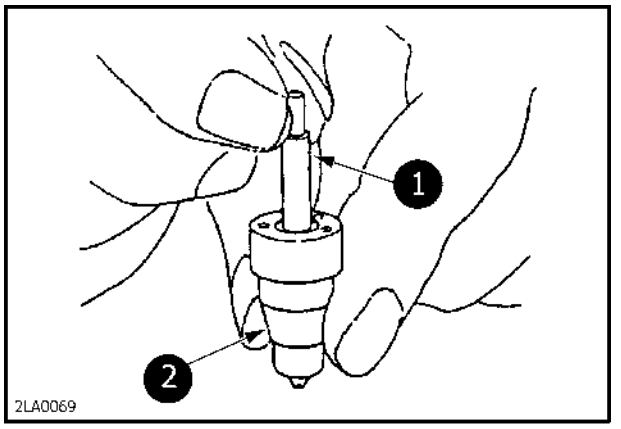

71


If the atomizer is new, remove the adhesive film and immerse it in clean diesel fuel (or another similar product) to clean the internal surfaces and remove all traces of rust inhibitor before it is used. New atomizers are spread with rust inhibitor oil and are covered with adhesive film to protect them from the air.

Identification number of the atomizer casing

Consult the following explanation to interpret the identification number (2) of the atomizer casing (1):

Y DLL A - 150 P 244JO


Model code
Dimensions: d imension
F d imension S
Injection angle
Atomizer positioning angle CodeA: angled No code: not angled
Type : DLL (sem i-long type) YANMAR

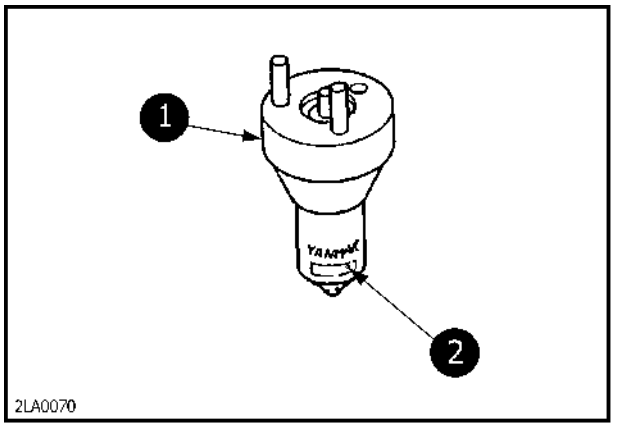

72

INJECTION TIMING ADJUSTMENT AND MONITORING


1. Use the pulley (1) of the drive shaft and turn the engine in the indicated direction.

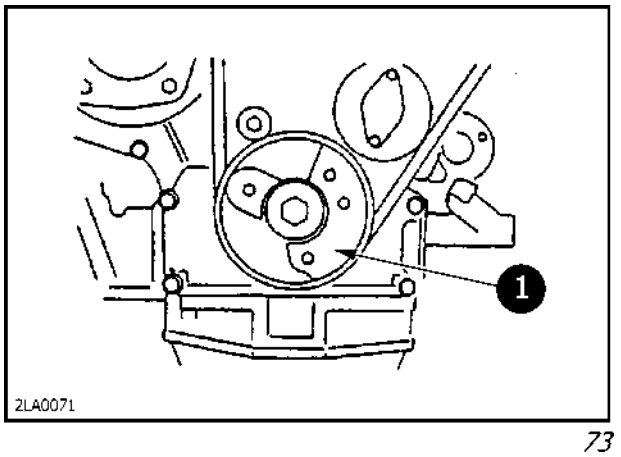

73

https://truckmanualshub.com/

3. Check the injection timing on the delivery valve of the injection pump for cylinder N° 1 (1). (Cylinder numbering is sequential beginning with cylinder N° 1 from the flywheel side).

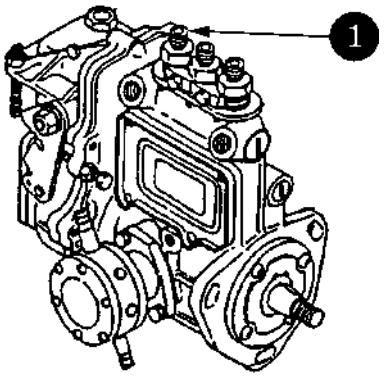


2LA0072

4. Turn the drive shaft in the indicated direction until the diesel fuel level reaches the upper limit of the spring casing of the delivery valve.

IDLING RATE ADJUSTMENT (MINIMUM AND MAXIMUM)


1. Allow the engine to warm up then gradually accelerate to top rate (see pages 3, 4 and 5).
2. If the top idling rate differs from the prescribed value, adjust by means of the maximum idling rate adjuster screw (1).
3. Allow the engine to idle (see pages 2, 3 and 4) by turning the minimum idling rate adjuster screw (2).

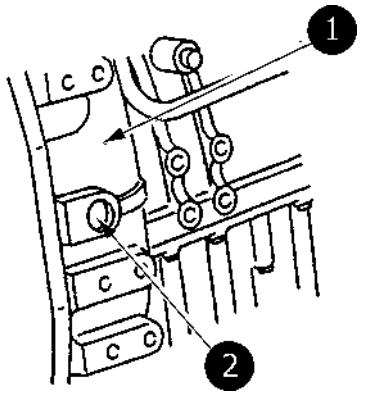

2LA0073

4. Find the timing notch on the flywheel (1) through the access hole (2).


Consult page 8 for instructions about how to time the injection phase of each engine model.

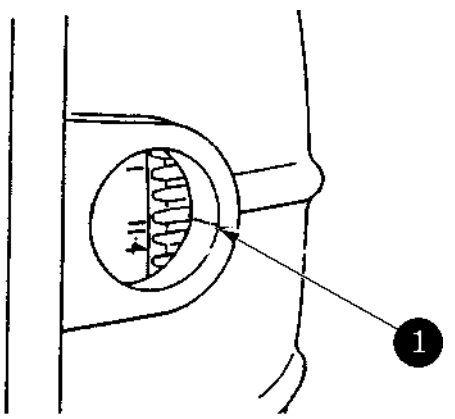

2LA0074

5. If the timing values differ from those prescribed, adjust by turning the injection pump towards the engine or in the opposite direction after having slackened off the lock nut (1) on it.

- Move the injection pump away from the engine if injection is delayed.
- Move the injection pump nearer to the engine if injection is in advance.

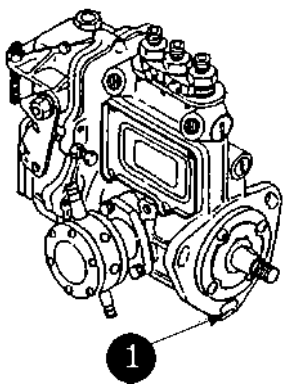


2LA0075

https://truckmanualshub.com/

SECTION200 - ENGINE

HOW TO CHECK THE COOLING SYSTEM AND RADIATOR TO FIND LEAKS

1. Make sure that the coolant in the radiator is at the right level.
2. Start the cooling pump and make sure that there are no leaks.

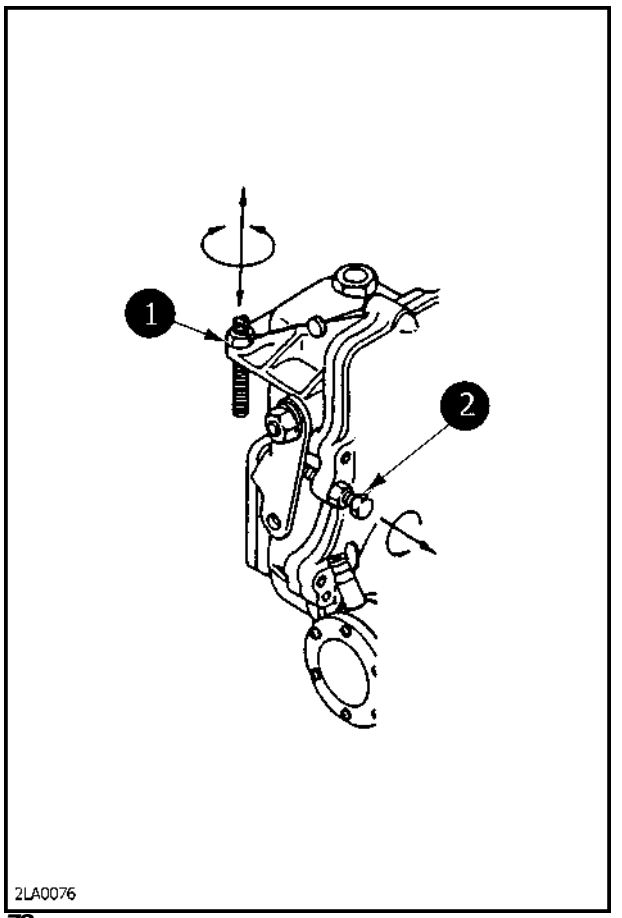

The cooling circuit can only be efficiently checked when the engine is hot.


https://truckmanualshub.com/

SENSOR INSPECTION

Thermostat

1. Immerse the thermostat (1) into a vessel fuli of water and heat this latter while measuring the temperature.

2. Make sure that the thermostat operates at the temperature of 69.5 - 72.5°C, measured with a thermometer (2). Failing this, replace it as it is defective.

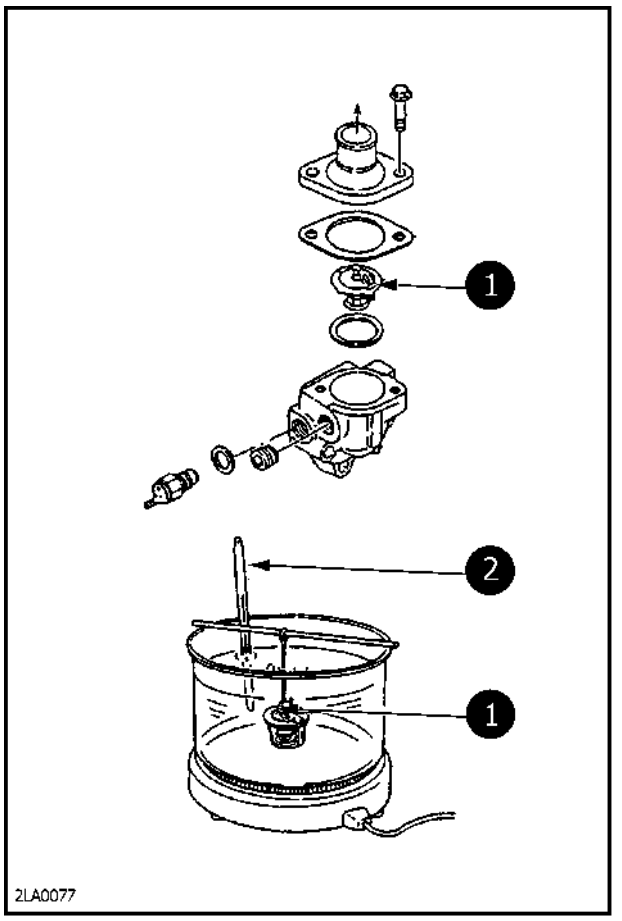


79

Thermal switch

1. Immerse the thermal switch (1) into a vessel containing antifreeze or oil.

2. Heat the liquid and measure its temperature with a thermometer (2).

3. If the tester connected to the prods (2) gives continuity values at the temperature of 107 - 113°C, then the thermal switch is operating correctly. Failing this, replace it as it is defective.

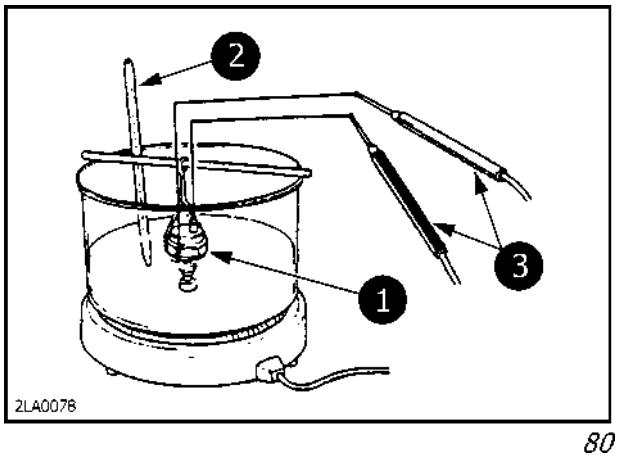


80

https://truckmanualshub.com/

SECTION200 - ENGINE

Hydraulic switch

1. Remove the connector from the hydraulic switch.
2. Start the engine and move the tester probes (1) near to the switch terminal and cylinder block (2).
3. If the tester gives a no-break indication, this means that the hydraulic switch is defective and must therefore be replaced.

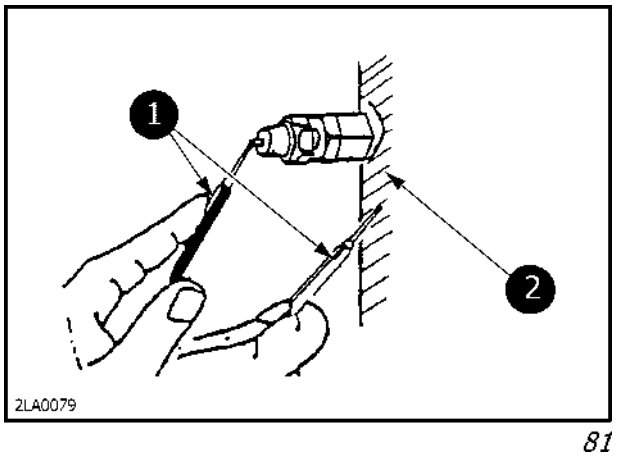

81

CYLINDER HEAD INSPECTIONS, MEASUREMENTS AND REPAIRS

Warping and inspection of the combustion surfaces

1. Remove the intake/exhaust valves and the injector from the cylinder head. Clean the surface of the cylinder head.

Thoroughly clean the parts before proceeding with the inspections.


Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.

2. Place a straightedge (1) along each of the four sides and on each diagonal of the cylinder head. Measure the play between the straightedge and the combustion surface with a thick- ness gauge (2).
3. Compare the result with the reference value which, in the specific case of a warped cylinder head combustion surface, is:

SECTION200 - ENGINE

for the normal dimension < 0.05 mm for the limit (of wear) dimension= 0.15 mm


4. Check to make sure that the combustion surface is not discoloured, broken or cracked.

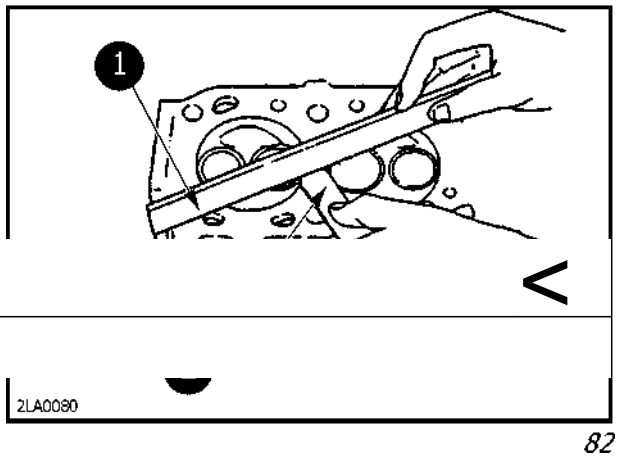

82


Valve impression

1. Lengthy use and repeated lapping can lead to a drop in combustion efficiency. Measure the depth (H, fig. 84) of the valve impression with a depth micrometer. Replace the valve if the impression is deeper than normal.

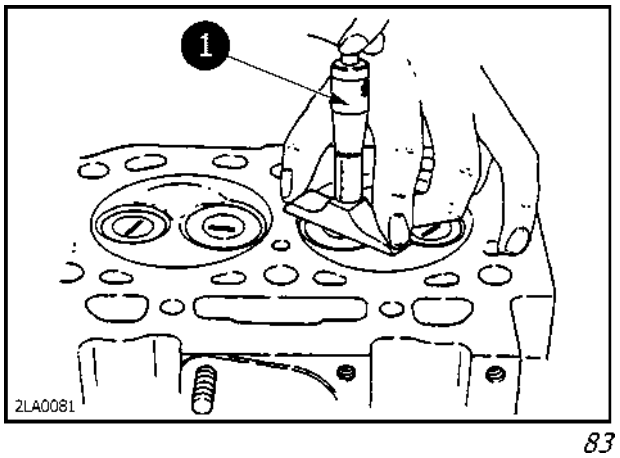

83

Standard values, for dimension (H), to compare with the

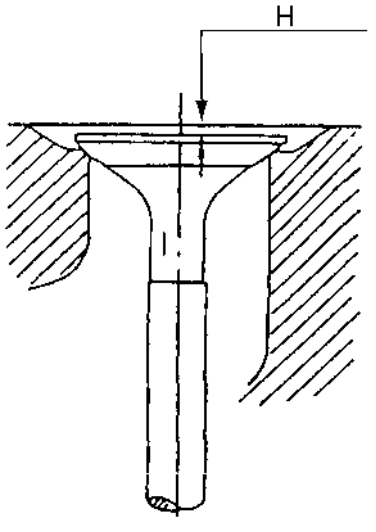

Q

h
e

m
e
a
s
u
r
e
d

v
a
l
u
e
s
,

a
r
e

g
i
v
e
n

i
n

t
h
e

t
a
b
l
e

o
n

p
a
g
e

1
0

https://truckmanualshub.com/

.

1
0

1.

2.

3.

.


Valve housing width and angle

Remove the carbon deposits from the surface of the valve housing.

Measure the width and angle of the housing using a slide (1) and angle gauge.

Compare the obtained results with the standard values given on page 10.

84

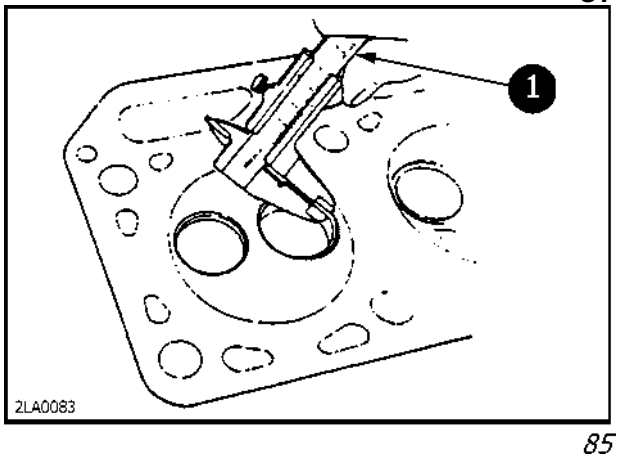


85

2LA0082

https://truckmanualshub.com/

Valve housing intervention procedurę

1. When the surface of the valve housing appears to be slightly worn or rough, lap with a valve compound mixed with oil to obtain a smooth mixture.
2. When the valve housing is very worn or rough, the defect can be corrected with a grinder tool (1) or valve housing mill and finished as described in point 1.

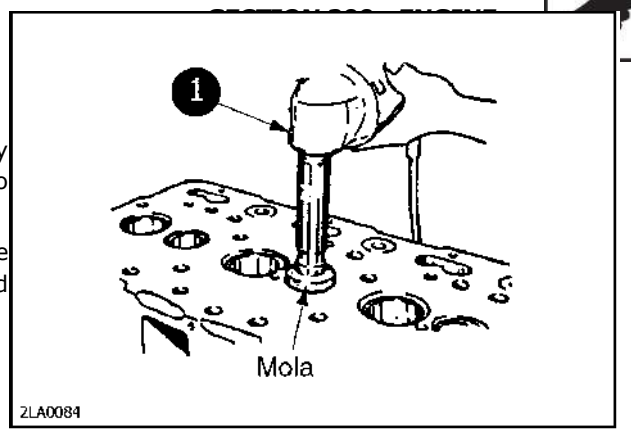


86

Grinder	Angle (0)
Intake valve	
Exhaust valve	

Grinding and milling tool use procedure

1. Correct the roughness of the valve housing surface with a grinder or milling tool.

2. When the width (L) of the valve housing (1) is more than the initial value, correct it by grinding the surface with a grinder held at 70° or with a milling tool. After this, grind the housing with a grinder held at 15° until the normal width is obtained.

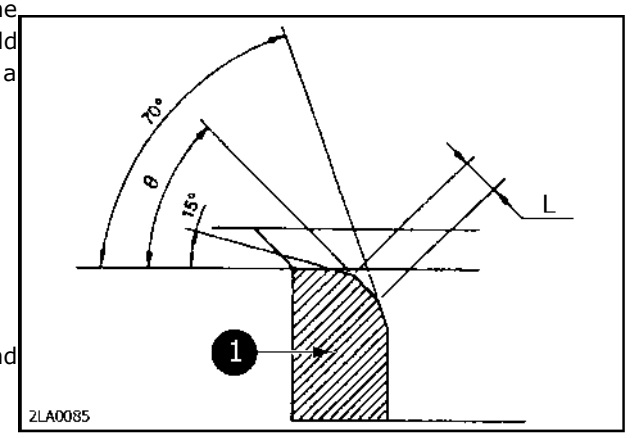

87

If a milling tool is used, apply an even pressure and avoid moving the tool in a discontinuous way.

3. Soften the valve compound by mixing it with oil and finish the valve housing by lapping.

Before working on any of the valves, make sure that you have measured the gap between the outer diameter of the valve stem and the inner diameter of the valve guide. If the gap exceeds the required limit, replace the valve or valve guide before working on the surface of the housing. (The assembly play between the valve and valve guide is given on page 7).


https://truckmanualshub.com/

1. After the work on the valve housing has terminated, thoroughly clean it and the cylinder head with diesel fuel or another similar product. Carefully remove the valve or surfacing compound.
2. Repeat points 3 and 4 if the contact is poor.

4. Terminate by lapping the valve with oil only.


Valve housing removal

1. Grind the circumference of the intake/exhaust valve head in area B to obtain a smaller outer diameter of the valve housing.
2. Grind the circumference of the valve stam end in area A until the same dimensions of the cotter housing race diameter are obtained.
3. Weld the intake/exhaust valve head (1) to the housing (2) in three points.
4. Tap on the end of the intake/exhaust valve stem to extract the valve housing.

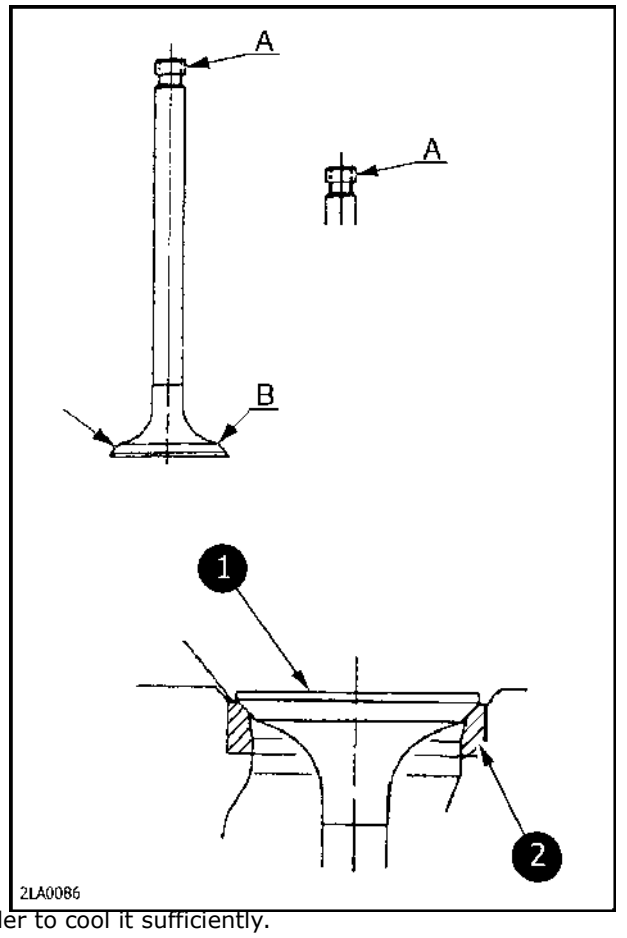

Valve housing insertion


1. Place the valve housing (1) in a vessel containing liquid nitrogen, ether or alcohol and dry ice in order to cool it sufficiently.
2. Heat the cylinder head around the valve housing to 80 - 100°C with a drier.
3. With the new intake/exhaust valve, firmly insert the sufficiently cooled valve housing into the cylinder head, tapping lightly on the valve head.
4. Allow the cylinder head to cool down to a normal temperature.

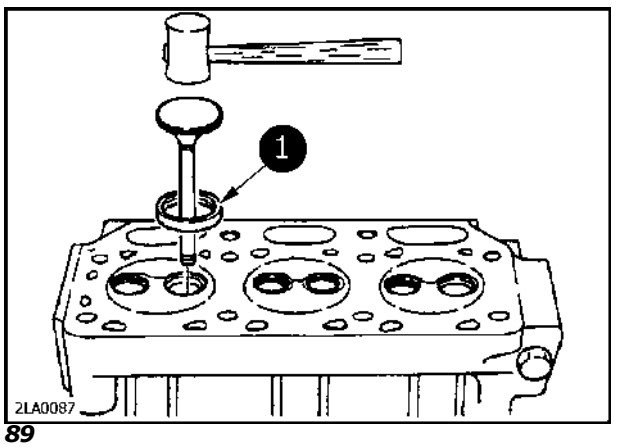

https://truckmanualshub.com/

Valve stem wear and warping

Replace the valve stem if it is very curved or worn. In this case, also replace the valve guide.

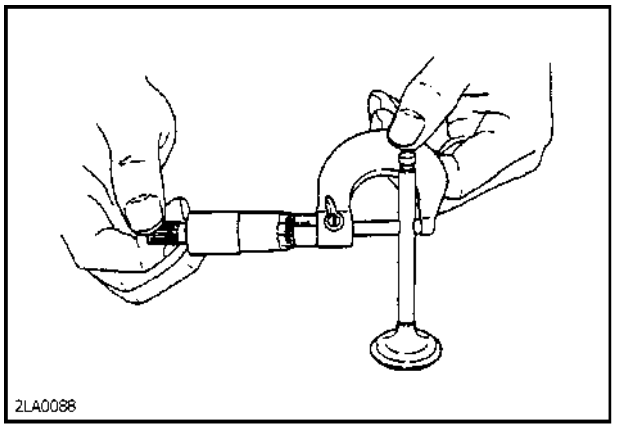

90

Valve stem and valve guide

The assembly play is the difference between the inner diameter (I.D.) of the valve guide measured with a three-point micrometer (able to measure an inner diameter between 4 mm and 8 mm) or a cylinder gauge (able to measure an inner diameter of 6 mm or more) and the external diameter (E.D.) of the stem, measured with a micrometer. Replace both the intake/exhaust valve and the valve guide when the play is near to the limit value.

Compare the results obtained with the standard values given on page 10.

Valve head thickness

Measure the thickness (S) of the valve head with a micrometer.

Replace the valve if the measured value is near to the wear limit.

Compare the results obtained with the standard values given on page 10.


92

3. Finish off the inside after the valve guide has been inserted.

Valve guide replacement

1. Remove the valve guide (2) from the cylinder head with the relative puller **006 MT MIS** (1).

2. Place the valve guide in a vessel containing liquid nitrogen, ether or alcohol and dry ice in order to cool it. Fit the sufficiently cooled valve guide into the cylinder head and tap it lightly with the relative tool **007 MT MIS** in order to seat it correctly.

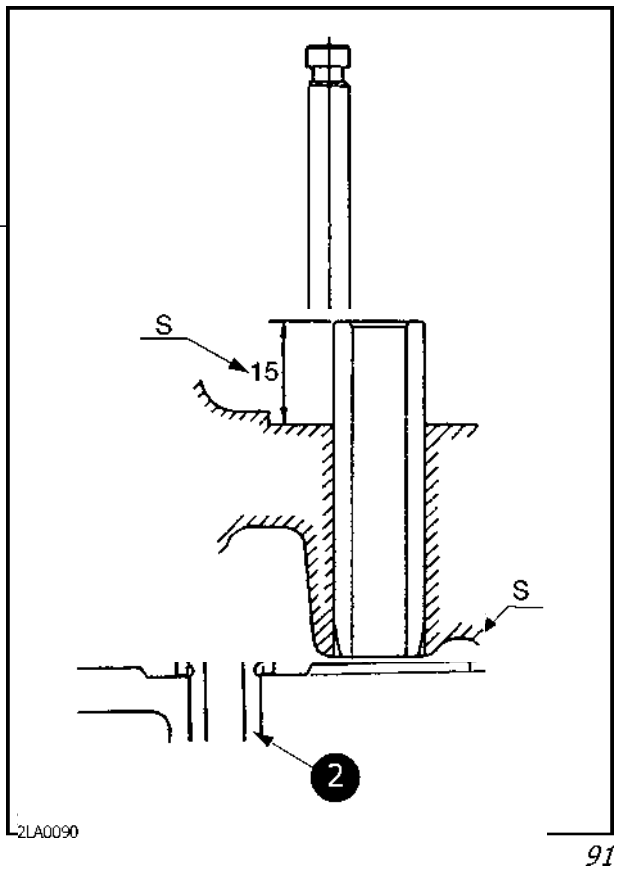

91

^E37 **4.** Check the projection (S) of the valve guide. Compare the obtained results with the standard values given in the table on page 10.


Valve stem seal

Replacement frequency

- When the oil leaks are excessive.
- When the seal has been removed from the valve stem.
- When the intake valves are removed. **Precautions for installation.**

Make sure that the entire valve stem surface is smooth and apply a film of lubricating oil to the stem before remounting the valve.

93

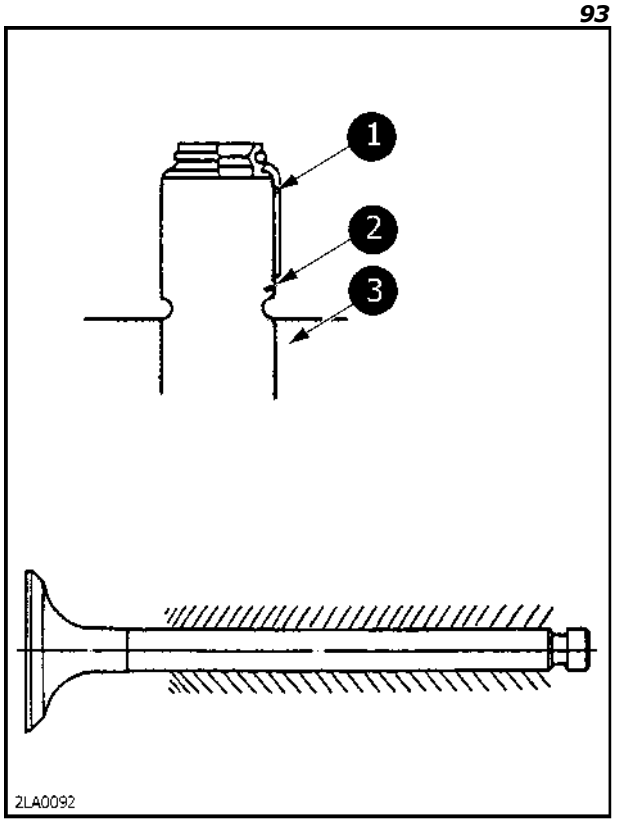

94


Key
1. Valve shank seal
2. Valve guide
3. Cylinder head

https://truckmanualshub.com/

Valve spring inspection


1. Check to make sure that the valve spring is not cracked or corroded.

2. Use a gauge (1) to measure the free length (length of the spring) and its slant (squareness of the coil side) using the square (1, fig. 96).

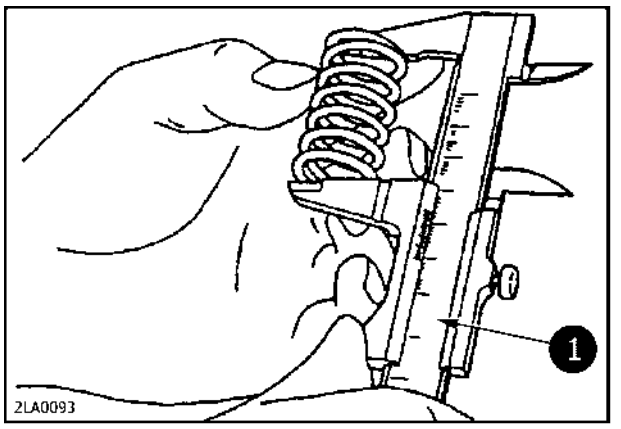


95

Compare the obtained results with the standard values given in the table on page 10.

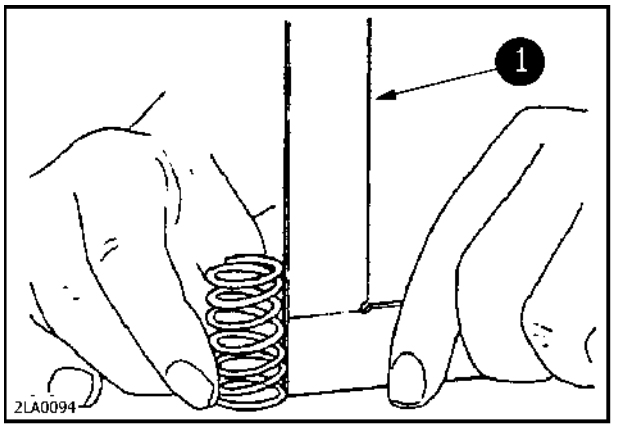

96

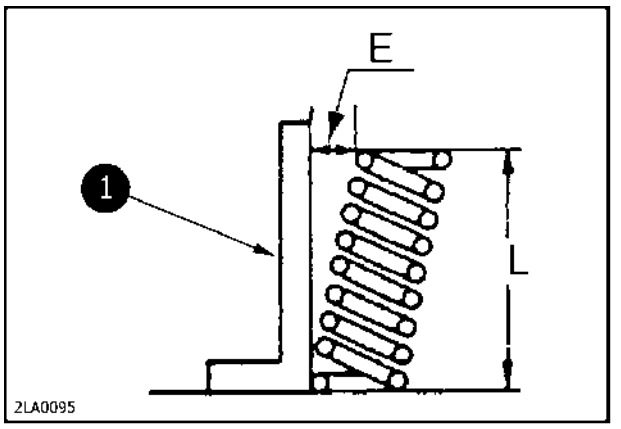

97

Key

1. Square
2. Slant error
3. Free length

Spring cap and cotter inspection

Check the contact between the inner surface of the spring cap and the circumference of the cotter, and the contact between the inner surface of the cotter and the race on the head of the valve stem. If the contact is irregular or the cotter has lowered, replace it with a new one.

https://truckmanualshub.com/

CRANKCASE AND CYLINDER LINER INSPECTIONS, MEASUREMENTS AND REPAIRS

Crankcase inspection


1. Check to make sure that there are no water or oil leaks or cracks in the crankcase. If you think that there may be cracks, check with a special colouring substance able to detect cracks that are not visible to the naked eye.

Thoroughly clean the parts before proceeding with the inspections.

Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.

2. Replace the crankcase if it is seriously or irrep- arably damaged.

3. Thoroughly clean all oil holes. Make sure that they are not clogged.

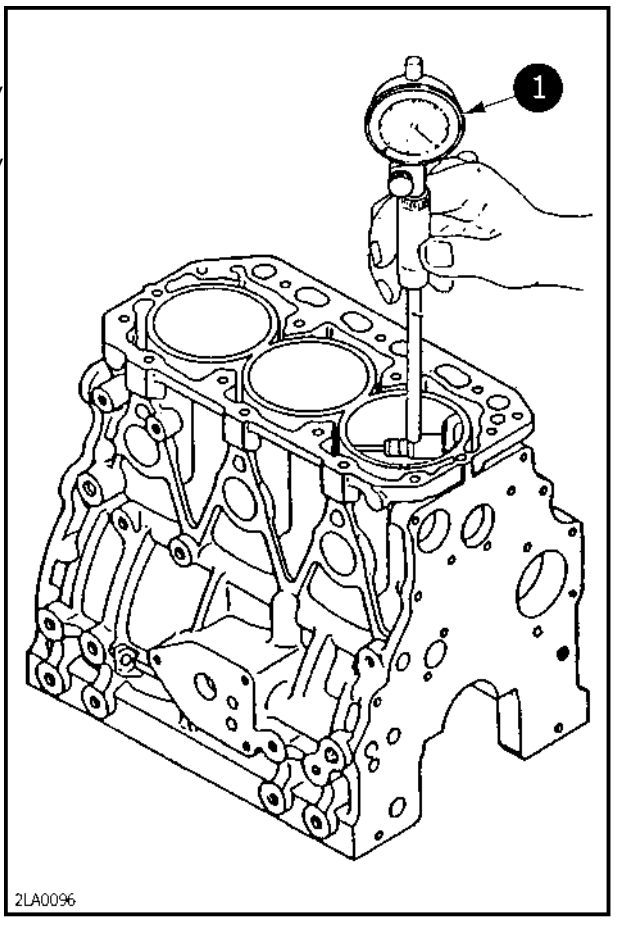


98

https://truckmanualshub.com/

Measurement of cylinder liner bore and warping

Measure the bore of each cylinder with a bore gauge (1, fig. 98). Measure the cylinder in point A, about 20 mm under the liner tip and in points B and C, at the same distance (AB = BC).

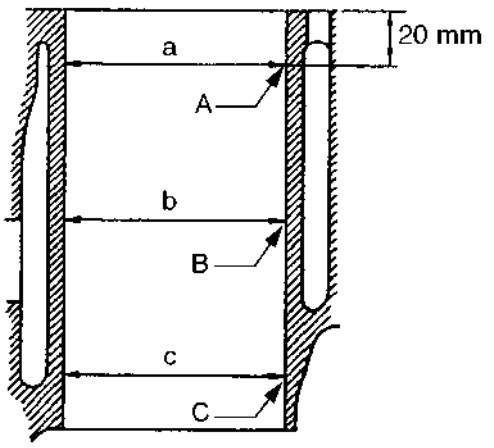


The measurements must be made in A, B and C along directions d_A and d_B.

Calculate the warp (roundness and cylindricity of each cylinder) using values measured in the follow- ing way:

- Roundness:
  Difference between the maximum and minimum bore values in the same radial section of each liner.
- Cylindricity
  Difference between the maximum and minimum bore values along the liner axis.

Lapping (lapping and reaming) must be carried out when the values measured exceed that limit.

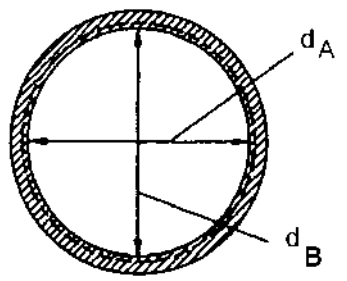

2LA0097


For oversized pistons and piston rings, see pages 9 and 10.

Compare the obtained results with the standard values given in the table on page 8.

Lapping

Lapping procedure


Lap or ream the cylinder in the case of irregular wear, defects or other types of damage. Slight and irregular wear, small cracks, etc., can be smoothed with a flexible fine-finishing brush (1) mounted on an electric drill (2). If the wear is greater and more irregular, it is advisable to ream and then lap the cylinder. It is important to evaluate whether the cyl- inder can become perfectly round after lapping, reaming or both, and to bear the maximum wear degree in mind. Moreover, also carefully check out whether oversized piston rings and pistons can be used.

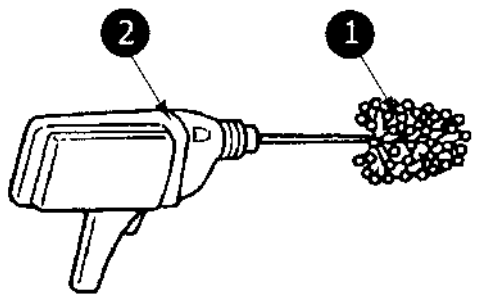

2LA0098

Use of the flexible fine-finishing brush

It is advisable to use a flexible fine-finishing brush for surfacing purposes.

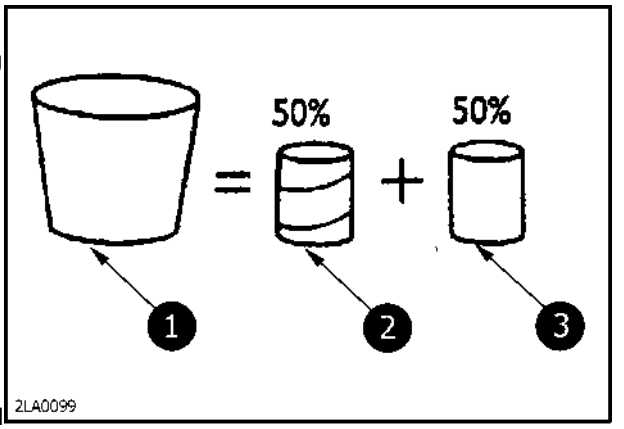


101

Tools required

Flexible brush for fine-finishing (1), electric drill and surfacing liquid (1, fig. 101) made from a mixture of 50% engine oil (2, fig. 101) and diesel fuel (3, fig. 101).

Instructions for use

1. Apply the surfacing liquid to the flexible fine finishing brush.
2. Start the brush turning and move it into the cylinder, working up and down for about 30 sec at an angle of 30 - 40°, as indicated by the cross-hatched area in the figure.
3. Remove the brush from the cylinder while it is still turning.

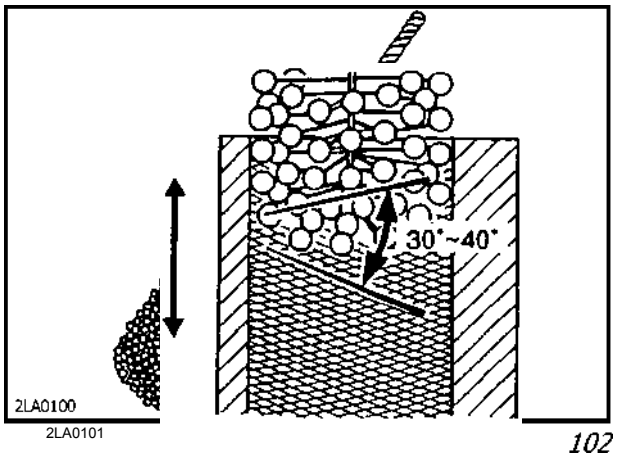

102

WARNING

Use the flexible fine-finishing brush at a speed of 300 - 1200 RPM. Use of the brush at a higher speed could be dangerous.

Never move the brush into the cylinder or take it out when the electric drill is off.

https://truckmanualshub.com/


ROCKER ARM INSPECTIONS, MEASUREMENTS AND REPAIRS

Measurement of the outer diameter of the rocker arm pin and inner diameter of the rocker arm

The assembly play is the difference between the inner diameter of the rocker arm (1) measured with a cylinder gauge and the outer diameter of the rocker arm pin (1, fig. 105), measured with a micrometer. When the assembly play is near to its limit, the pin and rocker arm must be replaced. Compare the obtained measuring results with the standard values given in the table on page 11.

Thoroughly clean the parts before proceeding with the inspections.


Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.

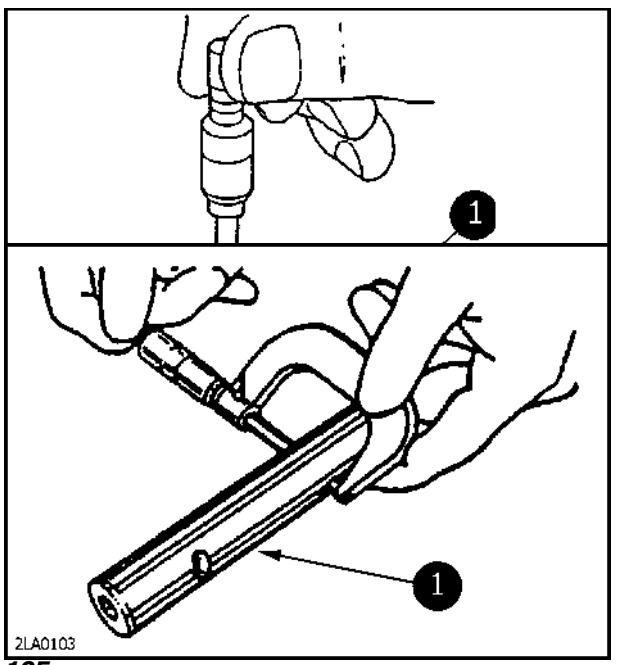


Tappet rod curve inspection, measurement of the outer diameter of the tappets and inspection of the contacting surfaces

Place the tappet rod on a surface plate and, using a thickness gauge (1) as shown in the figure, meas- ure the distance between the rod and the surface itself. Also measure the outer diameter of the tappets (1, fig. 107) with a micrometer.

Compare the obtained measuring results with the standard values given in the table on page 11.

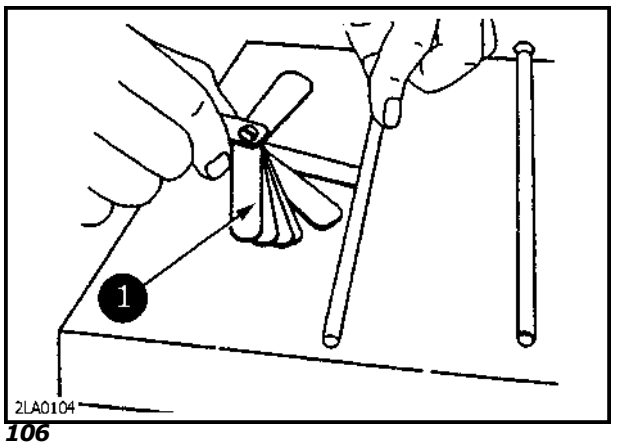

106

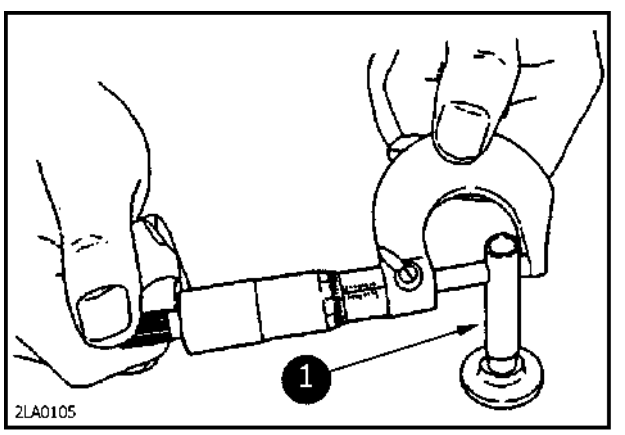


107

Other inspections
Rocker arm pin spring

Check to make sure that there are no traces of corrosion or wear on the rocker arm pin spring. Replace it if this is the case.

Wear on the rocker arm pad (area A) and intake/exhaust valve cap.


Check the contact surfaces of the intake/exhaust valve rocker arm pad. Replace them if one of the two shows signs of abnormal wear or flaking.

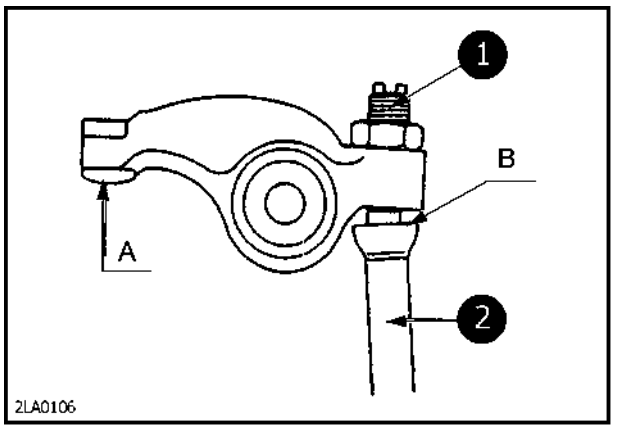

108

https://truckmanualshub.com/

Check the point in which the valve play adjuster screw (1, fig. 108) touches the tappet rod in area B. Replace the rod (2, fig. 108) or the adjuster screw (1, fig. 108) if it appears worn or flaking (see fig. 109).

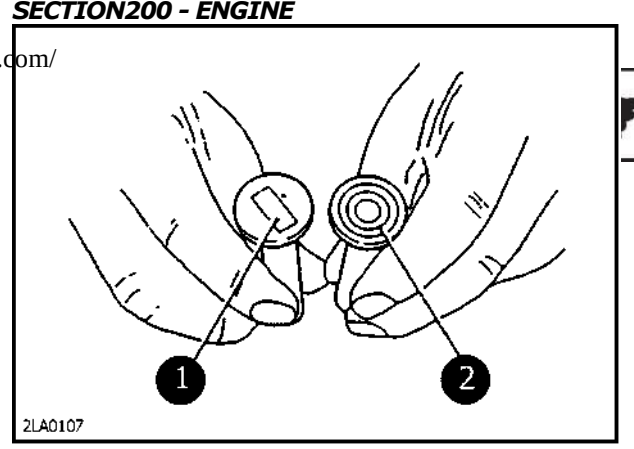

109

Valve wear:

1. Irregular contact surface.
2. Regular contact surface.

PISTON AND PISTON RING INSPECTIONS, MEASUREMENTS AND REPAIRS

Thoroughly clean the parts before proceeding with the inspections.

Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.

Piston inspection

1. Remove the carbon deposits from the head and from the combustion surface of the piston to prevent it from being damaged. Check to make sure that there are no traces or breakage or other damage.


2. Check the circumference and housing of the piston ring and replace it if it is worn or damaged.

Measurement of the outer piston diameter

Measure the outer diameter of the piston (1) in a vertical direction towards the pin hole and at dis- tance

d = 22 - 25 mm


from the bottom end of the piston.

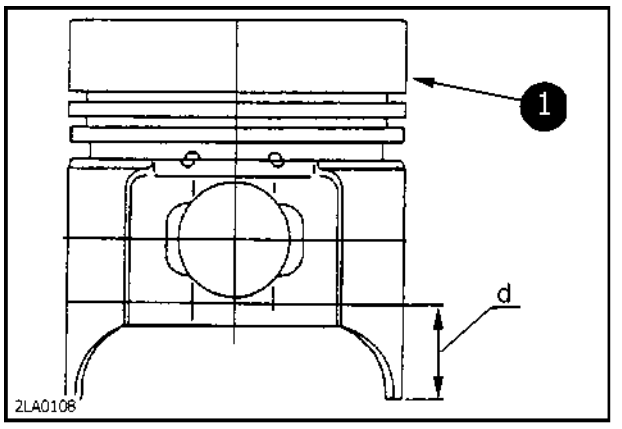

110

https://truckmanualshub.com/

Compare the obtained measuring results with the standard values given in the table on page 11.

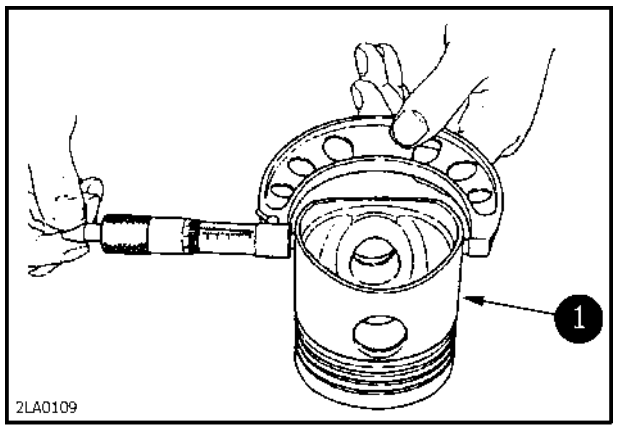

111

Shape of the piston rings


To identify the piston rings, refer to fig. 112, in which:

Upper piston ring.

2. 2nd piston ring (the same for all models)
3. Oil scraper ring (the same for all models)

The section of the upper piston ring is given in the following table:

Upper piston ring (all models)	[redacted]

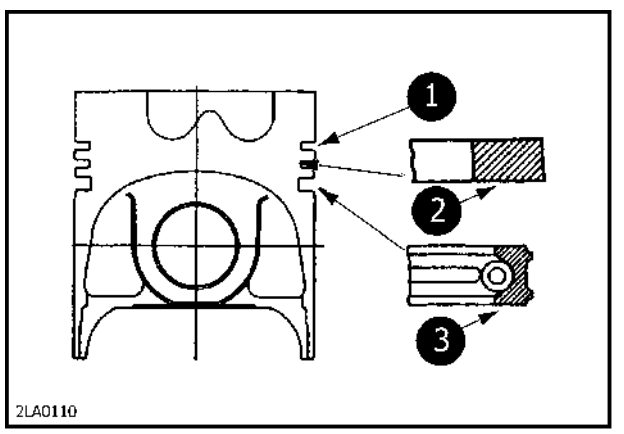


112

Measurement of the groove width of the piston ring, the piston ring and the distance between ends

1. To measure the width of the groove, first measure the width (L) of the piston ring (2, fig. 114), then fit it into the carefully cleaned groove. Insert a thickness gauge (3, fig. 114) between the piston ring and groove to measure the distance.
2. Calculate the width of the piston ring groove, adding the width of the ring to the measured side play G.

Compare the obtained measuring results with the standard values given in the table on page 13.

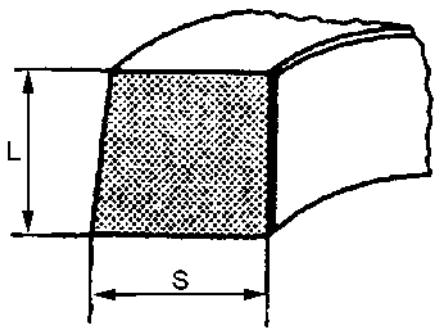


113

https://truckmanualshub.com/

2LA0112

114

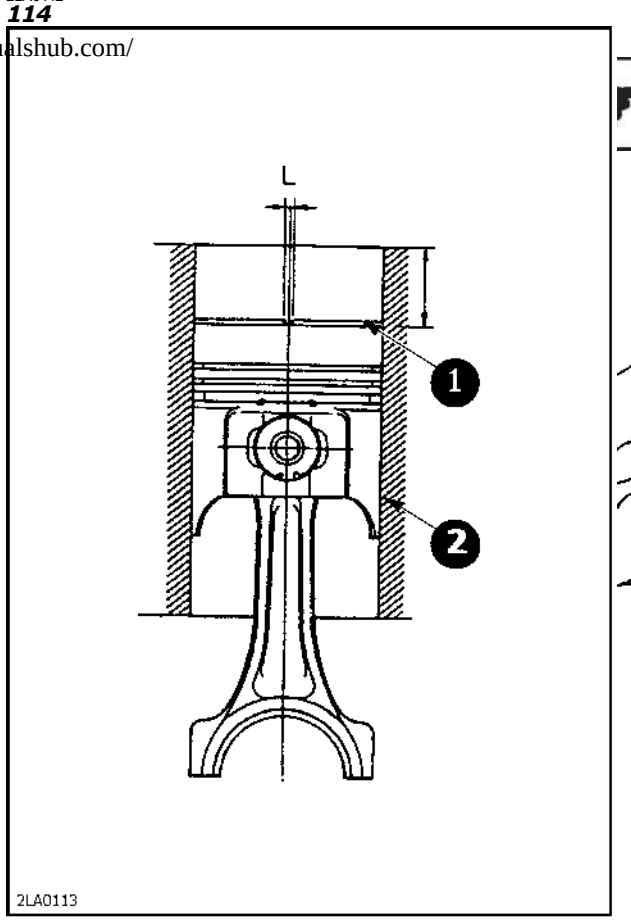

115




To measure the distance between the ends, push the piston ring (1) into the cylinder liner (2) using the piston head, and insert a thickness gauge into the gap. If the cylinder liner is worn, measure the distance (L) between the ends after having pushed the piston ring in the point in which the cylinder liner is less worn (about 30 mm from the bottom end of the cylinder liner).
Compare the obtained measuring results with the standard values given in the table on pages 13 and 14.

https://truckmanualshub.com/


Piston ring assembly

Use tool **004 MT MIS** and insert the piston ring into the groove, with the manufacturer's mark (1) near the piston ring joint pointing towards the combustion chamber side. When the spring ring has been fitted, make sure that it is free to move.

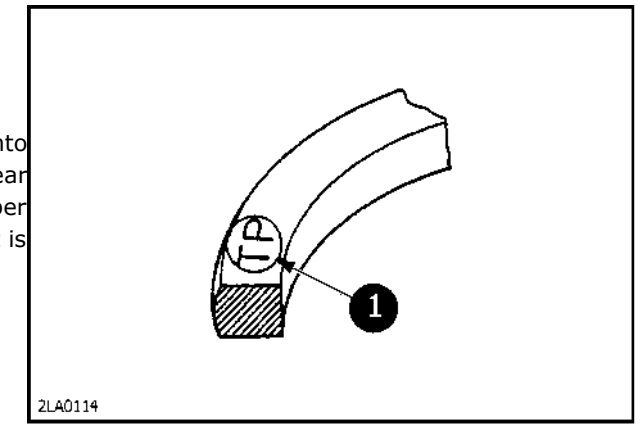

116

2. Stagger the gaps between the ends of the piston rings at intervals of 120°, making sure that they are not aligned along the piston. Lubricate the circumference of the piston with oil.

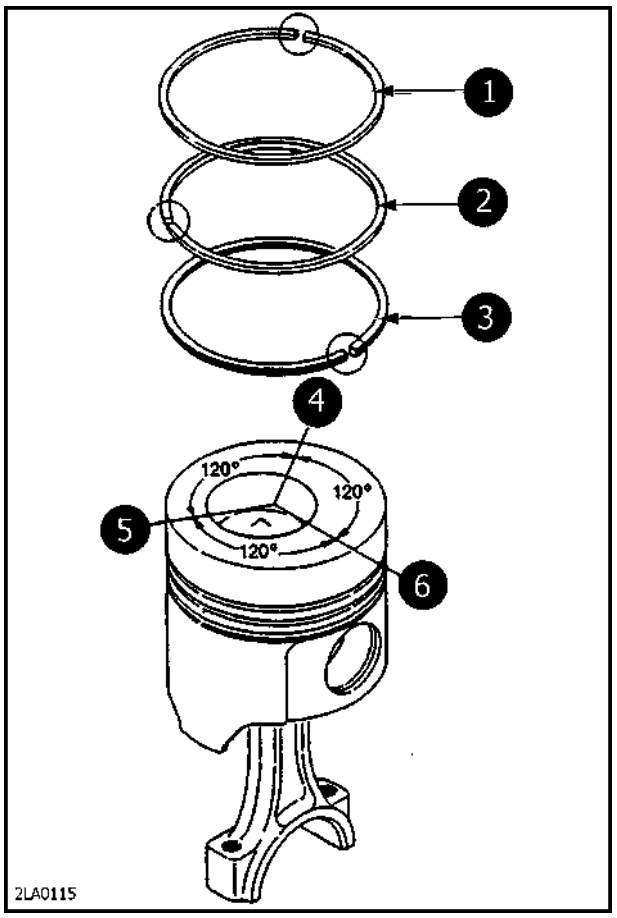

Key
1. Upper piston ring.
2. 2nd piston ring.
3. Oil scraper ring
4. Position of the upper piston ring joint.
5. Position of 2nd piston ring joint.
6. Position of the oil scraper ring joint.


Measurement of the outer diameter of the pin and relative hole

1. Measure the outer diameter of the pin (1) and hole in the points indicated by the arrow. Compare the obtained measuring results with the standard values given in the table on page 12.

2. Replace the pin if it is too worn.

https://truckmanualshub.com/

Lubricate the pin (1) with oil before fitting it into the piston. Now position the piston ring (2) in the piston housing.

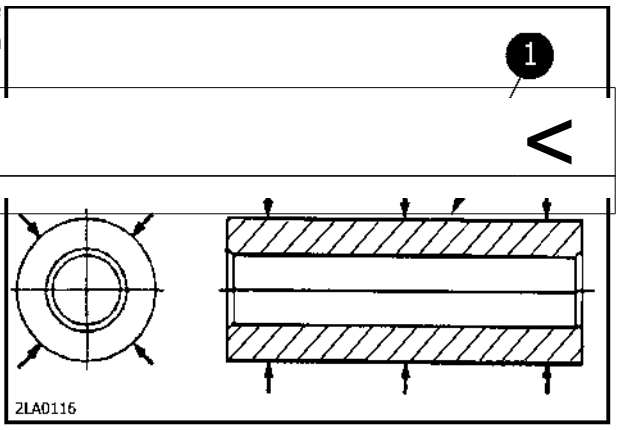

118

CONNECTION ROD INSPECTIONS, MEASUREMENTS AND REPAIRS

Visual inspection

Thoroughly clean the parts before proceeding with the any of the operations.


Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.

Check the area near to the edge in the chamfered part and the shaped part between the big end and small end of the connecting rod. Also check the area near the oil hole of the small end bush to make sure that there are no signs of cracks, warp- ing or discolouring.

Twist and parallelism measurement

Measure the twist (T) and parallelism (P) by using a connecting rod aligner (2).

Compare the obtained measuring results with the standard values given in the table on page 14.

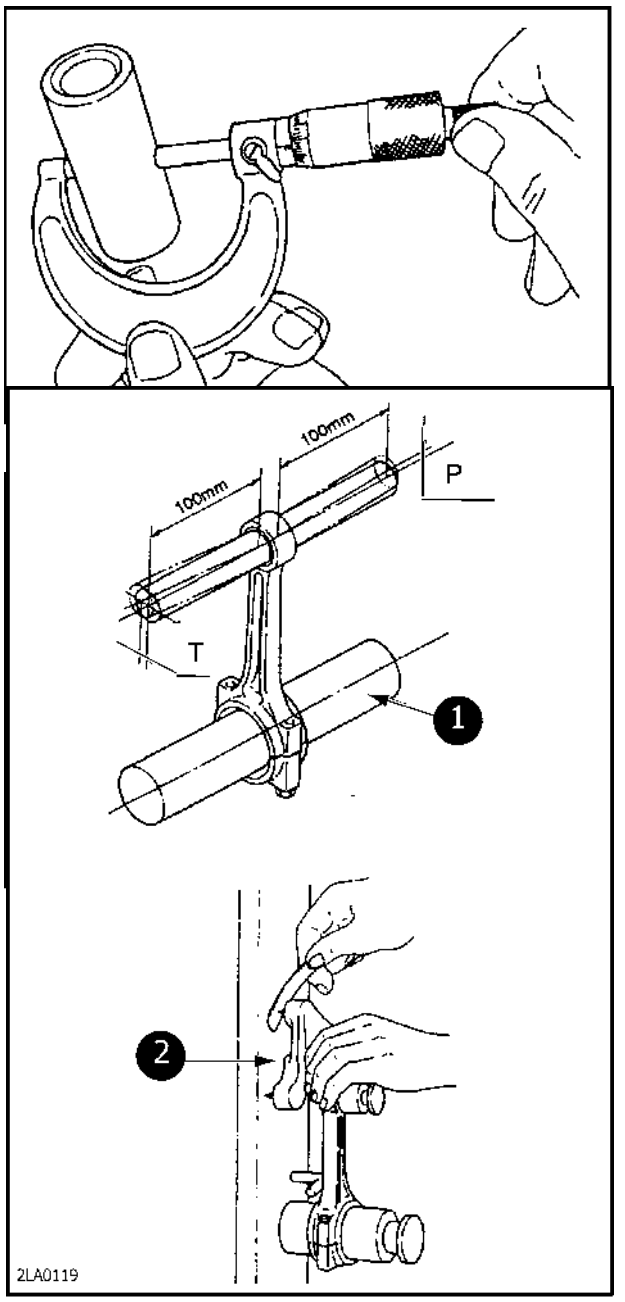

121

https://truckmanualshub.com/

2.


ırement of the bush and connecting rod pin

1. To measure the connecting rod pin and bush gap, measure the inner diameter of the bearing and the outer diameter of the connecting rod pin, then calculate the difference between the two values.

To measure the inner diameter of the connecting rod pin bearing, mount this latter on the connecting rod and tighten the bolt to the prescribed torque value, i.e.

44.1 - 54.0 Nm

checking to make sure that each of the bearings is mounted in the right position. After this, measure the dimension with the gauge (1).

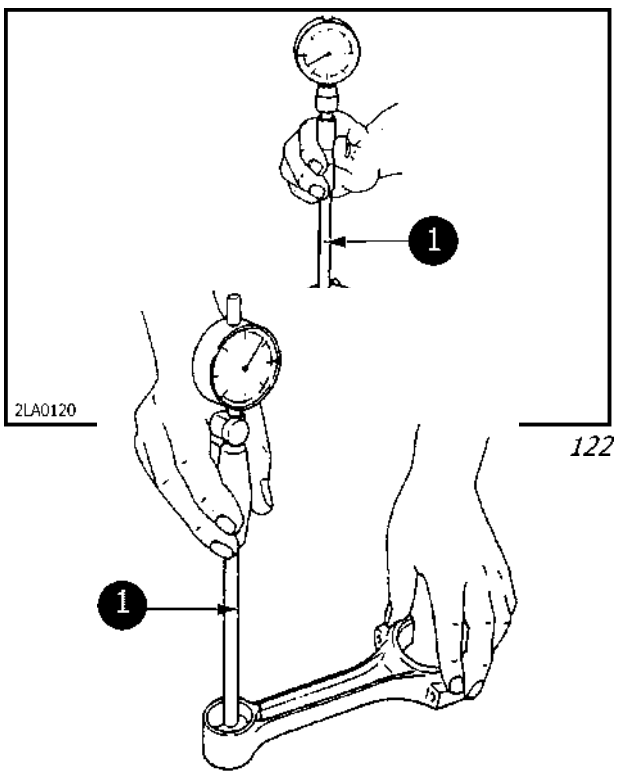

122

Compare the obtained measuring results with the standard values given in the table on page 14.
Replace the connecting rod pin bearing if the gap measured is near to the wear limit or exceeds it. If the bearing is irregularly or excessively worn, grind the connecting rod pin and use an oversized bearing.

Measure the play between the pin bush and the pin itself


Use a cylinder gauge (1) to measure the play. Measure the inner diameter of the pin bush and the outer diameter of the pin and note down the difference between the two values.
Compare the obtained measuring results with the standard values given in the table on page 14.

2LA0121

https://truckmanualshub.com/

Checking the connecting rod pin bearing contact


Make a mark with blue ink on the upper surface of the connecting rod pin bearing (1). Fit the bearing in the connecting rod and tighten the bolt on to the drive shaft to the indicated torque value (see page 15) to check the bearing contact. The connecting rod pin bearing contact is acceptable if the blue coloured contact surface occupies 75% of the total surface or more.

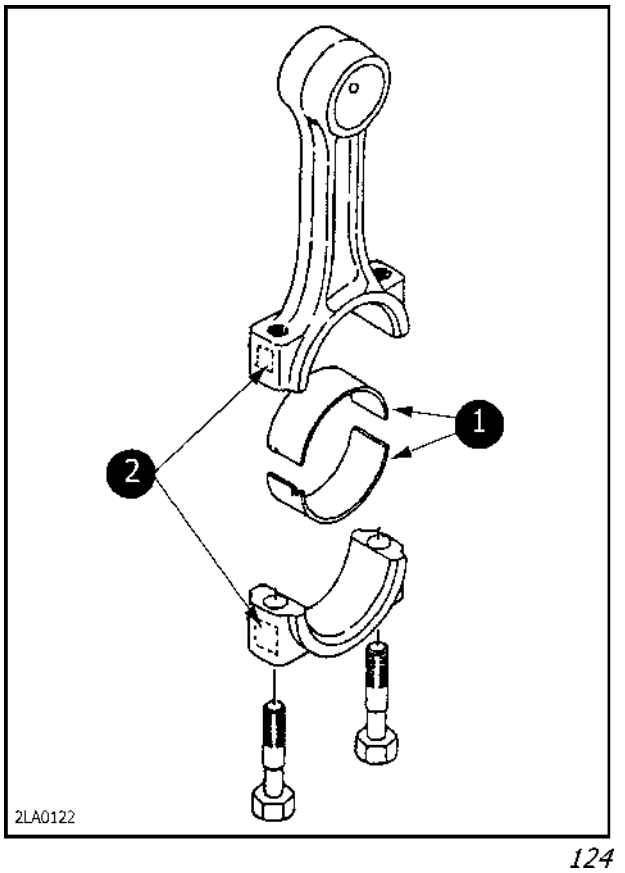

124

Mounting the piston and connecting rod

Mount the piston with the connecting rod, with the mark (2, fig. 124) punched on the big end pointing towards the fuel injection pump. Mount the piston so that the combustion chamber cavity (and the D.I. mark) are on the injection pump (L.P.) side, viewed from above.

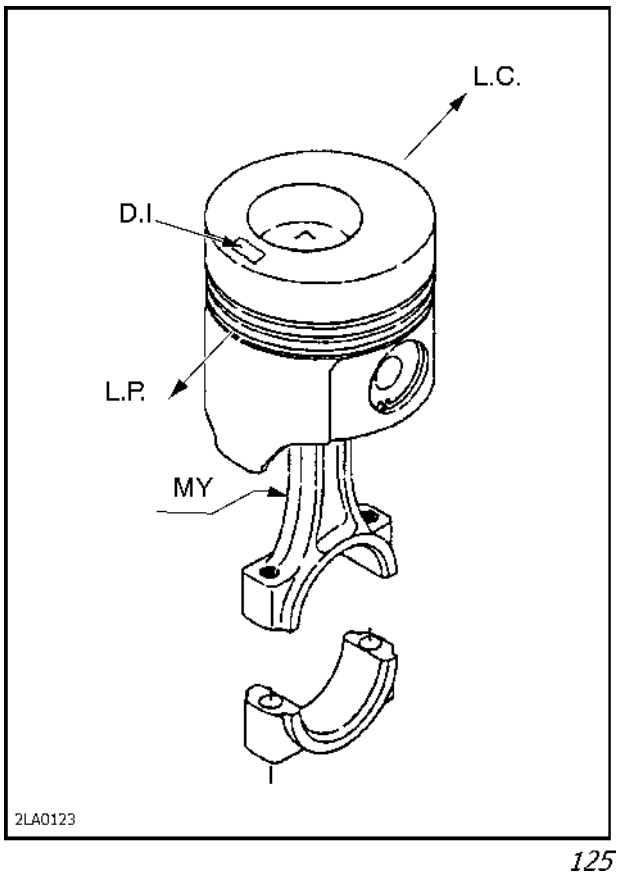


125

Key
L.C. = Camshaft side
L. P. = Injection pump side
M.Y. = Yanmar trademark
D.I. = Code

https://truckmanualshub.com/

Connecting rod side play

1. After having mounted the connecting rod on the drive shaft (1), tighten the connecting rod cap fixing bolts to the indicated torque value (see page 14).
2. Measure the side play by inserting a thickness gauge (2).
   Compare the obtained measuring results with the standard values given in the table on page 12.
3. Replace the bearing of the connecting rod if the value is higher than normal.

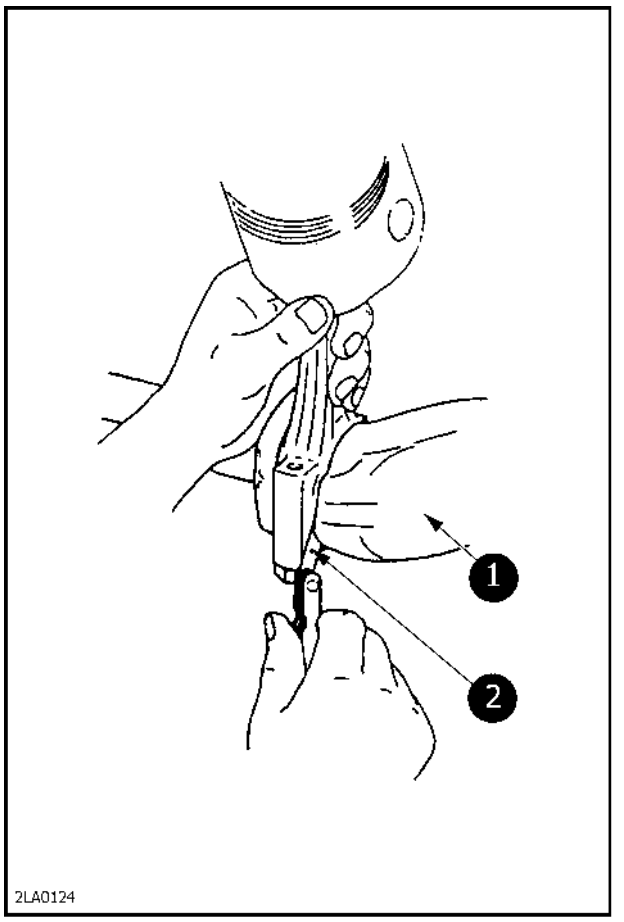

CAMSHAFT INSPECTIONS, MEASUREMENTS AND REPAIRS

Camshaft float

Thoroughly clean the parts before proceeding with the any of the operations.

Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.


1. before removing the camshaft, measure its float (4) by placing a comparator against the gear (1).
   Compare the obtained measuring results with the standard values given in the table on page 15.
2. Replace the thrust shim (2) if the measured value exceeds the tolerated limit.

https://truckmanualshub.com/


Visual inspection of the camshaft

Check the tappet contact surface on the cam. Make sure that the bushes are not worn or seized and that the camshaft gear (1) is not damaged.

2LA0125

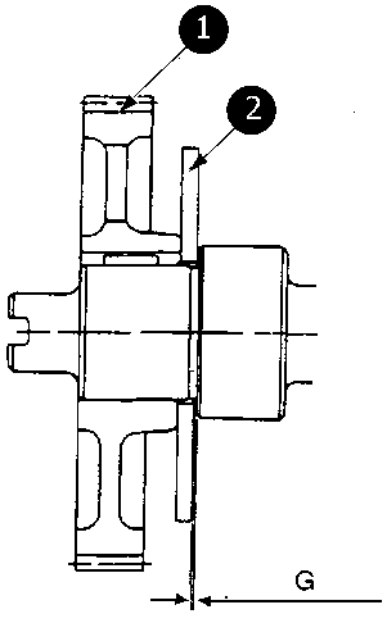

https://truckmanualshub.com/

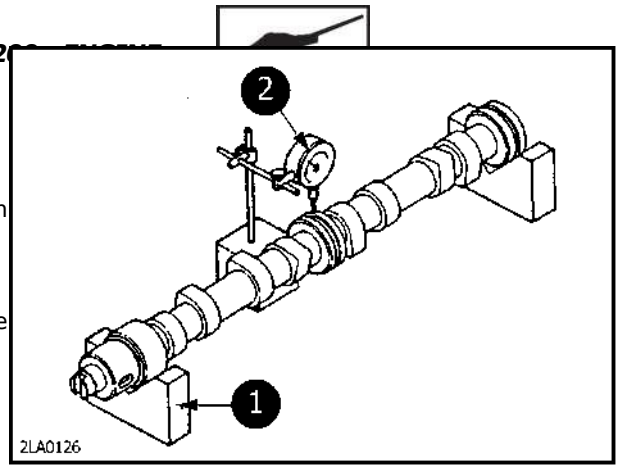

Camshaft incurvation measurement


1. Support the camshaft with V-blocks (1).
2. Using a comparator (2), measure the eccentric- ity of the main journal in the center of the camshaft, by allowing this shaft to turn.
3. Consider 50% of the measured eccentricity as incurvation value.

Compare the obtained measuring results with the standard values given in the table on page 15.


1. Intake/exhaust cam height measurement

Make the measurements by positioning the micrometer (1) as shown in the figure.

2. Compare the obtained measuring results with the standard values given in the following table.



		MISTRAL AMERICA 40-45-50	
		Value nominal (mm)	Value at limit of wear (mm)
Cam height (H)	Intake cam	38.635 - 38.765	38.40
	Exhaust cam	38.635 - 38.765	38.40

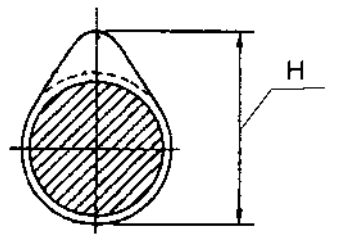

2LA0127


https://truckmanualshub.com/

Measurement of the play between the camshaft pins and their relative bushes

1. Measure the outer diameter of the camshaft pins with a micrometer, in the positions shown in figure 130.
2. Measure the inner diameter of the bush with a hole gauge after having inserted it into the engine block.
3. Calculate the play according to the distance between the inner diameter of the bush and the outer diameter of the pin.

Compare the obtained measuring results with the standard values given in the table on page 15.

Key
L.V = Flywheel side L.I. = Gear side

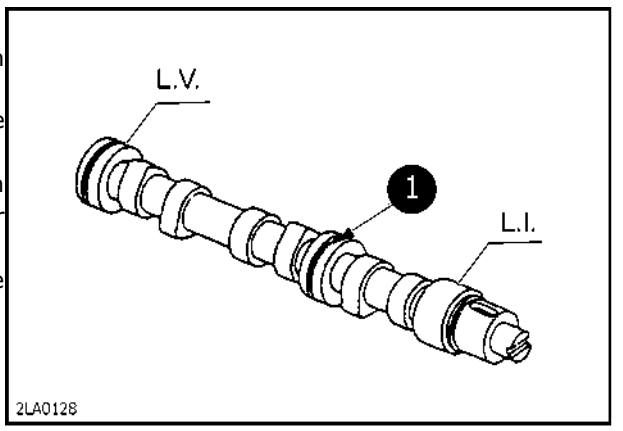

130


DRIVE SHAFTINSPECTIONS, MEASUREMENTS AND REPAIRS
Drive shaft float

1. Place a comparator against the end of the shaft before removing the actual drive shaft and at the moment of assembly.
2. Force the drive shaft on both sides in an axial direction to measure the play. Alternatively, insert a thickness gauge directly between the bearing ring on the support and the shaft itself, in order to measure the float.

Thoroughly clean the parts before proceeding with the any of the operations.

Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.

If the value exceeds the limit one, i.e.:
0.090 - 0.271 mm replace the bearing ring.

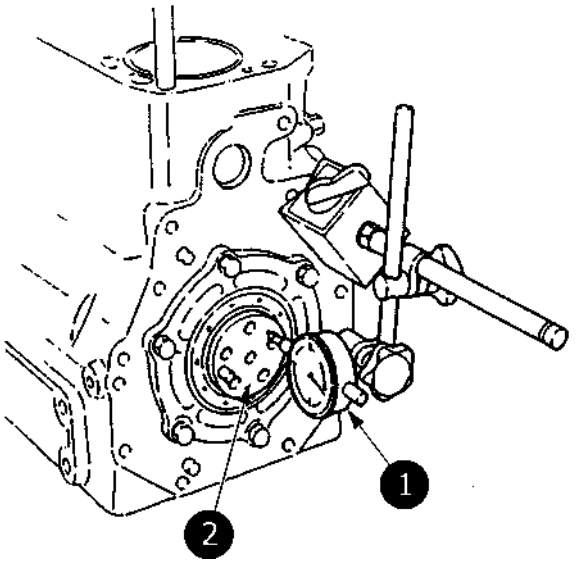


131

https://truckmanualshub.com/

Checking the colour of the drive shaft

1. Clean the drive shaft and check it with a colouring substance to make sure that there are no cracks too small to be seen by the naked eye, or with a Magnaflux system (magnetic crack detector).
2. Replace the drive shaft if it is cracked or seriously damaged. Repair or grind the shaft if it is only slightly damaged.

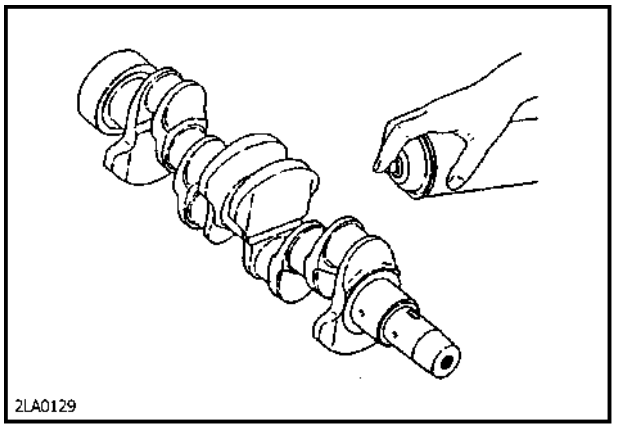

132


Bearing inspection

Make sure that the bearings do not show signs of flaking, fusion or seizing and check the condition of the contact surface. Replace the bearings if they are defective.

Drive shaft incurvation

1. Place V-blocks (1) and (2) at both ends of the main journals.
2. Measure the eccentricity of the central main bearing with a comparator while turning the drive shaft, and make sure that its incurvation value (I) does not exceed the tolerated limit value, i.e.:

0.02 mm

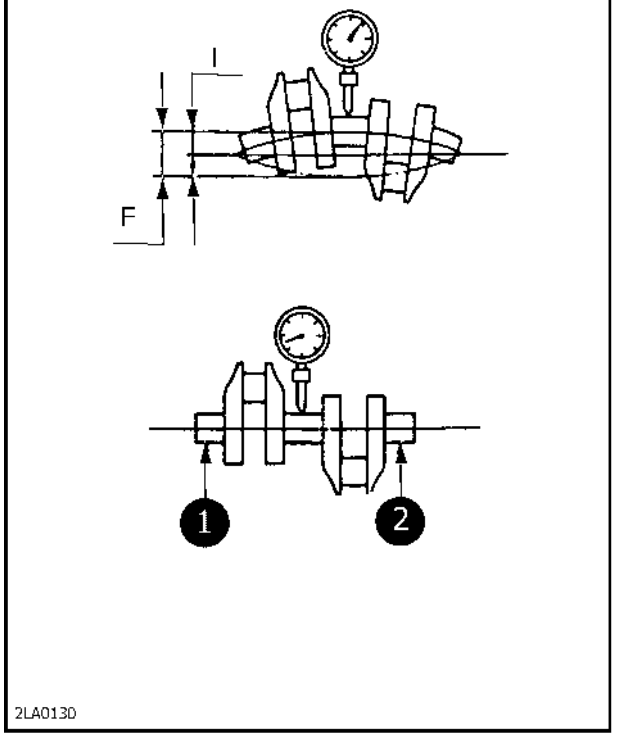

133

https://truckmanualshub.com/

Measurement of the connecting rod pin and main bearing


1. Using a micrometer (1, Fig. 135), measure the outer diameter, the roundness and taper of the connecting rod pin and that of the main jour- nal. Check in the points shown by the arrows in figure 134.


Compare the obtained measuring results with the standard values given in the tables on pages 14 and 15.

2. The pins can be ground if the irregular wear or roundness exceed the tolerated limit, but the value of the outer diameter is within the limits.

3. Replace the drive shaft if it is not possible to return within the tolerated values even after grinding.

A 0.25 mm oversized bearing is available for the connecting rod pin.

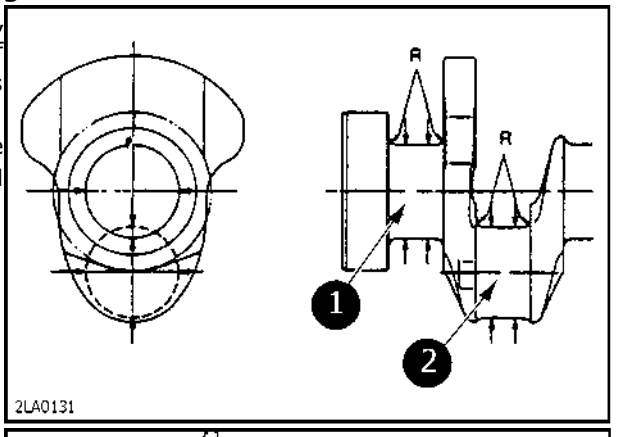


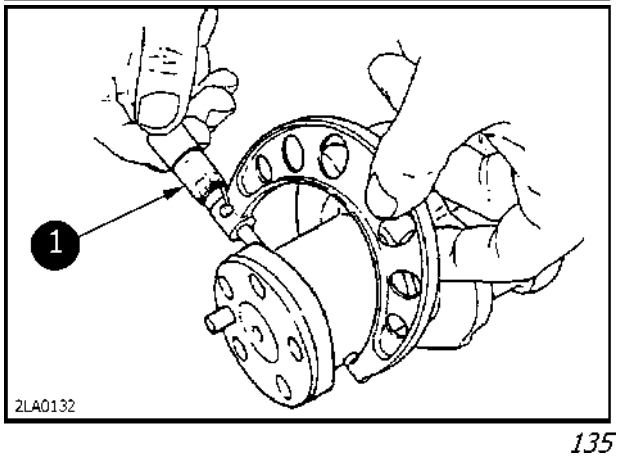

https://truckmanualshub.com/

Precautions for bearing assembly

- Remember that the lower half bearing of the main bearing (cap side) does not have an oil groove.
- Consider that the upper half bearing of the main bearing (cylinder block side) has an oil groove.
- Check the alignment order in the cylinder block.
- Position the "FW" mark on the main bearing cap towards the flywheel side.
- Position the thrust shims towards the flywheel.

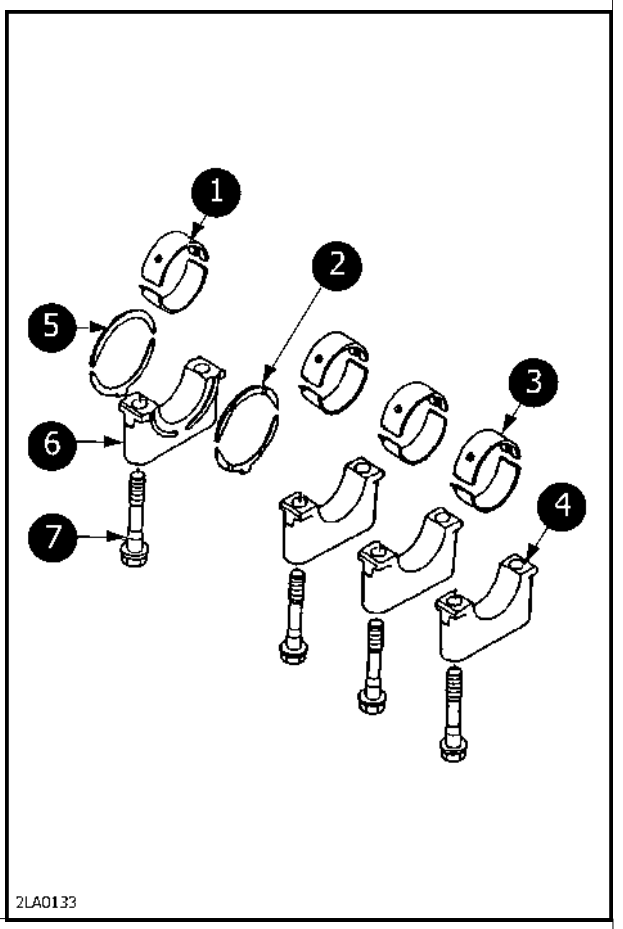

Key
1. Main bearings (basic).
2. Thrust shims (gear side).
3. Main bearings.
4. Main bearing cap.
5. Thrust shims (flywheel side).
6. Main bearing cap (basic).
7. Main bearing bolt.

GEAR INSPECTIONS, MEASUREMENTS AND REPAIRS

Gear inspections

Thoroughly clean the parts before proceeding with the any of the operations.

Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.


Check the gears and replace them if their teeth are damaged, worn or cracked.

Play measurement

Appy a comparator on the pitch circumference of the gear and measure the play.
Compare the obtained measuring results with the standard values given in the table on page 15.

Checking and measuring the intermediate gear shaft and the gear itself

1. Measure the inner diameter of the bush (2) and the outer diameter of the intermediate gear (1) shaft (3).
Compare the obtained measuring results with the standard values given in the following table.

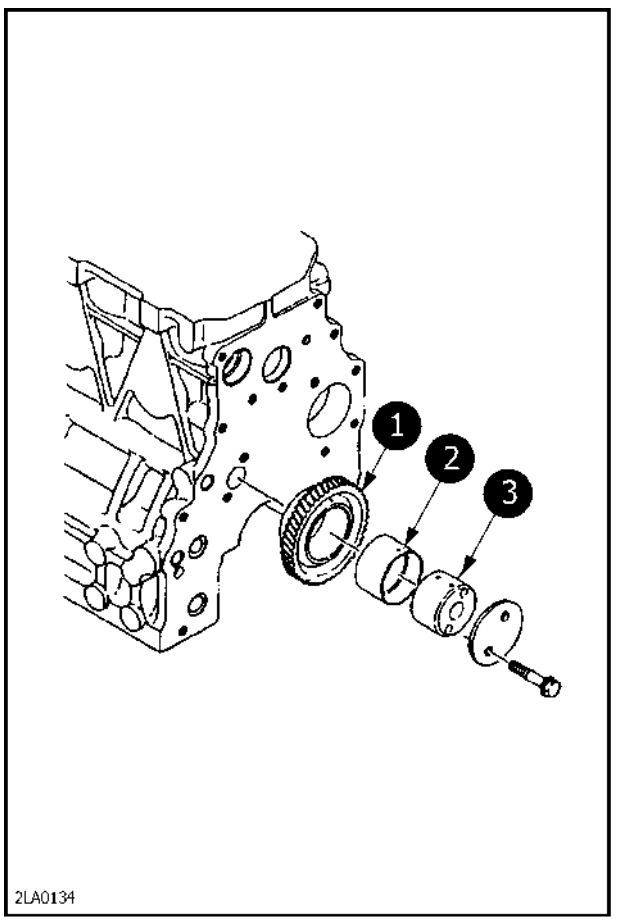

https://truckmanualshub.com/

		MISTRAL AMERICA 40-45-50	
		Value nominal (mm)	Value at limit of wear (mm)
Intermediate gear	Outer shaft diameter	45.950 - 45.975	45.93
	Inner bush diameter	46.000 - 46.025	46.08
	Assembly play	0.025 - 0.075	0.115

2.

Replace the bush or the gear shaft if the assembly play exceeds the wear limit.


https://truckmanualshub.com/

3. Check to make sure that the oil hole in the intermediate gear shaft and in the bush is a through hole.

Gear train

After all the gears have been mounted, check to make sure that alignment marks A, B and C of the intermediate gear are aligned with those of the injection pump, camshaft and drive shaft gears.

1. Injection pump gear.
2. Camshaft gear
3. Power take-off (on request)
4. Drive shaft gear.
5. Lubricating oil pump gear.
6. Intermediate gear.
7. Rotation direction.

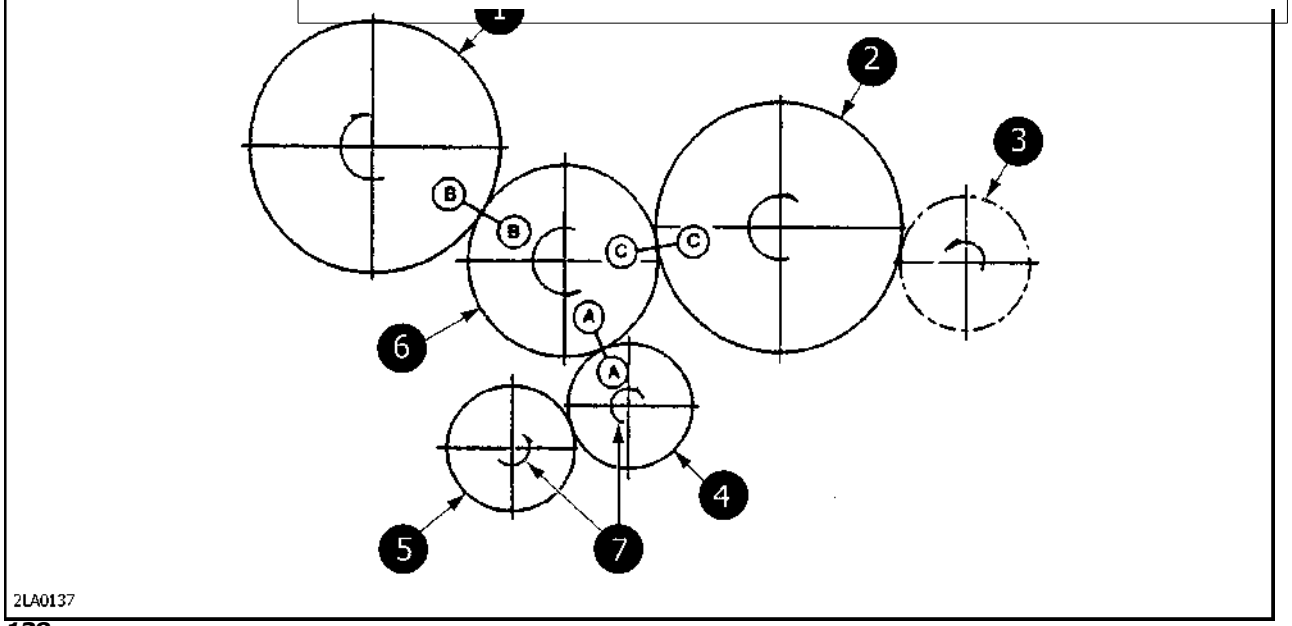

OIL PUMP INSPECTIONS, MEASUREMENTS AND REPAIRS

Play between the external rotor and pump casing


Thoroughly clean the parts before proceeding with the any of the operations.

Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.


Insert a thickness gauge (3) between the external rotor (1) and the pump casing (2) and measure the play.

Compare the obtained measuring results with the standard values given below:

Nominal play:	0.10 - 0.16 mm
Play at wear limit:	0.25 mm

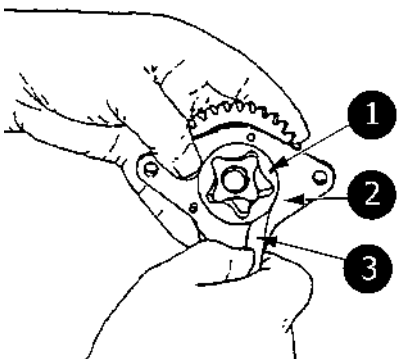

139

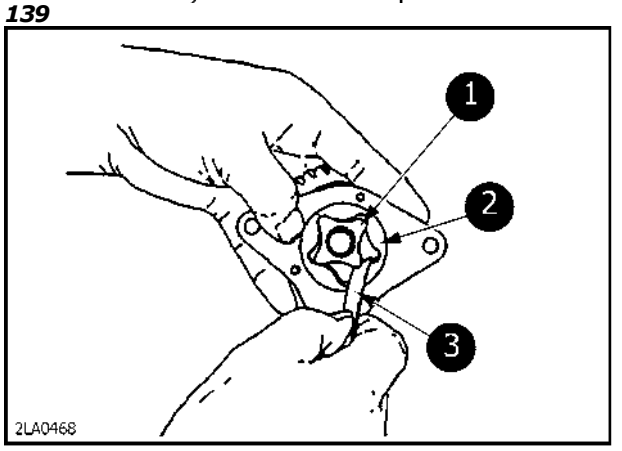

140


Play between inner and outer rotor

Insert a thickness gauge (3) between the upper part of the inner rotor tooth (1) and the upper part of

https://truckmanualshub.com/
the outer rotor tooth (2) and measure the play. Compare the obtained measuring results with the standard values given below:

Play at wear limit: 0.15 mm

https://truckmanualshub.com/

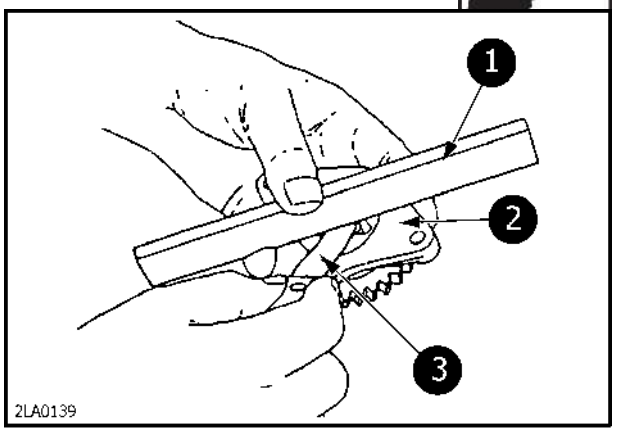

141

Float between the pump casing and the inner and outer rotor

Place a straightedge (1) against the end of the pump (2) and insert a thickness gauge (3) between this and the rotors in order to measure the float. Compare the obtained measuring results with the standard values given below:

Nominał play:	0.03 - 0.09 mm
Play at wear limit:	0.15 mm

Play between the rotor shaft and housing hole

Measure the outer diameter of the rotor shaft and the diameter of the housing hole and calculate the difference between the hole diameter and shaft diameter.

Compare the obtained measuring results with the standard values given below:

Nominal play:	0.013 - 0.043 mm
Play at wear limit:	0.2 mm

If the results of the play measurements described in points 1, 2, 3 and 4 exceed the wear limit value, the affected parts must be replaced.

Miscellaneous


- Check the driving gear of the rotor shaft and replace the entire assembly if it is slackened or turns in a misaligned way.
- Push the plunger of the oil pressure governor valve through the housing hole and replace the entire assembly if the plunger fails to return owing to a broken spring, etc. (Only for engines equipped with oil heat exchanger).
- Check that the rotor shaft turns in a smooth and regular way when the driving gear is oper- ated.

--- DANGER

YANMA

Do not use matches, cigarette lighters or torches as a light source on the machine since it contains inflammable fluids.

1. Disconnect the fuel return hose (1) from the injection pump.

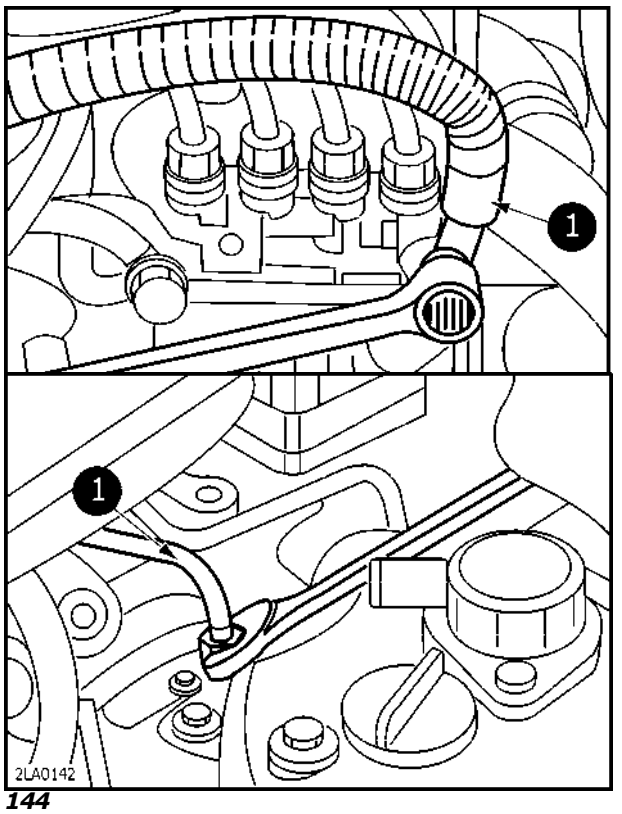

144

How to bleed air from the fuel Circuit

2. Fill the system by operating the lever (1) on the pump casing by hand.
Make sure that fuel flows from the pump return.

https://truckmanualshub.com/

3. Disconnect the fuel hose (1) from one of the injectors, operating as indicated in the figure.

4. Operate the starter motor and make sure that the jet of fuel from the injector is adequate and constant.
5. Connect the fix the hose (1).
6. Connect and fix the fuel return hose (1, fig. 142).

https://truckmanualshub.com/


INJECTION PUMP - OVERHAUL Demounting

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Proceed as follows:


1. Unscrew the fix fixing screws (2) and remove the lower cover (3) of the injection pump (1) to drain the lubricating oil from it.
2. Overturn the injection pump to drain off the diesel fuel.

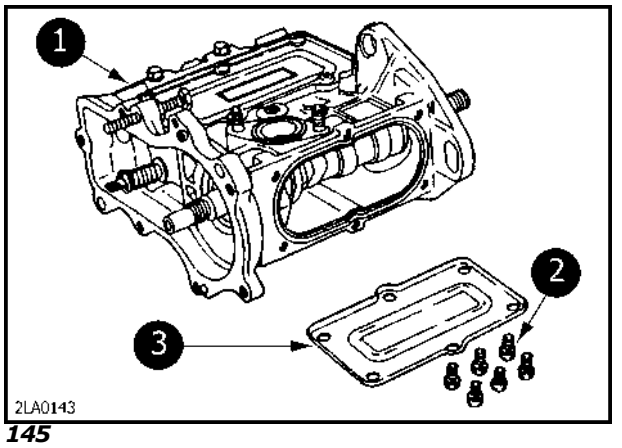

145


3. Operating as indicated in the figure, remove the centrifugal weights from the regulator using the puller (1) **008 MT MIS** (mod. MIS- TRAL AMERICA 40) or **009 MT MIS** (models MISTRAL AMERICA 45 and 50) (1).

To separate the regulator unit from the injection pump, see page 110.

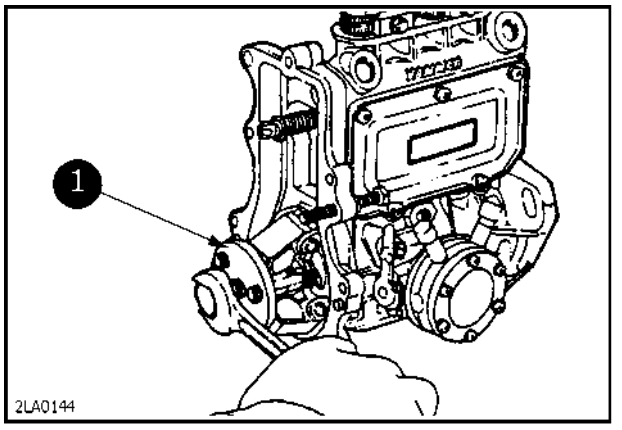

146


4. Remove the fuel pump (1) by loosening the fixing nuts, as shown in the figure.

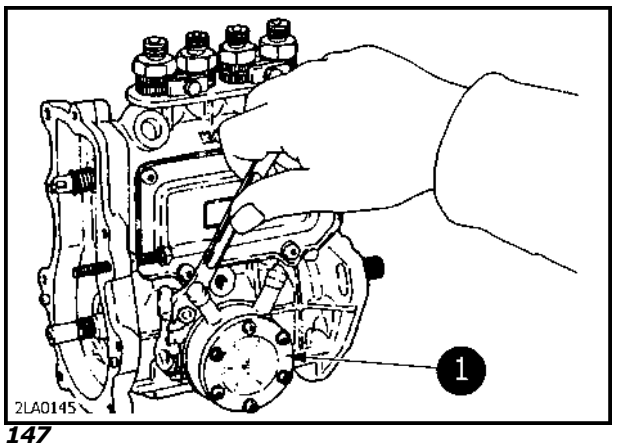

147


https://truckmanualshub.com/

5. Unscrew the five fixing screws (2) and remove the side cover (1) from the injection pump.

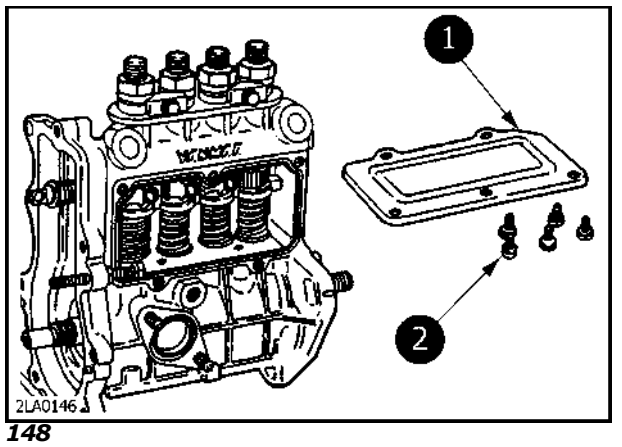


148

6. Using a wrench (1) as shown in the figure, turn the camshaft (2) of the injection pump while allowing the plunger guide to cover its maximum travel. Fit the tappet bearing bracket **010 MT MIS** (3) between the lower plunger spring retainer and the pump casing. Do this for each plunger.

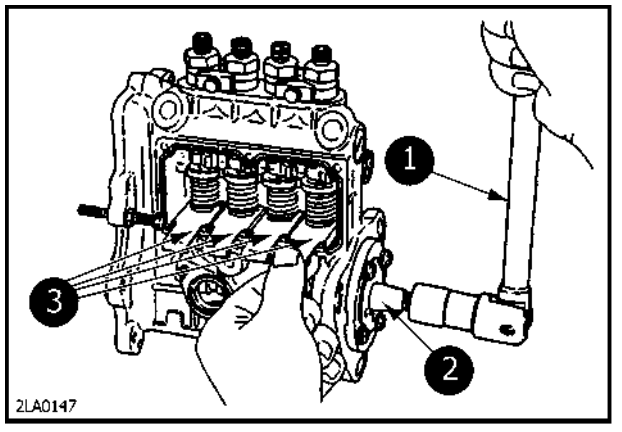

149

The specific tool **010 MT MIS** is shown in the figure on the right.

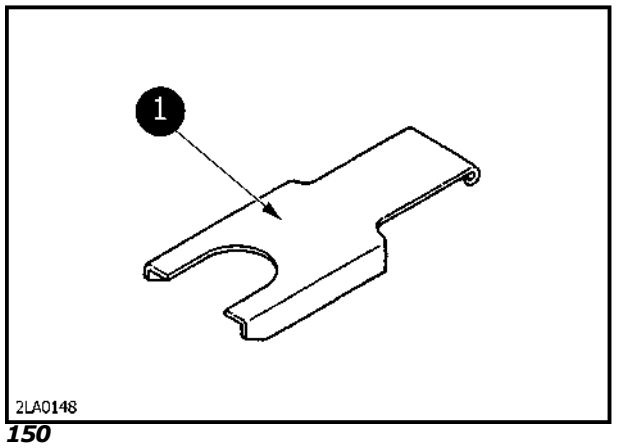


150

7. Remove the tab (3) from the camshaft (4) of the injection pump.

8. Remove the bearing of the injection pump camshaft in a horizontal direction, inserting a screwdriver into each of the two grooves in the surface on which the bearing support (1) is mounted.

1. Make sure that the thread of the injection pump camshaft does not damage the seal.

2. Do not lose the adjuster seals and the seal between the pump casing and bearing support..

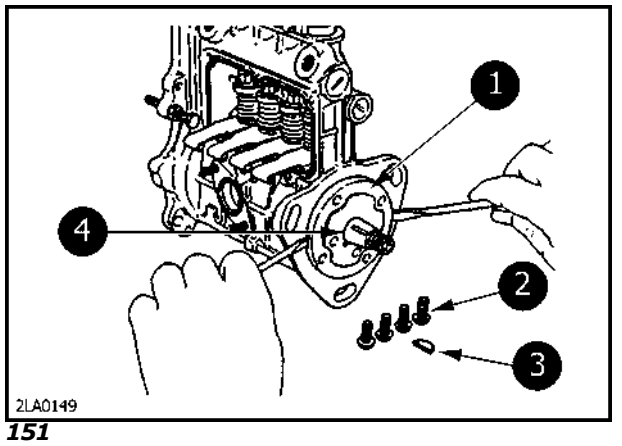


151

https://truckmanualshub.com/


9. Overturn the injection pump (1). Move all the plunger guides towards this latter, then rest the injection pump on one side. Turn the camshaft (2) of the injection pump until the cam of each cylinder touches the outer roller of the plunger guide.

10. Place a plate against the camshaft end, on the governor side. Tap on the plate and take out the two bearings (3) of the camshaft and transmission.

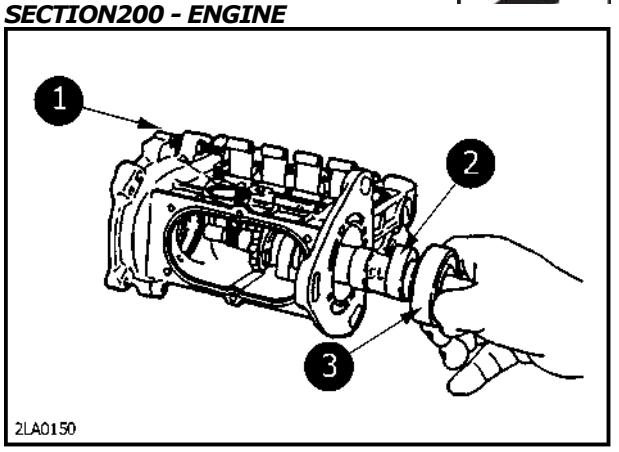

152


11. Remove the plunger guide retainers (1) using a screwdriver, as shown in the figure.

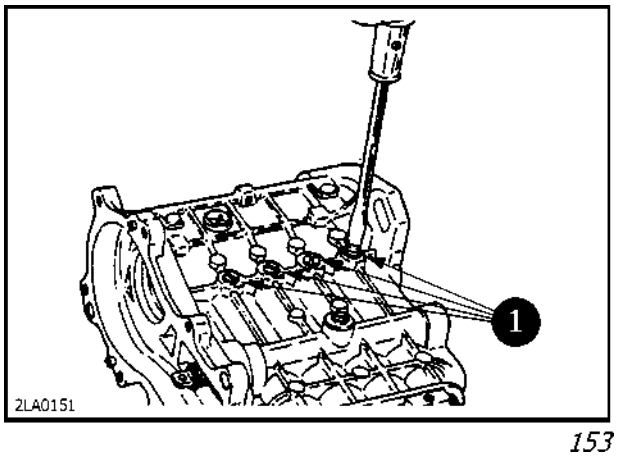

153

12. Working as shown in the figure, and using the handle of a hammer or a similar object, push the plunger-guide upwards from the bottom of the pump and take out the tappet (2) tool **010 MT MIS**.


	Take out the tappet (2) tool **010 MT MIS** with the greatest care. Make sure that the plunger guide, plunger, etc., do not suddenly spring out. The plunger spring has sufficient power to push the plunger out.

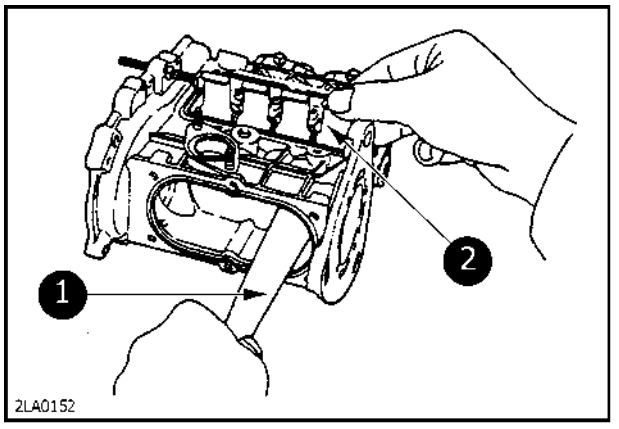

154

13. Remove the plunger-guide assembly (1).

	Avoid holding the pump in a vertical posi- tion if possible, as the plunger guide assembly could drop to the ground. Rest the pump on one side when the plunger-guide assembly is being removed.

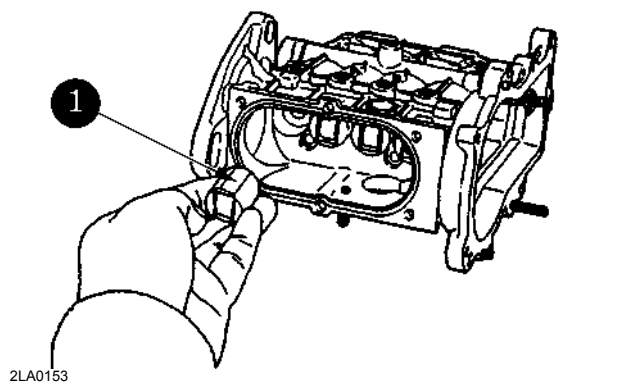


155

https://truckmanualshub.com/

14. Take out the plunger (2), the spring (3) and the lower retainer (1) of the spring from the lower part of the injection pump.


Separate these parts for each cylinder.

EU[3]

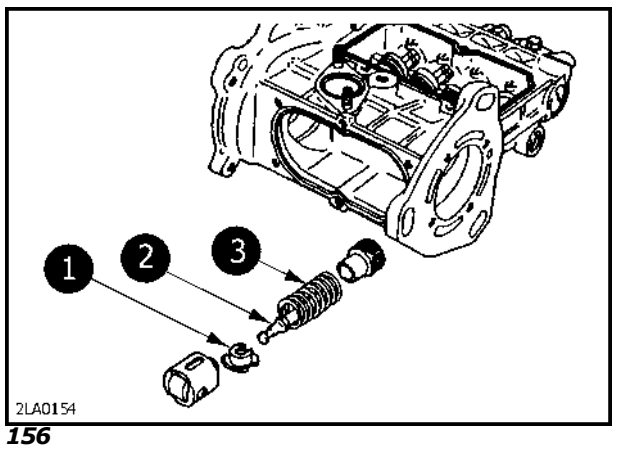

156


15. Using a screwdriver, remove the retainer screw (2) from the fuel governor pinion (1), as shown in the figure.

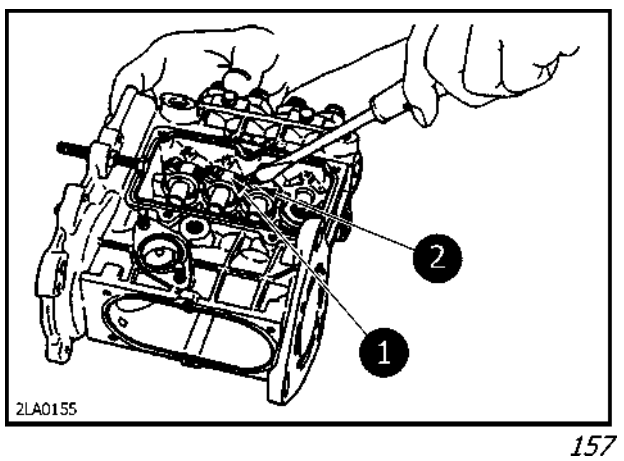

157

1. Loosen the governor pinion (2) retainer screw (1) to allow the part to be removed from the adjuster sleeve (4). Before loosening it, make sure that the matching mark (3) on the pinion is aligned with the one on the sleeve. Make other marks if the mark is poorly visible or not aligned. These marks will be useful during the suc- cessive injection timing phase.


2. Separate all these parts for each cylinder.

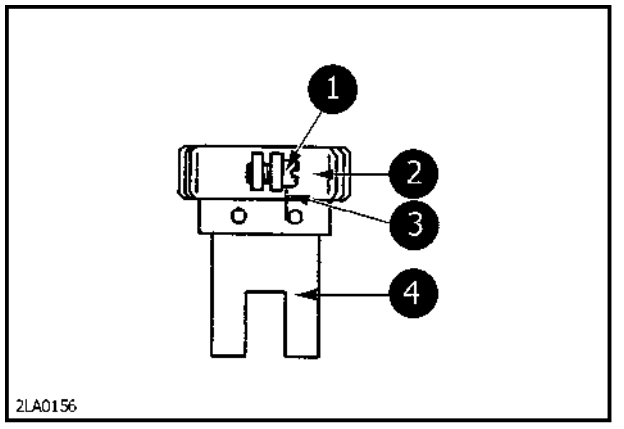

158

16. Remove the adjuster pinion (1), the sleeve (2) and the upper retainer (3) of the plunger spring.

Separate these parts for each cylinder.

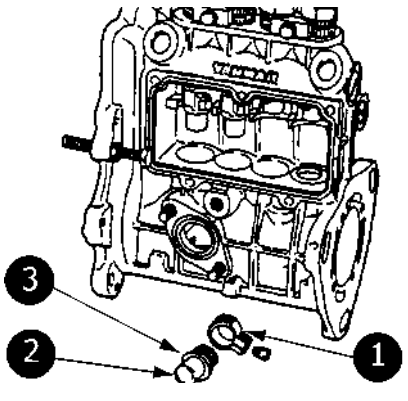


159

https://truckmanualshub.com/


17. Remove the retainer (1) of the adjuster rack (2) and take this out, using a screwdriver, as shown in the figure.

18. Slacken off the bolt (2) of the retainer (1) of the delivery valve holder and remove it.

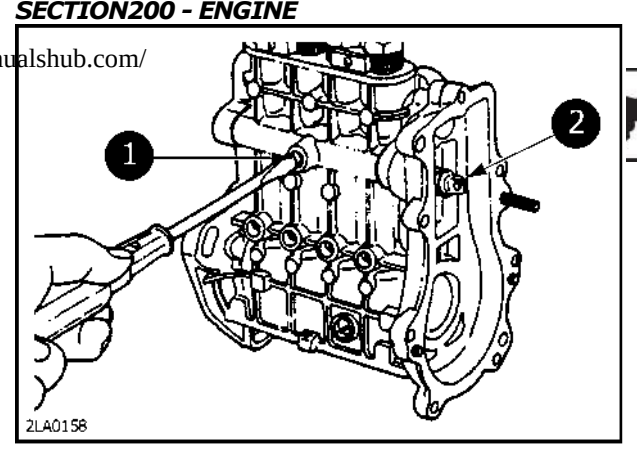


160

Make sure that the spring (2) and spacer (1) on the rack (3) are not lost.

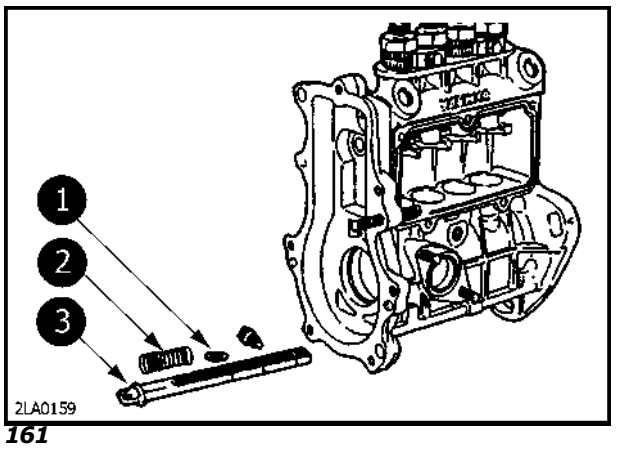

161

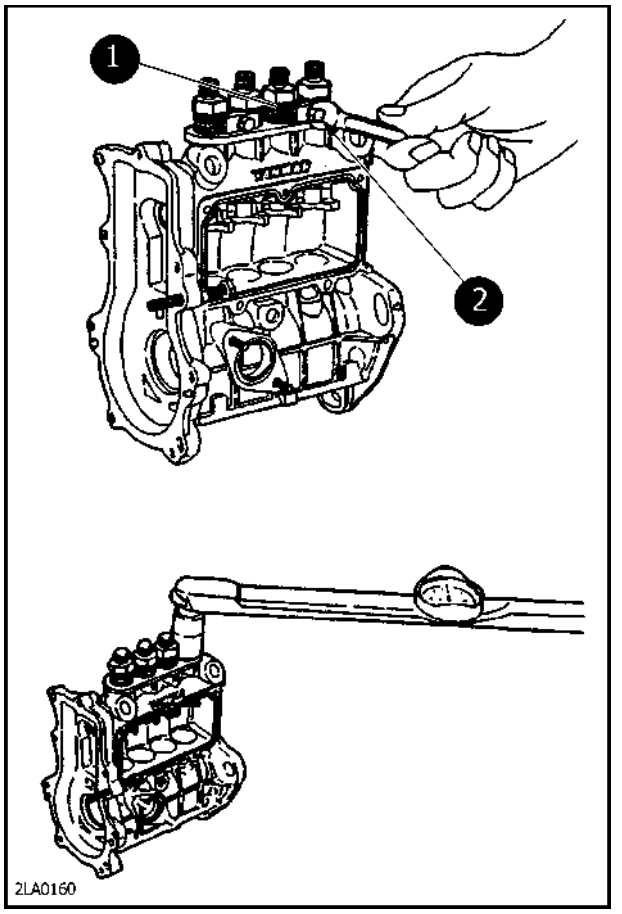


https://truckmanualshub.com/

19. Remove the delivery valve assembly (1).

EU[3]

1. Take care to avoid losing the small parts, such as the seal, the spring (3) and the delivery valve pad (2).

2. Carefully separate the delivery valve assembly of each cylinder.

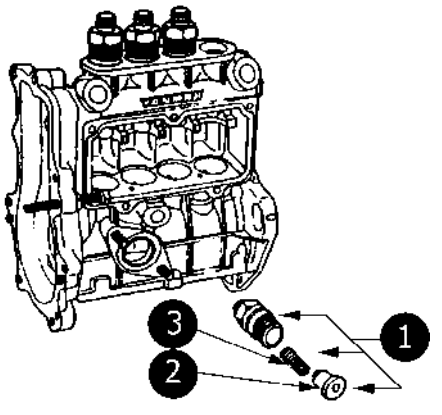


2LA0161

163

20. Tyake out the plunger cylinder (1), allowing it to pass through the upper part of the injection pump.

Leave the cylinder and plunger together.

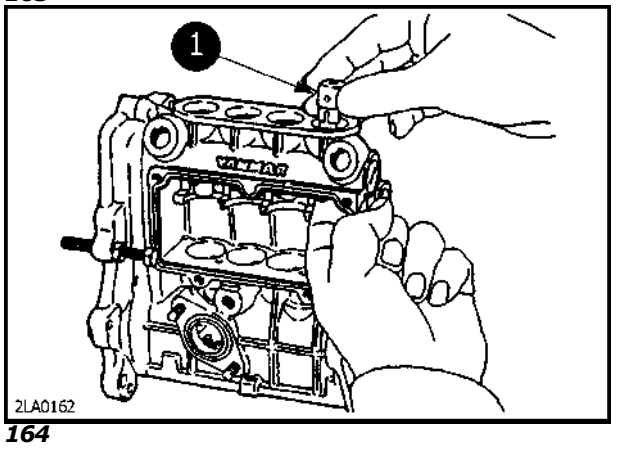

2LA0162

164


Assembly

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

1. Fit the plunger cylinder (1) back into the injection pump, from the upper part.

Make sure that the retainer of the plunger cylinder is correctly mounted in its housing with a key.

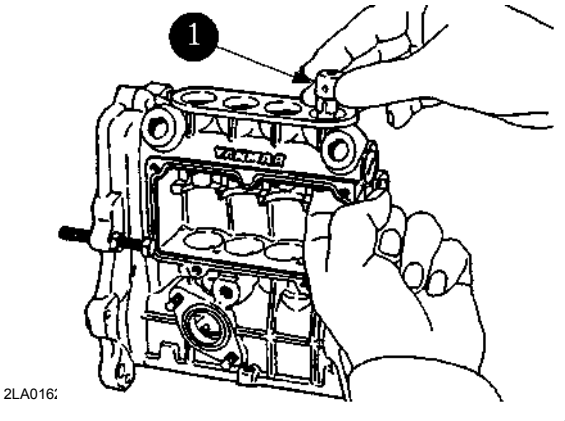


2LA016

165

https://truckmanualshub.com/

Replace the seal and retention ring of the delivery valve before re-assembling the injection pump.

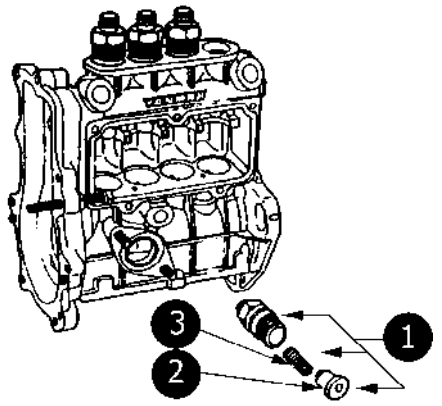

2LA0161


166

2. Insert the delivery valve assembly (1), the spring (3) and the valve retainer through the upper part of the injection pump as shown in the figure.

1. Make sure that th been mounted

2. Make sure that th lar.

3. Insert the rack (1) and tighten the relative retainer.

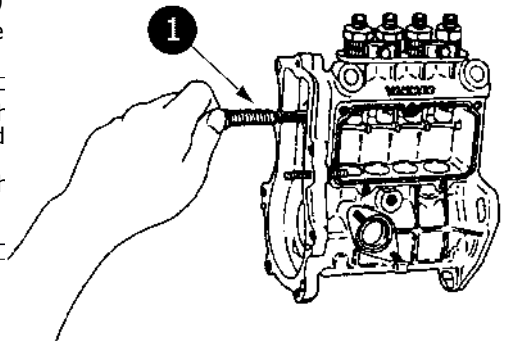


2LA0163

167

5. 4. Insert the rack locking screw into the threaded hole of the retainer.

Look at the injection pump from the bottom and align matching mark S_1 on the rack (1) with the S_2 mark on the pinion (2).

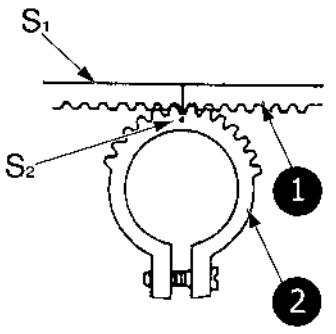

2LA0164


168

https://truckmanualshub.com/

EU[3]

Fit the sleeve so that the holes in its surface point towards the retainer screw. Meanwhile, align matching mark (Si) of the sleeve (3) with that of the pinion.


6. Holding the pinion (2) with one hand so that the matching mark is kept in the right position, fit on the sleeve (3) and slightly tighten the pinion retainer screw (1).

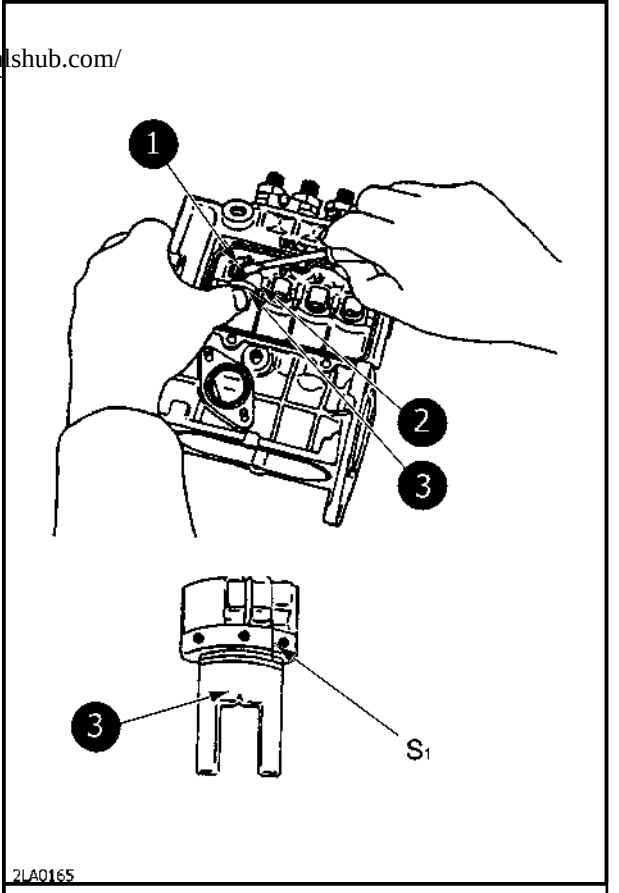

7. Mount the upper retainer (1) of the plunger spring.

EI[3]	**1.** Mount the upper retainer (1) of the plunger spring. **2.** Check again to make sure that the rack moves in the correct way.

8. Mount the plunger spring.

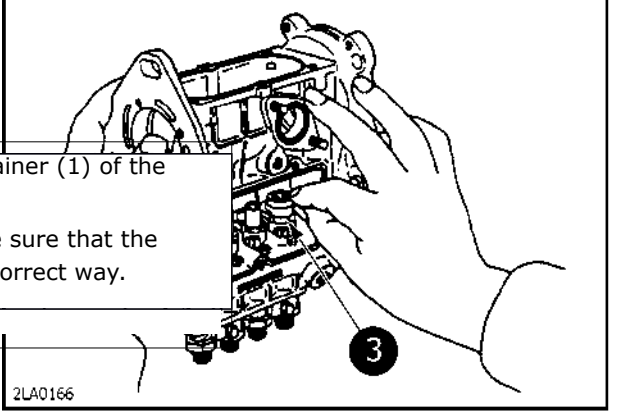


170

9. Mount the lower retainer of the plunger spring on the top part

EU[3]

Do not mount the plunger in reverse, otherwise the injection volume would increase in an excessive way until it became uncontrollable.

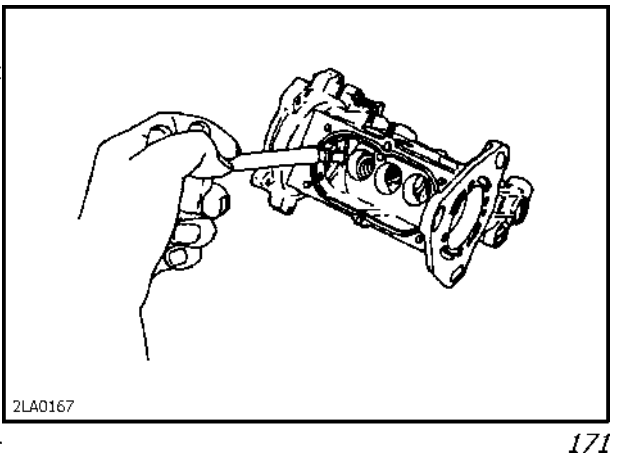


171

of the plunger itself. Align the matching mark on the plunger side with the one on the adjuster sleeve and insert the plunger from the bottom of the injection pump using tool **011 MT MIS**.


https://truckmanualshub.com/

. Insert the plunger guide assembly at the bottom of the injection pump. Push the plunger guide upwards with the handle of a hammer or some similar tool, then insert tappet bearing tool **010 MT MIS** (1, fig. 173) between the lower spring retainer and the body of the injec- tion pump.

1. Keep the retaining groove (2, fig. 172) of the plunger guide pointing upwards and align it with the corresponding hole (1, fig. 172) of the plunger retainer screw on the body of the injection pump.
2. Check to make sure that the rack moves freely. If this is not the case, it means that the plunger spring is interfering with some other part. In this case, hold the spring in position with a screwdriver.
3. Insert the normal adjuster ring and tighten it at the same time when the plunger guide assembly is being replaced with a new one.

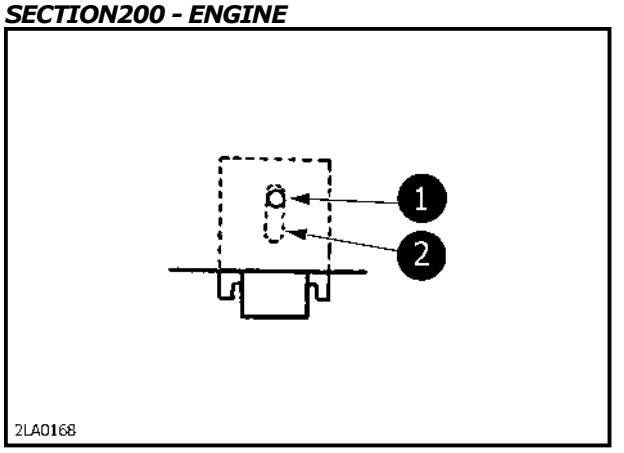


172

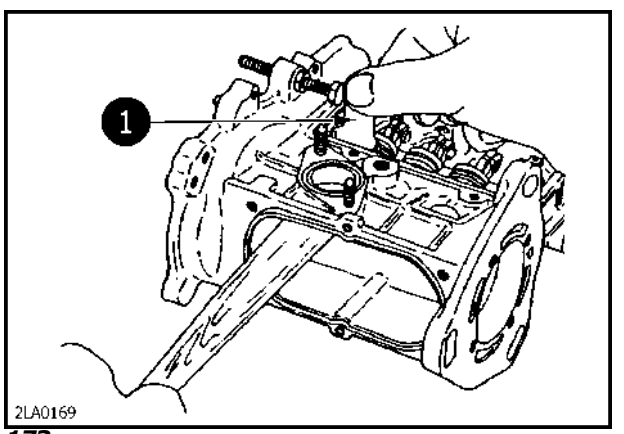

173


11. Make sure that the retainer groove (2, fig. 172) of the plunger guide is positioned correctly. Tighten the retainer screw (1) of the plunger guide.

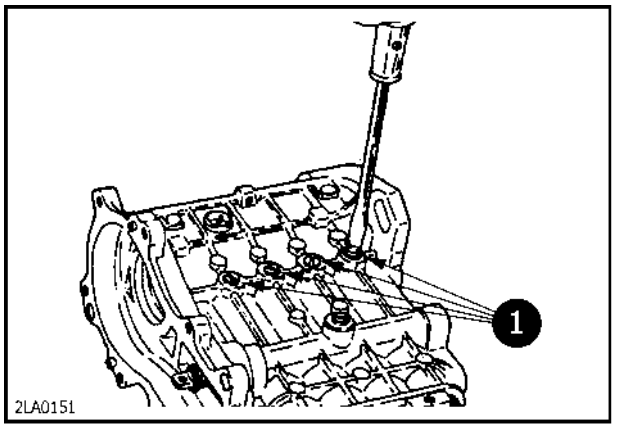

174

12. Position the bearings (2) on both ends of the camshaft (1). Insert them by tapping them lightly from the transmission side.

Overturn the injection pump. Move the plunger guide towards the spring and fit the camshaft into the injection pump.

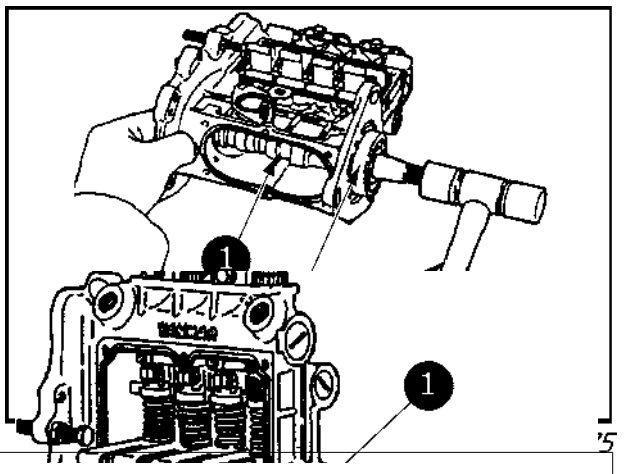


175

SECTION200 - ENGINE

13. Mou
bea

Before assembling, spread the camshaft and the retainer seal with oil to prevent them from being damaged.

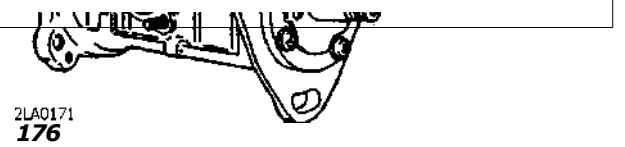

176


Camshaft float (all models)	. . . (mm)	0,02 - 0,05

https://truckmanualshub.com/

14. F

15. (
c **MT**
MIS (3).

5* Fix the injection pump on to a support. Using a plastic hammer (5, fig. 175) tap in the end of the camshaft and measure the float with tool
012 MT MIS.

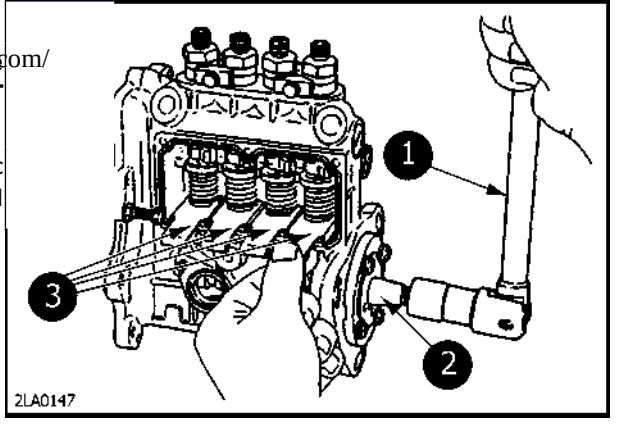


Adjustment procedurę

Remove the adjuster seal if the float is less. Add one or more adjuster seals if the float is more.

Thickness of the adjuster seal: 0.5; 0.4; 0.3 and 0.15 mm.


17. Mount the side cover (1) of the injection pump.

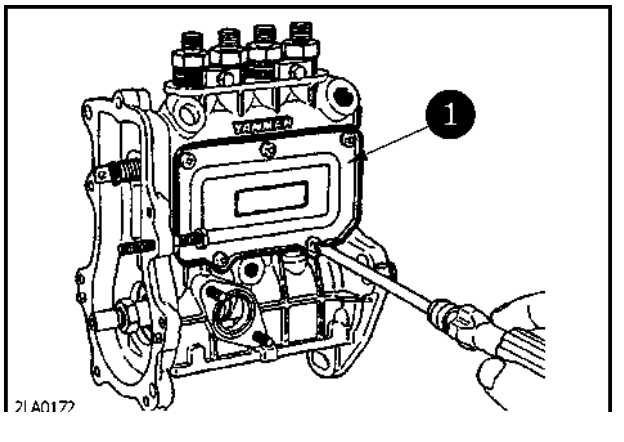

https://truckmanualshub.com/

18. Mount the side cover (1) of the injection pump.


19. Tighten the spring holder of the delivery valve to a 34.3 - 39.2 Nm torque value.

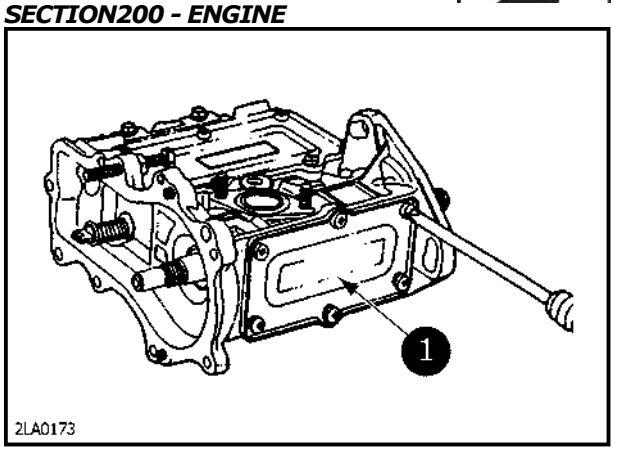

179

1. Tighten the spring holder of the delivery valve by hand as much as possible. If the bolt becomes difficult to turn halfway through the operation, the seal or the delivery valve could have slipped out of position. Remove, adjust and tighten again.


2. Do not tighten the valve holder too much. Excessive tightening could cause the rack to operate incorrectly.

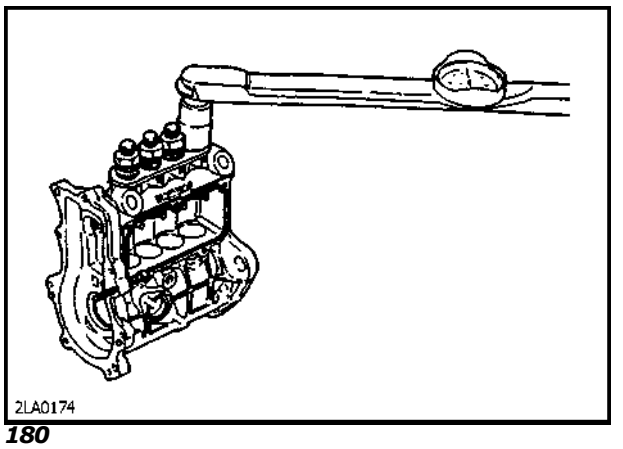

180


20. Tighten the valve holder retainer stop (1) to a 2.9 Nm torque value.

Do not tighten the valve holder too much as oil leaks could ensue.

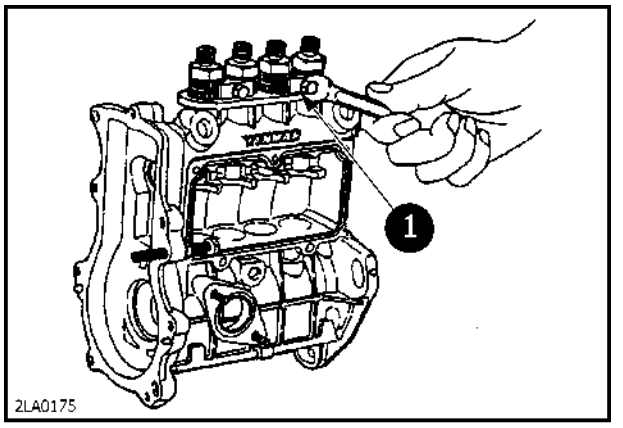

181

21. Mount the fuel pump.

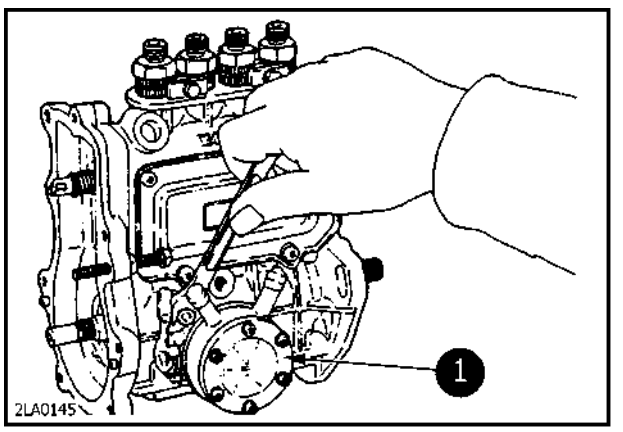

182


ing them. Take care to prevent the sliding surfac

Do not use solvents to clean the parts. Use cleaning products that comply with the standards in force.

https://truckmanualshub.com/

Plunger inspection

1. Thoroughly clean the plunger (1). Replace the plunger if its guide groove is scratched or discoloured.
2. To test the plunger, tilt the plunger cylinder (1) at an a angle of about 60° and check to make sure that it slides backwards without friction. If it does, the plunger can be considered efficient. Turn the plunger and repeat the test several times. If the plunger's reverse travel is too fast (or too slow), or if it stops half way, repair it or replace the complete assembly.

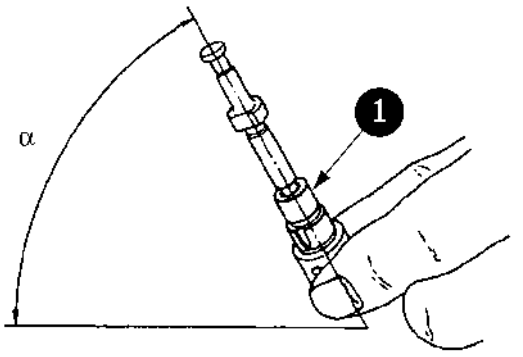


2LA0176

183


Delivery valve inspection

1. Replace the complete valve if the suction-thrust plate or the delivery valve housing are scratched, notched, worn or damage.
2. Plug the hole at the bottom of the delivery valve holder (2) with a finger and maintain the housing unchanged. Fit the delivery valve (1) into the valve holder. Remove the finger and check to make sure that the valve trips backwards. If it does, it is efficient, failing this it must be replaced.

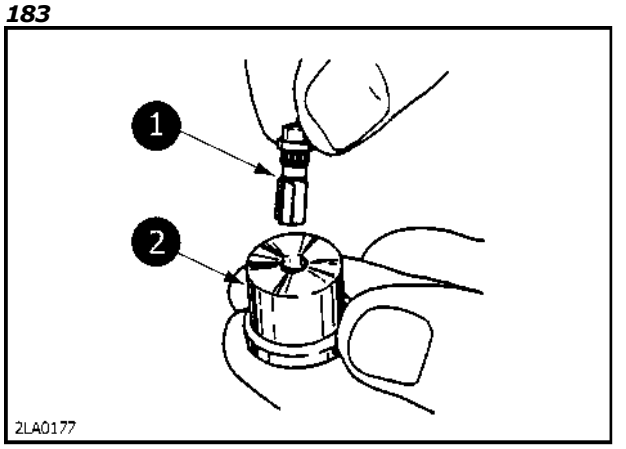

2LA0177

184

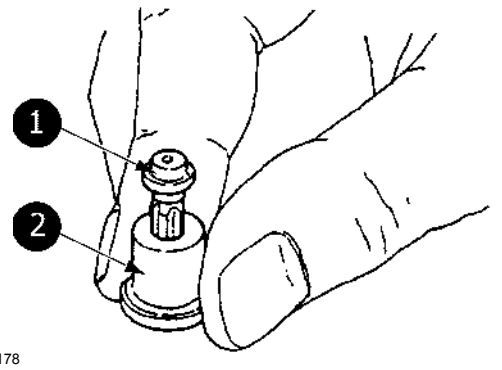

2LA0178


185

https://truckmanualshub.com/

1. Check to make sure that the sliding surfaces of the plunger guide (1) are not worn too much.

Check whether the plunger cylinder housing shows signs of irregular contact, burrs, traces of gas leaks or other defects. If necessary repair or replace the cylinder, otherwise the cir- culating lubricating oil will dilute.

3. If the surface of the outer roller of the plunger guide is worn or defective, it must be replaced.
4. If the circumference of the plunger guide and the hole of the pin on the roller are worn or defective, they must be replaced.
5. Replace the whole assembly if the plunger guide unit, the pin and roller are wavy.

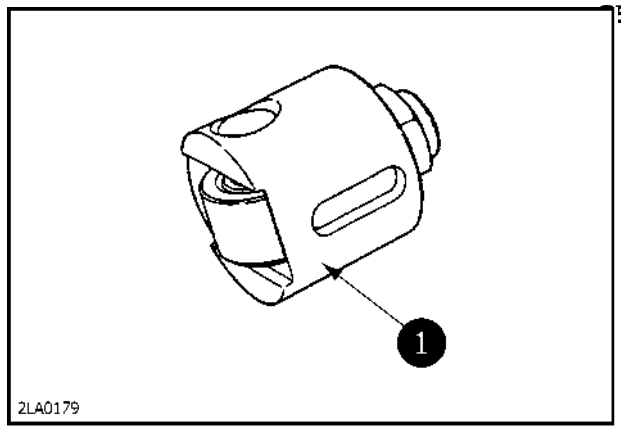

186

Plunger guide, plunger cylinder inspection
Camshaft and bearing inspection


1. Camshaft

Check whether the surface of the camshaft (1) shows signs of damage or wear and whether the spline housing and the threads on both sides are warped. Replace the camshaft if this is the case

2. Bearing

Replace the bearing if the surface of the tapered roller and outer ring are damaged or worn.


The bearing must also be replaced when- ! ever the camshaft of the injection pump is replaced.

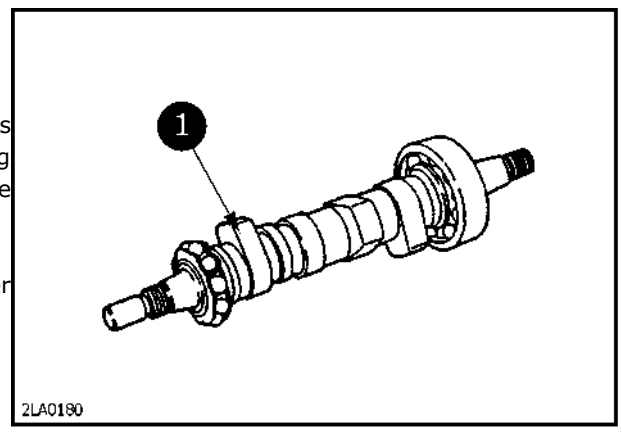

187

Fuel regulating pinion and rack inspection

1. Make sure that the rack (1) is not warped, worn or bent in the point where the pinion meshes (2).

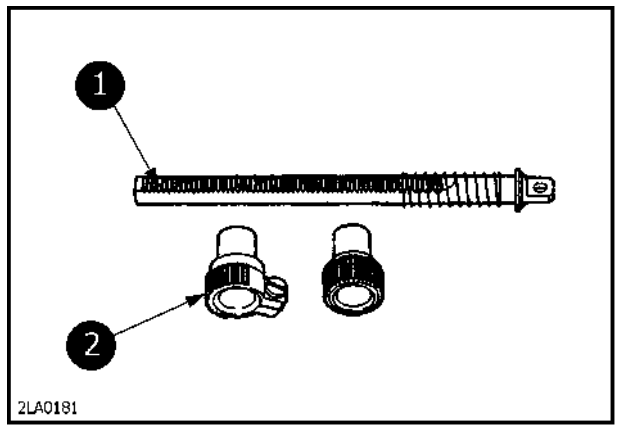

188


https://truckmanualshub.com/

REGULATOR UNIT - OVERHAUL Demounting

WARNING


Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

1. Regulator housing removal.

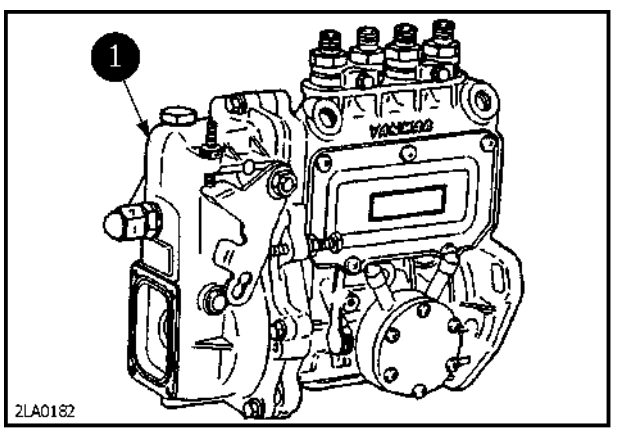


189

Slacken off the self-locking nut (7) in models equipped with torque regulator spring assembly (8).

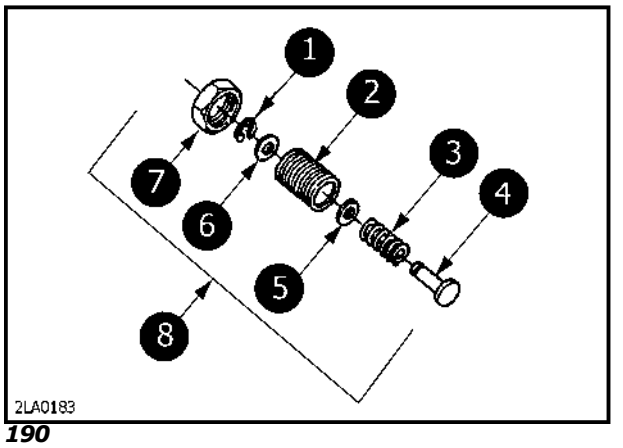


190

2. Remove the hex nut (1) of the control lever and remove the lever from the shaft.

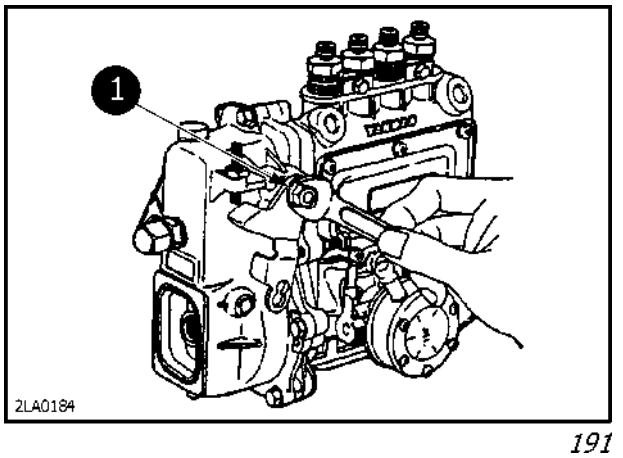

191

https://truckmanualshub.com/

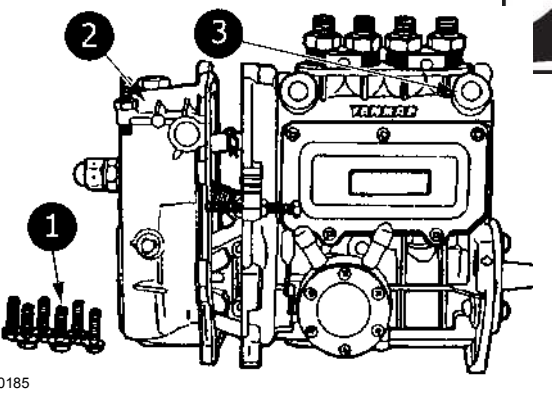


2LA0185

192

3. Unscrew the fixing bolts (1) of the regulator housing (2). Remove the regulator housing from the injection pump (3) by lightly tapping on the housing with a plastic mallet. Create a gap between the regulator housing and the injection pump, moving only the mobile parts of the regulator lever.

4. Push out the elastic fork of the regulator con- nection, inserting a suitable pair of pliers (1) between the injection pump and the regulator housing.


5. Separate the regulator (1) from the injection pump (2), detaching it from the regulator housing and injection pump, pushing the elastic fork away from the connection bracket of the regulator with the rack.

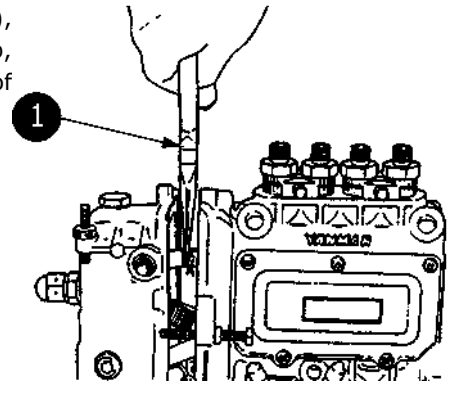


2LA0186

193

194

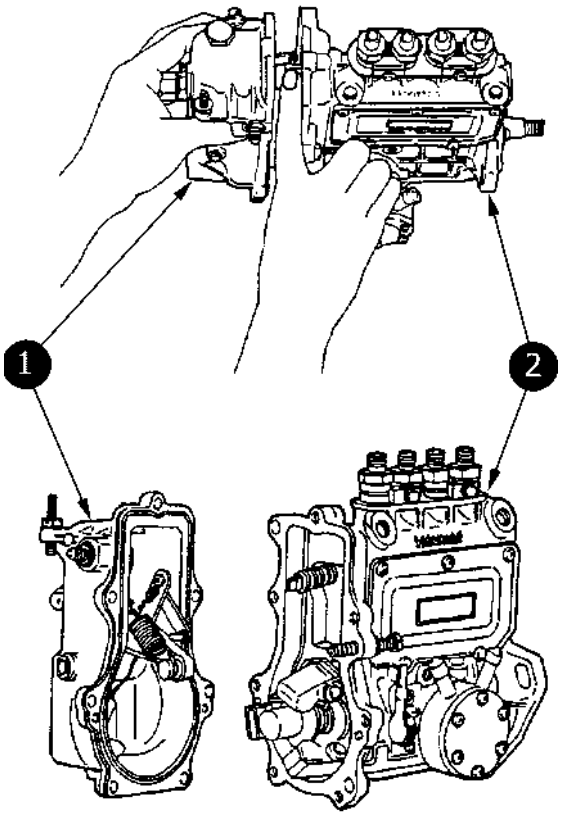


6. Remove the return spring of the stop lever (1) from the lever shaft (2).

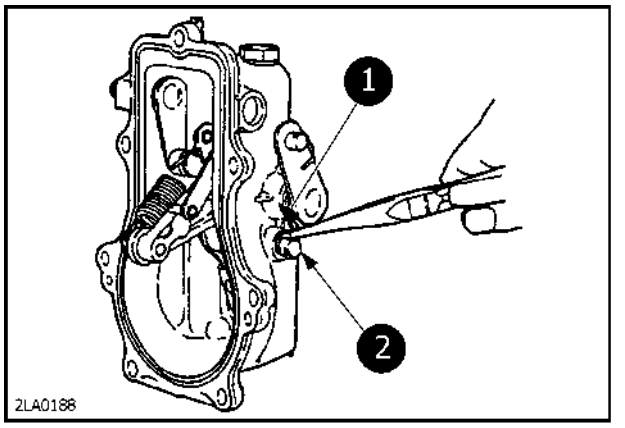

195

7. Using an adequate pair of pliers (2), release the regulator spring (1) from the tensioning lever (2) and from the control lever shaft.

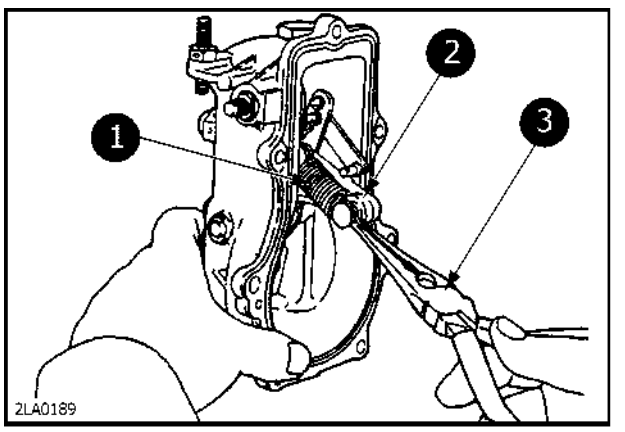


196

8. Remove the retainer of the regulator lever shaft.
Remove the spring ring from both ends of the regulator lever shaft.

197


9. Insert the rod (1) (diameter 8 mm or less) into one of the ends of the regulator lever shaft and tap on it until the retention ring projects from the opposite side of the regulator housing.

198

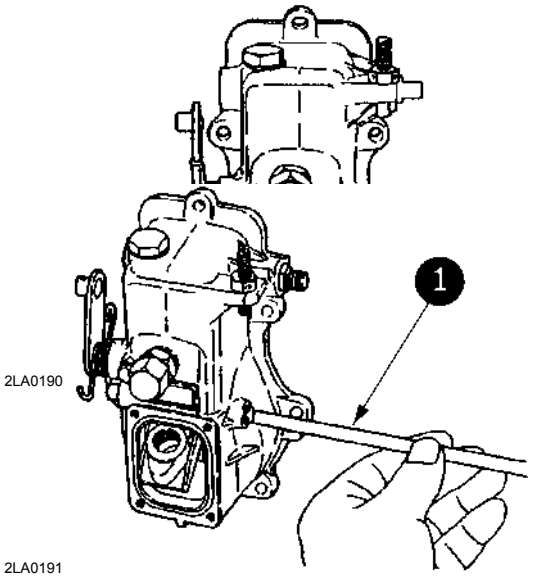


https://truckmanualshub.com/

10. Remove the O-ring (1) from the shaft (2) of the regulator lever.

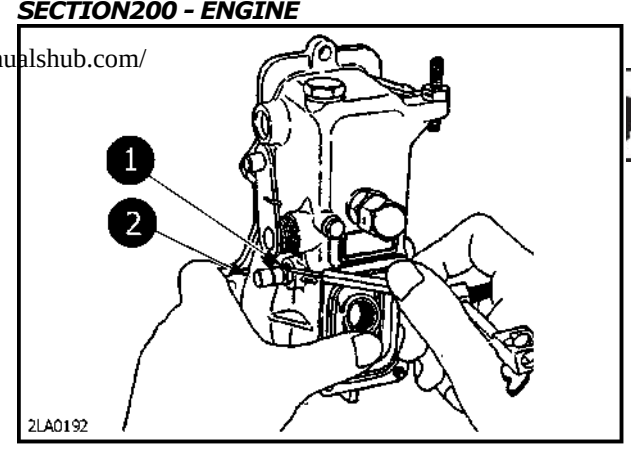

199

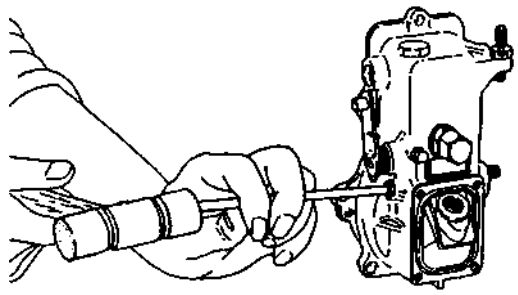


200


- Tap lightly on the end of the shaft and remove it.

11. Remove the bracket (1) that connects the regulator from the lever.


0^ SECTION200 - ENGINE <

The regulator assembly consists of the ! regulator lever, the tensioning lever and the torque adjuster spring assembly. It normally need not be demounted.

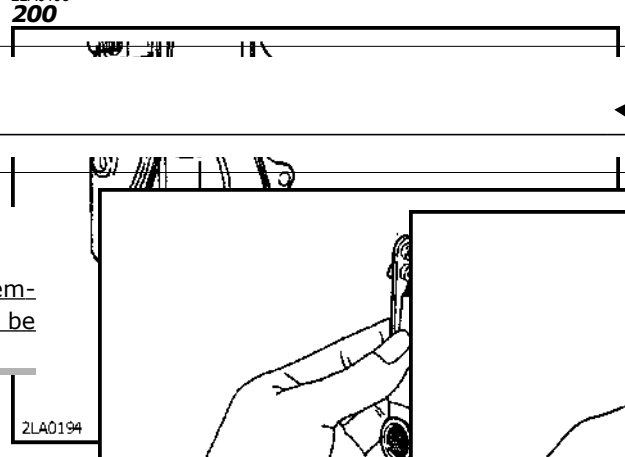

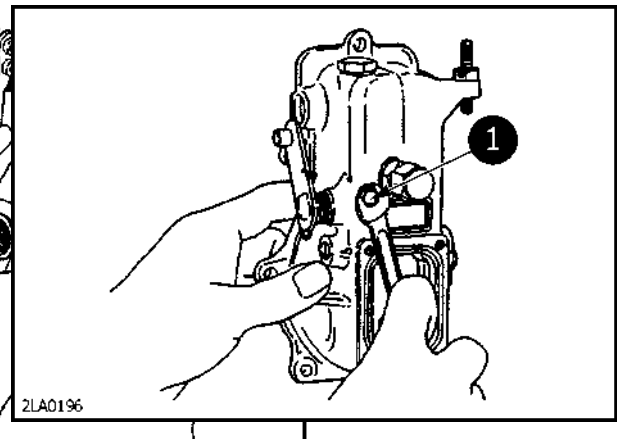

If necessary, take out the retainer lever, remove the stop pin (1) of the retainer lever shaft and tap lightly inside the regulator hous- ing.

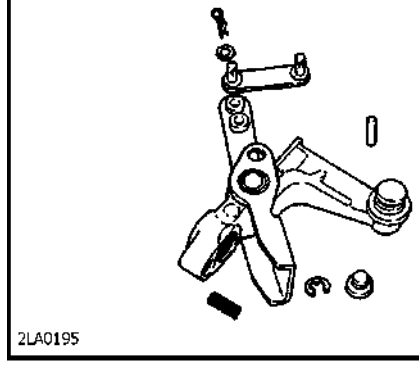


202

https://truckmanualshub.com/

13. If necessary, take out the shaft of the regulator

1. Do not remove limiter unit FO from the regulator housing unless this is strictly necessary.

2. For models with torsion springs, first take out the blank nut, the self-locking nut and then the torsion spring unit.

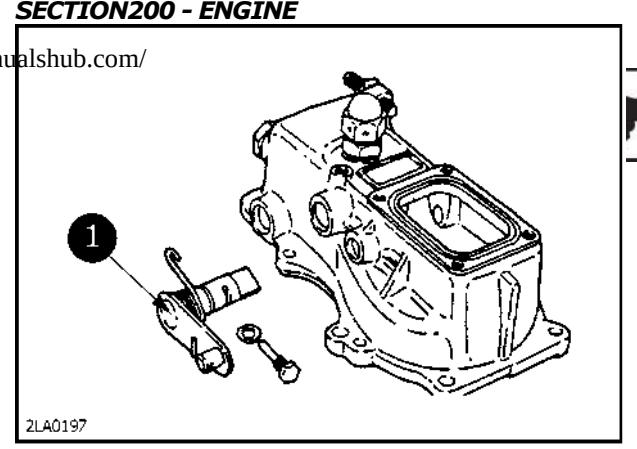


204

lever (1), tap lightly on the end of the shaft with a plastic mallet and remove the control lever itself.

14. Remove the sleeve (1) of the regulator at the end of the injection pump camshaft by hand.

16. Remove the centrifugal weight assembly (1) from the camshaft regulator using puller **008 MT MIS** (mod. MISTRAL AMERICA 40) or **009 MT MIS** (models MISTRAL AMERICA 45 and 50) (1).

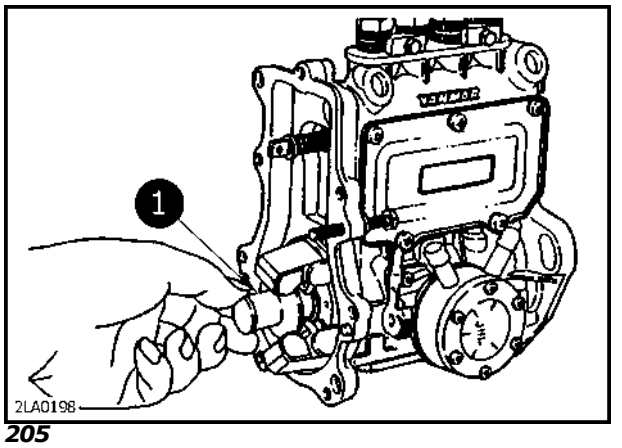


205

15. Fix the bearing support in a clamp in order to hold the camshaft. Loosen the bearing nut of the regulator with a spanner (2) a few turns.

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

When the tapered coupling detaches after the nut has been removed, the centrifugal weights of the regulator could spring out.

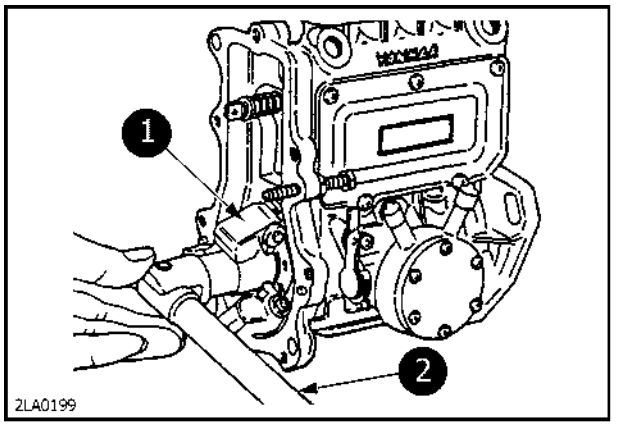

206

https://truckmanualshub.com/


Assembly

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Check all parts after they have been demounted and replace them if necessary. Clean all parts and set them in order before re-assembling.
To make sure that the prescribed performances are obtained, check that the assembly has been correctly adjusted after the re-assembly operations.


1. Fix the bearing support in a vice to hold the camshaft of the injection pump in place. Fit the centrifugal weight unit (1) of the regulator into the tapering part at the end of the camshaft. Mount the washer and tighten the nut that supports the centrifugal weights of the regulator to a 44.1 - 49.1 Nm torque value.

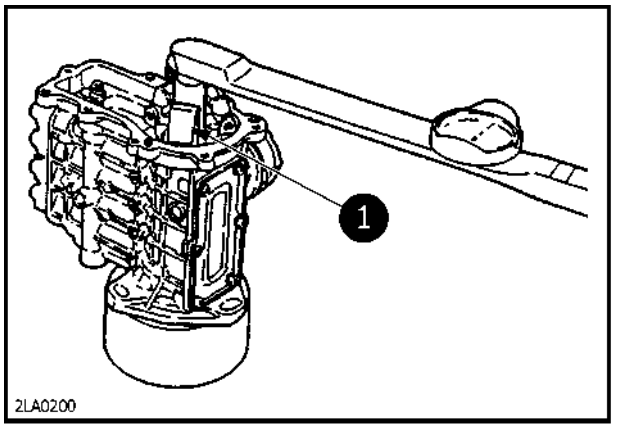

207

2. Open the centrifugal weight unit (1) of the regulator outwards and insert the sleeve (2) on to the end of the camshaft.


Make sure that the sleeve is free to move after it has been inserted.

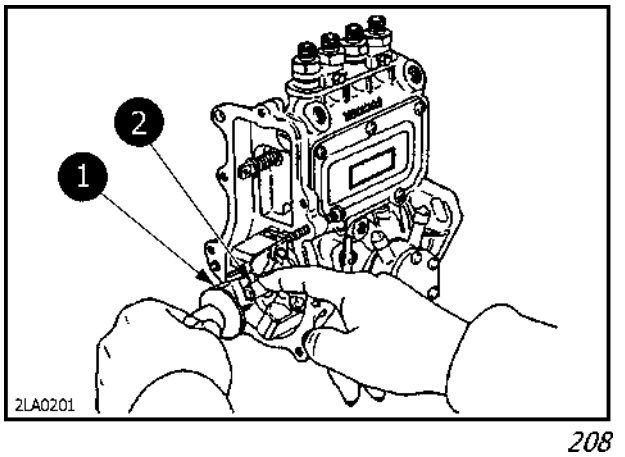

208

https://truckmanualshub.com/


3. After having demounted the retainer lever, mount the return spring on the lever itself, tap the lever lightly with a plastic mallet in order to bed it and then tighten the stop pin.

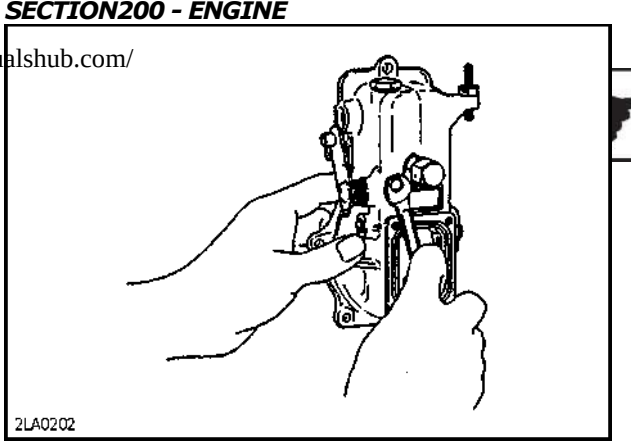

209

4. After having removed the control lever shaft, insert the shaft and washer inside the regulator housing using an appropriate tool.


5. If the regulator has been demounted, insert the spring pin (1) by tapping it lightly.

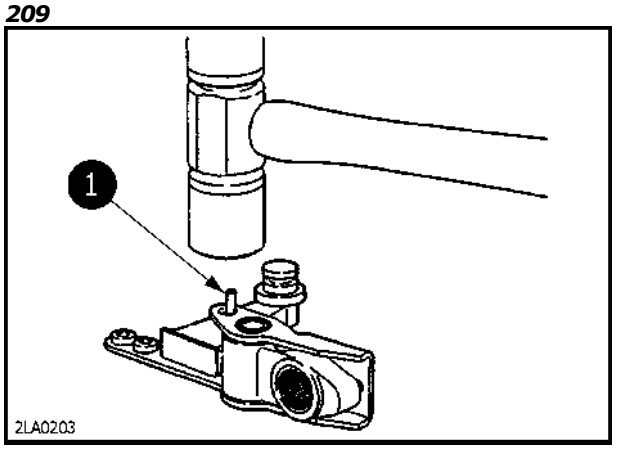

210

6. Mount the regulator lever assembly (1) on to its connection bracket.

- Make sure that the fixing holes of the regulator connecting bracket are the right ones and that the regulator is fitted in the correct position.
- Check to make sure that the connection bracket of the regulator moves freely.

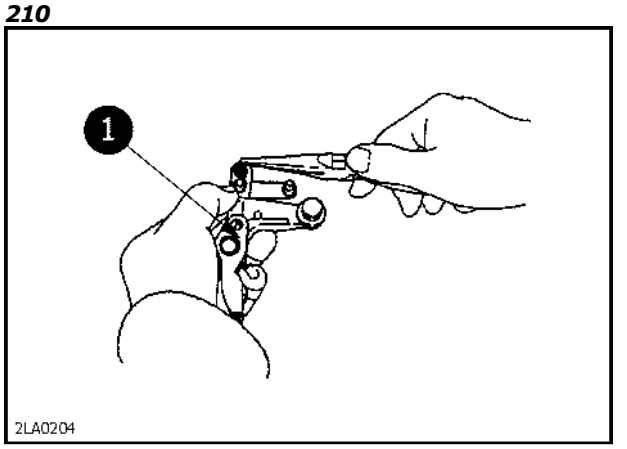


211


7. Insert the regulator lever shaft (1) assembly into the regulator housing and tap it lightly until the retention ring groove projects from the opposite side of the housing.

• First mount the retention ring on the side on which it strikes.

• Remember to mount the washer (1) on both ends of the regulator lever.

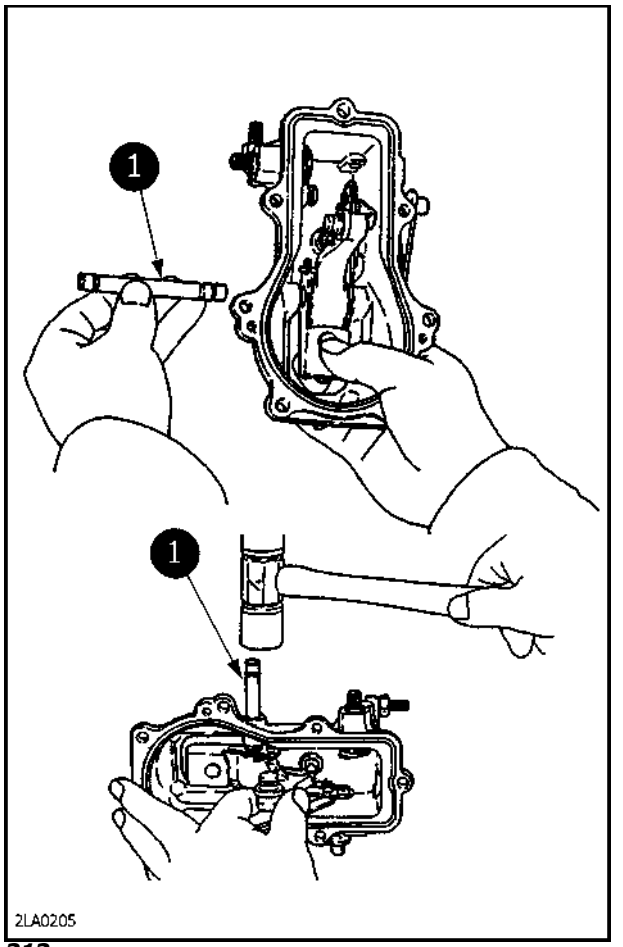


212

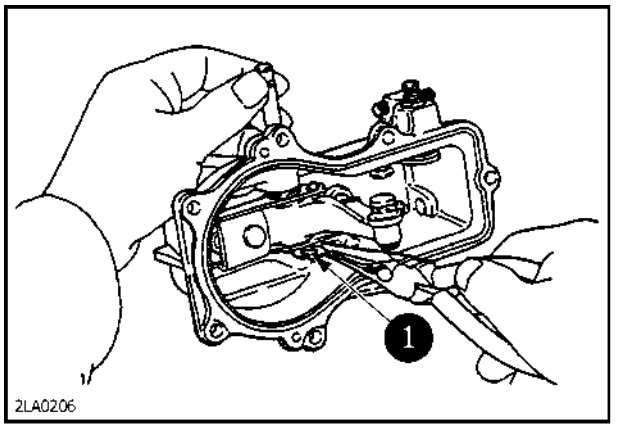


213

https://truckmanualshub.com/


8. After having mounted the retention ring (1), tap on the shaft (2) of the regulator lever in the opposite direction and mount the spring rings into the grooves on both ends.
- After having mounted the regulator lever unit, make sure that its movement is regu- lar.

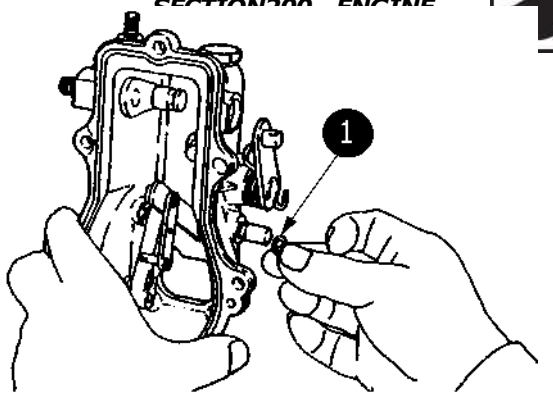

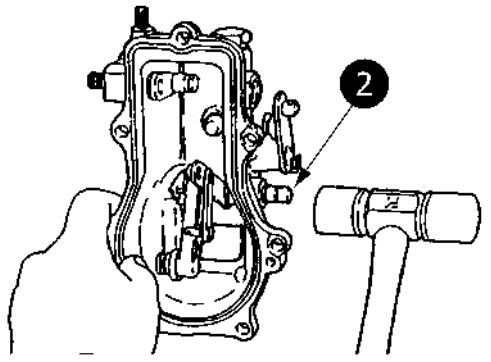


214

9. Mount the return spring (1) of the retainer lever on the end of the shaft (2) of the gover- nor lever.

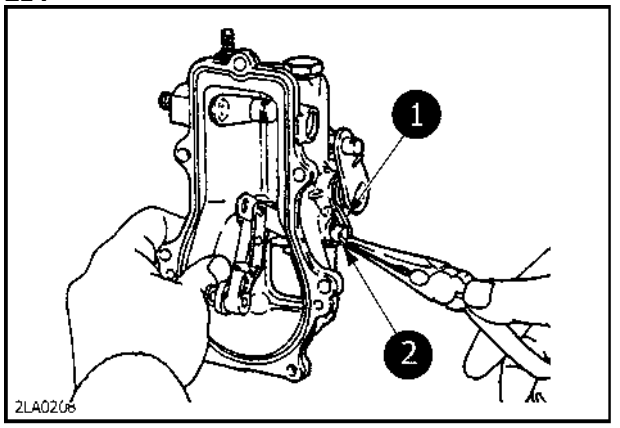


215

10. Couple the spring (1) of the regulator on to the shaft of the control lever and on to the tension- ing one (2) using an appropriate pair of pliers (3).

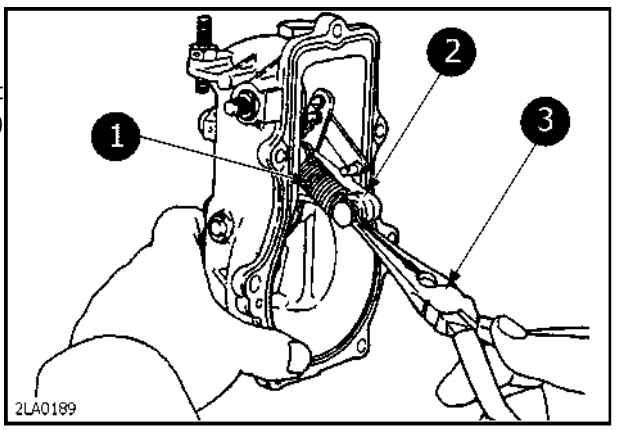


216

https://truckmanualshub.com/

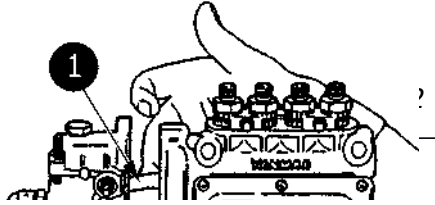

2LA0209

217

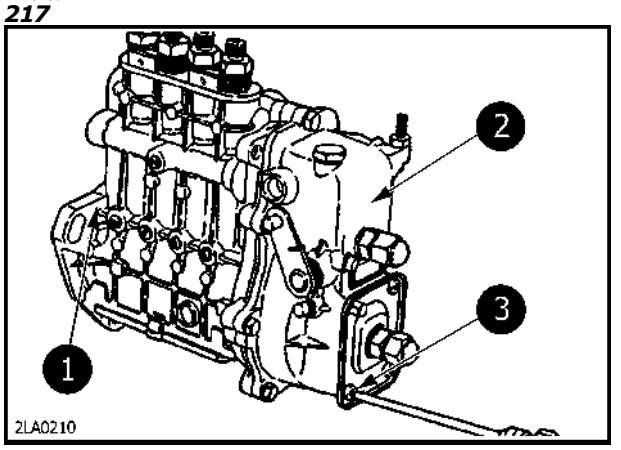


11. Keep the regulator connection adjuster bracket (1) as far as possible from the surface on which the regulator housing is mounted. Insert the pin of the connection bracket into the rack pin hole and mount the spring pin.

12. Mount the regulator housing (2) on to the injection pump (1) and meanwhile tap lightly on it with a plastic hammer. Tighten the fixing screw (3).

13. Fit on the cover of the regulator housing.
For models equipped with secondary spring for the idling rate, insert the spring and adjuster rod on to the adjuster bolt of the regulator housing cover.

218

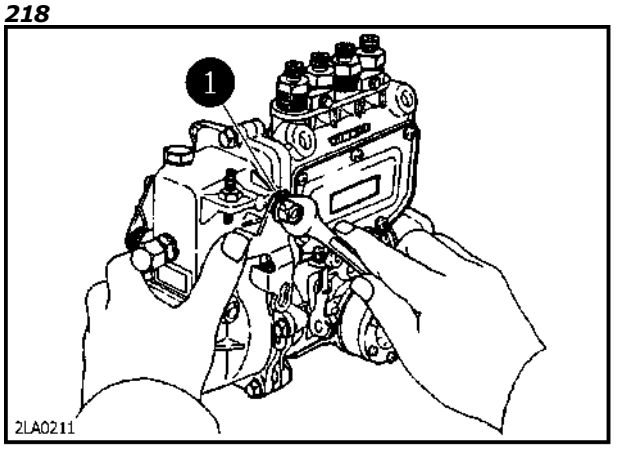

Tighten the nut in a temporary way if the torque regulator spring assembly has been removed. The nut must be ade- quately tightened after the adjustments have been made.

14. Insert the control lever into the corresponding shaft and tighten the nut (1).

EU[3]


Move the control lever backwards and forwards to make sure that the movement is regular all along the connection bracket.

219

Checking the centrifugal weights of the regulator

Examine the centrifugal weight assembly (1) to make sure that it is in a good condition and functional. It should be replaced in the following cases:


- if the centrifugal weights fail to open or close in a regular way;
- if the surface on which the centrifugal weights contact the sleeve is excessively worn;
- if the centrifugal weight support and pin is worn or the caulking has loosened;
- if the retainer of the centrifugal weight support is excessively worn.

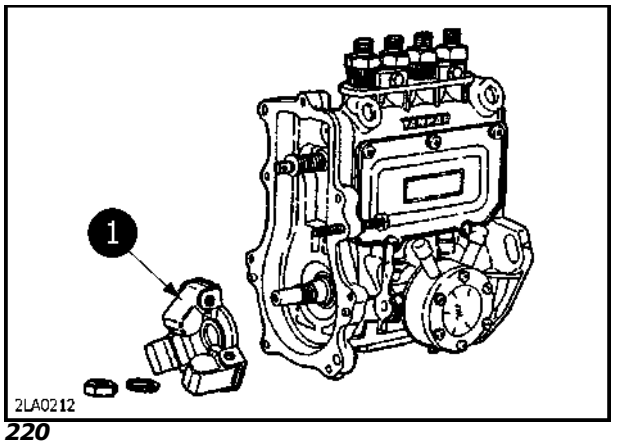

220

Key:

1. Pin
2. Centrifugal weight of the regulator
3. Support of the centrifugal weights of the regulator

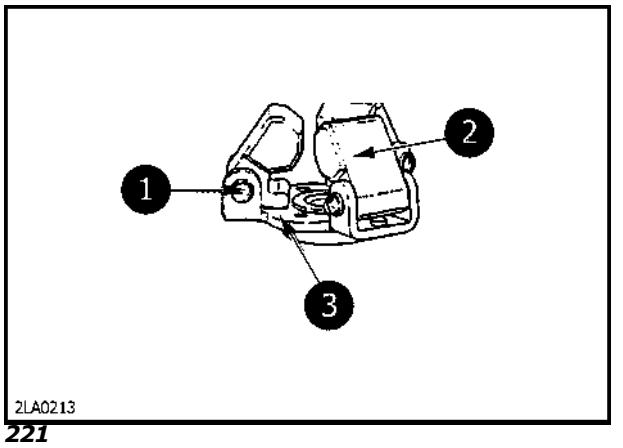


221

Regulator sleeve inspection

Examine the regulator sleeve to make sure that it is in a good condition and functional. It should be replaced in the following cases:

- if the surface on which the sleeve contacts the centrifugal weights is worn;
- if the surface on which the sleeve contacts the thrust pin is worn;
- if the sleeve fails to move smoothly on the cam- shaft of the injection pump (e.g. owing to wear on the inner diameter of the sleeve itself);
- if the retainer of the centrifugal weight support is excessively worn.

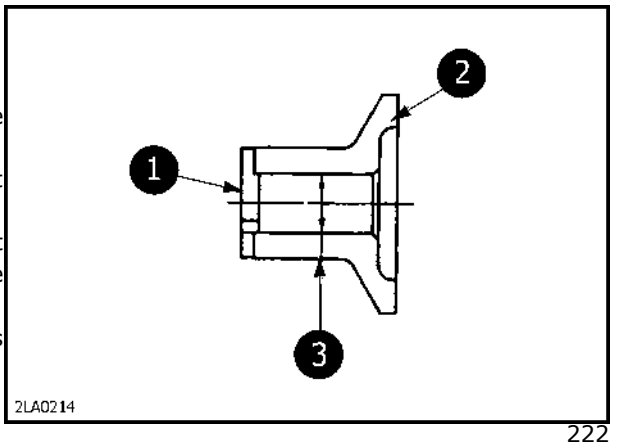

222

Key:

1. Contact surface of the thrust pin
2. Contact surface of the centrifugal weights of the regulator
3. Inner sleeve diameter


Regulator lever shaft assembly inspection

1. Measure the play between the shaft (2) of the regulator lever and the bush (1) and replace if the value is near to the wear limit.

	Normal dimension	Play normal	Wear limit
Outer reg			

Check the condition of the thrust pin's contact surface. If there are signs of wear or scorching, remove the pin of the spring in order to demount and replace the thrust pin only.

Check whether the connection components show signs of warping or twisting which could lead to faulty operation. Replace any defective parts.

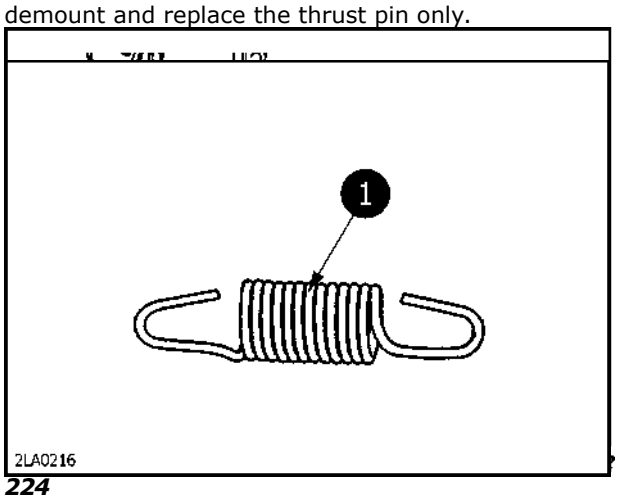

224

Spring inspection


Check the spring (1) of the regulator and the other springs. Replace them if they are broken, rusted or yielding.

https://truckmanualshub.com/

https://truckmanualshub.com/

Checking the torque adjuster spring assembly


1. Check the sliding surfaces of the thrust pin (1) and replace it if it is defective.
2. Replace the torque adjuster spring assembly (2) if the spring is broken.

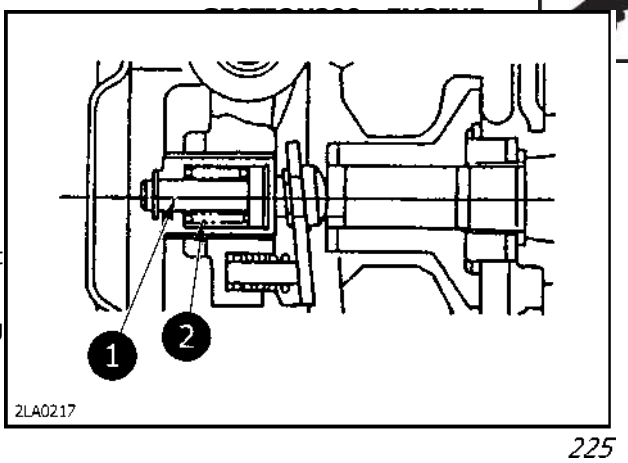

225

Checking the torsion spring assembly

1. Check the wear at the top of the piston (2) and the contact surface. Replace the parts if they appear to be worn or defective.

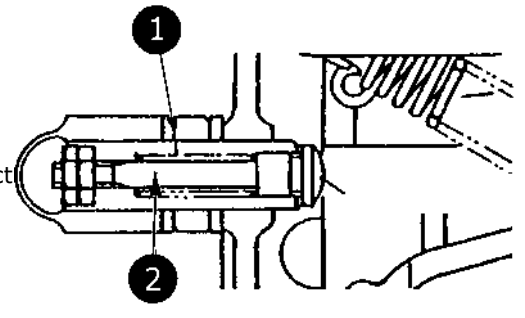

2. Replace the assembly if the torsion spring (1) is broken.

2LA0218

https://truckmanualshub.com/

SECTION 300

CLUTCH

https://truckmanualshub.com/

INDEX

Description	Page
GENERAL SPECIFICATIONS OF THE LX 9"/9" CLUTCH	300-3
DRIVING TORQUE VALUES	300-3
SPECIFIC EQUIPMENT	300-4
SECTIONS	300-5
TROUBLESHOOTING FOR THE CLUTCH ASSEMBLY	300-6
WHERE THE SEALANT IS APPLIED FORTHE CLUTCH HOUSING ON THE TRANSMISSION HOUSING	300-7
CLUTCH SPLITTING-REMOUNTING	300-8
Splitting	300-8
Remounting	300-16
CONTROL ADJUSTMENT GEARSHIFT CLUTCH	300-18
CONTROL ADJUSTMENT POWER TAKE-OFF CLUTCH	300-19

https://truckmanualshub.com/

GENERAL SPECIFICATIONS OF THE LX 9"/9" CLUTCH


Type	unit with two single-plate dry clutch assemblies
Control	mechanical: pedal operated for the gearshift clutch; with hand lever for the PTO clutch
Engaging and disengaging mechanism	single Belleville washer
Type of coating on the driven disc of the gearshift clutch	organic
Type of coating on the driven disc of the PTO clutch	organic

SPECIFIC EQUIPMENT

Code	Description
001 FRI MIS	Clutch assembly centring tool
002 FRI MIS	Clutch assembly adjuster tool
003 FRI MIS	Clutch assembly adjuster journal

https://truckmanualshub.com/

SECTIONS

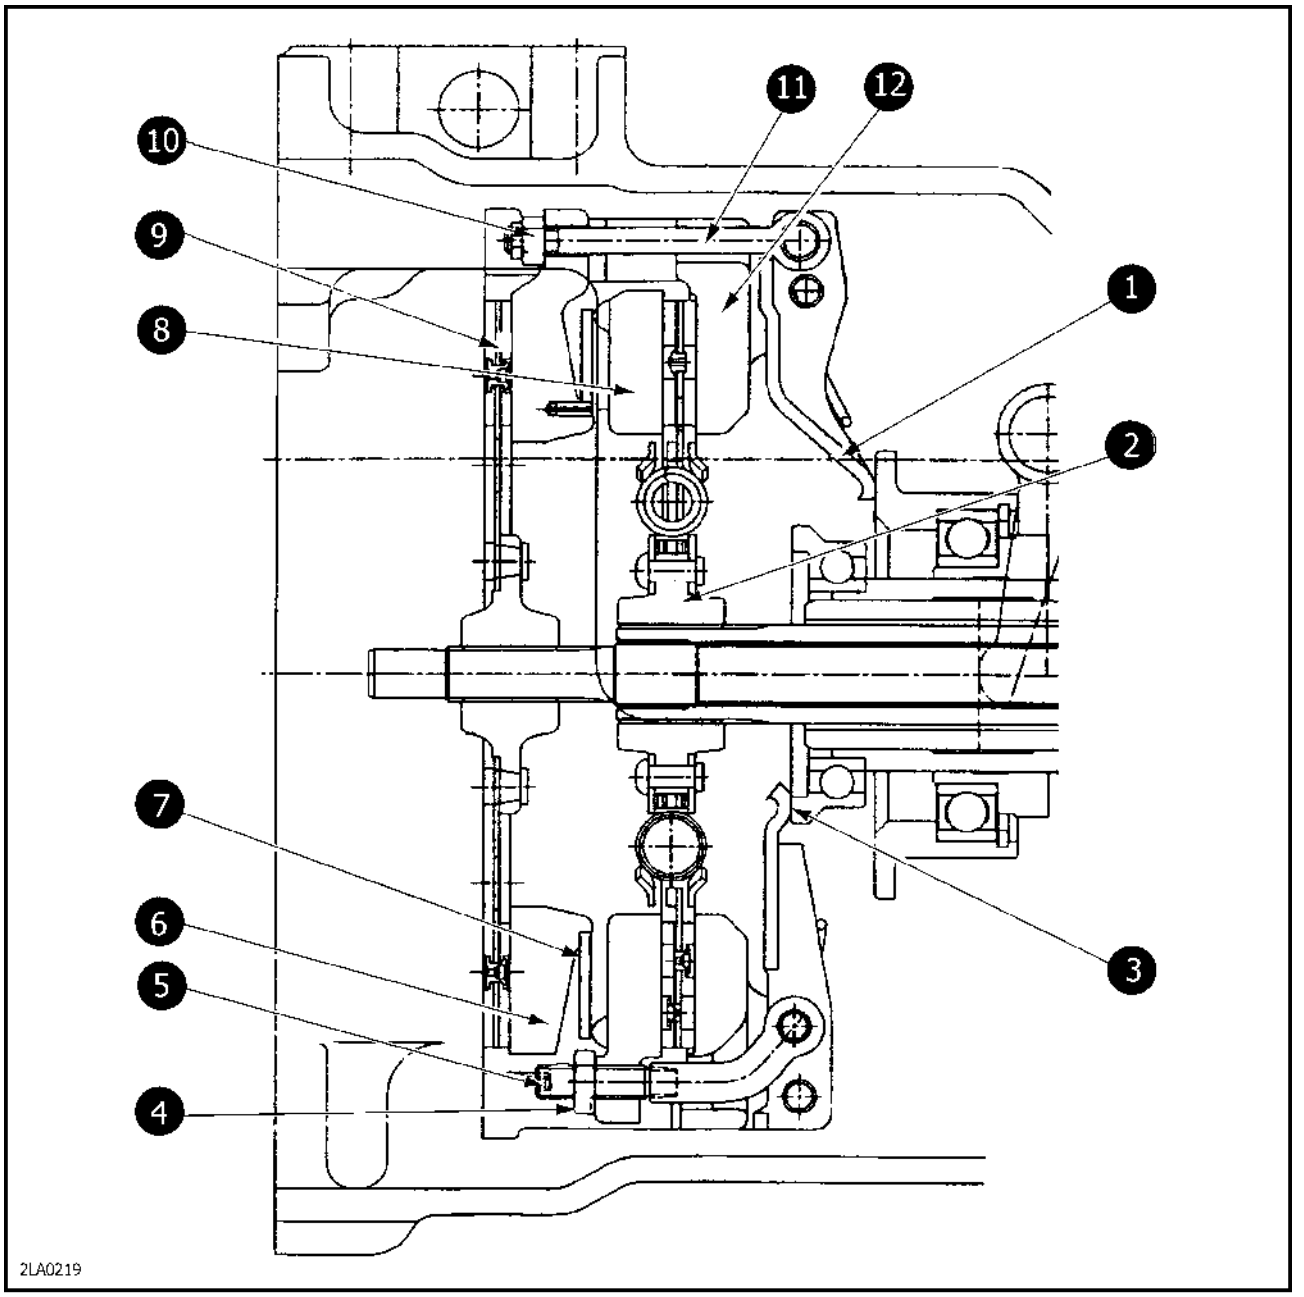

1

Longitudinal section of the Lx 9"/9" clutch


1. PTO clutch control lever
2. Gearshift clutch friction disc
3. Gearshift clutch control lever
4. Nut
5. Screw to adjust the height of the gearshift clutch disengaging lever
6. Pressure plate
7. Belleville washer
8. Pressure plate
9. PTO clutch friction disc
10. Nut to adjust height of PTO clutch control lever
11. Rod
12. Clutch unit

https://truckmanualshub.com/

TROUBLESHOOTING FOR THE CLUTCH ASSEMBLY

Faults	Possible causes	Remedies
The clutch slips	**1.** Wear on the discs (2 and 9, fig 1) of the pressure plates and flywheel.	Compare with the values given in the indicated pages. Replace excessively worn parts and adjust the levers and clutch controls.
	2. Belleville washer (7, fig. 1) stretched or damaged.	Replace the Belleville washer.
	3. Oil or grease on the disc friction material (2 and 9, fig. 1).	Replace the discs. Eliminate the cause that led to the presence of lubricant in the clutch housing and thoroughly clean the friction surfaces.
The clutch jerks	**1.** External controls hardened.	Check the hinging and lubricate.
	2. Warped clutch plate (2, fig. 1).	Replace the disc and adjust the clutch lever.
	3. Oil or grease on the disc friction surfaces (2 and 9, fig. 1).	Replace the discs. Eliminate the cause that led to the presence of lubricant in the clutch housing and thoroughly clean the friction surfaces.
The clutch fails to disengage and drags	**1.** Warped clutch plates (2 and 9, fig. 1).	Replace the discs (make the adjustments).
	2. External controls seized.	Check, replace the faulty parts and lubricate.
	3. Badly adjusted controls.	Adjust the controls (see page18).
Clutch noisy when engaged and/or disengaged	Worn thrust bearings. **1.**	Replace the bearing
	2. Clutch plate (2, fig. 1) with faulty springs.	Replace the plate.
Clutch pedal too hard to operate	**1.** External controls hardened.	Check the hinging and lubricate.
	2. Hardened pedal hinging.	Check the hinging and lubricate.

WHERE TH

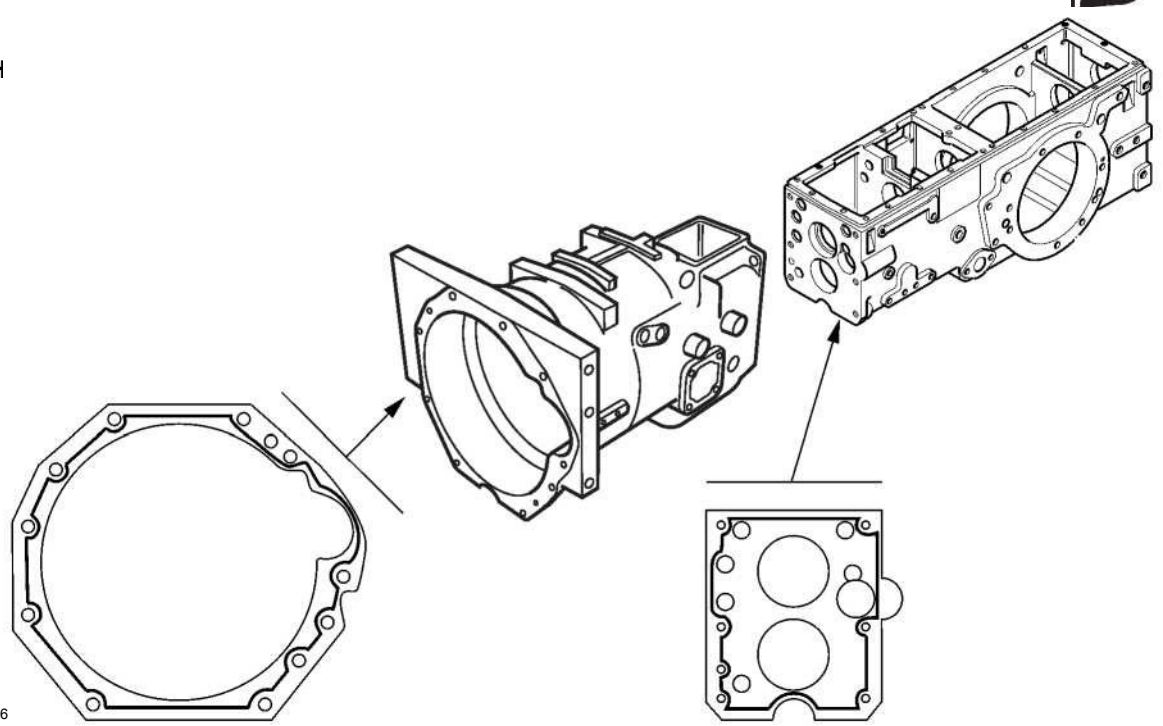

2LA0726

https://truckmanualshub.com/

The types of sealant to apply are indicated in section 100.

CLUTCH SPLITTING-

DANGER

Lift and handle all heavy parts with lifting equipment of an adequate capacity.
Make sure that the units of parts are supported by appropriately sized harness and hooks. Make sure that there are no bystanders near the load being lifted.


WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

REMOUNTING Splitting

Proceed as follows:

1. Unscrew the screw (1) and remove the bonnet.

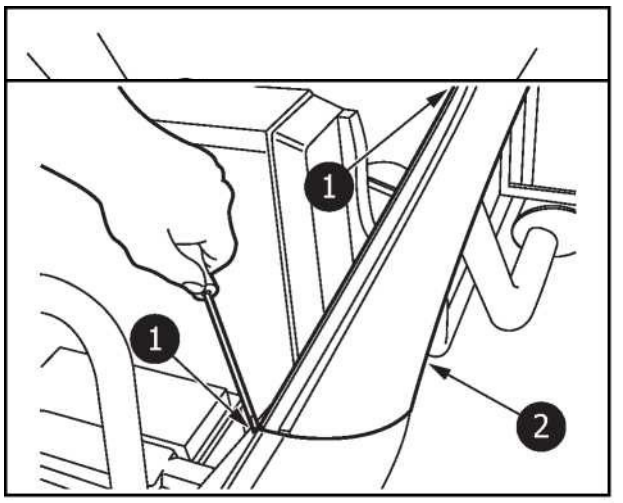


https://truckmanualshub.com/

2. Unscrew the fixing screws (1) and remove the side panels (2) (from both sides).


https://truckmanualshub.com/

3. Loosen the clamp bolt (1) and disconnect the negative battery wire.

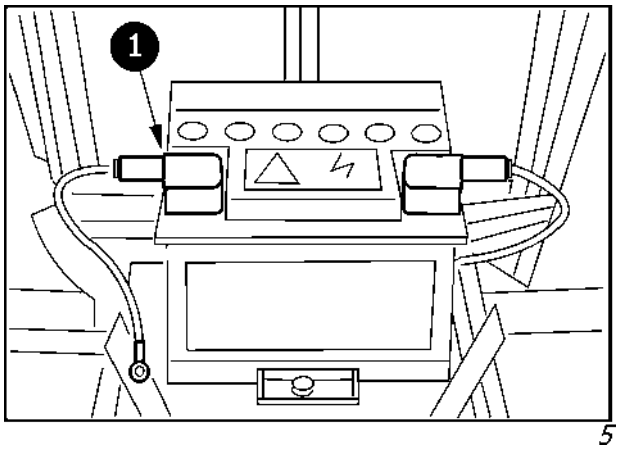


5

4. Fix the rear safety frame (2) to a hoist (1) and tighten the belt.

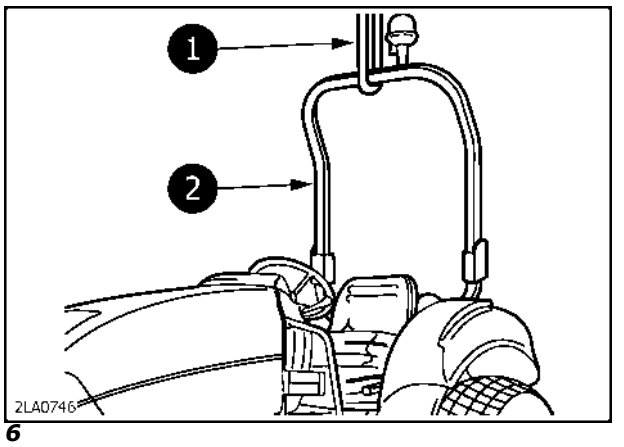


6

5. Unscrew the fixing screws (1) and remove the rear safety frame (2) by means of a hoist.

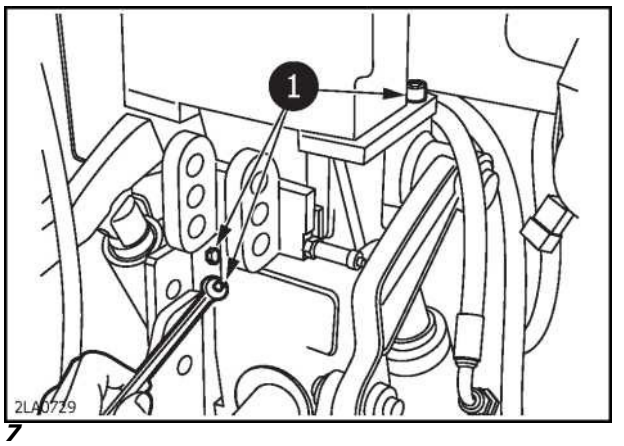

7


6. Detach the pedal accelerator wire (1) and the hand throttle wire (2).

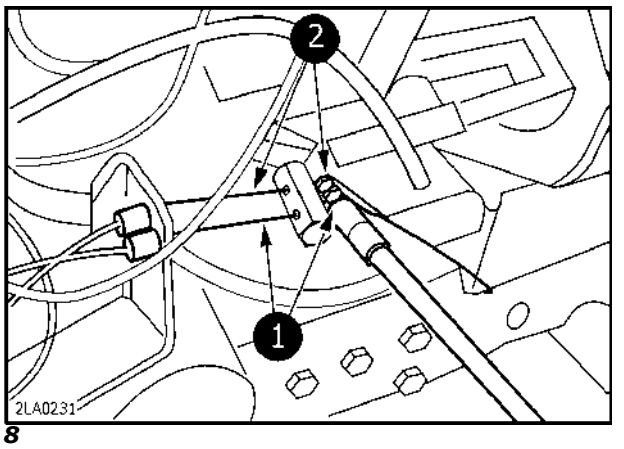

8


https://truckmanualshub.com/

7. Using a pin driver, remove the spring pin (1) and take out the gear lever (2).

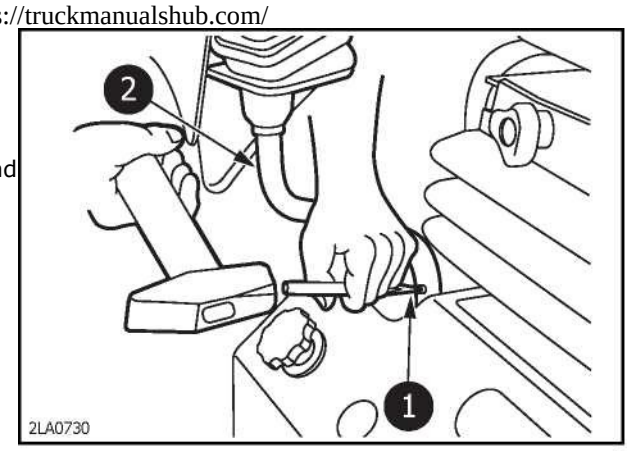


9

8. Unscrew the fixing screws (1) and remove the guard from the controls (2) on the right-hand side of the seat.

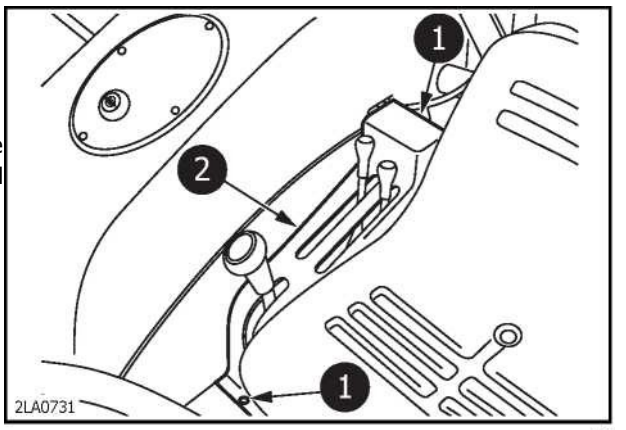


10

9. Unscrew the fixing screws (1) and remove the guard from the controls (2) on the left-hand side of the driver's position.

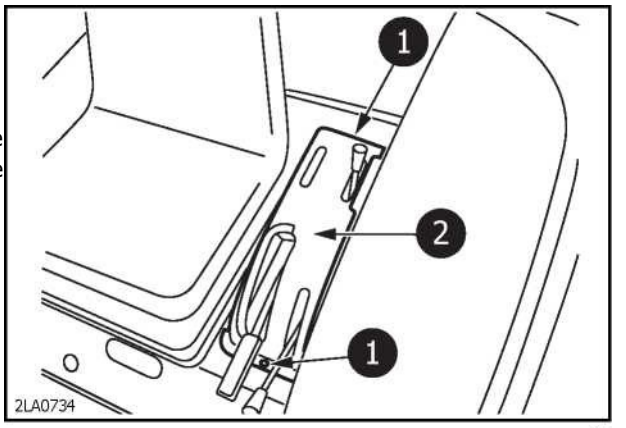

11


10. Unscrew the fixing screws (1) and remove the seat (2).

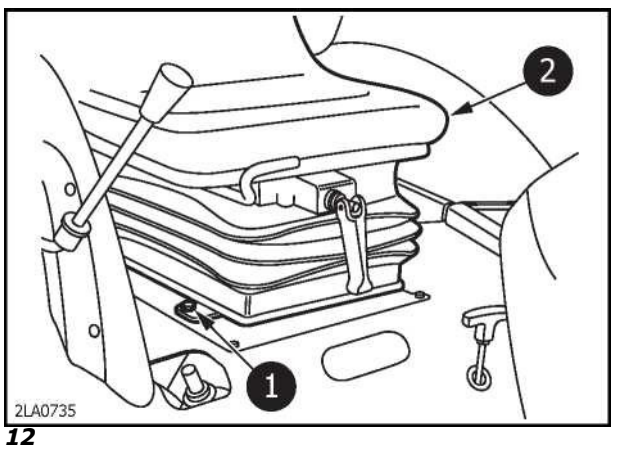

12


https://truckmanualshub.com/

11. Remove the knob (1) that regulates the sensitivity of the power lift and the 4WD engaging lever (2).

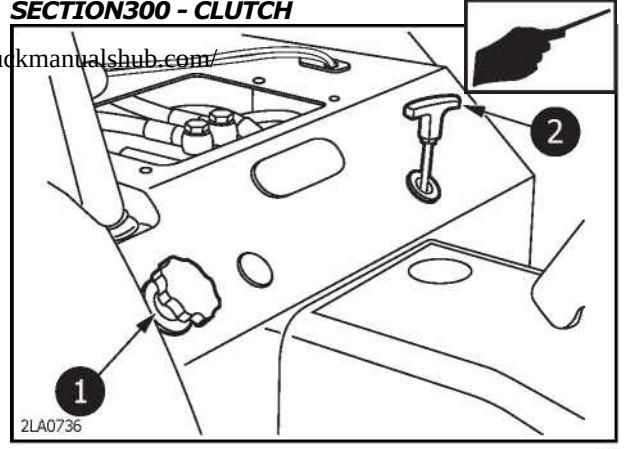


13

12. Disconnect the hydraulic pipe unions (1) from the auxiliary control valve unit.

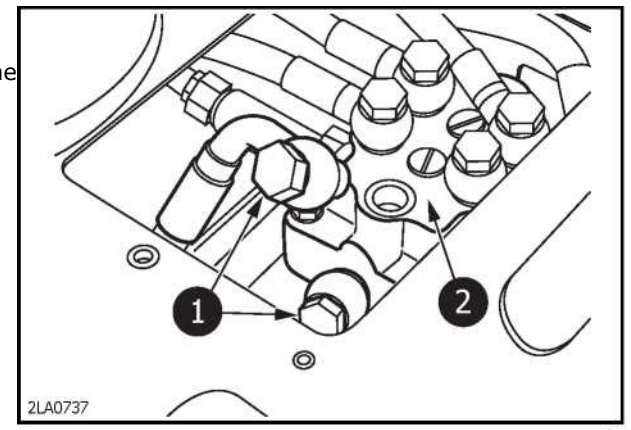


14

13. Disconnect the flexible cable (1) from the control lever (2) of the fork that disengages the gearshift clutch.

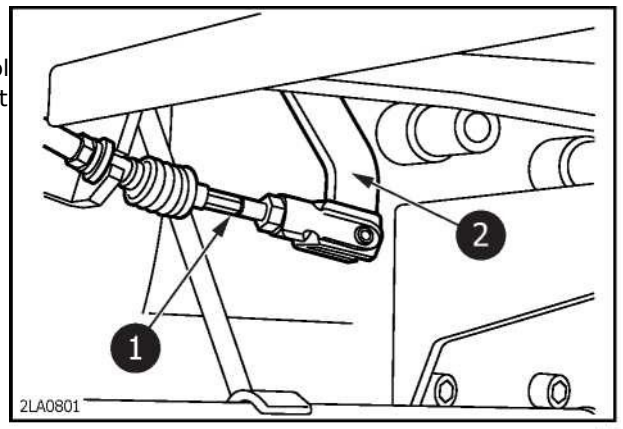

15


14. Disconnect the flexible cable (1) from the control lever (2) of the fork that disengages the PTO clutch.

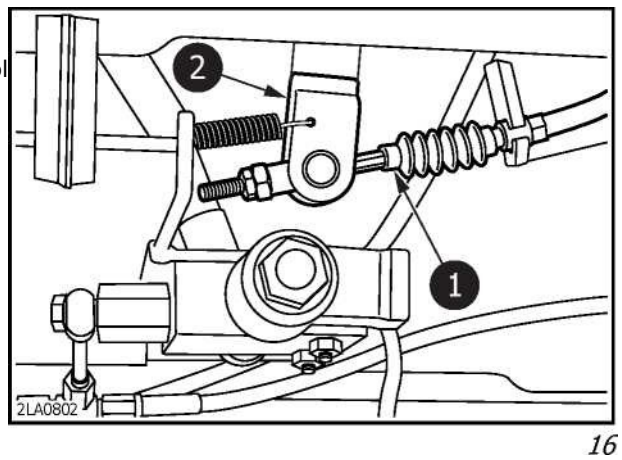

16


https://truckmanualshub.com/

15. Disconnect the flexible cable (1) that Controls the brake (on both sides).

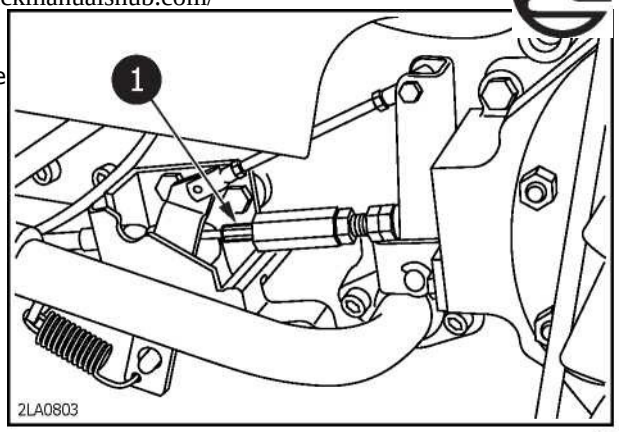


17

16. Disconnect the flexible cable (1) that controls the parking brake.

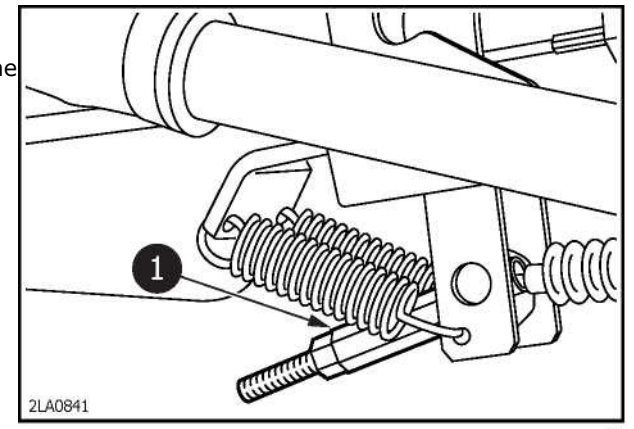


18

17. Disconnect the flexible cable (1) that controls PTO engagement, PTO speed selection (2) and the rigid rod that engages the 4WD (3).

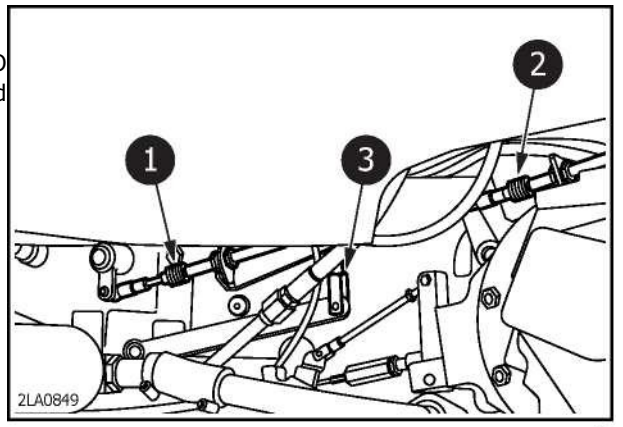

19

18. Disconnect the flexible cable (1) that controls the range selection function.

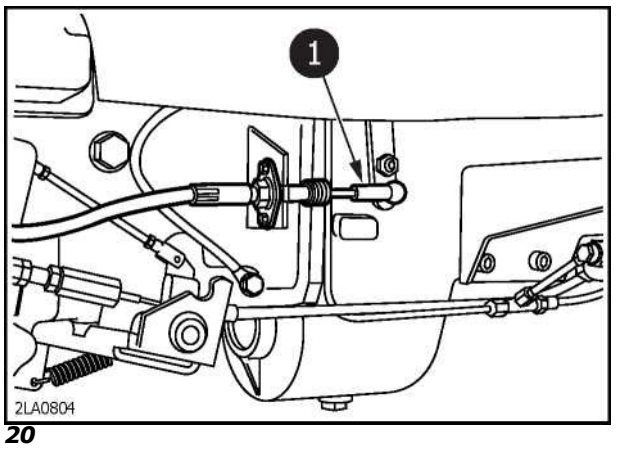


20

https://truckmanualshub.com/


19. Detach the rods (1) that control the power lift valve system.

21. Unscrew the rear fixing bolts (1) of the flexible support of the platform in the zone where the side final drive is installed on both sides of the tractor.

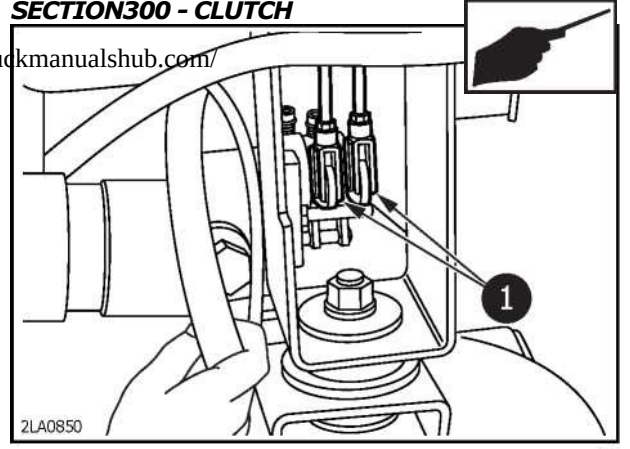

21


20. Unscrew the front fixing bolts (1) of the platform in the zone where the feet rest on both sides of the tractor.

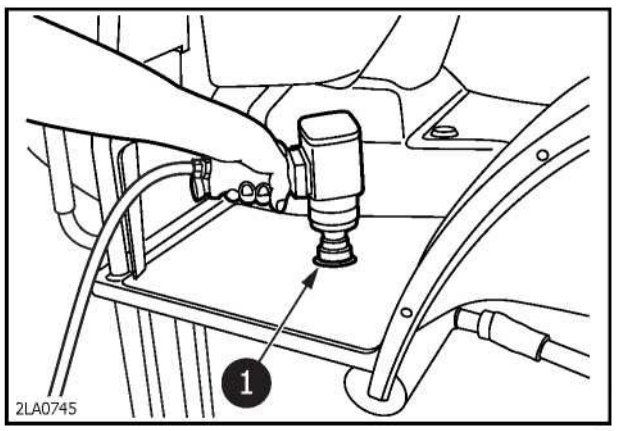

22


22. Detach the front ballast (if installed), using a hoist and two steel ropes.

23. Remove the oil from the gearbox - rear transmission, by unscrewing the plug under the gearbox itself.

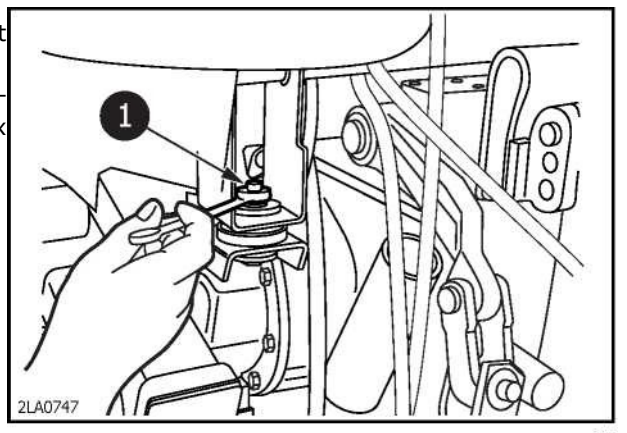

23


Old oil must be disposed of in compliance with the current laws in merit.

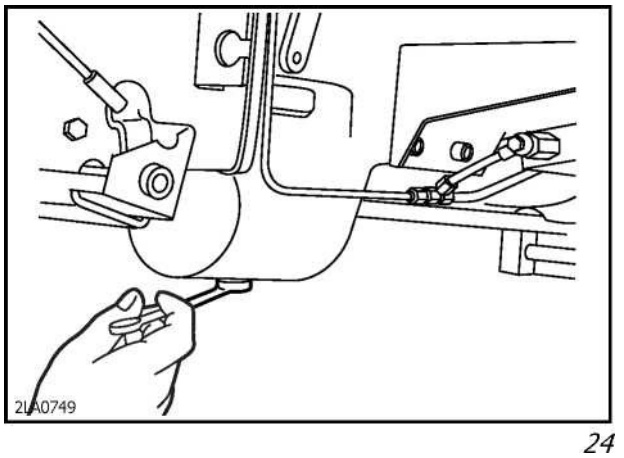

24

SECTION 300 - CLUTCH
https://truckmanualshub.com/


24. Remove the complete platform (2) using a hoist (1).

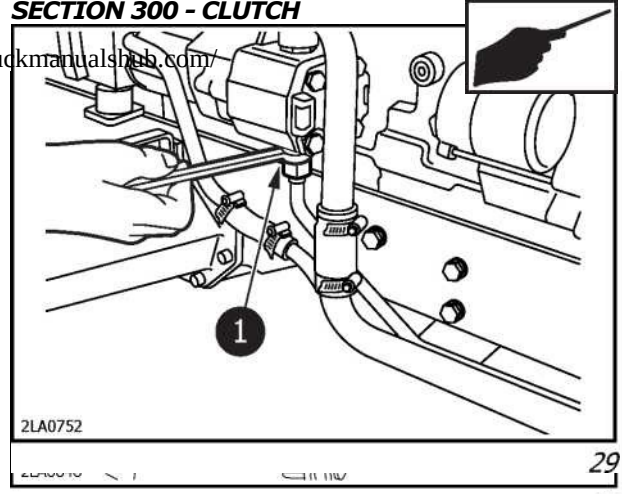

29


25

25. Using a pin driver, remove the spring pin (1), slide the coupling sleeve (2) and remove the 4WD shaft (3) (these operations must be carried out on both ends of the shaft).

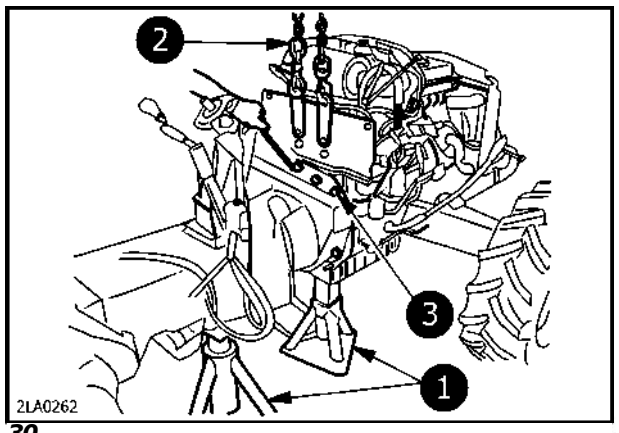

30


26. Disconnect the hydraulic pipe unions (1) from the diff lock solenoid valve (2) and disconnect the front diff lock hose (3).

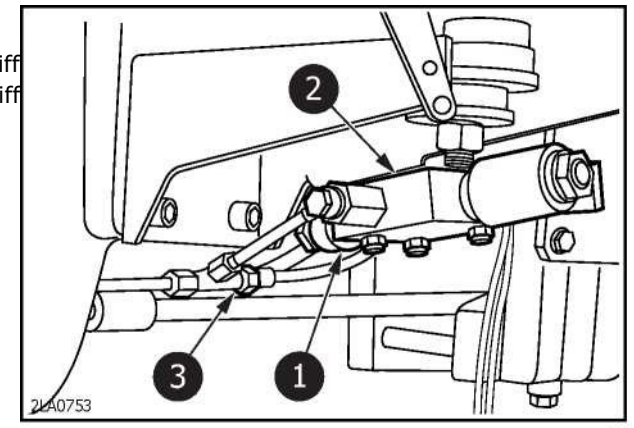

27

27. Loosen the closing clamps (1) and remove the transmission lubricating oil inlet hose (2).

28. Disconnect the union (1) of the oil delivery hose from the pump to the power lift valve system pump and to the auxiliary control valve.

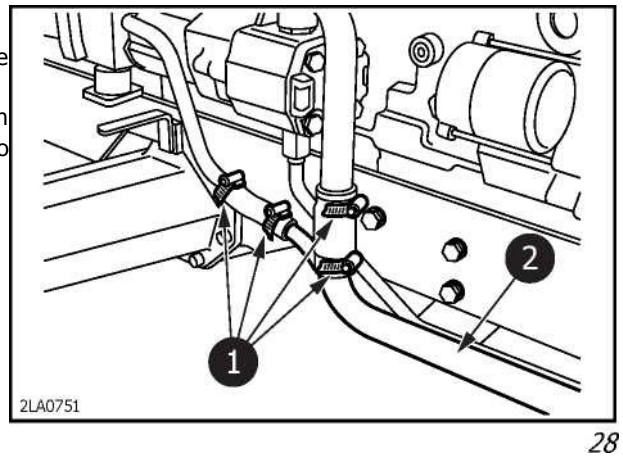


28

29. Place two fixed stands (1), one under the engine oil sump and the other under the fromt part of the clutch housing. Fix two chains (2) to the rear hooks on the engine and to the hoist and pull on this latter.

30. Block the front axle with a chock to prevent the engine from swinging, then unscrew the bolts (3) that fix the clutch housing to the engine and split the clutch housing from the engine.

https://truckmanualshub.com/

31. Using tool **001 FRI MIS** (1), unscrew the fixing screws (2) and remove the clutch (3).

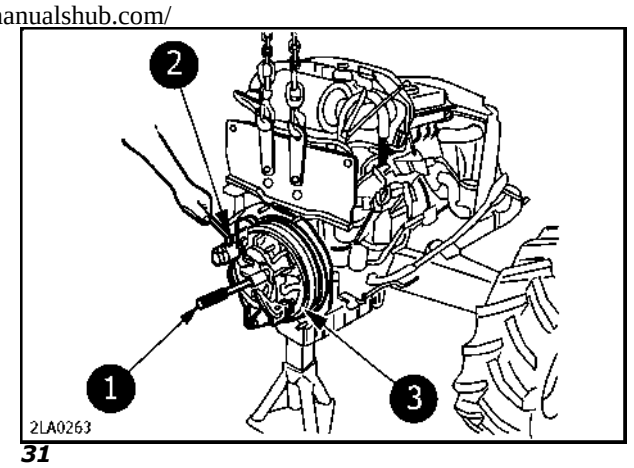

31

https://truckmanualshub.com/

Remounting

Fit the engine back on to the clutch housing bear- ing the following recommendations in mind:




WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.



Apply the driving torques listed on page 3.



Before the engine is fitted back on to the clutch housing, thoroughly clean and degrease the surfaces to be coupled and apply a strip of seal- ant with a diameter of about 2 mm, following the line shown on page 7. 7.



Fix the clutch back on to the flywheel using tool **001 FRI MIS**.

Using tool **002 FRI MIS** and cross **003 FRI MIS** , adjust the clutch levers in order to obtain

1. 1 mm play between the end of the actual lever and the cross.

- Using a hoist, couple the engine-front axle assembly and fix it in place.
- Connect the hose that delivers oil to the power lift valve system and to the auxiliary control valve.
- Connect the gearbox lubricating oil hose.
- Connect the hydraulic hoses of the front and rear differential locks.
- Remount the 4WD shaft.
- Screw on the plug that drains the oil from the rear transmission oil and fill with oil (see sec- tion 100).
- Position and fix the platform.
- Position and fix the rear safety frame.
- Connect the control rods of the power lift valve system.
- Connect the flexible cable that controls the range selection function.
- Connect the 4WD engaging rod.


https://truckmanualshub.com/



- Connect the flexible cable that selects the PTO speed.
- Connect the flexible cable that engages the PTO.
- Connect the brake cables.
- Connect the flexible cable of the PTO clutch control lever.
- Connect the flexible cable of the gearshift clutch control lever.
- Position and fix the lifting valve system.
- Position and fix the seat.
- Connect the accelerator control cables.
- Position and fix the rear safety frame.
- Fix the side panels of the engine in place.
- Fix the bonnet in place.


CONTROL ADJUSTMENT
GEARSHIFT CLUTCH

2. Loosen the check nut (1).

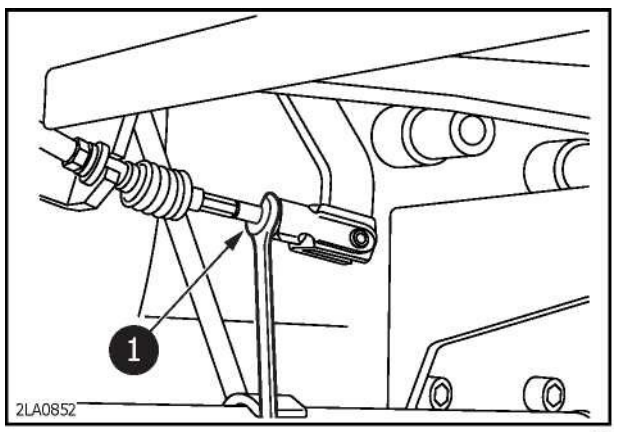


32

3. Remove the fixing pin (1) and disconnect the fork (2) from the clutch control lever (3). Tighten or loosen the fork in order to adjust the clutch control.

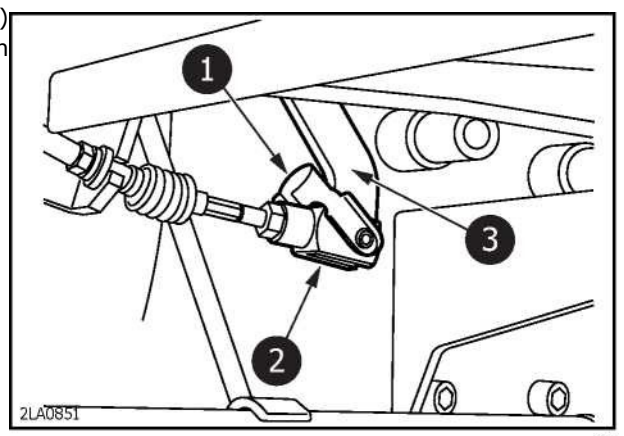

33

4. Re-position the fork (2, fig. 33) and the fixing pin (1, fig. 33).
5. Make sure that the clutch pedal (1) travel is between 15 and 25 mm.
6. Lock the check nut (1, fig. 32).

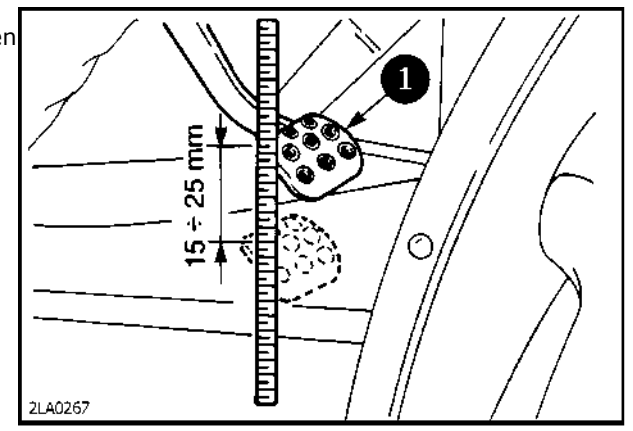


34

https://truckmanualshub.com/

CONTROL ADJUSTMENT POWER TAKE-OFF CLUTCH


1. Loosen the check nut (1). Tighten or loosen the adjuster (2) to regulate the clutch control.

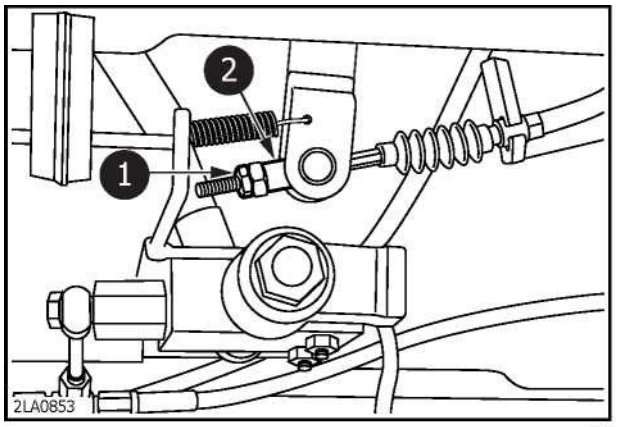

35

2. Make sure that the idle travel of the clutch pedal (1) is between 25 and 30 mm.

3. Lock the check nut (1, fig. 35).

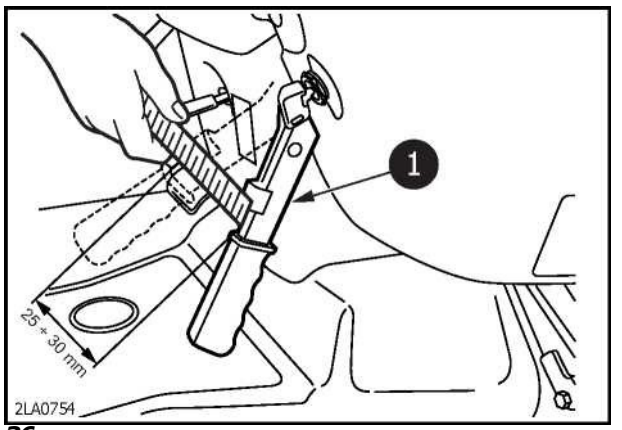

https://truckmanualshub.com/

SECTION 400

(12 + 12) AND (16 + 16) MECHANICAL GEARBOX

INDEX

Description

MAIN SPECIFICATIONS OF THE GEARBOX AND FINAL DRIVE 400-3

MAIN SPECIFICATIONS OF REVERSE SHUTTLE .....

https://truckmanualshub.com/

SECTION 400

MAIN SPECIFICATIONS OF THE SUPPLEMENTARY FINAL DRIVE (16 + 16

VERSION).....

400-3

DRIVING TORQUE VALUES.....

SECTIONS.....

DESCRIPTION AND OPERATION.....
Gearbox and reverse shuttle .....

https://truckmanualshub.com/

SECTION 400

Supplementary final drive (16 + 16 version).....

TROUBLESHOOTING FOR THE GEARBOX, FINAL DRIVE AND REVERSE SHUTTLE 400-8

TROUBLESHOOTING FOR THE SUPPLEMENTARY FINAL DRIVE (16-16 VERSION) 400-9

https://truckmanualshub.com/

SECTION 400

WHERE THE SEALANT IS APPLIED FOR THE GEARBOX-REAR TRANSMISSION HOUSING

400-10

GEARBOX TRANSMISSION HOUSING SPLITTING-REMOUNTING .....
Splitting.....
Remounting.....

GEARBOX TRANSMISSION HOUSING - OVERHAUL.....
Demounting.....
Assembly.....

https://truckmanualshub.com/

SECTION 400

Main shaft float adjustment.....
Reverse shuttle gear float adjustment .....

CLUTCH HOUSING - OVERHAUL.....
Demounting.....
Assembly.....

https://truckmanualshub.com/

MAIN SPECIFICATIONS OF THE GEARBOX AND FINAL DRIVE

Gearbox	with 4 ratios, infinitely meshed gears and synchronizers for all speeds
Type of gears.....	with helical toothing
Final drive..... . . . (mm)	cascade type with 3 speed ranges for a total 12 speeds.
- Type of gears..... . . . (mm)	with straight toothing
Gearbox and final drive controls..... . . . (mm)	independent, with lever installed on the operator's right, under the steering wheel
Thickness of main shaft adjuster ring (SP_2, fig. 3)..... . . . (mm)	1.00 - 1.10 - 1.20 - 1.30 - 1.40 - 1.50 - 1.60 - 1.70 - 1.80
Thickness of reverse shuttle gear adjuster ring (SP^ fig. 2)..... . . . (mm)	1.00 - 1.10 - 1.20 - 1.30 - 1.40 - 1.50 - 1.60 - 1.70 - 1.80


MAIN SPECIFICATIONS OF REVERSE SHUTTLE

Type	mechanical with straight teeth, installed between the main clutch and gearbox.
Control.....	by means of dedicated lever on the operator's left

MAIN SPECIFICATIONS OF THE SUPPLEMENTARY FINAL DRIVE (16 + 16 VERSION)

Type	cascade with straight teeth, installed between the gearbox and bevel gear pair. Obtains 16 forward and 16 reverse speeds
Control ...	cated lever on 's right

DRIVIN

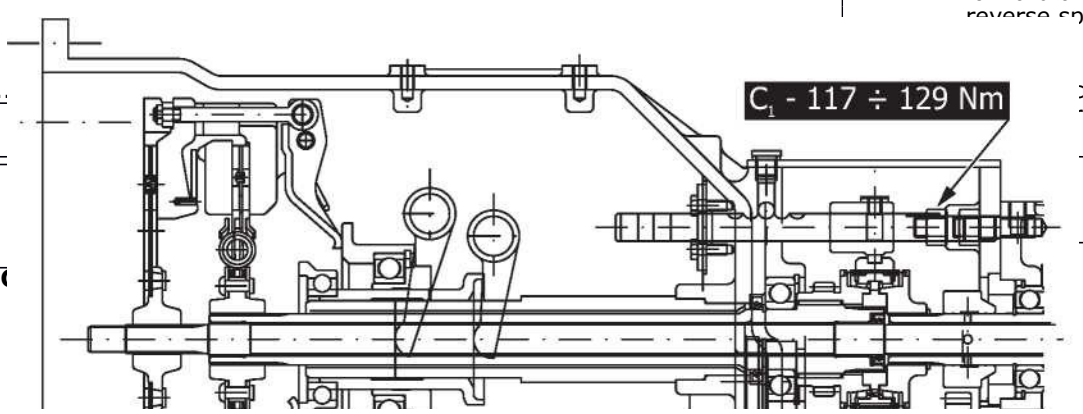

1

PARTS TO TORQUE	Thread	Driving torque values	
		Nm	kgm
Screw fixing the clutch housing to the gearbox-rear transmission housing (C_1).....	M 12 x 1.25	117 - 129	11.9 - 13.1
Gearbox housing cover fixing screws.....	-	43 - 51	4.4 - 5.2
Pressure switches.....	-	51 - 72	5.2 - 7.3


4003

https://truckmanualshub.com/

https://truckmanualshub.com/

SECTION 400 - (12 + 12) AND (16 + 16) MECHANICAL GEARBOX

SECTIONS

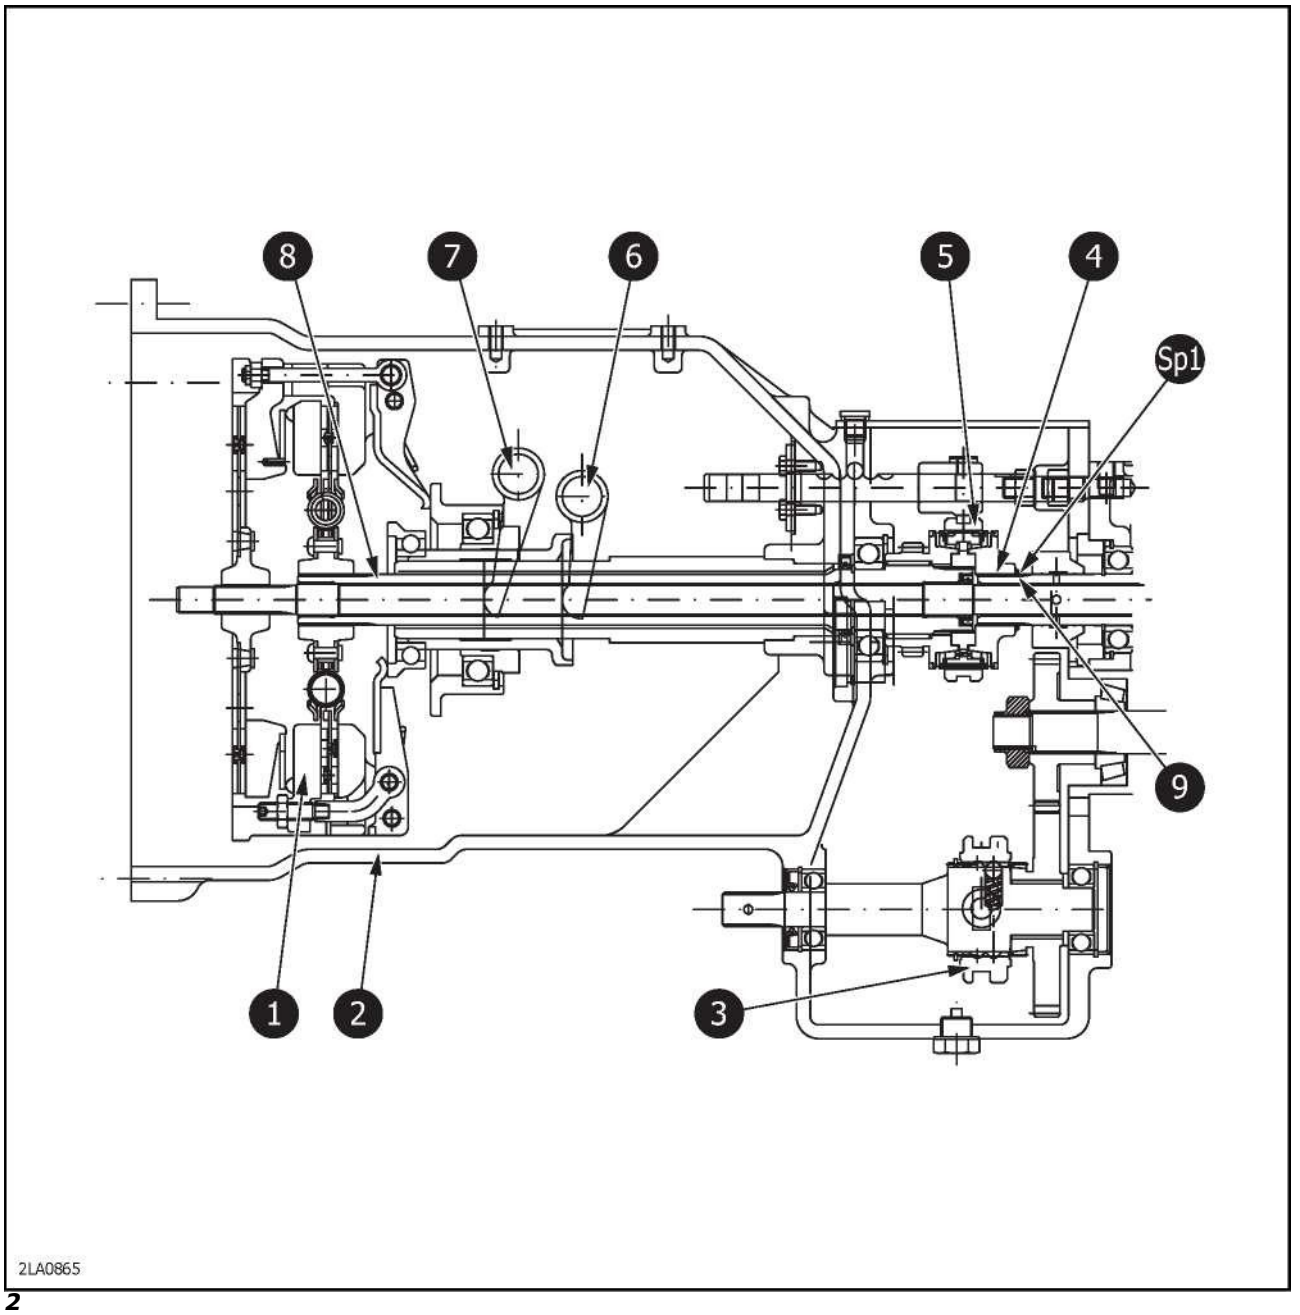


2

Longitudinal section of the clutch housing
Thi Adjuster shims.

1. Clutch
2. Clutch housing.
3. 4WD engaging unit.
4. Reverse shuttle unit.
5. Reverse shuttle engaging unit.
6. Shaft for gearbox disc disengaging fork.
7. Shaft for PTO disc disengaging fork.
8. Gearshift control shaft.
9. Spring ring.

https://truckmanualshub.com/

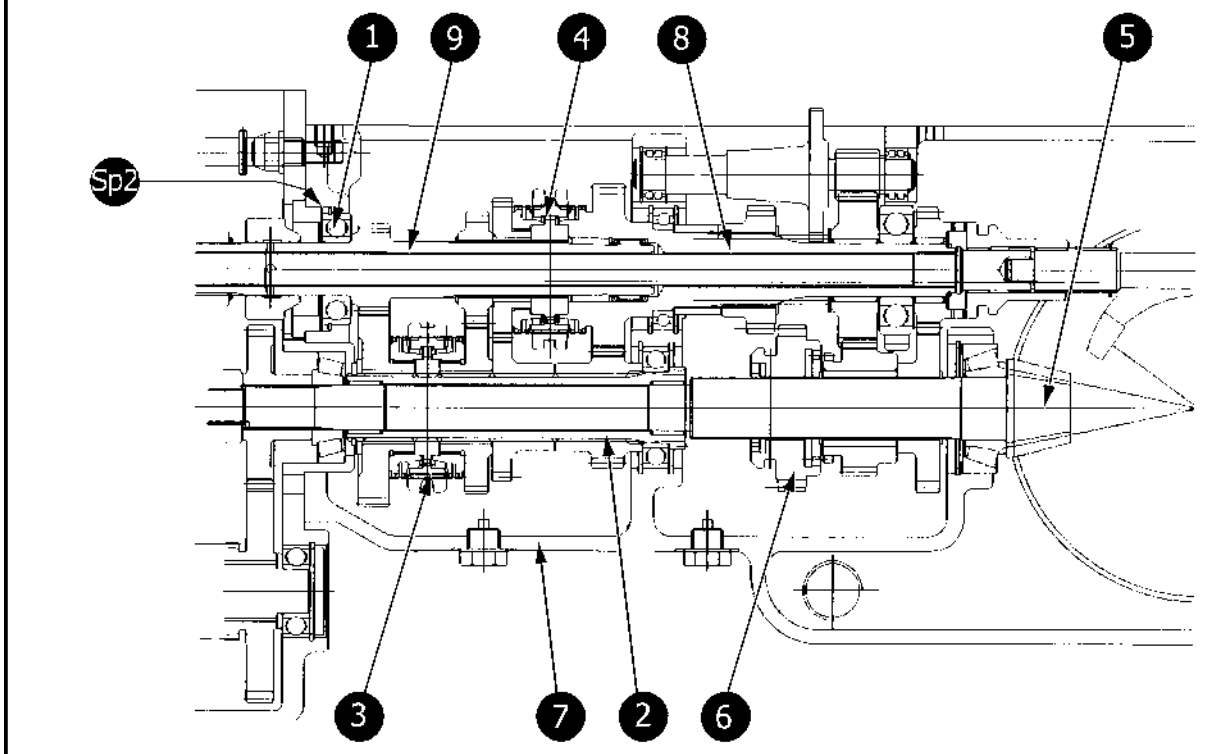

3

Longitudinal section of the gearbox and range reduction unit (12 + 12)

Sh_2 Adjuster shims.

1. Ball bearings.
2. Transmission shaft.
3. 1st and 2nd gear synchro-mesh unit.
4. 3rd and 4th gear synchro-mesh unit.
5. Range selector.
6. Gearbox.
7. Upper shaft.
8. Main shaft.
9. Bevel pinion.

<n

SECTION 400 - (12 + 12) AND (16 + 16) MECHANICAL GEARBOX

https://truckmanualshub.com/

TROUBLESHOOTING FOR THE GEARBOX, FINAL DRIVE AND REVERSE SHUTTLE


Faults	Possible causes	Remedies
The gearbox, final drive or reverse shuttle disengage spontaneously.	Transmission rods and levers incorrectly adjusted.	Adjust correctly.
	Faulty control rod retention springs.	Replace the springs.
	3. Faulty synchromesh engaging teeth or engaging sleeves.	Remove the gearbox-transmission housing and replace the synchromesh units or engaging sleeves.
	Incomplete engagement travel.	Eliminate the causes and adjust for complete travel.
The gearbox, final drive or reverse shuttle are difficult to engage.	Transmission rods and levers incorrectly adjusted.	Adjust correctly.
	Transmission rods and levers hardened and/or seized.	Check the hinging and lubricate.
	The central clutch drags.	See sect. 18.
	Faulty synchromesh units or engaging sleeves.	Remove the gearbox-transmission housing and replace the synchromesh units or engaging sleeves.
	5. The internal controls do not slide smoothly. rods, forks and sleeves.	Overhaul the controls.
The gearbox, final drive or reverse shuttle operate in a noisy way.	Some internal component is worn or defective.	Remove the gearbox-transmission housing and replace the faulty parts.

TROUBLESHOOTING FOR THE SUPPLEMENTARY FINAL DRIVE (16-16 VERSION)

Faults	Possible causes	Remedies
The supplementary final drive disengages spontaneously.	**1.** External transmission rods and levers incorrectly adjusted.	Adjust correctly.
	2. Incomplete engagement travel.	Eliminate the causes and adjust for complete travel.
The supplementary final drive is difficult to engage.	**1.** External rods and levers incorrectly adjusted.	Adjust correctly.
	2. External rods and levers hardened and/or seized.	Check the hinging and lubricate.
	3. The central clutch drags.	See sect. 18.
	4. The internal controls do not slide smoothly. rods, forks and sleeves.	Overhaul the controls.
The supplementary final drive operates in a noisy way.	**1.** Some internal component is worn or defective.	Remove the clutch housing and replace the faulty parts.

WHERE THE SEALANT IS APPLIED FOR THE GEARBOX-REAR TRANSMISSION HOUSING

https://truckmanualshub.com/

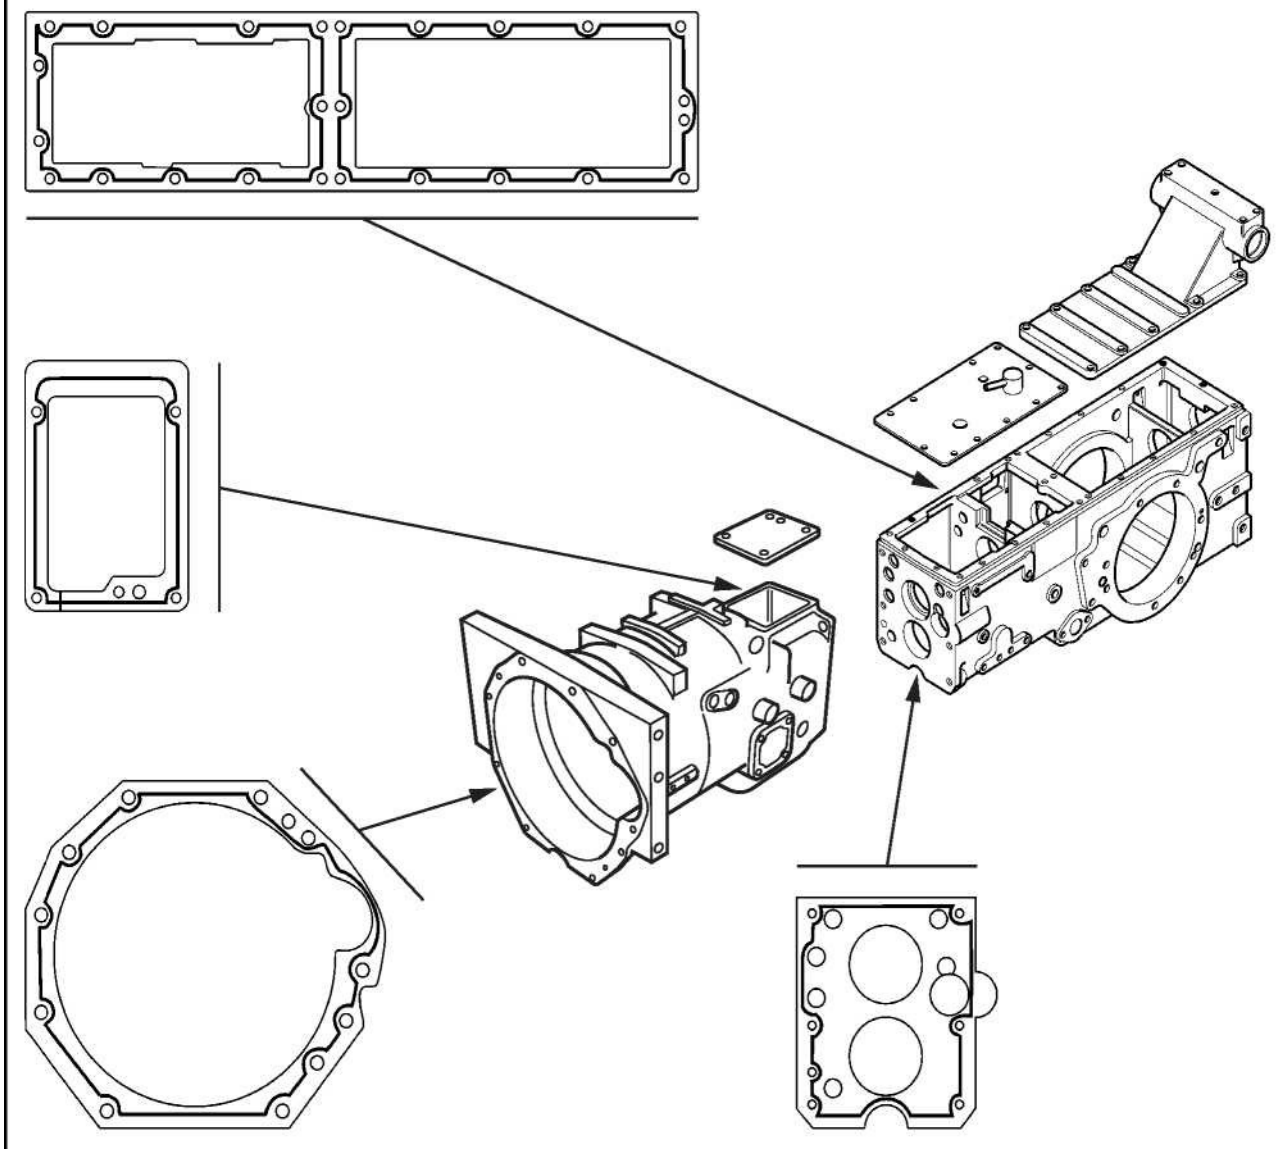

2LA0275

The types of sealant to apply are indicated in section 100.

https://truckmanualshub.com/

GEARBOX TRANSMISSION HOUSING SPLITTING-REMOUNTING

Splitting

Proceed as follows:

DANGER


Lift and handle all heavy parts with lifting equipment of an adequate capacity.
Make sure that the units or parts are supported by appropriately sized harness and hooks.
Make sure that there are no bystanders near the load being lifted.

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.


1. Split the clutch (see section 300 up to point 29).

2. Unscrew the fixing screws (1) (2) and remove the cover (3) (4) of the gearbox.

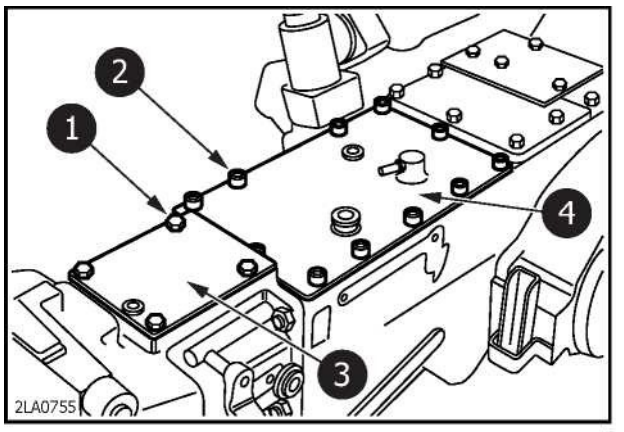

5


3. Remove the spring ring (1) and take out the reverse gear (2).

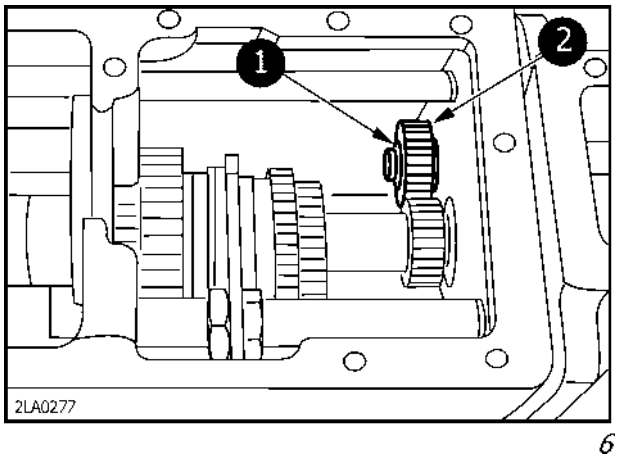

6


https://truckmanualshub.com/

4. Unscrew the lubrication union (1) of the main shaft.

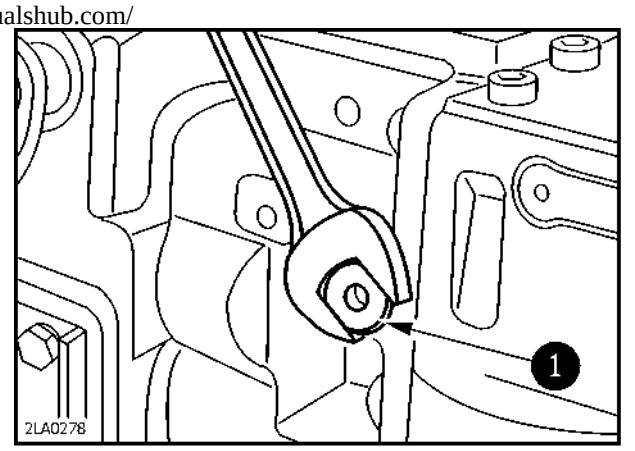


7

5. Remove the spring ring (1) and take out the PTO engaging lever (2).

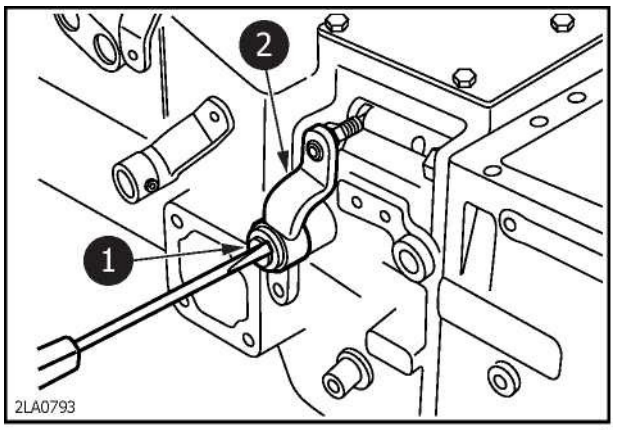


8

6. Remove the spring ring (1) in order to remove the 4WD engaging lever (2).

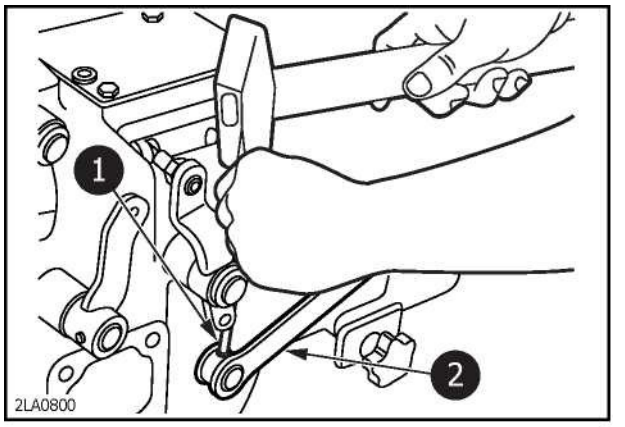

9


7. Remove the spring ring (1) and take out the range selection lever (2).

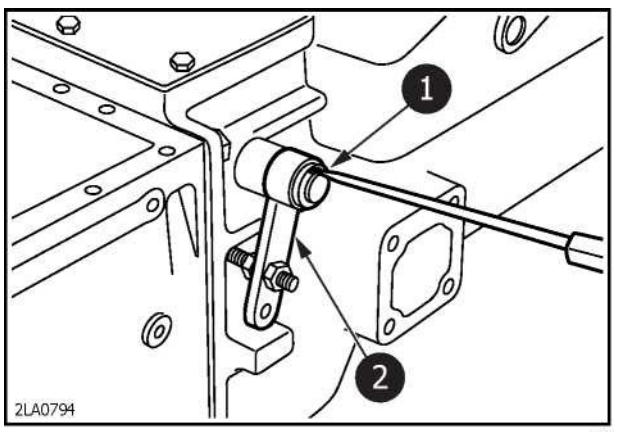

10

https://truckmanualshub.com/

8. Unscrew the fixing screws and split the clutch housing (1) from the gearbox - rear transmis- sion housing (2).

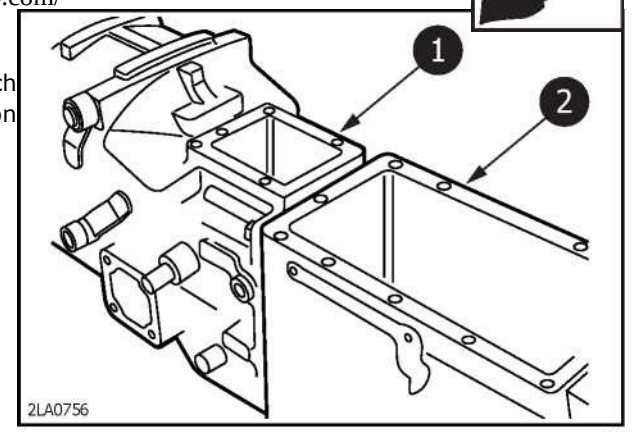

11

Remounting

Comply with the following recommendations when remounting the gearbox-rear transmission housing:

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

- Consult figures 2 and 3 in order to position the various parts correctly.
- Before remounting the housings, supports and covers, thoroughly clean and degrease the cou- pling surfaces and apply a strip of sealant about 2 mm in diameter as indicated in figure 4.
- Apply the driving torques listed on page 4.
- Fit the clutch housing back on to the gearbox- rear transmission housing.
- Mount the range selection lever, the 4WD engaging lever and the PTO engaging lever.
- Mount the union of the main shaft lubrication hose.
- Mount the reverse gear and relative spring ring.
- Position and fix the gearbox covers.
- Re-connect the clutch (see section 300).

GEARBOX TRANSMISSION HOUSING - OVERHAUL

Demounting


Proceed as follows:

WARNING


Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

1. Fix the gearbox-transmission housing to a fixed stand.

2. Unscrew the fixing screws (1) and remove the gear lever assembly (2).

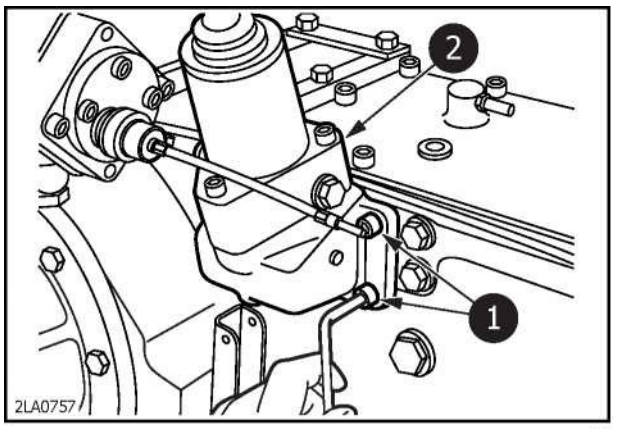

12

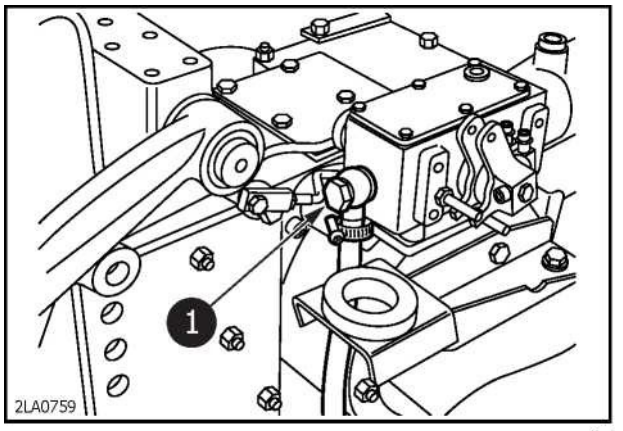


14

https://truckmanualshub.com/

3. Detach the power lift valve gear transmission rods (1).
4. Unscrew the hydraulic hose union (1) of the valve system.


https://truckmanualshub.com/

5. Unscrew the fixing screws (1) and remove the valve system (2) of the power lift.

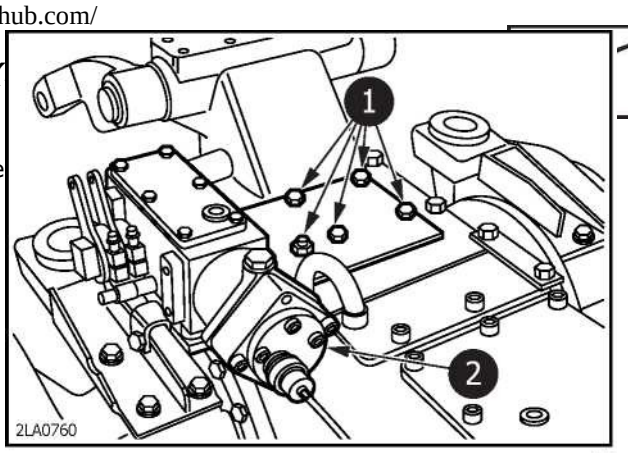


15

6. Take out the pin (1) that connects the cylinders to the lifting links. Unscrew the bolt (2) that fixes the power lift cover.

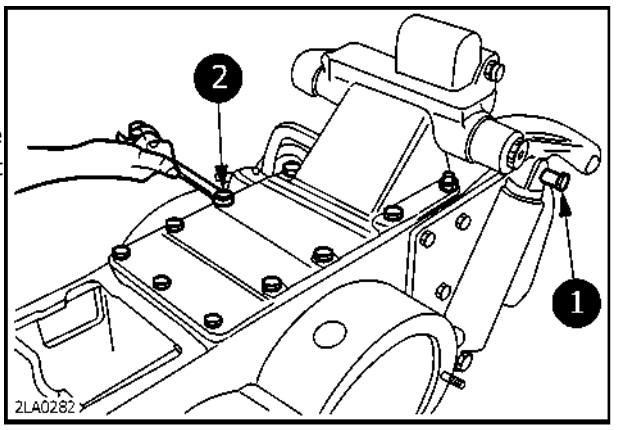


16

7. Fix the hoist chains (1) to the power lift cover (2) and remove it.

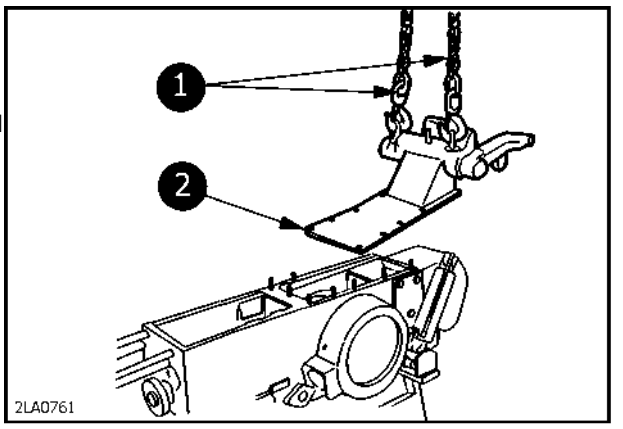

17


8. Remove the control shaft of the rear PTO (1).

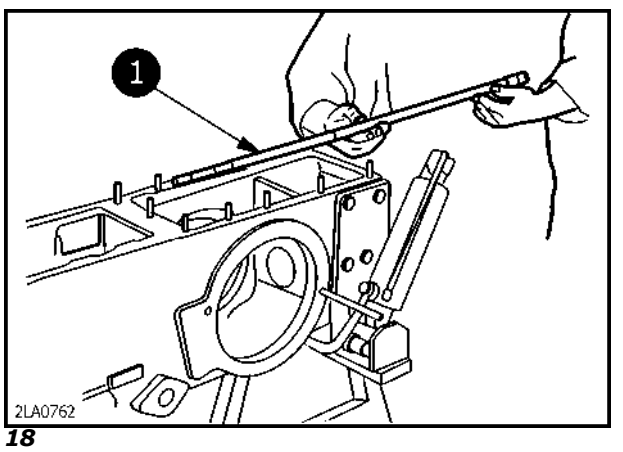

18


https://truckmanualshub.com/

9. Unscrew the closing plugs (1) and recover the retainer balls and springs of the rods.

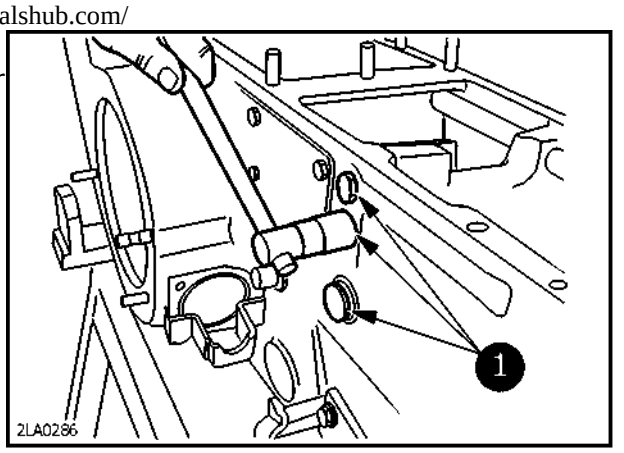


19

10. Using a pin driver, remove the spring pins (1) that hold the gear engaging forks (2) in place.

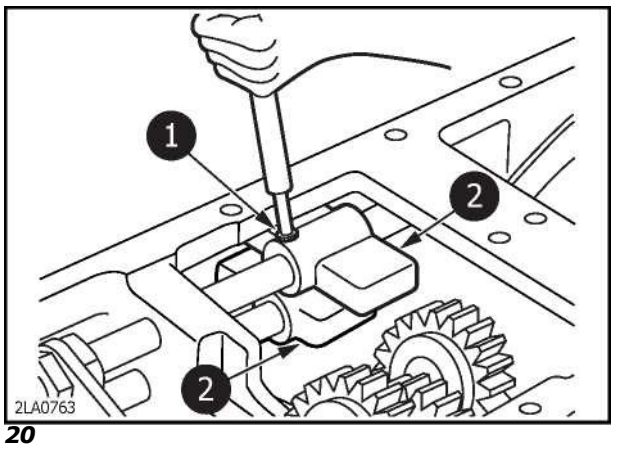


20

11. Unscrew the lock nuts (1), take out the rods (2) and recover the synchromesh forks (3).

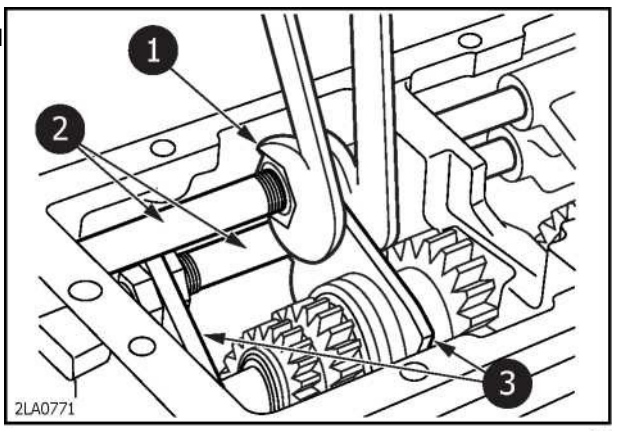

21


12. Remove the spring ring (1) of the main shaft. Remove the lubrication collar (2) and recover the spacer and adjuster shims.

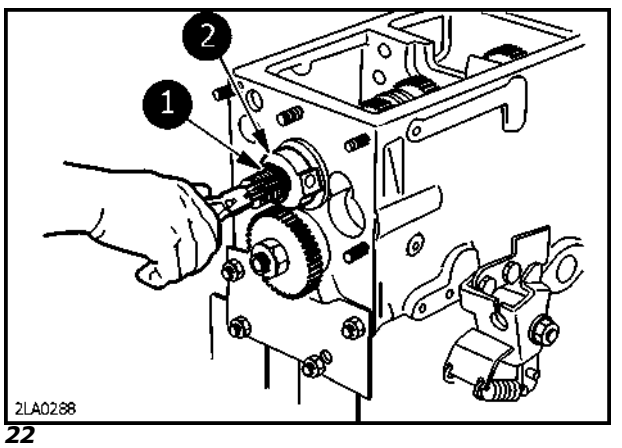

22


https://truckmanualshub.com/

13. Take out the front part of the main shaft (1) and recover the bronze bush (2).

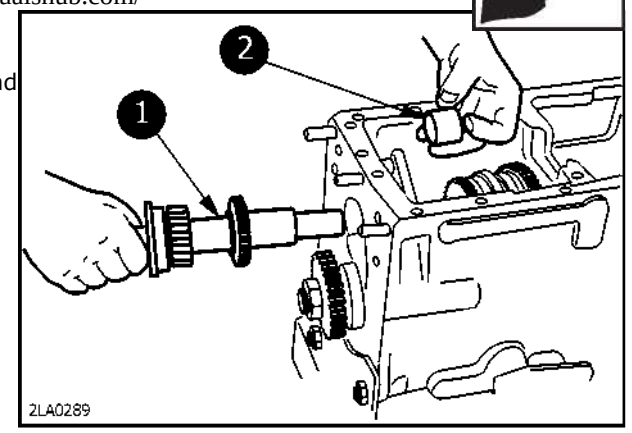


23

14. Remove the spring ring (1) that holds the upper shaft.

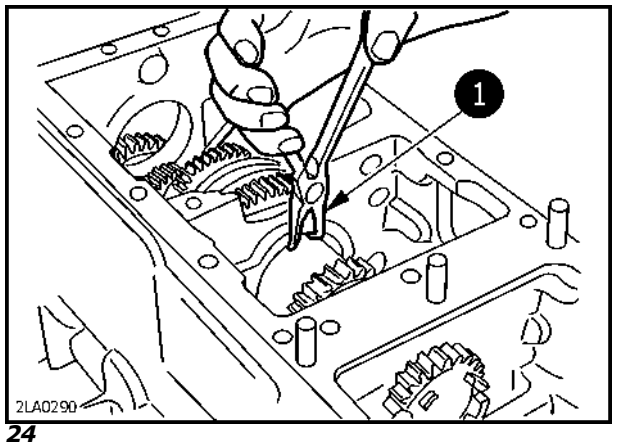


24

15. Retract the upper shaft, recover the synchro-mesh (1) of the 3rd and 4th gear and the engaging fork (2) of the 1st and 2nd gear.

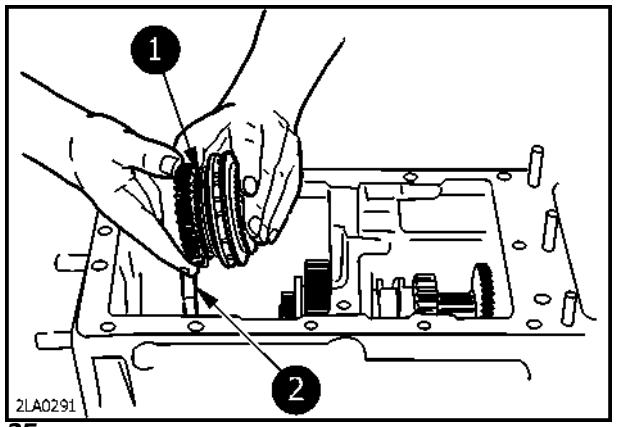

25


16. Remove the spring ring (1) and take out the PTO gear (2). Recover the washer and bearing.

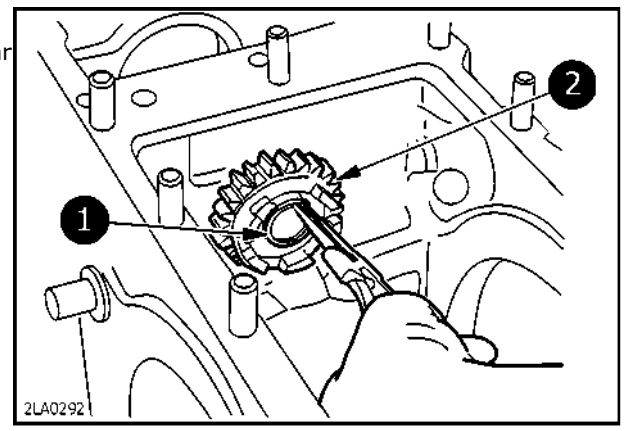

26


https://truckmanualshub.com/

17. Remove the front spring ring (1).

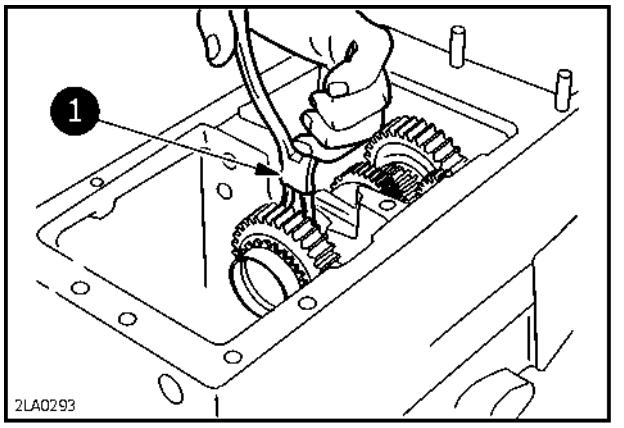


27

18. Take out the rear part of the main shaft (1) and recover its components (2).

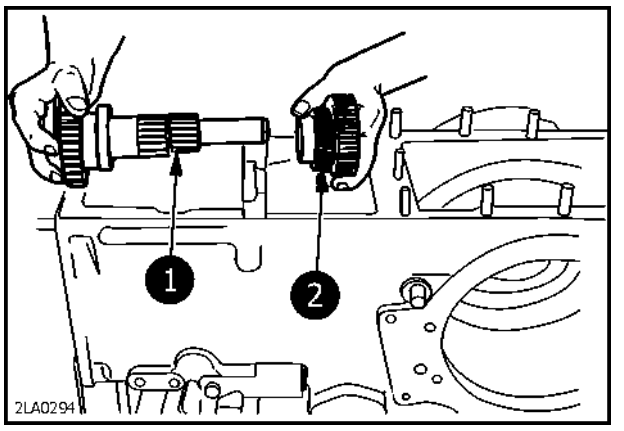


19. Recover the fork (1) that engages the ranges.

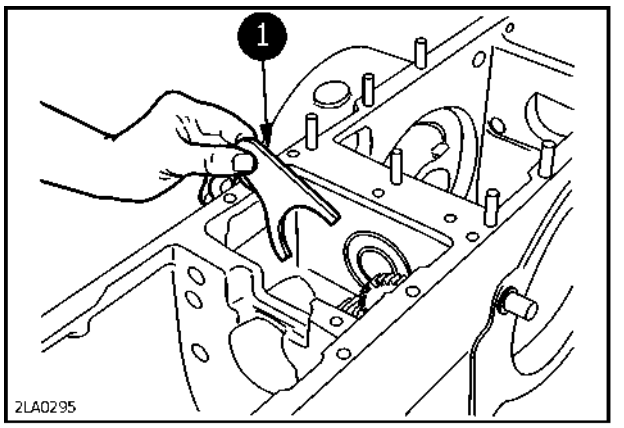

29


20. Remove the spring ring (1) that holds the driven gear of the ranges.

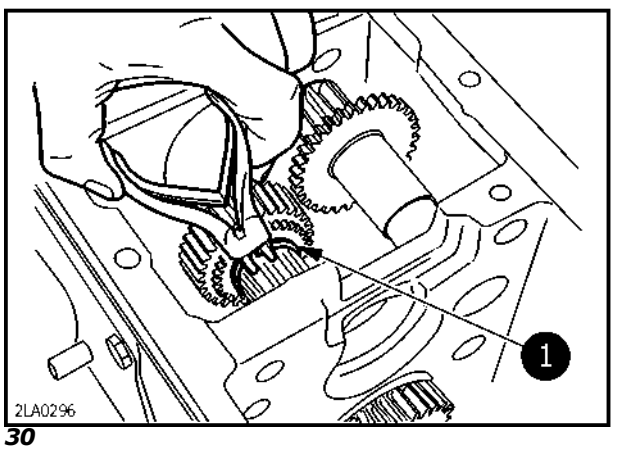

30


https://truckmanualshub.com/

21. Unscrew the pinion locking nut (1) and remove the gear (2).

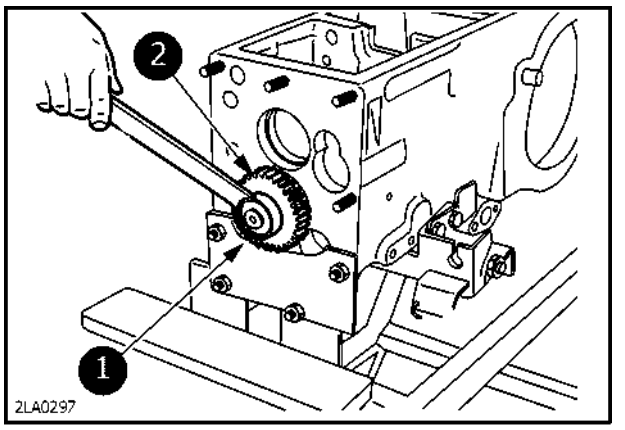


31

22. Push the pinion (1) towards the rear part of the gearbox-transmission housing using an adequate tool.

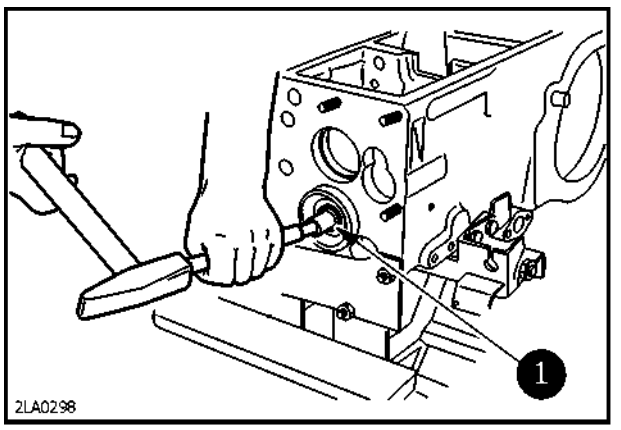


32

23. Take out the pinion (1) and recover the speed range gears (2).

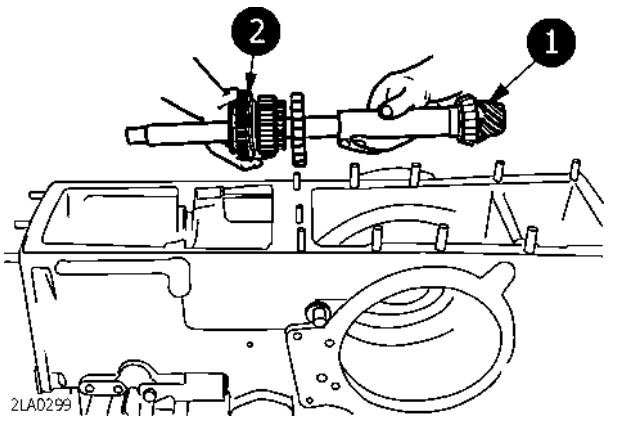


24. Remove the spring ring (1) that holds the 1st and 2nd gear synchromesh.

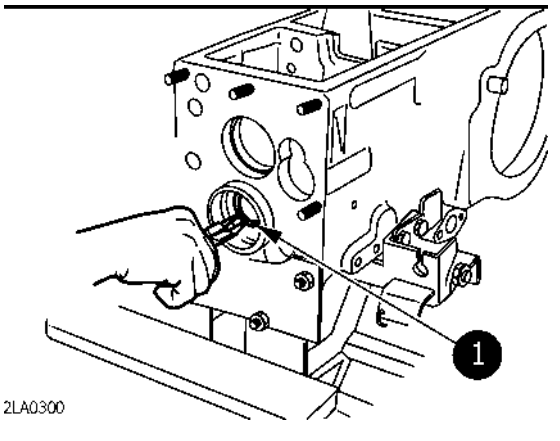

https://truckmanualshub.com/


https://workmanualshub.com/

25. Push the transmission shaft (1) towards the rear part of the gearbox-transmission housing using an adequate tool.

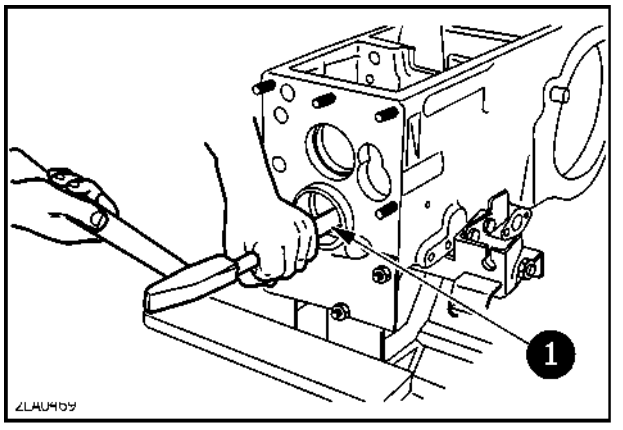


35

26. Remove the transmission shaft (1) and recover the 1st and 2nd speed gears (3) and synchro- mesh.

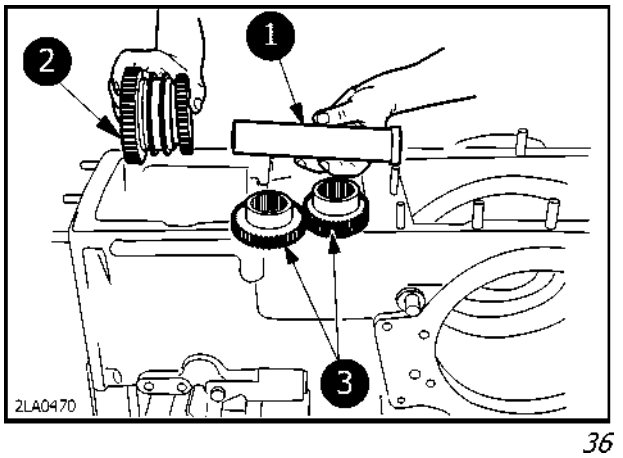


36

27. Remove the spring ring (1) that holds the transmission gear of the slow ranges.

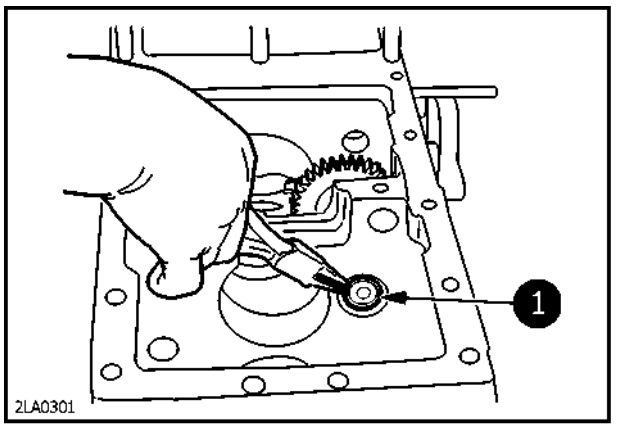

37


28. Retract the gear (3) in order to remove the spring ring (1) that holds the bearing in place. Take out the bearing (2) and recover the slow speed range transmission gear.

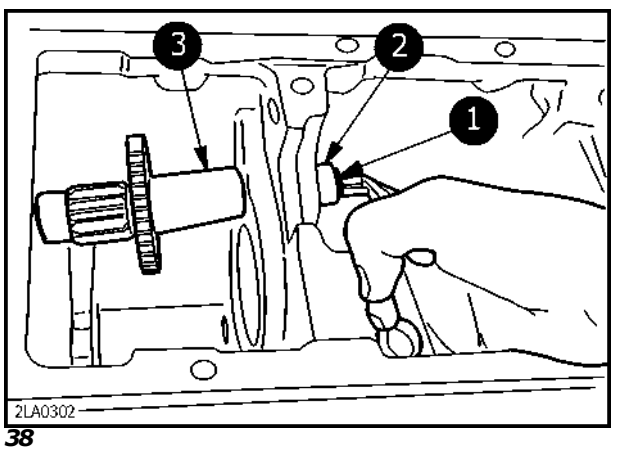

38


https://truckmanualshub.com/

29. Unscrew the locking bolt (1) of the supplemen- tary final drive engaging fork (2).

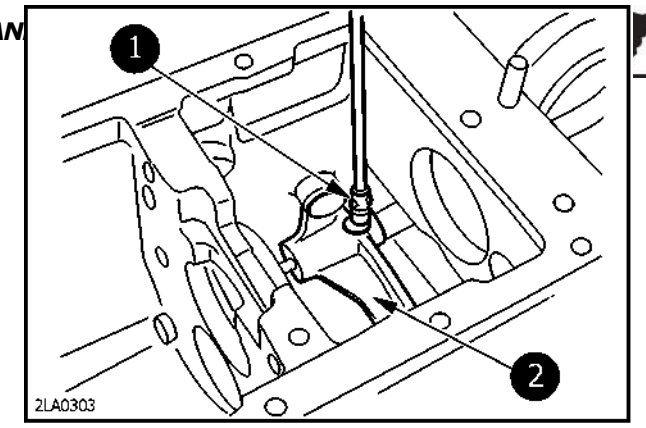


39

30. Remove the spring ring (1) that holds the shaft that supports the supplementary final drive gear and unscrew the retention screw (2) of the rear bearings.

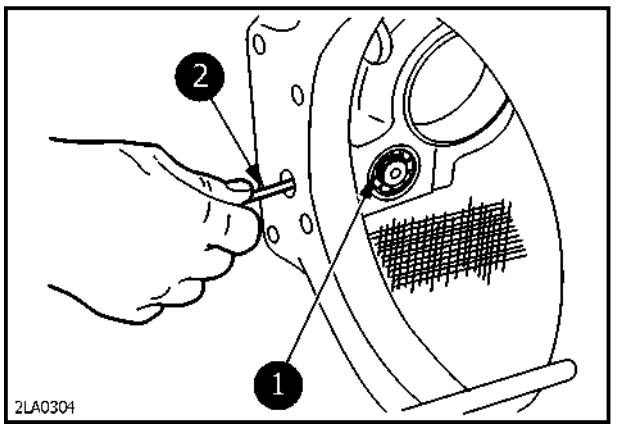

31. Remove all the supplementary final drive com- ponents (1) from the gearbox-transmission housing.

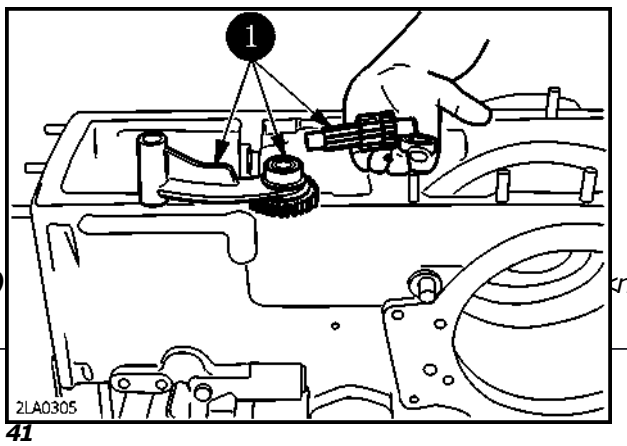

41

Comply with the following recommendations when remounting the gearbox-transmission housing:

Assembly

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Consult figures 2 and 3 in order to position the various parts correctly.

Before remounting the housings, supports and covers, thoroughly clean and degrease the cou- pling surfaces and apply a strip of sealant about 2 mm in diameter as indicated in figure 4.

Apply the driving torques listed on page 4.

Mount the supplementary final drive compo- nents and relative engaging fork.

https://truckmanualshub.com/

Mount the transmission gear of the slow speed ranges along with the relative spring retention rings.

Mount the transmission shaft, 1st and 2nd speed synchromesh and the relative gears. Mount the pinion with the speed gears.

Lock the pinion nut (see Section 500, Bevel gear pair adjustments, for the relative adjust- ments required).

Mount the spring ring that holds the driven gear of the ranges.

Position the fork that engages the ranges. Mount the rear part of the main shaft along with the relative components and the front spring ring.

Mount the PTO gear with the washer, the bear- ing and spring ring.

Mount the 3rd and 4th speed synchromesh and the engaging fork of the 1st and 2nd gear.

Mount the spring ring of the upper shaft.

Mount the front part of the main shaft with the relative bronze bush.

- Mount the adjuster shims, the spacer, the lubri- cation collar and the spring ring of the main shaft.
- Mount the rods with the relative control forks.
- Mount the closing plugs with the retainer balls and springs of the rods.

https://truckmanualshub.com/


- Mount the shaft of the rear PTO drive.
- Position and fix the cover of the power lift.
- Connect the cylinders to the lifting links, using the relative connection plugs.
- Position and fix the valve system to the gearbox transmission housing.
- Connect the hydraulic hose of the valve system.
- Connect the power lift valve gear transmission rods.
- Remove the gearbox-transmission housing from the stand.

SECTION 400 - (12 + 12) AND (16 + 16) MECHANICAL GEARBOX

Proceed as follows:

^E37


1. Using a depth micrometer, measure dimension (Li) between the bearing and the front plane of the gearbox-transmission housing.

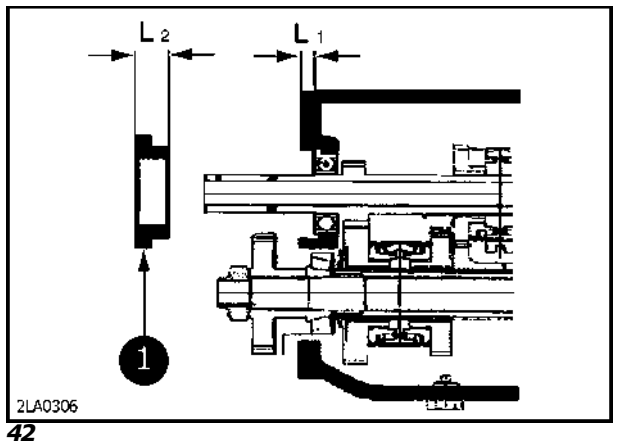

42

2. Measure thickness (L_2) of the spacer (1) with a micrometer.

3. Using a depth micr
the seat of the spa

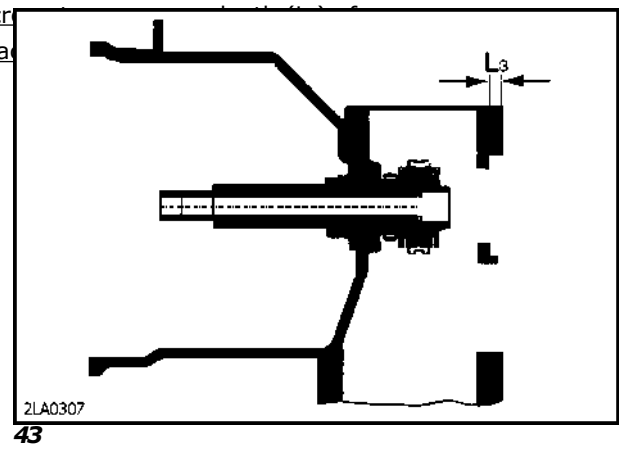

43

Main shaft float adjustment

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Make sure that, once mounted, the main shaft has a 0.1 mm float to ensure that it operates correctly.

4. The adjuster shim (Sh_2, page 5) to mount on the main shaft will be given by:

$Sh_2 = (L_1 + L_3 + 0.1) - L_2$

where

L_1 = dimension measured

L_2 = dimension measured

L_3 = dimension measured

1.

1 = operating play of the main shaft.
Round off to the lower figure.

https://truckmanualshub.com/

WARNING


Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Once mounted, the reverse shuttle gear ! must have a 0.3 - 0.4 mm float to ensure that it operates correctly.

Proceed as follows:

1 Using a depth micrometer, measure dimension (M_1) between the front plane of the gearbox-transmission housing and the spring ring mounted on the main shaft.

Mi

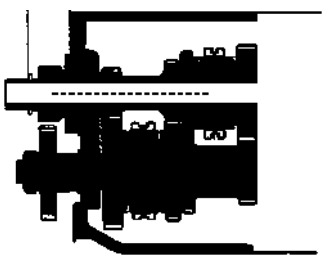

2.

Reverse shuttle gear float adjustment

Using a depth micrometer, measure dimension (M_2) between the rear plane of the clutch housing and the reverse shuttle gear (1).

3.

https://truckmanualshub.com/

The adjuster shim (Sh_1, page 4) to mount on the main shaft and the reverse shuttle gear will be given by:

$Sh_Ł = M_2 + (0.3 - 0.4) - M_Ł$

where

M_1 = dimension measured


M_2 = dimension measured

0.3 - **0.4** = operating play of the synchro-mesh gear.

Round off to the lower figure.

Proceed as follows:

2. Split the gearbox-transmission housing.

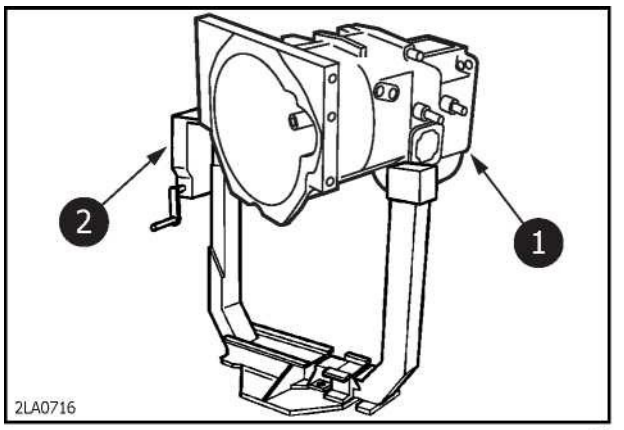

46

CLUTCH HOUSING - OVERHAUL


Demounting

3. Fix

WARNING


Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

the clutch housing to a rotating stand.

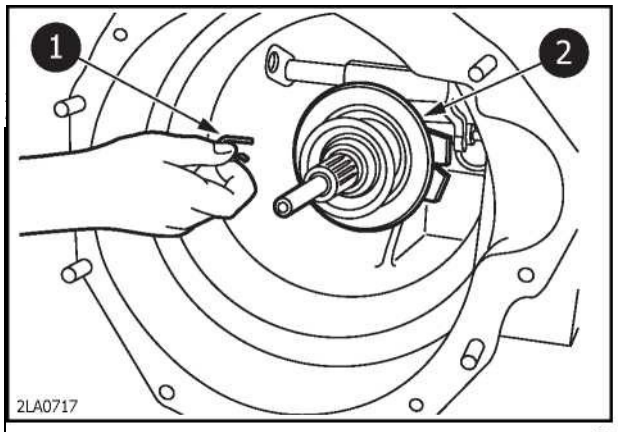

47

4. Remove the retention springs (1) of the thrust bearing (2).

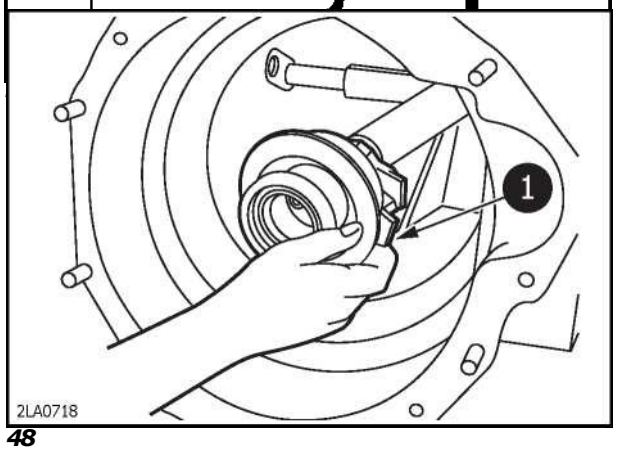


48

5. Remove the thrust bearing (1).


https://truckmanualshub.com/

6. Unscrew the locking plug (1) and the fixing screws (2), and remove the cover (3).

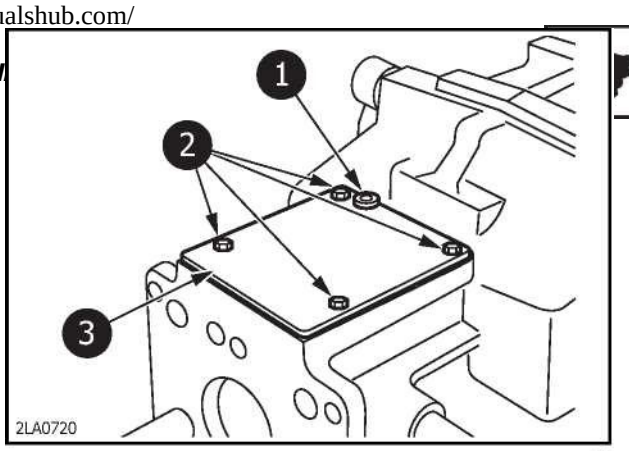


49

7. Unscrew the locking screw (1) of the reverse shuttle engaging fork (2).

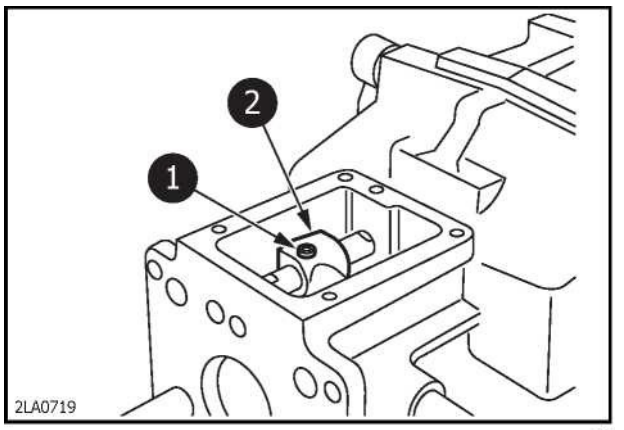


50

8. Take out the rod (1) and recover the engaging fork (2).

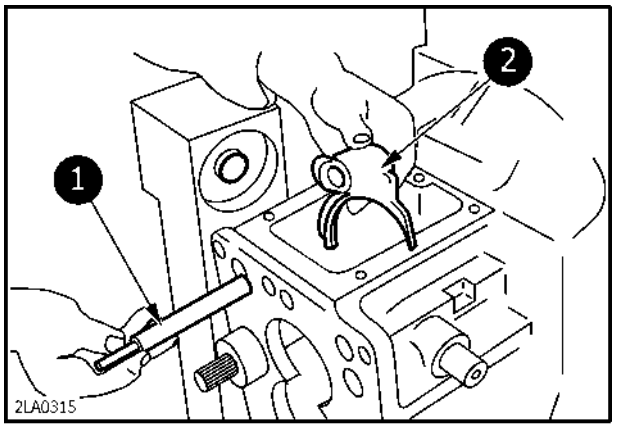


51

9. Remove the reverse shuttle synchromesh (1).

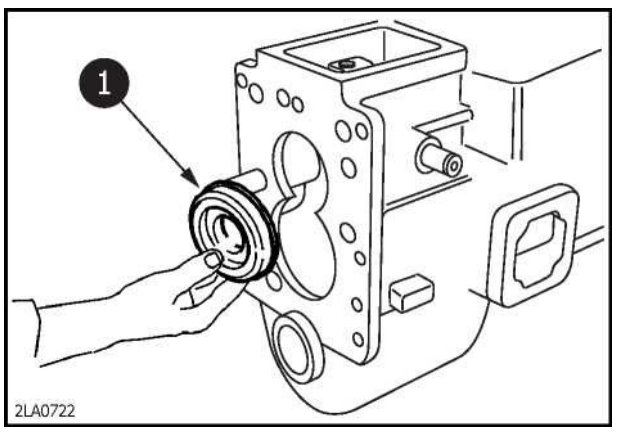


https://truckmanualshub.com/

10. Remove the bearing (1) using a puller (2).

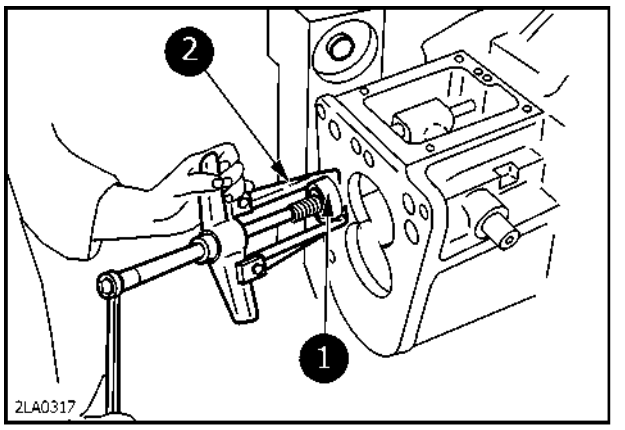


53

11. Remove the front and rear spring rings (1) of the reverse shaft.

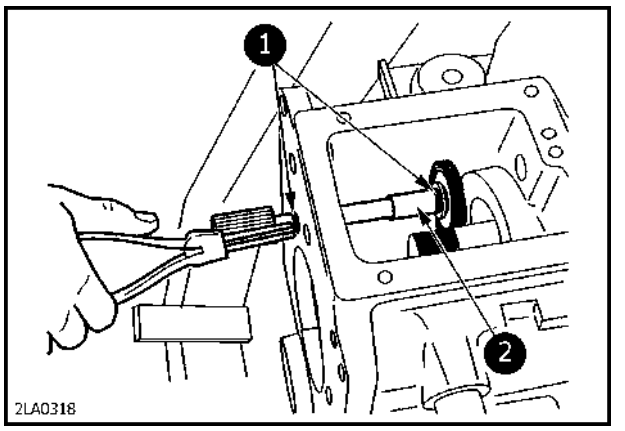


12. Remove the sealing plug (1) by levering with a suitable tool.

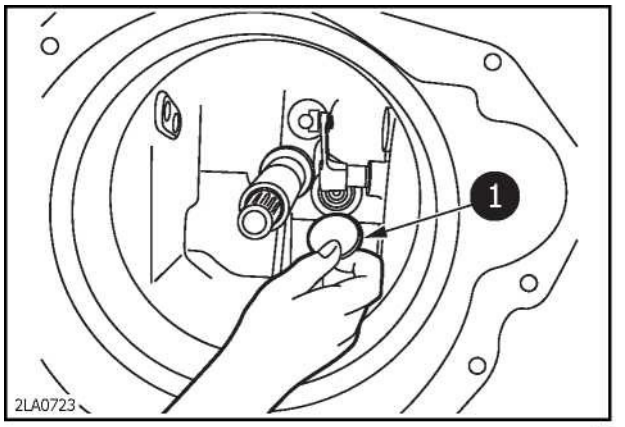

55


13. Remove the spring ring (1) that holds the bearing of the reverse shaft.

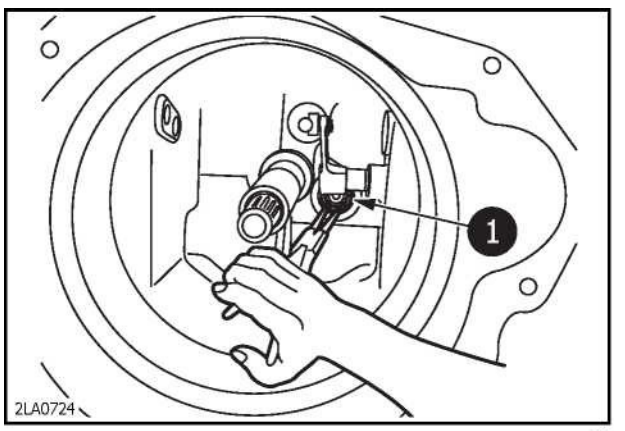

56


https://truckmanualshub.com/

14. Remove the reverse shaft (1) and recover the gear (2).

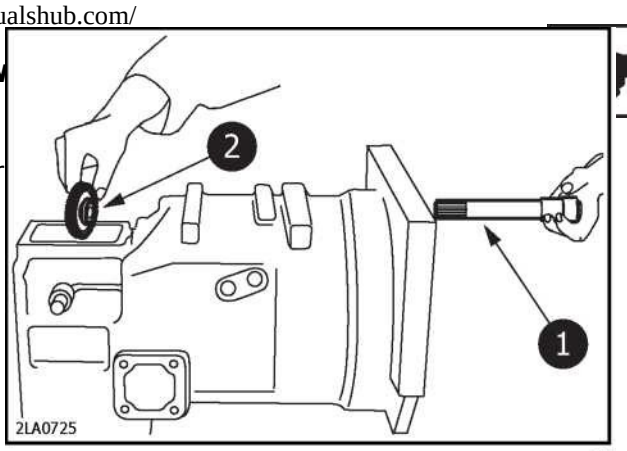


57

15. Remove the spring ring (1) that holds the driven shaft.

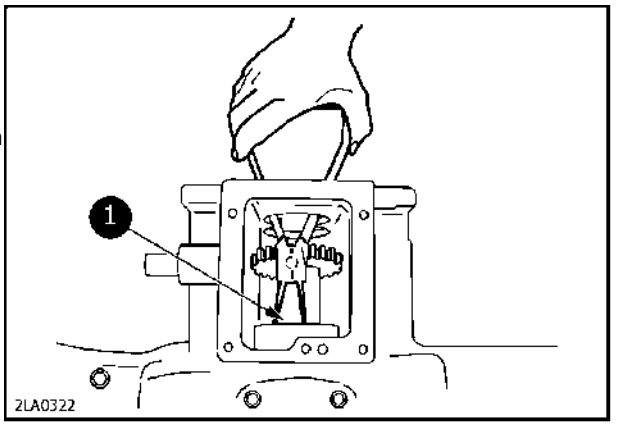


58

16. Remove the driven shaft (1) complete with the relative bearing.

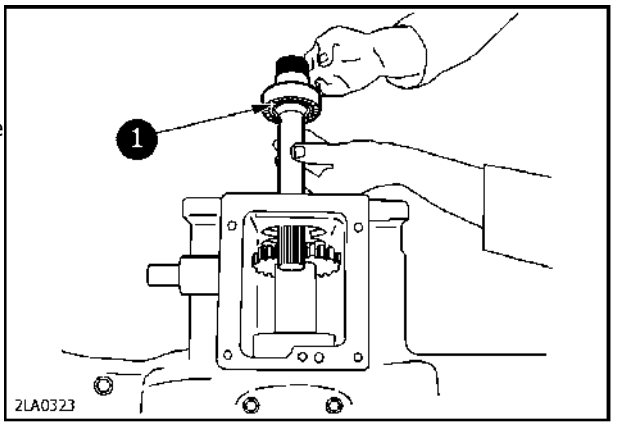


59

17. Remove the retention ring (1) by levering with a suitable tool. Remove the spring ring (1) that holds the PTO shaft and allow the shaft itself to move forward, using a suitable tool.

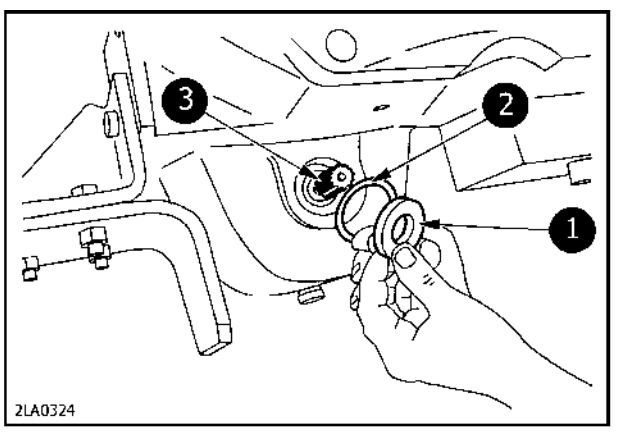

60


https://workshopmanuals.com/

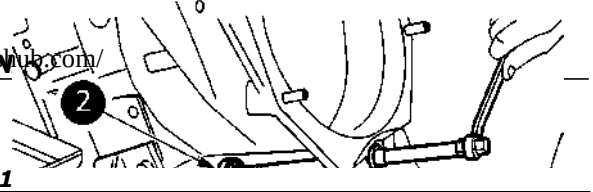

61


18. Remove the bearing (2) of the 4WD shaft using a puller (1).

19. Remove the spring ring (1) and take the 4WD engaging lever (2) out of the clutch housing.

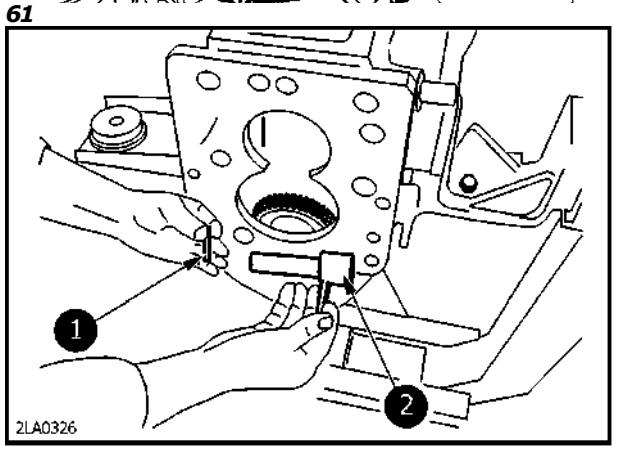

62

20. Use an aluminium bar (1) to oppose the movement of the gear (3). Remove the 4WD shaft and the relative gear (3) with a suitable tool (2).

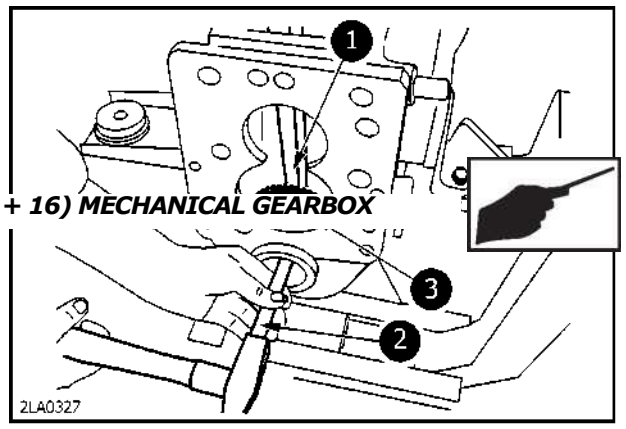

63

SECTION 400 - (12 + 12) AND (16 + 16) MECHANICAL GEARBOX

Assembly

Remount the clutch housing bearing the following recommendations in mind:

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

- Consult figures 2 and 3 in order to position the various parts correctly.
- Mount the 4WD shaft and the relative gear.
- Insert the 4WD engaging lever and lock it in place with the relative spring ring.
- Mount the bearing of the 4WD shaft.
- Mount the driven shaft with the relative bearing and spring retention ring.
- Mount the reverse shaft with the relative gear and spring retention ring.
- Mount a new retention plug.
- Mount the front bearing of the reverse gear along with the relative spring retention rings.
- Insert the reverse shuttle synchromesh.
- Mount the engaging fork of the reverse shuttle, lock the sliding rod and insert the retention plugs.
- Mount the thrust bearing with the relative retention springs.
- Remove the housing from the rotating stand.
- Remount the gearbox-transmission housing.

https://truckmanualshub.com/

INDEX

Description **Page**

MAIN SPECIFICATIONS OF THE BEVEL GEAR PAIR AND DIFFERENTIAL..... 500-3

DRIVING TORQUE VALUES..... 500-4

SECTIONS..... 500-7

DESCRIPTION AND OPERATION..... 500-9

TROUBLESHOOTING FOR THE BEVEL GEAR PAIR AND DIFFERENTIAL..... 500-9

TROUBLESHOOTING FOR THE SIDE FINAL DRIVES 500-9

WHERE THE SEALANT IS APPLIED FOR THE GEARBOX-REAR TRANSMISSION HOUSING..... 500-10

REAR TRANSMISSION HOUSING - OVERHAUL 500-11
Demounting..... 500-11
Assembly..... 500-12

RIGHT OR LEFT SIDE FINAL DRIVE HOUSING-ASSEMBLY SPLITTINGREMOUNTING..... 500-13
Splitting..... 500-13
Remounting..... 500-17

DRIVING WHEEL SHAFT - OVERHAUL..... 500-18
Demounting..... 500-18
Assembly..... 500-20

BEVEL GEAR PAIR ADJUSTMENT..... 500-21

https://truckmanualshub.com/

MAIN SPECIFICATIONS OF THE BEVEL GEAR PAIR AND DIFFERENTIAL

Bevel gear pair gear ratio:		9/44 = 1:4.88
Play between the flanks of the bevel gear pair gear teeth	(mm)	0.15 - 0.22
Type of differential		with two planetaries
Mechanical control of diff lock		Electrohydraulic with mechanical engagement
Adjustment of the bevel gear pair bearings and bevel gear pair meshing play		see pages 20 - 26.
Thickness of the bearing adjuster rings and bevel gear pair meshing play (S_d, S_s, fig. 2)	(mm)	0.70 - 0.75 - 0.80 - 0.85 - 0.90 - 0.95 - 1.00 - 1.10
Thickness of the pinion bearing adjuster rings (Sh1, fig. 2)	(mm)	0.10 - 0.30 - 0.50 - 0.70 - 0.90 - 1.10 - 1.30 - 1.50

https://truckmanualshub.com/

DRIVING TORQUE VALUES

PARTS TO TORQUE	Thread	Driving torque values	
		Nm	kgm
Screws fixing transmission housing to clutch housing (Ci).....	-	117 - 129	11.9 - 13
Screw fixing cover to transmission housing PTO (C_2).....	-	20 - 25	2 - 2.5
Screw fixing bevel gear pair bearing support (C_3).....	-	135 - 149	13.8 - 15.2
Screw fixing transmission housing-final drive housing (C_4).....	-	135 - 149	13.8 - 15.2
Screw fixing side final drive cover (C_5).....	-	20 - 25	2 - 2.5


https://truckmanualshub.com/


2LA00330

SECTION500 - REAR DIFFERENTIAL AXLE

DRIVING TORQUE VALUES


0 ^ *SECTION500 - REAR DIFFERENTIAL AXLE* **£2**

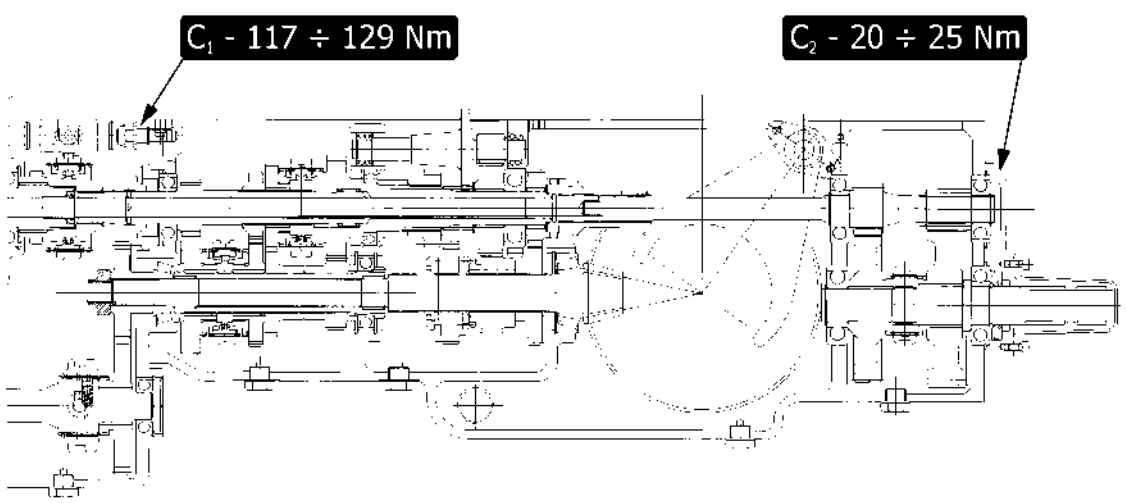


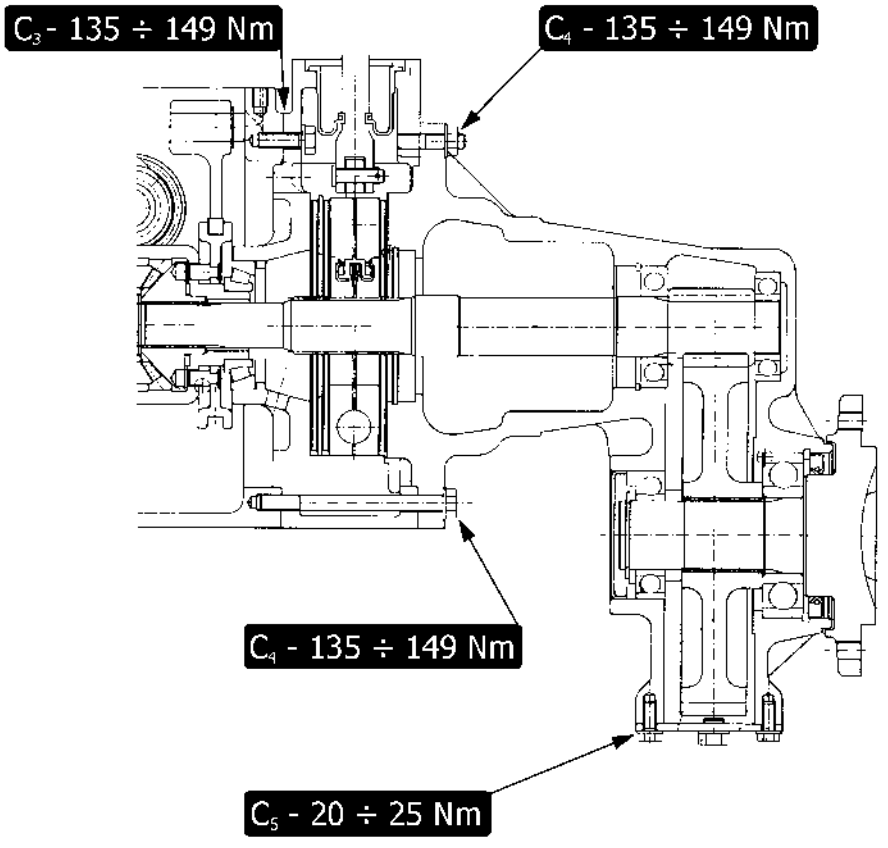


https://truckmanualshub.com/

SECTIONS

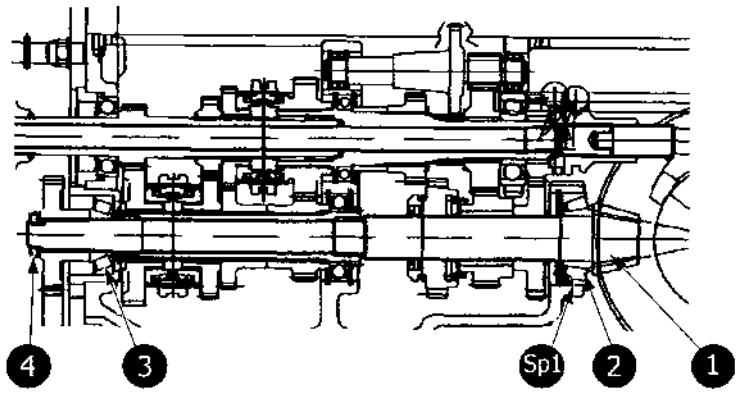

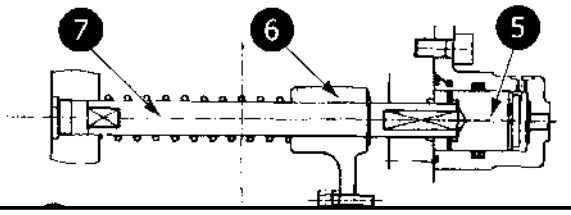

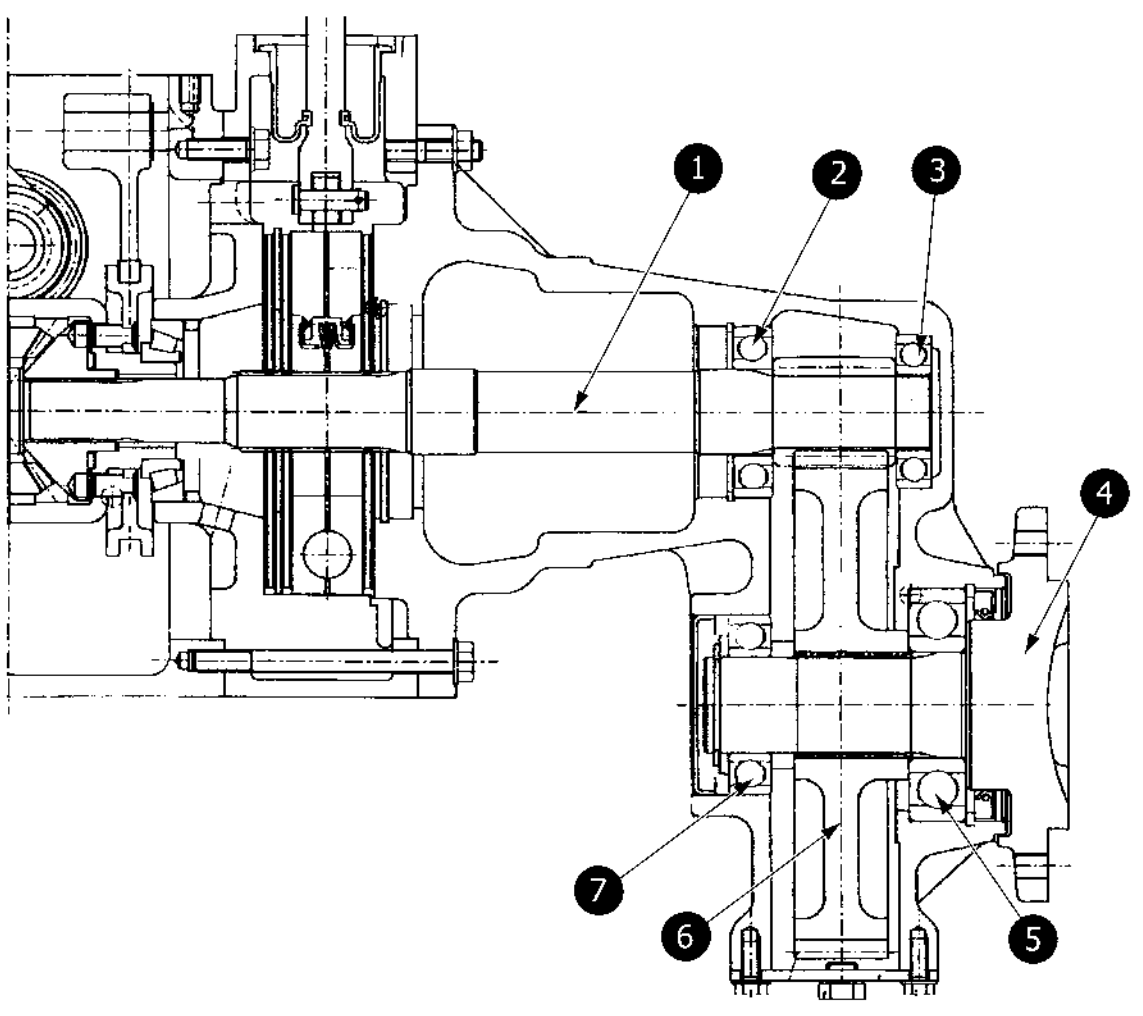

1. Axle shaft.
2. Ball bearing.
3. Ball bearing.
4. Wheel hub.
5. Ball bearing.
6. Final drive gear.
7. Ball bearing.

https://truckmanualshub.com/

https://truckmanualshub.com/

DESCRIPTION AND OPERATION.

The rear transmission transmits drive from the gearbox to the side final drives, by means of the bevel gear pair. The bevel gear pair is the type with helical toothing and is supported by taper roller bearings.

The differential has two planetaries and is providedwith a mechanically engaged, electrohydraulically engaged diff lock.

The side final drives are the type with straight toothing and are controlled by the bevel gear pair output axle shaft, the same that control the main brakes.


TROUBLESHOOTING FOR THE BEVEL GEAR PAIR AND DIFFERENTIAL

Faults	Possible causes	Remedies
Noisy transmission when the tractor is on the move, even with the gears in neutral (not due to the side final drives).	Crown wheels and plane- tary gears incorrectly adjusted or worn.	Detach the rear transmission hous-ing, replace the worn parts and correctly adjust the differential gears.
	Excessive play in the groove where the axle shafts are shrunk on to the crown wheels.	Remove the rear transmission housing and replace the damaged parts.
Noisy transmission when the tractor is on load and without load.	Some internal component is faulty or defective.	Detach the rear transmission housing, replace the worn parts and correctly adjust the differential gear play.
Noisy transmission with over-heating.	Insufficient coupling play between the pinion teeth and bevel gear pair.	Remove the rear transmission housing and correctly adjust the bearings that support the ring bevel gear.

TROUBLESHOOTING FOR THE SIDE FINAL DRIVES

Faults	Possible causes	Remedies
Noisy side final drives when the tractor is on the move, even with the gears in neutral.	Some internal component is faulty or defective.	Remove the side final drive housing and replace the damaged parts.
	Excessive play in the groove where the wheel axle shafts are shrunk on to the side final drives.	Remove the side final drive housing and replace the damaged parts.

WHERE THE SEALANT IS APPLIED FOR THE GEARBOX-REAR TRANSMISSION HOUSING

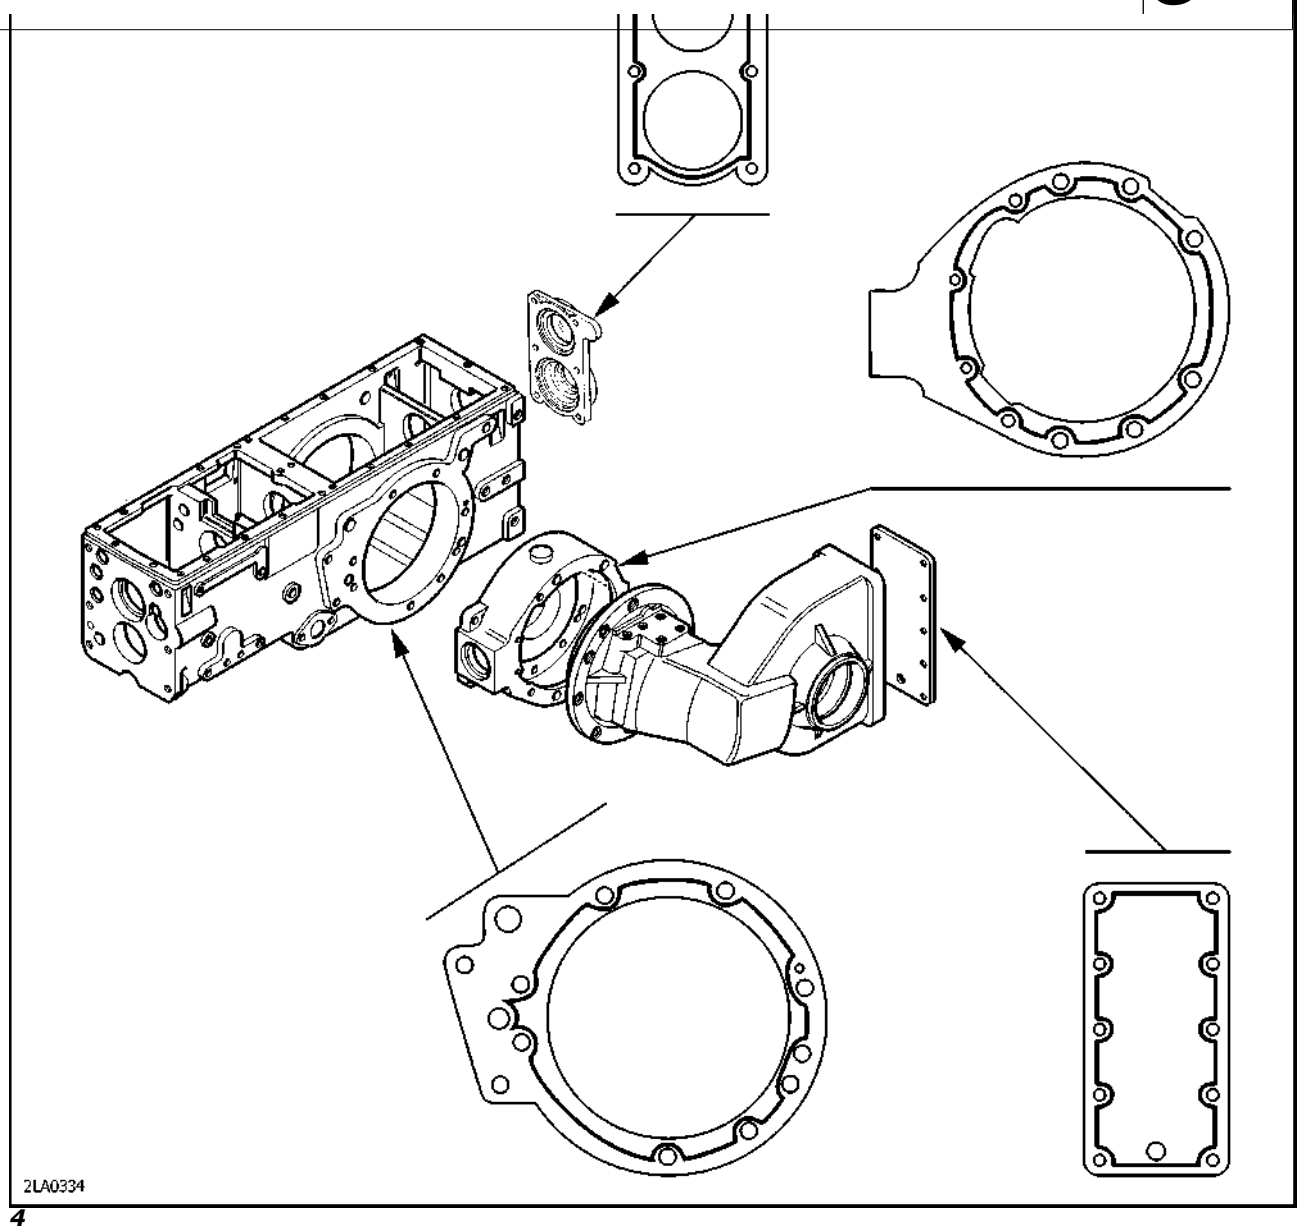

4

The types of sealant to apply are indicated in section 100.

REAR TRANSMISSION HOUSING - OVERHAUL


WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Demounting

Proceed in the following way to demount the parts:

1. Split the gearbox-rear transmission housing (see section 400).
2. Split the mechanically engaged PTO (see section 600).

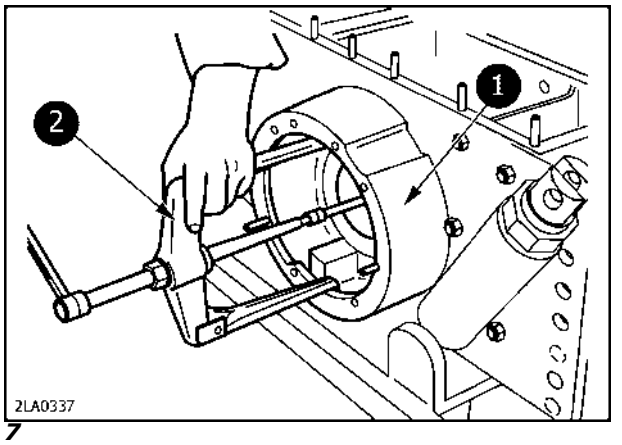

7

https://truckmanualshub.com/


3. Unscrew the fixing screws (1) and remove the diff lock actuator (2).

4. Remove the spring ring (1) and take out the diff lock rod (2). Recover the fork and return spring (3) from inside the transmission hous- ing.

5. Unscrew the fixing bolts (1) of the left-hand support of the ring bevel gear (1) and remove it.

Use and adequate puller (2) for this operation.

6. Remove the ring bevel gear (1) from the gear- box-rear transmission housing and recover the adjuster shims.

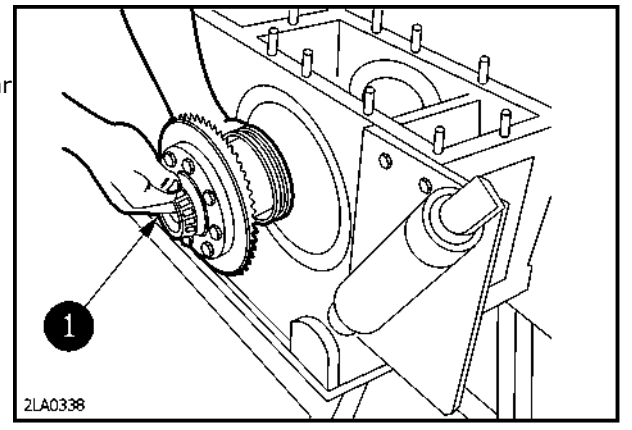

8

Assembly

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Comply with the following recommendations when remounting the gearbox-transmission housing.

Consult the illustrations on pages 7 and 8 in order to position the various parts correctly.

Before remounting the housings, supports and covers, thoroughly clean and degrease the coupling surfaces and apply a strip of sealant about 2 mm in diameter as indicated in figure 4.

Apply the driving torques listed on page 4.

Adjust the pinion bearings as described on page 21.

Position the ring bevel gear inside the transmission housing. Mount the left-hand ring bevel gear support.

Adjust the ring bevel gear bearings and the play between the flanks of the bevel gear pair teeth as described on page 21.

Mount the diff lock rod complete with fork and return spring.

Mount the diff lock hydraulic actuator.

https://truckmanualshub.com/

RIGHT OR LEFT SIDE FINAL DRIVE HOUSING-ASSEMBLY SPLITTING REMOUNTING

Splitting

DANGER

Lift and handle all heavy parts with lifting equipment of an adequate capacity.
Make sure that the units or parts are supported by appropriately sized harness and hooks.
Make sure that there are no bystanders near the load being lifted.


WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Proceed as follows:


- Block the front wheels with chocks.
- Jack up the rear part of the tractor.

1. Unscrew the fixing bolts (1) and remove the wheel.

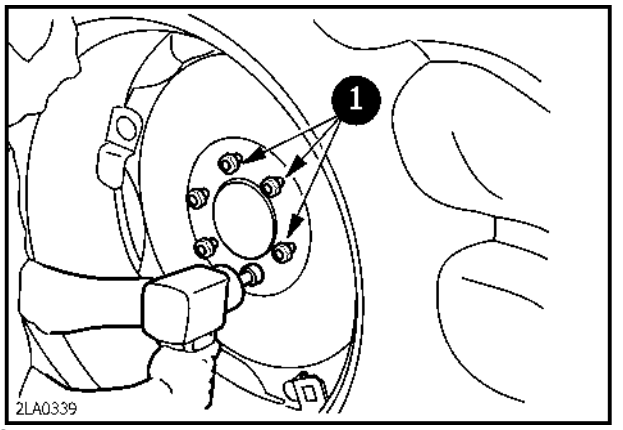


2. Remove the pin (1) that fixes the connecting plug of the stay that prevents side swing (2) and take out the plug.

3. Remove the pins (1) that fix the connecting plugs of the stay that prevents side swing (2) and take the plugs (3) out of their relative housings.

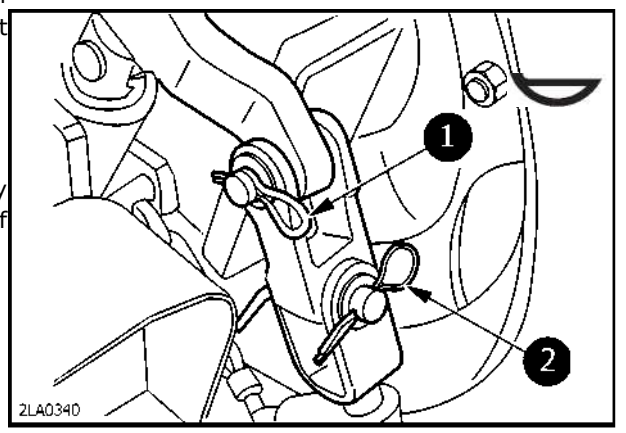


4. Disconnect the anti-side swing stay (1).

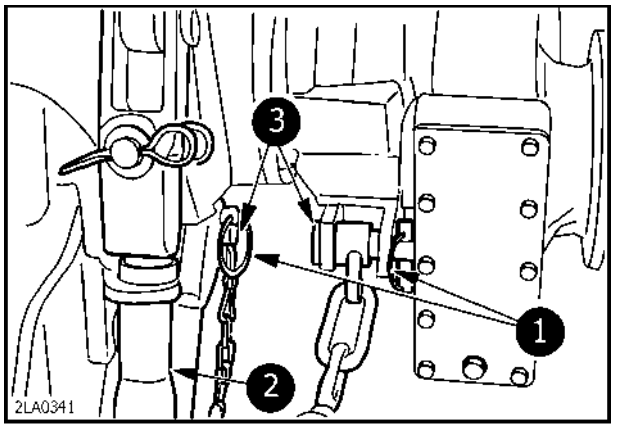


11

5. Position a mechanical stand (1) under the rear transmission (2), inserting a strip of wood between the tractor and the actual stand itself. Drain the oil from the transmission.

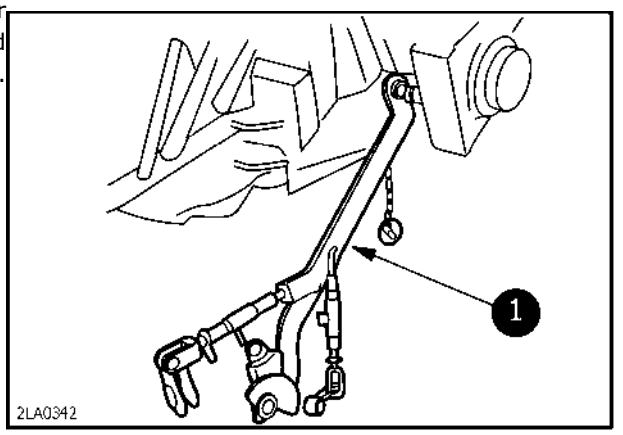


12

6. Remove the spring ring (1) anddisconnect the power lift rod (2).

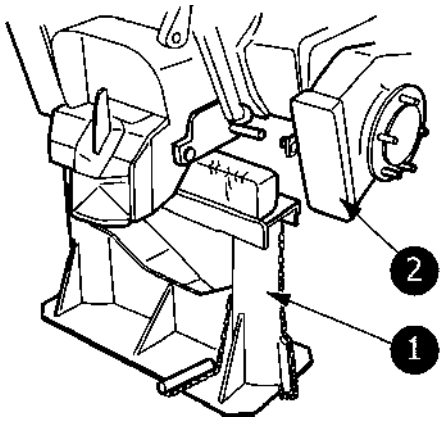


13

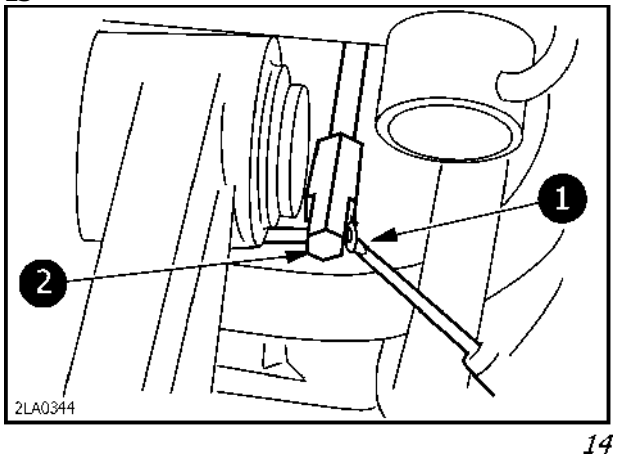

14

https://truckmanualshub.com/


7. Using the tool (1), unscrew the fixing screws and disconnect the support that fixes the anti- side swing chain (2).

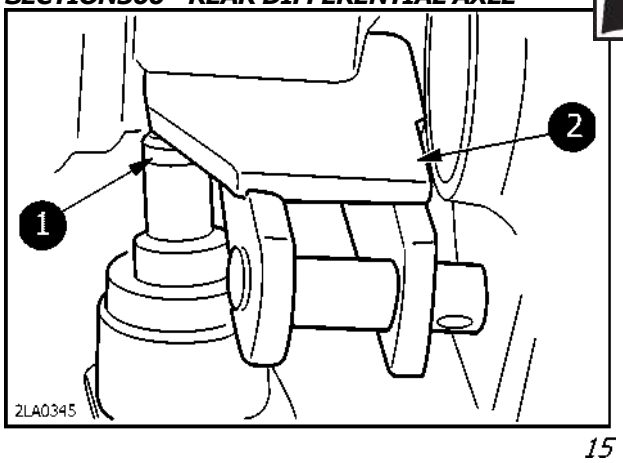

15

8. Unscrew the fixing bolts (1) of the platform.


10. Using a standard spanner, unscrew the three accessible fixing bolts (1) of the platform sup- port.

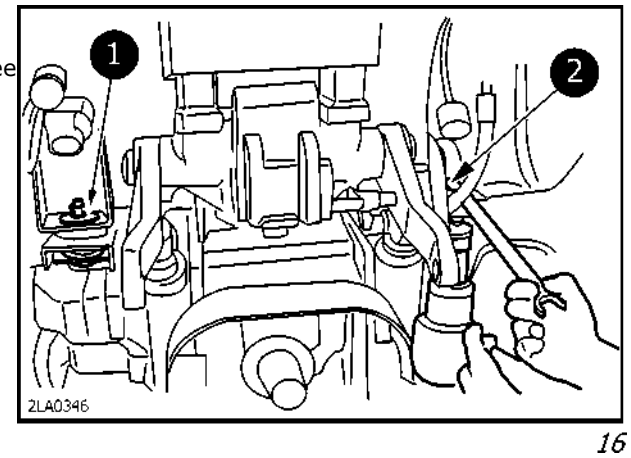


16

9. Disconnect the hydraulic oil hose (1).

Old oil must be disposed of in compliance with the current laws in merit.

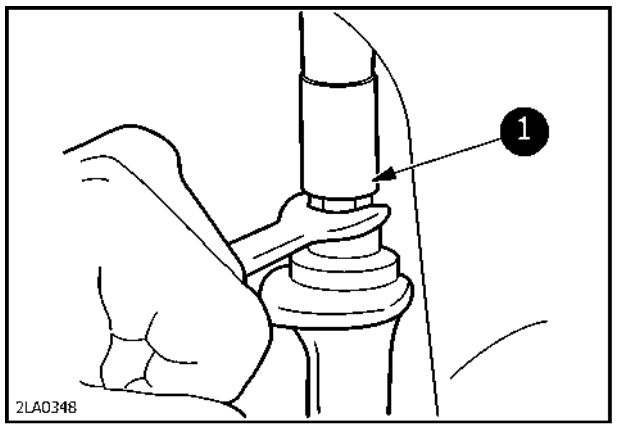

17

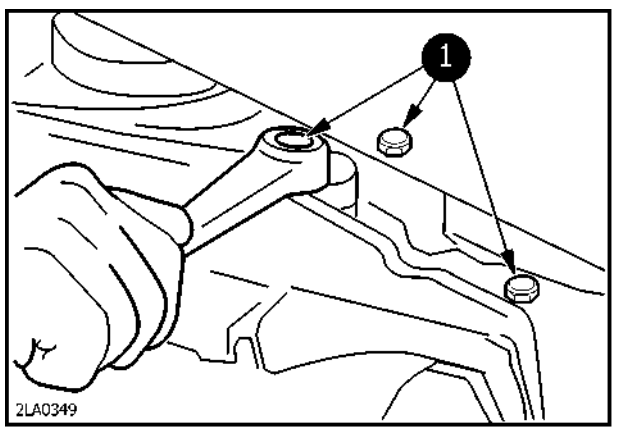


18

https://truckmanualshub.com/

11. Using a suitable tool, raise the mudguard (1) and remove the rubber support (2).


13. Unscrew the fixing nuts (1) and remove the side final drive (2).

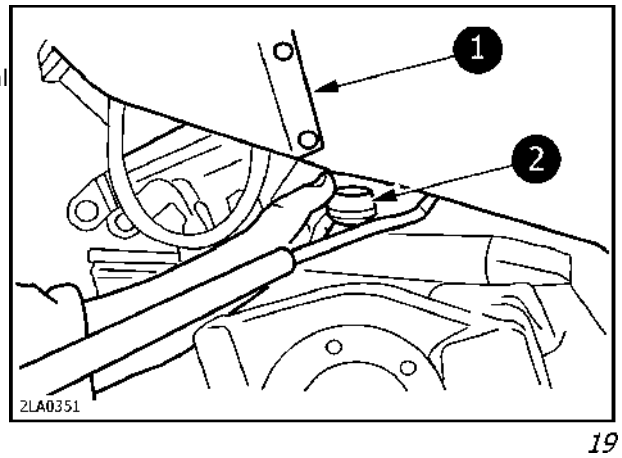

19


12. Unscrew the plug (1) and drain the oil from the side final drive.

Old oil must be disposed of in compliance with the current laws in merit.

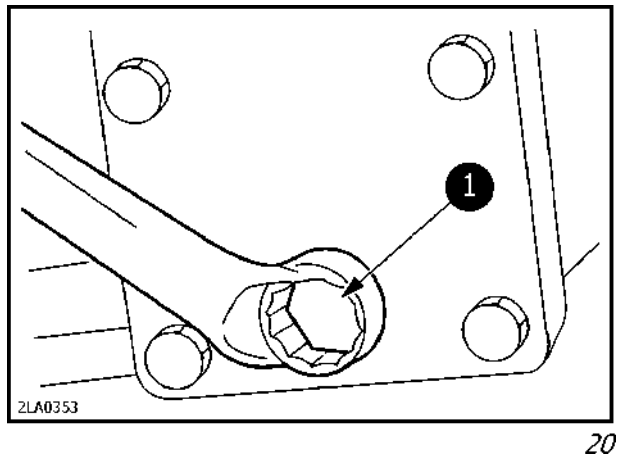

20

14. Work in a similar way to split the left side final drive, with the exclusion of the operations required to split the power lift valve system.

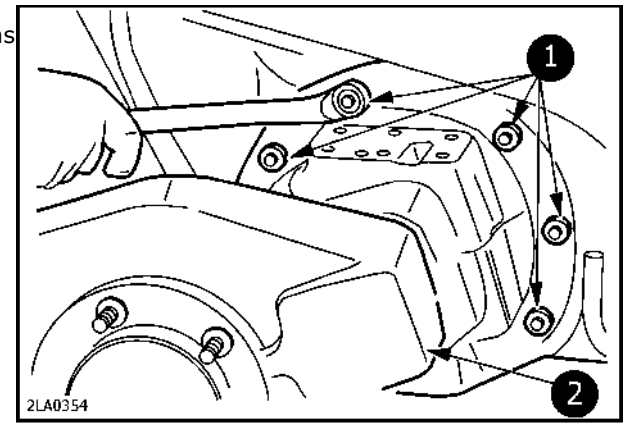

21

https://truckmanualshub.com/

Remounting

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Remount the right side final drive housing on to the tractor, bearing the following recommendations in mind:

Before remounting the housings, supports and covers, thoroughly clean and degrease the cou- pling surfaces and apply a strip of sealant about 2 mm in diameter as indicated in fig. 4.

Position the side final drive housing on the transmission housing and tighten the fixing screws.

Mount the platform support.

Install the rubber support.

Screw on the platform fixing bolts.
Connect the support that anchors the anti-side swing chain along with the relative stay.

Connect the power lift rod.
Screw on the drain plugs and pour hydraulic oil into the transmission and final drive housing. The prescribed product and relative quantity is given in section 100.

Mount the rear wheel.
Remove the chocks from under the wheels.

https://truckmanualshub.com/

DRIVING WHEEL SHAFT - OVERHAUL


Demounting

With the side final drive housing split from the rear transmission, proceed with the demounting operations as described below.

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.


1. Unscrew the fixing screws (1) and remove the closing cover (2).

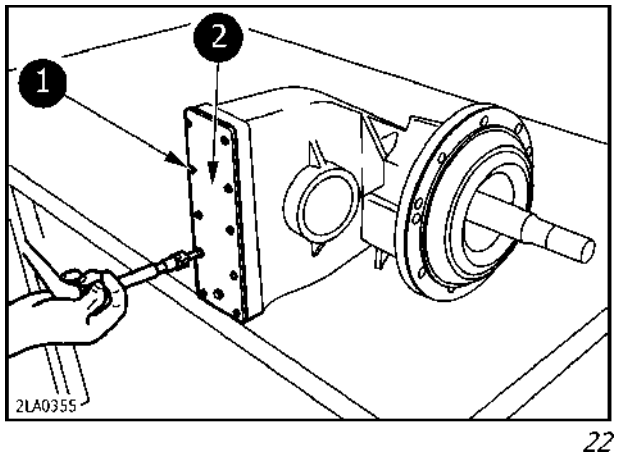


22

2. Remove the closing seal (4) from the bearing of the driving wheel shaft.

3. Remove the spring ring (1) that holds the driving wheel shaft and recover the float adjuster shim.

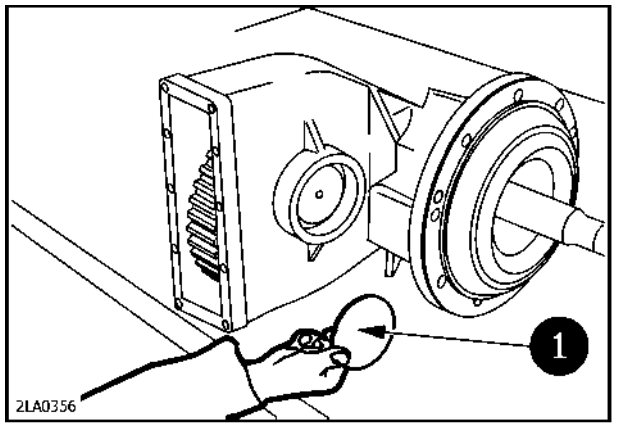


23

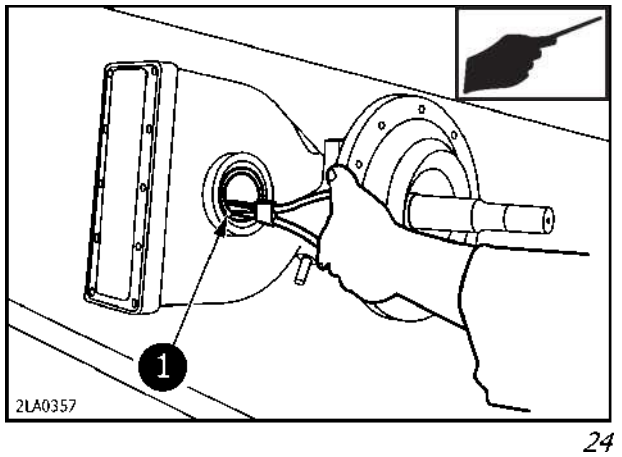

24

https://truckmanualshub.com/

4. Remove the driving wheel shaft (1).

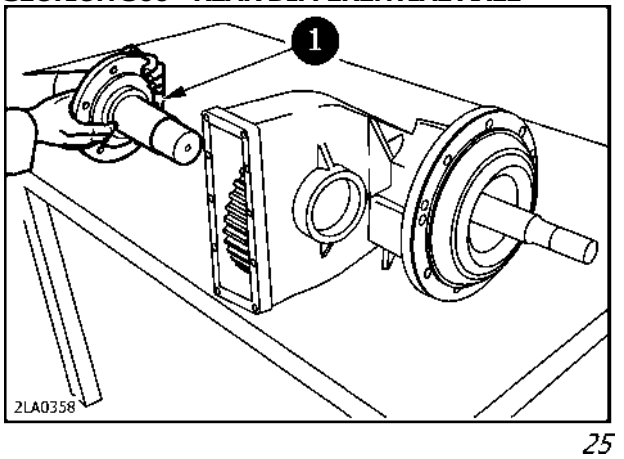

25

5. Remove the reduction gear (1) and recover the shim (2) that adjusts the float of the gear itself.

6. Remove the spring ring (1) that holds the bear- ing of the axle shaft and remove the axle shaft (2) complete with bearing.

https://truckmanualshub.com/


7. Remove the retention seal.

Com

Assembly


WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

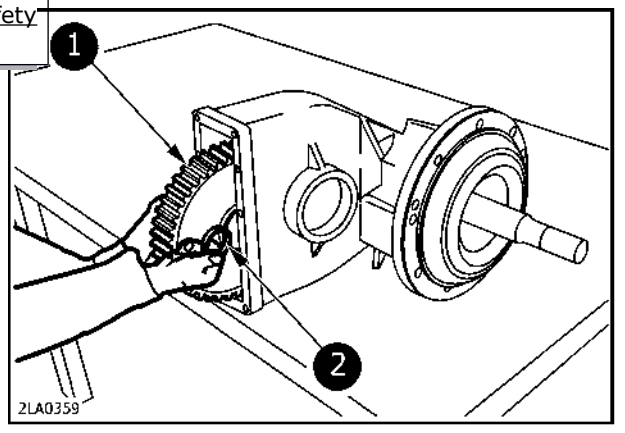

26

ply with the following rec

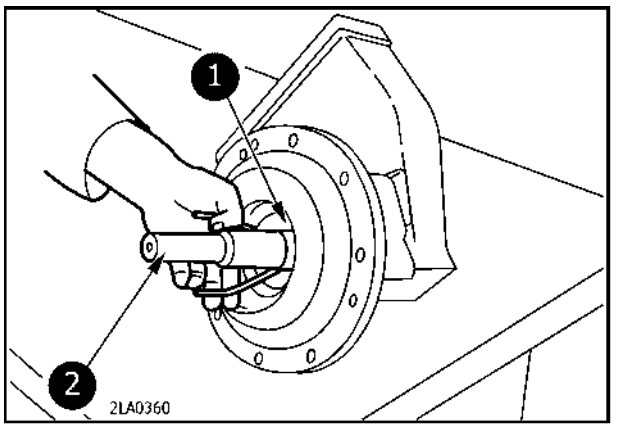

27

o
m
m
e
n
d
a
t
i
o
n
s

w
h
e
n

r
e
m
o
u
n
t
i
n
g

t
h
e

s
i
d
e

f
i
n
a
l

drive hoousing.

Coounsult fig. 2 and 3 in oorder

https://truckmanualshub.com/

o

p
o
s
i
t
i
o
n

t
h
e

v
a
r
-

i
o
u
s

p
a
r
t
s

c
o
r
r
e
c
t
l
y
.

B
e
f
o







r
e

r
e
m
o
u
n
t
i
n
g

t
h
e

c
o
v
e
r
s
,

t
h
o
r
o
u
g
h
l
y

c
l
e
a
n

a
n
d

degrease the coupling surfaces and apply a st

r
i
p

o
f

s
e
a
l
a
n
t

a
b
o
u
t

2

m
m

i
n

d
i
a
m
e
t
e
r

a
s

i
n
d
i
c

a
t
e
d

i
n

f
i
g
.

4
.
Apply the driving torques listed on page 4.
M
o
u
n
t

t
h
e

a
x
l
e

s
h
a
f
t

c
o
m
p
l
e
t
e

with bearing and relative spring retention rin

gs. Position the reduction gear and relative a

d
j
u
s
t
e
r

s
h
i
m
.
Mount the driving sheel shaft.
I
n
s
e
r
t

t
h
e

f
l
o
a
t

a
d
j
u
s
t
e
r

s
h
i
m

a
n
d

m
o
u
n
t

t
h
e

s
p
r
i
n
g

r
i
n
g

t
h
a
t

h
o
l
d
s

t
h
e

d
r
i
v
i

n
g

w
h
e
e
l

s
h
a
f
t

i
n

p
l
a
c
e
.
M
o
u
n
t

t
h
e

n
e
w

r
e
t
e
n
t
i

on seal, using an adequate tool.

https://truckmanualshub.com/


BEVEL GEAR PAIR ADJUSTMENT

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Proceed in the following way:


1. Take out the track (2) of the pinion bearing using a suitable tool (1).

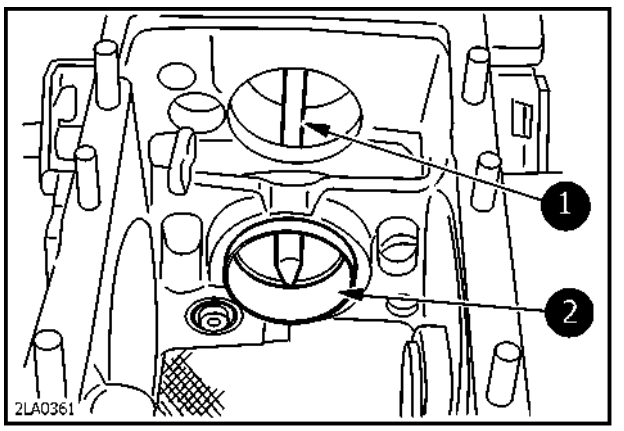

28


2. Mount the complete bearing on the pinion. Measure dimension (Li) with a depth micrometer (1).

3. Read the writing on the pinion head and correct the nominal dimension (L_2).

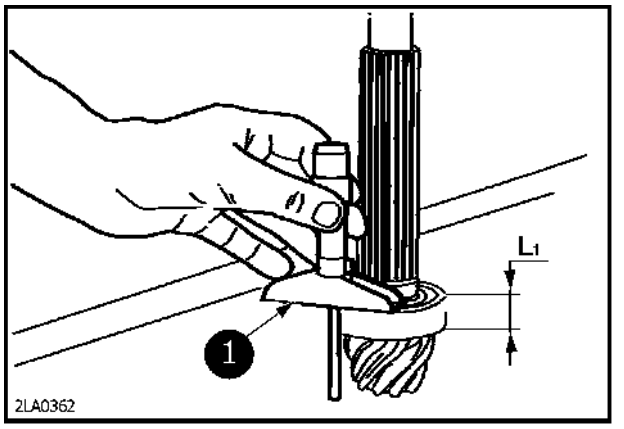

29

4. Read dimension (L_3) (1), stamped on the top part of the gearbox-transmission housing.

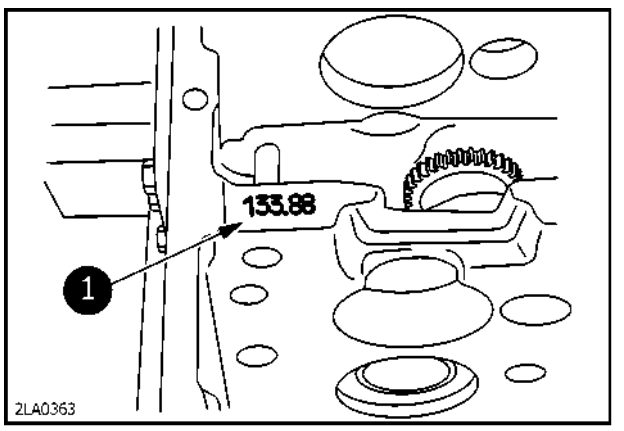

30

5.

The value of the shims (Sh^ to mount behind the pinion bearing will be given by:

^{Sh}1 = ᴸ3 - (ᴸ1 + ᴸ2)

where:

L_1 = Dimension measured

L_2 = Nominal dimension (correct).

L_3 = Dimension stamped on the transmission housing.

Round off to the lower figure.

Example:


L_1 = 59.25 mm. Dimension stamped

L_2 = 72.2 - 0.3 = 72.2 mm. Nominal dimension (correct).

L_3 = 133.88 mm. Dimension measured **Sh_1** = 133.88 - (72.2 + 59.25) = 2.43 mm (Adjuster shim Sh_u page 3).


Round off to the lower figure.

6. Insert the calculated shims Sh_1 (1) inside the pinion bearing seat. Mount the bearing and the pinion.

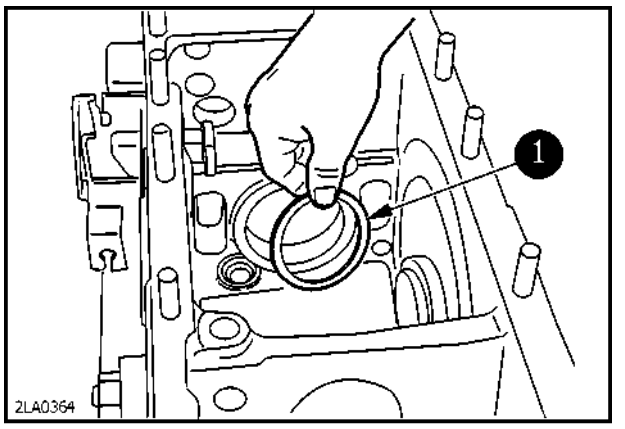

31


7. To give the right preload to the taper bearing of the pinion, tighten the nut (1) until a 1-6 - 1.8 Nm pinion rolling torque is obtained.

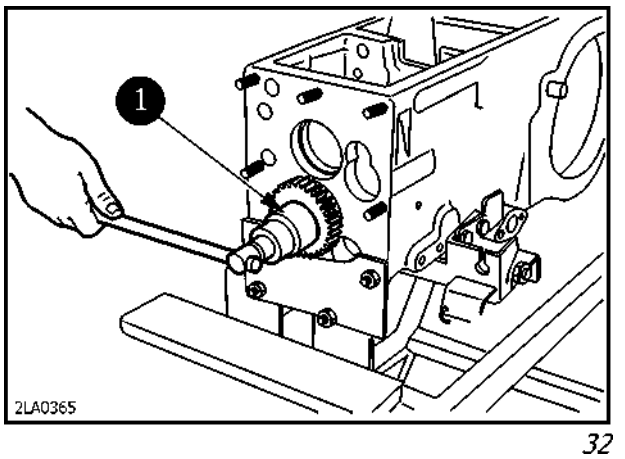

32


https://truckmanualshub.com/

8. Measure the rolling torque with a torque w
(1).

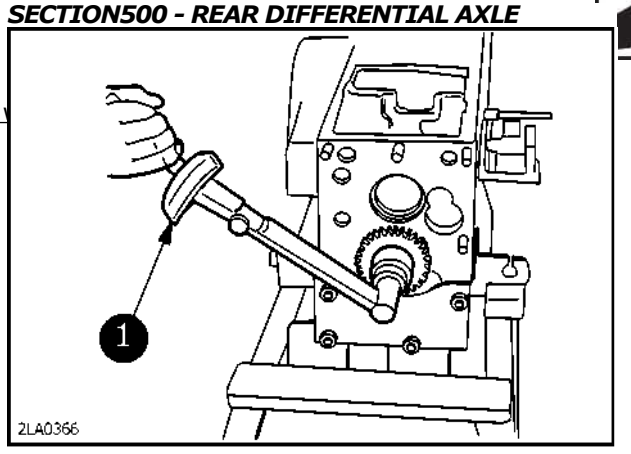


33

9. Insert a test shim Sh_2 = 2.5 mm (1) behind the track of the bearing of the right support of the ring bevel gear.

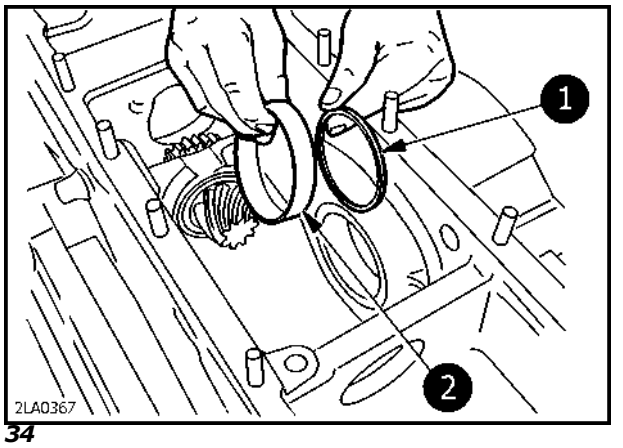


34

10. Position the ring bevel gear (1) inside the gear-box-transmission housing (2). Mount the left support of the bevel gear pair without any adjuster shims. Tighten the fixing screws of the left support of the bevel gear pair until obtaining a 1.9 - 2.1 Nm rolling torque.

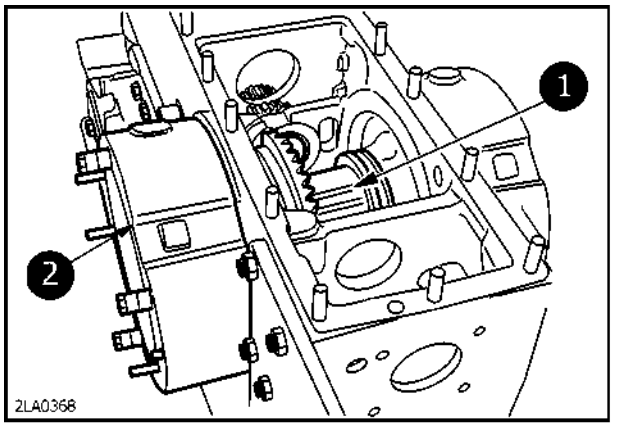

35


11. The rolling torque can be measured on the pinion locking nut by means of the torque wrench (1).

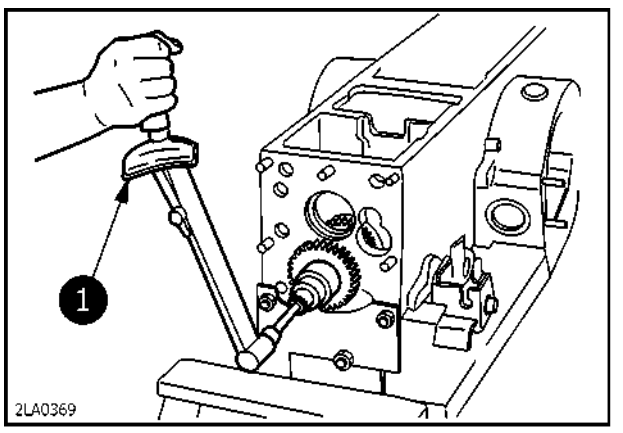

36

https://truckmanualshub.com/

12. Use a thickness gauge (1) to measure the gap (L) between the gearbox-transmission housing and the left support of the ring bevel gear. Adequately increase the test shim (Sh_2) if gap (L) is L = 0.

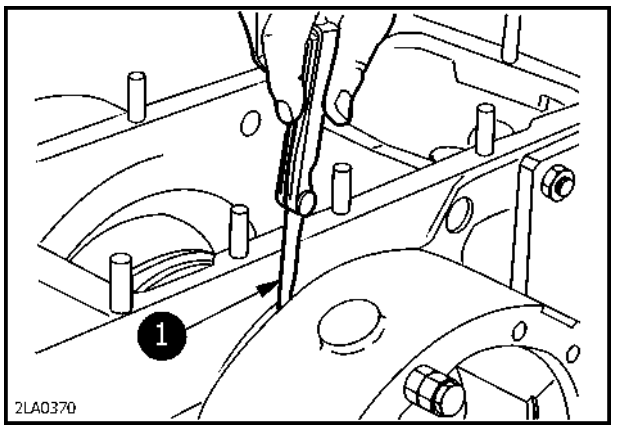


13. The total pack (S_t) of adjuster shims to insert inside the left and right supports of the bevel gear pair is given by:

$$S_t = Sh_2 - L$$

Round off to the lower figure.

14. Use a comparator (1) to measure the play (G) between the flanks of the ring bevel gear teeth. Take three measurements at 120° and calculate the arithmetical average of the 3 readings.

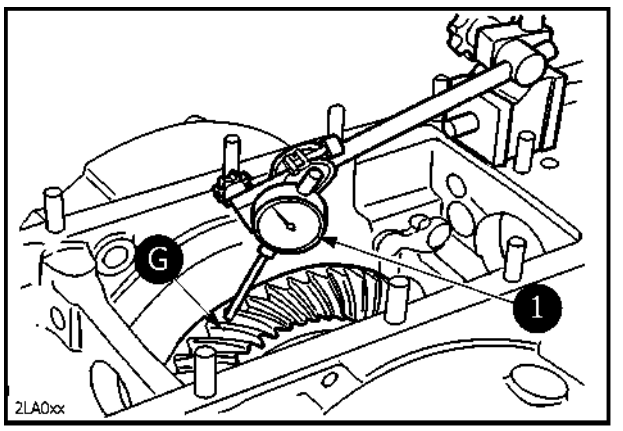

15. A correct average play should be between 0.15 mm and 0.22 mm, thus an average 0.18 mm will be considered for the successive calculations.


16. The ring bevel gear float (Z) will be given by:

$$Z = G - 0.18$$

where:

G = Dimension measured.
0.18 = Theoretic dimension.

https://truckmanualshub.com/

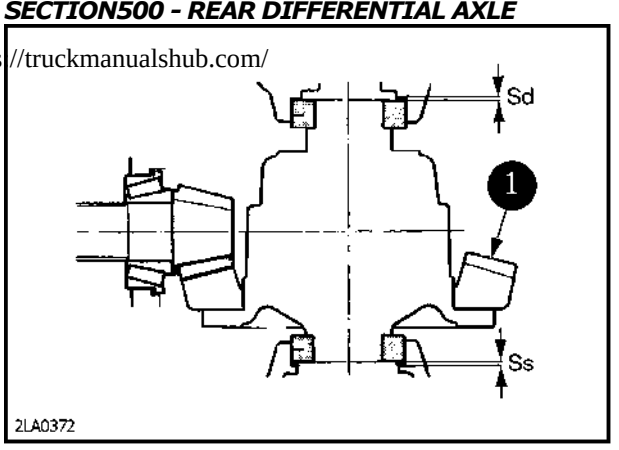

39



17. The left (S_s) and right (S_d) adjuster shims to insert behind the taper bearing of the left and right ring bevel gear supports will be given by:

$$Sd = St - Z$$

$$^{s}s = ^{s}t - ^{s}d$$

Round off to the lower figure within 0.5 mm.

18. Mount the ring gear supports with the calcu- lated adjuster shims and, as previously described, check the ring gear-pinion rolling torque and the play between the flanks of the ring bevel gear teeth.

Example

S_t = 2.5 mm.

Theoretic dimension of the test shim.

L = 0.2 mm.

Dimension measured.

S_t = 2.5 - 0.2 = 2.3 mm.

Total adjuster shim.
Round off to the lower figure.

G = 0.38 mm.
Dimension measured.
0.18 mm
= Theoretic dimension.
Z = 0.38 - 0.18 = 0.2 mm.
Ring gear float.

S_d = 2.3 - 0.2 = 2.1 mm.

Adjuster shim on the right ring bevel gear support.
S_s = 2.3 - 2.1 = 0.2 mm.

Adjuster shim on the left ring bevel gear support.
Round off to the lower figure within 0.5 mm.

https://truckmanualshub.com/

SECTION 510
FRONT AXLE

https://truckmanualshub.com/

INDEX

Description	Page
MAIN SPECIFICATIONS	510-3
DRIVING TORQUE VALUES	510-4
SPECIFIC EQUIPMENT	510-5
SECTIONS	510-6
DESCRIPTION AND OPERATION	510-9
Axle assembly	510-9
Differential lock	510-9
TROUBLESHOOTING FOR THE FRONT AXLE DIFF LOCK DEVICE	510-10
FRONT AXLE	510-11
Splitting	510-11
Remounting	510-13
FRONT AXLE DIFFERENTIAL AND BEVEL GEAR PAIR SUPPORT	510-14
Splitting	510-14
Remounting	510-15
FRONT BEVEL GEAR PAIR - OVERHAUL	510-16
Demounting	510-16
Bevel pinion bearing preload	510-17
Adjustment of the axial position of the bevel pinion	510-18
Pinion - ring gear play adjustment	510-19
Ring gear bearing float adjustment	510-20
FRONT DIFF LOCK - OVERHAUL	510-22
Demounting	510-22
Assembly	510-23
WHEEL HUB - OVERHAUL	510-24
Demounting	510-24
Assembly	510-25
FRONT FINAL DRIVE - SPLITTING REMOUNTING	510-26
Splitting	510-26
Remounting	510-27
FRONT FINAL DRIVE - OVERHAUL	510-28
Demounting	510-28
Assembly	510-31
AXLE STEERING CYLINDER - SPLITTING REMOUNTING	510-33
Splitting	510-33
Remounting	510-35


https://truckmanualshub.com/

MAIN SPECIFICATIONS

Type	In spheroidal cast iron, pivoting at the center
Front drive engaging control	
Drive transmission	
Differential locks	
- type	"Twin lock" with electrohydraulic control
- engaging phase	at the same time as the rear differential
- disengagement	by means of the brake pedals
Central bevel gear pair	19/41
Upper bevel gear pair	21/22
Lower bevel gear pair	11/45

DRIVING TORQUE VALUES

PARTS TO TORQUE	Driving torque values	
	Nm	kgm
Screw fixing pinion support to the central housing (C1)	70	7.15
Screw fixing side final drive housing to the central housing (C2)	50	5.10
Steering cylinder cover fixing screw (C3)	25	2.55
Screw fixing hub to kingpin (C4)	50	5.10

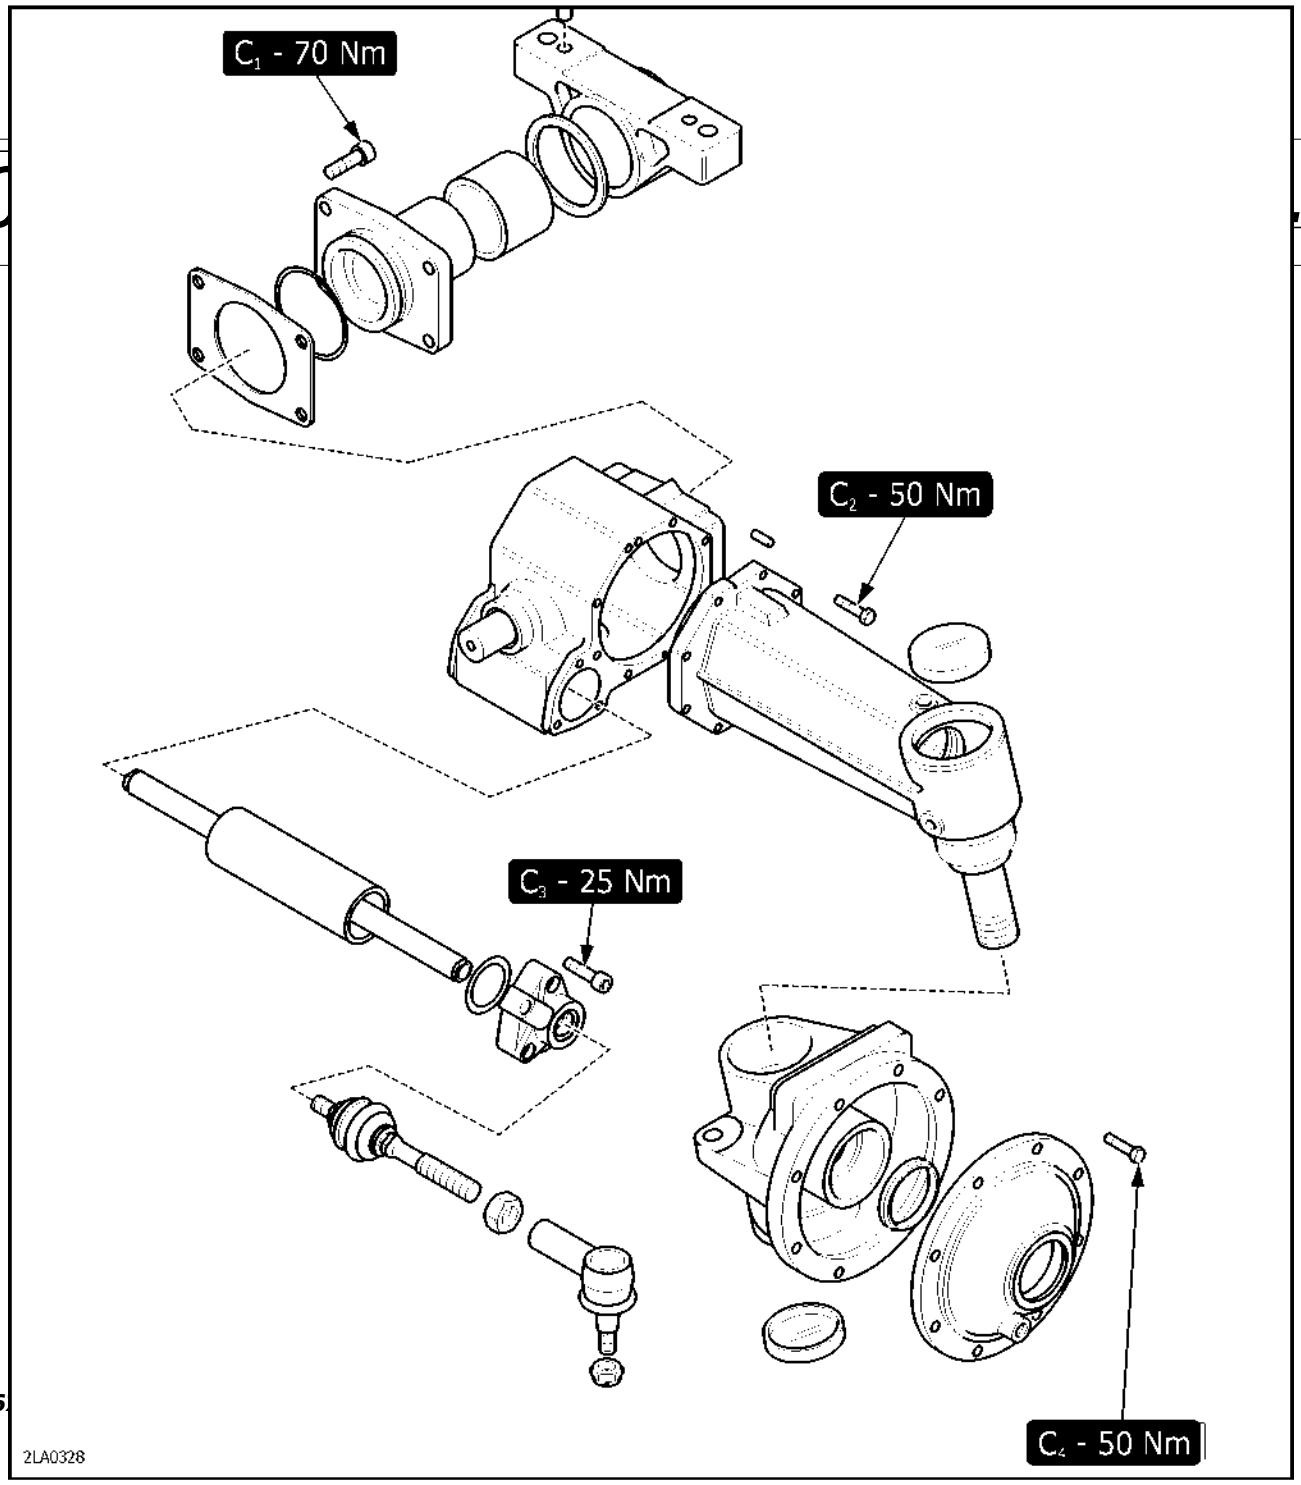

SPECIFIC EQUIPMENT

Code	Description
001 DT MIS	Lock nut wrench
002 DT MIS	Pinion play adjuster tool
003 DT MIS	Lock nut wrench
004 DT MIS	Kingpin play adjuster tool




SECTION 510 - FRONT AXLE

SECTIONS


Central differential section

1. Transmission shaft coupling
2. Outer pinion taper roller bearing
3. Inner pinion taper roller bearing
4. Bevel pinion.
5. Planetary
6. RH axle shaft.
7. Side final drive housing
8. Central bevel gear pair adjuster shims
9. RH differential bearing
10. Crown wheel
11. Bevel ring gear
12. Planetary pin
13. Differential housing
14. Crown wheel
15. LH differential bearing
16. Central bevel gear pair adjuster shims
17. Side final drive housing
18. Diff lock sleeve
19. RH axle shaft.
20. Diff lock
21. Central bevel pinion adjuster shims
22. Pinion support
23. Central bevel pinion bearing adjuster nut
24. Seal

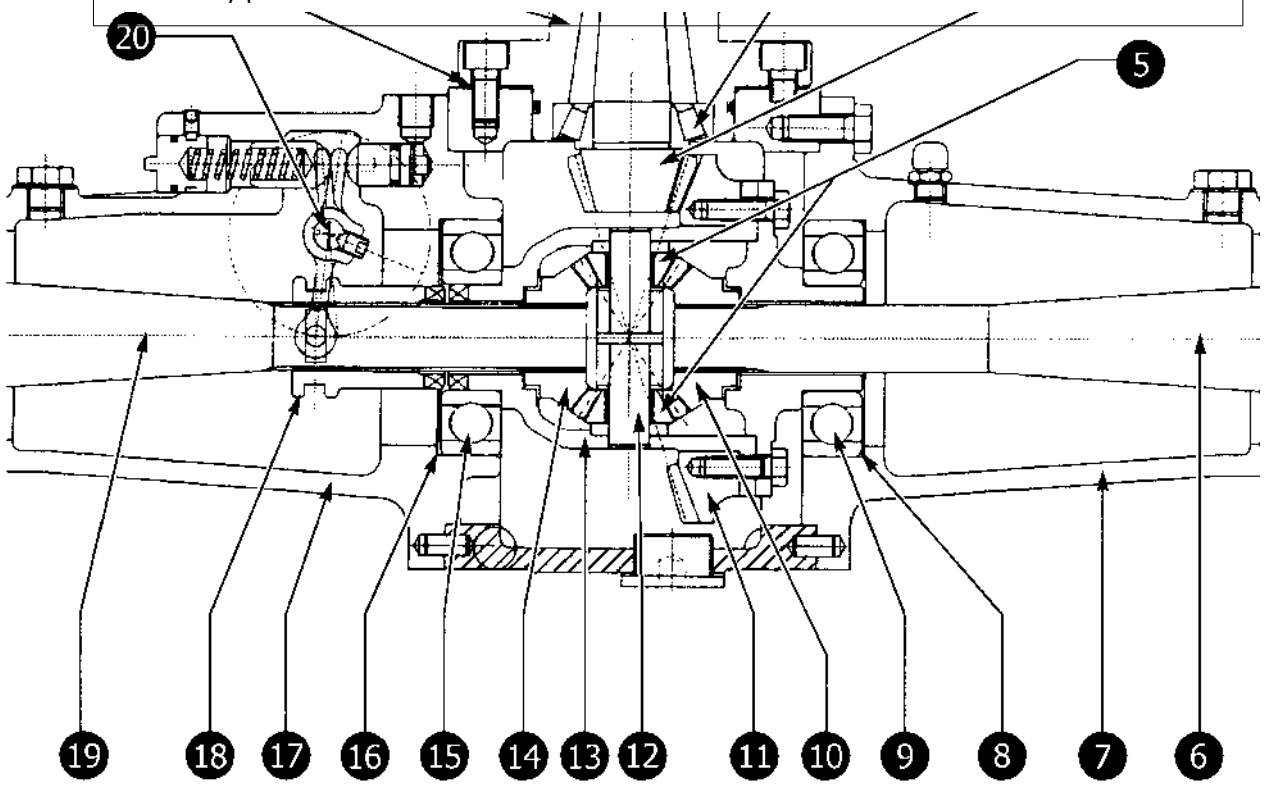

2LA0542

https://truckmanualshub.com/

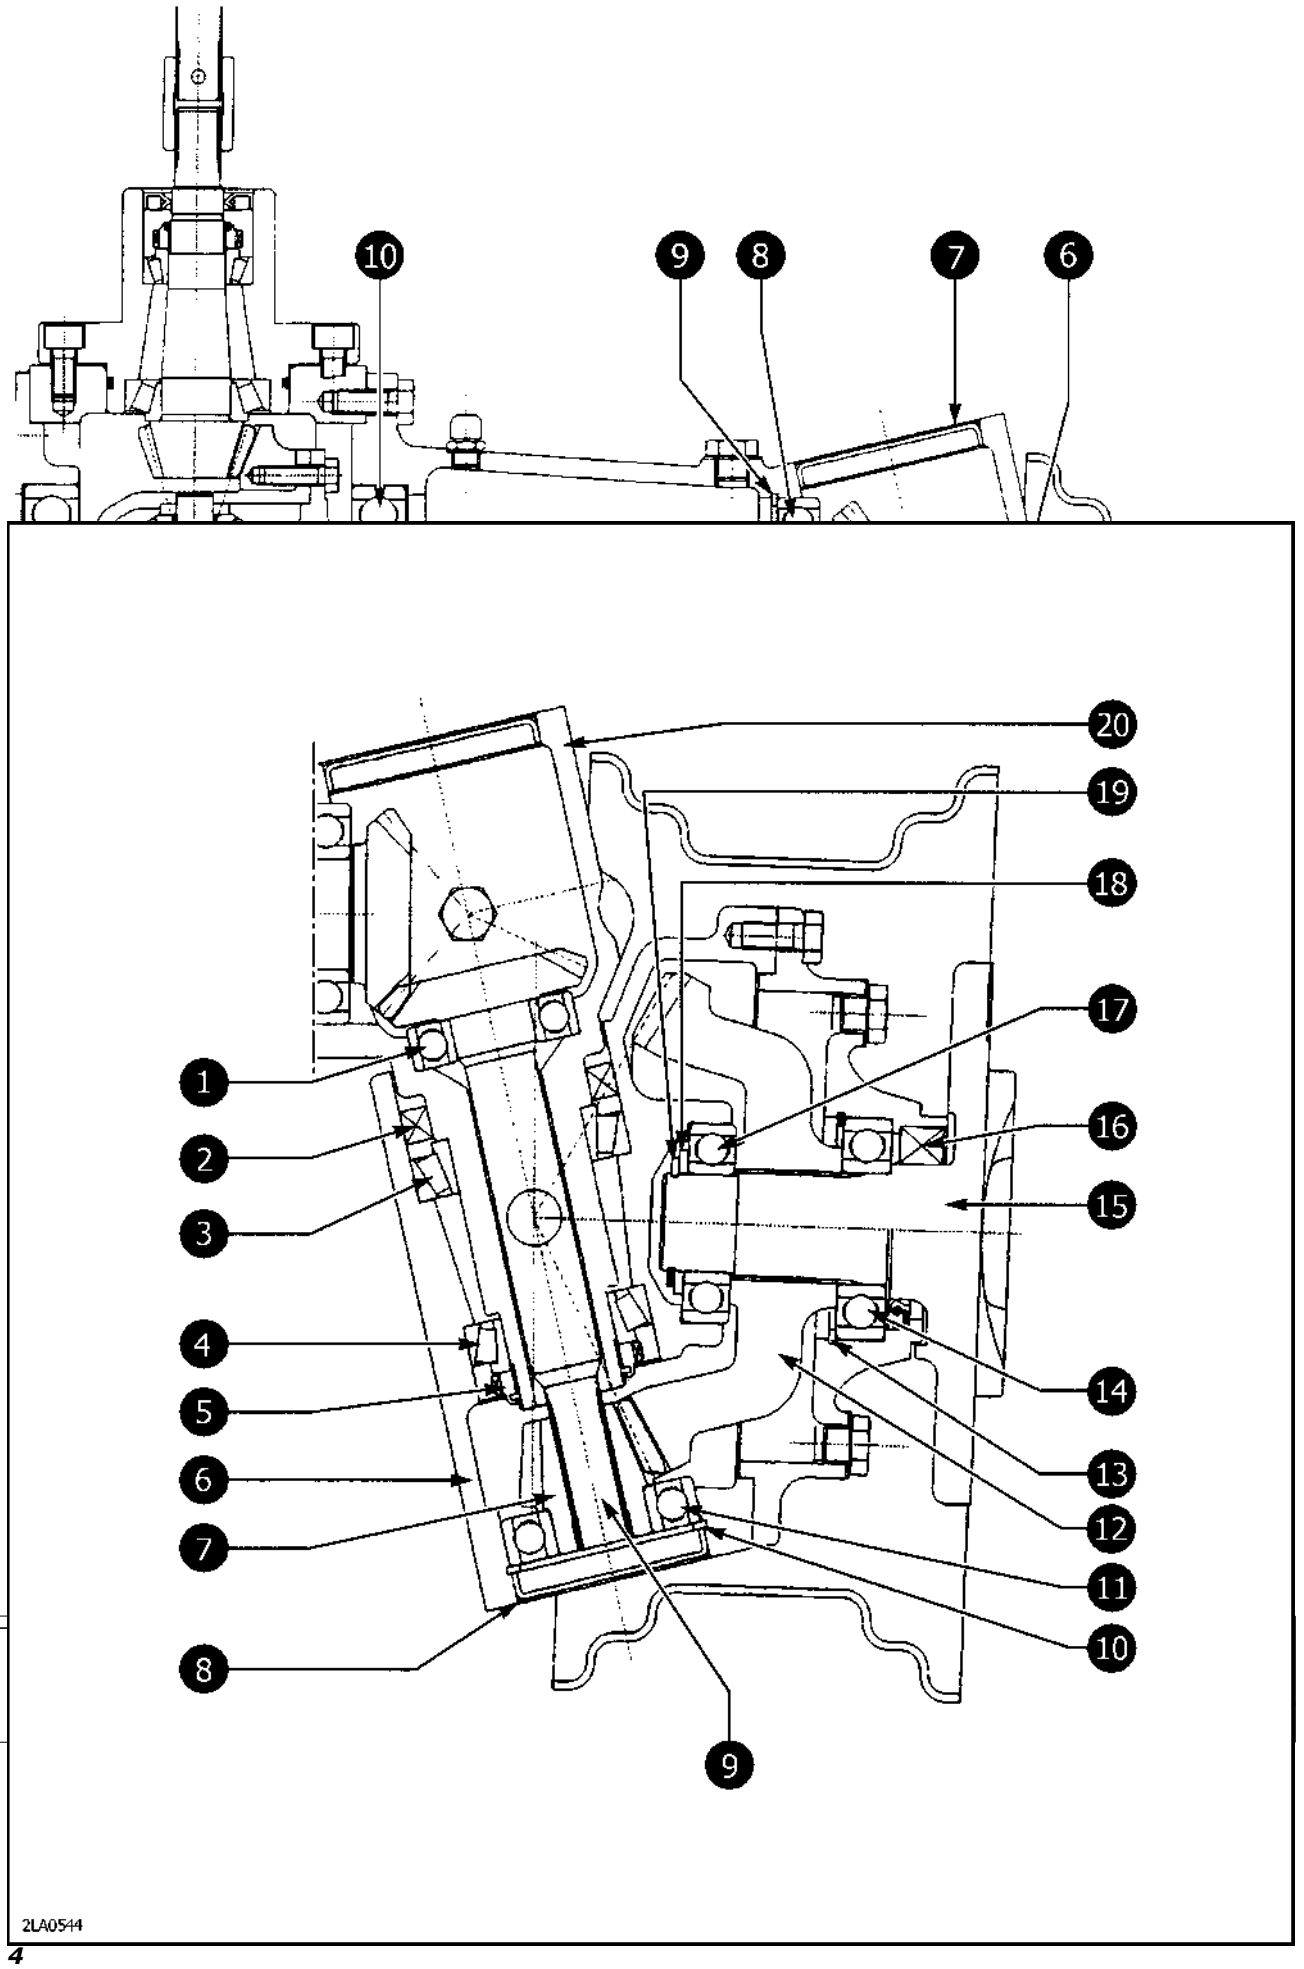

4
Section drawing of final drives and hubs

https://truckmanualshub.com/

1. Vertical axle shaft support bearing
2. Seal
3. Upper pivot taper roller bearing
4. Lower pivot taper roller bearing
5. Taper roller bearing lock nut
6. Pivot pin
7. Final drive bevel pinion
8. Cover
9. Vertical axle shaft
10. Spring ring.
11. Pinion support bearing
12. Final drive ring bevel gear
13. Spring ring.
14. Outer bearing to support bevel gear
15. Hub
16. Seal
17. Inner bearing to support bevel gear
18. Spacer
19. Spring ring.
20. Side final drive housing



DESCRIPTION AND OPERATION

Axle assembly

The front axle consists of a lockable central differ- ential, split rigid axle shafts, integral pivot pins and final drives with bevel gear pairs in the hubs.

The differential assembly has four planetary gears and can be locked by means of a hydraulically con- trolled clutch mechanism with frontal teeth.

https://truckmanualshub.com/

Torque is transmitted from the differential to the final drives through the axle shafts, each of which split by means of a pair of bevel gears, and coaxi- ally passes through the relative pivot pin.
The steering housing is installed in front of the axle and, by means of linkages, turns the hubs around the pivot pins.
The axle can swing around the horizontal axle as it is borne by two supports fixed to the chassis.

Differential lock

In the locked position (A), the sleeve (1, fig. 5) with frontal toothing meshes with the relative toothing on the differential housing.
Since the sleeve is grooved on the inside and thus enbloc with the axle shaft, the differential housing and the lh axle shaft (and, consequently, the other axle shaft) are enbloc with each other in this posi- tion.
Both axle shafts therefore spin at the same speed and the differential is locked.
Engagement is obtained by allowing fluid under pressure to flow to a hydraulic piston that acts on the engaging fork.

In the unlocked position (B), the sleeve (1, fig. 6) is moved away from the toothing, thus releasing the differential housing which continues to operate nor- mally.
Disengagement is obtained by relieving the pressure of the fluid that acts on the piston, while a return spring moves the piston to the unlocked position and keeps it there.

TROUBLESHOOTING FOR THE FRONT AXLE DIFF LOCK DEVICE

Faults	Possible causes	Remedies
The diff lock fails to engage	The diff lock control switch is inefficient	Replace the switch
	No power transmitted to the solenoid valve: connections disconnected, damaged or relay defective	Make the electrical connection and replace the defective parts
	Controlling solenoid valve jammed in the discharge phase	Overhaul or replace the solenoid valve
	Oil leaks through the seals, with consequent drop in pressure	Replace the defective seals
	Inefficient hydraulic circuit	Overhaul the circuit
The diff lock fails to disengage	Controlling solenoid valve jammed in the delivery phase	Overhaul or replace the solenoid valve
	No power transmitted to the solenoid valve: connections disconnected, damaged or relay defective	Make the electrical connection and replace the defective parts
	Faulty release spring	Replace the spring

https://truckmanualshub.com/

FRONT AXLE

Splitting

DANGER

Lift and handle all heavy parts with lifting equipment of an adequate capacity.
Make sure that the units or parts are supported by appropriately sized harness and hooks.
Make sure that there are no bystanders near the load being lifted.

<n

*0^*

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.


Proceed as follows:

1. Place chocks under the rear wheels.


2. Remove the spring pin (1) that fixes the PTO shaft sleeve (2).

3. Move the PTO shaft sleeve (1) backwards and disconnect it from the front axle (2).

SECTION 510 - FRONTAXLE

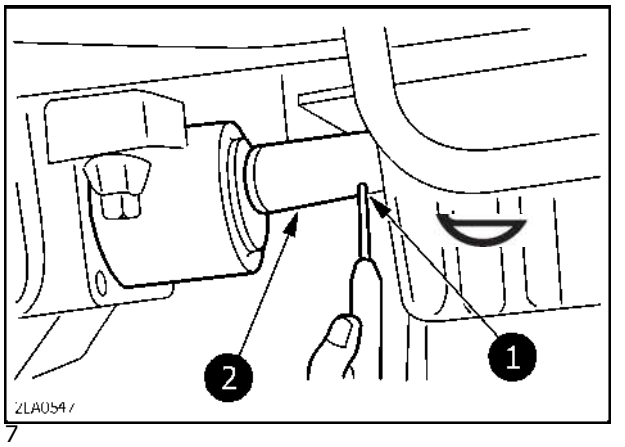


7

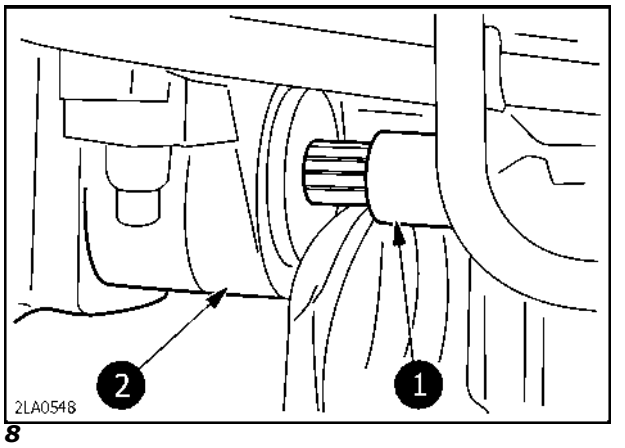

8

4. Unscrew the fixing screws (1) of the front axle.

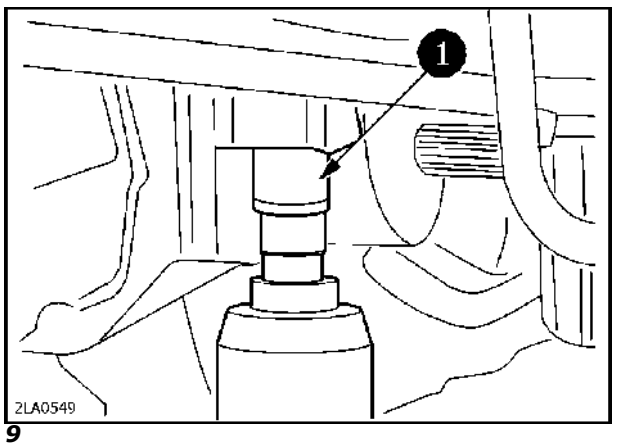


9

https://truckmanualshub.com/

5. Unscrew the screws (1) that fix the hose (2) from the power steering cylinder (3) and drain the fluid from the power steering system.


6. Disconnect the hose (1) from the T union.

Old oil must be disposed of in compliance with the current laws in merit.

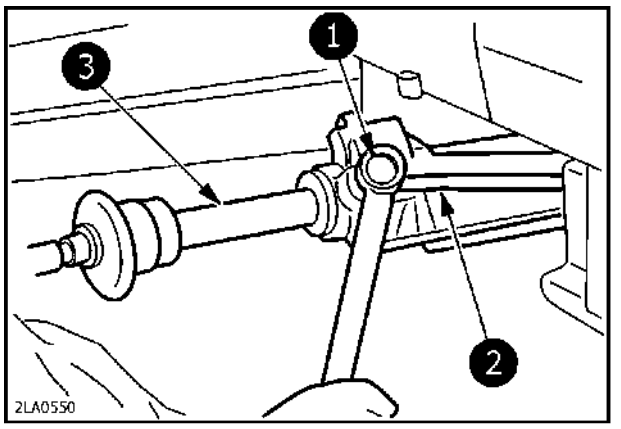


10

7. Place a lift (1) under the front axle (2). Pass a harness (3) under the front ballast and lift the tractor until it splits from the front axle.

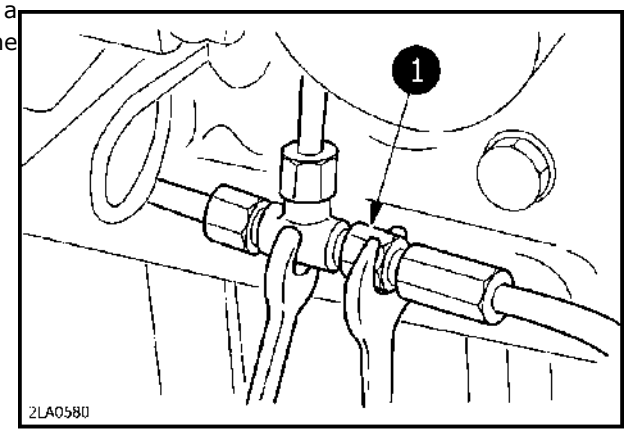

11

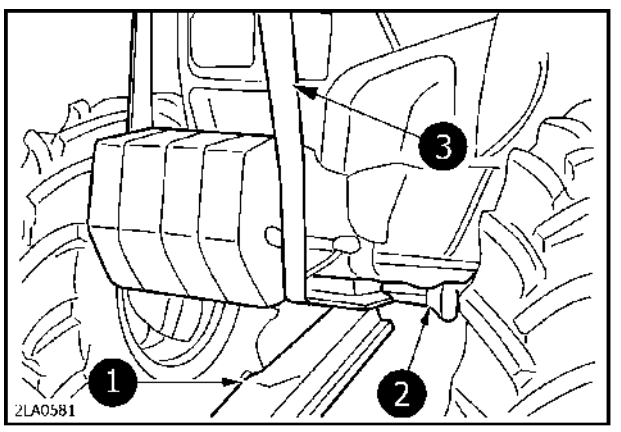

12

https://truckmanualshub.com/

Remou nting

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Comply with the following instructions when fitting the complete axle assembly back on to the tractor:

- Position the complete axle assembly under the tractor. Lower this latter until it touches the axle, then recover the lifting rope.
- Fit the complete axle assembly back on the tractor and torque the fixing bolts.
- Connect the hose to the power steering cylinder and T union. Torque the bolts.
- Connect the PTO sleeve to the front axle.
- Fit the spring pin that fixes the PTO shaft sleeve to the front axle.
- Screw on the drain plugs and pour oil into the power steering system. The prescribed product and relative quantity is given in section 100.
- Remove the chocks from under the wheels.

FRONT AXLE DIFFERENTIAL AND BEVEL GEAR PAIR SUPPORT

Splitting

DANGER

Lift and handle all heavy parts with lifting equipment of an adequate capacity.
Make sure that the units or parts are supported by appropriately sized harness and hooks.
Make sure that there are no bystanders near the load being lifted.


WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Proceed as follows:

1. Remove the axle steering cylinder (1).


2. Remove both side housings (1).

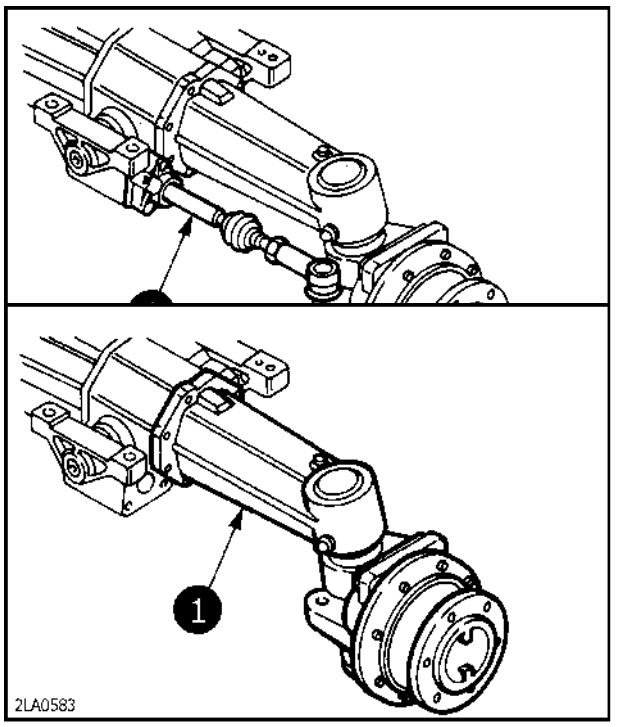

https://truckmanualshub.com/


https://truckmanualshub.com/

3. Remove the differential assembly (1) from the central housing.

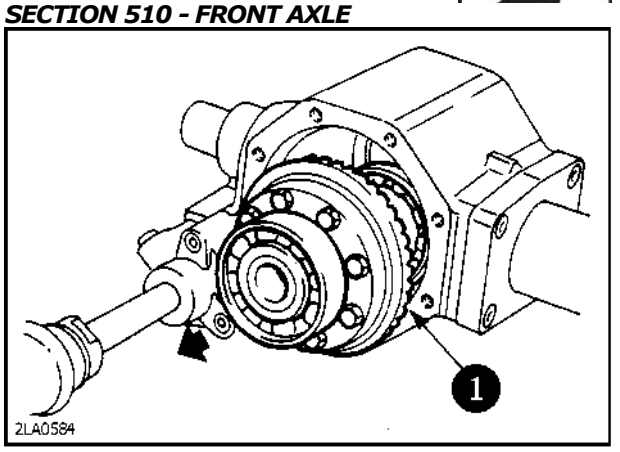

15

4. Unscrew the screws that fix the bevel pinion support and remove the actual support itself (1). Recover the spacer (2).

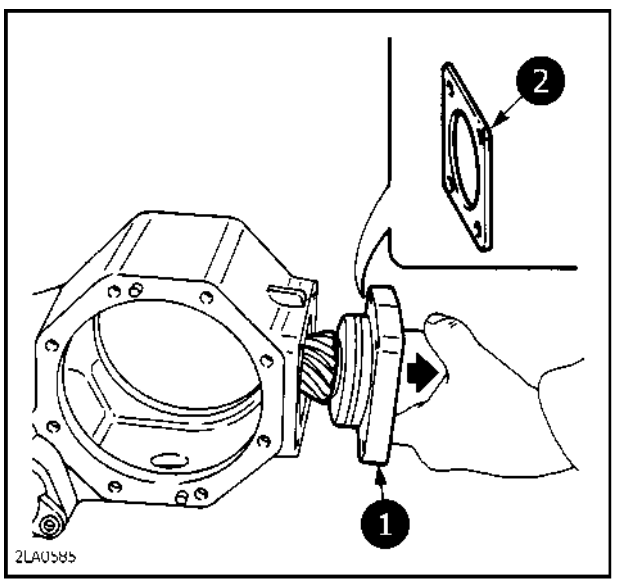


16

Remounting

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

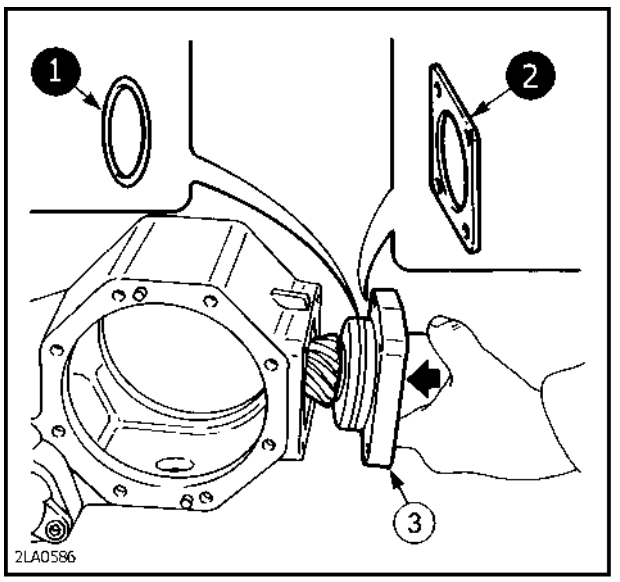


17

Remount the front bevel gear pair support bearing the following recommendations in mind:

- Refer to figs. 2, 3 and 4.
- Apply the driving torques listed on page 4.
- Mount a new retention ring (1). Mount the adjuster spacer (2) and then mount the bevel pinion support (3).
- Proceed by remounting both side housings.
- Now remount the axle steering cylinder.

Proceed as follows:

1. Remove the seals (1). Unscrew the locking ring nut (2) with wrench **001 DT MIS** and remove it.

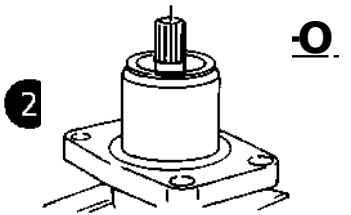

FRONT BEVEL GEAR PAIR - OVERHAUL

garments
nd safety

Demounting


https://truckmanualshub.com/

2. Remove the pinion (1) complete with inner bearing rings.


3. Remove both the outer rings (1) from the support. Remove the inner ring from the pinion if necessary.

2LA0587

18

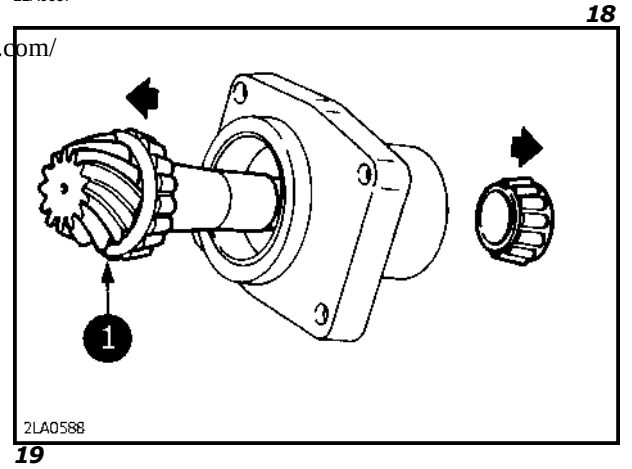

19

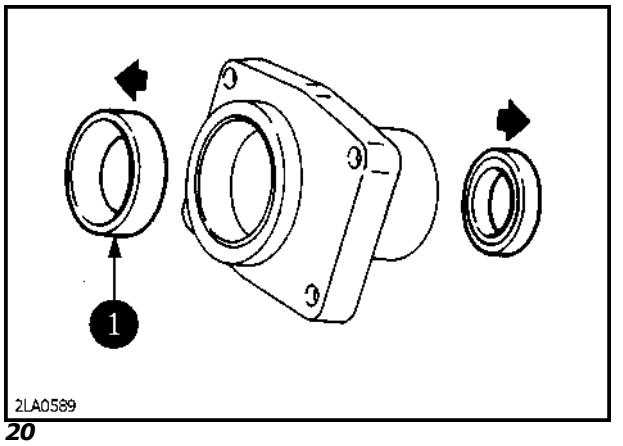


20

https://truckmanualshub.com/

4. Remount the front bevel gear pair bearing the following recommendations in mind:


- Refer to figure 2.
- Apply the driving torques listed on page 4.
  - Proceed by remounting the parts in the following way:

5. If removed, mount the inner bearing ring on the pinion side on the actual pinion itself, using an adequate plug.

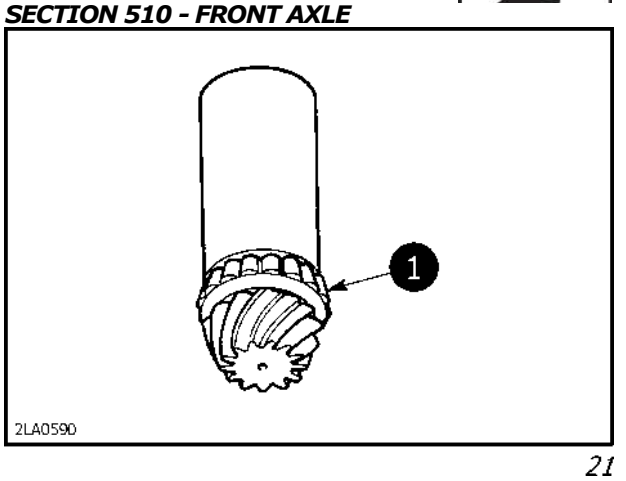


21

6. Mount the outer ring on the pinion side (1) and grooved side (2), into the relative seats in the support.

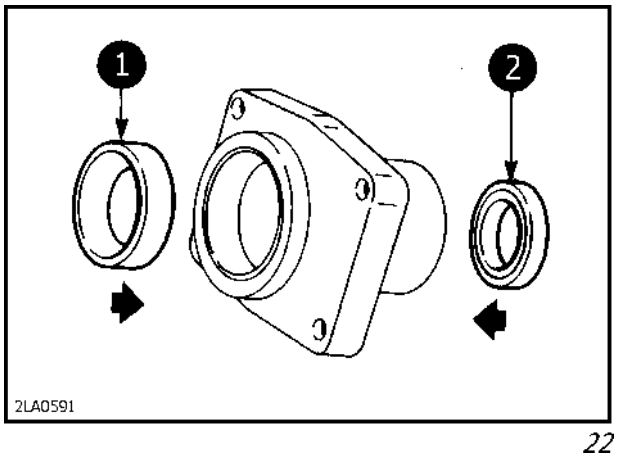

22

7. Mount the pinion into the support. Now mount the inner bearing on the grooved side (1) and then mount the lock nut (2).

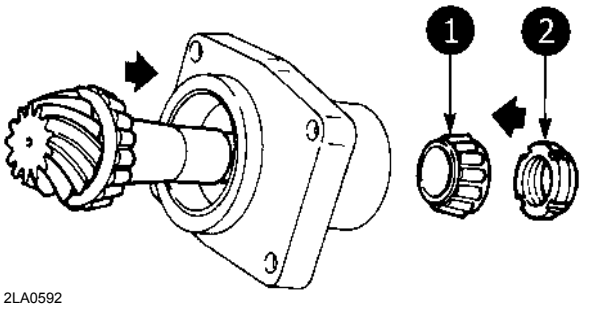


23

Bevel pinion bearing preload

Proceed as follows:

1. Tighten the lock until until the prescribed pinion bearing preload is obtained.

Pinion bearing rolling torque:
1.0 - 1.2 Nm

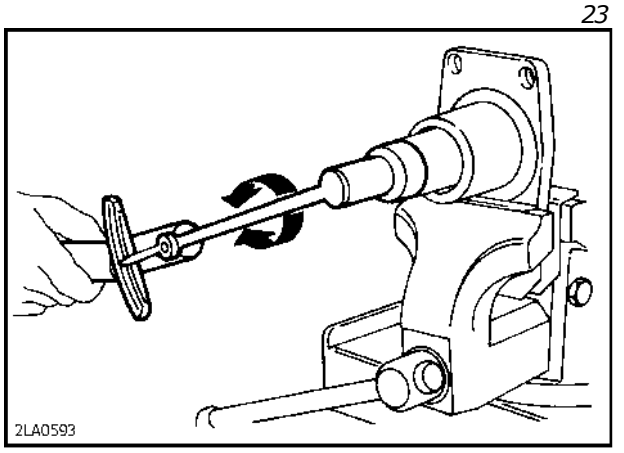


24

Adjustment of the axial position of the bevel pinion

Proceed as follows:

1. Measure the distance between the pinion head and bearing flange (dimension A).
2. Measure the thickness of the central housing wall (dimension C).
3. Measure the inner diameter of the seat of the side final drive housing (dimension D).
4. Establish the effective distance (dimension B) between the pinion head and ring gear axis by applying the following relation.

   B = (D/2) + C - A mm

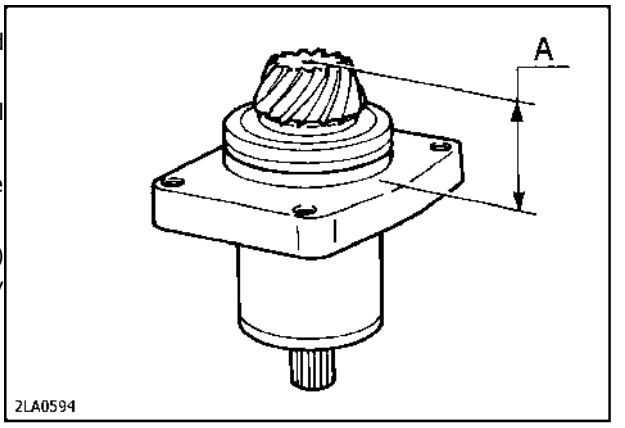

25


5. Establish the thickness of the spacer to apply between the pinion support and central hous- ing by applying the following relation.

   S = 48 mm - B


   Example:
   D = 142 mm C = 24 mm A = 48.5 mm

   obtains B = (142 : 2) + 24 - 48.5 = 46.5 mm thus S

   = 48 - 46.5 = 1.5 mm

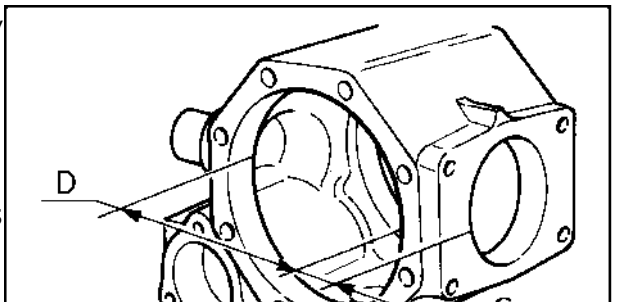


6. Mount calculated spacer S (1) and the pinion support (2) then tighten the screws to the pre- scribed torque value.

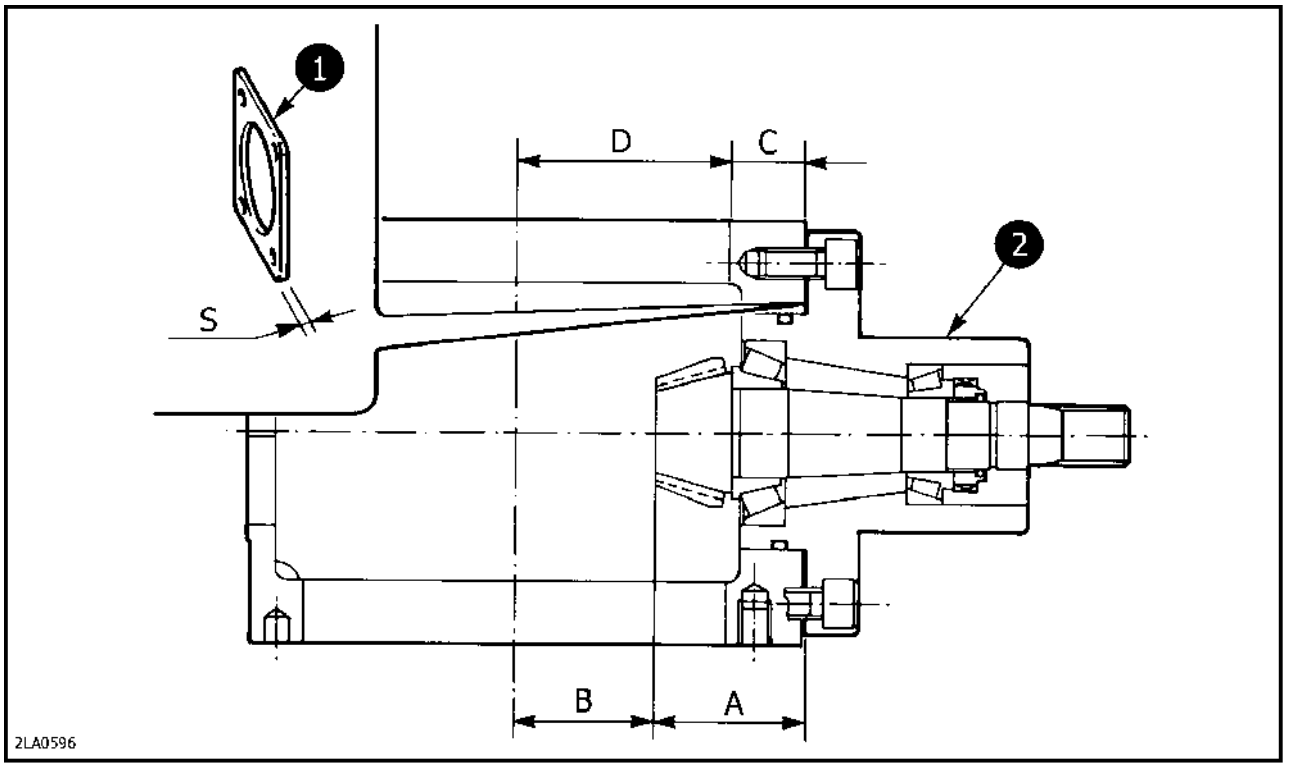

27

https://truckmanualshub.com/

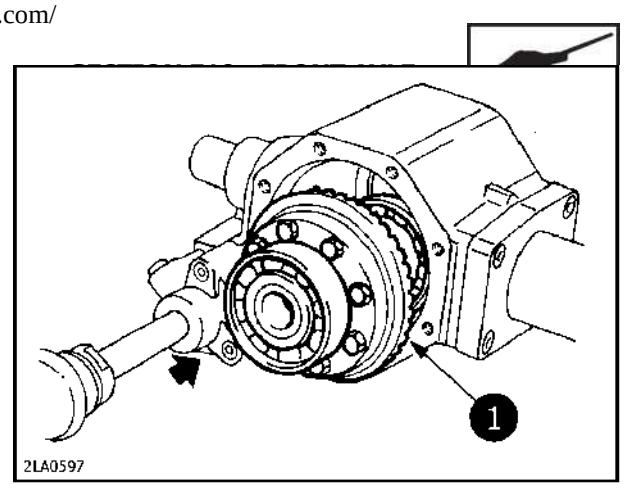


28

Pinion - ring gear play adjustment

Proceed as follows:

1. Fit the differential assembly (1) into the central housing.

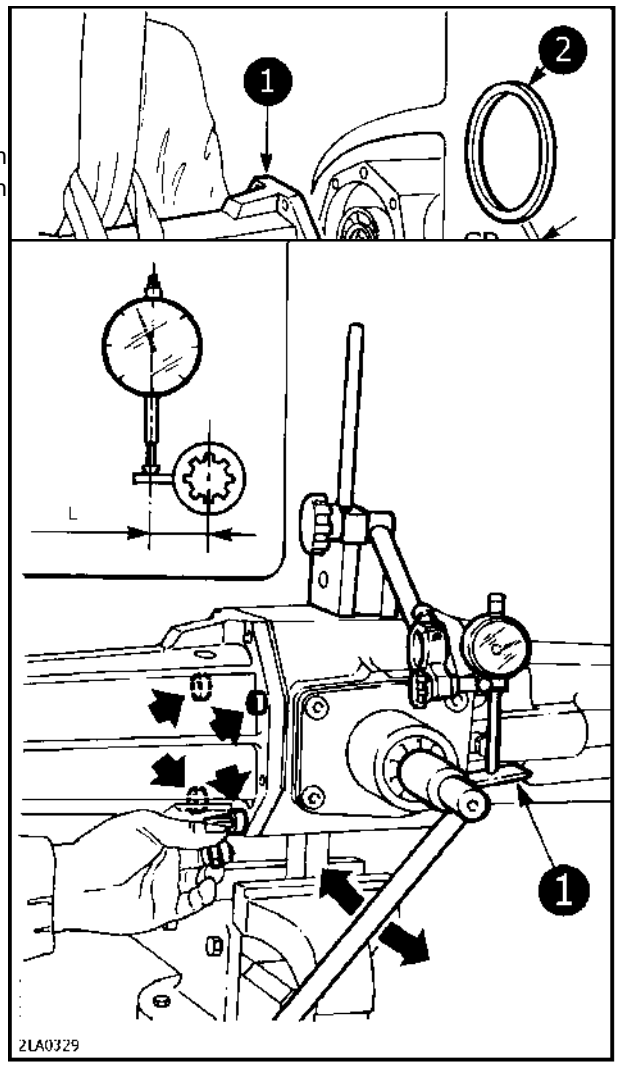

2. Mount both the side housings (1), inserting a SP = 3 mm spacer (2) and fitting four screws in a diagonal position without torquing them.

3. Mount tool **002 DT MIS** (1) on the grooved pinion tang, then mount a centesimal comparator in the indicated direction, in order to measure the play.

The measurement must be made about 25 mm from the pinion axis (distance (L)).

4. Tighten the screws of the side housing on the ring gear side (shown by the arrows in the figure) in a uniform way while measuring the pinion - ring gear play until the prescribed value has been obtained.

Pinion - ring gear play 0.8 - 0.22 mm

It is advisable to use a thickness gauge to maintain an even gap between the two housings.

30

Proceed as follows:

1. Remove the complete pinion support to access the differential.


2. Proceeding in a similar way, tighten the screws of the side housing on the opposite side in an uniform way in order to annul the float of the differential bearings.

3. Use a thickness gauge to measure residue gap L2.

4. Establish the valve of shim S_2 by applying the following relation:

$$S_2 = SH - L_2$$

5. Remove the side housings and insert previously calculated spacers with thickness S_1 for the one on the ring gear side and S_2 for the one on the side opposite the ring gear.

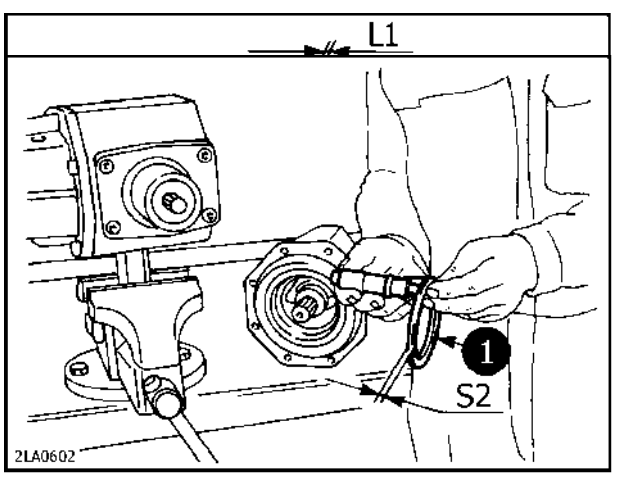

34


https://truckmanualshub.com/

https://truckmanualshub.com/



6. Apply sealant along the indicated part of the jointing edge between the side housing and central housing.

7. Remount both side housings and tighten the screws to the prescribed driving torque value.

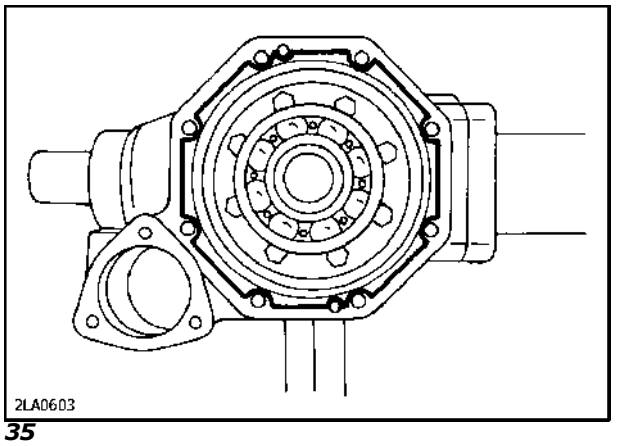


35



8. Remount the pinion support with the spacer and retention ring, then tighten the screws to the prescribed driving torque value.

9. Mount the seal (1) on the pinion support (2) using a suitable mallet and complying with the indicated positions.

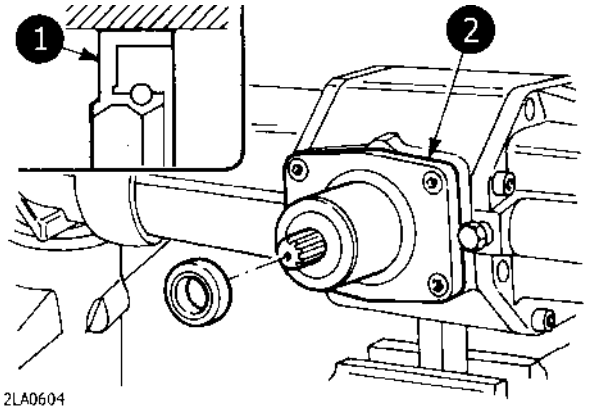

36

Proceed as follows:

1. Remove the left side housing.


FRONT DIFF LOCK - OVERHAUL

Demounting




WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

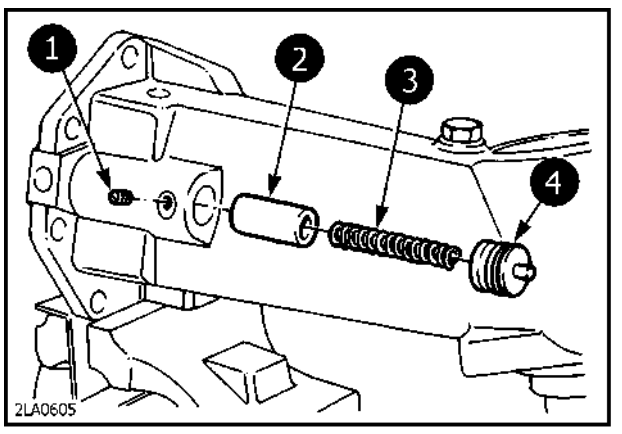

37

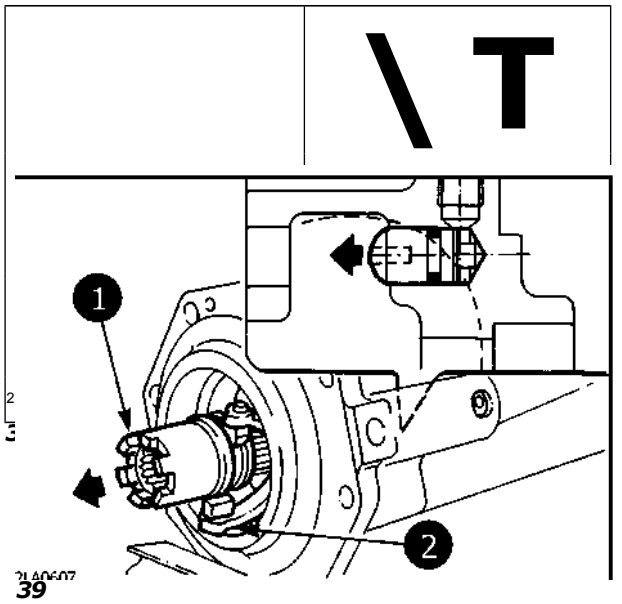

39


https://truckmanualshub.com/

2. Unscrew the locking screw (1) and remove the plug (4), the spring (3) and the counter-rod (2).

3. Unscrew the retainer screw (2). Tighten an M6 screw (3) on to the fork pin (1) and use it as a puller to remove this latter as indicated.

4. Remove the fork (2) and sliding sleeve (1). Also remove the control plunger from the housing.

https://truckmanualshub.com/

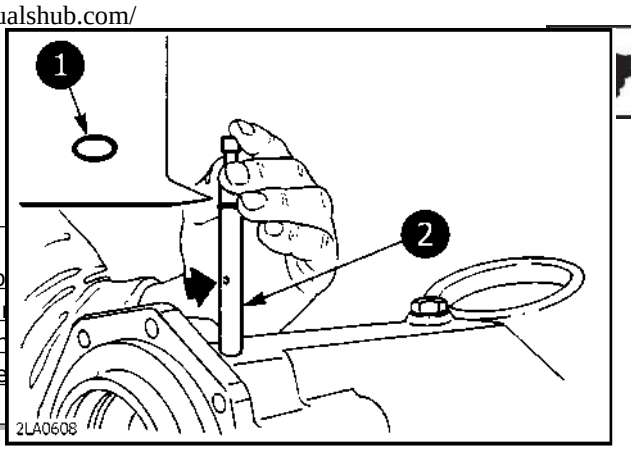

40

WARNING

Handle all parts with great care. Do not p
your hands or fingers between one part a
the next. Wear approved safety garmen
such as goggles, gloves and safe
footwear.


Remount the front differential lock bearing the following recommendations in mind:

- Refer to fig. 2.
- Apply the driving torques listed on page 4.
- Mount a new retention ring and fit the plunger back into its housing.
- Mount the sliding sleeve along with the fork inside the side housing.
- Mount a new retention ring and fit the pin into the fork, complying with the position of the threaded hole as indicated.
- Tighten the fork retainer screw.
- Mount the rod, the spring and the plug and lock in place with the screw.
- Check by hand to make sure that the device operates correctly.
- Proceed by remounting the left side housing.

WHEEL HUB

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

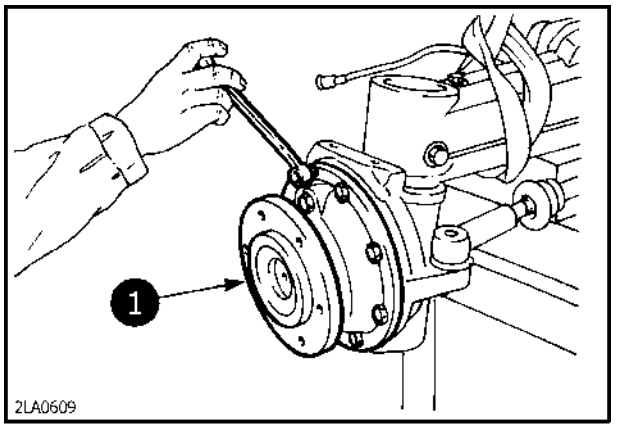



41

Demounting

Proceed as follows:

1. Unscrew the hub fixing screws (1, fig. 41) and remove the hub complete with bevel gear.
2. Remove the spring ring (1) and the spacer (2).

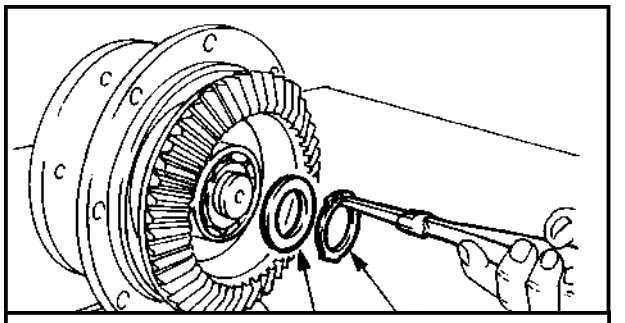

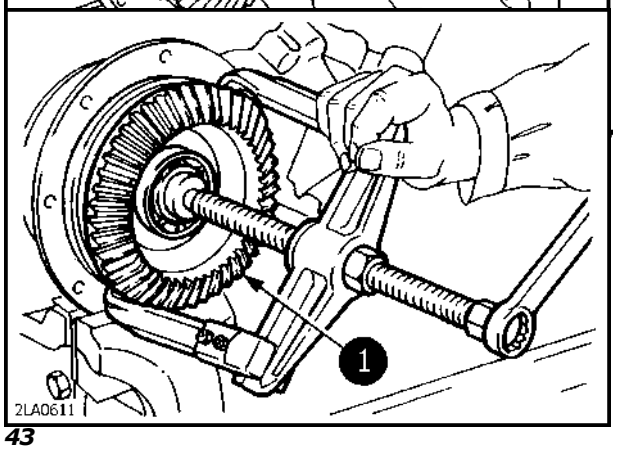


43

3. Remove the bevel gear (1) complete with bearing using a suitable puller.

https://truckmanualshub.com/

4. Remove the inner spring ring (1) and then remove the bearing (2) and seal (3) from the relative housing.

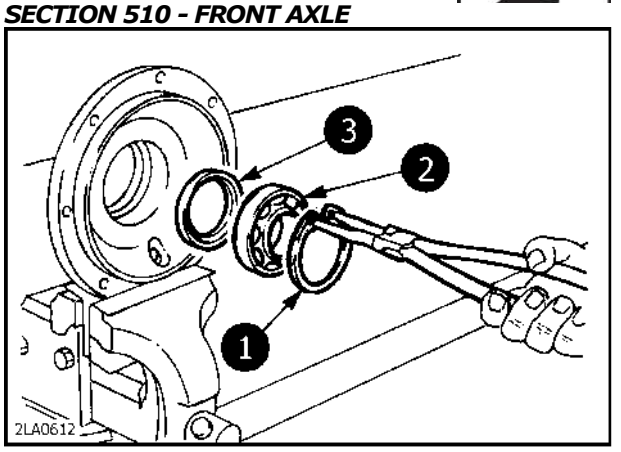

44


Assembly

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.


Remount the wheel hub bearing the following recommendations in mind:

Refer to figs. 3 and 4.
Refer to the driving torques listed on page 4.

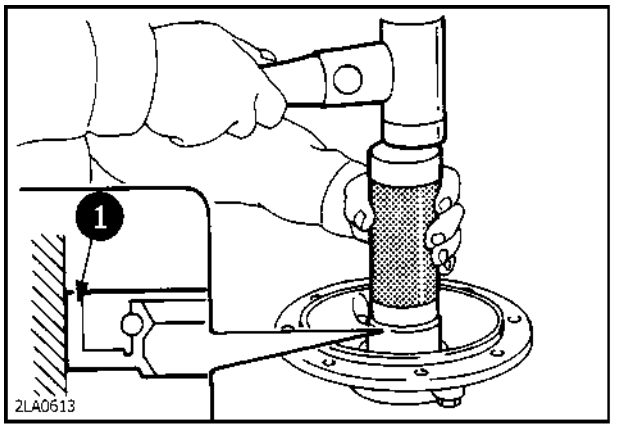

45

Mount a new seal (1) using a suitable tool and comply with the indicated position. Fill the cavity between the seal lips with the prescribed type of grease.
Mount the bearing in the seat using a mallet and then mount the spring ring.
Mount the wheel hub and then mount the bearing, the spacer and lastly the spring ring.
Apply sealant all along the jointing edge between the hub housing and pivot pin, com- plying with the indications in the figure.
Remount the complete wheel hub.

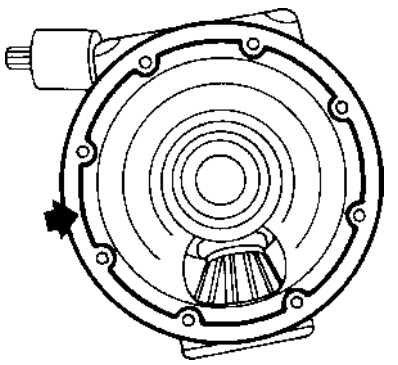

46

FRONT FINAL DRIVE - SPLITTING REMOUNTING

Splitting


Proceed as follows:

DANGER

Lift and handle all heavy parts with lifting

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

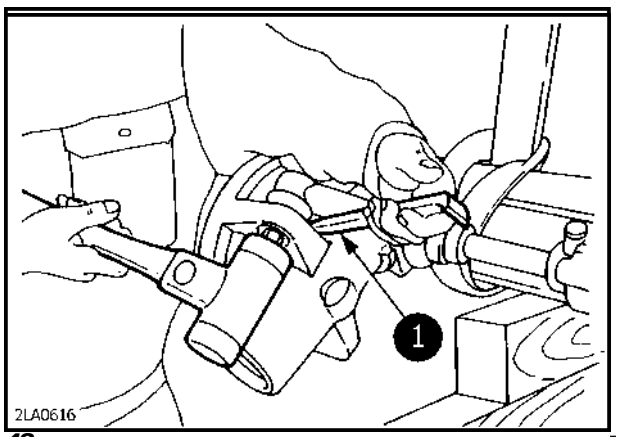


48

https://truckmanualshub.com/

1. Remove the split pin (2) and the lock nut (1).

2. Remove the head from its seat using an appro- priate lever (1).

https://truckmanualshub.com/

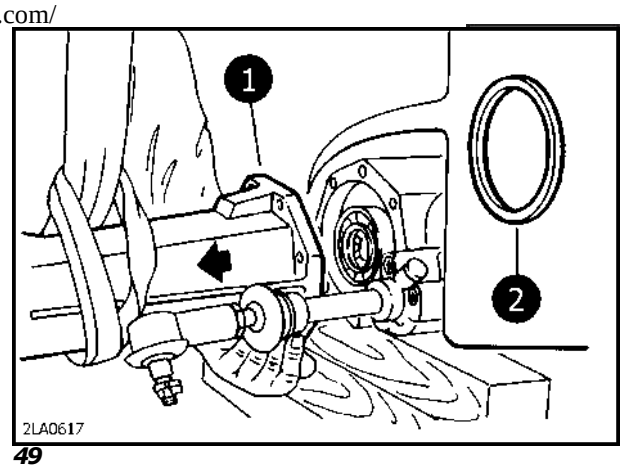

49

Take care of the differential assembly, which tends to be dragged out of the side housing.

3. Remove the axle breather (only from the right), then unscrew the fixing screws and remove the side housing (1). Recover the adjuster spacer (2).

WARNING


Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Remounting

Remount the front final drive bearing the following recommendations in mind:

Refer to figs. 2 and 3.


Refer to the driving torques listed on page 4. Apply sealant all along the jointing edge between the side housing and central housing, complying with the indications in the figure.

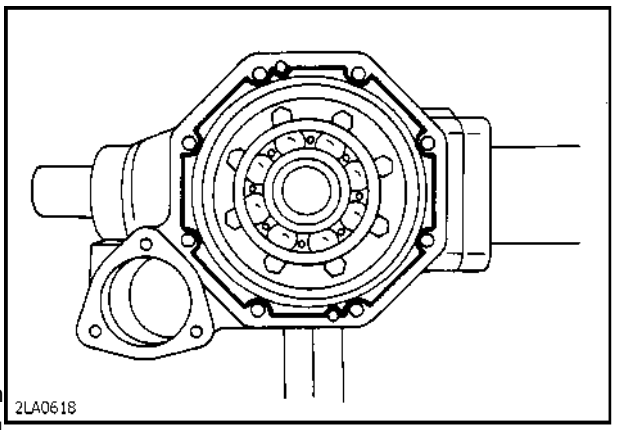

50

- Mount the adjuster spacer (1) in the relative seat in the side housing (2), then mount this latter, ta king care to center the differential bearing and then the centering pins.
- Mount the steering head in place with a new split pin.

0^

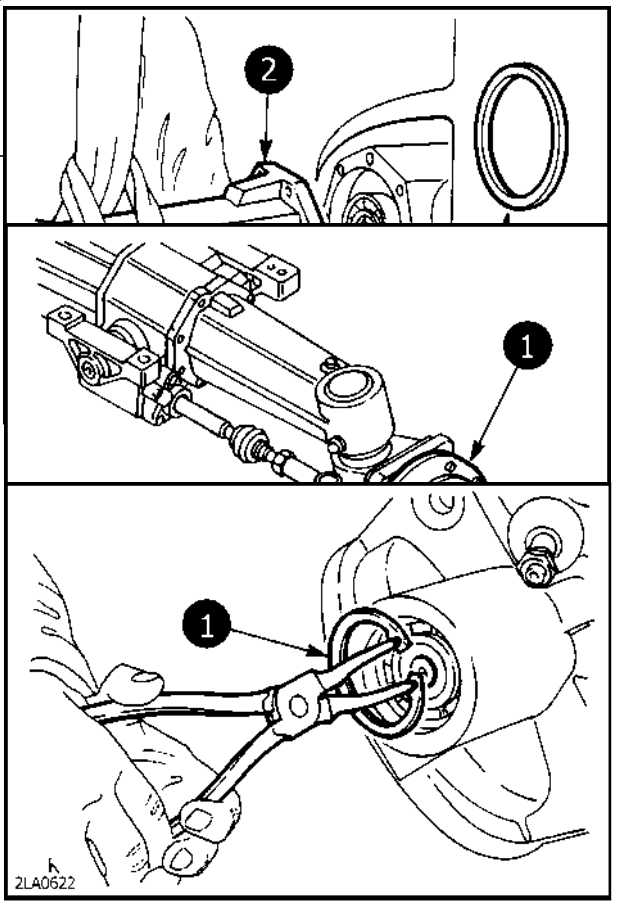

54

FRONT

DANGER

Lift and handle all heavy parts with lifting equipment of an adequate capacity.

Make sure that the units or parts are supported by appropriately sized harness and hooks.

Make sure that there are no bystanders near the load being lifted.

Demounting

Proceed as follows:

1. Remove the wheel hub.

It is absolutely essential to replace the plugs.


https://truckmanualshub.com/

2. Remove the lower (1) and upper (2) plugs using a suitable punch.

3. Remove the spring ring (1).


https://truckmanualshub.com/

4. Remove the bearing and bevel pinion (1) using an adequate tool. Also remove the bearing from the pinion if necessary.

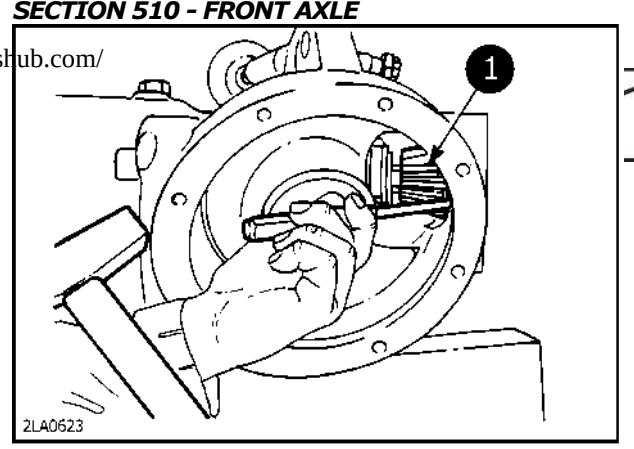


55

5. Remove the ring nut that locks the taper bear- ings with wrench **003 DT MIS** (1).

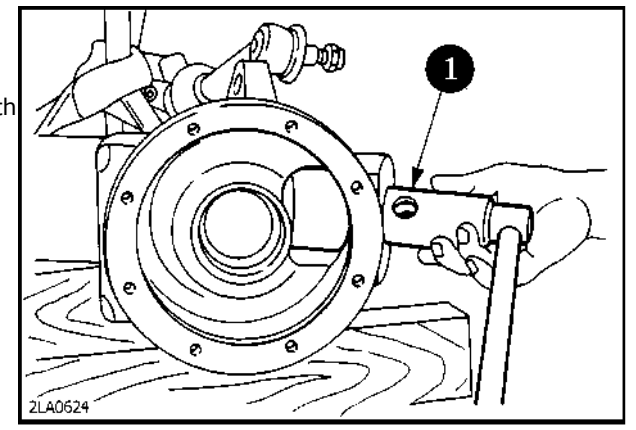

56


6. Support the pivot pin (1) in an adequate way, then remove it using a lever. Tap in carefully with a plastic mallet until the bearings have been freed. Remove both the inner bearing rings.

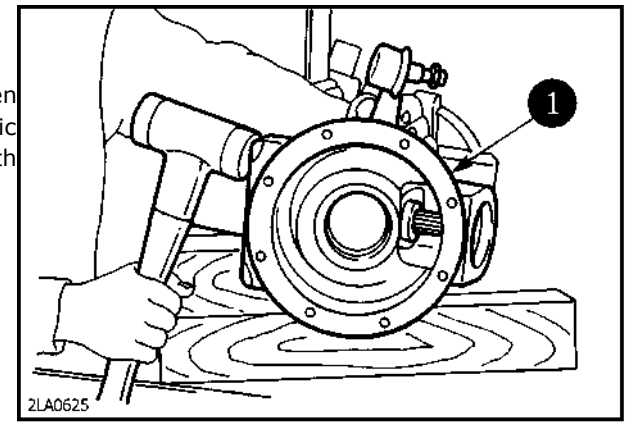

57

7. Remove the dust guard ring (1), the seal (2), the outer ring (3) of the upper bearing and the outer ring (4) of the lower bearing from the pivot pin.


8. Remove the spring ring (1), using a pair of pli- ers for inner spring rings equipped with appro- priate extensions.

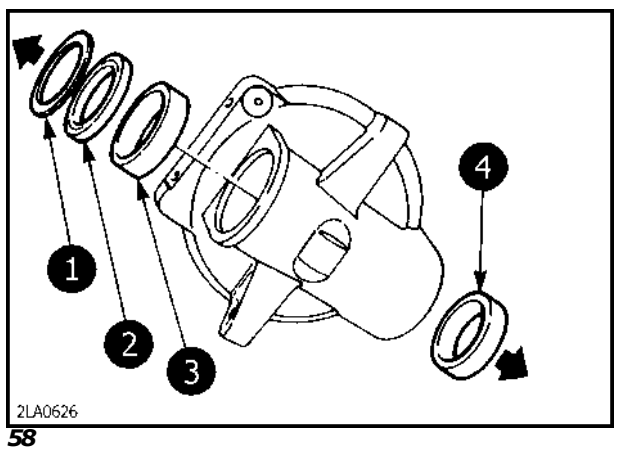


58

https://truckmanualshub.com/

9. Remove the horizontal axle shaft (1) by lever- ing on the bevel gear side. Remove the bearing if necessary.

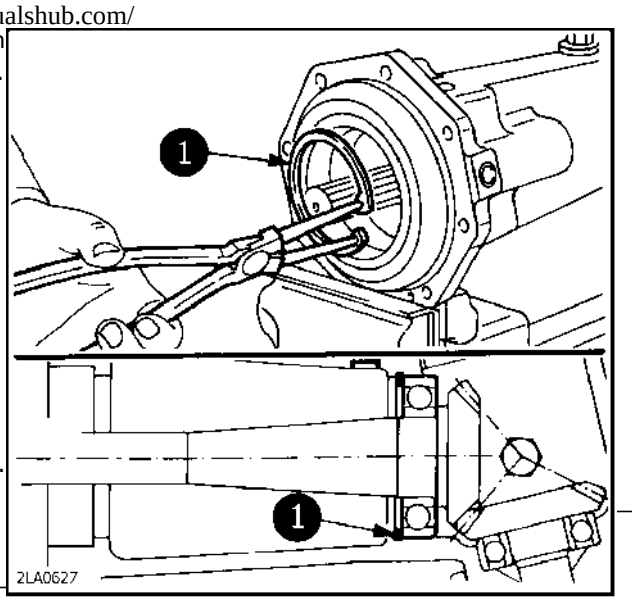

10. Remove the vertical axle shaft (2) from above. remove the bearing (1) if necessary.

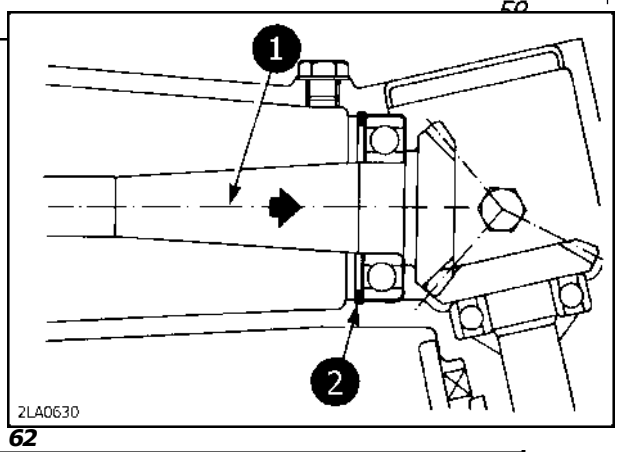

2LA0628 **62**

Remount the front final drive bearing the following recommendations in mind:
Refer to figs. 3 and 4.


ıbly

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Refer to the driving torques listed on page 4.

Mount the vertical axle shaft complete with bearing.
Mount the horizontal axle shaft (1) complete with bearing, pushing until the gears contact. Now lock it in place with the spring ring.

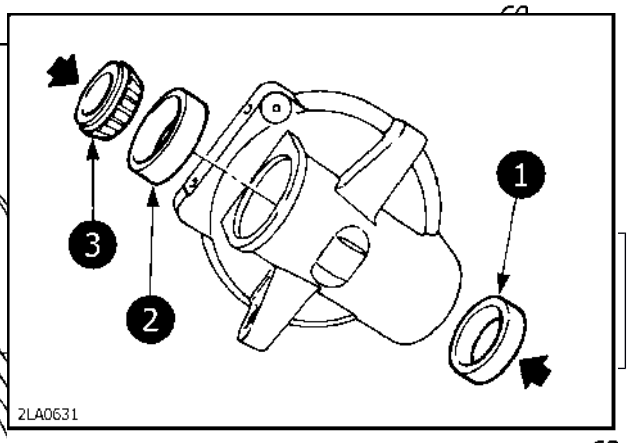


63

Take care to ensure that the bearing is correctly mounted on the axle shaft and the relative spring retainer ring on the side housing.

2LA0629

- Mount the outer ring of the lower bearing (1) and the upper bearing (2) in the pivot pin. Now mount the upper bearing (3).

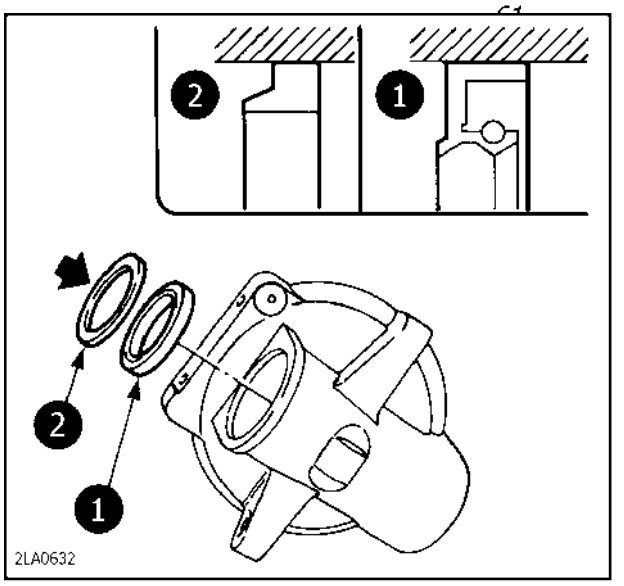


64

- Mount a new seal (1) and a new dust guard ring (2) using a suitable tool and comply with the indicated position. Fill the cavity between the seal lips with the prescribed type of grease.

https://truckmanualshub.com/

- Mount the pivot pin with the utmost care until it is fully inserted. Now mount the inner ring of the lower bearing (1) and tighten the lock nut (2) without torquing.

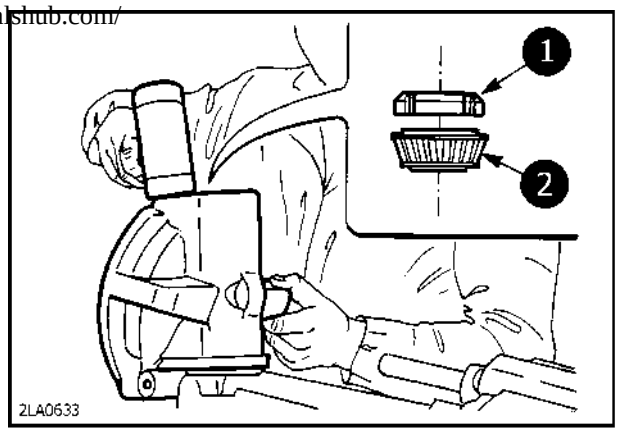


65

- Mount tool **004 DT MIS** (1) on to the pivot pin.
- Use a torque wrench to check that the rolling torque of the bearings is within the prescribed values.

Pivot pin bearing rolling torque: 15 - 20 Nm

- Adjust with the ring nut if this is not the case.

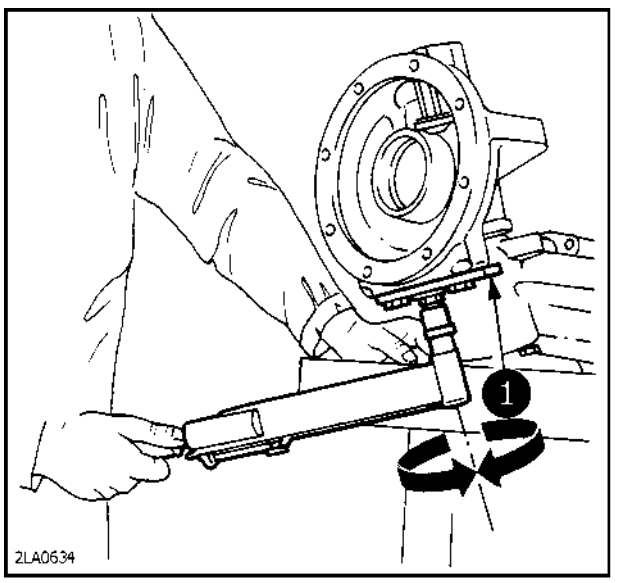

66

- Remount the wheel hub.
- Mount the bevel pinion complete with bearing and fix it in place with the spring ring.
- Mount new closing plugs and apply sealant along the jointing edges.

AXLE STEERING CYLINDER - SPLITTING REMOUNTING

Splitting

Proceed as follows:

DANGER


Lift and handle all heavy parts with lifting equipment of an adequate capacity.
Make sure that the units or parts are supported by appropriately sized harness and hooks.
Make sure that there are no bystanders near the load being lifted.

WARNING


Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

1. Remove the split pin (2) and the lock nut (1) from both sides.

https://truckmanualshub.com/
2. Remove the head from its seat using an appro- priate lever (1) on both sides.

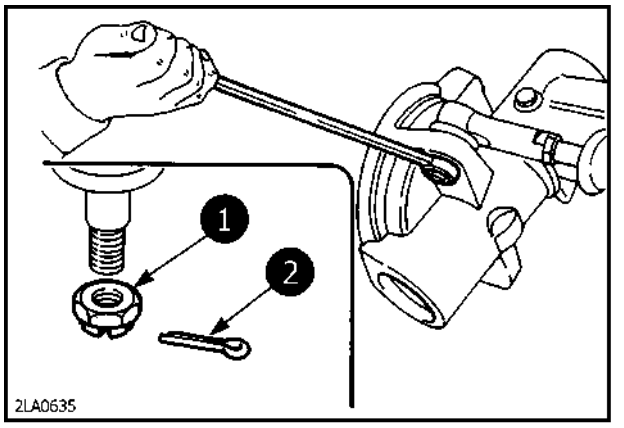


67

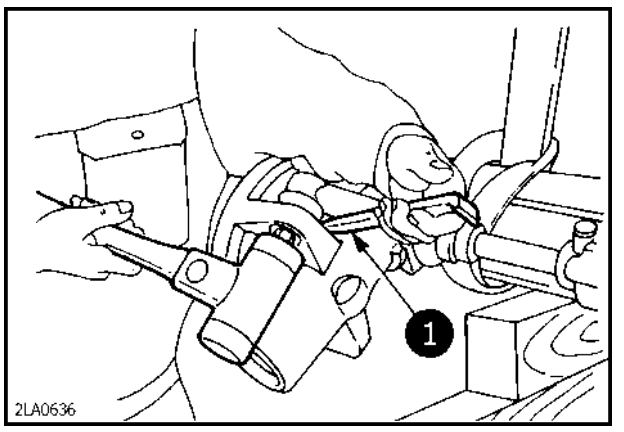

https://truckmanualshub.com/

3. Remove the steering arm (1) from both sides.

Do not touch the arm adjuster nut as t
EU[3] lead to subsequent alignment oper- ations
being required.

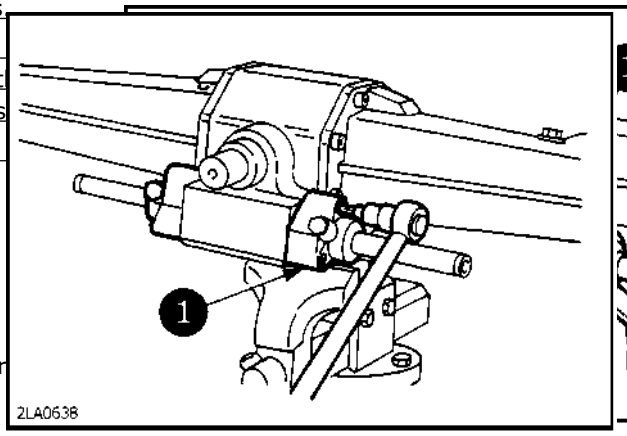


70



69


4. Unscrew the screws from both sides of the cover (1).

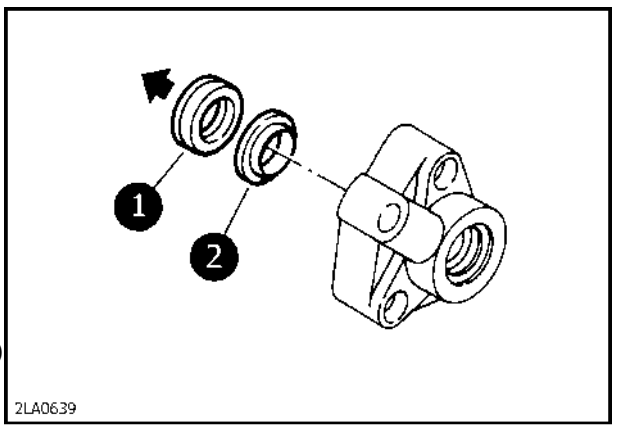

71

5. Remove the dust guard ring (1) and the seal (2) from both covers.

The rod and the piston cannot be sepa- rated.

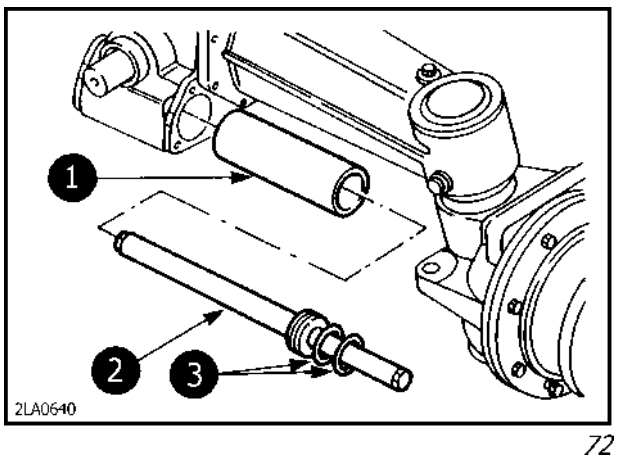

72

6. Take out the complete cylinder (1), then remove the rod (2) from it. Remove the reten- tion rings (3) from the piston if necessary.

https://truckmanualshub.com/


WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Remount the steering cylinder bearing the following recommendations in mind:

- Refer to figs. 2 and 3.
- Refer to the driving torques listed on page 4.


- Mount new retention rings on to the piston and reassemble the steering cylinder.
- Apply sealant all along the jointing edge between the central housing and cover, comply- ing with the indications in the figure.

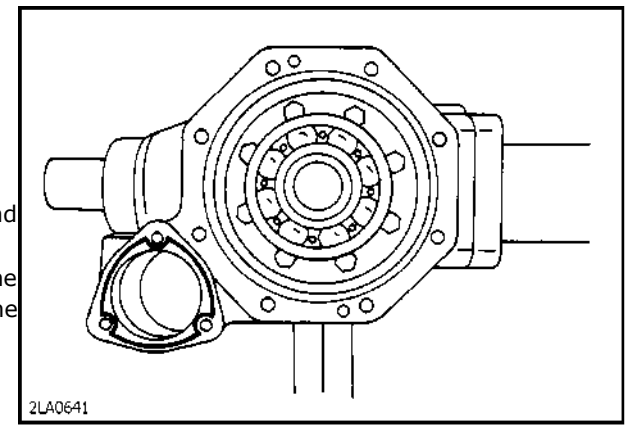

73

Mount a new dust guard ring (1) and a new seal (2) using a suitable tool and comply with the indicated position. Fill the cavity between the seal lips with the prescribed type of grease, then mount the covers.

Remove the steering arms from both sides. Mount the steering head from both sides and fix it in place with a new split pin.

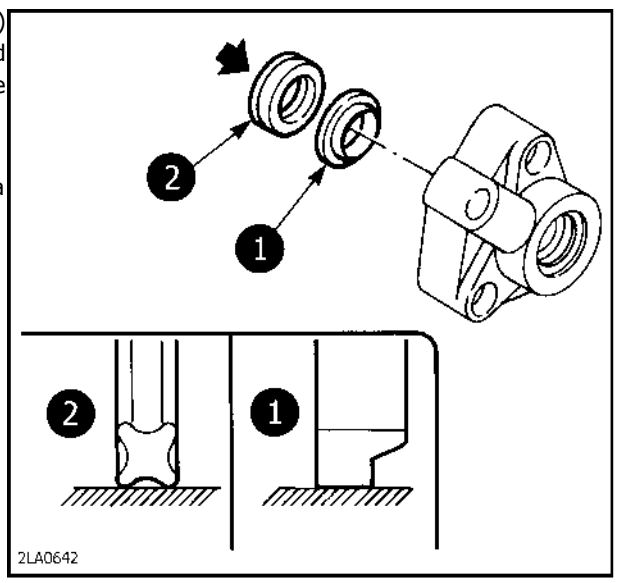

74

https://truckmanualshub.com/

https://truckmanualshub.com/

SECTION 600
POWER TAKE-OFF

https://truckmanualshub.com/

INDEX

Description **Page**

MAIN SPECIFICATIONS 600-3

DRIVING TORQUE VALUES..... 600-4

SECTIONS..... 600-5

DESCRIPTION AND OPERATION..... 600-6
Power take-off controlled directly by the main clutch 600-6

Power take-off synchronized with the gearbox..... 600-7

TROUBLESHOOTING FOR THE MECHANICALLY ENGAGED POWER TAKE-OFF..... 600-8

WHERE THE SEALANT IS APPLIED ON THE POWER TAKE-OFF COVER..... 600-9


MECHANICALLY ENGAGED POWER TAKE-OFF OVERHAUL 600-10
Demounting..... 600-10
Assembly..... 600-12

https://truckmanualshub.com/

MAIN SPECIFICATIONS

540/540E RPM power take-off		
Type (with two functions).....		1) independent in relation to the tractor's ground speed or 2) synchronised with the gearbox
Engagement and control.....		mechanical, by means of a lever installed under the steering wheel and to the left of the driver's position
Speed selection.....		by means of a lever installed on the left side of the platform
Spinning direction (tractor viewed from the rear).....		clockwise
Engine rate with PTO at 540 RPM.....	(RPM)	2538
Engine rate with PTO at 540E RPM.....	(RPM)	1869
Diameter of the driven shaft on output spline shaft . . .		$1^3/_8$" (6 splines)
Rotation rate with 540E RPM PTO synchronized with the gearbox	(revs/wheel turn)	11.075

DRIVING TORQUE VALUES

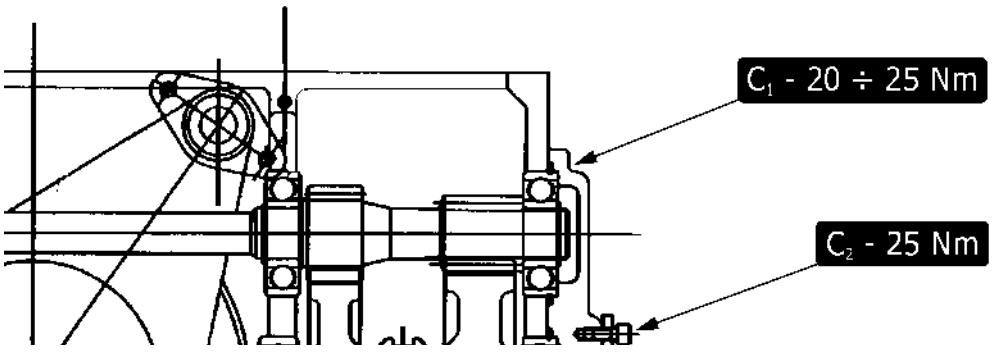


1

PARTS TO TORQUE	Thread	Driving torque values	
		Nm	kgm
PTO cover fixing screws (Ci)	-	20 - 25	2 - 2.5
PTO shield fixing screws (C_2)	M 8 x 1.25	25	2.6

https://truckmanualshub.com/

https://truckmanualshub.com/

SECTIONS

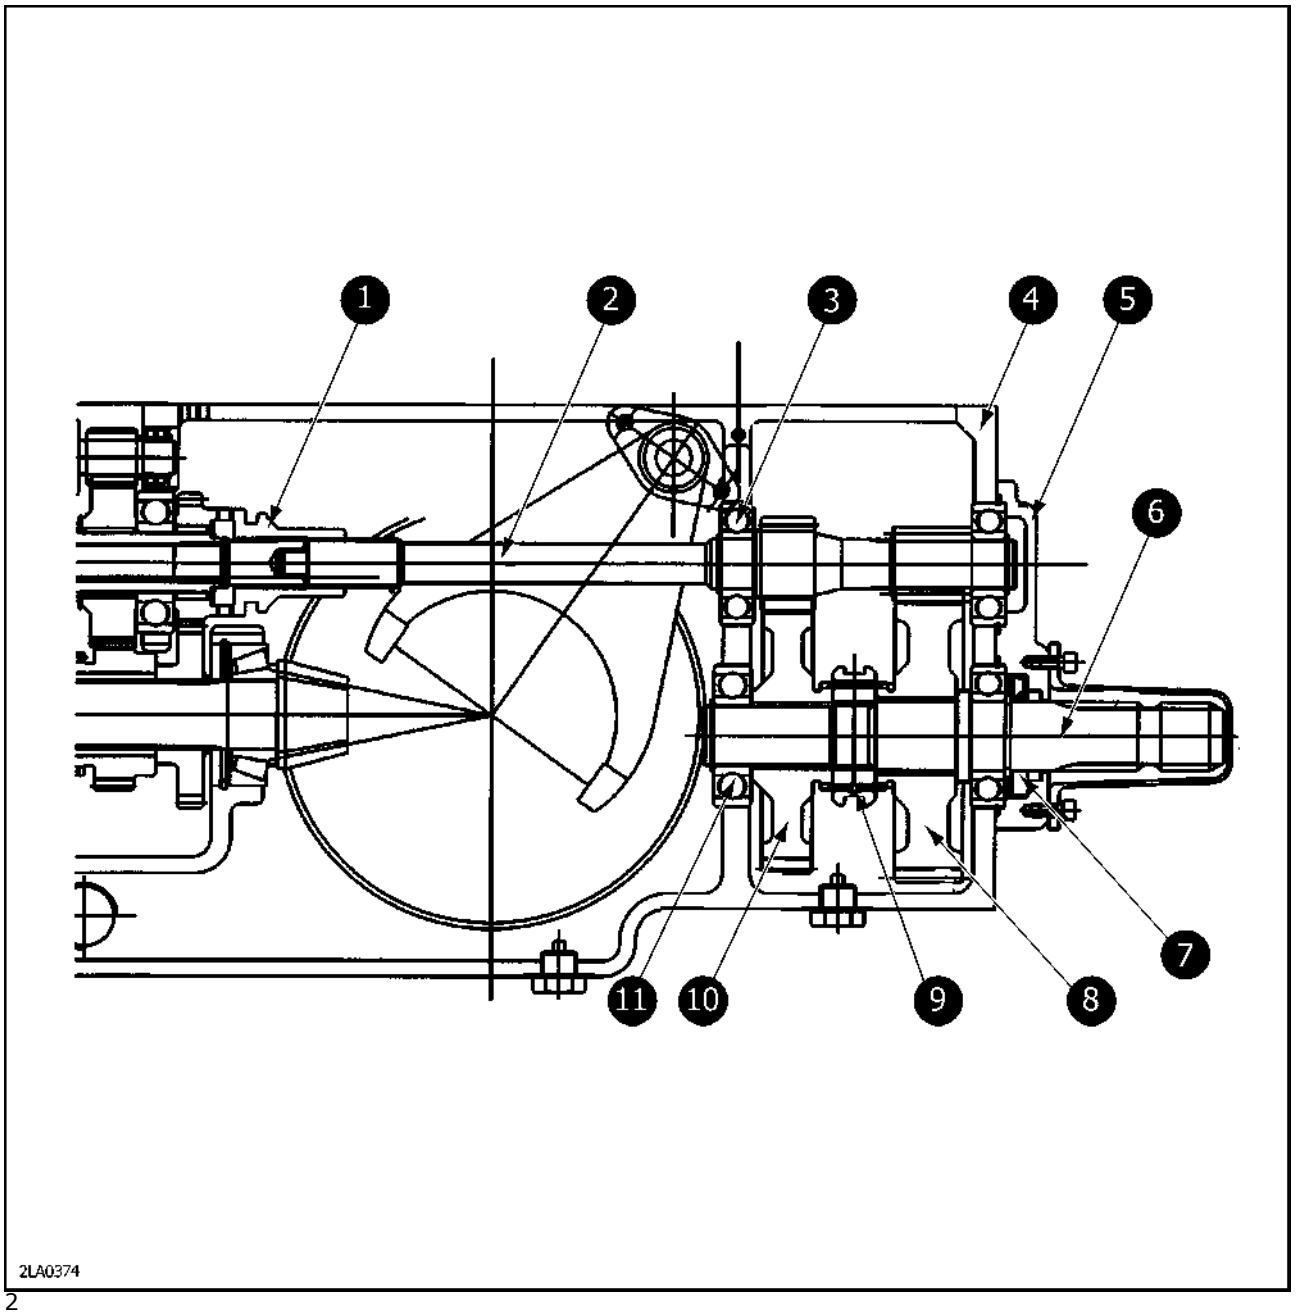


2
Longitudinal section of the 540/540E power take-off

1. Sliding sleeve
2. Upper PTO shaft
3. Ball bearing.
4. Rear transmission housing
5. Cover
6. PTO output shaft
7. Retention ring
8. 540 RPM gear
9. Meshing sleeve
10. 540 E RPM gear
11. Ball bearing.

DESCRIPTION AND OPERATION

The output shaft of the power take-off is mounted in the rear part of the tractor and transfers drive from the engine to the mounted or towed imple- ments. It can either be controlled directly by the engine (independent PTO) or directly by the gear- box (PTO synchronized with the tractor's ground speed).
All tractors are equipped with a two-speed PTO, i.e. 540/540E RPM, with mechanical engaging/disen- gaging control.

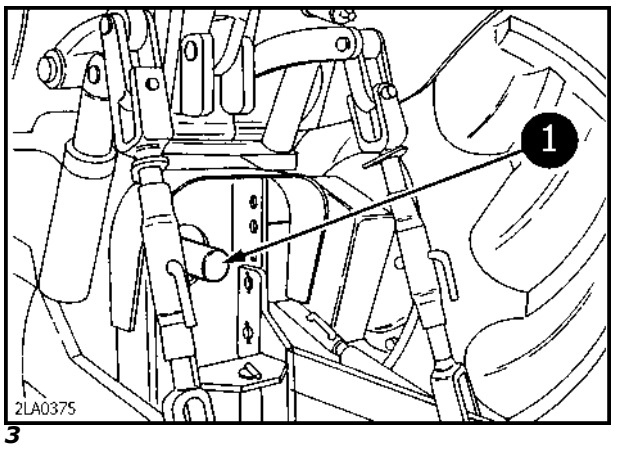


3

Power take-off controlled directly by the main clutch

Proceed in the following way to operate the inde- pendent PTO:

- press the button (1) to release the clutch lever (2);
- move the lever fully up until the disengaging position is obtained;
- select the rotation speed for the spline shaft by means of the lever (1, fig. 6);
- select the operating mode by moving the lever (1, fig. 5);
- pull the lever (1) and press the button (2) to release the lever;
- move the lever (1) fully down to the engaging position.

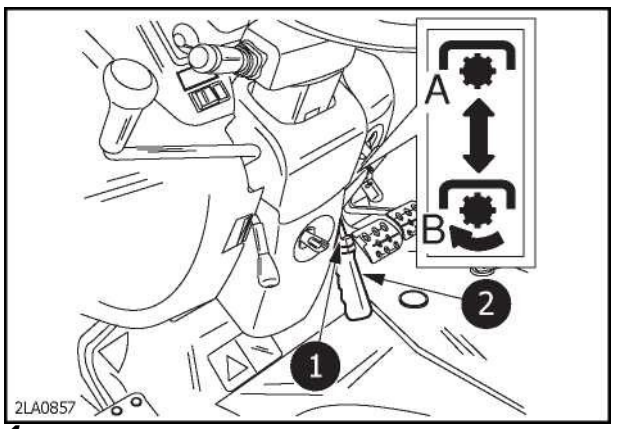


4

In these conditions, operation is fully independent from the ground speed of the tractor. The operator can therefore:

- stop the tractor without stopping the PTO;
- stop the PTO without stopping the tractor (by disengaging the PTO clutch).

The direction in which the end part spins is clock- wise, with the tractor viewed from the rear.
Just move the lever up (1, fig. 5) to disengage the PTO.

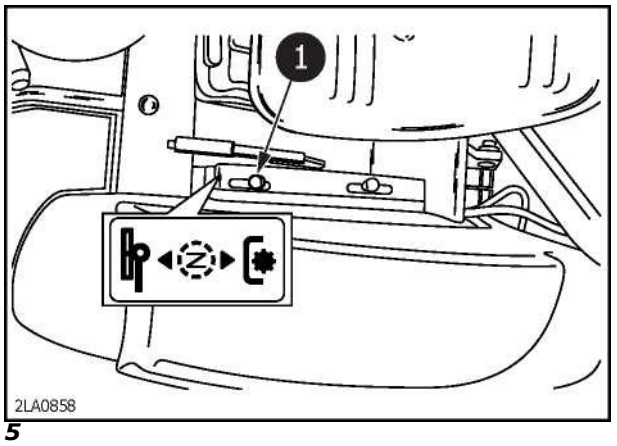

5

Only keep the lever in the disengaging position for the time it takes to make the manoeuvres. Always keep the lever in the engaged position during work.

https://truckmanualshub.com/

AWARNING

Always disengage the PTO when you get off the tractor.


Power take-off rates:

power take-off selected: 540 RPM (Excluding North America)

- 540 RPM with engine at: 2538RPM
- 595 RPM with engine at: 2800RPM


power take-off selected: 540 E RPM

- 540 E RPM with engine at: 1869RPM
- 630 RPM with engine at: 2181RPM

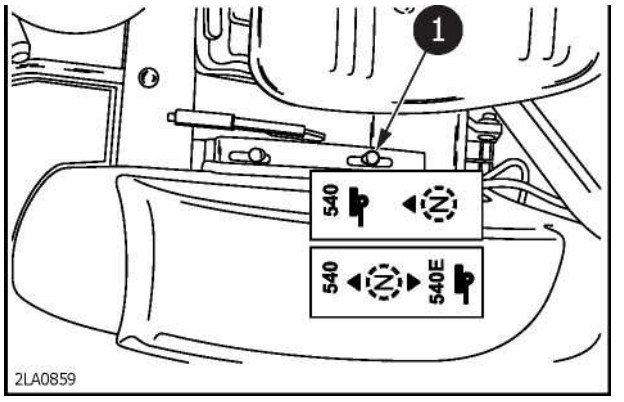

Power take-off synchronized with the gearbox


The function whereby the power take-off is synchronized with the gearbox is used to tow trailers or implements with drive transmitted to the wheels. It is also used for implements that must work in synchronism with the ground speed of the tractor and that do not require more than 40-45% of the tractor power. Only select the 540 E speed with the synchronized PTO. Engage the synchronized PTO when the tractor is at a standstill.

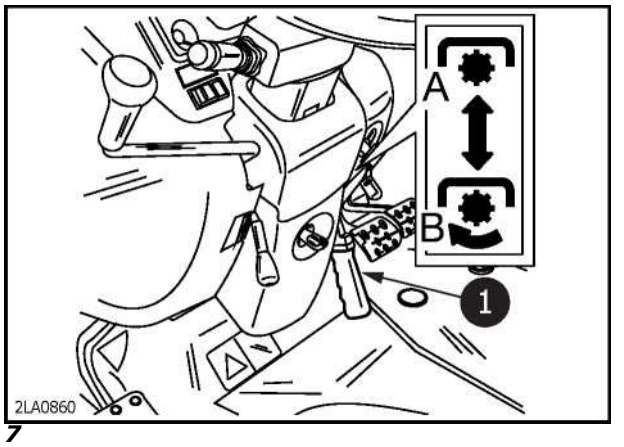

7

Proceed in the following way to select the synchronized PTO:


- stop the tractor but keep the clutch pedal depressed;
- move the lever (1, fig. 7) up to disengage the PTO clutch;
- select the 540 E speed; lever (1) back;
- push the lever (1, fig. 9) forwards to select the synchronized PTO mode;
- move the lever (1, fig. 7) down to engage the PTO clutch;

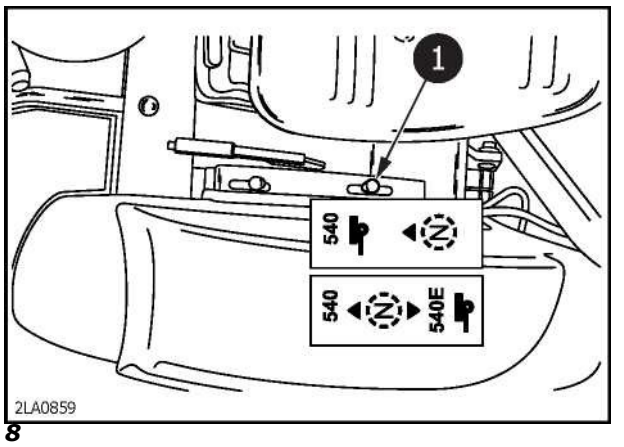

8

When the tractor is reversed and the syn! chronized PTO is engaged, the PTO shaft will turn in the opposite direction. Always remember to disengage the PTO to pre- vent the implement connected from being damaged.

https://truckmanualshub.com/

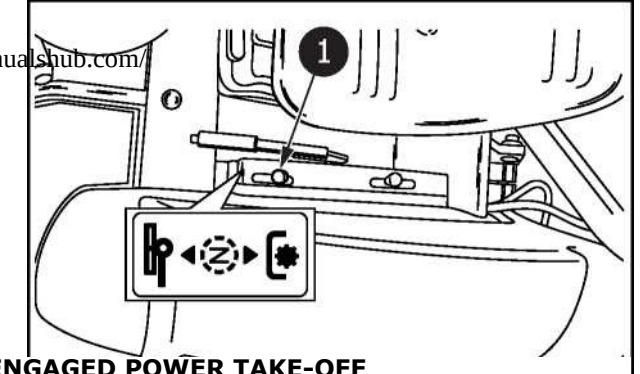


Whatever speed gear is engaged, the PTO output shaft spins 11.075 revolutions for each turn of the rear wheels.

TROUBLESHOOTING FOR THE MECHANICALLY ENGAGED POWER TAKE-OFF

Faults	Possible causes	Remedies
The spline shaft on the PTO output slips with relative loss of speed.	Wear on the clutch plate or on the pressure plate of the fly- wheel. PTO clutch lever badly adjusted.	Compare with the values given in the relative pages in sect. 18. Replace excessively worn parts and adjust the clutch control lever.
It is difficult to select the PTO speed by means of the lever lever (1, fig. 6);	The external control has hard- ened or is badly adjusted.	Lubricate the control levers. Adjust the control.

https://truckmanualshub.com/

WHERE THE SEALANT IS APPLIED ON THE POWER TAKE-OFF COVER

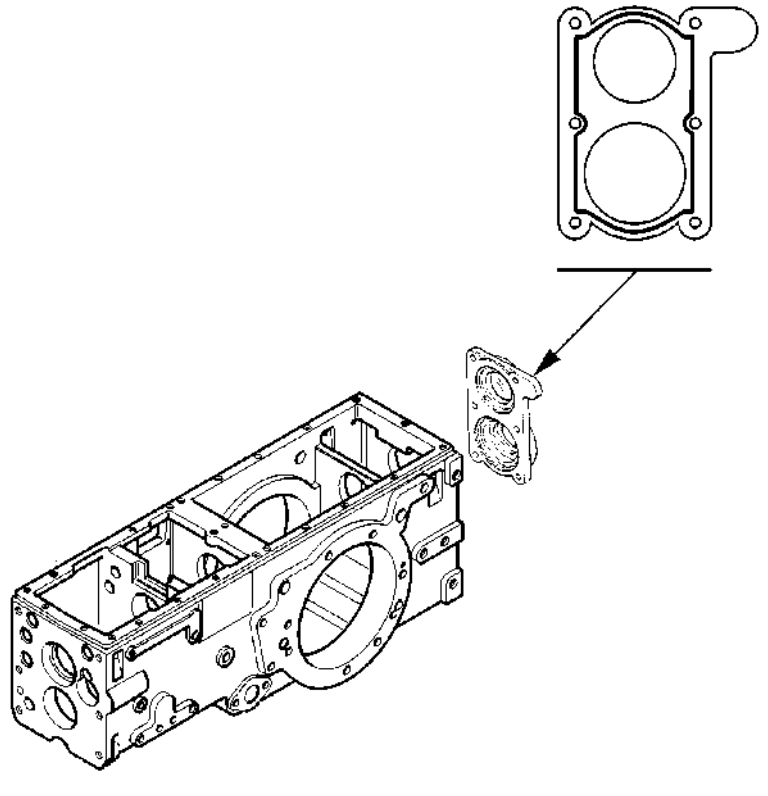

2LA0382

The types of sealant to apply are indicated in section 100.

MECHANICALLY ENGAGED POWER TAKE-OFF OVERHAUL

Demounting

Proceed as follows:

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.


1. Split the gearbox-rear transmission housing.

2. Unscrew the fixing screws (1) and remove the shield (2) from the PTO shaft.


3. Unscrew the fixing bolts (1) and remove the cover (2) from the PTO shaft.

https://truckmanualshub.com/


4. Unscrew the locking screw (1) of the fork (2). Unscrew the plug (3), remove the spring (4) and the rod retainer ball.

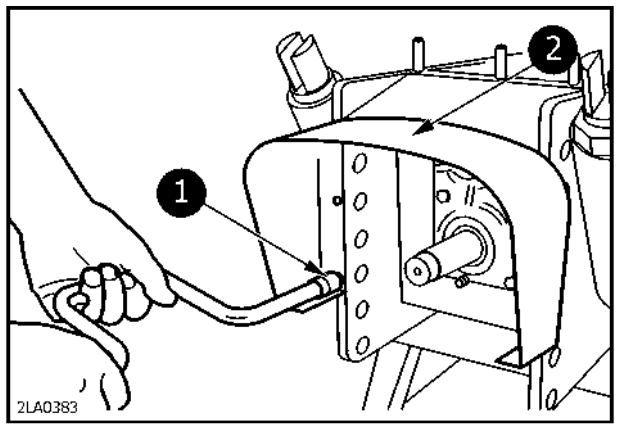

11

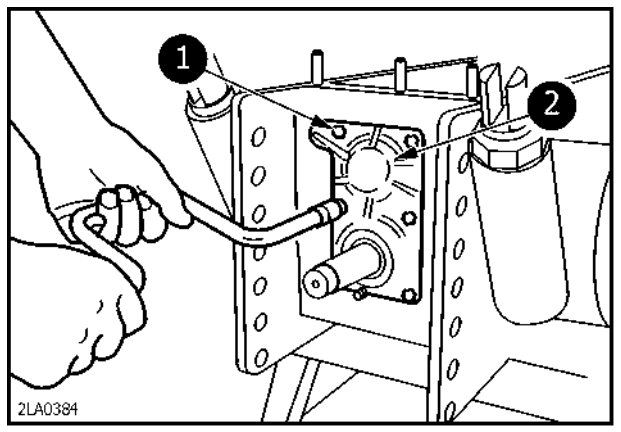


12

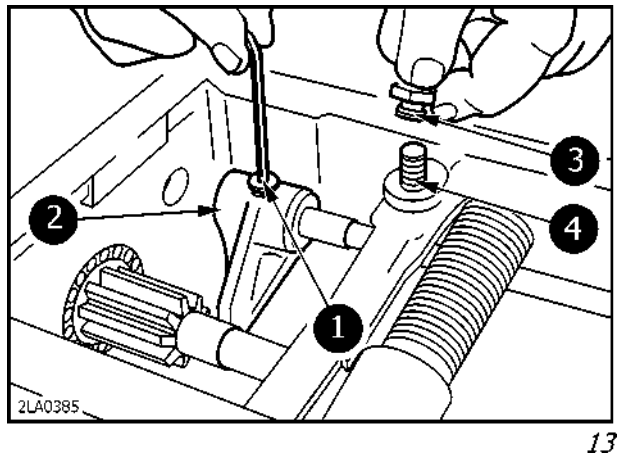

13


https://truckmanualshub.com/

5. Remove the PTO speed selection rod (1). Recover the pawl (1) positioned between the speed selector rod and the PTO engaging rod.

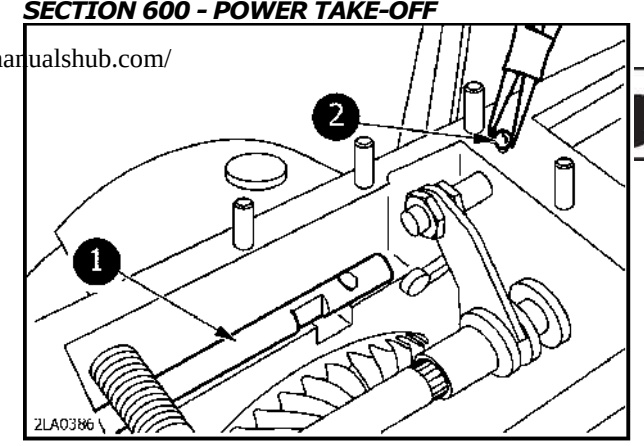


14

6. Unscrew the locking nuts (1) of the fork that engages the PTO (2) and remove it..

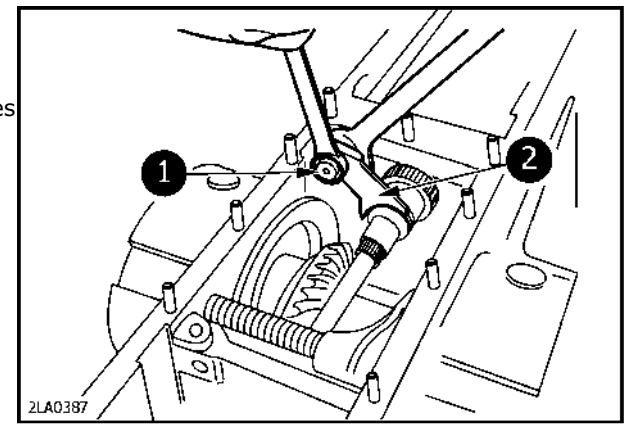


15

7. Remove the spring retention ring (1) and take out the driving gear (2).

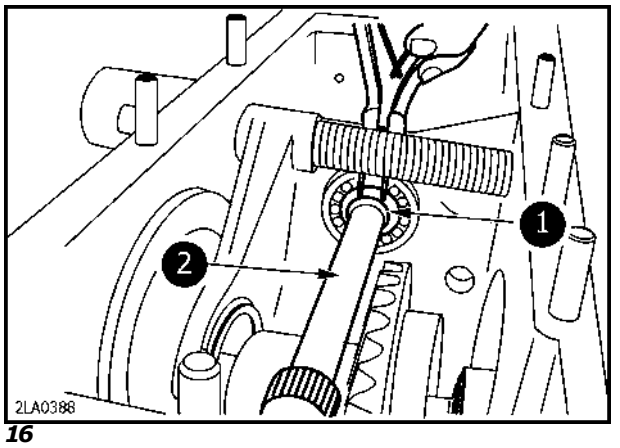

16


8. Remove the spring retention ring (1) that holds the PTO shaft.

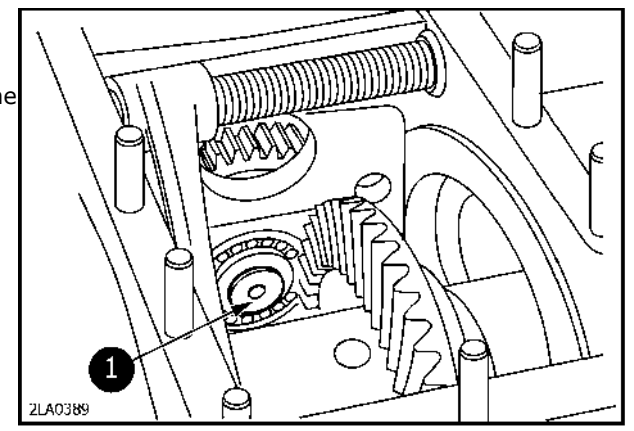

17

https://truckmanualshub.com/

9. Remove the PTO shaft from the gearbox-trans- mission housing along with the relative gears (1).

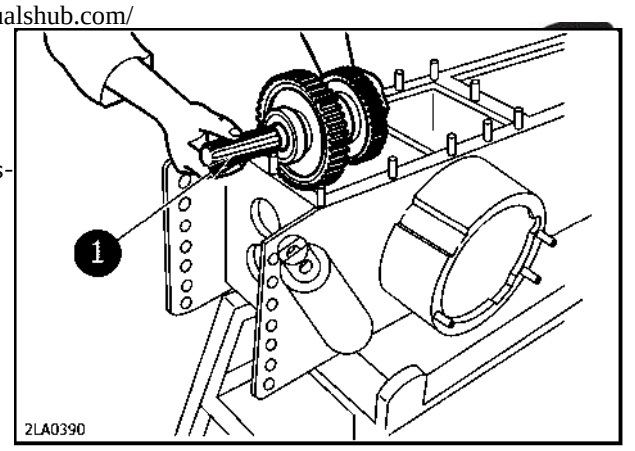

18

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

Assembly

Comply with the following recommendations when remounting the PTO:

Comply with fig. 2 when positioning the various parts;

Before remounting the housings, support and cover, thoroughly clean and degrease the cou- pling surfaces and apply a strip of sealant about 2 mm in diameter as indicated in fig. 10.

Refer to the driving torques listed on page 4; Mount the PTO shaft complete with gears; Position the spring retention ring of the PTO shaft;

Insert the driving shaft and position the spring retention ring;
Insert the lock the PTO engaging fork;
Mount the PTO speed selector rod with the rel- ative retainer pawl;
Position and lock the PTO speed engaging fork; Fit on the cover of the PTO;
Mount the shield of the PTO;
Remount the gearbox-rear transmission hous- ing.

https://truckmanualshub.com/

SECTION 700

HYDRAULIC CIRCUITS - REAR POWER LIFT

INDEX

Description

MAIN SPECIFICATIONS - REAR HYDRAULIC POWER LIFT.....

SPECIFIC EQUIPMENT.....

SECTIONS AND PERSPECTIVE VIEWS .....

https://truckmanualshub.com/

SECTION 700

DESCRIPTION OF THE OPERATING MODE OF THE HYDRAULIC

POWER LIFT.....

700-9

Position control .....
Draft control .....
Mixed position and draft control.....
Floating position.....

DESCRIPTION OF THE OPERATING MODE OF THE HYDRAULIC
POWER LIFTS VALVE SYSTEM . . . 700-13

Neutral phase.....

https://truckmanualshub.com/

SECTION 700

Lifting phase .....
Discharge phase.....

POWER LIFT'S VALVE SYSTEM - OVERHAUL.....
Demounting.....
Assembly .....

VALVE SYSTEM OF THE HYDRAULIC POWER LIFT - HYDRAULIC
TESTS.....
700-27
Check for leaks from the discharge valve .....
Checking and adjusting the cylinder safety valve.....
Non-return valve test .....
Over-pressure valve setting test.....

https://truckmanualshub.com/

SECTION 700

POWER LIFT - ADJUSTMENTS .....
Sensitivity adjustment .....
Draft control adjustment .....
Position control adjustment .....

HYDRAULIC POWER LIFT - OPERATING PRESSURE TEST.....
Checking the valve pressure setting for the auxiliary control valves.....

https://truckmanualshub.com/

MAIN SPECIFICATIONS - REAR HYDRAULIC POWER LIFT

Mechanical Hydraulic Power Lift		
Make		Landini
Operating modes		Position/draft control intermix/floating mode
Hydraulic system		Open-center type
Cylinders		2 single-acting
Dimensions	(mm)	0 45 x 145 stroke
Over-pressure valve	(bar)	185 - 190
Cylinder safety valve	(bar)	200 - 205
Lifting capacity		
At ball ends with lower links horizontal	(kg)	1200


SECTION700 - HYDRAULIC CIRCUITS - REAR POWER LIFT

SPECIFIC EQUIPMENT

Code	Description
001 IDR MIS	Valve system support for bench tests
002 IDR MIS	High pressure pump for bench tests
003 IDR MIS	Draft control adjuster lever
004 IDR MIS	Pressure gauge union

https://truckmanualshub.com/

SECTIONS AND PERSPECTIVE VIEWS

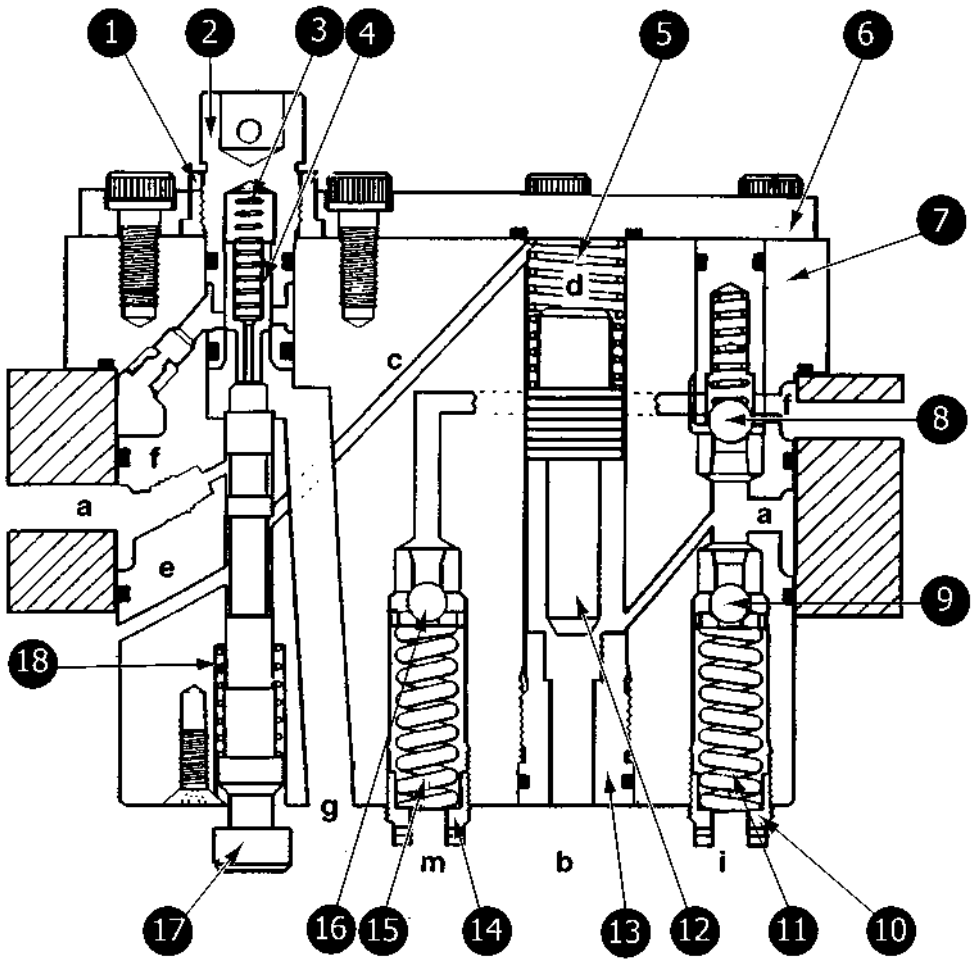

2LA0407


1

Longitudinal section of hydraulic power lift

1. Discharge valve ring nut
2. Discharge valve casing
3. Discharge valve spring
4. Discharge valve plunger
5. Servo valve spring
6. Cover
7. Valve system casing
8. Non-return valve ball
9. Over-pressure valve ball
10. Over-pressure valve adjuster plug
11. Over-pressure valve spring
12. Servo valve
13. Valve housing
14. Safety valve adjuster plug
15. Valve spring
16. Safety valve ball
17. Valve stem
18. Stem spring

a. Duct where oil arrives from pump
b. Pump outlet
c. Servo valve pilot duct
d. Servo valve piloting pressure chamber
e. Servo valve piloting outlet
f. Duct delivering oil to the cylinder
g. Duct discharging oil from the lifting cylinder
i. Maximum valve outlet
m. Antishock valve outlet


https://truckmanualshub.com/

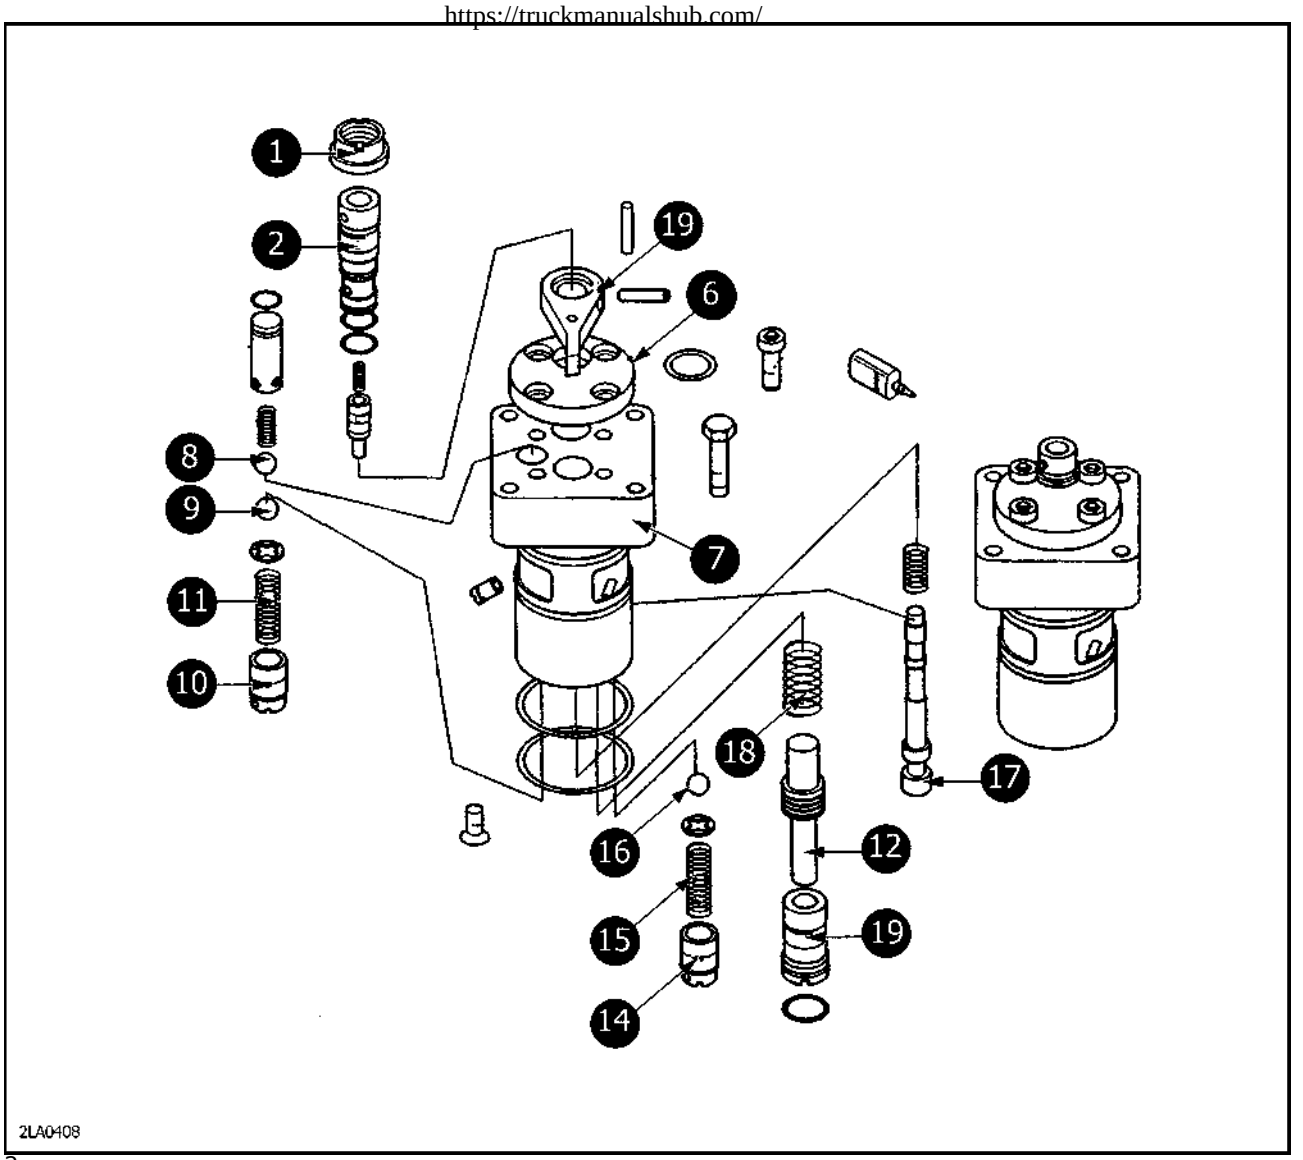

2
Perspective view of hydraulic power lift

1. Discharge valve ring nut	12. Servo valve
2. Discharge valve casing	13. Valve housing
6. Cover	14. Safety valve adjuster plug
7. Valve system casing	15. Valve spring
8. Non-return valve ball	16. Safety valve ball
9. Calibration valve ball	17. Valve stem
10. Over-pressure valve adjuster plug	18. Stem spring
11. Calibration valve spring	19. Adjuster lever

https://truckmanualshub.com/

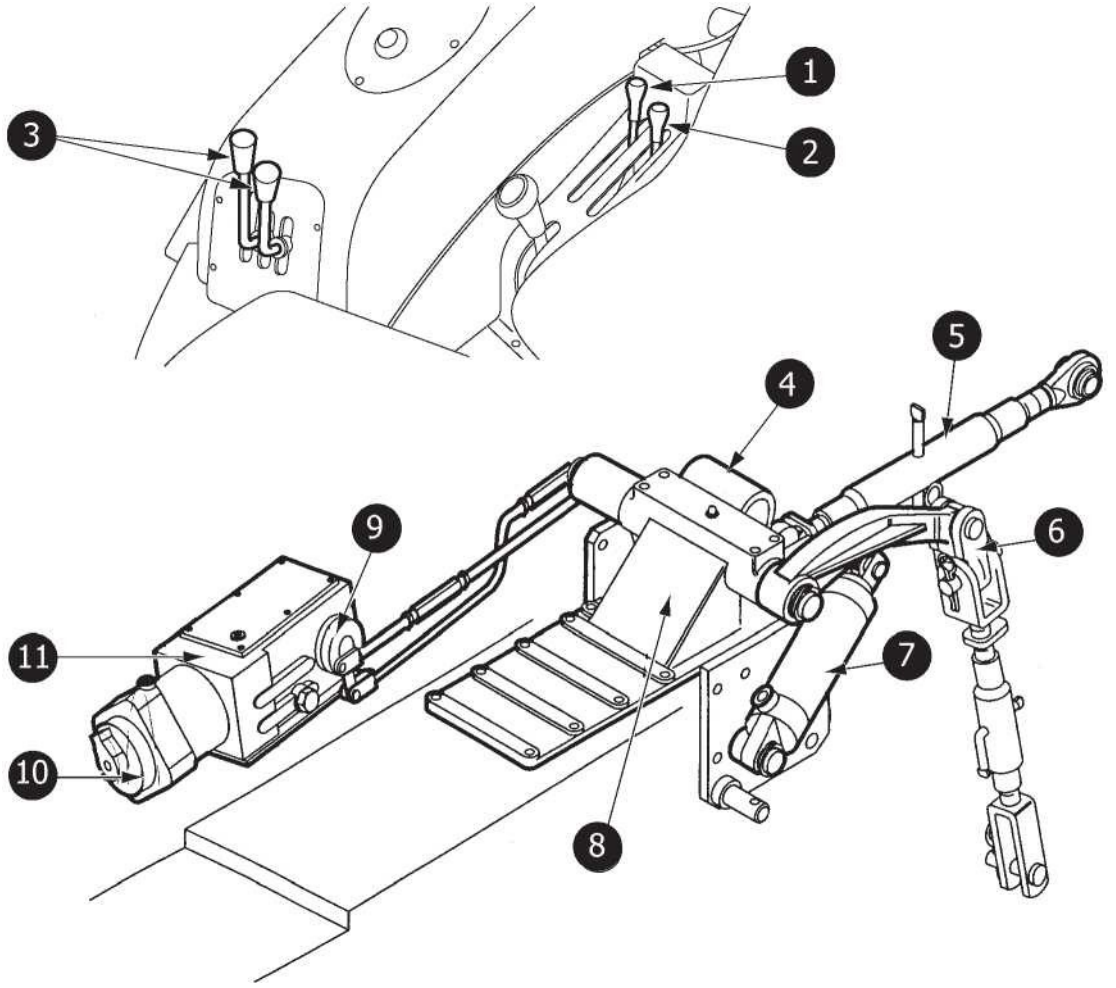


2LA0861

3

Perspective view of the main components

1. Position/draft control lever	7. Cylinder
2. Position control lever	8. Power lift unit
3. Auxiliary control valve lever	9. Control lever unit
4. Reaction spring	10. Hydraulic valve system
5.	11. Housing of the control lever unit
6. Third point Link	

https://truckmanualshub.com/

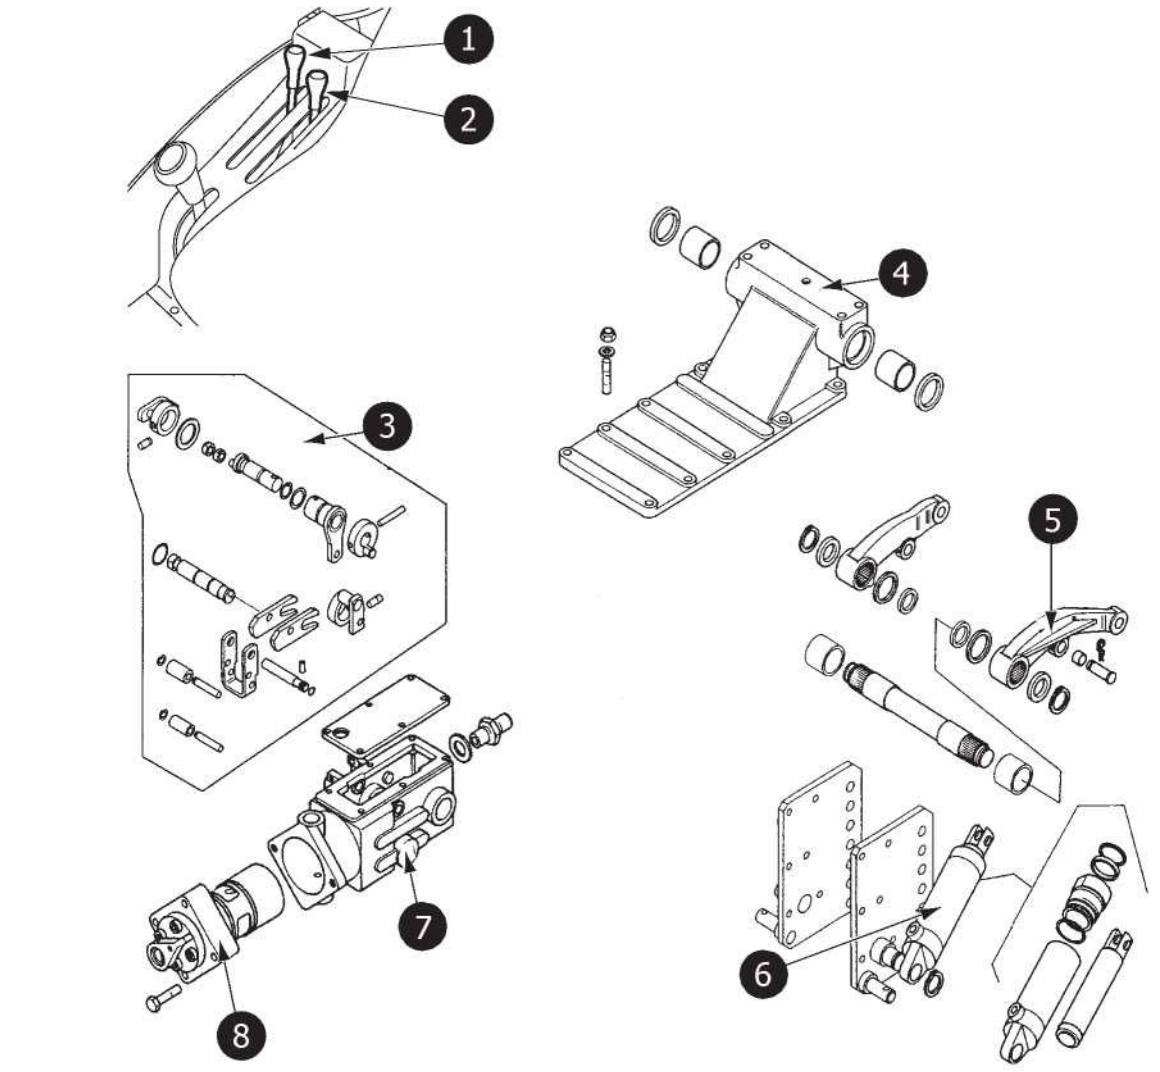

2LA0791

Exploded view of the main components

1. Draft control lever
2. Position control lever
3. Control lever unit
4. Power lift unit
5. Link
6. Cylinder
7. Casing of the control lever unit
8. Hydraulic valve system

https://truckmanualshub.com/

DESCRIPTION OF THE OPERATING MODE OF THE HYDRAULIC POWER LIFT

The hydraulic power lift may have four operating modes:

Position control Draft control Mixed control Floating position

Each of these four operating modes must be cho- sen to suit the type of job and the surface consist- ency of the soil.


Position control


To work in the position control mode, move the draft control lever (1) up on the sector and estab- lish the work depth with the position control lever (2).

The position control mode allows the implement to be set at a determined position at any point between the highest and lowest settings, both in and out of the soil, depending on the position to which the control lever is set.

Lifting link movement in height is proportional to the movement of the control lever.

The depth at which the implement works will not change even if it encounters soil of a different con- sistency (example: zone d = sandy soil; zone e = compact soil; zone c = clayey soil).

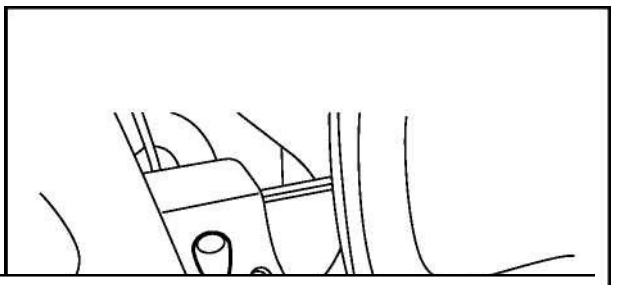


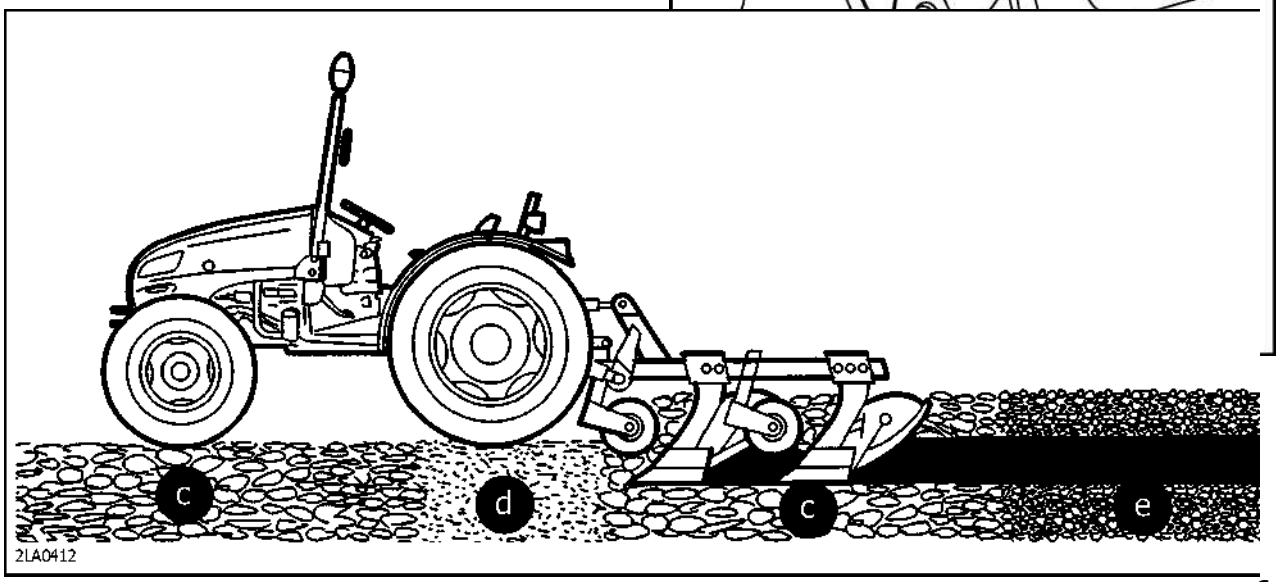

2LA0412

Draft control

To work in the draft control mode, move the posi- tion control lever (1) fully up on the sector and establish the work depth with the draft control lever (2). The draft control mode allows the trac- tor's lugging power to be maintained at a constant level, automatically varying the work depth of the implement as the soil conditions change. In this operating mode, the depth at which the implement works may change to a considerable degree if it encounters soil of a different consistency (e.g.: zone d = sandy soil; zone e = compact soil), while the depth remains more or less uniform if the soil is homogeneous (zone c = clayey soil), whether the land is flat, or with hollows and hillocks.

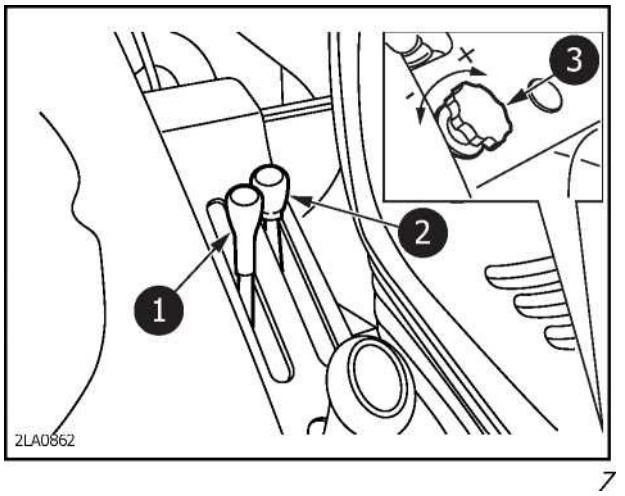


7

Use of the draft control mode is of particular use during work that requires considerable lugging power carried out with mounted implements, since these transfer most of this lugging power to the rear wheels, thus increasing the tractor's wheel grip.


The lever (4) regulates the sensitivity of the response in draft control mode since it increases or reduces the travel the third point must make in order to change from the neutral phase to the dis- charge phase.

Maximum sensitivity will be obtained with the lever (4) in the (+) position while the minimum sensitiv- ity is obtained in the (-) position.

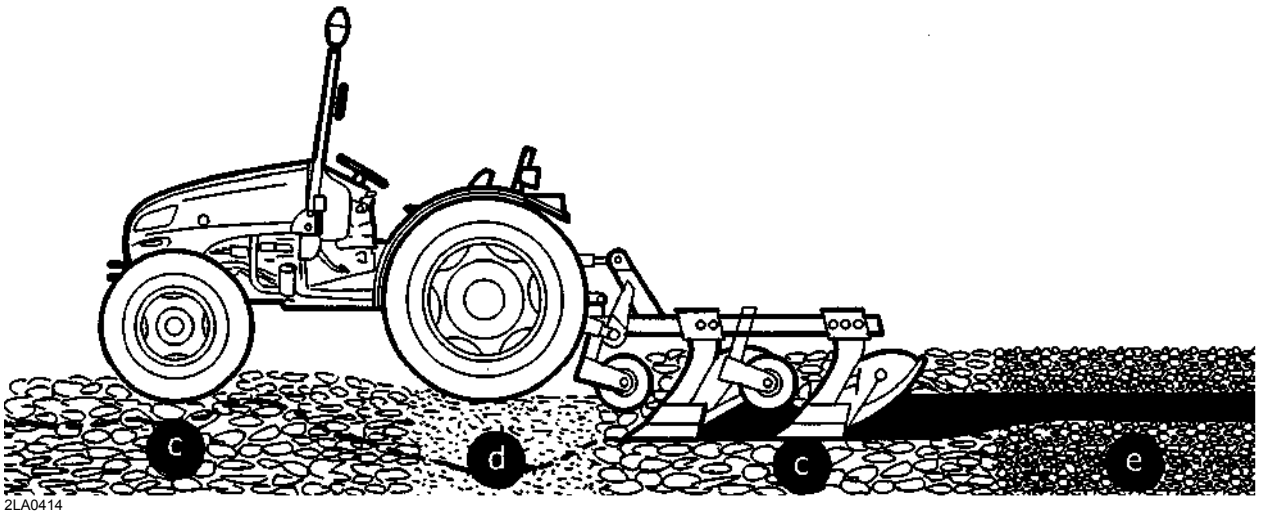

8

https://truckmanualshub.com/

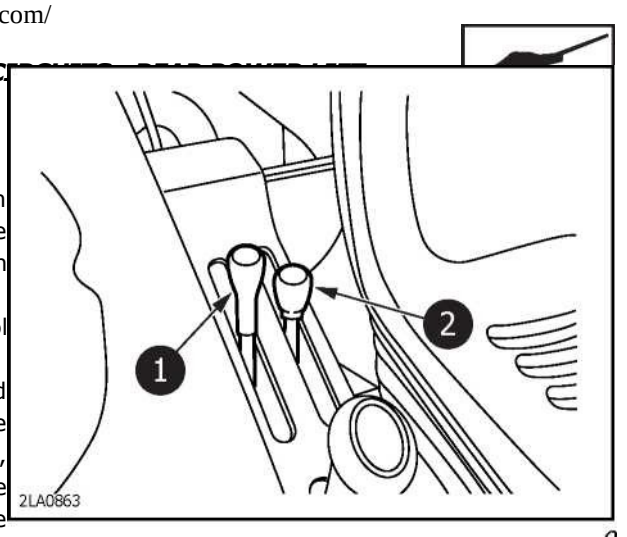

9

Mixed position and draft control

When work is carried out in the draft control mode on irregular soil, there may be excessive variations to the work depth which are unacceptable for culti- vation on that type of ground.


In these conditions, the mixed position-draft control mode should be used.

To work in this mode, dig the implement into the soil and establish the required work depth as described for the draft control mode. Once this depth has been reached, lower the draft control lever (1) and gradually move the position control lever (2) downwards in order to increase the degree of position control. The power lift operates in the draft control mode but meanwhile prevents the implement from digging excessively into softer soil and producing an uneven job.

When the power lift is preset for the mixed position and draft control mode (intermix), the maximum and minimum depths at which the implement works are limited in relation to the mean value (see zone d = sandy soil; zone e = compact soil) since knob movement towards the position control set- ting reduces the sensitivity of the draft control action and introduces part of position control.

The positions to which the lever can be set are as many as can be obtained in the space that sepa- rates the two ends and its vicinity to one end or the other leads to a greater influence being excercised by the position or draft control functions.

During work, the operator must find the best position for the selector lever in order to obtain the best compromise between draft variation and depth.

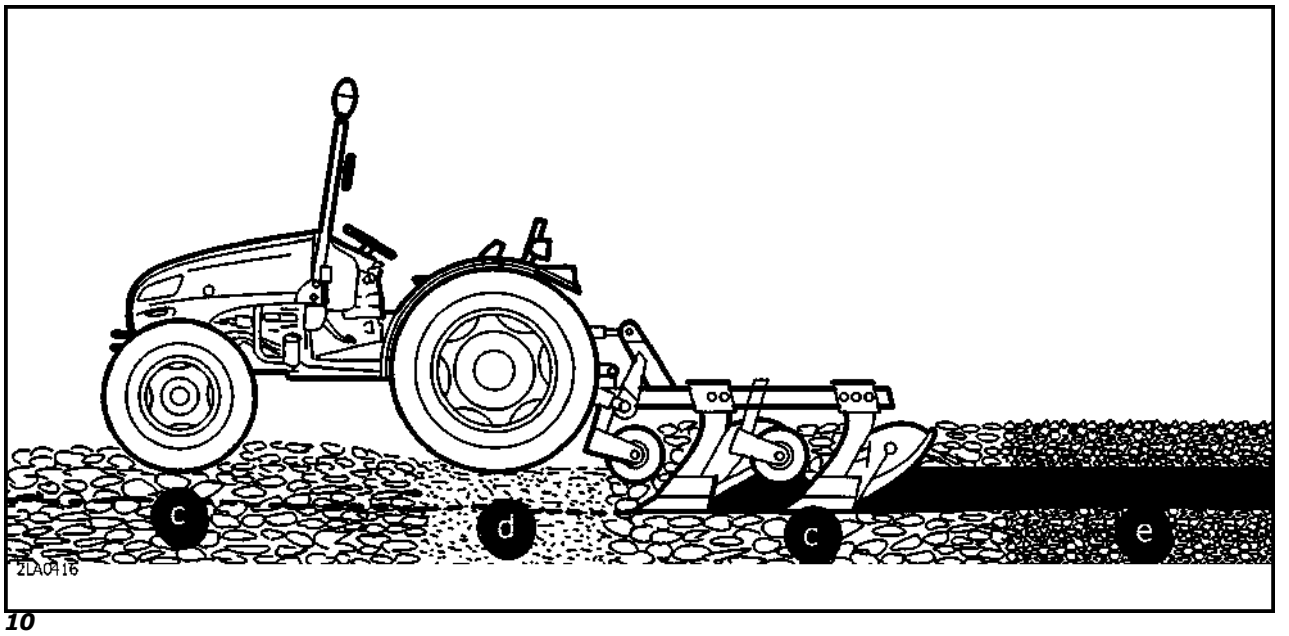

10

https://truckmanualshub.com/

Floating position

To work in the float mode, move both the levers fully down (1 and 2, fig. 9).

The floating position allows the lift links to swing freely.

The floating position is therefore used for all implements that must simply rest on the soil and follow the contours of the ground, or for semi-mounted implements that have specific components with which they rest on the ground.

https://truckmanualshub.com/

DESCRIPTION OF THE OPERATING MODE OF THE HYDRAULIC POWER LIFT'S VALVE SYSTEM

Three phases always occur during power lift opera- tion, regardless of whether it is used in the position control or draft control mode or with contempora- neous draft and position control (Intermix):

Valve system in the neutral phase

Valve system in the lifting phase Valve system in the discharge phase

To make the descriptions clearer, these three phases will therefore be illustrated individually. However, remember that the three phases take place without any specific order when the power lift operates, particularly in the draft control and Inter- mix modes.


Neutral phase

As soon as the engine is started, the pump (3) draws oil from the tank (1) through the filter (2) and sends it through duct (a) where it encounters the valve stem (6) in the central position of its travel, which shuts off the delivery to the control unit (c).

Meanwhile, the oil passes through duct (a) formed inside the valve system, and reaches the check valve (11) that supplies the ram (7). This remains closed as oil from the pump cannot reach a suffi- ciently high pressure to open it owing to the lesser opening resistance of the servo valve (10). This lat- ter is able to open thanks to the open piloting hole (c) which allows the oil in the piloting chamber (d) to discharge into the housing through ducts (c) and (e). This allows the oil from the pump to discharge into the housing through duct (b).

Note that ducts (a) and (f) in the valve system are races made around the body (4) so that the oil can reach the various valves. The oil in the ram (7) and duct (f) is blocked by the discharge valve (13) which is shut, thus the circuit is tight.


The cylinder safety valve (12) protects the circuit between the ram (7) and the discharge valve (13), opening and discharging the pressure peaks cre- ated when the tractor jolts or when the implement strikes against the ground.

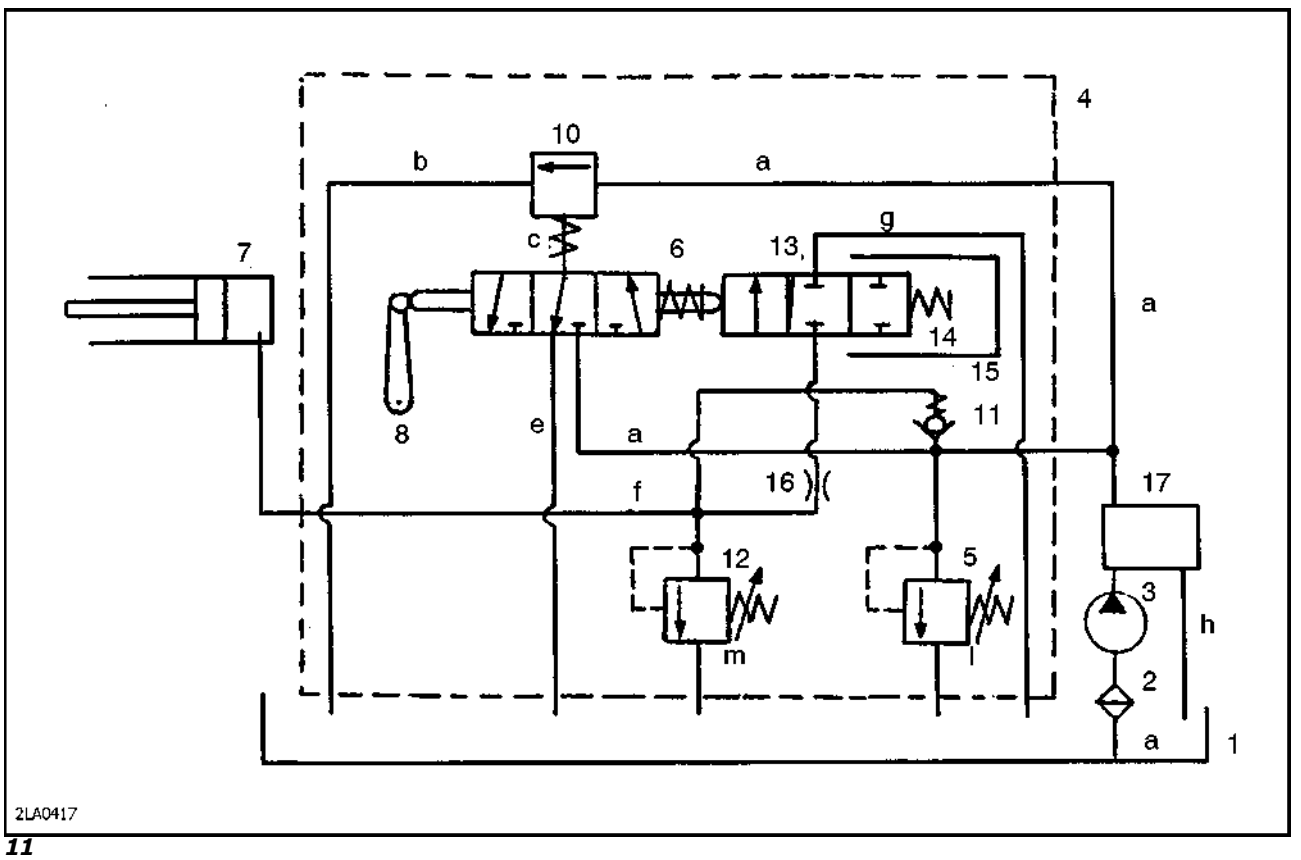

11

https://truckmanualshub.com/

In figure 12, different colours are used to show the oil flows in the different operating conditions, in the neutral phase.

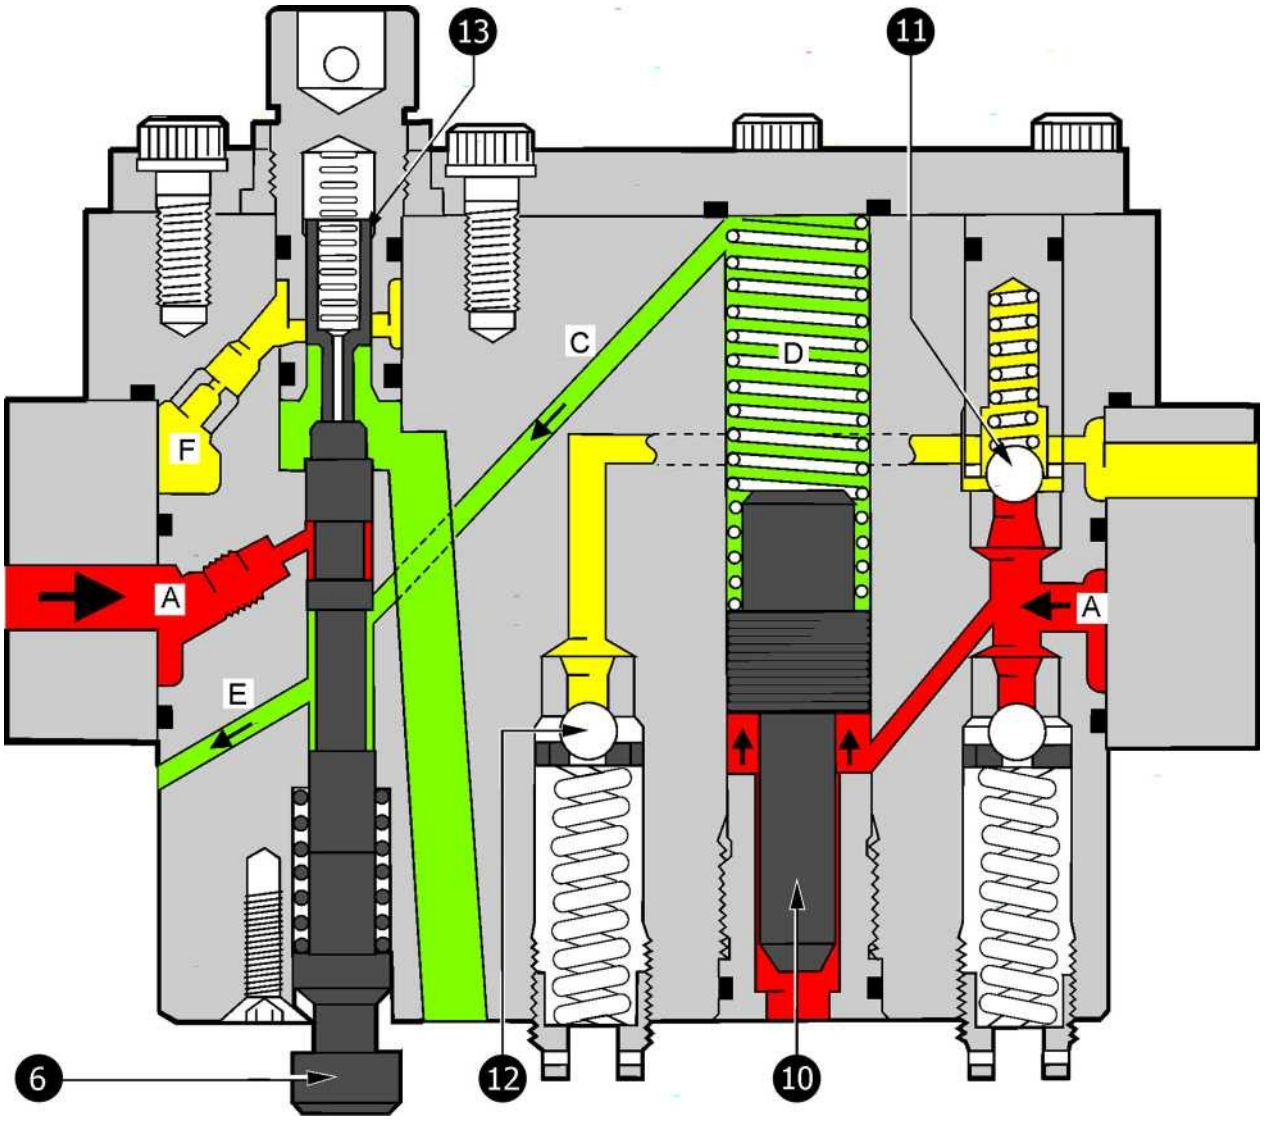

| | Supplied oil

| | Static oil

Discharged oil

2LA0418

https://truckmanualshub.com/

Lifting phase

When the operator uses the position control lever to raise the implement, or when in draft control mode, the implement transmits a signal indicating that it has encountered greater resistance in the soil, lever (8) moves away from the valve stem (6). This, influenced by its spring (9), follows lever movement towards the left, thus setting to the lifting phase.

The discharge valve (13) remains closed during this movement.


Oil on the delivery from duct (a), can now reach the servo valve (10), the valve stem (6) and duct (c). Since the surface of this side of the servo valve is larger than the one on the side of the duct (b), the servo valve closes also thanks to the force exercised by the spring.

As the servo valve begins to close, preventing the oil from flowing into the tank, the pressure begins to rise until its value allows the oil from the pump to open the check valve (1) and flow towards the ram (7).

Having reached the required height, the lever (8) moves the valve to the neutral position.

The rear part of the servo valve (10) is set to the discharge phase through ducts (c) and (e). Thus oil on the delivery opens the servo valve again and discharges into the transmission housing.

The pressure in the supply duct consequently drops and the check valve (11) closes owing to the spring and the higher pressure in the user circuit, thus stopping the links from lifting.

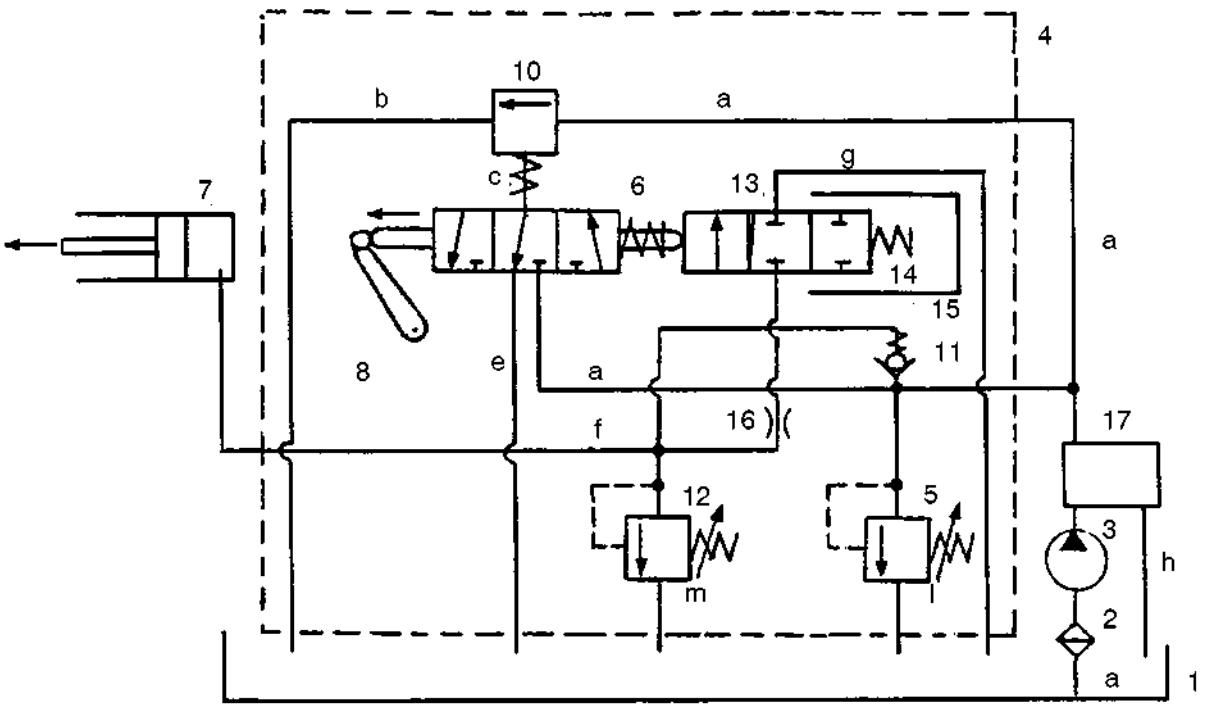


2LA0419

https://truckmanualshub.com/

In figure 14, different colours are used to show the oil flows in the different operating conditions, in the lifting phase.

| | Pressurized oil

I| Discharged oil

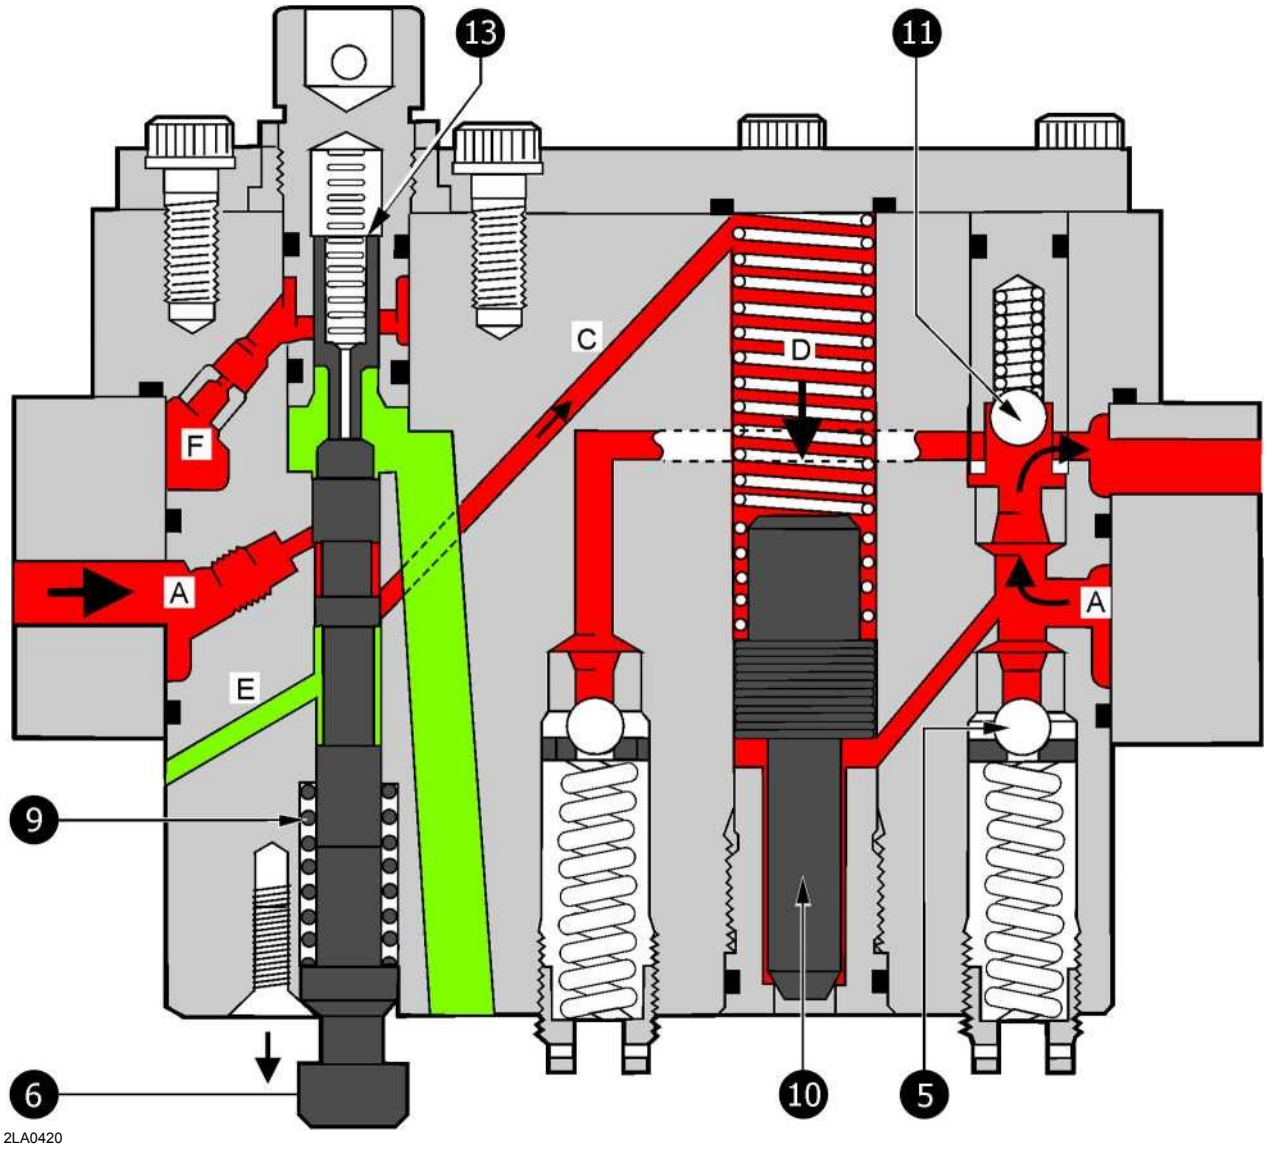

2LA0420

https://truckmanualshub.com/

Discharge phase

When the links must lower, lever (8) pushes the valve stem (6) fully into the body of the valve system. This manoeuvre also involves the discharge valve (13) which is moved and opened by the mechanical action of the valve system itself.


Valve (13) opening, sets ram (7) in communication with the outlet, through duct (g).

Note that since the discharge valve (13) has a sliding cylinder, there will be no valve surging, the advantage being that the links will lower in a regular way. Moreover, throttle (16) limits the lowering speed.

Once the required height has been reached, the control lever (8) moves back and the valve stem (6) is pushed back to the neutral position by its spring (9). Affected by spring (14), the discharge valve (13) also returns to its hold position, gradually shutting off the oil flow towards the outlet and bringing the user circuit to the tight status.

As the links lower, the valve stem (6) keeps the servo valve (10) released thanks to duct (c) which is discharging via duct (e). The oil delivered by the pump thus discharges through the actual servo valve and duct (b).


The adjuster device (15) allows the discharge valve (13) to move nearer or further from the valve stem (6) so as to increase or decrease the sensitivity of the power lift.

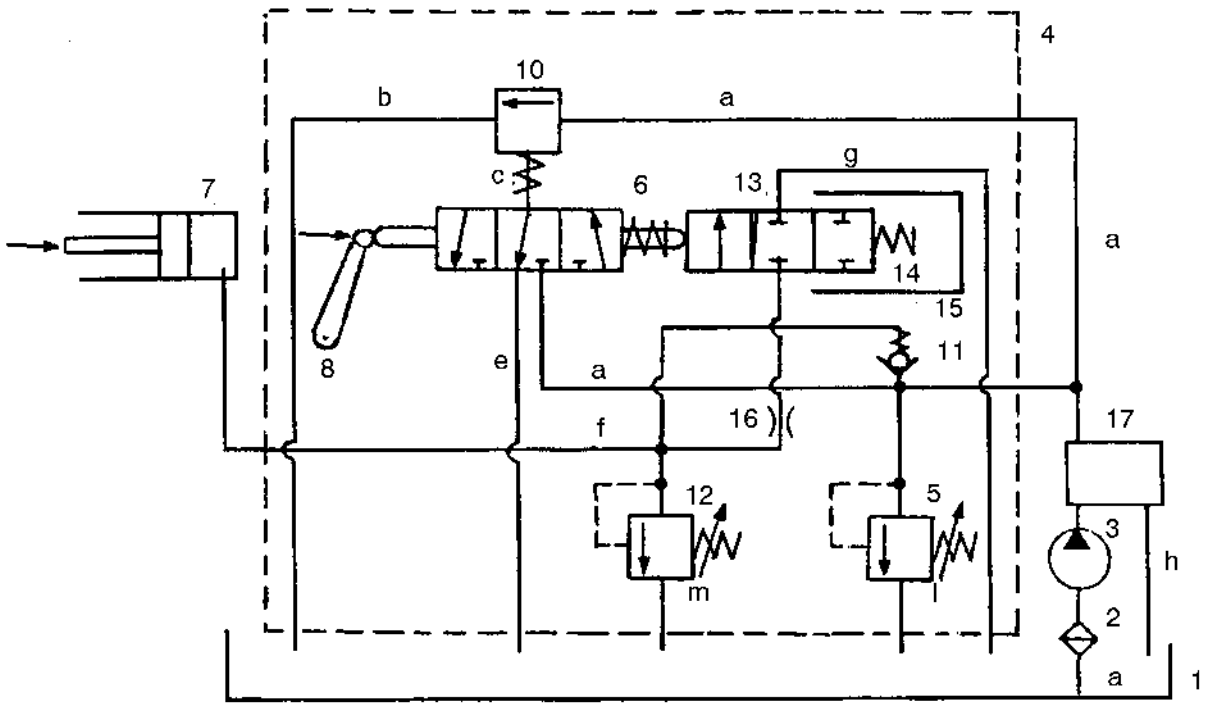

2LA0421

https://truckmanualshub.com/


In figure 16, different colours are used to show the oil flows in the different operating conditions, in the discharging phase.

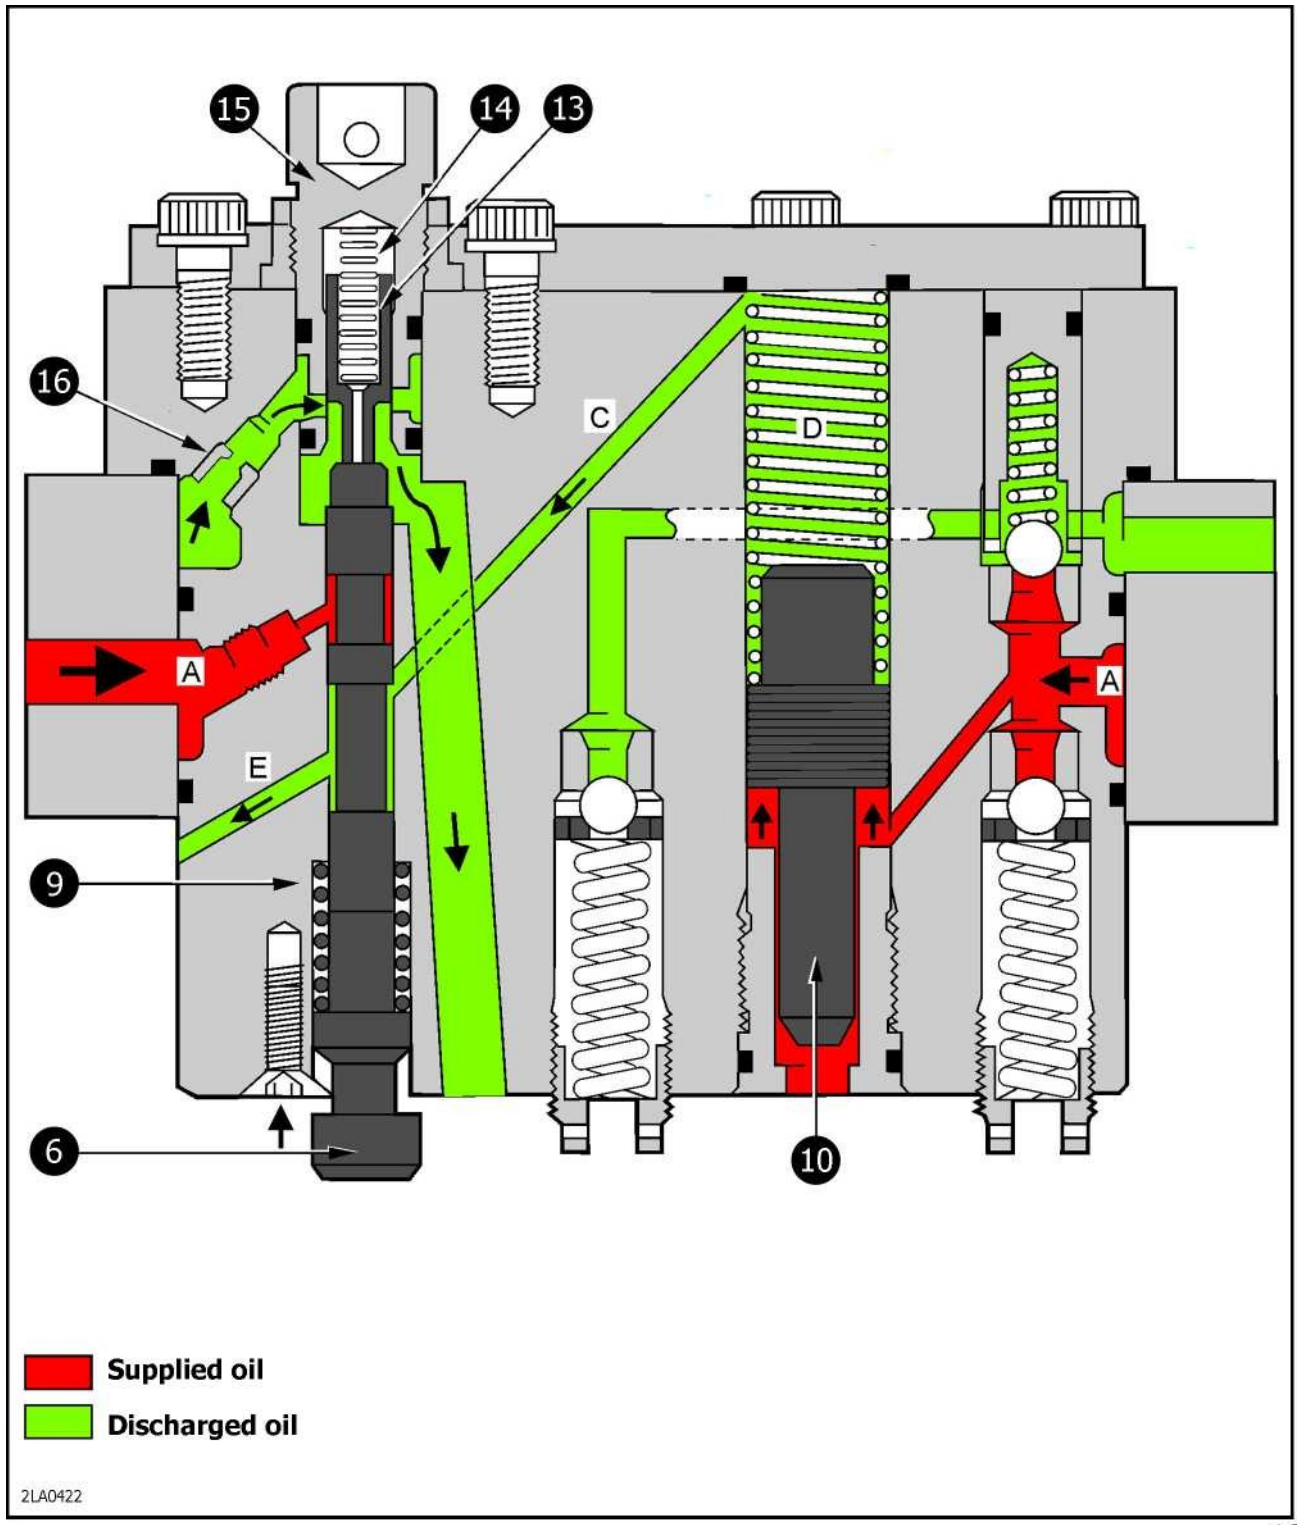

<

Proceed as follows:

1. Split the power lift's valve system.

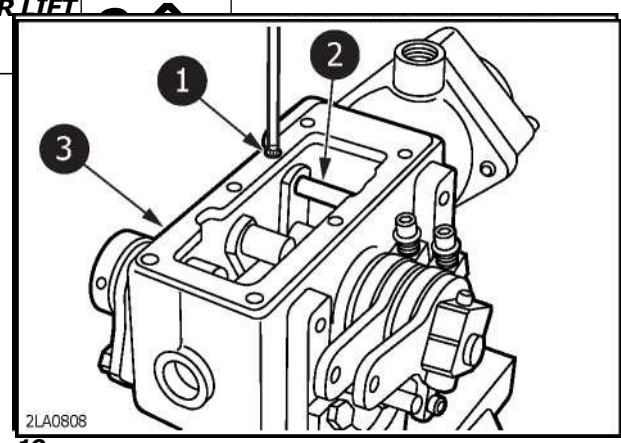

POWER LIFT'S VALVE SYSTEM - OVERHAUL

Demounting

⚠ t put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.


https://truckmanualshub.com/

2. Unscrew the bolts (1), remove the cover (2).
3. Unscrew the fixing screws (1) of the valve system (2) and remove this from its housing.

4. Lock the linkage housing of the valve system (3) in a vice and remove the Allen screw (1) that fixes the valve system's pin shaft (2).


https://truckmanualshub.com/

5. Release the shaft (1), remove it from the link- age housing and take out the valve system's pin control lever (2).

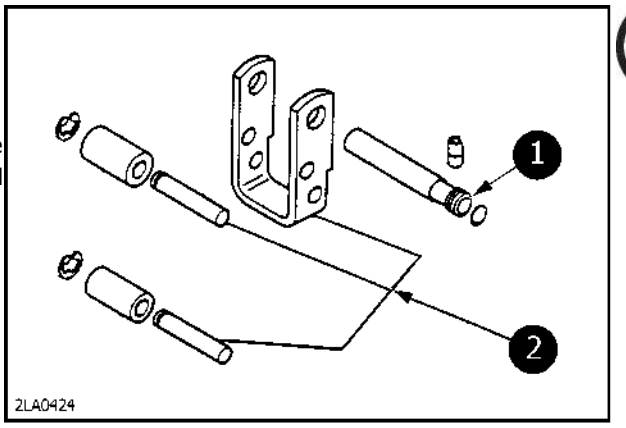


20

6. Release the Allen screw (1), loosen screw (2) and remove the lever (3).

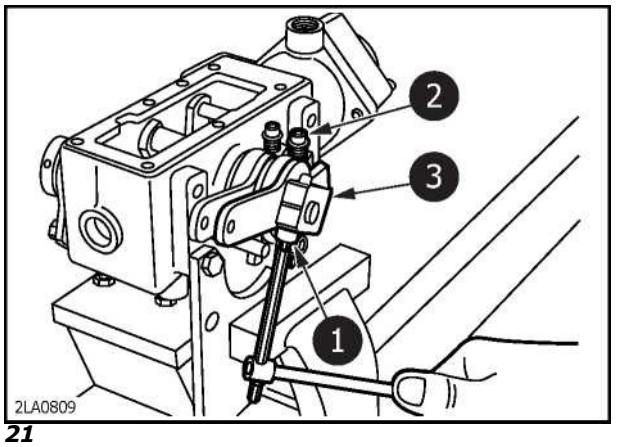


21

7. Unscrew the screws (1) and remove friction ring support (2).

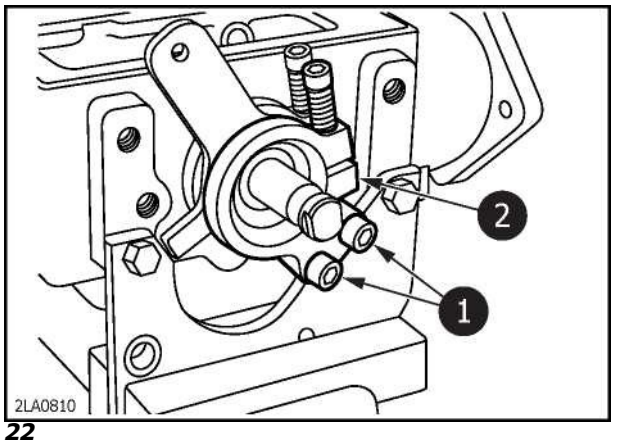

22


8. Unscrew the retainer plug (1) of the eccentric shaft.

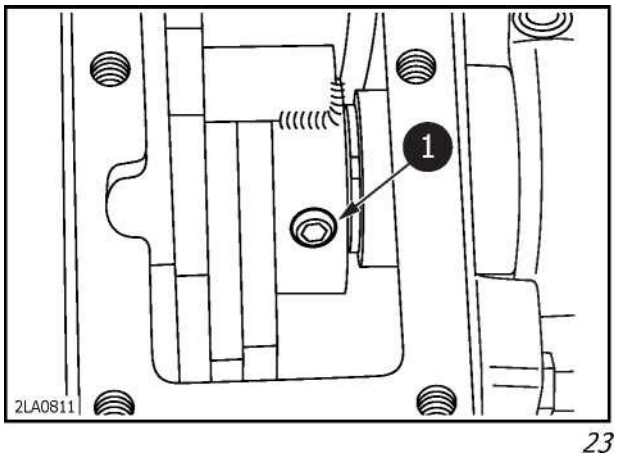

23


https://truckmanualshub.com/

9. Remove the eccentric shaft (1).

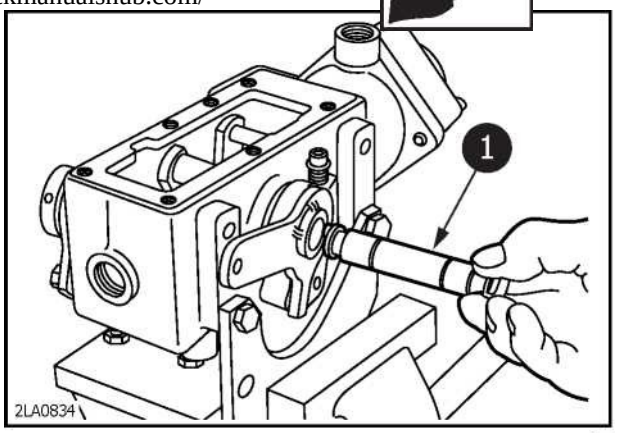


24

10. Remove the plates (1) and the eccentric ring (2).

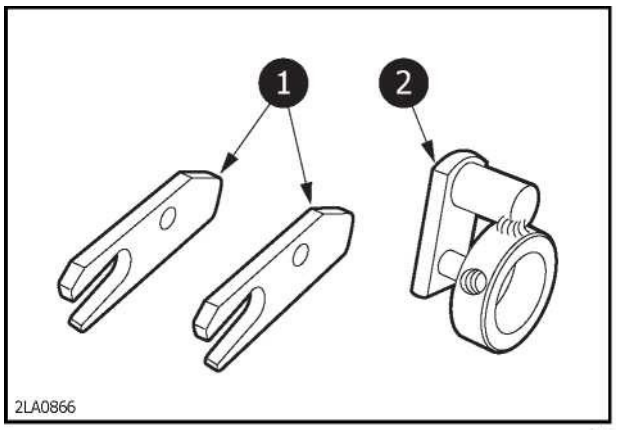

25


11. Remove the spring ring (1) that holds the lever (2).

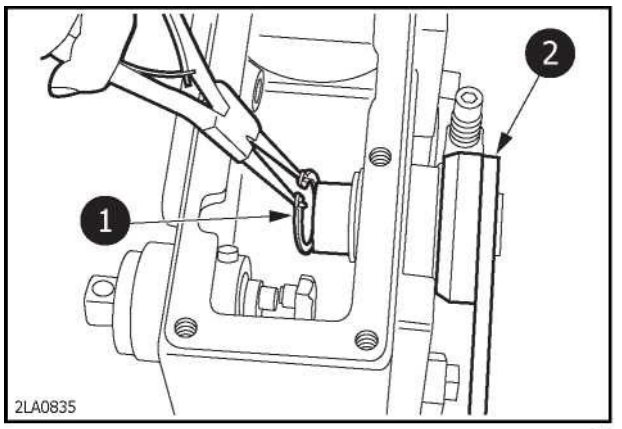

26

12. Remove the lever (1) complete with the friction ring support.

13. Remove the Allen screw (1) that fixes the shafts that control the external linkages.

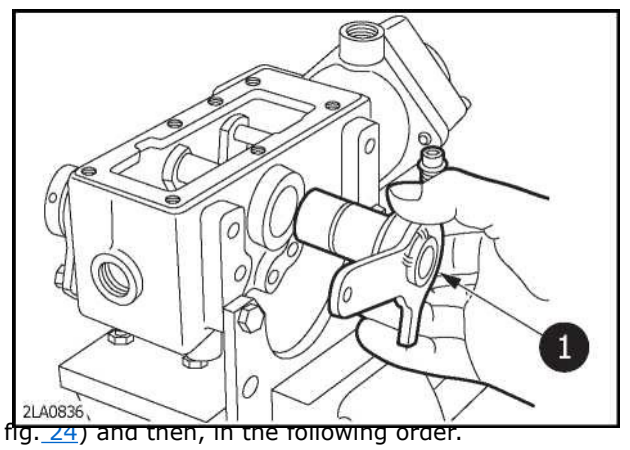


14. Remove the screw (6, fig. 24), the external lever (5, fig. 24) and then, in the following order.

- the lever (3);
- the shaft (2);
- the spacer rollers (4);
- the inner eccentric ring (1).


https://truckmanualshub.com/

15. Hold the valve system firmly in a vice. Take all the necessary precautions to prevent it from being damaged.

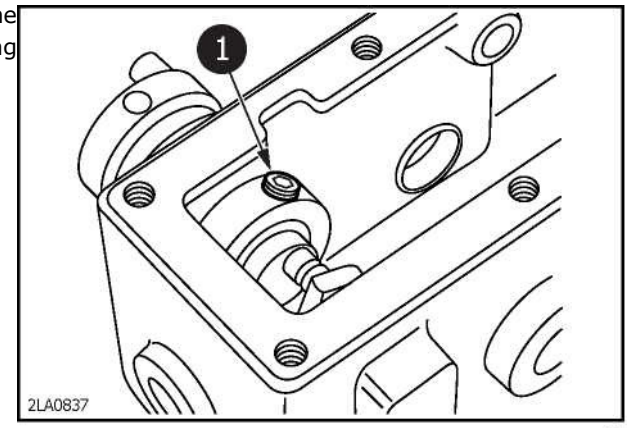


28


16. Unscrew the screw (1) that retains the valve system pin (2).

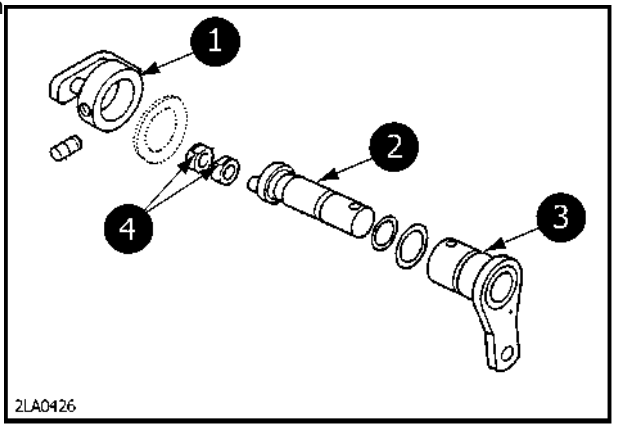

29

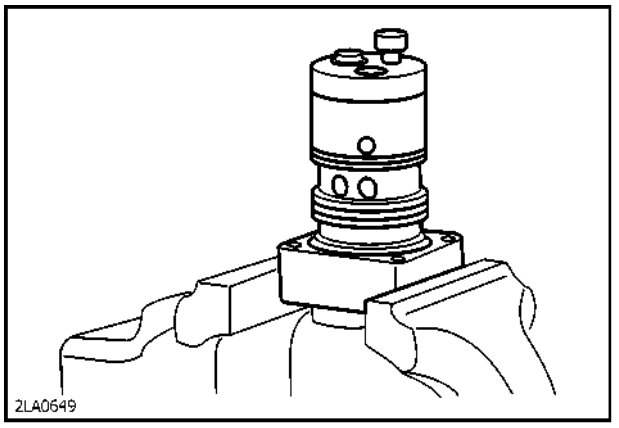


30

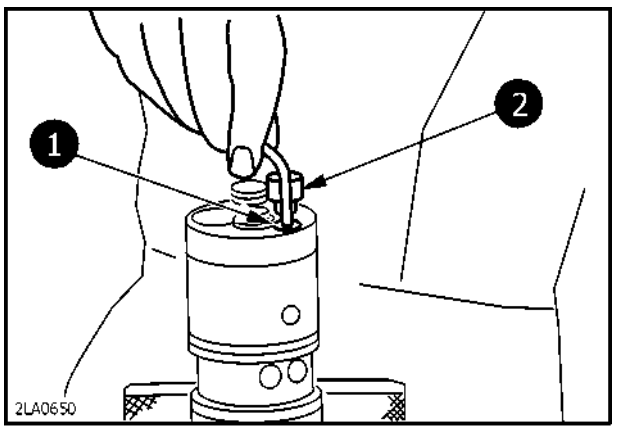

31


https://truckmanualshub.com/

17.
Remove the pin (1) from the valve system and recover the spring (2).

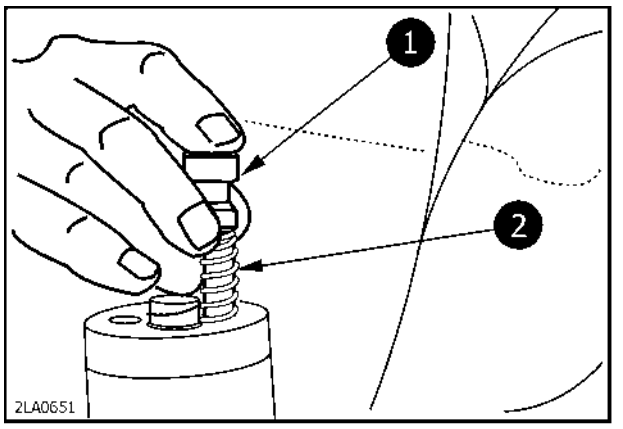


32

18. Remove the safety wire (1) from the over-pressure valves (2) and the cylinder safety device.

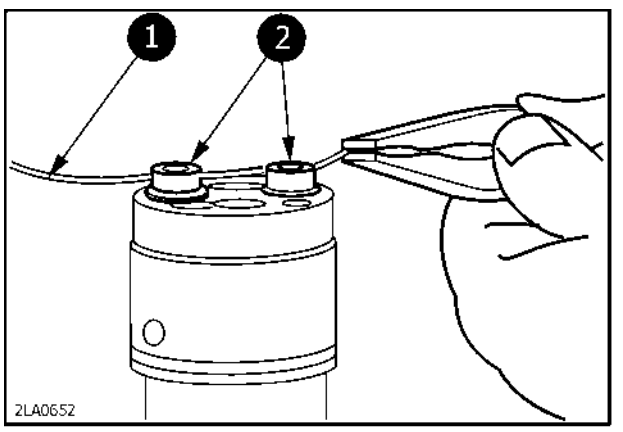


33

19. Demount the over-pressure valve (1) and the cylinder safety valve (2).

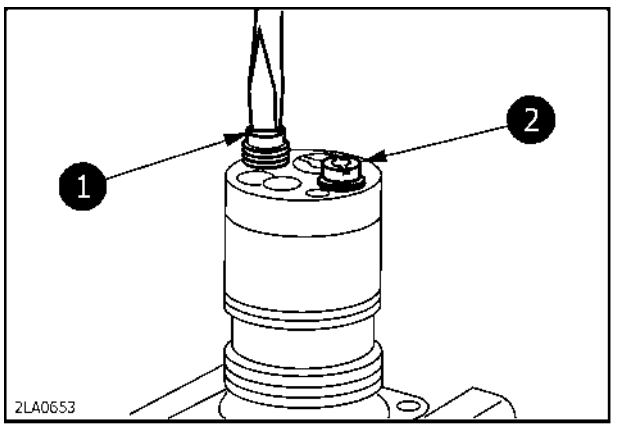


34

20. Demount the pilot valve (1).

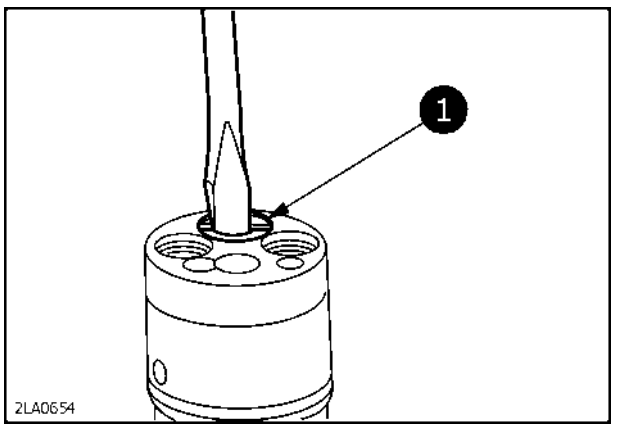


https://truckmanualshub.com/

21. Open the vice, turn the valve system through 180° and shut the vice again. Take all the necessary precautions to prevent the components from being damaged.
Use a special pin driver to remove the spring pin (1) and sensitivity adjuster lever (2).

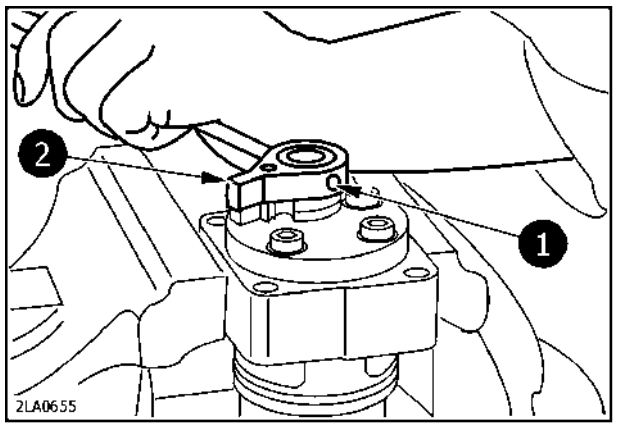


36

22. Unscrew the screws (1) that fix the upper cover (2) and remove this.

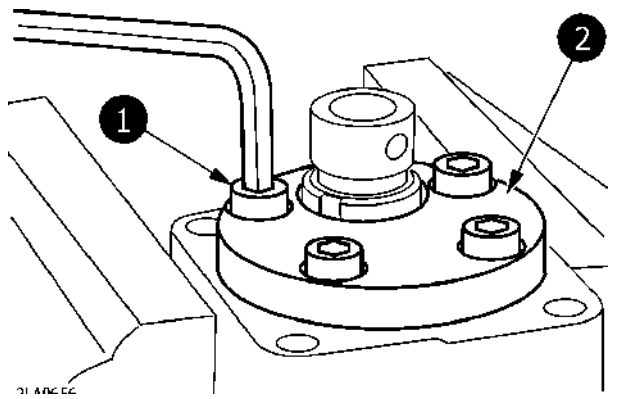


37


23. Take out the discharge valve (1) using the relative tool.

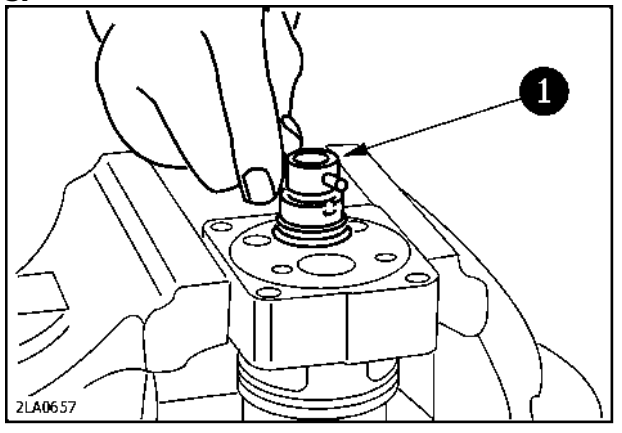

38

24. Take out the non-return valve (1).

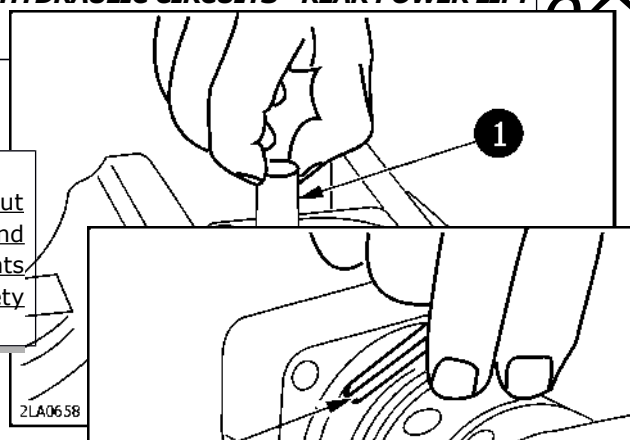

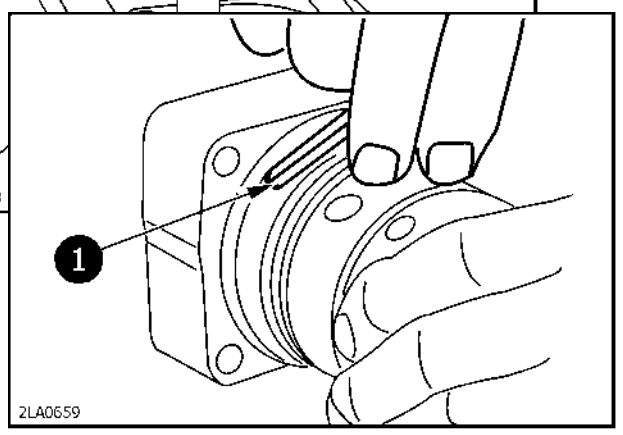

40

Assembly

WARNING

Handle all parts with great care. Do not put your hands or fingers between one part and the next. Wear approved safety garments such as goggles, gloves and safety footwear.

https://truckmanualshub.com/

Comply with the following recommendations when remounting the power lift's valve system:

- Comply with the illustrations and descriptions g

i
v
e
n

f
o
r

t
h
e

d
e
m
o
u
n
t
i
n
g

p
h
a
s
e

i
n

o
r
d
e
r

t
o

p
o
s
i
t
i
o

n

t
h
e

v
a
r
i
o
u
s

p
a
r
t
s
.

- Mount the calibrated nozzle.
- Insert the non-return valve.
- Insert the discharge valve.

- P
o
s
i
t
i
o
n

a
n
d

f
i
x

t
h
e

u
p
p
e
r

cover of the valve system.

- Mount the sensitivity

adjuster lever and fix it in place with the relat

i
v
e

s
p
r
i
n
g

p
i
n
.

- Mount the pilot valve.
- Mount the cylinder safety valve.
- Mount the over-pressure valve.
- Adjust the safety valve and pressure.

- L
o
c
k

t
h
e

p
o
s
i
t
i
o
n
s

o
f

t
h
e

v
a
l

v
e
s

w
i
t
h

t
h
e

s
a
f
e
t
y

w
i
r
e
.

- Insert the pin with its relative spring.
- L
o
c
k

t
h
e

v
a
l
v
e

p
i
n

w
i
t

h

t
h
e

r
e
l
a
t
i
v
e

c
h
e
c
k

s
c
r
e
w
.

- R
e
m
o
u
n
t

t
h
e

t
w
o

r
e
a
r

shafts (including the spacer rollers).

- Mount the inner eccentric ring (rocker arm).
- Mount the

other external lever (take care when positioning

as

both

levers

must

point

towards

the

valve

syst

e
m
)
.

- Mount the external spring pin that fixes the lever

r
.
- M
o
u
n
t

t
h
e

i
n
t
e
r
n
a
l

A
l
l
e
n

s
c
r
e
w

t
h
a
t

f
i
x
e
s

t
h
e

shafts that control the external linkages.

- Mount the external draft transmission lever.

the fork, the front eccentric ring and the other

connection fork.

- Fit the eccentric shaft into the fork hole.

- Tighten the Allen screw that fi

x
e
s

t
h
e

d
r
a
f
t

t
r
a
n
s
m
i
s
s
i
o
n

l
e
v
e
r
.

- Mount the friction ring support.
- Mount the position control lever.

- A
l
i
g
n

t
h
e

i
n
t
e

r
n
a
l

f
o
r
k
s

(
w
i
t
h

t
h
e

i
n
d
e
n
t
s

o
n

t
h
e

h
o
r
i
z
o
n
t
a
l

s
h

aft and the backward stroke levers).

- Mount the fix

i
n
g

s
c
r
e
w

o
f

t
h
e

p
o
s
i
t
i
o
n

c
o
n
t
r
o
l

l
e
v
e
r
.

- M
o
u
n
t

t
h
e

control linkage of the valve pin and the relative

A
l
l
e
n

s
c
r
e
w
.

- P
r
o
t
e
c
t

t
h
e

s
u
r
f
a
c
e

i
n

c
o
n
t
a
c
t

w
i
t
h

t
h
e

u
p
p
e
r

c
o
v
e
r

w
i
t
h

s
i
l
i
c
o
n
e

a
n
d

f
i
t

t
h
e

c
o
v
e
r

i
t

self on to the linkage housing.

- Position the valve

system in its housing and fix it in place with t

h
e

r
e
l
a
t
i
v
e

s
c
r
e
w
s
.

- Shut the valve system housing with its cover.

- N
o
w

f
i
t

t
h
e

v
a
l
v
e

s
y
s
t
e
m

b
a
c
k

o
n

t
o

t
h
e

p
o
w
e
r

l
i
f
t
.

VALVE SYSTEM OF THE HYDRAULIC POWER LIFT - HYDRAULIC TESTS

Du
u

r
i
n
g

t
h
e
s
e

t
e
s
t
s
,

t
h
e

v
a
l
v
e

s
y
s
t
e
m

m
u
s
t

b
e

m
a
d
e

t

o

o
p
e
r
a
t
e

i
n

t
h
e

v
a
r
i
o
u
s

c
o
n
d
i
t
i
o
n
s

i
n

w
h
i
c
h

i
t

m

a
y

b
e

c
a
l
l
e
d

u
p
o
n

t
o

w
o
r
k

w
h
e
n

t
h
e

p
o
w
e
r

l
i
f
t

i
s

operating on the tractor. These tests allow the

valves to be calibrated, to make sure that there

are no leaks and to establish before and whether

the assembly operates within the limits for which

i
t

w
a
s

d
e
s
i
g
n
e
d

a
n
d

b
u
i
l
t
.
The following tests must be carried out:
C
h
e
c
k

f
o
r

l
e
a
k
s

f
r
o

m

t
h
e

d
i
s
c
h
a
r
g
e

v
a
l
v
e

I
n
s
p
e
c
t
i
o
n

a
n
d

a
d
j
u
s
t
m

e
n
t

o
f

t
h
e

s
a
f
e
t
y

v
a
l
v
e
C
h
e
c
k

f
o
r

l
e
a
k
s

f
r
o
m

t
h

e
u n o n - r e t e t u n r u n
a v a i l a b l e o n o n t h e u n s e r d u n c t t i n u n s p d e e c t i - o n a u n

https://truckmanualshub.com/

Calibration of the over-pressure valve


Check for leaks from the discharge valve

1. Pl
ac
e
th

&

&

&

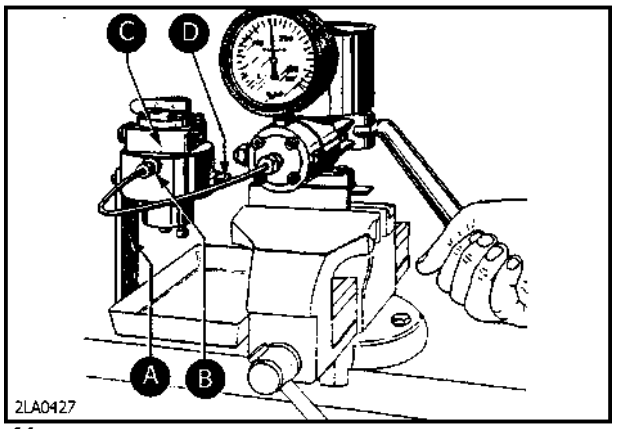

41

e
val
ve
sy
st
e
m
(C
)
in
to
ol
0
0
1
ID
R
M
IS
(A
)
an
d
po
siti
on
it
so
th
at
th
e
su
pp
ly
ho

les
are
not
shut
off
.

2. Co
nn
ec
t
th
e
hi
gh
pr
es
su
re
pu
m
p
ho
se
0
0
2
ID
R
M
IS
to
th
e
up
pe
r
un
io
n
(B
)
of
th
e
to
ol

(lifting ram duct).

3. Position a suitable bolt between the base of the tool **0 1 IDRMIS** and the valve stem (7, fig

. 42) then unscrew the bolt and lift the stem until its end is about 4 mm away from the lower surface of the body of

th
e
val
ve
sy
st
e
m.



4. O
p
e
r
a
t
e

t
h
e

p
u
m
p

a
n
d

m
a
k
e

s
u
r
e

t
h
a
t

t

h
e

d
i
s
-
c
h
a
r
g
e

v
a
l
v
e

(
3
,

f
i
g
.

4
2
)

d
i
s
c
h
a
r
g
e
s

t
h
e

o

i
l

f
r
o
m

t
h
e

d
u
c
t

(
G
,

f
i
g
.

4
2
)
.

I
f

t
h
i
s

f
a
i
l
s

t
o

o

c
c
u
r
,

t
u
r
n

t
h
e

s
e
n
s
i
t
i
v
i
t
y

l
e
v
e
r

c
l
o
c
k
w
i
s
e

u
n
t
i
l

the valve opens.

5. Continue to operate the pump and

begin to slowly turn the sensitivity lever in the

anti-clockwise direction to start closing the v

https://truckmanualshub.com/



Stop this oil pressure sensor from failing.

w
i
n
g

f
r
o
m

d
u
c
t

(
G
,

f
i
g
.

4
2
)

a
n
d

t
h
e

p
r
e
s
s
u
r
e

g
a
u
g

e

s
h
o
w
s

t
h
a
t

t
h
e

p
r
e
s
s
u
r
e

i
s

i
n
c
r
e
a
s
i
n
g

(
p
o
s
i
t
i
o
n

1
)
.

Turn the lever again, about 280° in the anti-clockwise direction. This ensures a 1 mm valve coverage in relation to the dis

charge gaps of its seat (position 2, fig. 42). Now operate the pump until the pressure reaches the value of 150

b
a
r
.



A
t

t
h
i
s

s
t
a
g
e
,

t
h
e

p
r
e
s
s
u
r
e

s
h
o
u
l
d

s
t
a
r
t

t
o

drop very slowly. This is this fail to occur, it de

notes

excessive

leaking

between

the

valve

(3,

fig

.

4
2
)

a
n
d

i
t
s

s
e
a
t

o
r

b
e
t
w
e
e
n

t
h
e

r
e
t
e
n
t
i
o
n

r
i
n
g
s

7.

(4, fig. 42) and the body of the valve system.

The maximum leak tolerated at a pressure of

1
5
0

b
a
r

a
n
d

a
t

a

t
e
m
p
e
r
a
t
u
r
e

o
f

2
5

-

3
0

°
C

i

s

3

c
m
3
,

w
i
t
h
i
n

3

m
i
n
u
t
e
s
.
I
f
t
h
e

v
a
l
u
e

m
e
a
s
u
r
e

d

i
s

h
i
g
h
e
r
,

d
e
m
o
u
n
t

t
h
e

v
a
l
v
e

a
n
d

r
e
p
l
a
c
e

t
h
e

r
e

tention rings (4, fig. 42), the repeat the test.

Replace the discharge valve (3, fig. 42) and its

s
e
a
t

i
f

t
h
e


f
a
u
l
t

p
e
r
s
i
s
t
s
.

https://truckmanualshub.com/

Checking and adjusting the cylinder safety valve

1. Keep the pump connected to the same tool union and operate it until the cylinder safety valve (6) opens.
   It must open at the value of 185 - 190 bar.
   If this fails to occur, adjust the valve by means of the retention plug of the spring.
   Tighten the plug to increase the setting value, slacken it off to decrease the value.
2. Once the valve has been adjusted, place a graduated test tube under the valve system and keep the pressure in the circuit at 150 bar. The maximum leak tolerated in two minutes at an ambient temperature of 25 - 30 °C must not exceed 10 cc.
3. If the leaks exceed the tolerated value, check to find out which component is leaking then, having eliminated the possibility of this being the discharge valve which has already been checked, make sure that the cylinder safety valve (6, fig. 42) is tight by checking to see that no oil flows from duct (M).
   If oil is seen, its housing must be milled with an adequate tool in order to re-create the sharp internal edge.

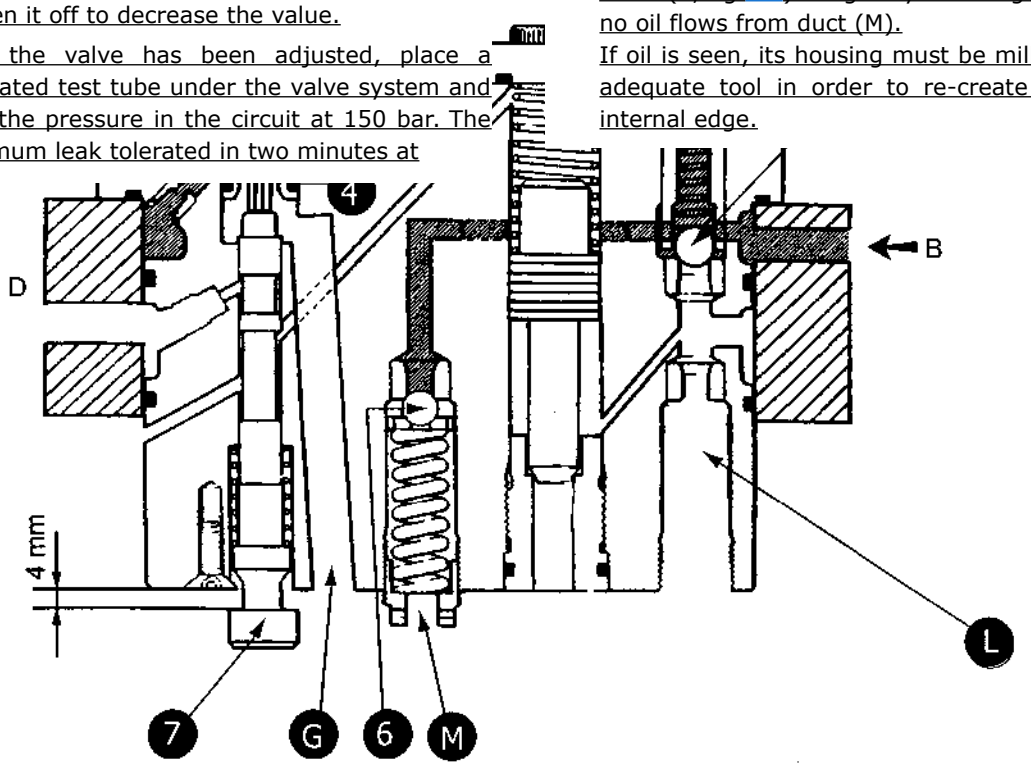

2LA0428

42

Non-return valve test

Leaking can also be caused by the non-return valve (5, fig. 42). Proceed in the following way to locate the entity of the leak:


1. Remove the calibration valve which is in direct communication with the duct that delivers oil to the valve: this allows the oil to flow straight through duct (L, fig. 42).
2. If oil flows through duct (L, fig. 42), mill its housing with an adequate tool in order to re-create the sharp edge on its housing, in compliance with the following recommendations.
   - Use an upright drill to mill housings in order to ensure that the mill operates in a perfectly perpendicular way.
   - The tool must turn between 100-200 RPM at most.
3. Check the upper and intermediate retention rings of the valve system if the leaks persist.

Do not attempt to re-create the seats by tapping on the balls as this would only enlarge them.

Over-pressure valve setting test

This test must also be carried out with tool **001 IDR MIS**. Proceed as follows:

1. Start the pump and check the pressure gauge to see the pressure value at which the over-pressure valve (9, fig. 44) opens: The exact value is 185 - 190 bar.
2. If necessary, adjust the valve by means of the
3. spring retention plug.

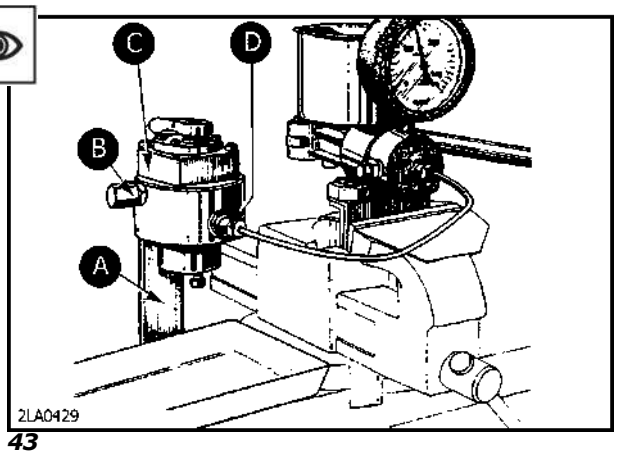

2LA0429

43

https://truckmanualshub.com/

4. Once the valve has been adjusted, maintain a pressure of 150 bar in the circuit and, after having set a graduated test tube in position, make sure that the servo valve (8, fig. 44) leaks no more than 100 cc. within the space of 2 minutes.


The part must be replaced if this limit is exceeded.

https://truckmanualshub.com/

5. Make sure that no oil leaks from the duct (L) of the calibration valve.
If necessary, mill the valve seat as described in the previous section.

2LA0660

If oil leaks from duct (G), this is due to the play between the upper part (X) of the stem (7) and the body of the valve

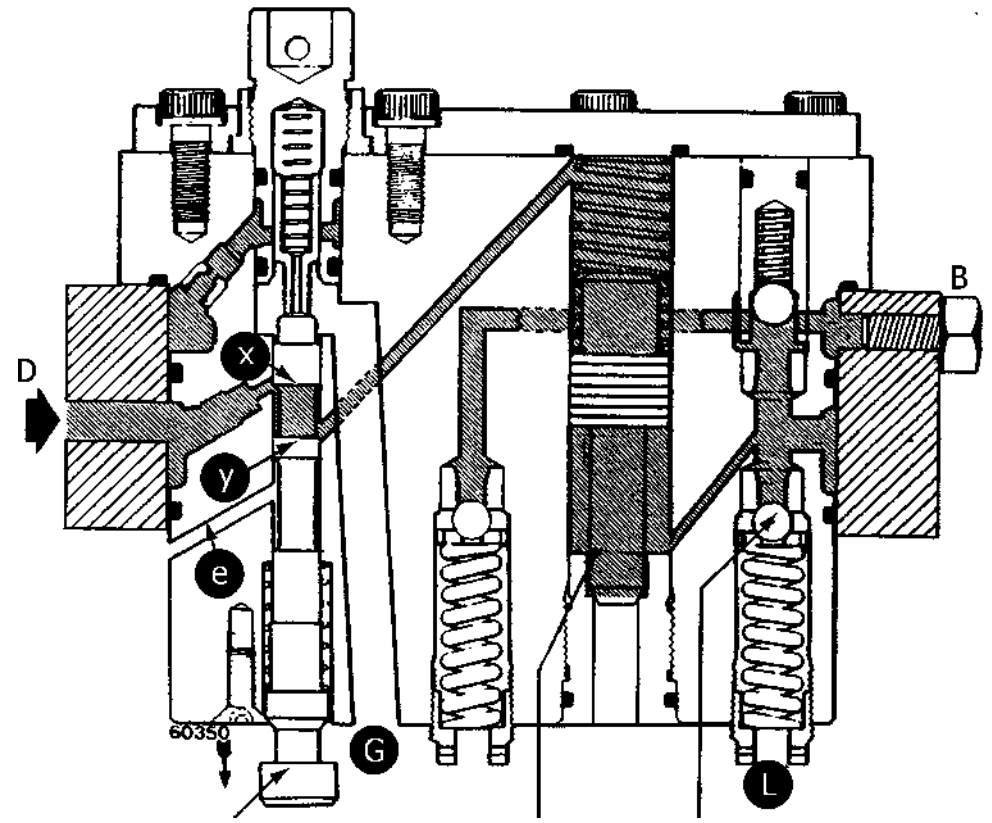

system (it will not be due to the discharge valve as this has already been checked).
Oil leaking from duct (e) is due to the play between the lower part (Y) of the stem and the body of the valve system.
This leak cannot be eliminated, but will not affect the functionality of the system in any way.
However, it must not exceed 100 cc. within 2 min- utes.

https://truckmanualshub.com/

POWER LIFT - ADJUSTMENTS

The adjustments described below refer to the power lift installed on the tractor.


Sensitivity adjustment

Test conditions:

- Apply a weight of at least 100 kg to the power lift links;
- Turn on the engine and accelerate to a rate between 1000 and 1500 RPM;
- The position control and draft control levers must be in the fully forward positions.


Proceed as follows:

1. Move the position control lever (1) to halfway along its travel.

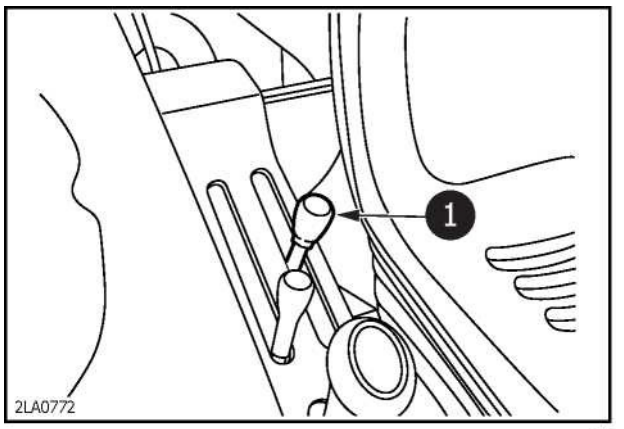


45

2. Partly remove the spring pin (1) that limits the travel of the sensitivity control lever (2).

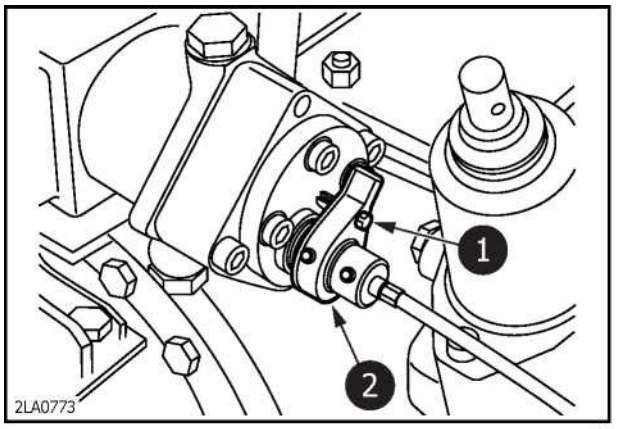


46

3. Turn the sensitivity control lever (1) clockwise to find the point in which the discharge valve starts to open. This will be denoted by the appearance of a rhythmic swing from the lift links.
Proceed in the following way if the valve fails to open after the lever has been fully turned in the clockwise direction:

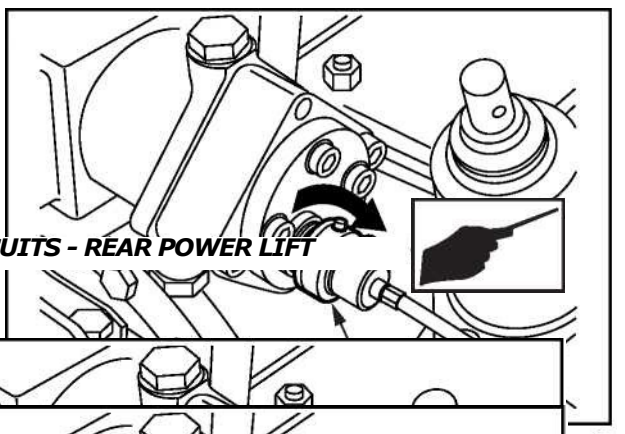

47

4. Lower the lift links.
Slacken off the four screws (1) that fix the cover (2) of the discharge valve;

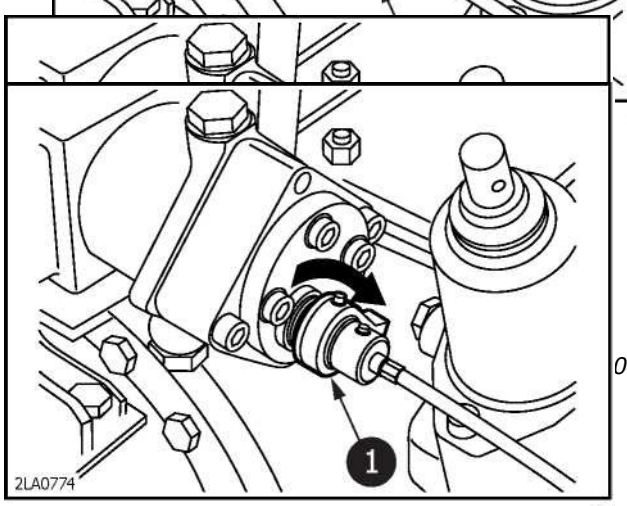


51

Turn the ring nut (1) anti-clockwise for about
7. Turn the sensitivity lever (1) clockwise again until the above mentioned conditions have been obtained.

https://truckmanualshub.com/


8. Now turn the sensitivity lever (1) anti-clockwise until the links stop swinging.

Stop turning the lever, turn off the engine and lower the lift links.

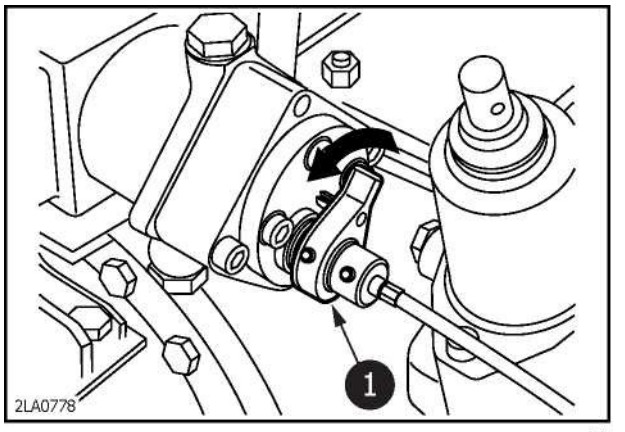

52

9. Turn the lever (1) again about 30 mm in the anti-clockwise direction measured at the ends of the lever itself.

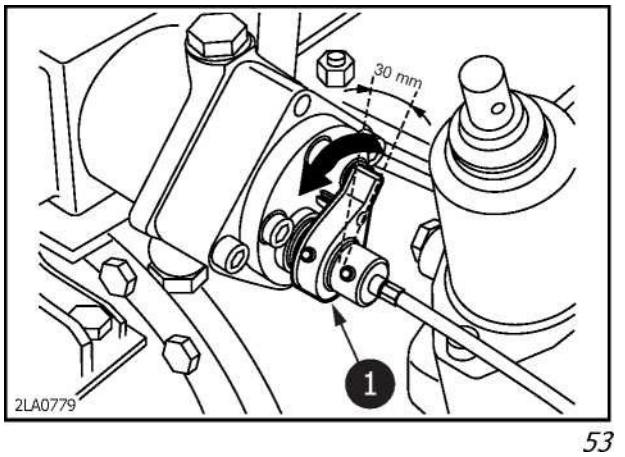

53

10. The position assumed by the lever therefore constitutes the maximum sensitivity point of the valve system.

Since this point can be located with the spring pin on the lever against the lower right countersunk hex screw, after having loosened the four countersunk hex screws, simultaneously turn the lever and ring nut in order to carry the maximum sensitivity point to the required position.

11. Re-tighten the four screws (1, fig. 48) that fix the cover (2, fig. 48) of the discharge valve.

12. Insert the spring pin (1, fig. 45) that limits the travel of the sensitivity control lever (2, fig. 45).

13. Turn off the engine.

14. Remove the weight from the power lift links.

https://truckmanualshub.com/


Draft control adjustment

Test conditions:

- Turn on the engine and accelerate to a rate between 1000 and 1500 RPM;
- The position control and draft control levers must be in the fully forward positions.

Proceed as follows:


1. Move the position control lever (1) fully up.

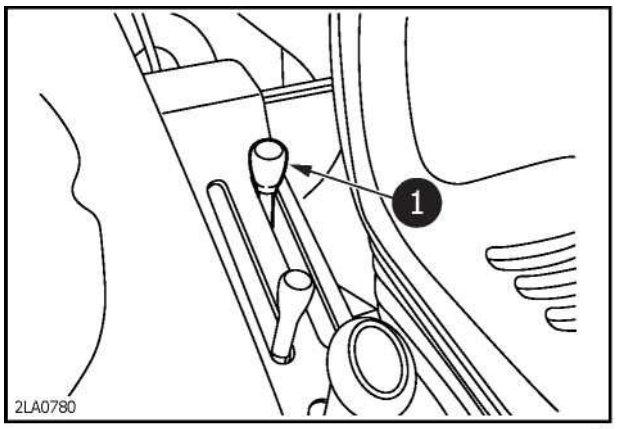

54


2.

Slowly move the draft control lever (1) 50 - 55 mm away from the position control lever (2). Make sure that the links lift.

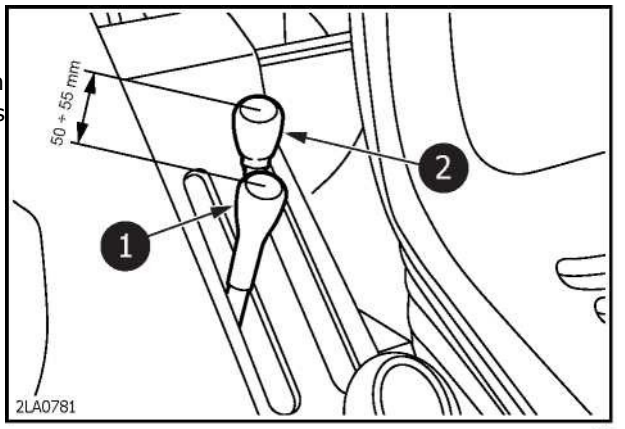

55


3. Make any adjustments required with the rod (1) if the links fail to lift to the required extent.

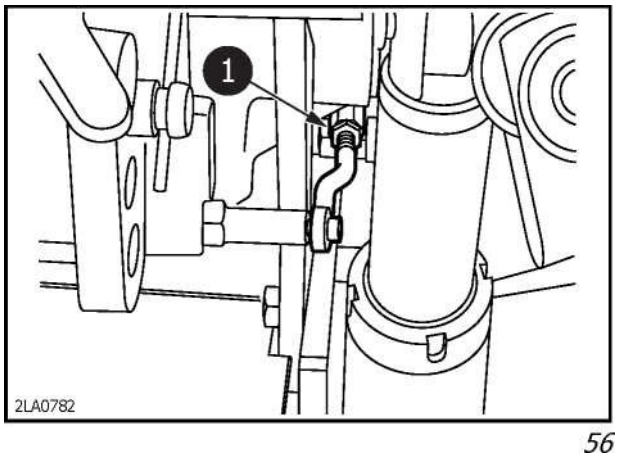

56

https://truckmanualshub.com/

4. Fit tool **003 IDR MIS** (1) on to the swinging support and lift it to annul the the maximum negative draft.

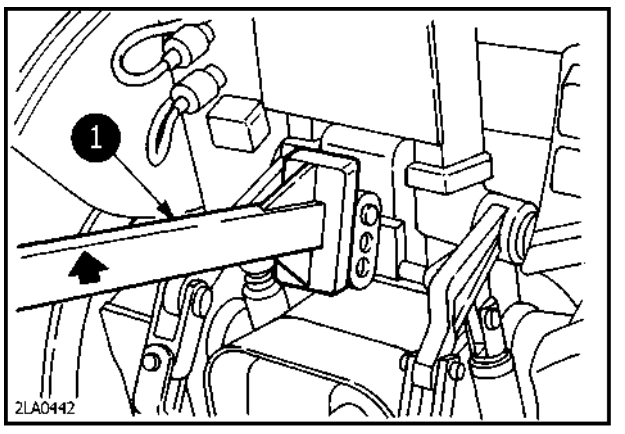


57

5. Slowly move the draft control lever (1) 15 - 20 mm away from the position control lever (2). Make sure that the links lift.

6. If the measurement indicated in step 19 is not correct, make any adjustments required with the rod (1, fig. 56).

7. Move the draft control lever fully down. Make sure that the links lower.

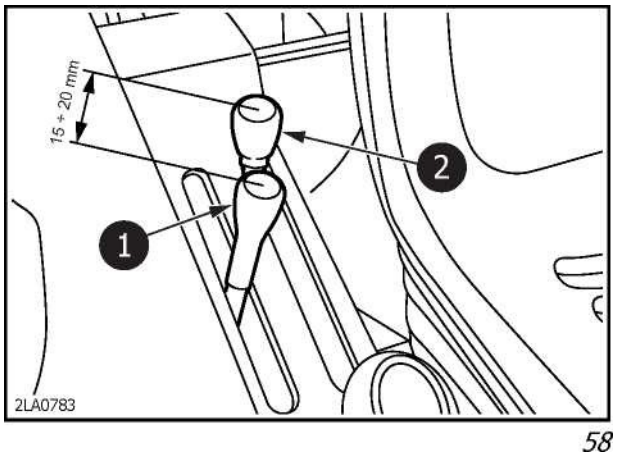


58

8. Lower tool **003 IDR MIS** (1) so as to annul the maximum positive draft travel. Make sure that the links remain at a standstill in the low- ered position.

9. Remove tool **003 IDR MIS** (1).

10. Turn off the engine.

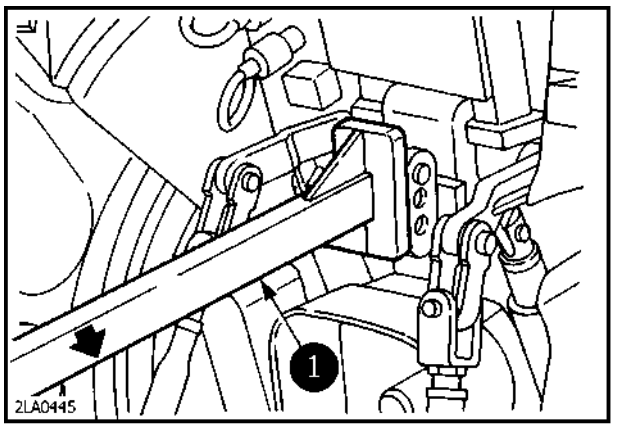

59

Position control adjustment

Test conditions:

Turn on the engine and accelerate to a rate between 1000 and 1500 RPM;

Proceed as follows:


11. The draft control (1) and position control (2) levers must be in the fully back positions.

https://truckmanualshub.com/


12. Make sure that the cylinder stem projection (1) is 135 - 140 mm from the base of the cylinder.

13. Proceed in the following way to adjust if this measurement is not correct.


14. Release the rod (2) by means of the check nut (1).

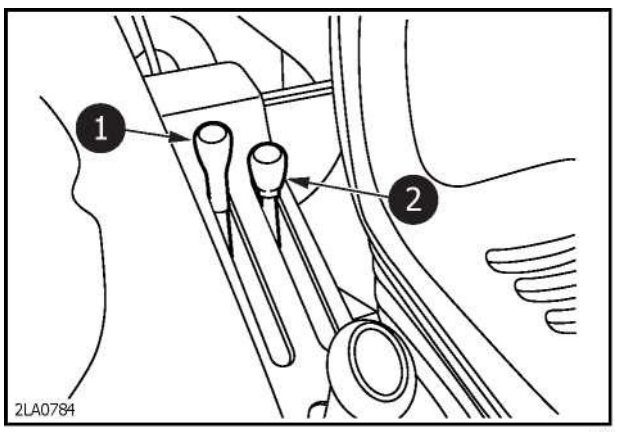

60

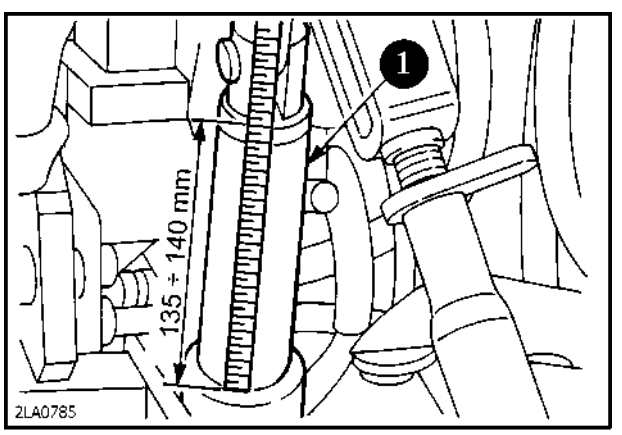


61

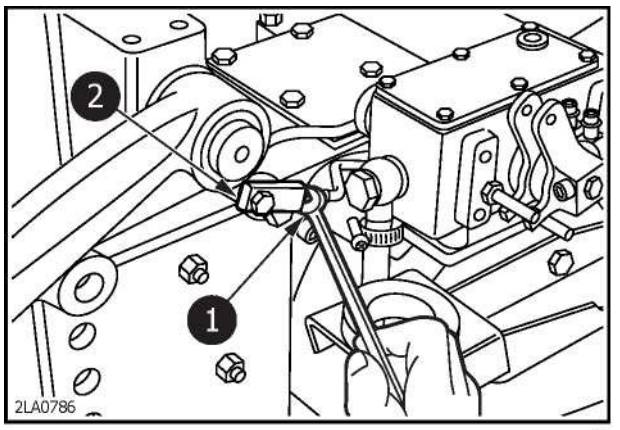

62

https://truckmanualshub.com/

15. Unscrew the screw (1) that locks the adjuster rod (2).
16. Turn the rod until the required adjustment has been made.
17. Fix the rod in position and re-tighten the check nut (3).

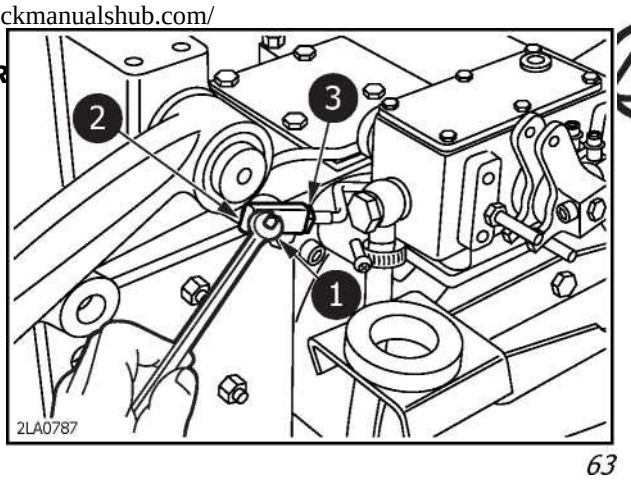

63


https://truckmanualshub.com/

HYDRAULIC POWER LIFT - OPERATING PRESSURE TEST

The operating pressure test must be conducted whenever faults are encountered or when the tractor is generally overhauled.
Remember that if the settings of the governor valves in the circuit are too low, this will reduce the lifting capacity of the power lift and the capacity of the auxiliary control valves.
On the other hand, excessively high valve settings create dangerous conditions of stress on all the components involved.
At the end of the tests, use the relative adjusters to ensure that the valve settings are correct.
The hydraulic tests must be conducted with the engine at a rate of about 1200 RPM, with oil at a temperature between 30 - 40 °C, using the necessary special tools and a set of pressure gauges.

Checking the valve pressure setting for the auxiliary control valves

Insert union **004 IDR MIS** (1) into a quick-connecting female half-coupling and connect it to the pressure gauge (2) with 0 - 250 kg/cm^2 scale.
Operate the lever of the valve system for the half- coupling in question and activate the valve.
Check the pressure reading on the gauge. It must be 185 - 190 bar (188 - 193 kg/cm^2).

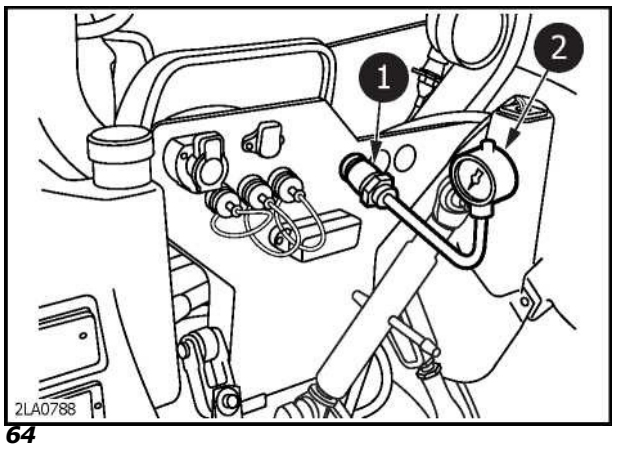

https://truckmanualshub.com/

HYDRAULIC CIRCUITS - AUXILIARY CONTROL VALVES

INDEX

Description **Page**

MAIN SPECIFICATIONS 710-3

https://truckmanualshub.com/

DESCRIPTION AND OPERATION.....710-4
Description of the Circuit.....710-5