https://truckmanualshub.com/

2011

PARTS CATALOG

FRR

INDONESIA

ISUZU

GENUINE PARTS

PART NO. 1-8871-1390-0

https://truckmanualshub.com/

How to use Parts Catalog

1. This parts catalog contains the service parts information for the vehicle models listed on the "Vehicle Models and M.D.".
2. This parts catalog contains the service parts information as of April,2011. The part numbers are subject to change without notice.
3. In order to maintain the high quality of Isuzu vehicles, use of Genuine Isuzu Parts is recommended wherever and whenever service, maintenance or repairs are required.

Contents

1 How to search for the Part Number P-2
2 Vehicle Models and M.D. P-3
3 V.I.N. P-4
4 How to refer to ID Plate P-5
5 Option Code List P-6
6 How to refer to Parts Catalog P-10
7 Abbreviation List P-14
8 Recommendation Class P-18
9 List of pipes being supplied by bulk P-19
10 Service part numbers of nylon and corrugate tube for air pipe P-24


ALPHABETICAL INDEX ..... P-1 ~ P-20
FIGURE NUMBER INDEX ..... P-1 ~ P-6
ILLUSTRATION INDEX ..... P-1 ~ P-64
ILLUSTRATION AND TEXT ..... P-1 ~ P-642
NUMERICAL INDEX ..... P-1 ~ P-16

https://truckmanualshub.com/


1 How to search for the Part Number

Check the Vehicle Information

◎ ID Plate information

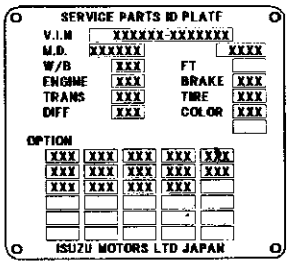

Option Code List



M.D., production year and month, Options

◎ V.I.N. information


XXXXXXXXXXXXXXXXX

V.I.N.



Model year, engine type, wheel base, etc.

Check the Part

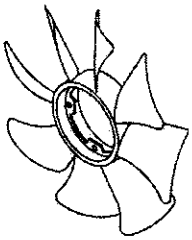


・Type of Part
・Place where the part is installed

(Part Name)

Catalog

Illustration

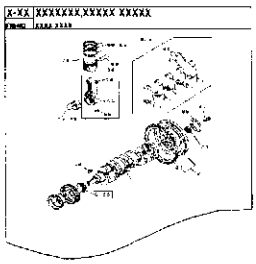

Text

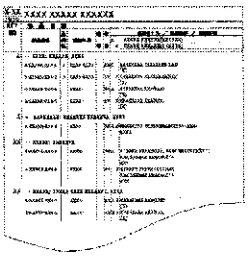


Illustration Index



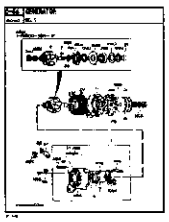


Fig No. Index

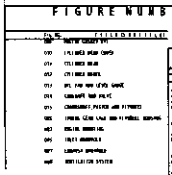


Alphabetical Index

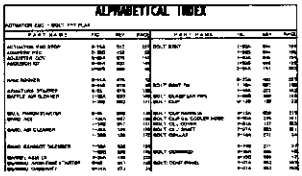

https://truckmanualshub.com/

2 Vehicle Models and M.D.

1. M.D.(Catalog Model Designator)

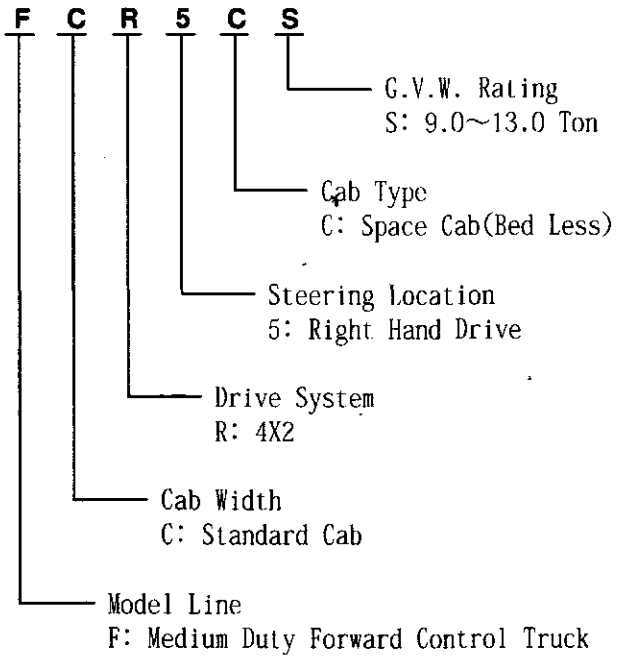

2. Major Equipment

Engine
4HK1-TCC ENG(RDV)

Transmission
MZZ6W M/T(RSA)

Wheel Base
WHEEL BASE 5300MM(53W)

Rear Axle Final Drive
FINAL GEAR 39/7 14.5"(W1H)
FINAL GEAR 41/8 14.5"(W4F)

Word in ( ) shows option code.


3. Model Year, V.I.N.(Sequential No.)

Model Year	V. I. N. (Sequential No.)
2011	B7000001-

https://truckmanualshub.com/


3 V.I.N.

1.Vehicle Identification Number (V.I.N.) System

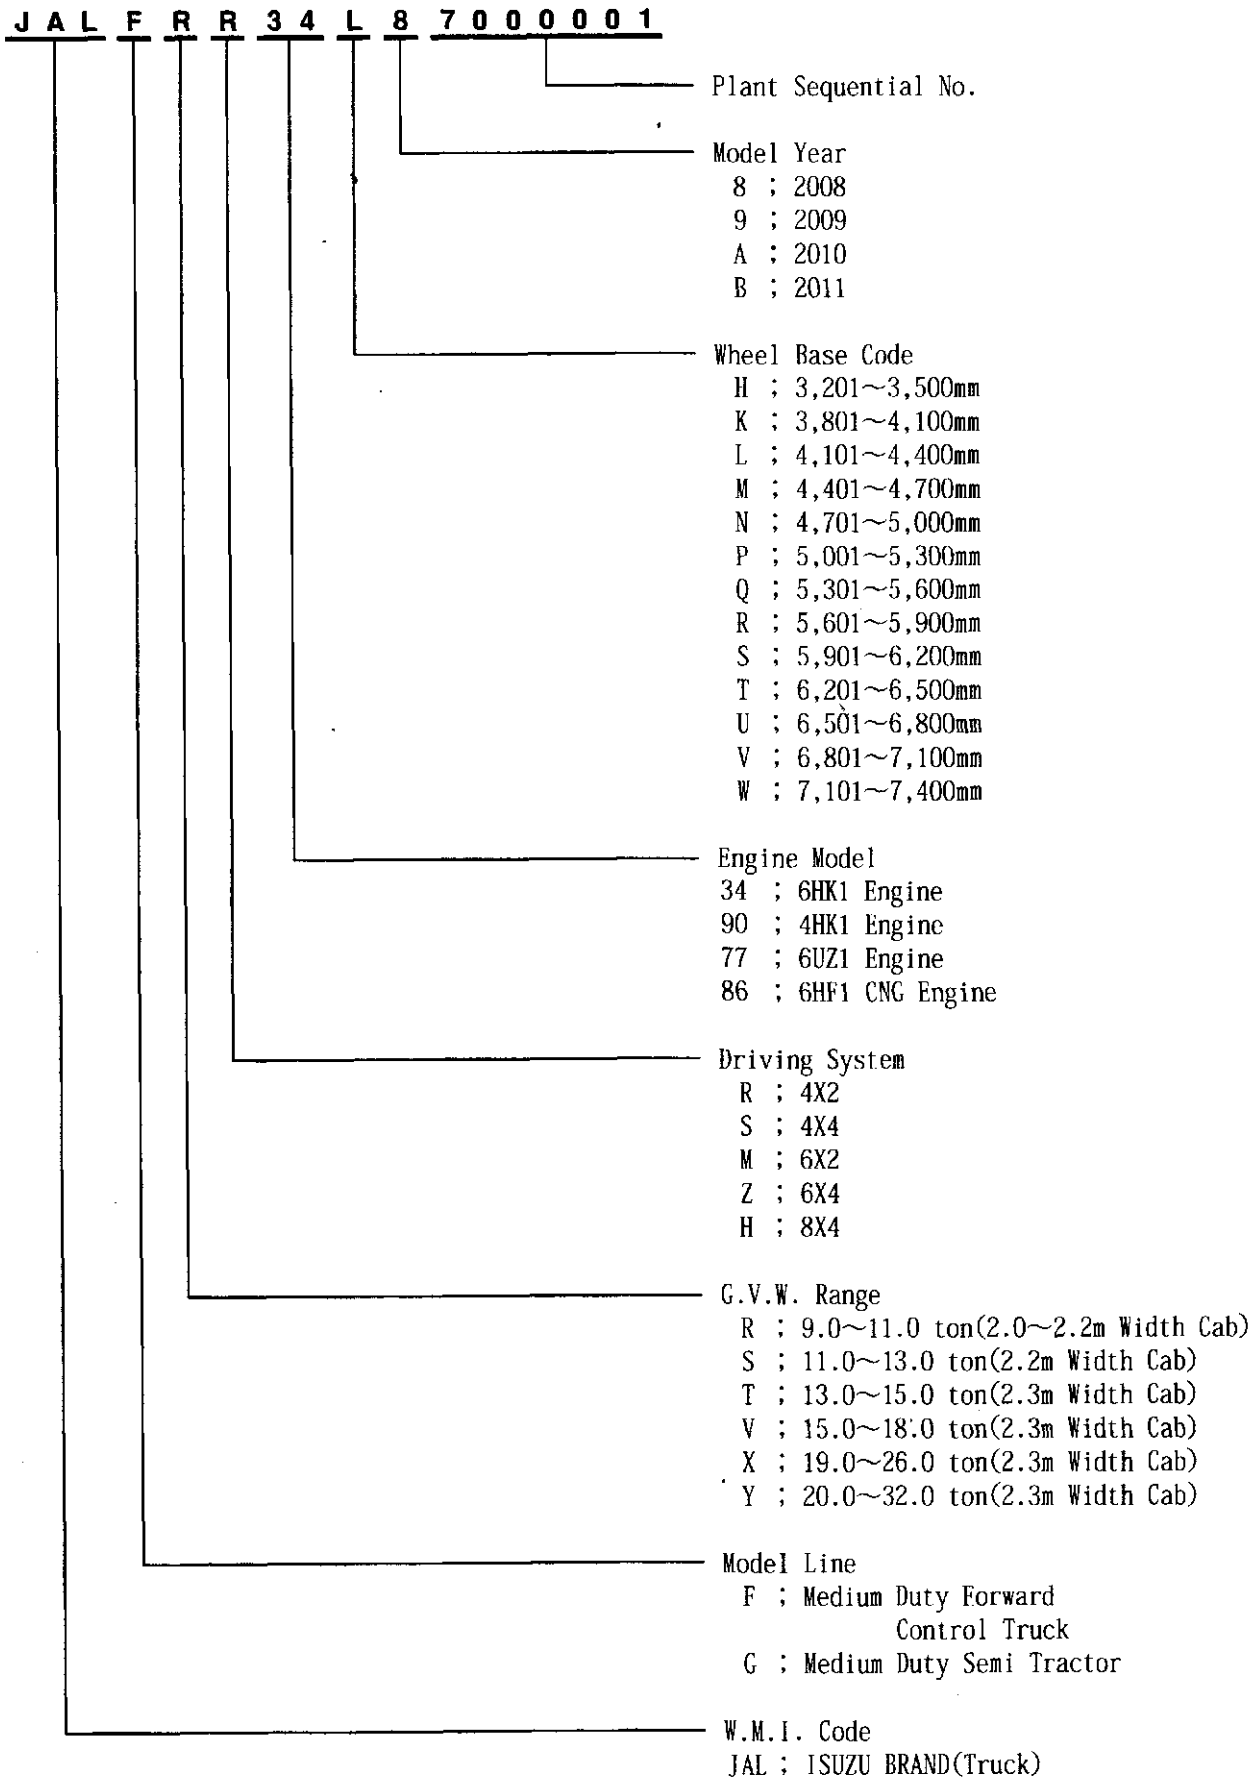

https://truckmanualshub.com/

4 How to refer to ID Plate

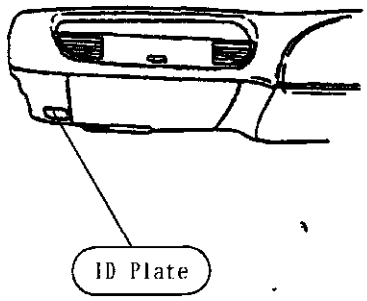

Caution: If you remove the ID Plate from the body panel for replacement of some related parts, please be sure to rivet it again.

(Service ID Plate)

SERVICE PARTS ID PLATE

V.I.N	JALFSR33MW3000001		
M.D.	FSR5MF ← ②	JIAD ← ①	
W/B	51W	FT	
ENGINE	65L	BRAKE	Z05
TRANS	Y2A	TIRE	62P
DIFF	W1H	COLOR	729

OPTION

B3A	C4Z	C41	E1Q	FS4
F40	KB6	N40	PQ6	PR2
PT1	Q2X	SC5	SD7	SQ9
T1A	WF6			

③

ISUZU MOTORS LTD.JAPAN

(Parts Catalog)

6-07 FRONT WINDOW GLASS AND WEATHERSTRIP

KEY NO.	PART NUMBER	I T C	APPLIED DATE	Q T Y	APPLIED MODEL / RESTRICTION / REMARKS
					A MIDDLE CHASSIS(FSR6MF) ← ②
1	--- GLASS;WINDSHIELD				
	8-94183-129-0		9304-	01	A,D DELUXE CAB(W14)
	8-94183-129-0		8602-8706	01	A
	8-94187-020-0		9402-9502	01	A
2	--- WEATERSTRIP;WINDSHIELD GLASS				
	8-94294-083-3		8903-	01	A,D DELUXE CAB(W14)
	8-94294-083-3		8611-8902	01	A
	8-94294-083-3		9801-	01	A DELUXE CAB(W14) ← ③
	8-94499-973-3		8611-8902	01	A
	8-94499-973-3		8903-	01	A DELUXE CAB(W14)

①

[Explanation]

①Applied Date: Indicated in alphabetical characters on the ID Plate.
(A=0,B=1,C=2,D=3,etc.)
For example

March '98 J I A D (Year/Month)

9 8 0 3

②M.D.: This column is coded to show the model application of each part. Check the M.D. (Model Designator)on the ID Plate to confirm the correct model if necessary.

③Option Code: When the part can not be verified, refer to option codes on the ID Plate. The upper portion of ID Plate shows "Module options and equivalent" such as engine, transmission, grade, body color, interior trim color, etc. The lower portion indicates other specific options.

https://truckmanualshub.com/

5-1 Option Code List [Option Code Order]

The option code is arranged in alphabetical sequence. The option code with ( ) is listed on the ID Plate.

OPTION CODE	OPTION DESCRIPTION
<AK3>	FRT SEAT & SHOULDER BELT W/RETRACTOR
<A83>	VINYL SEAT
<BJR>	BRAKE ADJUSTER MANUAL
<BS3>	INSULATION ACOUSTICAL PKG DELETE
(B00)	INDONESIA EQUIPMENT
<B1S>	PARKING BRAKE DRUM 8.5"
<C13>	INTERMITTENT WIPER
<C4Z>	P46 PROP SHAFT
<DNB>	MIRROR - O/SIDE RR VIEW, PILLAR MOUNTED
<D37>	MIRROR O/S RR VIEW
<D94>	TOUCH UP PAINT
<JDP>	COMPARTMENT - I/P ASSIST SIDE WITHOUT LID
(J55)	BRAKE SYSTEM HEAVY DUTY
(K89)	GENERATOR 24V50A
<NT2>	EURO2 SPECIFICATION
<NO5>	FUEL TANK CAP KEY LOCK
<N20>	FUEL TANK 200L FRAME SIDE
<PS7>	AIR DRYER
(P10)	SPARE WHEEL CARRIER FRAME REAR
<P38>	TIRE DELETE
<Q5T>	TURBO - CONVENTIONAL
(RDV)	4HK1-TCC ENG
<RR9>	MIRROR O/S UNDER VIEW
(RSA)	MZZ6W M/T
<RWA>	KD PACKAGE STD BREAKDOWN
<RW8>	KD BREAKDOWN INDONESIA
<RZV>	KD CAB BREAKDOWN
<R32>	KD FRAME
(R46)	SPARE TIRE & DISC WHEEL RR TIRE ONE
<SAQ>	MULTI LEAF SUSPENSION FRT
(SAS)	MULTI LEAF SUSP RR
(SAY)	STANDARD CAB
<SAZ>	VENTILATOR & DEFROSTER WO/HEATER
<SDK>	CAB SUSPENSION SEMI FLOATING
<SGA>	FRONT UNDER SPOILER DELETE
(SC7)	WHEEL 6STUD 6.00GSX16 135-9
(SH5)	TRANSMISSION SIDE PTO WO/LEVER
<SV6>	PTO CONTROL
<TAZ>	RIGID SEAT WO/ARM REST
<TEC>	LAMPS TWO ROOF MARKER
<TM1>	BATTERY 80D26L
<TT5>	HALOGEN HEADLAMPS
<T64>	BATTERY DELETE
<UT3>	RADIO AM/FM STEREO CD
<U18>	KILOMETER SPEEDOMETER
<U69>	RADIO AM/FM
<U95>	2-SPEAKER SYSTEM BASE
<V76>	TOW HOOK
(WF6)	14" CLUTCH
(W1H)	FINAL GEAR 39/7 14.5"
(W4F)	FINAL GEAR 41/8 14.5"
<W71>	CAB SUSPENSION RIGID
<X9C>	MANUAL TRANSMISSION
<Y21>	LIGHT DUTY PACKAGE TRUCK
(Z05)	BRAKE SYSTEM AIR OVER HYDRAULIC DUAL CIRCUIT
<155>	INTERIOR COLOR CHARCOAL GRAY
<35D>	INDONESIA KD DELETION
(53W)	WHEEL BASE 5300MM
<6HF>	KD PREPARATORY PACK
<6WX>	FLOOR COVER
<7BC>	SEAT ASM - WITH CENTER SEAT
<7DN>	TUNER BAND ASIA
(729)	BODY COLOR ARC WHITE

(CONTINUED)

https://truckmanualshub.com/

OPTION CODE	OPTION DESCRIPTION
(78N)	TIRE 8.25R16−128/126L
<8AC>	GOOD QUALITY ETHYLENE GLYCOL ANTIFREEZE 30%
<8C8>	TOW HOOK DELETE
<8EJ>	BATTERY 65D23L
(8GJ)	TRANSMISSION CONTROL−SMOOTHER DELETE
<8NG>	DECAL VEHICLE NAME/PET NAME
<8NH>	DECAL PET NAME

OPTION CODE	OPTION DESCRIPTION

https://truckmanualshub.com/

5-2 Option Code List [Option Description Order]

The option description is arranged in alphabetical sequence. The option code with ( ) is listed on the ID Plate.

OPTION CODE	OPTION DESCRIPTION
<PS7>	AIR DRYER
<8EJ>	BATTERY 65D23L
<TM1>	BATTERY 80D26L
<T64>	BATTERY DELETE
(729)	BODY COLOR ARC WHITE
<BJR>	BRAKE ADJUSTER MANUAL
(Z05)	BRAKE SYSTEM AIR OVER HYDRAULIC DUAL CIRCUIT
(J55)	BRAKE SYSTEM HEAVY DUTY
<W71>	CAB SUSPENSION RIGID
<SDK>	CAB SUSPENSION SEMI FLOATING
<JDP>	COMPARTMENT - I/P ASSIST SIDE WITHOUT LID
<8NH>	DECAL PET NAME
<8NG>	DECAL VEHICLE NAME/PET NAME
<NT2>	EURO2 SPECIFICATION
(W1H)	FINAL GEAR 39/7 14.5"
(W4F)	FINAL GEAR 41/8 14.5"
<6WX>	FLOOR COVER
<SGA>	FRONT UNDER SPOILER DELETE
<AK3>	FRT SEAT & SHOULDER BELT W/RETRACTOR
<N20>	FUEL TANK 200L FRAME SIDE
<N05>	FUEL TANK CAP KEY LOCK
(K89)	GENERATOR 24V50A
<8AC>	GOOD QUALITY ETHYLENE GLYCOL ANTIFREEZE 30%
<TT5>	HALOGEN HEADLAMPS
(B00)	INDONESIA EQUIPMENT
<35D>	INDONESIA KD DELETION
<BS3>	INSULATION ACOUSTICAL PKG DELETE
<155>	INTERIOR COLOR CHARCOAL GRAY
<C13>	INTERMITTENT WIPER
<RW8>	KD BREAKDOWN INDONESIA
<RZV>	KD CAB BREAKDOWN
<R32>	KD FRAME
<RWA>	KD PACKAGE STD BREAKDOWN
<6HF>	KD PREPARATORY PACK
<U18>	KILOMETER SPEEDOMETER
<TEC>	LAMPS TWO ROOF MARKER
<Y21>	LIGHT DUTY PACKAGE TRUCK
<X9C>	MANUAL TRANSMISSION
<DNB>	MIRROR - O/SIDE RR VIEW, PILLAR MOUNTED
<D37>	MIRROR O/S RR VIEW
<RR9>	MIRROR O/S UNDER VIEW
(SAS)	MULTI LEAF SUSP RR
<SAQ>	MULTI LEAF SUSPENSION FRT
(RSA)	MZZ6W M/T
<C4Z>	P46 PROP SHAFT
<B1S>	PARKING BRAKE DRUM 8.5"
<SV6>	PTO CONTROL
<U69>	RADIO AM/FM
<UT3>	RADIO AM/FM STEREO CD
<TAZ>	RIGID SEAT WO/ARM REST
<7BC>	SEAT ASM - WITH CENTER SEAT
(R46)	SPARE TIRE & DISC WHEEL RR TIRE ONE
(P10)	SPARE WHEEL CARRIER FRAME REAR
(SAY)	STANDARD CAB
(78N)	TIRE 8.25R16-128/126L
<P38>	TIRE DELETE
<D94>	TOUCH UP PAINT
<V76>	TOW HOOK
<8C8>	TOW HOOK DELETE
(8GJ)	TRANSMISSION CONTROL-SMOOTHER DELETE

(CONTINUED)

https://truckmanualshub.com/


OPTION CODE	OPTION DESCRIPTION
(SH5)	TRANSMISSION SIDE PTO WO/LEVER
<7DN>	TUNER BAND ASIA
<Q5T>	TURBO - CONVENTIONAL
<SAZ>	VENTILATOR & DEFROSTER WO/HEATER
<A83>	VINYL SEAT
(SG7)	WHEEL 6STUD 6.00GSX16 135-9
(53W)	WHEEL BASE 5300MM
(WF6)	14" CLUTCH
<U95>	2-SPEAKER SYSTEM BASE
(RDV)	4HK1-TCC ENG

OPTION CODE	OPTION DESCRIPTION

https://truckmanualshub.com/

6 How to refer to Parts Catalog

1. How to interpret the Illustration

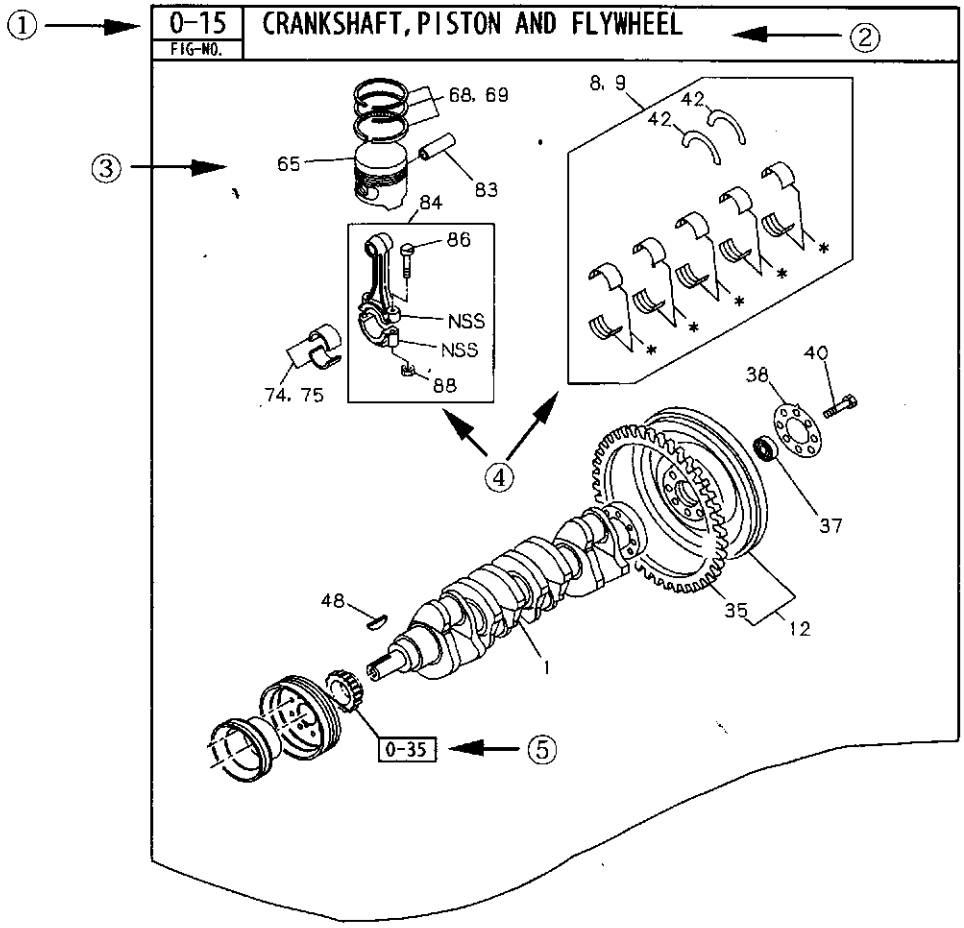

①FIG NO.

A 3-digit (X-XX) Figure Number has been assigned to every section/illustration of the catalog.

The first digit of the Figure Number identifies the primary catalog section.

And the second and third digits identify the subsections.

EXAMPLE: 0-15 = Engine (0); Crankshaft, Piston and Flywheel (15).

If the chapter contains more than one section, each section is identified with an alphabetical character.

EXAMPLE: 0-15A, 0-15B, 0-15C, etc.

②ILLUSTRATION TITLE

The first line of the title contains a generic name(s) for the item(s) illustrated.

The second line of the title identifies the specific application; i.e. engine model type of transmission, etc.

③KEY NO.

The Key Number connects the illustrated part to the appropriate text. Items identified with a "NSS"(Not Serviced Separately) are not available individually, however, they may be available as part of an assembly.

https://truckmanualshub.com/

④ ASSEMBLIES, KITS, SETS AND THEIR COMPONENTS

Assemblies, Kits and/or Sets are shown within a frame/box. Also shown within the frame/box are any components included in the assembly, Kit or Set.

EXAMPLE: Key No. 84 includes Key nos. 86,88 and the connecting Rod and Cap which are not supplied individually.

EXAMPLE: Key No. 8,9 includes Key no. 42 and those items identified with an asterisk(*). Items identified with an asterisk may only be available in an assembly, Kit or Set.


⑤ SEE FIG NO.

Items shown as a point of reference are not identified with a Key Number. These items are shown because of the way they fit within the illustration. They are described in more detail in another section of the Catalog. The applicable catalog section is shown next to the illustration.


2. How to interpret the Text

There are two different styles of text. One is used to identify general parts and the other identifies the components of a particular assembly.

(General Parts)

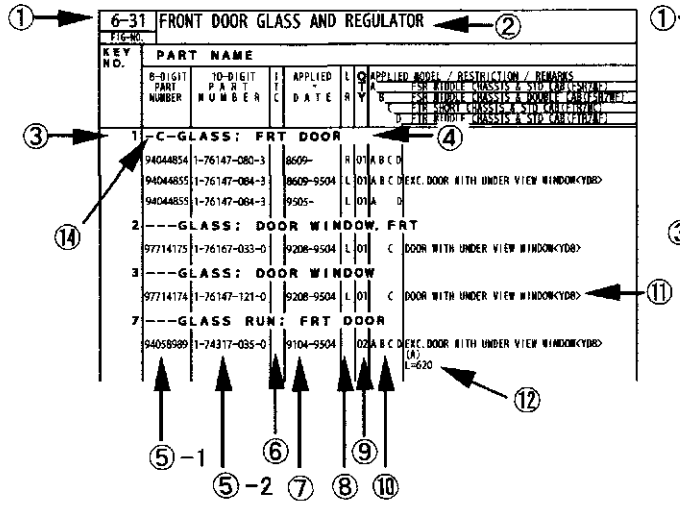

(Component parts for a particular ASM)

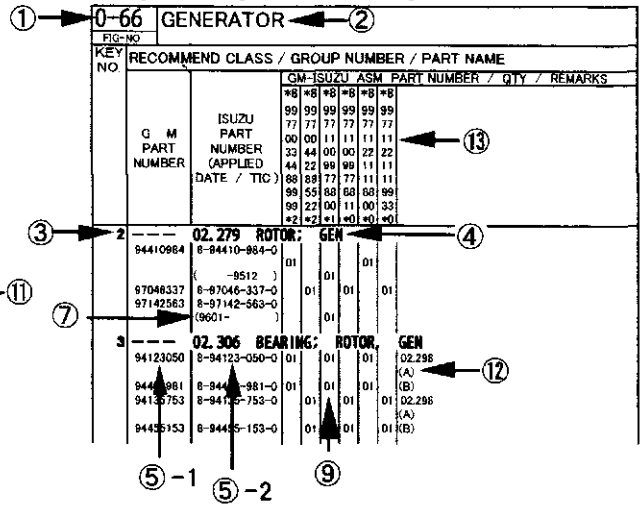

< List of the particular assembly >

DESCRIPTION	COMPONENTS	ASSEMBLY PART		DESCRIPTION	COMPONENTS	ASSEMBLY PART	
	FIG NO.	FIG NO.	KEY NO.		FIG NO.	FIG NO.	KEY NO.
TURBOCHARGER	0-37	0-36	1	FEED PUMP	0-84	0-40	1
STARTER	0-65	0-60	1	AUTO TIMER	0-85	0-40	1
GENERATOR	0-66	0-60	2	AIR CONTROL TRANSMISSION(A.C.T.)	2-31	2-38	1
CARBURETOR	0-70	0-42	2	HYDROMASTER	3-32	3-21	7
DISTRIBUTOR	0-71	0-60	3	AIRMASTER	3-33	3-20	81
INJECTION PUMP	0-80	0-40	1	STEERING UNIT	4-40	4-31	1
GOVERNOR	0-81	0-40	1	POWER STEERING OIL PUMP	4-42	4-36	1
BOOST COMPENSATOR	0-82	0-40	1	FRONT LEAF SPRING	4-55	4-50	2
ANEROID COMPENSATOR	0-83	0-40	1	REAR LEAF SPRING	4-65	4-60	1

https://truckmanualshub.com/

①FIG NO.

Already explained on a previous page.

②TITLE

Already explained on a previous page.

③KEY NO.

The combination of the Figure Number and Key Number identifies a particular part. For example, Figure Number 0-10 and Key Number 1 combines to identify "COVER; HEAD". This combination of the Figure Number and Key Number (i.e. 0-10-1) will be used to identify the "COVER; HEAD" in all parts catalogs; automotive and commercial.
If a particular item is not used on a vehicle, the Key Number used to identify that item will be omitted from the applicable catalog section. For example; if the "COVER;HEAD" is not used on the Pickup,Key Number 1 will be omitted from Section 0-10. Key Numbers, therefore, may not be listed consecutively.

④DESCRIPTION

The actual description of the part is listed first then the location of the part.
EXAMPLE: COVER ; CYLINDER HEAD
NAME LOCATION

⑤PART NUMBER

5-1 GM Part Number; The 8-digit numeric number assigned to each part.
5-2 ISUZU Part Number; The 10-digit numeric number assigned to each part.

⑥INTERCHANGEABILITY

Superseding part numbers are listed directly below the old part number.
An alphabetical character; i.e. "A" or "C", is used to indicate the type of interchangeability that exists between the old and new part number. If an alphabetical character is not shown then these part numbers are not interchangeable.

EXAMPLE:

	Part No.	ITC	
(Old)	••-001-0	C	[001-0 is replaced by 002-0 with the
(New)	••-002-0		interchangeability of "C"]

"A" = Totally interchangeable. Either part number may be used.
"C" = The new part number will replace the old part number, however, the old part number will not replace the new part number.

⑦APPLICABLE RERIOD

Indicated by the year and month (i.e. 9202 = February 1992).

⑧SIDE

Indicates whether the item is installed on the left or right side of the vehicle as viewed from the rear of the vehicle. As to the engine portion, the side indicates as viewed from Flywheel.

⑨QUANTITY

The quantity of the part per that particular application for one vehicle is indicated. As to the component of a particular Assembly, the quantity per one assembly is indicated. In those cases where the required quantity is unknown (i.e. shims), "AR" (Asrequired) will be indicated.

https://truckmanualshub.com/

⑩ APPLICABLE MODEL

The vehicle model to which the item is applicable, including the type of equipment (I.e.engine,transmission,etc.), grade and option codes, will be indicated.
The Model Designator and Option Codes listed on the Service ID Plate will be shown in Parentheses "( )". Option Codes not listed on the Service ID Plate will be shown in "< >".

⑪ RESTRICTIONS

Additional information required to verify the vehicle application. Option Codes listed on the Service ID Plate will be shown in parentheses "( )". Option Codes not listed on the Service ID Plate will be shown in "< >". Typical verbiage will be :"EXC.XXX" indicating that the item is applicable to models without "XXX".

⑫ REMARKS

Any additional information pertaining to the characteristics of the item; i.e. size, shape,color, etc. will be listed in the Remarks Column. Also, when two or more items are identified by the same Key Number, an alphabetical character (i.e. "A", "B", "C" etc.) will be used to identify the part number to the applicable illustration.
The alphabetical character will be shown next to the part number and in the illustration.

⑬ ASSEMBLY [ASM] PART NUMBER

Assembly part number will be indicated.

⑭ RECOMMENDATION CLASS

Refer to Recommendation Class.

https://truckmanualshub.com/

7 Abbreviation List

ABBREVIATIONS	DEFINITION	ABBREVIATIONS	DEFINITION
A	AMPERE	CHMBR	CHAMBER
ABV	AIR BY PASS VALVE	CHRG	CHARGE
A/C	AIR CONDITIONER	CIRC	CIRCUIT
ACCEL	ACCELERATOR	CLA	CLAMP
ACL	AIR CLEANER	CLNR	CLEANER
ADJ	ADJUSTER	CLPR	CALIPER
ADAP	ADAPTER	CLR	COOLER OR COLOR
AL	ALUMINUM	CLU	CLUTCH
AM	AMPLITUDE MODULATION	CLV	CLEVIS
AMV	AIR MANAGEMENT VALVE	C/MBR	CROSS MEMBER
ANT	ANTENNA	CMPR	COMPRESSOR
A/OUT	AIR OUTLET	CM/SHF	CAMSHAFT
A/P	AIR PUMP	CNDSR	CONDENSER
A/R	AS REQUIRED	COMB	COMBINATION
ASAHI	ASAHI GLASS CO.	COMPL	COMPLETE
ASM	ASSEMBLY	COMPT	COMPARTMENT
ASST	ASSIST	CONN	CONNECTING
ASV	AIR SWITCHING VALVE	CONT	CONTROL
A/SUSP	AIR SUSPENSION	CONV	CONVERTER
A/T	AUTOMATIC TRANSMISSION	CPLG	COUPLING
ATF	AUTOMATIC TRANSMISSION FLUID	CRK	CRANK
		CTR	CENTER
AUTO	AUTOMATIC	CVR	COVER
B=	BREADTH	CYL	CYLINDER
BAL	BALANCE	C#	CHASSIS NUMBER
BAT	BATTERY	D=	DIAMETER
B/D	BACK DOOR	DBL	DOUBLE
B/JNT	BALL JOINT	DC	DIRECT CURRENT
BJ	BIRFIELD JOINT	DENSO	DENSO CO.
BPR	BUMPER	DEFR	DEFROSTER
BPT	BACK PRESSURE TRANSDUCER	DEV	DEVICE
		DFL	DEFLECTOR
BRG	BEARING	DIA	DIAMETER
BRK	BRAKE	DIAPH	DIAPHRAGM
BRKT	BRACKET	DIFF	DIFFERENTIAL
BTM	BOTTOM	DISTR	DISTRIBUTOR
B/U	BACK UP	DLX	DELUXE
BUSH	BUSHING	DMP	DAMPER
BUT	BUTTON	DOHC	DOUBLE OVER HEAD CAMSHAFT
B/W	BACK WINDOW		
BYP	BY-PASS	DRM	DATA RECORDING MODULE
CAC	CHARGE AIR COOLER	DPD	DIESEL PARTICULATE DEFUSER
CARB	CARBURETOR		
CBL	CABLE	D/SEAT	DRIVER'S SEAT
C/BL	CYLINDER BLOCK	DSL	DIESEL
C/CASE	CRANK CASE	DSPV	DECELERATION SENSING PROPORTIONING VALVE
CHAS	CHASSIS		
CHK	CHECK	DWL	DOWEL

https://truckmanualshub.com/

ABBREVIATIONS	DEFINITION		ABBREVIATIONS	DEFINITION
EBS	ELECTRONIC BRAKE SYSTEM		FT	FOOT
ECGI	ELECTRONICALLY		FWD	FORWARD
	CONTROLLED GASOLINE		G	GRAM
	INJECTION		GAS	GASOLINE
ECM	ELECTRONIC		GEN	GENERATOR
	CONTROL MODULE		GLS	GLASS
ECU	ELECTRICAL CONTROL		GOV	GOVERNOR
	UNIT		G/RATIO	GEAR RATIO
EDS	EASY DRIVE SYSTEM		G/S	GEAR SHIFTER
EFC	ELECTRONIC FUEL		GSKT	GASKET
	CONTROL		H=	HIGH
EFE	EARLY FUEL EVAPORATION		HARN	HARNESS
EGR	EXHAUST GAS		H/B	HATCH BACK
	RECIRCULATION		HD	HEAD
ELEC	ELECTRIC		HDL	HANDLE
ELEM	ELEMENT		HEL	HELICAL
ELR	EMERGENCY LOCKING		HEX	HEXAGON
	RETRACTOR		HITACHI	HITACHI CO.
ENG	ENGINE		HNGR	HANGER
EMIS	EMISSION		HP	HORSE POWER
ESC	ELECTRONIC SPARK		HSG	HOUSING
	CONTROL		HT	HEAT
ETR	ELECTRONIC TUNING		HTR	HEATER
	RADIO		HVY	HEAVY
EVAP	EVAPORATOR		HYD	HYDRAULIC
EX	EXTEND		HYBST	HYDROBOOST
EXC.	EXCEPT		HYP	HYPOID
EXH	EXHAUST		ID=	INSIDE DIAMETER
E#	ENGINE NUMBER		IGN	IGNITION
EXP	EXPORT		INCL	INCLUDING
EXT	EXTENSION		INJ	INJECTION
F/AXL	FRONT AXLE		INL	INLET
F/D	FRONT DOOR		INR	INNER
FDR	FENDER		INST	INSTRUMENT
FIG NO.	FIGURE NUMBER		INT	INTAKE
FIL	FILLER		I/S	INSIDE
F/INJ	FUEL INJECTION		ISC	IDLE SPEED CONTROL
FLEX	FLEXIBLE		JBK	JIDOUSHA BUHIN
FLG	FLANGE			KOGYO CO.
FLR	FLOOR		JT	JOINT
FLTR	FILTER		KG	KILOGRAM
FLYWHL	FLYWHEEL		KM/H	KILOMETER PER HOUR
FM	FREQUENCY MODULATION		KOYO	KOYO SEIKO CO.
F/PMP	FUEL PUMP		KW	KILOWATT
FPC	FUEL TANK PRESSURE		L	LITER
	CONTROL		L=	LENGTH
FRT	FRONT		LH	LEFT HAND
F/TNK	FUEL TANK		LHD	LEFT HAND DRIVE

https://truckmanualshub.com/

ABBREVIATIONS	DEFINITION		ABBREVIATIONS	DEFINITION
LK	LOCK		O/S	OUTSIDE
LSPV	LOAD SENSING PROPORTIONING VALVE		OTLT	OUTLET
			OTR	OUTER
LVL	LEVEL		OVSI	OVER SIZE
LVR	LEVER		P	PITCH
LWR	LOWER		PARL	PARALLEL
MAG	MAGNET		PASS	PASSENGER
MAN	MANUAL		P/B	POWER BRAKE
MANIF	MANIFOLD		PCM	POWER TRAIN CONTROL MODULE
MAX	MAXIMUM			
MBR	MEMBER		PCV	POSITIVE CRANK CASE VENTILATION
MCV	MIXTURE CONTROL VALVE			
M/CYL	MASTER CYLINDER		PL	PLAIN
MIN	MINIMUM		PLR	PILLAR
MITSUBA	MITSUBA DENKI SEISAKUSHO CO.		PLT	PLATE
			PPG	PIPING
MIR	MIRROR		PRE-CHAMBER	PRECOMBUSTION CHAMBER
MLDG	MOLDING			
MOD	MODULATOR		PRESS	PRESSURE
MTG	MOUNTING		PRIM	PRIMARY
M/T	MANUAL. TRANSMISSION		PROP	PROPELLER
MTR	METER OR MOTOR		P/S	POWER STEERING
M/VAC	MASTER VAC		P/SEAT	PASSENGER SEAT
MM	MILLIMETER		PTO	POWER TAKE OFF
NACHI	FUJIKOSHI CO.		P/W	POWER WINDOW
NAVI	NEW ADVANCED VEHICLE WITH INTELLIGENCE		PWI	PAD WEAR INDICATOR
			PWR	POWER
N/B	NOTCH BACK		QTR	QUARTER
NEU	NEUTRAL		QOS	QUICK ON SYSTEM
NGK	NIHON TOKUSHU TOGYOU CO.		QRV	QUICK RELAY VALVE
			QTY	QUANTITY
NHK	NIHON HATSUJYOU CO.		QUAD	QUADRANT
NIKKO	NIKKO DENKI CO.		RAD	RADIATOR
NO.	NUMBER		R/AXL	REAR AXLE
NOK	NOK CO.		R/D	REAR DOOR
NOS	NIHON OIL SEAL CO.		RECL	RECLINING
NPN	NOT PART NUMBER		REG	REGULATOR
NPR	NIPPON PISTON RING CO.		REINF	REINFORCEMENT
NSG	NIPPON SHEET GLASS CO.		RET	RETAINER
NSK	NIHON SEIKO CO.		REV	REVERSE
NSS	NOT SERVICED SEPARATELY		RH	RIGHT HAND
			RHD	RIGHT HAND DRIVE
NTN	TOYO BEARING CO.		RLD	RLD GOVERNOR
NY	NYLON		RLY	RELAY
OD=	OUTSIDE DIAMETER		RFD	RFD GOVERNOR
O/D	OVER DRIVE		RR	REAR
O/PMP	OIL PUMP		R/SEAT	REAR SEAT
OPT	OPTION		RTN	RETURN

https://truckmanualshub.com/

ABBREVIATIONS	DEFINITION		ABBREVIATIONS	DEFINITION
RUB	RUBBER		UND	UNDER
RWD	REARWARD OR RWD		UNIV	UNIVERSAL
	GOVERNOR		UNSI	UNDER SIZE
S/ABS	SHOCK ABSORBER		UPR	UPPER
SDV	SPARK DELAY VALVE		V	VOLT
SEN	SENSOR		VAC	VACUUM
SGL	SINGLE		VCV	VACUUM CONTROL VALVE
SHF	SHAFT		VEH	VEHICLE
S/LONG	SUPER LONG		VENT	VENTILATOR
S/MBR	SIDE MEMBER		VERT	VERTICAL
SOHC	SINGLE OVER HEAD		VLV	VALVE
	CAMSHAFT		VSV	VACUUM SWITCHING
SP	SUPER			VALVE
SPD	SPEED		W	WATT
SPR	SPRING		W/	WITH
SSPS	SPEED SENSING POWER		WB	WHEEL BASE
	STEERING		WHL	WHEEL
ST	SEAT		WO/	WITHOUT
STAB	STABILIZER		W/PUMP	WATER PUMP
STD	STANDARD		Z=	TEETH
STRG	STEERING		ZN	ZINC
SUSP	SUSPENSION		&	AND
SW	SWITCH		"	INCH
SYN	SYNCHRONIZER		#	NUMBER
T=	THICKNESS		1ST	FIRST
TAP	TAPPING		2ND	SECOND
T/AXLE	TRANSAXLE		3RD	THIRD
TB	THROTTLE BODY		4TH	FOURTH
TBI	THROTTLE BODY FUEL		5TH	FIFTH
	INJECTION		6TH	SIXTH
TC	TURBOCHARGER		7TH	SEVENTH
TCC	TORQUE CONVERTER		8TH	EIGHTH
	CONTROL		9TH	NINTH
TCS	TURBOCHARGER		2/W	2 WAY
	CONTROL SYSTEM		3/W	3 WAY
T/CV	TORQUE CONVERTER		4/W	4 WAY
TDC	TOP DEAD CENTER		5/W	5 WAY
TKK	TOKUSYU KOUSAKU CO.			
TICS	TIMING INJECTION			
	CONTROL SYSTEM			
TEMP	TEMPERATURE			
THERM	THERMOSTAT			
TK	TANK			
TORQ	TORQUE			
TRANS	TRANSMISSION			
TRFER	TRANSFER			
TSK	NIHON CABLE SYSTEM CO.			
TVV	THERMAL VACUUM VALVE			

https://truckmanualshub.com/

8 Recommendation Class

① The pattern of movement and replacement of spare parts are different by items.
② Isuzu has classified 4 replacement categories of parts (so called Recommendation Class) so that customers can use them as a guideline for the preparation of initial parts orders.
③ Recommendation classes are indicated in the next column of part group.

Recommendation Class Table

Recommendation Class	Category
A	Periodically replaced parts & Fast moving parts
B	Periodical inspection parts (based on vehicle maintenance schedule)
C	Collision parts (Body parts such as Panel, Grille, Bumper)
D	Slow moving parts

Catalog

FAN AND FAN BELT — 0-33 (FIG-NO.)

KEY NO.	PART NUMBER	I T C	APPLIED DATE	L R	Q T Y	APPLIED MODEL / RESTRICTION / REMARKS
						A 6HE1-STD (46L) B 6HE1-N (47L)
1	**- D - FAN ; COOLING**					
	5-13662-012-1		9202-		01	A B
7	**- - - COUPLING ; FAN**					
	8-94396-674-0		9202-		01	A B — PARTIAL OIL FILTER CARTRIDGE<KC2>
	8-94393-574-1		9202-		01	A — EXC. PARTIAL OIL FILTER CARTRIDGE<KC2>
13	**- - - NUT ; COOLING FAN**					
	0-91150-106-0		9202-		04	A B — M6 FLANGE NUT
29	**- - - BOLT ; COUPLING TO WATER PUMP**					
	8-94399-451-1		9202-		04	A B
36	**- A - BELT ; COOLING FAN**					
	1-13671-344-0		9202-		01	A — AUTOMATIC TRANSMISSION<X9D> 2PIECES SET
	1-13671-328-0		9202-		01	A — ISUZU M/T<X9A> 14 INCH CLUTCH(WF6) L=1186 2PIECES SET


Recommendation Class

https://truckmanualshub.com/

9 List of pipes being supplied by bulk

This list shows straight pipes with Flares and Nuts on both ends of brake and air pipes. These straight pipes are improved in material and surface treatment.
When you use below straight pipes instead of original pipes,the portions of pipe where clips are fitted to should be taped in oder to keep clipping tightly,since below straight pipes are 1 mm smaller in outer diameter than original pipes.

Dimension of straight pipe

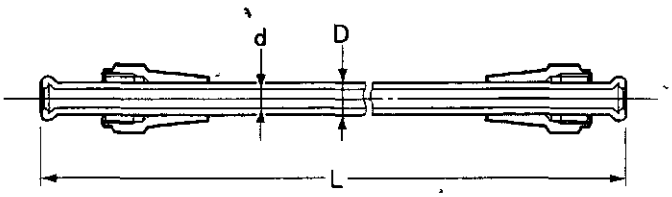

d =Inner dia
D =Outer dia
L =Length

Double coiled			
Inner dia × Outer dia φ4.95× φ6.35 Pipe length(mm)	Straight pipe part number		
	Zinc plated outer side=1 3 μ inner side=3 μ	Zinc plated outer side=2 5 μ inner side=3 μ	Brand name "super bandy" (Coated)
250	1-47426-339-0	1-47428-719-0	—
300	1-47426-340-0	1-47428-720-0	—
350	1-47426-341-0	1-47428-721-0	1-47413-545-0
460	1-47426-342-0	1-47428-722-0	1-47413-546-0
500	1-47426-343-0	1-47428-723-0	1-47413-547-0
550	1-47426-344-0	1-47428-724-0	1-47413-548-0
600	1-47426-345-0	1-47428-725-0	1-47413-549-0
650	1-47426-346-0	1-47428-726-0	1-47413-550-0
700	1-47426-347-0	1-47428-727-0	1-47413-551-0
800	1-47426-348-0	1-47428-728-0	1-47413-552-0
900	1-47426-349-0	1-47428-729-0	1-47413-553-0
1000	1-47426-350-0	1-47428-730-0	1-47413-554-0
1100	1-47426-351-0	1-47428-731-0	1-47413-555-0
1200	1-47426-352-0	1-47428-732-0	1-47413-556-0
1250	1-47426-353-0	1-47428-733-0	1-47413-557-0
1370	1-47426-354-0	1-47428-734-0	1-47413-558-0
1500	1-47426-355-0	1-47428-735-0	1-47413-559-0
1620	1-47426-356-0	1-47428-736-0	1-47413-560-0
1700	1-47426-357-0	1-47428-737-0	1-47413-561-0
1820	1-47426-358-0	1-47428-738-0	1-47413-562-0
2000	1-47426-359-0	1-47428-739-0	1-47413-563-0
2200	1-47426-360-0	1-47428-740-0	1-47413-564-0
2350	1-47426-361-0	1-47428-741-0	1-47413-565-0
2500	1-47426-362-0	1-47428-742-0	1-47413-566-0
2650	1-47426-363-0	1-47428-743-0	1-47413-567-0
2900	1-47426-364-0	1-47428-744-0	1-47413-568-0
3200	1-47426-365-0	1-47428-745-0	1-47413-569-0
3400	1-47426-366-0	1-47428-746-0	1-47413-570-0
3700	1-47426-367-0	—	1-47413-571-0
3900	1-47426-368-0	—	1-47413-572-0
4250	1-47426-369-0	—	1-47413-573-0
4600	1-47426-370-0	—	1-47413-574-0

https://truckmanualshub.com/

Double coiled			
Inner dia × Outer dia φ6.6×φ8.0 Pipe lenght(mm)	Straight pipe part number		
	Zinc plated outer side=13μ inner side=3μ	Zinc plated outer side=25μ inner side=3μ	Brand name "super bandy" (Coated)
250	1-47426-371-0	1-47428-747-0	1-47426-460-0
300	1-47426-372-0	1-47428-748-0	1-47426-461-0
350	1-47426-373-0	1-47428-749-0	1-47426-462-0
400	1-47426-374-0	1-47428-750-0	1-47426-463-0
450	1-47426-375-0	1-47428-751-0	1-47426-464-0
500	1-47426-376-0	1-47428-752-0	1-47426-465-0
550	1-47426-377-0	1-47428-753-0	1-47426-466-0
570	1-47426-378-0	1-47428-754-0	—
600	1-47426-379-0	1-47428-755-0	1-47426-467-0
620	1-47426-380-0	1-47428-756-0	—
660	1-47426-381-0	1-47428-757-0	1-47426-469-0
730	1-47426-382-0	1-47428-758-0	1-47426-470-0
800	1-47426-383-0	1-47428-759-0	1-47426-471-0
900	1-47426-384-0	1-47428-760-0	1-47426-472-0
970	1-47426-385-0	1-47428-761-0	—
1000	1-47426-386-0	1-47428-762-0	1-47426-473-0
1100	1-47426-387-0	1-47428-763-0	1-47426-474-0
1250	1-47426-388-0	1-47428-764-0	1-47426-475-0
1400	1-47426-389-0	1-47428-765-0	1-47426-476-0
1550	1-47426-390-0	1-47428-766-0	1-47426-477-0
1700	1-47426-391-0	1-47428-767-0	1-47426-478-0
1800	1-47426-392-0	1-47428-768-0	1-47426-479-0
1950	1-47426-393-0	1-47428-769-0	1-47426-480-0
2150	1-47426-394-0	1-47428-770-0	1-47426-481-0
2400	1-47426-395-0	1-47428-771-0	1-47426-482-0
2700	1-47426-396-0	1-47428-772-0	1-47426-483-0
3000	1-47426-397-0	1-47428-773-0	1-47426-484-0
3300	1-47426-398-0	1-47428-774-0	1-47426-485-0
3500	1-47426-399-0	1-47428-775-0	1-47426-486-0
3600	1-47426-400-0	—	—

Double coiled	
Inner dia × Outer dia φ8.6×φ10.0 Pipe length(mm)	Straight pipe part number Zinc plated outer side=13μ inner side=3μ
200	1-47426-401-0
300	1-47426-402-0
350	1-47426-403-0
400	1-47426-404-0
450	1-47426-405-0
500	1-47426-406-0
550	1-47426-407-0
600	1-47426-408-0
660	1-47426-409-0
700	1-47426-410-0
730	1-47426-411-0
800	1-47426-412-0
900	1-47426-413-0
1000	1-47426-414-0

Double coiled	
Inner dia × Outer dia φ8.6×φ10.0 Pipe length(mm)	Straight pipe part number Zinc plated outer side=13μ inner side=3μ
1100	1-47426-415-0
1250	1-47426-416-0
1300	1-47426-417-0
1400	1-47426-418-0
1550	1-47426-419-0
1700	1-47426-420-0
1900	1-47426-421-0
2100	1-47426-422-0
2500	1-47426-423-0
2600	1-47426-424-0
2900	1-47426-425-0
3300	1-47426-426-0
3700	1-47426-427-0

https://truckmanualshub.com/

Single coiled	
Inner dia × Outer dia φ4.95×6.35	Straight pipe part number Zinc plated outer side=13 μ inner side=3 μ
Pipe length(mm)	
250	1-47428-803-0
300	1-47428-804-0
350	1-47428-805-0
460	1-47428-806-0
500	1-47428-807-0
550	1-47428-808-0
600	1-47428-809-0
650	1-47428-810-0
700	1-47428-811-0
800	1-47428-812-0
900	1-47428-813-0
1000	1-47428-814-0
1100	1-47428-815-0
1200	1-47428-816-0
1250	1-47428-817-0
1370	1-47428-818-0
1500	1-47428-819-0
1620	1-47428-820-0
1700	1-47428-821-0
1820	1-47428-822-0
2000	1-47428-823-0
2200	1-47428-824-0
2350	1-47428-825-0
2500	1-47428-826-0
2650	1-47428-827-0
2900	1-47428-828-0
3200	1-47428-829-0
3400	1-47428-830-0
3500	1-47428-831-0

Single coiled	
Inner dia × Outer dia φ6.6×φ8.0	Straight pipe part number Zinc plated outer side=13 μ inner side=3 μ
Pipe length(mm)	
250	1-47428-832-0
300	1-47428-833-0
350	1-47428-834-0
400	1-47428-835-0
450	1-47428-836-0
500	1-47428-837-0
550	1-47428-838-0
570	1-47428-839-0
600	1-47428-840-0
620	1-47428-841-0
660	1-47428-842-0
730	1-47428-843-0
800	1-47428-844-0
900	1-47428-845-0
970	1-47428-846-0
1000	1-47428-847-0
1100	1-47428-848-0
1250	1-47428-849-0
1400	1-47428-850-0
1550	1-47428-851-0
1700	1-47428-852-0
1800	1-47428-853-0
1950	1-47428-854-0
2150	1-47428-855-0
2400	1-47428-856-0
2700	1-47428-857-0
3000	1-47428-858-0
3300	1-47428-859-0
3500	1-47428-860-0

https://truckmanualshub.com/

Single coiled			
Inner dia × Outer dia φ8.6×φ10.0	Straight pipe part number		
	Zinc plated outer side=13 μ inner side=3 μ	Zinc plated outer side=13 μ inner side=8 μ	Zinc plated outer side=8 μ inner side=3 μ
Pipe lenght(mm)			
200	1-47428-861-0	1-47428-776-0	—
300	1-47428-862-0	1-47428-777-0	—
350	1-47428-863-0	1-47428-778-0	—
400	1-47428-864-0	1-47428-779-0	—
450	1-47428-865-0	1-47428-780-0	—
500	1-47428-866-0	1-47428-781-0	—
550	1-47428-867-0	1-47428-782-0	—
600	1-47428-868-0	1-47428-783-0	—
660	1-47428-869-0	1-47428-784-0	—
700	1-47428-870-0	1-47428-785-0	—
730	1-47428-871-0	1-47428-786-0	—
800	1-47428-872-0	1-47428-787-0	—
900	1-47428-873-0	1-47428-788-0	—
1000	1-47428-874-0	1-47428-789-0	—
1100	1-47428-875-0	1-47428-790-0	—
1250	1-47428-876-0	1-47428-791-0	—
1300	1-47428-877-0	1-47428-792-0	—
1400	1-47428-878-0	1-47428-793-0	—
1550	1-47428-879-0	1-47428-794-0	—
1700	1-47428-880-0	1-47428-795-0	—
1900	1-47428-881-0	1-47428-796-0	—
2100	1-47428-882-0	1-47428-797-0	—
2500	1-47428-883-0	1-47428-798-0	—
2600	1-47428-884-0	1-47428-799-0	—
2900	1-47428-885-0	1-47428-800-0	—
3300	1-47428-886-0	1-47428-801-0	—
3500	1-47428-887-0	—	—

https://truckmanualshub.com/

Single coiled			
Inner dia × Outer dia φ10.2× φ12.0 Pipe lenght(mm)	Straight pipe part number		
	Zinc plated outer side=13 μ inner side=3 μ	Zinc plated outer side=13 μ inner side=8 μ	Zinc plated outer side=8 μ inner side=3 μ
300	1-49115-475-0	1-49115-452-0	1-49111-433-0
400	1-49115-476-0	1-49115-453-0	1-49111-434-0
500	1-49115-477-0	1-49115-454-0	1-49111-435-0
550	1-49115-478-0	1-49115-455-0	1-49111-436-0
600	1-49115-479-0	1-49115-456-0	1-49111-437-0
660	1-49115-480-0	1-49115-457-0	1-49111-438-0
700	1-49115-481-0	1-49115-458-0	1-49111-439-0
730	1-49115-482-0	1-49115-459-0	1-49111-440-0
800	1-49115-483-0	1-49115-460-0	1-49111-441-0
900	1-49115-484-0	1-49115-461-0	1-49111-442-0
1000	1-49115-485-0	1-49115-462-0	1-49111-443-0
1100	1-49115-486-0	1-49115-463-0	1-49111-444-0
1200	1-49115-487-0	1-49115-464-0	1-49111-445-0
1300	1-49115-488-0	1-49115-465-0	1-49111-446-0
1450	1-49115-489-0	1-49115-466-0	1-49111-447-0
1600	1-49115-490-0	1-49115-467-0	1-49111-448-0
1800	1-49115-491-0	1-49115-468-0	1-49111-449-0
2000	1-49115-492-0	1-49115-469-0	1-49111-450-0
2250	1-49115-493-0	1-49115-470-0	1-49111-451-0
2500	1-49115-494-0	1-49115-471-0	1-49111-452-0
2800	1-49115-495-0	1-49115-472-0	1-49111-453-0
3250	1-49115-496-0	1-49115-473-0	1-49111-454-0
3500	1-49115-497-0	—	—
3700	—	—	1-49111-455-0

https://truckmanualshub.com/

10 Service part numbers of nylon and corrugate tube for air pipe

Nylon Tube : Shown as 1－8 7 4 1 0－○○○－○ For φ4, φ10,
Shown as 1－8 7 4 1 1－○○○－○ For φ6, φ8, φ12

Length / Outer Diameter	2m	4m	6m	8m	12m	REMARK
φ4	-077-0	-078-0	-079-0	-080-0	—	(DIN TYPE)
φ6	-001-0	-002-0	-003-0	-004-0	-005-0	(DIN TYPE)
φ8	-006-0	-007-0	-008-0	-009-0	-010-0	(DIN TYPE)
φ10	-482-0	-483-0	-484-0	-485-0	—	(DIN TYPE)
φ12	-011-0	-012-0	-013-0	-014-0	-015-0	(DIN TYPE)

Corrugate Tube : Shown as 1－8 7 4 1 1－○○○－○

Length / Inner Diameter	2m	4m	6m	8m	10m	REMARK
φ7	-016-0	-017-0	-018-0	-222-0	—	
φ10	-019-0	-020-0	-021-0	-223-0	—	
φ13	-022-0	-023-0	-024-0	-224-0	—	
φ15	-025-0	-026-0	-037-0	-220-0	—	
φ19	-027-0	-028-0	-303-0	-304-0	—	
φ22	-029-0	-030-0	—	—	—	
φ25	-031-0	-032-0	—	—	—	
φ28	-033-0	-034-0	—	—	—	
φ32	-035-0	-036-0	—	—	-302-0	

https://truckmanualshub.com/

ALPHABETICAL

INDEX

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
ABSORBER ASM: SHOCK, FRT	4-50	062	375
ADAPTER	0-20	026	39
	1-31	480	149
ADAPTER ASM	0-57	005	101
ADAPTER; EXH PIPE	0-36	016	68
ADJUSTER ASM: RECLINING	7-50	016	533
ADJUSTER ASM: SEAT SLIDE	7-50	542	536
AIR MASTER ASM: BRK	3-20	081	271
ALIGNER: CLU PILOT	9-01	167	642
ALIGNER; CLU RELEASE LEVER	9-01	166	642
ANTENNA	8-90	080	634
ARM: CRANK, WIPER MOTOR	8-80	047	629
ARM: GEAR SHIFT, TRANS SIDE PTO	2-81	018	239
ARM: KNUCKLE	4-10	036	330
ARM; PITMAN, STRG	4-33	001	353
ARM: ROCKER	0-14	078	29
ARM: SHIFT, 1ST & REV	2-30	001	224
ARM: SHIFT, 2ND & 3RD	2-30	025	224
ARM: SHIFT, 4TH & 5TH	2-30	049	224
ARM; SHIFT, 6TH	2-30	050	224
ARM: TIE ROD	4-10	058	330
ARM: WIPER	8-80	005	628
ARMATURE: STARTER	0-65	016	115
ATTACHMENT: CONNECTOR	8-10	720	570
ATTACHMENT; GREASE NIPPLE	4-50	205	377
	4-60	193	383
ATTACHMENT: OUTSIDE MIRROR	7-20	042	498
AXLE: FRT	4-10	001	327
BACK ASM: PASSENGER CENTER SEA	7-50	175	534
BACK ASM; SEAT	7-50	001	533
	7-50	113	534
BAG: TOOL	9-01	237	642
BALL: RELIEF VLV	0-51	044	97
BALL: SYNCHRO, INDEX	2-26	517	220
BAND; CLIP	8-26	766	598
BAND: OIL TANK, AIR MASTER	3-20	151	272
BAR ASM: DOOR GLASS GUARD	6-31	221	449
BAR: EXTENSION, SOCKET WRENCH	9-01	043	641
BAR: TORSION, UPR	5-15	012	407
BARREL ASM; W/KEY, STRG LOCK	7-30	002	504
BASE: DOOR, SIDE TURN	6-05	664	435
BEARING ASM: CTR, PROP SHAFT	4-01	020	323
BEARING: ARMATURE, STARTER	0-65	017	115
BEARING: BALL, OIL PUMP	4-42	015	371
BEARING; CENTER, PROP SHAFT	4-01	023	323
BEARING: CLU RELEASE	2-01	118	185
BEARING: COUNTER SHAFT, FRT & R	2-26	507	220
BEARING: DIFF CAGE	4-25	070	344
BEARING: FINAL PINION	4-25	039	342
	4-25	050	343
BEARING: GEAR SHAFT STARTER	0-65	009	115
BEARING: HSG STRG UNIT	4-40	058	368
BEARING: HUB INNER, FRT AXLE	4-11	019	333
BEARING: HUB INNER, RR AXLE	4-20	037	338
BEARING; HUB OUTER, FRT AXLE	4-11	013	333
BEARING: HUB OUTER, RR AXLE	4-20	015	337
BEARING: IDLE GEAR, TRANS SIDE	2-81	011	239
BEARING: MAINSHAFT END	2-26	393	219
BEARING: NEEDLE	2-01	290	187
	2-20	586	211
BEARING: NEEDLE, KING PIN	4-10	008	327
BEARING: NEEDLE, MAINSHAFT	2-26	396	219
BEARING: NEEDLE, REV GEAR	2-26	314	218
BEARING: NEEDLE, 4TH	2-26	432	219
BEARING; NEEDLE, 6TH, COUNTER	2-26	115	217
BEARING; OUTPUT SHAFT, TRANS SI	2-81	008	239
BEARING: PILOT	0-15	049	34
BEARING: PINION PILOT	4-25	063	344
BEARING: ROTOR, GEN	0-66	003	119
BEARING; THRUST, KING PIN	4-10	025	328
BEARING: TOP GEAR SHAFT	2-26	003	216
BELT: CENTER SEAT, BUCKLE SIDE	7-60	005	539
BELT: CENTER SEAT, TONGUE SIDE	7-60	006	539
BELT: COOLING FAN	0-33	036	63
BELT; PASSENGER SEAT, TONGUE SI	7-60	170	539
BELT: SEAT, BUCKLE SIDE	7-60	003	539
BELT: SEAT, TONGUE SIDE	7-60	002	539
BELT: SUPPORT, FUEL TANK	1-40	040	153
BEZEL: INSIDE LEVER, FRT DOOR	6-32	028	452
BLADE; WIPER	8-80	007	628
BLOCK ASM: CYL	0-12	001	18
BLOCK: INDEX, SYN	2-26	024	216
BLOCK: SHIFT, LOW, REV & 6TH	2-30	628	227
BLOCK: TERMINAL	0-61	225	112
BLOWER ASM	8-73	001	624
BODY ASM: FRT, OIL PUMP	4-42	009	371
BODY ASM: RR, OIL PUMP	4-42	010	371
BODY: OIL FILTER	0-50	265	93
BODY: UPR, VLV, CLU BOOSTER	2-07	037	199
BODY; VALVE	3-46	068	287
BOLT	1-01	065	130
	3-05	200	253
	8-10	534	569
BOLT ASM: AIR COMP	0-39	069	80
BOLT; ADAPTER	0-36	162	70
BOLT: ADJ	0-33	086	63
BOLT: ADJUST	5-15	324	410
BOLT: AIR DUCT	1-31	048	146
BOLT: BACK TO CUSHION	7-50	188	535
BOLT; BATTERY CABLE CLIP	0-61	010	110
BOLT: BLOWER UNIT	8-40	072	610
BOLT: BODY, BRK VLV	3-34	033	282
BOLT: BRG CAP	4-25	056	343
BOLT: BRKT	1-31	155	147
	3-10	185	261
	6-30	042	445
BOLT: BRKT, AIR DUCT	1-31	061	147
BOLT: BRKT, AIR MASTER	3-33	104	279
BOLT: BRKT, FRT	7-43	344	524
BOLT; BRKT, SUB TANK	1-11	064	140

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
BOLT; BUMPER	6-01	042	419
BOLT; CAB EARTH	8-15	377	582
BOLT; CASE, AIR DRYER	3-46	081	288
BOLT; CENTER, LEAF SPR, FRT	4-55	015	379
BOLT; CENTER, LEAF SPR, RR MAIN	4-65	034	388
BOLT; CHANGE LEVER	2-35	009	229
BOLT; CLAMP NOZZLE HOLDER	0-40	061	85
BOLT; CLIP, LEAF SPR, FRT	4-55	018	380
BOLT; CLIP, LEAF SPR, RR	4-65	036	388
BOLT; CLIP, LEAF SPR, RR SUB	4-65	052	388
BOLT; CM/SHF GEAR	0-14	007	28
BOLT; CONNECTOR	3-01	090	248
BOLT; CONNROD	0-15	086	34
BOLT; COVER	2-30	243	225
	4-10	048	330
	4-31	349	350
	4-42	033	372
BOLT; COVER FIX	0-39	038	80
BOLT; COVER STRG UNIT	4-40	030	367
BOLT; COVER, AIR DRYER	3-46	076	288
BOLT; COVER, RELAY BOX	8-10	389	568
BOLT; COVER, SIDE	6-47	181	462
BOLT; CRANKCASE	0-12	211	19
BOLT; CUSHION RUBBER, RAD MTG	1-10	075	134
BOLT; CYL HD TO BLOCK	0-11	003	12
BOLT; DAMPER	0-15	024	33
BOLT; DIFF CAGE SETTING	4-25	017	341
BOLT; DOOR LOCK	6-32	091	453
BOLT; DOOR STOPPER	6-30	131	445
BOLT; EARTH CABLE	0-61	222	112
BOLT; END PLATE TO SHELL, AIR M	3-33	038	279
BOLT; END PLATE TO SHELL, CLU B	2-07	029	199
BOLT; ENGAGE SW FIX, STARTER	0-65	085	116
BOLT; EXH MANIF	0-27	015	51
BOLT; EYE	0-40	216	87
	0-52	233	99
BOLT; EYE LEAK OFF PIPE	0-40	124	87
BOLT; EYE, AIR PIPE	0-38	035	75
BOLT; EYE, AIR PIPE TO CMPR	0-38	051	76
BOLT; EYE, END PLATE, CLU BOOSTE	2-07	019	198
BOLT; EYE, OIL PIPE, TURBOCHARGE	0-52	068	99
BOLT; EYE, WATER PIPE, AIR CMPR	0-32	090	60
BOLT; FAN TO CLU	0-33	026	63
BOLT; FENDER	6-05	015	429
BOLT; FINAL DRIVE GEAR	4-25	084	344
BOLT; FLANGE	0-14	117	31
BOLT; FLYWHEEL	0-15	040	33
BOLT; FRT WHEEL CYL	3-01	035	248
BOLT; FUEL PIPE	0-42	221	91
BOLT; GEN	0-60	016	106
BOLT; GRAND HARNESS	8-15	386	583
BOLT; HAND BRK LEVER	3-11	028	264
BOLT; HD	0-39	027	80
BOLT; HEADLAMP	8-01	028	547
BOLT; HEAT PROTECTOR	0-27	021	51
BOLT; HEAT PROTECTOR	0-36	101	69
BOLT; HINGE	6-30	005	445
BOLT; HORN TO BRKT	8-28	051	605
BOLT; HSG FIX STRG UNIT	4-40	072	368
BOLT; HUB TO AXLE SHAFT	4-20	030	337
BOLT; KEY CYL, DOOR	7-30	026	504
BOLT; KEY, KING PIN	4-10	032	330
BOLT; KNURL	3-08	198	257
BOLT; LEVER	5-15	003	407
BOLT; LK PLATE	2-01	107	185
	4-25	089	345
BOLT; LOCK PLATE	3-05	053	251
BOLT; MUD COVER	6-47	033	461
BOLT; MUD GUARD	6-47	076	461
BOLT; OIL FILTER, AIR DRYER	3-46	078	288
BOLT; OIL PAN	0-13	023	24
BOLT; PLATE	0-20	467	40
BOLT; PTO FIX	2-20	117	209
BOLT; PURGE VLV	3-46	065	287
BOLT; QUAD BOX	2-30	142	224
BOLT; RECLINING	7-50	017	533
BOLT; REINF TO INST	7-40	167	511
BOLT; RET	4-25	062	343
BOLT; ROCKER ARM BRKT	0-14	057	28
BOLT; ROOF	6-60	081	465
BOLT; RR BRK SET	3-05	157	253
BOLT; RR STEP	6-20	435	441
BOLT; SIDE COVER	2-20	072	209
BOLT; SIDE PANEL	6-47	140	462
BOLT; STARTER	0-60	004	106
BOLT; STAY BRKT, MIRROR	7-20	092	500
BOLT; STAY, HTR UNIT	8-40	107	610
BOLT; STOPPER	2-08	091	203
BOLT; STOPPER KNUCKLE	4-10	017	327
BOLT; STRAP	2-01	222	187
BOLT; STRG LOCK TO COLUMN	4-31	104	350
BOLT; STRG SHAFT TO UNIT	4-31	033	349
BOLT; STRG UNIT	4-31	095	349
BOLT; SUCTION PIPE	0-32	017	60
BOLT; THROUGH, GEN	0-66	021	119
BOLT; THROUGH, STARTER	0-65	027	116
BOLT; U AIR TANK	3-20	213	273
BOLT; WATER PIPE	0-36	116	69
BOLT; WHEEL CYL SETTING	3-05	112	253
BOLT; YOKE, TRANS	4-01	074	324
BOOSTER ASM; CLU	2-01	220	187
BOOT; CHANGE LEVER	2-35	016	229
BOOT; DRAG LINK	4-33	013	353
BOOT; ROD END, TIE	4-10	275	331
BOOT; STRG COLUMN LWR	4-31	203	350
BOX ASM; CONNECTOR	8-10	694	569
BOX ASM; FUSE, HARNESS	8-10	004	566
BOX ASM; SHIFT CONT	2-30	262	225
BOX ASM; STRG UNIT	4-40	008	366
BOX; COIN	7-45	316	527

https://truckmanualshub.com/

ALPHABETICAL INDEX

BOX; FUSE,HAR - BRACKET; PIPE

PART NAME	FIG	KEY	PAGE
BOX; FUSE,HARNESS	8-10	010	566
BOX; PARCEL	7-50	359	535
BRACE; PARKING BRK	3-08	013	256
BRACKET	2-30	552	226
	3-11	324	266
	8-15	428	583
BRACKET ASM; CAB LOCK LEVER	6-70	540	471
BRACKET ASM; CAB STAY UPR	5-15	146	408
BRACKET ASM; PEDAL	3-10	001	260
BRACKET; ACCEL PEDAL STOPPER	1-01	332	131
BRACKET; ACL	1-31	209	147
BRACKET; AIR	6-20	663	442
BRACKET; AIR DRYER	3-46	011	287
BRACKET; AIR DUCT	1-31	242	147
BRACKET; AIR INTAKE DUCT	6-80	064	481
BRACKET; AIR MASTER	3-33	099	279
BRACKET; AIR PIPE	0-38	160	76
BRACKET; AIR TANK	3-20	028	270
BRACKET; ASSIST GRIP	7-43	069	523
BRACKET; BATTERY	5-20	037	413
BRACKET; BLOWER	8-40	475	611
BRACKET; BUMPER,PLATE	6-01	674	420
BRACKET; CAB FRAME,CAB FRT MTG	5-10	104	401
BRACKET; CAB MTG	5-10	001	401
BRACKET; CAB RR MTG	5-10	199	402
BRACKET; CAB STAY	5-10	096	401
BRACKET; CABLE CLIP TO FRAME	0-61	023	110
BRACKET; CATCH TANK,OIL	0-25	208	48
BRACKET; CENTER BRAKE CABLE	3-08	197	257
BRACKET; CENTER BRG	4-01	172	325
BRACKET; CENTER POCKET	7-40	704	513
BRACKET; CHANGE LEVER SUPPORT	2-35	037	229
BRACKET; CHECKER	6-30	041	445
BRACKET; CLAMP,EXH PIPE	1-50	056	173
BRACKET; CLIP	1-41	097	162
	2-85	303	243
	8-15	069	579
BRACKET; CLIP HARNESS	8-15	312	582
BRACKET; CLIP,P/S	4-35	063	357
BRACKET; CLIP,RUBBER HOSE	1-11	092	140
BRACKET; CLU SENSOR	2-03	254	189
BRACKET; CMPR	8-50	046	615
BRACKET; COMMON RAIL	0-40	282	88
BRACKET; CONNECTOR	8-15	007	577
	8-15	335	582
BRACKET; CONT CABLE	2-36	487	234
BRACKET; CONT CABLE TO FRAME	3-11	235	265
BRACKET; CONT LINK	1-01	083	130
BRACKET; CONT UNIT	8-26	264	597
BRACKET; COVER	7-40	580	512
BRACKET; CURTAIN RAIL	7-70	084	541
BRACKET; DUCT	6-20	662	442
BRACKET; DUMP CONT	6-70	544	471
BRACKET; EGR	0-57	135	101
BRACKET; EGR COOLER	0-57	710	101
BRACKET; ENG MTG	5-01	011	396
BRACKET; ENG MTG,RR	0-22	078	43
BRACKET; EXH PIPE TO TRANS	1-50	049	172
BRACKET; EXTINGUISHER	6-70	462	471
BRACKET; FAN GUIDE	1-10	092	135
BRACKET; FENDER	6-05	078	430
BRACKET; FENDER SKIRT	6-05	288	431
BRACKET; FLASHER UNIT	8-28	573	606
BRACKET; FLEX HOSE	1-55	080	177
BRACKET; FLEX HOSE,AIR TANK	3-70	006	304
BRACKET; FLEX HOSE,FRT BRK	3-52	002	292
BRACKET; FLEX HOSE,RR BRK	3-55	003	296
BRACKET; FRAME HARNESS	8-15	059	579
BRACKET; FRAME TO BRKT	1-50	060	173
BRACKET; FRT BUMPER	6-01	030	419
BRACKET; FRT SPR,FRT	5-01	024	397
BRACKET; FRT SPR,RR	5-01	039	397
BRACKET; FUEL PIPE	0-40	168	87
	1-41	308	164
BRACKET; FUEL PIPE TO INL MANI	0-42	091	91
BRACKET; FUEL SEDIMENTER	1-41	227	163
BRACKET; FUEL TANK	1-40	043	154
BRACKET; GARNISH PANEL	7-40	646	512
BRACKET; GEN	0-60	021	106
BRACKET; HARNESS	0-25	685	49
	0-40	377	88
	0-61	087	111
	8-10	668	569
	8-15	053	579
BRACKET; HARNESS CLAMP	8-15	137	579
BRACKET; HARNESS SUPPORT	6-70	081	469
BRACKET; HEAD LAMP	6-70	380	470
BRACKET; HORN	8-28	050	605
BRACKET; HTR UNIT	8-60	076	618
BRACKET; IDLER	6-05	577	434
BRACKET; INJ NOZZLE	0-40	094	86
BRACKET; INJ PIPE	0-40	120	87
BRACKET; INST PNL	7-40	016	509
BRACKET; JACK HANDLE	6-70	547	472
BRACKET; KNEE	7-40	696	513
BRACKET; LAMP,RR COMB	8-03	029	552
BRACKET; LICENSE PLATE	6-90	113	487
BRACKET; LICENSE PLATE,FRT	6-01	070	419
BRACKET; MAG VLV,EXH BRAKE	1-56	094	179
BRACKET; MAG VLV,PTO CONT	8-28	035	605
BRACKET; MINIPACK	2-01	155	186
BRACKET; MIRROR	6-20	667	442
BRACKET; MTG,RR	6-70	144	469
BRACKET; MUD GUARD	6-70	548	472
BRACKET; NYLON TUBE	3-78	379	317
BRACKET; OIL TANK	3-20	139	272
BRACKET; OUTSIDE MIRROR	7-20	071	499
BRACKET; P/S PIPE	4-35	263	358
BRACKET; PANEL	6-05	293	431
BRACKET; PIPE	1-31	199	147

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
BRACKET; PIPE	4-36	074	362
BRACKET; PIPE CLIP	3-78	149	317
BRACKET; PIPE SUPPORT	6-70	398	471
BRACKET; PRE FUEL FILTER	1-41	418	164
BRACKET; PUMP	0-40	080	86
BRACKET; RAD GRILLE	6-70	276	470
BRACKET; RAD STAY	1-10	259	136
BRACKET; RADIATOR	3-11	336	266
BRACKET; RADIO TO PANEL	8-90	006	634
BRACKET; RESERVE TANK	1-11	023	139
BRACKET; ROCKER ARM SHAFT	0-14	096	30
BRACKET; ROOF OUTER	7-43	356	524
BRACKET; RR SPR, FRT	5-01	101	398
BRACKET; RR SPR, RR	5-01	105	398
BRACKET; RUBBER HOSE	3-20	217	273
BRACKET; S/ABS, FRT SUSP	4-50	168	376
BRACKET; SEAT FRT	6-70	545	471
BRACKET; SEAT RR	6-70	549	472
BRACKET; SHIFT TO SELECT, TRANS	2-37	065	237
BRACKET; SIDE PANEL	6-47	135	462
BRACKET; SPARE TIRE	6-70	057	469
BRACKET; SPR EYE, MINIPACK, FLEX	2-01	165	186
BRACKET; STUD	1-50	506	174
BRACKET; SUPPORT	6-05	573	434
BRACKET; SUPPORT, ENG MTG, RR	0-22	067	43
BRACKET; T/M HARNESS	2-20	651	211
BRACKET; UNION	2-05	167	195
	3-75	075	309
	3-77	178	312
	4-36	101	362
BRACKET; WATER PIPE	0-32	024	60
	0-36	391	70
BRACKET; WIPER MOTOR	8-80	072	629
BREATHER; RR AXLE CASE	4-20	060	338
BRIDGE	0-14	063	28
BRIDGE; LEVER	2-30	629	227
BRUSH; (+), STARTER	0-65	020	115
BRUSH; (-), STARTER	0-65	050	116
BUFFER; STOPPER	7-20	314	501
BULB; HEADLAMP	8-01	005	547
BULB; HTR CONT LVR	8-65	062	621
BULB; LICENSE PLATE LAMP	8-03	051	552
BULB; MARKER LAMP	8-01	080	547
BULB; ROOM LAMP	8-05	002	555
BULB; RR COMB LAMP	8-03	005	551
BULB; SIDE TURN SIGNAL	8-01	091	548
BULB; TURN SIGNAL	8-01	357	548
BUMPER ASM; FRT	6-01	001	419
BUSHING; BRK PEDAL	3-10	004	260
BUSHING; CAB MTG	5-10	448	402
BUSHING; CAB STAY	5-15	245	410
BUSHING; CLU HSG	2-20	388	210
BUSHING; CLU PEDAL SHAFT	2-03	097	189
BUSHING; CONNROD	0-15	085	34
BUSHING; DRIVE SHAFT, OIL PUMP	0-12	136	19
BUSHING; DRIVEN GEAR, SPEEDOMET	2-25	002	213
BUSHING; ENG CONT LVR	1-01	082	130
BUSHING; FRT SPR, RR	5-01	031	397
BUSHING; HINGE, RECLINING	7-50	126	534
BUSHING; IDLE GEAR	0-14	206	31
BUSHING; LEAF SPR, FRT	4-55	017	379
BUSHING; LEAF SPR, RR	4-65	038	388
BUSHING; LEVER	2-30	317	225
BUSHING; LINK ARM	7-50	158	534
BUSHING; PIPE, FUEL TANK	1-41	095	162
BUSHING; RELEASE LEVER	2-01	085	184
BUSHING; RUBBER, CAB MTG BRKT, F	5-10	033	401
BUSHING; RUBBER, S/ABS	4-50	017	375
BUSHING; SEAT BACK	7-50	099	534
BUSHING; SHACKLE, RR SPR	4-60	016	383
BUSHING; SHELL, CLU BOOSTER	2-07	032	199
BUSHING; TORSION BAR	5-10	002	401
CABLE ASM; LOCK CONTROL	6-32	175	453
CABLE; ADJ	7-50	201	535
CABLE; BATTERY	0-61	001	110
	0-61	002	110
CABLE; BATTERY, STARTER	0-61	008	110
CABLE; EXT, FEEDER	8-90	224	635
CABLE; FRT LID	6-05	555	433
CABLE; HTR CONT LVR	8-65	003	621
CABLE; PARKING BRK	3-11	061	264
CABLE; SELECT, TRANS CONT	2-36	003	234
CABLE; SHIFT, TRANS CONT	2-36	001	234
CABLE; STARTER EARTH	0-60	293	107
CAGE ASM; DIFF, FINAL DRIVE	4-25	071	344
CAGE; FINAL PINION	4-25	043	342
CAMSHAFT	0-14	001	28
CAP; A/C SWITCH	8-65	087	621
CAP; ANTENNA CABLE	8-90	294	635
CAP; BLEEDER, FRT WHEEL CYL	3-01	017	247
CAP; BLEEDER, RR WHEEL CYL	3-05	097	252
CAP; BREATHER, HEADLAMP	8-01	408	548
CAP; DRAIN	1-45	092	168
CAP; FUEL TANK, W/KEY	7-30	025	504
CAP; GUARD BAR	6-31	222	449
CAP; HUB, FRT AXLE	4-11	001	333
CAP; OIL FILLER	0-10	004	7
CAP; OIL FILLER, CLU M/CYL	2-08	089	203
CAP; OIL TANK	3-20	237	273
CAP; OIL TANK, P/S	4-35	002	356
CAP; PARCEL BOX	7-50	506	536
CAP; RAD	1-10	016	134
CAP; ROCKER SHAFT	0-14	082	29
CAP; SURGE TANK	1-11	002	139
CAP; TERMINAL, BATTERY CABLE	0-61	037	111
CAP; TURN SIGNAL, LAMP	8-01	431	549
CAP; VALVE	4-80	032	391
CAP; WASHER TANK	8-80	034	628
CARRIER; DIFF	4-25	055	343
CARTRIDGE ASM; OIL PUMP	4-42	022	371

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
CASE ASM; SEDIMENTER	1-45	087	168
CASE; BEARING STRG UNIT	4-40	054	368
CASE; BLOWER UNIT	8-73	049	624
CASE; CYL HEAD-C/H COVER	0-11	247	14
CASE; GEAR,TRANS SIDE PTO	2-81	002	239
CASE; HTR UNIT	8-60	061	617
CASE; PINION,STARTER	0-65	002	115
CASE; RR AXLE	4-20	049	338
CASE; TRANS	2-20	435	211
CHANNEL; GLASS RUN,FRT	6-31	012	448
CHECKER ASM; DOOR	6-30	038	445
CLAMP; AIR DUCT	1-31	530	149
CLAMP; EXH PIPE	1-50	022	172
CLAMP; HOSE	1-31	450	149
	3-10	335	261
CLAMP; HTR HOSE	8-45	056	613
CLAMP; HTR UNIT	8-60	207	618
CLAMP; PISTON GUARD,CLU BOOSTE	2-07	050	200
CLEANER ASM; AIR	1-30	001	143
CLEVIS; PUSH ROD,CLU BOOSTER	2-07	003	197
CLIP	3-70	434	304
	6-05	608	434
	8-65	103	621
CLIP; ACTUATOR HOSE,TURBOCHARG	0-37	009	73
CLIP; AIR DUCT	1-31	005	146
	1-31	071	147
CLIP; AIR PIPE	0-38	029	75
	0-38	040	75
	3-78	004	316
	3-78	134	316
	3-78	146	316
	3-78	224	317
CLIP; AIR TANK HARNESS	8-15	223	581
	8-15	225	581
CLIP; BACK TRIM	6-84	105	485
CLIP; BALL TUBE STRG UNIT	4-40	178	368
CLIP; BAND	0-61	107	111
CLIP; BAND,HARNESS	8-15	014	577
CLIP; BATTERY CABLE	0-61	079	111
CLIP; BLISTER FENDER	6-05	666	435
CLIP; BLOWER UNIT	8-73	038	624
CLIP; BYPASS HOSE	0-32	148	61
CLIP; CAB LOCK	5-15	337	410
CLIP; CABLE	2-36	006	234
	6-05	557	434
CLIP; CABLE,CONT LEVER	8-65	025	621
CLIP; CENTER	3-78	386	317
CLIP; CONT CABLE & TUBE	2-36	386	234
CLIP; COVER	6-05	637	434
	7-40	603	512
CLIP; DOOR PAD	6-35	018	455
CLIP; DOOR TRIM	6-35	083	455
CLIP; END CROSS HARNESS	8-15	213	581
CLIP; ENG HARNESS	0-25	346	49
	8-15	022	578
CLIP; ENG HARNESS	8-15	305	582
	8-15	483	583
CLIP; FAN GUIDE	1-10	427	136
CLIP; FEEDER TO BRKT	8-90	101	634
CLIP; FENDER	6-05	659	435
CLIP; FENDER COVER	6-05	524	432
CLIP; FENDER LWR	6-05	384	431
CLIP; FLEX HOSE	1-55	083	177
	2-05	016	194
	3-55	126	296
CLIP; FRAME HARNESS	8-15	048	578
CLIP; FRT PANEL SIDE	6-05	020	429
CLIP; FUEL HOSE	1-41	024	160
	1-41	082	162
CLIP; FUEL PIPE,FUEL TANK	1-41	041	160
CLIP; FUEL TANK HARNESS	8-15	206	581
CLIP; GEN HARNESS	8-15	049	579
CLIP; GLASS GUIDE	6-31	008	448
CLIP; HARNESS	8-15	016	577
CLIP; HARNESS,LICENSE LAMP	8-15	470	583
CLIP; HARNESS,MAG VLV	8-15	208	581
CLIP; HOSE	0-28	059	53
	1-31	023	146
	2-30	548	226
	3-20	178	272
CLIP; HOSE,GUIDE TUBE	0-13	193	25
CLIP; HOSE,P/S	4-35	037	356
	4-35	041	357
CLIP; HOSE,PCV	0-28	044	53
CLIP; HTR UNIT	8-60	067	617
CLIP; INJ PIPE	0-40	068	86
CLIP; INST COVER	7-40	136	510
CLIP; INST PANEL	7-40	125	510
CLIP; INSULATOR,COVER	6-76	039	477
CLIP; JACK HANDLE	9-01	209	642
CLIP; LWR	3-78	383	317
CLIP; MIRROR	7-20	018	498
CLIP; MIRROR LENS	7-20	134	500
CLIP; NYLON TUBE	2-85	317	243
CLIP; OIL PIPE	2-05	028	194
	3-58	058	300
	3-58	082	300
	3-58	112	300
CLIP; OIL PIPE SUCTION	4-36	015	361
CLIP; OIL PIPE TO BODY	3-58	001	300
CLIP; OIL TANK TO AIR MASTER H	3-20	145	272
CLIP; PIN,AIR MASTER	3-33	109	279
CLIP; PIPE	1-41	309	164
CLIP; PIPE TO HOSE	0-13	379	25
CLIP; RAD GRILLE	6-03	040	423
CLIP; ROOF HARNESS	8-15	116	579
CLIP; RR BODY HARNESS	8-15	217	581
CLIP; RUBBER HOSE	0-28	090	53
	1-31	353	148
	1-31	357	148

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
CLIP; SEAL	6-03	193	423
	6-05	571	434
	6-35	199	455
CLIP; SELECT BRKT	2-37	066	237
CLIP; SPRING NUT	6-20	659	442
CLIP; STARTER HARNESS	8-15	171	580
CLIP; STAY	6-05	553	433
CLIP; TIRE HANGER	9-01	271	642
CLIP; TRIM COVER,FRT PILLAR	6-43	169	457
CLIP; TRIM,RR PILLAR	6-43	167	457
CLIP; UPR	3-78	382	317
CLIP; WASHER HOSE	8-80	042	629
CLIP; WATER HOSE	0-36	118	69
CLIP; WATER HOSE,RAD	1-11	056	139
CLIP; WATER PIPE	0-32	094	60
CLOSING ASM; MTG,FRT	6-70	550	472
CLOSING; FRT MTG RAIL	6-05	543	433
CLOSING; PILLAR	6-70	375	470
CLOSING; PILLAR,LWR	6-70	376	470
CLOSING; ROCKER	6-70	448	471
CLUSTER ASM; METER	8-21	011	587
CLUTCH ASM; PINION,STARTER	0-65	007	115
CLUTCH; COOLING FAN	0-33	008	63
CLUTCH; PINION,STARTER	0-65	054	116
COCK; DRAIN,AIR TANK	3-20	006	270
COIL; FIELD,STARTER	0-65	019	115
COIL; ROTOR GEN	0-66	023	120
COLLAR; DIST,CHANGE LEVER	2-35	123	229
COLLAR; DIST,CUSHION RUBBER	1-10	232	136
COLLAR; DIST,EXH MANIF	0-27	034	51
COLLAR; DIST,OUTPUT SHAFT,TRAN	2-81	022	239
COLLAR; DIST,PINION	4-25	164	345
COLLAR; FUEL PIPE FIX	1-41	217	163
COLLAR; PIPE ADAPTER	0-36	204	70
COLLAR; SHIFTER ROD,TRANS SIDE	2-81	112	241
COLLAR; SPLIT	0-14	065	29
COLLAR; THRUST,IDLE GEAR	0-14	111	30
COLLAR; 3RD & REV	2-26	505	220
COLLAR; 6TH,COUNTER	2-26	506	220
COMPRESSOR ASM; AIR	0-38	001	75
CONNECTOR	0-11	248	14
	1-56	087	179
CONNECTOR; AIR MASTER	3-20	148	272
CONNECTOR; AXLE CASE	4-20	140	339
CONNECTOR; BRK VALVE	3-10	007	260
CONNECTOR; ELBOW	2-07	107	200
CONNECTOR; END PLATE,AIR MASTE	3-33	019	278
CONNECTOR; END PLATE,CLU BOOST	2-07	018	198
CONNECTOR; EXH BRK VLV	1-55	074	177
CONNECTOR; FRT BRK	3-01	074	248
CONNECTOR; HARNESS	8-10	558	569
CONNECTOR; HSG STRG UNIT	4-40	075	368
CONNECTOR; JOINT	8-10	431	568
CONNECTOR; MAG VLV,INL PORT	8-28	034	605
CONNECTOR; NYLON TUBE	3-75	052	308
CONNECTOR; OIL PUMP	4-42	038	372
CONNECTOR; OUT,AIR DRYER	3-46	008	287
CONNECTOR; UPR,VLV,CLU BOOSTER	2-07	033	199
CONTROL UNIT; CAB LOCK	5-15	137	408
CONTROL UNIT; ENG	0-60	613	107
COOLER ASM; OIL	0-50	102	93
COOLER; CHARGE AIR	1-35	001	151
CORE; OIL COOLER	0-50	111	93
COUPLING ASM	0-39	049	80
COUPLING ASM; INJ PUMP	0-40	015	85
COUPLING; DRIVING PINION	4-25	126	345
COUPLING; INJ PUMP DRIVE	0-87	001	125
COVER	0-25	704	49
COVER ASM; ACL	1-30	008	143
COVER ASM; BRG,AIR CMPR	0-39	006	79
COVER ASM; FRT,GEN	0-66	017	119
COVER ASM; RR,GEN	0-66	001	119
COVER SET; DUST ENGAGE SW STAR	0-65	051	116
COVER SUB ASM; CLU	2-01	088	184
COVER; ACL	1-30	067	143
COVER; ADJ,RECLINING	7-50	122	534
COVER; ADJUSTER	7-60	163	539
COVER; AIR TANK	3-20	368	273
COVER; ASSIST GRIP	7-43	059	523
COVER; BATTERY	5-20	051	413
COVER; BLOWER UNIT	8-73	050	625
COVER; BOX,FRAME HARNESS	8-10	276	568
COVER; BRK PEDAL	3-10	006	260
COVER; BULB,HEADLAMP	8-01	023	547
COVER; BUMPER FRT SIDE	6-01	321	420
COVER; CASE	2-20	317	210
COVER; CASE,AIR DRYER	3-46	075	288
COVER; CHANGE LEVER	2-35	019	229
COVER; CHECK HOLE,DUST	2-20	024	209
COVER; CHECK HOLE,PARKING BRK	3-08	081	257
COVER; CLU PEDAL	2-03	002	189
COVER; CYL HD	0-10	001	7
COVER; CYL HEAD COVER	0-10	113	7
COVER; DOOR LOCK	6-32	176	453
COVER; DOOR PULL	6-32	124	453
COVER; DUST,PARKING BRK	3-08	039	256
COVER; DUST,PUSH ROD	2-08	047	203
COVER; DUST,SPIDER	4-01	014	322
COVER; DUST,STRG UNIT	4-40	073	368
	4-40	132	368
COVER; DUST,TRANS SIDE PTO	2-81	079	241
COVER; END,RR COVER,GEN	0-66	039	120
COVER; EXH,CLU BOOSTER	2-07	014	197
COVER; EXH,END PLATE,AIR MASTE	3-33	054	279
COVER; FAN,RAD	1-10	082	135
COVER; FRT	0-20	268	40
COVER; FRT PANEL SIDE	6-05	299	431
COVER; FRT WIPER ARM	8-80	114	630
COVER; FRT,OUTPUT SHAFT,TRANS	2-81	006	239
COVER; FUSE BOX	8-10	029	567

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
COVER; HARNESS	3-20	417	273
COVER; HEADLAMP	8-01	139	548
COVER; HOLE	8-26	021	597
COVER; HOLE, ANNTENA CABLE	6-78	168	479
COVER; HOLE, CTR CONSOLE	7-45	307	527
COVER; HOLE, DOOR LOCK SW	8-26	221	597
COVER; HOLE, SW	7-45	315	527
	8-25	257	592
COVER; HTR CASE	8-60	077	618
COVER; HTR UNIT	8-60	029	617
COVER; IDLE GEAR	0-14	102	30
COVER; INL	0-25	002	48
COVER; INST PANEL SIDE	7-40	336	511
COVER; INST PNL	7-40	004	509
COVER; KING PIN	4-10	044	330
COVER; KNUCKLE	4-10	305	331
COVER; LEVER, FRT LID	6-05	668	435
COVER; LICENSE PLATE LAMP	8-03	058	553
COVER; LWR	4-31	251	350
COVER; LWR, INST PANEL	7-40	662	513
COVER; METER	8-21	480	587
COVER; MUD, FRT	6-47	091	461
COVER; MUD, TIRE RR	6-47	002	461
COVER; MUD, VALANCE	6-47	254	463
COVER; PIPE, FUEL TANK	1-41	055	161
COVER; PIVOT, WIPER	8-80	198	630
COVER; RADIO	8-90	033	634
COVER; RECLINING	7-50	018	533
COVER; RELAY & FUSE BOX	8-10	184	567
COVER; RETRACTOR, SEAT BELT	7-60	174	539
COVER; RR COMB LAMP	8-03	037	552
COVER; RR COVER STARTER	0-65	023	115
COVER; RR, OUTPUT SHAFT, TRANS S	2-81	032	240
COVER; RR, TRANS	2-20	421	211
COVER; RUBBER, STARTER	0-65	032	116
COVER; SHIFTER ROD, TRANS SIDE	2-81	021	239
COVER; SIDE STRG UNIT	4-40	019	366
COVER; SIDE, FRT	6-05	225	430
COVER; SIDE, TRANS CASE	2-20	071	209
COVER; STAY, OUTSIDE MIRROR	7-20	086	500
COVER; STRG COWL	4-30	033	347
COVER; STRG WHEEL, LWR	4-30	026	347
COVER; SUN VISOR	7-43	141	523
COVER; SW	7-40	564	512
COVER; SW HOLE	8-25	253	592
COVER; SW HOLE, FOG LAMP	8-25	104	592
COVER; THROUGH ANCHOR	7-60	160	539
COVER; TRIM, FLOOR MAT, DOOR SID	6-75	069	475
COVER; TRIM, FRT SEAT, BACK	7-50	002	533
COVER; TRIM, FRT SEAT, CUSHION	7-50	013	533
COVER; TRIM, FRT SIDE	6-43	004	457
COVER; TRIM, PASSENGER SEAT CEN	7-50	176	535
	7-50	179	535
COVER; TRIM, PASSENGER SEAT, BAC	7-50	114	534
COVER; TRIM, PASSENGER SEAT, CUS	7-50	116	534
COVER; WHEEL CYL	3-05	111	253
COVER; WIPER IDLER	6-05	657	435
COVER; WIPER MOTOR	6-05	578	434
COWL; STEERING	4-30	030	347
CRANKCASE; AIR CMPR	0-39	002	79
CRANKSHAFT	0-15	001	33
CRANKSHAFT; AIR CMPR	0-39	004	79
CUP SET; FRT WHEEL CYL	3-01	026	247
CUP SET; RR WHEEL CYL	3-05	095	252
CUP; SEALING	0-12	097	19
CUP; SEALING, C/BL FRT & RR	0-12	023	18
CUP; SEALING, CYL HEAD	0-11	007	12
CUP; SEALING, FRT & RR	0-12	070	19
CUP; SEALING, OIL GALLERY	0-12	089	19
CUSHION ASM; CENTER SEAT	7-50	182	535
CUSHION ASM; PASSENGER SEAT	7-50	115	534
CUSHION; SEAT, FRT	7-50	012	533
CYLINDER ASM; CLUTCH MASTER	2-08	001	203
CYLINDER ASM; DOOR LOCK	7-30	005	504
CYLINDER SET; CAR LOCK	7-30	001	504
CYLINDER; AIR CMPR	0-39	015	79
CYLINDER; AIR, TRANS SIDE PTO	2-81	042	240
CYLINDER; WHEEL, FRT BRK	3-01	015	247
CYLINDER; WHEEL, RR BRK	3-05	094	252
DECAL	7-01	009	491
DECK ASM; RADIO & CD	8-90	253	635
DETENT ASM	2-30	630	227
	2-30	645	227
DIODE; CABLE HARNESS	8-10	002	566
DIODE; RELAY BOX	8-10	388	568
DISC; CLUTCH	2-01	001	184
DOOR ASM; FRT, W/O TRIM	6-30	001	445
DOWEL; C/BL TO HD	0-12	013	18
DRIVE ASM; FINAL, RR	4-25	001	341
DRM	0-60	897	107
DRUM; BRK, FRT	4-11	023	333
DRUM; BRK, RR	4-20	001	337
DRUM; PARKING BRK	3-08	002	256
DRYER; AIR	3-46	001	287
DUCT; AIR INT	1-31	026	146
	1-31	252	148
DUCT; AIR, HTR	8-40	240	611
DUCT; VENTILATOR	8-40	186	610
ELEMENT; FUEL FILTER	1-45	002	168
ELEMENT; OIL FILTER	0-50	002	93
EMBLEM; STRG WHEEL	4-30	081	347
EXTENSION; RR FLOOR	6-70	170	469
EYE; SPRING	2-01	164	186
FAN; COOLING	0-33	001	63
	0-33	230	63
FAN; GEN	0-66	020	119
FASTENER	6-05	534	432
FASTENER; COVER	2-35	439	230
FASTENER; FLOOR MAT	6-78	110	479
FASTENER; HD LINING	6-66	071	467

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
FASTENER; MUD COVER	6-47	023	461
FASTENER; RUBBER	6-47	218	462
FASTENER; TURN SIGNAL, LAMP	8-01	432	549
FENDER; BLISTER	6-05	535	433
FENDER; FRT	6-05	014	429
FENDER; RR	6-05	332	431
FILTER ASM; OIL	0-50	496	94
FILTER; ACL, INNER	1-30	026	143
FILTER; ACL, OUTER	1-30	027	143
FILTER; BLOWER UNIT	8-73	042	624
FILTER; DUST	3-20	239	273
FILTER; MICROBON, OIL TANK, P/S	4-35	012	356
FILTER; POPPET	2-07	127	200
FILTER; VERTICAL DUCT	1-31	560	149
FINISHER; BLISTER FENDER	6-05	658	435
FINISHER; BODY SIDE	6-43	174	457
FINISHER; BRKT, KNEE	7-40	721	514
FINISHER; FENDER RR	6-05	661	435
FLANGE; PARKING BRK	3-08	008	256
FLANGE; SPLINED, PROP SHAFT, 1ST	4-01	046	323
FLAP; MUD GUARD	6-47	219	462
FLYWHEEL	0-15	012	33
FOOT; ENG	0-22	002	43
FORK; SHIFT, CLU	2-01	057	184
FRAME; FLOOR REAR	6-70	022	469
FRAME; FLOOR, CENTER SIDE	6-70	018	469
FRAME; FLOOR, FRT	6-70	004	469
FRAME; UNDER	6-70	015	469
FUSE UNIT	8-10	027	567
FUSE; FACIA HARNESS	8-10	005	566
FUSE; SLOW BLOW	8-10	174	567
FUSIBLE LINK; BATTERY	0-61	036	111
GASKET	0-25	364	49
	0-31	207	57
	0-40	219	88
	0-40	288	88
	0-52	181	99
	1-50	571	174
	3-46	104	288
	8-26	553	597
GASKET SET; ENG HD OVERHAUL	0-05	002	4
GASKET SET; ENG OVERHAUL	0-05	001	4
GASKET SET; TRANS OVERHAUL	2-10	001	205
GASKET; ADAPTER	1-31	564	149
GASKET; AIR CMPR	0-38	002	75
	0-39	012	79
	0-39	013	79
GASKET; AIR PIPE	1-31	225	147
GASKET; BACK, LAMP	8-03	024	551
GASKET; BOLT, OIL COOLER	0-50	090	93
GASKET; CASE	8-60	242	618
GASKET; CLU BOOSTER	2-07	091	200
GASKET; CLU M/CYL	2-08	036	203
GASKET; COCK, WATER DRAIN	0-12	351	20
GASKET; CONN, CLU BOOSTER	2-07	017	198
GASKET; CONN, CLU BOOSTER	2-07	034	199
GASKET; CONNECTOR	0-11	249	14
GASKET; CONNECTOR, STRG UNIT	4-40	077	368
GASKET; CONV TO EXH PIPE	1-50	505	174
GASKET; COVER	0-11	122	14
GASKET; COVER, IDLE GEAR	0-14	223	31
GASKET; CYL HD	0-11	002	12
GASKET; DRAIN COCK	3-20	007	270
GASKET; DRAIN PLUG	0-13	003	24
	2-20	050	209
	4-20	059	338
GASKET; EGR VLV	0-57	004	101
GASKET; ELEMENT TO BODY	0-50	444	94
GASKET; END PLATE TO SHELL, CLU	2-07	022	198
GASKET; EXH MANIF TO HD	0-27	002	51
GASKET; EXH MANIF TO PLATE	0-27	217	51
GASKET; EYE BOLT	0-40	199	87
GASKET; FILLER PLUG	2-20	045	209
GASKET; FITTING, CLU BOOSTER	2-07	042	199
GASKET; FLANGE, FINAL PINION	4-25	004	341
GASKET; FRT COVER TO BODY	4-42	021	371
GASKET; FUEL PIPE	0-42	150	91
GASKET; FUEL TANK UNIT	1-40	019	153
GASKET; GUIDE TUBE, OIL LEVEL G	0-13	009	24
GASKET; HD TO COVER	0-10	069	7
GASKET; HEATER	8-60	236	618
GASKET; HSG, STRG UNIT	4-40	047	367
	4-40	048	367
GASKET; HTR PIPE	0-50	164	93
GASKET; INJ NOZZLE	0-40	066	85
GASKET; INJ PUMP	0-86	021	123
GASKET; LICENSE LAMP	8-03	053	552
GASKET; MAINSHAFT	2-26	298	218
GASKET; MARKER LAMP	8-01	084	547
GASKET; OIL COOLER TO C/BL	0-50	469	94
GASKET; OIL FILLER	0-10	005	7
GASKET; OIL FILLER, AXLE CASE	4-20	064	338
GASKET; OIL FILLER, CLU M/CYL	2-08	090	203
GASKET; OIL FILTER TO C/BL	0-50	272	94
GASKET; OIL PAN	0-13	017	24
GASKET; OIL PIPE, C/BL	0-36	131	69
GASKET; OIL PIPE, TURBOCHARGER	0-36	134	69
GASKET; OIL PUMP	4-42	039	372
GASKET; OIL TANK, P/S	4-35	003	356
GASKET; P/S PUMP	4-35	157	358
GASKET; PIPE CONN, OIL PUMP	4-42	037	372
GASKET; PIPE TO MANIF	1-50	002	172
GASKET; PISTON CUP, CLU BOOSTER	2-07	006	197
	2-07	009	197
GASKET; PISTON, CLU BOOSTER	2-07	040	199
GASKET; PLUG	0-12	303	20
	0-60	460	107
GASKET; PUSH ROD, CLU BOOSTER	2-07	025	198
GASKET; RELIEF VLV	0-12	035	18
GASKET; RETURN PIPE, NOZZLE HOL	0-40	036	85

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
GASKET; RR COMB LAMP	8-03	003	551
GASKET; RR COVER.STARTER	0-65	038	116
GASKET; SELECT LEVER.CONT BOX	2-30	189	225
GASKET; SENSOR.CAM ANGLE	0-14	350	31
GASKET; SHAFT,STRG UNIT	4-40	012	366
GASKET; SHELL.CLU BOOSTER	2-07	031	199
	2-07	060	200
GASKET; SIDE COVER.STRG UNIT	4-40	027	366
GASKET; SLEEVE.INJ PUMP	0-11	201	14
GASKET; SLEEVE,NOZZLE HOLDER	0-11	058	13
GASKET; STRAINER	0-51	102	97
GASKET; THERMOSTAT HSG	0-31	066	57
GASKET; TURBOCHARGER TO EXH DU	0-36	009	68
GASKET; TURN.LAMP	8-03	028	552
GASKET; UPR COVER,SEDIMENTER	1-45	005	168
GASKET; UPR VLV.CLU BOOSTER	2-07	043	199
GASKET; WATER PIPE	0-36	136	69
GASKET; WATER PIPE.AIR CMPR	0-32	091	60
GASKET; YOKE.STARTER	0-65	014	115
GAUGE; OIL LEVEL	0-13	002	24
GAUGE; TIRE PRESSURE	9-01	192	642
GEAR SET; FINAL DRIVE.RR	4-25	060	343
GEAR; CM/SHF	0-14	009	28
GEAR; CR/SHF	0-15	028	33
GEAR; DRIVE,OIL PUMP	0-51	020	97
GEAR; DRIVEN.SPD	2-25	001	213
GEAR; IDLE	0-14	112	30
GEAR; IDLE.TRANS SIDE PTO	2-81	013	239
GEAR; INJ PUMP	0-38	019	75
GEAR; OIL PUMP	4-36	023	361
GEAR; OUTPUT.TRANS SIDE PTO	2-81	023	240
GEAR; PINION.DIFF	4-25	024	341
GEAR; REV IDLER	2-26	135	218
GEAR; REV MAINSHAFT	2-26	059	217
GEAR; RING	0-15	035	33
GEAR; SIDE.DIFF	4-25	021	341
GEAR; SPD DRIVE	2-26	080	217
GEAR; 1ST.MAINSHAFT	2-26	070	217
GEAR; 2ND.MAINSHAFT	2-26	050	216
GEAR; 3RD,MAINSHAFT	2-26	036	216
GEAR; 4TH.MAINSHAFT	2-26	030	216
GEAR; 6TH.COUNTER	2-26	118	217
GEAR; 6TH.MAINSHAFT	2-26	077	217
GENERATOR ASM	0-60	002	106
GLASS RUN; FRT DOOR	6-31	007	448
GLASS; BACKLIGHT	6-82	001	483
GLASS; CLUSTER METER	8-21	110	587
GLASS; FRT DOOR	6-31	001	448
GLASS; WINDSHIELD	6-07	001	437
GRILLE; CENTER,AIR OUTLET	7-40	070	510
GRILLE; RAD	6-03	001	423
GRILLE; SIDE,AIR OUTLET	7-40	069	510
GRIP; ASSIST.CAB ENTRY.BACK	7-43	072	523
GRIP; ASSIST.CAB SIDE UPR	7-43	055	522
GRIP; ASSIST,FRT PNL	7-43	103	523
GROMMET	3-05	136	253
	6-01	229	420
	7-50	632	537
GROMMET; A/C PIPE TO BLOWER UN	8-40	206	611
GROMMET; ADJ HOLE	3-01	092	248
GROMMET; AIR PIPE	6-70	174	469
GROMMET; BATTERY CABLE	0-61	013	110
GROMMET; CHECK HOLE	3-01	071	248
	3-05	035	251
GROMMET; CLU PIPE	2-05	023	194
GROMMET; FENDER	6-05	121	430
GROMMET; FRT PANEL	6-05	307	431
GROMMET; HARNESS	8-15	178	581
GROMMET; LOCATION HOLE.BACK PA	6-80	002	481
GROMMET; OIL PIPE	3-52	071	292
GROMMET; PARKING BRK CABLE	3-11	097	264
GROMMET; SCREW	6-05	059	430
	8-40	223	611
GROMMET; SCREW.CURTAIN RAIL	7-70	050	541
GROMMET; SCREW,INSIDE LEVER,DO	6-32	043	453
GROMMET; SCREW.LICENSE PLATE L	8-03	052	552
GROMMET; SCREW.SPEAKER	8-90	052	634
GROMMET; SCREW.TRIM COVER	6-78	112	479
GROMMET; STRG SHAFT COVER	4-31	291	350
GROMMET; WIPER	8-80	202	630
GUARD; MUD.FRT	6-47	001	461
GUARD; MUD.RR	6-47	003	461
GUARD; MUD.UPPER	6-47	680	463
GUARD; PISTON.CLU BOOSTER	2-07	005	197
GUIDE; BRIDGE	0-11	059	13
GUIDE; FAN	1-10	002	134
GUIDE; FAN.RAD	1-10	079	135
GUIDE; PIN.AIR MASTER	3-33	110	279
GUIDE; PLUNGER	3-34	090	283
GUIDE; VLV	0-11	004	12
GUSSET; PILLAR	6-20	408	441
GUSSET; 1ST C/MBR	5-01	008	396
HAMMER	9-01	017	641
HANDLE; ASSIST.A-POST	7-43	039	522
HANDLE; JACK	9-01	208	642
HANDLE; OUTSIDE.FRT DOOR	6-32	001	452
HANDLE; SPARE TIRE CARRIER	9-01	001	641
HANDLE; TILT	5-15	149	409
HANDLE; WINDOW REG.FRT DOOR	6-31	039	448
HANGER; ENG,FRT	0-11	168	14
HANGER; TIRE	5-30	167	415
HARNESS; AIR TANK	8-10	201	568
HARNESS; ALL SPEED ACCEL	8-10	486	569
HARNESS; CAB	8-10	001	566
HARNESS; CABLE,FLOOR	8-10	204	568
HARNESS; DOOR	8-10	018	567
HARNESS; ENG	8-10	013	566
HARNESS; EXT.FUEL	8-10	339	568
HARNESS; FRAME	8-10	006	566
HARNESS; FRAME,RR	8-10	009	566

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
HARNESS; IDLE CONT	8-10	691	569
HARNESS; ROOF	8-10	012	566
HARNESS; TRANS	8-10	231	568
HARNESS; WARNING.BRK	8-10	595	569
HEAD ASM; CYL	0-11	001	12
HEAD ASM; CYL.AIR CMPR	0-39	008	79
HEADLAMP UNIT	8-01	004	547
HEATER UNIT	8-60	001	617
HINGE; DOOR FRT	6-30	003	445
HINGE; LID,HEADER SHELF	7-43	341	524
HINGE; PARCEL BOX	7-50	535	536
HOLDER; ACCEL PEDAL	1-01	773	131
HOLDER; BRUSH STARTER	0-65	022	115
HOLDER; CARD	7-40	569	512
HOLDER; DOOR GLASS	6-31	192	449
HOLDER; FILTER	3-20	240	273
HOLDER; HEADER TRAY	7-43	359	525
HOLDER; ROD.DOOR HANDLE	6-32	139	453
HOLDER; SUN VISOR	7-43	026	522
HOLDER; TIRE VALVE,DISC WHEEL	4-80	016	391
HOOD ASM; ENG	6-70	003	469
HOOK	6-01	084	419
	6-90	133	487
HOOK; COAT HANGER	7-43	051	522
HOOK; INST PANEL	7-40	699	513
HORN; LOW NOTE	8-28	045	605
HOSE ASM; WASHER	8-80	228	630
HOSE; ACTUATOR TO BLOWER HSG.T	0-37	008	73
HOSE; AIR	2-30	346	226
HOSE; AIR,BRK	3-10	334	261
HOSE; CONN	1-31	232	147
HOSE; CONN.ACL	1-31	320	148
HOSE; DRAIN.EVAPORATOR	8-50	378	615
HOSE; FLEX.AIR TANK	3-70	001	304
HOSE; FLEX,CLU CONT	2-05	047	194
HOSE; FLEX.EXH BRK	1-55	042	177
HOSE; FLEX.FRT BRK	3-52	001	292
HOSE; FLEX.OIL PIPE TO OIL PIP	2-05	101	194
HOSE; FLEX.P/S OIL PUMP.INL	4-36	010	361
HOSE; FLEX,PTO	2-85	048	243
HOSE; FLEX.RR BRK	3-55	001	296
HOSE; FUEL	1-41	029	160
HOSE; GUIDE TUBE	0-13	192	25
HOSE; OIL TANK TO AIR MASTER	3-20	125	271
HOSE; P/S OIL PUMP,INL	4-35	280	358
HOSE; P/S OIL TANK.INL	4-35	031	356
HOSE; P/S OIL TANK.OUTLET	4-35	034	356
HOSE; PCV	0-28	043	53
HOSE; RAD TO PIPE	1-10	211	136
HOSE; RUBBER	0-32	115	61
	1-31	379	148
HOSE; RUBBER.OIL DRAIN	0-28	279	53
HOSE; RUBBER.PIPE	1-31	488	149
HOSE; RUBBER.TURBO TO INL PIPE	1-31	548	149
HOSE; RUBBER,TURBOCHARGER OUT	0-36	231	70
HOSE; WASHER	8-80	036	629
HOSE; WATER	8-45	063	613
HOSE; WATER.BY-PASS	0-32	002	60
HOSE; WATER.RAD INL	1-11	128	140
HOSE; WATER,RAD OUTLET	1-11	055	139
HOUSING & SCREW ASM; STRG UNIT	4-40	035	367
HOUSING & SEAL ASM; STRG UNIT	4-40	042	367
HOUSING ASM; VALVE STRG UNIT	4-40	050	367
HOUSING; CLU	2-20	434	211
HOUSING; FLYWHEEL	0-20	002	39
HOUSING; VALVE STRG UNIT	4-40	051	367
HUB; CLU.1ST & REV.2ND & 3RD	2-26	515	220
HUB; CLU.1ST TO REV	2-26	067	217
HUB; CLU.4TH & 5TH	2-26	021	216
HUB; CLU,6TH	2-26	121	217
HUB; FRT AXLE	4-11	017	333
HUB; RR AXLE	4-20	008	337
INSULATOR; ENG COVER	6-76	038	477
JACK ASM	9-01	193	642
JET; OIL,PISTON COOLING	0-12	056	18
JOINT ASM; BALL	7-20	118	500
JOINT; HOSE	1-40	369	154
JOINT; JAW.HOOK TO HOOK	5-15	148	409
JOINT; WASHER HOSE	8-80	040	629
JOURNAL ASM; PROP SHAFT	4-01	009	322
KEY; BLANK	7-30	011	504
KEY; CAM GEAR SET	0-14	012	28
KEY; DRIVE SHAFT	0-40	382	88
KEY; FEATHER.CLU SHAFT	2-01	128	185
KEY; OUTPUT SHAFT,TRANS SIDE P	2-81	031	240
KEY; SHAFT.OIL PUMP	4-42	008	371
KING PIN SET	4-10	003	327
KNOB	1-01	170	130
KNOB; AUDIO CONTROL	8-90	272	635
KNOB; CHANGE LEVER	2-35	001	229
KNOB; LVR.HTR CONT LVR	8-65	058	621
KNOB; RECLINING.FRT.SEAT	7-50	024	533
KNOB; SW.HTR CONT LVR	8-65	037	621
KNOB; VOL	8-90	268	635
KNUCKLE; FRT AXLE	4-10	002	327
LABEL; BEAM & PASS	7-10	306	493
LAMP ASM; HEAD	8-01	001	547
LAMP ASM; ROOM	8-05	001	555
LAMP ASM; RR COMB	8-03	001	551
LAMP ASM; SIDE TURN SIGNAL	8-01	327	548
LAMP; LICENSE PLATE	8-03	049	552
LAMP; MARKER	8-01	256	548
LAMP; TURN SIGNAL	8-01	331	548
LENS; BACKUP.RR COMB LAMP	8-03	022	551
LENS; LICENSE PLATE LAMP	8-03	050	552
LENS; MARKER LAMP	8-01	083	547
LENS; MIRROR.OUTSIDE	7-20	133	500
LENS; MIRROR.SIDE UNDER	7-20	135	501
LENS; ROOM LAMP	8-05	003	555
LENS; TAIL & STOP,RR COMB LAMP	8-03	014	551

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
LENS; TURN SIGNAL	8-03	013	551
LEVER ASM; HTR & A/C CONT	8-65	009	621
LEVER ASM; INSIDE,FRT DOOR	6-32	033	452
LEVER KIT; RELEASE,CLU	2-01	172	186
LEVER; CHANGE	2-35	008	229
LEVER; CM/SHF,PARKING BRK	3-08	040	256
LEVER; ENG CONT	0-35	190	65
	1-01	002	130
LEVER; FRT LID	6-05	558	434
LEVER; HTR UNIT	8-60	048	617
LEVER; LOCK,CAB STAY	5-15	085	407
LEVER; MODE LEVER	8-73	037	624
LEVER; RELAY	2-30	006	224
LEVER; RELAY,6TH	2-30	372	226
LEVER; SEAT ADJ	7-50	471	536
LEVER; SELECT	2-35	441	230
LEVER; SELECT,EXTERNAL	2-30	167	224
LEVER; SELECT,INTERNAL	2-30	163	224
LEVER; SHIFT,EXTERNAL	2-30	128	224
LEVER; SHIFT,INTERNAL	2-30	130	224
LEVER; SHIFT,STARTER	0-65	028	116
LEVER; SHUTTER,BLOWER UNIT	8-73	039	624
LEVER; SHUTTER,HTR UNIT	8-60	034	617
	8-60	035	617
	8-60	052	617
	8-60	056	617
LEVER; TORSION BAR	5-15	001	407
LID; FUSE BOX	7-40	341	512
LID; HEADER SHELF	7-43	330	524
LID; PARCEL BOX	7-50	533	536
LIMITER; FUEL PRESS	0-40	289	88
LINER SET; ENG CYL	0-12	002	18
LINER; C/BL	0-12	004	18
LINER; DOOR LWR	6-35	165	455
LINING SET; FRT BRK,OVER SIZE	3-01	005	247
LINING SET; FRT BRK,STANDARD	3-01	004	247
LINING SET; RR BRK,OVER SIZE	3-05	003	251
LINING SET; RR BRK,STANDARD	3-05	002	251
LINING; BLOWER UNIT	8-73	034	624
LINING; FRT BRK SHOE,OVER SIZE	3-01	003	247
LINING; FRT BRK SHOE,STANDARD	3-01	002	247
LINING; HD	6-66	001	467
LINING; RR BRK SHOE,OVER SIZE	3-05	006	251
LINING; RR BRK SHOE,STANDARD	3-05	005	251
LINK ASM; ENG CONT	1-01	080	130
LINK; DOOR LOCK,OUTSIDE	6-32	036	452
LINK; DRAG	4-33	009	353
LINK; FRT WIPER	8-80	002	628
LOCK ASM; CAB	5-15	133	408
LOCK ASM; FRT LID	6-05	550	433
LOCK ASM; SAFETY,CAB TILT	5-15	238	410
LOCK ASM; SEAT	7-50	365	536
LOCK ASM; STRG	4-31	102	349
LOCK; DOOR,FRT DOOR	6-32	008	452
LOCK; HEADER SHELF	7-43	340	524
MAGNET; TRANS CASE	2-20	316	210
MANIFOLD; EXHAUST	0-27	001	51
MARK; ISUZU	7-01	001	491
MAT; FLOOR	6-75	002	475
MAT; FLOOR REAR	6-75	015	475
MAT; FLOOR,CENTER	6-75	081	475
MAT; SILENCER,CAB BACK	6-84	006	485
MEMBER; CAB MTG RR	5-10	173	402
MEMBER; CROSS,END	5-01	130	398
MEMBER; CROSS,SPARE TIRE	5-30	015	415
MEMBER; CROSS,T/M	5-01	530	399
MEMBER; CROSS,TRUNNION RR	5-01	077	397
MEMBER; CROSS,1ST	5-01	002	396
MEMBER; CROSS,2ND	5-01	019	396
MEMBER; CROSS,3RD	5-01	034	397
MEMBER; CROSS,4TH	5-01	344	399
MEMBER; CROSS,5TH	5-01	345	399
METAL SET; CONN ROD,STANDARD	0-15	073	34
METAL SET; CRANKSHAFT,STANDARD	0-15	010	33
METAL; CM/SHF	0-14	037	28
METER COMPL; CLUSTER	8-21	001	587
METER SUB ASM	8-21	081	587
MIRROR ASM; OUTSIDE	7-20	014	498
MIRROR ASM; OUTSIDE RR VIEW	7-20	013	498
MIRROR ASM; UNDER	7-20	029	498
MIRROR; ROOM	7-20	001	498
MIRROR; UNDER	7-20	030	498
MOLDING; WINDSHIELD	6-07	003	437
MOLDING; WINDSHIELD,LWR	6-07	005	437
MOTOR ASM; FAN,BLOWER UNIT	8-73	010	624
MOTOR ASM; FRT WASHER TANK	8-80	030	628
MOTOR ASM; FRT WINDSHIELD WIPE	8-80	046	629
NIPPLE; AIR CYL,TRANS SIDE PTO	2-81	045	240
NIPPLE; GREASE,CENTER BRG	4-01	025	323
NOZZLE ASM; INJ	0-40	031	85
NOZZLE; DEFROSTER	8-40	012	610
NOZZLE; DEFROSTER,SIDE	8-40	017	610
NOZZLE; WINDSHIELD WASHER	8-80	039	629
NUT	3-05	081	251
	3-05	199	253
	5-15	170	409
NUT; ACCEL SENSOR	1-01	528	131
NUT; ADJ SCREW LK BRIDGE	0-14	062	28
NUT; ADJ,DIFF CAGE	4-25	069	344
NUT; AIR DUCT	1-31	049	146
NUT; BALL JOINT,SELECT WIRE	2-37	076	237
NUT; BRG,RR HUB	4-20	020	337
NUT; CAP	3-46	110	288
	7-50	630	537
NUT; CAP,SUB STAY	7-20	145	501
NUT; CASE	8-73	003	624
NUT; CASE,HTR UNIT	8-60	072	618
NUT; CHANGE LEVER	2-35	041	229
NUT; CHECKER	6-30	040	445
NUT; COVER,GENERATOR	0-66	138	120

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
NUT; DIFF CAGE SETTING	4-25	085	344
NUT; DRIVING PINION	4-25	037	342
NUT; END PLATE TO SHELL, AIR MA	3-33	015	278
NUT; END PLATE TO SHELL, CLU BO	2-07	020	198
NUT; EXH PIPE, FRT	1-50	318	174
NUT; EXH PIPE, TURBOCHARGER	0-36	019	68
NUT; FLANGE	3-05	086	252
NUT; FLANGE, SHOE HOLD	3-01	111	248
NUT; FLANGE, SPLINED	4-01	051	323
NUT; FRT HUB BRG	4-11	010	333
NUT; FUSIBLE LINK	0-61	226	112
NUT; GEAR	0-38	014	75
NUT; LEVER	1-01	124	130
NUT; LK, JOINT BALL	4-33	021	353
NUT; MAINSHAFT END	2-26	260	218
NUT; MIRROR	7-20	021	498
NUT; MIRROR STAY	7-20	058	499
NUT; MUD GUARD	6-47	032	461
NUT; PITMAN ARM	4-33	004	353
NUT; POP	6-20	649	442
NUT; PULLEY, GEN	0-66	018	119
NUT; PUSH ROD, CLU BOOSTER	2-07	028	198
	2-07	046	200
NUT; PUSH ROD, SHELL, AIR MASTER	3-33	037	279
NUT; RECTIFIER, GEN	0-66	027	120
NUT; SHIFT WIRE TO LEVER	2-36	221	234
NUT; SPIRE	6-05	650	434
NUT; STAND	7-50	398	536
NUT; STAY	7-20	063	499
NUT; STRG COLUMN	4-31	070	349
NUT; STRG UNIT	4-31	096	349
NUT; SUPPORT	2-01	105	185
NUT; SUPPORT PLATE	3-08	037	256
NUT; TIE ROD ARM	4-10	059	330
NUT; TIE ROD END	4-10	066	330
NUT; TILT ADJ	7-50	518	536
NUT; TRANS CONT, SELECT	2-37	072	237
NUT; TURBOCHARGER	0-36	011	68
NUT; U BOLT	4-50	193	376
NUT; U-BOLT, RR SPR	4-60	005	383
NUT; UNION, AIR PIPE	3-70	244	304
NUT; UNION, OIL PIPE	3-52	024	292
	3-55	046	296
NUT; WHEEL PIN, FRT AXLE	4-11	027	333
NUT; WHEEL PIN, RR AXLE	4-20	010	337
NUT; WHEEL, FRT AXLE	4-80	003	391
NUT; WHEEL, INNER, RR AXLE	4-80	005	391
NUT; WHEEL, RR AXLE	4-80	004	391
NUT; WIPER ARM TO WIPER PIVOT	8-80	010	628
NUT; WIPER MOTOR LINK	8-80	051	629
OVERHAUL KIT; SUPPLY PUMP	0-40	424	88
PAD; PEDAL, ACCEL	1-01	014	130
PAD; TRIM, FRT DOOR	6-35	001	455
PAD; U BOLT, RR SPR	4-60	009	383
PAN ASM; OIL	0-13	001	24
PANEL ASM; BODY SIDE	6-20	100	440
PANEL ASM; FRT	6-05	001	429
PANEL ASM; GARNISH	7-40	010	509
PANEL; BACK INNER	6-80	049	481
PANEL; BACK OUTER	6-80	001	481
PANEL; CANT RAIL SIDE	6-20	015	440
PANEL; CLOSING, FRT PILLAR	6-20	003	440
PANEL; CLUSTER	8-21	002	587
PANEL; FLOOR, SIDE	6-70	023	469
PANEL; FRONT, OUTER	6-05	540	433
PANEL; FRONT, SIDE	6-05	016	429
PANEL; HEADER, ROOF	6-60	080	465
PANEL; INST	7-40	001	509
PANEL; INST CENTER	7-40	697	513
PANEL; ROOF	6-60	001	465
PANEL; RR PILLAR, INNER	6-20	246	440
PANEL; SIDE	6-47	139	462
PANEL; SIDE CANTRAIL	6-20	483	441
PANEL; SIDE FRT PILLAR	6-20	481	441
PANEL; SIDE RR PILLAR	6-20	482	441
PANEL; SIDE SILL, CAB	6-20	092	440
PATCH	6-70	220	470
PATCH ASM; SAFTY HOOK	6-70	539	471
PATCH; ASSIST GRIP	6-20	434	441
PATCH; CLOSING, FRT PILLAR	6-20	401	441
PATCH; HINGE	6-05	655	434
PATCH; STRIKER	6-05	656	434
PEDAL; BRK	3-10	002	260
PEDAL; CLU	2-03	001	189
PIECE; DIST	4-50	192	376
PIECE; DIST, AIR DUCT	1-31	245	148
PIECE; SLIDING	0-33	081	63
PIN	6-30	043	445
PIN ASM; SAFETY	5-15	229	409
PIN; ADJ, CAB STAY	5-15	108	408
PIN; ADJ, STAY LOCK	5-10	335	402
PIN; CLU PEDAL	2-03	009	189
PIN; CRANKCASE	0-12	212	19
PIN; CROSS, DIFF PINION	4-25	022	341
PIN; FRT SPR, FRT	4-50	197	376
PIN; GEAR SETTING	0-15	034	33
PIN; HSG, P/S	4-42	025	371
PIN; HYD PISTON, AIR MASTER	3-33	026	278
PIN; JAW JOINT	2-01	154	186
PIN; JOINT, ACCEL PEDAL TO BRKT	1-01	230	131
PIN; JOINT, BRK PEDAL LINK	3-10	207	261
PIN; JOINT, CAB STAY	5-15	083	407
	5-15	103	407
PIN; JOINT, RELAY LEVER	3-11	051	264
PIN; KNOCK, LEVER	3-08	041	256
PIN; LINK	7-50	529	536
PIN; PISTON	0-15	083	34
PIN; PISTON, AIR CMPR	0-39	025	79
PIN; RELEASE LEVER	2-01	096	184
PIN; RR SPR	4-60	180	383

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
PIN; SAFETY LOCK SPRING, CAB ST	5-15	228	409
PIN; SELECT CABLE	2-36	225	234
PIN; SNAP, BRK PEDAL	3-10	080	260
PIN; SNAP, CAB LOCK ROD	5-15	141	408
PIN; SNAP, CAB STAY TO CAB	5-15	100	407
PIN; SNAP, STAY	1-10	059	134
PIN; SPLIT, CAB STAY	5-10	103	401
PIN; SPLIT, SHOE HOLD	3-01	114	249
	3-05	163	253
PIN; SPR	2-07	013	197
PIN; SPR, SHIFT	2-30	129	224
PIN; SPR, SHIFT ARM, TRANS SIDE	2-81	019	239
PIN; SPR, STOPPER	2-30	273	225
PIN; SPR, TRANS SIDE PTO	2-81	015	239
PIN; SPRING	0-39	088	80
	2-30	551	226
	2-35	530	230
PIN; STRAIGHT	0-12	061	19
	2-01	140	186
	2-20	429	211
	3-33	031	278
PIN; WHEEL, FRT AXLE	4-11	015	333
PIN; WHEEL, RR AXLE	4-20	009	337
PIPE ASM; AIR TANK	3-20	024	270
PIPE ASM; FUEL, LEAK OFF	0-42	258	91
PIPE ASM; OIL, SUCTION	4-36	002	361
PIPE ASM; WATER, TURBOCHARGER R	0-31	216	57
PIPE; AIR	1-31	157	147
	3-70	034	304
PIPE; AIR, AIR CMPR SUCTION	0-38	031	75
PIPE; AIR, AIR TANK TO UNION	3-70	242	304
	3-75	001	308
	3-77	087	312
PIPE; AIR, CHARGE	0-38	049	76
PIPE; AIR, FLEX HOSE TO CLU BOO	2-05	049	194
PIPE; AIR, UNION TO AIR MASTER	3-75	087	309
	3-77	118	312
PIPE; AIR, UNION TO MAG VLV	3-70	251	304
PIPE; AIR, UNION TO UNION	3-75	005	308
PIPE; BREATHER	2-30	559	227
PIPE; BRK, RR AXLE	3-55	013	296
PIPE; BYPASS	0-31	015	57
PIPE; EXH	1-50	001	172
PIPE; FUEL	0-40	226	88
	1-41	039	160
PIPE; FUEL, DEL & RET	1-41	350	164
PIPE; FUEL, FEED, FRT	1-41	174	162
PIPE; FUEL, NOZZLE LEAK OFF	0-40	063	85
PIPE; FUEL, RETURN	1-41	047	161
PIPE; HYDRAULIC UNIT	3-55	138	297
PIPE; INJ NO. 1	0-40	016	85
PIPE; INJ NO. 2	0-40	017	85
PIPE; INJ NO. 3	0-40	018	85
PIPE; INJ NO. 4	0-40	019	85
PIPE; INJ, C/R	0-40	210	87
PIPE; INL	0-25	138	48
PIPE; OIL DRAIN, TURBOCHARGER	0-36	133	69
PIPE; OIL, BACKWARD, FRT BRK	3-01	076	248
PIPE; OIL, BRK, HYD UNIT	3-52	132	293
PIPE; OIL, FLEX HOSE TO CONNECT	2-05	104	195
PIPE; OIL, FLEX HOSE TO FLEX HO	4-35	268	358
PIPE; OIL, FWD, FRT BRK	3-01	075	248
PIPE; OIL, INLET	4-35	371	358
PIPE; OIL, P/S UNIT TO NIPPLE	4-35	044	357
PIPE; OIL, P/S UNIT TO OIL TANK	4-35	046	357
PIPE; OIL, RR BRK	3-05	036	251
PIPE; OIL, TURBOCHARGER FEED	0-52	063	99
PIPE; OIL, UNION TO FRT FLEX HO	3-52	018	292
PIPE; OIL, UNION TO RR FLEX HOS	3-55	039	296
PIPE; OIL, UNION TO UNION	3-52	013	292
	3-55	033	296
PIPE; PCV, FLYWHEEL HSG	0-20	464	40
PIPE; SUCTION	0-32	010	60
PIPE; SUCTION, P/S	4-35	102	358
PIPE; TURBO TO CHARGE AIR COOL	1-31	487	149
PIPE; VAC, UNION TO MAG VLV	3-70	217	304
PIPE; WATER OUTLET	0-31	049	57
PIPE; WATER, AIR CMPR, IN	0-32	089	60
PIPE; WATER, AIR CMPR, OUT	0-32	092	60
PIPE; WATER, HTR	0-50	208	93
PIPE; WATER, TURBOCHARGER IN	0-36	137	70
PIPE; WATER, TURBOCHARGER OUT	0-36	115	69
PISTON	0-15	063	34
PISTON ASM; GOVERNOR	3-46	114	289
PISTON ASM; HYDRAULIC	3-33	020	278
PISTON KIT; AIR DRYER	3-46	003	287
PISTON; AIR CMPR	0-39	021	79
PISTON; CLU BOOSTER	2-07	007	197
PISTON; FRT WHEEL CYL	3-01	024	247
PISTON; LWR, BRK VLV	3-34	028	282
PISTON; REAR WHEEL CYL	3-05	102	252
PISTON; RR WHEEL CYL	3-05	099	252
PISTON; SHELL, CLU BOOSTER	2-07	026	198
PISTON; UPR VLV, CLU BOOSTER	2-07	044	199
PISTON; UPR, BRK VLV	3-34	020	282
PIVOT ASM; FRT WIPER	8-80	003	628
PIVOT; SIDE MIRROR	7-20	053	499
PLATE ASM; PRESSURE, CLU	2-01	002	184
PLATE ASM; THRUST	4-42	024	371
PLATE; ADJ	0-33	080	63
PLATE; AIR CMPR	0-39	014	79
PLATE; BACK, FRT BRK	3-01	067	248
PLATE; BACK, RR BRK	3-05	026	251
PLATE; BAFFLE	3-20	238	273
PLATE; BATTERY	5-20	030	413
PLATE; BOSS, EXH MANIF	0-27	215	51
PLATE; CAUTION, CAB	7-10	035	493
PLATE; CAUTION, FUSE BOX	7-10	049	493
PLATE; CAUTION, SPARE TIRE	7-10	006	493
PLATE; COVER	2-35	264	230

https://truckmanualshub.com/

ALPHABETICAL INDEX

PLATE; END,AI - REPAIR KIT; A

PART NAME	FIG	KEY	PAGE
PLATE; END,AIR MASTER	3-33	007	278
PLATE; END,CLU BOOSTER	2-07	045	200
PLATE; FILTER,OIL TANK	4-35	015	356
PLATE; FLEX HOSE	3-52	082	292
PLATE; FLYWHEEL HSG	0-20	465	40
PLATE; GOVERNOR	3-46	111	288
PLATE; HTR UNIT	8-60	073	618
	8-60	096	618
PLATE; INL COVER	0-25	221	48
PLATE; INTER LOCK	2-30	624	227
PLATE; LK,ADJ NUT	4-25	088	345
PLATE; LK,CUSHION RUBBER,FRT	0-22	029	43
PLATE; LK,LEVER SUPPORT	2-01	106	185
PLATE; LK,RR WHEEL CYL	3-05	055	251
PLATE; LK,SPR PIN	4-50	202	376
PLATE; LOCK,DRIVEN GEAR	2-25	053	213
PLATE; PISTON,SHELL,AIR MASTER	3-33	033	279
PLATE; PRESSURE	2-01	084	184
PLATE; STEP	6-20	103	440
PLATE; STRAP	2-01	089	184
PLATE; SUPPORT,PARKING BRK	3-08	032	256
PLIER	9-01	115	642
PLUG	1-41	345	164
PLUG & SEAL ASM; STRG UNIT	4-40	056	368
PLUG; C/BL,SIDE	0-12	335	20
PLUG; CABLE,PTO	6-70	536	471
PLUG; CAP,AIR MASTER	3-33	011	278
PLUG; CRANK CASE	0-12	406	20
PLUG; CYL HD	0-11	025	13
PLUG; CYL HD COVER	0-10	082	7
PLUG; DRAIN	1-10	051	134
PLUG; DRAIN,AXLE CASE	4-20	058	338
PLUG; DRAIN,OIL	0-13	004	24
PLUG; DRAIN,SEDIMENTER	1-45	007	168
PLUG; DUMMY HOLE	6-05	546	433
PLUG; END PLATE,CLU BOOSTER	2-07	016	198
PLUG; FILLER,STRG UNIT	4-40	009	366
PLUG; GLOW PLUG HOLE	0-11	106	14
PLUG; HOLE	6-35	166	455
PLUG; HOLE,CONT UNIT	8-26	491	597
PLUG; HSG STRG UNIT	4-40	052	367
PLUG; IDLE SHAFT,TRANS SIDE PT	2-81	049	241
PLUG; KNUCKLE	4-10	009	327
PLUG; OIL DRAIN	2-20	430	211
PLUG; OIL FILLER,AXLE CASE	4-20	063	338
PLUG; OIL FILLER,TRANS	2-20	417	210
PLUG; RUBBER,FLOOR	6-78	075	479
PLUG; SENSOR	1-45	037	168
PLUG; SLEEVE YOKE	4-01	104	324
PLUG; SOCKET,HEADLAMP	8-01	382	548
PLUG; SW	0-31	014	57
PLUG; SW HOLE	2-30	391	226
PLUG; SWITCH	8-26	420	597
PLUG; WATER DRAIN	0-12	007	18
PLUG; WATER OUTLET PIPE	0-31	058	57
PLUNGER; BRK VLV	3-34	014	282
POCKET; CENTER CLUSTER	7-40	054	510
POWER TAKE OFF ASM; TRANS SIDE	2-81	001	239
PROTECTOR; CAP,AIR MASTER	3-33	012	278
PROTECTOR; END PLATE,CLU BOOST	2-07	015	197
PROTECTOR; FRT	6-05	226	430
PROTECTOR; HARNESS	8-10	453	568
PROTECTOR; HEAT	1-50	005	172
PROTECTOR; HEAT,EXH ADAPTER	0-36	465	70
PROTECTOR; HEAT,EXH MANIF	0-27	003	51
PROTECTOR; HEAT,TURBOCHARGER	0-36	032	68
PROTECTOR; OIL PIPE,FRT BRK	3-01	101	248
PROTECTOR; PIPE	0-13	380	25
PROTECTOR; RR BRK PIPE	3-05	141	253
PROTECTOR; SPEED SENSOR	8-26	469	597
PULLER; FUSE	8-10	041	567
PULLEY; CR/SHF DAMPER	0-15	056	34
PULLEY; FAN DRIVE	0-15	061	34
PULLEY; GEN	0-66	019	119
PUMP ASM; INJ	0-40	001	85
PUMP ASM; OIL	0-51	001	97
PUMP ASM; OIL,P/S	4-36	001	361
PUMP ASM; TIRE	9-01	227	642
PUMP ASM; WATER	0-30	002	55
PUMP; GREASE	9-01	230	642
RADIATOR ASM	1-10	001	134
RADIO	8-90	001	634
RAIL ASM; COMMON	0-40	211	87
RECTIFIER; GEN	0-66	010	119
REFLECTOR; REFLEX	6-20	657	442
REGULATOR ASM; VOLTAGE,GEN	0-66	006	119
REGULATOR; WINDOW,FRT DOOR	6-31	019	448
REINFORCEMENT ASM; AIR INT DUC	6-70	538	471
REINFORCEMENT; DOOR STRIKER	6-20	428	441
REINFORCEMENT; FLOOR CENTER	6-70	554	472
REINFORCEMENT; FLOOR SIDE	6-70	546	471
REINFORCEMENT; GRIP,ASSIST	6-20	665	442
REINFORCEMENT; HINGE	6-20	007	440
REINFORCEMENT; INST PANEL	7-40	066	510
REINFORCEMENT; MIRROR	6-60	148	465
REINFORCEMENT; MTG FRT,RR	6-70	563	472
REINFORCEMENT; MTG,FRT	6-70	541	471
REINFORCEMENT; ROOF PANEL,FRT	6-60	023	465
REINFORCEMENT; ROOM LAMP	6-60	146	465
REINFORCEMENT; SEAT BELT	6-70	373	470
REINFORCEMENT; SILL SIDE	6-78	182	479
RELAY; BLOWER MOTOR,HTR	8-25	317	593
RELAY; FUSE BOX	8-10	693	569
RELAY; KEY ON	8-25	610	593
RELAY; MAIN	8-28	531	606
RELAY; PTO MAIN	8-25	606	593
RELAY; STARTER	0-60	010	106
RELAY; STOP LAMP	8-28	022	605
RELAY; WIPER INTERVAL	8-28	540	606
REPAIR KIT; AIR DRYER	3-46	002	287

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
REPAIR KIT; AIR MASTER	3-33	001	278
REPAIR KIT; BRK VLV	3-34	002	282
REPAIR KIT; CLU BOOSTER	2-07	001	197
REPAIR KIT; CLU M/CYL	2-08	002	203
REPAIR KIT; OIL PUMP	4-42	001	371
REPAIR KIT; STRG UNIT,2 YEAR	4-40	002	366
RESISTOR; BLOWER UNIT	8-73	104	625
REST; FOOT	6-76	020	477
RETAINER	7-40	626	512
RETAINER; BEARING,STARTER	0-65	045	116
RETAINER; BRG	2-20	610	211
RETAINER; CENTER BRG.1ST	4-01	024	323
RETAINER; COVER	0-10	127	7
	6-05	602	434
RETAINER; FRT	0-20	102	39
RETAINER; HEAD LINING	6-66	172	467
RETAINER; MUD COVER	6-47	079	461
RETAINER; PILOT BRG.PINION	4-25	061	343
RETAINER; PISTON,CLU BOOSTER	2-07	010	197
RETAINER; PLATE,BRK VLV	3-34	055	283
RETAINER; POPPET	2-07	062	200
RETAINER; ROTOR,GEN	0-66	015	119
RETAINER; STRG UNIT	4-40	024	366
RETAINER; VLV,BRK VLV	3-34	026	282
	3-34	034	282
RING KIT; PISTON,AIR CMPR	0-39	020	79
RING SET; PISTON,STANDARD	0-15	068	34
RING; BACKUP,STRG UNIT	4-40	011	366
RING; BLOCK,2ND & 3RD	2-26	041	216
RING; BLOCK,4TH & 5TH	2-26	019	216
RING; BLOCK,6TH	2-26	508	220
RING; BOOT	2-35	529	230
RING; INSIDE,3RD & 2ND	2-26	501	220
RING; MIRROR	7-20	132	500
RING; OUTSIDE,3RD & 2ND	2-26	500	220
RING; RET,CLU BOOSTER	2-07	012	197
RING; RET,EXH,BRK VLV	3-34	058	283
RING; RET,OIL PUMP	4-42	014	371
RING; SIDE,DISC WHEEL	4-80	031	391
RING; SNAP,AIR DRYER	3-46	007	287
RING; SNAP,BEARING	2-26	335	219
RING; SNAP,BODY	2-08	020	203
RING; SNAP,BRG INNER	2-26	266	218
RING; SNAP,BRG OUTER	2-26	273	218
RING; SNAP,CLU HUB	2-26	018	216
RING; SNAP,COUNTER FRT BRG	2-26	093	217
RING; SNAP,COUNTER SHAFT,RR EN	2-26	300	218
RING; SNAP,HUB	4-11	021	333
RING; SNAP,HUB SEAL,RR AXLE	4-20	043	338
RING; SNAP,JOURNAL,PROP SHAFT,	4-01	019	322
RING; SNAP,KNUCKLE PLUG	4-10	011	327
RING; SNAP,PILOT BRG	4-25	066	344
RING; SNAP,PISTON PIN	0-15	126	34
RING; SNAP,PISTON,AIR CMPR	0-39	023	79
RING; SNAP,TORSION BAR	5-15	015	407
RING; SNAP,3RD GEAR	2-26	028	216
RIVET; LINING,FRT BRK	3-01	007	247
RIVET; LINING,RR BRK	3-05	007	251
ROD ASM; CAB LOCK,HOOK TO HOOK	5-15	276	410
ROD ASM; CONN	0-15	084	34
ROD ASM; CONN,AIR CMPR	0-39	024	79
ROD ASM; PUSH,BRK	3-10	159	261
ROD ASM; PUSH,CLU	2-03	019	189
ROD END; TIE ROD	4-10	061	330
ROD; GEAR SHIFT,LOW,REV,2ND &	2-30	625	227
ROD; GEAR SHIFT,4TH,5TH & 6TH	2-30	626	227
ROD; GEAR SHIFT,6TH SUB	2-30	627	227
ROD; GEAR SHIFTER,TRANS SIDE P	2-81	020	239
ROD; HOOK TO HOOK	5-15	142	408
ROD; LINK	2-30	549	226
ROD; PULL	3-10	273	261
ROD; PUSH,AIR MASTER	3-33	030	278
ROD; PUSH,CLU	2-03	250	189
ROD; PUSH,CLU BOOSTER	2-07	002	197
	2-07	024	198
ROD; TENSION,BATTERY	5-20	045	413
ROD; TIE	4-10	081	331
ROTOR; GEN	0-66	002	119
RUBBER; CLAMP,U-BOLT,FRT SPR	4-50	188	376
RUBBER; CONSOLE,FRT	7-45	100	527
RUBBER; COUPLING	0-87	056	125
RUBBER; CUSHION	1-10	267	136
	1-31	411	148
	1-50	226	174
	2-35	112	229
	5-10	064	401
	6-05	547	433
	7-50	536	536
RUBBER; CUSHION,CENTER BRG.1ST	4-01	022	323
RUBBER; CUSHION,DUCT	1-31	316	148
RUBBER; CUSHION,ENG MTG,RR	0-22	052	43
RUBBER; CUSHION,POWER STRG PIP	4-35	153	358
RUBBER; CUSHION,RAD MTG	1-10	073	134
RUBBER; ENG FOOT,FRT	0-22	001	43
RUBBER; FRT WIPER BLADE	8-80	009	628
RUBBER; MTG,COVER	0-10	124	7
RUBBER; MTG,FAN GUIDE	1-10	117	135
RUBBER; MTG,HD COVER,OUTER	0-10	043	7
RUBBER; SEAL OIL	0-13	123	25
RUBBER; SHUTTER	6-31	227	449
SCREW	2-20	611	211
	7-43	071	523
SCREW & SPRING ASM; AIR DRYER	3-46	112	288
SCREW; ADJ,BRIDGE	0-14	061	28
SCREW; ADJ,FRT WHEEL CYL	3-01	025	247
SCREW; ADJ,PARKING BRK SHOE	3-08	023	256
SCREW; ADJ,ROCKER ARM	0-14	081	29
SCREW; ADJ,RR WHEEL CYL	3-05	101	252
SCREW; ADJ,SECTOR SHAFT,STRG U	4-40	023	366
SCREW; ANTENNA CABLE	8-90	010	634

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
SCREW: BLEEDER.FRT BRK	3-01	016	247
SCREW: BLEEDER.RR BRK	3-05	096	252
SCREW: BRKT	7-70	085	541
SCREW: BRKT TO WIPER MOTOR	8-80	076	629
SCREW; BRKT,OUTSIDE MIRROR	7-20	089	500
SCREW: CASE TO CASE	8-73	078	625
SCREW: CENTER POCKET	7-40	703	513
SCREW: CLUSTER POCKET	7-40	059	510
SCREW: COMB SW	8-25	003	592
SCREW; COVER	7-50	019	533
	8-90	036	634
SCREW: COVER TO CASE	8-73	014	624
SCREW: COVER.RECLINING	7-50	123	534
SCREW: DOOR STRIKER	6-32	018	452
SCREW; DOOR SW	8-25	030	592
SCREW: FACIA HARNESS CLIP	8-15	127	579
SCREW: FENDER LWR	6-05	385	431
SCREW: FENDER TO CAB	6-05	472	432
SCREW: FOOT REST	6-76	025	477
SCREW; FUSE BOX	8-10	028	567
SCREW: HEADLAMP	8-01	020	547
SCREW: HORN SPR CONTACT	4-30	006	347
SCREW: HTR UNIT	8-60	030	617
	8-60	032	617
SCREW; IGN SW	4-31	105	350
SCREW: KNOB	7-50	228	535
SCREW: LEVER	8-73	032	624
SCREW: LICENSE PLATE LAMP	8-03	054	552
SCREW: LK SPR FRT WHEEL CYL	3-01	121	249
SCREW; LOCK SPRING,RR WHEEL CY	3-05	110	252
SCREW: MARKER LAMP	8-01	082	547
SCREW: MIRROR	7-20	051	499
SCREW: MIRROR TO BODY	7-20	002	498
SCREW: RESISTOR	8-73	105	625
SCREW; ROOM LAMP	8-05	004	555
SCREW: RR COVER.STARTER	0-65	041	116
SCREW: RR END COVER	0-66	043	120
SCREW: SILL SIDE	6-78	183	479
SCREW: SPEAKER	8-90	049	634
SCREW; SUN VISOR	7-43	034	522
SCREW: TURN SIGNAL	8-01	355	548
SCREW: UNDER MIRROR	7-20	032	498
SCREW: UPR VLV TO END PLATE.CL	2-07	038	199
SCREW: VALVE	8-40	476	611
SEAL	3-11	343	266
	8-26	380	597
SEAL: A-POST UPR.FRT SIDE PANE	6-05	018	429
SEAL: BODY.METAL	6-60	099	465
SEAL: BRK PEDAL	3-10	093	260
SEAL; BRKT	3-77	471	312
	7-20	181	501
SEAL: COVER	7-40	718	513
SEAL: DOOR TRIM	6-35	013	455
SEAL: DOOR.MAIN.CAB SIDE	6-35	036	455
SEAL; DUST	2-01	244	187
SEAL: DUST	3-20	086	271
SEAL: FENDER	6-05	525	432
SEAL: FLOOR.HOLE	6-76	404	477
SEAL: FRT LID	6-05	545	433
SEAL; FRT PANEL	6-05	533	432
SEAL: FRT SIDE PANEL	6-05	019	429
SEAL: HARNESS	8-15	530	583
SEAL: HOLE	6-84	109	485
	8-15	538	584
SEAL; INST PANEL	7-40	378	512
SEAL: LOCATION HOLE	6-35	183	455
	6-76	370	477
SEAL: MUD COVER	6-47	192	462
SEAL: OIL.CENTER BRG	4-01	021	323
SEAL; OIL,CR/SHF,FRT	0-20	103	39
SEAL: OIL.CR/SHF.RR	0-20	175	40
SEAL: OIL.END PLATE.CLU BOOSTE	2-07	052	200
SEAL: OIL.FINAL PINION	4-25	100	345
SEAL: OIL.FRT COVER.T/M	2-20	033	209
SEAL; OIL,FRT HUB	4-11	028	333
SEAL: OIL.KING PIN	4-10	007	327
SEAL: OIL.OIL PUMP	4-42	019	371
SEAL: OIL.OUTPUT SHAFT,TRANS S	2-81	033	240
SEAL: OIL.PLUG.STRG UNIT	4-40	067	368
SEAL; OIL,RR COVER	2-20	090	209
SEAL: OIL.RR HUB.INNER	4-20	038	338
SEAL: OIL.RR HUB.OUTER	4-20	016	337
SEAL: OIL.SELECT	2-30	294	225
SEAL: RAD GRILLE	6-03	140	423
SEAL; RING,HSG STRG UNIT	4-40	046	367
SEAL: ROLL OVER & FLOAT VALVE	1-40	159	154
SEAL: RUBBER.STRG COLUMN	4-31	231	350
SEAL: SECTOR SHAFT.STRG UNIT	4-40	007	366
SEAL: SLEEVE	4-01	128	325
SEAL; VLV GUIDE	0-14	072	29
SEAL: WAIST.FRT DOOR	6-31	072	449
SEAL: WATER	8-40	225	611
SEAL; WATER.DOOR PAD	6-35	061	455
SEAL: WINDSHIELD	6-07	018	437
SEAT; BALL,CHANGE LEVER	2-35	062	229
SEAT: CHANGE LEVER	2-35	021	229
SEAT: LEAF SPR.FRT	4-55	020	380
SEAT: LEAF SPR.RR MAIN	4-65	039	388
SEAT: OIL TANK	4-35	019	356
SEAT; RR SPRING,SUB	4-65	059	388
SEAT: SPR	0-14	071	29
	2-01	091	184
SEAT: VLV INSERT	0-11	005	12
SEDIMENTER: FUEL	1-45	001	168
SENSOR; ACCEL	1-01	243	131
SENSOR: AIR PRESS	3-75	175	309
SENSOR: AIRFLOW	1-30	256	143
SENSOR: CAM ANGLE	0-14	267	31
SENSOR: CRANK ANGLE	8-26	648	598
SENSOR; FUEL TEMP	0-40	205	87

https://truckmanualshub.com/

ALPHABETICAL INDEX

SENSOR; GLOW - SPRING; RETUR

PART NAME	FIG	KEY	PAGE
SENSOR; GLOW PLUG, THERMO	0-60	129	107
SENSOR; MAP	1-31	215	147
SENSOR; PRESS	0-40	290	88
SENSOR; PRESSURE	8-28	584	606
SENSOR; TEMP	1-31	368	148
SENSOR; THROTTLE POSITION	0-35	441	65
SENSOR; VEHICLE SPD	8-26	234	597
SHACKLE; FRT SUSP	4-50	183	376
SHACKLE; RR SPR	4-60	015	383
SHAFT ASM; STRG	4-31	002	349
SHAFT KIT; RET	4-42	013	371
SHAFT; AXLE, RR	4-20	025	337
SHAFT; BRK PEDAL	3-10	027	260
SHAFT; CAM, PARKING BRK	3-08	033	256
SHAFT; CLU	2-01	125	185
SHAFT; COUNTER	2-26	108	217
SHAFT; GEAR STARTER	0-65	010	115
SHAFT; IDLE GEAR	0-14	107	30
SHAFT; IDLE GEAR, TRANS SIDE PT	2-81	012	239
SHAFT; MAIN, 5TH & 6TH SPEED	2-26	518	220
SHAFT; OUTPUT, TRANS SIDE PTO	2-81	030	240
SHAFT; PROP	4-01	001	322
SHAFT; REV	2-26	132	218
SHAFT; ROCKER ARM	0-14	053	28
SHAFT; SECTOR, STRG UNIT	4-40	014	366
SHAFT; TOP GEAR, TRANS	2-26	001	216
SHEET	7-20	072	499
SHEET; MELTING, FLOOR	6-76	001	477
SHELL; CYL, AIR MASTER	3-33	039	279
SHELL; CYL, CLU BOOSTER	2-07	030	199
SHIM; COUNTER SHAFT BRG	2-26	325	218
SHIM; FINAL PINION	4-25	040	342
SHIM; FINAL PINION CAGE	4-25	049	343
SHOE; BRK, FRT	3-01	001	247
SHOE; BRK, RR	3-05	001	251
SHOE; PARKING BRK	3-08	017	256
SHROUD; PAD, STRG WHEEL	4-30	020	347
SHUTTER; BLOWER UNIT	8-73	023	624
SHUTTER; HTR UNIT, CENTER UPR	8-60	016	617
SHUTTER; HTR UNIT, SIDE	8-60	059	617
SILENCER ASM; EXH	1-50	012	172
SILENCER; AIR DRYER	3-46	093	288
SLEEVE	2-26	020	216
SLEEVE; NOZZLE HOLDER	0-11	057	13
SLEEVE; 1ST TO REV	2-26	068	217
SNAP; DOOR LOCK CYL	7-30	020	504
SNAP; FRT DOOR LOCK CONT ROD	6-32	051	453
SOCKET; SIDE, TURN	8-01	437	549
SOCKET; TURN SIGNAL	8-01	399	548
SPACER	0-36	414	70
	7-20	087	500
SPACER; ASSIST GRIP	7-43	076	523
SPACER; BRG, MAINSHAFT	2-26	288	218
SPACER; C/MBR, T/M	5-01	531	399
SPACER; CLU PEDAL	2-03	282	190
SPACER; EGR PIPE	0-57	765	101
SPACER; FAN	0-33	038	63
SPACER; HARNESS	0-60	915	107
SPACER; LEAF SPRING, FRT	4-55	019	380
SPACER; ROTOR, GEN	0-66	081	120
SPACER; WINDSHIELD GLASS	6-07	010	437
SPACER; 3RD C/MBR	5-01	202	398
SPACER; 4TH C/MBR	5-01	207	398
SPACER; 5TH C/MBR	5-01	545	399
SPEAKER; AUDIO	8-90	048	634
SPRING ASM; LEAF, FRT	4-50	002	375
SPRING ASM; LEAF, RR	4-60	001	383
SPRING ASM; LEAF, RR MAIN	4-65	001	387
SPRING ASM; LEAF, RR SUB	4-65	021	387
SPRING; AIR DRYER	3-46	084	288
SPRING; BRUSH HOLDER STARTER	0-65	021	115
SPRING; BULB, HEADLAMP	8-01	420	548
SPRING; CLU	2-01	092	184
SPRING; CLU BOOSTER	2-07	027	198
SPRING; CLU RETURN	2-01	148	186
SPRING; COIL	0-51	005	97
SPRING; CYL SHELL, AIR MASTER	3-33	032	279
SPRING; DIAPH, CLU BOOSTER	2-07	041	199
SPRING; HYD PISTON, AIR MASTER	3-33	024	278
SPRING; LEAF, NO 1, FRT	4-55	001	379
SPRING; LEAF, NO 1, RR MAIN	4-65	002	387
SPRING; LEAF, NO 1, RR SUB	4-65	022	387
SPRING; LEAF, NO 2, FRT	4-55	002	379
SPRING; LEAF, NO 2, RR MAIN	4-65	003	387
SPRING; LEAF, NO 2, RR SUB	4-65	023	387
SPRING; LEAF, NO 3, FRT	4-55	003	379
SPRING; LEAF, NO 3, RR MAIN	4-65	004	387
SPRING; LEAF, NO 3, RR SUB	4-65	024	388
SPRING; LEAF, NO 4, FRT	4-55	004	379
SPRING; LEAF, NO 4, RR MAIN	4-65	005	387
SPRING; LEAF, NO 4, RR SUB	4-65	025	388
SPRING; LEAF, NO 5, FRT	4-55	005	379
SPRING; LEAF, NO 5, RR MAIN	4-65	006	387
SPRING; LEAF, NO 5, RR SUB	4-65	026	388
SPRING; LEAF, NO 6, FRT	4-55	006	379
SPRING; LEAF, NO 6, RR MAIN	4-65	007	387
SPRING; LEAF, NO 6, RR SUB	4-65	027	388
SPRING; LEAF, NO 7, RR MAIN	4-65	008	387
SPRING; LEAF, NO 7, RR SUB	4-65	028	388
SPRING; LEAF, NO 8, RR MAIN	4-65	009	387
SPRING; LEVER	2-30	535	226
SPRING; LK, ADJ, FRT WHEEL CYL	3-01	120	249
SPRING; LK, RR WHEEL CYL, ADJ	3-05	103	252
SPRING; OIL PUMP	4-42	032	372
SPRING; PISTON, LWR, BRK VLV	3-34	022	282
SPRING; PISTON, UPR, BRK VLV	3-34	054	282
SPRING; POPPET VLV, CLU BOOSTER	2-07	035	199
SPRING; RETURN	2-01	098	184
SPRING; RETURN, ACCEL PEDAL	1-01	032	130
SPRING; RETURN, BRK PEDAL	3-10	010	260

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
SPRING; RETURN, BRK SHOE	3-05	009	251
SPRING; RETURN, CHANGE LEVER	2-35	110	229
SPRING; RETURN, CLU PEDAL	2-03	021	189
SPRING; RETURN, FRT BRK SHOE	3-01	029	247
SPRING; RETURN, LEVER	3-08	042	256
SPRING; RETURN, LOCK LEVER, CAB	5-15	231	409
SPRING; RETURN, PARKING BRK SHO	3-08	021	256
SPRING; RETURN, SAFETY ROD	5-15	112	408
SPRING; RETURN, SECONDARY, PARKI	3-08	020	256
SPRING; ROCKER SHAFT	0-14	095	30
SPRING; SHELL, CLU BOOSTER	2-07	023	198
SPRING; SHIFT FORK	2-01	119	185
SPRING; SHIFTER ROD, TRANS SIDE	2-81	026	240
SPRING; SYNCHRO, INDEX	2-26	516	220
SPRING; UPR, BRK VLV	3-34	024	282
SPRING; VLV	0-14	068	29
SPRING; VLV, BRK VLV	3-34	031	282
	3-34	035	282
STAND; DRIVER SEAT	7-50	042	533
STAND; HEEL, ACCEL PEDAL	1-01	015	130
STARTER ASM	0-60	001	106
STATOR; GEN	0-66	022	119
STAY ASM; CAB TILT	5-15	081	407
STAY; AIR TANK, MAIN	3-20	064	271
STAY; BRKT, TRANS CONT	2-37	061	237
STAY; CONT UNIT	0-60	749	107
STAY; FRT LID	6-05	552	433
STAY; LID	7-43	336	524
STAY; MIRROR SIDE	7-20	049	498
STAY; MUD GUARD	6-47	096	462
STAY; RAD	1-10	070	134
STEERING UNIT	4-31	001	349
STEM; EXHAUST	3-46	113	288
STEM; PARKING BRK	3-11	004	264
STIFFENER	0-20	624	41
STOPPER; CHECK VALVE	3-46	109	288
STOPPER; CLU PEDAL	2-03	004	189
STOPPER; CLU SW	2-03	131	189
STOPPER; ENG MTG RUBBER	0-22	076	43
STOPPER; HINGE	6-30	130	445
STOPPER; LID	7-43	364	525
STOPPER; RUBBER, DOOR INNER	6-31	031	448
STOPPER; SPRING	2-30	631	227
STOPPER; SUB SPR	5-01	103	398
STRAINER; OIL TANK, P/S	4-35	005	356
STRAINER; OIL, OIL PUMP	0-51	042	97
STRIKER; FRT DOOR	6-32	014	452
STRIKER; FRT LID PANEL	6-05	548	433
STRIKER; PARCEL BOX	7-50	534	536
STUD; CM/SHF BRKT	0-11	024	13
STUD; CONT BOX	2-30	554	227
STUD; EGR PIPE	0-27	165	51
STUD; EXH MANIF	0-11	014	13
STUD; FAN CLU	0-33	109	63
STUD; FENDER	6-20	669	442
STUD; INJ PUMP	0-40	161	87
STUD; INL COVER	0-25	228	48
STUD; OIL COOLER	0-50	105	93
STUD; OIL PAN	0-13	025	25
	0-20	225	40
STUD; PIPE	0-32	212	61
STUD; RR COVER	2-20	324	210
STUD; STRG UNIT	4-31	147	350
STUD; SUPPORT PLATE	3-08	114	257
STUD; THROTTLE BODY	0-25	633	49
STUD; TURBOCHARGER TO EXH PIPE	0-36	014	68
SUN VISOR	7-43	023	522
SUPPORT ASM; MTG RR	6-70	537	471
SUPPORT; AIR INL DUCT	1-31	058	146
SUPPORT; INST PANEL	7-40	006	509
SUPPORT; STEP PANEL	6-05	517	432
SUPPORTER; S/ABS, FRT SUSP	4-50	111	375
SWITCH; ACCEL, IDLE	1-01	262	131
SWITCH; AIR PRESS	3-75	176	309
SWITCH; CLU	8-25	021	592
SWITCH; COMB	8-25	001	592
SWITCH; DOOR	8-25	029	592
SWITCH; ENGAGE STARTER	0-65	031	116
SWITCH; HAZARD	8-25	249	592
SWITCH; IGNITION	4-31	103	350
SWITCH; LOW PRESSURE GAGE, AIR	3-20	009	270
SWITCH; NEUTRAL	2-30	171	224
SWITCH; OIL PRESSURE	0-12	017	18
SWITCH; PARKING BRK	3-11	023	264
SWITCH; PTO	8-25	077	592
SWITCH; REV LAMP	2-30	398	226
SWITCH; STOP LAMP	3-10	016	260
SWITCH; WARNING, AIR MASTER	3-33	013	278
TANK ASM; AIR	3-20	001	270
TANK ASM; OIL, AIR MASTER	3-20	138	272
TANK ASM; OIL, P/S	4-35	001	356
TANK ASM; WASHER	8-80	024	628
TANK; CATCH, PRESSURE CONT VLV	0-25	203	48
TANK; FUEL	1-40	001	153
TANK; SURGE, RAD	1-11	001	139
TERMINAL; BATTERY	0-61	112	112
THERMOSTAT	0-31	001	57
TRANSMISSION ASM; MANUAL	2-20	001	209
TRAY ASM; ASH	7-42	008	517
TRAY ASM; CTR CONSOLE	7-45	242	527
TRAY; HEADER ROOF	7-43	354	524
TRAY; INST	7-40	701	513
TRIM; RR PILLAR	6-43	166	457
TUBE; BALL BRG STRG UNIT	4-40	177	368
TUBE; DIST, BRKT	1-50	062	173
TUBE; DISTANCE	8-10	700	570
TUBE; GUIDE, OIL LEVEL GAUGE	0-13	008	24
TUBE; NYLON	3-75	098	309
TURBOCHARGER ASM	0-36	001	68
U-BOLT SET; FRT SPRING	4-50	208	377

https://truckmanualshub.com/

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
U-BOLT SET: RR SPRING	4-60	390	384
UNION	4-36	102	362
UNION: FLEX HOSE	2-05	184	195
UNION: OIL PIPE	2-05	106	195
	3-55	075	296
UNIT: FLASHER	8-28	001	605
UNIT: FUEL TANK	1-40	022	153
VALVE ASM: BYPASS	0-50	012	93
VALVE ASM: HTR	8-40	050	610
VALVE ASM; LEAD	1-30	098	143
VALVE: AIR DRYER	3-46	070	288
VALVE: BRK	3-34	001	282
VALVE: CHECK.AIR TANK	3-20	003	270
VALVE: CHECK.OIL	0-12	132	19
VALVE; EXH	0-14	005	28
VALVE: EXH BRAKE	1-55	006	177
VALVE: INL	0-14	004	28
VALVE: MAG.EXH BRK	1-56	086	179
VALVE: MAG.PTO CONT	8-28	033	605
VALVE; OIL RELIEF	0-12	034	18
VALVE: POPPET.CLU BOOSTER	2-07	036	199
VALVE: ROLL OVER & FLOAT	1-40	158	154
VALVE: SAFETY	3-22	237	275
VENTILATOR: HOSE.BREATHER	1-40	640	154
WASHER; ARM TO MOTOR	8-80	074	629
WASHER: BATTERY CABLE EARTH	0-61	011	110
WASHER: CAB STAY	5-15	098	407
WASHER: FLYWHEEL	0-15	038	33
WASHER: FRT SEAT	7-50	627	537
WASHER; GEAR CAM	0-14	045	28
WASHER: LEVER	3-08	046	257
WASHER: LK.AIR INT DUCT	1-31	056	146
WASHER: LK.BRG NUT	4-20	021	337
WASHER: LK.BRKT.MIRROR STAY	7-20	136	501
WASHER; LK,EXH MANIF	0-27	013	51
WASHER: LK.FRT HUB	4-11	006	333
WASHER: LK.PIN	4-50	185	376
WASHER: LK.PIN,RR SPR	4-60	183	383
WASHER: LK.PITMAN ARM	4-33	003	353
WASHER; LK,SHACKLE	4-60	371	384
WASHER; MARKER LAMP	8-01	292	548
WASHER: PISTON.BRK VLV	3-34	025	282
WASHER: PISTON.CLU BOOSTER	2-07	011	197
WASHER: PL	2-30	192	225
WASHER; PL,BRKT	0-36	007	68
	1-50	121	173
	5-01	025	397
WASHER: PL.CAB STAY PIN	5-15	088	407
WASHER: PL.CUSHION RUBBER	1-10	074	134
WASHER; PL,LICENSE PLATE LAMP	8-03	057	552
WASHER: PL.SELECT LEVER	2-30	181	225
WASHER: PL.STARTER EARTH	8-15	184	581
WASHER: PL.STAY LOCK	5-10	336	402
WASHER: PL.STRG UNIT	4-31	097	349
WASHER; PL,SUPPORT RUBBER TO B	0-22	069	43
WASHER: RELEASE LEVER	2-01	101	185
WASHER: S/ABS	4-50	065	375
WASHER: STIFFENER	0-20	644	41
WASHER: THRUST.CR/SHF	0-15	042	33
WASHER; THRUST,IDLE GEAR,TRANS	2-81	050	241
WASHER: THRUST.KING PIN	4-10	030	328
WASHER: THRUST.PINION	4-25	025	342
WASHER: THRUST.SIDE GEAR	4-25	020	341
WASHER: THRUST.6TH	2-26	480	219
WASHER; UPR,BRK VLV	3-34	023	282
WEATHERSTRIP: BACKLIGHT	6-82	006	483
WHEEL: DISC	4-80	002	391
WHEEL: STRG	4-30	001	347
WRENCH: MONKEY	9-01	013	641
WRENCH; WHEEL PIN	9-01	009	641
YOKE: FLANGE.PROP SHAFT	4-01	008	322
YOKE; SLEEVE,PROP SHAFT	4-01	225	325

https://truckmanualshub.com/

FIGURE NUMBER INDEX

https://truckmanualshub.com/

F I G U R E N U M B E R I N D E X

FIG NO.	T I T L E (S U B T I T L E)	PAGE
0-05	ENGINE GASKET KIT	2
0-10	CYLINDER HEAD COVER	6
0-11	CYLINDER HEAD	10
0-12	CYLINDER BLOCK	16
0-13	OIL PAN AND LEVEL GAUGE	22
0-14	CAMSHAFT AND VALVE	26
0-15	CRANKSHAFT, PISTON AND FLYWHEEL	32
0-20	TIMING GEAR CASE AND FLYWHEEL HOUSING	36
0-22	ENGINE MOUNTING	42
0-25	INLET MANIFOLD	46
0-27	EXHAUST MANIFOLD	50
0-28	VENTILATION SYSTEM	52
0-30	WATER PUMP AND CORROSION RESISTOR	54
0-31	THERMOSTAT AND HOUSING	56
0-32	WATER PIPING; ENGINE	58
0-33	FAN AND FAN BELT	62
0-35	ENGINE CONTROL VALVE AND LEVER	64
0-36	TURBOCHARGER SYSTEM	66
0-37	TURBOCHARGER	72
0-38	AIR COMPRESSOR PIPING; ENGINE SIDE	74
0-39	AIR COMPRESSOR; BRAKE	78
0-40	FUEL INJECTION SYSTEM	82
0-42	FUEL PUMP AND PIPE	90
0-50	OIL COOLER AND OIL FILTER	92
0-51	OIL PUMP AND OIL STRAINER	96
0-52	OIL AND VACUUM PIPING; ENGINE	98
0-57	EMISSION PIPING	100
0-60	ENGINE ELECTRICAL CONTROL PARTS	102
0-61	BATTERY AND ENGINE ELECTRICAL PARTS	108
0-65	STARTER	114
0-66	GENERATOR	118
0-86	MISCELLANEOUS PARTS; INJECTION PUMP	122
0-87	COUPLING; INJECTION PUMP	124
1-01	ACCELERATOR PEDAL AND CONTROL	128

https://truckmanualshub.com/

F I G U R E N U M B E R I N D E X

FIG NO.	T I T L E (S U B T I T L E)	PAGE
1-10	RADIATOR	132
1-11	RADIATOR HOSE AND SUB TANK	138
1-30	AIR CLEANER	142
1-31	AIR DUCT	144
1-35	CHARGE AIR COOLER	150
1-40	FUEL TANK	152
1-41	FUEL PIPING; CHASSIS	156
1-45	WATER SEDIMENTER; FUEL	166
1-50	EXHAUST PIPE AND SILENCER	170
1-55	EXHAUST BRAKE VALVE AND CONTROL CYLINDER	176
1-56	EXHAUST BRAKE SYSTEM	178
2-01	CLUTCH	182
2-03	CLUTCH PEDAL AND CONTROL	188
2-05	CLUTCH PIPING	192
2-07	CLUTCH BOOSTER; MINIPACK	196
2-08	CLUTCH MASTER CYLINDER	202
2-10	REPAIR KIT; TRANSMISSION OVERHAUL	204
2-20	MANUAL TRANSMISSION ASM AND CASE	206
2-25	SPEEDOMETER DRIVEN GEAR	212
2-26	MANUAL TRANSMISSION GEAR	214
2-30	GEAR SHIFTER AND QUADRANT BOX	222
2-35	MANUAL TRANSMISSION SHIFT CONTROL LEVER	228
2-36	MANUAL TRANSMISSION CONT LINK AND CABLE	232
2-37	MANUAL TRANSMISSION CONT; MISSION SIDE	236
2-81	POWER TAKE OFF; TRANSMISSION SIDE	238
2-85	POWER TAKE OFF CONTROL	242
3-01	FRONT WHEEL BRAKE	246
3-05	REAR WHEEL BRAKE	250
3-08	PARKING BRAKE	254
3-10	BRAKE PEDAL AND CONTROL	258
3-11	PARKING BRAKE CONTROL	262
3-20	AIR TANK	268
3-22	AIR CONTROL PARTS	274
3-33	AIR MASTER	276

https://truckmanualshub.com/

FIGURE NUMBER INDEX

FIG NO.	TITLE (SUBTITLE)	PAGE
3-34	BRAKE VALVE; AIR	280
3-46	AIR DRYER	284
3-52	BRAKE PIPING; OIL, FRONT	290
3-55	BRAKE PIPING; OIL, REAR	294
3-58	FIXING PARTS; OIL PIPING	298
3-70	BRAKE PIPING; AIR, AIR MASTER	302
3-75	BRAKE PIPING; AIR, FRONT	306
3-77	BRAKE PIPING; AIR, REAR	310
3-78	FIXING PARTS; AIR PIPING	314
4-01	PROPELLER SHAFT	320
4-10	FRONT AXLE	326
4-11	FRONT HUB AND DRUM OR ROTOR	332
4-20	REAR AXLE CASE AND SHAFT	336
4-25	REAR FINAL DRIVE	340
4-30	STEERING WHEEL AND COWL	346
4-31	STEERING COLUMN AND SHAFT	348
4-33	STEERING LINKAGE	352
4-35	POWER STEERING CONTROL; CHASSIS SIDE	354
4-36	POWER STEERING CONTROL; ENGINE SIDE	360
4-40	STEERING UNIT	364
4-42	POWER STEERING OIL PUMP	370
4-50	FRONT SUSPENSION	374
4-55	FRONT LEAF SPRING	378
4-60	REAR SUSPENSION	382
4-65	REAR LEAF SPRING	386
4-80	ROAD WHEEL	390
5-01	FRAME AND OTHER PARTS	394
5-10	CAB MOUNTING; FRAME SIDE	400
5-15	CAB MOUNTING; CAB SIDE	404
5-20	BATTERY CARRIER	412
5-30	SPARE TIRE CARRIER AND COVER	414
6-01	FRONT BUMPER	418
6-03	RADIATOR GRILLE	422
6-05	FRONT PANEL	424

https://truckmanualshub.com/

F I G U R E N U M B E R I N D E X

FIG NO.	T I T L E (S U B T I T L E)	PAGE
6-07	FRONT WINDOW GLASS AND WEATHERSTRIP	436
6-20	SIDE PANEL AND STEP	438
6-30	FRONT DOOR AND HINGE	444
6-31	FRONT DOOR GLASS AND REGULATOR	446
6-32	FRONT DOOR LOCK AND HANDLE	450
6-35	FRONT DOOR TRIM	454
6-43	SIDE TRIM	456
6-47	MUD GUARD AND INSULATOR	458
6-60	ROOF PANEL	464
6-66	HEAD LINING AND TRIM	466
6-70	FLOOR PANEL	468
6-75	MAT AND CARPET	474
6-76	FLOOR EQUIPMENT AND SEALING	476
6-78	FLOOR HOLE PLUG	478
6-80	BACK PANEL	480
6-82	BACK GLASS AND WEATHERSTRIP	482
6-84	BACK TRIM	484
6-90	REAR BUMPER	486
7-01	EMBLEM AND NAME PLATE	490
7-10	CAUTION PLATE AND LABEL	492
7-20	MIRROR AND MIRROR STAY	494
7-30	LOCK CYLINDER SET	502
7-40	INSTRUMENT PANEL AND BOX	506
7-42	ASH TRAY	516
7-43	SUN VISOR AND ASSIST GRIP	518
7-45	CONSOLE BOX	526
7-50	FRONT SEAT	528
7-60	SEAT BELT	538
7-70	SEPARATER AND BED	540
8-01	LAMP; FRONT AND FRONT SIDE	544
8-03	LAMP; REAR AND REAR SIDE	550
8-05	INTERIOR LAMP	554
8-10	WIRING HARNESS AND FUSE	556
8-15	FIXING PARTS; WIRING HARNESS	572

https://truckmanualshub.com/


F I G U R E N U M B E R I N D E X

FIG NO.	T I T L E (S U B T I T L E)	PAGE
8-21	METER ASM	586
8-25	SWITCH AND RELAY; INSTRUMENT PANEL	588
8-26	ELECTRICAL CONTROL AND OTHER PARTS	594
8-28	CHASSIS ELECTRICAL	600
8-40	HEATER SYSTEM	608
8-45	HEATER PIPING	612
8-50	AIR CONDITIONING SYSTEM; FRONT	614
8-60	HEATER UNIT; FRONT	616
8-65	CONTROL LEVER; HEATER AND AIR CON	620
8-73	BLOWER UNIT	622
8-80	WINDSHIELD WIPER AND WASHER	626
8-90	RADIO AND TV	632
9-01	TOOLS	638

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-05 ENGINE GASKET KIT
FIG-NO. ENG OVERHAUL

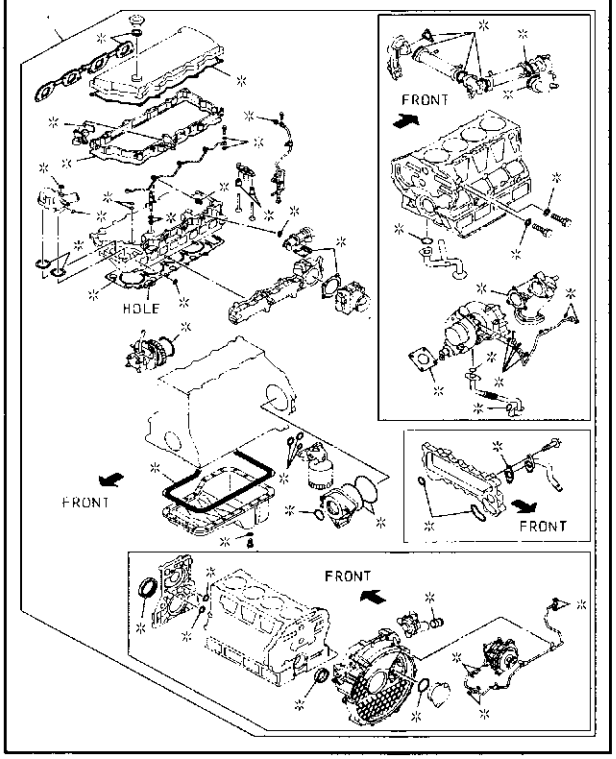


P-2

0-05 ENGINE GASKET KIT
FIG-NO. ENG HD OVERHAUL

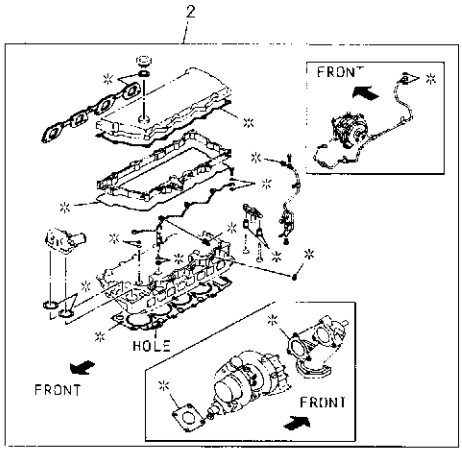


P-3

0-10 CYLINDER HEAD COVER
FIG-NO.

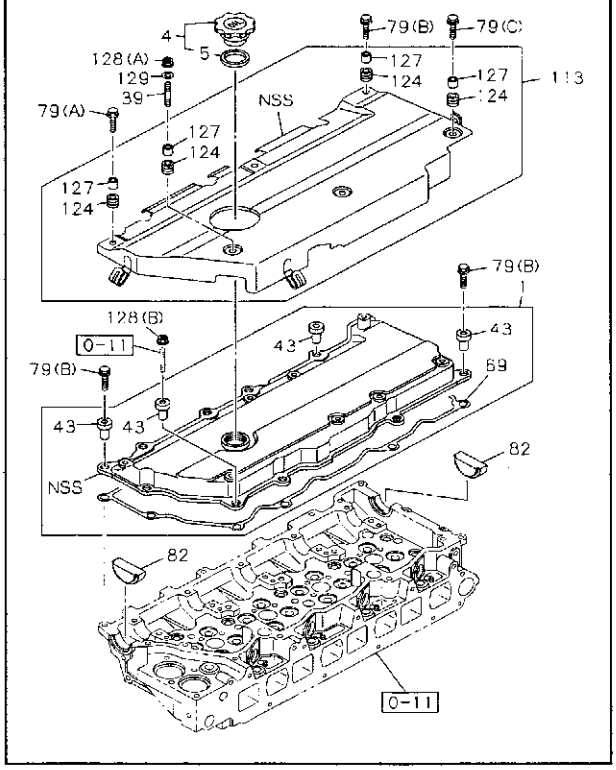

P-6

0-11 CYLINDER HEAD
FIG-NO. CYL HEAD COMPONENT

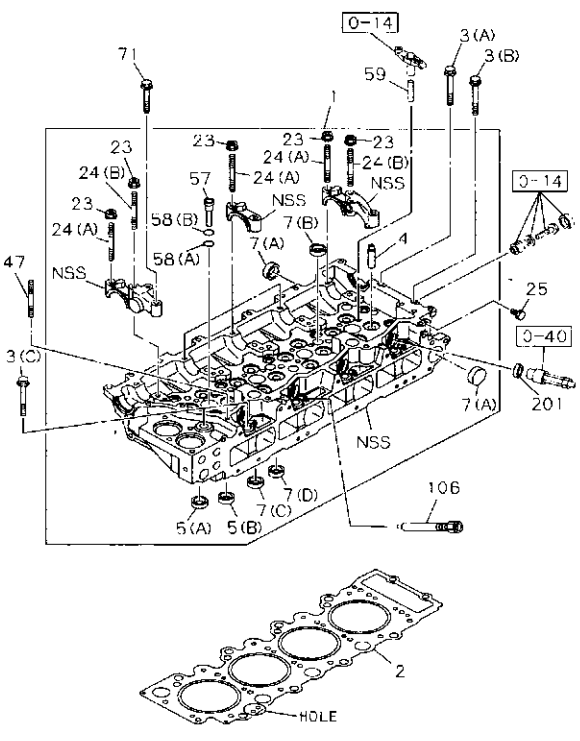


P-10

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-11 CYLINDER HEAD
FIG-NO. CASE

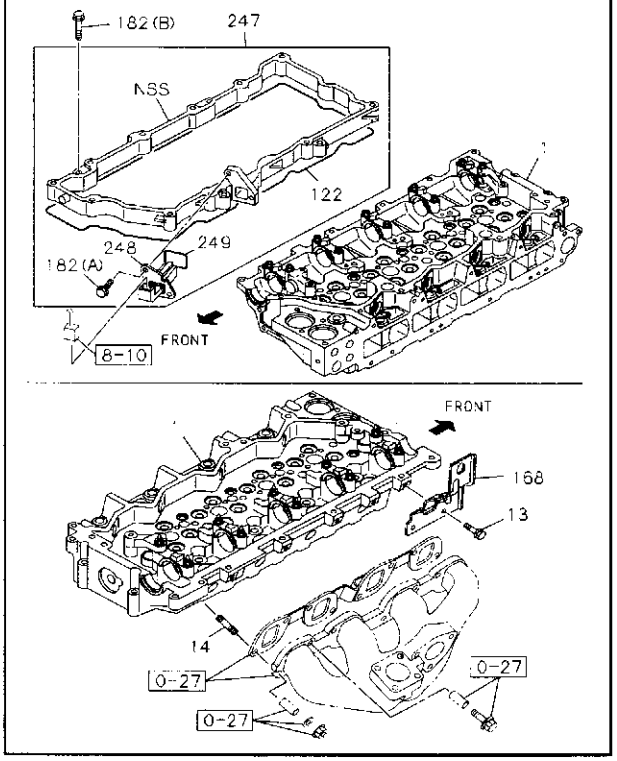


P-11

0-12 CYLINDER BLOCK
FIG-NO. BLOCK ASM AND LINER SET

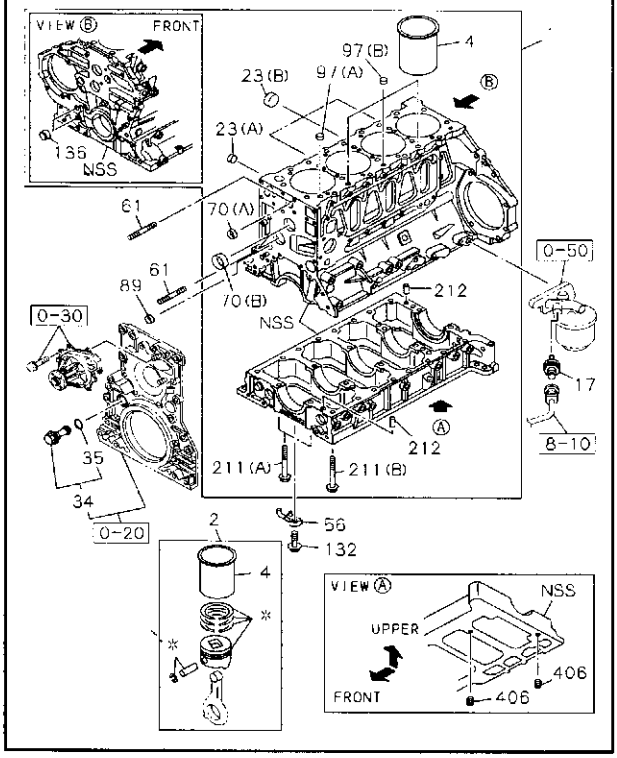


P-16

0-12 CYLINDER BLOCK
FIG-NO. OTHER PARTS

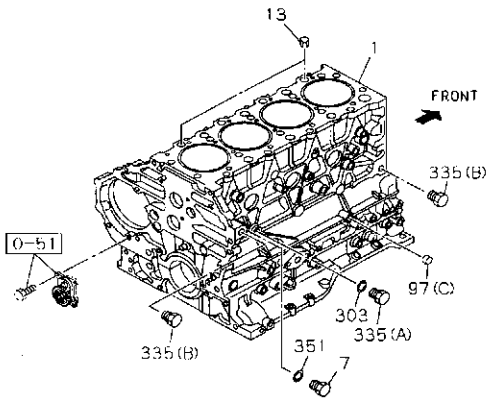

P-17

0-13 OIL PAN AND LEVEL GAUGE
FIG-NO. OIL PAN

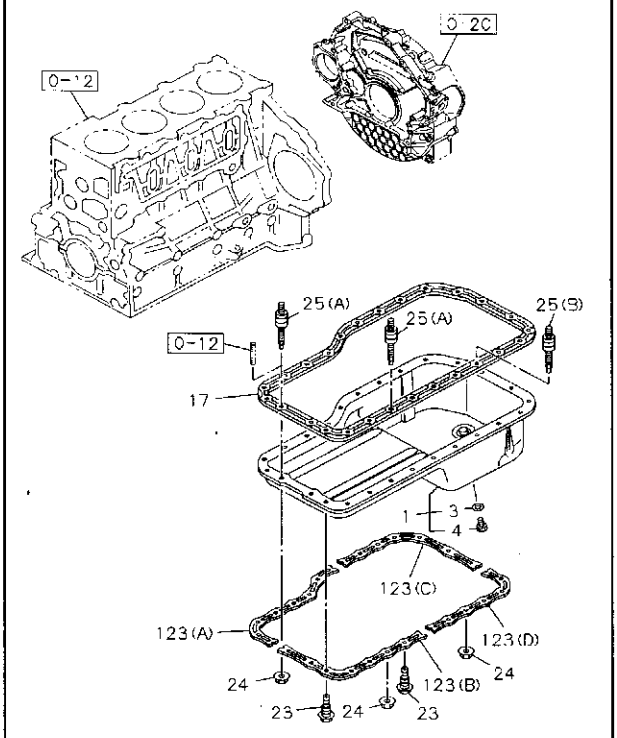


P-22

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-13 OIL PAN AND LEVEL GAUGE
FIG-NO. OIL GAUGE

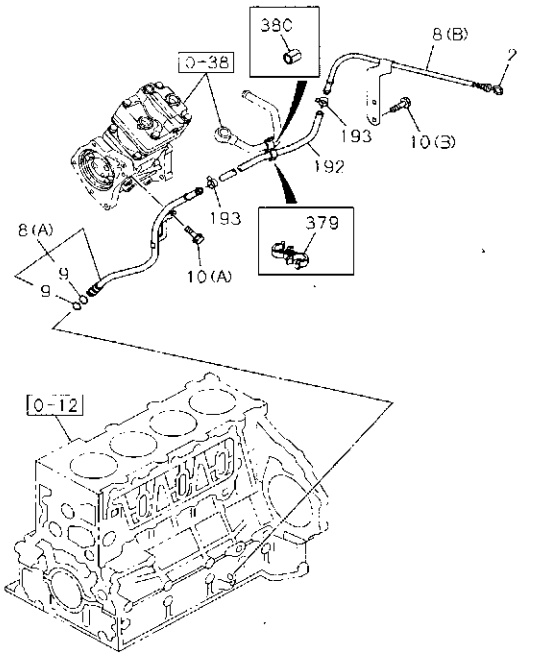


P-23

0-14 CAMSHAFT AND VALVE
FIG-NO. VALVE AND CAMSHAFT

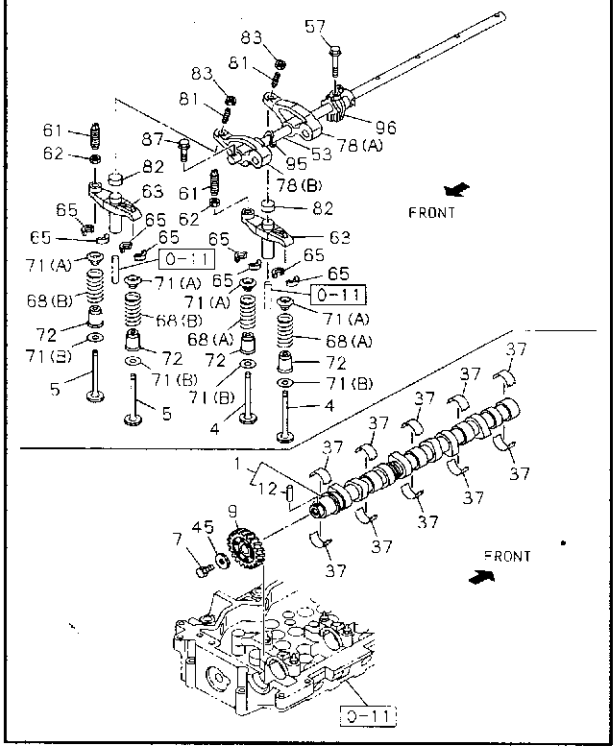


P-26

0-14 CAMSHAFT AND VALVE
FIG-NO. IDLE GEAR

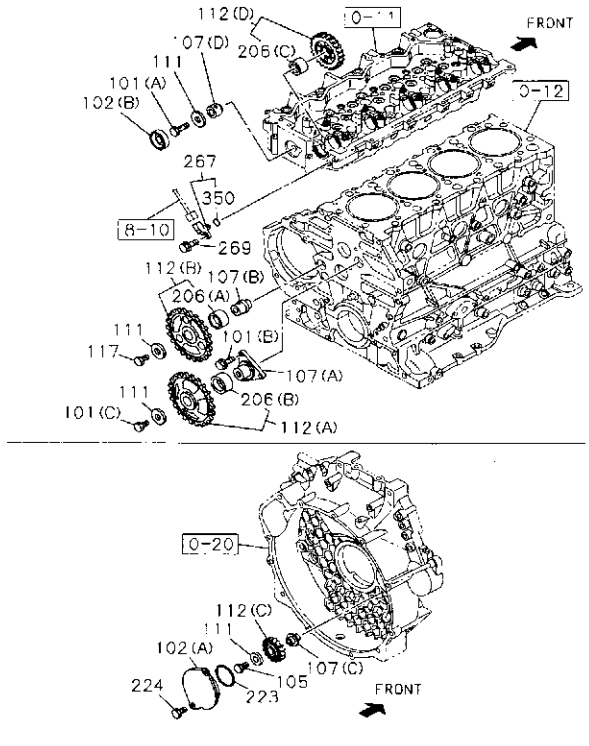

P-27

0-15 CRANKSHAFT, PISTON AND FLYWHEEL
FIG-NO.

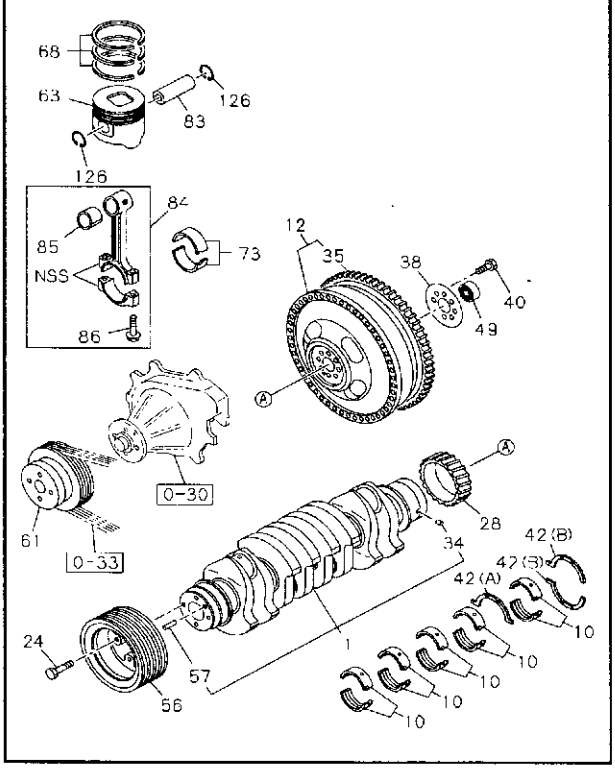


P-32

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-20 TIMING GEAR CASE AND FLYWHEEL HOUSING
FIG-NO. FRT COVER

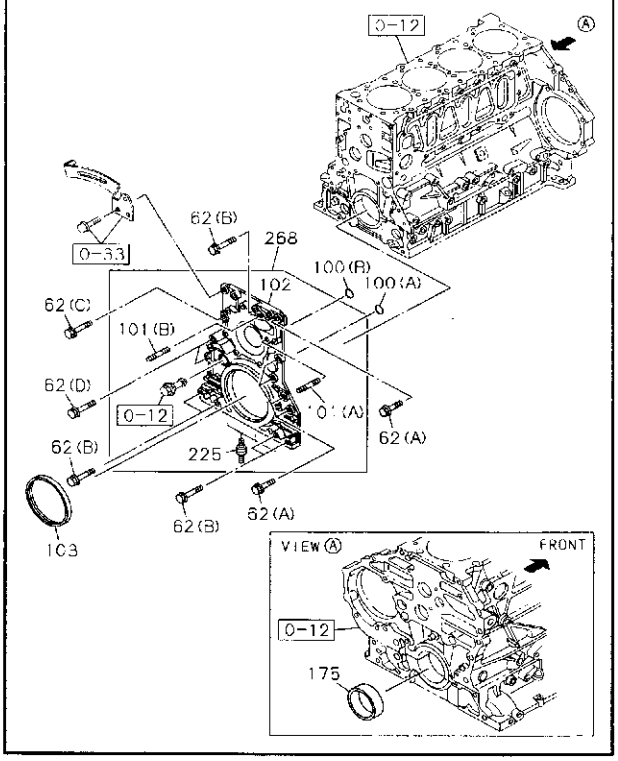


P-36

0-20 TIMING GEAR CASE AND FLYWHEEL HOUSING
FIG-NO. FLYWHEEL HOUSING NO. 1

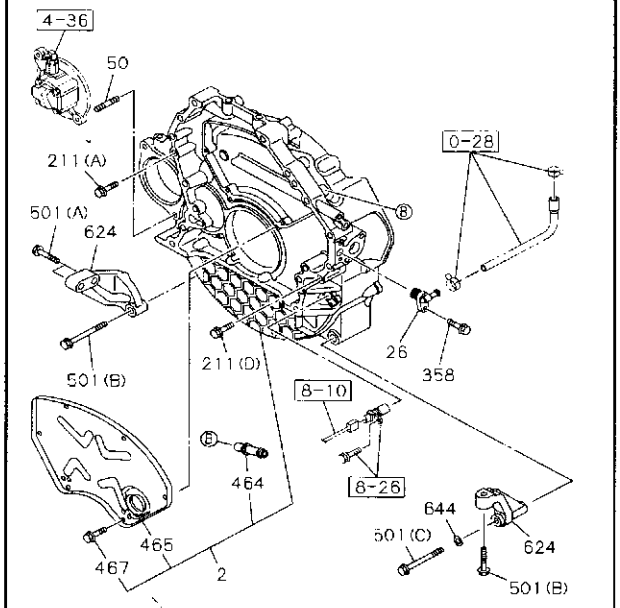


P-37

0-20 TIMING GEAR CASE AND FLYWHEEL HOUSING
FIG-NO. FLYWHEEL HOUSING NO. 2

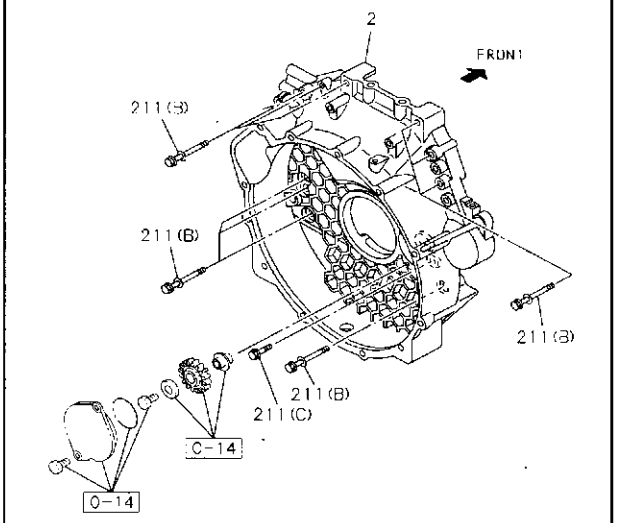

P-38

0-22 ENGINE MOUNTING
FIG-NO.

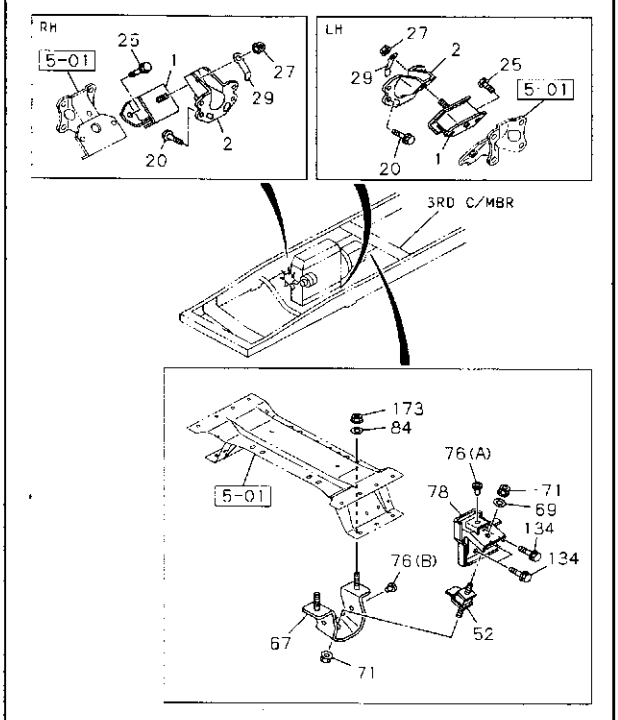


P-42

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-25	INLET MANIFOLD
FIG-NO.	NO. 1

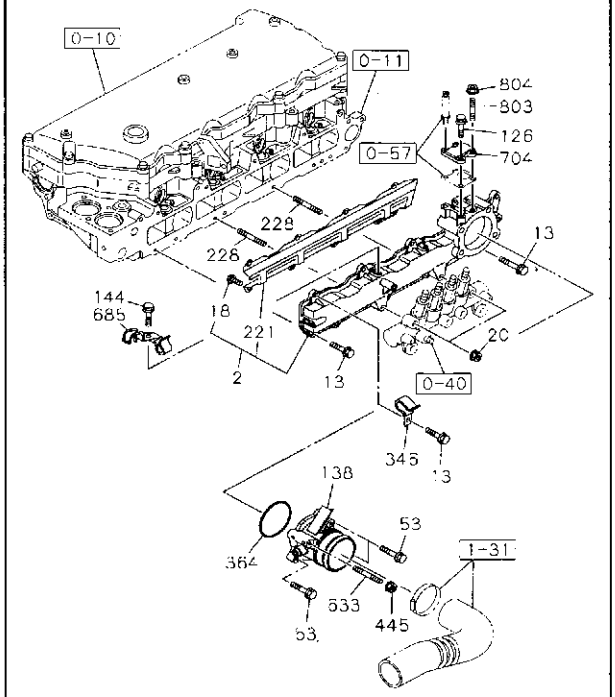


P-46

0-25	INLET MANIFOLD
FIG-NO.	NO. 2

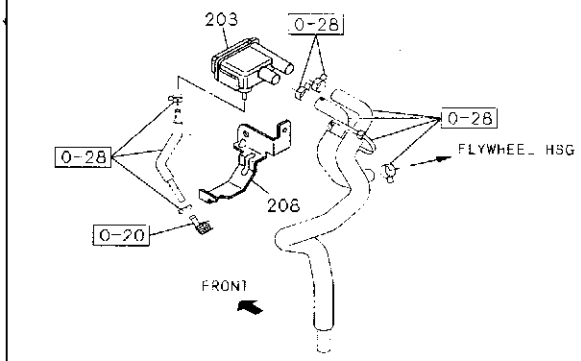


P-47

0-27	EXHAUST MANIFOLD
FIG-NO.	

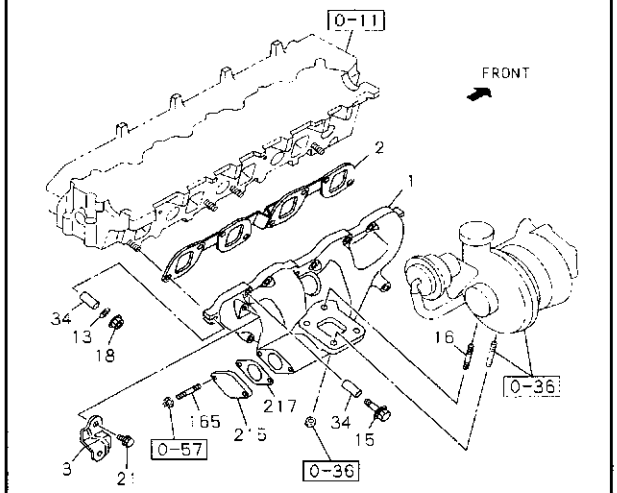

P-50

0-28	VENTILATION SYSTEM
FIG-NO.	

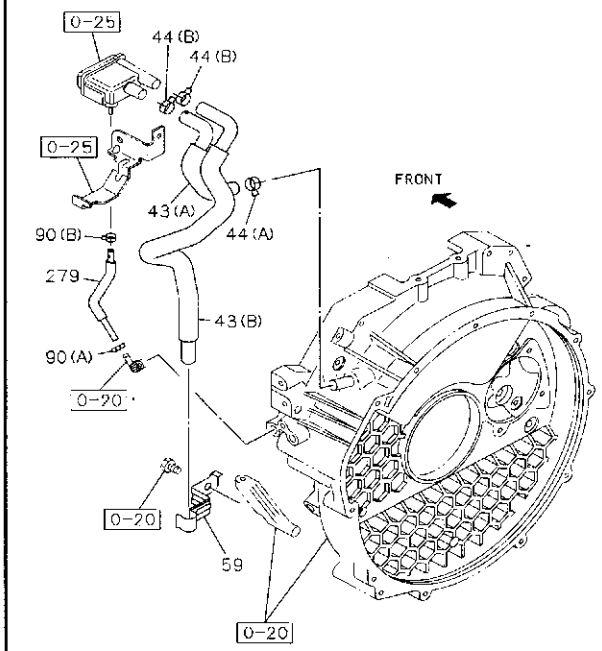


P-52

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-30	WATER PUMP AND CORROSION RESISTOR
FIG-NO.	

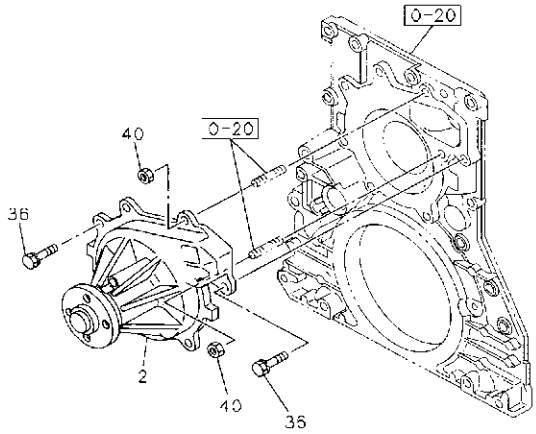


P-54

0-31	THERMOSTAT AND HOUSING
FIG-NO.	

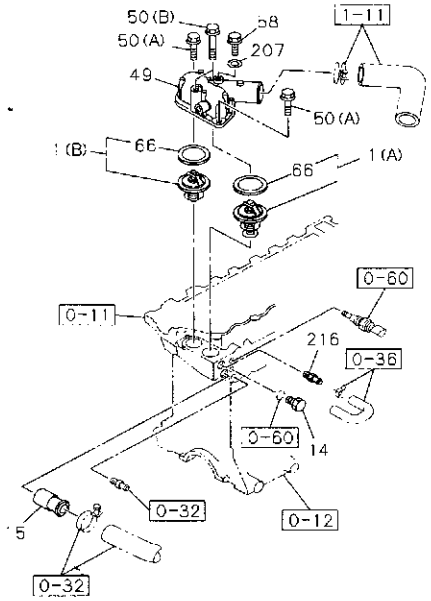


P-56

0-32	WATER PIPING; ENGINE
FIG-NO.	SUCTION PIPE

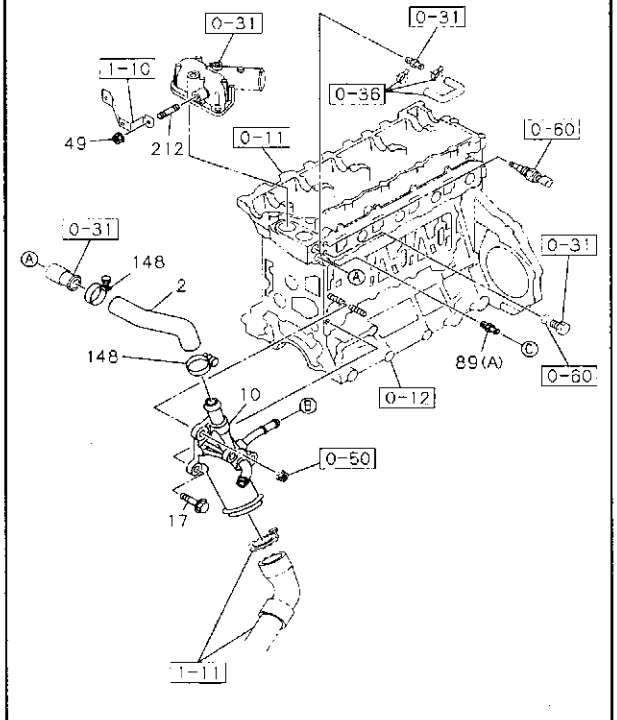

P-58

0-32	WATER PIPING; ENGINE
FIG-NO.	PIPING

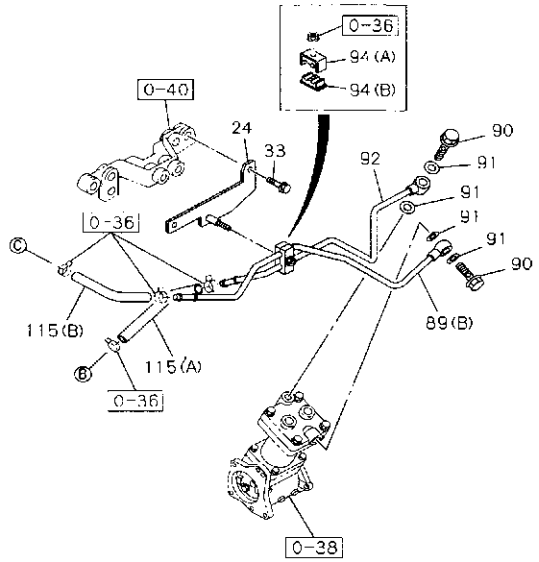


P-59

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-33	FAN AND FAN BELT
FIG-NO.	

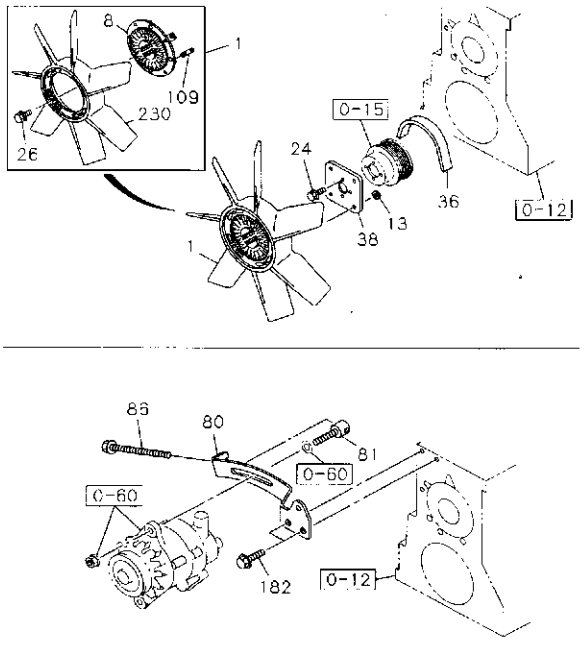


P-62

0-35	ENGINE CONTROL VALVE AND LEVER
FIG-NO.	

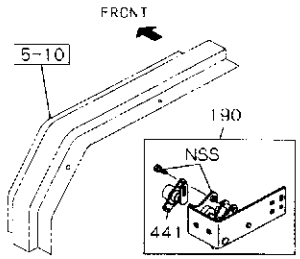


P-64

0-36	TURBOCHARGER SYSTEM
FIG-NO.	NO. 1

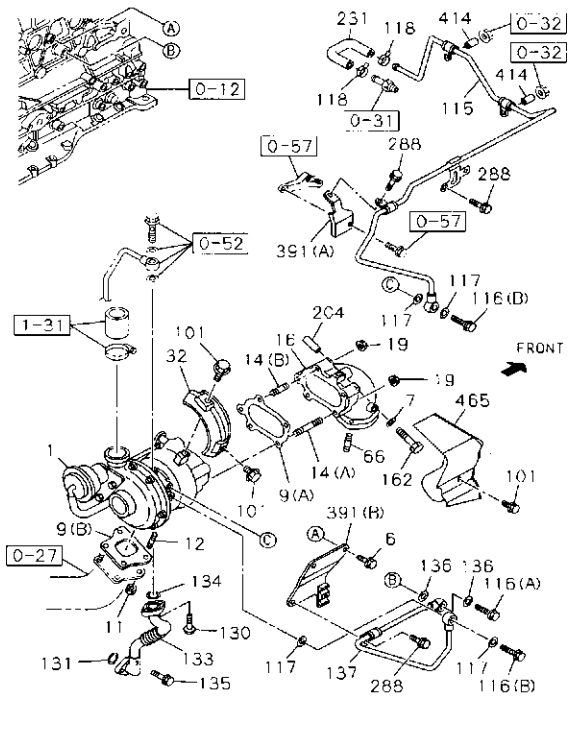

P-66

0-36	TURBOCHARGER SYSTEM
FIG-NO.	NO. 2

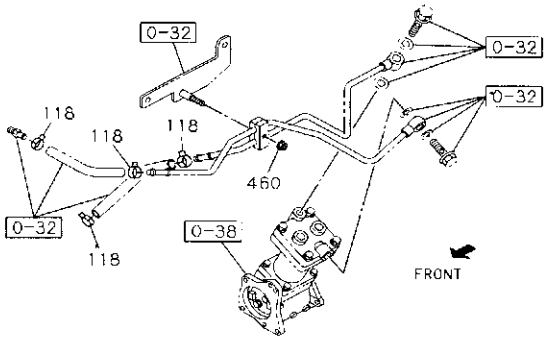


P-67

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-37 FIG-NO. TURBOCHARGER

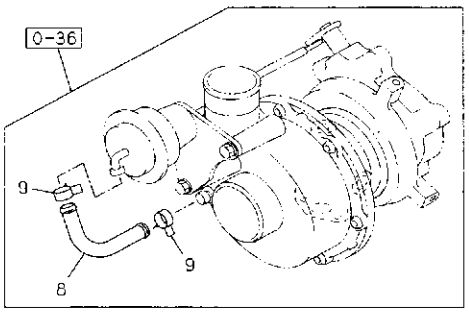


P-72

0-38 FIG-NO. AIR COMPRESSOR PIPING; ENGINE SIDE

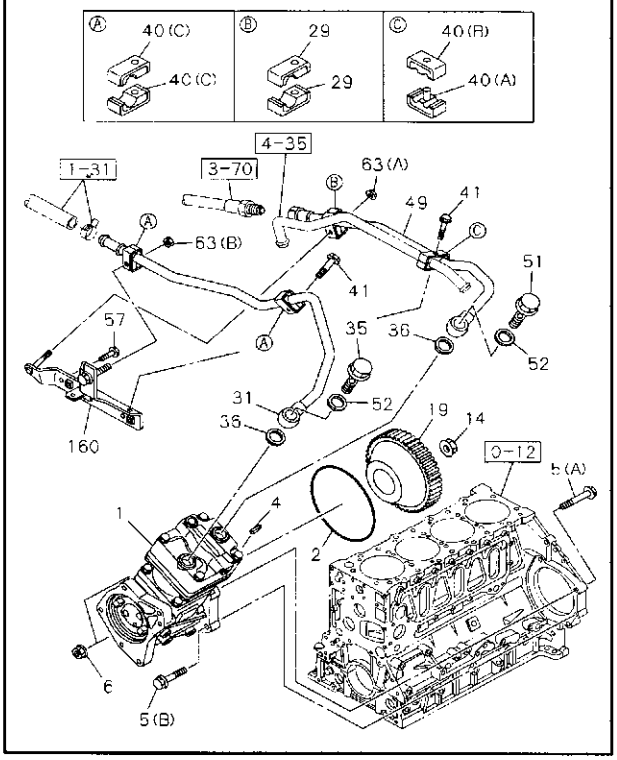


P-74

0-39 FIG-NO. AIR COMPRESSOR; BRAKE

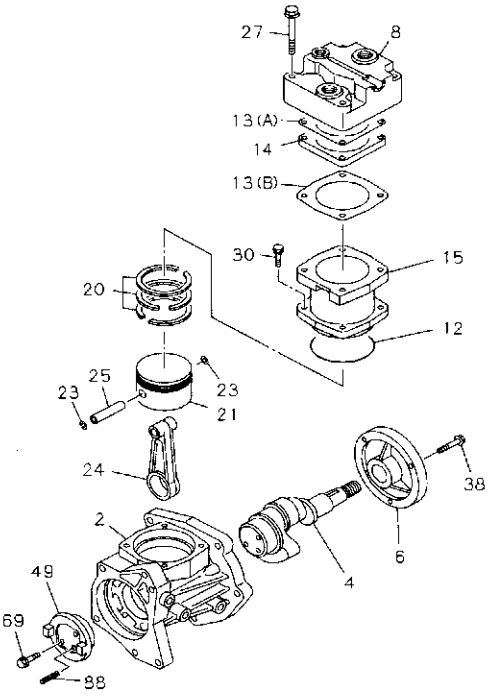

P-78

0-40 FIG-NO. FUEL INJECTION SYSTEM
INJ PUMP

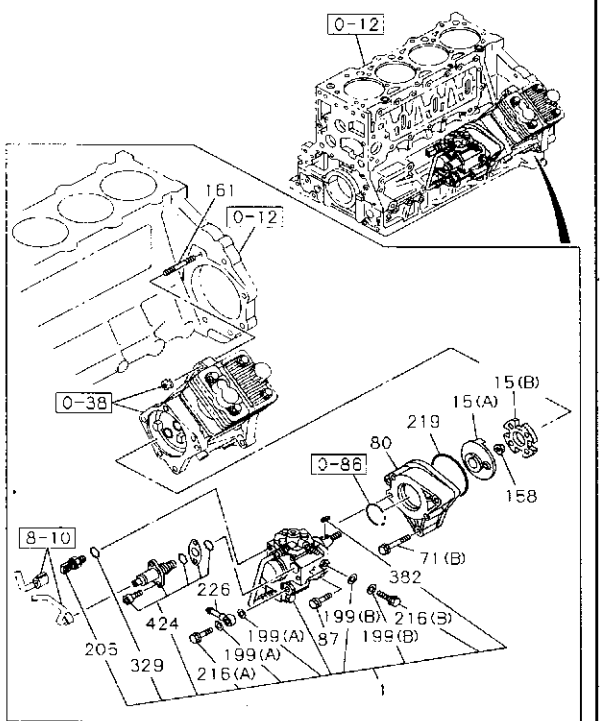


P-82

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-40 FUEL INJECTION SYSTEM
FIG-NO. INJ PIPE AND RAIL ASM

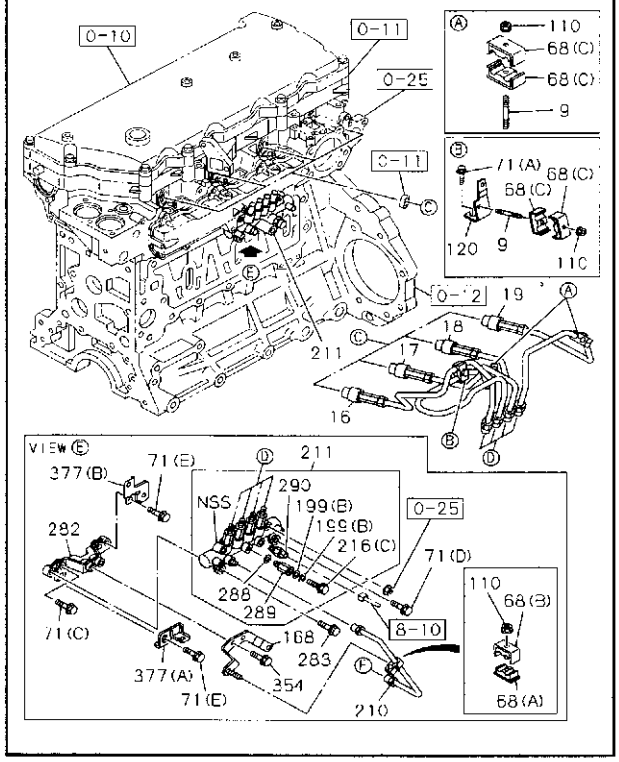


P-83

0-40 FUEL INJECTION SYSTEM
FIG-NO. NOZZLE AND PIPE

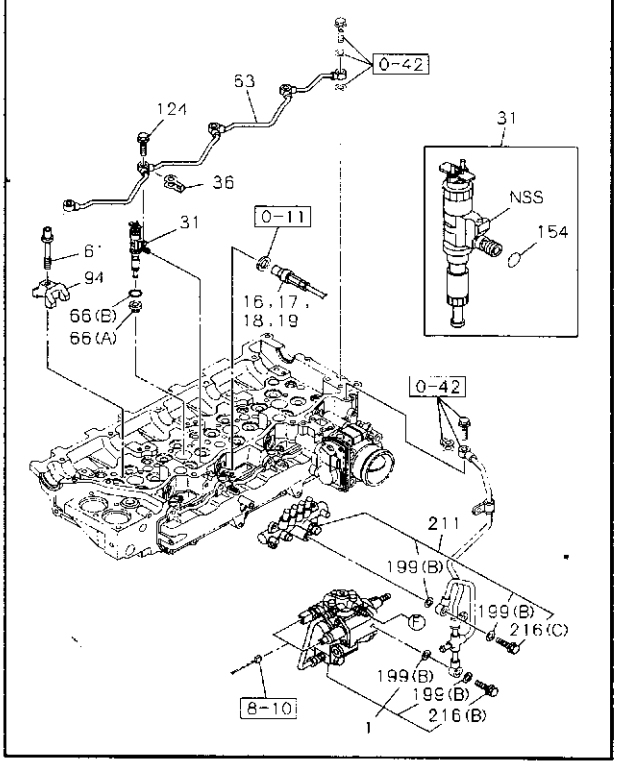


P-84

0-42 FUEL PUMP AND PIPE
FIG-NO.

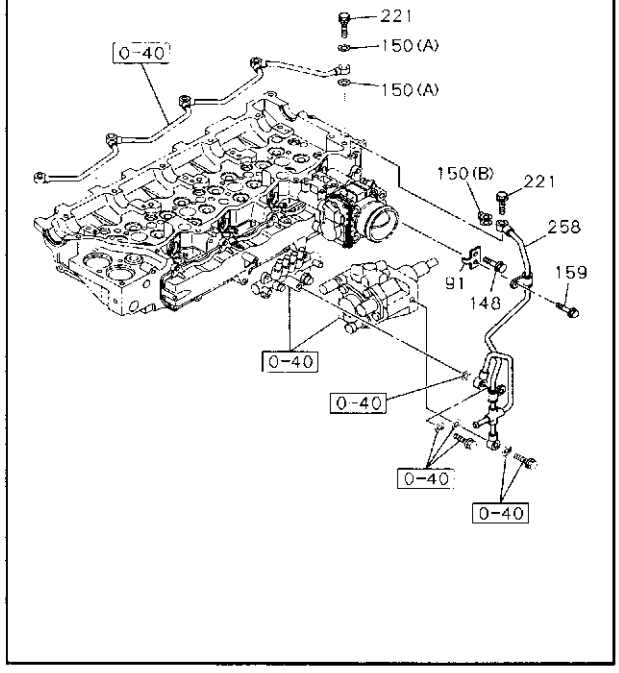

P-90

0-50 OIL COOLER AND OIL FILTER
FIG-NO.

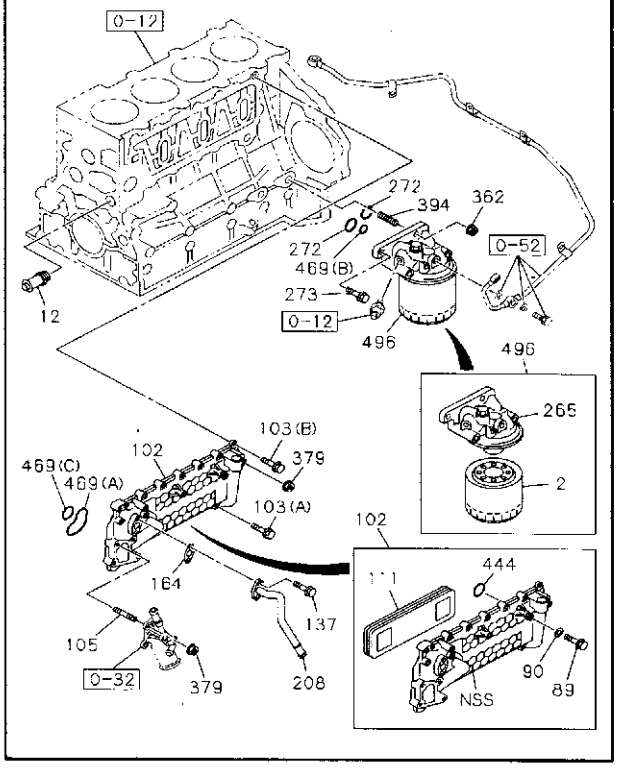


P-92

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-51 FIG-NO. OIL PUMP AND OIL STRAINER

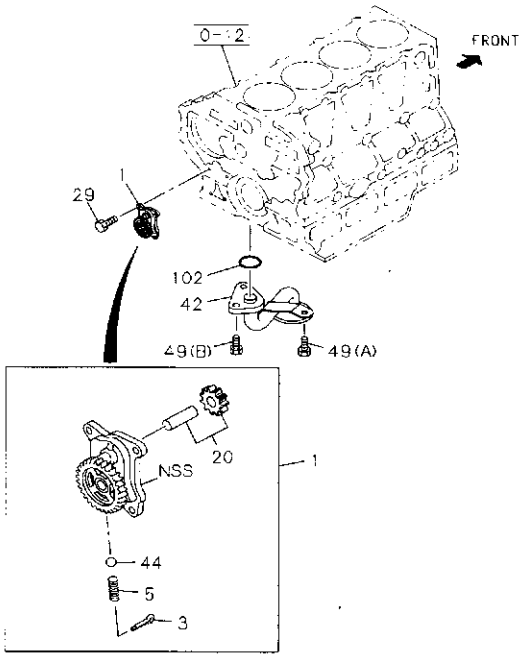


P-96

0-52 FIG-NO. OIL AND VACUUM PIPING; ENGINE

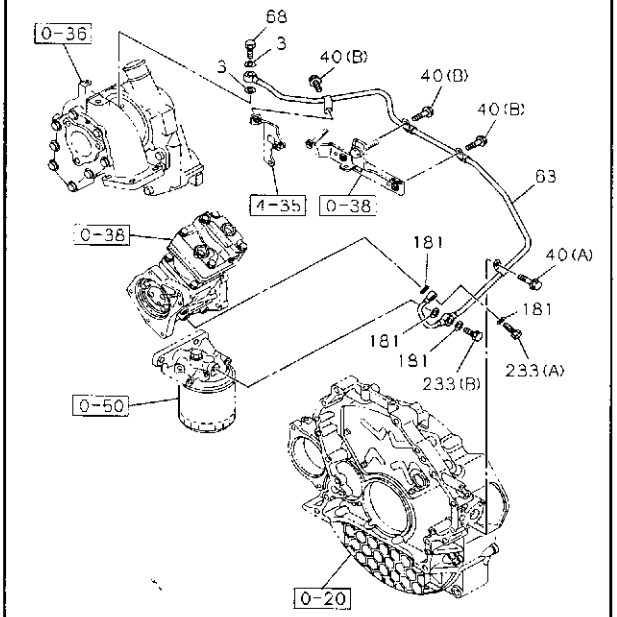


P-98

0-57 FIG-NO. EMISSION PIPING

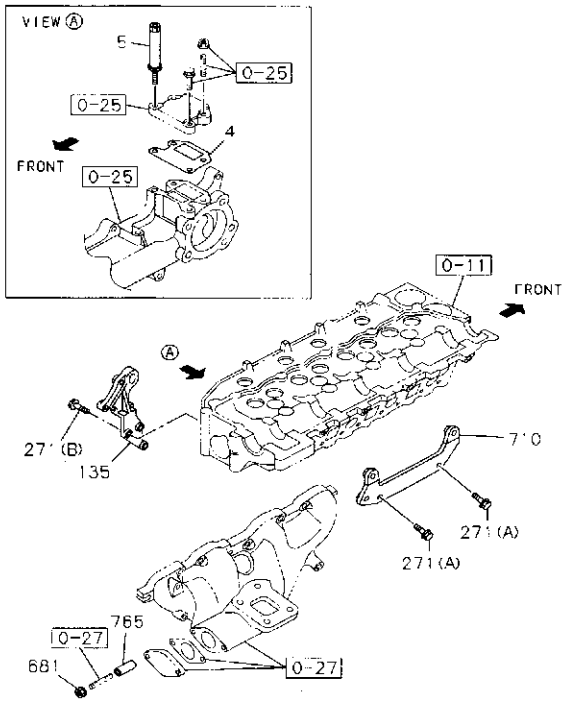

P-100

0-60 FIG-NO. ENGINE ELECTRICAL CONTROL PARTS
STARTER AND GENERATOR

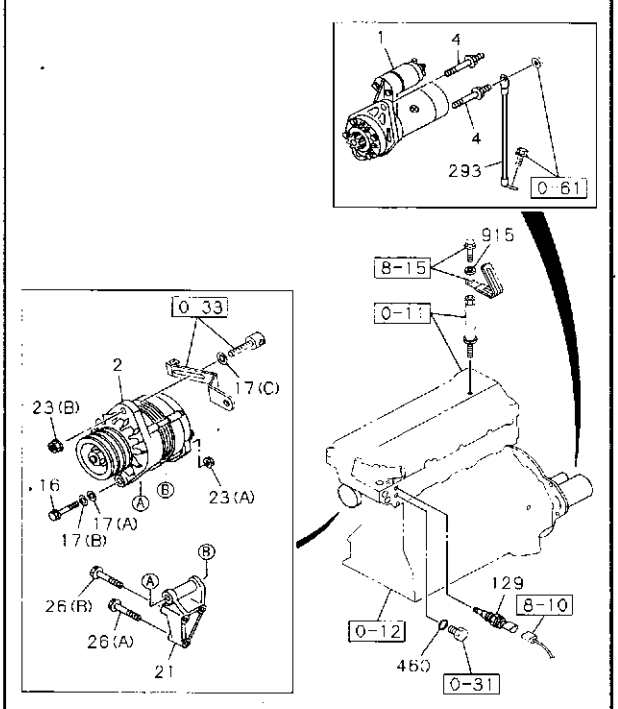


P-102

https://truckmanualshub.com/

ILLUSTRATION INDEX


0-60 ENGINE ELECTRICAL CONTROL PARTS
FIG-NO. RELAY; FRAME HARNESS

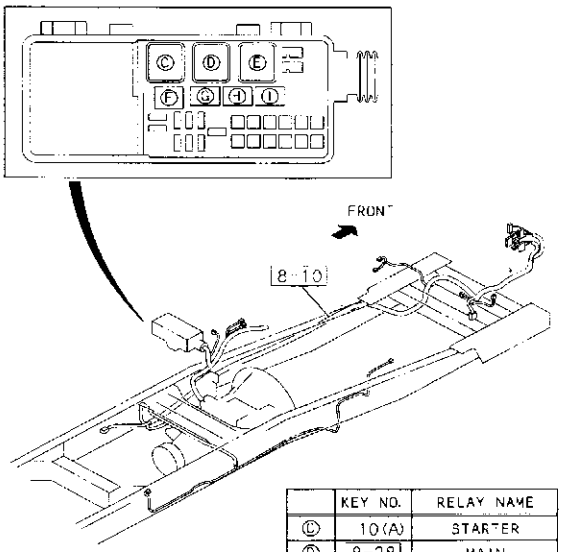

	KEY NO.	RELAY NAME
Ⓒ	10(A)	STARTER
Ⓓ	8-28	MAIN
Ⓔ	—	—
Ⓕ	—	—
Ⓖ	—	—
Ⓗ	10(B)	STARTER
Ⓘ	—	—


P-103


0-60 ENGINE ELECTRICAL CONTROL PARTS
FIG-NO. FIXING; ENG CONTROL UNIT

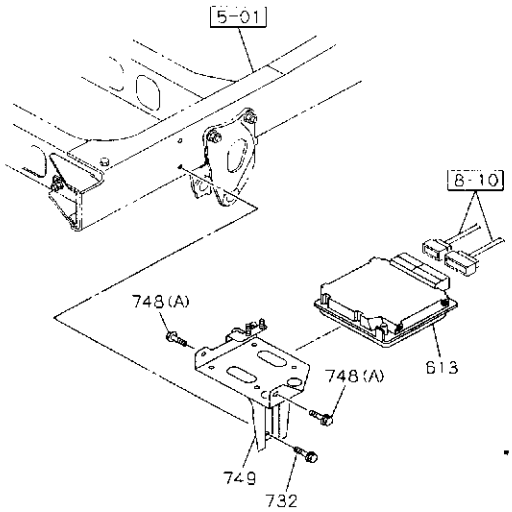

P-104


0-60 ENGINE ELECTRICAL CONTROL PARTS
FIG-NO. DRM

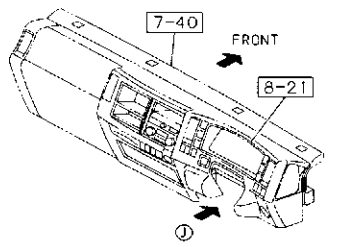

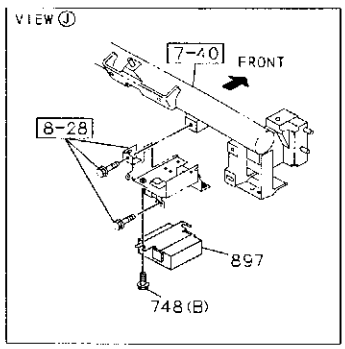

P-105

0-61 BATTERY AND ENGINE ELECTRICAL PARTS
FIG-NO. WIRING; BATTERY CABLE

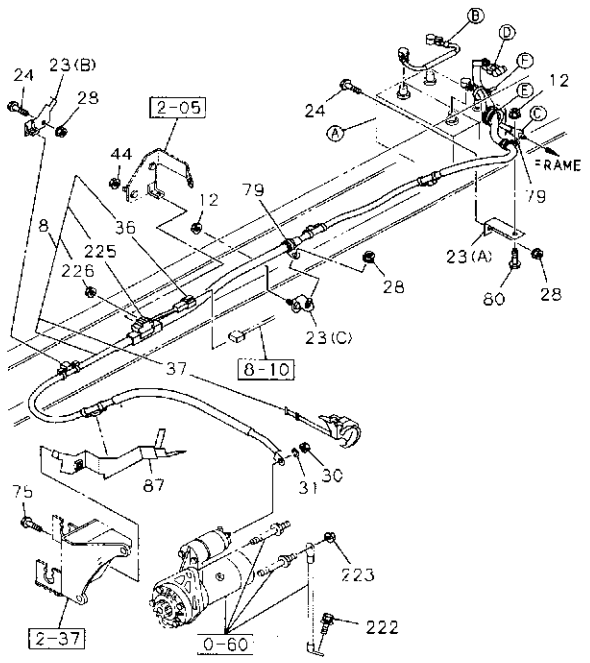


P-108

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-61 BATTERY AND ENGINE ELECTRICAL PARTS
FIG-NO. FIXING PARTS

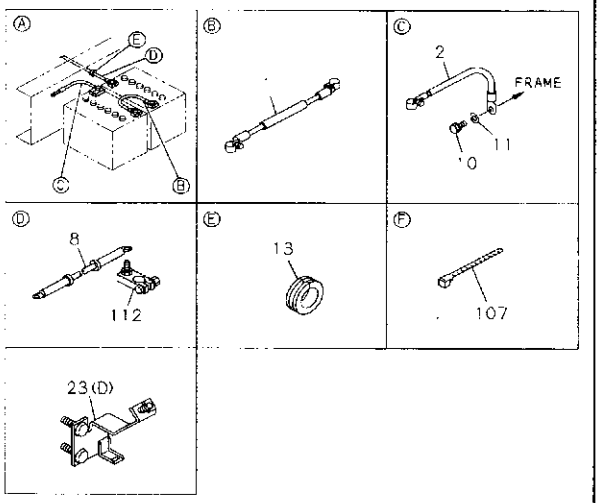


P-109

0-65 STARTER
FIG-NO.

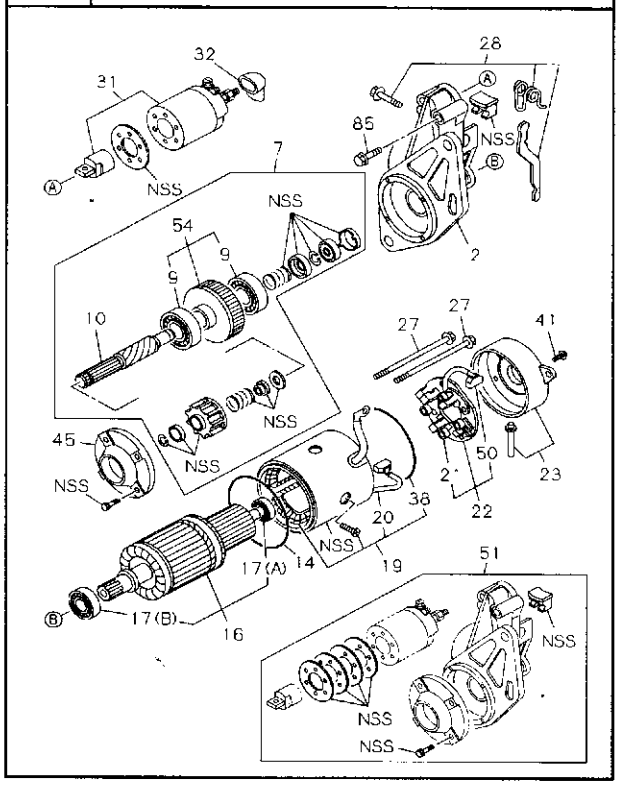


P-114

0-66 GENERATOR
FIG-NO.

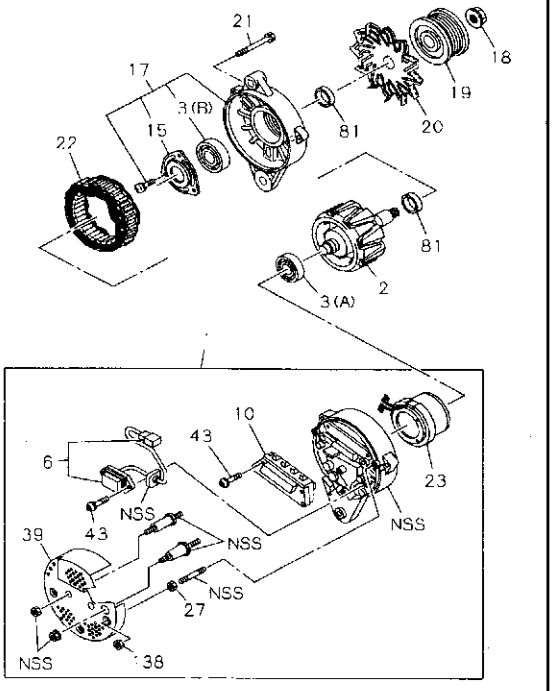

P-118

0-86 MISCELLANEOUS PARTS; INJECTION PUMP
FIG-NO.

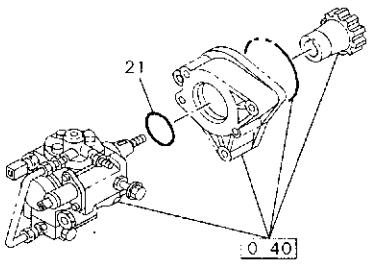


P-122

https://truckmanualshub.com/


ILLUSTRATION INDEX

0-87 COUPLING; INJECTION PUMP
FIG-NO.

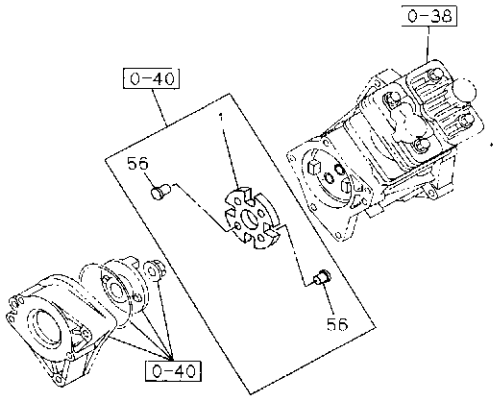


P-124

1-01 ACCELERATOR PEDAL AND CONTROL
FIG-NO. NO. 1

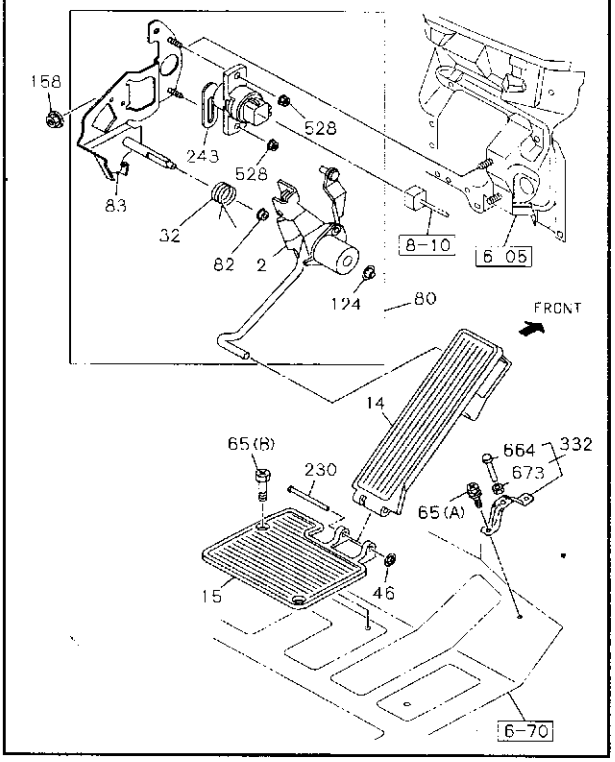


P-128

1-01 ACCELERATOR PEDAL AND CONTROL
FIG-NO. NO. 2

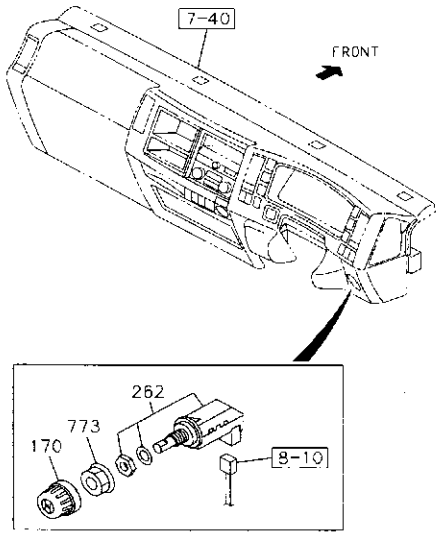

P-129

1-10 RADIATOR
FIG-NO. NO. 1

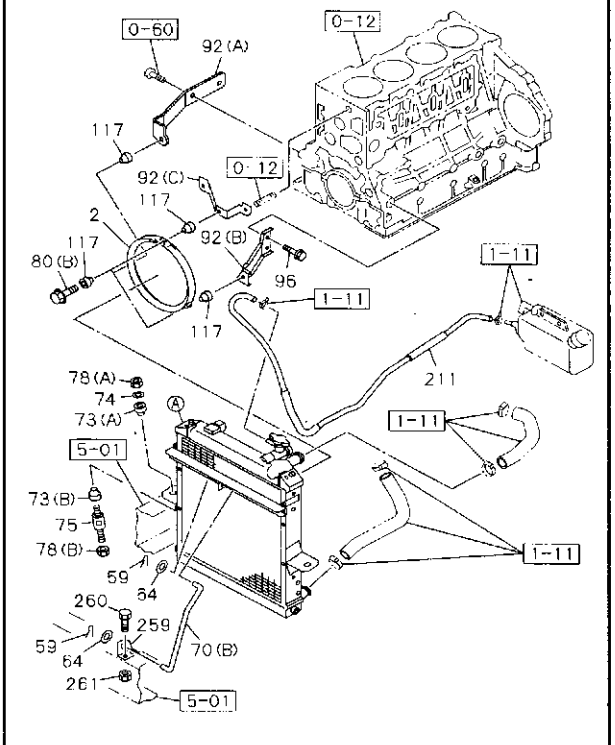


P-132

https://truckmanualshub.com/


ILLUSTRATION INDEX

1-10 RADIATOR
FIG-NO. NO. 2

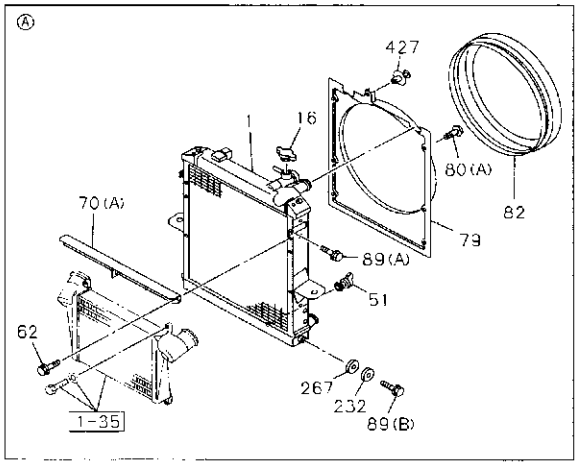


P-133

1-11 RADIATOR HOSE AND SUB TANK
FIG-NO.

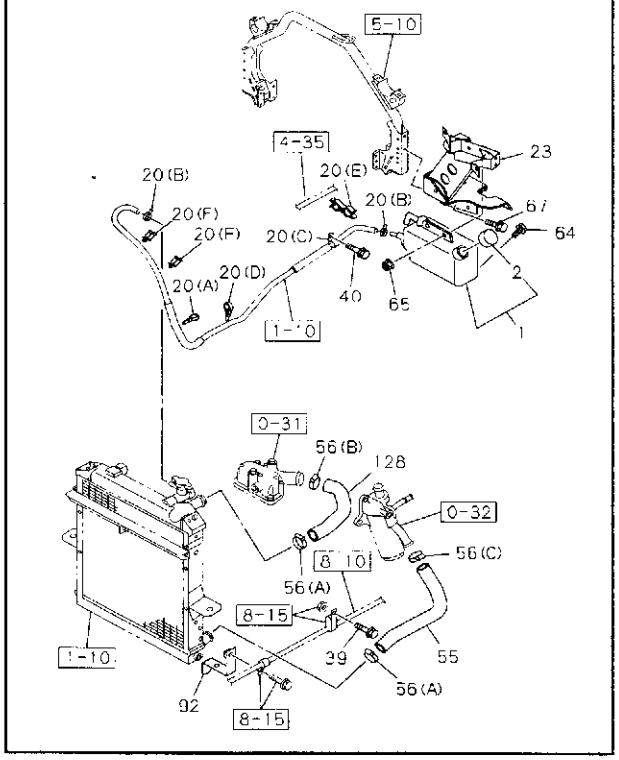


P-138

1-30 AIR CLEANER
FIG-NO.

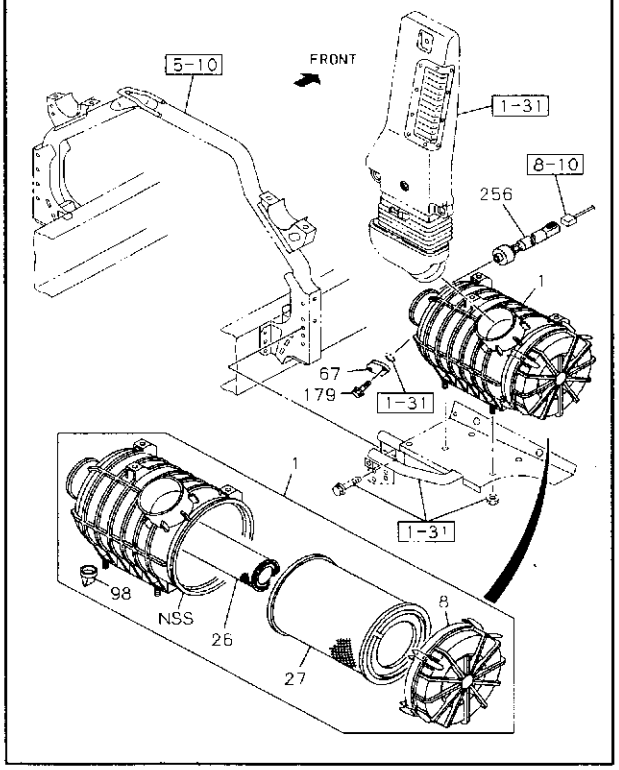

P-142

1-31 AIR DUCT
FIG-NO. DUCT FIXING

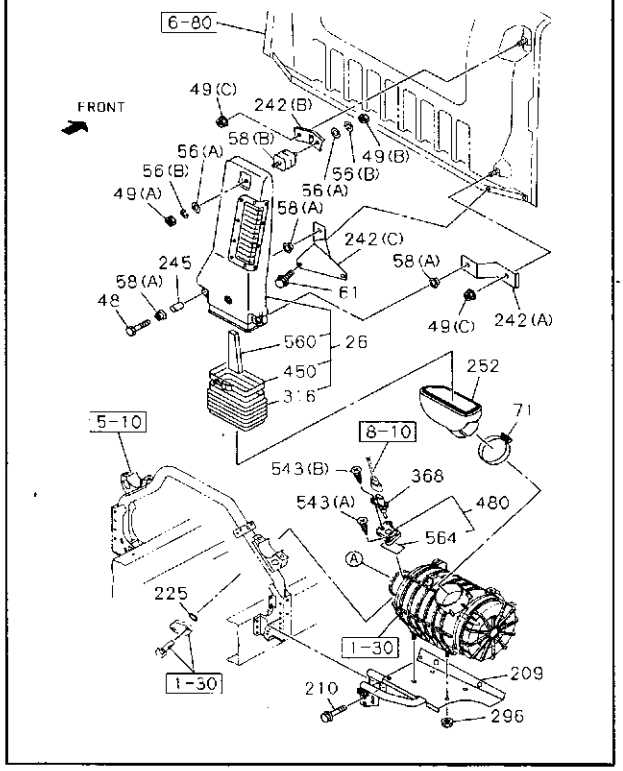


P-144

https://truckmanualshub.com/


ILLUSTRATION INDEX

1-31 AIR DUCT
FIG-NO. PIPING

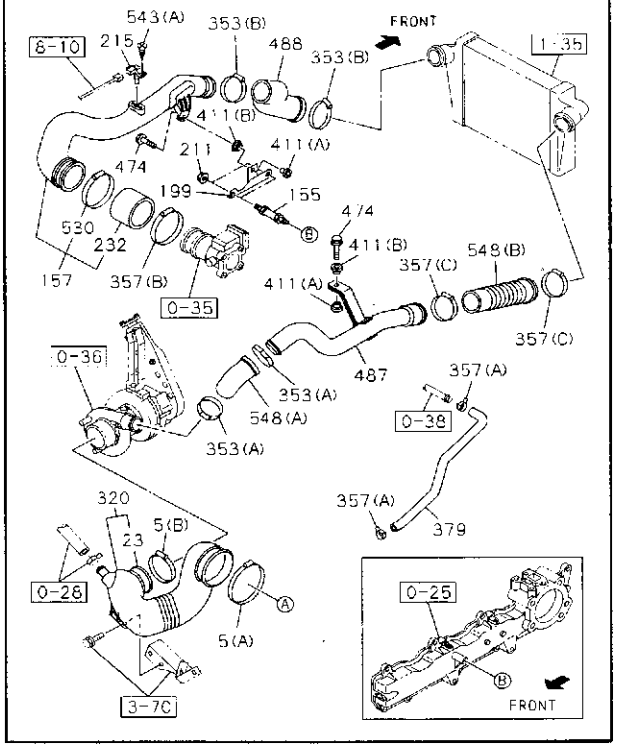


P-145

1-35 CHARGE AIR COOLER
FIG-NO.

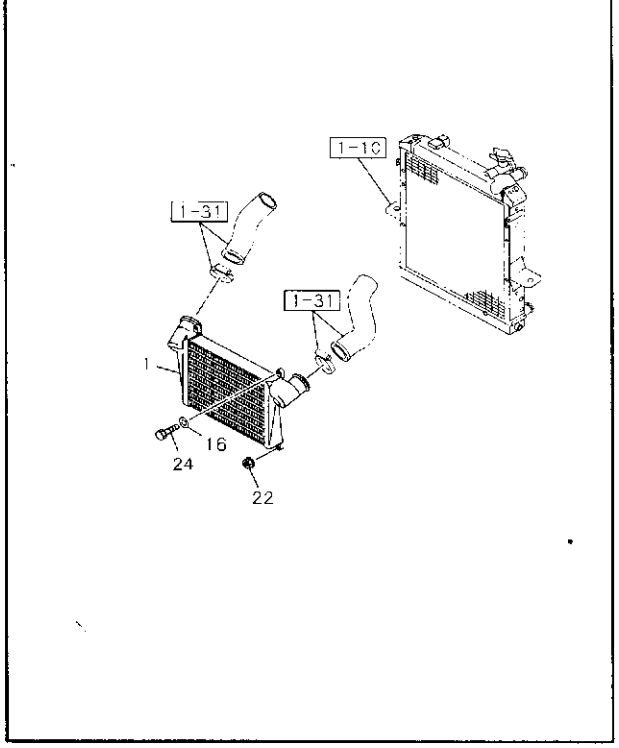


P-150

1-40 FUEL TANK
FIG-NO.

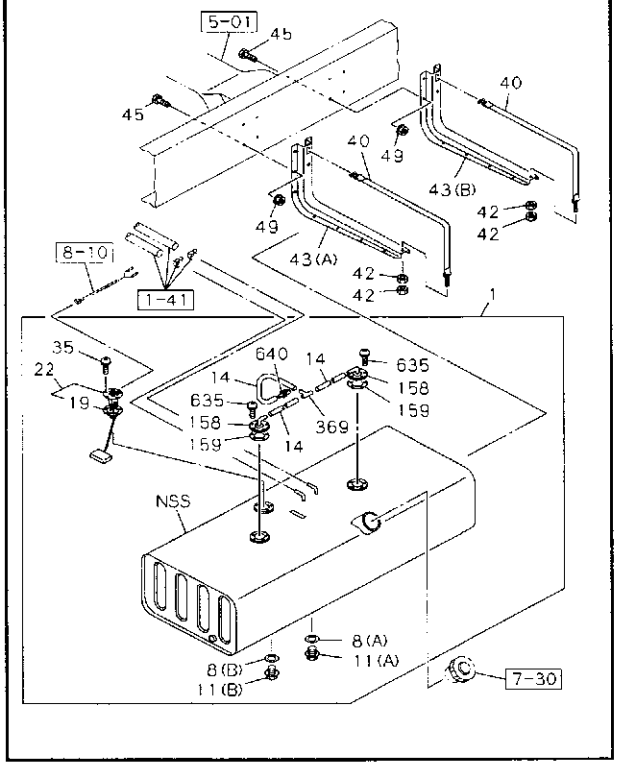

P-152

1-41 FUEL PIPING; CHASSIS
FIG-NO. PIPING NO. 1

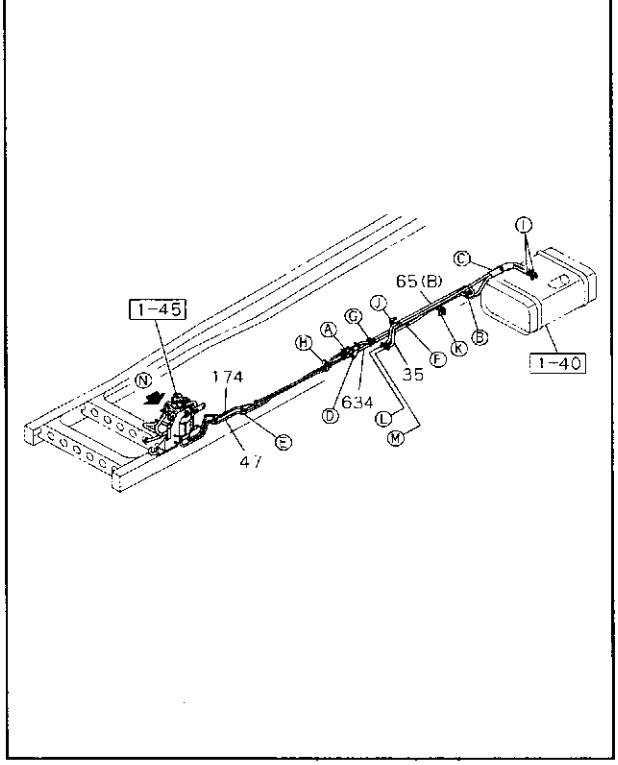


P-156

https://truckmanualshub.com/


ILLUSTRATION INDEX

1-41	FUEL PIPING; CHASSIS
FIG-NO.	PIPING NO. 2

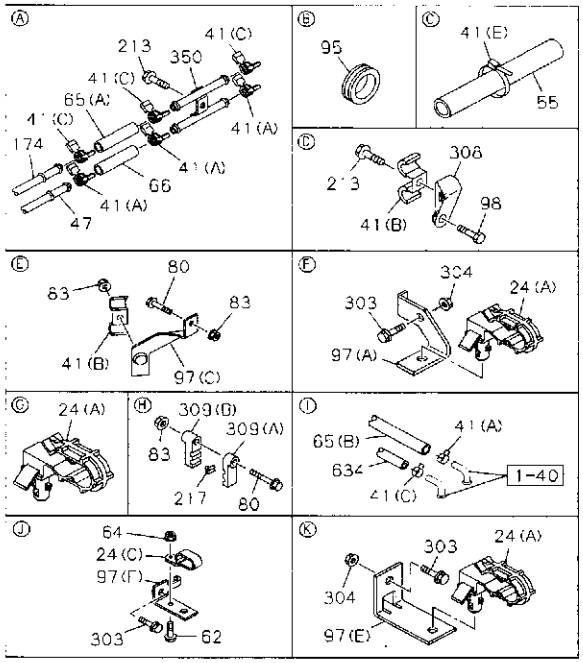


P-157

1-41	FUEL PIPING; CHASSIS
FIG-NO.	FUEL SEDIMENTER FIXING

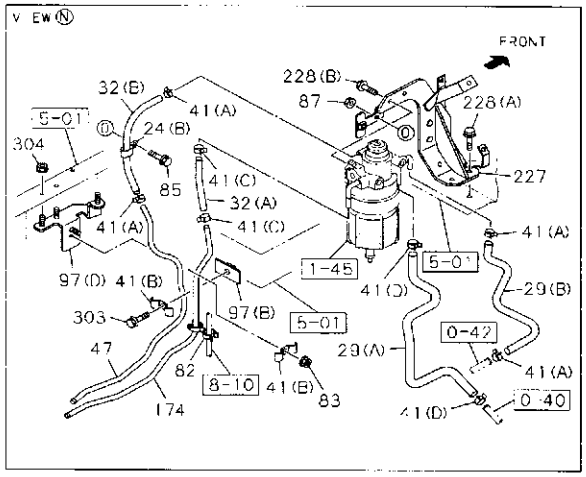


P-158

1-41	FUEL PIPING; CHASSIS
FIG-NO.	PRE FUEL FILTER FIXING

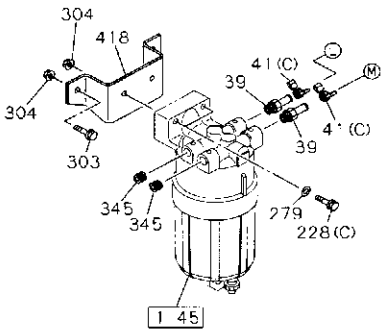

P-159

1-45	WATER SEDIMENTER; FUEL
FIG-NO.	NO. 1

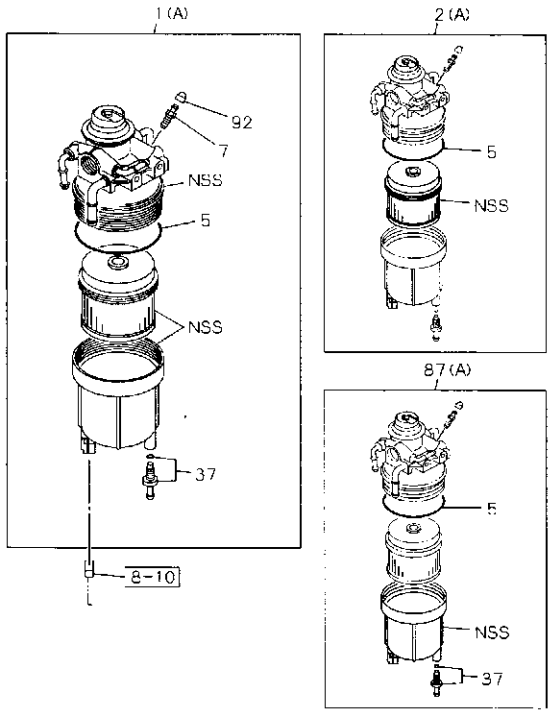


P-166

https://truckmanualshub.com/


ILLUSTRATION INDEX

1-45 FIG-NO.	WATER SEDIMENTER; FUEL NO. 2

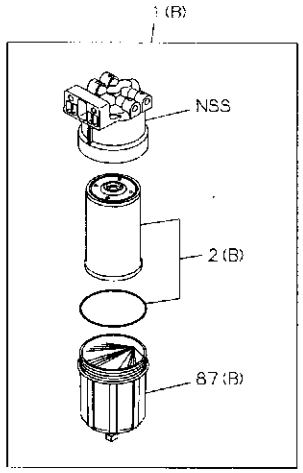


P-167

1-50 FIG-NO.	EXHAUST PIPE AND SILENCER FRONT

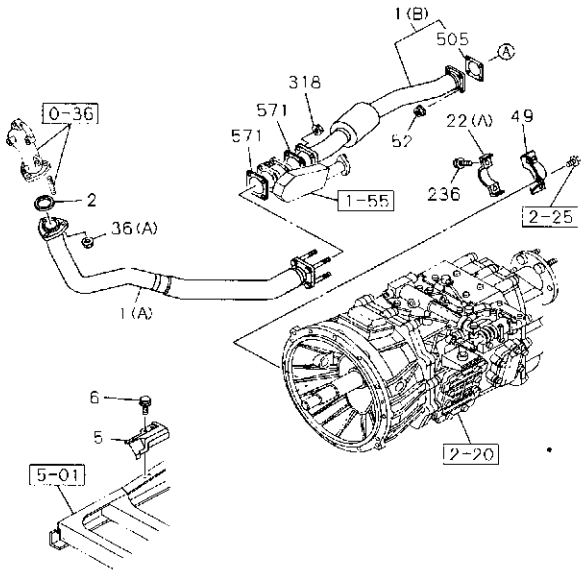


P-170

1-50 FIG-NO.	EXHAUST PIPE AND SILENCER REAR

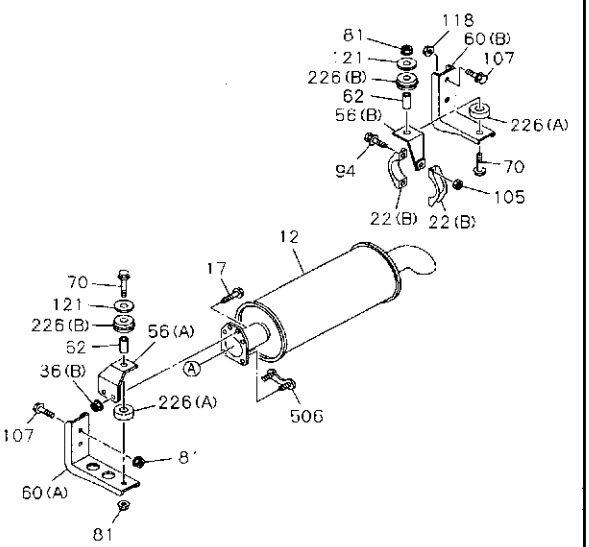

P-171

1-55 FIG-NO.	EXHAUST BRAKE VALVE AND CONTROL CYLINDER

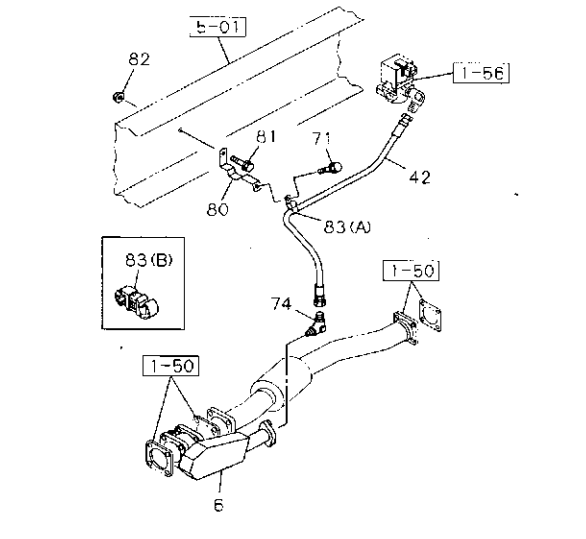


P-176

https://truckmanualshub.com/


ILLUSTRATION INDEX

1-56 EXHAUST BRAKE SYSTEM
FIG-NO.

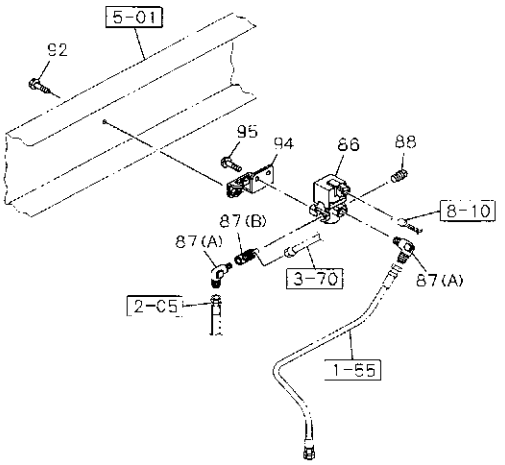


P-178

2-01 CLUTCH
FIG-NO. CLUTCH DISC AND PLATE

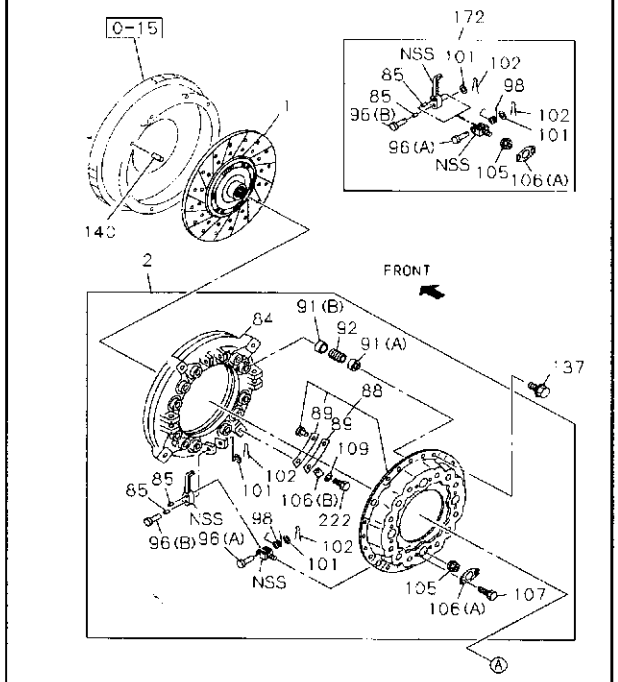


P-182

2-01 CLUTCH
FIG-NO. CLUTCH SHAFT AND CLUTCH BOOSTER

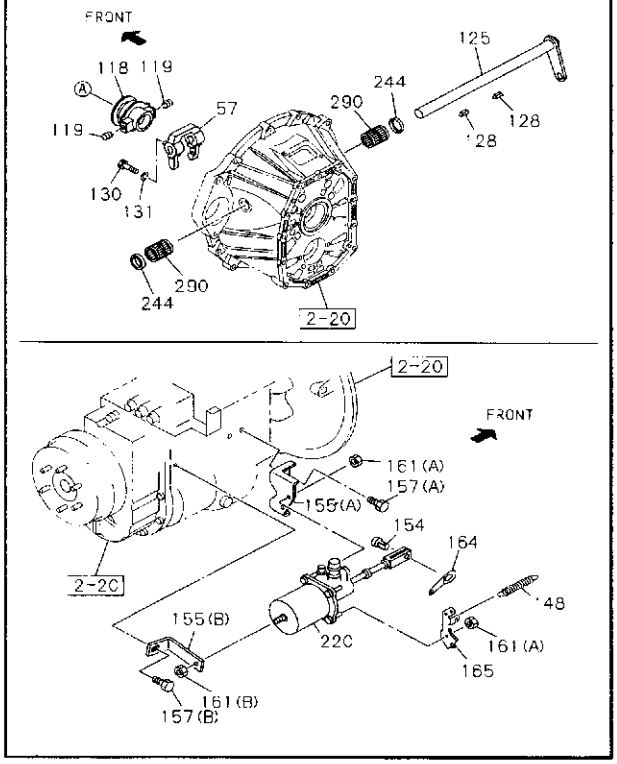

P-183

2-03 CLUTCH PEDAL AND CONTROL
FIG-NO.

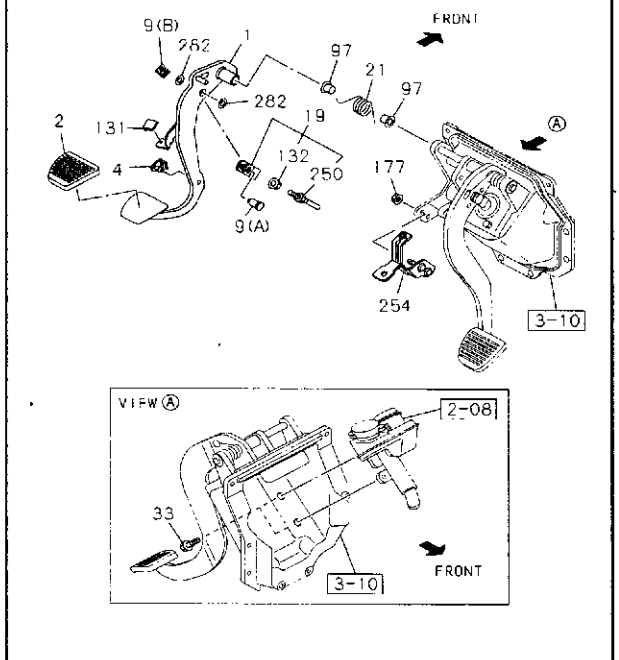


P-188

https://truckmanualshub.com/


ILLUSTRATION INDEX

2-05	CLUTCH PIPING
FIG-NO.	NO. 1

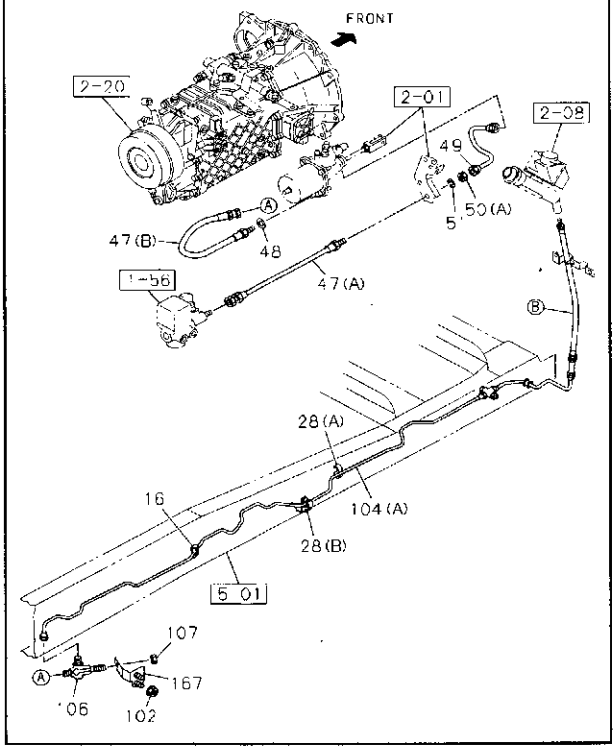


P-192

2-05	CLUTCH PIPING
FIG-NO.	NO. 2

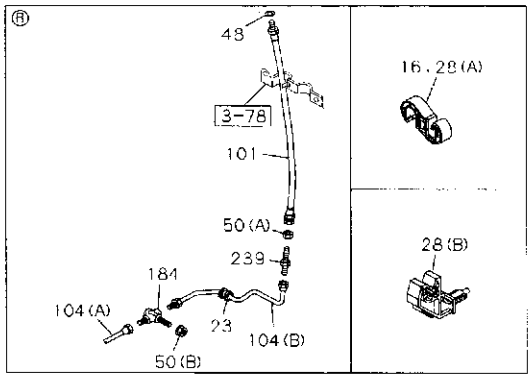


P-193

2-07	CLUTCH BOOSTER: MINIPACK
FIG-NO.	

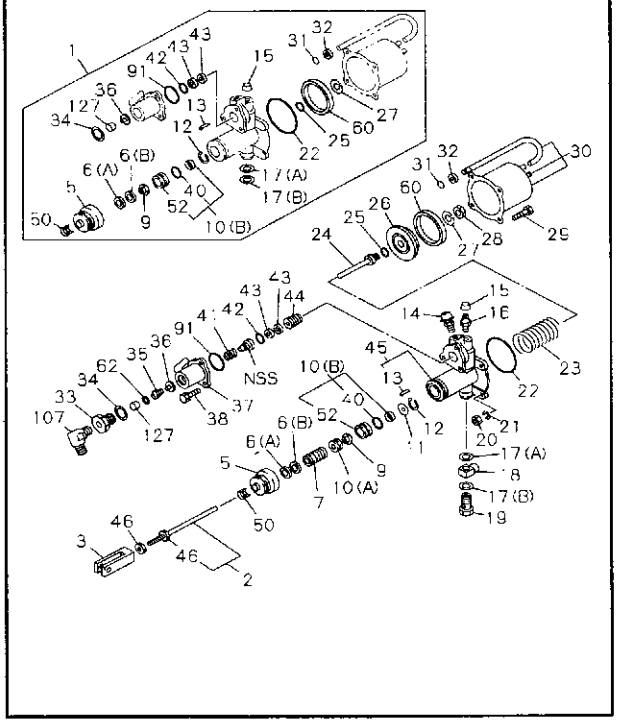

P-196

2-08	CLUTCH MASTER CYLINDER
FIG-NO.	

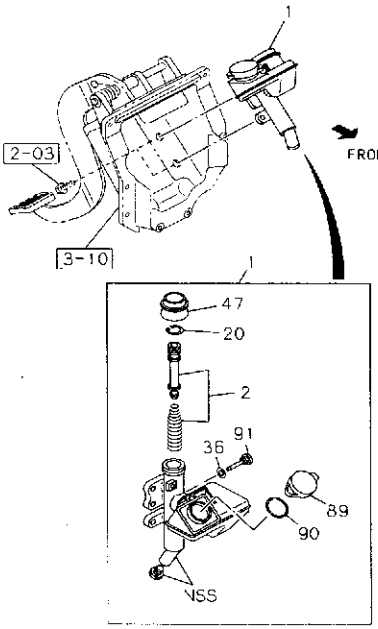


P-202


https://truckmanualshub.com/

ILLUSTRATION INDEX


2-10 FIG-NO.	REPAIR KIT; TRANSMISSION OVERHAUL	P-204

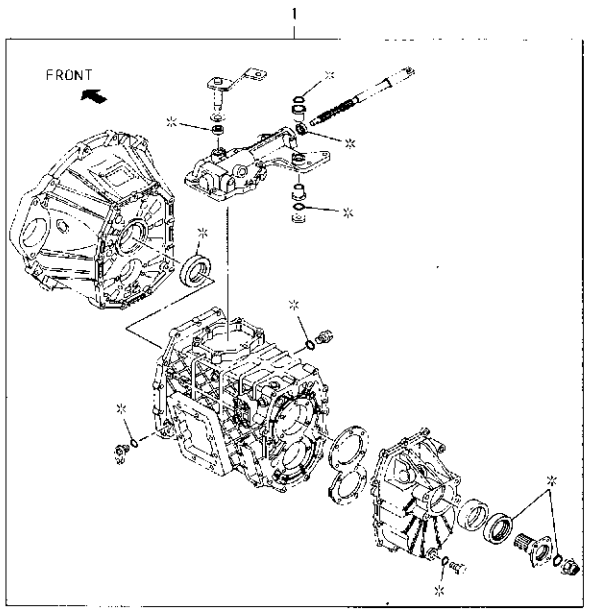


2-20 FIG-NO.	MANUAL TRANSMISSION ASM AND CASE ASM	P-206

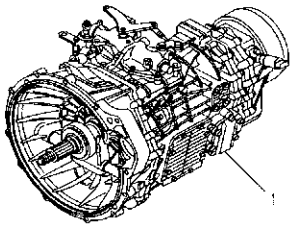

2-20 FIG-NO.	MANUAL TRANSMISSION ASM AND CASE CASE AND OTHER PARTS	P-207

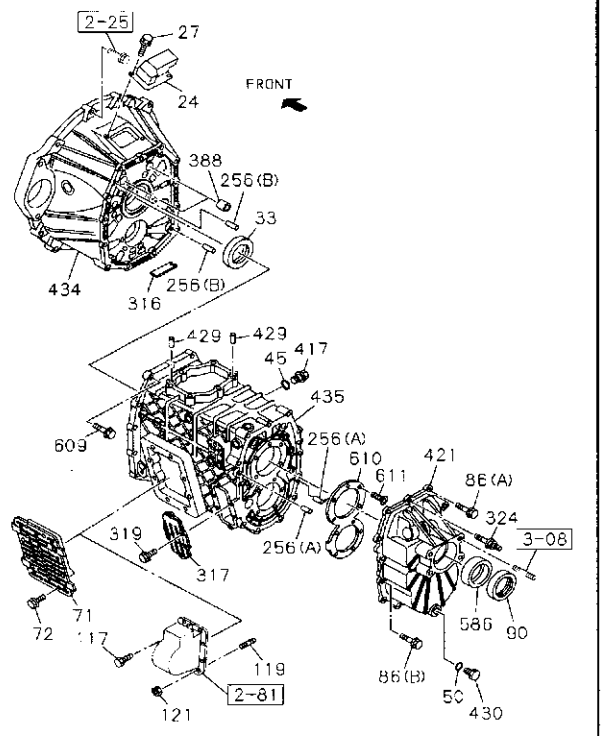


2-20 FIG-NO.	MANUAL TRANSMISSION ASM AND CASE T/M HARNESS BRACKET	P-208

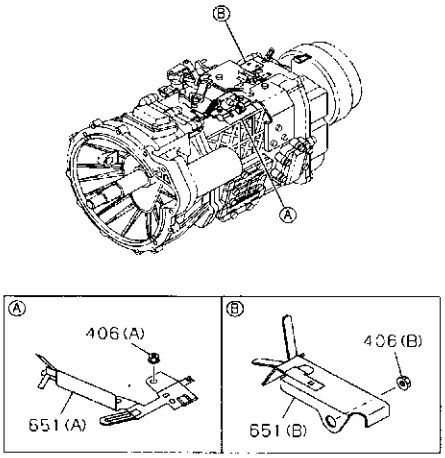

https://truckmanualshub.com/


ILLUSTRATION INDEX

2-25 FIG-NO. SPEEDOMETER DRIVEN GEAR

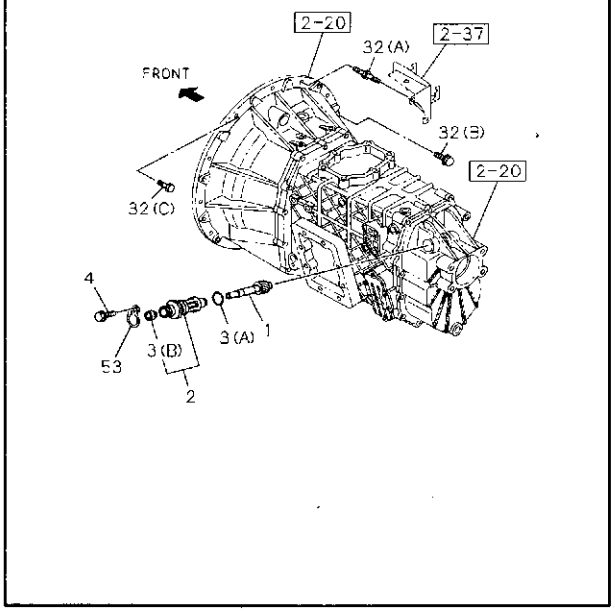


P-212

2-26 FIG-NO. MANUAL TRANSMISSION GEAR
MAIN SHAFT

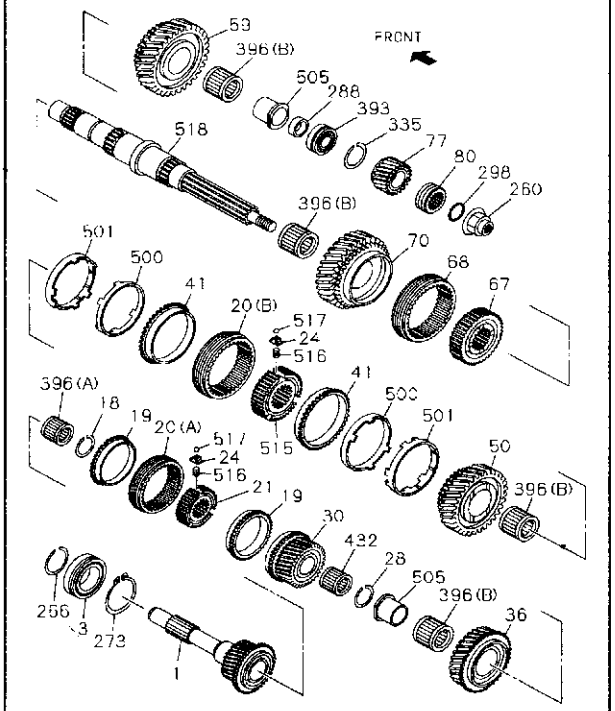


P-214

2-26 FIG-NO. MANUAL TRANSMISSION GEAR
COUNTER SHAFT AND REVERSE IDLER

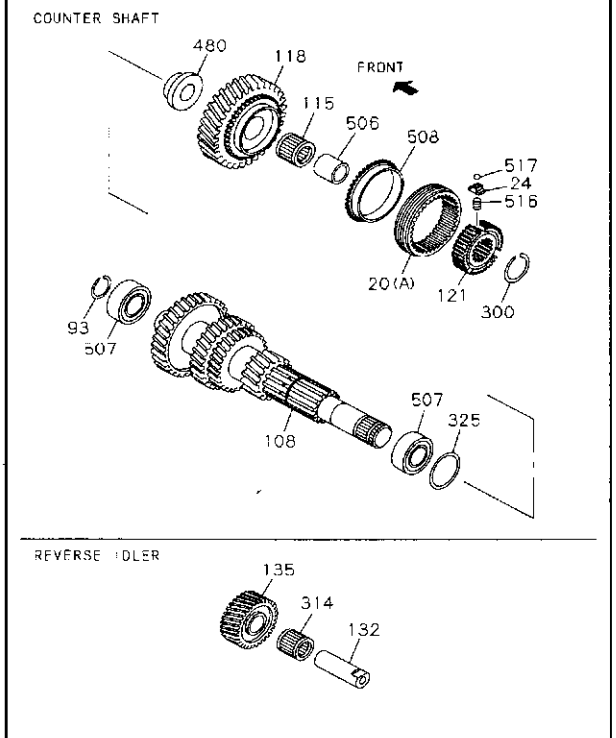

P-215

2-30 FIG-NO. GEAR SHIFTER AND QUADRANT BOX
ARM AND ROD

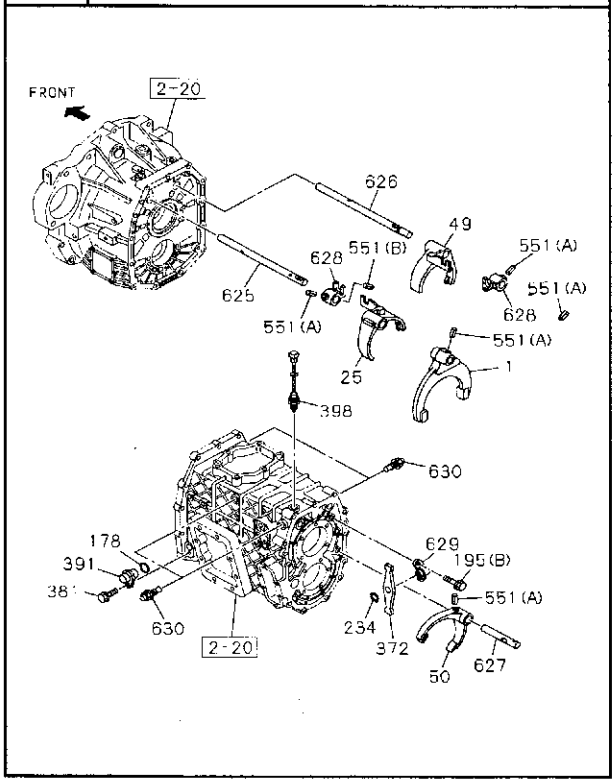


P-222

https://truckmanualshub.com/


ILLUSTRATION INDEX

2-30	GEAR SHIFTER AND QUADRANT BOX
FIG-NO.	SHIFT CONTROL BOX

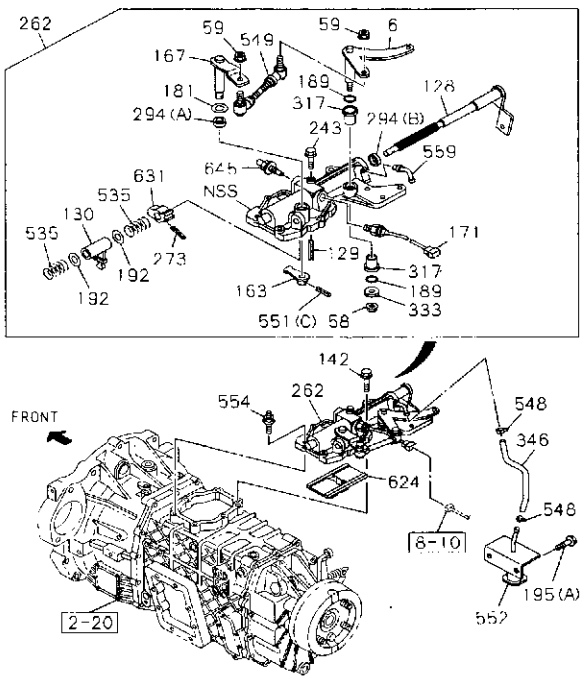


P-223

2-35	MANUAL TRANSMISSION SHIFT CONTROL LEVER
FIG-NO.	

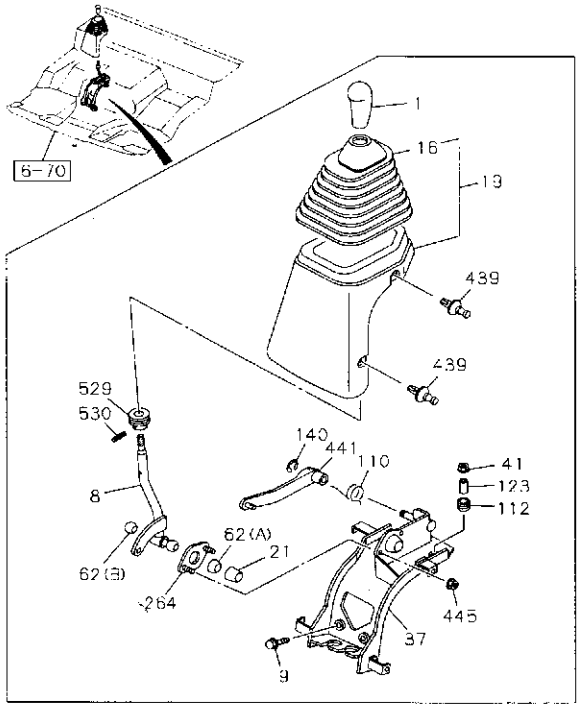


P-228

2-36	MANUAL TRANSMISSION CONT LINK AND CABLE
FIG-NO.	CABLE; TRANS CONT

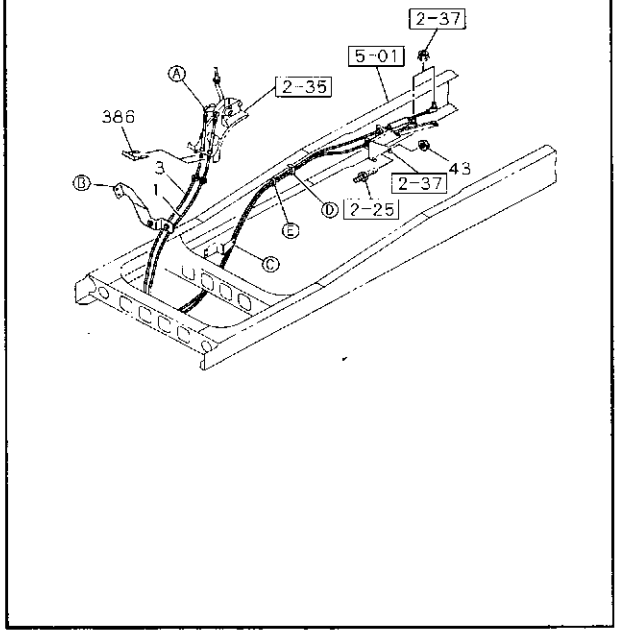

P-232

2-36	MANUAL TRANSMISSION CONT LINK AND CABLE
FIG-NO.	BRACKET AND CLIP

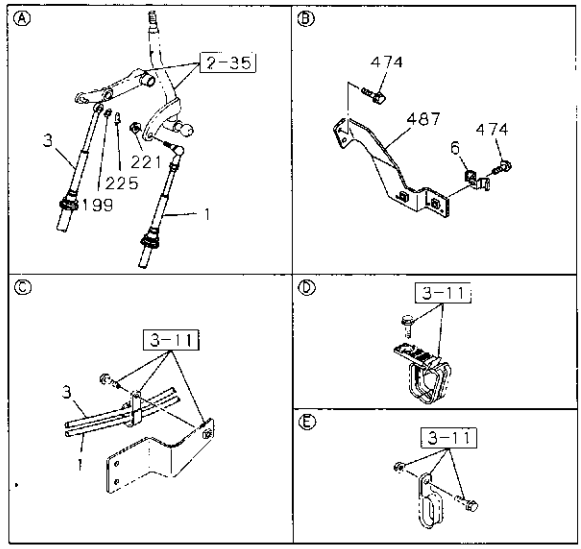


P-233

https://truckmanualshub.com/


ILLUSTRATION INDEX

2-37	MANUAL TRANSMISSION CONT; MISSION SIDE
FIG-NO.	

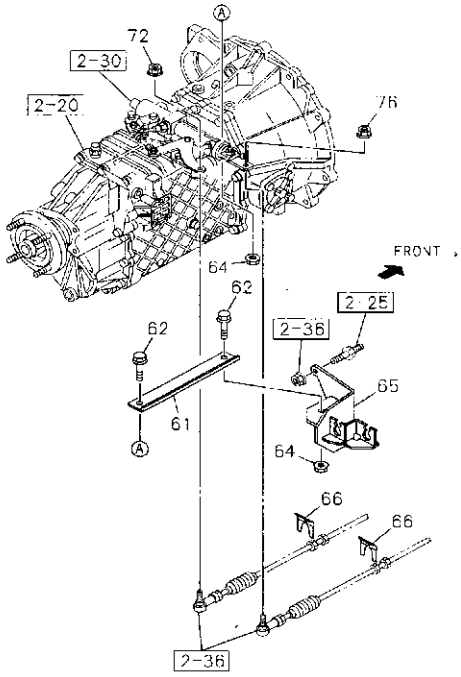


P-236

2-81	POWER TAKE OFF; TRANSMISSION SIDE
FIG-NO.	

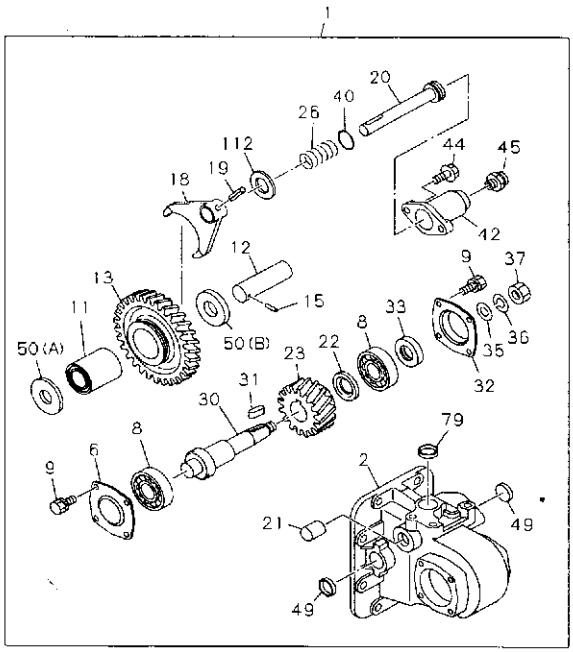


P-238

2-85	POWER TAKE OFF CONTROL
FIG-NO.	

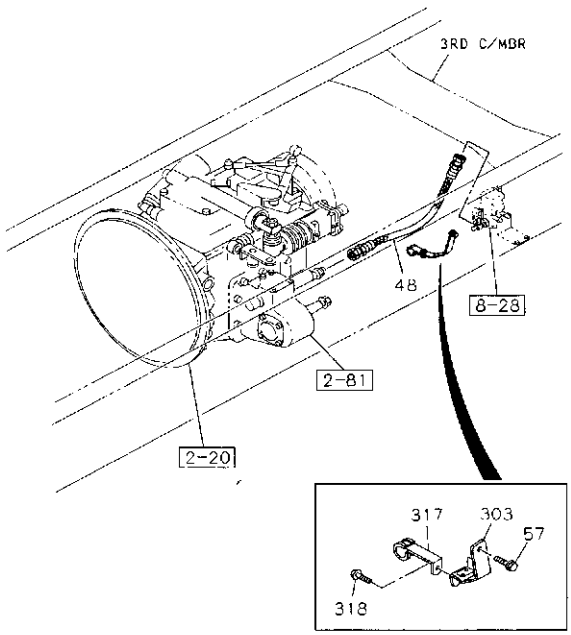

P-242

3-01	FRONT WHEEL BRAKE
FIG-NO.	

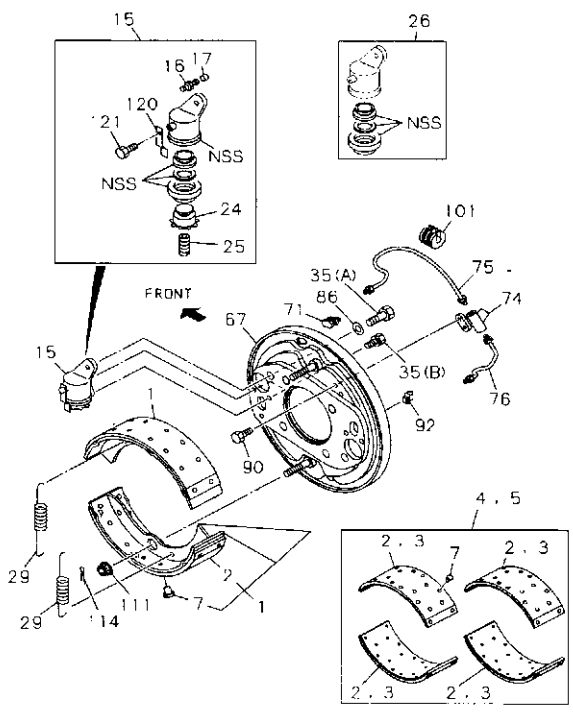


P-246

https://truckmanualshub.com/


ILLUSTRATION INDEX

3-05 REAR WHEEL BRAKE
FIG-NO.

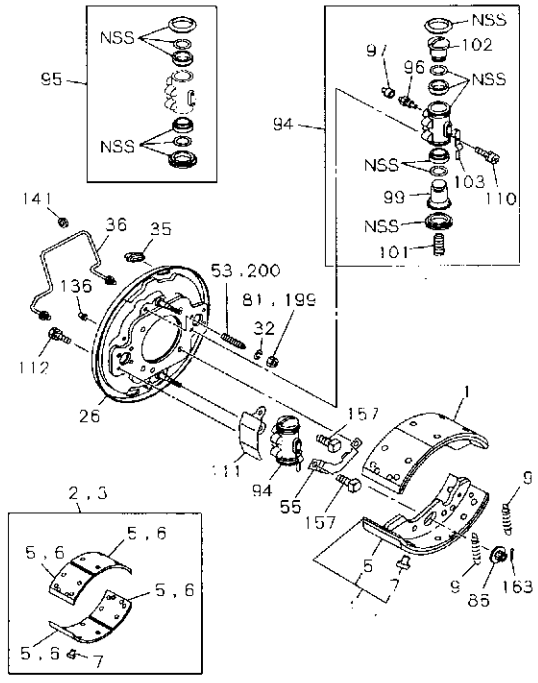


P-250

3-08 PARKING BRAKE
FIG-NO. PARKING BRAKE

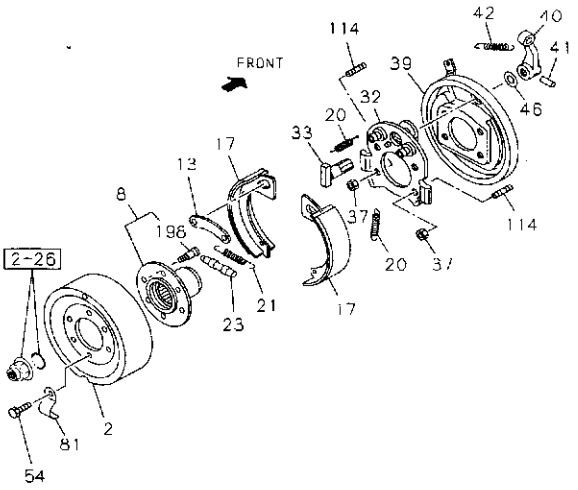


P-254

3-08 PARKING BRAKE
FIG-NO. BRACKET

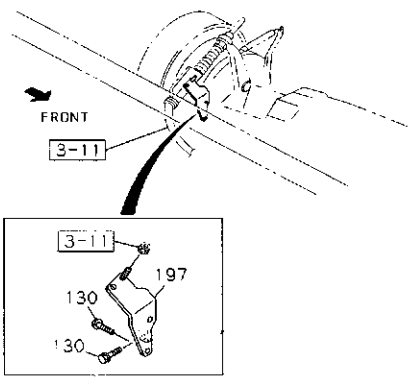

P-255

3-10 BRAKE PEDAL AND CONTROL
FIG-NO. FIXING

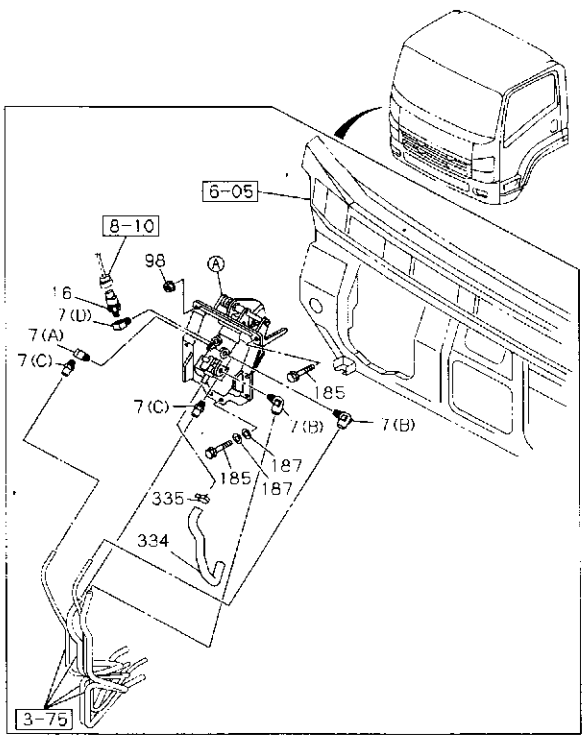


P-258

https://truckmanualshub.com/


ILLUSTRATION INDEX

3-10	BRAKE PEDAL AND CONTROL
FIG-NO.	COMPONENT

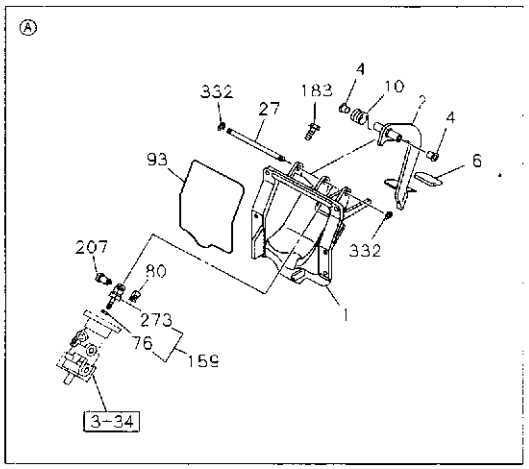


P-259

3-11	PARKING BRAKE CONTROL
FIG-NO.	NO. 1

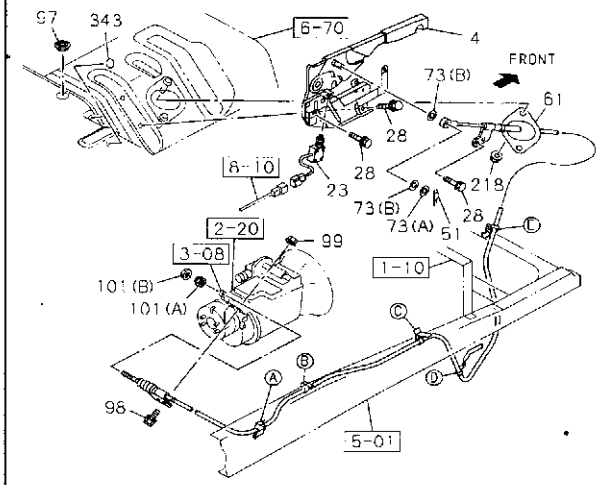


P-262

3-11	PARKING BRAKE CONTROL
FIG-NO.	NO. 2

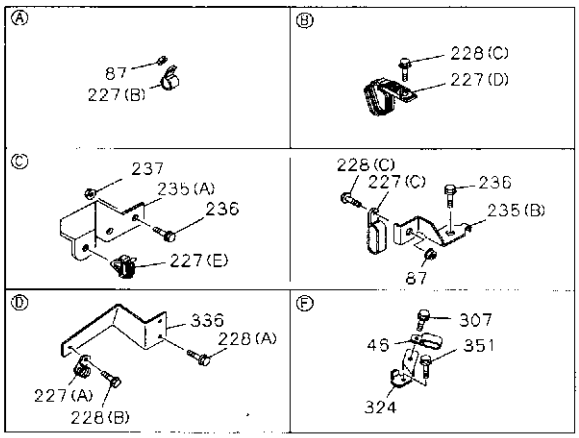

P-263

3-20	AIR TANK
FIG-NO.	FIXING

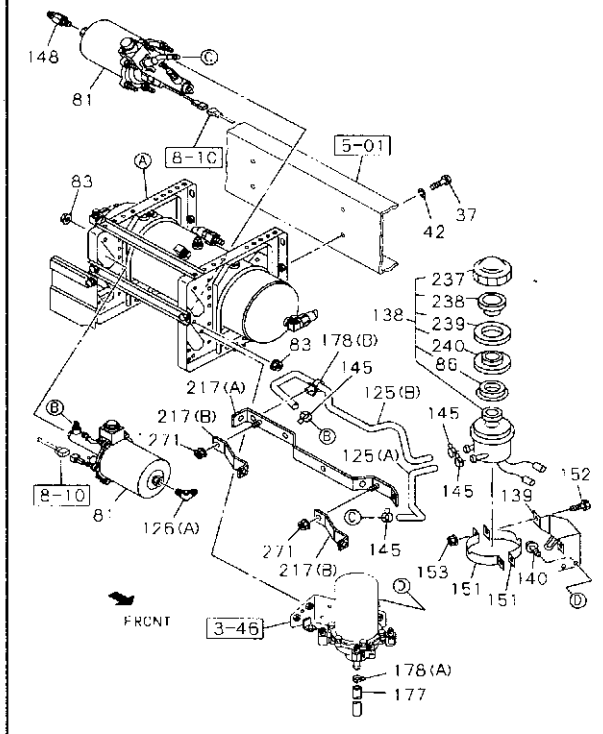


P-268

https://truckmanualshub.com/


ILLUSTRATION INDEX

3-20	AIR TANK
FIG-NO.	COMPONENT

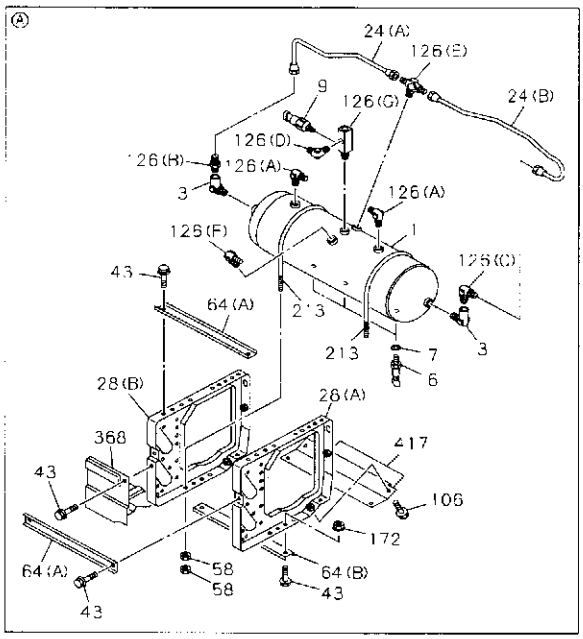


P-269

3-22	AIR CONTROL PARTS
FIG-NO.	

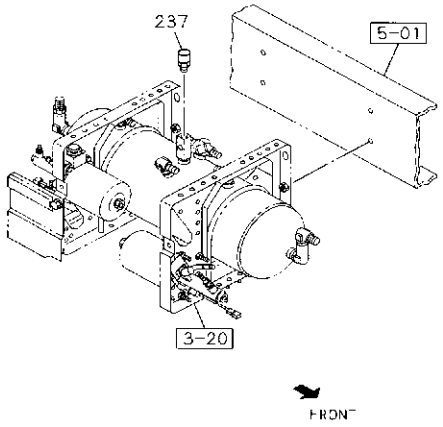


P-274

3-33	AIR MASTER
FIG-NO.	COMPONENT

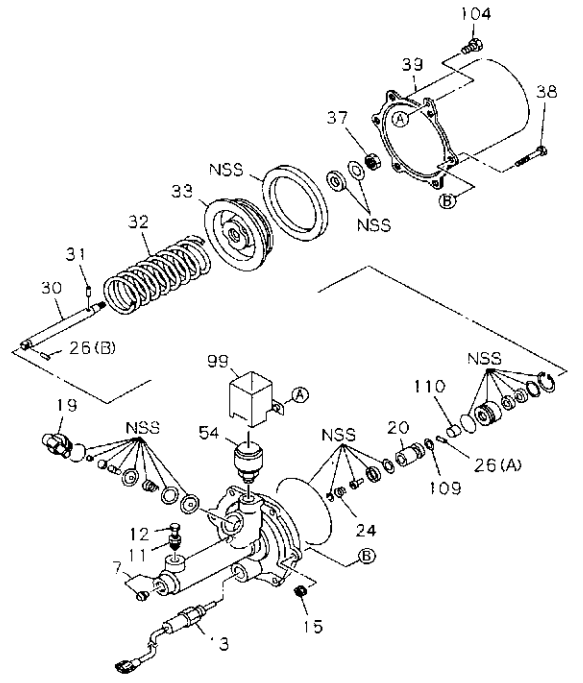

P-276

3-33	AIR MASTER
FIG-NO.	REPAIR KIT

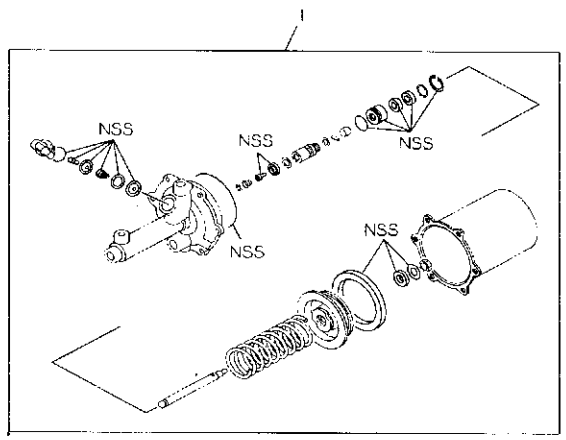


P-277

https://truckmanualshub.com/


ILLUSTRATION INDEX

3-34	BRAKE VALVE; AIR
FIG-NO.	COMPONENT

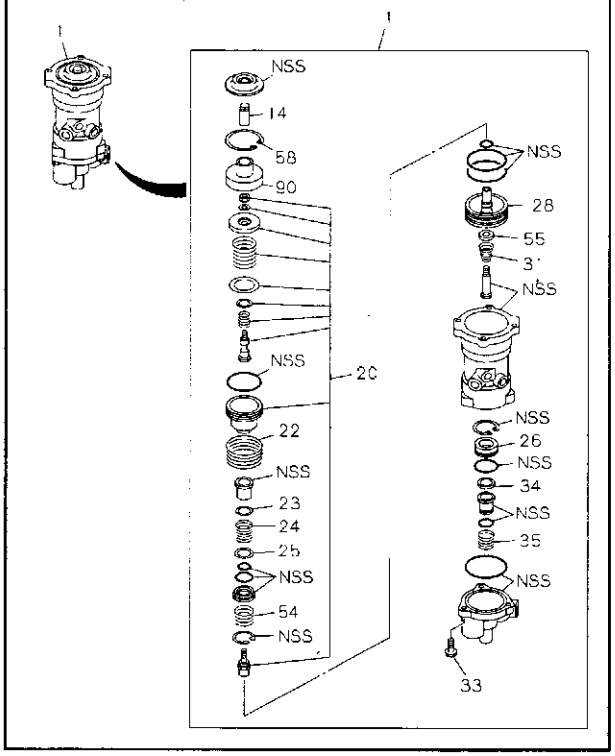


P-280

3-34	BRAKE VALVE; AIR
FIG-NO.	REPAIR KIT

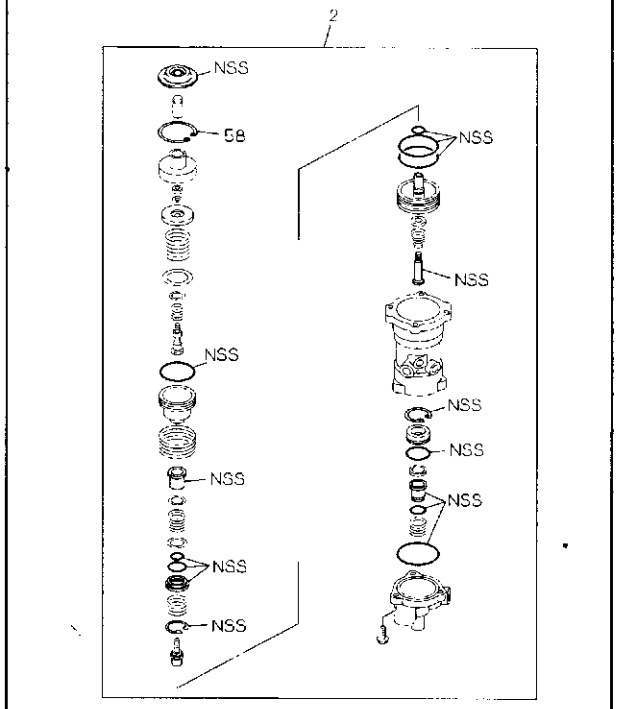


P-281

3-46	AIR DRYER
FIG-NO.	FIXING

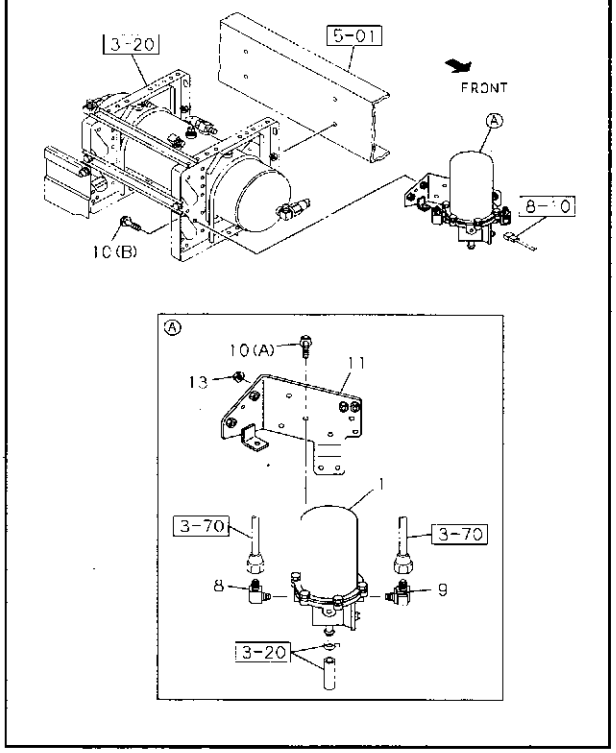

P-284

3-46	AIR DRYER
FIG-NO.	COMPONENT

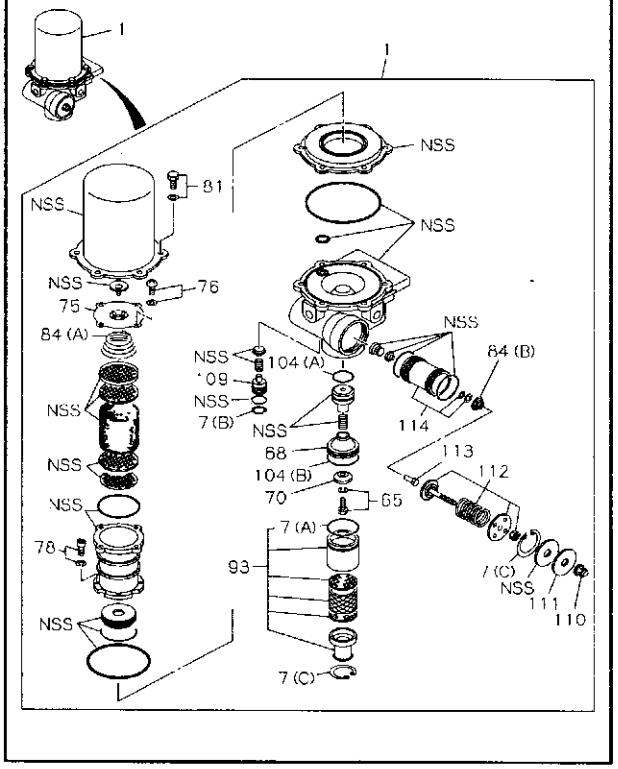


P-285

https://truckmanualshub.com/


ILLUSTRATION INDEX

3-46 AIR DRYER
FIG-NO. PISTON AND REPAIR KIT

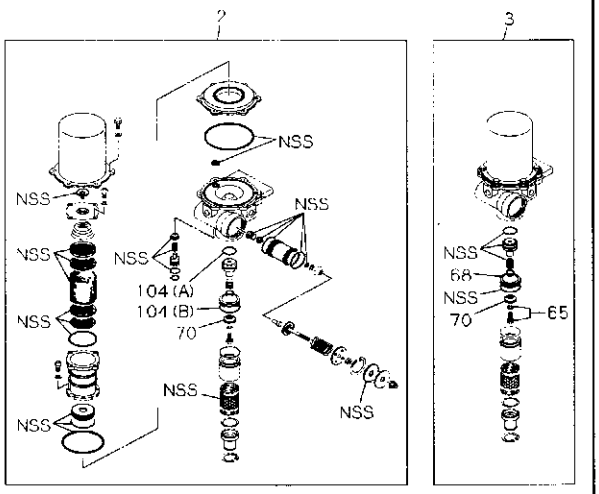


P-286

3-52 BRAKE PIPING; OIL, FRONT
FIG-NO. AIR TANK SIDE

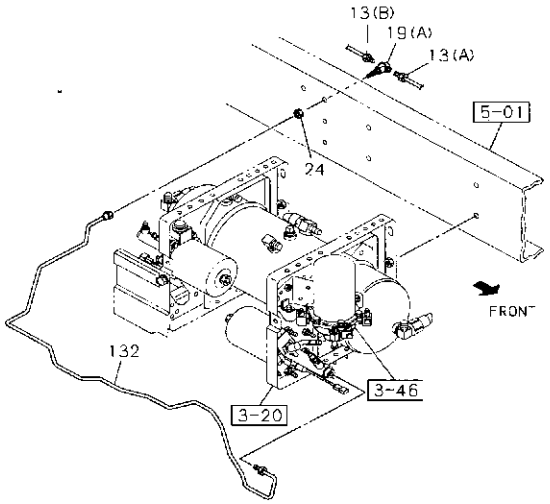


P-290

3-52 BRAKE PIPING; OIL, FRONT
FIG-NO. FRAME SIDE

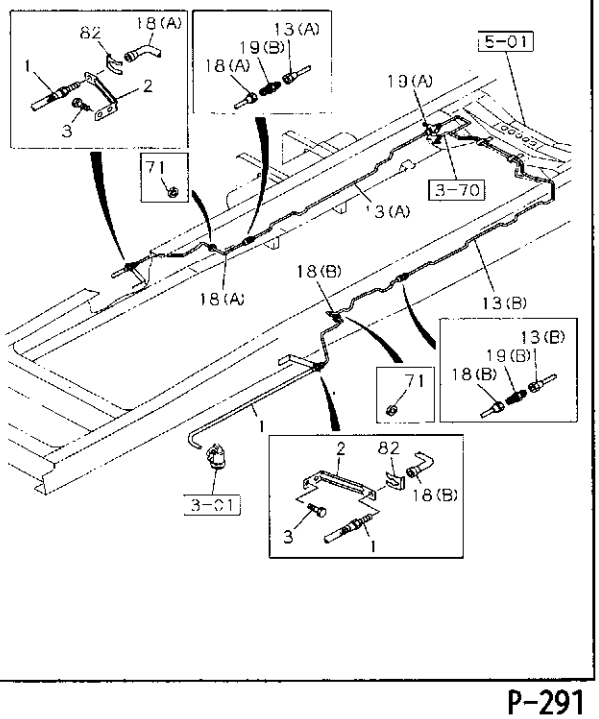

P-291

3-55 BRAKE PIPING; OIL, REAR
FIG-NO. FRAME SIDE

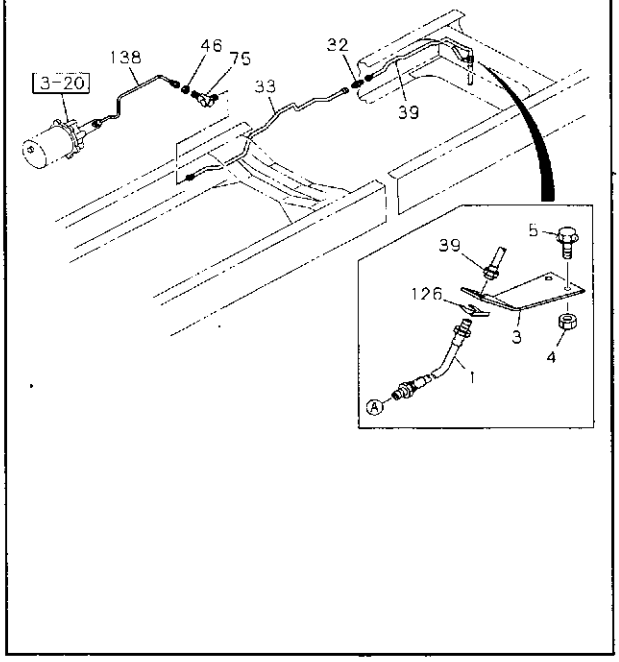


P-294

https://truckmanualshub.com/


ILLUSTRATION INDEX

3-55 FIG-NO. BRAKE PIPING; OIL, REAR
REAR AXLE SIDE

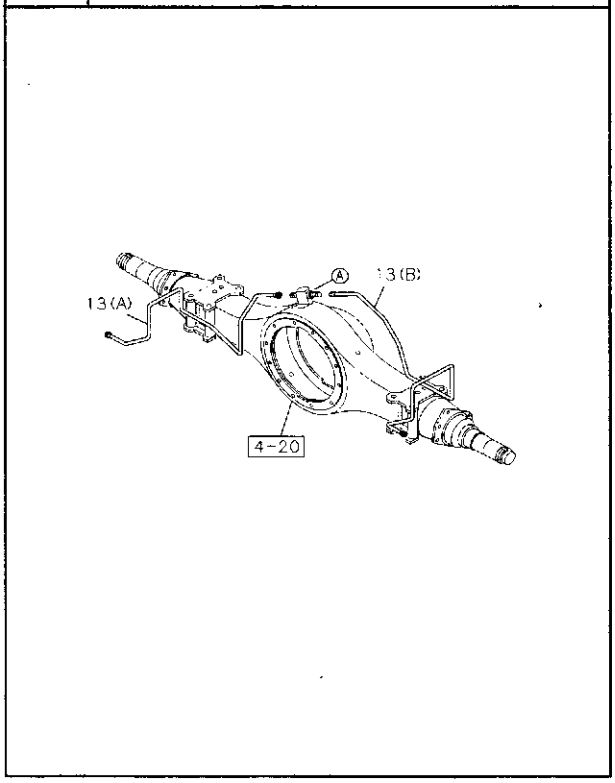


P-295

3-58 FIG-NO. FIXING PARTS; OIL PIPING
REAR AXLE SIDE

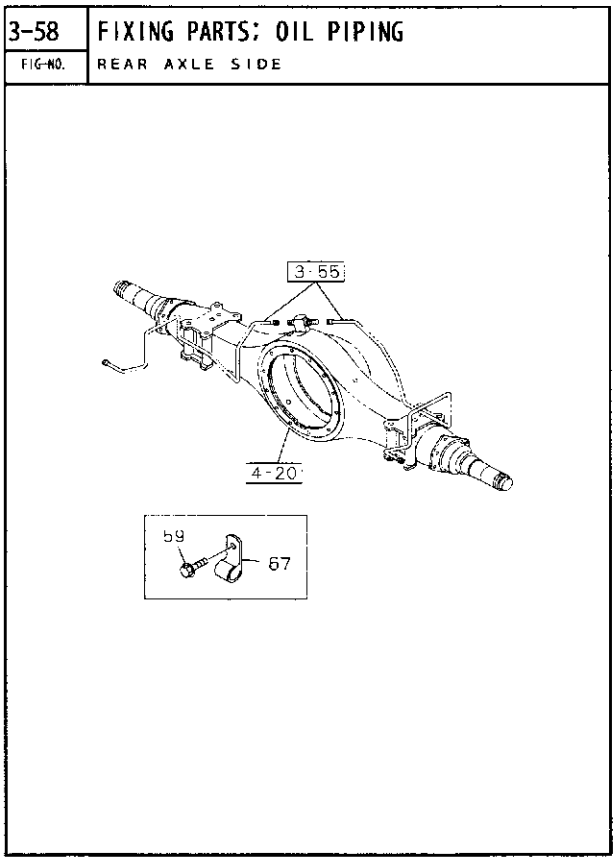


P-299

3-58 FIG-NO. FIXING PARTS; OIL PIPING
FRAME SIDE

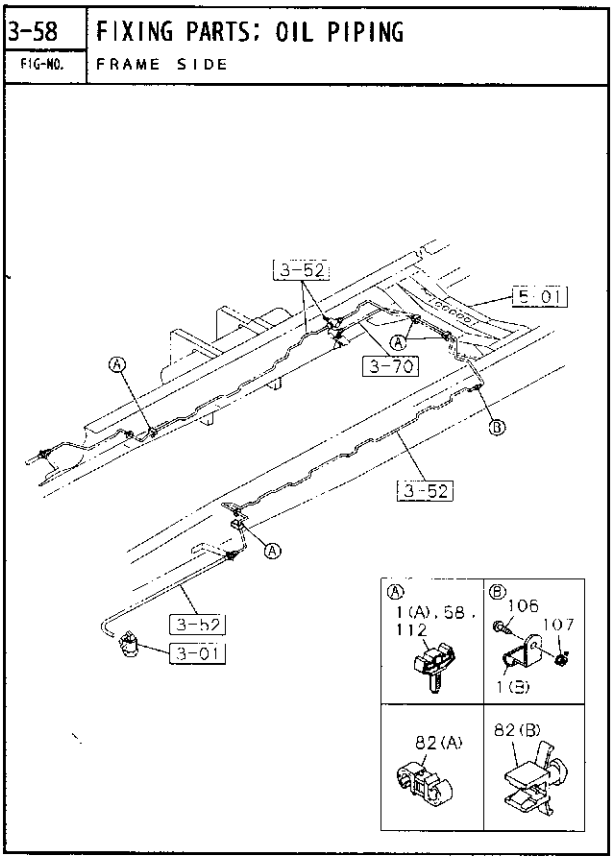

P-298

3-70 FIG-NO. BRAKE PIPING; AIR, AIR MASTER
AIR TANK SIDE

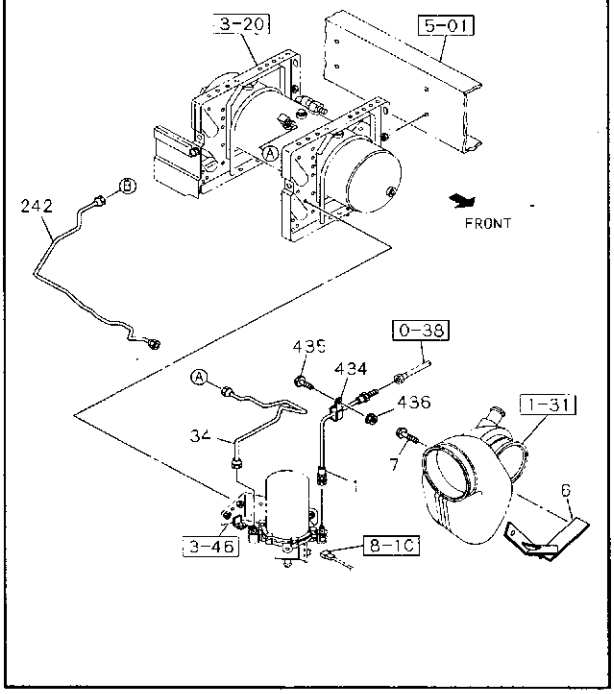


P-302

https://truckmanualshub.com/


ILLUSTRATION INDEX

3-70 FIG-NO. BRAKE PIPING; AIR, AIR MASTER
FRAME SIDE

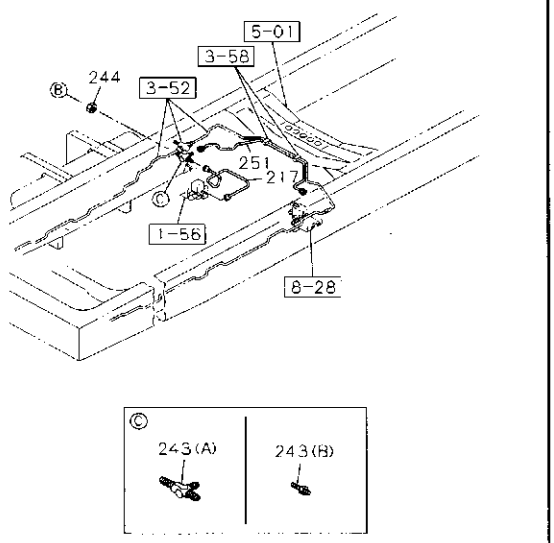


P-303

3-75 FIG-NO. BRAKE PIPING; AIR, FRONT
CAB UNDER

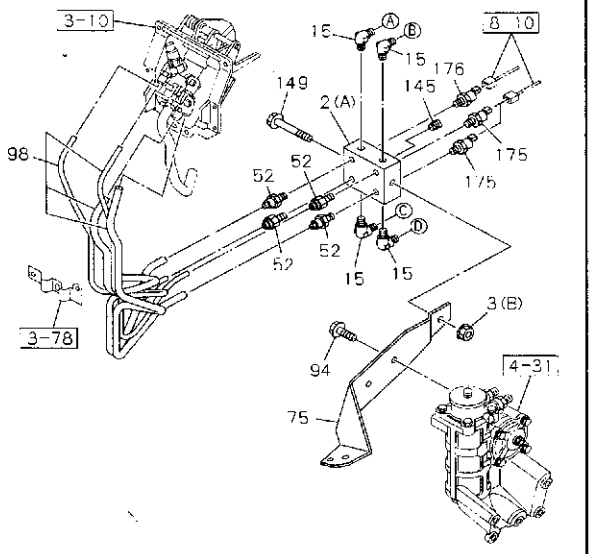


P-306

3-75 FIG-NO. BRAKE PIPING; AIR, FRONT
FRAME SIDE

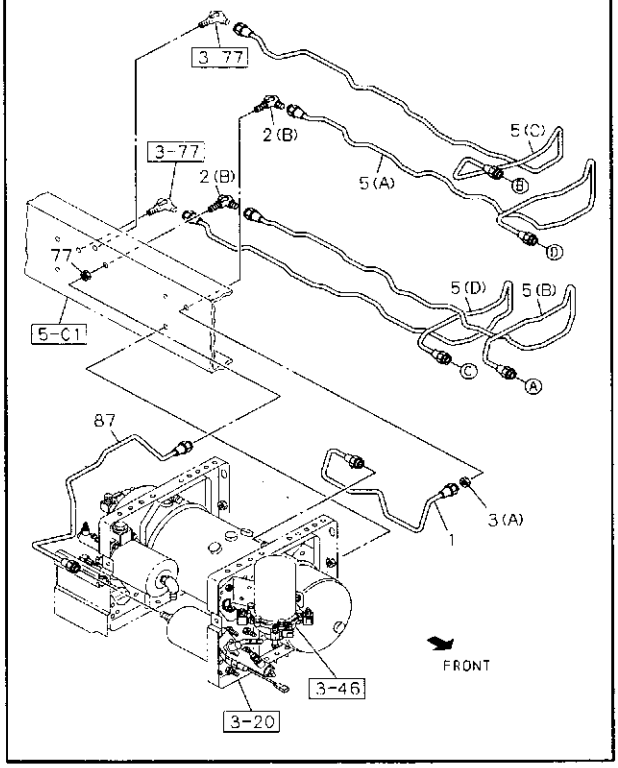

P-307

3-77 FIG-NO. BRAKE PIPING; AIR, REAR
FRAME SIDE

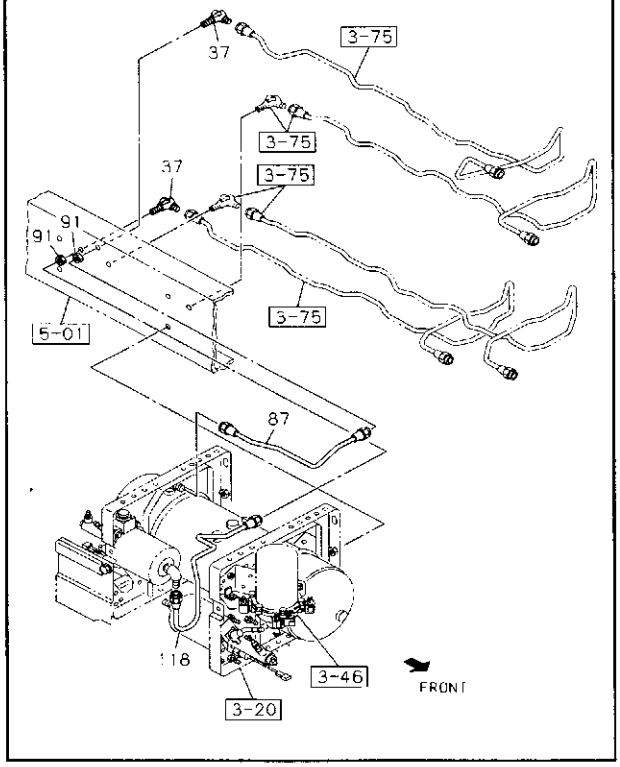


P-310

https://truckmanualshub.com/


ILLUSTRATION INDEX

3-77	BRAKE PIPING; AIR, REAR
FIG-NO.	CAB SIDE

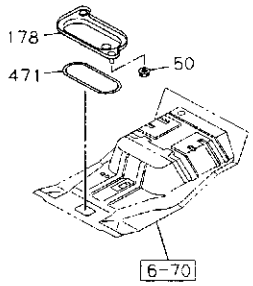


P-311

3-78	FIXING PARTS; AIR PIPING
FIG-NO.	NO. 1

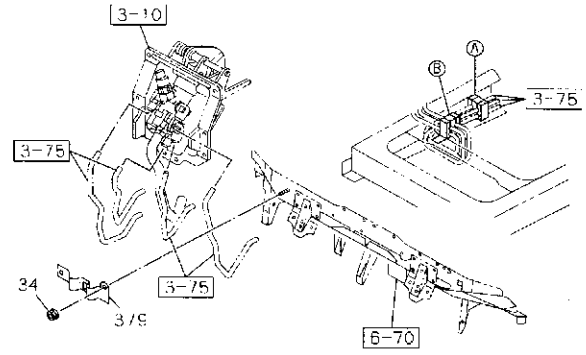


P-314

3-78	FIXING PARTS; AIR PIPING
FIG-NO.	NO. 2

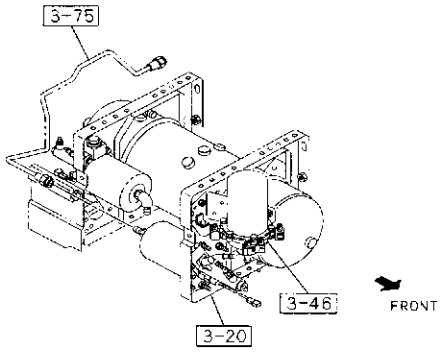

P-315

4-01	PROPELLER SHAFT
FIG-NO.	1ST AND 2ND SHAFT

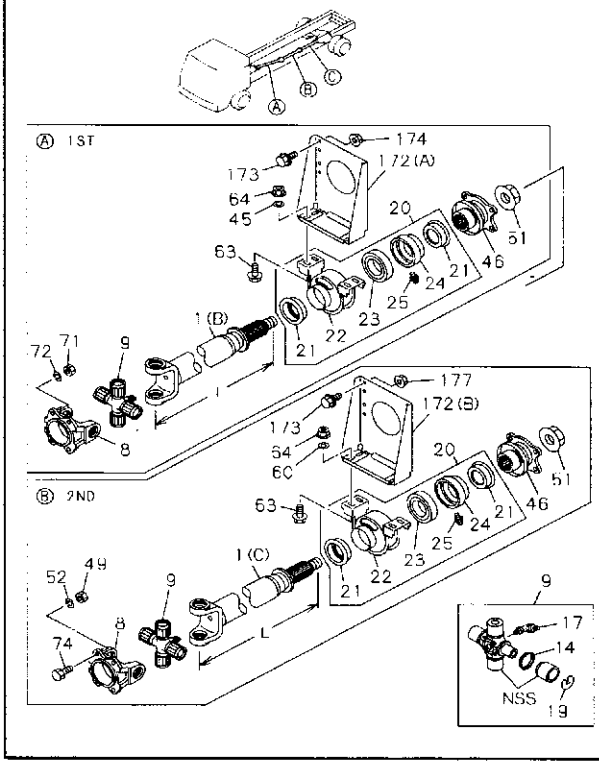


P-320

https://truckmanualshub.com/


ILLUSTRATION INDEX

4-01 PROPELLER SHAFT
FIG-NO. END SHAFT

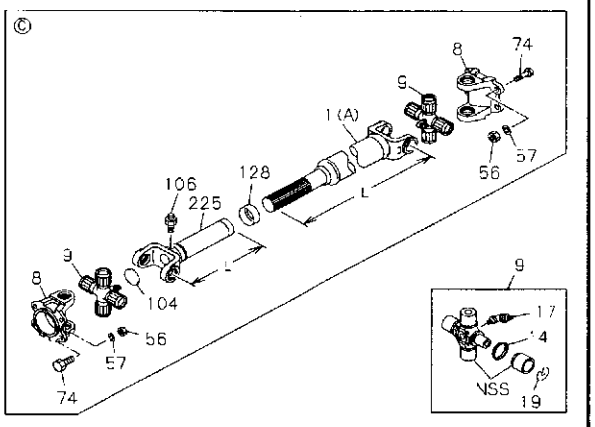


P-321

4-10 FRONT AXLE
FIG-NO.

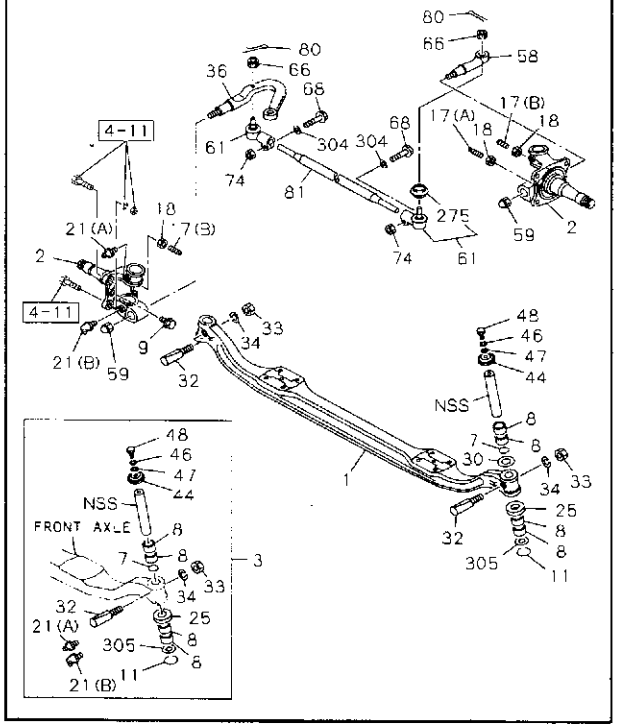


P-326

4-11 FRONT HUB AND DRUM OR ROTOR
FIG-NO.

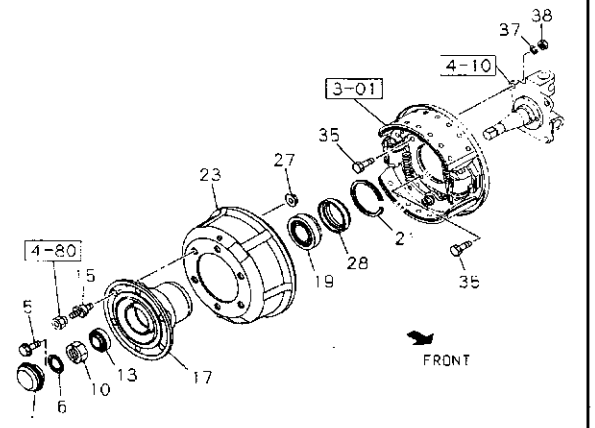

P-332

4-20 REAR AXLE CASE AND SHAFT
FIG-NO.

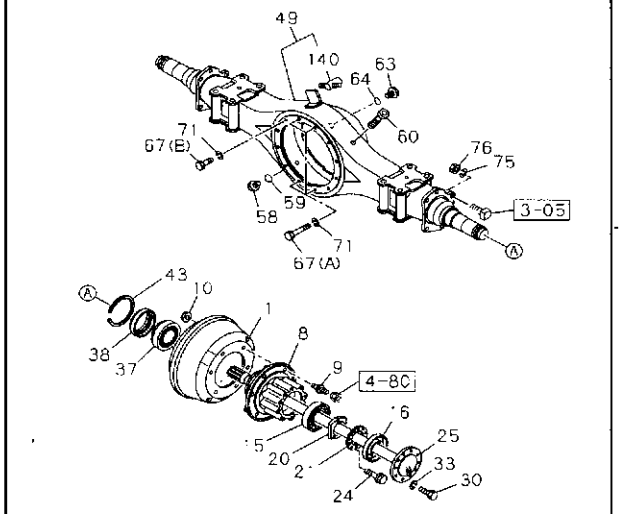


P-336

https://truckmanualshub.com/


ILLUSTRATION INDEX

4-25 REAR FINAL DRIVE
FIG-NO.

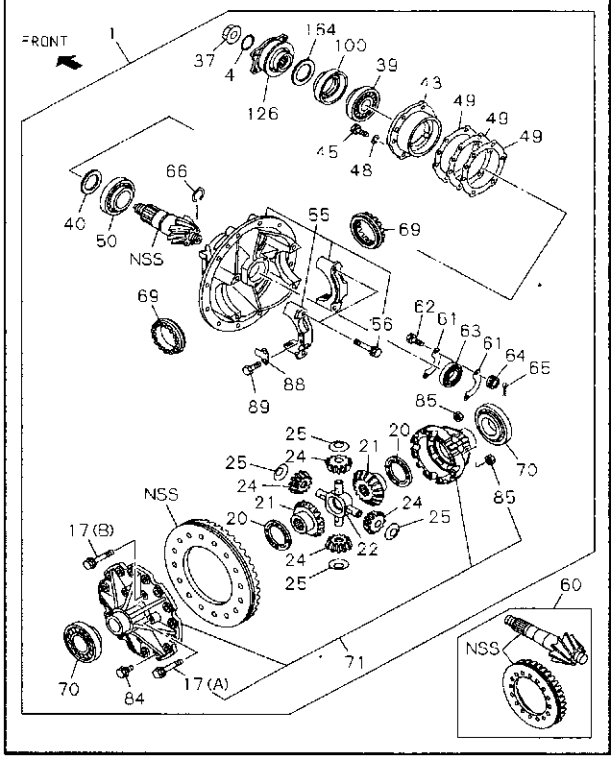


P-340

4-30 STEERING WHEEL AND COWL
FIG-NO.

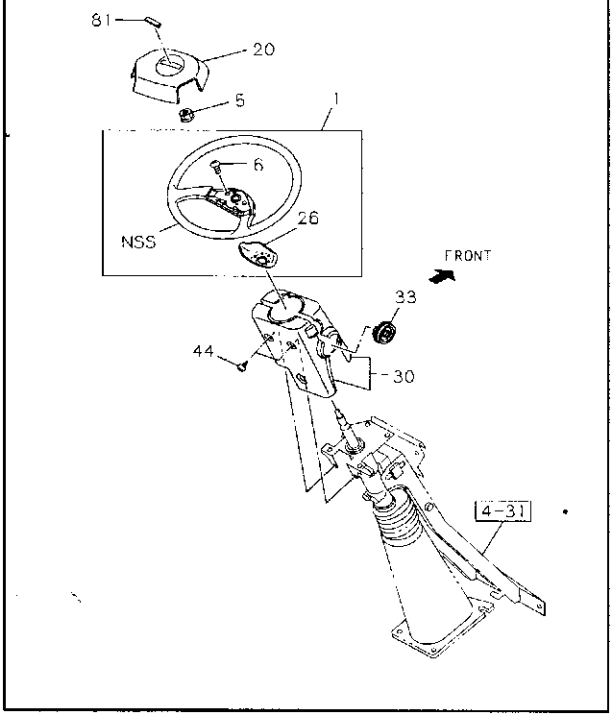


P-346

4-31 STEERING COLUMN AND SHAFT
FIG-NO.

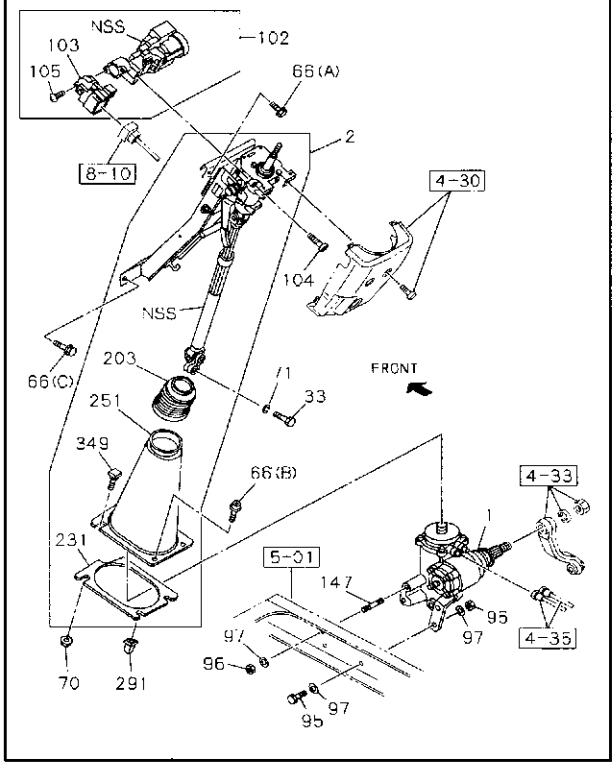

P-348

4-33 STEERING LINKAGE
FIG-NO.

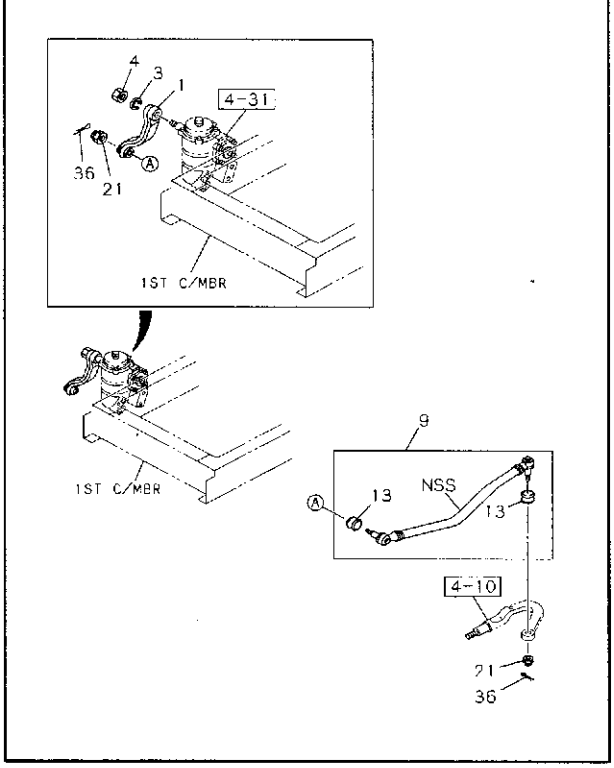


P-352

https://truckmanualshub.com/


ILLUSTRATION INDEX

4-35 POWER STEERING CONTROL; CHASSIS SIDE
FIG-NO. NO. 1

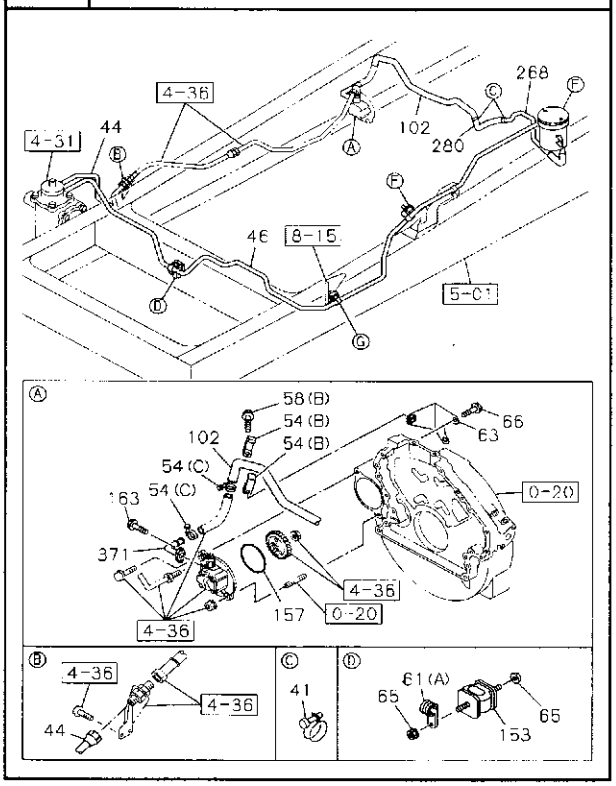


P-354

4-35 POWER STEERING CONTROL; CHASSIS SIDE
FIG-NO. NO. 2

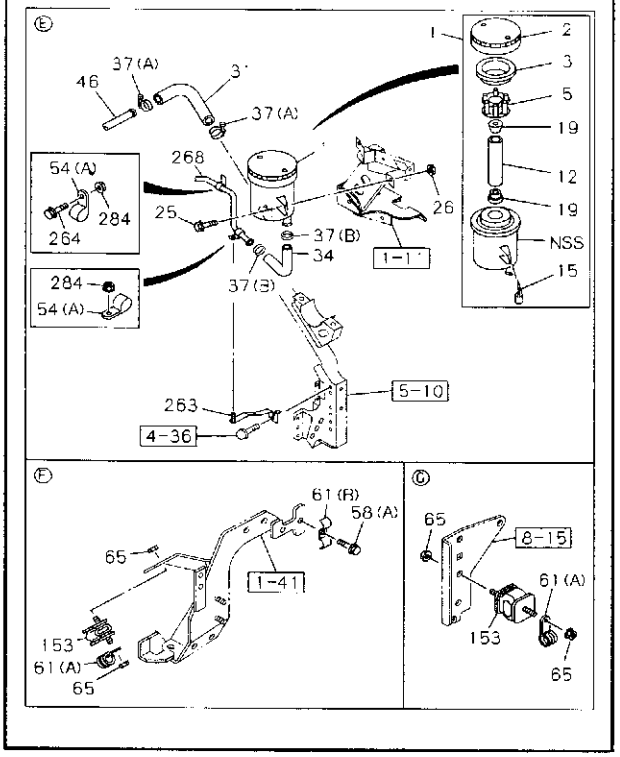


P-355

4-36 POWER STEERING CONTROL; ENGINE SIDE
FIG-NO.

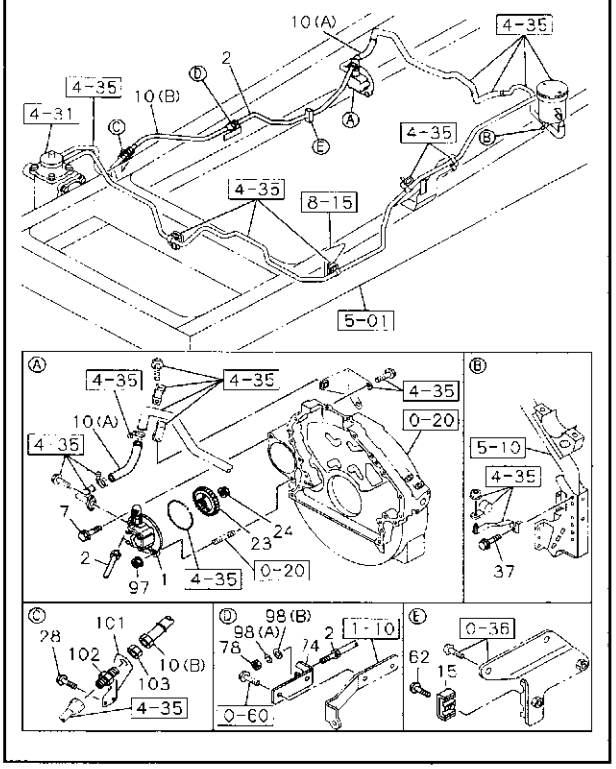

P-360

4-40 STEERING UNIT
FIG-NO. COMPONENT

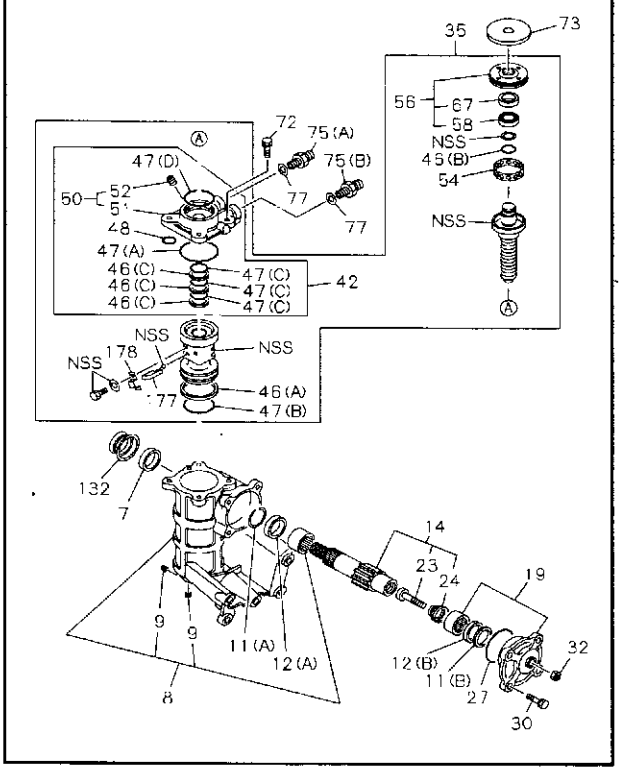


P-364

https://truckmanualshub.com/


ILLUSTRATION INDEX

4-40 STEERING UNIT
FIG-NO. REPAIR KIT

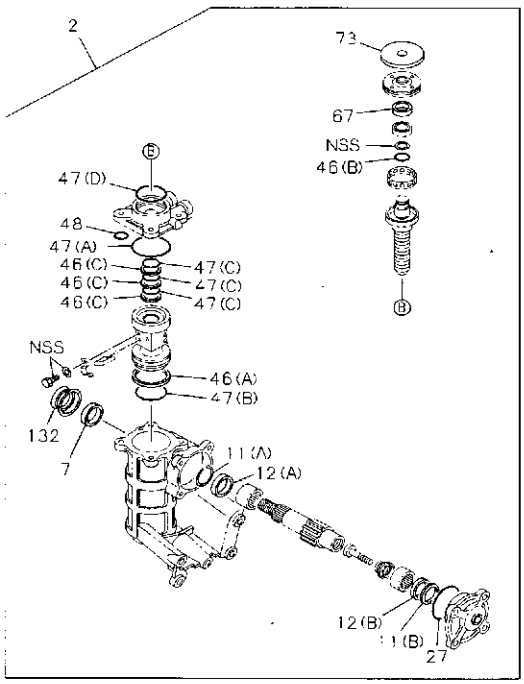


P-365

4-42 POWER STEERING OIL PUMP
FIG-NO.

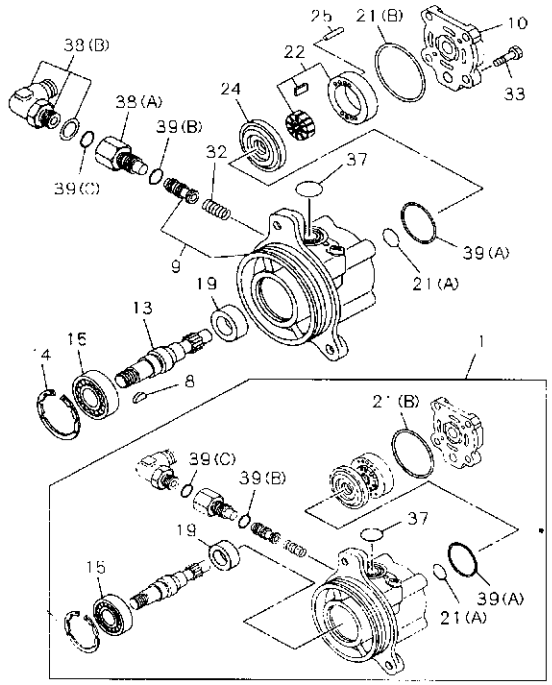


P-370

4-50 FRONT SUSPENSION
FIG-NO.

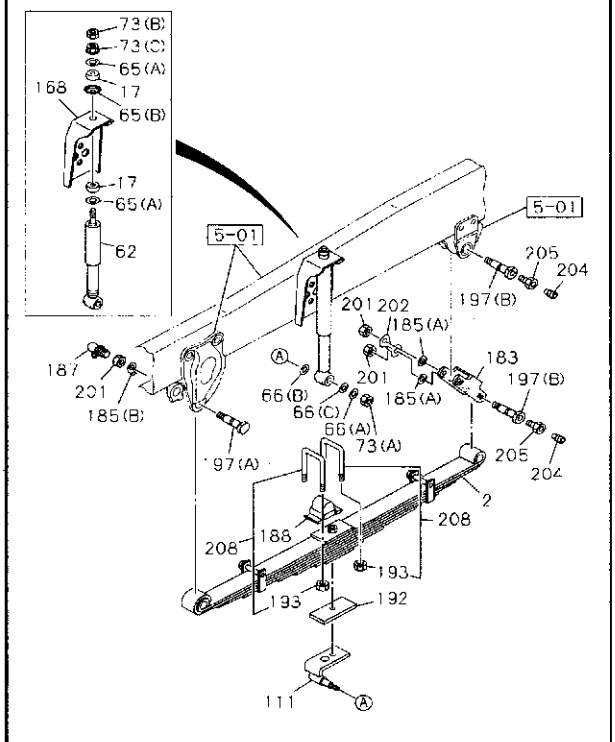

P-374

4-55 FRONT LEAF SPRING
FIG-NO.

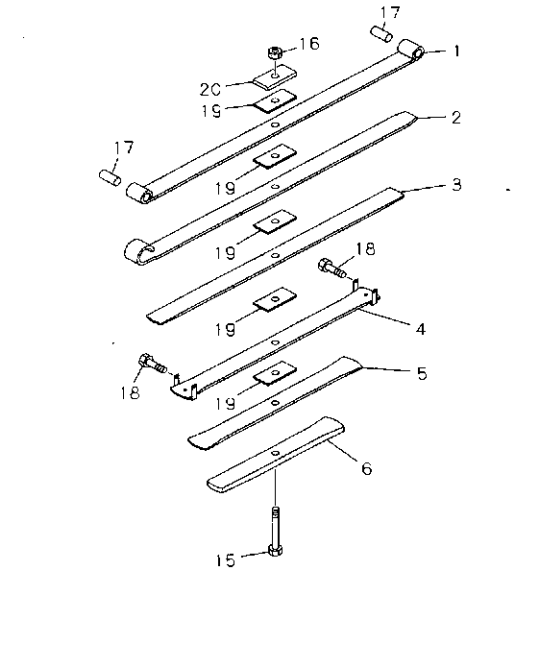


P-378

https://truckmanualshub.com/


ILLUSTRATION INDEX

4-60 REAR SUSPENSION
FIG-NO.

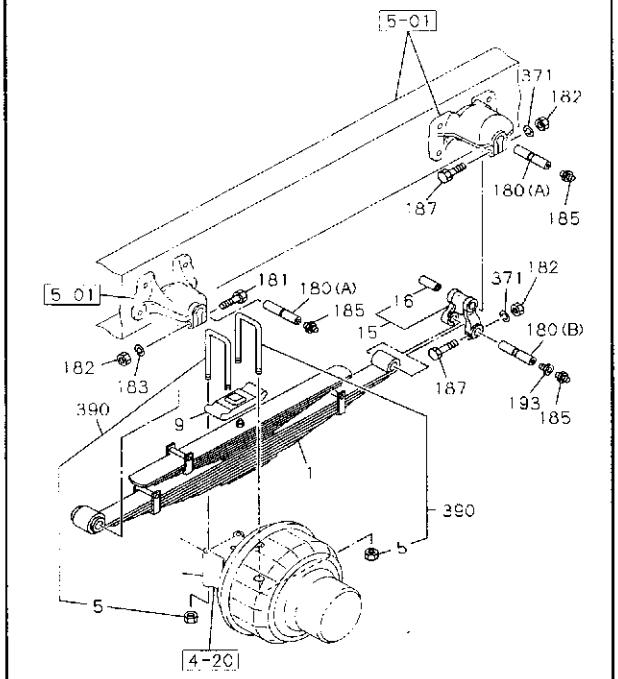


P-382

4-65 REAR LEAF SPRING
FIG-NO.

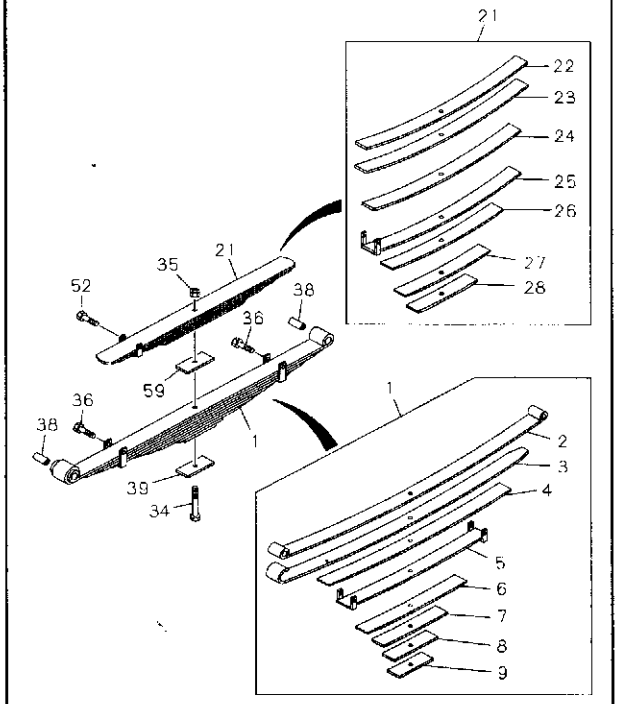


P-386

4-80 ROAD WHEEL
FIG-NO.

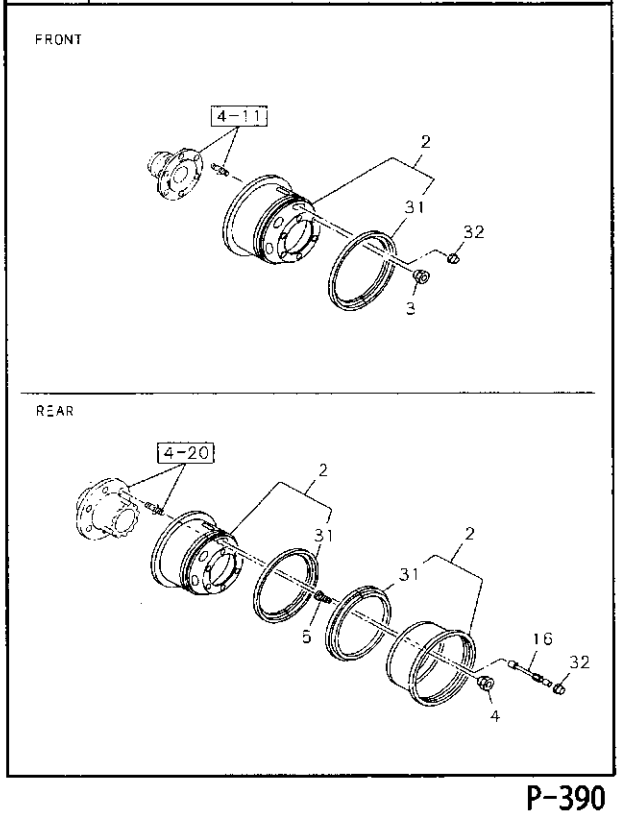

P-390

5-01 FRAME AND OTHER PARTS
FIG-NO. CROSS MEMBER

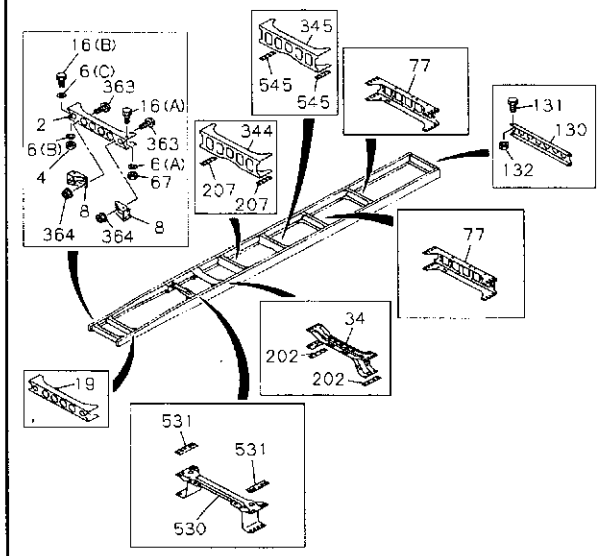


P-394

https://truckmanualshub.com/


ILLUSTRATION INDEX

5-01 FRAME AND OTHER PARTS
FIG-NO. BRACKET AND OTHER PARTS

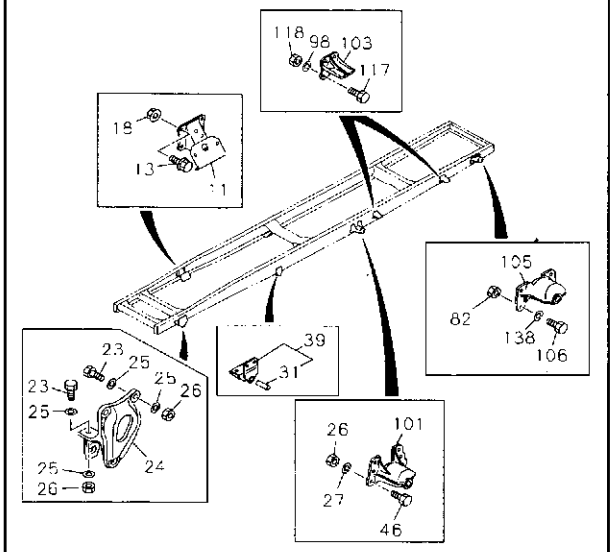


P-395

5-10 CAB MOUNTING; FRAME SIDE
FIG-NO.

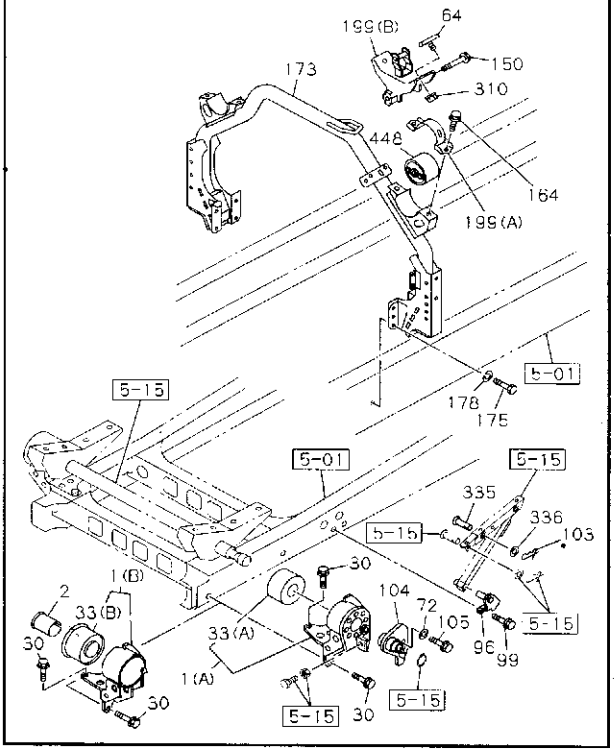


P-400

5-15 CAB MOUNTING; CAB SIDE
FIG-NO. TORSION BAR AND CAB TILT STAY

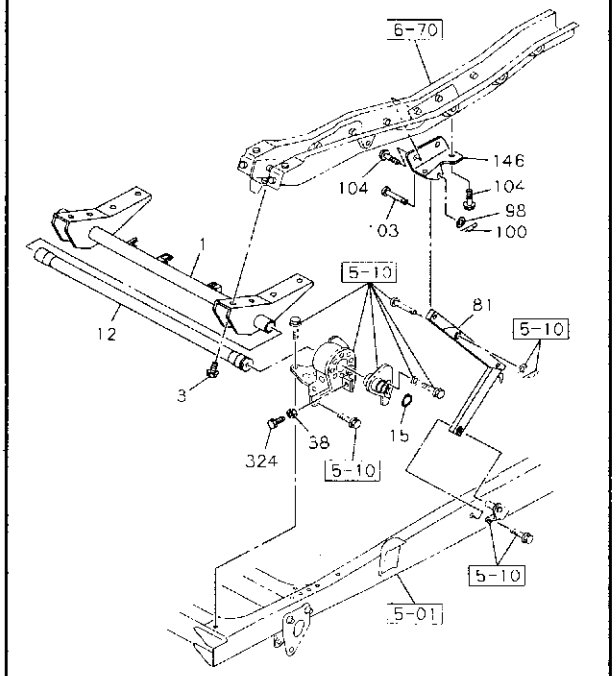

P-404

5-15 CAB MOUNTING; CAB SIDE
FIG-NO. COMPONENT; CAB TILT STAY

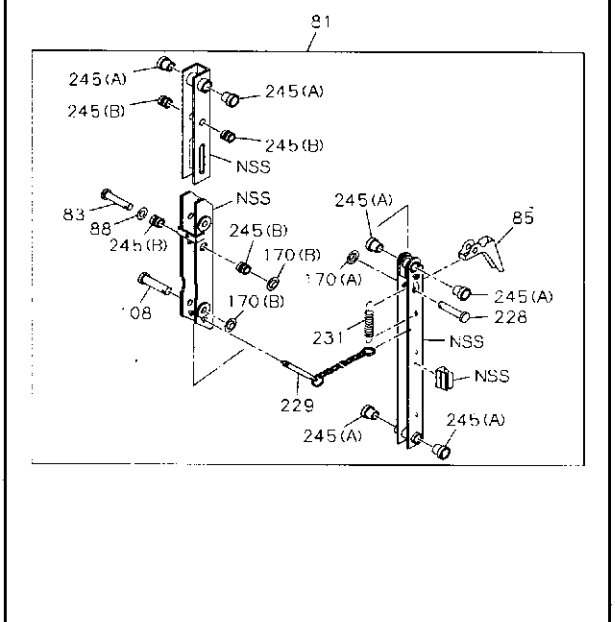


P-405

https://truckmanualshub.com/


ILLUSTRATION INDEX

5-15 CAB MOUNTING; CAB SIDE
FIG-NO. CAB LOCK

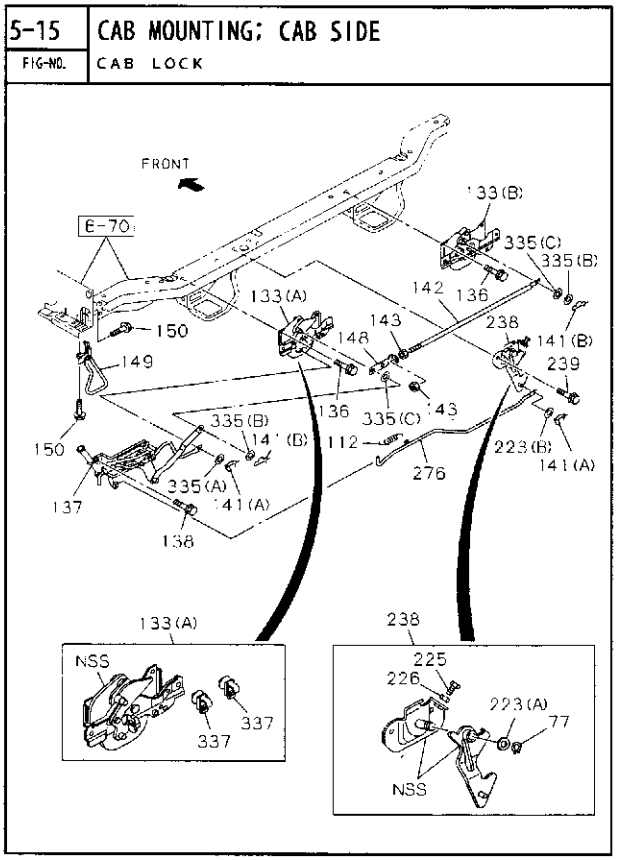


P-406

5-20 BATTERY CARRIER
FIG-NO.

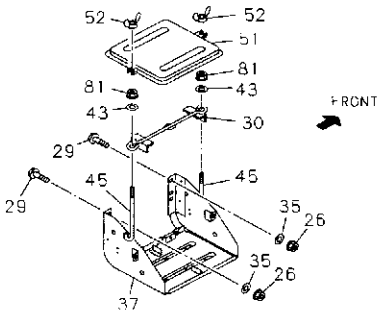


P-412

5-30 SPARE TIRE CARRIER AND COVER
FIG-NO.

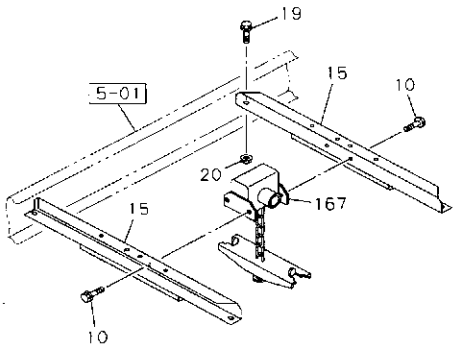

P-414

6-01 FRONT BUMPER
FIG-NO.

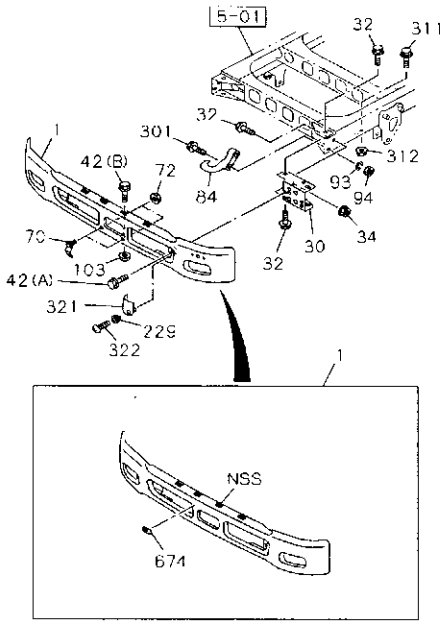


P-418

https://truckmanualshub.com/


ILLUSTRATION INDEX

6-03 RADIATOR GRILLE
FIG-NO.

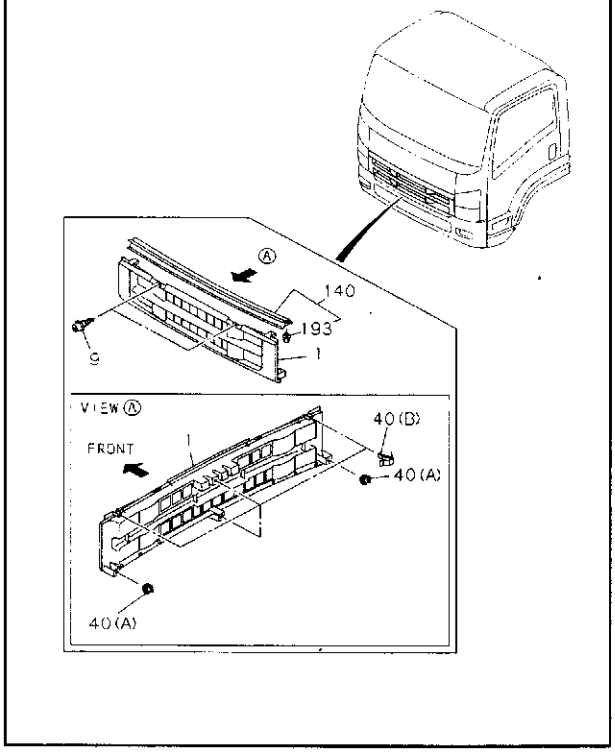


P-422

6-05 FRONT PANEL
FIG-NO. FRONT PANEL AND OTHER PARTS

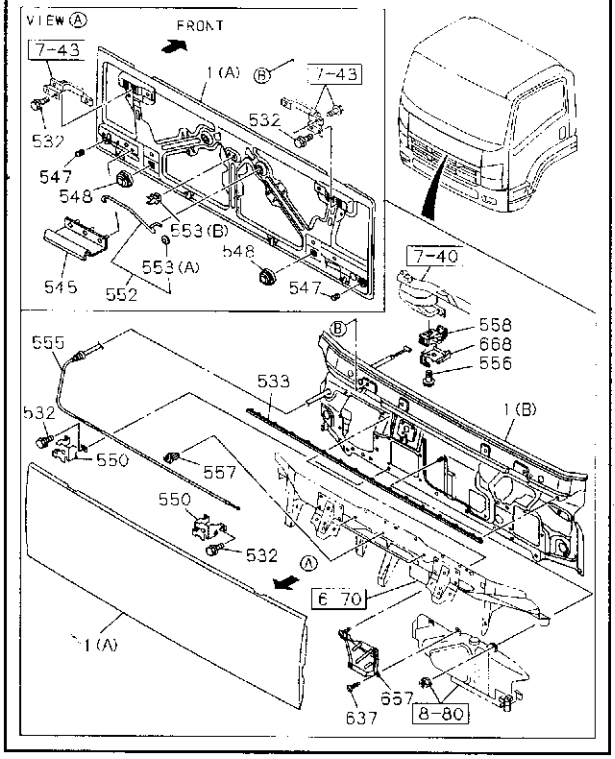


P-424

6-05 FRONT PANEL
FIG-NO. FRONT PANEL COMPONENT

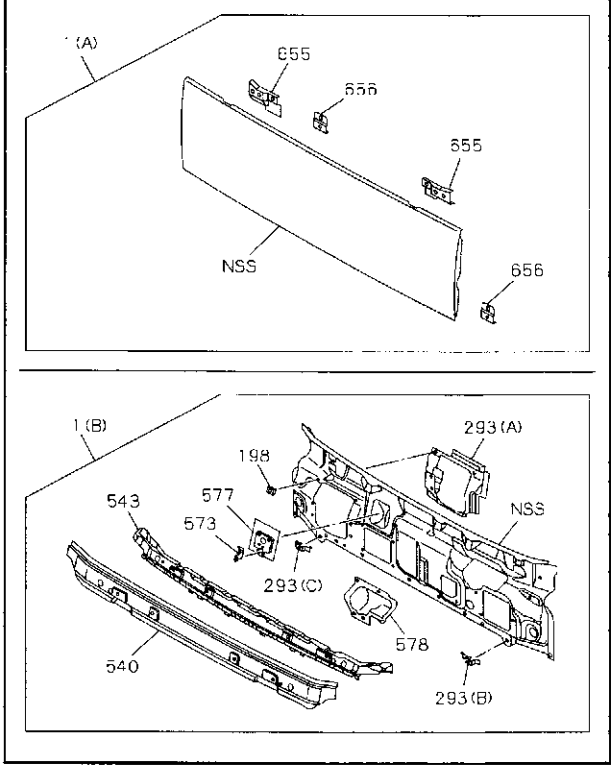

P-425


6-05 FRONT PANEL
FIG-NO. SIDE PANEL

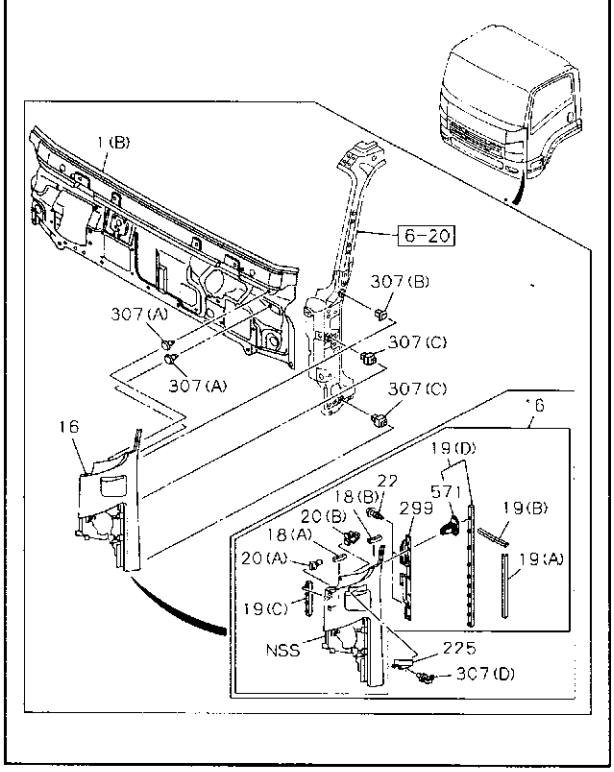


P-426

https://truckmanualshub.com/


ILLUSTRATION INDEX

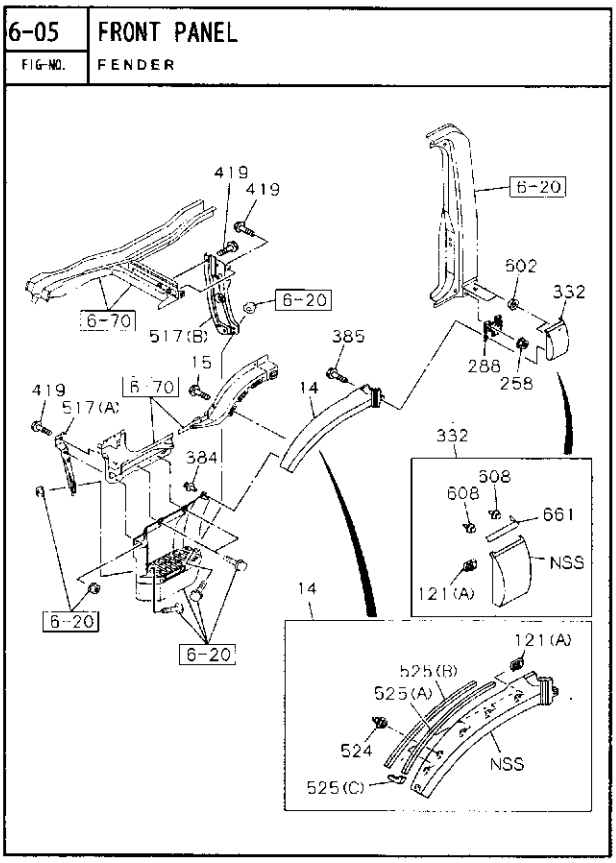


P-427

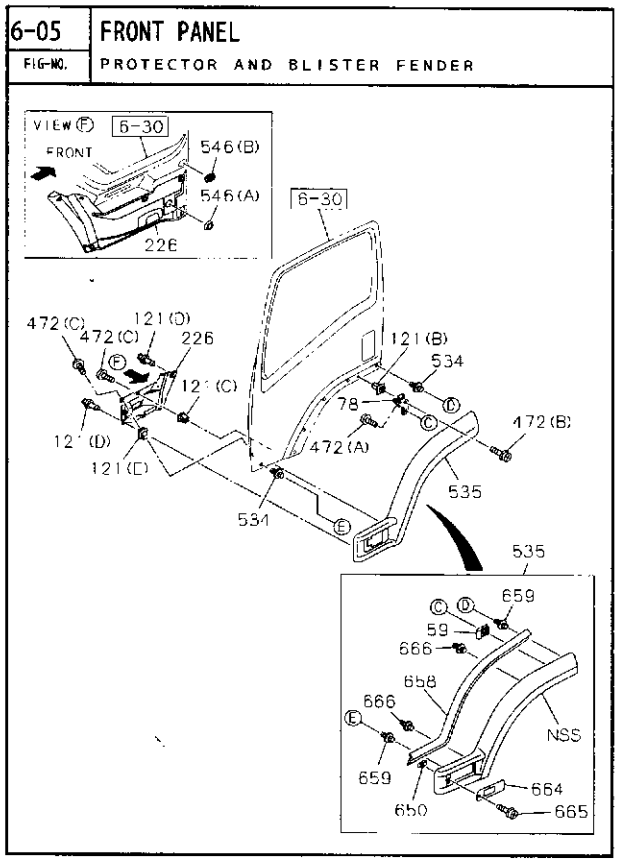

P-428

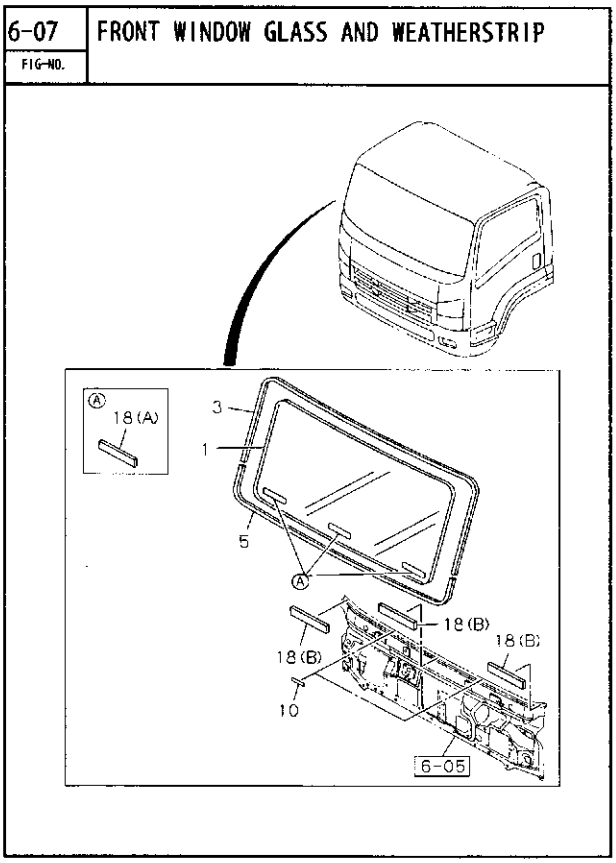

P-436

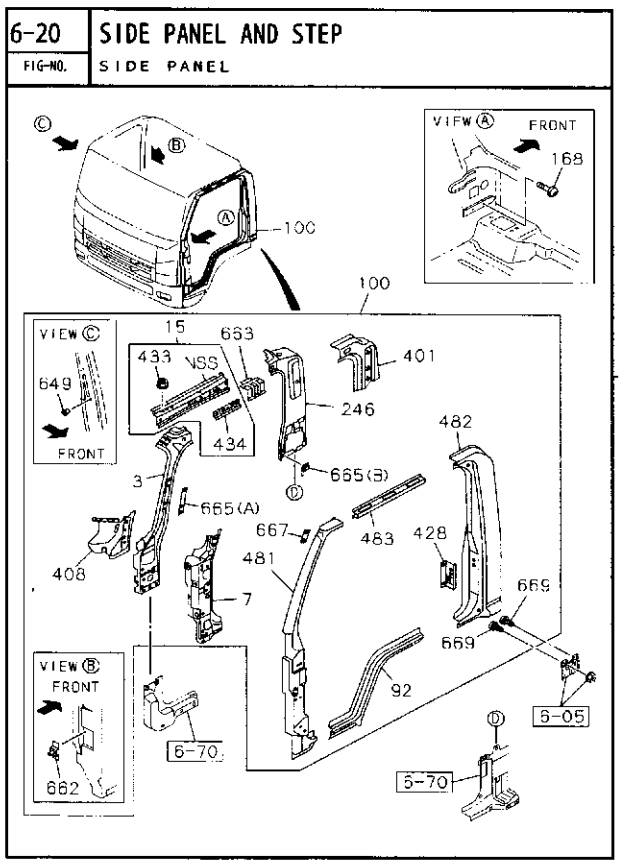


P-438

https://truckmanualshub.com/


ILLUSTRATION INDEX

6-20	SIDE PANEL AND STEP
FIG-NO.	STEP

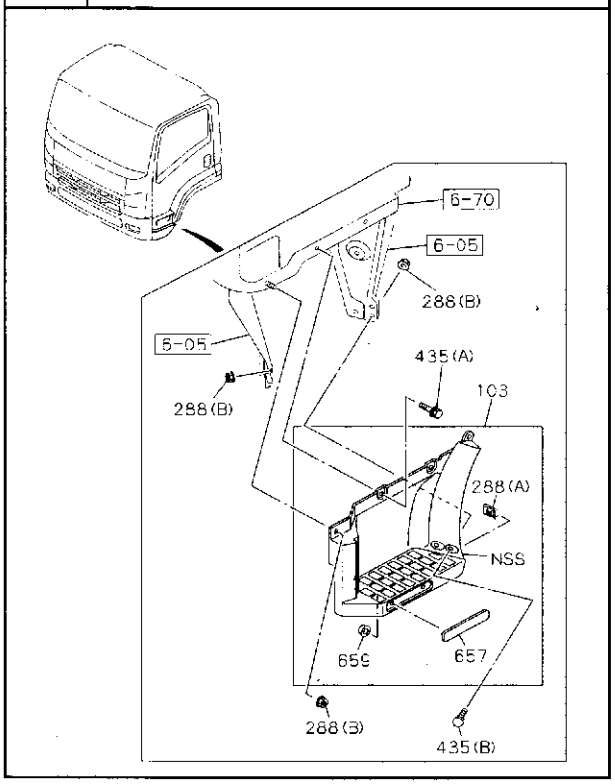


P-439

6-30	FRONT DOOR AND HINGE
FIG-NO.	

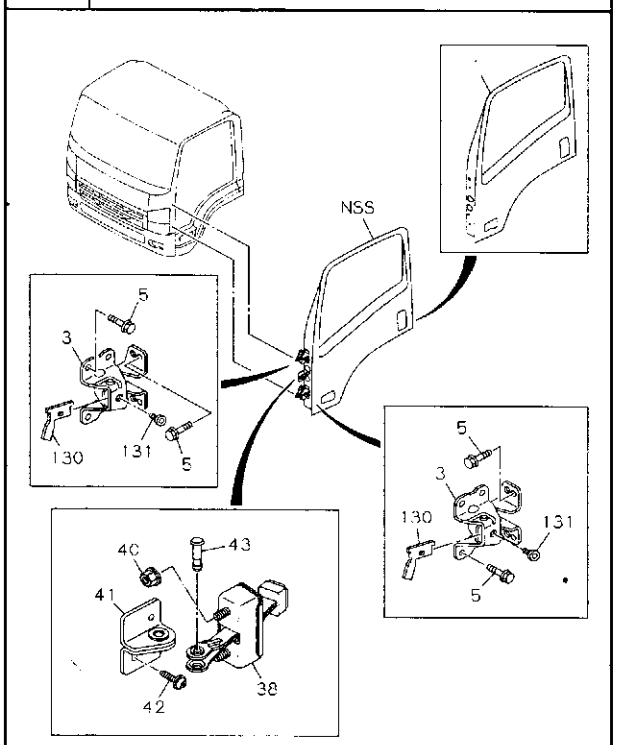


P-444

6-31	FRONT DOOR GLASS AND REGULATOR
FIG-NO.	RH

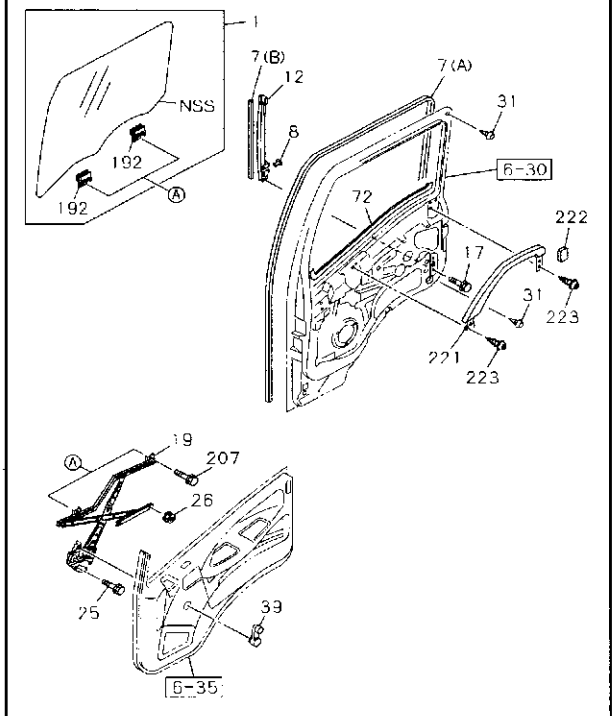

P-446

6-31	FRONT DOOR GLASS AND REGULATOR
FIG-NO.	LH

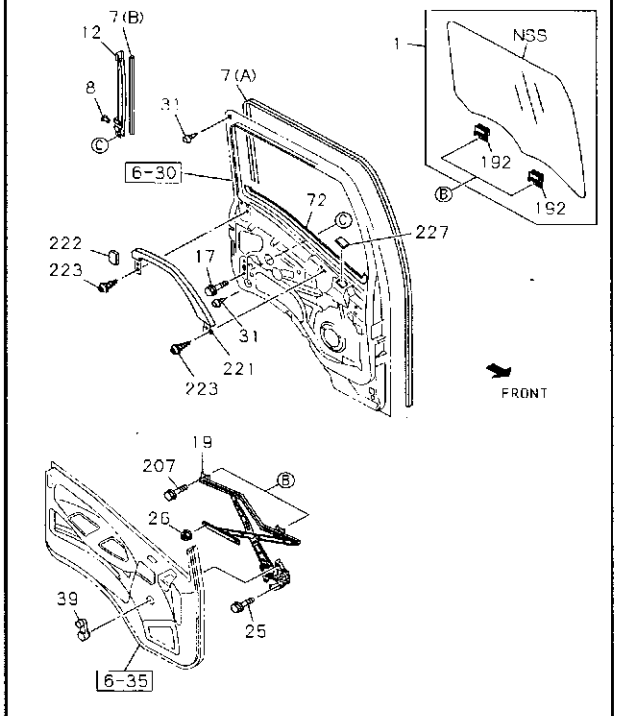


P-447

https://truckmanualshub.com/


ILLUSTRATION INDEX

6-32 FRONT DOOR LOCK AND HANDLE
FIG-NO. NO. 1

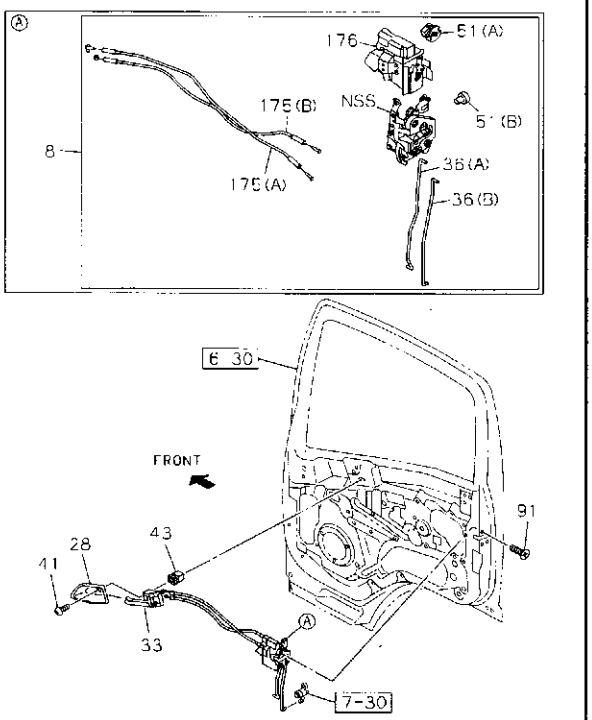


P-450

6-32 FRONT DOOR LOCK AND HANDLE
FIG-NO. NO. 2

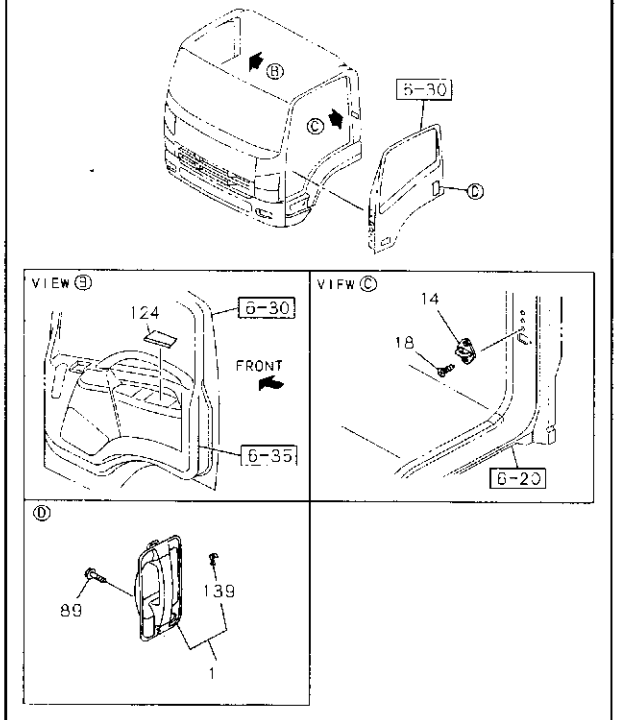


P-451

6-35 FRONT DOOR TRIM
FIG-NO.

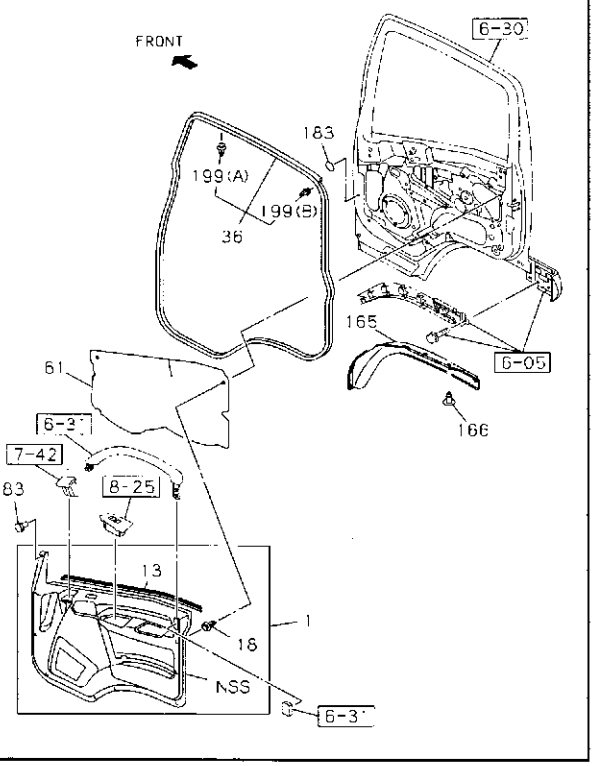

P-454

6-43 SIDE TRIM
FIG-NO.

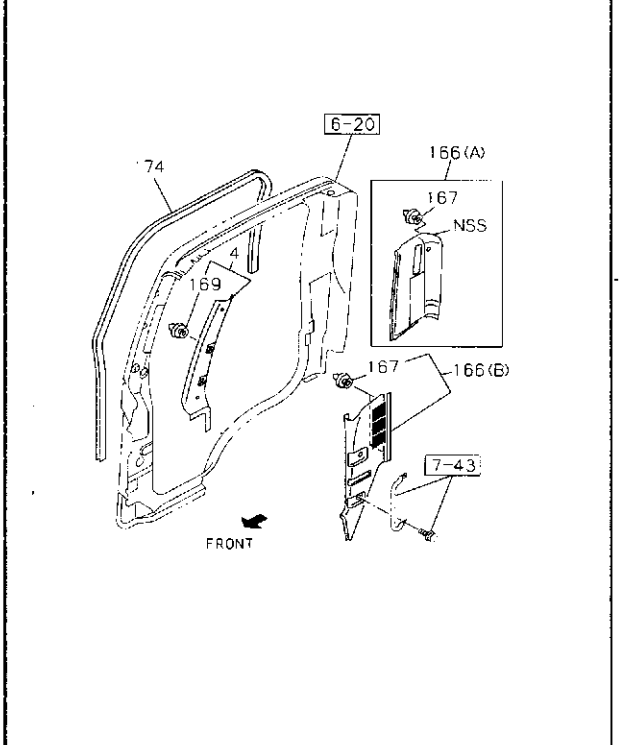


P-456

https://truckmanualshub.com/


ILLUSTRATION INDEX

6-47 MUD GUARD AND INSULATOR
FIG-NO. MUD GUARD; FRONT AND SPLASH GUARD

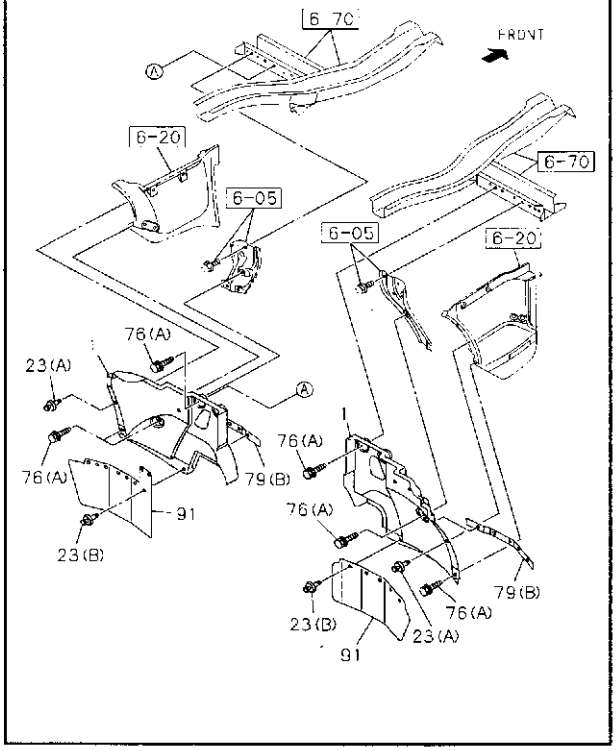


P-458

6-47 MUD GUARD AND INSULATOR
FIG-NO. MUD GUARD; REAR AND SIDE PANEL

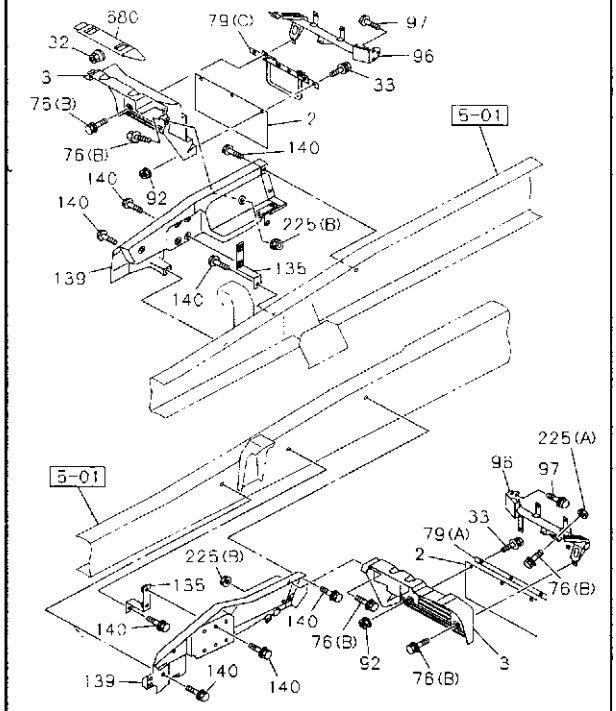


P-459

6-47 MUD GUARD AND INSULATOR
FIG-NO. MUD COVER AND SEAL

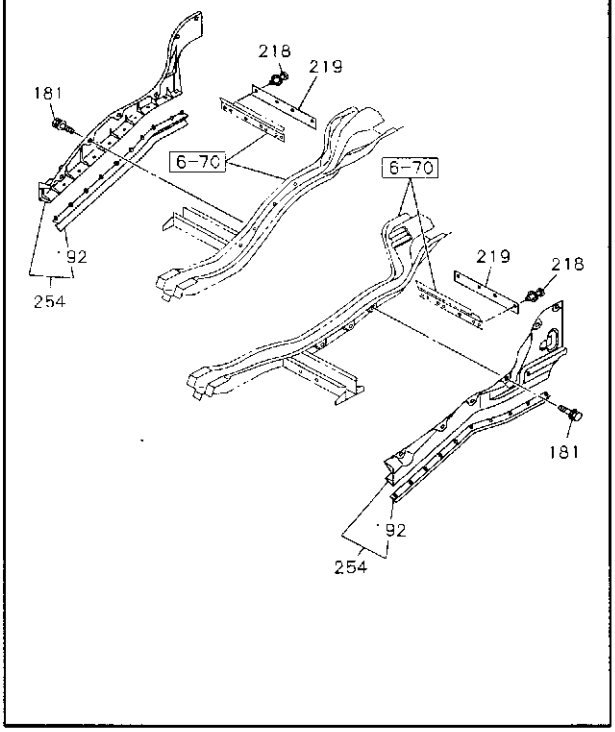

P-460

6-60 ROOF PANEL
FIG-NO.

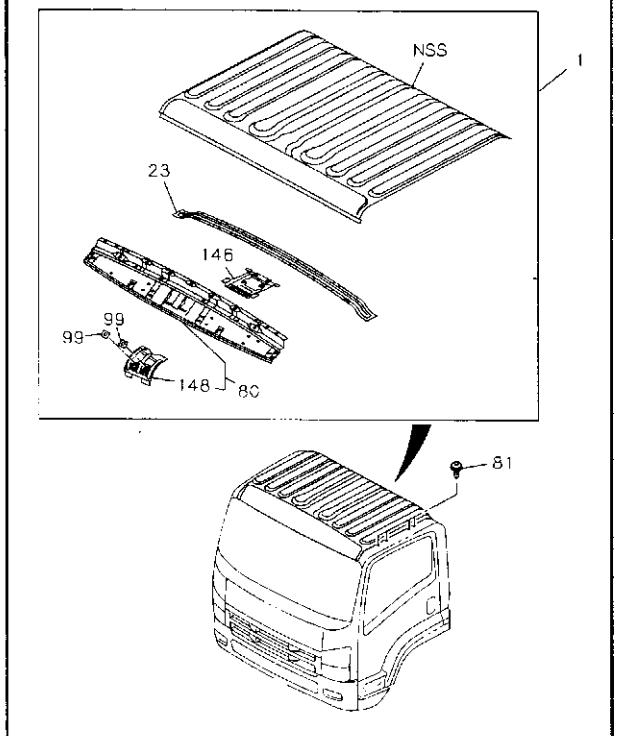


P-464

https://truckmanualshub.com/


ILLUSTRATION INDEX

6-66 FIG-NO. HEAD LINING AND TRIM

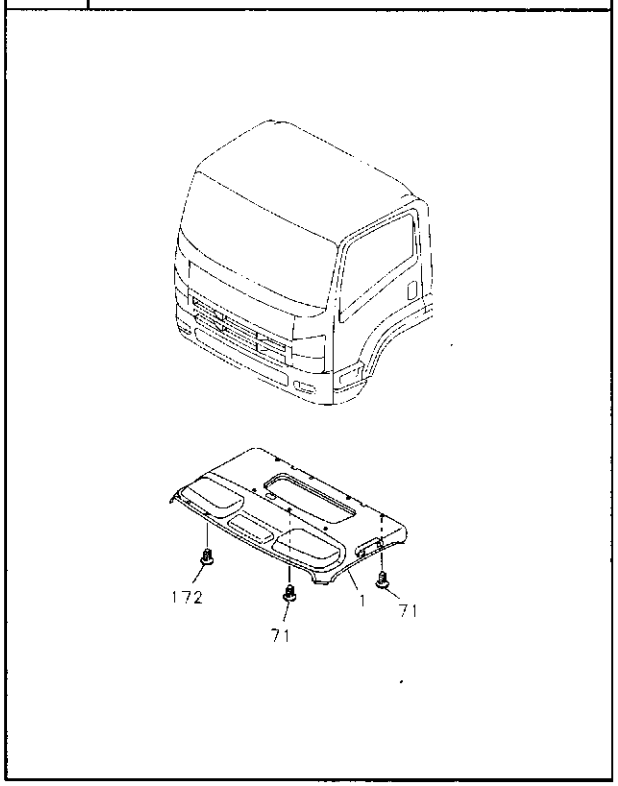


P-466

6-70 FIG-NO. FLOOR PANEL

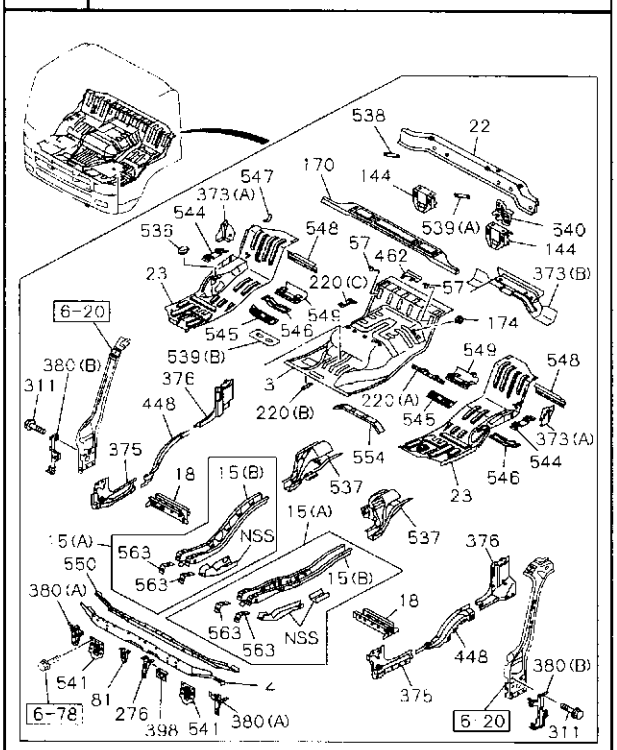


P-468

6-75 FIG-NO. MAT AND CARPET

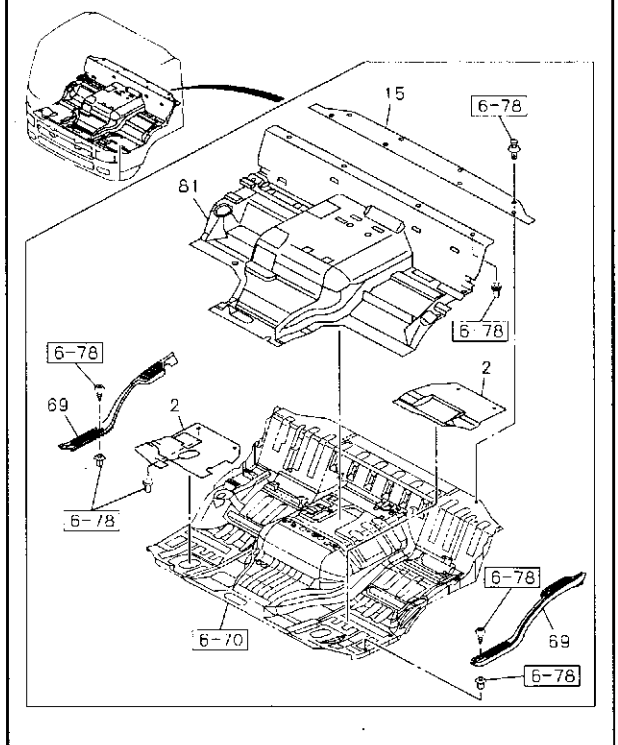

P-474

6-76 FIG-NO. FLOOR EQUIPMENT AND SEALING

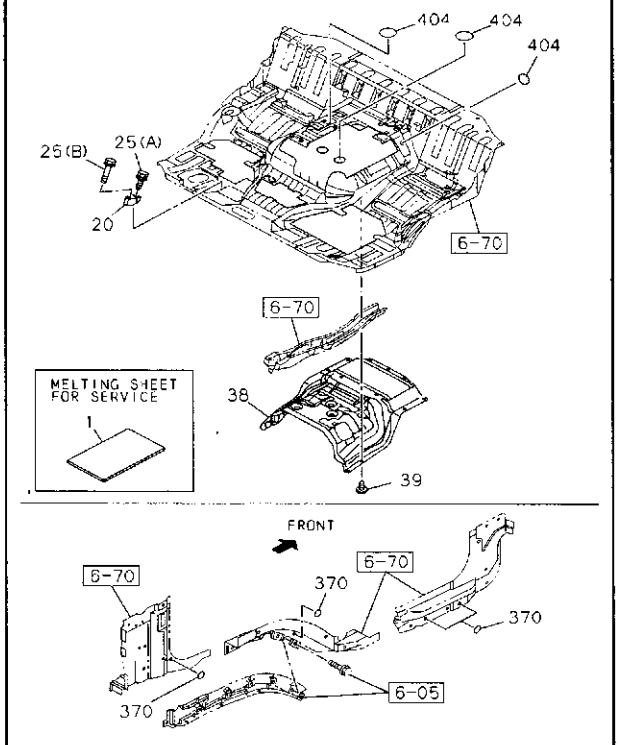


P-476

https://truckmanualshub.com/


ILLUSTRATION INDEX

6-78 FIG-NO. FLOOR HOLE PLUG

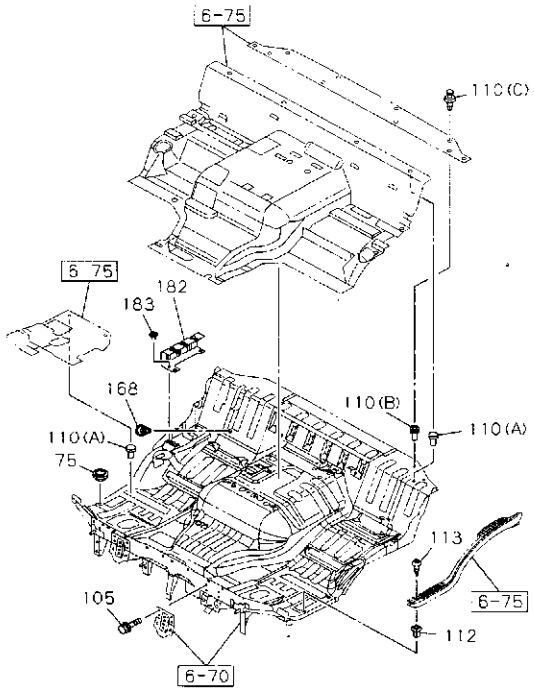


P-478

6-80 FIG-NO. BACK PANEL

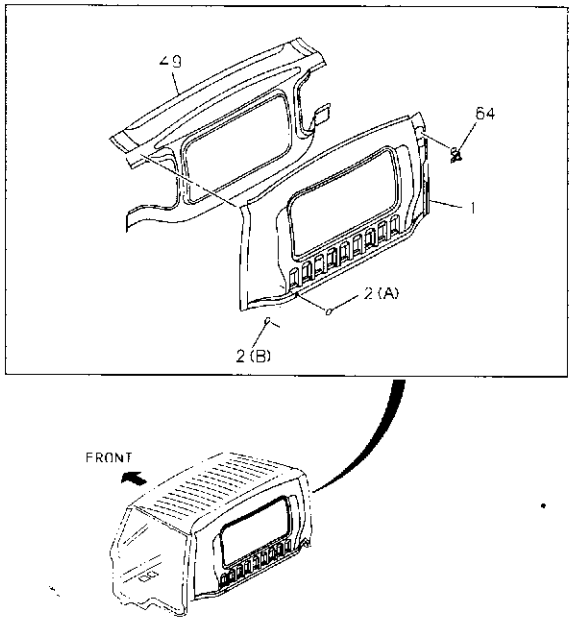


P-480

6-82 FIG-NO. BACK GLASS AND WEATHERSTRIP

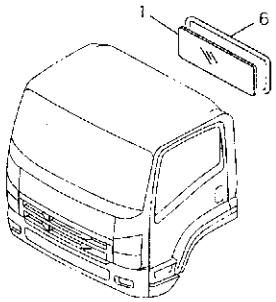

P-482

6-84 FIG-NO. BACK TRIM

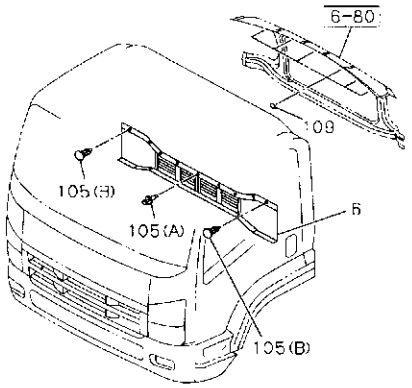


P-484

https://truckmanualshub.com/


ILLUSTRATION INDEX

6-90 REAR BUMPER
FIG-NO.

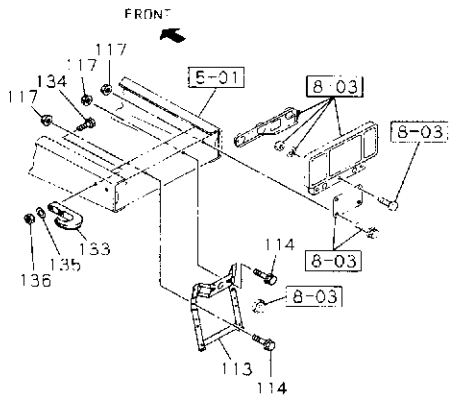


P-486

7-01 EMBLEM AND NAME PLATE
FIG-NO.

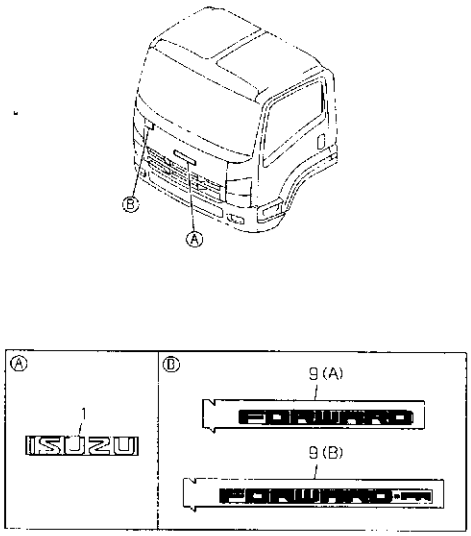


P-490

7-10 CAUTION PLATE AND LABEL
FIG-NO.

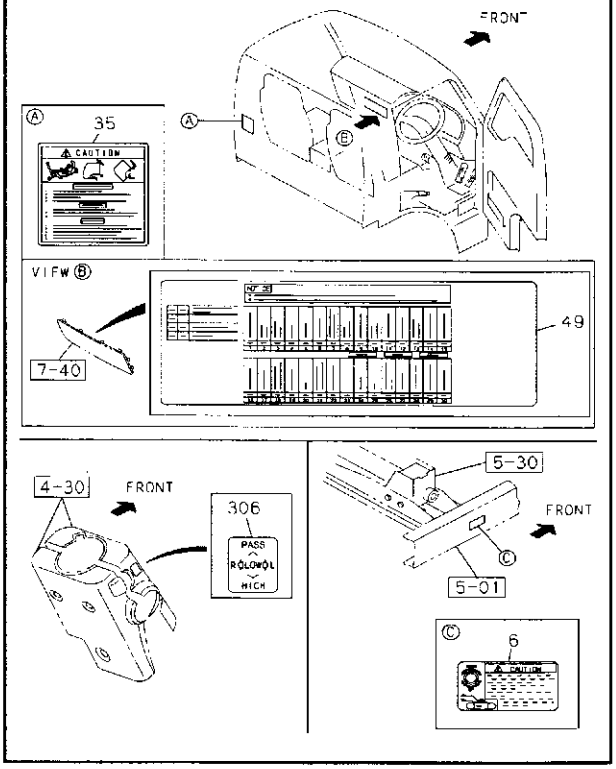

P-492

7-20 MIRROR AND MIRROR STAY
FIG-NO.
OUTSIDE, UNDER AND ROOM MIRROR

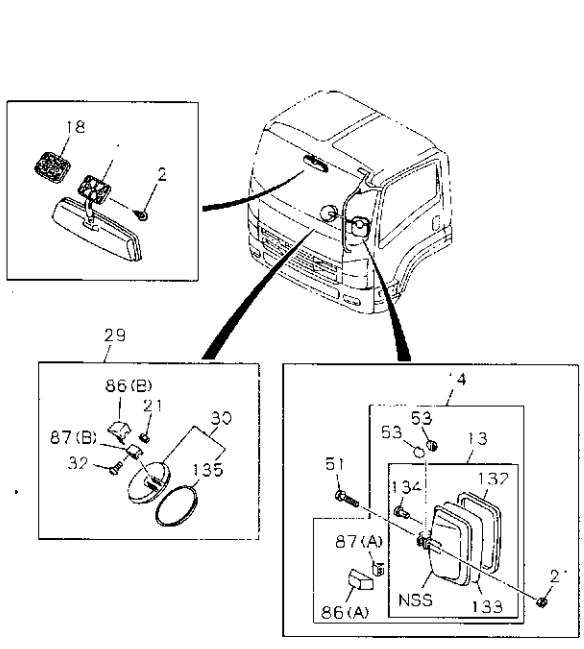


P-494

https://truckmanualshub.com/


ILLUSTRATION INDEX

7-20 MIRROR AND MIRROR STAY
FIG-NO. LH

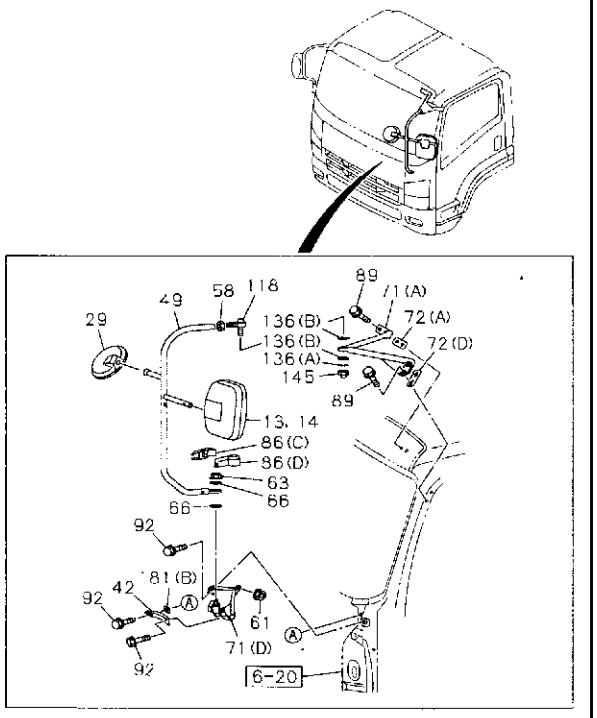


P-495

7-20 MIRROR AND MIRROR STAY
FIG-NO. RH

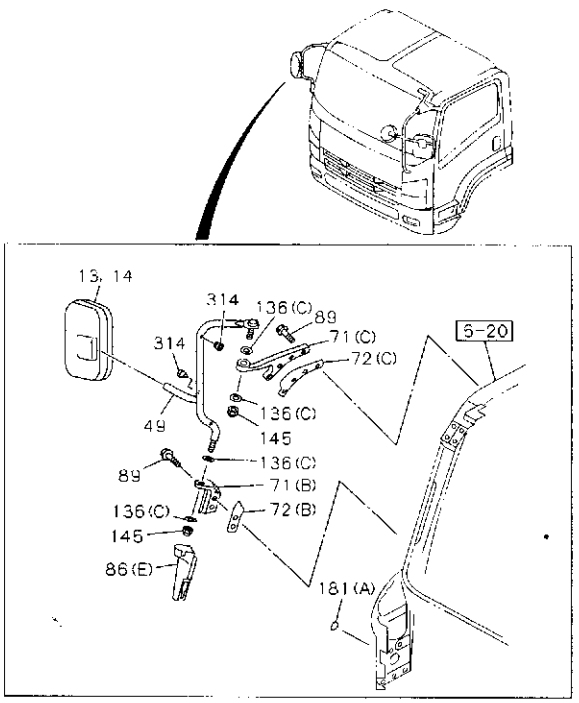


P-496

7-20 MIRROR AND MIRROR STAY
FIG-NO. SEAL

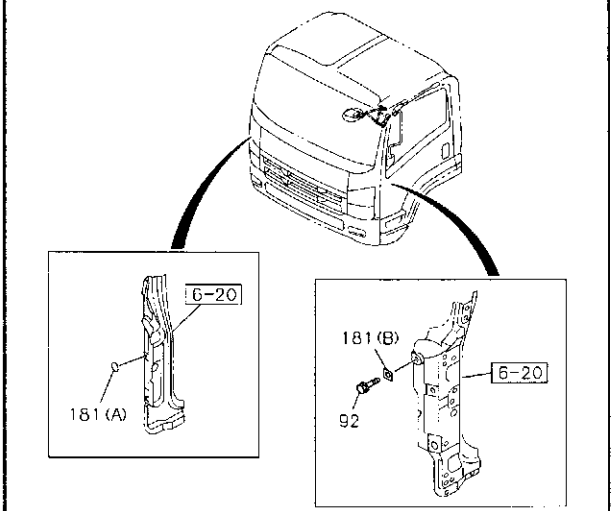

P-497

7-30 LOCK CYLINDER SET
FIG-NO. CYLINDER SET

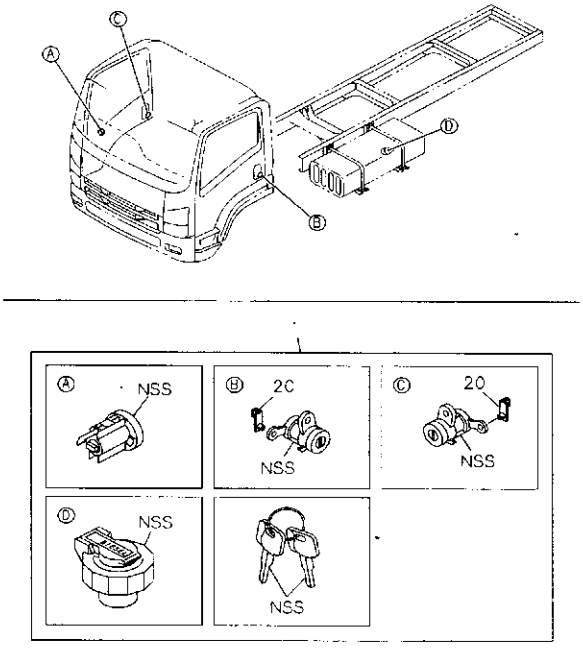


P-502

https://truckmanualshub.com/


ILLUSTRATION INDEX

7-30	LOCK CYLINDER SET
FIG-NO.	LOCK CYLINDER, BARREL AND OTHER PARTS

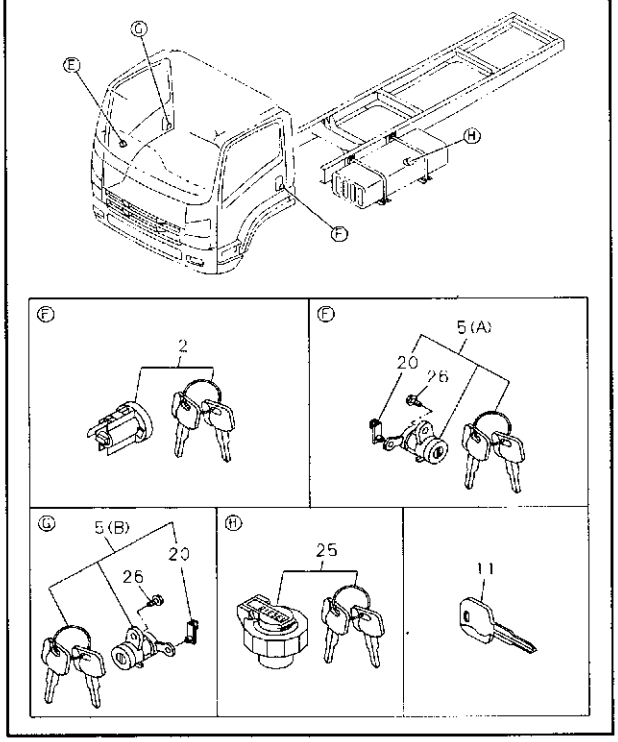


P-503

7-40	INSTRUMENT PANEL AND BOX
FIG-NO.	INST PANEL AND OTHER PARTS

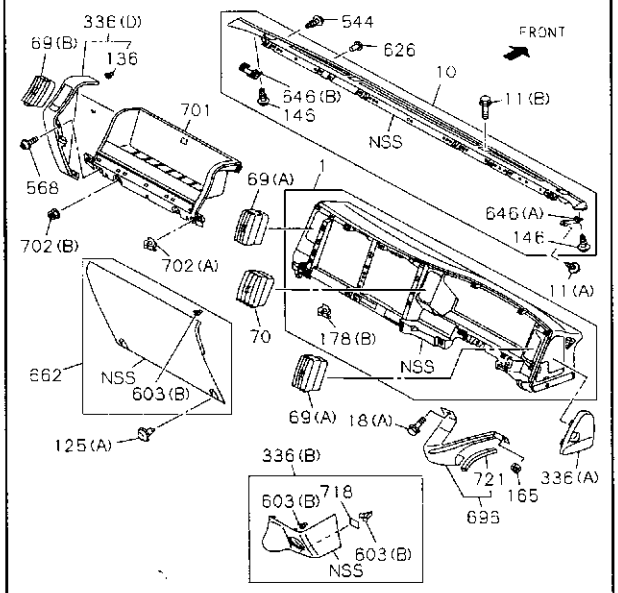


P-506

7-40	INSTRUMENT PANEL AND BOX
FIG-NO.	REINFORCEMENT AND OTHER PARTS

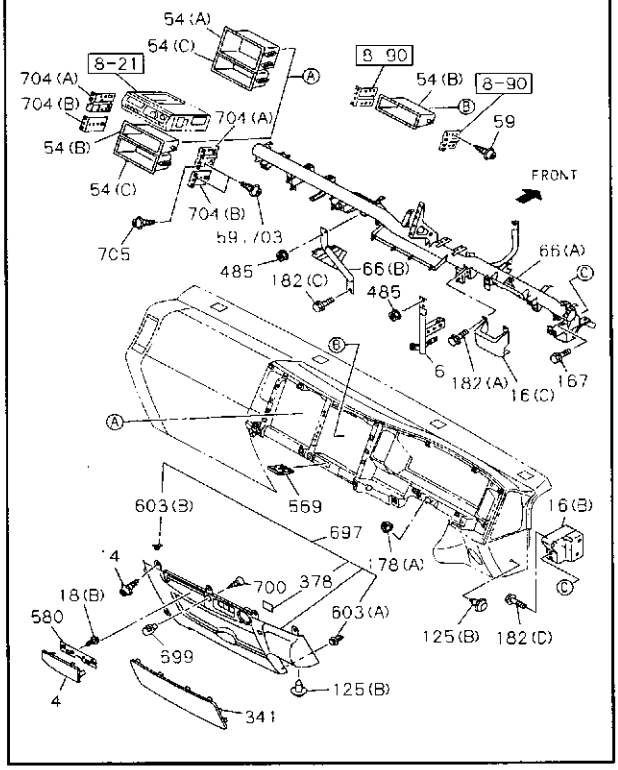

P-507

7-40	INSTRUMENT PANEL AND BOX
FIG-NO.	BRACKET AND COVER

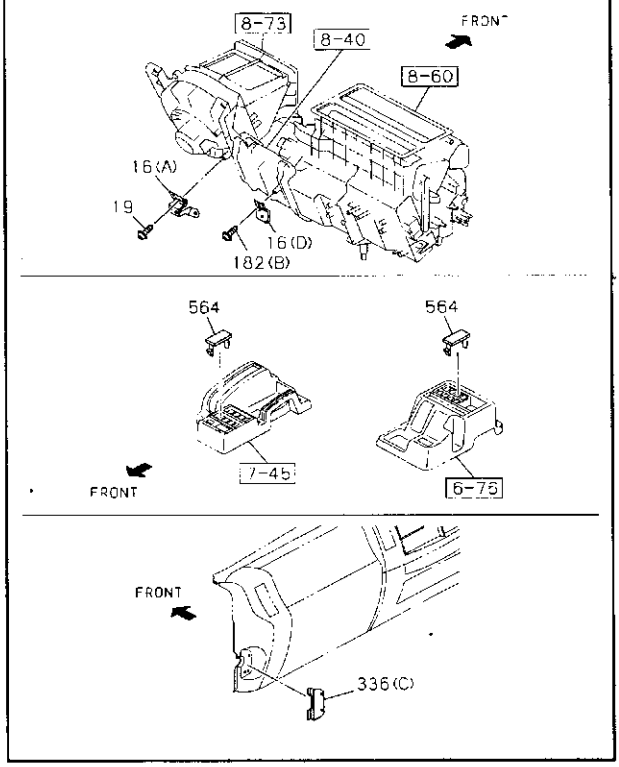


P-508

https://truckmanualshub.com/


ILLUSTRATION INDEX

7-42 ASH TRAY
FIG-NO.

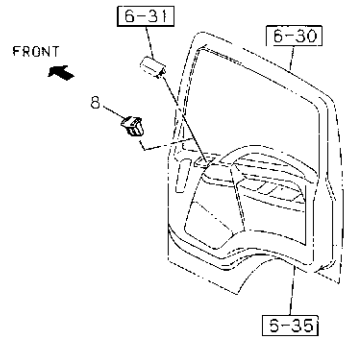


P-516

7-43 SUN VISOR AND ASSIST GRIP
FIG-NO. TRAY: HEADER ROOF

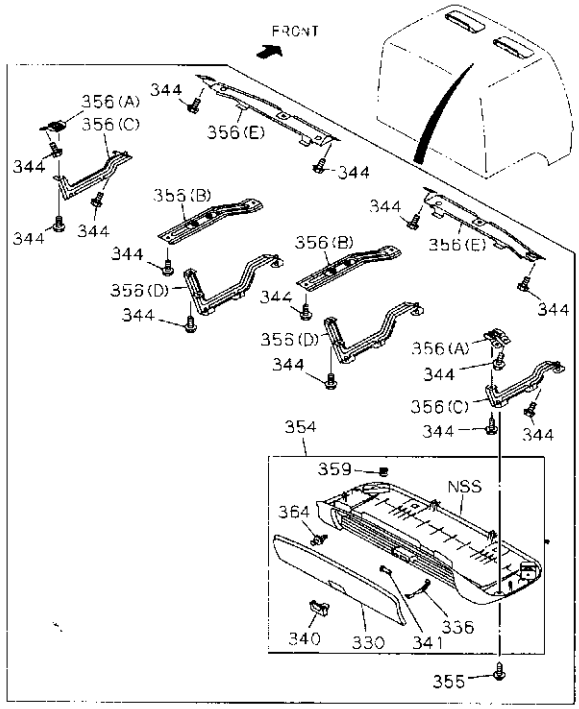


P-518

7-43 SUN VISOR AND ASSIST GRIP
FIG-NO. SUN VISOR AND OTHER PARTS

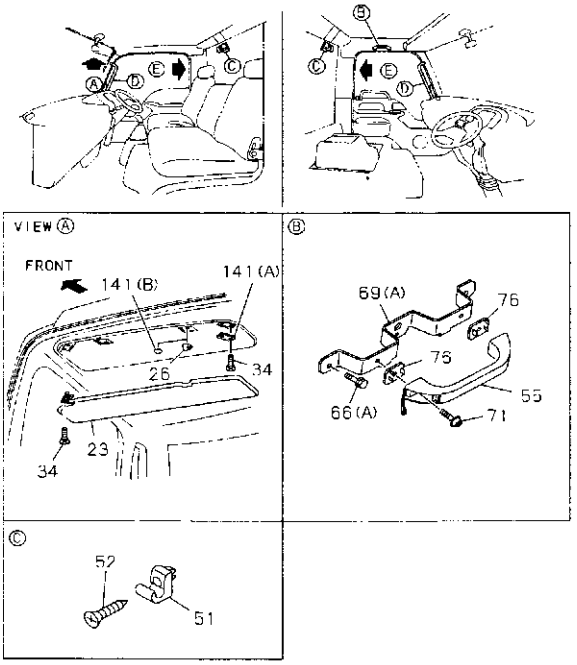

P-519

7-43 SUN VISOR AND ASSIST GRIP
FIG-NO. ASSIST GRIP NO. 1

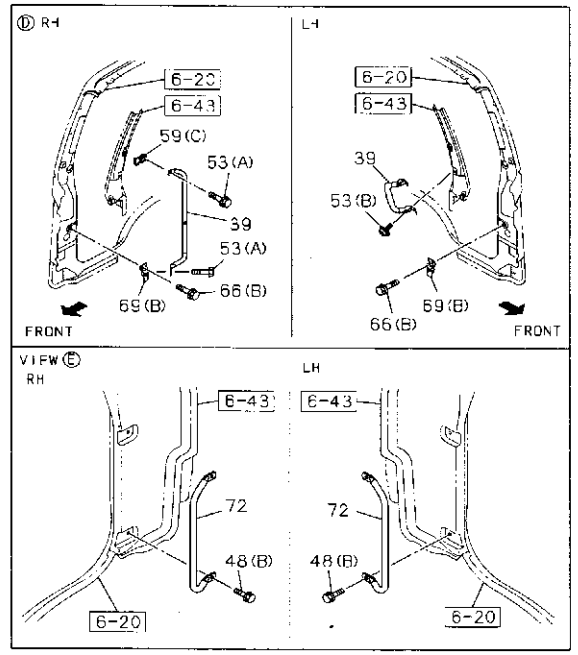


P-520

https://truckmanualshub.com/


ILLUSTRATION INDEX

7-43	SUN VISOR AND ASSIST GRIP
FIG-NO.	ASSIST GRIP NO. 2

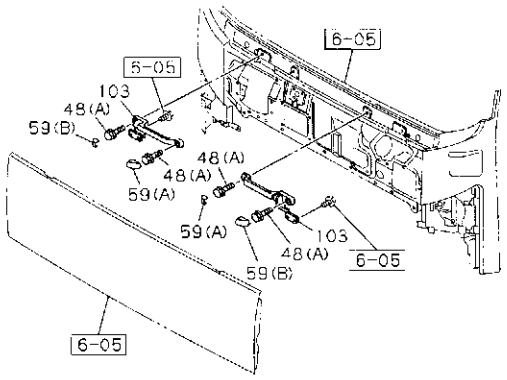


P-521

7-45	CONSOLE BOX
FIG-NO.	

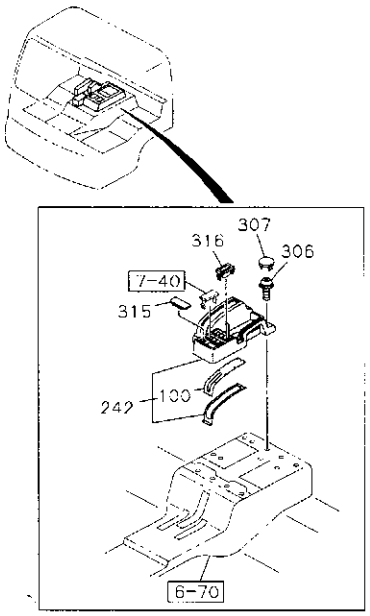


P-526

7-50	FRONT SEAT
FIG-NO.	DRIVER NO. 1

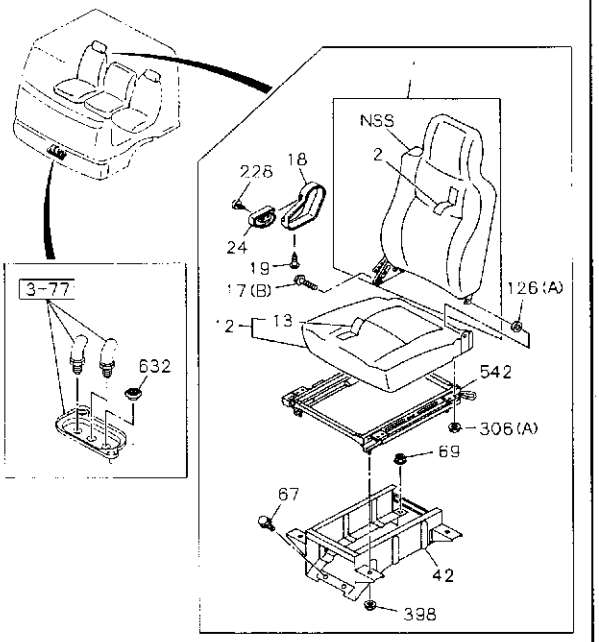

P-528

7-50	FRONT SEAT
FIG-NO.	DRIVER NO. 2

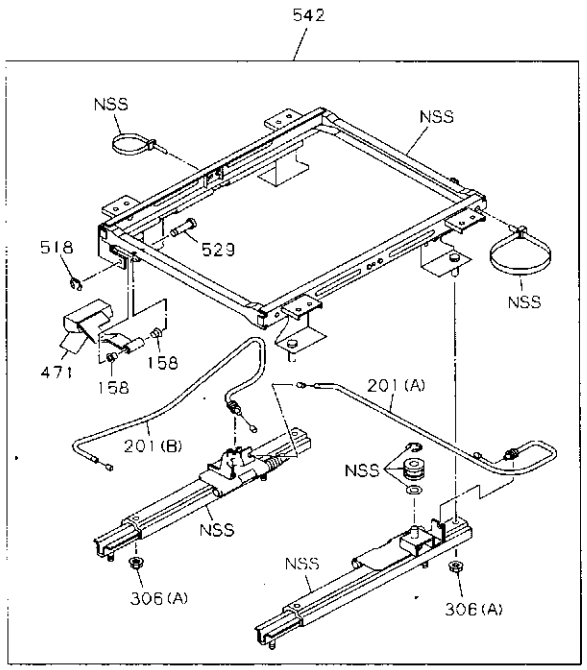


P-529

https://truckmanualshub.com/


ILLUSTRATION INDEX

7-50 FIG-NO. FRONT SEAT PASSENGER

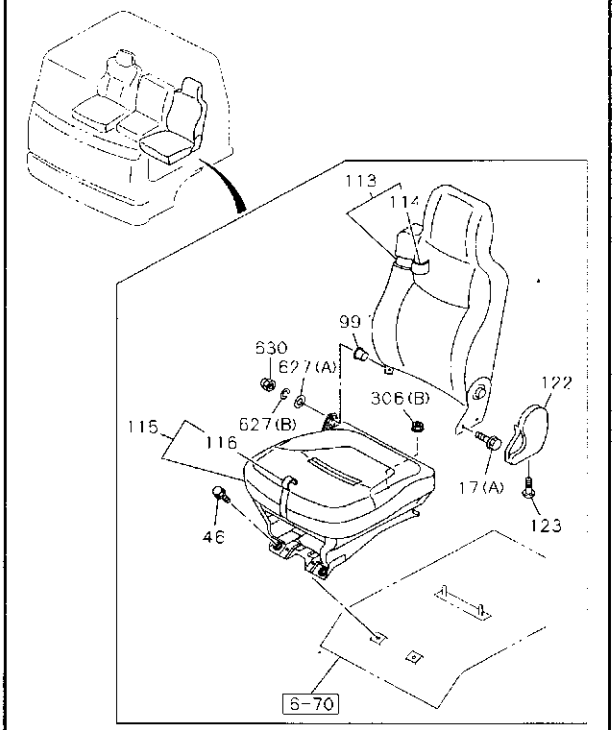


P-530

7-50 FIG-NO. FRONT SEAT CENTER

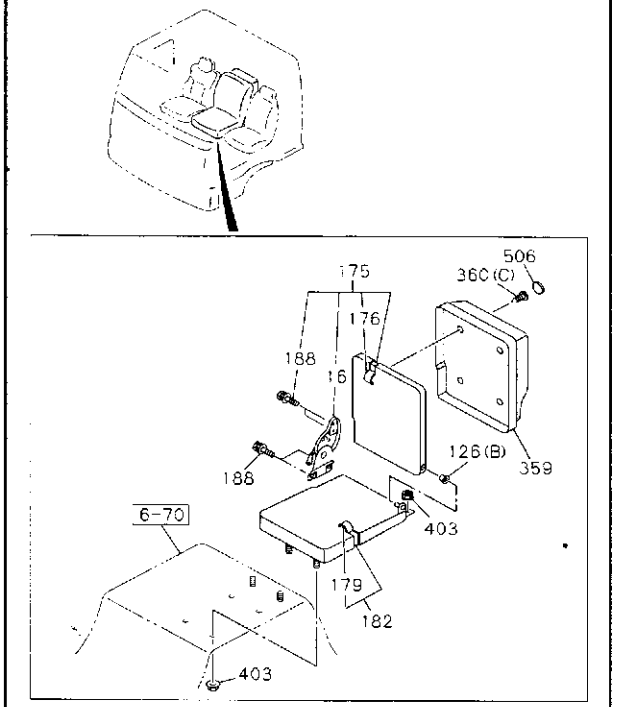

P-531


7-50 FIG-NO. FRONT SEAT PARCEL BOX

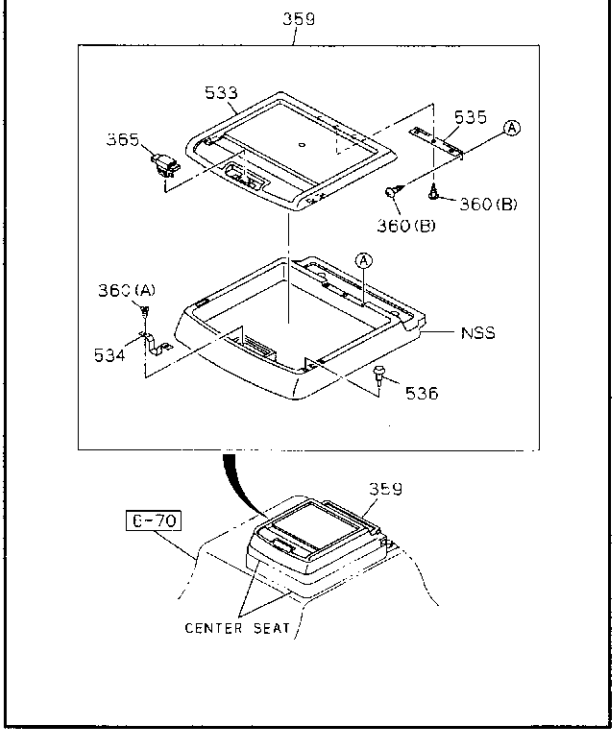


P-532

7-60 FIG-NO. SEAT BELT

DRIVER

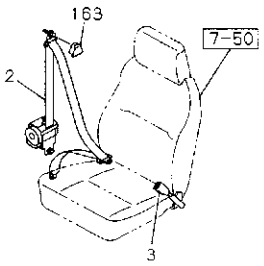

PASSENGER AND CENTER

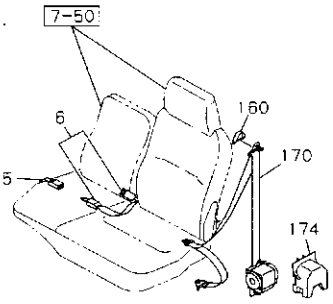


P-538

https://truckmanualshub.com/


ILLUSTRATION INDEX

7-70 SEPARATER AND BED
FIG-NO.

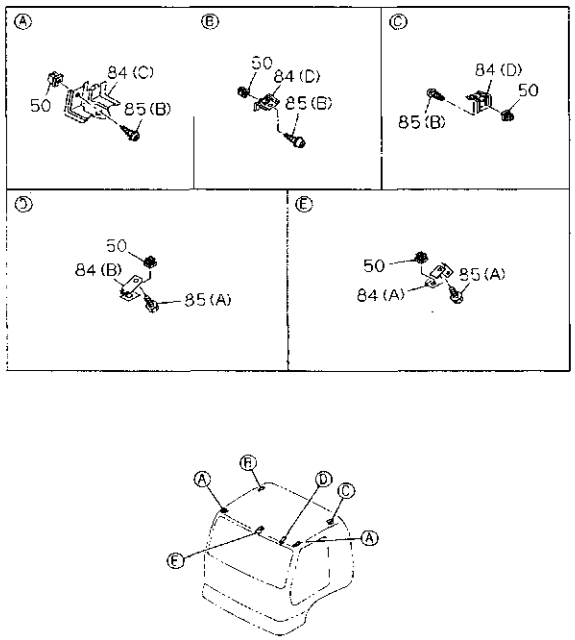

P-540


8-01 LAMP; FRONT AND FRONT SIDE
FIG-NO. FIXING; FRONT LAMP

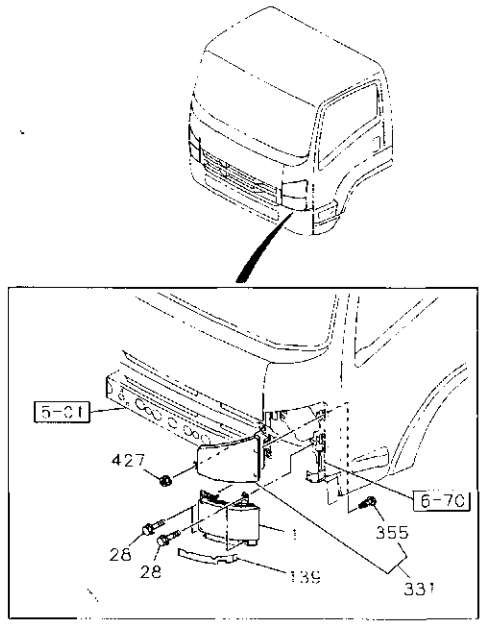


P-544

8-01 LAMP; FRONT AND FRONT SIDE
FIG-NO. COMPONENT; HEADLAMP, TURN SIGNAL LAMP

HEADLAMPS

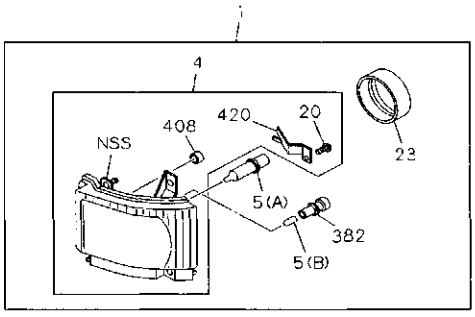


TURN SIGNAL LAMP

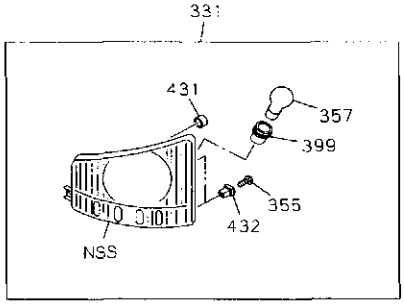

P-545

8-01 LAMP; FRONT AND FRONT SIDE
FIG-NO. MARKER LAMP, SIDE LAMP

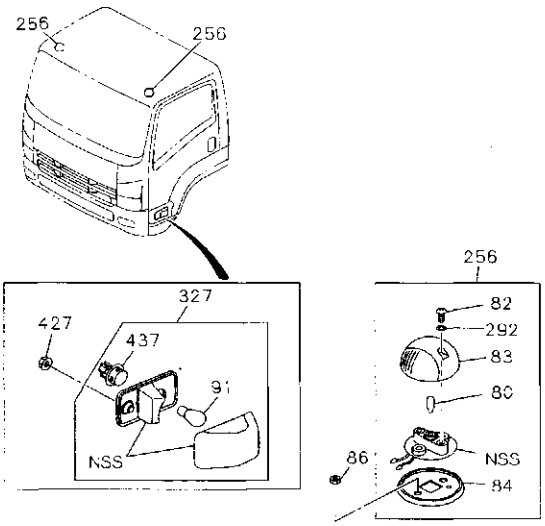


P-546

https://truckmanualshub.com/


ILLUSTRATION INDEX

8-03	LAMP; REAR AND REAR SIDE
FIG-NO.	

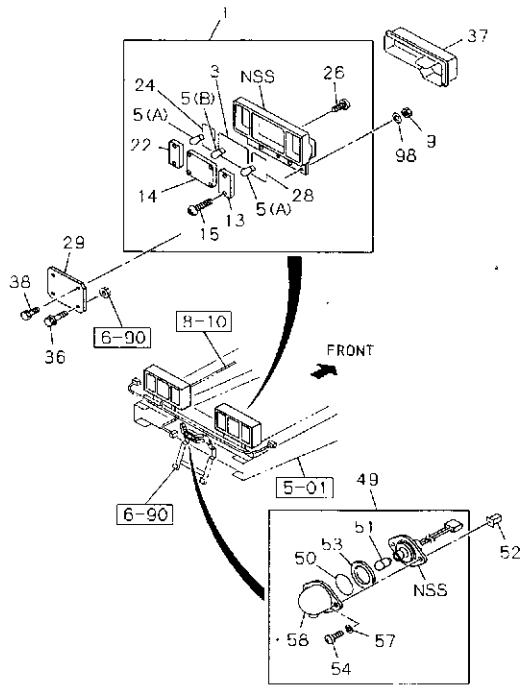


P-550

8-05	INTERIOR LAMP
FIG-NO.	

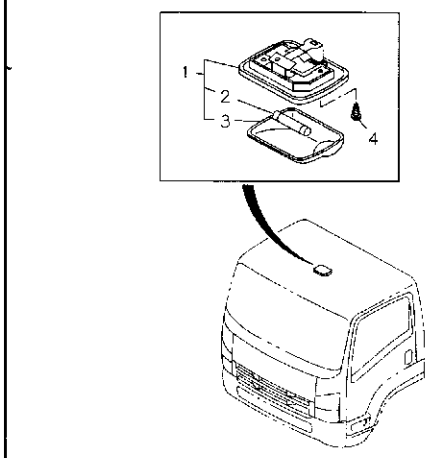


P-554

8-10	WIRING HARNESS AND FUSE
FIG-NO.	CAB HARNESS

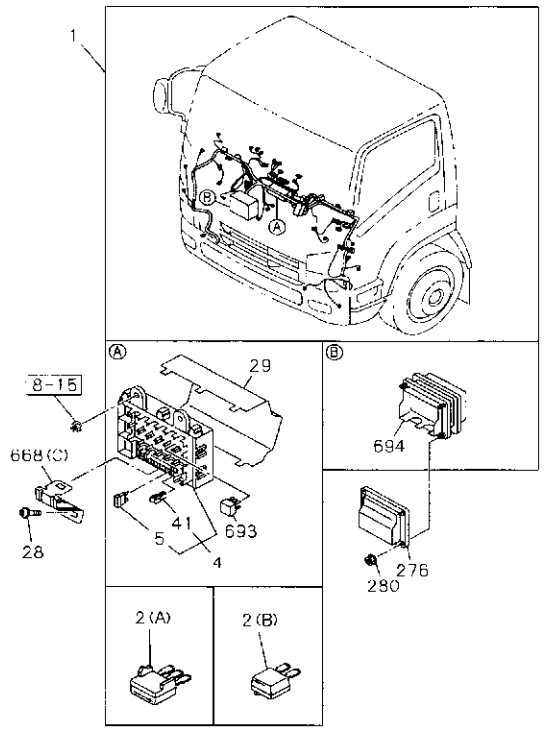

P-556

8-10	WIRING HARNESS AND FUSE
FIG-NO.	FRAME HARNESS NO. 1

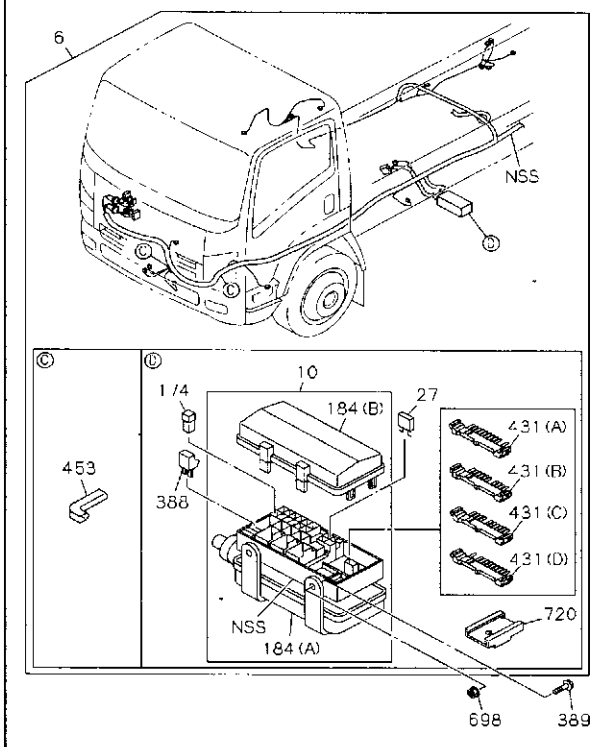


P-557

https://truckmanualshub.com/


ILLUSTRATION INDEX

8-10 WIRING HARNESS AND FUSE
FIG-NO. FRAME HARNESS NO. 2

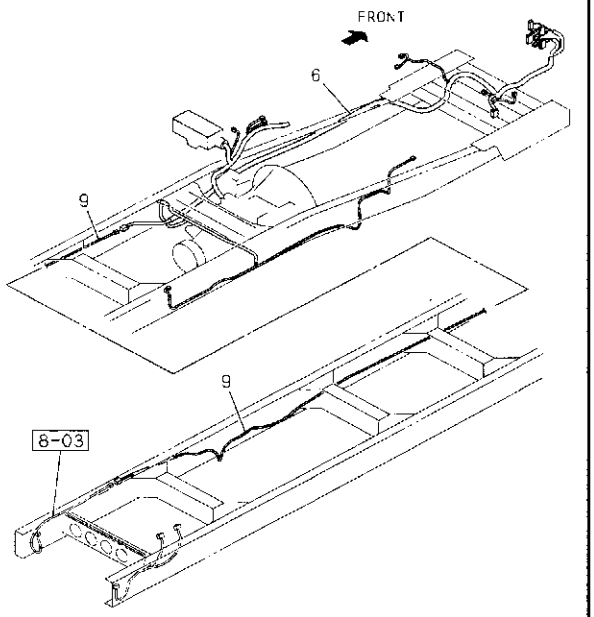


P-558

8-10 WIRING HARNESS AND FUSE
FIG-NO. OTHER HARNESS NO. 1

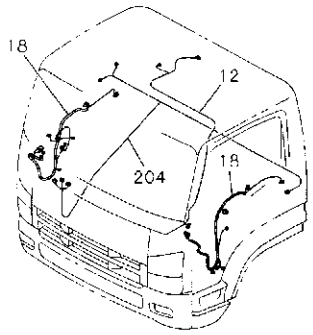


P-559

8-10 WIRING HARNESS AND FUSE
FIG-NO. OTHER HARNESS NO. 2

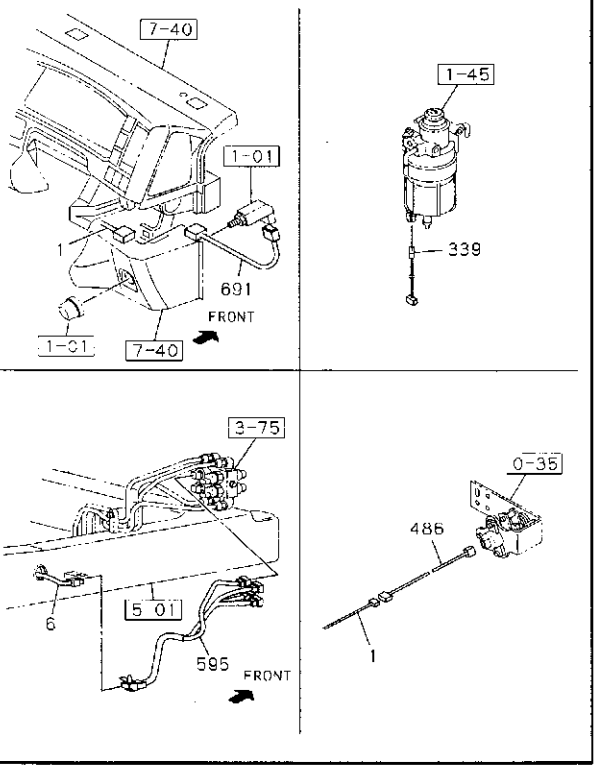

P-560

8-10 WIRING HARNESS AND FUSE
FIG-NO. ENGINE SIDE NO. 1

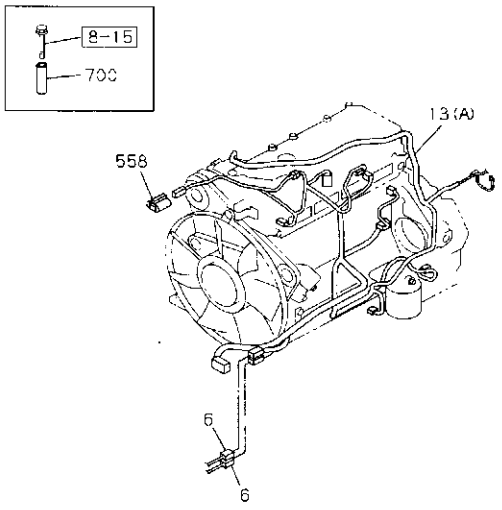


P-561

https://truckmanualshub.com/


ILLUSTRATION INDEX

8-10 WIRING HARNESS AND FUSE
FIG-NO. ENGINE SIDE NO. 2

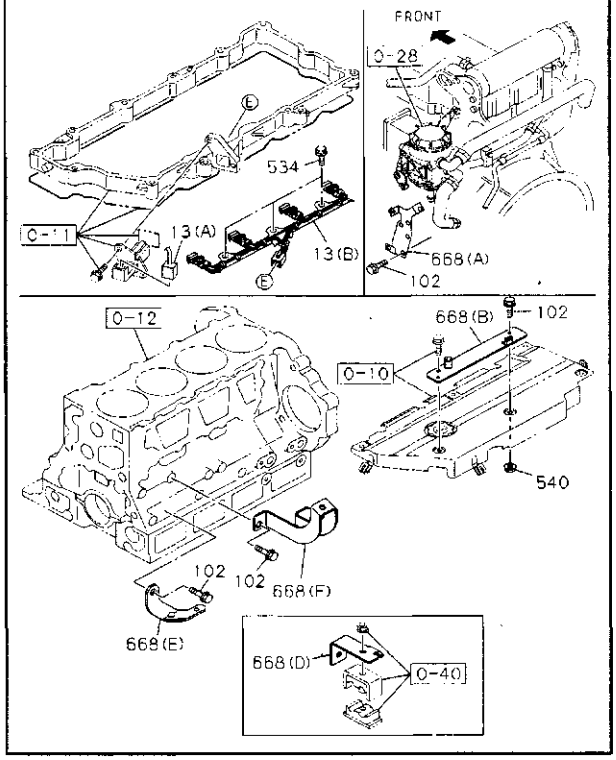


P-562

8-10 WIRING HARNESS AND FUSE
FIG-NO. TRANSMISSION SIDE

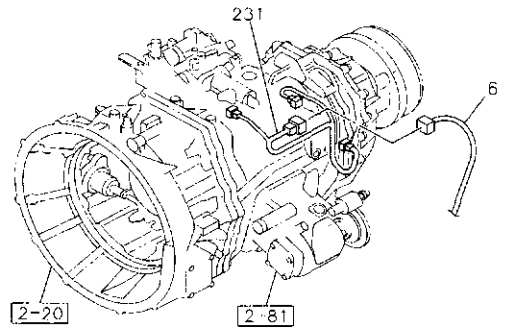


P-563

8-10 WIRING HARNESS AND FUSE
FIG-NO. AIR TANK SIDE

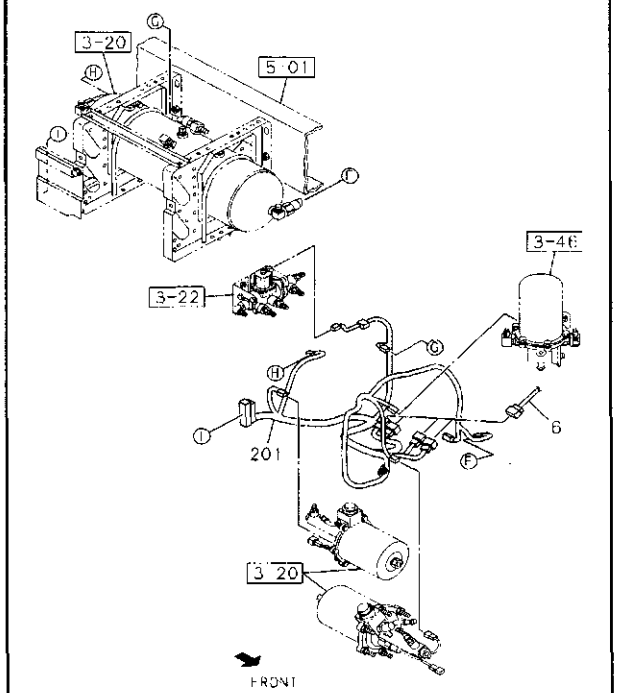

P-564

8-10 WIRING HARNESS AND FUSE
FIG-NO. RELAY; CAB HARNESS

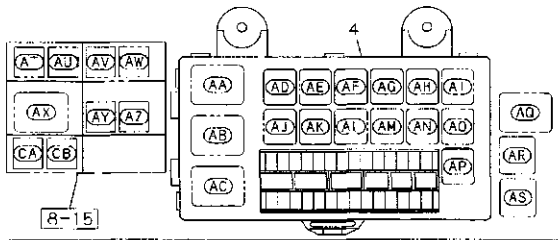

	KEY NO.	RELAY NAME		KEY NO.	RELAY NAME
AA	8-28	STOP LAMP	AS	—	—
AB	8-25	BLOWER MOTOR, HEATER	AT	8-25	PTO MAIN
AC	8-25	KEY ON	AU	—	—
AD	693	DOOR LOCK (LOCK)	AV	8-25	PTO MAIN
AE	—	—	AW	—	—
AF	693	WIPER MAIN	AX	—	—
AG	693	HORN	AY	—	—
AH	693	WIPER (HI/LOW)	A7	—	—
AI	—	—	CA	—	—
AJ	—	—	CB	—	—
AK	693	DOOR LOCK (UNLOCK)			
AL	—	—			
AM	693	HEAD LAMP (LOW)			
AN	693	ENG RUN			
AO	693	HEAD LAMP (HIGH)			
AP	693	TAIL			
AQ	—	—			
AR	—	—			


P-565

https://truckmanualshub.com/

ILLUSTRATION INDEX

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO. CLIP NO. 1 AND OTHER PARTS

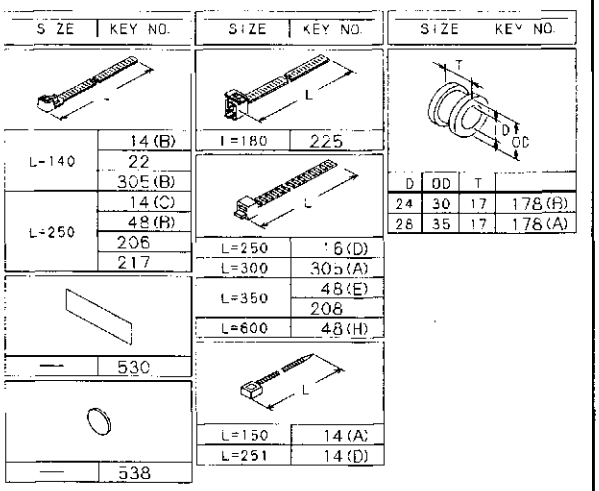

SIZE	KEY NO.
L=140	14(B)
	22
	305(B)
L=250	14(C)
	48(B)
	206
	217
—	530
—	538


SIZE	KEY NO.
L=180	225
L=250	16(D)
L=300	305(A)
L=350	48(E)
	208
L=600	48(H)
L=150	14(A)
L=251	14(D)

SIZE			KEY NO.
D	OD	T	
24	30	17	178(B)
28	35	17	178(A)

P-572

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO. CLIP NO. 2

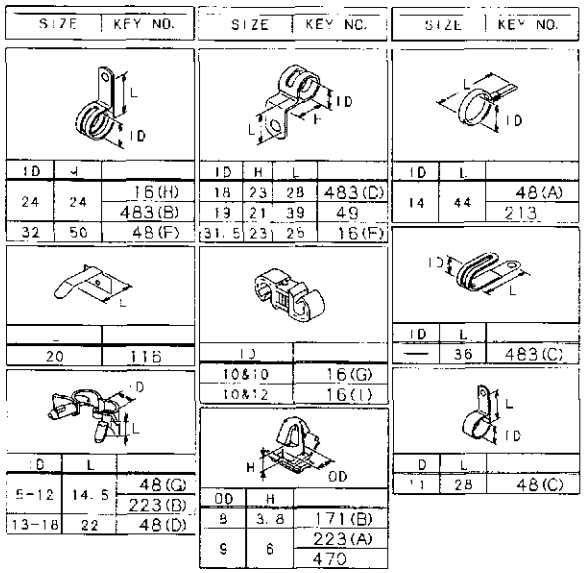

SIZE		KEY NO.
ID	H	
24	24	16(H)
		483(B)
32	50	48(F)
20		116
D	L	
5-12	14.5	48(G)
		223(B)
13-18	22	48(D)


SIZE			KEY NO.
ID	H	L	
18	23	28	483(D)
19	21	39	49
31.5	23	25	16(F)
ID			
10&10			16(G)
10&12			16(I)
OD	H		
9	3.8		171(B)
9	6		223(A)
			470

SIZE		KEY NO.
ID	L	
14	44	48(A)
		213
ID	L	
—	36	483(C)
D	L	
11	28	48(C)

P-573

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO. CLIP NO. 3

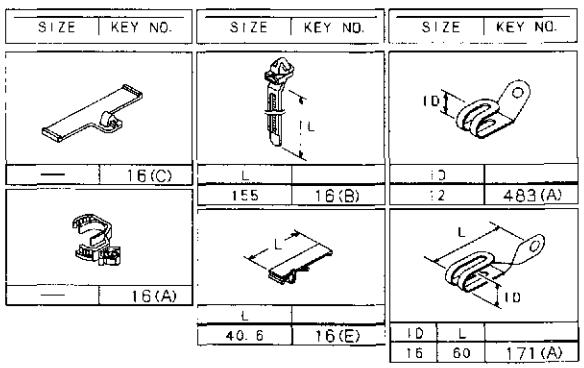

SIZE	KEY NO.
—	16(C)
—	16(A)


SIZE		KEY NO.
L		
155		16(B)
L		
40.6		16(E)

SIZE		KEY NO.
ID		
12		483(A)
ID	L	
16	60	171(A)

P-574

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO. BOLT, NUT, SCREW AND WASHER

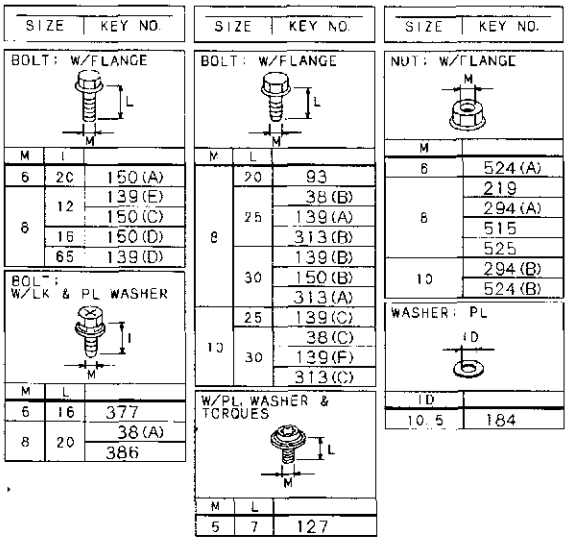

SIZE		KEY NO.
BOLT: W/FLANGE		
M	L	
6	20	150(A)
8	12	139(E)
	16	150(C)
	65	150(D)
		139(D)
BOLT: W/LK & PL WASHER		
M	L	
6	16	377
8	20	38(A)
		386

SIZE		KEY NO.
BOLT: W/FLANGE		
M	L	
8	20	93
	25	38(B)
		139(A)
		313(B)
	30	139(B)
		150(B)
		313(A)
10	25	139(C)
	30	38(C)
		139(F)
		313(C)
W/PL WASHER & TORQUES		
M	L	
5	7	127


SIZE	KEY NO.
NUT: W/FLANGE	
M	
6	524(A)
8	219
	294(A)
	515
	525
10	294(B)
	524(B)
WASHER: PL	
ID	
10.5	184

P-575

https://truckmanualshub.com/


ILLUSTRATION INDEX

8-15	FIXING PARTS; WIRING HARNESS
FIG-NO.	BRACKET

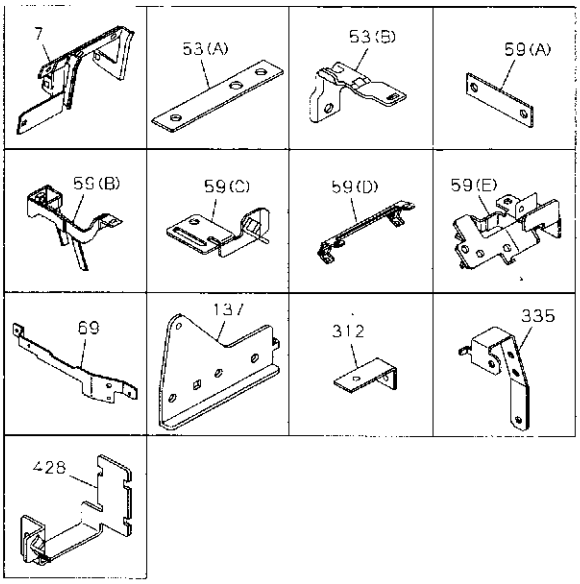


P-576

8-21	METER ASM
FIG-NO.	

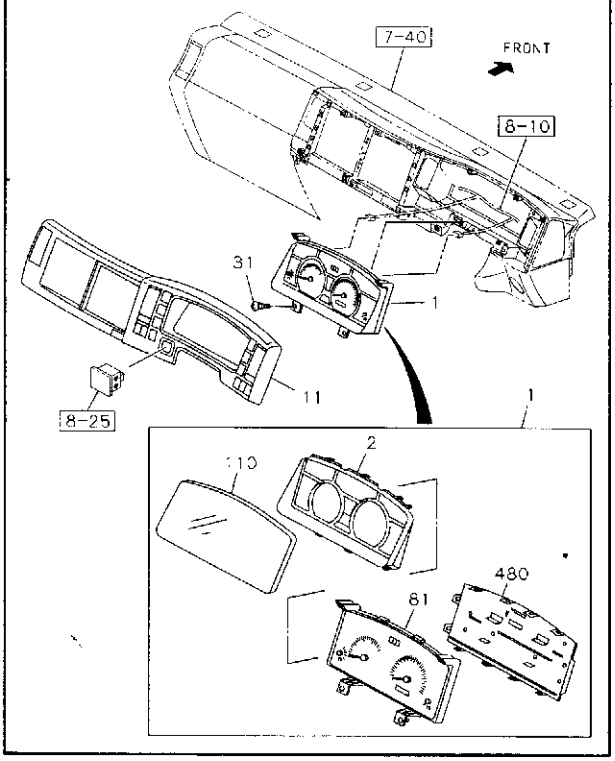


P-586

8-25	SWITCH AND RELAY; INSTRUMENT PANEL
FIG-NO.	SWITCH NO. 1

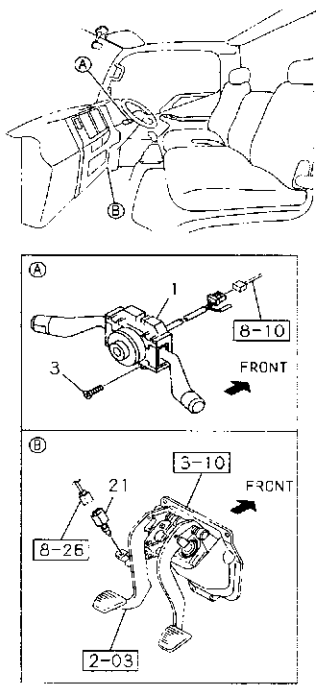

P-588

8-25	SWITCH AND RELAY; INSTRUMENT PANEL
FIG-NO.	SWITCH NO. 2

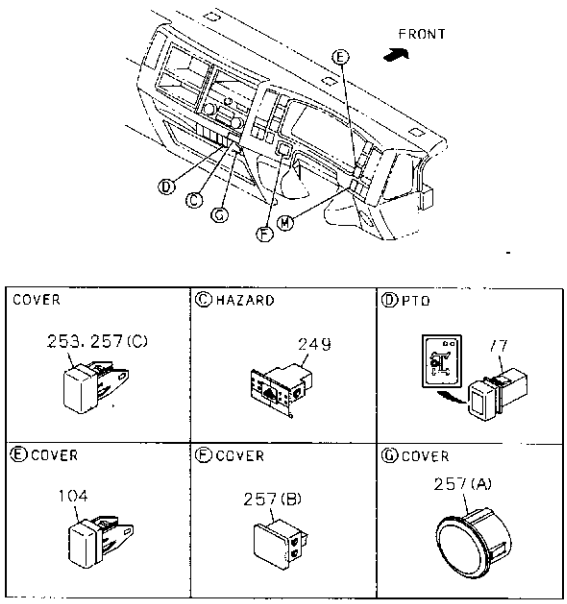


P-589

https://truckmanualshub.com/


ILLUSTRATION INDEX

8-25 SWITCH AND RELAY; INSTRUMENT PANEL
FIG-NO. SWITCH NO. 3

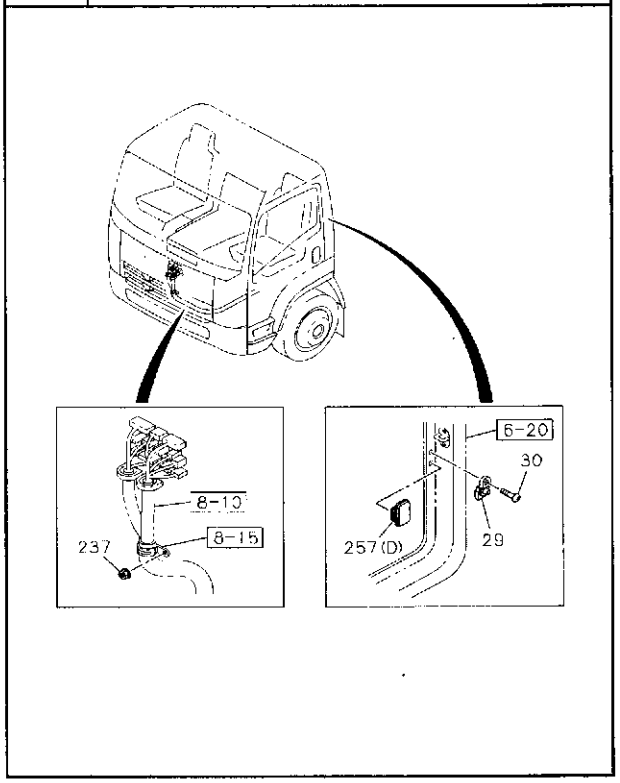

P-590


8-25 SWITCH AND RELAY; INSTRUMENT PANEL
FIG-NO. RELAY; CAB HARNESS

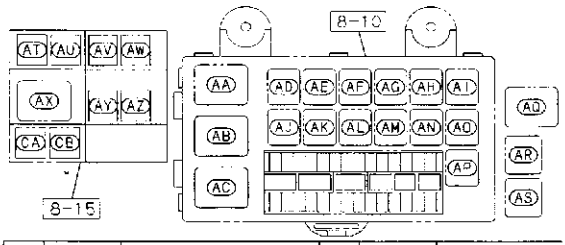

	KEY NO.	RELAY NAME		KEY NO.	RELAY NAME
AA	8-28	STOP LAMP	AS	—	—
AB	317	BLOWER MOTOR, HEATER	AI	606	PTO MAIN
AC	610	KEY ON	AU	—	—
AD	8-10	DOOR LOCK (LOCK)	AV	606	PTO MAIN
AE	—	—	AW	—	—
AF	8-10	WIPER MAIN	AX	—	—
AG	8-10	HORN	AY	—	—
AH	8-10	WIPER (HI/LOW)	AZ	—	—
AI	—	—	CA	—	—
AJ	—	—	CB	—	—
AK	8-10	DOOR LOCK (UNLOCK)			
AL	—	—			
AM	8-10	HEAD LAMP (LOW)			
AN	8-10	ENG RUN			
AO	8-10	HEAD LAMP (HIGH)			
AP	8-10	TAIL			
AQ	—	—			
AR	—	—			


P-591

8-26 ELECTRICAL CONTROL AND OTHER PARTS
FIG-NO. FRONT SIDE NO. 1

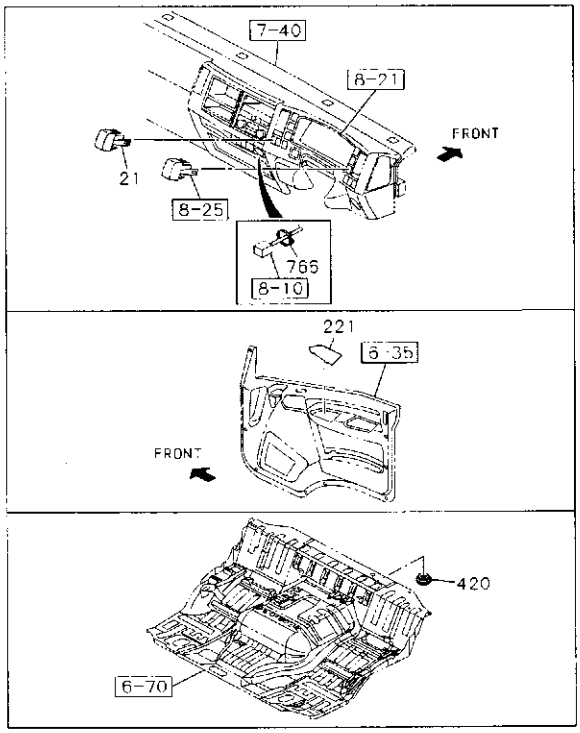

P-594

8-26 ELECTRICAL CONTROL AND OTHER PARTS
FIG-NO. FRONT SIDE NO. 2

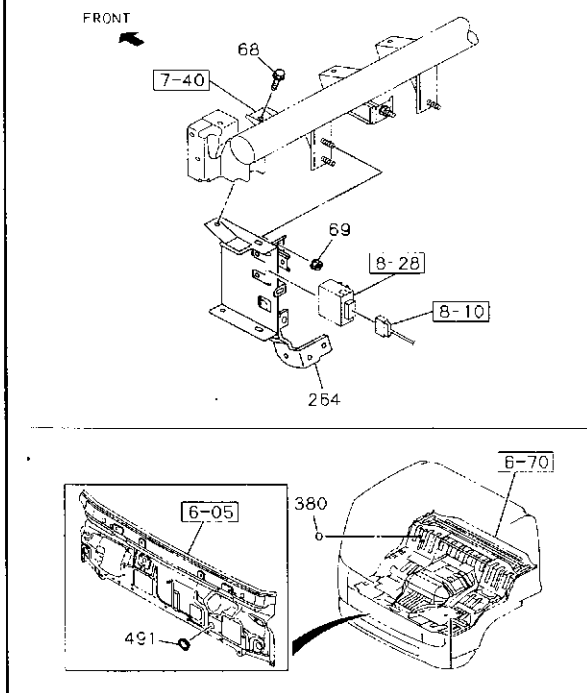


P-595

https://truckmanualshub.com/


ILLUSTRATION INDEX

8-26 ELECTRICAL CONTROL AND OTHER PARTS
FIG-NO. SENSOR; VEHICLE SPEED, CRANK ANGLE

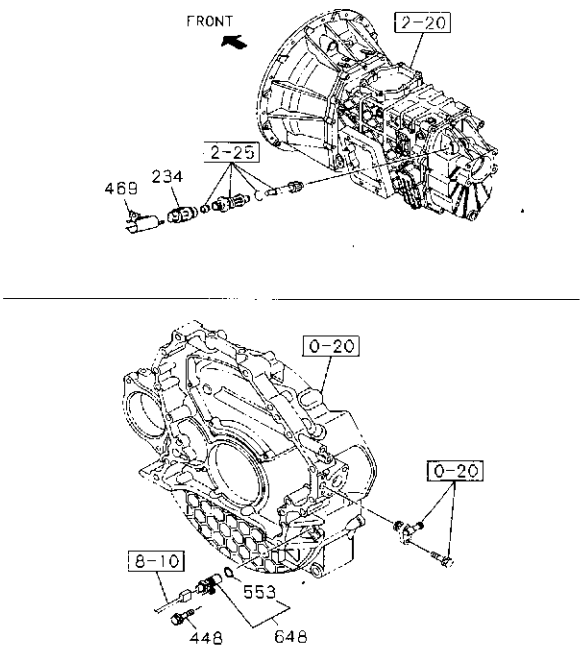


P-596

8-28 CHASSIS ELECTRICAL
FIG-NO. FRONT SIDE

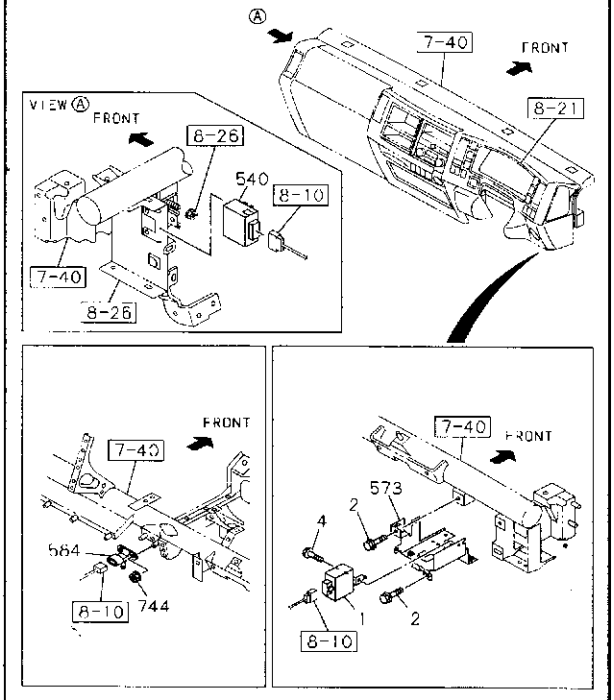


P-600

8-28 CHASSIS ELECTRICAL
FIG-NO. CAB SIDE

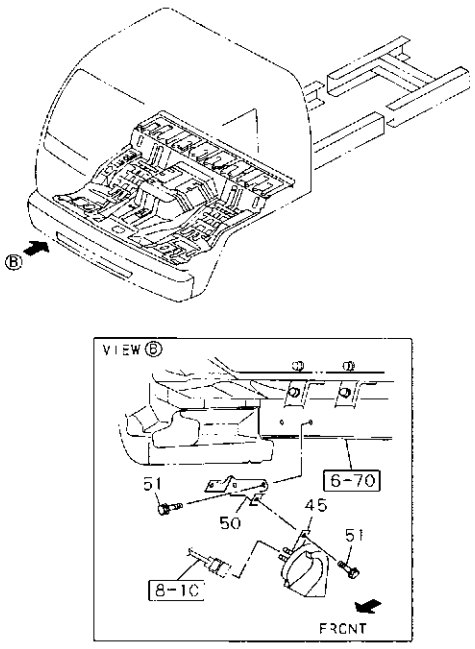

P-601

8-28 CHASSIS ELECTRICAL
FIG-NO. VALVE; PTO

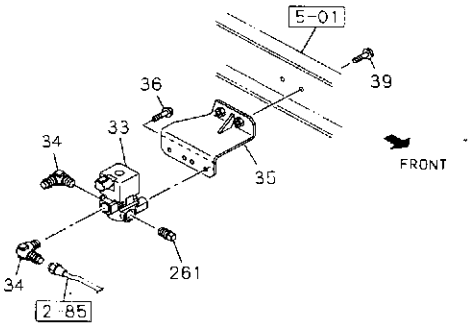


P-602

https://truckmanualshub.com/

ILLUSTRATION INDEX


8-28 CHASSIS ELECTRICAL
FIG-NO. RELAY; CAB HARNESS

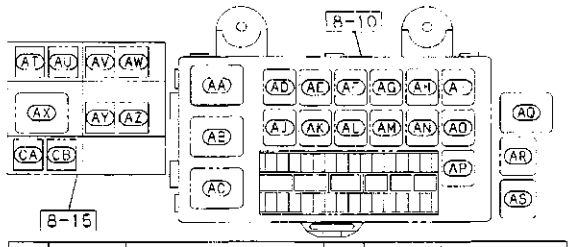

	KEY NO.	RELAY NAME		KEY NO.	RELAY NAME
AA	22	STOP LAMP	AS	—	—
AB	8-25	BLOWER MOTOR, HEATER	A	8-25	PTO MAIN
AC	8-25	KEY ON	AU	—	—
AD	8-10	DOOR LOCK (LOCK)	AV	8-25	PTO MAIN
AE	—	—	AW	—	—
AF	8-10	W PER MAIN	AX	—	—
AG	8-10	HORN	AY	—	—
AH	8-10	WIPER (HI/LOW)	AZ	—	—
AJ	—	—	CA	—	—
AJ	—	—	CB	—	—
AK	8-10	DOOR LOCK (UNLOCK)			
AL	—	—			
AM	8-10	HEAD LAMP (LOW)			
AN	8-10	ENG RUN			
AO	8-10	HEAD LAMP (HIGH)			
AP	8-10	TAIL			
AQ	—	—			
AR	—	—			

P-603


8-28 CHASSIS ELECTRICAL
FIG-NO. RELAY; FRAME HARNESS

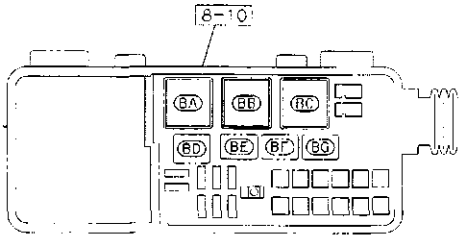

	KEY NO.	RELAY NAME
BA	0-60	STARTER
BB	531	MAIN
BC	—	—
BD	—	—
BE	—	—
BF	0-60	STARTER
BG	—	—


P-604

8-40 HEATER SYSTEM
FIG-NO. DUCT

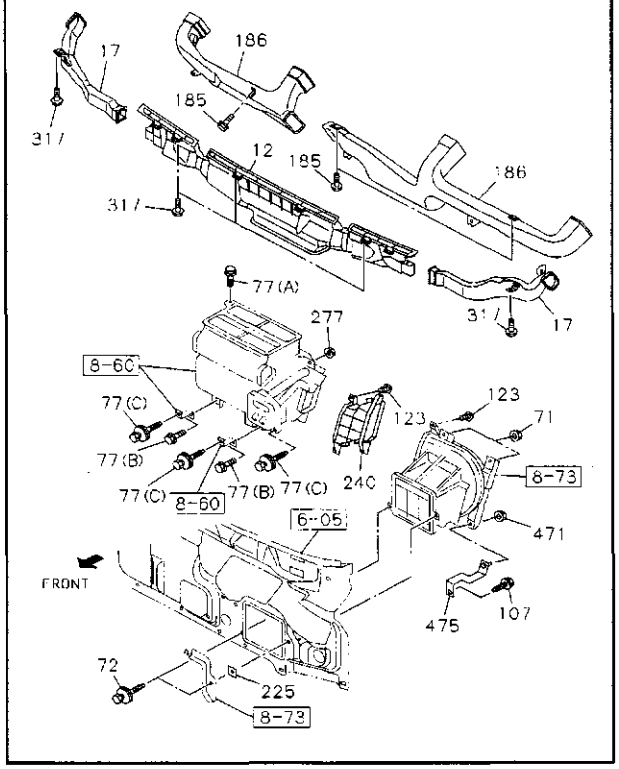

P-608

8-40 HEATER SYSTEM
FIG-NO. OTHER PARTS

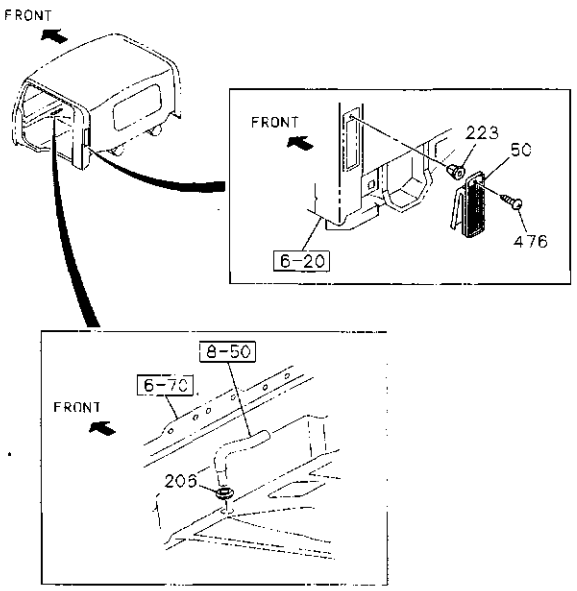


P-609

https://truckmanualshub.com/


ILLUSTRATION INDEX


8-45	HEATER PIPING
FIG-NO.	

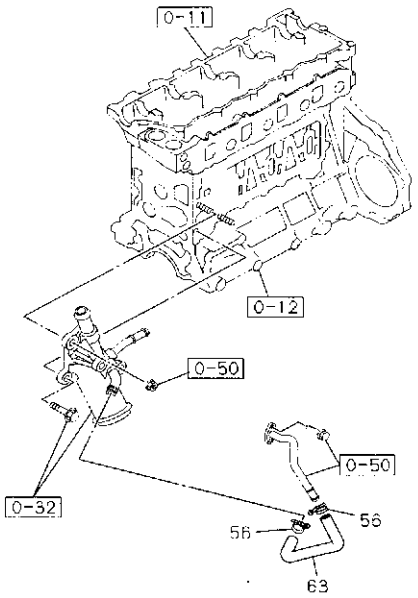

P-612


8-50	AIR CONDITIONING SYSTEM; FRONT
FIG-NO.	

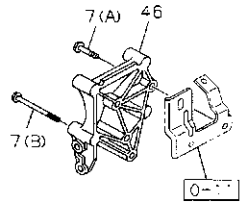

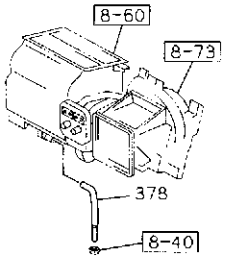


P-614

8-60	HEATER UNIT; FRONT
FIG-NO.	

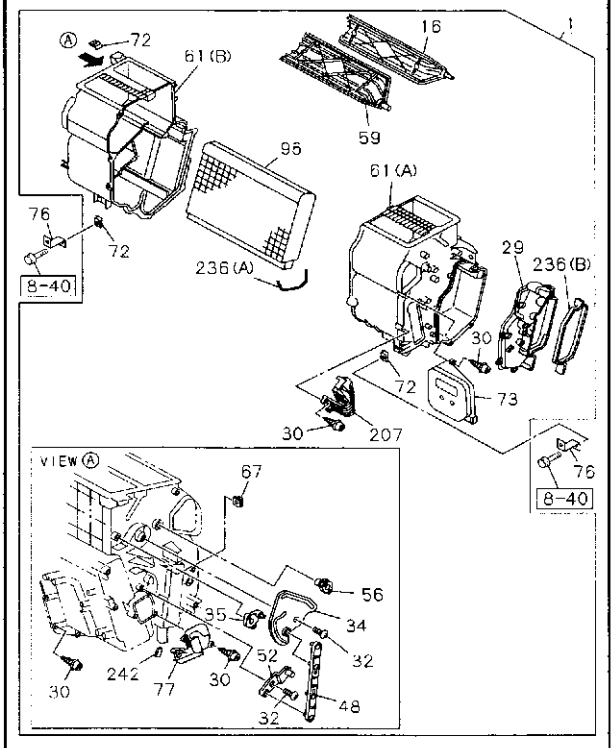

P-616

8-65	CONTROL LEVER; HEATER AND AIR CON
FIG-NO.	

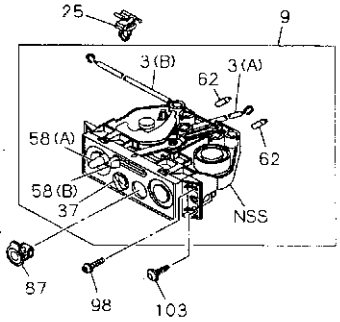


P-620

https://truckmanualshub.com/


ILLUSTRATION INDEX

8-73	BLOWER UNIT
FIG-NO.	COMPONENT AND FILTER

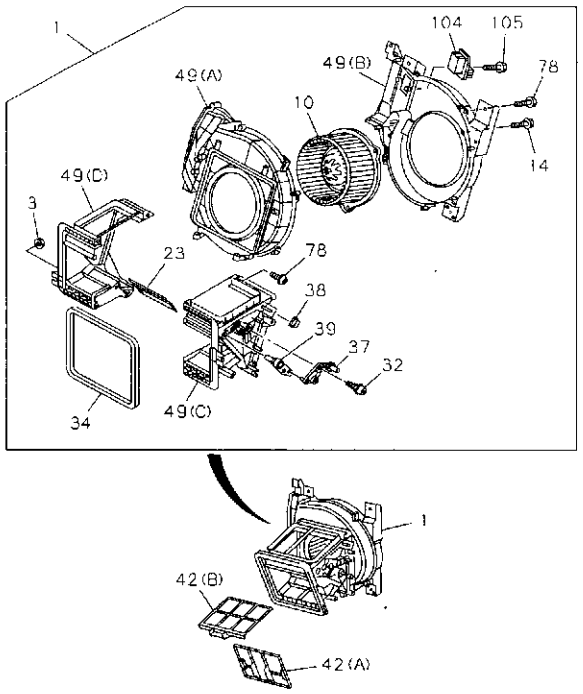


P-622

8-73	BLOWER UNIT
FIG-NO.	BLOWER UNIT COVER

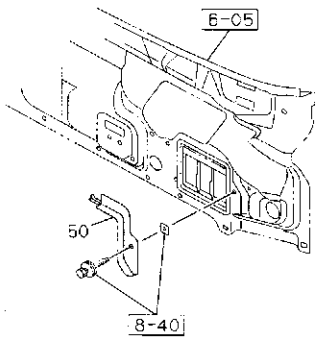


P-623

8-80	WINDSHIELD WIPER AND WASHER
FIG-NO.	FIXING

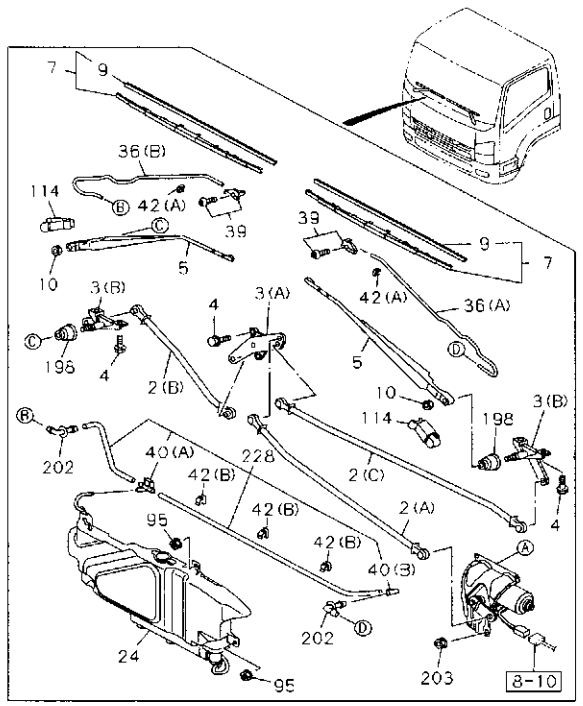

P-626

8-80	WINDSHIELD WIPER AND WASHER
FIG-NO.	COMPONENT

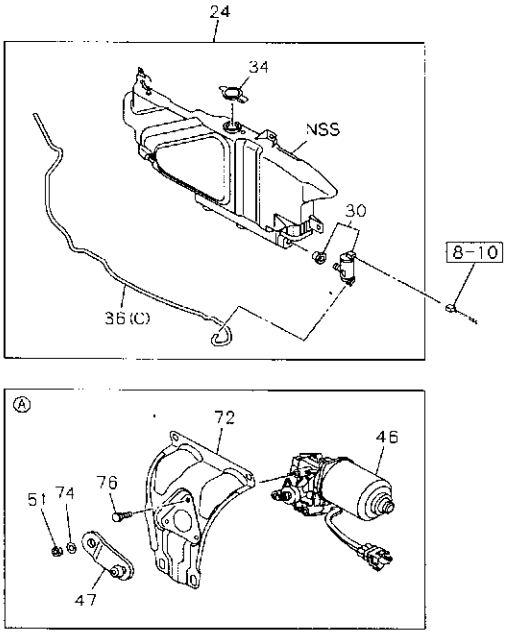


P-627

https://truckmanualshub.com/


ILLUSTRATION INDEX

8-90	RADIO AND TV
FIG-NO.	NO. 1

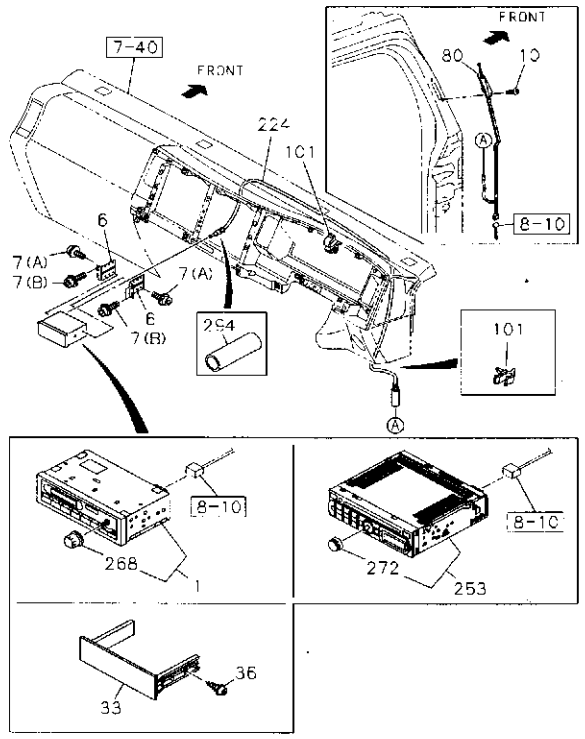


P-632

8-90	RADIO AND TV
FIG-NO.	NO. 2

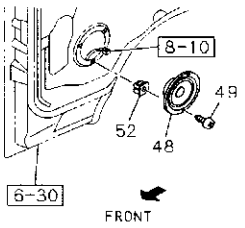


P-633

9-01	TOOLS
FIG-NO.	NO. 1

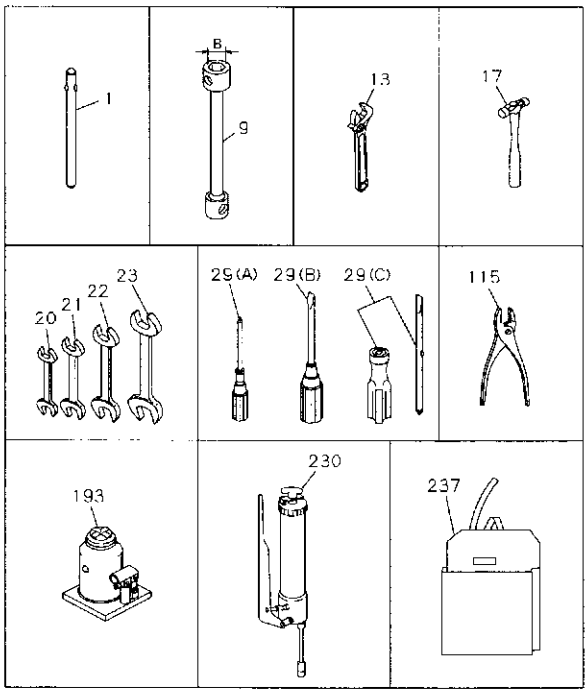

P-638

9-01	TOOLS
FIG-NO.	NO. 2

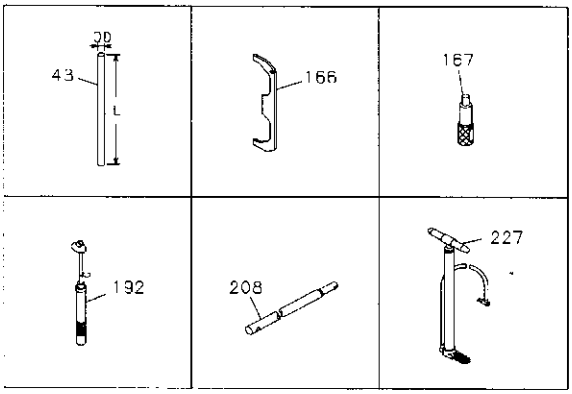


P-639

https://truckmanualshub.com/

ILLUSTRATION INDEX

9-01	TOOLS
FIG-NO.	NO. 3

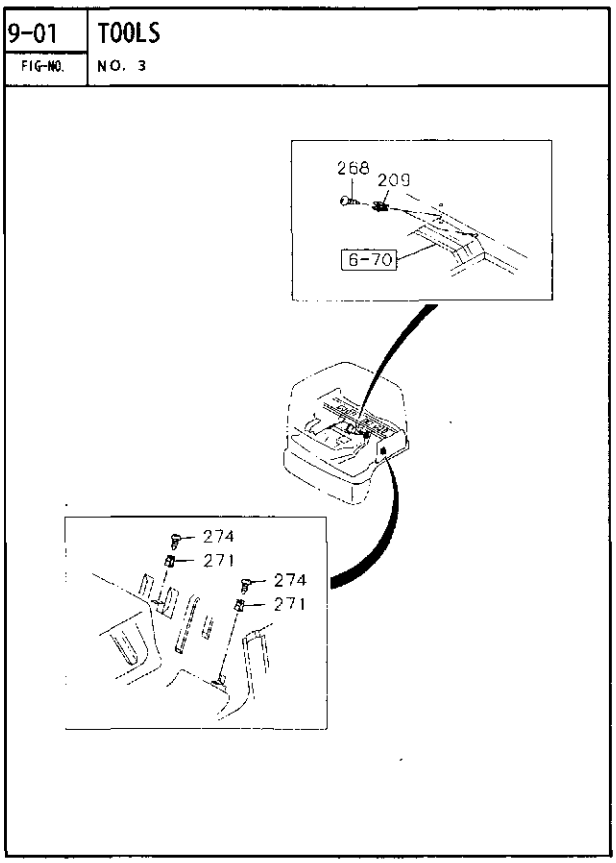

P-640


https://truckmanualshub.com/

O

https://truckmanualshub.com/

0-05 ENGINE GASKET KIT


FIG-NO. ENG OVERHAUL

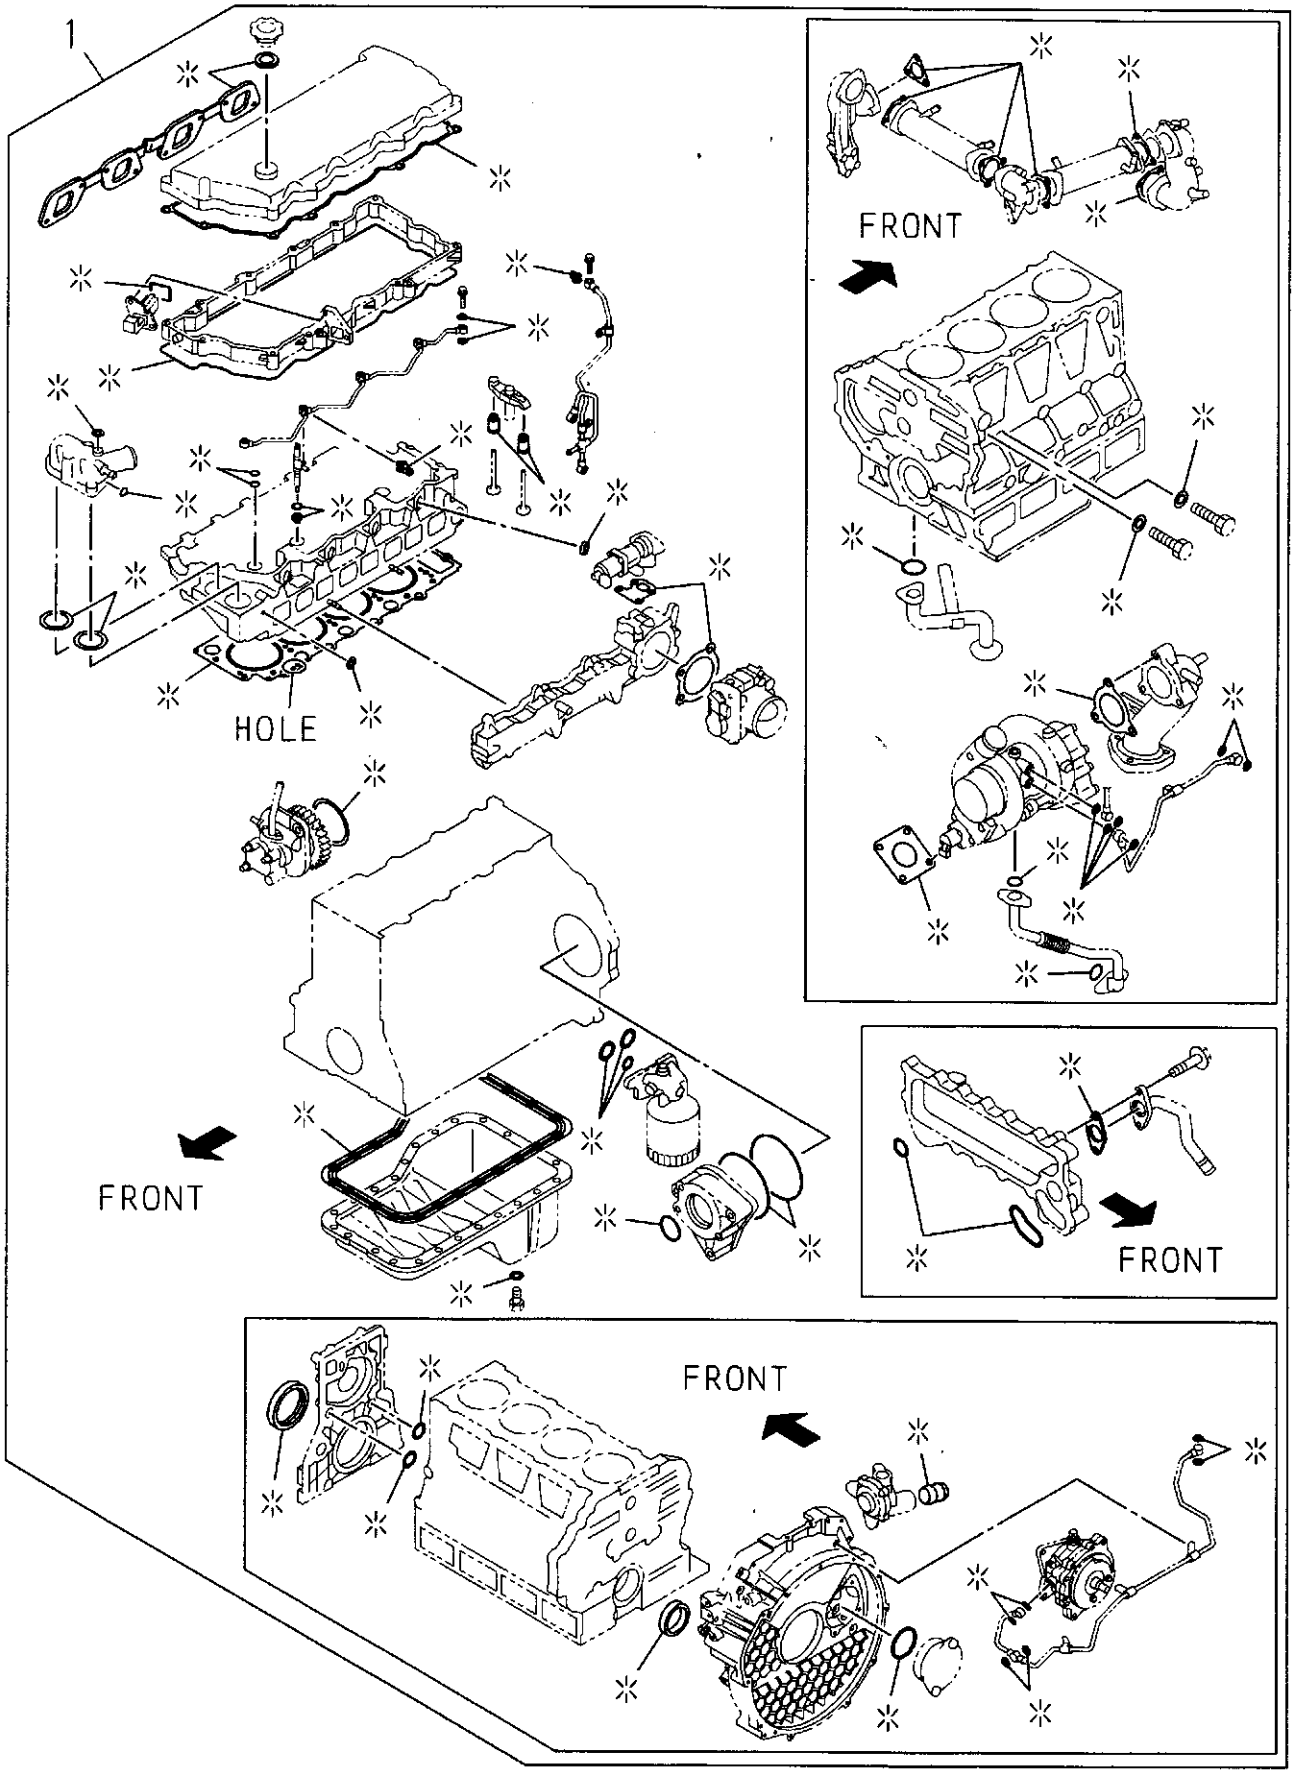

https://truckmanualshub.com/

ENGINE GASKET KIT

ENG HD OVERHAUL

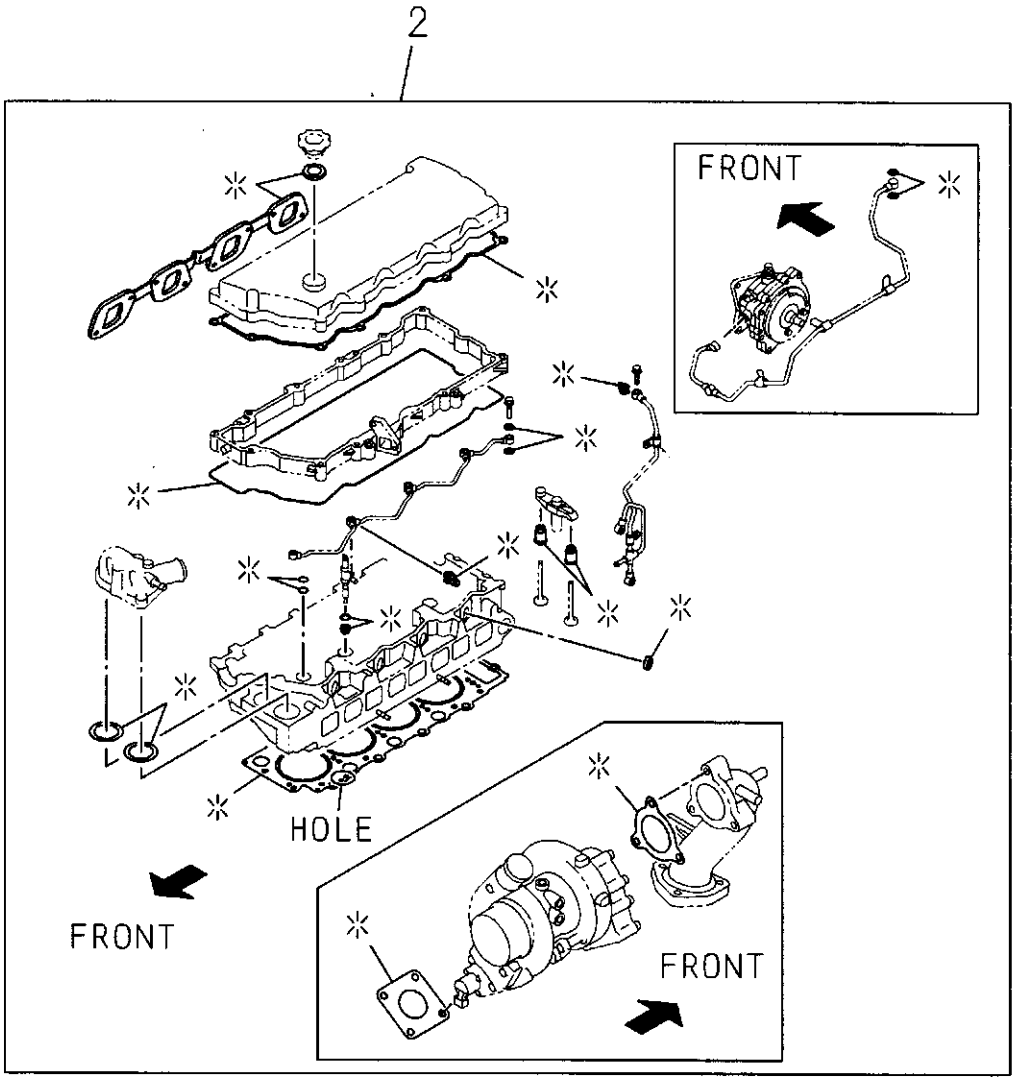

https://truckmanualshub.com/

0-05 ENGINE GASKET KIT


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
1	-B- GASKET SET; ENG OVERHAUL					
	1-87813-721-0		1103-		01	A T=1.475 NON-HOLE
	1-87813-722-0		1103-		01	A T=1.525 1-HOLE
	1-87813-723-0		1103-		01	A T=1.575 2-HOLE
2	--- GASKET SET; ENG HD OVERHAUL					
	1-87813-441-1		1103-		01	A T=1.475 NON-HOLE
	1-87813-442-1		1103-		01	A T=1.525 1-HOLE
	1-87813-443-1		1103-		01	A T=1.575 2-HOLE

https://truckmanualshub.com/

0-10 CYLINDER HEAD COVER

FIG-NO.

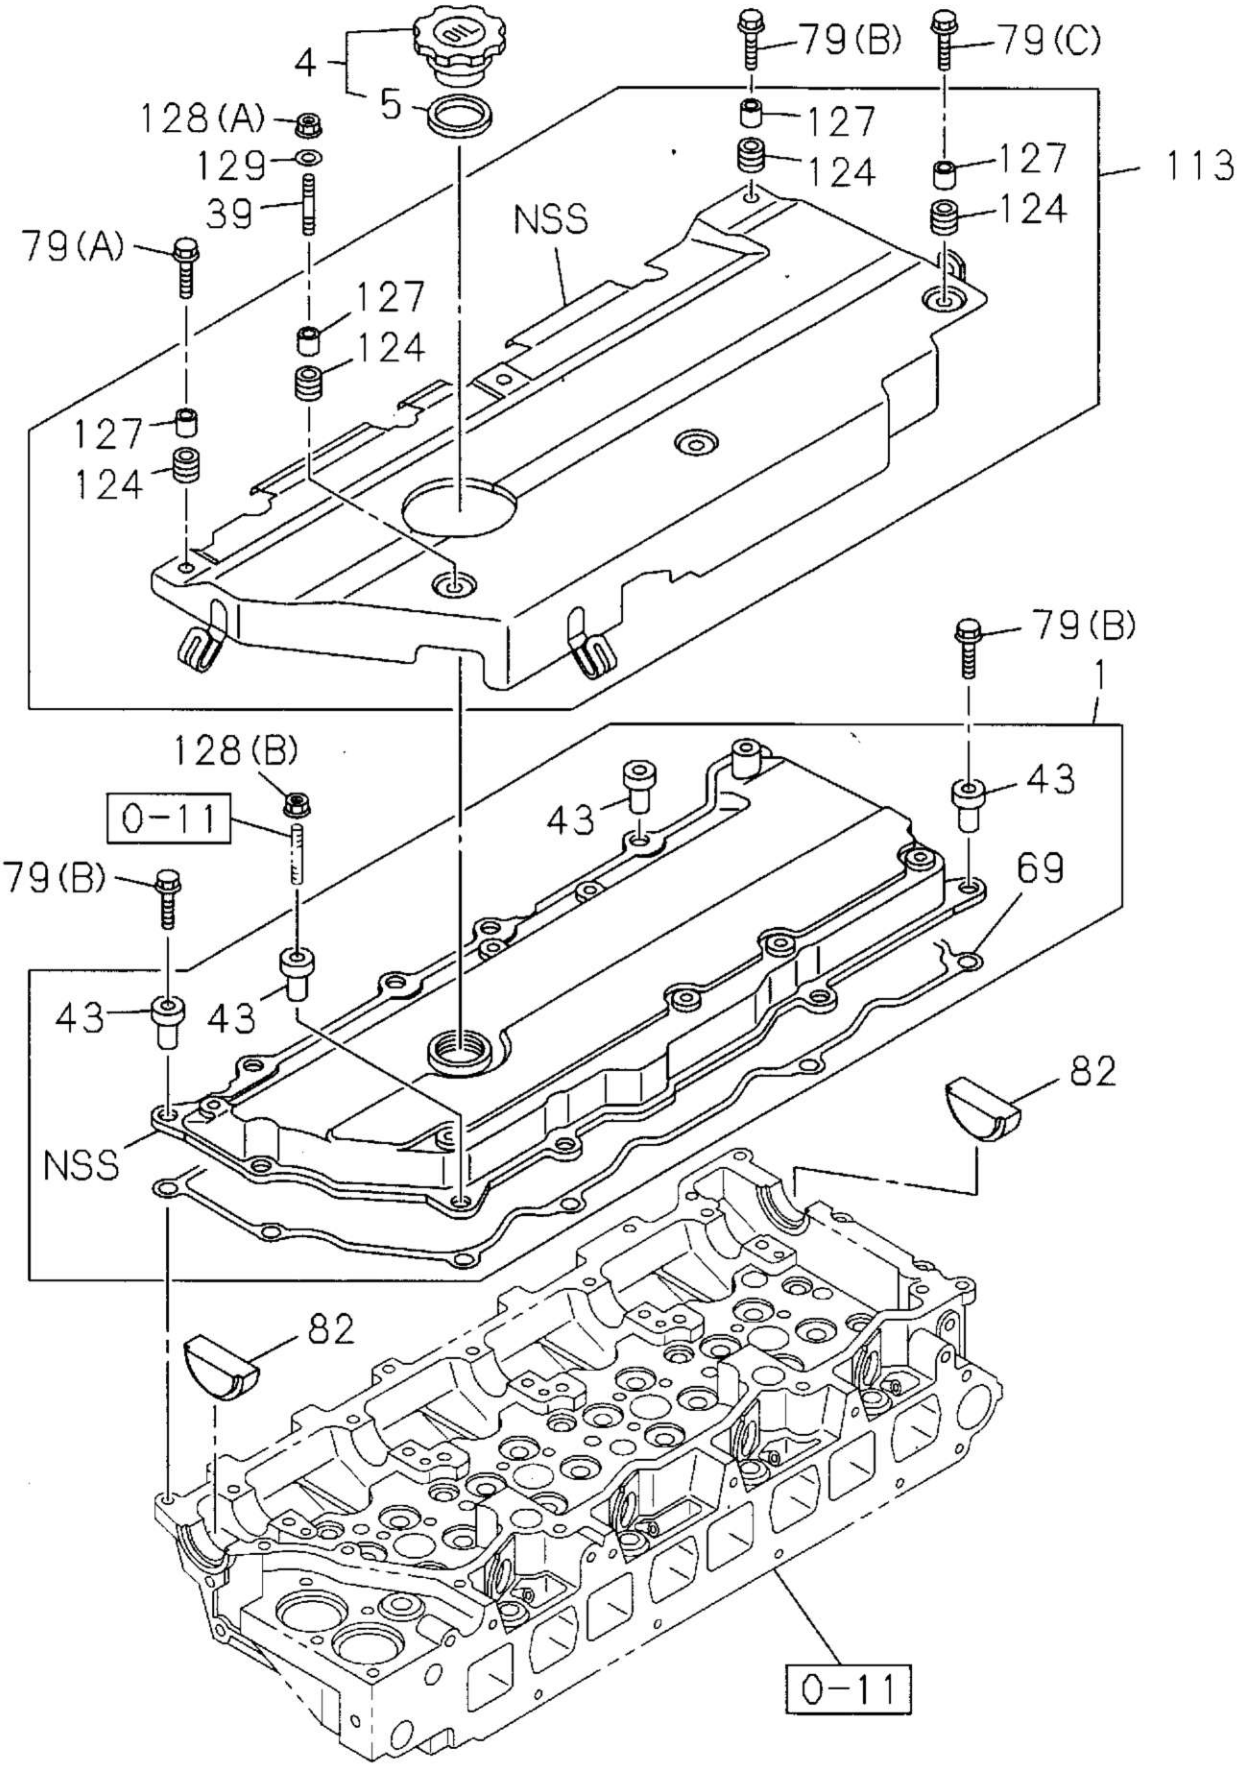

https://truckmanualshub.com/

CYLINDER HEAD COVER

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- COVER; CYL HD					
	8-97331-361-2		1103-		01	A
4	--- CAP; OIL FILLER					
	8-94133-207-5		1103-		01	A
5	--- GASKET; OIL FILLER					ALSO INCLUDED IN GASKET SET(ENGINE).
	8-94123-623-1		1103-		01	A ID=32 OD=40
39	--- STUD; COVER, HD					
	0-41010-625-0		1103-		02	A M6X25 L=34
43	--- RUBBER; MTG, HD COVER, OUTER					
	8-94395-684-0		1103-		11	A OD=22
69	--- GASKET; HD TO COVER					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	8-97331-359-1		1103-		01	A
79	--- BOLT; COVER					
	0-28650-835-0		1103-		02	A (A) M8X35 FLANGE
	1-09044-072-1		1103-		07	A (B) M8X65 FLANGE
	8-97127-607-0		1103-		04	A (C) M6X20
82	--- PLUG; CYL HD COVER					
	8-98163-813-0		1103-		02	A
113	--- COVER; CYL HEAD COVER					
	8-97354-803-3		1103-		01	A
124	--- RUBBER; MTG, COVER					
	8-97226-908-0		1103-		06	A
127	--- RETAINER; COVER					
	8-97092-314-0		1103-		06	A

https://truckmanualshub.com/

0-10 CYLINDER HEAD COVER


FIG-NO.


KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
128	--- NUT; COVER, CYL HEAD COVER					
	0-91180-106-0		1103-		02	A (A) M6 FLANGE
	0-91180-108-0		1103-		02	A (B) M8 FLANGE
129	--- WASHER; COVER, CYL HEAD COVER					
	0-91610-706-0		1103-		01	A ID=6.4 OD=18

https://truckmanualshub.com/


0-11 CYLINDER HEAD

FIG-NO. CYL HEAD COMPONENT

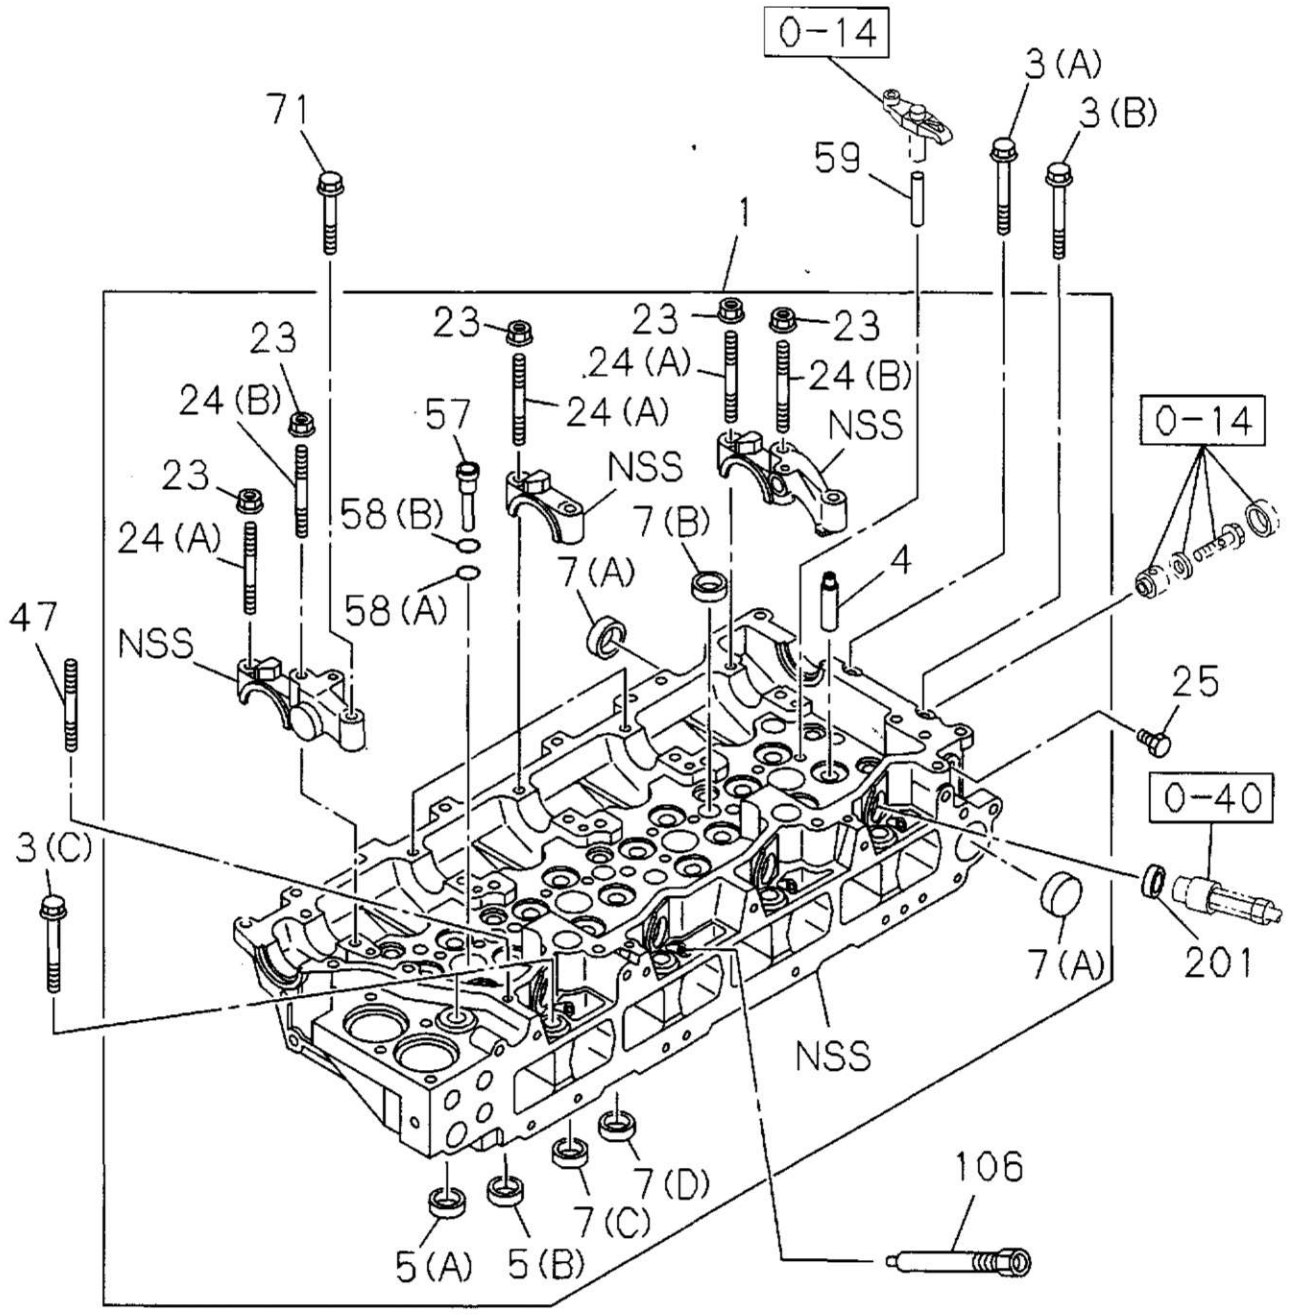

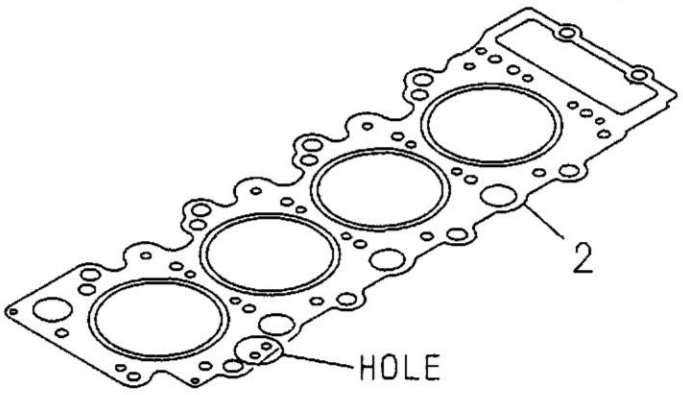

https://truckmanualshub.com/

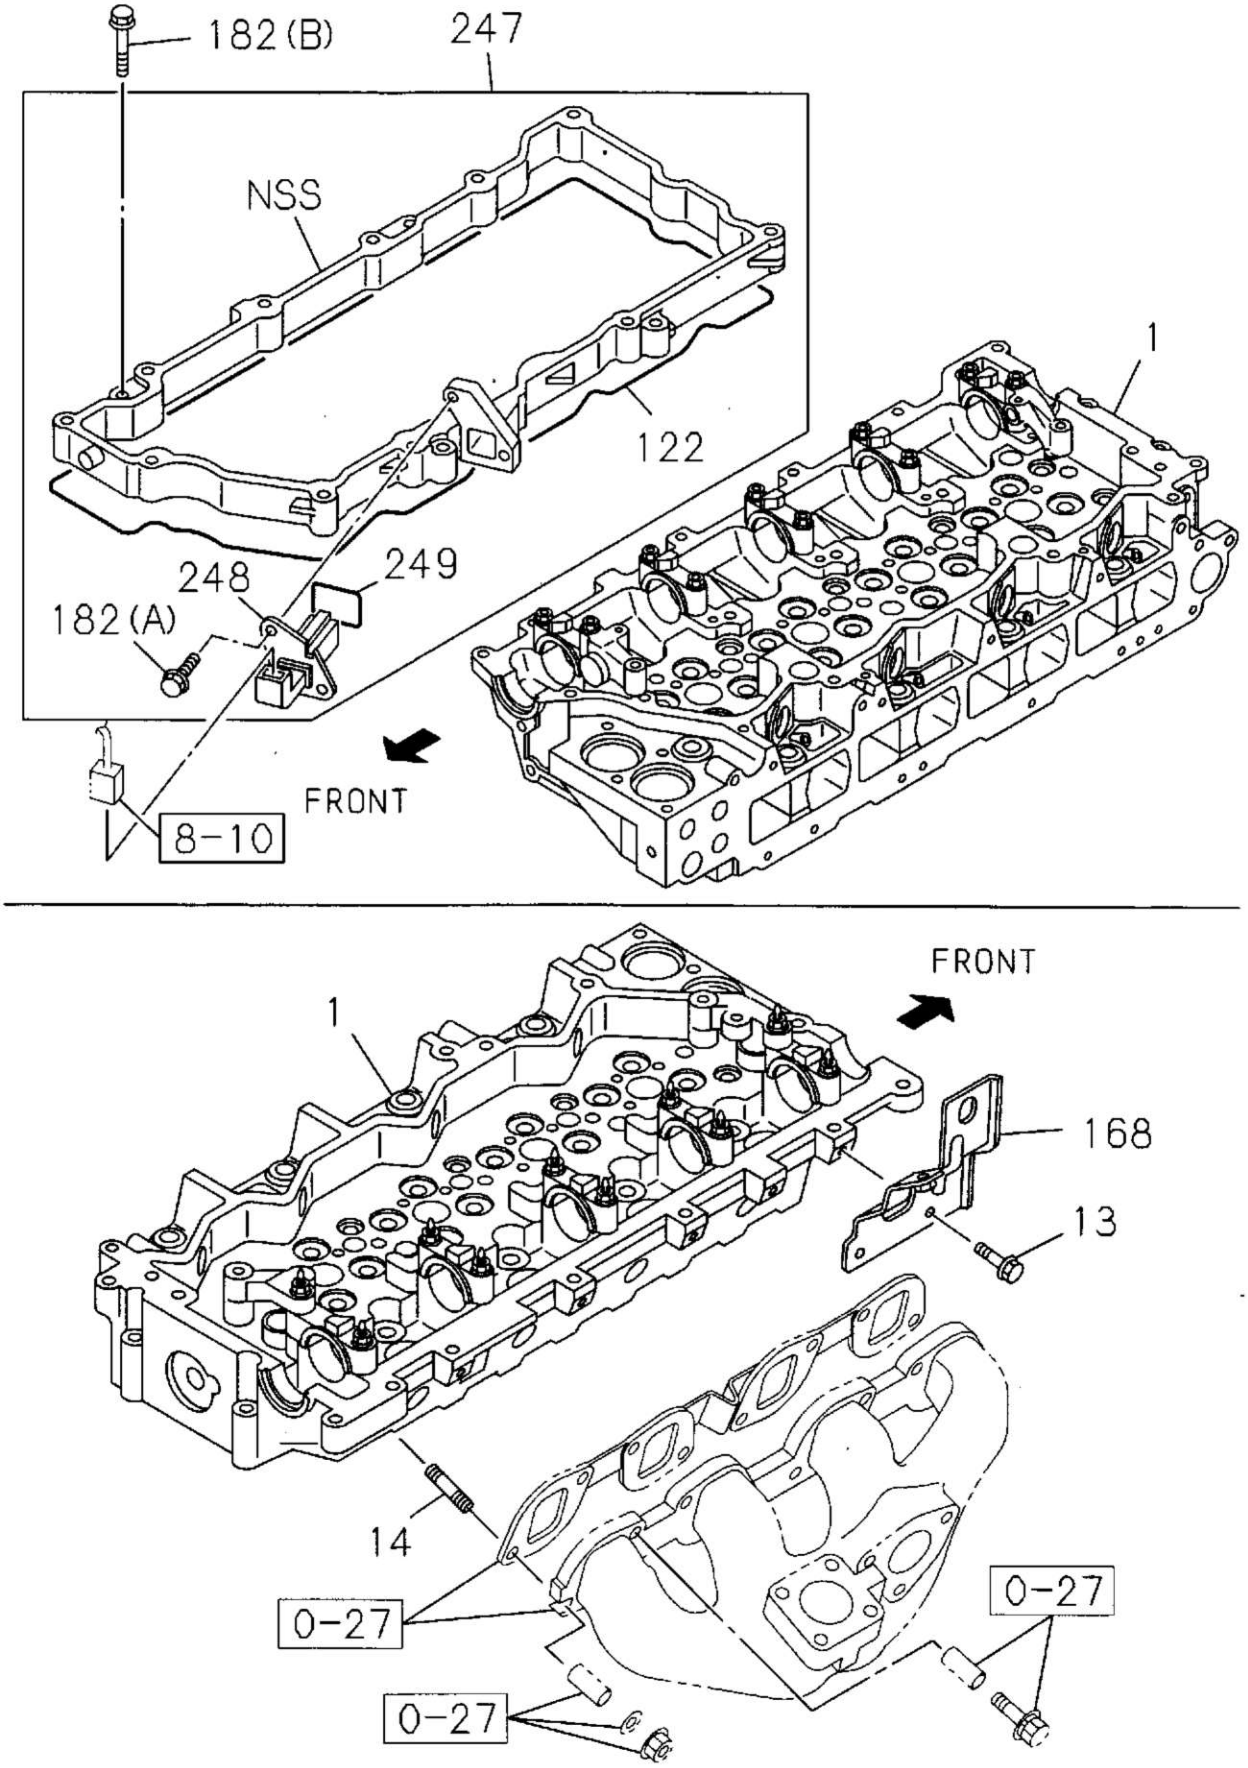

https://truckmanualshub.com/

0-11 CYLINDER HEAD

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
1	--- HEAD ASM; CYL					
	8-98170-619-0		1103-		01	A
2	--- GASKET; CYL HD					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	8-98055-540-0		1103-		01	A T=1.475 NON-HOLE
	8-98055-541-0		1103-		01	A T=1.525 1-HOLE
	8-98055-542-0		1103-		01	A T=1.575 2-HOLE
3	--- BOLT; CYL HD TO BLOCK					
	8-94399-554-0		1103-		01	A (A) M10X73
	8-94399-555-0		1103-		01	A (B) M10X43
	8-97077-638-0		1103-		18	A (C) M14X115 W/FLANGE
4	--- GUIDE; VLV					
	8-97376-719-2		1103-		16	A
5	--- SEAT; VLV INSERT					
	8-98028-874-0		1103-		08	A (A) INLET ID=32 OD=38
	8-98028-875-0		1103-		08	A (B) EXHAUST ID=31 OD=38
7	--- CUP; SEALING, CYL HEAD					
	1-09600-016-0		1103-		04	A (B) OD=25
	5-11129-006-0		1103-		05	A (C) OD=16
	8-97096-821-0		1103-		05	A (A) OD=32
	9-11129-128-0		1103-		07	A (D) OD=20

https://truckmanualshub.com/

CYLINDER HEAD

0-11

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
13	--- BOLT; HANGER					
	0-28151-020-0		1103-		02	A M10X20 FLANGE
14	--- STUD; EXH MANIF					
	8-94397-286-0		1103-		02	A M10X60 L=75
23	--- NUT; CAM BRKT					
	0-91180-208-0		1103-		10	A M8 FLANGE
24	--- STUD; CM/SHF BRKT					
	8-94322-512-2		1103-		02	A (B) M8X54 L=79
	8-94322-513-2		1103-		08	A (A) M8X41 L=66
25	--- PLUG; CYL HD					
	8-98003-416-0		1103-		01	A M8X10
47	--- STUD; CYL HD					
	0-49140-860-0		1103-		02	A M8X60 L=72
57	--- SLEEVE; NOZZLE HOLDER					
	8-97606-661-0		1103-		04	A
58	--- GASKET; SLEEVE, NOZZLE HOLDER					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	8-97604-916-0		1103-		04	A (A) ID=26.4
	8-98004-187-0		1103-		04	A (B) ID=26.2
59	--- GUIDE; BRIDGE					
	8-97381-603-1		1103-		08	A
71	--- BOLT; CAM BRKT					
	0-28050-835-0		1103-		02	A M8X35 FLANGE

https://truckmanualshub.com/

0-11 CYLINDER HEAD


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
106	--- PLUG; GLOW PLUG HOLE						
	8-94392-236-0		1103-		04	A	
122	--- GASKET; COVER						
	8-97331-360-1		1103-		01	A	ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
168	--- HANGER; ENG, FRT						
	8-97383-001-1		1103-		01	A	
182	--- BOLT; CASE						
	0-28050-812-0		1103-		02	A	(A) M8X12 FLANGE
	0-28050-845-0		1103-		04	A	(B) M8X45 FLANGE
201	--- GASKET; SLEEVE, INJ PUMP						
	1-09639-034-0		1103-		04	A	ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
247	--- CASE; CYL HEAD-C/H COVER						
	8-97331-362-1		1103-		01	A	
248	--- CONNECTOR						
	8-94390-858-1		1103-		01	A	
249	--- GASKET; CONNECTOR						
	8-94391-310-0		1103-		01	A	ALSO INCLUDED IN GASKET SET(ENGINE).


https://truckmanualshub.com/

0-12 CYLINDER BLOCK

FIG-NO. BLOCK ASM AND LINER SET

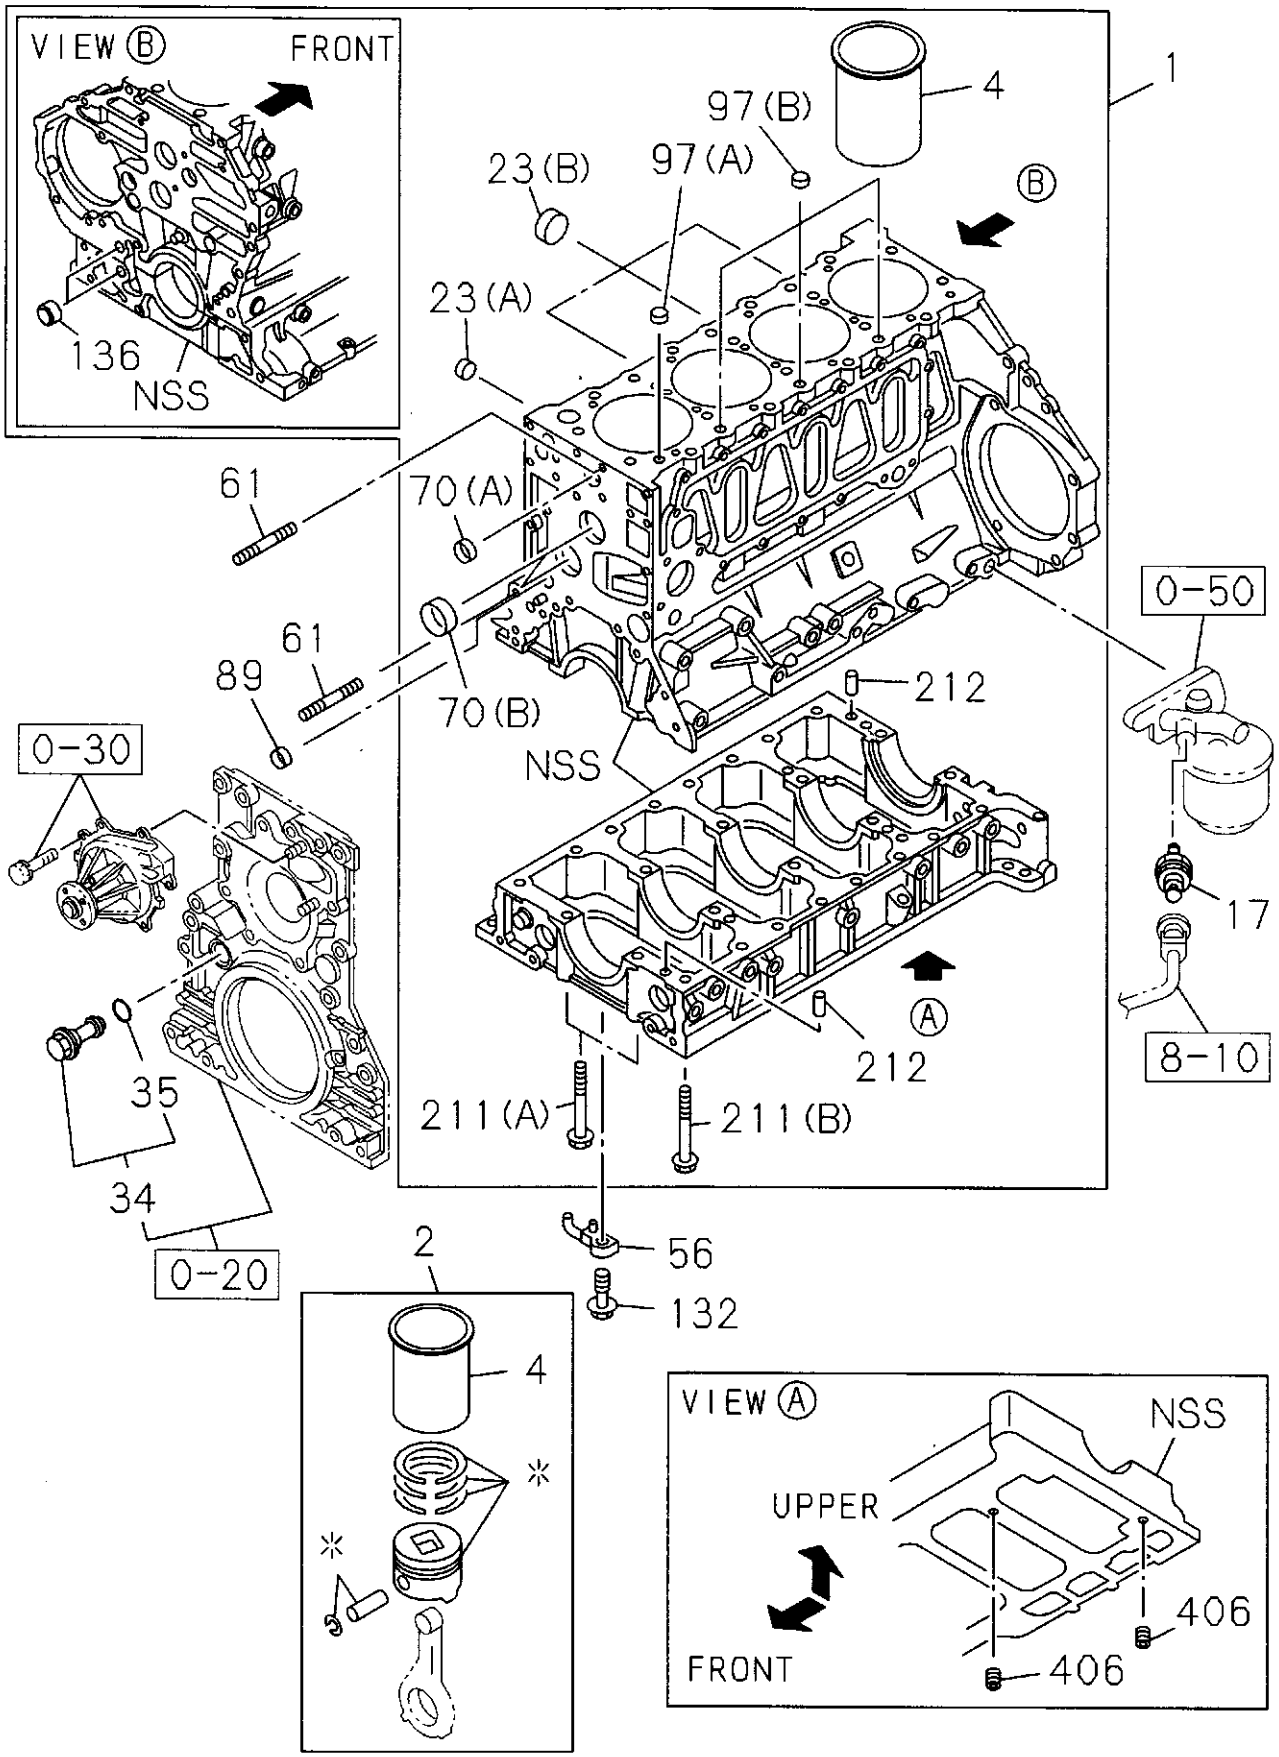

https://truckmanualshub.com/

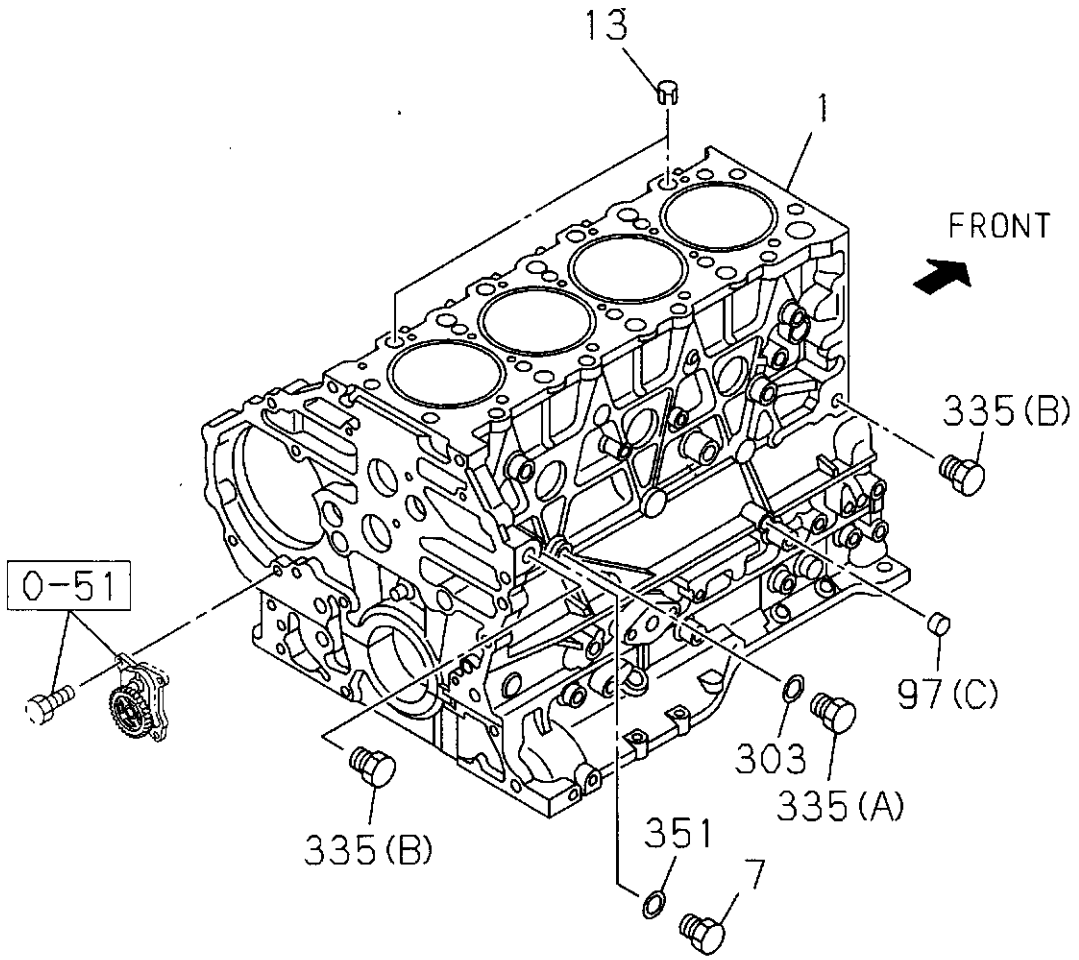

https://truckmanualshub.com/

0-12 CYLINDER BLOCK

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
1	--- BLOCK ASM; CYL					
	8-98046-721-3		1103-		01	A
2	--- LINER SET; ENG CYL					
	1-87813-119-4		1103-		04	A GRADE=1X
	1-87813-120-4		1103-		04	A GRADE=3X
4	--- LINER; C/BL					ALSO INCLUDED IN LINER SET.
	8-98014-046-1		1103-		04	A OD GRADE=1X, ID GRADE=NON
	8-98014-047-1		1103-		04	A OD GRADE=3X, ID GRADE=NON
7	--- PLUG; WATER DRAIN					
	8-97352-537-0		1103-		01	A M10X10
13	--- DOWEL; C/BL TO HD					
	8-94399-688-1		1103-		02	A OD=18.15
17	-B- SWITCH; OIL PRESSURE					
	8-97176-230-0		1103-		01	A
23	--- CUP; SEALING, C/BL FRT & RR					
	1-09600-016-0		1103-		01	A (A) OD=25
	8-97036-550-1		1103-		03	A (B) OD=45
34	--- VALVE; OIL RELIEF					
	8-97328-859-0		1103-		01	A
35	--- GASKET; RELIEF VLV					ALSO INCLUDED IN GASKET SET(ENGINE).
	8-94173-412-0		1103-		01	A ID=23.3
56	--- JET; OIL, PISTON COOLING					
	8-98173-342-0		1103-		04	A

https://truckmanualshub.com/

CYLINDER BLOCK

0-12

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
61	--- PIN; STRAIGHT					
	8-94483-674-0		1103-		04	A L=22
70	--- CUP; SEALING, FRT & RR					
	1-09600-016-0		1103-		01	A (A) OD=25
	8-97096-824-0		1103-		04	A (B) OD=40
89	--- CUP; SEALING, OIL GALLERY					
	9-11129-128-0		1103-		03	A OD=20
97	--- CUP; SEALING					
	5-11129-006-0		1103-		01	A (A) OD=16
	8-97036-335-1		1103-		01	A (C) OD=12
	8-97209-609-0		1103-		03	A (B) OD=22
132	--- VALVE; CHECK, OIL					
	8-97329-618-0		1103-		04	A M10X18.5
136	--- BUSHING; DRIVE SHAFT, OIL PUMP					
	8-98091-566-0		1103-		02	A
211	--- BOLT; CRANKCASE					
	8-94399-553-2		1103-		17	A (B) M10X82
	8-97077-638-0		1103-		10	A (A) M14X115 W/FLANGE
212	--- PIN; CRANKCASE					
	8-97135-423-0		1103-		02	A OD=10 L=20

https://truckmanualshub.com/

0-12 CYLINDER BLOCK


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
303	--- GASKET; PLUG					
	1-09630-085-0		1103-		01 A	ALSO INCLUDED IN GASKET SET(ENGINE). ID=14.2 OD=19.2
335	--- PLUG; C/BL, SIDE					
	8-97329-617-0		1103-		02 A	(B) M14X16.5
	8-98038-403-0		1103-		01 A	(A) M14X18
351	--- GASKET; COCK, WATER DRAIN					
	1-09630-083-0		1103-		01 A	ALSO INCLUDED IN GASKET SET(ENGINE). ID=10.2 OD=15.2
406	--- PLUG; CRANK CASE					
	5-09605-005-0		1103-		02 A	PT3/8

https://truckmanualshub.com/

0-13 OIL PAN AND LEVEL GAUGE

FIG-NO. OIL PAN

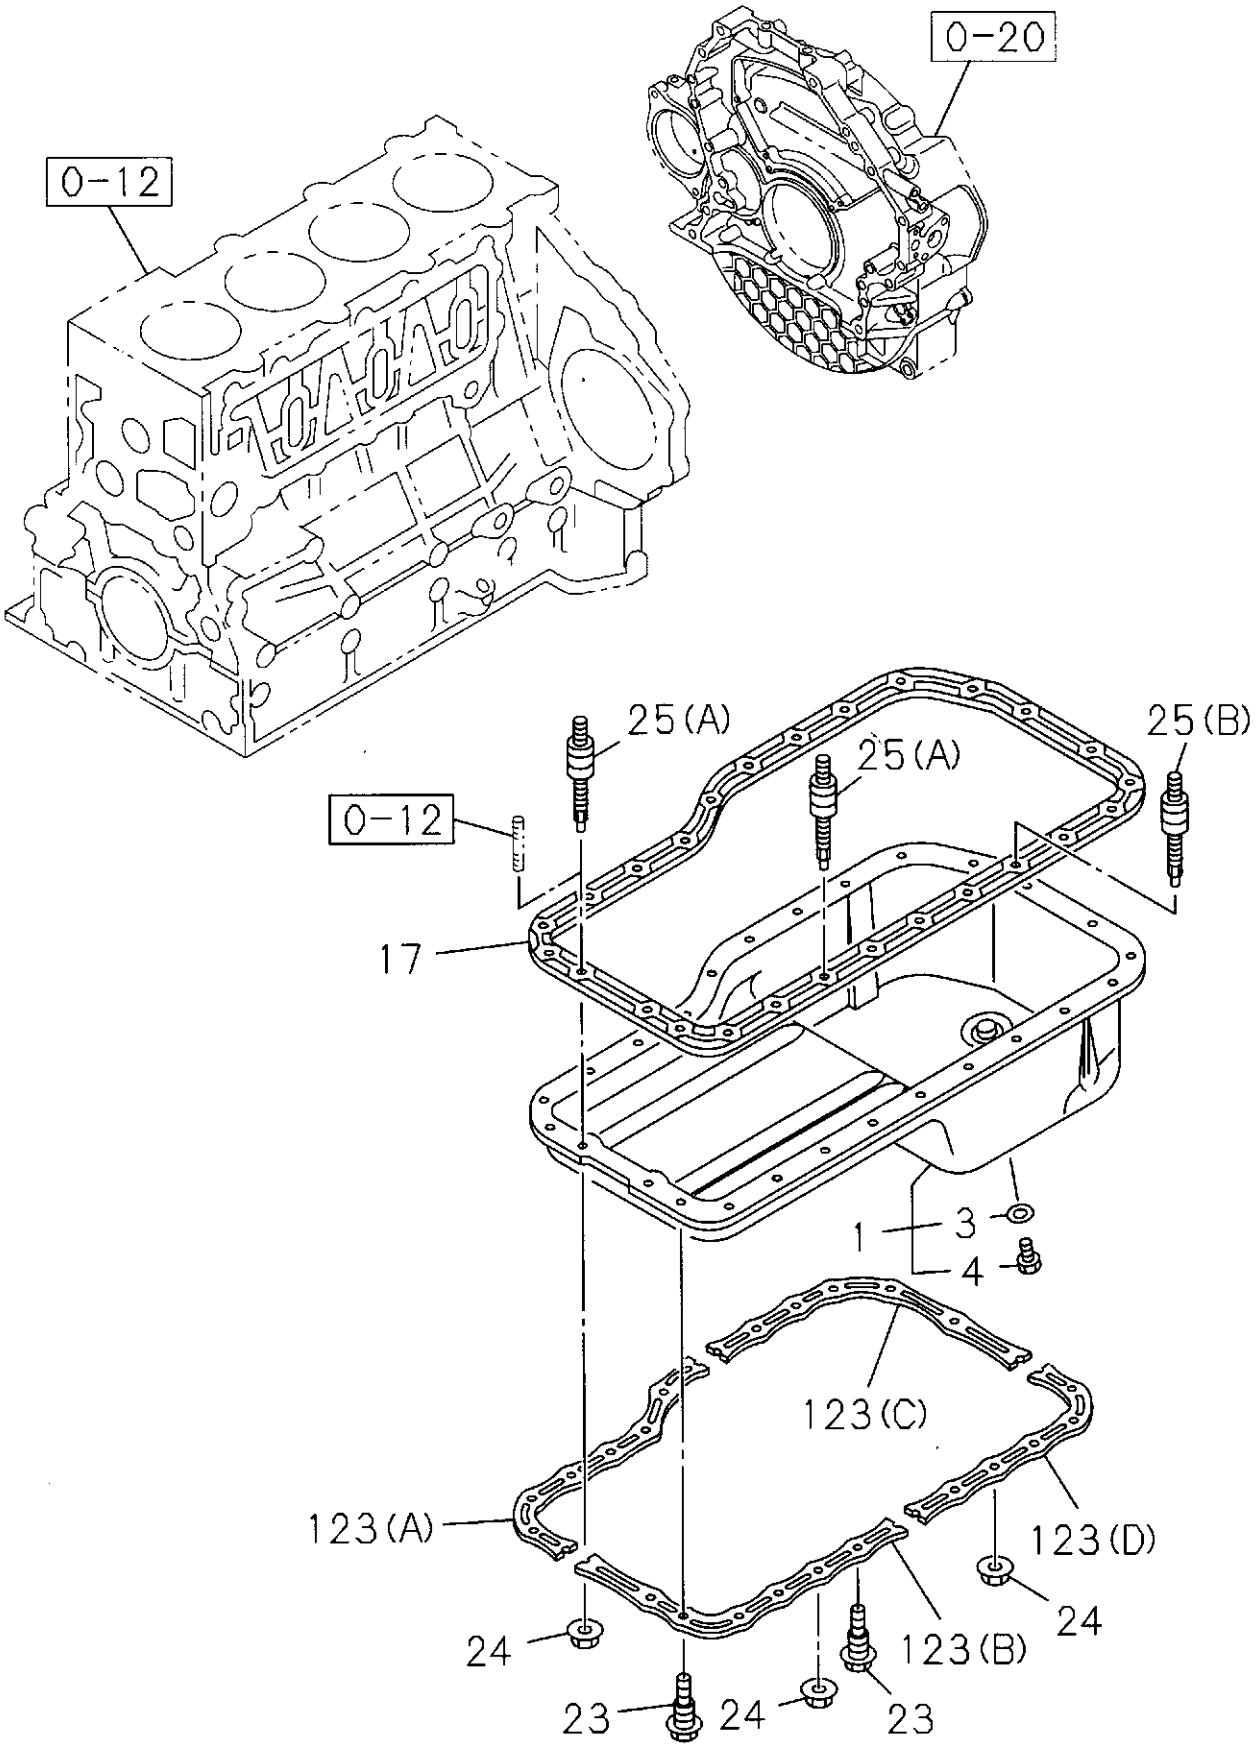


https://truckmanualshub.com/

OIL PAN AND LEVEL GAUGE

OIL GAUGE

FIG-NO.

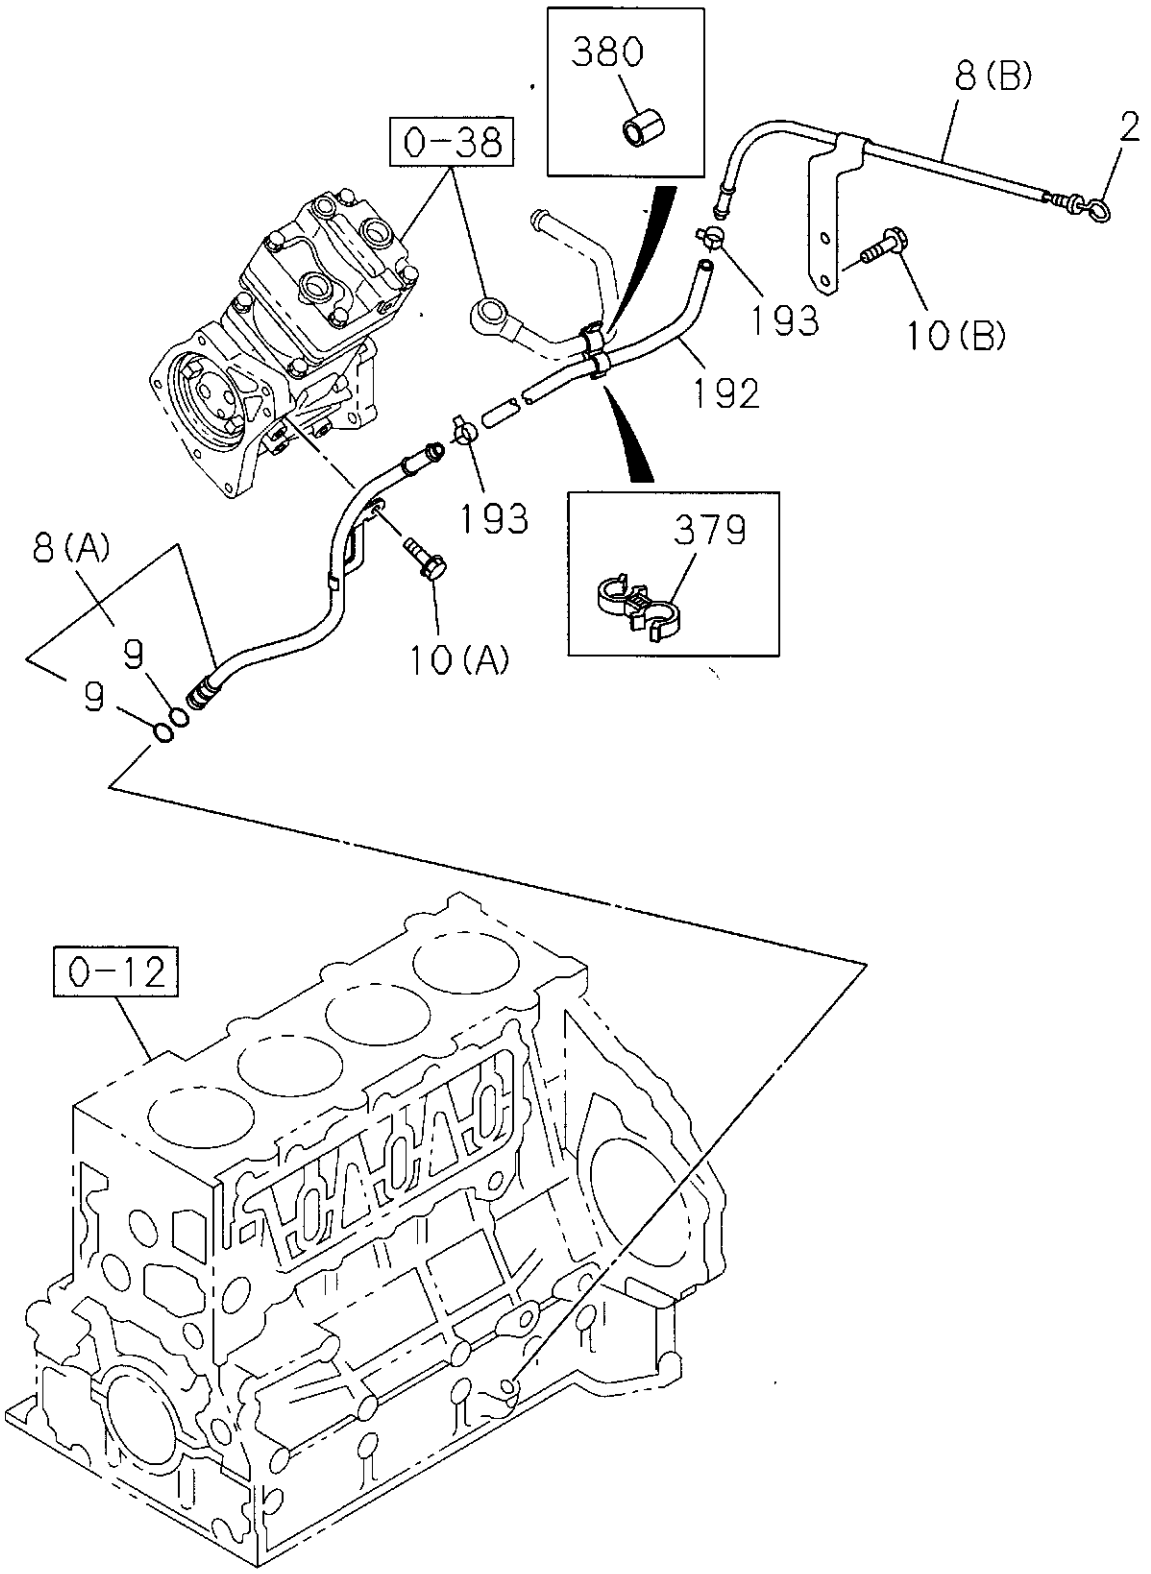

https://truckmanualshub.com/

0-13 OIL PAN AND LEVEL GAUGE

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- PAN ASM; OIL	8-98124-513-0		1103-		01	A
2	--- GAUGE; OIL LEVEL	8-98085-153-0		1103-		01	A
3	-A- GASKET; DRAIN PLUG	8-94158-328-0		1103-		01	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=14.2 OD=24
4	-A- PLUG; DRAIN, OIL	8-94152-613-0		1103-		01	A M14X14 IDN
8	--- TUBE; GUIDE, OIL LEVEL GAUGE	8-98009-115-1		1103-		01	A (A)
		8-98010-328-1		1103-		01	A (B)
9	--- GASKET; GUIDE TUBE, OIL LEVEL GAUGE	1-09623-469-0		1103-		02	A ID=11
10	--- BOLT; GUIDE TUBE	0-28050-612-0		1103-		01	A (A) M6X12 FLANGE
		0-28650-820-0		1103-		02	A (B) M8X20 FLANGE IDN
17	--- GASKET; OIL PAN	8-97364-386-0		1103-		01	A ALSO INCLUDED IN GASKET SET(ENGINE).
23	--- BOLT; OIL PAN	8-97190-390-0		1103-		13	A M8X12.8 W/PL WASHER,RUBBER TUBE
24	--- NUT; OIL PAN	0-91180-108-0		1103-		13	A M8 FLANGE

https://truckmanualshub.com/

OIL PAN AND LEVEL GAUGE

0-13


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
25	--- STUD; OIL PAN					
	8-97190-391-0		1103-		01	A (A) M8X16,M8X17 L=37 W/PL WASHER,RUBBER TUBE
	8-97190-392-0		1103-		09	A (B) M8X16,M8X19 L=39 W/PL WASHER,RUBBER TUBE
123	--- RUBBER; SEAL OIL					
	8-97186-988-0		1103-		01	A (A)
	8-97186-994-0		1103-		01	A (B)
	8-97186-998-0		1103-		01	A (C)
	8-97187-000-0		1103-		01	A (D)
192	--- HOSE; GUIDE TUBE					
	1-09360-978-0		1103-		01	A L=300
193	--- CLIP; HOSE, GUIDE TUBE					
	1-09707-158-0		1103-		02	A ID=17
379	--- CLIP; PIPE TO HOSE					
	8-94323-068-0		1103-		01	A ID=18 & 18
380	--- PROTECTOR; PIPE					
	8-98070-445-0		1103-		01	A


https://truckmanualshub.com/


0-14 CAMSHAFT AND VALVE

FIG-NO. VALVE AND CAMSHAFT

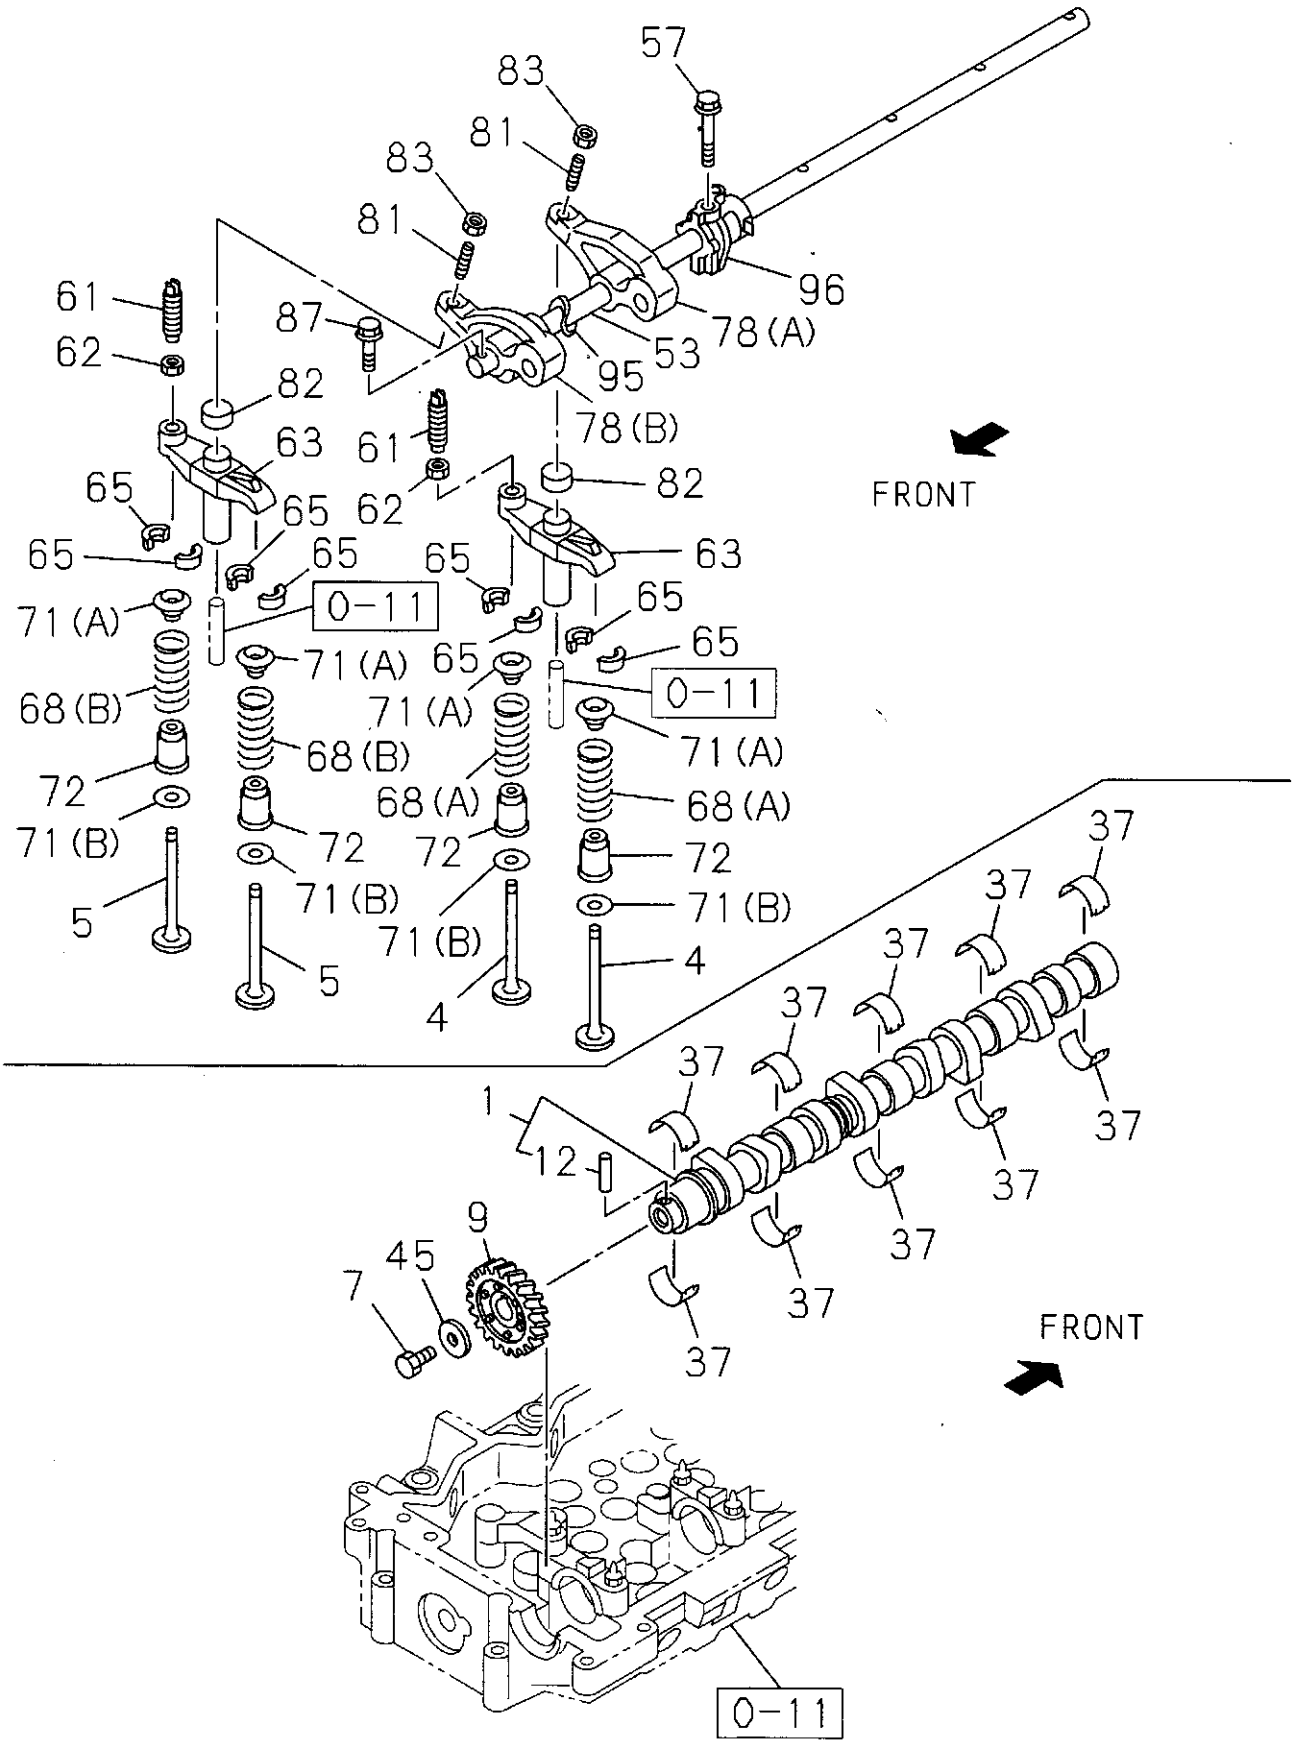

https://truckmanualshub.com/

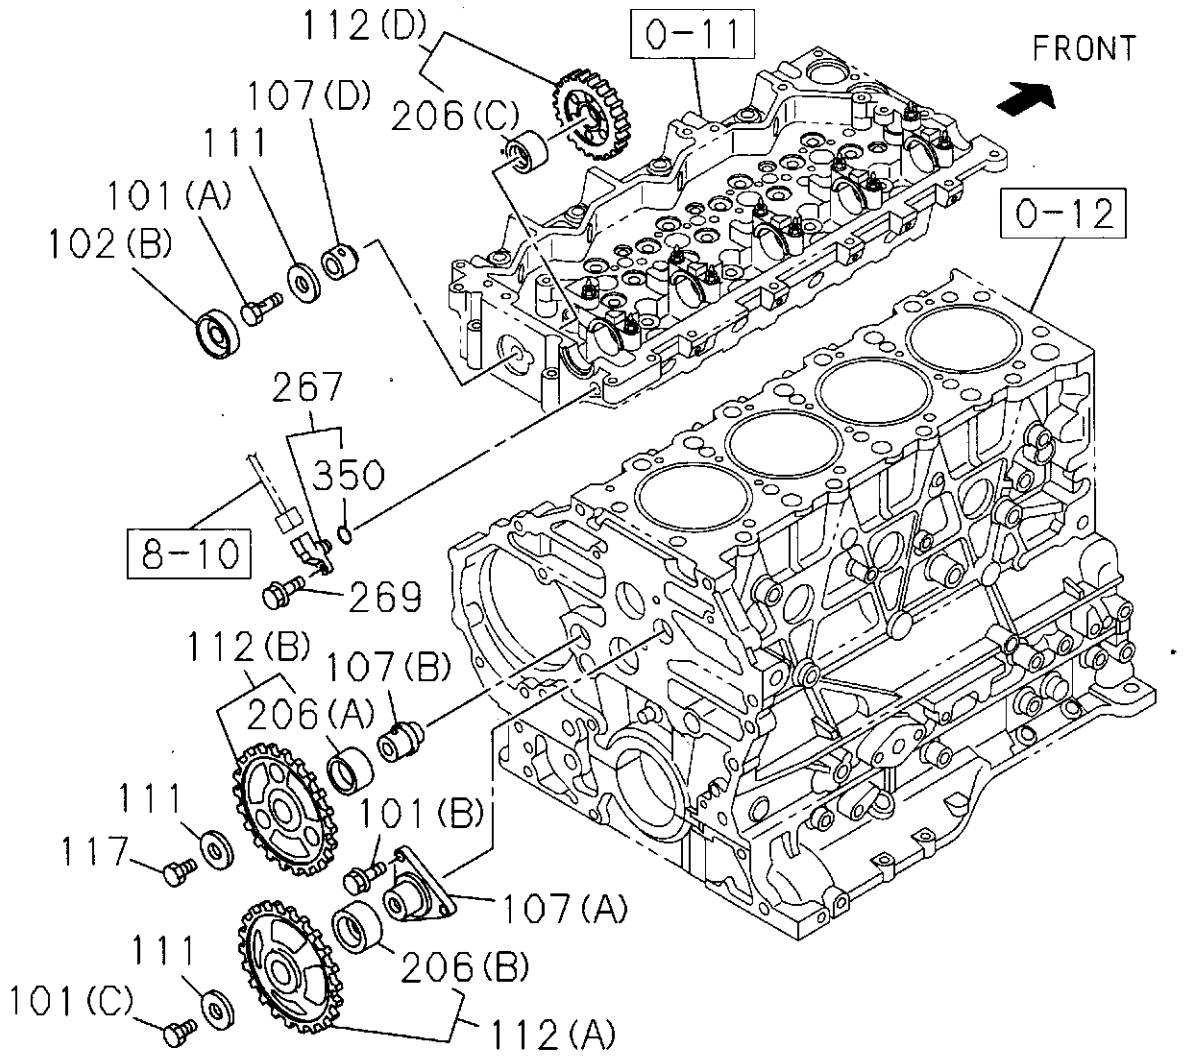

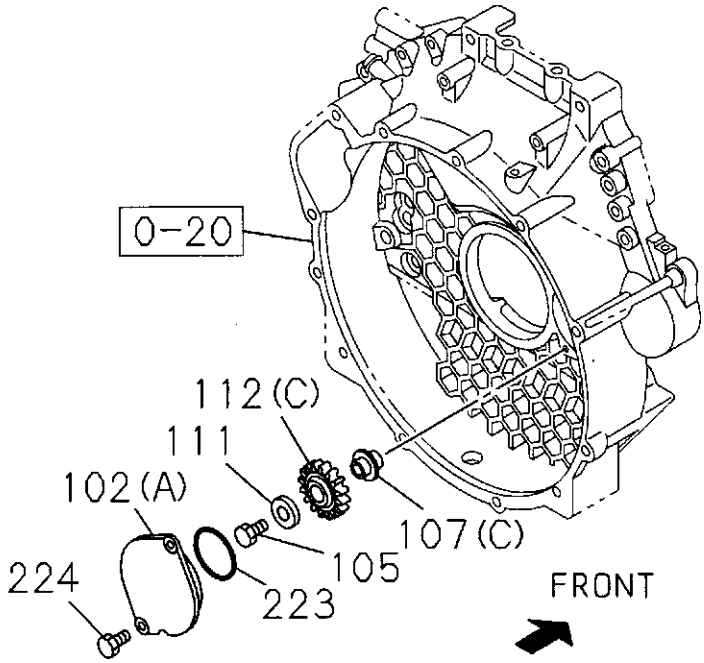

https://truckmanualshub.com/

0-14 CAMSHAFT AND VALVE

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- CAMSHAFT					
	8-97262-166-0		1103-		01	A
4	--- VALVE; INL					
	8-94395-882-2		1103-		08	A
5	--- VALVE; EXH					
	8-97209-876-3		1103-		08	A
7	--- BOLT; CM/SHF GEAR					
	8-94396-439-0		1103-		01	A M14X40
9	--- GEAR; CM/SHF					
	8-98018-935-3		1103-		01	A Z=35
12	--- KEY; CAM GEAR SET					
	8-94399-487-0		1103-		02	A
37	--- METAL; CM/SHF					
	8-97386-189-0		1103-		10	A B=16
45	--- WASHER; GEAR CAM					
	9-09851-850-3		1103-		01	A ID=14.5
53	--- SHAFT; ROCKER ARM					
	8-97389-921-0		1103-		01	A
57	--- BOLT; ROCKER ARM BRKT					
	8-94393-131-0		1103-		03	A M10X62 FLANGE
61	--- SCREW; ADJ, BRIDGE					
	8-94394-803-0		1103-		08	A M8X21
62	--- NUT; ADJ SCREW LK BRIDGE					
	9-09844-574-0		1103-		08	A M8 FLANGE
63	--- BRIDGE					
	8-94392-002-3		1103-		08	A

https://truckmanualshub.com/

CAMSHAFT AND VALVE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
65	--- COLLAR; SPLIT					
	5-12565-004-0		1103-		32	A
68	--- SPRING; VLV					
	8-97210-682-0		1103-		08	A (B) EXHAUST MARK RED
	8-97352-888-0		1103-		08	A (A) INLET MARK BLUE
71	--- SEAT; SPR					
	8-94390-783-2		1103-		16	A (A) UPPER OD=32.8 T=12.75
	8-94391-468-0		1103-		16	A (B) LOWER ID=14.3 T=1.0
72	--- SEAL; VLV GUIDE					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	8-97376-720-0		1103-		16	A
78	--- ARM; ROCKER					
	8-97306-421-3		1103-		04	A (A) INLET
	8-97306-424-3		1103-		04	A (B) EXHAUST
81	--- SCREW; ADJ, ROCKER ARM					
	8-94395-024-0		1103-		08	A M10 L=32
82	--- CAP; ROCKER SHAFT					
	8-94396-015-2		1103-		08	A
83	--- NUT; ADJ SCREW, LK					
	0-91111-510-0		1103-		08	A M10
87	--- BOLT; ROCKER SHAFT					
	0-28050-840-0		1103-		02	A M8X40 FLANGE

https://truckmanualshub.com/

0-14 CAMSHAFT AND VALVE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
95	--- SPRING; ROCKER SHAFT					
	8-94392-999-0		1103-		04	A
96	--- BRACKET; ROCKER ARM SHAFT					
	8-97334-414-0		1103-		03	A
101	--- BOLT; THRUST COLLAR					
	0-28060-816-0		1103-		03	A (B) M8X16 FLANGE
	8-94372-221-1		1103-		01	A (A) M14X36.5
	9-92361-425-0		1103-		01	A (C) M14X25
102	--- COVER; IDLE GEAR					
	8-94334-681-1		1103-		01	A (A)
	8-97096-826-0		1103-		01	A (B) OD=51
105	--- BOLT; IDLE GEAR SHAFT					
	0-16956-460-0		1103-		01	A M14X60
107	--- SHAFT; IDLE GEAR					
	8-94334-682-0		1103-		01	A (C)
	8-97186-398-1		1103-		01	A (D)
	8-97350-021-0		1103-		01	A (A)
	8-98060-780-0		1103-		01	A (B)
111	--- COLLAR; THRUST, IDLE GEAR					
	8-97209-728-2		1103-		04	A ID=14.5 OD=46
112	--- GEAR; IDLE					
	8-97120-005-1		1103-		01	A (C) Z=34

https://truckmanualshub.com/


CAMSHAFT AND VALVE

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)	
112	--- GEAR; IDLE						
	8-97600-586-1		1103-		01	A	(B) Z=72-60-30
	8-97606-767-0		1103-		01	A	(A) Z=61
	8-97606-929-0		1103-		01	A	(D) Z=41
117	--- BOLT; FLANGE						
	8-97113-167-0		1103-		01	A	M14X65 FLANGE
206	--- BUSHING; IDLE GEAR						
	1-12528-028-0		1103-		01	A	(A) AFTER PRESS FITTING, MACHINE IT.
	8-97606-768-0		1103-		01	A	(B) AFTER PRESS FITTING, MACHINE IT.
	8-97606-770-0		1103-		01	A	(C) AFTER PRESS FITTING, MACHINE IT.
223	--- GASKET; COVER, IDLE GEAR						ALSO INCLUDED IN GASKET SET(ENGINE).
	1-09623-423-0		1103-		01	A	ID=105.6
224	--- BOLT; COVER						
	0-28050-816-0		1103-		02	A	M8X16 FLANGE
267	--- SENSOR; CAM ANGLE						
	8-98019-024-0		1103-		01	A	
269	--- BOLT; SENSOR						
	0-28050-612-0		1103-		01	A	M6X12 FLANGE
350	--- GASKET; SENSOR, CAM ANGLE						ALSO INCLUDED IN GASKET SET(ENGINE).
	8-97369-404-0		1103-		01	A	

https://truckmanualshub.com/

0-15 CRANKSHAFT, PISTON AND FLYWHEEL

FIG-NO.

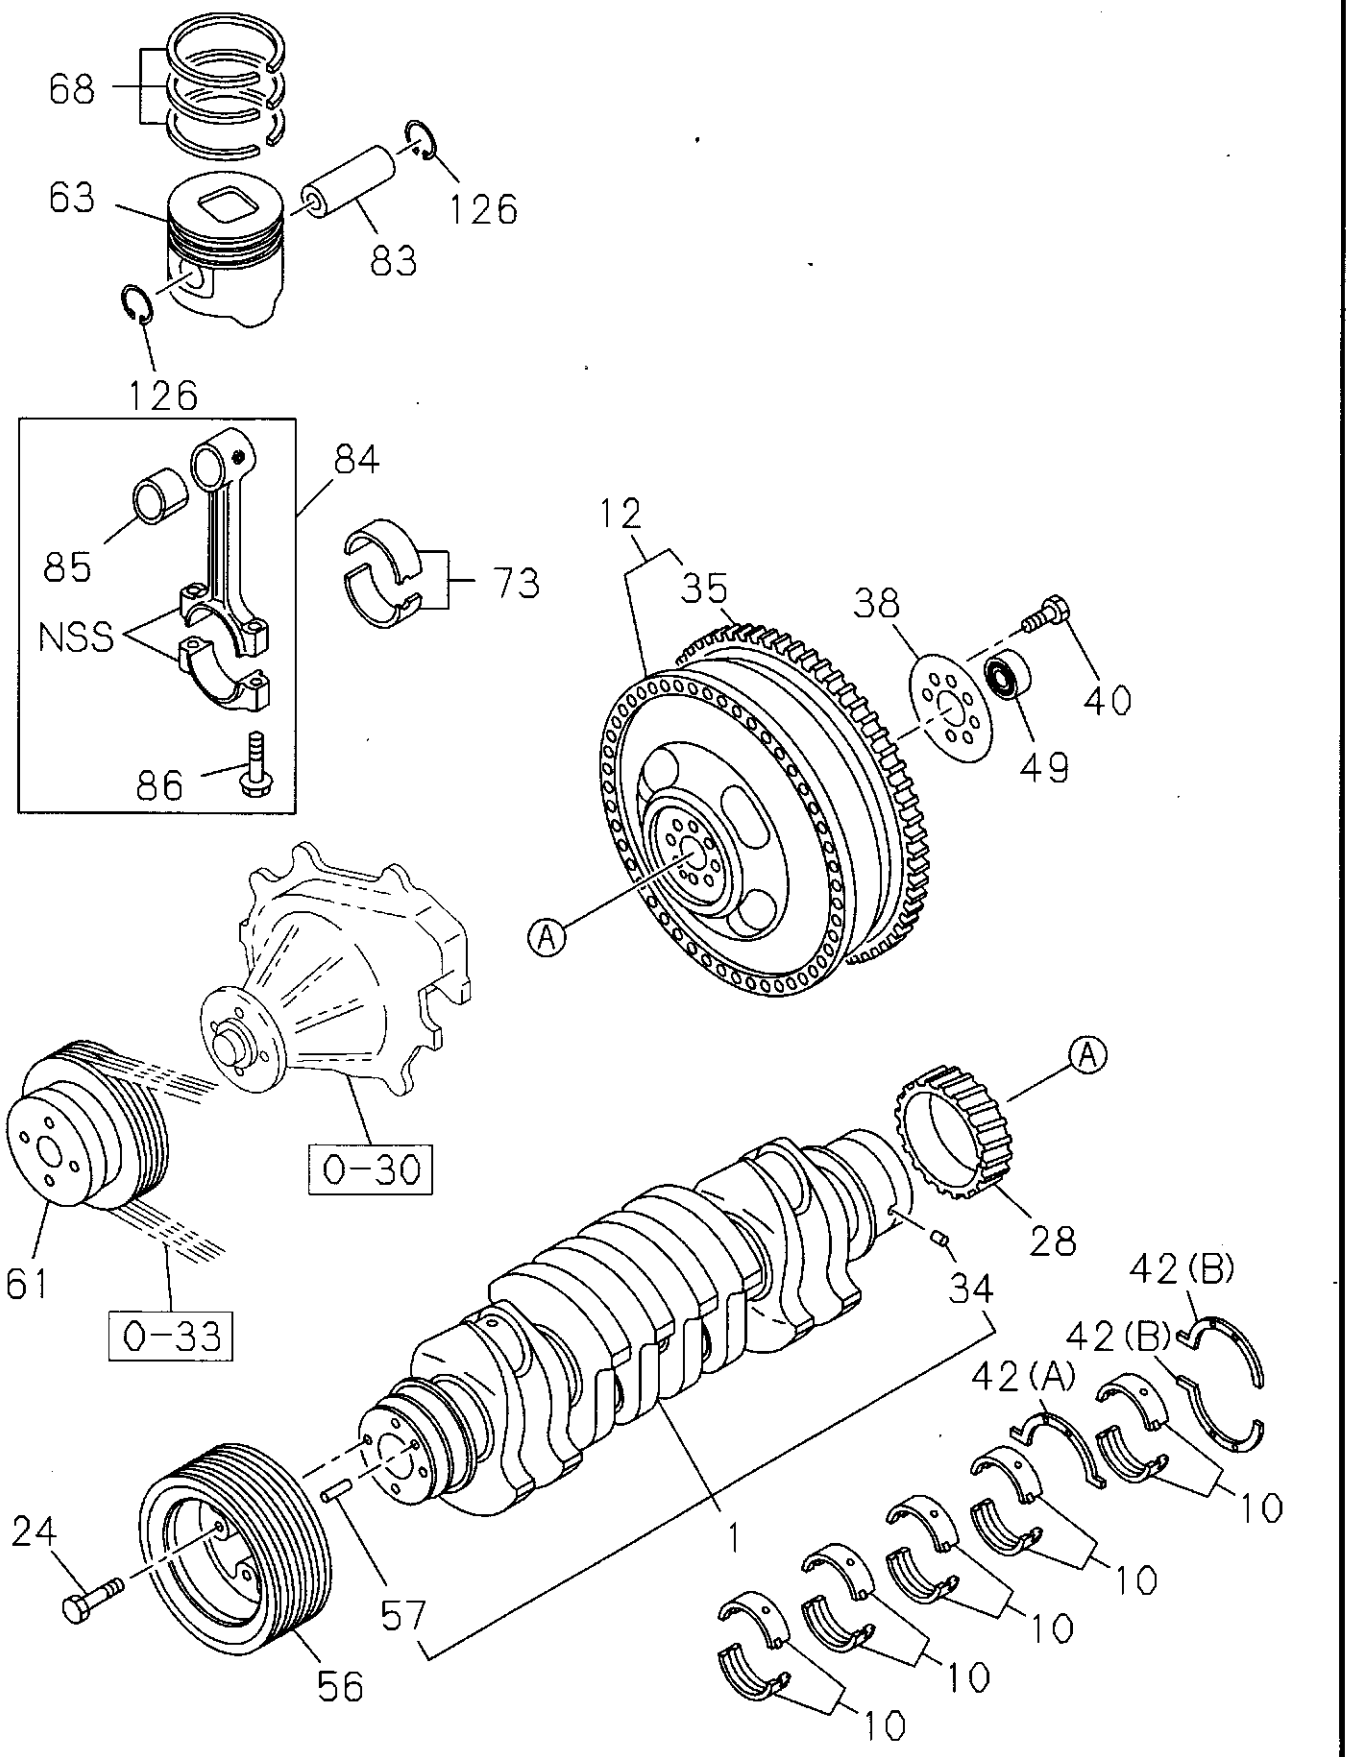

https://truckmanualshub.com/

CRANKSHAFT, PISTON AND FLYWHEEL

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- CRANKSHAFT					
	8-98029-270-0		1103-		01	A
10	--- METAL SET; CRANKSHAFT, STANDARD					
	8-97372-076-1		1103-		05	A BLUE
	8-97372-077-1		1103-		05	A BLACK
	8-97372-078-1		1103-		05	A BROWN
12	--- FLYWHEEL					
	8-98056-355-2		1103-		01	A
24	--- BOLT; DAMPER					
	8-97028-733-0		1103-		04	A M16X42
28	--- GEAR; CR/SHF					
	8-94394-342-4		1103-		01	A Z=42
34	--- PIN; GEAR SETTING					
	9-09878-626-0		1103-		01	A OD=5 L=6
35	--- GEAR; RING					
	8-97375-675-1		1103-		01	A Z=143
38	--- WASHER; FLYWHEEL					
	8-94397-496-1		1103-		01	A ID=55 OD=110
40	--- BOLT; FLYWHEEL					
	8-94334-870-1		1103-		08	A M16X51
42	--- WASHER; THRUST, CR/SHF					
	8-97386-548-0		1103-		01	A (A)
	8-97386-549-0		1103-		02	A (B)

https://truckmanualshub.com/

0-15 CRANKSHAFT, PISTON AND FLYWHEEL


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
	RECOMMEND CLASS / PART NAME					
49	-B- BEARING; PILOT					
	8-97258-239-0		1103-		01	A
56	--- PULLEY; CR/SHF DAMPER					
	8-98004-024-3		1103-		01	A 3-GROOVE
57	--- PIN; PULLEY					
	9-08150-820-0		1103-		02	A OD=8 L=20
61	--- PULLEY; FAN DRIVE					
	8-98003-384-1		1103-		01	A 1-GROOVE
63	--- PISTON					
	8-98041-141-0		1103-		04	A ALSO INCLUDED IN LINER SET. NON GRADE
68	--- RING SET; PISTON, STANDARD					
	8-98040-125-0		1103-		04	A ALSO INCLUDED IN LINER SET.
73	--- METAL SET; CONN ROD, STANDARD					
	8-98055-479-0		1103-		04	A YELLOW
	8-98055-480-0		1103-		04	A GREEN
83	--- PIN; PISTON					
	8-98018-863-1		1103-		04	A ALSO INCLUDED IN LINER SET.
84	--- ROD ASM; CONN					
	8-98018-425-2		1103-		04	A
85	--- BUSHING; CONNROD					
	8-94391-794-1		1103-		04	A ALSO INCLUDED IN LINER SET.
86	--- BOLT; CONNROD					
	8-98091-141-0		1103-		08	A M13X57 FLANGE
126	--- RING; SNAP, PISTON PIN					
	8-98006-828-0		1103-		08	A ALSO INCLUDED IN LINER SET. OD=43.7

https://truckmanualshub.com/

0-20 TIMING GEAR CASE AND FLYWHEEL HOUSING

FIG-NO. FRT COVER

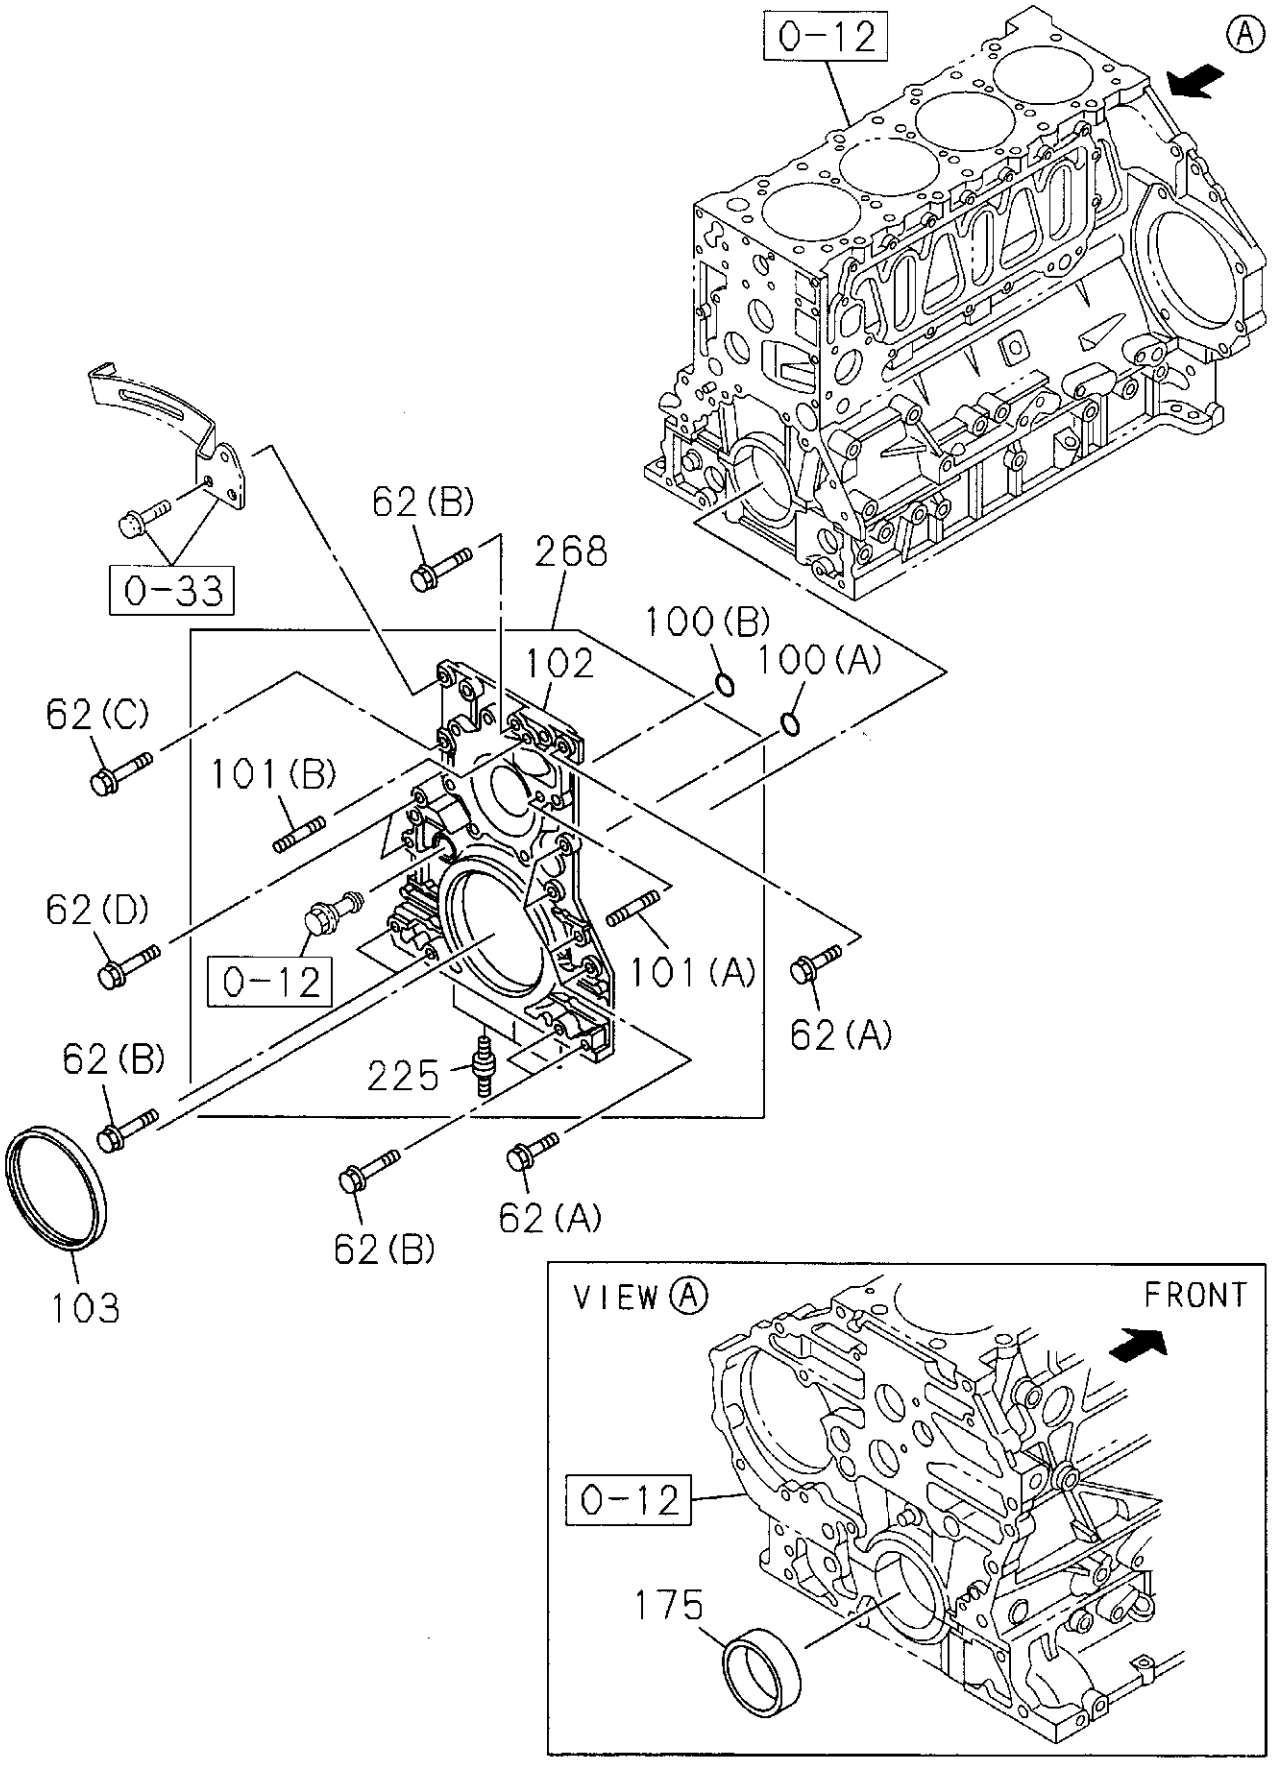


https://truckmanualshub.com/

TIMING GEAR CASE AND FLYWHEEL HOUSING

FLYWHEEL HOUSING NO. 1


FIG-NO.

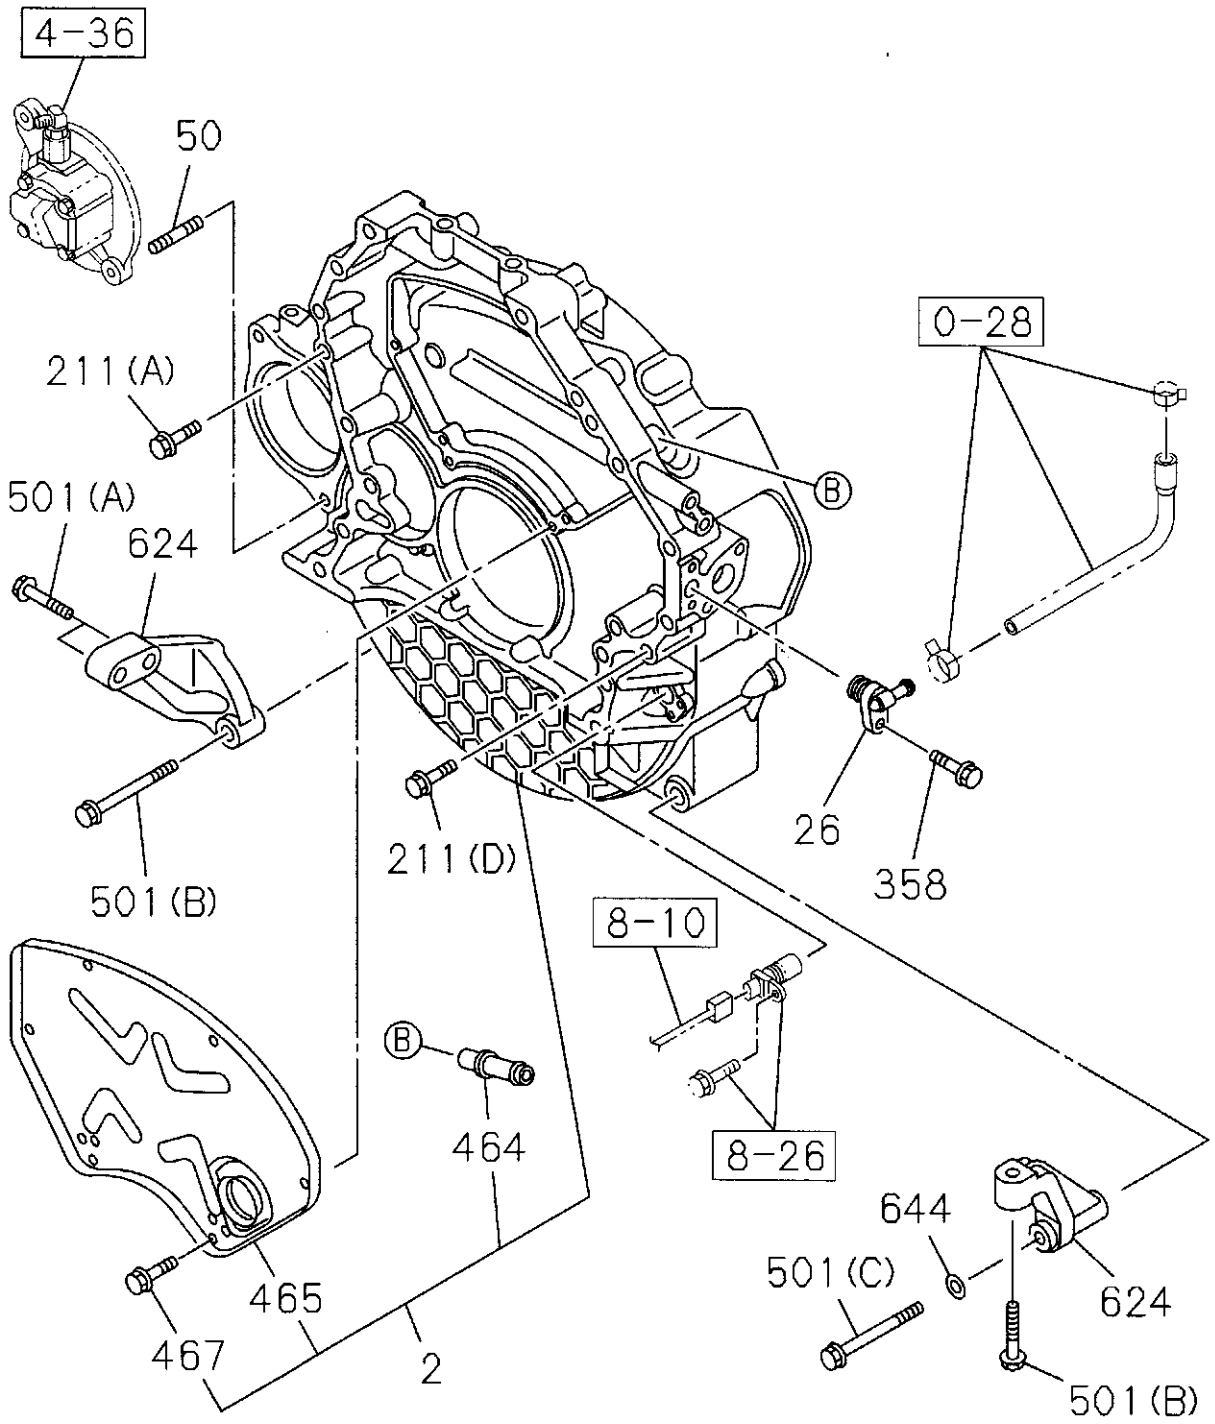

https://truckmanualshub.com/

0-20 TIMING GEAR CASE AND FLYWHEEL HOUSING

FIG-NO. FLYWHEEL HOUSING NO. 2

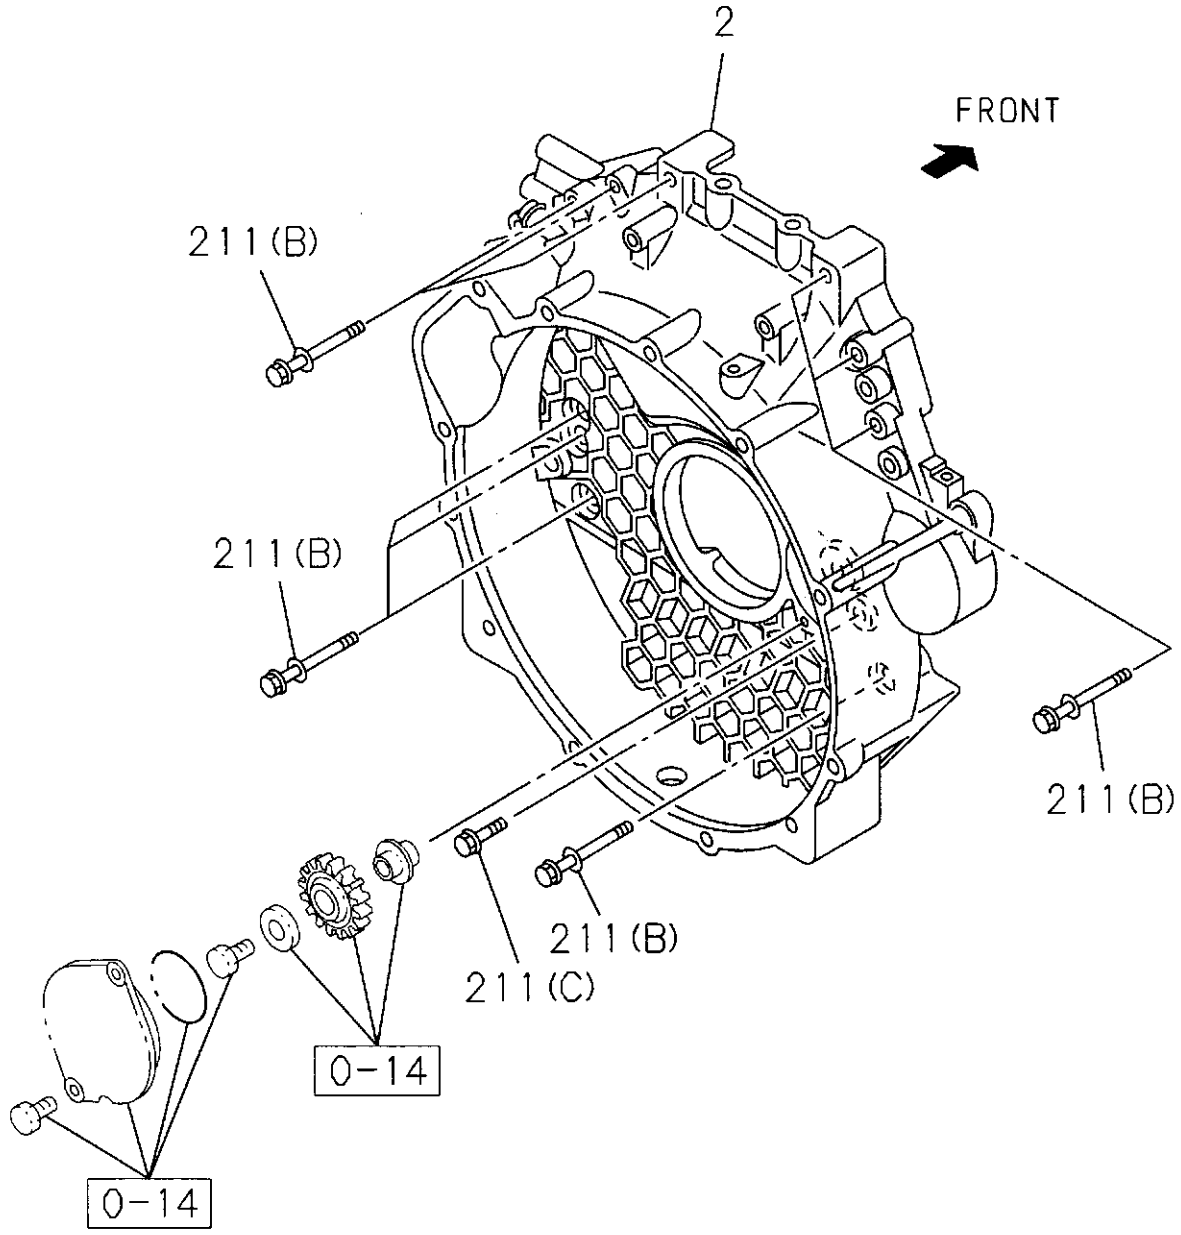

https://truckmanualshub.com/

TIMING GEAR CASE AND FLYWHEEL HOUSING

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
2	--- HOUSING; FLYWHEEL					
	8-98032-562-1		1103-		01	A
26	--- ADAPTER					
	8-97354-819-0		1103-		01	A
50	--- STUD					
	0-49241-025-0		1103-		01	A M10X25 L=48.5
62	--- BOLT; COVER					
	0-28650-825-0		1103-		06	A (A) M8X25 FLANGE IDN
	0-28650-830-0		1103-		01	A (C) M8X30 FLANGE
	0-28650-835-0		1103-		06	A (B) M8X35 FLANGE
	1-09044-072-1		1103-		02	A (D) M8X65 FLANGE
100	--- GASKET; FRT COVER					ALSO INCLUDED IN GASKET SET(ENGINE).
	8-97028-748-1		1103-		01	A (A) ID=35.1
	9-09561-318-0		1103-		01	A (B) ID=17.8
101	--- STUD; WATER PUMP					
	0-41010-818-0		1103-		02	A (B) M8X18 L=30
	8-97028-541-0		1103-		02	A (A) M8X18 L=29
102	--- RETAINER; FRT					
	8-98039-932-2		1103-		01	A
103	-B- SEAL; OIL, CR/SHF, FRT					ALSO INCLUDED IN GASKET SET(ENGINE).
	8-97329-780-0		1103-		01	A

https://truckmanualshub.com/

0-20 TIMING GEAR CASE AND FLYWHEEL HOUSING

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)	
175	-B- SEAL; OIL, CR/SHF, RR						
	8-97602-379-0		1103-		01	A	ALSO INCLUDED IN GASKET SET(ENGINE).
211	--- BOLT; HSG						
	0-28151-050-0		1103-		01	A	(D) M10X50 FLANGE
	0-28751-040-0		1103-		01	A	(A) M10X40 FLANGE
	8-97114-779-0		1103-1103		11	A	(B) M12X70 FLANGE, W/PL WASHER
	8-98179-087-1		1103-		11	A	(B) M12X70 FLANGE, W/PL WASHER
	8-97135-419-0		1103-		01	A	(C) M12X30 FLANGE
225	--- STUD; OIL PAN						
	8-97190-392-0		1103-		03	A	M8X16,M8X19 L=39 W/PL WASHER,RUBBER TUBE
268	--- COVER; FRT						
	8-98039-931-1		1103-		01	A	
358	--- BOLT; ADAPTER						
	0-28050-616-0		1103-		01	A	M6X16 FLANGE IDN
464	--- PIPE; PCV, FLYWHEEL HSG						
	8-94373-246-3		1103-		01	A	
465	--- PLATE; FLYWHEEL HSG						
	8-97388-568-1		1103-		01	A	
467	--- BOLT; PLATE						
	8-98030-649-0		1103-		06	A	M6X10
501	--- BOLT; STIFFENER						
	0-28151-250-0		1103-		02	A	(B) M12X50 FLANGE
	0-28151-290-0		1103-	L	01	A	(C)
	(CONTINUE)						

https://truckmanualshub.com/


TIMING GEAR CASE AND FLYWHEEL HOUSING

KEY NO.	RECOMMEND CLASS／PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
	(CONTINUED)					
501	--- BOLT; STIFFENER					
	0-28151-290-0					M12X90 FLANGE
	0-28151-040-0		1103-	R	02	A (A) M10X40 FLANGE
624	--- STIFFENER					
	8-97380-613-1		1103-	L	01	A
	8-97380-614-1		1103-	R	01	A
644	--- WASHER; STIFFENER					
	8-94279-627-0		1103-		01	A ID=12.5 OD=22

https://truckmanualshub.com/

0-22 ENGINE MOUNTING

FIG-NO.

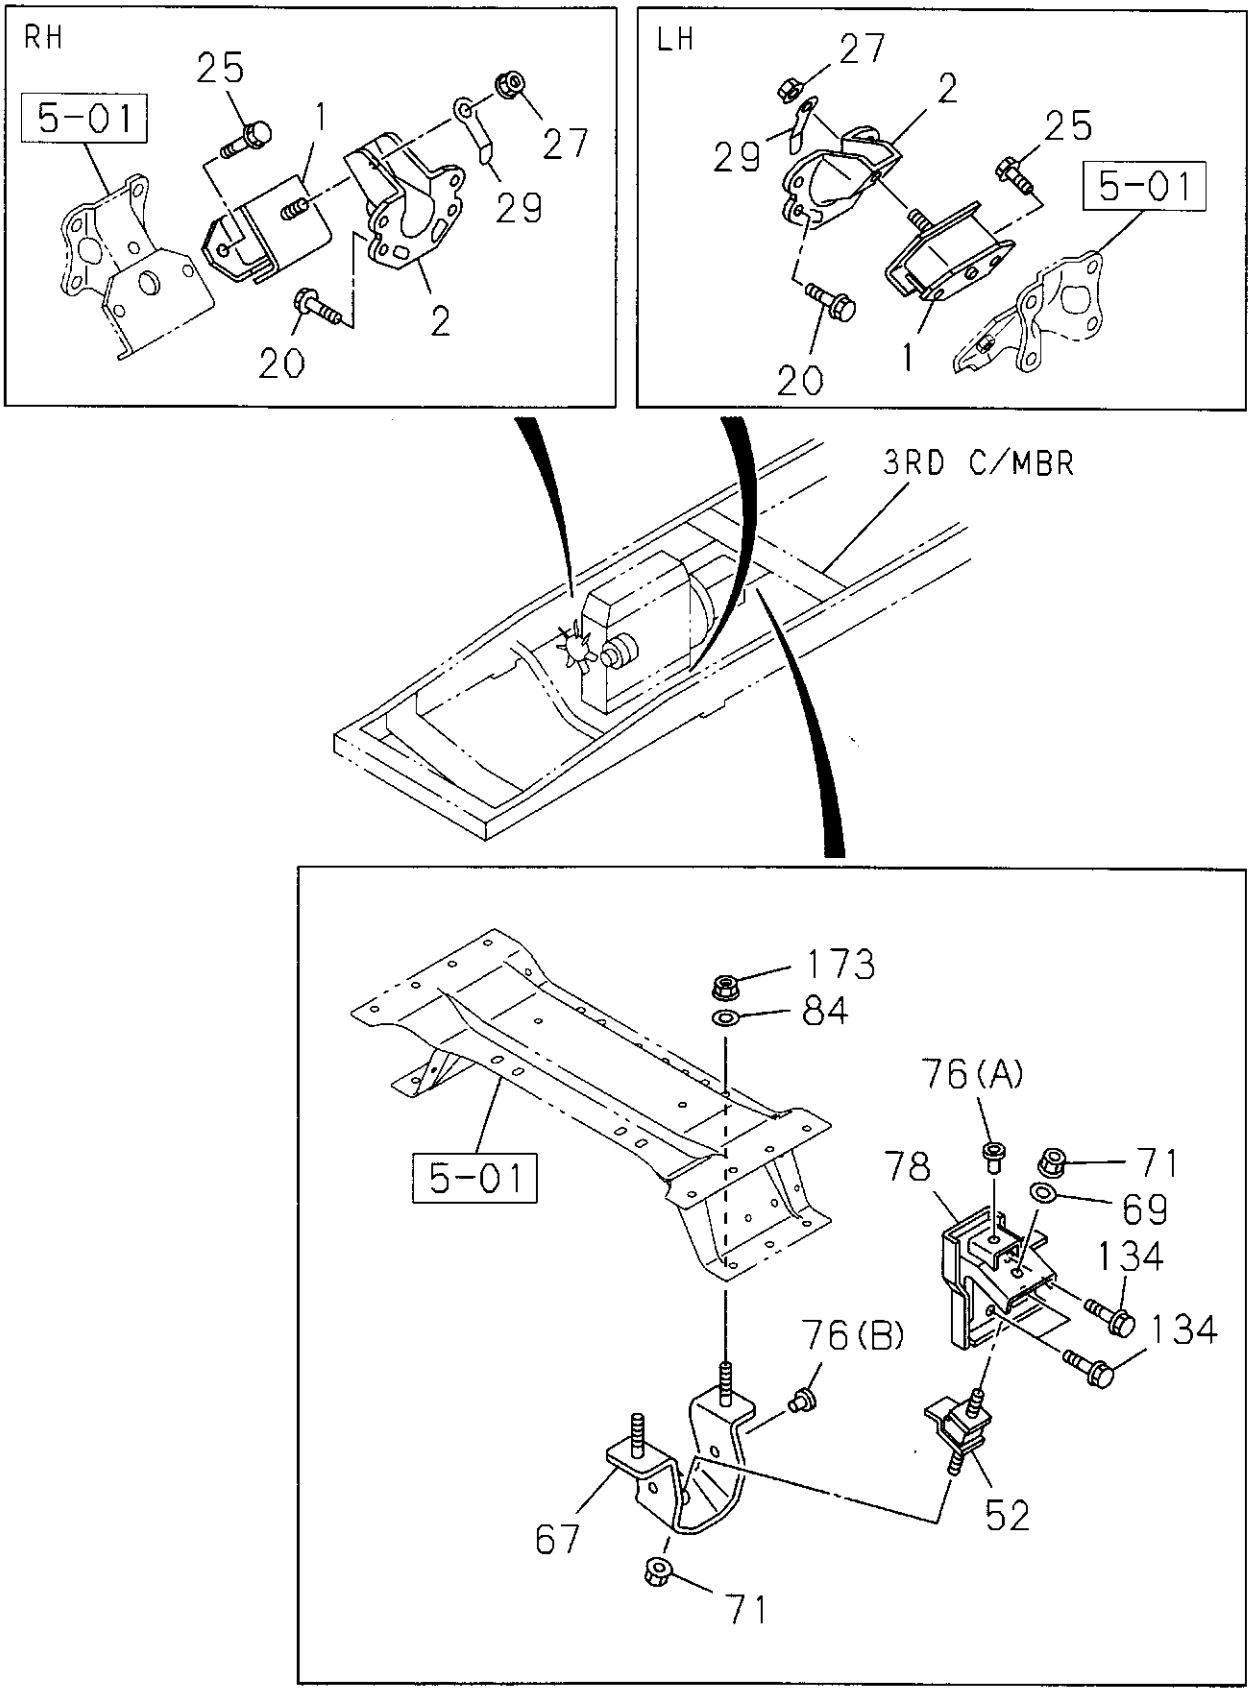

https://truckmanualshub.com/

ENGINE MOUNTING

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- RUBBER; ENG FOOT, FRT					
	1-53215-184-0		1103-		02	A
2	--- FOOT; ENG					
	8-97376-076-1		1103-		02	A
20	--- BOLT; ENG FOOT					
	0-28161-030-0		1103-		08	A M10X30 FLANGE
25	--- BOLT; CUSHION RUBBER TO BRKT					
	0-28651-235-0		1103-		04	A M12X35 FLANGE
27	--- NUT; CUSHION RUBBER TO ENG FOOT					
	0-91180-212-0		1103-		02	A M12 FLANGE
29	--- PLATE; LK, CUSHION RUBBER, FRT					
	8-98010-312-0		1103-		02	A
52	--- RUBBER; CUSHION, ENG MTG, RR					
	8-97039-277-0		1103-		02	A
67	--- BRACKET; SUPPORT, ENG MTG, RR					
	8-98013-942-0		1103-		02	A
69	--- WASHER; PL, SUPPORT RUBBER TO BRKT					
	1-09503-045-0		1103-		03	A ID=10.5 OD=22 T=4
71	--- NUT; SUPPORT RUBBER TO BRKT					
	0-91180-110-0		1103-		04	A M10 FLANGE
76	--- STOPPER; ENG MTG RUBBER					
	8-94111-904-0		1103-		02	A (A)
	8-97039-947-1		1103-		04	A (B)
78	--- BRACKET; ENG MTG, RR					
	8-98013-945-2		1103-	L	01	A
	8-98013-944-0		1103-	R	01	A

https://truckmanualshub.com/

0-22 ENGINE MOUNTING


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
84	--- WASHER; PL, ENG MTG RR TO FRAME					
	0-91614-810-0		1103-		04	A ID=10.5 OD=32
134	--- BOLT; SUPPORT BRKT					
	0-28751-225-0		1103-		06	A M12X25 FLANGE
173	--- NUT; ENG MTG RR TO FRAME					
	0-91180-210-0		1103-		04	A M10 FLANGE

https://truckmanualshub.com/

0-25 INLET MANIFOLD


FIG-NO. NO. 1

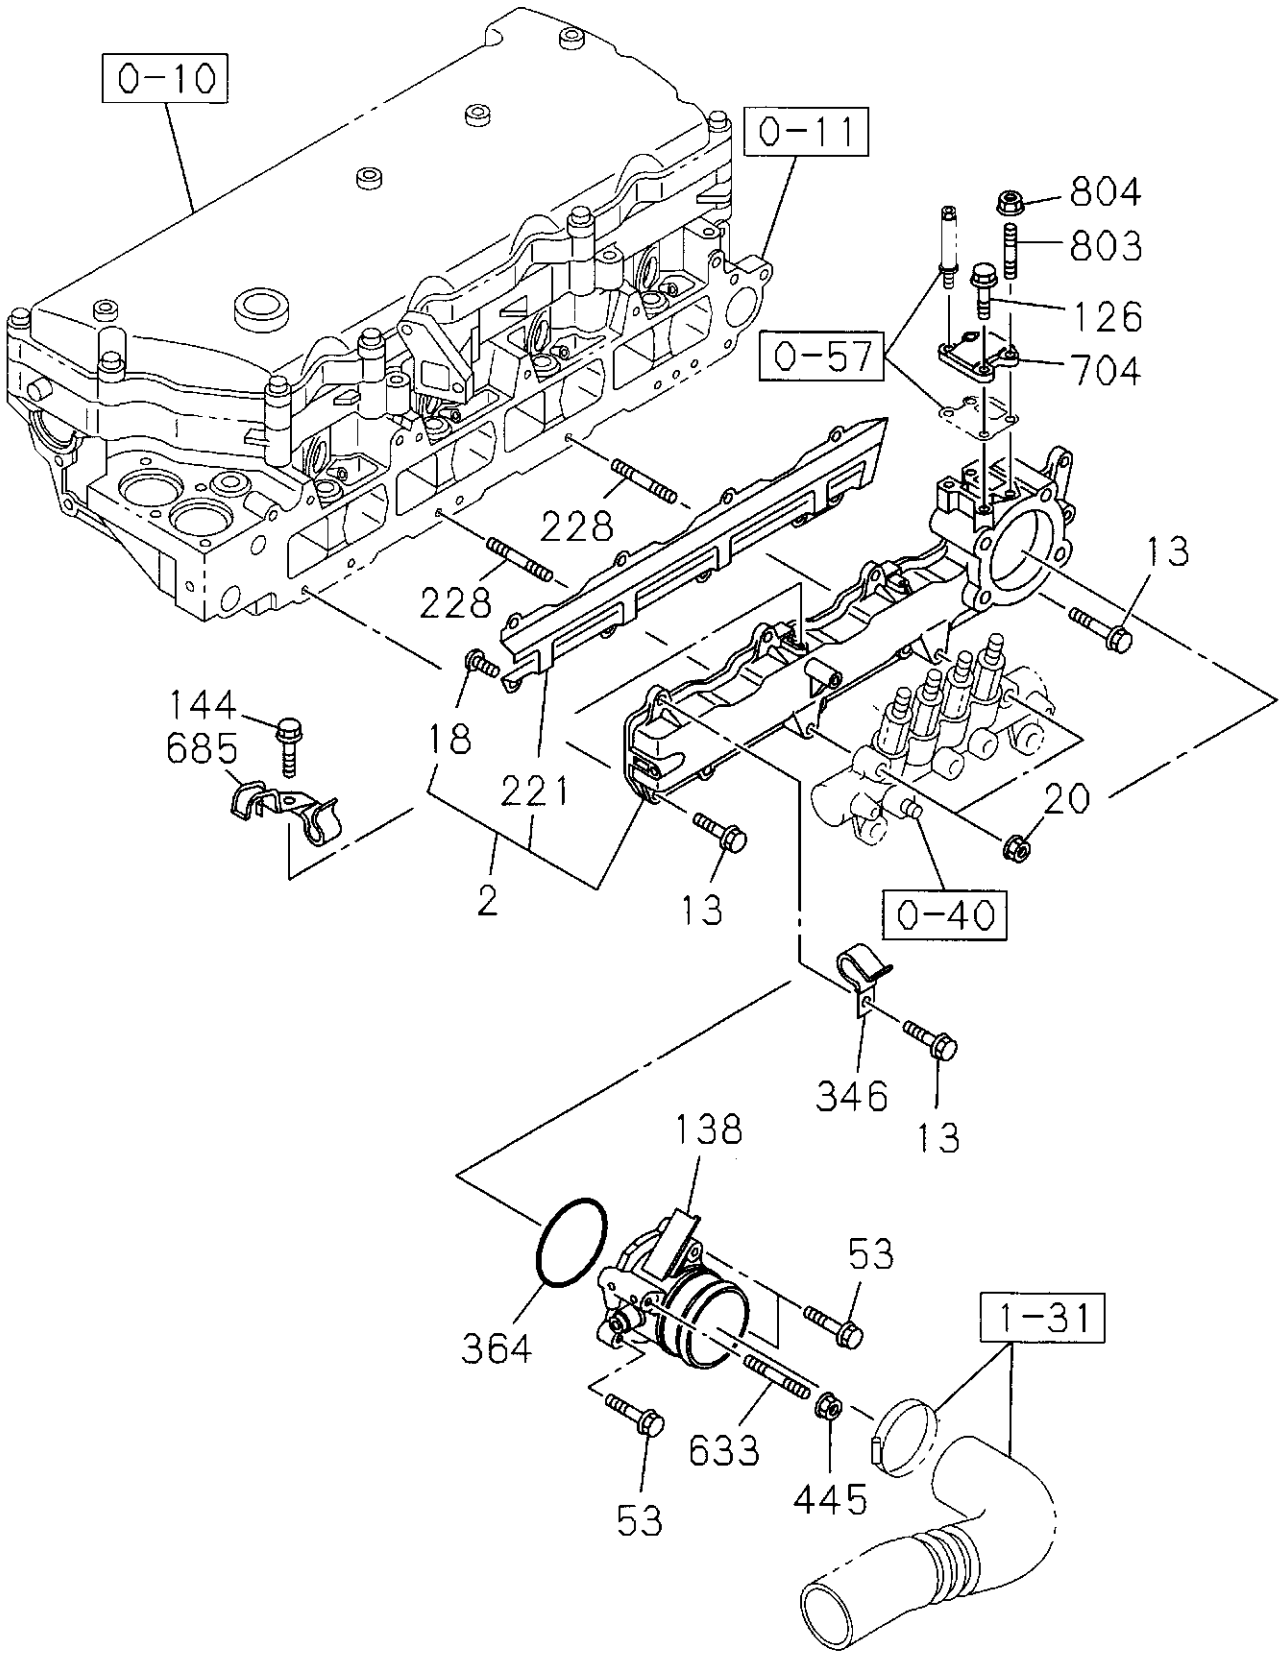

https://truckmanualshub.com/

INLET MANIFOLD

NO. 2

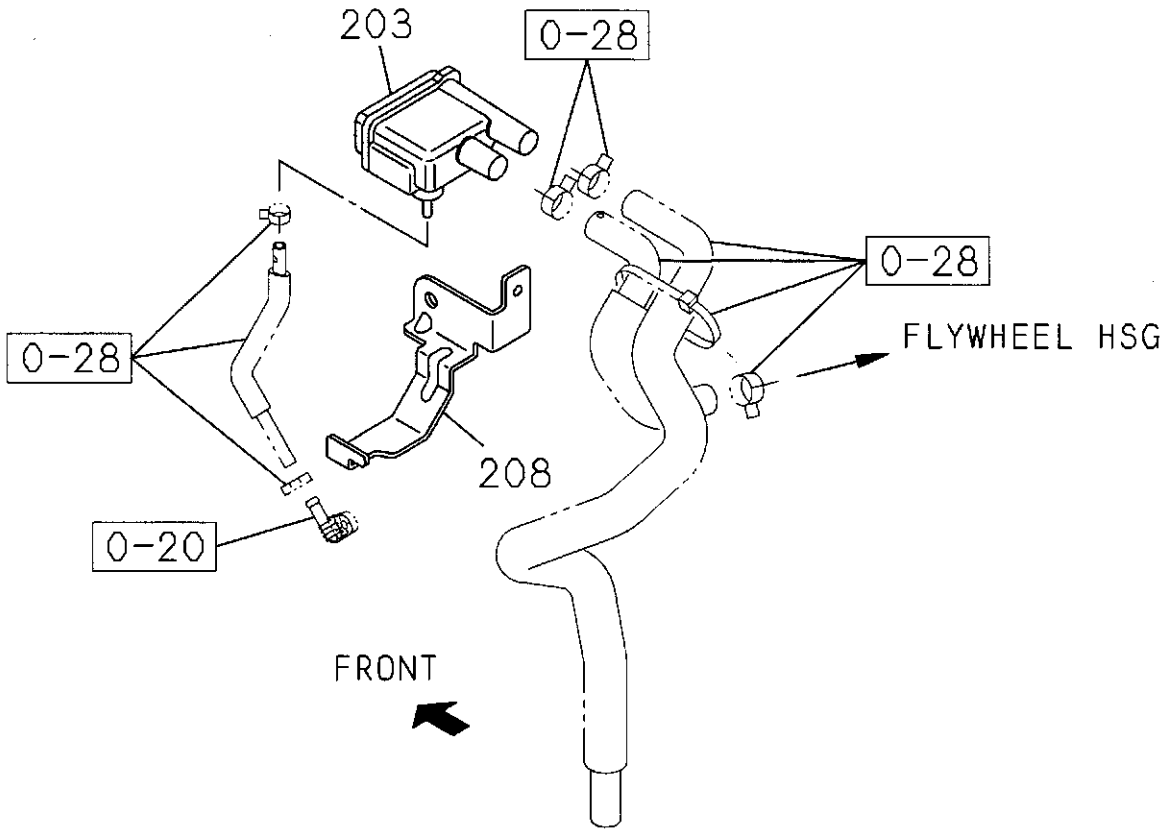

https://truckmanualshub.com/

0-25 INLET MANIFOLD

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A 4HK1-TCC ENG(RDV)
2	--- COVER; INL						
		8-97387-038-0		1103-		01	A
13	--- BOLT; INL MANIF						
		0-28050-830-0		1103-		09	A M8X30 FLANGE
		0-28050-880-0		1103-		01	A M8X80 FLANGE
18	--- SCREW; PLATE, INL CVR						
		9-03490-610-0		1103-		09	A M6X10
20	--- NUT; INL MANIF						
		0-91180-108-0		1103-		02	A M8 FLANGE
53	--- BOLT; INL PIPE						
		0-28650-830-0		1103-		03	A M8X30 FLANGE
126	--- BOLT; COVER						
		0-28650-825-0		1103-		01	A M8X25 FLANGE IDN
138	--- PIPE; INL						
		8-98101-477-0		1103-		01	A
144	--- BOLT; BRKT FIX						
		0-28050-812-0		1103-		01	A M8X12 FLANGE
203	--- TANK; CATCH, PRESSURE CONT VLV						
		8-97088-685-1		1103-		01	A
208	--- BRACKET; CATCH TANK, OIL						
		8-98075-767-0		1103-		01	A
221	--- PLATE; INL COVER						
		8-97379-202-0		1103-		01	A
228	--- STUD; INL COVER						
		8-97111-477-0		1103-		02	A M8X117 L=128

https://truckmanualshub.com/


INLET MANIFOLD

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	4HK1-TCC ENG(RDV)
346	--- CLIP; ENG HARNESS						
	8-97367-984-1		1103-		01	A	ID=12
364	--- GASKET						
	8-97363-723-0		1103-		01	A	ALSO INCLUDED IN GASKET SET(ENGINE).
445	--- NUT; THROTTLE BODY TO MANIF						
	0-91180-108-0		1103-		01	A	M8 FLANGE
633	--- STUD; THROTTLE BODY						
	9-09830-212-0		1103-		01	A	M8X71 L=83
685	--- BRACKET; HARNESS						
	8-97331-921-1		1103-		01	A	
704	--- COVER						
	8-98062-651-1		1103-		01	A	
803	--- STUD; COVER						
	0-41010-820-0		1103-		02	A	M8X20 L=32
804	--- NUT; COVER						
	0-91180-108-0		1103-		02	A	M8 FLANGE

https://truckmanualshub.com/

0-27 EXHAUST MANIFOLD

FIG-NO.

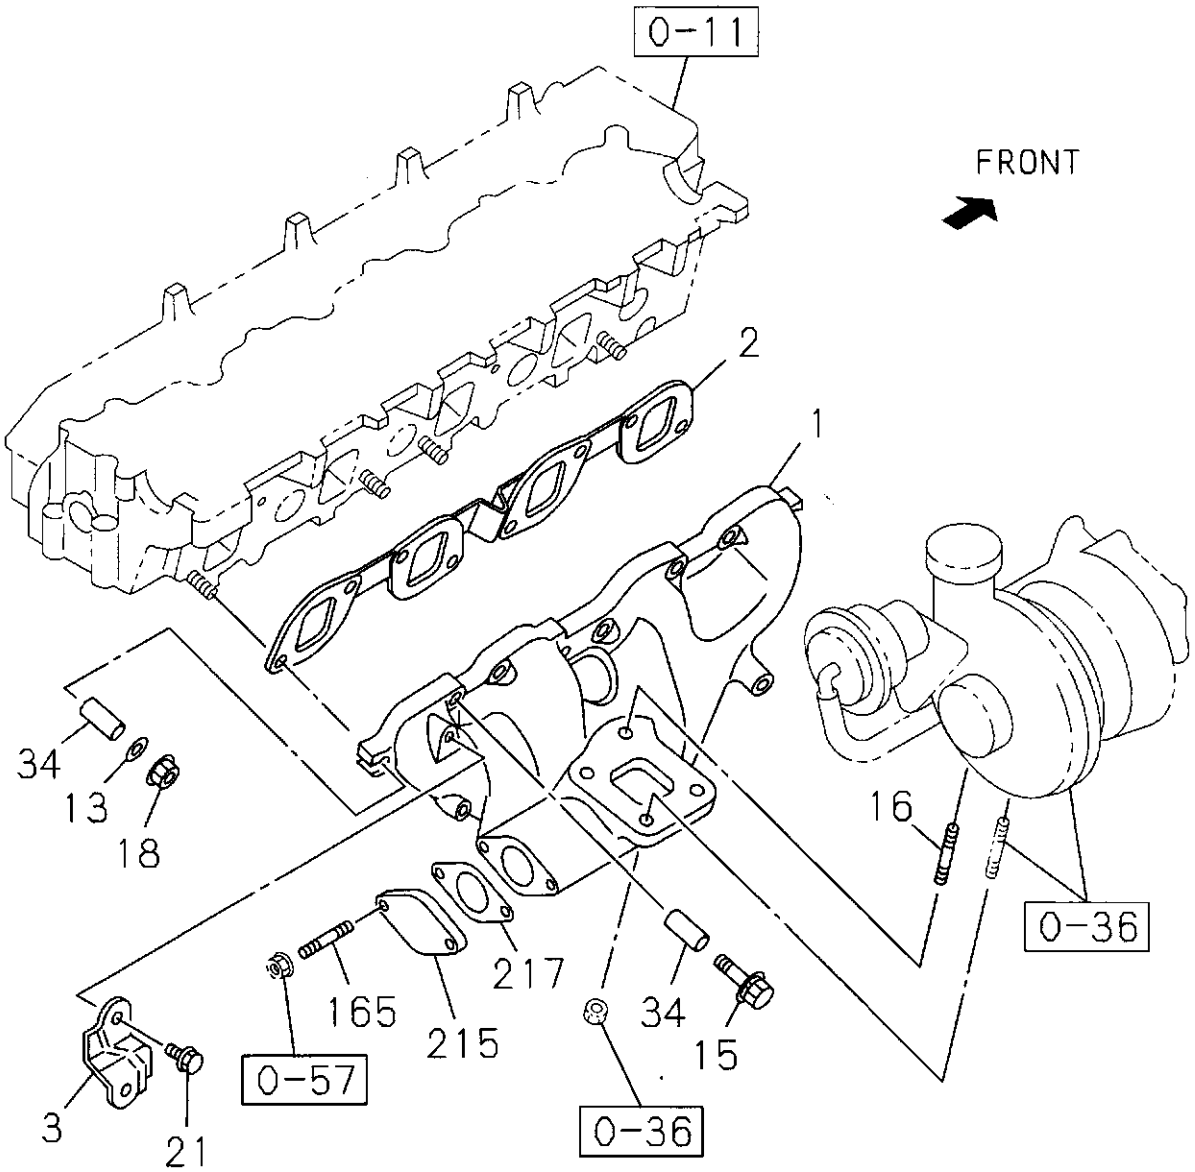

https://truckmanualshub.com/

EXHAUST MANIFOLD

0-27


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- MANIFOLD; EXHAUST					
	8-98027-968-1		1103-		01	A
2	--- GASKET; EXH MANIF TO HD					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	8-97146-499-1		1103-		01	A
3	--- PROTECTOR; HEAT, EXH MANIF					
	8-97039-753-1		1103-		01	A
13	--- WASHER; LK, EXH MANIF					
	1-09556-015-0		1103-		02	A T=2.2
15	--- BOLT; EXH MANIF					
	8-97061-543-0		1103-		06	A M10X60
16	--- STUD; EXH PIPE TO MANIF					
	9-04731-025-0		1103-		02	A M10X25 L=40
18	--- NUT; EXH MANIF					
	0-91110-510-0		1103-		02	A M10
21	--- BOLT; HEAT PROTECTOR					
	8-97108-669-0		1103-		02	A M6X12 FLANGE
34	--- COLLAR; DIST, EXH MANIF					
	8-97250-073-1		1103-		08	A L=28
165	--- STUD; EGR PIPE					
	8-94105-162-1		1103-		02	A M8X45 L=57
215	--- PLATE; BOSS, EXH MANIF					
	8-98170-965-0		1103-		01	A
217	--- GASKET; EXH MANIF TO PLATE					
	8-94340-670-0		1103-		01	A

https://truckmanualshub.com/

0-28 VENTILATION SYSTEM

FIG-NO.

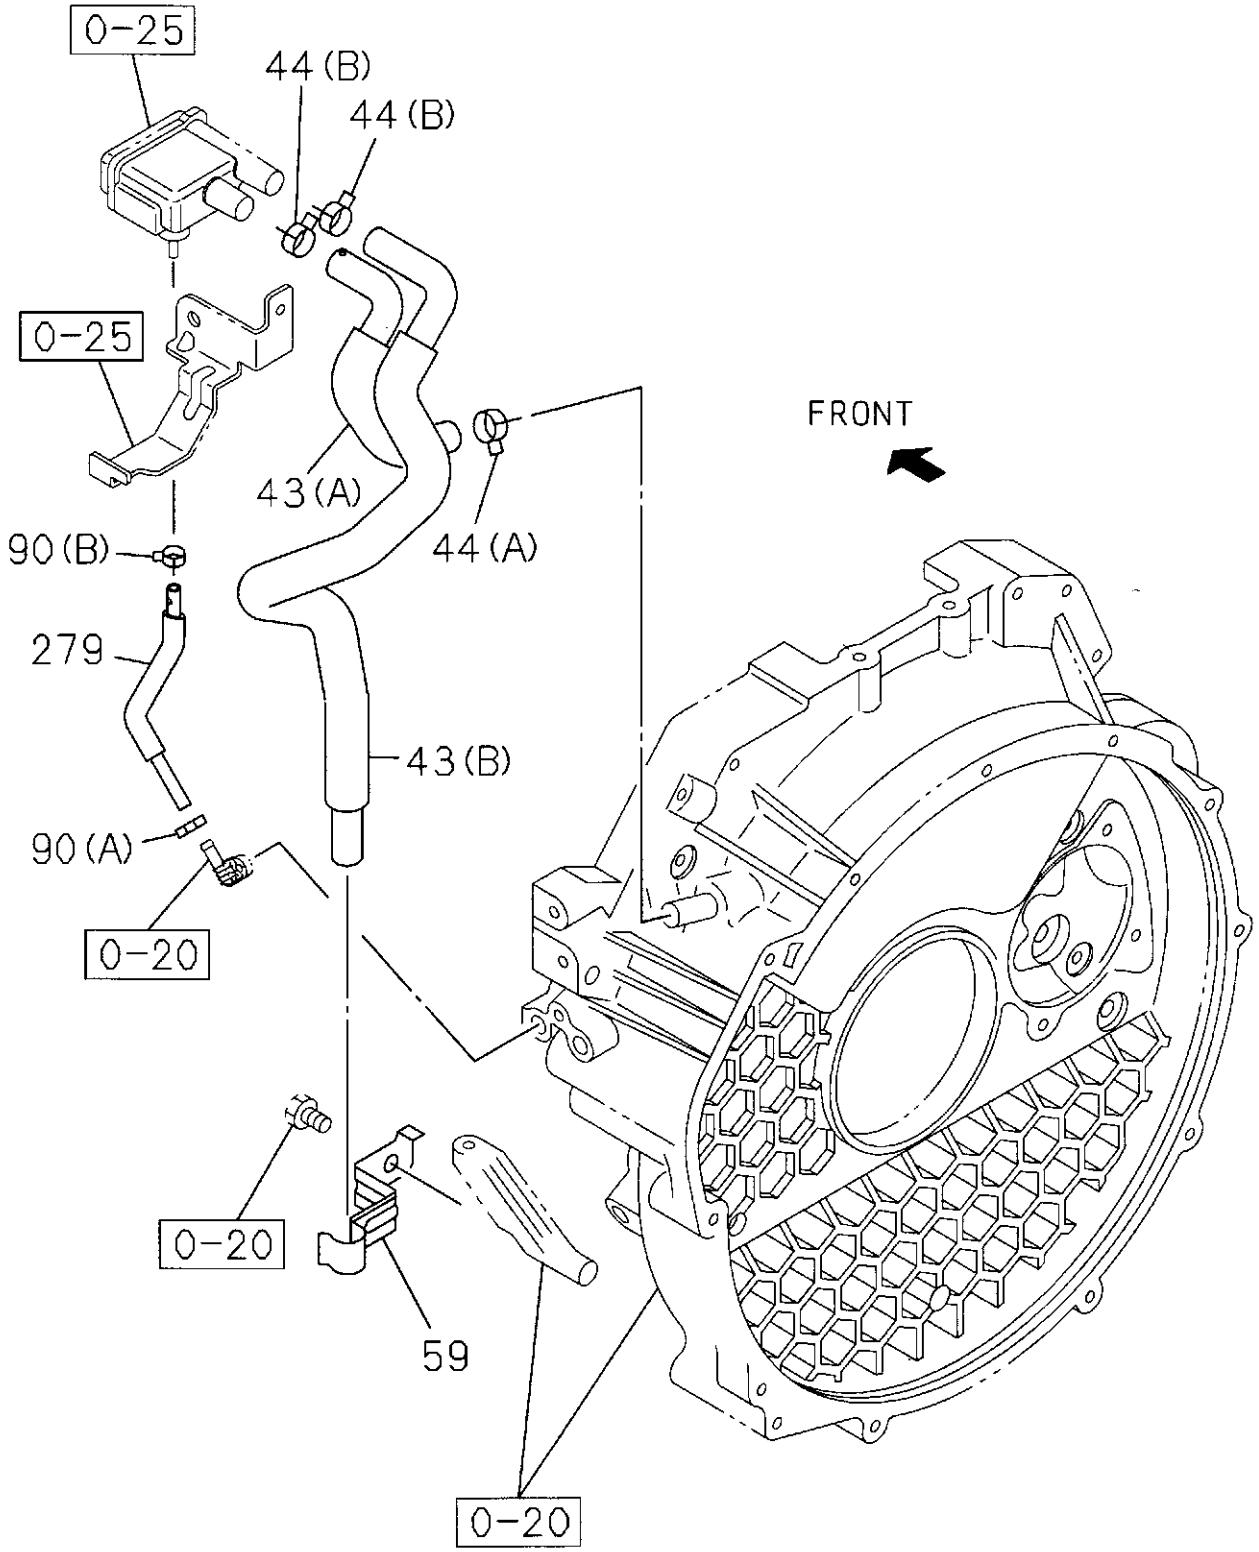


https://truckmanualshub.com/

VENTILATION SYSTEM

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
43	--- HOSE; PCV						
		8-97149-012-3		1103-		01 A	(A)
		8-98012-831-0		1103-		01 A	(B)
44	--- CLIP; HOSE, PCV						
		8-94242-034-0		1103-		01 A	(A) ID=21
		8-94466-382-0		1103-		02 A	(B) ID=22.7
59	--- CLIP; HOSE						
		8-97369-959-0		1103-		01 A	
90	--- CLIP; RUBBER HOSE						
		8-94238-570-0		1103-		01 A	(B) ID=11
		8-97138-011-0		1103-		01 A	(A) ID=11.5
279	--- HOSE; RUBBER, OIL DRAIN						
		8-98075-714-0		1103-		01 A	

https://truckmanualshub.com/

0-30	WATER PUMP AND CORROSION RESISTOR
FIG-NO.	

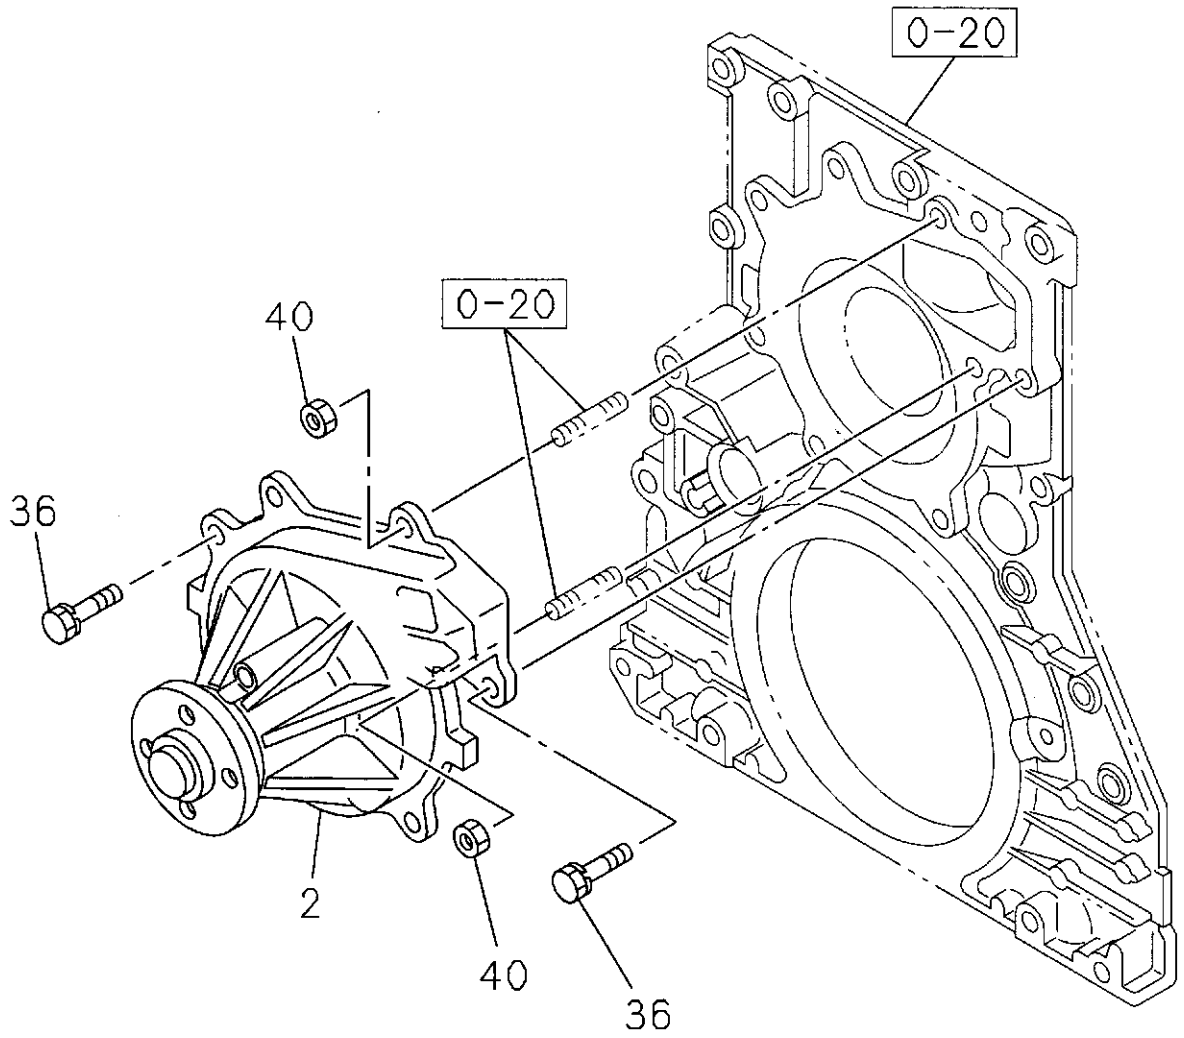

https://truckmanualshub.com/

WATER PUMP AND CORROSION RESISTOR

0-30


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
2	--- PUMP ASM; WATER					
	8-97363-478-0		1103-		01	A
36	--- BOLT; WATER PUMP TO C/BL					
	0-28650-840-0		1103-		06	A M8X40 FLANGE
40	--- NUT; WATER PUMP					
	0-91180-108-0		1103-		02	A M8 FLANGE

https://truckmanualshub.com/

0-31 THERMOSTAT AND HOUSING

FIG-NO.

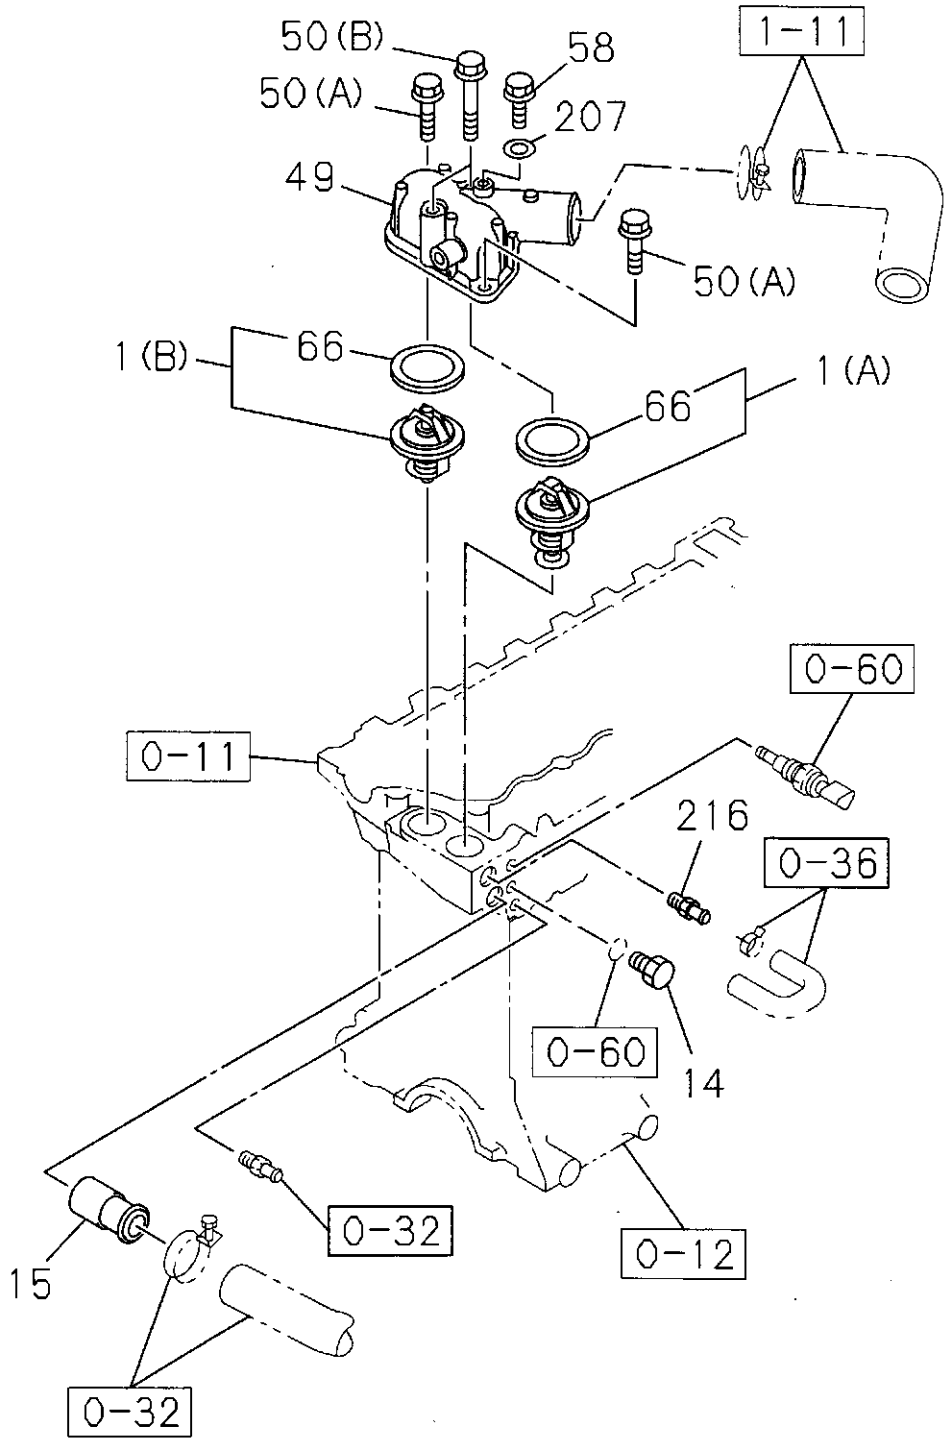

https://truckmanualshub.com/


THERMOSTAT AND HOUSING

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	-A- THERMOSTAT						
		8-97300-787-2		1103-		01 A	(B) 85°C
		8-97300-790-2		1103-		01 A	(A) 82°C
14	--- PLUG; SW						
		9-09661-005-0		1103-		01 A	M16X8 PLUG
15	--- PIPE; BYPASS						
		8-94342-574-0		1103-		01 A	
49	--- PIPE; WATER OUTLET						
		8-97329-914-0		1103-		01 A	
50	--- BOLT; OUTLET PIPE						
		0-28650-825-0		1103-		02 A	(A) M8X25 FLANGE IDN
		1-09044-072-1		1103-		02 A	(B) M8X65 FLANGE
58	--- PLUG; WATER OUTLET PIPE						
		8-97021-211-1		1103-		01 A	M8X16
66	--- GASKET; THERMOSTAT HSG						ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
		8-97300-793-0		1103-		02 A	
207	--- GASKET						ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09630-082-0		1103-		01 A	ID=8.2 OD=13.2
216	--- PIPE ASM; WATER, TURBOCHARGER RETURN						
		8-97358-699-0		1103-		01 A	


https://truckmanualshub.com/

0-32 WATER PIPING; ENGINE

FIG-NO. SUCTION PIPE

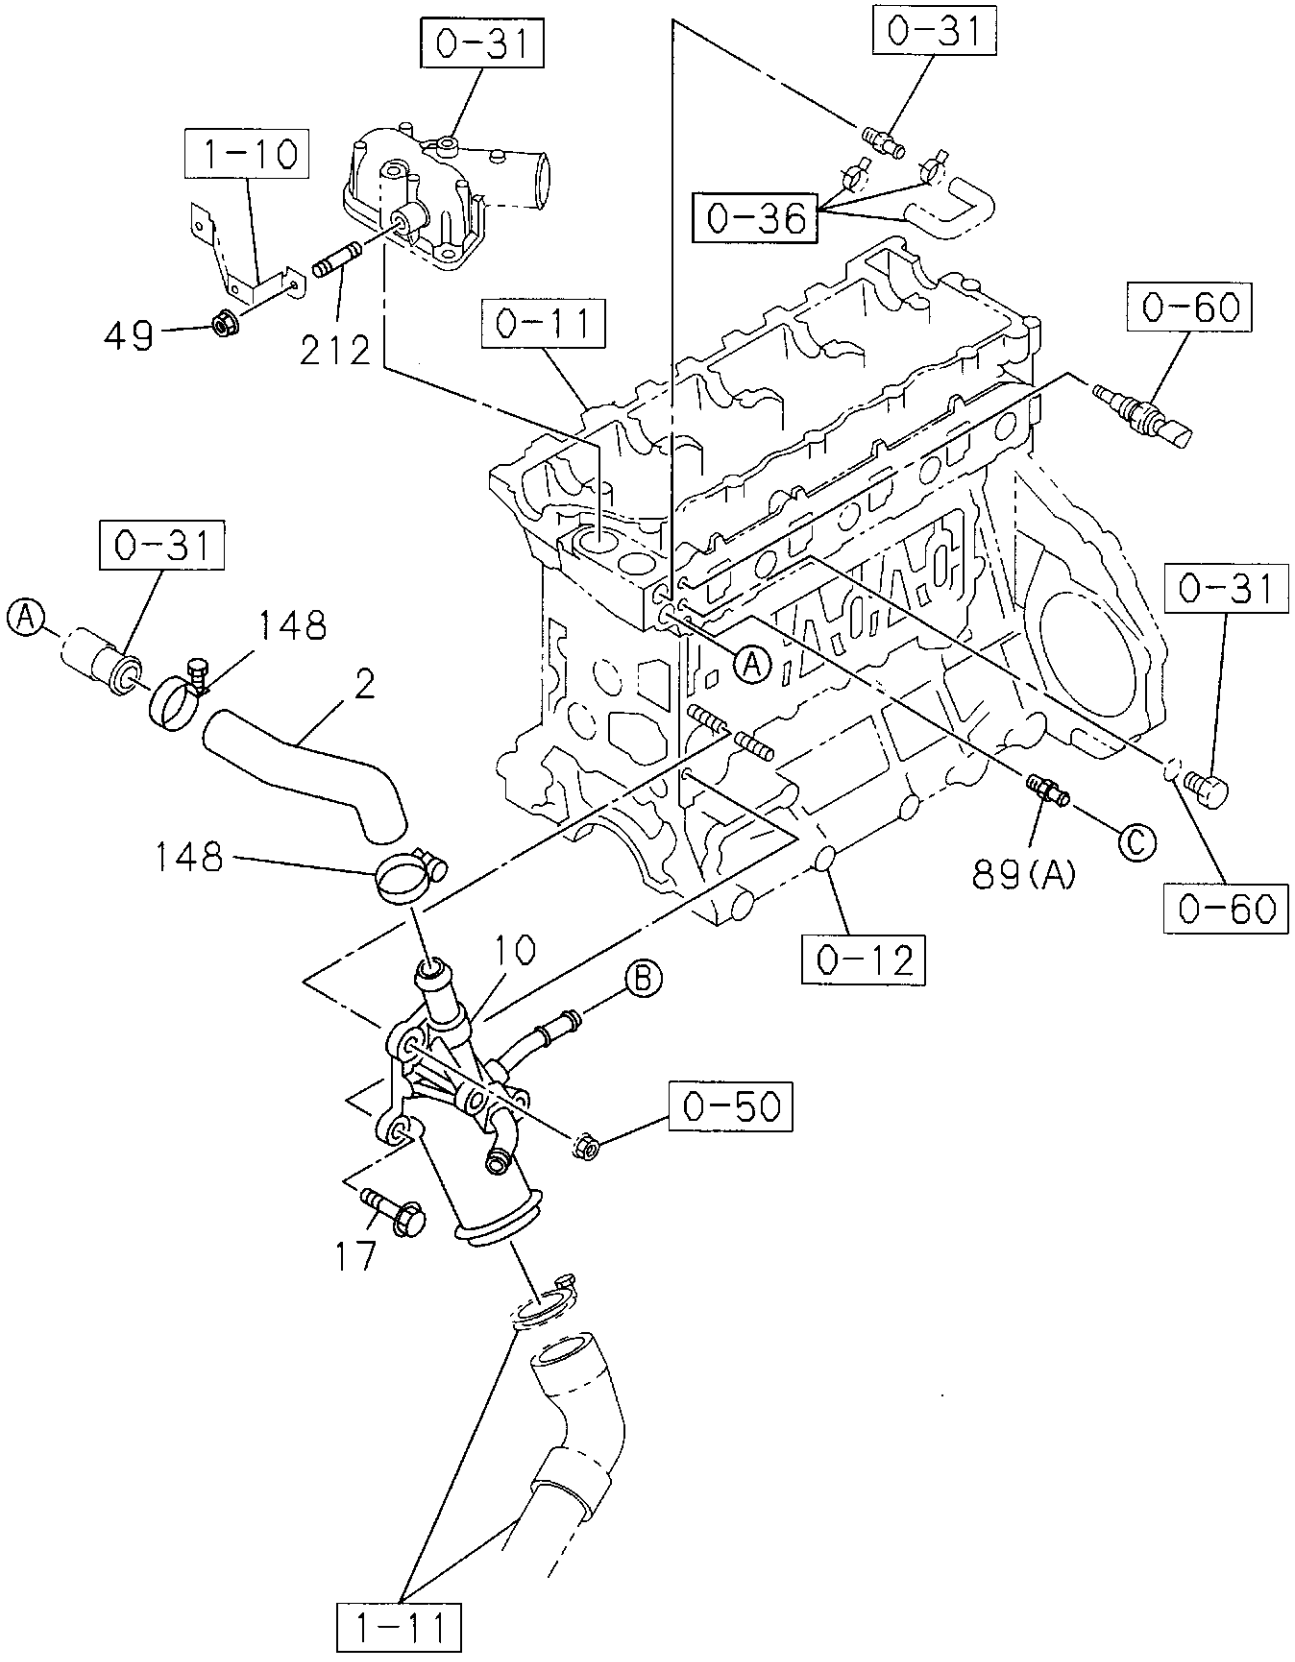

https://truckmanualshub.com/

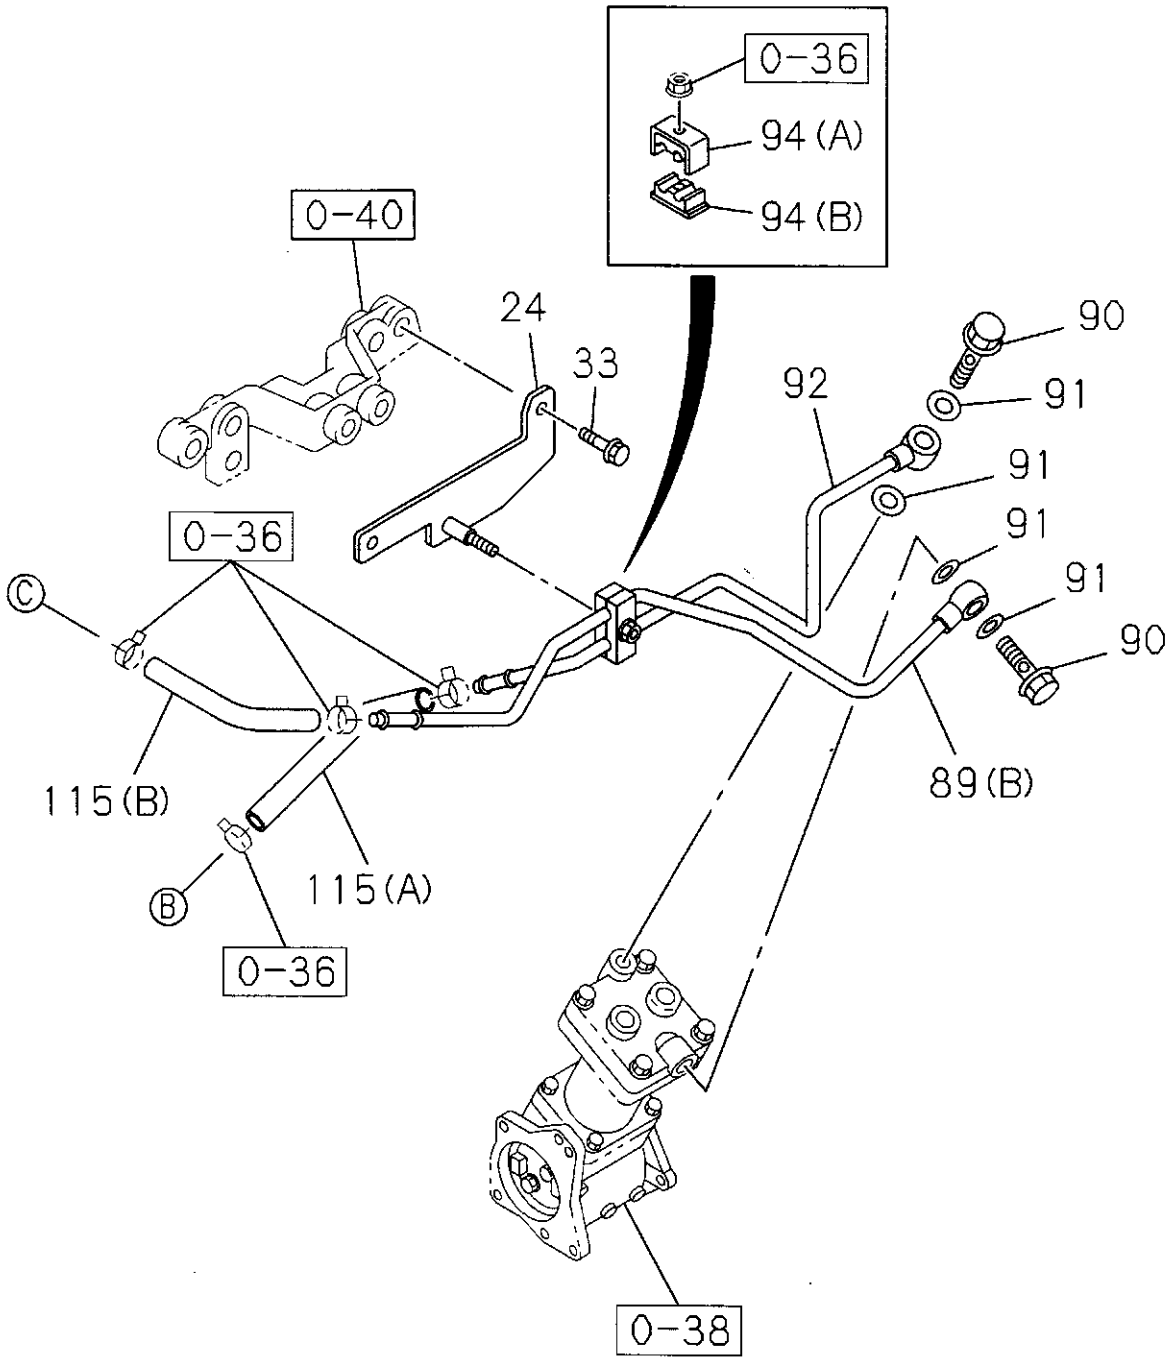

https://truckmanualshub.com/

0-32 WATER PIPING; ENGINE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
2	--- HOSE; WATER, BY-PASS					
	8-97379-228-1		1103-		01	A
10	--- PIPE; SUCTION					
	8-98166-995-0		1103-		01	A
17	--- BOLT; SUCTION PIPE					
	8-94458-473-1		1103-		01	A M8X48 FLANGE
24	--- BRACKET; WATER PIPE					
	8-97379-140-0		1103-		01	A
33	--- BOLT; BRKT					
	0-28050-610-0		1103-		02	A M6X10 FLANGE
49	--- NUT; WATER PIPE					
	0-91180-108-0		1103-		02	A M8 FLANGE
89	--- PIPE; WATER, AIR CMPR, IN					
	8-97358-699-0		1103-		01	A (A)
	8-97376-783-1		1103-		01	A (B)
90	--- BOLT; EYE, WATER PIPE, AIR CMPR					
	1-09675-193-0		1103-		02	A M14X27 EYE-BOLT
91	--- GASKET; WATER PIPE, AIR CMPR					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	1-09630-085-0		1103-		04	A ID=14.2 OD=19.2
92	--- PIPE; WATER, AIR CMPR, OUT					
	8-97376-784-0		1103-		01	A
94	--- CLIP; WATER PIPE					
	1-09701-180-0		1103-		01	A (B)
	8-94393-280-3		1103-		01	A (A) ID=10 & 10 L=25

https://truckmanualshub.com/


WATER PIPING; ENGINE


KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS 4HK1-TCC ENG(RDV)
115	--- HOSE; RUBBER						
	8-98009-361-0		1103-		01	A	(B)
	8-98136-884-0		1103-		01	A	(A)
148	--- CLIP; BYPASS HOSE						
	9-09915-315-1		1103-		02	A	ID=30
212	--- STUD; PIPE						
	8-94217-227-0		1103-		02	A	M8X45 L=55

https://truckmanualshub.com/

0-33 FAN AND FAN BELT

FIG-NO.

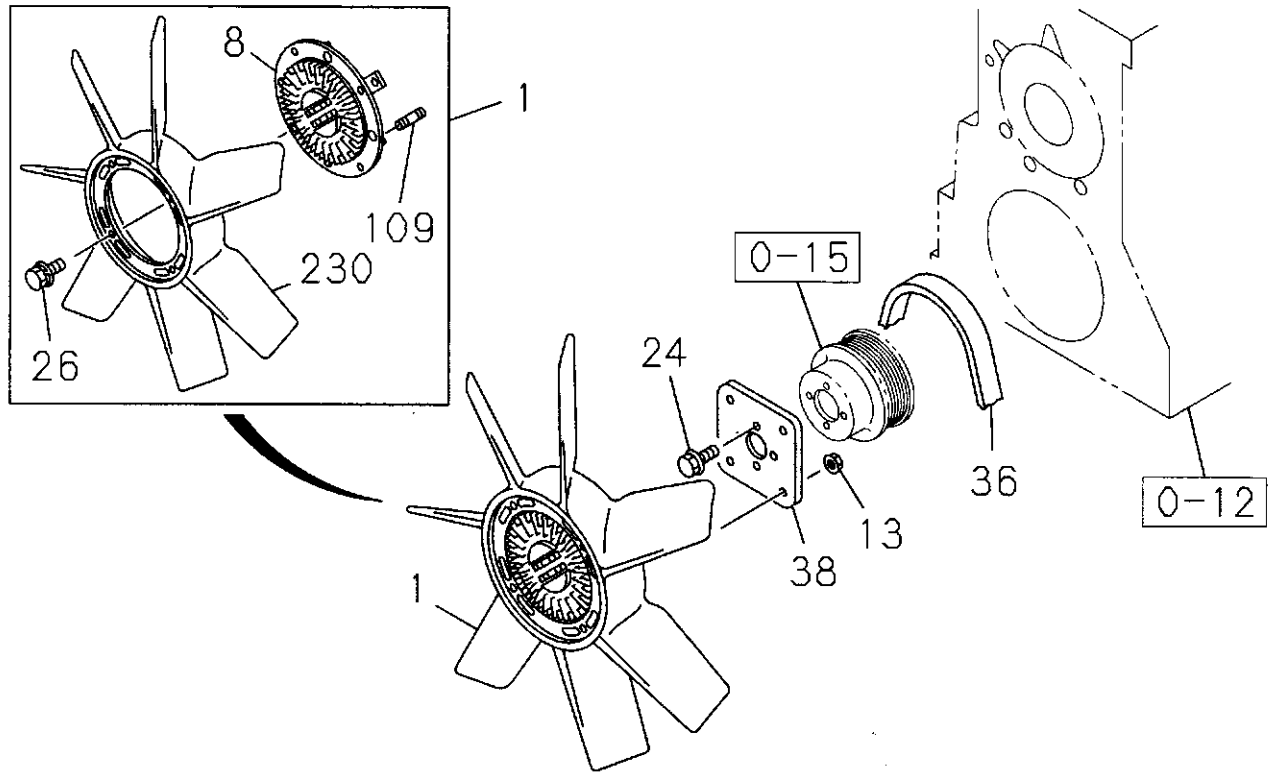

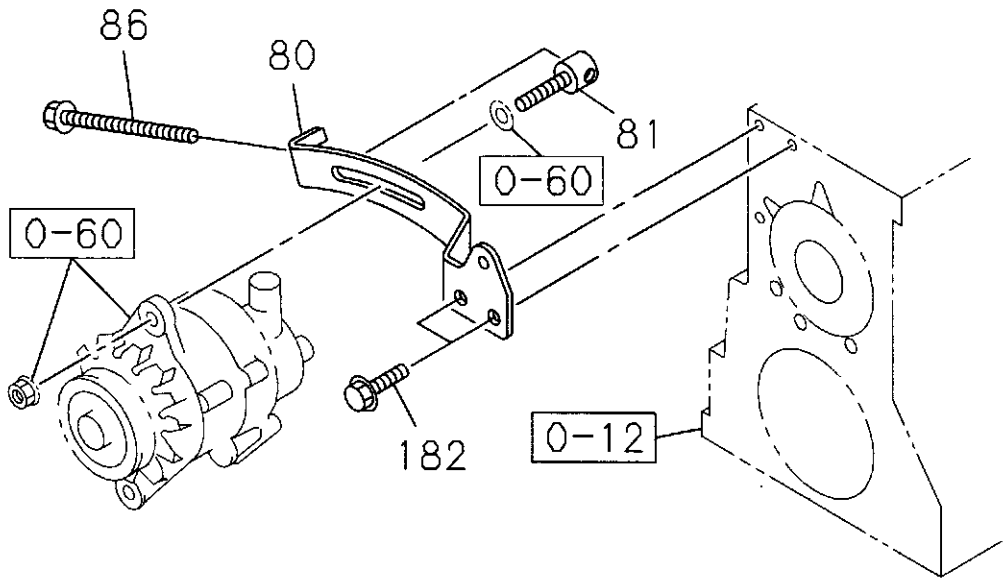

https://truckmanualshub.com/


FAN AND FAN BELT

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- FAN; COOLING						
		8-98003-191-0		1103-		01	A OD=510
8	--- CLUTCH; COOLING FAN						
		8-98019-743-0		1103-		01	A
13	--- NUT; COOLING FAN						
		0-91180-108-0		1103-		04	A M8 FLANGE
24	--- BOLT; FAN						
		0-28080-818-0		1103-		04	A M8X18 FLANGE
26	--- BOLT; FAN TO CLU						
		8-94389-764-0		1103-		04	A
36	-A- BELT; COOLING FAN						
		8-98020-247-0		1103-		01	A L=1086
38	--- SPACER; FAN						
		8-97108-643-0		1103-		01	A
80	--- PLATE; ADJ						
		8-98054-181-0		1103-		01	A
81	--- PIECE; SLIDING						
		1-13674-160-0		1103-		01	A M12X45
86	--- BOLT; ADJ						
		1-09009-113-1		1103-		01	A M10X135
109	--- STUD; FAN CLU						
		8-97049-577-1		1103-		04	A M8X13.5 L=22
182	--- BOLT; BRKT						
		0-28650-835-0		1103-		02	A M8X35 FLANGE
230	--- FAN; COOLING						
		8-97367-381-0		1103-		01	A

https://truckmanualshub.com/

0-35 ENGINE CONTROL VALVE AND LEVER

FIG-NO.

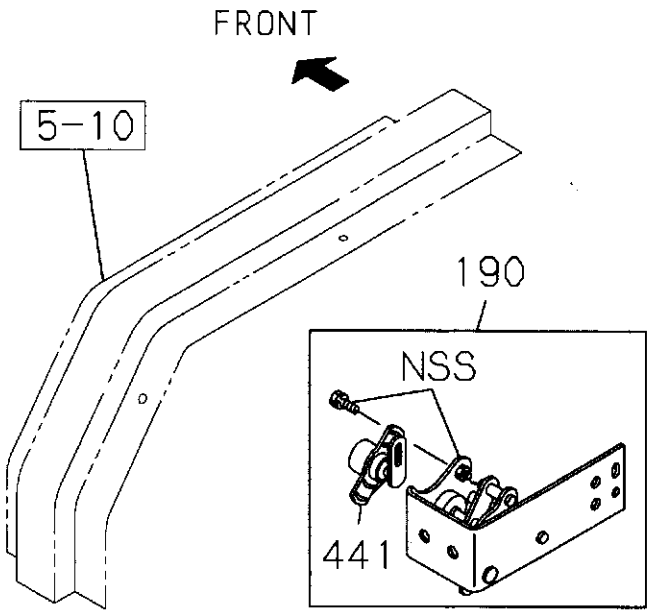

https://truckmanualshub.com/


ENGINE CONTROL VALVE AND LEVER

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	4HK1-TCC ENG(RDV)
190	--- LEVER; ENG CONT						
	8-97219-466-4		1103-		01	A	TRANSMISSION SIDE PTO W/O LEVER(SH5)
441	--- SENSOR; THROTTLE POSITION						
	8-97200-308-0		1103-		01	A	TRANSMISSION SIDE PTO W/O LEVER(SH5)

https://truckmanualshub.com/

0-36 TURBOCHARGER SYSTEM


FIG-NO. NO. 1

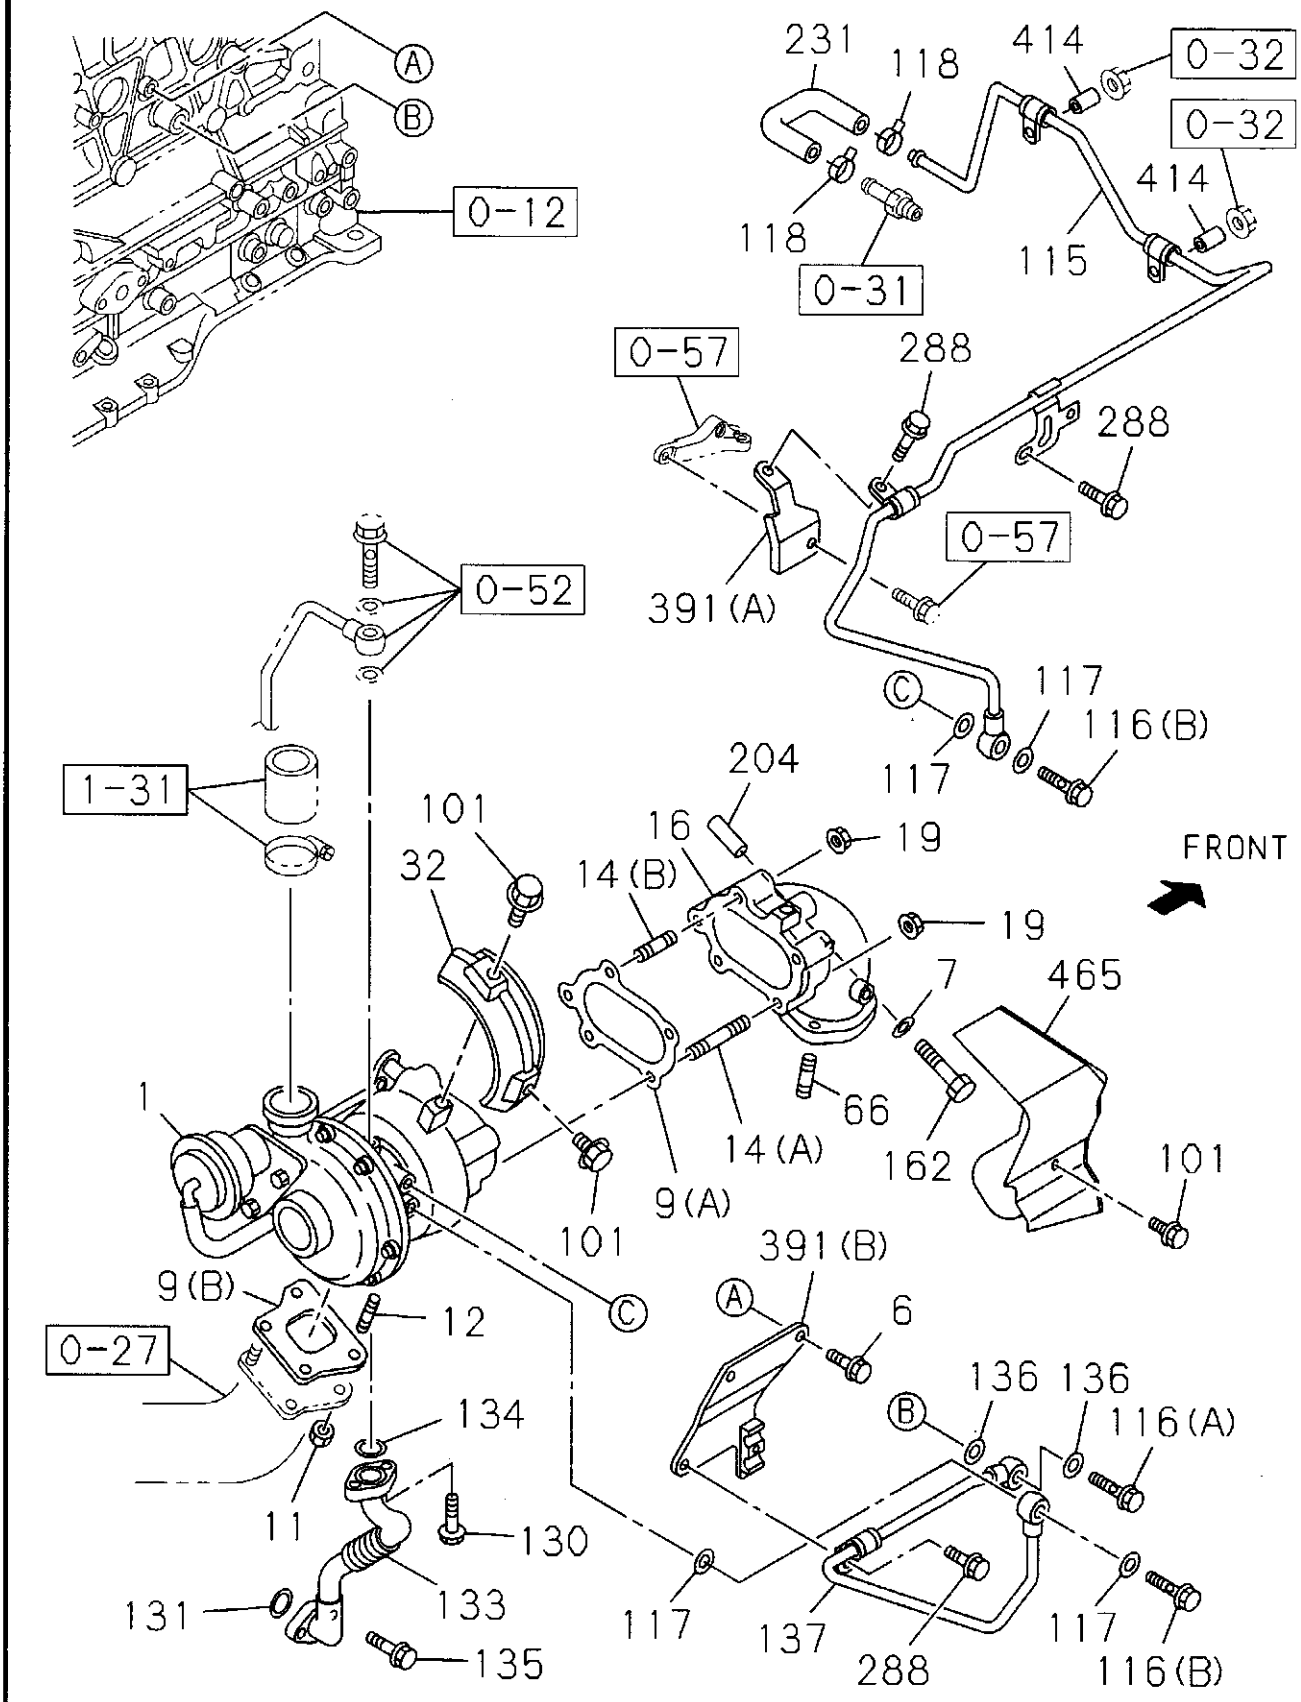

https://truckmanualshub.com/

TURBOCHARGER SYSTEM

NO. 2

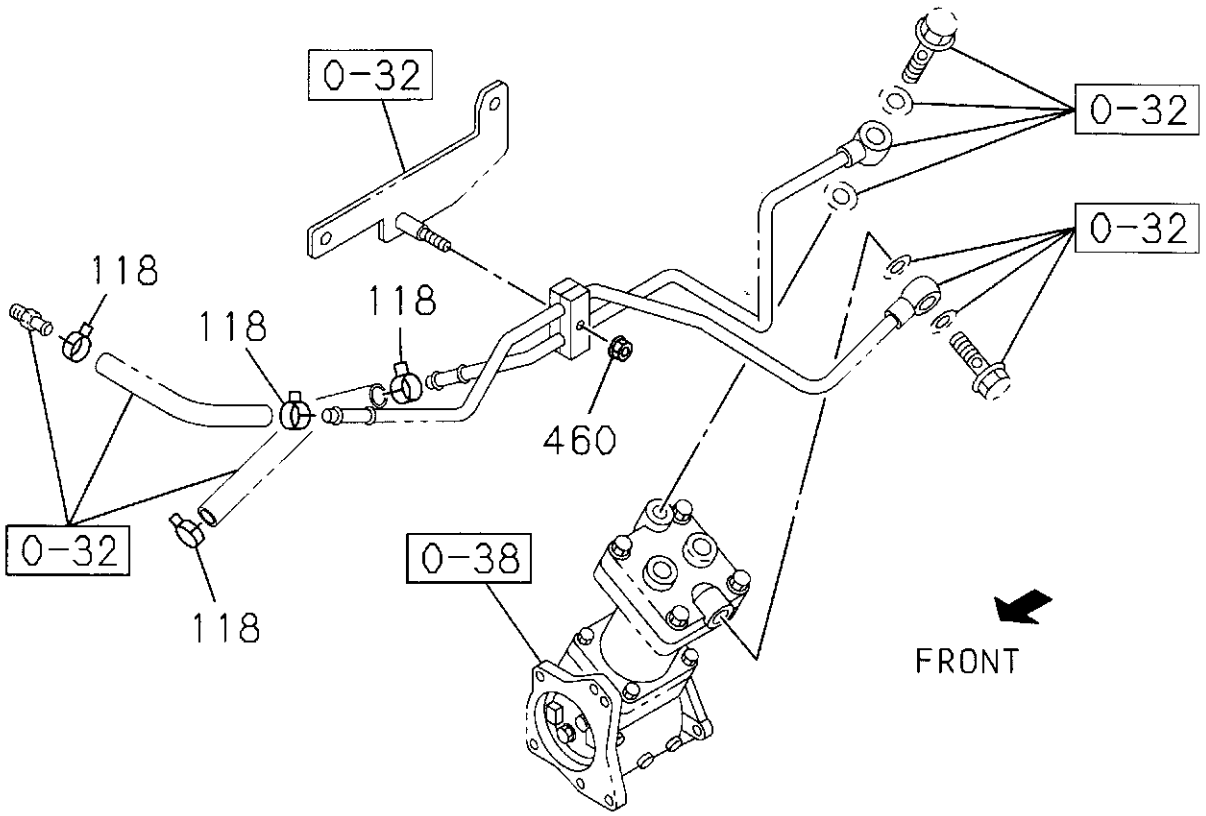

https://truckmanualshub.com/

0-36 TURBOCHARGER SYSTEM

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- TURBOCHARGER ASM					
	8-98070-143-2		1103-		01	A SEE FIG-NO 0-37 FOR COMPONENT.
6	--- BOLT; BRKT TO C/BL					
	0-28050-816-0		1103-		02	A M8X16 FLANGE
7	--- WASHER; PL, BRKT					
	8-94174-537-0		1103-		01	A ID=8 OD=18 T=3
9	--- GASKET; TURBOCHARGER TO EXH DUCT					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	8-97039-777-1		1103-		01	A (A)
	8-97374-412-0		1103-		01	A (B)
11	--- NUT; TURBOCHARGER					
	9-09842-007-0		1103-		04	A M10 P=1.5 H=8
12	--- STUD; TURBOCHARGER					
	9-04731-028-0		1103-		02	A M10X28
14	--- STUD; TURBOCHARGER TO EXH PIPE					
	8-97019-477-0		1103-		02	A (A) M8X94 L=108
	8-97019-478-0		1103-		03	A (B) M8X49 L=63
16	--- ADAPTER; EXH PIPE					
	8-97039-749-2		1103-		01	A
19	--- NUT; EXH PIPE, TURBOCHARGER					
	8-94170-486-0		1103-		05	A M8 FLANGE
32	--- PROTECTOR; HEAT, TURBOCHARGER					
	8-97351-168-0		1103-		01	A
66	--- STUD; EXH PIPE					
	0-44011-025-0		1103-		03	A M10X25 L=40

https://truckmanualshub.com/

TURBOCHARGER SYSTEM

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
101	--- BOLT; HEAT PROTECTOR					
	8-98054-289-0		1103-		06	A M6X12 W/PL WASHER
115	--- PIPE; WATER, TURBOCHARGER OUT					
	8-98063-841-0		1103-		01	A
116	--- BOLT; WATER PIPE					
	1-09675-081-0		1103-		02	A (B) M12X24 EYE-BOLT
	8-94455-144-0		1103-		01	A (A) M14X30 EYE-BOLT
117	--- GASKET; WATER PIPE					
	9-09571-412-0		1103-		04	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=12.2
118	--- CLIP; WATER HOSE					
	8-94221-519-0		1103-		06	A ID=15.5
130	--- BOLT; OIL PIPE TO TURBOCHARGER DRAIN					
	0-50540-620-0		1103-		02	A M6X20 W/LK WASHER
131	--- GASKET; OIL PIPE, C/BL					
	8-94394-671-0		1103-		01	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=30
133	--- PIPE; OIL DRAIN, TURBOCHARGER					
	8-98172-662-0		1103-		01	A
134	--- GASKET; OIL PIPE, TURBOCHARGER DRAIN					
	1-09623-462-0		1103-		01	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=22.8
135	--- BOLT; OIL PIPE TO C/BL					
	0-28050-820-0		1103-		02	A M8X20 FLANGE
136	--- GASKET; WATER PIPE					
	1-09630-085-0		1103-		02	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=14.2 OD=19.2

https://truckmanualshub.com/


0-36 TURBOCHARGER SYSTEM

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
137	--- PIPE; WATER, TURBOCHARGER IN					
	8-98063-007-0		1103-		01	A
162	--- BOLT; ADAPTER					
	5-09000-275-0		1103-		01	A M8X57
204	--- COLLAR; PIPE ADAPTER					
	8-97214-384-1		1103-		01	A
231	--- HOSE; RUBBER, TURBOCHARGER OUT					
	8-97209-950-0		1103-		01	A
288	--- BOLT; WATER PIPE CLIP					
	0-28050-816-0		1103-		02	A M8X16 FLANGE
391	--- BRACKET; WATER PIPE					
	8-98013-958-0		1103-		01	A (A)
	8-98057-168-2		1103-		01	A (B)
414	--- SPACER					
	1-11369-081-0		1103-		02	A M8X10
460	--- NUT; PIPE					
	0-91180-106-0		1103-		01	A M6 FLANGE
465	--- PROTECTOR; HEAT, EXH ADAPTER					
	8-97351-167-0		1103-		01	A

https://truckmanualshub.com/

0-37	TURBOCHARGER
FIG-NO.	

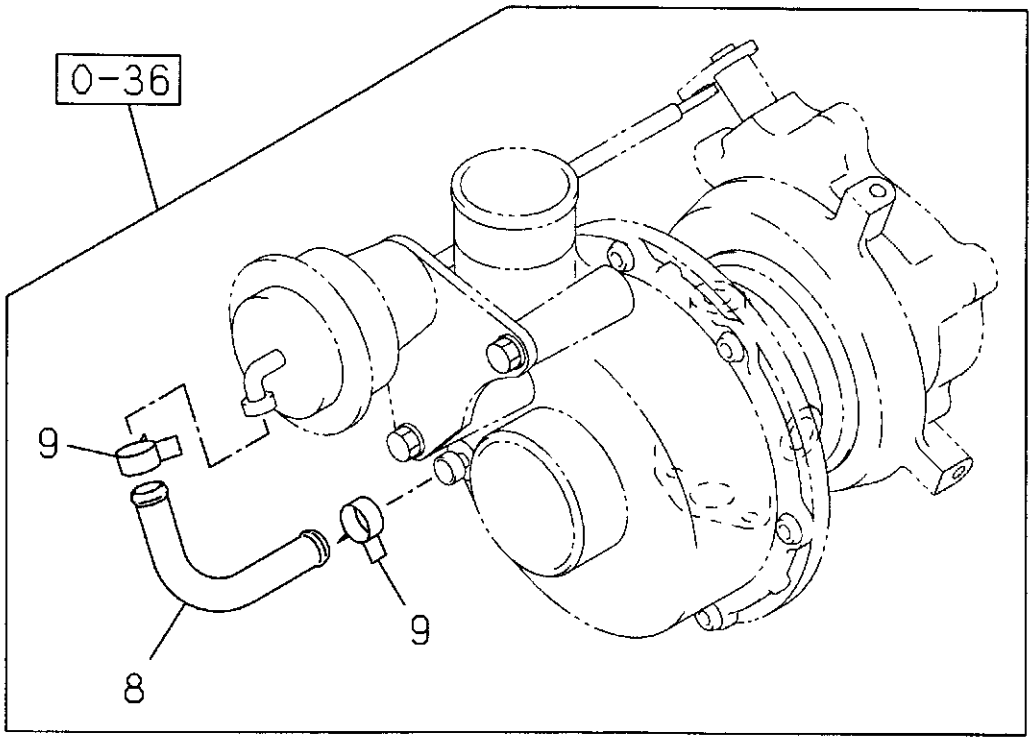

https://truckmanualshub.com/


TURBOCHARGER


KEY NO.	RECOMMEND CLASS / PART NAME	
		ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	8980701432
8	--- HOSE; ACTUATOR TO BLOWER HSG, TC	
	8-94311-234-0	01
9	--- CLIP; ACTUATOR HOSE, TURBOCHARGER	
	5-09707-057-0	02

https://truckmanualshub.com/

0-38 AIR COMPRESSOR PIPING; ENGINE SIDE

FIG-NO.

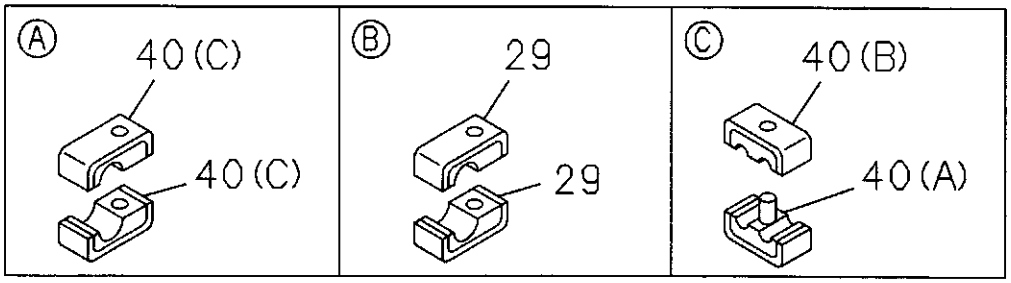

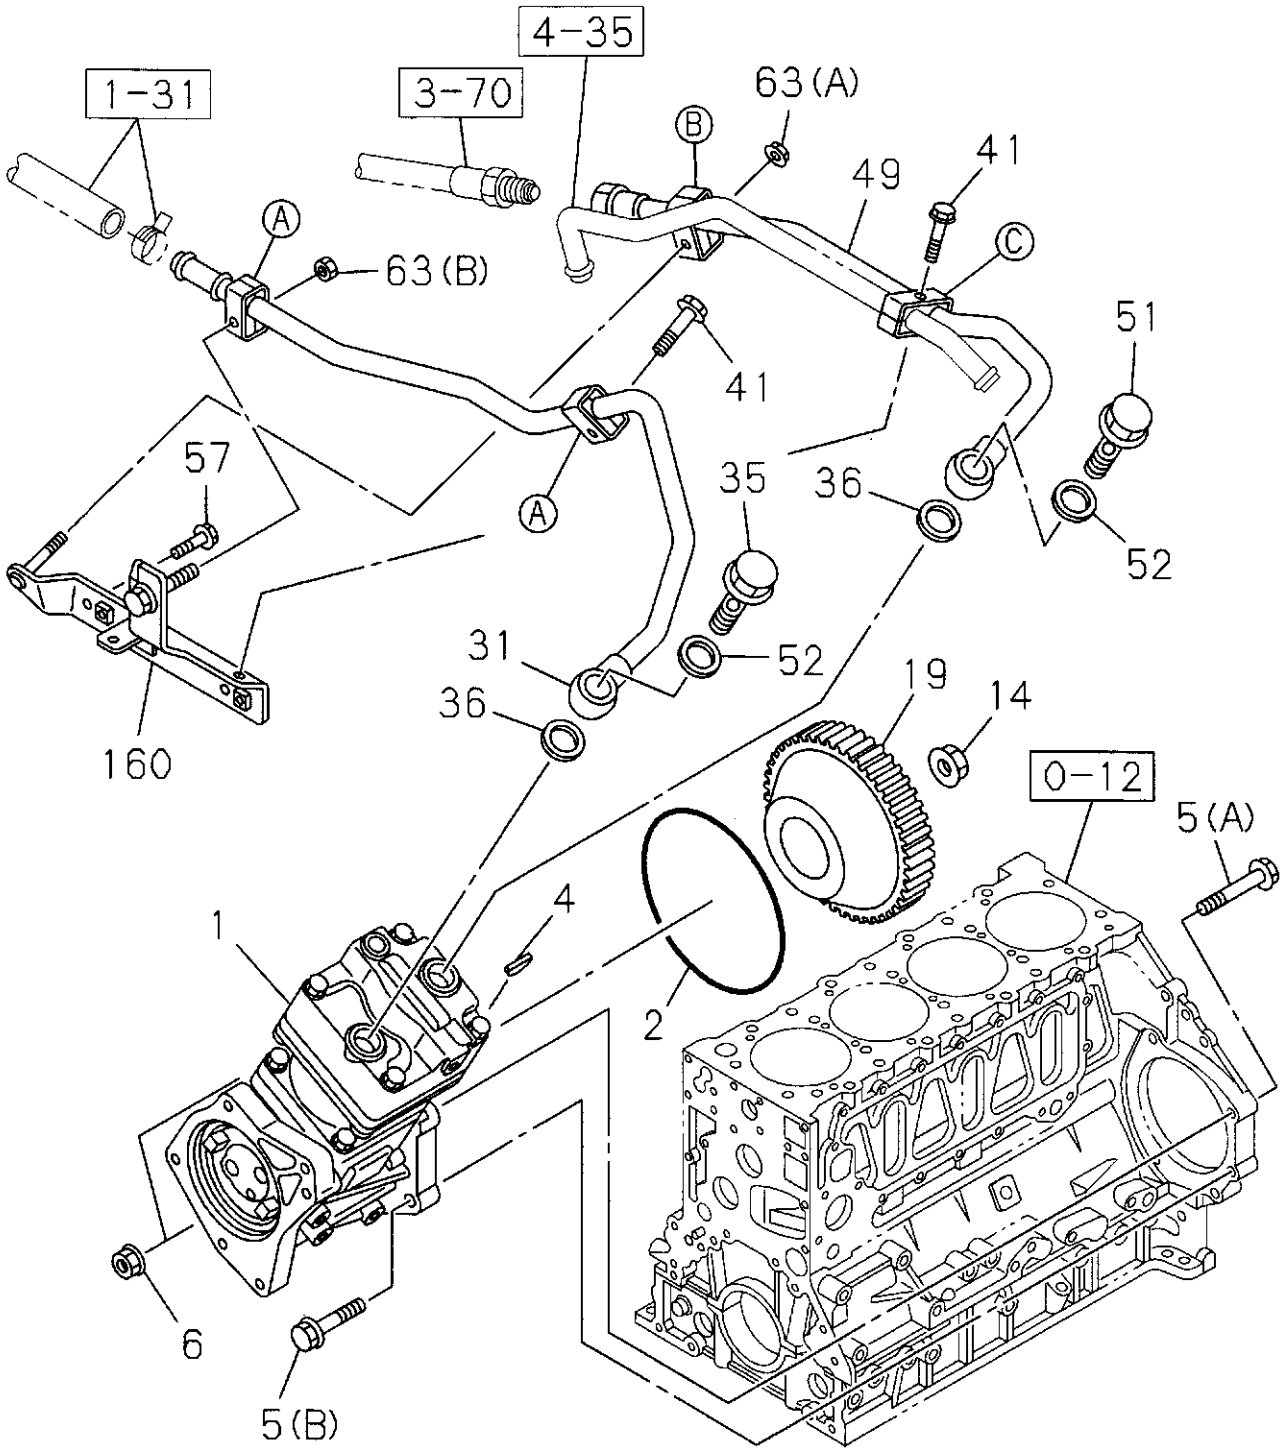

https://truckmanualshub.com/

AIR COMPRESSOR PIPING; ENGINE SIDE

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- COMPRESSOR ASM; AIR						
		8-97601-449-5		1103-		01	A SEE FIG-NO 0-39 FOR COMPONENT.
2	--- GASKET; AIR CMPR						
		1-09623-464-0		1103-		01	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=139.6
4	--- KEY; INJ PUMP GEAR						
		9-08055-519-0		1103-		01	A
5	--- BOLT; AIR CMPR FIX						
		0-28151-270-0		1103-		01	A (B) M12X70 FLANGE
		8-94396-485-1		1103-		01	A (A) M12X95 FLANGE
6	--- NUT; AIR CMPR						
		0-91180-110-0		1103-		02	A M10 FLANGE
14	--- NUT; GEAR						
		8-97141-154-0		1103-		01	A M18
19	--- GEAR; INJ PUMP						
		8-97600-987-2		1103-		01	A Z=35
29	--- CLIP; AIR PIPE						
		1-09701-282-0		1103-		02	A
31	--- PIPE; AIR, AIR CMPR SUCTION						
		8-98067-830-1		1103-		01	A
35	--- BOLT; EYE, AIR PIPE						
		1-09675-132-1		1103-		01	A M24X39
36	--- GASKET; AIR PIPE TO AIR CMPR						
		9-09571-424-0		1103-		02	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=24.5 OD=32
40	--- CLIP; AIR PIPE						
		1-09701-284-0		1103-		04	A (C)

https://truckmanualshub.com/

0-38 AIR COMPRESSOR PIPING; ENGINE SIDE


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
40	--- CLIP; AIR PIPE					
	8-97619-417-0		1103-		01	A (A)
	8-97619-418-0		1103-		01	A (B)
41	--- BOLT; CLIP					
	0-28050-845-0		1103-		02	A M8X45 FLANGE
49	--- PIPE; AIR, CHARGE					
	8-98069-425-0		1103-		01	A
51	--- BOLT; EYE, AIR PIPE TO CMPR					
	1-09675-132-1		1103-		01	A M24X39
52	--- GASKET; EYE BOLT, AIR PIPE					ALSO INCLUDED IN GASKET SET(ENGINE).
	9-09571-424-0		1103-		02	A ID=24.5 OD=32
57	--- BOLT; BRKT, AIR PIPE					
	0-28050-816-0		1103-		02	A M8X16 FLANGE
63	--- NUT; CLIP					
	0-91180-106-0		1103-		03	A (A) M6 FLANGE
	0-91180-108-0		1103-		01	A (B) M8 FLANGE
160	--- BRACKET; AIR PIPE					
	8-98076-098-0		1103-		01	A

https://truckmanualshub.com/

0-39 AIR COMPRESSOR; BRAKE

FIG-NO.

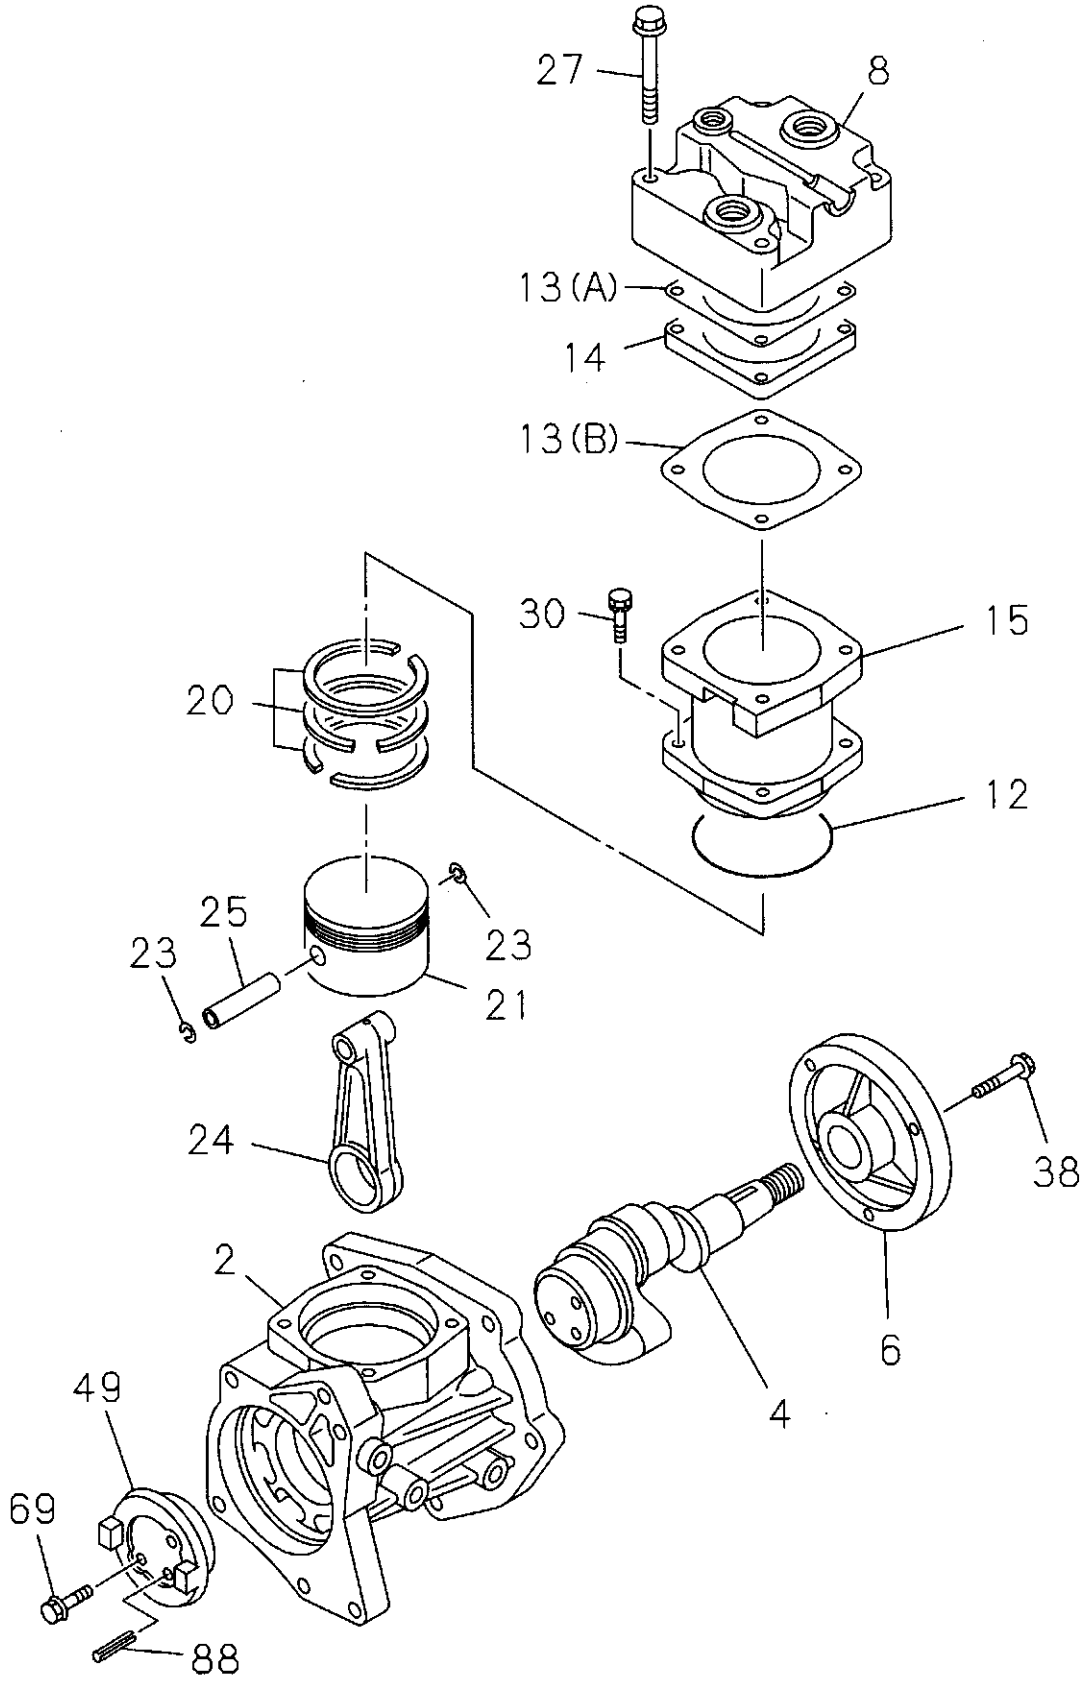

https://truckmanualshub.com/

AIR COMPRESSOR; BRAKE

0-39

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
2	--- CRANKCASE; AIR CMPR					
	1-19151-303-0		1103-		01	A
4	--- CRANKSHAFT; AIR CMPR					
	1-19171-090-1		1103-		01	A
6	--- COVER ASM; BRG, AIR CMPR					
	1-19156-086-1		1103-		01	A
8	--- HEAD ASM; CYL, AIR CMPR					
	1-19110-075-0		1103-		01	A
12	--- GASKET; AIR CMPR					
	1-09623-539-0		1103-		01	A
13	--- GASKET; AIR CMPR					
	1-19115-015-0		1103-		01	A (A)
	1-19115-016-0		1103-		01	A (B)
14	--- PLATE; AIR CMPR					
	1-19130-010-1		1103-		01	A
15	--- CYLINDER; AIR CMPR					
	1-19163-068-1		1103-		01	A
20	--- RING KIT; PISTON, AIR CMPR					
	1-19163-069-0		1103-1103		01	A
	1-19163-058-0		1104-		01	A
21	--- PISTON; AIR CMPR					
	1-19161-027-0		1103-		01	A
23	--- RING; SNAP, PISTON, AIR CMPR					
	1-19169-004-0		1103-		02	A
24	--- ROD ASM; CONN, AIR CMPR					
	1-19173-023-0		1103-		01	A
25	--- PIN; PISTON, AIR CMPR					
	1-19167-003-0		1103-		01	A

https://truckmanualshub.com/


0-39 AIR COMPRESSOR; BRAKE

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
27	--- BOLT; HD					
	1-19119-039-0		1103-1103		04	A
	8-98188-172-0		1104-		04	A
30	--- BOLT; CYL TO CRANKCASE					
	9-01911-025-0		1103-		04	A M10X25
38	--- BOLT; COVER FIX					
	1-19159-023-0		1103-		03	A
49	--- COUPLING ASM					
	1-19179-032-0		1103-		01	A
69	--- BOLT ASM; AIR COMP					
	1-19179-033-0		1103-		02	A
88	--- PIN; SPRING					
	1-19179-034-0		1103-		01	A


https://truckmanualshub.com/

FIG-NO. INJ PUMP

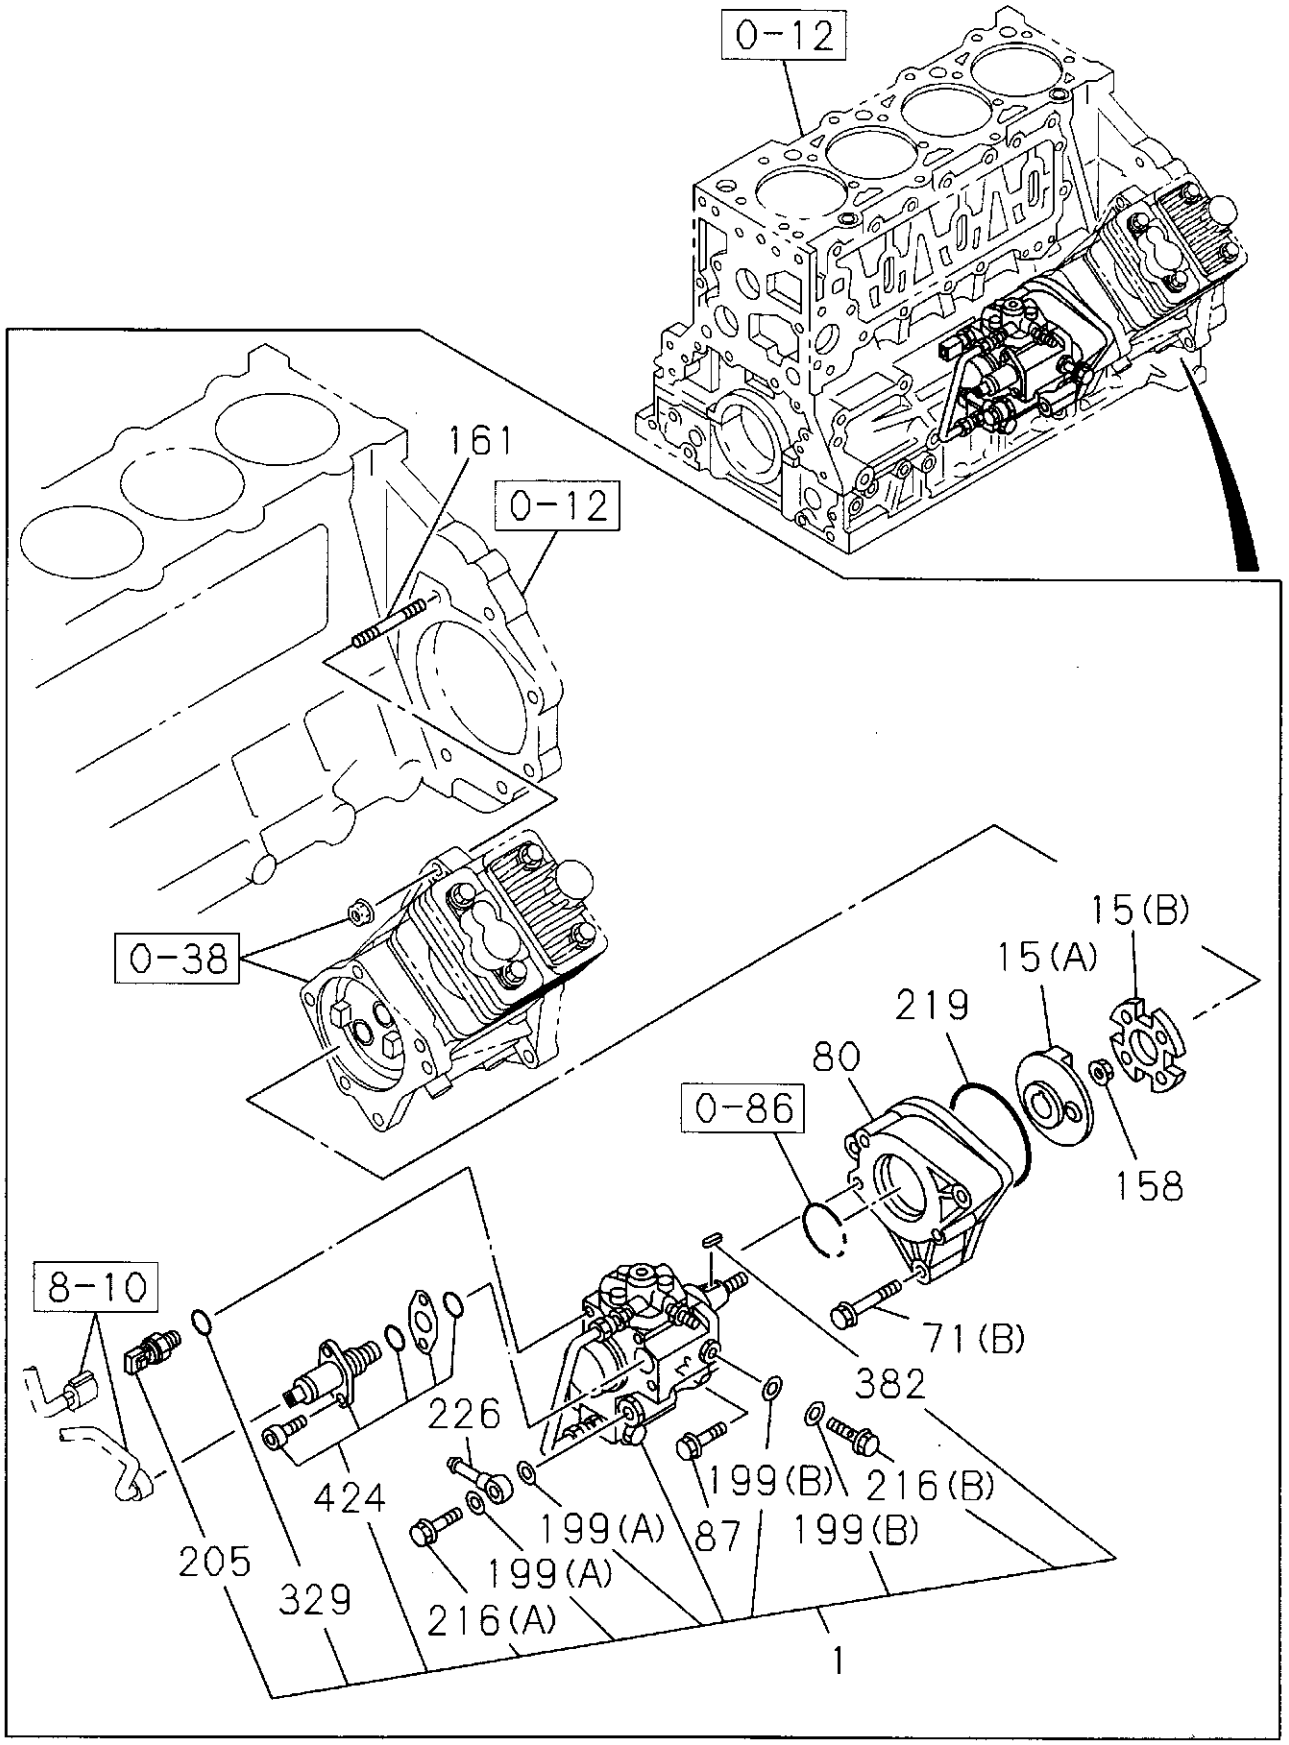


https://truckmanualshub.com/

INJ PIPE AND RAIL ASM

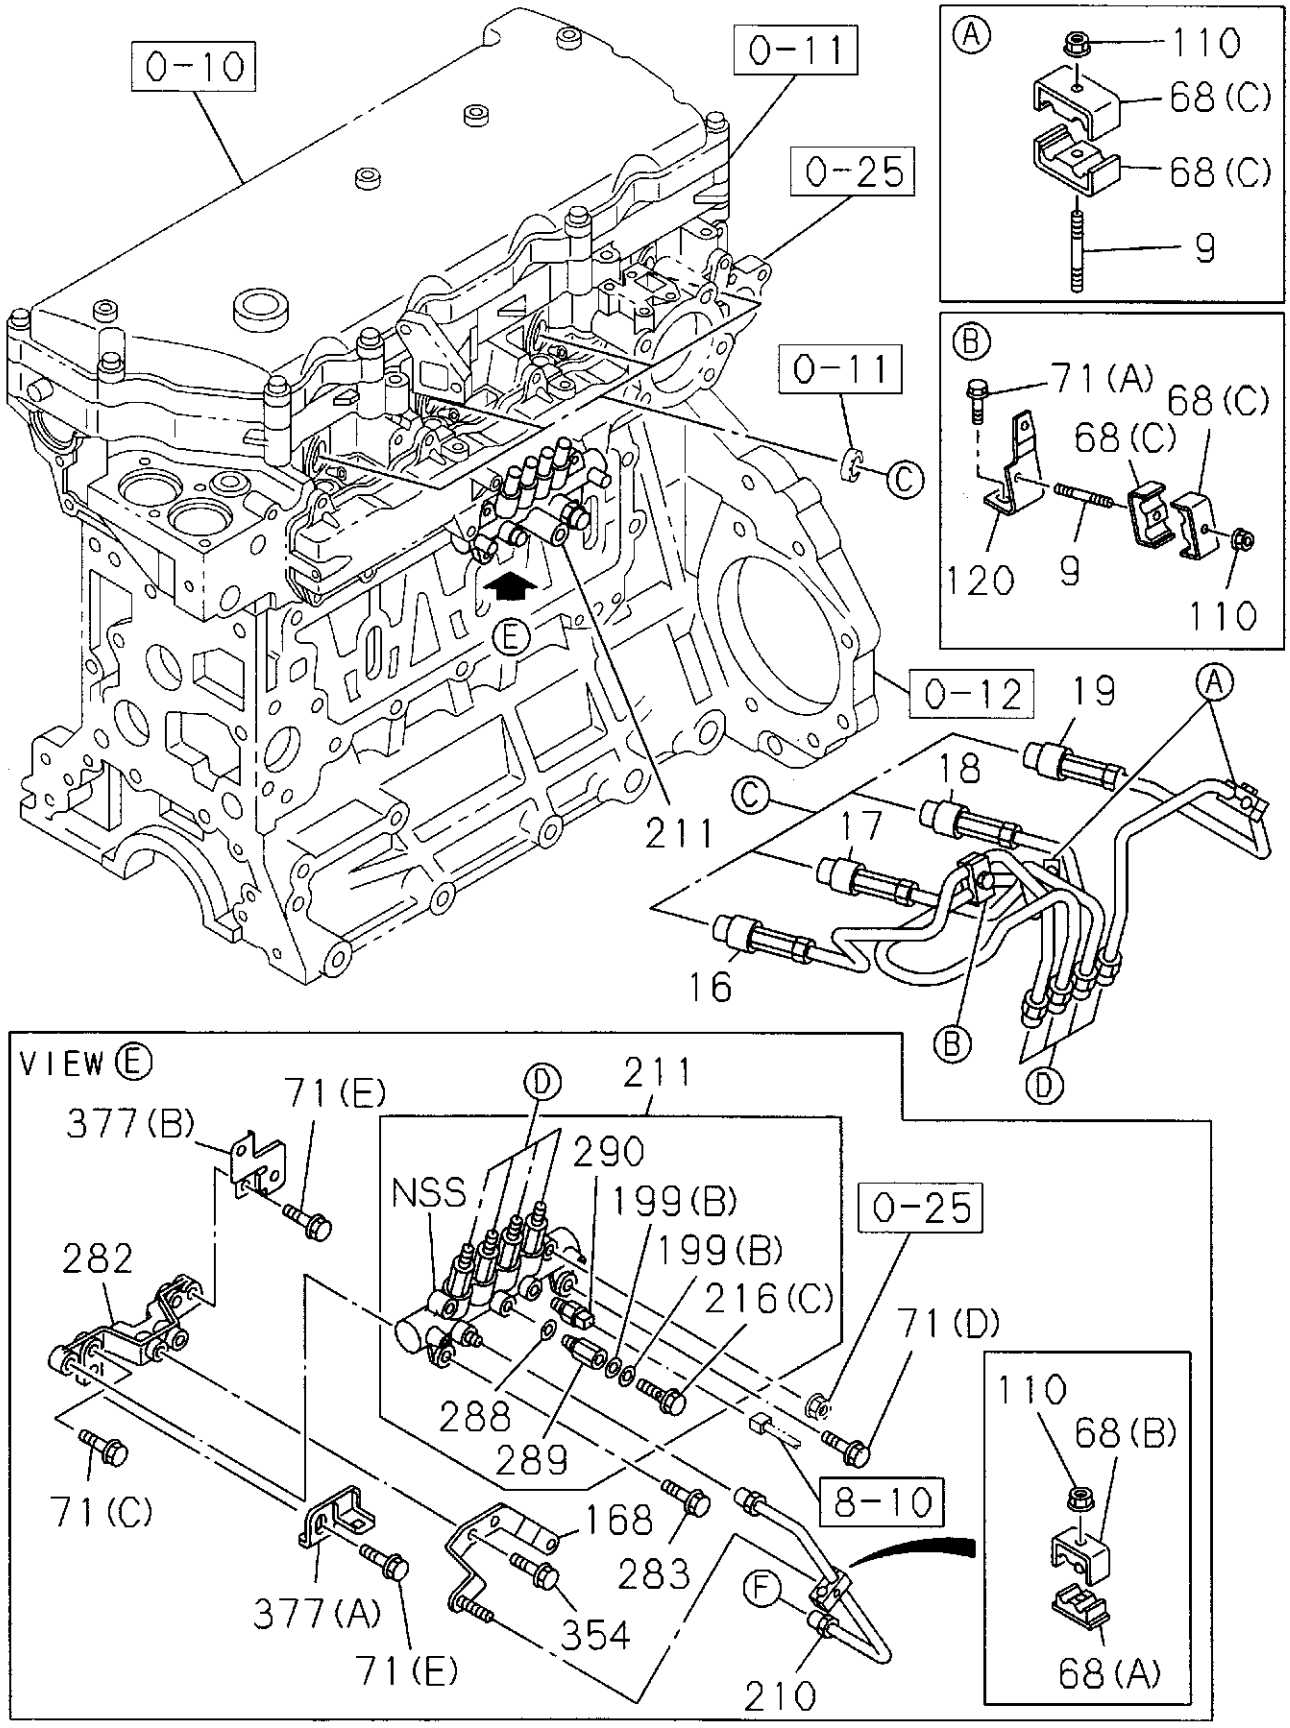

https://truckmanualshub.com/

FIG-NO. NOZZLE AND PIPE

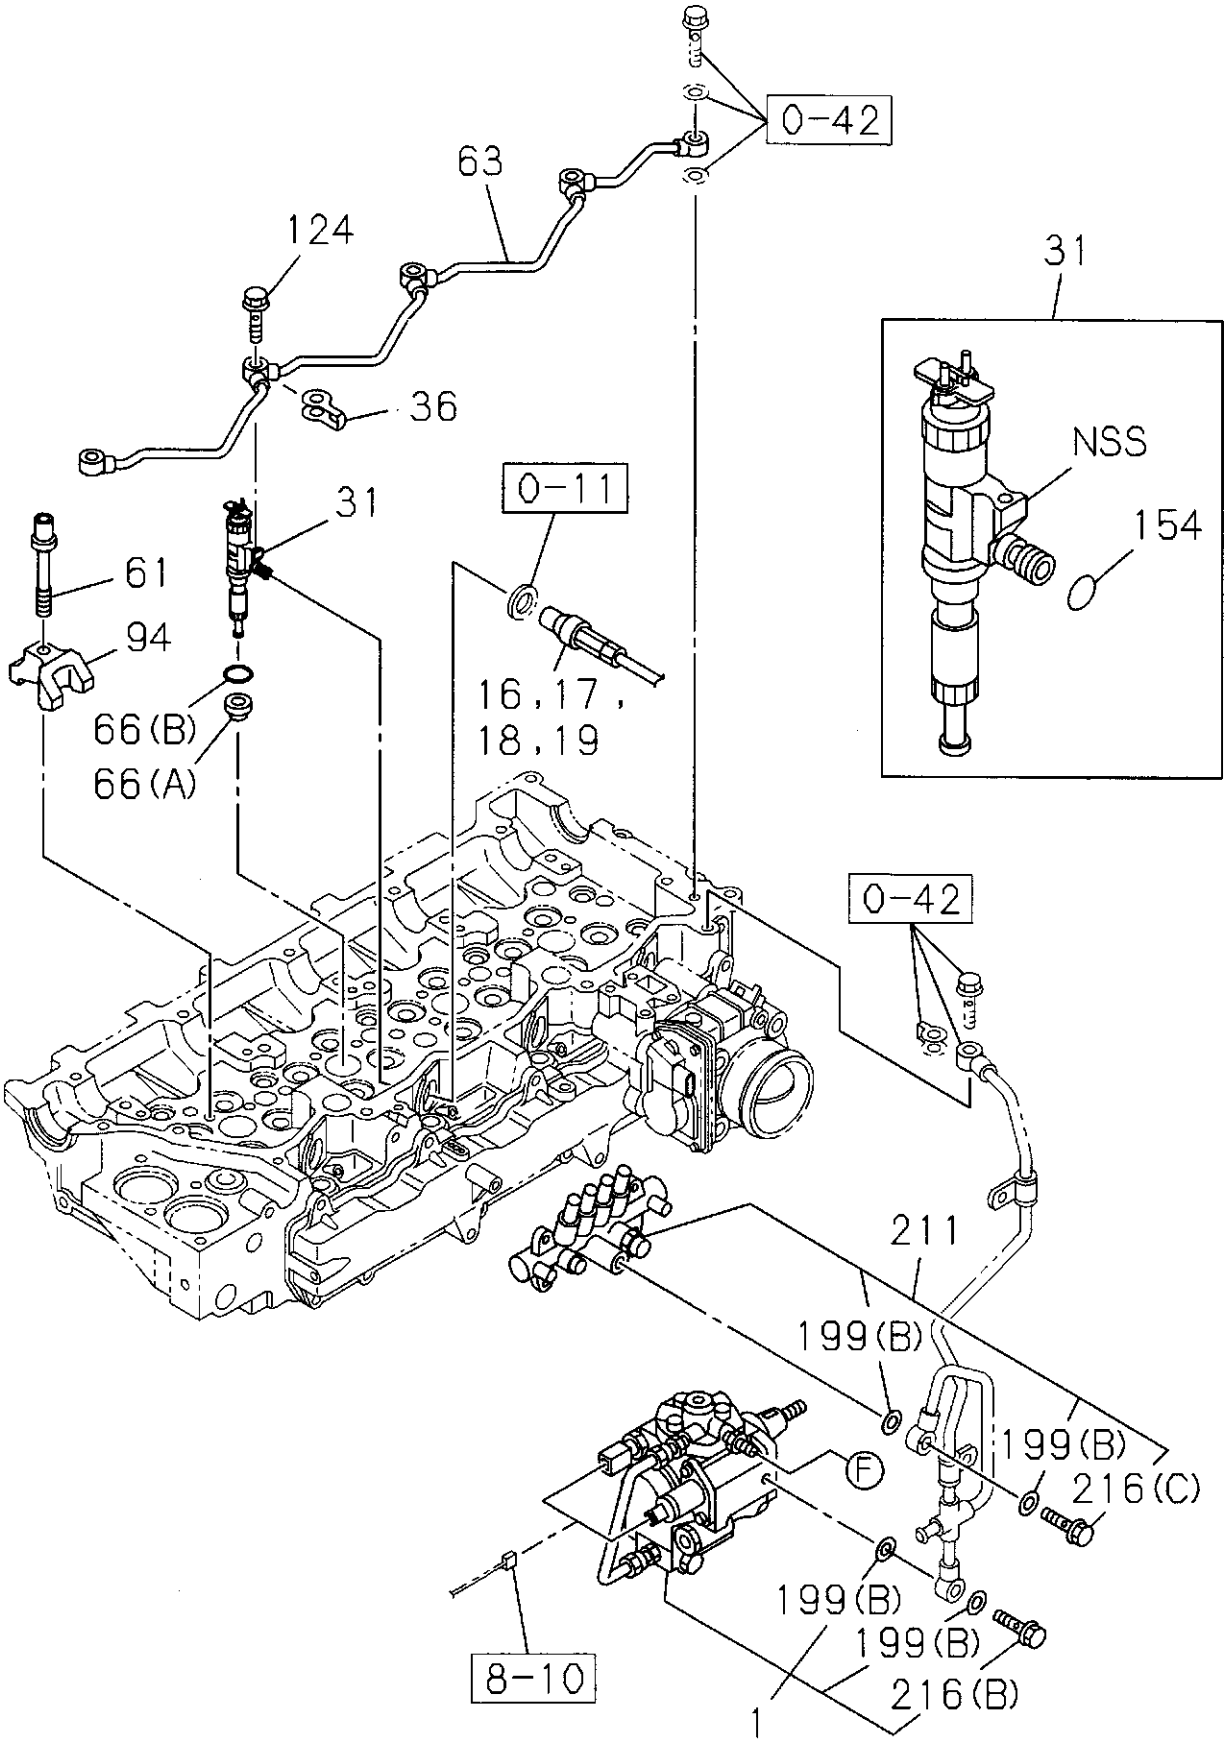

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	-D- PUMP ASM; INJ					
	8-97386-557-4		1103-		01	A
9	--- STUD; CLIP					
	0-41010-630-0		1103-		02	A M6X30 L=38
	8-97203-278-0		1103-		01	A M6X35 L=43
15	--- COUPLING ASM; INJ PUMP					
	8-97306-054-0		1103-		01	A (A)
	8-97306-059-1		1103-		01	A (B) SEE FIG-NO 0-87 FOR COMPONENT.
16	--- PIPE; INJ NO. 1					
	8-98039-934-0		1103-		01	A
17	--- PIPE; INJ NO. 2					
	8-98039-935-0		1103-		01	A
18	--- PIPE; INJ NO. 3					
	8-98039-936-0		1103-		01	A
19	--- PIPE; INJ NO. 4					
	8-98039-937-0		1103-		01	A
31	-A- NOZZLE ASM; INJ					
	8-98160-061-0		1103-		04	A
36	--- GASKET; RETURN PIPE, NOZZLE HOLDER					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	8-98065-992-0		1103-		04	A ID=8.3
61	--- BOLT; CLAMP NOZZLE HOLDER					
	8-98008-895-0		1103-		04	A M8X54
63	--- PIPE; FUEL, NOZZLE LEAK OFF					
	8-97306-081-0		1103-		01	A
66	--- GASKET; INJ NOZZLE					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	8-94173-412-0		1103-		04	A (B) ID=23.3

https://truckmanualshub.com/

0-40 FUEL INJECTION SYSTEM

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
66	--- GASKET; INJ NOZZLE						
	8-98079-248-0		1103-		04	A	ALSO INCLUDED IN GASKET SET(ENG. & HEAD) (A) ID=9.2 T=8.1
68	--- CLIP; INJ PIPE						
	8-97330-118-1		1103-		01	A	(A)
	8-97330-119-1		1103-		01	A	(B)
	8-98039-293-0		1103-		06	A	(C)
71	--- BOLT; BRKT						
	0-28050-610-0		1103-		02	A	(E) M6X10 FLANGE
	0-28050-816-0		1103-		01	A	(A) M8X16 FLANGE
	0-28050-840-0		1103-		01	A	(C) M8X40 FLANGE
	0-28050-850-0		1103-		01	A	(D) M8X50 FLANGE
	0-28051-060-0		1103-		03	A	(B) M10X60 FLANGE
80	--- BRACKET; PUMP						
	8-98061-699-0		1103-		01	A	
87	--- BOLT; PUMP						
	0-28650-830-0		1103-		03	A	M8X30 FLANGE
	0-28650-840-0		1103-		02	A	M8X40 FLANGE
94	--- BRACKET; INJ NOZZLE						
	8-98028-999-1		1103-		04	A	
110	--- NUT; CLIP						
	0-91180-106-0		1103-		04	A	M6 FLANGE

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS／PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
120	--- BRACKET; INJ PIPE					
	8-98001-041-0		1103-		01	A
124	--- BOLT; EYE LEAK OFF PIPE					
	1-09675-037-1		1103-		04	A M8X18 EYE BOLT
154	--- GASKET; CONNECTOR					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	9-09561-111-0		1103-		04	A ID=11.0
158	--- NUT; INJ PUMP					
	0-91180-114-0		1103-		01	A M14 FLANGE
161	--- STUD; INJ PUMP					
	8-97066-386-1		1103-		02	A M10X46.5 L=58.5
168	--- BRACKET; FUEL PIPE					
	8-98072-403-0		1103-		01	A
199	--- GASKET; EYE BOLT					ALSO INCLUDED IN GASKET SET(ENGINE).
	1-15619-507-0		1103-		02	A (A)
	8-97602-218-0		1103-		04	A (B)
205	--- SENSOR; FUEL TEMP					
	8-98023-581-0		1103-		01	A
210	--- PIPE; INJ, C／R					
	8-97376-779-0		1103-		01	A
211	--- RAIL ASM; COMMON					
	8-98011-888-2		1103-		01	A
216	--- BOLT; EYE					
	5-15759-003-0		1103-		01	A (A)
	8-97351-388-0		1103-		01	A (B)
	8-98043-033-0		1103-		01	A (C)

https://truckmanualshub.com/

0-40 FUEL INJECTION SYSTEM


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A 4HK1-TCC ENG(RDV)
219	--- GASKET						
		1-09623-593-0		1103-		01	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=94.6
226	--- PIPE; FUEL						
		8-98126-332-0		1103-		01	A
282	--- BRACKET; COMMON RAIL						
		8-98157-115-0		1103-		01	A
283	--- BOLT; COMMON RAIL						
		0-28050-825-0		1103-		01	A M8X25 FLANGE
288	--- GASKET						
		1-15641-046-0		1103-		01	A ID=11 OD=16.3
289	--- LIMITER; FUEL PRESS						
		8-98032-549-0		1103-		01	A
290	--- SENSOR; PRESS						
		8-98119-790-0		1103-		01	A
329	--- GASKET; SENSOR, FUEL TEMP						
		9-09566-110-0		1103-		01	A
354	--- BOLT; FUEL PIPE						
		0-28050-816-0		1103-		02	A M8X16 FLANGE
377	--- BRACKET; HARNESS						
		8-97310-438-1		1103-		01	A (A)
		8-97379-783-1		1103-		01	A (B)
382	--- KEY; DRIVE SHAFT						
		8-97375-384-0		1103-		01	A
424	--- OVERHAUL KIT; SUPPLY PUMP						
		8-98145-501-0		1103-		01	A

https://truckmanualshub.com/

0-42 FUEL PUMP AND PIPE

FIG-NO.

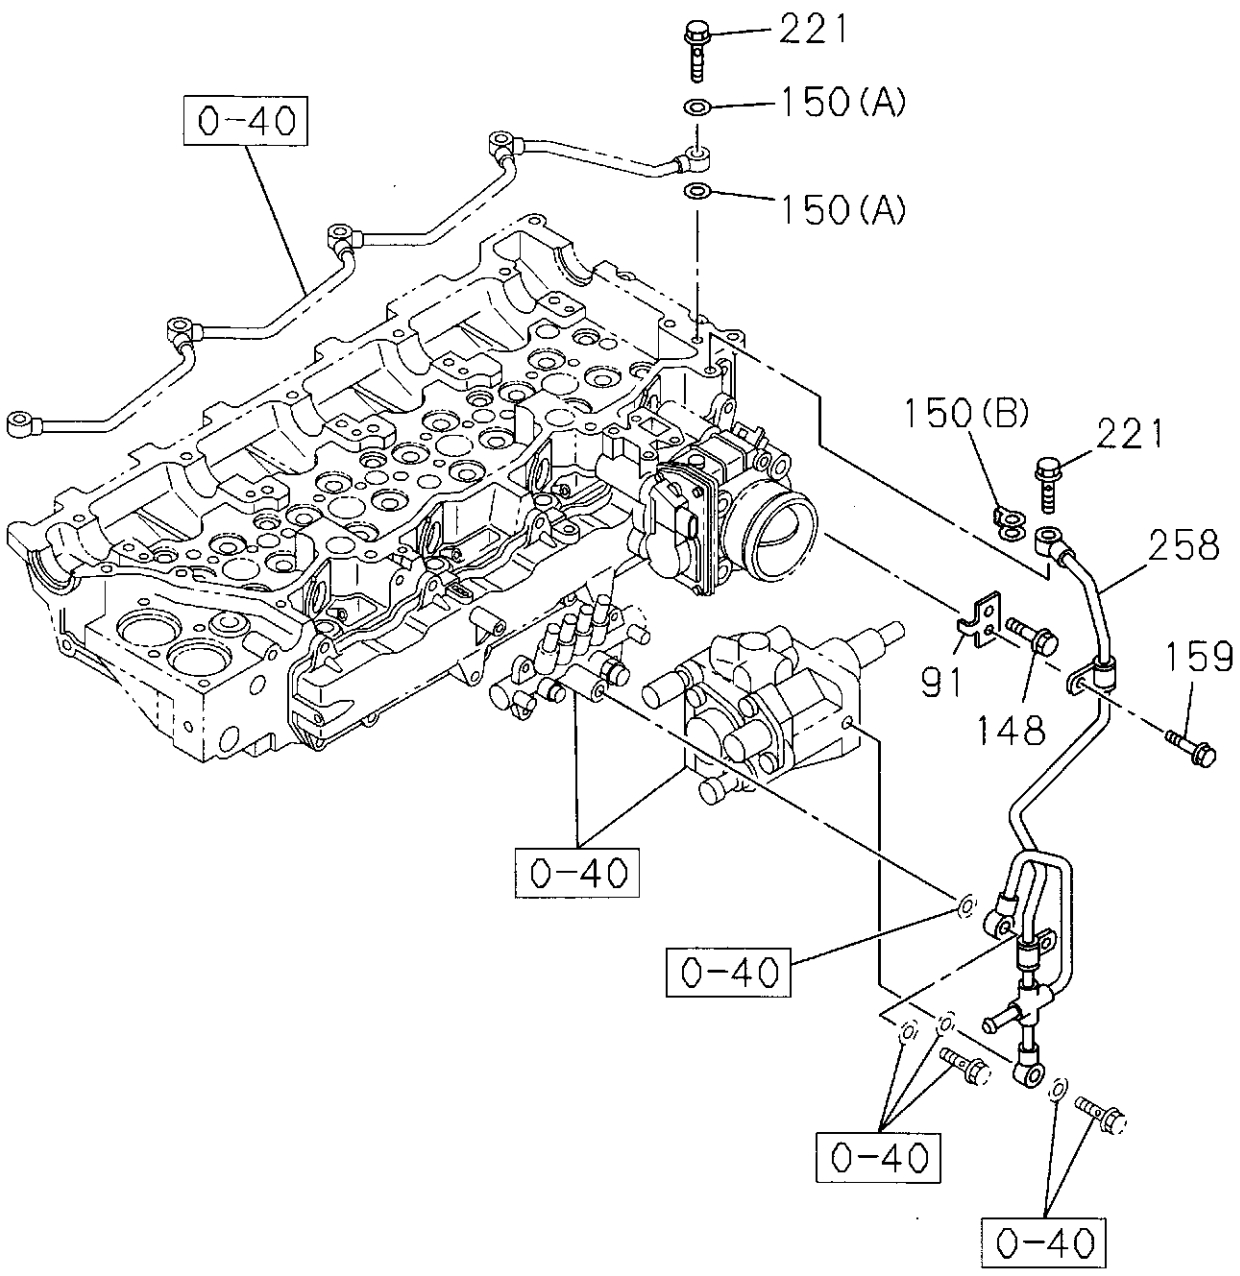

https://truckmanualshub.com/


FUEL PUMP AND PIPE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
91	--- BRACKET; FUEL PIPE TO INL MANIF					
	8-98033-979-0		1103-		01	A
148	--- BOLT; BRKT					
	0-28050-612-0		1103-		01	A M6X12 FLANGE
150	--- GASKET; FUEL PIPE					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
	1-09630-083-0		1103-		02	A (A) ID=10.2 OD=15.2
	8-98079-755-0		1103-		01	A (B) ID=10.2 OD=17
159	--- BOLT; CLIP					
	0-28050-612-0		1103-		01	A M6X12 FLANGE
	0-28050-616-0		1103-		01	A M6X16 FLANGE IDN
221	--- BOLT; FUEL PIPE					
	8-94396-711-0		1103-		02	A M10X21 FLANGE
258	--- PIPE ASM; FUEL, LEAK OFF					
	8-98055-815-1		1103-		01	A

https://truckmanualshub.com/

0-50 OIL COOLER AND OIL FILTER

FIG-NO.

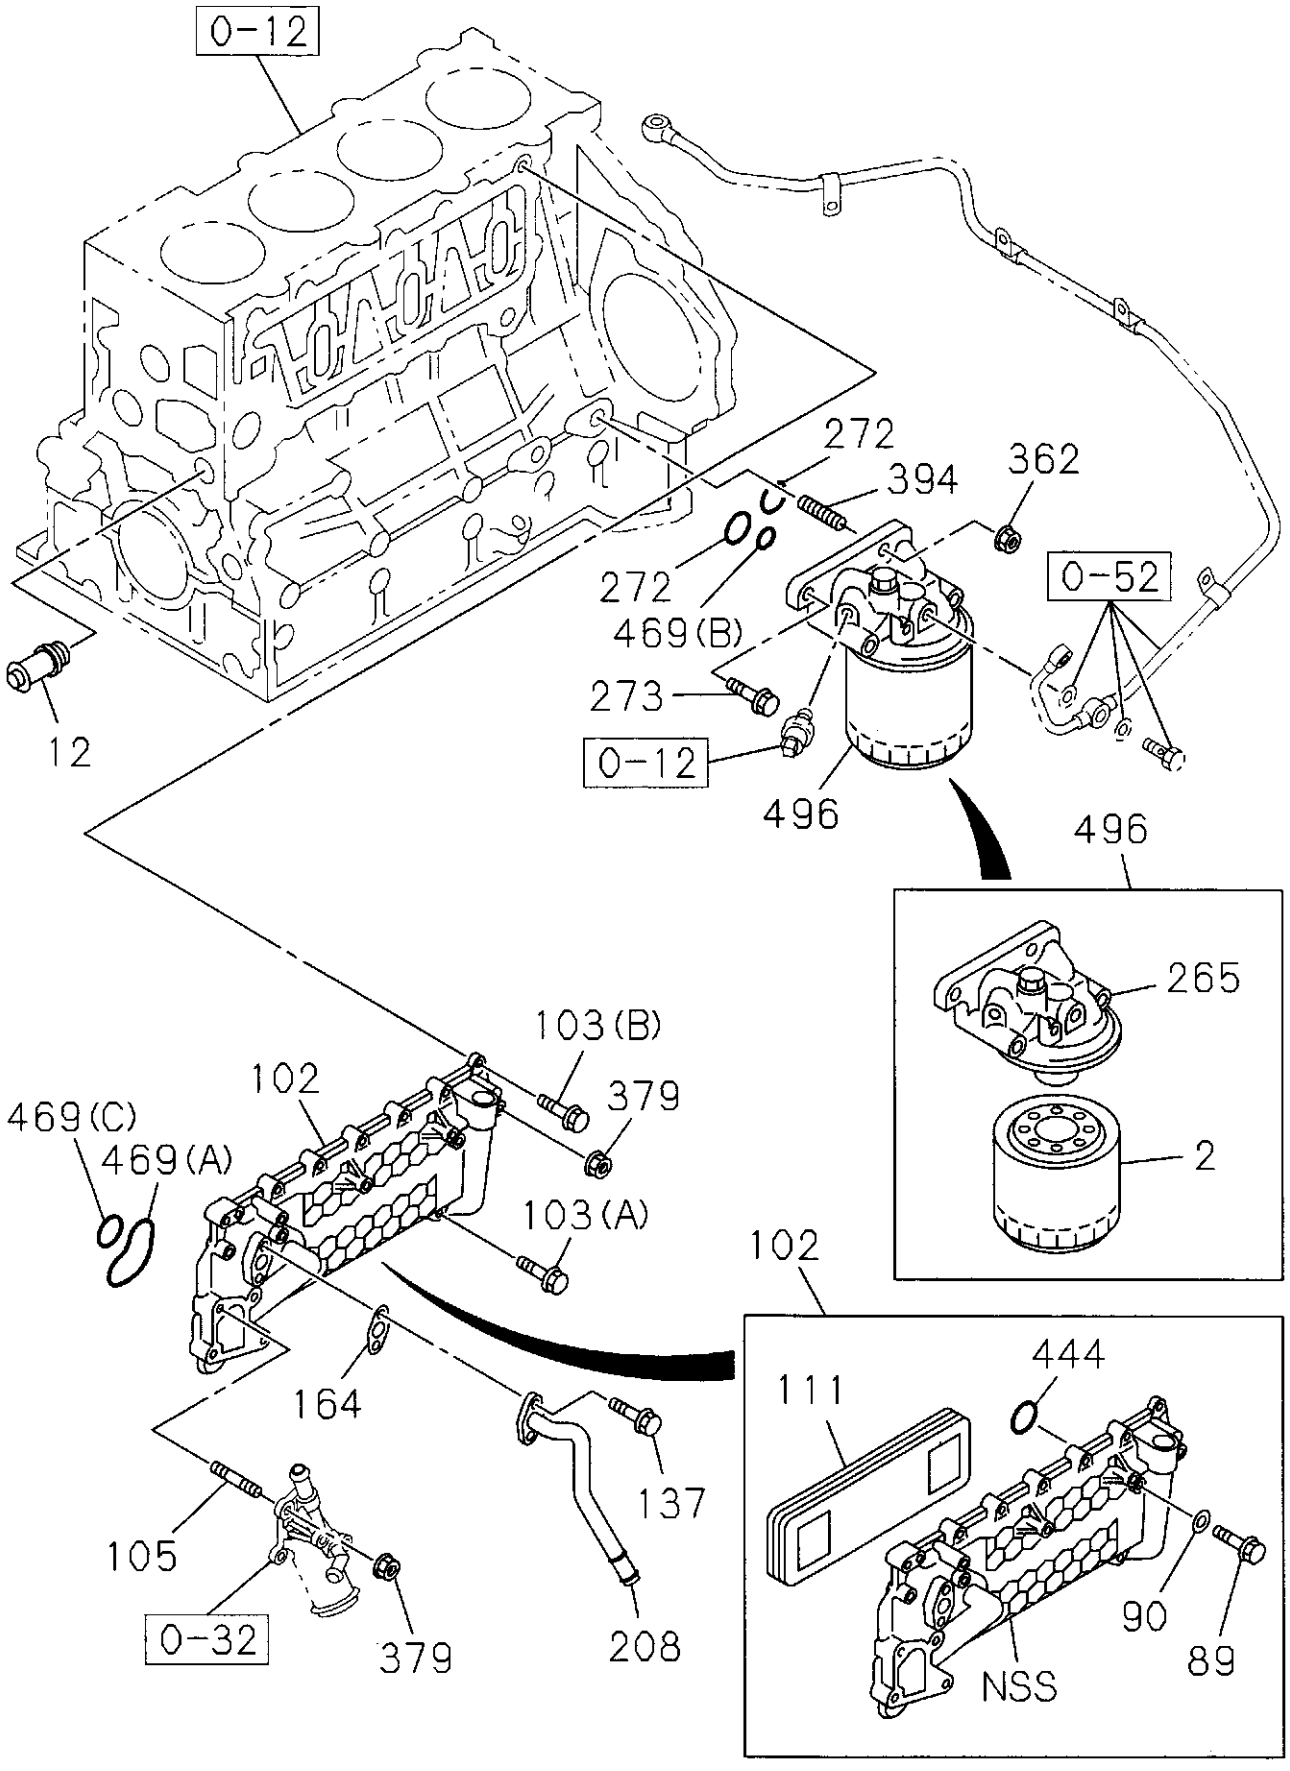

https://truckmanualshub.com/

OIL COOLER AND OIL FILTER

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
2	-A- ELEMENT; OIL FILTER					
	8-97148-270-1		1103-		01	A
12	--- VALVE ASM; BYPASS					
	8-97013-566-2		1103-		01	A
89	--- BOLT; ELEMENT TO CASE					
	0-28050-816-0		1103-		04	A M8X16 FLANGE
90	--- GASKET; BOLT, OIL COOLER					
	1-21729-043-0		1103-		04	A IDN
102	--- COOLER ASM; OIL					
	8-98085-312-3		1103-		01	A
103	--- BOLT; OIL COOLER					
	0-28050-820-0		1103-		08	A (A) M8X20 FLANGE
	0-28050-835-0		1103-		08	A (B) M8X35 FLANGE
105	--- STUD; OIL COOLER					
	8-97016-314-0		1103-		03	A M8X52 L=63
111	--- CORE; OIL COOLER					
	8-97334-100-2		1103-		01	A
137	--- BOLT					
	0-28650-820-0		1103-		04	A M8X20 FLANGE IDN
164	--- GASKET; HTR PIPE					ALSO INCLUDED IN GASKET SET(ENGINE).
	8-97146-684-0		1103-		01	A
208	--- PIPE; WATER, HTR					
	8-97146-519-0		1103-		01	A
265	--- BODY; OIL FILTER					
	8-97096-677-4		1103-		01	A

https://truckmanualshub.com/

0-50 OIL COOLER AND OIL FILTER


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
272	--- GASKET; OIL FILTER TO C/BL						
	8-94399-399-0		1103-		02	A	ALSO INCLUDED IN GASKET SET(ENGINE). ID=22.1
273	--- BOLT; OIL FILTER						
	0-59331-030-0		1103-		03	A	M10X30
362	--- NUT; OIL FILTER						
	0-91180-110-0		1103-		01	A	M10 FLANGE
379	--- NUT; OIL COOLER						
	0-91180-108-0		1103-		03	A	M8 FLANGE
394	--- STUD; OIL FILTER						
	0-49241-025-0		1103-		01	A	M10X25 L=48.5
444	--- GASKET; ELEMENT TO BODY						
	8-97384-130-0		1103-		02	A	
469	--- GASKET; OIL COOLER TO C/BL						
	8-94338-878-1		1103-		01	A	ALSO INCLUDED IN GASKET SET(ENGINE). (A)
	8-94399-339-0		1103-		01	A	(B) ID=9.8
	8-98045-447-0		1103-		01	A	(C) OD=30.2 W/PLATE
496	--- FILTER ASM; OIL						
	8-97148-268-3		1103-		01	A	

https://truckmanualshub.com/

0-51 OIL PUMP AND OIL STRAINER

FIG-NO.

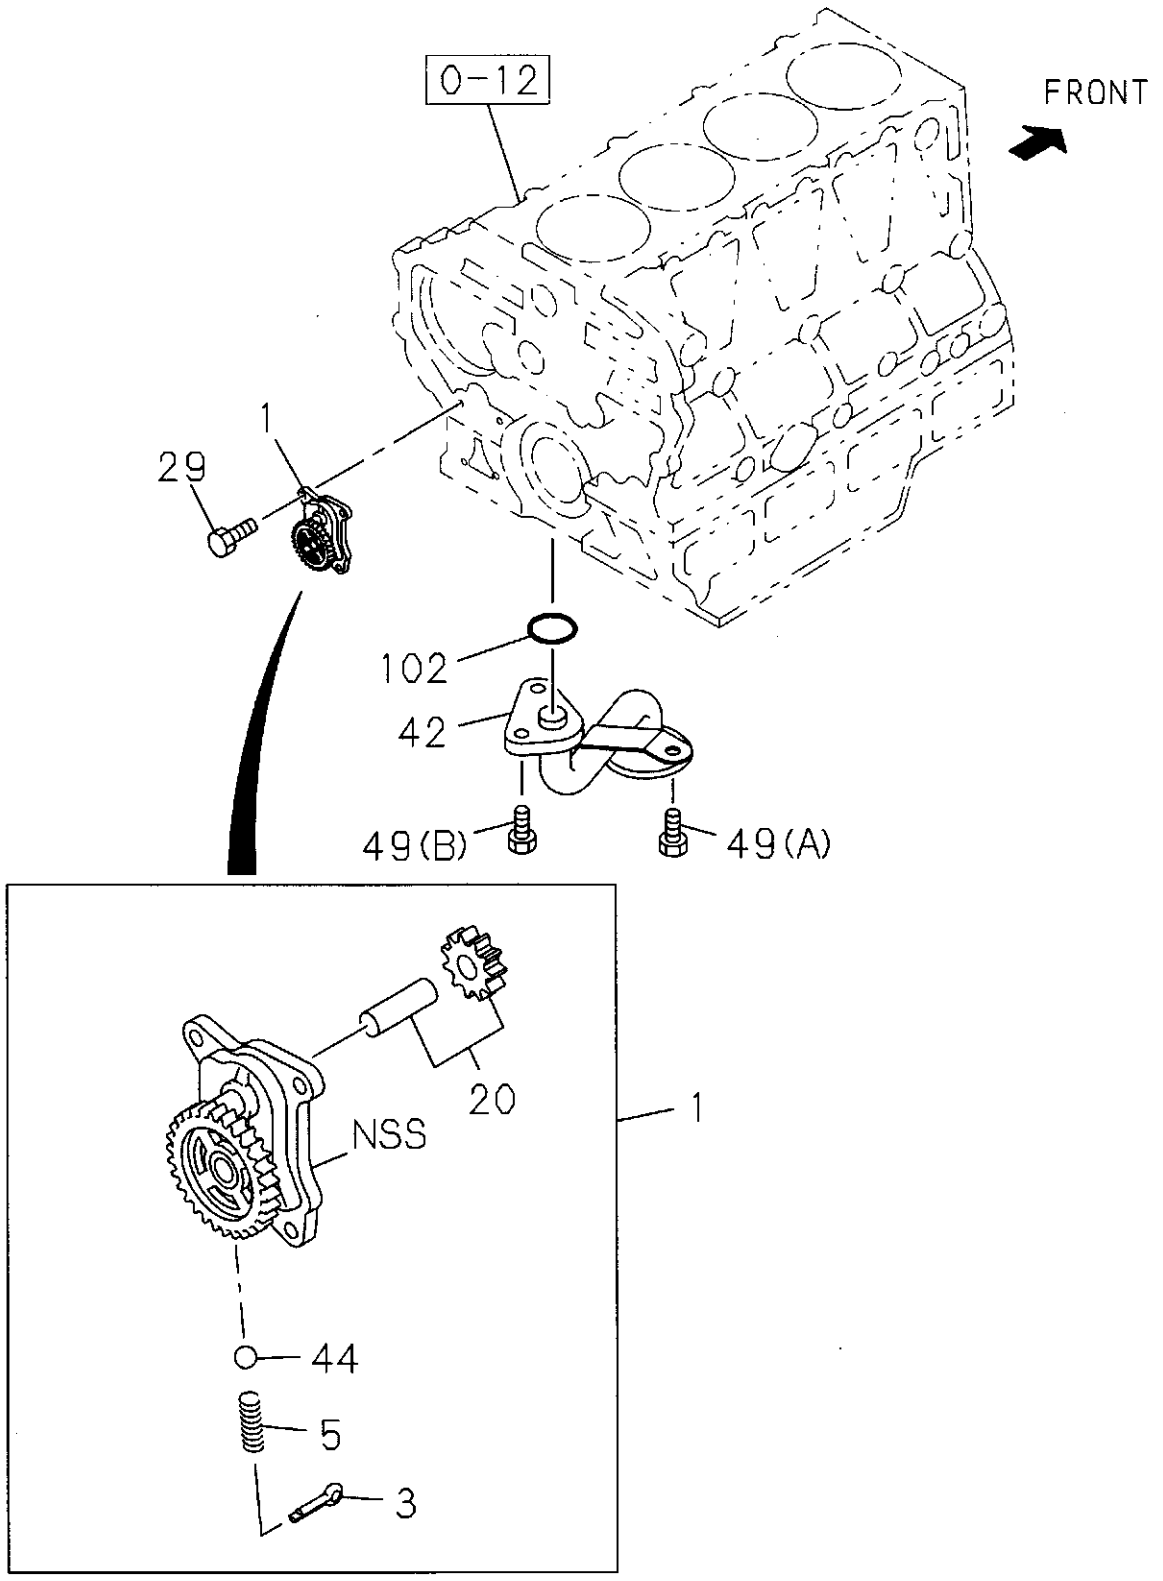

https://truckmanualshub.com/


OIL PUMP AND OIL STRAINER

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- PUMP ASM; OIL					
	8-98017-585-1		1103-		01	A
3	--- PIN; SPLIT					
	9-08104-030-0		1103-		01	A L=30
5	--- SPRING; COIL					
	5-09580-098-0		1103-		01	A
20	--- GEAR; DRIVE, OIL PUMP					
	8-98059-192-0		1103-		01	A
29	--- BOLT; OIL PUMP					
	0-28060-825-0		1103-		02	A M8X25 FLANGE
	0-28060-830-0		1103-		02	A M8X30 FLANGE
42	--- STRAINER; OIL, OIL PUMP					
	8-97373-119-0		1103-		01	A
44	--- BALL; RELIEF VLV					
	5-09843-003-0		1103-		01	A
49	--- BOLT; STRAINER, OIL PUMP					
	0-28060-816-0		1103-		02	A (B) M8X16 FLANGE
	8-97071-956-0		1103-		01	A (A) M10X80
102	--- GASKET; STRAINER					ALSO INCLUDED IN GASKET SET(ENGINE).
	8-94399-398-0		1103-		01	A ID=24.5

https://truckmanualshub.com/

0-52 OIL AND VACUUM PIPING; ENGINE

FIG-NO.

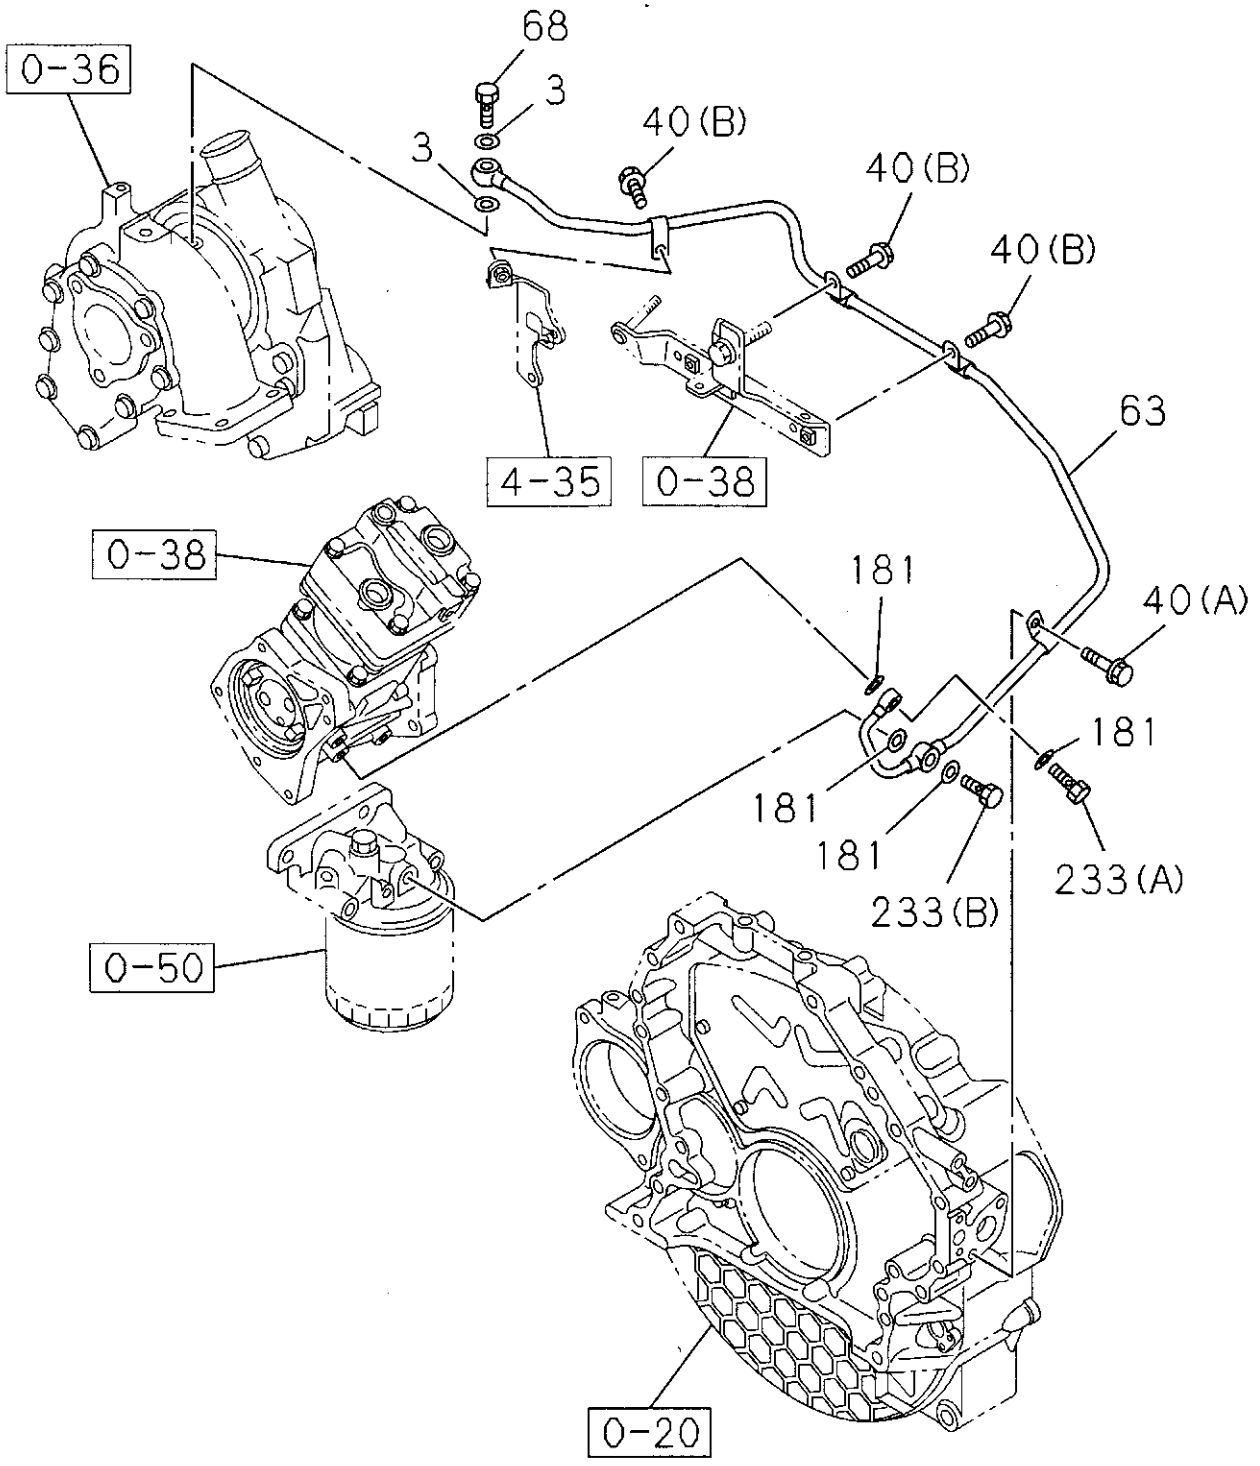

https://truckmanualshub.com/


OIL AND VACUUM PIPING; ENGINE

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
3	--- GASKET; EYE BOLT, OIL PIPE						
		9-09571-410-0		1103-		02	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=10.2 OD=16.0
40	--- BOLT; OIL PIPE						
		0-28050-812-0		1103-		01	A (A) M8X12 FLANGE
		0-28050-820-0		1103-		03	A (B) M8X20 FLANGE
63	--- PIPE; OIL, TURBOCHARGER FEED						
		8-98069-427-0		1103-		01	A
68	--- BOLT; EYE, OIL PIPE, TURBOCHARGER SIDE						
		8-98037-825-0		1103-		01	A M10X26
181	--- GASKET						
		1-09630-083-0		1103-		04	A ALSO INCLUDED IN GASKET SET(ENGINE). ID=10.2 OD=15.2
233	--- BOLT; EYE						
		1-09675-028-0		1103-		01	A (A) M10X22
		8-98037-823-0		1103-		01	A (B) M10X28

https://truckmanualshub.com/

0-57 EMISSION PIPING

FIG-NO.

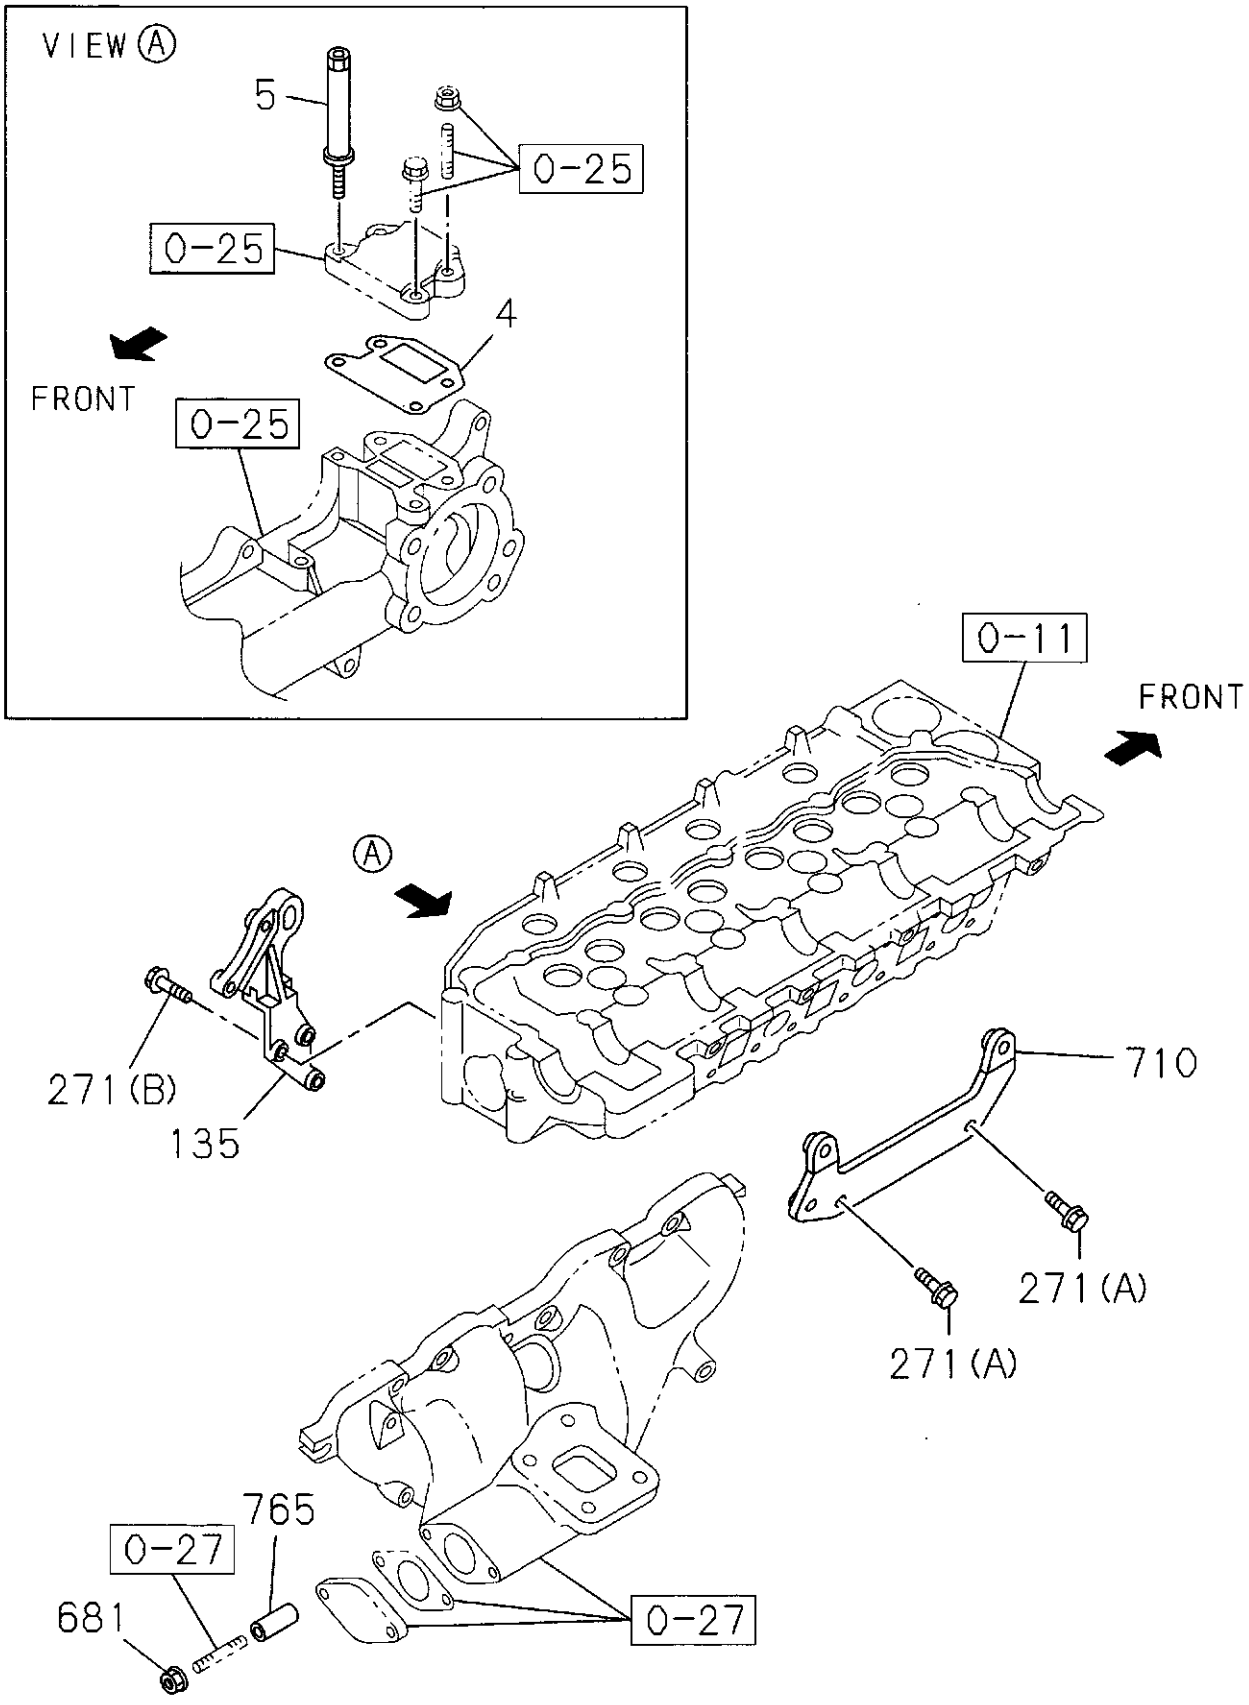

https://truckmanualshub.com/


EMISSION PIPING


KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
4	--- GASKET; EGR VLV					
	8-97306-040-0		1103-		01	A ALSO INCLUDED IN GASKET SET(ENGINE).
5	--- ADAPTER ASM					
	8-97377-804-0		1103-		01	A
135	--- BRACKET; EGR					
	8-97310-498-2		1103-		01	A
271	--- BOLT; BRKT					
	0-28050-820-0		1103-		02	A (A) M8X20 FLANGE
	0-28151-230-0		1103-		03	A (B) M12X30 FLANGE
681	--- NUT; EGR PIPE					
	0-91180-208-0		1103-		02	A M8 FLANGE
710	--- BRACKET; EGR COOLER					
	8-98079-255-0		1103-		01	A
765	--- SPACER; EGR PIPE					
	8-94225-562-0		1103-		02	A


https://truckmanualshub.com/

0-60 ENGINE ELECTRICAL CONTROL PARTS

FIG-NO. STARTER AND GENERATOR

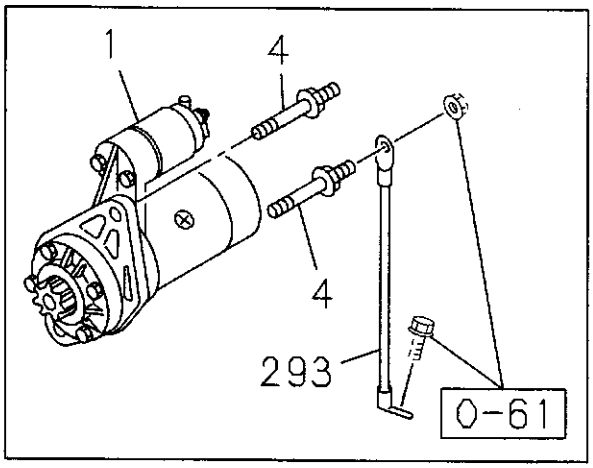

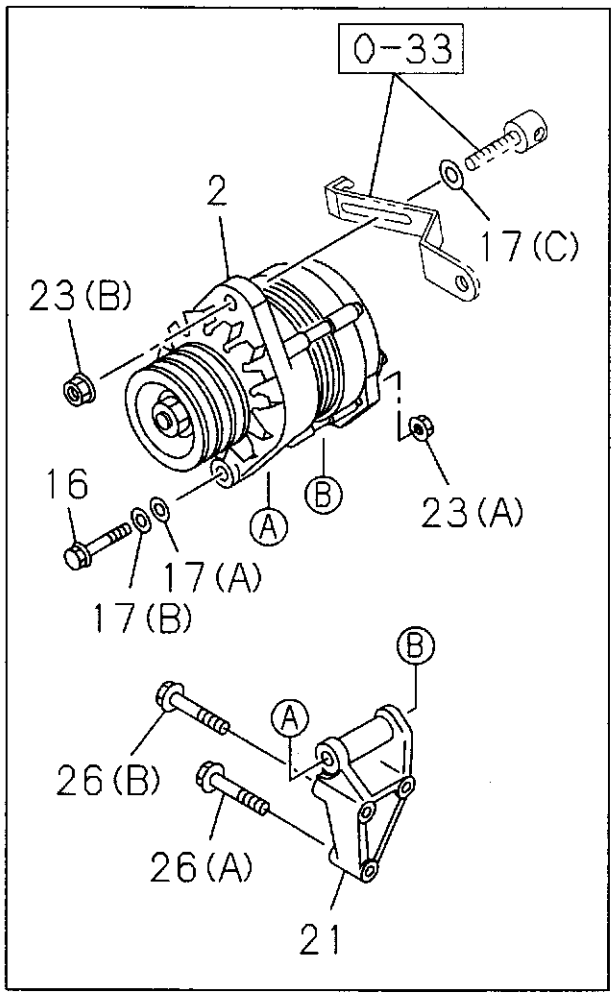

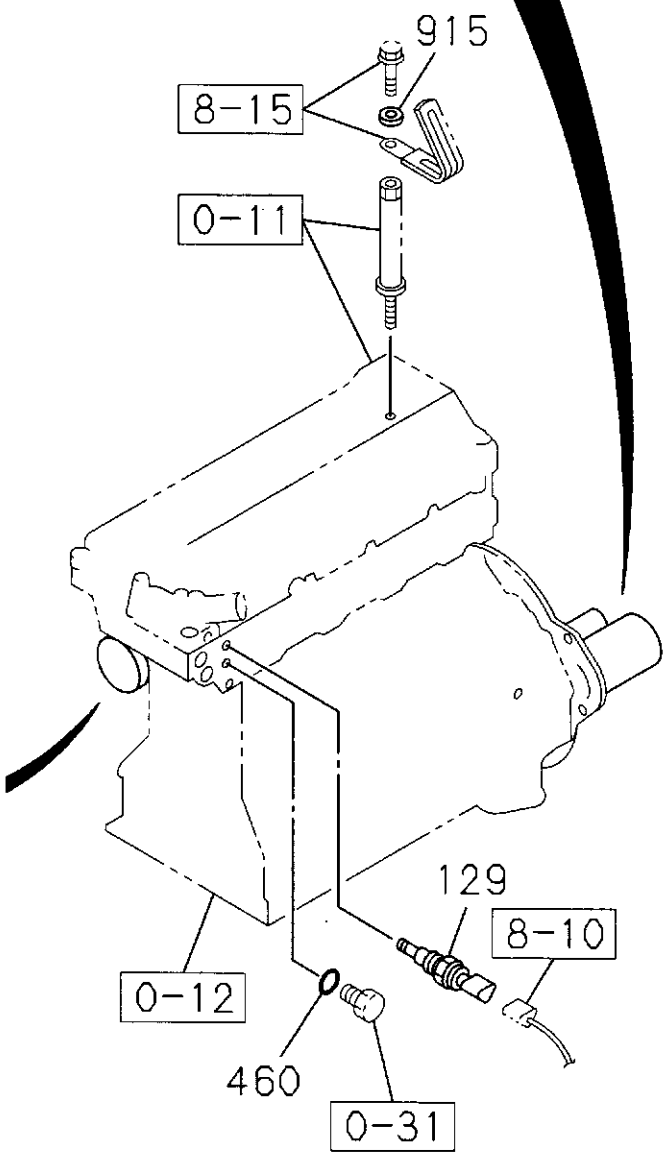



https://truckmanualshub.com/

ENGINE ELECTRICAL CONTROL PARTS

RELAY ; FRAME HARNESS

FIG-NO.

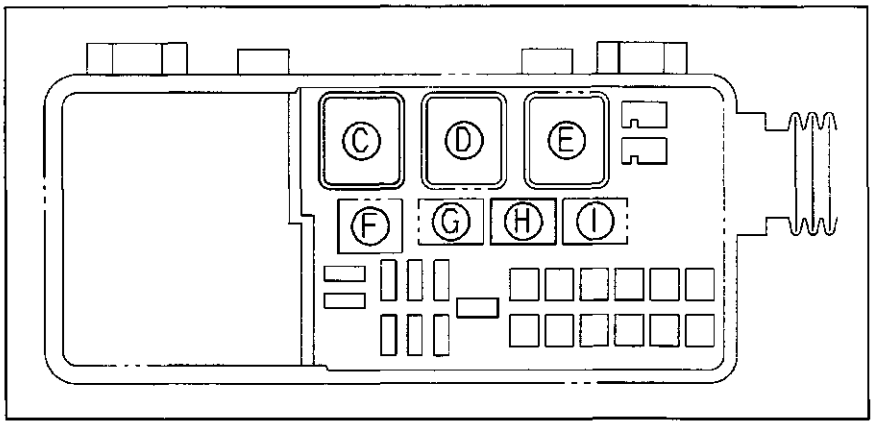

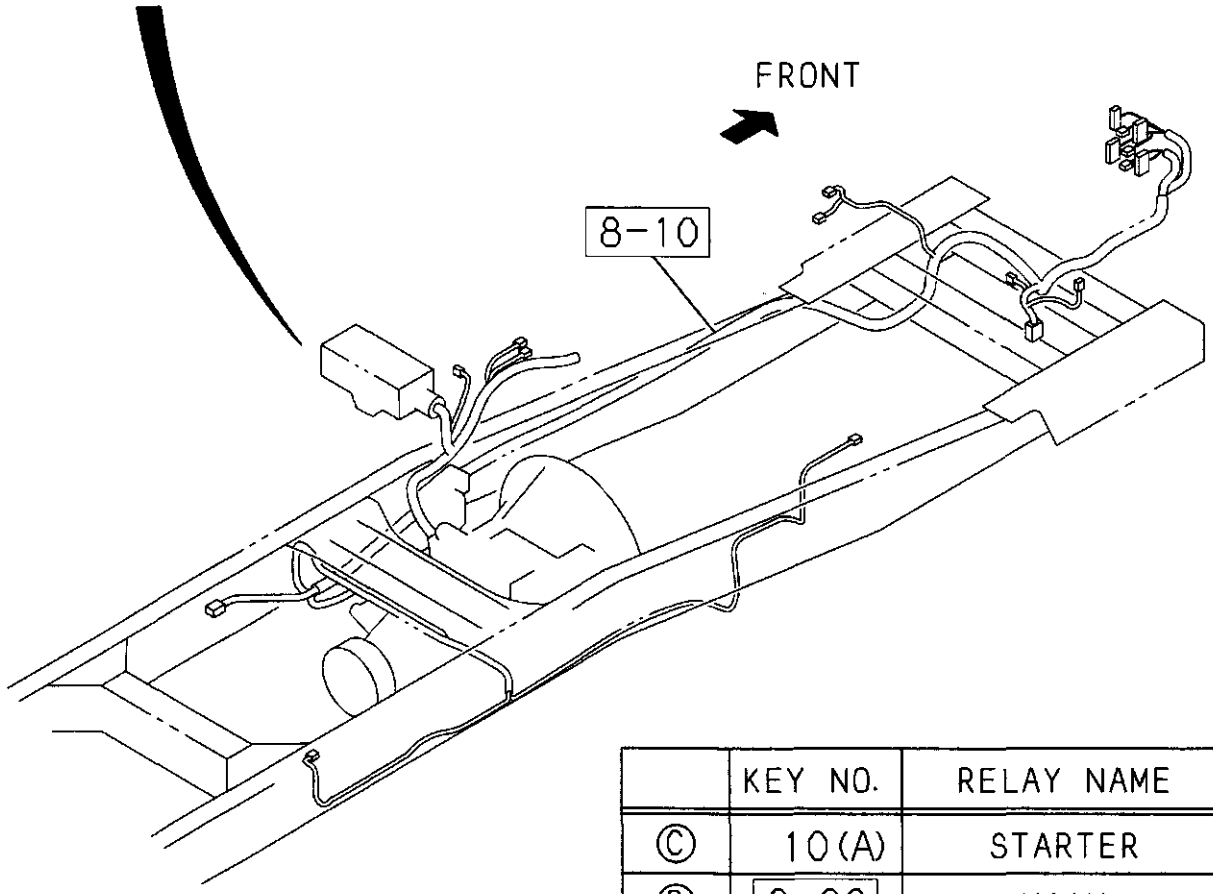


	KEY NO.	RELAY NAME
Ⓒ	10(A)	STARTER
Ⓓ	8-28	MAIN
Ⓔ	—	—
Ⓕ	—	—
Ⓖ	—	—
Ⓗ	10(B)	STARTER
Ⓘ	—	—


https://truckmanualshub.com/


0-60 ENGINE ELECTRICAL CONTROL PARTS

FIG-NO. FIXING;ENG CONTROL UNIT

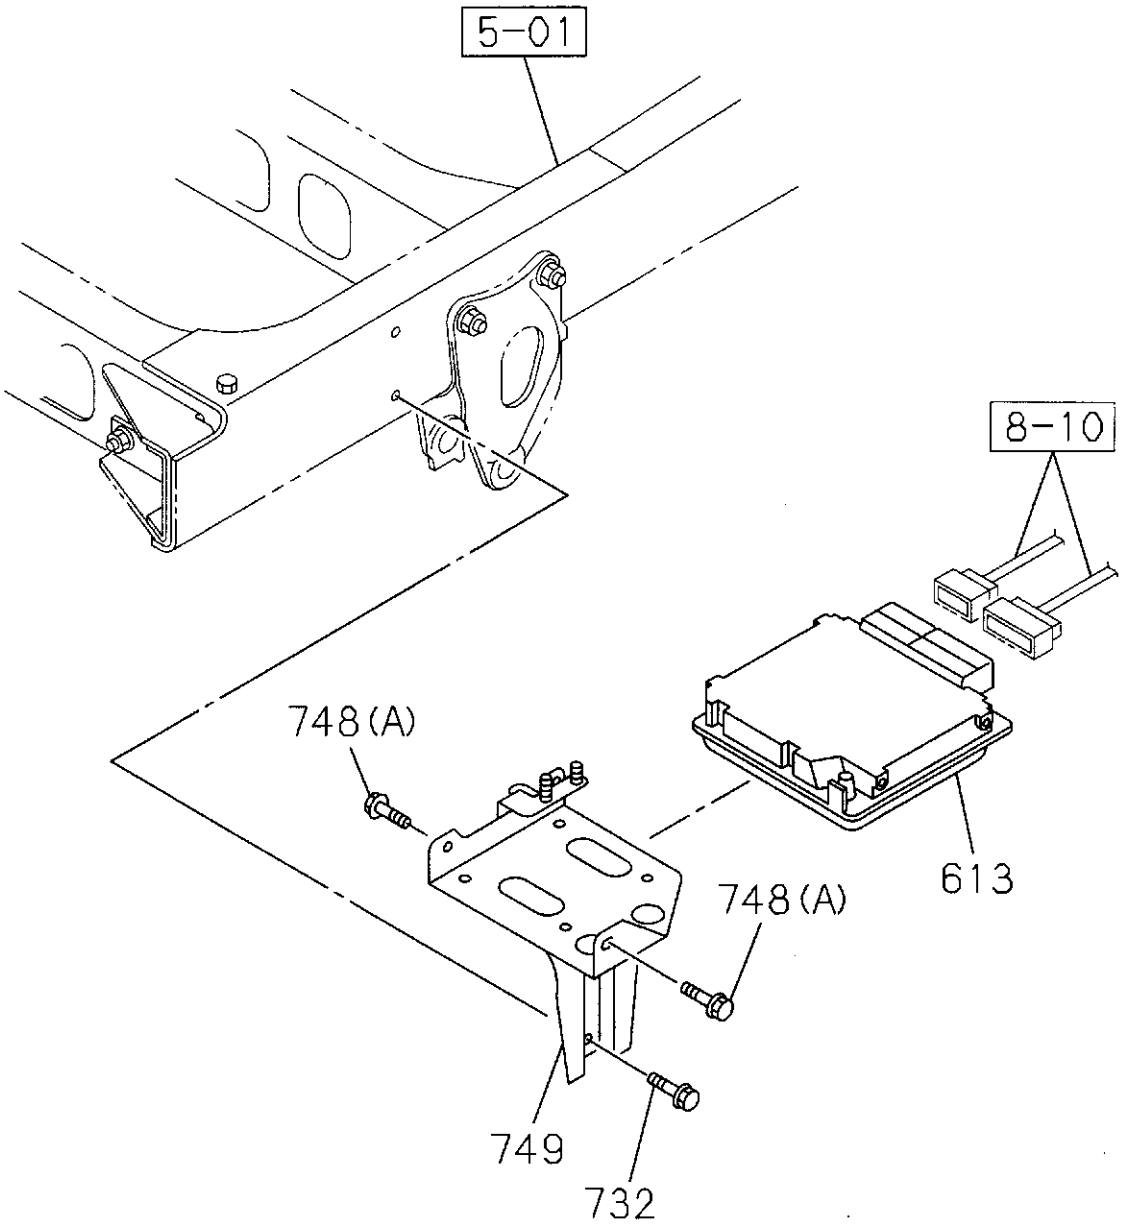

https://truckmanualshub.com/

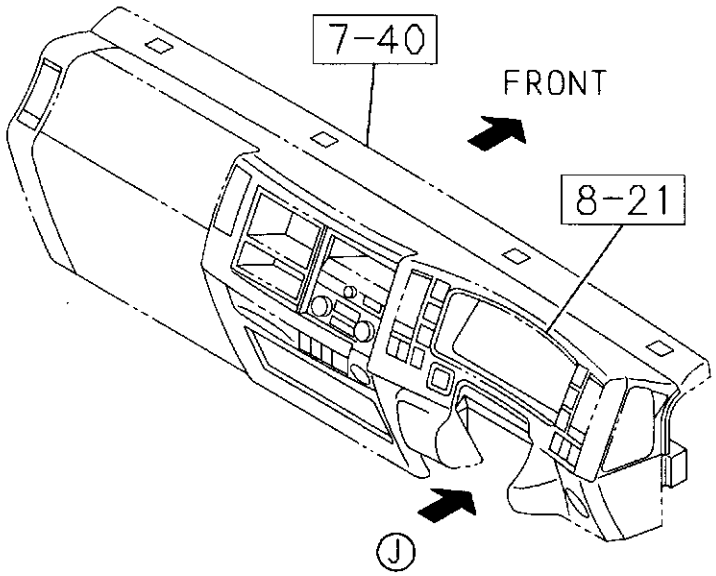

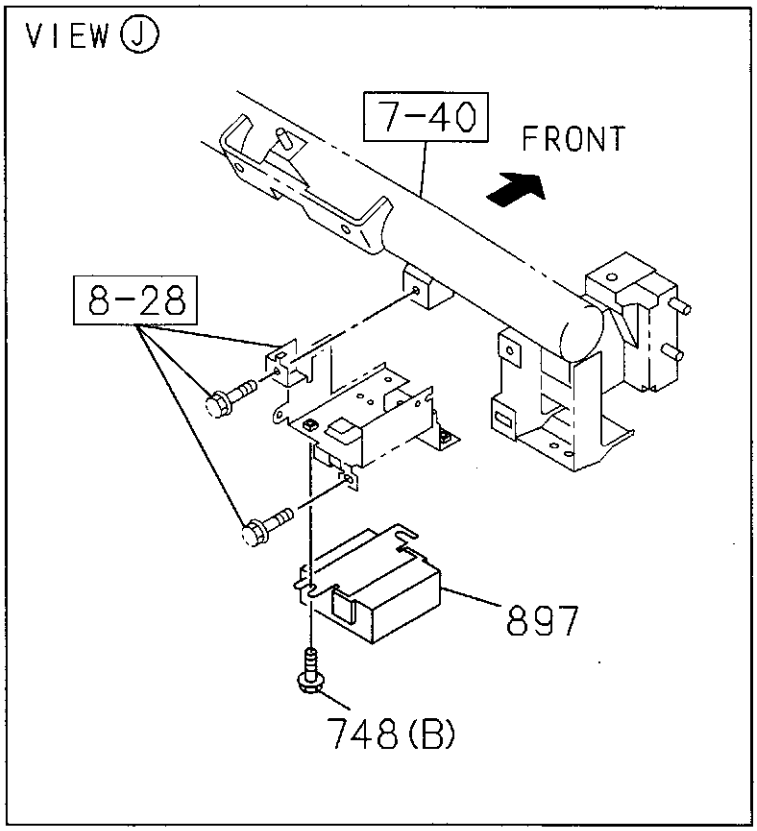

https://truckmanualshub.com/

0-60 ENGINE ELECTRICAL CONTROL PARTS

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
1	-D- STARTER ASM						
	8-98009-043-2		1103-		01	A	SEE FIG-NO 0-65 FOR COMPONENT. 24V 4.5KW HITACHI
2	-D- GENERATOR ASM						
	8-98013-455-1		1103-		01	A	SEE FIG-NO 0-66 FOR COMPONENT. 24V 50A NIKKO
4	--- BOLT; STARTER						
	8-98029-095-0		1103-		02	A	M10X15,M14X82 L=110
10	--- RELAY; STARTER						
	8-97264-947-0		1103-		01	A	(B) 24V 50A
	8-98167-173-0		1103-		01	A	(A) 24V 10A
16	--- BOLT; GEN						
	1-09000-133-1		1103-		01	A	M14X135
17	--- WASHER; PL, GEN						
	0-91510-514-0		1103-		01	A	(A) ID=14.2
	0-91610-514-0		1103-		01	A	(B) ID=15
	9-09160-712-0		1103-		01	A	(C) ID=12.5 OD=32
21	--- BRACKET; GEN						
	8-97381-404-0		1103-		01	A	
23	--- NUT; GEN						
	0-91110-514-0		1103-		01	A	(A) M14
	0-91180-112-0		1103-		01	A	(B) M12 FLANGE IDN

https://truckmanualshub.com/


ENGINE ELECTRICAL CONTROL PARTS

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
26	--- BOLT; GEN BRKT						
		0-28151-050-0		1103-		01 A	(A) M10X50 FLANGE
		0-28151-070-0		1103-		02 A	(B) M10X70 FLANGE
129	--- SENSOR; GLOW PLUG, THERMO						
		8-98023-883-0		1103-		01 A	
293	--- CABLE; STARTER EARTH						
		8-97620-375-0		1103-		01 A	L=410
460	--- GASKET; PLUG						ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09630-086-0		1103-		01 A	ID=16.2
613	--- CONTROL UNIT; ENG						
		8-98182-780-0		1103-		01 A	
732	--- BOLT; BRKT						
		0-28651-030-0		1103-		02 A	M10X30 FLANGE
748	--- BOLT; CONT UNIT						
		0-28050-612-0		1103-		03 A	(A) M6X12 FLANGE
		0-28650-616-0		1103-		02 A	(B) M6X16 FLANGE
749	--- STAY; CONT UNIT						
		1-53194-594-1		1103-		01 A	
897	--- DRM						
		8-98013-144-7		1103-		01 A	
915	--- SPACER; HARNESS						
		5-11779-001-0		1103-		01 A	ID=8.4 OD=19

https://truckmanualshub.com/


0-61 BATTERY AND ENGINE ELECTRICAL PARTS

FIG-NO. WIRING; BATTERY CABLE

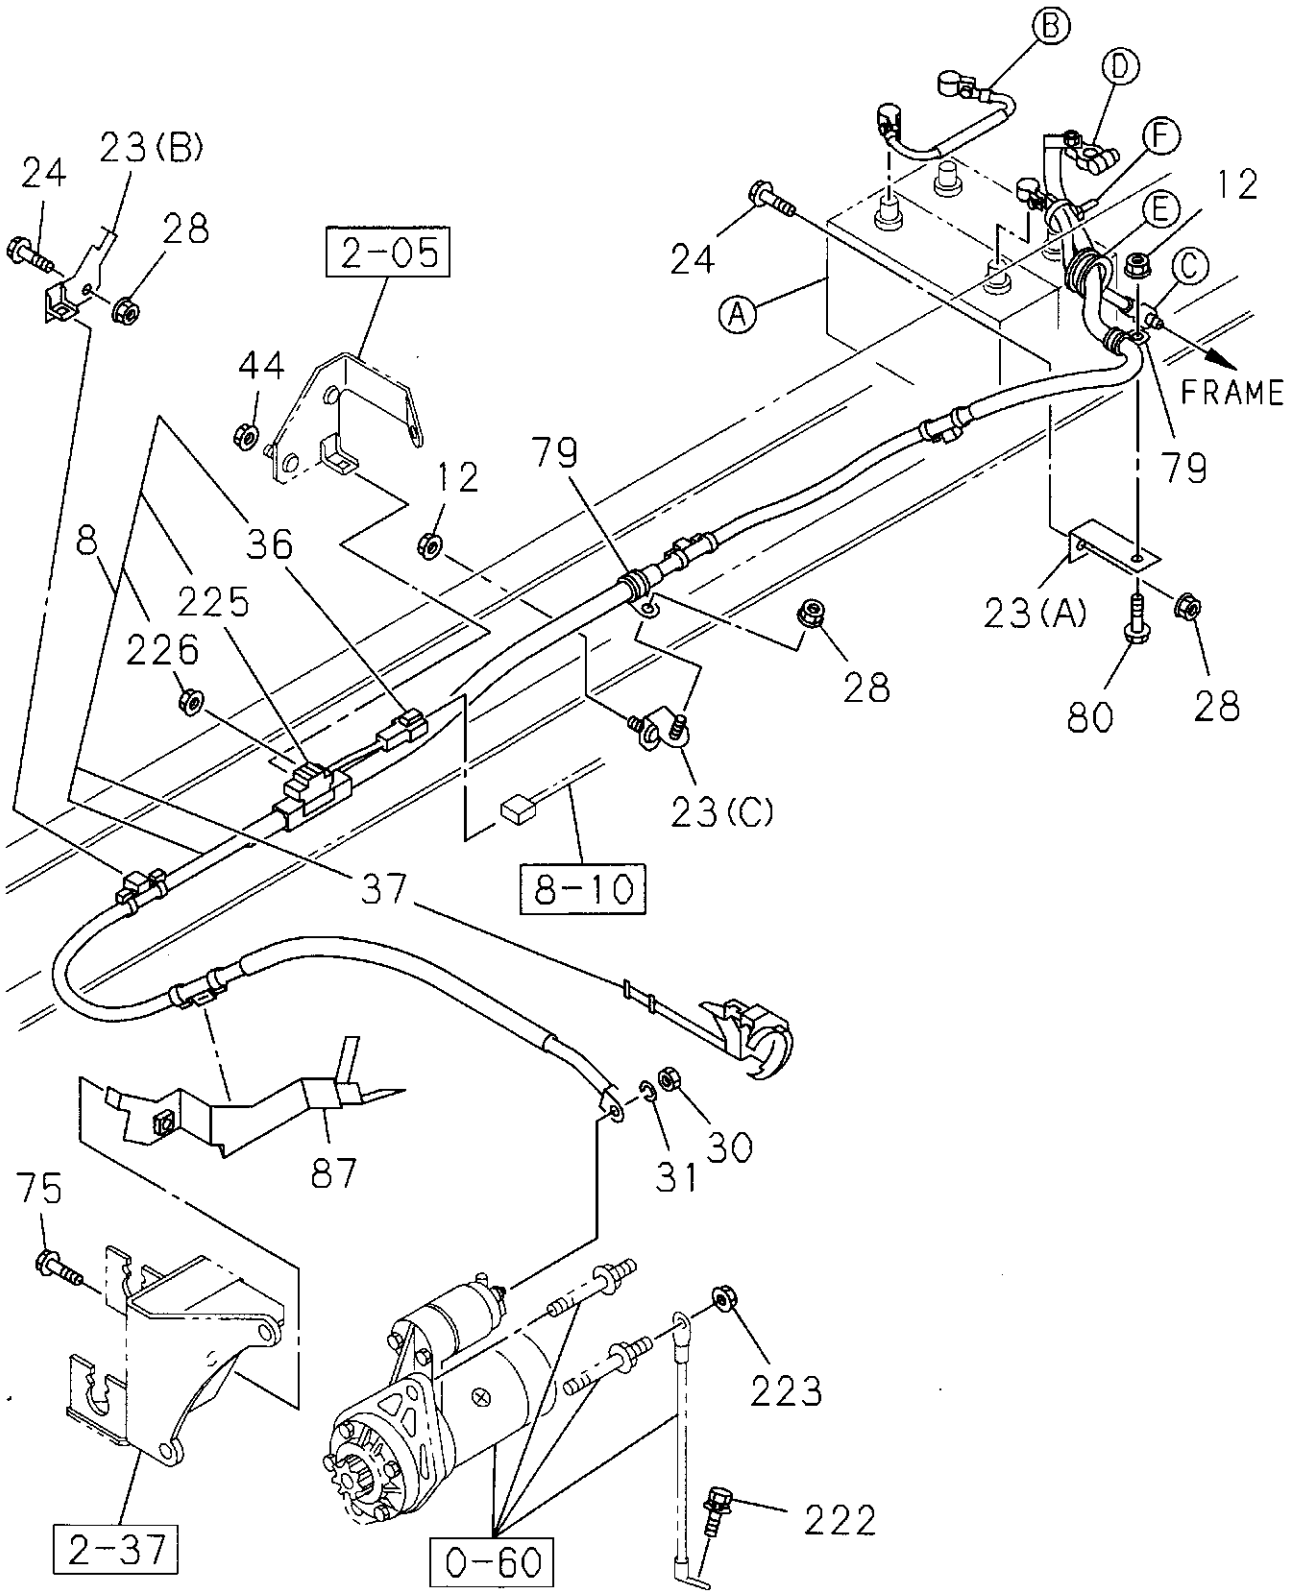


https://truckmanualshub.com/


Ⓐ

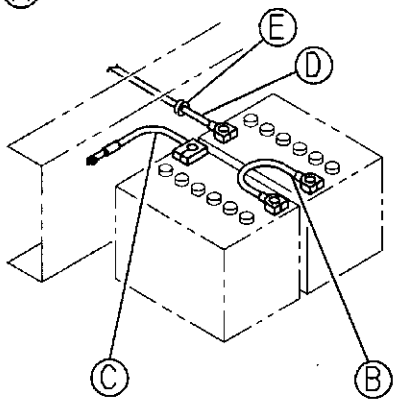


Ⓑ

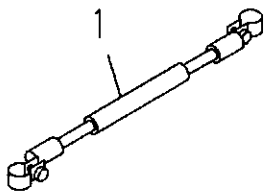


Ⓒ

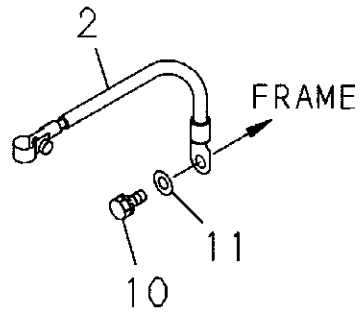


Ⓓ

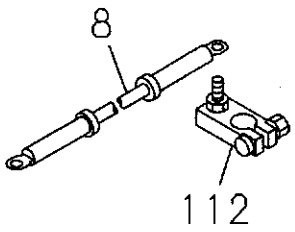


Ⓔ

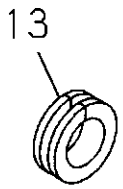

Ⓕ

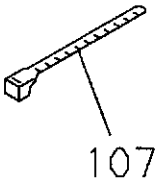

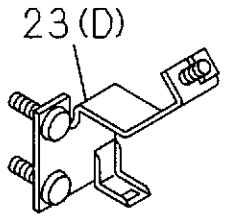

https://truckmanualshub.com/

0-61 BATTERY AND ENGINE ELECTRICAL PARTS

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- CABLE; BATTERY					
	8-98025-412-3		1103-		01	A L=280
2	--- CABLE; BATTERY					
	8-97619-727-1		1103-		01	A L=240
8	--- CABLE; BATTERY, STARTER					
	8-98171-731-1		1103-		01	A L=2385
10	--- BOLT; BATTERY CABLE CLIP					
	8-97087-205-0		1103-		01	A M10X25 W/LK&PL WASHER
11	--- WASHER; BATTERY CABLE EARTH					
	1-09503-265-0		1103-		01	A ID=10.5
12	--- NUT; BATTERY CABLE CLIP					
	0-91180-108-0		1103-		02	A M8 FLANGE
13	--- GROMMET; BATTERY CABLE					
	9-09956-256-2		1103-		01	A ID=28 OD=35 T=17
23	--- BRACKET; CABLE CLIP TO FRAME					
	1-82699-085-0		1103-		01	A (A) L=95
	8-98047-277-1		1103-		01	A (B)
	8-98051-381-2		1103-		01	A (C)
	8-98077-904-1		1103-		01	A (D)
24	--- BOLT; BRKT TO FRAME					
	0-28650-830-0		1103-		01	A M8X30 FLANGE
	0-28651-030-0		1103-		01	A M10X30 FLANGE

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
28	--- NUT; BRKT TO FRAME						
		0-91180-108-0		1103-		02	A M8 FLANGE
		0-91180-210-0		1103-		01	A M10 FLANGE
30	--- NUT; CABLE, STARTER TO BATTERY						
		0-91110-508-0		1103-		01	A M8 IDN
31	--- WASHER; LK, CABLE, STARTER TO BATTERY						
		0-91510-508-0		1103-		01	A ID=8.2
36	--- FUSIBLE LINK; BATTERY						
		8-97615-498-1		1103-		01	A
37	--- CAP; TERMINAL, BATTERY CABLE						
		8-98042-507-0		1103-		01	A
44	--- NUT; BRKT						
		0-91180-210-0		1103-		02	A M10 FLANGE
75	--- BOLT; BRKT						
		0-28650-820-0		1103-		01	A M8X20 FLANGE IDN
79	--- CLIP; BATTERY CABLE						
		8-98019-191-0		1103-		02	A ID=21 L=24
80	--- BOLT; BATTERY CABLE CLIP						
		0-28650-825-0		1103-		01	A M8X25 FLANGE IDN
87	--- BRACKET; HARNESS						
		8-98171-733-0		1103-		01	A
107	--- CLIP; BAND						
		5-09707-031-1		1103-		01	A L=140 IDN

https://truckmanualshub.com/

0-61 BATTERY AND ENGINE ELECTRICAL PARTS


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
112	--- TERMINAL; BATTERY					
	8-97365-771-0		1103-		01	A
222	--- BOLT; EARTH CABLE					
	8-97087-205-0		1103-		01	A M10X25 W/LK&PL WASHER
223	--- NUT; EARTH CABLE					
	0-91180-210-0		1103-		01	A M10 FLANGE
225	--- BLOCK; TERMINAL					
	8-98029-689-0		1103-		01	A
226	--- NUT; FUSIBLE LINK					
	8-94424-179-0		1103-		01	A M6 W/LK WASHER

https://truckmanualshub.com/

0-65 STARTER

FIG-NO.

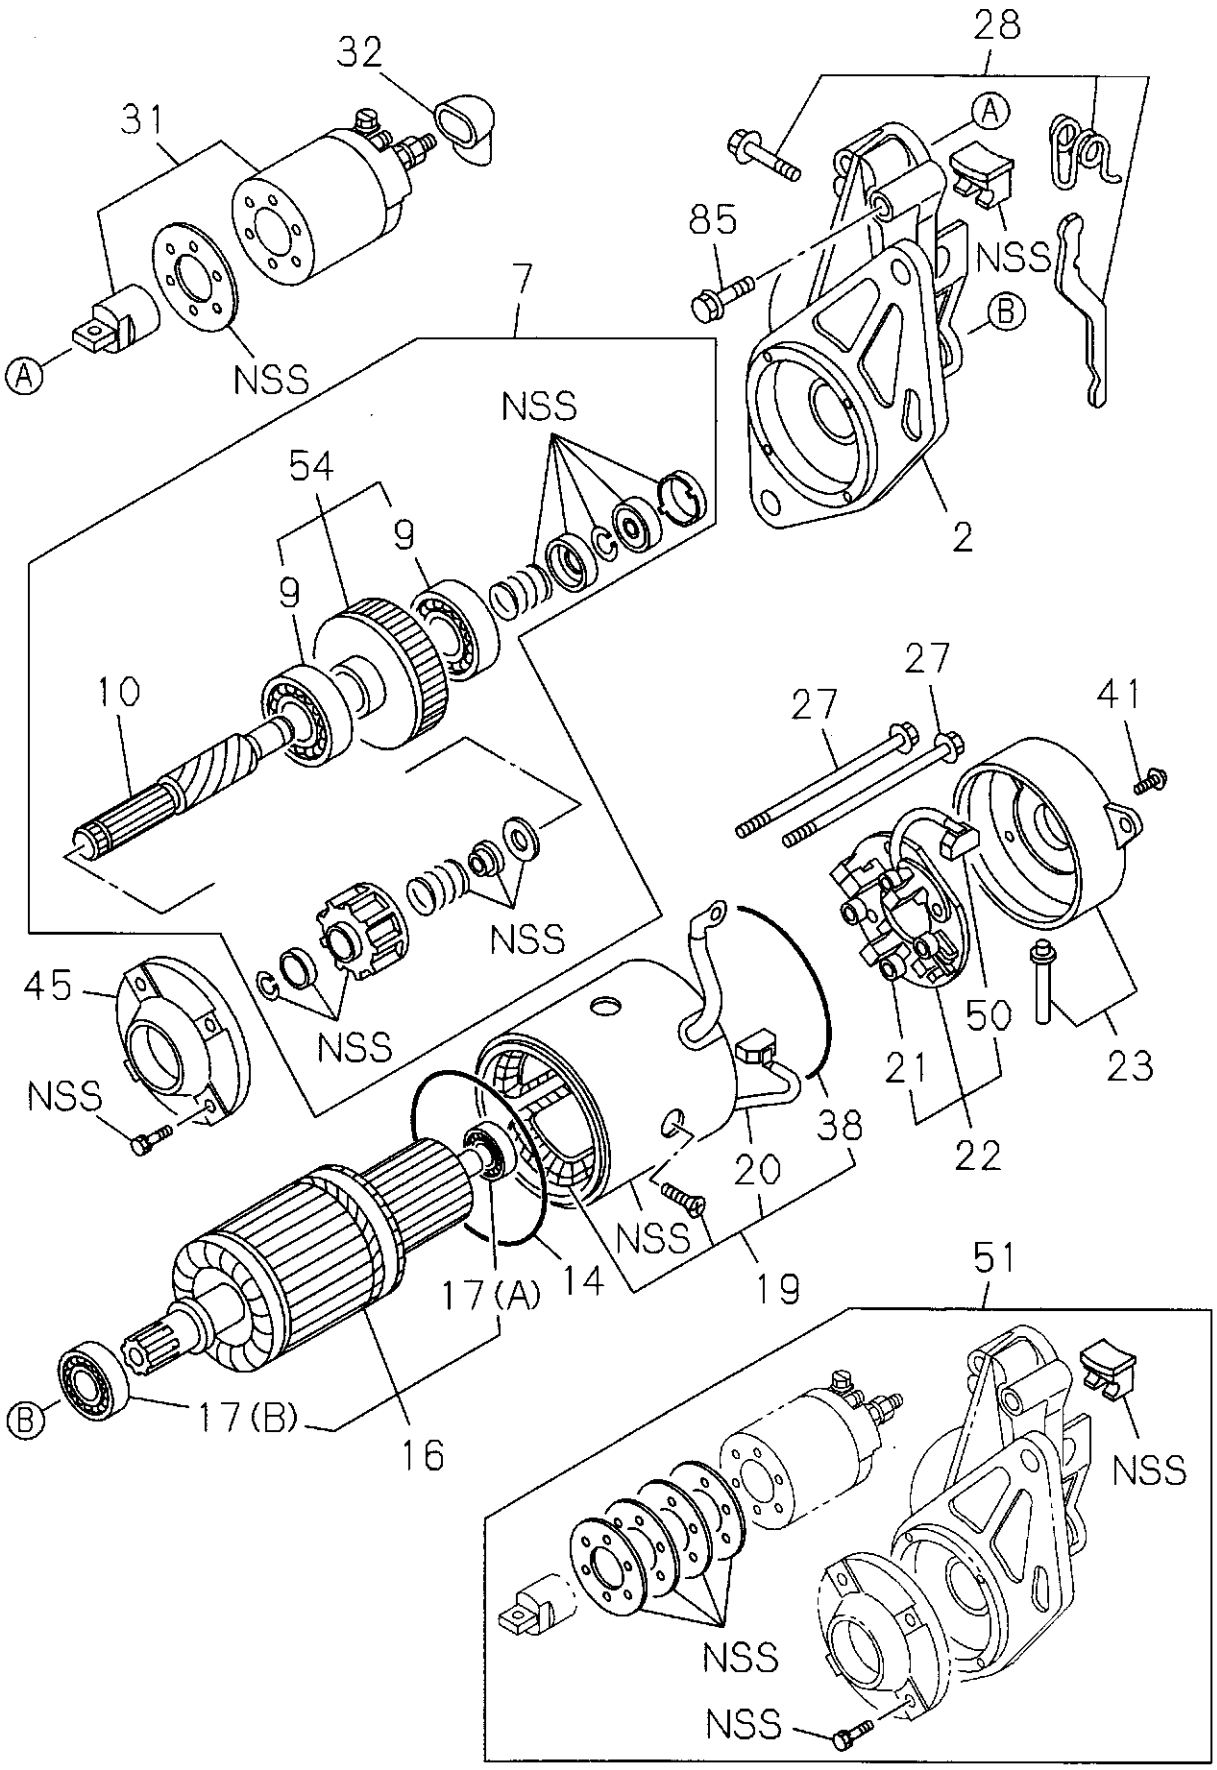

https://truckmanualshub.com/

STARTER

0-65

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	8980090432
2	--- CASE; PINION, STARTER	
	8-97329-348-0	01
7	--- CLUTCH ASM; PINION, STARTER	
	8-98159-732-0	01
9	--- BEARING; GEAR SHAFT STARTER	
	8-97025-673-0	02
10	--- SHAFT; GEAR STARTER	
	8-98159-734-0	01
14	--- GASKET; YOKE, STARTER	
	8-97377-691-0	01
16	--- ARMATURE; STARTER	
	8-97230-557-0	01
17	--- BEARING; ARMATURE, STARTER	
	8-94228-436-0	01 (A)
	8-97030-387-0	01 (B)
19	--- COIL; FIELD, STARTER	
	8-97377-688-0	01
20	--- BRUSH; (+), STARTER	
	8-97230-560-0	02
21	--- SPRING; BRUSH HOLDER STARTER	
	8-94152-972-0	04
22	--- HOLDER; BRUSH STARTER	
	8-97230-562-0	01
23	--- COVER; RR COVER STARTER	
	8-97377-689-0	01

https://truckmanualshub.com/

0-65 STARTER


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	8980090432
27	--- BOLT; THROUGH, STARTER	
	8-97192-423-0	02
28	--- LEVER; SHIFT, STARTER	
	8-98159-690-0	01
31	--- SWITCH; ENGAGE STARTER	
	8-97217-569-0	01
32	--- COVER; RUBBER, STARTER	
	8-97217-570-0	01
38	--- GASKET; RR COVER, STARTER	
	8-97230-559-0	01
41	--- SCREW; RR COVER, STARTER	
	8-97117-107-0	02
45	--- RETAINER; BEARING, STARTER	
	8-97030-401-0	01
50	--- BRUSH; (-), STARTER	
	8-97230-563-0	02
51	--- COVER SET; DUST ENGAGE SW STARTER	
	8-97377-690-0	01
54	--- CLUTCH; PINION, STARTER	
	8-97115-816-0	01
85	--- BOLT; ENGAGE SW FIX, STARTER	
	8-94408-500-0	02

https://truckmanualshub.com/

0-66 GENERATOR

FIG-NO.

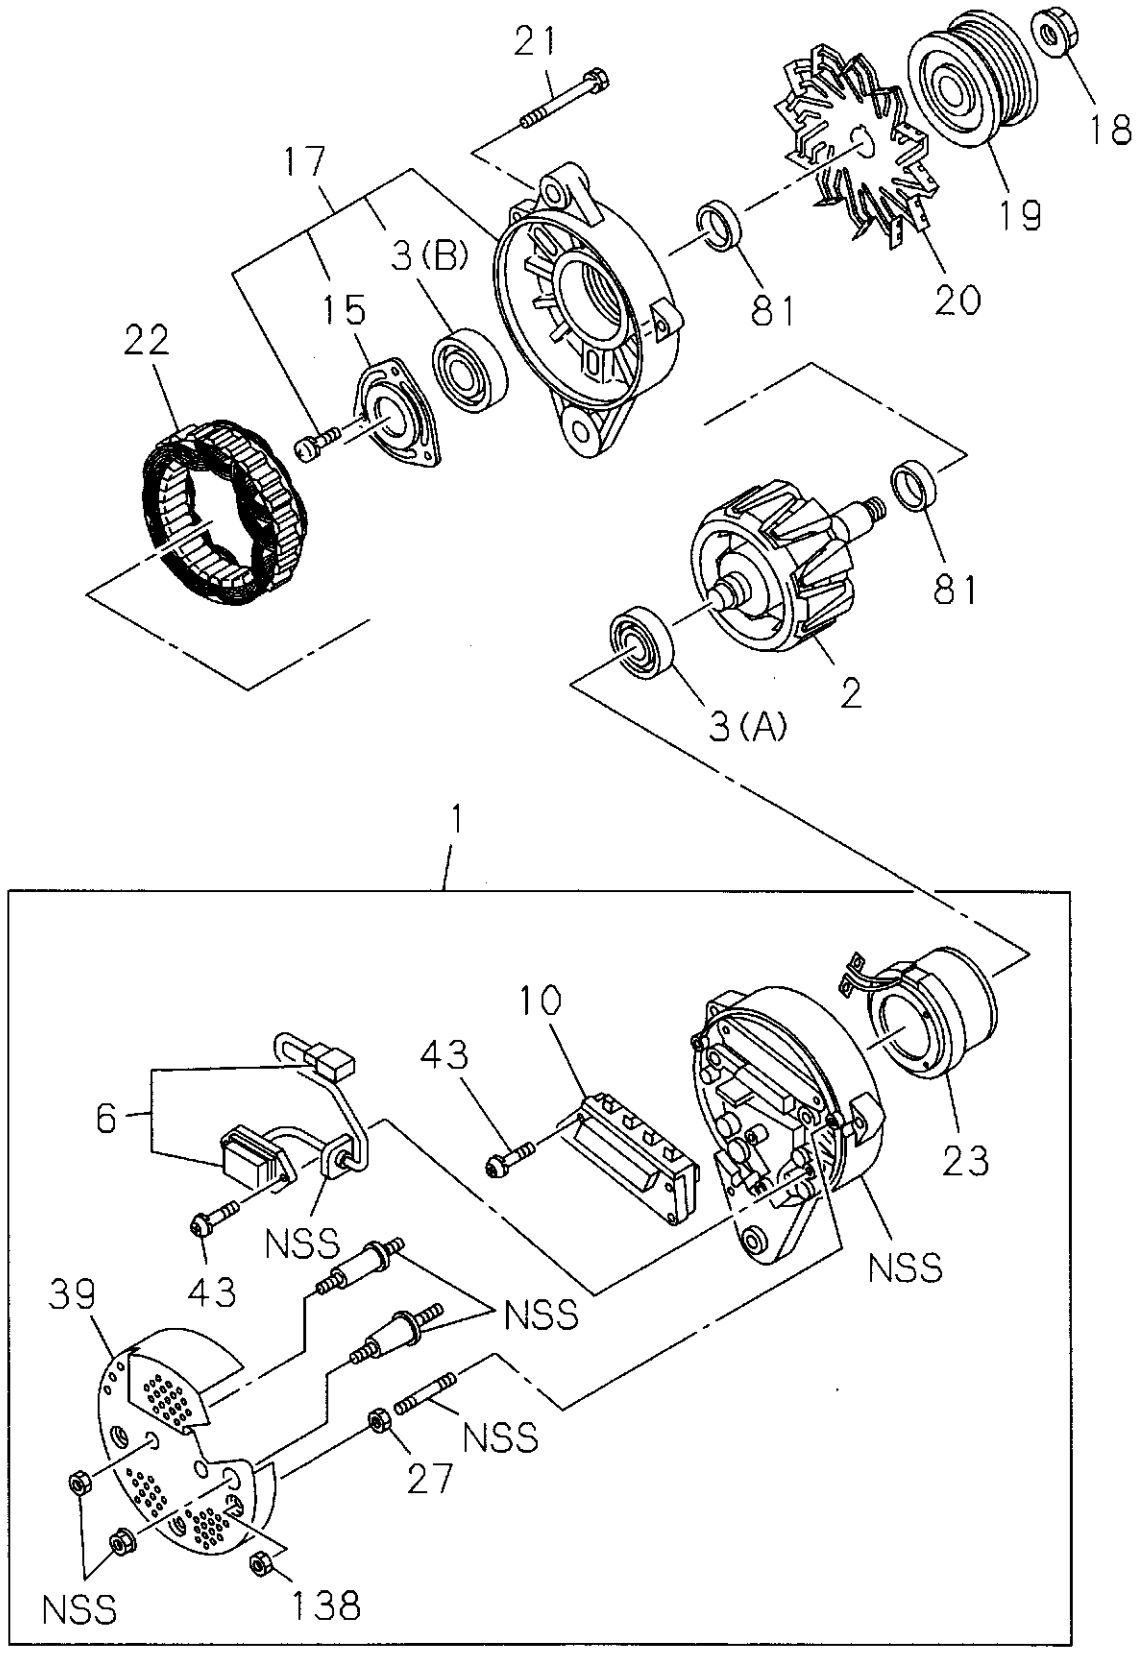

https://truckmanualshub.com/

GENERATOR

KEY NO.	RECOMMEND CLASS／PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	8980134551
1	--- COVER ASM; RR, GEN	
	8-98040-684-0	01
2	--- ROTOR; GEN	
	8-98040-638-0	01
3	--- BEARING; ROTOR, GEN	
	1-81229-723-0	01 (A)
	1-81229-758-0	01 (B)
6	--- REGULATOR ASM; VOLTAGE, GEN	
	8-98040-688-0	01
10	--- RECTIFIER; GEN	
	8-98040-686-0	01
15	--- RETAINER; ROTOR, GEN	
	1-81229-760-1	01
17	--- COVER ASM; FRT, GEN	
	8-97382-872-0	01
18	--- NUT; PULLEY, GEN	
	8-98040-643-0	01
19	--- PULLEY; GEN	
	8-98048-005-0	01
20	--- FAN; GEN	
	8-97382-874-0	01
21	--- BOLT; THROUGH, GEN	
	1-81229-382-0	03 IDN
22	--- STATOR; GEN	
	8-98040-639-0	01

https://truckmanualshub.com/

0-66 GENERATOR


FIG-NO.

KEY NO.	RECOMMEND CLASS／PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	8980134551
23	--- COIL; ROTOR GEN	
	8-98040-645-0	01
27	--- NUT; RECTIFIER, GEN	
	8-98040-687-0	01
39	--- COVER; END, RR COVER, GEN	
	8-98181-103-0	01
43	--- SCREW; RR END COVER	
	1-81229-476-0	03
81	--- SPACER; ROTOR, GEN	
	8-97382-870-0	02
138	--- NUT; COVER, GENERATOR	
	8-98040-690-0	03

https://truckmanualshub.com/

0-86 MISCELLANEOUS PARTS; INJECTION PUMP

FIG-NO.

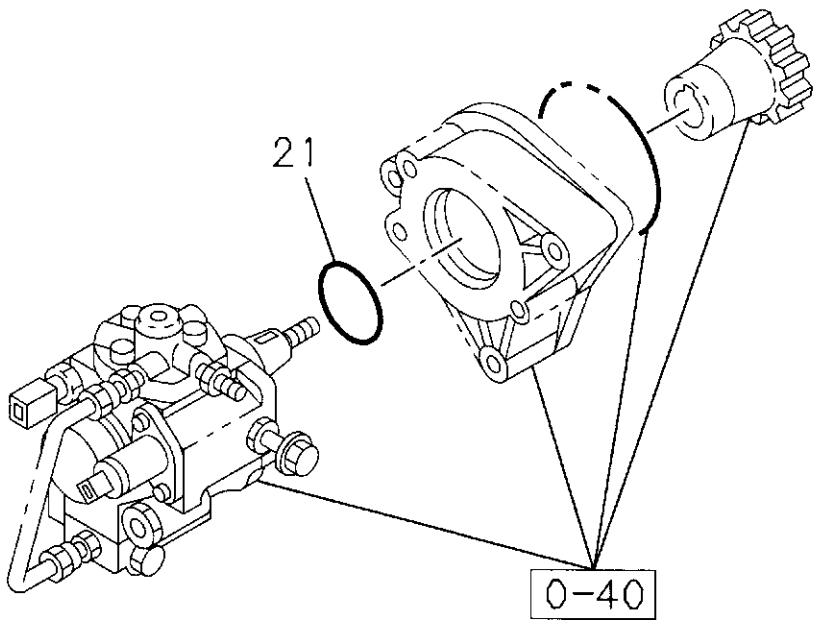


https://truckmanualshub.com/

MISCELLANEOUS PARTS; INJECTION PUMP

KEY NO.	RECOMMEND CLASS／PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	4HK1-TCC ENG(RDV)
21	--- GASKET; INJ PUMP						
	8-98031-844-0		1103-		01	A	ALSO INCLUDED IN GASKET SET(ENGINE). ID=52

https://truckmanualshub.com/

0-87	COUPLING; INJECTION PUMP
FIG-NO.	

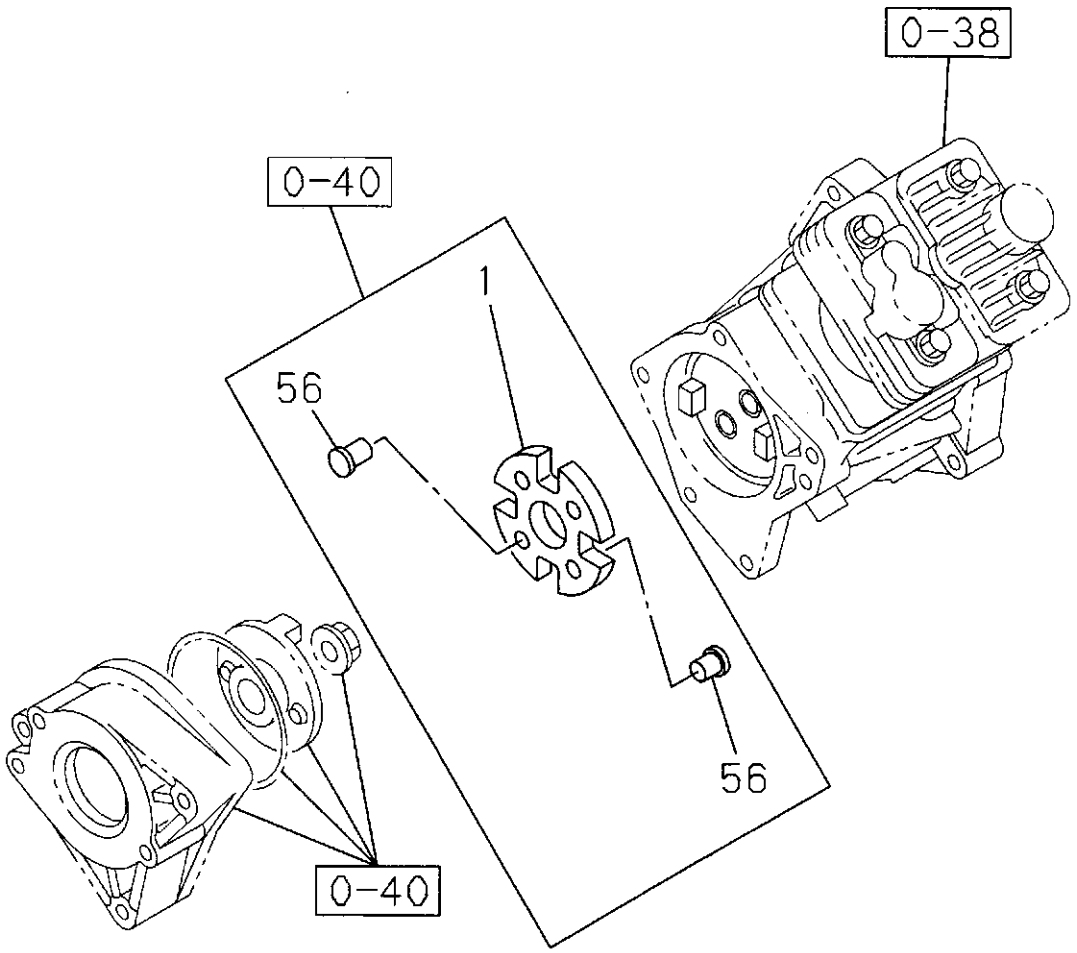

https://truckmanualshub.com/

COUPLING; INJECTION PUMP

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	
						A	4HK1-TCC ENG(RDV)
1	--- COUPLING; INJ PUMP DRIVE						
	8-97245-202-1		1103-		01	A	
56	--- RUBBER; COUPLING						
	8-97264-969-0		1103-		04	A	


https://truckmanualshub.com/

1

https://truckmanualshub.com/

1-01 ACCELERATOR PEDAL AND CONTROL

FIG-NO. NO. 1

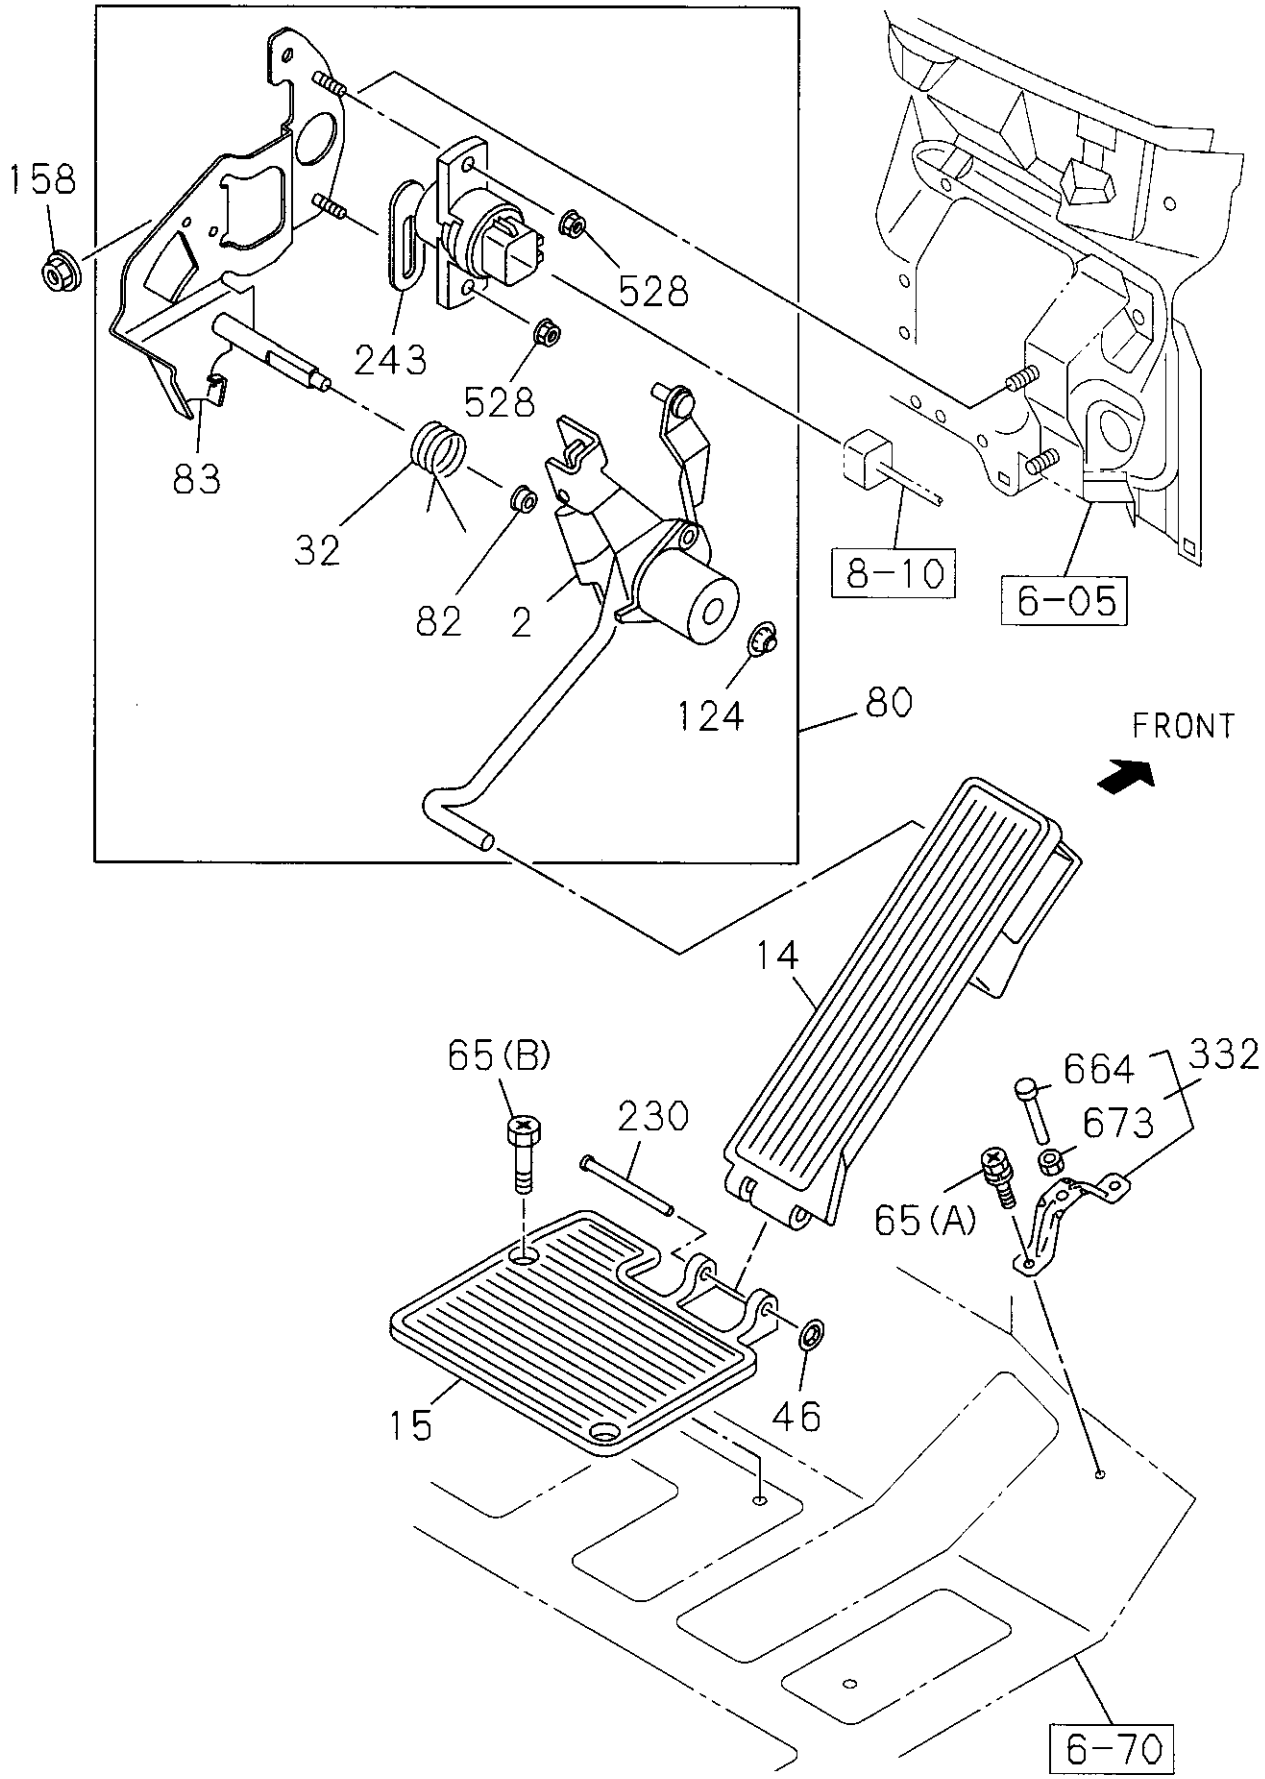


https://truckmanualshub.com/

ACCELERATOR PEDAL AND CONTROL

NO. 2

1-01

FIG-NO.

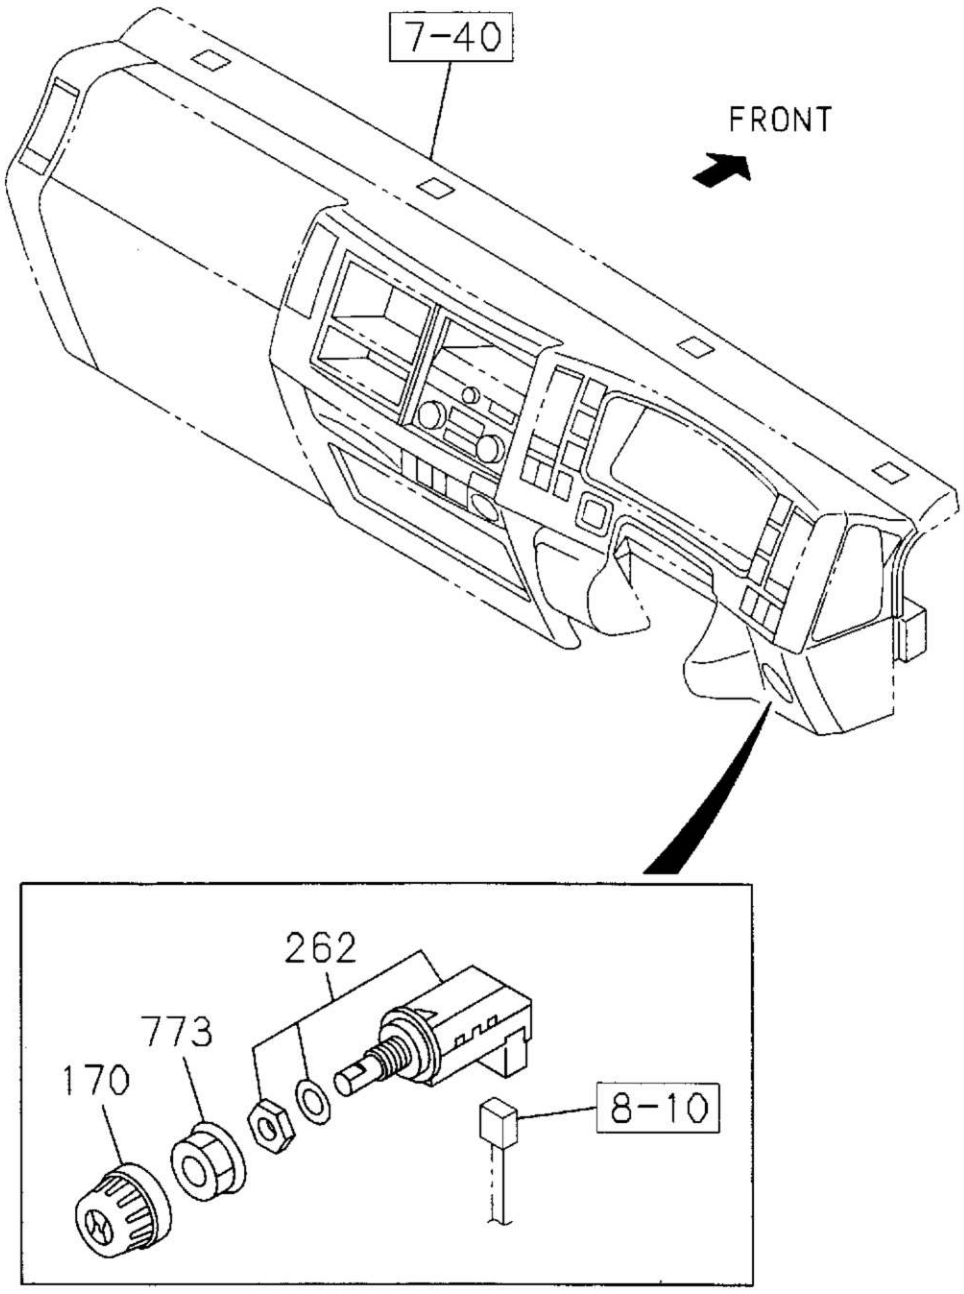

https://truckmanualshub.com/

1-01 ACCELERATOR PEDAL AND CONTROL

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
2	--- LEVER; ENG CONT					
	8-98049-120-1		1103-		01	A
14	--- PAD; PEDAL, ACCEL					
	8-97859-101-0		1103-		01	A
15	--- STAND; HEEL, ACCEL PEDAL					
	8-98022-259-2		1103-		01	A
32	--- SPRING; RETURN, ACCEL PEDAL					
	8-98031-665-0		1103-		01	A
46	--- RING; SNAP, ACCEL CONT PEDAL					
	0-91805-504-0		1103-		01	A ID=4
65	--- BOLT					
	1-09980-543-0		1103-		02	A (B) M6X28 W/LK&PL WASHER
	8-94279-201-0		1103-		02	A (A) M6X19.5 W/LK&PL WASHER
80	--- LINK ASM; ENG CONT					
	8-98038-418-4		1103-		01	A
82	--- BUSHING; ENG CONT LVR					
	8-97581-053-0		1103-		01	A
83	--- BRACKET; CONT LINK					
	8-98020-217-0		1103-		01	A
124	--- NUT; LEVER					
	8-94368-617-0		1103-		01	A D=17.5
158	--- NUT; BRKT					
	0-91180-108-0		1103-		02	A M8 FLANGE
170	--- KNOB					
	8-98013-420-0		1103-		01	A

https://truckmanualshub.com/

ACCELERATOR PEDAL AND CONTROL

1-01


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
230	--- PIN; JOINT, ACCEL PEDAL TO BRKT					
	8-98026-806-0		1103-		01	A
243	--- SENSOR; ACCEL					
	8-98131-263-0		1103-		01	A
262	--- SWITCH; ACCEL, IDLE					
	8-98013-418-0		1103-		01	A
332	--- BRACKET; ACCEL PEDAL STOPPER					
	8-98011-468-2		1103-		01	A
528	--- NUT; ACCEL SENSOR					
	8-94169-022-0		1103-		02	A M5
664	--- BOLT; STOPPER					
	0-20850-840-0		1103-		01	A M8X40
673	--- NUT; STOPPER					
	0-91110-508-0		1103-		01	A M8 IDN
773	--- HOLDER; ACCEL PEDAL					
	8-97352-127-0		1103-		01	A

https://truckmanualshub.com/

1-10 RADIATOR

FIG-NO. NO. 1

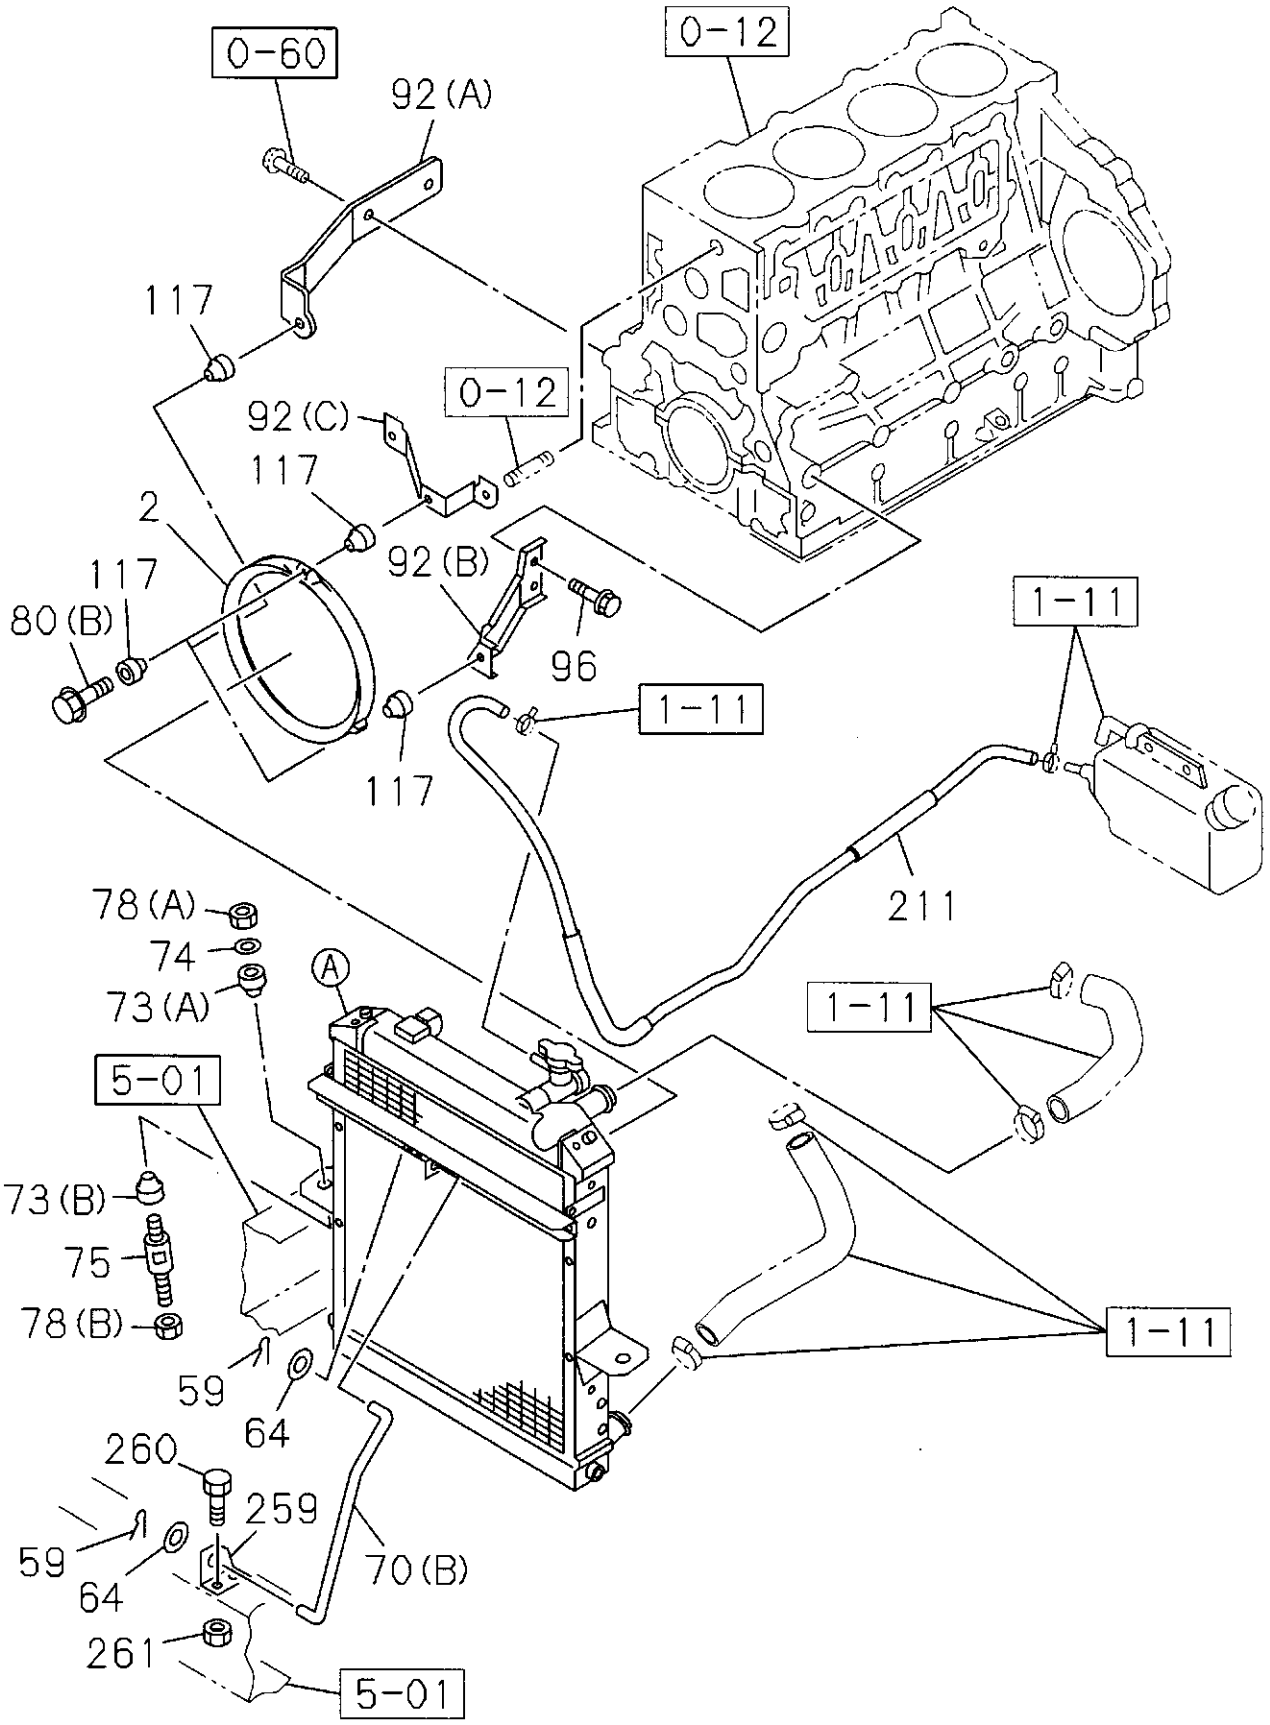


https://truckmanualshub.com/

RADIATOR

NO. 2

1-10

FIG-NO.

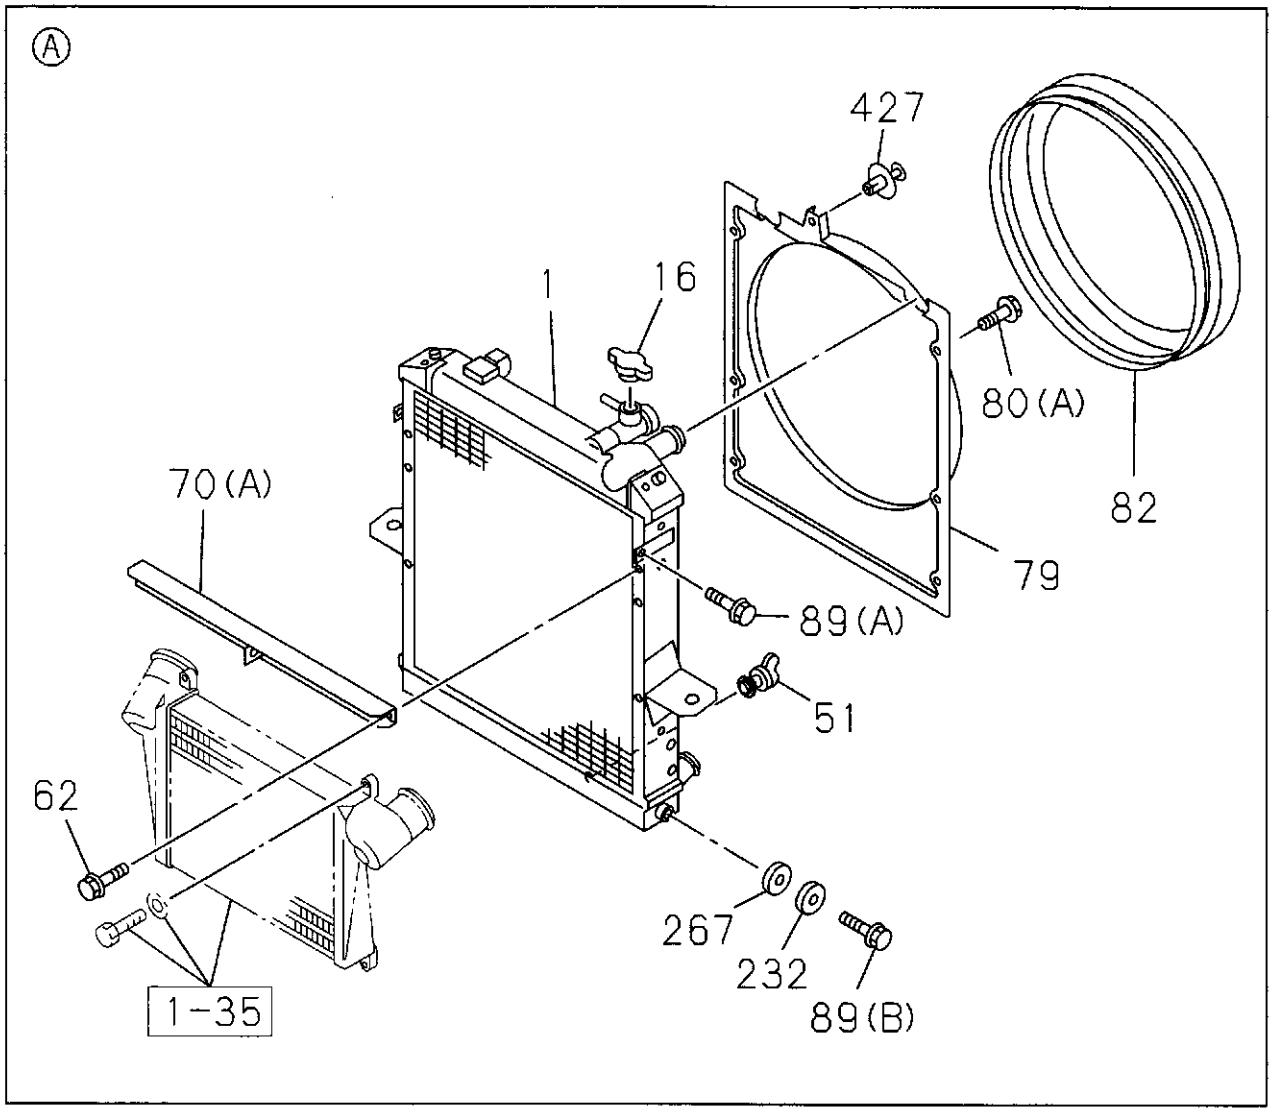

https://truckmanualshub.com/

1-10 RADIATOR

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
1	--- RADIATOR ASM					
	8-98139-320-0		1103-		01	A
2	--- GUIDE; FAN					
	8-97350-995-0		1103-		01	A
16	-B- CAP; RAD					
	8-97239-187-0		1103-		01	A
51	--- PLUG; DRAIN					
	8-97171-437-0		1103-		01	A W/GASKET
59	--- PIN; SNAP, STAY					
	8-97359-052-0		1103-		02	A L=32.6
62	--- BOLT; STAY					
	0-28050-812-0		1103-		02	A M8X12 FLANGE
64	--- WASHER; STAY TO RAD					
	0-91610-510-0		1103-		02	A ID=10.5
70	--- STAY; RAD					
	8-98010-657-0		1103-		01	A (B)
	8-98018-941-0		1103-		01	A (A)
73	--- RUBBER; CUSHION, RAD MTG					
	1-21467-004-0		1103-		02	A (A) T=14
	1-21467-011-1		1103-		02	A (B) T=24
74	--- WASHER; PL, CUSHION RUBBER					
	1-09503-154-2		1103-		02	A ID=8.4 OD=22
75	--- BOLT; CUSHION RUBBER, RAD MTG					
	1-21466-007-3		1103-		02	A M12X26.5,M10X19 L=86.5

https://truckmanualshub.com/

RADIATOR

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
78	--- NUT; CUSHION RUBBER					
	0-91180-210-0		1103-		02	A (A) M10 FLANGE
	0-91180-212-0		1103-		02	A (B) M12 FLANGE
79	--- GUIDE; FAN, RAD					
	8-98010-297-0		1103-		01	A
80	--- BOLT; FAN GUIDE					
	0-28650-830-0		1103-		03	A (B) M8X30 FLANGE
	1-21559-481-0		1103-		04	A (A) M6X16
82	--- COVER; FAN, RAD					
	8-98006-478-0		1103-		01	A
89	--- BOLT					
	0-28050-812-0		1103-		02	A (A) M8X12 FLANGE
	1-21469-153-0		1103-		02	A (B) M8X25
92	--- BRACKET; FAN GUIDE					
	8-97350-997-0		1103-		01	A (A)
	8-97382-827-2		1103-		01	A (C)
	8-97386-233-0		1103-		01	A (B)
96	--- BOLT; STAY FIX					
	0-28151-020-0		1103-		02	A M10X20 FLANGE
117	--- RUBBER; MTG, FAN GUIDE					
	1-09337-027-0		1103-		06	A

https://truckmanualshub.com/

1-10 RADIATOR


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
211	--- HOSE; RAD TO PIPE	8-98046-972-2		1103-		01	A
232	--- COLLAR; DIST, CUSHION RUBBER	8-98141-232-0		1103-		02	A
259	--- BRACKET; RAD STAY	8-98063-603-0		1103-		01	A
260	--- BOLT; BRKT	0-28650-820-0		1103-		02	A M8X20 FLANGE IDN
261	--- NUT; BRKT	0-91180-108-0		1103-		02	A M8 FLANGE
267	--- RUBBER; CUSHION	1-21467-023-0		1103-		02	A
427	--- CLIP; FAN GUIDE	1-09470-009-0		1103-		01	A

https://truckmanualshub.com/

1-11 RADIATOR HOSE AND SUB TANK

FIG-NO.

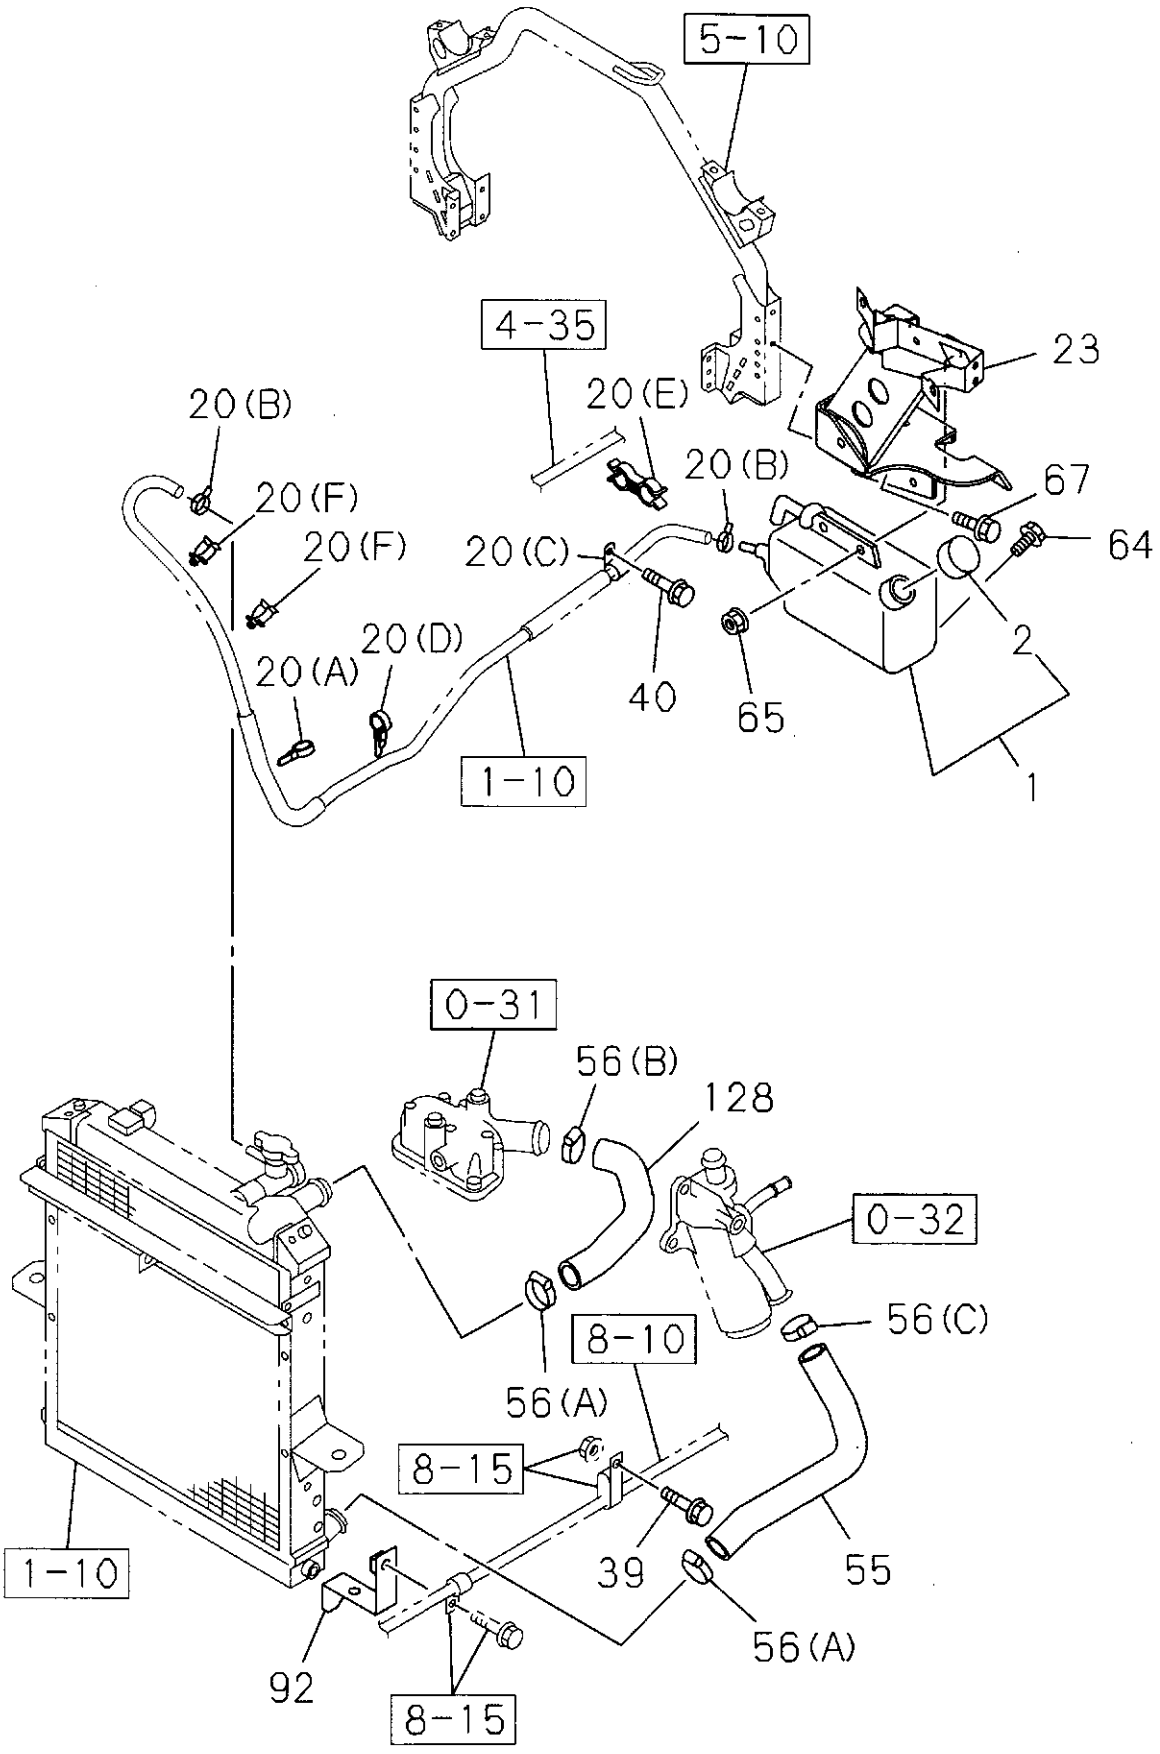

https://truckmanualshub.com/

RADIATOR HOSE AND SUB TANK

1-11

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- TANK; SURGE, RAD					
	8-98171-757-0		1103-		01	A
2	--- CAP; SURGE TANK					
	8-98178-074-0		1103-		01	A
20	--- CLIP; HOSE, RAD					
	0-95235-235-0		1103-		01	A (C) ID=13 L=20
	8-94381-420-0		1103-		01	A (E) ID=10.5 & 18
	8-97375-638-0		1103-		02	A (B) ID=11.5
	8-98029-256-0		1103-		03	A (F) ID=12
	9-09917-427-0		1103-		01	A (D) ID=14 L=44
	9-09917-430-0		1103-		01	A (A) ID=20 L=50
23	--- BRACKET; RESERVE TANK					
	8-98010-310-3		1103-		01	A
39	--- BOLT; BRKT FIX					
	0-28650-820-0		1103-		01	A M8X20 FLANGE IDN
40	--- BOLT; CLIP					
	0-28650-820-0		1103-		01	A M8X20 FLANGE IDN
55	-B- HOSE; WATER, RAD OUTLET					
	8-98010-573-2		1103-		01	A
56	--- CLIP; WATER HOSE, RAD					
	1-09704-057-0		1103-		01	A (B) ID=52
	8-98133-956-0		1103-		02	A (A)
	(CONTINUE)					

https://truckmanualshub.com/

1-11 RADIATOR HOSE AND SUB TANK


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A 4HK1-TCC ENG(RDV)
	(CONTINUED)						
56	--- CLIP; WATER HOSE, RAD						
		8-98133-956-0					ID=48
		8-98133-957-0		1103-		01	A (C) ID=62
64	--- BOLT; BRKT, SUB TANK						
		1-09030-093-0		1103-		03	A M8X25 W/LK&PL WASHER
65	--- NUT; BRKT, SUB TANK						
		0-91180-108-0		1103-		01	A M8 FLANGE
67	--- BOLT; BRKT						
		0-28650-820-0		1103-		03	A M8X20 FLANGE IDN
92	--- BRACKET; CLIP, RUBBER HOSE						
		8-98055-051-0		1103-		01	A
128	-B- HOSE; WATER, RAD INL						
		8-98010-572-1		1103-		01	A

https://truckmanualshub.com/

1-30 AIR CLEANER

FIG-NO.

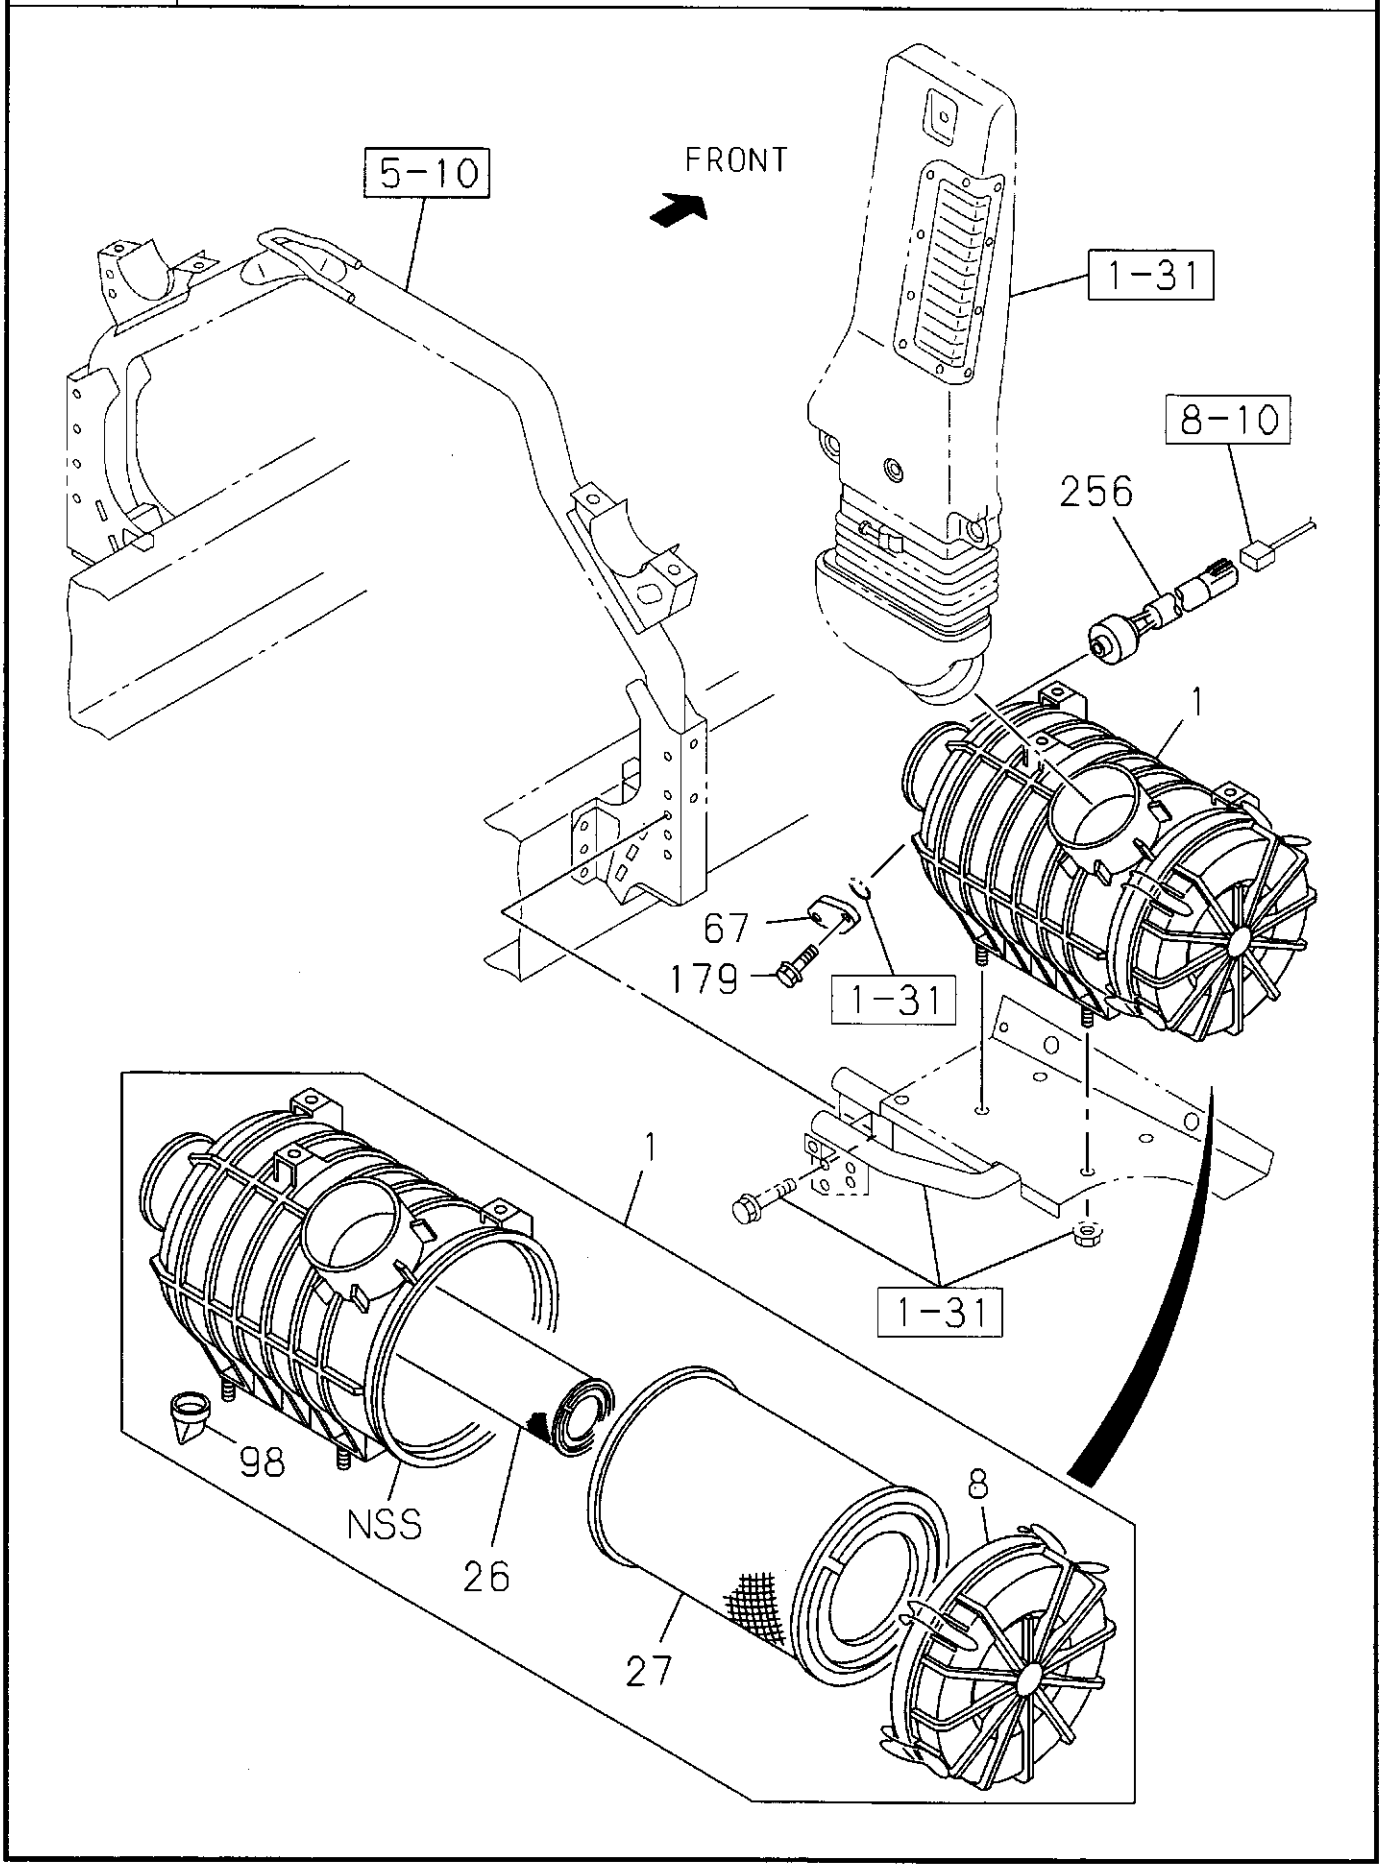

https://truckmanualshub.com/


AIR CLEANER

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- CLEANER ASM; AIR					
	8-98082-165-1		1103-	L	01	A
8	--- COVER ASM; ACL					
	8-98066-740-0		1103-	L	01	A
26	-A- FILTER; ACL, INNER					
	8-98071-422-0		1103-	L	01	A
27	-A- FILTER; ACL, OUTER					
	8-98071-421-0		1103-	L	01	A DRY TYPE
67	--- COVER; ACL					
	8-98081-729-0		1103-		01	A
98	--- VALVE ASM; LEAD					
	1-14219-279-0		1103-	L	01	A
179	--- BOLT; COVER, ACL					
	0-28050-616-0		1103-		02	A M6X16 FLANGE IDN
256	--- SENSOR; AIRFLOW					
	8-98152-742-0		1103-		01	A

https://truckmanualshub.com/

1-31 AIR DUCT


FIG-NO. DUCT FIXING

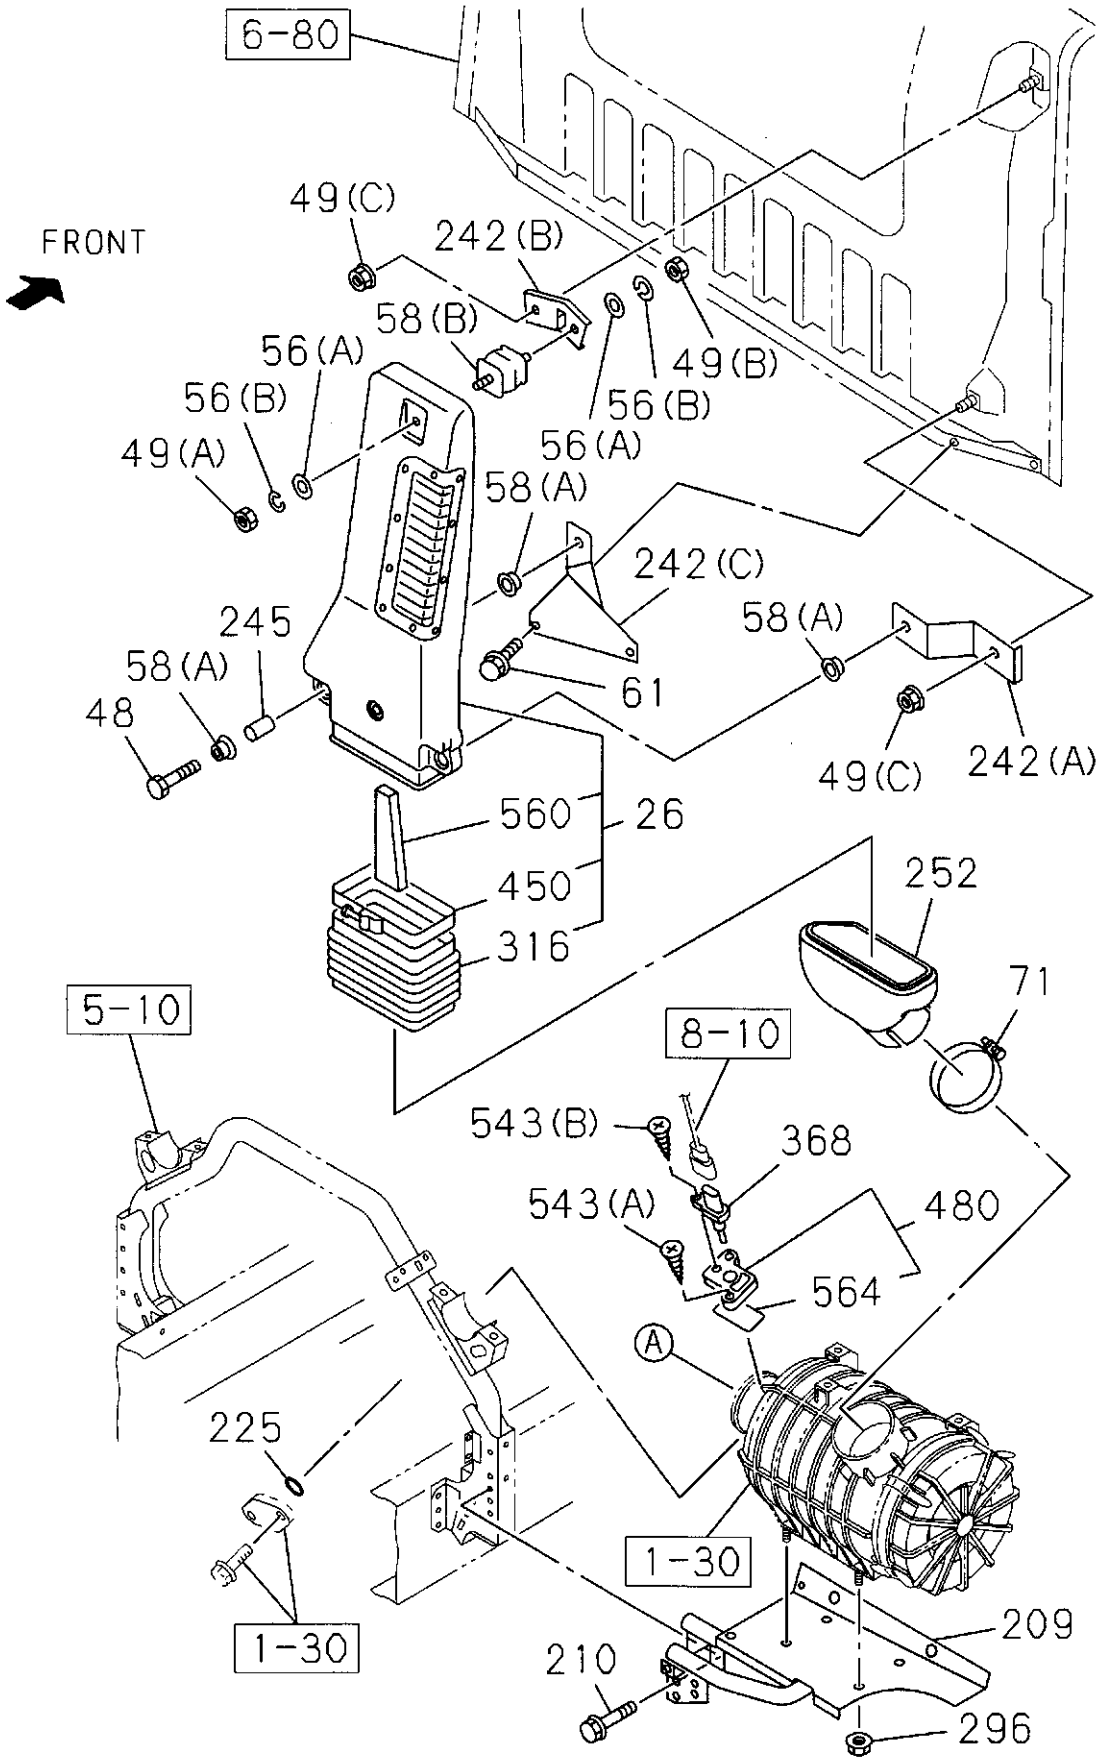

https://truckmanualshub.com/

AIR DUCT

PIPING

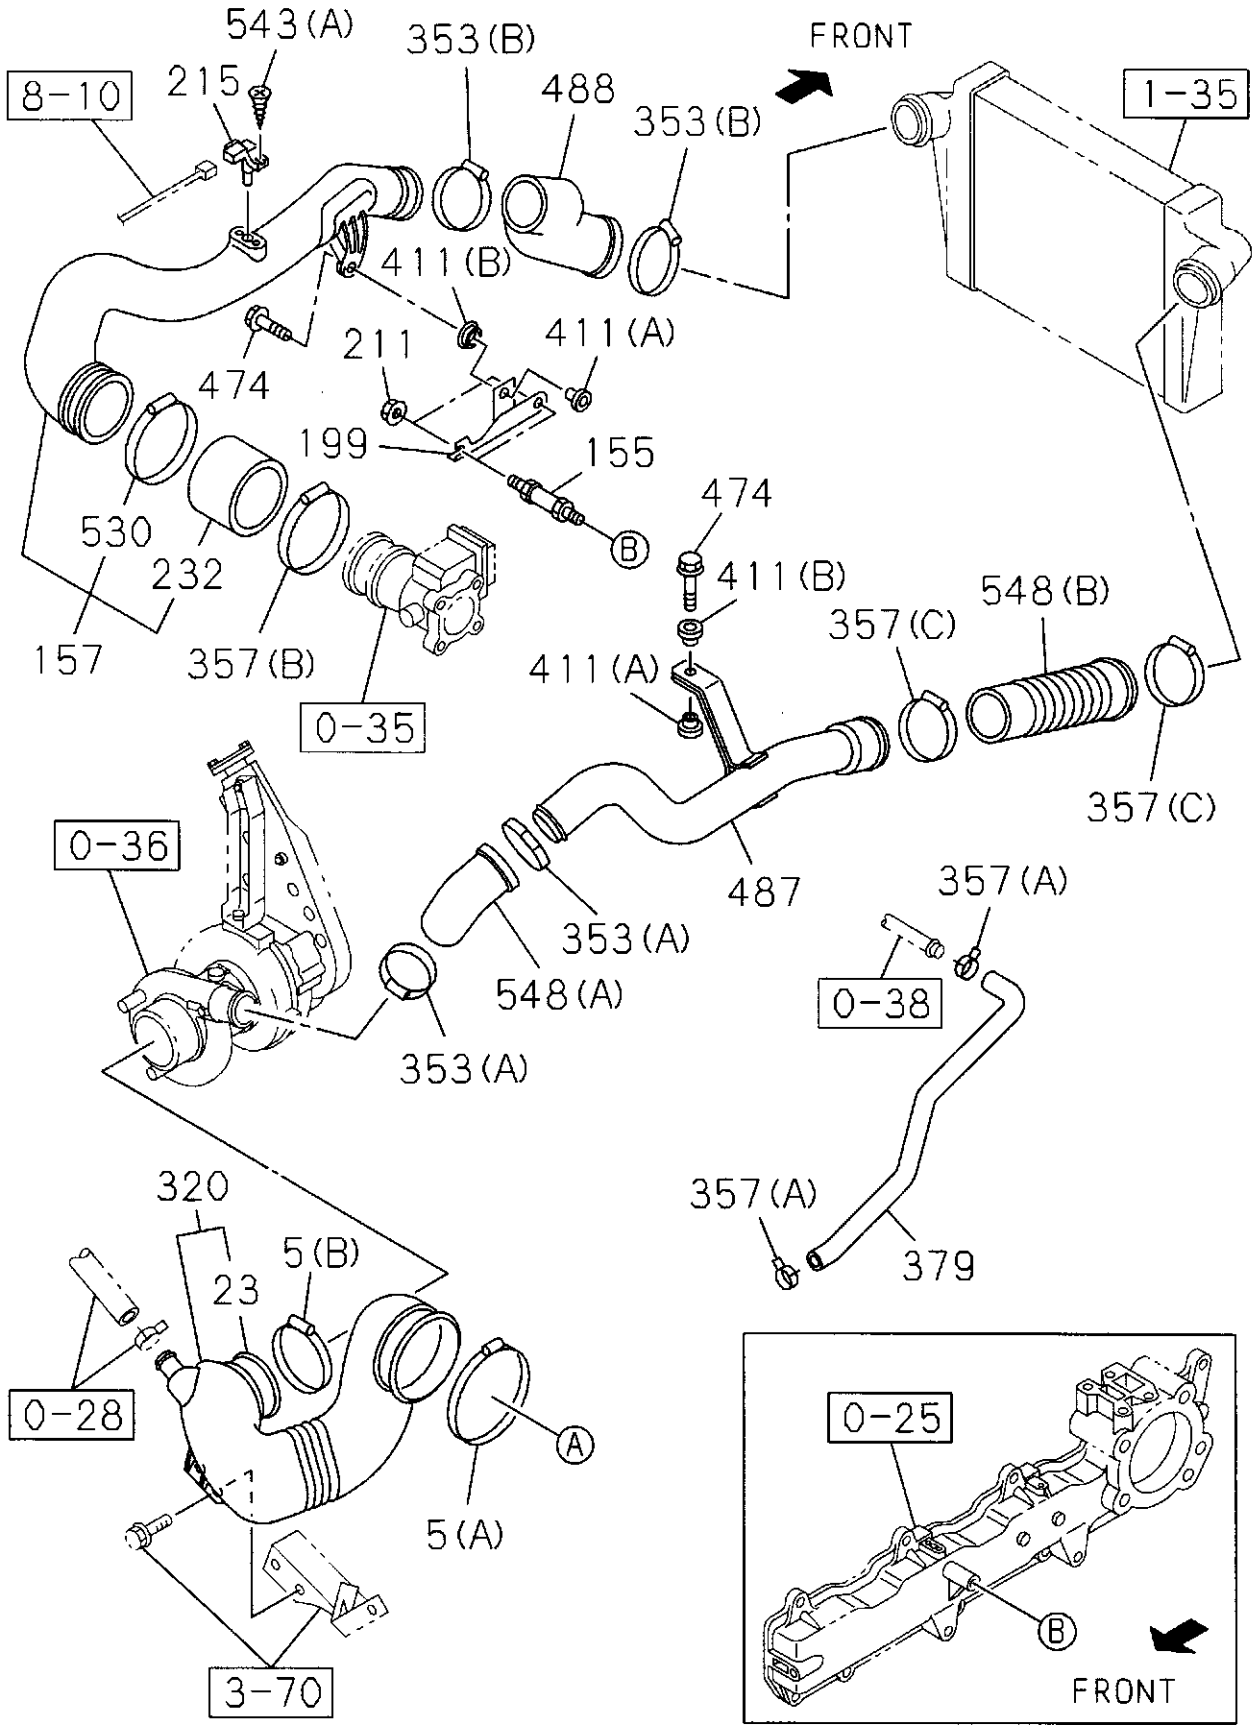

https://truckmanualshub.com/

1-31 AIR DUCT

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
5	--- CLIP; AIR DUCT					
	8-98133-349-0		1103-		01	A (B) ID=55-75
	8-98133-359-0		1103-		01	A (A) ID=110-130
23	--- CLIP; HOSE					
	1-09707-144-0		1103-		01	A ID=87-116
26	--- DUCT; AIR INT					
	8-98010-361-2		1103-		01	A
48	--- BOLT; AIR DUCT					
	1-09030-044-1		1103-		02	A M10X26
49	--- NUT; AIR DUCT					
	1-09984-122-0		1103-		01	A (B) M8 FLANGE
	1-09984-126-0		1103-		01	A (A) M8 FLANGE
	8-94279-517-0		1103-		02	A (C) M8 FLANGE IDN
56	--- WASHER; LK, AIR INT DUCT					
	1-09985-177-0		1103-		02	A (A) ID=8.2
	1-09985-188-0		1103-		02	A (B) ID=8.4 OD=22
58	--- SUPPORT; AIR INL DUCT					
	1-14119-267-0		1103-		04	A (A) OD=40 T=18.5
	8-98125-944-0		1103-		01	A (B)

https://truckmanualshub.com/

AIR DUCT

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A 4HK1-TCC ENG(RDV)
61	--- BOLT; BRKT, AIR DUCT						
		8-98074-570-0		1103-		02	A M8X25 FLANGE
71	--- CLIP; AIR DUCT						
		8-98133-367-0		1103-		01	A ID=120-140
155	--- BOLT; BRKT						
		8-97233-428-0		1103-		02	A M10X17,M10X30 L=105
157	--- PIPE; AIR						
		8-98010-719-3		1103-		01	A
199	--- BRACKET; PIPE						
		8-97385-293-1		1103-		01	A
209	--- BRACKET; ACL						
		8-98010-343-4		1103-		01	A
210	--- BOLT; ACL BRKT						
		0-28651-025-0		1103-		04	A M10X25 FLANGE IDN
211	--- NUT; BRKT						
		0-91180-210-0		1103-		02	A M10 FLANGE
215	--- SENSOR; MAP						
		8-98009-418-0		1103-		01	A
225	--- GASKET; AIR PIPE						
		1-09623-057-0		1103-		02	A ID=24.4
232	--- HOSE; CONN						
		8-98067-929-0		1103-		01	A
242	--- BRACKET; AIR DUCT						
		8-98019-301-2		1103-		01	A (B)
		8-98019-302-1		1103-		01	A (C)
		8-98019-303-1		1103-		01	A (A)

https://truckmanualshub.com/

1-31 AIR DUCT

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A 4HK1-TCC ENG(RDV)
245	--- PIECE; DIST, AIR DUCT					
	1-79998-228-0		1103-		02	A
252	--- DUCT; AIR INT					
	8-98010-639-1		1103-		01	A
296	--- NUT; ACL					
	0-91180-108-0		1103-		04	A M8 FLANGE
316	--- RUBBER; CUSHION, DUCT					
	8-98152-269-0		1103-		01	A
320	--- HOSE; CONN, ACL					
	8-98073-539-3		1103-		01	A
353	--- CLIP; RUBBER HOSE					
	8-98096-418-0		1103-		02	A (A) ID=60-65
	8-98133-349-0		1103-		02	A (B) ID=55-75
357	--- CLIP; RUBBER HOSE					
	8-98025-921-0		1103-		02	A (A) ID=24
	8-98133-349-0		1103-		02	A (C) ID=55-75
	8-98133-357-0		1103-		01	A (B) ID=75-95
368	--- SENSOR; TEMP					
	8-98065-377-0		1103-		01	A
379	--- HOSE; RUBBER					
	8-98075-713-1		1103-		01	A
411	--- RUBBER; CUSHION					
	8-94395-766-0		1103-		02	A (A)
	8-97105-689-6		1103-		02	A (B) OD=23

https://truckmanualshub.com/


AIR DUCT

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
450	--- CLAMP; HOSE					
	9-09915-504-1		1103-		01	A
474	--- BOLT; PIPE					
	0-28650-840-0		1103-		02	A M8X40 FLANGE
480	--- ADAPTER					
	8-98086-417-0		1103-		01	A
487	--- PIPE; TURBO TO CHARGE AIR COOLER					
	8-98073-592-0		1103-		01	A
488	--- HOSE; RUBBER, PIPE					
	8-98010-723-0		1103-		01	A
530	--- CLAMP; AIR DUCT					
	8-98133-357-0		1103-		01	A ID=75-95
543	--- SCREW; SENSOR					
	0-36220-514-0		1103-		01	A (B) M5X14 W/LK WASHER
	0-36230-412-0		1103-		02	A A (A) M4X12 W/LK&PL WASHER
548	--- HOSE; RUBBER, TURBO TO INL PIPE					
	8-98181-971-0		1103-		01	A (A)
	8-98181-972-0		1103-		01	A (B)
560	--- FILTER; VERTICAL DUCT					
	8-98061-675-0		1103-		02	A
564	--- GASKET; ADAPTER					
	8-98071-416-0		1103-		01	A

https://truckmanualshub.com/

1-35 CHARGE AIR COOLER

FIG-NO.

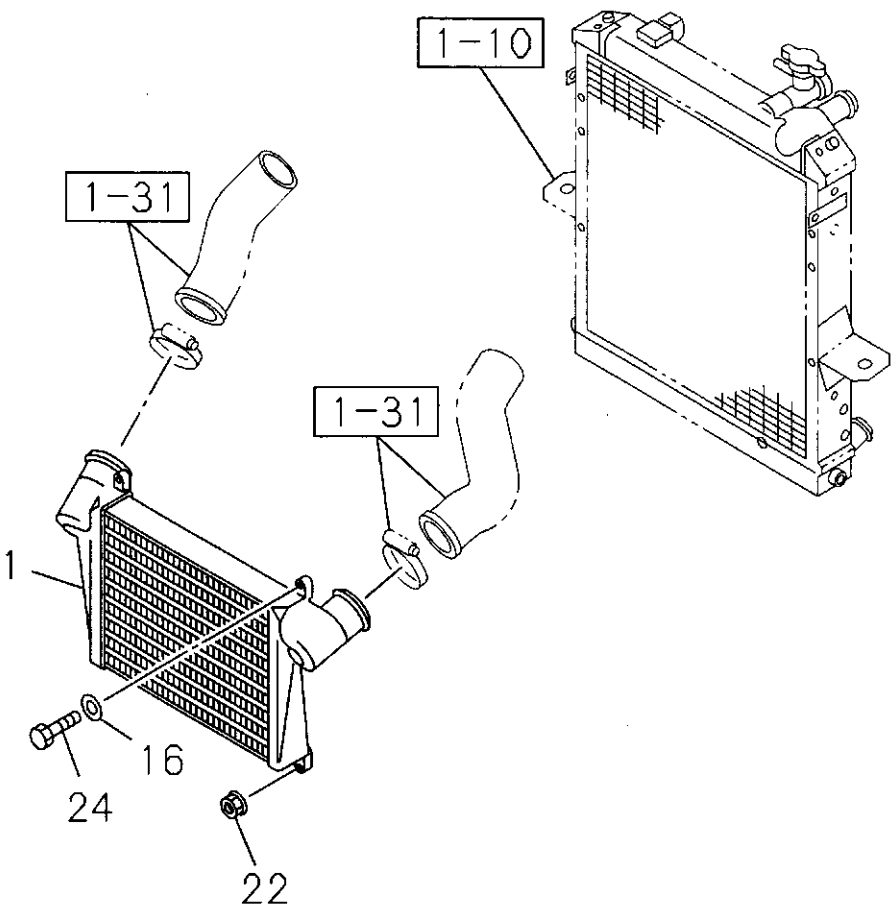

https://truckmanualshub.com/

CHARGE AIR COOLER

1-35


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
1	--- COOLER; CHARGE AIR					
	8-98006-479-1		1103-		01	A
16	--- WASHER; PL, CHARGE AIR COOLER					
	0-91610-508-0		1103-		02	A ID=8.4 OD=16
22	--- NUT					
	0-91180-108-0		1103-		02	A M8 FLANGE
24	--- BOLT; COOLER TO RAD					
	0-28050-825-0		1103-		02	A M8X25 FLANGE

https://truckmanualshub.com/

1-40 FUEL TANK

FIG-NO.

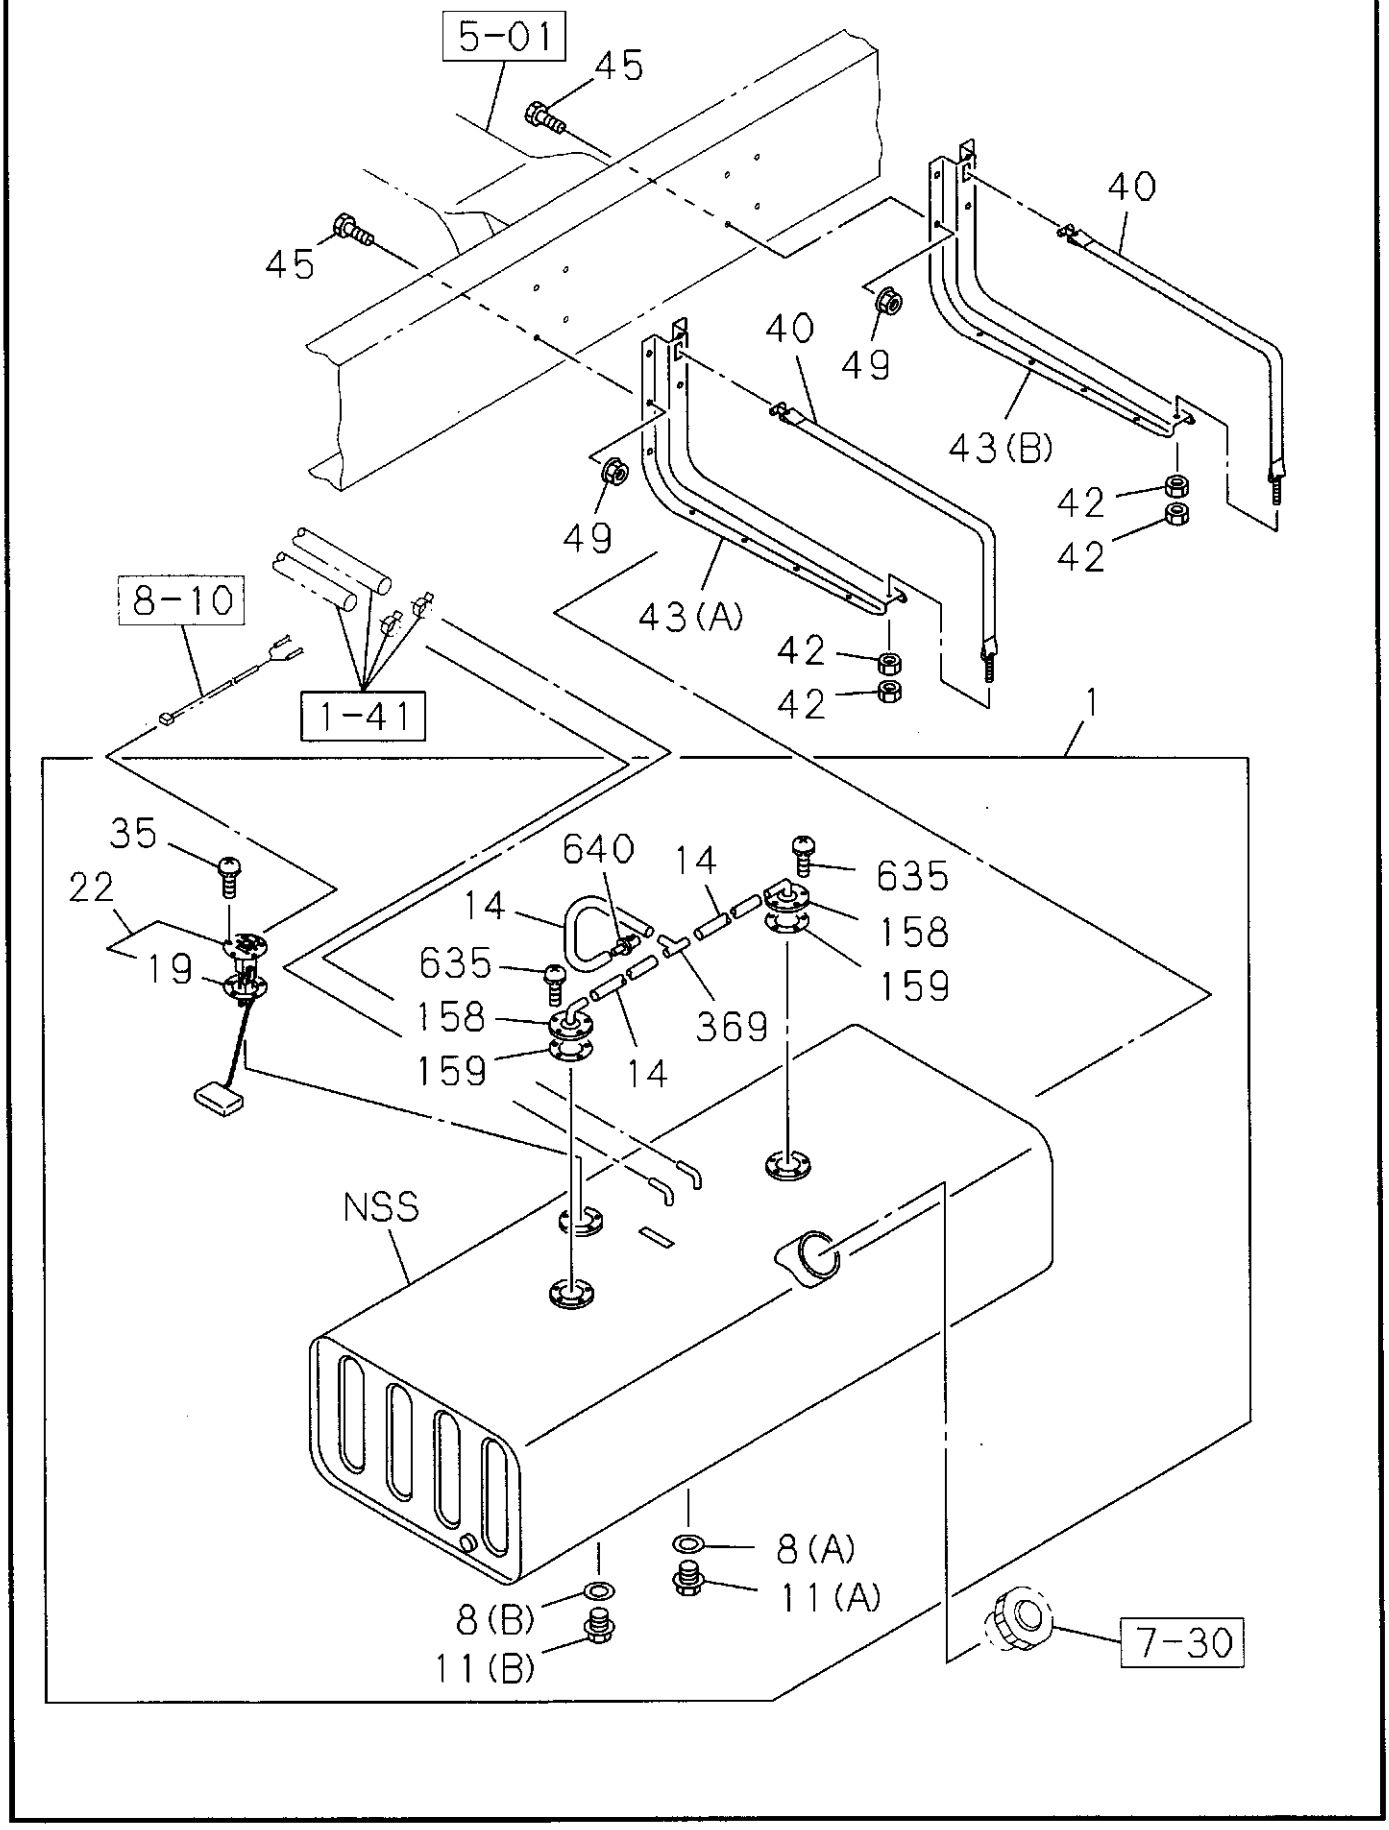

https://truckmanualshub.com/

FUEL TANK

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- TANK; FUEL					
	8-98122-992-2		1103-	L	01 A	1345X532X322 200L
8	--- GASKET; DRAIN PLUG, FUEL TANK					
	8-98067-041-0		1103-	L	01 A	(B) ID=30
	9-09571-418-0		1103-	L	01 A	(A) ID=18
11	--- PLUG; DRAIN, FUEL TANK					
	0-92002-418-0		1103-	L	01 A	(A) M18X12
	8-98067-038-0		1103-	L	01 A	(B)
14	--- HOSE; BREATHER, OUTLET					
	0-01256-300-0		1103-	L	01 A	L=90 SERVICED BY L=3000
	0-01256-300-0		1103-	L	01 A	L=440 SERVICED BY L=3000
	0-01256-300-0		1103-	L	01 A	L=450 SERVICED BY L=3000
19	--- GASKET; FUEL TANK UNIT					
	5-83148-001-0		1103-	L	01 A	
22	--- UNIT; FUEL TANK					
	8-98099-320-0		1103-	L	01 A	
35	--- SCREW; FUEL TANK UNIT					
	0-36220-512-0		1103-	L	05 A	M5X12 W/LK WASHER
40	--- BELT; SUPPORT, FUEL TANK					
	8-98042-715-1		1103-		02 A	L=880
42	--- NUT; SUPPORT BELT					
	0-91110-512-0		1103-		04 A	M12

https://truckmanualshub.com/

1-40 FUEL TANK


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
43	--- BRACKET; FUEL TANK					
	8-98088-123-0		1103-		01	A (A)
	8-98122-883-0		1103-		01	A (B)
45	--- BOLT; BRKT, FUEL TANK					
	0-28651-035-0		1103-		12	A M10X35 FLANGE IDN
49	--- NUT; BRKT					
	0-91180-210-0		1103-		12	A M10 FLANGE
158	--- VALVE; ROLL OVER & FLOAT					
	8-98067-039-0		1103-	L	02	A
159	--- SEAL; ROLL OVER & FLOAT VALVE					
	1-83149-003-0		1103-	L	02	A
369	--- JOINT; HOSE					
	8-98067-080-0		1103-	L	01	A
635	--- SCREW; ROLL OVER & FLOAT VALVE					
	0-36220-512-0		1103-	L	10	A M5X12 W/LK WASHER
640	--- VENTILATOR; HOSE, BREATHER					
	8-98092-398-0		1103-	L	01	A

https://truckmanualshub.com/

1-41 FUEL PIPING; CHASSIS

FIG-NO. PIPING NO. 1

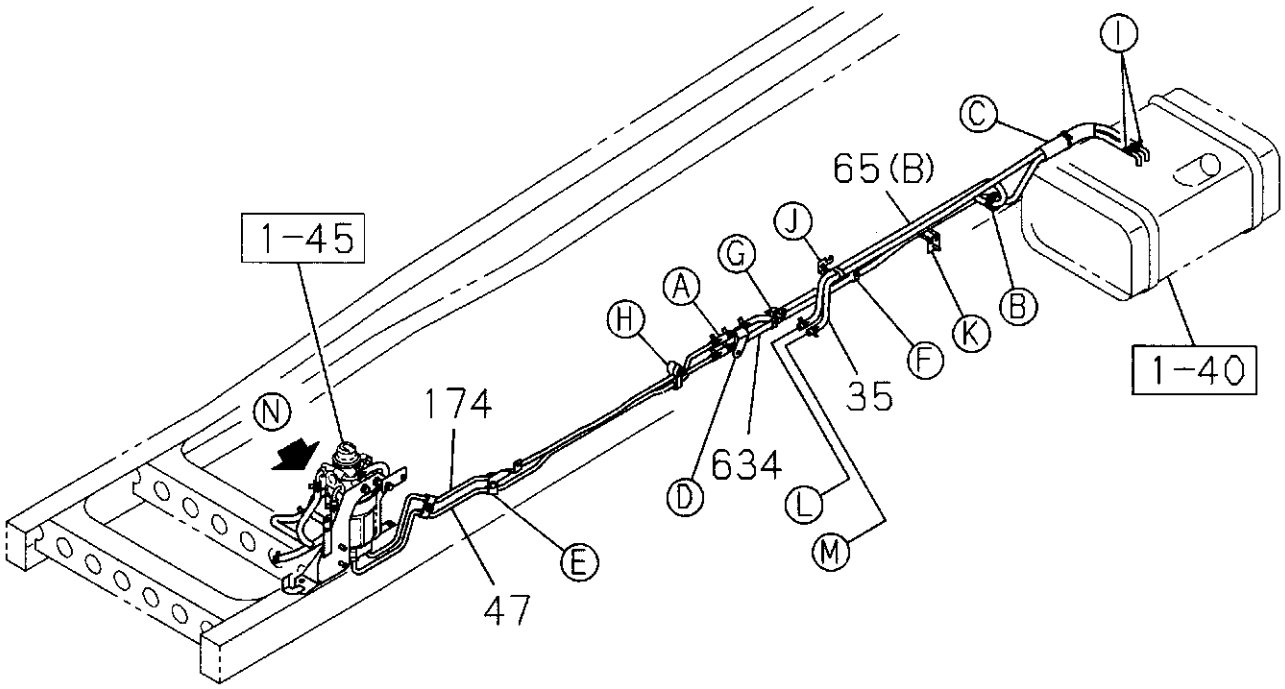


https://truckmanualshub.com/

FUEL PIPING; CHASSIS


PIPING NO. 2

FIG-NO.


Ⓐ

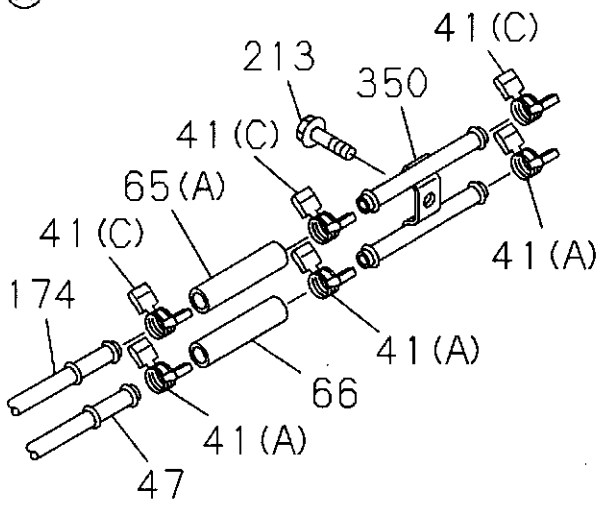


Ⓑ

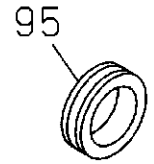


Ⓒ

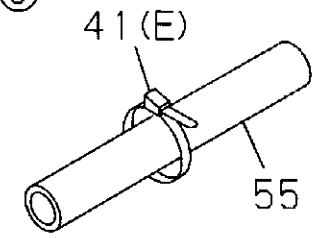


Ⓓ

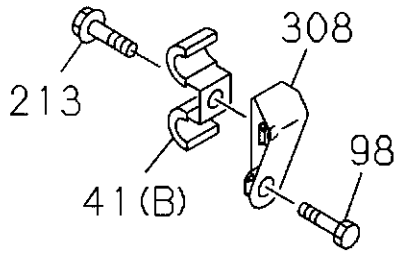


Ⓔ

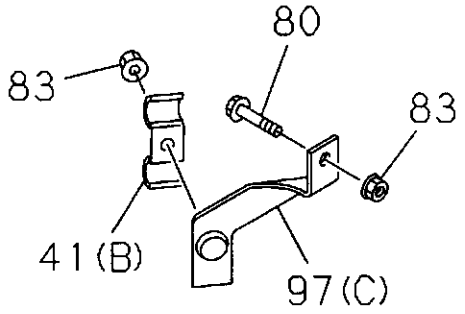


Ⓕ

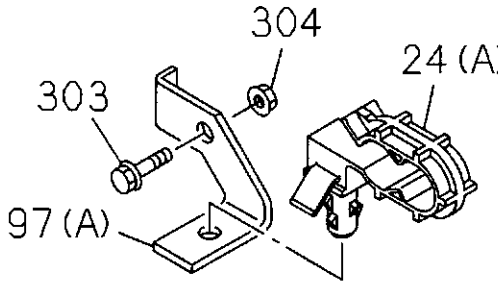


Ⓖ

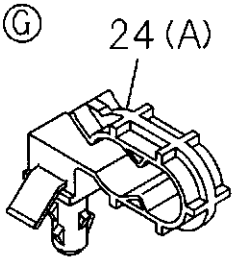


Ⓗ

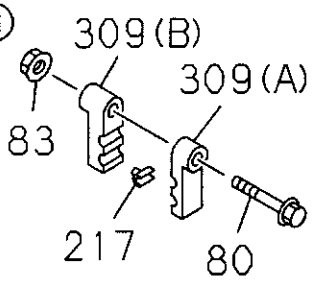


Ⓘ

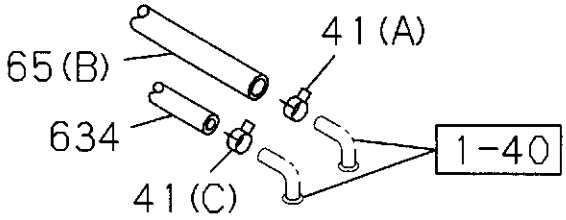

Ⓙ

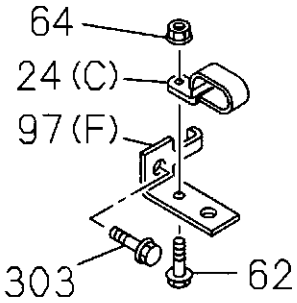


Ⓚ

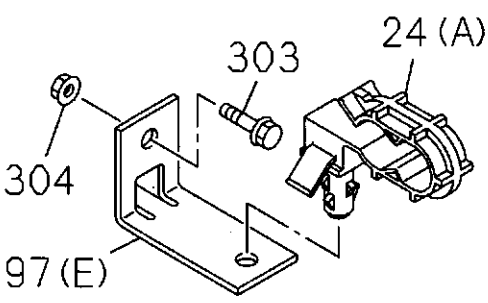

https://truckmanualshub.com/

1-41 FUEL PIPING; CHASSIS

FIG-NO. FUEL SEDIMENTER FIXING

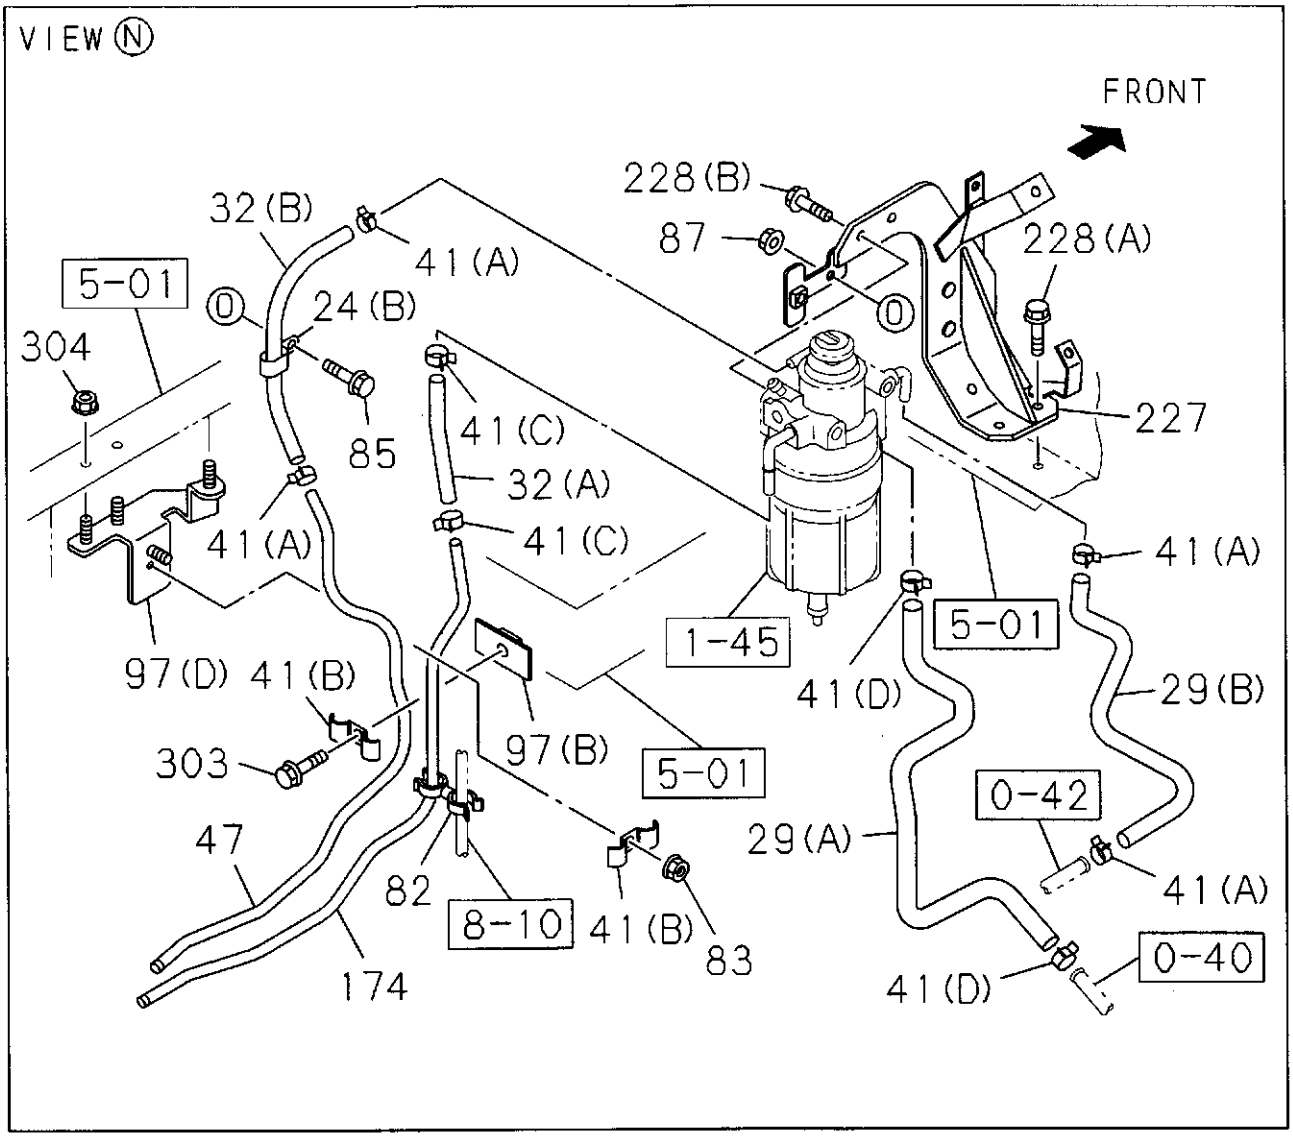


https://truckmanualshub.com/

FUEL PIPING; CHASSIS

PRE FUEL FILTER FIXING

FIG-NO.

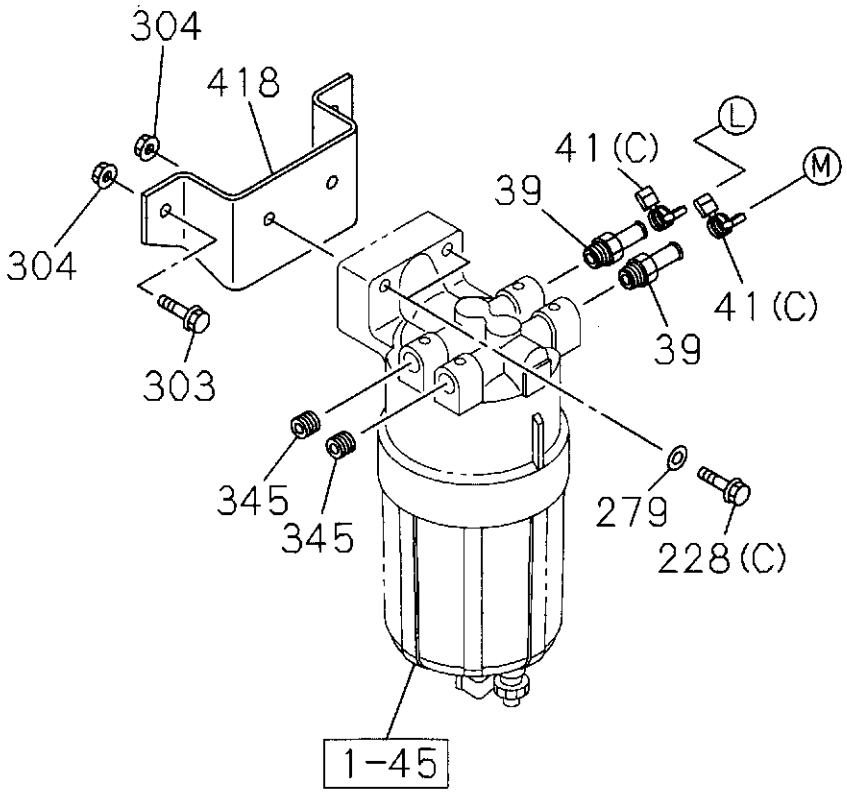

https://truckmanualshub.com/

1-41 FUEL PIPING; CHASSIS

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
24	--- CLIP; FUEL HOSE					
	1-09700-606-0		1103-		01	A (B) ID=15 H=24 L=20
	1-09700-744-0		1103-		01	A (C) H=15 ID=14
	1-09701-246-1		1103-		07	A (A)
29	--- HOSE; FUEL					
	8-98078-194-3		1103-		01	A (A)
	8-98078-195-1		1103-		01	A (B)
32	--- PIPE; DELIVERY, FUEL TANK					
	0-01260-300-0		1103-		01	A (A) L=140 SERVICED BY L=3000
	0-01558-300-0		1103-		01	A (B) L=210 SERVICED BY L=3000
35	--- PIPE; FUEL TANK, RETURN					
	0-01260-300-0		1103-		01	A L=1350 SERVICED BY L=3000
39	--- PIPE; FUEL					
	8-98122-953-0		1103-		02	A
41	--- CLIP; FUEL PIPE, FUEL TANK					
	1-09700-747-0		1103-		03	A (B) ID=11 & 9 L=17.5 & 17.5
	1-09704-102-0		1103-		02	A (C) ID=14
	1-09704-102-0		1103-		06	A (C) ID=14
	5-09707-030-1		1103-		03	A (E) L=250 IDN

https://truckmanualshub.com/

FUEL PIPING; CHASSIS

KEY NO.	RECOMMEND CLASS / PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
41	--- CLIP; FUEL PIPE, FUEL TANK					
	8-94238-568-0		1103-		02	A (D) ID=16
	8-94238-571-0		1103-		08	A (A) ID=13
47	--- PIPE; FUEL, RETURN					
	1-47428-851-0		1103-		01	A L=1496 SERVICED BY L=1550
55	--- COVER; PIPE, FUEL TANK					
	1-09361-018-0		1103-		01	A L=800
62	--- BOLT; CLIP FIX					
	0-28650-820-0		1103-		01	A M8X20 FLANGE IDN
64	--- NUT; CLIP					
	0-91180-108-0		1103-		01	A M8 FLANGE
65	--- HOSE; FUEL, DELIVERY PIPE					
	0-01260-300-0		1103-		01	A (A) L=60 SERVICED BY L=3000
	0-01260-300-0		1103-		01	A (B) L=2900 SERVICED BY L=3000
66	--- HOSE; FUEL, RETURN PIPE					
	0-01558-300-0		1103-		01	A L=60 SERVICED BY L=3000
80	--- BOLT; CLIP, FUEL TANK					
	0-28050-850-0		1103-		01	A M8X50 FLANGE
	0-28650-820-0		1103-		01	A M8X20 FLANGE IDN

https://truckmanualshub.com/

1-41 FUEL PIPING; CHASSIS

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
82	--- CLIP; FUEL HOSE					
	8-94169-028-0		1103-		01	A ID=13 & 16.5
83	--- NUT; CLIP, FUEL TANK					
	0-91180-108-0		1103-		04	A M8 FLANGE
85	--- BOLT; CLIP, FUEL HOSE					
	0-28650-820-0		1103-		01	A M8X20 FLANGE IDN
87	--- NUT; CLIP, FUEL HOSE					
	0-91180-108-0		1103-		01	A M8 FLANGE
95	--- BUSHING; PIPE, FUEL TANK					
	9-09956-256-2		1103-		01	A ID=28 OD=35 T=17
97	--- BRACKET; CLIP					
	1-47475-299-2		1103-		01	A (B) L=50
	8-98078-201-0		1103-		01	A (C)
	8-98083-349-0		1103-		01	A (A)
	8-98083-537-0		1103-		01	A (D)
	8-98100-216-1		1103-		01	A (F)
	8-98109-768-0		1103-		01	A (E)
98	--- BOLT; BRKT, FUEL PIPE					
	0-28651-030-0		1103-		01	A M10X30 FLANGE
174	--- PIPE; FUEL, FEED, FRT					
	8-98100-140-0		1103-		01	A
213	--- BOLT; FUEL PIPE FIX					
	0-28650-820-0		1103-		01	A M8X20 FLANGE IDN

https://truckmanualshub.com/

FUEL PIPING; CHASSIS

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
217	--- COLLAR; FUEL PIPE FIX						
		1-47459-011-0		1103-		03	A ID=8
227	--- BRACKET; FUEL SEDIMENTER						
		8-98130-667-0		1103-		01	A
228	--- BOLT; BRKT, SEDIMENTER						
		0-28050-825-0		1103-		02	A (A) M8X25 FLANGE
		0-28051-050-0		1103-		02	A (C) M10X50 FLANGE
		0-28650-820-0		1103-		02	A (B) M8X20 FLANGE IDN
279	--- WASHER						
		0-91614-710-0		1103-		02	A ID=10.5 OD=26
303	--- BOLT; BRKT						
		0-28650-830-0		1103-		01	A A M8X30 FLANGE
		0-28651-030-0		1103-		01	A A M10X30 FLANGE
		0-28651-035-0		1103-		02	A M10X35 FLANGE IDN
304	--- NUT; BRKT						
		0-91180-108-0		1103-		02	A M8 FLANGE
		0-91180-108-0		1103-		01	A A M8 FLANGE
		0-91180-210-0		1103-		01	A A M10 FLANGE
		0-91180-210-0		1103-		02	A A M10 FLANGE

https://truckmanualshub.com/

1-41 FUEL PIPING; CHASSIS


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
308	--- BRACKET; FUEL PIPE						
	8-98117-691-0		1103-		01	A	
309	--- CLIP; PIPE						
	1-09709-241-0		1103-		03	A	(A) ID=10 & 10
	1-09709-243-0		1103-		03	A	(B) ID=10 & 10
345	--- PLUG						
	8-97329-623-0		1103-		02	A	NPTF3/8-18
350	--- PIPE; FUEL, DEL & RET						
	8-98084-131-0		1103-		01	A	
418	--- BRACKET; PRE FUEL FILTER						
	8-98114-787-0		1103-		01	A	
634	--- HOSE; RUBBER RETURN						
	0-01558-300-0		1103-	L	01	A	L=2400 SERVICED BY L=3000

https://truckmanualshub.com/

1-45 WATER SEDIMENTER; FUEL

FIG-NO. NO. 1

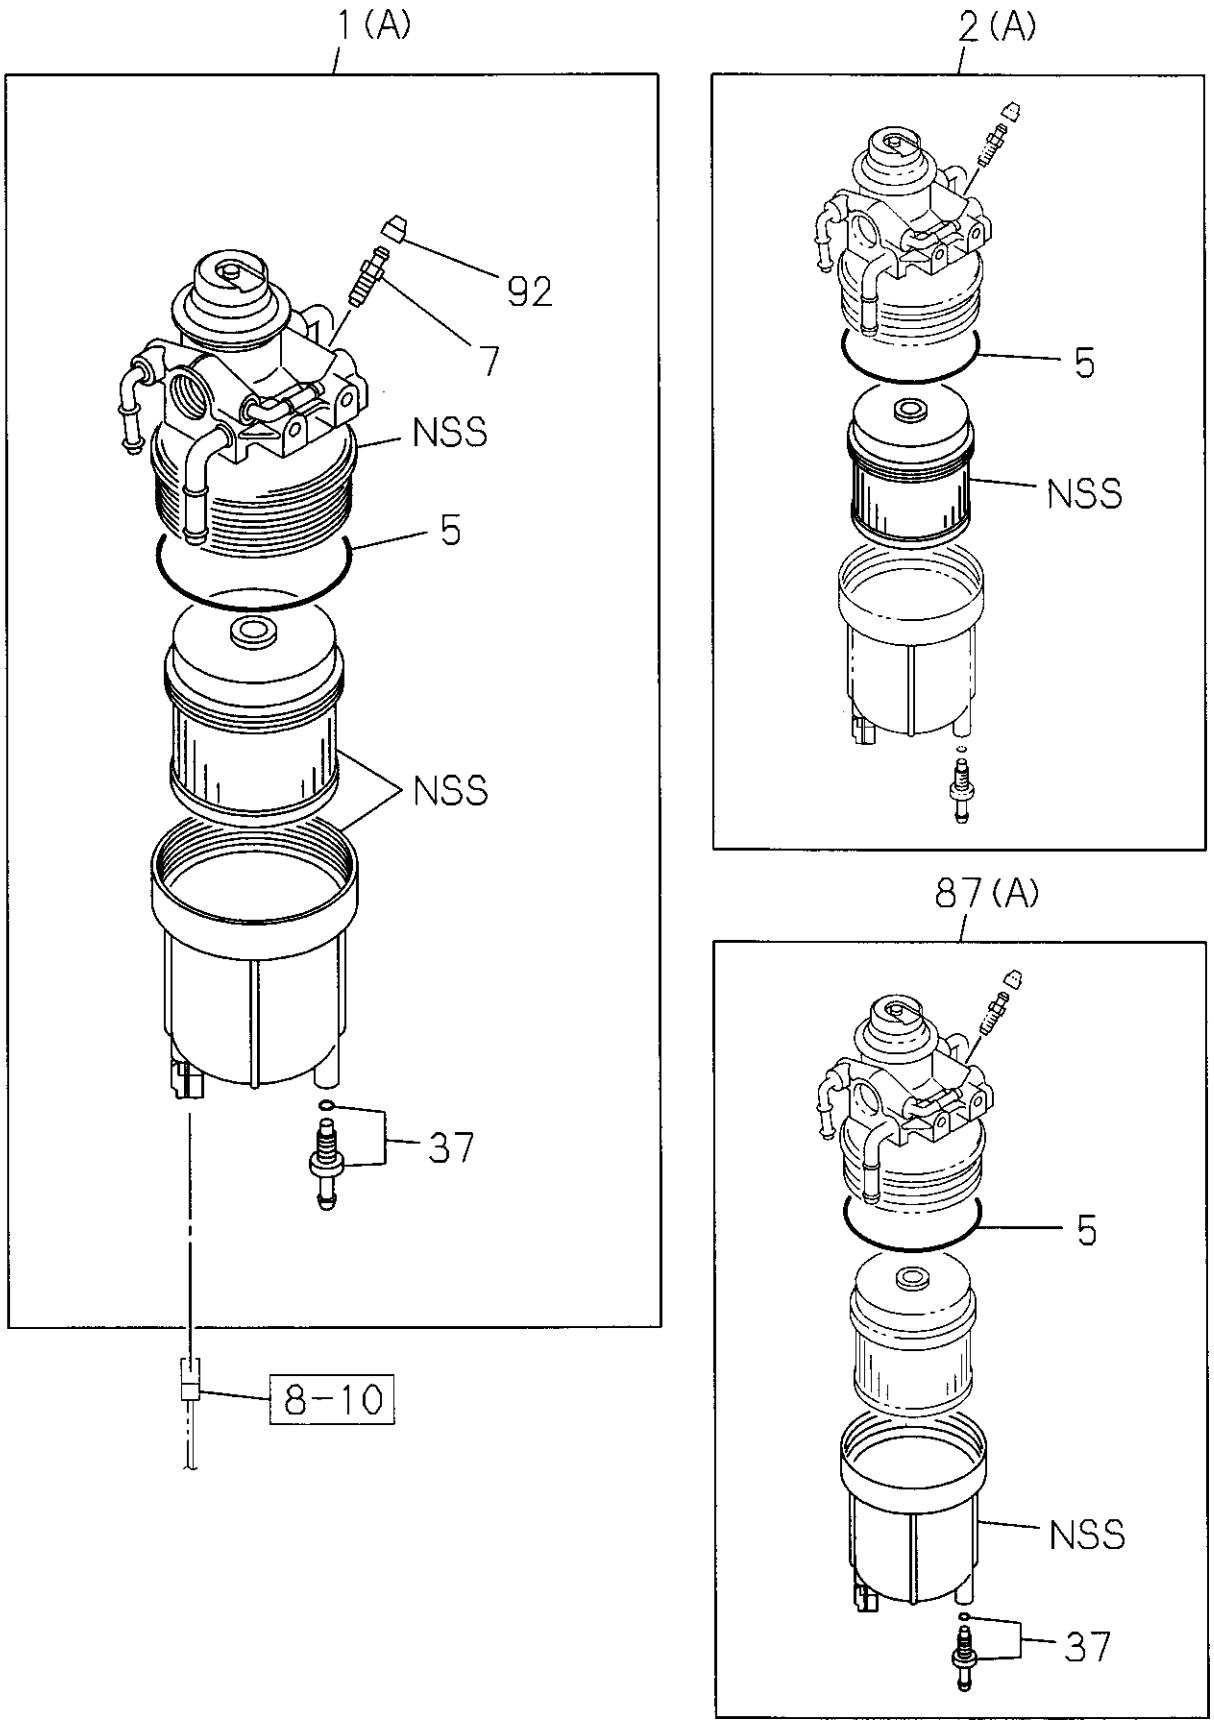


https://truckmanualshub.com/

WATER SEDIMENTER; FUEL

NO. 2

1-45

FIG-NO.

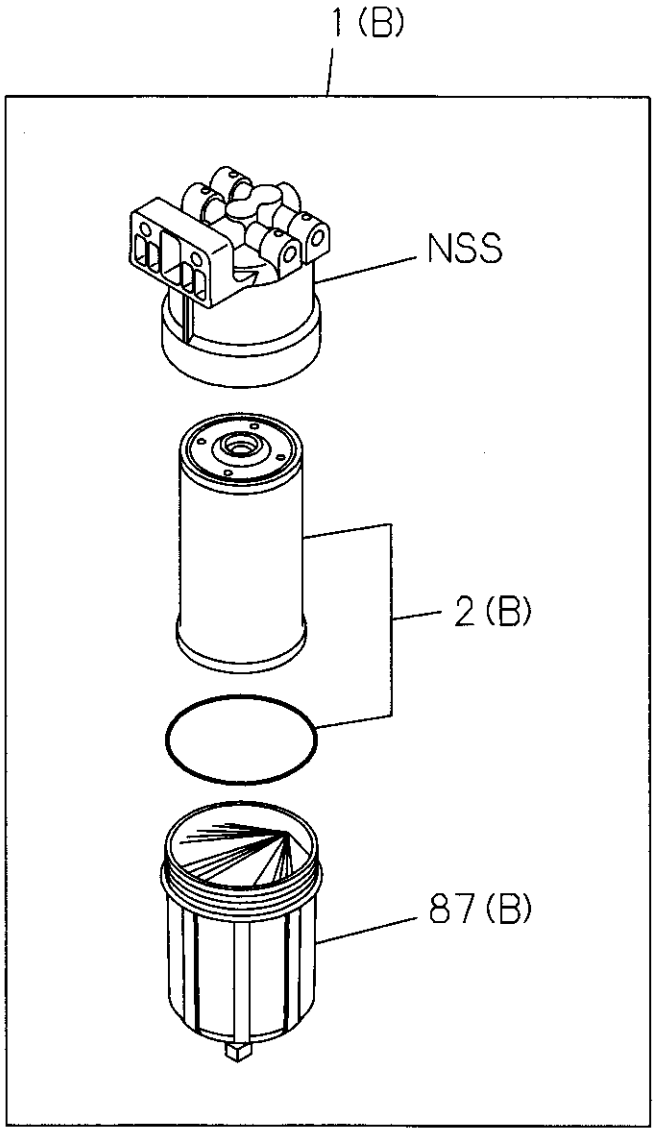

https://truckmanualshub.com/

1-45 WATER SEDIMENTER; FUEL


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	--- SEDIMENTER; FUEL						
	8-98086-193-1		1103-		01	A	(B)
	8-98162-904-0		1103-		01	A	(A)
2	-A- ELEMENT; FUEL FILTER						
	8-98092-481-1		1103-		01	A	(B)
	8-98162-897-0		1103-		01	A	(A)
5	--- GASKET; UPR COVER, SEDIMENTER						
	8-98037-015-0		1103-		01	A	
7	--- PLUG; DRAIN, SEDIMENTER						
	8-98034-312-0		1103-		01	A	M8X10
37	--- PLUG; SENSOR						
	8-98037-095-0		1103-		01	A	
87	-A- CASE ASM; SEDIMENTER						
	8-98039-987-0		1103-		01	A	(A)
	8-98092-482-1		1103-		01	A	(B)
92	--- CAP; DRAIN						
	8-98034-314-0		1103-		01	A	

https://truckmanualshub.com/

1-50 EXHAUST PIPE AND SILENCER

FIG-NO. FRONT

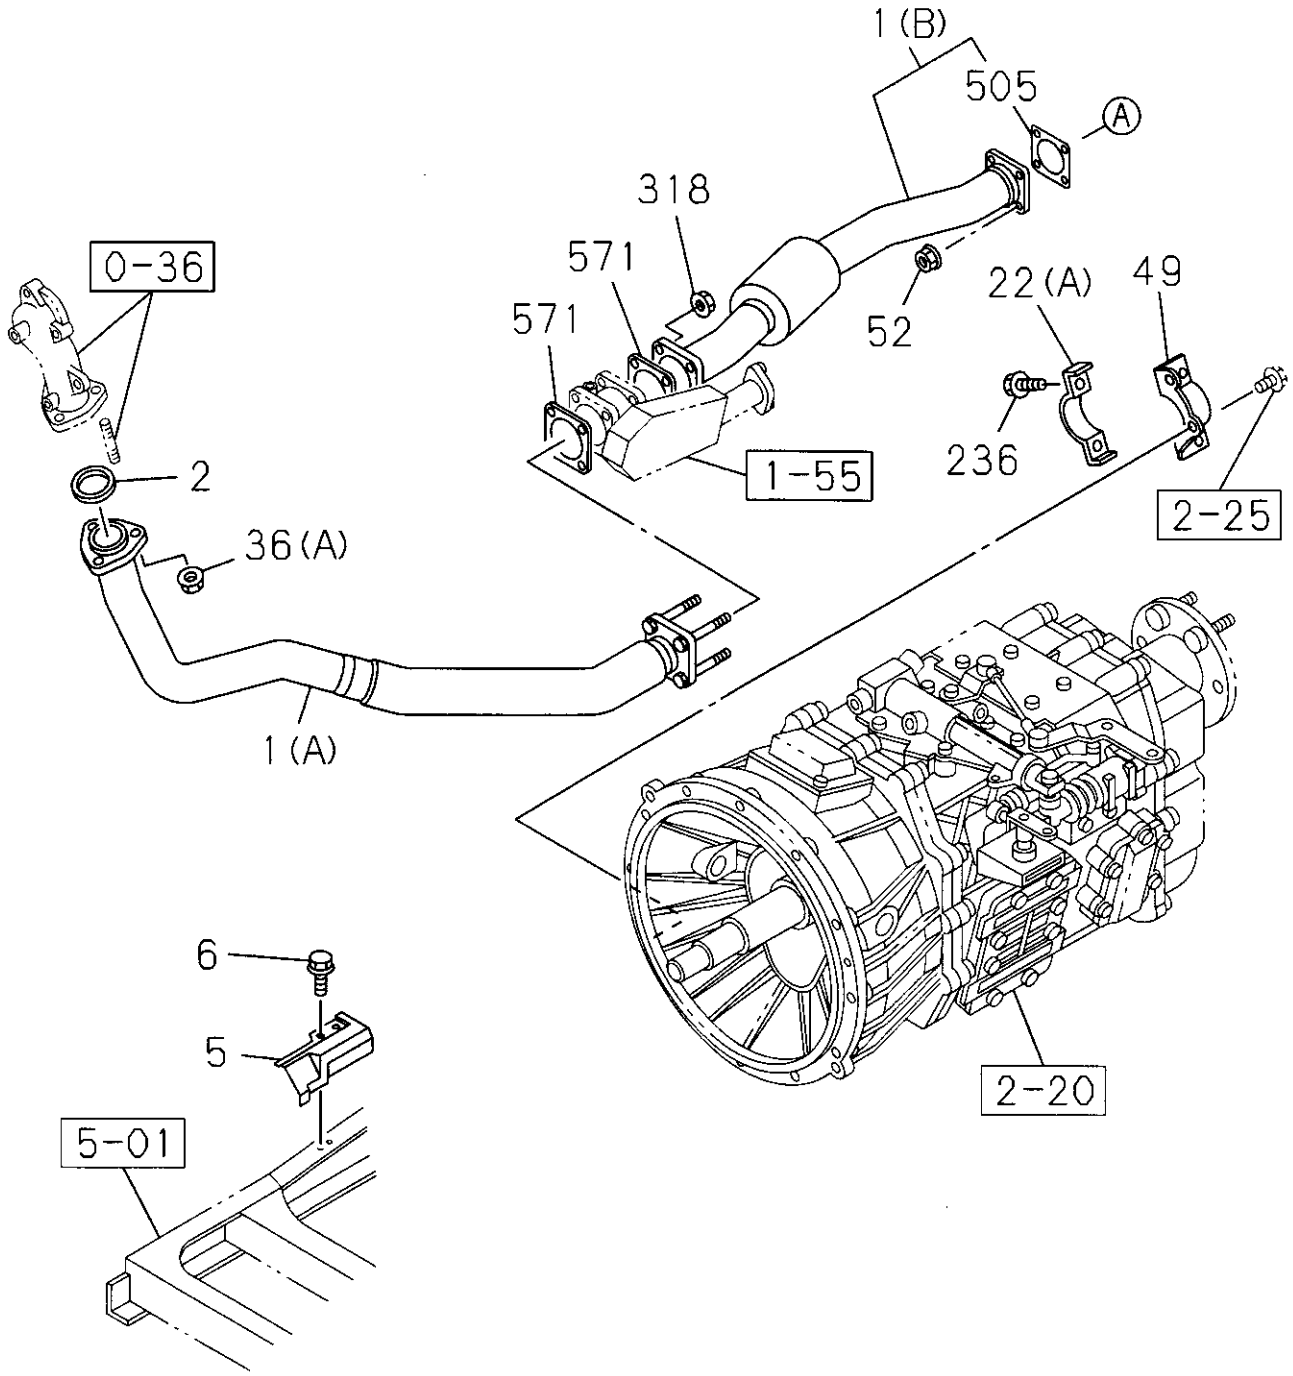


https://truckmanualshub.com/

EXHAUST PIPE AND SILENCER

REAR

1-50

FIG-NO.

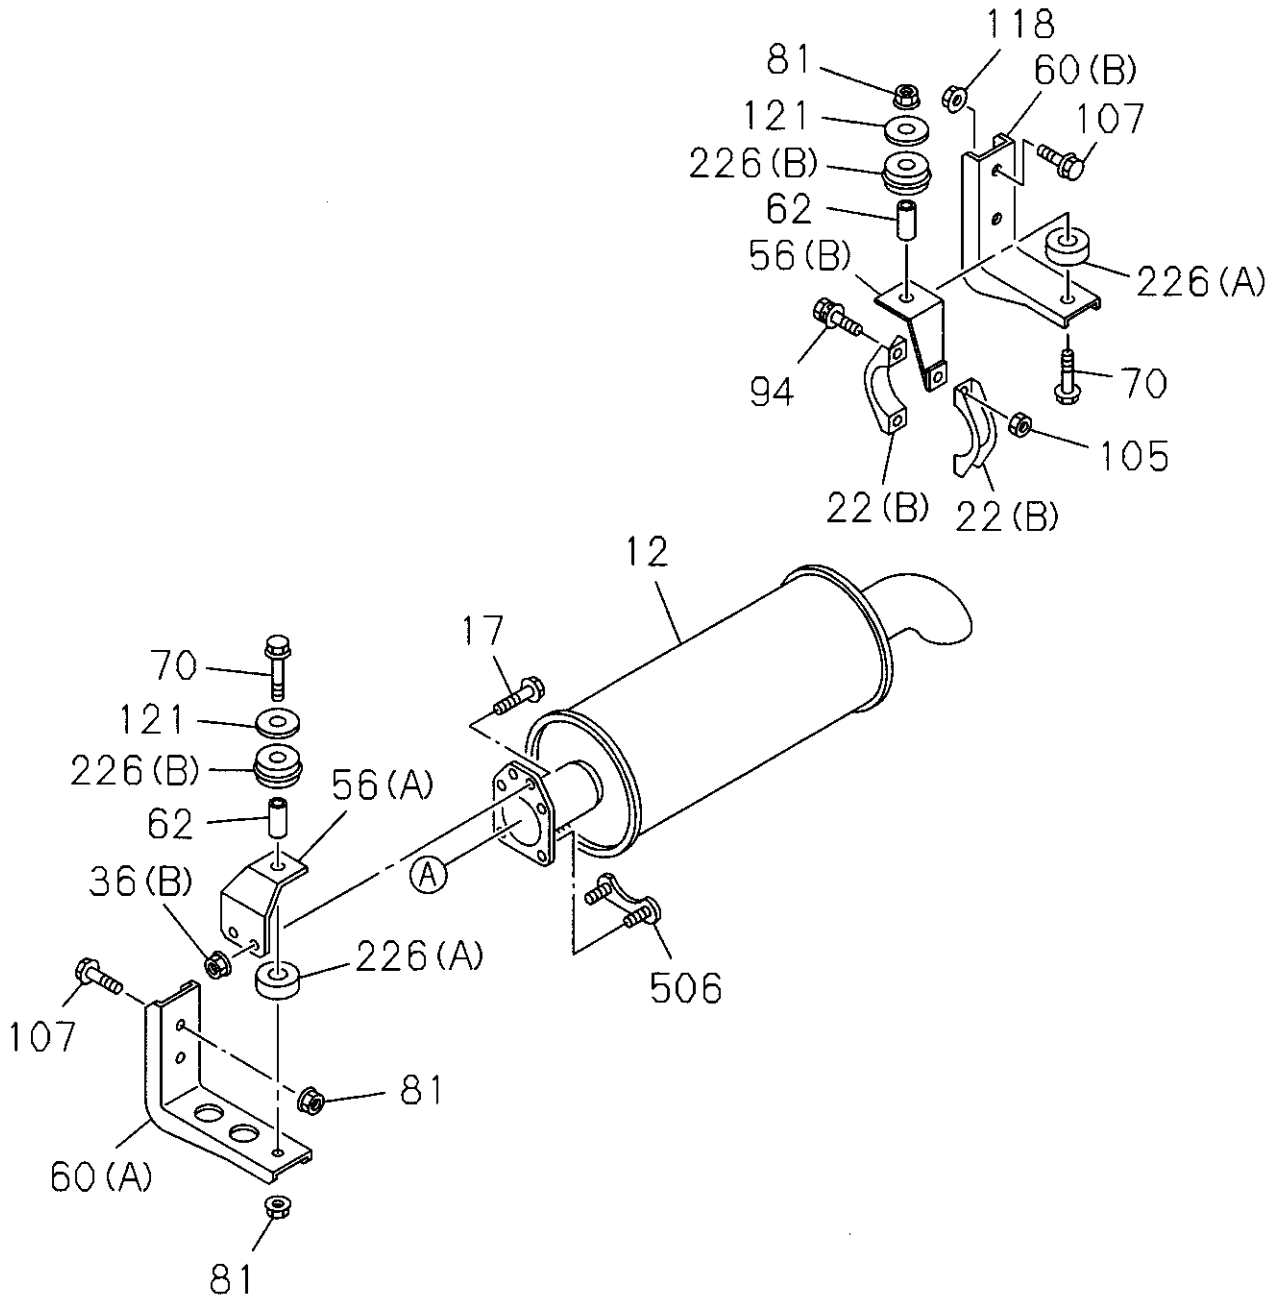

https://truckmanualshub.com/

1-50 EXHAUST PIPE AND SILENCER

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	--- PIPE; EXH						
		8-98096-347-0		1103-		01	A (B)
		8-98082-498-0		1103-	R	01	A (A)
2	--- GASKET; PIPE TO MANIF						ALSO INCLUDED IN GASKET SET(ENGINE).
		8-97381-455-0		1103-		01	A
5	--- PROTECTOR; HEAT						
		8-98089-287-1		1103-		01	A
6	--- BOLT; HEAT PROTECTOR						
		0-28650-825-0		1103-		02	A M8X25 FLANGE IDN
12	-D- SILENCER ASM; EXH						
		8-98180-140-0		1103-		01	A
17	--- BOLT; EXH PIPE						
		0-28651-035-0		1103-		02	A M10X35 FLANGE IDN
22	--- CLAMP; EXH PIPE						
		1-22133-233-0		1103-		02	A (B) ID=80-84
		1-22133-295-0		1103-		01	A (A)
36	--- NUT; EXH PIPE						
		0-91180-210-0		1103-		02	A (B) M10 FLANGE
		8-97096-192-1		1103-		03	A (A) M10 FLANGE
49	--- BRACKET; EXH PIPE TO TRANS						
		8-98042-786-0		1103-		01	A
52	--- NUT; BRKT						
		0-91180-212-0		1103-		04	A M12 FLANGE

https://truckmanualshub.com/

EXHAUST PIPE AND SILENCER

1-50

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
56	--- BRACKET; CLAMP, EXH PIPE					
	8-98074-824-1		1103-		01 A	(A)
	8-98086-352-0		1103-		01 A	(B)
60	--- BRACKET; FRAME TO BRKT					
	1-22152-274-1		1103-		01 A	(A)
	8-98059-753-1		1103-		01 A	(B)
62	--- TUBE; DIST, BRKT					
	8-98060-852-0		1103-		02 A	
70	--- BOLT; BRKT					
	0-28051-070-0		1103-		02 A	M10X70 FLANGE IDN
81	--- NUT; BRKT					
	0-91180-210-0		1103-		02 A A	M10 FLANGE
94	--- BOLT; CLAMP					
	0-28651-040-0		1103-		02 A	M10X40 FLANGE
105	--- NUT; CLAMP					
	0-91180-210-0		1103-		02 A	M10 FLANGE
107	--- BOLT; BRKT					
	0-28651-035-0		1103-		04 A	M10X35 FLANGE IDN
118	--- NUT; SILENCER MTG BRKT					
	0-91180-210-0		1103-		02 A	M10 FLANGE
121	--- WASHER; PL, BRKT					
	1-09503-154-2		1103-		02 A	ID=8.4 OD=22

https://truckmanualshub.com/

1-50 EXHAUST PIPE AND SILENCER


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
226	--- RUBBER; CUSHION						
		8-94457-277-1		1103-		02	A (A) IDN
		8-94457-278-1		1103-		02	A (B) IDN
236	--- BOLT; PIPE CLAMP TO BRKT						
		0-28651-030-0		1103-		02	A M10X30 FLANGE
318	--- NUT; EXH PIPE, FRT						
		8-97581-234-0		1103-		04	A M8 W/LK WASHER IDN
505	--- GASKET; CONV TO EXH PIPE						
		8-98096-305-0		1103-		01	A
506	--- BRACKET; STUD						
		1-22131-963-0		1103-		02	A
571	--- GASKET						
		8-97373-108-0		1103-		02	A ID=64

https://truckmanualshub.com/

1-55 EXHAUST BRAKE VALVE AND CONTROL CYLINDER

FIG-NO.

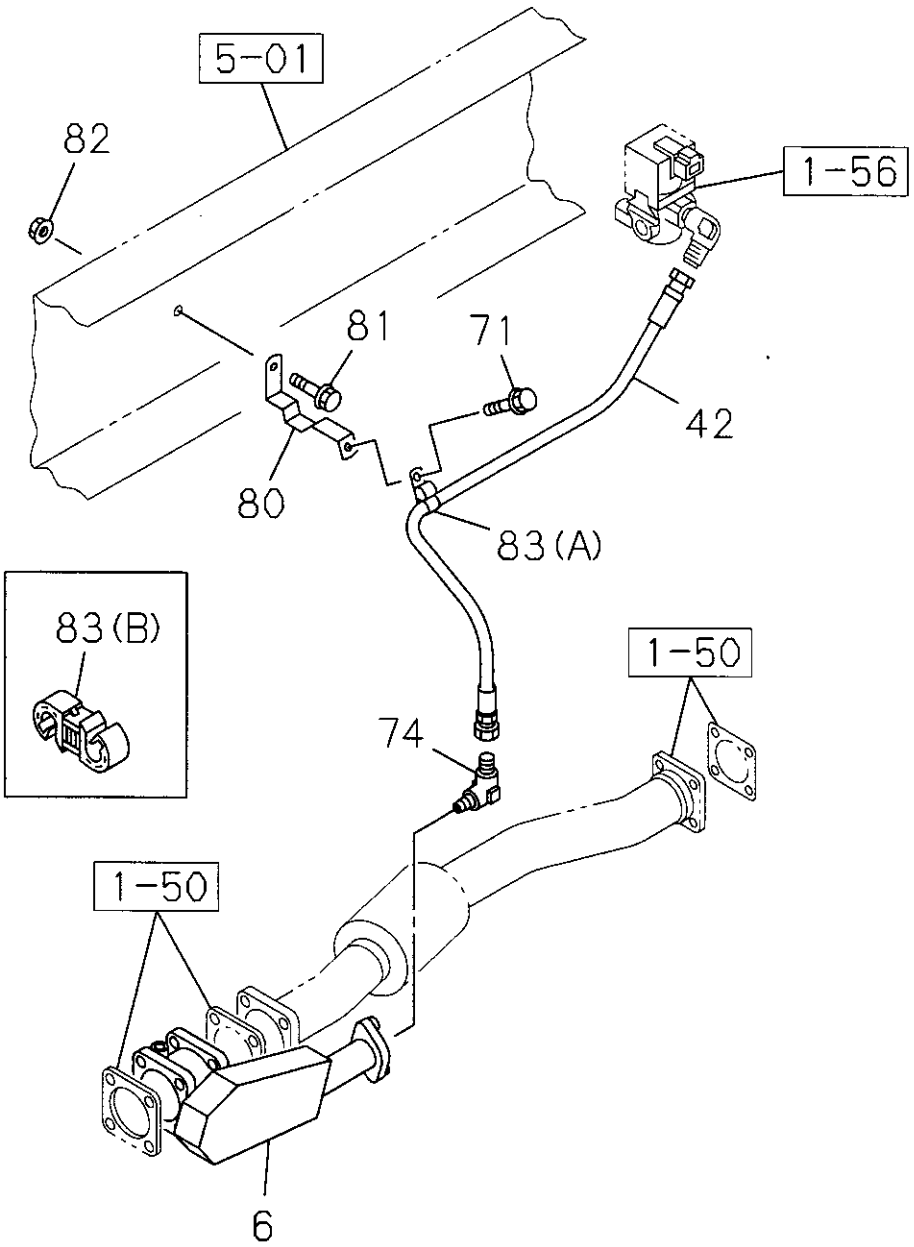


https://truckmanualshub.com/

EXHAUST BRAKE VALVE AND CONTROL CYLINDER

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A 4HK1-TCC ENG(RDV)
6	--- VALVE; EXH BRAKE	8-98054-172-5		1103-		01	A
42	--- HOSE; FLEX, EXH BRK	1-09363-639-0		1103-		01	A L=600
71	--- BOLT; CLIP	0-28650-825-0		1103-		01	A M8X25 FLANGE IDN
74	--- CONNECTOR; EXH BRK VLV	1-09650-430-0		1103-		01	A M12 & PT1/4 ELBOW
80	--- BRACKET; FLEX HOSE	8-98078-153-0		1103-		01	A
81	--- BOLT; HOSE BRKT	0-28051-025-0		1103-		01	A M10X25 FLANGE
82	--- NUT; HOSE BRKT	0-91180-210-0		1103-		01	A M10 FLANGE
83	--- CLIP; FLEX HOSE	1-09700-820-0		1103-		01	A (A) ID=11X2 L=16
		1-09709-277-1		1103-		01	A (B) ID=10 & 10

https://truckmanualshub.com/

FIG-NO.

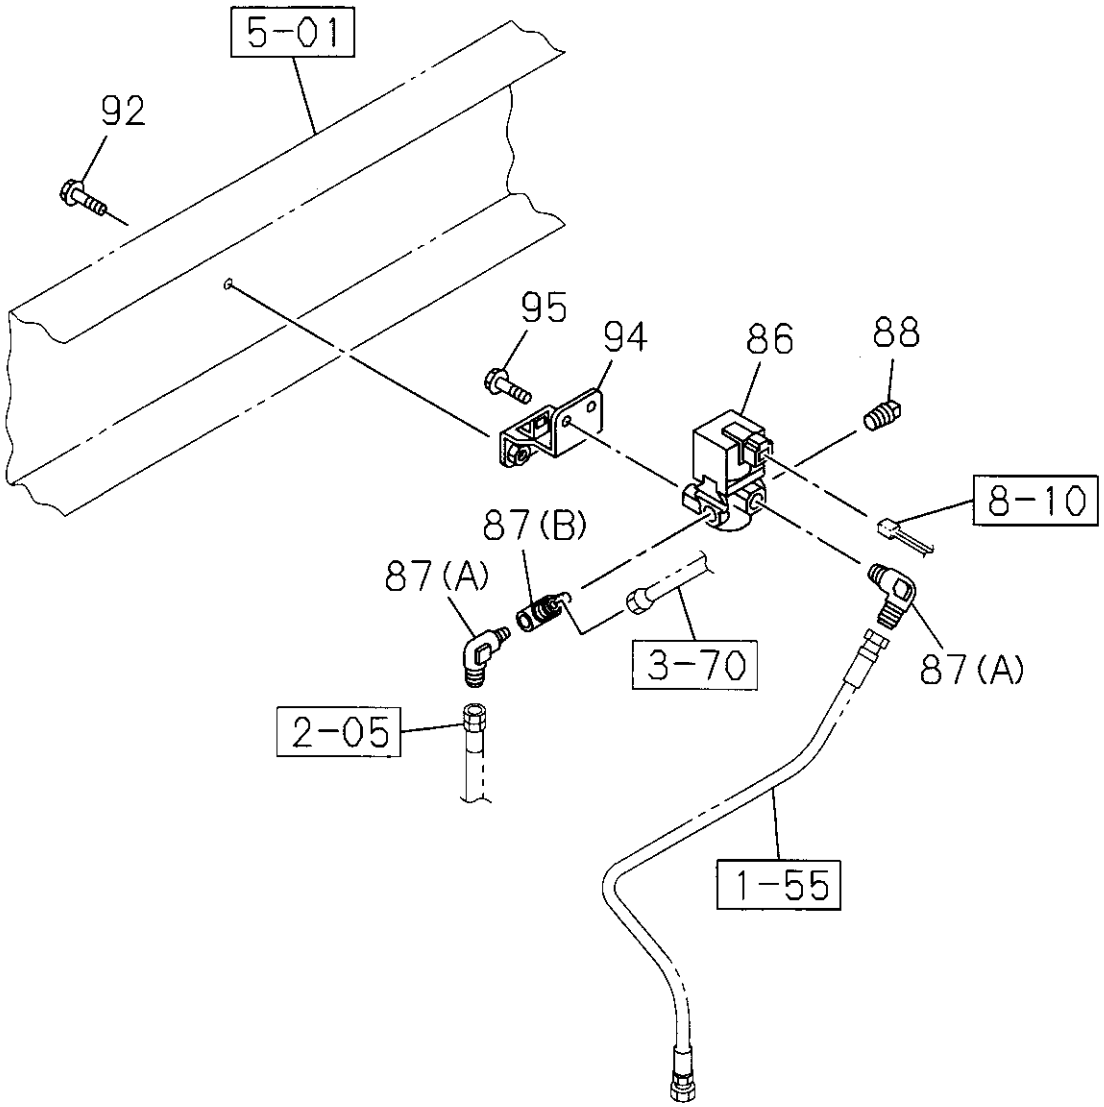

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A 4HK1-TCC ENG(RDV)
86	--- VALVE; MAG, EXH BRK					
	1-82563-871-2		1103-		01	A
87	--- CONNECTOR					
	1-09650-430-0		1103-		02	A (A) M12 & PT1/4 ELBOW
	1-09656-586-1		1103-		01	A (B) M12 & PT1/4 3WAY
88	--- PLUG					
	9-99204-513-0		1103-		01	A PT1/4
92	--- BOLT; MAG VLV					
	0-28651-030-0		1103-		02	A M10X30 FLANGE
94	--- BRACKET; MAG VLV, EXH BRAKE					
	8-98078-098-0		1103-		01	A
95	--- BOLT; BRKT, MAG VLV, EXH BRAKE					
	0-28650-820-0		1103-		02	A M8X20 FLANGE IDN


https://truckmanualshub.com/

2


https://truckmanualshub.com/


2-01 CLUTCH

FIG-NO. CLUTCH DISC AND PLATE

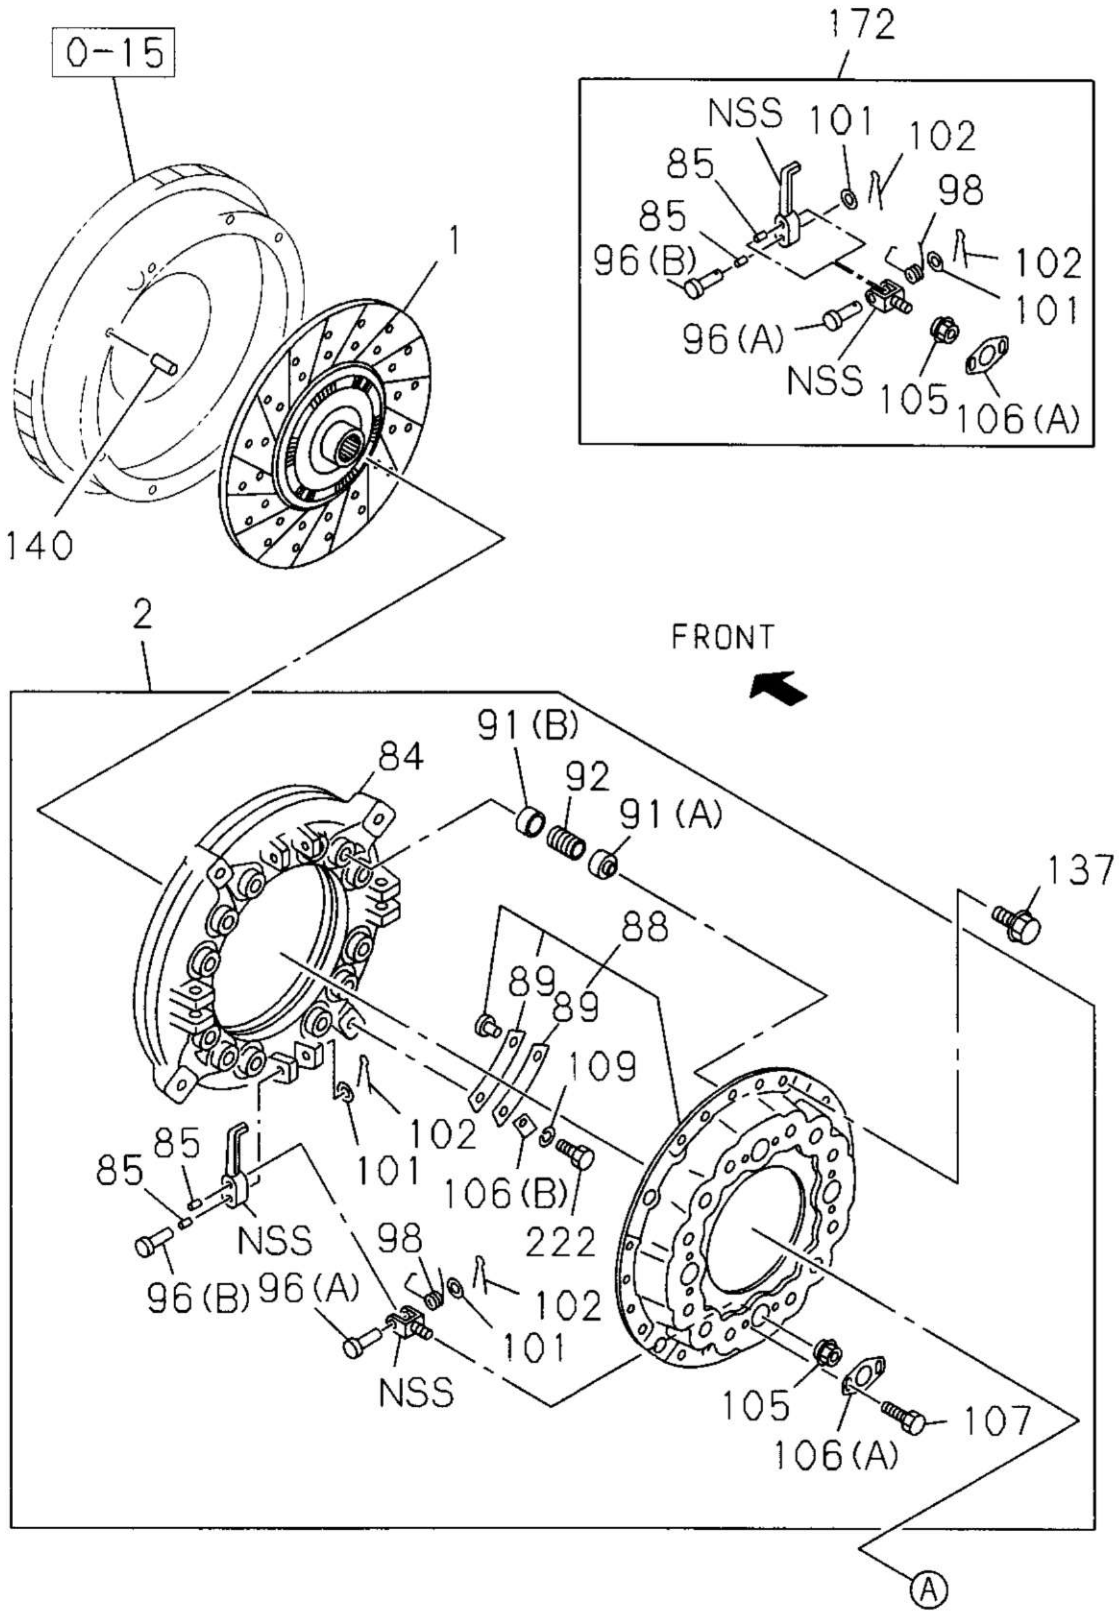

https://truckmanualshub.com/

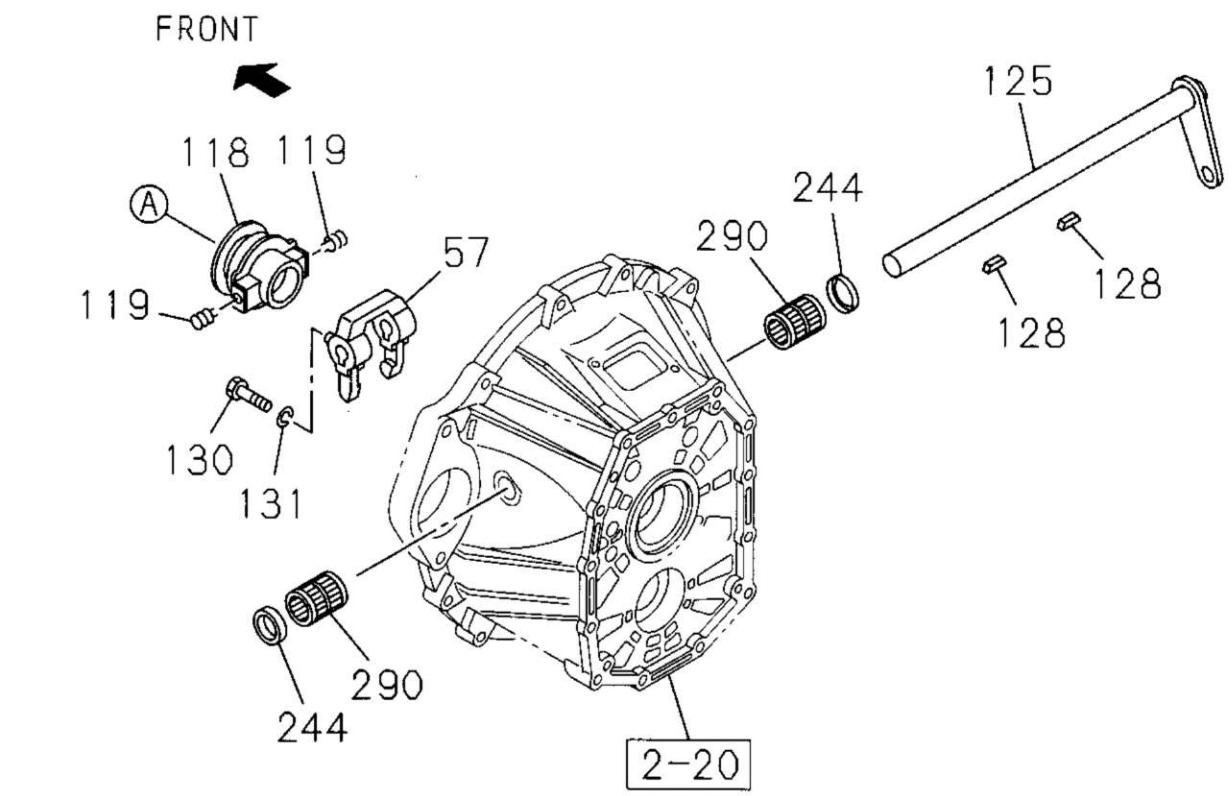

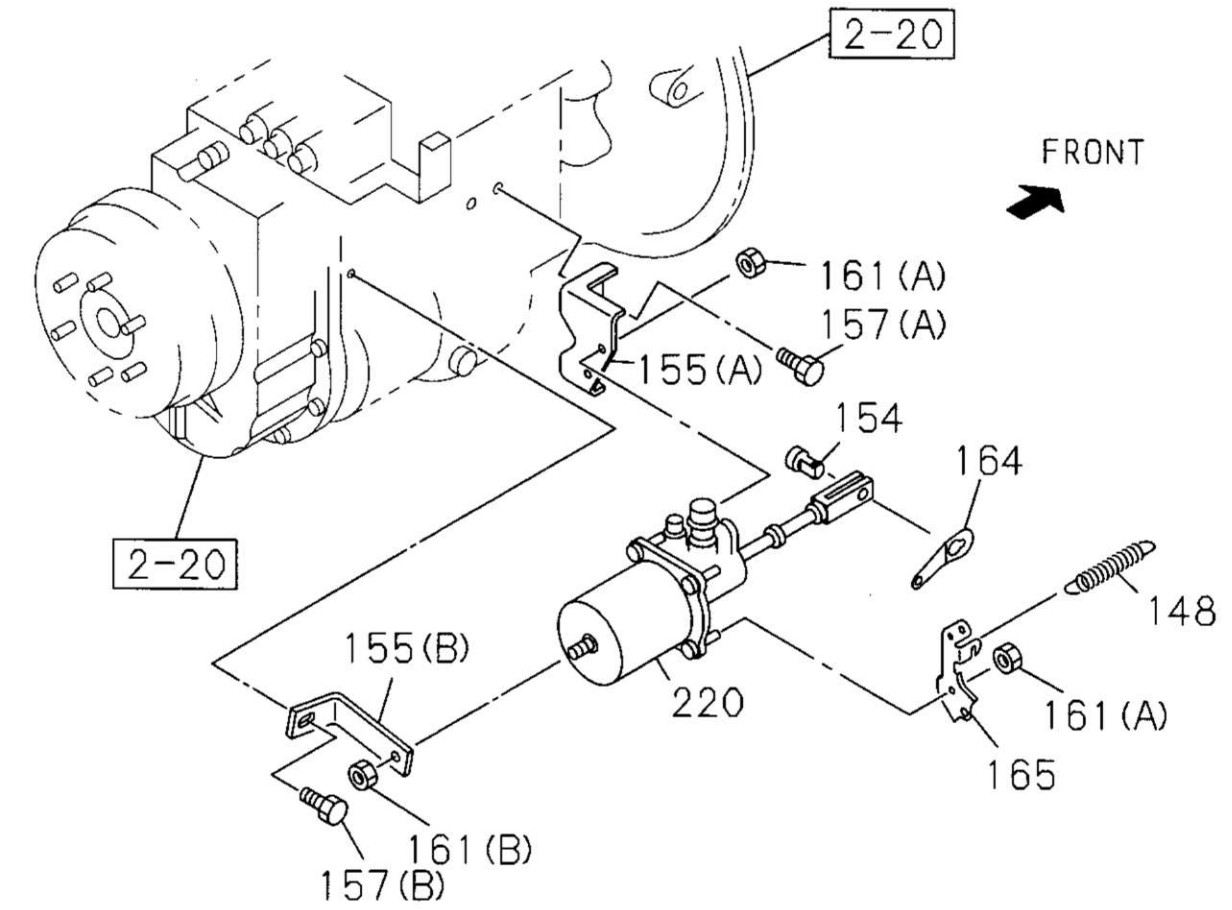

https://truckmanualshub.com/

2-01 CLUTCH

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	A MZZ6W M/T(RSA)
1	-A- DISC; CLUTCH						
	1-31240-949-1		1103-		01	A	14"
2	-B- PLATE ASM; PRESSURE, CLU						
	1-31220-407-0		1103-		01	A	
57	--- FORK; SHIFT, CLU						
	1-31341-031-0		1103-		01	A	
84	--- PLATE; PRESSURE						
	1-31221-129-0		1103-		01	A	
85	--- BUSHING; RELEASE LEVER						
	9-31239-116-0		1103-		08	A	
88	--- COVER SUB ASM; CLU						
	1-31211-038-0		1103-		01	A	
89	--- PLATE; STRAP						
	1-31229-001-0		1103-		08	A	
91	--- SEAT; SPR						
	1-31219-012-0		1103-		08	A	(A) ID=37 H=25
	1-31219-013-0		1103-		08	A	(B) ID=37 H=15
92	--- SPRING; CLU						
	1-31214-060-0		1103-		08	A	
96	--- PIN; RELEASE LEVER						
	1-31232-005-0		1103-		04	A	(A) L=49.0
	1-31232-014-0		1103-		04	A	(B) L=57.0
98	--- SPRING; RETURN						
	1-31233-003-0		1103-		04	A	

https://truckmanualshub.com/

CLUTCH

2-01

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
101	--- WASHER; RELEASE LEVER					
	1-31239-058-0		1103-		08 A	IDN
102	--- PIN; SPLIT, RELEASE LEVER					
	9-08113-022-0		1103-		08 A	OD=2.7 L=22
105	--- NUT; SUPPORT					
	1-31235-014-0		1103-		04 A	IDN
106	--- PLATE; LK, LEVER SUPPORT					
	1-31235-008-0		1103-		04 A	(B)
	1-31239-019-0		1103-		04 A	(A)
107	--- BOLT; LK PLATE					
	1-31239-061-0		1103-		08 A	IDN
109	--- WASHER; LK, STRAP					
	0-91510-510-0		1103-		04 A	ID=10.2
118	-B- BEARING; CLU RELEASE					
	1-31310-012-0		1103-		01 A	
119	-B- SPRING; SHIFT FORK					
	1-31329-024-0		1103-		02 A	
125	--- SHAFT; CLU					
	1-31342-331-0		1103-		01 A	
128	--- KEY; FEATHER, CLU SHAFT					
	9-09867-008-0		1103-		02 A	
130	--- SCREW; SHIFT FORK					
	0-61200-814-0		1103-		01 A	M8X14
131	--- WASHER; LK, SHIFT FORK					
	0-91510-508-0		1103-		01 A	ID=8.2

https://truckmanualshub.com/

2-01 CLUTCH

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	
						A	MZZ6W M/T(RSA)
137	--- BOLT; CLU COVER						
	0-28151-020-0		1103-		12	A	M10X20 FLANGE
140	--- PIN; STRAIGHT						
	8-94410-361-0		1103-		02	A	L=25
148	-B- SPRING; CLU RETURN						
	1-09583-291-1		1103-		01	A	L=206.4
154	--- PIN; JAW JOINT						
	1-31424-009-0		1103-		01	A	
155	--- BRACKET; MINIPACK						
	1-31429-464-0		1103-		01	A	(A)
	1-31429-465-1		1103-		01	A	(B)
157	--- BOLT; BRKT						
	0-28151-020-0		1103-		02	A	(A) M10X20 FLANGE
	0-28051-025-0		1103-		01	A	(B) M10X25 FLANGE
161	--- NUT; BRKT						
	0-91180-208-0		1103-		04	A	(A) M8 FLANGE
	0-91180-108-0		1103-		01	A	(B) M8 FLANGE
164	--- EYE; SPRING						
	1-31426-019-1		1103-		01	A	
165	--- BRACKET; SPR EYE, MINIPACK, FLEX TUBE						
	1-47471-291-0		1103-		01	A	
172	--- LEVER KIT; RELEASE, CLU						
	1-87831-173-1		1103-		01	A	

https://truckmanualshub.com/


CLUTCH


KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	MZZ6W M/T(RSA)
220	--- BOOSTER ASM; CLU						
	8-98177-654-0		1103-		01	A	SEE FIG-NO 2-07 FOR COMPONENT.
222	--- BOLT; STRAP						
	1-31239-059-0		1103-		04	A	IDN
244	--- SEAL; DUST						
	1-09625-002-0		1103-		02	A	ALSO INCLUDED IN GASKET SET(M/T).
290	--- BEARING; NEEDLE						
	1-09811-002-1		1103-		02	A	NTN

https://truckmanualshub.com/

2-03 CLUTCH PEDAL AND CONTROL

FIG-NO.

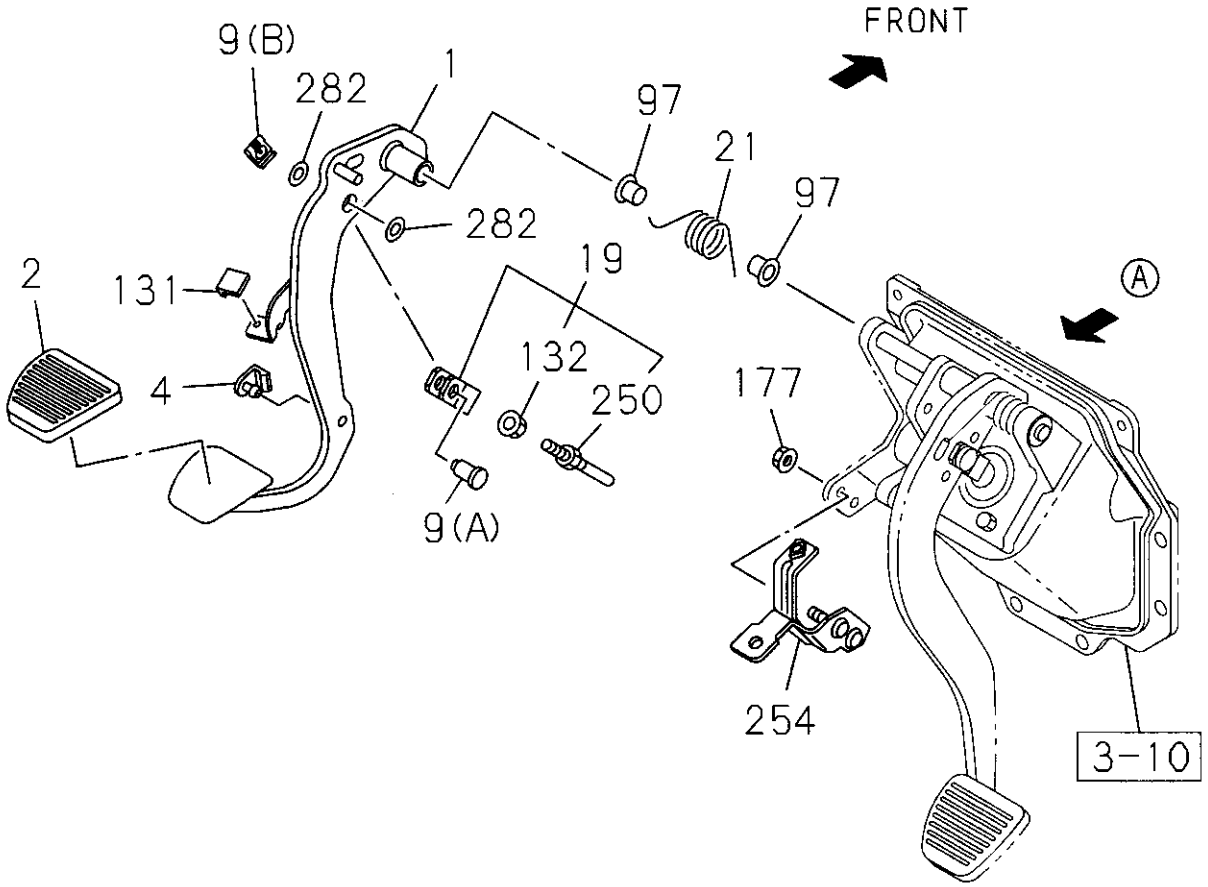

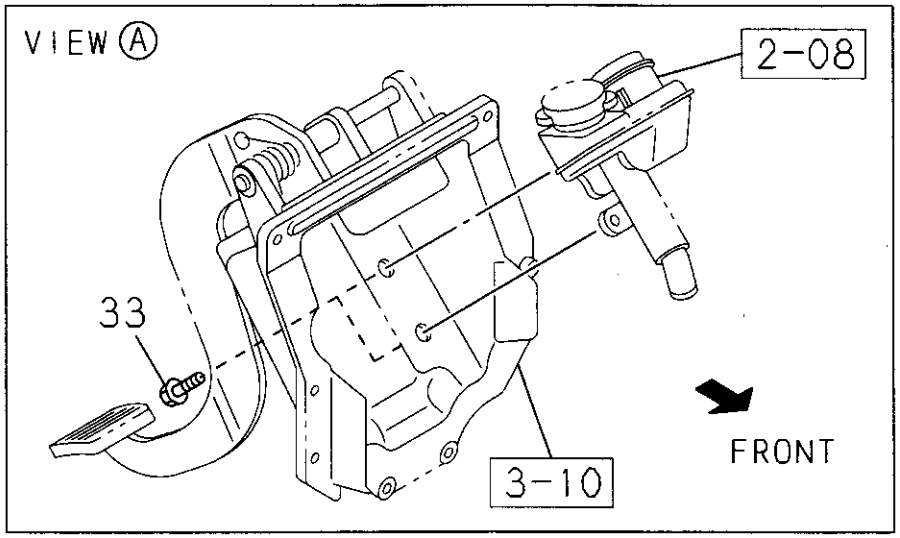

https://truckmanualshub.com/

CLUTCH PEDAL AND CONTROL

2-03

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	--- PEDAL; CLU	8-97613-941-1		1103-		01	A
2	--- COVER; CLU PEDAL	8-98056-865-0		1103-		01	A
4	--- STOPPER; CLU PEDAL	8-98079-251-0		1103-		01	A
9	--- PIN; CLU PEDAL	8-98007-161-0		1103-		01	A (B)
		8-98147-657-0		1103-		01	A (A)
19	--- ROD ASM; PUSH, CLU	8-98021-406-1		1103-		01	A
21	--- SPRING; RETURN, CLU PEDAL	8-98021-560-0		1103-		01	A
33	--- BOLT; CLU M/CYL TO BRKT	0-28051-220-0		1103-		02	A M12X20 FLANGE
97	--- BUSHING; CLU PEDAL SHAFT	8-94238-596-0		1103-		02	A
131	--- STOPPER; CLU SW	8-97302-305-0		1103-		01	A
132	--- NUT; LK, PUSH ROD	0-91180-108-0		1103-		01	A M8 FLANGE
177	--- NUT; BRKT	0-91180-108-0		1103-		02	A M8 FLANGE
250	--- ROD; PUSH, CLU	8-97615-589-0		1103-		01	A
254	--- BRACKET; CLU SENSOR	8-98021-377-1		1103-		01	A

https://truckmanualshub.com/

2-03 CLUTCH PEDAL AND CONTROL


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
282	--- SPACER; CLU PEDAL					
	8-98070-329-0		1103-		02	A

https://truckmanualshub.com/

2-05 CLUTCH PIPING

FIG-NO. NO. 1

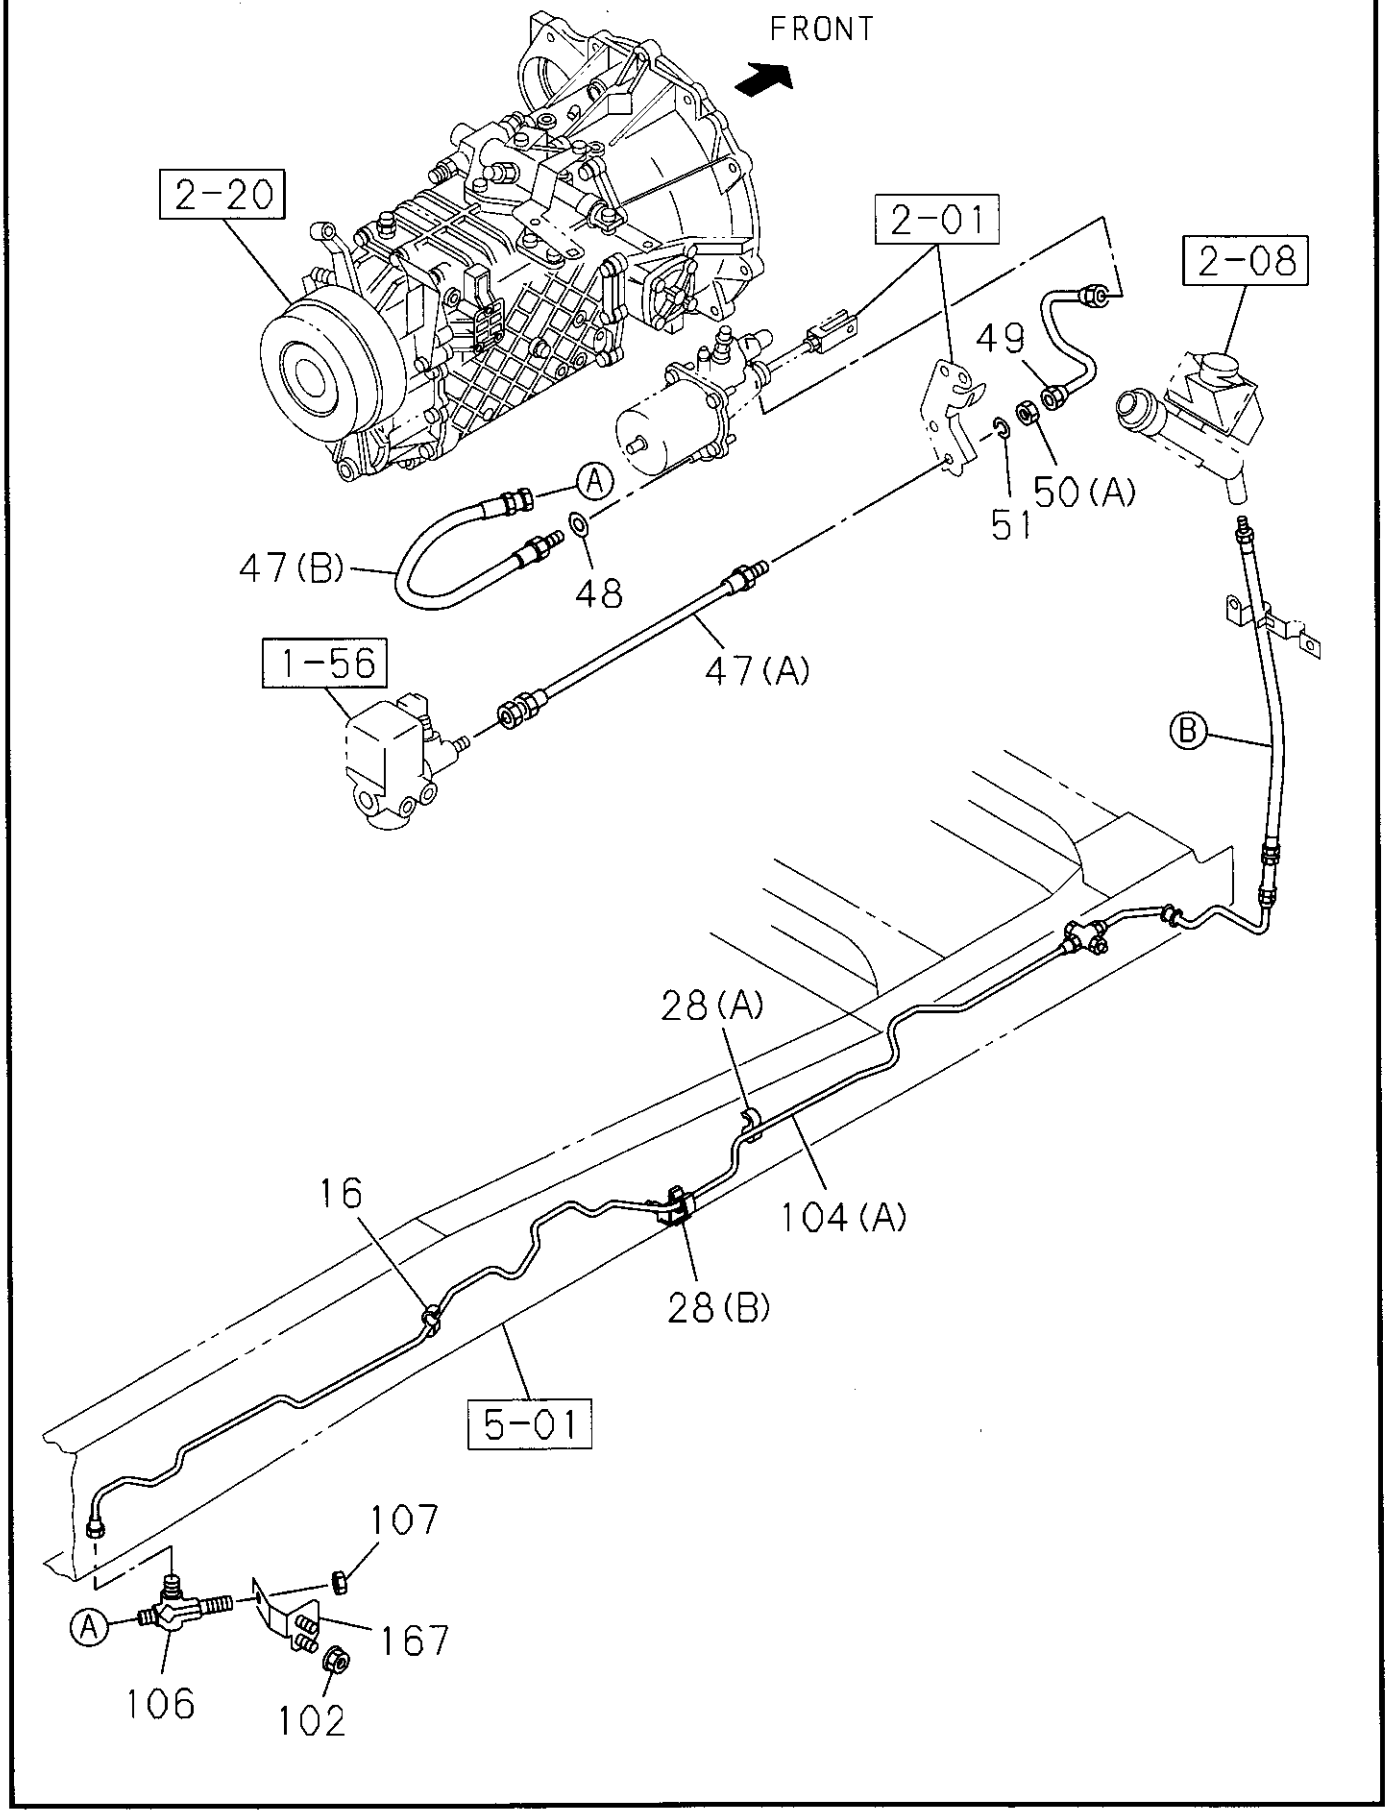


https://truckmanualshub.com/

CLUTCH PIPING

NO. 2

2-05

FIG-NO.

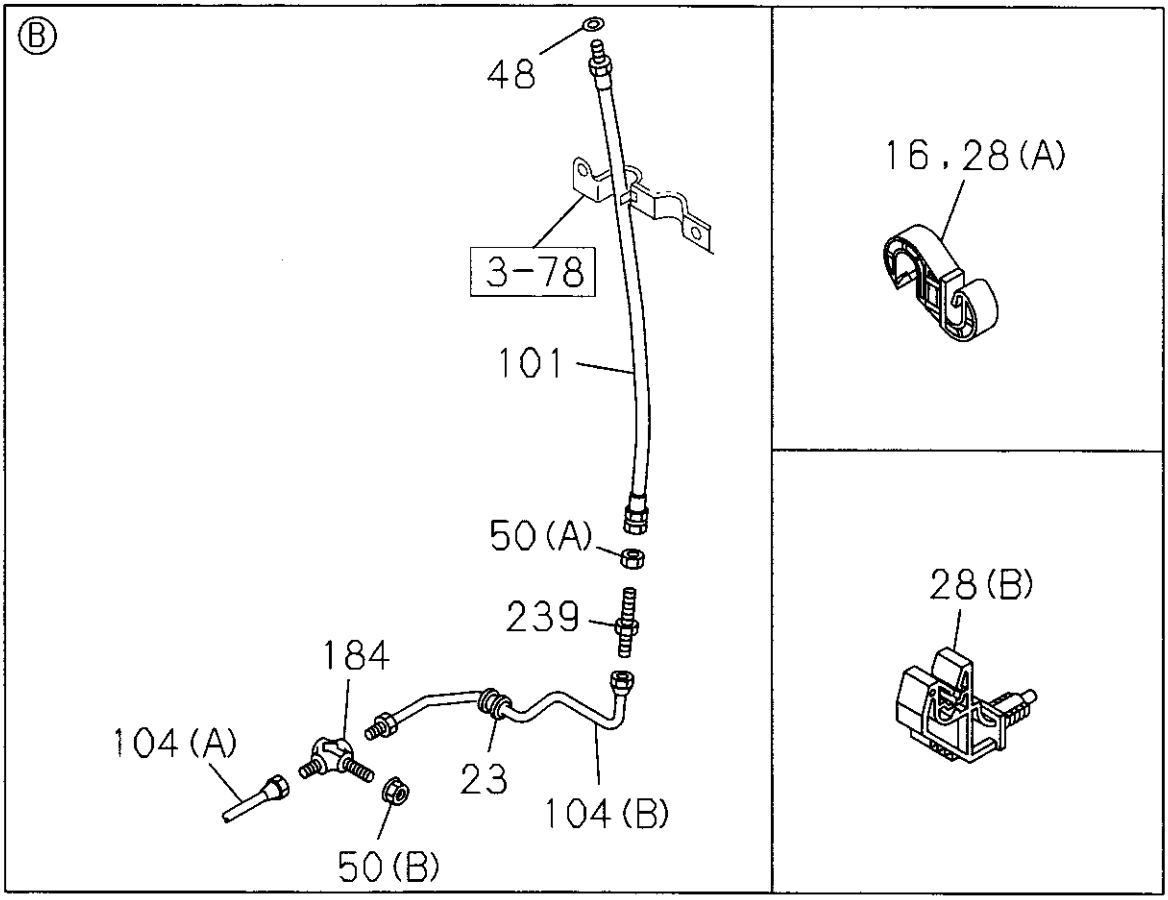

https://truckmanualshub.com/

2-05 CLUTCH PIPING

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
16	--- CLIP; FLEX HOSE						
		1-09709-278-1		1103-		01	A ID=10 & 12
23	--- GROMMET; CLU PIPE						
		1-09332-130-0		1103-		01	A ID=15 OD=20 T=17.5
28	--- CLIP; OIL PIPE						
		1-09701-247-1		1103-		01	A (B) ID=6.35
		1-09709-274-1		1103-		03	A (A) ID=6.35 & 10.0
47	--- HOSE; FLEX, CLU CONT						
		1-09363-801-0		1103-		01	A (A) L=720
		8-98072-346-0		1103-		01	A (B) L=440
48	--- GASKET; FLEX HOSE, CLU CONT						
		9-09571-410-0		1103-		02	A ID=10.2 OD=16.0
49	--- PIPE; AIR, FLEX HOSE TO CLU BOOSTER						
		1-49124-782-0		1103-		01	A L=207
50	--- NUT; UNION						
		0-91111-512-0		1103-		01	A (B) M12
		9-09840-280-0		1103-		01	A A (A) M12
51	--- WASHER; LK						
		0-91510-512-0		1103-		01	A ID=12.2
101	--- HOSE; FLEX, OIL PIPE TO OIL PIPE						
		8-98072-346-0		1103-		01	A L=440

https://truckmanualshub.com/


CLUTCH PIPING

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
102	--- NUT; FLEX HOSE, CLU CONT					
	0-91180-210-0		1103-		02	A M10 FLANGE
104	--- PIPE; OIL, FLEX HOSE TO CONNECTOR					
	8-98067-058-0		1103-		01	A (B) L=336
	8-98162-742-1		1103-		01	A (A) L=2683
106	--- UNION; OIL PIPE					
	1-09654-059-2		1103-		01	A M12 2WAY
107	--- NUT; UNION, OIL PIPE					
	0-91111-512-0		1103-		01	A M12
167	--- BRACKET; UNION					
	8-98086-811-1		1103-		01	A
184	--- UNION; FLEX HOSE					
	8-98150-865-0		1103-		01	A
239	--- UNION; CLU HOSE					
	0-92113-306-0		1103-		01	A M12 L=66.5

https://truckmanualshub.com/

2-07 CLUTCH BOOSTER; MINIPACK

FIG-NO.

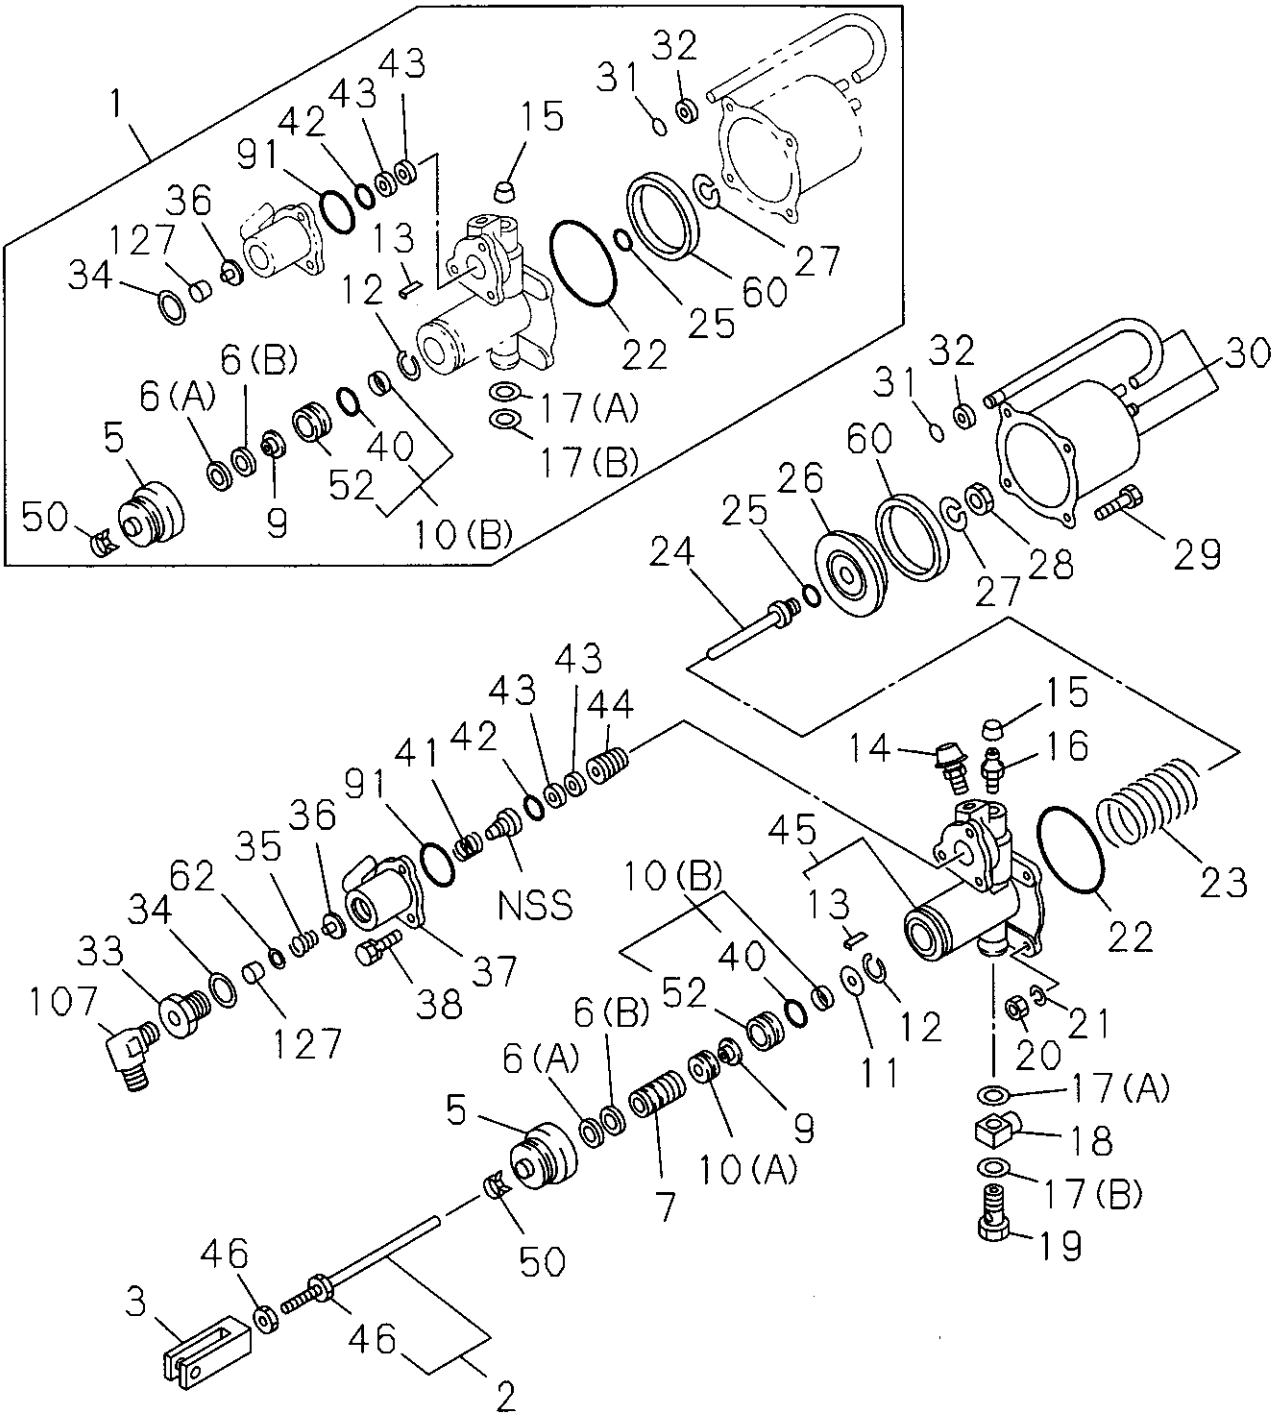

https://truckmanualshub.com/

CLUTCH BOOSTER; MINIPACK

2-07

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
1	--- REPAIR KIT; CLU BOOSTER					
	1-31829-605-0		1103-		01	A
2	--- ROD; PUSH, CLU BOOSTER					
	1-31824-251-0		1103-		01	A
3	--- CLEVIS; PUSH ROD, CLU BOOSTER					
	1-31829-186-0		1103-		01	A
5	--- GUARD; PISTON, CLU BOOSTER					
	1-31829-503-0		1103-		01	A
6	--- GASKET; PISTON CUP, CLU BOOSTER					
	1-31829-032-0		1103-		01	A (B)
	1-31829-033-0		1103-		01	A (A)
7	--- PISTON; CLU BOOSTER					
	1-31821-064-0		1103-		01	A
9	--- GASKET; PISTON CUP, CLU BOOSTER					
	1-31829-003-0		1103-		01	A
10	--- RETAINER; PISTON, CLU BOOSTER					
	1-31829-107-0		1103-		01	A (B)
	1-31829-108-0		1103-		01	A (A)
11	--- WASHER; PISTON, CLU BOOSTER					
	1-31829-105-0		1103-		01	A
12	--- RING; RET, CLU BOOSTER					
	9-83315-315-0		1103-		01	A
13	--- PIN; SPR					
	1-31829-109-0		1103-		01	A
14	--- COVER; EXH, CLU BOOSTER					
	1-31829-564-0		1103-		01	A
15	--- PROTECTOR; END PLATE, CLU BOOSTER					
	9-83335-044-0		1103-		01	A

https://truckmanualshub.com/

2-07 CLUTCH BOOSTER; MINIPACK

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
16	--- PLUG; END PLATE, CLU BOOSTER					
	9-83331-704-0		1103-		01	A
17	--- GASKET; CONN, CLU BOOSTER					
	9-09920-267-0		1103-		01	A (A)
	9-09920-268-0		1103-		01	A (B)
18	--- CONNECTOR; END PLATE, CLU BOOSTER					
	1-31829-248-0		1103-		01	A
19	--- BOLT; EYE, END PLATE, CLU BOOSTER					
	9-83315-047-0		1103-		01	A
20	--- NUT; END PLATE TO SHELL, CLU BOOSTER					
	9-83315-085-0		1103-		04	A
21	--- WASHER; END PLATE TO SHELL, CLU BOOSTER					
	9-09150-508-0		1103-		04	A ID=8.2
22	--- GASKET; END PLATE TO SHELL, CLU BOOSTER					
	1-09623-327-0		1103-		01	A
23	--- SPRING; SHELL, CLU BOOSTER					
	1-31829-358-0		1103-		01	A
24	--- ROD; PUSH, CLU BOOSTER					
	1-31829-112-0		1103-		01	A
25	--- GASKET; PUSH ROD, CLU BOOSTER					
	1-09623-321-0		1103-		01	A
26	--- PISTON; SHELL, CLU BOOSTER					
	1-31821-083-0		1103-		01	A
27	--- SPRING; CLU BOOSTER					
	1-31829-111-0		1103-		01	A
28	--- NUT; PUSH ROD, CLU BOOSTER					
	9-88510-365-0		1103-		01	A

https://truckmanualshub.com/

CLUTCH BOOSTER; MINIPACK

2-07

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
29	--- BOLT; END PLATE TO SHELL, CLU BOOSTER					
	1-31829-015-0		1103-		04	A
30	--- SHELL; CYL, CLU BOOSTER					
	1-31811-123-0		1103-		01	A
31	--- GASKET; SHELL, CLU BOOSTER					
	1-31829-113-0		1103-		01	A
32	--- BUSHING; SHELL, CLU BOOSTER					
	1-31829-114-0		1103-		01	A
33	--- CONNECTOR; UPR, VLV, CLU BOOSTER					
	1-31829-212-0		1103-		01	A
34	--- GASKET; CONN, CLU BOOSTER					
	1-31829-053-0		1103-		01	A
35	--- SPRING; POPPET VLV, CLU BOOSTER					
	1-31829-537-0		1103-		01	A
36	--- VALVE; POPPET, CLU BOOSTER					
	1-31829-536-0		1103-		01	A
37	--- BODY; UPR, VLV, CLU BOOSTER					
	1-31811-146-0		1103-		01	A
38	--- SCREW; UPR VLV TO END PLATE, CLU BOOSTE					
	9-83315-113-0		1103-		03	A
40	--- GASKET; PISTON, CLU BOOSTER					
	1-31829-037-0		1103-		01	A
41	--- SPRING; DIAPH, CLU BOOSTER					
	1-31829-420-0		1103-		01	A
42	--- GASKET; FITTING, CLU BOOSTER					
	1-31829-143-0		1103-		01	A
43	--- GASKET; UPR VLV, CLU BOOSTER					
	1-31829-060-0		1103-		02	A
44	--- PISTON; UPR VLV, CLU BOOSTER					
	1-31821-087-0		1103-		01	A

https://truckmanualshub.com/

2-07 CLUTCH BOOSTER; MINIPACK


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A MZZ6W M/T(RSA)
45	--- PLATE; END, CLU BOOSTER					
	1-31811-144-0		1103-		01	A
46	--- NUT; PUSH ROD, CLU BOOSTER					
	1-31824-126-0		1103-		02	A
50	--- CLAMP; PISTON GUARD, CLU BOOSTER					
	1-31829-599-0		1103-		01	A
52	--- SEAL; OIL, END PLATE, CLU BOOSTER					
	9-83315-118-0		1103-		01	A
60	--- GASKET; SHELL, CLU BOOSTER					
	1-31829-535-0		1103-		01	A
62	--- RETAINER; POPPET					
	1-31829-489-0		1103-		01	A
91	--- GASKET; CLU BOOSTER					
	1-31829-103-0		1103-		01	A
107	--- CONNECTOR; ELBOW					
	1-09650-358-1		1103-		01	A
127	--- FILTER; POPPET					
	1-31829-495-0		1103-		01	A

https://truckmanualshub.com/

2-08 CLUTCH MASTER CYLINDER

FIG-NO.

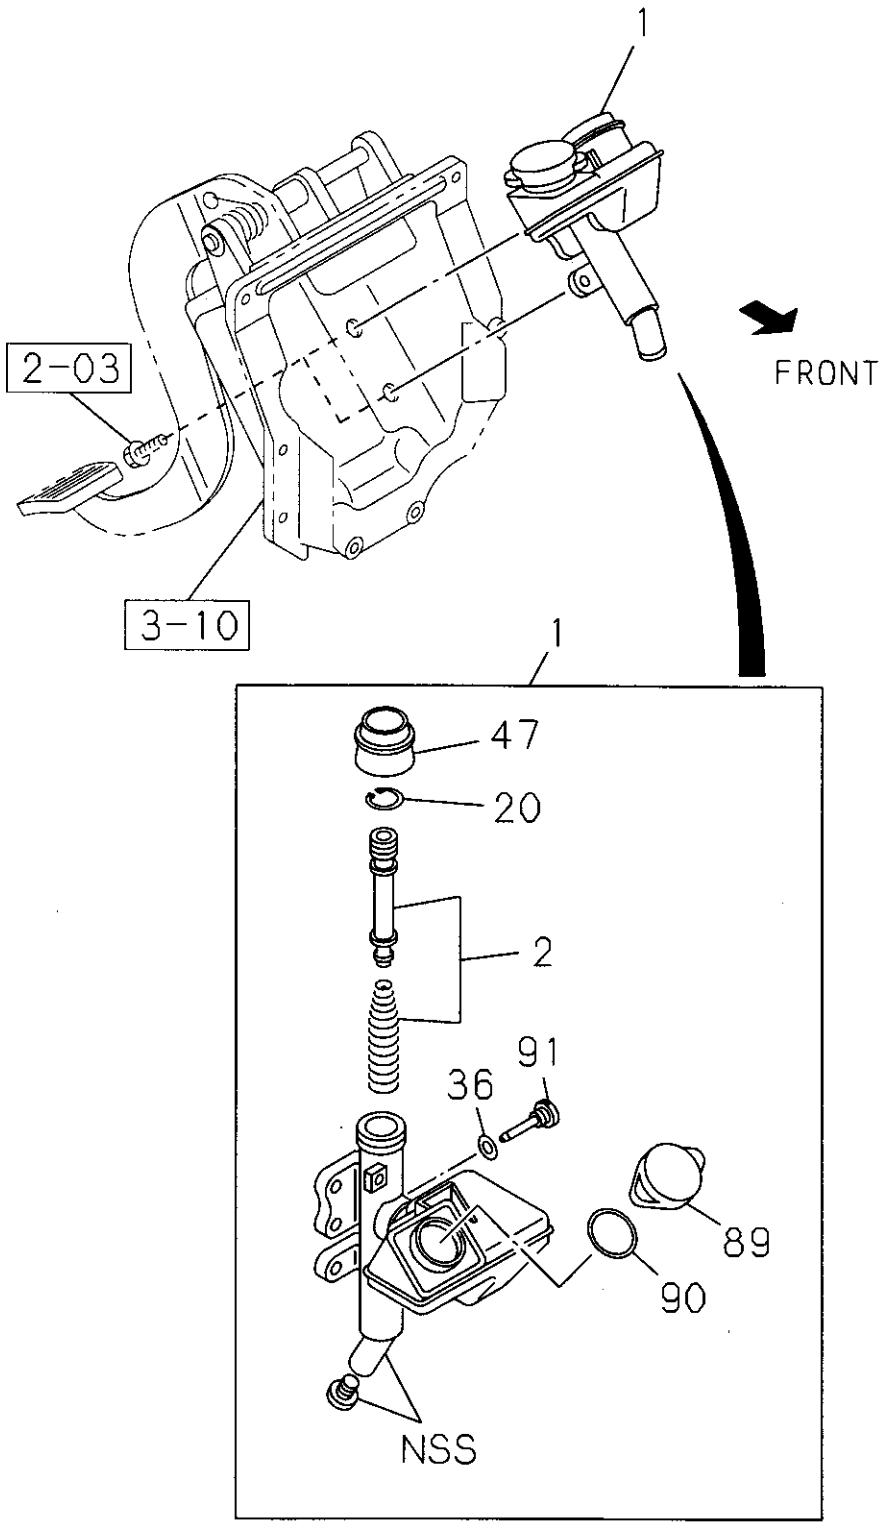

https://truckmanualshub.com/

CLUTCH MASTER CYLINDER

2-08


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- CYLINDER ASM; CLUTCH MASTER					
	1-47500-250-2		1103-		01	A
2	-B- REPAIR KIT; CLU M/CYL					
	1-85576-461-0		1103-		01	A
20	--- RING; SNAP, BODY					
	1-47519-013-0		1103-		01	A
36	--- GASKET; CLU M/CYL					
	1-47519-014-0		1103-		01	A
47	--- COVER; DUST, PUSH ROD					
	1-47519-018-0		1103-		01	A
89	--- CAP; OIL FILLER, CLU M/CYL					
	1-47519-017-0		1103-		01	A
90	--- GASKET; OIL FILLER, CLU M/CYL					
	1-47519-016-0		1103-		01	A
91	--- BOLT; STOPPER					
	1-47519-015-0		1103-		01	A

https://truckmanualshub.com/

2-10 REPAIR KIT; TRANSMISSION OVERHAUL

FIG-NO.

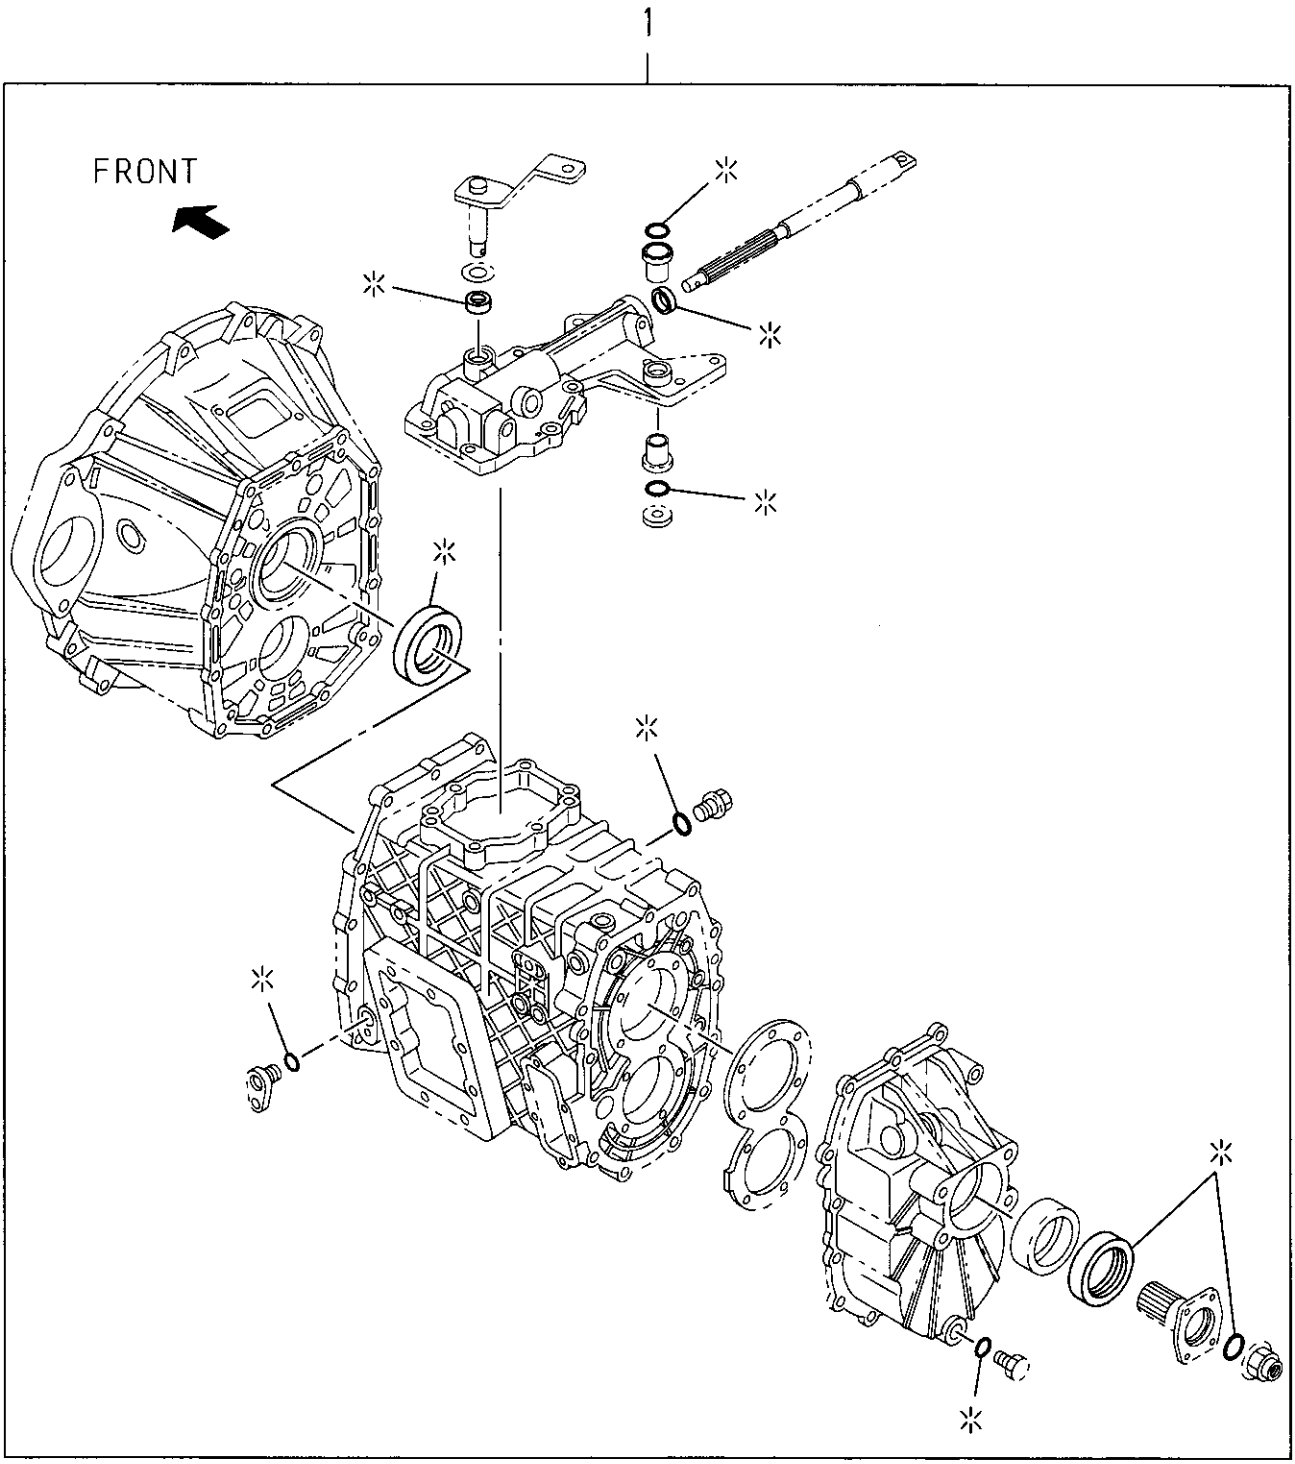

https://truckmanualshub.com/

REPAIR KIT; TRANSMISSION OVERHAUL

2-10


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	A MZZ6W M/T(RSA)
1	--- GASKET SET; TRANS OVERHAUL						
	5-87832-126-1		1103-		01	A	


https://truckmanualshub.com/

2-20 MANUAL TRANSMISSION ASM AND CASE

FIG-NO. ASM

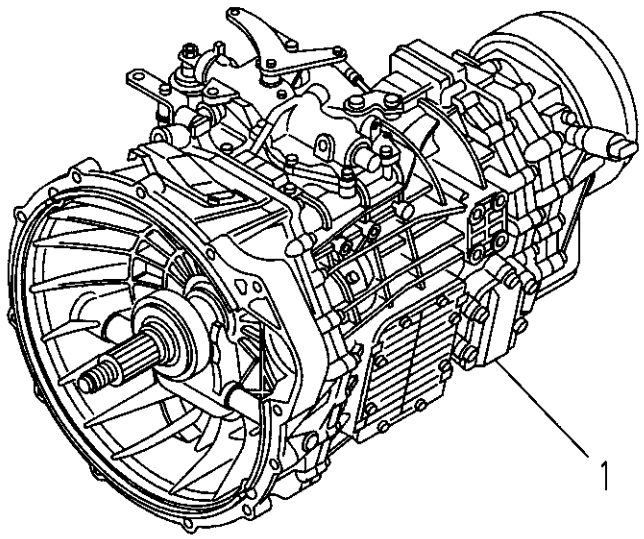


https://truckmanualshub.com/

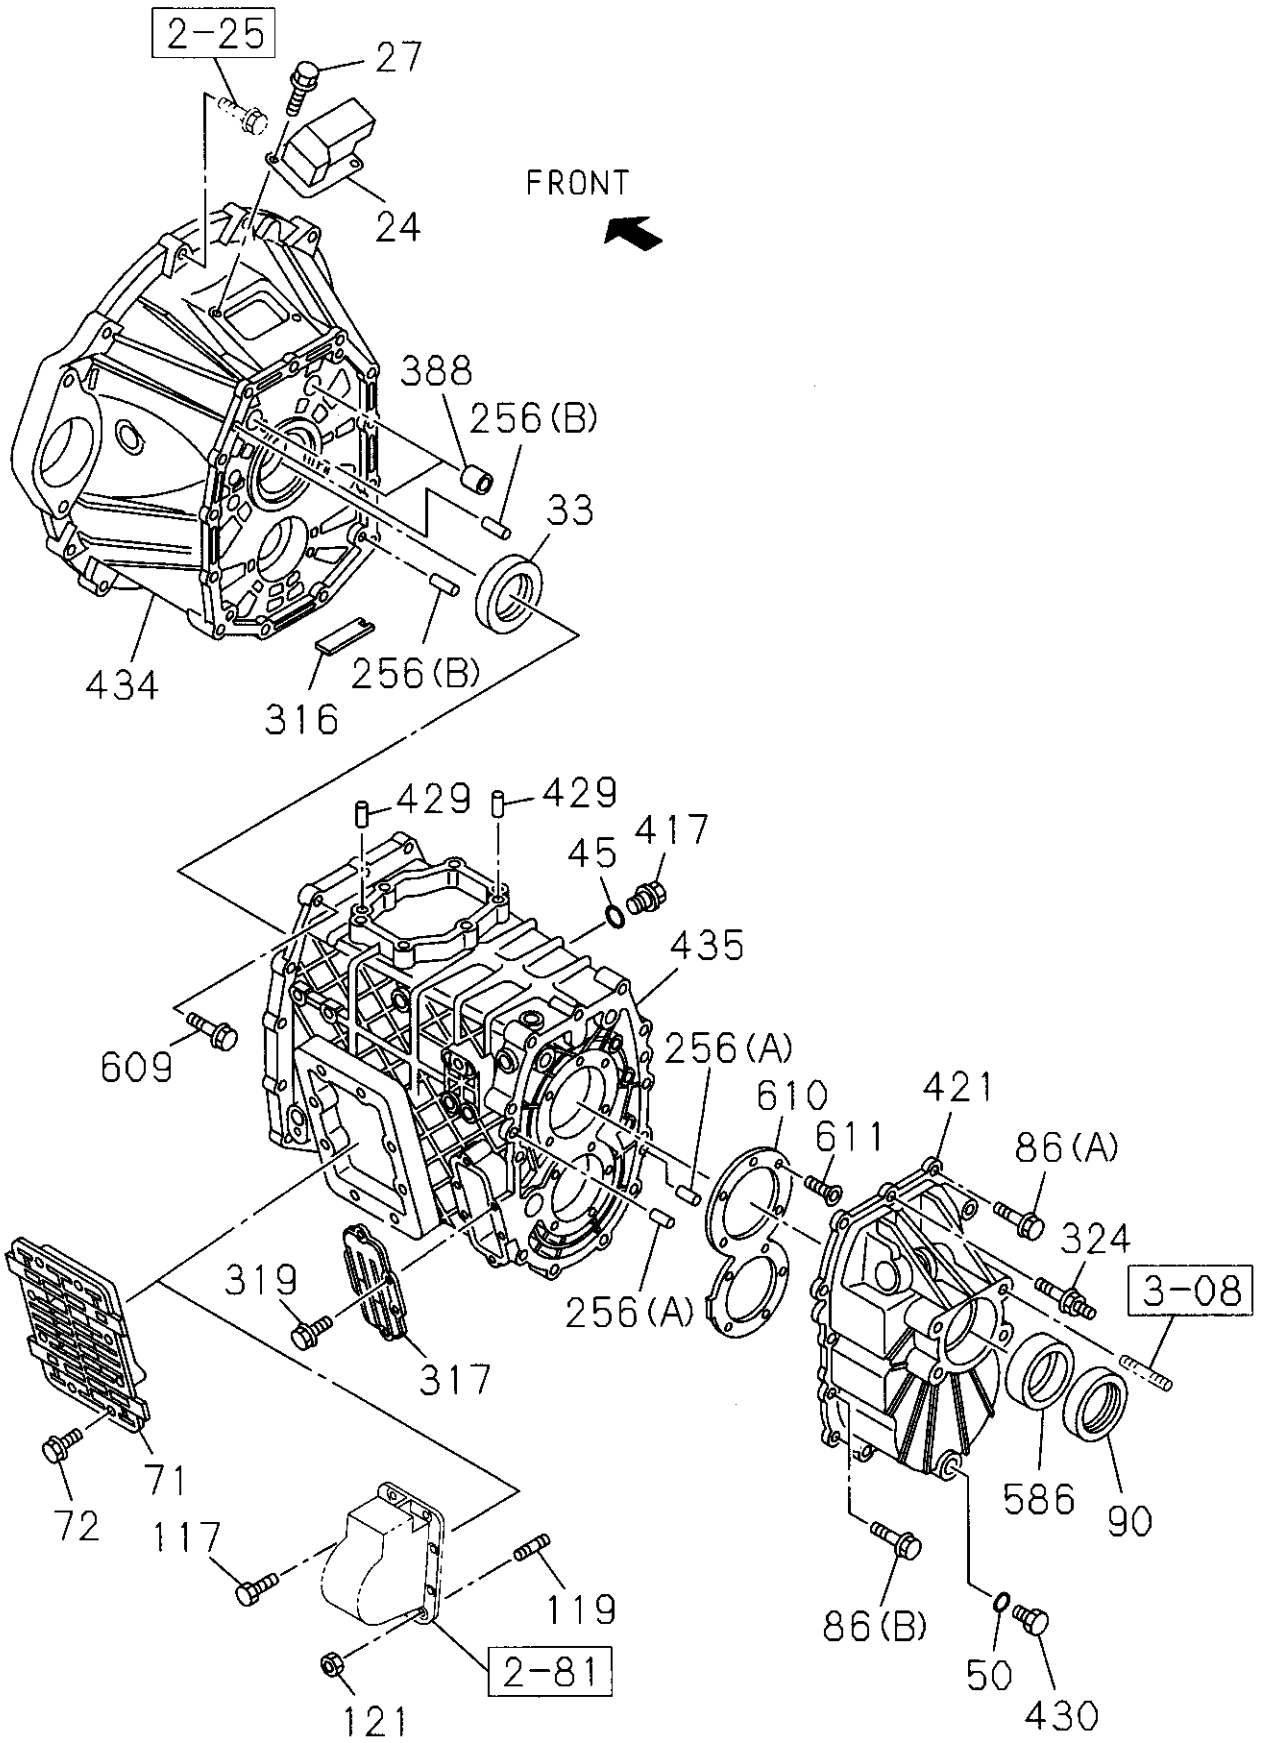


https://truckmanualshub.com/

2-20 MANUAL TRANSMISSION ASM AND CASE

FIG-NO. T/M HARNESS BRACKET

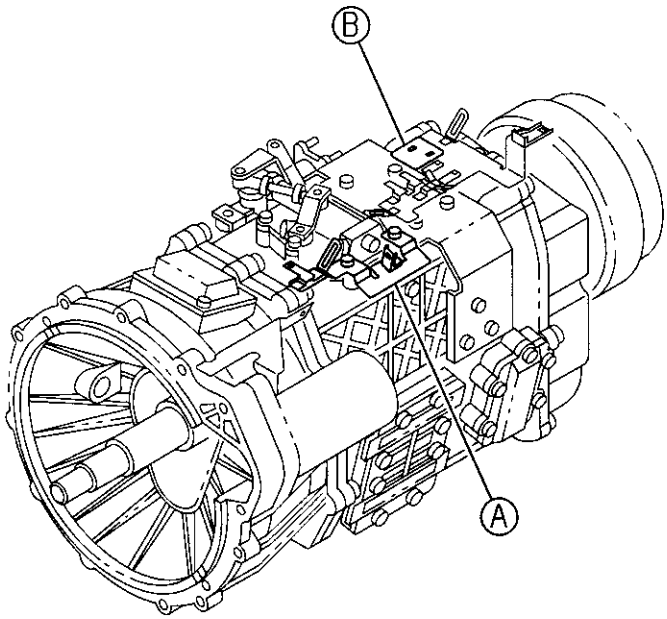

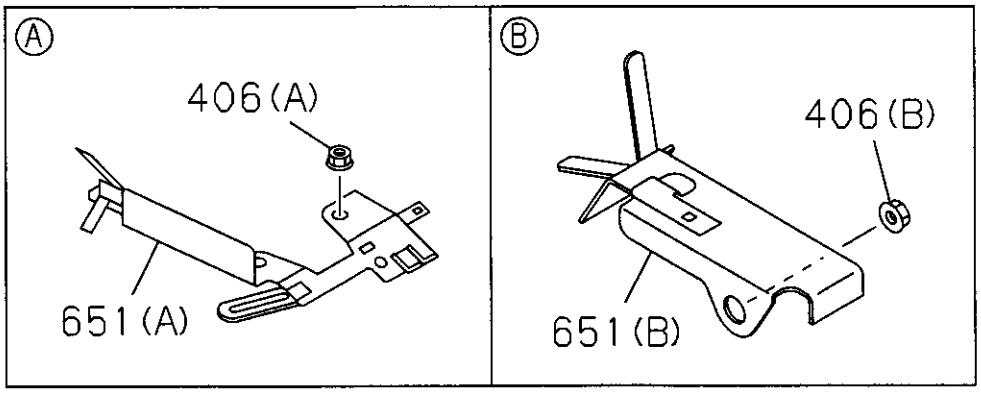

https://truckmanualshub.com/

MANUAL TRANSMISSION ASM AND CASE

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
1	-D- TRANSMISSION ASM; MANUAL						
		8-98171-396-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
		8-98171-396-0		1103-		01	A EXC. TRANSMISSION SIDE PTO W/O LEVER(SH5)
24	--- COVER; CHECK HOLE, DUST						
		1-31131-041-0		1103-		01	A
27	--- BOLT; COVER TO CLU HSG						
		0-28050-812-0		1103-		02	A M8X12 FLANGE
33	--- SEAL; OIL, FRT COVER, T/M						ALSO INCLUDED IN GASKET SET(M/T).
		8-97253-550-0		1103-		01	A
45	--- GASKET; FILLER PLUG						ALSO INCLUDED IN GASKET SET(M/T).
		8-97115-712-0		1103-		01	A ID=17
50	--- GASKET; DRAIN PLUG						ALSO INCLUDED IN GASKET SET(M/T).
		8-97115-712-0		1103-		01	A ID=17
71	--- COVER; SIDE, TRANS CASE						
		8-97252-624-2		1103-		01	A EXC. TRANSMISSION SIDE PTO W/O LEVER(SH5)
72	--- BOLT; SIDE COVER						
		8-98014-142-0		1103-		08	A EXC. TRANSMISSION SIDE PTO W/O LEVER(SH5) M10X20 FLANGE
86	--- BOLT; RR COVER						
		0-28151-040-0		1103-		10	A (A) M10X40 FLANGE
		8-97365-377-0		1103-		02	A (B) M10X40 FLANGE
90	--- SEAL; OIL, RR COVER						ALSO INCLUDED IN GASKET SET(M/T).
		8-97253-551-1		1103-		01	A
117	--- BOLT; PTO FIX						
		8-98044-944-0		1103-		06	A TRANSMISSION SIDE PTO W/O LEVER(SH5) M10X28 FLANGE

https://truckmanualshub.com/

2-20 MANUAL TRANSMISSION ASM AND CASE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A MZZ6W M/T(RSA)
119	--- STUD; PTO FIX					
	0-44011-025-0		1103-		02	A TRANSMISSION SIDE PTO W/O LEVER(SH5) M10X25 L=40
121	--- NUT; PTO FIX					
	0-91180-210-0		1103-		02	A TRANSMISSION SIDE PTO W/O LEVER(SH5) M10 FLANGE
256	--- PIN; KNOCK					
	8-97135-423-0		1103-		02	A (B) OD=10 L=20
	9-08160-612-0		1103-		02	A (A) ID=6 L=12
316	--- MAGNET; TRANS CASE					
	8-94249-524-2		1103-		01	A
317	--- COVER; CASE					
	8-97252-626-0		1103-		01	A
319	--- BOLT; COVER					
	0-28050-820-0		1103-		06	A M8X20 FLANGE
324	--- STUD; RR COVER					
	8-97365-379-0		1103-		01	A M10X15,M10X40 L=65
388	--- BUSHING; CLU HSG					
	8-97241-326-2		1103-		02	A
406	--- NUT; BRKT					
	0-91180-108-0		1103-		02	A (A) M8 FLANGE
	0-91180-210-0		1103-		01	A (B) M10 FLANGE
417	--- PLUG; OIL FILLER, TRANS					
	8-98009-333-0		1103-		01	A M20X10.5

https://truckmanualshub.com/


MANUAL TRANSMISSION ASM AND CASE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
421	--- COVER; RR, TRANS					
	8-98186-773-0		1103-		01	A
429	--- PIN; STRAIGHT					
	8-97135-423-0		1103-		02	A OD=10 L=20
430	--- PLUG; OIL DRAIN					
	8-97365-374-0		1103-		01	A
434	--- HOUSING; CLU					
	8-97382-931-1		1103-		01	A
435	--- CASE; TRANS					
	8-97382-868-1		1103-		01	A
586	--- BEARING; NEEDLE					
	8-97253-108-0		1103-		01	A
609	--- BOLT; HSG TO CASE					
	0-28151-040-0		1103-		13	A M10X40 FLANGE
610	--- RETAINER; BRG					
	8-97241-314-2		1103-		01	A
611	--- SCREW					
	8-97365-354-0		1103-		10	A M10X27 TORQUES
651	--- BRACKET; T/M HARNESS					
	8-97609-800-2		1103-		01	A (A)
	8-98044-568-1		1103-		01	A (B)

https://truckmanualshub.com/

2-25 SPEEDOMETER DRIVEN GEAR

FIG-NO.

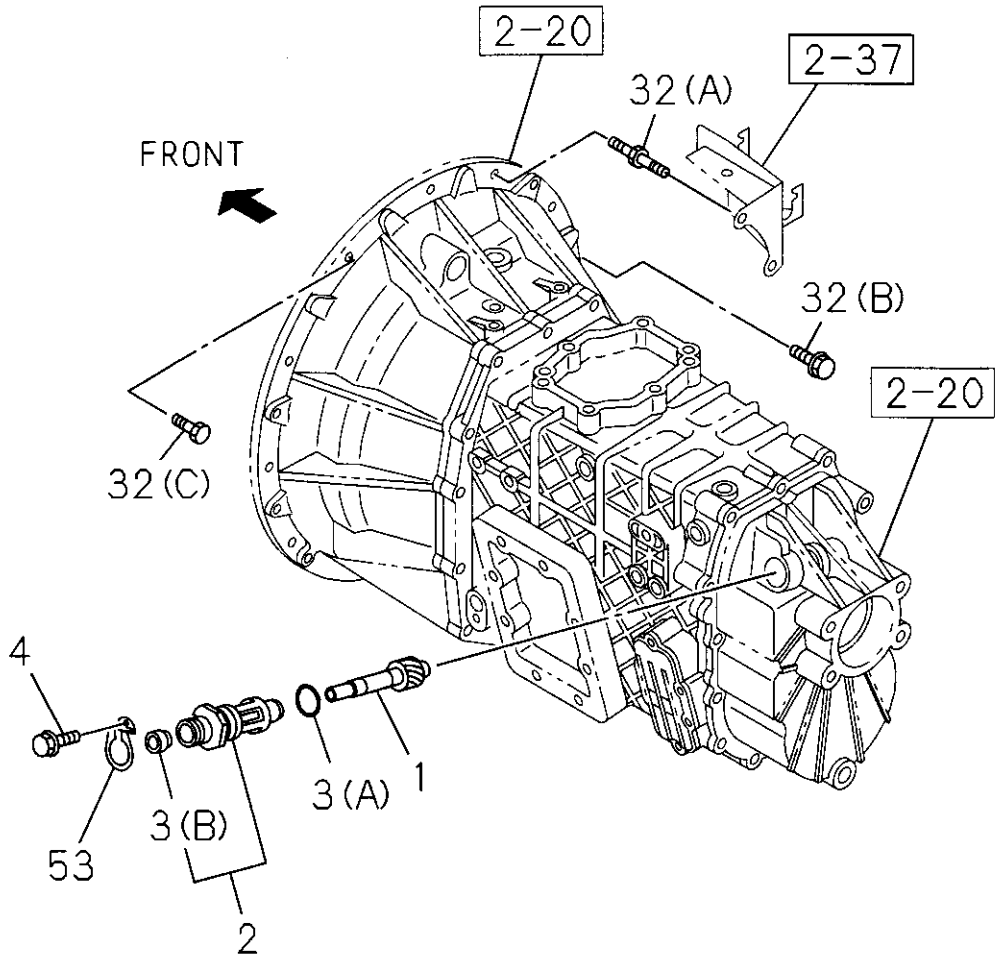

https://truckmanualshub.com/

SPEEDOMETER DRIVEN GEAR

2-25


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
1	--- GEAR; DRIVEN, SPD					
	8-97253-563-1		1103-		01	A Z=12
2	--- BUSHING; DRIVEN GEAR, SPEEDOMETER					
	8-97253-125-0		1103-		01	A MARK "12,13,14,15"
3	--- GASKET; BUSHING					
						ALSO INCLUDED IN GASKET SET(M/T).
	8-97131-328-1		1103-		01	A (B) NOK
	9-09561-324-0		1103-		01	A (A)
4	--- BOLT; RET, DRIVEN GEAR					
	0-28650-820-0		1103-		01	A M8X20 FLANGE IDN
32	--- BOLT; CLU HSG TO FLYWHEEL HSG					
	0-28151-045-0		1103-		06	A (C) M10X45 FLANGE
	0-28151-050-0		1103-		02	A (B) M10X50 FLANGE
	8-98010-335-0		1103-		02	A (A) M10X20,M10X45 L=75
53	--- PLATE; LOCK, DRIVEN GEAR					
	8-98046-217-0		1103-		01	A

https://truckmanualshub.com/


2-26 MANUAL TRANSMISSION GEAR

FIG-NO. MAIN SHAFT

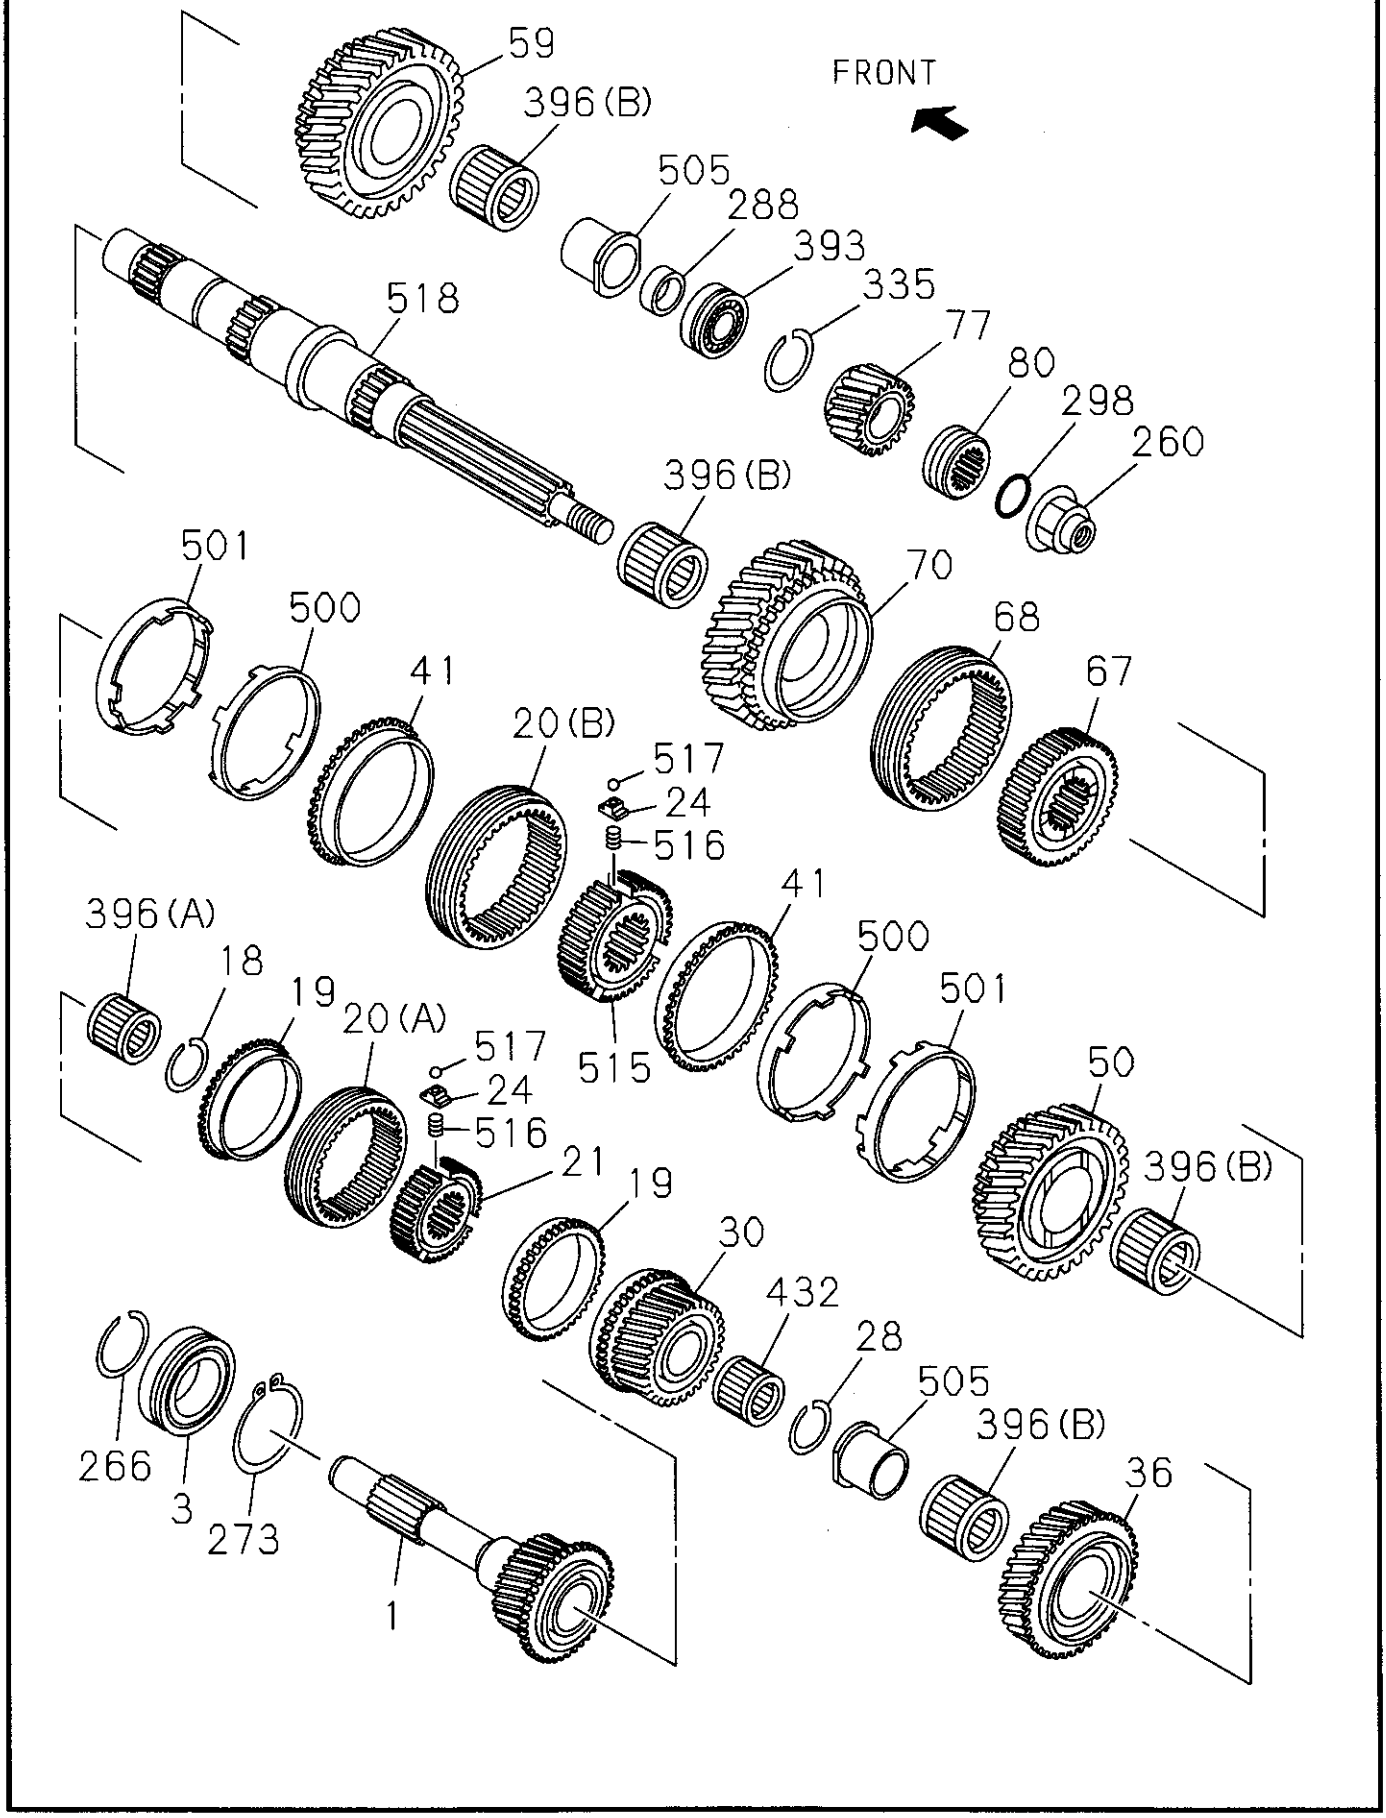


https://truckmanualshub.com/

COUNTER SHAFT

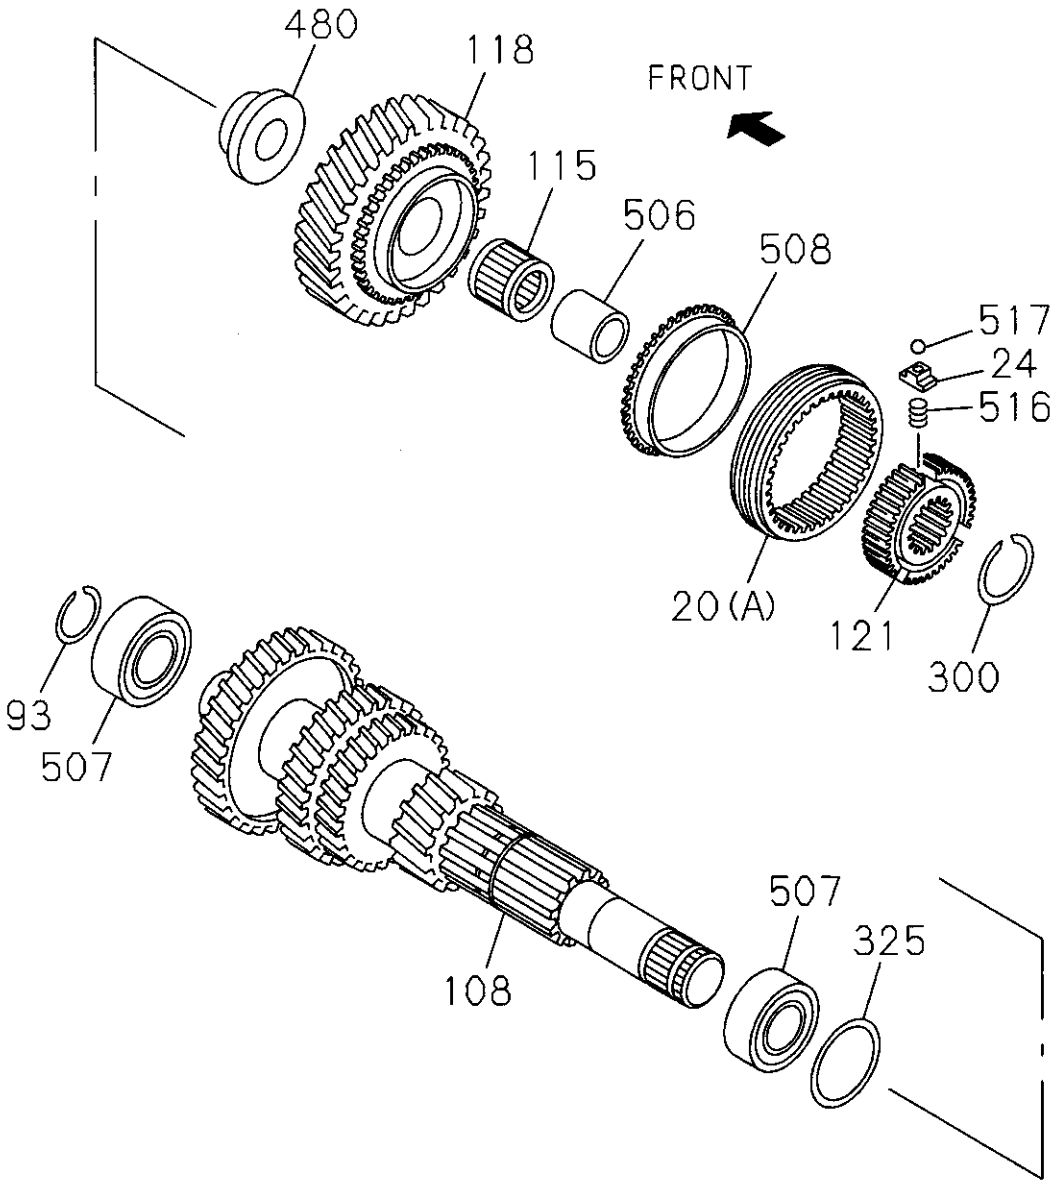

REVERSE IDLER

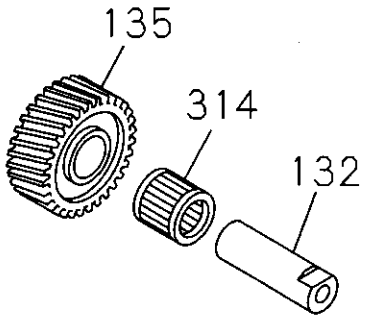

https://truckmanualshub.com/

2-26 MANUAL TRANSMISSION GEAR

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
1	--- SHAFT; TOP GEAR, TRANS	8-97371-089-0		1103-		01	A Z=25
3	--- BEARING; TOP GEAR SHAFT	8-97253-097-1		1103-		01	A
18	--- RING; SNAP, CLU HUB	8-97256-855-0		1103-		01	A ID=35.7 T=1.8
19	--- RING; BLOCK, 4TH & 5TH	8-97241-306-1		1103-		02	A Z=45
20	--- SLEEVE	8-97241-295-2		1103-		01	A (B)
		8-97241-296-1		1103-		02	A (A)
21	--- HUB; CLU, 4TH & 5TH	8-97241-299-2		1103-		01	A
24	--- BLOCK; INDEX, SYN	8-97241-313-1		1103-		09	A
28	--- RING; SNAP, 3RD GEAR	8-97254-743-0		1103-		01	A ID=46.5 T=1.8
30	--- GEAR; 4TH, MAINSHAFT	8-97241-228-0		1103-		01	A Z=29
36	--- GEAR; 3RD, MAINSHAFT	8-98168-524-0		1103-		01	A Z=35
41	--- RING; BLOCK, 2ND & 3RD	8-97241-305-2		1103-		02	A Z=54
50	--- GEAR; 2ND, MAINSHAFT	8-97241-236-1		1103-		01	A Z=43

https://truckmanualshub.com/

MANUAL TRANSMISSION GEAR

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
59	--- GEAR; REV MAINSHAFT					
	8-97254-182-0		1103-		01	A Z=45
67	--- HUB; CLU, 1ST TO REV					
	8-97255-184-1		1103-		01	A
68	--- SLEEVE; 1ST TO REV					
	1-33262-175-1		1103-		01	A
70	--- GEAR; 1ST, MAINSHAFT					
	8-97254-889-0		1103-		01	A Z=45
77	--- GEAR; 6TH, MAINSHAFT					
	8-97241-264-0		1103-		01	A Z=18
80	--- GEAR; SPD DRIVE					
	8-97253-555-0		1103-		01	A Z=4
93	--- RING; SNAP, COUNTER FRT BRG					
	8-97254-735-0		1103-		01	A ID=34.4 T=1.9
	8-97254-738-0		1103-		01	A ID=34.4 T=2.1
	8-97254-741-0		1103-		01	A ID=34.4 T=2.3
108	--- SHAFT; COUNTER					
	8-98168-526-0		1103-		01	A Z=46-37-27-21
115	--- BEARING; NEEDLE, 6TH, COUNTER					
	8-97253-113-0		1103-		01	A
118	--- GEAR; 6TH, COUNTER					
	8-97241-245-0		1103-		01	A Z=46
121	--- HUB; CLU, 6TH					
	8-97241-301-2		1103-		01	A

https://truckmanualshub.com/

2-26 MANUAL TRANSMISSION GEAR

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A MZZ6W M/T(RSA)
132	--- SHAFT; REV						
		8-97252-655-0		1103-		01	A
135	--- GEAR; REV IDLER						
		8-97241-292-2		1103-		01	A Z=26
260	--- NUT; MAINSHAFT END						
		8-97360-410-0		1103-		01	A M27 H=25
266	--- RING; SNAP, BRG INNER						
		8-97286-915-0		1103-		01	A
273	--- RING; SNAP, BRG OUTER						
		8-97254-609-0		1103-		01	A
288	--- SPACER; BRG, MAINSHAFT						
		8-97252-941-0		1103-		01	A
298	--- GASKET; MAINSHAFT						ALSO INCLUDED IN GASKET SET(M/T).
		1-09623-379-0		1103-		01	A ID=35.7 T=5
300	--- RING; SNAP, COUNTER SHAFT, RR END						
		8-97288-618-0		1103-		01	A ID=33.2 T=1.7
		8-97288-619-0		1103-		01	A ID=33.2 T=1.8
		8-97288-620-0		1103-		01	A ID=33.2 T=1.9
		8-97365-616-0		1103-		01	A ID=33.2 T=1.6
314	--- BEARING; NEEDLE, REV GEAR						
		8-97253-114-0		1103-		01	A NSK
325	--- SHIM; COUNTER SHAFT BRG						
		8-97252-656-0		1103-		01	A ID=70 T=1.38
		8-97252-657-0		1103-		01	A ID=70 T=1.44
		8-97252-658-0		1103-		01	A ID=70 T=1.50

https://truckmanualshub.com/

MANUAL TRANSMISSION GEAR

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
325	--- SHIM; COUNTER SHAFT BRG					
	8-97252-659-0		1103-		01 A	ID=70 T=1.56
	8-97252-660-0		1103-		01 A	ID=70 T=1.62
	8-97252-661-0		1103-		01 A	ID=70 T=1.68
	8-97252-662-0		1103-		01 A	ID=70 T=1.74
	8-97252-663-0		1103-		01 A	ID=70 T=1.80
	8-97252-664-0		1103-		01 A	ID=70 T=1.86
	8-97252-665-0		1103-		01 A	ID=70 T=1.92
	8-97257-621-0		1103-		01 A	ID=70 T=1.98
	8-97306-185-0		1103-		01 A	ID=70 T=1.20
	8-97306-186-0		1103-		01 A	ID=70 T=1.26
	8-97306-187-0		1103-		01 A	ID=70 T=1.32
335	--- RING; SNAP, BEARING					
	8-97254-720-0		1103-		01 A	
393	--- BEARING; MAINSHAFT END					
	8-97253-104-0		1103-		01 A	
396	--- BEARING; NEEDLE, MAINSHAFT					
	8-97253-099-1		1103-		01 A	(A)
	8-97253-110-0		1103-		04 A	(B)
432	--- BEARING; NEEDLE, 4TH					
	8-97253-111-0		1103-		01 A	NSK
480	--- WASHER; THRUST, 6TH					
	8-97253-122-1		1103-		01 A	

https://truckmanualshub.com/

2-26 MANUAL TRANSMISSION GEAR


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
500	--- RING; OUTSIDE, 3RD & 2ND	8-97241-307-1		1103-		02	A
501	--- RING; INSIDE, 3RD & 2ND	8-97241-311-1		1103-		02	A
505	--- COLLAR; 3RD & REV	8-97253-119-2		1103-		02	A
506	--- COLLAR; 6TH, COUNTER	8-97253-120-1		1103-		01	A
507	--- BEARING; COUNTER SHAFT, FRT & RR	8-97253-106-0		1103-		02	A
508	--- RING; BLOCK, 6TH	8-97241-306-1		1103-		01	A Z=45
515	--- HUB; CLU, 1ST & REV, 2ND & 3RD	8-97239-155-2		1103-		01	A
516	--- SPRING; SYNCHRO, INDEX	8-97305-803-1		1103-		09	A
517	--- BALL; SYNCHRO, INDEX	8-97252-935-0		1103-		09	A
518	--- SHAFT; MAIN, 5TH & 6TH SPEED	8-97253-115-3		1103-		01	A Z=26-42-23

https://truckmanualshub.com/

2-30 GEAR SHIFTER AND QUADRANT BOX


FIG-NO. ARM AND ROD

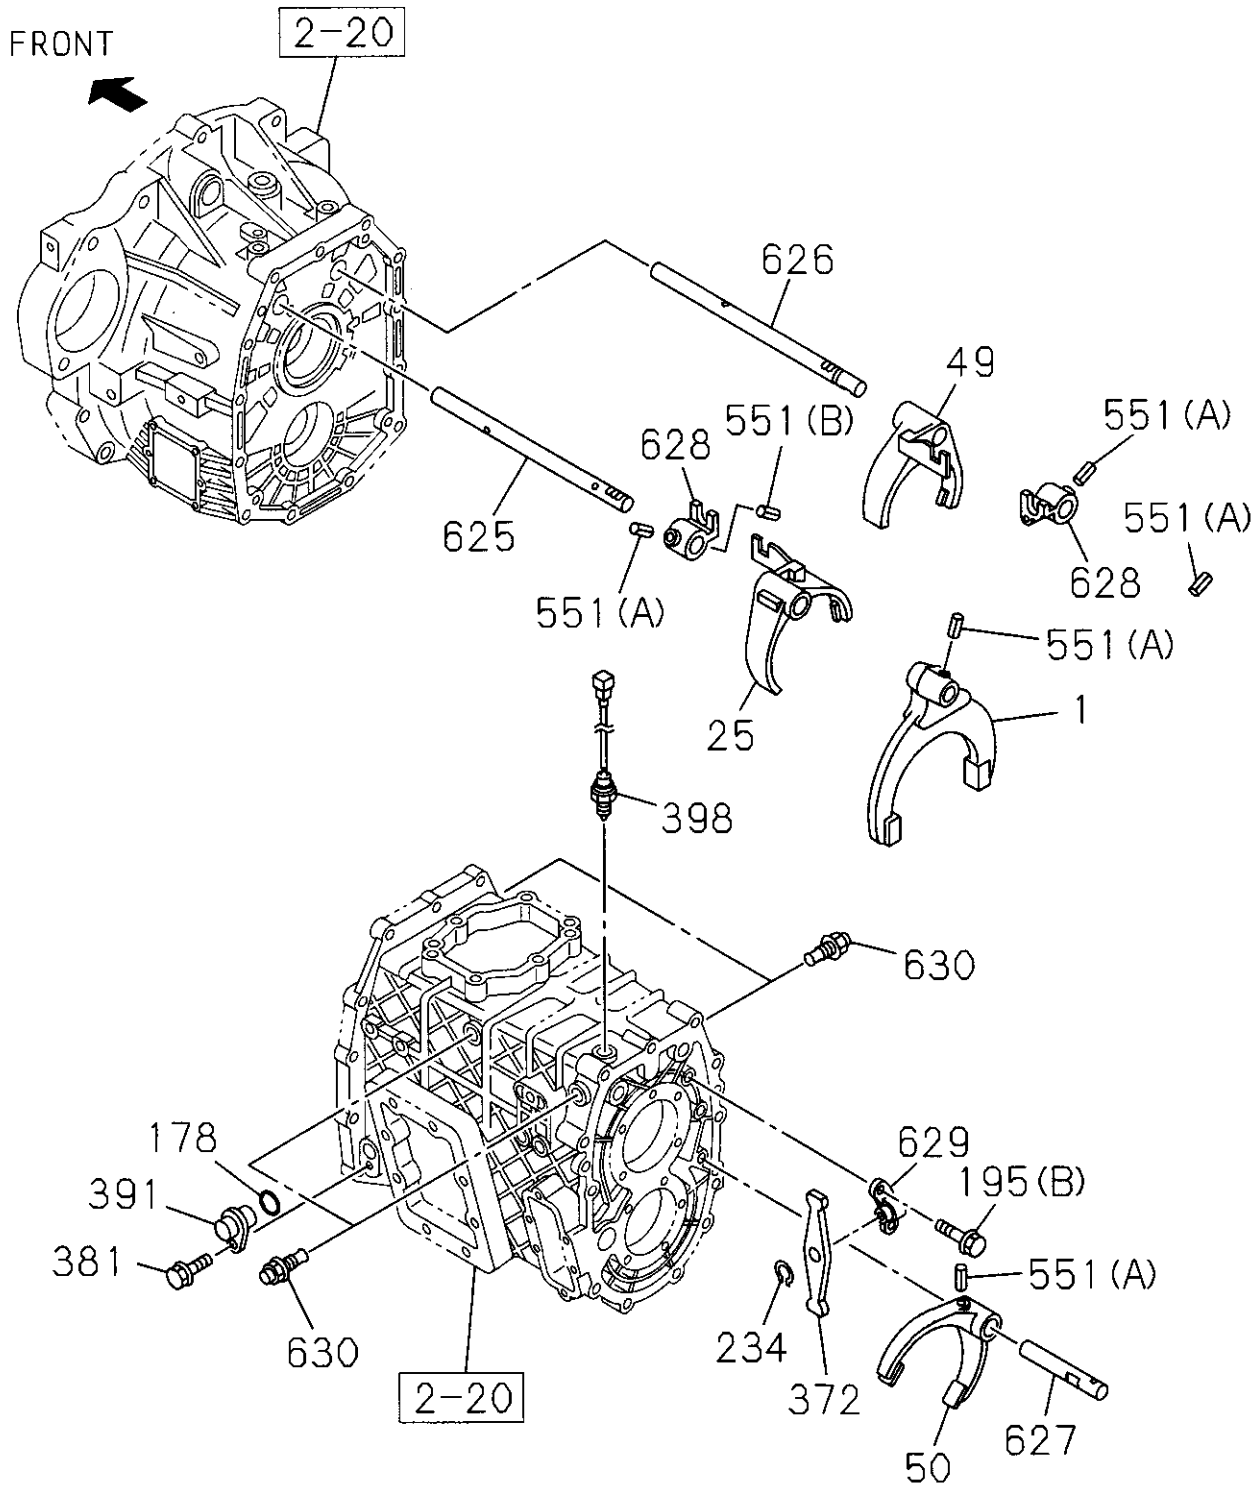


https://truckmanualshub.com/

GEAR SHIFTER AND QUADRANT BOX

SHIFT CONTROL BOX

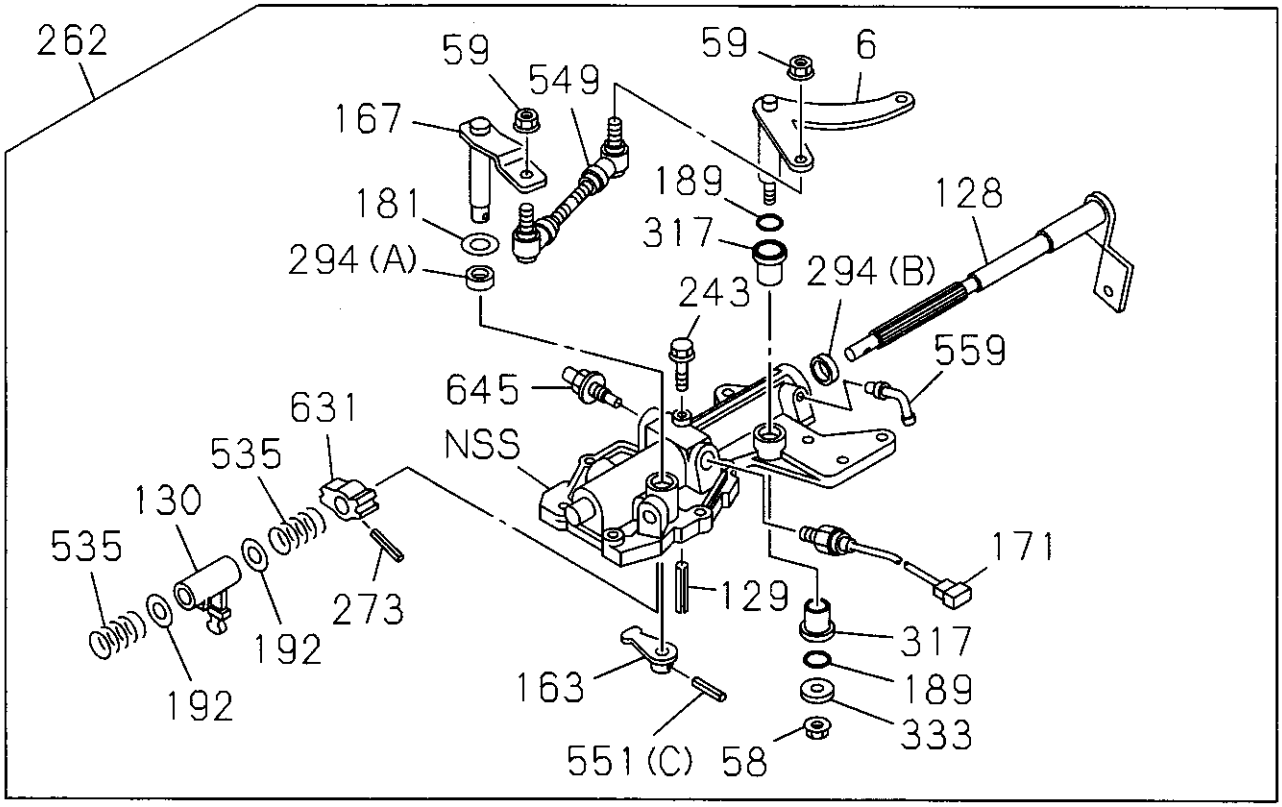

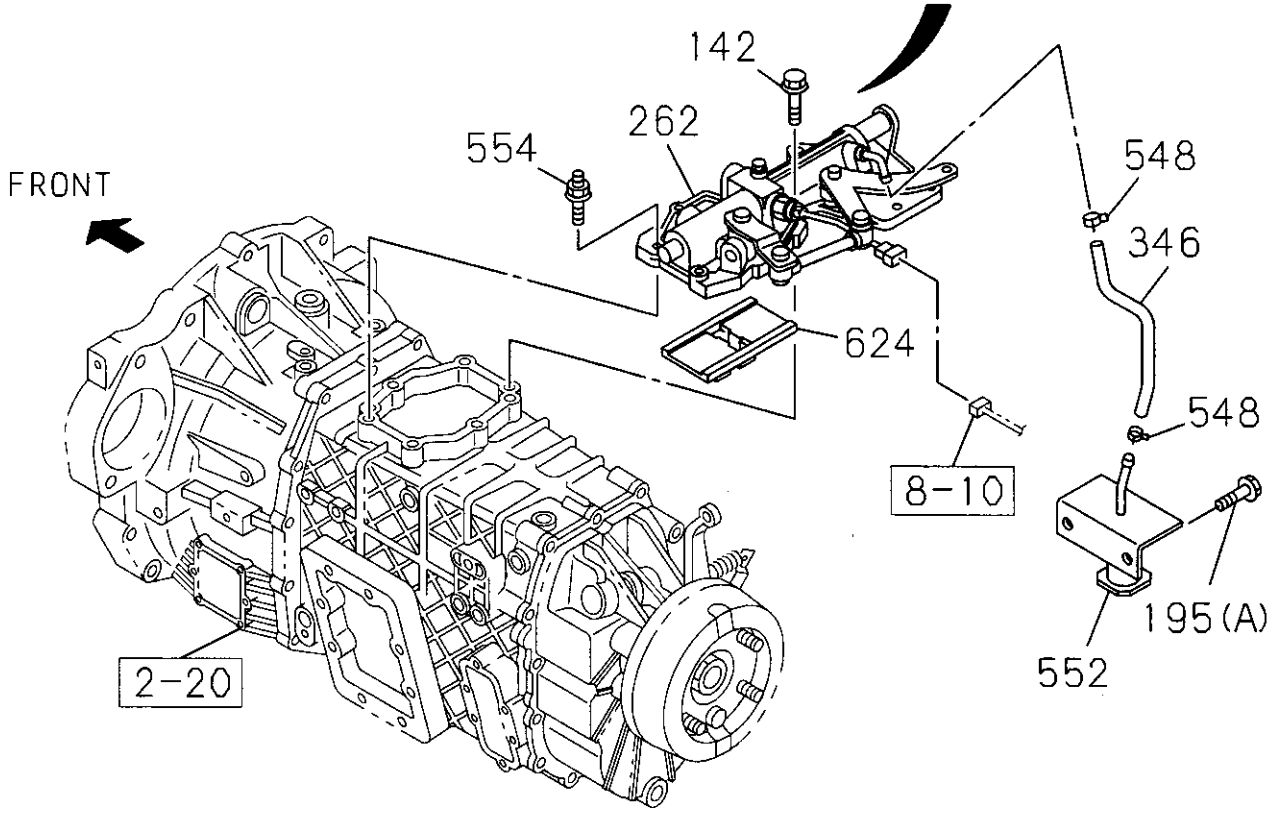

https://truckmanualshub.com/

2-30 GEAR SHIFTER AND QUADRANT BOX

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
1	--- ARM; SHIFT, 1ST & REV					
	8-97255-351-1		1103-		01	A
6	--- LEVER; RELAY					
	8-98014-157-1		1103-		01	A
25	--- ARM; SHIFT, 2ND & 3RD					
	8-97362-737-1		1103-		01	A
49	--- ARM; SHIFT, 4TH & 5TH					
	8-97362-738-1		1103-		01	A
50	--- ARM; SHIFT, 6TH					
	8-97241-324-1		1103-		01	A
58	--- NUT					
	0-91180-110-0		1103-		01	A M10 FLANGE
59	--- NUT					
	0-91180-108-0		1103-		02	A M8 FLANGE
128	--- LEVER; SHIFT, EXTERNAL					
	8-98170-720-0		1103-		01	A
129	--- PIN; SPR, SHIFT					
	1-09748-031-0		1103-		01	A D=4
130	--- LEVER; SHIFT, INTERNAL					
	8-97306-647-0		1103-		01	A
142	--- BOLT; QUAD BOX					
	8-97365-376-0		1103-		04	A M8X22 FLANGE
163	--- LEVER; SELECT, INTERNAL					
	8-97305-663-0		1103-		01	A
167	--- LEVER; SELECT, EXTERNAL					
	8-98021-489-0		1103-		01	A
171	--- SWITCH; NEUTRAL					
	8-98023-050-0		1103-		01	A

https://truckmanualshub.com/

GEAR SHIFTER AND QUADRANT BOX

2-30

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
178	--- GASKET; PLUG					
	9-09567-113-0		1103-		01	A ALSO INCLUDED IN GASKET SET(M/T).
181	--- WASHER; PL, SELECT LEVER					
	8-97367-327-0		1103-		01	A
189	--- GASKET; SELECT LEVER, CONT BOX					
	1-09623-594-0		1103-		02	A
192	--- WASHER; PL					
	8-97305-661-0		1103-		02	A
195	--- BOLT					
	0-28751-020-0		1103-		02	A (A) M10X20 FLANGE
	8-97365-375-0		1103-		02	A (B) M10X28 FLANGE REAMER
234	--- RING; SNAP					
	0-91800-618-0		1103-		01	A ID=16.5
243	--- BOLT; COVER					
	1-33739-842-0		1103-		01	A M6X12 FLANGE
262	--- BOX ASM; SHIFT CONT					
	8-98170-719-0		1103-		01	A
273	--- PIN; SPR, STOPPER					
	8-97103-142-0		1103-		01	A D=4.2 L=25
294	--- SEAL; OIL, SELECT					
	8-97305-662-0		1103-		01	A ALSO INCLUDED IN GASKET SET(M/T). (A)
	8-97363-225-0		1103-		01	A (B)
317	--- BUSHING; LEVER					
	1-09330-119-0		1103-		02	A

https://truckmanualshub.com/

2-30 GEAR SHIFTER AND QUADRANT BOX

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
333	--- WASHER; PL, LEVER					
	0-91610-710-0		1103-		01	A ID=10.5
346	--- HOSE; AIR					
	8-98132-721-0		1103-		01	A
372	--- LEVER; RELAY, 6TH					
	8-97241-342-0		1103-		01	A
381	--- BOLT					
	0-28650-616-0		1103-		01	A M6X16 FLANGE
391	--- PLUG; SW HOLE					
	8-97300-273-1		1103-		01	A
398	--- SWITCH; REV LAMP					
	8-98023-050-0		1103-		01	A
535	--- SPRING; LEVER					
	8-97385-713-0		1103-		02	A
548	--- CLIP; HOSE					
	8-94107-762-0		1103-		02	A ID=8
549	--- ROD; LINK					
	8-98023-095-0		1103-		01	A
551	--- PIN; SPRING					
	1-09748-032-0		1103-		01	A (C) L=17
	8-97011-596-2		1103-		05	A (A) L=32
	8-97241-340-0		1103-		01	A (B) L=20
552	--- BRACKET					
	8-98132-718-0		1103-		01	A

https://truckmanualshub.com/


GEAR SHIFTER AND QUADRANT BOX

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
554	--- STUD; CONT BOX					
	8-97365-378-0		1103-		02	A M8X15,M8X25 L=49
559	--- PIPE; BREATHER					
	8-97358-318-0		1103-		01	A
624	--- PLATE; INTER LOCK					
	8-97241-317-3		1103-		01	A
625	--- ROD; GEAR SHIFT, LOW, REV, 2ND & 3RD					
	8-97362-735-0		1103-		01	A
626	--- ROD; GEAR SHIFT, 4TH, 5TH & 6TH					
	8-98107-548-0		1103-		01	A
627	--- ROD; GEAR SHIFT, 6TH SUB					
	8-98119-293-0		1103-		01	A
628	--- BLOCK; SHIFT, LOW, REV & 6TH					
	8-97241-327-1		1103-		02	A
629	--- BRIDGE; LEVER					
	8-97241-345-1		1103-		01	A
630	--- DETENT ASM					
	8-98019-536-0		1103-		04	A
631	--- STOPPER; SPRING					
	8-98014-158-0		1103-		01	A
645	--- DETENT ASM					
	8-98019-536-0		1103-		01	A

https://truckmanualshub.com/

2-35 MANUAL TRANSMISSION SHIFT CONTROL LEVER

FIG-NO.

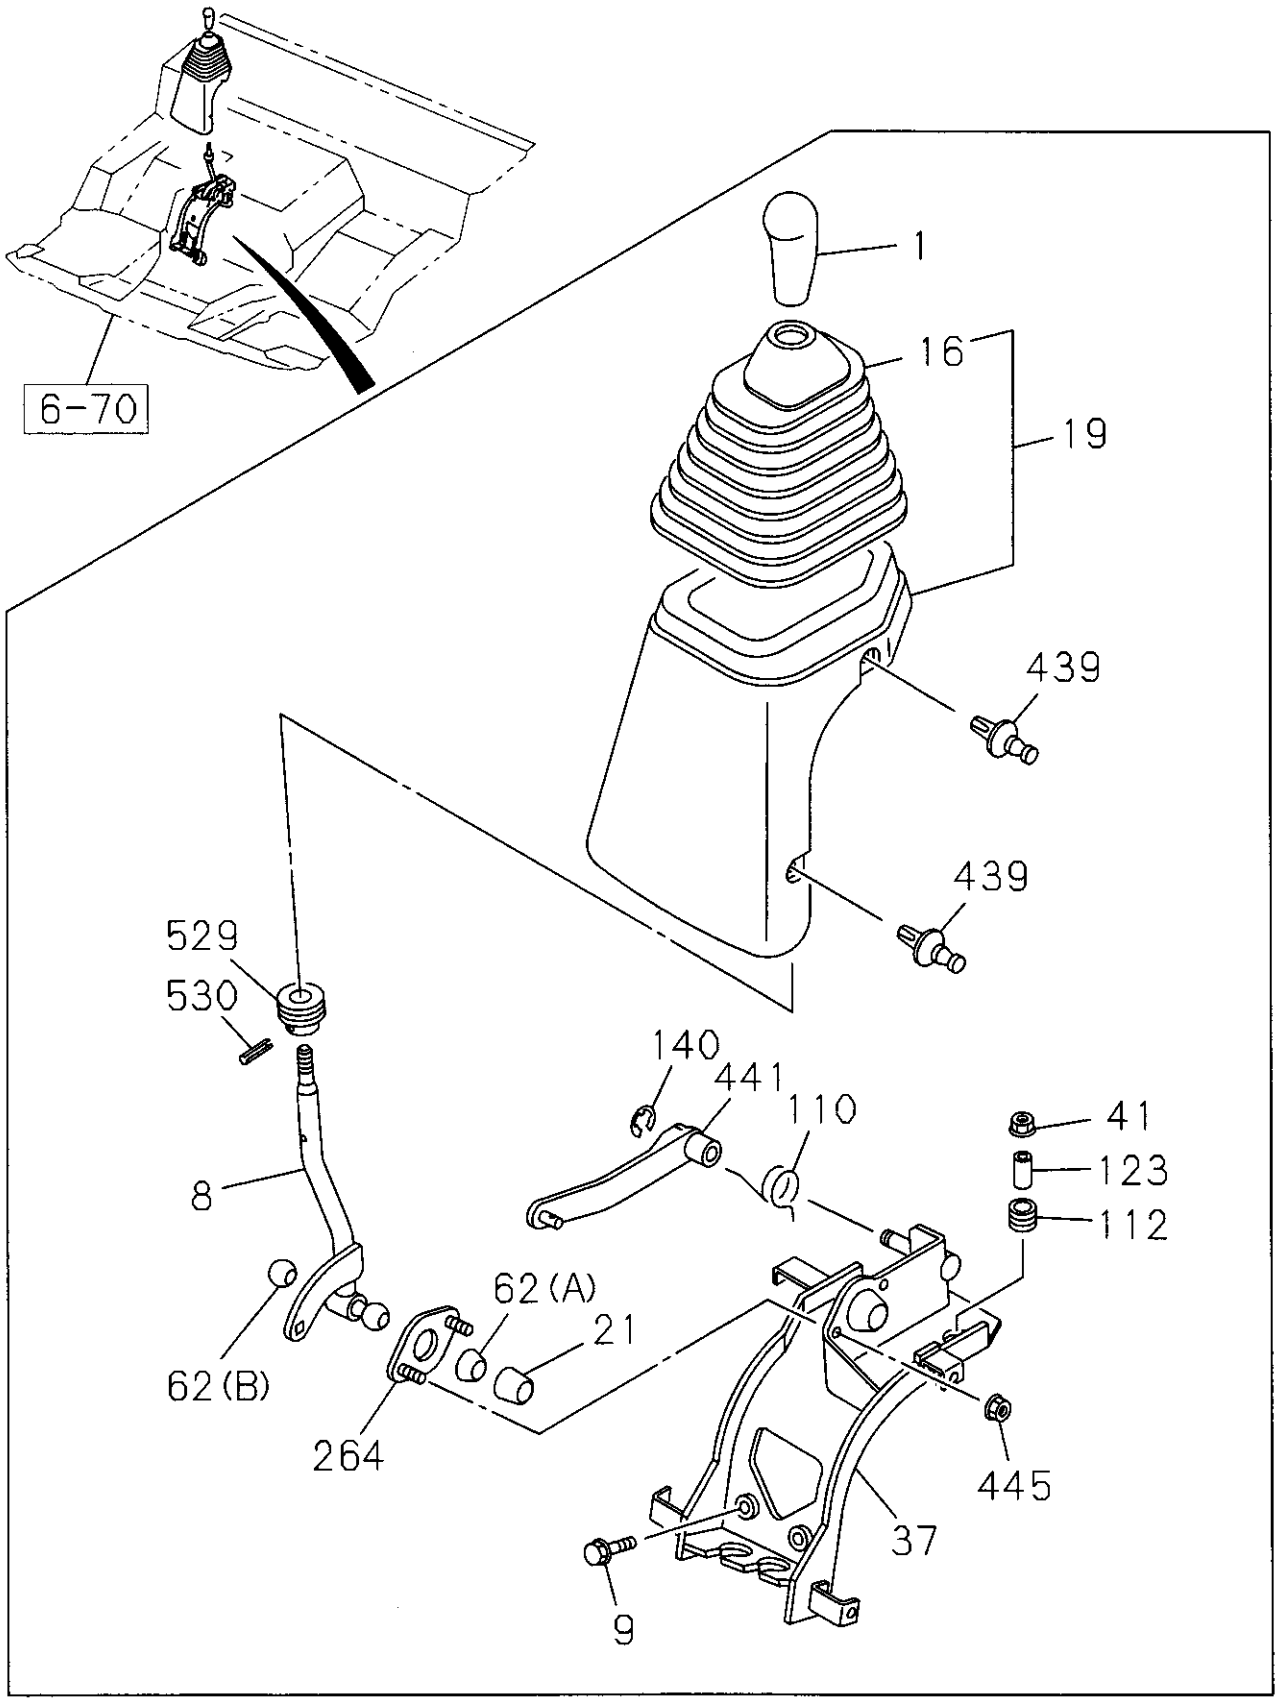

https://truckmanualshub.com/

MANUAL TRANSMISSION SHIFT CONTROL LEVER

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- KNOB; CHANGE LEVER					
	1-33611-068-1		1103-		01	A
8	--- LEVER; CHANGE					
	8-98093-455-0		1103-		01	A
9	--- BOLT; CHANGE LEVER					
	8-94412-342-0		1103-		02	A M8X25
16	--- BOOT; CHANGE LEVER					
	1-79998-751-4		1103-		01	A
19	--- COVER; CHANGE LEVER					
	8-97407-953-0		1103-		01	A GRAY
21	--- SEAT; CHANGE LEVER					
	1-33619-429-0		1103-		01	A
37	--- BRACKET; CHANGE LEVER SUPPORT					
	8-98093-443-0		1103-		01	A
41	--- NUT; CHANGE LEVER					
	8-97329-625-0		1103-		02	A M8 W/DISHED WASHER
62	--- SEAT; BALL, CHANGE LEVER					
	1-33619-427-0		1103-		01	A (A)
	8-97049-147-0		1103-		01	A (B)
110	--- SPRING; RETURN, CHANGE LEVER					
	1-33619-435-0		1103-		01	A
112	--- RUBBER; CUSHION					
	1-33619-442-0		1103-		04	A
123	--- COLLAR; DIST, CHANGE LEVER					
	1-33619-443-0		1103-		04	A
140	--- RING; SNAP					
	0-91805-510-0		1103-		01	A ID=10

https://truckmanualshub.com/

2-35 MANUAL TRANSMISSION SHIFT CONTROL LEVER


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
264	--- PLATE; COVER					
	1-33619-430-0		1103-		01	A
439	--- FASTENER; COVER					
	8-97407-955-0		1103-		04	A GRAY
441	--- LEVER; SELECT					
	8-98093-449-0		1103-		01	A
445	--- NUT; PLATE					
	0-91180-106-0		1103-		02	A M6 FLANGE
529	--- RING; BOOT					
	1-33619-504-0		1103-		01	A
530	--- PIN; SPRING					
	1-33619-505-0		1103-		01	A

https://truckmanualshub.com/

2-36 MANUAL TRANSMISSION CONT LINK AND CABLE

FIG-NO. CABLE ; TRANS CONT

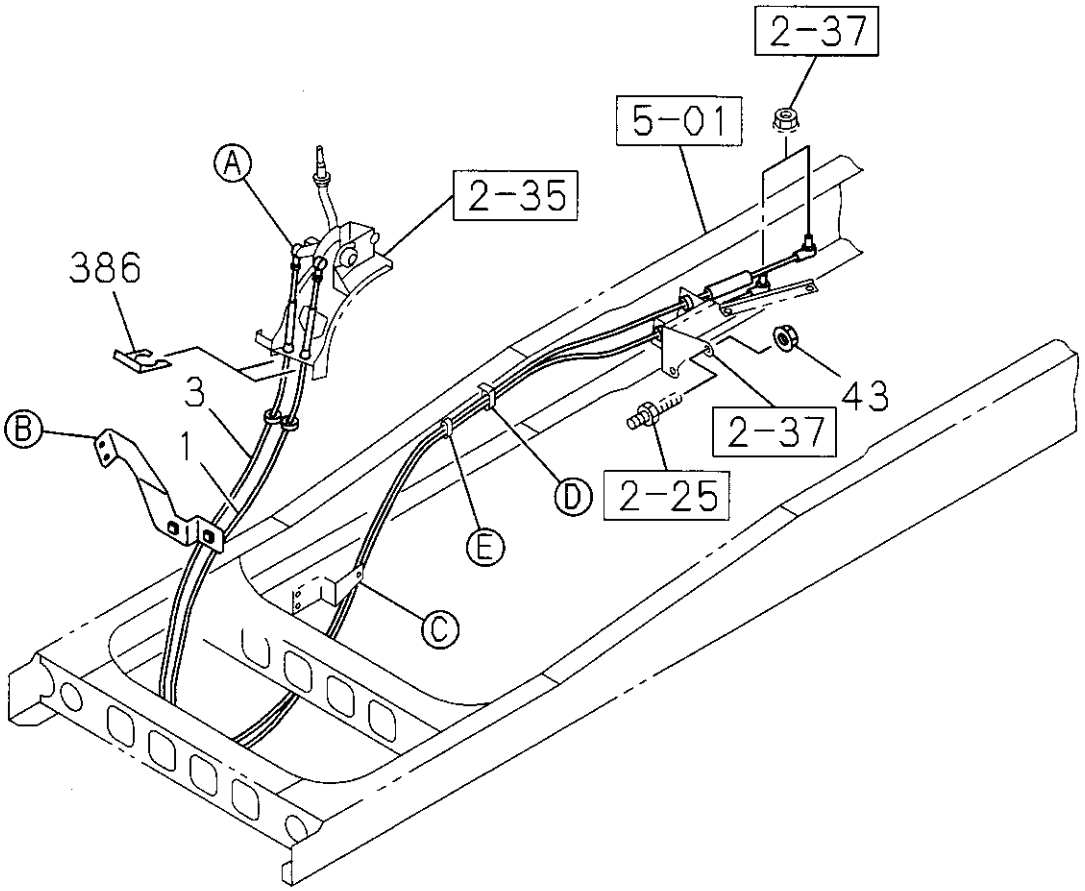


https://truckmanualshub.com/

MANUAL TRANSMISSION CONT LINK AND CABLE

BRACKET AND CLIP

FIG-NO.

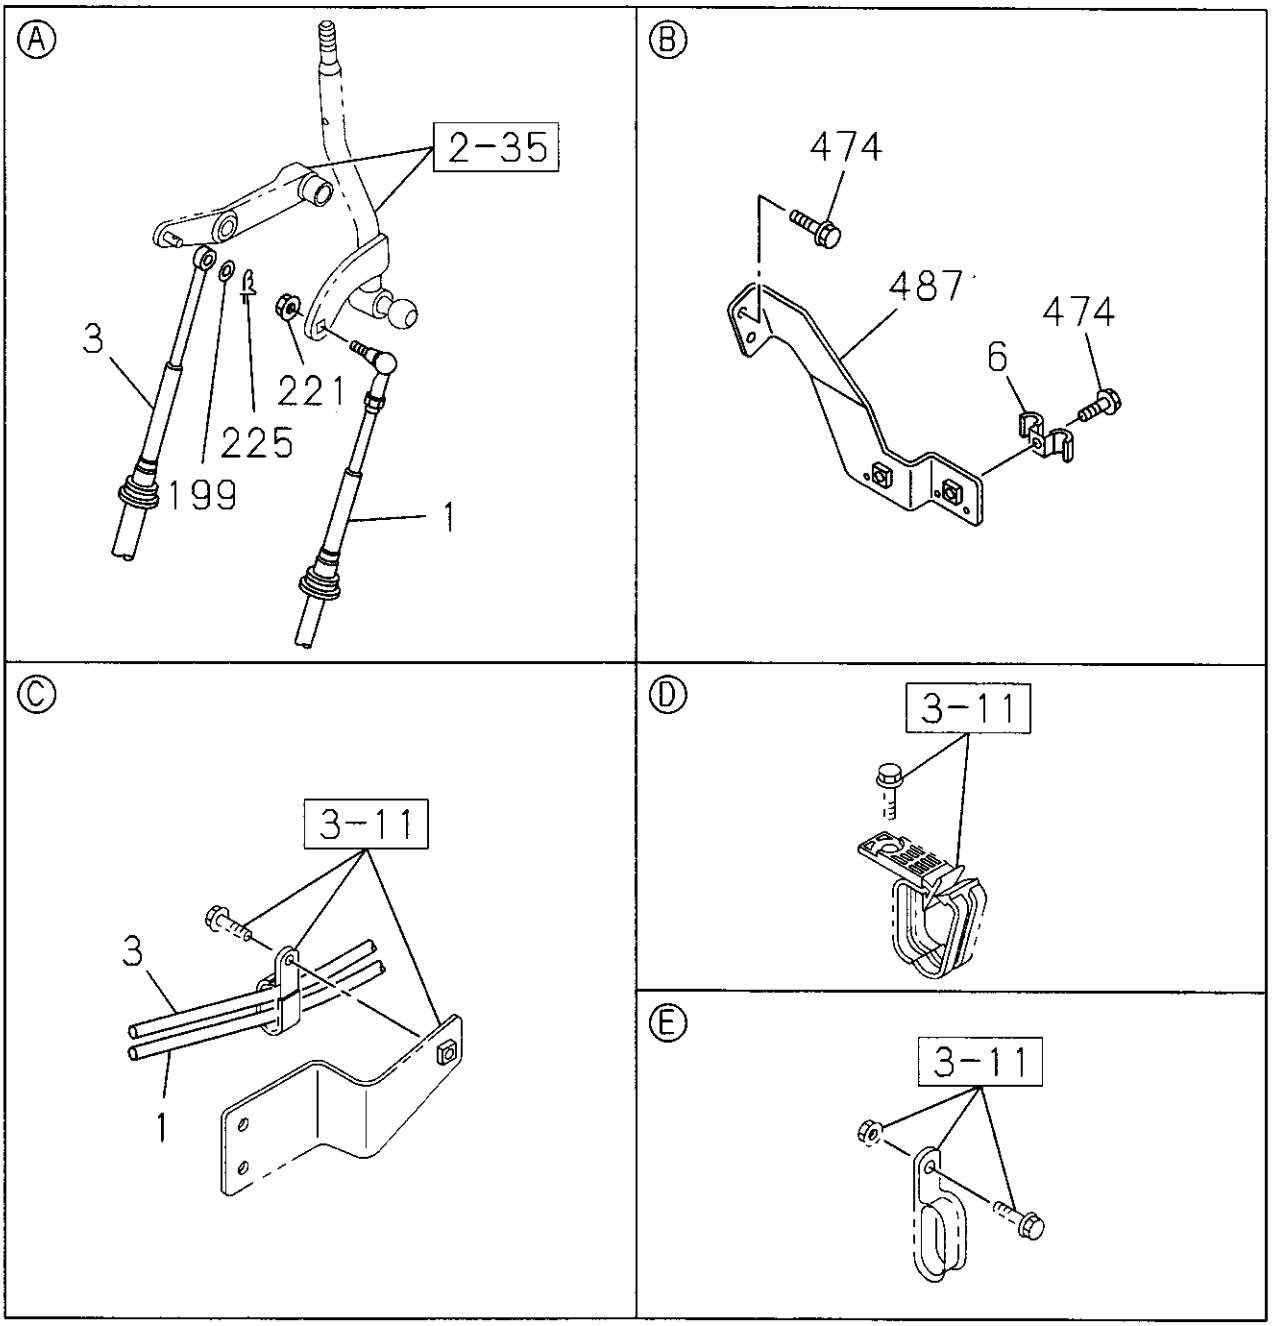

https://truckmanualshub.com/

2-36 MANUAL TRANSMISSION CONT LINK AND CABLE


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- CABLE; SHIFT, TRANS CONT	8-98169-839-0		1103-		01	A L=2935
3	--- CABLE; SELECT, TRANS CONT	8-98041-384-3		1103-		01	A L=3055
6	--- CLIP; CABLE	1-09700-739-0		1103-		01	A ID=11 & 11 L=17.5 & 17.5
43	--- NUT; BRKT	0-91180-210-0		1103-		02	A M10 FLANGE
199	--- WASHER; PL, SELECT	0-91614-508-0		1103-		01	A ID=8.4 OD=16
221	--- NUT; SHIFT WIRE TO LEVER	1-09440-062-1		1103-		01	A M8 FLANGE
225	--- PIN; SELECT CABLE	8-94111-137-0		1103-		01	A L=27.7
386	--- CLIP; CONT CABLE & TUBE	1-09700-966-1		1103-		02	A
474	--- BOLT; BRKT	0-51640-825-0		1103-		03	A
487	--- BRACKET; CONT CABLE	8-98183-009-0		1103-		01	A

https://truckmanualshub.com/

2-37 MANUAL TRANSMISSION CONT; MISSION SIDE

FIG-NO.

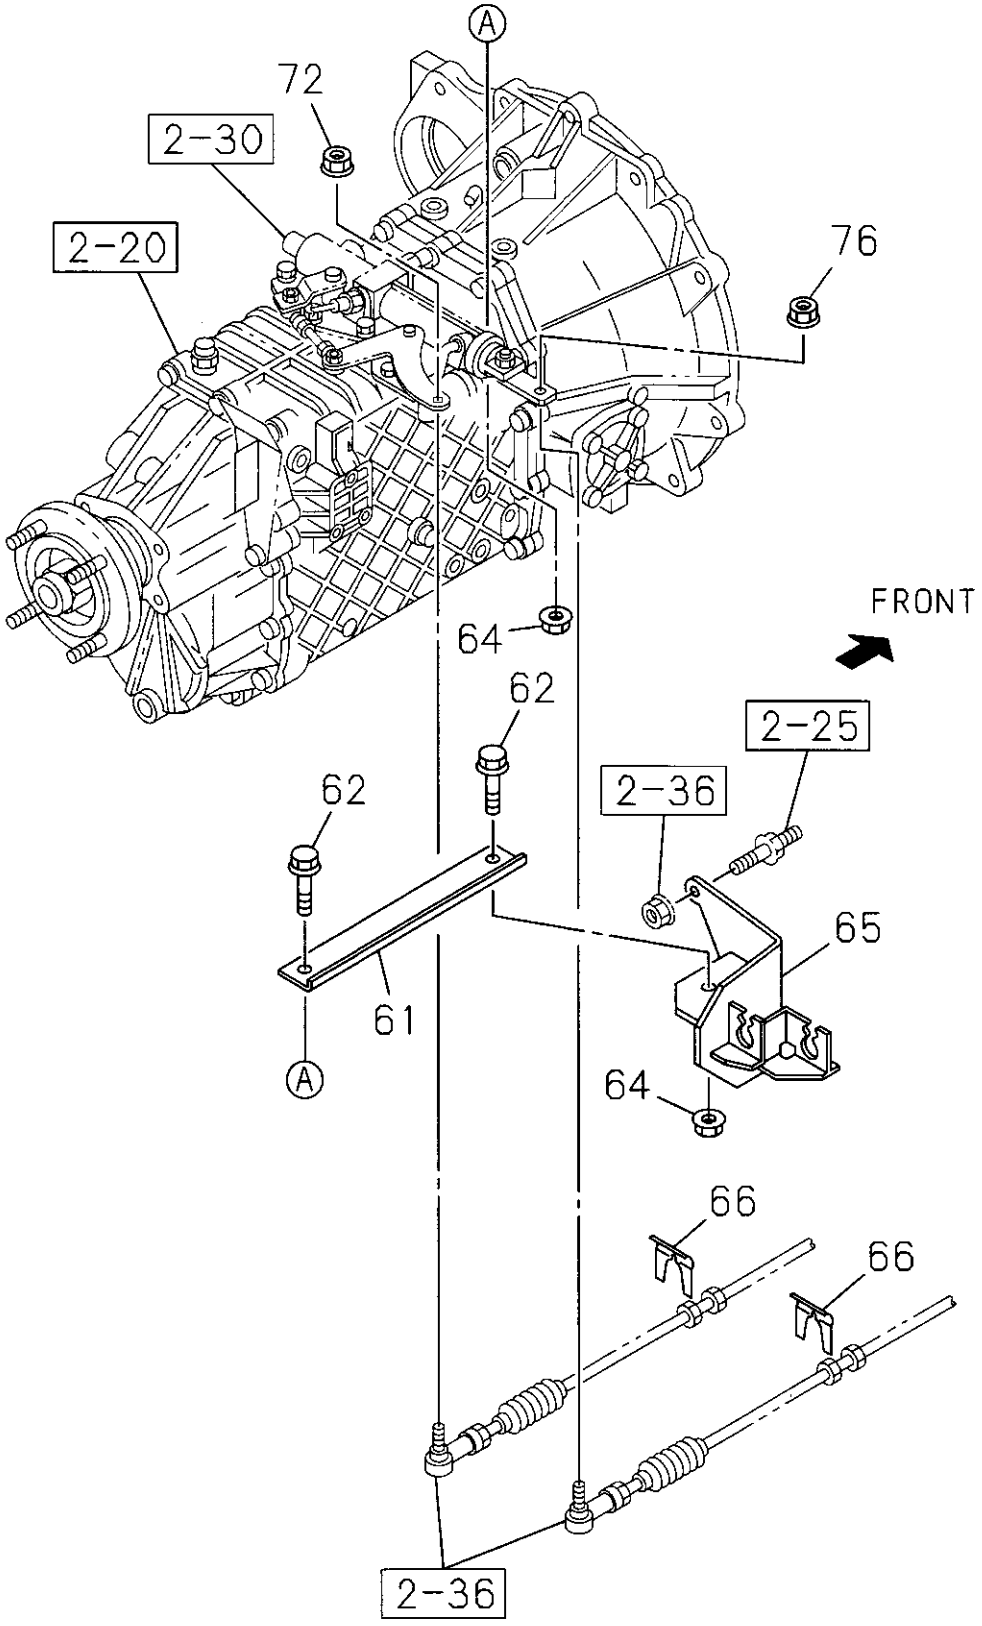

https://truckmanualshub.com/

MANUAL TRANSMISSION CONT; MISSION SIDE


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	
						A LEAF SUS(FCR5CS)	
61	--- STAY; BRKT, TRANS CONT						
	1-33657-267-0		1103-		01	A	
62	--- BOLT; STAY						
	0-28651-030-0		1103-		02	A	M10X30 FLANGE
64	--- NUT; STAY						
	0-91180-210-0		1103-		02	A	M10 FLANGE
65	--- BRACKET; SHIFT TO SELECT, TRANS CONT						
	8-98167-239-0		1103-		01	A	
66	--- CLIP; SELECT BRKT						
	1-09701-209-1		1103-		02	A	ID=22.2
72	--- NUT; TRANS CONT, SELECT						
	1-09440-049-0		1103-		01	A	M8 FLANGE
76	--- NUT; BALL JOINT, SELECT WIRE						
	1-09440-049-0		1103-		01	A	M8 FLANGE

https://truckmanualshub.com/

2-81 POWER TAKE OFF; TRANSMISSION SIDE

FIG-NO.

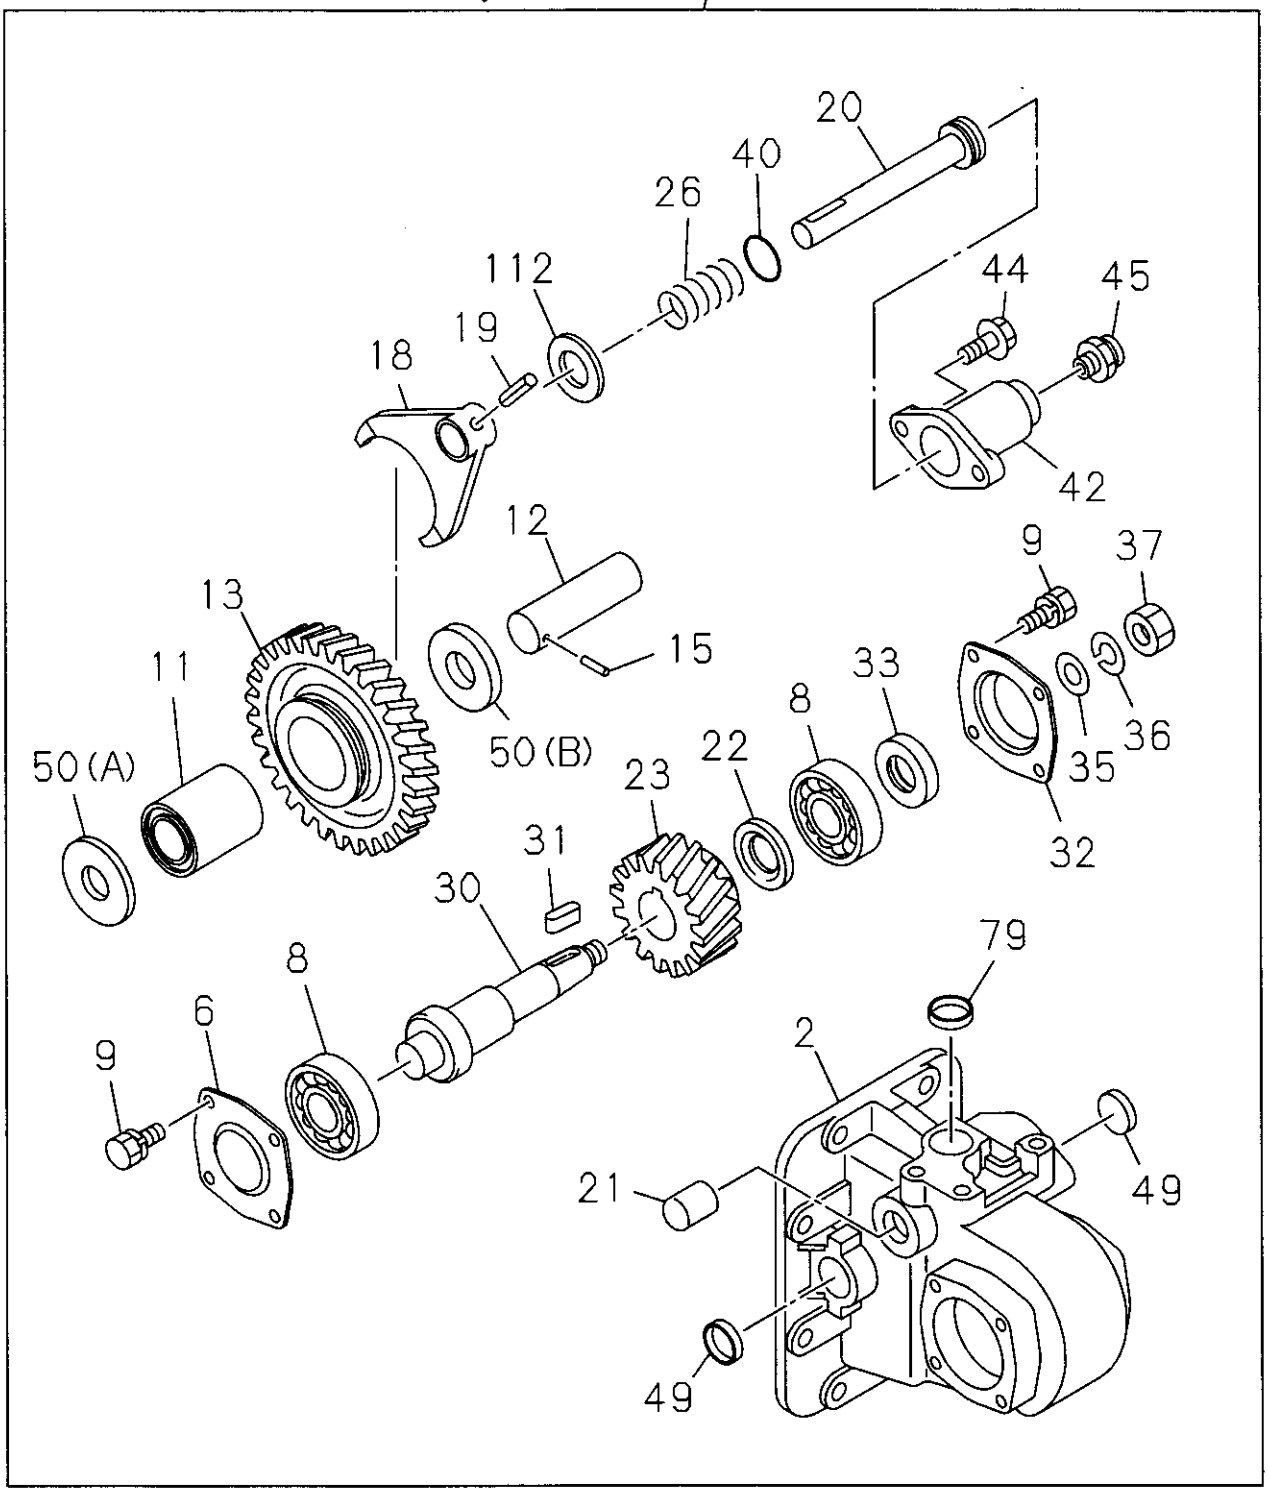

https://truckmanualshub.com/

POWER TAKE OFF; TRANSMISSION SIDE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
1	--- POWER TAKE OFF ASM; TRANS SIDE					
	8-97257-443-4		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
2	--- CASE; GEAR, TRANS SIDE PTO					
	8-97305-792-1		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
6	--- COVER; FRT, OUTPUT SHAFT, TRANS SIDE PTO					
	8-98046-612-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
8	--- BEARING; OUTPUT SHAFT, TRANS SIDE PTO					
	8-94343-031-1		1103-		02	A TRANSMISSION SIDE PTO W/O LEVER(SH5) ID=25 OD=62
9	--- BOLT; OUTPUT SHAFT COVER, TRANS SIDE PT					
	0-28050-820-0		1103-		08	A TRANSMISSION SIDE PTO W/O LEVER(SH5) M8X20 FLANGE
11	--- BEARING; IDLE GEAR, TRANS SIDE PTO					
	8-98068-087-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
12	--- SHAFT; IDLE GEAR, TRANS SIDE PTO					
	8-97305-817-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
13	--- GEAR; IDLE, TRANS SIDE PTO					
	8-97305-810-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) Z=36
15	--- PIN; SPR, TRANS SIDE PTO					
	9-09678-514-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
18	--- ARM; GEAR SHIFT, TRANS SIDE PTO					
	8-98009-081-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
19	--- PIN; SPR, SHIFT ARM, TRANS SIDE PTO					
	8-97306-596-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
20	--- ROD; GEAR SHIFTER, TRANS SIDE PTO					
	8-97305-820-1		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
21	--- COVER; SHIFTER ROD, TRANS SIDE PTO					
	8-98046-619-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
22	--- COLLAR; DIST, OUTPUT SHAFT, TRANS SIDE P					
	8-98068-086-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)

https://truckmanualshub.com/

2-81 POWER TAKE OFF; TRANSMISSION SIDE

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A MZZ6W M/T(RSA)
23	--- GEAR; OUTPUT, TRANS SIDE PTO						
		8-97305-798-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) Z=26
26	--- SPRING; SHIFTER ROD, TRANS SIDE PTO						
		1-38121-004-1		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
30	--- SHAFT; OUTPUT, TRANS SIDE PTO						
		8-97374-129-1		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
31	--- KEY; OUTPUT SHAFT, TRANS SIDE PTO						
		8-98068-088-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) L=25
32	--- COVER; RR, OUTPUT SHAFT, TRANS SIDE PTO						
		8-97305-794-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
33	--- SEAL; OIL, OUTPUT SHAFT, TRANS SIDE PTO						
		1-38159-007-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
35	--- WASHER; PL, FLANGE FIX, TRANS SIDE PTO						
		0-91610-514-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) ID=15
36	--- WASHER; LK, FLANGE FIX, TRANS SIDE PTO						
		0-91510-814-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) ID=14.2
37	--- NUT; FLANGE FIX, TRANS SIDE PTO						
		0-91111-514-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) M14
40	--- GASKET; AIR SHIFTER ROD, TRANS SIDE PTO						
		9-09561-324-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
42	--- CYLINDER; AIR, TRANS SIDE PTO						
		8-97306-597-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
44	--- BOLT; COVER, TRANS SIDE PTO						
		0-28050-820-0		1103-		02	A TRANSMISSION SIDE PTO W/O LEVER(SH5) M8X20 FLANGE
45	--- NIPPLE; AIR CYL, TRANS SIDE PTO						
		1-09650-074-1		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) M12 & PT1/4 STRAIGHT

https://truckmanualshub.com/


POWER TAKE OFF; TRANSMISSION SIDE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A MZZ6W M/T(RSA)
49	--- PLUG; IDLE SHAFT, TRANS SIDE PTO					
	8-98037-773-0		1103-		02	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
50	--- WASHER; THRUST, IDLE GEAR, TRANS SIDE PT					
	1-38226-058-1		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) (A)
	8-97305-818-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) (B)
79	--- COVER; DUST, TRANS SIDE PTO					
	8-98037-773-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)
112	--- COLLAR; SHIFTER ROD, TRANS SIDE PTO					
	8-98149-248-0		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5)

https://truckmanualshub.com/

2-85 POWER TAKE OFF CONTROL

FIG-NO.

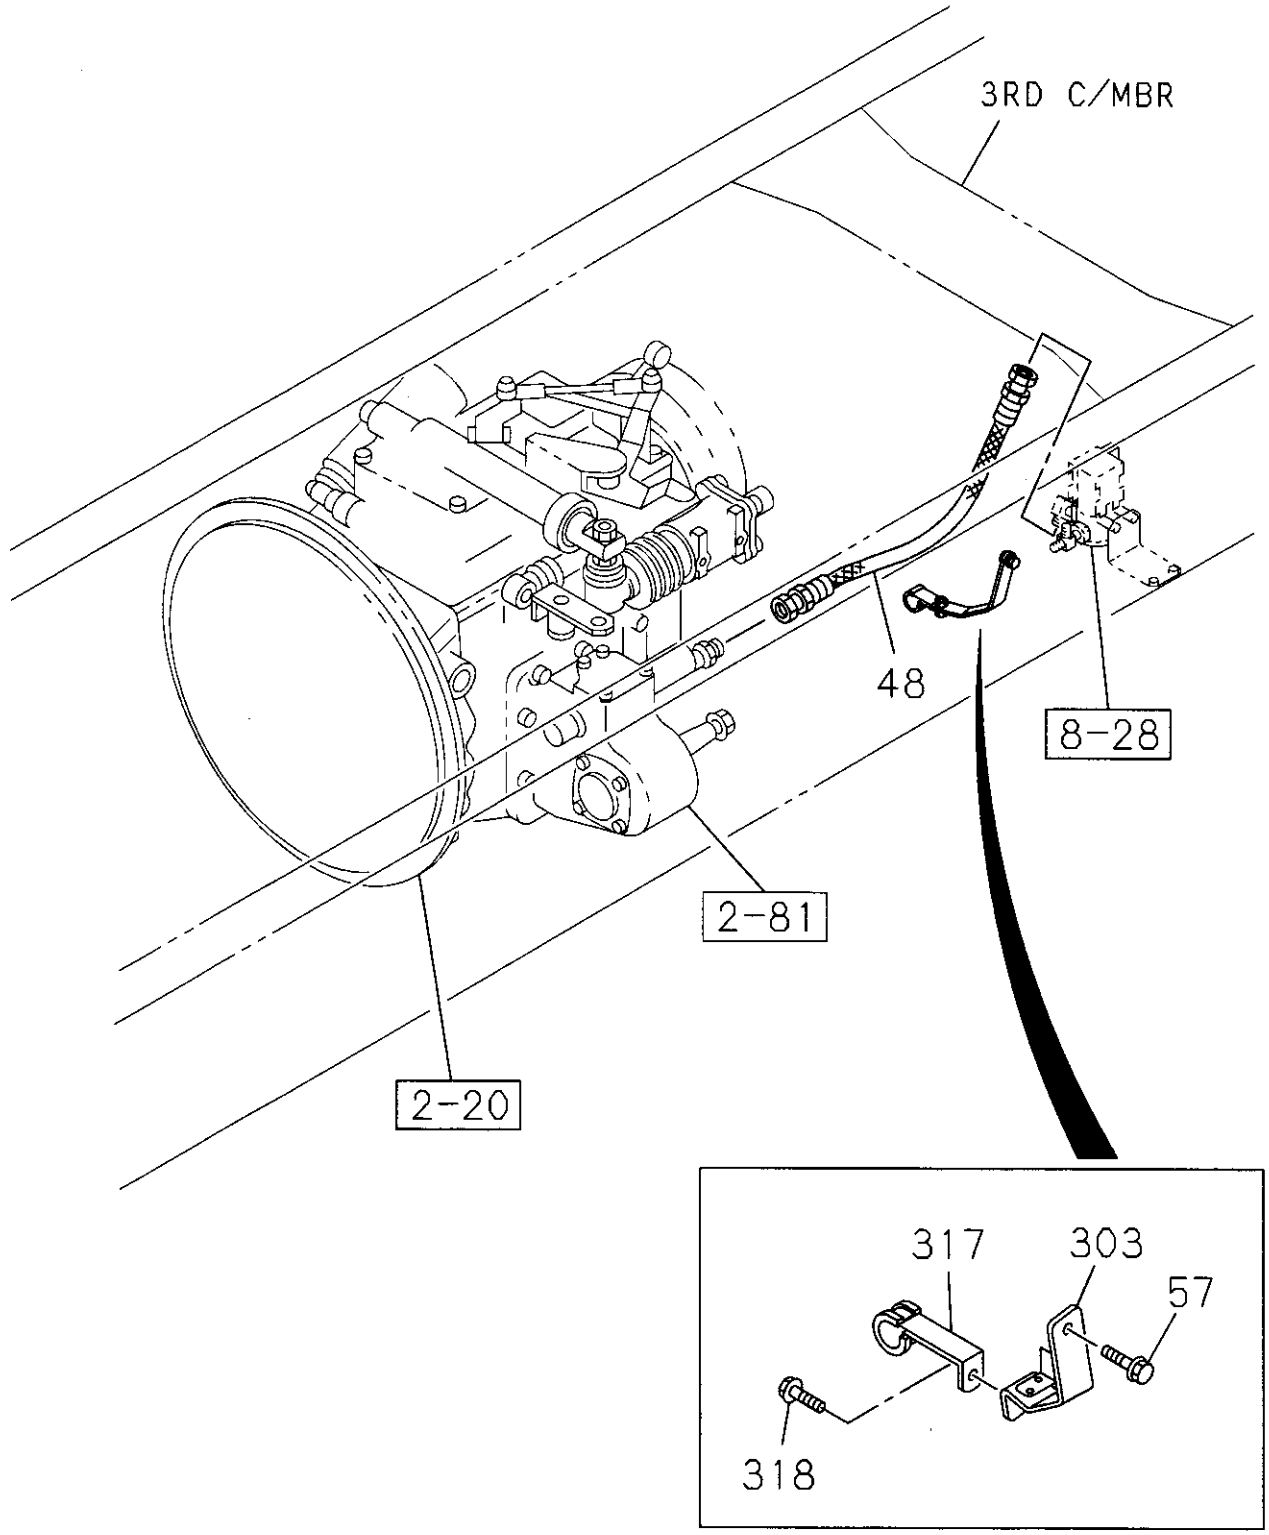

https://truckmanualshub.com/

POWER TAKE OFF CONTROL

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
48	--- HOSE; FLEX, PTO					
	1-09363-613-1		1103-		01	A PTO CONTROL<SV6> L=580
57	--- BOLT; BRKT					
	0-28651-025-0		1103-		01	A PTO CONTROL<SV6> M10X25 FLANGE IDN
303	--- BRACKET; CLIP					
	8-98136-975-0		1103-		01	A PTO CONTROL<SV6>
317	--- CLIP; NYLON TUBE					
	1-09701-215-1		1103-		01	A PTO CONTROL<SV6> ID=15 L=22 H=30
318	--- BOLT; CLIP					
	0-28650-820-0		1103-		01	A PTO CONTROL<SV6> M8X20 FLANGE IDN


https://truckmanualshub.com/

3

https://truckmanualshub.com/

3-01 FRONT WHEEL BRAKE

FIG-NO.

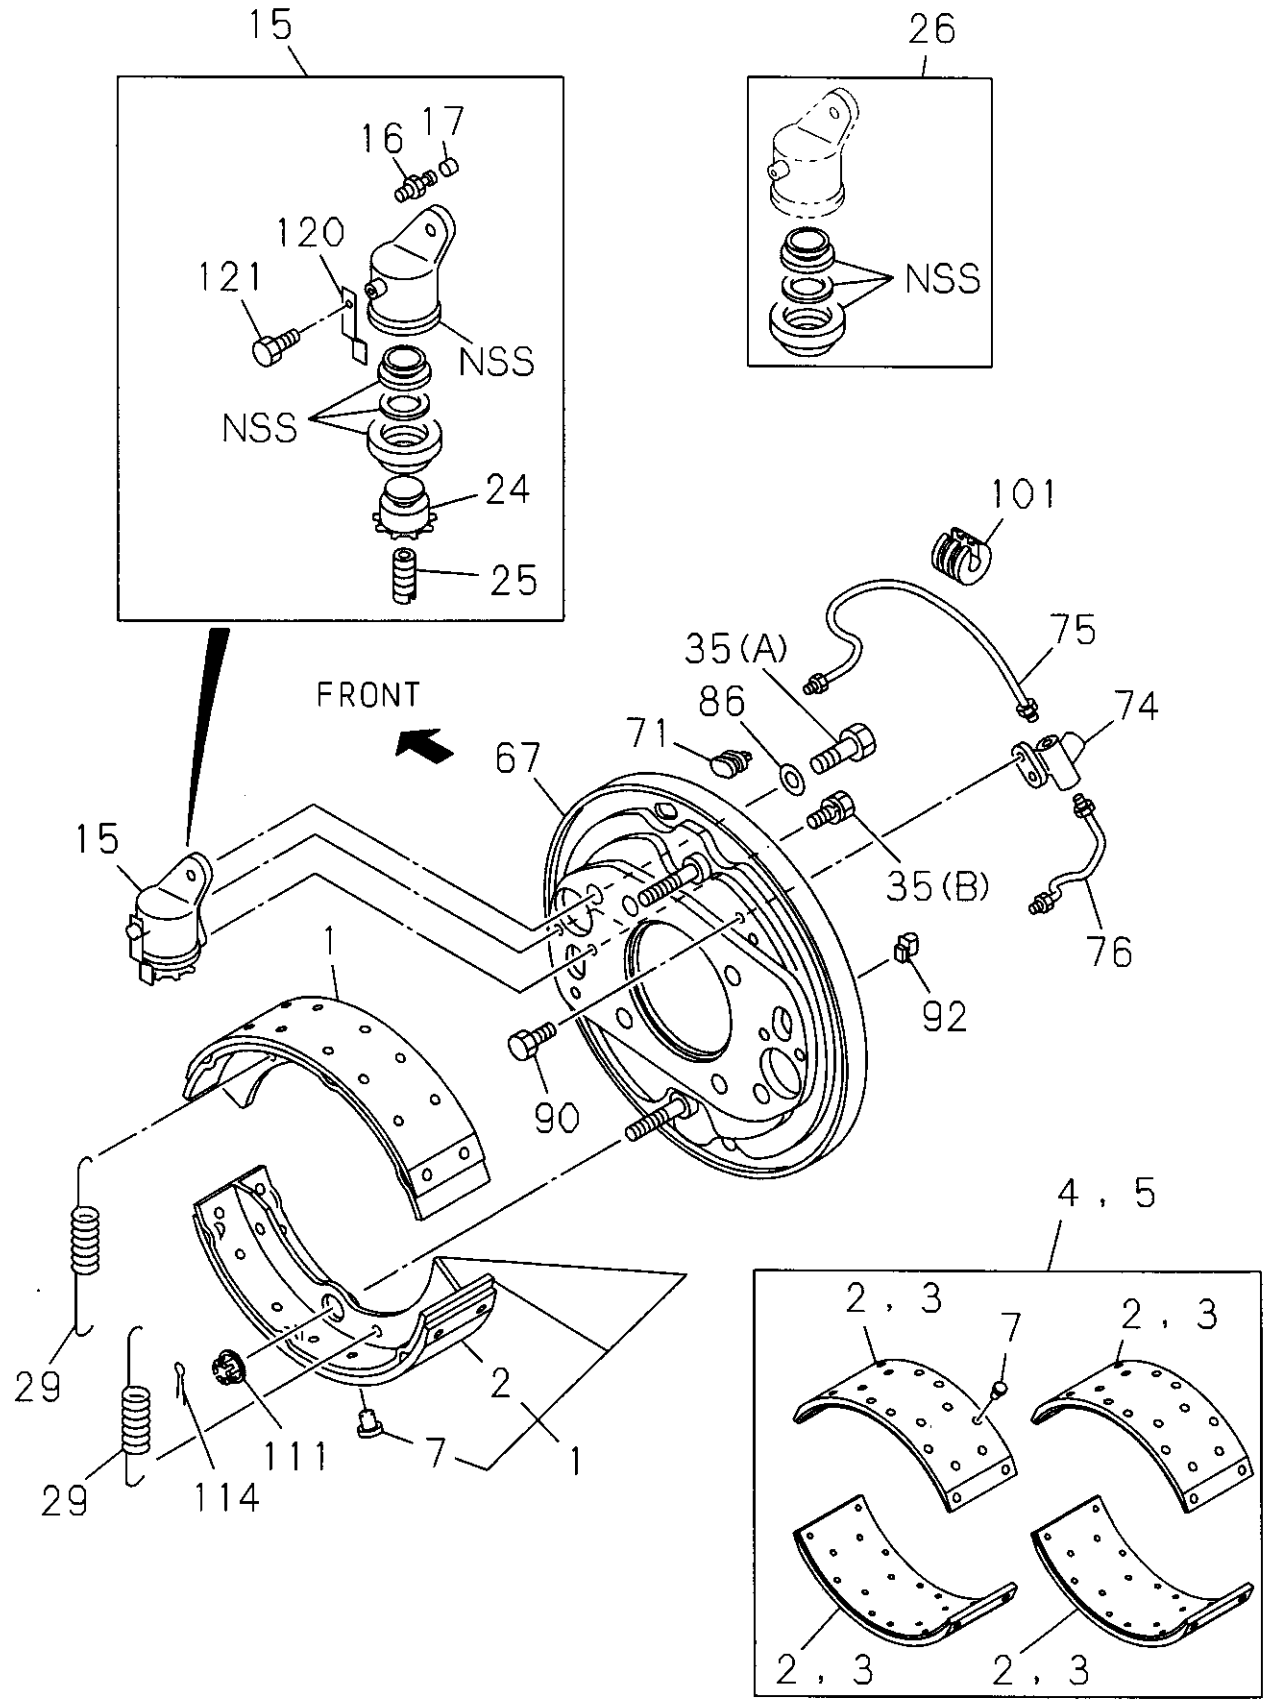

https://truckmanualshub.com/

FRONT WHEEL BRAKE

3-01
FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	-A- SHOE; BRK, FRT					
	1-47120-624-0		1103-		04	A
2	--- LINING; FRT BRK SHOE, STANDARD					
	1-47125-801-0		1103-		04	A
3	--- LINING; FRT BRK SHOE, OVER SIZE					
	1-47125-802-0		1103-		04	A
4	-A- LINING SET; FRT BRK, STANDARD					
	1-88310-501-1		1103-		01	A
5	--- LINING SET; FRT BRK, OVER SIZE					
	1-88310-502-1		1103-		01	A
7	--- RIVET; LINING, FRT BRK					
	1-09732-029-0		1103-		56	A
15	-B- CYLINDER; WHEEL, FRT BRK					
	1-47600-938-0		1103-	R	02	A
	1-47600-939-0		1103-	L	02	A
16	--- SCREW; BLEEDER, FRT BRK					
	8-98050-476-0		1103-		04	A
17	--- CAP; BLEEDER, FRT WHEEL CYL					
	8-98050-479-0		1103-		04	A
24	--- PISTON; FRT WHEEL CYL					
	1-47624-318-0		1103-	R	02	A
	1-47624-319-0		1103-	L	02	A
25	--- SCREW; ADJ, FRT WHEEL CYL					
	1-47622-020-0		1103-	R	02	A LH THREAD
	1-47622-021-0		1103-	L	02	A RH THREAD
26	-A- CUP SET; FRT WHEEL CYL					
	1-87830-679-0		1103-		04	A
29	--- SPRING; RETURN, FRT BRK SHOE					
	1-09583-288-0		1103-		04	A

https://truckmanualshub.com/

3-01 FRONT WHEEL BRAKE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
35	--- BOLT; FRT WHEEL CYL					
	1-09000-365-0		1103-		04	A (A) M14X30
	9-09802-475-0		1103-		08	A (B) M8X22
67	--- PLATE; BACK, FRT BRK					
	1-47150-375-0		1103-	R	01	A
	1-47150-376-0		1103-	L	01	A
71	--- GROMMET; CHECK HOLE					
	1-09333-033-0		1103-		04	A
74	--- CONNECTOR; FRT BRK					
	1-47630-013-1		1103-	R	01	A
	1-47630-014-1		1103-	L	01	A
75	--- PIPE; OIL, FWD, FRT BRK					
	1-47414-237-0		1103-	R	01	A
	1-47414-238-0		1103-	L	01	A
76	--- PIPE; OIL, BACKWARD, FRT BRK					
	1-47414-241-0		1103-	R	01	A
	1-47414-242-0		1103-	L	01	A
86	--- WASHER; LK, FRT WHEEL CYL					
	0-91510-614-0		1103-		04	A ID=14.2
90	--- BOLT; CONNECTOR					
	5-09030-036-1		1103-		02	A
92	--- GROMMET; ADJ HOLE					
	9-09956-640-0		1103-		04	A
101	--- PROTECTOR; OIL PIPE, FRT BRK					
	9-47461-158-0		1103-		02	A
111	--- NUT; FLANGE, SHOE HOLD					
	1-09440-002-0		1103-		04	A

https://truckmanualshub.com/


FRONT WHEEL BRAKE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
114	--- PIN; SPLIT, SHOE HOLD					
	9-09874-040-0		1103-		04	A
120	--- SPRING; LK, ADJ, FRT WHEEL CYL					
	1-47629-072-0		1103-		04	A
121	--- SCREW; LK SPR FRT WHEEL CYL					
	8-94128-727-0		1103-		04	A

https://truckmanualshub.com/

3-05 REAR WHEEL BRAKE

FIG-NO.

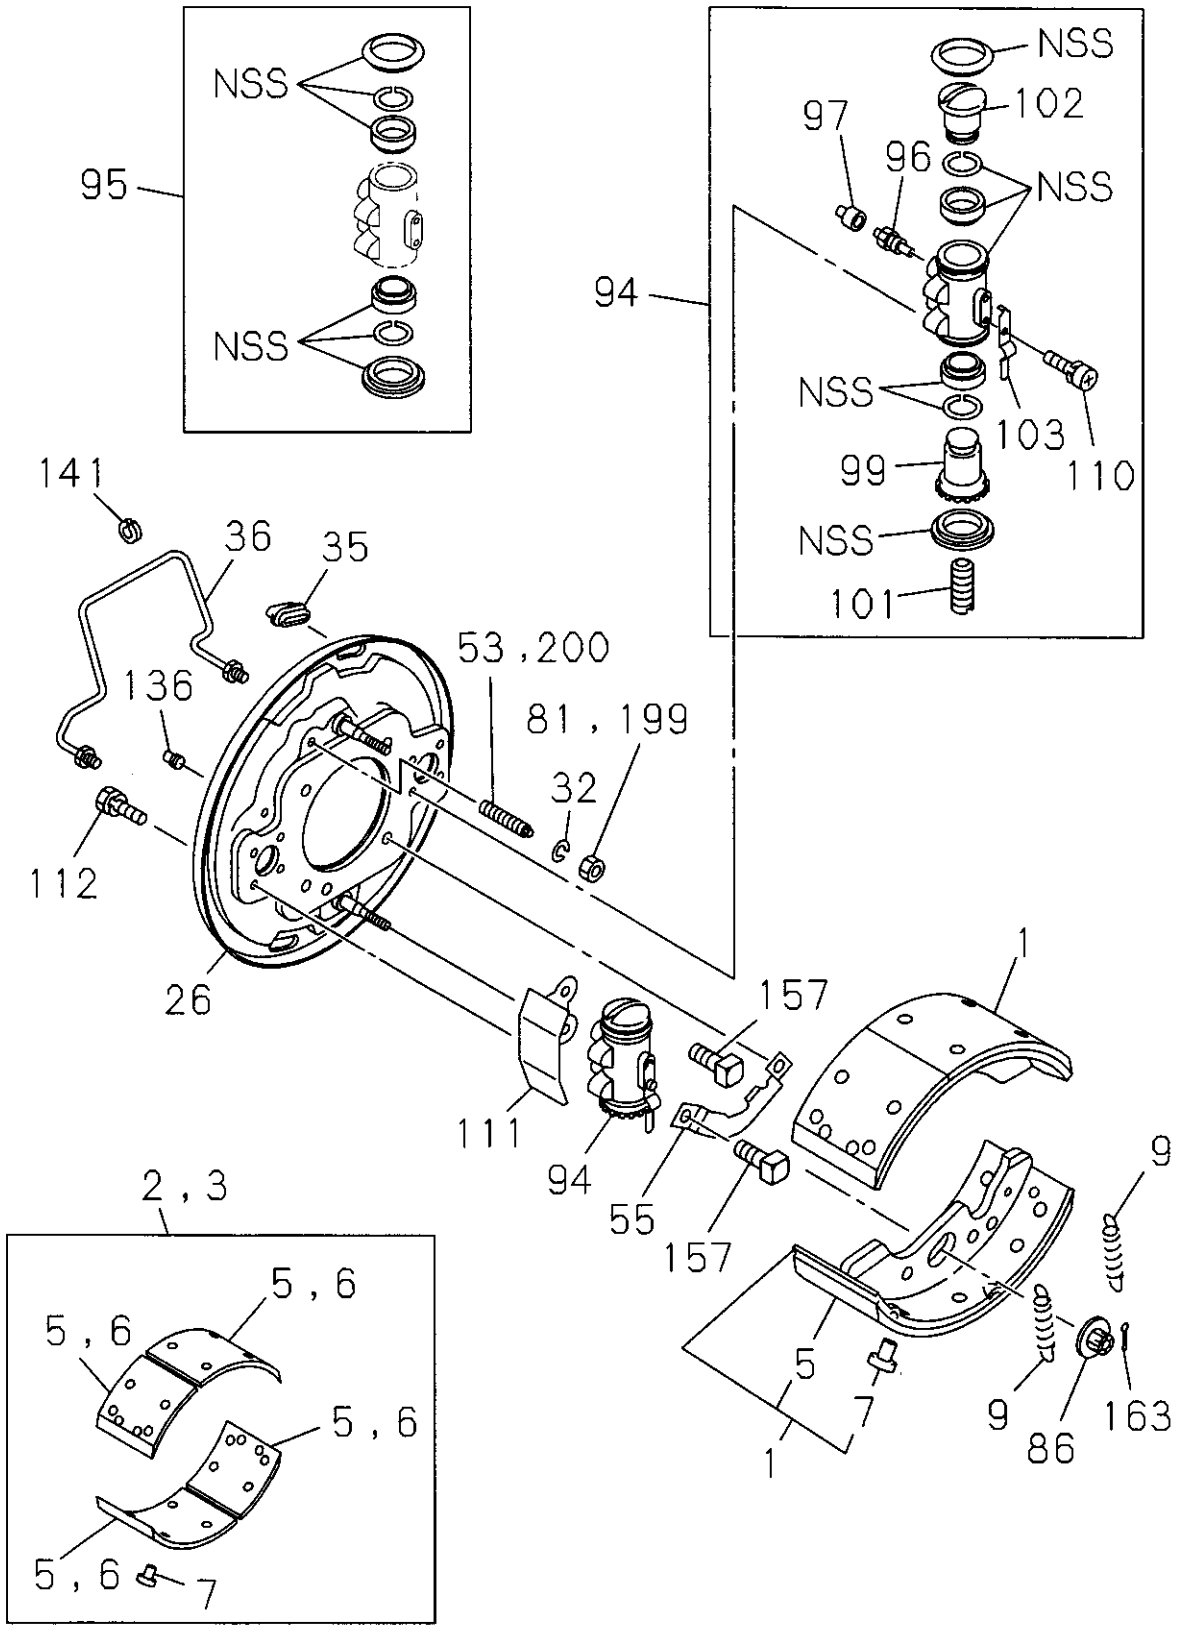

https://truckmanualshub.com/

REAR WHEEL BRAKE

3-05
FIG-NO.

KEY NO.	RECOMMEND CLASS／PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	-A- SHOE; BRK, RR	1-47120-626-0		1103-		04	A
2	-A- LINING SET; RR BRK, STANDARD	1-88310-551-1		1103-		02	A
3	--- LINING SET; RR BRK, OVER SIZE	1-88310-552-1		1103-		02	A
5	--- LINING; RR BRK SHOE, STANDARD	1-47125-803-0		1103-		08	A
6	--- LINING; RR BRK SHOE, OVER SIZE	1-47125-804-0		1103-		08	A
7	--- RIVET; LINING, RR BRK	1-09732-029-0		1103-		96	A
9	--- SPRING; RETURN, BRK SHOE	1-09583-271-0		1103-		04	A
26	--- PLATE; BACK, RR BRK	1-47150-467-0		1103-	R	01	A
		1-47150-468-0		1103-	L	01	A
32	--- WASHER; LK	0-91510-512-0		1103-		04	A ID=12.2
35	--- GROMMET; CHECK HOLE	1-09333-033-0		1103-		04	A
36	--- PIPE; OIL, RR BRK	1-47421-815-0		1103-		02	A
53	--- BOLT; LOCK PLATE	1-47162-050-0		1103-		02	A
55	--- PLATE; LK, RR WHEEL CYL	1-47139-064-0		1103-		04	A
81	--- NUT	1-09400-100-0		1103-		02	A

https://truckmanualshub.com/

3-05 REAR WHEEL BRAKE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
	RECOMMEND CLASS / PART NAME					
86	--- NUT; FLANGE					
	1-09440-003-0		1103-		04	A
94	-B- CYLINDER; WHEEL, RR BRK					
	1-47600-956-0		1103-	R	01	A FORWARD
	1-47600-957-0		1103-	R	01	A BACKWARD
	1-47600-958-0		1103-	L	01	A FORWARD
	1-47600-959-0		1103-	L	01	A BACKWARD
95	-A- CUP SET; RR WHEEL CYL					
	1-87830-770-0		1103-		04	A
96	--- SCREW; BLEEDER, RR BRK					
	1-47615-020-0		1103-		02	A
97	--- CAP; BLEEDER, RR WHEEL CYL					
	1-47619-009-0		1103-		02	A IDN
99	--- PISTON; RR WHEEL CYL					
	1-47624-309-0		1103-	R	02	A
	1-47624-310-0		1103-	L	02	A
101	--- SCREW; ADJ, RR WHEEL CYL					
	1-47622-033-0		1103-	R	02	A M22 LH THREAD
	1-47622-034-0		1103-	L	02	A M22 RH THREAD
102	--- PISTON; REAR WHEEL CYL					
	1-47624-311-0		1103-		04	A
103	--- SPRING; LK, RR WHEEL CYL, ADJ					
	1-47629-072-0		1103-		04	A
110	--- SCREW; LOCK SPRING, RR WHEEL CYL					
	8-94128-727-0		1103-		04	A

https://truckmanualshub.com/


REAR WHEEL BRAKE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
111	--- COVER; WHEEL CYL					
	1-47159-103-0		1103-		04	A
112	--- BOLT; WHEEL CYL SETTING					
	1-47159-184-0		1103-		16	A M12
136	--- GROMMET					
	9-09956-640-0		1103-		04	A
141	--- PROTECTOR; RR BRK PIPE					
	9-47461-158-0		1103-		02	A
157	--- BOLT; RR BRK SET					
	1-09060-015-0		1103-		12	A M14X45 SQUARE HEAD
163	--- PIN; SPLIT, SHOE HOLD					
	9-09874-040-0		1103-		04	A
199	--- NUT					
	1-09400-100-0		1103-		02	A
200	--- BOLT					
	1-47162-050-0		1103-		02	A


https://truckmanualshub.com/

3-08 PARKING BRAKE

FIG-NO. PARKING BRAKE

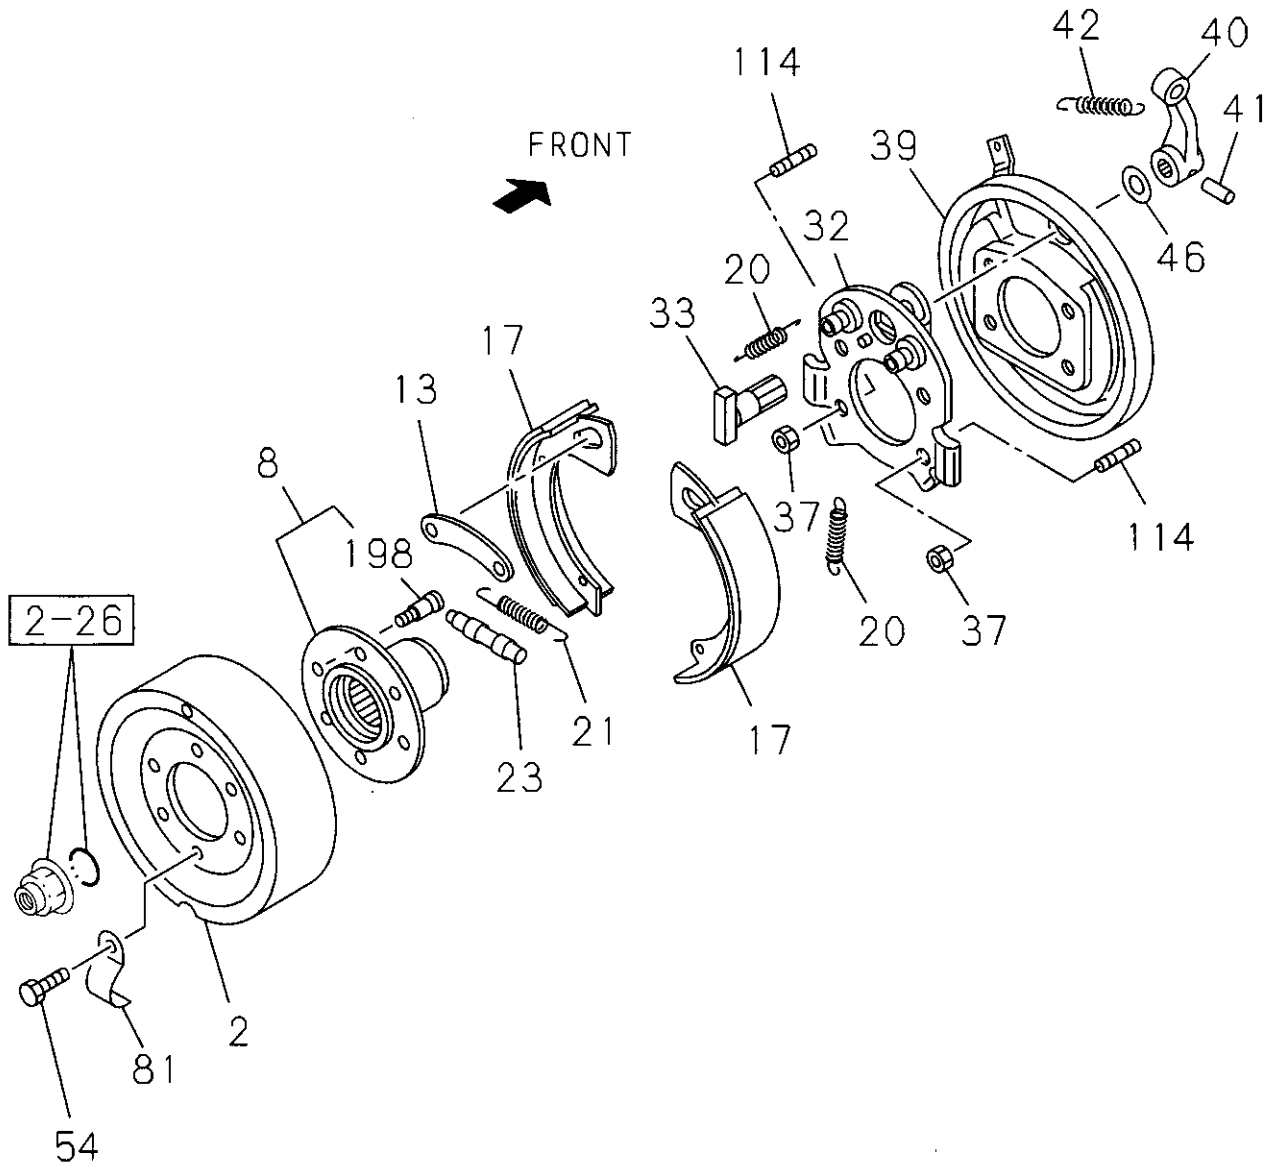

https://truckmanualshub.com/

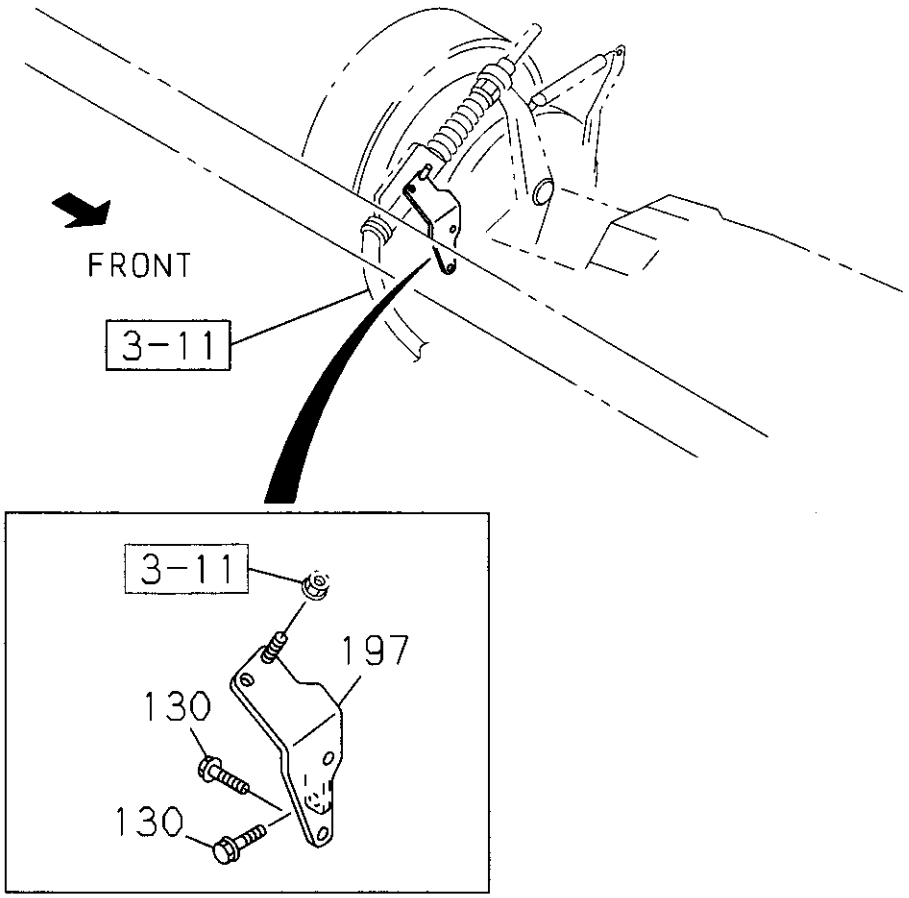

https://truckmanualshub.com/

3-08 PARKING BRAKE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
2	--- DRUM; PARKING BRK					
	1-46211-020-0		1103-		01	A
8	--- FLANGE; PARKING BRK					
	8-98171-007-0		1103-		01	A
13	--- BRACE; PARKING BRK					
	9-46239-003-0		1103-		01	A
17	-B- SHOE; PARKING BRK					
	1-46220-029-0		1103-		02	A
20	--- SPRING; RETURN, SECONDARY, PARKING BRK					
	9-09942-567-1		1103-		02	A
21	--- SPRING; RETURN, PARKING BRK SHOE					
	1-09583-268-0		1103-		01	A
23	--- SCREW; ADJ, PARKING BRK SHOE					
	9-46240-008-0		1103-		01	A
32	--- PLATE; SUPPORT, PARKING BRK					
	1-46213-023-0		1103-		01	A
33	--- SHAFT; CAM, PARKING BRK					
	1-46251-070-0		1103-		01	A
37	--- NUT; SUPPORT PLATE					
	8-97365-444-0		1103-		04	A M14 FLANGE
39	--- COVER; DUST, PARKING BRK					
	1-46213-115-0		1103-		01	A
40	--- LEVER; CM/SHF, PARKING BRK					
	1-46252-057-0		1103-		01	A
41	--- PIN; KNOCK, LEVER					
	9-09878-594-0		1103-		01	A
42	--- SPRING; RETURN, LEVER					
	9-09942-592-0		1103-		01	A

https://truckmanualshub.com/


PARKING BRAKE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A MZZ6W M/T(RSA)
46	--- WASHER; LEVER					
	9-09855-367-0		1103-		01	A
54	--- BOLT; COVER					
	0-50740-820-0		1103-		02	A M8X20 W/LK WASHER
81	--- COVER; CHECK HOLE, PARKING BRK					
	1-46219-018-0		1103-		02	A
114	--- STUD; SUPPORT PLATE					
	8-97365-445-0		1103-		04	A M14X22.5 L=42.5
130	--- BOLT; BRKT					
	0-28151-025-0		1103-		03	A M10X25 FLANGE
197	--- BRACKET; CENTER BRAKE CABLE					
	8-98170-963-1		1103-		01	A
198	--- BOLT; KNURL					
	8-98014-003-0		1103-		04	A M14X43


https://truckmanualshub.com/

3-10 BRAKE PEDAL AND CONTROL

FIG-NO. | FIXING

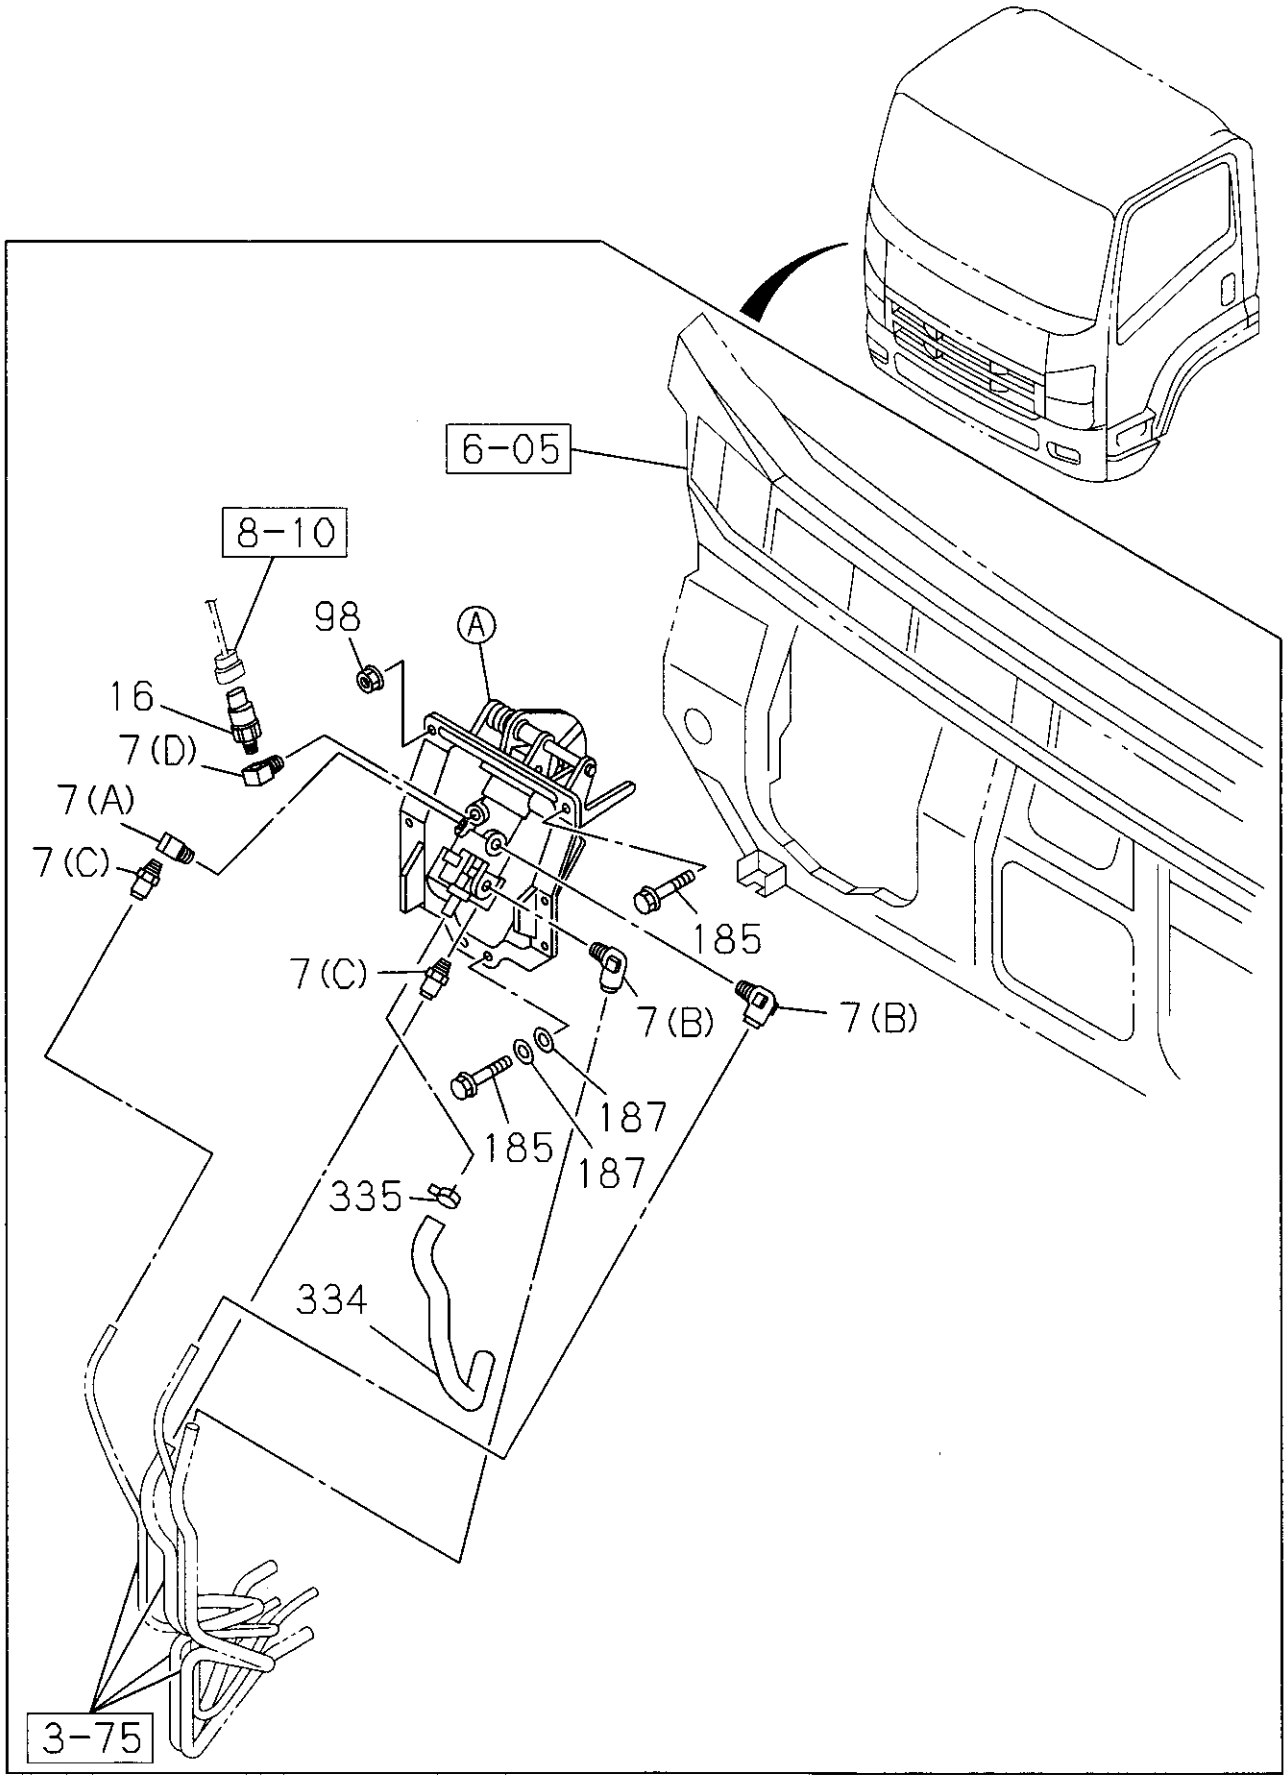

https://truckmanualshub.com/

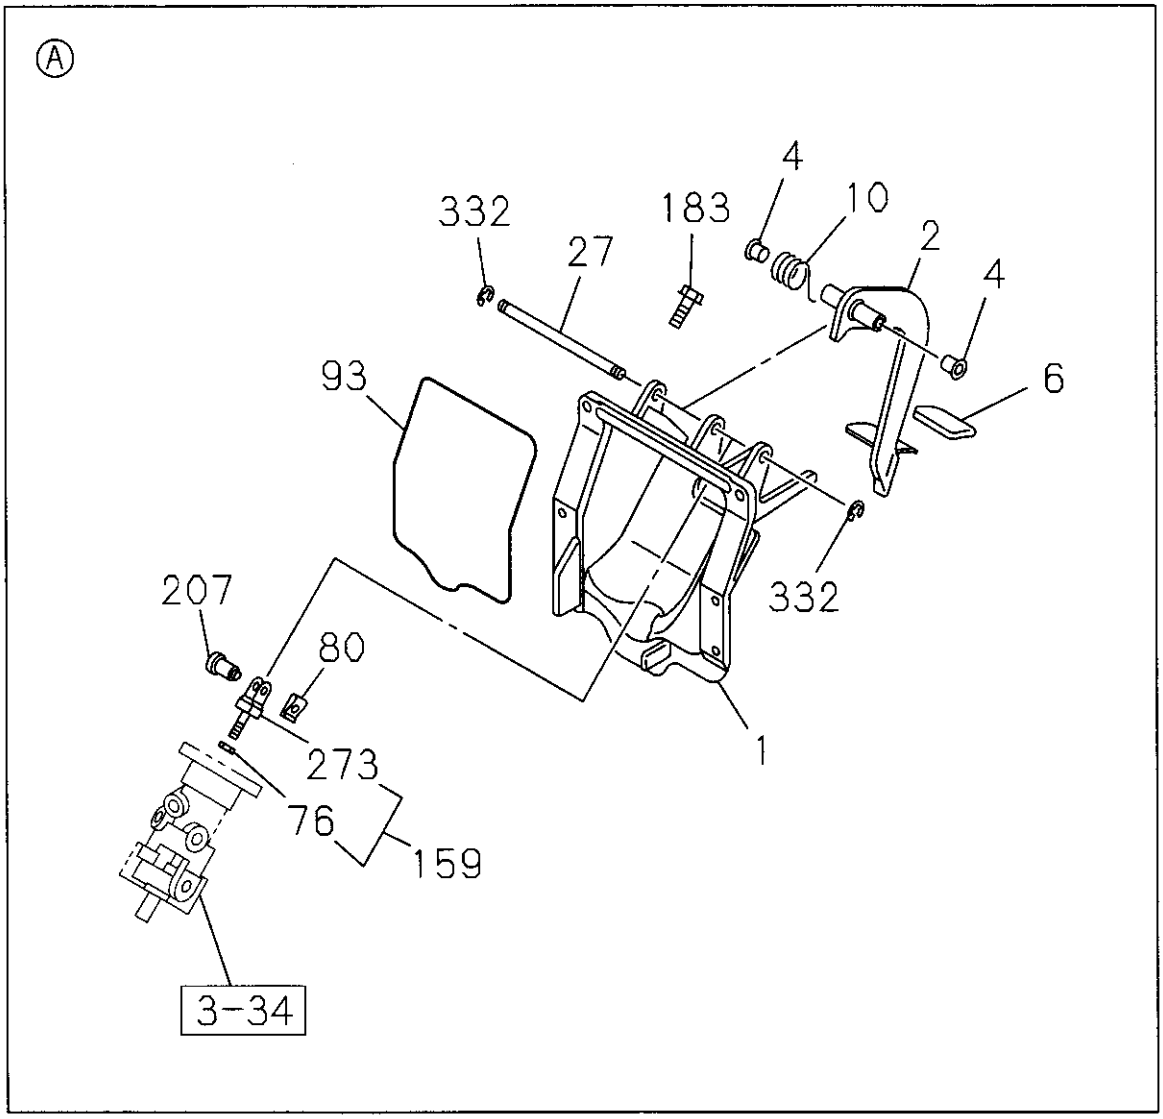

https://truckmanualshub.com/

3-10 BRAKE PEDAL AND CONTROL

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- BRACKET ASM; PEDAL	8-98071-972-0		1103-		01	A
2	--- PEDAL; BRK	8-98057-226-0		1103-		01	A
4	--- BUSHING; BRK PEDAL	8-94238-596-0		1103-		02	A
6	--- COVER; BRK PEDAL	8-98056-865-0		1103-		01	A
7	--- CONNECTOR; BRK VALVE	1-09660-693-0		1103-		01	A (D) PT1/4 2WAY
		1-09660-696-0		1103-		01	A (A) PT3/8 ELBOW
		1-09660-959-0		1103-		02	A (B) DIN12 & R3/8 ELBOW
		1-09660-965-0		1103-		02	A (C) DIN12 & R3/8 STRAIGHT
10	--- SPRING; RETURN, BRK PEDAL	8-98057-232-1		1103-		01	A
16	--- SWITCH; STOP LAMP	8-98010-857-0		1103-		01	A
27	--- SHAFT; BRK PEDAL	8-98057-231-0		1103-		01	A
76	--- NUT; PUSH ROD	0-91180-108-0		1103-		01	A M8 FLANGE
80	--- PIN; SNAP, BRK PEDAL	8-98007-161-0		1103-		01	A
93	--- SEAL; BRK PEDAL	1-48199-534-0		1103-		01	A

https://truckmanualshub.com/

3-10 BRAKE PEDAL AND CONTROL

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- BRACKET ASM; PEDAL						
		8-98071-972-0		1103-		01	A
2	--- PEDAL; BRK						
		8-98057-226-0		1103-		01	A
4	--- BUSHING; BRK PEDAL						
		8-94238-596-0		1103-		02	A
6	--- COVER; BRK PEDAL						
		8-98056-865-0		1103-		01	A
7	--- CONNECTOR; BRK VALVE						
		1-09660-693-0		1103-		01	A (D) PT1/4 2WAY
		1-09660-696-0		1103-		01	A (A) PT3/8 ELBOW
		1-09660-959-0		1103-		02	A (B) DIN12 & R3/8 ELBOW
		1-09660-965-0		1103-		02	A (C) DIN12 & R3/8 STRAIGHT
10	--- SPRING; RETURN, BRK PEDAL						
		8-98057-232-1		1103-		01	A
16	--- SWITCH; STOP LAMP						
		8-98010-857-0		1103-		01	A
27	--- SHAFT; BRK PEDAL						
		8-98057-231-0		1103-		01	A
76	--- NUT; PUSH ROD						
		0-91180-108-0		1103-		01	A M8 FLANGE
80	--- PIN; SNAP, BRK PEDAL						
		8-98007-161-0		1103-		01	A
93	--- SEAL; BRK PEDAL						
		1-48199-534-0		1103-		01	A

https://truckmanualshub.com/

BRAKE PEDAL AND CONTROL

3-10


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
98	--- NUT; BRKT					
	0-91180-208-0		1103-		01	A M8 FLANGE
159	--- ROD ASM; PUSH, BRK					
	8-98057-234-0		1103-		01	A
183	--- BOLT; BRK VLV					
	0-28660-830-0		1103-		04	A M8X30 FLANGE
185	--- BOLT; BRKT					
	8-98057-109-0		1103-		07	A M8X25 FLANGE
187	--- WASHER; PL, BRKT					
	0-91614-808-0		1103-		04	A ID=8.4 OD=26
207	--- PIN; JOINT, BRK PEDAL LINK					
	8-98147-657-0		1103-		01	A
273	--- ROD; PULL					
	8-98057-233-0		1103-		01	A
332	--- RING; SNAP					
	0-91805-512-0		1103-		02	A ID=12
334	--- HOSE; AIR, BRK					
	8-97611-145-3		1103-		01	A
335	--- CLAMP; HOSE					
	8-98025-921-0		1103-		01	A ID=24


https://truckmanualshub.com/

3-11 PARKING BRAKE CONTROL

FIG-NO. NO. 1

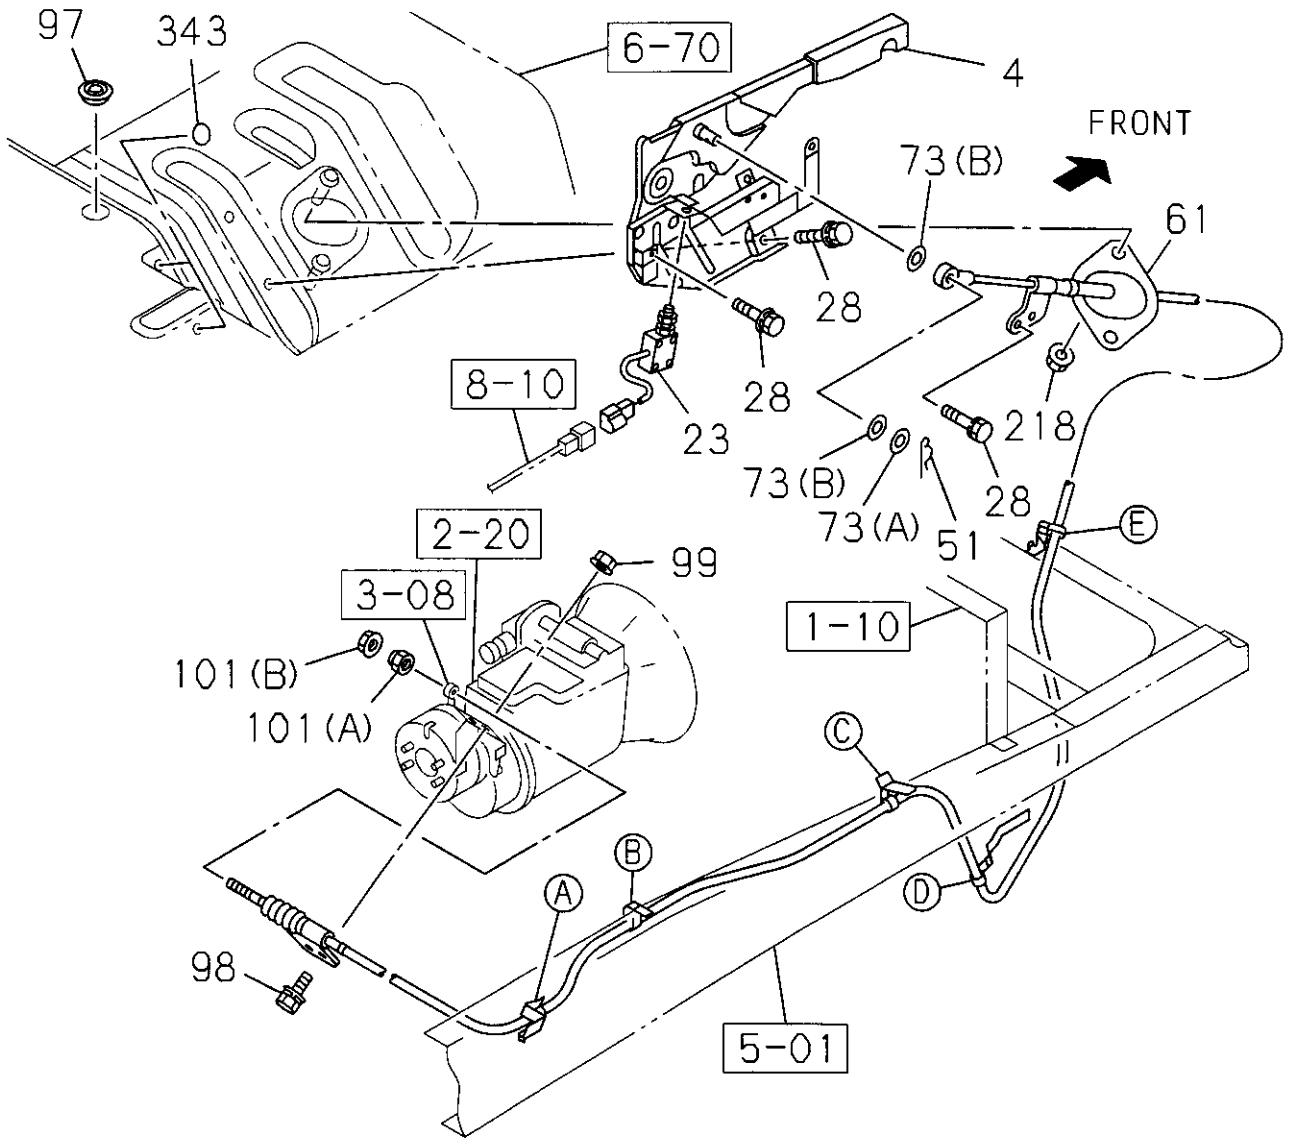


https://truckmanualshub.com/

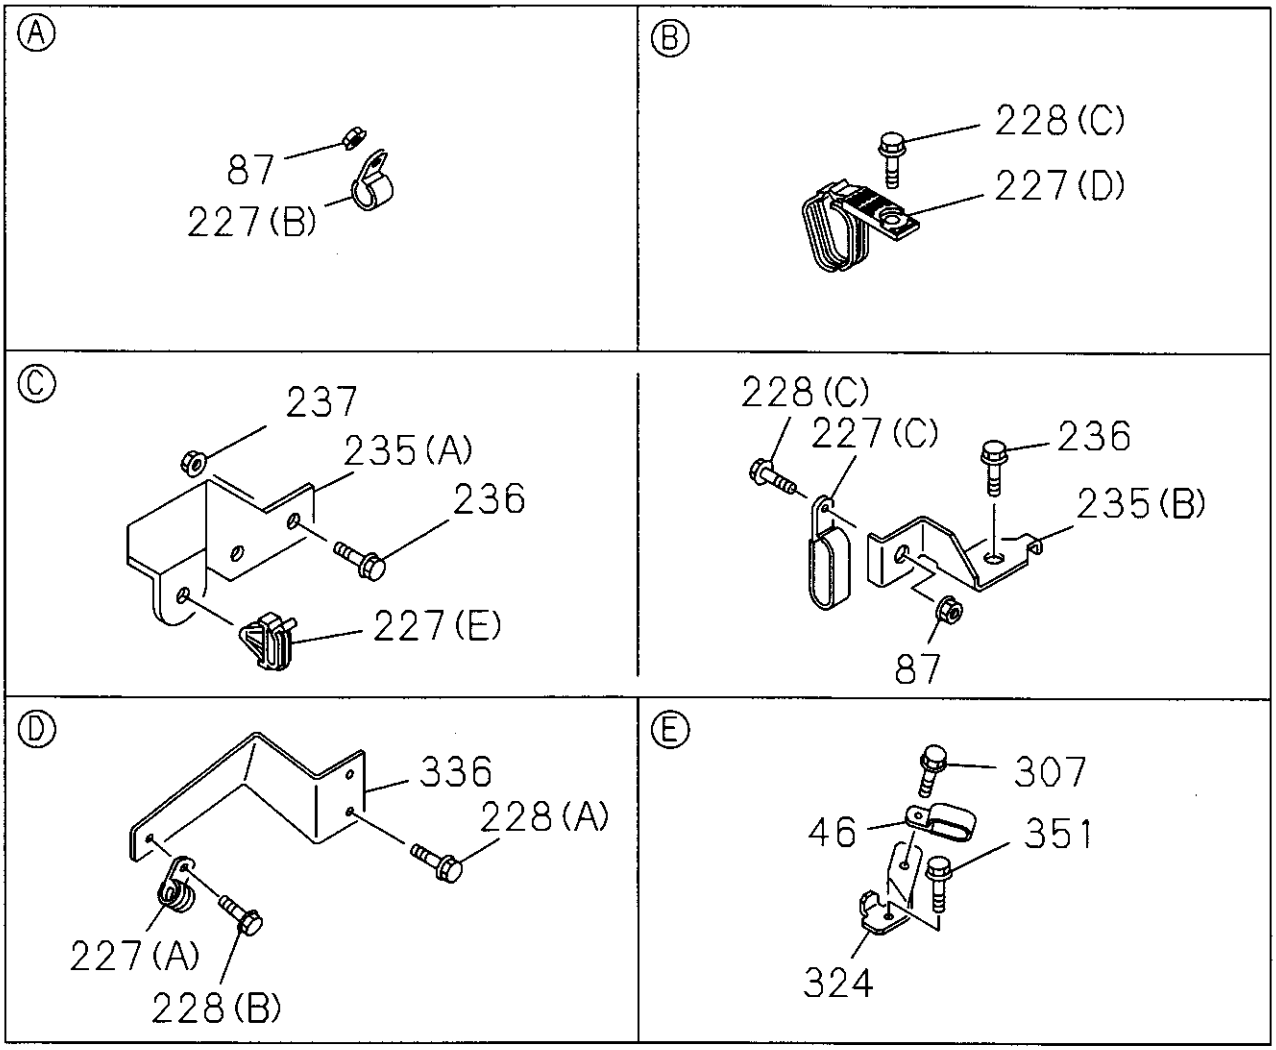


https://truckmanualshub.com/


Ⓐ

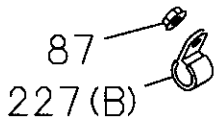


Ⓑ

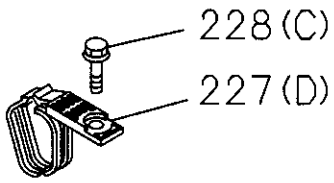


Ⓒ

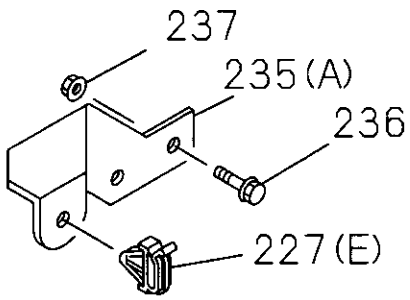


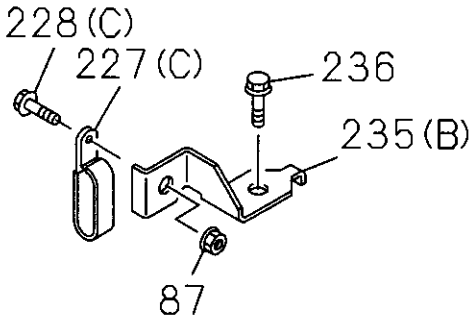

Ⓓ

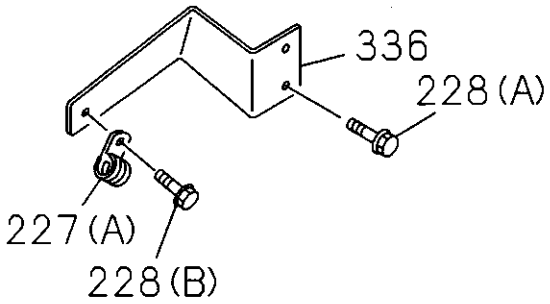

Ⓔ

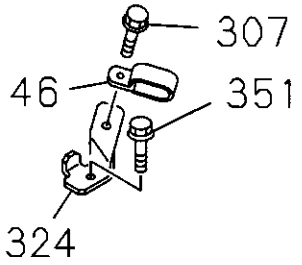

https://truckmanualshub.com/

3-11 PARKING BRAKE CONTROL

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
	RECOMMEND CLASS / PART NAME					A LEAF SUS(FCR5CS)
4	--- STEM; PARKING BRK					
	1-79996-548-0		1103-		01	A
23	--- SWITCH; PARKING BRK					
	1-82440-100-0		1103-		01	A
28	--- BOLT; HAND BRK LEVER					
	8-98059-720-0		1103-		03	A M8X24.5 W/LK&PL WASHER
46	--- CLIP; FRT CABLE TO FLOOR					
	0-95235-535-0		1103-		01	A ID=16 L=20
51	--- PIN; JOINT, RELAY LEVER					
	1-09987-243-1		1103-		01	A
61	--- CABLE; PARKING BRK					
	8-98171-946-1		1103-		01	A L=4253
73	--- WASHER; PL, CABLE					
	0-91610-516-0		1103-		01	A (A) ID=17 OD=30
	8-94206-429-1		1103-		02	A (B) ID=19
87	--- NUT					
	0-91180-108-0		1103-		02	A M8 FLANGE
97	--- GROMMET; PARKING BRK CABLE					
	8-94122-971-0		1103-		01	A OD=35 IDN
98	--- BOLT; RR COVER					
	0-28651-030-0		1103-		01	A M10X30 FLANGE
99	--- NUT; CONT CABLE					
	0-91180-210-0		1103-		02	A M10 FLANGE

https://truckmanualshub.com/

PARKING BRAKE CONTROL

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
101	--- NUT; CABLE TO LEVER					
	0-91180-108-0		1103-		01	A (B) M8 FLANGE
	1-46259-007-0		1103-		01	A (A)
218	--- NUT; BRKT, PARKING BRK CABLE					
	0-91180-108-0		1103-		02	A M8 FLANGE
227	--- CLIP; RAD					
	0-95235-535-0		1103-		01	A (B) ID=16 L=20
	1-09701-236-0		1103-		01	A (A) ID=26 L=26
	5-09709-020-0		1103-		01	A (E) ID=9.5
	8-97389-264-0		1103-		01	A (C)
	8-98023-991-0		1103-		01	A (D)
228	--- BOLT; CLIP RAD MTG					
	0-28050-816-0		1103-		01	A (B) M8X16 FLANGE
	0-28650-825-0		1103-		02	A (C) M8X25 FLANGE IDN
	1-09980-498-0		1103-		02	A (A) M8X16 W/LK&PL WASHER
235	--- BRACKET; CONT CABLE TO FRAME					
	8-98100-152-0		1103-		01	A (A)
	8-98126-426-0		1103-		01	A (B)

https://truckmanualshub.com/

3-11 PARKING BRAKE CONTROL


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
236	--- BOLT; BRKT TO FRAME						
		0-28650-825-0		1103-		03	A M8X25 FLANGE IDN
237	--- NUT; BRKT TO FRAME						
		0-91180-108-0		1103-		02	A M8 FLANGE
307	--- BOLT; BRKT, PARKING BRK CABLE						
		0-51640-825-0		1103-		01	A
324	--- BRACKET						
		8-98067-482-1		1103-		01	A
336	--- BRACKET; RADIATOR						
		8-98065-276-0		1103-		01	A
343	--- SEAL						
		1-76798-019-0		1103-		05	A OD=25 BLACK
351	--- BOLT; CLIP						
		0-51640-825-0		1103-		03	A

https://truckmanualshub.com/

3-20 AIR TANK


FIG-NO. FIXING

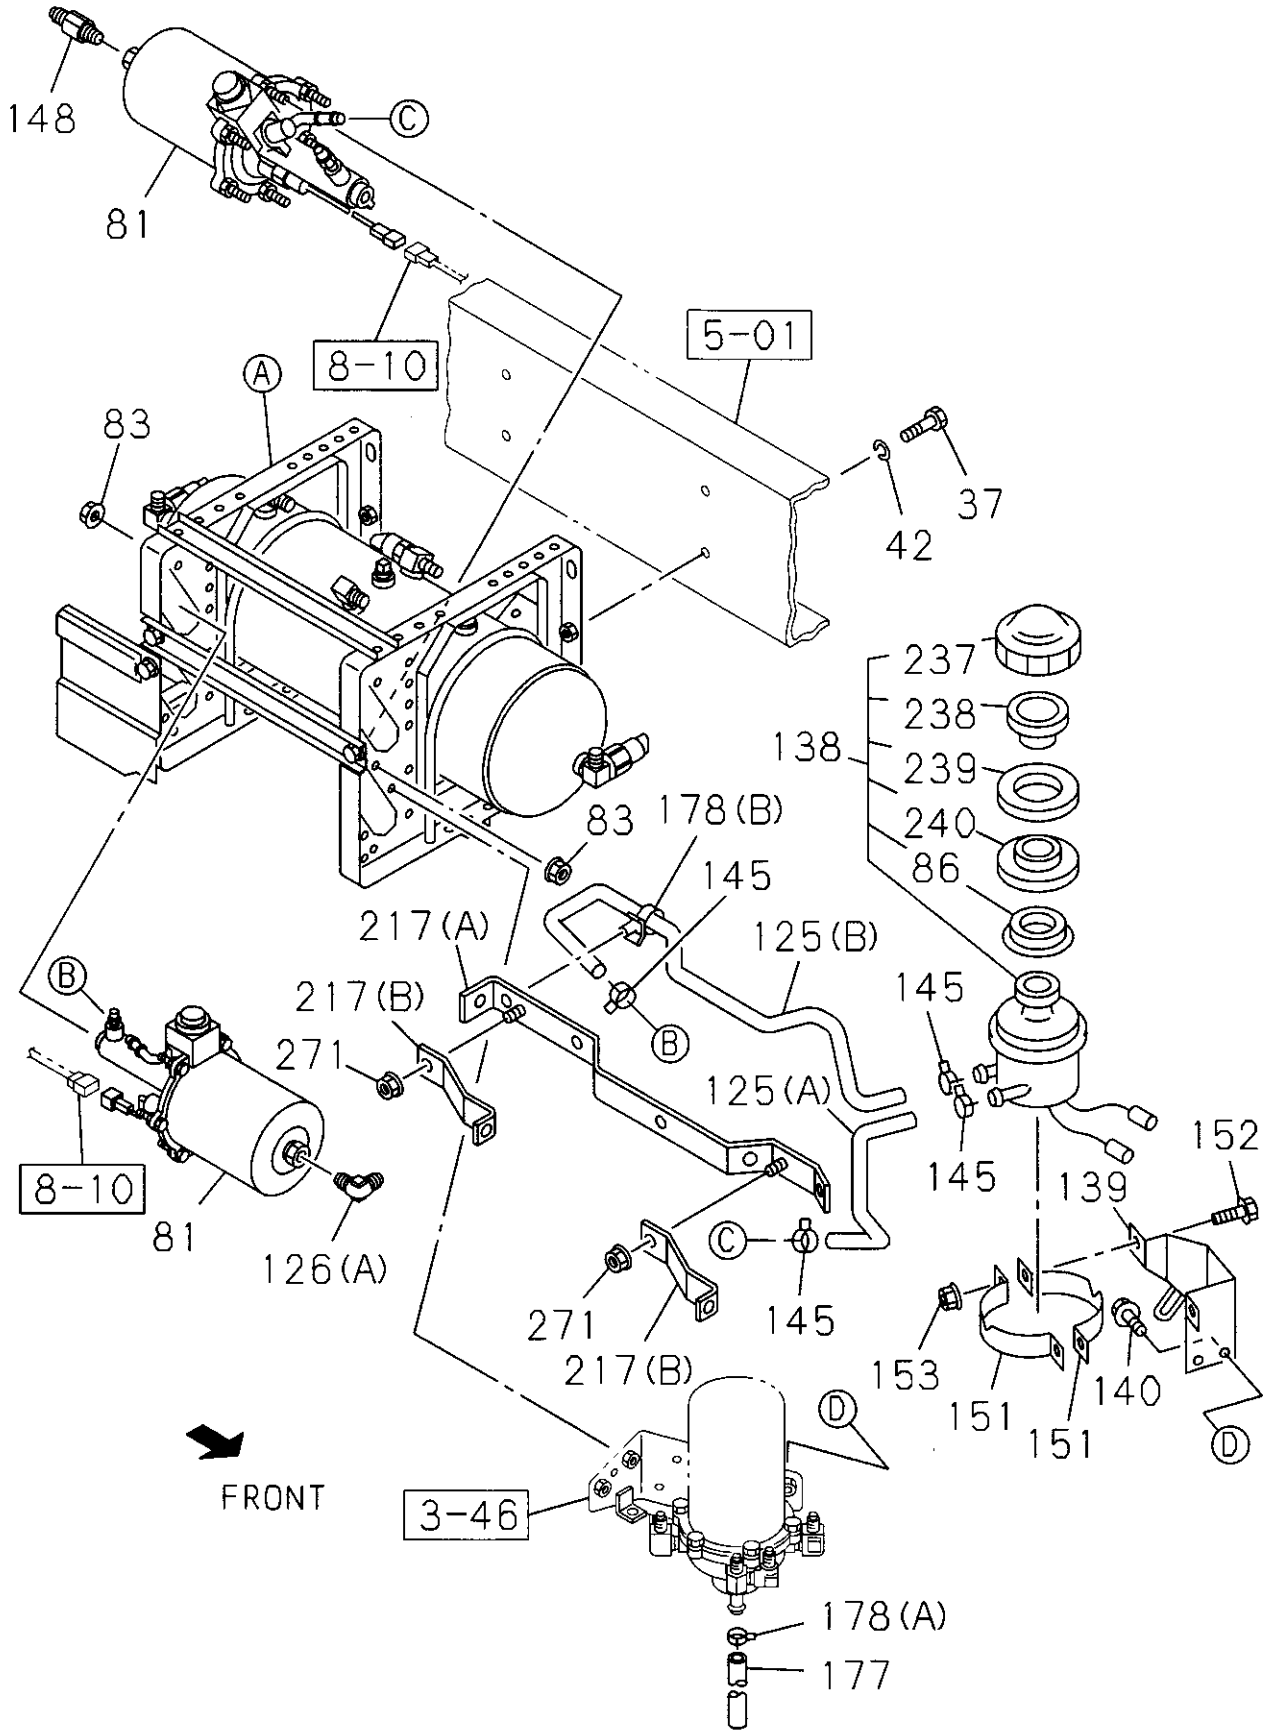

https://truckmanualshub.com/

AIR TANK

COMPONENT

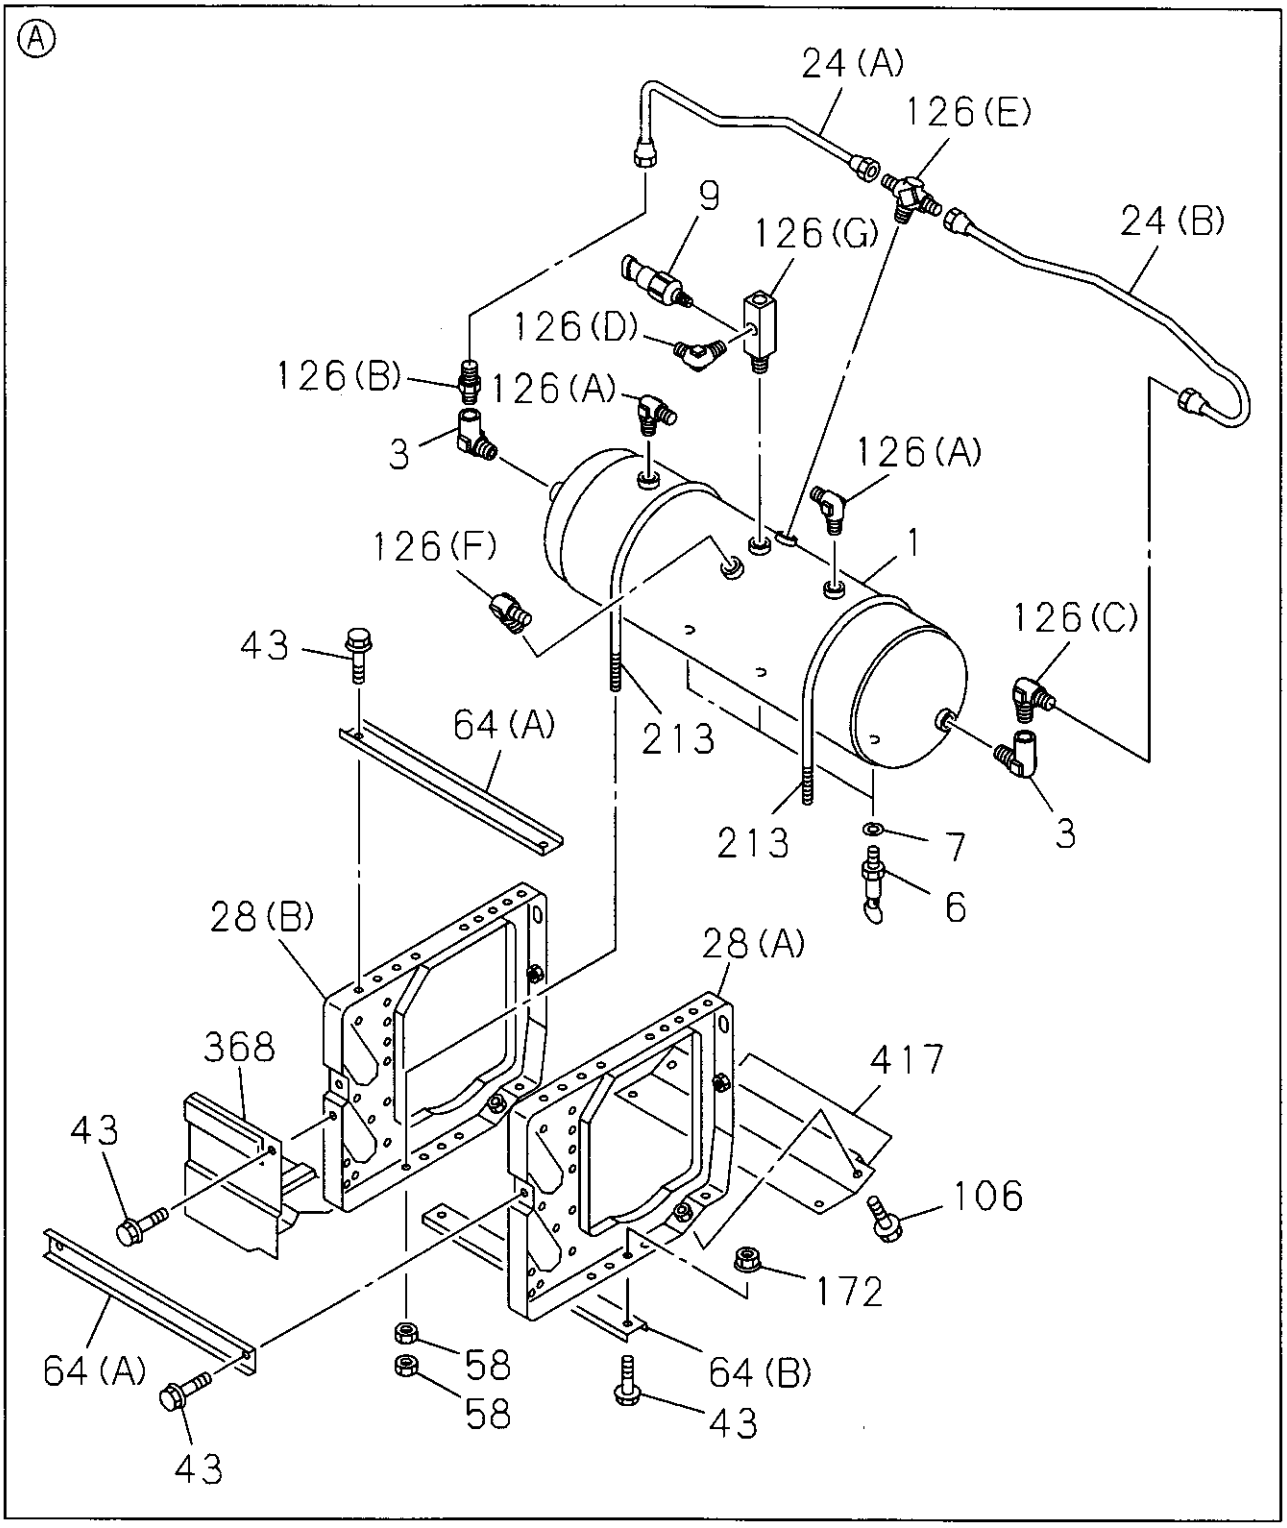

https://truckmanualshub.com/

3-20 AIR TANK

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- TANK ASM; AIR	8-98018-785-3		1103-		01	A
3	--- VALVE; CHECK, AIR TANK	1-48320-031-1		1103-		02	A
6	--- COCK; DRAIN, AIR TANK	1-48312-015-0		1103-		03	A
7	--- GASKET; DRAIN COCK	1-09630-145-0		1103-		03	A ID=14
9	--- SWITCH; LOW PRESSURE GAGE, AIR TANK	8-97609-249-0		1103-		01	A
24	--- PIPE ASM; AIR TANK	8-98178-465-0		1103-		01	A (A)
		8-98178-466-0		1103-		01	A (B)
28	--- BRACKET; AIR TANK	8-98021-918-4		1103-		01	A (A)
		8-98044-509-4		1103-		01	A (B)
37	--- BOLT; AIR TANK	0-28651-240-0		1103-		04	A M12X40 FLANGE
42	--- WASHER; PL	0-91614-712-0		1103-		04	A ID=12.5 OD=32
43	--- BOLT; STAY, AIR TANK, MAIN	0-28050-816-0		1103-		10	A M8X16 FLANGE
58	--- NUT; BAND, AIR TANK	0-91110-508-0		1103-		08	A M8 IDN

https://truckmanualshub.com/

AIR TANK

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
64	--- STAY; AIR TANK, MAIN					
	8-98044-510-3		1103-		02	A (A)
	8-98044-511-2		1103-		01	A (B)
81	-D- AIR MASTER ASM; BRK					SEE FIG-NO 3-33 FOR COMPONENT.
	1-47800-826-0		1103-		02	A
83	--- NUT; AIR MASTER					
	0-91180-108-0		1103-		09	A M8 FLANGE
86	--- SEAL; DUST					
	1-47529-019-0		1103-		01	A
106	--- BOLT; COVER					
	0-28050-816-0		1103-		04	A M8X16 FLANGE
125	--- HOSE; OIL TANK TO AIR MASTER					
	8-98051-217-0		1103-		01	A (A)
	8-98051-218-0		1103-		01	A (B)
126	--- CONNECTOR; ELBOW					
	0-92121-812-0		1103-		01	A (B) M20
	0-92134-312-0		1103-		01	A (C) M20 & PT3/8 ELBOW
	1-09650-430-0		1103-		01	A (D) M12 & PT1/4 ELBOW
	1-09650-438-0		1103-		03	A (A) M16 & PT3/8 ELBOW
	1-09656-340-1		1103-		01	A (E) M20X2 & PT3/8 3WAY
	8-98067-083-1		1103-		01	A (F) M20 & PT3/4 ELBOW
	8-98148-518-0		1103-		01	A (G)

https://truckmanualshub.com/

3-20 AIR TANK

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
138	--- TANK ASM; OIL, AIR MASTER					
	1-47530-185-1		1103-		01	A
139	--- BRACKET; OIL TANK					
	8-98051-105-0		1103-		01	A
140	--- BOLT; OIL TANK TO BRKT					
	0-28650-820-0		1103-		02	A M8X20 FLANGE IDN
145	--- CLIP; OIL TANK TO AIR MASTER HOSE					
	1-09704-102-0		1103-		04	A ID=14
148	--- CONNECTOR; AIR MASTER					
	1-09650-179-1		1103-		01	A M16 & PT3/8 STRAIGHT
151	--- BAND; OIL TANK, AIR MASTER					
	1-47537-056-2		1103-		02	A
152	--- BOLT; OIL TANK TO BAND					
	0-28650-820-0		1103-		02	A M8X20 FLANGE IDN
153	--- NUT; OIL TANK TO BAND					
	0-91180-108-0		1103-		02	A M8 FLANGE
172	--- NUT; STAY, AIR TANK, MAIN					
	0-91180-108-0		1103-		02	A M8 FLANGE
177	--- HOSE; RUBBER, DRAIN					
	0-03566-300-0		1103-		01	A L=60 SERVICED BY L=3000
178	--- CLIP; HOSE					
	1-09709-290-0		1103-		08	A (B) ID=13-18 L=14.5
	8-94242-034-0		1103-		01	A (A) ID=21

https://truckmanualshub.com/


AIR TANK

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
213	--- BOLT; U AIR TANK					
	8-98022-041-0		1103-		02	A
217	--- BRACKET; RUBBER HOSE					
	8-98082-871-0		1103-		01	A (A)
	8-98085-273-1		1103-		02	A (B)
237	--- CAP; OIL TANK					
	1-47525-030-0		1103-		01	A
238	--- PLATE; BAFFLE					
	1-47529-022-0		1103-		01	A
239	--- FILTER; DUST					
	1-47529-017-0		1103-		01	A
240	--- HOLDER; FILTER					
	1-47529-018-0		1103-		01	A
271	--- NUT; BRKT, HOSE					
	0-91180-108-0		1103-		02	A M8 FLANGE
368	--- COVER; AIR TANK					
	8-98061-625-3		1103-		01	A
417	--- COVER; HARNESS					
	8-98111-401-0		1103-		01	A

https://truckmanualshub.com/

3-22 AIR CONTROL PARTS

FIG-NO.

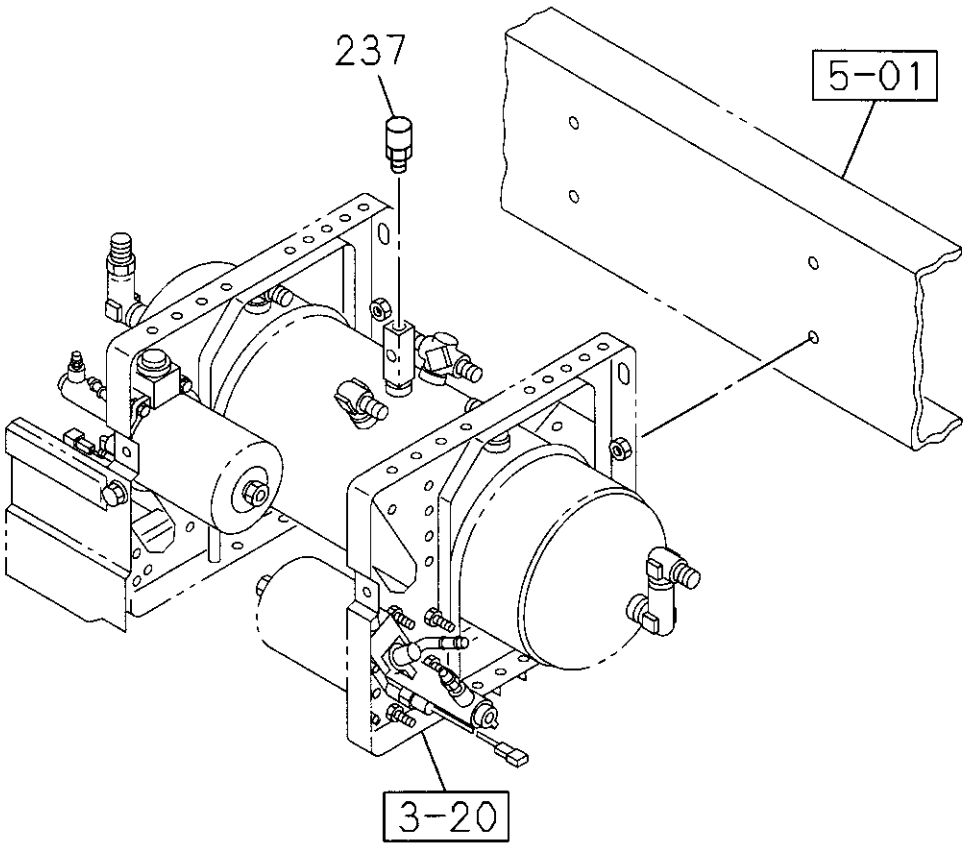

https://truckmanualshub.com/


AIR CONTROL PARTS

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
237	--- VALVE; SAFETY					
	1-48320-012-2		1103-		01	A


https://truckmanualshub.com/

3-33 AIR MASTER

FIG-NO. COMPONENT

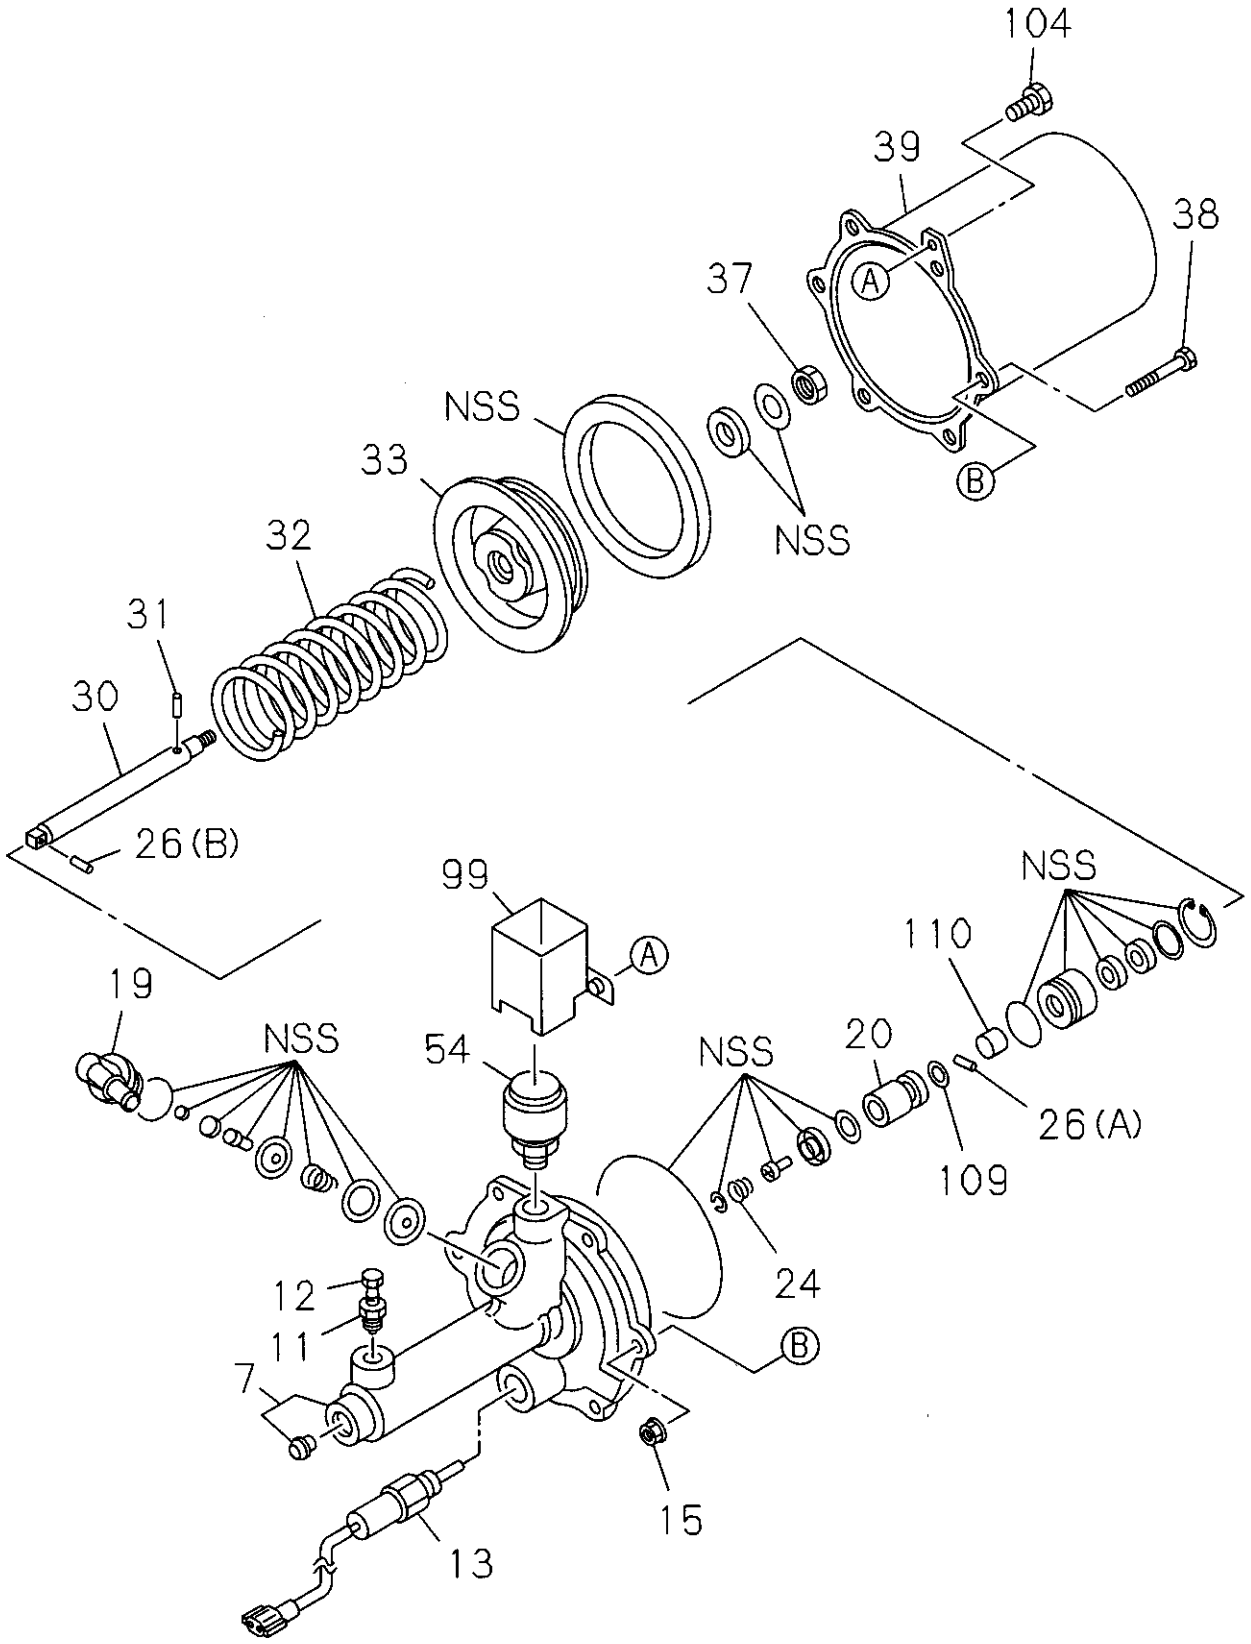

https://truckmanualshub.com/

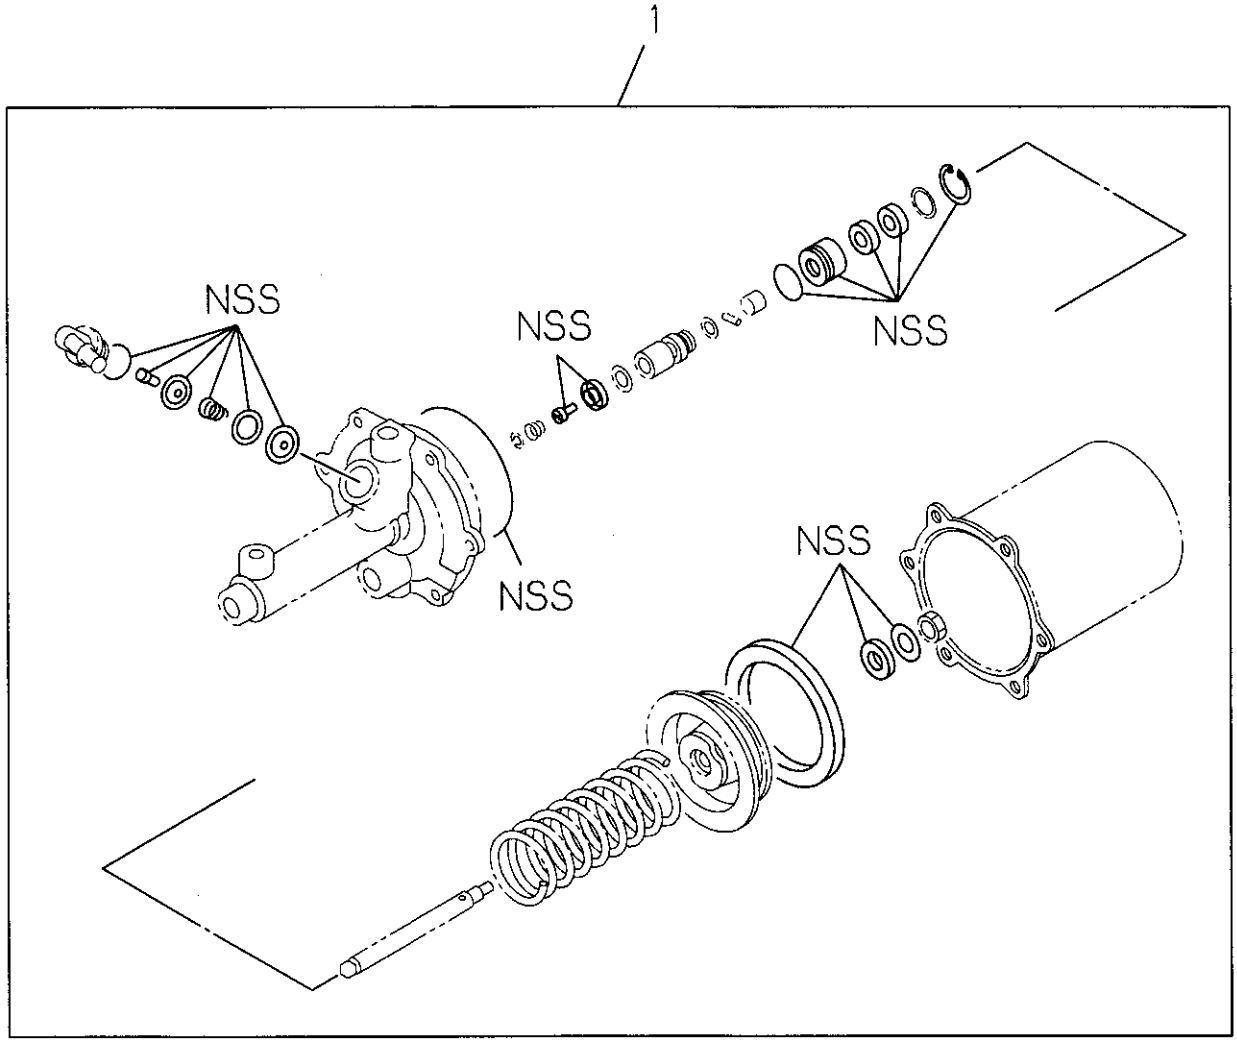

https://truckmanualshub.com/

3-33 AIR MASTER

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	14780082600
1	-B- REPAIR KIT; AIR MASTER	
	1-85576-480-0	01 2 YEAR
7	--- PLATE; END, AIR MASTER	
	1-47841-095-0	01
11	--- PLUG; CAP, AIR MASTER	
	1-47819-197-0	01
12	--- PROTECTOR; CAP, AIR MASTER	
	1-47819-198-0	01
13	--- SWITCH; WARNING, AIR MASTER	
	1-47819-196-0	01
15	--- NUT; END PLATE TO SHELL, AIR MASTER	
	1-47819-200-0	06
19	--- CONNECTOR; END PLATE, AIR MASTER	
	1-47819-195-0	01
20	--- PISTON ASM; HYDRAULIC	
	1-47821-053-0	01
24	--- SPRING; HYD PISTON, AIR MASTER	
	1-47824-041-0	01
26	--- PIN; HYD PISTON, AIR MASTER	
	1-47829-101-0	01 (B)
	1-47829-141-0	01 (A)
30	--- ROD; PUSH, AIR MASTER	
	1-47829-102-0	01
31	--- PIN; STRAIGHT	
	1-47829-103-0	01

https://truckmanualshub.com/

AIR MASTER

3-33


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	1478008260
32	--- SPRING; CYL SHELL, AIR MASTER	
	1-47824-035-0	01
33	--- PLATE; PISTON, SHELL, AIR MASTER	
	1-47829-104-0	01
37	--- NUT; PUSH ROD, SHELL, AIR MASTER	
	1-47829-105-0	01 M12
38	--- BOLT; END PLATE TO SHELL, AIR MASTER	
	1-47819-199-0	06
39	--- SHELL; CYL, AIR MASTER	
	1-47811-137-0	01
54	--- COVER; EXH, END PLATE, AIR MASTER	
	1-47819-194-0	01
99	--- BRACKET; AIR MASTER	
	1-47819-202-0	01
104	--- BOLT; BRKT, AIR MASTER	
	1-47819-201-0	01
109	--- CLIP; PIN, AIR MASTER	
	1-47829-098-0	01
110	--- GUIDE; PIN, AIR MASTER	
	1-47829-142-0	01

https://truckmanualshub.com/

3-34 BRAKE VALVE; AIR


FIG-NO. COMPONENT

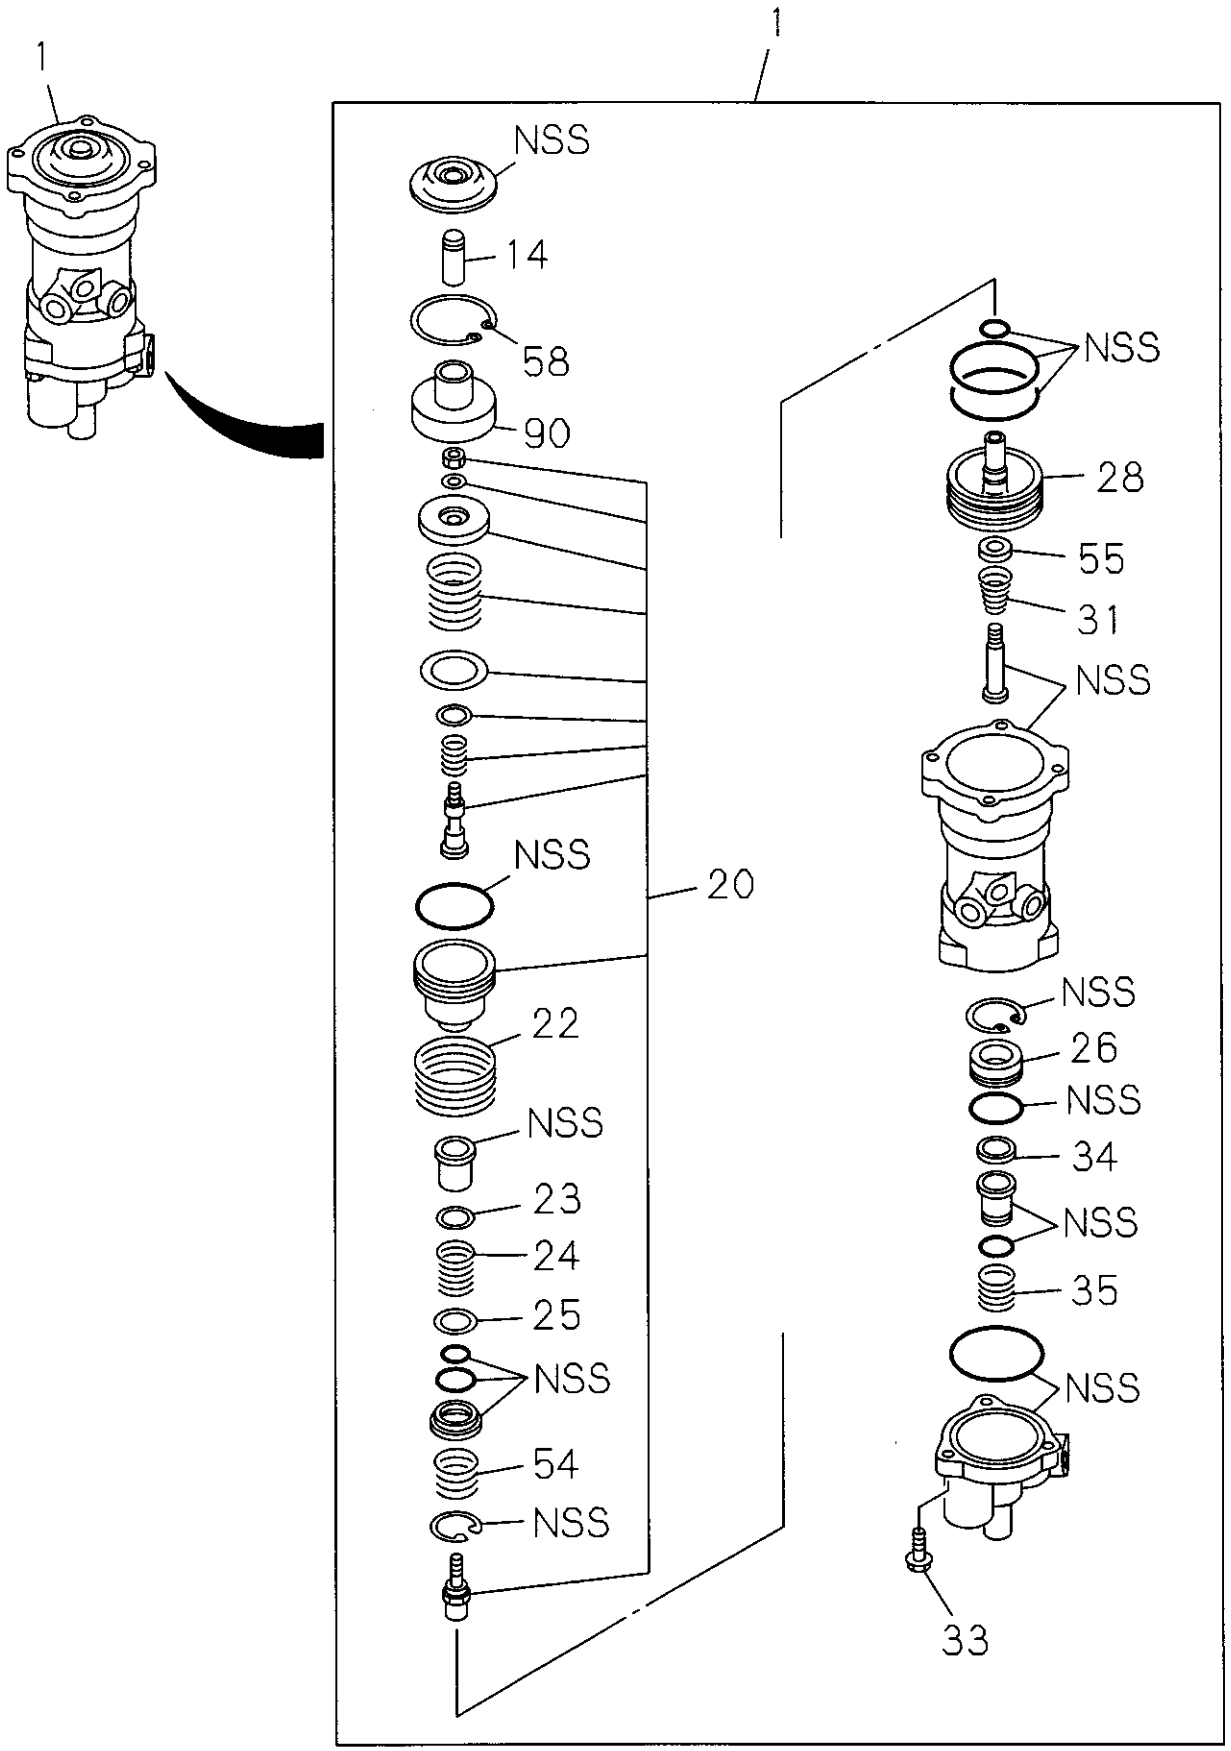

https://truckmanualshub.com/

BRAKE VALVE; AIR

REPAIR KIT

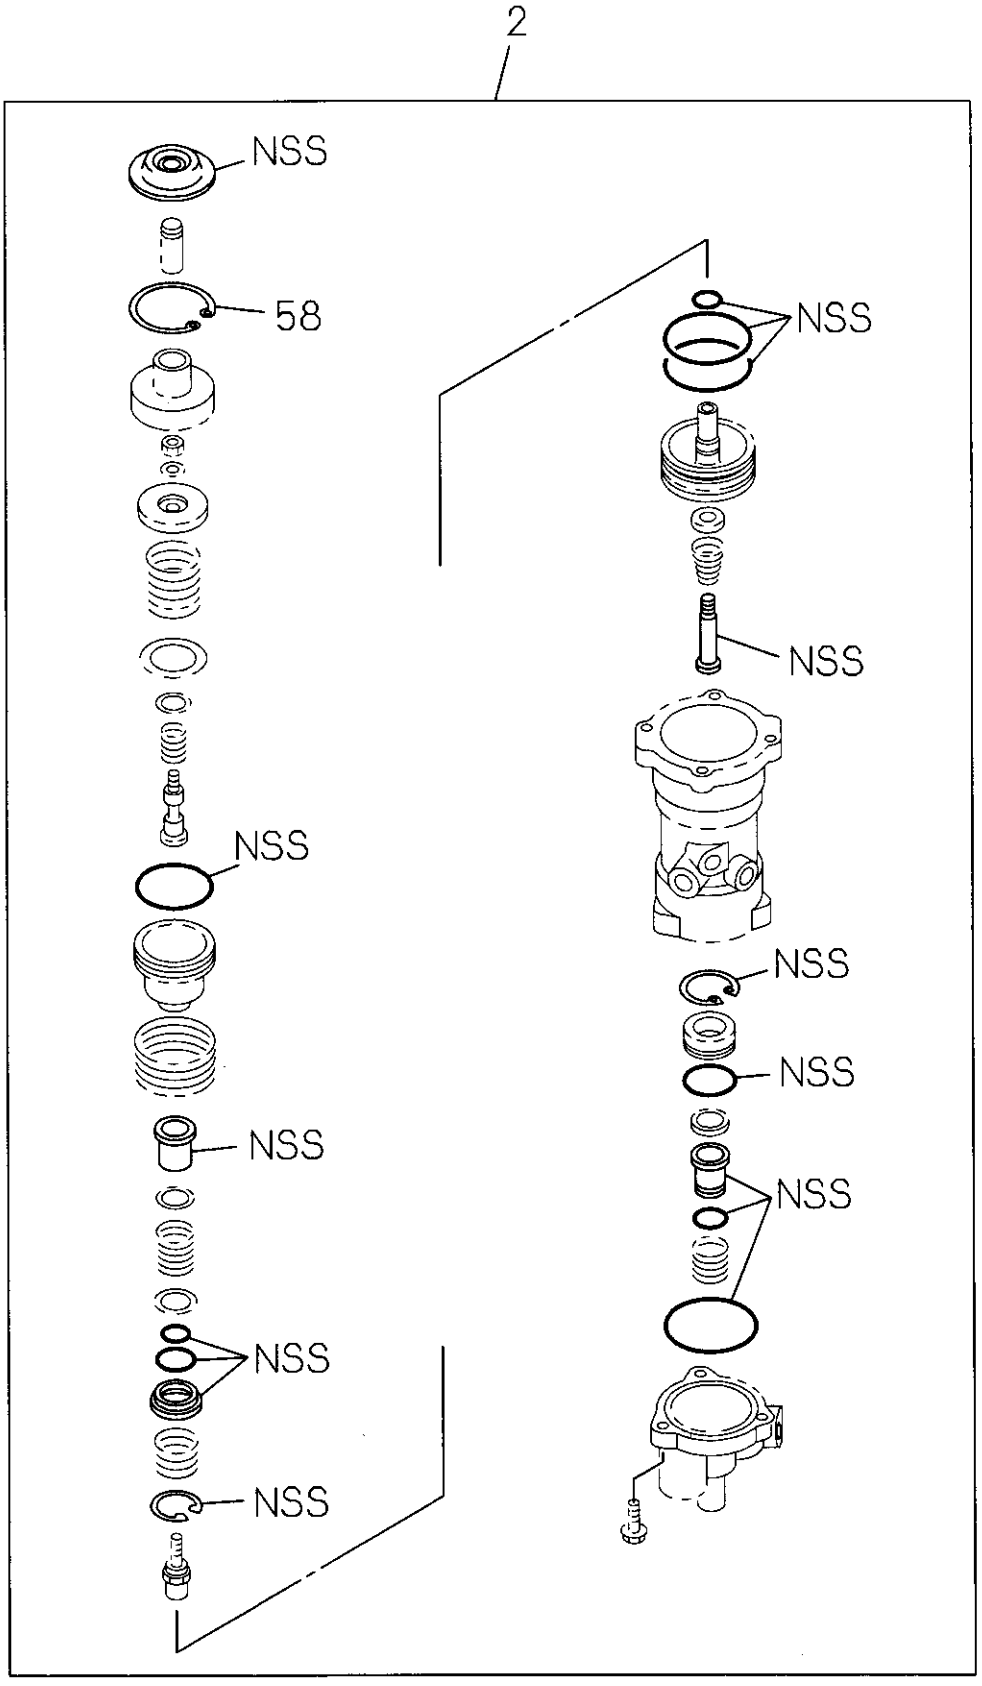

https://truckmanualshub.com/

3-34 BRAKE VALVE; AIR

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	--- VALVE; BRK					
	1-48100-924-0		1103-		01	A
2	-B- REPAIR KIT; BRK VLV					
	1-85576-454-0		1103-		01	A
14	--- PLUNGER; BRK VLV					
	1-48119-641-0		1103-		01	A
20	--- PISTON; UPR, BRK VLV					
	1-48119-644-0		1103-		01	A
22	--- SPRING; PISTON, LWR, BRK VLV					
	1-48123-076-0		1103-		01	A
23	--- WASHER; UPR, BRK VLV					
	1-48129-299-0		1103-		01	A
24	--- SPRING; UPR, BRK VLV					
	1-48123-077-0		1103-		01	A
25	--- WASHER; PISTON, BRK VLV					
	1-48129-300-0		1103-		01	A
26	--- RETAINER; VLV, BRK VLV					
	1-48129-308-0		1103-		01	A
28	--- PISTON; LWR, BRK VLV					
	1-48129-302-0		1103-		01	A
31	--- SPRING; VLV, BRK VLV					
	1-48123-079-0		1103-		01	A
33	--- BOLT; BODY, BRK VLV					
	1-48119-213-0		1103-		03	A
34	--- RETAINER; VLV, BRK VLV					
	1-48129-307-0		1103-		01	A
35	--- SPRING; VLV, BRK VLV					
	1-48123-078-0		1103-		01	A
54	--- SPRING; PISTON, UPR, BRK VLV					
	1-48123-075-0		1103-		01	A

https://truckmanualshub.com/


BRAKE VALVE; AIR


KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
55	--- RETAINER; PLATE, BRK VLV					
	1-48129-305-0		1103-		01	A
58	--- RING; RET, EXH, BRK VLV					
	1-48219-198-0		1103-		01	A
90	--- GUIDE; PLUNGER					
	1-48119-642-0		1103-		01	A

https://truckmanualshub.com/


3-46 AIR DRYER

FIG-NO. FIXING

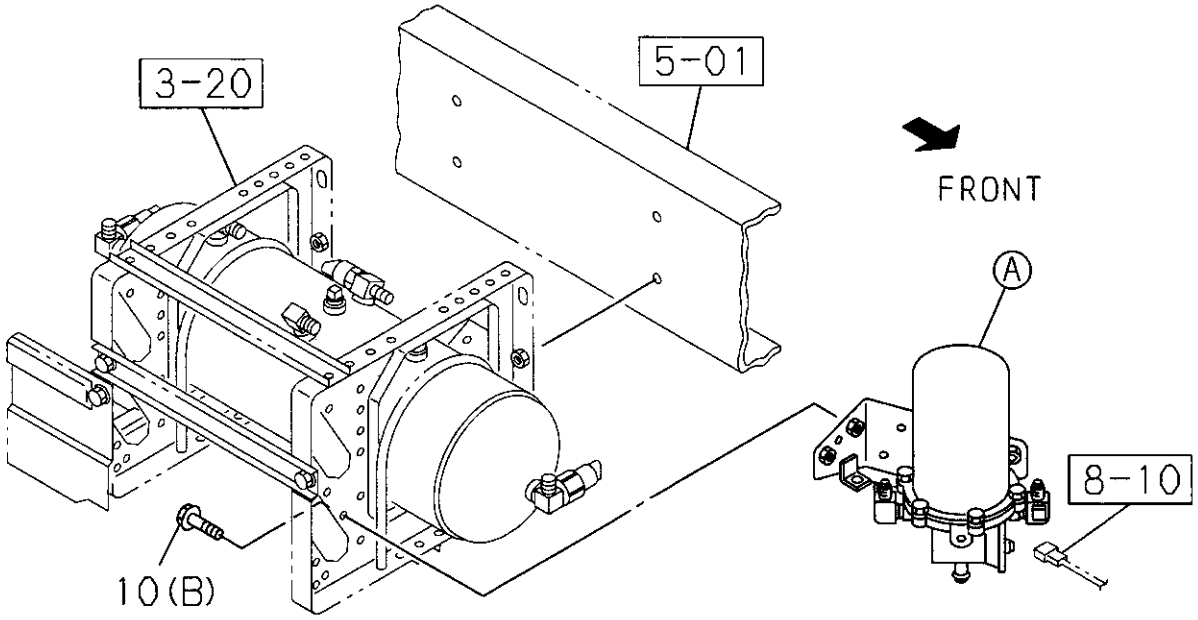

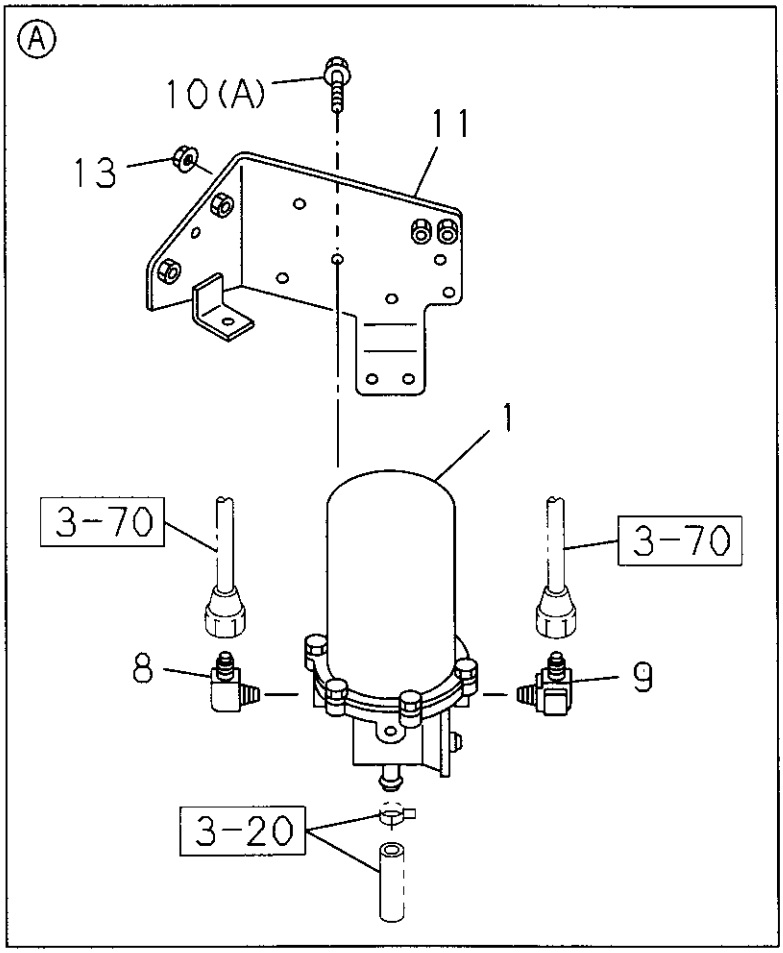


https://truckmanualshub.com/

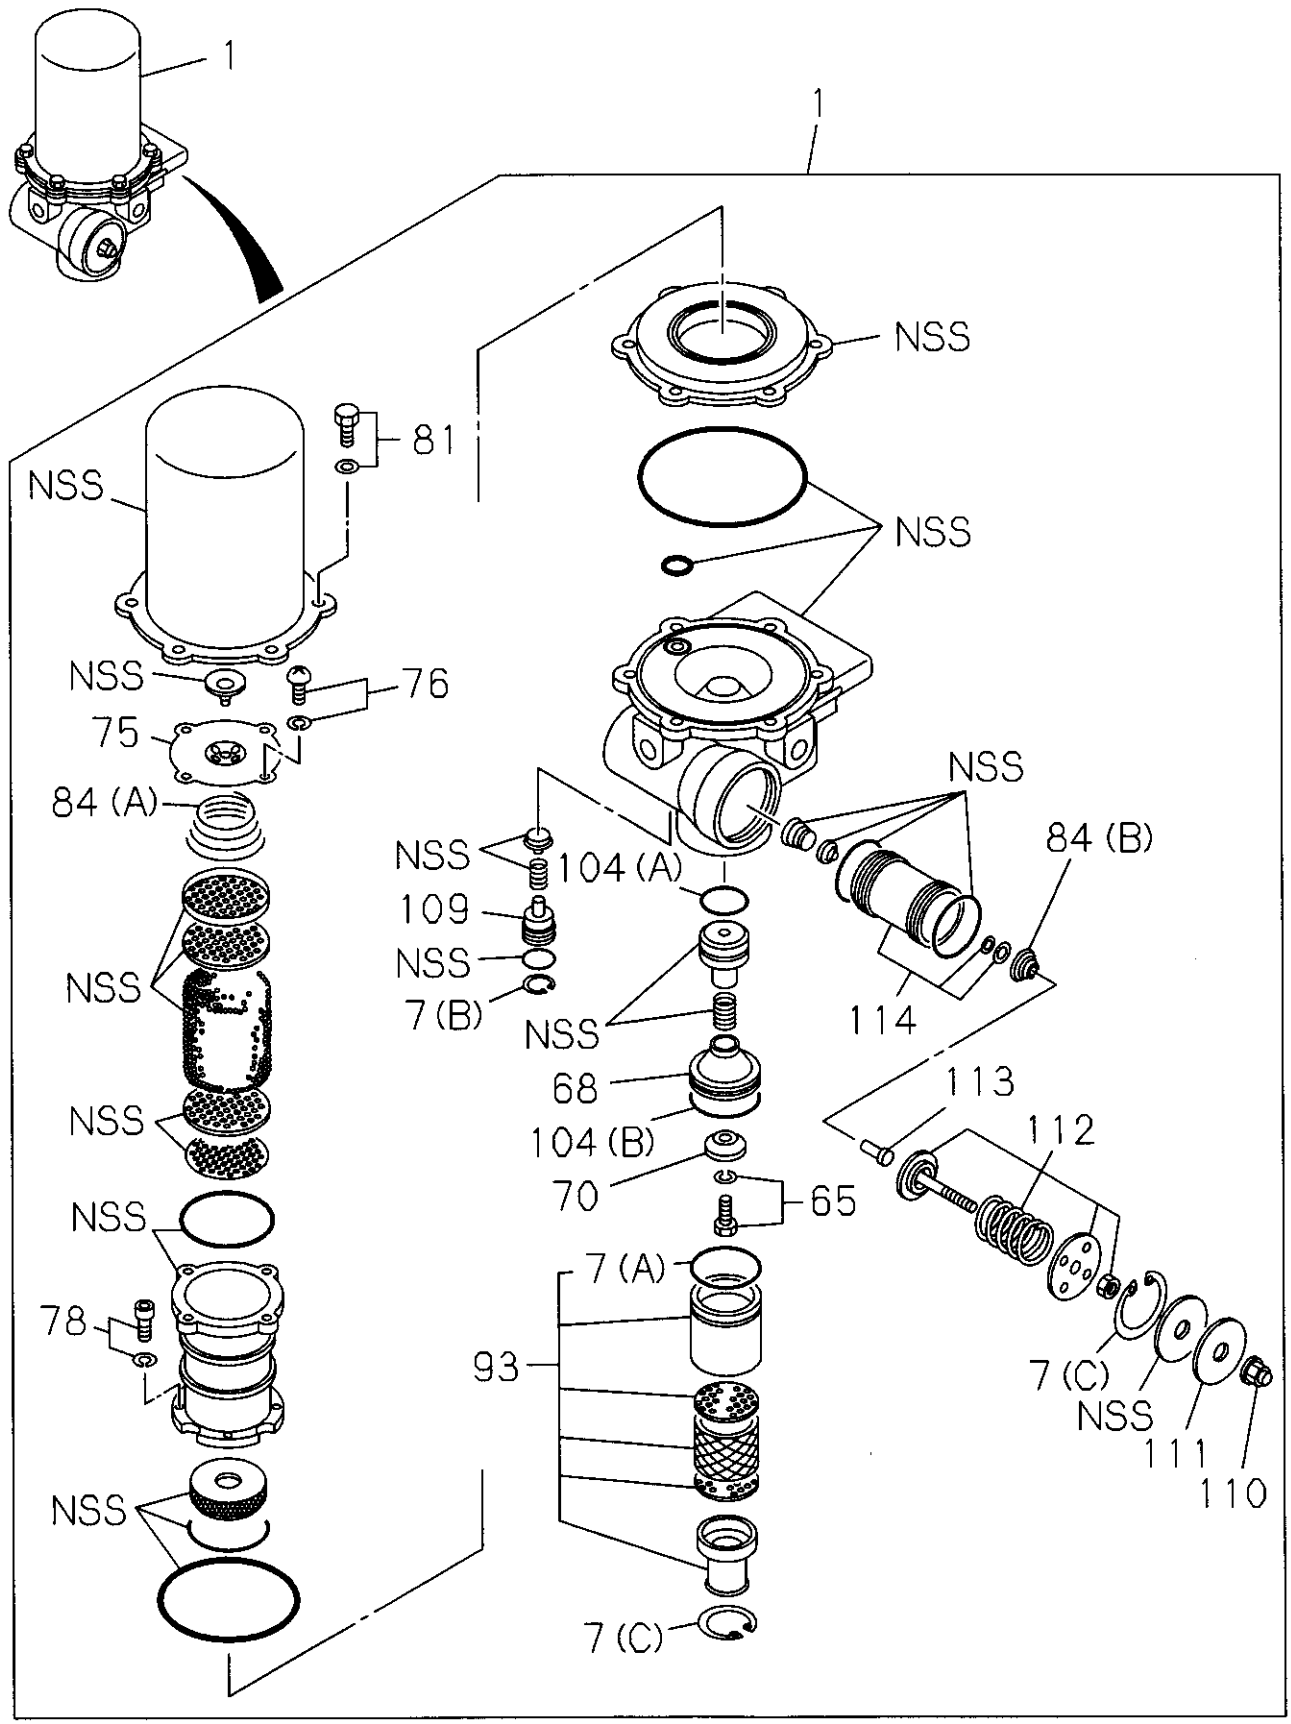

https://truckmanualshub.com/

3-46 AIR DRYER

FIG-NO. PISTON AND REPAIR KIT

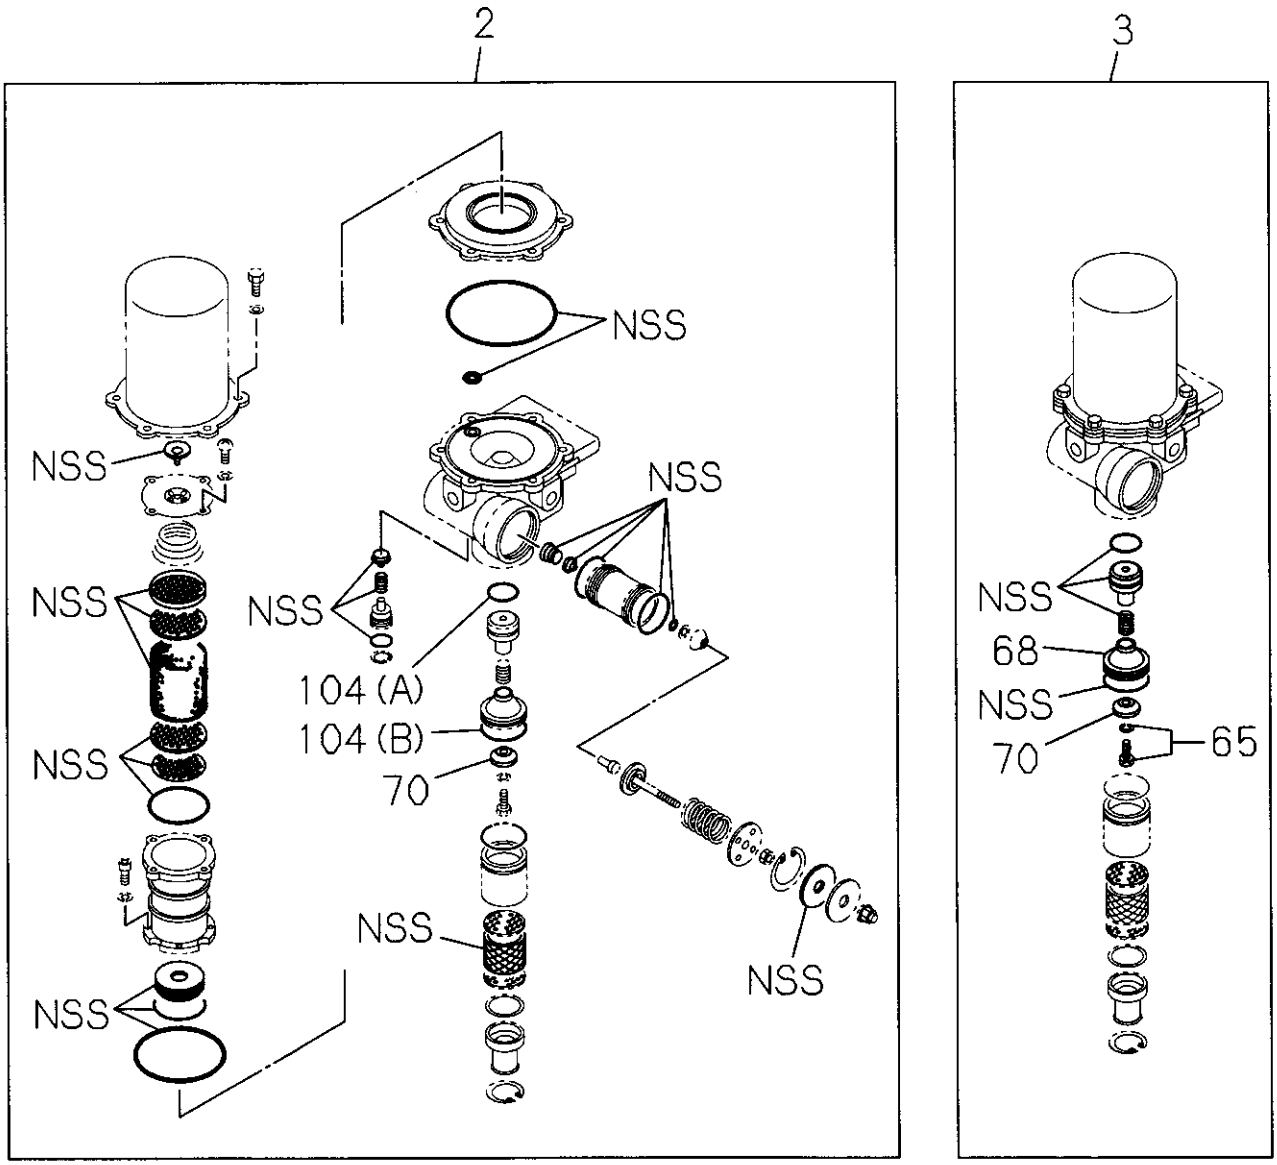

https://truckmanualshub.com/

AIR DRYER

3-46
FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- DRYER; AIR					
	8-98182-323-0		1103-		01	A
2	--- REPAIR KIT; AIR DRYER					
	1-85576-456-0		1103-		01	A
3	--- PISTON KIT; AIR DRYER					
	1-85576-383-0		1103-		01	A
7	--- RING; SNAP, AIR DRYER					
	1-48199-520-0		1103-		02	A (C)
	1-48199-529-0		1103-		01	A (B)
	1-48199-579-0		1103-		01	A (A)
8	--- CONNECTOR; OUT, AIR DRYER					
	1-09650-443-0		1103-		01	A M20 & PT1/2 ELBOW
9	--- CONNECTOR; PIPE, AIR DRYER					
	0-92134-315-0		1103-		01	A M22 & PT1/2 ELBOW
10	--- BOLT; AIR DRYER					
	0-28050-820-0		1103-		02	A (B) M8X20 FLANGE
	0-28051-025-0		1103-		03	A (A) M10X25 FLANGE
11	--- BRACKET; AIR DRYER					
	8-98044-548-4		1103-		01	A
13	--- NUT; AIR DRYER					
	0-91180-108-0		1103-		02	A M8 FLANGE
65	--- BOLT; PURGE VLV					
	1-48199-517-0		1103-		01	A
68	--- BODY; VALVE					
	1-48199-515-0		1103-		01	A

https://truckmanualshub.com/

3-46 AIR DRYER

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
70	--- VALVE; AIR DRYER	1-48199-504-0		1103-		01	A
75	--- COVER; CASE, AIR DRYER	1-48199-395-0		1103-		01	A
76	--- BOLT; COVER, AIR DRYER	1-48199-412-0		1103-		04	A
78	--- BOLT; OIL FILTER, AIR DRYER	1-48199-417-0		1103-		04	A
81	--- BOLT; CASE, AIR DRYER	1-48199-436-0		1103-		06	A
84	--- SPRING; AIR DRYER	1-48199-396-0		1103-		01	A (A)
		1-48199-523-0		1103-		01	A (B)
93	--- SILENCER; AIR DRYER	1-48199-619-0		1103-		01	A
104	--- GASKET	1-48199-495-0		1103-		01	A (A)
		1-48199-496-0		1103-		02	A (B)
109	--- STOPPER; CHECK VALVE	1-48199-539-0		1103-		01	A
110	--- NUT; CAP	1-48199-527-0		1103-		01	A
111	--- PLATE; GOVERNOR	1-48199-526-0		1103-		01	A
112	--- SCREW & SPRING ASM; AIR DRYER	1-48199-524-0		1103-		01	A
113	--- STEM; EXHAUST	1-48199-522-0		1103-		01	A

https://truckmanualshub.com/


AIR DRYER

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
114	--- PISTON ASM; GOVERNOR					
	1-48199-521-0		1103-		01	A

https://truckmanualshub.com/

3-52 BRAKE PIPING; OIL, FRONT

FIG-NO. AIR TANK SIDE

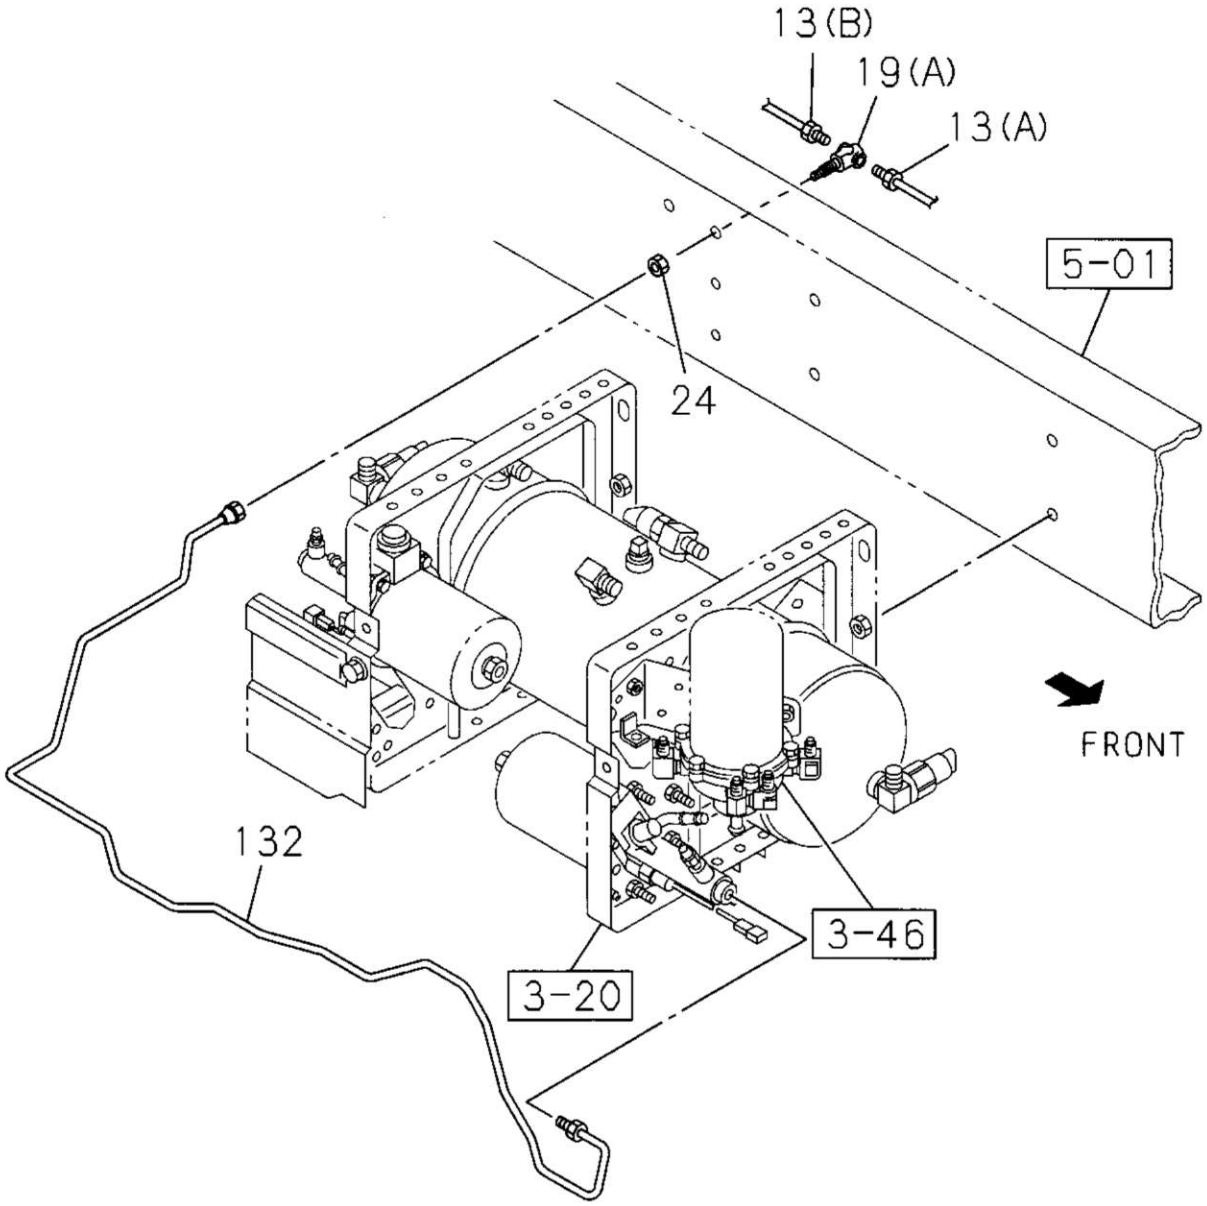


https://truckmanualshub.com/

BRAKE PIPING; OIL, FRONT

FRAME SIDE

FIG-NO.

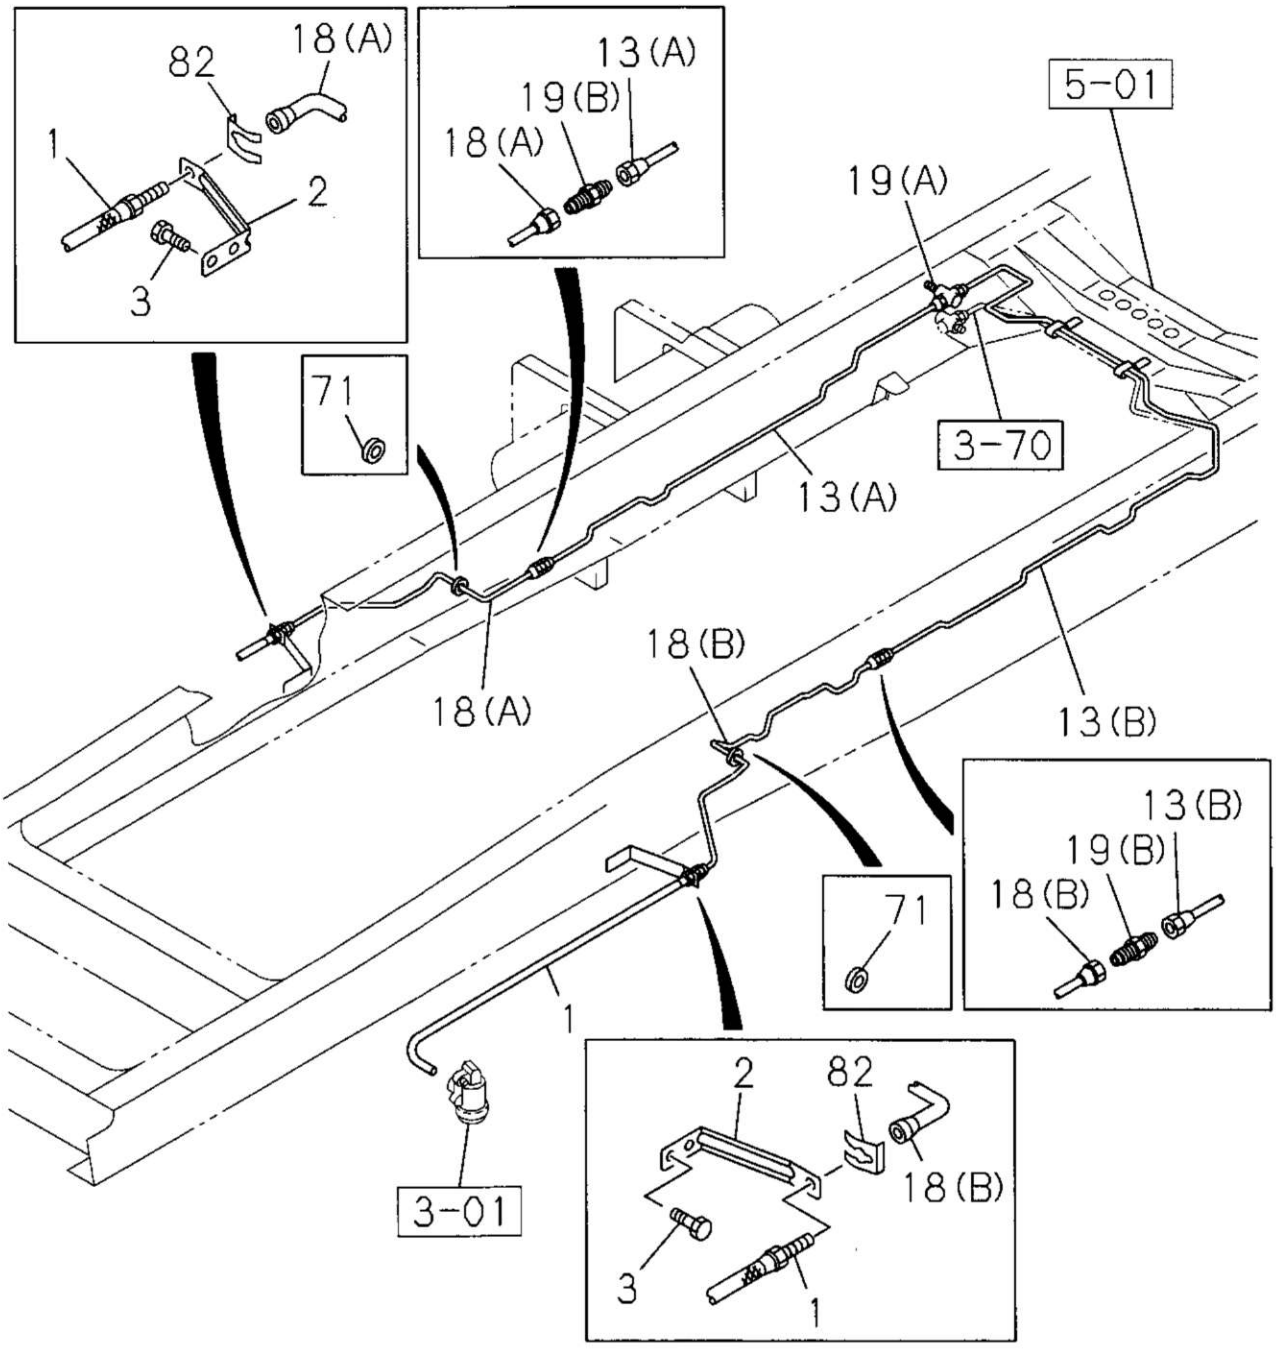

https://truckmanualshub.com/

3-52 BRAKE PIPING; OIL, FRONT

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
1	-A- HOSE; FLEX, FRT BRK						
	8-98172-789-0		1103-		02	A	L=480
2	--- BRACKET; FLEX HOSE, FRT BRK						
	8-98011-946-1		1103-		02	A	
3	--- BOLT; BRKT, FLEX HOSE, FRT BRK						
	0-28650-825-0		1103-		04	A	M8X25 FLANGE IDN
13	--- PIPE; OIL, UNION TO UNION						
	8-98113-684-0		1103-	L	01	A	(B) L=1891
	8-98067-417-0		1103-	R	01	A	(A) L=967
18	--- PIPE; OIL, UNION TO FRT FLEX HOSE						
	8-98065-376-0		1103-	L	01	A	(B) L=1016
	8-98067-426-0		1103-	R	01	A	(A) L=567
19	--- UNION; OIL PIPE						
	0-92107-005-0		1103-		02	A	(B) M10 STRAIGHT
	8-98113-738-0		1103-		01	A	(A)
24	--- NUT; UNION, OIL PIPE						
	1-09400-029-0		1103-		01	A	M10 H=8
71	--- GROMMET; OIL PIPE						
	9-09956-092-1		1103-		02	A	ID=24 OD=30 T=17
82	--- PLATE; FLEX HOSE						
	8-97360-054-0		1103-		02	A	

https://truckmanualshub.com/


BRAKE PIPING; OIL, FRONT

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
132	--- PIPE; OIL, BRK, HYD UNIT						
	8-98178-437-0		1103-		01	A	L=1460

https://truckmanualshub.com/

3-55 BRAKE PIPING; OIL, REAR


FIG-NO. FRAME SIDE

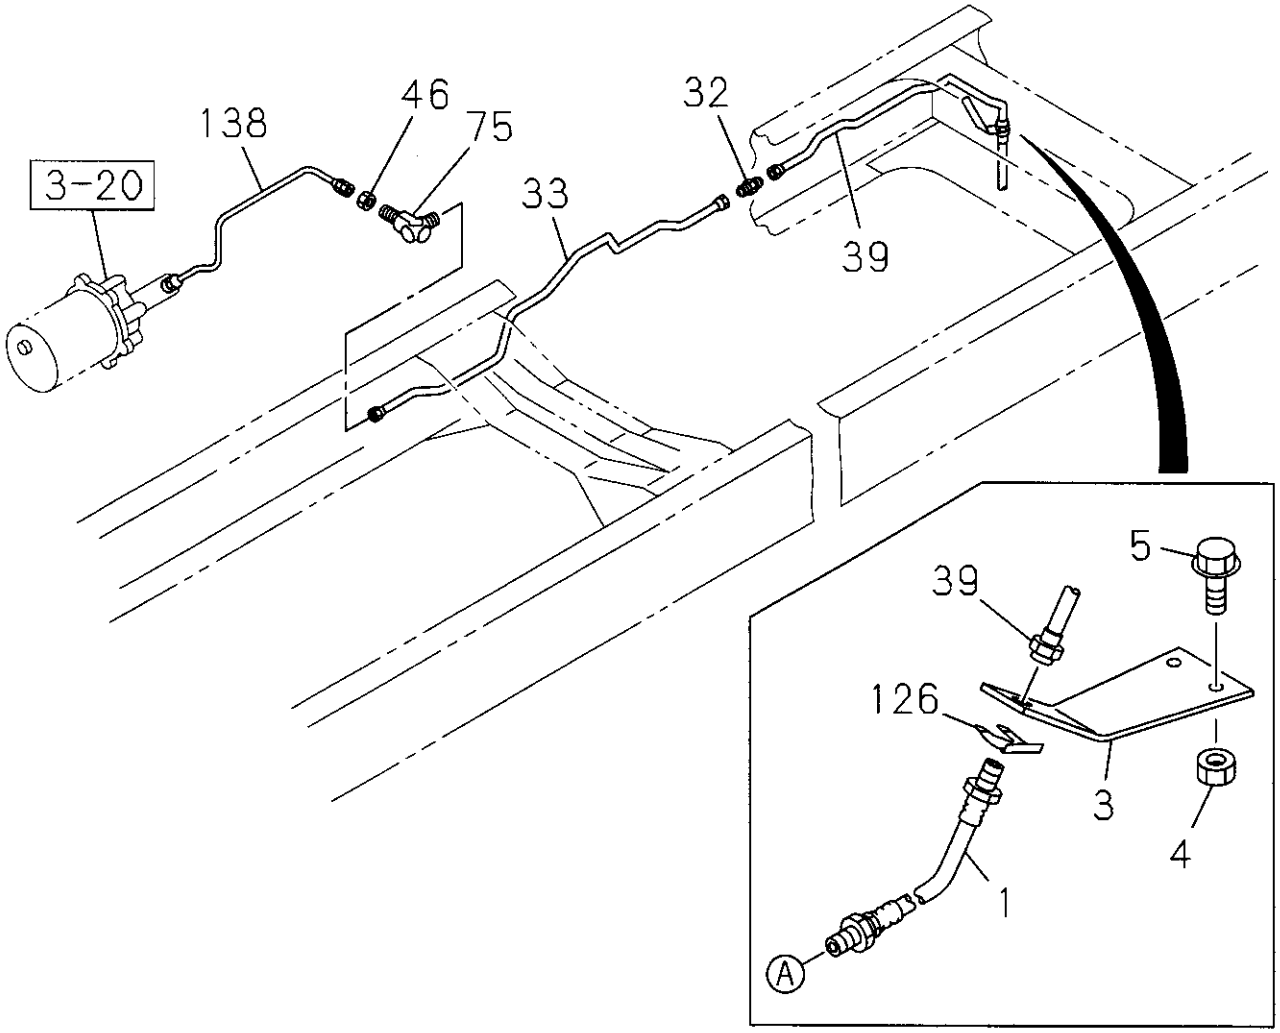

https://truckmanualshub.com/

BRAKE PIPING; OIL, REAR

REAR AXLE SIDE

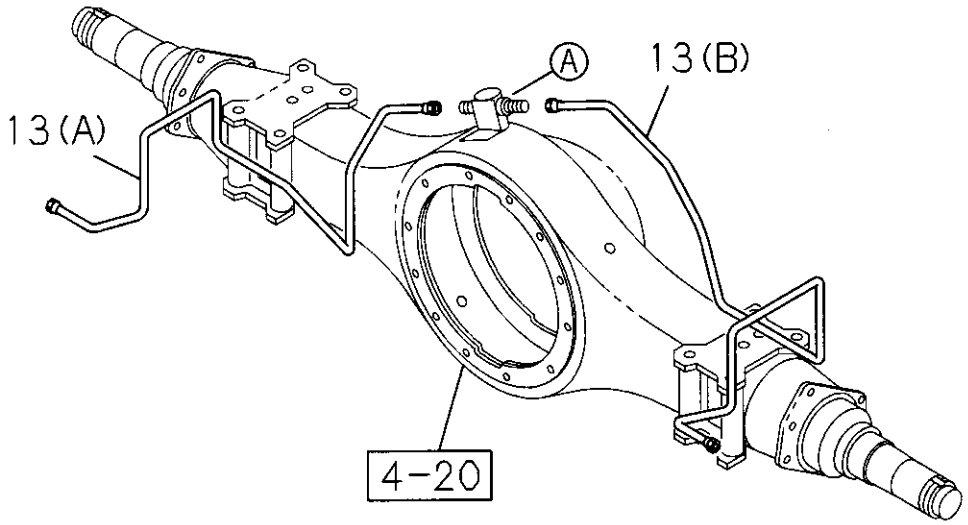

https://truckmanualshub.com/

3-55 BRAKE PIPING; OIL, REAR

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
	RECOMMEND CLASS / PART NAME					A LEAF SUS(FCR5CS)
1	-A- HOSE; FLEX, RR BRK					
	8-98175-918-0		1103-		01	A L=520
3	--- BRACKET; FLEX HOSE, RR BRK					
	8-98175-942-0		1103-		01	A
4	--- NUT; BRKT, FLEX HOSE, RR BRK					
	0-91180-108-0		1103-		02	A M8 FLANGE
5	--- BOLT; BRKT, FLEX HOSE, RR BRK					
	0-28650-830-0		1103-		02	A M8X30 FLANGE
13	--- PIPE; BRK, RR AXLE					
	1-47427-105-0		1103-	R	01	A (A) L=675
	1-47427-106-0		1103-	L	01	A (B) L=847
32	--- UNION; OIL PIPE					
	0-92107-005-0		1103-		01	A M10 STRAIGHT
33	--- PIPE; OIL, UNION TO UNION					
	8-98071-250-0		1103-	L	01	A L=2930
39	--- PIPE; OIL, UNION TO RR FLEX HOSE					
	8-98175-941-0		1103-		01	A L=2100
46	--- NUT; UNION, OIL PIPE					
	1-09400-029-0		1103-		01	A M10 H=8
75	--- UNION; OIL PIPE					
	8-98018-438-0		1103-		01	A
126	--- CLIP; FLEX HOSE					
	8-97360-054-0		1103-		01	A

https://truckmanualshub.com/


BRAKE PIPING; OIL, REAR


KEY NO.	RECOMMEND CLASS／PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
138	--- PIPE; HYDRAULIC UNIT						
	8-98178-439-0		1103-		01	A	L=494

https://truckmanualshub.com/

3-58 FIXING PARTS; OIL PIPING

FIG-NO. FRAME SIDE

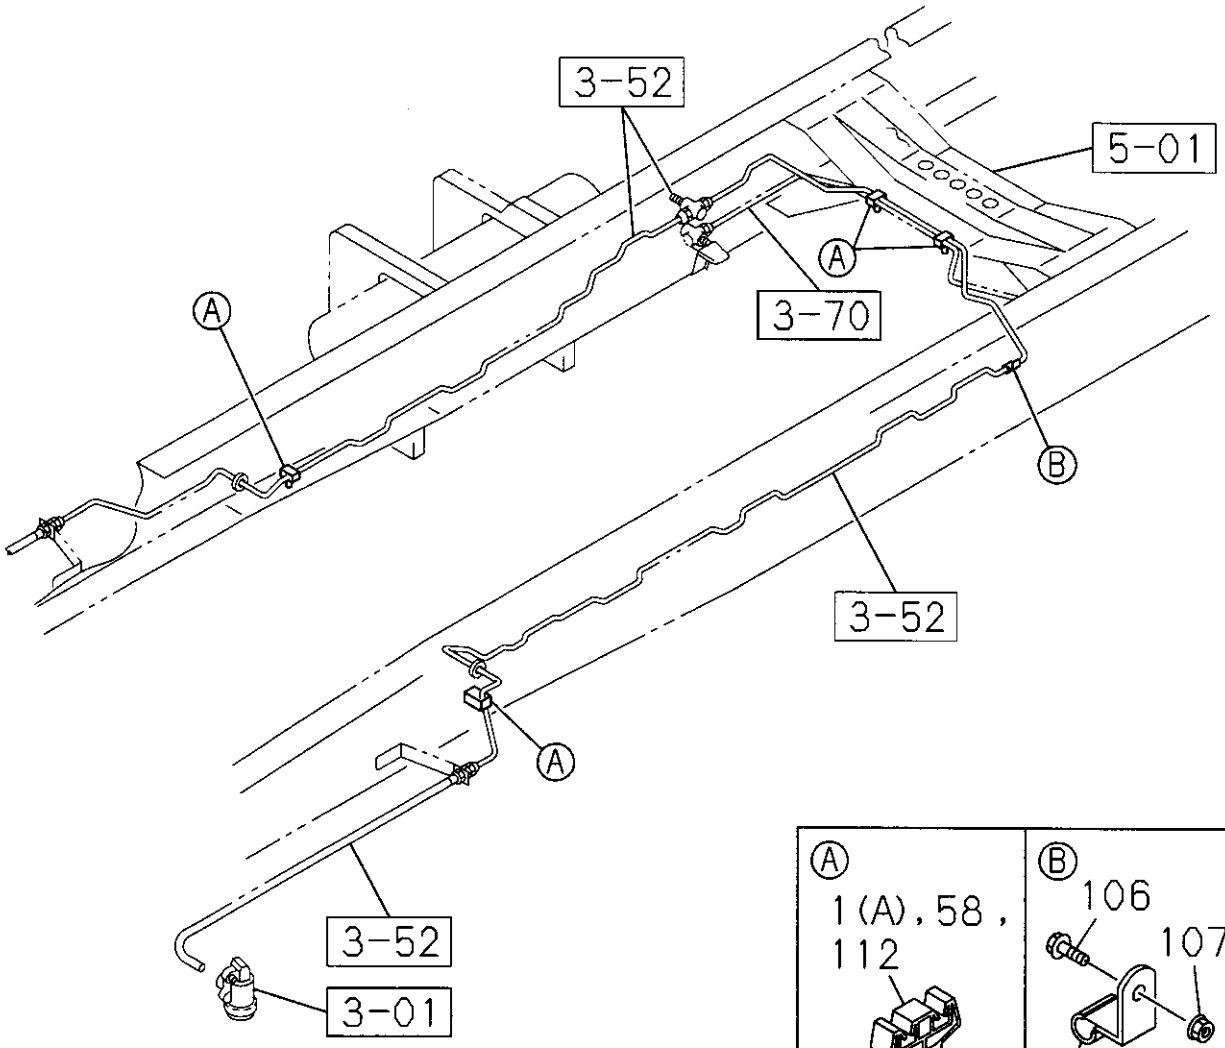


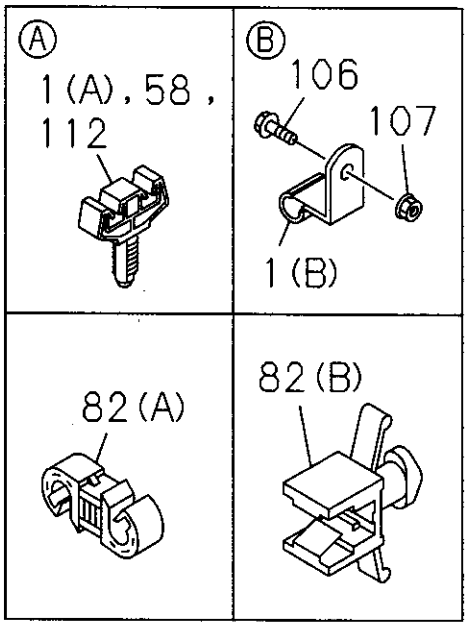


https://truckmanualshub.com/

FIXING PARTS; OIL PIPING

REAR AXLE SIDE

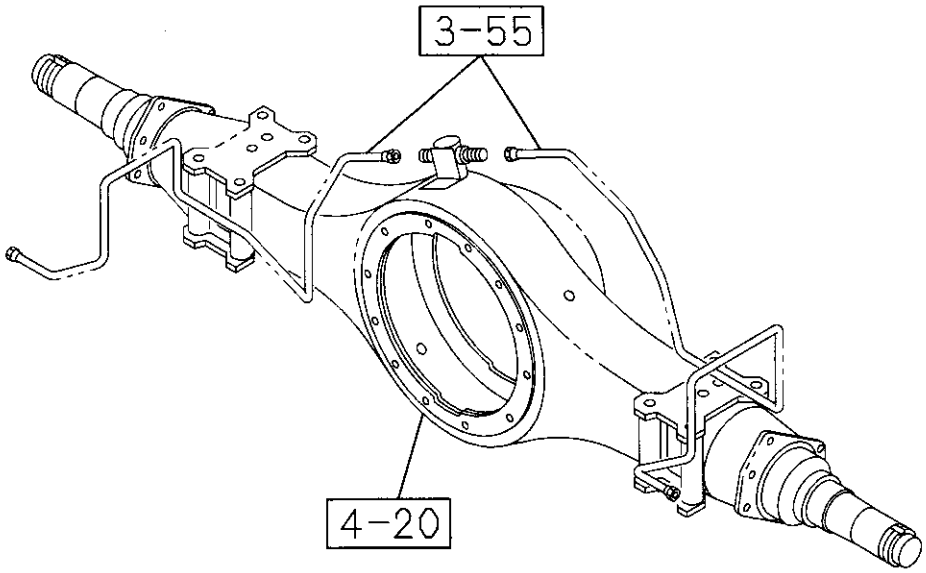

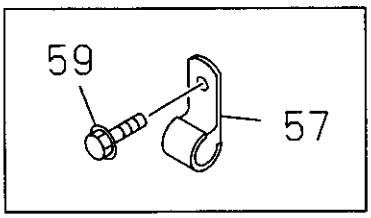

https://truckmanualshub.com/

3-58 FIXING PARTS; OIL PIPING


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	--- CLIP; OIL PIPE TO BODY					
	8-98012-254-1		1103-	L	03	A (A)
	8-98040-714-0		1103-	L	04	A (B)
	8-98012-254-1		1103-	R	04	A (A)
57	--- CLIP; BRK PIPE, RR AXLE					
	0-95234-635-0		1103-		04	A ID=7 L=20
58	--- CLIP; OIL PIPE					
	8-98012-254-1		1103-		05	A
59	--- BOLT; BRK PIPE, RR AXLE					
	0-28050-810-0		1103-		04	A M8X10 FLANGE
82	--- CLIP; OIL PIPE					
	1-09709-303-0		1103-		02	A (A) ID=4.76 & 4.76
	1-09709-304-0		1103-		04	A (A) ID=4.76 & 6.35
	1-09709-305-0		1103-		01	A (A) ID=4.76 & 10.0
	8-94316-410-0		1103-		01	A (B) ID=4.8X2
106	--- BOLT; CLIP, OIL PIPE					
	0-28650-825-0		1103-	L	04	A M8X25 FLANGE IDN
107	--- NUT; CLIP, OIL PIPE					
	0-91180-108-0		1103-	L	04	A M8 FLANGE
112	--- CLIP; OIL PIPE					
	8-98012-254-1		1103-		08	A


https://truckmanualshub.com/


3-70 BRAKE PIPING; AIR, AIR MASTER

FIG-NO. AIR TANK SIDE

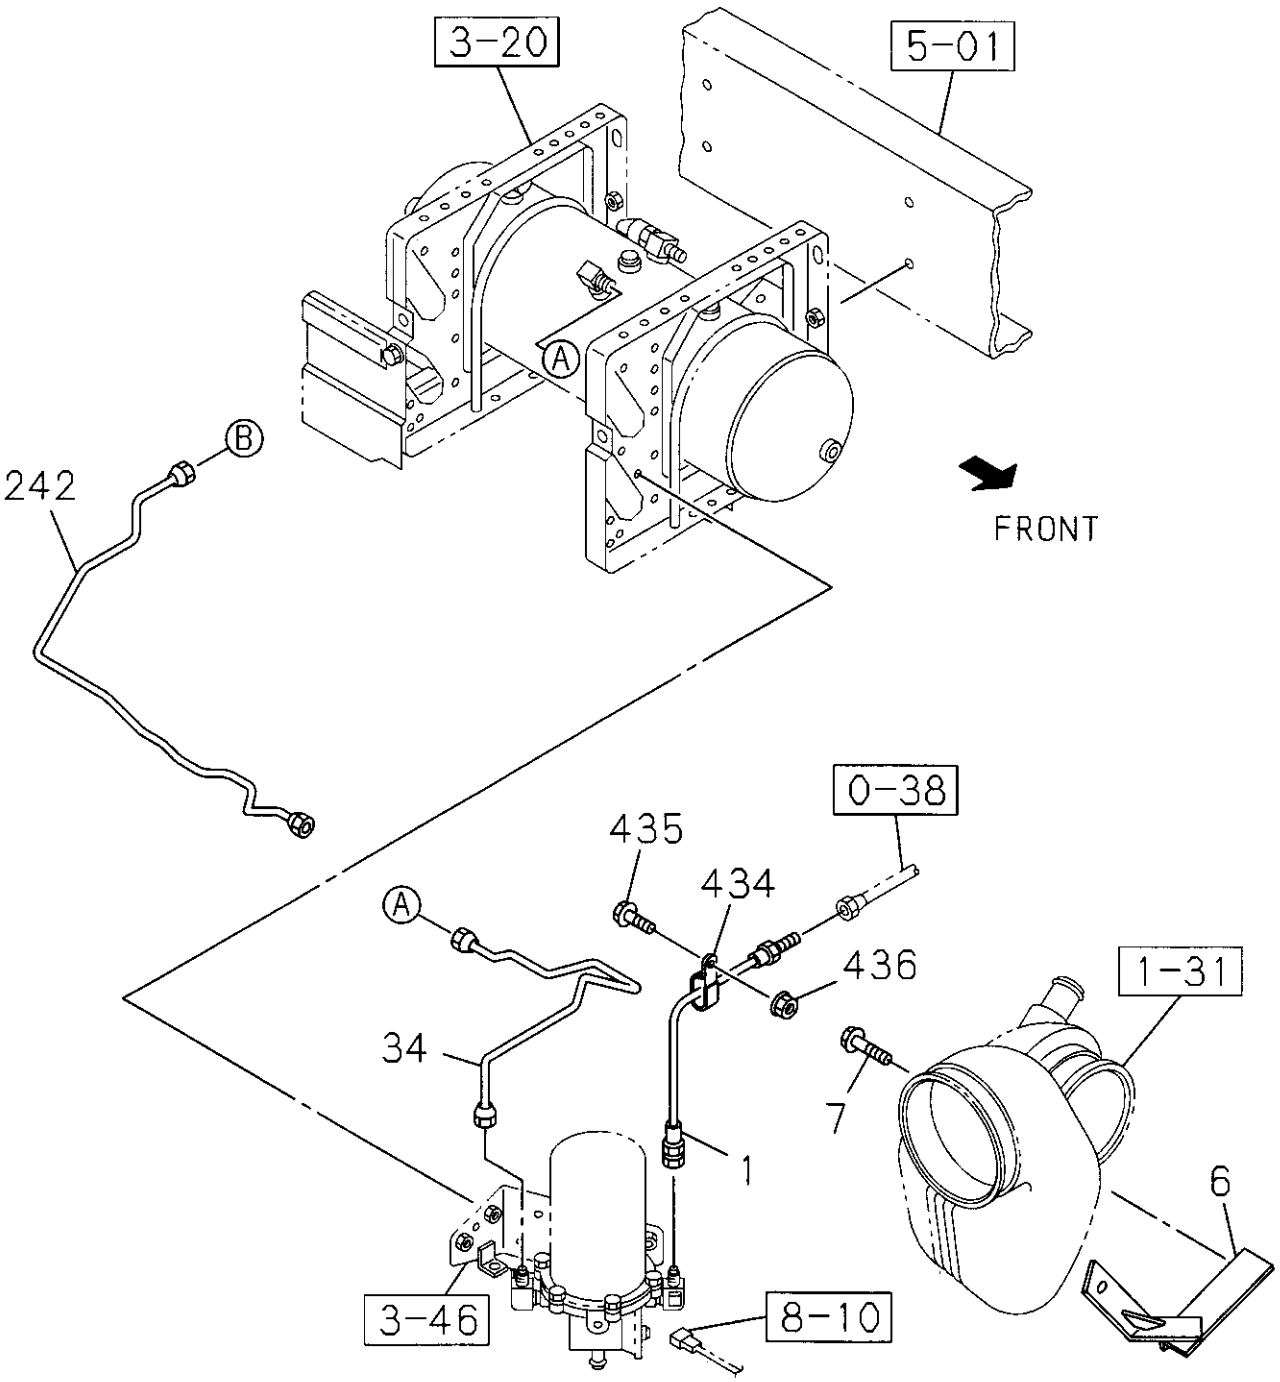

https://truckmanualshub.com/

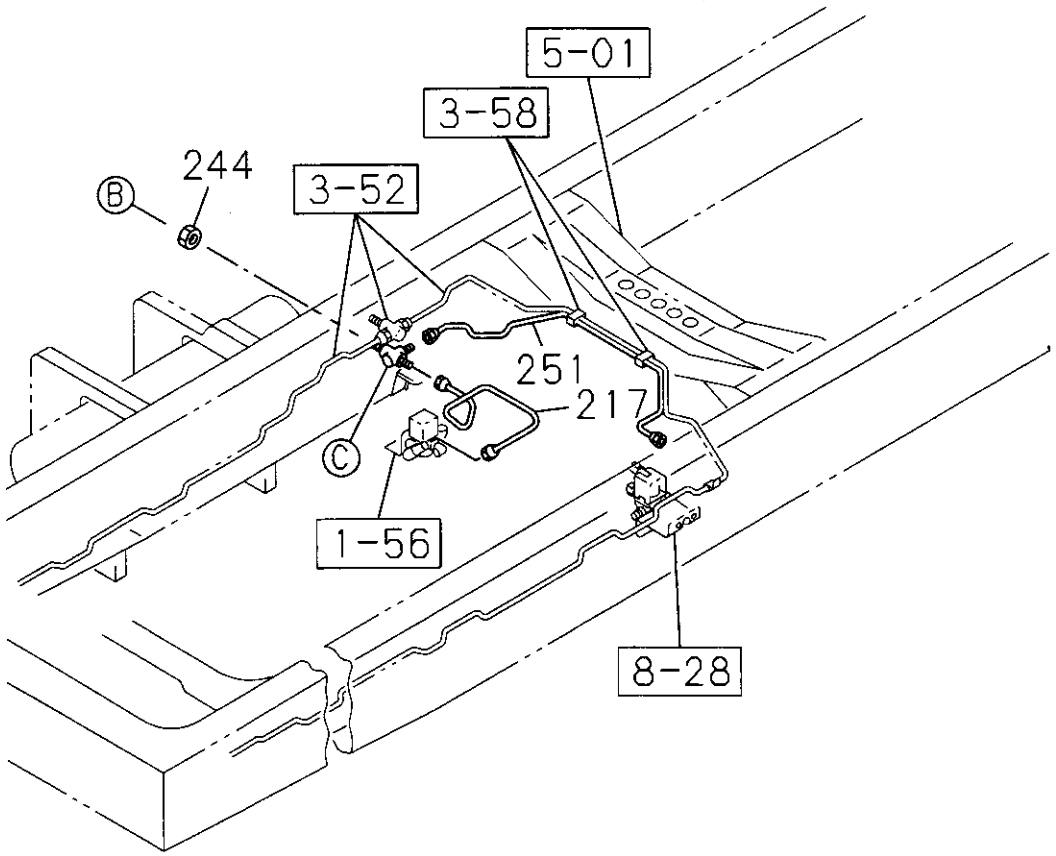

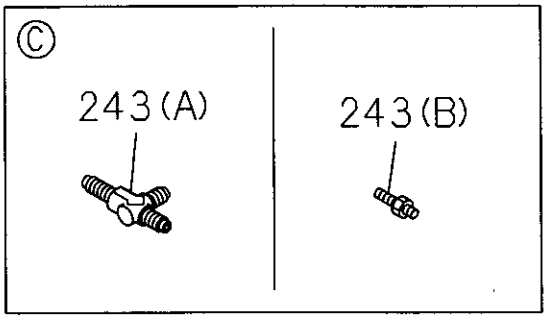

https://truckmanualshub.com/

3-70 BRAKE PIPING; AIR, AIR MASTER

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- HOSE; FLEX, AIR TANK						
		8-98066-976-1		1103-		01	A
6	--- BRACKET; FLEX HOSE, AIR TANK						
		8-98066-733-1		1103-		01	A
7	--- BOLT; BRKT, FLEX HOSE, AIR TANK						
		0-28650-825-0		1103-		02	A M8X25 FLANGE IDN
34	--- PIPE; AIR						
		1-49115-480-0		1103-		01	A L=659 SERVICED BY L=660
217	--- PIPE; VAC, UNION TO MAG VLV						
		8-98067-433-0		1103-		01	A PTO CONTROL<SV6> L=265
		8-98120-102-0		1103-		01	A EXC. PTO CONTROL<SV6> L=289
242	--- PIPE; AIR, AIR TANK TO UNION						
		1-47428-809-0		1103-		01	A L=557 SERVICED BY L=600
243	--- UNION; AIR PIPE						
		0-92138-906-0		1103-		01	A PTO CONTROL<SV6> (A) M12 3WAY
		0-92113-306-0		1103-		01	A EXC. PTO CONTROL<SV6> (B) M12 L=66.5
244	--- NUT; UNION, AIR PIPE						
		9-09840-280-0		1103-		01	A M12
251	--- PIPE; AIR, UNION TO MAG VLV						
		1-47428-814-0		1103-		01	A PTO CONTROL<SV6> L=941 SERVICED BY L=1000
434	--- CLIP						
		1-09700-945-0		1103-		01	A ID=35 L=33

https://truckmanualshub.com/


BRAKE PIPING; AIR, AIR MASTER

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
435	--- BOLT; CLIP					
	0-28650-825-0		1103-		01	A M8X25 FLANGE IDN
436	--- NUT; CLIP					
	0-91180-108-0		1103-		01	A M8 FLANGE

https://truckmanualshub.com/

3-75 BRAKE PIPING; AIR, FRONT


FIG-NO. CAB UNDER

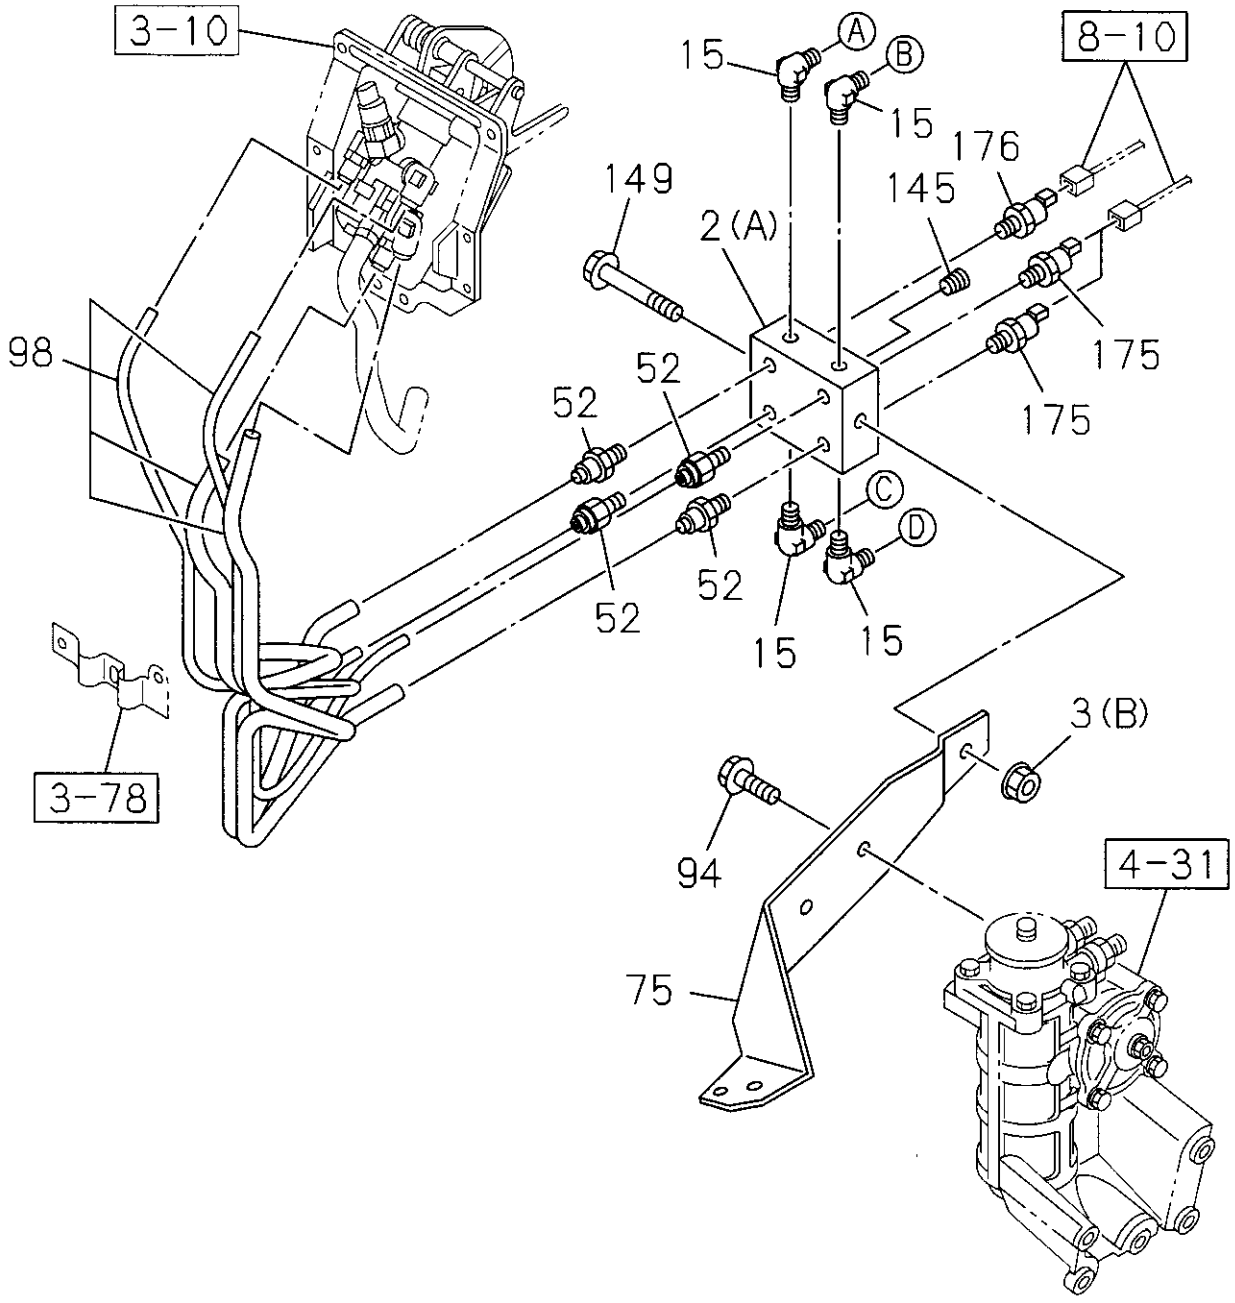

https://truckmanualshub.com/

BRAKE PIPING; AIR, FRONT

FRAME SIDE

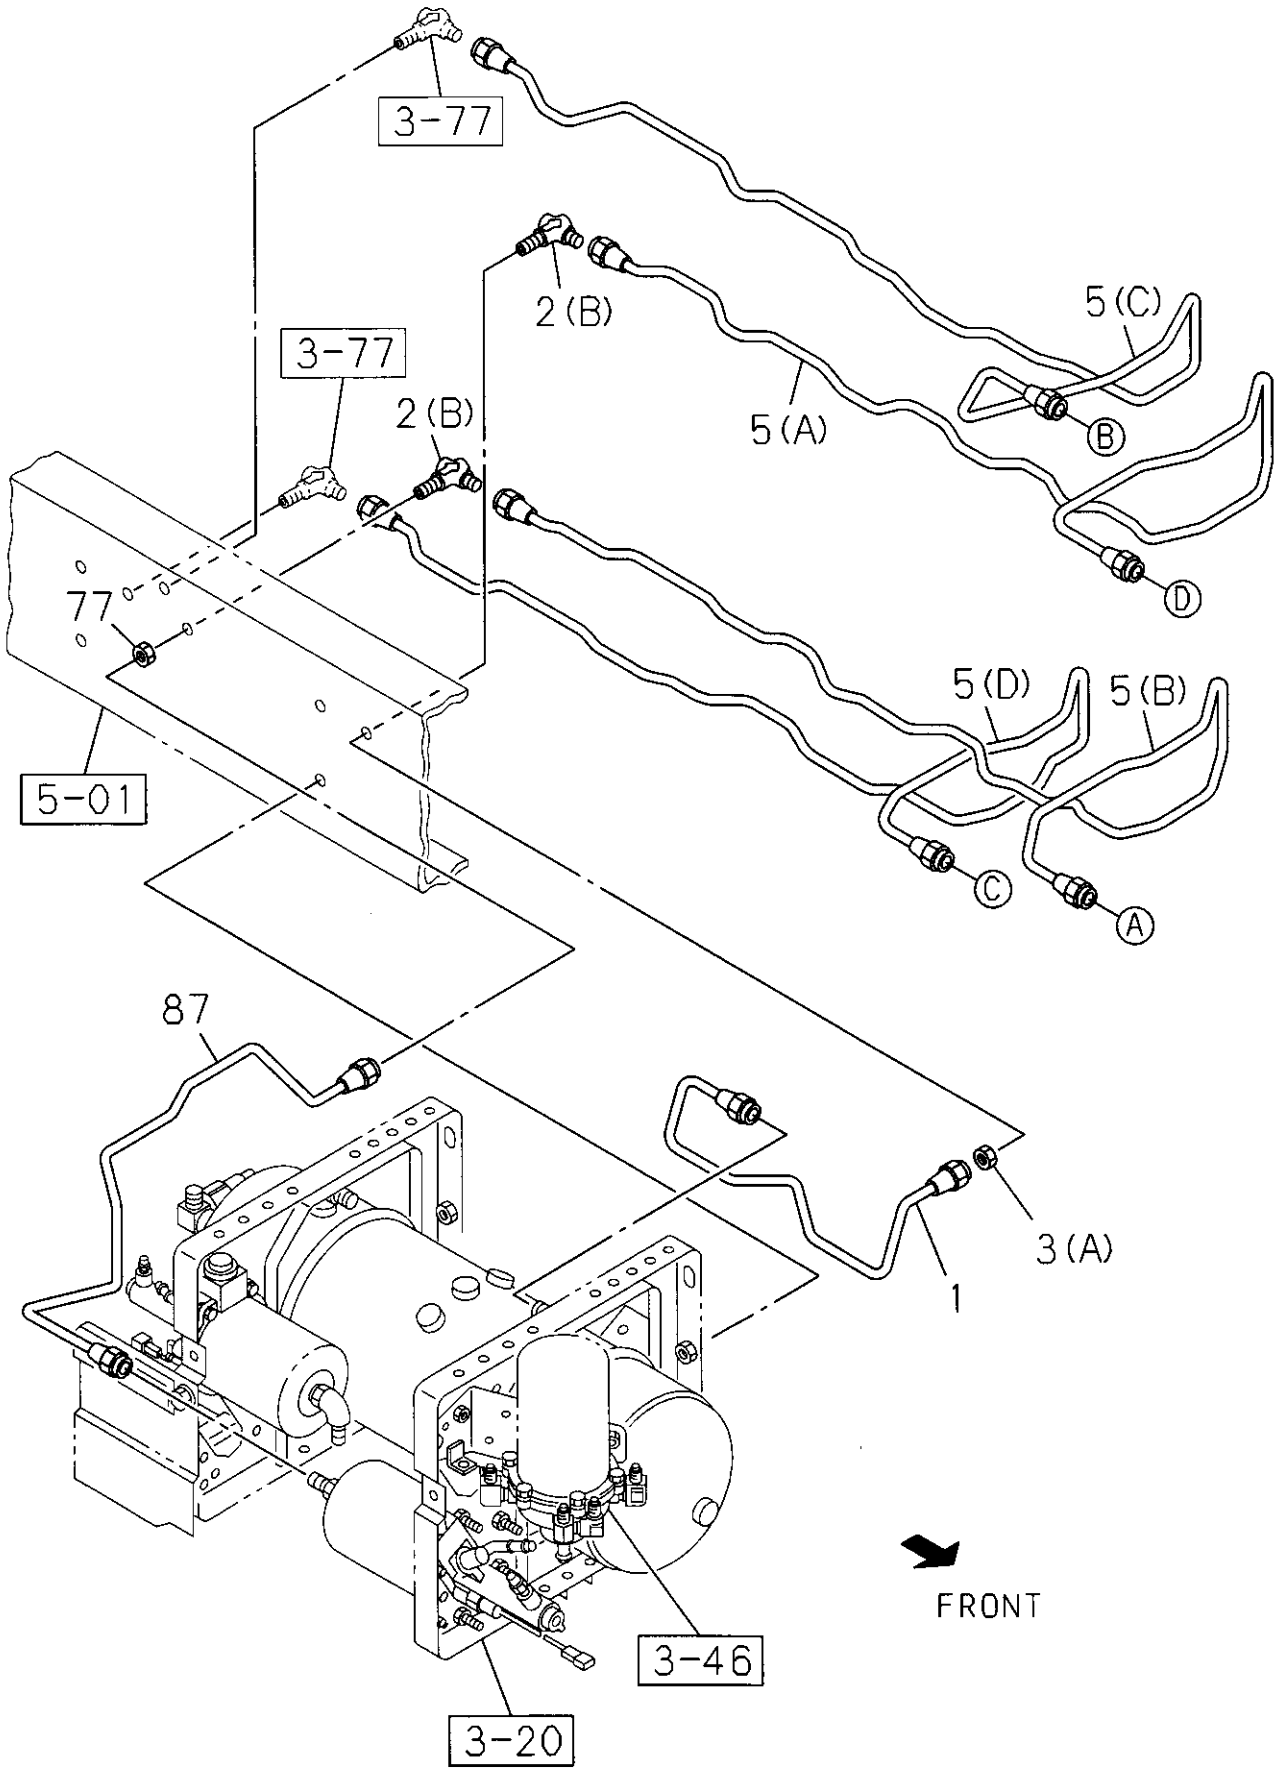

https://truckmanualshub.com/

3-75 BRAKE PIPING; AIR, FRONT

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- PIPE; AIR, AIR TANK TO UNION						
		1-47428-869-0		1103-		01	A L=606 SERVICED BY L=660
2	--- UNION; AIR PIPE						
		0-92135-210-0		1103-		02	A (B) M16 ELBOW
		8-98057-394-1		1103-		01	A (A)
3	--- NUT; PIPE UNION						
		0-91111-516-0		1103-		01	A (A) M16 IDN
		0-91180-108-0		1103-		01	A (B) M8 FLANGE
5	--- PIPE; AIR, UNION TO UNION						
		1-47428-883-0		1103-		01	A (A) L=2215 SERVICED BY L=2500
		1-47428-885-0		1103-		01	A (B) L=2708 SERVICED BY L=2900
		1-47428-885-0		1103-		01	A (D) L=2609 SERVICED BY L=2900
		8-98082-095-2		1103-		01	A (C) L=2501
15	--- CONNECTOR; AIR PIPE						
		0-92134-310-0		1103-		04	A M16 & PT1/4 ELBOW
52	--- CONNECTOR; NYLON TUBE						
		1-09660-967-0		1103-		04	A DIN12 & R1/4 STRAIGHT

https://truckmanualshub.com/


BRAKE PIPING; AIR, FRONT

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
75	--- BRACKET; UNION	8-98066-785-0		1103-		01	A
77	--- NUT; PIPE UNION	0-91111-516-0		1103-		01	A M16 IDN
87	--- PIPE; AIR, UNION TO AIR MASTER	1-47428-872-0		1103-		01	A L=796 SERVICED BY L=800
94	--- BOLT; BRKT	0-28151-020-0		1103-		02	A M10X20 FLANGE
98	--- TUBE; NYLON	8-98079-175-0		1103-		01	A
145	--- PLUG	9-99204-513-0		1103-		01	A PT1/4
149	--- BOLT; UNION	0-28050-800-0		1103-		01	A M8X100 FLANGE
175	--- SENSOR; AIR PRESS	1-80220-023-1		1103-		02	A
176	--- SWITCH; AIR PRESS	8-98010-857-0		1103-		01	A

https://truckmanualshub.com/

3-77 BRAKE PIPING; AIR, REAR


FIG-NO. FRAME SIDE

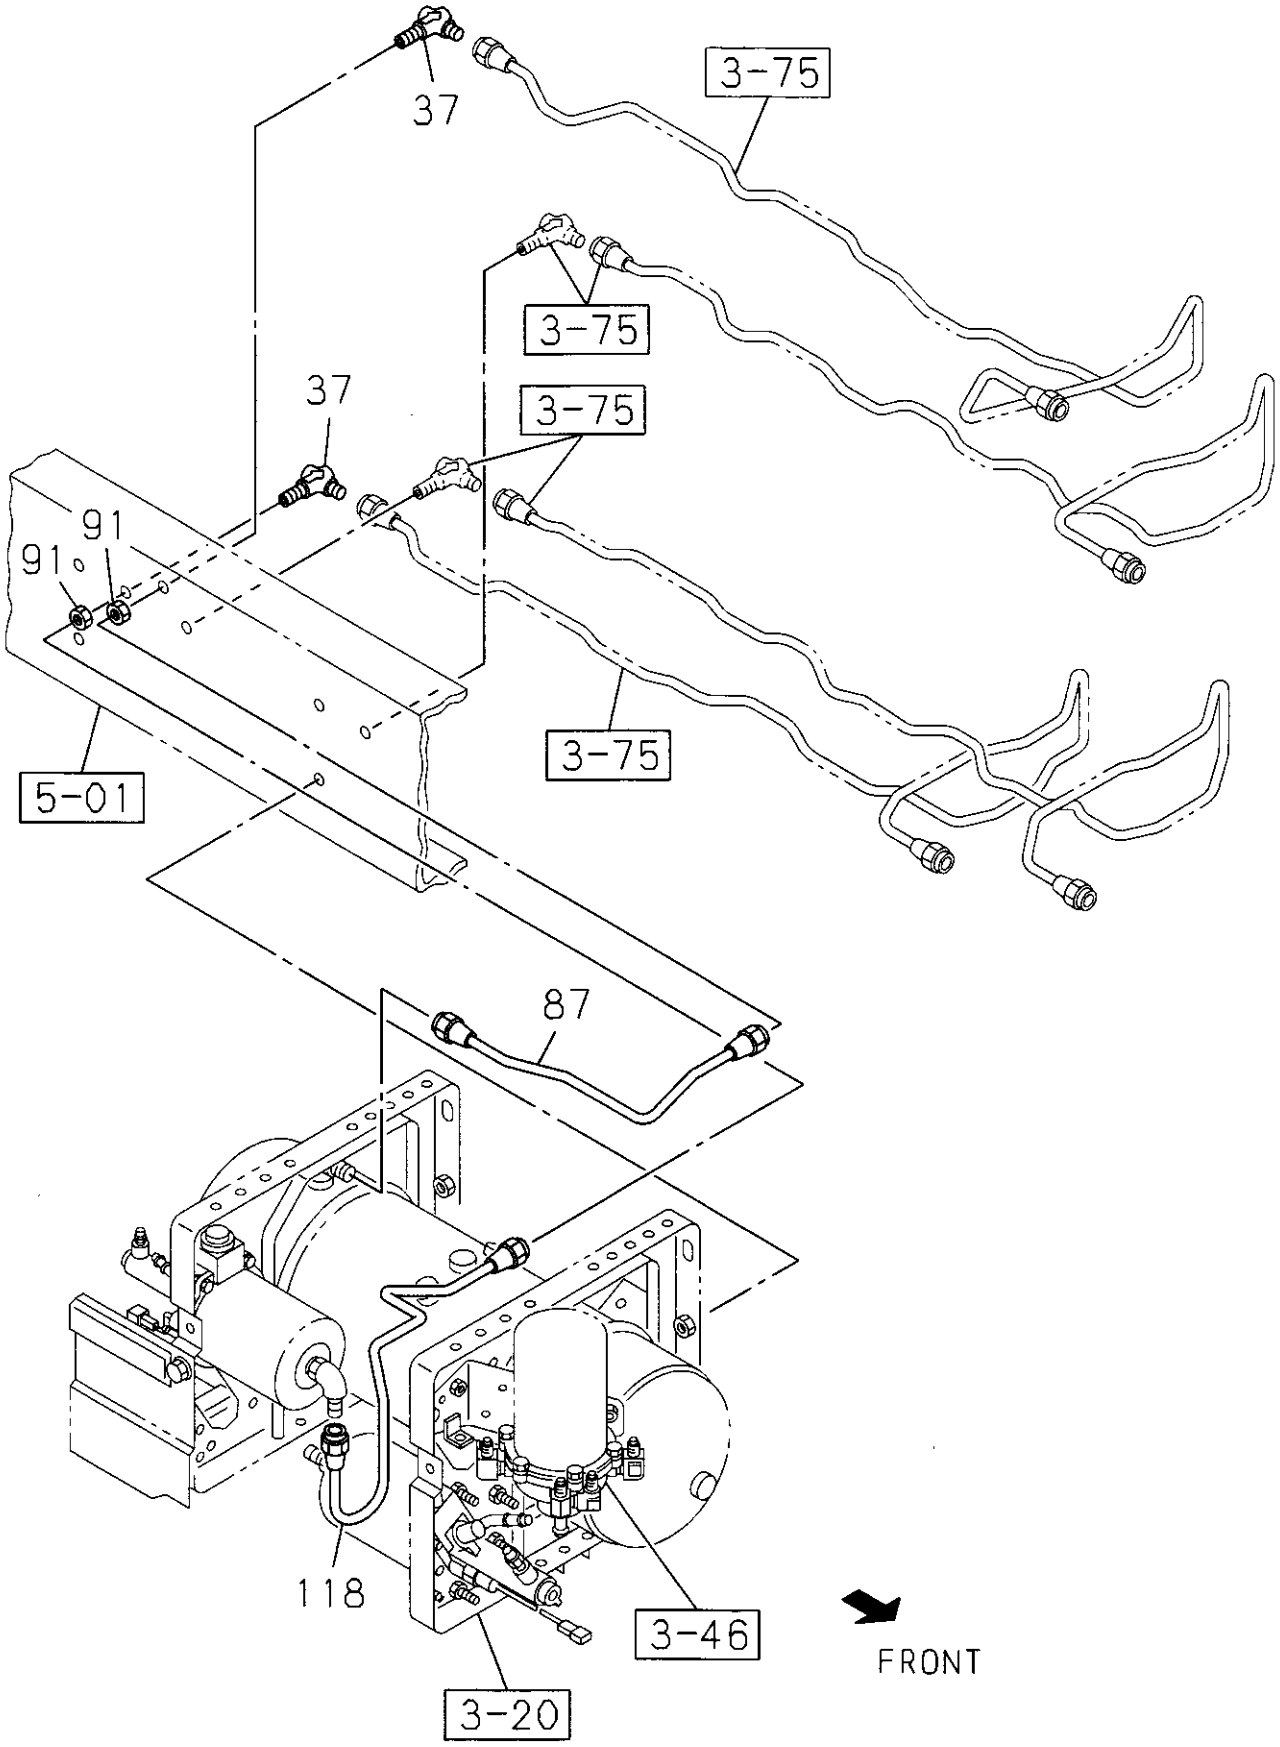

https://truckmanualshub.com/

BRAKE PIPING; AIR, REAR

CAB SIDE

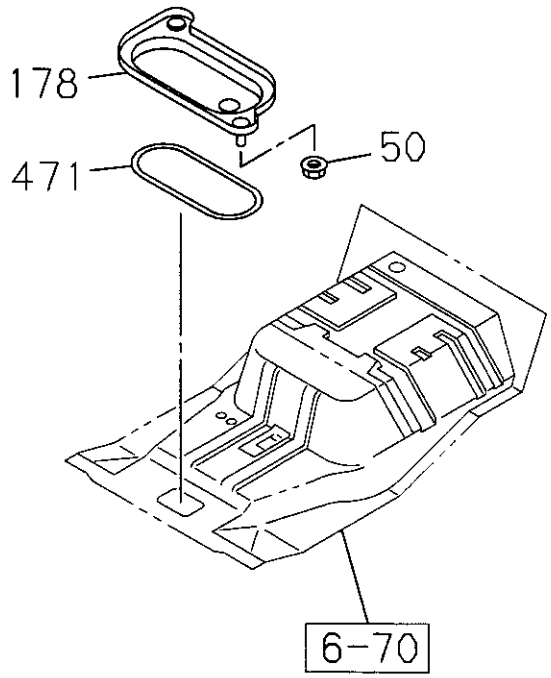

https://truckmanualshub.com/

3-77 BRAKE PIPING; AIR, REAR


FIG-NO.


KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
37	--- UNION; AIR PIPE						
		0-92135-210-0		1103-		02	A M16 ELBOW
50	--- NUT; UNION BRKT						
		0-91180-108-0		1103-		02	A M8 FLANGE
87	--- PIPE; AIR, AIR TANK TO UNION						
		8-98178-459-0		1103-		01	A L=391
91	--- NUT; PIPE UNION						
		0-91111-516-0		1103-		02	A M16 IDN
118	--- PIPE; AIR, UNION TO AIR MASTER						
		1-47428-871-0		1103-		01	A L=725 SERVICED BY L=730
178	--- BRACKET; UNION						
		8-98017-052-0		1103-		01	A
471	--- SEAL; BRKT						
		1-79738-832-0		1103-		01	A

https://truckmanualshub.com/

3-78 FIXING PARTS; AIR PIPING

FIG-NO. NO. 1

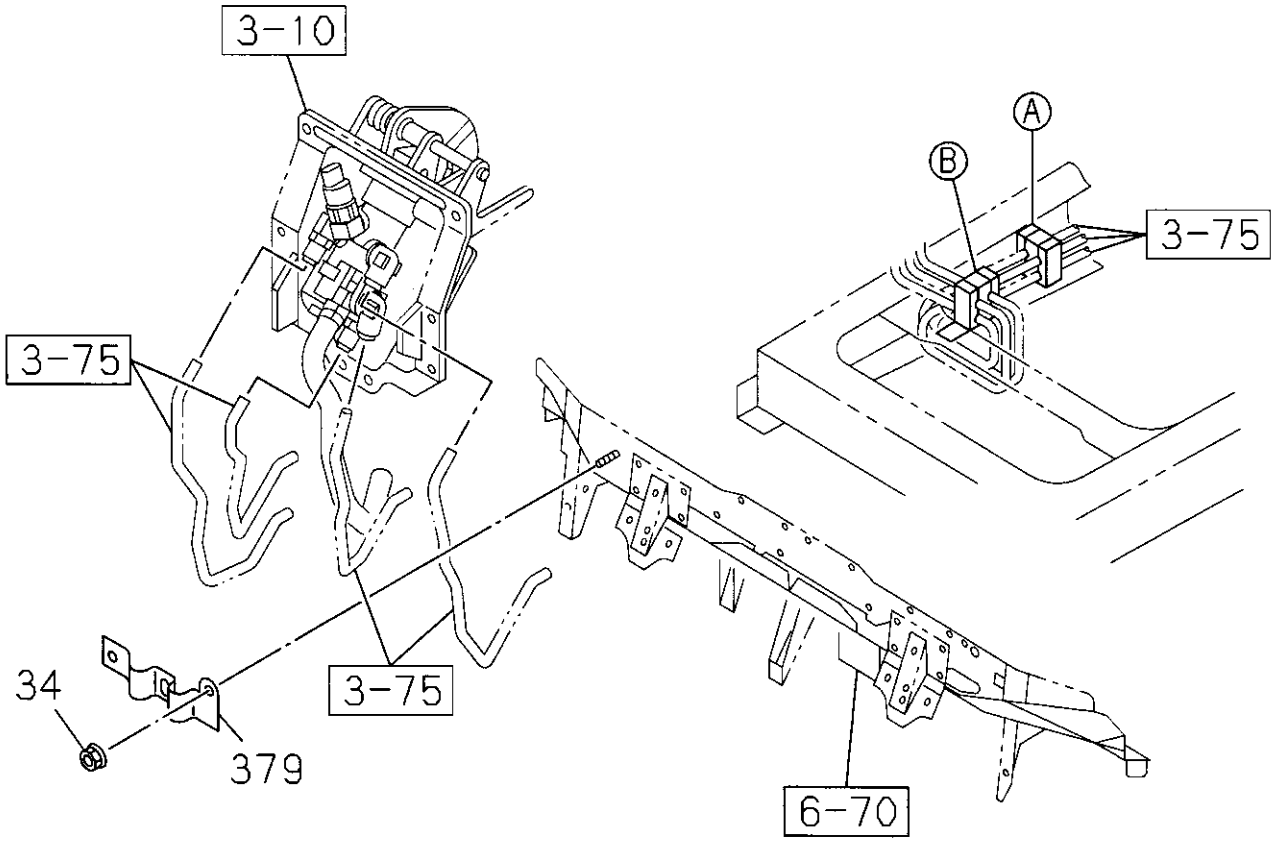

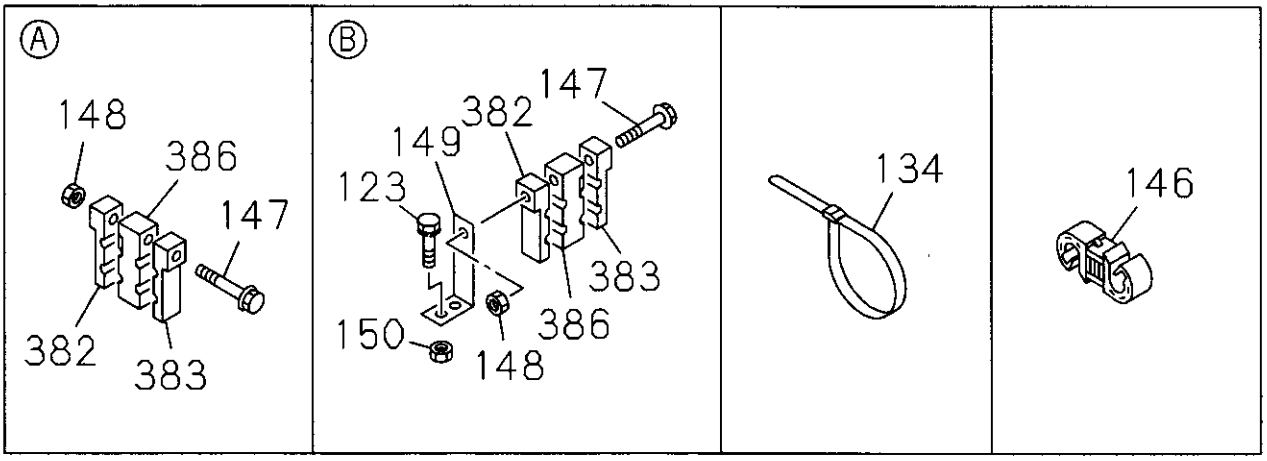


https://truckmanualshub.com/


FIXING PARTS; AIR PIPING

NO. 2

3-78

FIG-NO.

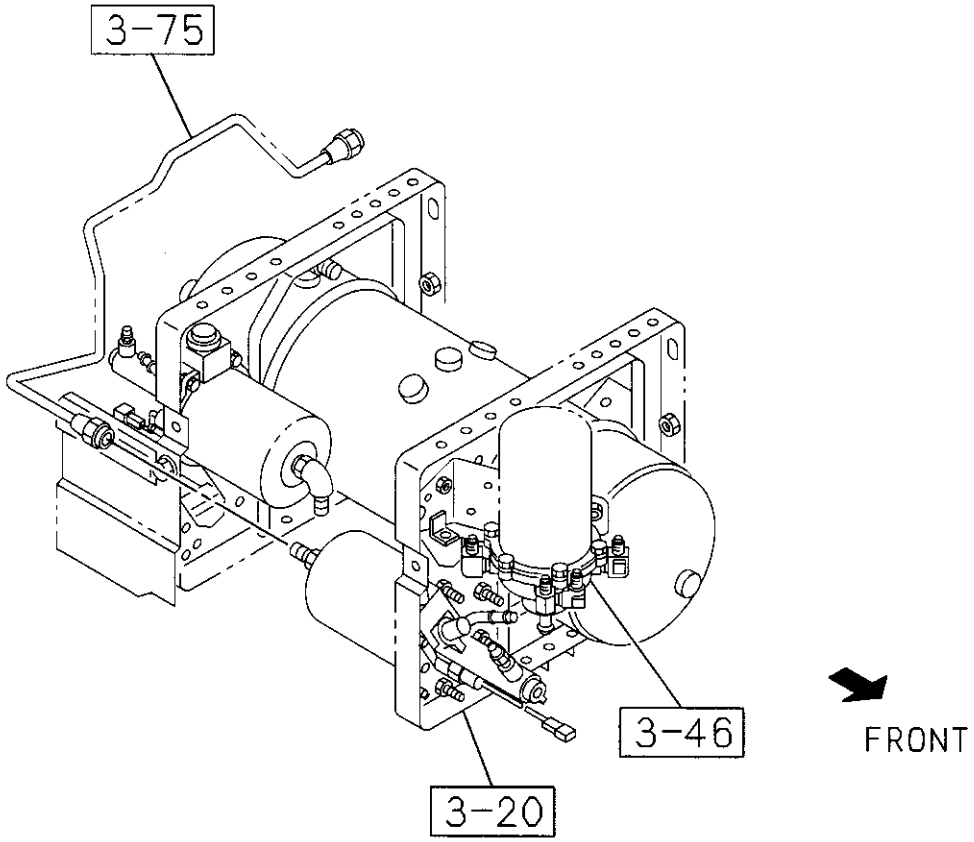

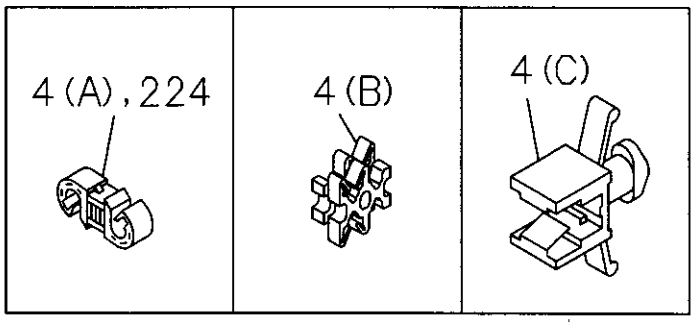

https://truckmanualshub.com/

3-78 FIXING PARTS; AIR PIPING

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
4	--- CLIP; AIR PIPE						
		1-09701-304-0		1103-		03	A (B) ID=4.76X4
		1-09709-273-1		1103-		01	A (A) ID=6.35 & 6.35
		1-09709-277-1		1103-		02	A (A) ID=10 & 10
		1-09709-304-0		1103-		01	A (A) ID=4.76 & 6.35
		1-09709-305-0		1103-		01	A (A) ID=4.76 & 10.0
		1-09709-306-0		1103-		01	A (A) ID=4.76 & 12
		8-94316-410-0		1103-		01	A (C) ID=4.8X2
34	--- NUT; BRKT						
		0-91180-106-0		1103-		02	A M6 FLANGE
123	--- BOLT; PIPE CLIP						
		0-28650-825-0		1103-		02	A M8X25 FLANGE IDN
134	--- CLIP; AIR PIPE						
		1-09707-183-0		1103-		01	A L=350
146	--- CLIP; AIR PIPE						
		1-09709-277-1		1103-		02	A ID=10 & 10
147	--- BOLT; PIPE CLIP						
		0-28050-870-0		1103-		03	A M8X70 FLANGE
148	--- NUT; PIPE CLIP						
		0-91180-108-0		1103-		03	A M8 FLANGE

https://truckmanualshub.com/

FIXING PARTS; AIR PIPING

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
149	--- BRACKET; PIPE CLIP					
	1-47476-792-0		1103-		01	A
150	--- NUT; CLIP BRKT					
	0-91180-108-0		1103-		02	A M8 FLANGE
224	--- CLIP; AIR PIPE					
	1-09709-274-1		1103-		01	A ID=6.35 & 10.0
379	--- BRACKET; NYLON TUBE					
	8-98044-013-0		1103-		01	A
382	--- CLIP; UPR					
	1-09709-241-0		1103-		03	A ID=10 & 10
383	--- CLIP; LWR					
	1-09709-241-0		1103-		03	A ID=10 & 10
386	--- CLIP; CENTER					
	1-09709-242-0		1103-		03	A ID=10


https://truckmanualshub.com/


4

https://truckmanualshub.com/


4-01 PROPELLER SHAFT

FIG-NO. 1ST AND 2ND SHAFT

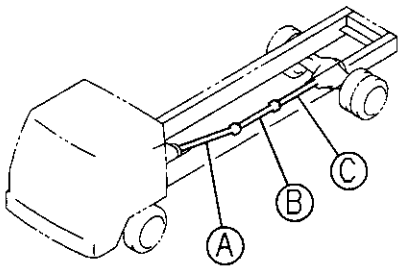

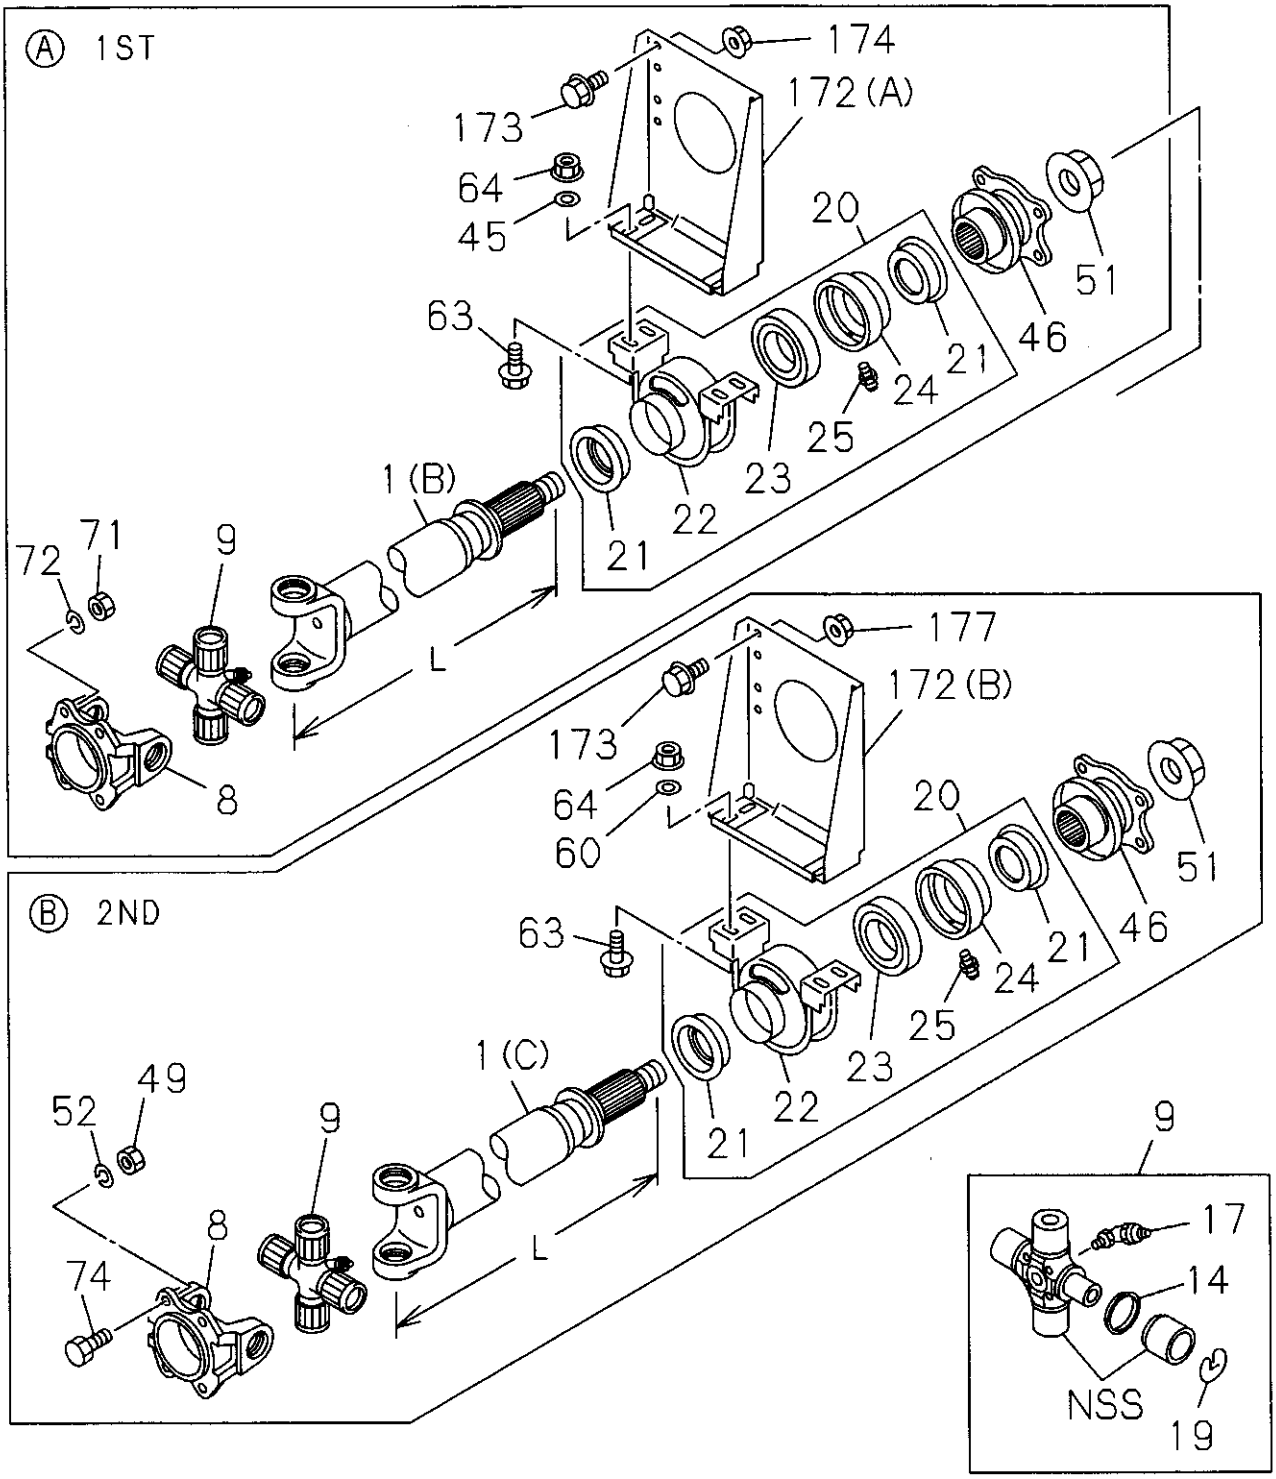

https://truckmanualshub.com/

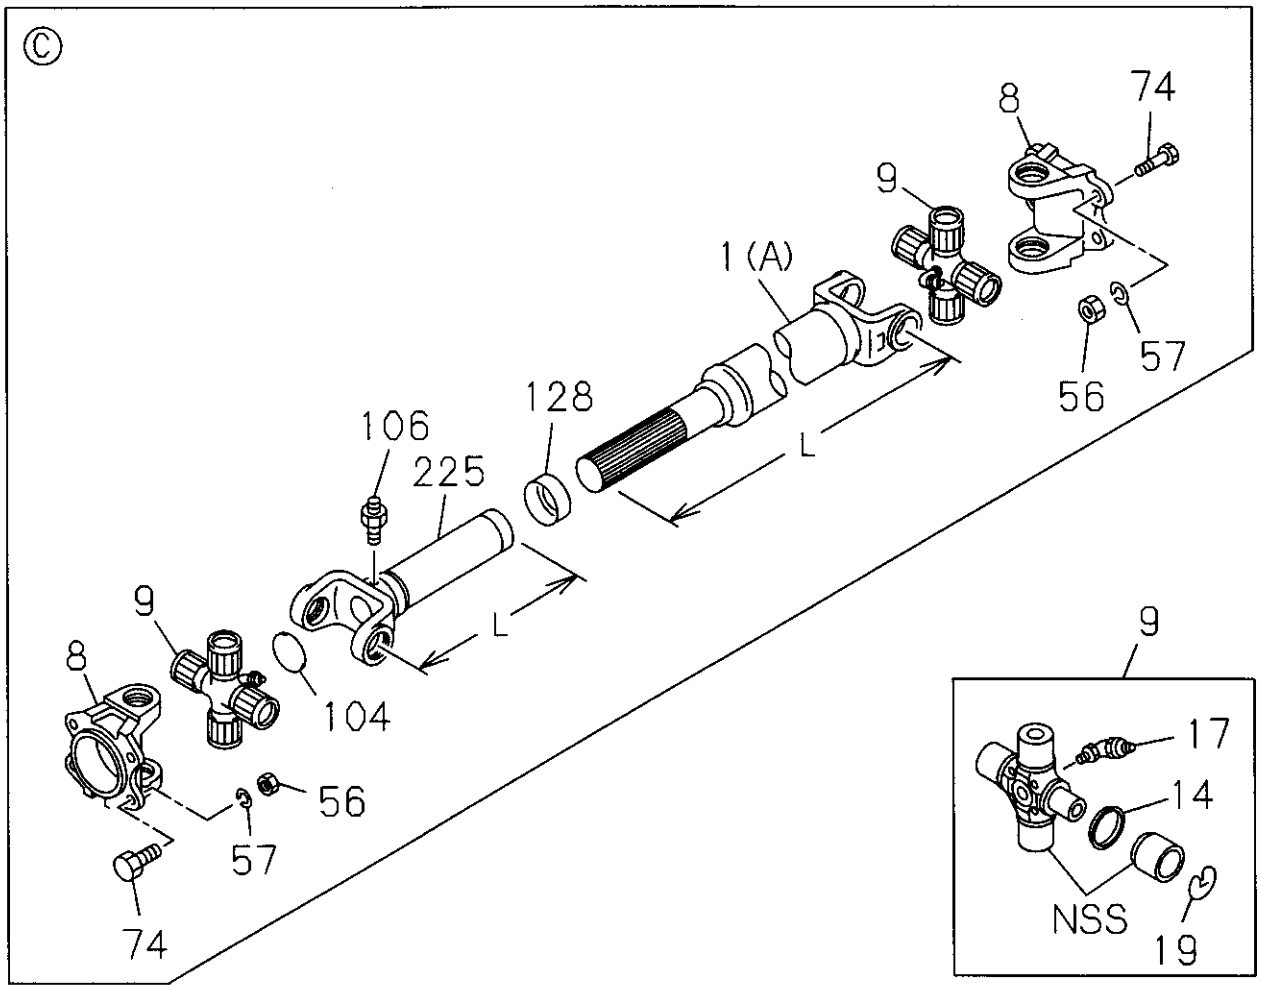

https://truckmanualshub.com/

4-01 PROPELLER SHAFT

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A WHEEL BASE 5300MM(53W)
1	--- SHAFT; PROP					
	8-98069-609-0		1103-		01	A (C) L=629
	8-98069-657-0		1103-		01	A (A) L=1271
	8-98105-706-0		1103-		01	A (B) L=1264
8	--- YOKE; FLANGE, PROP SHAFT					
	1-37211-056-3		1103-		01	A
	1-37211-056-3		1103-		03	A
9	-D- JOURNAL ASM; PROP SHAFT					
	8-98048-925-0		1103-		01	A
	8-98048-925-0		1103-		03	A
14	--- COVER; DUST, SPIDER					
	8-98020-800-0		1103-		04	A
	8-98020-800-0		1103-		12	A
17	--- NIPPLE; GREASE, PROP SHAFT					
	0-90301-610-0		1103-		01	A PT1/8 ELBOW
	0-90301-610-0		1103-		03	A PT1/8 ELBOW
19	--- RING; SNAP, JOURNAL, PROP SHAFT, 1ST					
	1-09587-086-0		1103-		04	A OD=45.5 T=1.95 BLUE
	1-09587-086-0		1103-		12	A OD=45.5 T=1.95 BLUE
	1-09587-087-2		1103-		04	A OD=45.5 T=2.00 WHITE
	1-09587-087-2		1103-		12	A OD=45.5 T=2.00 WHITE
	1-09587-088-1		1103-		04	A OD=45.5 T=2.05 YELLOW
	1-09587-088-1		1103-		12	A OD=45.5 T=2.05 YELLOW

https://truckmanualshub.com/

PROPELLER SHAFT

4-01
FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A WHEEL BASE 5300MM(53W)
20	--- BEARING ASM; CTR, PROP SHAFT					
	8-98020-881-0		1103-		01	A A
21	--- SEAL; OIL, CENTER BRG					
	1-09625-161-0		1103-		02	A A ID=54
22	--- RUBBER; CUSHION, CENTER BRG, 1ST					
	1-37516-059-0		1103-		01	A A
23	--- BEARING; CENTER, PROP SHAFT					
	9-00090-071-0		1103-		01	A A
24	--- RETAINER; CENTER BRG, 1ST					
	8-98020-882-0		1103-		01	A A
25	--- NIPPLE; GREASE, CENTER BRG					
	8-98020-889-0		1103-		01	A A
45	--- WASHER; PL, RET TO BRKT					
	0-91614-610-0		1103-		04	A ID=10.5 OD=22
46	--- FLANGE; SPLINED, PROP SHAFT, 1ST					
	8-98020-815-0		1103-		01	A A
49	--- NUT; YOKE					
	0-91110-514-0		1103-		04	A M14
51	--- NUT; FLANGE, SPLINED					
	8-97160-857-0		1103-		01	A A M30
52	--- WASHER; LK, YOKE					
	0-91510-814-0		1103-		04	A ID=14.2

https://truckmanualshub.com/

4-01 PROPELLER SHAFT

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A WHEEL BASE 5300MM(53W)
56	--- NUT; YOKE					
	0-91110-514-0		1103-		04	A A M14
57	--- WASHER; LK, YOKE					
	0-91510-814-0		1103-		04	A A ID=14.2
60	--- WASHER; PL, RET TO BRKT					
	0-91614-610-0		1103-		04	A ID=10.5 OD=22
63	--- BOLT; RET TO BRKT, PROP SHAFT, 1ST					
	0-28651-035-0		1103-		04	A A M10X35 FLANGE IDN
64	--- NUT; RET TO BRKT					
	0-91180-210-0		1103-		04	A A M10 FLANGE
71	--- NUT; YOKE					
	0-91110-514-0		1103-		04	A M14
72	--- WASHER; LK, YOKE					
	0-91510-814-0		1103-		04	A ID=14.2
74	--- BOLT; YOKE, TRANS					
	1-09000-121-0		1103-		04	A A A M14X37
104	--- PLUG; SLEEVE YOKE					
	1-09600-064-0		1103-		01	A
106	--- NIPPLE; GREASE, YOKE, PROP SHAFT					
	0-90301-406-0		1103-		01	A M6 STRAIGHT IDN

https://truckmanualshub.com/


PROPELLER SHAFT

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A WHEEL BASE 5300MM(53W)
128	--- SEAL; SLEEVE					
	1-37247-024-0		1103-		01	A
172	--- BRACKET; CENTER BRG					
	1-37515-119-0		1103-		01	A (A)
	1-37515-121-0		1103-		01	A (B)
173	--- BOLT; BRKT					
	0-28651-025-0		1103-		04	A A M10X25 FLANGE IDN
174	--- NUT; BRKT					
	0-91180-210-0		1103-		04	A M10 FLANGE
177	--- NUT					
	0-91180-210-0		1103-		04	A M10 FLANGE
225	--- YOKE; SLEEVE, PROP SHAFT					
	8-98020-885-0		1103-		01	A L=254

https://truckmanualshub.com/

4-10 FRONT AXLE

FIG-NO.

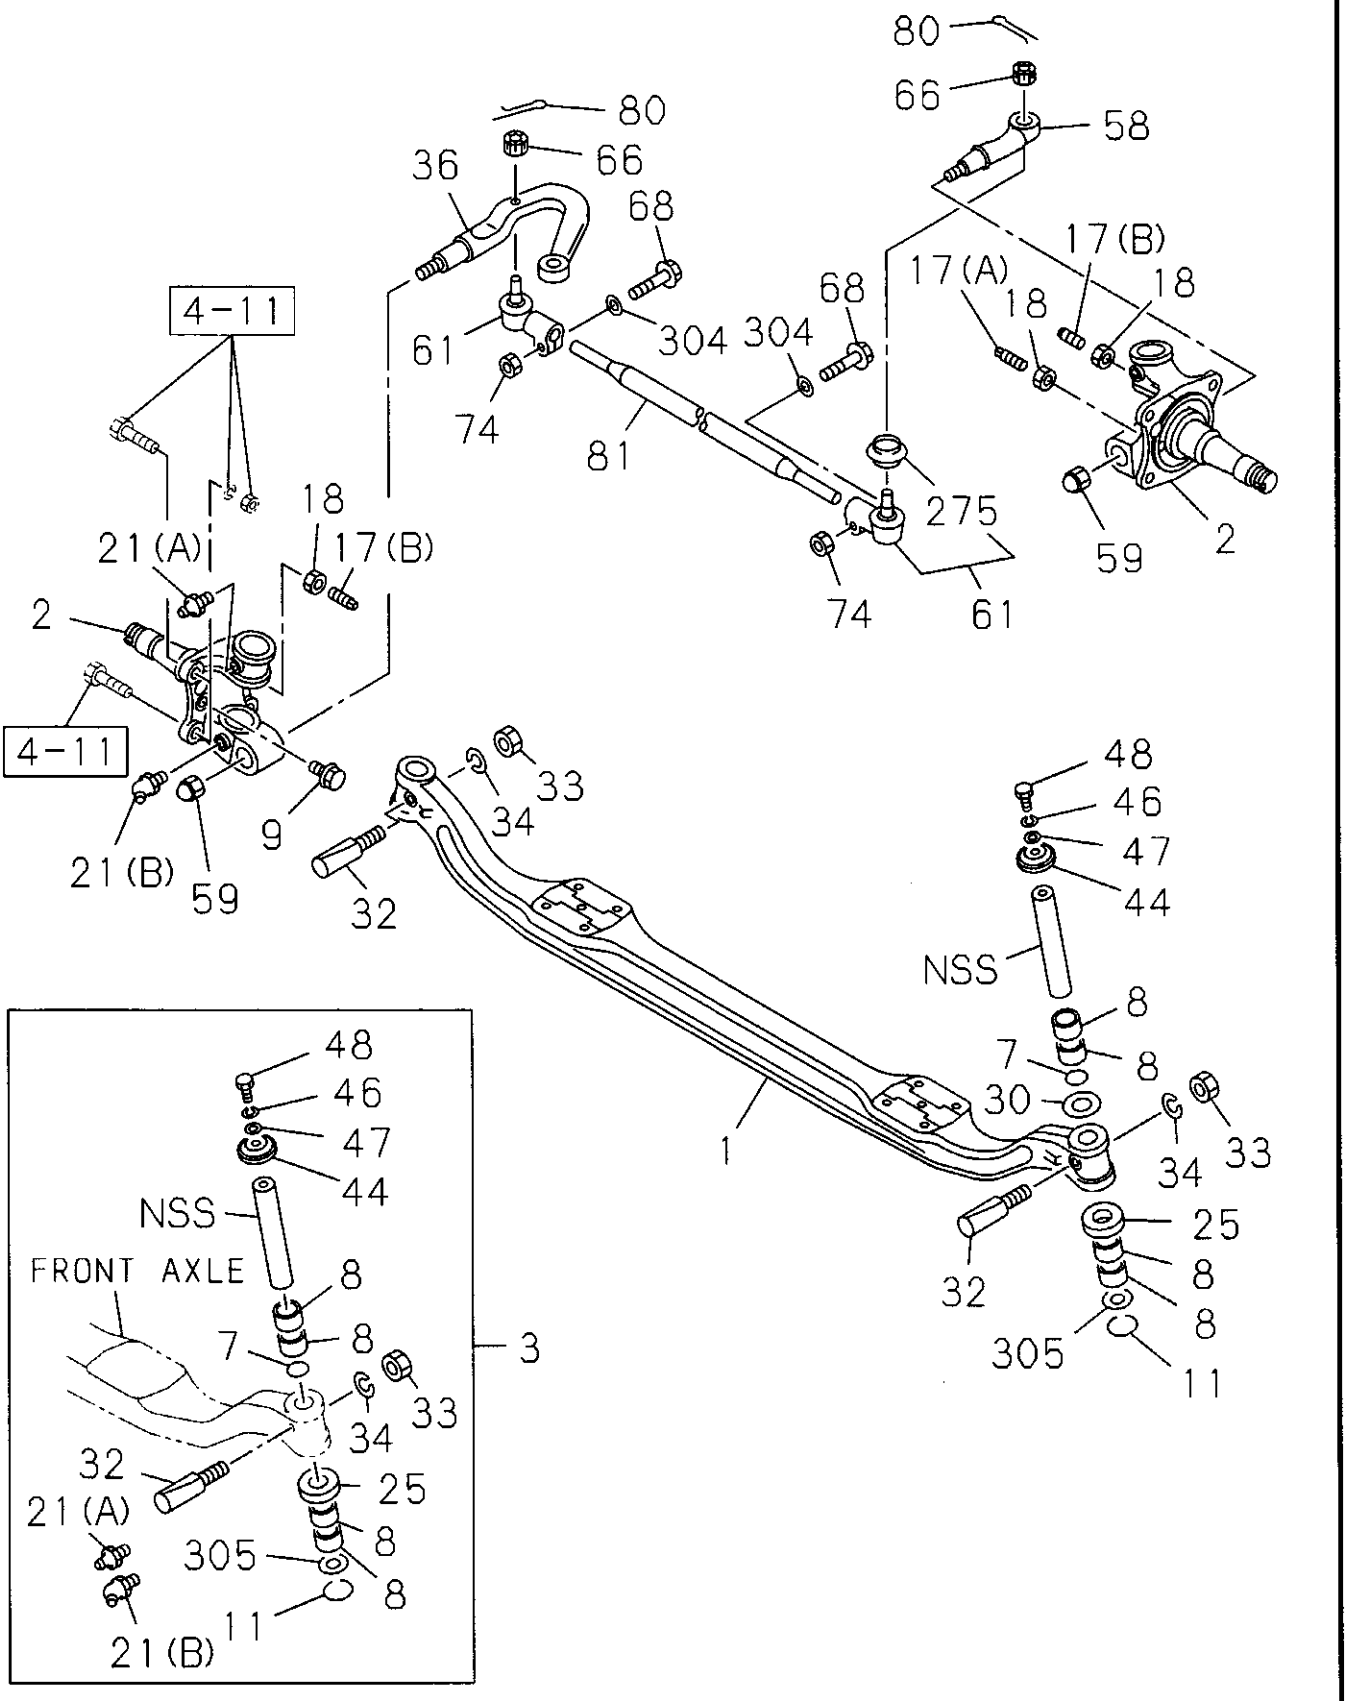

https://truckmanualshub.com/

FRONT AXLE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	--- AXLE; FRT					
	8-98057-479-1		1103-		01	A
2	--- KNUCKLE; FRT AXLE					
	8-98172-431-1		1103-	R	01	A
	8-98172-432-1		1103-	L	01	A
3	-B- KING PIN SET					
	1-87831-295-1		1103-	R	01	A
	1-87831-296-1		1103-	L	01	A
7	--- SEAL; OIL, KING PIN					
	1-09625-005-1		1103-		02	A
8	--- BEARING; NEEDLE, KING PIN					
	1-09811-339-0		1103-		08	A NSK
9	--- PLUG; KNUCKLE					
	8-97329-621-0		1103-		01	A M14X14
11	--- RING; SNAP, KNUCKLE PLUG					
	1-09589-017-1		1103-		02	A
17	--- BOLT; STOPPER KNUCKLE					
	1-09009-191-0		1103-		01	A (A) M14X47
	8-98065-261-0		1103-		02	A (B) M14X53
18	--- NUT; STOPPER BOLT, KNUCKLE					
	0-91112-814-0		1103-		03	A M14
21	--- NIPPLE; GREASE, KING PIN					
	0-90301-410-0		1103-		02	A (A) PT1/8 STRAIGHT
	0-90301-510-0		1103-		02	A (B) PT1/8 ELBOW 67.5°

https://truckmanualshub.com/

4-10 FRONT AXLE

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
25	--- BEARING; THRUST, KING PIN						
	1-09829-031-0		1103-	R	01	A	NSK
	1-09829-033-1		1103-	L	01	A	NSK
30	--- WASHER; THRUST, KING PIN						
	1-43171-261-1		1103-		AR	A	T=3.900
	1-43171-262-1		1103-		AR	A	T=3.912
	1-43171-263-1		1103-		AR	A	T=3.925
	1-43171-264-1		1103-		AR	A	T=3.937
	1-43171-265-1		1103-		AR	A	T=3.950
	1-43171-266-1		1103-		AR	A	T=3.962
	1-43171-267-1		1103-		AR	A	T=3.975
	1-43171-268-1		1103-		AR	A	T=3.987
	1-43171-269-1		1103-		AR	A	T=4.000
	1-43171-270-1		1103-		AR	A	T=4.012
	1-43171-271-1		1103-		AR	A	T=4.025
	1-43171-272-1		1103-		AR	A	T=4.037
	1-43171-273-1		1103-		AR	A	T=4.050
	1-43171-274-1		1103-		AR	A	T=4.062
	1-43171-275-1		1103-		AR	A	T=4.075
	1-43171-276-1		1103-		AR	A	T=4.087
	1-43171-277-1		1103-		AR	A	T=4.100

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	
						A LEAF SUS(FCR5CS)	
30	--- WASHER; THRUST, KING PIN						
	1-43171-278-1		1103-		AR	A	T=4.112
	1-43171-279-1		1103-		AR	A	T=4.125
	1-43171-280-1		1103-		AR	A	T=4.137
	1-43171-281-1		1103-		AR	A	T=4.150
	1-43171-311-0		1103-		AR	A	T=4.162
	1-43171-312-0		1103-		AR	A	T=4.175
	1-43171-313-0		1103-		AR	A	T=4.187
	1-43171-314-0		1103-		AR	A	T=4.200
	1-43171-315-0		1103-		AR	A	T=4.212
	1-43171-316-0		1103-		AR	A	T=4.225
	1-43171-317-0		1103-		AR	A	T=4.237
	1-43171-318-0		1103-		AR	A	T=4.250
	1-43171-319-0		1103-		AR	A	T=4.262
	1-43171-320-0		1103-		AR	A	T=4.275
	1-43171-321-0		1103-		AR	A	T=4.287
	1-43171-322-0		1103-		AR	A	T=4.300
	1-43171-323-0		1103-		AR	A	T=4.312
	1-43171-324-0		1103-		AR	A	T=4.325
	1-43171-325-0		1103-		AR	A	T=4.337
	1-43171-326-0		1103-		AR	A	T=4.350

https://truckmanualshub.com/

4-10 FRONT AXLE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
32	--- BOLT; KEY, KING PIN					
	1-43116-013-0		1103-		02	A
33	--- NUT; KEY BOLT					
	0-91110-510-0		1103-		02	A M10
34	--- WASHER; LK, KEY BOLT					
	0-91510-510-0		1103-		02	A ID=10.2
36	--- ARM; KNUCKLE					
	8-98037-304-1		1103-		01	A
44	--- COVER; KING PIN					
	1-43175-031-0		1103-		02	A
46	--- WASHER; LK, COVER					
	0-91510-812-0		1103-		02	A ID=12.2
47	--- WASHER; PL, COVER, KING PIN					
	0-91614-712-0		1103-		02	A ID=12.5 OD=32
48	--- BOLT; COVER					
	1-09009-081-0		1103-		02	A M12X25
58	--- ARM; TIE ROD					
	8-98037-296-1		1103-		01	A
59	--- NUT; TIE ROD ARM					
	1-09449-082-0		1103-		02	A M27 FLANGE
61	-B- ROD END; TIE ROD					
	1-43150-748-1		1103-	R	01	A
	1-43150-749-1		1103-	L	01	A
66	--- NUT; TIE ROD END					
	1-09442-031-0		1103-		02	A M16 SLOTTED


https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
68	--- BOLT; TIE ROD END					
	0-28061-245-0		1103-		02	A M12X45 FLANGE
74	--- NUT; TIE ROD END					
	0-91110-512-0		1103-		02	A M12
80	--- PIN; SPLIT, ROD END					
	0-81124-022-0		1103-		02	A OD=3.7 L=22
81	--- ROD; TIE					
	8-98038-703-1		1103-		01	A
275	--- BOOT; ROD END, TIE					
	1-85574-046-0		1103-		02	A
304	--- WASHER; PL					
	0-91614-512-0		1103-		02	A ID=12.5
305	--- COVER; KNUCKLE					
	1-43175-030-0		1103-		02	A

https://truckmanualshub.com/

4-11 FRONT HUB AND DRUM OR ROTOR

FIG-NO.

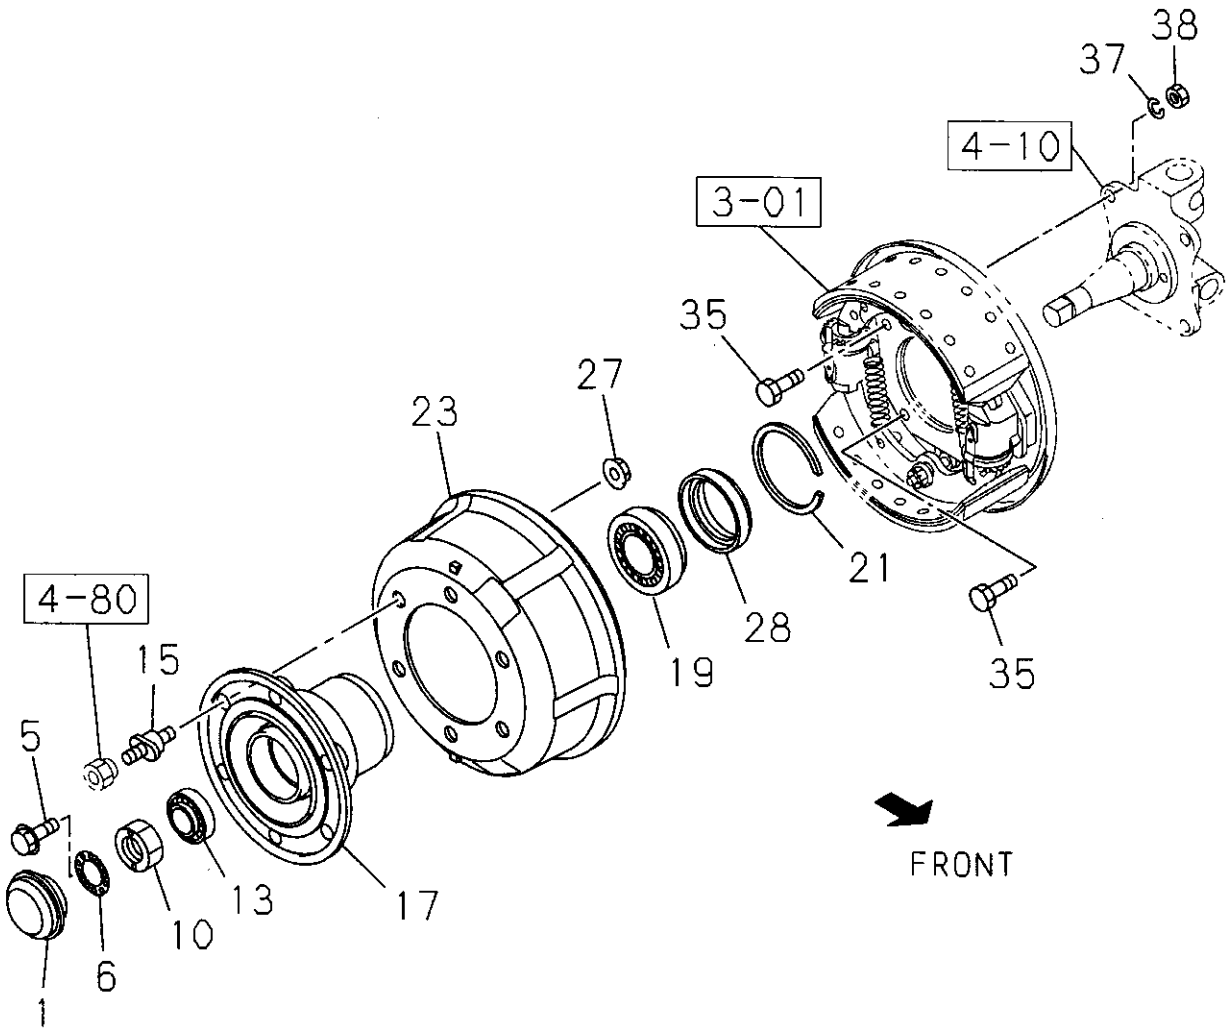

https://truckmanualshub.com/

FRONT HUB AND DRUM OR ROTOR

4-11

FIG-NO.

KEY NO.	RECOMMEND CLASS／PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- CAP; HUB, FRT AXLE					
	1-42313-032-0		1103-		02	A
5	--- BOLT; LK WASHER					
	0-28650-616-0		1103-		04	A M6X16 FLANGE
6	-B- WASHER; LK, FRT HUB					
	1-09841-003-0		1103-		02	A ID=39
10	-B- NUT; FRT HUB BRG					
	1-09840-019-1		1103-		02	A M39
13	-B- BEARING; HUB OUTER, FRT AXLE					
	1-09812-207-0		1103-		02	A KOYO
15	-B- PIN; WHEEL, FRT AXLE					
	1-42331-112-1		1103-	R	06	A M24X37.5,M22X51.5 RH THREAD
	1-42332-112-1		1103-	L	06	A M24X37.5 LH THREAD,M22X51.5 RH THREAD
17	--- HUB; FRT AXLE					
	1-42312-104-0		1103-		02	A
19	-B- BEARING; HUB INNER, FRT AXLE					
	1-09812-206-0		1103-		02	A KOYO
21	--- RING; SNAP, HUB					
	1-09587-001-0		1103-		02	A OD=117
23	--- DRUM; BRK, FRT					
	1-42315-359-1		1103-		02	A
27	-B- NUT; WHEEL PIN, FRT AXLE					
	1-09440-065-0		1103-		12	A M22 FLANGE
28	-B- SEAL; OIL, FRT HUB					
	1-09625-568-0		1103-		02	A

https://truckmanualshub.com/

4-11 FRONT HUB AND DRUM OR ROTOR


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
35	--- BOLT; DRUM COVER					
	0-20951-445-0		1103-		08	A M14X45
37	--- WASHER; LK, BACK PLATE					
	0-91510-814-0		1103-		08	A ID=14.2
38	--- NUT; BACK PLATE					
	0-91110-514-0		1103-		08	A M14

https://truckmanualshub.com/

4-20 REAR AXLE CASE AND SHAFT

FIG-NO.

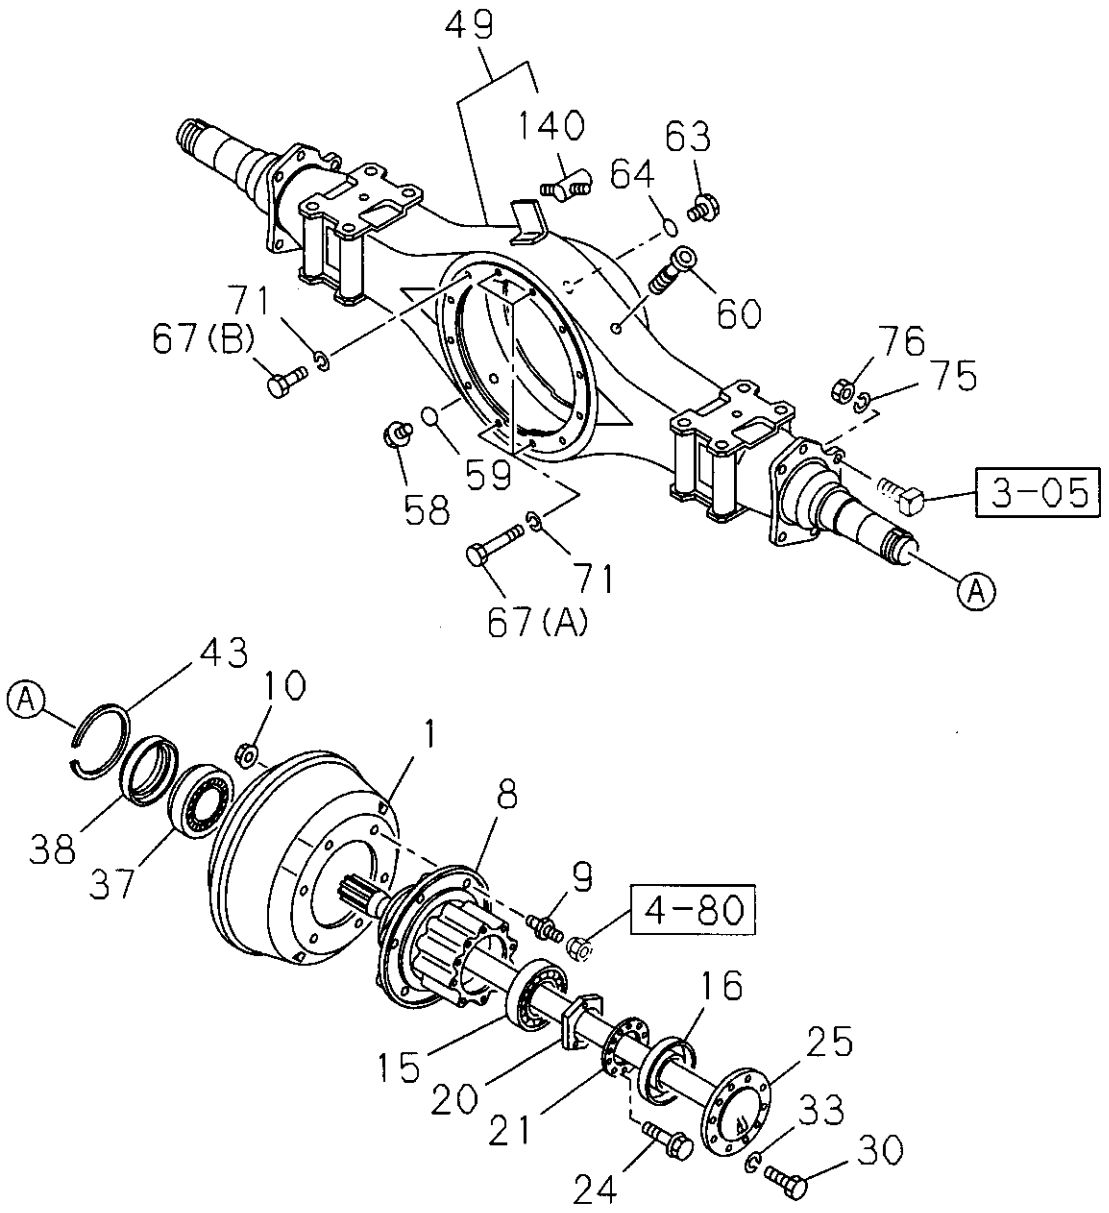

https://truckmanualshub.com/

REAR AXLE CASE AND SHAFT

4-20

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- DRUM; BRK, RR					
	1-42315-361-0		1103-		02	A
8	--- HUB; RR AXLE					
	1-42311-009-6		1103-		02	A
9	-B- PIN; WHEEL, RR AXLE					
	1-42331-106-2		1103-	R	06	A M20X34.5,M22X43.5 RH THREAD
	1-42332-106-2		1103-	L	06	A M20X34.5 LH THREAD,M22X43.5 RH THREAD
10	-B- NUT; WHEEL PIN, RR AXLE					
	1-09440-065-0		1103-		12	A M22 FLANGE
15	-B- BEARING; HUB OUTER, RR AXLE					
	8-98156-814-0		1103-		02	A KOYO
	9-00093-159-0		1103-		02	A NSK
16	-B- SEAL; OIL, RR HUB, OUTER					
	1-09625-331-1		1103-		02	A TKK
20	-B- NUT; BRG, RR HUB					
	9-09843-721-2		1103-		02	A M64
21	-B- WASHER; LK, BRG NUT					
	9-09854-122-0		1103-		02	A ID=64
24	--- BOLT; LK WASHER					
	0-28650-616-0		1103-		06	A M6X16 FLANGE
25	--- SHAFT; AXLE, RR					
	8-97380-682-0		1103-		02	A L=925
30	--- BOLT; HUB TO AXLE SHAFT					
	9-09804-239-1		1103-		20	A M12X45

https://truckmanualshub.com/

4-20 REAR AXLE CASE AND SHAFT

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
33	--- WASHER; AXLE SHAFT						
		0-91510-812-0		1103-		20	A ID=12.2
37	-B- BEARING; HUB INNER, RR AXLE						
		1-09812-153-0		1103-		02	A NSK
		1-09812-154-0		1103-		02	A KOYO
38	-B- SEAL; OIL, RR HUB, INNER						
		1-09625-569-0		1103-		02	A TKK
43	--- RING; SNAP, HUB SEAL, RR AXLE						
		9-09950-201-0		1103-		02	A
49	--- CASE; RR AXLE						
		8-98173-586-0		1103-		01	A
58	--- PLUG; DRAIN, AXLE CASE						
		1-09604-023-0		1103-		01	A M24X17 FLANGE
59	--- GASKET; DRAIN PLUG						
		9-09920-605-0		1103-		01	A ID=26.8
60	--- BREATHER; RR AXLE CASE						
		1-09893-003-0		1103-		01	A
63	--- PLUG; OIL FILLER, AXLE CASE						
		1-09604-022-0		1103-		01	A M24X17 FLANGE
64	--- GASKET; OIL FILLER, AXLE CASE						
		9-09920-605-0		1103-		01	A ID=26.8
67	--- BOLT; FINAL DRIVE SETTING						
		0-10956-260-0		1103-		04	A (A) M12X60
		0-20951-235-0		1103-		08	A (B) M12X35

https://truckmanualshub.com/


REAR AXLE CASE AND SHAFT

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
71	--- WASHER; LK, FINAL DRIVE SETTING					
	0-91510-812-0		1103-		12	A
						ID=12.2
75	--- WASHER; LK, RR BRK ASM SETTING					
	0-91510-814-0		1103-		12	A
						ID=14.2
76	--- NUT; RR BRK ASM SETTING					
	0-91110-514-0		1103-		12	A
						M14
140	--- CONNECTOR; AXLE CASE					
	1-09656-239-3		1103-		01	A

https://truckmanualshub.com/

4-25 REAR FINAL DRIVE

FIG-NO.

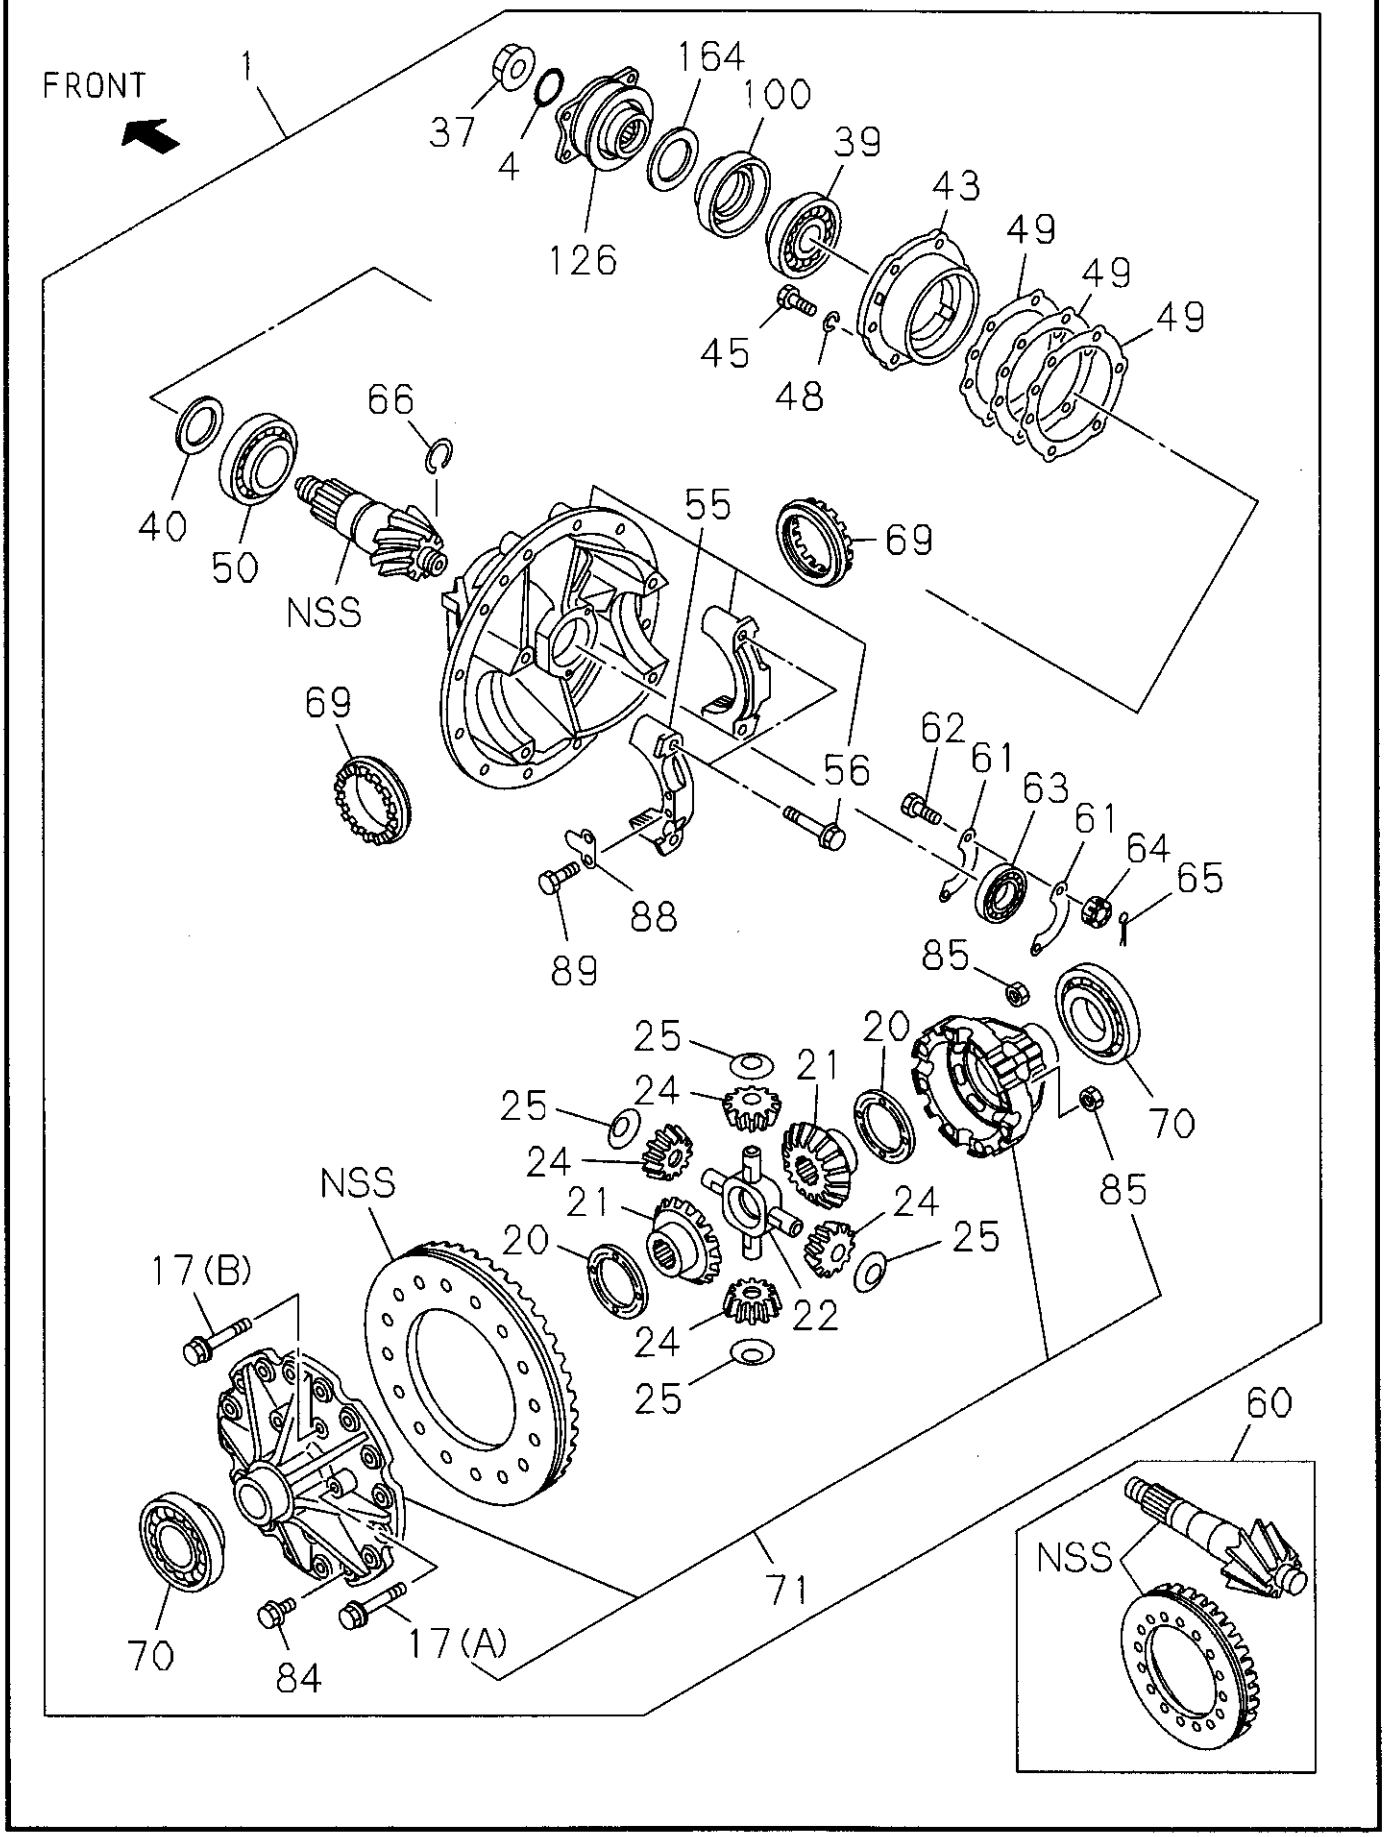

https://truckmanualshub.com/

REAR FINAL DRIVE

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A FINAL GEAR 39/7 14.5"(W1H) B FINAL GEAR 41/8 14.5"(W4F)
1	-D- DRIVE ASM; FINAL, RR					
	1-41003-255-0		1103-	01	A	39/7
	1-41003-254-0		1103-	01	B	41/8
4	--- GASKET; FLANGE, FINAL PINION					
	1-09623-582-0		1103-	01	AB	ID=37.5 T=4
17	--- BOLT; DIFF CAGE SETTING					
	1-09044-006-0		1103-	04	AB	(A) M14X121 FLANGE
	1-09044-007-0		1103-	04	AB	(B) M14X95 FLANGE
20	--- WASHER; THRUST, SIDE GEAR					
	1-41562-061-0		1103-	AR	AB	T=2.80
	1-41562-062-0		1103-	AR	AB	T=3.00
	1-41562-063-0		1103-	AR	AB	T=3.20
	1-41562-064-0		1103-	AR	AB	T=3.40
	1-41562-080-0		1103-	AR	AB	T=2.90
	1-41562-081-0		1103-	AR	AB	T=3.10
	1-41562-082-0		1103-	AR	AB	T=3.30
21	--- GEAR; SIDE, DIFF					
	1-41561-149-0		1103-	02	AB	Z=16
22	--- PIN; CROSS, DIFF PINION					
	1-41521-050-2		1103-	01	AB	
24	--- GEAR; PINION, DIFF					
	1-41551-049-0		1103-	04	AB	Z=10

https://truckmanualshub.com/

4-25 REAR FINAL DRIVE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A FINAL GEAR 39/7 14.5"(W1H)
						B FINAL GEAR 41/8 14.5"(W4F)
25	--- WASHER; THRUST, PINION					
	1-41562-119-0		1103-		04 AB	ID=29 OD=60
37	--- NUT; DRIVING PINION					
	1-09449-083-0		1103-		01 AB	M36 FLANGE
39	--- BEARING; FINAL PINION					
	5-09812-062-1		1103-		01 AB	KOYO
	5-09812-063-0		1103-		01 AB	NSK
40	--- SHIM; FINAL PINION					
	1-41229-179-0		1103-		AR AB	T=1.60
	1-41229-180-0		1103-		AR AB	T=1.61
	1-41229-181-0		1103-		AR AB	T=1.62
	1-41229-182-0		1103-		AR AB	T=1.63
	1-41229-183-0		1103-		AR AB	T=1.64
	1-41229-184-0		1103-		AR AB	T=1.65
	1-41229-185-0		1103-		AR AB	T=1.66
	1-41229-186-0		1103-		AR AB	T=1.67
	1-41229-187-0		1103-		AR AB	T=1.68
	1-41229-188-0		1103-		AR AB	T=1.69
	1-41229-189-0		1103-		AR AB	T=1.70
43	--- CAGE; FINAL PINION					
	1-41151-027-0		1103-		01 AB	

https://truckmanualshub.com/

REAR FINAL DRIVE

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A FINAL GEAR 39/7 14.5"(W1H) B FINAL GEAR 41/8 14.5"(W4F)
45	--- BOLT; FINAL PINION CAGE					
	9-02361-240-0		1103-	06	AB	M12X40
48	--- WASHER; LK, FINAL PINION					
	0-91510-812-0		1103-	06	AB	ID=12.2
49	--- SHIM; FINAL PINION CAGE					
	1-41154-021-1		1103-	AR	AB	T=0.50
	1-41154-051-1		1103-	AR	AB	T=0.30
	1-41154-052-1		1103-	AR	AB	T=0.40
	1-41154-053-1		1103-	AR	AB	T=1.00
50	--- BEARING; FINAL PINION					
	1-09812-041-2		1103-	01	AB	NSK
	1-09812-042-1		1103-	01	AB	KOYO
55	--- CARRIER; DIFF					
	1-41110-129-0		1103-	01	AB	
56	--- BOLT; BRG CAP					
	1-09070-047-0		1103-	04	AB	M16X100 FLANGE
60	--- GEAR SET; FINAL DRIVE, RR					
	1-41210-391-2		1103-	01	A	39/7
	1-41210-453-0		1103-	01	B	41/8
61	--- RETAINER; PILOT BRG, PINION					
	1-41227-006-0		1103-	02	AB	T=2.3
62	--- BOLT; RET					
	1-09042-046-0		1103-	02	AB	M8X35 W/PIN HOLE

https://truckmanualshub.com/

4-25 REAR FINAL DRIVE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A FINAL GEAR 39/7 14.5"(W1H)
						B FINAL GEAR 41/8 14.5"(W4F)
63	--- BEARING; PINION PILOT					
	1-09810-073-2		1103-		01	AB NSK
	1-09810-074-1		1103-		01	AB KOYO
64	--- NUT; RET					
	0-91117-508-0		1103-		02	AB M8 SLOTTED
65	--- PIN; SPLIT, RET					
	0-81122-012-0		1103-		02	AB
66	--- RING; SNAP, PILOT BRG					
	1-09588-214-0		1103-		01	AB OD=34.2
69	--- NUT; ADJ, DIFF CAGE					
	1-41121-013-0		1103-	R	01	AB M128 H=22
	1-41121-015-0		1103-	L	01	AB M128 H=30
70	--- BEARING; DIFF CAGE					
	1-09812-056-1		1103-	R	01	AB NSK ID=70 OD=125 T=33.3
	1-09812-058-1		1103-	L	01	AB NSK ID=70 OD=125 T=26.3
	1-09812-062-2		1103-	R	01	AB KOYO ID=70 OD=125 T=33.3
	1-09812-249-0		1103-	L	01	AB KOYO ID=70 OD=125 T=26.3
71	--- CAGE ASM; DIFF, FINAL DRIVE					
	1-41510-343-0		1103-		01	AB
84	--- BOLT; FINAL DRIVE GEAR					
	9-09802-575-1		1103-		16	AB M16X34.5 FLANGE
85	--- NUT; DIFF CAGE SETTING					
	1-09400-077-1		1103-		08	AB M14

https://truckmanualshub.com/


REAR FINAL DRIVE

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A FINAL GEAR 39/7 14.5"(W1H) B FINAL GEAR 41/8 14.5"(W4F)
88	--- PLATE; LK, ADJ NUT					
	9-41124-015-0		1103-		02 AB	T=2.3
89	--- BOLT; LK PLATE					
	8-94479-696-1		1103-		04 AB	M8X12 FLANGE
100	--- SEAL; OIL, FINAL PINION					
	1-09625-484-1		1103-		01 AB	NOK
	1-09625-637-0		1103-		01 AB	TKK
126	--- COUPLING; DRIVING PINION					
	1-37245-414-0		1103-		01 AB	
164	--- COLLAR; DIST, PINION					
	1-36355-031-0		1103-		01 AB	T=10.7
	1-36355-033-0		1103-		01 AB	T=10.90
	1-36355-035-0		1103-		01 AB	T=11.10
	1-36355-037-0		1103-		01 AB	T=11.30
	1-36355-039-0		1103-		01 AB	T=11.50
	1-36355-041-0		1103-		01 AB	T=11.70
	1-36355-043-0		1103-		01 AB	T=11.9
	1-36355-045-0		1103-		01 AB	T=12.10
	1-36355-047-0		1103-		01 AB	T=12.30

https://truckmanualshub.com/

4-30 STEERING WHEEL AND COWL

FIG-NO.

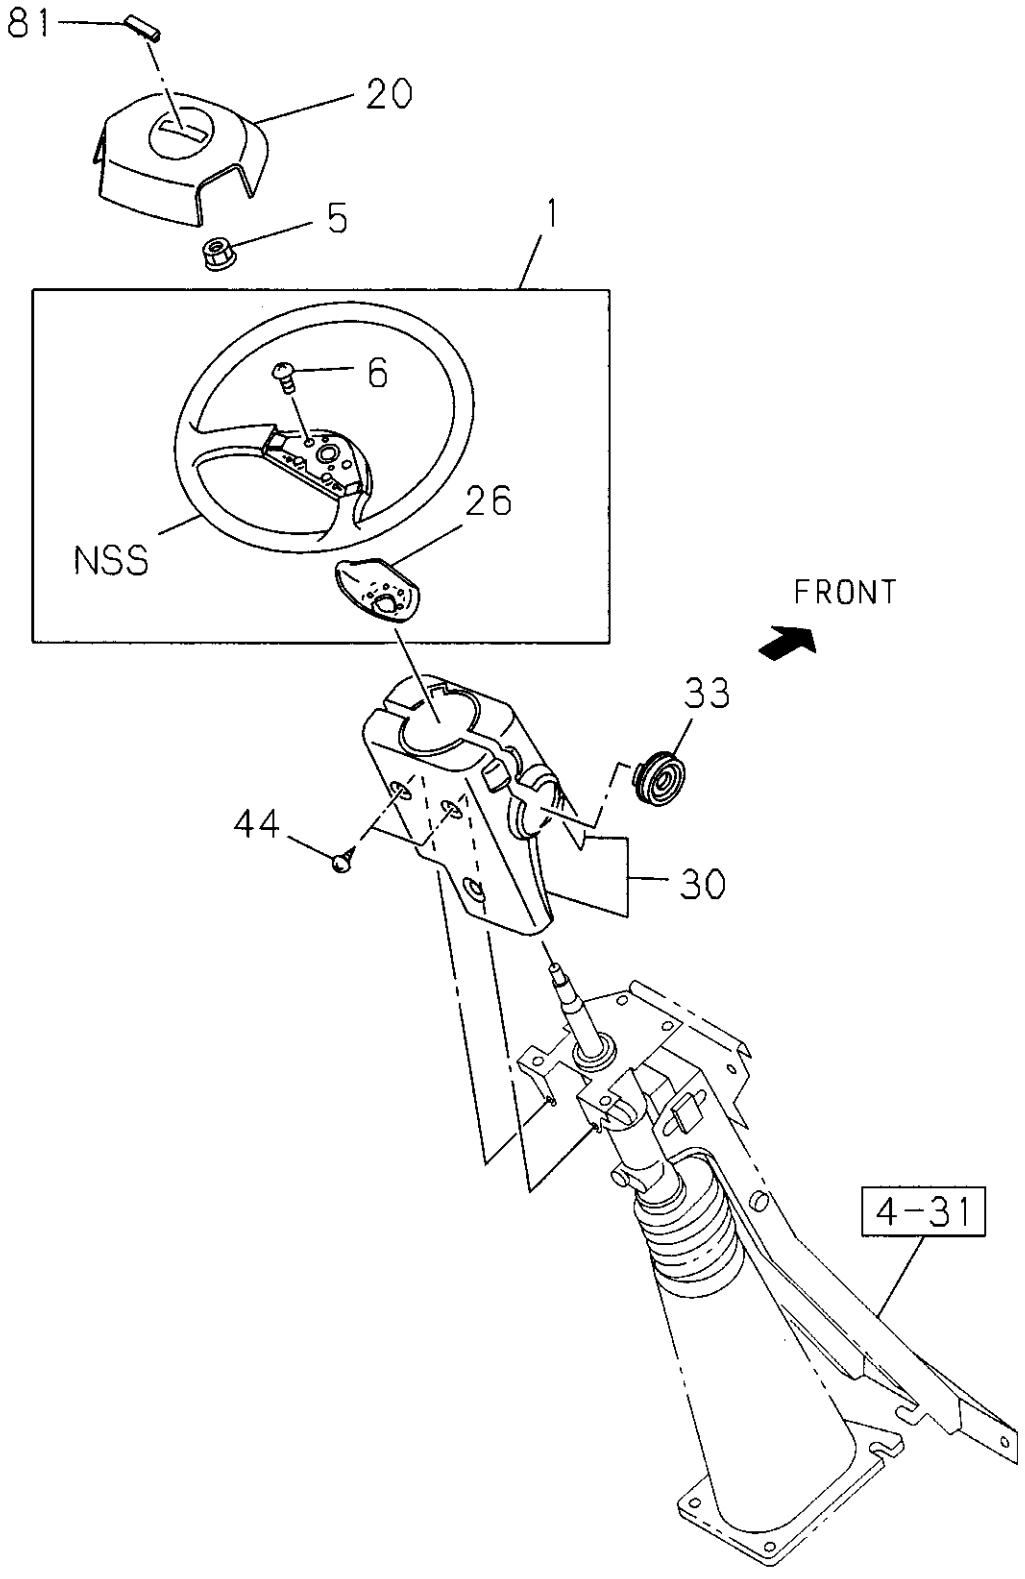

https://truckmanualshub.com/


STEERING WHEEL AND COWL

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- WHEEL; STRG	8-97412-555-0		1103-		01	A DARK GRAY
5	--- NUT; STRG WHEEL TO SHAFT	0-91111-514-0		1103-		01	A M14
6	--- SCREW; HORN SPR CONTACT	8-97167-588-0		1103-		04	A M4X12
20	--- SHROUD; PAD, STRG WHEEL	8-97405-985-1		1103-		01	A DARK GRAY
26	--- COVER; STRG WHEEL, LWR	8-97409-275-2		1103-		01	A DARK GRAY
30	--- COWL; STEERING	8-97405-356-5		1103-		01	A DARK GRAY
33	--- COVER; STRG COWL	8-97409-495-0		1103-		01	A DARK GRAY
44	--- SCREW; STRG COWL	0-38050-512-0		1103-		03	A M5X12
81	--- EMBLEM; STRG WHEEL	8-97405-986-0		1103-		01	A DARK GRAY

https://truckmanualshub.com/

4-31 STEERING COLUMN AND SHAFT

FIG-NO.

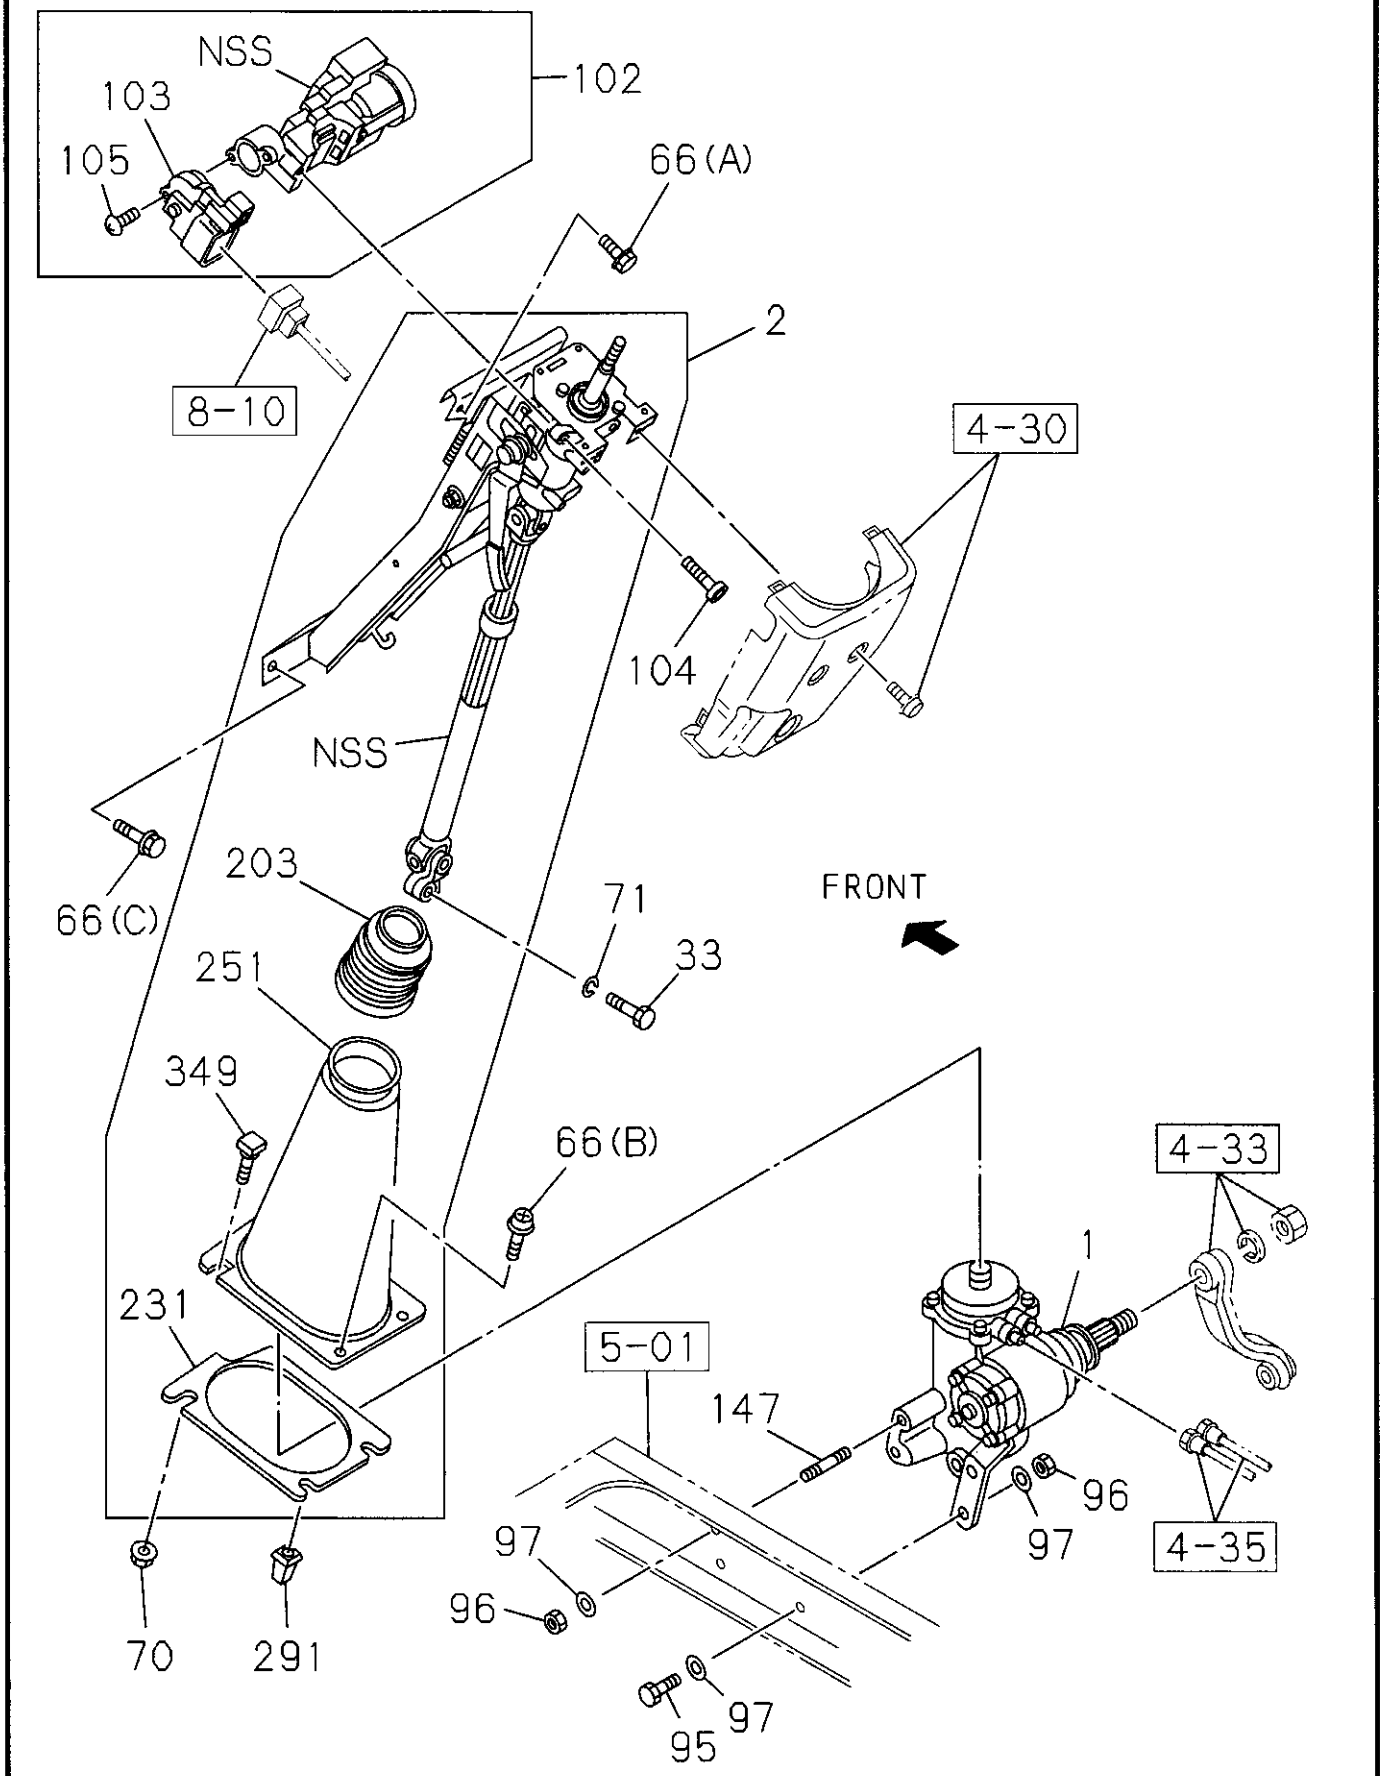

https://truckmanualshub.com/

STEERING COLUMN AND SHAFT

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	-D- STEERING UNIT					
	1-44000-951-1		1103-		01	A SEE FIG-NO 4-40 FOR COMPONENT.
2	--- SHAFT ASM; STRG					
	8-97415-617-1		1103-		01	A BLACK
33	--- BOLT; STRG SHAFT TO UNIT					
	1-09009-126-1		1103-		01	A M10X35
66	--- BOLT; STRG COLUMN					
	0-28650-820-0		1103-		02	A (A) M8X20 FLANGE IDN
	0-72180-518-0		1103-		02	A (B) M5X18 TAPPING
	8-98018-439-0		1103-		02	A (C) M8X25 W/LK&PL WASHER
70	--- NUT; STRG COLUMN					
	1-09984-180-0		1103-		02	A M6 FLANGE W/RUBBER
71	--- WASHER; LK, SHAFT TO UNIT					
	0-91510-810-0		1103-		01	A ID=10.2 IDN
95	--- BOLT; STRG UNIT					
	1-09000-787-0		1103-		04	A M14X50
96	--- NUT; STRG UNIT					
	1-09440-097-0		1103-		05	A M14
97	--- WASHER; PL, STRG UNIT					
	8-98010-627-1		1103-		09	A ID=15
102	--- LOCK ASM; STRG					
	8-98006-150-0		1103-		01	A

https://truckmanualshub.com/

4-31 STEERING COLUMN AND SHAFT


FIG-NO.


KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
103	--- SWITCH; IGNITION	8-98045-349-0		1103-		01	A
104	--- BOLT; STRG LOCK TO COLUMN	8-97321-385-0		1103-		02	A M8X20
105	--- SCREW; IGN SW	8-98045-346-0		1103-		02	A
147	--- STUD; STRG UNIT	1-09300-125-0		1103-		01	A M14X37 L=66
203	--- BOOT; STRG COLUMN LWR	8-98137-333-0		1103-		01	A
231	--- SEAL; RUBBER, STRG COLUMN	8-98137-330-0		1103-		01	A
251	--- COVER; LWR	8-97417-050-0		1103-		01	A
291	--- GROMMET; STRG SHAFT COVER	8-94279-043-0		1103-		02	A D=7.8X7.8 L=18 NATURAL IDN
349	--- BOLT; COVER	8-98137-334-0		1103-		02	A


https://truckmanualshub.com/

4-33 STEERING LINKAGE

FIG-NO.

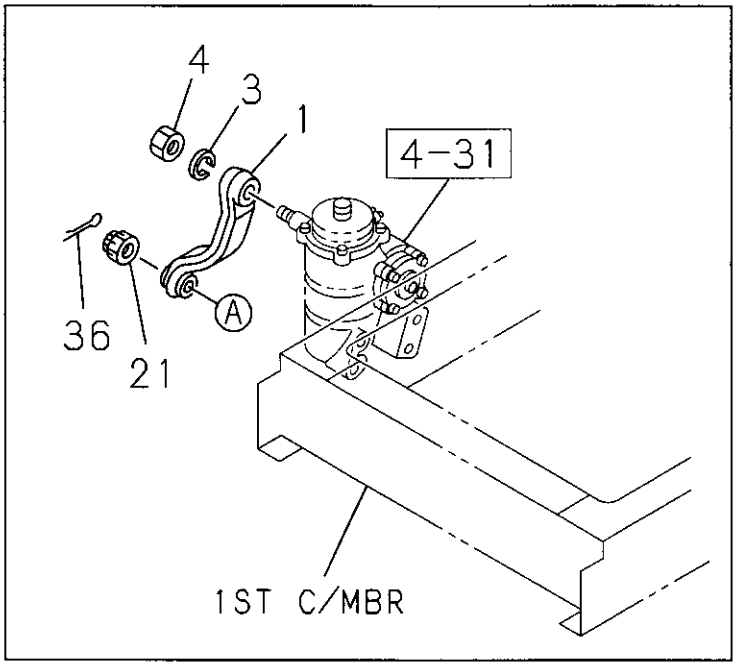

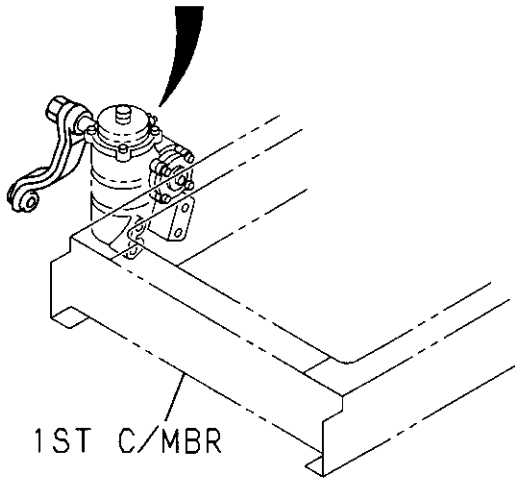

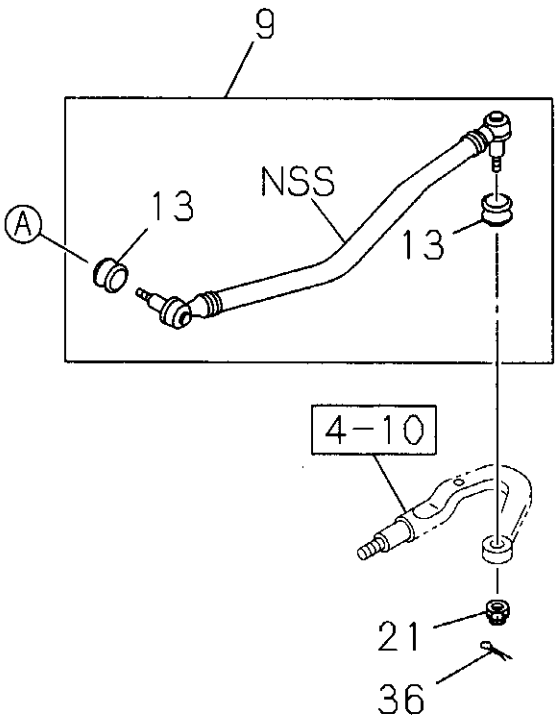

https://truckmanualshub.com/


STEERING LINKAGE


KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- ARM; PITMAN, STRG					
	8-98053-721-0		1103-		01	A
3	--- WASHER; LK, PITMAN ARM					
	1-09500-055-0		1103-		01	A ID=30.5
4	--- NUT; PITMAN ARM					
	1-09400-166-0		1103-		01	A M30
9	--- LINK; DRAG					
	1-44380-321-0		1103-		01	A
13	--- BOOT; DRAG LINK					
	1-85574-046-0		1103-		02	A
21	--- NUT; LK, JOINT BALL					
	1-09442-031-0		1103-		02	A M16 SLOTTED
36	--- PIN; SPLIT, DRAG LINK					
	0-81124-025-0		1103-		02	A OD=3.7 L=25


https://truckmanualshub.com/


4-35 POWER STEERING CONTROL; CHASSIS SIDE


FIG-NO. NO. 1

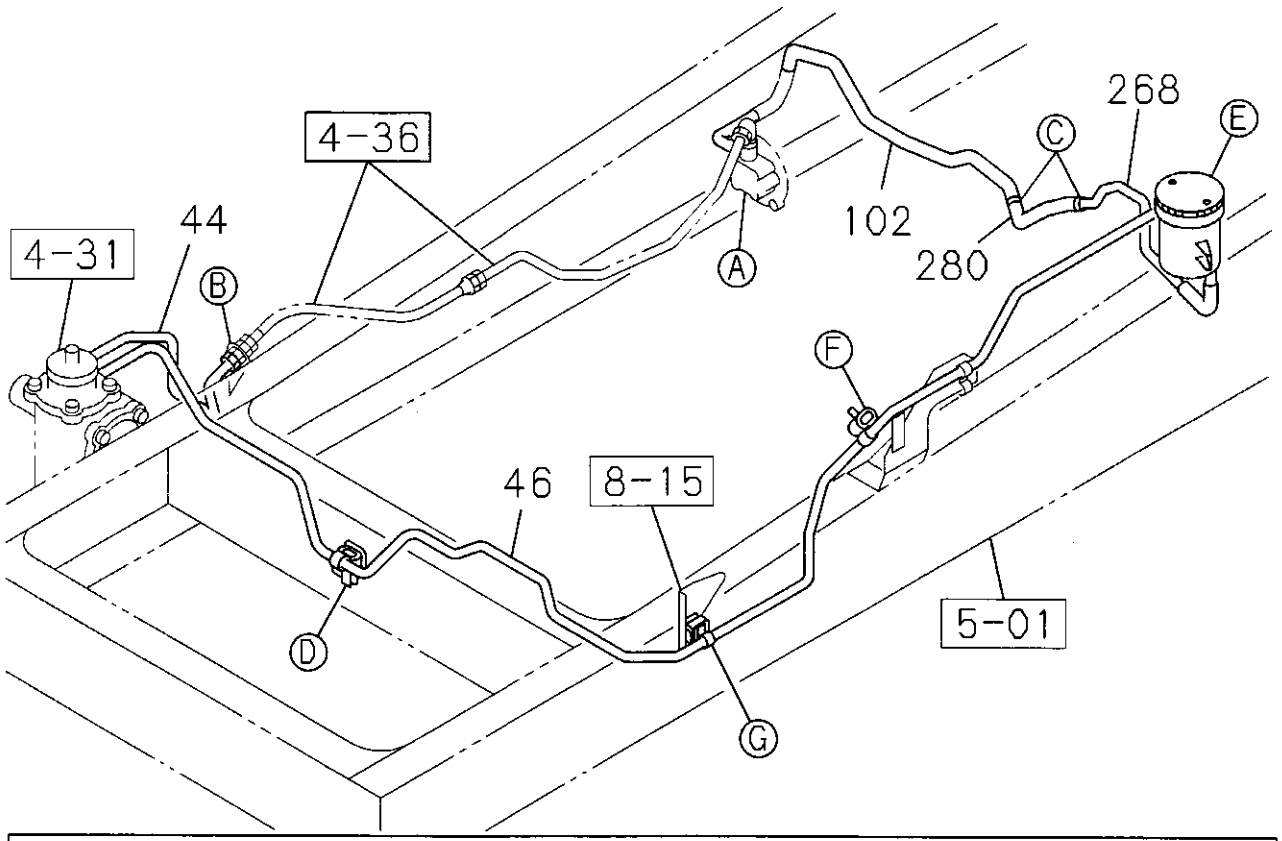

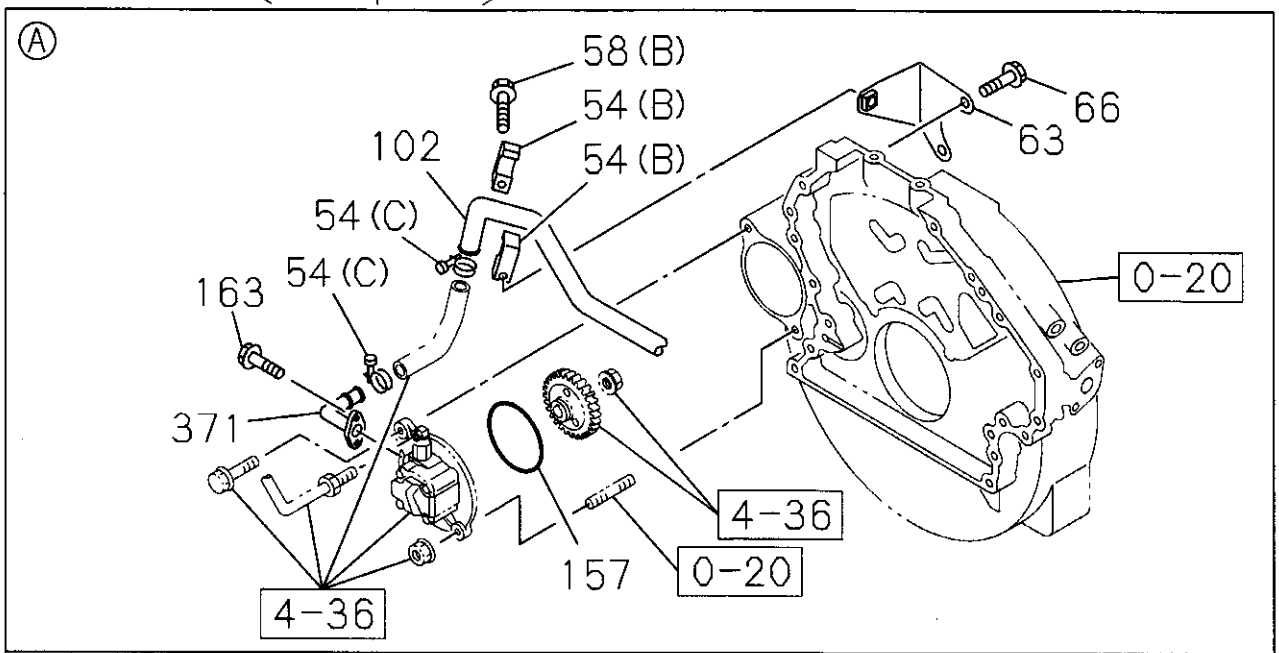

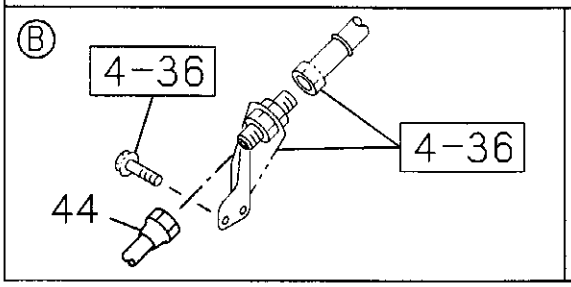

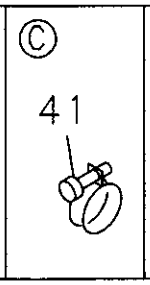


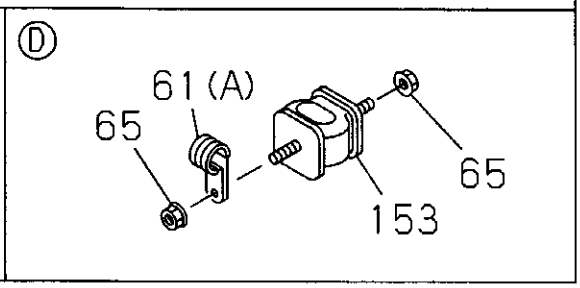

https://truckmanualshub.com/

POWER STEERING CONTROL; CHASSIS SIDE

NO. 2

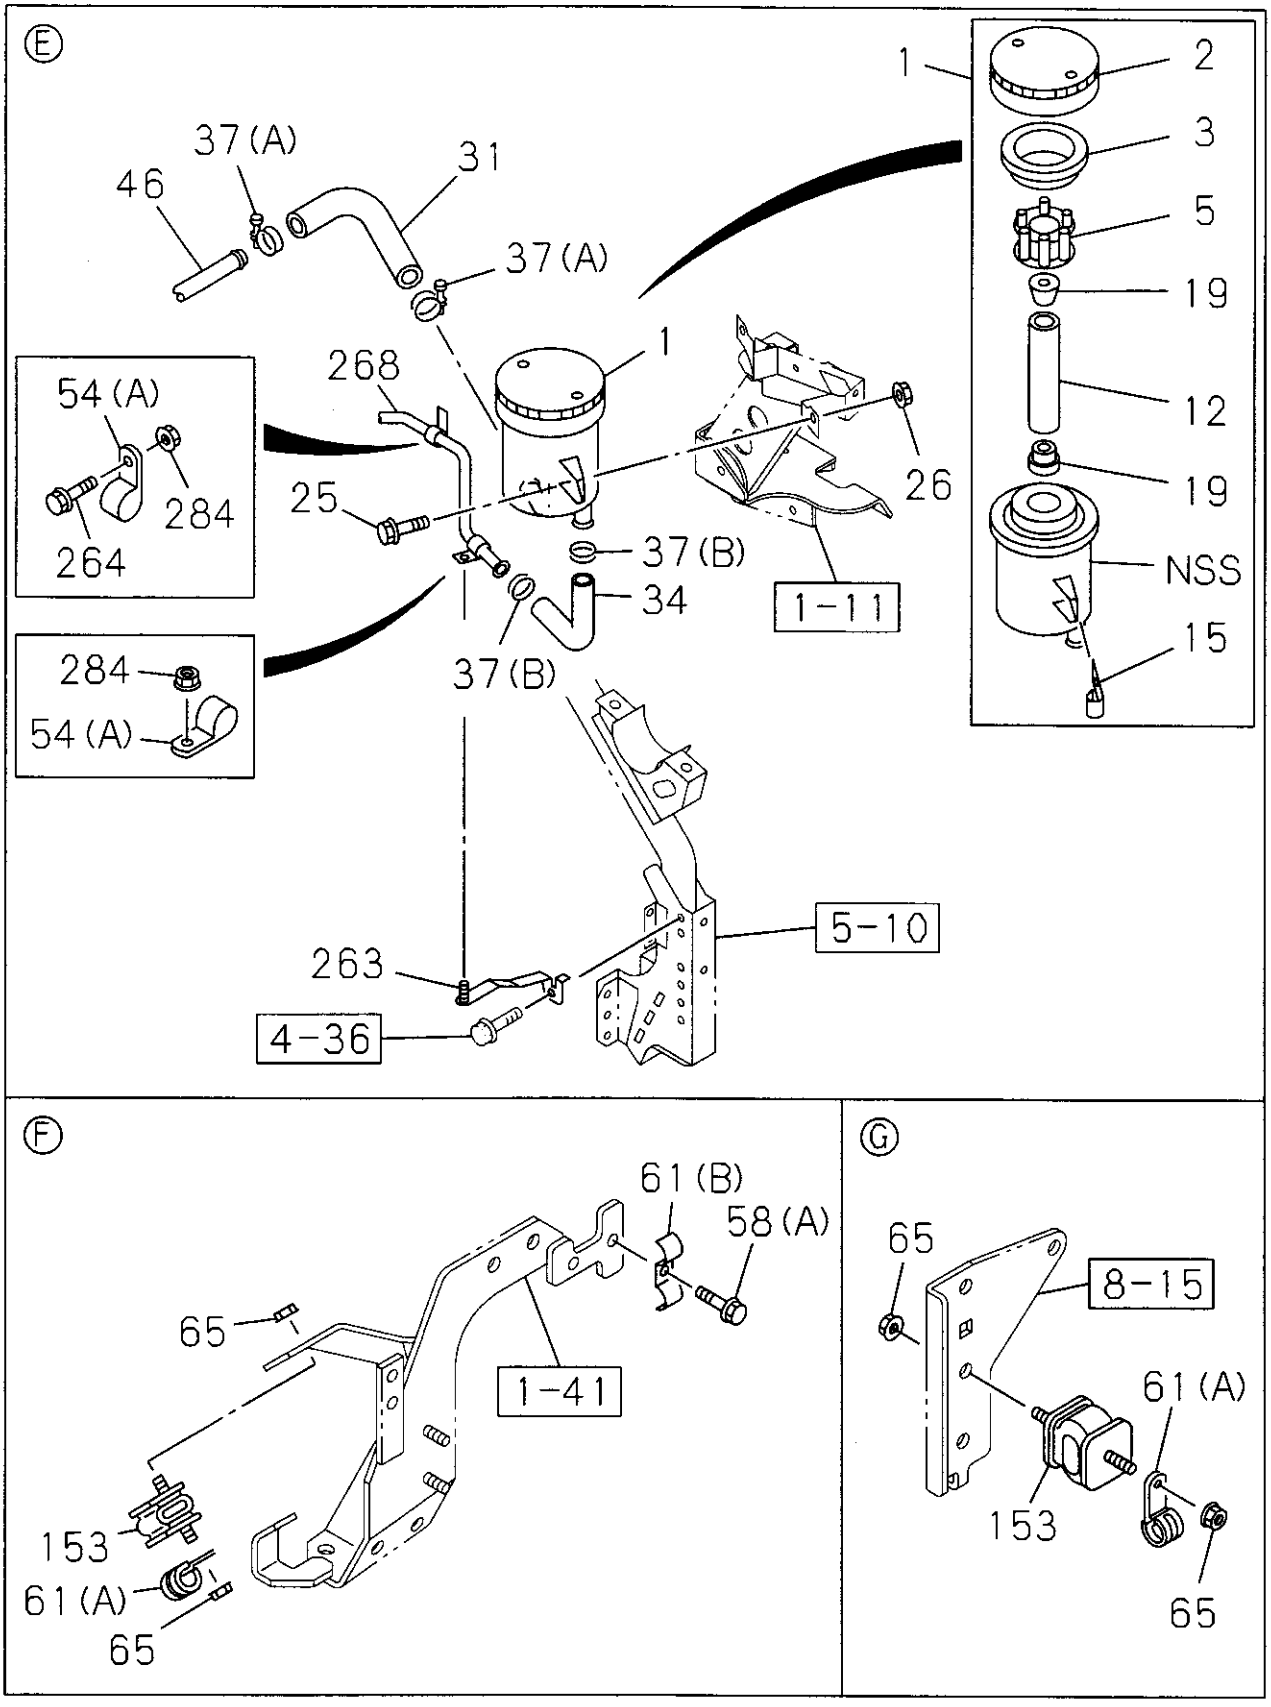

https://truckmanualshub.com/

4-35 POWER STEERING CONTROL; CHASSIS SIDE

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- TANK ASM; OIL, P/S	8-98166-928-0		1103-		01	A
2	--- CAP; OIL TANK, P/S	8-98166-876-0		1103-		01	A
3	--- GASKET; OIL TANK, P/S	1-21249-003-1		1103-		01	A
5	--- STRAINER; OIL TANK, P/S	1-21235-007-1		1103-		01	A
12	--- FILTER; MICROBON, OIL TANK, P/S	1-21235-011-0		1103-		01	A
15	--- PLATE; FILTER, OIL TANK	1-21249-016-0		1103-		02	A
19	--- SEAT; OIL TANK	1-21249-004-0		1103-		02	A
25	--- BOLT; OIL TANK BRKT	0-28650-825-0		1103-		02	A M8X25 FLANGE IDN
26	--- NUT; OIL TANK TO BRKT	0-91180-108-0		1103-		02	A M8 FLANGE
31	--- HOSE; P/S OIL TANK, INL	8-98077-740-0		1103-		01	A
34	--- HOSE; P/S OIL TANK, OUTLET	8-98021-827-0		1103-		01	A
37	--- CLIP; HOSE, P/S	1-09704-082-0		1103-		02	A (A) ID=26
		1-09704-085-0		1103-		02	A (B) ID=32

https://truckmanualshub.com/

POWER STEERING CONTROL; CHASSIS SIDE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
41	--- CLIP; HOSE, P/S					
	1-09704-085-0		1103-		02	A ID=32
44	--- PIPE; OIL, P/S UNIT TO NIPPLE					
	8-98077-661-0		1103-		01	A
46	--- PIPE; OIL, P/S UNIT TO OIL TANK					
	8-98080-958-0		1103-		01	A L=2394
54	--- CLIP; OIL PIPE					
	0-95235-836-0		1103-		02	A (A) ID=19 L=20
	1-09701-284-0		1103-		04	A (B)
	1-09704-085-0		1103-		02	A (C) ID=32
58	--- BOLT; CLIP					
	0-28050-816-0		1103-		01	A (A) M8X16 FLANGE
	0-28050-845-0		1103-		02	A (B) M8X45 FLANGE
61	--- CLIP; OIL PIPE					
	0-95235-536-0		1103-		03	A (A) ID=16 L=20
	1-09700-668-0		1103-		01	A (B) ID=16 & 13 L=21.5 & 21.5
63	--- BRACKET; CLIP, P/S					
	8-97375-107-0		1103-		01	A
65	--- NUT; BRKT					
	0-91180-108-0		1103-		06	A M8 FLANGE
66	--- BOLT; BRKT, OIL PIPE					
	0-28050-816-0		1103-		02	A M8X16 FLANGE

https://truckmanualshub.com/

4-35 POWER STEERING CONTROL; CHASSIS SIDE


FIG-NO.


KEY NO.	RECOMMEND CLASS／PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
102	--- PIPE; SUCTION, P／S					
	8-98080-186-2		1103-		01	A
153	--- RUBBER; CUSHION, POWER STRG PIPE					
	8-94158-156-1		1103-		03	A
157	--- GASKET; P／S PUMP					ALSO INCLUDED IN GASKET SET(ENGINE).
	8-97386-295-0		1103-		01	A ID=105.6
163	--- BOLT; OIL PIPE					
	0-28050-816-0		1103-		02	A M8X16 FLANGE
263	--- BRACKET; P／S PIPE					
	8-98130-274-0		1103-		01	A
264	--- BOLT; PIPE BRKT					
	0-28650-820-0		1103-		01	A M8X20 FLANGE IDN
268	--- PIPE; OIL, FLEX HOSE TO FLEX HOSE					
	8-98077-739-2		1103-		01	A
280	--- HOSE; P／S OIL PUMP, INL					
	8-98053-040-1		1103-		01	A
284	--- NUT; PIPE					
	0-91180-108-0		1103-		02	A M8 FLANGE
371	--- PIPE; OIL, INLET					
	8-98072-089-1		1103-		01	A

https://truckmanualshub.com/

4-36 POWER STEERING CONTROL; ENGINE SIDE

FIG-NO.

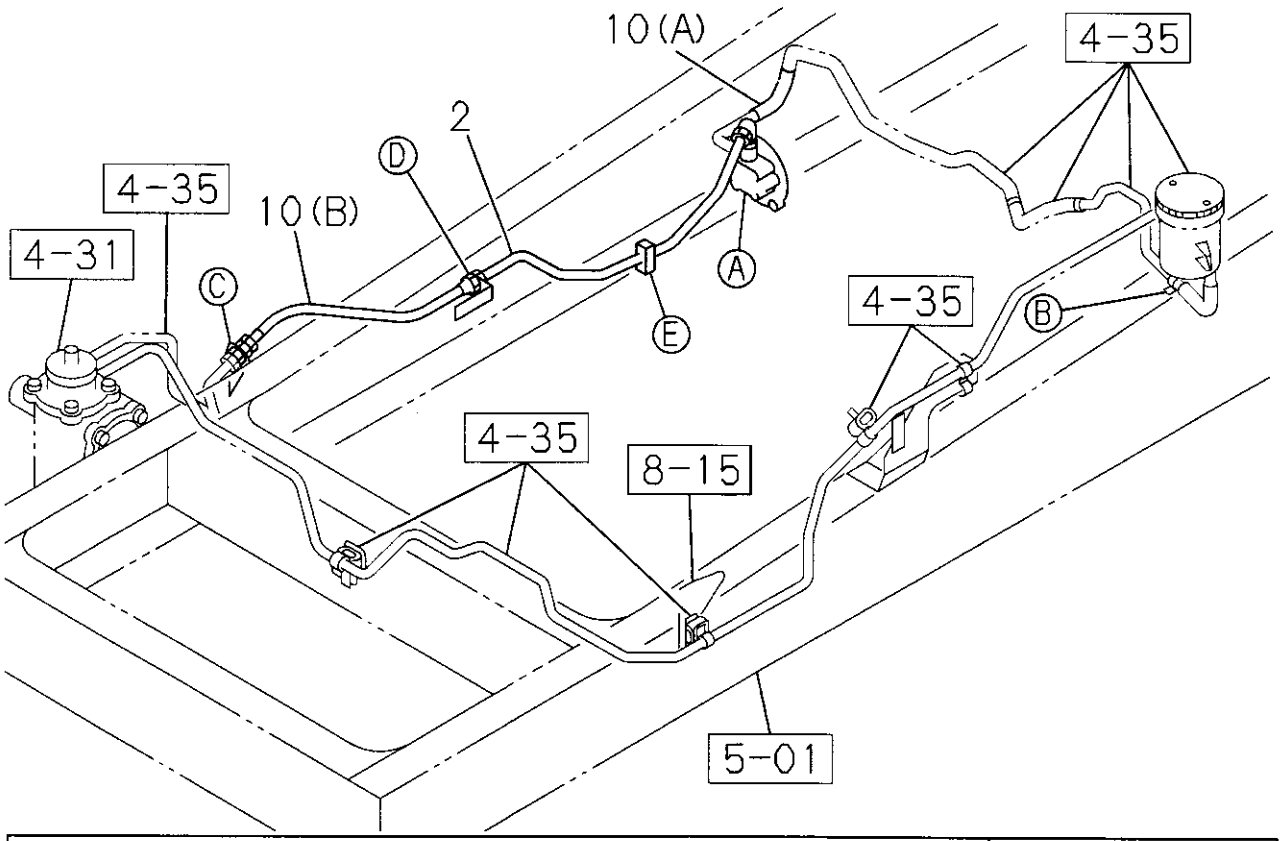

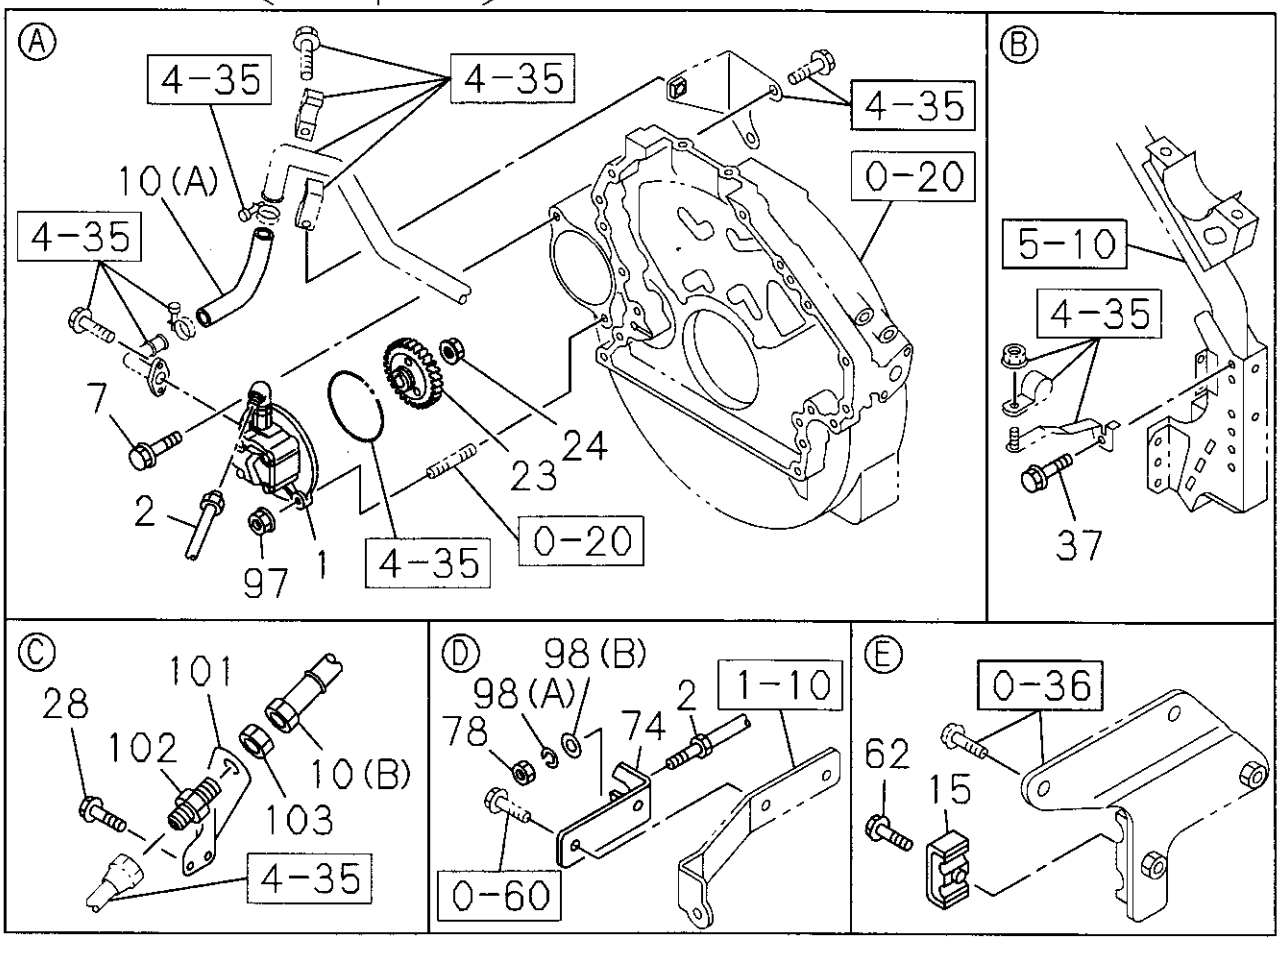

https://truckmanualshub.com/

POWER STEERING CONTROL; ENGINE SIDE

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	-D- PUMP ASM; OIL, P/S						SEE FIG-NO 4-42 FOR COMPONENT.
		1-19500-636-1		1103-		01	A
2	--- PIPE ASM; OIL, SUCTION						
		8-98086-746-0		1103-		01	A
7	--- BOLT; OIL PUMP, P/S						
		0-28751-030-0		1103-		01	A M10X30 FLANGE
10	--- HOSE; FLEX, P/S OIL PUMP, INL						
		1-09364-957-2		1103-		01	A (B) L=500
		1-21115-205-0		1103-		01	A (A)
15	--- CLIP; OIL PIPE SUCTION						
		1-09701-212-2		1103-		01	A ID=9 & 9 L=25
23	--- GEAR; OIL PUMP						
		8-94390-842-1		1103-		01	A Z=30
24	--- NUT; GEAR, P/S PUMP						
		0-91180-112-0		1103-		01	A M12 FLANGE IDN
28	--- BOLT; BRKT, FLEX HOSE, P/S						
		0-28050-825-0		1103-		02	A M8X25 FLANGE
37	--- BOLT; P/S PUMP						
		0-28650-825-0		1103-		01	A M8X25 FLANGE IDN
62	--- BOLT; CLIP						
		0-28151-080-0		1103-		02	A M10X80 FLANGE
		0-28650-630-0		1103-		01	A M6X30 FLANGE

https://truckmanualshub.com/

4-36 POWER STEERING CONTROL; ENGINE SIDE


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
74	--- BRACKET; PIPE	8-98060-044-1		1103-		01	A
78	--- NUT; BRKT	0-91111-520-0		1103-		01	A M20
97	--- NUT; OIL PUMP, P/S	0-91180-110-0		1103-		01	A M10 FLANGE
98	--- WASHER; LK, BRKT	0-91510-620-0		1103-		01	A (A) ID=20.2
		0-91610-520-0		1103-		01	A (B) ID=21
101	--- BRACKET; UNION	8-98076-297-0		1103-		01	A
102	--- UNION	1-09654-167-1		1103-		01	A M20 & M22 STRAIGHT
103	--- NUT; UNION	0-91111-522-0		1103-		01	A M22


https://truckmanualshub.com/

4-40 STEERING UNIT

FIG-NO. COMPONENT

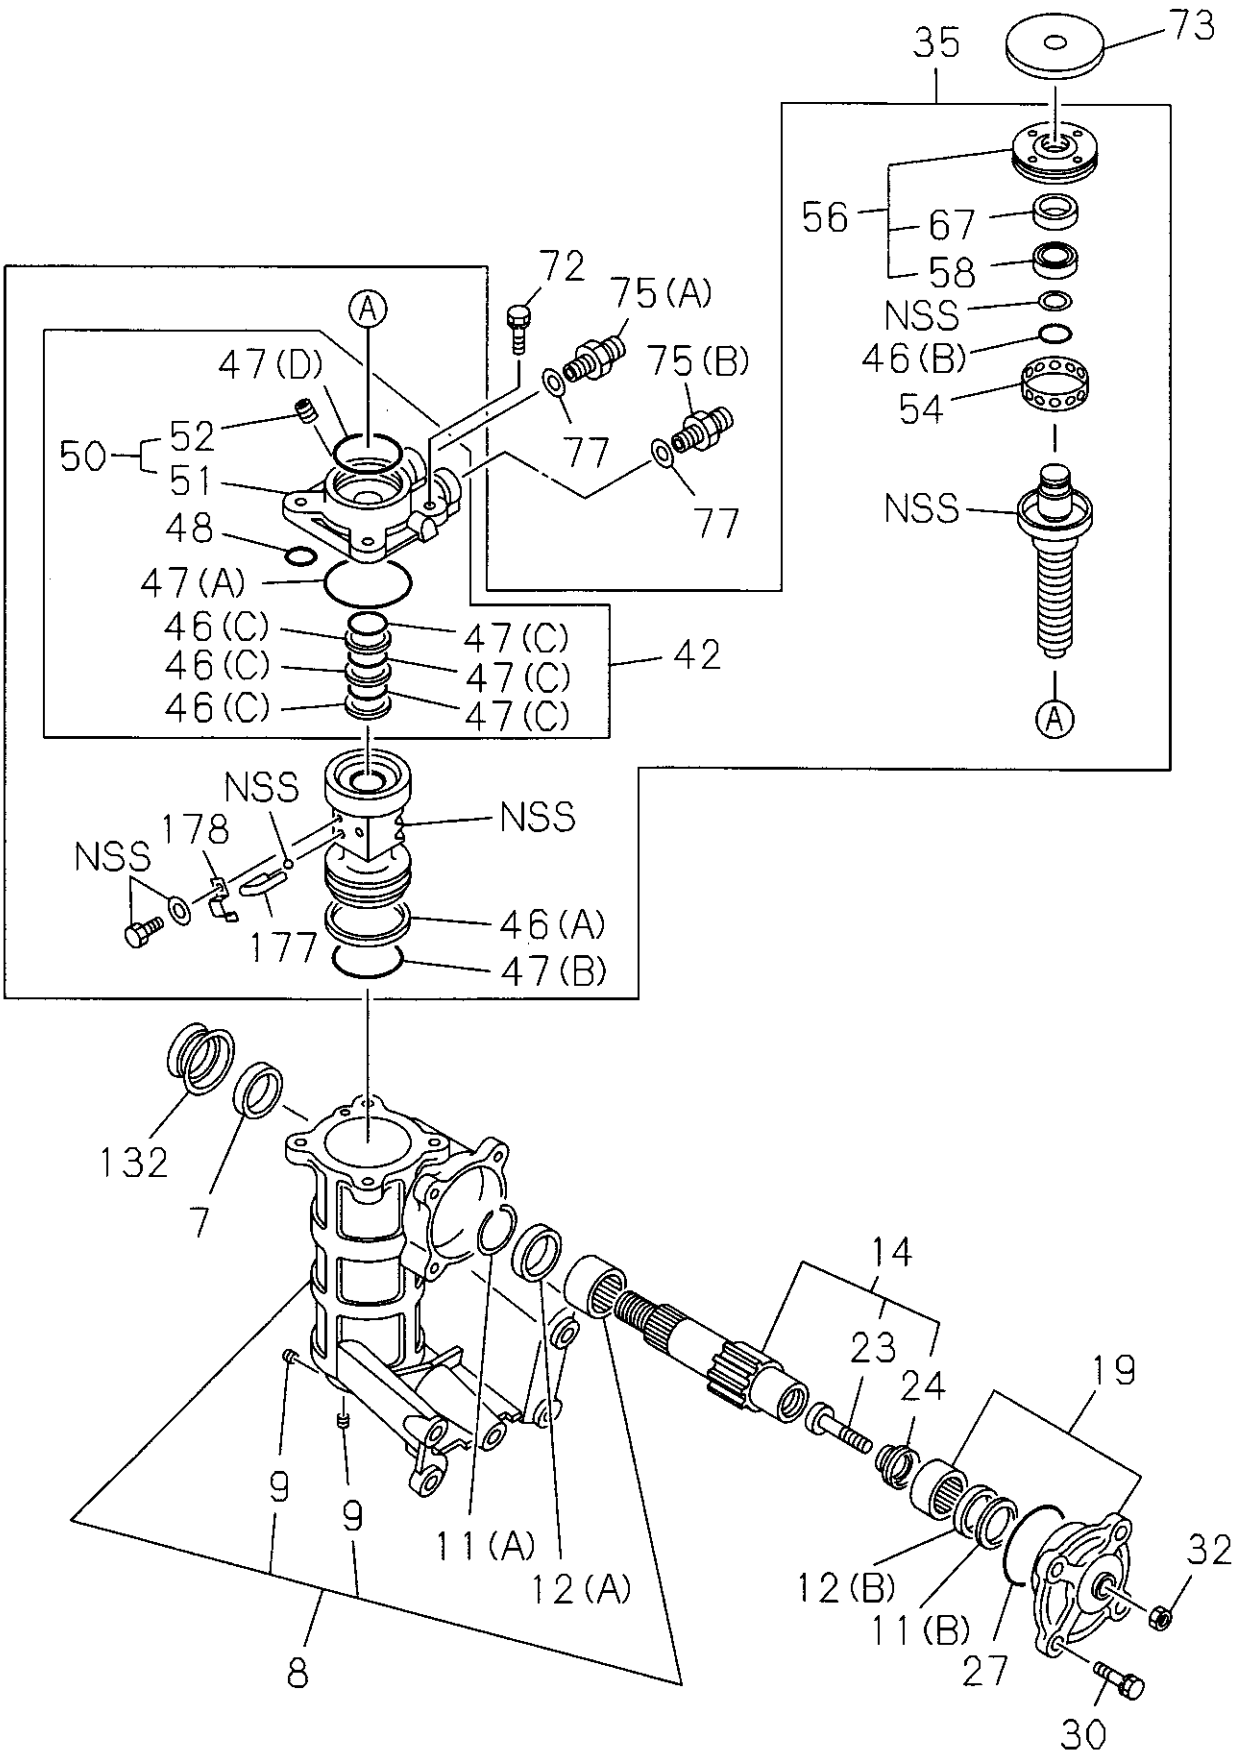

https://truckmanualshub.com/

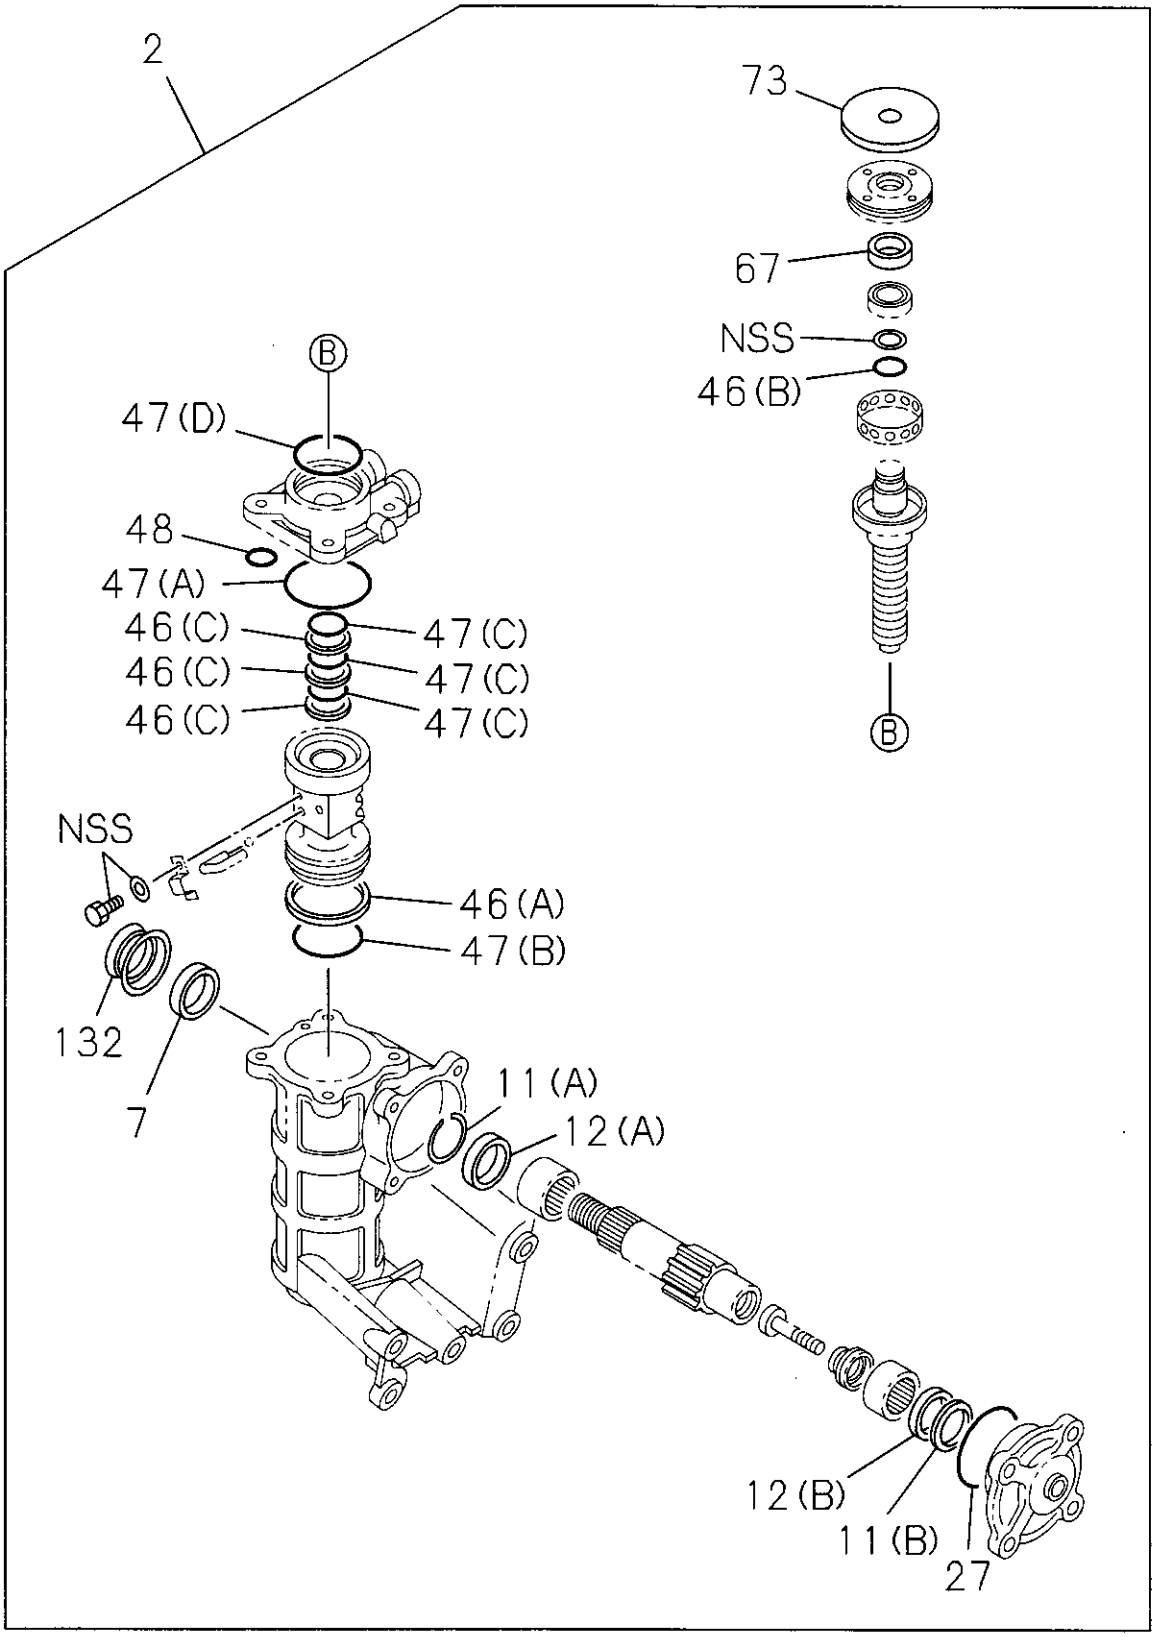

https://truckmanualshub.com/

4-40 STEERING UNIT

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	1440009511
2	-B- REPAIR KIT; STRG UNIT, 2 YEAR	
	1-85574-090-0	01
7	--- SEAL; SECTOR SHAFT, STRG UNIT	
	1-44519-157-1	01
8	--- BOX ASM; STRG UNIT	
	1-44240-157-0	01
9	--- PLUG; FILLER, STRG UNIT	
	1-44519-071-0	02
11	--- RING; BACKUP, STRG UNIT	
	1-44519-158-0	01 (A)
	1-44519-163-0	01 (B)
12	--- GASKET; SHAFT, STRG UNIT	
	1-44519-159-1	01 (A)
	1-44519-162-1	01 (B)
14	--- SHAFT; SECTOR, STRG UNIT	
	1-44320-012-0	01
19	--- COVER; SIDE STRG UNIT	
	1-44260-027-0	01
23	--- SCREW; ADJ, SECTOR SHAFT, STRG UNIT	
	1-44277-006-0	01
24	--- RETAINER; STRG UNIT	
	1-44279-015-0	01
27	--- GASKET; SIDE COVER, STRG UNIT	
	1-44519-161-0	01

https://truckmanualshub.com/

STEERING UNIT

KEY NO.	RECOMMEND CLASS / PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	1440009511
30	--- BOLT; COVER STRG UNIT	
	1-44569-103-0	04
32	--- NUT; ADJ SCREW, STRG UNIT	
	9-99110-512-0	01 M12 IDN
35	--- HOUSING & SCREW ASM; STRG UNIT	
	8-98095-566-0	01
42	--- HOUSING & SEAL ASM; STRG UNIT	
	1-44560-069-0	01
46	--- SEAL; RING, HSG STRG UNIT	
	1-44159-161-0	01 (A)
	1-44519-155-0	03 (C)
	8-98081-685-0	01 (B)
47	--- GASKET; HSG, STRG UNIT	
	1-44519-153-0	01 (A)
	1-44519-154-0	01 (B)
	1-44519-156-0	03 (C)
	1-44519-165-0	01 (D)
48	--- GASKET; HSG, STRG UNIT	
	1-44519-262-0	01
50	--- HOUSING ASM; VALVE STRG UNIT	
	1-44560-068-0	01
51	--- HOUSING; VALVE STRG UNIT	
	1-44561-017-0	01
52	--- PLUG; HSG STRG UNIT	
	1-44519-071-0	01

https://truckmanualshub.com/

4-40 STEERING UNIT


FIG-NO.

KEY NO.	RECOMMEND CLASS／PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	1440009511
54	--- CASE; BEARING STRG UNIT	
	1-44241-127-0	01
56	--- PLUG & SEAL ASM; STRG UNIT	
	1-44250-007-0	01
58	--- BEARING; HSG STRG UNIT	
	1-44259-058-0	01
67	--- SEAL; OIL, PLUG, STRG UNIT	
	1-44259-057-0	01
72	--- BOLT; HSG FIX STRG UNIT	
	1-44519-110-0	04
73	--- COVER; DUST, STRG UNIT	
	1-44519-303-0	01
75	--- CONNECTOR; HSG STRG UNIT	
	1-44259-034-1	01 (A) M20X1.5
	1-44259-035-1	01 (B) M22X1.5
77	--- GASKET; CONNECTOR, STRG UNIT	
	9-89970-787-0	02
132	--- COVER; DUST, STRG UNIT	
	1-44159-119-0	01
177	--- TUBE; BALL BRG STRG UNIT	
	1-44159-060-0	02
178	--- CLIP; BALL TUBE STRG UNIT	
	1-44159-064-0	01

https://truckmanualshub.com/

4-42 POWER STEERING OIL PUMP

FIG-NO.

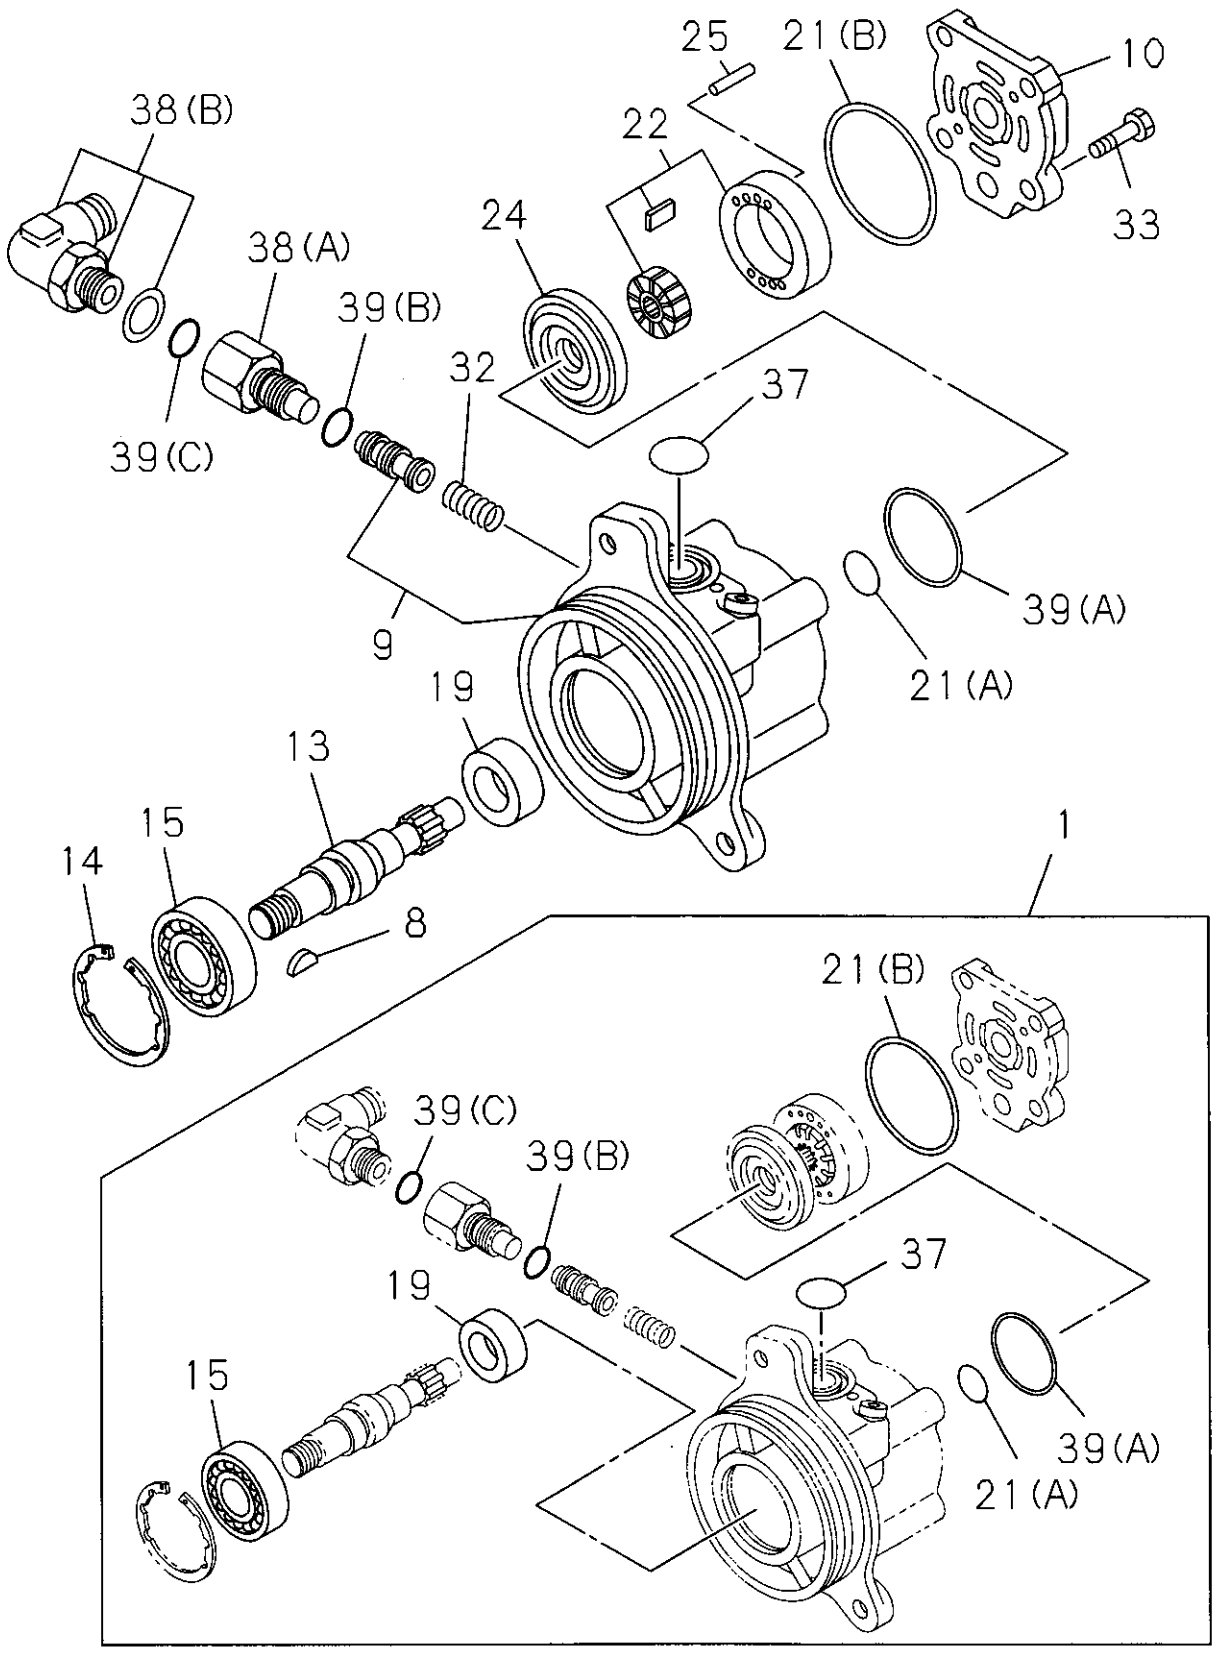

https://truckmanualshub.com/

POWER STEERING OIL PUMP

4-42
FIG-NO.

KEY NO.	RECOMMEND CLASS／PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	1195006361
1	-B- REPAIR KIT; OIL PUMP	
	1-85574-073-0	01
8	--- KEY; SHAFT, OIL PUMP	
	9-19519-089-0	01
9	--- BODY ASM; FRT, OIL PUMP	
	1-19511-158-1	01
10	--- BODY ASM; RR, OIL PUMP	
	1-19511-160-0	01
13	--- SHAFT KIT; RET	
	1-19521-038-0	01
14	--- RING; RET, OIL PUMP	
	1-19519-257-0	01
15	--- BEARING; BALL, OIL PUMP	
	1-19519-264-0	01
19	--- SEAL; OIL, OIL PUMP	
	1-19519-256-0	01
21	--- GASKET; FRT COVER TO BODY	
	1-19519-345-0	01 (B)
	8-97182-099-0	01 (A)
22	--- CARTRIDGE ASM; OIL PUMP	
	1-19519-341-0	01
24	--- PLATE ASM; THRUST	
	8-97182-103-0	01
25	--- PIN; HSG, P／S	
	1-33739-271-0	02

https://truckmanualshub.com/


4-42 POWER STEERING OIL PUMP

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	1195006361
32	--- SPRING; OIL PUMP	
	8-94475-376-0	01
33	--- BOLT; COVER	
	1-19519-346-1	04
37	--- GASKET; PIPE CONN, OIL PUMP	
	1-33739-070-0	01
38	--- CONNECTOR; OIL PUMP	
	1-19519-343-1	01 (A)
	8-98072-517-0	01 (B)
39	--- GASKET; OIL PUMP	
	1-19519-259-0	01 (A)
	1-19519-308-0	01 (C)
	9-48429-028-0	01 (B)

https://truckmanualshub.com/

FIG-NO.

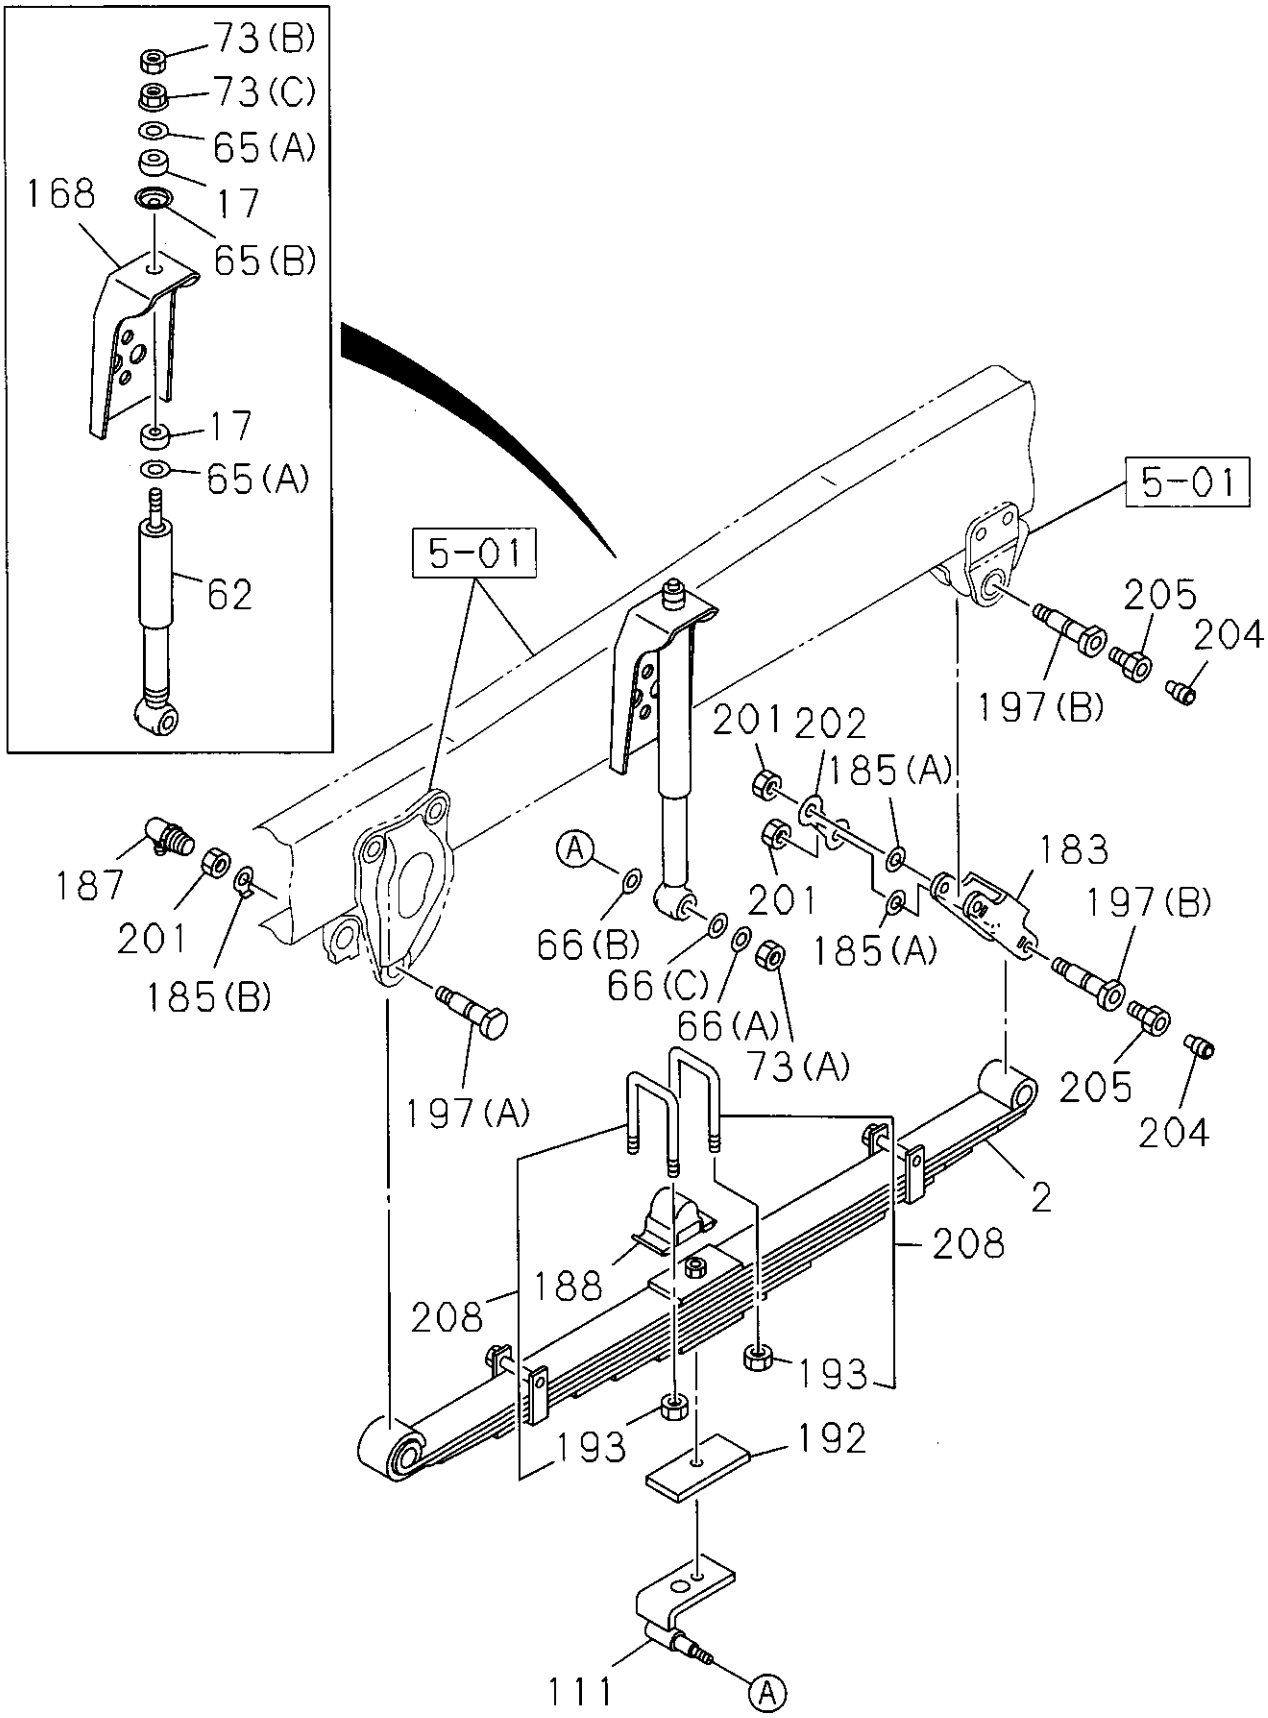

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
2	--- SPRING ASM; LEAF, FRT						SEE FIG-NO 4-55 FOR COMPONENT.
		7-65021 313-A		1103-	L	01	A
		7-65020 313-A		1103-	R	01	A
17	--- BUSHING; RUBBER, S/ABS						
		1-51631-004-0		1103-		04	A
62	-B- ABSORBER ASM; SHOCK, FRT						
		8-98060-332-0		1103-		02	A
65	--- WASHER; S/ABS						
		1-51631-023-0		1103-		02	A (B)
		8-98010-405-0		1103-		04	A (A) ID=10.5 OD=40 T=3.2
66	--- WASHER; LK, S/ABS SETTING						
		0-91510-812-0		1103-		02	A (A) ID=12.2
		0-91610-516-0		1103-		02	A (B) ID=17 OD=30
		1-09503-171-0		1103-		02	A (C) ID=12.5
73	--- NUT; BRKT, SHOCK						
		0-91110-512-0		1103-		02	A (A) M12
		0-91111-510-0		1103-		02	A (B) M10
		0-91180-210-0		1103-		02	A (C) M10 FLANGE
111	--- SUPPORTER; S/ABS, FRT SUSP						
		1-51681-587-4		1103-	L	01	A
		1-51681-586-4		1103-	R	01	A

https://truckmanualshub.com/

4-50 FRONT SUSPENSION

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
168	--- BRACKET; S/ABS, FRT SUSP					
	8-98060-258-0		1103-		02	A
183	--- SHACKLE; FRT SUSP					
	1-51162-037-0		1103-		02	A
185	--- WASHER; LK, PIN					
	8-98010-404-0		1103-		04	A (A) ID=25.5
	8-98010-411-0		1103-		02	A (B) ID=23
187	--- NIPPLE; GREASE, FRT					
	0-90301-610-0		1103-		02	A PT1/8 ELBOW
188	--- RUBBER; CLAMP, U-BOLT, FRT SPR					
	1-51172-112-0		1103-		02	A
192	--- PIECE; DIST					
	1-51177-149-0		1103-		AR	A T=4.5
193	--- NUT; U BOLT					
	8-97360-121-0		1103-		08	A M16
197	--- PIN; FRT SPR, FRT					
	8-98060-333-0		1103-		04	A (B)
	8-98060-335-0		1103-		02	A (A)
201	--- NUT; PIN LK					
	0-91111-522-0		1103-		06	A M22
202	--- PLATE; LK, SPR PIN					
	8-98010-648-0		1103-		02	A
204	--- NIPPLE; GREASE, RR					
	0-90301-410-0		1103-		04	A PT1/8 STRAIGHT


https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
205	--- ATTACHMENT; GREASE NIPPLE					
	9-43165-001-0		1103-		04	A
208	--- U-BOLT SET; FRT SPRING					
	1-87870-466-0		1103-		04	A L=150

https://truckmanualshub.com/

4-55 FRONT LEAF SPRING

FIG-NO.

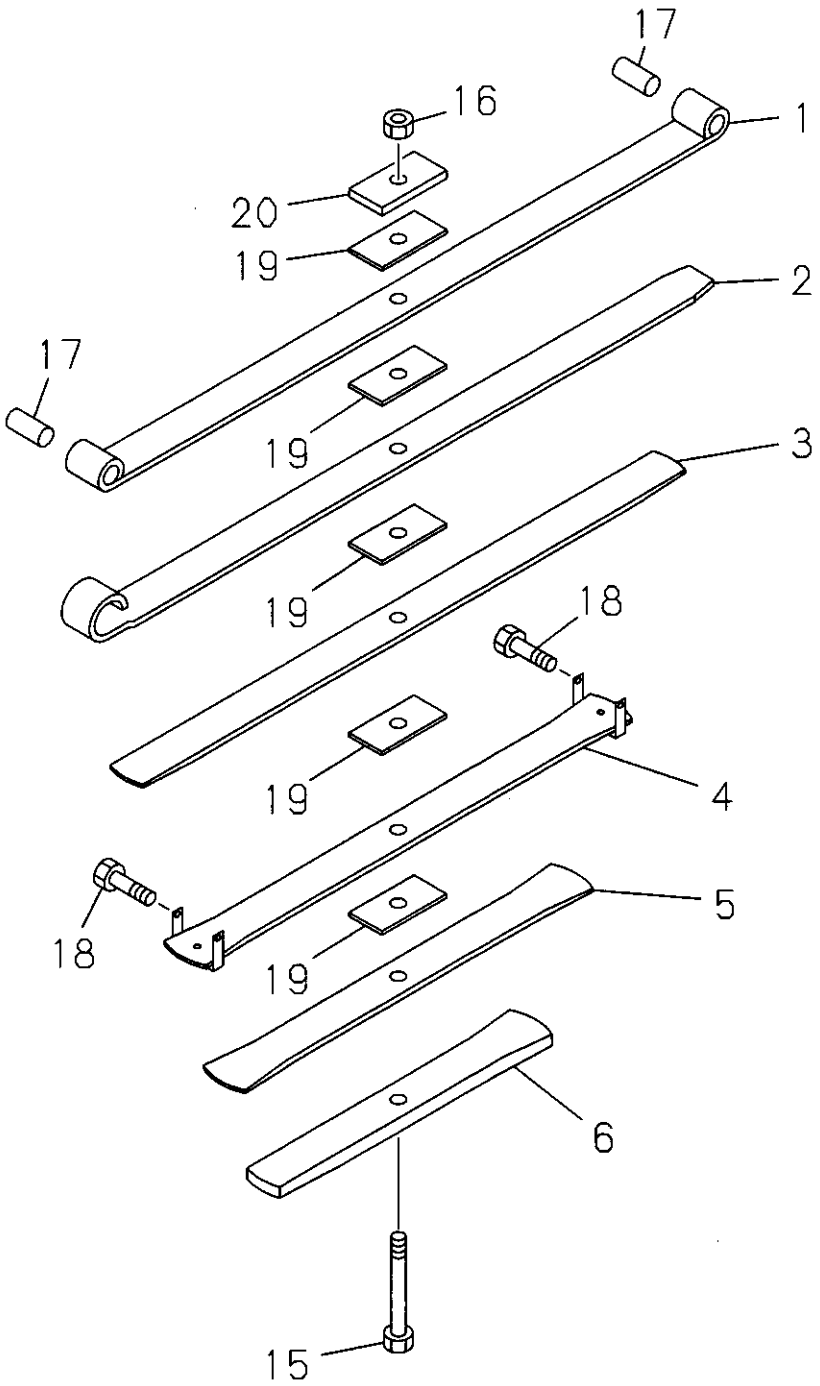

https://truckmanualshub.com/

FRONT LEAF SPRING

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER (APPLIED DATE / ITC)	ASM PART NUMBER / QTY / REMARKS 8980175540	8980175550	
1	--- SPRING; LEAF, NO 1, FRT				
		7-65001-301-A	01		
		7-65000-301-A		01	
2	--- SPRING; LEAF, NO 2, FRT				
		7-65001-302-A	01		
		7-65000-302-A		01	
3	--- SPRING; LEAF, NO 3, FRT				
		7-65001-303-A	01		
		7-65000-303-A		01	
4	--- SPRING; LEAF, NO 4, FRT				
		7-65001-304-A	01		
		7-65000-304-A		01	
5	--- SPRING; LEAF, NO 5, FRT				
		7-65001-305-A	01		
		7-65000-305-A		01	
6	--- SPRING; LEAF, NO 6, FRT				
		7-65001-306-A	01		
		7-65000-306-A		01	
15	--- BOLT; CENTER, LEAF SPR, FRT				
		7-04014 105-A	01	01	L=100
16	--- NUT; CENTER BOLT, LEAF SPR, FRT				
		7-05014 012-A	01	01	M14
17	--- BUSHING; LEAF SPR, FRT				
		7-65001 315-A	02	02	ID=25

https://truckmanualshub.com/


4-55 FRONT LEAF SPRING

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	ASM PART NUMBER / QTY / REMARKS		
	PART NUMBER (APPLIED DATE / ITC)	8980175540	8980175550	
18	--- BOLT; CLIP, LEAF SPR, FRT			
	1-09000-335-0	02	02	M8X87
19	--- SPACER; LEAF SPRING, FRT			
	7-65001 312-A	05	05	T=1
20	--- SEAT; LEAF SPR, FRT			
	7-65001 311-A	01	01	T=6

https://truckmanualshub.com/

FIG-NO.

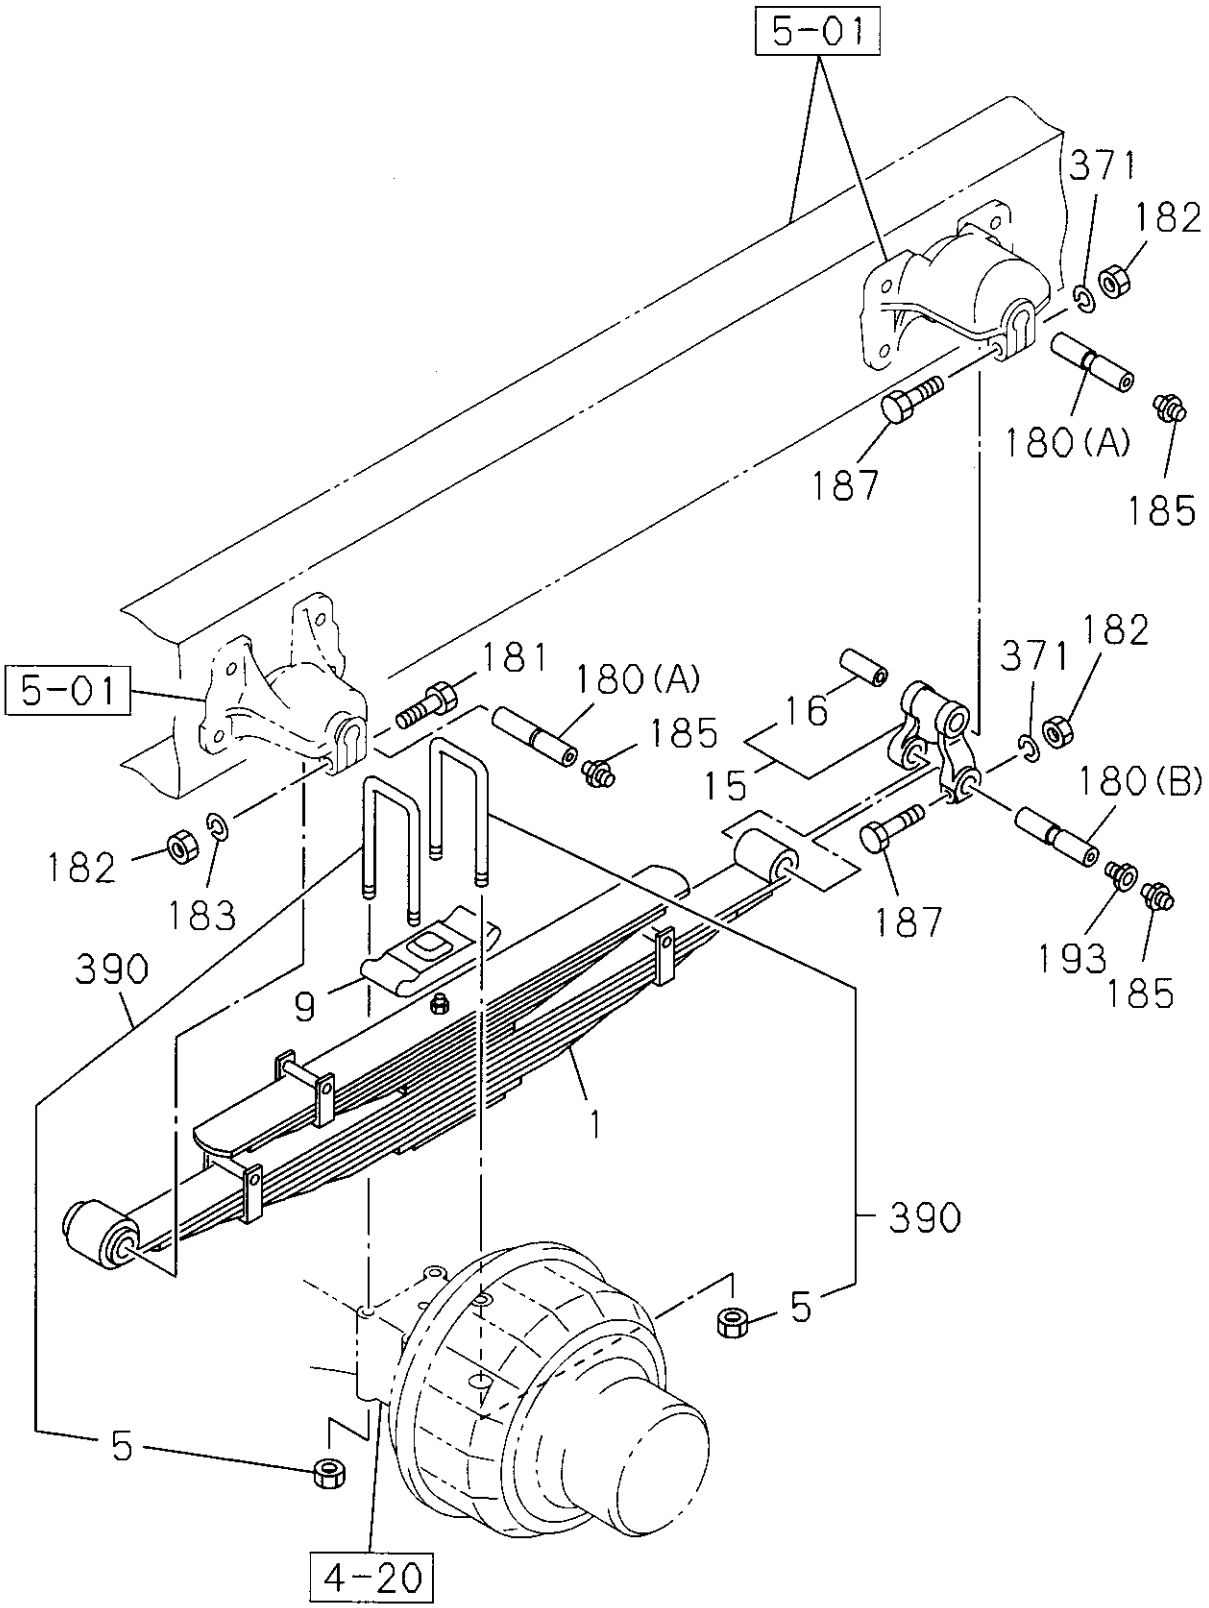

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
1	--- SPRING ASM; LEAF, RR						
		7-66020 314-A		1103-		02	A SEE FIG-NO 4-65 FOR COMPONENT.
5	--- NUT; U-BOLT, RR SPR						
		1-09440-039-1		1103-		08	A M18 FLANGE
9	--- PAD; U BOLT, RR SPR						
		1-51372-059-0		1103-		02	A
15	--- SHACKLE; RR SPR						
		1-51362-038-2		1103-		02	A
16	-B- BUSHING; SHACKLE, RR SPR						
		8-98082-176-0		1103-		02	A ID=25
180	--- PIN; RR SPR						
		1-51361-016-0		1103-		04	A (A) D0=25 L=115 PT1/8
		1-51361-017-0		1103-		02	A (B) D0=25 L=115 M12
181	--- BOLT; SPR & SHACKLE						
		0-10961-270-0		1103-		02	A M12X70
182	--- NUT; PIN, RR SPR						
		0-91110-512-0		1103-		06	A M12
183	--- WASHER; LK, PIN, RR SPR						
		8-98179-315-0		1103-		02	A
185	--- NIPPLE; GREASE, PIN, RR SPR						
		0-90301-410-0		1103-		06	A PT1/8 STRAIGHT
187	--- BOLT; SPR & SHACKLE						
		0-10961-270-0		1103-		04	A M12X70
193	--- ATTACHMENT; GREASE NIPPLE						
		9-43165-001-0		1103-		02	A

https://truckmanualshub.com/

4-60 REAR SUSPENSION


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
371	--- WASHER; LK, SHACKLE					
	8-98179-315-0		1103-		04	A
390	--- U-BOLT SET; RR SPRING					
	1-87870-399-0		1103-		04	A L=390

https://truckmanualshub.com/

4-65 REAR LEAF SPRING

FIG-NO.

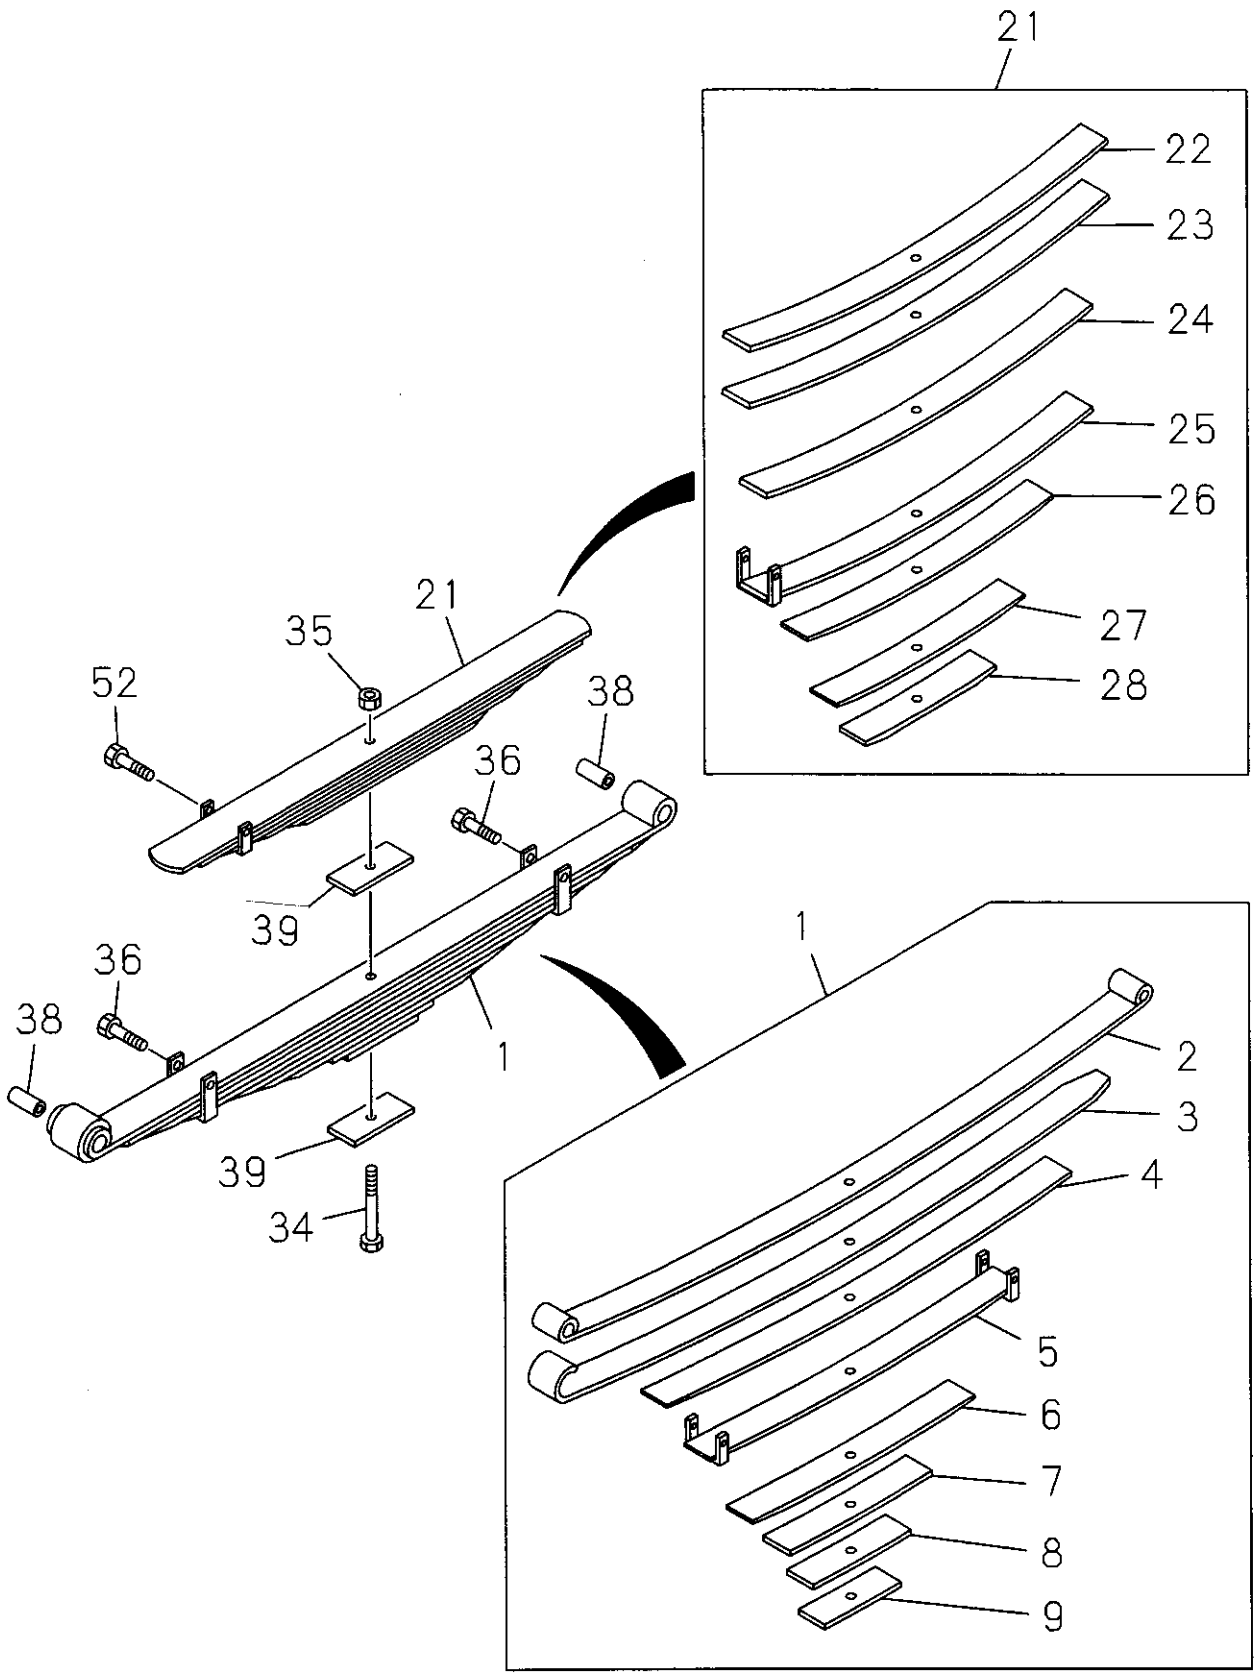

https://truckmanualshub.com/

REAR LEAF SPRING

KEY NO.	RECOMMEND CLASS／PART NAME	ASM PART NUMBER / QTY / REMARKS
	PART NUMBER (APPLIED DATE / ITC)	8980644490
1	--- SPRING ASM; LEAF, RR MAIN	
	7-66000 310-A	01
2	--- SPRING; LEAF, NO 1, RR MAIN	
	7-66000 311-A	01
3	--- SPRING; LEAF, NO 2, RR MAIN	
	7-66000 312-A	01
4	--- SPRING; LEAF, NO 3, RR MAIN	
	7-66000 313-A	01
5	--- SPRING; LEAF, NO 4, RR MAIN	
	7-66000 314-A	01
6	--- SPRING; LEAF, NO 5, RR MAIN	
	7-66000 315-A	01
7	--- SPRING; LEAF, NO 6, RR MAIN	
	7-66000 316-A	01
8	--- SPRING; LEAF, NO 7, RR MAIN	
	7-66000 317-A	01
9	--- SPRING; LEAF, NO 8, RR MAIN	
	7-66000 318-A	01
21	--- SPRING ASM; LEAF, RR SUB	
	7-66000 319-A	01
22	--- SPRING; LEAF, NO 1, RR SUB	
	7-66000 320-A	01
23	--- SPRING; LEAF, NO 2, RR SUB	
	7-66000 321-A	01

https://truckmanualshub.com/

4-65 REAR LEAF SPRING

FIG-NO.


KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER (APPLIED DATE / ITC)	ASM PART NUMBER / QTY / REMARKS
		8980644490	
24	--- SPRING; LEAF, NO 3, RR SUB		
	7-66000 322-A	01	
25	--- SPRING; LEAF, NO 4, RR SUB		
	7-66000 323-A	01	
26	--- SPRING; LEAF, NO 5, RR SUB		
	7-66000 324-A	01	
27	--- SPRING; LEAF, NO 6, RR SUB		
	7-66000 325-A	01	
28	--- SPRING; LEAF, NO 7, RR SUB		
	7-66000 326-A	01	
34	--- BOLT; CENTER, LEAF SPR, RR MAIN		
	7-04012 192-A	01	L=190
35	--- NUT; CENTER BOLT, LEAF SPR, RR		
	7-05012 010-A	01	M12 IDN
36	--- BOLT; CLIP, LEAF SPR, RR		
	7-04008 090-A	02	M8X85
38	--- BUSHING; LEAF SPR, RR		
	7-65001 315-A	02	ID=25
39	--- SEAT; LEAF SPR, RR MAIN		
	7-66001 320-A	02	T=6
52	--- BOLT; CLIP, LEAF SPR, RR SUB		
	7-04008 090-A	01	M8X85

https://truckmanualshub.com/


4-80 ROAD WHEEL

FIG-NO.

FRONT

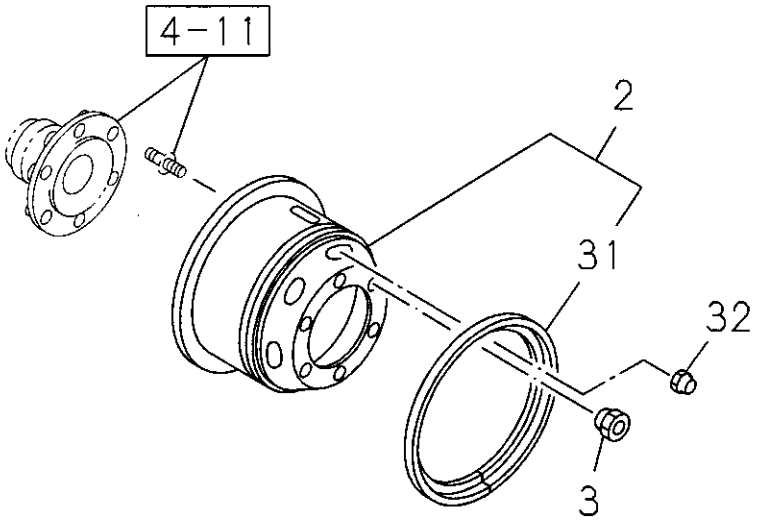

REAR

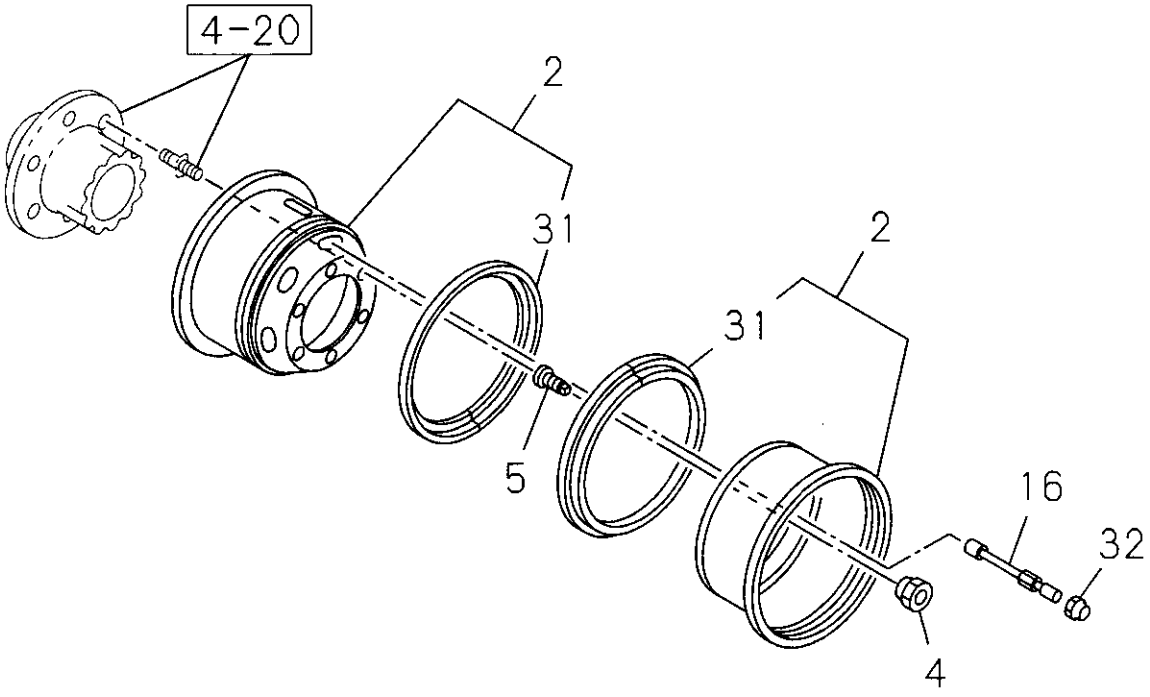

https://truckmanualshub.com/

ROAD WHEEL

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
2	--- WHEEL; DISC						
	7-89002 333-A		1103-		06	A	FRONT,REAR 6.00GSX16 OFFSET=135 BLACK 6-HOLE
	7-89002 333-A		1103-		01	A	SPARE TIRE & DISC WHEEL RR TIRE ONE(R46) SPARE 6.00GSX16 OFFSET=135 BLACK 6-HOLE
3	-B- NUT; WHEEL, FRT AXLE						
	1-42334-022-3		1103-	L	06	A	M24 LH THREAD
	1-42333-022-3		1103-	R	06	A	M24
4	-B- NUT; WHEEL, RR AXLE						
	8-97359-810-0		1103-	L	06	A	M30 LH THREAD
	8-97359-809-0		1103-	R	06	A	M30 RH THREAD
5	-B- NUT; WHEEL, INNER, RR AXLE						
	8-97359-806-0		1103-	L	06	A	OUTER M30,INNER M20 LH THREAD
	8-97359-805-0		1103-	R	06	A	OUTER M30,INNER M20 RH THREAD
16	--- HOLDER; TIRE VALVE, DISC WHEEL						
	8-98167-051-0		1103-		02	A	L=115
31	--- RING; SIDE, DISC WHEEL						
	1-42355 015-A		1103-		06	A	FRONT,REAR 16X6.00GS STAMP, BLACK
	1-42355 015-A		1103-		01	A	SPARE TIRE & DISC WHEEL RR TIRE ONE(R46) SPARE 16X6.00GS STAMP, BLACK
32	--- CAP; VALVE						
	1-42374-001-0		1103-		05	A	SPARE TIRE & DISC WHEEL RR TIRE ONE(R46)


https://truckmanualshub.com/

5

https://truckmanualshub.com/

5-01 FRAME AND OTHER PARTS

FIG-NO. CROSS MEMBER

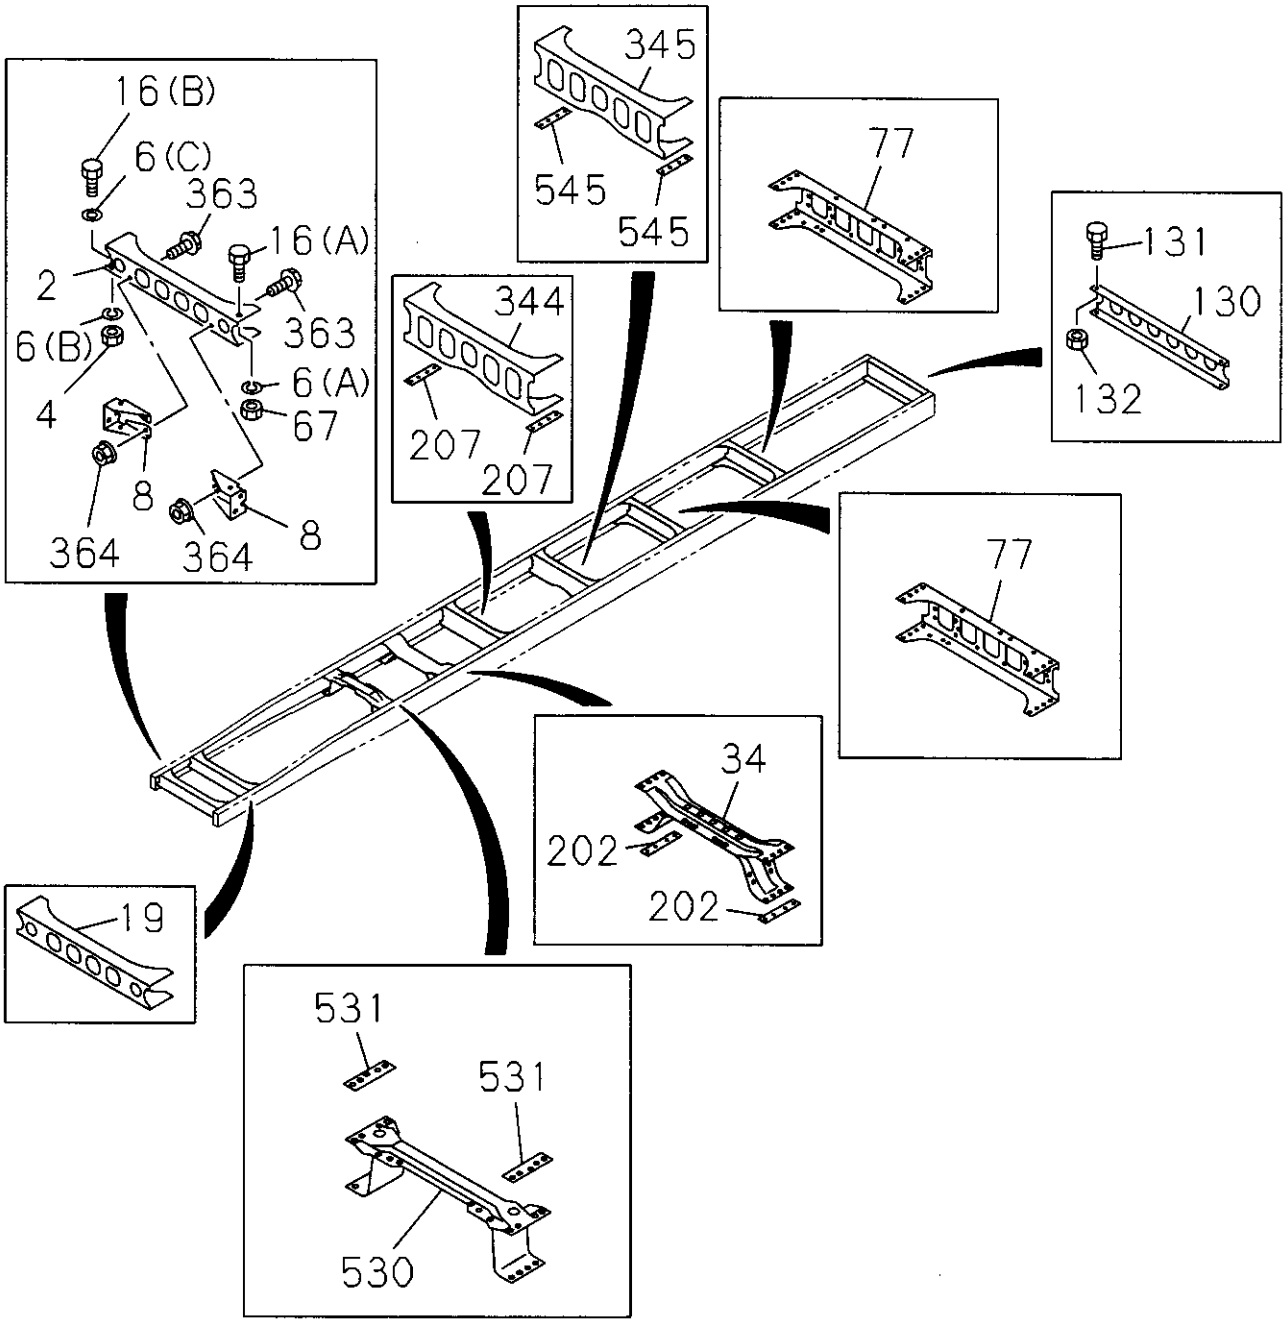


https://truckmanualshub.com/

FRAME AND OTHER PARTS

BRACKET AND OTHER PARTS

5-01

FIG-NO.

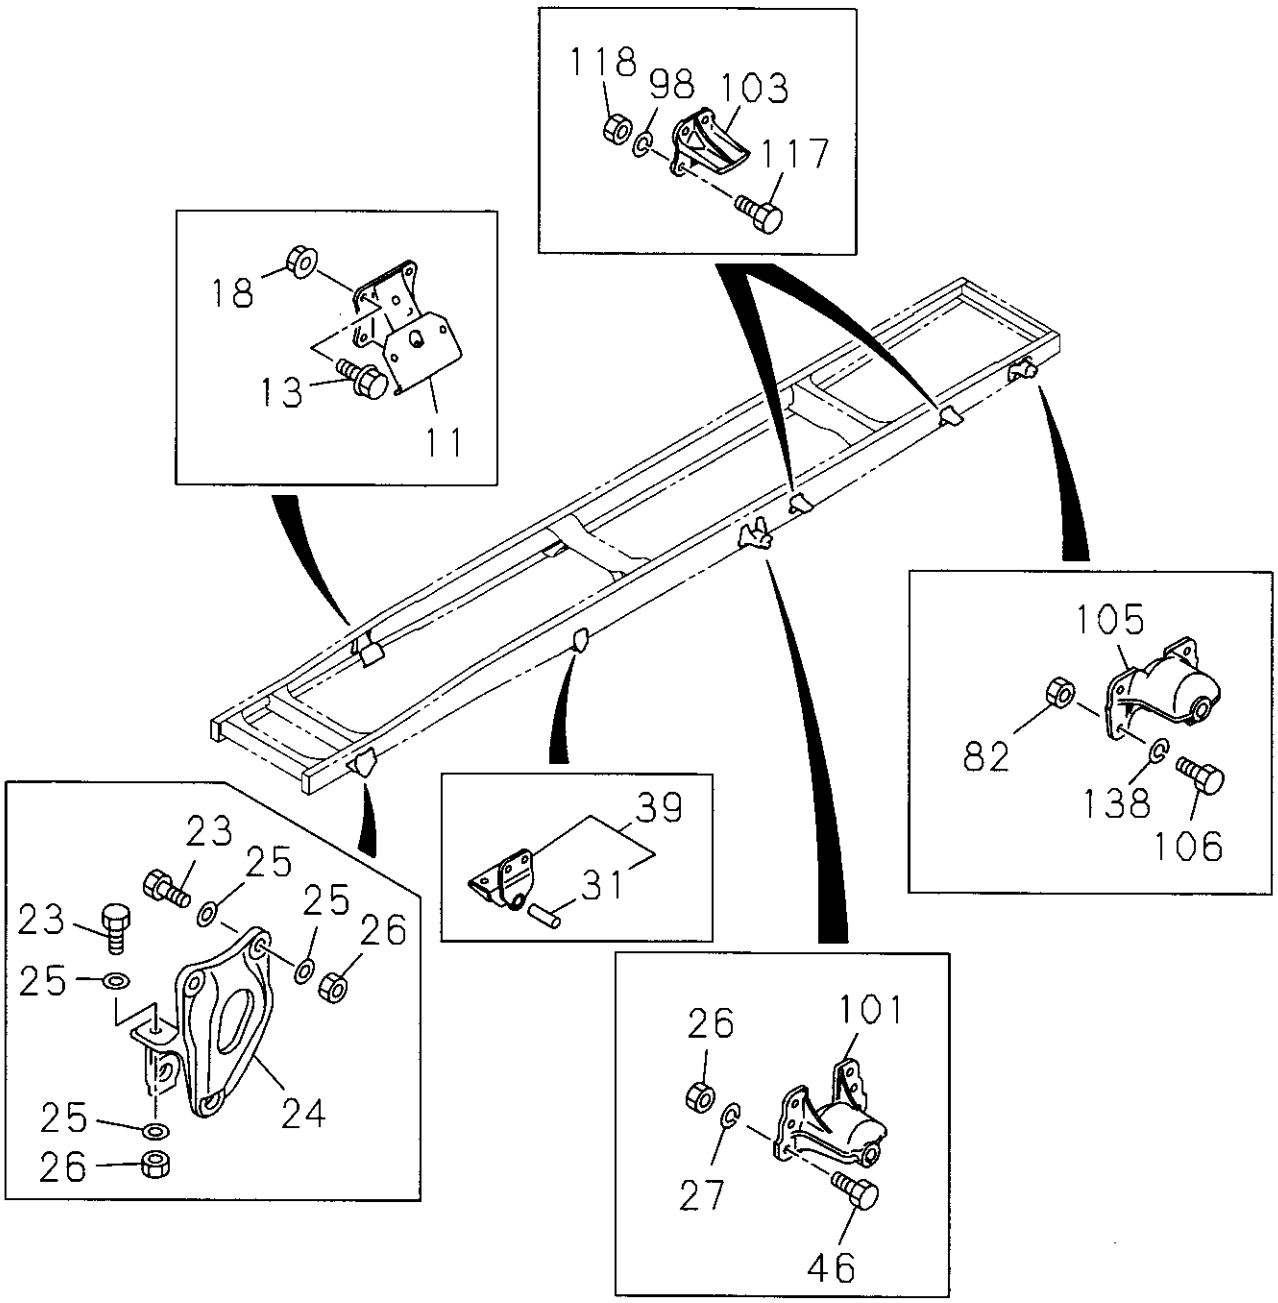

https://truckmanualshub.com/

5-01 FRAME AND OTHER PARTS

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A WHEEL BASE 5300MM(53W)
2	--- MEMBER; CROSS, 1ST					
	8-97615-669-2		1103-		01	A
4	--- NUT; 1ST C/MBR TO S/MBR					
	0-91110-514-0		1103-		02	A M14
6	--- WASHER; LK, 1ST C/MBR					
	0-91510-512-0		1103-		02	A (A) ID=12.2
	0-91510-814-0		1103-		02	A (B) ID=14.2
	8-98010-627-1		1103-		02	A (C) ID=15
8	--- GUSSET; 1ST C/MBR					
	8-97609-578-1		1103-	R	01	A
	8-97609-579-2		1103-	L	01	A
11	--- BRACKET; ENG MTG					
	8-97604-129-0		1103-		02	A
13	--- BOLT; BRKT, ENG MTG					
	0-28661-235-0		1103-		08	A M12X35 FLANGE
16	--- BOLT; 1ST C/MBR TO S/MBR					
	0-20851-230-0		1103-		02	A (A) M12X30
	0-20851-440-0		1103-		02	A (B) M14X40
18	--- NUT; BRKT, ENG MTG					
	0-91180-212-0		1103-		08	A M12 FLANGE
19	--- MEMBER; CROSS, 2ND					
	8-97615-670-2		1103-		01	A

https://truckmanualshub.com/

FRAME AND OTHER PARTS

5-01

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A WHEEL BASE 5300MM(53W)
23	--- BOLT; BRKT, SPR						
		0-20951-450-0		1103-		08	A M14X50
24	--- BRACKET; FRT SPR, FRT						
		8-98059-201-0		1103-	L	01	A
		8-98059-203-0		1103-	R	01	A
25	--- WASHER; PL, BRKT						
		8-98010-627-1		1103-		16	A ID=15
26	--- NUT; BRKT, SPR						
		0-91110-514-0		1103-		20	A M14
27	--- WASHER; LK, BRKT, FRT SPR						
		0-91510-614-0		1103-		12	A ID=14.2
31	--- BUSHING; FRT SPR, RR						
		8-98082-176-0		1103-		02	A ID=25
34	--- MEMBER; CROSS, 3RD						
		8-97609-501-2		1103-		01	A
39	--- BRACKET; FRT SPR, RR						
		1-53352-154-2		1103-		02	A
46	--- BOLT; BRKT FIX						
		0-20951-450-0		1103-		12	A M14X50
67	--- NUT; C/MBR						
		0-91110-512-0		1103-		02	A M12
77	--- MEMBER; CROSS, TRUNNION RR						
		8-97610-935-1		1103-		02	A
82	--- NUT; BRKT						
		0-91110-514-0		1103-		10	A M14

https://truckmanualshub.com/

5-01 FRAME AND OTHER PARTS

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A WHEEL BASE 5300MM(53W)
98	--- WASHER; LK, STOPPER	0-91510-614-0		1103-		16	A ID=14.2
101	--- BRACKET; RR SPR, FRT	1-53353-090-4		1103-		02	A
103	--- STOPPER; SUB SPR	1-53356-059-1		1103-		04	A
105	--- BRACKET; RR SPR, RR	1-53354-074-0		1103-		02	A
106	--- BOLT; BRKT	0-20951-450-0		1103-		10	A M14X50
117	--- BOLT; STOPPER	0-20951-450-0		1103-		16	A M14X50
118	--- NUT; STOPPER	0-91110-514-0		1103-		16	A M14
130	--- MEMBER; CROSS, END	8-97609-470-0		1103-		01	A
131	--- BOLT; END C/MBR	0-50541-025-0		1103-		04	A M10X25 W/LK WASHER
132	--- NUT; END C/MBR	0-91110-510-0		1103-		04	A M10
138	--- WASHER; LK, BRKT	0-91510-614-0		1103-		10	A ID=14.2
202	--- SPACER; 3RD C/MBR	8-97609-756-1		1103-		02	A
207	--- SPACER; 4TH C/MBR	8-97609-758-0		1103-		02	A

https://truckmanualshub.com/


FRAME AND OTHER PARTS

KEY NO.	RECOMMEND CLASS／PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A WHEEL BASE 5300MM(53W)
344	--- MEMBER; CROSS, 4TH					
	8-97609-473-2		1103-		01	A
345	--- MEMBER; CROSS, 5TH					
	8-97609-473-2		1103-		01	A
363	--- BOLT; GUSSET					
	0-28661-225-0		1103-		04	A M12X25 FLANGE
364	--- NUT; GUSSET					
	0-91180-212-0		1103-		04	A M12 FLANGE
530	--- MEMBER; CROSS, T／M					
	8-97609-814-1		1103-		01	A
531	--- SPACER; C／MBR, T／M					
	8-97637-078-0		1103-		02	A
545	--- SPACER; 5TH C／MBR					
	8-97609-758-0		1103-		02	A

https://truckmanualshub.com/

5-10 CAB MOUNTING; FRAME SIDE

FIG-NO.

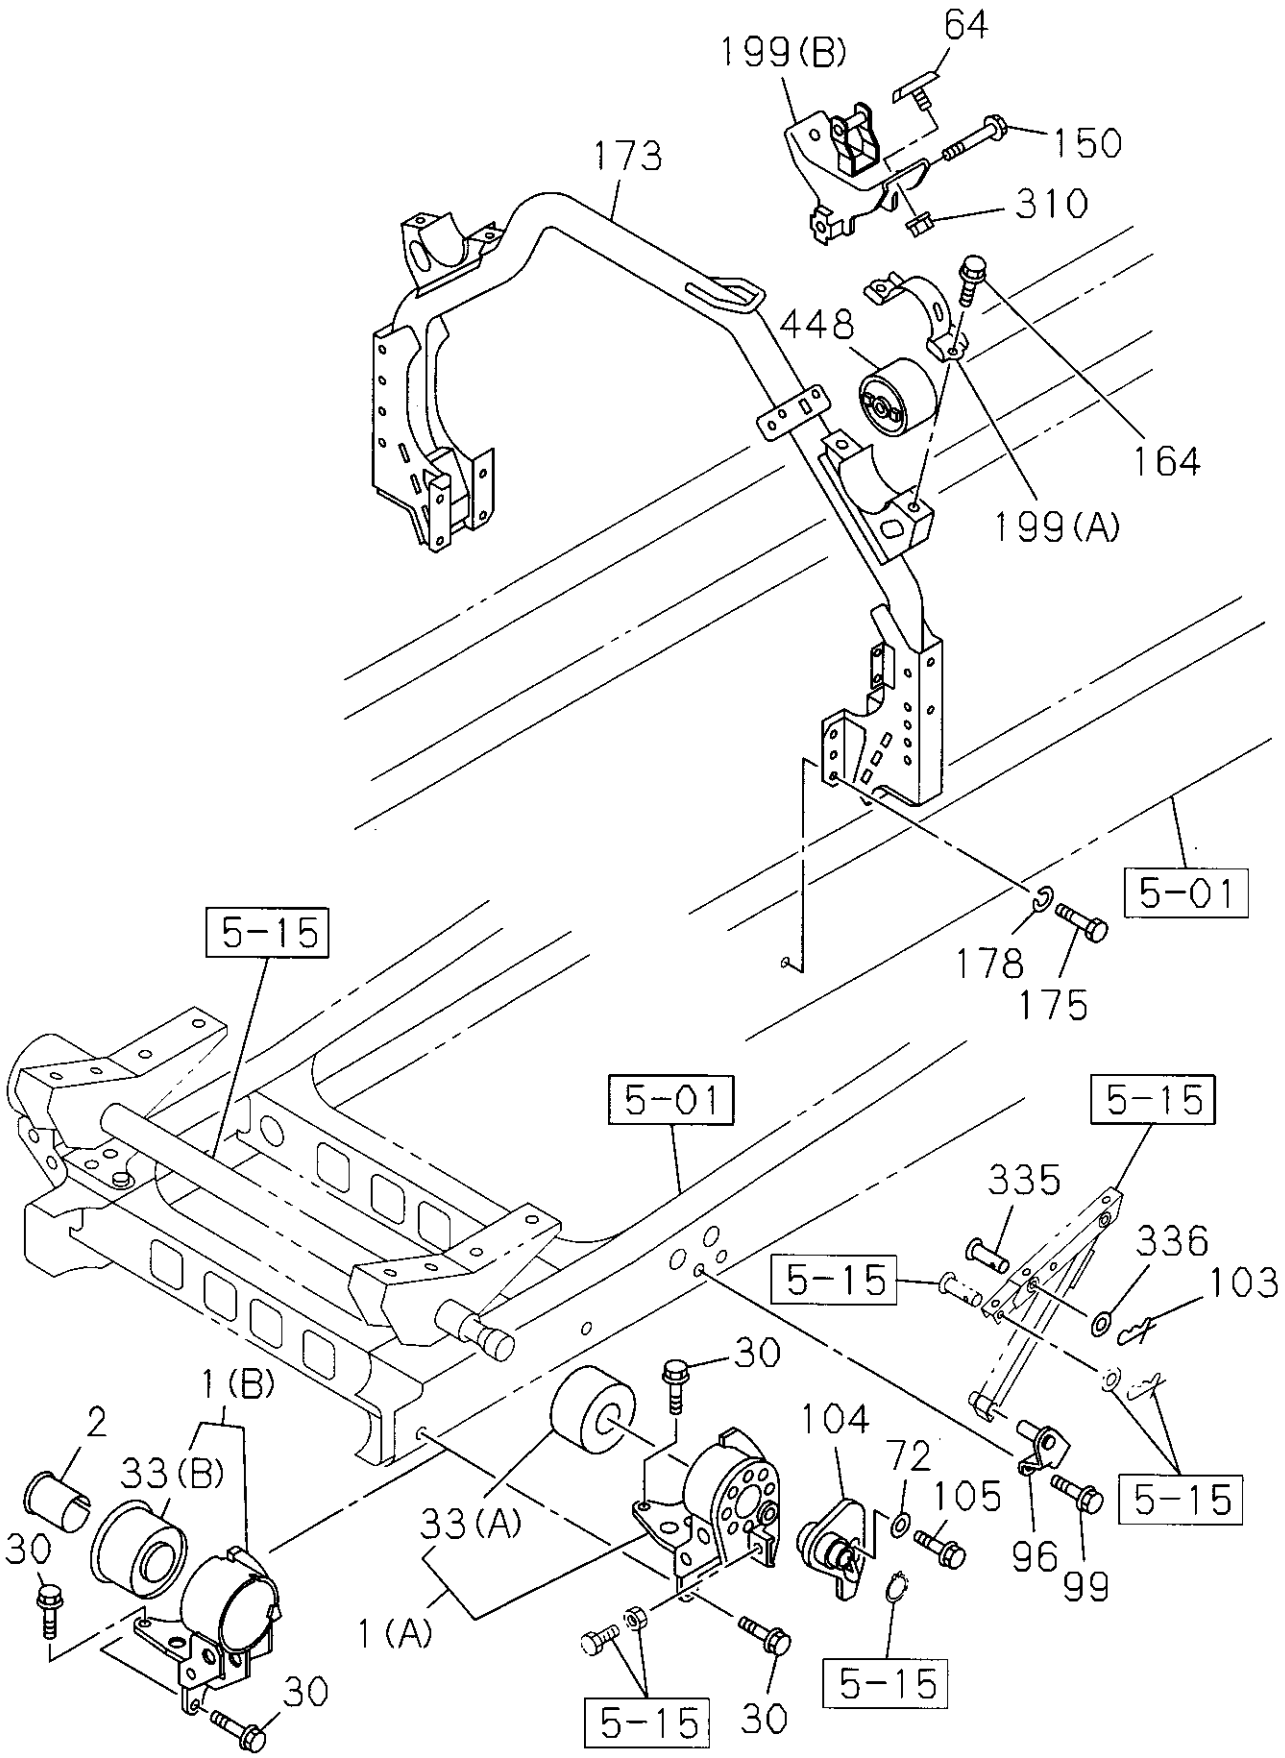

https://truckmanualshub.com/

CAB MOUNTING; FRAME SIDE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- BRACKET; CAB MTG					
	8-98056-501-2		1103-	L	01 A	CAB SUSPENSION RIGID<W71> (B)
	8-98010-750-2		1103-	R	01 A	CAB SUSPENSION RIGID<W71> (B)
	8-98010-747-2		1103-	L	01 A	CAB SUSPENSION SEMI FLOATING<SDK> (A)
	8-98010-746-2		1103-	R	01 A	CAB SUSPENSION SEMI FLOATING<SDK> (A)
2	--- BUSHING; TORSION BAR					
	8-98010-767-0		1103-		02 A	CAB SUSPENSION RIGID<W71>
30	--- BOLT; CAB FRT FOOT					
	0-28861-445-0		1103-		10 A	M14X45 FLANGE
33	--- BUSHING; RUBBER, CAB MTG BRKT, FRT					
	8-98013-933-1		1103-		02 A	CAB SUSPENSION RIGID<W71> (B)
	8-98013-932-2		1103-		02 A	CAB SUSPENSION SEMI FLOATING<SDK> (A)
64	--- RUBBER; CUSHION					
	8-97113-340-0		1103-		04 A	
72	--- WASHER; PL, BRKT TO FRAME					
	0-91614-714-0		1103-		01 A	ID=15 OD=36
96	--- BRACKET; CAB STAY					
	1-62500-628-0		1103-		01 A	
99	--- BOLT; BRKT					
	0-28661-030-0		1103-		02 A	M10X30 FLANGE
103	--- PIN; SPLIT, CAB STAY					
	8-98062-280-0		1103-		01 A	
104	--- BRACKET; CAB FRAME, CAB FRT MTG					
	8-98010-753-3		1103-		01 A	

https://truckmanualshub.com/

5-10 CAB MOUNTING; FRAME SIDE


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
105	--- BOLT; BRKT TO CAB FRAME					
	0-28661-435-0		1103-		01	A M14X35 FLANGE
150	--- BOLT; CAB MTG RR					
	0-10956-400-0		1103-		02	A M14X100
164	--- BOLT; CUSHION RUBBER, CAB MTG					
	0-28651-225-0		1103-		04	A M12X25 FLANGE
173	--- MEMBER; CAB MTG RR					
	8-98010-756-5		1103-		01	A
175	--- BOLT; MEMBER TO FRAME					
	0-20951-235-0		1103-		08	A M12X35
178	--- WASHER; LK, MEMBER					
	0-91510-612-0		1103-		08	A ID=12.2
199	--- BRACKET; CAB RR MTG					
	8-98044-556-1		1103-		02	A (A)
	8-98023-692-0		1103-	L	01	A (B)
	8-98099-068-0		1103-	R	01	A (B)
310	--- NUT; CUSHION					
	0-91180-108-0		1103-		04	A M8 FLANGE
335	--- PIN; ADJ, STAY LOCK					
	1-09744-107-0		1103-		01	A OD=10 L=48
336	--- WASHER; PL, STAY LOCK					
	1-09985-183-0		1103-		01	A ID=10.5 T=2.0
448	--- BUSHING; CAB MTG					
	8-98013-934-1		1103-		02	A CAB SUSPENSION RIGID<W71>
	8-98010-759-2		1103-		02	A CAB SUSPENSION SEMI FLOATING<SDK>


https://truckmanualshub.com/

5-15 CAB MOUNTING; CAB SIDE

FIG-NO. TORSION BAR AND CAB TILT STAY

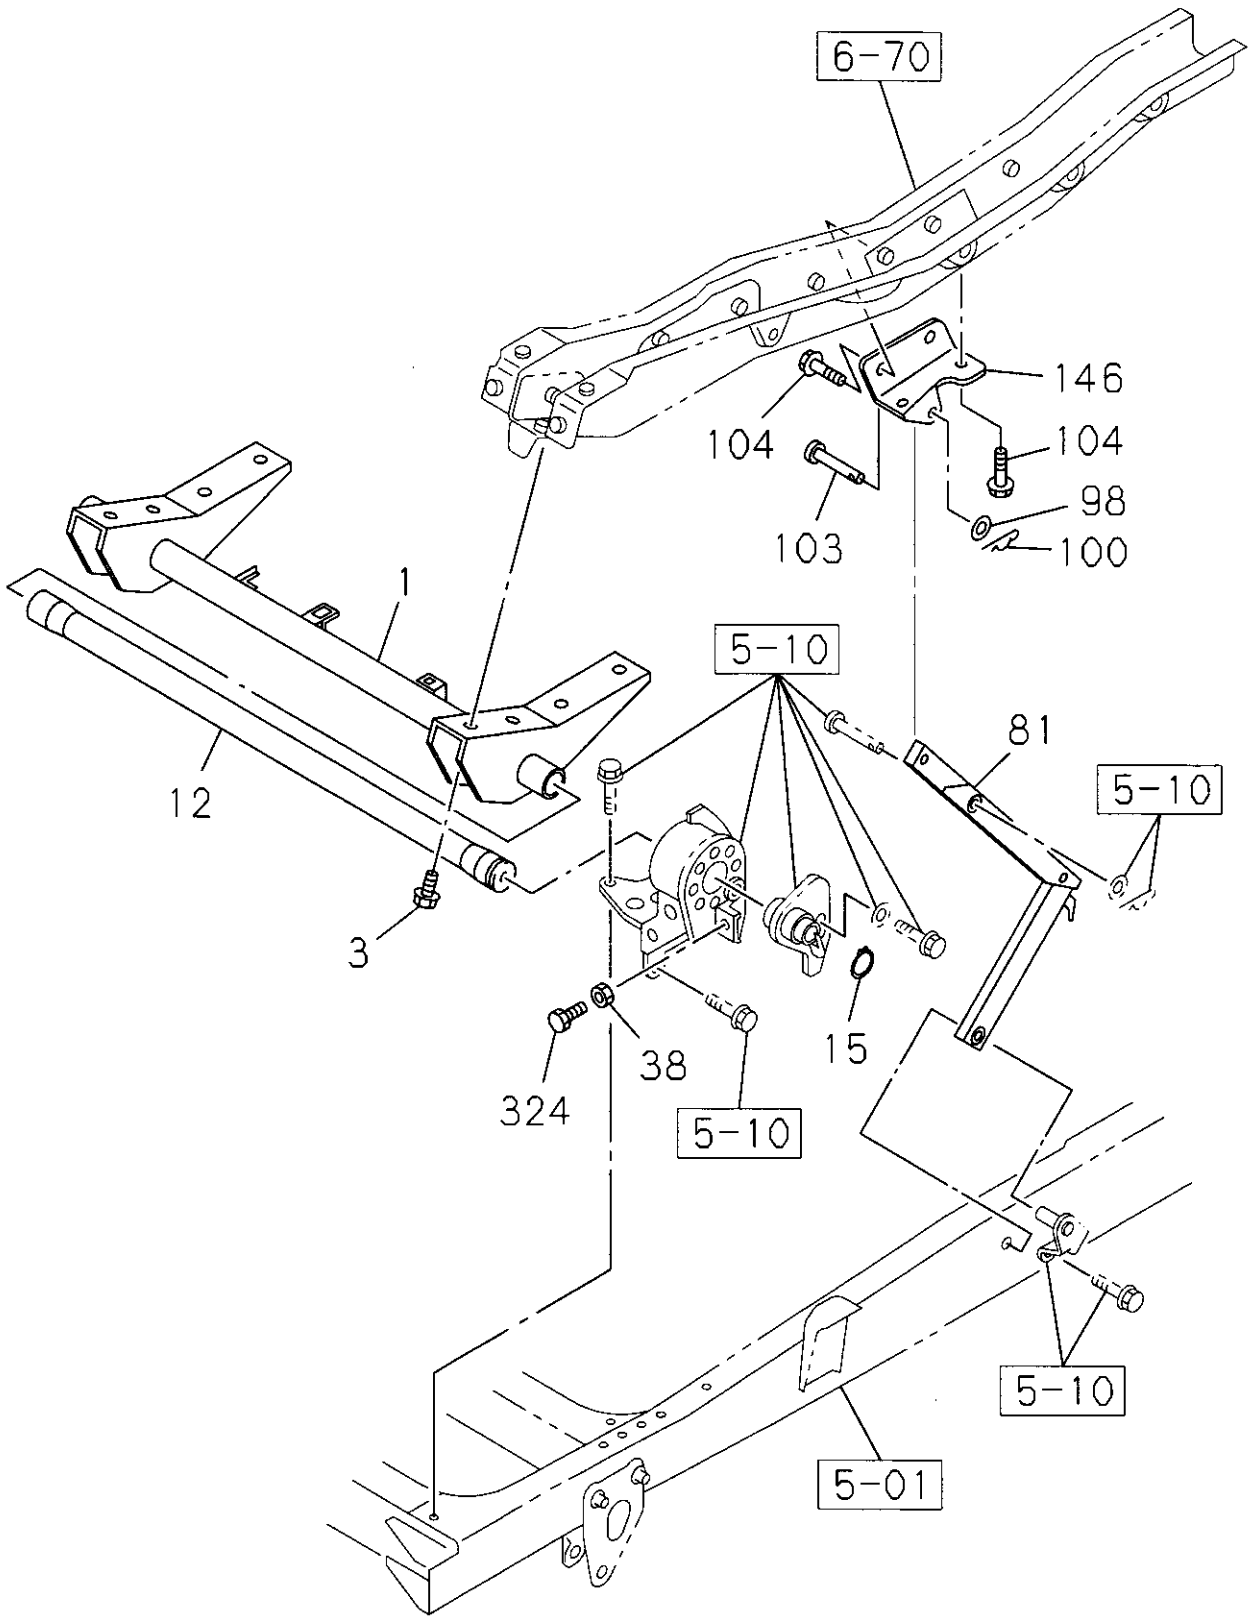


https://truckmanualshub.com/

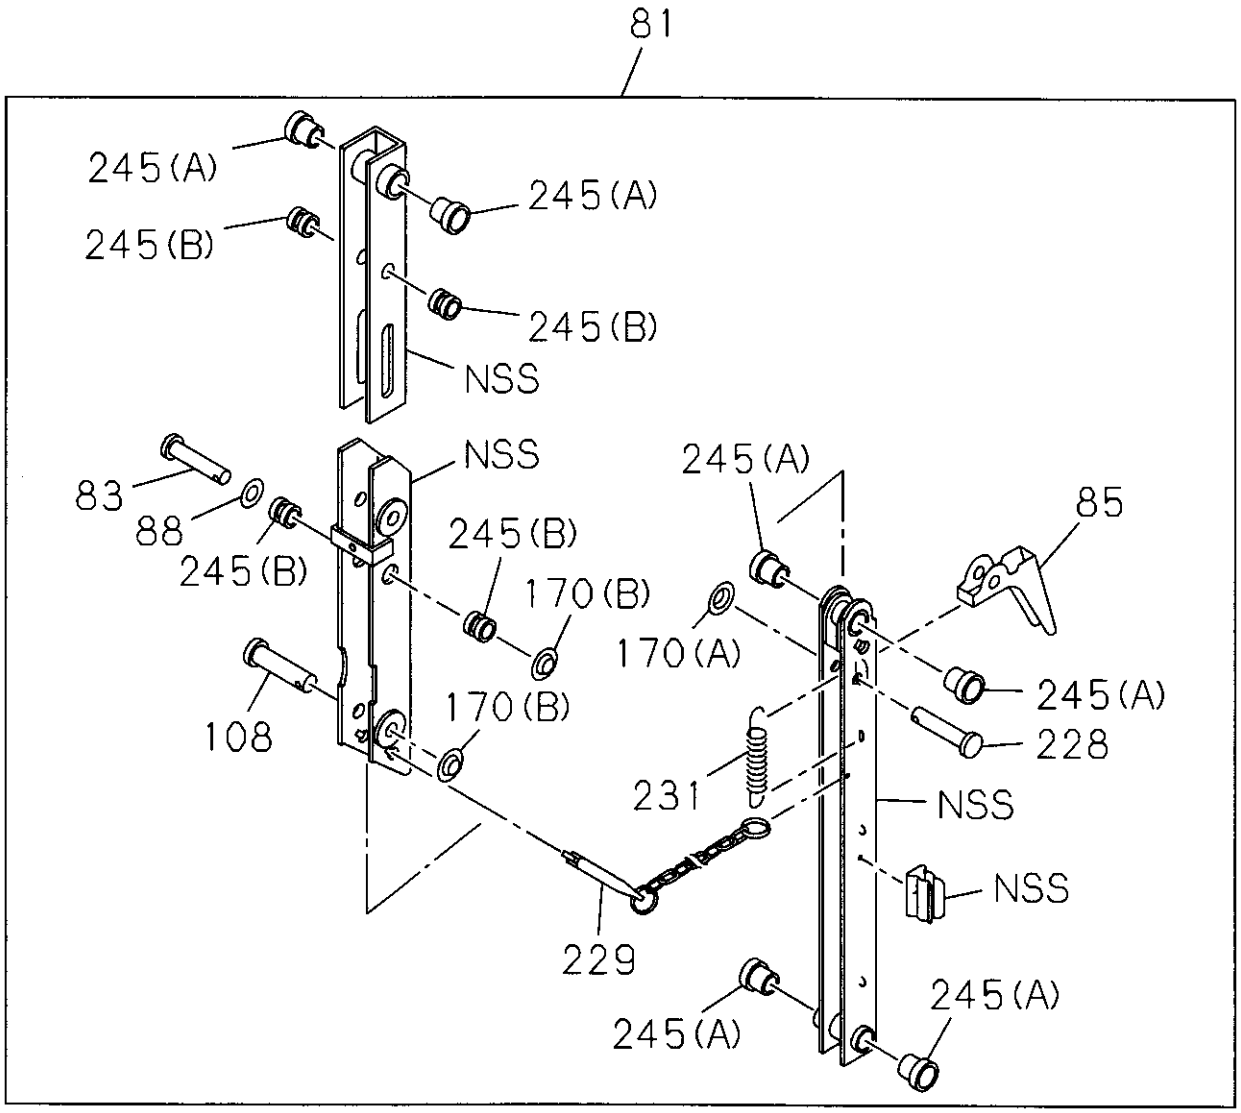

https://truckmanualshub.com/

5-15 CAB MOUNTING; CAB SIDE

FIG-NO. CAB LOCK

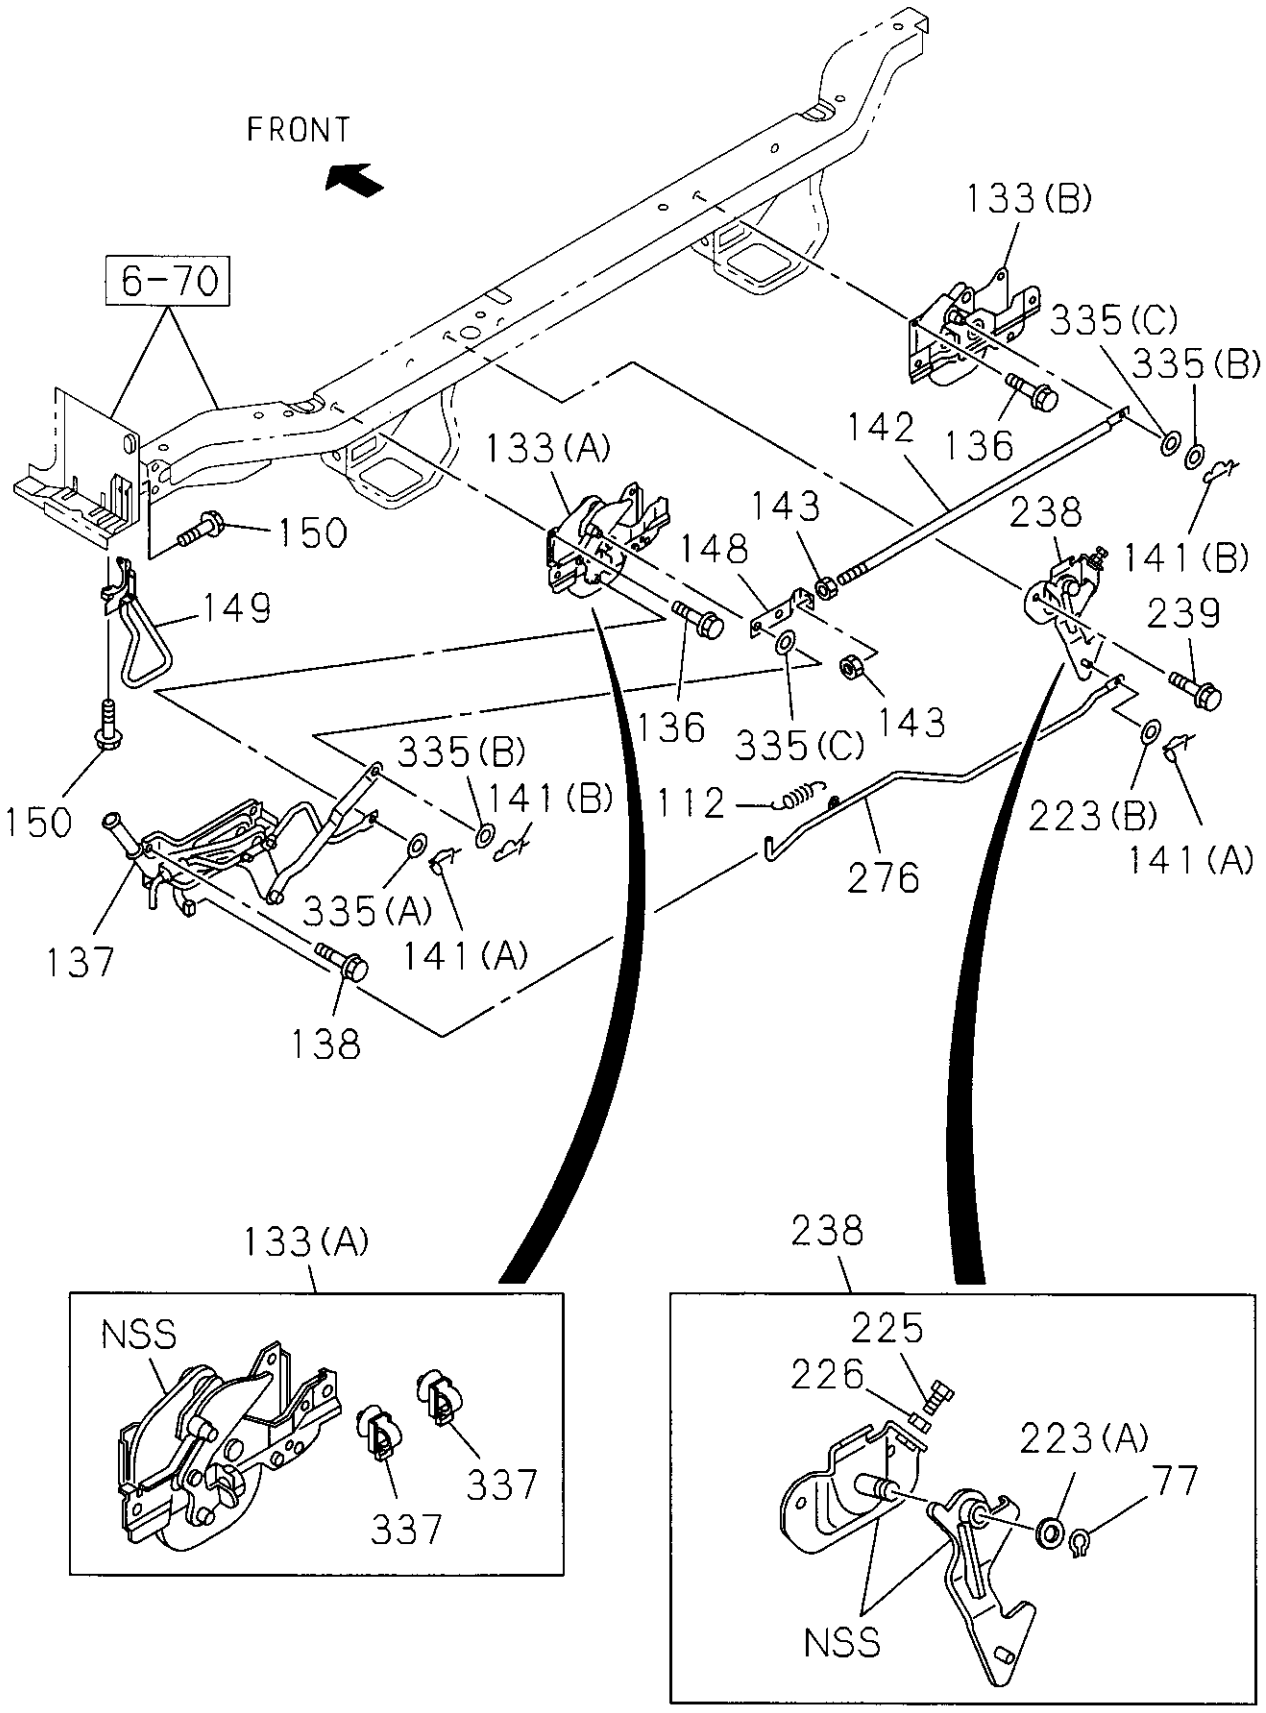

https://truckmanualshub.com/

CAB MOUNTING; CAB SIDE

5-15
FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- LEVER; TORSION BAR	8-98010-752-7		1103-		01	A
3	--- BOLT; LEVER	8-98090-287-1		1103-		08	A M12X42 FLANGE
12	--- BAR; TORSION, UPR	8-98010-945-1		1103-		01	A
15	--- RING; SNAP, TORSION BAR	8-97129-615-0		1103-		01	A T=1.90 BLUE
38	--- NUT; LK	0-91110-514-0		1103-		01	A M14
77	--- RING; SNAP	0-91800-616-0		1103-		01	A ID=14.7
81	--- STAY ASM; CAB TILT	1-62500-758-0		1103-		01	A
83	--- PIN; JOINT, CAB STAY	1-09744-106-0		1103-		01	A OD=10 L=42
85	--- LEVER; LOCK, CAB STAY	1-62500-503-0		1103-		01	A
88	--- WASHER; PL, CAB STAY PIN	1-09985-183-0		1103-		01	A ID=10.5 T=2.0
98	--- WASHER; CAB STAY	1-09985-183-0		1103-		01	A ID=10.5 T=2.0
100	--- PIN; SNAP, CAB STAY TO CAB	8-98039-426-1		1103-		01	A L=34
103	--- PIN; JOINT, CAB STAY	1-09744-108-1		1103-		01	A

https://truckmanualshub.com/

5-15 CAB MOUNTING; CAB SIDE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
104	--- BOLT; CAB STAY BRKT					
	0-28661-030-0		1103-		04	A M10X30 FLANGE
108	--- PIN; ADJ, CAB STAY					
	1-09744-106-0		1103-		01	A OD=10 L=42
112	--- SPRING; RETURN, SAFETY ROD					
	1-79718-655-0		1103-		01	A
133	--- LOCK ASM; CAB					
	8-98101-514-1		1103-	L	01	A (A)
	8-98061-489-1		1103-	R	01	A (B)
136	--- BOLT; CAB LK					
	0-28650-820-0		1103-		08	A M8X20 FLANGE IDN
137	--- CONTROL UNIT; CAB LOCK					
	8-97584-470-5		1103-		01	A
138	--- BOLT; CAB LOCK CONT UNIT					
	0-28650-820-0		1103-		04	A M8X20 FLANGE IDN
141	--- PIN; SNAP, CAB LOCK ROD					
	8-98039-045-1		1103-		02	A (A) L=25.3
	8-98062-280-0		1103-		02	A (B)
142	--- ROD; HOOK TO HOOK					
	8-97587-990-0		1103-		01	A
143	--- NUT; JAW JOINT, HOOK TO HOOK					
	0-91110-510-0		1103-		02	A M10
146	--- BRACKET ASM; CAB STAY UPR					
	8-98019-506-0		1103-		01	A

https://truckmanualshub.com/

CAB MOUNTING; CAB SIDE

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
148	--- JOINT; JAW, HOOK TO HOOK					
	8-97410-736-0		1103-		01	A
149	--- HANDLE; TILT					
	8-98025-705-0		1103-		01	A
150	--- BOLT; TILT HANDLE					
	0-28650-820-0		1103-		03	A M8X20 FLANGE IDN
170	--- NUT					
	8-97022-565-0		1103-		01	A (A) ID=7.9 PUSH NUT
	8-97022-566-0		1103-		02	A (B) ID=9.9 PUSH NUT
223	--- WASHER; PL, SAFETY LK					
	0-91610-508-0		1103-		01	A (B) ID=8.4 OD=16
	0-91610-516-0		1103-		01	A (A) ID=17 OD=30
225	--- BOLT; SAFETY LK					
	0-28050-830-0		1103-		01	A M8X30 FLANGE
226	--- NUT; SAFETY LK					
	0-91110-508-0		1103-		01	A M8 IDN
228	--- PIN; SAFETY LOCK SPRING, CAB STAY					
	1-09744-086-2		1103-		01	A
229	--- PIN ASM; SAFETY					
	1-62500-517-1		1103-		01	A
231	--- SPRING; RETURN, LOCK LEVER, CAB STAY					
	1-09583-244-0		1103-		01	A

https://truckmanualshub.com/

5-15 CAB MOUNTING; CAB SIDE


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
238	--- LOCK ASM; SAFETY, CAB TILT						
		8-98048-899-1		1103-		01	A
239	--- BOLT; SAFETY LK						
		0-28650-820-0		1103-		02	A M8X20 FLANGE IDN
245	--- BUSHING; CAB STAY						
		1-62500-587-0		1103-		06	A (A)
		1-62500-588-0		1103-		04	A (B)
276	--- ROD ASM; CAB LOCK, HOOK TO HOOK						
		8-98048-830-1		1103-		01	A
324	--- BOLT; ADJUST						
		8-98004-319-1		1103-		01	A M14X55
335	--- WASHER; CAB LOCK ROD						
		0-91610-508-0		1103-		01	A (A) ID=8.4 OD=16
		0-91610-612-0		1103-		02	A (B) ID=12.5 OD=26
		8-98060-839-0		1103-		02	A (C) ID=13 OD=22 IDN
337	--- CLIP; CAB LOCK						
		8-97173-307-0		1103-	L	02	A L=155 IDN

https://truckmanualshub.com/

5-20 BATTERY CARRIER

FIG-NO.

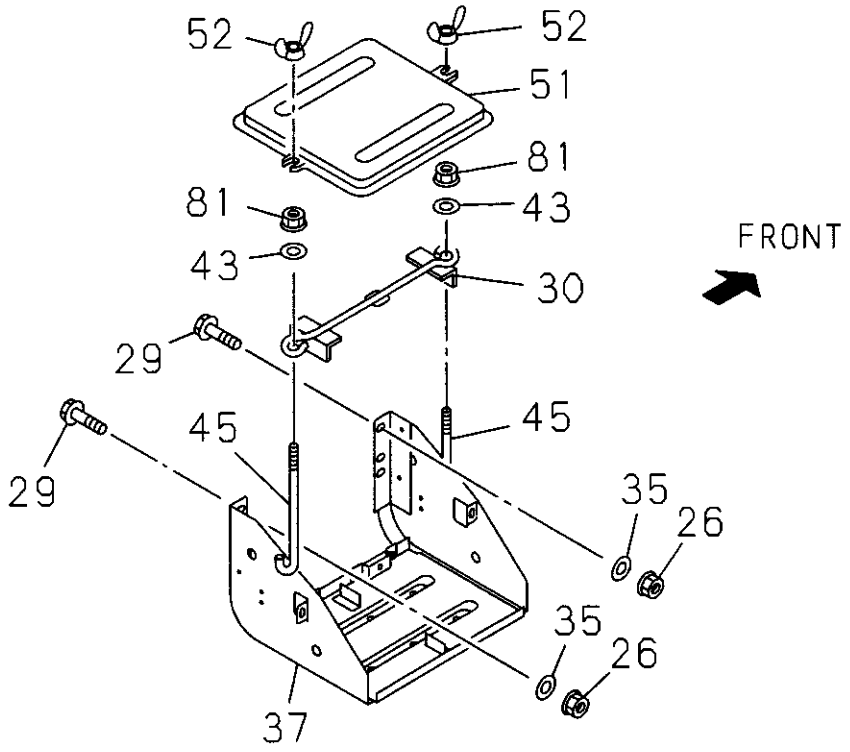

https://truckmanualshub.com/

BATTERY CARRIER

5-20


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
26	--- NUT; BRKT						
		0-91180-210-0		1103-		04	A M10 FLANGE
29	--- BOLT; BRKT TO FRAME						
		0-28651-035-0		1103-		04	A M10X35 FLANGE IDN
30	--- PLATE; BATTERY						
		5-53615-004-1		1103-		01	A IDN
35	--- WASHER; PL, BATTERY CARRIER						
		0-91614-610-0		1103-		04	A ID=10.5 OD=22
37	--- BRACKET; BATTERY						
		8-97384-068-2		1103-		01	A BATTERY 65D23L<8EJ> IDN
		8-97384-067-2		1103-		01	A BATTERY 80D26L<TM1> IDN
43	--- WASHER; PL, CLAMP						
		0-91614-708-0		1103-		02	A ID=8.4 OD=22
45	--- ROD; TENSION, BATTERY						
		9-53616-615-0		1103-		02	A IDN
51	--- COVER; BATTERY						
		8-97120-747-0		1103-		01	A IDN
52	--- NUT; WING, COVER FIX						
		0-91118-408-0		1103-		02	A M8 WING NUT IDN
81	--- NUT; BATTERY						
		0-91180-108-0		1103-		02	A M8 FLANGE

https://truckmanualshub.com/

5-30 SPARE TIRE CARRIER AND COVER

FIG-NO.

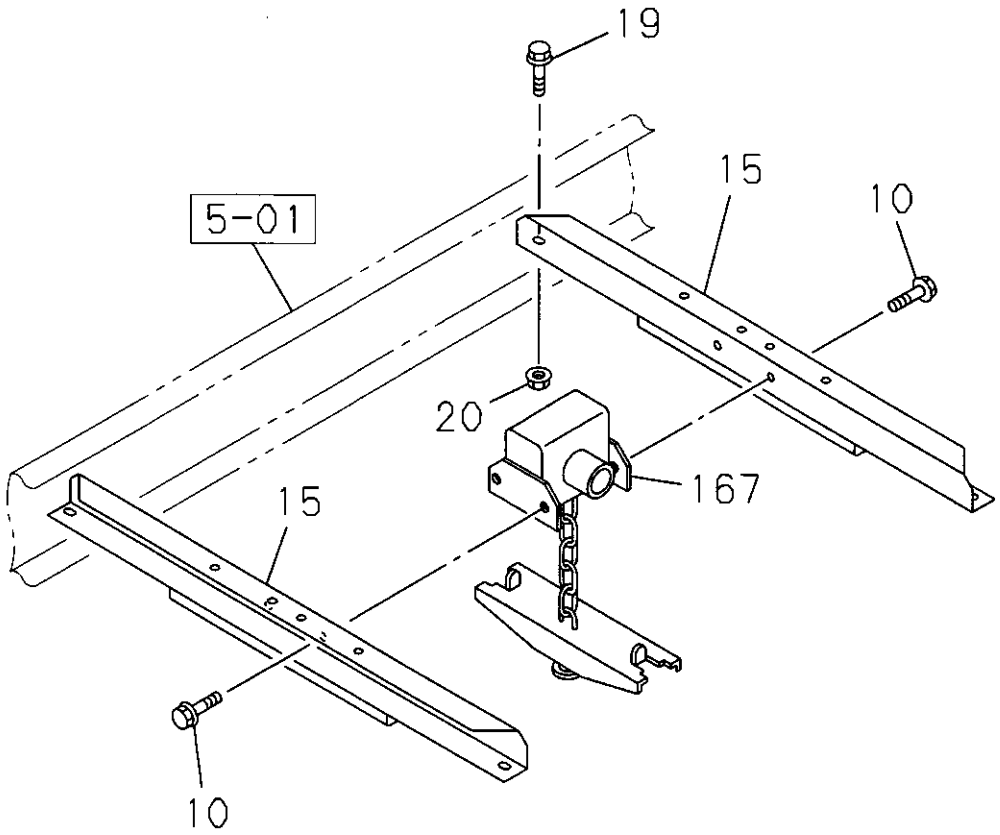

https://truckmanualshub.com/

SPARE TIRE CARRIER AND COVER

5-30

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
10	--- BOLT; TIRE HANGER						
		0-28650-820-0		1103-		04	A SPARE WHEEL CARRIER FRAME REAR(P10) M8X20 FLANGE IDN
15	--- MEMBER; CROSS, SPARE TIRE						
		8-98044-388-0		1103-		02	A SPARE WHEEL CARRIER FRAME REAR(P10)
19	--- BOLT; C/MBR						
		0-28051-025-0		1103-		04	A SPARE WHEEL CARRIER FRAME REAR(P10) M10X25 FLANGE
20	--- NUT; C/MBR						
		0-91180-210-0		1103-		04	A SPARE WHEEL CARRIER FRAME REAR(P10) M10 FLANGE
167	--- HANGER; TIRE						
		8-98036-383-0		1103-		01	A SPARE WHEEL CARRIER FRAME REAR(P10)


https://truckmanualshub.com/

6

https://truckmanualshub.com/

6-01 FRONT BUMPER

FIG-NO.

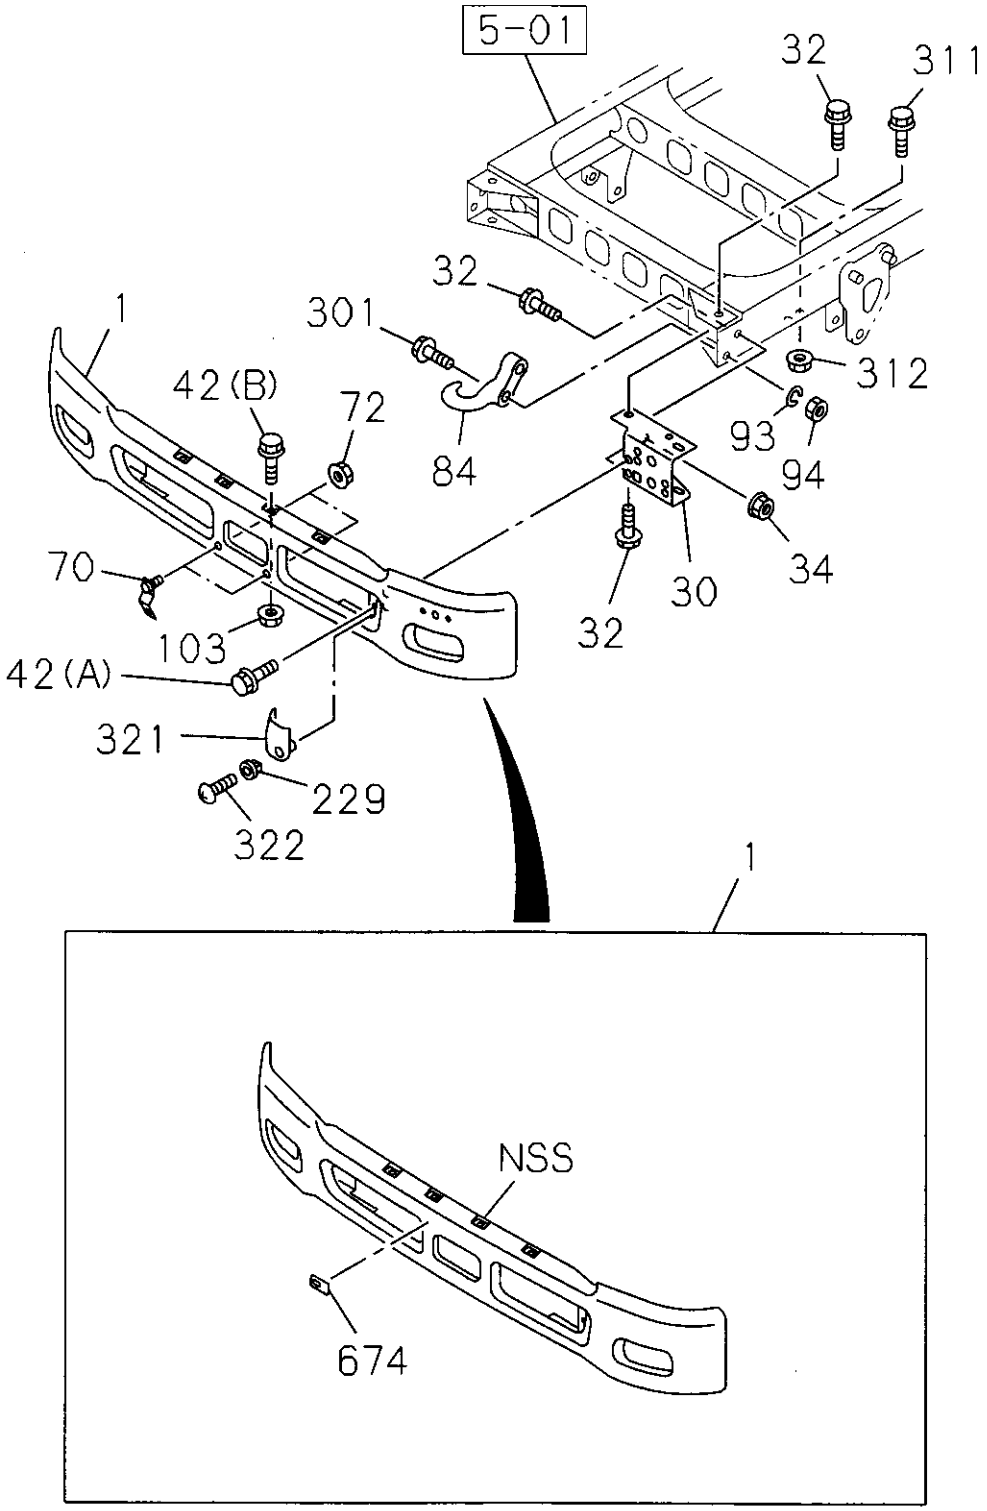

https://truckmanualshub.com/

FRONT BUMPER

6-01
FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	-C- BUMPER ASM; FRT					
	8-97407-725-3		1103-		01	A WHITE
30	--- BRACKET; FRT BUMPER					
	8-97611-516-4		1103-	L	01	A
	8-97611-515-4		1103-	R	01	A
32	--- BOLT; BRKT, BUMPER					
	0-28651-035-0		1103-		06	A M10X35 FLANGE 1DN
34	--- NUT; BRKT, BUMPER					
	0-91180-210-0		1103-		02	A M10 FLANGE
42	--- BOLT; BUMPER					
	8-94324-205-0		1103-		04	A (A) M10X30
	8-98098-459-0		1103-		04	A (B) M6X16 FLANGE
70	--- BRACKET; LICENSE PLATE, FRT					
	8-97611-492-1		1103-		02	A
72	--- NUT; BRKT					
	0-91180-106-0		1103-		02	A M6 FLANGE
84	--- HOOK					
	8-98035-644-1		1103-	L	01	A
93	--- WASHER; LK, HOOK					
	0-91510-814-0		1103-		02	A ID=14.2
94	--- NUT; HOOK					
	0-91110-514-0		1103-		02	A M14
103	--- NUT; BUMPER STEP					
	0-91180-106-0		1103-		04	A M6 FLANGE

https://truckmanualshub.com/

6-01 FRONT BUMPER


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
229	--- GROMMET					
	5-09983-007-0		1103-		02	A
301	--- BOLT; HOOK TO FRAME					
	0-10861-460-0		1103-		02	A M14X60
311	--- BOLT; BRKT					
	0-28851-445-0		1103-		02	A M14X45 FLANGE
312	--- NUT; BRKT					
	0-91180-214-0		1103-		02	A M14 FLANGE
321	--- COVER; BUMPER FRT SIDE					
	8-97616-294-0		1103-	L	01	A
	8-97616-293-0		1103-	R	01	A
322	--- SCREW; COVER FIX					
	0-72180-516-0		1103-		02	A M5X16 TAPPING
674	--- BRACKET; BUMPER, PLATE					
	8-97611-491-1		1103-		01	A

https://truckmanualshub.com/

6-03 RADIATOR GRILLE

FIG-NO.

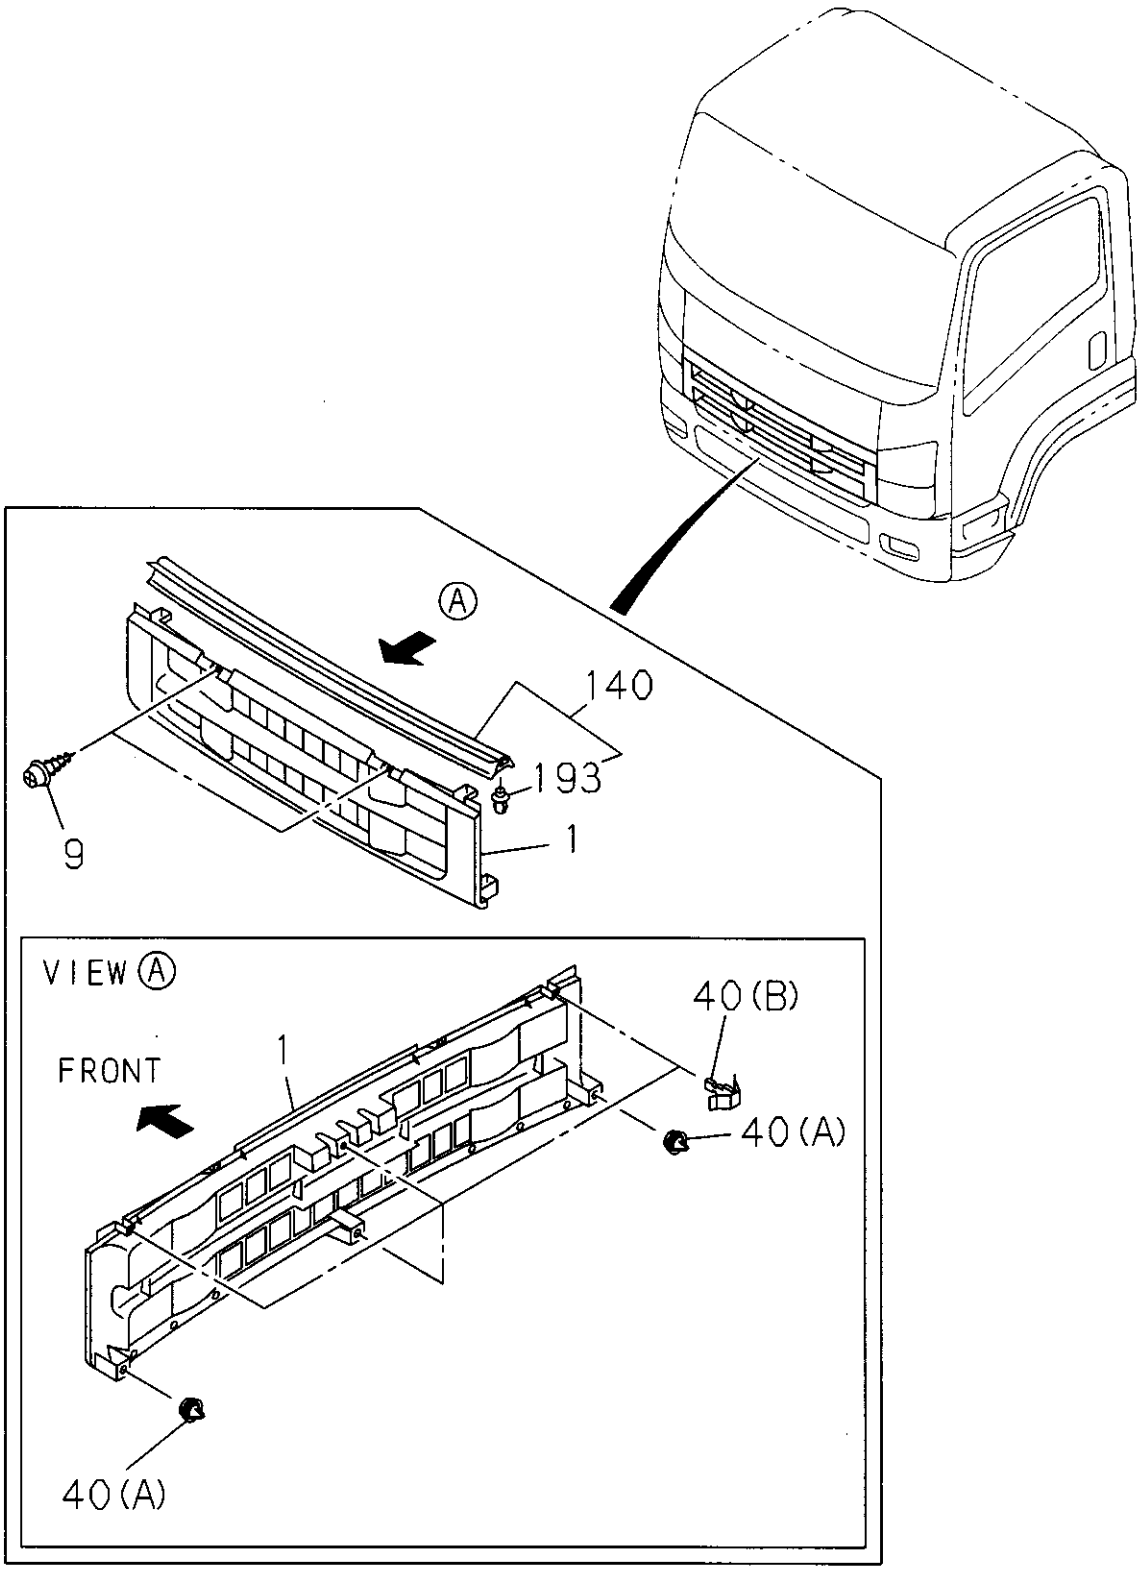

https://truckmanualshub.com/


RADIATOR GRILLE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	-C- GRILLE; RAD					
	8-98040-994-5		1103-		01	A DARK GRAY
9	--- SCREW; RAD GRILLE					
	0-74160-516-0		1103-		02	A M5X16 TAPPING W/PL WASHER IDN
40	--- CLIP; RAD GRILLE					
	8-97581-651-2		1103-		02	A (A)
	8-98025-698-0		1103-		04	A (B)
140	--- SEAL; RAD GRILLE					
	8-98060-339-0		1103-		01	A
193	--- CLIP; SEAL					
	8-98027-457-0		1103-		13	A

https://truckmanualshub.com/

6-05 FRONT PANEL

FIG-NO. FRONT PANEL AND OTHER PARTS

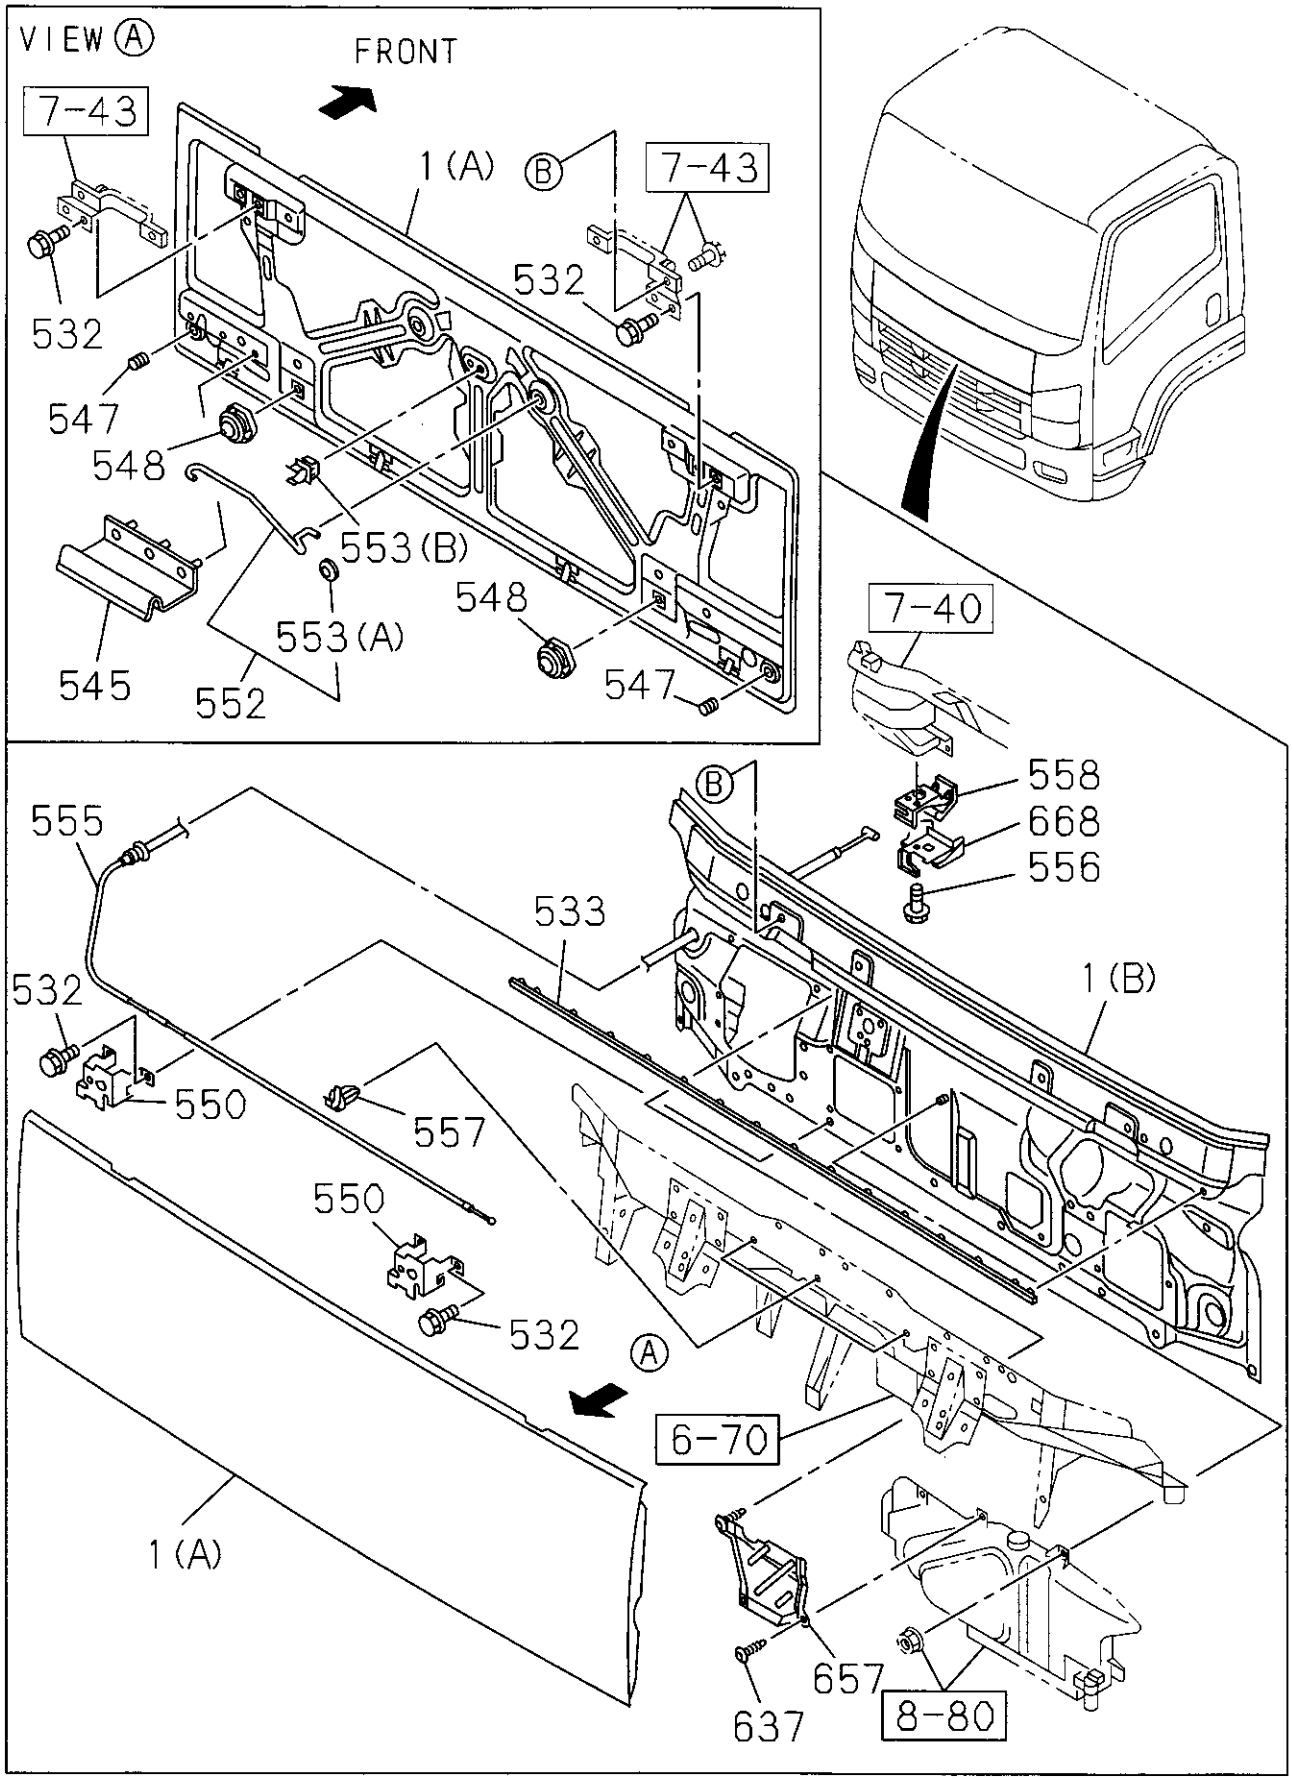



https://truckmanualshub.com/

FRONT PANEL

FRONT PANEL COMPONENT

FIG-NO.

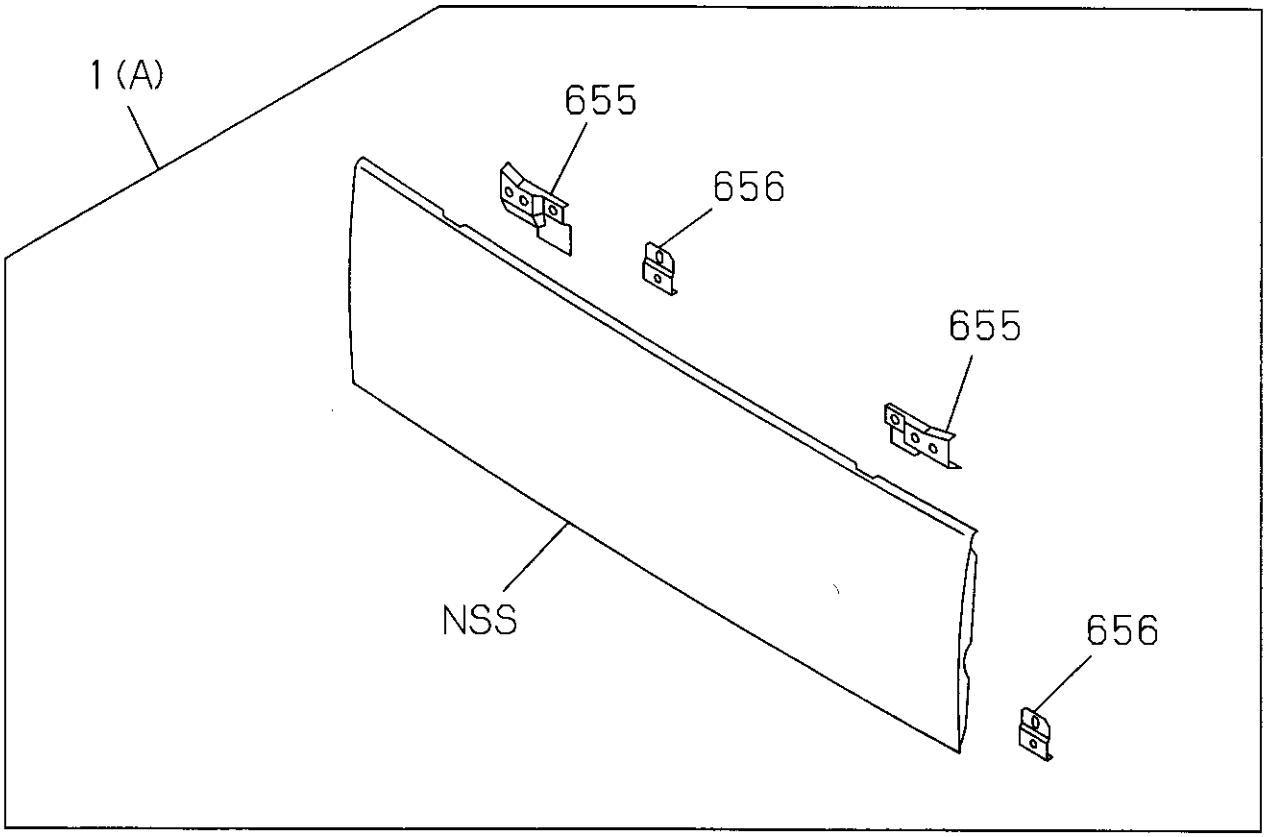


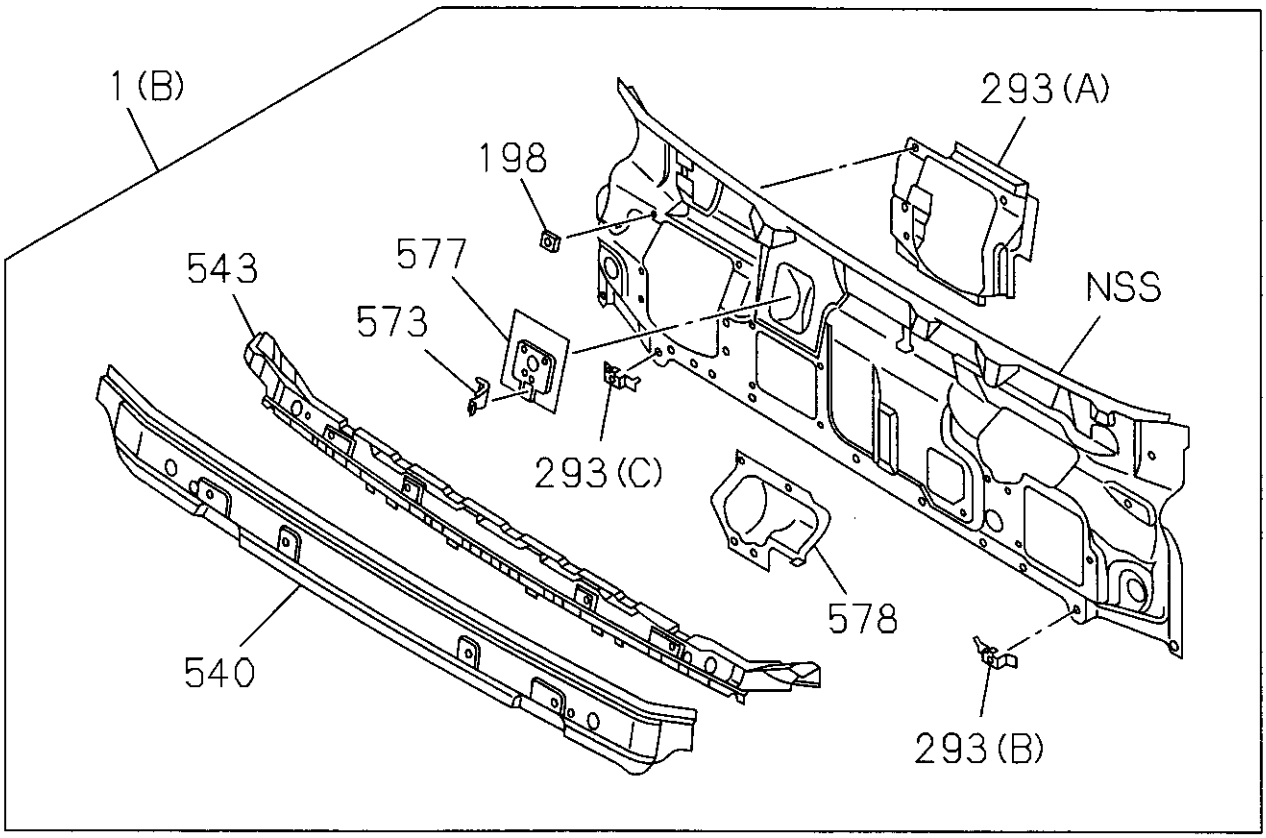

https://truckmanualshub.com/

6-05 FRONT PANEL

FIG-NO. SIDE PANEL

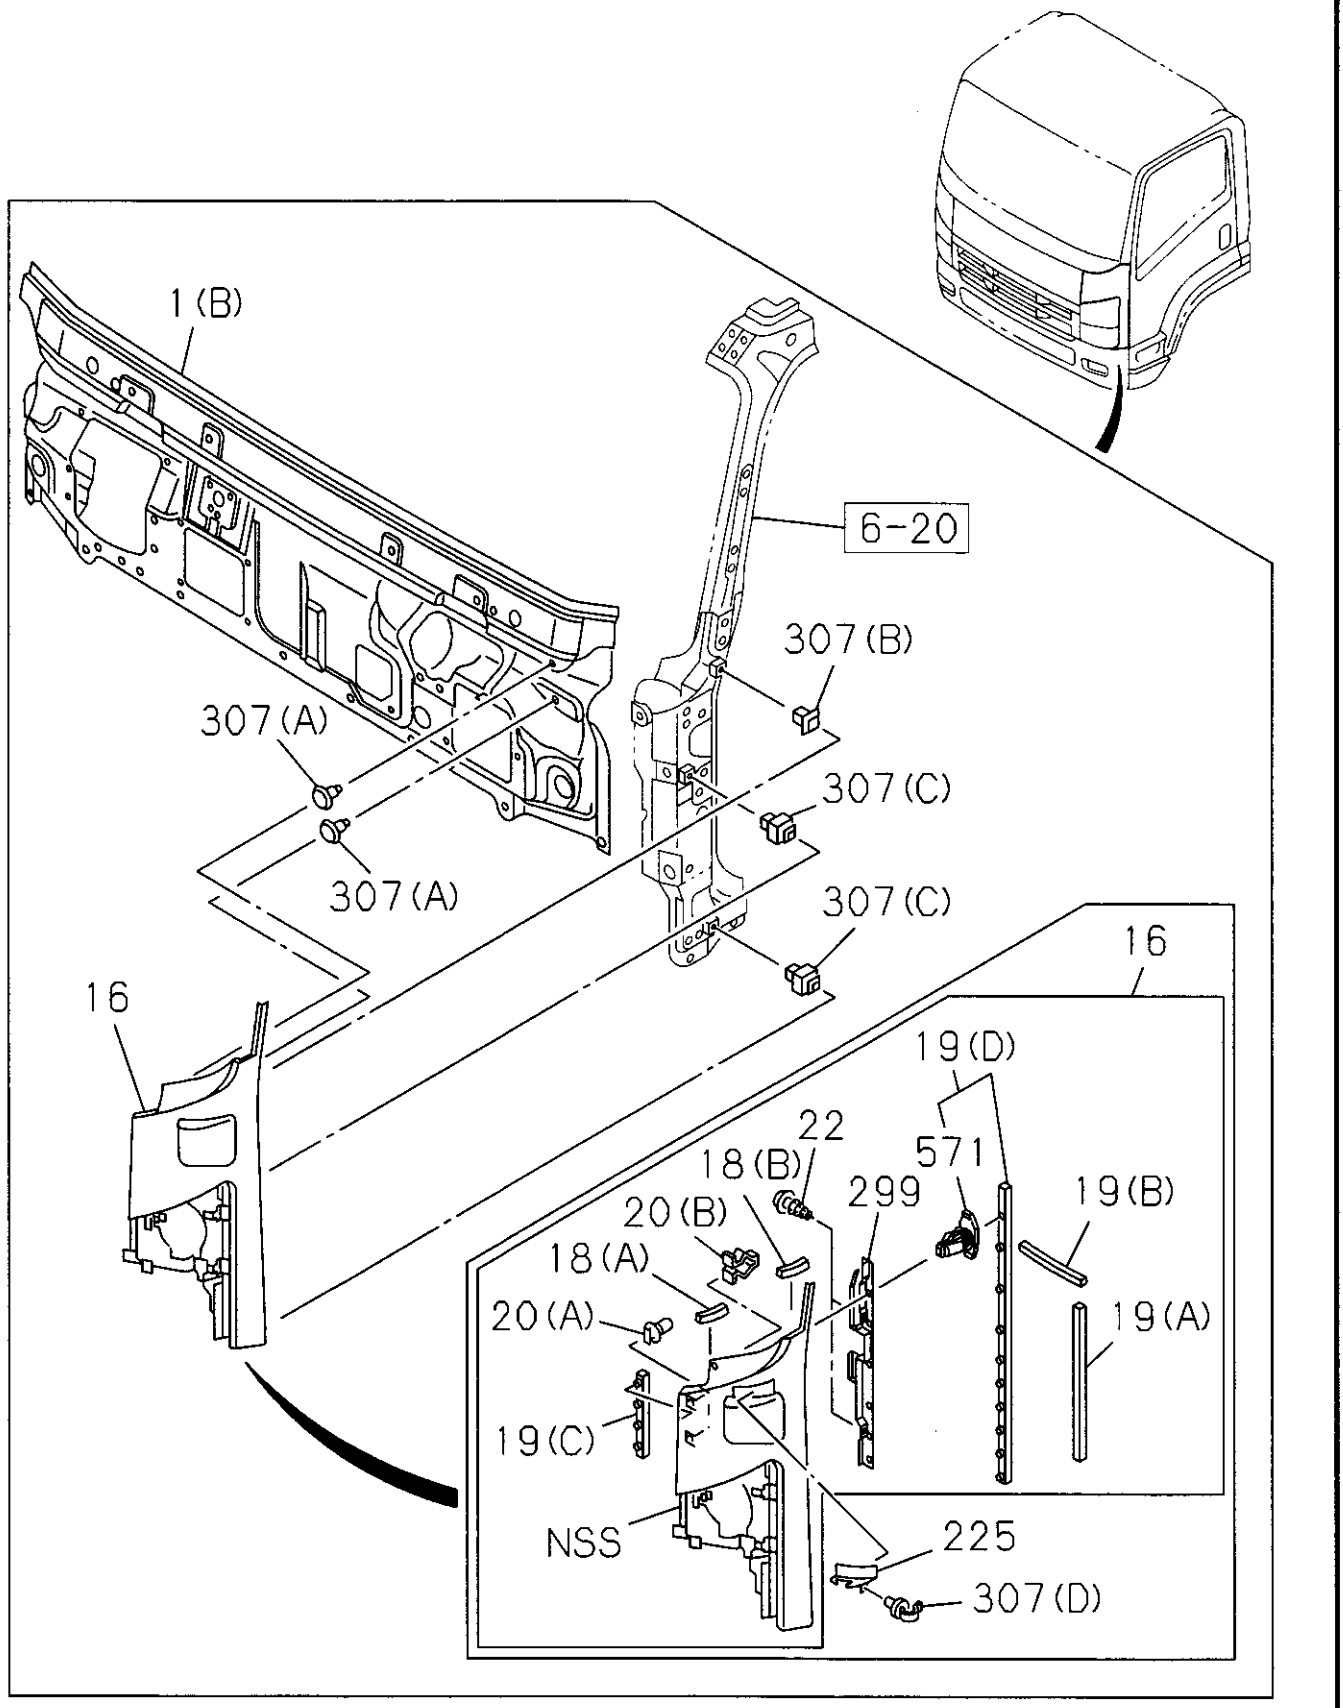


https://truckmanualshub.com/

FRONT PANEL

FENDER

6-05


FIG-NO.

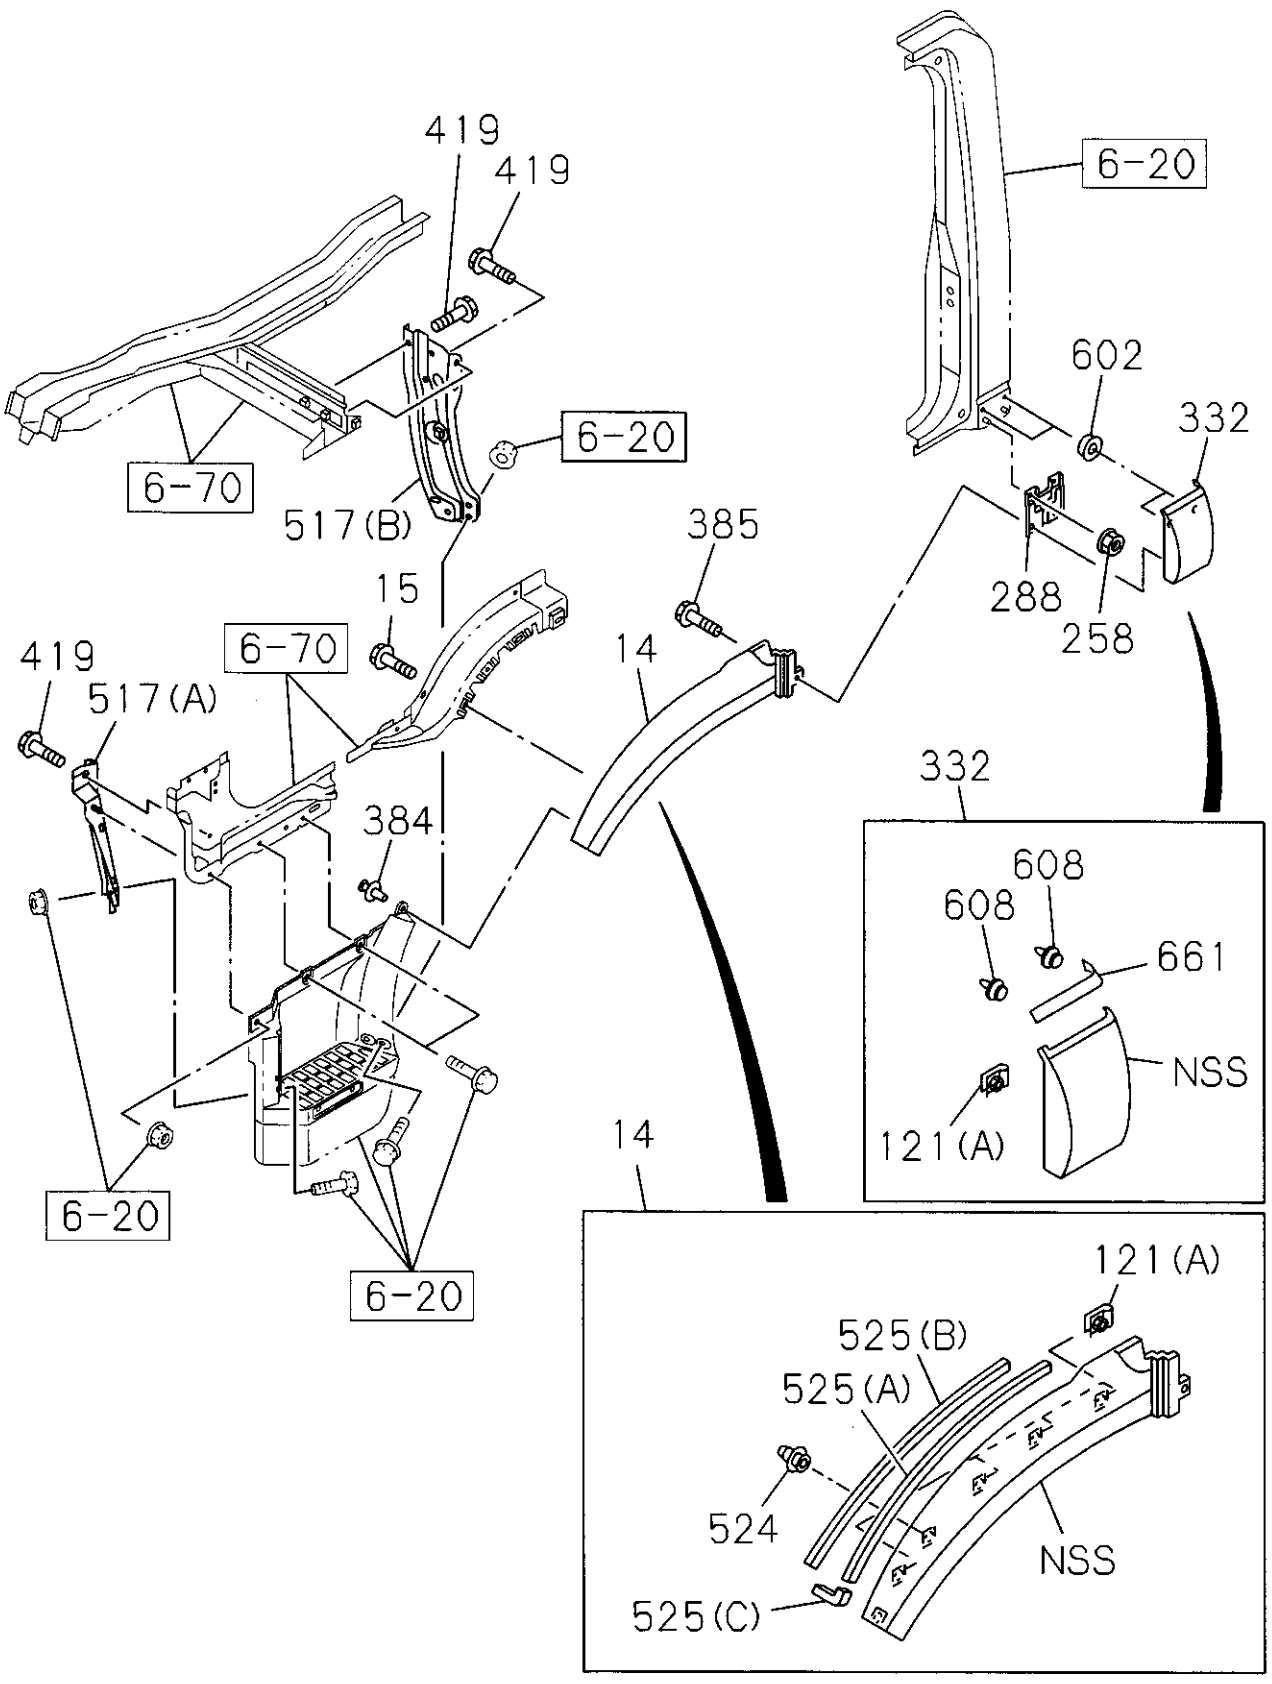

https://truckmanualshub.com/

6-05 FRONT PANEL

FIG-NO. PROTECTOR AND BLISTER FENDER

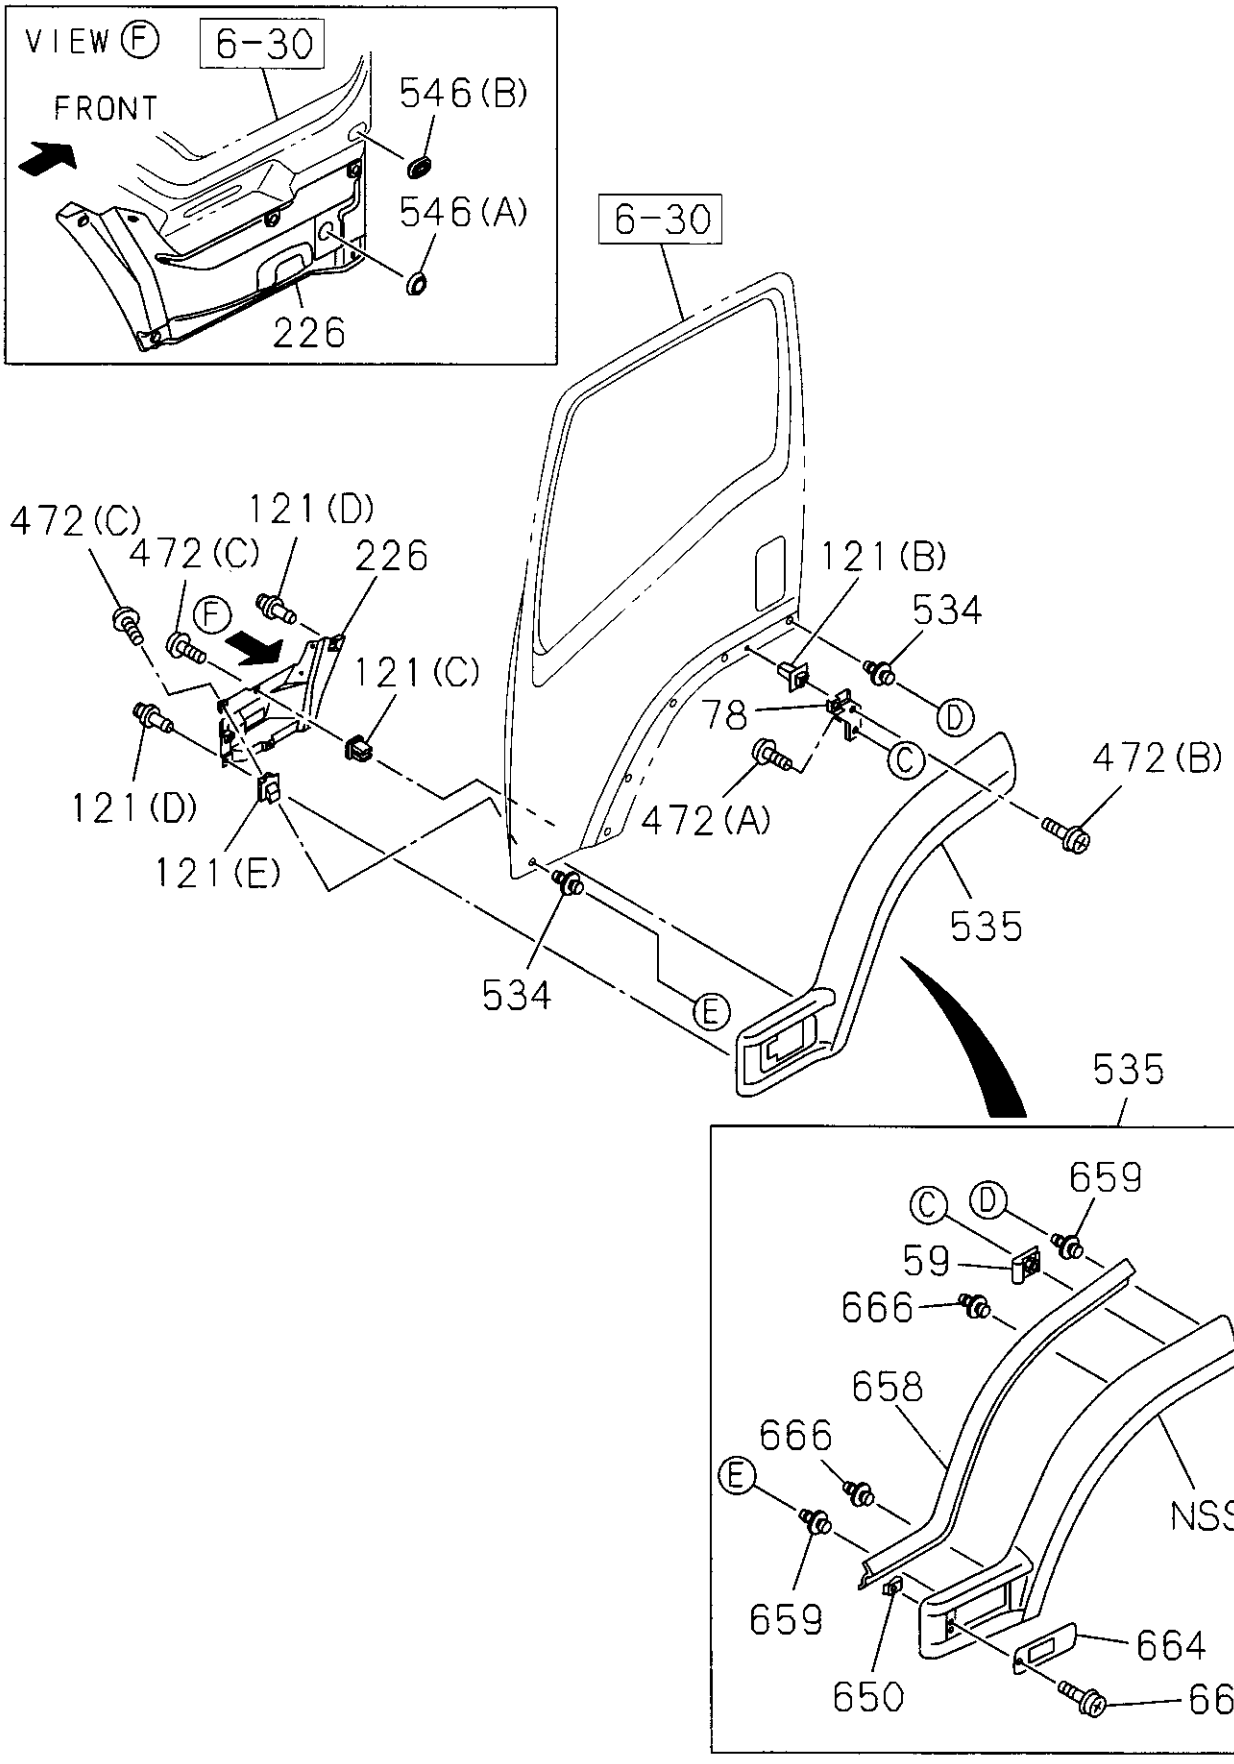

https://truckmanualshub.com/

FRONT PANEL

6-05
FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	-C- PANEL ASM; FRT						
	8-97585-958-8		1103-		01	A	(B)
	8-98030-230-3		1103-		01	A	(A)
14	-C- FENDER; FRT						
	8-98182-321-0		1103-	L	01	A	
	8-98182-320-0		1103-	R	01	A	
15	--- BOLT; FENDER						
	8-98059-504-0		1103-		06	A	M6X20 W/PL WASHER
16	-C- PANEL; FRONT, SIDE						
	8-97407-511-5		1103-	L	01	A	WHITE
	8-97407-509-4		1103-	R	01	A	WHITE
18	--- SEAL; A-POST UPR, FRT SIDE PANEL						
	8-98038-608-0		1103-		02	A	(B)
	8-98043-511-1		1103-		02	A	(A)
19	--- SEAL; FRT SIDE PANEL						
	8-98035-268-0		1103-		02	A	(B)
	8-98062-215-0		1103-		02	A	(A)
	8-98036-581-0		1103-	L	01	A	(C)
	8-98041-359-2		1103-	L	01	A	(D)
	8-98036-580-0		1103-	R	01	A	(C)
	8-98041-358-2		1103-	R	01	A	(D)
20	--- CLIP; FRT PANEL SIDE						
	8-97410-739-0		1103-		04	A	(A)
	8-97410-740-2		1103-		02	A	(B)

https://truckmanualshub.com/

6-05 FRONT PANEL

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
22	--- SCREW; FRT PANEL SIDE						
		0-74360-410-0		1103-		06	A M4X10 TAPPING W/PL WASHER
59	--- GROMMET; SCREW						
		8-94279-723-0		1103-		02	A
78	--- BRACKET; FENDER						
		8-98041-166-1		1103-	L	01	A
		8-98041-165-1		1103-	R	01	A
121	--- GROMMET; FENDER						
		8-94279-078-0		1103-		06	A (C) D=8.5X8.5 L=7.5 IDN
		8-94279-723-0		1103-		02	A (A)
		8-94279-723-0		1103-		06	A (A)
		8-94279-989-0		1103-		10	A (D) OD=8.3 IDN
		8-94463-268-1		1103-		04	A (B) H=15 IDN
		8-98073-421-0		1103-	L	01	A (E)
		8-98073-420-0		1103-	R	01	A (E)
198	--- NUT; PANEL						
		9-09114-086-0		1103-		02	A M6
225	--- COVER; SIDE, FRT						
		8-98041-431-1		1103-	L	01	A
226	--- PROTECTOR; FRT						
		8-98037-713-2		1103-	L	01	A
		8-98037-712-2		1103-	R	01	A

https://truckmanualshub.com/

FRONT PANEL

6-05
FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
258	--- NUT; BRKT					
	0-91180-106-0		1103-		04	A M6 FLANGE
288	--- BRACKET; FENDER SKIRT					
	8-98041-162-1		1103-		02	A
293	--- BRACKET; PANEL					
	8-97586-007-3		1103-		01	A (A)
	8-98008-124-1		1103-	L	01	A (B)
	8-98008-126-1		1103-	R	01	A (C)
299	--- COVER; FRT PANEL SIDE					
	8-98034-814-1		1103-	L	01	A
	8-98034-813-1		1103-	R	01	A
307	--- GROMMET; FRT PANEL					
	8-97410-738-0		1103-		02	A (B)
	8-98021-300-1		1103-		04	A (C)
	8-98034-363-1		1103-		04	A (A)
	8-98028-743-0		1103-	L	01	A (D)
332	--- FENDER; RR					
	8-98089-820-0		1103-	L	01	A
	8-98089-819-0		1103-	R	01	A
384	--- CLIP; FENDER LWR					
	1-09987-248-1		1103-		02	A D8X13.5
385	--- SCREW; FENDER LWR					
	8-98059-504-0		1103-		02	A M6X20 W/PL WASHER
419	--- BOLT; STEP					
	0-28650-820-0		1103-		08	A M8X20 FLANGE IDN

https://truckmanualshub.com/

6-05 FRONT PANEL

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
472	--- SCREW; FENDER TO CAB						
	8-98059-505-0		1103-		02	A	(A) M6X18 TAPPING
	8-98090-737-0		1103-		08	A	(C) M5X16
	8-98093-669-0		1103-		04	A	(B) M5X12
517	--- SUPPORT; STEP PANEL						
	8-98037-336-1		1103-	L	01	A	(A)
	8-98037-339-2		1103-	L	01	A	(B)
	8-98037-335-1		1103-	R	01	A	(A)
	8-98037-338-2		1103-	R	01	A	(B)
524	--- CLIP; FENDER COVER						
	8-94279-974-1		1103-		02	A	OD=7.9 BLACK
525	--- SEAL; FENDER						
	8-98061-760-0		1103-		02	A	(A) UPPER
	8-98061-761-0		1103-		02	A	(B) LOWER
	8-98061-762-0		1103-		02	A	(C)
532	--- BOLT; FRT PANEL						
	0-28650-820-0		1103-		08	A	M8X20 FLANGE IDN
533	--- SEAL; FRT PANEL						
	8-98096-288-0		1103-		01	A	
534	--- FASTENER						
	1-09989-021-0		1103-		12	A	ID=5.4 OD=6.8

https://truckmanualshub.com/

FRONT PANEL

6-05
FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
535	--- FENDER; BLISTER					
	8-98106-499-0		1103-	L	01 A	BLACK
	8-98106-498-0		1103-	R	01 A	BLACK
540	--- PANEL; FRONT, OUTER					
	8-97585-965-2		1103-		01 A	
543	--- CLOSING; FRT MTG RAIL					
	8-97585-989-4		1103-		01 A	
545	--- SEAL; FRT LID					
	8-98123-264-0		1103-		01 A	
546	--- PLUG; DUMMY HOLE					
	8-94159-507-0		1103-		02 A	(A) OD=38
	8-94430-184-1		1103-		02 A	(B)
547	--- RUBBER; CUSHION					
	8-94324-556-2		1103-		02 A	OD=22 L=29
548	--- STRIKER; FRT LID PANEL					
	8-98068-145-1		1103-		02 A	
550	--- LOCK ASM; FRT LID					
	8-98036-569-2		1103-		02 A	
552	--- STAY; FRT LID					
	8-98089-836-0		1103-		01 A	
553	--- CLIP; STAY					
	8-97031-428-0		1103-		01 A	(B)
	8-98059-320-0		1103-		01 A	(A)
555	--- CABLE; FRT LID					
	8-98036-573-1		1103-		01 A	

https://truckmanualshub.com/

6-05 FRONT PANEL

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
556	--- BOLT; CABLE						
		0-28650-616-0		1103-		01	A M6X16 FLANGE
557	--- CLIP; CABLE						
		8-94128-483-0		1103-		03	A ID=4.8
558	--- LEVER; FRT LID						
		1-79338-007-0		1103-		01	A
571	--- CLIP; SEAL						
		8-98027-457-0		1103-		20	A
573	--- BRACKET; SUPPORT						
		8-98008-127-2		1103-		01	A
577	--- BRACKET; IDLER						
		8-97586-019-1		1103-		01	A
578	--- COVER; WIPER MOTOR						
		8-97586-018-2		1103-		01	A
602	--- RETAINER; COVER						
		1-09989-021-0		1103-		04	A ID=5.4 OD=6.8
608	--- CLIP						
		1-09983-154-0		1103-		04	A D5.4X8
637	--- CLIP; COVER						
		1-76378-155-0		1103-		02	A OD=16 L=11
650	--- NUT; SPIRE						
		8-94279-501-0		1103-		02	A
655	--- PATCH; HINGE						
		8-98031-263-0		1103-	L	01	A
		8-98031-264-0		1103-	R	01	A
656	--- PATCH; STRIKER						
		8-98031-265-0		1103-		02	A

https://truckmanualshub.com/

FRONT PANEL

6-05


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	
						A LEAF SUS(FCR5CS)	
657	--- COVER; WIPER IDLER						
	8-98060-908-0		1103-		01	A	
658	--- FINISHER; BLISTER FENDER						
	8-98041-169-3		1103-	L	01	A	
	8-98041-168-3		1103-	R	01	A	
659	--- CLIP; FENDER						
	1-09983-154-0		1103-		08	A	D5.4X8
661	--- FINISHER; FENDER RR						
	8-98072-722-0		1103-	L	01	A	
	8-98041-171-1		1103-	R	01	A	
664	--- BASE; DOOR, SIDE TURN						
	8-98053-146-1		1103-	L	01	A	
	8-98053-145-1		1103-	R	01	A	
665	--- SCREW; FENDER						
	0-36210-620-0		1103-		02	A	M6X20 W/PL WASHER
666	--- CLIP; BLISTER FENDER						
	8-98071-178-0		1103-		04	A	
668	--- COVER; LEVER, FRT LID						
	8-98076-339-0		1103-		01	A	

https://truckmanualshub.com/

6-07 FRONT WINDOW GLASS AND WEATHERSTRIP

FIG-NO.

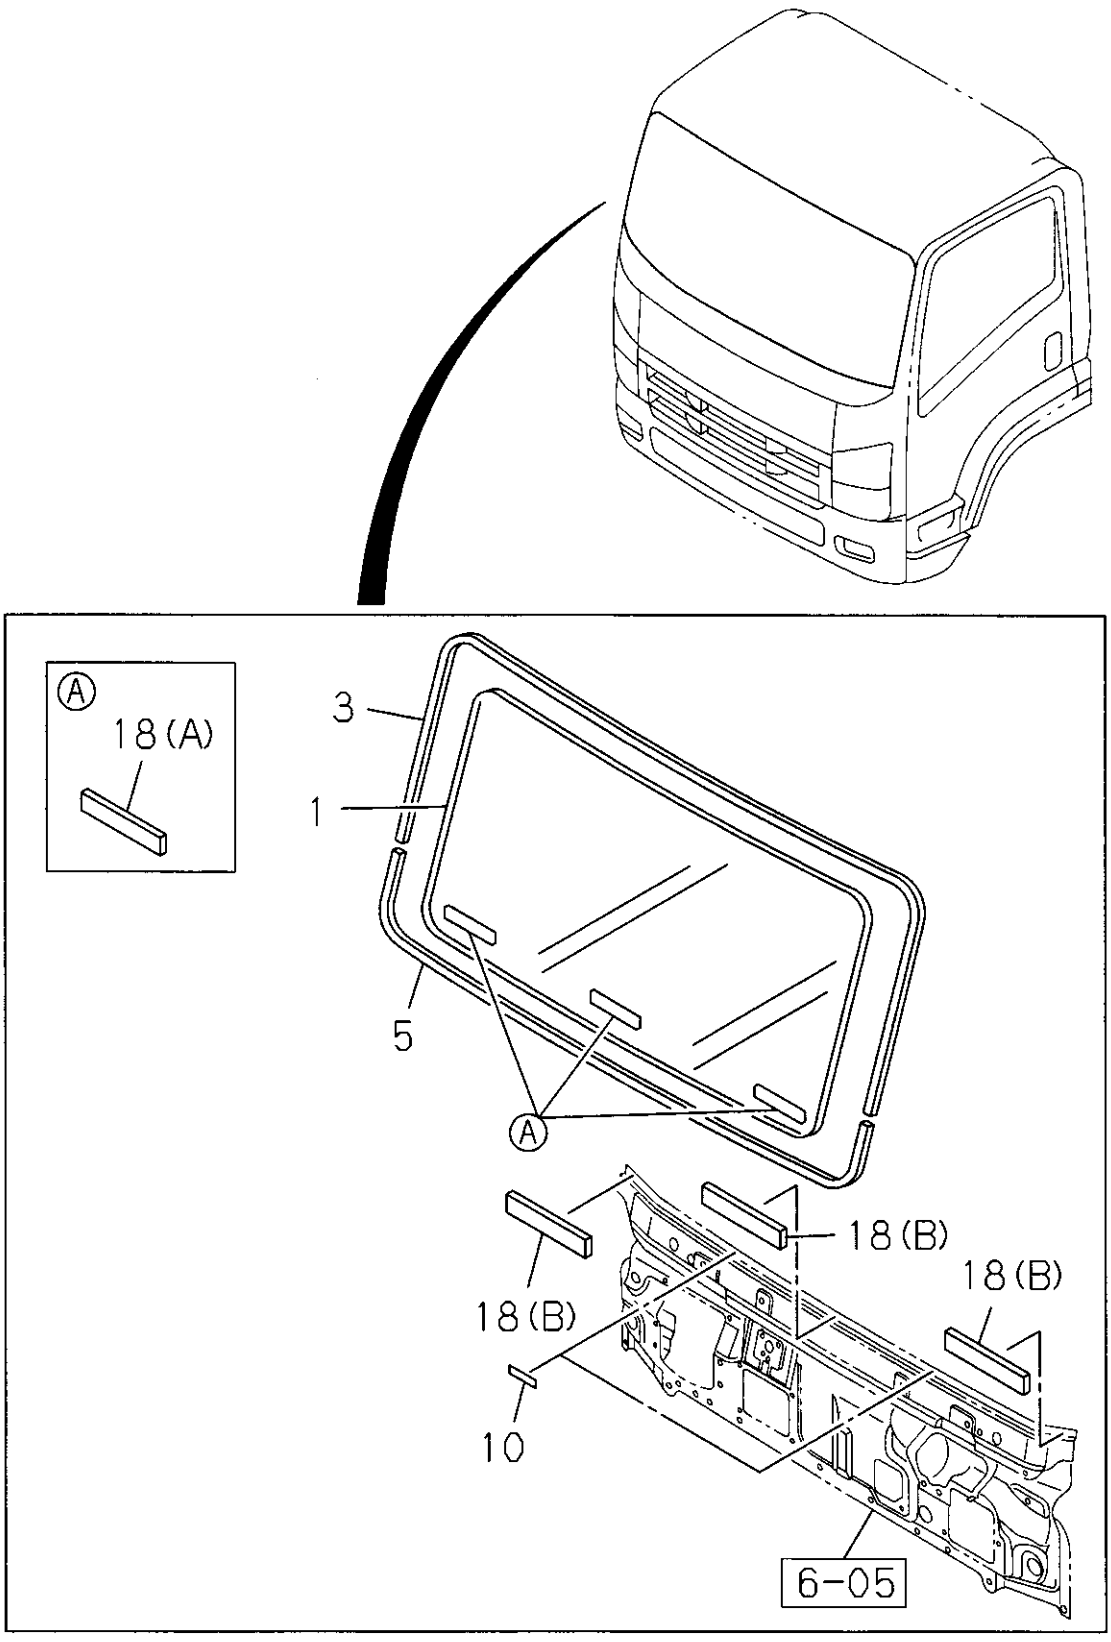

https://truckmanualshub.com/

FRONT WINDOW GLASS AND WEATHERSTRIP

6-07


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	-C- GLASS; WINDSHIELD					
	8-98041 646-A		1103-		01	A
3	-C- MOLDING; WINDSHIELD					
	8-98041-650-3		1103-		01	A
5	-C- MOLDING; WINDSHIELD, LWR					
	8-98041-653-2		1103-		01	A
10	--- SPACER; WINDSHIELD GLASS					
	8-98095-044-0		1103-		02	A
18	--- SEAL; WINDSHIELD					
	8-98029-086-1		1103-		10	A (A) L=100 B=8
	8-98083-198-1		1103-		10	A (B) L=100 B=10


https://truckmanualshub.com/

6-20 SIDE PANEL AND STEP

FIG-NO. SIDE PANEL

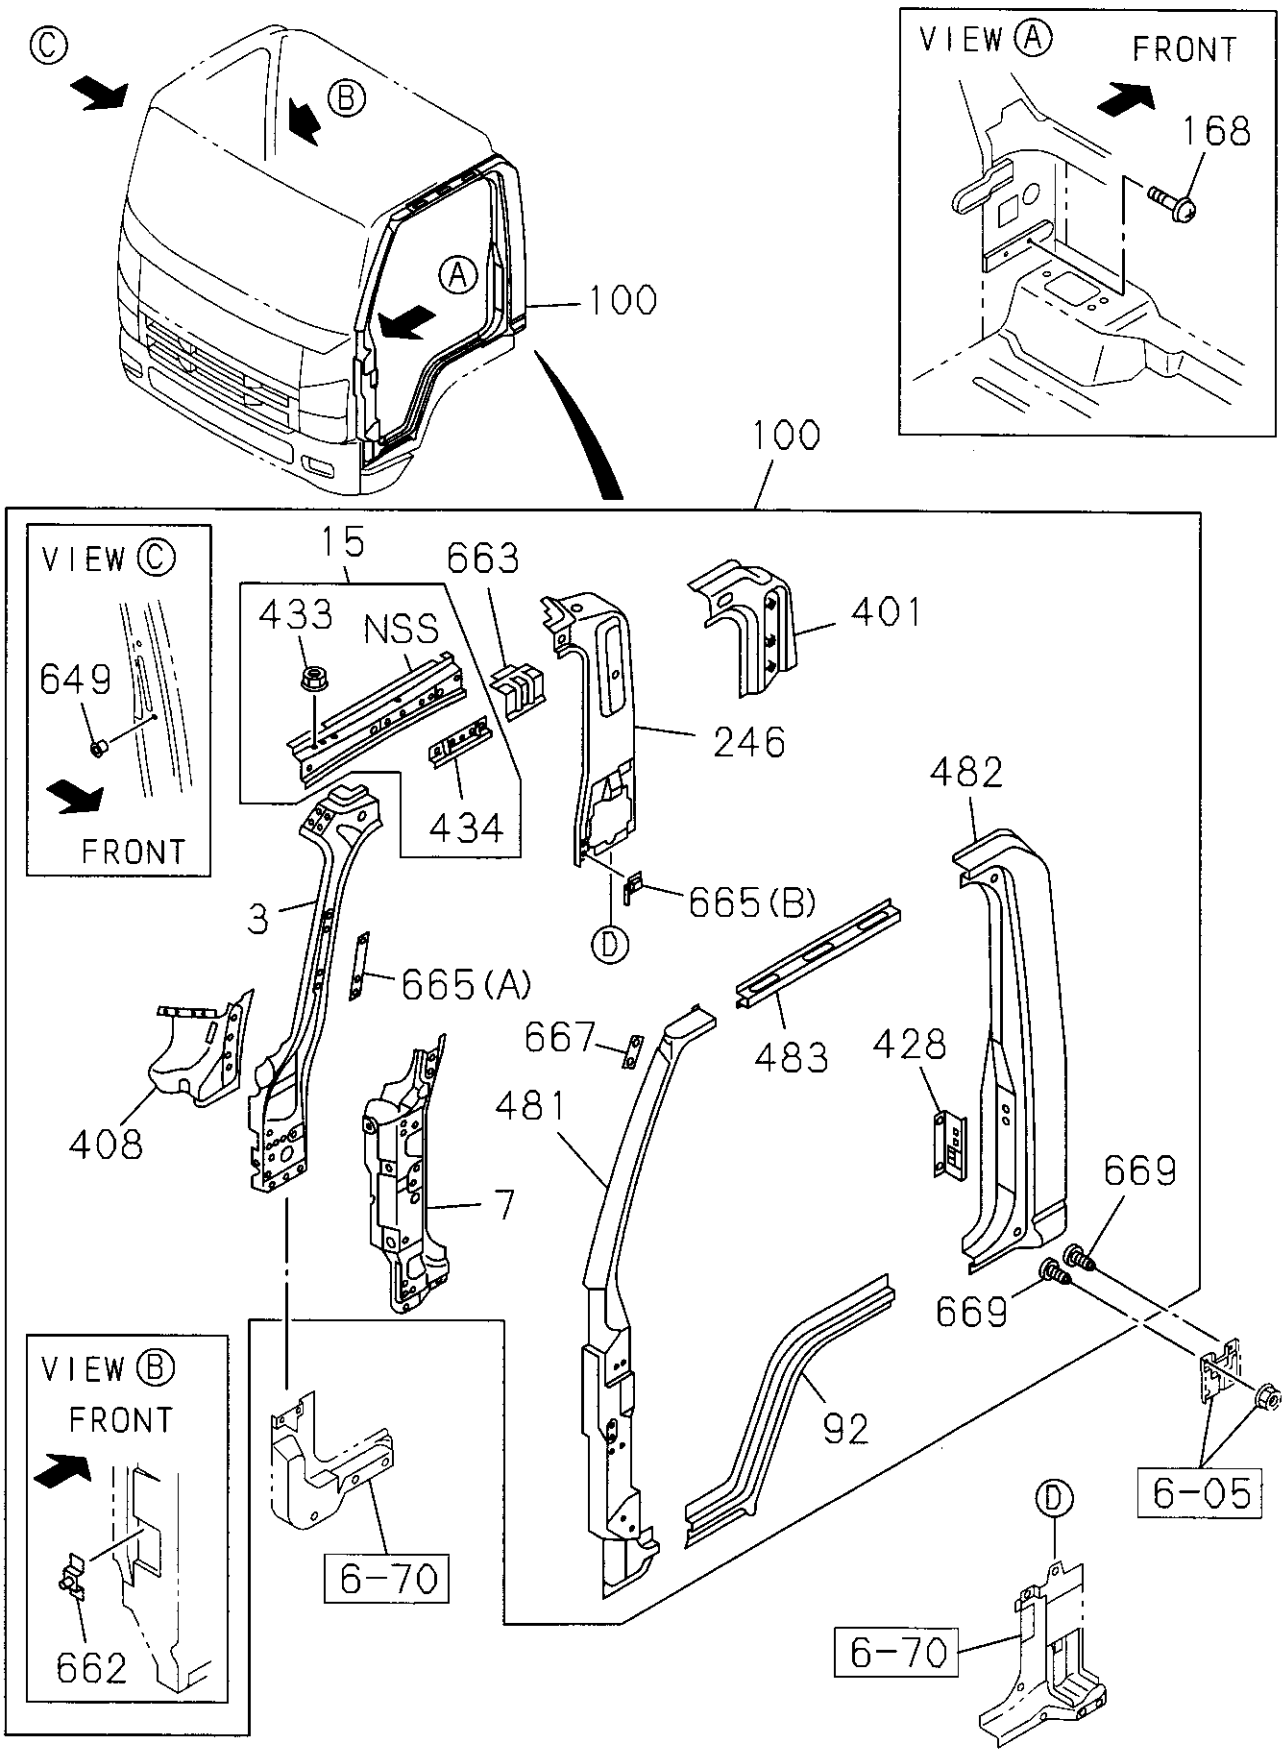

https://truckmanualshub.com/

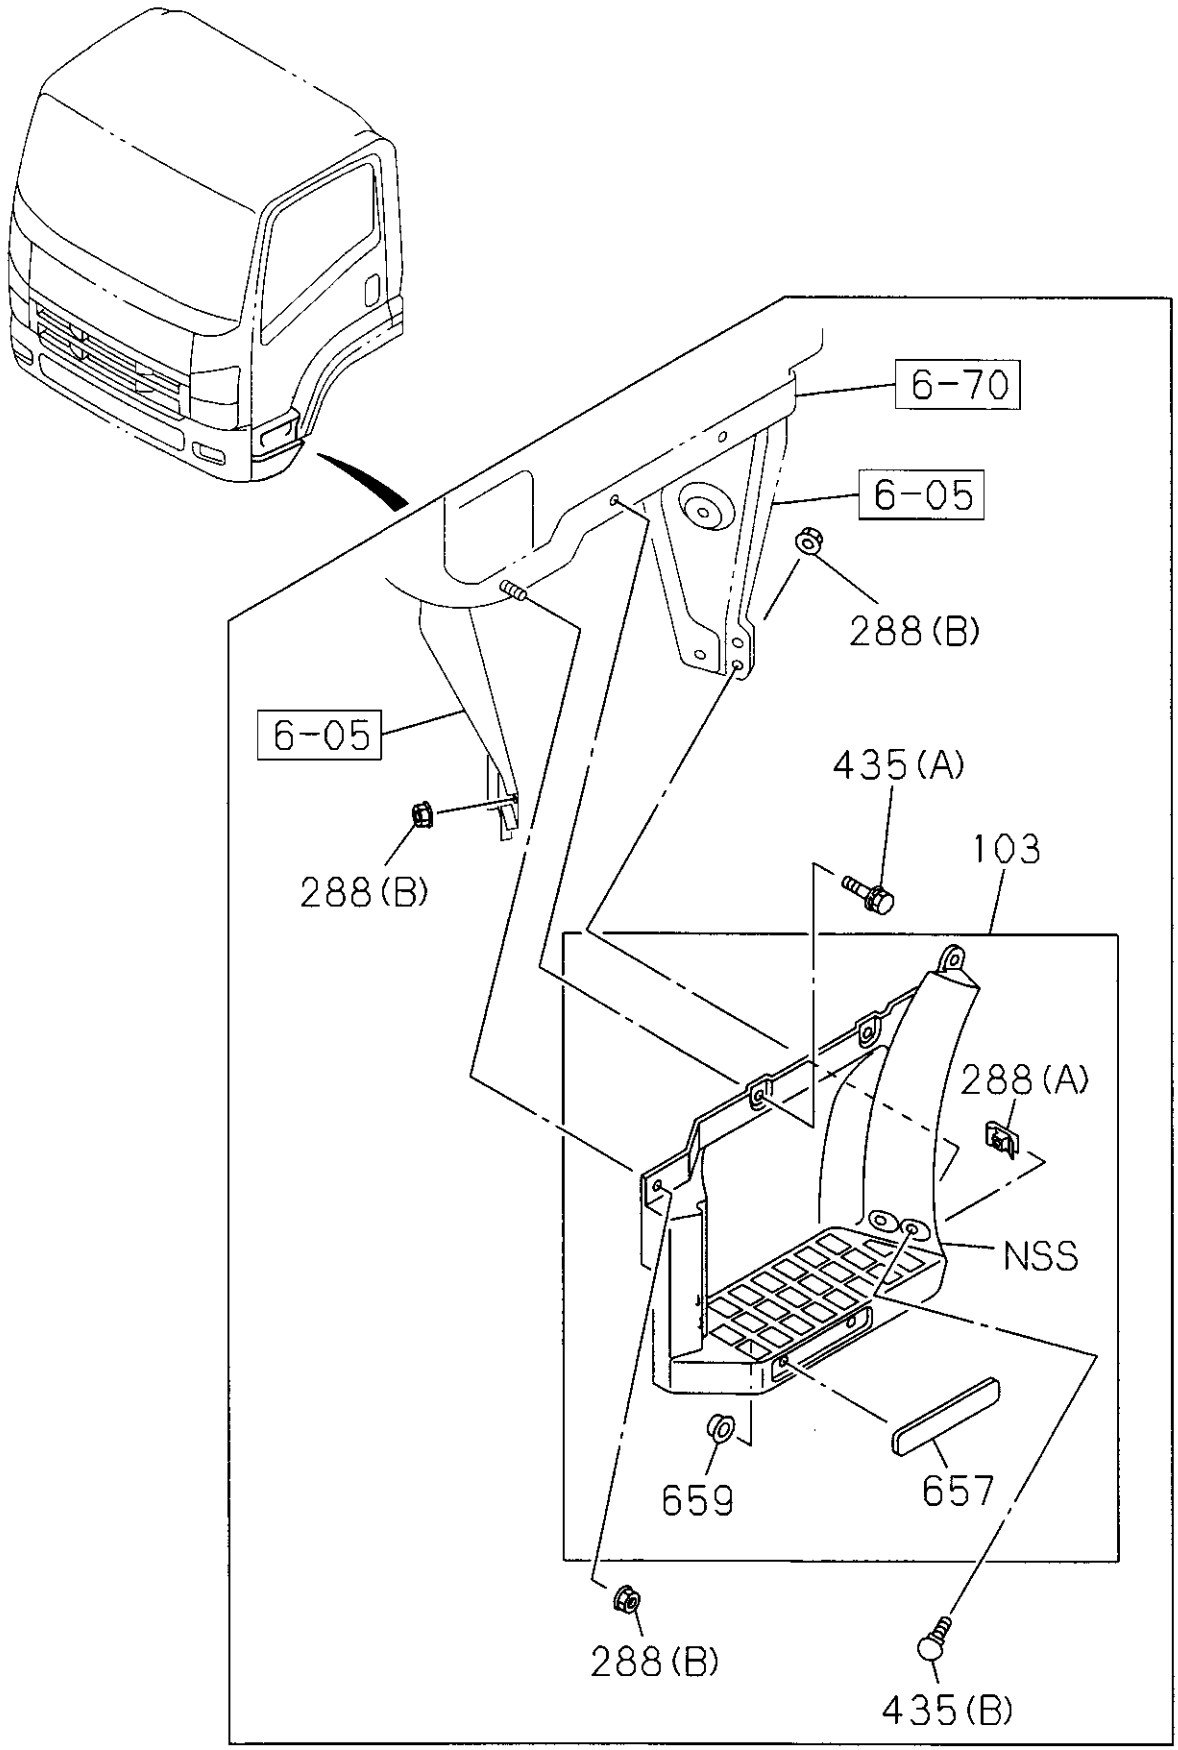

https://truckmanualshub.com/

6-20 SIDE PANEL AND STEP

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
3	--- PANEL; CLOSING, FRT PILLAR					
	8-98058-237-1		1103-	L	01	A
	8-98058-236-1		1103-	R	01	A
7	--- REINFORCEMENT; HINGE					
	8-97585-244-3		1103-	L	01	A
	8-97585-240-2		1103-	R	01	A
15	--- PANEL; CANT RAIL SIDE					
	8-97585-293-2		1103-	L	01	A
	8-97585-292-2		1103-	R	01	A
92	--- PANEL; SIDE SILL, CAB					
	8-98055-462-1		1103-	L	01	A
	8-98055-461-1		1103-	R	01	A
100	--- PANEL ASM; BODY SIDE					
	8-98185-954-0		1103-	L	01	A LAMPS TWO ROOF MARKER<TEC>
	8-97586-027-6		1103-	R	01	A LAMPS TWO ROOF MARKER<TEC>
	8-98103-332-1		1103-	L	01	A EXC. LAMPS TWO ROOF MARKER<TEC>
	8-97586-028-6		1103-	R	01	A EXC. LAMPS TWO ROOF MARKER<TEC>
103	--- PLATE; STEP					
	8-98037-329-3		1103-	L	01	A
	8-98037-327-3		1103-	R	01	A
168	--- BOLT; BODY SIDE PANEL					
	0-38050-612-0		1103-		08	A M6X12 HEXALOBULAR SOCKET
246	--- PANEL; RR PILLAR, INNER					
	8-97585-301-3		1103-	L	01	A
	8-97586-154-3		1103-	R	01	A
288	--- NUT; STEP					
	0-91180-108-0		1103-		10	A (B) M8 FLANGE
	8-98040-792-0		1103-		02	A (A) M8

https://truckmanualshub.com/

SIDE PANEL AND STEP

KEY NO.	RECOMMEND CLASS／PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
401	--- PATCH; CLOSING, FRT PILLAR					
	8-97585-303-2		1103-	L	01	A
	8-98065-791-0		1103-	R	01	A
408	--- GUSSET; PILLAR					
	8-97586-194-2		1103-	L	01	A
	8-97586-193-3		1103-	R	01	A
428	--- REINFORCEMENT; DOOR STRIKER					
	8-97585-261-4		1103-	L	01	A
	8-97585-260-4		1103-	R	01	A
433	--- NUT; HEADER SHELF					
	9-09114-086-0		1103-		04	A M6
434	--- PATCH; ASSIST GRIP					
	8-98039-020-0		1103-	L	01	A
	8-98039-019-0		1103-	R	01	A
435	--- BOLT; RR STEP					
	8-98059-720-0		1103-		04	A (A) M8X24.5 W/LK&PL WASHER
	8-98146-670-0		1103-		08	A (B) M8X18
481	--- PANEL; SIDE FRT PILLAR					
	8-98092-915-0		1103-	L	01	A LAMPS TWO ROOF MARKER<TEC>
	8-98093-580-0		1103-	R	01	A LAMPS TWO ROOF MARKER<TEC>
	8-98055-453-0		1103-	L	01	A EXC. LAMPS TWO ROOF MARKER<TEC>
	8-98055-471-0		1103-	R	01	A EXC. LAMPS TWO ROOF MARKER<TEC>
482	--- PANEL; SIDE RR PILLAR					
	8-98055-467-1		1103-	L	01	A
	8-98055-466-1		1103-	R	01	A
483	--- PANEL; SIDE CANTRAIL					
	8-98055-460-0		1103-	L	01	A
	8-98055-458-0		1103-	R	01	A

https://truckmanualshub.com/

6-20 SIDE PANEL AND STEP


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
649	--- NUT; POP						
	8-97249-574-0		1103-	R	02	A	M5 POP NUT
657	--- REFLECTOR; REFLEX						
	8-97378-910-0		1103-		02	A	
659	--- CLIP; SPRING NUT						
	8-97811-510-0		1103-		04	A	
662	--- BRACKET; DUCT						
	8-97584-611-1		1103-	R	01	A	
663	--- BRACKET; AIR						
	8-97585-208-2		1103-	L	01	A	
	8-97585-207-2		1103-	R	01	A	
665	--- REINFORCEMENT; GRIP, ASSIST						
	8-97585-314-0		1103-		02	A	(A)
	8-98012-287-1		1103-		02	A	(B)
667	--- BRACKET; MIRROR						
	8-98109-948-0		1103-		03	A	
669	--- STUD; FENDER						
	8-98013-113-1		1103-		04	A	M6X18

https://truckmanualshub.com/

6-30 FRONT DOOR AND HINGE

FIG-NO.

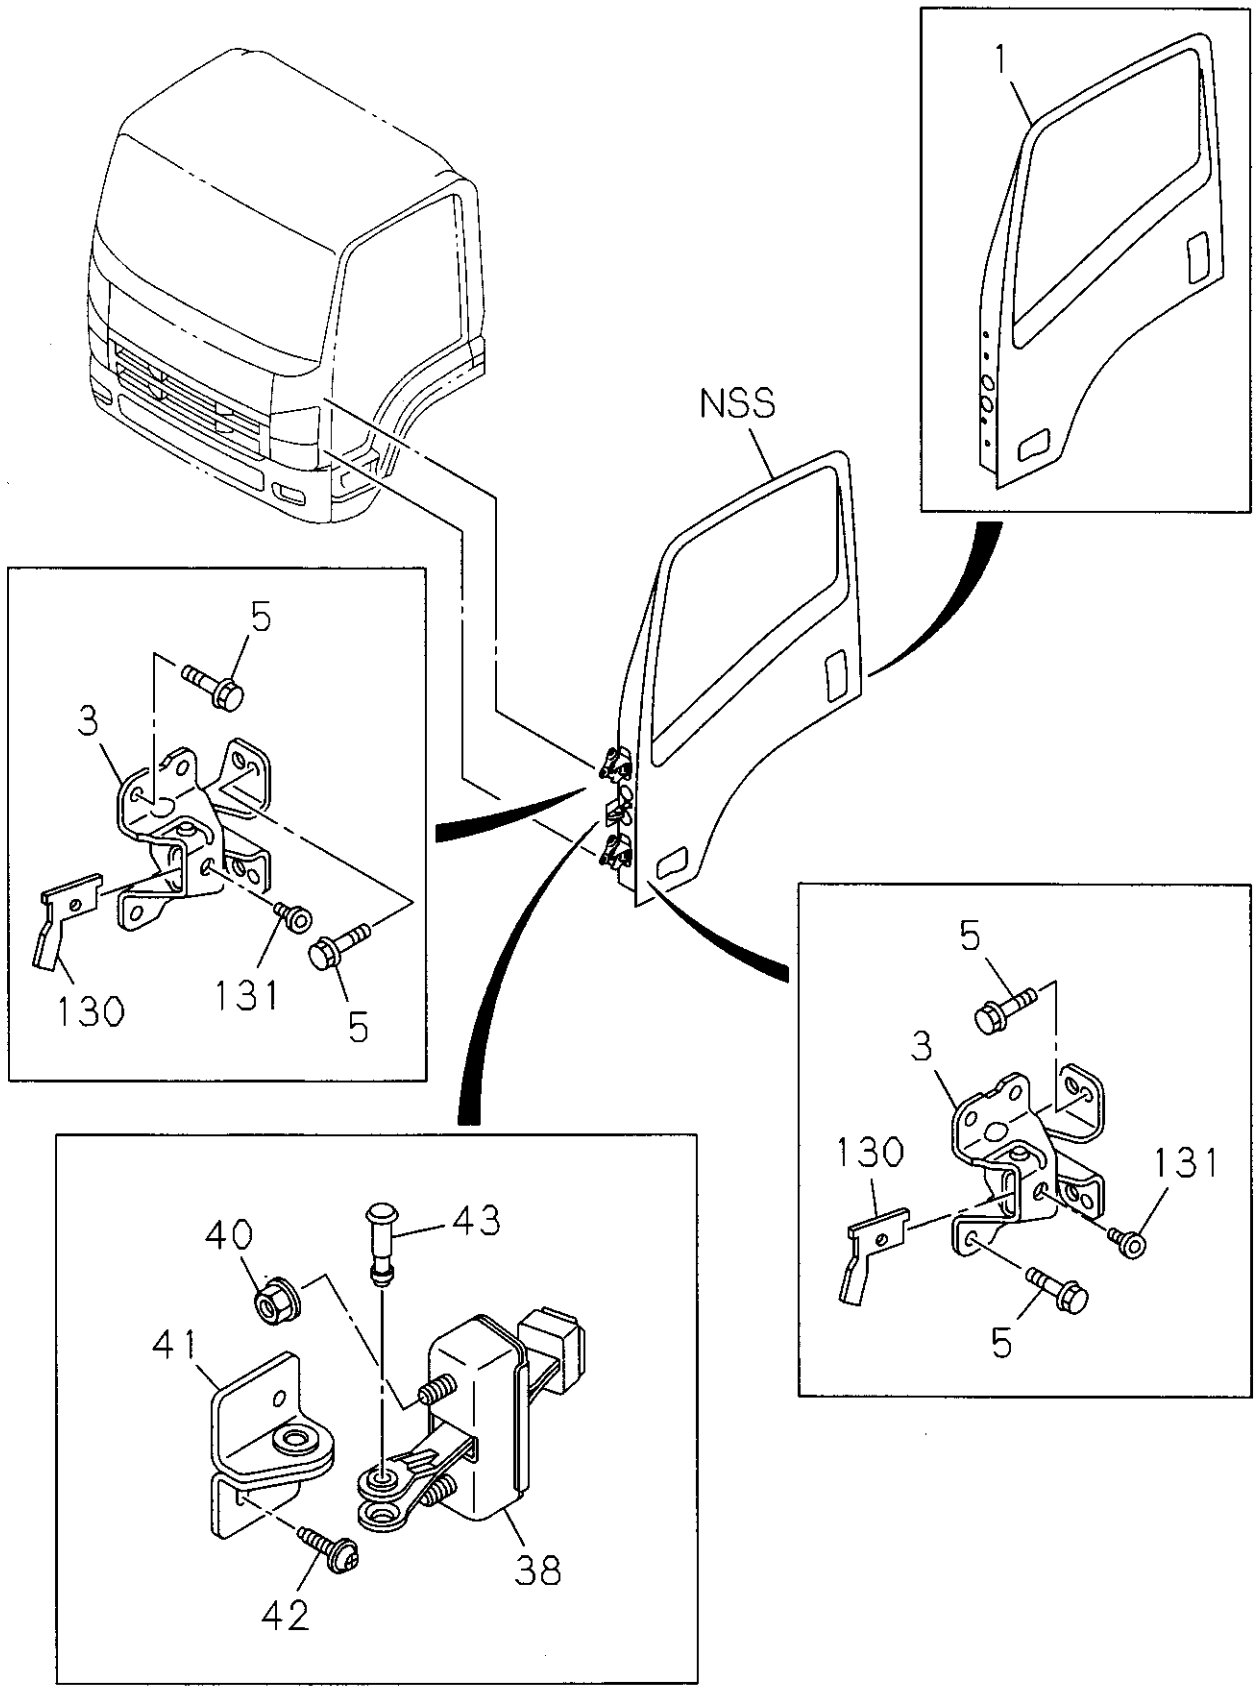

https://truckmanualshub.com/

FRONT DOOR AND HINGE


6-30
FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	-C- DOOR ASM; FRT, WO/TRIM						
		8-98171-232-0		1103-	L	01	A
		8-98171-224-0		1103-	R	01	A
3	-C- HINGE; DOOR FRT						
		8-98038-293-0		1103-		04	A
5	--- BOLT; HINGE						
		8-98049-756-0		1103-		20	A M8X20 FLANGE
38	--- CHECKER ASM; DOOR						
		8-98029-417-5		1103-		02	A
40	--- NUT; CHECKER						
		8-97329-625-0		1103-		04	A M8 W/DISHED WASHER
41	--- BRACKET; CHECKER						
		8-98029-290-3		1103-		02	A
42	--- BOLT; BRKT						
		8-98032-159-2		1103-		04	A SCREW M6X20 W/PL WASHER
43	--- PIN						
		8-98037-152-2		1103-		02	A
130	--- STOPPER; HINGE						
		8-98038-299-1		1103-		04	A
131	--- BOLT; DOOR STOPPER						
		8-98039-593-1		1103-		04	A M10X11

https://truckmanualshub.com/

6-31 FRONT DOOR GLASS AND REGULATOR


FIG-NO. RH

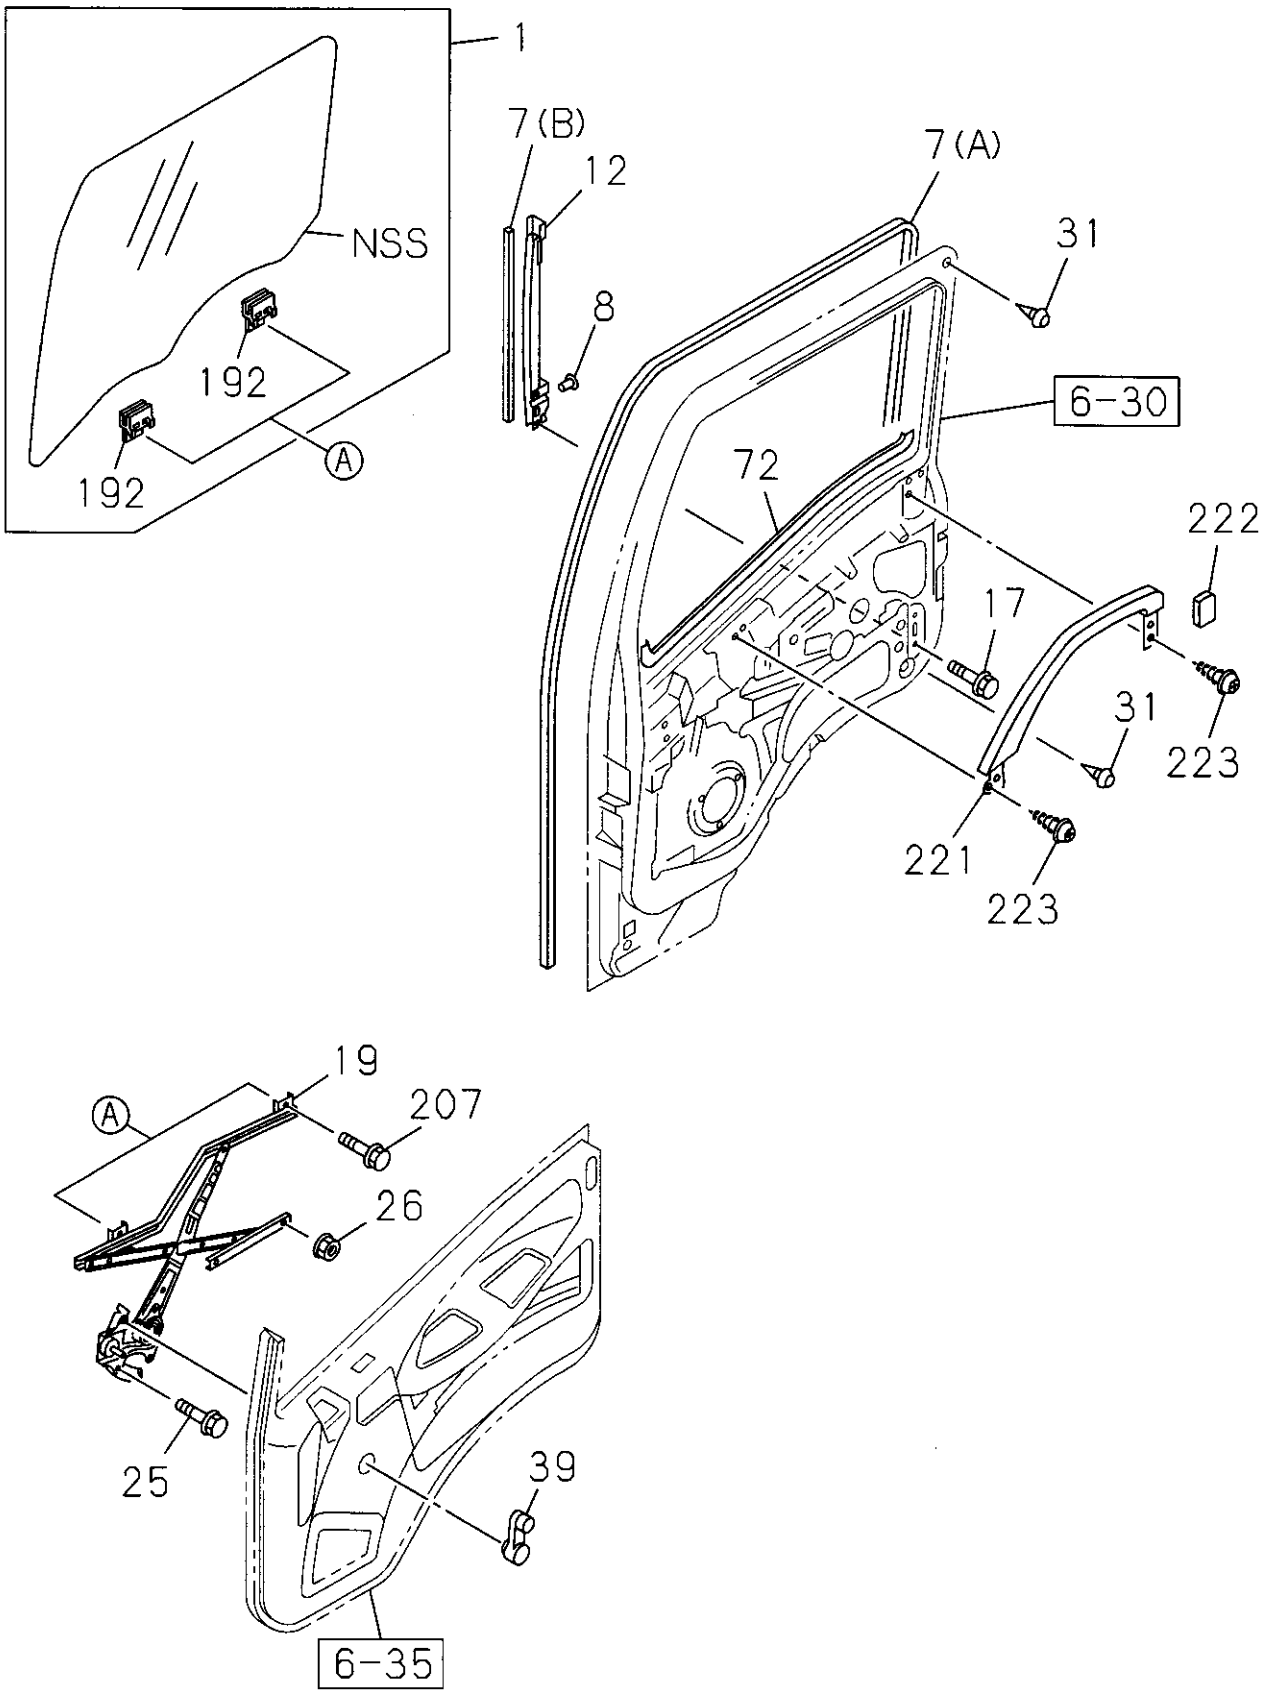

https://truckmanualshub.com/

FRONT DOOR GLASS AND REGULATOR

LH

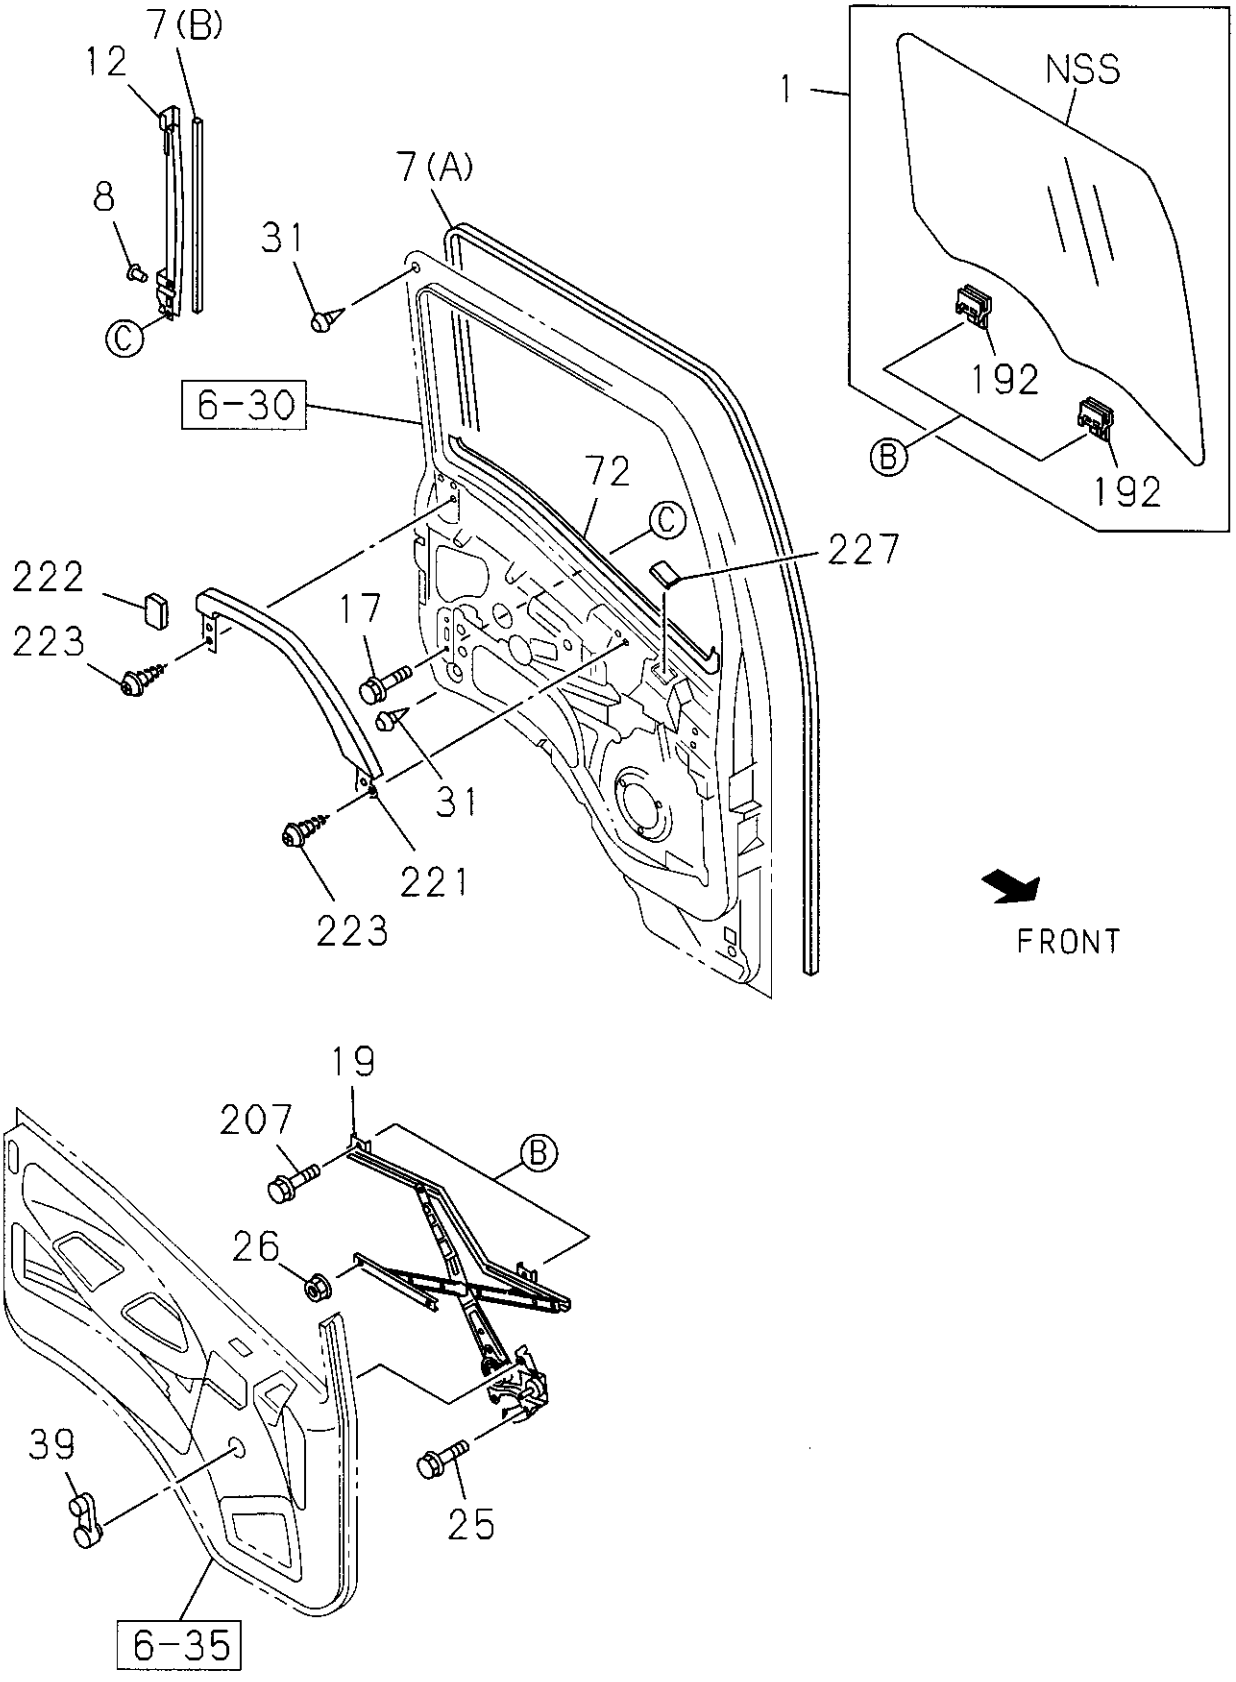

https://truckmanualshub.com/

6-31 FRONT DOOR GLASS AND REGULATOR

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	--- GLASS; FRT DOOR					
	8-98029 190-A		1103-	L	01	A
	8-98029 189-A		1103-	R	01	A
7	--- GLASS RUN; FRT DOOR					
	8-98031-742-2		1103-		02	A (B)
	8-98029-196-3		1103-	L	01	A (A)
	8-98029-195-3		1103-	R	01	A (A)
8	--- CLIP; GLASS GUIDE					
	8-98048-796-0		1103-		02	A
12	--- CHANNEL; GLASS RUN, FRT					
	8-98024-839-3		1103-	L	01	A
	8-98024-838-3		1103-	R	01	A
17	--- SCREW; RR CHANNEL					
	0-28050-610-0		1103-		04	A BOLT M6X10 FLANGE
19	--- REGULATOR; WINDOW, FRT DOOR					
	8-98029-234-3		1103-	L	01	A
	8-98029-233-3		1103-	R	01	A
25	--- BOLT; WINDOW REG					
	0-28050-610-0		1103-		08	A M6X10 FLANGE
26	--- NUT; FLANGE, WINDOW REG					
	0-91180-106-0		1103-		04	A M6 FLANGE
31	--- STOPPER; RUBBER, DOOR INNER					
	8-94358-581-0		1103-		04	A
39	--- HANDLE; WINDOW REG, FRT DOOR					
	8-97405-313-3		1103-		02	A GRAY

https://truckmanualshub.com/


FRONT DOOR GLASS AND REGULATOR


KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
72	--- SEAL; WAIST, FRT DOOR						
	8-98029-193-1		1103-	L	01	A	
	8-98029-192-1		1103-	R	01	A	
192	--- HOLDER; DOOR GLASS						
	8-98041-907-0		1103-		04	A	
207	--- SCREW; DOOR GLASS						
	0-28050-610-0		1103-		04	A	M6X10 FLANGE
221	--- BAR ASM; DOOR GLASS GUARD						
	8-97405-317-2		1103-	L	01	A	DARK GRAY
	8-97405-316-2		1103-	R	01	A	DARK GRAY
222	--- CAP; GUARD BAR						
	8-97405-319-0		1103-	L	01	A	GRAY
	8-97405-318-0		1103-	R	01	A	GRAY
223	--- SCREW; GUARD BAR						
	0-38050-625-0		1103-		08	A	M6X25
227	--- RUBBER; SHUTTER						
	8-97405-321-0		1103-	L	01	A	GRAY

https://truckmanualshub.com/

6-32 FRONT DOOR LOCK AND HANDLE

FIG-NO. NO. 1

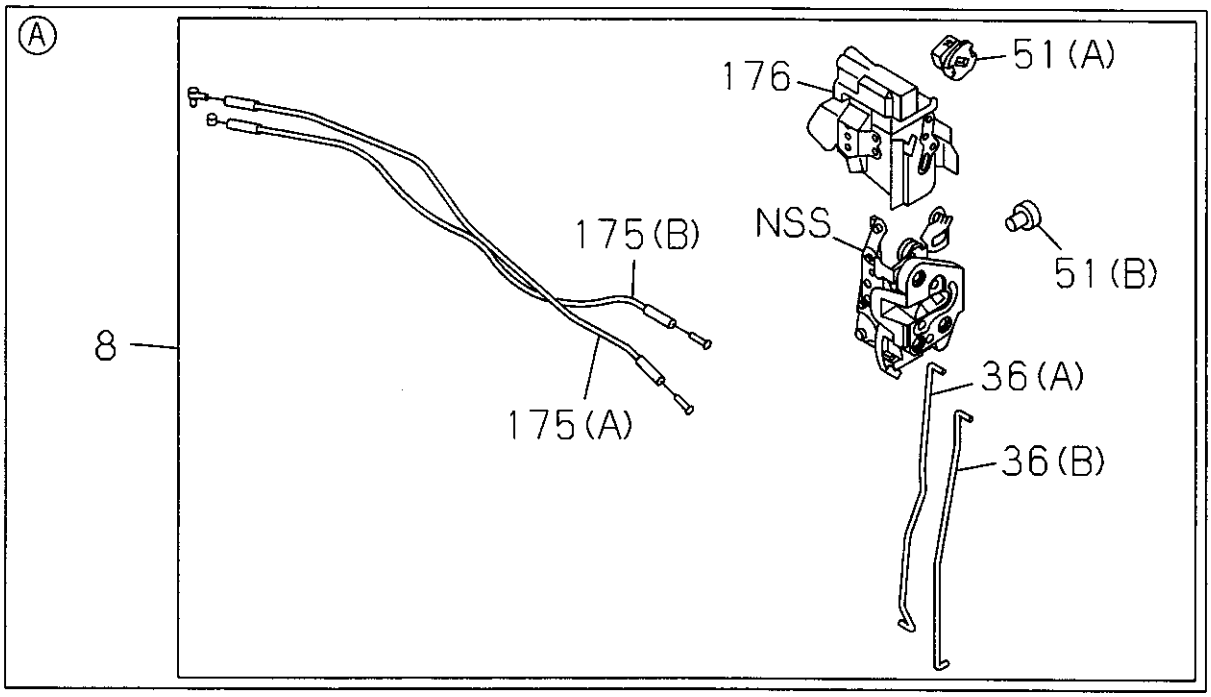


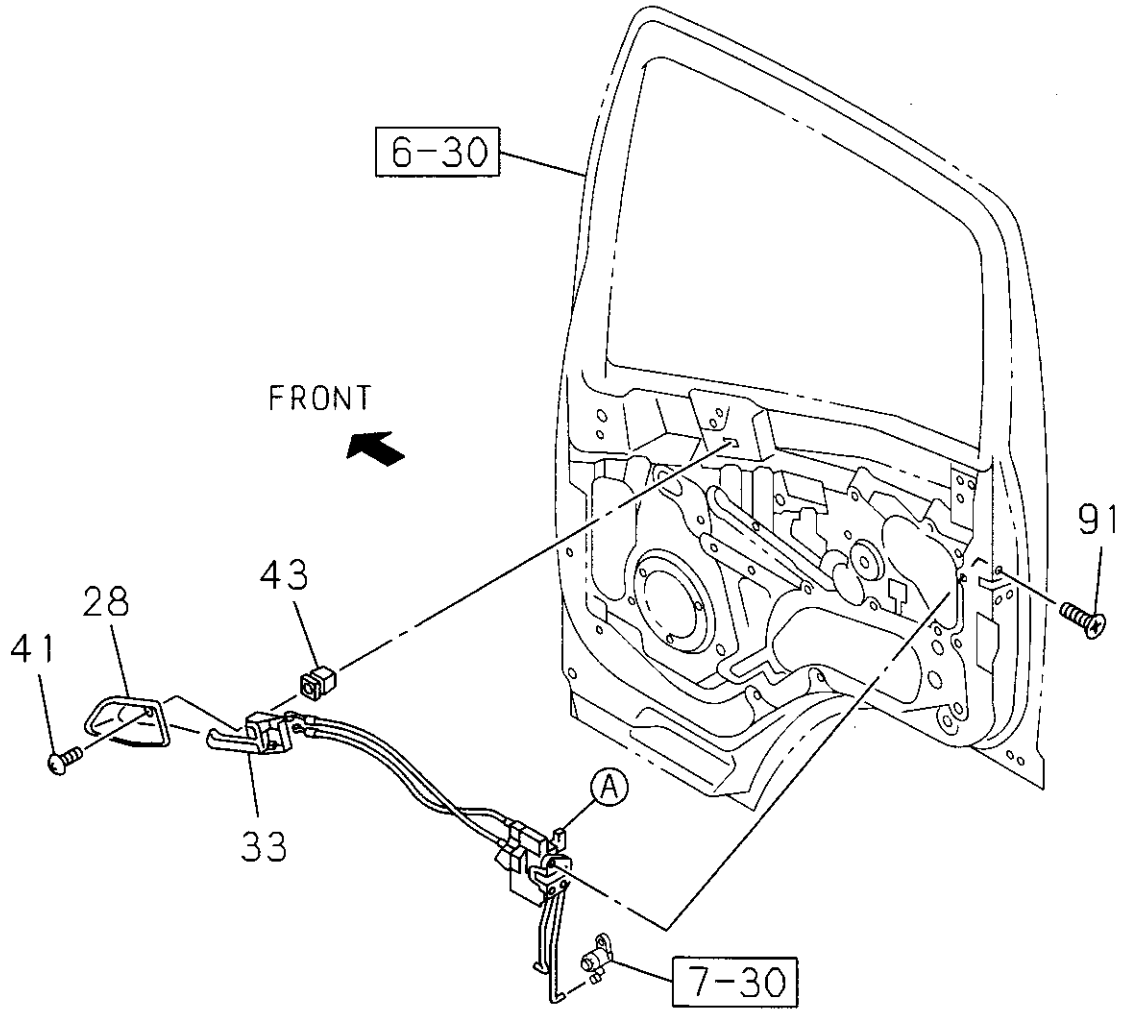


https://truckmanualshub.com/

FRONT DOOR LOCK AND HANDLE


NO. 2

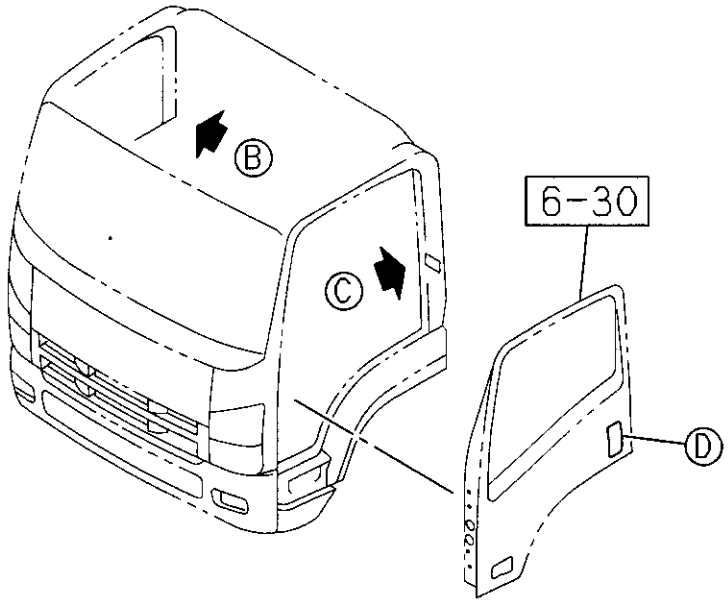


VIEW Ⓑ

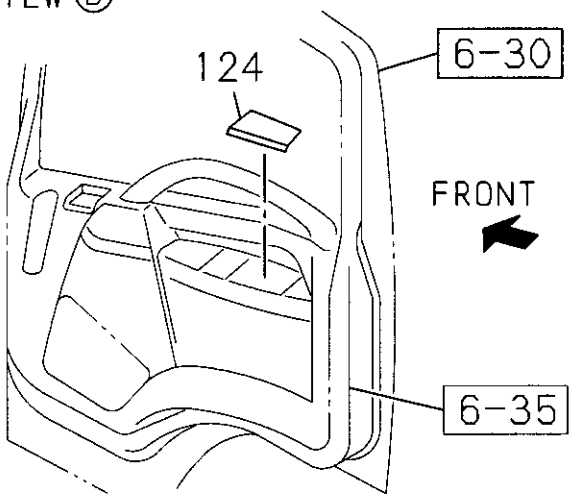

VIEW Ⓒ

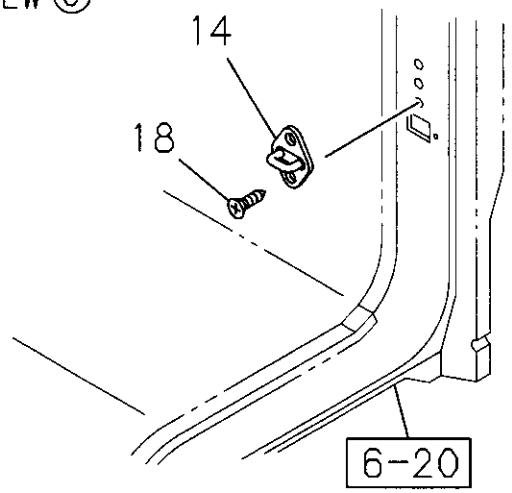

Ⓓ

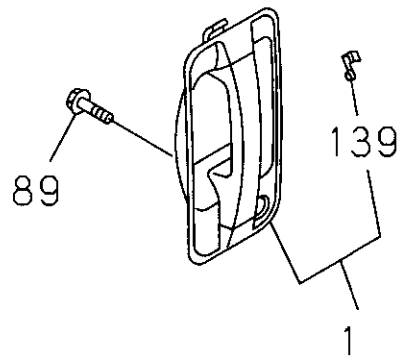

https://truckmanualshub.com/

6-32 FRONT DOOR LOCK AND HANDLE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
	RECOMMEND CLASS / PART NAME					
1	--- HANDLE; OUTSIDE, FRT DOOR					
	8-98037-100-2		1103-	L	01	A
	8-98037-101-2		1103-	R	01	A
8	--- LOCK; DOOR, FRT DOOR					
	8-98029-053-2		1103-	L	01	A
	8-98029-052-2		1103-	R	01	A
14	--- STRIKER; FRT DOOR					
	8-98029-173-2		1103-		02	A
18	--- SCREW; DOOR STRIKER					
	8-98004-343-2		1103-		04	A M8X20 CK-HEAD
28	--- BEZEL; INSIDE LEVER, FRT DOOR					
	8-97405-312-0		1103-	L	01	A DARK GRAY
	8-97405-311-0		1103-	R	01	A DARK GRAY
33	--- LEVER ASM; INSIDE, FRT DOOR					
	8-97405-310-1		1103-	L	01	A DARK GRAY
	8-97405-309-1		1103-	R	01	A DARK GRAY
36	--- LINK; DOOR LOCK, OUTSIDE					
	8-98058-532-0		1103-	L	01	A (A)
	8-98058-536-0		1103-	L	01	A (B)
	8-98058-531-0		1103-	R	01	A (A)
	8-98058-535-0		1103-	R	01	A (B)
41	--- SCREW; INSIDE HANDLE					
	0-72380-516-0		1103-		02	A M5X16 HEX SOCKET IDN

https://truckmanualshub.com/


FRONT DOOR LOCK AND HANDLE

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
43	--- GROMMET; SCREW, INSIDE LEVER, DOOR						
	8-94279-078-0		1103-		02	A	D=8.5X8.5 L=7.5 IDN
51	--- SNAP; FRT DOOR LOCK CONT ROD						
	8-98058-227-0		1103-	L	02	A	(A)
	8-98058-229-0		1103-	L	01	A	(B)
	8-98058-226-0		1103-	R	02	A	(A)
	8-98058-228-0		1103-	R	01	A	(B)
89	--- BOLT; DOOR OUTSIDE HANDLE						
	0-28050-610-0		1103-		04	A	M6X10 FLANGE
91	--- BOLT; DOOR LOCK						
	8-98004-342-0		1103-		06	A	M6X14.5
124	--- COVER; DOOR PULL						
	8-97422-056-1		1103-	L	01	A	
	8-97422-055-1		1103-	R	01	A	
139	--- HOLDER; ROD, DOOR HANDLE						
	8-97333-303-0		1103-	L	01	A	WHITE
	8-98095-813-0		1103-	R	01	A	BLACK
175	--- CABLE ASM; LOCK CONTROL						
	8-98058-539-0		1103-		02	A	(B)
	8-98058-538-0		1103-	L	01	A	(A)
	8-98058-537-0		1103-	R	01	A	(A)
176	--- COVER; DOOR LOCK						
	8-98058-239-0		1103-	L	01	A	
	8-98058-238-0		1103-	R	01	A	

https://truckmanualshub.com/

6-35 FRONT DOOR TRIM

FIG-NO.

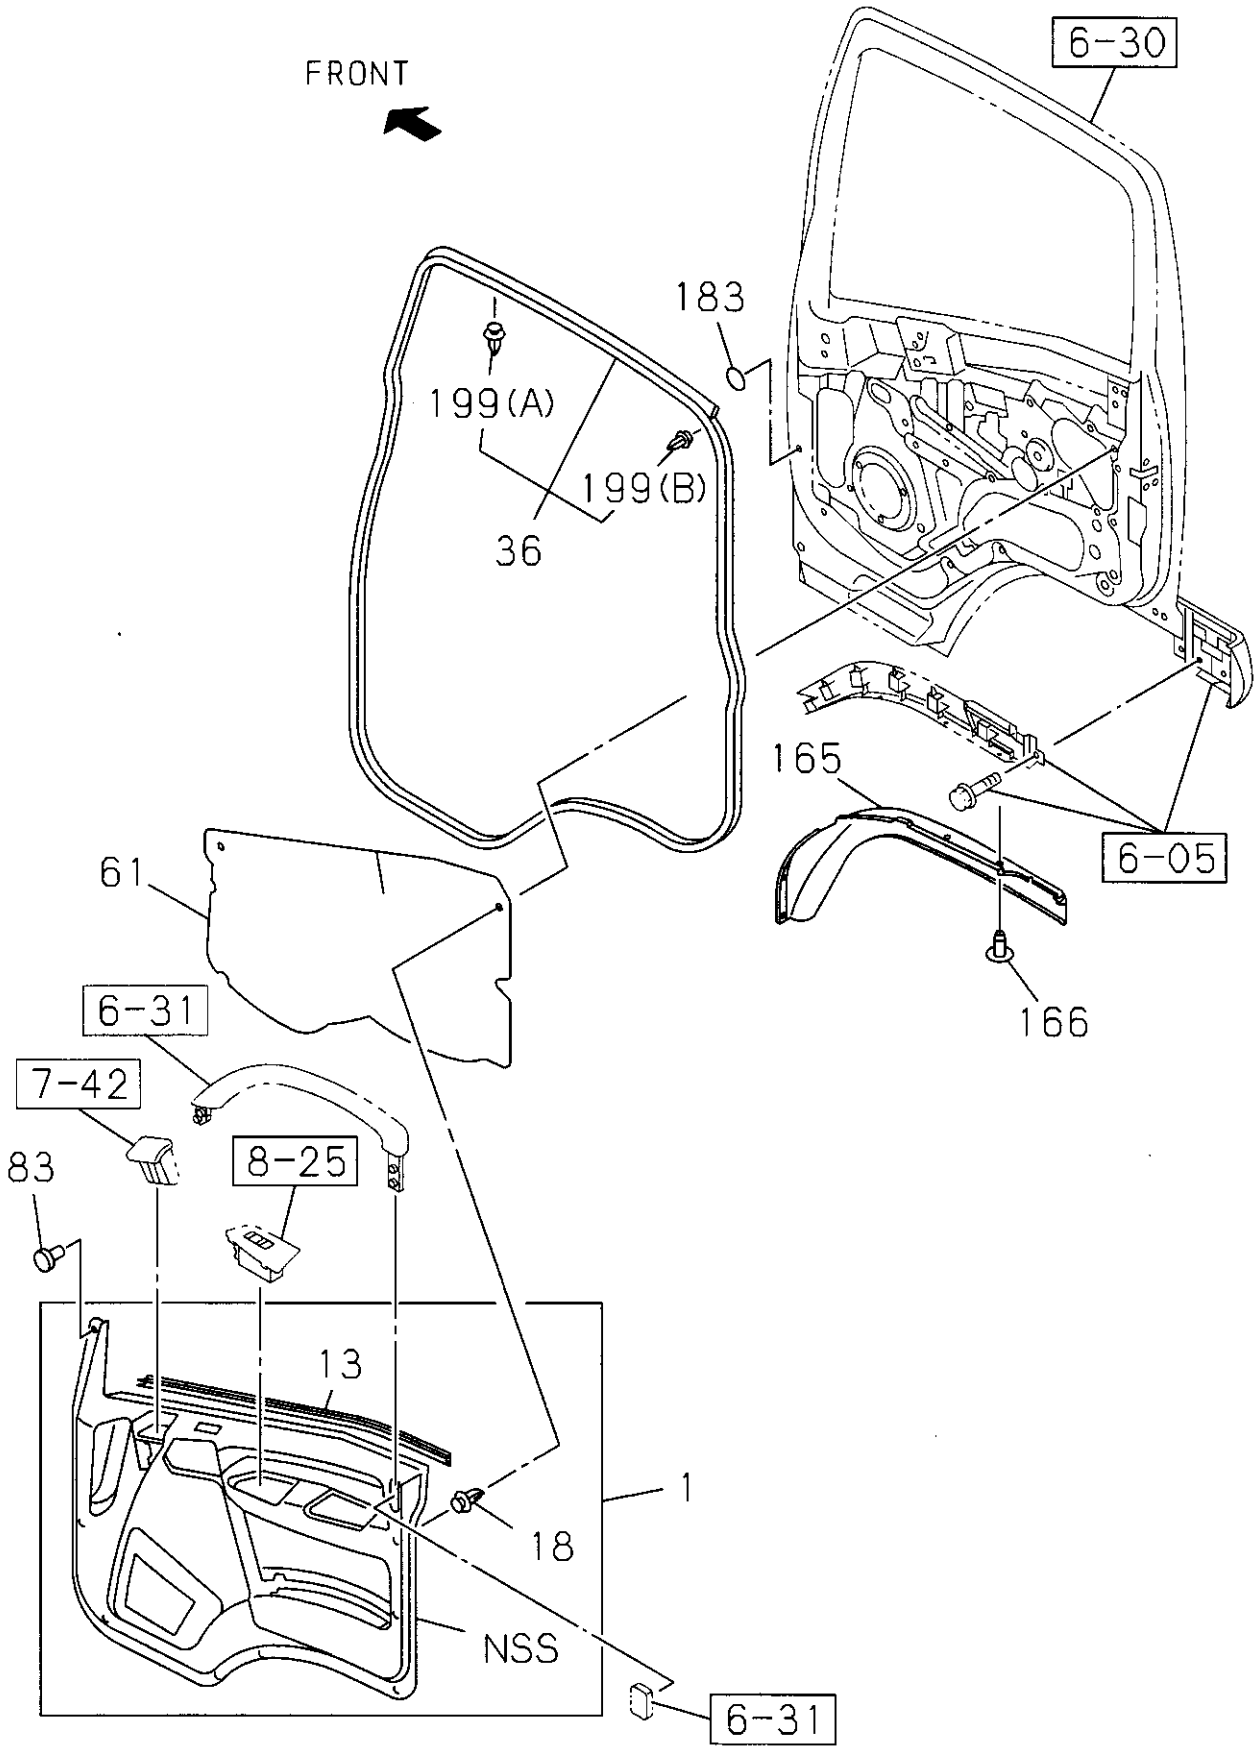

https://truckmanualshub.com/


FRONT DOOR TRIM

KEY NO.	RECOMMEND CLASS / PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- PAD; TRIM, FRT DOOR					
	8-97405-307-6		1103-	L	01	A GRAY
	8-97405-305-6		1103-	R	01	A GRAY
13	--- SEAL; DOOR TRIM					
	8-98029-202-1		1103-	L	01	A
	8-98029-201-1		1103-	R	01	A
18	--- CLIP; DOOR PAD					
	8-98004-025-0		1103-		14	A
36	--- SEAL; DOOR, MAIN, CAB SIDE					
	8-98029-199-3		1103-	L	01	A
	8-98077-429-0		1103-	R	01	A
61	--- SEAL; WATER, DOOR PAD					
	8-98029-395-2		1103-	L	01	A 2-SPEAKER SYSTEM BASE<U95>
	8-98029-394-2		1103-	R	01	A 2-SPEAKER SYSTEM BASE<U95>
	8-98029-396-0		1103-		02	A EXC. 2-SPEAKER SYSTEM BASE<U95>
83	--- CLIP; DOOR TRIM					
	8-97405-308-0		1103-		02	A GRAY
165	--- LINER; DOOR LWR					
	8-98038-286-1		1103-	L	01	A
	8-98038-285-1		1103-	R	01	A
166	--- PLUG; HOLE					
	1-09987-248-1		1103-		10	A D8X13.5
183	--- SEAL; LOCATION HOLE					
	1-76798-019-0		1103-		02	A OD=25 BLACK
199	--- CLIP; SEAL					
	8-98062-270-0		1103-		80	A (A)
	8-98062-271-0		1103-		02	A (B)

https://truckmanualshub.com/

6-43 SIDE TRIM

FIG-NO.

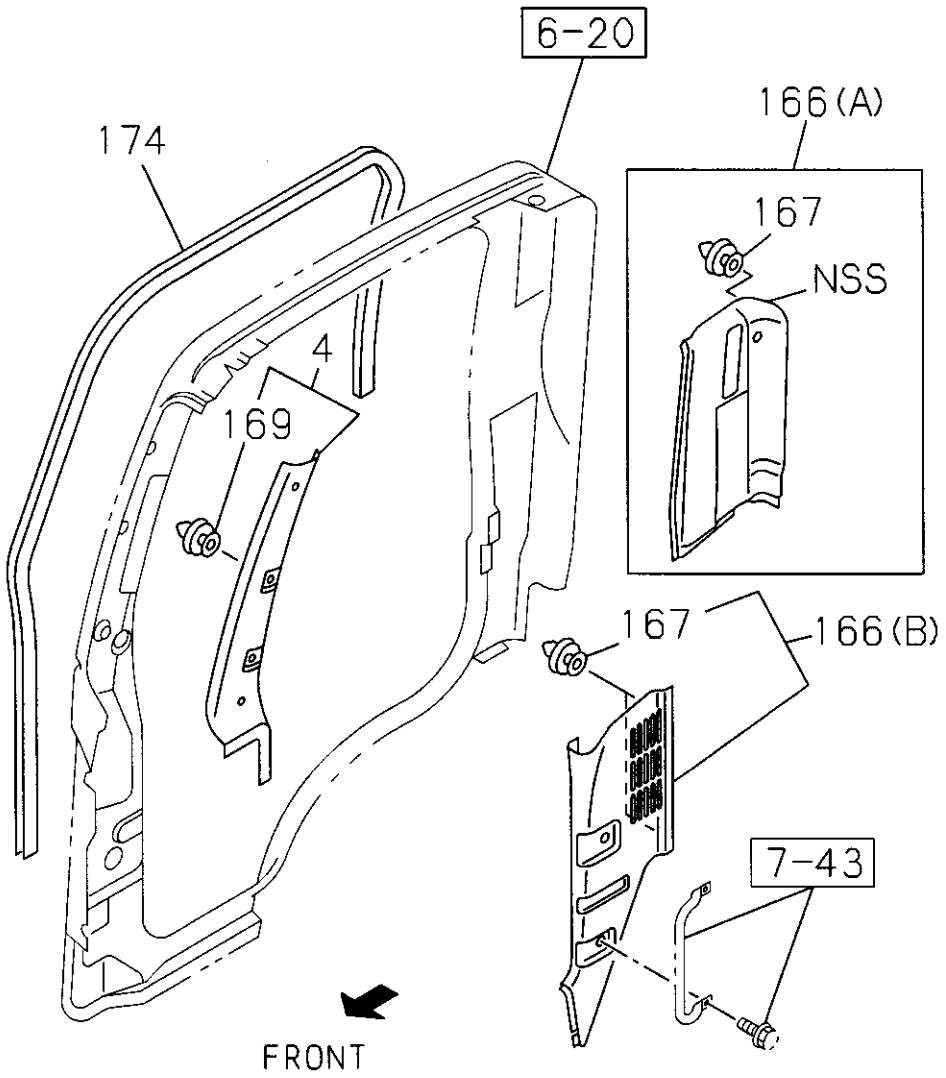

https://truckmanualshub.com/


SIDE TRIM

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
4	--- COVER; TRIM, FRT SIDE						
	8-97405-255-2		1103-	L	01	A	DARK GRAY
	8-97407-415-1		1103-	R	01	A	DARK GRAY
166	--- TRIM; RR PILLAR						
	8-97406-796-1		1103-	L	01	A	(A) DARK GRAY
	8-97407-540-0		1103-	L	01	A	(B) GRAY
	8-97407-539-0		1103-	R	01	A	(B) GRAY
	8-97407-900-0		1103-	R	01	A	(A) DARK GRAY
167	--- CLIP; TRIM, RR PILLAR						
	8-98059-610-0		1103-		08	A	
169	--- CLIP; TRIM COVER, FRT PILLAR						
	8-94279-974-1		1103-		04	A	OD=7.9 BLACK
174	--- FINISHER; BODY SIDE						
	8-98155-184-0		1103-	L	01	A	
	8-98155-183-0		1103-	R	01	A	

https://truckmanualshub.com/

6-47 MUD GUARD AND INSULATOR

FIG-NO. MUD GUARD ; FRONT AND SPLASH GUARD

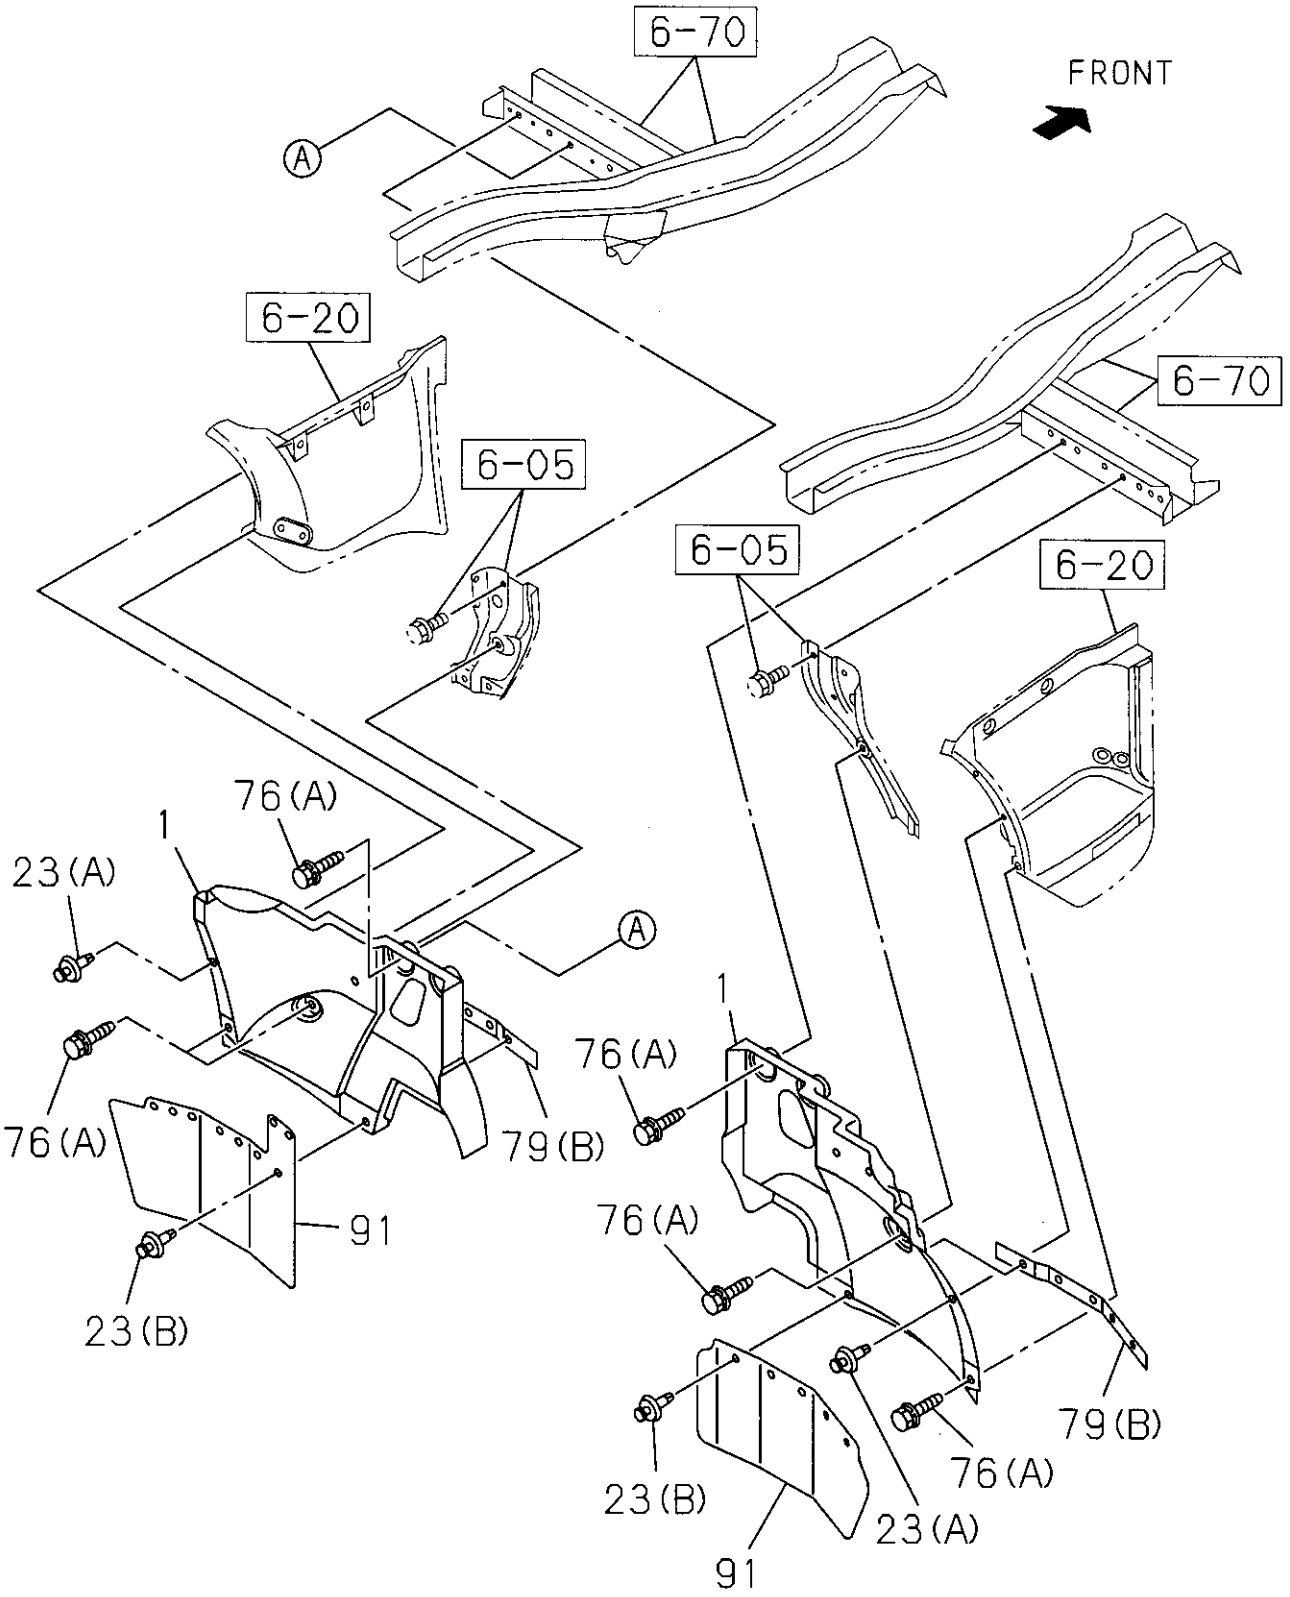


https://truckmanualshub.com/

MUD GUARD AND INSULATOR

MUD GUARD ; REAR AND SIDE PANEL


FIG-NO.

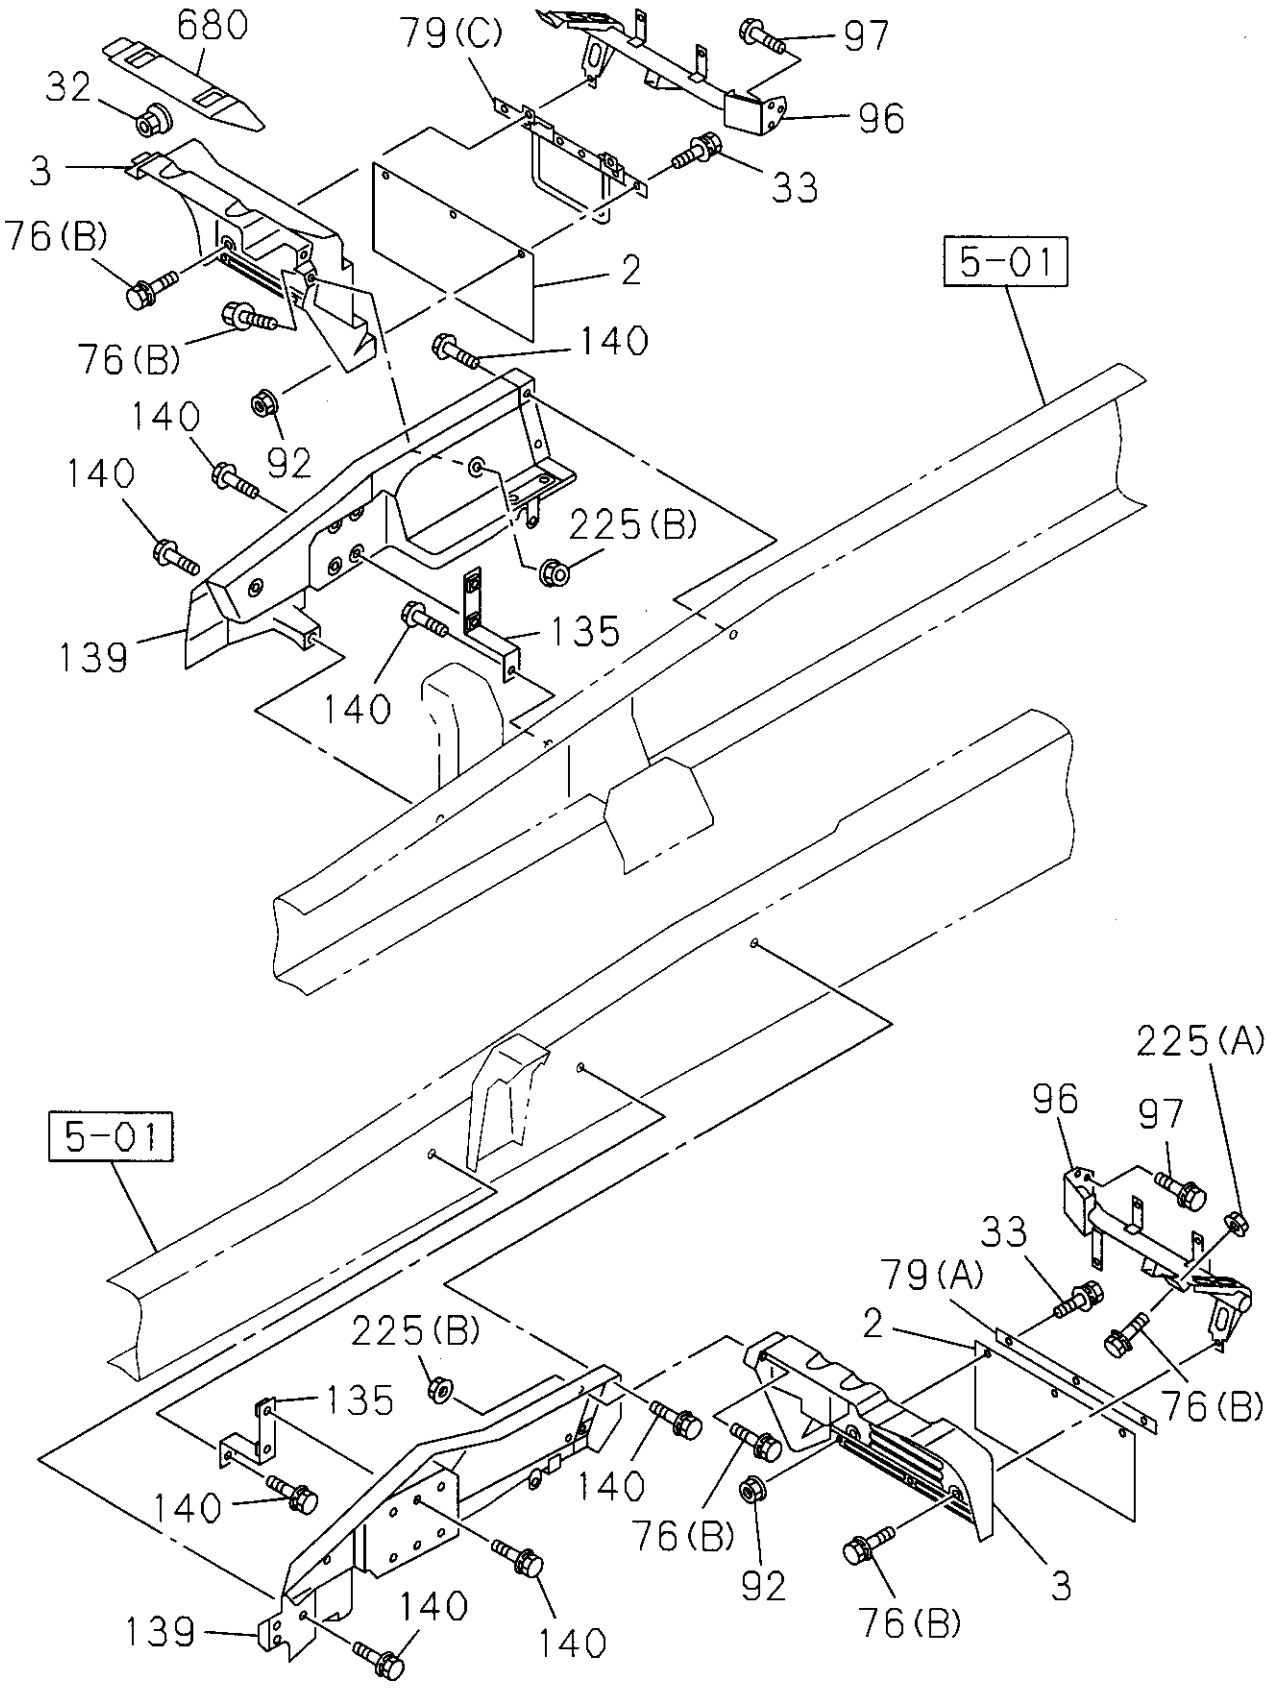

https://truckmanualshub.com/

6-47 MUD GUARD AND INSULATOR

FIG-NO. MUD COVER AND SEAL

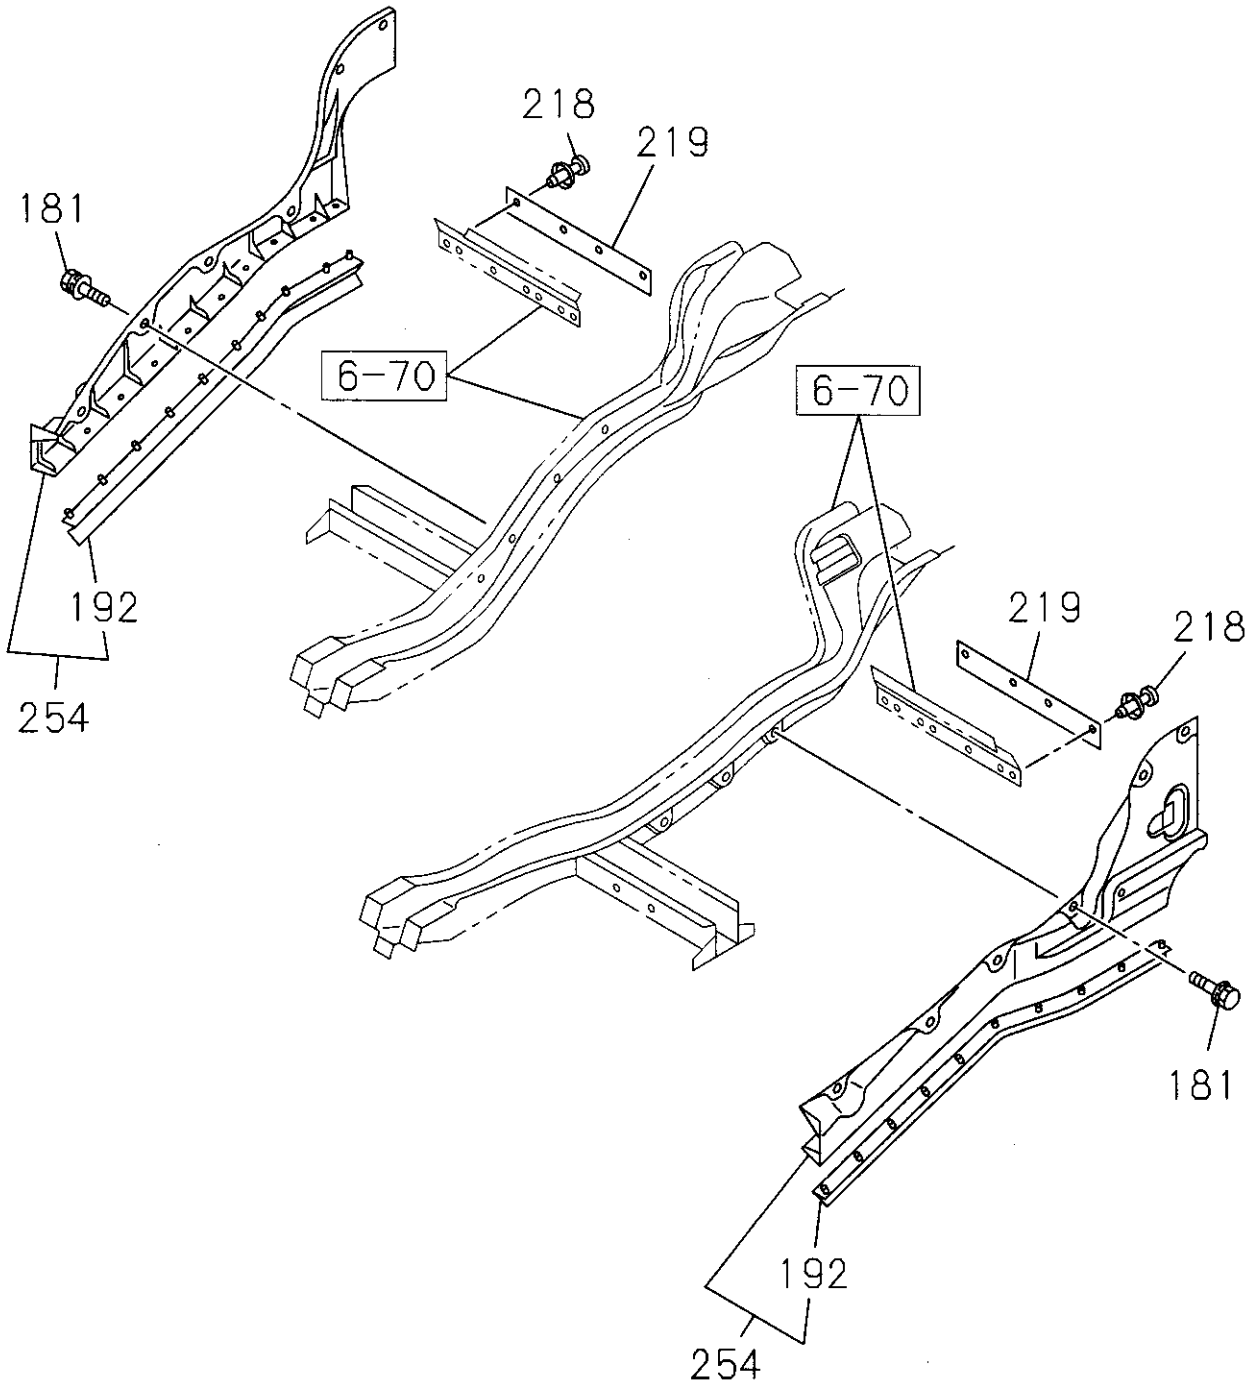

https://truckmanualshub.com/

MUD GUARD AND INSULATOR

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- GUARD; MUD, FRT					
	8-98152-647-0		1103-	L	01	A
	8-98152-646-0		1103-	R	01	A
2	--- COVER; MUD, TIRE RR					
	1-79931-482-0		1103-		02	A
3	--- GUARD; MUD, RR					
	1-79931-471-0		1103-	L	01	A
	1-79931-472-2		1103-	R	01	A
23	--- FASTENER; MUD COVER					
	1-09470-001-0		1103-		08	A (B)
	1-09987-248-1		1103-		04	A (A) D8X13.5
32	--- NUT; MUD GUARD					
	8-97329-625-0		1103-	R	02	A M8 W/DISHED WASHER
33	--- BOLT; MUD COVER					
	1-09980-495-0		1103-		06	A M6X20 W/LK&PL WASHER
76	--- BOLT; MUD GUARD					
	1-09030-093-0		1103-		08	A (B) M8X25 W/LK&PL WASHER
	8-94331-747-1		1103-		08	A (A) M8X25 W/LK&PL WASHER
79	--- RETAINER; MUD COVER					
	8-98041-217-1		1103-		02	A (B)
	1-79931-484-0		1103-	L	01	A (A)
	8-98105-000-0		1103-	R	01	A (C)
91	--- COVER; MUD, FRT					
	8-98093-464-0		1103-	L	01	A
	8-98093-463-0		1103-	R	01	A

https://truckmanualshub.com/

6-47 MUD GUARD AND INSULATOR

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
92	--- NUT; MUD COVER						
	0-91180-106-0		1103-		06	A	M6 FLANGE
96	--- STAY; MUD GUARD						
	8-98066-745-2		1103-	L	01	A	
	1-79931-479-3		1103-	R	01	A	
97	--- BOLT; STAY TO FRAME						
	0-28651-030-0		1103-		07	A	M10X30 FLANGE
135	--- BRACKET; SIDE PANEL						
	1-53457-191-0		1103-		02	A	
139	--- PANEL; SIDE						
	8-98090-078-0		1103-	L	01	A	
	8-98090-077-0		1103-	R	01	A	
140	--- BOLT; SIDE PANEL						
	1-09030-095-0		1103-		10	A	M8X30 W/LK&PL WASHER
181	--- BOLT; COVER, SIDE						
	8-98059-720-0		1103-		12	A	M8X24.5 W/LK&PL WASHER
192	--- SEAL; MUD COVER						
	8-98041-157-2		1103-	L	01	A	
	8-98041-156-2		1103-	R	01	A	
218	--- FASTENER; RUBBER						
	1-09987-248-1		1103-		08	A	D8X13.5
219	--- FLAP; MUD GUARD						
	8-98041-148-1		1103-		02	A	
225	--- NUT; MUD GUARD						
	0-91180-108-0		1103-		02	A	(A) M8 FLANGE
	8-97329-625-0		1103-		02	A	(B) M8 W/DISHED WASHER

https://truckmanualshub.com/


MUD GUARD AND INSULATOR

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
254	--- COVER; MUD, VALANCE					
	8-98039-918-1		1103-	L	01	A
	8-98039-917-2		1103-	R	01	A
680	--- GUARD; MUD, UPPER					
	1-79931-477-1		1103-	R	01	A

https://truckmanualshub.com/

6-60 ROOF PANEL

FIG-NO.

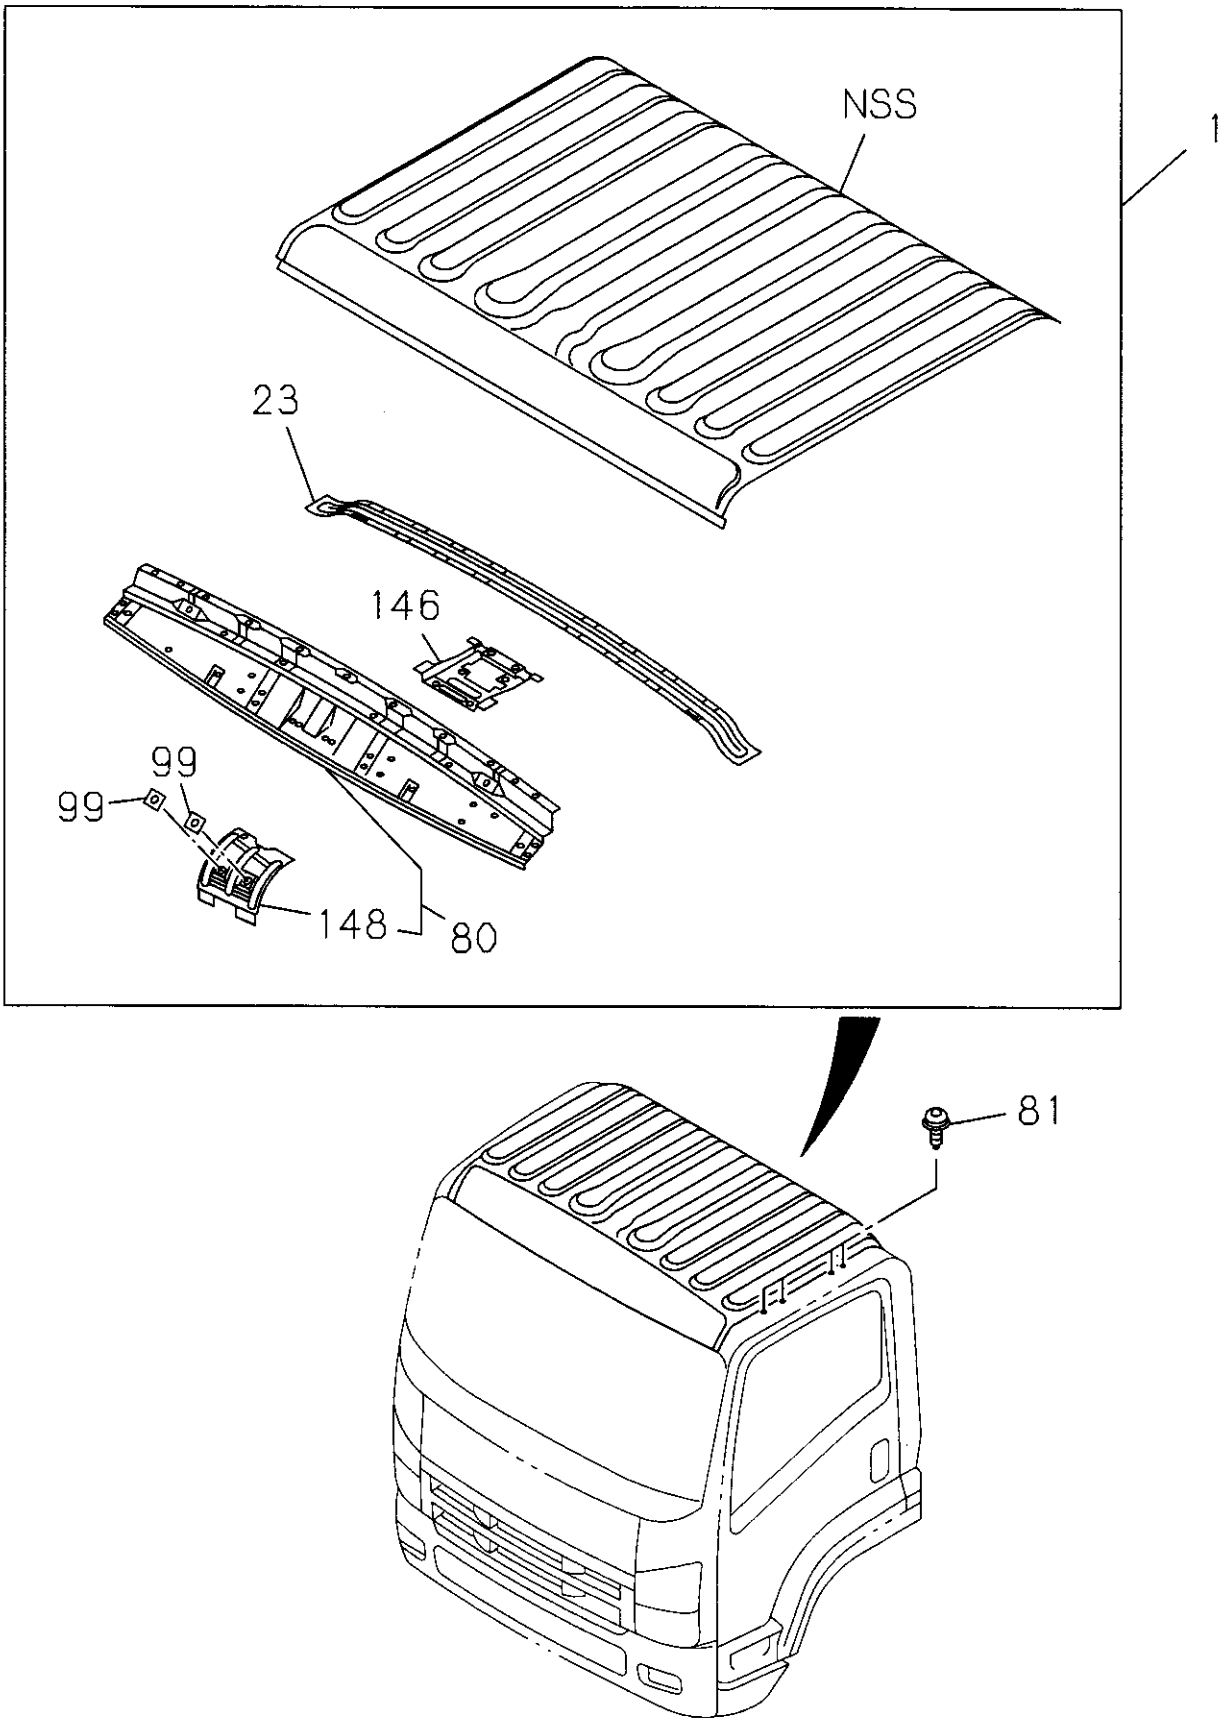

https://truckmanualshub.com/


ROOF PANEL


KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- PANEL; ROOF					
	8-98158-310-0		1103-		01	A
23	--- REINFORCEMENT; ROOF PANEL, FRT					
	8-98019-310-0		1103-		01	A
80	--- PANEL; HEADER, ROOF					
	8-97584-191-3		1103-		01	A
81	--- BOLT; ROOF					
	8-98141-874-0		1103-		08	A M8X15.5 HEX SOCKET
99	--- SEAL; BODY, METAL					
	1-61281-380-2		1103-		02	A 30X30 ID=20 T=0.7
146	--- REINFORCEMENT; ROOM LAMP					
	8-98075-827-0		1103-		01	A
148	--- REINFORCEMENT; MIRROR					
	8-97411-015-1		1103-		01	A

https://truckmanualshub.com/

6-66 HEAD LINING AND TRIM

FIG-NO.

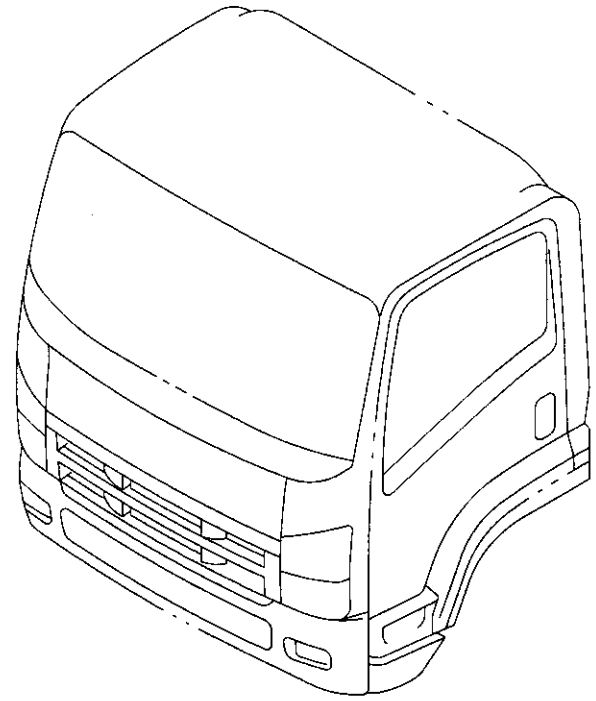

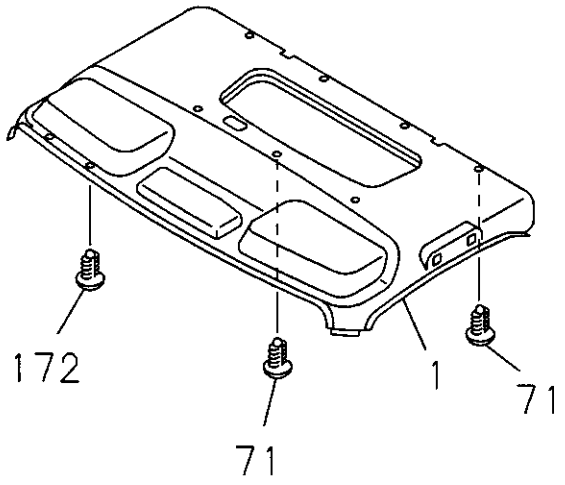

https://truckmanualshub.com/


HEAD LINING AND TRIM

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
1	--- LINING; HD						
	8-97409-896-1		1103-		01	A	DARK GRAY
71	--- FASTENER; HD LINING						
	8-97405-282-0		1103-		07	A	DARK GRAY
172	--- RETAINER; HEAD LINING						
	8-97411-875-0		1103-		14	A	DARK GRAY

https://truckmanualshub.com/

6-70 FLOOR PANEL

FIG-NO.

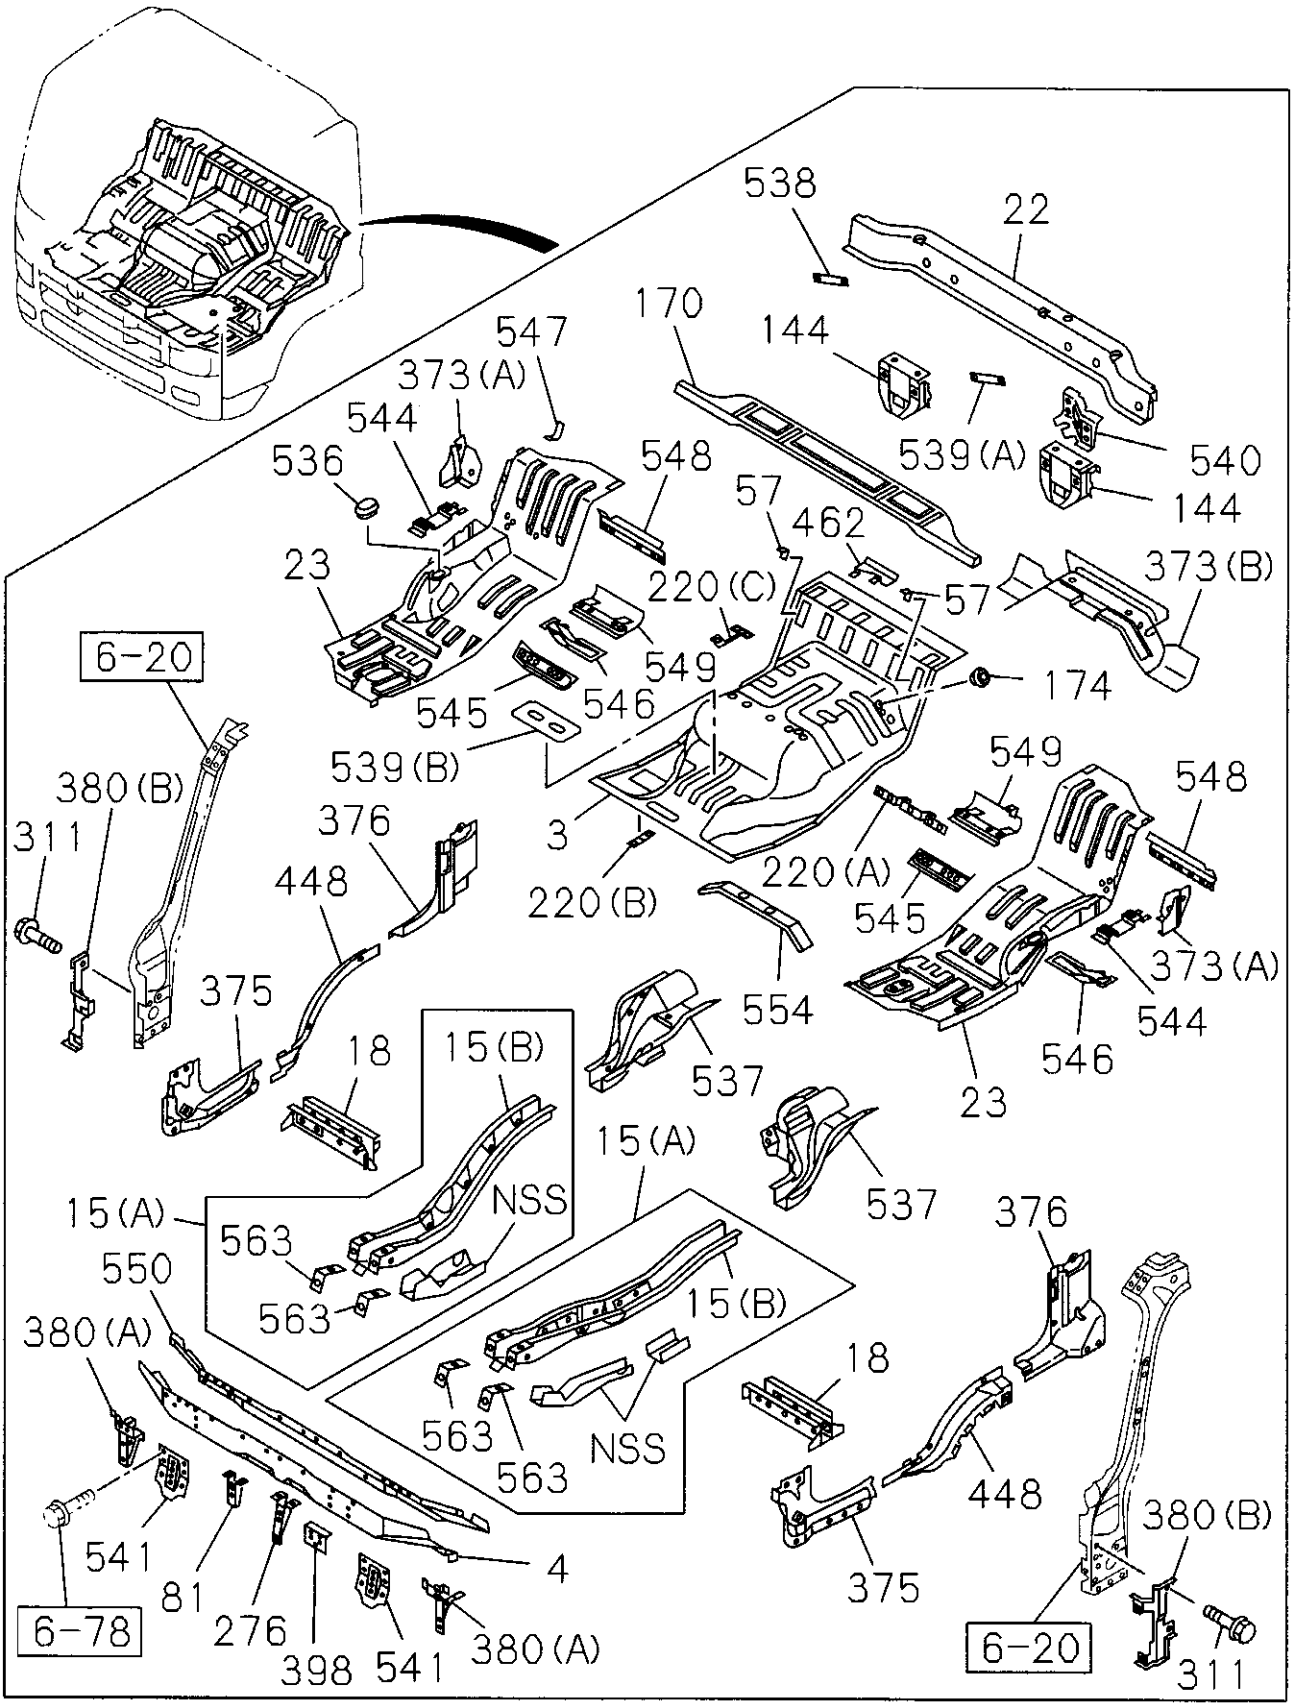

https://truckmanualshub.com/

FLOOR PANEL

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
3	--- HOOD ASM; ENG					
	8-98167-035-0		1103-		01	A
4	--- FRAME; FLOOR, FRT					
	8-98073-692-1		1103-		01	A
15	--- FRAME; UNDER					
	8-97584-387-9		1103-	R	01	A (A)
	8-97584-388-8		1103-	R	01	A (B)
	8-97584-411-9		1103-	L	01	A (A)
	8-97584-412-6		1103-	L	01	A (B)
18	--- FRAME; FLOOR, CENTER SIDE					
	8-97584-397-4		1103-	R	01	A
	8-97584-420-4		1103-	L	01	A
22	--- FRAME; FLOOR REAR					
	8-97584-430-5		1103-		01	A
23	--- PANEL; FLOOR, SIDE					
	8-97584-371-7		1103-	L	01	A
	8-98073-690-1		1103-	R	01	A
57	--- BRACKET; SPARE TIRE					
	8-98038-970-1		1103-		02	A
81	--- BRACKET; HARNESS SUPPORT					
	8-98041-333-3		1103-		01	A
144	--- BRACKET; MTG, RR					
	8-97584-432-6		1103-	L	01	A
	8-97589-666-6		1103-	R	01	A
170	--- EXTENSION; RR FLOOR					
	8-97589-204-3		1103-		01	A
174	--- GROMMET; AIR PIPE					
	8-94122-971-0		1103-		01	A OD=35 IDN

https://truckmanualshub.com/

6-70 FLOOR PANEL

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	A LEAF SUS(FCR5CS)
220	--- PATCH						
	8-97588-840-4		1103-		01	A	(A)
	8-97589-603-3		1103-		01	A	(B)
	8-97589-627-2		1103-		01	A	(C)
276	--- BRACKET; RAD GRILLE						
	8-97589-596-3		1103-		01	A	
311	--- BOLT; BRKT						
	0-28650-616-0		1103-		04	A	M6X16 FLANGE
373	--- REINFORCEMENT; SEAT BELT						
	8-97584-345-9		1103-		01	A	(B)
	8-97584-367-2		1103-	R	01	A	(A)
	8-97584-375-2		1103-	L	01	A	(A)
375	--- CLOSING; PILLAR						
	8-98044-897-3		1103-	R	01	A	
	8-98044-898-3		1103-	L	01	A	
376	--- CLOSING; PILLAR, LWR						
	8-97589-553-1		1103-	R	01	A	
	8-97589-555-1		1103-	L	01	A	
380	--- BRACKET; HEAD LAMP						
	8-97584-460-2		1103-	L	01	A	(A)
	8-97589-506-2		1103-	R	01	A	(A)
	8-98032-615-1		1103-	L	01	A	(B)
	8-98032-614-1		1103-	R	01	A	(B)

https://truckmanualshub.com/

FLOOR PANEL

KEY NO.	RECOMMEND CLASS／PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
398	--- BRACKET; PIPE SUPPORT					
	8-97589-681-3		1103-		01	A
448	--- CLOSING; ROCKER					
	8-97589-551-2		1103-	R	01	A
	8-97589-552-2		1103-	L	01	A
462	--- BRACKET; EXTINGUISHER					
	8-97585-688-1		1103-		01	A
536	--- PLUG; CABLE, PTO					
	8-97612-074-1		1103-		01	A
537	--- SUPPORT ASM; MTG RR					
	8-97584-390-4		1103-	R	01	A
	8-97584-416-4		1103-	L	01	A
538	--- REINFORCEMENT ASM; AIR INT DUCT					
	8-97610-207-2		1103-		01	A
539	--- PATCH ASM; SAFTY HOOK					
	8-97584-440-2		1103-		01	A (A)
	8-98131-661-0		1103-		01	A (B)
540	--- BRACKET ASM; CAB LOCK LEVER					
	8-97584-438-1		1103-		01	A
541	--- REINFORCEMENT; MTG, FRT					
	8-98067-903-0		1103-		02	A
544	--- BRACKET; DUMP CONT					
	8-97584-363-1		1103-	R	01	A
	8-98049-529-0		1103-	L	01	A
545	--- BRACKET; SEAT FRT					
	8-97584-361-1		1103-	R	01	A
	8-97584-373-1		1103-	L	01	A
546	--- REINFORCEMENT; FLOOR SIDE					
	8-97584-426-0		1103-		02	A

https://truckmanualshub.com/

6-70 FLOOR PANEL


FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
547	--- BRACKET; JACK HANDLE					
	8-97588-843-1		1103-		01	A
548	--- BRACKET; MUD GUARD					
	8-97588-964-1		1103-	R	01	A
	8-97588-965-1		1103-	L	01	A
549	--- BRACKET; SEAT RR					
	8-97588-958-4		1103-	L	01	A
	8-97589-557-4		1103-	R	01	A
550	--- CLOSING ASM; MTG, FRT					
	8-97584-458-4		1103-		01	A
554	--- REINFORCEMENT; FLOOR CENTER					
	8-97584-351-2		1103-		01	A
563	--- REINFORCEMENT; MTG FRT, RR					
	8-97589-579-2		1103-		04	A

https://truckmanualshub.com/

6-75 MAT AND CARPET

FIG-NO.

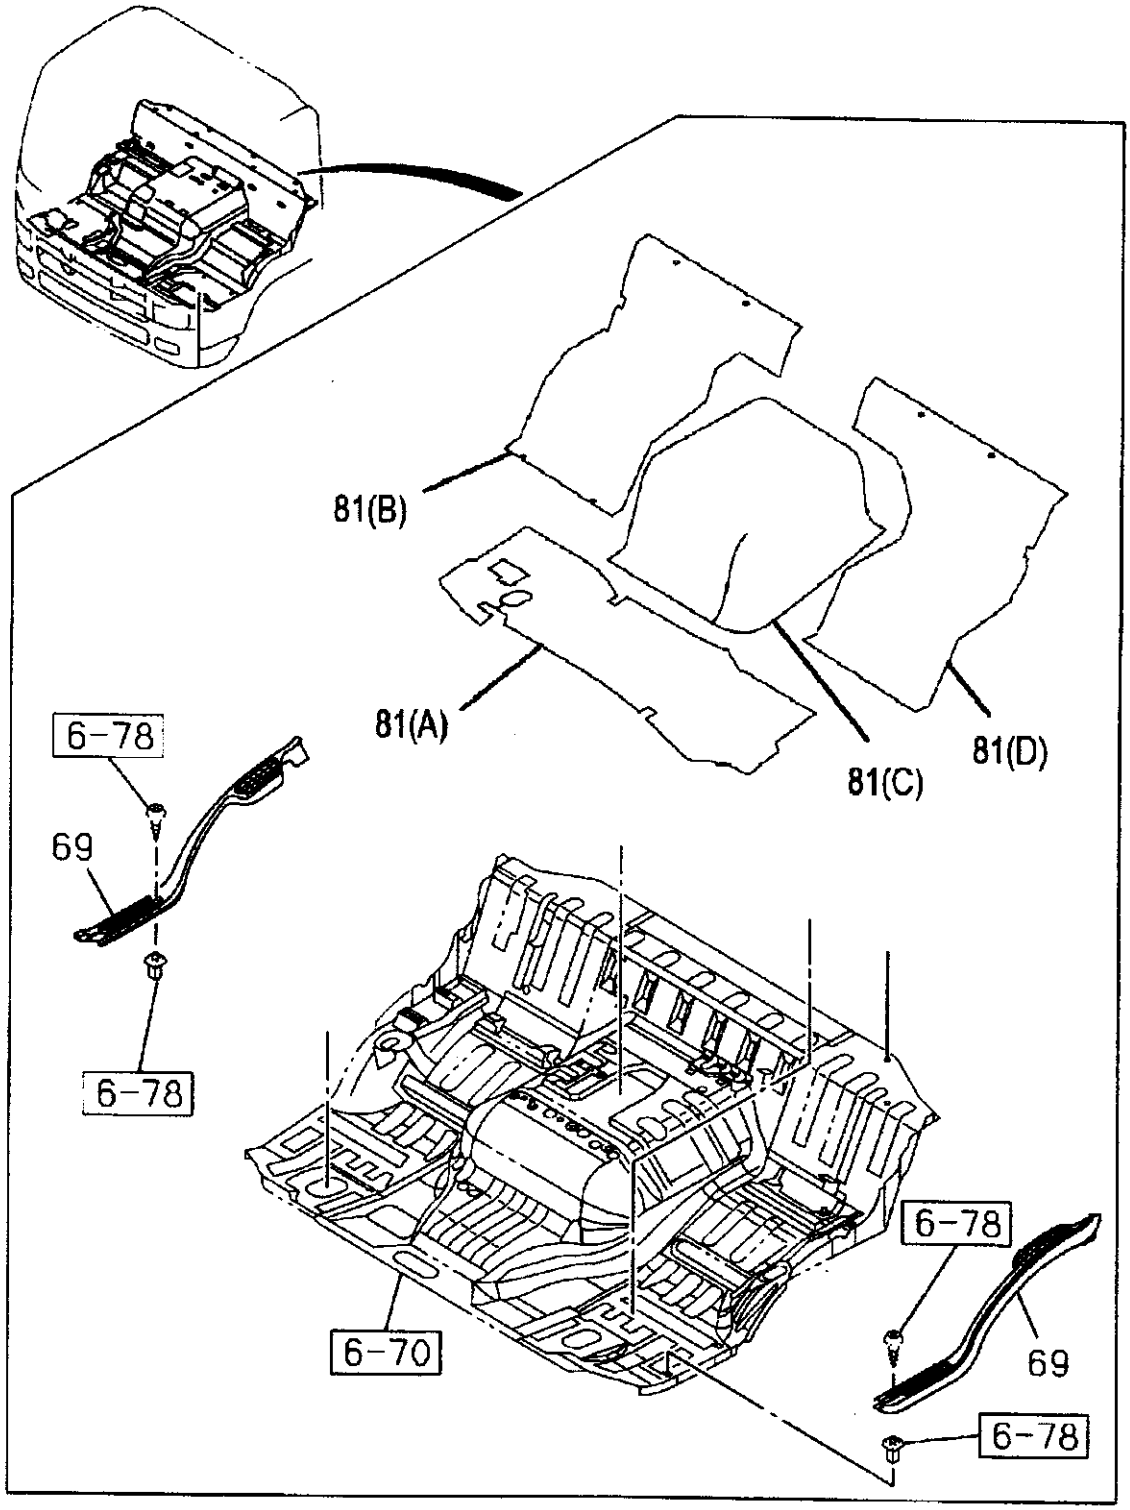

https://truckmanualshub.com/


MAT AND CARPET


KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
69	--- COVER; TRIM, FLOOR MAT, DOOR SIDE						
	8-97407-413-1		1103-	L	01	A	GRAY
	8-97407-412-1		1103-	R	01	A	GRAY
81	--- MAT; FLOOR, CENTER						
	7-19920 315-A		1103-		01	A	(A) FRONT GRAY
	7-19922 310-A		1103-		01		(B) RH GRAY
	7-19921 330-A		1103-		01		(C) CENTER GRAY
	7-19923 311-A		1103-		01		(D) LH GRAY

https://truckmanualshub.com/

6-76 FLOOR EQUIPMENT AND SEALING

FIG-NO.

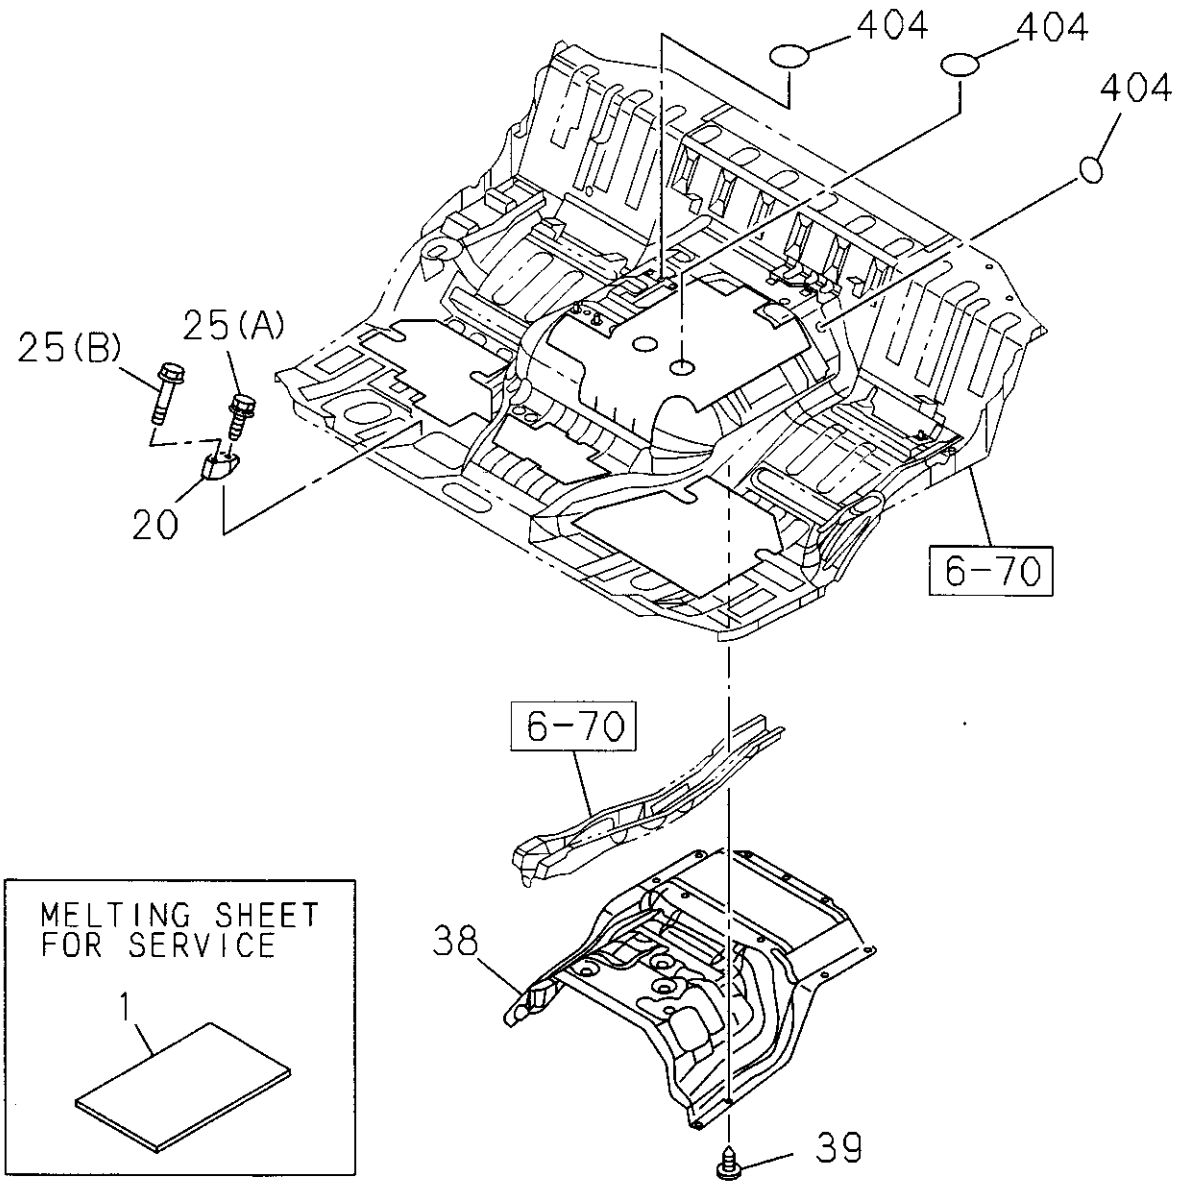

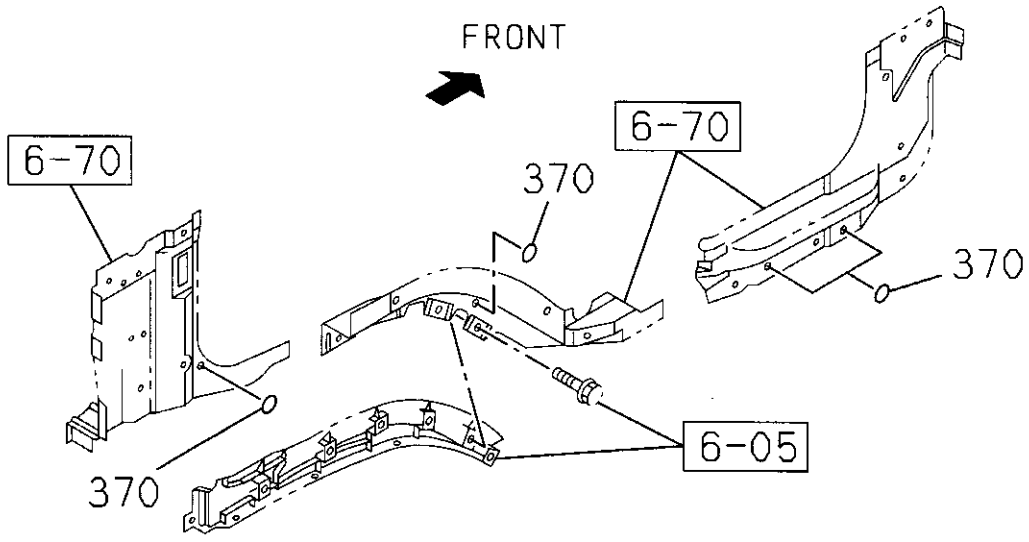

https://truckmanualshub.com/


FLOOR EQUIPMENT AND SEALING

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- SHEET; MELTING, FLOOR						
		8-94262-093-0		1103-		AR	A NON ASBESTOS 1000X600 T=1.5; PARTS ONLY
20	--- REST; FOOT						
		1-73907-176-1		1103-		01	A
25	--- SCREW; FOOT REST						
		8-94279-201-0		1103-		01	A (A) BOLT M6X19.5 W/LK&PL WASHER
		8-94407-876-1		1103-		01	A (B) M6X47
38	--- INSULATOR; ENG COVER						
		8-98180-258-0		1103-		01	A
39	--- CLIP; INSULATOR, COVER						
		8-97808-623-0		1103-		17	A ID=6.2 L=11.4
370	--- SEAL; LOCATION HOLE						
		8-98051-161-0		1103-		08	A OD=30 T=1.0
404	--- SEAL; FLOOR, HOLE						
		1-76798-019-0		1103-		02	A OD=25 BLACK
		1-76798-019-0		1103-		12	A OD=25 BLACK

https://truckmanualshub.com/

6-78 FLOOR HOLE PLUG

FIG-NO.

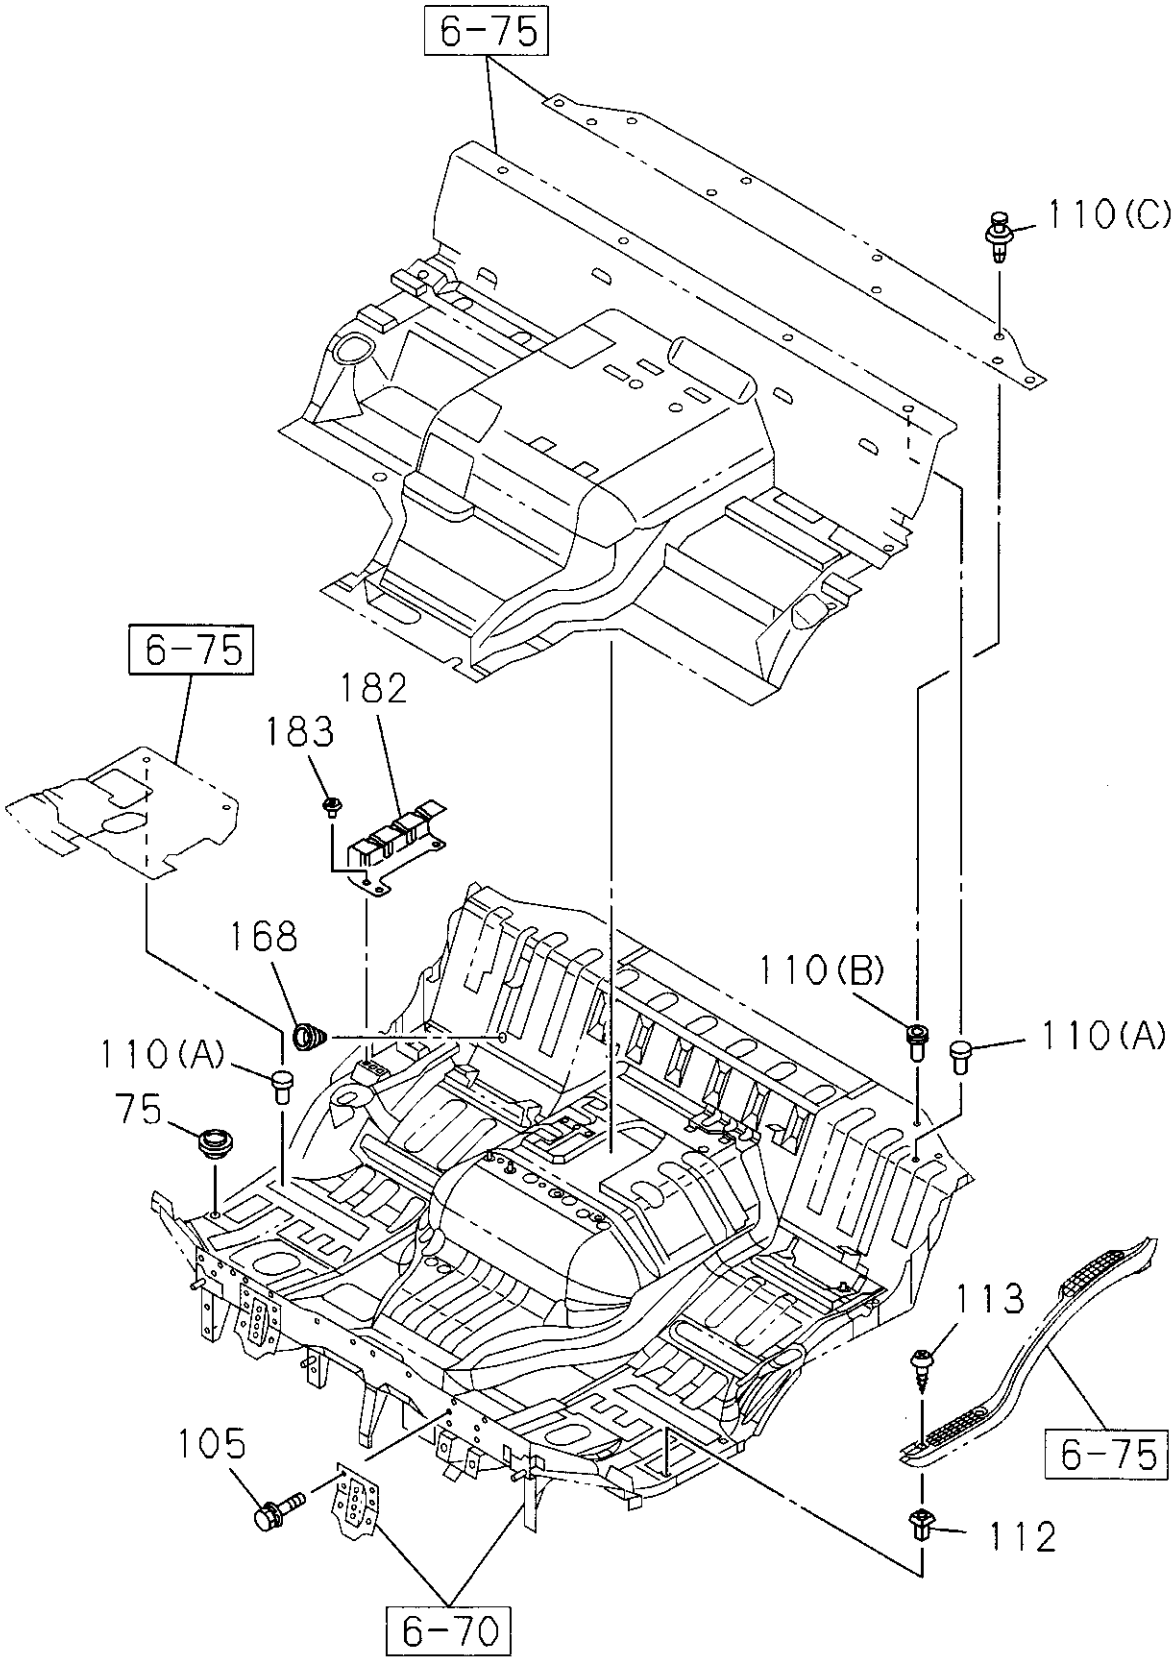

https://truckmanualshub.com/

FLOOR HOLE PLUG


6-78
FIG-NO.


KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
75	--- PLUG; RUBBER, FLOOR						
		1-09983-101-0		1103-		04	A OD=23.5
105	--- BOLT; FLOOR						
		0-28661-030-0		1103-		16	A M10X30 FLANGE
110	--- FASTENER; FLOOR MAT						
		8-94279-089-0		1103-		08	A (A) BLACK IDN
		8-97319-495-0		1103-		04	A (B)
		8-97405-247-0		1103-		04	A (C) GRAY
112	--- GROMMET; SCREW, TRIM COVER						
		8-94279-043-0		1103-		08	A D=7.8X7.8 L=18 NATURAL IDN
113	--- SCREW; TRIM COVER						
		0-72180-516-0		1103-		08	A M5X16 TAPPING
168	--- COVER; HOLE, ANNTENA CABLE						
		1-79998-891-1		1103-		01	A
182	--- REINFORCEMENT; SILL SIDE						
		8-98056-072-1		1103-	L	01	A
		8-98056-071-1		1103-	R	01	A
183	--- SCREW; SILL SIDE						
		8-98066-813-0		1103-		06	A M8X16.5 HEX SOCKET

https://truckmanualshub.com/

6-80 BACK PANEL

FIG-NO.

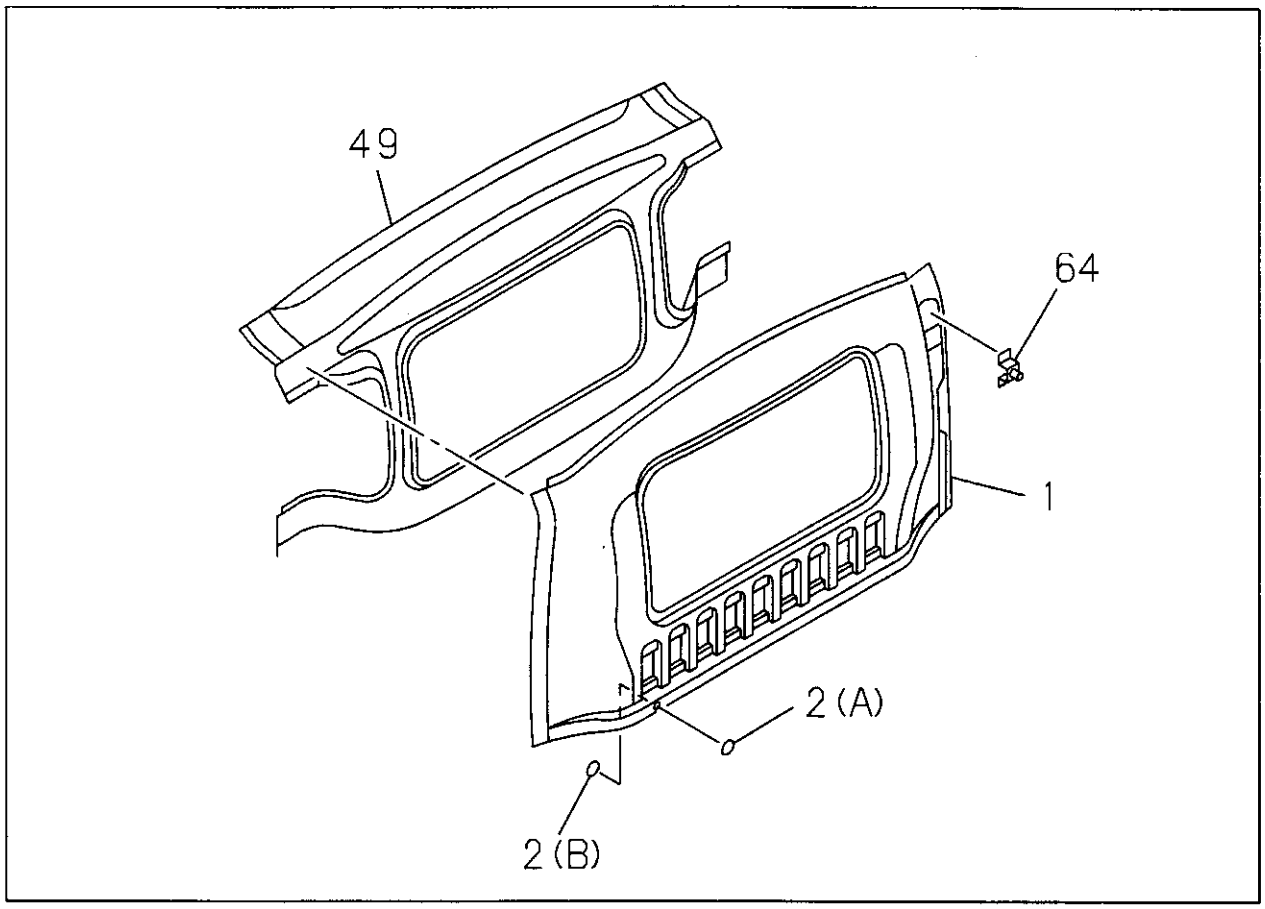

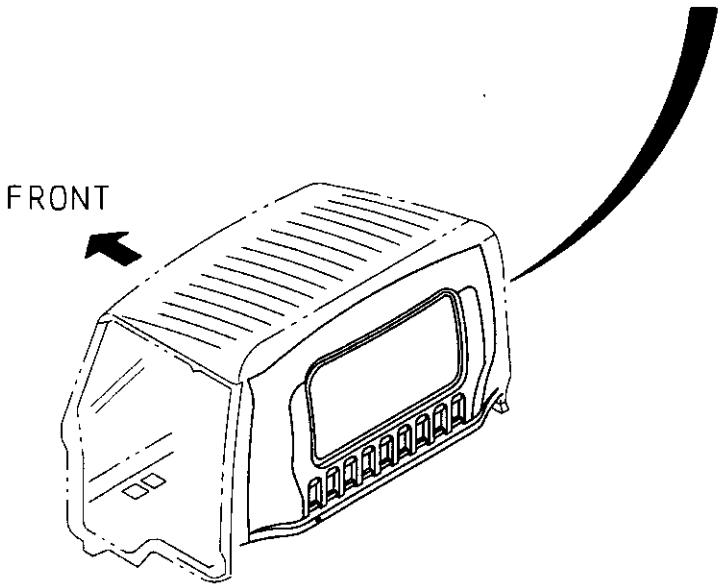

https://truckmanualshub.com/


BACK PANEL

KEY NO.	RECOMMEND CLASS／PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- PANEL; BACK OUTER					
	8-97584-312-3		1103-		01	A
2	--- GROMMET; LOCATION HOLE, BACK PANEL					
	1-76798-019-0		1103-		02	A (A) OD=25 BLACK
	5-76777-035-0		1103-		02	A (B) OD=36 T=0.05 BLACK IDN
49	--- PANEL; BACK INNER					
	8-97584-609-3		1103-		01	A
64	--- BRACKET; AIR INTAKE DUCT					
	8-97584-611-1		1103-		01	A

https://truckmanualshub.com/

6-82 BACK GLASS AND WEATHERSTRIP

FIG-NO.

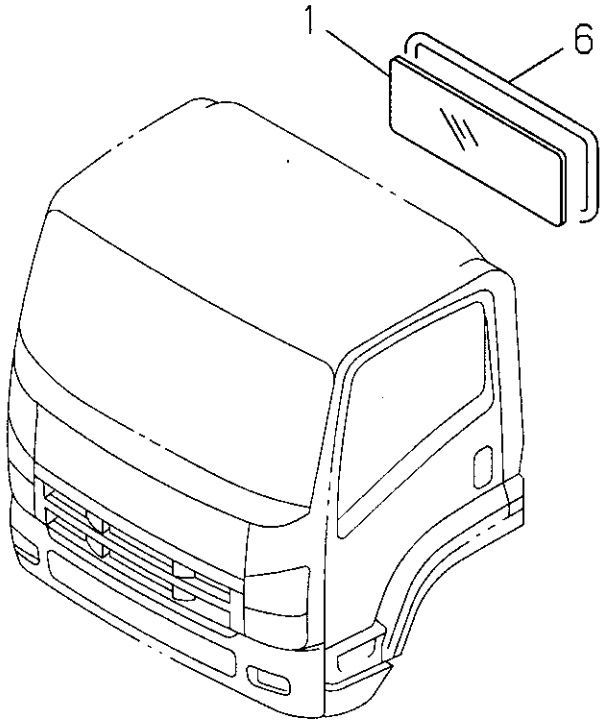

https://truckmanualshub.com/


BACK GLASS AND WEATHERSTRIP

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- GLASS; BACKLIGHT					
	8-98041 665-A		1103-		01	A
6	--- WEATHERSTRIP; BACKLIGHT					
	8-98096-217-0		1103-		01	A

https://truckmanualshub.com/

6-84 BACK TRIM

FIG-NO.

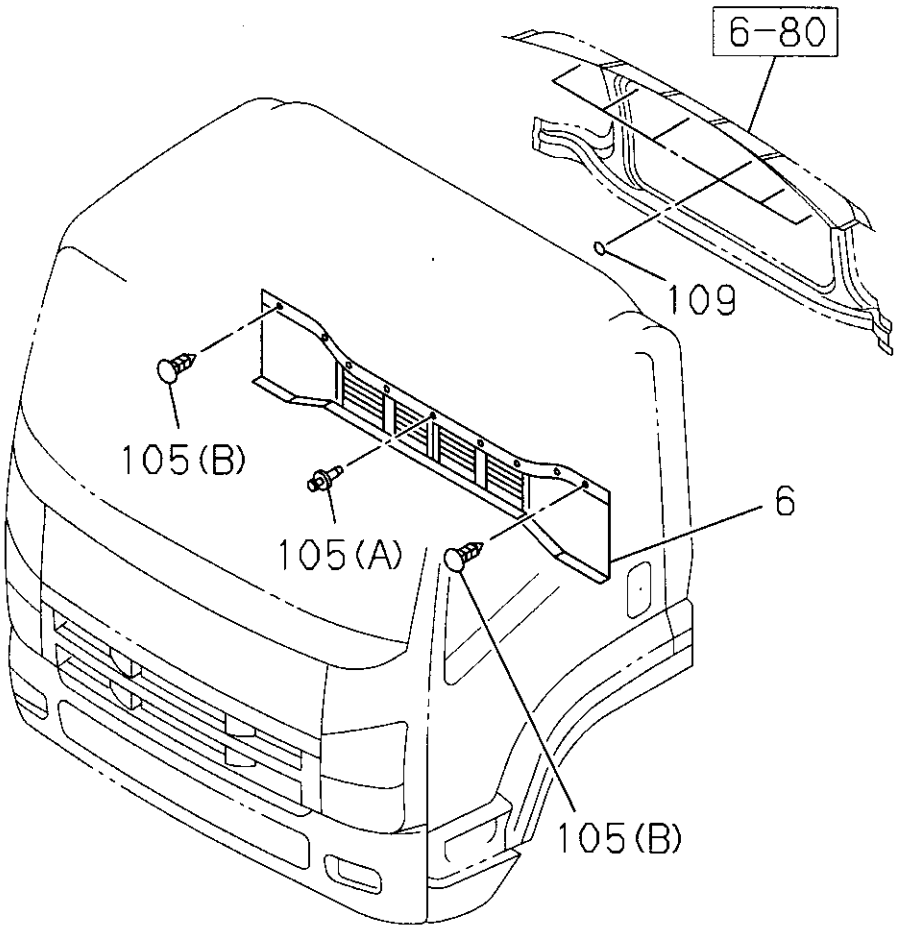

https://truckmanualshub.com/


BACK TRIM

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
6	--- MAT; SILENCER, CAB BACK					
	8-97422-490-1		1103-		01	A GRAY
105	--- CLIP; BACK TRIM					
	8-97407-467-0		1103-		02	A (B) GRAY
	8-97408-022-0		1103-		07	A (A) GRAY
109	--- SEAL; HOLE					
	8-98059-421-0		1103-		06	A OD=20 T=0.05 WHITE IDN

https://truckmanualshub.com/

6-90 REAR BUMPER

FIG-NO.

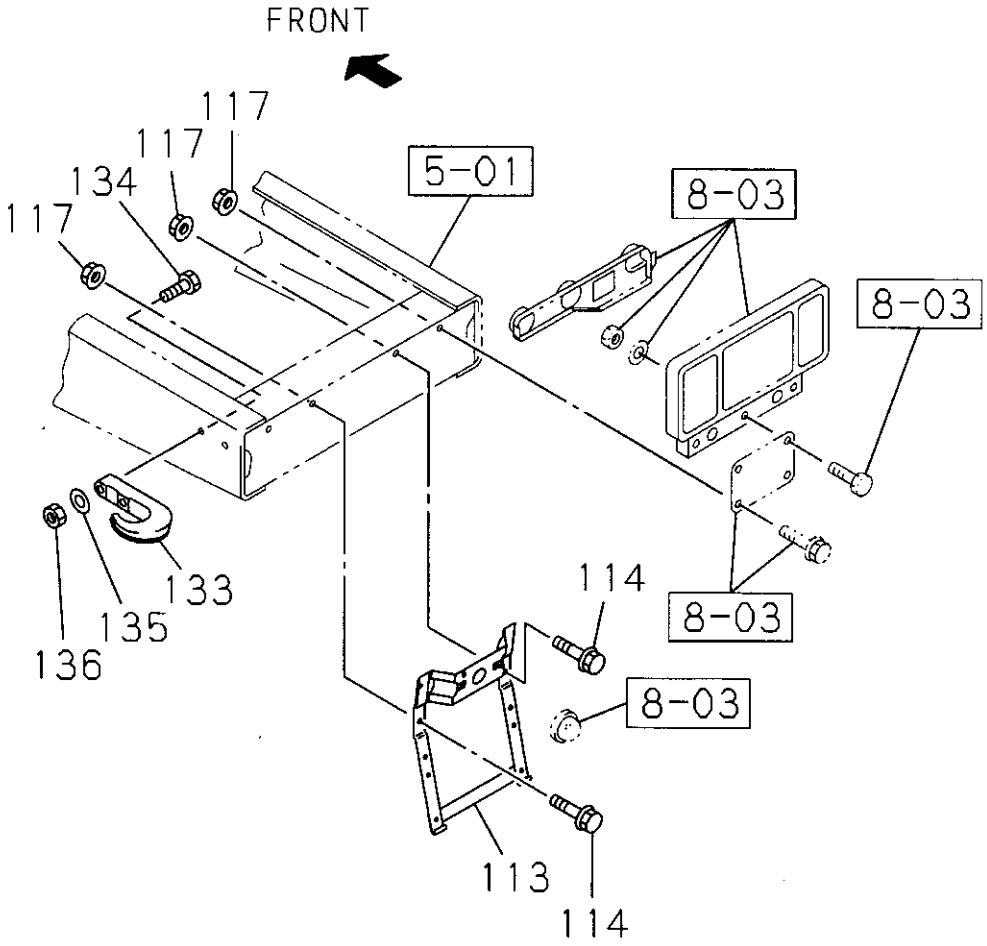

https://truckmanualshub.com/

REAR BUMPER

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
113	--- BRACKET; LICENSE PLATE					
	1-53485-074-0		1103-		01	A
114	--- BOLT; BRKT, LICENSE PLATE					
	0-28650-825-0		1103-		02	A M8X25 FLANGE IDN
117	--- NUT; BRKT					
	0-91180-108-0		1103-		04	A M8 FLANGE
133	--- HOOK					
	1-57181-003-5		1103-	L	01	A TOW HOOK<V76>
134	--- BOLT; HOOK					
	0-10861-450-0		1103-		02	A TOW HOOK<V76> M14X50
135	--- WASHER; LK, HOOK					
	0-91510-814-0		1103-		02	A TOW HOOK<V76> ID=14.2
136	--- NUT; HOOK					
	0-91110-514-0		1103-		02	A TOW HOOK<V76> M14


https://truckmanualshub.com/


7

https://truckmanualshub.com/

7-01 EMBLEM AND NAME PLATE

FIG-NO.

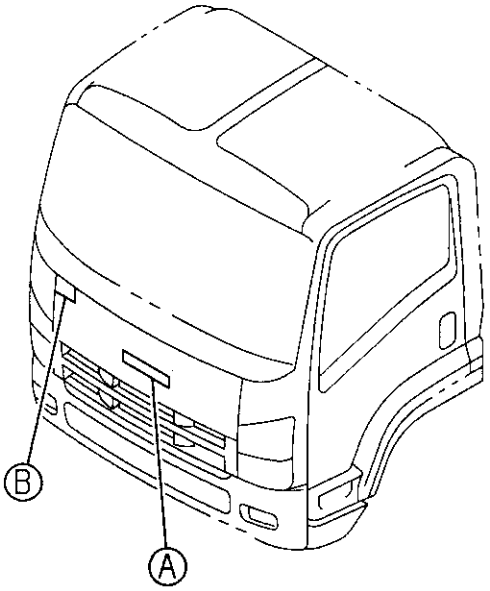

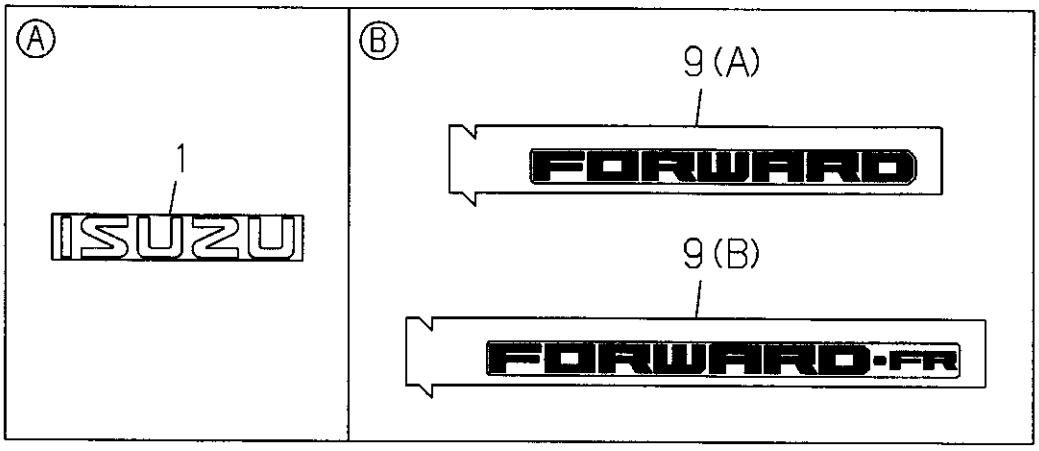

https://truckmanualshub.com/

EMBLEM AND NAME PLATE

7-01


FIG-NO.


KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- MARK; ISUZU						
	1-76218-102-0		1103-		01	A	
9	--- DECAL						
	8-98041-579-0		1103-		01	A	DECAL PET NAME<8NH> (A)
	8-98137-312-0		1103-		01	A	DECAL VEHICLE NAME/PET NAME<8NG> (B)


https://truckmanualshub.com/

7-10 CAUTION PLATE AND LABEL

FIG-NO.

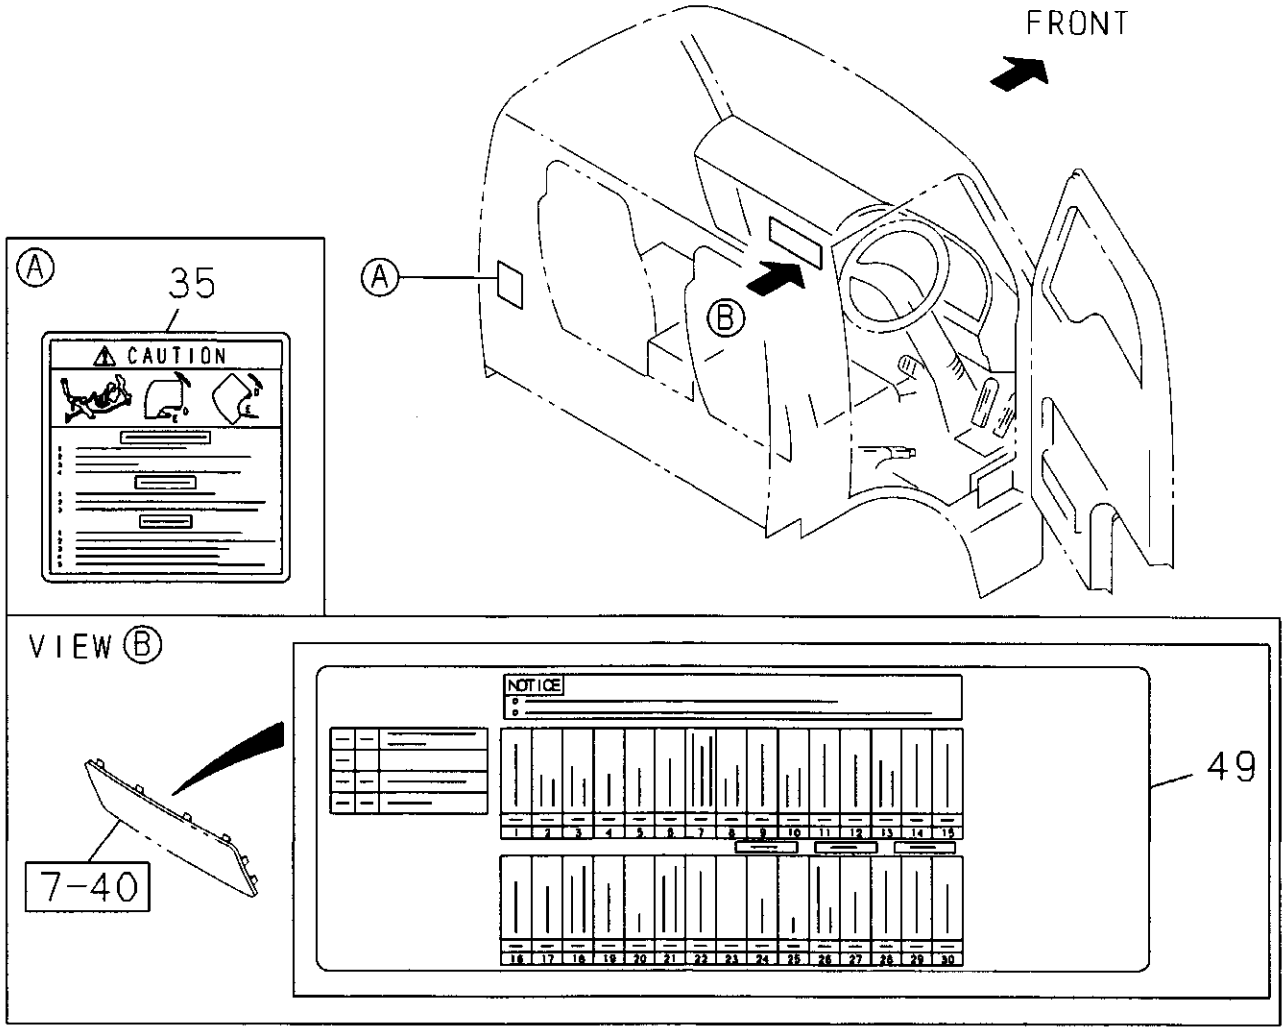

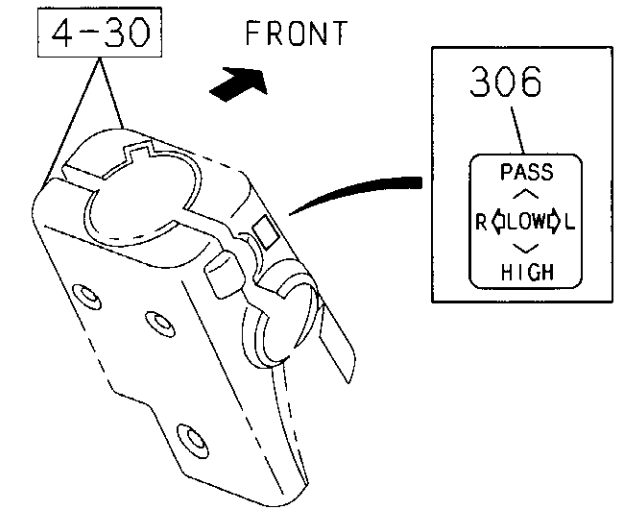

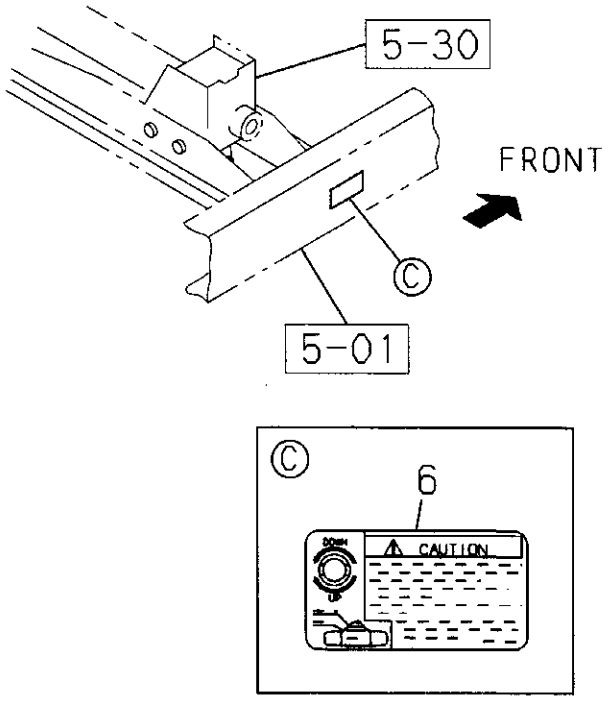

https://truckmanualshub.com/


CAUTION PLATE AND LABEL

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
6	--- PLATE; CAUTION, SPARE TIRE					
	8-98082-437-0		1103-		01	A SPARE WHEEL CARRIER FRAME REAR(P10)
35	--- PLATE; CAUTION, CAB					
	8-98065-363-0		1103-		01	A
49	--- PLATE; CAUTION, FUSE BOX					
	8-98122-353-0		1103-		01	A
306	--- LABEL; BEAM & PASS					
	8-98070-239-0		1103-		01	A

https://truckmanualshub.com/

7-20 MIRROR AND MIRROR STAY

FIG-NO. OUTSIDE, UNDER AND ROOM MIRROR

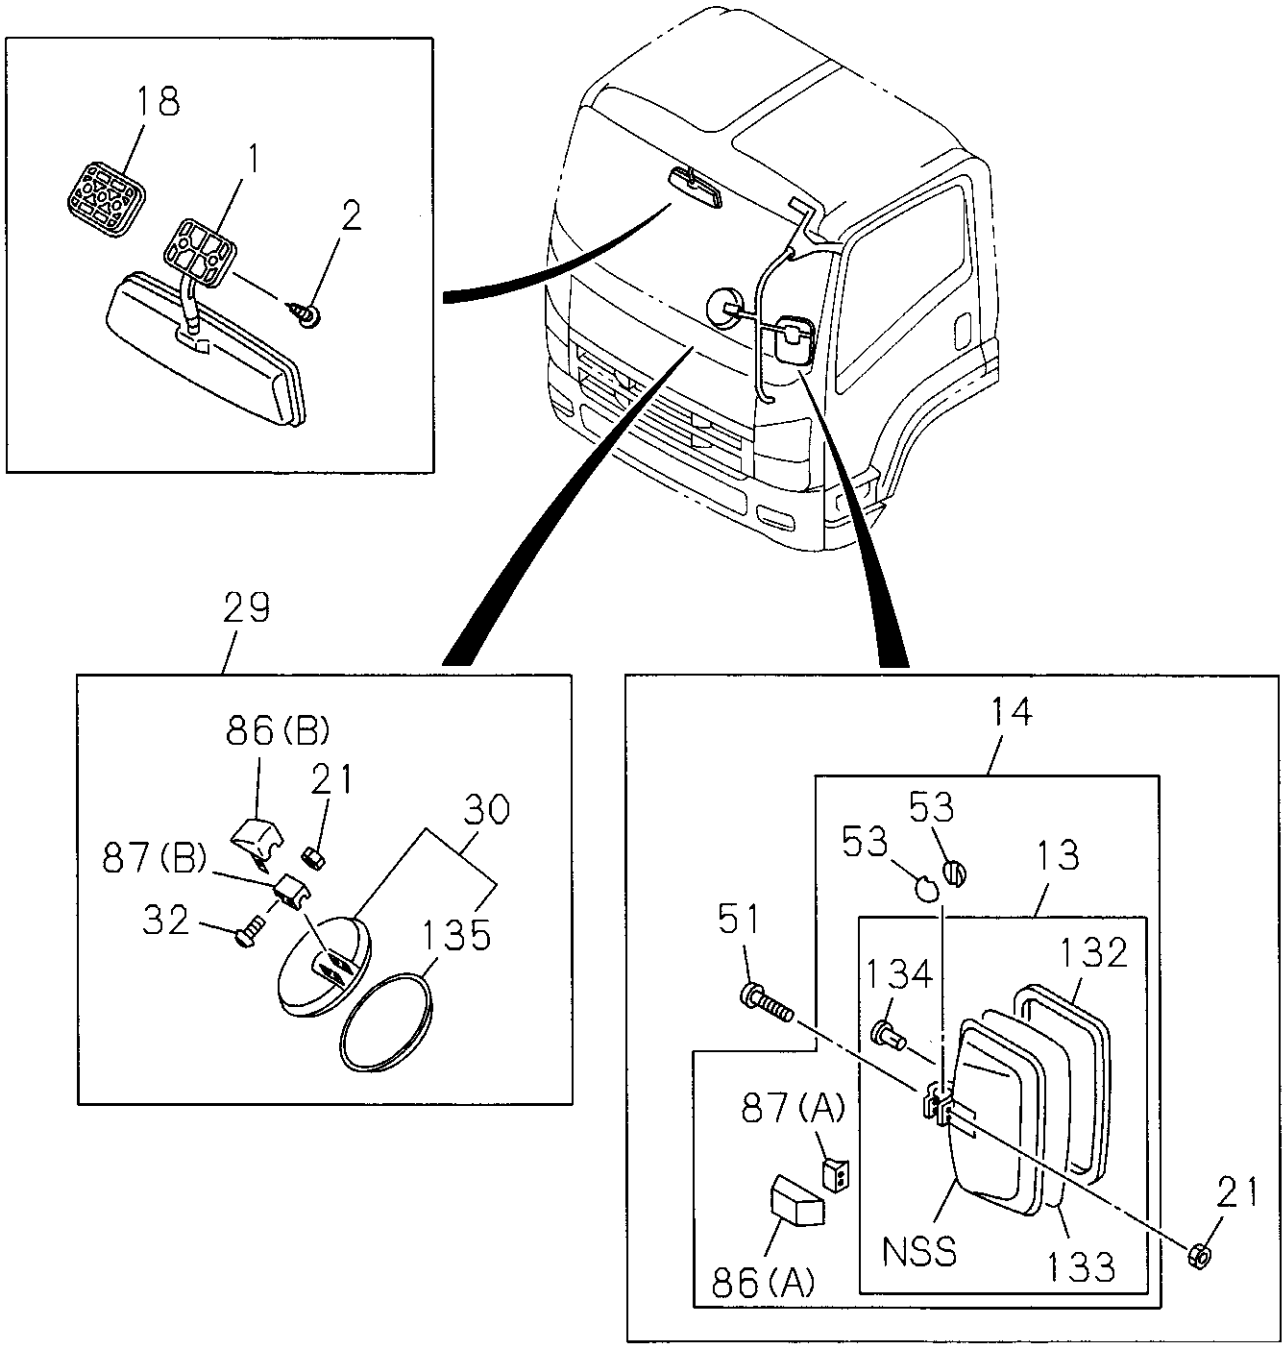


https://truckmanualshub.com/


MIRROR AND MIRROR STAY

LH

7-20

FIG-NO.

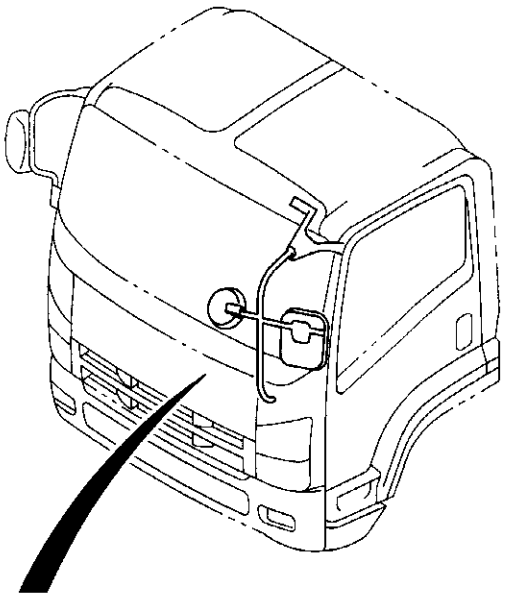


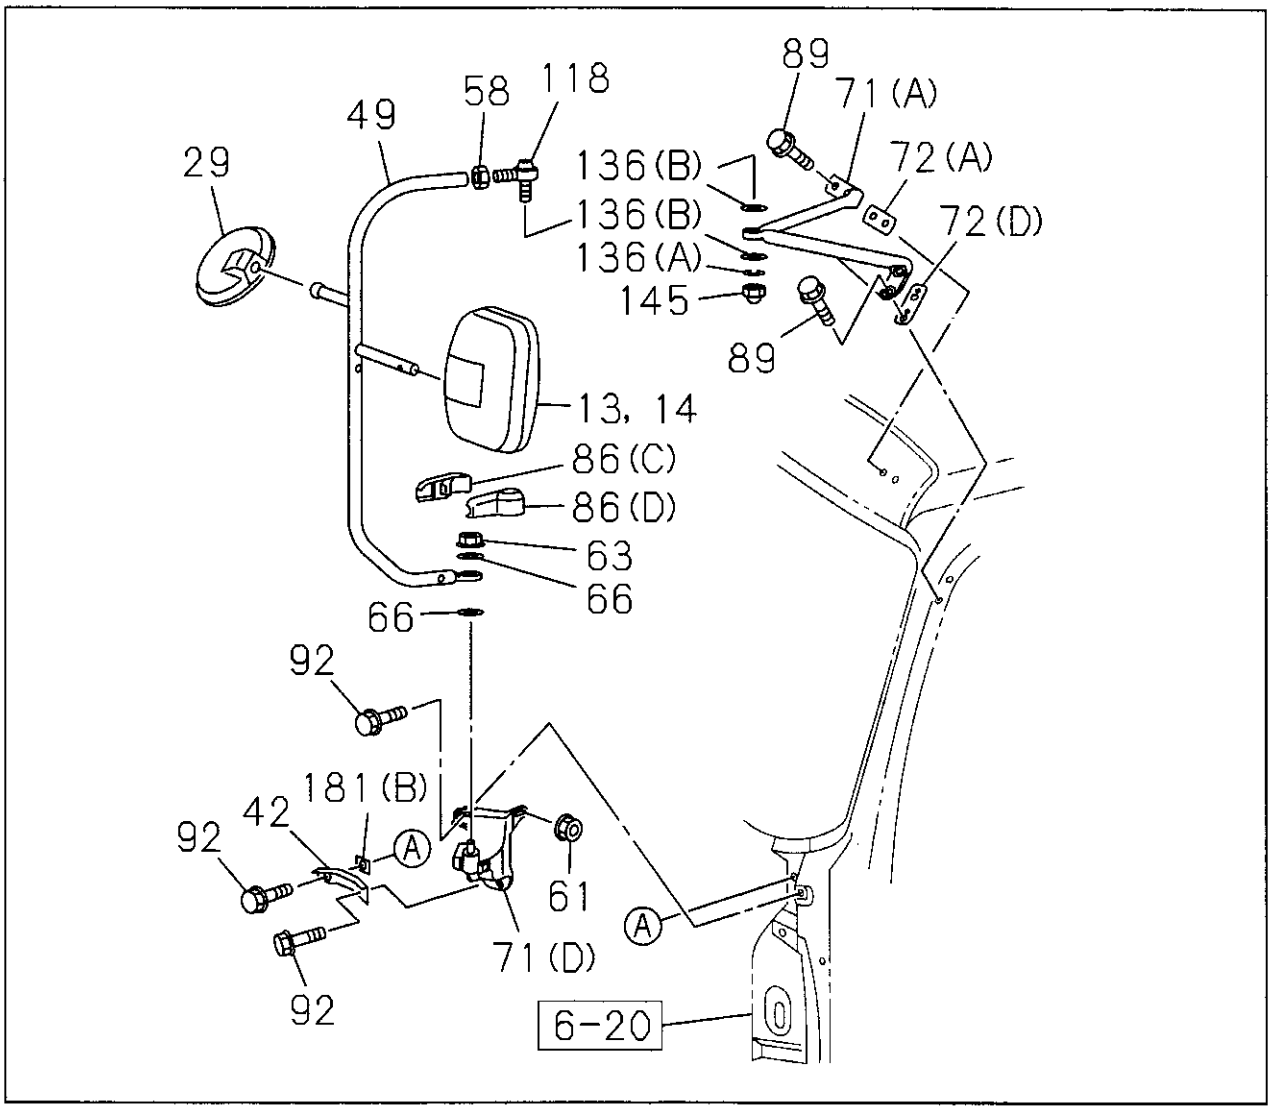


https://truckmanualshub.com/


7-20 MIRROR AND MIRROR STAY

FIG-NO. RH

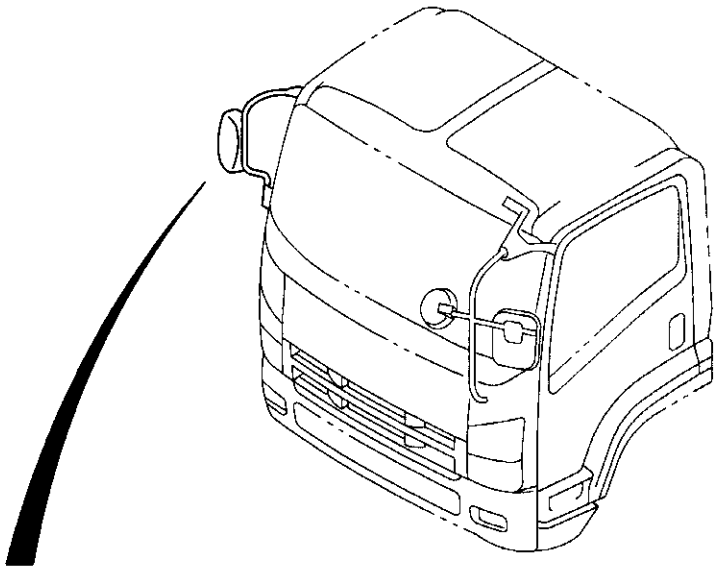

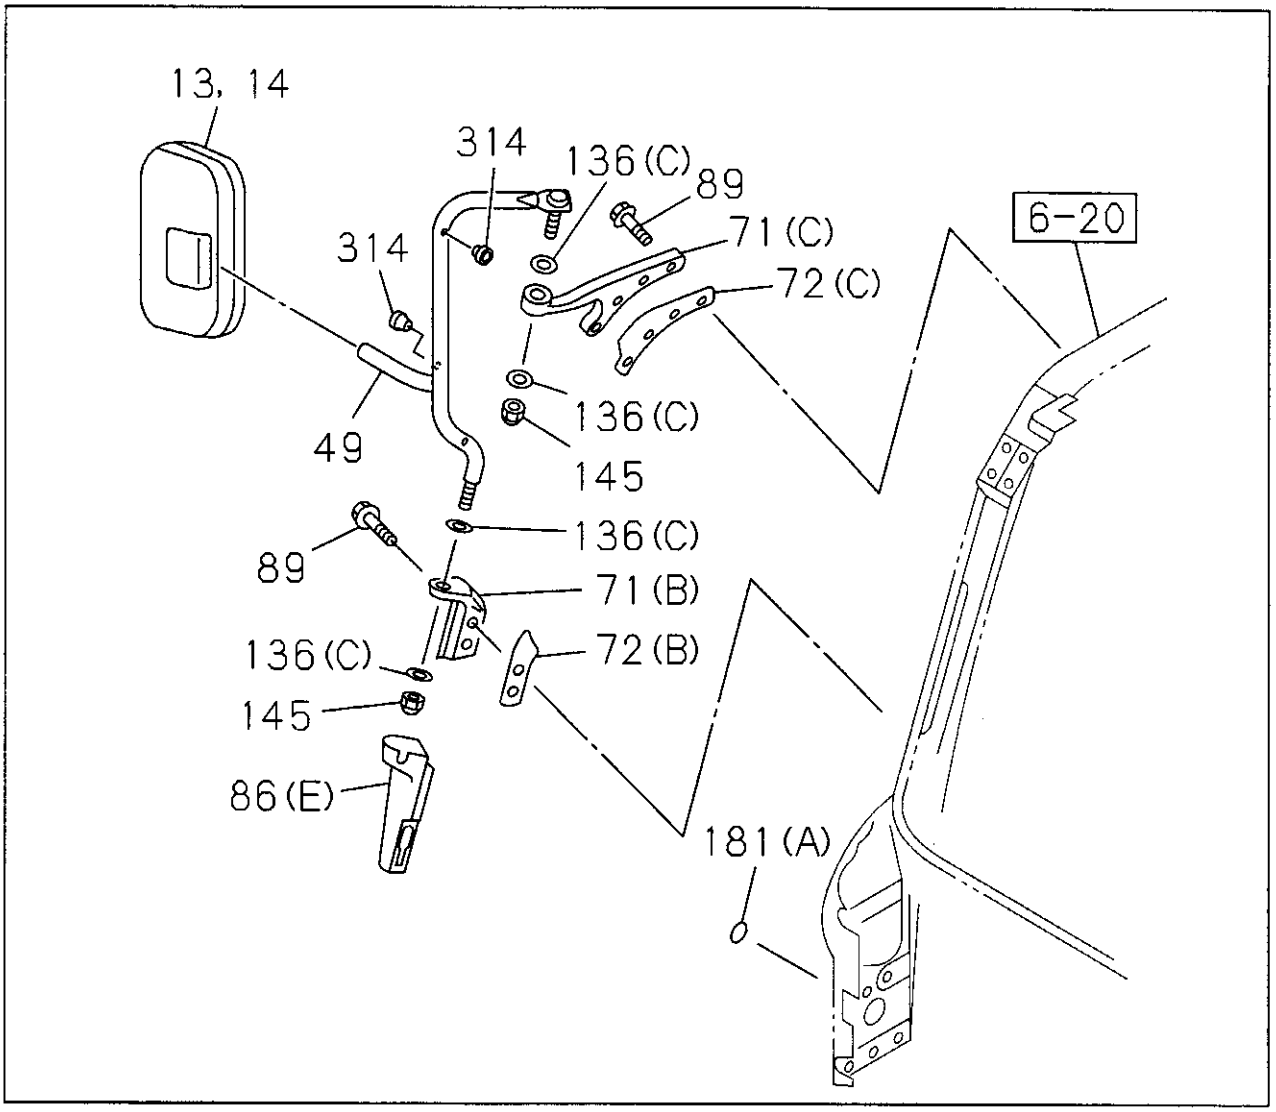

https://truckmanualshub.com/

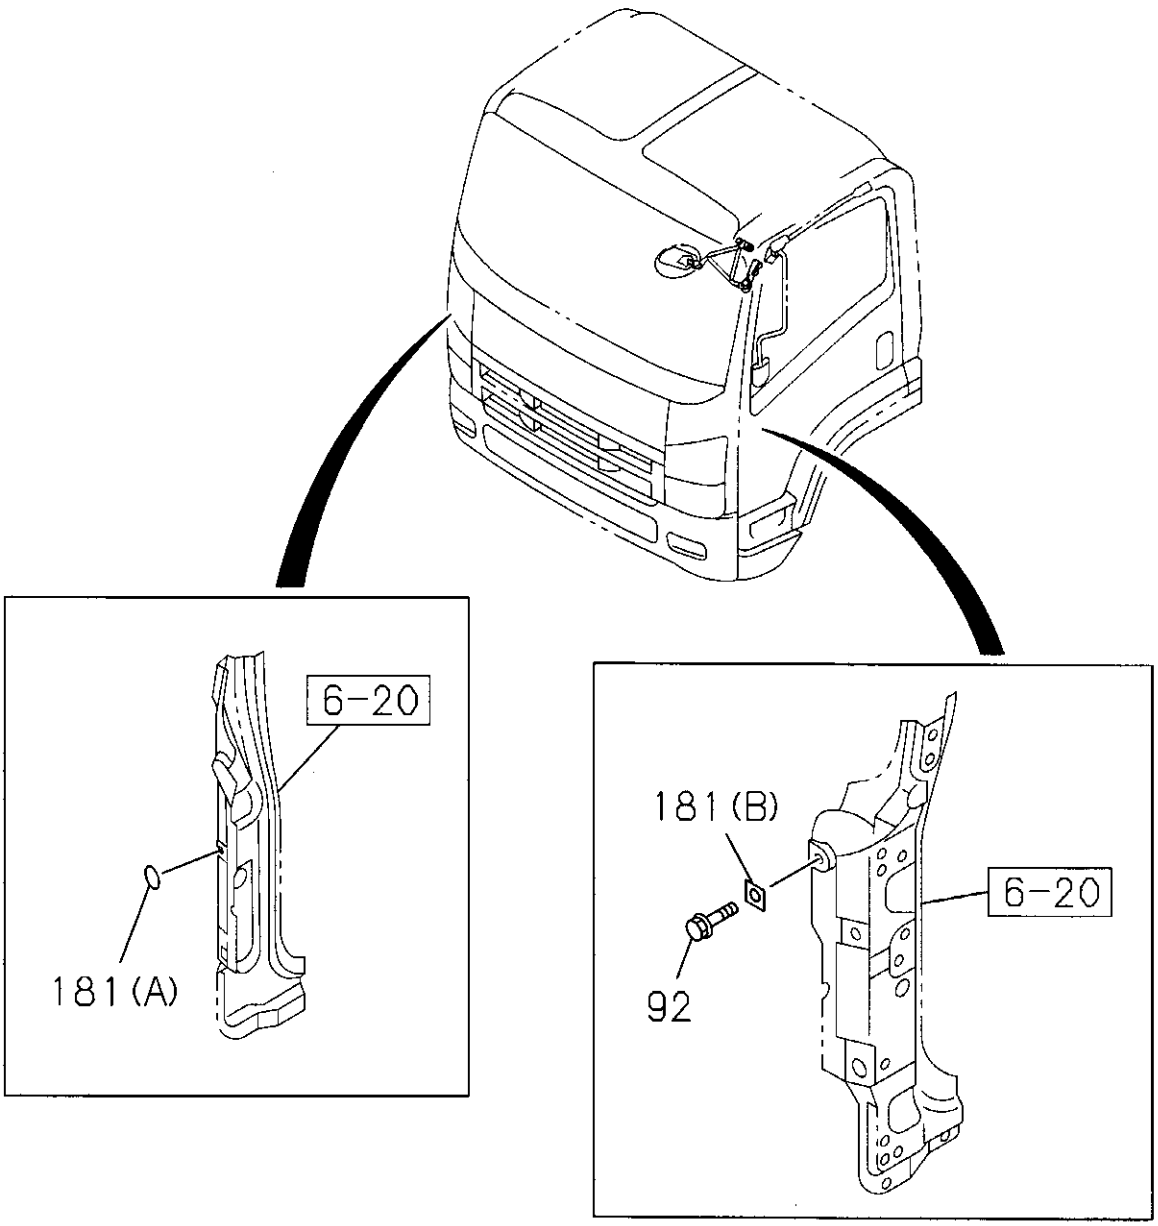

https://truckmanualshub.com/

7-20 MIRROR AND MIRROR STAY

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- MIRROR; ROOM					
	8-98097-534-1		1103-		01	A DARK GRAY
2	--- SCREW; MIRROR TO BODY					
	8-98033-674-0		1103-		02	A M6X26
13	-B- MIRROR ASM; OUTSIDE RR VIEW					
	1-71737-917-3		1103-	L	01	A
	1-71737-918-3		1103-	R	01	A
14	-B- MIRROR ASM; OUTSIDE					
	1-71707-152-1		1103-	L	01	A PIVOT ID=22.2
	1-71737-922-1		1103-	R	01	A PIVOT ID=22.2
18	--- CLIP; MIRROR					
	8-97408-241-0		1103-		01	A DARK GRAY
21	--- NUT; MIRROR					
	1-09984-124-0		1103-		04	A M5
	1-09984-124-0		1103-	L	02	A M5
29	--- MIRROR ASM; UNDER					
	1-71798-422-0		1103-	L	01	A
30	-B- MIRROR; UNDER					
	1-71798-591-1		1103-	L	01	A
32	--- SCREW; UNDER MIRROR					
	1-71737-797-0		1103-	L	02	A M5X40 W/PL WASHER
42	--- ATTACHMENT; OUTSIDE MIRROR					
	8-98070-643-0		1103-	L	01	A
49	--- STAY; MIRROR SIDE					
	8-98170-680-0		1103-	L	01	A
	8-98170-679-0		1103-	R	01	A

https://truckmanualshub.com/

MIRROR AND MIRROR STAY

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
51	--- SCREW; MIRROR					
	1-09981-541-0		1103-		04	A
53	--- PIVOT; SIDE MIRROR					
	1-71736-489-2		1103-		04	A ID=22.2
58	--- NUT; MIRROR STAY					
	8-98061-883-0		1103-	L	01	A
61	--- NUT; STAY, OUTSIDE MIRROR					
	0-91180-108-0		1103-	L	01	A M8 FLANGE
63	--- NUT; STAY					
	8-98174-339-0		1103-	L	01	A M14 TOUGH LOCK NUT W/FLANGE
66	--- WASHER; PL					
	0-91610-614-0		1103-	L	01	A LOWER
	8-98174-337-0		1103-	L	01	A UPPER
71	--- BRACKET; OUTSIDE MIRROR					
	8-98040-022-1		1103-	L	01	A (A)
	8-98040-544-2		1103-	L	01	A (D)
	8-98040-021-0		1103-	R	01	A (C)
	8-98040-543-1		1103-	R	01	A (B)
72	--- SHEET					
	8-98040-535-0		1103-	L	01	A (D)
	8-98040-537-1		1103-	L	01	A (A)
	8-98040-351-0		1103-	R	01	A (C)
	8-98040-353-1		1103-	R	01	A (B)

https://truckmanualshub.com/

7-20 MIRROR AND MIRROR STAY

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
86	--- COVER; STAY, OUTSIDE MIRROR					
	1-71737-760-1		1103-		02	A (A) BLACK
	1-71737-649-1		1103-	L	01	A (B) BLACK
	8-98040-545-1		1103-	L	01	A (C)
	8-98040-546-1		1103-	L	01	A (D)
	8-98040-541-1		1103-	R	01	A (E)
87	--- SPACER					
	1-71737-704-0		1103-		02	A (A)
	1-71737-646-2		1103-	L	01	A (B)
89	--- SCREW; BRKT, OUTSIDE MIRROR					
	8-98067-249-2		1103-		10	A M8X26 W/PL WASHER
92	--- BOLT; STAY BRKT, MIRROR					
	8-98076-109-0		1103-	L	04	A M8X16 FLANGE
118	--- JOINT ASM; BALL					
	1-71798-356-2		1103-	L	01	A
132	--- RING; MIRROR					
	1-71737-933-0		1103-	L	01	A
	1-71737-934-0		1103-	R	01	A
133	--- LENS; MIRROR, OUTSIDE					
	1-71737-926-0		1103-	L	01	A
	1-71737-927-0		1103-	R	01	A
134	--- CLIP; MIRROR LENS					
	1-71737-936-0		1103-		02	A

https://truckmanualshub.com/


MIRROR AND MIRROR STAY

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
135	--- LENS; MIRROR, SIDE UNDER					
	1-71798-838-0		1103-	L	01	A
136	--- WASHER; LK, BRKT, MIRROR STAY					
	1-09985-180-0		1103-	L	01	A (A) ID=10
	1-09985-184-0		1103-	L	02	A (B) ID=10.5 OD=26 T=2.6
	1-09985-204-0		1103-	R	04	A (C) ID=10.5 OD=26 T=2.6
145	--- NUT; CAP, SUB STAY					
	1-09984-134-0		1103-		03	A M10
181	--- SEAL; BRKT					
	8-94272-533-0		1103-	L	01	A (B) 25X25
	1-76798-019-0		1103-	R	01	A (A) OD=25 BLACK
314	--- BUFFER; STOPPER					
	8-94314-317-0		1103-	R	02	A


https://truckmanualshub.com/

7-30 LOCK CYLINDER SET

FIG-NO. CYLINDER SET

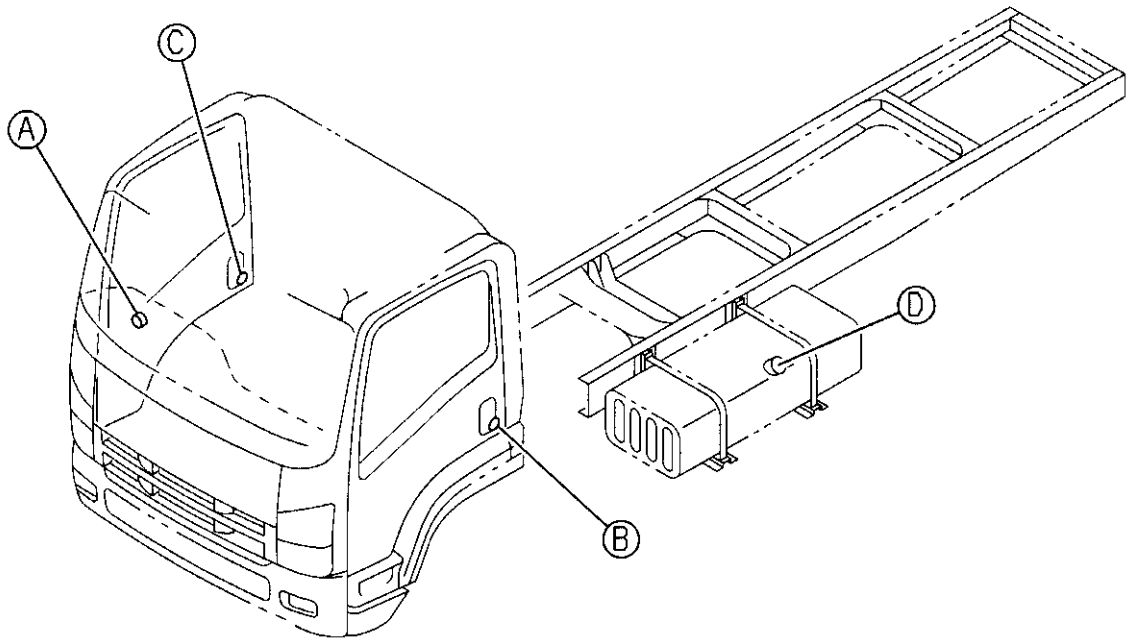

1

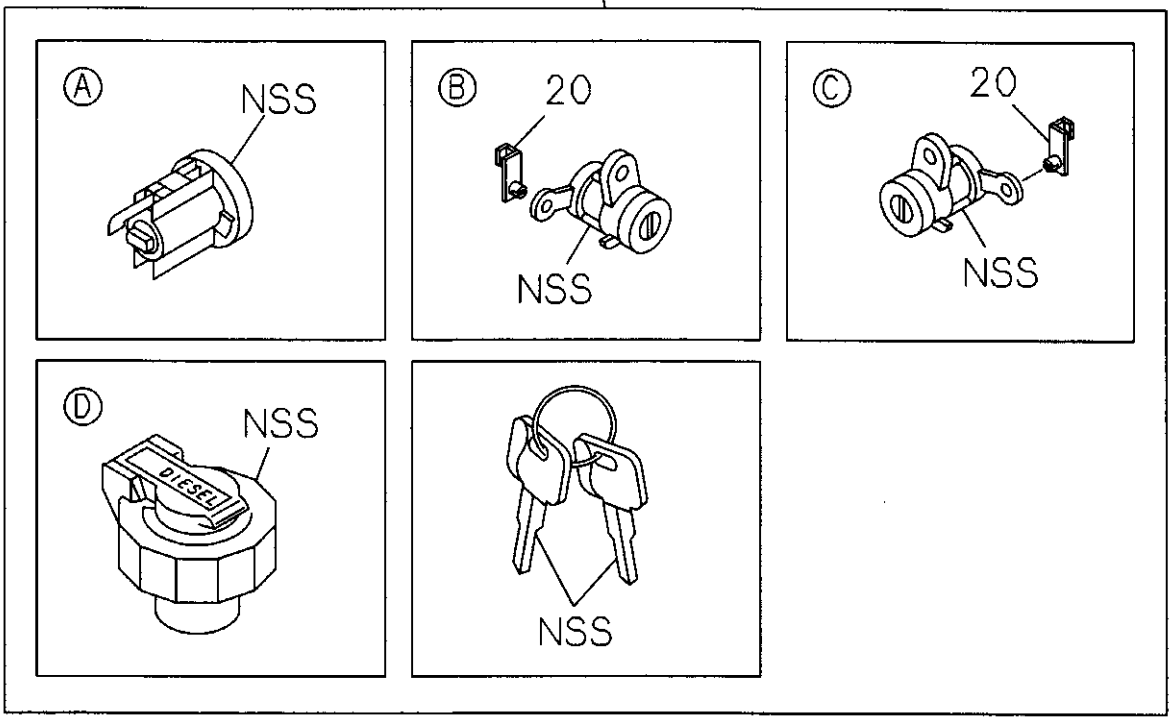



https://truckmanualshub.com/

LOCK CYLINDER SET

LOCK CYLINDER, BARREL AND OTHER PARTS

FIG-NO.

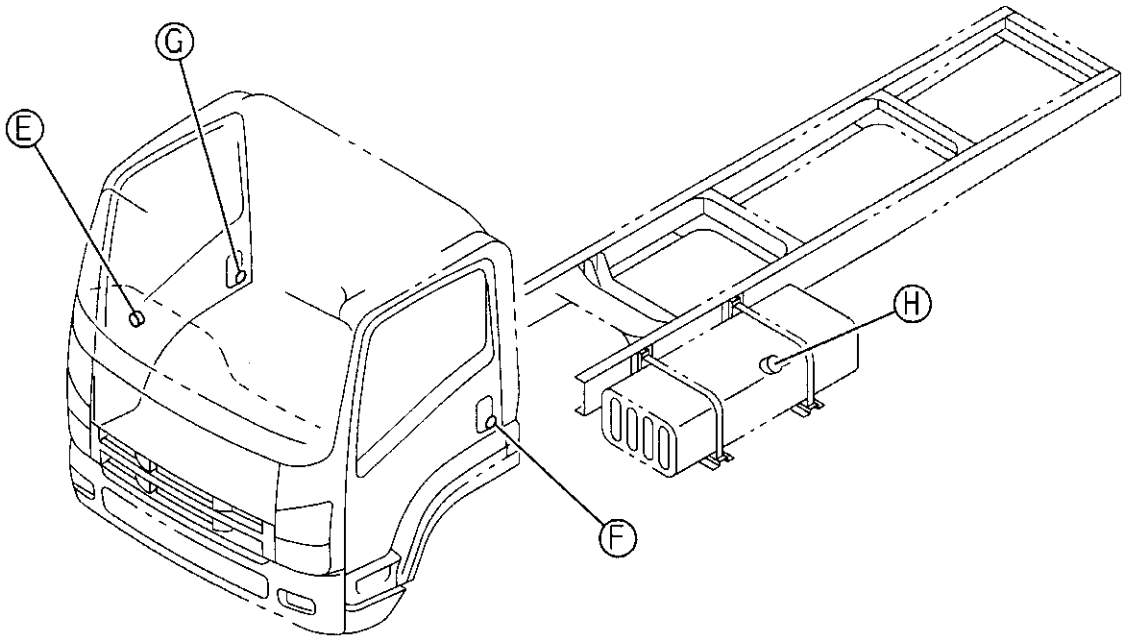

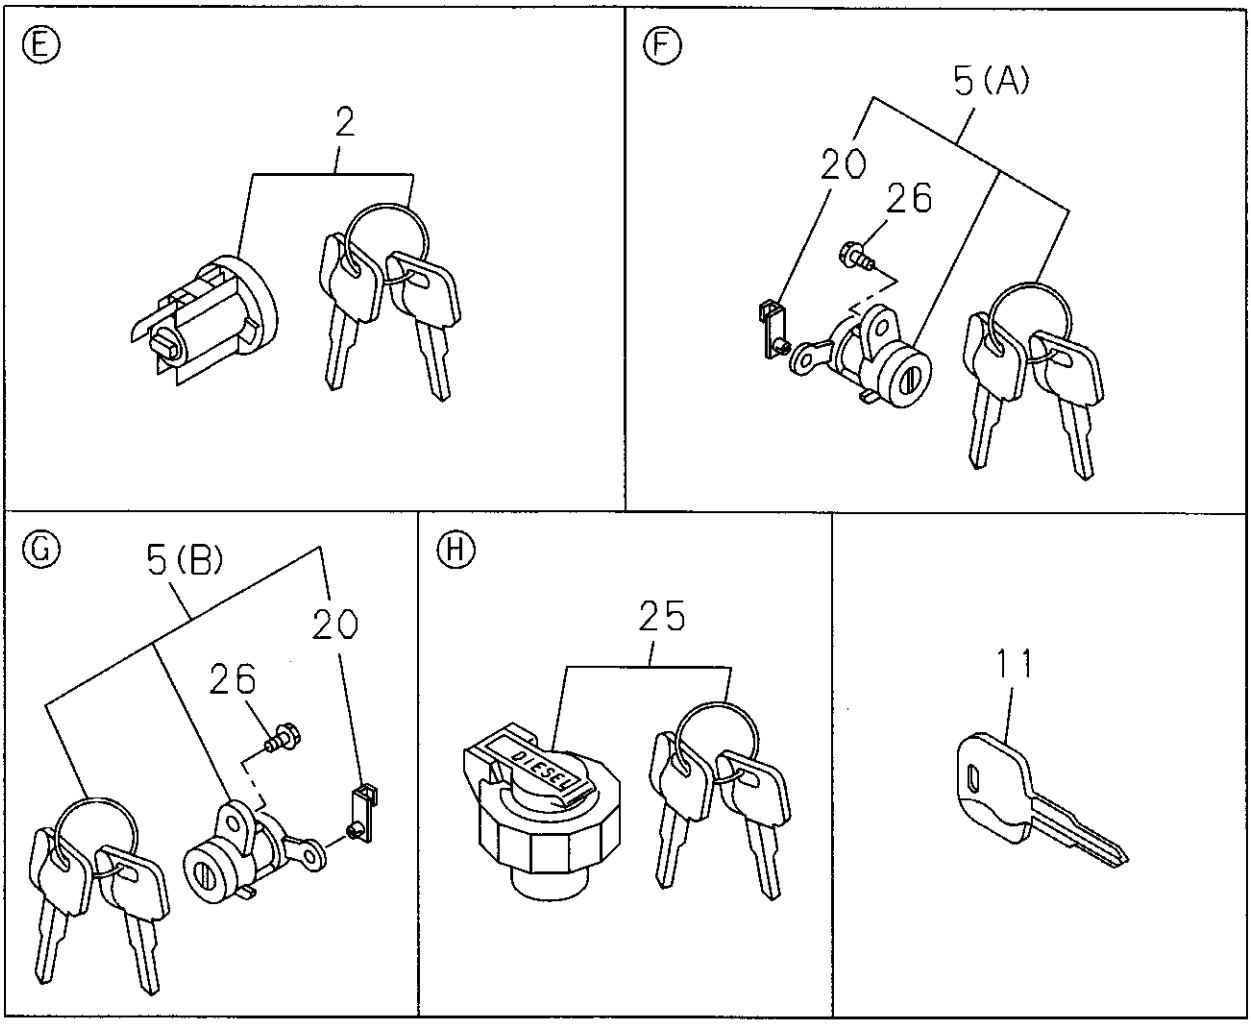

https://truckmanualshub.com/

7-30 LOCK CYLINDER SET


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
1	--- CYLINDER SET; CAR LOCK						
	8-98145-979-0		1103-		01	A	
2	--- BARREL ASM; W/KEY, STRG LOCK						
	8-98055-148-0		1103-		01	A	
5	--- CYLINDER ASM; DOOR LOCK						
	8-98055-149-0		1103-	R	01	A	(B)
	8-98055-150-0		1103-	L	01	A	(A)
11	--- KEY; BLANK						
	8-98055-170-0		1103-		AR	A	
20	--- SNAP; DOOR LOCK CYL						
	8-98055-181-0		1103-	L	01	A	
	8-98055-182-0		1103-	R	01	A	
25	-B- CAP; FUEL TANK, W/KEY						
	8-98146-010-0		1103-		01	A	
26	--- BOLT; KEY CYL, DOOR						
	8-98031-839-0		1103-		02	A	M6X8 FLANGE


https://truckmanualshub.com/

7-40 INSTRUMENT PANEL AND BOX

FIG-NO. INST PANEL AND OTHER PARTS

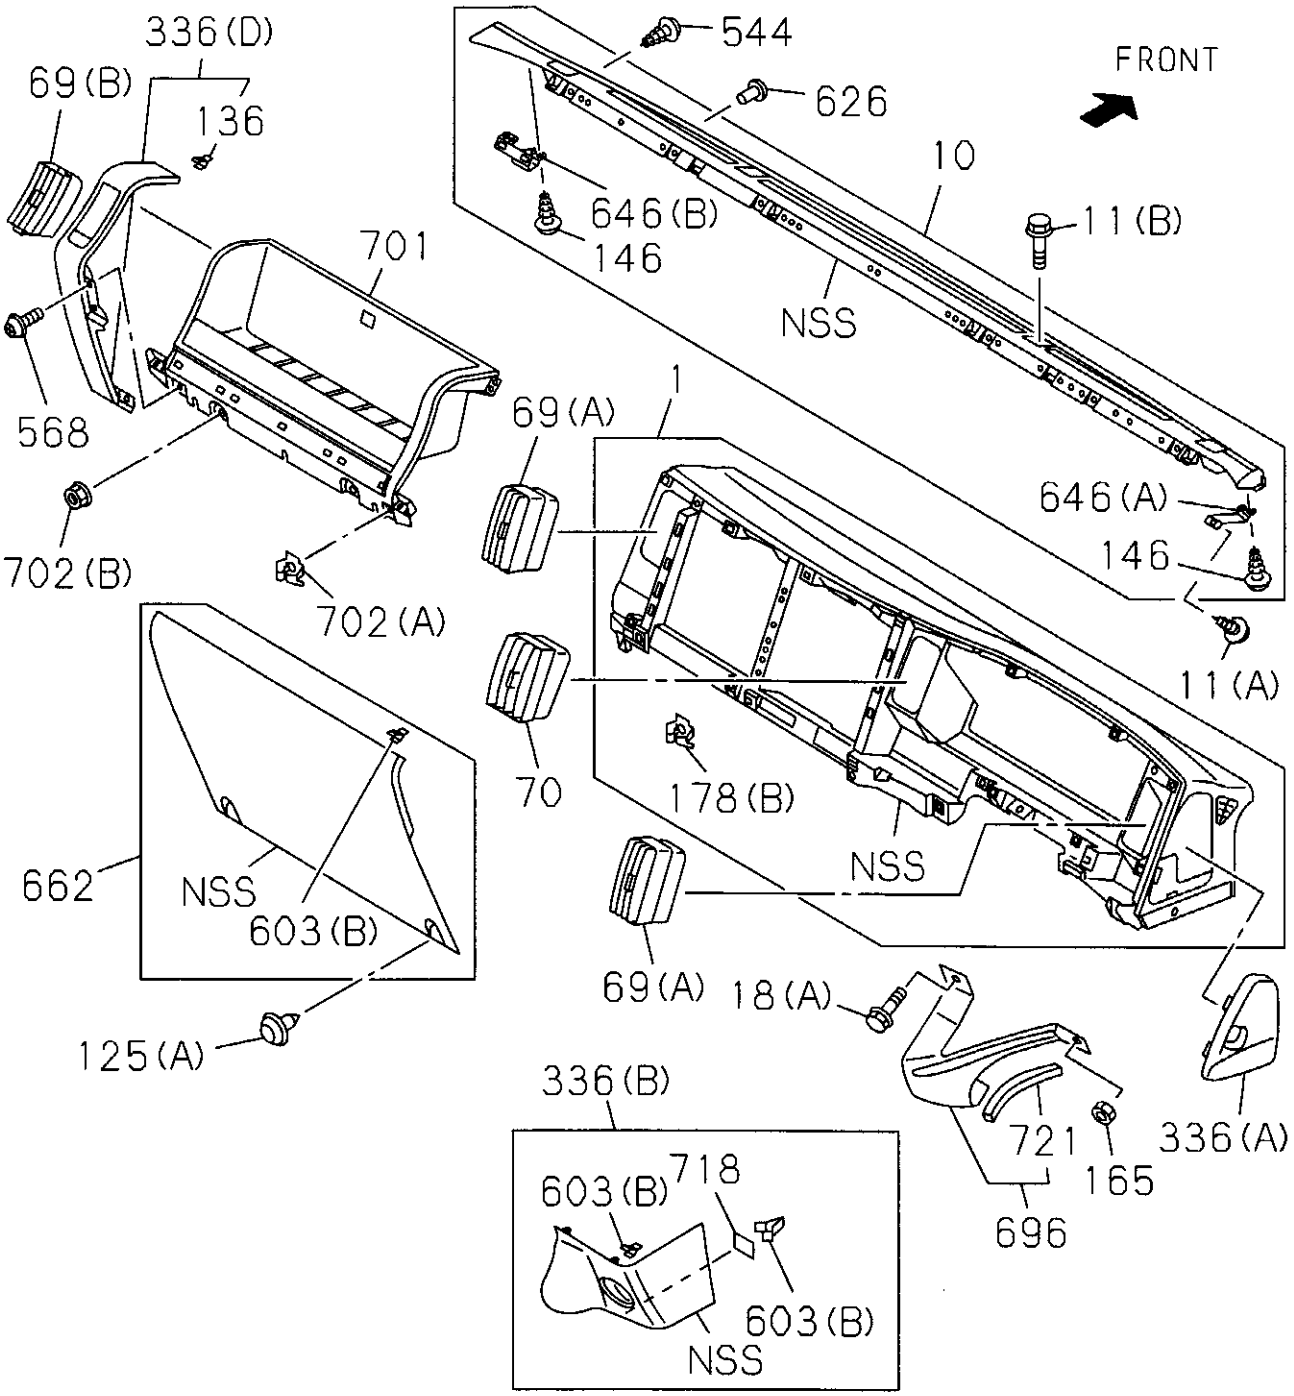


https://truckmanualshub.com/

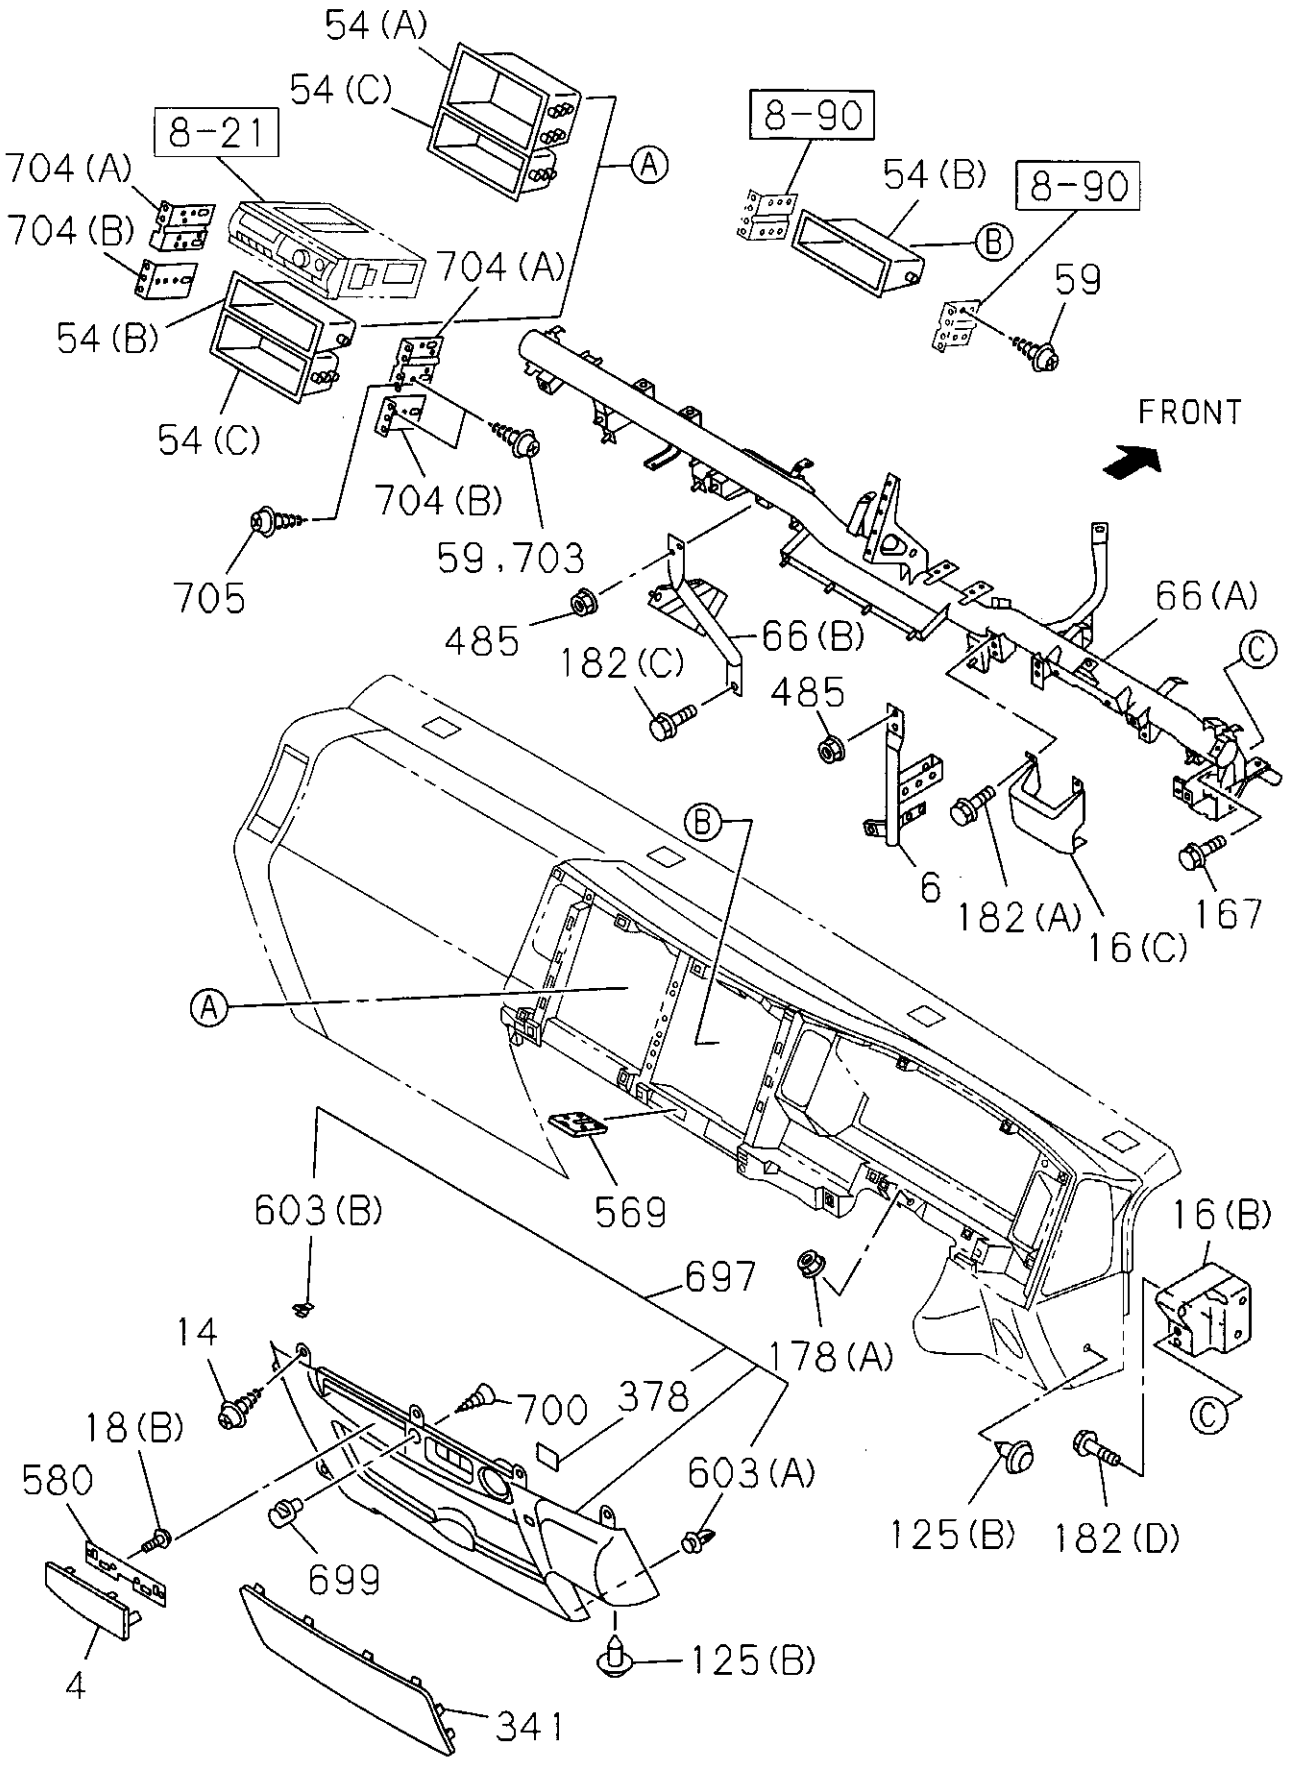



https://truckmanualshub.com/

7-40 INSTRUMENT PANEL AND BOX

FIG-NO. BRACKET AND COVER

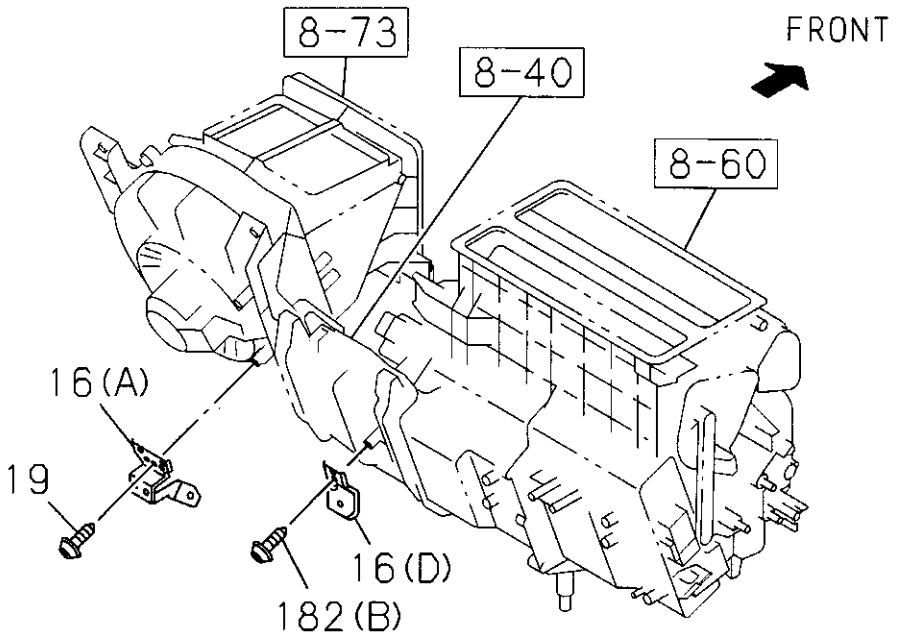

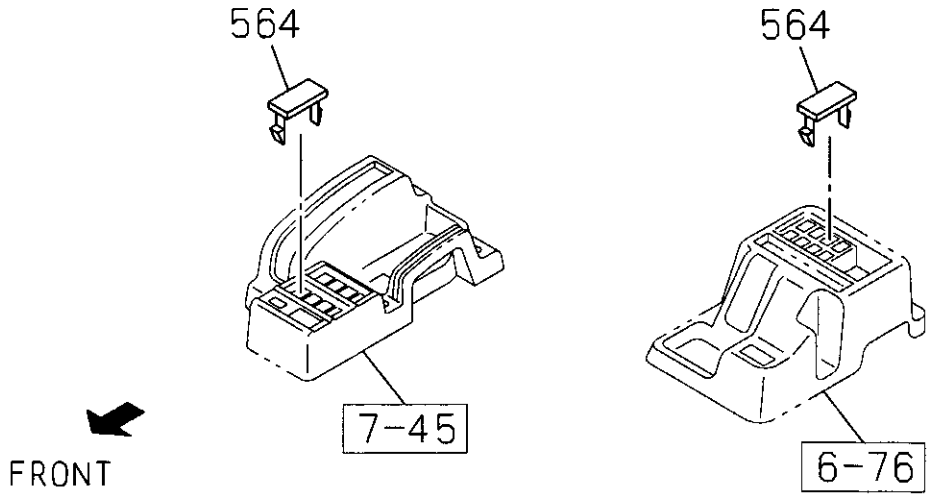

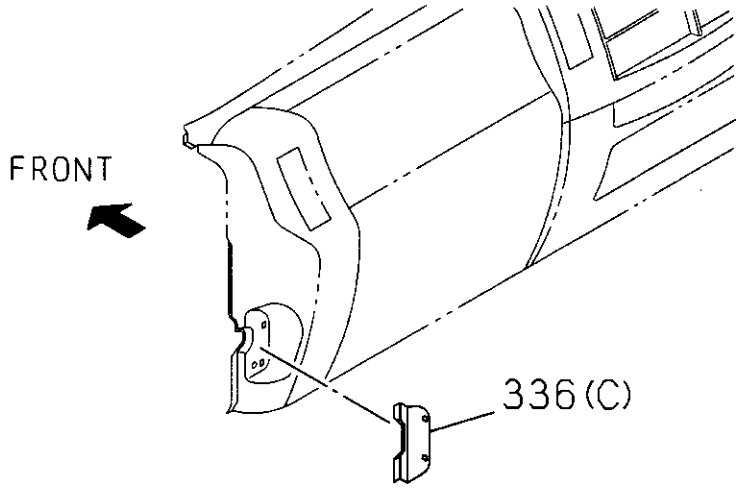

https://truckmanualshub.com/

INSTRUMENT PANEL AND BOX

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- PANEL; INST						
		8-97423-015-0		1103-		01	A GRAY
4	--- COVER; INST PNL						
		8-97407-898-1		1103-		01	A GRAY
6	--- SUPPORT; INST PANEL						
		8-98088-312-0		1103-		01	A
10	--- PANEL ASM; GARNISH						
		8-97422-095-0		1103-		01	A GRAY
11	--- BOLT; INST PNL						
		0-72180-516-0		1103-		08	A (A) SCREW M5X16 TAPPING
		8-98018-440-0		1103-		04	A (B) M6X25 W/LK&PL WASHER
14	--- SCREW; INST PNL						
		0-72180-516-0		1103-		04	A M5X16 TAPPING
16	--- BRACKET; INST PNL						
		8-98053-711-0		1103-		01	A (C)
		8-98017-204-1		1103-	L	01	A (B)
		8-98017-202-1		1103-	R	01	A (B)
		8-97585-612-2		1103-		01	A VENTILATOR & DEFROSTER W0/HEATER<SAZ> (A)
		8-98010-154-0		1103-		01	A VENTILATOR & DEFROSTER W0/HEATER<SAZ> (D)
18	--- BOLT; BRKT						
		0-52000-612-0		1103-		01	A (A) M6X12 W/LK&PL WASHER
		8-98058-632-0		1103-		03	A (B) M5X10 TAPPING W/TORQUES

https://truckmanualshub.com/

7-40 INSTRUMENT PANEL AND BOX

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
19	--- SCREW; BRKT					
	0-72180-516-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> M5X16 TAPPING
54	--- POCKET; CENTER CLUSTER					
	8-97407-129-2		1103-		01	A (A) H=108.4 BLACK
	8-97408-864-2		1103-		01	A (B) H=58.4 BLACK
	8-97408-865-2		1103-		01	A (C) H=69.8 BLACK
59	--- SCREW; CLUSTER POCKET					
	8-98058-632-0		1103-		04	A M5X10 TAPPING W/TORQUES
66	--- REINFORCEMENT; INST PANEL					
	8-98009-970-9		1103-		01	A (A)
	8-98151-167-0		1103-		01	A (B)
69	--- GRILLE; SIDE, AIR OUTLET					
	8-98028-561-1		1103-		02	A (A)
	8-98028-562-1		1103-		01	A (B)
70	--- GRILLE; CENTER, AIR OUTLET					
	8-98028-563-1		1103-		01	A
125	--- CLIP; INST PANEL					
	8-97408-817-0		1103-		04	A (B) GRAY
	8-97419-968-1		1103-		02	A (A) GRAY
136	--- CLIP; INST COVER					
	8-98076-254-0		1103-		02	A

https://truckmanualshub.com/

INSTRUMENT PANEL AND BOX

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
146	--- SCREW; TAP					
	0-72180-516-0		1103-		03	A M5X16 TAPPING
165	--- NUT; BRKT KNEE PAD					
	0-91180-106-0		1103-		01	A M6 FLANGE
167	--- BOLT; REINF TO INST					
	8-97264-766-0		1103-		04	A M8X23 FLANGE
178	--- NUT; INST PANEL					
	0-91180-106-0		1103-		01	A (A) M6 FLANGE
	8-98037-629-0		1103-		15	A (B)
182	--- BOLT; BRKT, INST PANEL					
	0-28050-816-0		1103-		04	A (D) M8X16 FLANGE
	0-52000-612-0		1103-		03	A (A) M6X12 W/LK&PL WASHER
	8-98018-439-0		1103-		01	A (C) M8X25 W/LK&PL WASHER
	0-72180-516-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (B) M5X16 TAPPING
336	--- COVER; INST PANEL SIDE					
	8-97407-420-1		1103-		01	A (A) GRAY
	8-97407-427-4		1103-		01	A (D) GRAY
	8-97409-491-0		1103-		01	A (C) GRAY
	8-97422-653-0		1103-		01	A (B) GRAY

https://truckmanualshub.com/

7-40 INSTRUMENT PANEL AND BOX

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
341	--- LID; FUSE BOX						
		8-97422-209-0		1103-		01	A GRAY
378	--- SEAL; INST PANEL						
		8-98176-199-0		1103-		01	A
485	--- NUT; SUPPORT CLIP, HARNESS						
		0-91180-106-0		1103-		04	A M6 FLANGE
544	--- SCREW; TRAY						
		0-72180-516-0		1103-		03	A M5X16 TAPPING
564	--- COVER; SW						
		8-97043-732-1		1103-		06	A
568	--- BOLT; COVER						
		0-72180-516-0		1103-		01	A M5X16 TAPPING
569	--- HOLDER; CARD						
		8-97410-276-0		1103-		01	A
580	--- BRACKET; COVER						
		8-98091-546-0		1103-		01	A
603	--- CLIP; COVER						
		8-98004-025-0		1103-		01	A (A)
		8-98021-271-0		1103-		04	A (B)
		8-98021-271-0		1103-		05	A (B)
626	--- RETAINER						
		8-94279-804-0		1103-		02	A OD=15 BLACK
646	--- BRACKET; GARNISH PANEL						
		8-98051-490-2		1103-		01	A (A)
		8-98051-492-2		1103-		01	A (B)

https://truckmanualshub.com/

INSTRUMENT PANEL AND BOX

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
662	--- COVER; LWR, INST PANEL						
		8-97407-428-2		1103-		01	A GRAY
696	--- BRACKET; KNEE						
		8-98066-085-0		1103-		01	A
697	--- PANEL; INST CENTER						
		8-97422-207-0		1103-		01	A GRAY
699	--- HOOK; INST PANEL						
		8-97408-927-0		1103-		01	A GRAY
700	--- BOLT; HOOK						
		0-72180-516-0		1103-		01	A M5X16 TAPPING
701	--- TRAY; INST						
		8-97421-976-1		1103-		01	A
702	--- NUT; TRAY						
		0-91180-106-0		1103-		02	A (B) M6 FLANGE
		8-98037-629-0		1103-		01	A (A)
703	--- SCREW; CENTER POCKET						
		8-98058-632-0		1103-		04	A M5X10 TAPPING W/TORQUES
704	--- BRACKET; CENTER POCKET						
		8-97585-616-2		1103-		02	A (B)
		8-97585-618-2		1103-		02	A (A)
705	--- SCREW; BRACKET CENTER POCKET						
		0-72180-520-0		1103-		08	A M5X20 TAPPING
718	--- SEAL; COVER						
		8-98061-777-0		1103-		01	A

https://truckmanualshub.com/

7-40 INSTRUMENT PANEL AND BOX


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
721	--- FINISHER; BRKT, KNEE						
	8-97892-742-0		1103-		01	A	L=140 IDN

https://truckmanualshub.com/

7-42 ASH TRAY

FIG-NO.

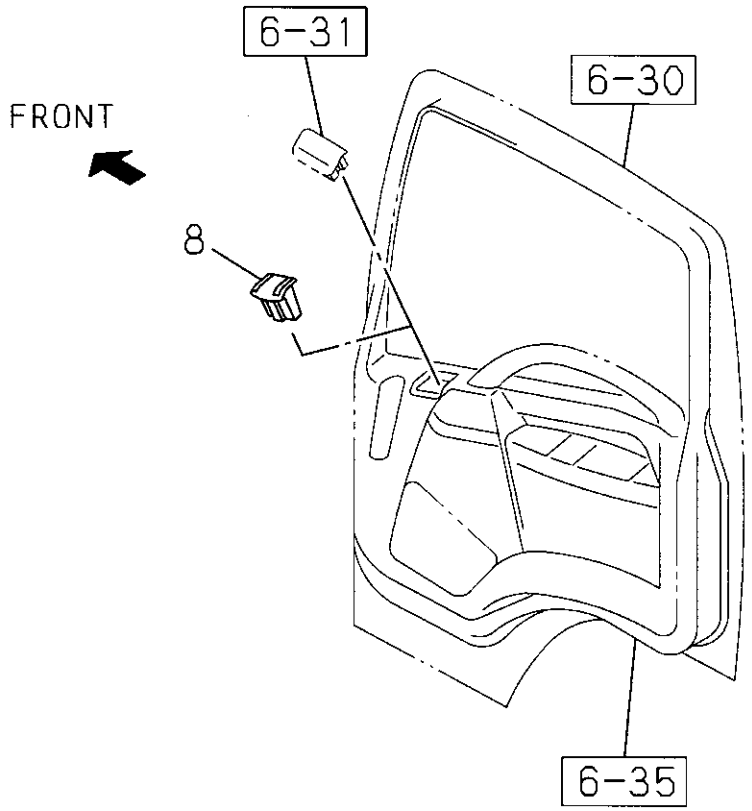

https://truckmanualshub.com/

ASH TRAY

7-42


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
8	--- TRAY ASM; ASH					
	8-97405-320-1		1103-	R	01	A GRAY

https://truckmanualshub.com/

7-43 SUN VISOR AND ASSIST GRIP

FIG-NO. TRAY ; HEADER ROOF

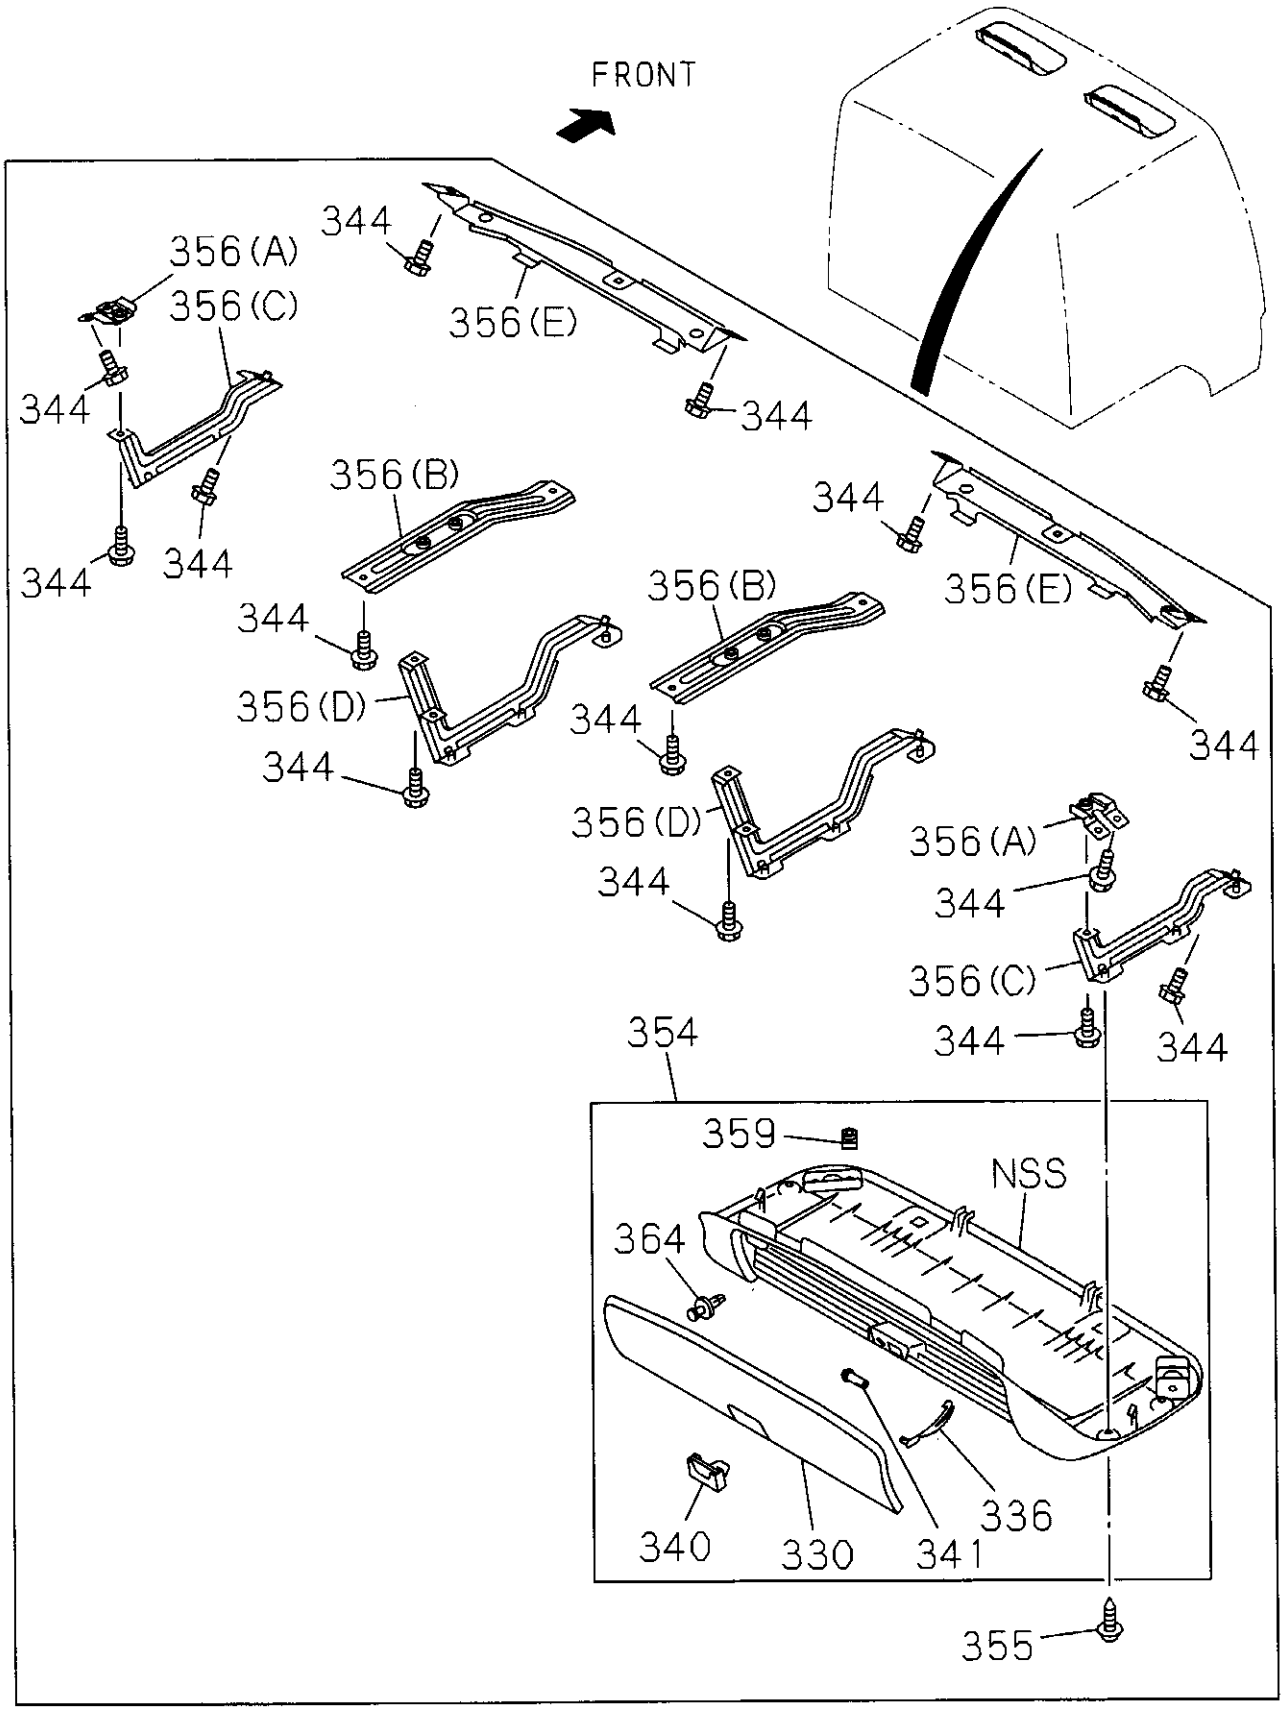



https://truckmanualshub.com/

SUN VISOR AND ASSIST GRIP


SUN VISOR AND OTHER PARTS

FIG-NO.

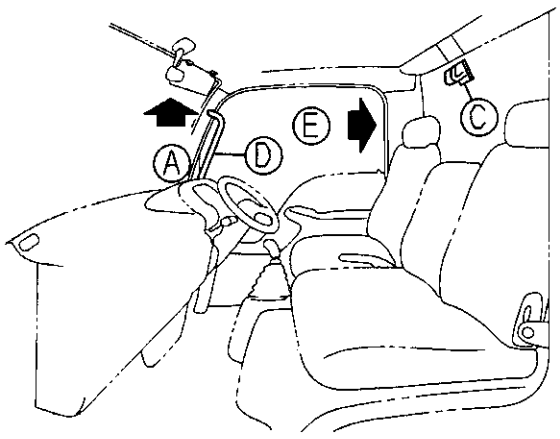


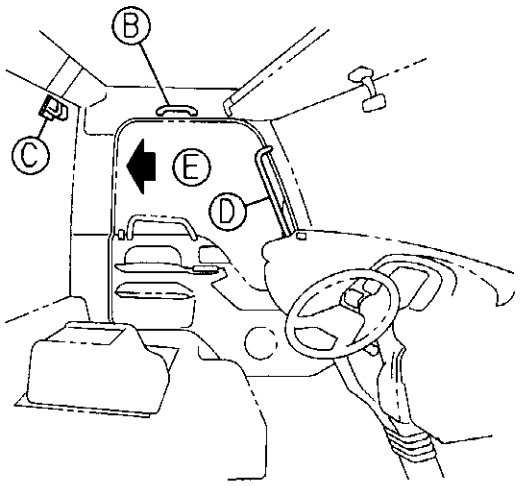


VIEW Ⓐ

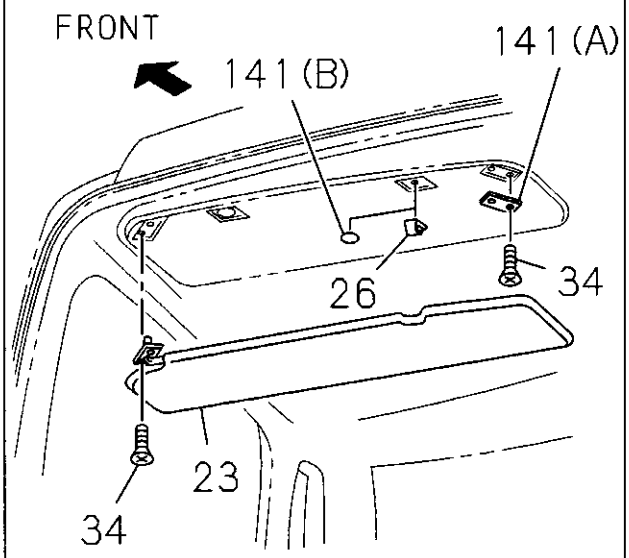

Ⓑ

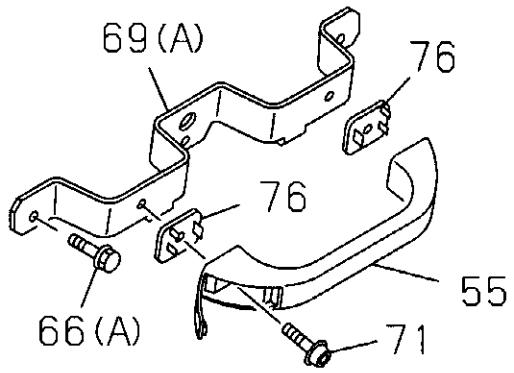


Ⓒ

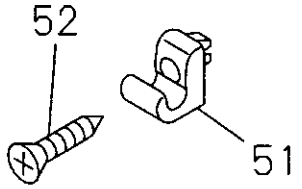

https://truckmanualshub.com/

7-43 SUN VISOR AND ASSIST GRIP

FIG-NO. ASSIST GRIP NO. 1

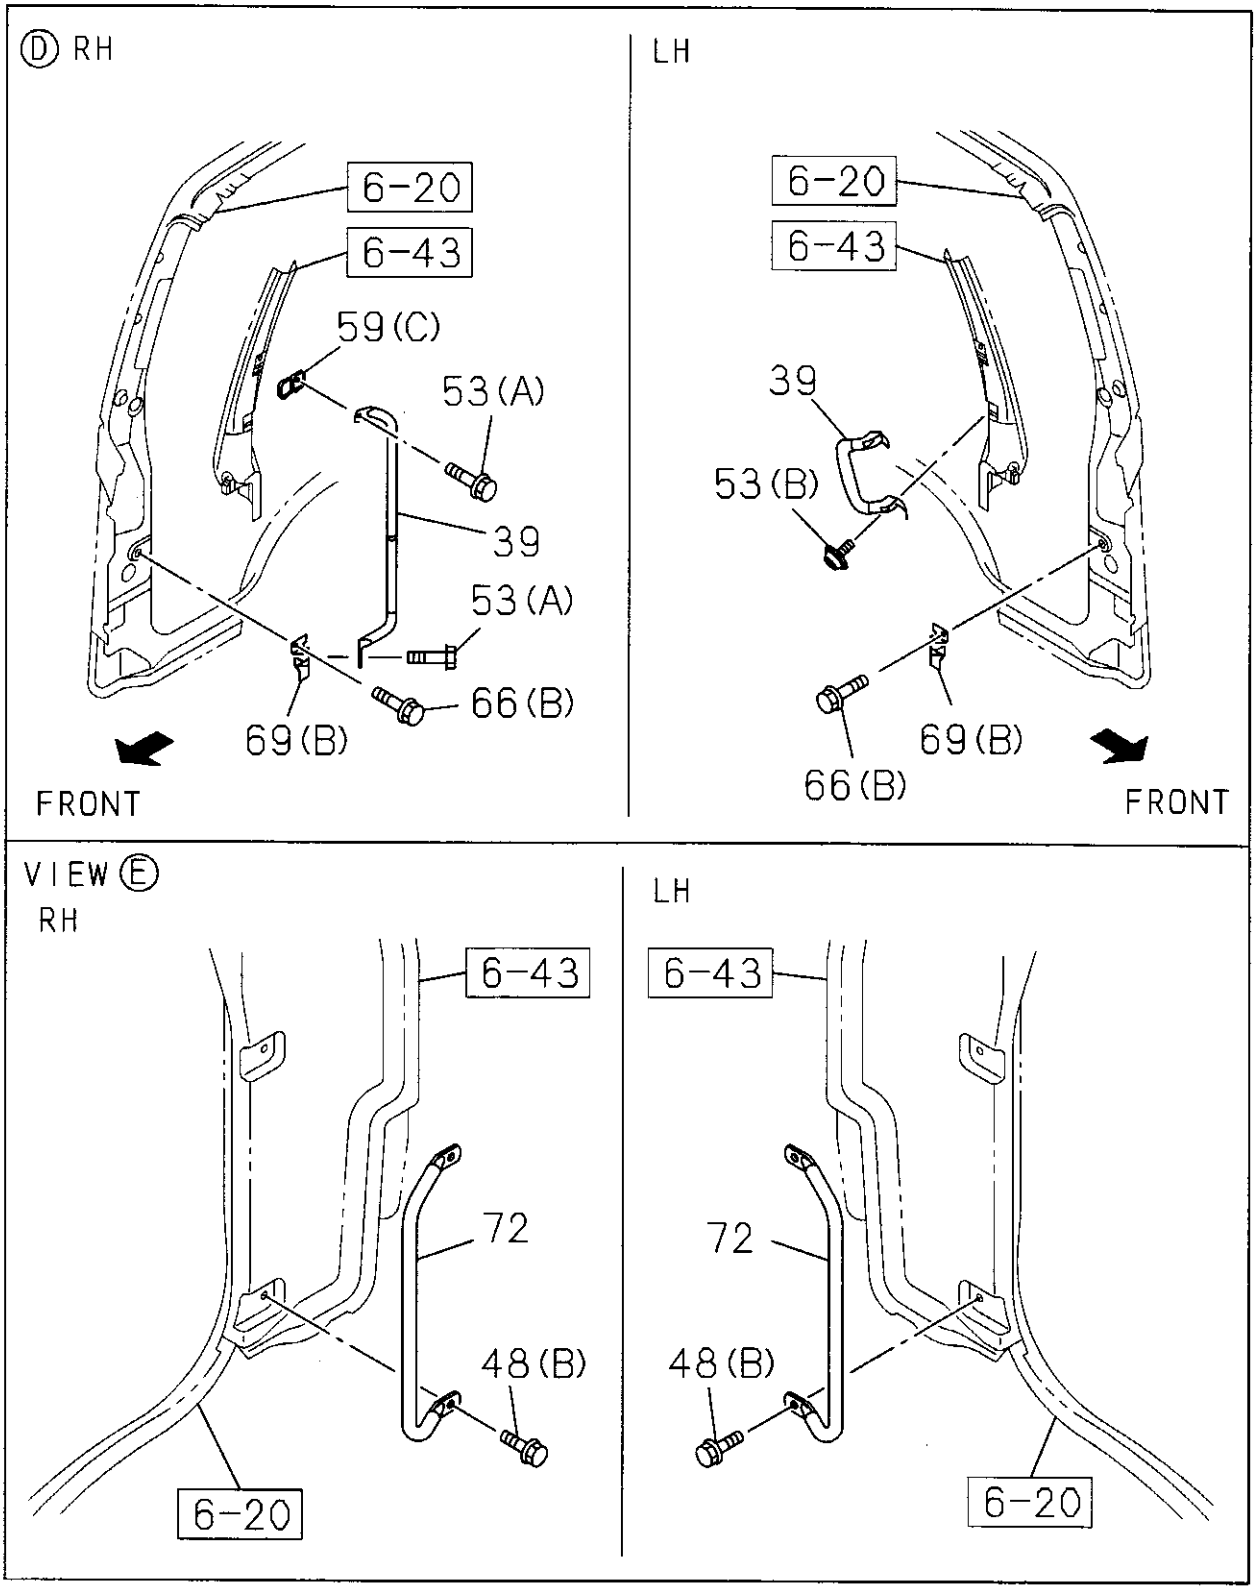


https://truckmanualshub.com/

SUN VISOR AND ASSIST GRIP

ASSIST GRIP NO. 2

FIG-NO.

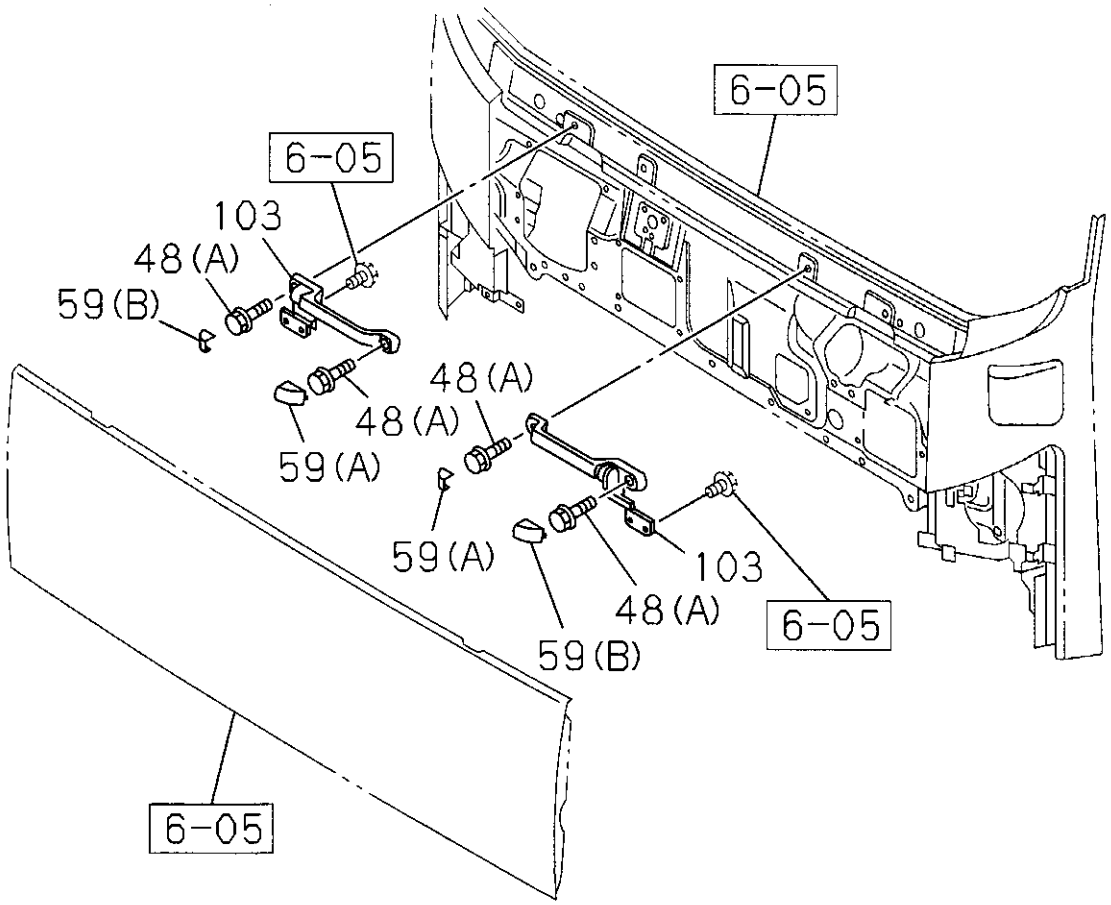

https://truckmanualshub.com/

7-43 SUN VISOR AND ASSIST GRIP

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
23	--- SUN VISOR						
	8-97407-373-2		1103-	R	01	A	DARK GRAY
26	--- HOLDER; SUN VISOR						
	8-97405-171-0		1103-		01	A	DARK GRAY
34	--- SCREW; SUN VISOR						
	8-98033-674-0		1103-		04	A	M6X26
39	--- HANDLE; ASSIST, A-POST						
	8-97405-249-2		1103-	L	01	A	DARK GRAY
	8-97407-942-2		1103-	R	01	A	DARK GRAY
48	--- BOLT; ASSIST GRIP						
	0-28060-816-0		1103-		04	A	(B) M8X16 FLANGE
	0-28660-830-0		1103-		04	A	(A) M8X30 FLANGE
51	--- HOOK; COAT HANGER						
	8-97409-845-0		1103-		02	A	DARK GRAY
52	--- SCREW; HOOK						
	0-70540-420-0		1103-		02	A	M4X20 TAPPING OVAL-HEAD
53	--- SCREW; ASSIST HANDLE						
	8-98004-344-0		1103-	L	02	A	(B) M6X28
	0-28650-820-0		1103-	R	02	A	(A) M8X20 FLANGE IDN
55	--- GRIP; ASSIST, CAB SIDE UPR						
	8-97405-285-2		1103-		01	A	DARK GRAY

https://truckmanualshub.com/

SUN VISOR AND ASSIST GRIP

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
59	--- COVER; ASSIST GRIP						
	1-71998-789-2		1103-		02	A	(B)
	1-71998-790-2		1103-		02	A	(A)
	8-97407-417-1		1103-	R	01	A	(C) DARK GRAY
66	--- BOLT; ASSIST GRIP BRKT						
	0-28650-820-0		1103-		04	A	(B) M8X20 FLANGE IDN
	8-97108-669-0		1103-		06	A	(A) M6X12 FLANGE
69	--- BRACKET; ASSIST GRIP						
	8-98014-094-0		1103-		02	A	(A)
	8-98057-972-2		1103-	L	01	A	(B)
	8-98057-971-2		1103-	R	01	A	(B)
71	--- SCREW						
	8-98004-344-0		1103-		02	A	M6X28
72	--- GRIP; ASSIST, CAB ENTRY, BACK						
	8-97386-939-0		1103-		02	A	
76	--- SPACER; ASSIST GRIP						
	8-97405-286-0		1103-		02	A	DARK GRAY
103	--- GRIP; ASSIST, FRT PNL						
	8-98036-565-1		1103-	L	01	A	
	8-98036-566-1		1103-	R	01	A	
141	--- COVER; SUN VISOR						
	8-97408-029-0		1103-		01	A	(A) L=66 B=30 DARK GRAY
	8-97408-030-0		1103-		01	A	(B)
	(CONTINUE)						

https://truckmanualshub.com/

7-43 SUN VISOR AND ASSIST GRIP

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
	(CONTINUED)					
141	--- COVER; SUN VISOR					
	8-97408-030-0					OD=30 T=0.05 DARK GRAY
330	--- LID; HEADER SHELF					
	8-97407-834-1		1103-	R	02	A DARK GRAY
336	--- STAY; LID					
	1-72448-379-3		1103-	R	02	A
340	--- LOCK; HEADER SHELF					
	1-72448-376-0		1103-	R	01	A
341	--- HINGE; LID, HEADER SHELF					
	8-98025-428-2		1103-	R	02	A
344	--- BOLT; BRKT, FRT					
	8-97108-669-0		1103-		12	A M6X12 FLANGE
354	--- TRAY; HEADER ROOF					
	8-97407-386-5		1103-	R	01	A DARK GRAY
355	--- SCREW; TRAY					
	0-72380-516-0		1103-	R	04	A M5X16 HEX SOCKET IDN
356	--- BRACKET; ROOF OUTER					
	8-98042-016-3		1103-	L	01	A (E)
	8-97386-874-1		1103-	R	01	A (A)
	8-98010-059-0		1103-	R	01	A (B)
	8-98014-088-3		1103-	R	01	A (C)
	8-98023-257-2		1103-	R	01	A (D)
	8-98042-015-3		1103-	R	01	A (E)

https://truckmanualshub.com/


SUN VISOR AND ASSIST GRIP

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
359	--- HOLDER; HEADER TRAY					
	8-98041-754-0		1103-	R	04	A
364	--- STOPPER; LID					
	8-98010-867-1		1103-	R	03	A

https://truckmanualshub.com/

7-45 CONSOLE BOX

FIG-NO.

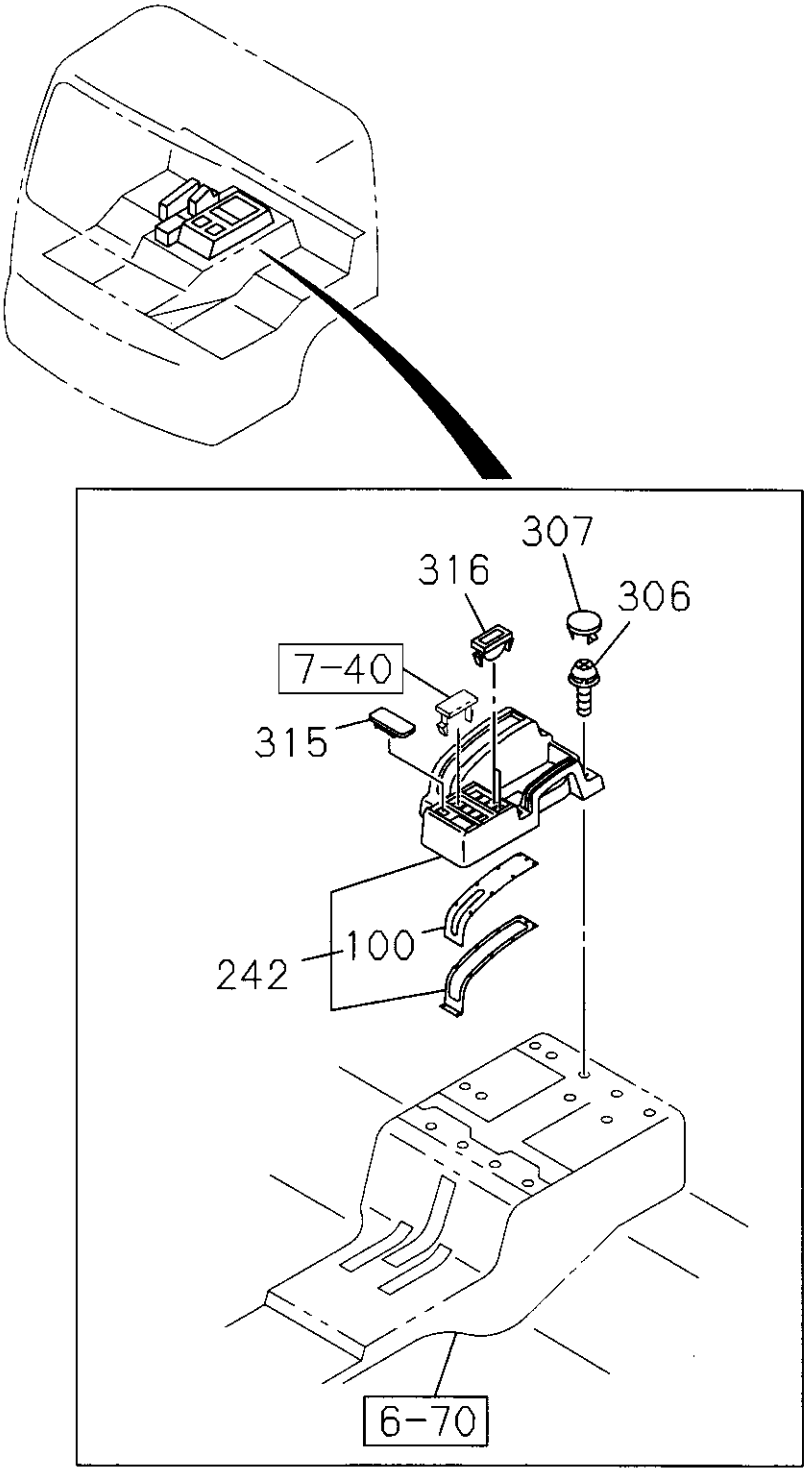

https://truckmanualshub.com/


CONSOLE BOX

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
100	--- RUBBER; CONSOLE, FRT					
	1-72538-161-3		1103-		01	A
242	--- TRAY ASM; CTR CONSOLE					
	8-97407-950-1		1103-		01	A GRAY
306	--- SCREW; TRAY					
	0-38050-616-0		1103-		04	A M6X16 IDN
307	--- COVER; HOLE, CTR CONSOLE					
	8-97407-951-0		1103-		04	A GRAY
315	--- COVER; HOLE, SW					
	8-97409-339-0		1103-		01	A GRAY
316	--- BOX; COIN					
	8-94482-280-2		1103-		02	A


https://truckmanualshub.com/

7-50 FRONT SEAT

FIG-NO. DRIVER NO. 1

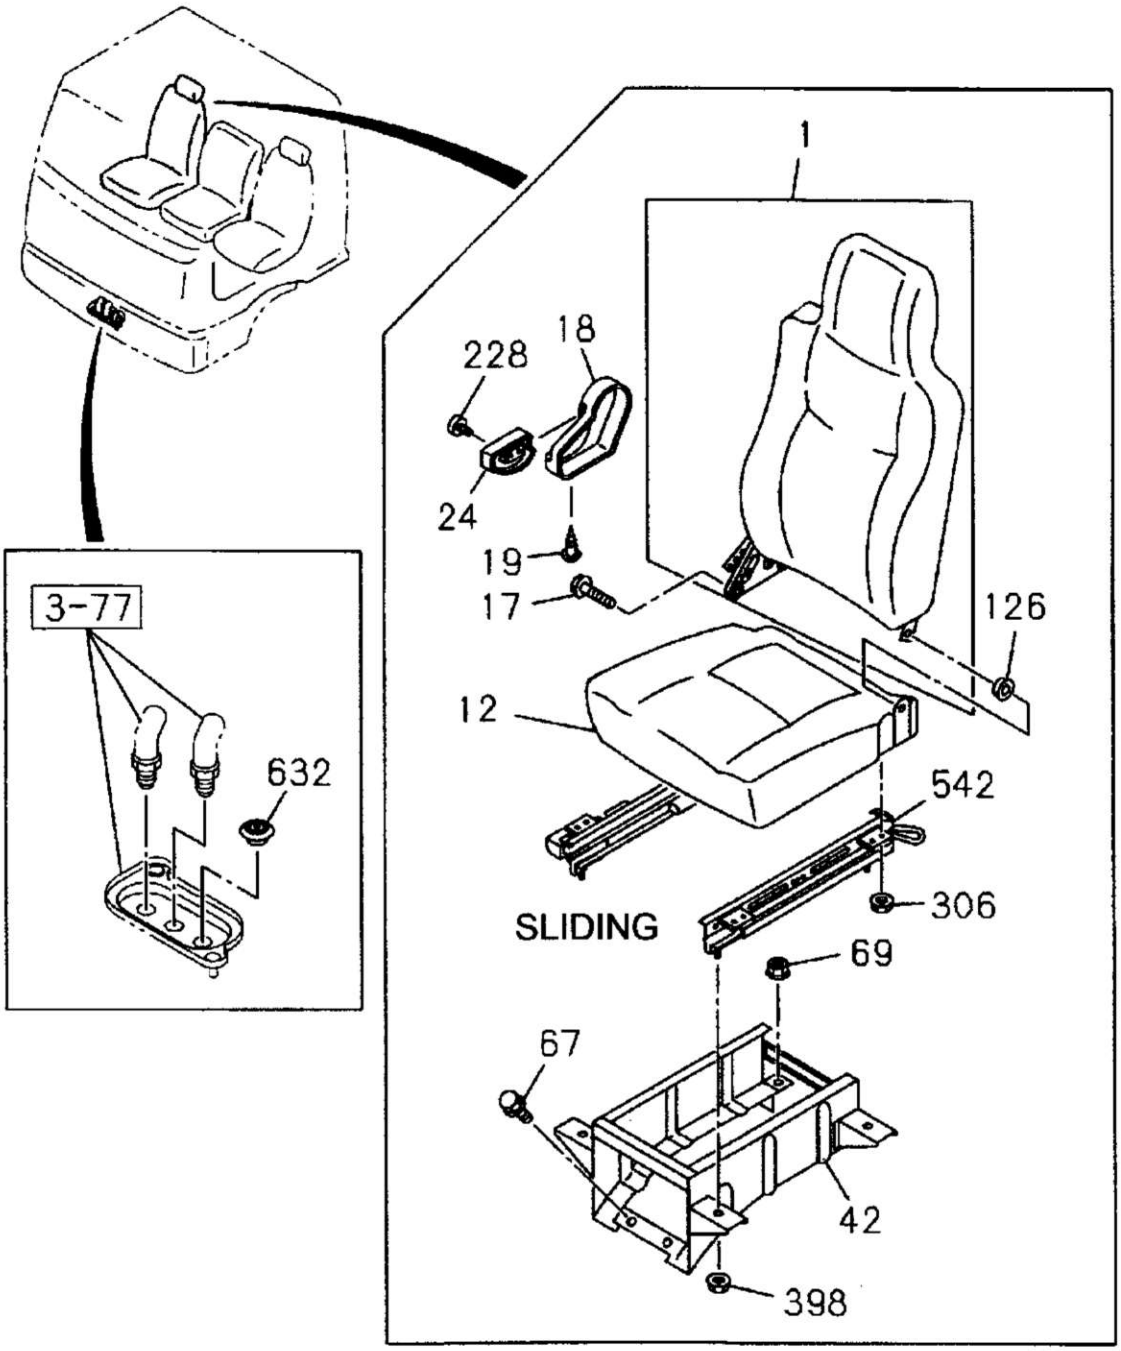


https://truckmanualshub.com/

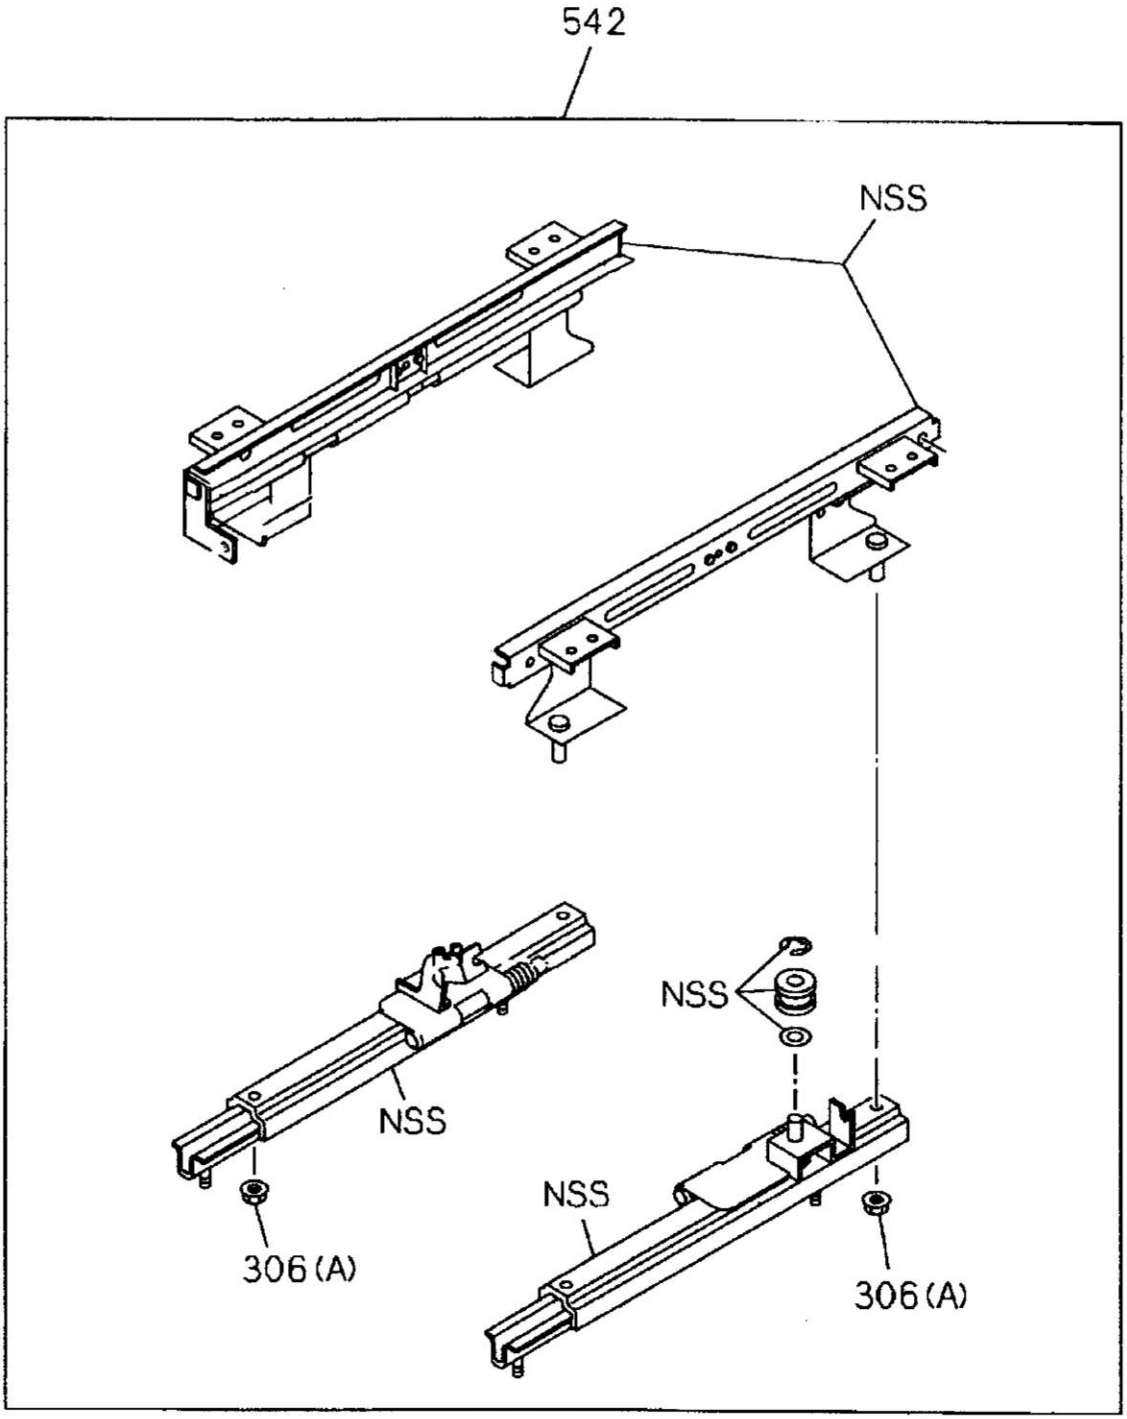


https://truckmanualshub.com/

7-50 FRONT SEAT


FIG-NO. PASSENGER

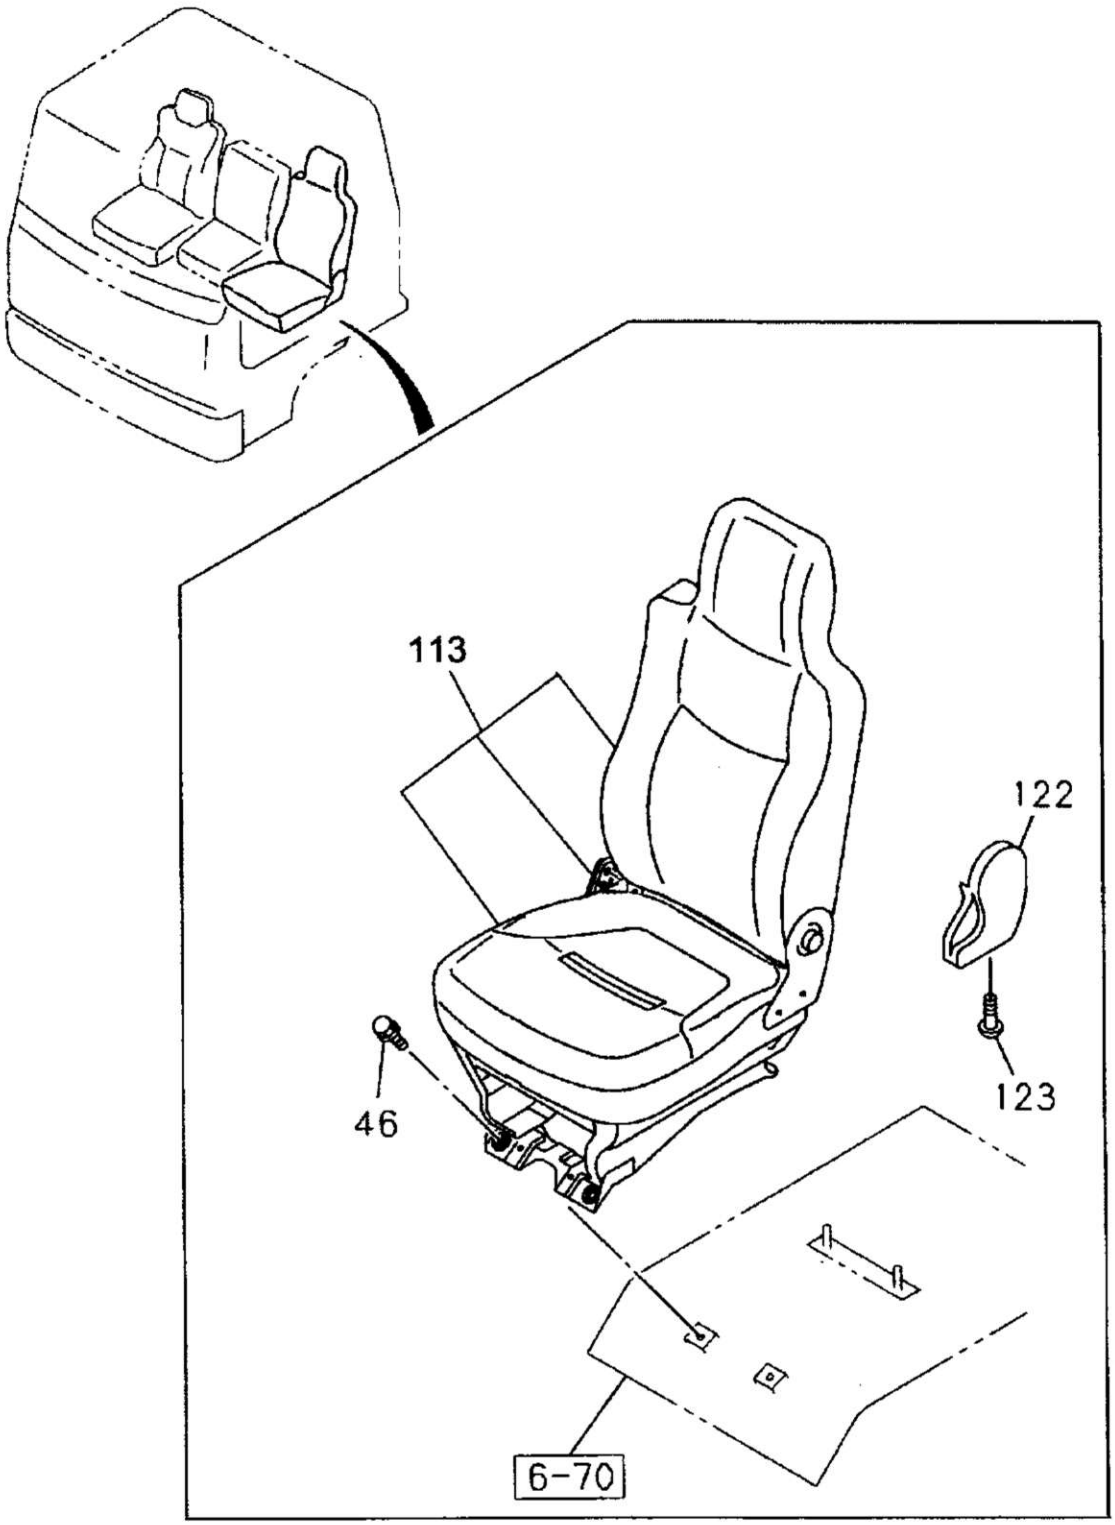

https://truckmanualshub.com/

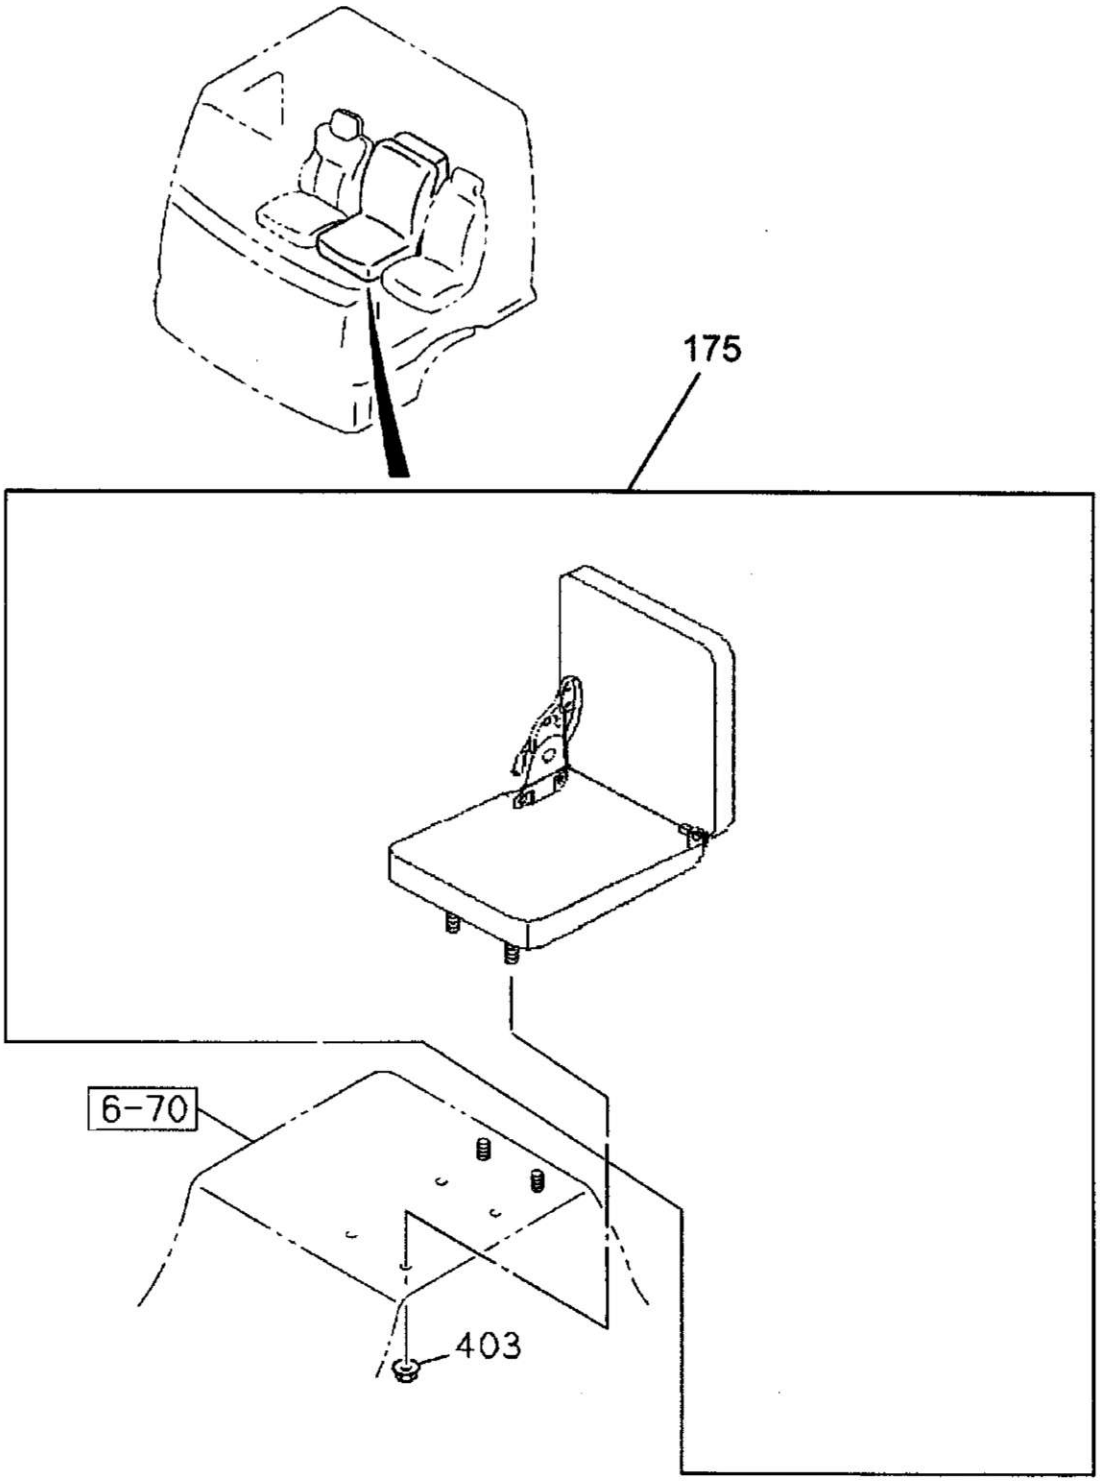

https://truckmanualshub.com/

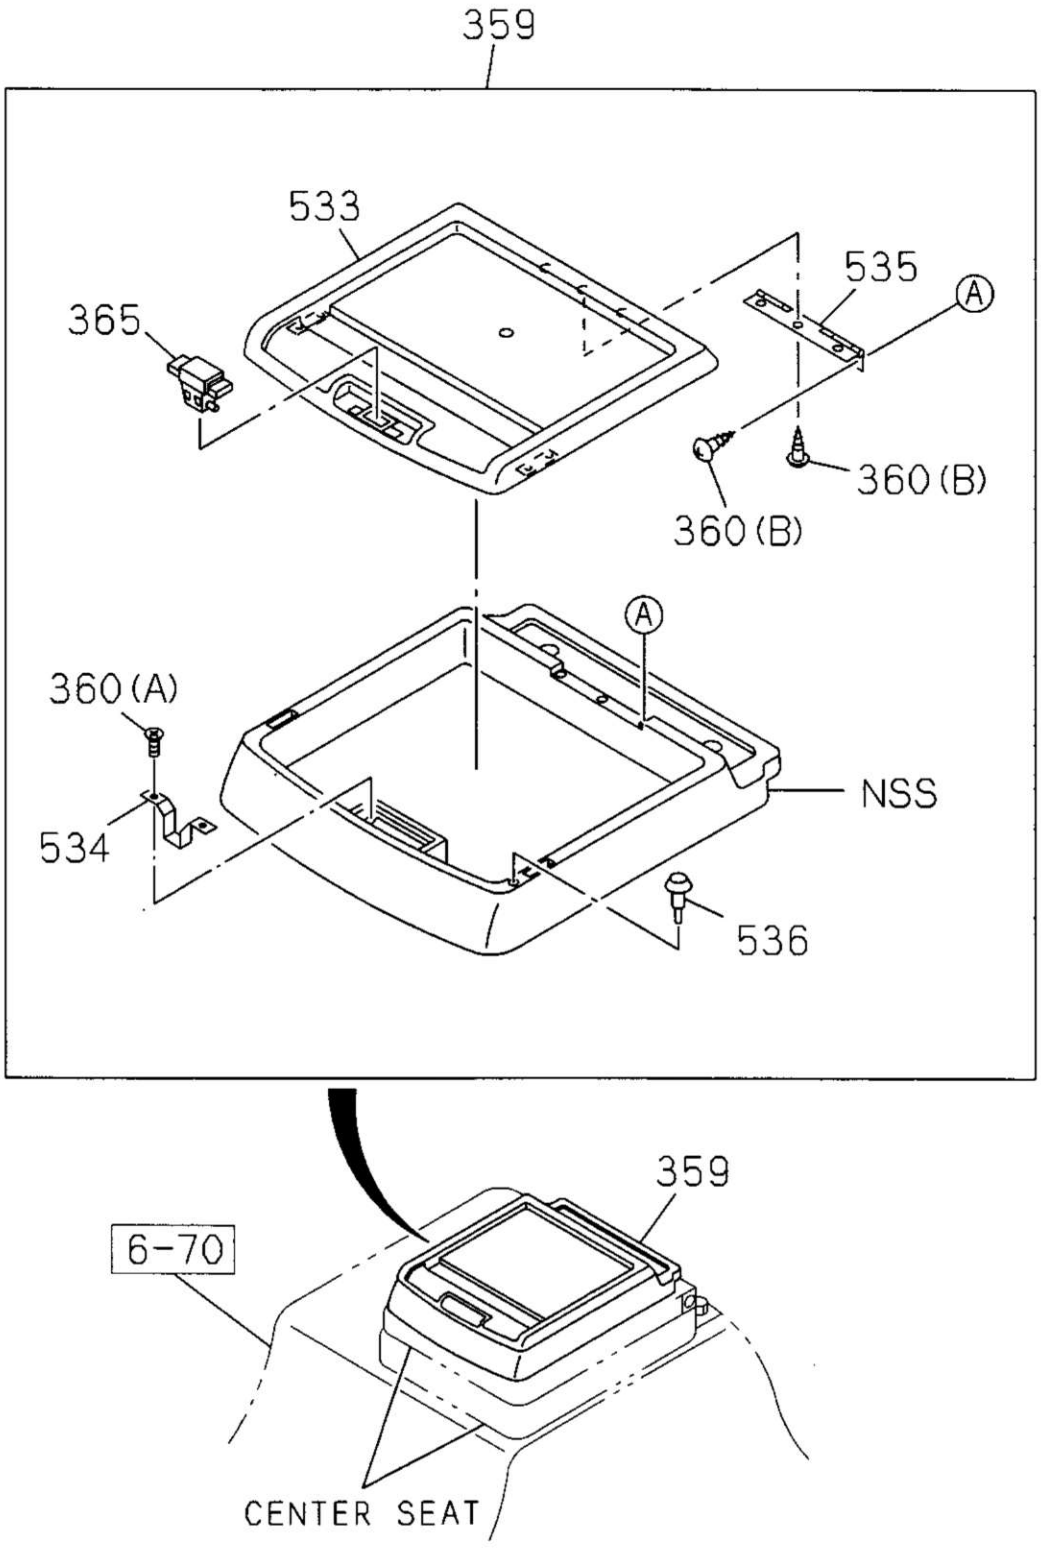

https://truckmanualshub.com/

FRONT SEAT

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	--- BACK ASM; SEAT						
		7-31611 311-A		1103-		01	A DARK GRAY
2	--- COVER; TRIM, FRT SEAT, BACK						
		8-97411-910-2		1103-		01	A DARK GRAY
12	--- CUSHION; SEAT, FRT						
		7-31511 311-A		1103-		01	A DARK GRAY
	--- COVER; TRIM, FRT SEAT, CUSHION						
		8-97411-909-0		1103-		01	A DARK GRAY
	--- ADJUSTER ASM; RECLINING						
		1-75418-062-1		1103-		01	A
17	--- BOLT; RECLINING						
		8-98062-661-0		1103-		04	A
18	--- COVER; RECLINING						
		7-32211 311-A		1103-		01	A GRAY
19	--- SCREW; COVER						
		8-98062-663-0		1103-		01	A M5
24	--- KNOB; RECLINING, FRT, SEAT						
		7-32212 311-A		1103-		01	A GRAY
42	--- STAND; SEAT						
		7-31330 310-A		1103-		01	A DRIVER
		7-31331 310-A		1103-		01	A PASSENGER

https://truckmanualshub.com/

7-50 FRONT SEAT

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
67	--- BOLT; FRT SEAT TO BODY					
	0-28451-020-0		1103-		02	A M10X20 FLANGE
69	--- NUT; FRT SEAT					
	0-91180-110-0		1103-		02	A M10 FLANGE
	--- BUSHING; SEAT BACK					
	8-98112-751-0		1103-		01	A
113	--- BACK ASM; SEAT					
	7-31031 311-A		1103-		01	A DARK GRAY
	--- COVER; TRIM, PASSENGER SEAT, BACK					
	8-97411-916-0		1103-		01	A DARK GRAY
115	--- CUSHION ASM; PASSENGER SEAT					
	8-97409-965-0		1103-		01	A DARK GRAY
	--- COVER; TRIM, PASSENGER SEAT, CUSHION					
	8-97411-915-0		1103-		01	A DARK GRAY
122	--- COVER; ADJ, RECLINING					
	8-97409-967-0		1103-		01	A GRAY
123	--- SCREW; COVER, RECLINING					
	8-98070-026-0		1103-		01	A
126	--- BUSHING; HINGE, RECLINING					
	8-98063-218-0		1103-		01	A (A)
	--- BUSHING; LINK ARM					
	1-75518-209-0		1103-		02	A
175	--- BACK ASM; PASSENGER CENTER SEAT					
	7-31021 311-A		1103-		01	A DARK GRAY

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
	--- COVER; TRIM, PASSENGER SEAT CENTER, BACK						
		8-97409-976-0		1103-		01	A DARK GRAY
	--- COVER; TRIM, PASSENGER SEAT CENTER, CUSH						
		8-97409-974-0		1103-		01	A DARK GRAY
	--- CUSHION ASM; CENTER SEAT						
		8-97409-973-0		1103-		01	A DARK GRAY
	--- BOLT; BACK TO CUSHION						
		1-75198-053-0		1103-		04	A M10X16 FLANGE
	--- CABLE; ADJ						
		1-75518-288-0		1103-		01	A (A) L=667
		1-75518-289-1		1103-		01	A (B) L=605
228	--- SCREW; KNOB						
		8-98062-662-0		1103-		01	A M4
306	--- NUT; SEAT ADJ						
		1-75538-207-0		1103-		08	A M8 FLANGE
	--- BOX; PARCEL						
		8-97417-261-0		1103-		01	A GRAY
360	--- SCREW; PARCEL						
		0-70040-416-0		1103-		06	A (B) M4X16
		0-70040-514-0		1103-		02	A (A) M5X14 TAPPING CK-HEAD
	(CONTINUE)			1103-		04	A (C)

https://truckmanualshub.com/

7-50 FRONT SEAT

FIG-NO.


KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
	(CONTINUED)						
	--- SCREW; PARCEL						
		0-74360-516-0					M5X16 TAPPING W/PL WASHER
365	--- LOCK ASM; SEAT						
		1-72538-312-0		1103-		01	A
398	--- NUT; STAND						
		1-75538-207-0		1103-		04	A M8 FLANGE
403	--- NUT; CENTER SEAT						
		0-91180-108-0		1103-		04	A M8 FLANGE
	--- LEVER; SEAT ADJ						
		8-98107-869-0		1103-		01	A
	--- CAP; PARCEL BOX						
		8-97409-980-1		1103-		02	A GRAY
	--- NUT; TILT ADJ						
		1-75518-263-0		1103-		01	A
	--- PIN; LINK						
		1-75518-262-0		1103-		01	A
533	--- LID; PARCEL BOX						
		8-97417-263-0		1103-		01	A GRAY
534	--- STRIKER; PARCEL BOX						
		1-72538-190-0		1103-		01	A
535	--- HINGE; PARCEL BOX						
		1-72447-391-1		1103-		01	A
536	--- RUBBER; CUSHION						
		1-72538-187-0		1103-		02	A
542	--- ADJUSTER ASM; SEAT SLIDE						
		8-98093-310-0		1103-		01	A

https://truckmanualshub.com/


KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
627	--- WASHER; FRT SEAT					
	8-98063-223-0		1103-		01	A (A)
	8-98063-224-0		1103-		01	A (B)
630	--- NUT; CAP					
	8-98063-225-0		1103-		01	A M8
632	--- GROMMET					
	8-94119-796-0		1103-		01	A OD=24

https://truckmanualshub.com/

DRIVER

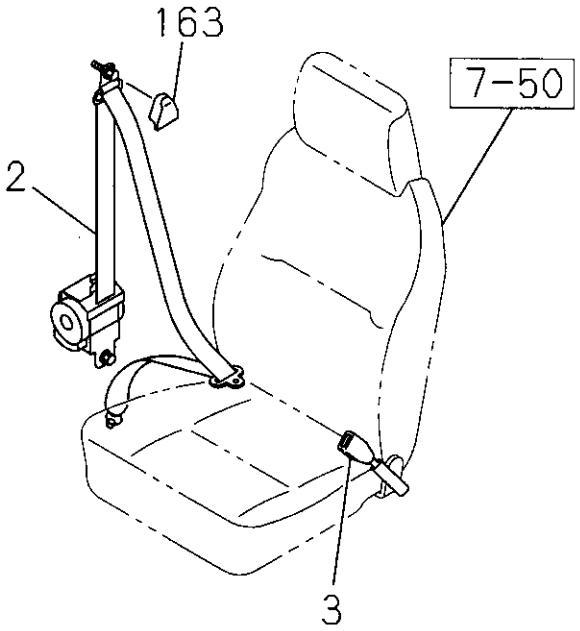

PASSENGER AND CENTER

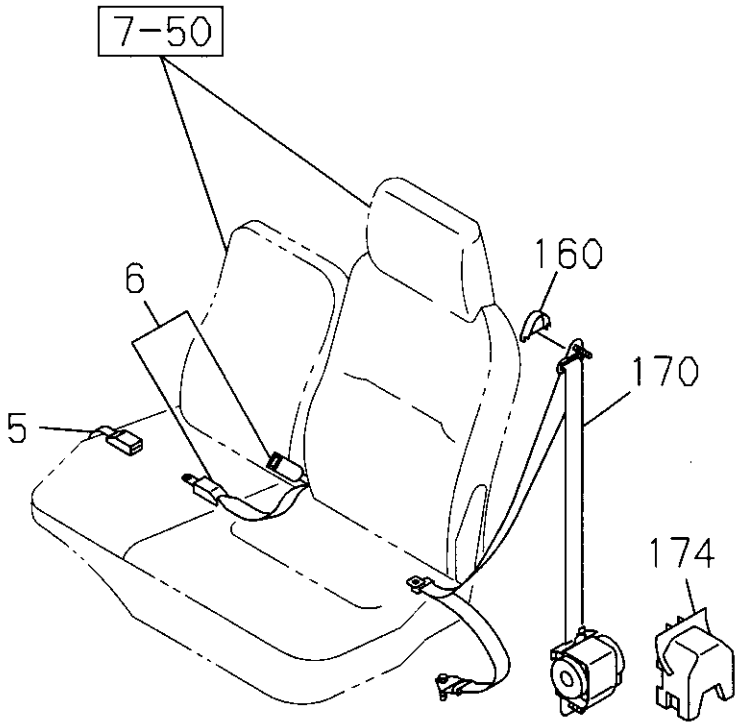

https://truckmanualshub.com/


SEAT BELT


KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
2	--- BELT; SEAT, TONGUE SIDE					
	7-31945 311-A		1103-		01	A GRAY
3	--- BELT; SEAT, BUCKLE SIDE					
	7-31950 311-A		1103-		01	A GRAY
5	--- BELT; CENTER SEAT, BUCKLE SIDE					
	7-31952 312-A		1103-		01	A GRAY
6	--- BELT; CENTER SEAT, TONGUE SIDE					
	7-31945 312-A		1103-		01	A GRAY
160	--- COVER; THROUGH ANCHOR					
	8-97405-991-0		1103-		01	A GRAY
163	--- COVER; ADJUSTER					
	8-97405-991-0		1103-		01	A GRAY
170	--- BELT; PASSENGER SEAT, TONGUE SIDE					
	7-31945 311-A		1103-		01	A GRAY
174	--- COVER; RETRACTOR, SEAT BELT					
	8-98039-376-1		1103-		01	A

https://truckmanualshub.com/

7-70 SEPARATER AND BED

FIG-NO.

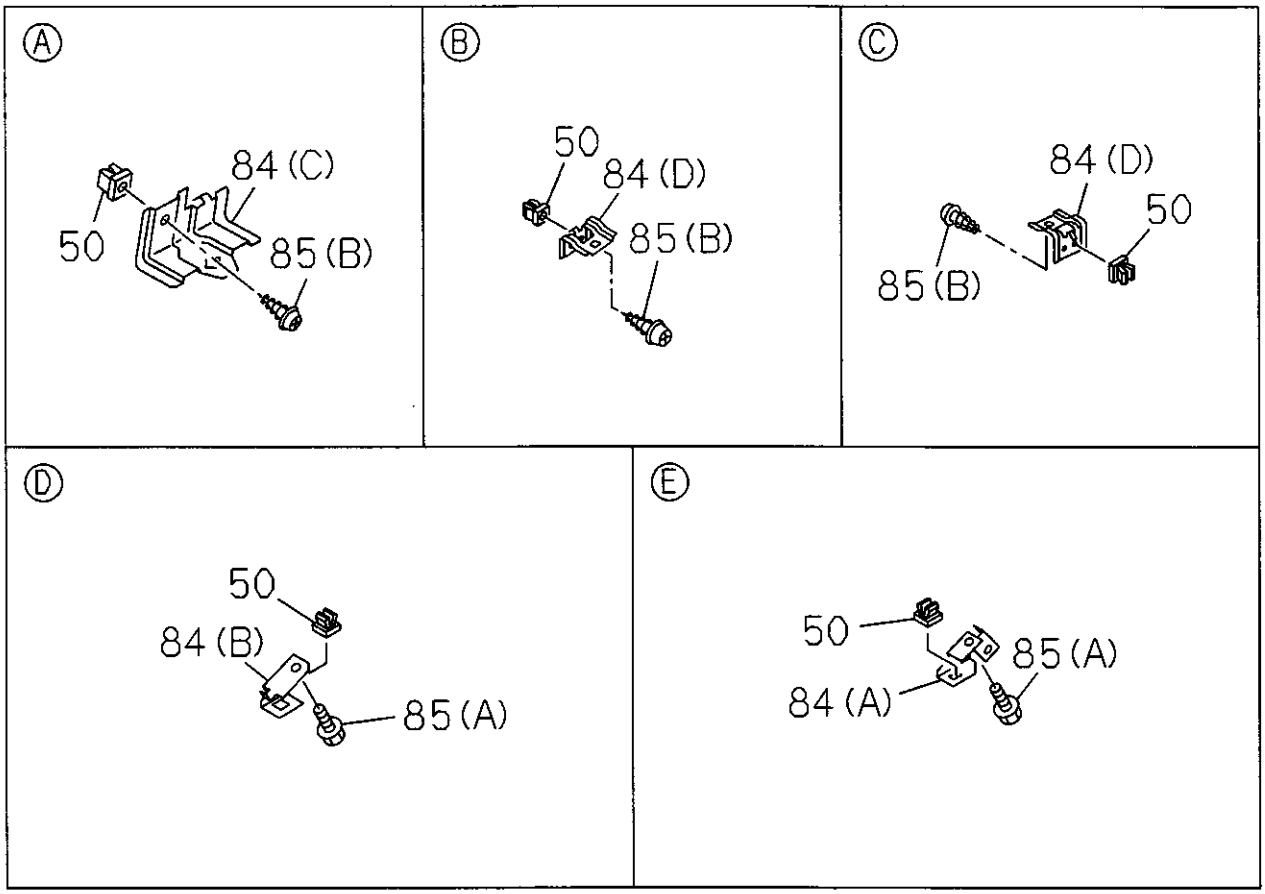

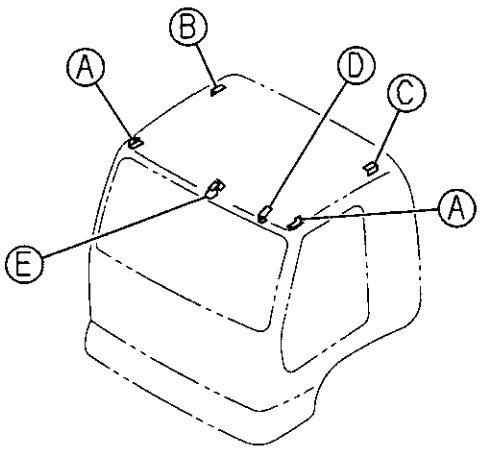

https://truckmanualshub.com/

SEPARATER AND BED

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
50	--- GROMMET; SCREW, CURTAIN RAIL					
	8-94279-078-0		1103-		04 A	D=8.5X8.5 L=7.5 IDN
84	--- BRACKET; CURTAIN RAIL					
	8-98028-326-1		1103-		02 A	(C)
	8-98042-152-0		1103-		02 A	(D)
	8-98049-290-1		1103-		01 A	(A)
	8-98074-740-0		1103-		01 A	(B)
85	--- SCREW; BRKT					
	5-09981-059-0		1103-		04 A	(B) M5X20
	8-97108-669-0		1103-		02 A	(A) M6X12 FLANGE


https://truckmanualshub.com/

8

https://truckmanualshub.com/

8-01 LAMP; FRONT AND FRONT SIDE

FIG-NO. FIXING;FRONT LAMP

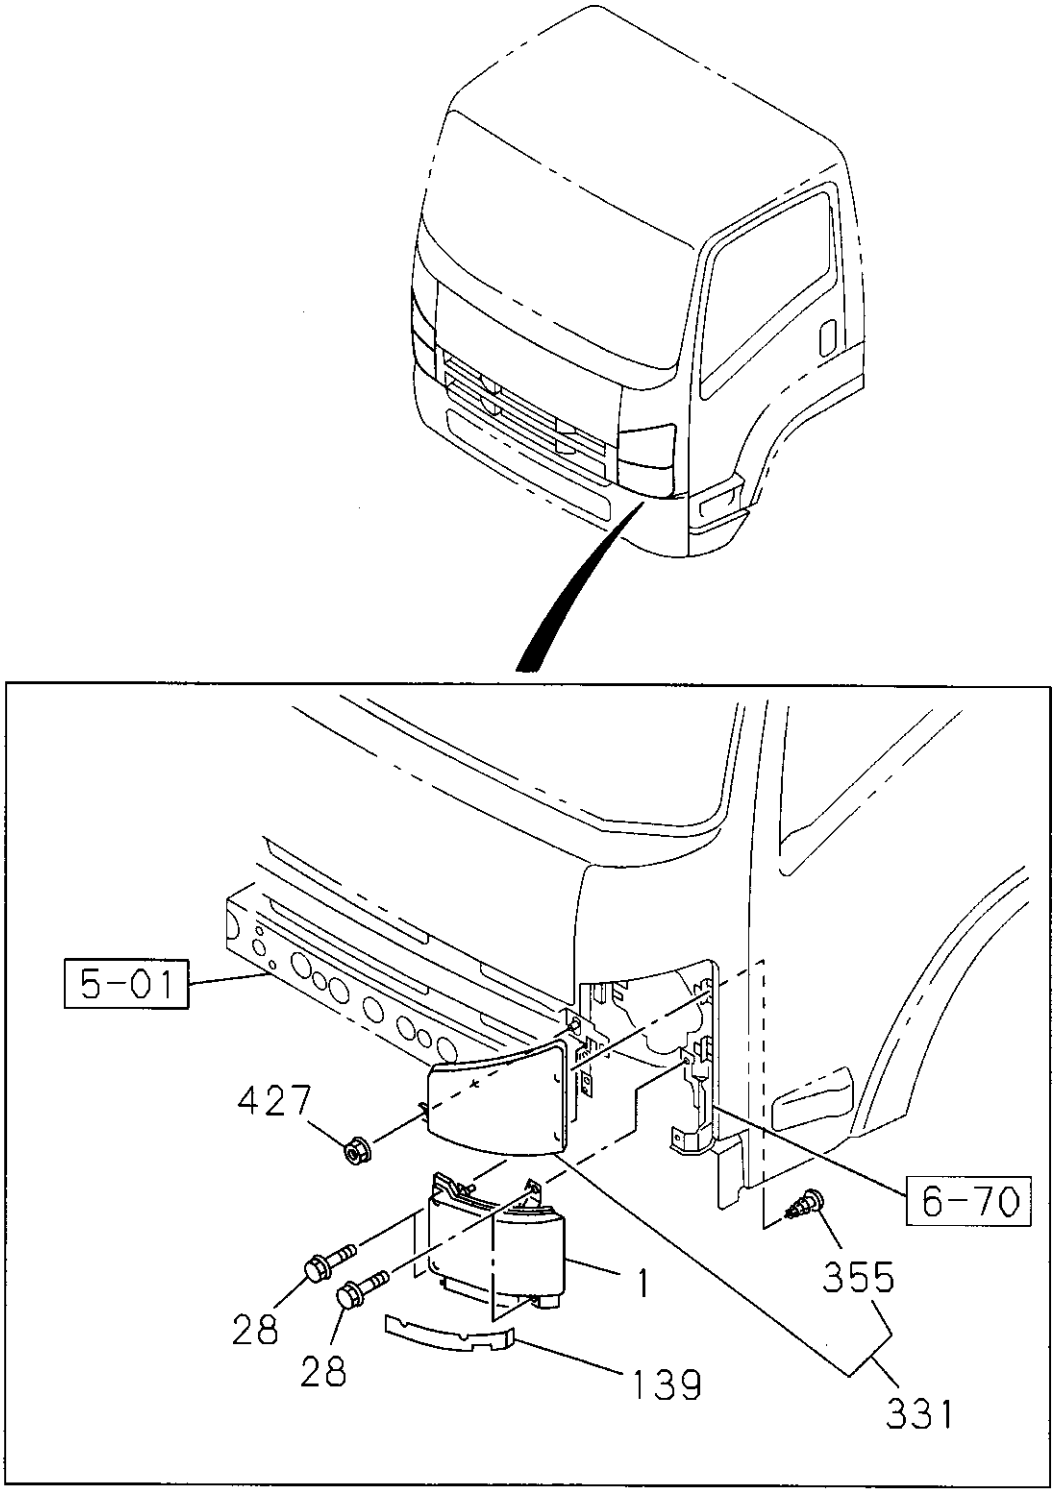


https://truckmanualshub.com/

LAMP; FRONT AND FRONT SIDE


COMPONENT ; HEADLAMP, TURN SIGNAL LAMP

FIG-NO.

HEADLAMPS

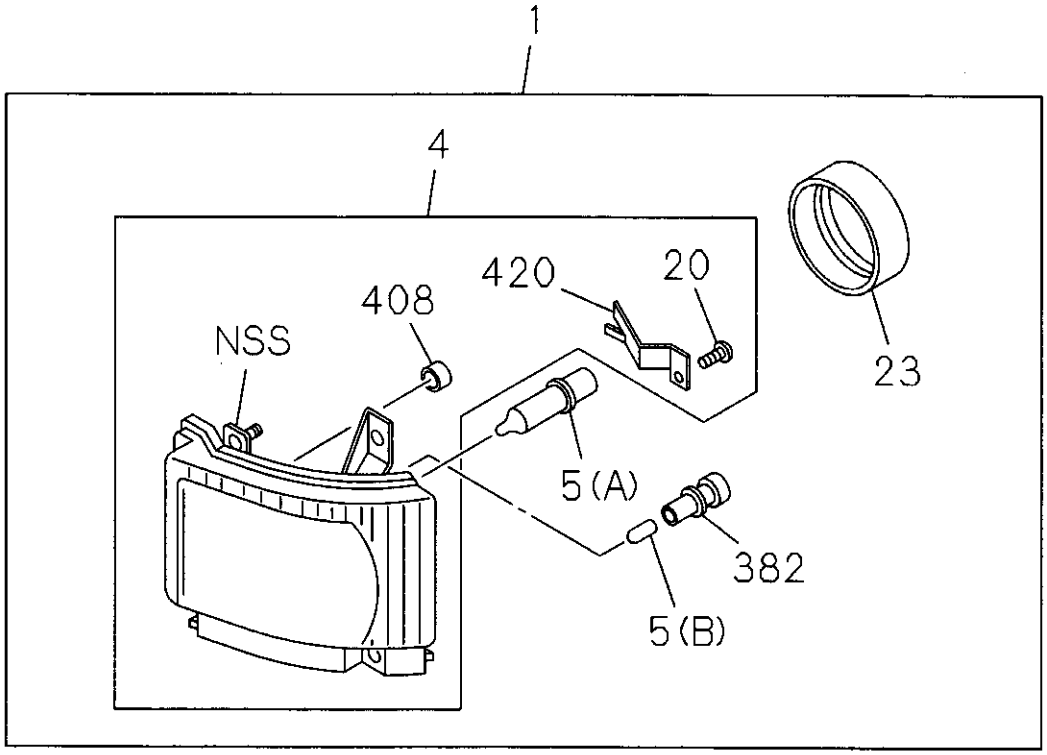


TURN SIGNAL LAMP

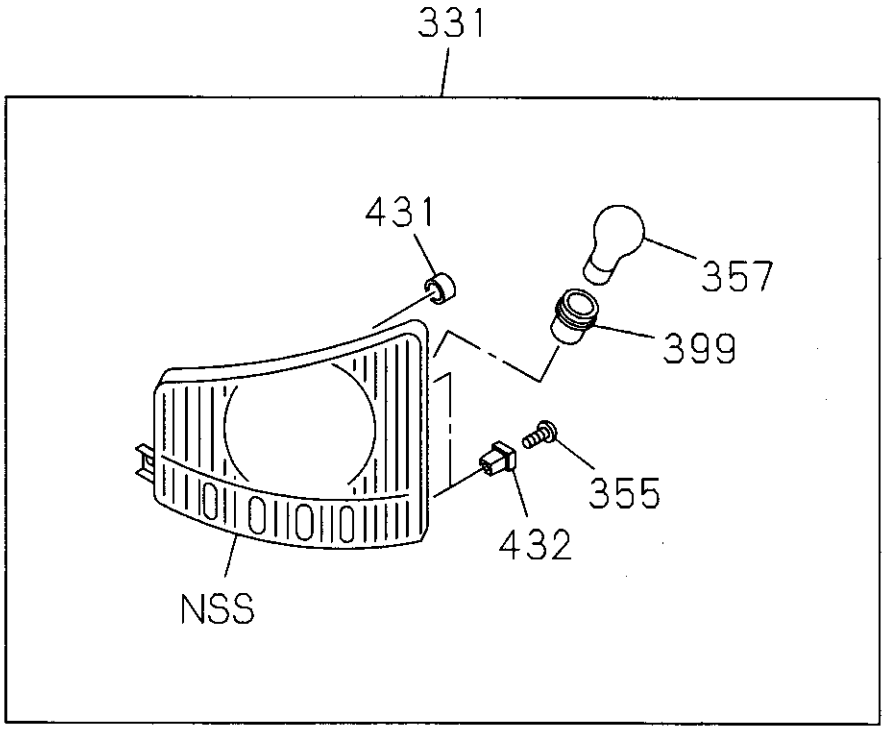

https://truckmanualshub.com/

8-01 LAMP; FRONT AND FRONT SIDE

FIG-NO. MARKER LAMP, SIDE LAMP

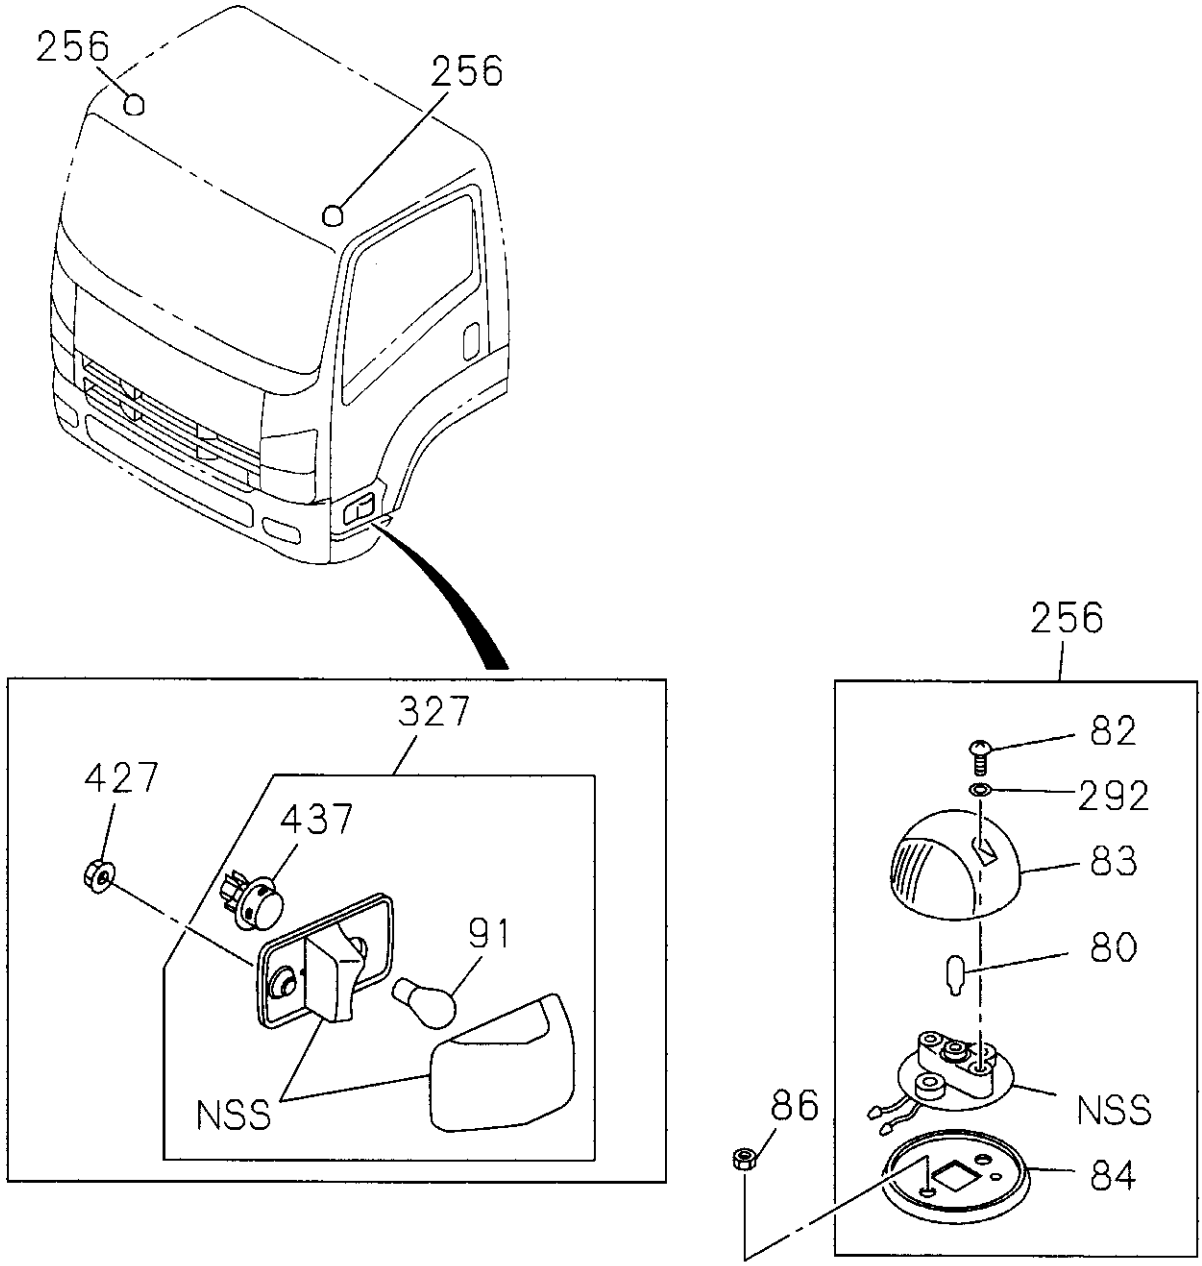

https://truckmanualshub.com/

LAMP; FRONT AND FRONT SIDE

8-01

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	-B- LAMP ASM; HEAD					
	8-98098-480-1		1103-	L	01	A
	8-98098-479-1		1103-	R	01	A
4	--- HEADLAMP UNIT					
	8-98051-401-0		1103-	L	01	A
	8-98051-400-0		1103-	R	01	A
5	-A- BULB; HEADLAMP					
	1-82194-042-0		1103-		02	A (B) 24V 5W
	1-82194-063-0		1103-		02	A (A) 24V 75/70W
20	--- SCREW; HEADLAMP					
	8-97378-871-0		1103-		06	A
23	--- COVER; BULB, HEADLAMP					
	8-97232-491-0		1103-		02	A
28	--- BOLT; HEADLAMP					
	8-98164-723-0		1103-		08	A M6X23.5 W/LK&PL WASHER
80	--- BULB; MARKER LAMP					
	8-94135-397-0		1103-		02	A LAMPS TWO ROOF MARKER<TEC> 24V 5W
82	--- SCREW; MARKER LAMP					
	1-82219-011-0		1103-		04	A LAMPS TWO ROOF MARKER<TEC>
83	--- LENS; MARKER LAMP					
	8-98057-958-0		1103-		02	A LAMPS TWO ROOF MARKER<TEC>
84	--- GASKET; MARKER LAMP					
	1-82216-021-0		1103-		02	A LAMPS TWO ROOF MARKER<TEC>
86	--- NUT; MARKER LAMP					
	0-91180-106-0		1103-		04	A LAMPS TWO ROOF MARKER<TEC> M6 FLANGE

https://truckmanualshub.com/

8-01 LAMP; FRONT AND FRONT SIDE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
91	--- BULB; SIDE TURN SIGNAL					
	8-98051-495-0		1103-		02	A 24V 21W
139	--- COVER; HEADLAMP					
	8-98054-342-0		1103-		02	A
256	--- LAMP; MARKER					
	8-98097-467-2		1103-	L	01	A LAMPS TWO ROOF MARKER<TEC>
	8-98097-466-2		1103-	R	01	A LAMPS TWO ROOF MARKER<TEC>
292	--- WASHER; MARKER LAMP					
	1-82219-012-0		1103-		04	A LAMPS TWO ROOF MARKER<TEC>
327	-B- LAMP ASM; SIDE TURN SIGNAL					
	8-97410-181-3		1103-	L	01	A
	8-97410-180-4		1103-	R	01	A
331	--- LAMP; TURN SIGNAL					
	8-98155-459-0		1103-	L	01	A
	8-98155-458-0		1103-	R	01	A
355	--- SCREW; TURN SIGNAL					
	8-98051-428-0		1103-		04	A
357	--- BULB; TURN SIGNAL					
	8-97323-806-0		1103-		02	A 24V 21W AMBER
382	--- PLUG; SOCKET, HEADLAMP					
	8-98069-364-0		1103-		02	A
399	--- SOCKET; TURN SIGNAL					
	8-98051-387-0		1103-		02	A
408	--- CAP; BREATHER, HEADLAMP					
	8-97378-874-0		1103-		02	A
420	--- SPRING; BULB, HEADLAMP					
	8-97378-875-0		1103-		02	A
427	--- NUT; TURN SIGNAL LAMP					
	0-91180-106-0		1103-		04	A M6 FLANGE

https://truckmanualshub.com/

LAMP; FRONT AND FRONT SIDE

8-01


FIG-NO.

KEY NO.	RECOMMEND CLASS／PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
431	--- CAP; TURN SIGNAL, LAMP					
	8-97378-874-0		1103-		02	A
432	--- FASTENER; TURN SIGNAL, LAMP					
	8-98051-431-0		1103-		04	A
437	--- SOCKET; SIDE, TURN					
	8-98051-390-0		1103-		02	A

https://truckmanualshub.com/

8-03 LAMP; REAR AND REAR SIDE

FIG-NO.

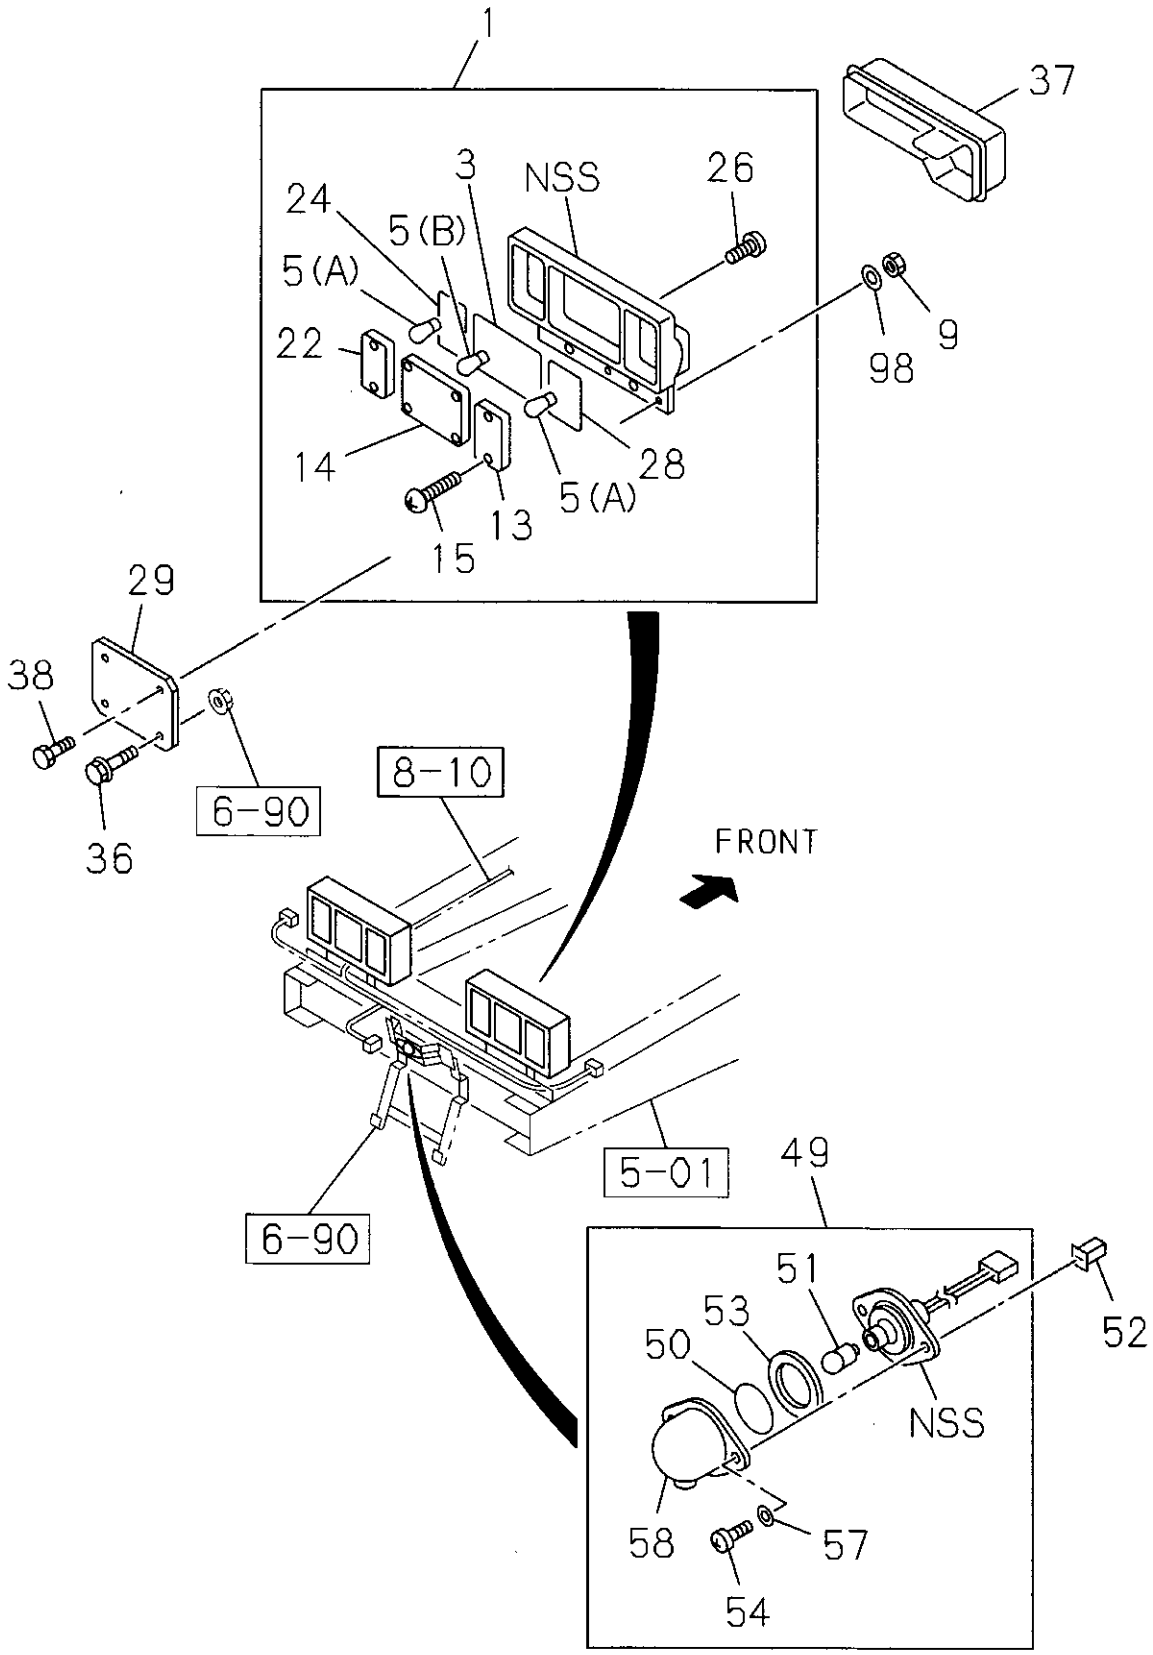

https://truckmanualshub.com/

LAMP; REAR AND REAR SIDE

8-03

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	-B- LAMP ASM; RR COMB						
		7-41210 323-A		1103-	L	01 A	IDN
		7-41210 322-A		1103-	R	01 A	
3	--- GASKET; RR COMB LAMP						
		8-94257 505-A		1103-		02 A	
5	--- BULB; RR COMB LAMP						
		1-82194 108-A		1103-		04 A	(A) 24V 21W
		1-82194 109-A		1103-		02 A	(B) 24V 21/5W
9	--- NUT; LAMP, RR COMB						
		0-91110-506-0		1103-		04 A	M6
13	-B- LENS; TURN SIGNAL						
		8-94174 639-A		1103-	L	01 A	
		8-94174 638-A		1103-	R	01 A	
14	-B- LENS; TAIL & STOP, RR COMB LAMP						
		8-94178 625-A		1103-	L	01 A	
		8-94178 624-A		1103-	R	01 A	
15	--- SCREW; RR COMB LAMP						
		0-71190 420-A		1103-		16 A	M4X20 TAPPING STAINLESS
22	-B- LENS; BACKUP, RR COMB LAMP						
		8-94257 512-A		1103-		02 A	
24	--- GASKET; BACK, LAMP						
		8-94257 506-A		1103-		02 A	
26	--- SCREW; BACK HORN						
		9-07076 414-A		1103-	L	01 A	M4X14 TAPPING
		9-07076 412-A		1103-	R	01 A	M4X12 TAPPING

https://truckmanualshub.com/

8-03 LAMP; REAR AND REAR SIDE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
28	--- GASKET; TURN, LAMP					
	8-94257-507-0		1103-		02	A
29	--- BRACKET; LAMP, RR COMB					
	1-82237-050-1		1103-		02	A
36	--- BOLT; BRKT, RR COMB					
	0-28650-825-0		1103-		02	A M8X25 FLANGE IDN
37	--- COVER; RR COMB LAMP					
	8-97520 138-A		1103-	L	01	A IDN
	8-97520 137-A		1103-	R	01	A IDN
38	--- BOLT; LAMP, RR COMB					
	0-50640-630-0		1103-		04	A M6X30 W/LK&PL WASHER
49	--- LAMP; LICENSE PLATE					
	1-82120-024-1		1103-		01	A 24V 10W
50	--- LENS; LICENSE PLATE LAMP					
	1-82235-006-0		1103-		01	A
51	--- BULB; LICENSE PLATE LAMP					
	1-82194-037-0		1103-		01	A 24V 10W
52	--- GROMMET; SCREW, LICENSE PLATE LAMP					
	8-94275-946-0		1103-		02	A D=7.8X7.8 L=18 M5 BLACK
53	--- GASKET; LICENSE LAMP					
	1-82126-005-0		1103-		01	A
54	--- SCREW; LICENSE PLATE LAMP					
	1-82129-007-0		1103-		02	A M5X20
57	--- WASHER; PL, LICENSE PLATE LAMP					
	1-82129-008-0		1103-		02	A

https://truckmanualshub.com/

LAMP; REAR AND REAR SIDE

8-03


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	
						A LEAF SUS(FCR5CS)	
58	--- COVER; LICENSE PLATE LAMP						
	1-82129-005-0		1103-		01	A	
98	--- WASHER						
	0-91610-706-0		1103-		04	A	ID=6.4 OD=18

https://truckmanualshub.com/

8-05 INTERIOR LAMP

FIG-NO.

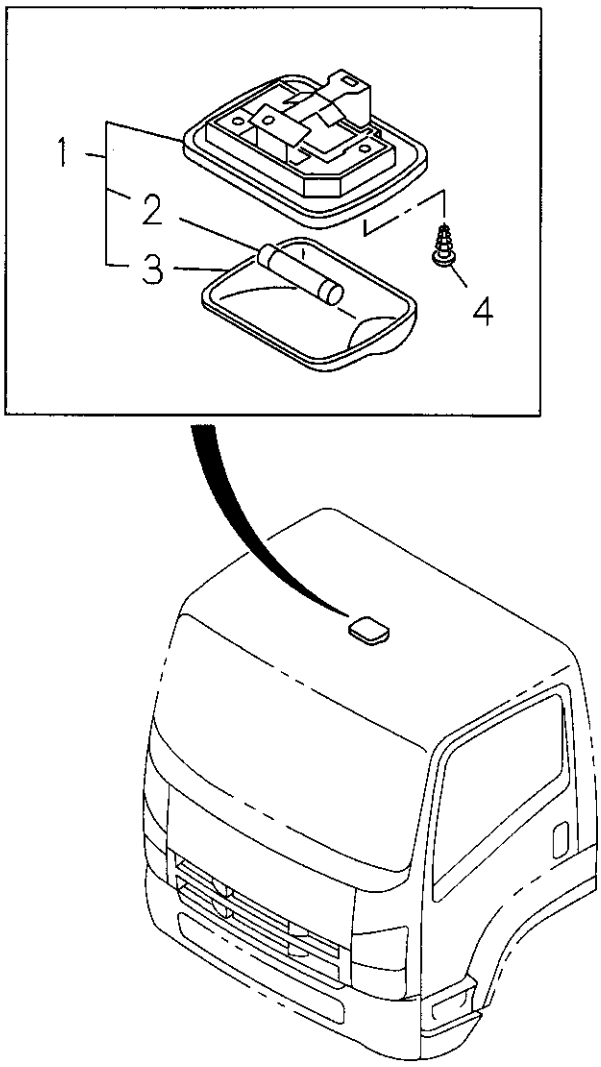

https://truckmanualshub.com/

INTERIOR LAMP

8-05


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- LAMP ASM; ROOM					
	8-98013-421-3		1103-		01	A
2	--- BULB; ROOM LAMP					
	5-82194-030-0		1103-		01	A 24V 10W
3	--- LENS; ROOM LAMP					
	8-98047-272-0		1103-		01	A
4	--- SCREW; ROOM LAMP					
	8-98075-766-0		1103-		02	A M5X14 W/WASHER

https://truckmanualshub.com/

8-10 WIRING HARNESS AND FUSE

FIG-NO. CAB HARNESS

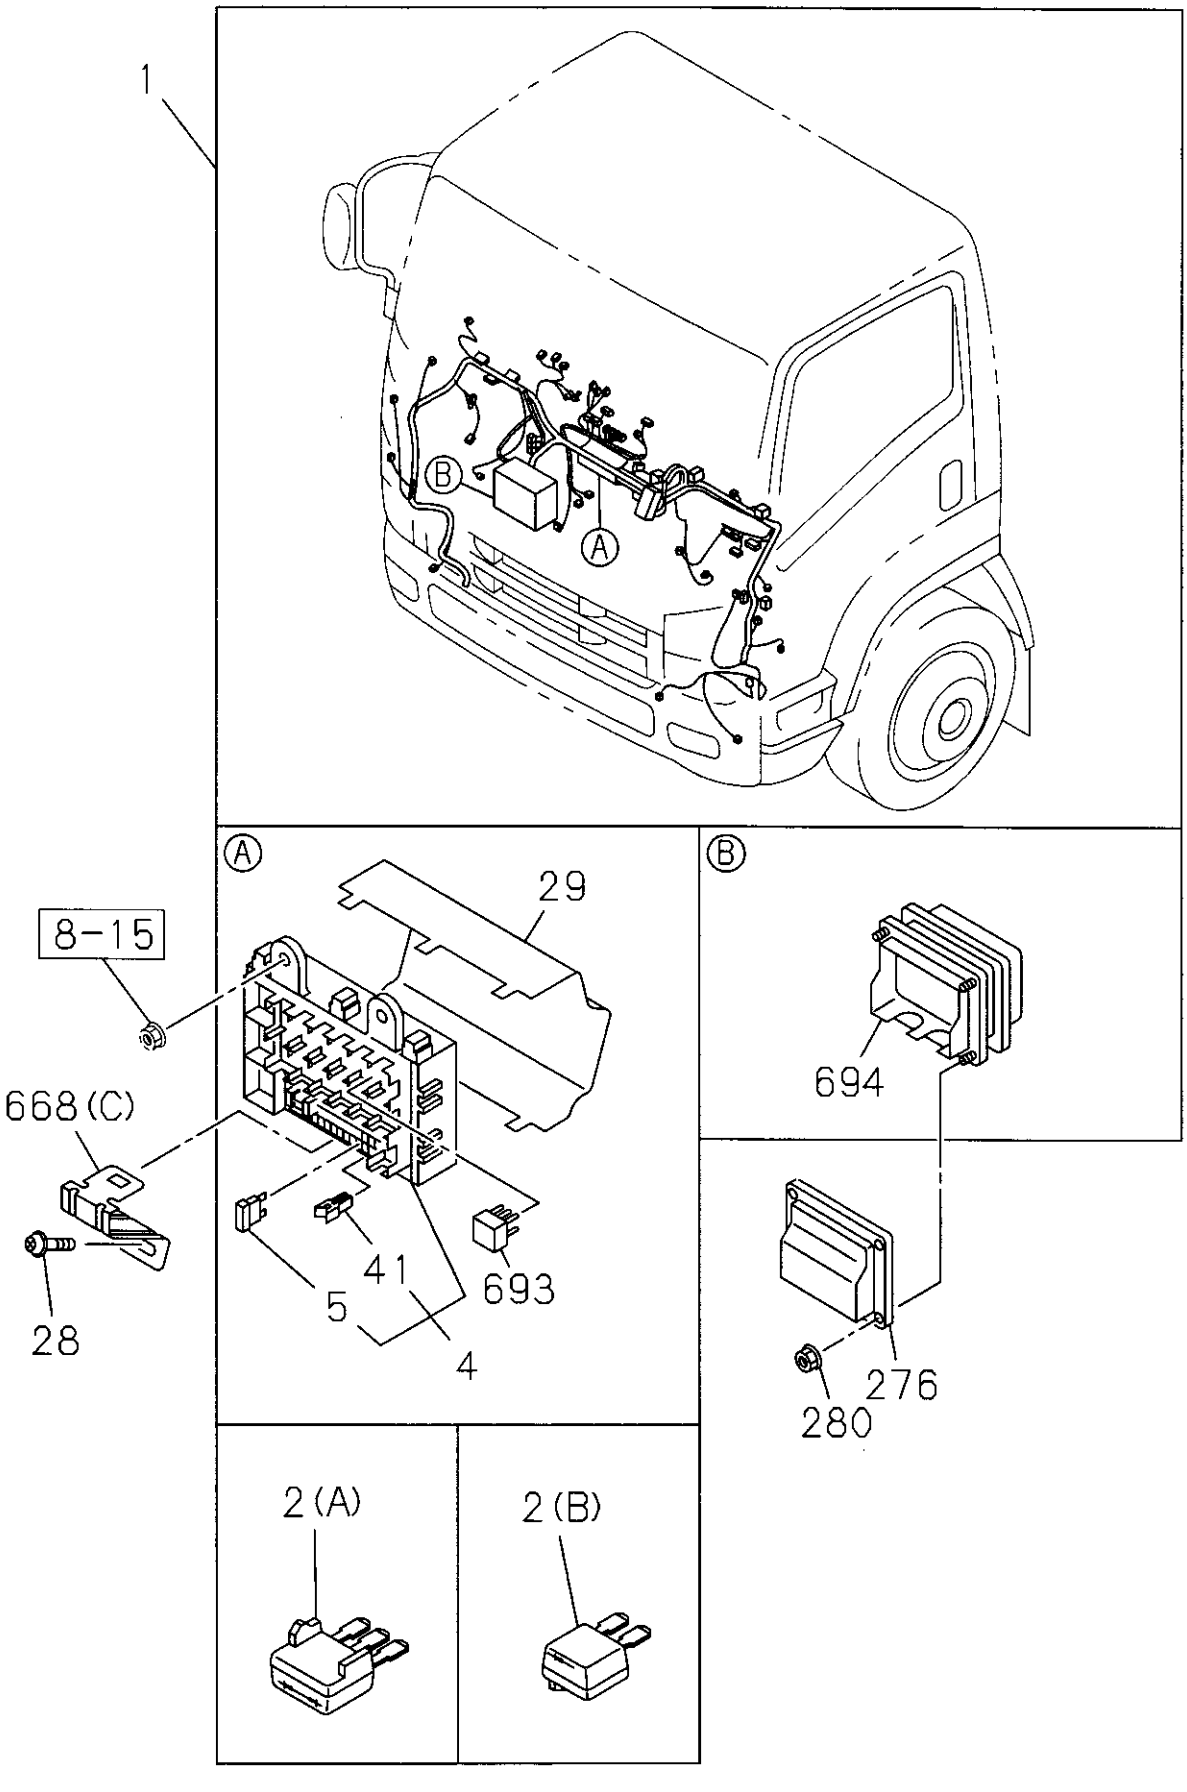


https://truckmanualshub.com/

WIRING HARNESS AND FUSE

FRAME HARNESS NO. 1


FIG-NO.

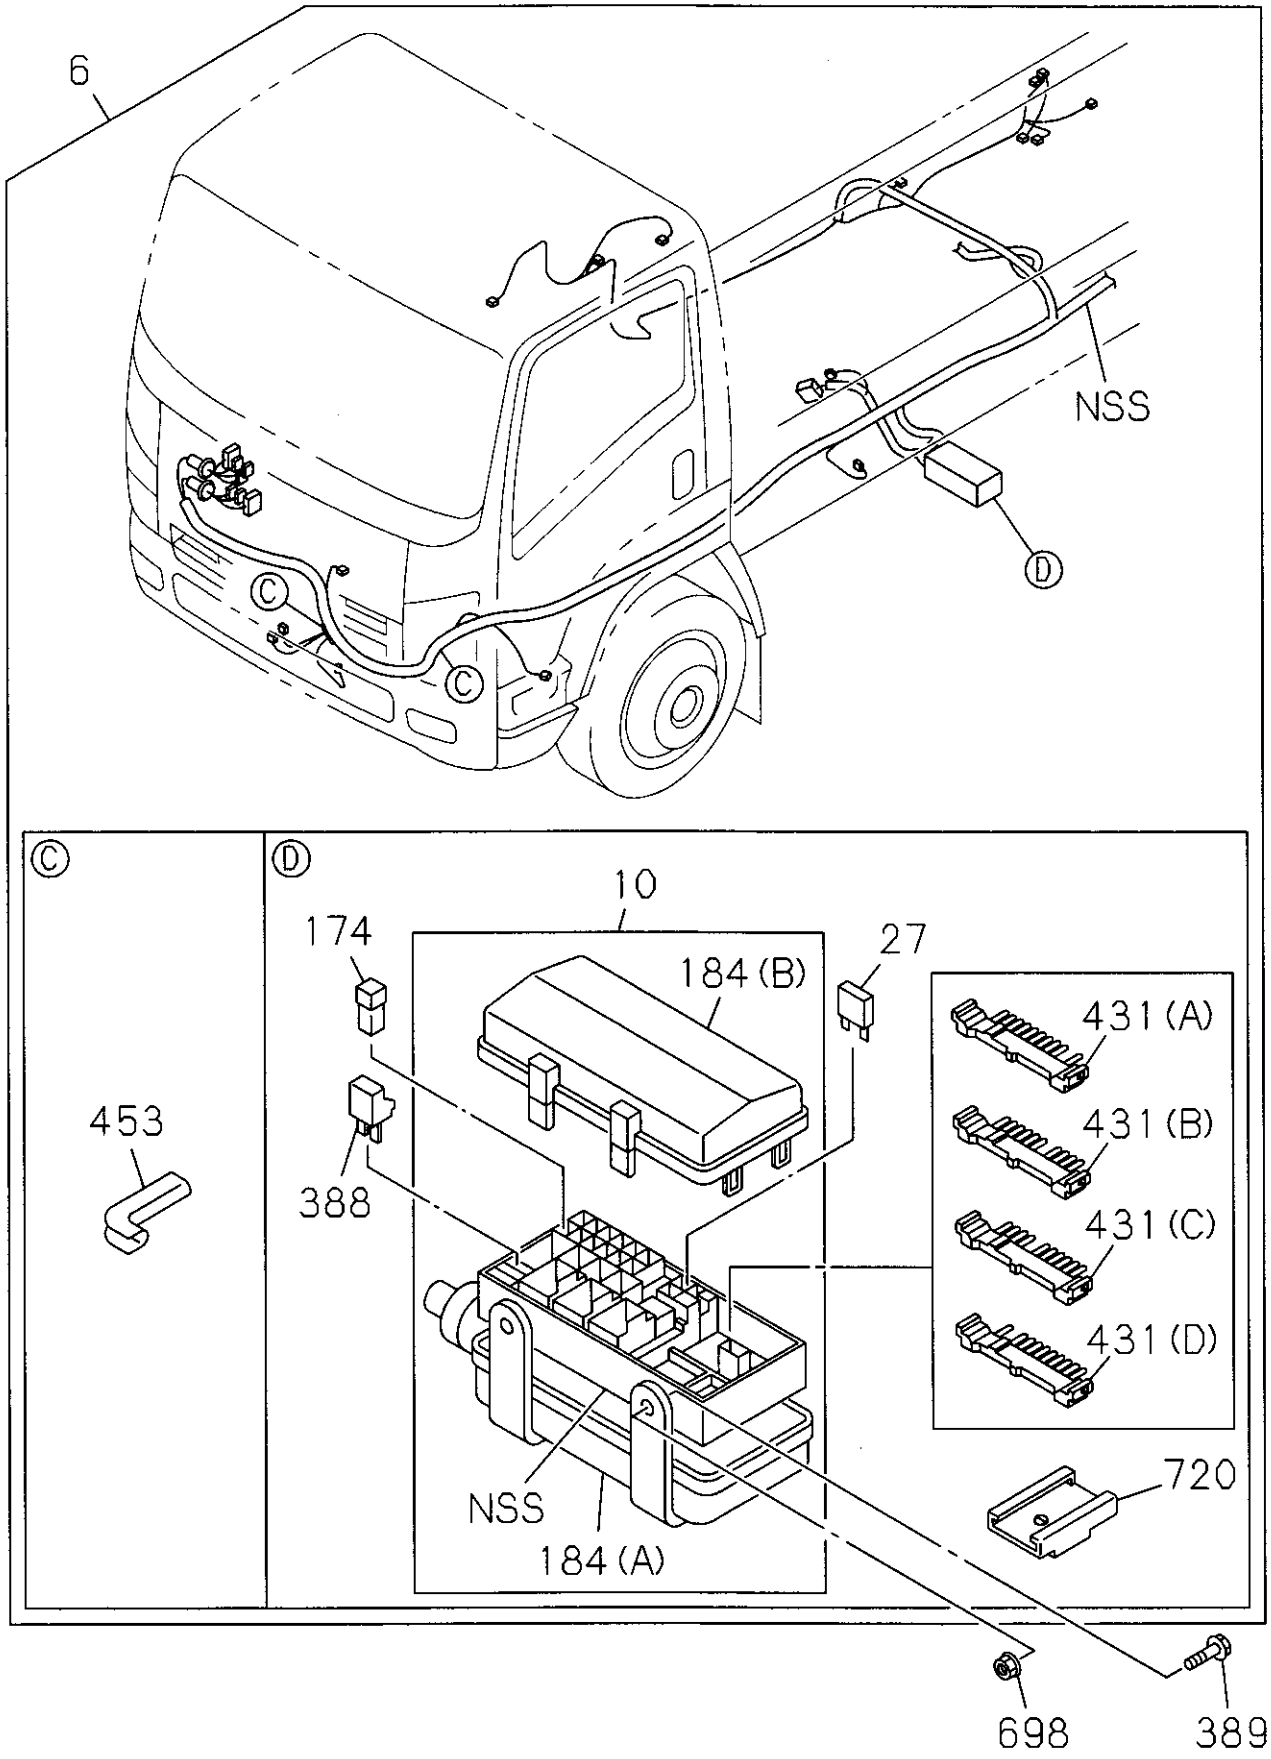


https://truckmanualshub.com/

8-10 WIRING HARNESS AND FUSE

FIG-NO. FRAME HARNESS NO. 2

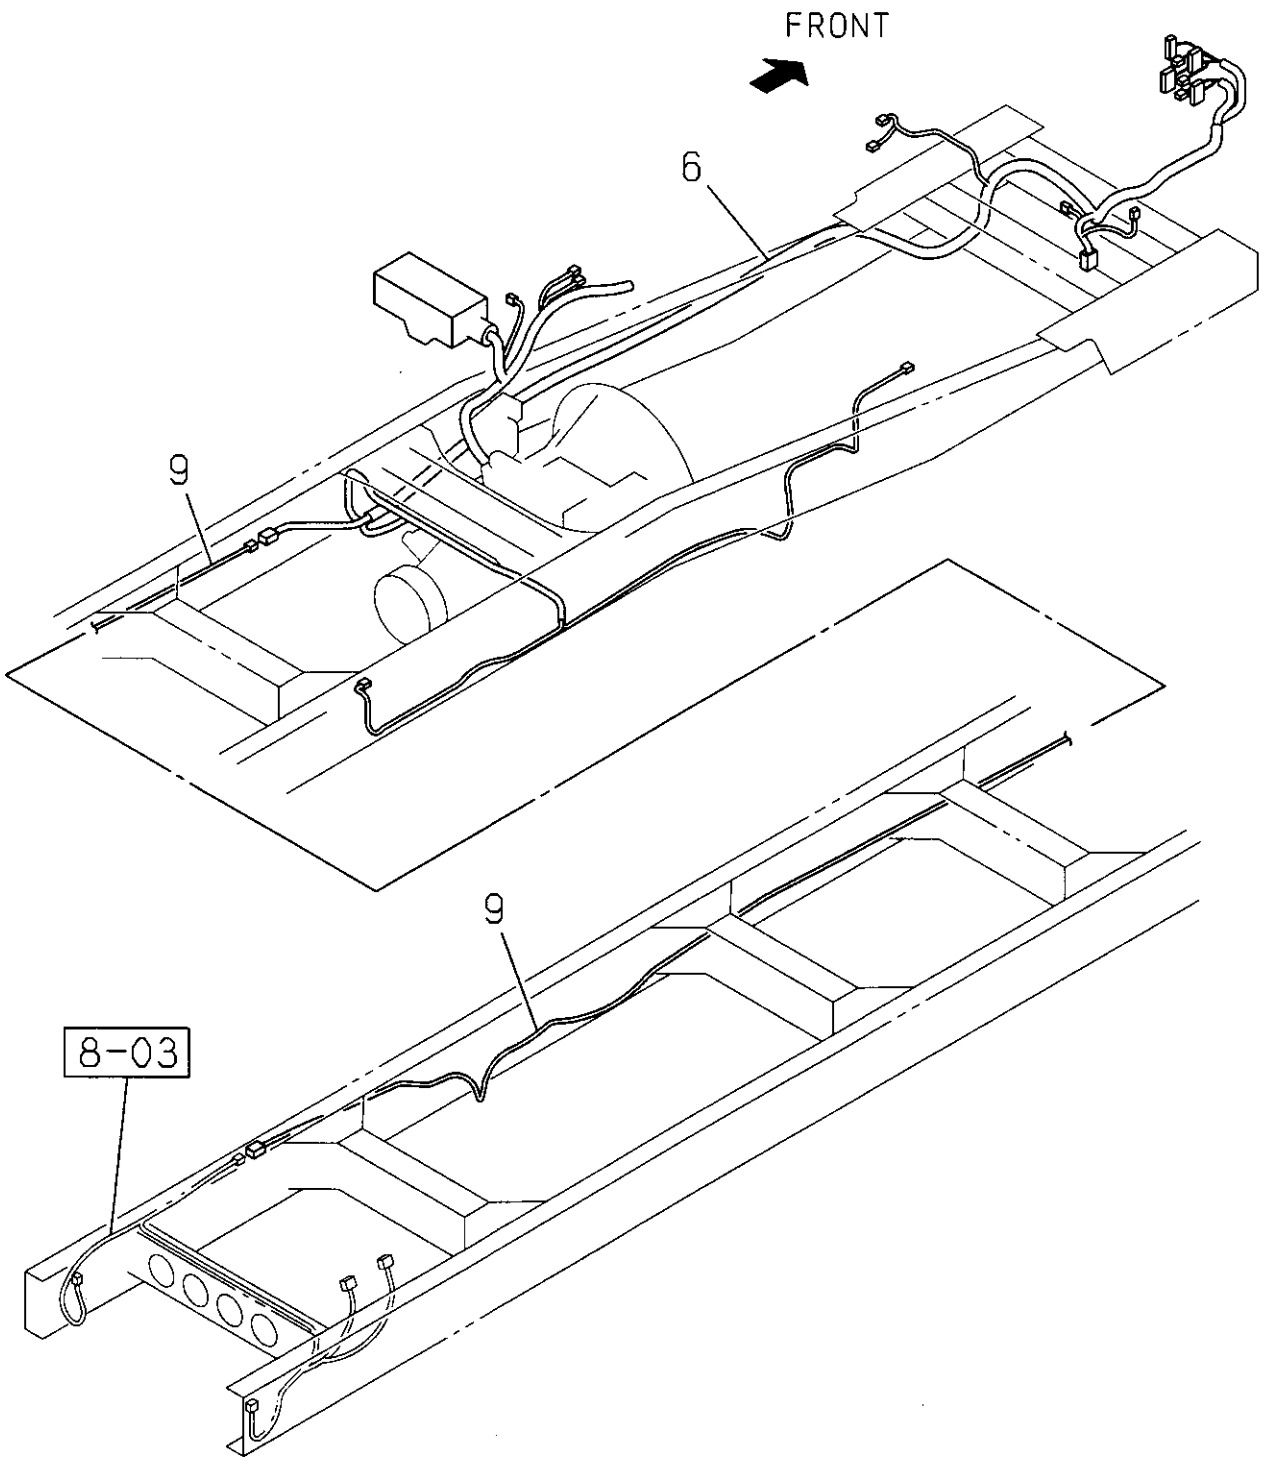


https://truckmanualshub.com/

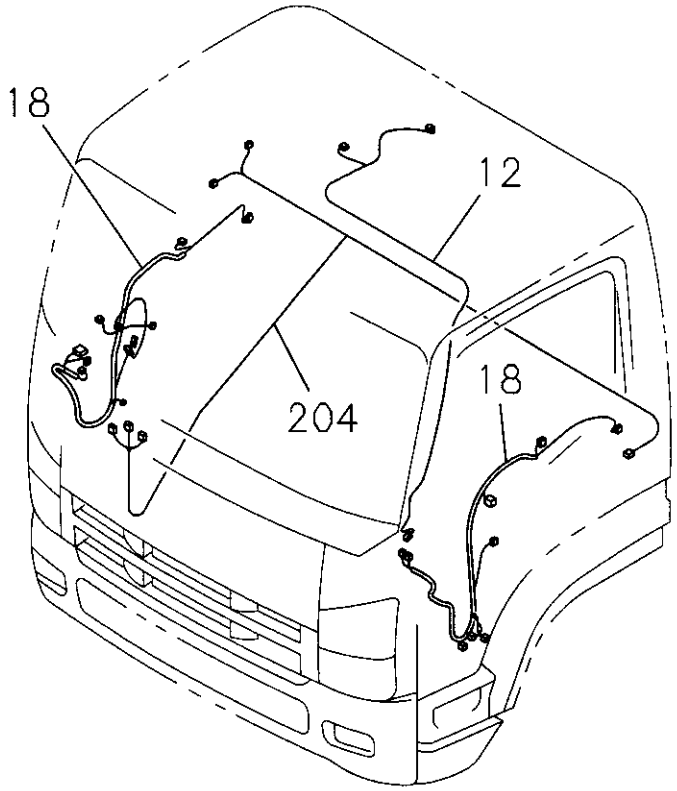



https://truckmanualshub.com/


8-10 WIRING HARNESS AND FUSE

FIG-NO. OTHER HARNESS NO. 2

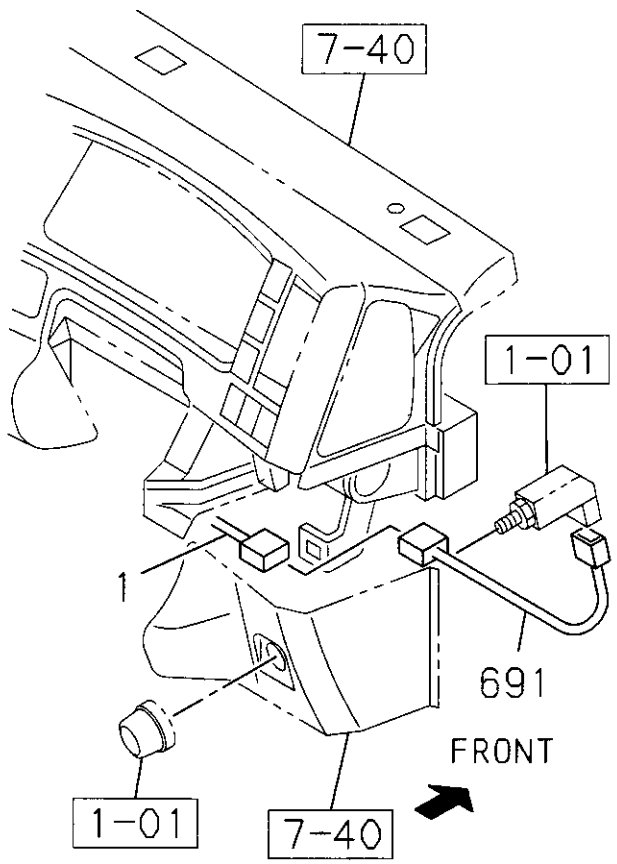


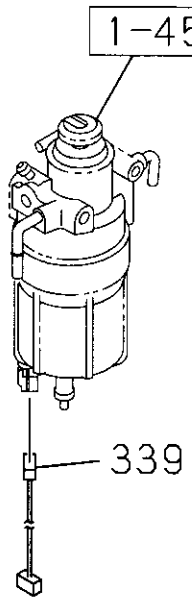

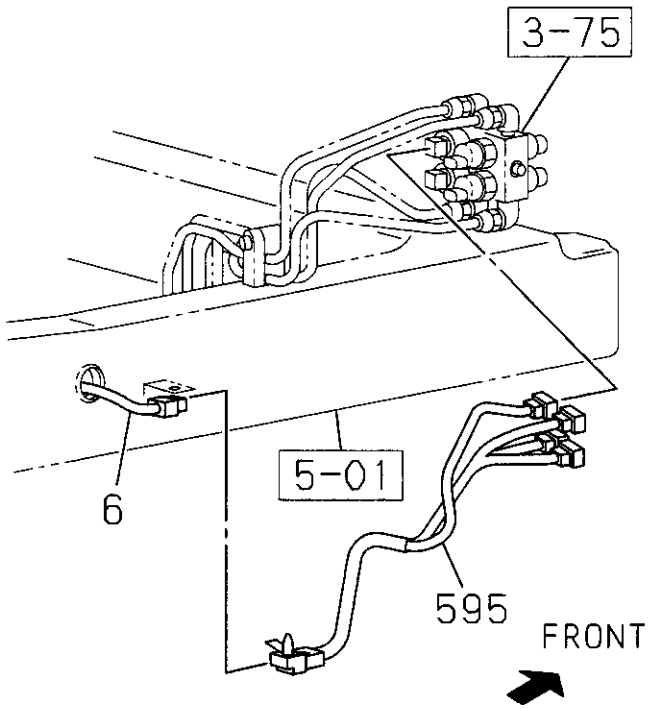

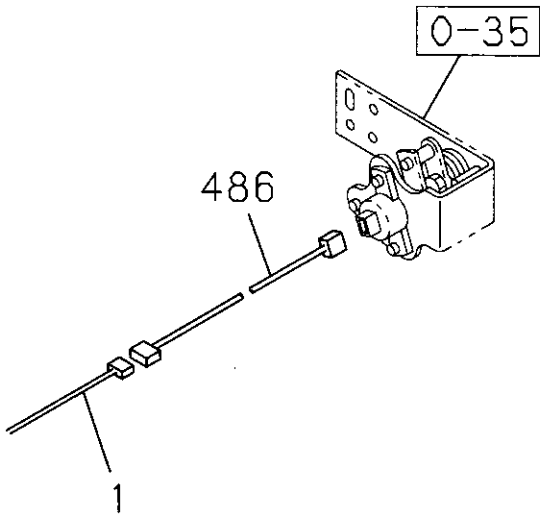


https://truckmanualshub.com/

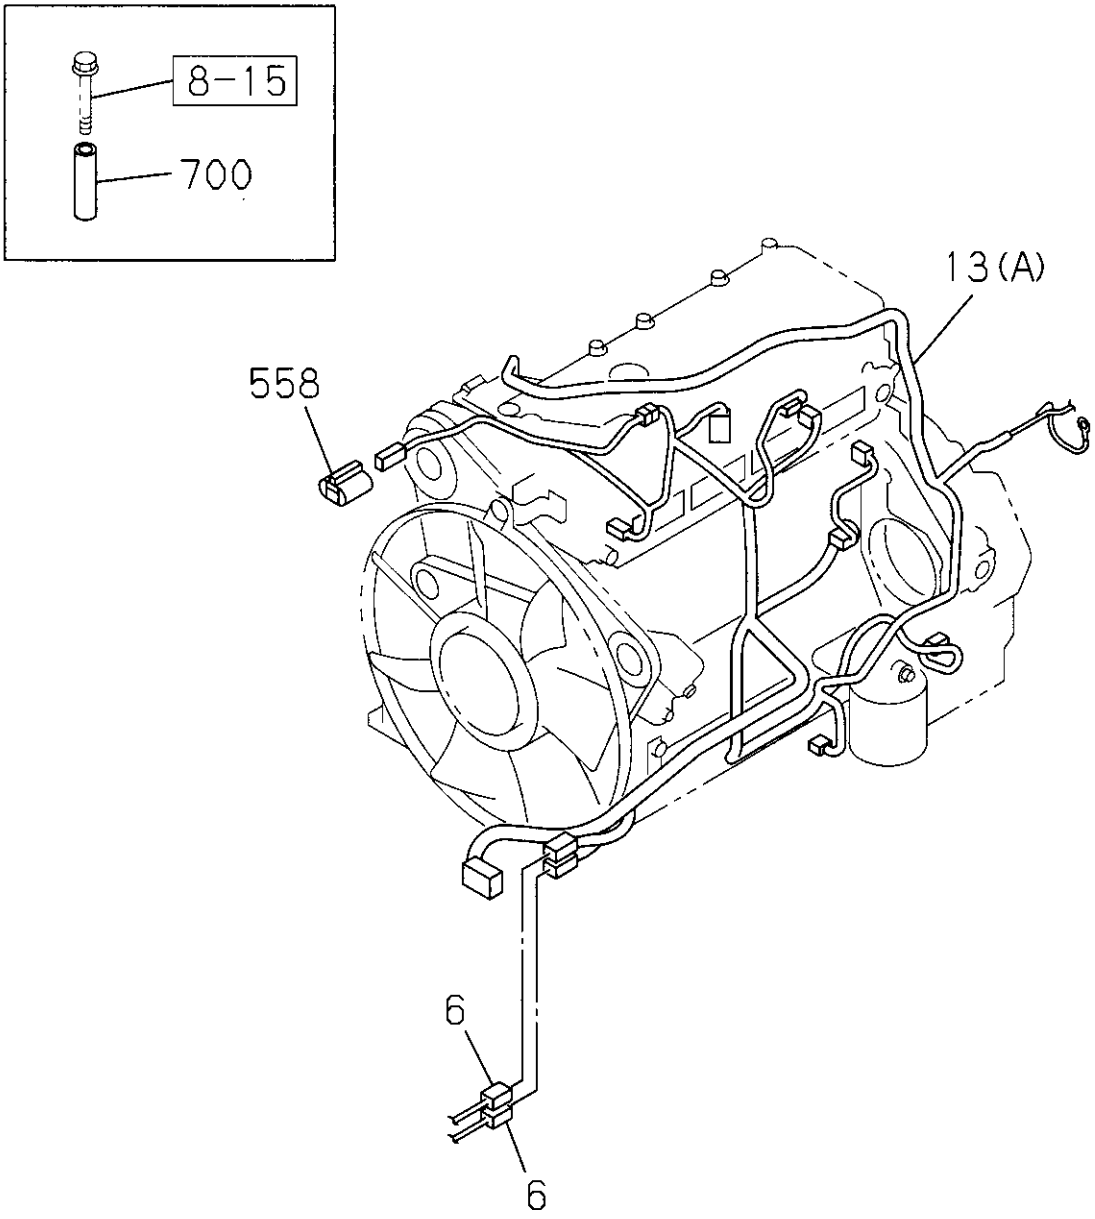


https://truckmanualshub.com/

8-10 WIRING HARNESS AND FUSE

FIG-NO. ENGINE SIDE NO. 2

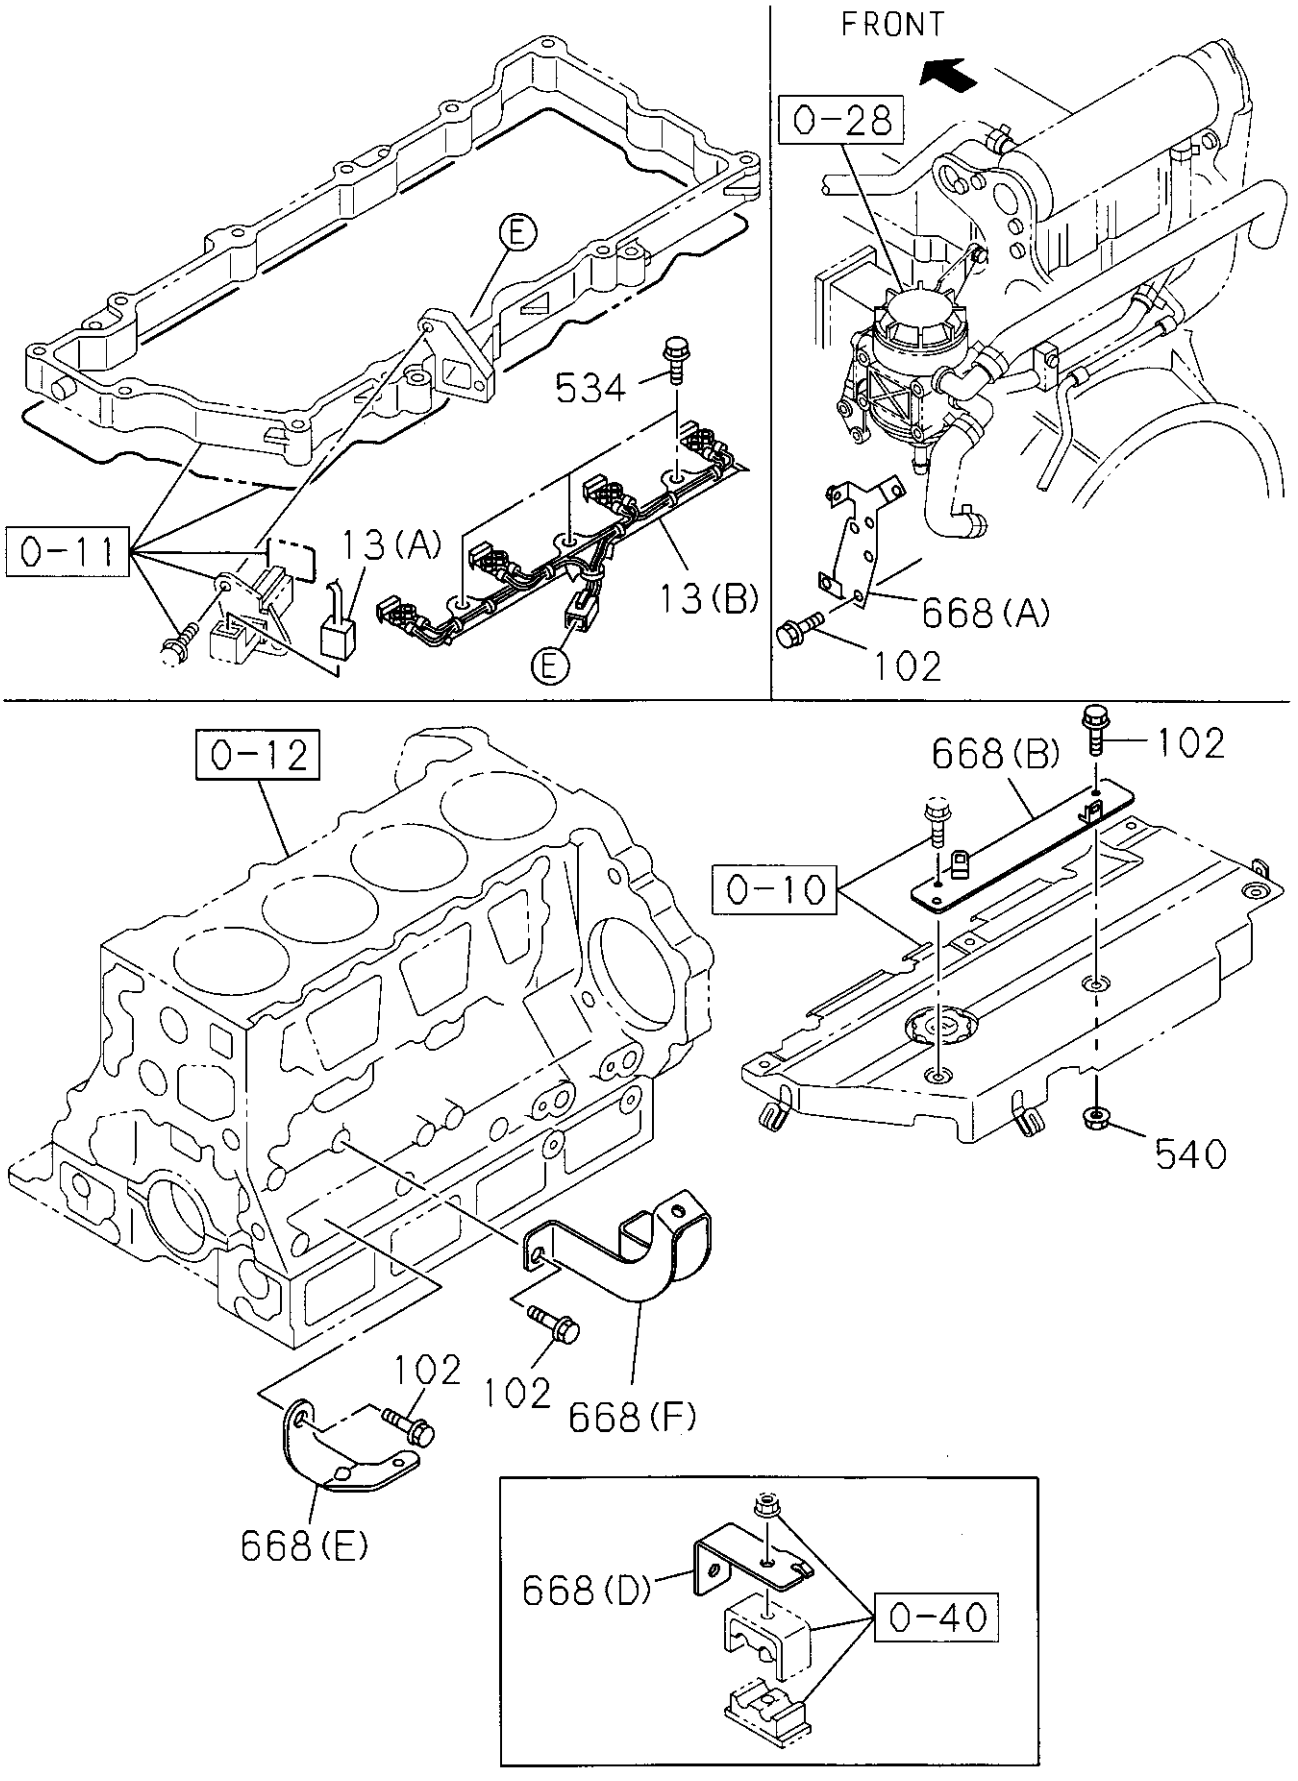


https://truckmanualshub.com/

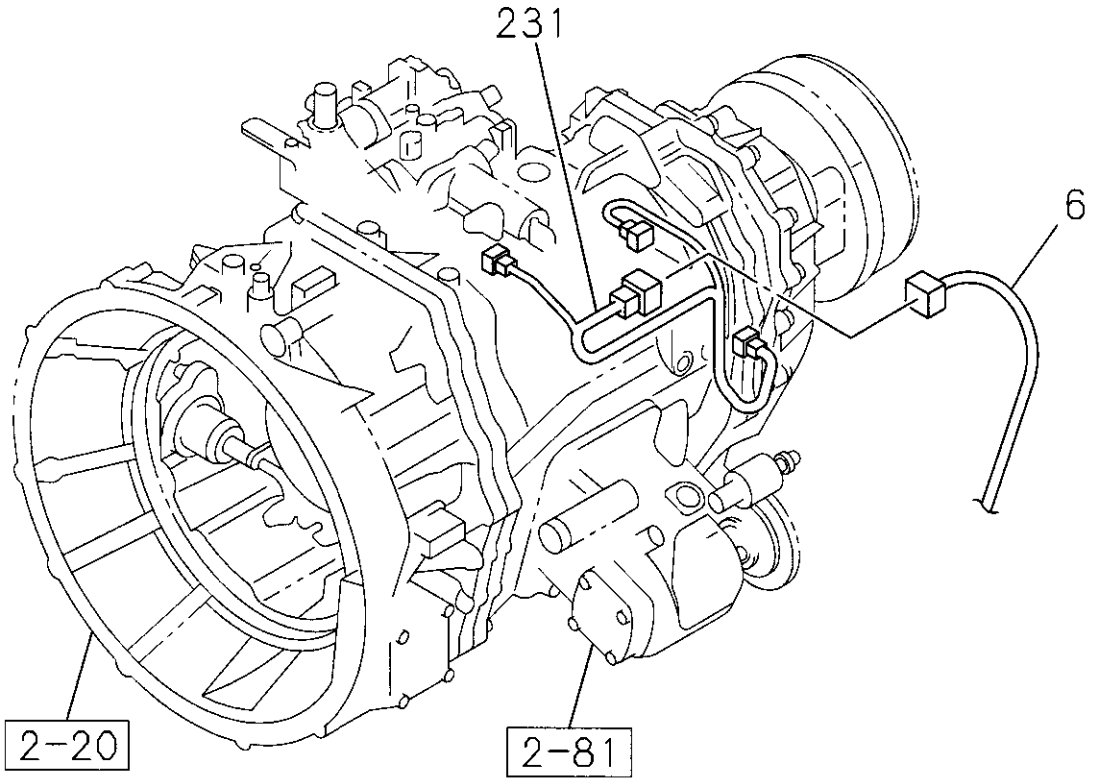

https://truckmanualshub.com/


8-10 WIRING HARNESS AND FUSE

FIG-NO. AIR TANK SIDE

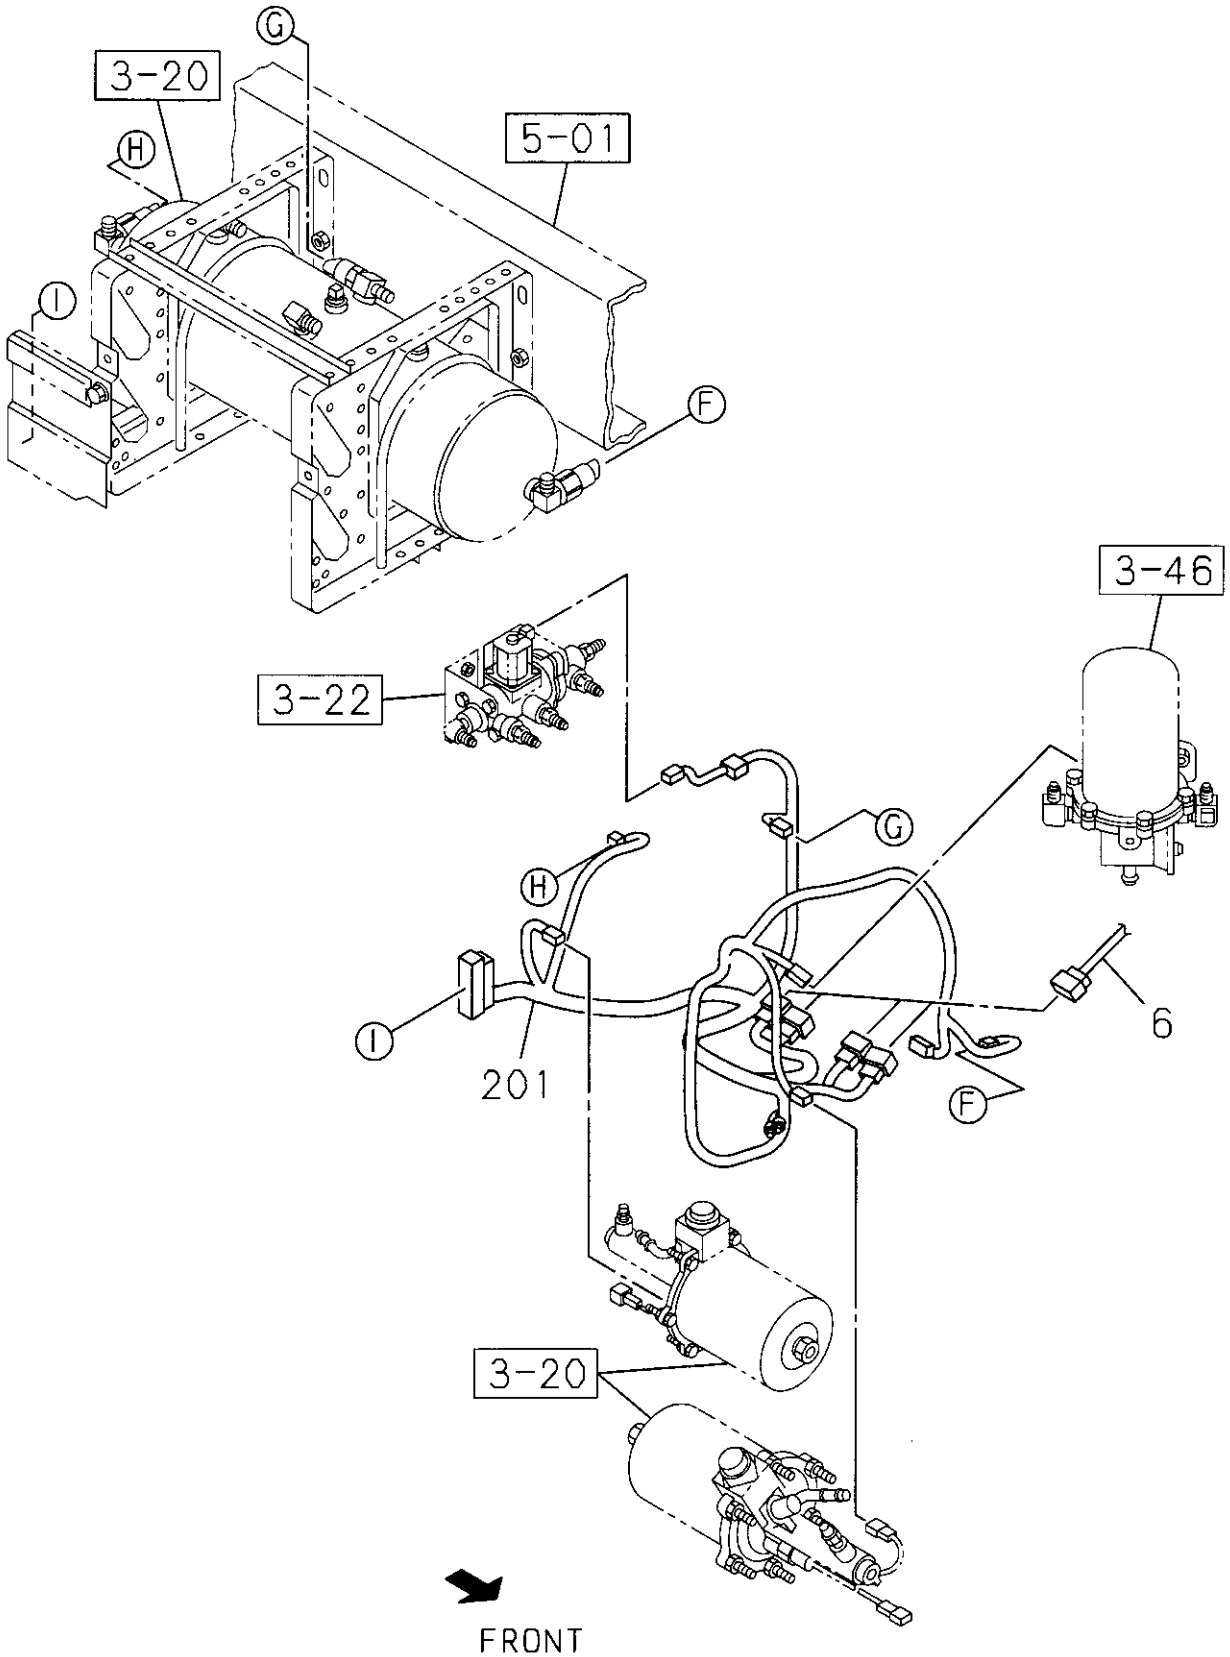

https://truckmanualshub.com/

RELAY ; CAB HARNESS

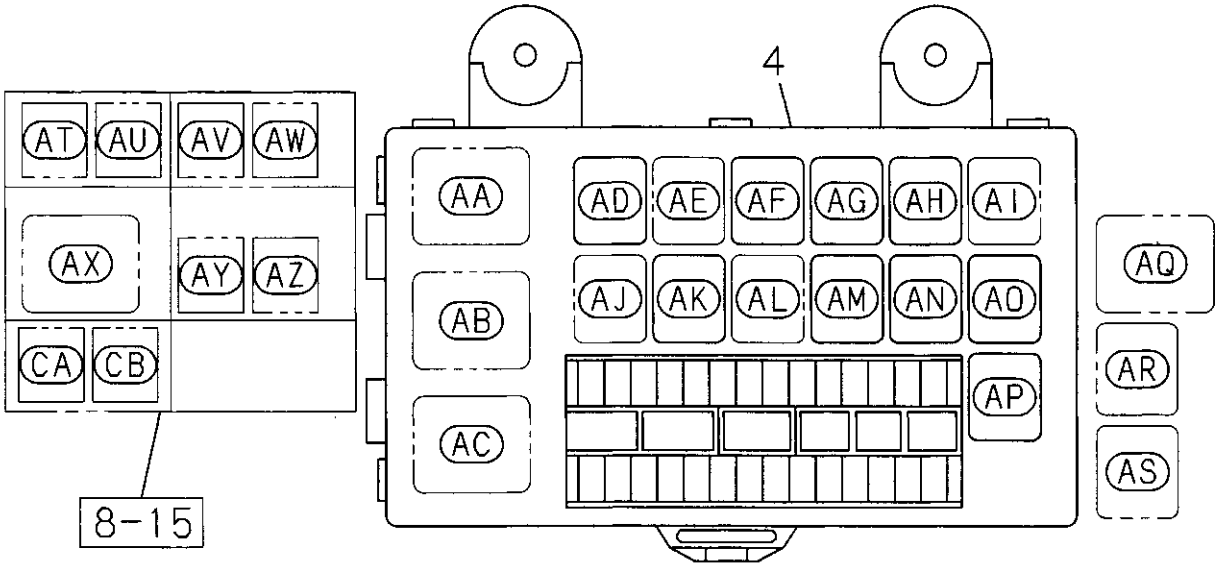

	KEY NO.	RELAY NAME		KEY NO.	RELAY NAME
AA	8-28	STOP LAMP	AS	—	—
AB	8-25	BLOWER MOTOR, HEATER	AT	8-25	PTO MAIN
AC	8-25	KEY ON	AU	—	—
AD	693	DOOR LOCK (LOCK)	AV	8-25	PTO MAIN
AE	—	—	AW	—	—
AF	693	WIPER MAIN	AX	—	—
AG	693	HORN	AY	—	—
AH	693	WIPER (HI/LOW)	AZ	—	—
AI	—	—	CA	—	—
AJ	—	—	CB	—	—
AK	693	DOOR LOCK (UNLOCK)			
AL	—	—			
AM	693	HEAD LAMP (LOW)			
AN	693	ENG RUN			
AO	693	HEAD LAMP (HIGH)			
AP	693	TAIL			
AQ	—	—			
AR	—	—			

https://truckmanualshub.com/

8-10 WIRING HARNESS AND FUSE

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
1	--- HARNESS; CAB						
	7-42040 311-A		1103-		01	A	IDN
2	--- DIODE; CABLE HARNESS						
	8-94416-438-1		1103-		01	A	(A) BLACK 3P-1.5A
	8-94422-639-1		1103-		02	A	(B) BLACK 2P-1.5A IDN
4	--- BOX ASM; FUSE, HARNESS						
	8-98065-666-0		1103-		01	A	
5	-A- FUSE; FACIA HARNESS						
	8-98054-257-0		1103-		AR	A	10A RED
	8-98054-258-0		1103-		AR	A	15A BLUE
	8-98054-259-0		1103-		AR	A	20A YELLOW
	8-98062-982-0		1103-		01	A	25A WHITE
6	--- HARNESS; FRAME						
	7-42060 302-A		1103-		01	A	IDN
9	--- HARNESS; FRAME, RR						
	8-98182-514-0		1103-		01	A	
10	--- BOX; FUSE, HARNESS						
	8-98030-762-0		1103-		01	A	
12	--- HARNESS; ROOF						
	8-98084-247-0		1103-		01	A	LAMPS TWO ROOF MARKER<TEC>
	8-98041-948-2		1103-		01	A	EXC. LAMPS TWO ROOF MARKER<TEC>
13	--- HARNESS; ENG						
	8-98077-326-3		1103-		01	A	(A)
	8-98171-638-0		1103-		01	A	(B)

https://truckmanualshub.com/

WIRING HARNESS AND FUSE

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
18	--- HARNESS; DOOR					
	8-98076-304-3		1103-	R	01 A	DRIVER
	8-98076-305-3		1103-	L	01 A	PASSENGER
27	-A- FUSE UNIT					
	8-98054-257-0		1103-		01 A	10A RED
	8-98054-258-0		1103-		02 A	15A BLUE
28	--- SCREW; FUSE BOX					
	8-98081-722-0		1103-		01 A	M5X12 TAPPING W/TORQUES
29	--- COVER; FUSE BOX					
	8-98056-968-0		1103-		01 A	
41	--- PULLER; FUSE					
	8-98054-260-0		1103-		01 A	
102	--- BOLT; BRKT, HARNESS CONNECTOR					
	0-28050-625-0		1103-		01 A	M6X25 FLANGE
	0-28050-816-0		1103-		03 A	M8X16 FLANGE
	0-28151-016-0		1103-		03 A	M10X16 FLANGE
174	--- FUSE; SLOW BLOW					
	8-98079-191-0		1103-		01 A	30A PINK
	8-98079-192-0		1103-		01 A	40A GREEN
	8-98079-193-0		1103-		03 A	50A RED
	8-98079-194-0		1103-		02 A	60A YELLOW
184	--- COVER; RELAY & FUSE BOX					
	8-98030-766-0		1103-		01 A	(A)
	8-98030-767-0		1103-		01 A	(B)

https://truckmanualshub.com/

8-10 WIRING HARNESS AND FUSE

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
201	--- HARNESS; AIR TANK					
	8-98182-516-0		1103-		01	A
204	--- HARNESS; CABLE, FLOOR					
	8-98182-446-0		1103-		01	A
231	--- HARNESS; TRANS					
	8-98170-740-0		1103-		01	A
276	--- COVER; BOX, FRAME HARNESS					
	8-98034-039-1		1103-		01	A
280	--- NUT; BOX ASM FIX					
	0-91180-106-0		1103-		04	A M6 FLANGE
339	--- HARNESS; EXT, FUEL					
	8-98118-331-1		1103-		01	A
388	--- DIODE; RELAY BOX					
	8-94422-639-1		1103-		01	A BLACK 2P-1.5A 1DN
389	--- BOLT; COVER, RELAY BOX					
	1-09030-073-0		1103-		03	A M8X35 W/LK&PL WASHER
431	--- CONNECTOR; JOINT					
	1-82698-579-0		1103-		02	A (A) GREEN 10P
	1-82699-598-0		1103-		04	A (C) BLUE 10P
	1-82699-599-0		1103-		04	A (B) GREEN 10P
	1-82699-601-0		1103-		01	A (D) BROWN 10P
453	--- PROTECTOR; HARNESS					
	1-82699-709-0		1103-		02	A

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
486	--- HARNESS; ALL SPEED ACCEL						
	1-82675-898-0		1103-		01	A	TRANSMISSION SIDE PTO W/O LEVER(SH5)
534	--- BOLT						
	8-97365-449-0		1103-		03	A	M10X55 FLANGE
540	--- NUT; BRKT FIX						
	0-91180-106-0		1103-		01	A	M6 FLANGE
558	--- CONNECTOR; HARNESS						
	1-82690-668-0		1103-		01	A	
595	--- HARNESS; WARNING, BRK						
	8-97621-003-1		1103-		01	A	
668	--- BRACKET; HARNESS						
	8-98001-095-0		1103-		01	A	(D)
	8-98009-245-0		1103-		01	A	(E)
	8-98011-484-0		1103-		01	A	(F)
	8-98022-106-2		1103-		01	A	(B)
	8-98024-765-0		1103-		01	A	(A)
	8-98095-653-1		1103-		01	A	(C)
691	--- HARNESS; IDLE CONT						
	8-98049-014-2		1103-		01	A	
693	--- RELAY; FUSE BOX						
	8-97173-035-1		1103-		AR	A	24V 10A MATSUSHITA IDN
694	--- BOX ASM; CONNECTOR						
	8-98063-269-1		1103-		01	A	
698	--- NUT; COVER, RELAY BOX						
	0-91180-108-0		1103-		02	A	M8 FLANGE

https://truckmanualshub.com/

8-10 WIRING HARNESS AND FUSE


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	
						A LEAF SUS(FCR5CS)	
700	--- TUBE; DISTANCE						
	1-11369-157-0		1103-		01	A	
720	--- ATTACHMENT; CONNECTOR						
	1-82699-688-0		1103-		03	A	


https://truckmanualshub.com/

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO. CLIP NO. 1 AND OTHER PARTS

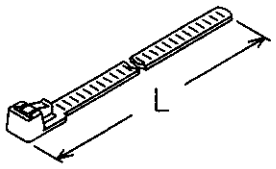


SIZE	KEY NO.
L=140	14(B)
	22
	305(B)
L=250	14(C)
	48(B)
	206
	217

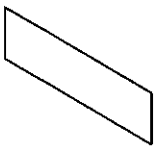


—	530




—	538

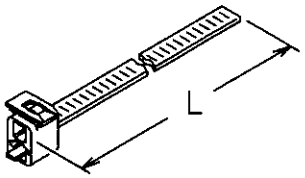


SIZE	KEY NO.
L=180	225

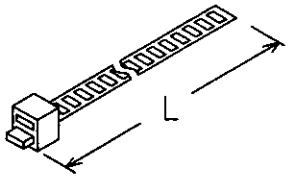

SIZE	KEY NO.
L=250	16(D)
L=300	305(A)
L=350	48(E)
	208
L=600	48(H)

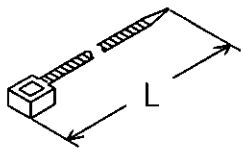

SIZE	KEY NO.
L=150	14(A)
L=251	14(D)

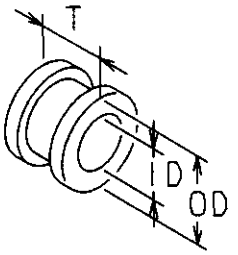


ID	OD	T	KEY NO.
24	30	17	178(B)
28	35	17	178(A)

https://truckmanualshub.com/


FIXING PARTS; WIRING HARNESS

CLIP NO. 2


SIZE	KEY NO.

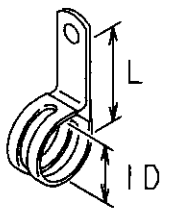

ID	L	
24	24	16(H)
		483(B)
32	50	48(F)




L	
20	116

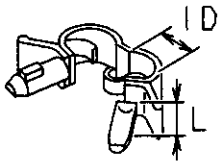


ID	L	
5-12	14.5	48(G)
		223(B)
13-18	22	48(D)


SIZE	KEY NO.

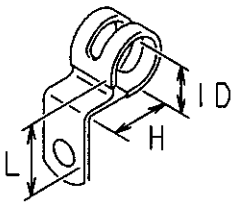

ID	H	L	
18	23	28	483(D)
19	21	39	49
31.5	23	25	16(F)

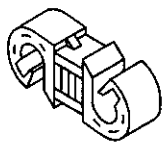


ID	
10&10	16(G)
10&12	16(I)

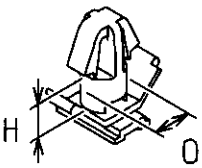


OD	H	
8	3.8	171(B)
9	6	223(A)
		470


SIZE	KEY NO.

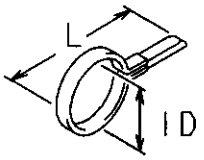

ID	L	
14	44	48(A)
		213

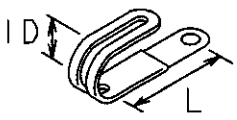

ID	L	
—	36	483(C)


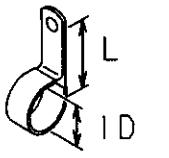




ID	L	
11	28	48(C)



https://truckmanualshub.com/

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO. CLIP NO. 3

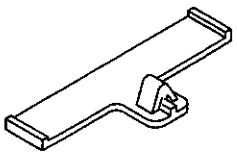
SIZE	KEY NO.
	
—	16(C)
	
—	16(A)

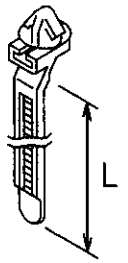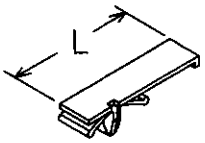SIZE		KEY NO.
		
L		
155		16(B)
		
L		
40.6		16(E)

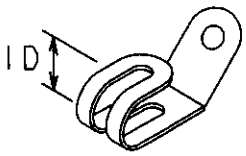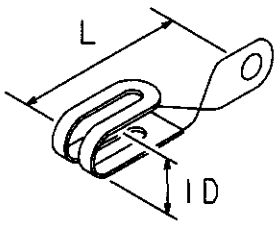SIZE		KEY NO.
		
ID		
12		483(A)
		
ID	L	
16	60	171(A)


https://truckmanualshub.com/

BOLT; W/FLANGE

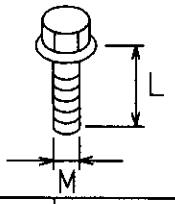


M	L	SIZE / KEY NO.
6	20	150(A)
8	12	139(E)
		150(C)
	16	150(D)
	65	139(D)

BOLT; W/LK & PL WASHER

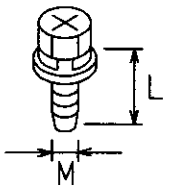


M	L	SIZE / KEY NO.
6	16	377
8	20	38(A)
		386

BOLT; W/FLANGE

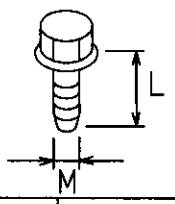


M	L	SIZE / KEY NO.
8	20	93
	25	38(B)
		139(A)
		313(B)
	30	139(B)
		150(B)
		313(A)
10	25	139(C)
	30	38(C)
		139(F)
		313(C)

W/PL. WASHER & TORQUES

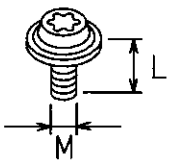


M	L	SIZE / KEY NO.
5	7	127

NUT; W/FLANGE

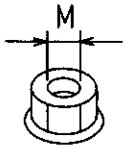

M	SIZE / KEY NO.
6	524(A)
8	219
	294(A)
	515
	525
10	294(B)
	524(B)

WASHER; PL

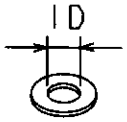


ID	SIZE / KEY NO.
10.5	184

https://truckmanualshub.com/

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO. BRACKET

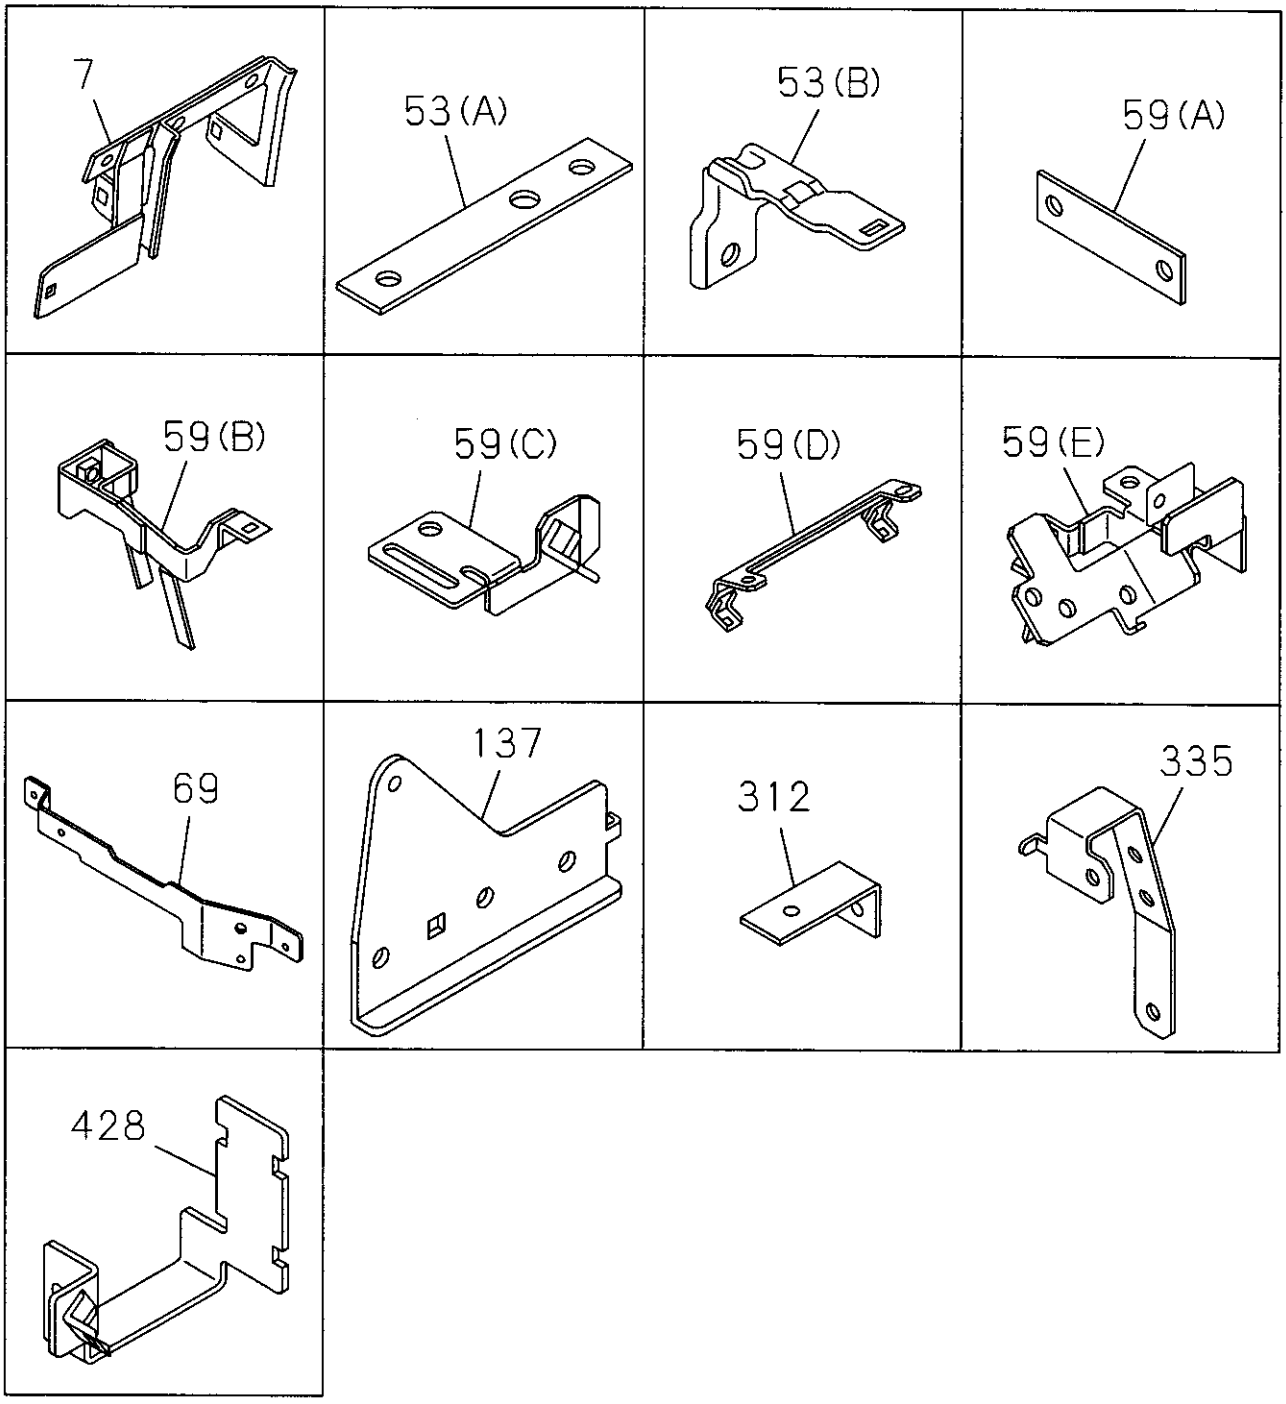

https://truckmanualshub.com/

FIXING PARTS; WIRING HARNESS

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
7	--- BRACKET; CONNECTOR					
	8-98049-798-1		1103-		01	A
14	--- CLIP; BAND, HARNESS					
	5-09707-030-1		1103-		02	A (C) L=250 IDN
	5-09707-031-1		1103-		05	A (B) L=140 IDN
	8-97355-273-0		1103-		01	A (A) L=150
	8-97619-917-0		1103-		01	A (D) L=251
16	--- CLIP; HARNESS					
	1-09701-001-1		1103-		02	A (H) ID=24 L=24
	1-09701-017-0		1103-		01	A (F) ID=31.5 H=23 L=25
	1-09707-126-0		1103-		02	A (D) L=250
	1-09709-277-1		1103-		04	A (G) ID=10 & 10
	1-09709-278-1		1103-		01	A (I) ID=10 & 12
	8-94413-325-0		1103-		01	A (A) ID=16 IDN
	8-97173-307-0		1103-		18	A (B) L=155 IDN
	8-97229-357-0		1103-		02	A (E) L=40.6
	8-98052-679-0		1103-		02	A (C)

https://truckmanualshub.com/

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
	RECOMMEND CLASS / PART NAME					A LEAF SUS(FCR5CS)
22	--- CLIP; ENG HARNESS					
	5-09707-031-1		1103-		02	A L=140 IDN
38	--- BOLT; CLIP, HARNESS					
	0-28650-825-0		1103-		02	A (B) M8X25 FLANGE IDN
	0-28651-030-0		1103-		01	A (C) M10X30 FLANGE
	8-97086-825-0		1103-		03	A (A) M8X20 W/LK&PL WASHER IDN
48	--- CLIP; FRAME HARNESS					
	1-09701-055-1		1103-		01	A (F) ID=32 L=50
	1-09707-107-1		1103-		01	A (H) L=600
	1-09707-183-0		1103-		01	A (E) L=350
	1-09987-221-0		1103-		03	A (G) ID=5-12 L=14.5
	5-09707-030-1		1103-		01	A (B) L=250 IDN
	5-09707-030-1		1103-		02	A (B) L=250 IDN
	9-09917-427-0		1103-		19	A (A) ID=14 L=44
	9-09917-544-0		1103-		01	A (C) ID=11 L=28
	1-09709-292-0		1103-	L	01	A (D) ID=13-18 L=22

https://truckmanualshub.com/

FIXING PARTS; WIRING HARNESS

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
49	--- CLIP; GEN HARNESS						
	1-09700-972-1		1103-		01	A	ID=19 L=39 H=21
53	--- BRACKET; HARNESS						
	1-47479-380-0		1103-		01	A	(A)
	8-98052-458-0		1103-		01	A	(B)
59	--- BRACKET; FRAME HARNESS						
	8-97616-305-0		1103-		01	A	(C)
	8-97619-533-0		1103-		01	A	(D)
	8-97619-535-0		1103-		01	A	(E)
	8-98099-963-0		1103-		01	A	(B)
	8-98044-743-0		1103-	L	01	A	(A) L=85
69	--- BRACKET; CLIP						
	8-97614-738-0		1103-		01	A	
93	--- BOLT; ECM HARNESS CLIP						
	0-28650-820-0		1103-		02	A	M8X20 FLANGE IDN
116	--- CLIP; ROOF HARNESS						
	1-09987-246-2		1103-		04	A	LAMPS TWO ROOF MARKER<TEC> L=20
	1-09987-246-2		1103-		03	A	EXC. LAMPS TWO ROOF MARKER<TEC> L=20
127	--- SCREW; FACIA HARNESS CLIP						
	8-98063-767-0		1103-		01	A	M5X7 W/PL WASHER&TORQUES
137	--- BRACKET; HARNESS CLAMP						
	8-97624-016-0		1103-		01	A	

https://truckmanualshub.com/

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
139	--- BOLT; BRKT						
	0-28050-812-0		1103-		01	A	(E) M8X12 FLANGE
	0-28650-825-0		1103-		01	A	(A) M8X25 FLANGE IDN
	0-28650-830-0		1103-		01	A	(B) M8X30 FLANGE
	0-28650-830-0		1103-		02	A	(B) M8X30 FLANGE
	0-28651-025-0		1103-		02	A	(C) M10X25 FLANGE IDN
	0-28651-030-0		1103-		02	A	(F) M10X30 FLANGE
	1-09044-072-1		1103-		01	A	(D) M8X65 FLANGE
150	--- BOLT; CLIP						
	0-28050-620-0		1103-		01	A	(A) M6X20 FLANGE
	0-28050-812-0		1103-		01	A	(C) M8X12 FLANGE
	0-28050-816-0		1103-		02	A	(D) M8X16 FLANGE
	0-28650-830-0		1103-		01	A	(B) M8X30 FLANGE
171	--- CLIP; STARTER HARNESS						
	1-09709-309-0		1103-		01	A	(B) OD=8 H=3.8
	8-97101-436-0		1103-		01	A	(A)

https://truckmanualshub.com/

FIXING PARTS; WIRING HARNESS

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
178	--- GROMMET; HARNESS						
	9-09956-092-1		1103-		01	A	(B) ID=24 OD=30 T=17
	9-09956-256-2		1103-		04	A	(A) ID=28 OD=35 T=17
184	--- WASHER; PL, STARTER EARTH						
	1-09503-265-0		1103-		01	A	ID=10.5
206	--- CLIP; FUEL TANK HARNESS						
	5-09707-030-1		1103-		03	A	L=250 IDN
208	--- CLIP; HARNESS, MAG VLV						
	1-09707-183-0		1103-		01	A	L=350
213	--- CLIP; END CROSS HARNESS						
	9-09917-427-0		1103-		03	A	ID=14 L=44
217	--- CLIP; RR BODY HARNESS						
	5-09707-030-1		1103-		02	A	L=250 IDN
219	--- NUT						
	0-91180-108-0		1103-		02	A	M8 FLANGE
223	--- CLIP; AIR TANK HARNESS						
	1-09709-178-0		1103-		02	A	(A) OD=9 H=6
	1-09987-221-0		1103-		03	A	(B) ID=5-12 L=14.5
225	--- CLIP; AIR TANK HARNESS						
	1-09707-162-1		1103-		01	A	L=180

https://truckmanualshub.com/

8-15 FIXING PARTS; WIRING HARNESS

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
294	--- NUT					
	0-91180-108-0		1103-		04	A (A) M8 FLANGE
	0-91180-108-0		1103-		01	A A (A) M8 FLANGE
	0-91180-210-0		1103-		01	A (B) M10 FLANGE
	0-91180-210-0		1103-		02	A (B) M10 FLANGE
305	--- CLIP; ENG HARNESS					
	1-09707-001-1		1103-		01	A (A) L=300
	5-09707-031-1		1103-		02	A (B) L=140 IDN
312	--- BRACKET; CLIP HARNESS					
	1-47475-304-0		1103-		01	A L=55
313	--- BOLT; BRKT					
	0-28650-825-0		1103-		01	A (B) M8X25 FLANGE IDN
	0-28650-830-0		1103-		01	A (A) M8X30 FLANGE
	0-28651-030-0		1103-		01	A (C) M10X30 FLANGE
335	--- BRACKET; CONNECTOR					
	8-97619-097-1		1103-		01	A
377	--- BOLT; CAB EARTH					
	8-97086-823-0		1103-		02	A M6X16 W/LK&PL WASHER

https://truckmanualshub.com/

FIXING PARTS; WIRING HARNESS

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
386	--- BOLT; GRAND HARNESS						
		8-97086-825-0		1103-		02	A M8X20 W/LK&PL WASHER IDN
428	--- BRACKET						
		8-98116-461-0		1103-		01	A
470	--- CLIP; HARNESS, LICENSE LAMP						
		1-09709-178-0		1103-		01	A OD=9 H=6
483	--- CLIP; ENG HARNESS						
		1-09700-860-0		1103-		01	A (D) ID=18 H=23 L=28
		1-09701-001-1		1103-		01	A (B) ID=24 L=24
		5-09700-348-0		1103-		01	A (A) ID=12 B=13 ID=6.5
		8-94224-891-1		1103-		03	A (C) L=36
515	--- NUT; BRKT						
		0-91180-108-0		1103-		01	A M8 FLANGE
524	--- NUT; HARNESS						
		0-91180-106-0		1103-		04	A (A) M6 FLANGE
		0-91180-110-0		1103-		01	A (B) M10 FLANGE
525	--- NUT; CLIP						
		0-91180-108-0		1103-		01	A A M8 FLANGE
530	--- SEAL; HARNESS						
		1-72498-019-1		1103-		11	A 180X40

https://truckmanualshub.com/

8-15 FIXING PARTS; WIRING HARNESS


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
538	--- SEAL; HOLE						
	1-76798-019-0		1103-		01	A	OD=25 BLACK

https://truckmanualshub.com/

8-21 METER ASM

FIG-NO.

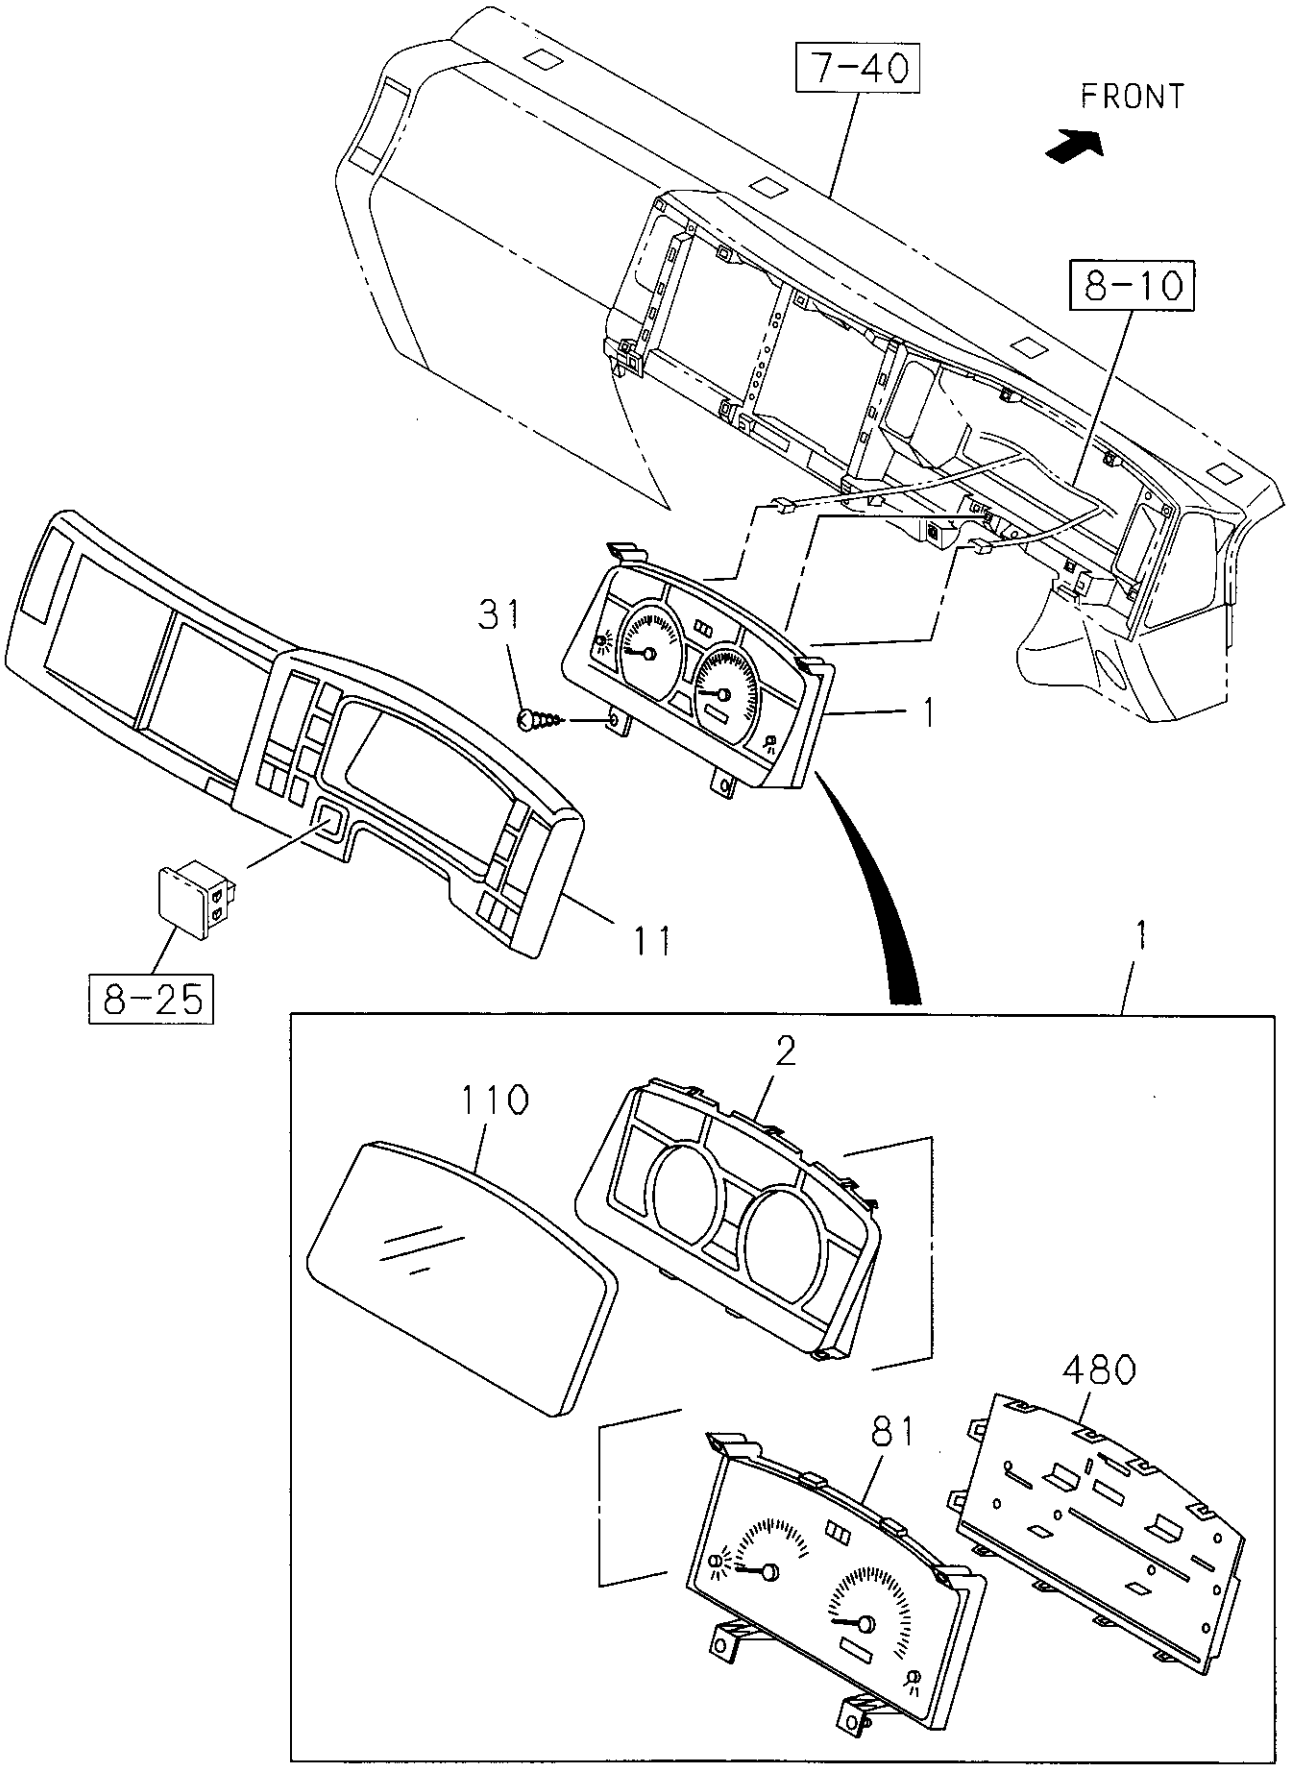

https://truckmanualshub.com/

METER ASM


8-21
FIG-NO.


KEY NO.	RECOMMEND CLASS／PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- METER COMPL; CLUSTER					
	8-98064-903-5		1103-		01	A
2	--- PANEL; CLUSTER					
	8-98054-432-0		1103-		01	A
11	--- CLUSTER ASM; METER					
	8-97405-350-6		1103-		01	A DARK GRAY
31	--- SCREW; METER, INST PANEL					
	0-72180-516-0		1103-		04	A M5X16 TAPPING
81	--- METER SUB ASM					
	8-98079-673-0		1103-		01	A
110	--- GLASS; CLUSTER METER					
	8-98054-431-0		1103-		01	A
480	--- COVER; METER					
	8-98054-433-0		1103-		01	A


https://truckmanualshub.com/

8-25 SWITCH AND RELAY; INSTRUMENT PANEL

FIG-NO. SWITCH NO. 1

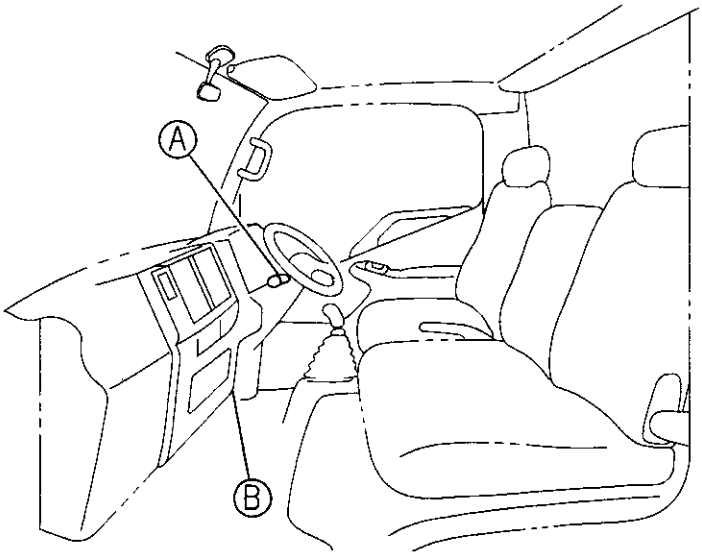

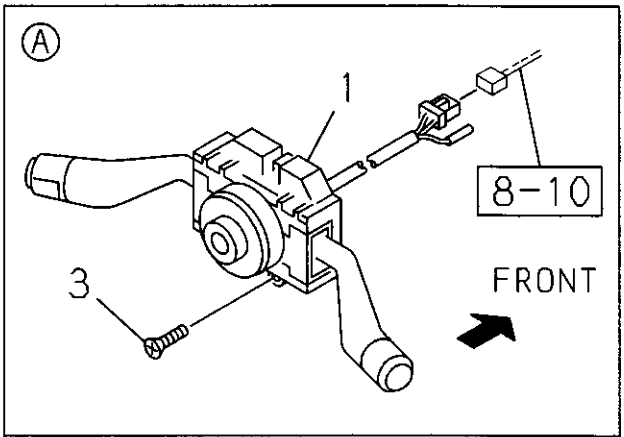

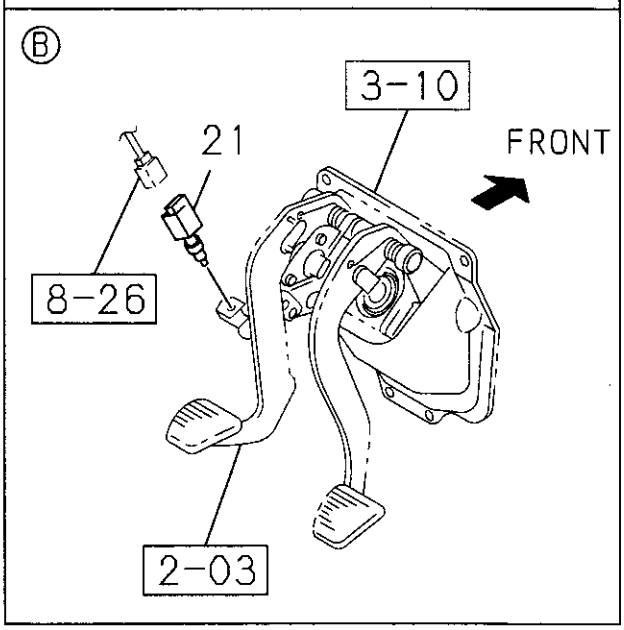


https://truckmanualshub.com/

SWITCH AND RELAY; INSTRUMENT PANEL

SWITCH NO. 2

FIG-NO.

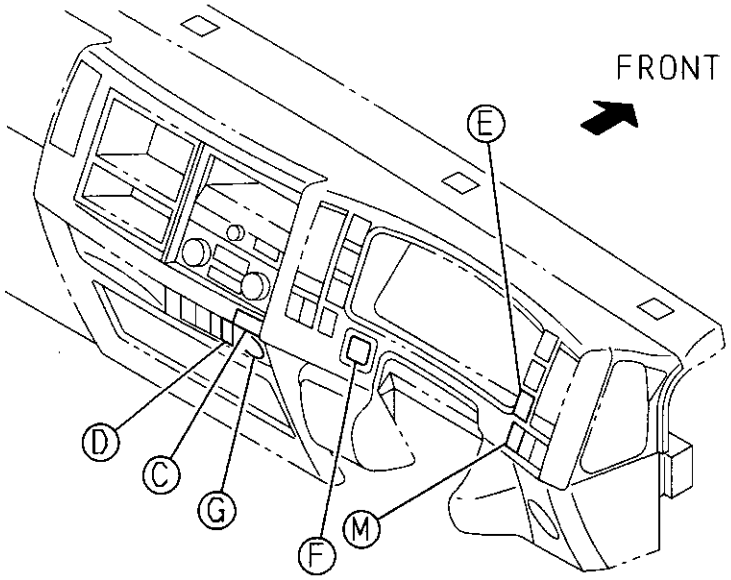


COVER 253, 257(C)	Ⓒ HAZARD 249	Ⓓ PTO 77
Ⓔ COVER 104	Ⓕ COVER 257(B)	Ⓖ COVER 257(A)

https://truckmanualshub.com/

8-25 SWITCH AND RELAY; INSTRUMENT PANEL


FIG-NO. SWITCH NO. 3

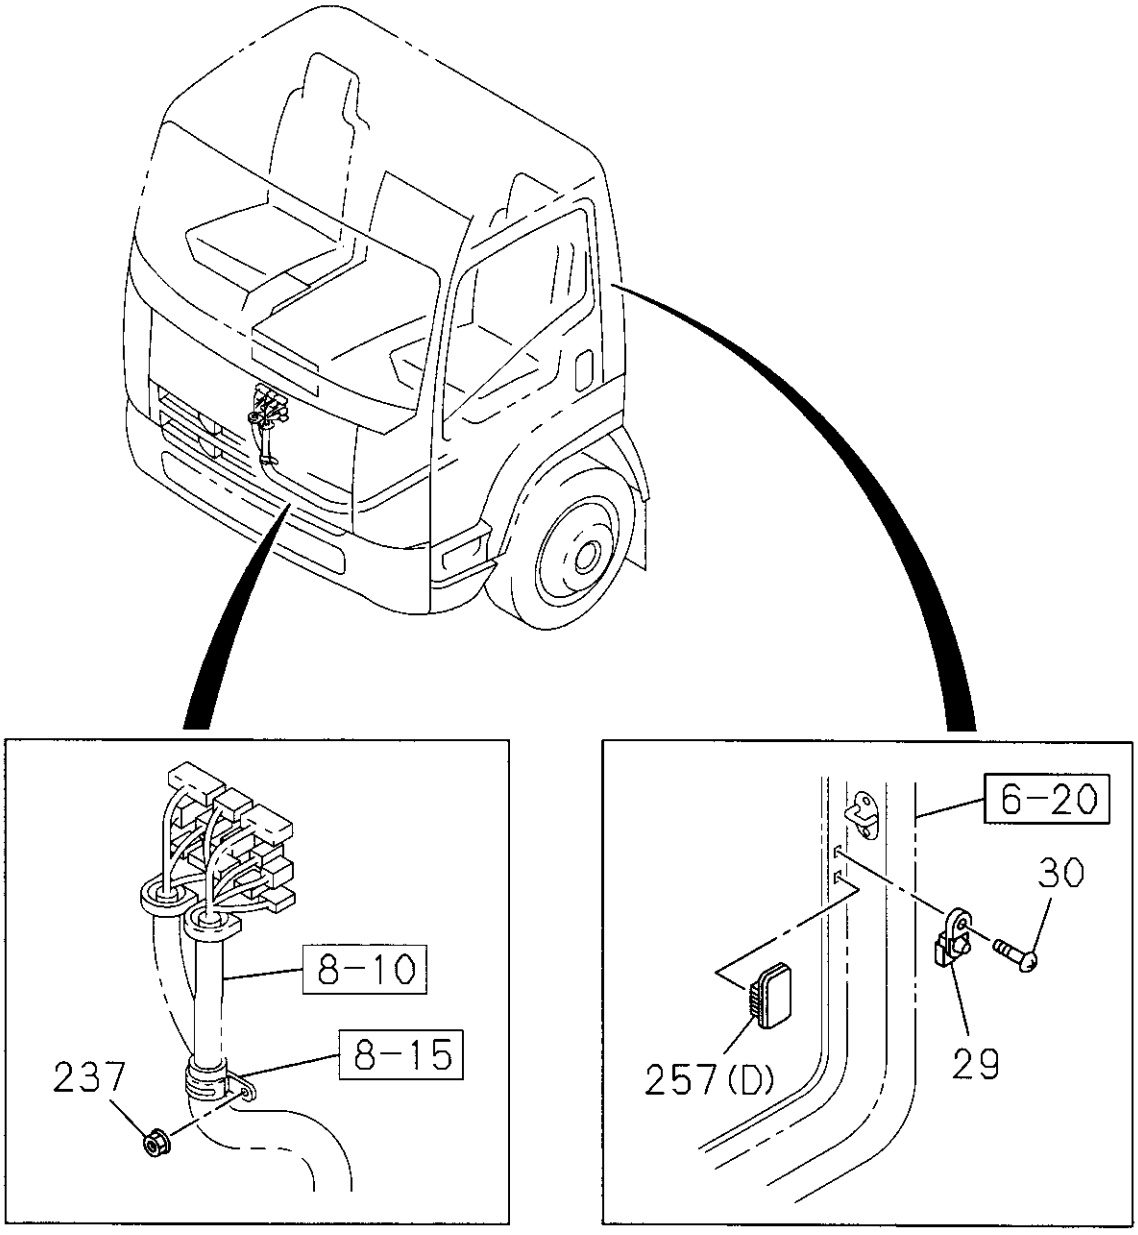

https://truckmanualshub.com/

SWITCH AND RELAY; INSTRUMENT PANEL

RELAY ; CAB HARNESS

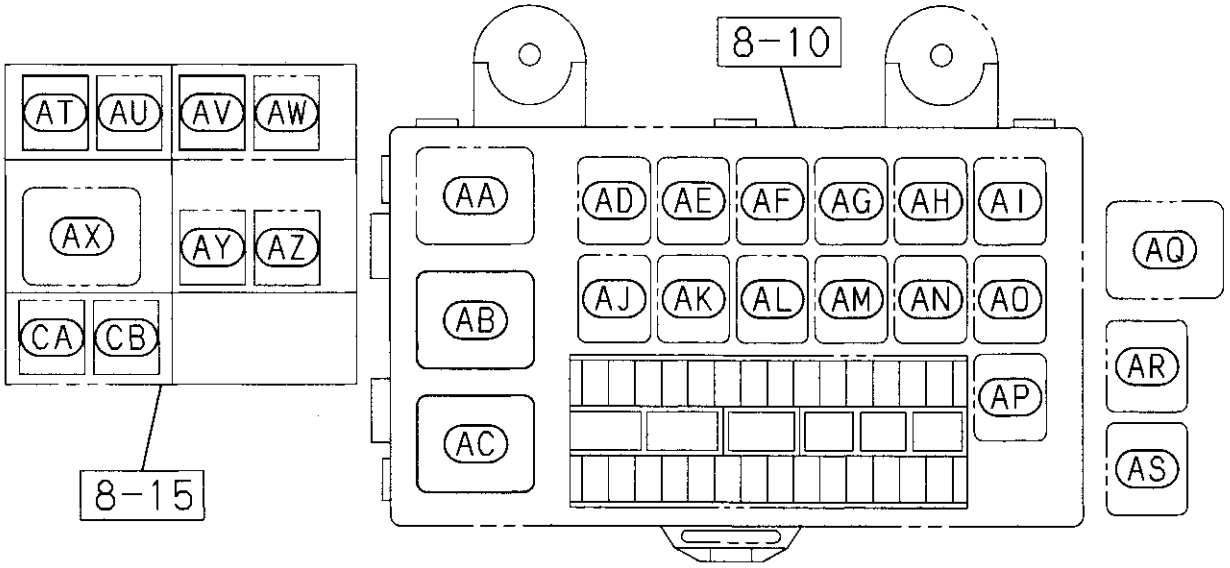

	KEY NO.	RELAY NAME		KEY NO.	RELAY NAME
(AA)	8-28	STOP LAMP	(AS)	—	—
(AB)	317	BLOWER MOTOR, HEATER	(AT)	606	PTO MAIN
(AC)	610	KEY ON	(AU)	—	—
(AD)	8-10	DOOR LOCK (LOCK)	(AV)	606	PTO MAIN
(AE)	—	—	(AW)	—	—
(AF)	8-10	WIPER MAIN	(AX)	—	—
(AG)	8-10	HORN	(AY)	—	—
(AH)	8-10	WIPER (HI/LOW)	(AZ)	—	—
(AI)	—	—	(CA)	—	—
(AJ)	—	—	(CB)	—	—
(AK)	8-10	DOOR LOCK (UNLOCK)			
(AL)	—	—			
(AM)	8-10	HEAD LAMP (LOW)			
(AN)	8-10	ENG RUN			
(AO)	8-10	HEAD LAMP (HIGH)			
(AP)	8-10	TAIL			
(AQ)	—	—			
(AR)	—	—			

https://truckmanualshub.com/

8-25 SWITCH AND RELAY; INSTRUMENT PANEL

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	
						A LEAF SUS(FCR5CS)	
1	--- SWITCH; COMB						
	8-98060-302-1		1103-		01	A	
3	--- SCREW; COMB SW						
	8-98061-743-0		1103-		02	A	M5X20 W/PL WASHER&TORQUES
21	--- SWITCH; CLU						
	8-94337-761-0		1103-		01	A	TRANSMISSION SIDE PTO W/O LEVER(SH5)
	8-97358-248-0		1103-		01	A	EXC. TRANSMISSION SIDE PTO W/O LEVER(SH5)
29	--- SWITCH; DOOR						
	8-98022-211-0		1103-		01	A	BLACK
30	--- SCREW; DOOR SW						
	8-98047-201-0		1103-		01	A	M5X18
77	--- SWITCH; PTO						
	8-97615-488-1		1103-		01	A	TRANSMISSION SIDE PTO W/O LEVER(SH5)
104	--- COVER; SW HOLE, FOG LAMP						
	8-98025-954-1		1103-		01	A	
237	--- NUT						
	0-91180-108-0		1103-		01	A	M8 FLANGE
249	--- SWITCH; HAZARD						
	8-97386-922-1		1103-		01	A	
253	--- COVER; SW HOLE						
	8-98025-954-1		1103-		01	A	
	8-98025-954-1		1103-		03	A	
257	--- COVER; HOLE, SW						
	8-98025-954-1		1103-		09	A	(C)
	8-98029-914-1		1103-		01	A	(B)
	8-98029-917-0		1103-		01	A	(D)
	8-98070-401-2		1103-		01	A	(A)


https://truckmanualshub.com/


SWITCH AND RELAY; INSTRUMENT PANEL


KEY NO.	RECOMMEND CLASS／PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
257	--- COVER; HOLE, SW					
	8-98025-954-1		1103-		01	A EXC. TRANSMISSION SIDE PTO W/O LEVER(SH5) (C)
317	--- RELAY; BLOWER MOTOR, HTR					
	8-97262-933-0		1103-		01	A 24V 12.5A MATSUSHITA
606	--- RELAY; PTO MAIN					
	8-97173-035-1		1103-		01	A TRANSMISSION SIDE PTO W/O LEVER(SH5) A TRANSMISSION SIDE PTO W/O LEVER(SH5) 24V 10A MATSUSHITA IDN
610	--- RELAY; KEY ON					
	8-97262-933-0		1103-		01	A 24V 12.5A MATSUSHITA

https://truckmanualshub.com/

FIG-NO. FRONT SIDE NO. 1

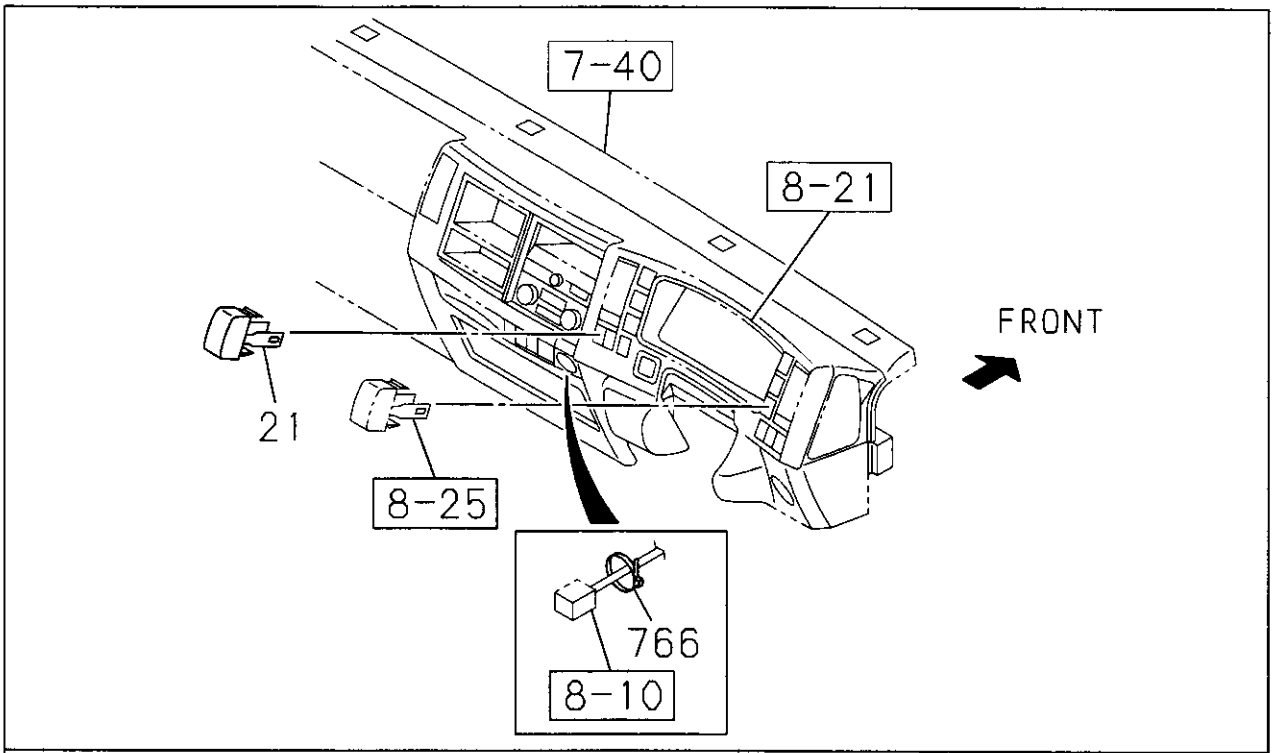


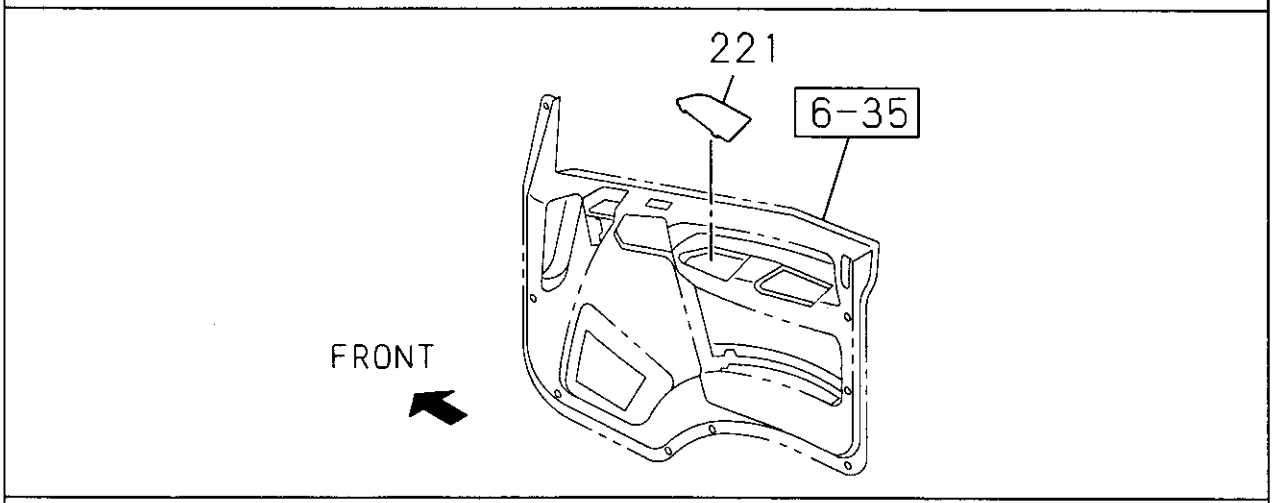


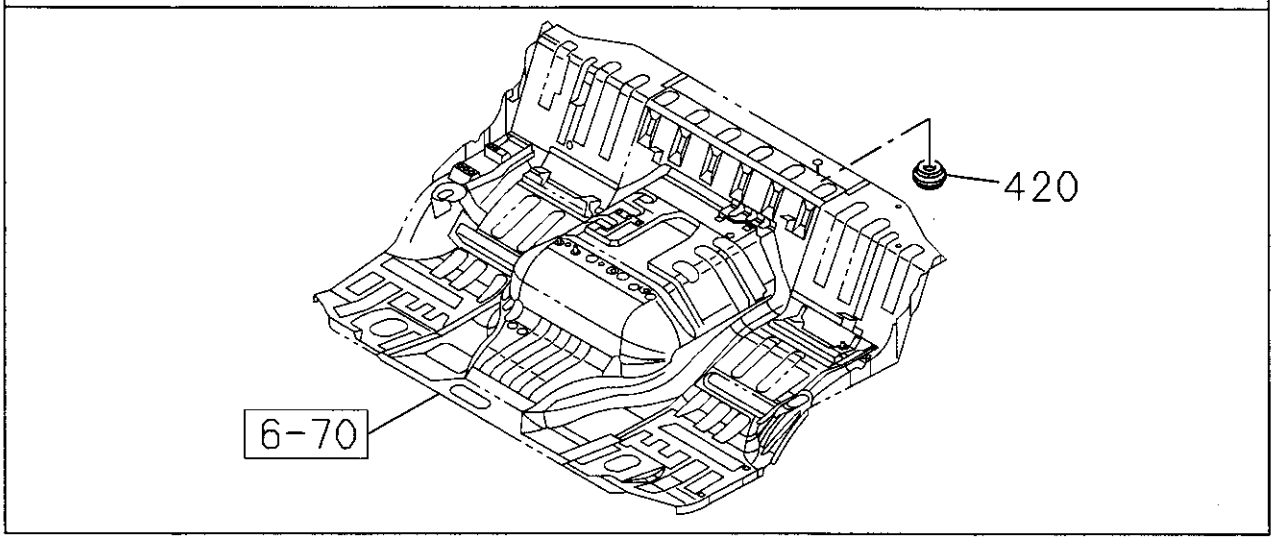

https://truckmanualshub.com/


FRONT SIDE NO. 2

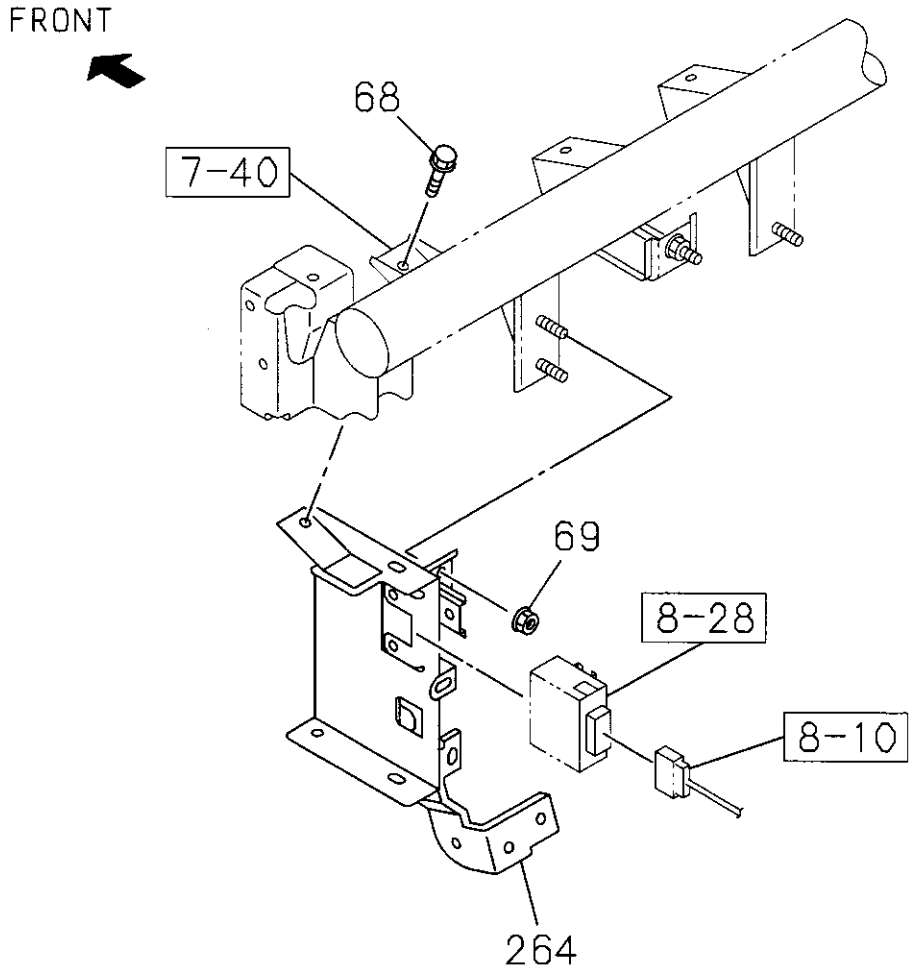


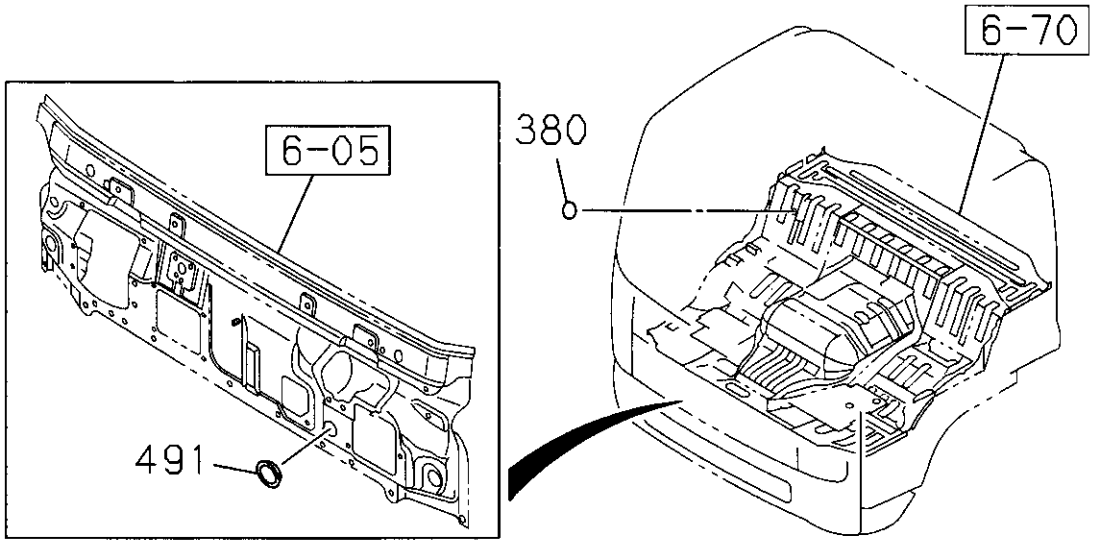

https://truckmanualshub.com/

FIG-NO. SENSOR ; VEHICLE SPEED, CRANK ANGLE

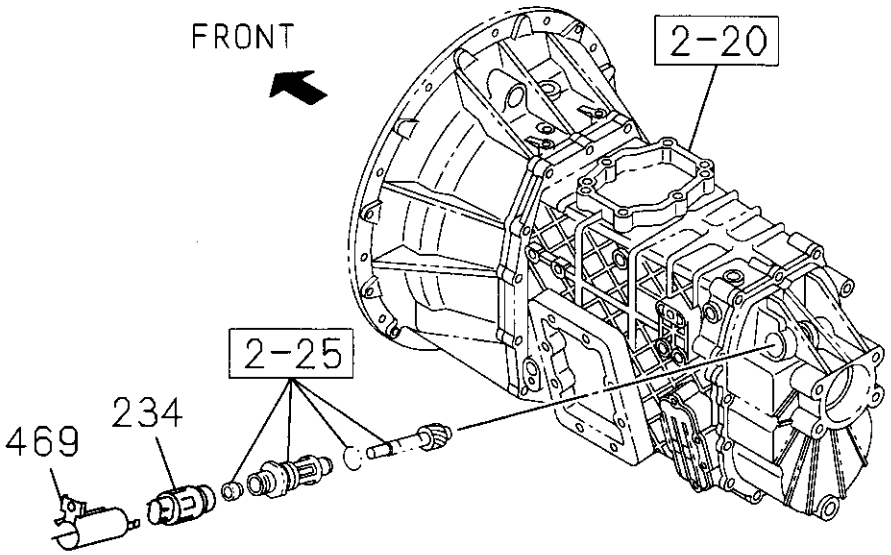

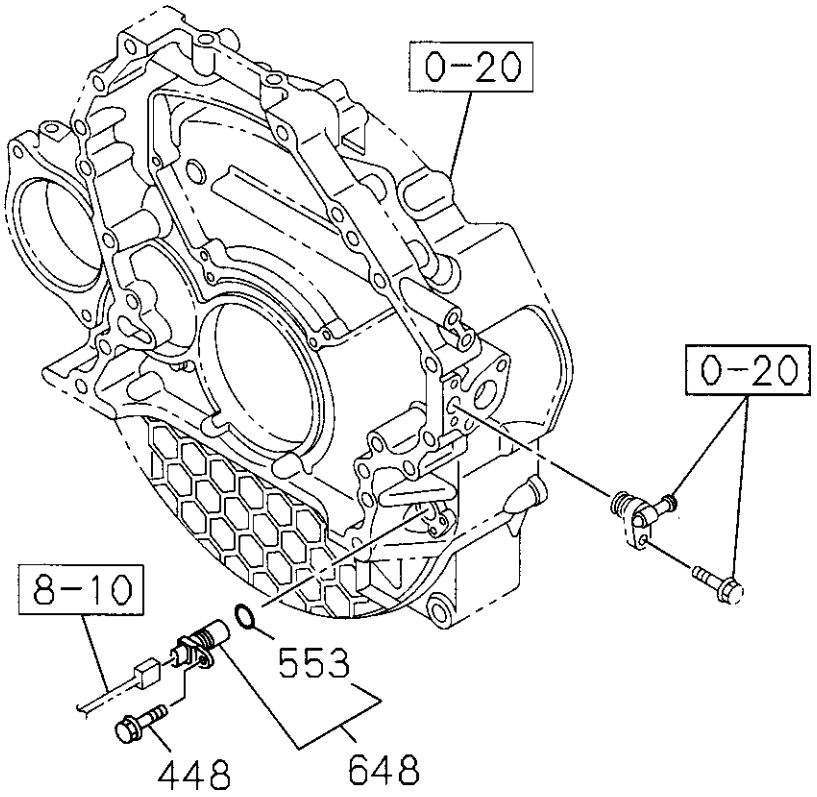

https://truckmanualshub.com/

ELECTRICAL CONTROL AND OTHER PARTS

KEY NO.	RECOMMEND CLASS / PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
21	--- COVER; HOLE					
	8-98025-954-1		1103-		01	A
68	--- BOLT; BRKT					
	0-28650-616-0		1103-		01	A M6X16 FLANGE
69	--- NUT; BRKT					
	0-91180-106-0		1103-		01	A M6 FLANGE
221	--- COVER; HOLE, DOOR LOCK SW					
	8-98029-915-2		1103-	R	01	A
	8-98029-916-2		1103-	L	01	A
234	--- SENSOR; VEHICLE SPD					
	8-97328-058-1		1103-		01	A 25 PULSE ALUMINUM
264	--- BRACKET; CONT UNIT					
	8-97609-985-9		1103-		01	A
380	--- SEAL					
	1-76798-019-0		1103-		01	A OD=25 BLACK
420	--- PLUG; SWITCH					
	8-94122-971-0		1103-		01	A OD=35 IDN
448	--- BOLT; SENSOR					
	0-28050-616-0		1103-		01	A M6X16 FLANGE IDN
469	--- PROTECTOR; SPEED SENSOR					
	8-98119-901-0		1103-		01	A
491	--- PLUG; HOLE, CONT UNIT					
	8-98054-651-0		1103-		01	A
553	--- GASKET					
	8-97369-404-0		1103-		01	A


https://truckmanualshub.com/


FIG-NO.


KEY NO.	RECOMMEND CLASS／PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
648	--- SENSOR; CRANK ANGLE					
	8-97606-943-0		1103-		01	A
766	--- BAND; CLIP					
	5-09707-031-1		1103-		01	A L=140 IDN

https://truckmanualshub.com/


FIG-NO. FRONT SIDE

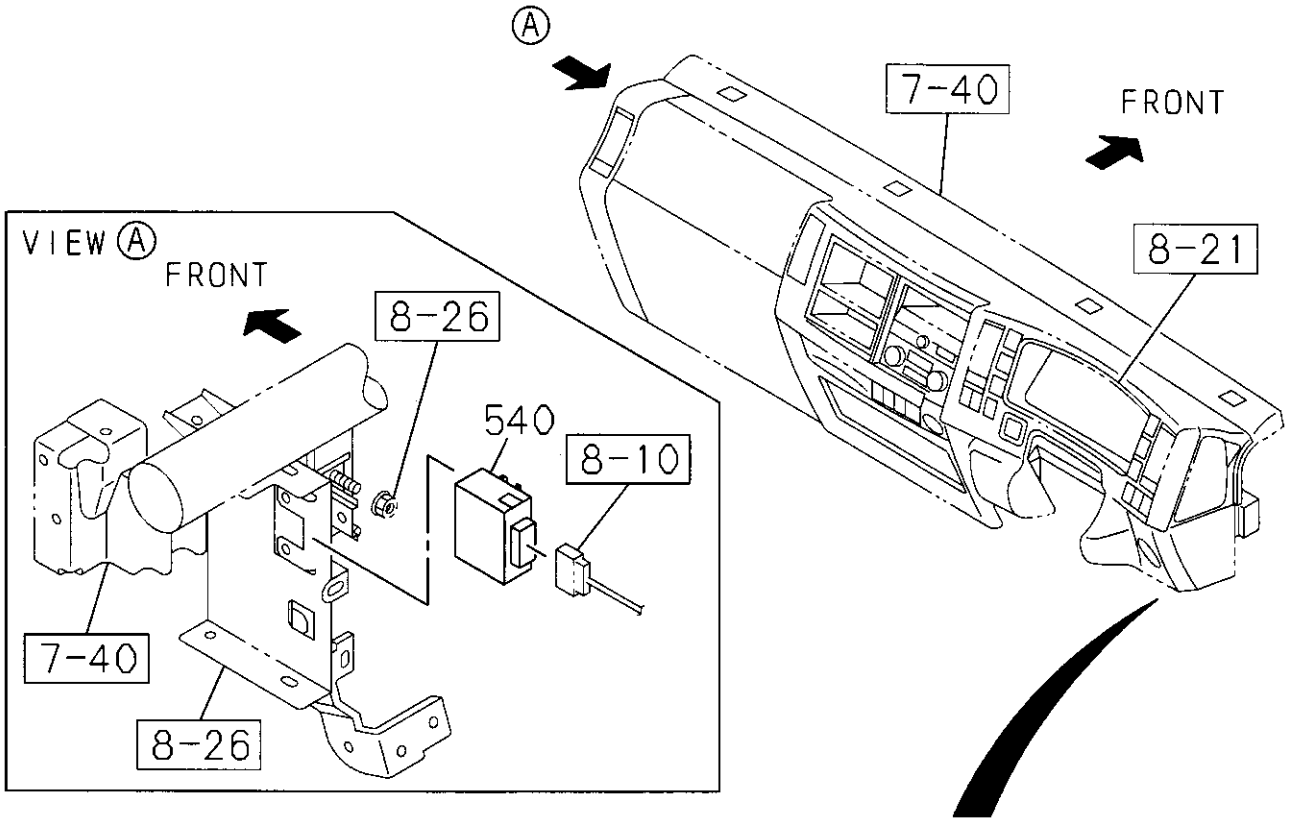


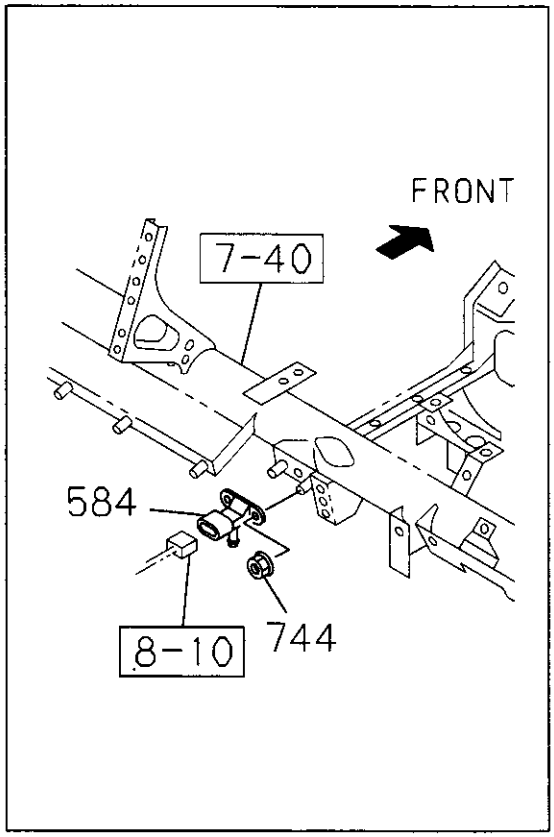

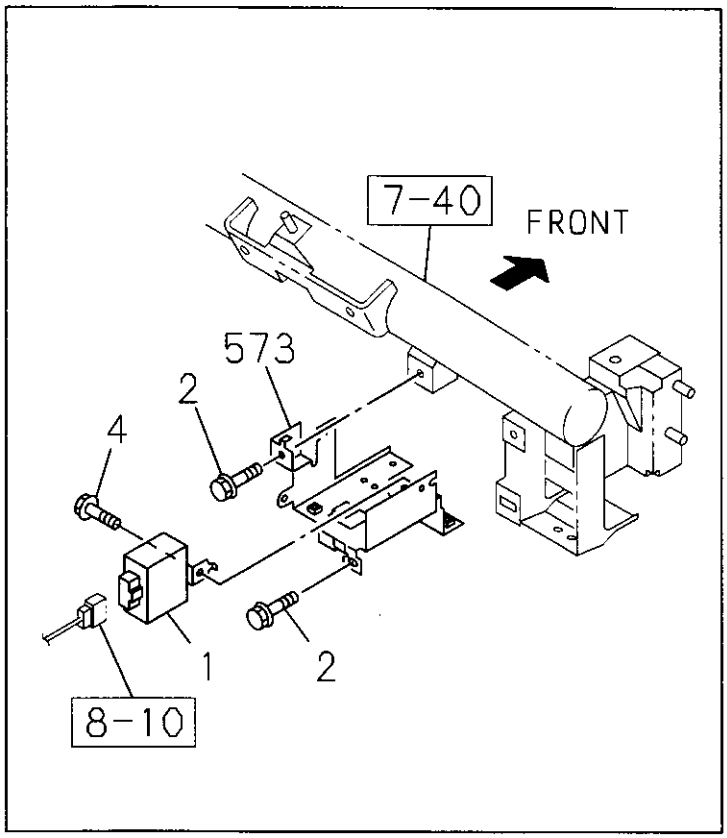


https://truckmanualshub.com/

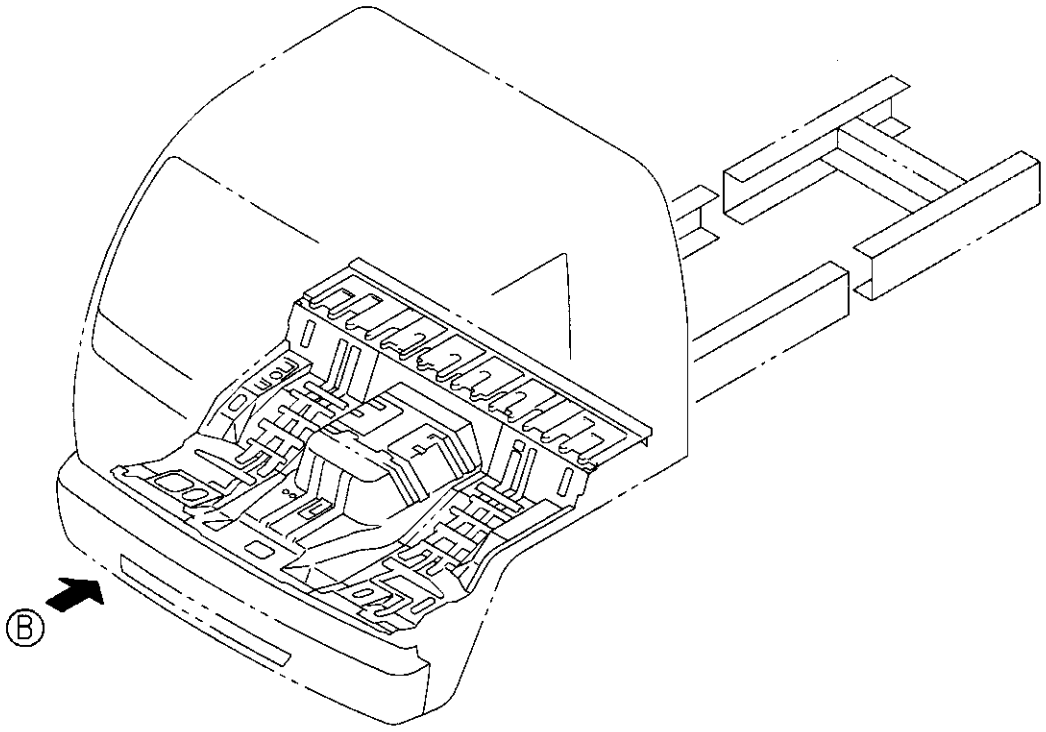

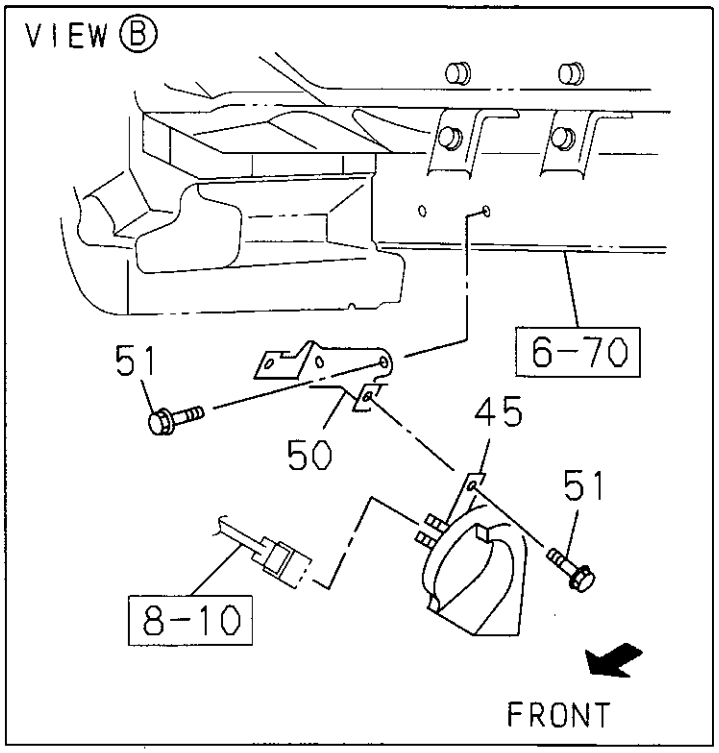


https://truckmanualshub.com/

FIG-NO. VALVE ; PTO

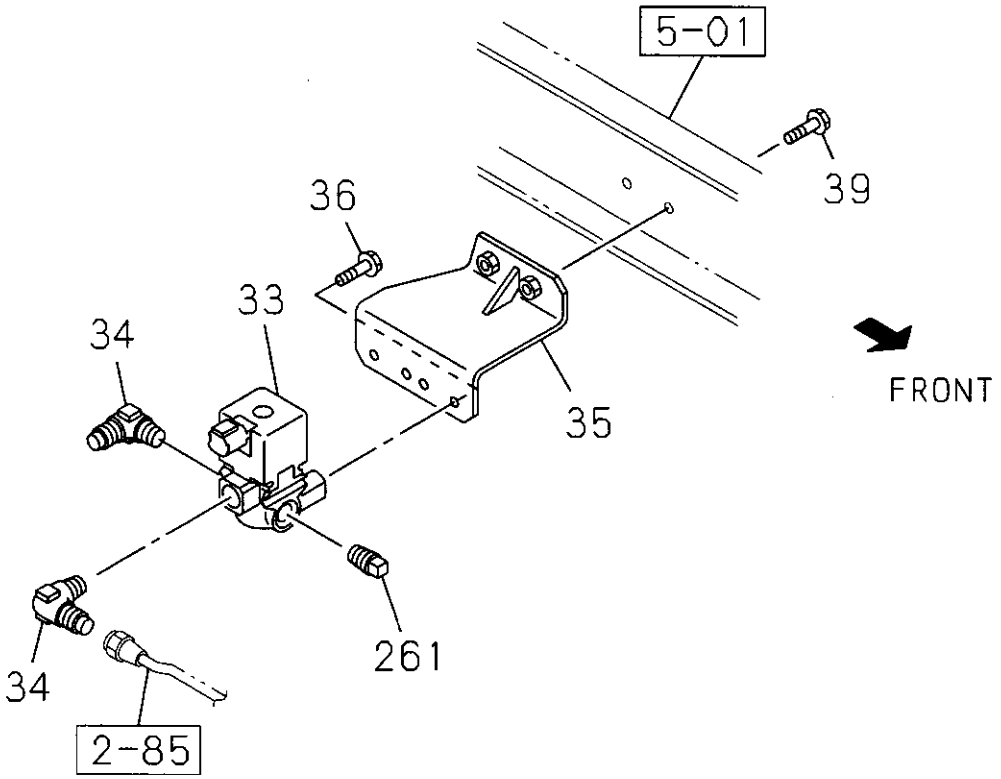

https://truckmanualshub.com/

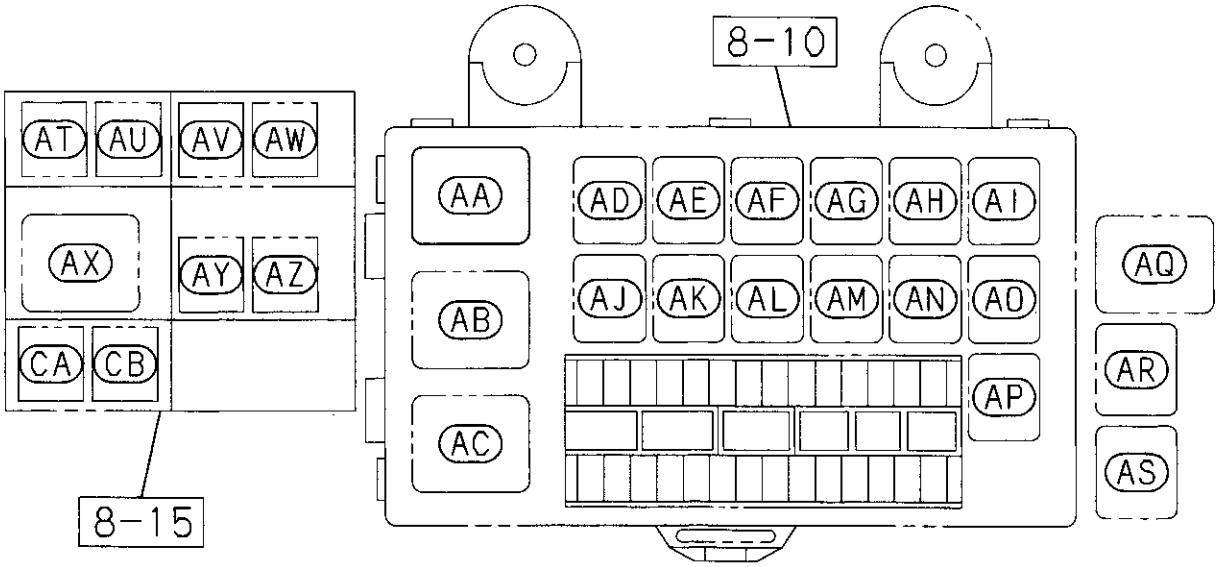


	KEY NO.	RELAY NAME
AA	22	STOP LAMP
AB	8-25	BLOWER MOTOR, HEATER
AC	8-25	KEY ON
AD	8-10	DOOR LOCK (LOCK)
AE	—	—
AF	8-10	WIPER MAIN
AG	8-10	HORN
AH	8-10	WIPER (HI/LOW)
AI	—	—
AJ	—	—
AK	8-10	DOOR LOCK (UNLOCK)
AL	—	—
AM	8-10	HEAD LAMP (LOW)
AN	8-10	ENG RUN
AO	8-10	HEAD LAMP (HIGH)
AP	8-10	TAIL
AQ	—	—
AR	—	—

	KEY NO.	RELAY NAME
AS	—	—
AT	8-25	PTO MAIN
AU	—	—
AV	8-25	PTO MAIN
AW	—	—
AX	—	—
AY	—	—
AZ	—	—
CA	—	—
CB	—	—

https://truckmanualshub.com/

FIG-NO. RELAY ; FRAME HARNESS

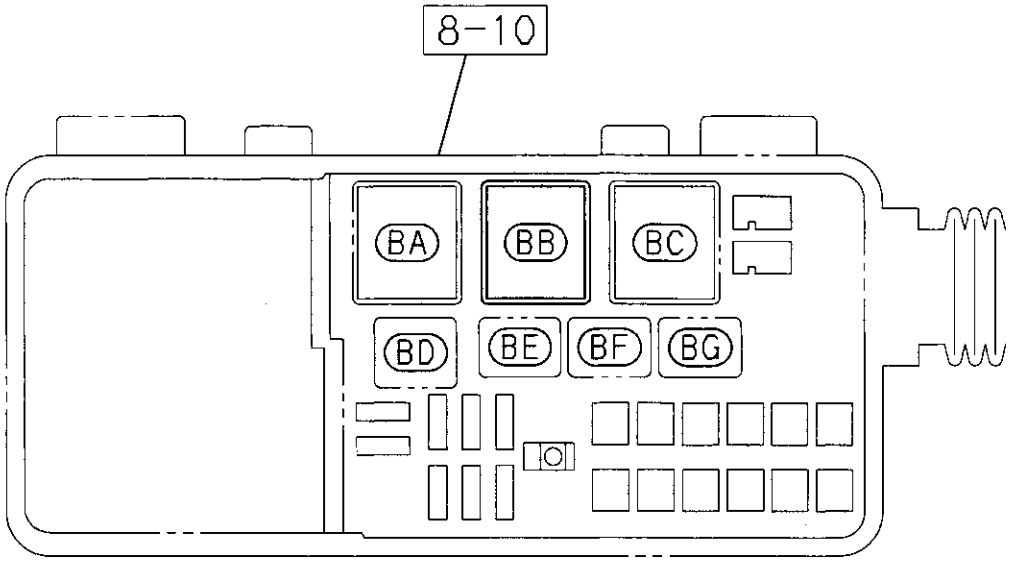

	KEY NO.	RELAY NAME
BA	0-60	STARTER
BB	531	MAIN
BC	—	—
BD	—	—
BE	—	—
BF	0-60	STARTER
BG	—	—

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
1	-B- UNIT; FLASHER	8-98025-533-1		1103-		01	A
2	--- BOLT; FLASHER UNIT	0-28650-616-0		1103-		02	A M6X16 FLANGE
4	--- SCREW; FLASHER UNIT	0-28650-616-0		1103-		01	A M6X16 FLANGE
22	--- RELAY; STOP LAMP	8-97262-933-0		1103-		01	A 24V 12.5A MATSUSHITA
33	--- VALVE; MAG, PTO CONT	1-82563-871-2		1103-		01	A PTO CONTROL<SV6>
34	--- CONNECTOR; MAG VLV, INL PORT	1-09650-430-0		1103-		02	A PTO CONTROL<SV6> M12 & PT1/4 ELBOW
35	--- BRACKET; MAG VLV, PTO CONT	8-98034-702-0		1103-		01	A PTO CONTROL<SV6>
36	--- BOLT; MAG VLV, PTO CONT	0-28650-820-0		1103-		02	A PTO CONTROL<SV6> M8X20 FLANGE IDN
39	--- BOLT; BRKT, MAG VLV	0-28651-025-0		1103-		02	A PTO CONTROL<SV6> M10X25 FLANGE IDN
45	--- HORN; LOW NOTE	7-43600 341-A		1103-		01	A
50	--- BRACKET; HORN	8-97613-300-2		1103-		01	A
51	--- BOLT; HORN TO BRKT	8-97086-825-0		1103-		03	A M8X20 W/LK&PL WASHER IDN

https://truckmanualshub.com/


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS
						A	LEAF SUS(FCR5CS)
261	--- PLUG; MAG VLV						
	9-99204-513-0		1103-		01	A	PTO CONTROL<SV6> PT1/4
531	--- RELAY; MAIN						
	8-97238-540-0		1103-		01	A	24V 30A JIDECO
540	--- RELAY; WIPER INTERVAL						
	8-98060-388-0		1103-		01	A	
573	--- BRACKET; FLASHER UNIT						
	8-97609-984-4		1103-		01	A	
584	--- SENSOR; PRESSURE						
	8-98020-514-0		1103-		01	A	
744	--- NUT; SENSOR						
	0-91180-106-0		1103-		02	A	M6 FLANGE


https://truckmanualshub.com/

8-40 HEATER SYSTEM

FIG-NO. DUCT

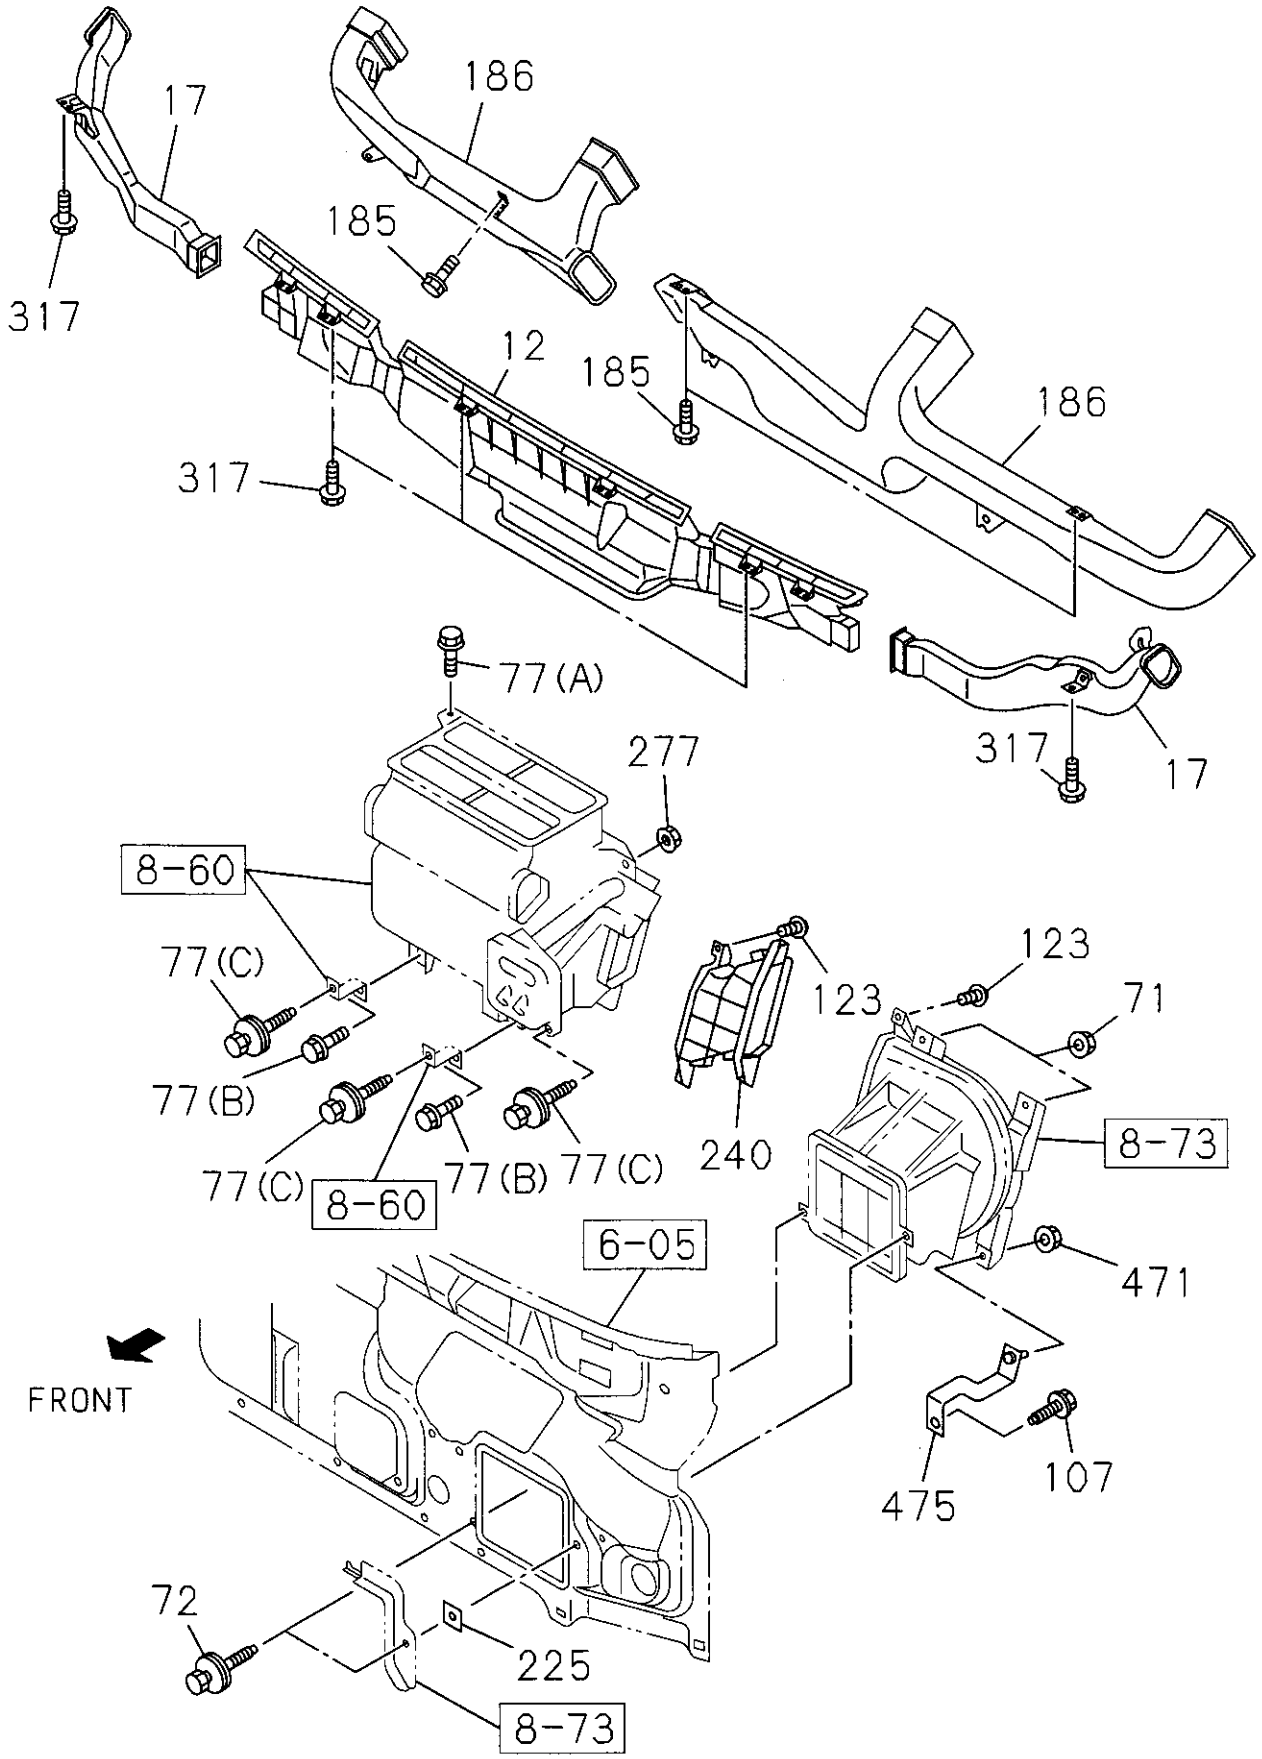

https://truckmanualshub.com/

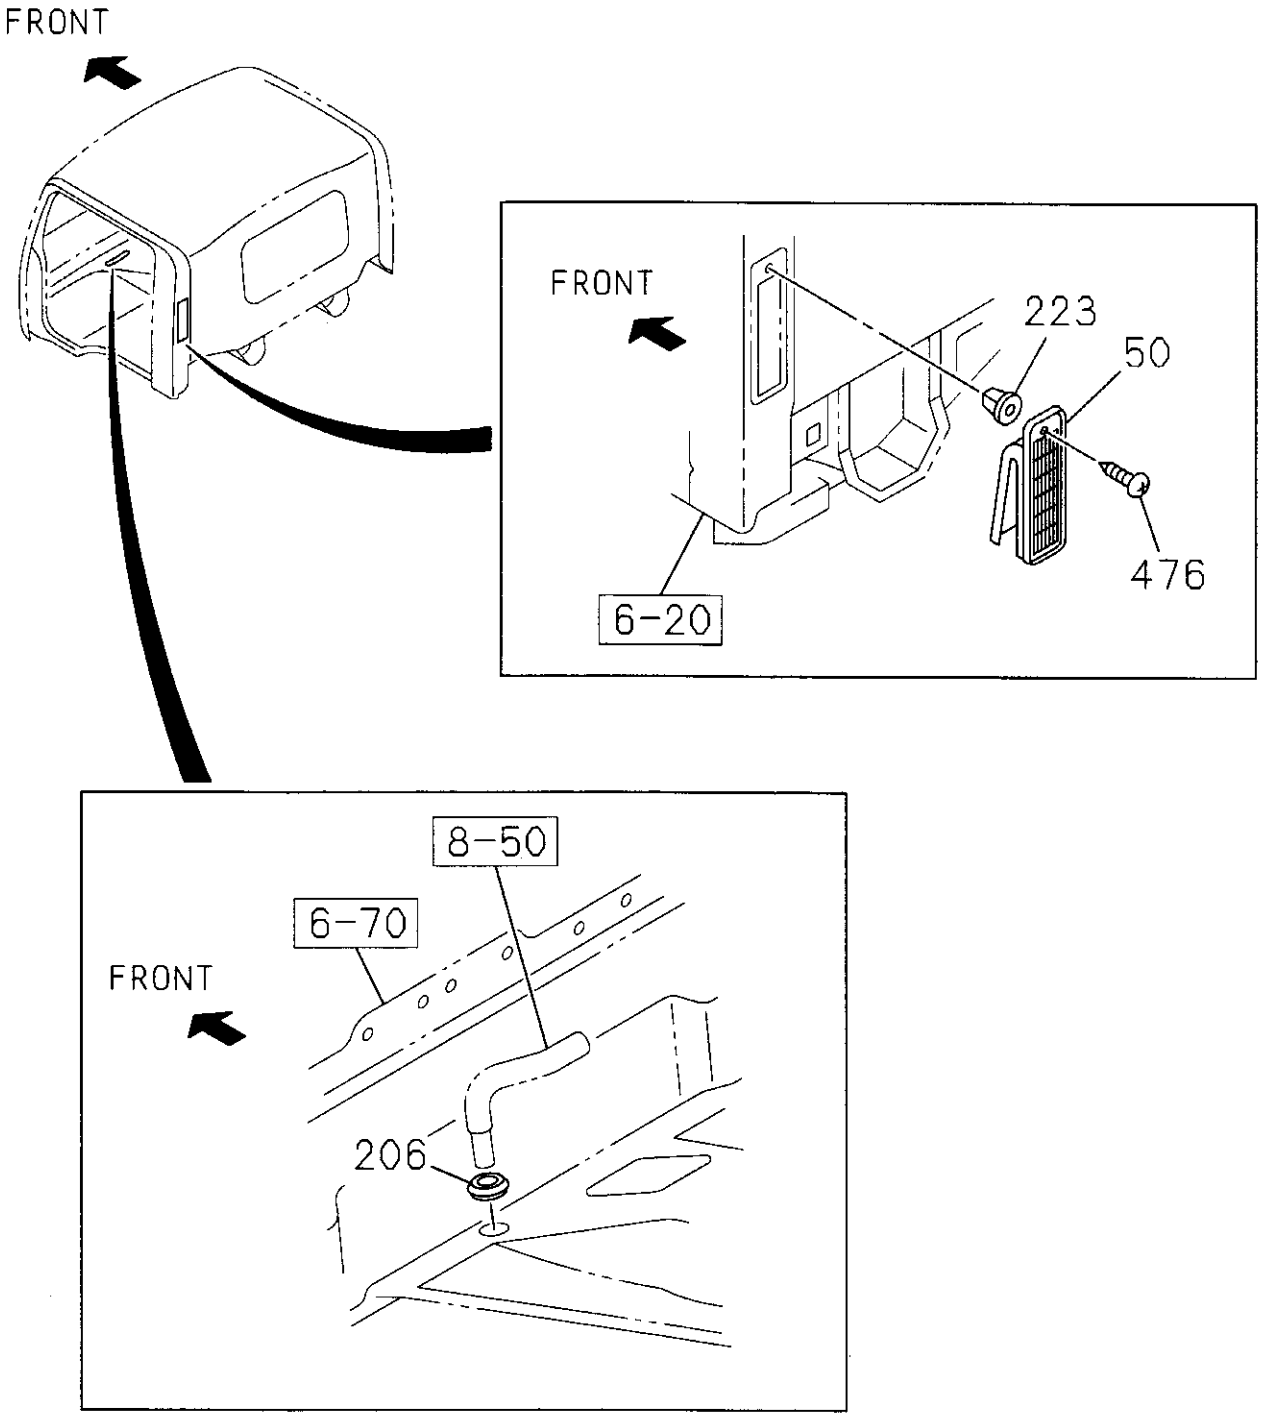

https://truckmanualshub.com/

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
12	--- NOZZLE; DEFROSTER					
	8-98040-009-3		1103-		01	A
17	--- NOZZLE; DEFROSTER, SIDE					
	8-98040-016-1		1103-	L	01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
	8-98040-011-1		1103-	R	01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
50	--- VALVE ASM; HTR					
	8-98080-998-1		1103-		01	A
71	--- NUT; BLOWER UNIT TO DASH					
	0-91180-106-0		1103-		02	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M6 FLANGE
72	--- BOLT; BLOWER UNIT					
	8-98081-175-0		1103-		02	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M6X20 W/LK&PL WASHER
77	--- BOLT; HTR UNIT					
	0-28650-616-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (A) M6X16 FLANGE
	0-28650-620-0		1103-		02	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (B) M6X20 FLANGE IDN
	8-98081-175-0		1103-		03	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (C) M6X20 W/LK&PL WASHER
107	--- BOLT; STAY, HTR UNIT					
	8-98018-439-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M8X25 W/LK&PL WASHER
123	--- SCREW; DUCT					
	0-72180-516-0		1103-		04	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M5X16 TAPPING
185	--- SCREW; VENT DUCT					
	0-72180-516-0		1103-		04	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M5X16 TAPPING
186	--- DUCT; VENTILATOR					
	8-97585-488-4		1103-	L	01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
	8-98174-737-0		1103-	R	01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>


https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
206	--- GROMMET; A/C PIPE TO BLOWER UNIT					
	8-98019-649-0		1103-		01	A
223	--- GROMMET; SCREW					
	8-94441-539-0		1103-		01	A D=7.9X7.9 L=20 M5
225	--- SEAL; WATER					
	8-97856-616-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> IDN
240	--- DUCT; AIR, HTR					
	8-98041-402-1		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
277	--- NUT; HTR					
	0-91180-106-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M6 FLANGE
317	--- SCREW; DEFROSTER NOZZLE					
	0-72180-516-0		1103-		06	A M5X16 TAPPING
	0-72180-516-0		1103-		02	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M5X16 TAPPING
471	--- NUT; BLOWER					
	0-91180-106-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M6 FLANGE
475	--- BRACKET; BLOWER					
	8-98043-500-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
476	--- SCREW; VALVE					
	8-98062-675-0		1103-		01	A M5X16 HEX SOCKET

https://truckmanualshub.com/

8-45 HEATER PIPING

FIG-NO.

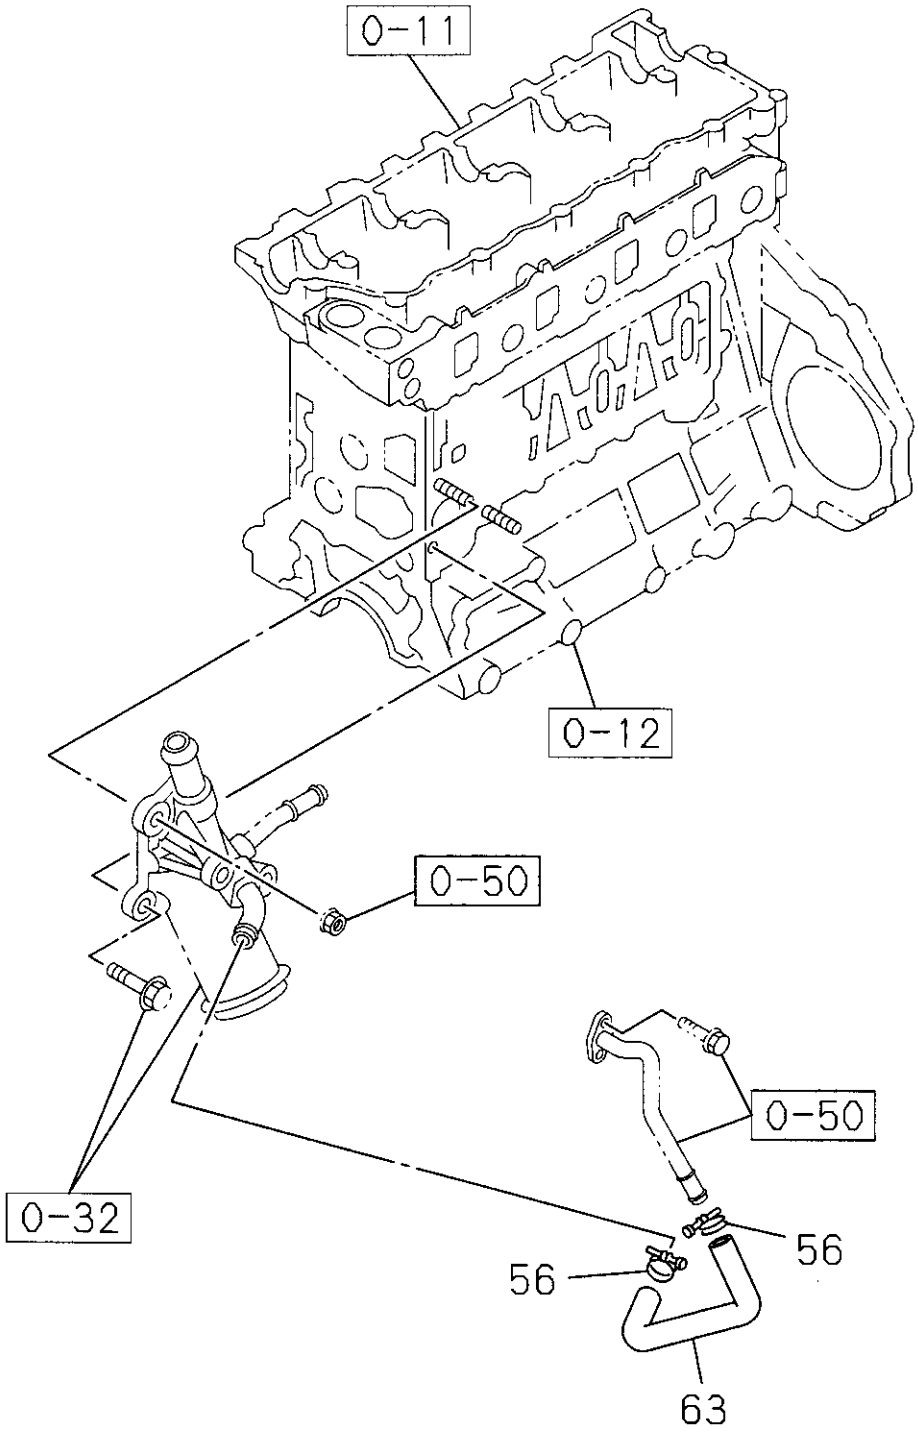


https://truckmanualshub.com/


HEATER PIPING

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
56	--- CLAMP; HTR HOSE					
	8-94233-115-0		1103-		02	A ID=25
63	--- HOSE; WATER					
	8-94134-250-1		1103-		01	A

https://truckmanualshub.com/

FIG-NO.

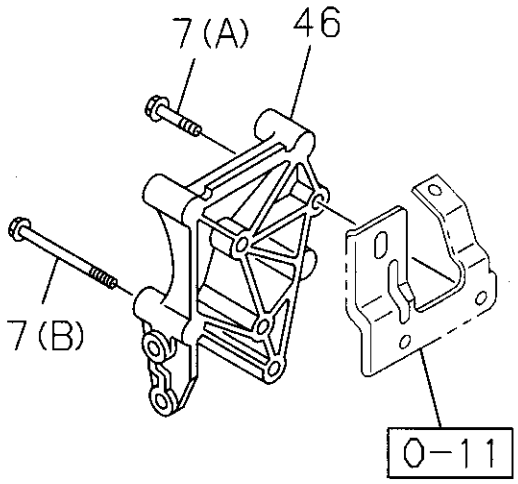

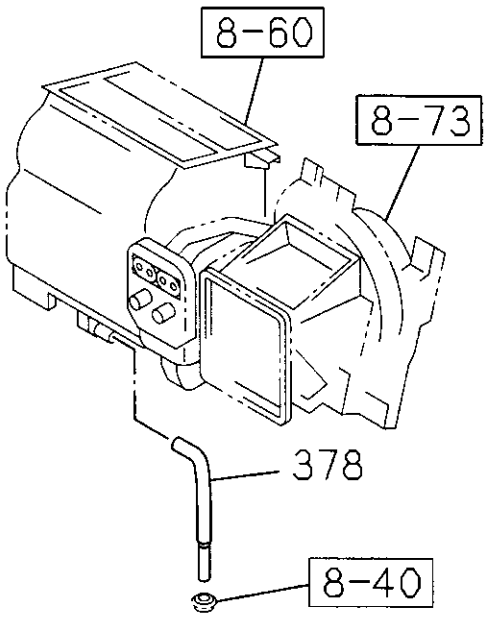


https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
7	--- BOLT; BRKT					
	0-28151-045-0		1103-		02	A (A) M10X45 FLANGE
	0-28151-080-0		1103-		02	A (B) M10X80 FLANGE
46	--- BRACKET; CMPR					
	8-98101-364-0		1103-		01	A
378	--- HOSE; DRAIN, EVAPORATOR					
	8-98041-428-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>

https://truckmanualshub.com/

8-60 HEATER UNIT; FRONT

FIG-NO.

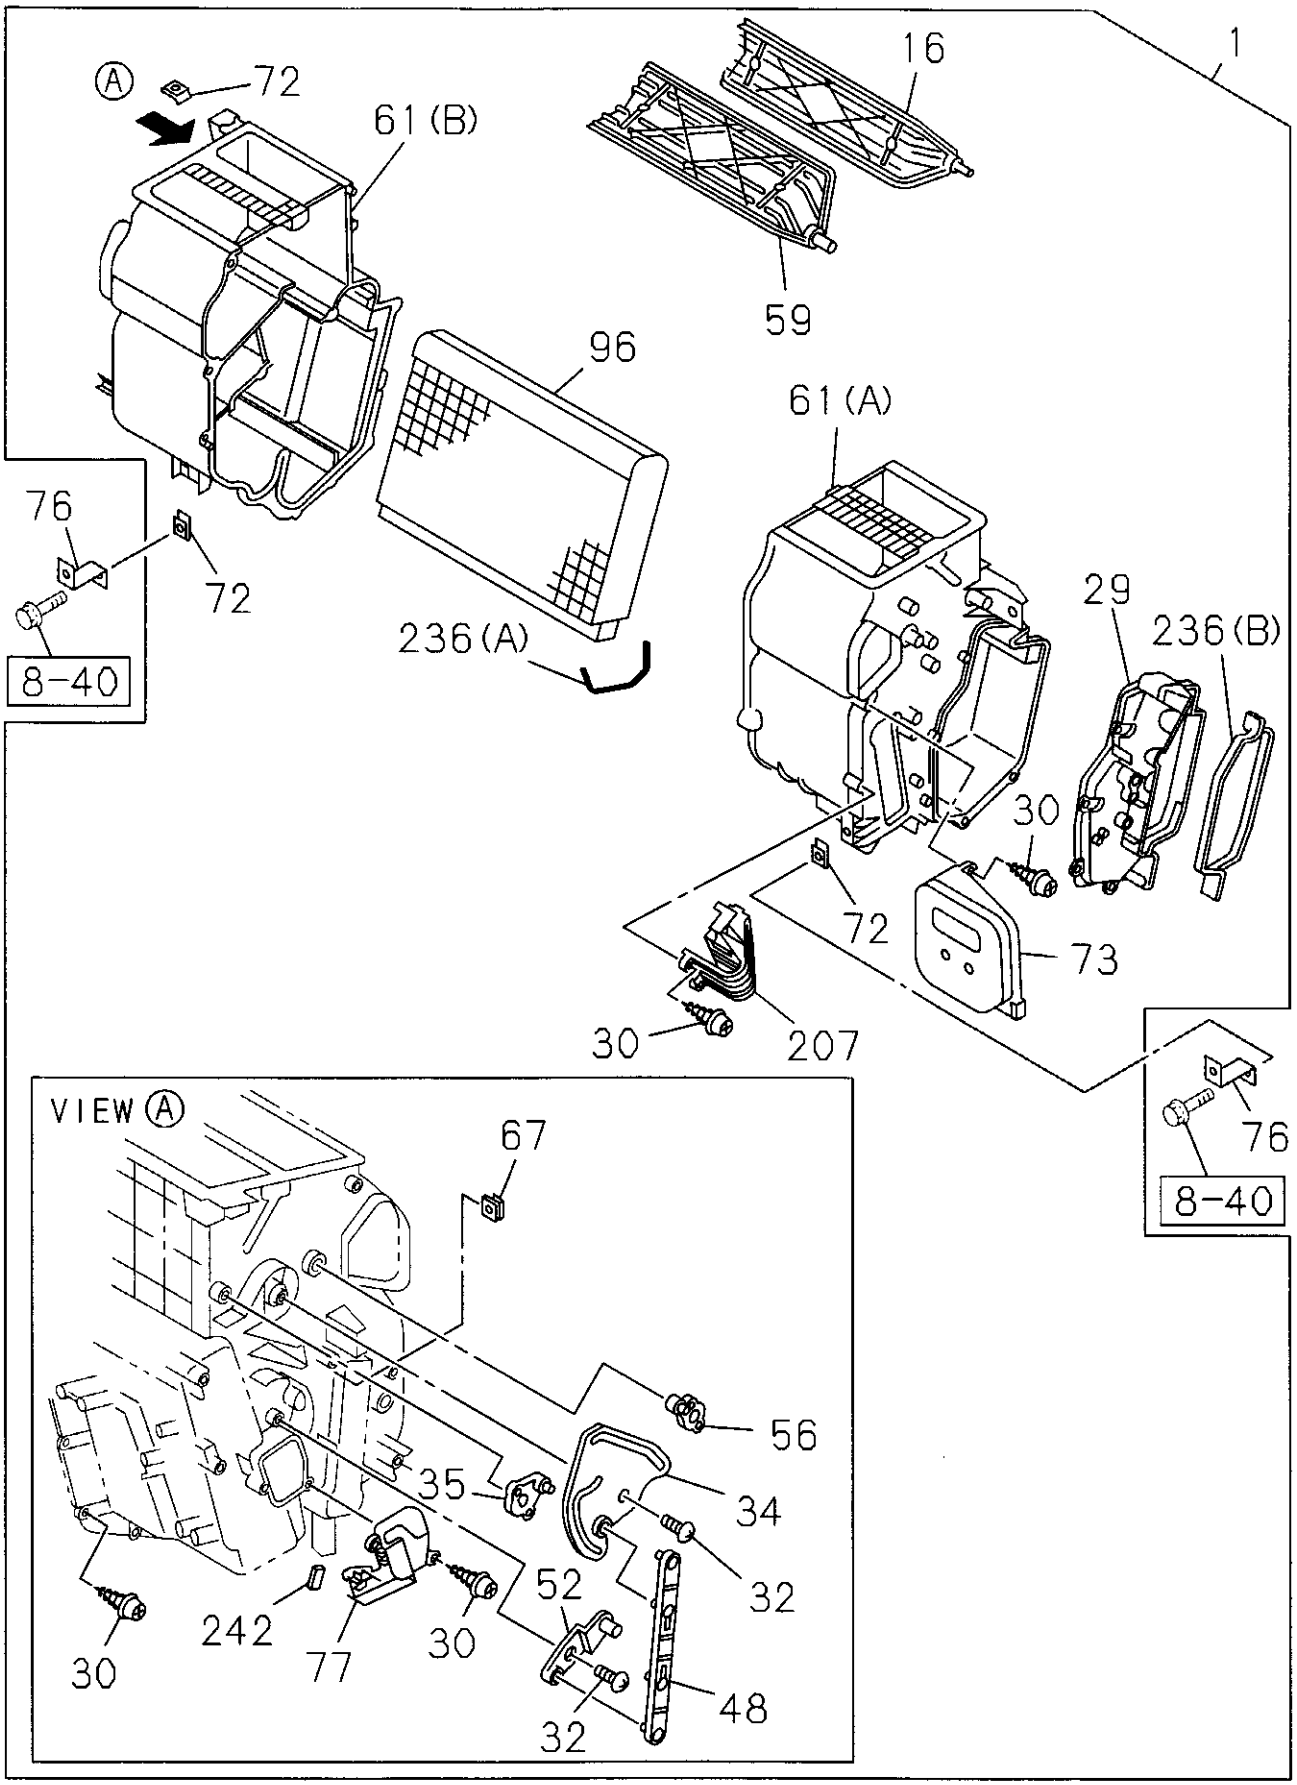

https://truckmanualshub.com/

HEATER UNIT; FRONT

8-60

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	--- HEATER UNIT					
	8-98062-757-1		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
16	--- SHUTTER; HTR UNIT, CENTER UPR					
	8-98047-387-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
29	--- COVER; HTR UNIT					
	8-98074-119-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
30	--- SCREW; HTR UNIT					
	8-97957-708-0		1103-		25	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M4X16 TAPPING IDN
32	--- SCREW; HTR UNIT					
	8-98047-416-0		1103-		02	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M4X16
34	--- LEVER; SHUTTER, HTR UNIT					
	8-98047-389-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
35	--- LEVER; SHUTTER, HTR UNIT					
	8-98047-392-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
48	--- LEVER; HTR UNIT					
	8-98047-391-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
52	--- LEVER; SHUTTER, HTR UNIT					
	8-98047-390-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
56	--- LEVER; SHUTTER, HTR UNIT					
	8-98047-393-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
59	--- SHUTTER; HTR UNIT, SIDE					
	8-98047-386-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
61	--- CASE; HTR UNIT					
	8-98077-422-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (A)
	8-98077-423-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (B)
67	--- CLIP; HTR UNIT					
	8-98047-417-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>

https://truckmanualshub.com/

8-60 HEATER UNIT; FRONT


FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY		APPLIED MODEL / RESTRICTION / REMARKS
							A LEAF SUS(FCR5CS)
72	--- NUT; CASE, HTR UNIT						
	8-98047-428-0		1103-		03	A	VENTILATOR & DEFROSTER W/O HEATER<SAZ> M6
73	--- PLATE; HTR UNIT						
	8-98077-419-0		1103-		01	A	VENTILATOR & DEFROSTER W/O HEATER<SAZ>
76	--- BRACKET; HTR UNIT						
	8-98009-742-1		1103-		02	A	VENTILATOR & DEFROSTER W/O HEATER<SAZ>
77	--- COVER; HTR CASE						
	8-98047-414-0		1103-		01	A	VENTILATOR & DEFROSTER W/O HEATER<SAZ>
96	--- PLATE; HTR UNIT						
	8-98048-815-0		1103-		01	A	VENTILATOR & DEFROSTER W/O HEATER<SAZ>
207	--- CLAMP; HTR UNIT						
	8-98047-379-0		1103-		01	A	VENTILATOR & DEFROSTER W/O HEATER<SAZ>
236	--- GASKET; HEATER						
	8-98047-420-0		1103-		01	A	VENTILATOR & DEFROSTER W/O HEATER<SAZ> (A)
	8-98047-421-0		1103-		01	A	VENTILATOR & DEFROSTER W/O HEATER<SAZ> (B)
242	--- GASKET; CASE						
	8-98048-816-0		1103-		01	A	VENTILATOR & DEFROSTER W/O HEATER<SAZ>

https://truckmanualshub.com/

8-65 CONTROL LEVER; HEATER AND AIR CON

FIG-NO.

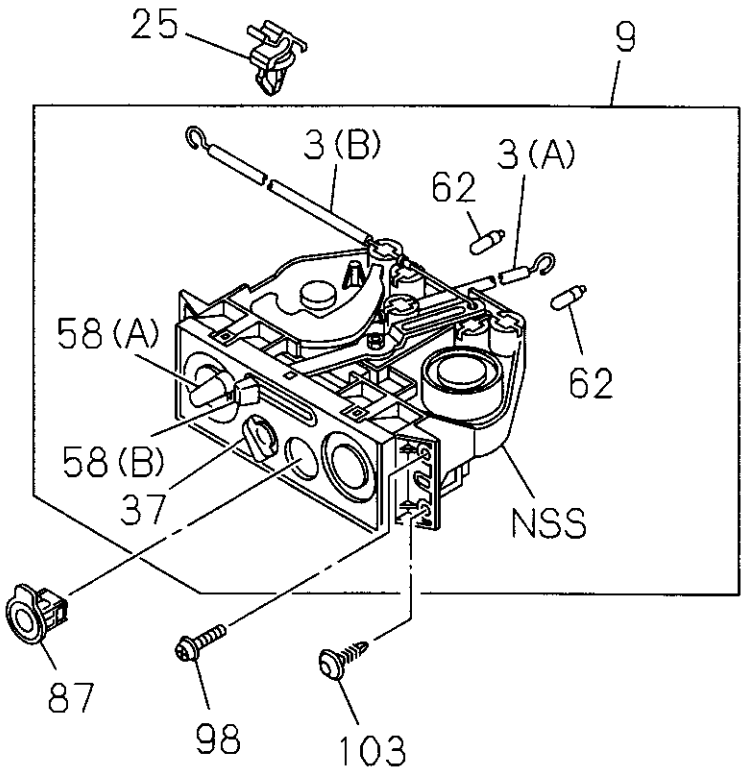

https://truckmanualshub.com/


CONTROL LEVER; HEATER AND AIR CON


KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
3	--- CABLE; HTR CONT LVR					
	8-98041-504-2		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> (B) R/F
	8-98044-176-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> (A) MODE
9	--- LEVER ASM; HTR & A/C CONT					
	8-98062-806-1		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ>
25	--- CLIP; CABLE, CONT LEVER					
	8-94128-483-0		1103-		02	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> ID=4.8
37	--- KNOB; SW, HTR CONT LVR					
	8-98037-368-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ>
58	--- KNOB; LVR, HTR CONT LVR					
	8-98037-369-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> (A)
	8-98037-370-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> (B)
62	--- BULB; HTR CONT LVR					
	8-98037-371-0		1103-		02	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ>
87	--- CAP; A/C SWITCH					
	8-98006-089-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ>
98	--- SCREW; CONT PANEL					
	0-72180-520-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> M5X20 TAPPING
103	--- CLIP					
	8-97098-326-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> DARK GRAY

https://truckmanualshub.com/


8-73 BLOWER UNIT

FIG-NO. COMPONENT AND FILTER

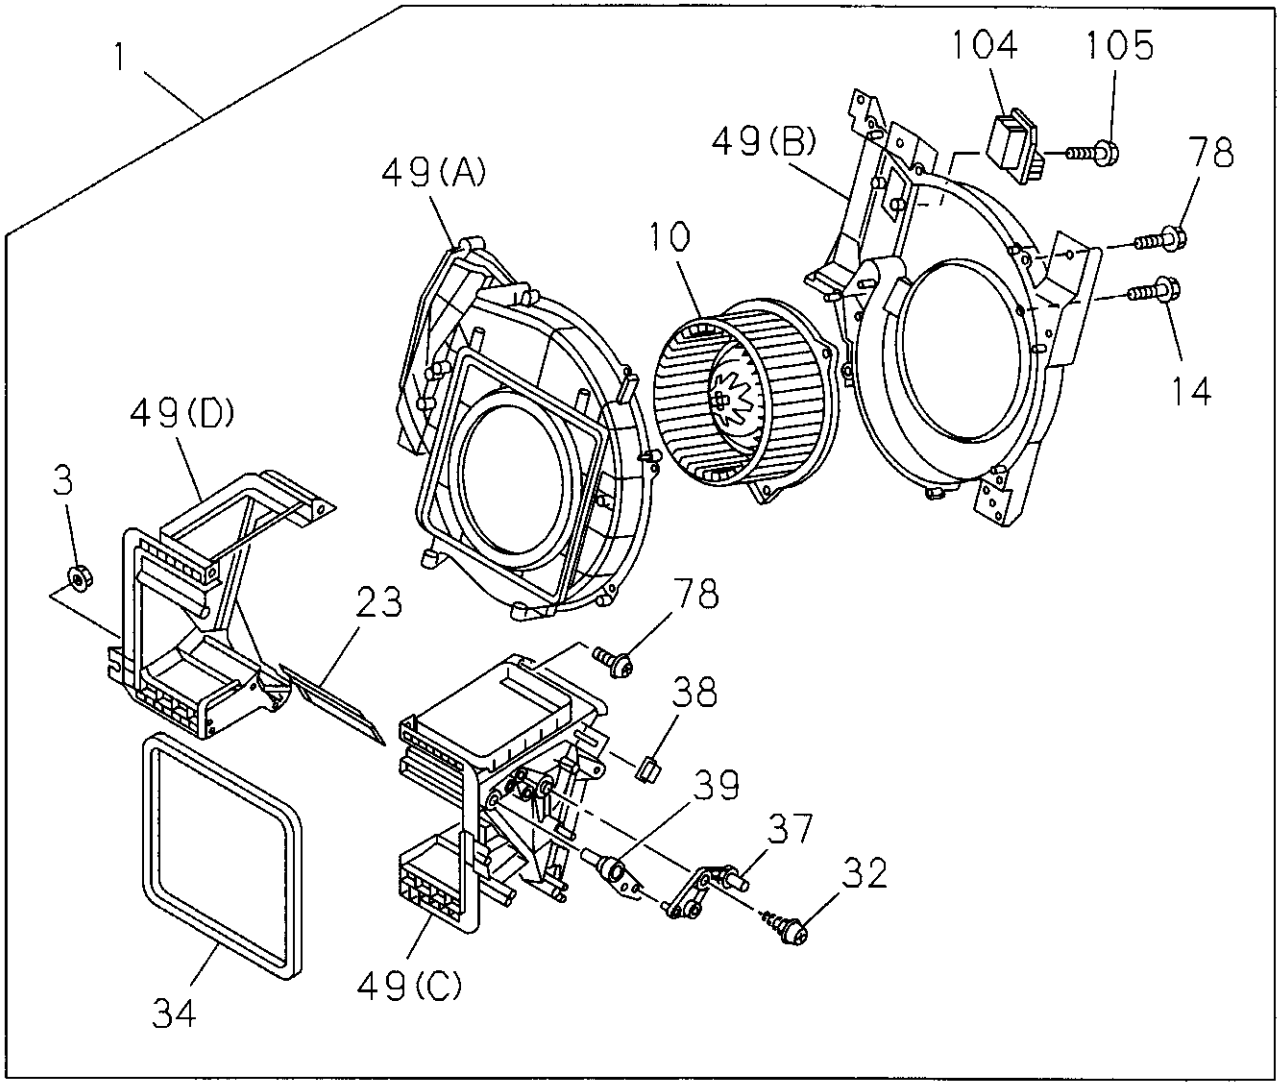

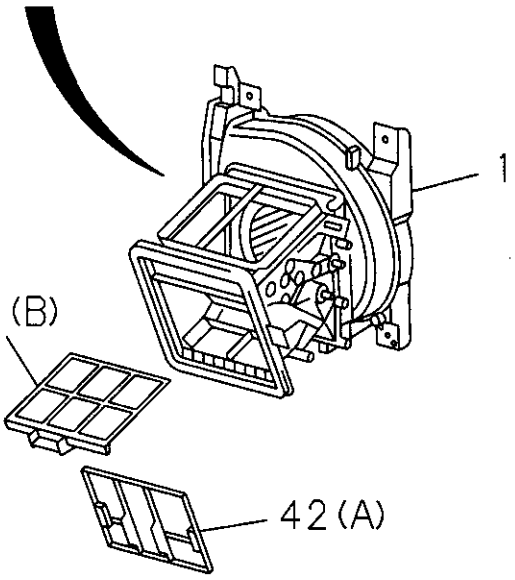

https://truckmanualshub.com/

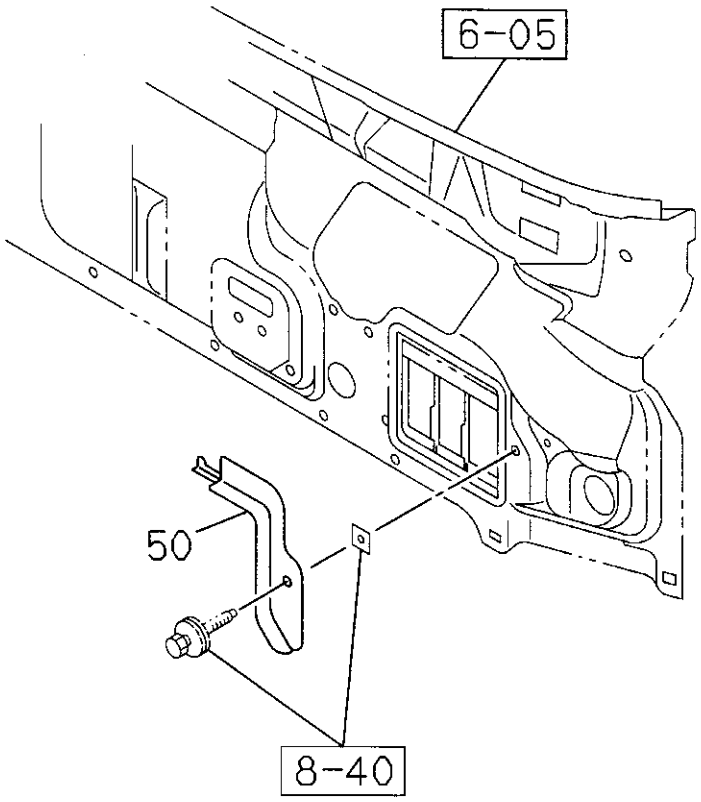

https://truckmanualshub.com/

8-73 BLOWER UNIT

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
1	--- BLOWER ASM					
	8-98171-720-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
3	--- NUT; CASE					
	1-83539-354-0		1103-		02	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M6
10	--- MOTOR ASM; FAN, BLOWER UNIT					
	8-98183-924-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
14	--- SCREW; COVER TO CASE					
	8-98047-448-0		1103-		03	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M5X16
23	--- SHUTTER; BLOWER UNIT					
	8-98171-863-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
32	--- SCREW; LEVER					
	8-98047-416-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> M4X16
34	--- LINING; BLOWER UNIT					
	8-98096-453-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
37	--- LEVER; MODE LEVER					
	8-98047-436-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
38	--- CLIP; BLOWER UNIT					
	8-98047-417-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
39	--- LEVER; SHUTTER, BLOWER UNIT					
	8-98047-435-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ>
42	--- FILTER; BLOWER UNIT					
	8-98025-006-1		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (B)
	8-98041-327-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (A)
49	--- CASE; BLOWER UNIT					
	8-98047-440-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (B)
	8-98047-441-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (A)
	8-98077-413-0		1103-		01	A VENTILATOR & DEFROSTER W/O HEATER<SAZ> (D)

https://truckmanualshub.com/


BLOWER UNIT

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
49	--- CASE; BLOWER UNIT					
	8-98077-414-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> (C)
50	--- COVER; BLOWER UNIT					
	8-98061-799-5		1103-		01	A
78	--- SCREW; CASE TO CASE					
	8-97957-708-0		1103-		15	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> M4X16 TAPPING IDN
104	--- RESISTOR; BLOWER UNIT					
	8-98074-113-0		1103-		01	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ>
105	--- SCREW; RESISTOR					
	8-97957-708-0		1103-		02	A VENTILATOR & DEFROSTER W/O/HEATER<SAZ> M4X16 TAPPING IDN


https://truckmanualshub.com/

8-80 WINDSHIELD WIPER AND WASHER

FIG-NO. FIXING

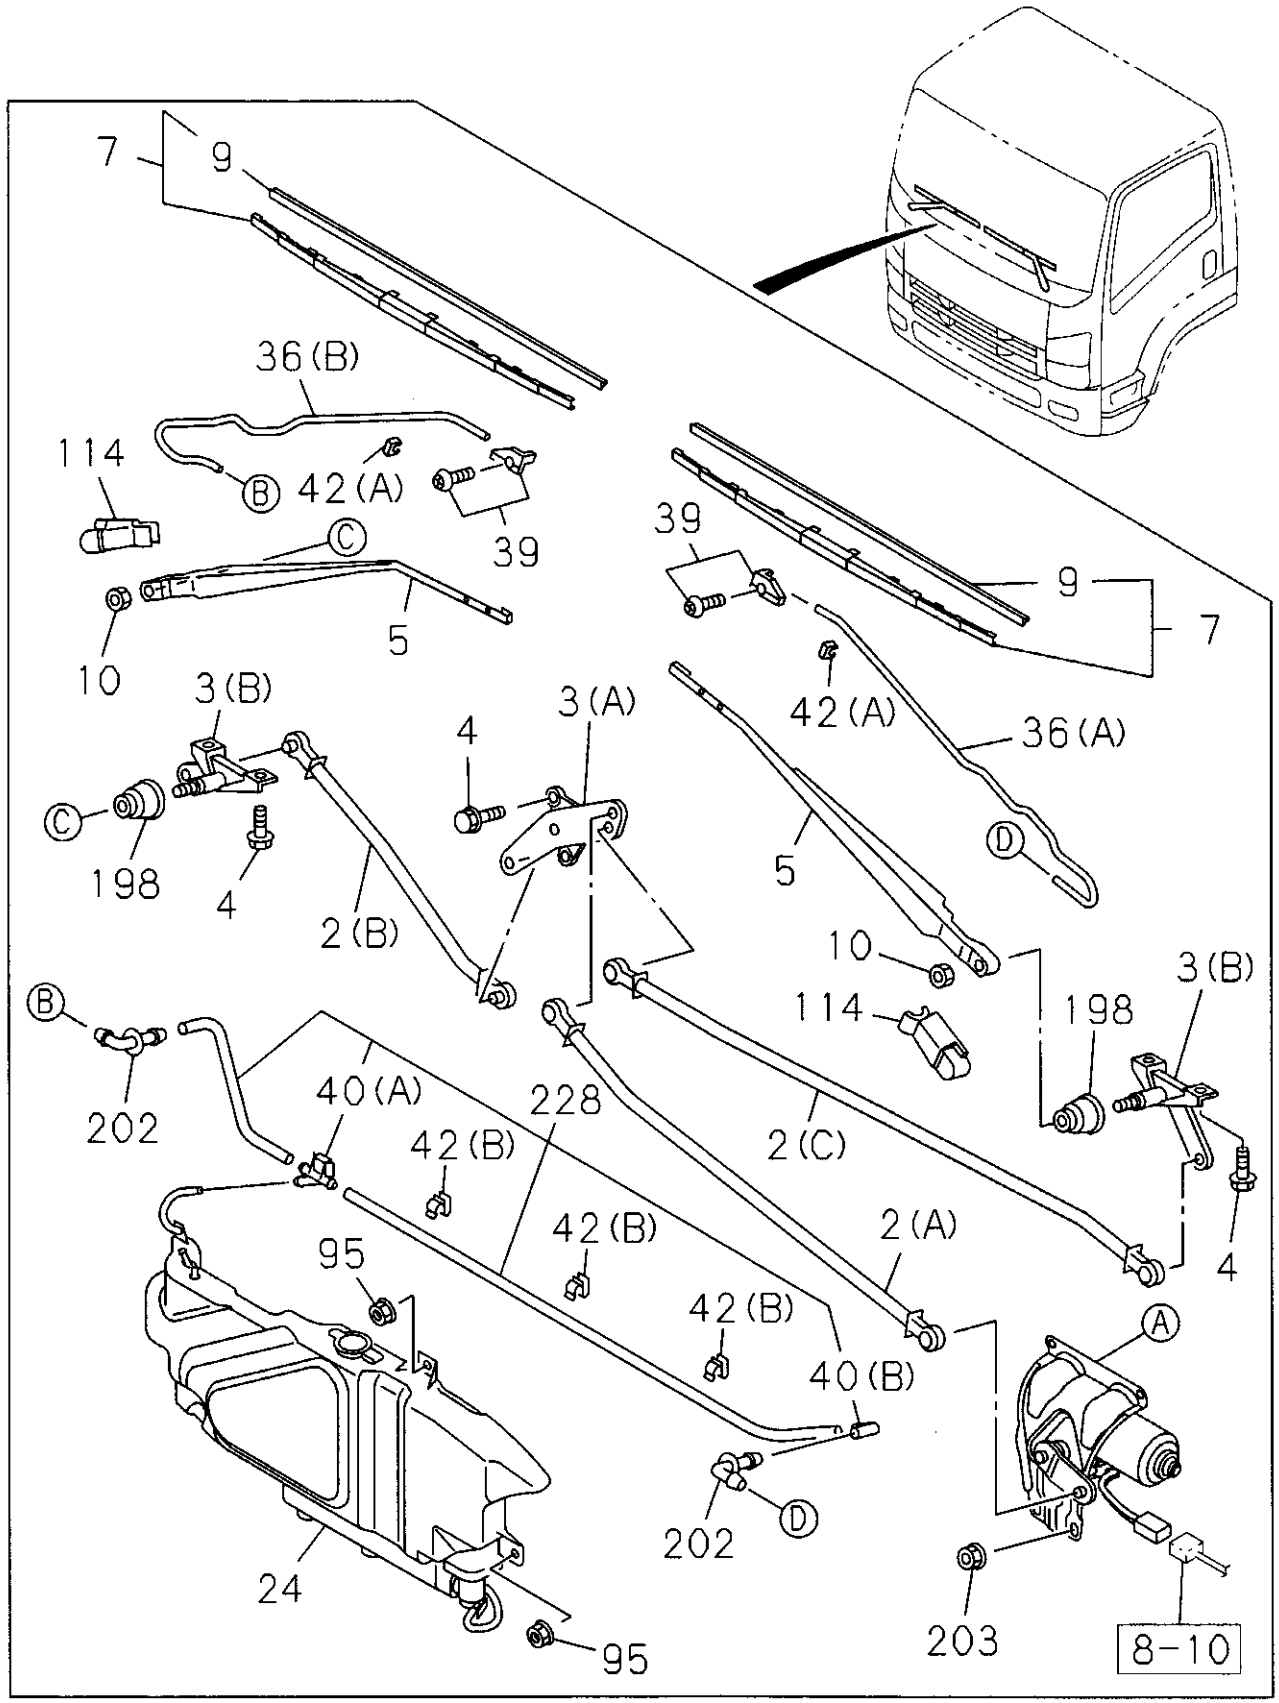

https://truckmanualshub.com/

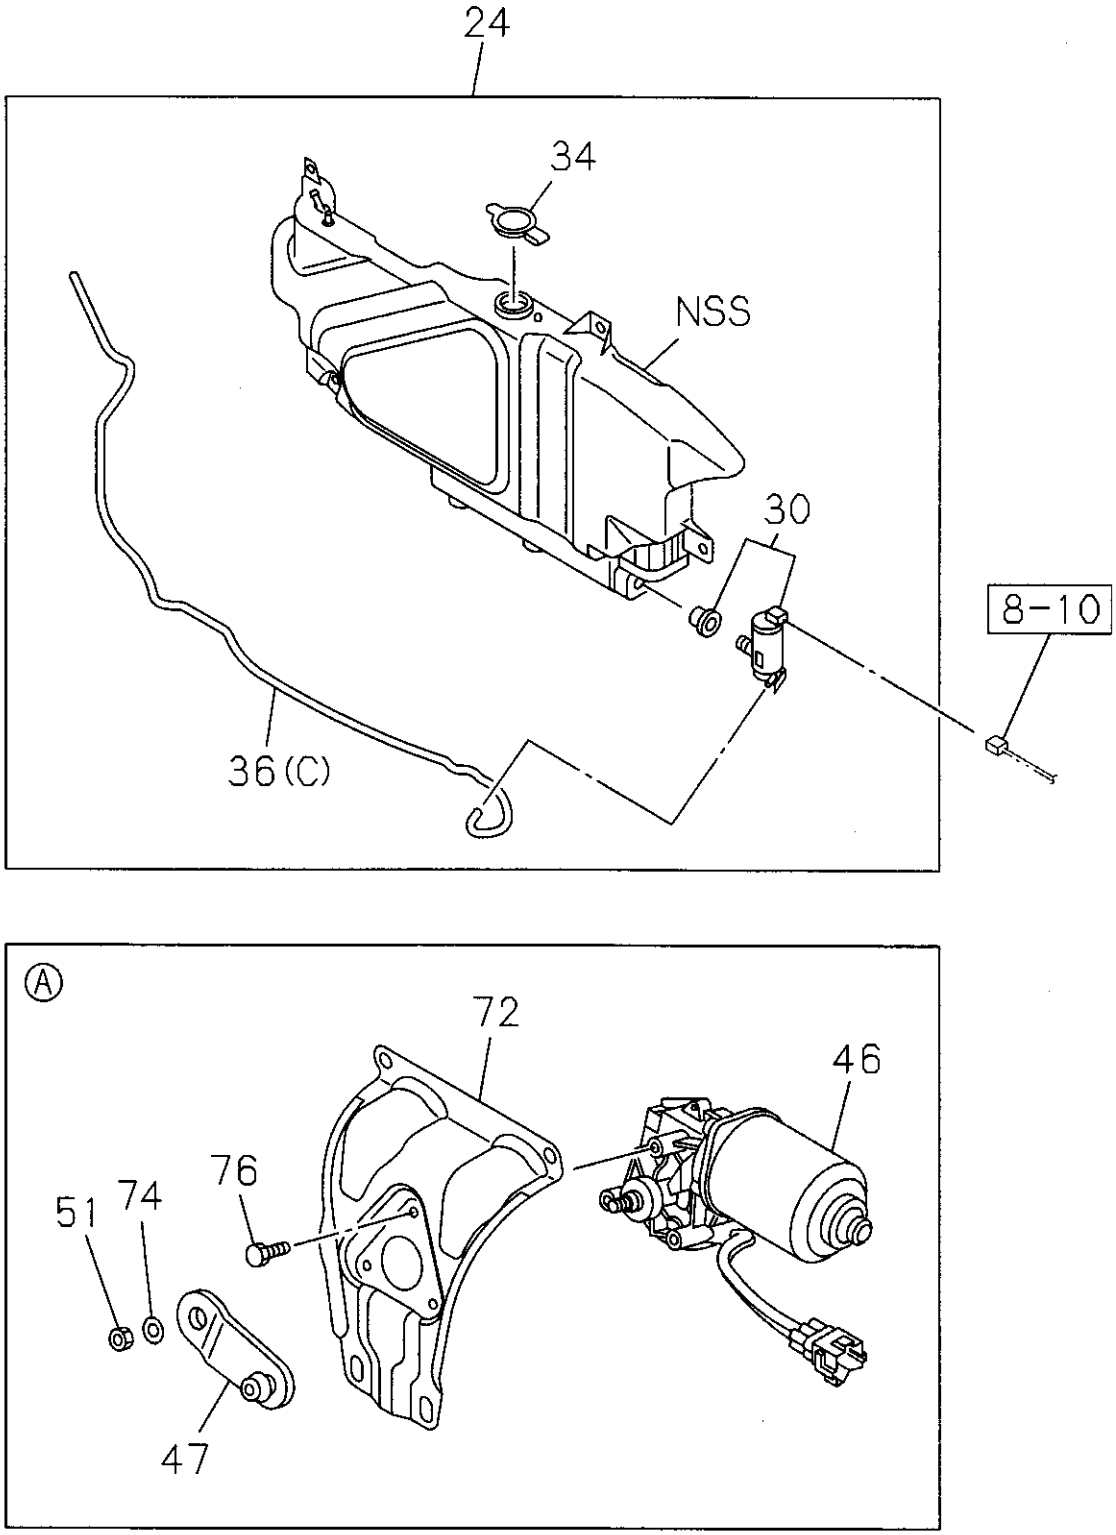

https://truckmanualshub.com/

8-80 WINDSHIELD WIPER AND WASHER

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	APPLIED MODEL / RESTRICTION / REMARKS A LEAF SUS(FCR5CS)
2	--- LINK; FRT WIPER						
	8-98078-809-0		1103-		01	A	(C)
	8-98078-810-0		1103-		01	A	(B)
	8-98078-811-0		1103-		01	A	(A)
3	--- PIVOT ASM; FRT WIPER						
	8-98078-815-0		1103-		01	A	(A)
	8-98078-816-0		1103-		02	A	(B)
4	--- BOLT; WIPER LINK TO BODY						
	0-28650-820-0		1103-		07	A	M8X20 FLANGE IDN
5	-B- ARM; WIPER						
	8-98078-819-1		1103-	R	01	A	
	8-98078-820-1		1103-	L	01	A	
7	-A- BLADE; WIPER						
	1-83315-045-2		1103-	R	01	A	
	1-83315-046-2		1103-	L	01	A	
9	-A- RUBBER; FRT WIPER BLADE						
	1-83355-014-0		1103-		02	A	
10	--- NUT; WIPER ARM TO WIPER PIVOT						
	1-09984-120-0		1103-		02	A	M10
24	--- TANK ASM; WASHER						
	8-98039-661-4		1103-		01	A	
30	--- MOTOR ASM; FRT WASHER TANK						
	8-98070-170-0		1103-		01	A	
34	--- CAP; WASHER TANK						
	8-97855-140-0		1103-		01	A	IDN

https://truckmanualshub.com/

WINDSHIELD WIPER AND WASHER

KEY NO.	RECOMMEND CLASS / PART NAME					
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
36	--- HOSE; WASHER					
	1-86810-098-0		1103-		01	A (B)
	8-98070-173-0		1103-		01	A (C)
	8-98078-824-0		1103-		01	A (A)
39	--- NOZZLE; WINDSHIELD WASHER					
	1-83315-085-0		1103-	R	01	A
	1-83315-086-0		1103-	L	01	A
40	--- JOINT; WASHER HOSE					
	8-97307-026-0		1103-		01	A (B)
	8-97855-163-0		1103-		01	A (A)
42	--- CLIP; WASHER HOSE					
	1-86810-044-0		1103-		02	A (A)
	8-98039-708-0		1103-		03	A (B)
46	--- MOTOR ASM; FRT WINDSHIELD WIPER					
	8-98078-806-0		1103-		01	A
47	--- ARM; CRANK, WIPER MOTOR					
	8-98078-805-0		1103-		01	A
51	--- NUT; WIPER MOTOR LINK					
	1-83319-012-0		1103-		01	A
72	--- BRACKET; WIPER MOTOR					
	8-98078-807-0		1103-		01	A
74	--- WASHER; ARM TO MOTOR					
	1-83319-011-0		1103-		01	A
76	--- SCREW; BRKT TO WIPER MOTOR					
	1-83319-043-0		1103-		03	A

https://truckmanualshub.com/

8-80 WINDSHIELD WIPER AND WASHER

FIG-NO.

KEY NO.	RECOMMEND CLASS / PART NAME						
	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS	A LEAF SUS(FCR5CS)
95	--- NUT; WASHER TANK						
	0-91180-106-0		1103-		04	A	M6 FLANGE
114	--- COVER; FRT WIPER ARM						
	1-83318-126-0		1103-	R	01	A	
	1-83318-127-0		1103-	L	01	A	
198	--- COVER; PIVOT, WIPER						
	8-98038-892-0		1103-		02	A	
202	--- GROMMET; WIPER						
	1-86815-003-2		1103-		02	A	
203	--- NUT; WIPER MOTOR						
	0-91180-208-0		1103-		04	A	M8 FLANGE
228	--- HOSE ASM; WASHER						
	8-98039-704-0		1103-		01	A	


https://truckmanualshub.com/

9


https://truckmanualshub.com/

9-01 TOOLS

FIG-NO. NO. 1

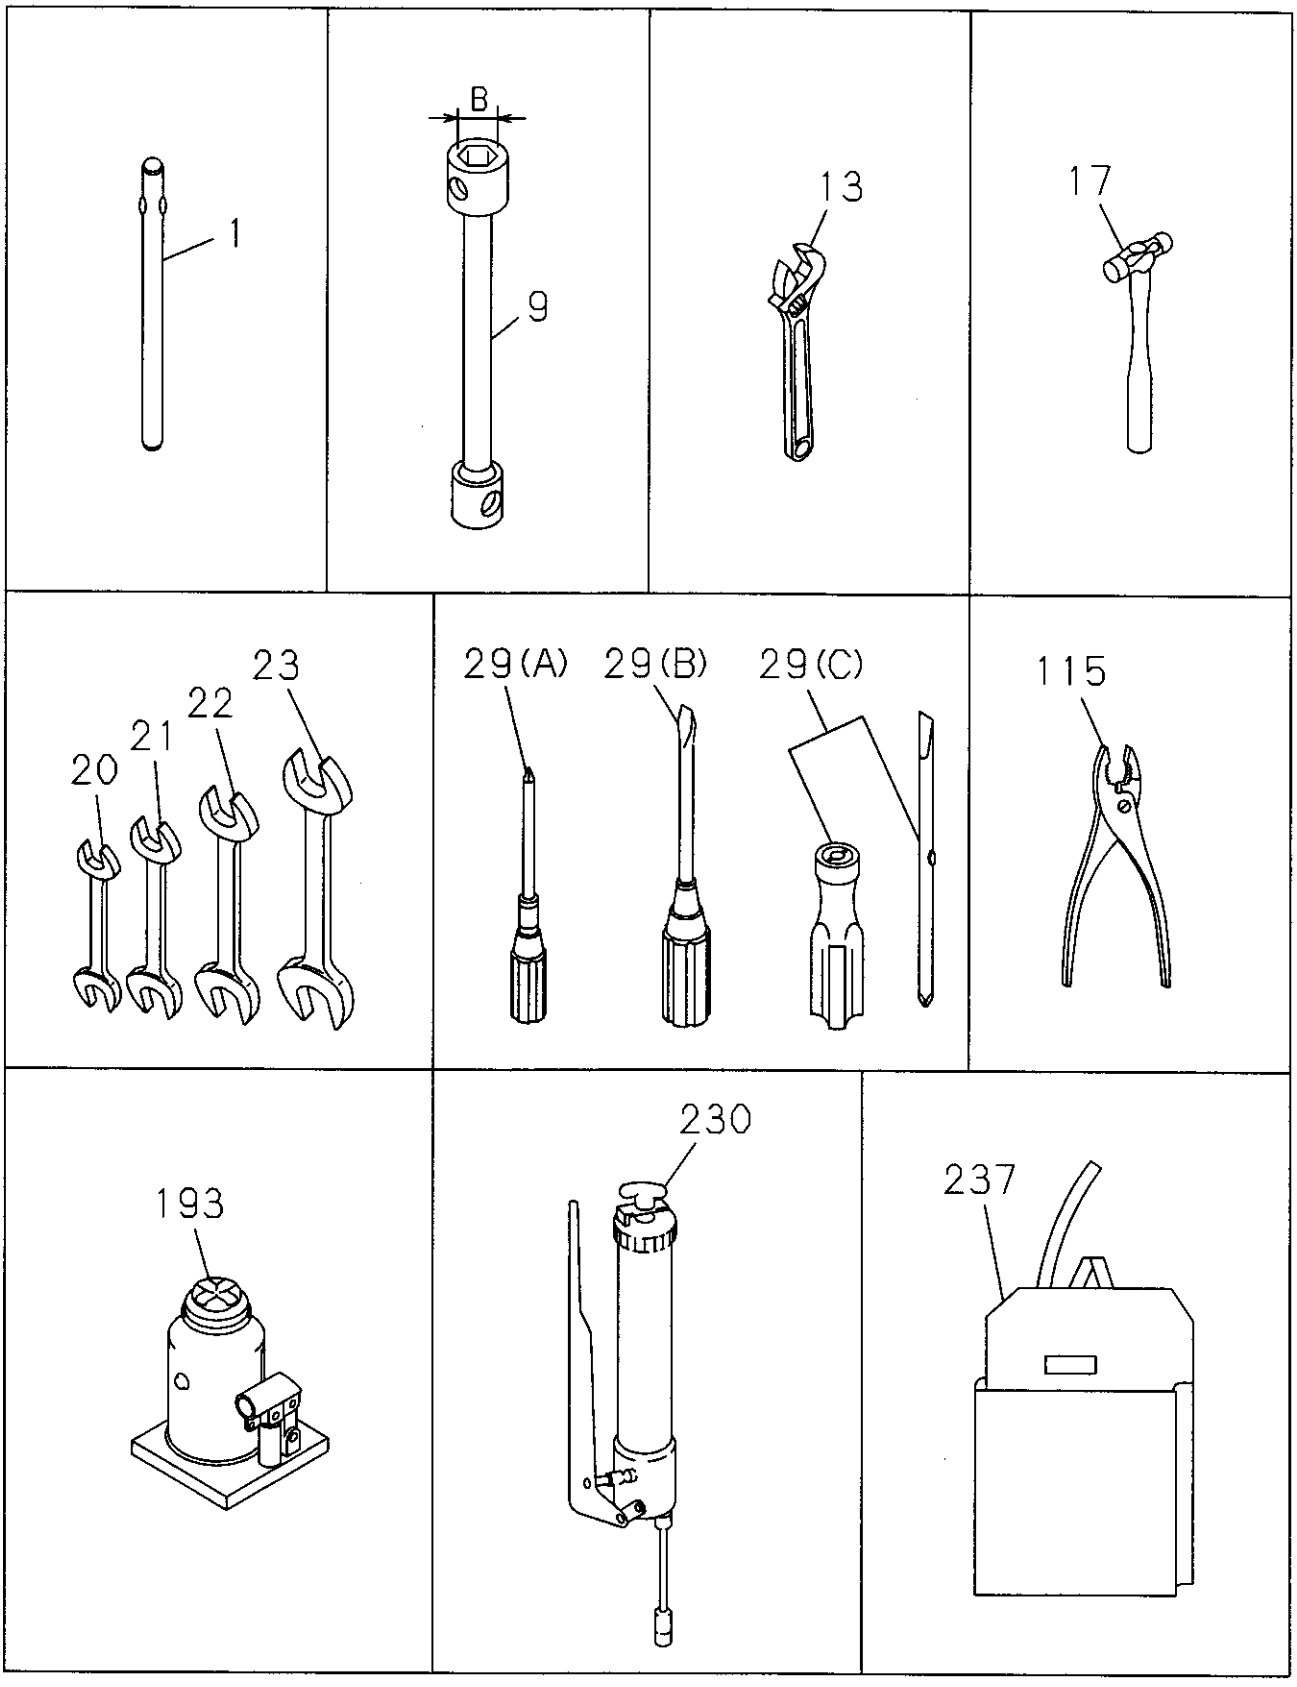


https://truckmanualshub.com/

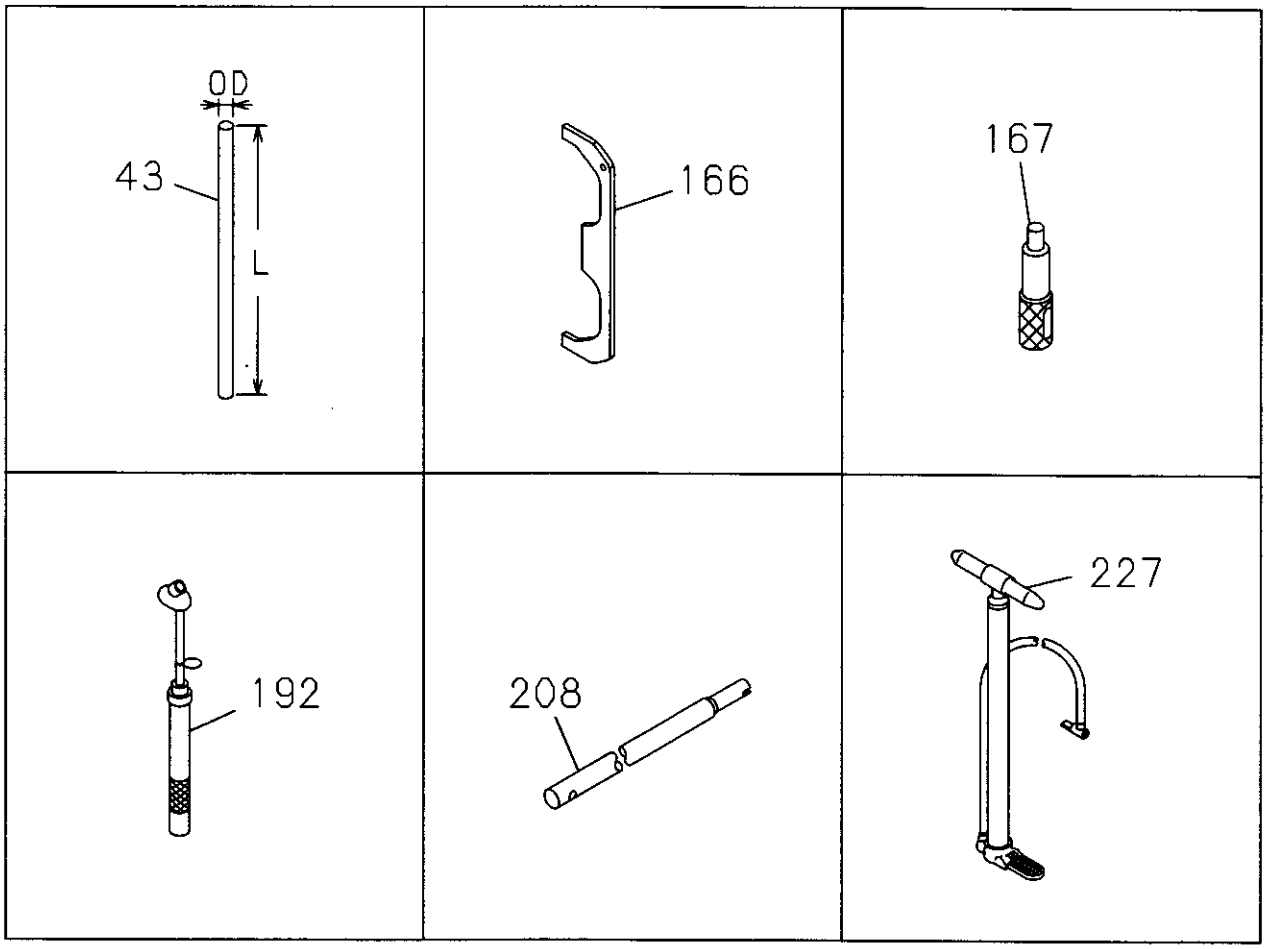

https://truckmanualshub.com/

9-01	TOOLS
FIG-NO.	NO. 3

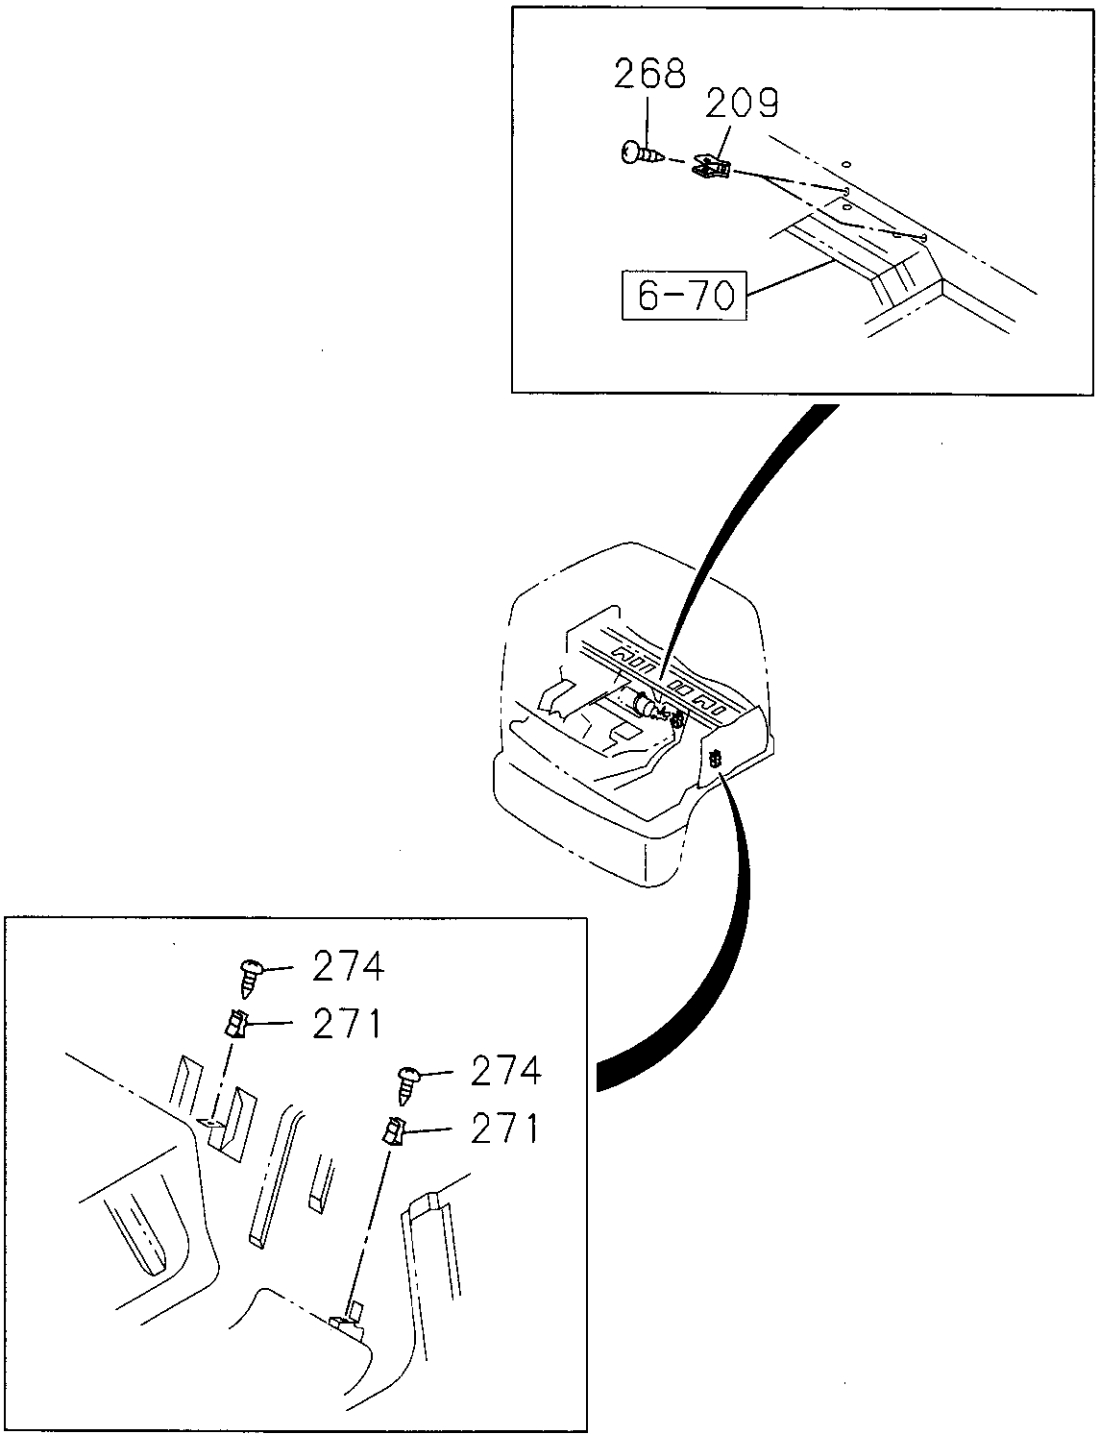

https://truckmanualshub.com/

KEY NO.	RECOMMEND CLASS / PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
1	--- HANDLE; SPARE TIRE CARRIER					
	1-85515 007-A		1103-		01	A
9	--- WRENCH; WHEEL PIN					
	1-85113 015-A		1103-		01	A B=41X21 L=440
13	--- WRENCH; MONKEY					
	1-85117 006-A		1103-		01	A L=247
17	--- HAMMER					
	9-85121 406-A		1103-		01	A
20	--- WRENCH; 10X12					
	0-95902 510-A		1103-		01	A 10X12
21	--- WRENCH; 14X17					
	0-95902 514-A		1103-		01	A 14X17
22	--- WRENCH; 19X22					
	0-95902 519-A		1103-		01	A 19X22
23	--- WRENCH; 24X27					
	0-95902 524-A		1103-		01	A 24X27 IDN
29	--- DRIVER; SCREW					
	8-94242 798-A		1103-		01	A (C) <+>,<-> L=160
	8-98061 105-A		1103-		01	A (B) <-> L=275
	9-09595 522-A		1103-		01	A (A) <+> L=190
43	--- BAR; EXTENSION, SOCKET WRENCH					
	1-85116-011-0		1103-		01	A OD=25 L=480

https://truckmanualshub.com/

9-01 TOOLS

FIG-NO.

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	APPLIED MODEL / RESTRICTION / REMARKS
						A LEAF SUS(FCR5CS)
115	--- PLIER					
	5-85171 002-A		1103-		01	A
166	--- ALIGNER; CLU RELEASE LEVER					
	1-85253-026-0		1103-		01	A
167	--- ALIGNER; CLU PILOT					
	1-85253-012-0		1103-		01	A L=185
192	--- GAUGE; TIRE PRESSURE					
	1-85315-002-0		1103-		01	A
193	--- JACK ASM					
	1-85510-005-2		1103-		01	A 7TON
208	--- HANDLE; JACK					
	1-85515-005-A		1103-		01	A L=580
209	--- CLIP; JACK HANDLE					
	8-98053-799-0		1103-		02	A
227	--- PUMP ASM; TIRE					
	9-85521-132-0		1103-		01	A
230	--- PUMP; GREASE					
	1-85556 007-A		1103-		01	A
237	--- BAG; TOOL					
	8-97130 902-A		1103-		01	A
268	--- SCREW; CLIP					
	0-38050-612-0		1103-		02	A M6X12 HEXALOBULAR SOCKET
271	--- CLIP; TIRE HANGER					
	8-98053-800-0		1103-		02	A
274	--- SCREW; CLIP					
	0-38050-612-0		1103-		02	A M6X12 HEXALOBULAR SOCKET

https://truckmanualshub.com/

NUMERICAL INDEX

0-01256-300-0 - 0-28651 035-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	0-01256 300-0	153	+	0-28050 816-0	357	+	0-28151 045-0	615	+	0-28650 825-0	111
+	0-01260 300-0	160	+	0-28050 816-0	358	+	0-28151 050-0	40	+	0-28650 825-0	172
+	0-01260 300-0	161	+	0-28050 816-0	511	+	0-28151 050-0	107	+	0-28650 825-0	177
+	0-01558 300-0	160	+	0-28050 816-0	567	+	0-28151 050-0	213	+	0-28650 825-0	265
+	0-01558 300-0	161	+	0-28050 816-0	580	+	0-28151 070-0	107	+	0-28650 825-0	266
+	0-01558 300-0	164	+	0-28050 820-0	69	+	0-28151 080-0	361	+	0-28650 825-0	292
+	0-03566 300-0	272	+	0-28050 820-0	93	+	0-28151 080-0	615	+	0-28650 825-0	300
+	0-10861 450-0	487	+	0-28050 820-0	99	+	0-28151 230-0	101	+	0-28650 825-0	304
+	0-10861 460-0	420	+	0-28050 820-0	101	+	0-28151 250-0	40	+	0-28650 825-0	305
+	0-10956 260-0	338	+	0-28050 820-0	210	+	0-28151 270-0	75	+	0-28650 825-0	316
+	0-10956 400-0	402	+	0-28050 820-0	239	+	0-28151 290-0	40	+	0-28650 825-0	356
+	0-10961 270-0	383	+	0-28050 820-0	240	+	0-28151 290-0	41	+	0-28650 825-0	361
+	0-16956 460-0	30	+	0-28050 820-0	287	+	0-28161 030-0	43	+	0-28650 825-0	487
+	0-20850 840-0	131	+	0-28050 825-0	88	+	0-28451 020-0	533	+	0-28650 825-0	552
+	0-20851 230-0	396	+	0-28050 825-0	151	+	0-28451 020-0	534	+	0-28650 825-0	578
+	0-20851 440-0	396	+	0-28050 825-0	163	+	0-28650 616-0	107	+	0-28650 825-0	580
+	0-20951 235-0	338	+	0-28050 825-0	361	+	0-28650 616-0	226	+	0-28650 825-0	582
+	0-20951 235-0	402	+	0-28050 830-0	48	+	0-28650 616-0	333	+	0-28650 830-0	39
+	0-20951 445-0	334	+	0-28050 830-0	409	+	0-28650 616-0	337	+	0-28650 830-0	48
+	0-20951 450-0	397	+	0-28050 835-0	13	+	0-28650 616-0	434	+	0-28650 830-0	86
+	0-20951 450-0	398	+	0-28050 835-0	93	+	0-28650 616-0	470	+	0-28650 830-0	110
+	0-28050 610-0	60	+	0-28050 840-0	29	+	0-28650 616-0	597	+	0-28650 830-0	135
+	0-28050 610-0	86	+	0-28050 840-0	86	+	0-28650 616-0	605	+	0-28650 830-0	163
+	0-28050 610-0	448	+	0-28050 845-0	14	+	0-28650 616-0	610	+	0-28650 830-0	296
+	0-28050 610-0	449	+	0-28050 845-0	76	+	0-28650 620-0	610	+	0-28650 830-0	580
+	0-28050 610-0	453	+	0-28050 845-0	357	+	0-28650 630-0	361	+	0-28650 830-0	582
+	0-28050 612-0	24	+	0-28050 850-0	86	+	0-28650 820-0	24	+	0-28650 835-0	7
+	0-28050 612-0	31	+	0-28050 850-0	161	+	0-28650 820-0	93	+	0-28650 835-0	39
+	0-28050 612-0	91	+	0-28050 870-0	316	+	0-28650 820-0	111	+	0-28650 835-0	63
+	0-28050 612-0	107	+	0-28050 880-0	48	+	0-28650 820-0	136	+	0-28650 840-0	55
+	0-28050 616-0	40	+	0-28051 025-0	177	+	0-28650 820-0	139	+	0-28650 840-0	86
+	0-28050 616-0	91	+	0-28051 025-0	186	+	0-28650 820-0	140	+	0-28650 840-0	149
+	0-28050 616-0	143	+	0-28051 025-0	287	+	0-28650 820-0	161	+	0-28651 025-0	147
+	0-28050 616-0	597	+	0-28051 025-0	415	+	0-28650 820-0	162	+	0-28651 025-0	243
+	0-28050 620-0	580	+	0-28051 050-0	163	+	0-28650 820-0	163	+	0-28651 025-0	325
+	0-28050 625-0	567	+	0-28051 060-0	86	+	0-28650 820-0	179	+	0-28651 025-0	580
+	0-28050 800-0	309	+	0-28051 070-0	173	+	0-28650 820-0	213	+	0-28651 025-0	605
+	0-28050 810-0	300	+	0-28051 220-0	189	+	0-28650 820-0	243	+	0-28651 030-0	107
+	0-28050 812-0	14	+	0-28060 816-0	30	+	0-28650 820-0	272	+	0-28651 030-0	110
+	0-28050 812-0	48	+	0-28060 816-0	97	+	0-28650 820-0	349	+	0-28651 030-0	162
+	0-28050 812-0	99	+	0-28060 816-0	522	+	0-28650 820-0	358	+	0-28651 030-0	163
+	0-28050 812-0	134	+	0-28060 825-0	97	+	0-28650 820-0	408	+	0-28651 030-0	174
+	0-28050 812-0	135	+	0-28060 830-0	97	+	0-28650 820-0	409	+	0-28651 030-0	179
+	0-28050 812-0	209	+	0-28061 245-0	331	+	0-28650 820-0	410	+	0-28651 030-0	237
+	0-28050 812-0	580	+	0-28080 818-0	63	+	0-28650 820-0	415	+	0-28651 030-0	264
+	0-28050 816-0	31	+	0-28151 016-0	567	+	0-28650 820-0	431	+	0-28651 030-0	462
+	0-28050 816-0	68	+	0-28151 020-0	13	+	0-28650 820-0	432	+	0-28651 030-0	578
+	0-28050 816-0	70	+	0-28151 020-0	135	+	0-28650 820-0	522	+	0-28651 030-0	580
+	0-28050 816-0	76	+	0-28151 020-0	186	+	0-28650 820-0	523	+	0-28651 030-0	582
+	0-28050 816-0	86	+	0-28151 020-0	309	+	0-28650 820-0	579	+	0-28651 035-0	419
+	0-28050 816-0	88	+	0-28151 025-0	257	+	0-28650 820-0	605	+	0-28651 035-0	154
+	0-28050 816-0	93	+	0-28151 040-0	41	+	0-28650 820-0	628	+	0-28651 035-0	163
+	0-28050 816-0	265	+	0-28151 040-0	209	+	0-28650 825-0	39	+	0-28651 035-0	172
+	0-28050 816-0	270	+	0-28151 040-0	211	+	0-28650 825-0	48	+	0-28651 035-0	173
+	0-28050 816-0	271	+	0-28151 045-0	213	+	0-28650 825-0	57	+	0-28651 035-0	324

https://truckmanualshub.com/

NUMERICAL INDEX

0-28651-035-0 - 0-91180-210-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	0-28651 035-0	413	+	0-72180 516-0	510	+	0-91111 512-0	195	+	0-91180 108-0	189
+	0-28651 040-0	173	+	0-72180 516-0	511	+	0-91111 514-0	240	+	0-91180 108-0	210
+	0-28651 225-0	402	+	0-72180 516-0	512	+	0-91111 514-0	347	+	0-91180 108-0	224
+	0-28651 235-0	43	+	0-72180 516-0	513	+	0-91111 516-0	308	+	0-91180 108-0	260
+	0-28651 240-0	270	+	0-72180 516-0	587	+	0-91111 516-0	309	+	0-91180 108-0	264
+	0-28660 830-0	261	+	0-72180 516-0	610	+	0-91111 516-0	312	+	0-91180 108-0	265
+	0-28660 830-0	522	+	0-72180 516-0	611	+	0-91111 520-0	362	+	0-91180 108-0	266
+	0-28661 030-0	401	+	0-72180 518-0	349	+	0-91111 522-0	362	+	0-91180 108-0	271
+	0-28661 030-0	408	+	0-72180 520-0	513	+	0-91111 522-0	376	+	0-91180 108-0	272
+	0-28661 030-0	479	+	0-72180 520-0	621	+	0-91112 814-0	327	+	0-91180 108-0	273
+	0-28661 225-0	399	+	0-72180 520-0	634	+	0-91117 508-0	344	+	0-91180 108-0	287
+	0-28661 235-0	396	+	0-72380 516-0	452	+	0-91118 408-0	413	+	0-91180 108-0	296
+	0-28661 435-0	402	+	0-72380 516-0	524	+	0-91180 106-0	8	+	0-91180 108-0	300
+	0-28751 020-0	225	+	0-74160 516-0	423	+	0-91180 106-0	70	+	0-91180 108-0	305
+	0-28751 030-0	361	+	0-74360 410-0	430	+	0-91180 106-0	76	+	0-91180 108-0	308
+	0-28751 040-0	40	+	0-74360 516-0	535	+	0-91180 106-0	86	+	0-91180 108-0	312
+	0-28751 225-0	44	+	0-74360 516-0	536	+	0-91180 106-0	230	+	0-91180 108-0	316
+	0-28851 445-0	420	+	0-81122 012-0	344	+	0-91180 106-0	316	+	0-91180 108-0	317
+	0-28861 445-0	401	+	0-81124 022-0	331	+	0-91180 106-0	419	+	0-91180 108-0	356
+	0-36210 620-0	435	+	0-81124 025-0	353	+	0-91180 106-0	431	+	0-91180 108-0	357
+	0-36220 512-0	153	+	0-90301 406-0	324	+	0-91180 106-0	448	+	0-91180 108-0	358
+	0-36220 512-0	154	+	0-90301 410-0	327	+	0-91180 106-0	462	+	0-91180 108-0	402
+	0-36220 514-0	149	+	0-90301 410-0	376	+	0-91180 106-0	511	+	0-91180 108-0	413
+	0-36230 412-0	149	+	0-90301 410-0	383	+	0-91180 106-0	512	+	0-91180 108-0	440
+	0-38050 512-0	347	+	0-90301 510-0	327	+	0-91180 106-0	513	+	0-91180 108-0	462
+	0-38050 612-0	440	+	0-90301 610-0	322	+	0-91180 106-0	547	+	0-91180 108-0	487
+	0-38050 612-0	642	+	0-90301 610-0	376	+	0-91180 106-0	548	+	0-91180 108-0	499
+	0-38050 616-0	527	+	0-91110 506-0	551	+	0-91180 106-0	568	+	0-91180 108-0	536
+	0-38050 625-0	449	+	0-91110 508-0	111	+	0-91180 106-0	569	+	0-91180 108-0	569
+	0-41010 625-0	7	+	0-91110 508-0	131	+	0-91180 106-0	583	+	0-91180 108-0	581
+	0-41010 630-0	85	+	0-91110 508-0	270	+	0-91180 106-0	597	+	0-91180 108-0	582
+	0-41010 818-0	39	+	0-91110 508-0	409	+	0-91180 106-0	606	+	0-91180 108-0	583
+	0-41010 820-0	49	+	0-91110 510-0	51	+	0-91180 106-0	610	+	0-91180 108-0	592
+	0-44011 025-0	68	+	0-91110 510-0	330	+	0-91180 106-0	611	+	0-91180 110-0	43
+	0-44011 025-0	210	+	0-91110 510-0	398	+	0-91180 106-0	630	+	0-91180 110-0	75
+	0-49140 860-0	13	+	0-91110 510-0	408	+	0-91180 108-0	8	+	0-91180 110-0	94
+	0-49241 025-0	39	+	0-91110 512-0	153	+	0-91180 108-0	24	+	0-91180 110-0	224
+	0-49241 025-0	94	+	0-91110 512-0	331	+	0-91180 108-0	48	+	0-91180 110-0	362
+	0-50540 620-0	69	+	0-91110 512-0	375	+	0-91180 108-0	49	+	0-91180 110-0	534
+	0-50541 025-0	398	+	0-91110 512-0	383	+	0-91180 108-0	55	+	0-91180 110-0	535
+	0-50640 630-0	552	+	0-91110 512-0	397	+	0-91180 108-0	60	+	0-91180 110-0	583
+	0-50740 820-0	257	+	0-91110 514-0	106	+	0-91180 108-0	63	+	0-91180 112-0	106
+	0-51640 825-0	234	+	0-91110 514-0	323	+	0-91180 108-0	76	+	0-91180 112-0	361
+	0-51640 825-0	266	+	0-91110 514-0	324	+	0-91180 108-0	94	+	0-91180 114-0	87
+	0-52000 612-0	509	+	0-91110 514-0	334	+	0-91180 108-0	110	+	0-91180 208-0	13
+	0-52000 612-0	511	+	0-91110 514-0	339	+	0-91180 108-0	111	+	0-91180 208-0	101
+	0-59331 030-0	94	+	0-91110 514-0	396	+	0-91180 108-0	130	+	0-91180 208-0	186
+	0-61200 814-0	185	+	0-91110 514-0	397	+	0-91180 108-0	136	+	0-91180 208-0	261
+	0-70040 416-0	535	+	0-91110 514-0	398	+	0-91180 108-0	140	+	0-91180 208-0	630
+	0-70040 514-0	535	+	0-91110 514-0	407	+	0-91180 108-0	148	+	0-91180 210-0	163
+	0-70540 420-0	522	+	0-91110 514-0	419	+	0-91180 108-0	151	+	0-91180 210-0	172
+	0-71190 420-0	551	+	0-91110 514-0	487	+	0-91180 108-0	161	+	0-91180 210-0	173
+	0-72180 516-0	420	+	0-91111 510-0	29	+	0-91180 108-0	162	+	0-91180 210-0	177
+	0-72180 516-0	479	+	0-91111 510-0	375	+	0-91180 108-0	163	+	0-91180 210-0	195
+	0-72180 516-0	509	+	0-91111 512-0	194	+	0-91180 108-0	186	+	0-91180 210-0	210

https://truckmanualshub.com/

NUMERICAL INDEX

0-91180-210-0 - 1-09650-430-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	0-91180 210-0	234	+	0-91610 516-0	264	+	1-09030 093-0	140	+	1-09583 288-0	247
+	0-91180 210-0	237	+	0-91610 516-0	375	+	1-09030 093-0	461	+	1-09583 291-1	186
+	0-91180 210-0	264	+	0-91610 516-0	409	+	1-09030 095-0	462	+	1-09587 001-0	333
+	0-91180 210-0	324	+	0-91610 520-0	362	+	1-09042 046-0	343	+	1-09587 086-0	322
+	0-91180 210-0	325	+	0-91610 612-0	410	+	1-09044 006-0	341	+	1-09587 087-2	322
+	0-91180 210-0	375	+	0-91610 614-0	499	+	1-09044 007-0	341	+	1-09587 088-1	322
+	0-91180 210-0	413	+	0-91610 706-0	8	+	1-09044 072-1	7	+	1-09588 214-0	344
+	0-91180 210-0	415	+	0-91610 706-0	553	+	1-09044 072-1	39	+	1-09589 017-1	327
+	0-91180 210-0	419	+	0-91610 710-0	226	+	1-09044 072-1	57	+	1-09600 016-0	12
+	0-91180 210-0	582	+	0-91614 508-0	234	+	1-09044 072-1	580	+	1-09600 016-0	18
+	0-91180 210-0	44	+	0-91614 512-0	331	+	1-09060 015-0	253	+	1-09600 016-0	19
+	0-91180 210-0	111	+	0-91614 610-0	323	+	1-09070 047-0	343	+	1-09600 064-0	324
+	0-91180 210-0	112	+	0-91614 610-0	324	+	1-09300 125-0	350	+	1-09604 022-0	338
+	0-91180 210-0	135	+	0-91614 610-0	413	+	1-09330 119-0	225	+	1-09604 023-0	338
+	0-91180 210-0	147	+	0-91614 708-0	413	+	1-09332 130-0	194	+	1-09623 057-0	147
+	0-91180 210-0	154	+	0-91614 710-0	163	+	1-09333 033-0	248	+	1-09623 321-0	198
+	0-91180 212-0	43	+	0-91614 712-0	270	+	1-09333 033-0	251	+	1-09623 327-0	198
+	0-91180 212-0	135	+	0-91614 712-0	330	+	1-09337 027-0	135	+	1-09623 379-0	218
+	0-91180 212-0	172	+	0-91614 714-0	401	+	1-09360 978-0	25	+	1-09623 423-0	31
+	0-91180 212-0	396	+	0-91614 808-0	261	+	1-09361 018-0	161	+	1-09623 462-0	69
+	0-91180 212-0	399	+	0-91614 810-0	44	+	1-09363 613-1	243	+	1-09623 464-0	75
+	0-91180 214-0	420	+	0-91800 616-0	407	+	1-09363 639-0	177	+	1-09623 469-0	24
+	0-91510 508-0	111	+	0-91800 618-0	225	+	1-09363 801-0	194	+	1-09623 539-0	79
+	0-91510 508-0	185	+	0-91805 504-0	130	+	1-09364 957-2	361	+	1-09623 582-0	341
+	0-91510 510-0	185	+	0-91805 510-0	229	+	1-09400 029-0	292	+	1-09623 593-0	88
+	0-91510 510-0	330	+	0-91805 512-0	261	+	1-09400 029-0	296	+	1-09623 594-0	225
+	0-91510 512-0	194	+	0-92002 418-0	153	+	1-09400 077-1	344	+	1-09625 002-0	187
+	0-91510 512-0	251	+	0-92107 005-0	292	+	1-09400 100-0	251	+	1-09625 005-1	327
+	0-91510 512-0	396	+	0-92107 005-0	296	+	1-09400 100-0	253	+	1-09625 161-0	323
+	0-91510 514-0	106	+	0-92113 306-0	195	+	1-09400 166-0	353	+	1-09625 331-1	337
+	0-91510 612-0	402	+	0-92113 306-0	304	+	1-09440 002-0	248	+	1-09625 484-1	345
+	0-91510 614-0	248	+	0-92121 812-0	271	+	1-09440 003-0	252	+	1-09625 568-0	333
+	0-91510 614-0	397	+	0-92134 310-0	308	+	1-09440 039-1	383	+	1-09625 569-0	338
+	0-91510 614-0	398	+	0-92134 312-0	271	+	1-09440 049-0	237	+	1-09625 637-0	345
+	0-91510 620-0	362	+	0-92134 315-0	287	+	1-09440 062-1	234	+	1-09630 082-0	57
+	0-91510 810-0	349	+	0-92135 210-0	308	+	1-09440 065-0	333	+	1-09630 083-0	20
+	0-91510 812-0	330	+	0-92135 210-0	312	+	1-09440 065-0	337	+	1-09630 083-0	91
+	0-91510 812-0	338	+	0-92138 906-0	304	+	1-09440 097-0	349	+	1-09630 083-0	99
+	0-91510 812-0	339	+	0-95234 635-0	300	+	1-09442 031-0	330	+	1-09630 085-0	20
+	0-91510 812-0	343	+	0-95235 235-0	139	+	1-09442 031-0	353	+	1-09630 085-0	60
+	0-91510 812-0	375	+	0-95235 535-0	264	+	1-09449 082-0	330	+	1-09630 085-0	69
+	0-91510 814-0	240	+	0-95235 535-0	265	+	1-09449 083-0	342	+	1-09630 086-0	107
+	0-91510 814-0	323	+	0-95235 536-0	357	+	1-09470 001-0	461	+	1-09630 145-0	270
+	0-91510 814-0	324	+	0-95235 836-0	357	+	1-09470 009-0	136	+	1-09639 034-0	14
+	0-91510 814-0	334	+	1-09000 121-0	324	+	1-09500 055-0	353	+	1-09650 074-1	240
+	0-91510 814-0	339	+	1-09000 133-1	106	+	1-09503 045-0	43	+	1-09650 179-1	272
+	0-91510 814-0	396	+	1-09000 335-0	380	+	1-09503 154-2	134	+	1-09650 358-1	200
+	0-91510 814-0	419	+	1-09000 365-0	248	+	1-09503 154-2	173	+	1-09650 430-0	605
+	0-91510 814-0	487	+	1-09000 787-0	349	+	1-09503 171-0	375	+	1-09650 430-0	177
+	0-91610 508-0	151	+	1-09009 081-0	330	+	1-09503 265-0	110	+	1-09650 430-0	179
+	0-91610 508-0	409	+	1-09009 113-1	63	+	1-09503 265-0	581	+	1-09650 430-0	271
+	0-91610 508-0	410	+	1-09009 126-1	349	+	1-09556 015-0	51	+	1-09650 438-0	271
+	0-91610 510-0	134	+	1-09009 191-0	327	+	1-09583 244-0	409	+	1-09650 443-0	287
+	0-91610 514-0	106	+	1-09030 044-1	146	+	1-09583 268-0	256	+	1-09654 059-2	195
+	0-91610 514-0	240	+	1-09030 073-0	568	+	1-09583 271-0	251	+	1-09654 167-1	362

https://truckmanualshub.com/

NUMERICAL INDEX

1-09650-430-0 - 1-31342-331-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	1-09656 239-3	339	+	1-09709 178-0	583	+	1-09983 101-0	479	+	1-19511 160-0	371
+	1-09656 340-1	271	+	1-09709 241-0	164	+	1-09983 154-0	434	+	1-19519 256-0	371
+	1-09656 586-1	179	+	1-09709 241-0	317	+	1-09983 154-0	435	+	1-19519 257-0	371
+	1-09660 693-0	260	+	1-09709 242-0	317	+	1-09984 120-0	628	+	1-19519 259-0	372
+	1-09660 696-0	260	+	1-09709 243-0	164	+	1-09984 122-0	146	+	1-19519 264-0	371
+	1-09660 959-0	260	+	1-09709 273-1	316	+	1-09984 124-0	498	+	1-19519 308-0	372
+	1-09660 965-0	260	+	1-09709 274-1	194	+	1-09984 126-0	146	+	1-19519 341-0	371
+	1-09660 967-0	308	+	1-09709 274-1	317	+	1-09984 134-0	501	+	1-19519 343-1	372
+	1-09675 028-0	99	+	1-09709 277-1	177	+	1-09984 180-0	349	+	1-19519 345-0	371
+	1-09675 037-1	87	+	1-09709 277-1	316	+	1-09985 177-0	146	+	1-19519 346-1	372
+	1-09675 081-0	69	+	1-09709 277-1	577	+	1-09985 180-0	501	+	1-19521 038-0	371
+	1-09675 132-1	75	+	1-09709 278-1	194	+	1-09985 183-0	402	+	1-21115 205-0	361
+	1-09675 132-1	76	+	1-09709 278-1	577	+	1-09985 183-0	407	+	1-21235 007-1	356
+	1-09675 193-0	60	+	1-09709 290-0	272	+	1-09985 184-0	501	+	1-21235 011-0	356
+	1-09700 606-0	160	+	1-09709 292-0	578	+	1-09985 188-0	146	+	1-21249 003-1	356
+	1-09700 668-0	357	+	1-09709 303-0	300	+	1-09985 204-0	501	+	1-21249 004-0	356
+	1-09700 739-0	234	+	1-09709 304-0	300	+	1-09987 221-0	578	+	1-21249 016-0	356
+	1-09700 744-0	160	+	1-09709 304-0	316	+	1-09987 221-0	581	+	1-21466 007-3	134
+	1-09700 747-0	160	+	1-09709 305-0	300	+	1-09987 243-1	264	+	1-21467 004-0	134
+	1-09700 820-0	177	+	1-09709 305-0	316	+	1-09987 246-2	579	+	1-21467 011-1	134
+	1-09700 860-0	583	+	1-09709 306-0	316	+	1-09987 248-1	431	+	1-21467 023-0	136
+	1-09700 945-0	304	+	1-09709 309-0	580	+	1-09987 248-1	455	+	1-21469 153-0	135
+	1-09700 966-1	234	+	1-09732 029-0	247	+	1-09987 248-1	461	+	1-21559 481-0	135
+	1-09700 972-1	579	+	1-09732 029-0	251	+	1-09987 248-1	462	+	1-21729 043-0	93
+	1-09701 001-1	577	+	1-09744 086-2	409	+	1-09989 021-0	432	+	1-22131 963-0	174
+	1-09701 001-1	583	+	1-09744 106-0	407	+	1-09989 021-0	434	+	1-22133 233-0	172
+	1-09701 017-0	577	+	1-09744 106-0	408	+	1-11369 081-0	70	+	1-22133 295-0	172
+	1-09701 055-1	578	+	1-09744 107-0	402	+	1-11369 157-0	570	+	1-22152 274-1	173
+	1-09701 180-0	60	+	1-09744 108-1	407	+	1-12528 028-0	31	+	1-31131 041-0	209
+	1-09701 209-1	237	+	1-09748 031-0	224	+	1-13674 160-0	63	+	1-31211 038-0	184
+	1-09701 212-2	361	+	1-09748 032-0	226	+	1-14119 267-0	146	+	1-31214 060-0	184
+	1-09701 215-1	243	+	1-09810 073-2	344	+	1-14219 279-0	143	+	1-31219 012-0	184
+	1-09701 236-0	265	+	1-09810 074-1	344	+	1-15619 507-0	87	+	1-31219 013-0	184
+	1-09701 246-1	160	+	1-09811 002-1	187	+	1-15641 046-0	88	+	1-31220 407-0	184
+	1-09701 247-1	194	+	1-09811 339-0	327	+	1-19110 075-0	79	+	1-31221 129-0	184
+	1-09701 282-0	75	+	1-09812 041-2	343	+	1-19115 015-0	79	+	1-31229 001-0	184
+	1-09701 284-0	75	+	1-09812 042-1	343	+	1-19115 016-0	79	+	1-31232 005-0	184
+	1-09701 284-0	357	+	1-09812 056-1	344	+	1-19119 039-0	80	+	1-31232 014-0	184
+	1-09701 304-0	316	+	1-09812 058-1	344	+	1-19130 010-1	79	+	1-31233 003-0	184
+	1-09704 057-0	139	+	1-09812 062-2	344	+	1-19151 303-0	79	+	1-31235 008-0	185
+	1-09704 082-0	356	+	1-09812 153-0	338	+	1-19156 086-1	79	+	1-31235 014-0	185
+	1-09704 085-0	356	+	1-09812 154-0	338	+	1-19159 023-0	80	+	1-31239 019-0	185
+	1-09704 085-0	357	+	1-09812 206-0	333	+	1-19161 027-0	79	+	1-31239 058-0	185
+	1-09704 102-0	160	+	1-09812 207-0	333	+	1-19163 058-0	79	+	1-31239 059-0	187
+	1-09704 102-0	272	+	1-09812 249-0	344	+	1-19163 068-1	79	+	1-31239 061-0	185
+	1-09707 001-1	582	+	1-09829 031-0	328	+	1-19163 069-0	79	+	1-31240 949-1	184
+	1-09707 107-1	578	+	1-09829 033-1	328	+	1-19167 003-0	79	+	1-31310 012-0	185
+	1-09707 126-0	577	+	1-09840 019-1	333	+	1-19169 004-0	79	+	1-31329 024-0	185
+	1-09707 144-0	146	+	1-09841 003-0	333	+	1-19171 090-1	79	+	1-31341 031-0	184
+	1-09707 158-0	25	+	1-09893 003-0	338	+	1-19173 023-0	79	+	1-31342 331-0	185
+	1-09707 162-1	581	+	1-09980 495-0	461	+	1-19179 032-0	80	+	1-31424 009-0	186
+	1-09707 183-0	316	+	1-09980 498-0	265	+	1-19179 033-0	80	+	1-31426 019-1	186
+	1-09707 183-0	578	+	1-09980 543-0	130	+	1-19179 034-0	80	+	1-31429 464-0	186
+	1-09707 183-0	581	+	1-09981 536-1	634	+	1-19500 636-1	361	+	1-31429 465-1	186
+	1-09709 178-0	581	+	1-09981 541-0	499	+	1-19511 158-1	371	+	1-31811 123-0	199

https://truckmanualshub.com/

NUMERICAL INDEX

1-31424-009-0 - 1-47150-375-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	1-31811 144-0	200	+	1-36355 037-0	345	+	1-42315 361-0	337	+	1-44159 161-0	367
+	1-31811 146-0	199	+	1-36355 039-0	345	+	1-42331 106-2	337	+	1-44240 157-0	366
+	1-31821 064-0	197	+	1-36355 041-0	345	+	1-42331 112-1	333	+	1-44241 127-0	368
+	1-31821 083-0	198	+	1-36355 043-0	345	+	1-42332 106-2	337	+	1-44250 007-0	368
+	1-31821 087-0	199	+	1-36355 045-0	345	+	1-42332 112-1	333	+	1-44259 034-1	368
+	1-31824 126-0	200	+	1-36355 047-0	345	+	1-42333 022-3	391	+	1-44259 035-1	368
+	1-31824 251-0	197	+	1-37211 056-3	322	+	1-42334 022-3	391	+	1-44259 057-0	368
+	1-31829 003-0	197	+	1-37245 414-0	345	+	1-42355 015-A	391	+	1-44259 058-0	368
+	1-31829 015-0	199	+	1-37247 024-0	325	+	1-42374 001-0	391	+	1-44260 027-0	366
+	1-31829 032-0	197	+	1-37515 119-0	325	+	1-43116 013-0	330	+	1-44277 006-0	366
+	1-31829 033-0	197	+	1-37515 121-0	325	+	1-43150 748-1	330	+	1-44279 015-0	366
+	1-31829 037-0	199	+	1-37516 059-0	323	+	1-43150 749-1	330	+	1-44320 012-0	366
+	1-31829 053-0	199	+	1-38121 004-1	240	+	1-43171 261-1	328	+	1-44380 321-0	353
+	1-31829 060-0	199	+	1-38159 007-0	240	+	1-43171 262-1	328	+	1-44519 071-0	366
+	1-31829 103-0	200	+	1-38226 058-1	241	+	1-43171 263-1	328	+	1-44519 071-0	367
+	1-31829 105-0	197	+	1-41003 254-0	341	+	1-43171 264-1	328	+	1-44519 110-0	368
+	1-31829 107-0	197	+	1-41003 255-0	341	+	1-43171 265-1	328	+	1-44519 153-0	367
+	1-31829 108-0	197	+	1-41110 129-0	343	+	1-43171 266-1	328	+	1-44519 154-0	367
+	1-31829 109-0	197	+	1-41121 013-0	344	+	1-43171 267-1	328	+	1-44519 155-0	367
+	1-31829 111-0	198	+	1-41121 015-0	344	+	1-43171 268-1	328	+	1-44519 156-0	367
+	1-31829 112-0	198	+	1-41151 027-0	342	+	1-43171 269-1	328	+	1-44519 157-1	366
+	1-31829 113-0	199	+	1-41154 021-1	343	+	1-43171 270-1	328	+	1-44519 158-0	366
+	1-31829 114-0	199	+	1-41154 051-1	343	+	1-43171 271-1	328	+	1-44519 159-1	366
+	1-31829 143-0	199	+	1-41154 052-1	343	+	1-43171 272-1	328	+	1-44519 161-0	366
+	1-31829 186-0	197	+	1-41154 053-1	343	+	1-43171 273-1	328	+	1-44519 162-1	366
+	1-31829 212-0	199	+	1-41210 391-2	343	+	1-43171 274-1	328	+	1-44519 163-0	366
+	1-31829 248-0	198	+	1-41210 453-0	343	+	1-43171 275-1	328	+	1-44519 165-0	367
+	1-31829 358-0	198	+	1-41227 006-0	343	+	1-43171 276-1	328	+	1-44519 262-0	367
+	1-31829 420-0	199	+	1-41229 179-0	342	+	1-43171 277-1	328	+	1-44519 303-0	368
+	1-31829 489-0	200	+	1-41229 180-0	342	+	1-43171 278-1	329	+	1-44560 068-0	367
+	1-31829 495-0	200	+	1-41229 181-0	342	+	1-43171 279-1	329	+	1-44560 069-0	367
+	1-31829 503-0	197	+	1-41229 182-0	342	+	1-43171 280-1	329	+	1-44561 017-0	367
+	1-31829 535-0	200	+	1-41229 183-0	342	+	1-43171 281-1	329	+	1-44569 103-0	367
+	1-31829 536-0	199	+	1-41229 184-0	342	+	1-43171 311-0	329	+	1-46211 020-0	256
+	1-31829 537-0	199	+	1-41229 185-0	342	+	1-43171 312-0	329	+	1-46213 023-0	256
+	1-31829 564-0	197	+	1-41229 186-0	342	+	1-43171 313-0	329	+	1-46213 115-0	256
+	1-31829 599-0	200	+	1-41229 187-0	342	+	1-43171 314-0	329	+	1-46219 018-0	257
+	1-31829 605-0	197	+	1-41229 188-0	342	+	1-43171 315-0	329	+	1-46220 029-0	256
+	1-33262 175-1	217	+	1-41229 189-0	342	+	1-43171 316-0	329	+	1-46251 070-0	256
+	1-33611 068-1	229	+	1-41510 343-0	344	+	1-43171 317-0	329	+	1-46252 057-0	256
+	1-33619 427-0	229	+	1-41521 050-2	341	+	1-43171 318-0	329	+	1-46259 007-0	265
+	1-33619 429-0	229	+	1-41551 049-0	341	+	1-43171 319-0	329	+	1-47120 624-0	247
+	1-33619 430-0	230	+	1-41561 149-0	341	+	1-43171 320-0	329	+	1-47120 626-0	251
+	1-33619 435-0	229	+	1-41562 061-0	341	+	1-43171 321-0	329	+	1-47125 801-0	247
+	1-33619 442-0	229	+	1-41562 062-0	341	+	1-43171 322-0	329	+	1-47125 802-0	247
+	1-33619 443-0	229	+	1-41562 063-0	341	+	1-43171 323-0	329	+	1-47125 803-0	251
+	1-33619 504-0	230	+	1-41562 064-0	341	+	1-43171 324-0	329	+	1-47125 804-0	251
+	1-33619 505-0	230	+	1-41562 080-0	341	+	1-43171 325-0	329	+	1-47139 064-0	251
+	1-33657 267-0	237	+	1-41562 081-0	341	+	1-43171 326-0	329	+	1-47150 375-0	248
+	1-33739 070-0	372	+	1-41562 082-0	341	+	1-43175 030-0	331	+	1-47150 376-0	248
+	1-33739 271-0	371	+	1-41562 119-0	342	+	1-43175 031-0	330	+	1-47150 467-0	251
+	1-33739 842-0	225	+	1-42311 009-6	337	+	1-44000 951-1	349	+	1-47150 468-0	251
+	1-36355 031-0	345	+	1-42312 104-0	333	+	1-44159 060-0	368	+	1-47159 103-0	253
+	1-36355 033-0	345	+	1-42313 032-0	333	+	1-44159 064-0	368	+	1-47159 184-0	253
+	1-36355 035-0	345	+	1-42315 359-1	333	+	1-44159 119-0	368	+	1-47162 050-0	251

https://truckmanualshub.com/

NUMERICAL INDEX

1-47150-376-0 - 1-79931-484-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	1-47162 050-0	253	+	1-47630 013-1	248	+	1-48199 524-0	288	+	1-71737 936-0	500
+	1-47414 237-0	248	+	1-47630 014-1	248	+	1-48199 526-0	288	+	1-71798 356-2	500
+	1-47414 238-0	248	+	1-47800 826-0	271	+	1-48199 527-0	288	+	1-71798 422-0	498
+	1-47414 241-0	248	+	1-47811 137-0	279	+	1-48199 529-0	287	+	1-71798 591-1	498
+	1-47414 242-0	248	+	1-47819 194-0	279	+	1-48199 534-0	260	+	1-71798 838-0	501
+	1-47421 815-0	251	+	1-47819 195-0	278	+	1-48199 539-0	288	+	1-71998 789-2	523
+	1-47427 105-0	296	+	1-47819 196-0	278	+	1-48199 579-0	287	+	1-71998 790-2	523
+	1-47427 106-0	296	+	1-47819 197-0	278	+	1-48199 619-0	288	+	1-72447 391-1	536
+	1-47428 809-0	304	+	1-47819 198-0	278	+	1-48219 198-0	283	+	1-72448 376-0	524
+	1-47428 814-0	304	+	1-47819 199-0	279	+	1-48312 015-0	270	+	1-72448 379-3	524
+	1-47428 851-0	161	+	1-47819 200-0	278	+	1-48320 012-2	275	+	1-72498 019-1	583
+	1-47428 869-0	308	+	1-47819 201-0	279	+	1-48320 031-1	270	+	1-72538 161-3	527
+	1-47428 871-0	312	+	1-47819 202-0	279	+	1-49115 480-0	304	+	1-72538 187-0	536
+	1-47428 872-0	309	+	1-47821 053-0	278	+	1-49124 782-0	194	+	1-72538 190-0	536
+	1-47428 883-0	308	+	1-47824 035-0	279	+	1-51162 037-0	376	+	1-72538 312-0	536
+	1-47428 885-0	308	+	1-47824 041-0	278	+	1-51172 112-0	376	+	1-73907 176-1	477
+	1-47459 011-0	163	+	1-47829 098-0	279	+	1-51177 149-0	376	+	1-75198 053-0	535
+	1-47471 291-0	186	+	1-47829 101-0	278	+	1-51361 016-0	383	+	1-75418 062-1	533
+	1-47475 299-2	162	+	1-47829 102-0	278	+	1-51361 017-0	383	+	1-75518 209-0	534
+	1-47475 304-0	582	+	1-47829 103-0	278	+	1-51362 038-2	383	+	1-75518 262-0	536
+	1-47476 792-0	317	+	1-47829 104-0	279	+	1-51372 059-0	383	+	1-75518 263-0	536
+	1-47479 380-0	579	+	1-47829 105-0	279	+	1-51631 004-0	375	+	1-75518 288-0	535
+	1-47500 250-2	203	+	1-47829 141-0	278	+	1-51631 023-0	375	+	1-75518 289-1	535
+	1-47519 013-0	203	+	1-47829 142-0	279	+	1-51681 586-4	375	+	1-75538 207-A	535
+	1-47519 014-0	203	+	1-47841 095-0	278	+	1-51681 587-4	375	+	1-75538 207-A	536
+	1-47519 015-0	203	+	1-48100 924-0	282	+	1-53194 594-1	107	+	1-76218 102-0	491
+	1-47519 016-0	203	+	1-48119 213-0	282	+	1-53215 184-0	43	+	1-76378 155-0	434
+	1-47519 017-0	203	+	1-48119 641-0	282	+	1-53352 154-2	397	+	1-76798 019-0	266
+	1-47519 018-0	203	+	1-48119 642-0	283	+	1-53353 090-4	398	+	1-76798 019-0	455
+	1-47525 030-0	273	+	1-48119 644-0	282	+	1-53354 074-0	398	+	1-76798 019-0	477
+	1-47529 017-0	273	+	1-48123 075-0	282	+	1-53356 059-1	398	+	1-76798 019-0	481
+	1-47529 018-0	273	+	1-48123 076-0	282	+	1-53457 191-0	462	+	1-76798 019-0	501
+	1-47529 019-0	271	+	1-48123 077-0	282	+	1-53485 074-0	487	+	1-76798 019-0	584
+	1-47529 022-0	273	+	1-48123 078-0	282	+	1-57181 003-5	487	+	1-76798 019-0	597
+	1-47530 185-1	272	+	1-48123 079-0	282	+	1-61281 380-2	465	+	1-79338 007-0	434
+	1-47537 056-2	272	+	1-48129 299-0	282	+	1-62500 503-0	407	+	1-79718 655-0	408
+	1-47600 938-0	247	+	1-48129 300-0	282	+	1-62500 517-1	409	+	1-79738 832-0	312
+	1-47600 939-0	247	+	1-48129 302-0	282	+	1-62500 587-0	410	+	1-79931 471-0	461
+	1-47600 956-0	252	+	1-48129 305-0	283	+	1-62500 588-0	410	+	1-79931 472-2	461
+	1-47600 957-0	252	+	1-48129 307-0	282	+	1-62500 628-0	401	+	1-79931 477-1	463
+	1-47600 958-0	252	+	1-48129 308-0	282	+	1-62500 758-0	407	+	1-79931 479-3	462
+	1-47600 959-0	252	+	1-48199 395-0	288	+	1-71707 152-1	498	+	1-79931 482-0	461
+	1-47615 020-0	252	+	1-48199 396-0	288	+	1-71736 489-2	499	+	1-79931 484-0	461
+	1-47619 009-0	252	+	1-48199 412-0	288	+	1-71737 646-2	500	+	1-79996 548-0	264
+	1-47622 020-0	247	+	1-48199 417-0	288	+	1-71737 649-1	500	+	1-79998 228-0	148
+	1-47622 021-0	247	+	1-48199 436-0	288	+	1-71737 704-0	500	+	1-79998 751-4	229
+	1-47622 033-0	252	+	1-48199 495-0	288	+	1-71737 760-1	500	+	1-79998 891-1	479
+	1-47622 034-0	252	+	1-48199 496-0	288	+	1-71737 797-0	498	+	1-80220 023-1	309
+	1-47624 309-0	252	+	1-48199 504-0	288	+	1-71737 917-3	498	+	1-81229 382-0	119
+	1-47624 310-0	252	+	1-48199 515-0	287	+	1-71737 918-3	498	+	1-81229 476-0	120
+	1-47624 311-0	252	+	1-48199 517-0	287	+	1-71737 922-1	498	+	1-81229 723-0	119
+	1-47624 318-0	247	+	1-48199 520-0	287	+	1-71737 926-0	500	+	1-81229 758-0	119
+	1-47624 319-0	247	+	1-48199 521-0	289	+	1-71737 927-0	500	+	1-81229 760-1	119
+	1-47629 072-0	249	+	1-48199 522-0	288	+	1-71737 933-0	500	+	1-82120 024-1	552
+	1-47629 072-0	252	+	1-48199 523-0	288	+	1-71737 934-0	500	+	1-82126 005-0	552

https://truckmanualshub.com/

NUMERICAL INDEX

1-79996-548-0 - 8-94389-764-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	1-82129 005-0	553	+	1-87813 119-4	18	+	7-05012 010-A	388	+	7-66001 320-A	388
+	1-82129 007-0	552	+	1-87813 120-4	18	+	7-05014 012-A	379	+	7-66020 314-A	383
+	1-82129 008-0	552	+	1-87813 441-1	4	+	7-31330 310-A	533	+	7-89002 333-A	391
+	1-82194 037-0	552	+	1-87813 442-1	4	+	7-31331 310-A	533	+	7-99300 310-A	642
+	1-82194 042-0	547	+	1-87813 443-1	4	+	7-31511 311-A	533	+	7-99300 324-A	641
+	1-82194 063-0	547	+	1-87813 721-0	4	+	7-31611 311-A	533	+	7-99301 344-A	641
+	1-82194 108-0	551	+	1-87813 722-0	4	+	7-31945 311-A	539	+	7-99302 305-A	641
+	1-82194 109-0	551	+	1-87813 723-0	4	+	7-31945 312-A	539	+	7-99302 306-A	641
+	1-82216 021-0	547	+	1-87830 679-0	247	+	7-31950 311-A	539	+	7-99303 314-A	641
+	1-82219 011-0	547	+	1-87830 770-0	252	+	7-31952 312-A	539	+	7-99305 315-A	642
+	1-82219 012-0	548	+	1-87831 173-1	186	+	7-32211 311-A	533	+	7-99311 211-A	642
+	1-82235 006-0	552	+	1-87831 295-1	327	+	7-32212 311-A	533	+	7-99315 317-A	641
+	1-82237 050-1	552	+	1-87831 296-1	327	+	7-32221 311-A	534	+	7-99400 000-A	641
+	1-82440 100-0	264	+	1-87870 399-0	384	+	7-32312 311-A	536	+	7-99400 001-A	641
+	1-82563 871-2	179	+	1-87870 466-0	377	+	7-39020 213-A	635	+	7-99400 002-A	641
+	1-82563 871-2	605	+	1-88310 501-1	247	+	7-41210 322-A	551	+	8-94105 162-1	51
+	1-82675 898-0	569	+	1-88310 502-1	247	+	7-41210 323-A	551	+	8-94107 762-0	226
+	1-82690 668-0	569	+	1-88310 551-1	251	+	7-42040 311-A	566	+	8-94111 137-0	234
+	1-82698 579-0	568	+	1-88310 552-1	251	+	7-42060 302-A	566	+	8-94111 904-0	43
+	1-82699 085-0	110	+	5-09000 275-0	70	+	7-43600 341-A	605	+	8-94119 796-0	537
+	1-82699 598-0	568	+	5-09030 036-1	248	+	7-65000-301-A	379	+	8-94122 971-0	264
+	1-82699 599-0	568	+	5-09580 098-0	97	+	7-65000-302-A	379	+	8-94122 971-0	469
+	1-82699 601-0	568	+	5-09605 005-0	20	+	7-65000-303-A	379	+	8-94122 971-0	597
+	1-82699 688-0	570	+	5-09700 348-0	583	+	7-65000-304-A	379	+	8-94123 623-1	7
+	1-82699 709-0	568	+	5-09707 030-1	160	+	7-65000-305-A	379	+	8-94128 483-0	434
+	1-83149 003-0	154	+	5-09707 030-1	577	+	7-65000-306-A	379	+	8-94128 483-0	621
+	1-83315 045-2	628	+	5-09707 030-1	578	+	7-65001 311-A	380	+	8-94128 483-0	634
+	1-83315 046-2	628	+	5-09707 030-1	581	+	7-65001 312-A	380	+	8-94128 727-0	249
+	1-83315 085-0	629	+	5-09707 031-1	111	+	7-65001 315-A	379	+	8-94128 727-0	252
+	1-83315 086-0	629	+	5-09707 031-1	577	+	7-65001 315-A	388	+	8-94133 207-5	7
+	1-83318 126-0	630	+	5-09707 031-1	578	+	7-65001-301-A	379	+	8-94134 250-1	613
+	1-83318 127-0	630	+	5-09707 031-1	582	+	7-65001-302-A	379	+	8-94135 397-0	547
+	1-83319 011-0	629	+	5-09707 031-1	598	+	7-65001-303-A	379	+	8-94152 613-0	24
+	1-83319 012-0	629	+	5-09707 057-0	73	+	7-65001-304-A	379	+	8-94152 972-0	115
+	1-83319 043-0	629	+	5-09709 020-0	265	+	7-65001-305-A	379	+	8-94158 156-1	358
+	1-83355 014-0	628	+	5-09812 062-1	342	+	7-65001-306-A	379	+	8-94158 328-0	24
+	1-83539 354-0	624	+	5-09812 063-0	342	+	7-65020 313-A	375	+	8-94159 507-0	433
+	1-85116 011-0	641	+	5-09843 003-0	97	+	7-65021 313-A	375	+	8-94169 022-0	131
+	1-85253 012-0	642	+	5-09981 059-0	541	+	7-66000 310-A	387	+	8-94169 028-0	162
+	1-85253 026-0	642	+	5-09983 007-0	420	+	7-66000 311-A	387	+	8-94170 486-0	68
+	1-85315 002-0	642	+	5-11129 006-0	12	+	7-66000 312-A	387	+	8-94173 412-0	18
+	1-85510 005-2	642	+	5-11129 006-0	19	+	7-66000 313-A	387	+	8-94173 412-0	85
+	1-85515 007-A	641	+	5-11779 001-0	107	+	7-66000 314-A	387	+	8-94174 537-0	68
+	1-85574 046-0	331	+	5-12565 004-0	29	+	7-66000 315-A	387	+	8-94174 638-0	551
+	1-85574 046-0	353	+	5-15759 003-0	87	+	7-66000 316-A	387	+	8-94174 639-0	551
+	1-85574 073-0	371	+	5-53615 004-1	413	+	7-66000 317-A	387	+	8-94178 624-0	551
+	1-85574 090-0	366	+	5-76777 035-0	481	+	7-66000 318-A	387	+	8-94178 625-0	551
+	1-85576 383-0	287	+	5-82194 030-0	555	+	7-66000 319-A	387	+	8-94206 429-1	264
+	1-85576 454-0	282	+	5-83148 001-0	153	+	7-66000 320-A	387	+	8-94217 227-0	61
+	1-85576 456-0	287	+	5-87832 126-1	205	+	7-66000 321-A	387	+	8-94221 519-0	69
+	1-85576 461-0	203	+	7-04008 090-A	388	+	7-66000 322-A	388	+	8-94224 891-1	583
+	1-85576 480-0	278	+	7-04008 090-A	388	+	7-66000 323-A	388	+	8-94225 562-0	101
+	1-86810 044-0	629	+	7-04012 192-A	388	+	7-66000 324-A	388	+	8-94228 436-0	115
+	1-86810 098-0	629	+	7-04014 105-A	379	+	7-66000 325-A	388	+	8-94233 115-0	613
+	1-86815 003-2	630	+	7-05012 010-A	367	+	7-66000 326-A	388	+	8-94238 568-0	161

https://truckmanualshub.com/

NUMERICAL INDEX

8-94390-783-2 - 8-97253-110-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	8-94238 570-0	53	+	8-94389 764-0	63	+	8-97013 566-2	93	+	8-97115 712-0	209
+	8-94238 571-0	161	+	8-94390 783-2	29	+	8-97016 314-0	93	+	8-97115 816-0	116
+	8-94238 596-0	189	+	8-94390 842-1	361	+	8-97019 477-0	68	+	8-97117 107-0	116
+	8-94238 596-0	260	+	8-94390 858-1	14	+	8-97019 478-0	68	+	8-97120 005-1	30
+	8-94242 034-0	53	+	8-94391 310-0	14	+	8-97021 211-1	57	+	8-97120 747-0	413
+	8-94242 034-0	272	+	8-94391 468-0	29	+	8-97022 565-0	409	+	8-97127 607-0	7
+	8-94242 798-A	641	+	8-94391 794-1	34	+	8-97022 566-0	409	+	8-97129 615-0	407
+	8-94249 524-2	210	+	8-94392 002-3	28	+	8-97025 673-0	115	+	8-97131 328-1	213
+	8-94257 505-0	551	+	8-94392 236-0	14	+	8-97028 541-0	39	+	8-97135 419-0	40
+	8-94257 506-0	551	+	8-94392 999-0	30	+	8-97028 733-0	33	+	8-97135 423-0	19
+	8-94257 507-0	552	+	8-94393 131-0	28	+	8-97028 748-1	39	+	8-97135 423-0	210
+	8-94257 512-1	551	+	8-94393 280-3	60	+	8-97030 387-0	115	+	8-97135 423-0	211
+	8-94262 093-0	477	+	8-94394 342-4	33	+	8-97030 401-0	116	+	8-97138 011-0	53
+	8-94272 533-0	501	+	8-94394 671-0	69	+	8-97031 428-0	433	+	8-97141 154-0	75
+	8-94275 946-0	552	+	8-94394 803-0	28	+	8-97036 335-1	19	+	8-97146 499-1	51
+	8-94279 043-0	350	+	8-94395 024-0	29	+	8-97036 550-1	18	+	8-97146 519-0	93
+	8-94279 043-0	479	+	8-94395 684-0	7	+	8-97039 277-0	43	+	8-97146 684-0	93
+	8-94279 078-0	430	+	8-94395 766-0	148	+	8-97039 749-2	68	+	8-97148 268-3	94
+	8-94279 078-0	453	+	8-94395 882-2	28	+	8-97039 753-1	51	+	8-97148 270-1	93
+	8-94279 078-0	541	+	8-94396 015-2	29	+	8-97039 777-1	68	+	8-97149 012-3	53
+	8-94279 078-0	634	+	8-94396 439-0	28	+	8-97039 947-1	43	+	8-97160 857-0	323
+	8-94279 089-0	479	+	8-94396 485-1	75	+	8-97043 732-1	512	+	8-97167 588-0	347
+	8-94279 201-0	130	+	8-94396 711-0	91	+	8-97049 147-0	229	+	8-97171 437-0	134
+	8-94279 201-0	477	+	8-94397 286-0	13	+	8-97049 577-1	63	+	8-97173 035-1	569
+	8-94279 501-0	434	+	8-94397 496-1	33	+	8-97061 543-0	51	+	8-97173 035-1	593
+	8-94279 517-0	146	+	8-94399 339-0	94	+	8-97066 386-1	87	+	8-97173 307-0	410
+	8-94279 627-0	41	+	8-94399 398-0	97	+	8-97071 956-0	97	+	8-97173 307-0	577
+	8-94279 723-0	430	+	8-94399 399-0	94	+	8-97077 638-0	12	+	8-97176 230-0	18
+	8-94279 804-0	512	+	8-94399 487-0	28	+	8-97077 638-0	19	+	8-97182 099-0	371
+	8-94279 974-1	432	+	8-94399 553-2	19	+	8-97086 823-0	582	+	8-97182 103-0	371
+	8-94279 974-1	457	+	8-94399 554-0	12	+	8-97086 825-0	578	+	8-97186 398-1	30
+	8-94279 989-0	430	+	8-94399 555-0	12	+	8-97086 825-0	583	+	8-97186 988-0	25
+	8-94311 234-0	73	+	8-94399 688-1	18	+	8-97086 825-0	605	+	8-97186 994-0	25
+	8-94314 317-0	501	+	8-94407 876-1	477	+	8-97087 205-0	110	+	8-97186 998-0	25
+	8-94316 410-0	300	+	8-94408 500-0	116	+	8-97087 205-0	112	+	8-97187 000-0	25
+	8-94316 410-0	316	+	8-94410 361-0	186	+	8-97088 685-1	48	+	8-97190 390-0	24
+	8-94322 512-2	13	+	8-94412 342-0	229	+	8-97092 314-0	7	+	8-97190 391-0	25
+	8-94322 513-2	13	+	8-94413 325-0	577	+	8-97096 192-1	172	+	8-97190 392-0	25
+	8-94323 068-0	25	+	8-94416 438-1	566	+	8-97096 677-4	93	+	8-97190 392-0	40
+	8-94324 205-0	419	+	8-94422 639-1	566	+	8-97096 821-0	12	+	8-97192 423-0	116
+	8-94324 556-2	433	+	8-94422 639-1	568	+	8-97096 824-0	19	+	8-97200 308-0	65
+	8-94331 747-1	461	+	8-94424 179-0	112	+	8-97096 826-0	30	+	8-97203 278-0	85
+	8-94334 681-1	30	+	8-94430 184-1	433	+	8-97098 326-0	621	+	8-97209 609-0	19
+	8-94334 682-0	30	+	8-94441 539-0	611	+	8-97101 436-0	580	+	8-97209 728-2	30
+	8-94334 870-1	33	+	8-94455 144-0	69	+	8-97103 142-0	225	+	8-97209 876-3	28
+	8-94337 761-0	592	+	8-94457 277-1	174	+	8-97105 689-6	148	+	8-97209 950-0	70
+	8-94338 878-1	94	+	8-94457 278-1	174	+	8-97108 643-0	63	+	8-97210 682-0	29
+	8-94340 670-0	51	+	8-94458 473-1	60	+	8-97108 669-0	51	+	8-97214 384-1	70
+	8-94342 574-0	57	+	8-94463 268-1	430	+	8-97108 669-0	523	+	8-97217 569-0	116
+	8-94343 031-1	239	+	8-94466 382-0	53	+	8-97108 669-0	524	+	8-97217 570-0	116
+	8-94358 581-0	448	+	8-94475 376-0	372	+	8-97108 669-0	541	+	8-97219 466-4	65
+	8-94368 617-0	130	+	8-94479 696-1	345	+	8-97111 477-0	48	+	8-97226 908-0	7
+	8-94372 221-1	30	+	8-94482 280-2	527	+	8-97113 167-0	31	+	8-97229 357-0	577
+	8-94373 246-3	40	+	8-94483 674-0	19	+	8-97113 340-0	401	+	8-97230 557-0	115
+	8-94381 420-0	139	+	8-97011 596-2	226	+	8-97114 779-0	40	+	8-97230 559-0	116

https://truckmanualshub.com/

NUMERICAL INDEX

8-97253-111-0 - 8-97405-310-1

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	8-97230 560-0	115	+	8-97253 111-0	219	+	8-97306 081-0	85	+	8-97359 052-0	134
+	8-97230 562-0	115	+	8-97253 113-0	217	+	8-97306 185-0	219	+	8-97359 805-0	391
+	8-97230 563-0	116	+	8-97253 114-0	218	+	8-97306 186-0	219	+	8-97359 806-0	391
+	8-97232 491-0	547	+	8-97253 115-3	220	+	8-97306 187-0	219	+	8-97359 809-0	391
+	8-97233 428-0	147	+	8-97253 119-2	220	+	8-97306 421-3	29	+	8-97359 810-0	391
+	8-97238 540-0	606	+	8-97253 120-1	220	+	8-97306 424-3	29	+	8-97360 054-0	292
+	8-97239 155-2	220	+	8-97253 122-1	219	+	8-97306 596-0	239	+	8-97360 054-0	296
+	8-97239 187-0	134	+	8-97253 125-0	213	+	8-97306 597-0	240	+	8-97360 121-0	376
+	8-97241 228-0	216	+	8-97253 550-0	209	+	8-97306 647-0	224	+	8-97360 410-0	218
+	8-97241 236-1	216	+	8-97253 551-1	209	+	8-97307 026-0	629	+	8-97362 735-0	227
+	8-97241 245-0	217	+	8-97253 555-0	217	+	8-97310 438-1	88	+	8-97362 737-1	224
+	8-97241 264-0	217	+	8-97253 563-1	213	+	8-97310 498-2	101	+	8-97362 738-1	224
+	8-97241 292-2	218	+	8-97254 182-0	217	+	8-97317 001-1	634	+	8-97363 225-0	225
+	8-97241 295-2	216	+	8-97254 609-0	218	+	8-97319 495-0	479	+	8-97363 478-0	55
+	8-97241 296-1	216	+	8-97254 720-0	219	+	8-97321 385-0	350	+	8-97363 723-0	49
+	8-97241 299-2	216	+	8-97254 735-0	217	+	8-97323 806-0	548	+	8-97364 386-0	24
+	8-97241 301-2	217	+	8-97254 738-0	217	+	8-97328 058-1	597	+	8-97365 354-0	211
+	8-97241 305-2	216	+	8-97254 741-0	217	+	8-97328 859-0	18	+	8-97365 374-0	211
+	8-97241 306-1	216	+	8-97254 743-0	216	+	8-97329 348-0	115	+	8-97365 375-0	225
+	8-97241 306-1	220	+	8-97254 889-0	217	+	8-97329 617-0	20	+	8-97365 376-0	224
+	8-97241 307-1	220	+	8-97255 184-1	217	+	8-97329 618-0	19	+	8-97365 377-0	209
+	8-97241 311-1	220	+	8-97255 351-1	224	+	8-97329 621-0	327	+	8-97365 378-0	227
+	8-97241 313-1	216	+	8-97256 855-0	216	+	8-97329 623-0	164	+	8-97365 379-0	210
+	8-97241 314-2	211	+	8-97257 443-4	239	+	8-97329 625-0	229	+	8-97365 444-0	256
+	8-97241 317-3	227	+	8-97257 621-0	219	+	8-97329 625-0	445	+	8-97365 445-0	257
+	8-97241 324-1	224	+	8-97258 239-0	34	+	8-97329 625-0	461	+	8-97365 449-0	569
+	8-97241 326-2	210	+	8-97262 166-0	28	+	8-97329 625-0	462	+	8-97365 616-0	218
+	8-97241 327-1	227	+	8-97262 933-0	593	+	8-97329 780-0	39	+	8-97365 771-0	112
+	8-97241 340-0	226	+	8-97262 933-0	605	+	8-97329 914-0	57	+	8-97367 327-0	225
+	8-97241 342-0	226	+	8-97264 766-0	511	+	8-97330 118-1	86	+	8-97367 381-0	63
+	8-97241 345-1	227	+	8-97264 947-0	106	+	8-97330 119-1	86	+	8-97367 984-1	49
+	8-97245 202-1	125	+	8-97264 969-0	125	+	8-97331 359-1	7	+	8-97369 404-0	31
+	8-97249 574-0	442	+	8-97286 915-0	218	+	8-97331 360-1	14	+	8-97369 404-0	597
+	8-97250 073-1	51	+	8-97288 618-0	218	+	8-97331 361-2	7	+	8-97369 959-0	53
+	8-97252 624-2	209	+	8-97288 619-0	218	+	8-97331 362-1	14	+	8-97371 089-0	216
+	8-97252 626-0	210	+	8-97288 620-0	218	+	8-97331 921-1	49	+	8-97372 076-1	33
+	8-97252 655-0	218	+	8-97300 273-1	226	+	8-97333 303-0	453	+	8-97372 077-1	33
+	8-97252 656-0	218	+	8-97300 787-2	57	+	8-97334 100-2	93	+	8-97372 078-1	33
+	8-97252 657-0	218	+	8-97300 790-2	57	+	8-97334 414-0	30	+	8-97373 108-0	174
+	8-97252 658-0	218	+	8-97300 793-0	57	+	8-97350 021-0	30	+	8-97373 119-0	97
+	8-97252 659-0	219	+	8-97302 305-0	189	+	8-97350 995-0	134	+	8-97374 129-1	240
+	8-97252 660-0	219	+	8-97305 661-0	225	+	8-97350 997-0	135	+	8-97374 412-0	68
+	8-97252 661-0	219	+	8-97305 662-0	225	+	8-97351 167-0	70	+	8-97375 107-0	357
+	8-97252 662-0	219	+	8-97305 663-0	224	+	8-97351 168-0	68	+	8-97375 384-0	88
+	8-97252 663-0	219	+	8-97305 792-1	239	+	8-97351 388-0	87	+	8-97375 638-0	139
+	8-97252 664-0	219	+	8-97305 794-0	240	+	8-97352 127-0	131	+	8-97375 675-1	33
+	8-97252 665-0	219	+	8-97305 798-0	240	+	8-97352 537-0	18	+	8-97375 820-0	635
+	8-97252 935-0	220	+	8-97305 803-1	220	+	8-97352 888-0	29	+	8-97376 076-1	43
+	8-97252 941-0	218	+	8-97305 810-0	239	+	8-97354 803-3	7	+	8-97376 719-2	12
+	8-97253 097-1	216	+	8-97305 817-0	239	+	8-97354 819-0	39	+	8-97376 720-0	29
+	8-97253 099-1	219	+	8-97305 818-0	241	+	8-97355 273-0	577	+	8-97376 779-0	87
+	8-97253 104-0	219	+	8-97305 820-1	239	+	8-97358 248-0	592	+	8-97376 783-1	60
+	8-97253 106-0	220	+	8-97306 040-0	101	+	8-97358 318-0	227	+	8-97376 784-0	60
+	8-97253 108-0	211	+	8-97306 054-0	85	+	8-97358 699-0	57	+	8-97377 688-0	115
+	8-97253 110-0	219	+	8-97306 059-1	85	+	8-97358 699-0	60	+	8-97377 689-0	115

https://truckmanualshub.com/

NUMERICAL INDEX

8-97405-311-0 - 8-97615-488-1

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	8-97377 690-0	116	+	8-97405 311-0	452	+	8-97409 491-0	511	+	8-97584 388-8	469
+	8-97377 691-0	115	+	8-97405 312-0	452	+	8-97409 495-0	347	+	8-97584 390-4	471
+	8-97377 804-0	101	+	8-97405 313-3	448	+	8-97409 845-0	522	+	8-97584 397-4	469
+	8-97378 871-0	547	+	8-97405 316-2	449	+	8-97409 896-1	467	+	8-97584 411-9	469
+	8-97378 874-0	548	+	8-97405 317-2	449	+	8-97409 965-0	534	+	8-97584 412-6	469
+	8-97378 874-0	549	+	8-97405 318-0	449	+	8-97409 966-1	534	+	8-97584 416-4	471
+	8-97378 875-0	548	+	8-97405 319-0	449	+	8-97409 973-0	535	+	8-97584 420-4	469
+	8-97378 910-0	442	+	8-97405 320-1	517	+	8-97409 974-0	535	+	8-97584 426-0	471
+	8-97379 140-0	60	+	8-97405 321-0	449	+	8-97409 975-0	534	+	8-97584 430-5	469
+	8-97379 202-0	48	+	8-97405 350-6	587	+	8-97409 976-0	535	+	8-97584 432-6	469
+	8-97379 228-1	60	+	8-97405 356-5	347	+	8-97409 980-1	536	+	8-97584 438-1	471
+	8-97379 783-1	88	+	8-97405 985-1	347	+	8-97410 180-4	548	+	8-97584 440-2	471
+	8-97380 613-1	41	+	8-97405 986-0	347	+	8-97410 181-3	548	+	8-97584 458-4	472
+	8-97380 614-1	41	+	8-97405 991-0	539	+	8-97410 276-0	512	+	8-97584 460-2	470
+	8-97380 682-0	337	+	8-97406 796-1	457	+	8-97410 736-0	409	+	8-97584 470-5	408
+	8-97381 404-0	106	+	8-97407 129-2	510	+	8-97410 738-0	431	+	8-97584 609-3	481
+	8-97381 455-0	172	+	8-97407 373-2	522	+	8-97410 739-0	429	+	8-97584 611-1	442
+	8-97381 603-1	13	+	8-97407 386-5	524	+	8-97410 740-2	429	+	8-97584 611-1	481
+	8-97382 827-2	135	+	8-97407 405-3	475	+	8-97411 015-1	465	+	8-97585 207-2	442
+	8-97382 868-1	211	+	8-97407 412-1	475	+	8-97411 875-0	467	+	8-97585 208-2	442
+	8-97382 870-0	120	+	8-97407 413-1	475	+	8-97411 909-0	533	+	8-97585 240-2	440
+	8-97382 872-0	119	+	8-97407 415-1	457	+	8-97411 910-2	533	+	8-97585 244-3	440
+	8-97382 874-0	119	+	8-97407 417-1	523	+	8-97411 915-0	534	+	8-97585 260-4	441
+	8-97382 931-1	211	+	8-97407 420-1	511	+	8-97411 916-0	534	+	8-97585 261-4	441
+	8-97383 001-1	14	+	8-97407 427-4	511	+	8-97412 555-0	347	+	8-97585 292-2	440
+	8-97384 067-2	413	+	8-97407 428-2	513	+	8-97415 617-1	349	+	8-97585 293-2	440
+	8-97384 068-2	413	+	8-97407 467-0	485	+	8-97417 050-0	350	+	8-97585 301-3	440
+	8-97384 130-0	94	+	8-97407 509-4	429	+	8-97417 261-0	535	+	8-97585 303-2	441
+	8-97385 293-1	147	+	8-97407 511-5	429	+	8-97417 263-0	536	+	8-97585 314-0	442
+	8-97385 713-0	226	+	8-97407 517-1	475	+	8-97419 968-1	510	+	8-97585 488-4	610
+	8-97386 189-0	28	+	8-97407 539-0	457	+	8-97421 976-1	513	+	8-97585 612-2	509
+	8-97386 233-0	135	+	8-97407 540-0	457	+	8-97422 055-1	453	+	8-97585 616-2	513
+	8-97386 295-0	358	+	8-97407 725-3	419	+	8-97422 056-1	453	+	8-97585 617-0	634
+	8-97386 548-0	33	+	8-97407 744-4	475	+	8-97422 095-0	509	+	8-97585 618-2	513
+	8-97386 549-0	33	+	8-97407 745-2	475	+	8-97422 207-0	513	+	8-97585 688-1	471
+	8-97386 557-4	85	+	8-97407 834-1	524	+	8-97422 209-0	512	+	8-97585 958-8	429
+	8-97386 874-1	524	+	8-97407 896-1	634	+	8-97422 490-1	485	+	8-97585 965-2	433
+	8-97386 922-1	592	+	8-97407 898-1	509	+	8-97422 653-0	511	+	8-97585 989-4	433
+	8-97386 939-0	523	+	8-97407 900-0	457	+	8-97423 015-0	509	+	8-97586 007-3	431
+	8-97387 038-0	48	+	8-97407 942-2	522	+	8-97520 137-A	552	+	8-97586 018-2	434
+	8-97388 568-1	40	+	8-97407 950-1	527	+	8-97520 138-A	552	+	8-97586 019-1	434
+	8-97389 264-0	265	+	8-97407 951-0	527	+	8-97581 053-0	130	+	8-97586 027-6	440
+	8-97389 921-0	28	+	8-97407 953-0	229	+	8-97581 234-0	174	+	8-97586 028-6	440
+	8-97405 171-0	522	+	8-97407 955-0	230	+	8-97581 651-2	423	+	8-97586 154-3	440
+	8-97405 247-0	479	+	8-97408 022-0	485	+	8-97584 191-3	465	+	8-97586 193-3	441
+	8-97405 249-2	522	+	8-97408 029-0	523	+	8-97584 312-3	481	+	8-97586 194-2	441
+	8-97405 255-2	457	+	8-97408 030-0	523	+	8-97584 345-9	470	+	8-97587 990-0	408
+	8-97405 282-0	467	+	8-97408 030-0	524	+	8-97584 351-2	472	+	8-97588 840-4	470
+	8-97405 285-2	522	+	8-97408 241-0	498	+	8-97584 361-1	471	+	8-97588 843-1	472
+	8-97405 286-0	523	+	8-97408 817-0	510	+	8-97584 363-1	471	+	8-97588 958-4	472
+	8-97405 305-6	455	+	8-97408 864-2	510	+	8-97584 367-2	470	+	8-97588 964-1	472
+	8-97405 307-6	455	+	8-97408 865-2	510	+	8-97584 371-7	469	+	8-97588 965-1	472
+	8-97405 308-0	455	+	8-97408 927-0	513	+	8-97584 373-1	471	+	8-97589 204-3	469
+	8-97405 309-1	452	+	8-97409 275-2	347	+	8-97584 375-2	470	+	8-97589 506-2	470
+	8-97405 310-1	452	+	8-97409 339-0	527	+	8-97584 387-9	469	+	8-97589 551-2	471

https://truckmanualshub.com/

NUMERICAL INDEX

8-97615-498-1 - 8-98029-201-1

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	8-97589 552-2	471	+	8-97619 097-1	582	+	8-98009 970-9	510	+	8-98014 003-0	257
+	8-97589 553-1	470	+	8-97619 417-0	76	+	8-98010 059-0	524	+	8-98014 046-1	18
+	8-97589 555-1	470	+	8-97619 418-0	76	+	8-98010 154-0	509	+	8-98014 047-1	18
+	8-97589 557-4	472	+	8-97619 533-0	579	+	8-98010 297-0	135	+	8-98014 088-3	524
+	8-97589 579-2	472	+	8-97619 535-0	579	+	8-98010 310-3	139	+	8-98014 094-0	523
+	8-97589 596-3	470	+	8-97619 727-1	110	+	8-98010 312-0	43	+	8-98014 142-0	209
+	8-97589 603-3	470	+	8-97619 917-0	577	+	8-98010 328-1	24	+	8-98014 157-1	224
+	8-97589 627-2	470	+	8-97620 375-0	107	+	8-98010 335-0	213	+	8-98014 158-0	227
+	8-97589 666-6	469	+	8-97621 003-1	569	+	8-98010 343-4	147	+	8-98017 052-0	312
+	8-97589 681-3	471	+	8-97624 016-0	579	+	8-98010 361-2	146	+	8-98017 202-1	509
+	8-97600 586-1	31	+	8-97637 078-0	399	+	8-98010 404-0	376	+	8-98017 204-1	509
+	8-97600 987-2	75	+	8-97808 623-0	477	+	8-98010 405-0	375	+	8-98017 585-1	97
+	8-97601 449-5	75	+	8-97811 510-0	442	+	8-98010 411-0	376	+	8-98018 425-2	34
+	8-97602 218-0	87	+	8-97854 900-0	534	+	8-98010 572-1	140	+	8-98018 438-0	296
+	8-97602 379-0	40	+	8-97855 140-0	628	+	8-98010 573-2	139	+	8-98018 439-0	349
+	8-97604 129-0	396	+	8-97855 163-0	629	+	8-98010 627-1	349	+	8-98018 439-0	511
+	8-97604 916-0	13	+	8-97856 616-0	611	+	8-98010 627-1	396	+	8-98018 439-0	610
+	8-97606 661-0	13	+	8-97859 101-0	130	+	8-98010 627-1	397	+	8-98018 440-0	509
+	8-97606 767-0	31	+	8-97892 742-0	514	+	8-98010 639-1	148	+	8-98018 785-3	270
+	8-97606 768-0	31	+	8-97957 708-0	617	+	8-98010 648-0	376	+	8-98018 863-1	34
+	8-97606 770-0	31	+	8-97957 708-0	625	+	8-98010 657-0	134	+	8-98018 935-3	28
+	8-97606 929-0	31	+	8-97957 882-A	642	+	8-98010 719-3	147	+	8-98018 941-0	134
+	8-97606 943-0	598	+	8-98001 041-0	87	+	8-98010 723-0	149	+	8-98019 024-0	31
+	8-97609 249-0	270	+	8-98001 095-0	569	+	8-98010 746-2	401	+	8-98019 191-0	111
+	8-97609 470-0	398	+	8-98003 191-0	63	+	8-98010 747-2	401	+	8-98019 301-2	147
+	8-97609 473-2	399	+	8-98003 384-1	34	+	8-98010 750-2	401	+	8-98019 302-1	147
+	8-97609 501-2	397	+	8-98003 416-0	13	+	8-98010 752-7	407	+	8-98019 303-1	147
+	8-97609 578-1	396	+	8-98004 024-3	34	+	8-98010 753-3	401	+	8-98019 310-0	465
+	8-97609 579-2	396	+	8-98004 025-0	455	+	8-98010 756-5	402	+	8-98019 506-0	408
+	8-97609 756-1	398	+	8-98004 025-0	512	+	8-98010 759-2	402	+	8-98019 536-0	227
+	8-97609 758-0	398	+	8-98004 187-0	13	+	8-98010 767-0	401	+	8-98019 649-0	611
+	8-97609 758-0	399	+	8-98004 319-1	410	+	8-98010 857-0	260	+	8-98019 743-0	63
+	8-97609 800-2	211	+	8-98004 342-0	453	+	8-98010 857-0	309	+	8-98020 217-0	130
+	8-97609 814-1	399	+	8-98004 343-2	452	+	8-98010 867-1	525	+	8-98020 247-0	63
+	8-97609 984-4	606	+	8-98004 344-0	522	+	8-98010 945-1	407	+	8-98020 514-0	606
+	8-97609 985-9	597	+	8-98004 344-0	523	+	8-98011 468-2	131	+	8-98020 800-0	322
+	8-97610 207-2	471	+	8-98006 089-0	621	+	8-98011 484-0	569	+	8-98020 815-0	323
+	8-97610 935-1	397	+	8-98006 150-0	349	+	8-98011 888-2	87	+	8-98020 881-0	323
+	8-97611 145-3	261	+	8-98006 478-0	135	+	8-98011 946-1	292	+	8-98020 882-0	323
+	8-97611 491-1	420	+	8-98006 479-1	151	+	8-98012 254-1	300	+	8-98020 885-0	325
+	8-97611 492-1	419	+	8-98006 828-0	34	+	8-98012 287-1	442	+	8-98020 889-0	323
+	8-97611 515-4	419	+	8-98007 161-0	189	+	8-98012 831-0	53	+	8-98021 271-0	512
+	8-97611 516-4	419	+	8-98007 161-0	260	+	8-98013 113-1	442	+	8-98021 300-1	431
+	8-97612 074-1	471	+	8-98008 124-1	431	+	8-98013 144-7	107	+	8-98021 377-1	189
+	8-97613 300-2	605	+	8-98008 126-1	431	+	8-98013 418-0	131	+	8-98021 406-1	189
+	8-97613 941-1	189	+	8-98008 127-2	434	+	8-98013 420-0	130	+	8-98021 489-0	224
+	8-97614 738-0	579	+	8-98008 895-0	85	+	8-98013 421-3	555	+	8-98021 560-0	189
+	8-97615 488-1	592	+	8-98009 043-2	106	+	8-98013 455-1	106	+	8-98021 827-0	356
+	8-97615 498-1	111	+	8-98009 081-0	239	+	8-98013 932-2	401	+	8-98021 918-4	270
+	8-97615 589-0	189	+	8-98009 115-1	24	+	8-98013 933-1	401	+	8-98022 041-0	273
+	8-97615 669-2	396	+	8-98009 245-0	569	+	8-98013 934-1	402	+	8-98022 106-2	569
+	8-97615 670-2	396	+	8-98009 333-0	210	+	8-98013 942-0	43	+	8-98022 211-0	592
+	8-97616 293-0	420	+	8-98009 361-0	61	+	8-98013 944-0	43	+	8-98022 259-2	130
+	8-97616 294-0	420	+	8-98009 418-0	147	+	8-98013 945-2	43	+	8-98023 050-0	224
+	8-97616 305-0	579	+	8-98009 742-1	618	+	8-98013 958-0	70	+	8-98023 050-0	226

https://truckmanualshub.com/

NUMERICAL INDEX

8-98029-202-1 - 8-98048-815-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	8-98023 095-0	226	+	8-98029 689-0	112	+	8-98037 368-0	621	+	8-98040 638-0	119
+	8-98023 257-2	524	+	8-98029 914-1	592	+	8-98037 369-0	621	+	8-98040 639-0	119
+	8-98023 581-0	87	+	8-98029 915-2	597	+	8-98037 370-0	621	+	8-98040 643-0	119
+	8-98023 692-0	402	+	8-98029 916-2	597	+	8-98037 371-0	621	+	8-98040 645-0	120
+	8-98023 883-0	107	+	8-98029 917-0	592	+	8-98037 629-0	511	+	8-98040 684-0	119
+	8-98023 991-0	265	+	8-98030 230-3	429	+	8-98037 629-0	513	+	8-98040 686-0	119
+	8-98024 765-0	569	+	8-98030 649-0	40	+	8-98037 712-2	430	+	8-98040 687-0	120
+	8-98024 838-3	448	+	8-98030 762-0	566	+	8-98037 713-2	430	+	8-98040 688-0	119
+	8-98024 839-3	448	+	8-98030 766-0	567	+	8-98037 773-0	241	+	8-98040 690-0	120
+	8-98025 006-1	624	+	8-98030 767-0	567	+	8-98037 823-0	99	+	8-98040 714-0	300
+	8-98025 412-3	110	+	8-98031 263-0	434	+	8-98037 825-0	99	+	8-98040 792-0	440
+	8-98025 428-2	524	+	8-98031 264-0	434	+	8-98038 285-1	455	+	8-98040 994-5	423
+	8-98025 533-1	605	+	8-98031 265-0	434	+	8-98038 286-1	455	+	8-98041 141-0	34
+	8-98025 698-0	423	+	8-98031 665-0	130	+	8-98038 293-0	445	+	8-98041 148-1	462
+	8-98025 705-0	409	+	8-98031 742-2	448	+	8-98038 299-1	445	+	8-98041 156-2	462
+	8-98025 921-0	148	+	8-98031 839-0	504	+	8-98038 403-0	20	+	8-98041 157-2	462
+	8-98025 921-0	261	+	8-98031 844-0	123	+	8-98038 418-4	130	+	8-98041 162-1	431
+	8-98025 954-1	592	+	8-98032 159-2	445	+	8-98038 608-0	429	+	8-98041 165-1	430
+	8-98025 954-1	593	+	8-98032 549-0	88	+	8-98038 703-1	331	+	8-98041 166-1	430
+	8-98025 954-1	597	+	8-98032 562-1	39	+	8-98038 892-0	630	+	8-98041 168-3	435
+	8-98026 806-0	131	+	8-98032 614-1	470	+	8-98038 970-1	469	+	8-98041 169-3	435
+	8-98027 457-0	423	+	8-98032 615-1	470	+	8-98039 019-0	441	+	8-98041 171-1	435
+	8-98027 457-0	434	+	8-98032 643-0	634	+	8-98039 020-0	441	+	8-98041 217-1	461
+	8-98027 968-1	51	+	8-98033 674-0	498	+	8-98039 045-1	408	+	8-98041 327-0	624
+	8-98028 326-1	541	+	8-98033 674-0	522	+	8-98039 293-0	86	+	8-98041 333-3	469
+	8-98028 561-1	510	+	8-98033 979-0	91	+	8-98039 376-1	539	+	8-98041 358-2	429
+	8-98028 562-1	510	+	8-98034 039-1	568	+	8-98039 426-1	407	+	8-98041 359-2	429
+	8-98028 563-1	510	+	8-98034 312-0	168	+	8-98039 593-1	445	+	8-98041 384-3	234
+	8-98028 743-0	431	+	8-98034 314-0	168	+	8-98039 661-4	628	+	8-98041 402-1	611
+	8-98028 874-0	12	+	8-98034 363-1	431	+	8-98039 704-0	630	+	8-98041 428-0	615
+	8-98028 875-0	12	+	8-98034 702-0	605	+	8-98039 708-0	629	+	8-98041 431-1	430
+	8-98028 999-1	86	+	8-98034 813-1	431	+	8-98039 917-2	463	+	8-98041 504-2	621
+	8-98029 052-2	452	+	8-98034 814-1	431	+	8-98039 918-1	463	+	8-98041 579-0	491
+	8-98029 053-2	452	+	8-98035 268-0	429	+	8-98039 931-1	40	+	8-98041 646-A	437
+	8-98029 086-1	437	+	8-98035 644-1	419	+	8-98039 932-2	39	+	8-98041 650-3	437
+	8-98029 095-0	106	+	8-98036 383-0	415	+	8-98039 934-0	85	+	8-98041 653-2	437
+	8-98029 173-2	452	+	8-98036 565-1	523	+	8-98039 935-0	85	+	8-98041 665-A	483
+	8-98029 189-A	448	+	8-98036 566-1	523	+	8-98039 936-0	85	+	8-98041 754-0	525
+	8-98029 190-A	448	+	8-98036 569-2	433	+	8-98039 937-0	85	+	8-98041 907-0	449
+	8-98029 192-1	449	+	8-98036 573-1	433	+	8-98039 987-0	168	+	8-98041 948-2	566
+	8-98029 193-1	449	+	8-98036 580-0	429	+	8-98040 009-3	610	+	8-98042 015-3	524
+	8-98029 195-3	448	+	8-98036 581-0	429	+	8-98040 011-1	610	+	8-98042 016-3	524
+	8-98029 196-3	448	+	8-98037 015-0	168	+	8-98040 016-1	610	+	8-98042 152-0	541
+	8-98029 199-3	455	+	8-98037 095-0	168	+	8-98040 021-0	499	+	8-98042 507-0	111
+	8-98029 201-1	455	+	8-98037 100-2	452	+	8-98040 022-1	499	+	8-98042 715-1	153
+	8-98029 202-1	455	+	8-98037 101-2	452	+	8-98040 125-0	34	+	8-98042 786-0	172
+	8-98029 233-3	448	+	8-98037 152-2	445	+	8-98040 351-0	499	+	8-98043 033-0	87
+	8-98029 234-3	448	+	8-98037 296-1	330	+	8-98040 353-1	499	+	8-98043 500-0	611
+	8-98029 256-0	139	+	8-98037 304-1	330	+	8-98040 535-0	499	+	8-98043 511-1	429
+	8-98029 270-0	33	+	8-98037 327-3	440	+	8-98040 537-1	499	+	8-98044 013-0	317
+	8-98029 290-3	445	+	8-98037 329-3	440	+	8-98040 541-1	500	+	8-98044 176-0	621
+	8-98029 394-2	455	+	8-98037 335-1	432	+	8-98040 543-1	499	+	8-98044 388-0	415
+	8-98029 395-2	455	+	8-98037 336-1	432	+	8-98040 544-2	499	+	8-98044 509-4	270
+	8-98029 396-0	455	+	8-98037 338-2	432	+	8-98040 545-1	500	+	8-98044 510-3	271
+	8-98029 417-5	445	+	8-98037 339-2	432	+	8-98040 546-1	500	+	8-98044 511-2	271

https://truckmanualshub.com/

NUMERICAL INDEX

8-98048-816-0 - 8-98069-427-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	8-98044 548-4	287	+	8-98051 105-0	272	+	8-98055 541-0	12	+	8-98060 258-0	376
+	8-98044 556-1	402	+	8-98051 161-0	477	+	8-98055 542-0	12	+	8-98060 302-1	592
+	8-98044 568-1	211	+	8-98051 217-0	271	+	8-98055 815-1	91	+	8-98060 332-0	375
+	8-98044 743-0	579	+	8-98051 218-0	271	+	8-98056 071-1	479	+	8-98060 333-0	376
+	8-98044 897-3	470	+	8-98051 381-2	110	+	8-98056 072-1	479	+	8-98060 335-0	376
+	8-98044 898-3	470	+	8-98051 387-0	548	+	8-98056 355-2	33	+	8-98060 339-0	423
+	8-98044 944-0	209	+	8-98051 390-0	549	+	8-98056 501-2	401	+	8-98060 388-0	606
+	8-98045 346-0	350	+	8-98051 400-0	547	+	8-98056 865-0	189	+	8-98060 780-0	30
+	8-98045 349-0	350	+	8-98051 401-0	547	+	8-98056 865-0	260	+	8-98060 839-0	410
+	8-98045 447-0	94	+	8-98051 428-0	548	+	8-98056 968-0	567	+	8-98060 852-0	173
+	8-98046 217-0	213	+	8-98051 431-0	549	+	8-98057 109-0	261	+	8-98060 908-0	435
+	8-98046 612-0	239	+	8-98051 490-2	512	+	8-98057 168-2	70	+	8-98061 489-1	408
+	8-98046 619-0	239	+	8-98051 492-2	512	+	8-98057 226-0	260	+	8-98061 625-3	273
+	8-98046 721-3	18	+	8-98051 495-0	548	+	8-98057 231-0	260	+	8-98061 675-0	149
+	8-98046 972-2	136	+	8-98052 458-0	579	+	8-98057 232-1	260	+	8-98061 699-0	86
+	8-98047 201-0	592	+	8-98052 679-0	577	+	8-98057 233-0	261	+	8-98061 743-0	592
+	8-98047 272-0	555	+	8-98053 040-1	358	+	8-98057 234-0	261	+	8-98061 760-0	432
+	8-98047 277-1	110	+	8-98053 145-1	435	+	8-98057 394-1	308	+	8-98061 761-0	432
+	8-98047 379-0	618	+	8-98053 146-1	435	+	8-98057 479-1	327	+	8-98061 762-0	432
+	8-98047 386-0	617	+	8-98053 711-0	509	+	8-98057 958-0	547	+	8-98061 777-0	513
+	8-98047 387-0	617	+	8-98053 721-0	353	+	8-98057 971-2	523	+	8-98061 799-5	625
+	8-98047 389-0	617	+	8-98053 799-0	642	+	8-98057 972-2	523	+	8-98061 856-0	634
+	8-98047 390-0	617	+	8-98053 800-0	642	+	8-98058 226-0	453	+	8-98061 883-0	499
+	8-98047 391-0	617	+	8-98054 172-5	177	+	8-98058 227-0	453	+	8-98062 215-0	429
+	8-98047 392-0	617	+	8-98054 181-0	63	+	8-98058 228-0	453	+	8-98062 270-0	455
+	8-98047 393-0	617	+	8-98054 257-0	566	+	8-98058 229-0	453	+	8-98062 271-0	455
+	8-98047 414-0	618	+	8-98054 257-0	567	+	8-98058 236-1	440	+	8-98062 280-0	401
+	8-98047 416-0	617	+	8-98054 258-0	566	+	8-98058 237-1	440	+	8-98062 280-0	408
+	8-98047 416-0	624	+	8-98054 258-0	567	+	8-98058 238-0	453	+	8-98062 651-1	49
+	8-98047 417-0	617	+	8-98054 259-0	566	+	8-98058 239-0	453	+	8-98062 661-0	533
+	8-98047 417-0	624	+	8-98054 260-0	567	+	8-98058 531-0	452	+	8-98062 662-0	535
+	8-98047 420-0	618	+	8-98054 289-0	69	+	8-98058 532-0	452	+	8-98062 663-A	533
+	8-98047 421-0	618	+	8-98054 342-0	548	+	8-98058 535-0	452	+	8-98062 675-0	611
+	8-98047 428-0	618	+	8-98054 431-0	587	+	8-98058 536-0	452	+	8-98062 757-1	617
+	8-98047 435-0	624	+	8-98054 432-0	587	+	8-98058 537-0	453	+	8-98062 806-1	621
+	8-98047 436-0	624	+	8-98054 433-0	587	+	8-98058 538-0	453	+	8-98062 982-0	566
+	8-98047 440-0	624	+	8-98054 651-0	597	+	8-98058 539-0	453	+	8-98063 002-1	635
+	8-98047 441-0	624	+	8-98055 051-0	140	+	8-98058 632-0	509	+	8-98063 007-0	70
+	8-98047 448-0	624	+	8-98055 148-0	504	+	8-98058 632-0	510	+	8-98063 218-0	534
+	8-98048 005-0	119	+	8-98055 149-0	504	+	8-98058 632-0	513	+	8-98063 223-0	537
+	8-98048 329-0	635	+	8-98055 150-0	504	+	8-98058 632-0	634	+	8-98063 224-0	537
+	8-98048 796-0	448	+	8-98055 170-0	504	+	8-98059 192-0	97	+	8-98063 225-0	537
+	8-98048 815-0	618	+	8-98055 181-0	504	+	8-98059 201-0	397	+	8-98063 269-1	569
+	8-98048 816-0	618	+	8-98055 182-0	504	+	8-98059 203-0	397	+	8-98063 603-0	136
+	8-98048 830-1	410	+	8-98055 453-0	441	+	8-98059 320-0	433	+	8-98063 767-0	579
+	8-98048 899-1	410	+	8-98055 458-0	441	+	8-98059 421-0	485	+	8-98063 767-0	634
+	8-98048 925-0	322	+	8-98055 460-0	441	+	8-98059 504-0	429	+	8-98063 841-0	69
+	8-98049 014-2	569	+	8-98055 461-1	440	+	8-98059 504-0	431	+	8-98064 903-5	587
+	8-98049 120-1	130	+	8-98055 462-1	440	+	8-98059 505-0	432	+	8-98065 261-0	327
+	8-98049 290-1	541	+	8-98055 466-1	441	+	8-98059 610-0	457	+	8-98065 276-0	266
+	8-98049 529-0	471	+	8-98055 467-1	441	+	8-98059 720-0	264	+	8-98065 363-0	493
+	8-98049 756-0	445	+	8-98055 471-0	441	+	8-98059 720-0	441	+	8-98065 376-0	292
+	8-98049 798-1	577	+	8-98055 479-0	34	+	8-98059 720-0	462	+	8-98065 377-0	148
+	8-98050 476-0	247	+	8-98055 480-0	34	+	8-98059 753-1	173	+	8-98065 666-0	566
+	8-98050 479-0	247	+	8-98055 540-0	12	+	8-98060 044-1	362	+	8-98065 791-0	441

https://truckmanualshub.com/

NUMERICAL INDEX

8-98069-609-0 - 8-98133-367-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	8-98065 992-0	85	+	8-98073 690-1	469	+	8-98079 755-0	91	+	8-98095 617-1	635
+	8-98066 085-0	513	+	8-98073 692-1	469	+	8-98080 186-2	358	+	8-98095 653-1	569
+	8-98066 733-1	304	+	8-98074 113-0	625	+	8-98080 958-0	357	+	8-98095 813-0	453
+	8-98066 740-0	143	+	8-98074 119-0	617	+	8-98080 998-1	610	+	8-98096 217-0	483
+	8-98066 745-2	462	+	8-98074 570-0	147	+	8-98081 175-0	610	+	8-98096 288-0	432
+	8-98066 785-0	309	+	8-98074 740-0	541	+	8-98081 685-0	367	+	8-98096 305-0	174
+	8-98066 813-0	479	+	8-98074 824-1	173	+	8-98081 722-0	567	+	8-98096 347-0	172
+	8-98066 976-1	304	+	8-98075 713-1	148	+	8-98081 729-0	143	+	8-98096 418-0	148
+	8-98067 038-0	153	+	8-98075 714-0	53	+	8-98082 095-2	308	+	8-98096 453-0	624
+	8-98067 039-0	154	+	8-98075 766-0	555	+	8-98082 165-1	143	+	8-98097 466-2	548
+	8-98067 041-0	153	+	8-98075 767-0	48	+	8-98082 176-0	383	+	8-98097 467-2	548
+	8-98067 058-0	195	+	8-98075 827-0	465	+	8-98082 176-0	397	+	8-98097 534-1	498
+	8-98067 080-0	154	+	8-98076 098-0	76	+	8-98082 437-0	493	+	8-98098 459-0	419
+	8-98067 083-1	271	+	8-98076 109-0	500	+	8-98082 498-0	172	+	8-98098 479-1	547
+	8-98067 249-2	500	+	8-98076 254-0	510	+	8-98082 871-0	273	+	8-98098 480-1	547
+	8-98067 417-0	292	+	8-98076 297-0	362	+	8-98083 198-1	437	+	8-98099 068-0	402
+	8-98067 426-0	292	+	8-98076 304-3	567	+	8-98083 349-0	162	+	8-98099 320-0	153
+	8-98067 433-0	304	+	8-98076 305-3	567	+	8-98083 537-0	162	+	8-98099 963-0	579
+	8-98067 482-1	266	+	8-98076 339-0	435	+	8-98084 131-0	164	+	8-98100 140-0	162
+	8-98067 830-1	75	+	8-98077 326-3	566	+	8-98084 247-0	566	+	8-98100 152-0	265
+	8-98067 903-0	471	+	8-98077 413-0	624	+	8-98085 153-0	24	+	8-98100 216-1	162
+	8-98067 929-0	147	+	8-98077 414-0	625	+	8-98085 273-1	273	+	8-98101 364-0	615
+	8-98068 086-0	239	+	8-98077 419-0	618	+	8-98085 312-3	93	+	8-98101 477-0	48
+	8-98068 087-0	239	+	8-98077 422-0	617	+	8-98086 193-1	168	+	8-98101 514-1	408
+	8-98068 088-0	240	+	8-98077 423-0	617	+	8-98086 352-0	173	+	8-98103 332-1	440
+	8-98068 145-1	433	+	8-98077 429-0	455	+	8-98086 417-0	149	+	8-98105 000-0	461
+	8-98069 364-0	548	+	8-98077 661-0	357	+	8-98086 746-0	361	+	8-98105 706-0	322
+	8-98069 425-0	76	+	8-98077 739-2	358	+	8-98086 811-1	195	+	8-98106 498-0	433
+	8-98069 427-0	99	+	8-98077 740-0	356	+	8-98088 123-0	154	+	8-98106 499-0	433
+	8-98069 609-0	322	+	8-98077 904-1	110	+	8-98088 312-0	509	+	8-98107 548-0	227
+	8-98069 657-0	322	+	8-98078 098-0	179	+	8-98089 287-1	172	+	8-98107 869-0	536
+	8-98070 026-A	534	+	8-98078 153-0	177	+	8-98089 819-0	431	+	8-98109 768-0	162
+	8-98070 143-2	68	+	8-98078 194-3	160	+	8-98089 820-0	431	+	8-98109 948-0	442
+	8-98070 170-0	628	+	8-98078 195-1	160	+	8-98089 836-0	433	+	8-98111 401-0	273
+	8-98070 173-0	629	+	8-98078 201-0	162	+	8-98090 077-0	462	+	8-98112 751-0	534
+	8-98070 239-0	493	+	8-98078 805-0	629	+	8-98090 078-0	462	+	8-98113 684-0	292
+	8-98070 329-0	190	+	8-98078 806-0	629	+	8-98090 287-1	407	+	8-98113 738-0	292
+	8-98070 401-2	592	+	8-98078 807-0	629	+	8-98090 737-0	432	+	8-98114 787-0	164
+	8-98070 445-0	25	+	8-98078 809-0	628	+	8-98091 141-0	34	+	8-98116 461-0	583
+	8-98070 643-0	498	+	8-98078 810-0	628	+	8-98091 546-0	512	+	8-98117 691-0	164
+	8-98071 178-0	435	+	8-98078 811-0	628	+	8-98091 566-0	19	+	8-98118 331-1	568
+	8-98071 250-0	296	+	8-98078 815-0	628	+	8-98092 334-0	533	+	8-98119 293-0	227
+	8-98071 416-0	149	+	8-98078 816-0	628	+	8-98092 398-0	154	+	8-98119 790-0	88
+	8-98071 421-0	143	+	8-98078 819-1	628	+	8-98092 481-1	168	+	8-98119 901-0	597
+	8-98071 422-0	143	+	8-98078 820-1	628	+	8-98092 482-1	168	+	8-98120 102-0	304
+	8-98071 972-0	260	+	8-98078 824-0	629	+	8-98092 915-0	441	+	8-98122 353-0	493
+	8-98072 089-1	358	+	8-98079 175-0	309	+	8-98093 443-0	229	+	8-98122 883-0	154
+	8-98072 346-0	194	+	8-98079 191-0	567	+	8-98093 449-0	230	+	8-98122 953-0	160
+	8-98072 403-0	87	+	8-98079 192-0	567	+	8-98093 455-0	229	+	8-98122 992-2	153
+	8-98072 517-0	372	+	8-98079 193-0	567	+	8-98093 463-0	461	+	8-98123 264-0	433
+	8-98072 722-0	435	+	8-98079 194-0	567	+	8-98093 464-0	461	+	8-98124 513-0	24
+	8-98073 420-0	430	+	8-98079 248-0	86	+	8-98093 580-0	441	+	8-98125 944-0	146
+	8-98073 421-0	430	+	8-98079 251-0	189	+	8-98093 669-0	432	+	8-98126 332-0	88
+	8-98073 539-3	148	+	8-98079 255-0	101	+	8-98095 044-0	437	+	8-98126 426-0	265
+	8-98073 592-0	149	+	8-98079 673-0	587	+	8-98095 566-0	367	+	8-98130 274-0	358

https://truckmanualshub.com/

NUMERICAL INDEX

8-98133-956-0 - 9-99204-513-0

	PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE		PART NUMBER	PAGE
+	8-98130 667-0	163	+	8-98166 928-0	356	+	8-98181 972-0	149	+	9-09854 122-0	337
+	8-98131 263-0	131	+	8-98166 995-0	60	+	8-98182 320-0	429	+	9-09855 367-0	257
+	8-98131 661-0	471	+	8-98167 035-0	469	+	8-98182 321-0	429	+	9-09867 008-0	185
+	8-98132 718-0	226	+	8-98167 051-0	391	+	8-98182 323-0	287	+	9-09874 040-0	249
+	8-98132 721-0	226	+	8-98167 173-0	106	+	8-98182 446-0	568	+	9-09874 040-0	253
+	8-98133 349-0	146	+	8-98167 239-0	237	+	8-98182 514-0	566	+	9-09878 594-0	256
+	8-98133 349-0	148	+	8-98168 524-0	216	+	8-98182 516-0	568	+	9-09878 626-0	33
+	8-98133 357-0	148	+	8-98168 526-0	217	+	8-98182 780-0	107	+	9-09915 315-1	61
+	8-98133 357-0	149	+	8-98169 839-0	234	+	8-98183 009-0	234	+	9-09915 504-1	149
+	8-98133 359-0	146	+	8-98170 619-0	12	+	8-98183 924-0	624	+	9-09917 427-0	139
+	8-98133 367-0	147	+	8-98170 679-0	498	+	8-98185 954-0	440	+	9-09917 427-0	578
+	8-98133 956-0	139	+	8-98170 680-0	498	+	8-98186 773-0	211	+	9-09917 427-0	581
+	8-98133 956-0	140	+	8-98170 719-0	225	+	8-98188 172-0	80	+	9-09917 430-0	139
+	8-98133 957-0	140	+	8-98170 720-0	224	+	9-00090 071-0	323	+	9-09917 544-0	578
+	8-98136 884-0	61	+	8-98170 740-0	568	+	9-00093 159-0	337	+	9-09920 267-0	198
+	8-98136 975-0	243	+	8-98170 963-1	257	+	9-01911 025-0	80	+	9-09920 268-0	198
+	8-98137 312-0	491	+	8-98170 965-0	51	+	9-02361 240-0	343	+	9-09920 605-0	338
+	8-98137 330-0	350	+	8-98171 007-0	256	+	9-03490 610-0	48	+	9-09942 567-1	256
+	8-98137 333-0	350	+	8-98171 224-0	445	+	9-04731 025-0	51	+	9-09942 592-0	256
+	8-98137 334-0	350	+	8-98171 232-0	445	+	9-04731 028-0	68	+	9-09950 201-0	338
+	8-98139 014-0	634	+	8-98171 396-0	209	+	9-07076 412-0	551	+	9-09956 092-1	292
+	8-98139 320-0	134	+	8-98171 638-0	566	+	9-07076 414-0	551	+	9-09956 092-1	581
+	8-98141 232-0	136	+	8-98171 720-0	624	+	9-08055 519-0	75	+	9-09956 256-2	110
+	8-98141 874-0	465	+	8-98171 731-1	110	+	9-08104 030-0	97	+	9-09956 256-2	162
+	8-98145 501-0	88	+	8-98171 733-0	111	+	9-08113 022-0	185	+	9-09956 256-2	581
+	8-98145 979-0	504	+	8-98171 757-0	139	+	9-08150 820-0	34	+	9-09956 640-0	248
+	8-98146 010-0	504	+	8-98171 863-0	624	+	9-08160 612-0	210	+	9-09956 640-0	253
+	8-98146 670-0	441	+	8-98171 946-1	264	+	9-09114 086-0	430	+	9-11129 128-0	12
+	8-98147 657-0	189	+	8-98172 431-1	327	+	9-09114 086-0	441	+	9-11129 128-0	19
+	8-98147 657-0	261	+	8-98172 432-1	327	+	9-09150 508-0	198	+	9-19519 089-0	371
+	8-98148 518-0	271	+	8-98172 662-0	69	+	9-09160 712-0	106	+	9-31239 116-0	184
+	8-98149 248-0	241	+	8-98172 789-0	292	+	9-09561 111-0	87	+	9-41124 015-0	345
+	8-98150 865-0	195	+	8-98173 342-0	18	+	9-09561 318-0	39	+	9-43165 001-0	377
+	8-98151 167-0	510	+	8-98173 586-0	338	+	9-09561 324-0	213	+	9-43165 001-0	383
+	8-98152 269-0	148	+	8-98174 337-0	499	+	9-09561 324-0	240	+	9-46239 003-0	256
+	8-98152 646-0	461	+	8-98174 339-0	499	+	9-09566 110-0	88	+	9-46240 008-0	256
+	8-98152 647-0	461	+	8-98174 737-0	610	+	9-09567 113-0	225	+	9-47461 158-0	248
+	8-98152 742-0	143	+	8-98175 918-0	296	+	9-09571 410-0	99	+	9-47461 158-0	253
+	8-98155 183-0	457	+	8-98175 941-0	296	+	9-09571 410-0	194	+	9-48429 028-0	372
+	8-98155 184-0	457	+	8-98175 942-0	296	+	9-09571 412-0	69	+	9-53616 615-0	413
+	8-98155 458-0	548	+	8-98176 199-0	512	+	9-09571 418-0	153	+	9-83315 047-0	198
+	8-98155 459-0	548	+	8-98177 654-0	187	+	9-09571 424-0	75	+	9-83315 085-0	198
+	8-98156 814-0	337	+	8-98178 074-0	139	+	9-09571 424-0	76	+	9-83315 113-0	199
+	8-98157 115-0	88	+	8-98178 437-0	293	+	9-09661 005-0	57	+	9-83315 118-0	200
+	8-98158 310-0	465	+	8-98178 439-0	297	+	9-09678 514-0	239	+	9-83315 315-0	197
+	8-98159 690-0	116	+	8-98178 459-0	312	+	9-09802 475-0	248	+	9-83331 704-0	198
+	8-98159 732-0	115	+	8-98178 465-0	270	+	9-09802 575-1	344	+	9-83335 044-0	197
+	8-98159 734-0	115	+	8-98178 466-0	270	+	9-09804 239-1	337	+	9-85521 132-0	642
+	8-98160 061-0	85	+	8-98179 087-1	40	+	9-09830 212-0	49	+	9-88510 365-0	198
+	8-98162 742-1	195	+	8-98179 315-0	383	+	9-09840 280-0	194	+	9-89970 787-0	368
+	8-98162 897-0	168	+	8-98179 315-0	384	+	9-09840 280-0	304	+	9-92361 425-0	30
+	8-98162 904-0	168	+	8-98180 140-0	172	+	9-09842 007-0	68	+	9-99204 513-0	179
+	8-98163 813-0	7	+	8-98180 258-0	477	+	9-09843 721-2	337	+	9-99204 513-0	309
+	8-98164 723-0	547	+	8-98181 103-0	120	+	9-09844 574-0	28	+	9-99204 513-0	606
+	8-98166 876-0	356	+	8-98181 971-0	149	+	9-09851 850-3	28	The End		