https://truckmanualshub.com/

PDS w.out Proportional Valve Troubleshooting (AC0 Inverter)

https://truckmanualshub.com/

Index

Code	Name (Main Controller)	Page
8	WATCHDOG	7
13	EEPROM KO	8
16	AUX OUTPUT KO	12
17	LOGIC FAILURE #3	13
18	LOGIC FAILURE #2	14
19	LOGIC FAILURE #1	15
30	VMN LOW	16

Code	Name (Main Controller)	Page
31	VMN HIGH	17
53	STBY I HIGH	18
60	CAPACITOR CHARGE	19
61	HIGH TEMPERATURE	20
65	MOTOR TEMPERAT.	21
66	BATTERY LOW	22

Code	Name (Main Controller)	Page
72	SENSOR COILS KO	23
73	THERMIC SENS KO	24
74	DRIVER SHORTED	25
75	CONTACTOR DRIVER	26
76	COIL SHORTED	27
78	VACC NOT OK	30
79	INCORRECT START	31
80	FORW + BACK	35

https://truckmanualshub.com/

Code	Name (Main Controller)	Page
91	INPUT ERROR #2	38
92	INPUT ERROR #1	40
93	ERROR IV ERROR IW ERROR LUW ERROR LVW ERROR HUV ERROR HVW	41 42 43 44 45 46
94	CURRENT GAIN	47
96	ANALOG INPUT	48
97	OVERLOAD	49
99	CHECK UP NEEDED	50
	WRONG ZERO	54
	STOP TOP	55
	LIFT LOW ACTIVE	

Appendix A: Check Wires and Cables detail ---------- Page 60

https://truckmanualshub.com/

Main Controller

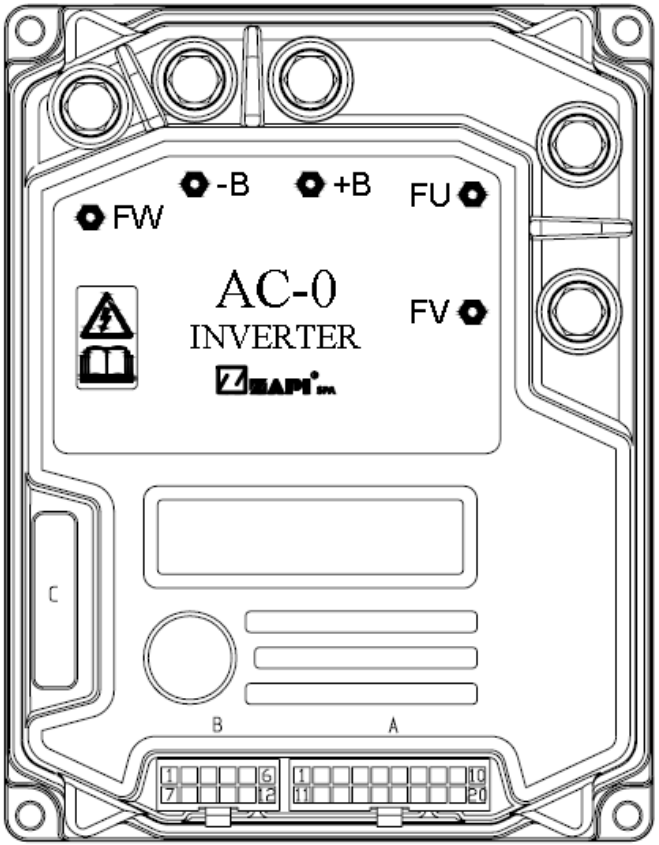

https://truckmanualshub.com/

ALARM #8 on NODE #2 WATCH DOG

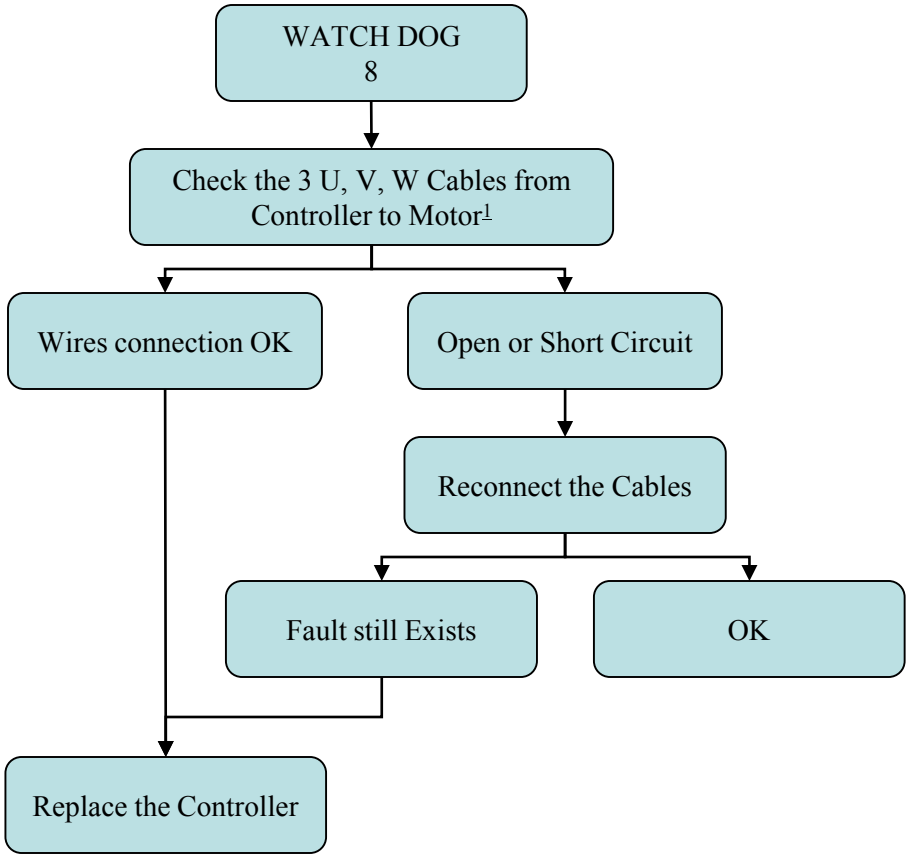

https://truckmanualshub.com/

ALARM #13 on NODE #2 EEPROM KO

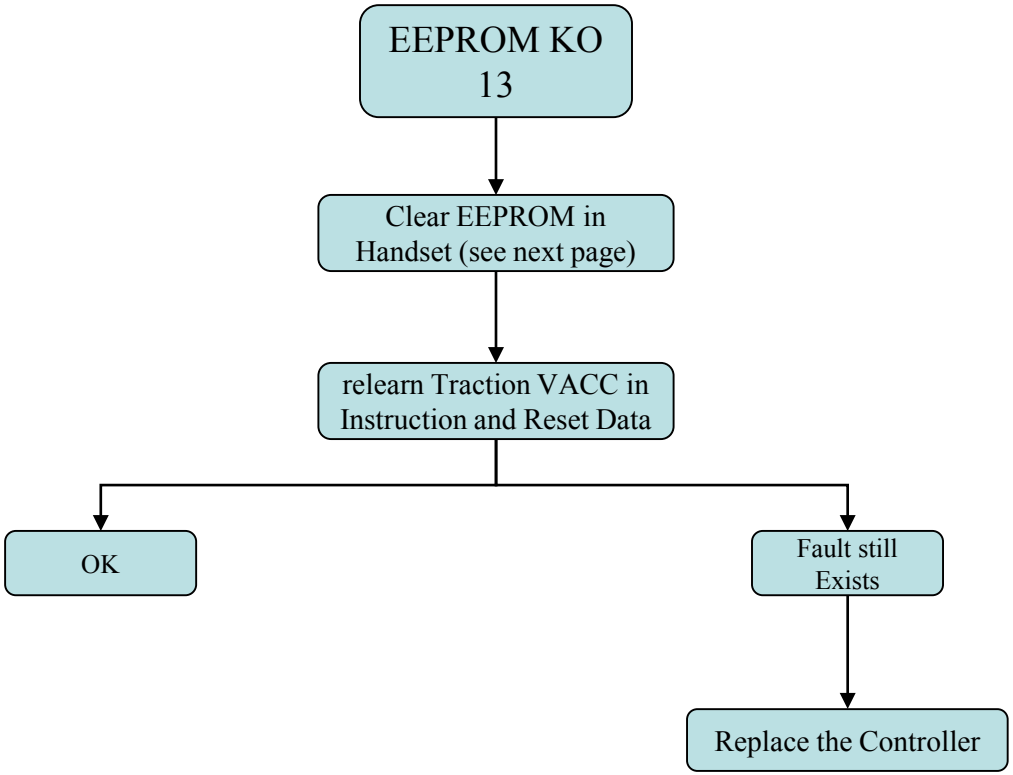

Clear EEPROM in Handset

Key on the truck, connect the flash connecting line. The Display will show:

Press ^ or v button until RS232 CONSOLE shows on the display

The Display will show :

Press OK to go into the Traction controller

The Display will show:

Cons AFG ZP021*

Cons AFG ZP021*
RS232 CONSOLE

AC0T2SE4B EP250
24V 150A 0H

https://truckmanualshub.com/

Press OK to go into the Main Menu

The Display will show:

Main Menu

Press ^ or v button until CLEAR EEPROM on the display

The Display will show:

MAIN MENU
CLEAR EEPROM

Press OK to go into the CLEAR EEPROM function

The Display will ask: ARE YOU SURE?

ARE YOU SURE?
YES= OK NO=ESC

Press OK to CLEAR EEPROM

The display will show:

EEPROM CLEARED!
KEY OFF, PLEASE

Rekey truck, and restart handset

https://truckmanualshub.com/

ALARM #16 on NODE #2 AUX OUTPUT KO

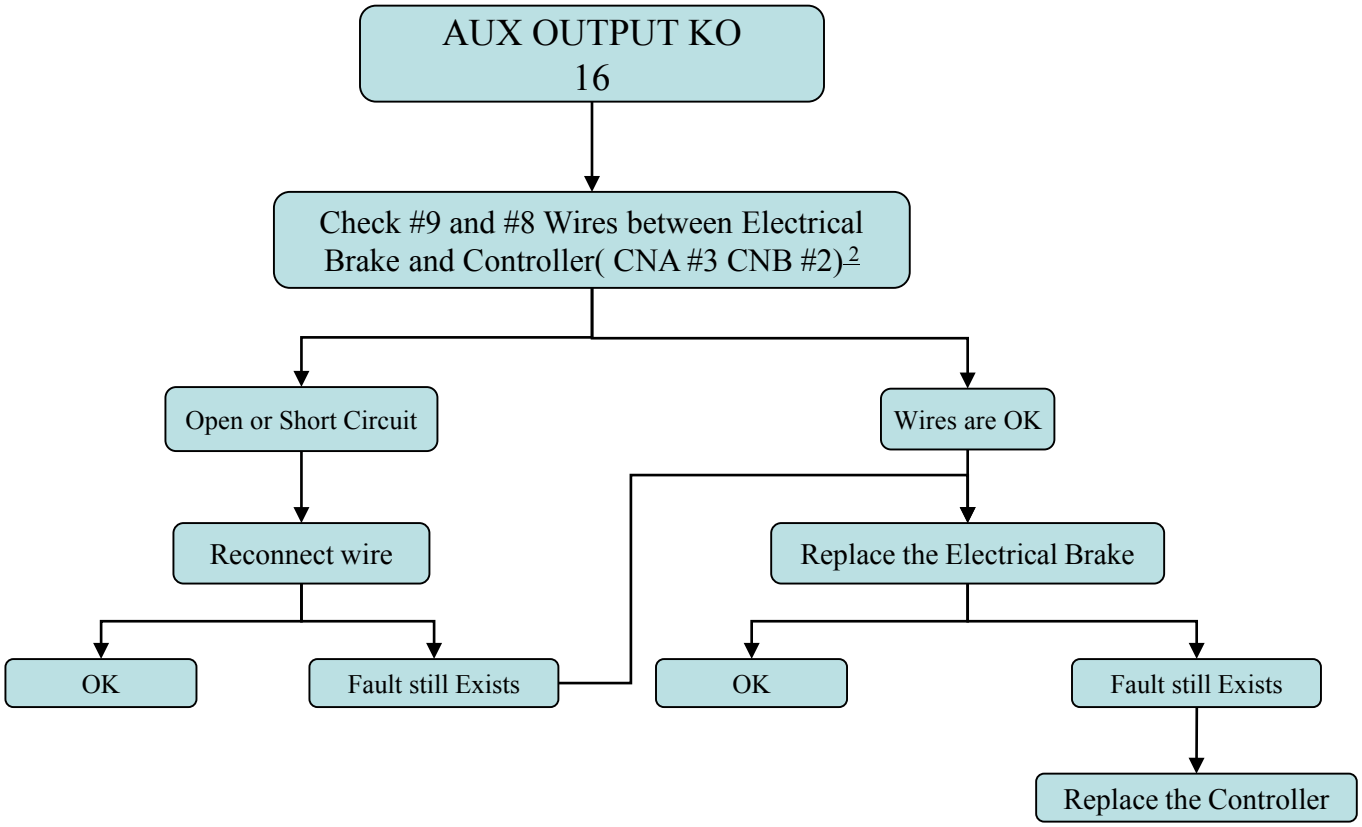

https://truckmanualshub.com/

ALARM #17 on NODE #2 LOGIC FAILURE #3

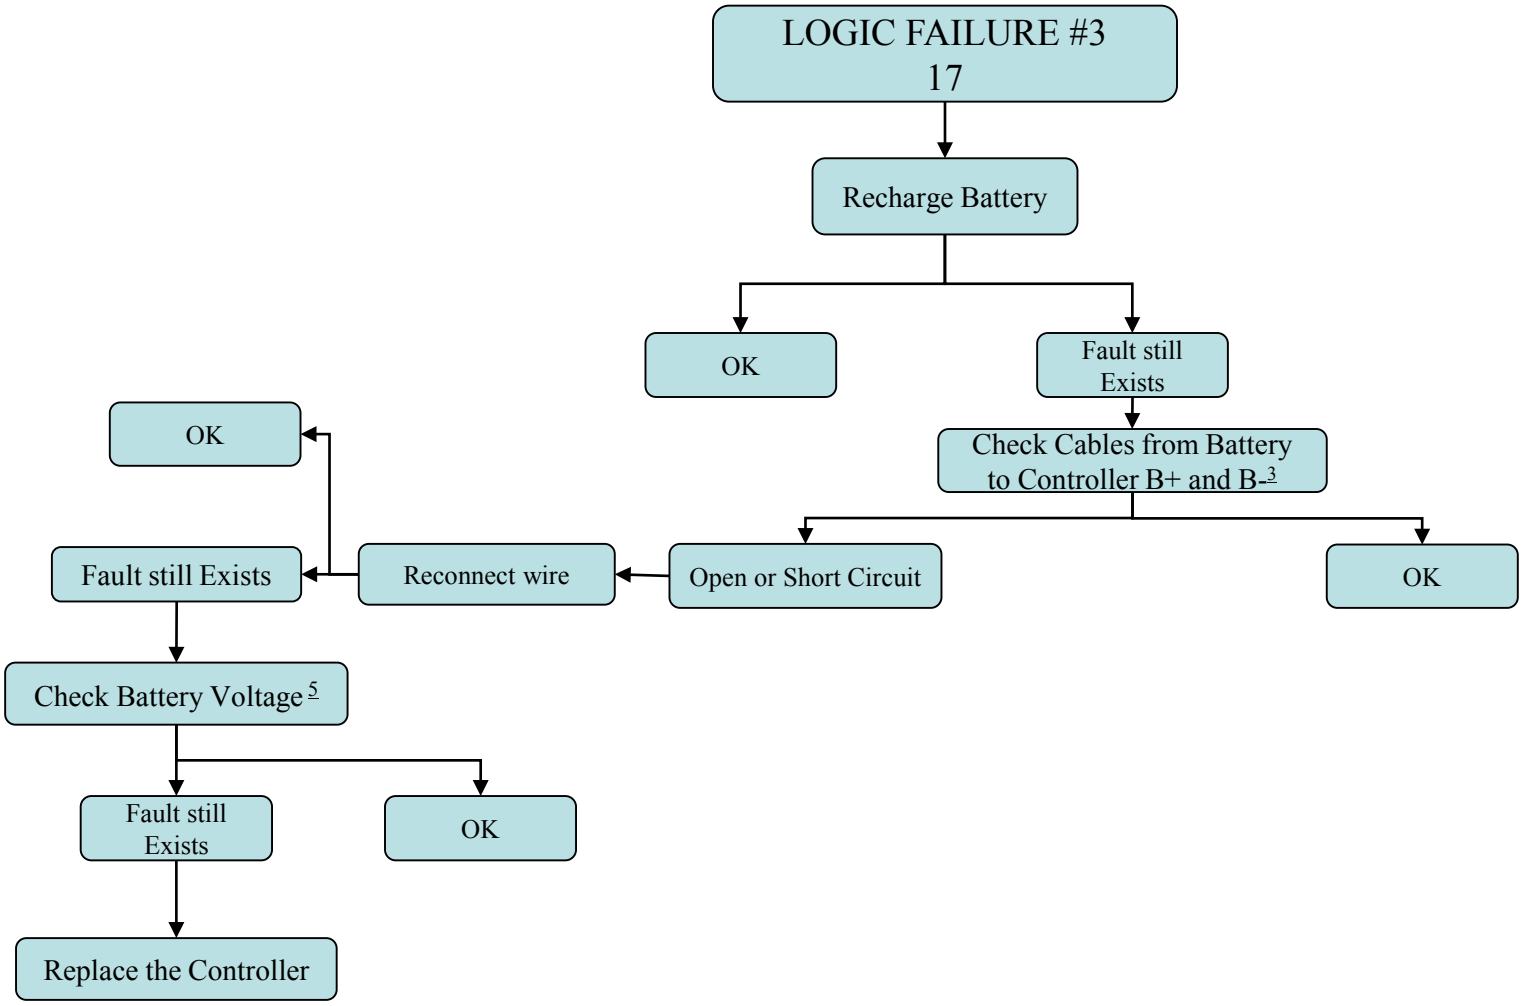

https://truckmanualshub.com/

ALARM #18 on NODE #2 LOGIC FAILURE #2

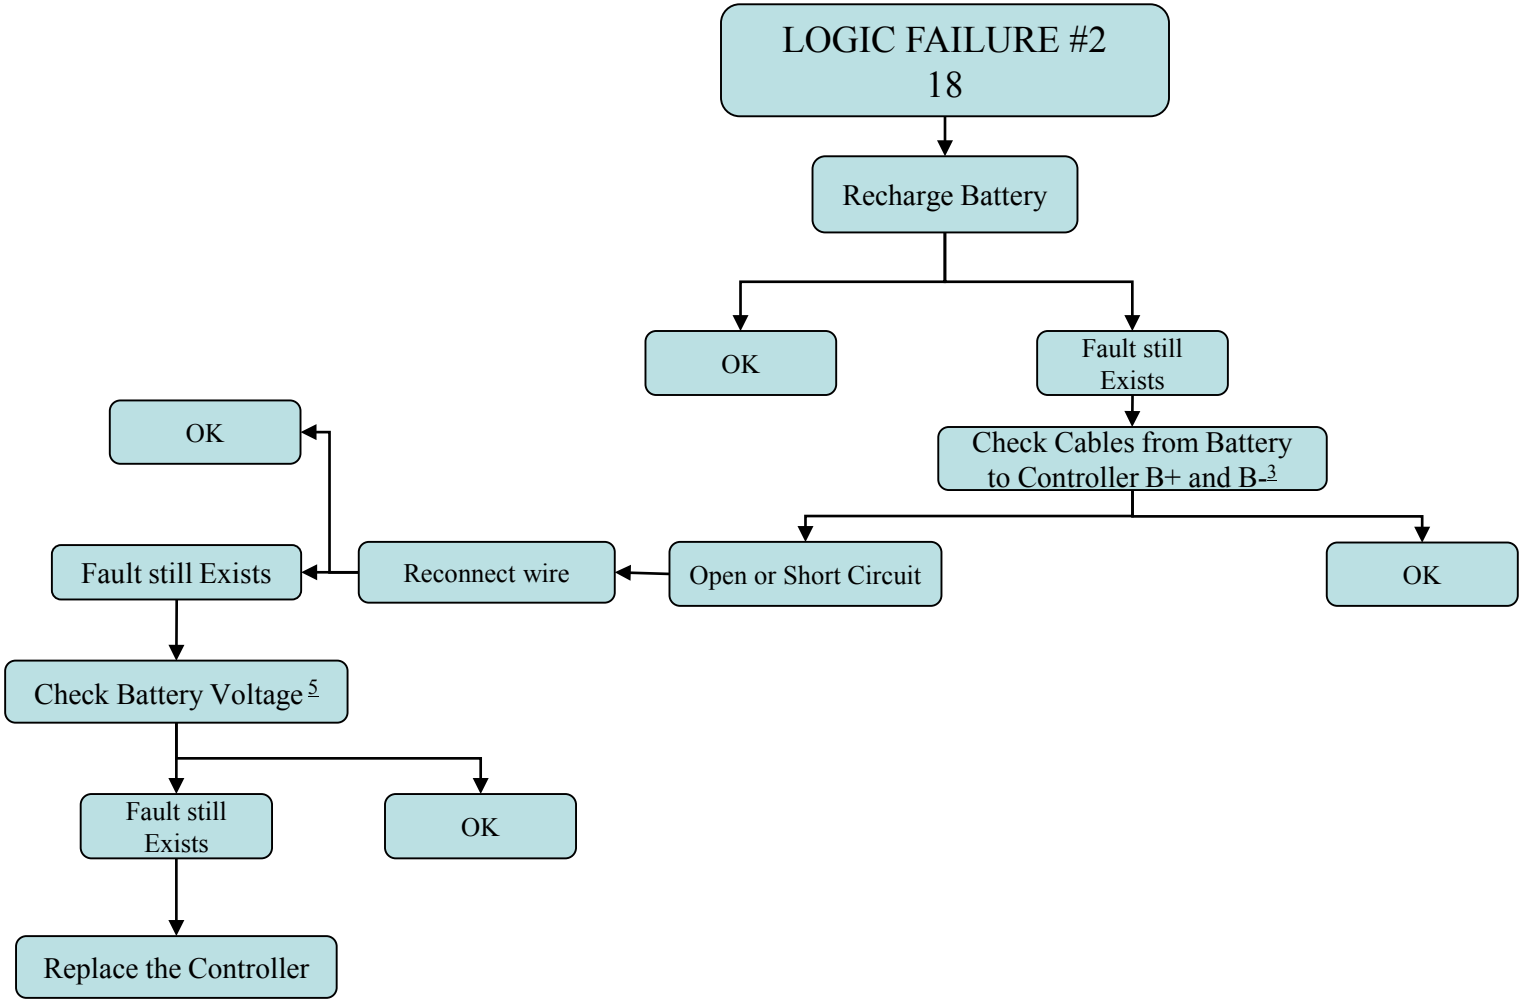

https://truckmanualshub.com/

ALARM #19 on NODE #2 LOGIC FAILURE #1

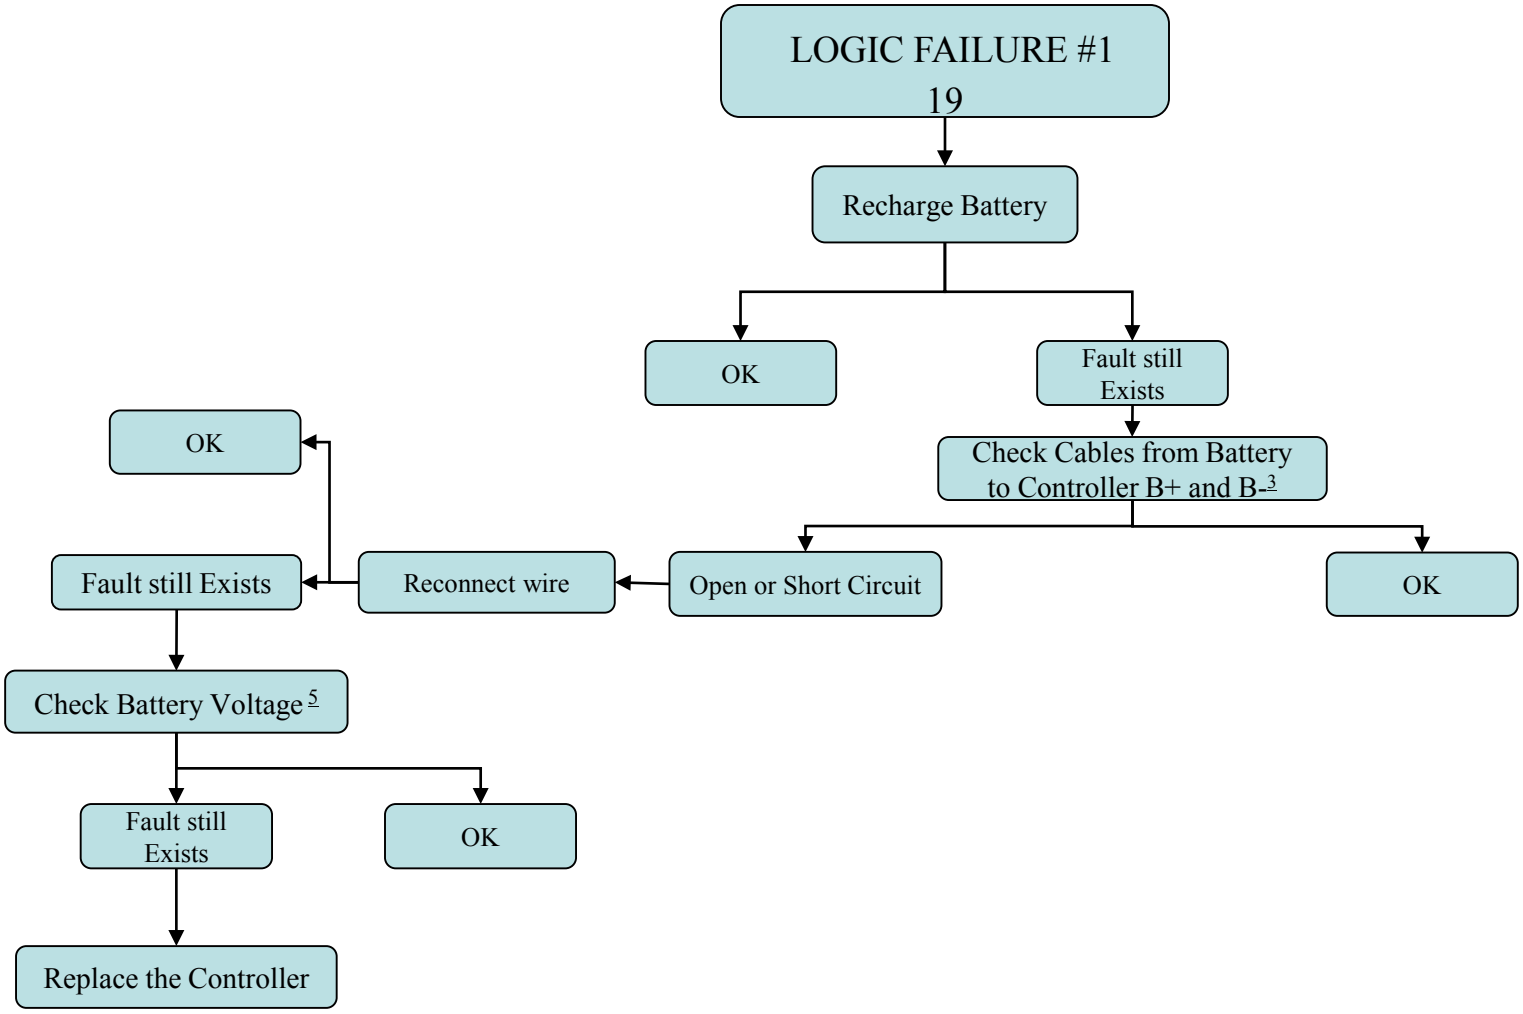

https://truckmanualshub.com/

ALARM #30 on NODE #2 VMN LOW

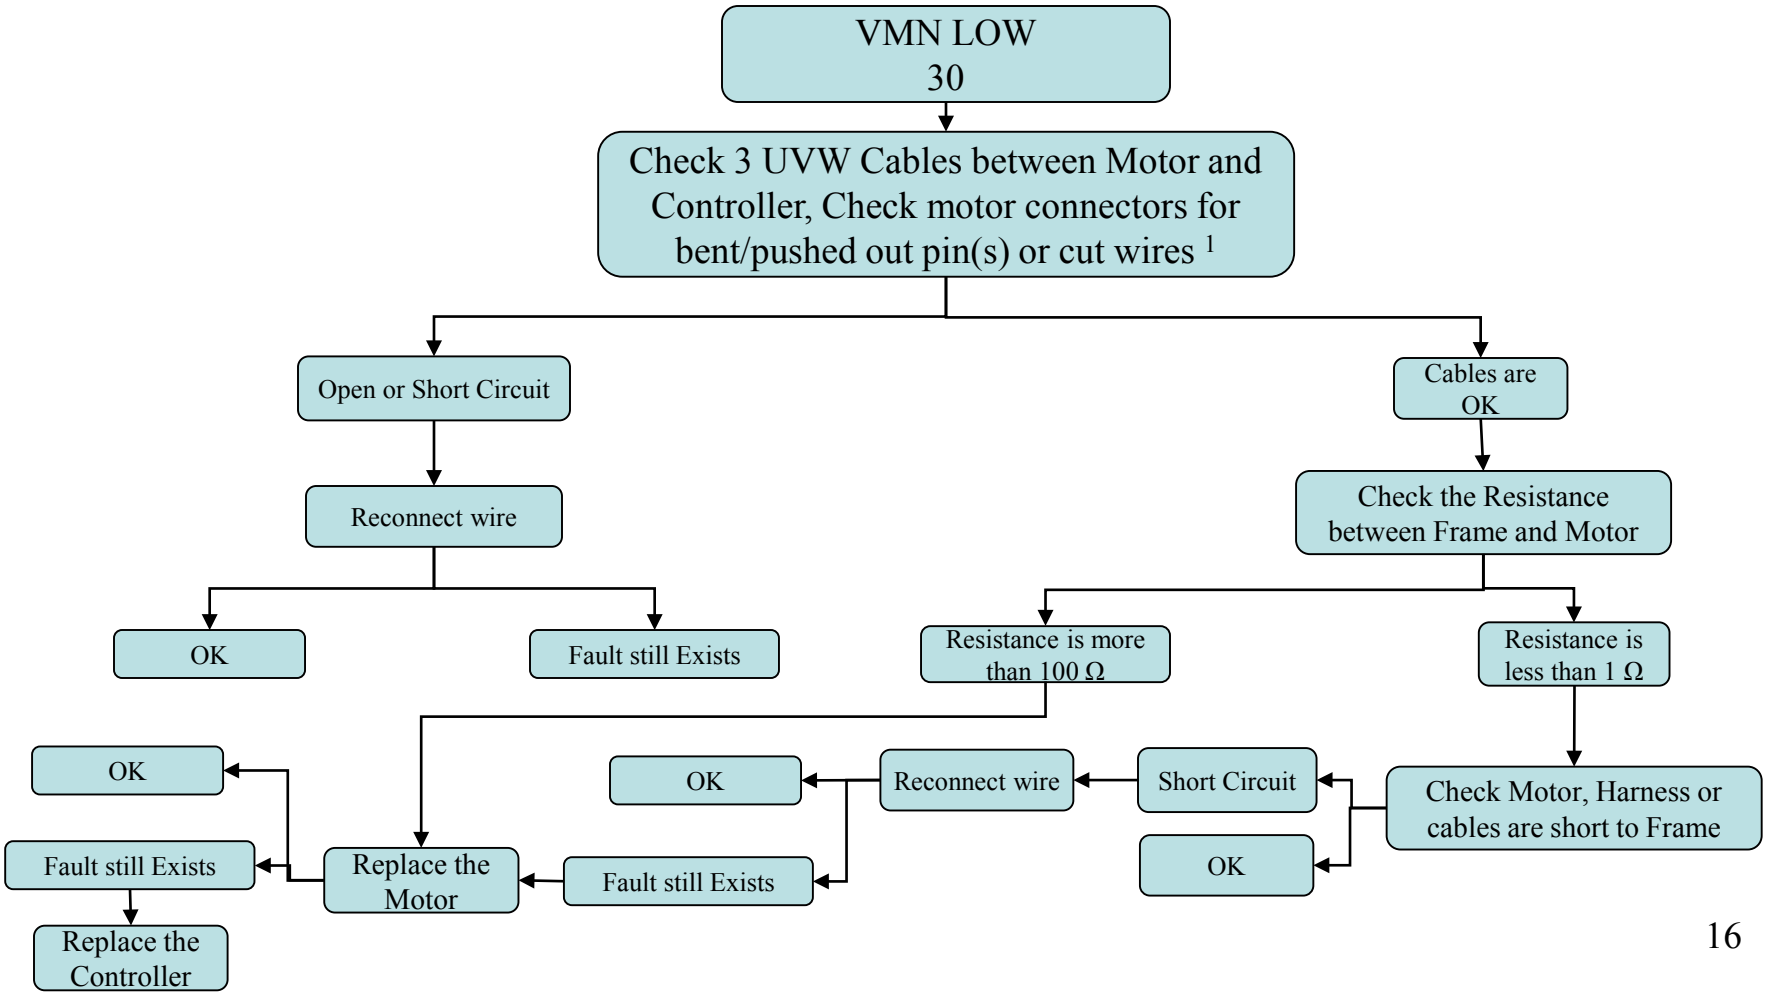

https://truckmanualshub.com/

ALARM #31 on NODE #2 VMN HIGH

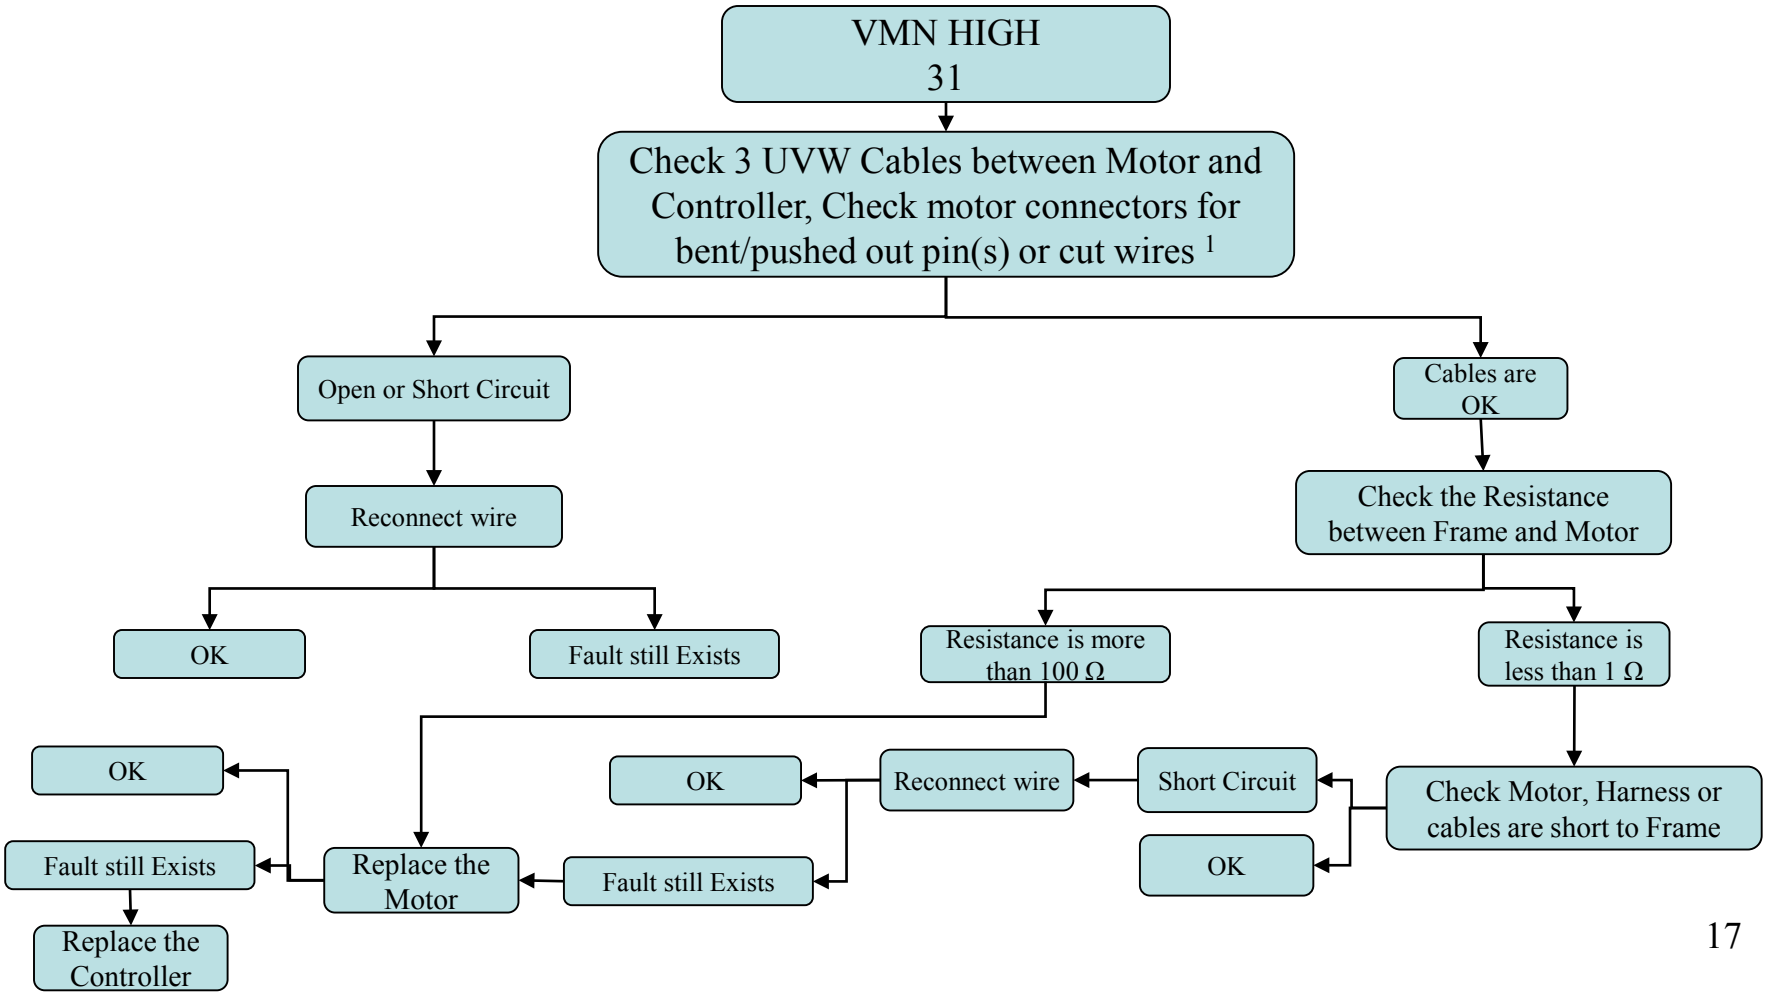

https://truckmanualshub.com/

ALARM #53 on NODE #2 STBY I HIGH

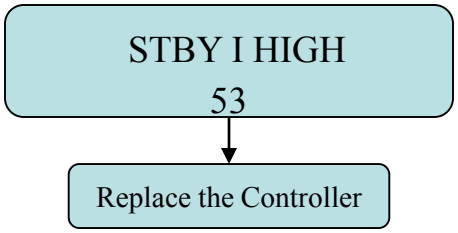

https://truckmanualshub.com/

ALARM #60 on NODE #2 CAPACITOR CHARGE

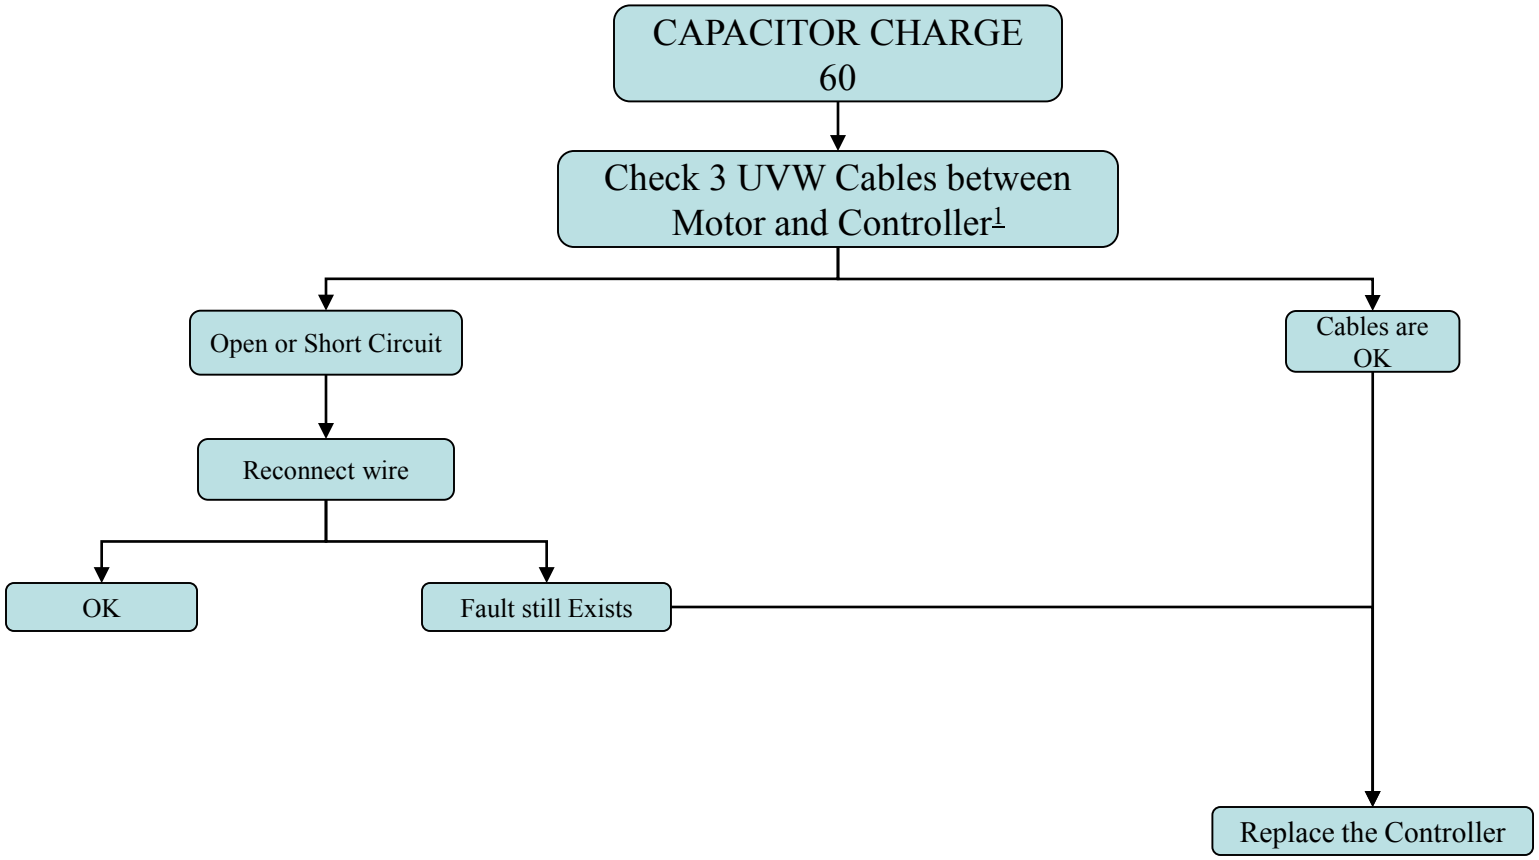

https://truckmanualshub.com/

ALARM #61 on NODE #2 HIGH TEMPERATURE

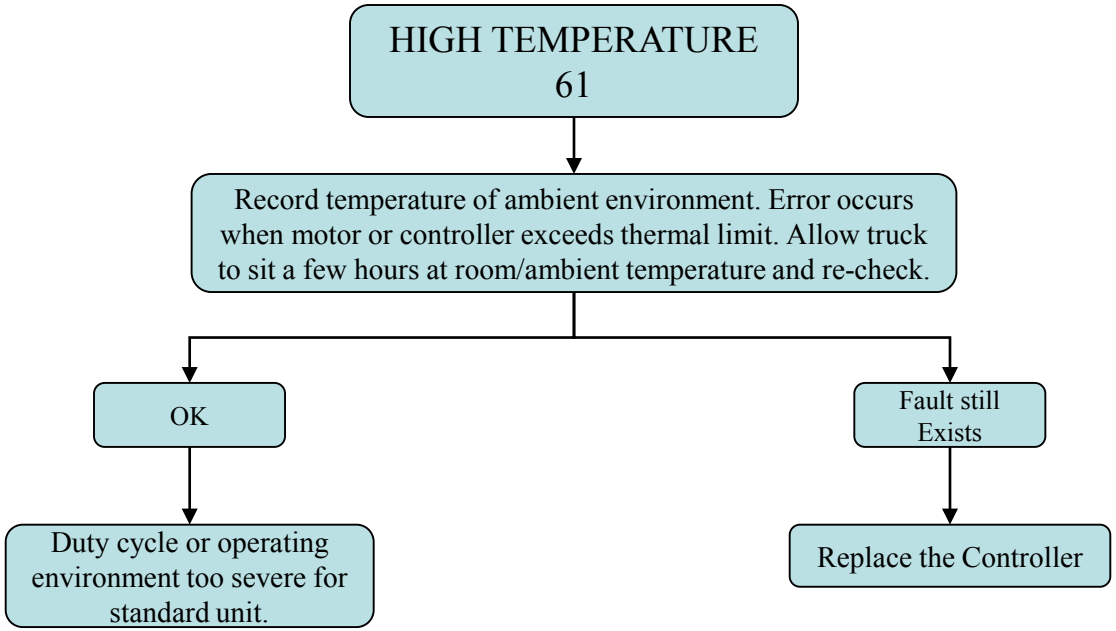

https://truckmanualshub.com/

ALARM #65 on NODE #2 MOTOR TEMPERAT

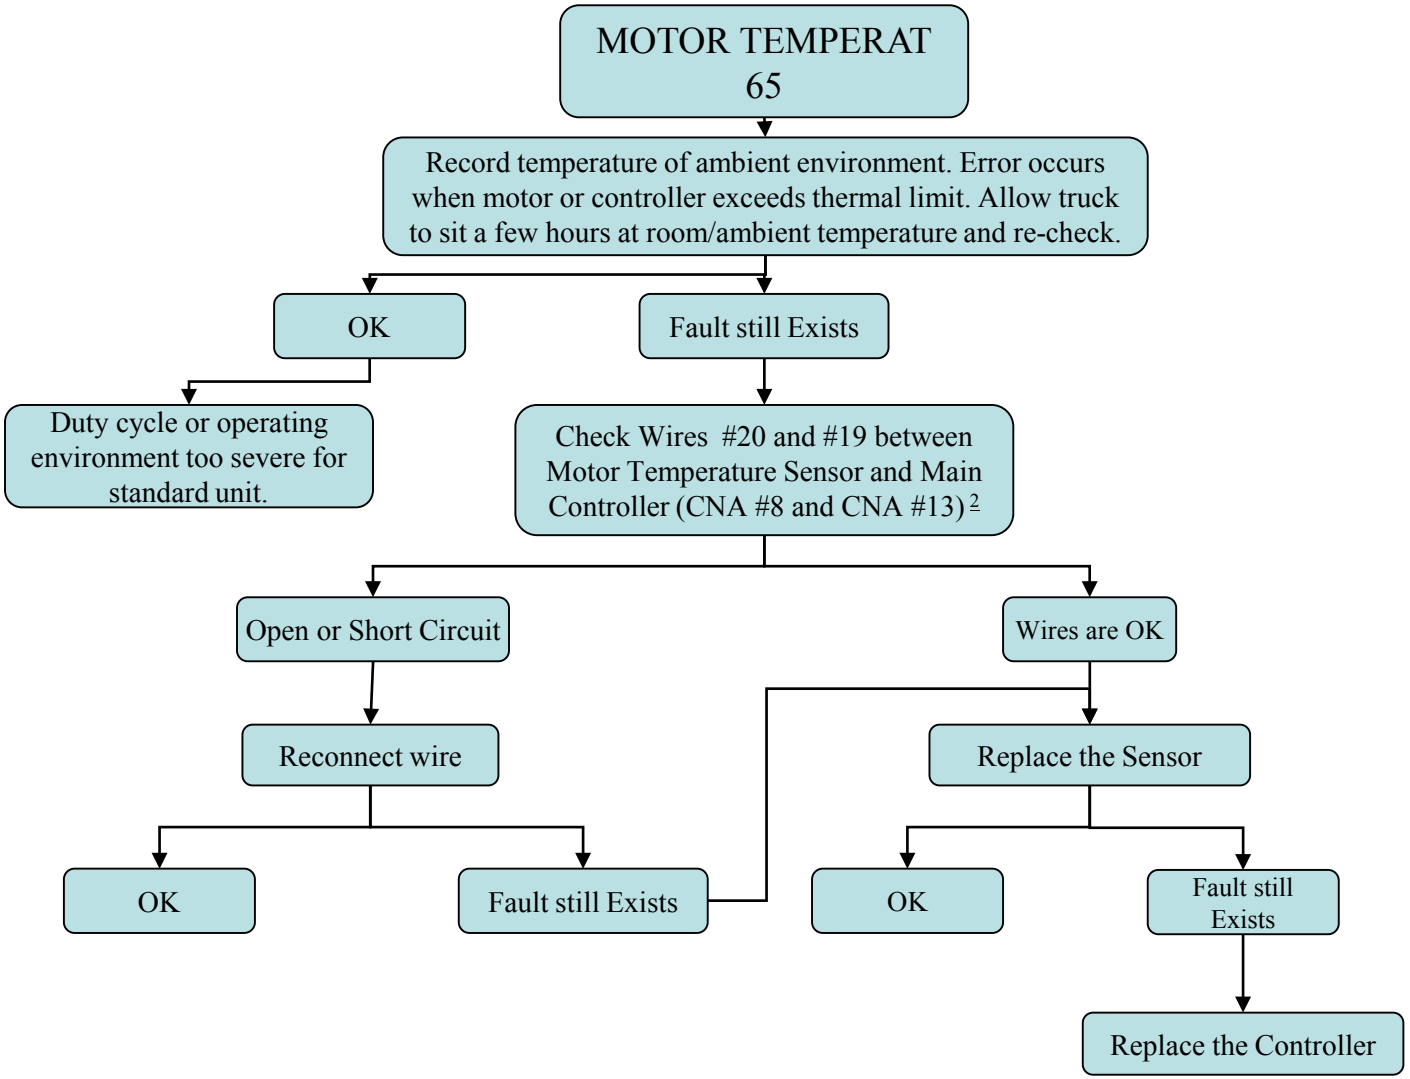

https://truckmanualshub.com/

ALARM #66 on NODE #2 BATTERY LOW

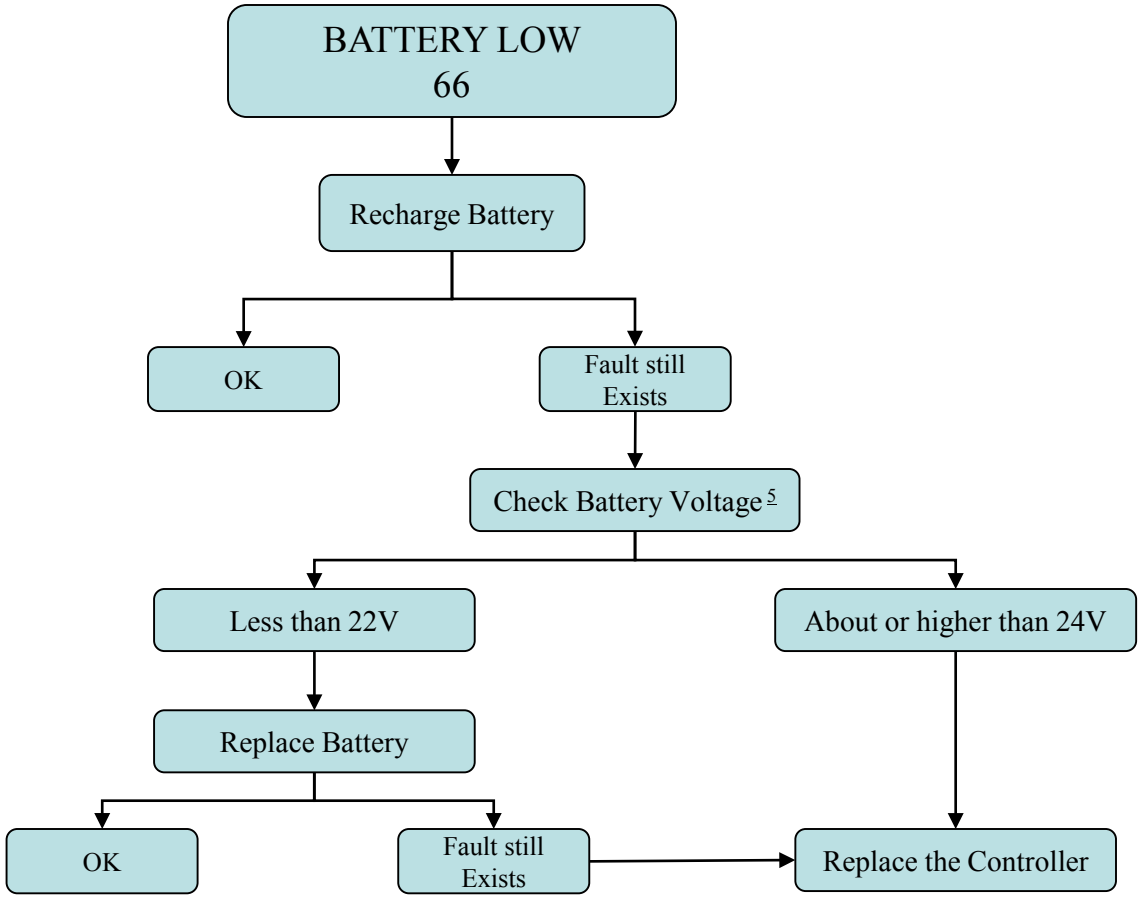

https://truckmanualshub.com/

ALARM #72 on NODE #2 SENSOR COIL KO

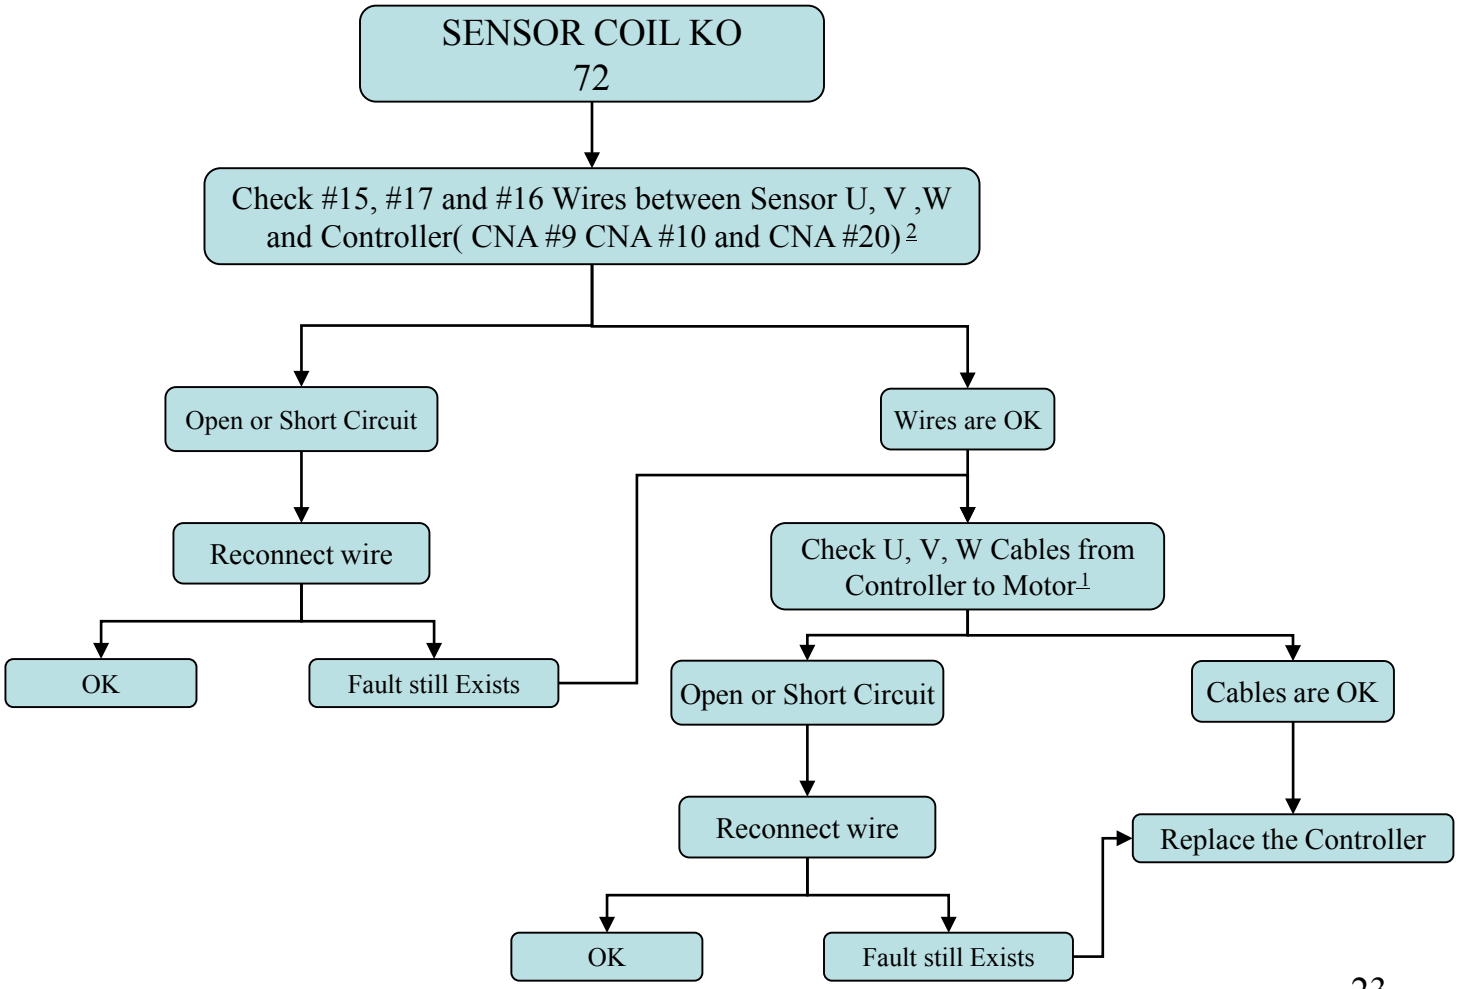

https://truckmanualshub.com/

ALARM #73 on NODE #2 THERMIC SENS. KO

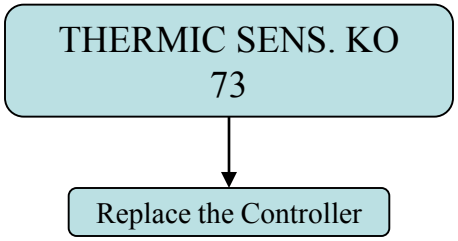

https://truckmanualshub.com/

ALARM #74 on NODE #2 DRIVER SHORTED

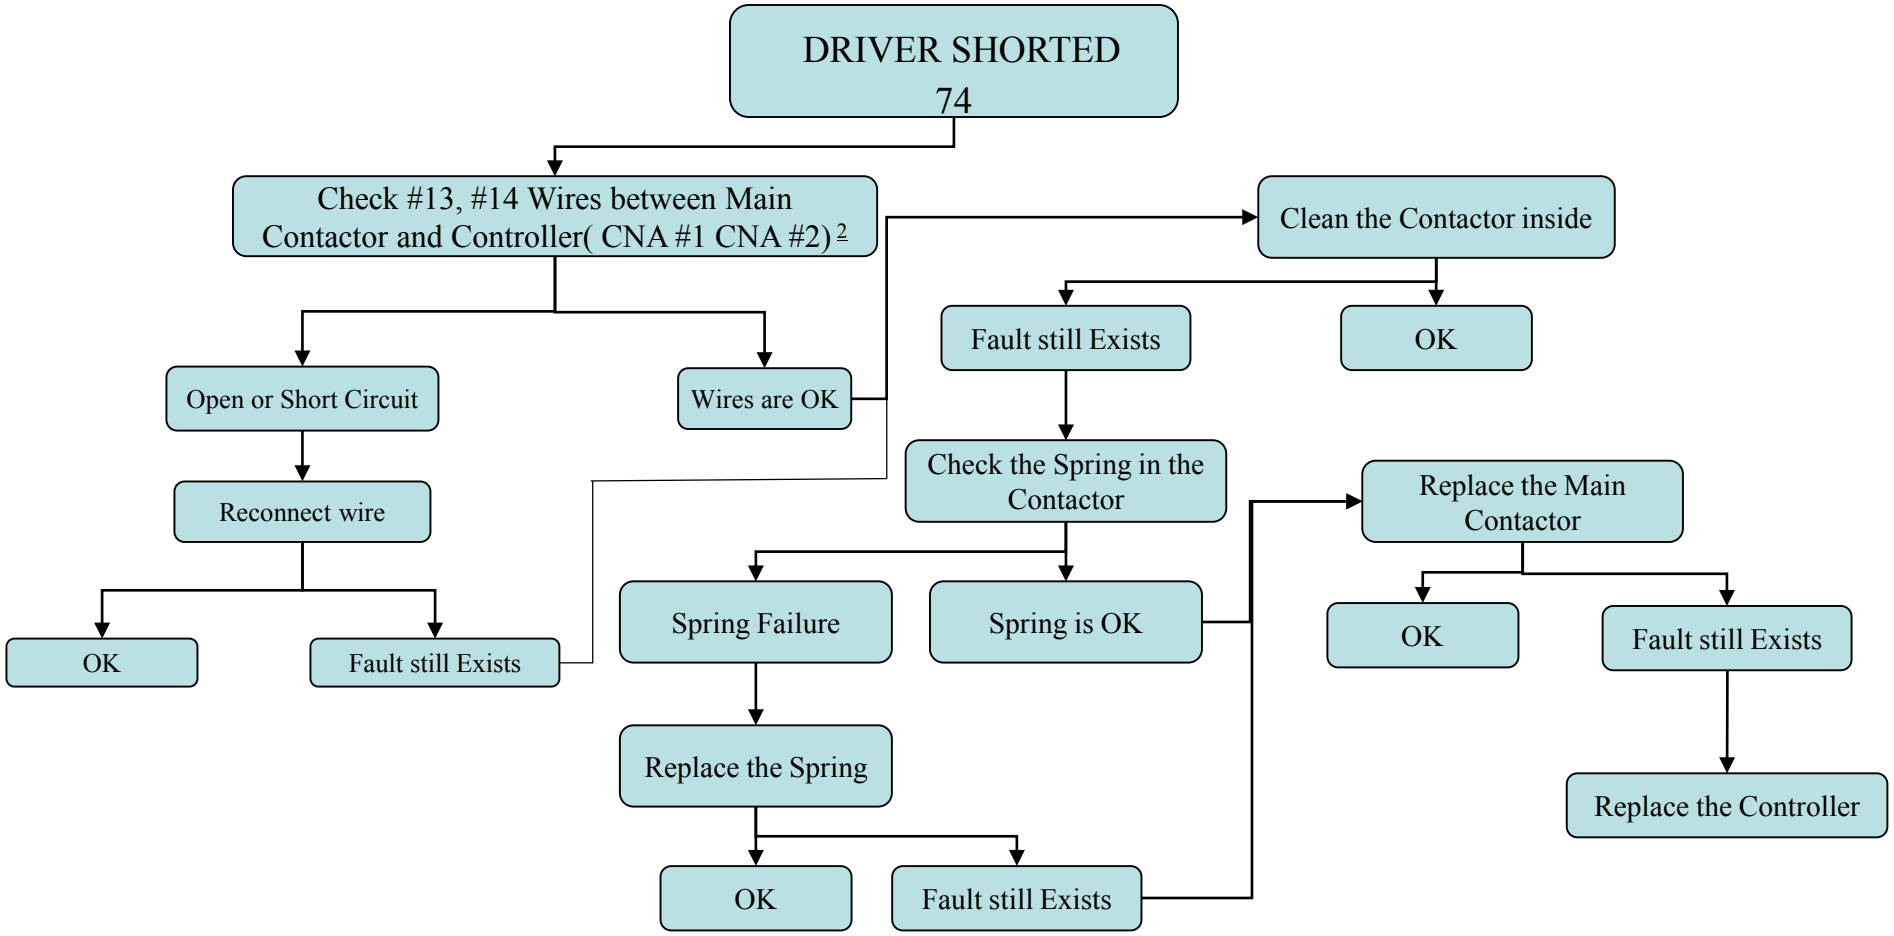

https://truckmanualshub.com/

ALARM #75 on NODE #2 CONTACTOR DRIVER

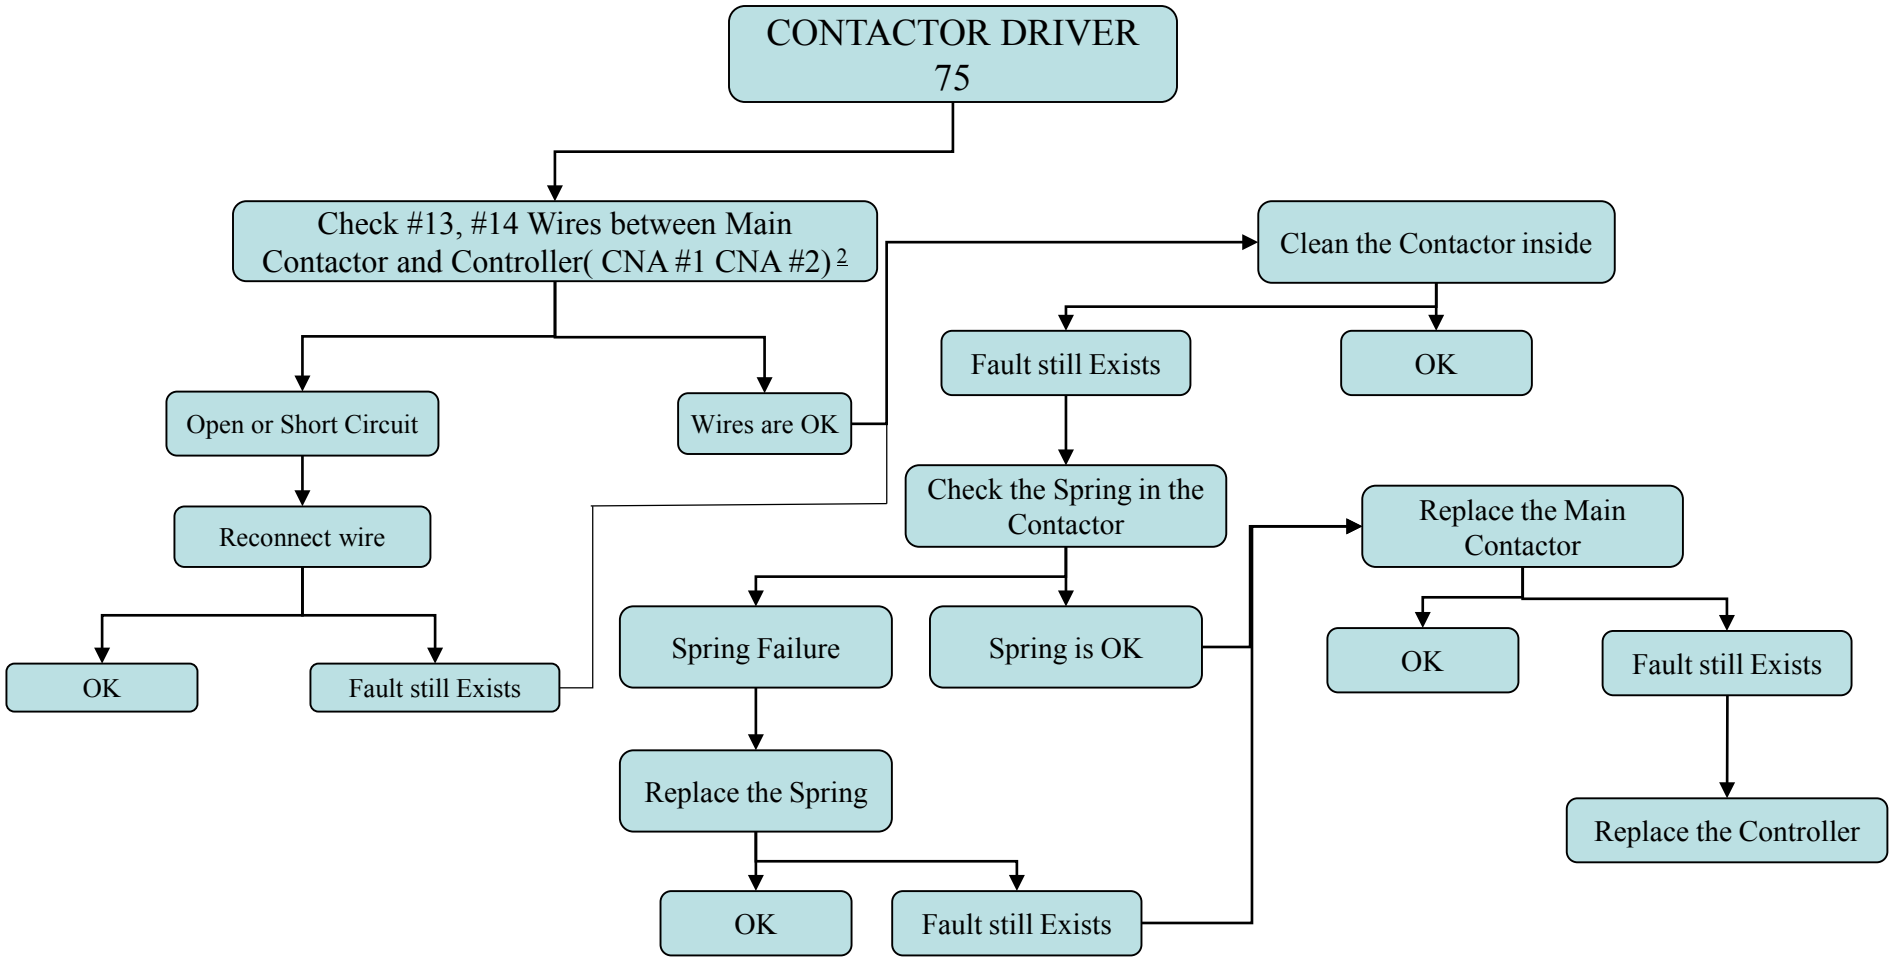

https://truckmanualshub.com/

ALARM #76 on NODE #2 COIL SHORTED

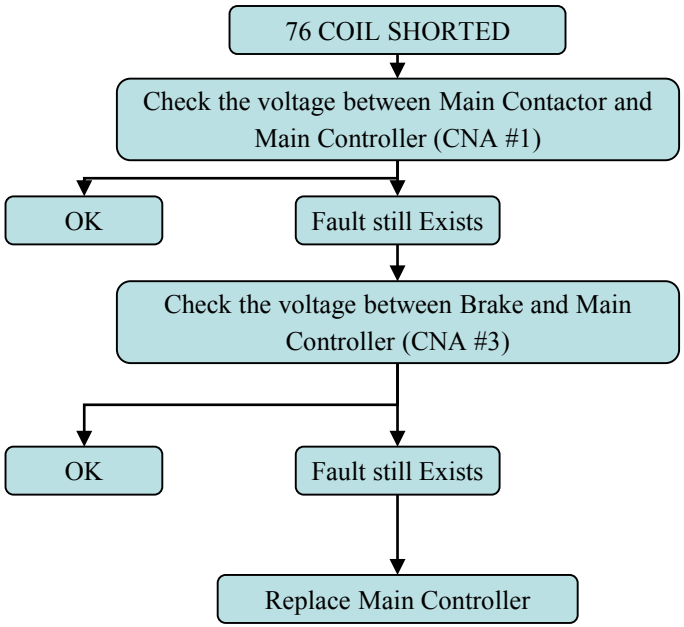

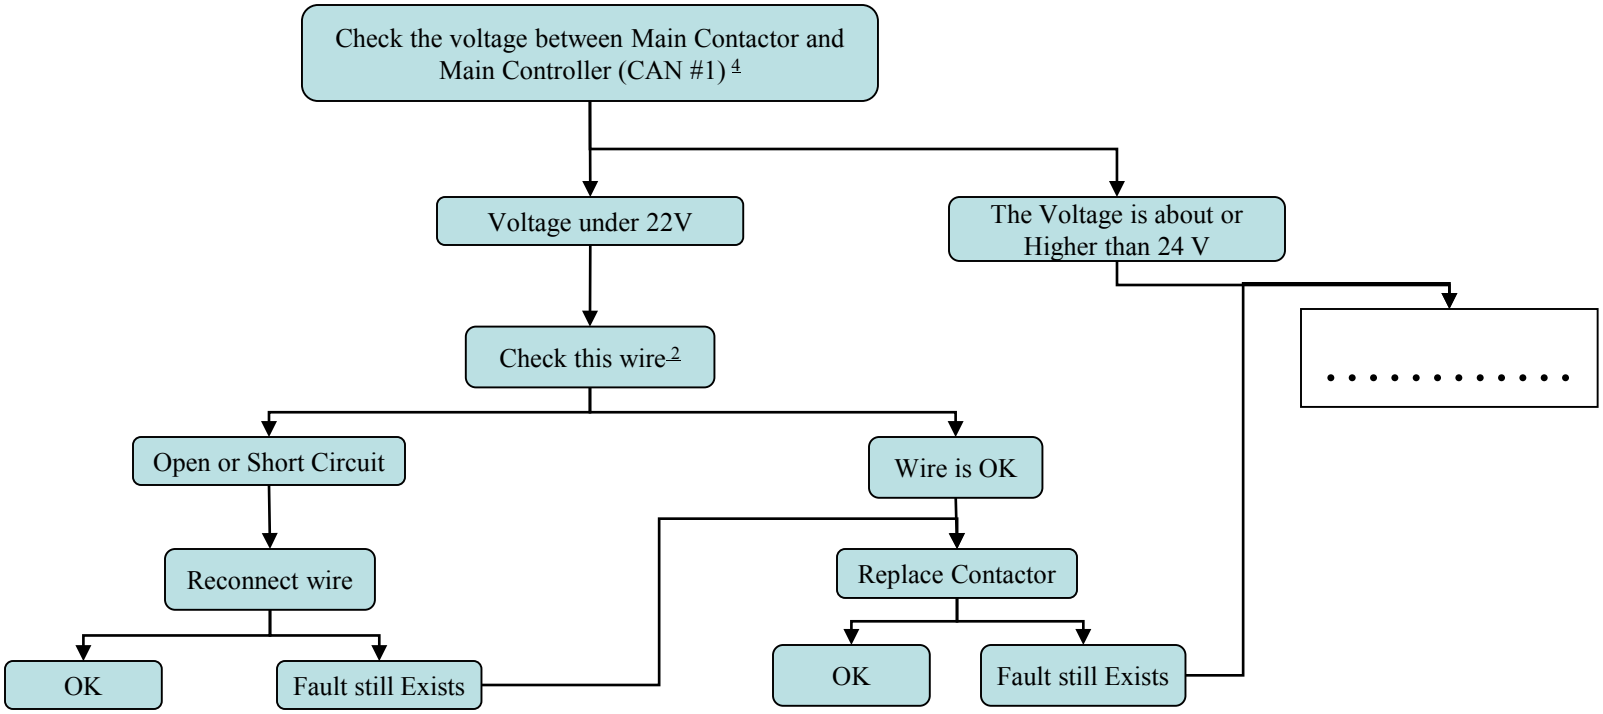
Check the voltage between Main Contactor and Main Controller (CAN #1) 4
Voltage under 22V
The Voltage is about or Higher than 24 V
Check this wire 2
. . . . . .
Open or Short Circuit
Wire is OK
Reconnect wire
Replace Contactor
OK
Fault still Exists
OK
Fault still Exists

https://truckmanualshub.com/

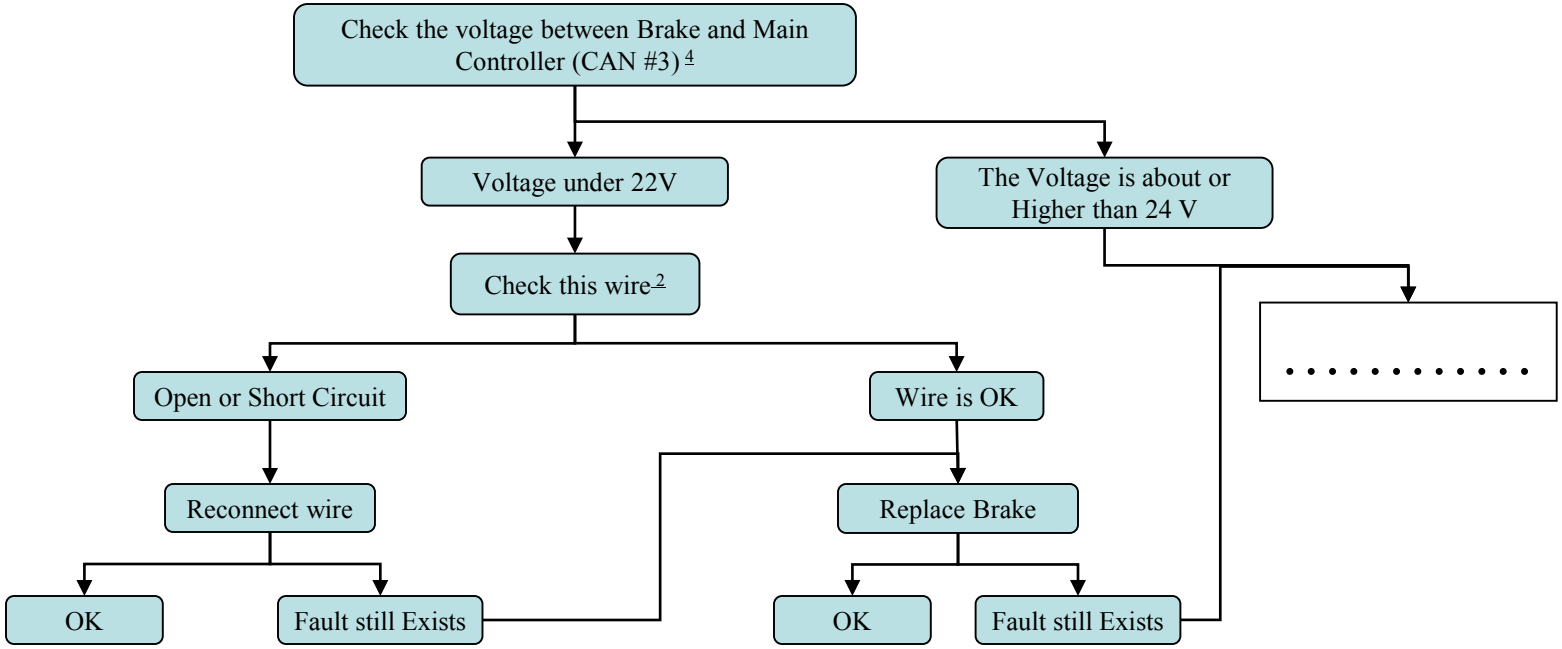

https://truckmanualshub.com/

ALARM #78 on NODE #2 VACC NOT OK

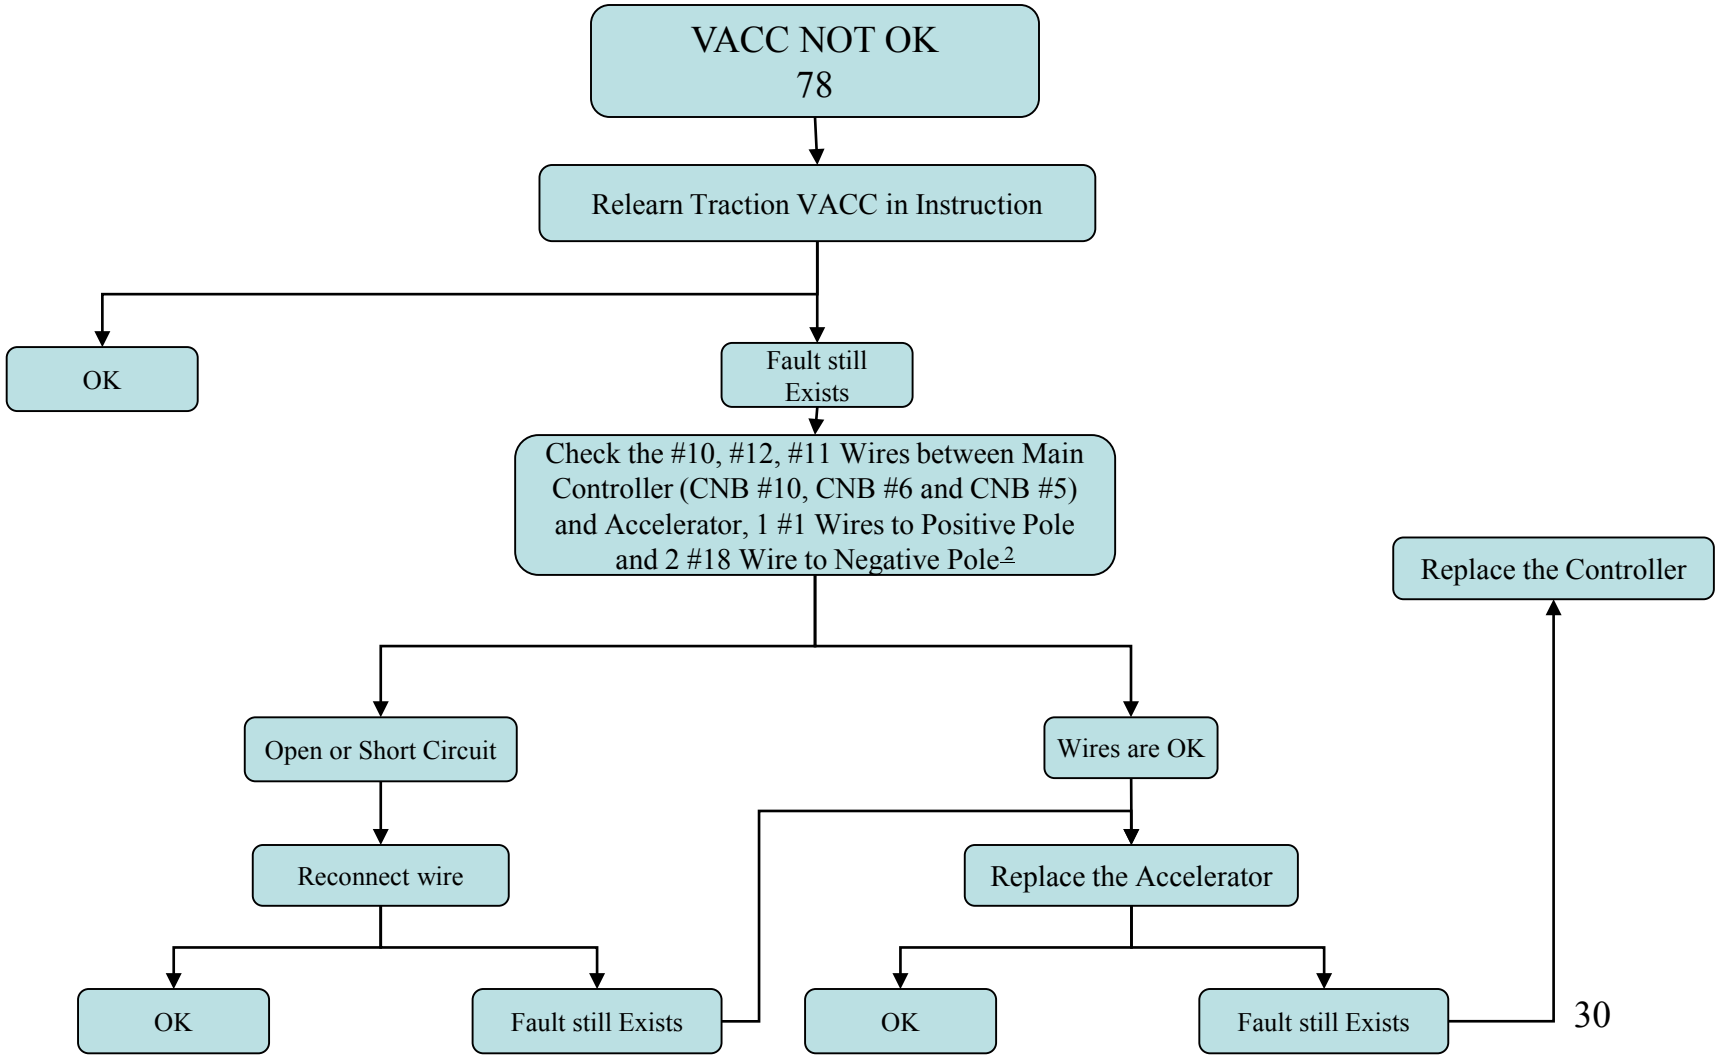

https://truckmanualshub.com/

ALARM #79 on NODE #2 INCORRECT START

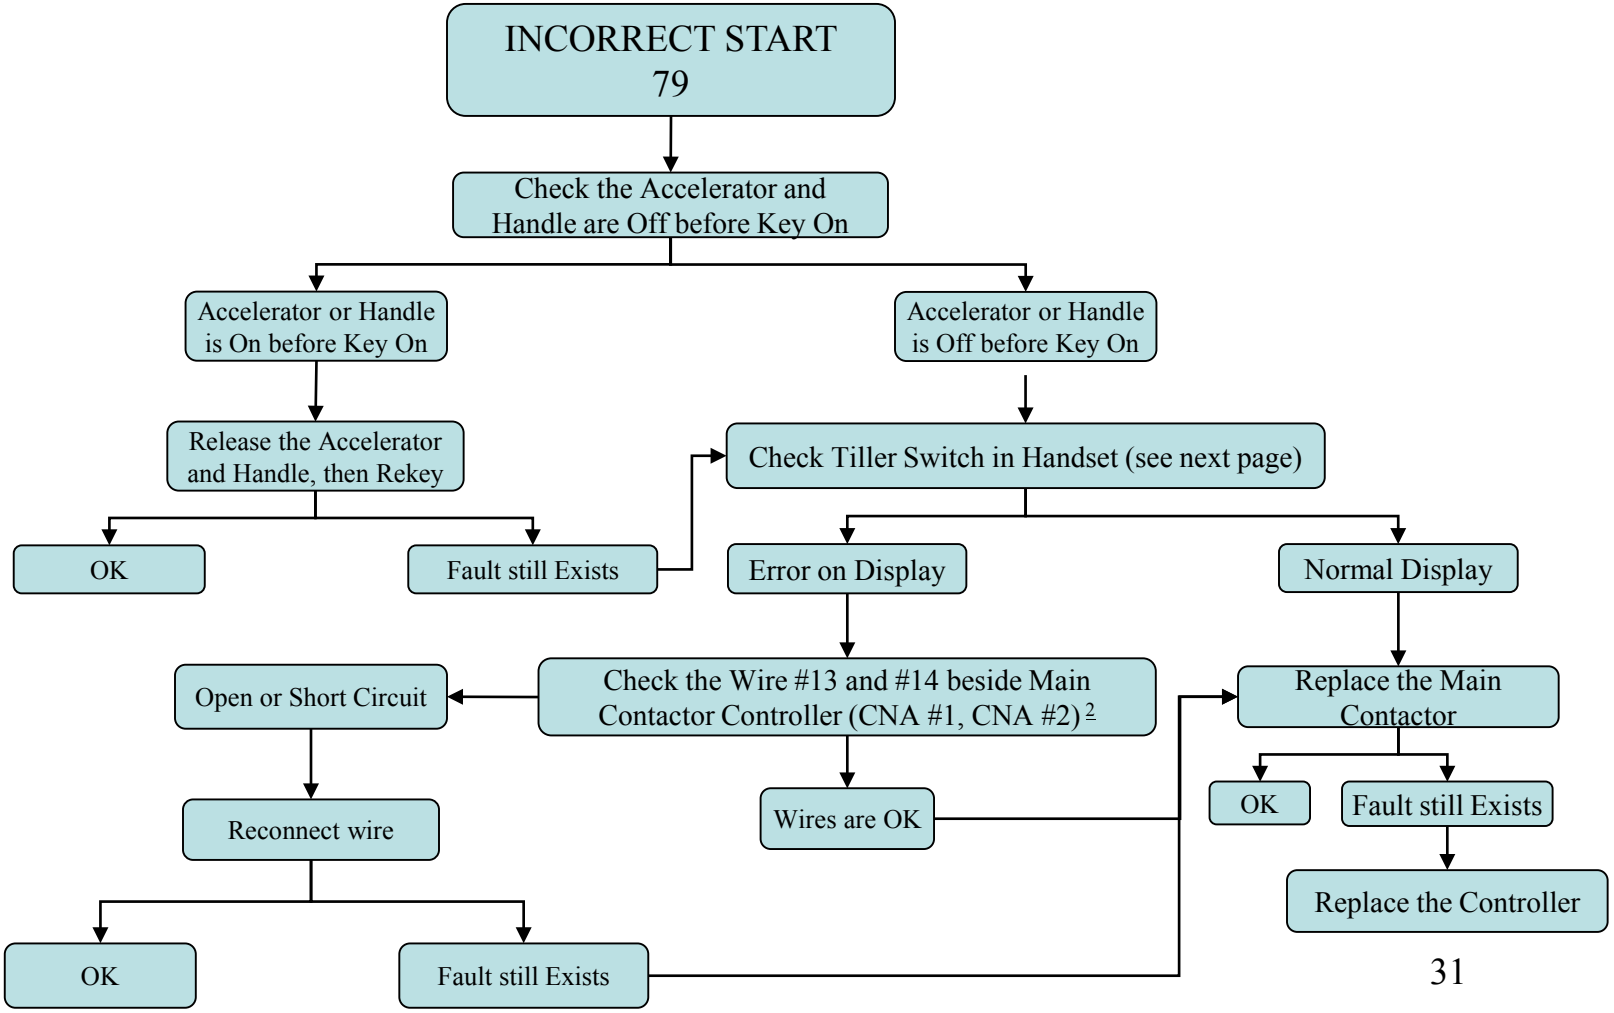

https://truckmanualshub.com/

Check Tiller Switch in Handset

Key on the truck, connect the flash connecting line. The Display will show:

Press ^ or v button until RS232 CONSOLE shows on the display

The Display will show :

Press OK to go into the Traction controller

The Display will show:

Cons AFG ZP021*

Cons AFG ZP021*
RS232 CONSOLE

AC0T2SE4B EP250
24V 150A 0H

https://truckmanualshub.com/

Press OK to go into the Main Menu

The Display will show:

Main Menu

Press ^ or v button until TEST shows on the display

The Display will show:

MAIN MENU
TEST

Press OK to go into the TEST function

The Display will show:

TEST

Press ^ or v button until HANDLE/ SEAT SW shows on the display

https://truckmanualshub.com/

The display will show:

HANDLE/ SEAT SW OFF

Pull Handle and Push the accelerator and hold on

The display will show:

HANDLE/ SEAT SW ON

When finished , press and hold power button for 3s to turn off the Console

https://truckmanualshub.com/

ALARM #80 on NODE #2 FORW+BACK

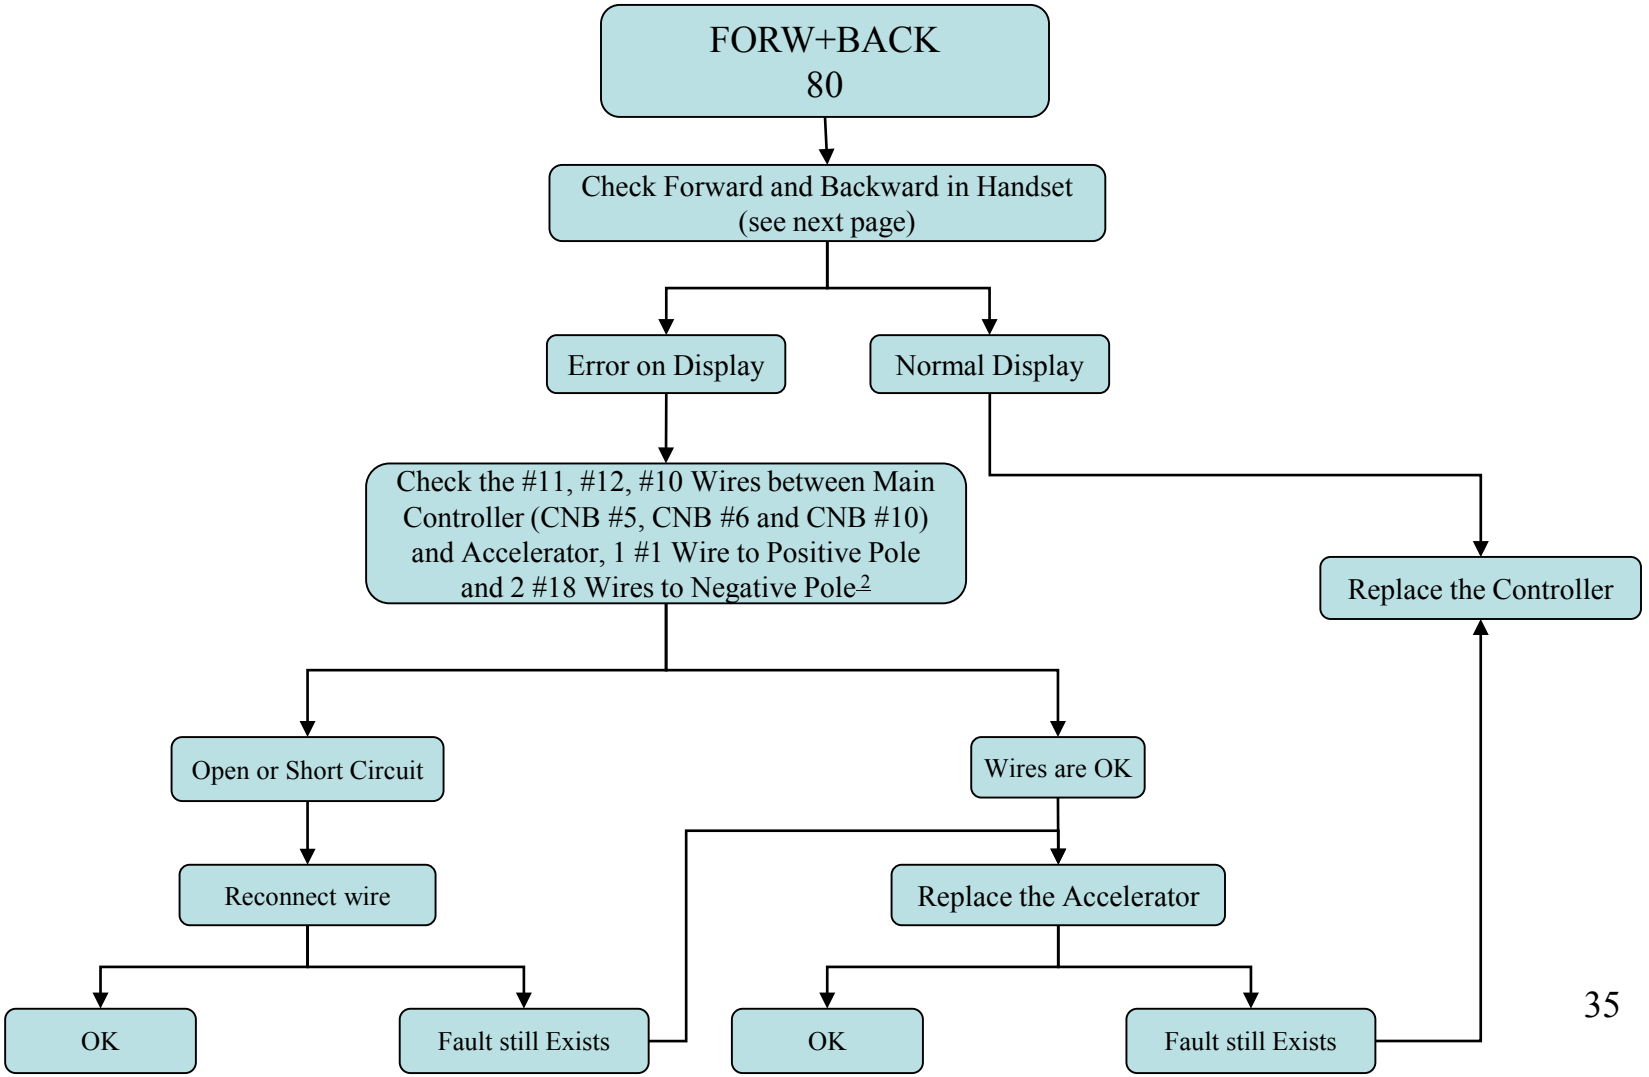

Check Forward and Backward in Handset

Key on the truck, connect the flash connecting line. The Display will show:

Press ^ or v button until RS232 CONSOLE shows on the display

The Display will show :

Press OK to go into the Traction controller

The Display will show:

Cons AFG ZP021*

Cons AFG ZP021*
RS232 CONSOLE

AC0T2SE4B EP250
24V 150A 0H

https://truckmanualshub.com/

Press OK to go into the Main Menu

The Display will show:

Main Menu

Press ^ or v button until TEST shows on the display

The Display will show:

MAIN MENU
TEST

Press OK to go into the TEST function

The Display will show:

TEST

Press ^ or v button until FORWARD shows on the display

https://truckmanualshub.com/

The display will show:

FORWARD OFF

Push the accelerator forward and hold on

The display will show:

FORWARD ON

Repeat step for reverse direction

BACKWARD OFF
BACKWARD ON

When finished , press and hold power button for 3s to turn off the Console

https://truckmanualshub.com/

ALARM #91 on NODE #2 INPUT ERROR #2

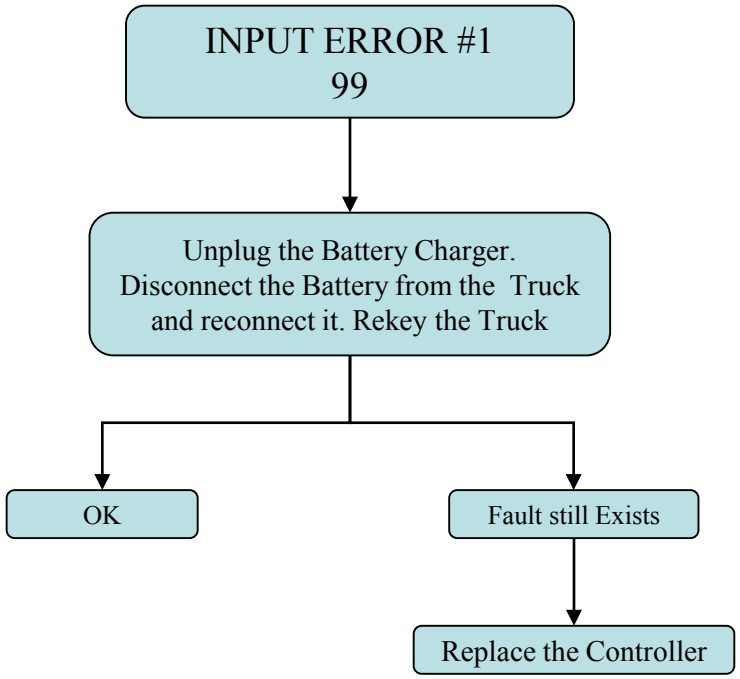

https://truckmanualshub.com/

ALARM #92 on NODE #2 INPUT ERROR #1

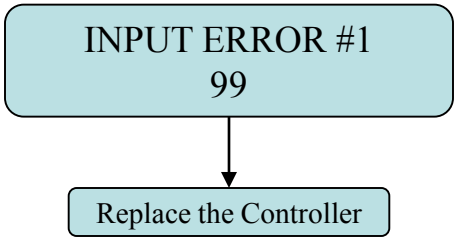

https://truckmanualshub.com/

ALARM #93 on NODE #2 ERROR IV

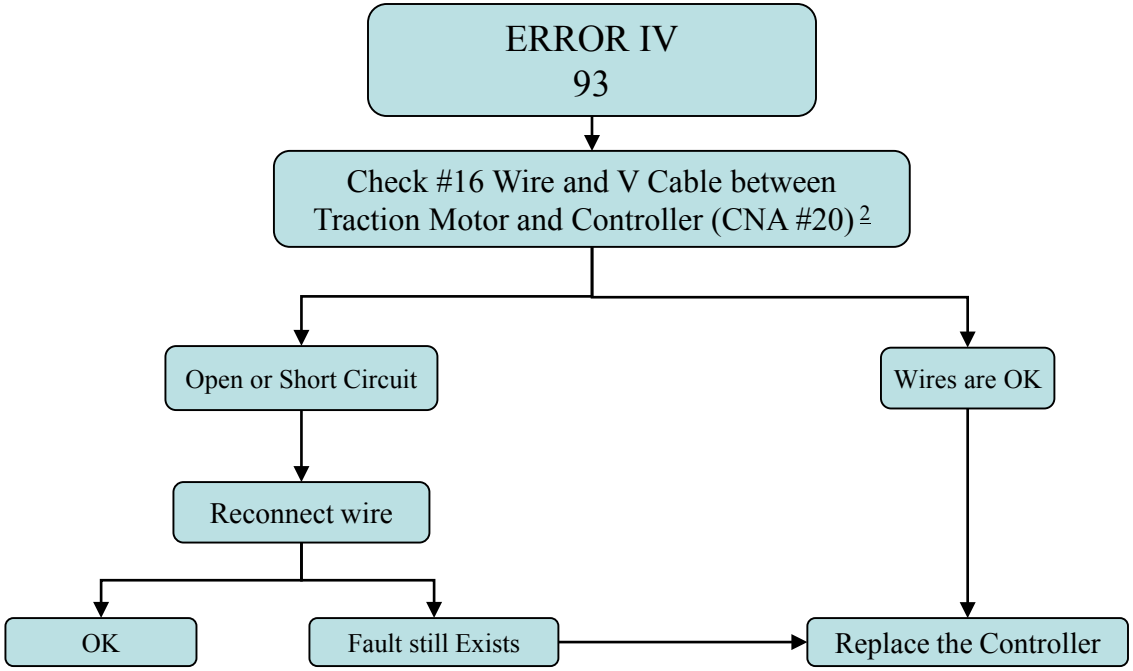

https://truckmanualshub.com/

ALARM #93 on NODE #2 ERROR IW

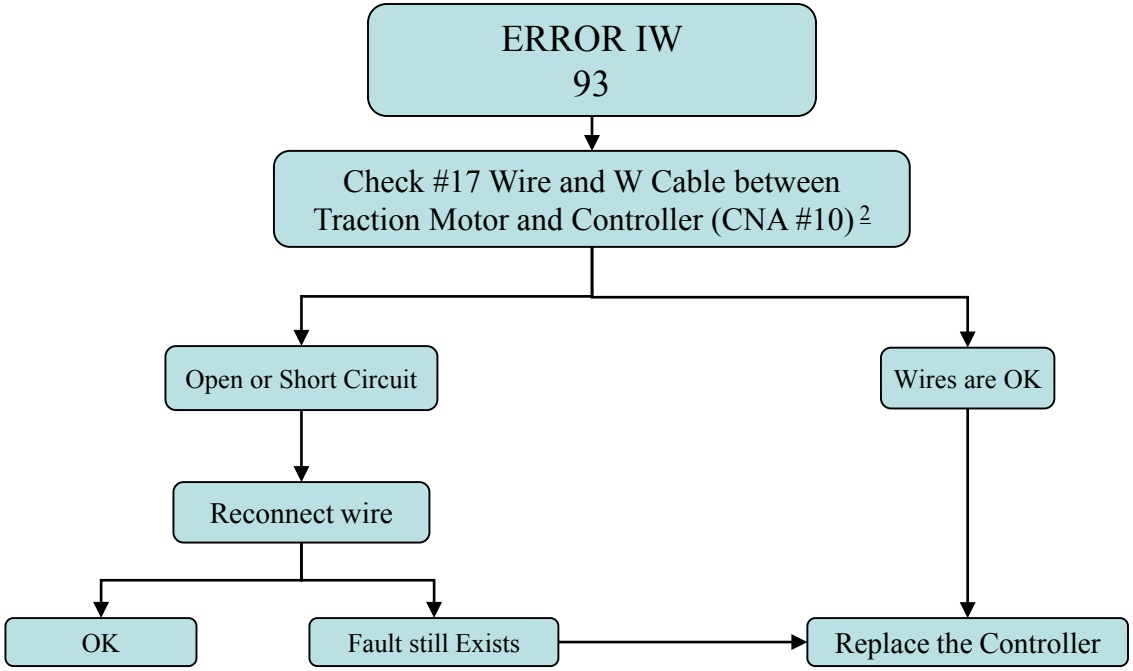

https://truckmanualshub.com/

ALARM #93 on NODE #2 ERROR LUW

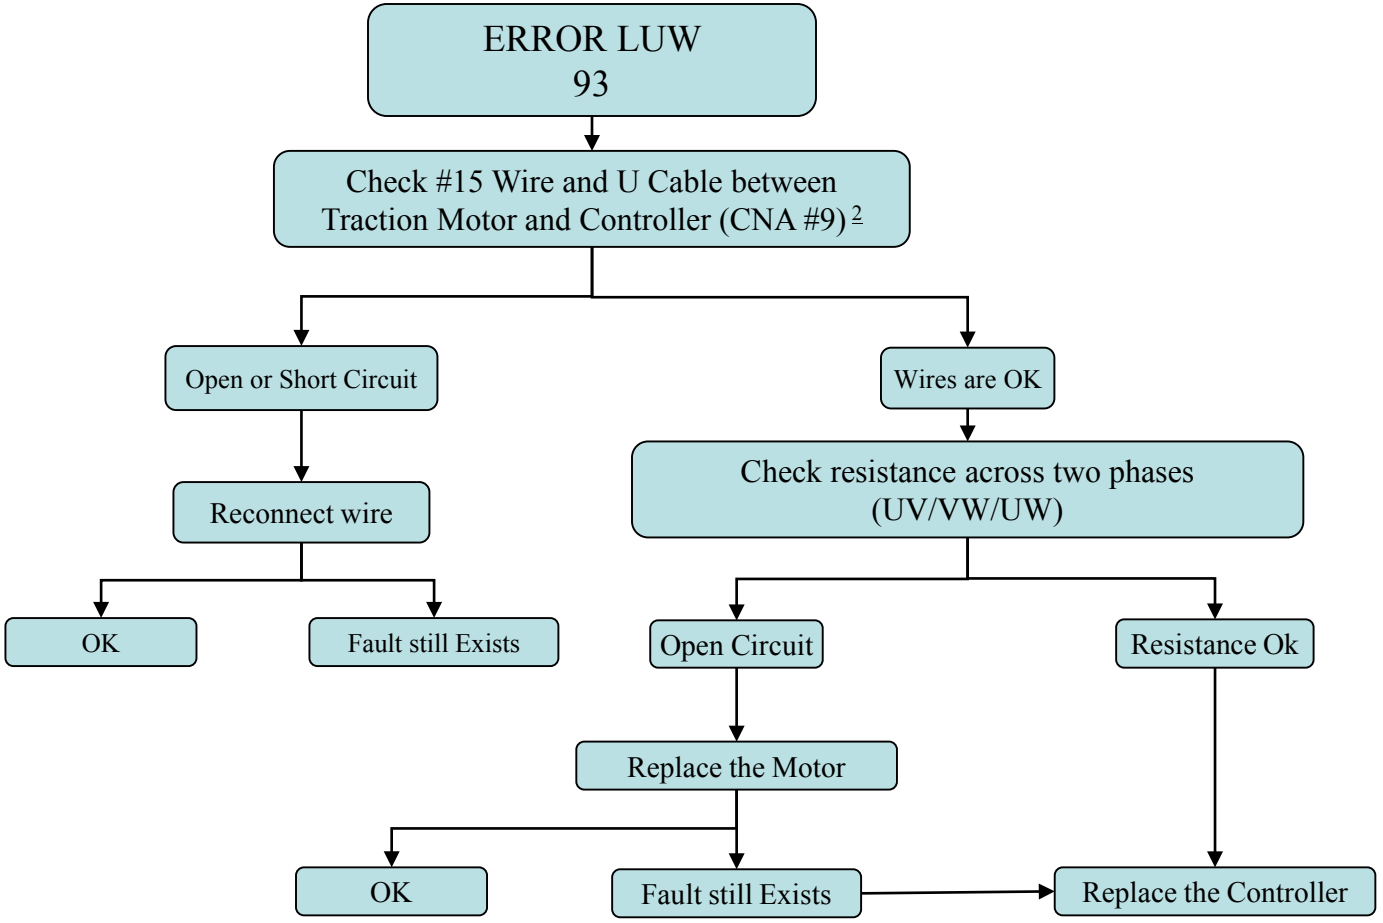

https://truckmanualshub.com/

ALARM #93 on NODE #2 ERROR LVW

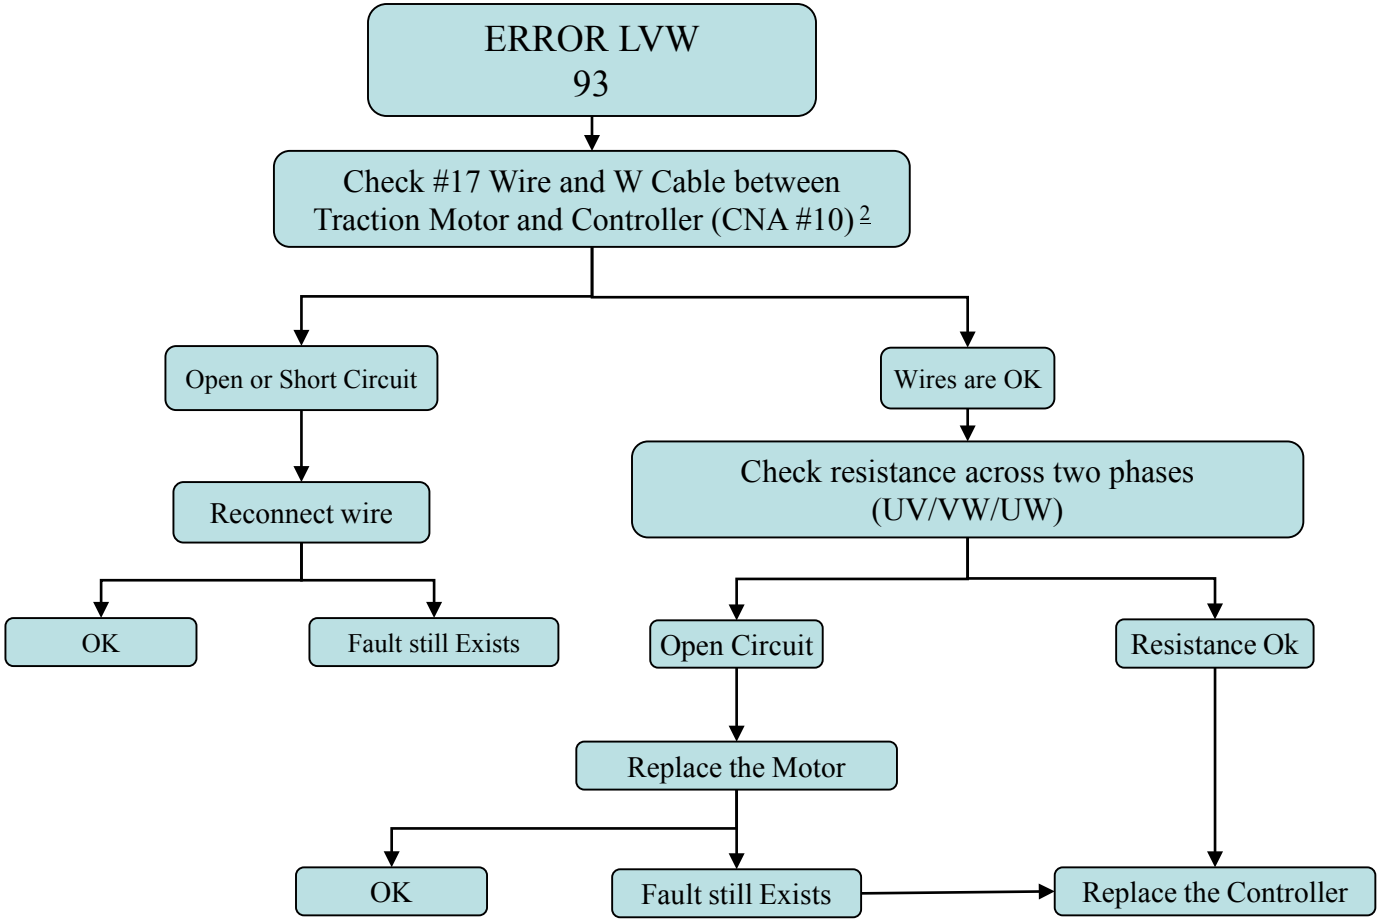

https://truckmanualshub.com/

ALARM #93 on NODE #2 ERROR HUV

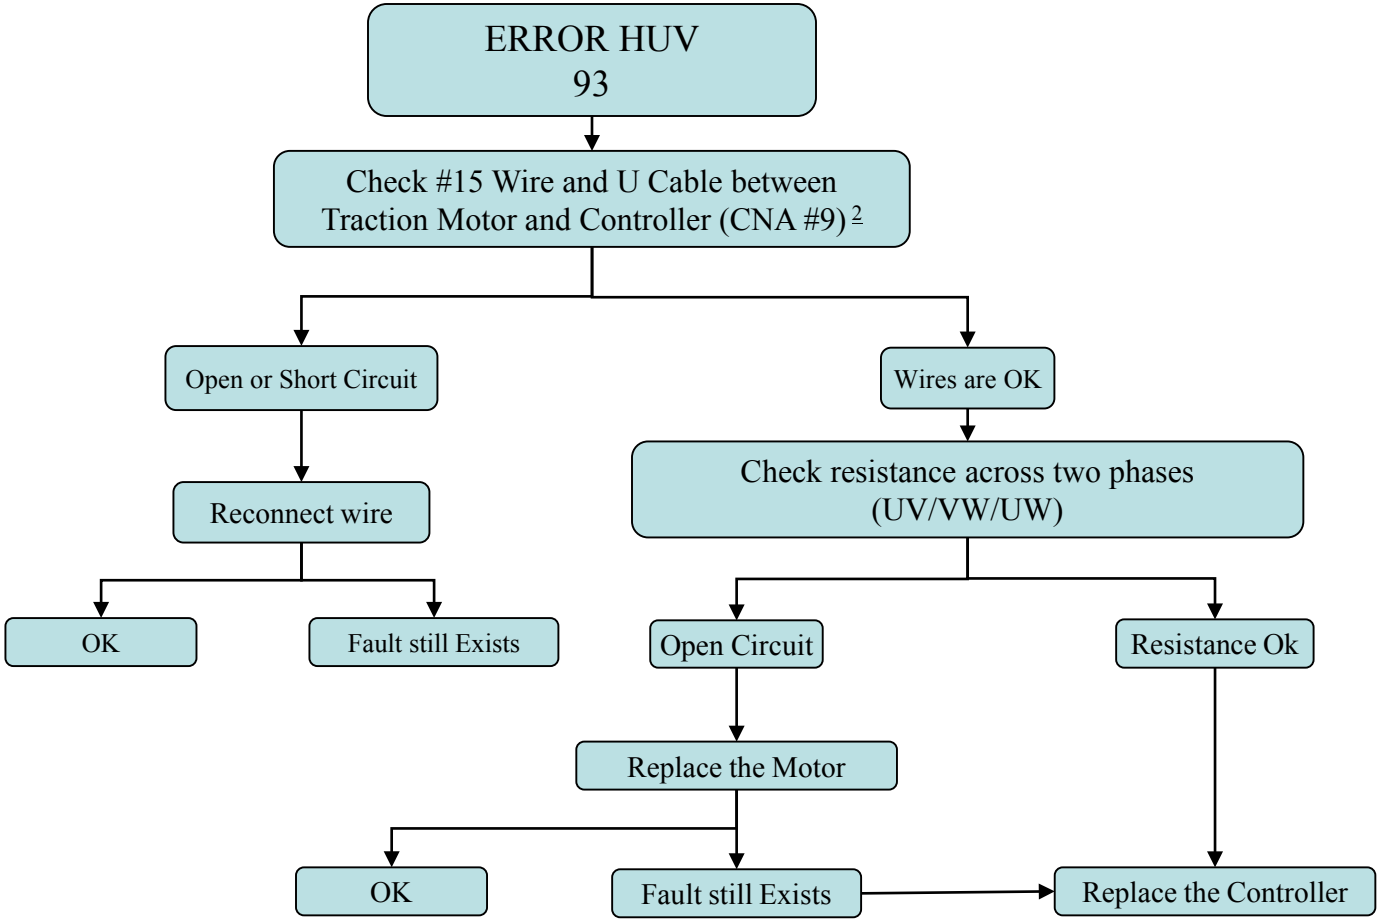

https://truckmanualshub.com/

ALARM #93 on NODE #2 ERROR HVW

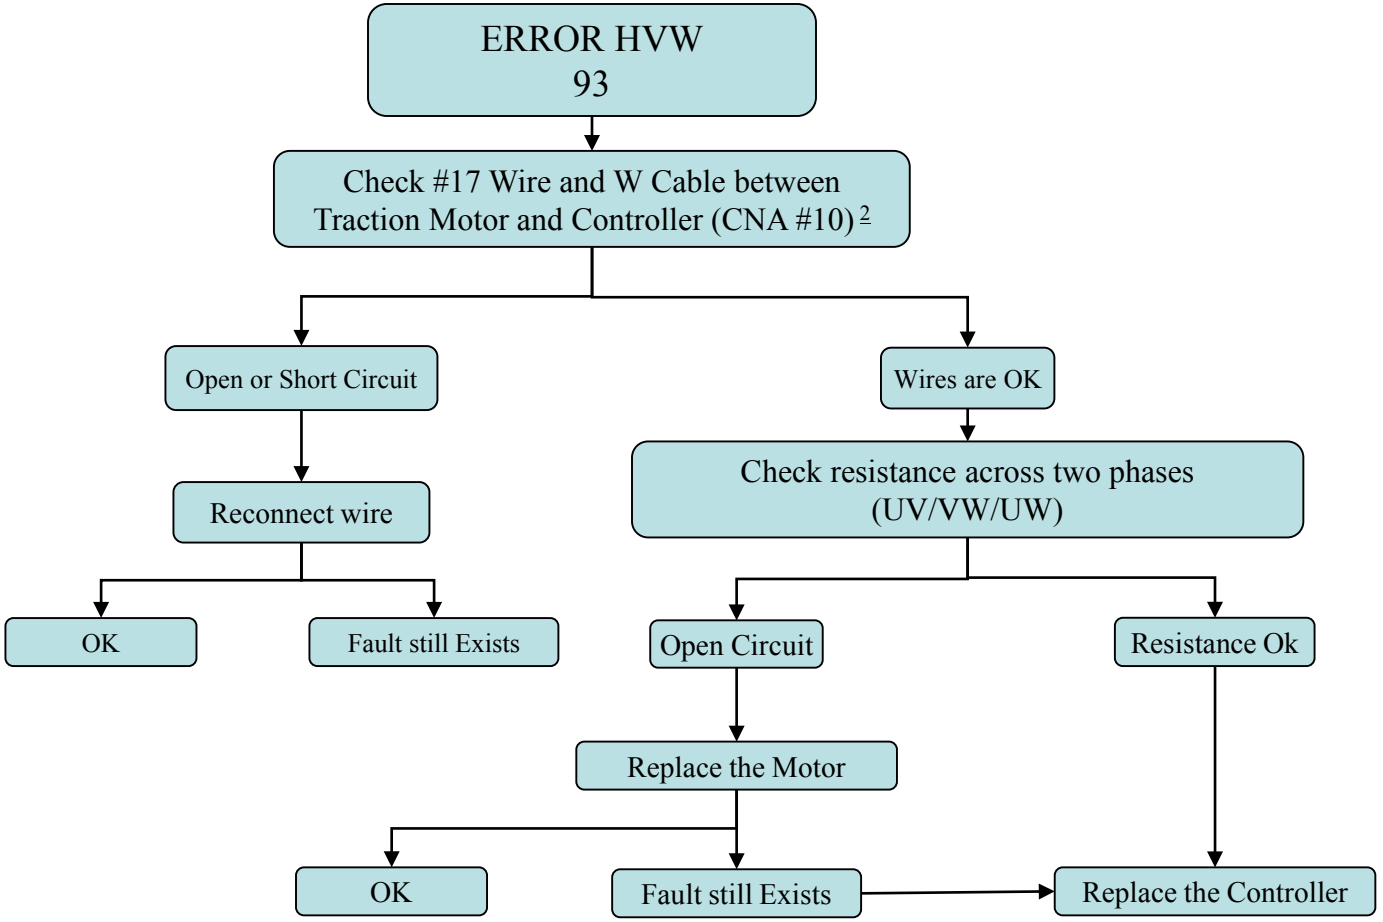

https://truckmanualshub.com/

ALARM #94 on NODE #2 CURRENT GAIN

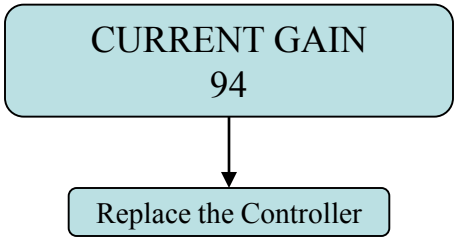

https://truckmanualshub.com/

ALARM #96 on NODE #2 ANALOG INPUT

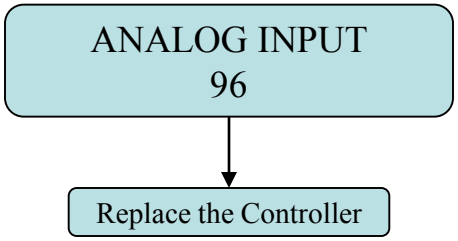

https://truckmanualshub.com/

ALARM #97 on NODE #2 OVERLOAD

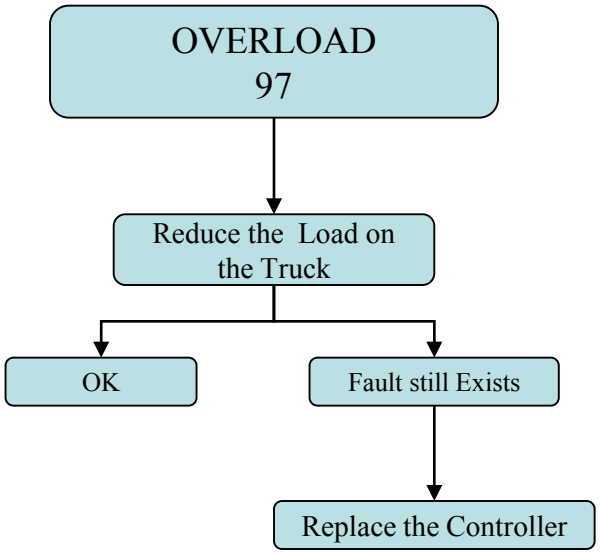

https://truckmanualshub.com/

ALARM #99 on NODE #2 CHECK UP NEEDED

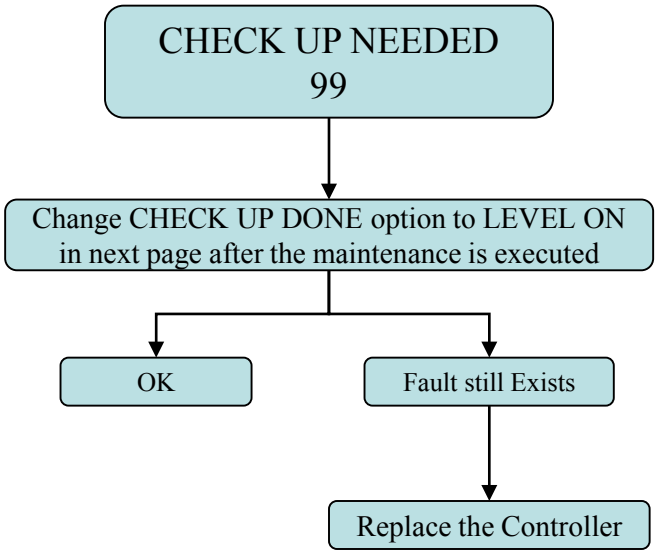

Check UP in Handset

Key on the truck, connect the flash connecting line. The Display will show:

Press ^ or v button until RS232 CONSOLE shows on the display

The Display will show :

Press OK to go into the Traction controller

The Display will show:

Cons AFG ZP021*

Cons AFG ZP021*
RS232 CONSOLE

AC0T2SE4B EP250
24V 150A 0H

https://truckmanualshub.com/

Press OK to go into the Main Menu

The Display will show:

Main Menu

Press ^ or v button until ADJUSTMENT shows on the display

The Display will show:

MAIN MENU
ADJUSTMENT

Press OK to go into the ADJUSTMENT function

The Display will show:

ADJUSTMENT

Press ^ or v button until CHECK UP DONE shows on the display

https://truckmanualshub.com/

The display will show:

CHECK UP DONE OFF

Push 》, or 《 To select ON

The display will show:

CHECK UP DONE ON

When finished , press and hold power button for 3s to turn off the Console, and rekey the truck

https://truckmanualshub.com/

ALARM on NODE #2 WRONG ZERO

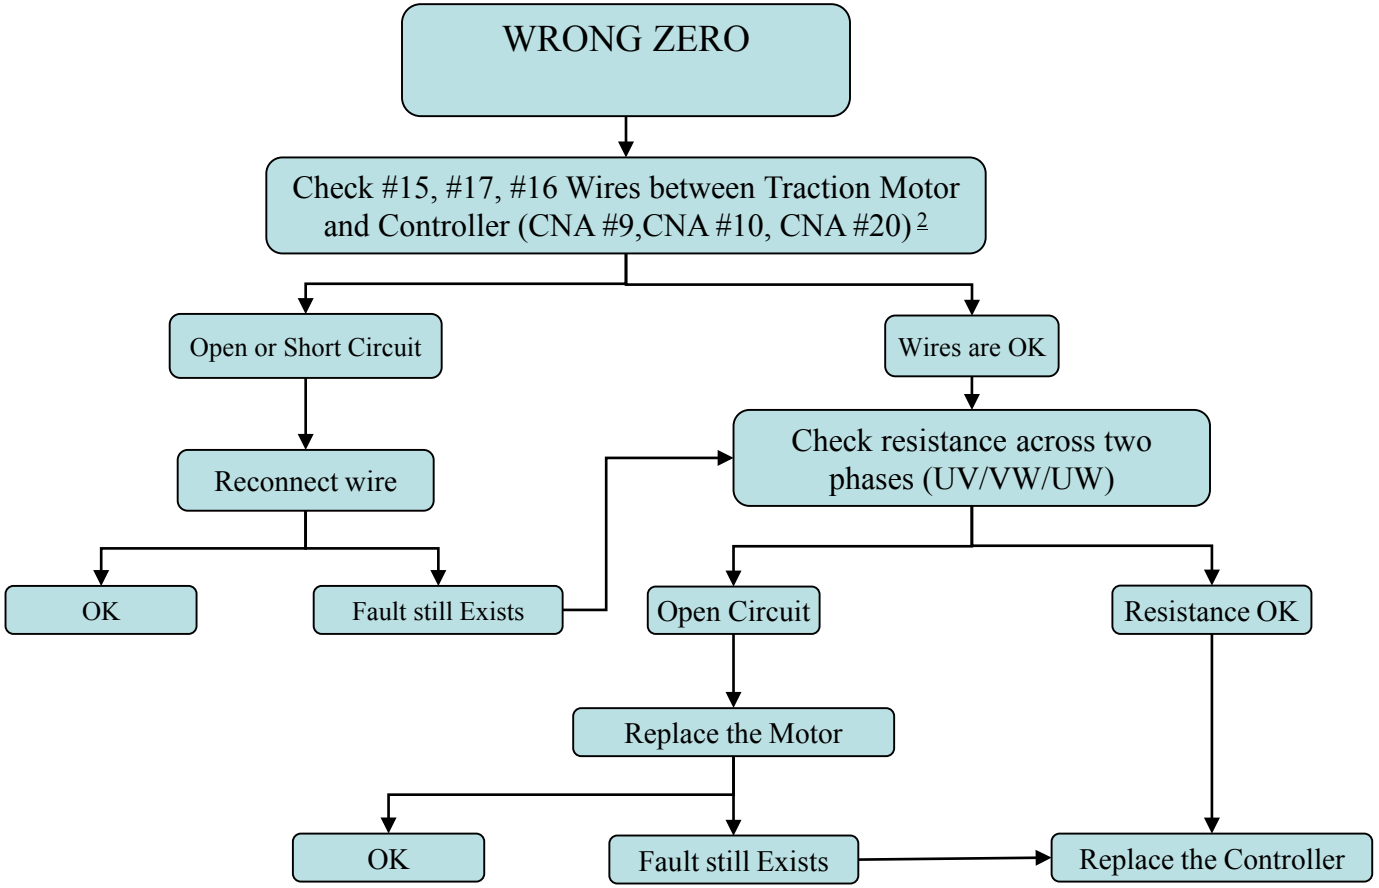

https://truckmanualshub.com/

ALARM on NODE #2 STOP TOP

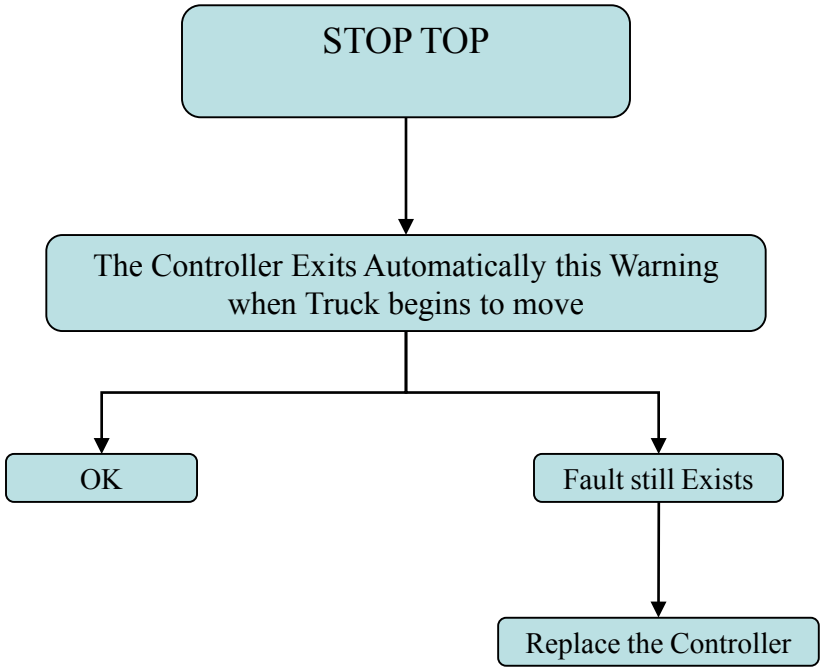

https://truckmanualshub.com/

ALARM on NODE #2 LIFT LOW. ACTIVE

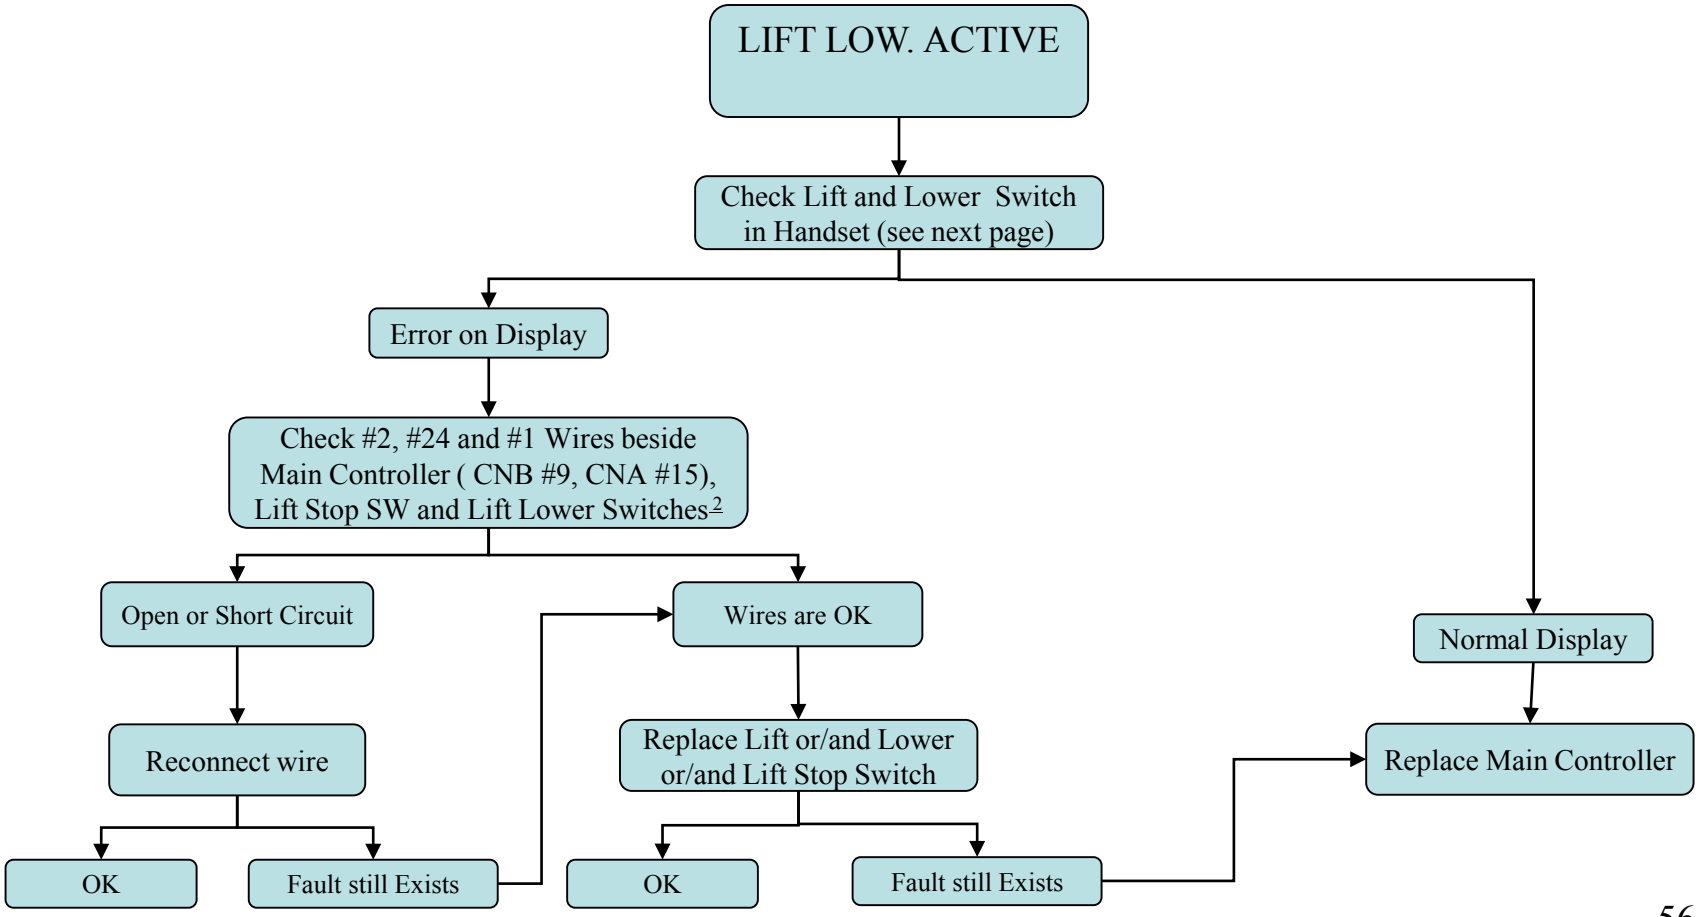

https://truckmanualshub.com/

Check Lift and Lower Switch in Handset

Key on the truck, connect the flash connecting line. The Display will show:

Press ^ or v button until RS232 CONSOLE shows on the display

The Display will show :

Press OK to go into the Traction controller

The Display will show:

Cons AFG ZP021*

Cons AFG ZP021*
RS232 CONSOLE

AC0T2SE4B EP250
24V 150A 0H

https://truckmanualshub.com/

Press OK to go into the Main Menu

The Display will show:

Main Menu

Press ^ or v button until TEST shows on the display

The Display will show:

MAIN MENU
TEST

Press OK to go into the TEST function

The Display will show:

TEST

Press ^ or v button until LIFT SW shows on the display

https://truckmanualshub.com/

The display will show:

LIFT SW OFF

Pull Handle and Press the Lift Switch and hold on

The display will show:

LIFT SW ON

Repeat Step for Lower Switch:

LOWER SW OFF

LOWER SW ON

When finished , press and hold power button for 3s to turn off the Console

Appendix A

1. Check if cables are opened or shorted. A shorted cable means the cable jacketing is damaged and it is shorting to another cable or it is in contact with a metal object like the frame. An open cable means one of the inside metal wires are cut/damaged. If you are not sure, pleasure measure the resistance of the individual wire or cable. If the resistance is more than 1 ohm, it is open.

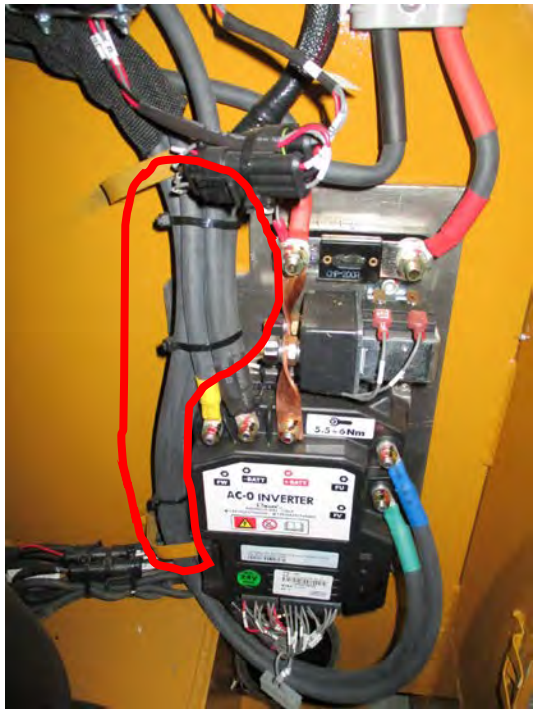

Check the connection points of the motor cables, and controller cables. Check the cable terminals for burn marks. Check if hardware is loose or burned. Ensure connections re tightened properly.

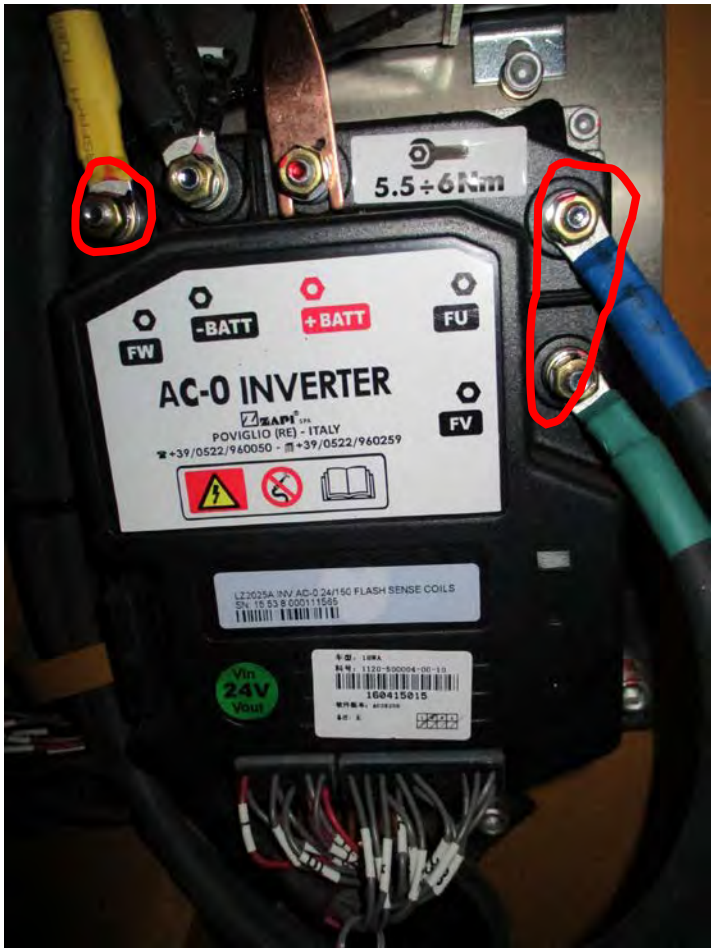

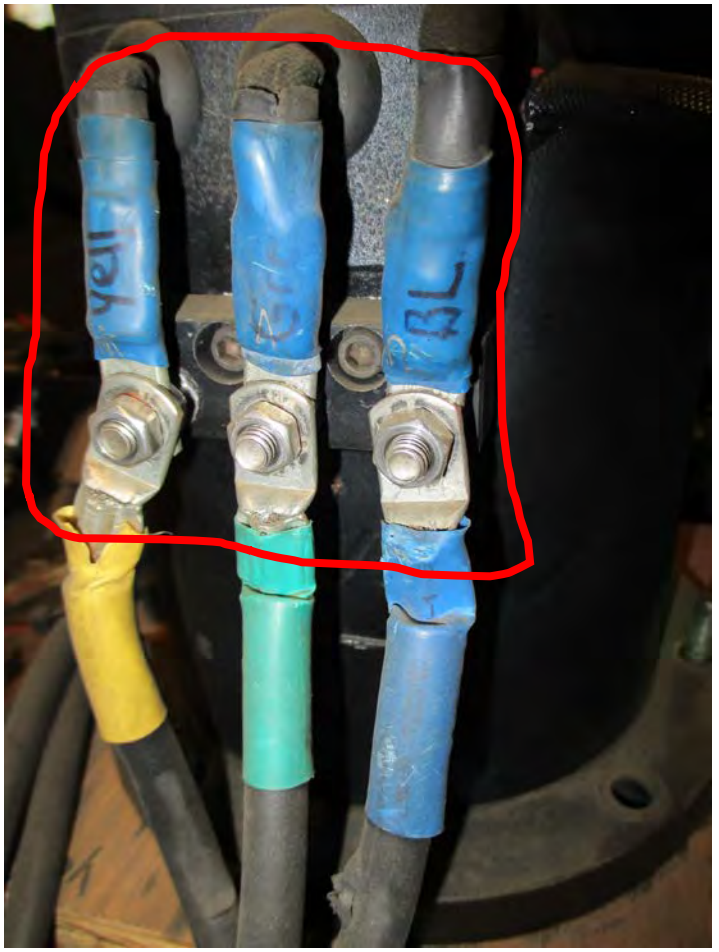

2. Check if cables are opened or shorted. A shorted cable means the cable jacketing is damaged and it is shorting to another cable or it is in contact with a metal object like the frame. An open cable means one of the inside metal wires are cut/damaged. If you are not sure, pleasure measure the resistance of the individual wire or cable. If the resistance is more than 1 ohm, it is open.

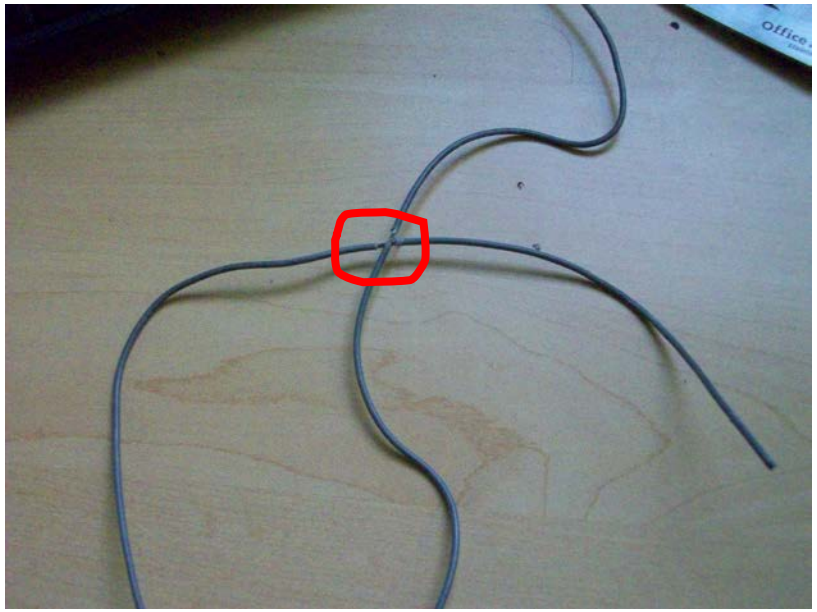

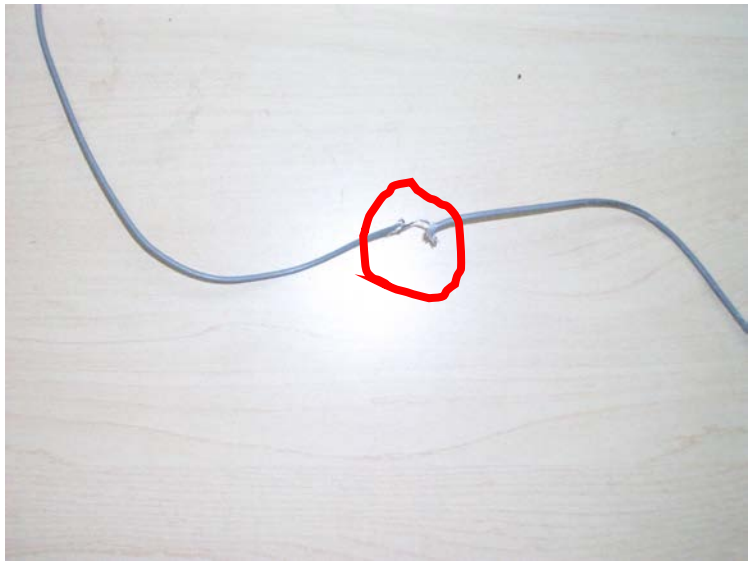

Check the connectors and pins on the Controller. Ensure connector locks are not damaged and no pins are broken or pushed out of the connector. Ensure no wires at pin terminations are cut/damaged

Check the connections between Controller wires and switches/sensors. Ensure wires are not cut or damaged.

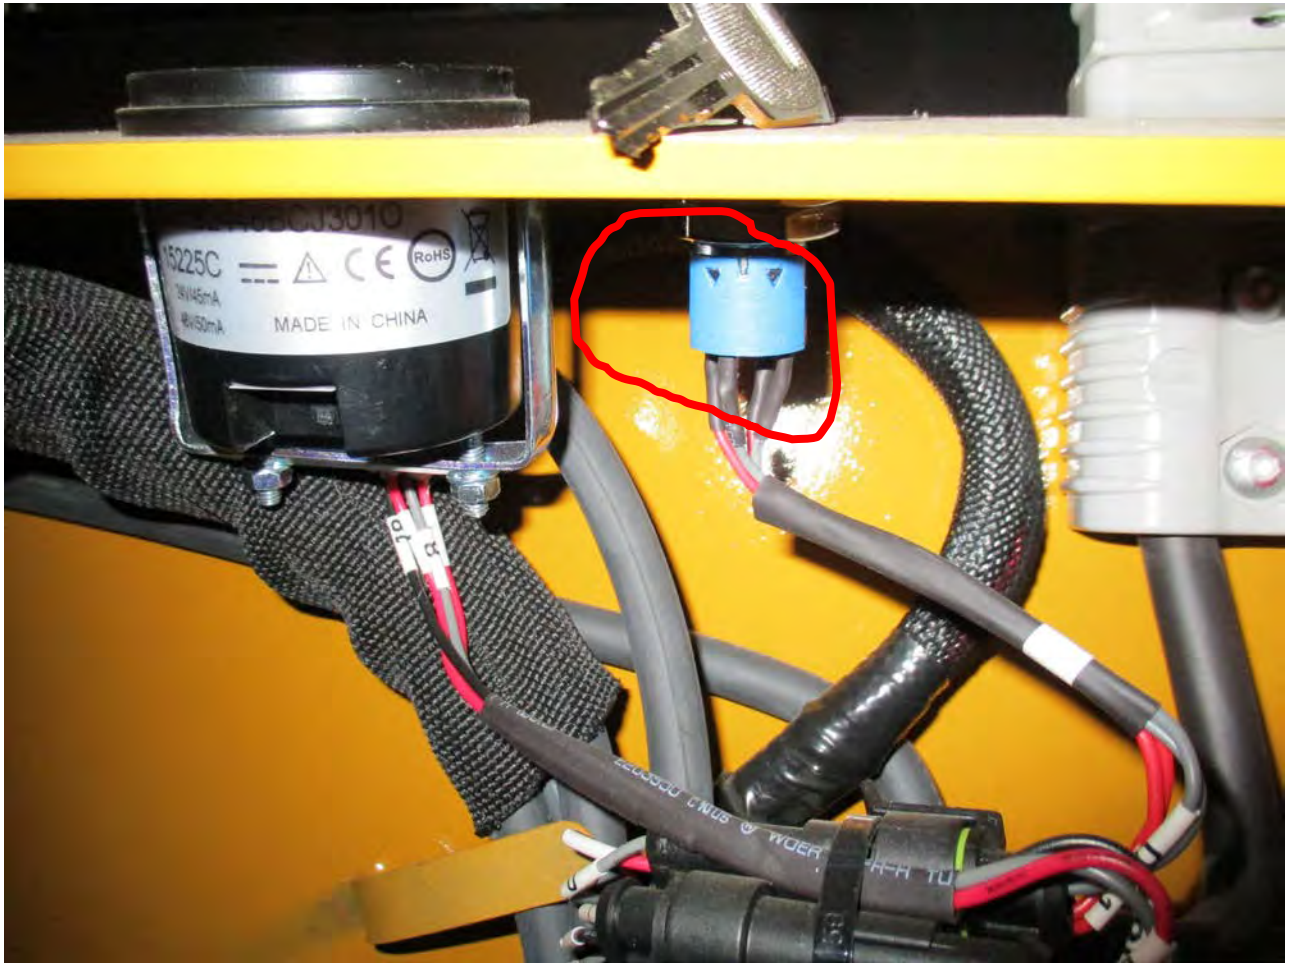

https://truckmanualshub.com/

Check if connectors are loose or burned (such as the 2 pin connectors on the Main Contact). Ensure the parts are properly tightened.

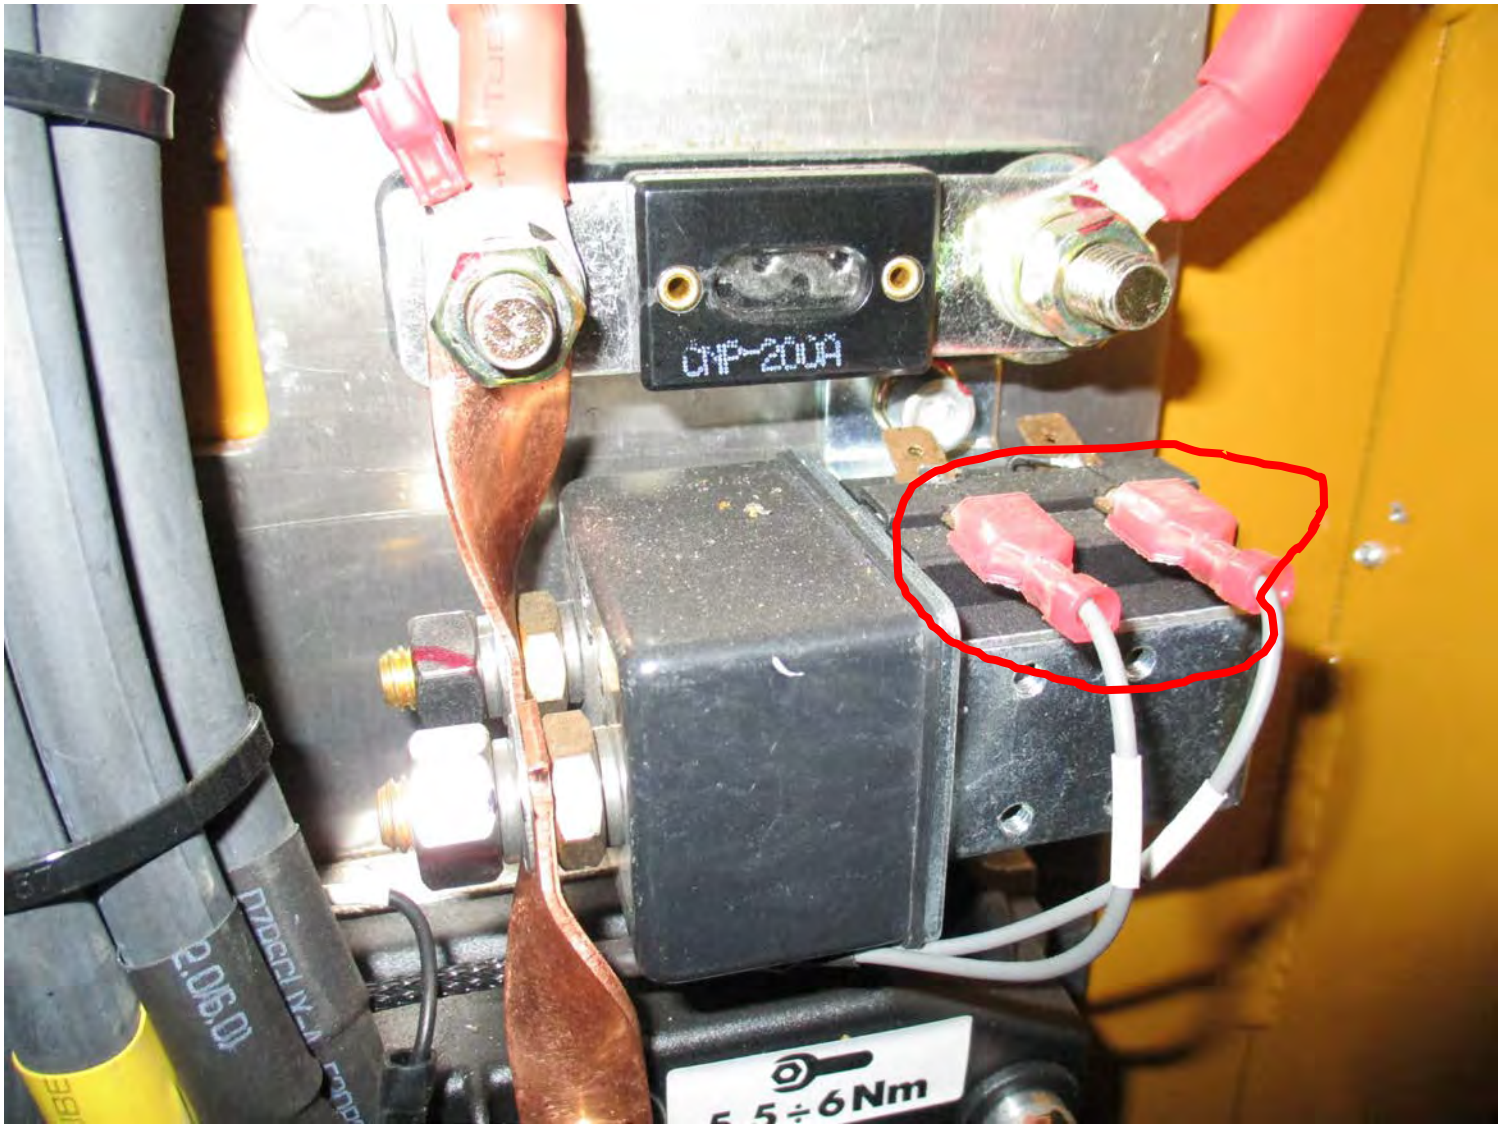

3. Check if cables are opened or shorted. A shorted cable means the cable jacketing is damaged and it is shorting to another cable or it is in contact with a metal object like the frame. An open cable means one of the inside metal wires are cut/damaged. If you are not sure, pleasure measure the resistance of the individual wire or cable. If the resistance is more than 1 ohm, it is open

https://truckmanualshub.com/

Check the Connectors between Battery and truck to see if they fit loose or are burned (Concentrate on the inside of the connector). If they do not fit correctly, replace cable lugs and/or connector housing to correct the issue.

Check if the fuses are blown out or not.

4. Check the voltage from the wire you want to check to the Controller negative (red circled).

https://truckmanualshub.com/

5. Open the battery case.

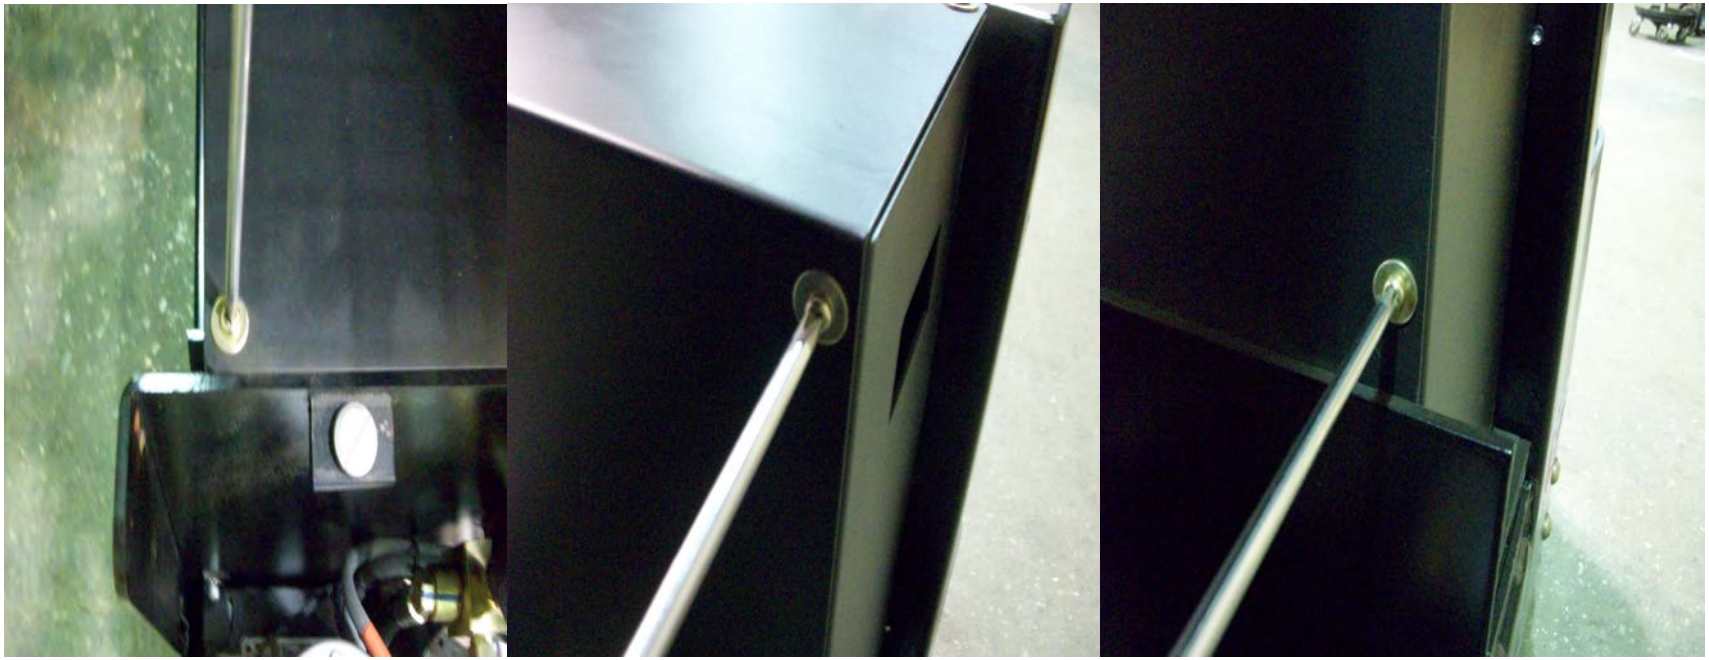

https://truckmanualshub.com/

Check the no load battery voltage for every battery.

https://truckmanualshub.com/

Check the load voltage when the truck is lifting empty.

Then check the load voltage when the truck is lifting with a load (red circled load, load should be no more than 2000 pound). If the voltage difference between the empty lifting and loaded lifting is more than 5V. Please replace battery.