https://truckmanualshub.com/

SERVICE MANUAL SECTION

LoneStar® and ProStar® Chassis Built January, 2007 and After — ELECTRICAL CIRCUIT DIAGRAMS

Model: LoneStar

Model: ProStar
Start Date: 01/15/2007

S08339

01/27/2009

Copyright© 01/27/2009 Navistar, Inc.

https://truckmanualshub.com/

https://truckmanualshub.com/

Table of Contents

1. TABLE OF CONTENTS (CHAPTER 1).....1

2. INSTRUCTIONS AND CHARTS (CHAPTER 2).....1
- 2.1. ABBREVIATIONS, P. 1.....1
- 2.2. ACRONYMS, P. 2.....2
- 2.3. CIRCUIT DIAGRAM INSTRUCTIONS, P. 3.....3
- 2.4. CIRCUIT NUMBER IDENTIFICATION AND COLOR, P. 4.....4
- 2.5. CIRCUIT NUMBER IDENTIFICATION AND COLOR (CONT.), P. 5.....5
- 2.6. CIRCUIT NUMBER IDENTIFICATION AND COLOR (CONT.), P. 6.....6
- 2.7. LAMP BULB CHART, P. 7.....7
- 2.8. RELAY FUNCTION AND WIRING GUIDE, P. 8.....8
- 2.9. SCHEMATIC SYMBOL CHART, P. 9.....9
- 2.10. SCHEMATIC SYMBOL CHART (CONT.), P. 10.....10
- 2.11. SCHEMATIC SYMBOL CHART (CONT.), P. 11.....11
- 2.12. SCHEMATIC SYMBOL CHART (CONT.), P. 12.....12

3. 12 VOLT POWER DISTRIBUTION CIRCUIT DIAGRAMS (CHAPTER 3).....13
- 3.1. BATTERY FEED, P. 1.....13
- 3.2. BATTERY FEED (CONT.), P. 2.....14
- 3.3. BATTERY FEED (CONT.), P. 3.....15
- 3.4. BATTERY FEED (CONT.), P. 4.....16
- 3.5. BLANK PAGE, P. 5.....17
- 3.6. BLANK PAGE, P. 6.....18
- 3.7. IGNITION FEED — STANDARD AND REMOTE START/STOP, P. 7.....19
- 3.8. IGNITION FEED — ICON, P. 8.....20
- 3.9. IGNITION FEED — STANDARD, P. 9.....21
- 3.10. IGNITION FEED — STANDARD (LONESTAR), P. 9A.....22
- 3.11. ACCESSORY FEED, P. 10.....23
- 3.12. CAB J1939 COMPASS AND ABS EFFECTS, P. 11.....24
- 3.13. CAB J1939 WITH ALL OPTIONS, P. 12.....25
- 3.14. CAB J1939 WITH ALL OPTIONS, P. 13.....26
- 3.15. CAB J1939 WITH ALL OPTIONS, P. 14.....27
- 3.16. J1939 ENGINE, P. 15.....28
- 3.17. J1939 CHASSIS, P. 16.....29
- 3.18. J1939 WITH SLEEPER, P. 17.....30
- 3.19. J1708 PRIVATE, P. 18.....31
- 3.20. J1708 PUBLIC, P. 19.....32
- 3.21. J1708 PUBLIC, P. 20.....33
- 3.22. J1708 PUBLIC, P. 20A.....34
- 3.23. GROUND — CAB, P. 21.....35
- 3.24. GROUND — CAB, P. 22.....36
- 3.25. GROUND — CAB, P. 23.....37
- 3.26. GROUND — CAB, P. 24.....38
- 3.27. GROUND — CAB, P. 25.....39
- 3.28. GROUND — CAB, P. 26.....40
- 3.29. GROUND — CHASSIS, P. 27.....41
- 3.30. GROUND — SLEEPER, P. 28.....42

https://truckmanualshub.com/

3.31. GROUND — SLEEPER, P. 29.....43
3.32. GROUND — SLEEPER, P. 29A.....44
3.33. ENGINE GROUND — IBB ENGINE, P. 30.....45
3.34. J1939 DATA LINK — IBB ENGINE, P. 31.....46

4. CAB ACCESSORIES (CHAPTER 4).....47
4.1. CB POWER RADIO, P. 1.....47
4.2. CIGAR LIGHTER AND TEMPERATURE DISPLAY, P. 2.....48
4.3. ELECTRIC WINDOWS AND DOOR LOCKS, P. 3.....49
4.4. ELECTRIC HORN, P. 4.....50
4.5. MIRRORS HEATED AND LIGHTED, P. 5.....51
4.6. MIRRORS HEATED AND LIGHTED, P. 6.....52
4.7. TELEMATICS, P. 7.....53
4.8. SATELLITE COMMUNICATION SYSTEM — QUALCOMM TMCT DAYCAB, P. 8.....54
4.9. SATELLITE COMMUNICATION SYSTEM — QUALCOMM TMCT DAYCAB, P. 9.....55
4.10. SATELLITE COMMUNICATION SYSTEM — QUALCOMM TMCT SLEEPER, P. 10.....56
4.11. SATELLITE COMMUNICATION SYSTEM — QUALCOMM TMCT SLEEPER, P. 11.....57
4.12. SATELLITE COMMUNICATION SYSTEM — QUALCOMM IMCT, P. 12.....58
4.13. SATELLITE COMMUNICATION SYSTEM — QUALCOMM IMCT, P. 13.....59
4.14. QUALCOMM IMCT — SLEEPER, P. 14.....60
4.15. PANIC BUTTON, P. 15.....61
4.16. SATELLITE COMMUNICATION SYSTEM — XATA WITH DAYCAB, P. 16.....62
4.17. SATELLITE COMMUNICATION SYSTEM — XATA WITH SLEEPER, P. 17.....63
4.18. RADIO ENTERTAINMENT, SPEAKERS, P. 18.....64
4.19. RADIO ENTERTAINMENT, SPEAKERS, P. 18A.....65
4.20. RADIO ENTERTAINMENT, SPEAKERS, P. 19.....66
4.21. RADIO ENTERTAINMENT, SPEAKERS, P. 19A.....67
4.22. SWITCH PACK, P. 20.....68
4.23. WINDSHIELD WIPER MOTOR, P. 21.....69
4.24. WINDSHIELD WASHER PUMP, P. 22.....70
4.25. DRIVER DISPLAY — VEHICLE INFORMATION, P. 23.....71
4.26. CAT MESSENGER DISPLAY, P. 24.....72
4.27. BEACON LIGHT SWITCH — FOR DUAL CUSTOMER ACCESSORY, P. 25.....73
4.28. DOOR SWITCHES — DOME LAMP, P. 26.....74
4.29. SPARE SWITCH — FOR SINGLE CUSTOMER ACCESSORY, P. 27.....75
4.30. SPARE SWITCH — FOR DUAL CUSTOMER ACCESSORY, P. 28.....76
4.31. EATON VORAD EVT-300 SYSTEM, P. 29.....77
4.32. EATON VORAD EVT-300 SYSTEM, P. 30.....78
4.33. EATON VORAD VS-400, P. 31.....79
4.34. AWARE II, P. 32.....80
4.35. AWARE II, P. 33.....81
4.36. AWARE II, P. 34.....82
4.37. AWARE II, P. 35.....83
4.38. AWARE II, P. 36.....84
4.39. QUALCOMM OMNIVISION, P. 37.....85
4.40. QUALCOMM OMNIVISION, P. 38.....86
4.41. MOTIENT MOBILE MAX, P. 39.....87
4.42. REMOTE RADIO, P. 40.....88
4.43. REMOTE RADIO, P. 41.....89

5. CHARGING AND CRANKING SYSTEM (CHAPTER 5).....90
5.1. MANUAL TRANSMISSION, P. 1.....90
5.2. MANUAL TRANSMISSION (CAT ENGINE), P. 1A.....91

https://truckmanualshub.com/

5.3. AUTOMATIC TRANSMISSION, P. 2....92
5.4. AUTOMATIC TRANSMISSION (CAT ENGINE), P. 2A....93
5.5. FREEDOMLINE TRANSMISSION, P. 3....94
5.6. FREEDOMLINE TRANSMISSION (CAT ENGINE), P. 3A....95

6. ETHER START AND FAN WIRING (CHAPTER 6)....96
6.1. ETHER START CUMMINS ISX, P. 1....96
6.2. FAN WIRING, P. 2....97
6.3. FAN WIRING — IBB ENGINE, P. 3....98
6.4. STARTING AID — COLD START ASSIST (IBB ENGINE), P. 4....99

7. ENGINES (CHAPTER 7)....100
7.1. ELECTRONIC ENGINE CONTROLS, P. 1....100
7.2. ELECTRONIC ENGINE CONTROLS — CUMMINS ENGINE, P. 2....101
7.3. ELECTRONIC ENGINE CONTROLS — CAT ENGINE, P. 2A....102
7.4. ELECTRONIC ENGINE CONTROLS — CUMMINS ENGINES, P. 3....103
7.5. ELECTRONIC ENGINE CONTROLS WITH ICON, P. 4....104
7.6. ELECTRONIC ENGINE CONTROLS WITH ICON, P. 5....105
7.7. ELECTRONIC ENGINE CONTROLS WITH ICON, P. 6....106
7.8. REMOTE START/STOP, P. 7....107
7.9. REMOTE START/STOP, P. 8....108
7.10. REMOTE START/STOP, P. 8A....109
7.11. NO IDLE ENGINE HEAT, P. 9....110
7.12. TRI-PAC NO IDLE, P. 10....111
7.13. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 11....112
7.14. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 12....113
7.15. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 13....114
7.16. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 14....115
7.17. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 15....116
7.18. AFTERTREATMENT (IBB ENGINE), P. 16....117

8. GAUGES AND WARNING LIGHTS (CHAPTER 8)....118
8.1. AIR PRESSURE INPUT CIRCUIT AND AIR RESTRICTION GAUGE, P. 1....118
8.2. AXLE TEMPERATURE GAUGES, P. 2....119
8.3. ENGINE OIL PRESSURE AND TEMPERATURE, SPEEDOMETER, TACHOMETER, VOLTMETER AND WATER TEMP. GAUGES, P. 3....120
8.4. ENGINE OIL AND TRANSMISSION OIL TEMPERATURE GAUGES, P. 4....121
8.5. FUEL HEATER, P. 5....122
8.6. FUEL TRANSFER PUMP FOR DUAL TANK, P. 6....123
8.7. DIFFERENTIAL LOCK AND OPTIONAL INDICATOR, P. 7....124
8.8. DIFFERENTIAL LOCK AND OPTIONAL INDICATOR, P. 8....125
8.9. BLANK PAGE, P. 9....126
8.10. IP / GAUGES, P. 10....127
8.11. IP / GAUGES AND WARNING LIGHTS — GAUGE CLUSTER, P. 11....128
8.12. SECONDARY INSTRUMENT CLUSTER, P. 12....129
8.13. PARKING WARNING LIGHT, P. 13....130
8.14. WARNING LIGHTS, P. 14....131
8.15. IP TEXT MESSAGES AND WARNING LIGHTS — CONTROLLED BY ENGINE, TRANSMISSION AND ABS CONTROLLER, P. 15....132
8.16. DIFFERENTIAL LOCK AND OPTIONAL INDICATOR, P. 16....133

9. LIGHTING SYSTEM (CHAPTER 9)....134
9.1. LIGHTS — STOP, TAIL, TURN AND BACK-UP N/FREEDOMLINE, P. 1....134

https://truckmanualshub.com/

9.2. LIGHTS — STOP, TAIL, TURN AND BACK-UP W/FREEDOMLINE, P. 2.....135
9.3. DOME/MAP AND COURTESY LIGHTS — DAY CAB, P. 3.....136
9.4. DOME/MAP AND COURTESY LIGHTS — SLEEPER, P. 4.....137
9.5. FOG LIGHTS AND SPOT LIGHT, P. 5.....138
9.6. HEADLIGHTS, P. 6.....139
9.7. TRIPMASTER, P. 7.....140
9.8. TURN AND STOP SWITCH, P. 8.....141
9.9. LIGHT SYSTEM — PARK, MARKER, CLEARANCE, ID, TURN, STOP, TAIL, P. 9.....142
9.10. LIGHT SYSTEM — PARK, MARKER, FRONT TURN AND MODESTY PANEL LIGHT, P. 10.....143
9.11. LIGHT SYSTEM — CLEARANCE, ID, P. 11.....144
9.12. LIGHT SYSTEM — SKIRT LIGHT, P. 12.....145
9.13. TRAILER LIGHT SYSTEM — MARKER, STOP, TAIL, TURN, P. 13.....146
9.14. TRAILER SOCKET — BOC, P. 14.....147
9.15. TRAILER SOCKET — BOC AND EOF, P. 15.....148
9.16. TRAILER SOCKET — AUXILIARY, P. 16.....149
9.17. FLOOR LIGHT, P. 17.....150
9.18. DOME AND ACCENT LIGHT — SLEEPER, P. 18.....151
9.19. DOME AND ACCENT LIGHT — SLEEPER, P. 19.....152
9.20. LIGHTED AIR SHIELD, P. 20.....153
9.21. PANEL LIGHTS, P. 21.....154
9.22. WORK LIGHTS — DAY CAB, P. 22.....155
9.23. WORK LIGHTS — SLEEPER CAB, P. 23.....156
9.24. DOME AND ACCENT LIGHTS — SLEEPER, P. 24.....157

10. CHASSIS ACCESSORIES (CHAPTER 10).....158
10.1. TIRE PRESSURE MONITOR, P. 1.....158
10.2. AIR DRYER, P. 2.....159
10.3. AIR SOLENOID PACK — 4 WAY, P. 3.....160
10.4. AIR SOLENOID PACK — 4 WAY, P. 4.....161
10.5. AIR SUSPENSION W/LOAD INDICATOR, P. 5.....162
10.6. BATTERY FEED — TRAILER AUXILIARY, P. 6.....163
10.7. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 7.....164
10.8. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 7A.....165
10.9. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 8.....166
10.10. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 9.....167
10.11. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 10.....168
10.12. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 11.....169
10.13. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 12.....170
10.14. ANTILOCK BRAKE SYSTEM W/WABCO, P. 13.....171
10.15. ANTILOCK BRAKE SYSTEM W/WABCO, P. 14.....172
10.16. ANTILOCK BRAKE SYSTEM W/WABCO, P. 15.....173
10.17. ANTILOCK BRAKE SYSTEM W/WABCO, P. 16.....174
10.18. BLANK PAGE, P. 17.....175
10.19. POWER TAKE OFF, P. 18.....176
10.20. FUEL LEVEL, P. 19.....177
10.21. VEHICLE SENSOR MODULE, P. 20.....178
10.22. VEHICLE SENSOR MODULE, P. 21.....179
10.23. BRAKE SENSOR — WEAR/STROKE, P. 22.....180
10.24. BRAKE SENSOR — WEAR/STROKE, P. 23.....181

11. TRANSMISSION CONTROL MODULE (CHAPTER 11).....182
11.1. EATON AUTOSHIFT AND ULTRASHIFT TRANSMISSION, P. 1.....182

https://truckmanualshub.com/

11.2. COLUMN SHIFTER AND MERITOR G TRANSMISSION, P. 2....183
11.3. FREEDOMLINE TRANSMISSION, P. 3....184

12. HVAC (CHAPTER 12)....185
12.1. AIR CONDITIONING, P. 1....185
12.2. HVAC SYSTEM — CAB, P. 2....186
12.3. HVAC SYSTEM — CAB, P. 3....187
12.4. HVAC SYSTEM — SLEEPER, P. 4....188
12.5. HVAC SYSTEM — SLEEPER, P. 4A....189
12.6. HVAC SYSTEM — SLEEPER, P. 5....190
12.7. NO IDLE HEAT AND HVAC — SWITCHES, P. 6....191
12.8. NO IDLE HEAT AND HVAC — APU, P. 7....192
12.9. NO IDLE HEAT AND HVAC — SENSORS AND HVAC CONTROL, P. 8....193
12.10. NO IDLE HEAT AND HVAC — POWER SUPPLY, P. 9....194
12.11. NO IDLE HEAT AND HVAC — HEAT VALVE, LPM AND BLEND MOTOR, P. 10....195
12.12. NO IDLE HEAT AND HVAC — FUEL FIRED HEATER AND A/C COMPRESSOR, P. 11....196
12.13. NO IDLE HEATER, WEBASTO IN CAB FUEL FIRED HEATER W/LVD, P. 12....197
12.14. NO IDLE HEATER, ESPAR IN CAB FUEL FIRED HEATER, P. 13....198
12.15. HVAC SYSTEM — SLEEPER W/BERGSTROM NO IDLE, P. 14....199
12.16. NO IDLE HVAC W/BERGSTROM HVAC SWITCHES — LOCATED IN SLEEPER CONTROL PANEL, P. 15....200
12.17. NO IDLE HVAC W/BERGSTROM HVAC SWITCHES — LOCATED IN SLEEPER CONTROL PANEL, P. 16....201
12.18. NO IDLE HVAC W/BERGSTROM HVAC POWER SUPPLY, P. 17....202
12.19. NO IDLE HVAC W/BERGSTROM ENGINE PRE-HEAT VALVE, P. 18....203
12.20. NO IDLE HVAC W/BERGSTROM FUEL FIRED HEATER, P. 19....204
12.21. NO IDLE HEATER, WEBASTO IN CAB FUEL FIRED HEATER N/LVD, P. 21....205

13. BUNK LIGHTS AND ACCESSORIES (CHAPTER 13)....206
13.1. READING AND WARDROBE LIGHTS — BUNK, P. 1....206
13.2. LUGGAGE COMPARTMENT LIGHTS — BUNK, P. 2....207
13.3. POWER SOURCE — BUNK, P. 3....208
13.4. TV / REFRIGERATOR WIRING, P. 4....209
13.5. SPEAKER — BUNK, P. 5....210
13.6. FAN — BUNK, P. 6....211
13.7. SKY RISE LIGHTS — BUNK, P. 7....212
13.8. FLAT PANEL TV/DVD PLAYER — BUNK, P. 8....213

14. CONNECTOR COMPOSITES (CHAPTER 14)....214
14.1. CONNECTOR COMPOSITES (7A), (8A), (9A), (10A), P. 1....214
14.2. CONNECTOR COMPOSITES (10F), (11A), (12A), (13A), P. 1A....215
14.3. CONNECTOR COMPOSITES (14A), (344), (345), (512), (520), P. 1B....216
14.4. CONNECTOR COMPOSITES (521), (522), (523), (524), P. 2....217
14.5. CONNECTOR COMPOSITES (1002), (1003), P. 3....218
14.6. CONNECTOR COMPOSITES (1006), (1007), (1010), (1015), P. 4....219
14.7. CONNECTOR COMPOSITE (1010), P. 5....220
14.8. CONNECTOR COMPOSITE (1011), P. 6....221
14.9. CONNECTOR COMPOSITE (1012), P. 7....222
14.10. CONNECTOR COMPOSITE (1013), P. 8....223
14.11. CONNECTOR COMPOSITE (1014), P. 9....224
14.12. CONNECTOR COMPOSITE (1015), P. 10....225
14.13. CONNECTOR COMPOSITE (1016), P. 11....226
14.14. CONNECTOR COMPOSITE (1017), P. 12....227

https://truckmanualshub.com/

14.15. CONNECTOR COMPOSITE (1018), P. 13.....228
14.16. CONNECTOR COMPOSITE (1019), P. 14.....229
14.17. CONNECTOR COMPOSITE (1020), P. 15.....230
14.18. CONNECTOR COMPOSITES (1023), (1024), (1025), P. 16.....231
14.19. CONNECTOR COMPOSITES (1026), (1100M), (1101M), (1110M), P. 17.....232
14.20. CONNECTOR COMPOSITES (1111M), (1112M), (1113M), P. 18.....233
14.21. CONNECTOR COMPOSITES (1114M), (1115M), (1116M), (1117M), P. 19.....234
14.22. CONNECTOR COMPOSITES (1200), (1210), (1215), (1300), P. 20.....235
14.23. CONNECTOR COMPOSITES (1301), (1305), (1378), P. 21.....236
14.24. CONNECTOR COMPOSITES (1400), (1401), (1402), P. 22.....237
14.25. CONNECTOR COMPOSITES (1403), (1410), (1420), P. 23.....238
14.26. CONNECTOR COMPOSITES (1421), (1422), (1500), (1501), P. 24.....239
14.27. CONNECTOR COMPOSITES (1502), (1510), P. 25.....240
14.28. CONNECTOR COMPOSITES (1511), (1550), (1556), P. 26.....241
14.29. CONNECTOR COMPOSITES (1557), (1600), P. 27.....242
14.30. CONNECTOR COMPOSITE (1601), P. 28.....243
14.31. CONNECTOR COMPOSITE (1602), P. 29.....244
14.32. CONNECTOR COMPOSITES (1603), (1604), P. 30.....245
14.33. CONNECTOR COMPOSITES (1620), (1650), (1657), (1657M), P. 31.....246
14.34. CONNECTOR COMPOSITES (1660), (1661), P. 32.....247
14.35. CONNECTOR COMPOSITE (1700), P. 33.....248
14.36. CONNECTOR COMPOSITE (1700F), P. 34.....249
14.37. CONNECTOR COMPOSITE (1701), P. 35.....250
14.38. CONNECTOR COMPOSITE (1701F), P. 36.....251
14.39. CONNECTOR COMPOSITE (1702), P. 37.....252
14.40. CONNECTOR COMPOSITE (1702), P. 38.....253
14.41. CONNECTOR COMPOSITE (1702), P. 38A.....254
14.42. CONNECTOR COMPOSITE (1800), P. 39.....255
14.43. CONNECTOR COMPOSITE (1800F), P. 40.....256
14.44. CONNECTOR COMPOSITES (1801), (1802), (1803), P. 41.....257
14.45. CONNECTOR COMPOSITES (1804), (1805), (1806), P. 42.....258
14.46. CONNECTOR COMPOSITES (1808), (1809), (1810), P. 43.....259
14.47. CONNECTOR COMPOSITES (1811), (1812), (1820F/1820M), P. 44.....260
14.48. CONNECTOR COMPOSITES (1821), (1822), (1823), (1860), P. 45.....261
14.49. CONNECTOR COMPOSITES (1861), (1901), (1903), P. 46.....262
14.50. CONNECTOR COMPOSITES (1906), (1907), (1909M), (1910), (1912), (1916), P. 47.....263
14.51. CONNECTOR COMPOSITES (1917), (1918/1918A), (1919/1919A), (1920), (1922), (1922M), P. 48.....264
14.52. CONNECTOR COMPOSITES (1923), (1925), P. 49.....265
14.53. CONNECTOR COMPOSITES (1927), (1929), (1930), (1931), P. 50.....266
14.54. CONNECTOR COMPOSITES (1932), (1933), (1942/1942F), (1943), (1943M), P. 50A.....267
14.55. CONNECTOR COMPOSITES (1953), (1960), P. 51.....268
14.56. CONNECTOR COMPOSITES (1960), P. 52.....269
14.57. CONNECTOR COMPOSITES (1962), P. 53.....270
14.58. CONNECTOR COMPOSITES (1962), P. 54.....271
14.59. CONNECTOR COMPOSITES (1963), (1964), P. 55.....272
14.60. CONNECTOR COMPOSITES (1970), (1973), P. 56.....273
14.61. CONNECTOR COMPOSITES (1974), (1975), P. 56A.....274
14.62. CONNECTOR COMPOSITES (2000), P. 56B.....275
14.63. CONNECTOR COMPOSITES (2002M), (2003M), (2004M), (2005M), (2006M), (2007F), P. 57.....276
14.64. CONNECTOR COMPOSITES (2100), (2101), (2102), (2103), P. 58.....277
14.65. CONNECTOR COMPOSITES (2200), (2201), (2300), P. 59.....278

https://truckmanualshub.com/

14.66. CONNECTOR COMPOSITES (2301), (2302), (2303F/2303M), (2304), (2312), P. 60.....279
14.67. CONNECTOR COMPOSITES (2313), (2500), P. 61.....280
14.68. CONNECTOR COMPOSITES (3000), (3003/3003M), (3100/3100M), P. 62.....281
14.69. CONNECTOR COMPOSITES (3200/3200F), (3201M), (3202M), (3203), (3203M), P. 63....282
14.70. CONNECTOR COMPOSITES (3204/3204M), (3205M/3205F), (3206M), (3300/3300M), (3400), (3410), P. 64.....283
14.71. CONNECTOR COMPOSITES (4101), (4200), (4201), (4202), (4203), (4204), P. 65.....284
14.72. CONNECTOR COMPOSITES (4328), (4500), (4705), (4706), P. 65A.....285
14.73. CONNECTOR COMPOSITES (5000/5000A), P. 66.....286
14.74. CONNECTOR COMPOSITES (5000), P. 67.....287
14.75. CONNECTOR COMPOSITES (5001), P. 68.....288
14.76. CONNECTOR COMPOSITES (5001), P. 68A.....289
14.77. CONNECTOR COMPOSITES (5003), (5005), (5006), (5007), P. 69.....290
14.78. CONNECTOR COMPOSITES (5009), (5010), (5011M/5011F), P. 69A.....291
14.79. CONNECTOR COMPOSITES (5012), (5013), (5014), (5015), (5020), (5031), P. 70.....292
14.80. CONNECTOR COMPOSITES (5033), (5034), (5035/5035A), (5100), (5101), P. 70A.....293
14.81. CONNECTOR COMPOSITES (5102), (5103), (5104), (5105), P. 71.....294
14.82. CONNECTOR COMPOSITES (5106), (5107), (5109), (5110), (5111), P. 72.....295
14.83. CONNECTOR COMPOSITES (5117), (5118), (5119), P. 73.....296
14.84. CONNECTOR COMPOSITES (5123), (5124), (5125), P. 74.....297
14.85. CONNECTOR COMPOSITES (5126), (5127), (5128), (5129), (5130), P. 75.....298
14.86. CONNECTOR COMPOSITES (5130), (5134), P. 75A.....299
14.87. CONNECTOR COMPOSITES (5131), (5134), (5135), (5135M), (5136), (5200), (5201), P. 76.....300
14.88. CONNECTOR COMPOSITES (5202), (5210), (5212), (5213), P. 77.....301
14.89. CONNECTOR COMPOSITES (5214), (5215), (5216), (5217), (5218), (5219), P. 78.....302
14.90. CONNECTOR COMPOSITES (5220), (5222), (5230), P. 78A.....303
14.91. CONNECTOR COMPOSITES (5232), (5233), (5234), P. 79.....304
14.92. CONNECTOR COMPOSITES (5300), (5301), (5302), (5303), P. 79A.....305
14.93. CONNECTOR COMPOSITES (5312), (5313), (5314), (5500), (5502), (5600), P. 80.....306
14.94. CONNECTOR COMPOSITES (5601M), (5602F), (5602M), (5603M), (5700), P. 80A.....307
14.95. CONNECTOR COMPOSITES (5701), (5702), (5752), (5753), (5754), P. 81.....308
14.96. CONNECTOR COMPOSITES (5757), (5758), (5803), (5900), (5902), (5903), P. 82.....309
14.97. CONNECTOR COMPOSITES (5904/5904M), (5905/5905F), P. 83.....310
14.98. CONNECTOR COMPOSITES (5906), (5907), P. 83A.....311
14.99. CONNECTOR COMPOSITES (5909), (5925/5926), (5927), (5930M), (5940), P. 83B.....312
14.100. CONNECTOR COMPOSITE (6000), P. 84.....313
14.101. CONNECTOR COMPOSITE (6010), P. 84A.....314
14.102. CONNECTOR COMPOSITES (6001), (6018), (6019), P. 85.....315
14.103. CONNECTOR COMPOSITES (6020), (6021), (6033), P. 85A.....316
14.104. CONNECTOR COMPOSITES (6200), (6201), (6202), (6260VH), (6260VL), (6260VM), (6304), (6316M), P. 85B.....317
14.105. CONNECTOR COMPOSITES (6400), (6401), (6402), (6403), (6406/6402), P. 86.....318
14.106. CONNECTOR COMPOSITES (6420), (6550), (6551), (6561), (6650), (6700), (6701), P. 86A.....319
14.107. CONNECTOR COMPOSITES (6702), (6703), (6703/6703A), (6704), (6704A), P. 87.....320
14.108. CONNECTOR COMPOSITES (6705), (6706), (6707), P. 88.....321
14.109. CONNECTOR COMPOSITES (6708), (6709), (6712), (6713), (6714), P. 88A.....322
14.110. CONNECTOR COMPOSITES (6715), (6720/6721), (6730), (6731), P. 88B.....323
14.111. CONNECTOR COMPOSITES (6732), (7103), (7104), P. 89.....324
14.112. CONNECTOR COMPOSITES (7105), (7107/7110), (7111), (7500/7500A), P. 90.....325
14.113. CONNECTOR COMPOSITES (7500W), (7600), (7600/7600A), (7700/7700L/7700K), (7802), (7905), P. 91.....326

https://truckmanualshub.com/

14.114. CONNECTOR COMPOSITES (8000), (8001), (8001/8001F), P. 92.....327
14.115. CONNECTOR COMPOSITES (8002), (8003), (8006R), (8006T), (8050), (8051), P. 93.....328
14.116. CONNECTOR COMPOSITES (8052), (8053), (8100), (8100A), (8100B), P. 93A.....329
14.117. CONNECTOR COMPOSITES (8101), (8101A), (8101B), (8102), (8103), (8104), P. 94.....330
14.118. CONNECTOR COMPOSITES (8165), (8166), (8166T), (8200), (8201), (8203), P. 95.....331
14.119. CONNECTOR COMPOSITES (8303), (8310), (8311), (8312), P. 96.....332
14.120. CONNECTOR COMPOSITES (8350), (8351), (8352), (8410), (8450), P. 97.....333
14.121. CONNECTOR COMPOSITES (8450A), (8450B), (8451), (8453), (8454), (8455), (8456), (8500), P. 98.....334
14.122. CONNECTOR COMPOSITES (8501), (8502), (8503), (8504), P. 99.....335
14.123. CONNECTOR COMPOSITES (8505), (8506), (8507), (8550), P. 100.....336
14.124. CONNECTOR COMPOSITES (8601), (8750), (8800), (8802), P. 101.....337
14.125. CONNECTOR COMPOSITES (8803), (8804), (8805), (8806), P. 102.....338
14.126. CONNECTOR COMPOSITES (8900), (8901), (8950), (8951), P. 103.....339
14.127. CONNECTOR COMPOSITES (8952), (8953/8954M/8953F), P. 104.....340
14.128. CONNECTOR COMPOSITES (8954), (8954M), (8960), (8961), (8962), P. 105.....341
14.129. CONNECTOR COMPOSITES (8963), (8964), (8965), (8966), (8967), P. 106.....342
14.130. CONNECTOR COMPOSITES (8970), (8971), (8972), (8973), P. 107.....343
14.131. CONNECTOR COMPOSITES (8974), (8975), (8976), (8977), P. 108.....344
14.132. CONNECTOR COMPOSITES (8980), (8981), (8982), (8983), (8984), P. 109.....345
14.133. CONNECTOR COMPOSITES (8990), (9100/9100A/9100B/9100C), (9102/9102A), P. 110.....346
14.134. CONNECTOR COMPOSITES (9103), (9303), (9303A), (9304), (9304A), P. 111.....347
14.135. CONNECTOR COMPOSITES (9501), (9501D), (9502/9502A), (9502B), (9503/9503D), (9504/9504A/9504B), P. 112.....348
14.136. CONNECTOR COMPOSITES (9505/9505A), (9506/9506D/9506E), (9507/9507A/9507B), (9508/9508B/9508D/9508E), (9509/9509A/9509B), P. 113.....349
14.137. CONNECTOR COMPOSITES (9510/9510A/9510F), (9510F/9510M), (9511), (9511/9511A), (9512), P. 114.....350
14.138. CONNECTOR COMPOSITES (9512), (9513), (9514), (9515/9515A/9515B), P. 115.....351
14.139. CONNECTOR COMPOSITES (9516M), (9635), (9715F/9715M), P. 116.....352
14.140. CONNECTOR COMPOSITES (9716M/9716F), (9718), (9736), (9737), P. 117.....353
14.141. CONNECTOR COMPOSITES (9738), (9768), (9769), P. 118.....354
14.142. CONNECTOR COMPOSITES (9770), (9779/9779F/9779FA), (9779F1), (9780/9780M), (9780M1), P. 119.....355
14.143. CONNECTOR COMPOSITES (9781F), (9782M), (9783F), (9783M), (9784M), P. 120.....356
14.144. CONNECTOR COMPOSITES (9789/9789F/9789FA), (9790/9790M/9790MA), P. 121.....357
14.145. CONNECTOR COMPOSITES (9800/9800F/9800M), P. 122.....358
14.146. CONNECTOR COMPOSITES (9801/9801F/9801M), P. 123.....359
14.147. CONNECTOR COMPOSITES (9811), (9812), (9813), P. 124.....360
14.148. CONNECTOR COMPOSITES (9814), (9815), (9816), P. 125.....361
14.149. CONNECTOR COMPOSITES (9830/9832), (9865/9865F/9865M), P. 126.....362
14.150. CONNECTOR COMPOSITES (9900), (9901), (9902), P. 127.....363

https://truckmanualshub.com/

1. TABLE OF CONTENTS (CHAPTER 1)

2. INSTRUCTIONS AND CHARTS (CHAPTER 2)

2.1. ABBREVIATIONS, P. 1

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM — CHAPTER 2

ABBREVIATIONS

ABBREVIATION	DESCRIPTION	ABBREVIATION	DESCRIPTION	ABBREVIATION	DESCRIPTION
ACCESS	ACCESSORY	CUR	CURRENT	PRESS	PRESSURE
AC	AIR CONDITIONING	DPNL	DASHPANEL	RAD	RADIO
AIR CLNR	AIR CLEANER	DFTR	DEFLECTOR	RR	REAR
ALT	ALTERNATOR	DFR	DEFROSTER	RLY	RELAY
AC	ALTERNATING CURRENT	DEG	DEGREE	RES	RESISTOR
AFTR	AFTERTREATMENT	DIAG	DIAGRAM	R	RIGHT
AMM	AMMETER	DSL	DIESEL	RTR	ROTOR
AMP	AMPERE	DIFF	DIFFERENTIAL	SNSR	SENSOR
AMP HR	AMPERE HOUR	DIMR	DIMMER	SHLD	SHIELD
AMPL	AMPLIFIER	ELEC	ELECTRICAL	SHFT	SHIFTER
ARM	ARMATURE	ELEX	ELECTRONICS	SLPR	SLEEPER
ARSR	ARRESTER	ENG	ENGINE	SLV	SLEEVE
ASSY	ASSEMBLY	EXH	EXHAUST	SPKR	SPEAKER
AUX	AUXILIARY	FL	FLUID	SPR	SPRING
B/U	BACK-UP	FWD	FORWARD	STD	STANDARD
BTRY	BATTERY	FR	FRONT	STRG	STEERING
BM	BENCHMARKING	FREQ	FREQUENCY	STLITE	SATELLITE
BLK	BLOCK	GA	GAUGE	SUNSH	SUNSHADE
BOOS	BOOSTER	GEN	GENERATOR	SW	SWITCH
BOT	BOTTOM	GND	GROUND	SYS	SYSTEM
BK	BRAKE	HARN	HARNESS	TACH	TACHOMETER
BRKR	BREAKER	HDLP	HEADLAMP	TEMP	TEMPERATURE
BRTHR	BREATHER	HTD	HEATED	TERM	TERMINAL
BRI	BRIGHT	HT TR	HEAT TREAT	THROT	THROTTLE
BUZ	BUZZER	HTR	HEATER	THRU	THROUGH
CA	CABLE	HP	HORSEPOWER	TRLR	TRAILER
CD	CANDELA	HYD	HYDRAULIC	XDCR	TRANSDUCER
CP	CANDLEPOWER	ID	IDENTIFICATION	XFER	TRANSFER
CAP	CAPACITOR	IGN	IGNITION	XFMR	TRANSFORMER
CAT	CATERPILLAR	ILLUM	ILLUMINATION	XSTR	TRANSISTOR
CHAS	CHASSIS	IND	INDICATOR	XMSN	TRANSMISSION
CH	CHOKE	INST	INSTRUMENT	XMTR	TRANSMITTER
CIRC	CIRCUIT	INT	INTERMITTENT	TRK	TRUCK
CLK	CLOCK	L	LEFT	UPR	UPPER
CW	CLOCKWISE	LT	LIGHT	VLV	VALVE
CLSTR	CLUSTER	LTR	LIGHTER	VERT	VERTICAL
CL	CLUTCH	LWR	LOWER	VM	VOLTMETER
COL	COLUMN	MAG	MAGNET	VOL	VOLUME
COMM	COMMUTATOR	MOD	MODULATOR	WSHR	WASHER
CMPNT	COMPONENT	MDL	MODULE	WHL	WHEEL
CPRSR	COMPRESSOR	MOT	MOTOR	WDO	WINDOW
CONN	CONNECT	MTD	MOUNTED	WSHLD	WINDSHIELD
CONT	CONTINUED	NEG	NEGATIVE	WPR	WIPER
CSL	CONSOLE	N/	NOT WITH	W/	WITH
CONT	CONTACT	NO.	NUMBER	W/O	WITHOUT
CONT	CONTROL	PASS	PASSENGER		
CONV	CONVERTER	POSN	POSITION		
CLR	COOLER	POS	POSITIVE		
CTSY	COURTESY	POT	POTENTIOMETER		
CRUS	CRUISE	PWR	POWER		

CHK	DATE	CHANGE	REV.	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L / DATE 31AUG06	PART NO. AE08055894 / SHEET 001

Figure 1 Abbreviations

https://truckmanualshub.com/

2.2. ACRONYMS, P. 2

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM

CHAPTER 2

ACRONYMS

DESCRIPTION	ACRONYM
ANTILOCK BRAKING SYSTEM	ABS
ANTENNA COMMUNICATION UNIT	ACU
ALTERNATING CURRENT	AC
AXLE TO BACK OF CAB	AC
AXLE TO FRAME	AF
ACCELERATOR PEDAL MODULE	APM
ACCELERATOR POSITION SENSOR	APS
AUXILIARY POWER UNIT	APU
AUTOMATIC TRACTION CONTROL	ATC
AUDIO VIDEO INTERFACE	AVI
BRAKE HORSEPOWER	BHP
BACK OF CAB	BOC
CITIZEN BAND	CB
COLD CRANKING AMPERES	CCA
CLEAN POWER ELECTRICAL CONNECTOR	CEC
CAB OVER ENGINE	COE
DIRECT CURRENT	DC
DRIVER CONTROL MODULE	DCM
DIGITAL DATA LINK	DDL
DIESEL OXIDATION CATALYST INLET TEMPERATURE	DOCT
DIESEL PARTICULATE FILTER	DPF
DIESEL TURBOCHARGED	DT
DAY TIME RUNNING LIGHTS	DTRL
ELECTRONIC CONTROL MODULE	ECM
ELECTRONIC CONTROL UNIT	ECU
EXHAUST GAS RECIRCULATION	EGR
EXHAUST GAS TEMPERATURE	EGT
ELECTRO MAGNETIC INTERFACE	EMI
END OF FRAME	EOF
ELECTRIC TRAILER BRAKE	ETB
FRONT AXLE	FA
FRONT END	FE
FRONT OF DASH	FOD
FULL POWER BRAKE	FPB
GLOBAL POSITIONING SYSTEM	GPS
HYDRAULIC CONTROL UNIT	HCU
HEAVY DUTY	HD
HEAVY DUTY DIESEL	HDD
HIGH PERFORMANCE TRUCK	HPT
HEATING, VENTILATION, AND AIR CONDITIONING	HVAC

DESCRIPTION	ACRONYM
INJECTOR DRIVE MODULE	IDM
INPUT/OUTPUT	I / O
INTEGRATED MOBILE COMMUNICATIONS TERMINAL	IMCT
INSTRUMENT PANEL	I/P
INDEPENDENT POWER TAKE-OFF	IPTO
LIGHT COMMERCIAL TRANSMISSION	LCT
MEDIUM DUTY	MD
MALFUNCTION INDICATION LAMP	MIL
MULTIPLEX SWITCH MODULE	MSM
PYROMETER AMMETER MODULE	PAM
PROGRAMMABLE LOGIC CONTROLLER	PLC
POWER TAKE-OFF	PTO
PULSE WIDTH MODULATION	PWM
REAR AXLE	RA
RADIO FREQUENCY	RF
ROLL STABILITY PROGRAMM	RSP
SEVERE SERVICE	SS
TRANSMISSION CONTROL MODULE	TCM
TERRESTRIAL COMMUNICATION UNIT	TCU
TERRESTRIAL MOBILE COMMUNICATIONS TERMINAL	TMCT
THERMAL OVERCRANK PROTECTION	TOCP
THROTTLE POSITION SENSOR	TPS
ZERO VOLT REFERENCE	ZVR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 59637L	DATE 31AUG06

PART NO. AE08055894 SHEET 002

Figure 2 Acronyms

https://truckmanualshub.com/

2.3. CIRCUIT DIAGRAM INSTRUCTIONS, P. 3

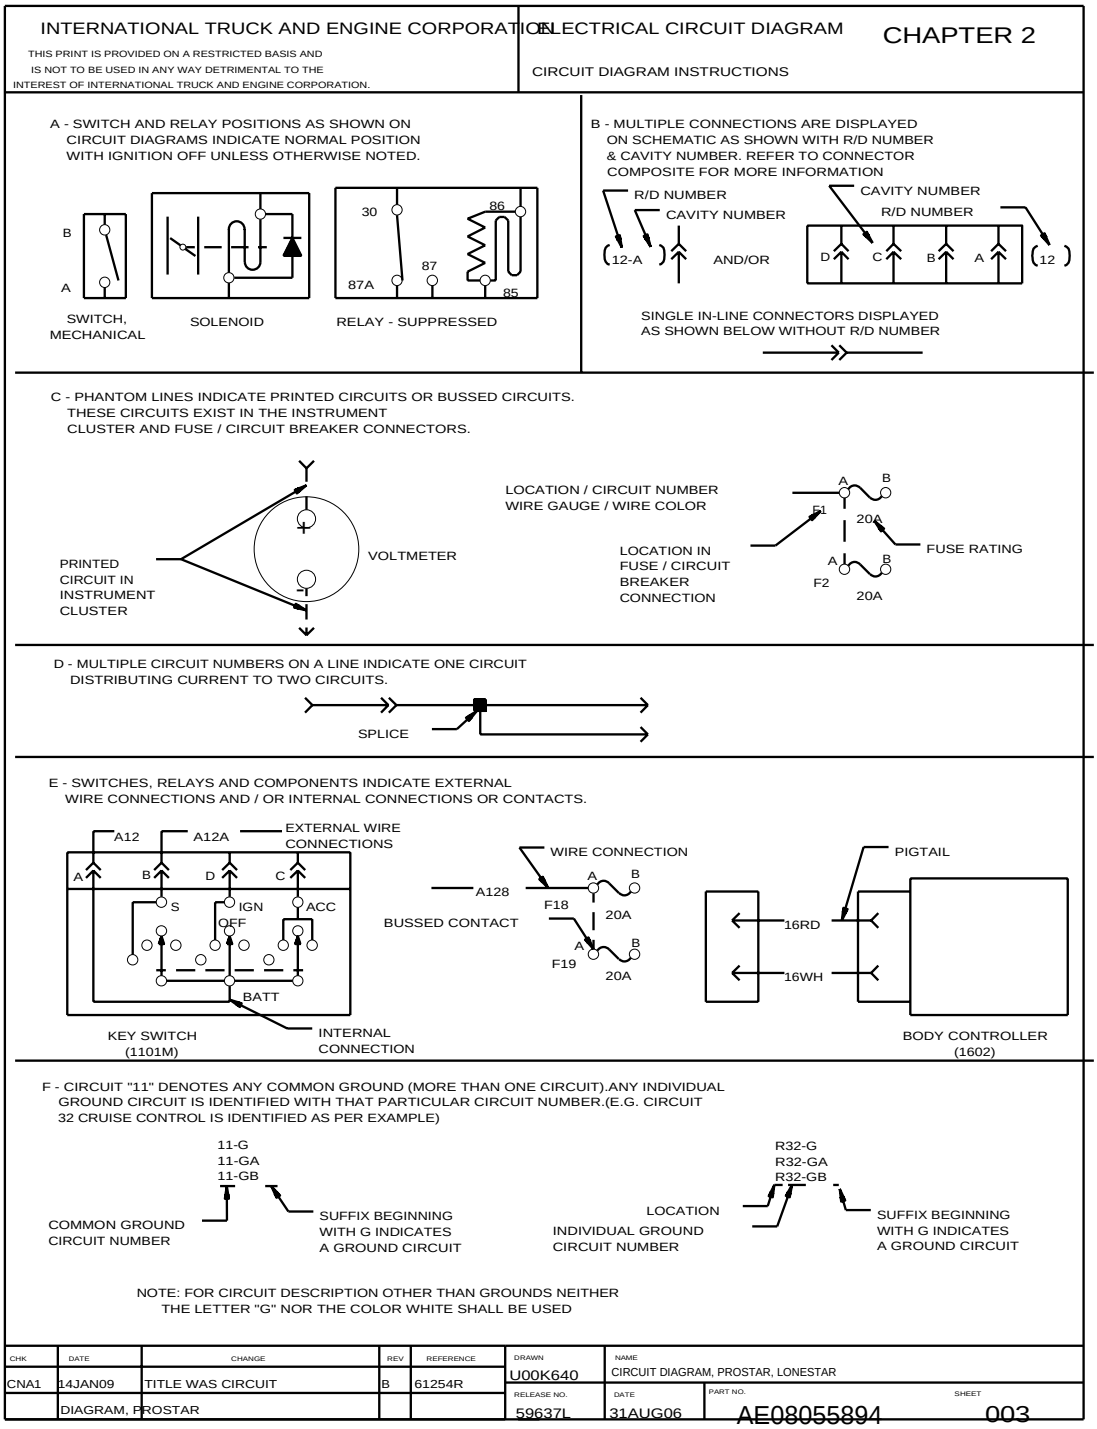


Figure 3 Circuit Diagram Instructions

https://truckmanualshub.com/

2.4. CIRCUIT NUMBER IDENTIFICATION AND COLOR, P. 4

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 2

CIRCUIT NUMBER IDENTIFICATION AND COLOR

CIRCUIT NUMBER	COLOR	DESCRIPTION
1	LTBL	ALTERNATOR - FIELD
2	RD	ALTERNATOR - CHARGE
3	DKBL	SERIAL / DATA COMMUNICATION J1587 / J1708 (+)
	GY	SERIAL / DATA COMMUNICATION J1587 / J1708 (-)
4	DKBL	SERIAL / DATA COMMUNICATION J1922 (+)
	GY	SERIAL / DATA COMMUNICATION J1922 (-)
5	YL	SERIAL / DATA COMMUNICATION J1939/11 / J1939/15 (+)
	GN	SERIAL / DATA COMMUNICATION J1939/11 / J1939/15 (-)
6	GY	LOW VOLTAGE ELECTRONIC FEED (LESS THAN 9 VOLTS)
7	RD	ALTERNATOR - RESISTANCE
8		
9	GY	LOW VOLTAGE ELECTRONIC GROUND
10	WH	CHASSIS / ENGINE GROUND
11	WH	CAB / SLEEPER GROUND
12	LTBL	ACCESSORY FEED
13	PK	IGNITION FEED
	BK	IGNITION FEED (BODY BUILDER CONNECTOR)
14	RD	BATTERY FEED
15	RD	KEY SWITCH FEED
16		
17	PK	STARTER CONTROL
18	PK	GLOW PLUG / PREHEATER
19	GY	ENGINE SHUTDOWN
20	LTGN	REMOTE POWER MODULE
21	TN	COLD START CONTROLS (ETHER)
22	TN	TIRE PRESSURE MONITORING / CONTROL
23	TN	ENGINE FAN / SHUTTERS
24	GY	ENGINE EXHAUST BRAKE
25	TN	PYROMETER
26	TN	AMMETER
27	TN	VOLTMETER
28	TN	INSTRUMENTS AND GAUGES
29	TN	ENGINE WATER TEMPERATURE
30	TN	ENGINE OIL TEMPERATURE
31	TN	TRANSMISSION OIL TEMPERATURE
32	TN	AXLE OIL TEMPERATURE
33	TN	ENGINE OIL LEVEL
34	TN	COOLANT LEVEL
35	TN	ENGINE OIL PRESSURE
36	TN	FUEL LEVEL
37	TN	FUEL PUMP
38	GY	LIFT AXLE
39	GY	AIR DRYER HEATER
40	GY	LOW AIR PRESSURE WARNING

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	20JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 31AUG06

PART NO. AE08055894 SHEET 004

Figure 4 Circuit Number Identification and Color

https://truckmanualshub.com/

2.5. CIRCUIT NUMBER IDENTIFICATION AND COLOR (CONT.), P. 5

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM — CHAPTER 2

CIRCUIT NUMBER IDENTIFICATION AND COLOR (CONT)

CIRCUIT NUMBER	COLOR	DESCRIPTION
41	TN	AIR TEMPERATURE
42	GY	FRONT AXLE ENGAGED
43	GY	POWER DIVIDER LOCK (PDL) WARNING
44	GY	PARK BRAKE WARNING
45	LTGN	ANTITHEFT WARNING
46	GY	POWER TAKEOFF WARNING
47	GY	SPEEDOMETER
48	GY	TACHOMETER
49	GY	DIFFERENTIAL LOCK WARNING
50	YL	LIGHT SWITCH FEED
51	YL	DIMMER SWITCH FEED
52	YL	HEADLIGHT HI - BEAM
53	YL	HEADLIGHT LO - BEAM
54	BN	PARKING / MARKER LIGHTS
55	OR	TURN SIGNAL - FEED
56	OR	TURN SIGNAL LIGHTS - LEFT
	YL	TURN SIGNAL LIGHTS - LEFT (BODY BUILDER CONNECTION)
57	OR	TURN SIGNAL LIGHTS - RIGHT
	LTGN	TURN SIGNAL LIGHTS - RIGHT (BODY BUILDER CONNECTION)
58	BN	CLEARANCE / IDENTIFICATION LIGHTS
59	GY	SOLENOID
60	OR	HAZARD LIGHTS
61	GY	AIR SUSPENSION
62	DKBL	PANEL LIGHTS
63	DKBL	COURTESY / DOME LIGHTS
64	YL	FOG / DRIVING LIGHTS
65	OR	CAB REAR FLOOD LIGHTS
66	YL	DAYTIME RUNNING LIGHT
67	GY	OBSTACLE AVOIDANCE / REMOTE SENSOR
68	BN	TAIL LIGHTS
69	BN	LICENSE PLATE LIGHT
70	OR	STOP LIGHTS
	RD	STOP LIGHTS (BODY BUILDER CONNECTION)
71	OR	BACKUP - LIGHTS
	LTBL	BACKUP - LIGHTS (BODY BUILDER CONNECTION)
72	OR	TRAILER AUXILIARY FEED - BATTERY
73	LTGN	PWM
74	LTGN	HEATER RECIRC MOTOR
75	LTGN	HEATER BLOWER MOTOR
76	LTGN	AUXILIARY FAN
77	LTGN	AIR CONDITIONER
78	LTGN	MIRRORS - HEATED, MOTORIZED
79	GY	SEAT BELTS
80	BK	SLEEPER BOX RELAY - FEED

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 31AUG06

PART NO. AE08055894 SHEET 005

Figure 5 Circuit Number Identification and Color (Cont.)

https://truckmanualshub.com/

2.6. CIRCUIT NUMBER IDENTIFICATION AND COLOR (CONT.), P. 6

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 2

CIRCUIT NUMBER IDENTIFICATION AND COLOR (CONT)

CIRCUIT NUMBER	COLOR	DESCRIPTION
81	LTGN	POWER DOOR LOCKS
82	GY	WINDSHIELD WIPER
83	LTGN	POWER WINDOWS
84	LTGN	CIGAR LIGHTER
85	GY	HORN
86	LTGN	RADIO - ENTERTAINMENT / CLOCK
87	GY	WINDSHIELD WASHER
88	LTGN	CLOCK / HOURMETER
89	VT	AIR BAG
90	GY	HYDRAULIC BRAKE PUMP
91	VT	INTERCOMMUNICATION
92	TN	TRANSMISSION CONTROLS - ELECTRONICS
93	TN	AXLE SHIFT CONTROL
94	GY	ANTILOCK BRAKE SYSTEM
95	TN	EXHAUST EMISSION
96	YL	SNOW PLOW LIGHTS / CRUISE CONTROLS
97	VT	ENGINE CONTROLS - ELECTRONIC
98	BK	DATALINK AND DIAGNOSTICS
99	VT	ACCELERATOR POSITION SENSOR (APS)
100	GY	AIR HORN (ELECTRIC SOLENOID ACTUATED)
101	TN	BRAKE APPLICATION AIR
102	YL	FLASH TO PASS
103	LTGN	BODY BUILDER AUXILIARY FEED
104	DKBL	REMOTE START / STOP
105	LTGN	HEATED SEATS
106	OR	HIGH VOLTAGE ALTERNATOR AC CHARGE
107	GY	INTRUMENT CLUSTER ELECTRONIC FEED (5V)
108	GY	BRAKE PAD WEAR SENSOR
109	GY	BRAKE STROKE / SLACK ADJUSTER
110	GY	INTRUMENT CLUSTER ELECTRONIC GROUND
111	TN	FUEL FILTER RESTRICTION TRANSDUCER
112	GY	LIFT GATE

PREFIX	LOCATION
A	CAB - INSTRUMENT PANEL MODULE
B	CAB - DRIVER CONTROL MODULE
C	CAB - HEADER / CLEARANCE LIGHTS
D	CAB - ROOF / REAR PANEL
E	CAB - LEFT DOOR / DOORS
F	CAB - RIGHT DOOR / DOORS
H	CAB - SLEEPER
J	CAB - DASH (OUTSIDE)
K	ENGINE / RADIATOR
L	TRANSMISSION
M	CHASSIS / FRONT END (CAB DASH PANEL FORWARD)
N	CHASSIS / CENTER SECTION (CAB DASH PANEL TO CAB REAR XMBR)
P	CHASSIS / WHEEL BASE SECTION
R	CHASSIS / SUSPENSION / REAR AXLE / AXLES
S	CHASSIS / AF SECTION / STOP / TAIL / TURN LIGHTS
T	TRAVEL DOORS
U	HOOD MTD HEADLIGHTS / MARKER LIGHTS
V	SLEEPER ROOF / BACK PANEL WIRING
W	WARDROBE CABINET WIRING

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 59637L	DATE 31AUG06

PART NO. AE08055894 SHEET 006

Figure 6 Circuit Number Identification and Color (Cont.)

https://truckmanualshub.com/

2.7. LAMP BULB CHART, P. 7

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM

LAMP BULB CHART

CHAPTER 2

BULB APPLICATION	CANDLE POWER OR WATT	BULB TRADE NUMBER
BACK-UP LIGHT (SUPER 40)	32 CP	TL40204
CLEARANCE & IDENTIFICATION	3 CP	N/A
COURTESY LIGHT	2 CP	193
CAB DOME LIGHT	12 WATT	211-2
SLEEPER DOME LIGHT (FLUORESCENT)	15 WATT	F15T8CW
FOG LIGHT	100 WATT	4921-1
MAP LIGHT	3 CP	211-2
SIDE MARKER / TURN LIGHT	27 WATT	3156
STOP, TURN AND TAIL LIGHT (SUPER 40)	32/2 CP	TL40248R
HEADLIGHTS, HIGH BEAM	65 WATT	9005
HEADLIGHTS, LOW BEAM	55 WATT	9006
FRONT MARKER / TURN LIGHT	27 / 8 WATT	3357AK
SIDE MARKER (FRONT)	4 WATT	194
LICENSE PLATE LIGHT (SUPER 40)	2 CP	TL1508
BOC WORK LIGHT (DAY CAB)	35 WATT	4411
WORK LIGHTS (IN SLEEPER BACK PANEL)	15 CP	1003
LUGGAGE COMPARTMENT LIGHT	12 WATT	211-2
READING LIGHT	15 CP	912
ACCENT LIGHT	12 WATT	211-2
SLEEPER FLOOR LIGHT	2 CP	193
CABINET / WARDROBE LIGHT	5 WATT	7575

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 31AUG06

PART NO. AE08055894 SHEET 007

Figure 7 Lamp Bulb Chart

https://truckmanualshub.com/

2.8. RELAY FUNCTION AND WIRING GUIDE, P. 8

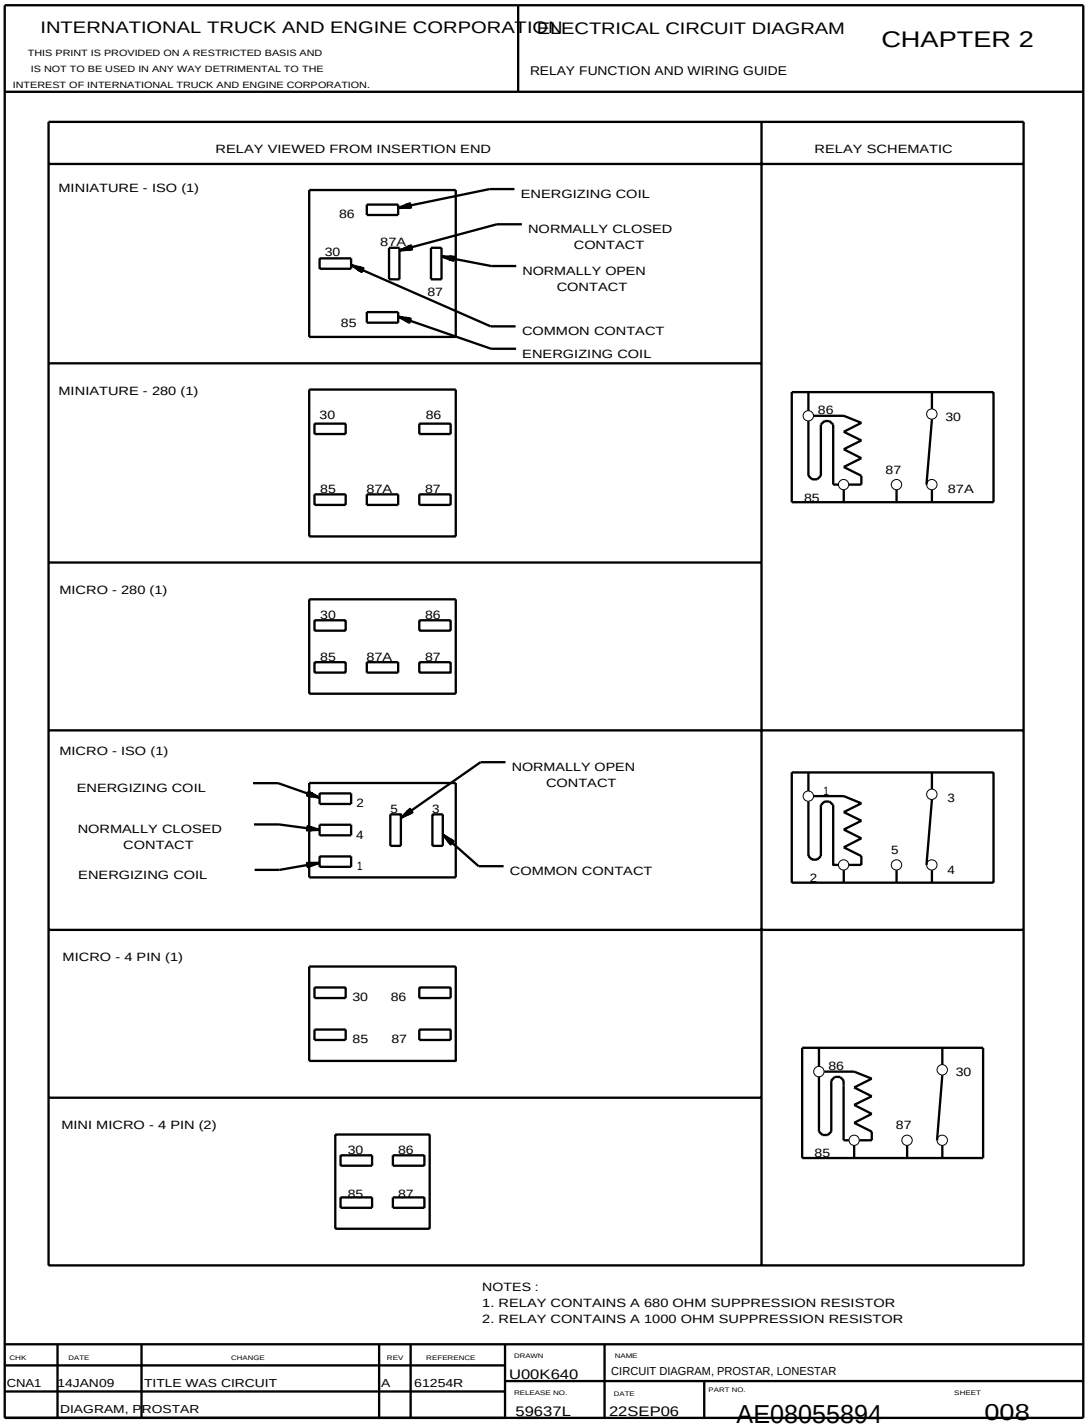


Figure 8 Relay Function and Wiring Guide

https://truckmanualshub.com/

2.9. SCHEMATIC SYMBOL CHART, P. 9

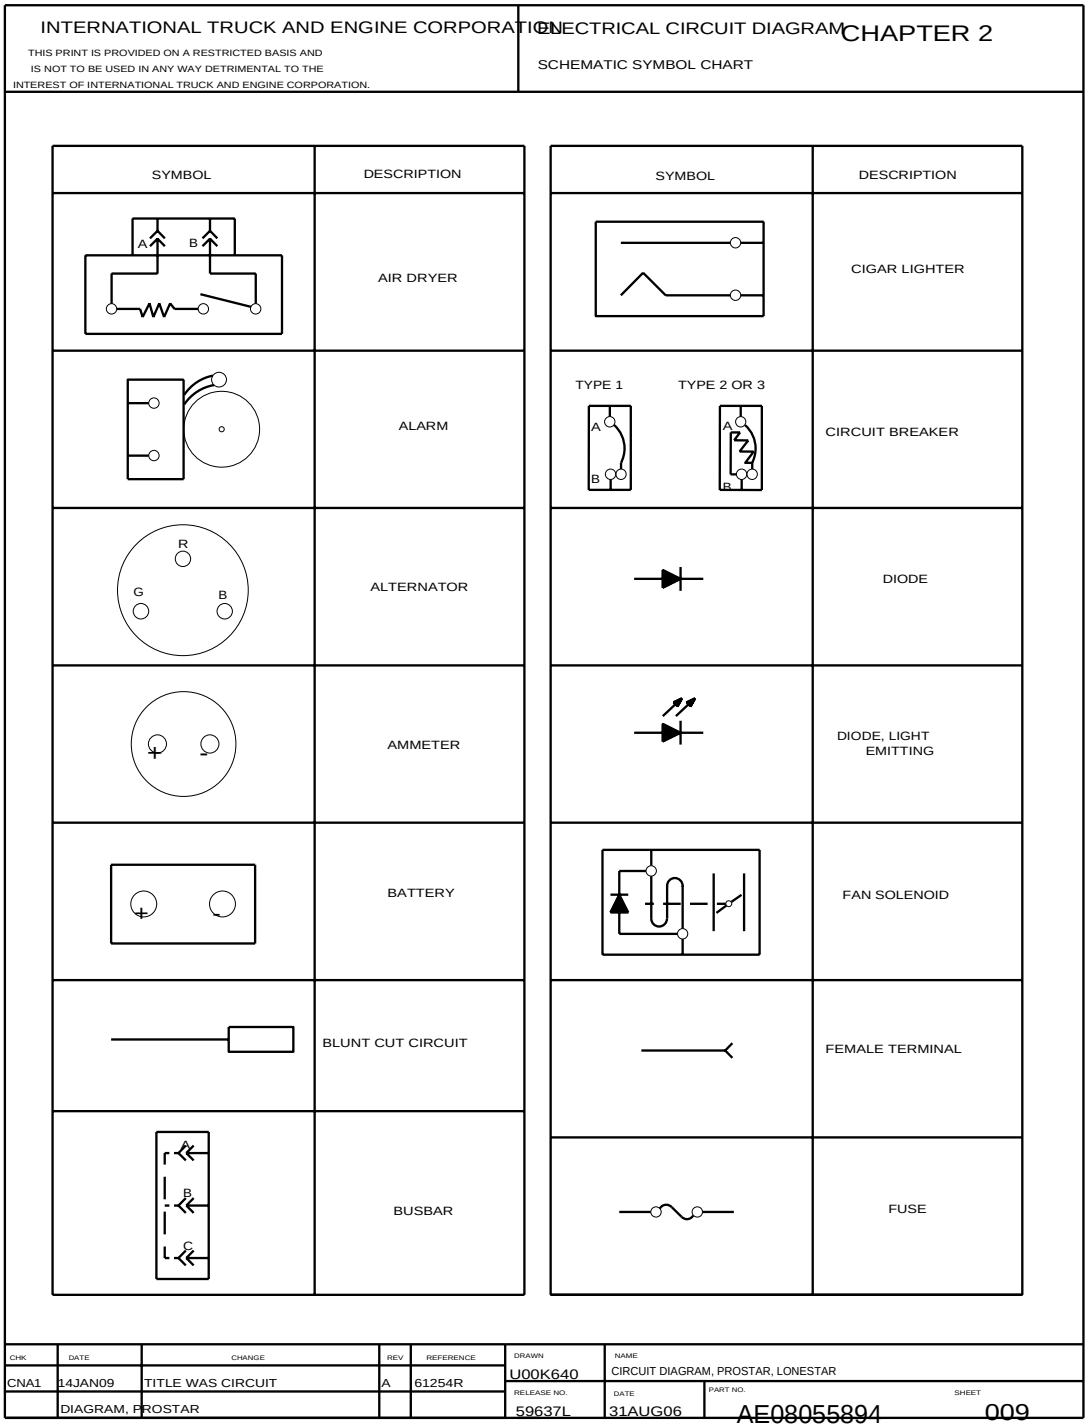


Figure 9 Schematic Symbol Chart

https://truckmanualshub.com/

2.10. SCHEMATIC SYMBOL CHART (CONT.), P. 10

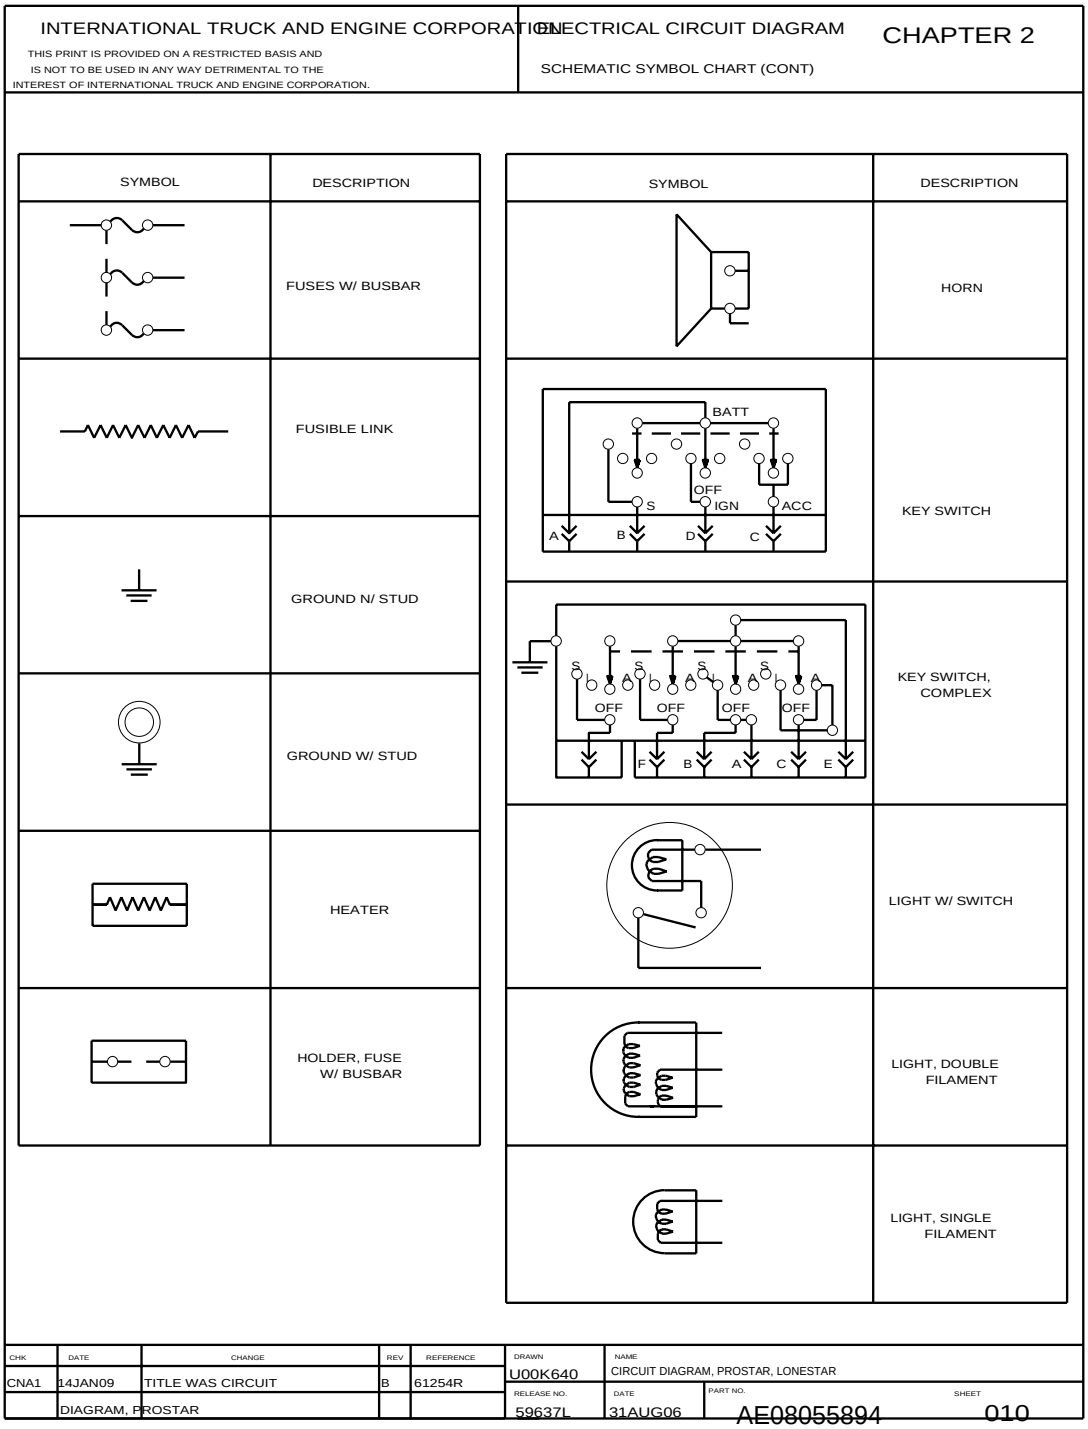


Figure 10 Schematic Symbol Chart (Cont.)

https://truckmanualshub.com/

2.11. SCHEMATIC SYMBOL CHART (CONT.), P. 11

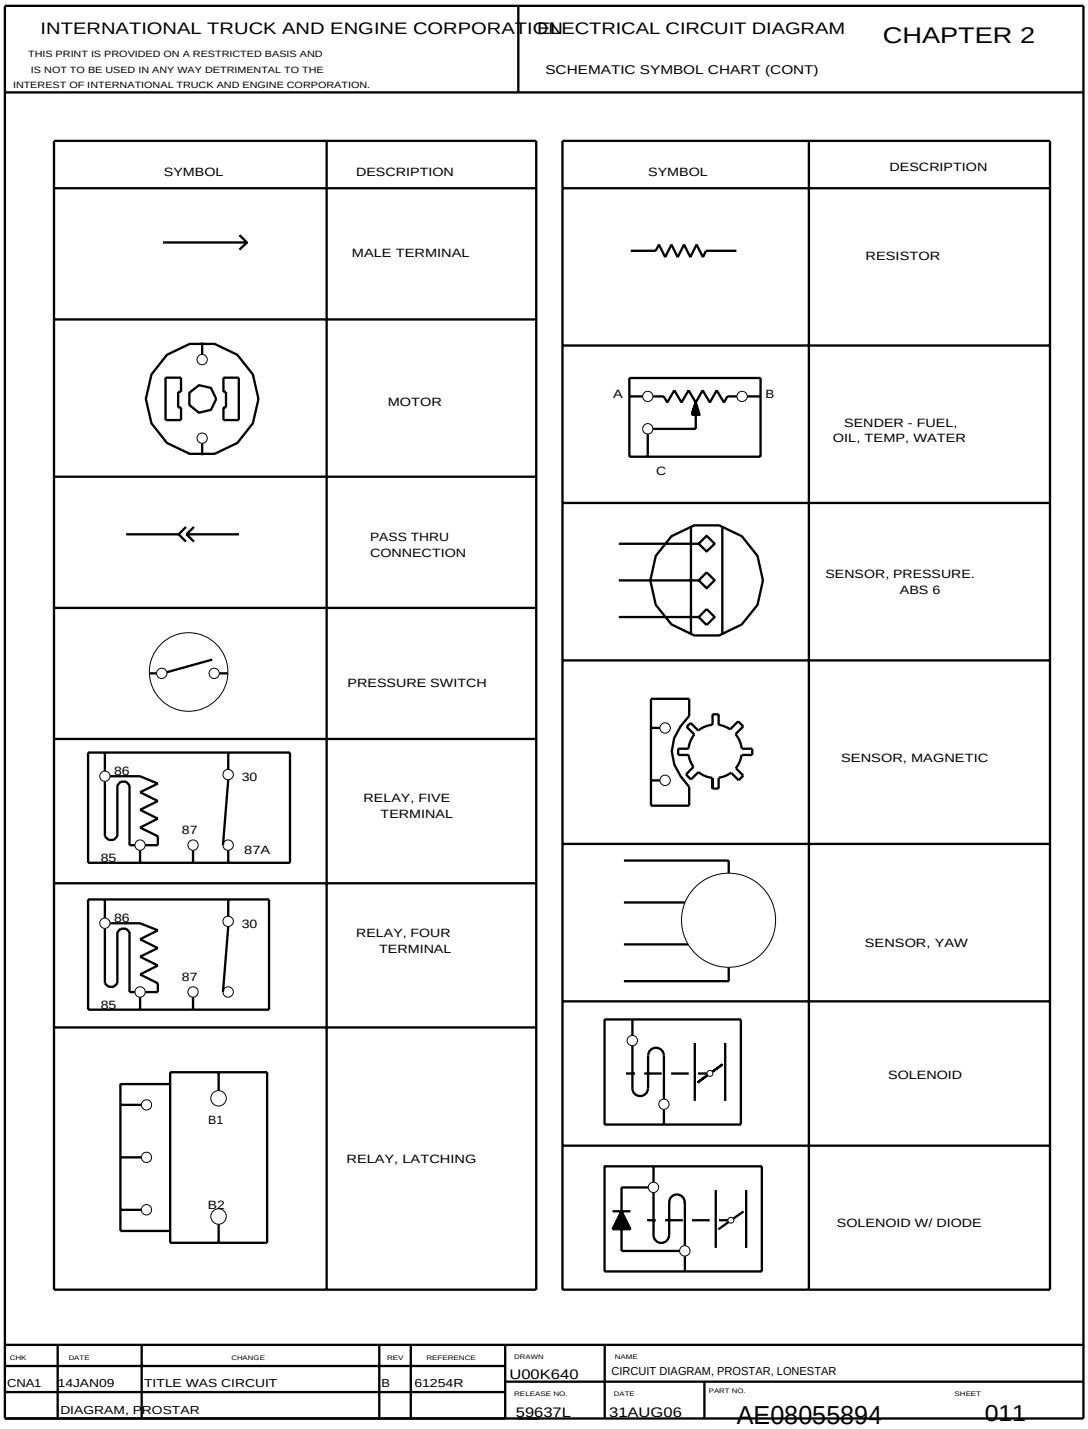


Figure 11 Schematic Symbol Chart (Cont.)

https://truckmanualshub.com/

2.12. SCHEMATIC SYMBOL CHART (CONT.), P. 12

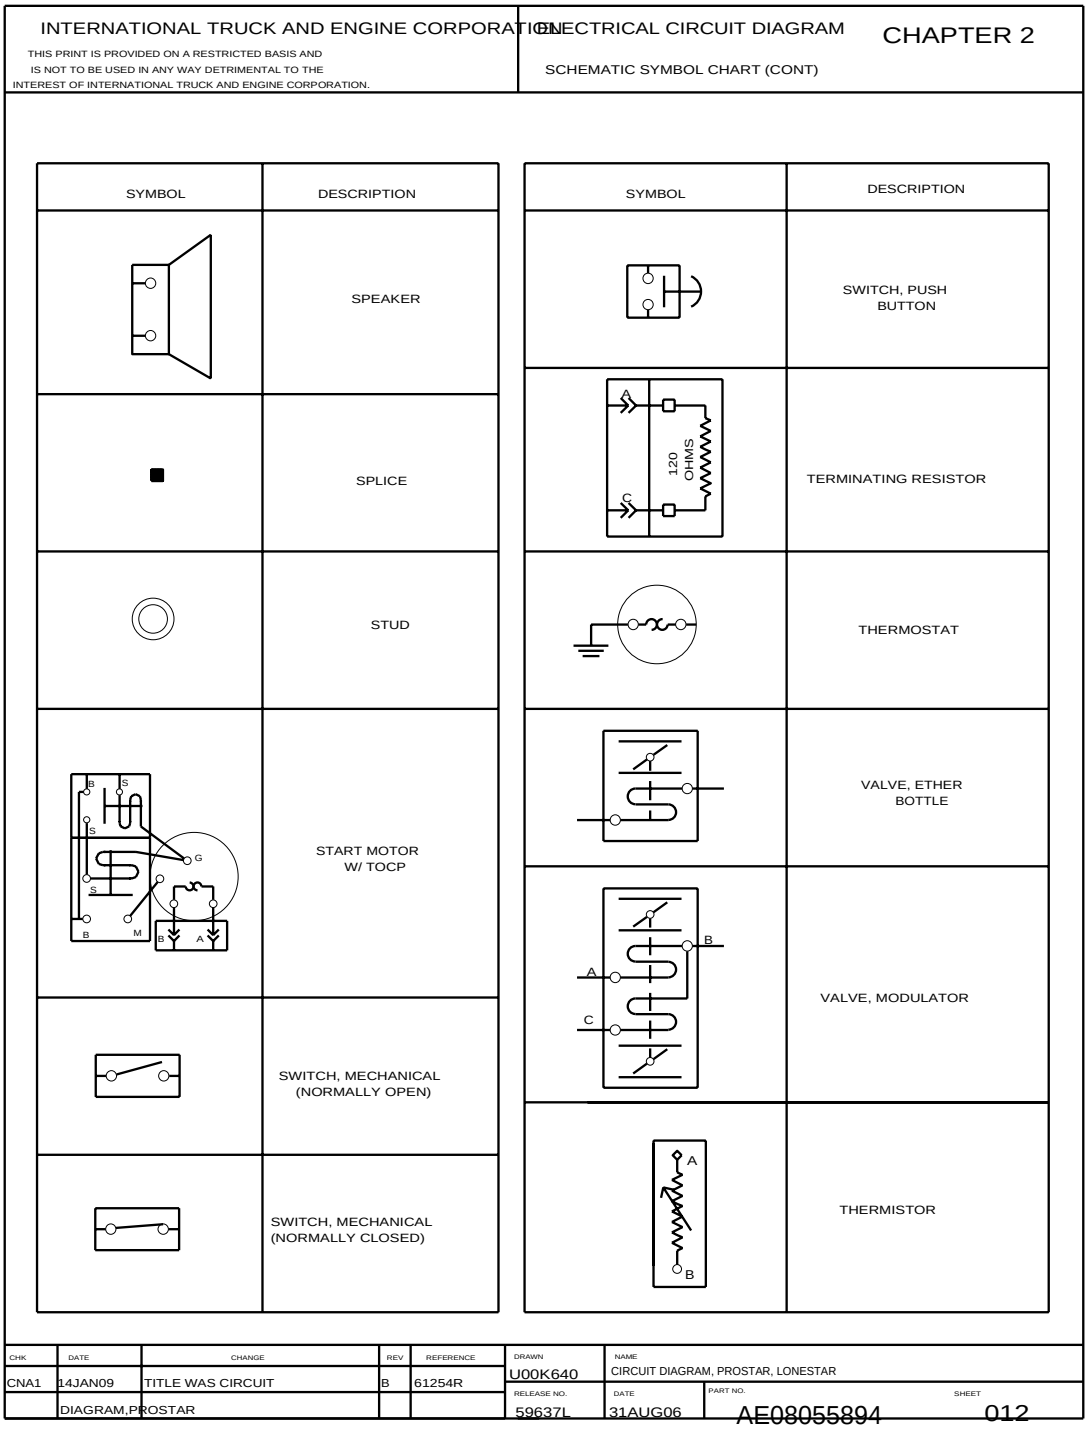


Figure 12 Schematic Symbol Chart (Cont.)

https://truckmanualshub.com/

3. 12 VOLT POWER DISTRIBUTION CIRCUIT DIAGRAMS (CHAPTER 3)

3.1. BATTERY FEED, P. 1

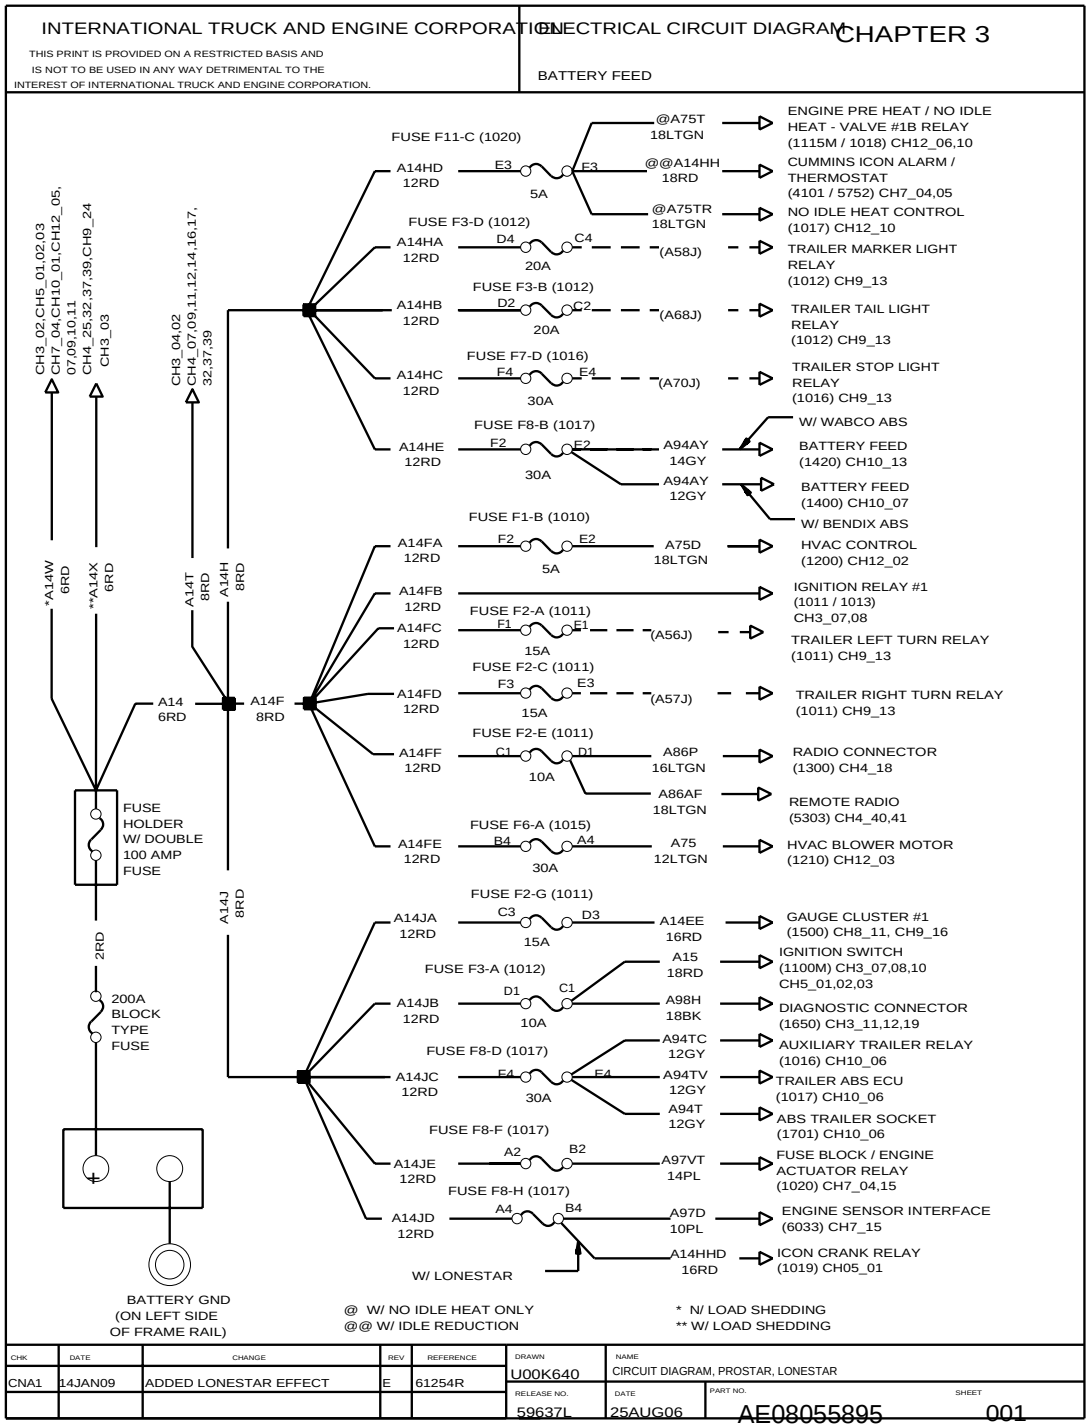


Figure 13 Battery Feed

https://truckmanualshub.com/

3.2. BATTERY FEED (CONT.), P. 2

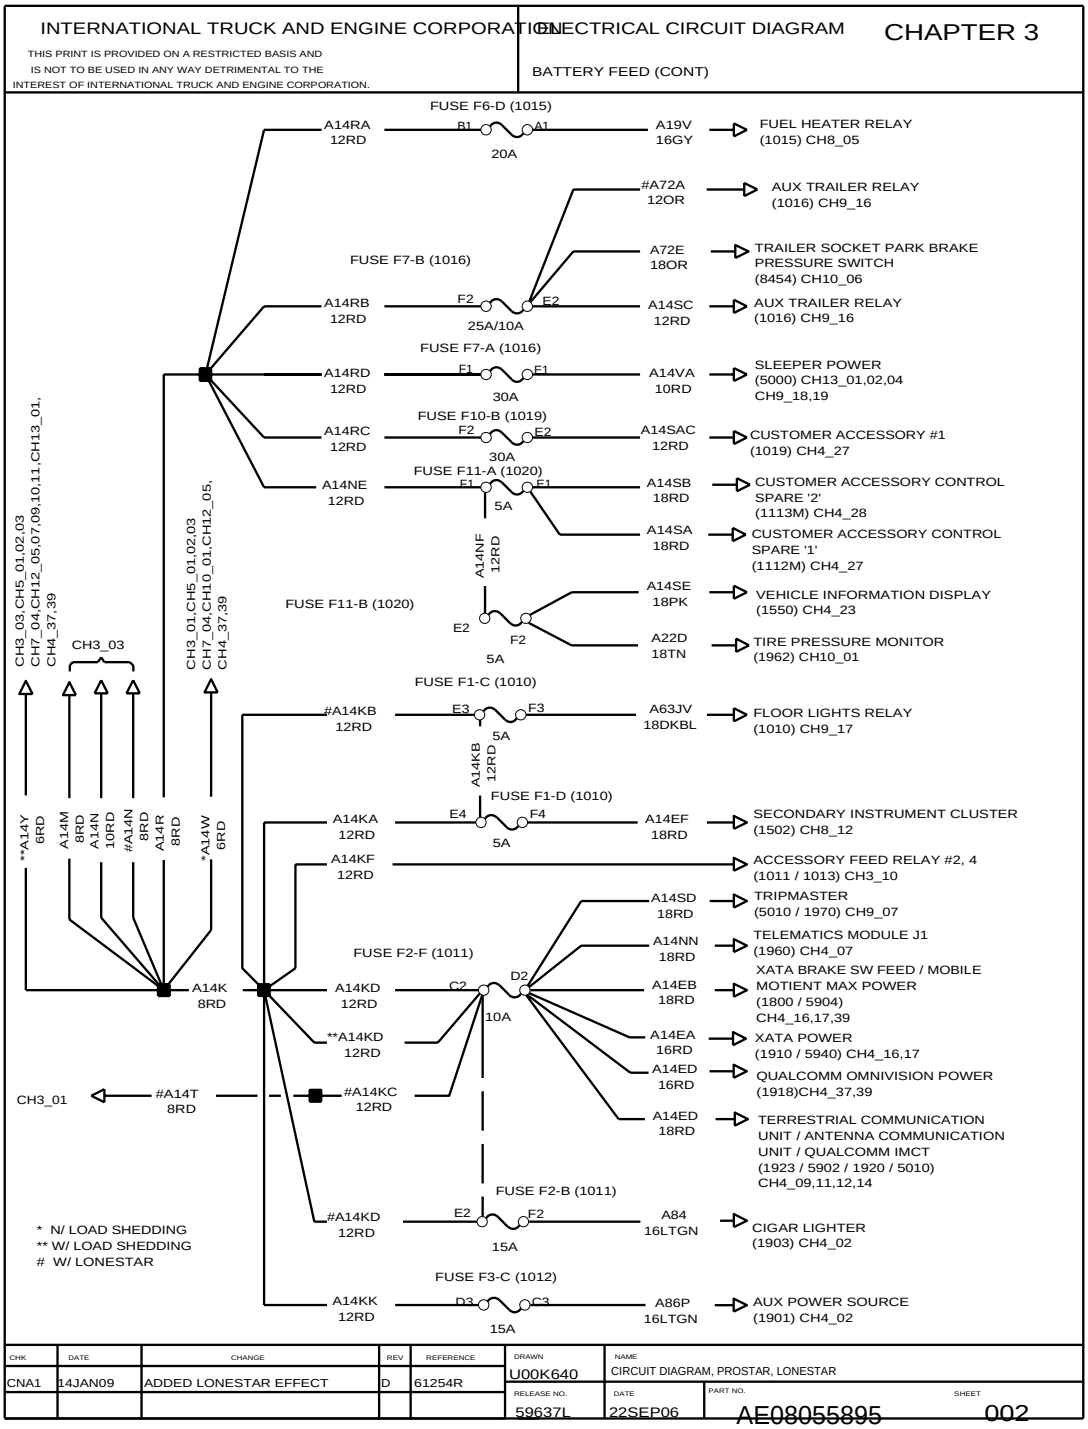


Figure 14 Battery Feed (Cont.)

https://truckmanualshub.com/

3.3. BATTERY FEED (CONT.), P. 3

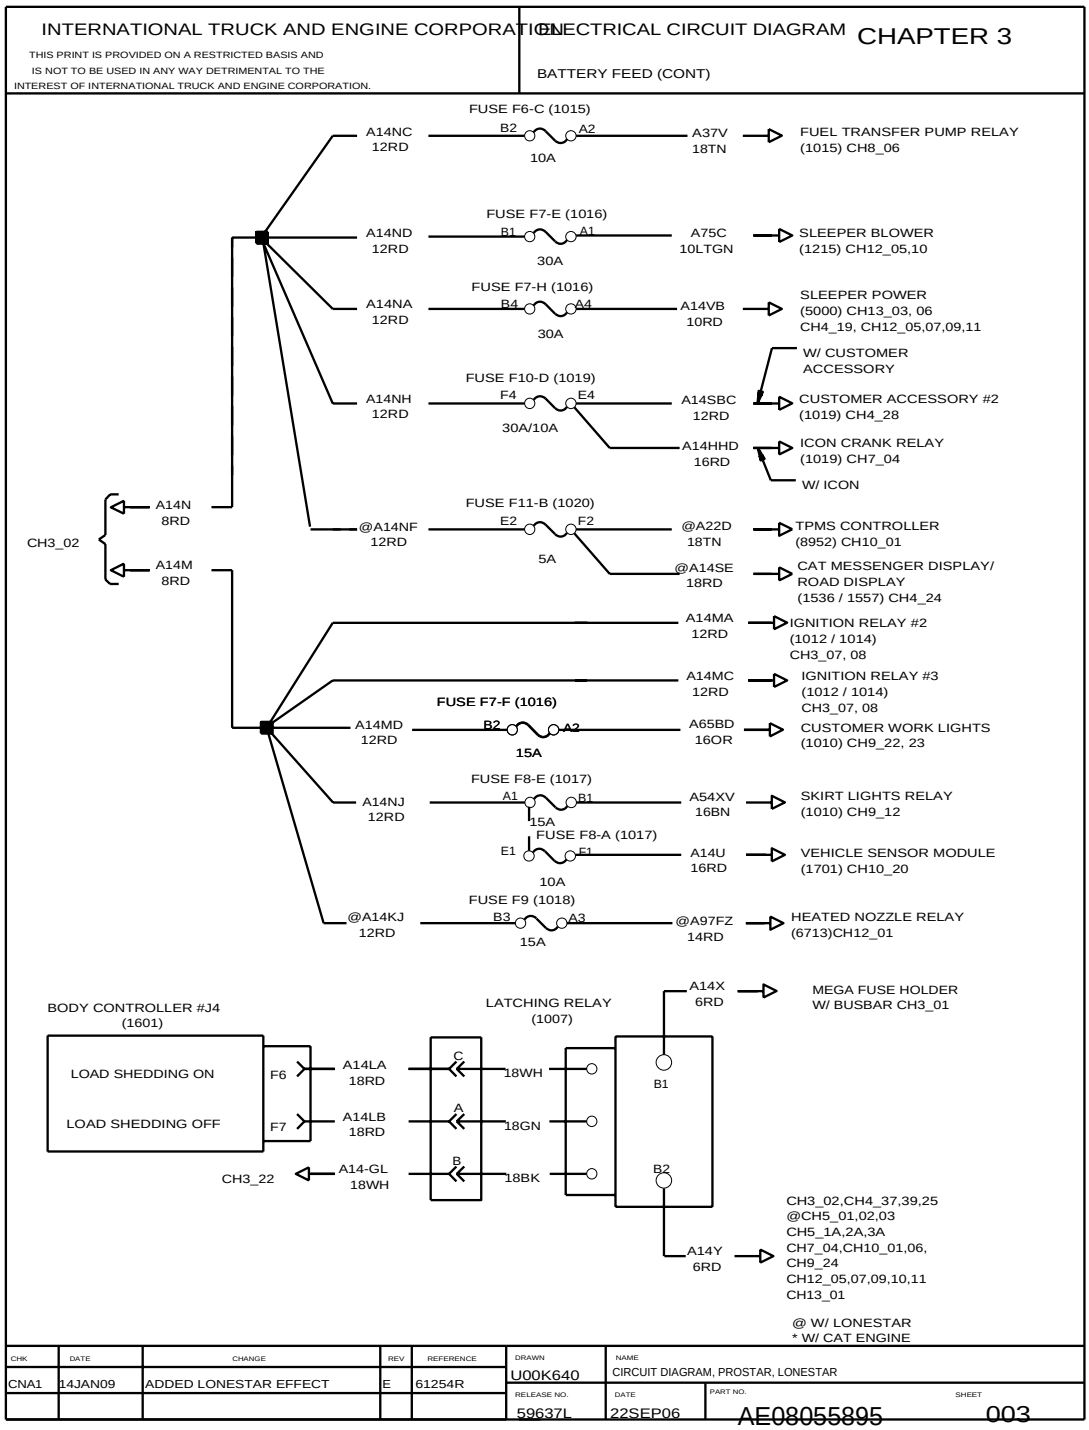


Figure 15 Battery Feed (Cont.)

https://truckmanualshub.com/

3.4. BATTERY FEED (CONT.), P. 4

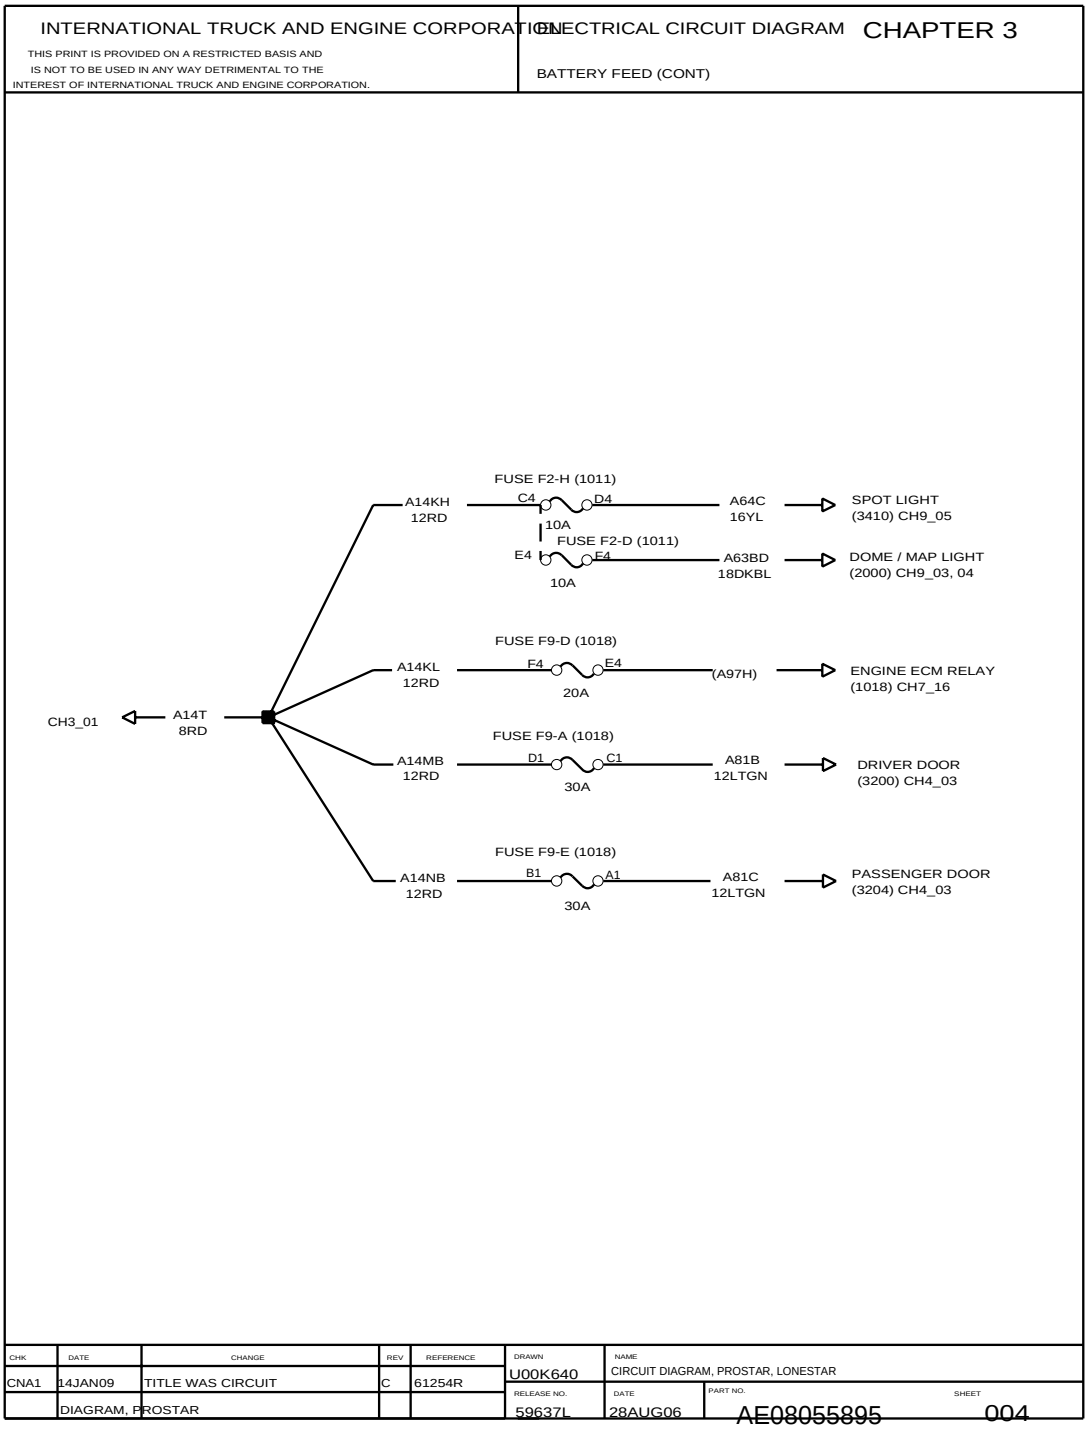


Figure 16 Battery Feed (Cont.)

https://truckmanualshub.com/

3.5. BLANK PAGE, P. 5

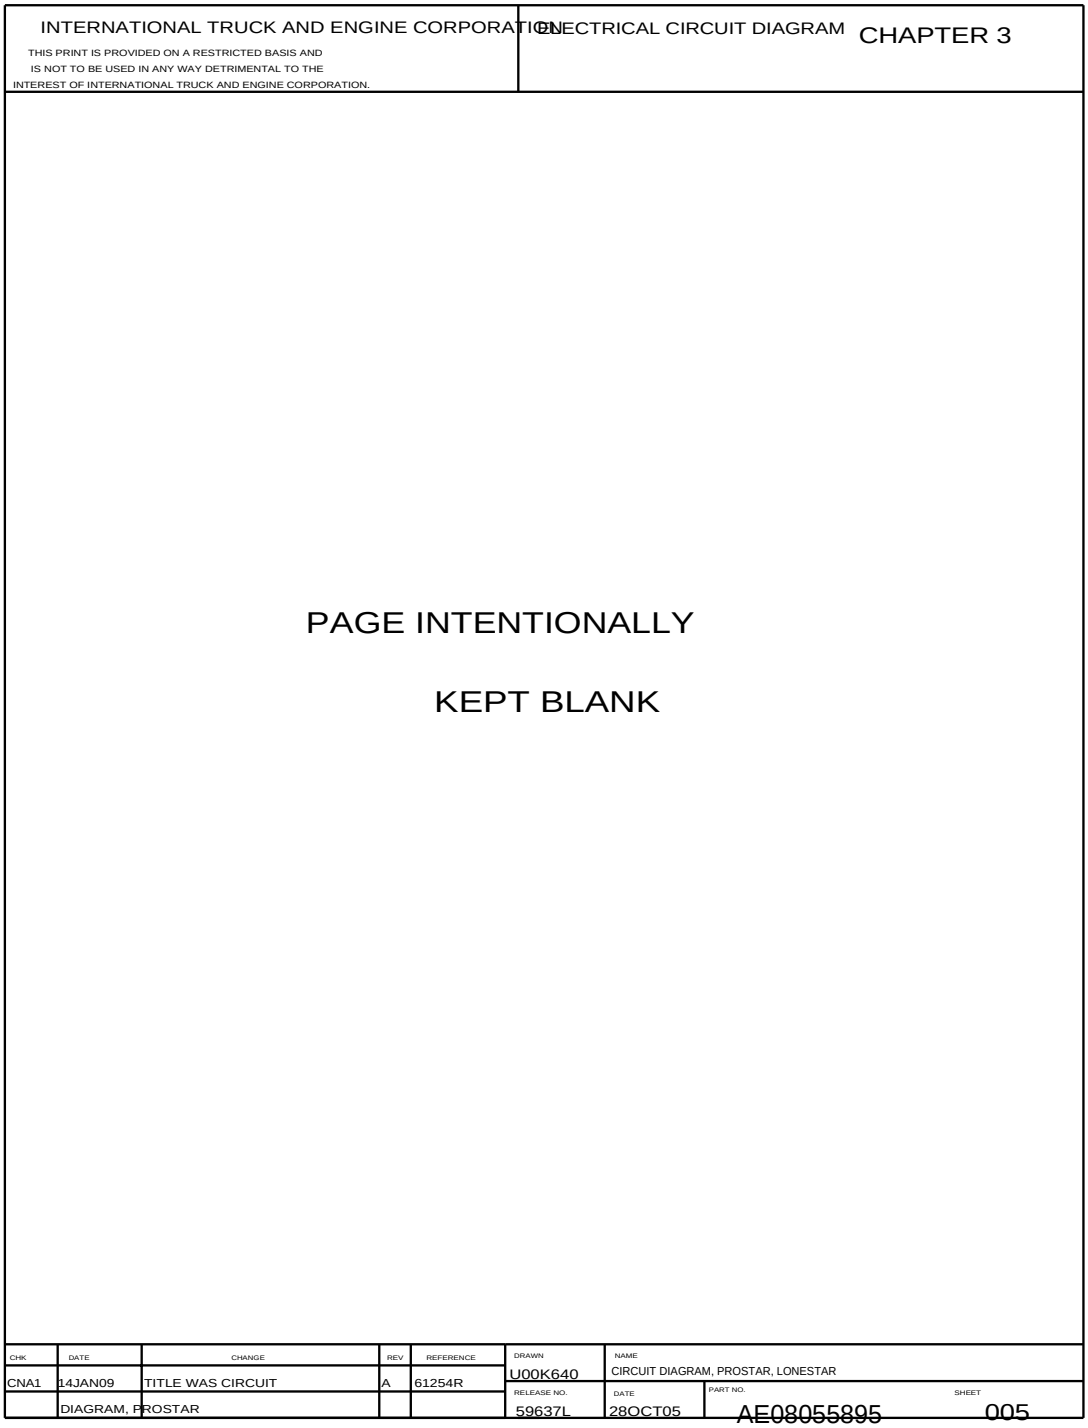


Figure 17 Blank Page

https://truckmanualshub.com/

3.6. BLANK PAGE, P. 6

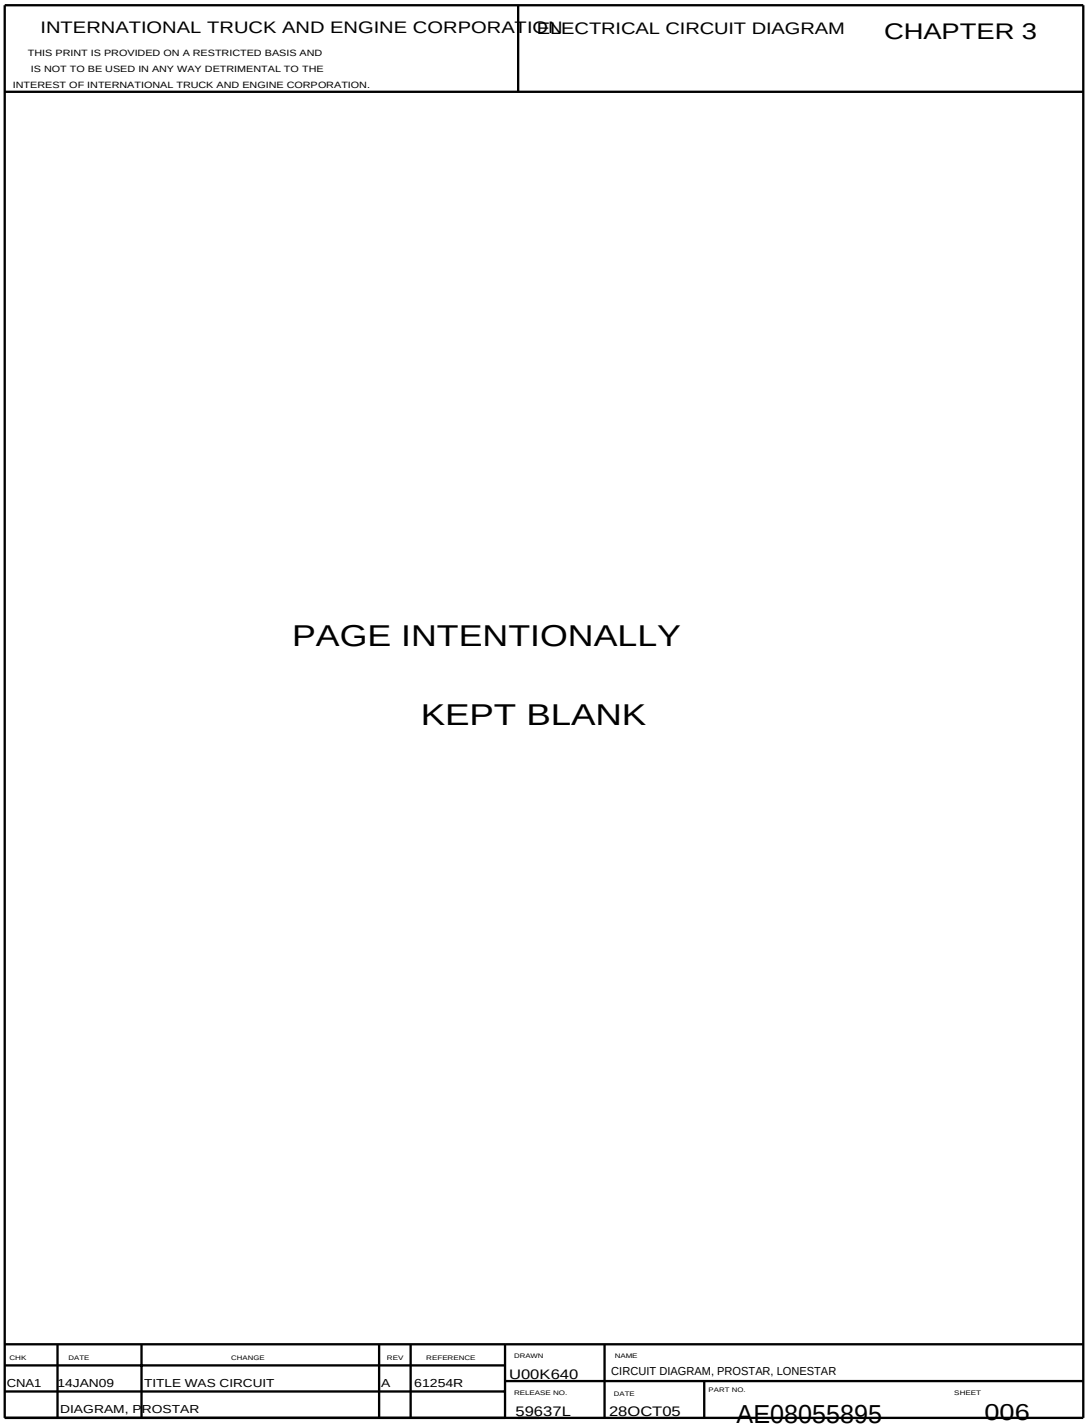


Figure 18 Blank Page

https://truckmanualshub.com/

3.7. IGNITION FEED — STANDARD AND REMOTE START/STOP, P. 7

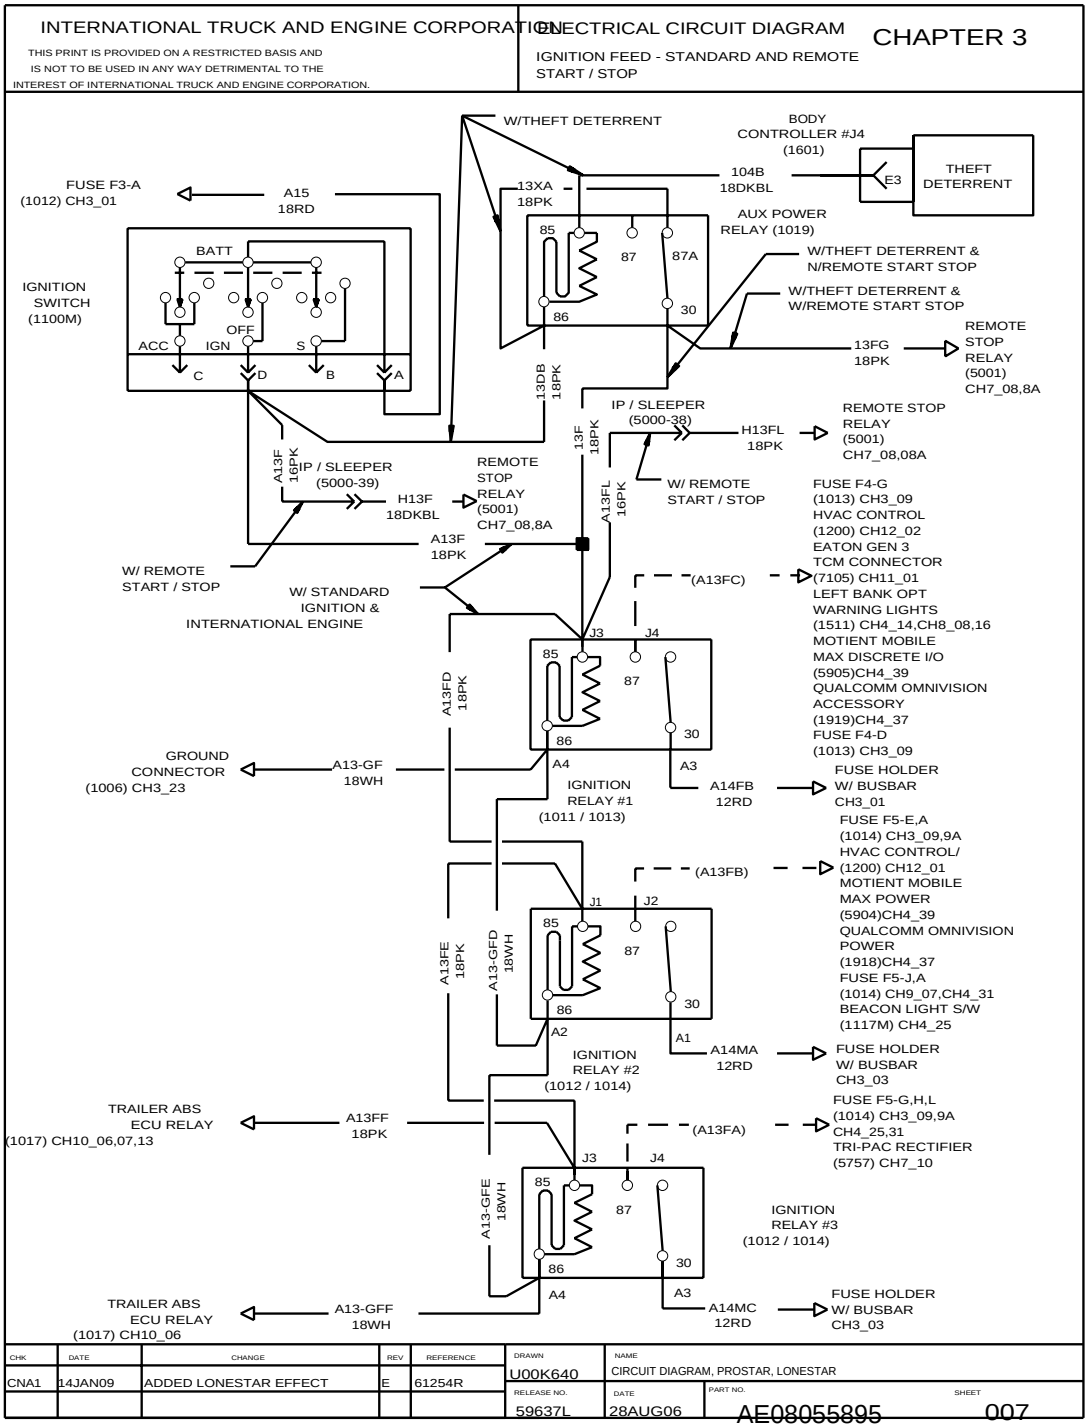


Figure 19 Ignition Feed — Standard and Remote Start/Stop

https://truckmanualshub.com/

3.8. IGNITION FEED — ICON, P. 8

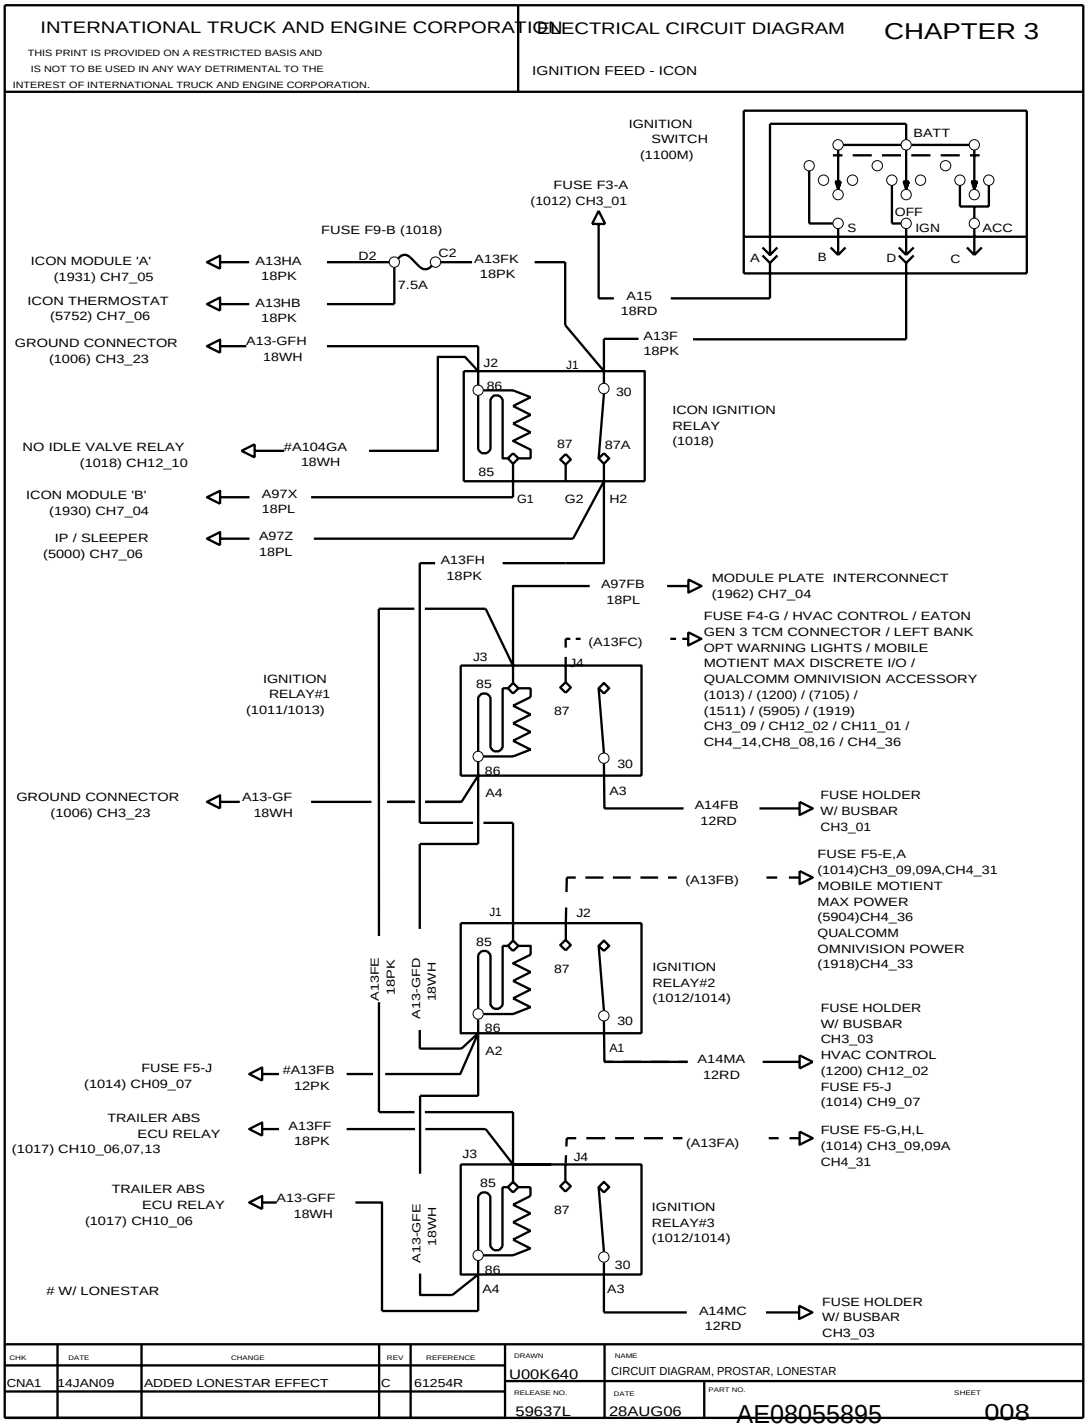


Figure 20 Ignition Feed — ICON

https://truckmanualshub.com/

3.9. IGNITION FEED — STANDARD, P. 9

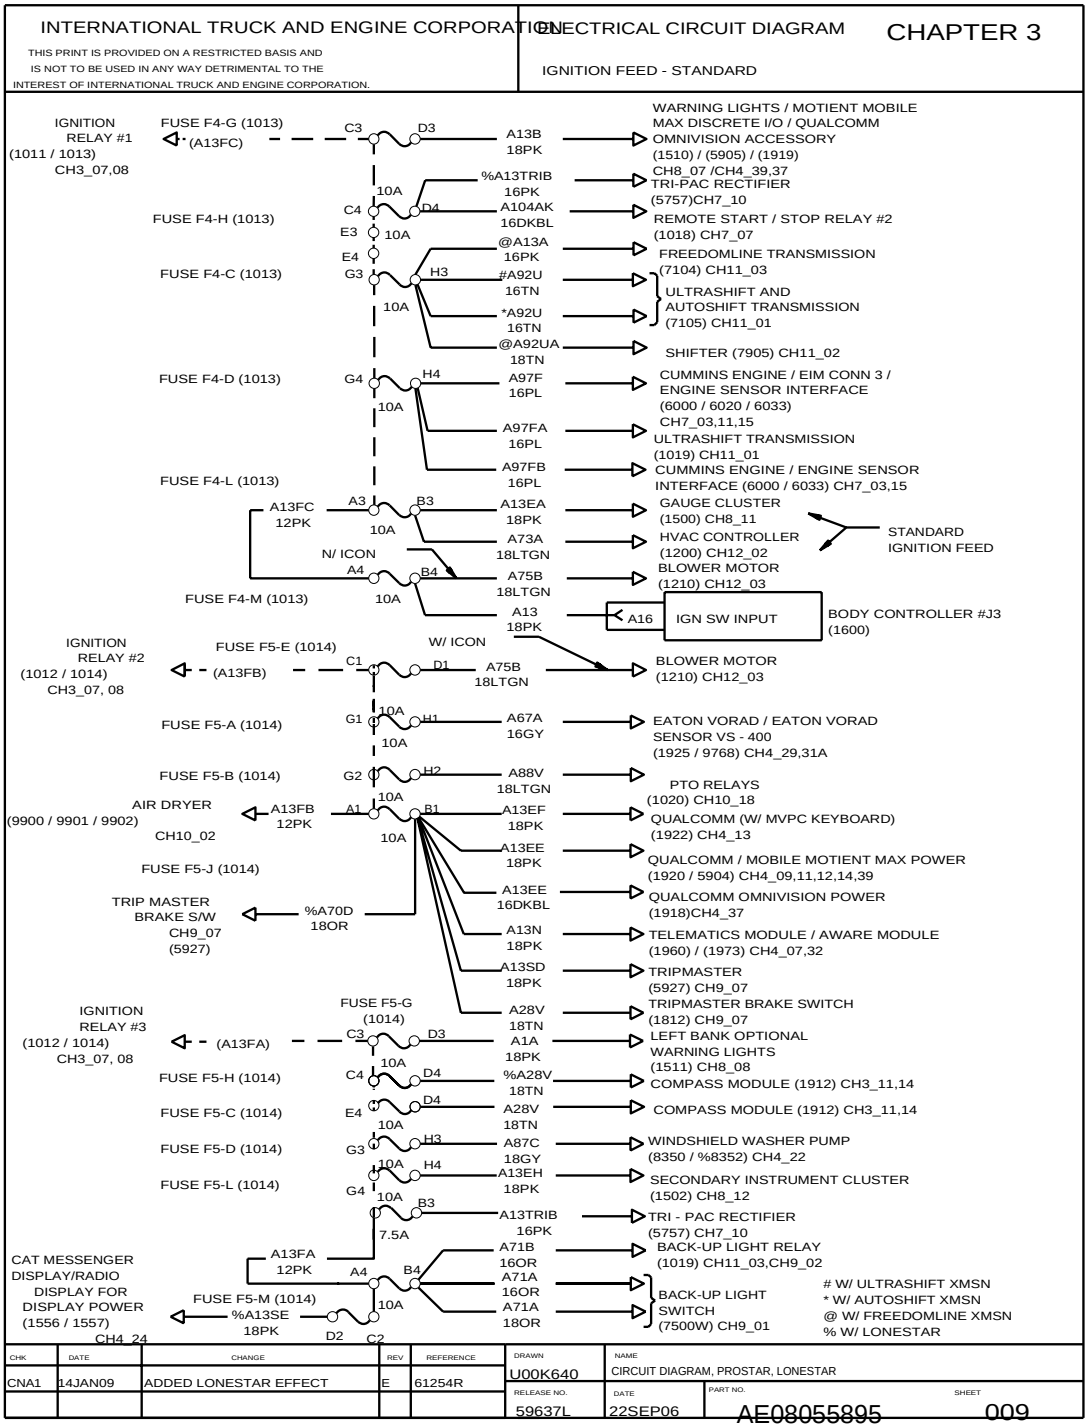


Figure 21 Ignition Feed — Standard

https://truckmanualshub.com/

3.10. IGNITION FEED — STANDARD (LONESTAR), P. 9A

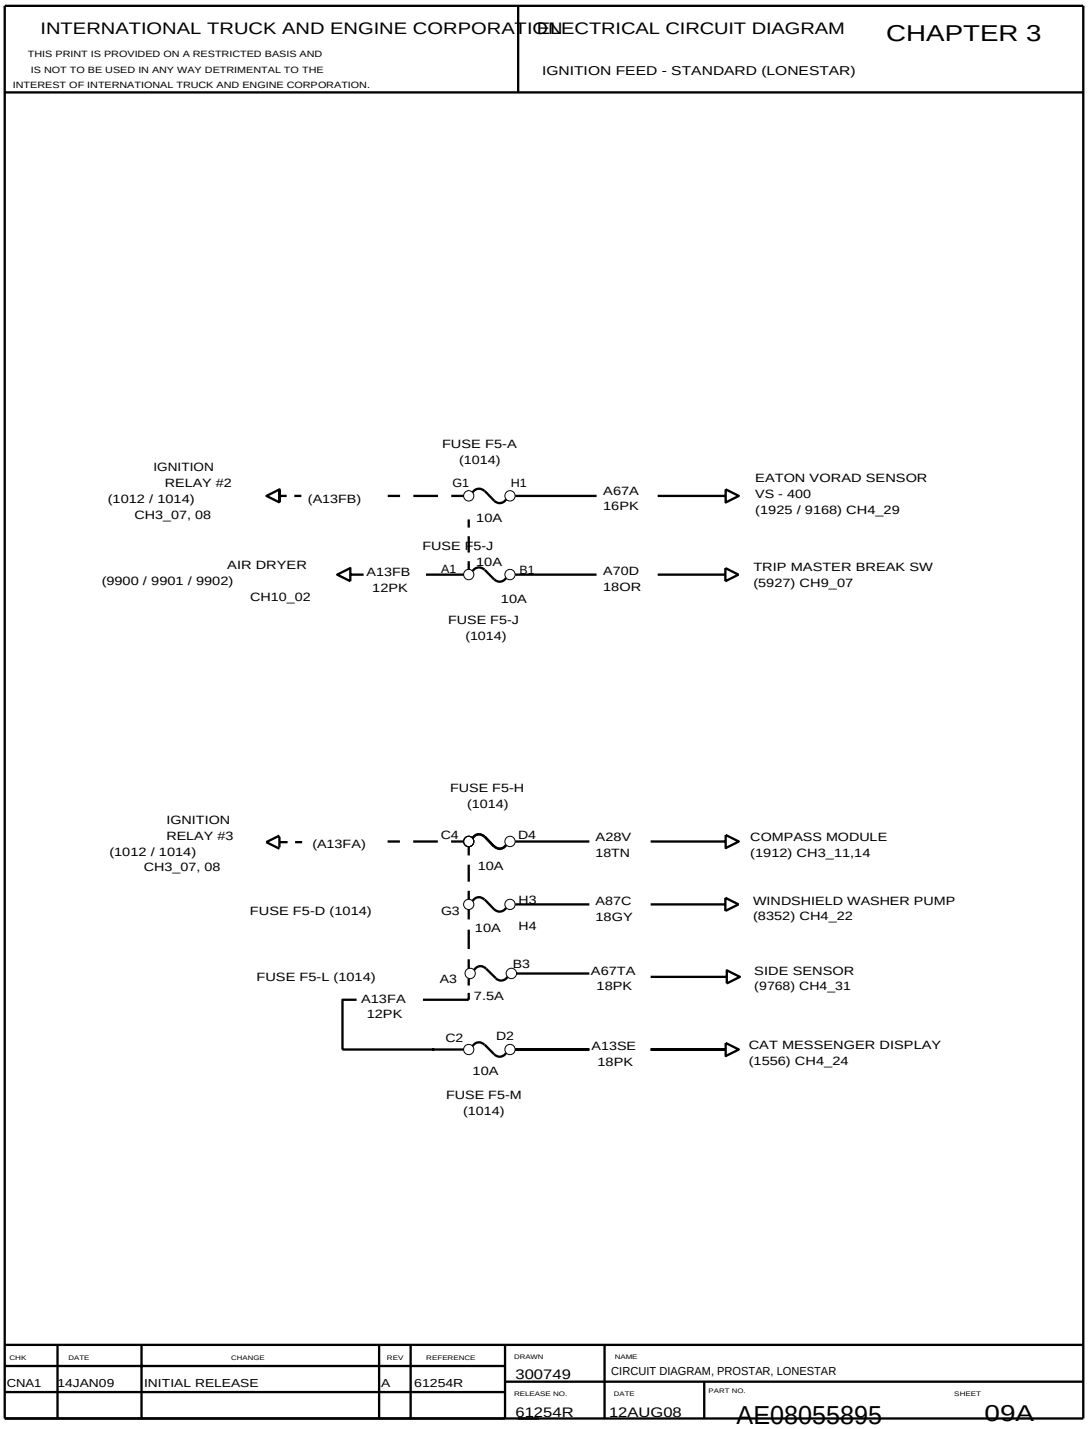


Figure 22 Ignition Feed — Standard (LoneStar)

https://truckmanualshub.com/

3.11. ACCESSORY FEED, P. 10

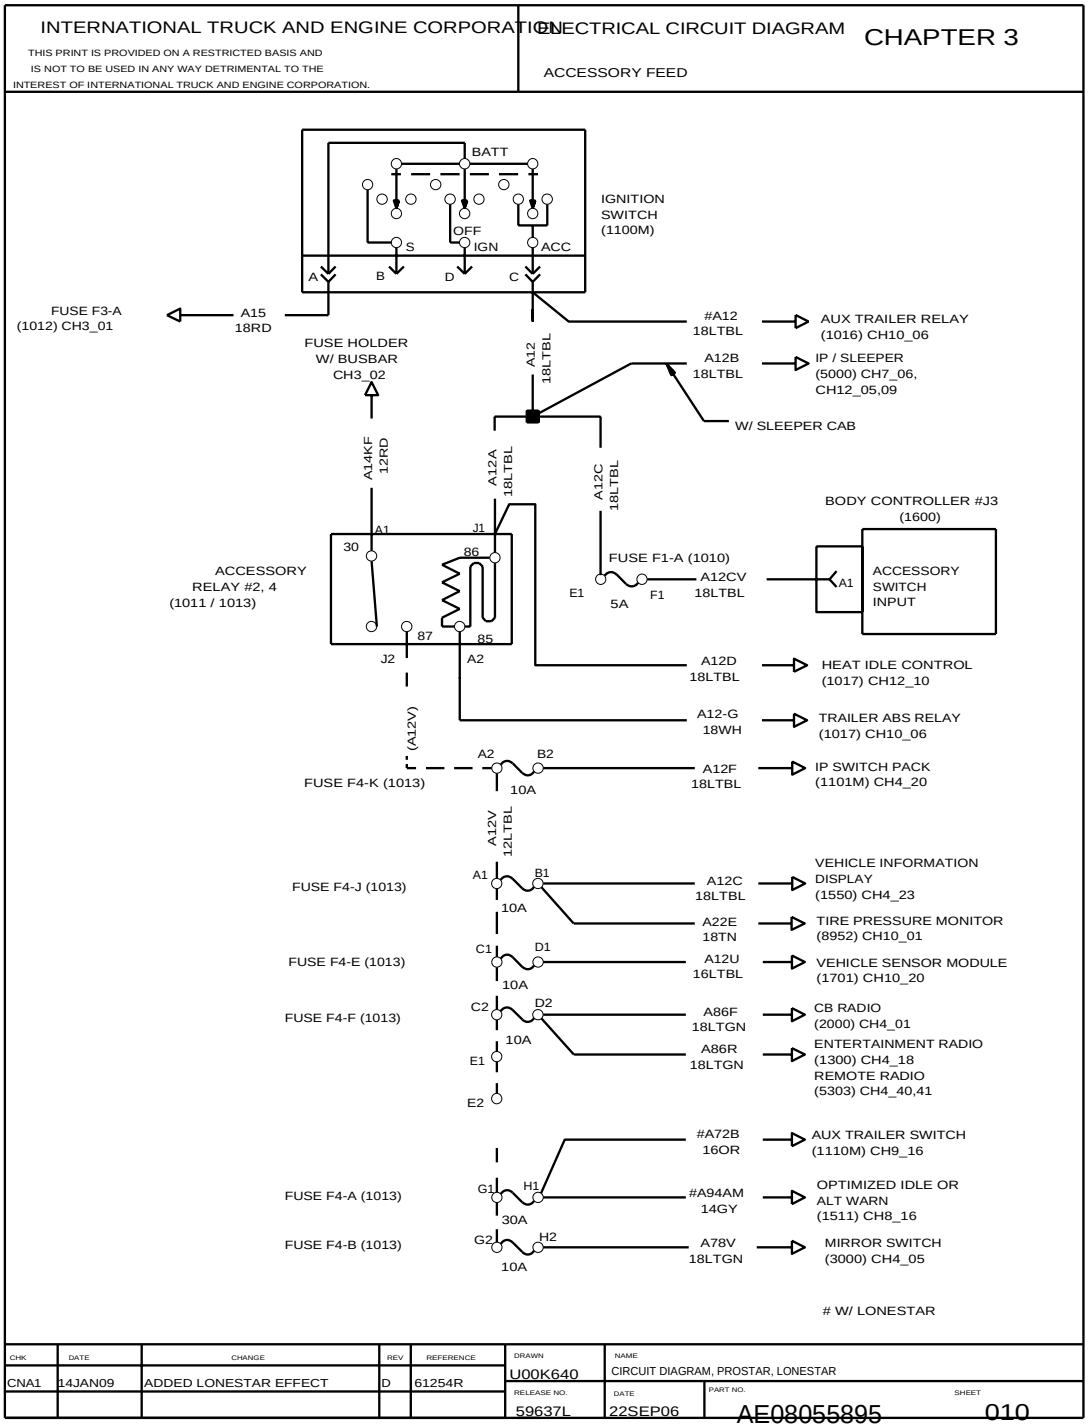


Figure 23 Accessory Feed

https://truckmanualshub.com/

3.12. CAB J1939 COMPASS AND ABS EFFECTS, P. 11

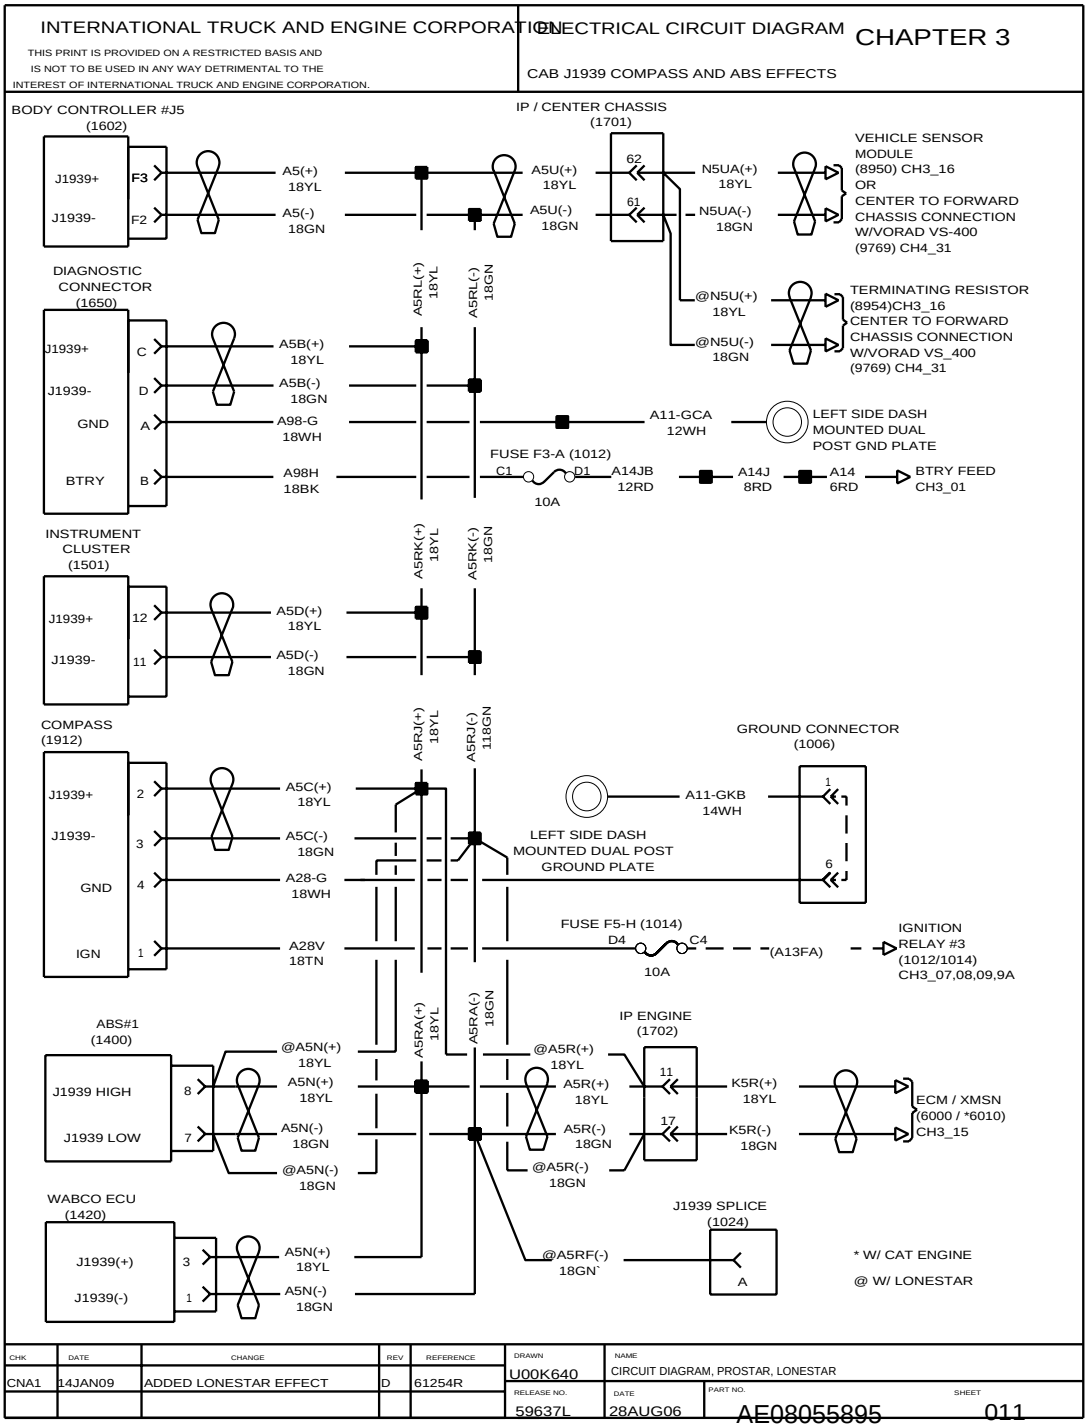


Figure 24 Cab J1939 COMPASS and ABS Effects

https://truckmanualshub.com/

3.13. CAB J1939 WITH ALL OPTIONS, P. 12

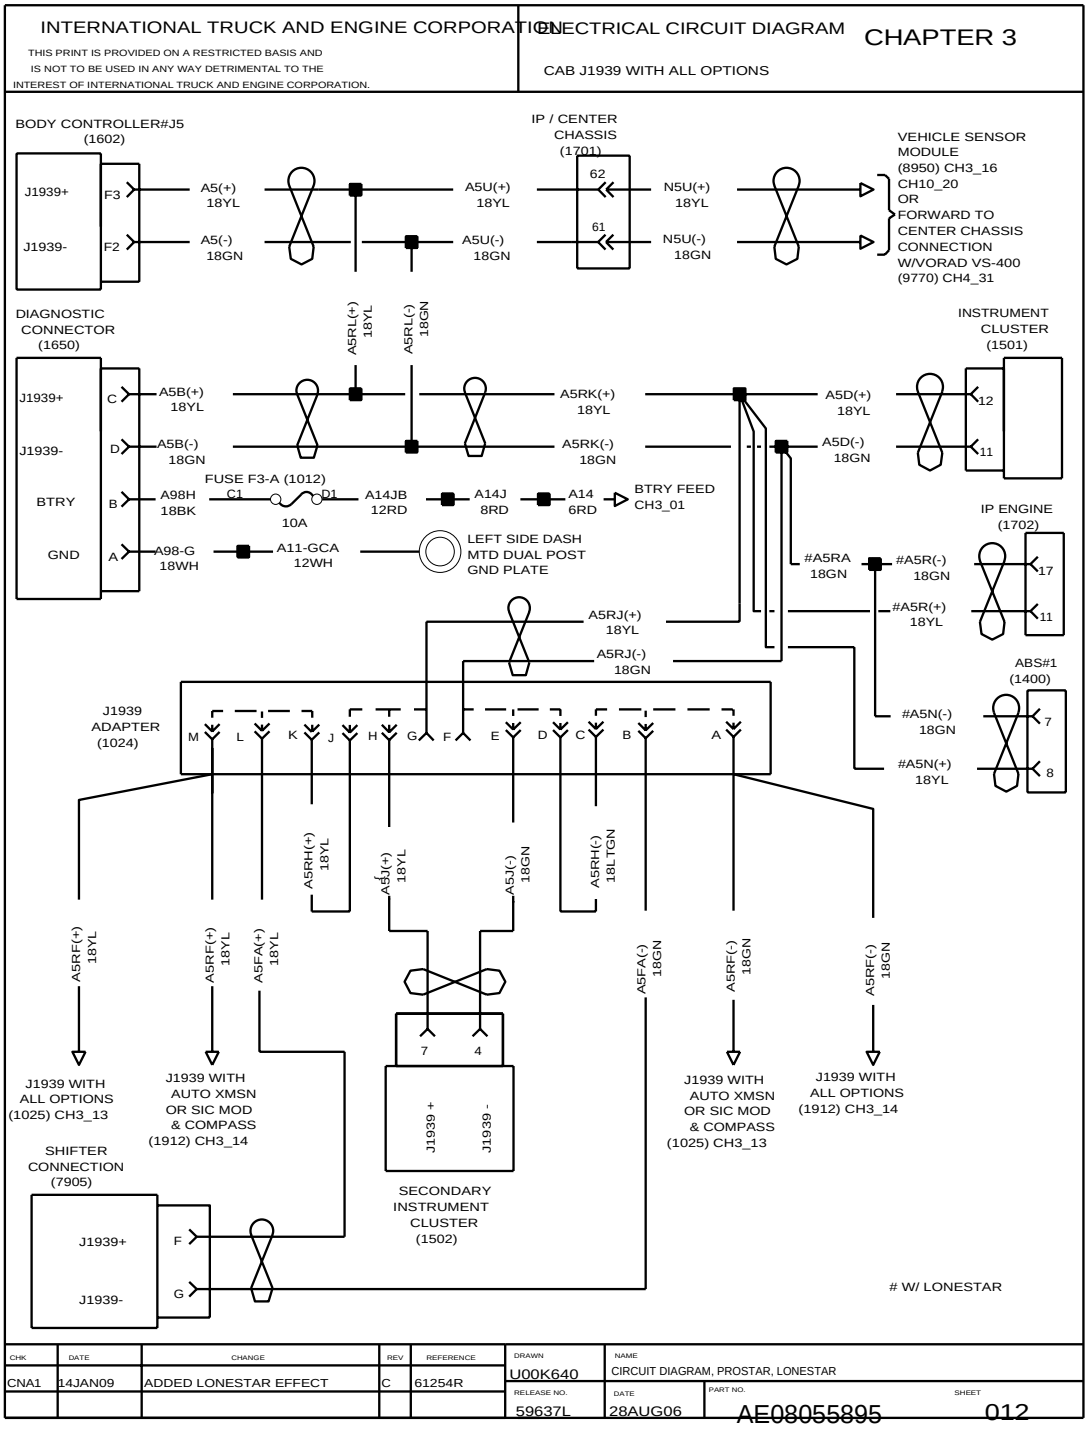


Figure 25 Cab J1939 with All Options

https://truckmanualshub.com/

3.14. CAB J1939 WITH ALL OPTIONS, P. 13

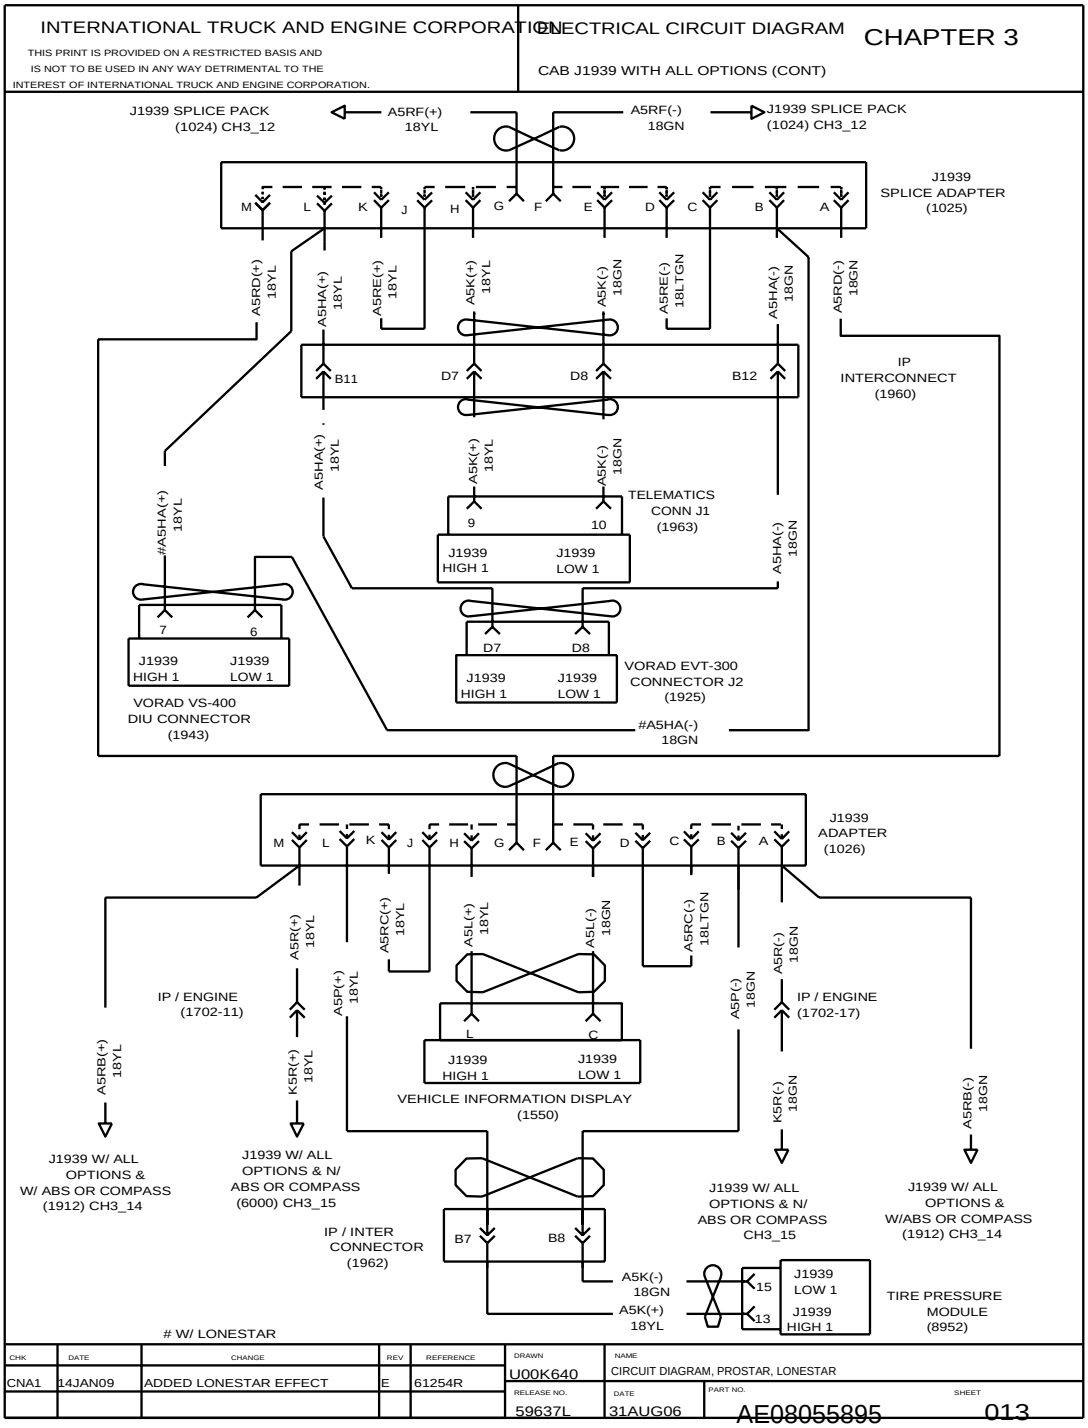


Figure 26 Cab J1939 with All Options

https://truckmanualshub.com/

3.15. CAB J1939 WITH ALL OPTIONS, P. 14

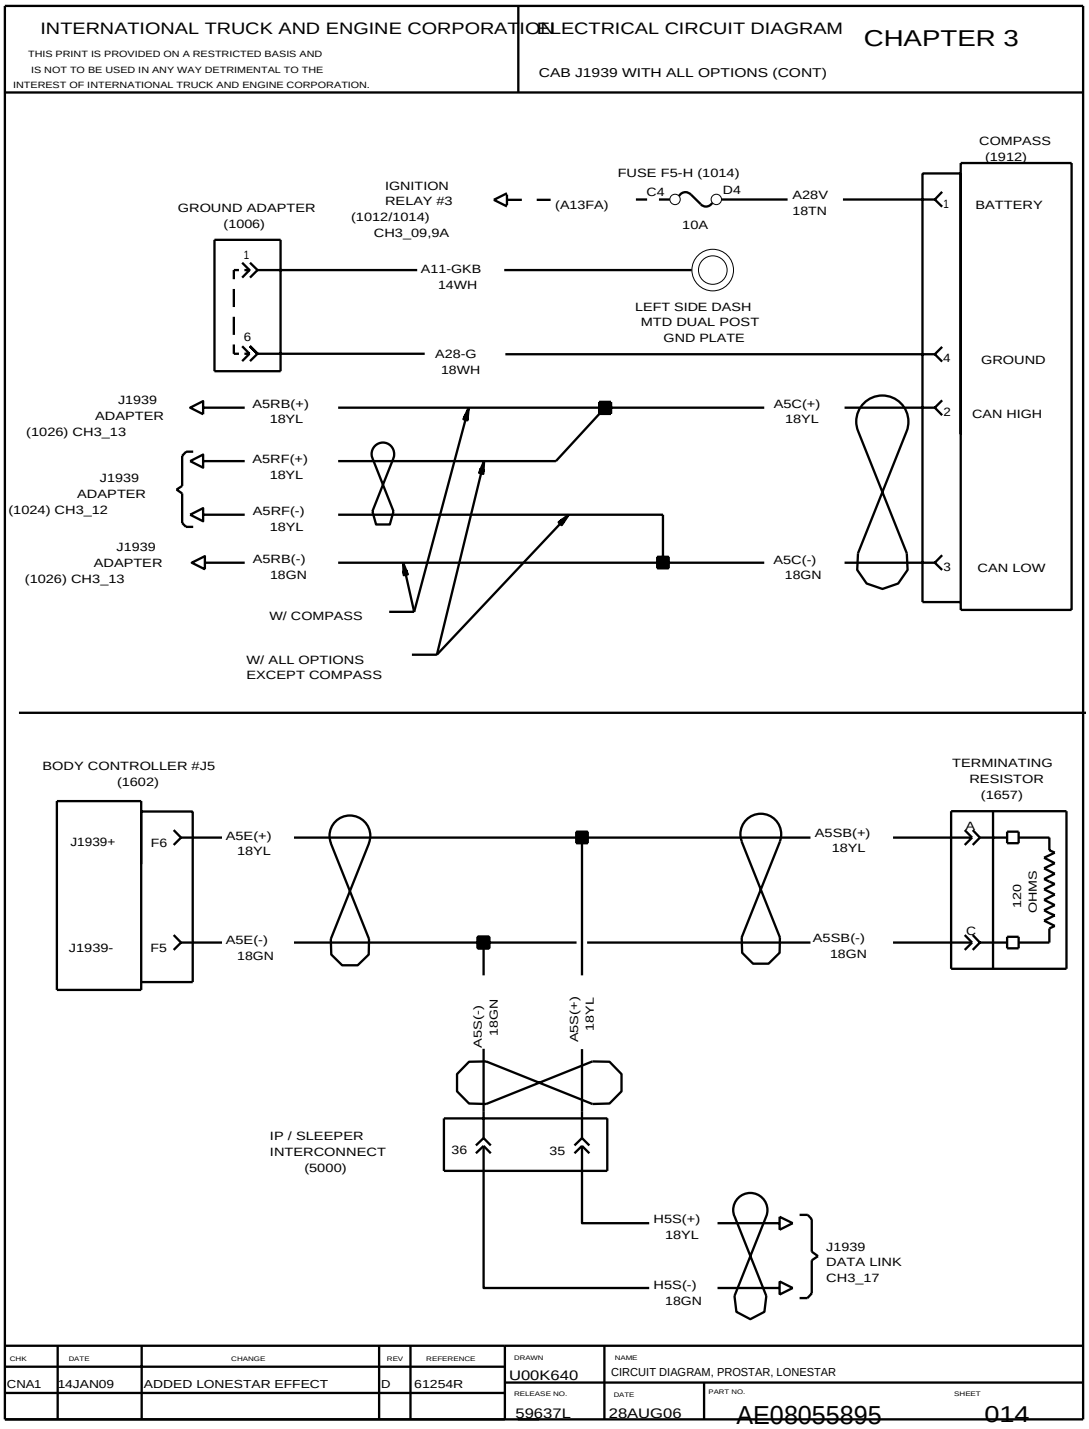


Figure 27 Cab J1939 with All Options

https://truckmanualshub.com/

3.16. J1939 ENGINE, P. 15

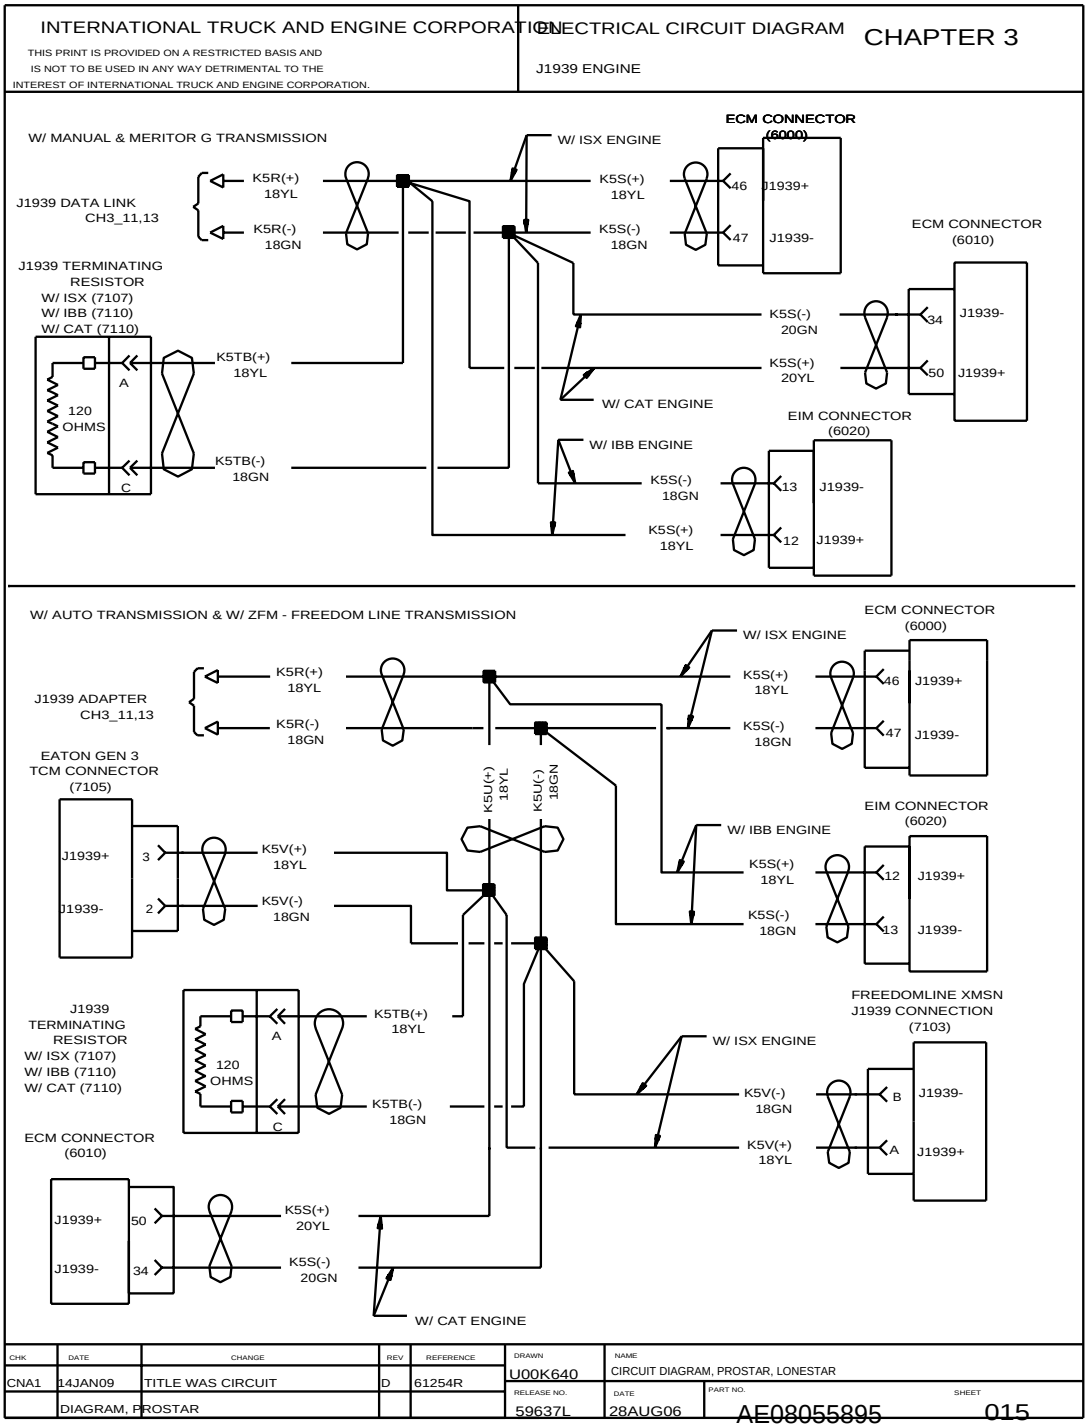


Figure 28 J1939 Engine

https://truckmanualshub.com/

3.17. J1939 CHASSIS, P. 16

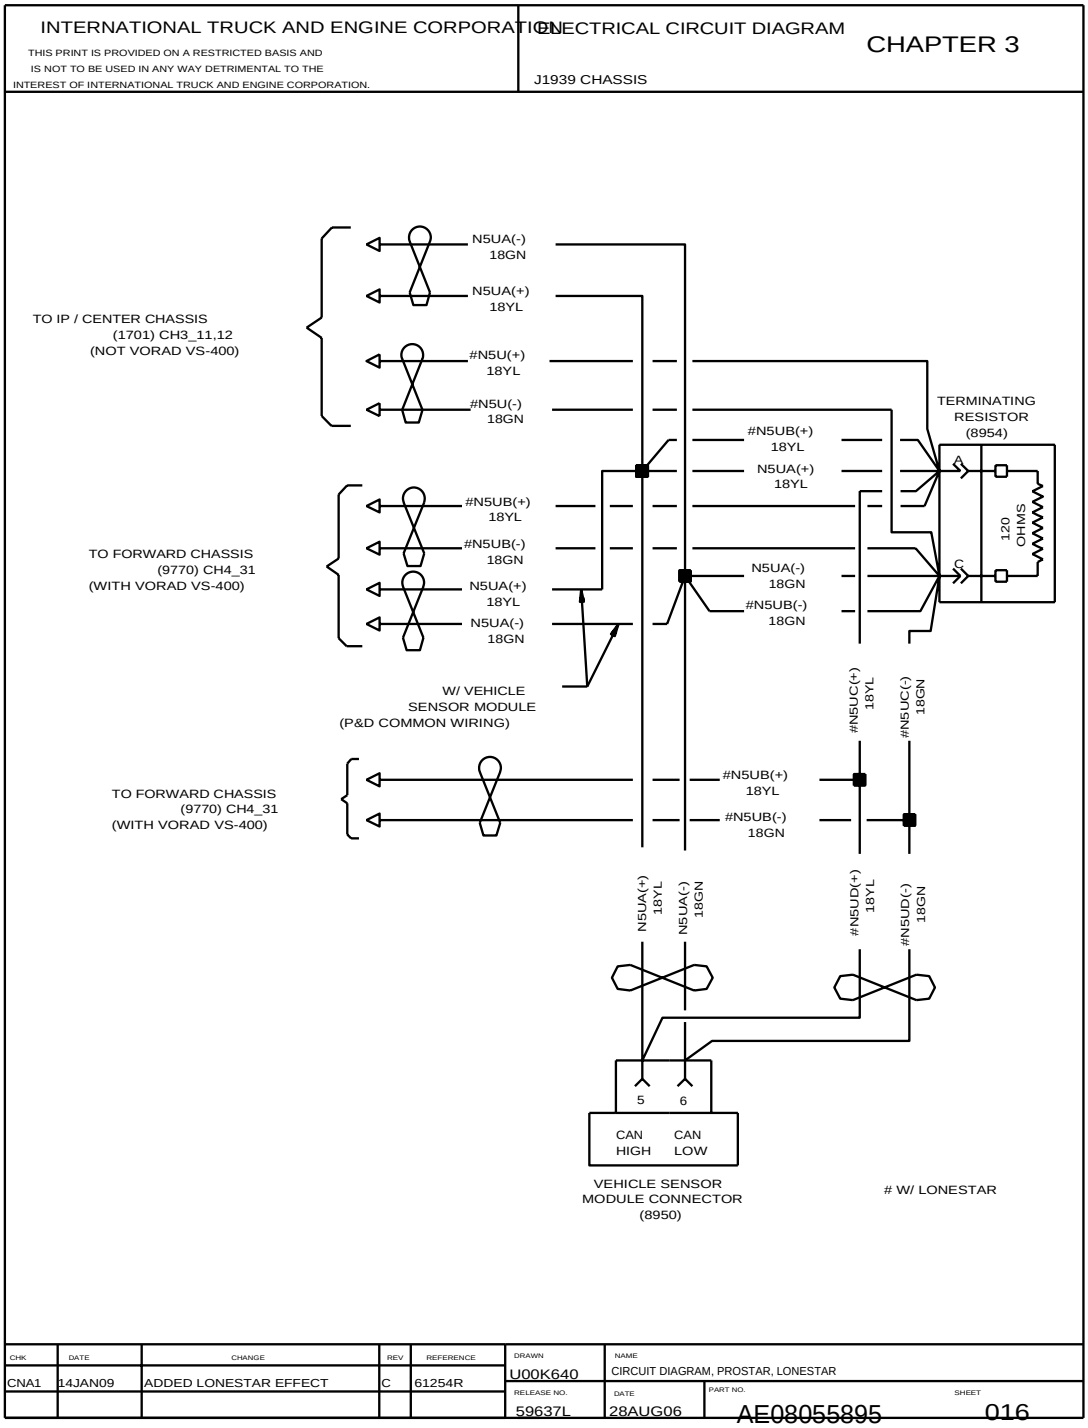


Figure 29 J1939 Chassis

https://truckmanualshub.com/

3.18. J1939 WITH SLEEPER, P. 17

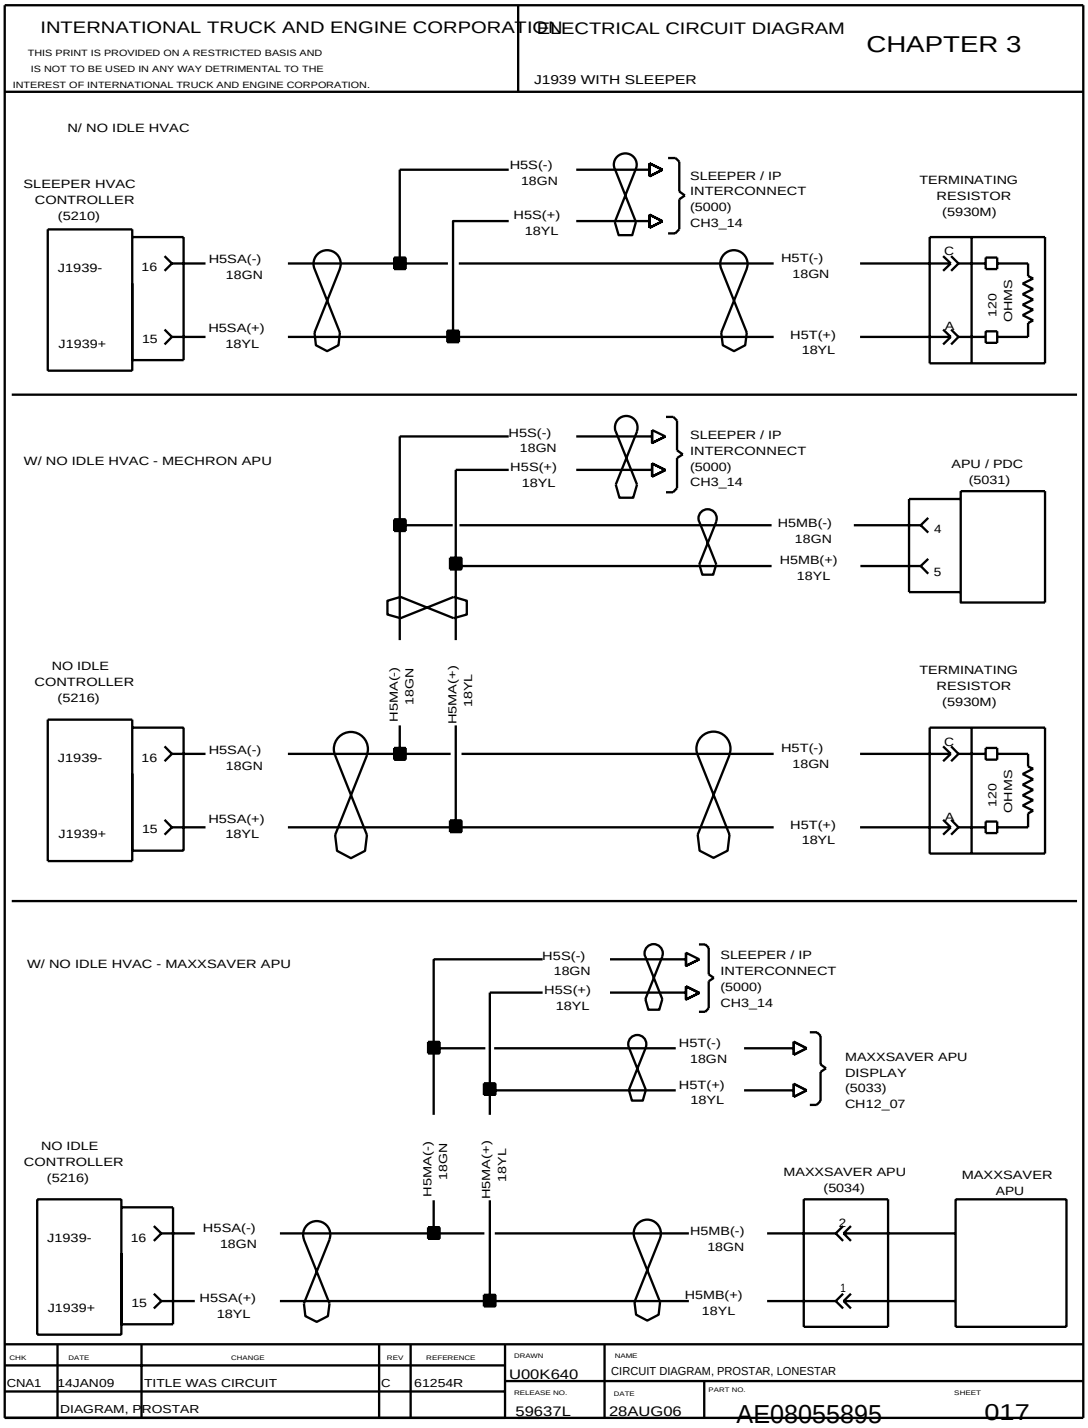


Figure 30 J1939 with Sleeper

https://truckmanualshub.com/

3.19. J1708 PRIVATE, P. 18

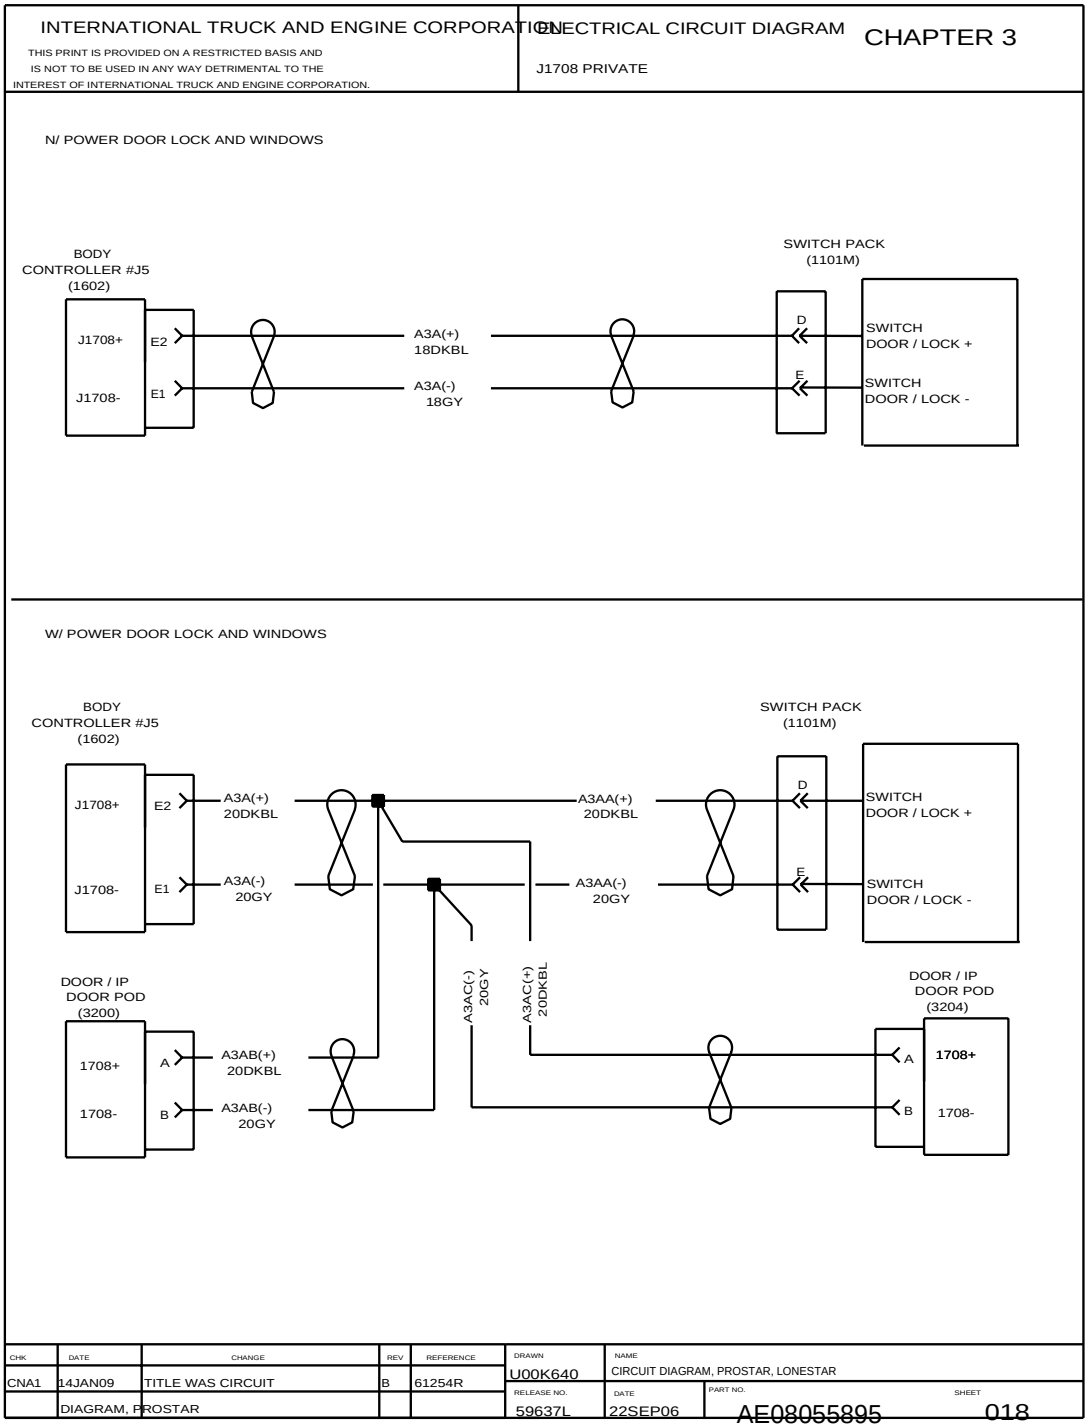


Figure 31 J1708 Private

https://truckmanualshub.com/

3.20. J1708 PUBLIC, P. 19

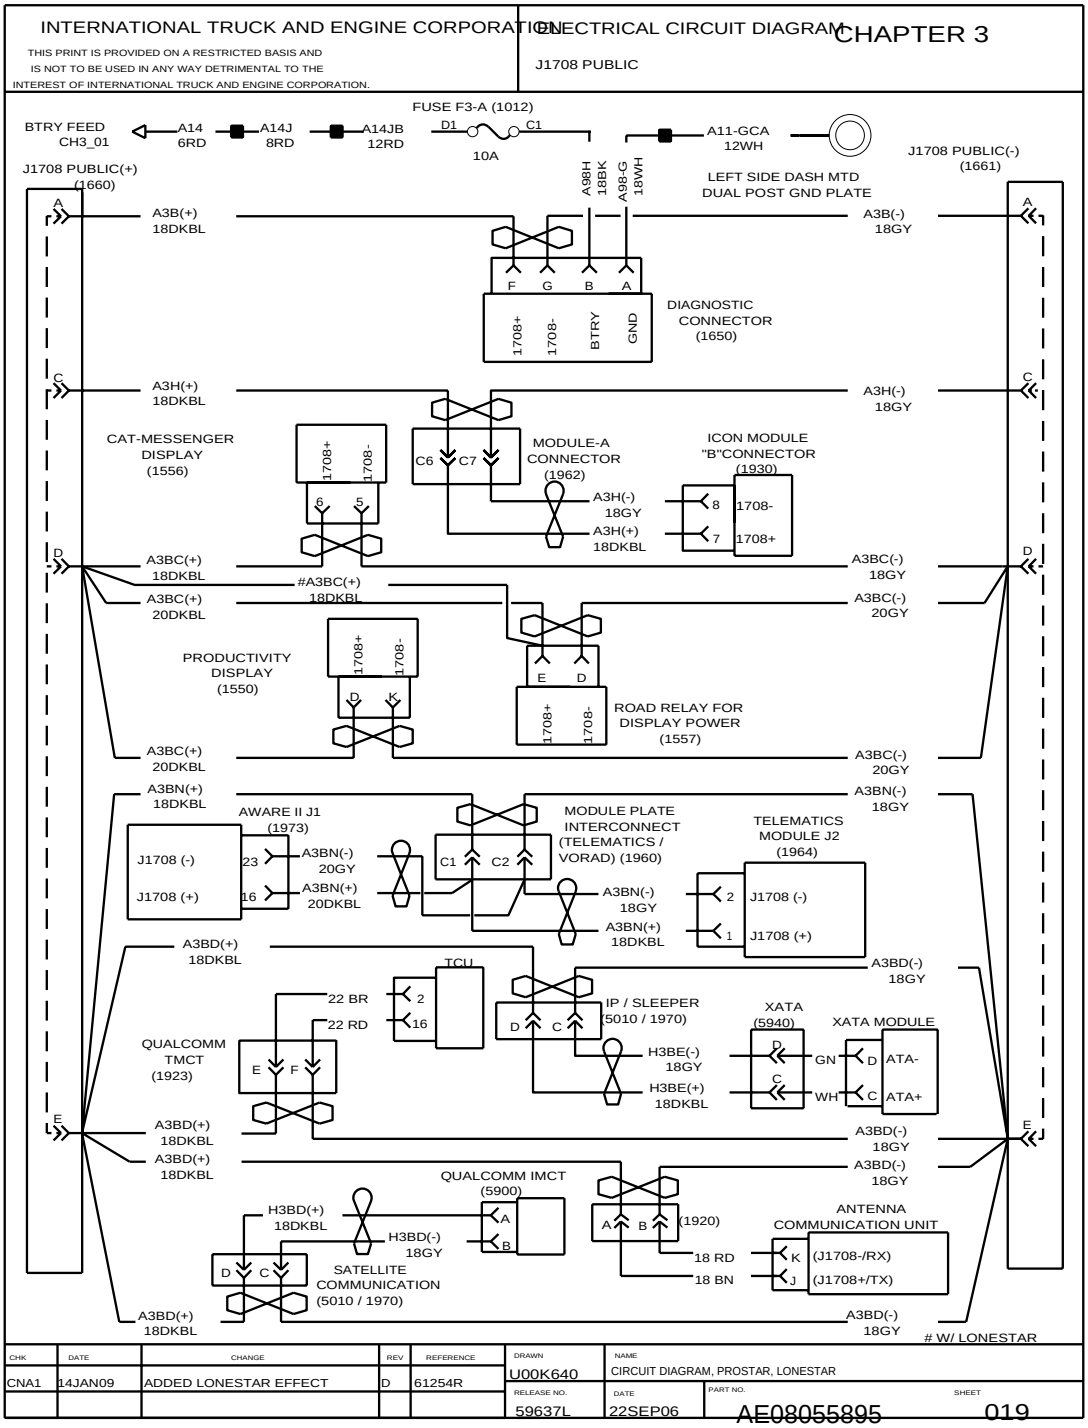


Figure 32 J1708 Public

https://truckmanualshub.com/

3.21. J1708 PUBLIC, P. 20

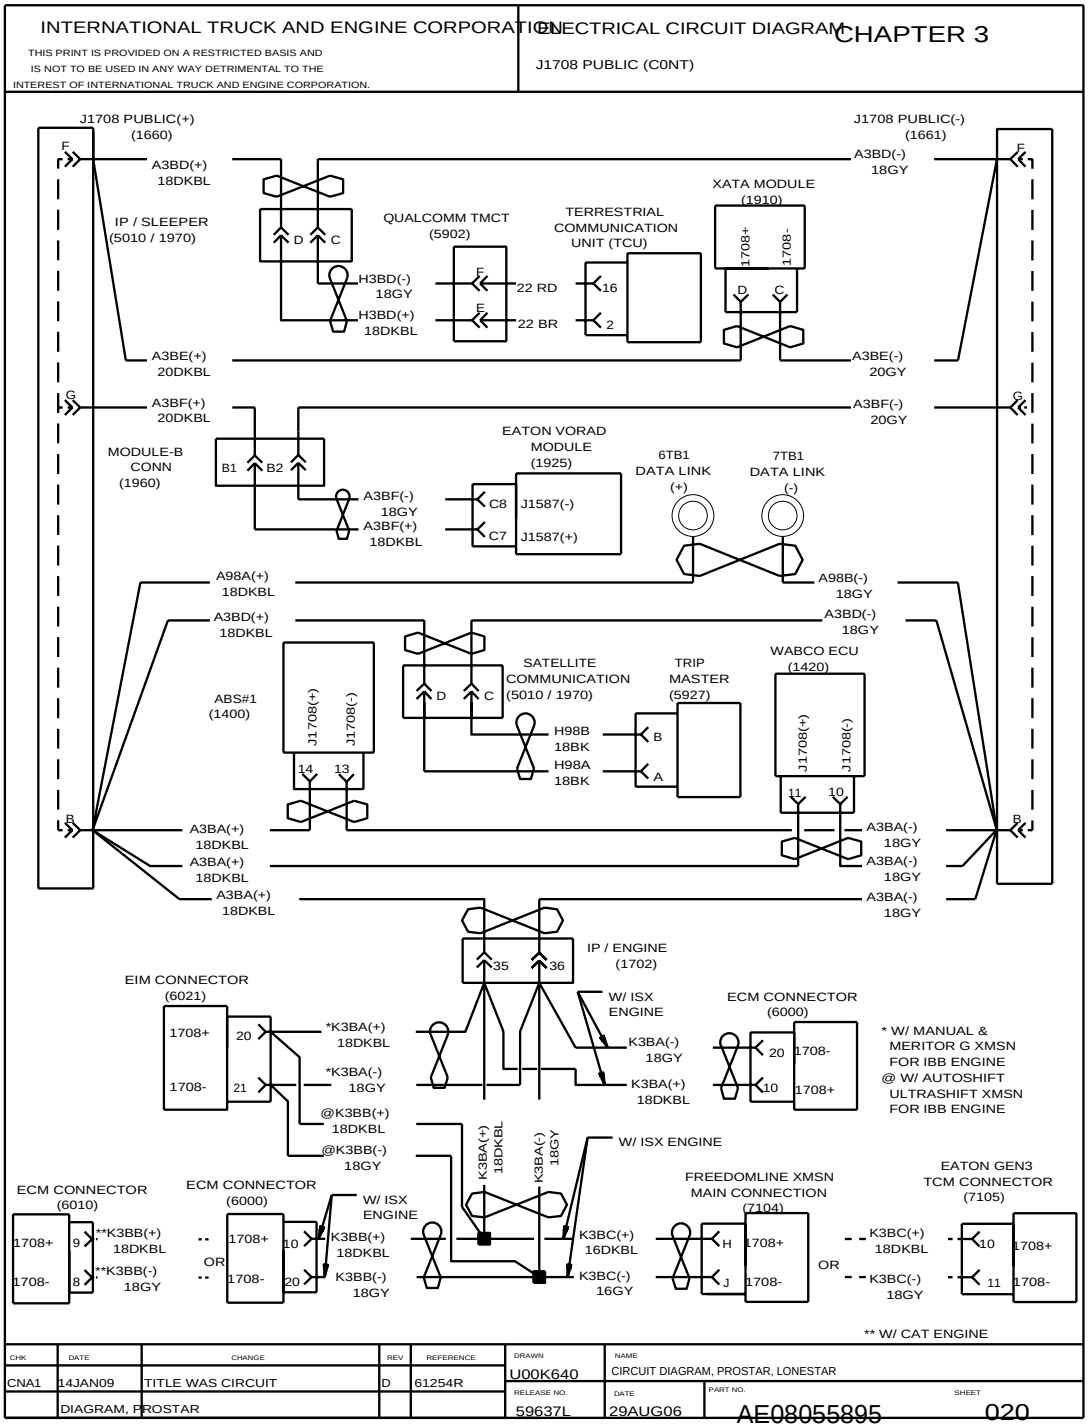


Figure 33 J1708 Public

https://truckmanualshub.com/

3.22. J1708 PUBLIC, P. 20A

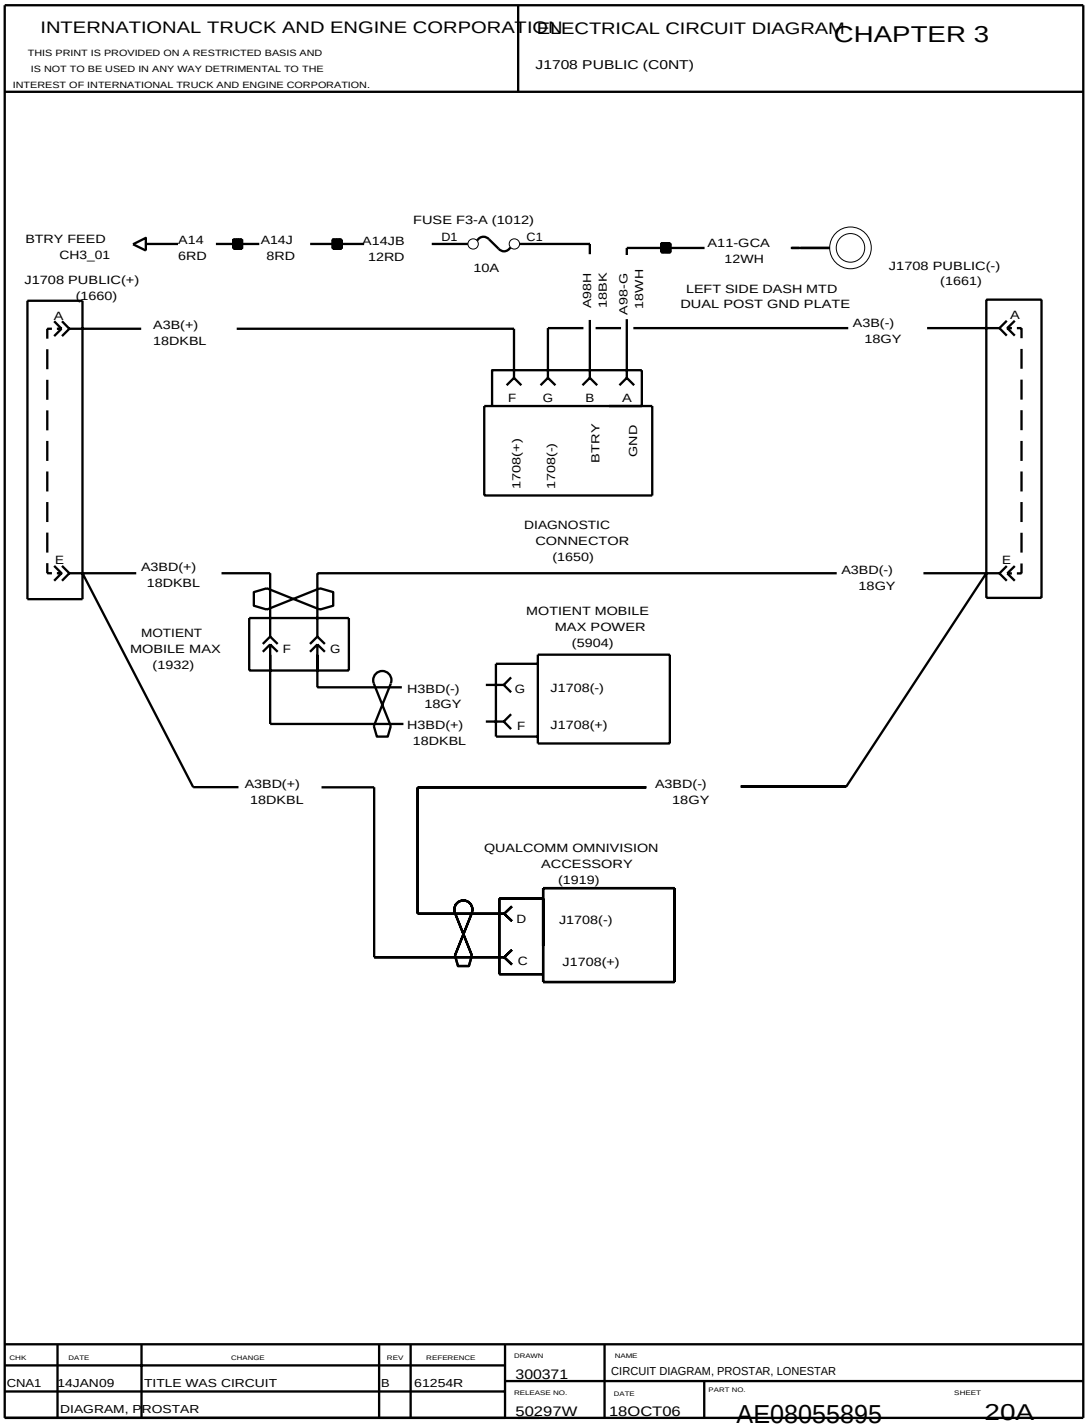


Figure 34 J1708 Public

https://truckmanualshub.com/

3.23. GROUND — CAB, P. 21

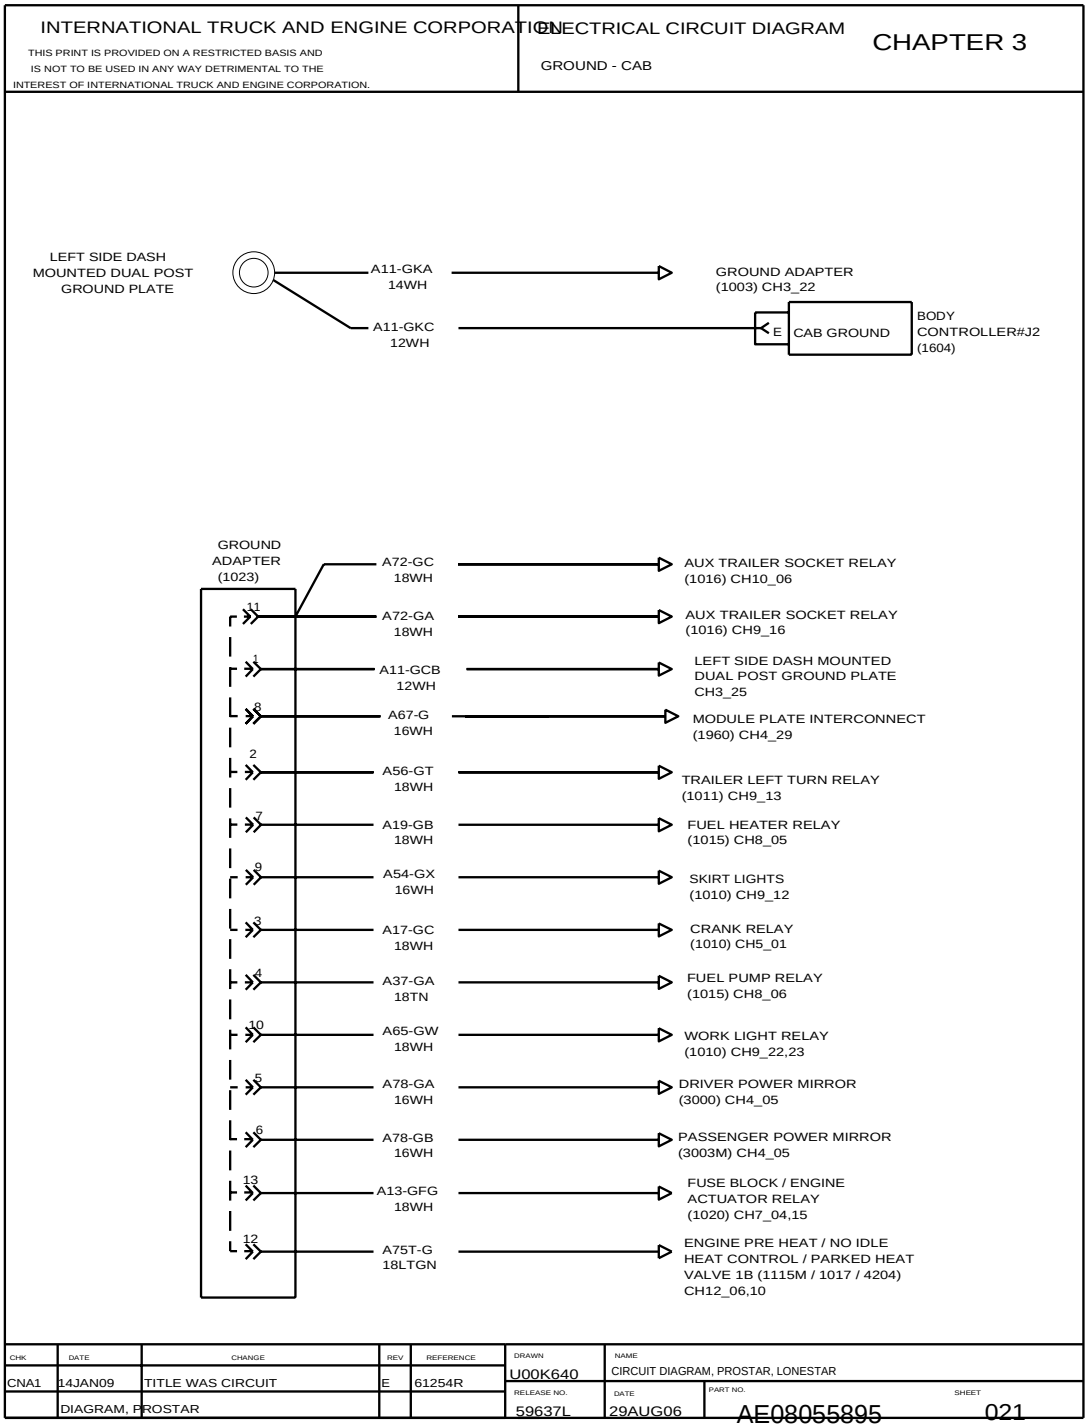


Figure 35 Ground — Cab

https://truckmanualshub.com/

3.24. GROUND — CAB, P. 22

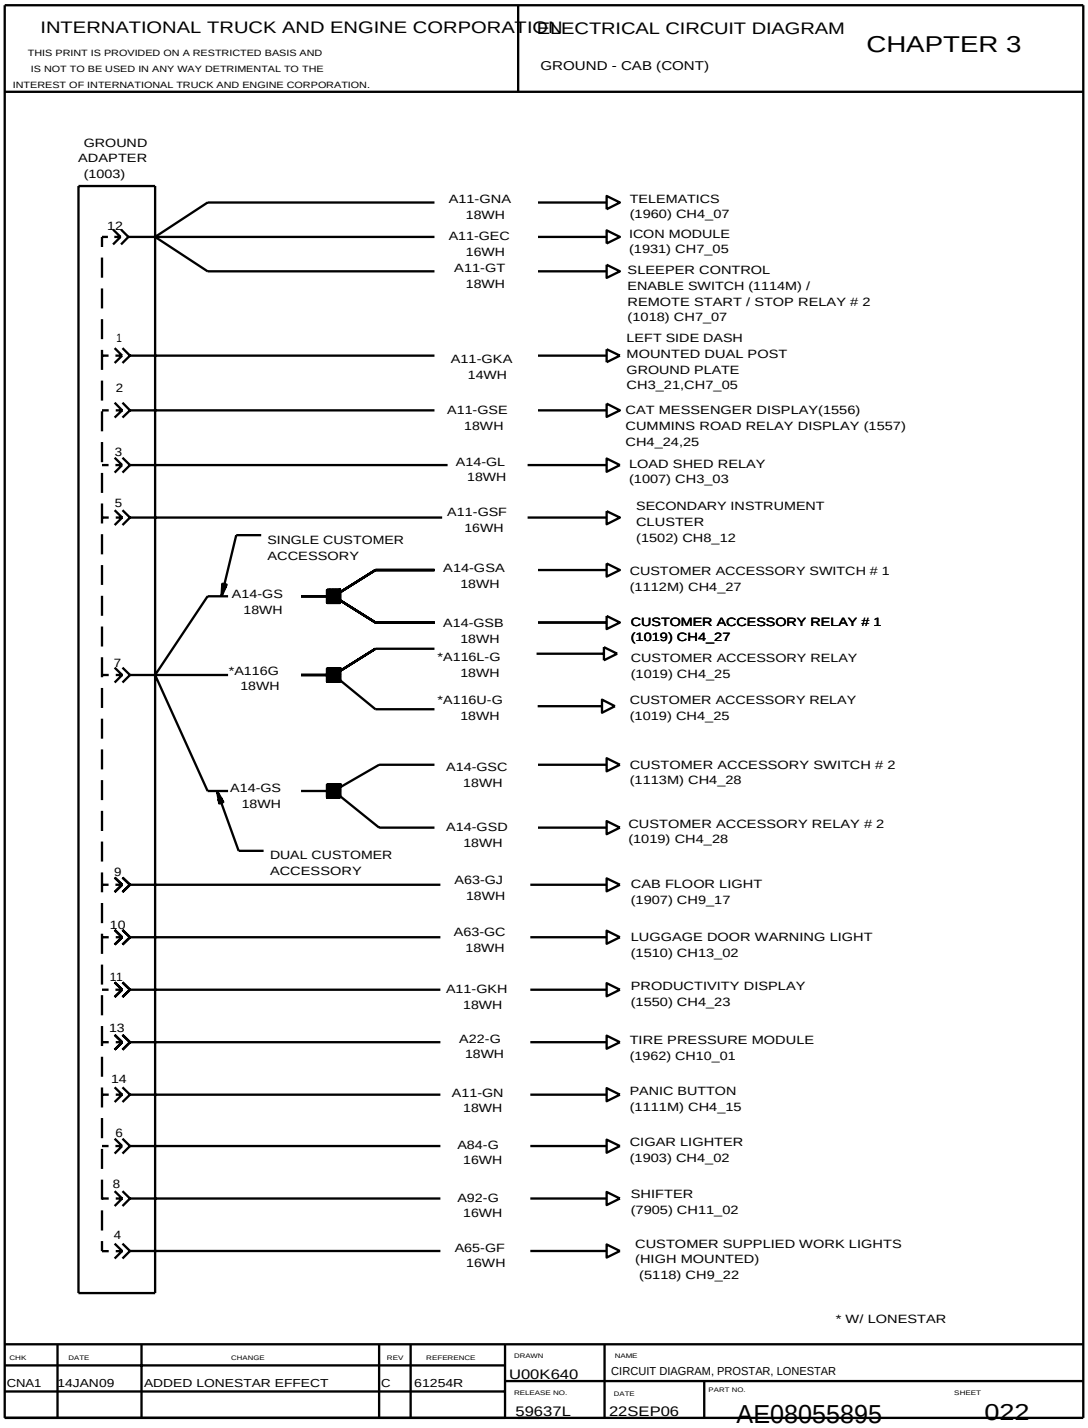


Figure 36 Ground — Cab

https://truckmanualshub.com/

3.25. GROUND — CAB, P. 23

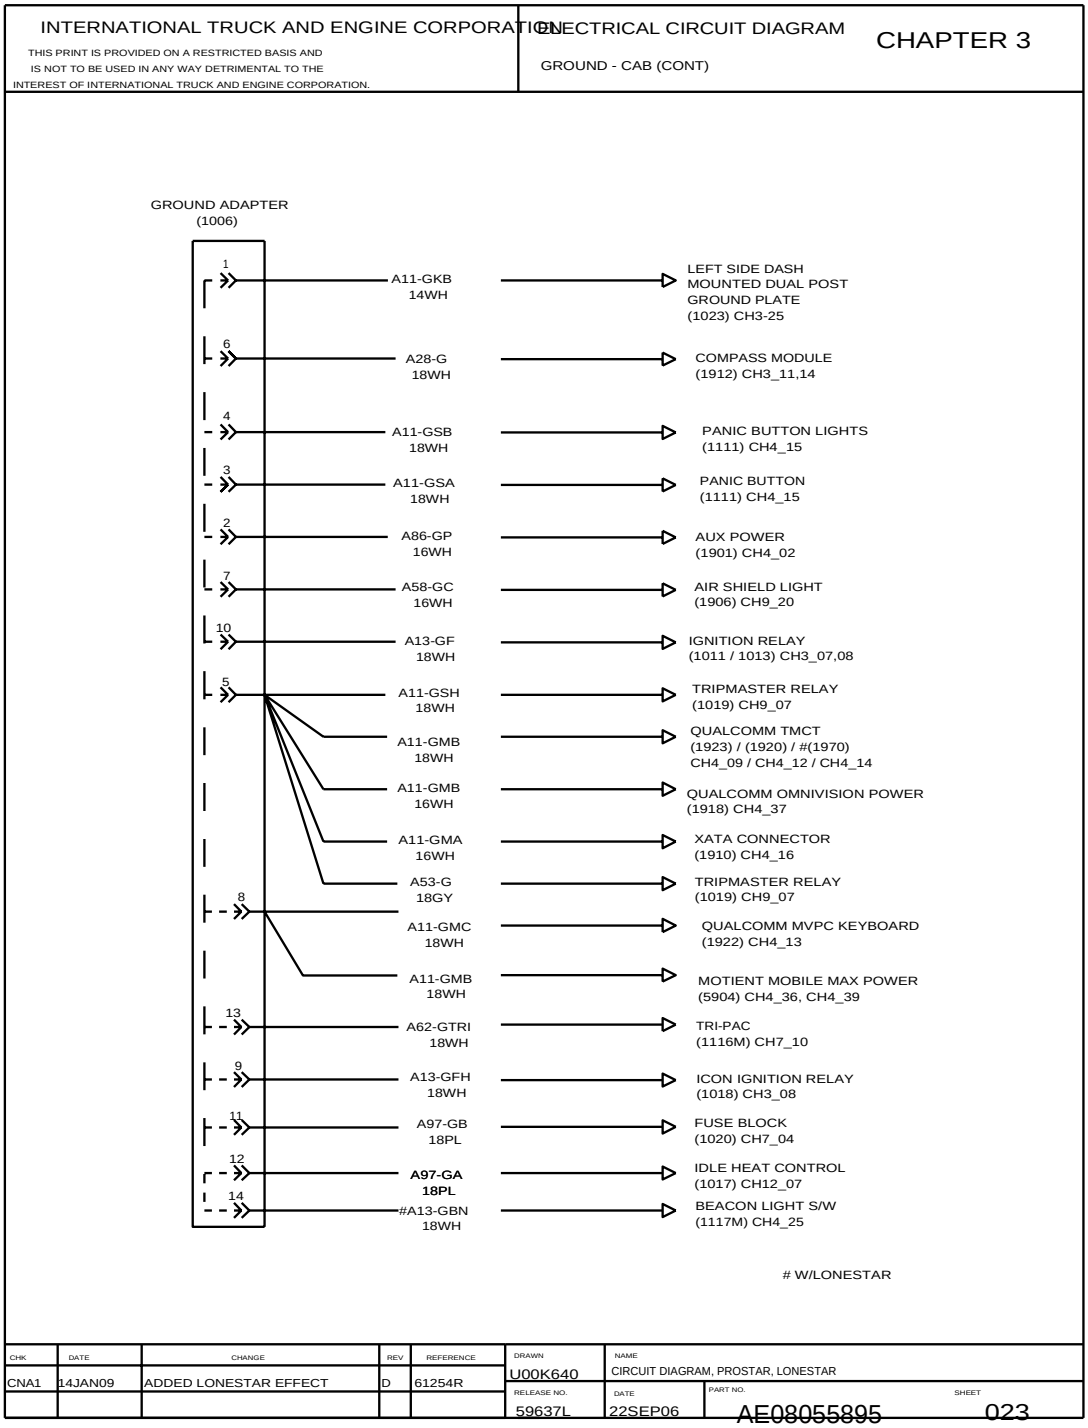


Figure 37 Ground — Cab

https://truckmanualshub.com/

3.26. GROUND — CAB, P. 24

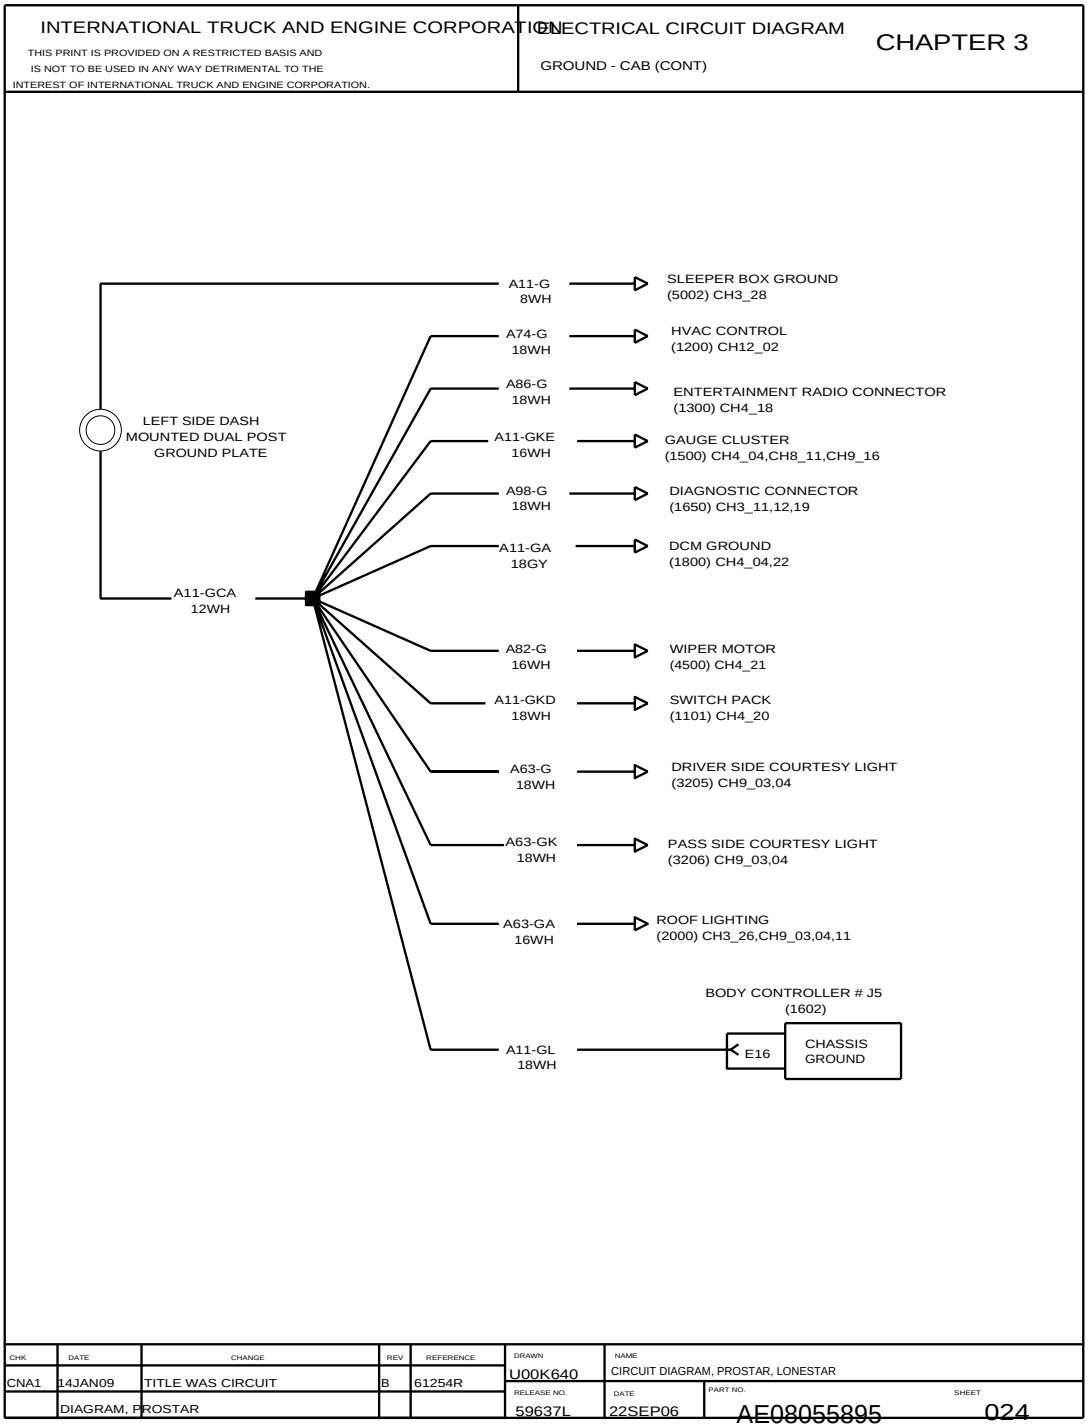


Figure 38 Ground — Cab

https://truckmanualshub.com/

3.27. GROUND — CAB, P. 25

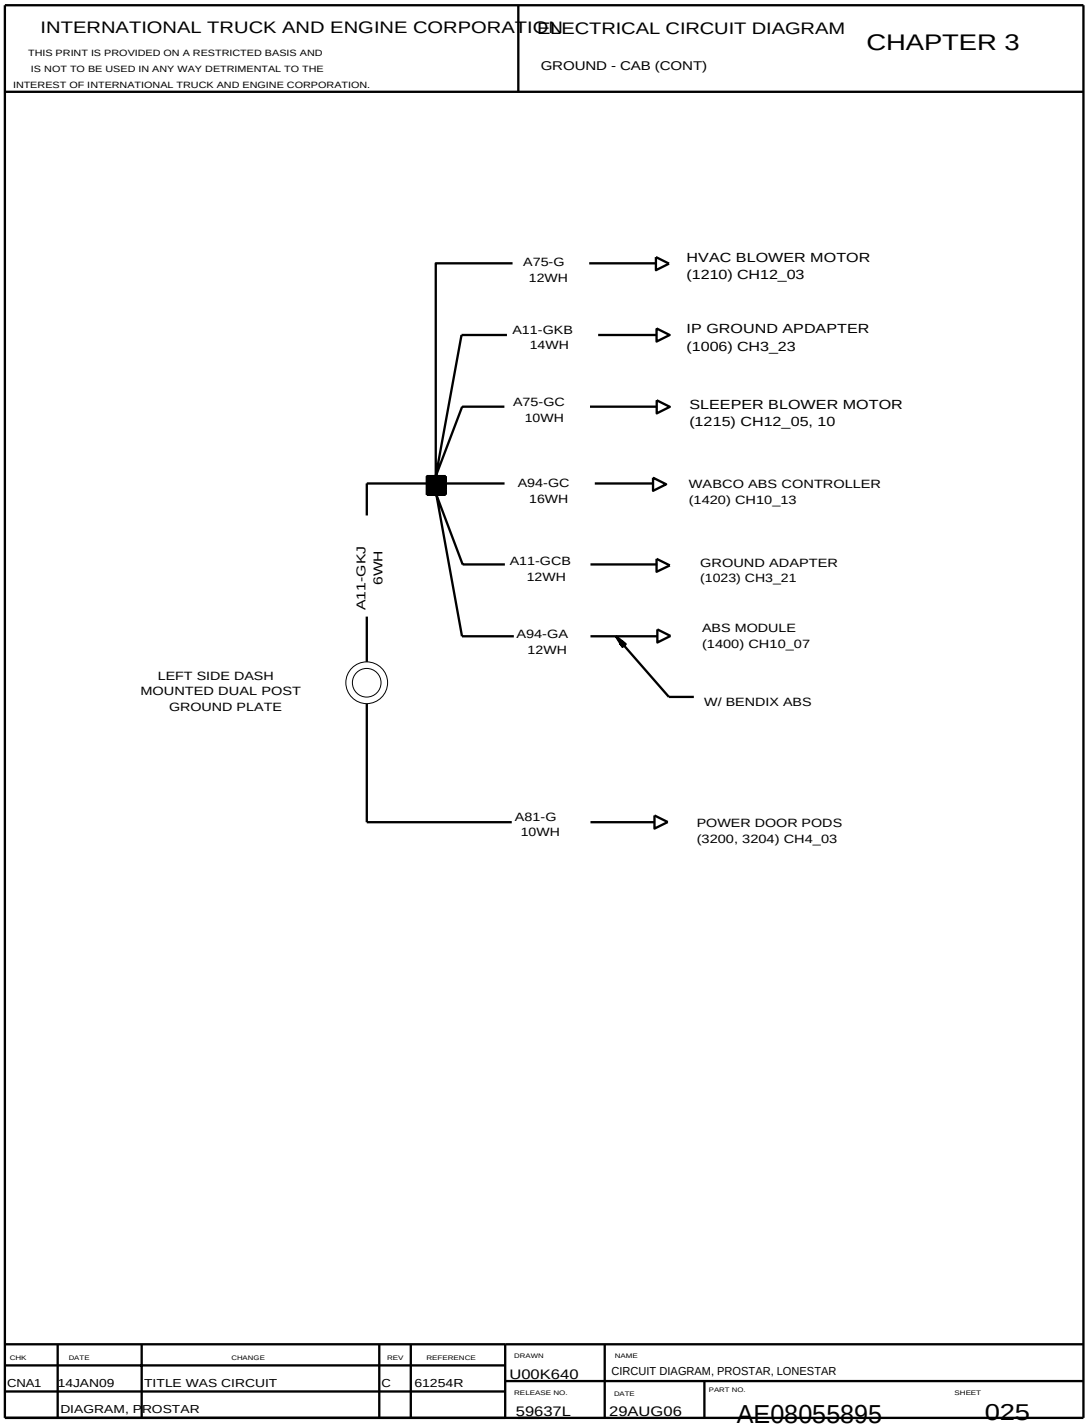


Figure 39 Ground — Cab

https://truckmanualshub.com/

3.28. GROUND — CAB, P. 26

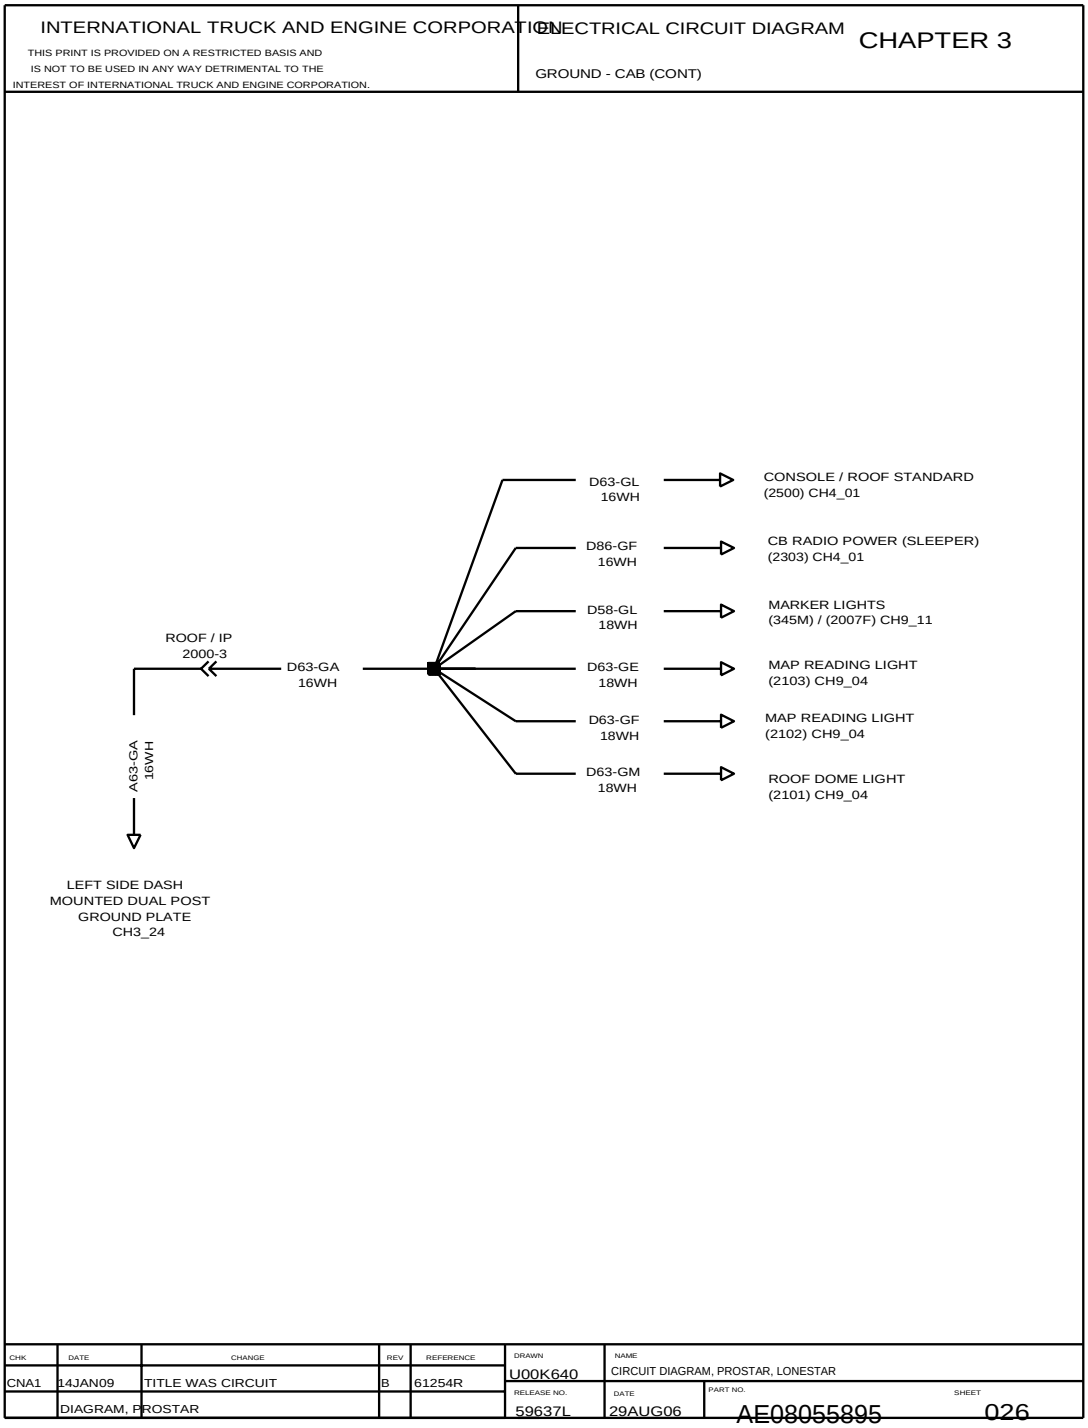


Figure 40 Ground — Cab

https://truckmanualshub.com/

3.29. GROUND — CHASSIS, P. 27

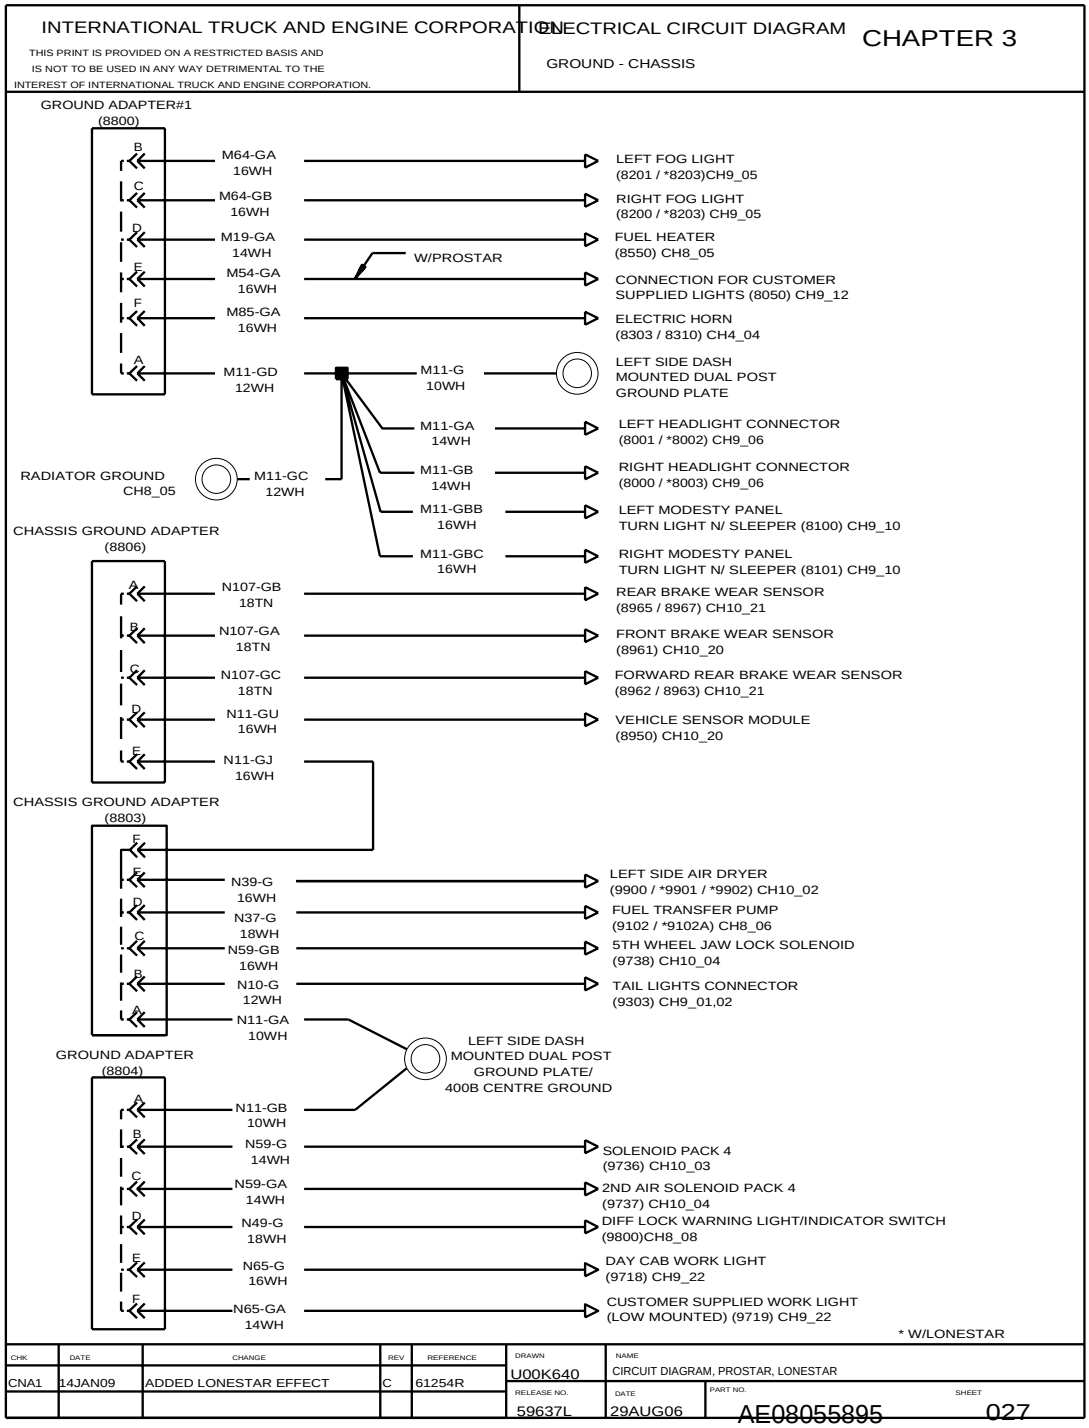


Figure 41 Ground — Chassis

https://truckmanualshub.com/

3.30. GROUND — SLEEPER, P. 28

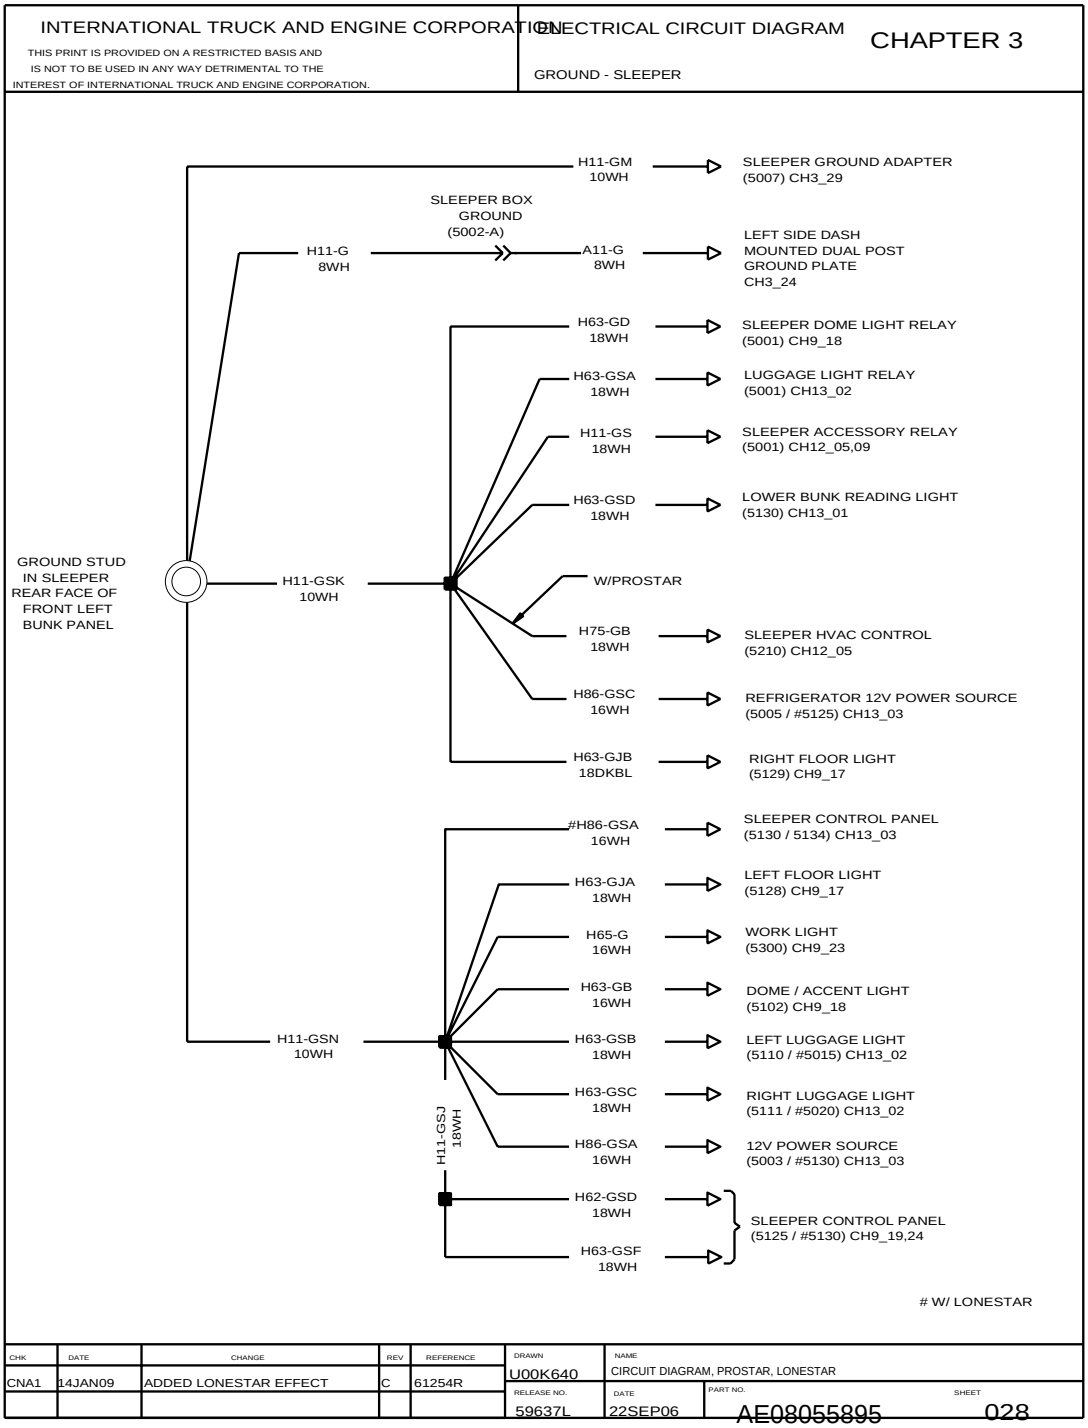


Figure 42 Ground — Sleeper

https://truckmanualshub.com/

3.31. GROUND — SLEEPER, P. 29

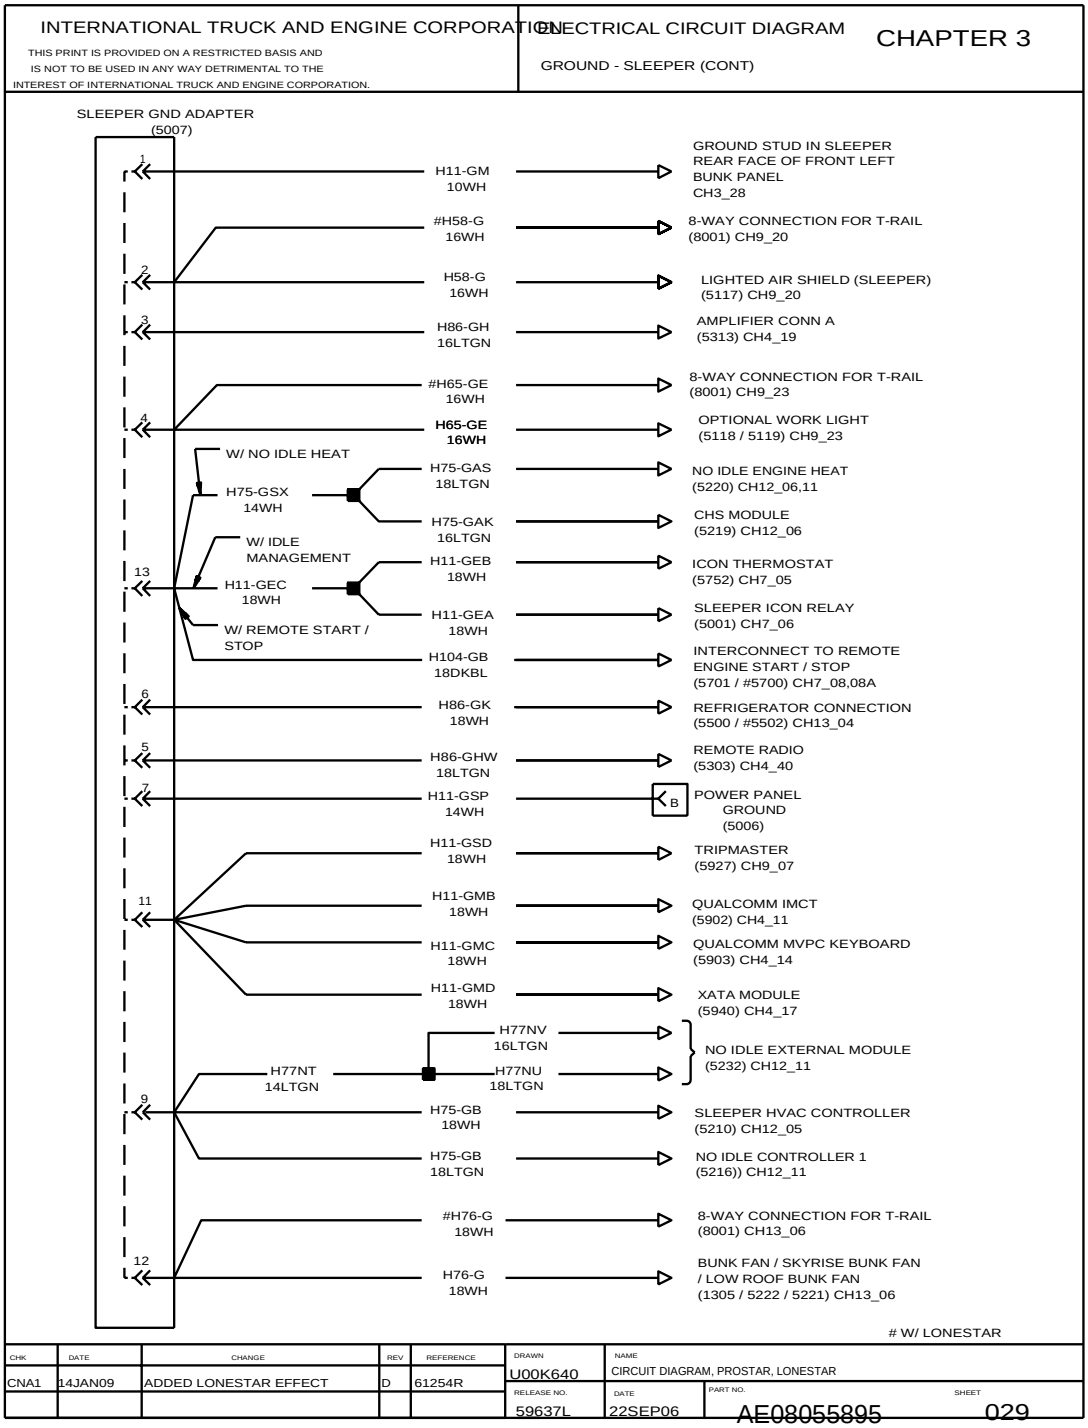


Figure 43 Ground — Sleeper

https://truckmanualshub.com/

3.32. GROUND — SLEEPER, P. 29A

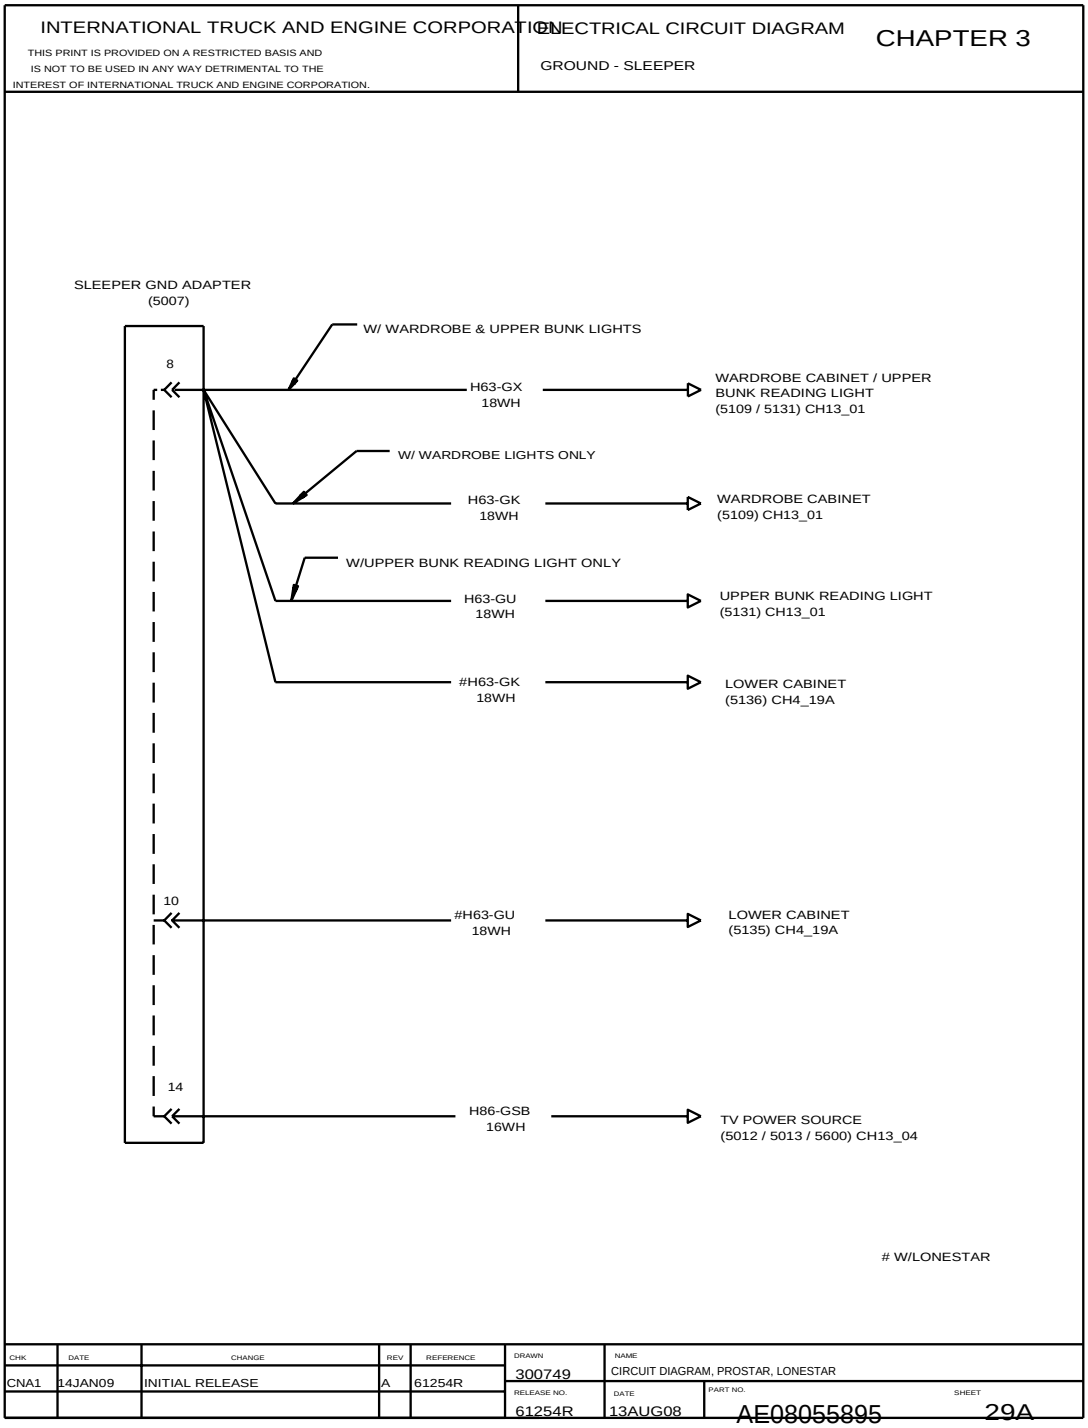


Figure 44 Ground — Sleeper

https://truckmanualshub.com/

3.33. ENGINE GROUND — IBB ENGINE, P. 30

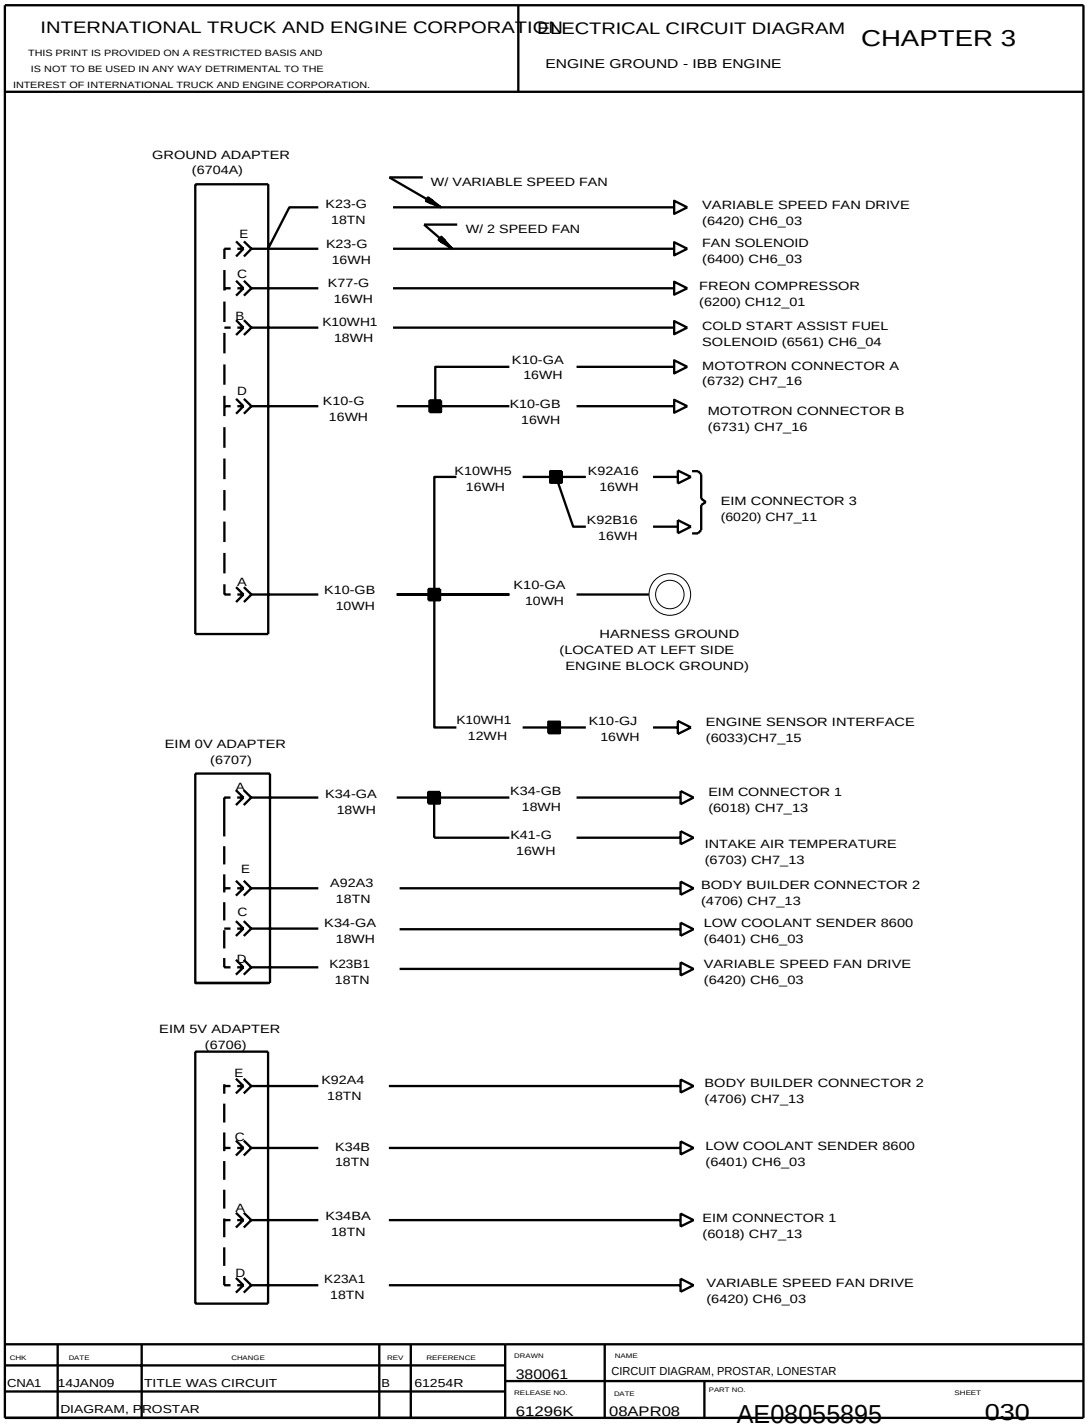


Figure 45 Engine Ground — IBB Engine

https://truckmanualshub.com/

3.34. J1939 DATA LINK — IBB ENGINE, P. 31

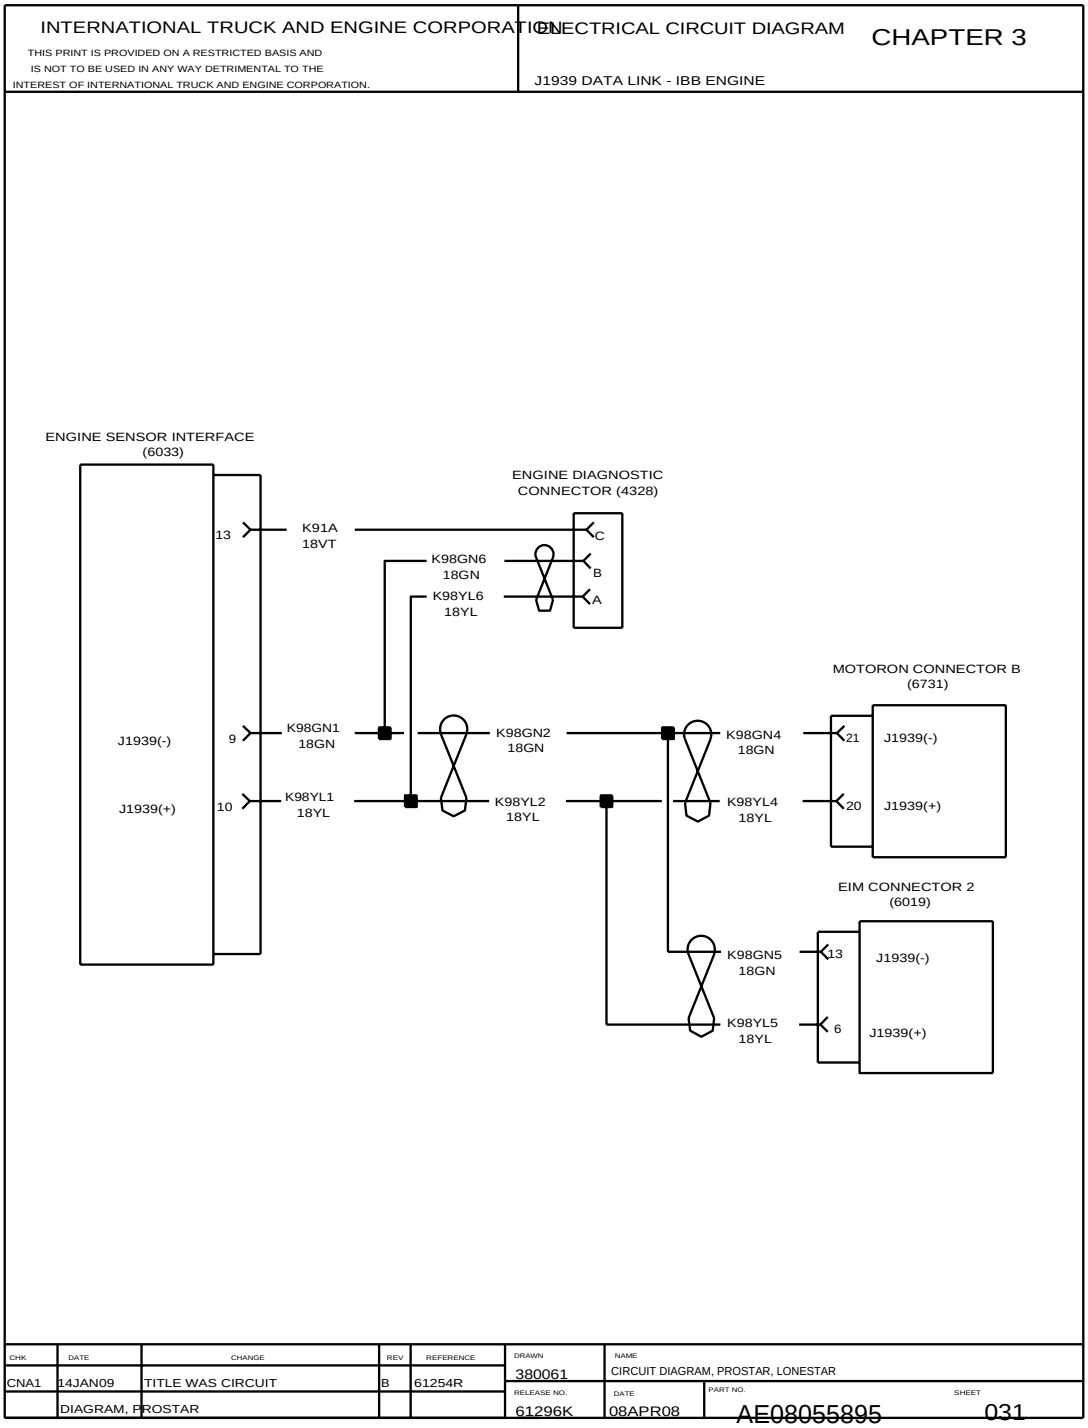


Figure 46 J1939 Data Link — IBB Engine

https://truckmanualshub.com/

4. CAB ACCESSORIES (CHAPTER 4)

4.1. CB POWER RADIO, P. 1

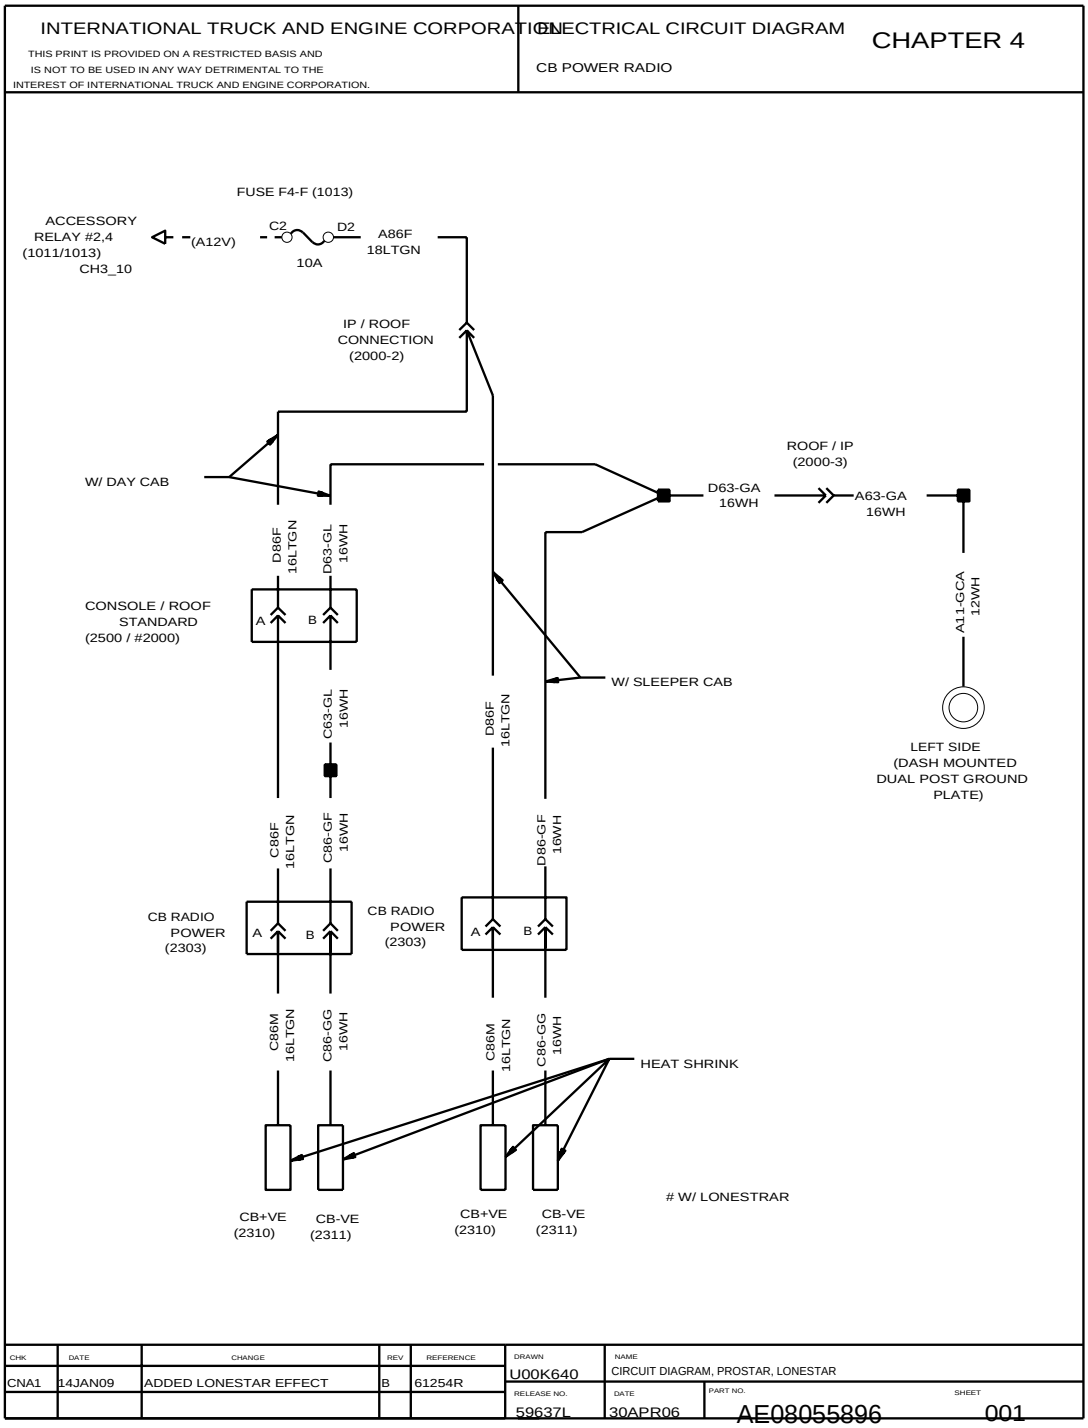


Figure 47 CB Power Radio

https://truckmanualshub.com/

4.2. CIGAR LIGHTER AND TEMPERATURE DISPLAY, P. 2

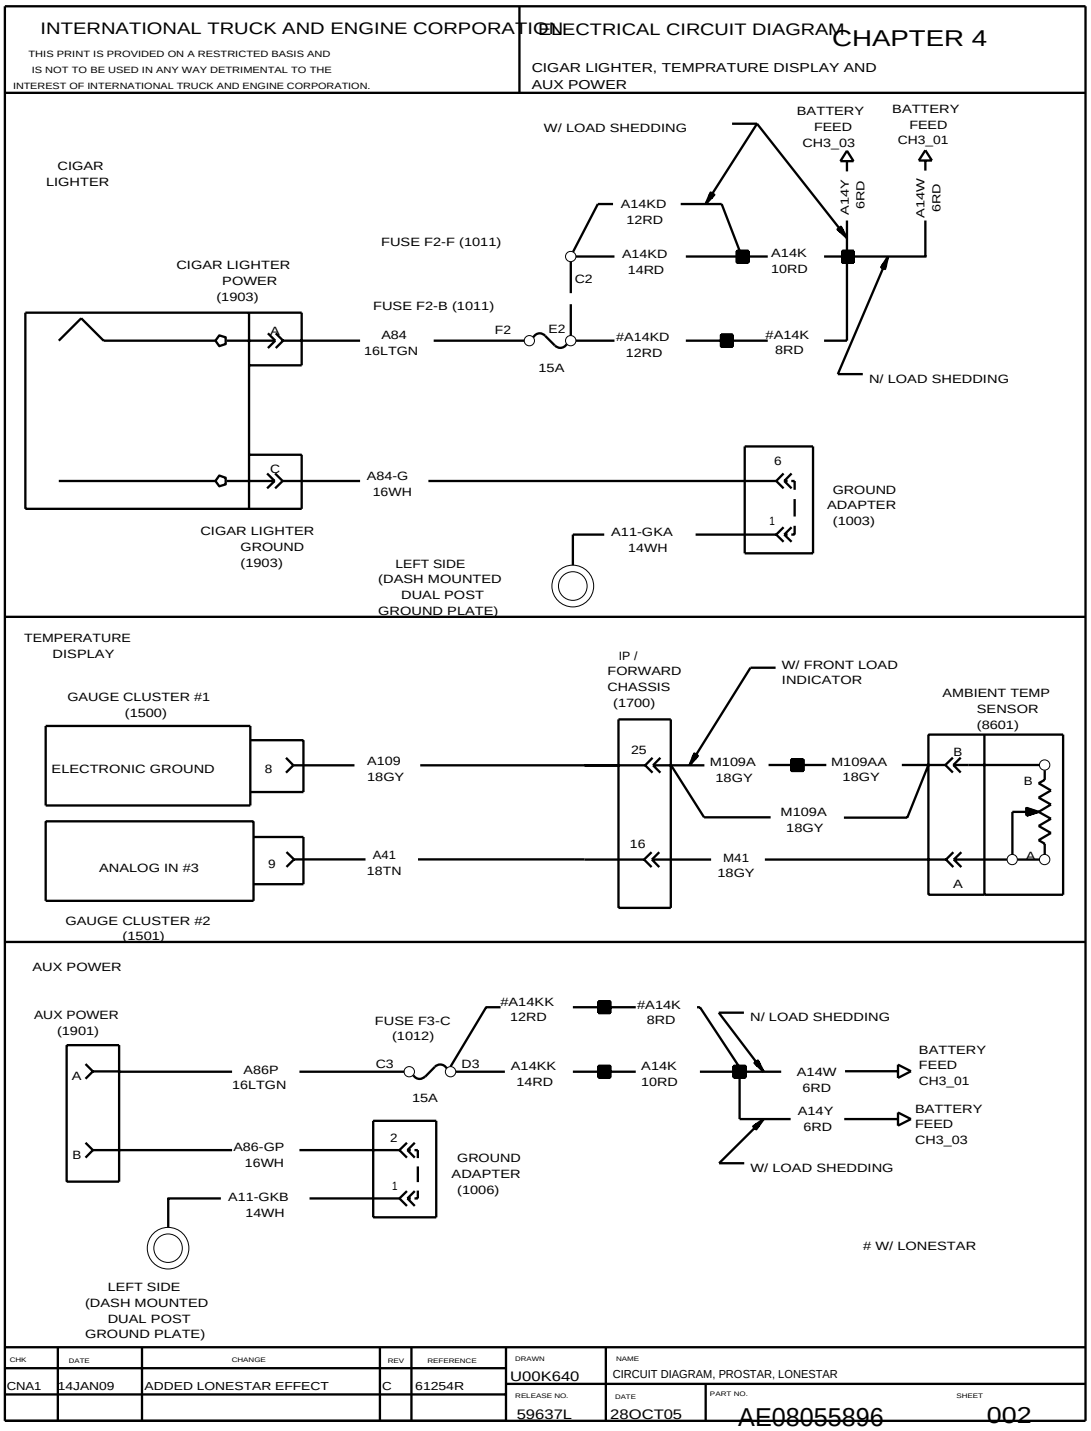


Figure 48 Cigar Lighter and Temperature Display

https://truckmanualshub.com/

4.3. ELECTRIC WINDOWS AND DOOR LOCKS, P. 3

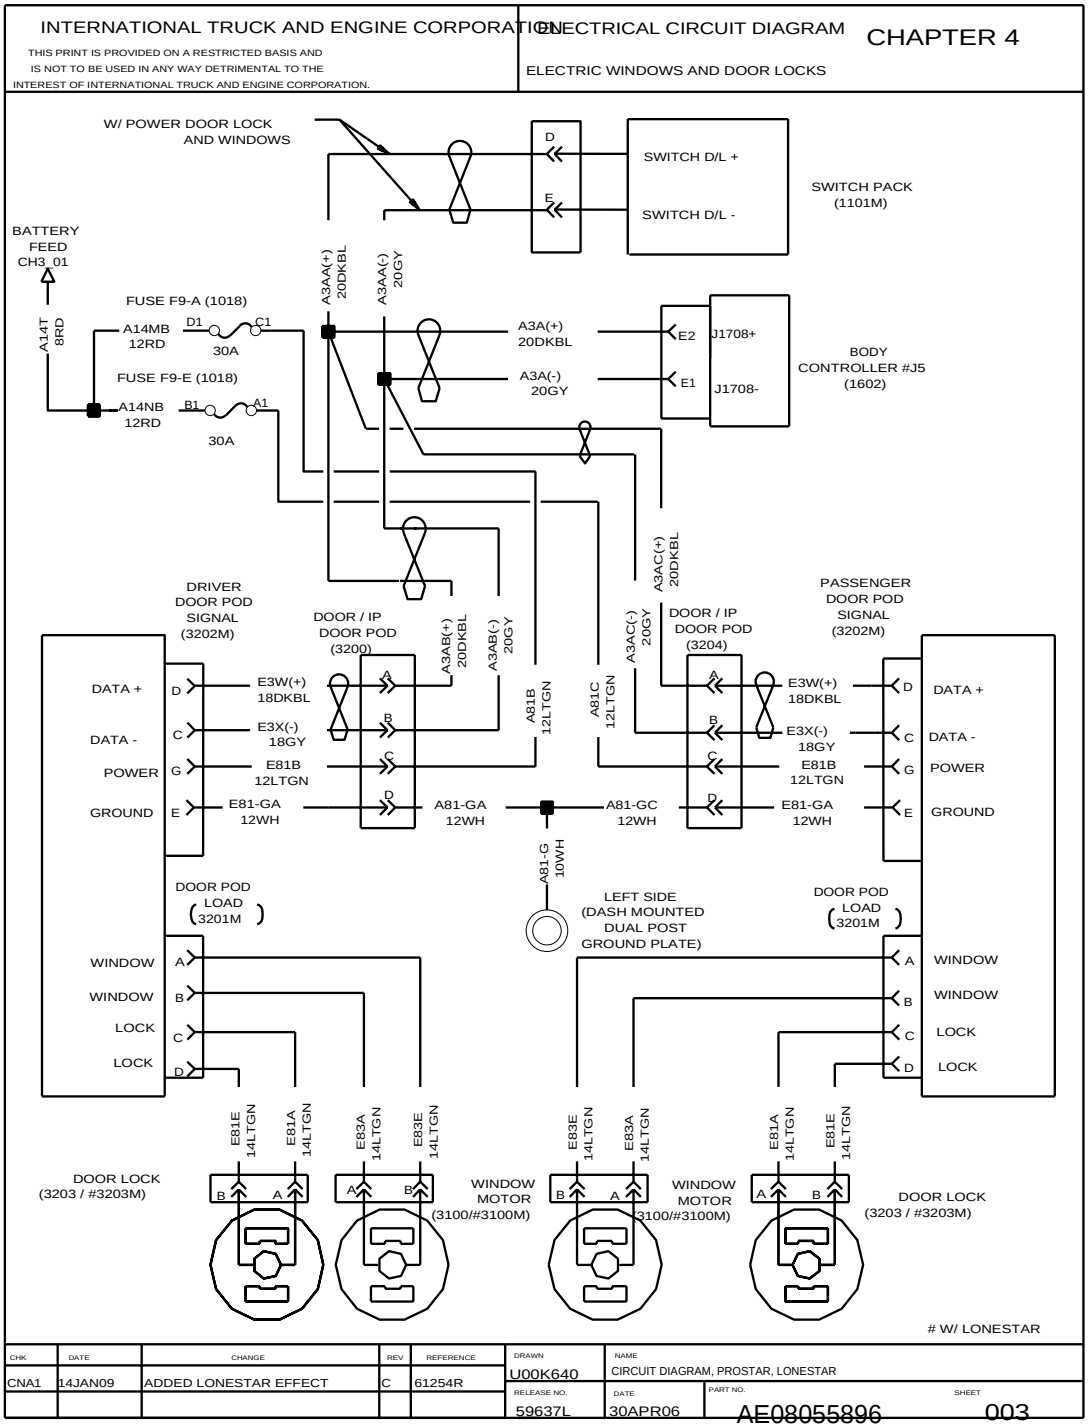


Figure 49 Electric Windows and Door Locks

https://truckmanualshub.com/

4.4. ELECTRIC HORN, P. 4

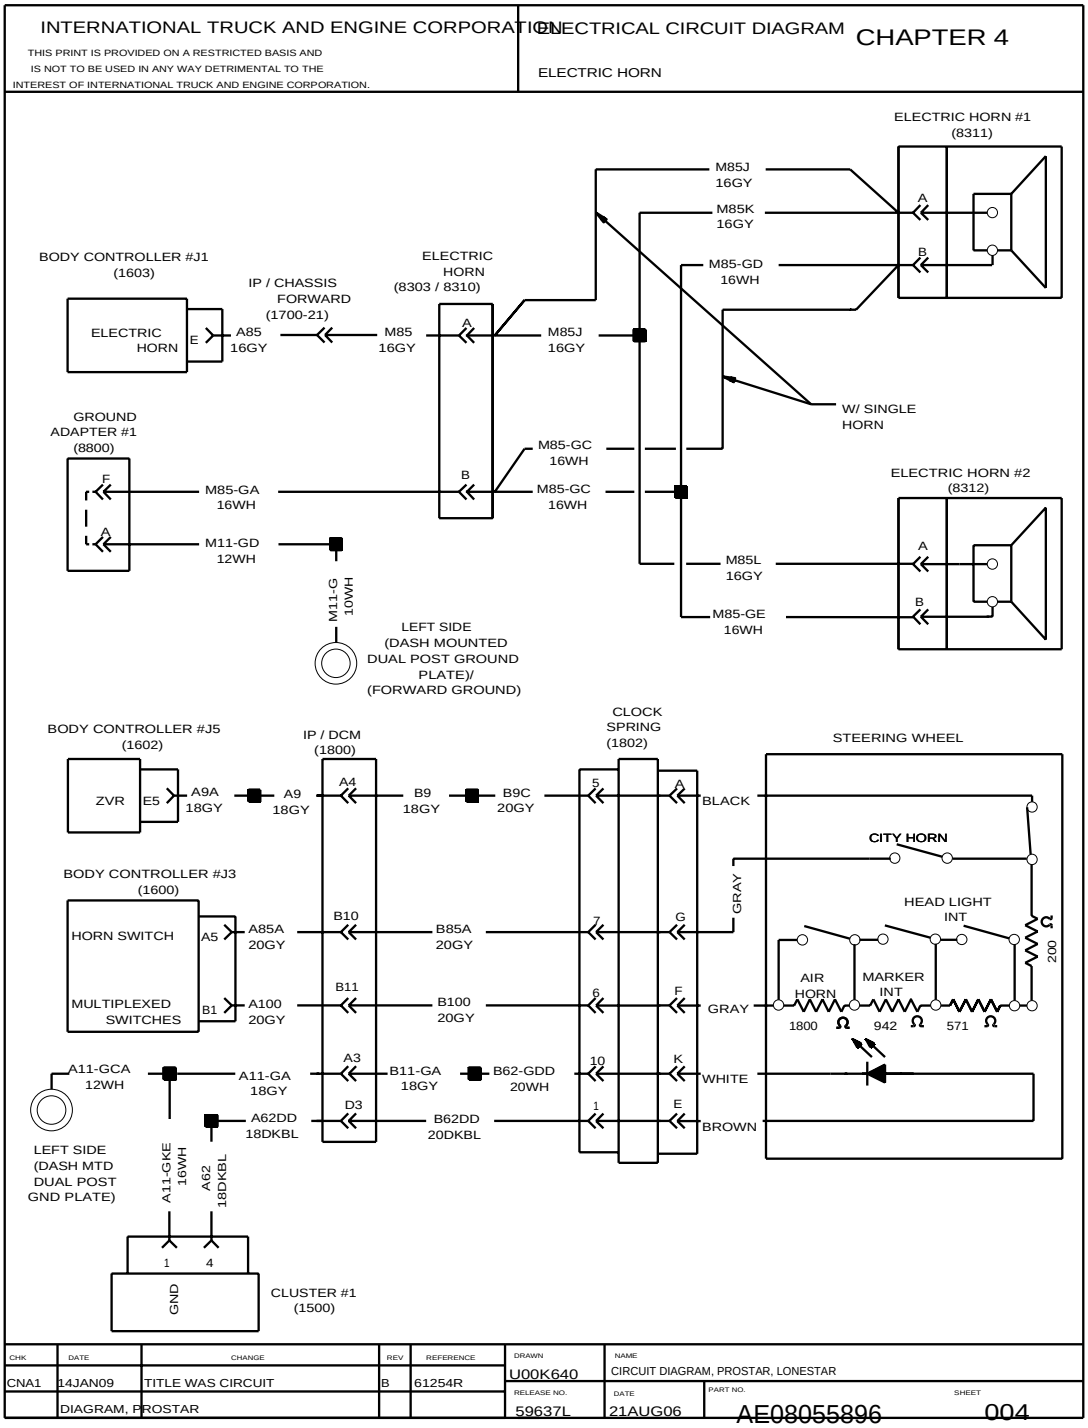


Figure 50 Electric Horn

https://truckmanualshub.com/

4.5. MIRRORS HEATED AND LIGHTED, P. 5

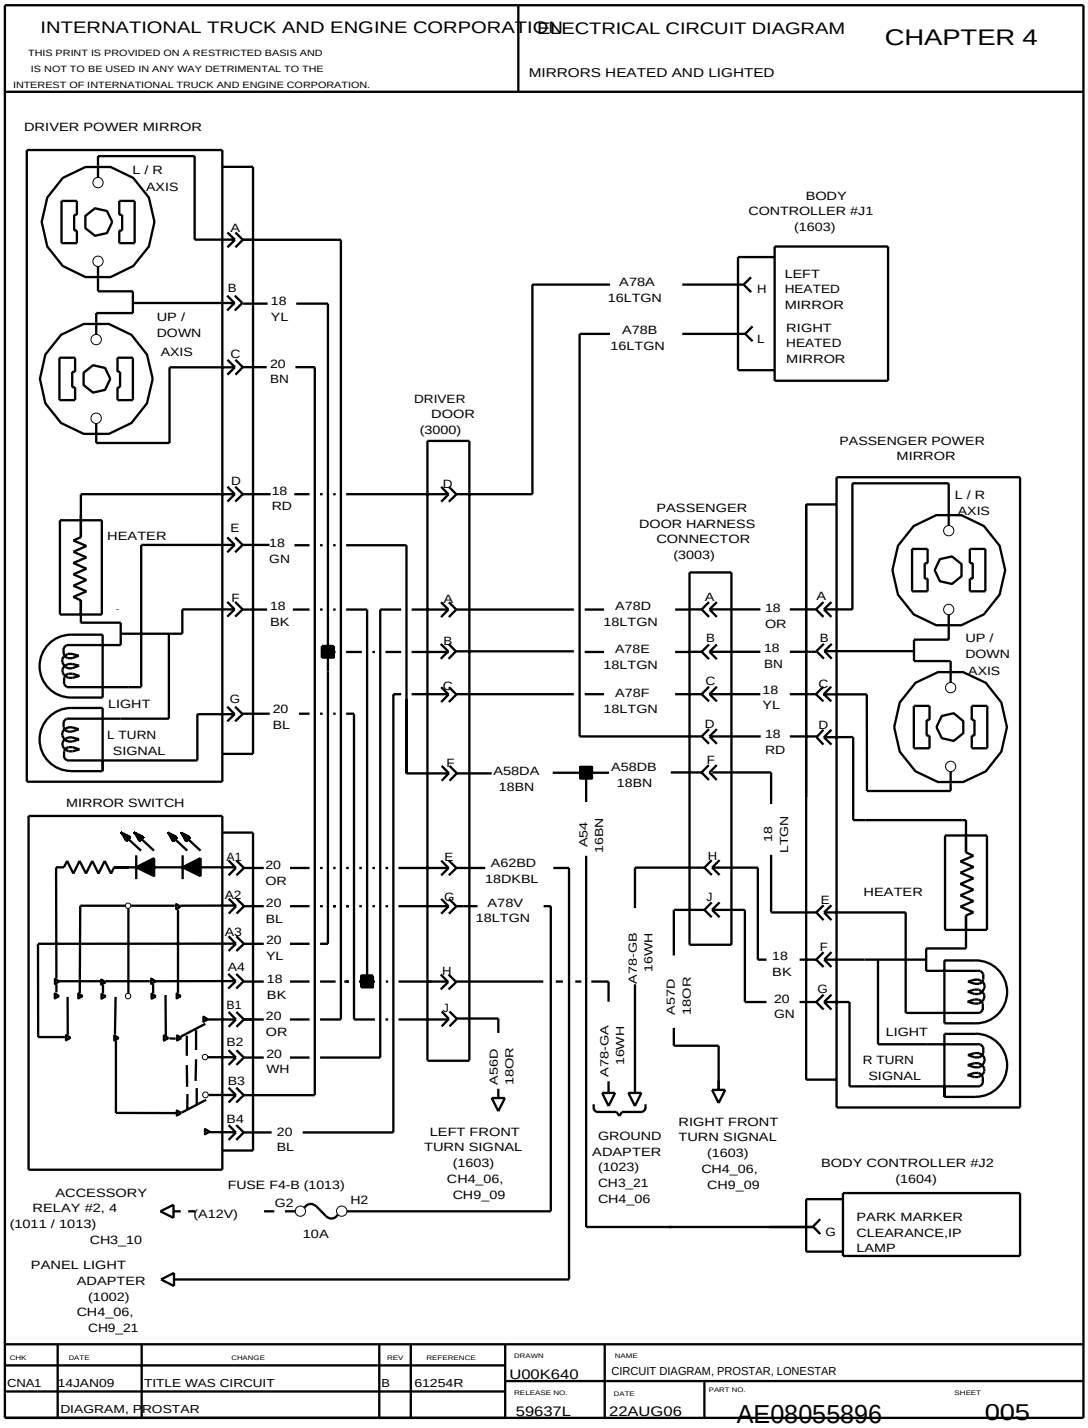


Figure 51 Mirrors Heated and Lighted

https://truckmanualshub.com/

4.6. MIRRORS HEATED AND LIGHTED, P. 6

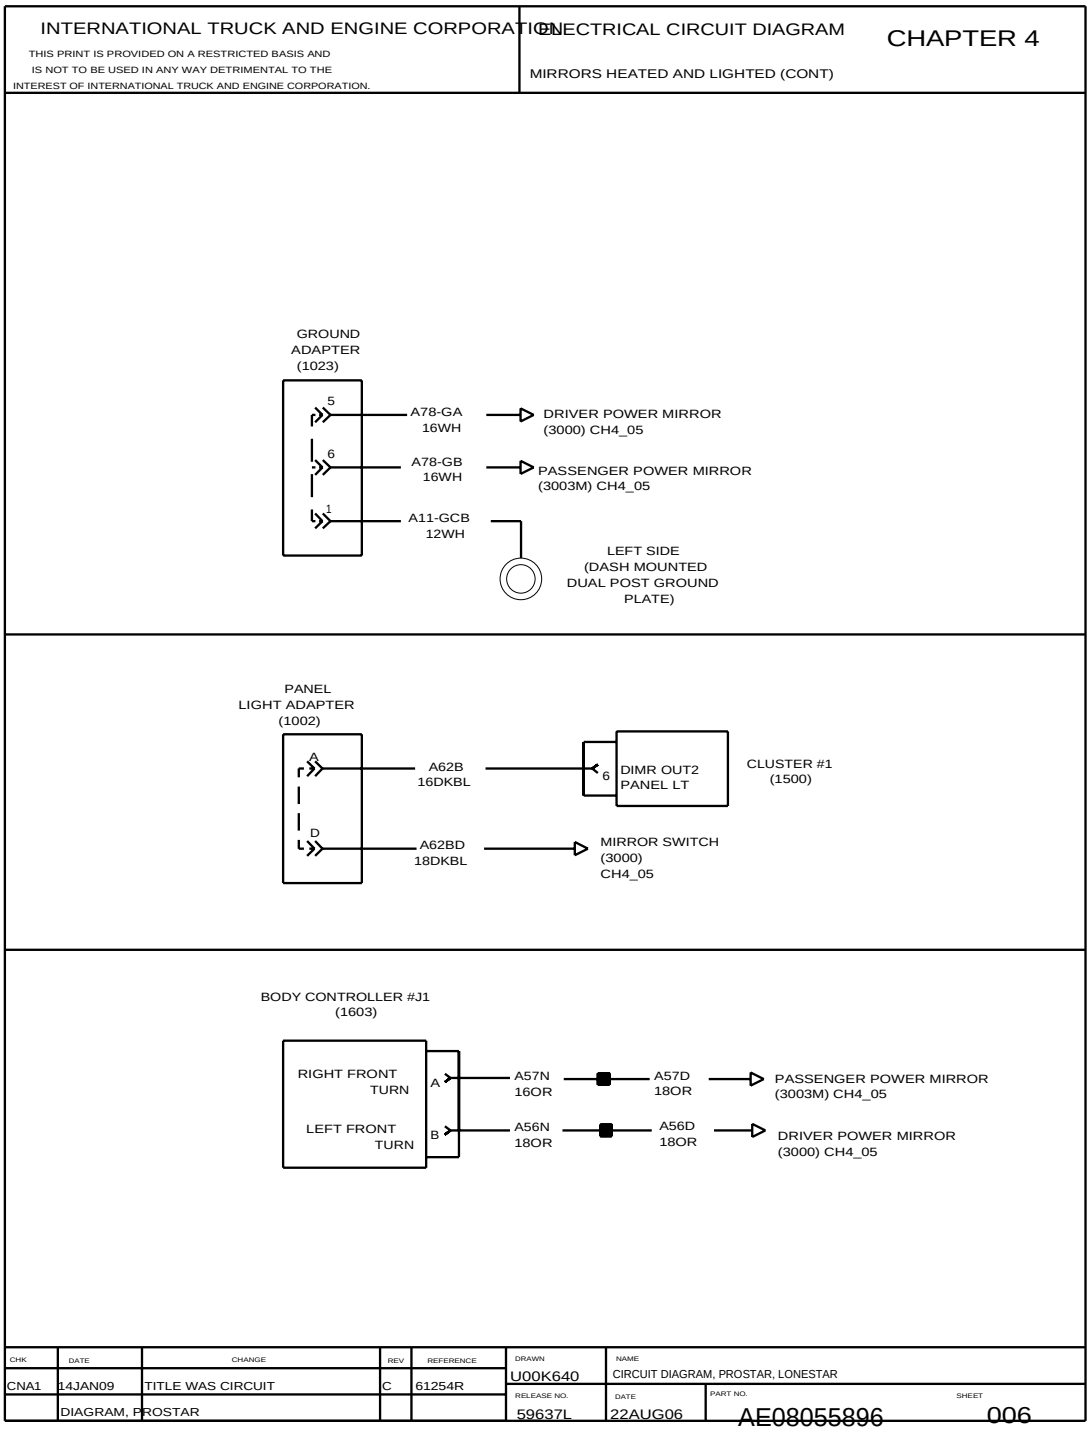


Figure 52 Mirrors Heated and Lighted

https://truckmanualshub.com/

4.7. TELEMATICS, P. 7

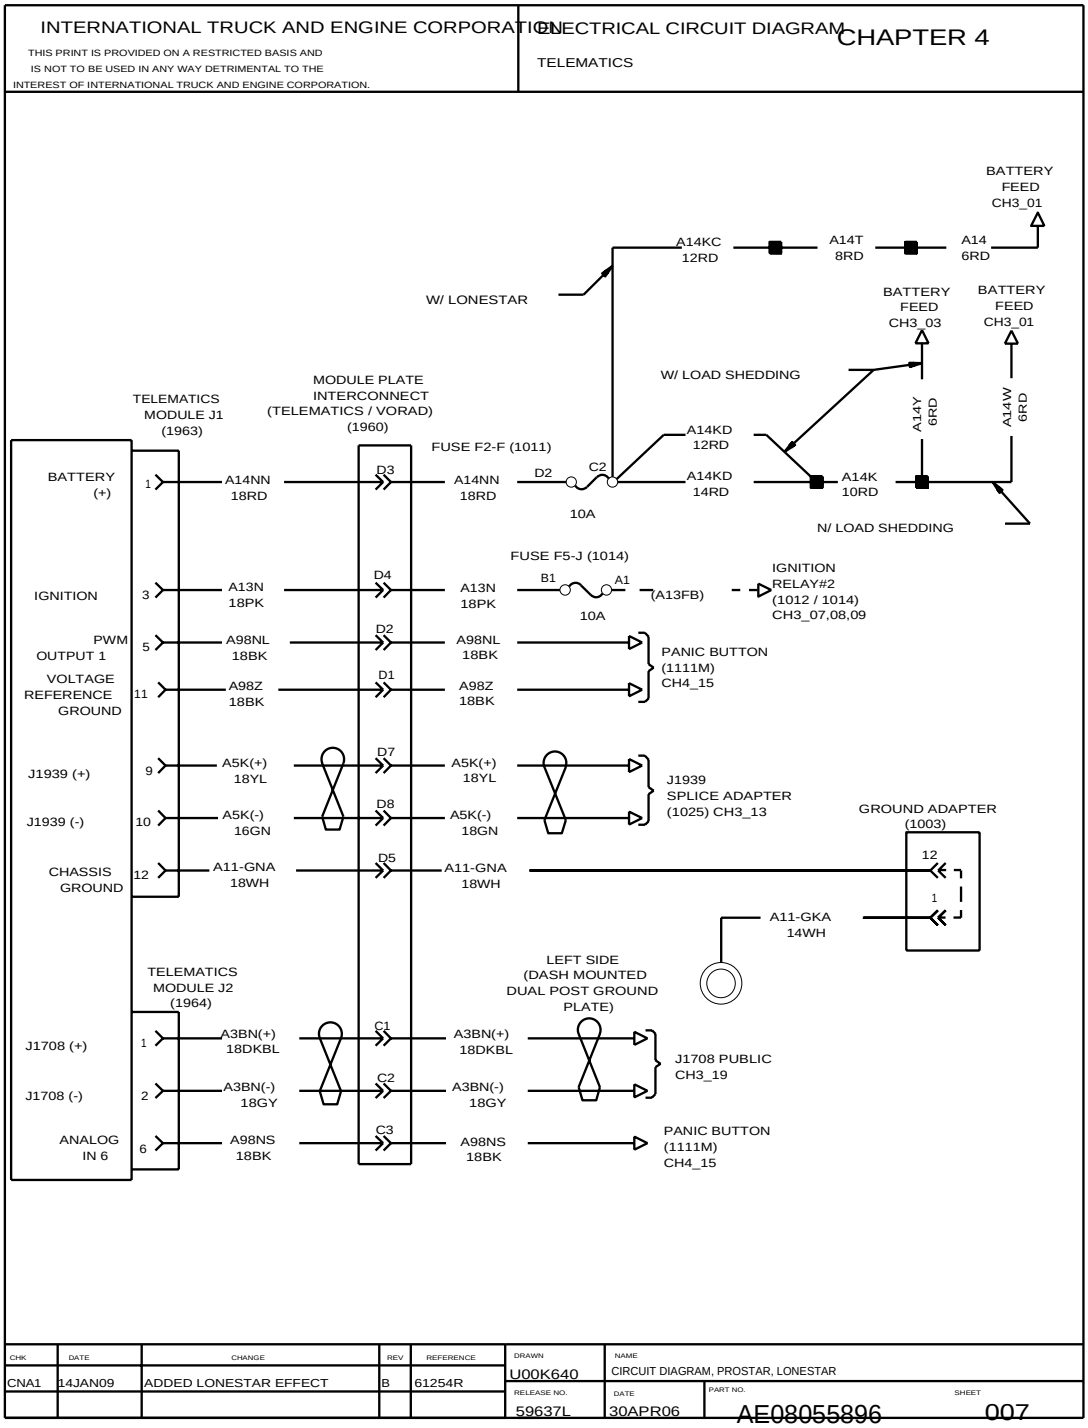


Figure 53 Telematics

https://truckmanualshub.com/

4.8. SATELLITE COMMUNICATION SYSTEM — QUALCOMM TMCT DAYCAB, P. 8

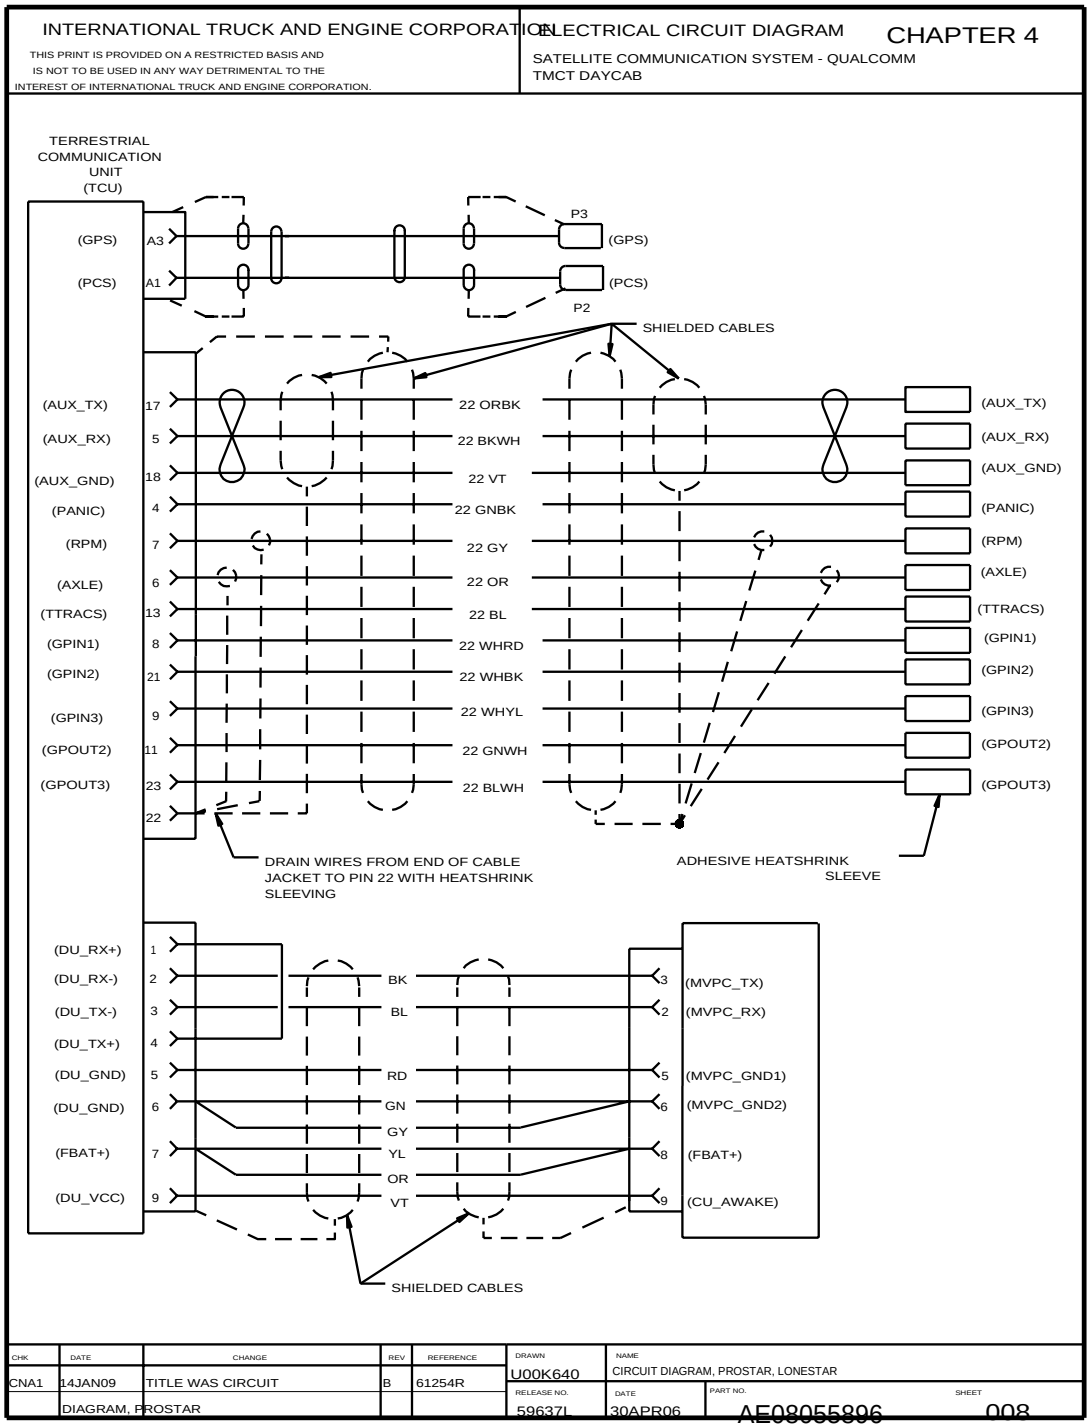


Figure 54 Satellite Communication System — Qualcomm TMCT Daycab

https://truckmanualshub.com/

4.9. SATELLITE COMMUNICATION SYSTEM — QUALCOMM TMCT DAYCAB, P. 9

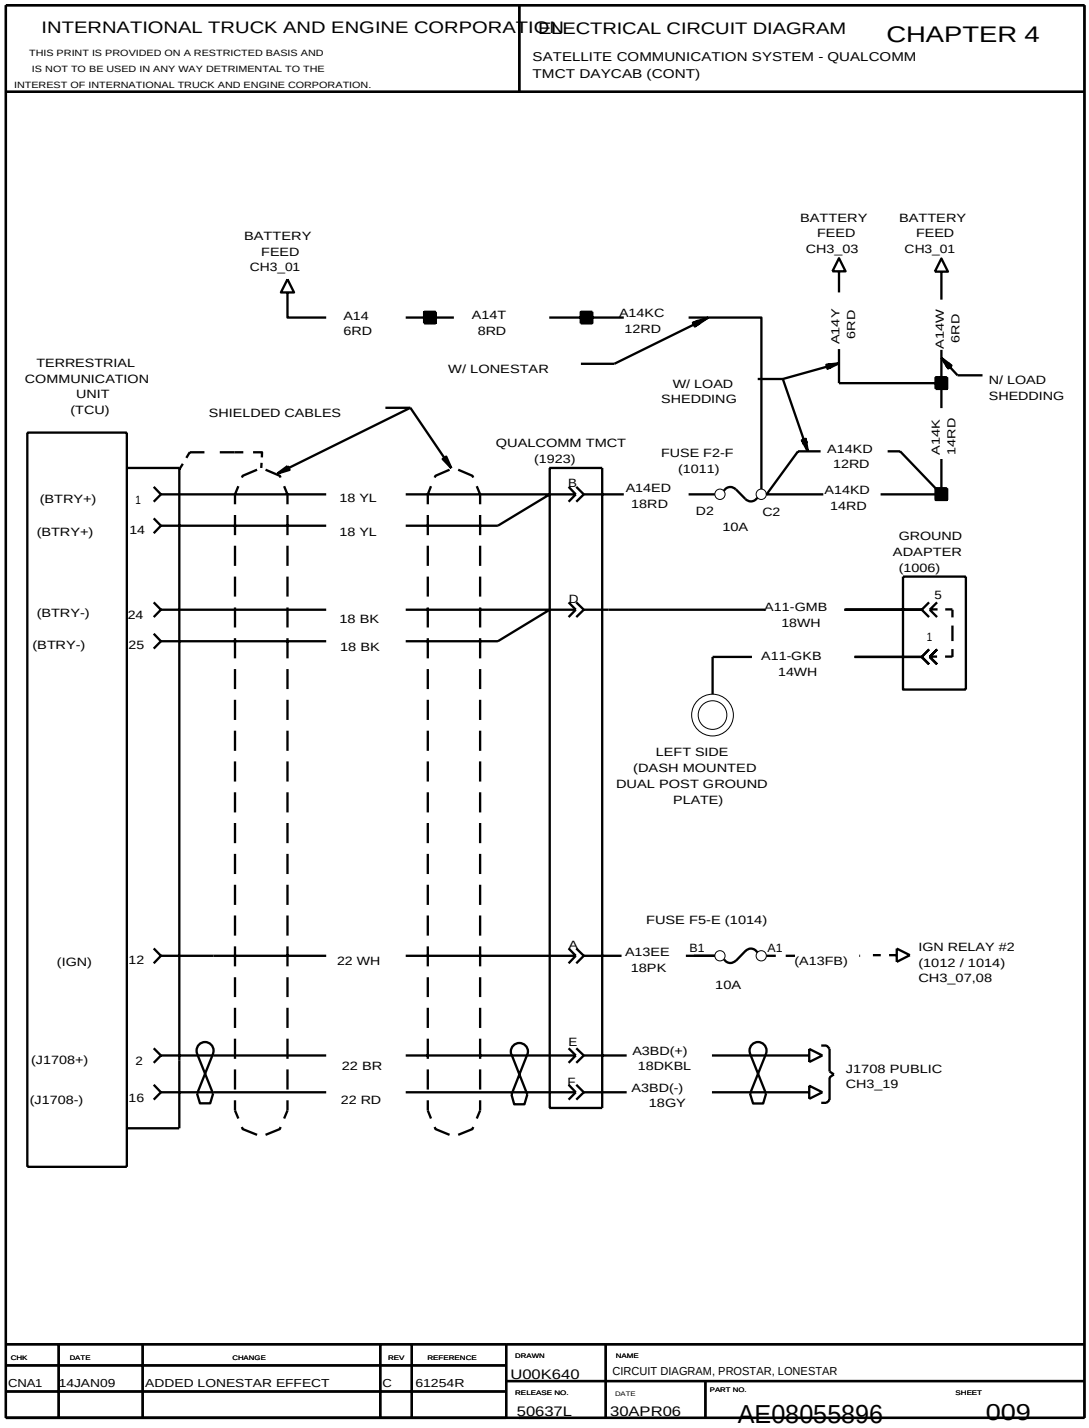


Figure 55 Satellite Communication System — Qualcomm TMCT Daycab

https://truckmanualshub.com/

4.10. SATELLITE COMMUNICATION SYSTEM — QUALCOMM TMCT SLEEPER, P. 10

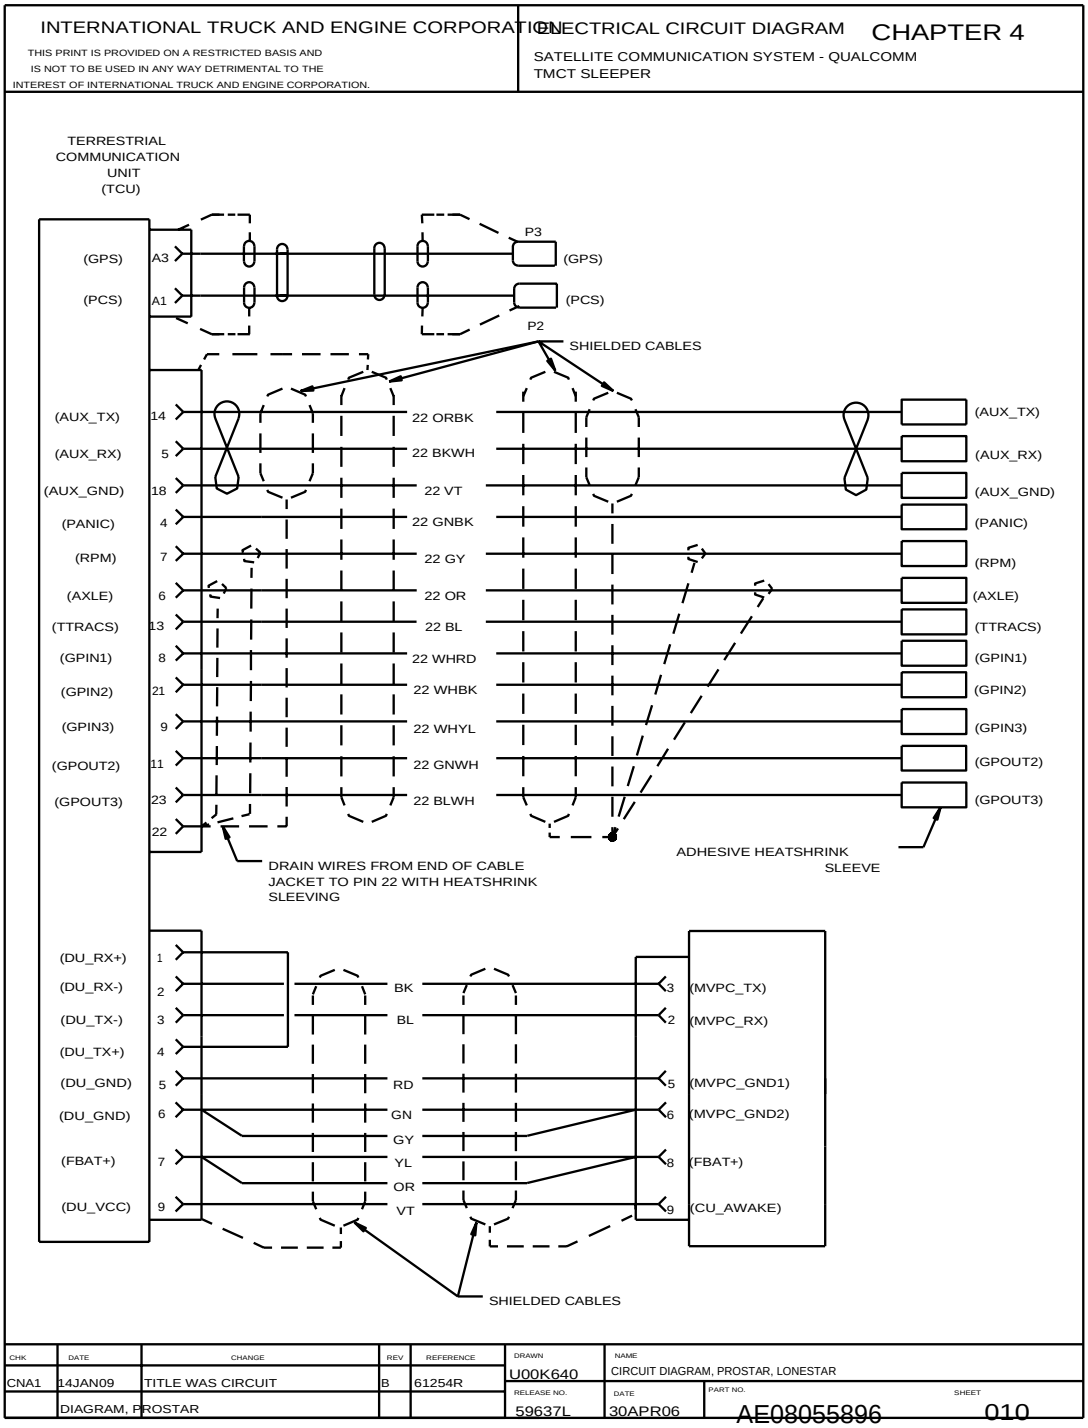


Figure 56 Satellite Communication System — Qualcomm TMCT Sleeper

https://truckmanualshub.com/

4.11. SATELLITE COMMUNICATION SYSTEM — QUALCOMM TMCT SLEEPER, P. 11

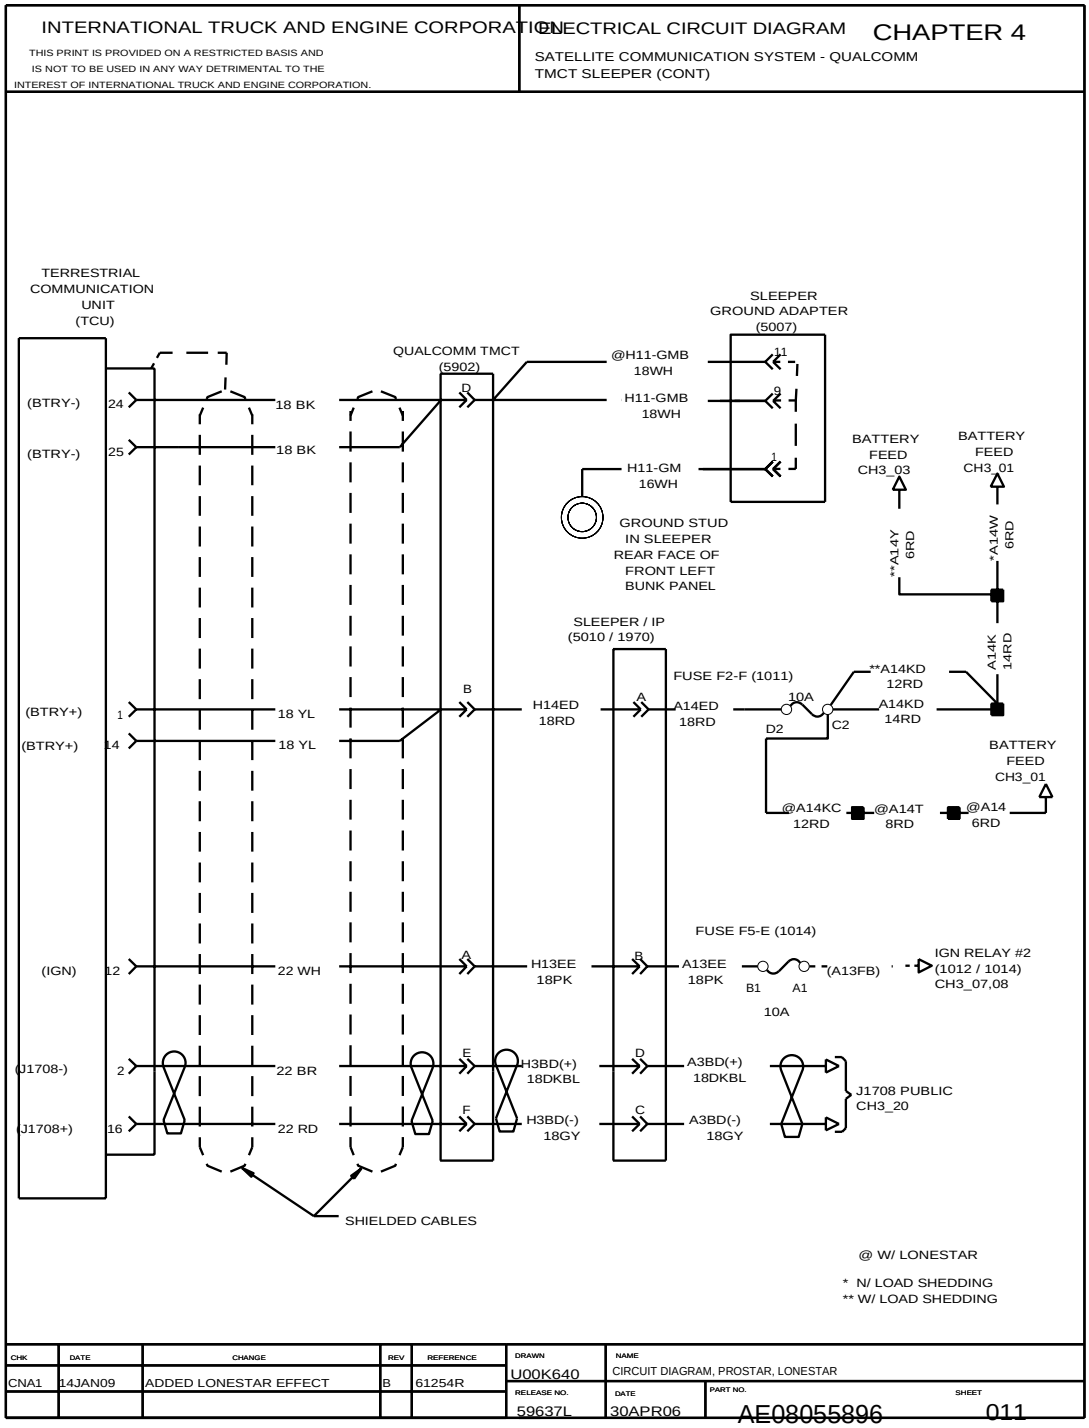


Figure 57 Satellite Communication System — Qualcomm TMCT Sleeper

https://truckmanualshub.com/

4.12. SATELLITE COMMUNICATION SYSTEM — QUALCOMM IMCT, P. 12

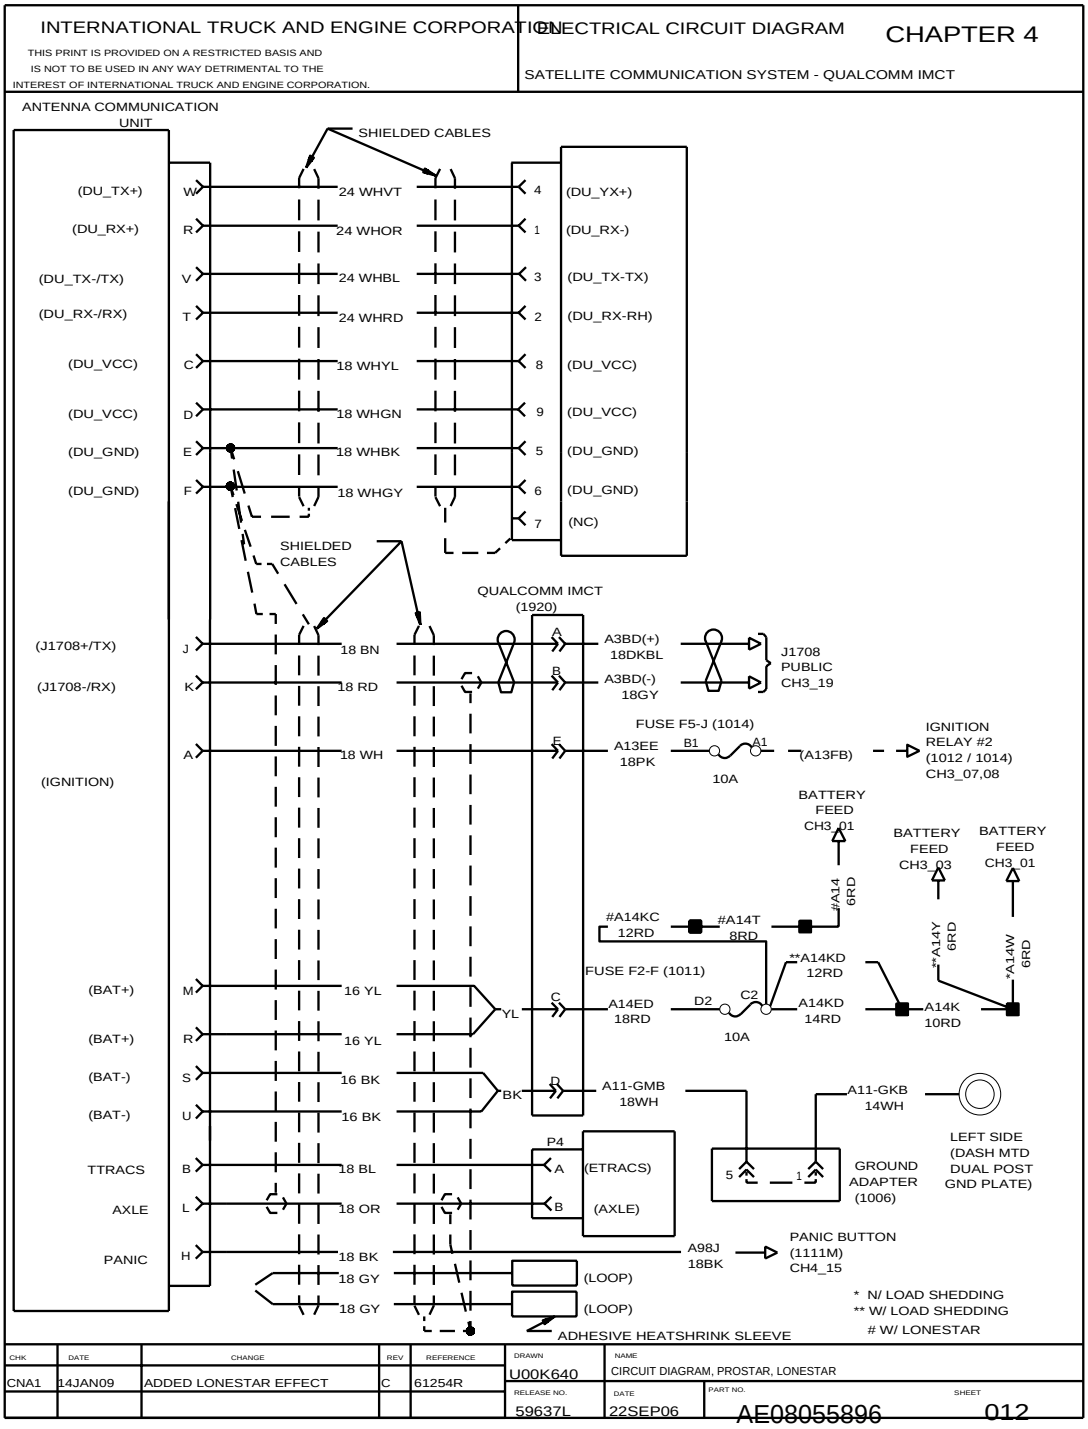


Figure 58 Satellite Communication System — Qualcomm IMCT

https://truckmanualshub.com/

4.13. SATELLITE COMMUNICATION SYSTEM — QUALCOMM IMCT, P. 13

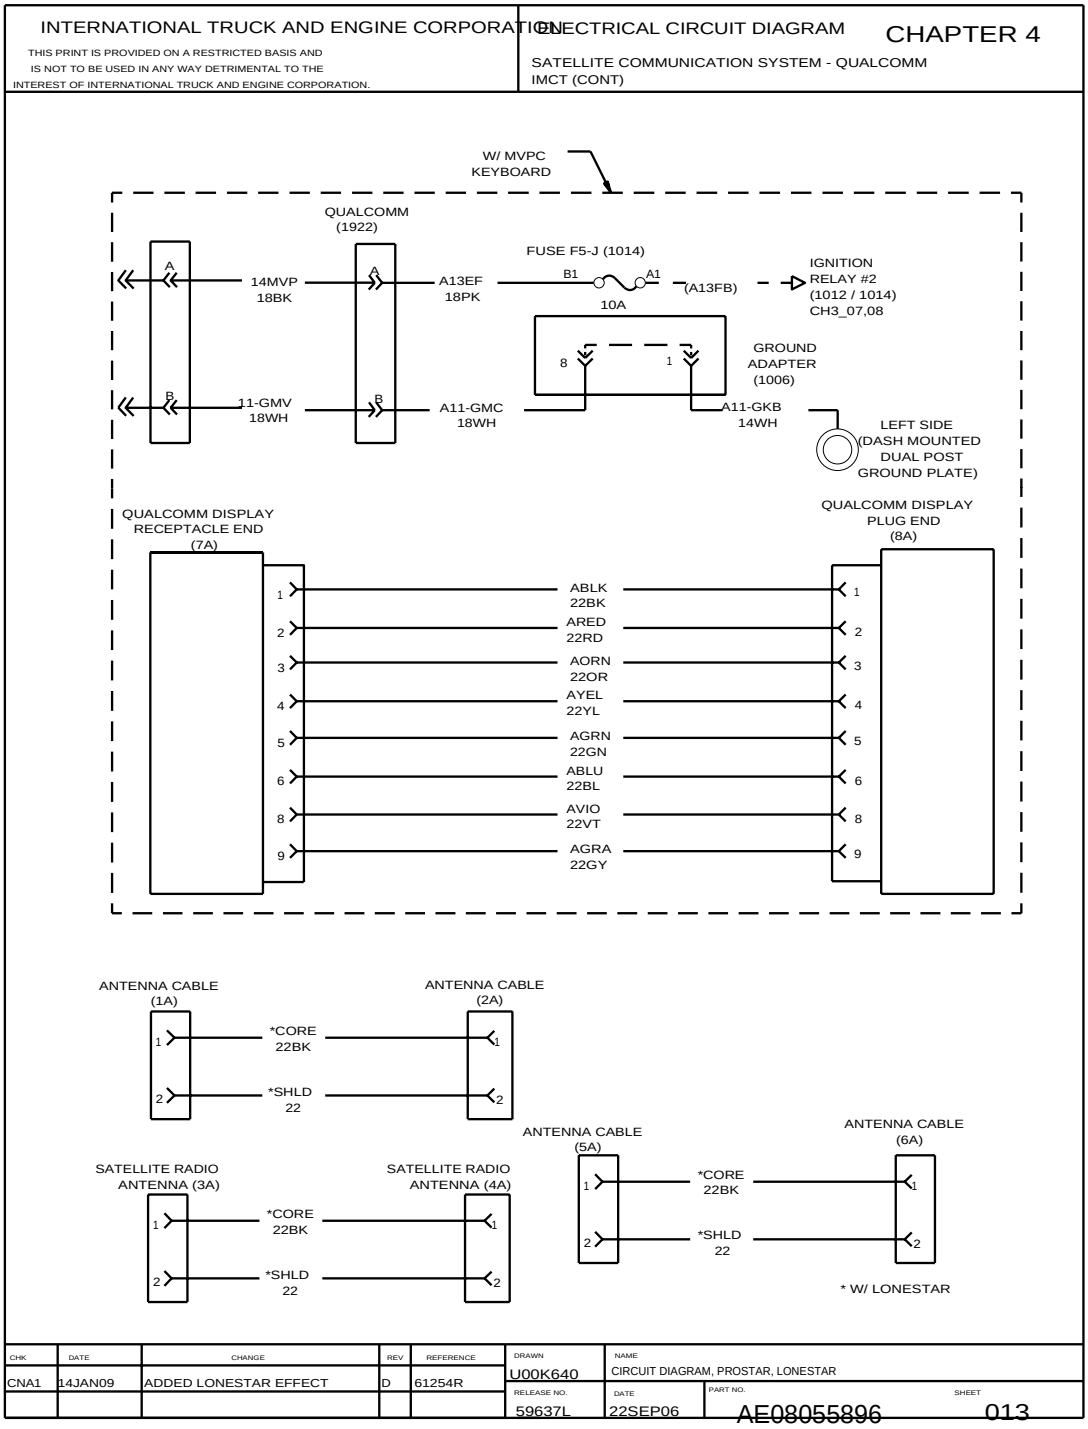


Figure 59 Satellite Communication System — Qualcomm IMCT

https://truckmanualshub.com/

4.14. QUALCOMM IMCT — SLEEPER, P. 14

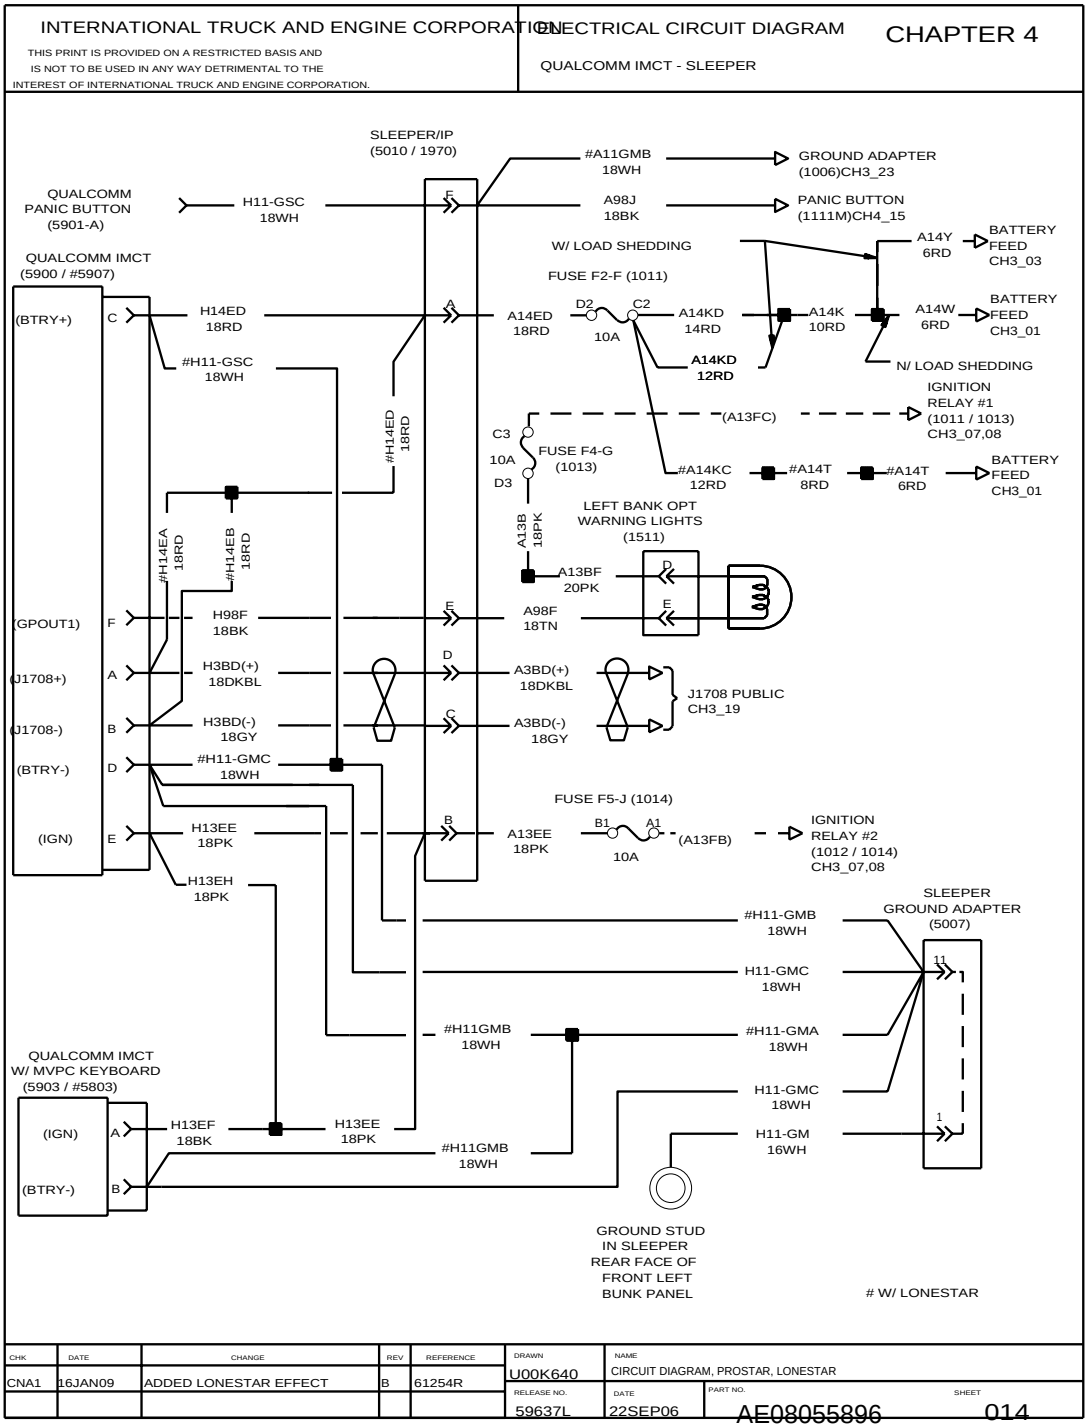


Figure 60 Qualcomm IMCT — Sleeper

https://truckmanualshub.com/

4.15. PANIC BUTTON, P. 15

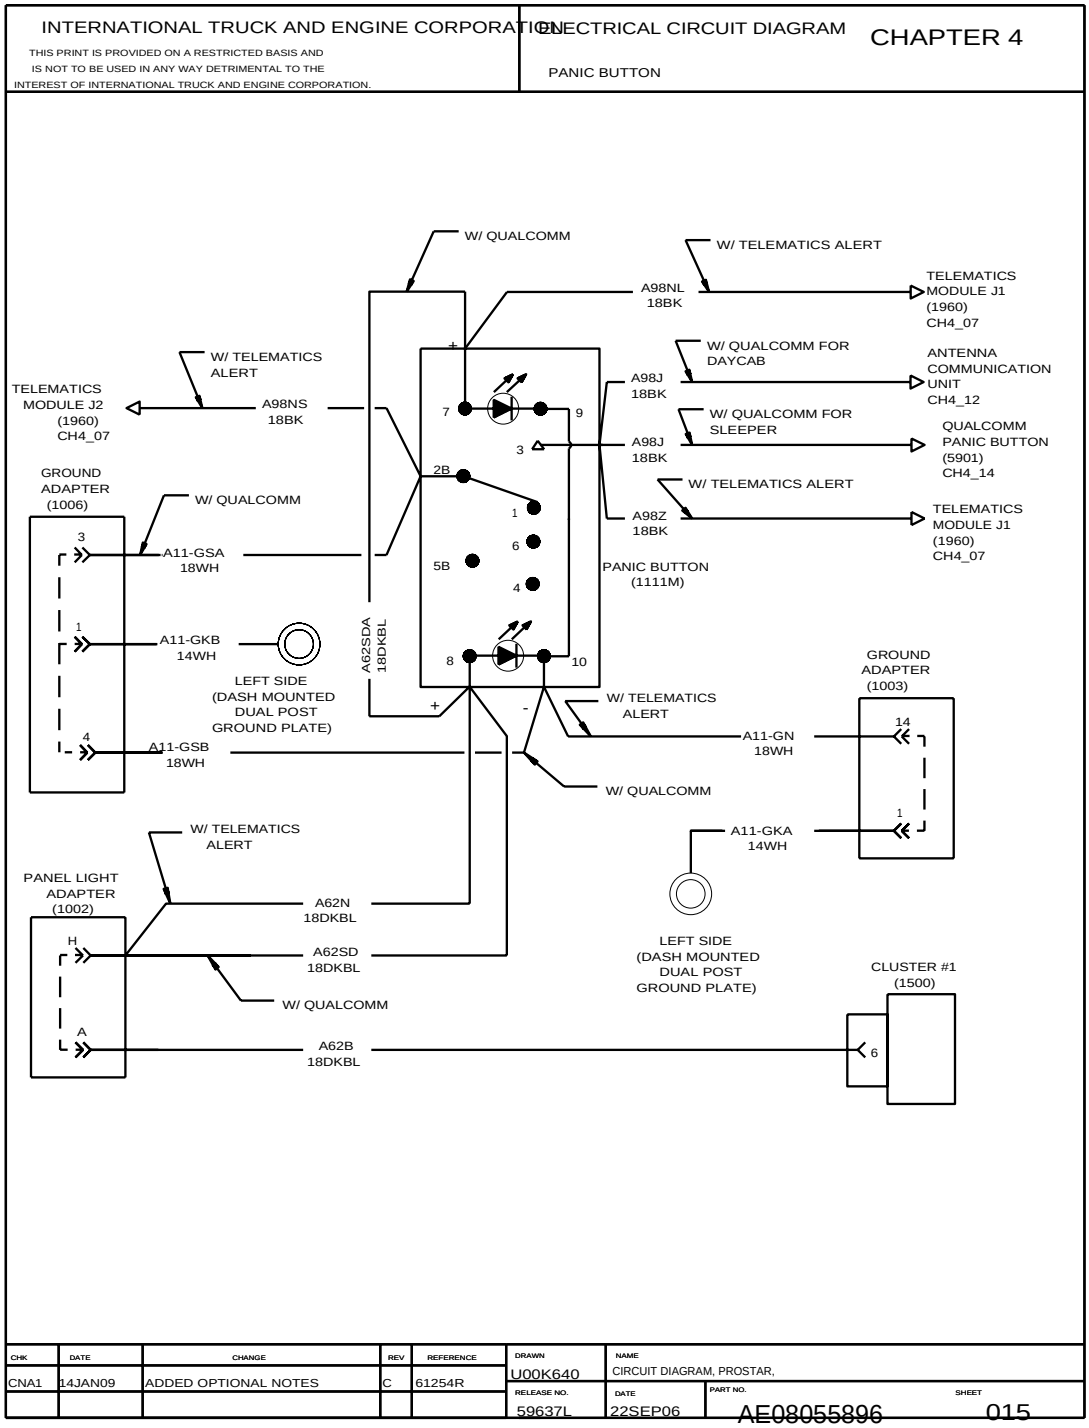


Figure 61 Panic Button

https://truckmanualshub.com/

4.16. SATELLITE COMMUNICATION SYSTEM — XATA WITH DAYCAB, P. 16

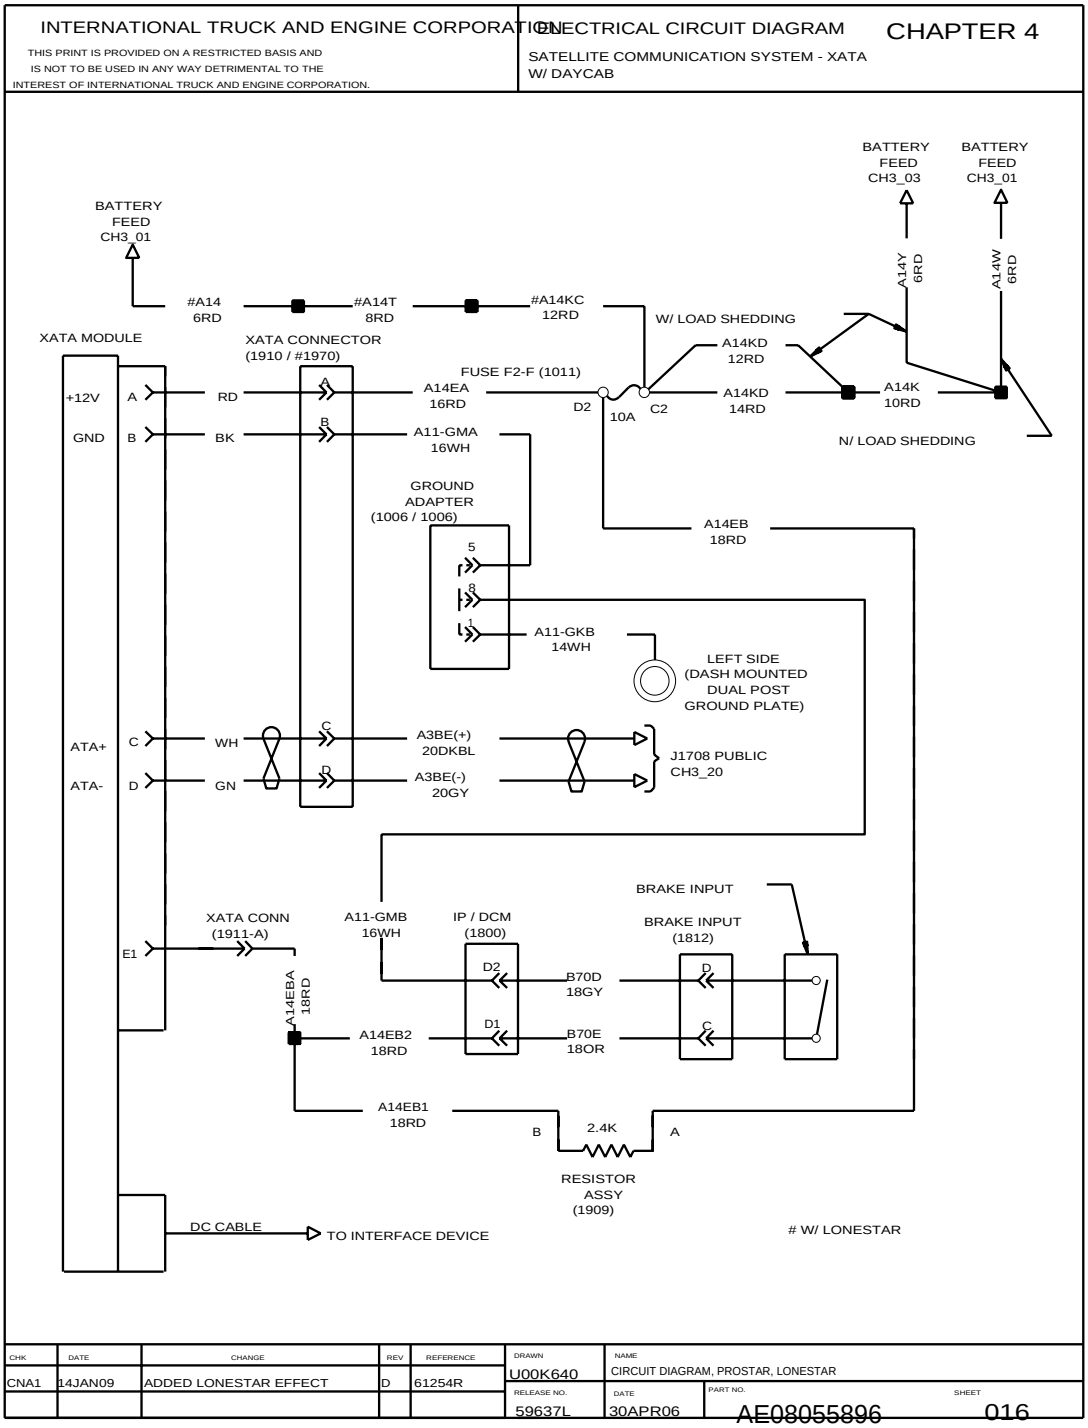


Figure 62 Satellite Communication System — XATA with Daycab

https://truckmanualshub.com/

4.17. SATELLITE COMMUNICATION SYSTEM — XATA WITH SLEEPER, P. 17

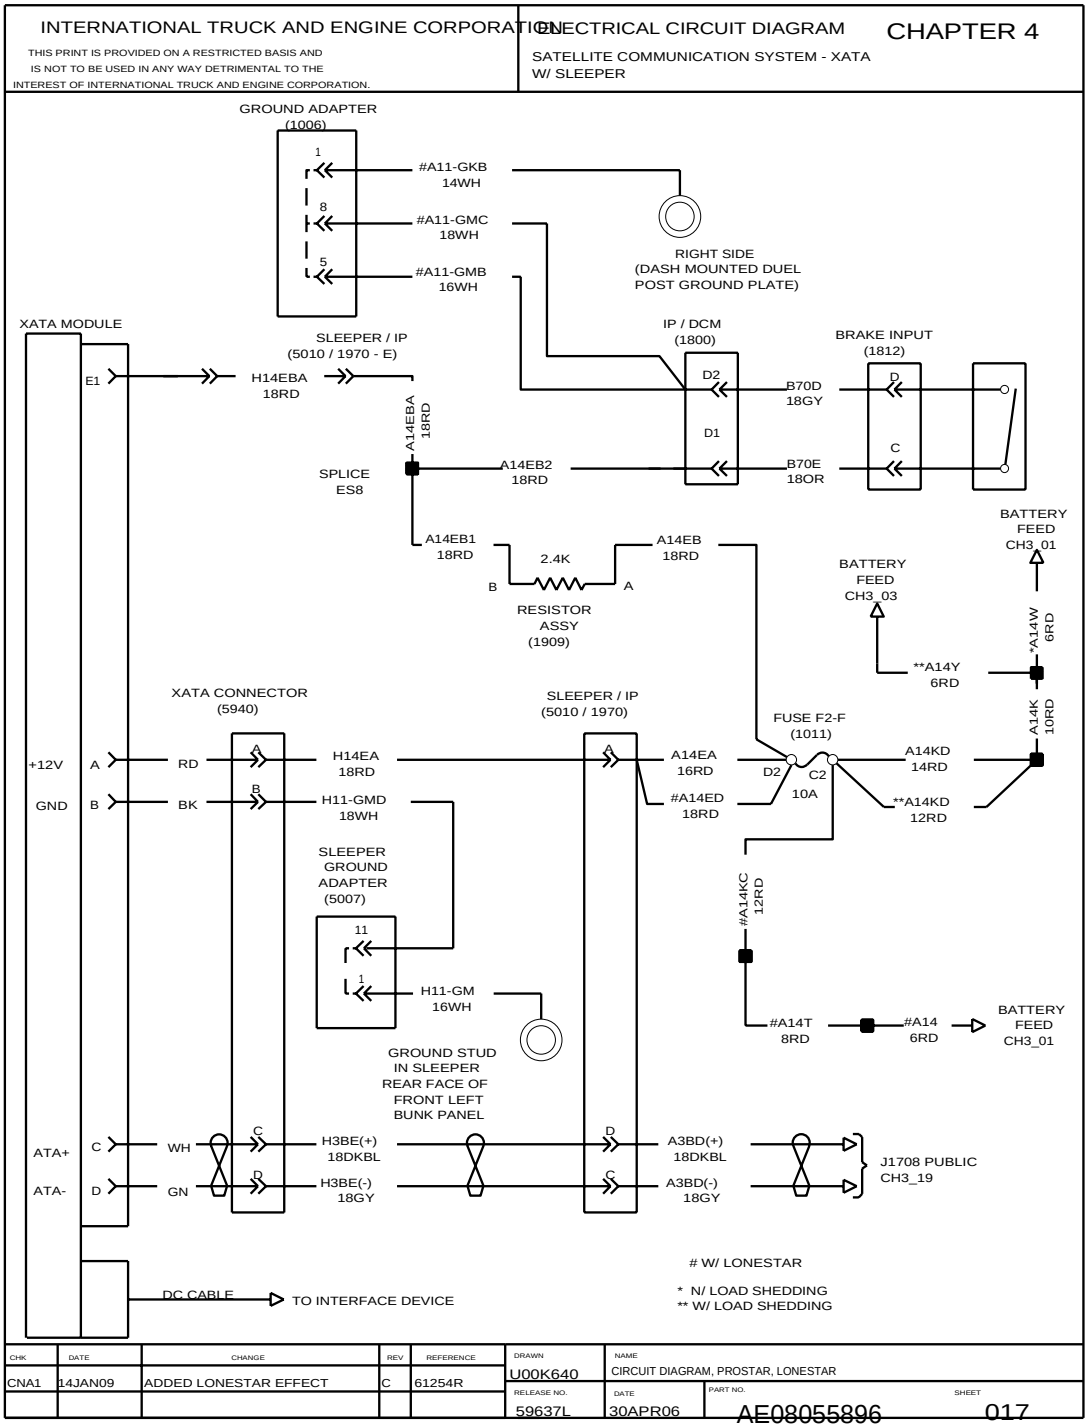


Figure 63 Satellite Communication System — XATA with Sleeper

https://truckmanualshub.com/

4.18. RADIO ENTERTAINMENT, SPEAKERS, P. 18

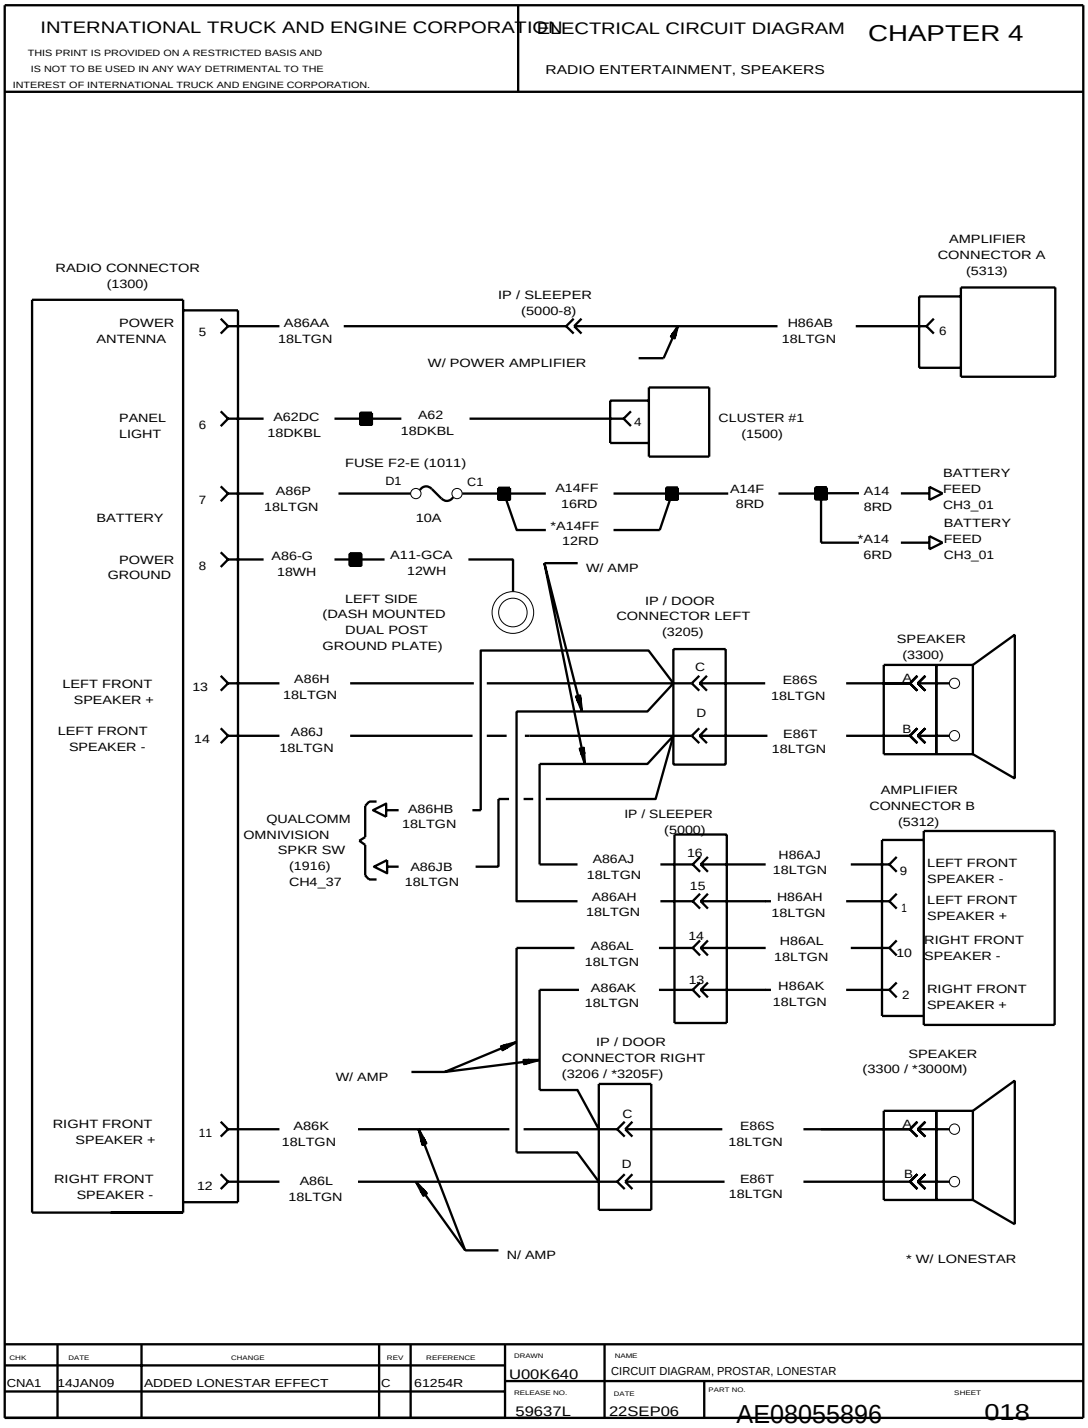


Figure 64 Radio Entertainment, Speakers

https://truckmanualshub.com/

4.19. RADIO ENTERTAINMENT, SPEAKERS, P. 18A

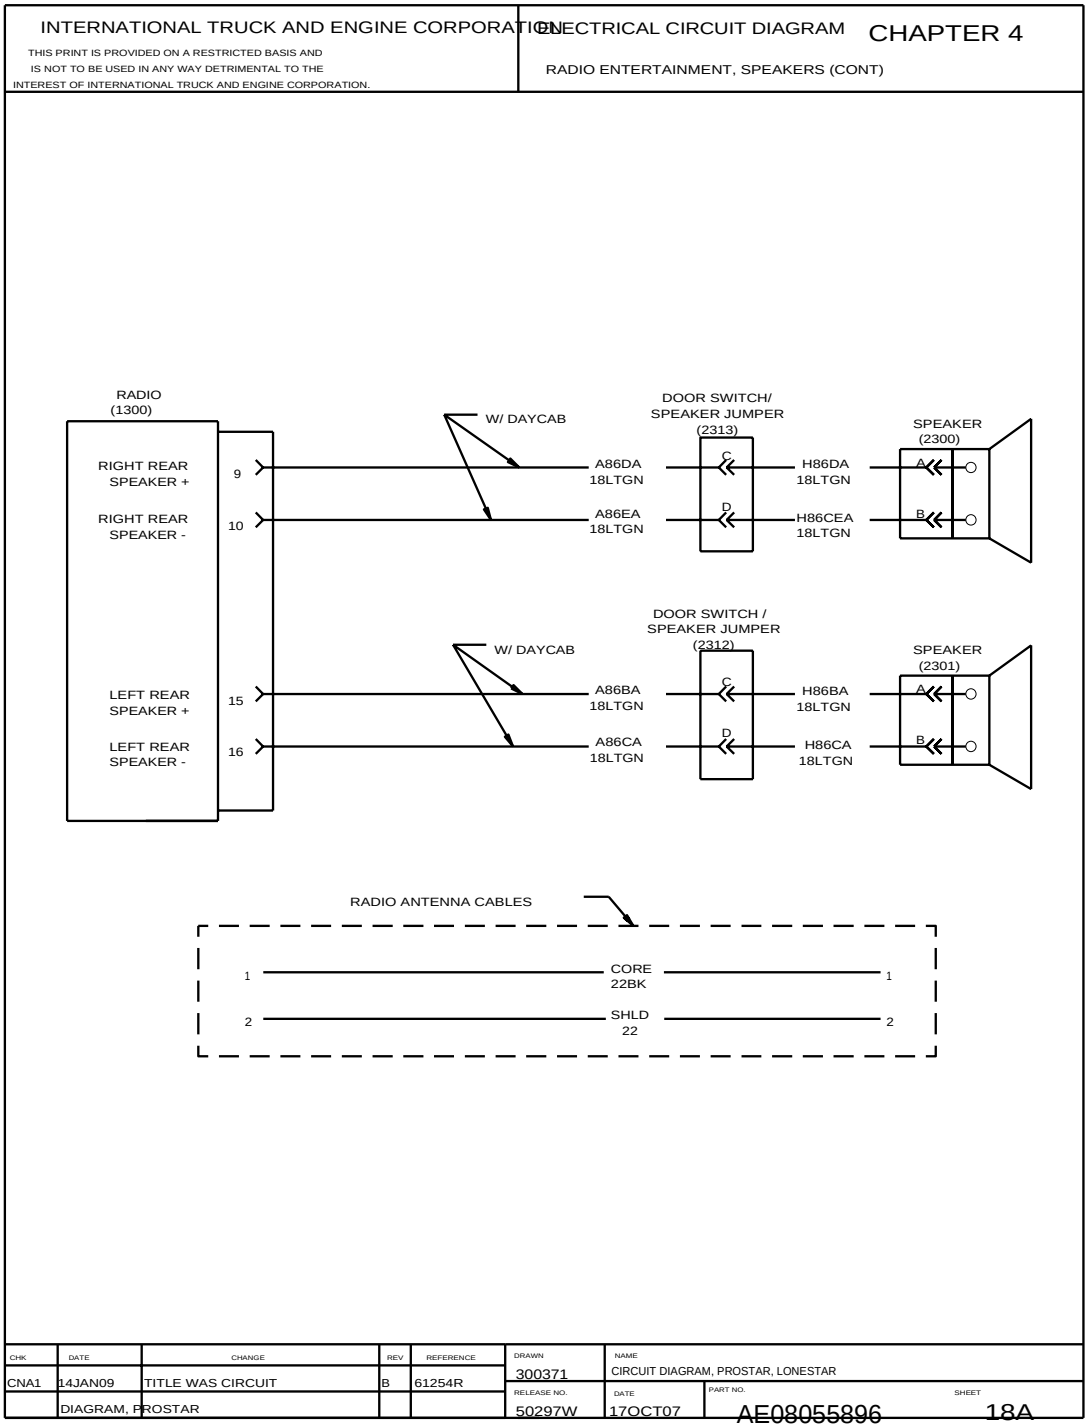


Figure 65 Radio Entertainment, Speakers

https://truckmanualshub.com/

4.20. RADIO ENTERTAINMENT, SPEAKERS, P. 19

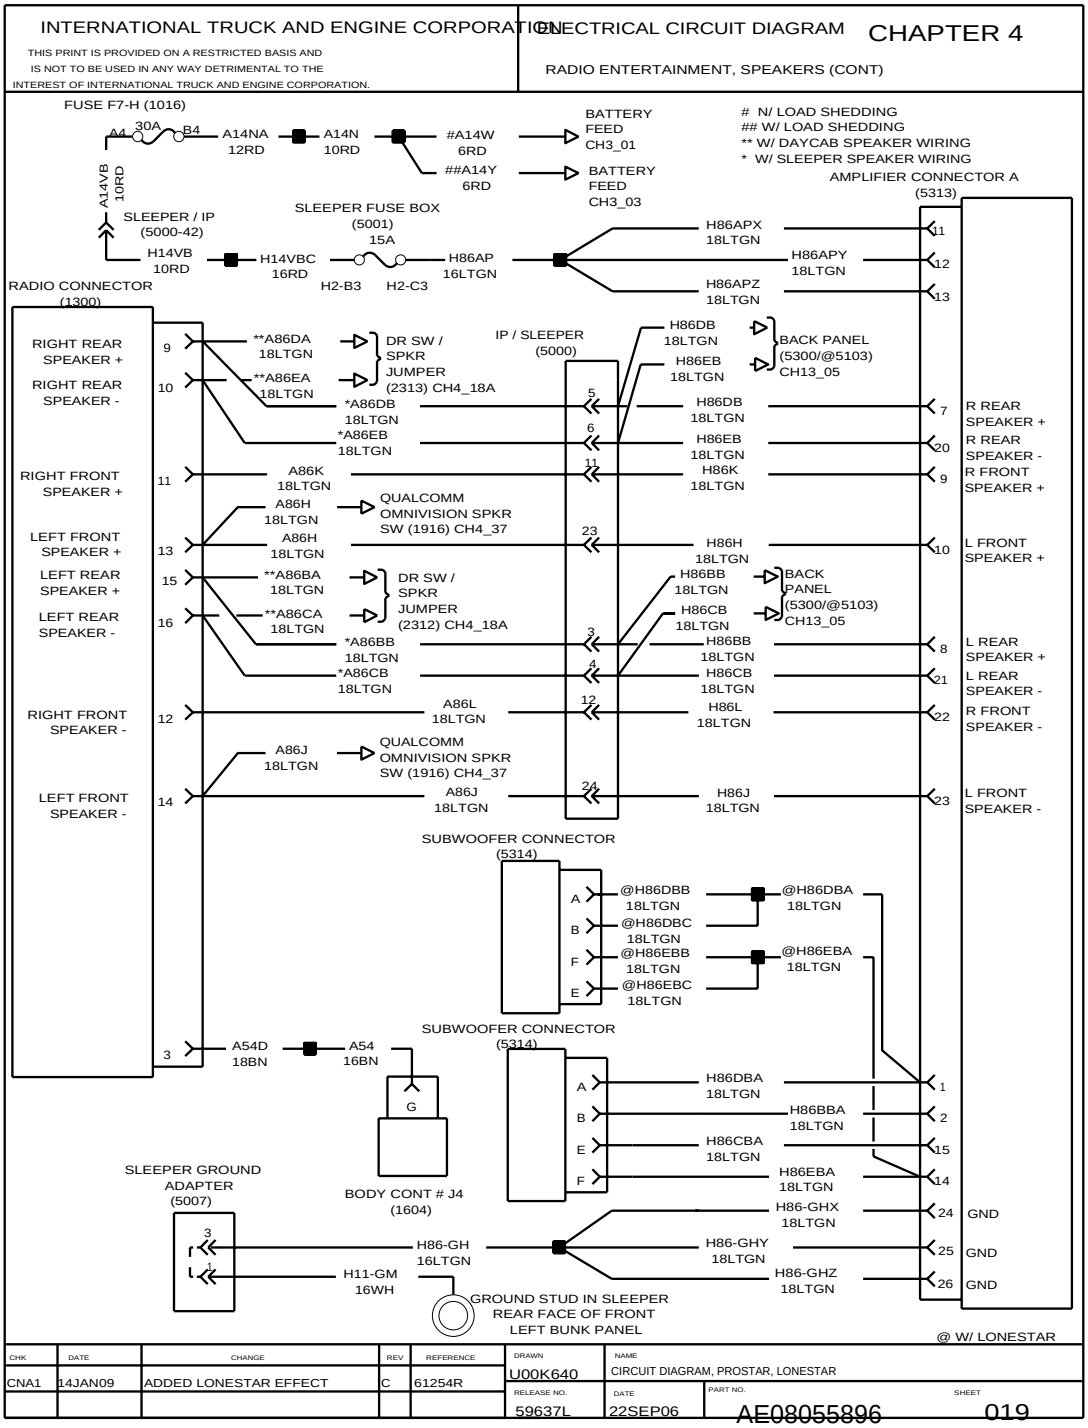


Figure 66 Radio Entertainment, Speakers

https://truckmanualshub.com/

4.21. RADIO ENTERTAINMENT, SPEAKERS, P. 19A

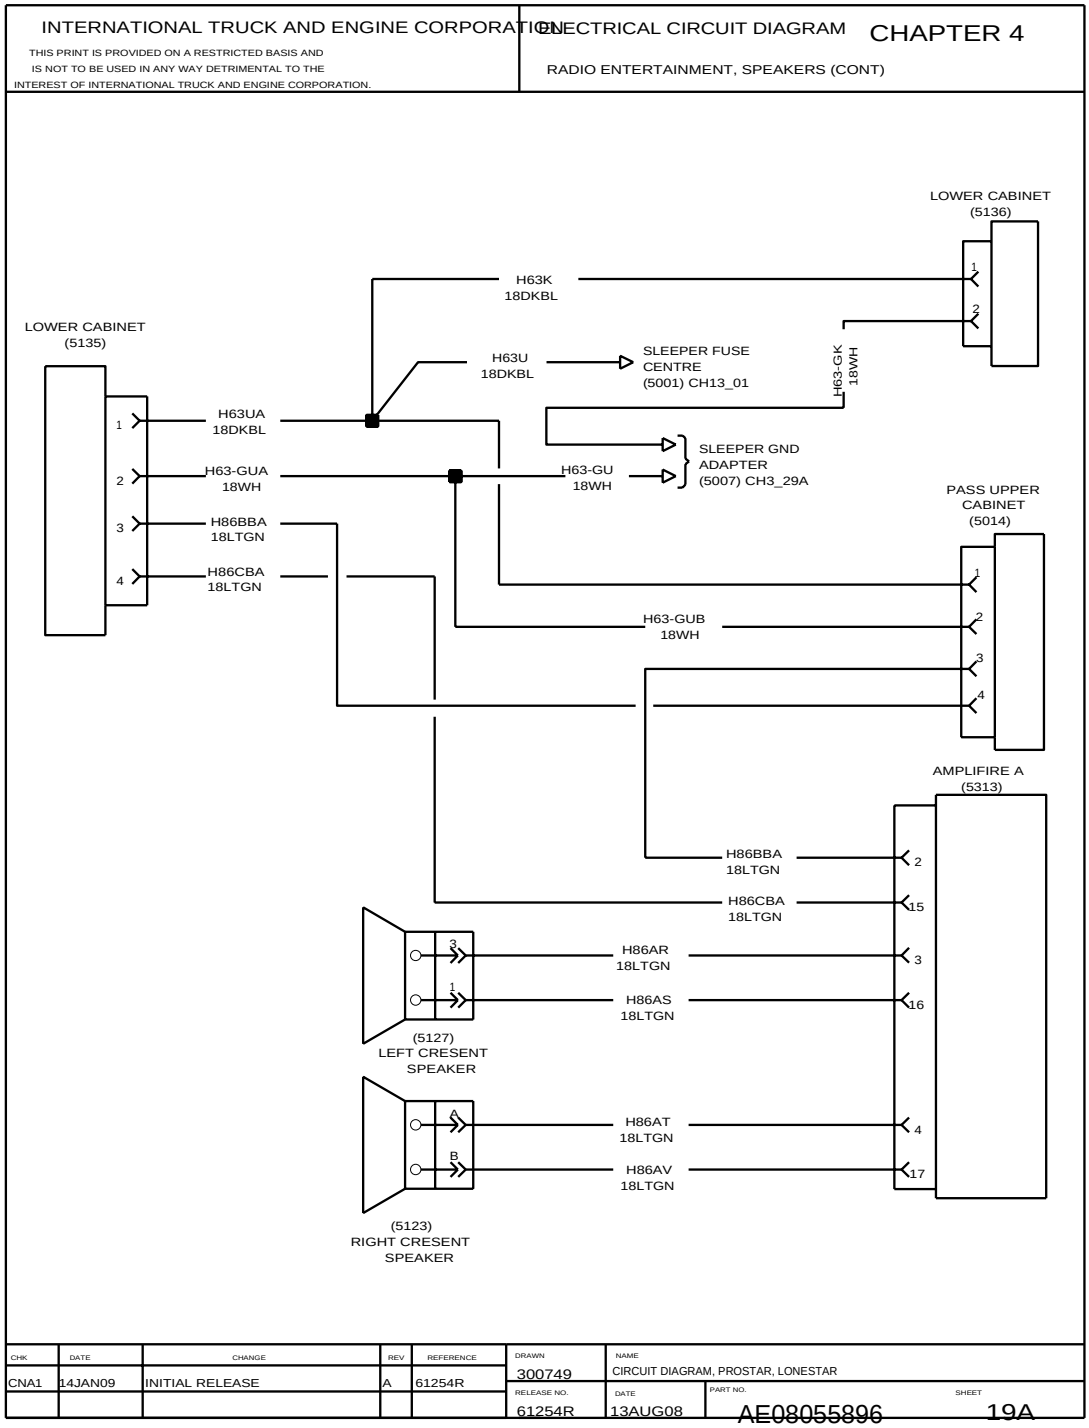


Figure 67 Radio Entertainment, Speakers

https://truckmanualshub.com/

4.22. SWITCH PACK, P. 20

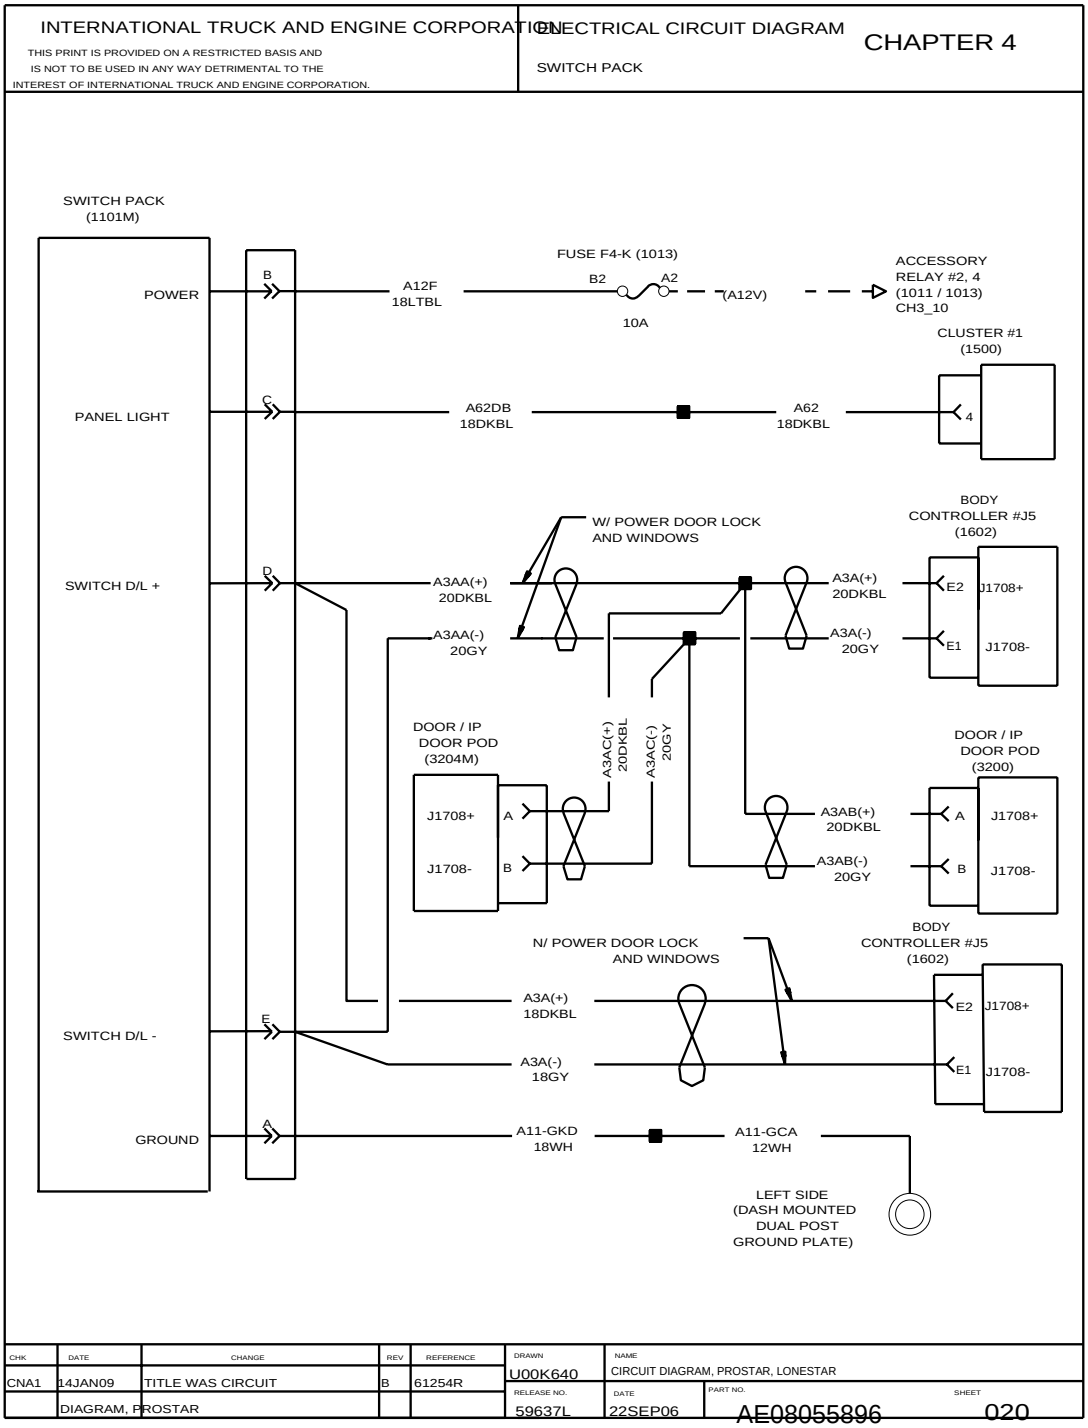


Figure 68 Switch Pack

https://truckmanualshub.com/

4.23. WINDSHIELD WIPER MOTOR, P. 21

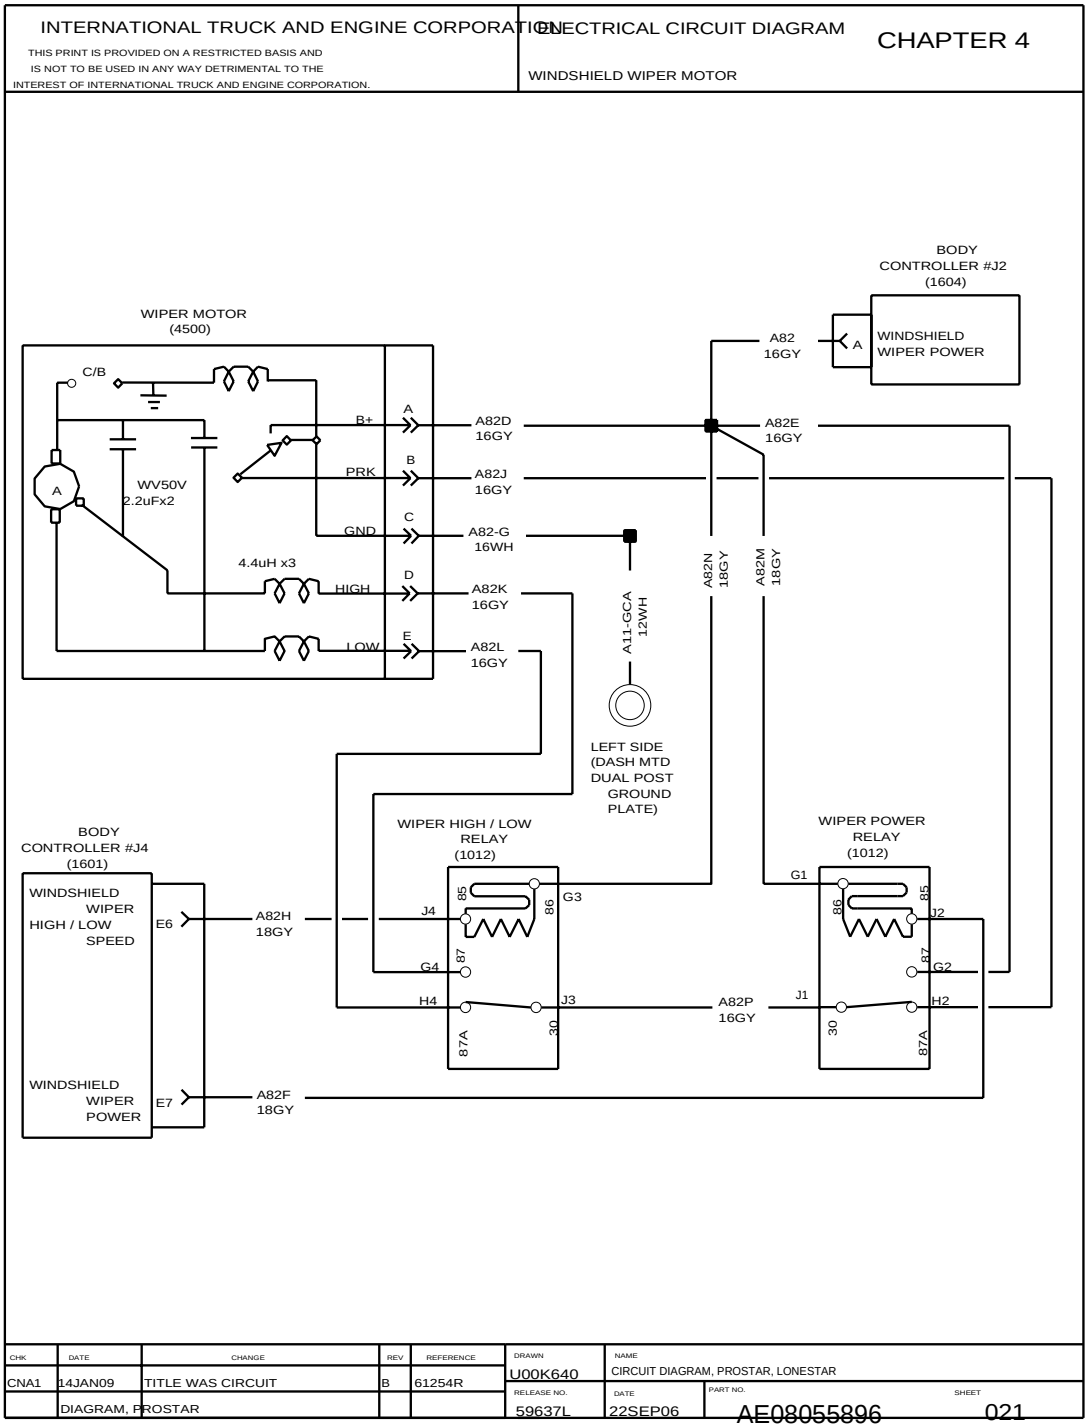


Figure 69 Windshield Wiper Motor

https://truckmanualshub.com/

4.24. WINDSHIELD WASHER PUMP, P. 22

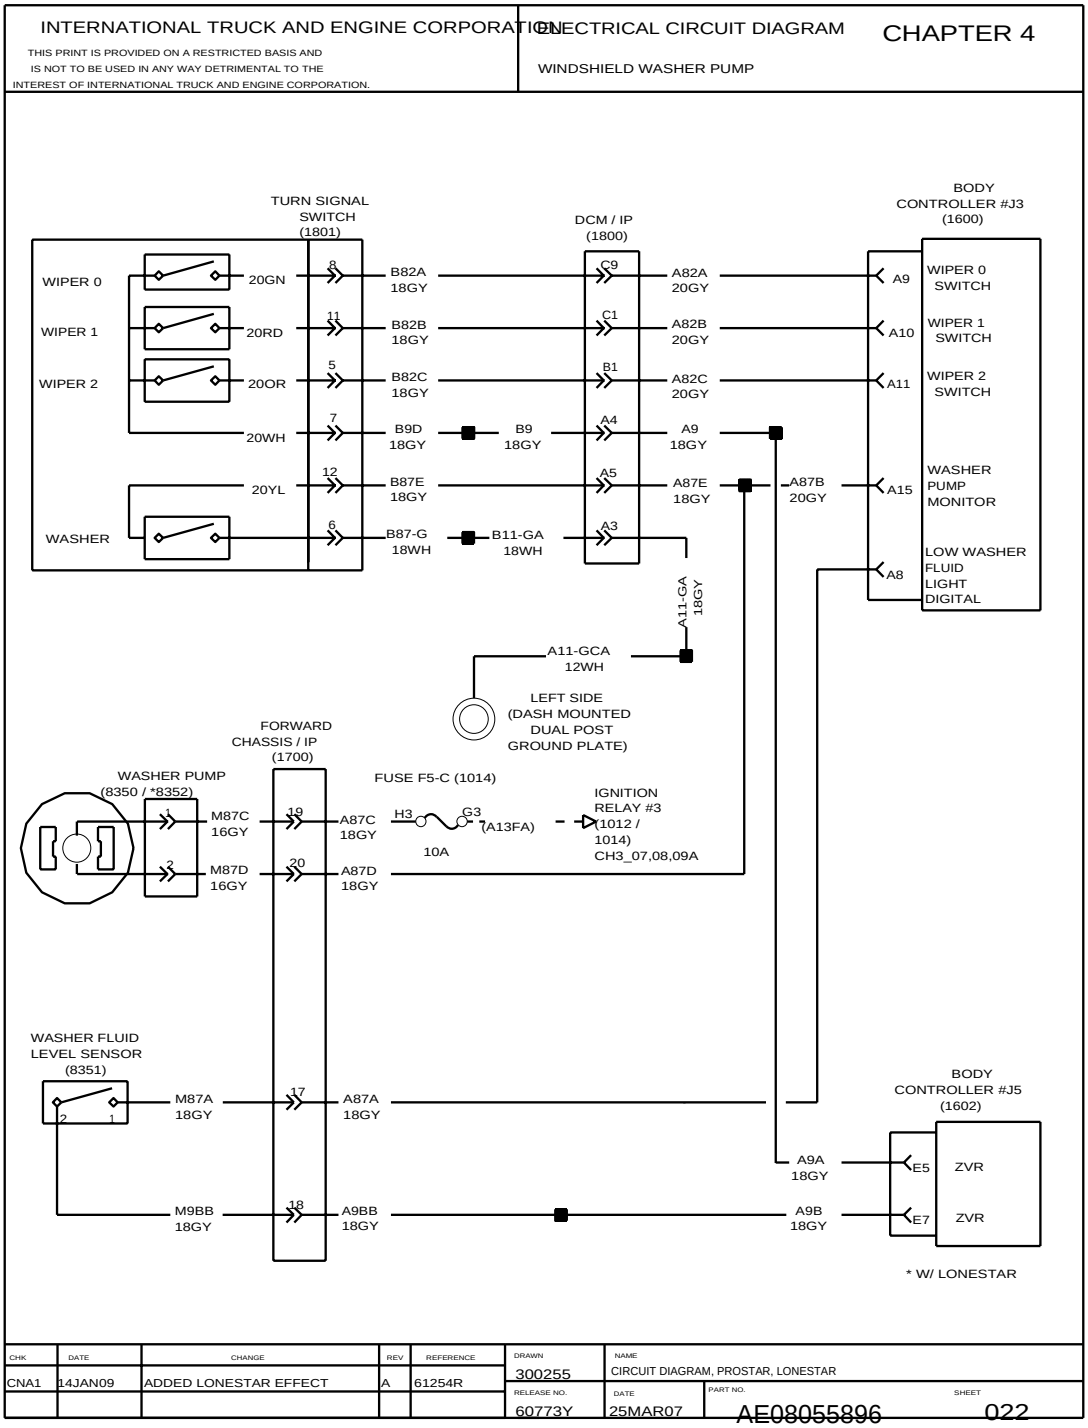


Figure 70 Windshield Washer Pump

https://truckmanualshub.com/

4.25. DRIVER DISPLAY — VEHICLE INFORMATION, P. 23

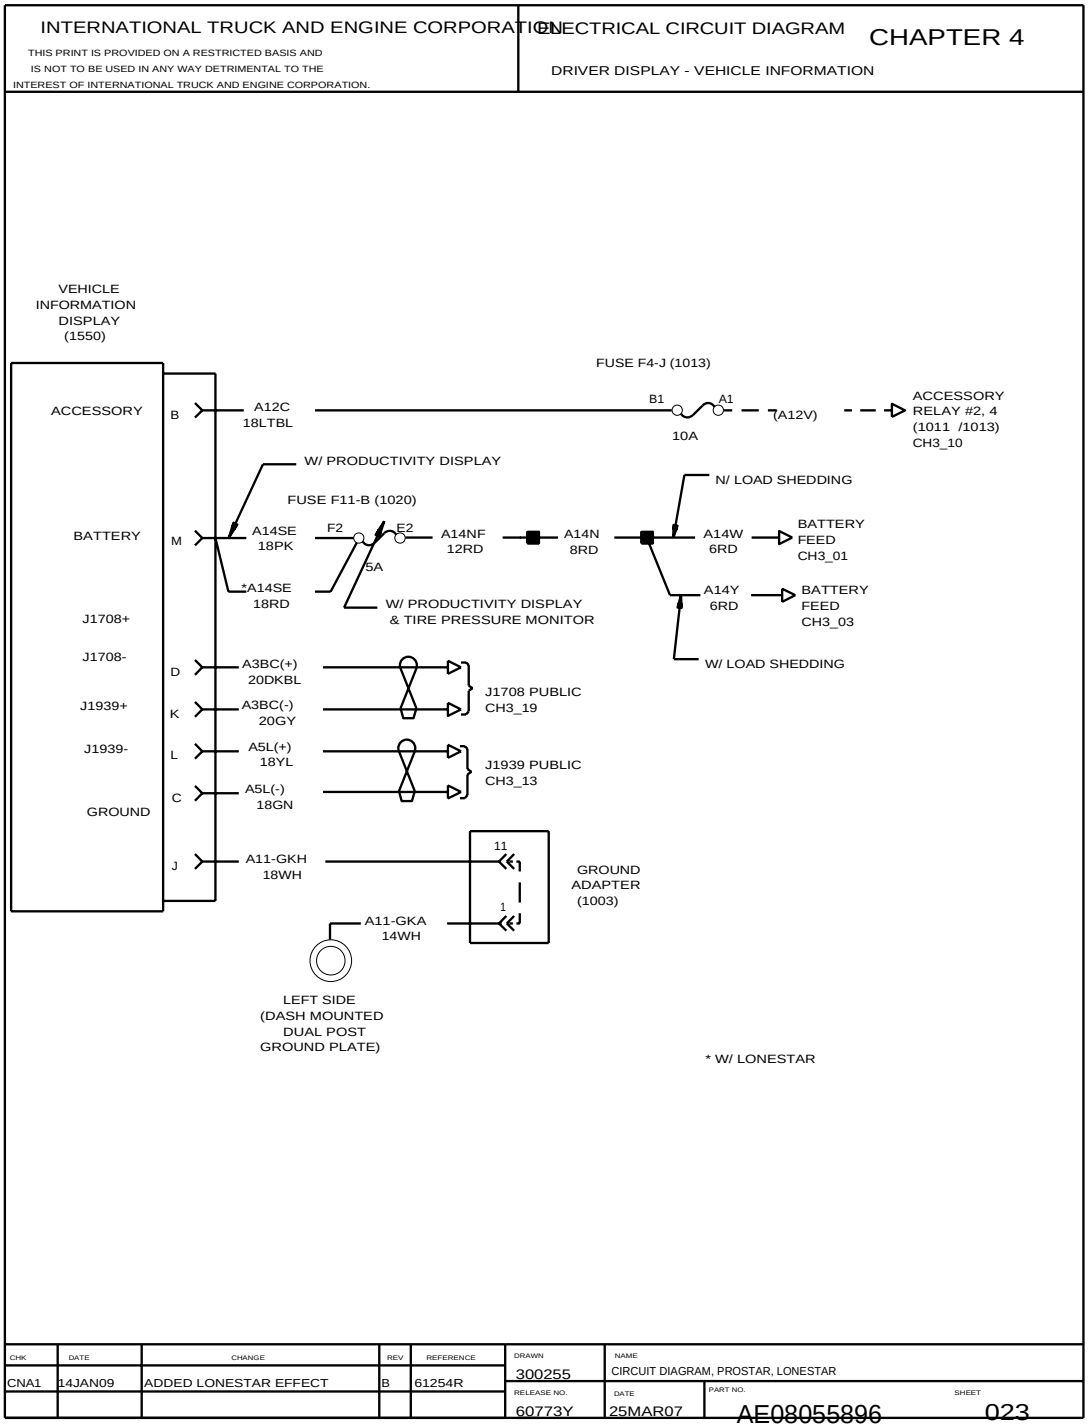


Figure 71 Driver Display — Vehicle Information

https://truckmanualshub.com/

4.26. CAT MESSENGER DISPLAY, P. 24

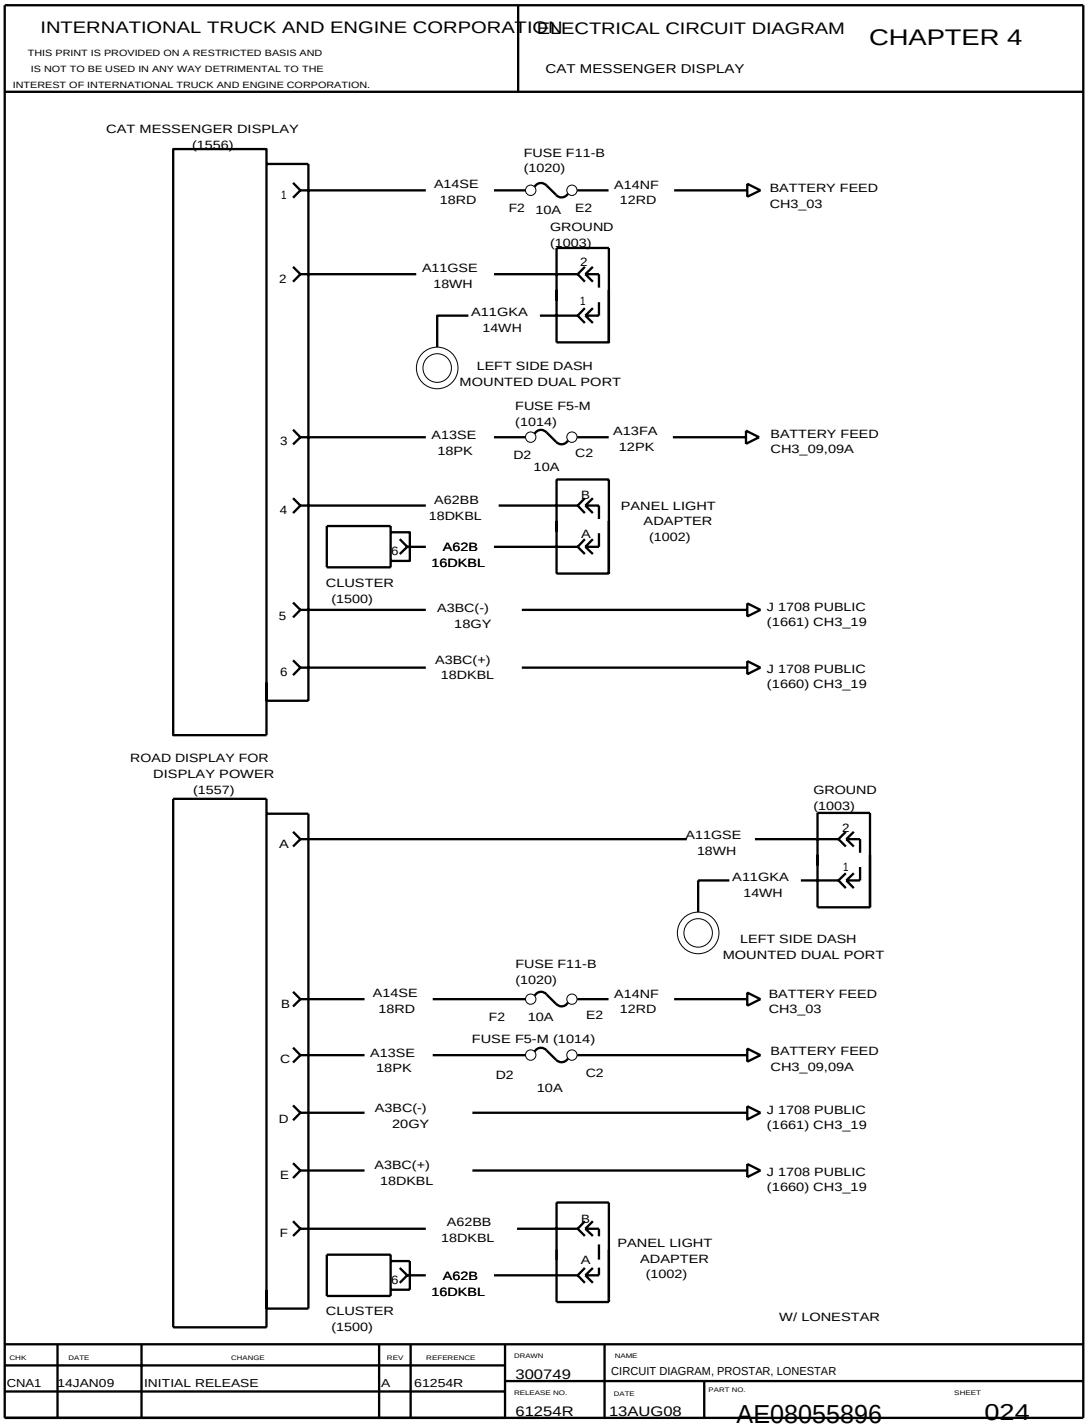


Figure 72 CAT Messenger Display

https://truckmanualshub.com/

4.27. BEACON LIGHT SWITCH — FOR DUAL CUSTOMER ACCESSORY, P. 25

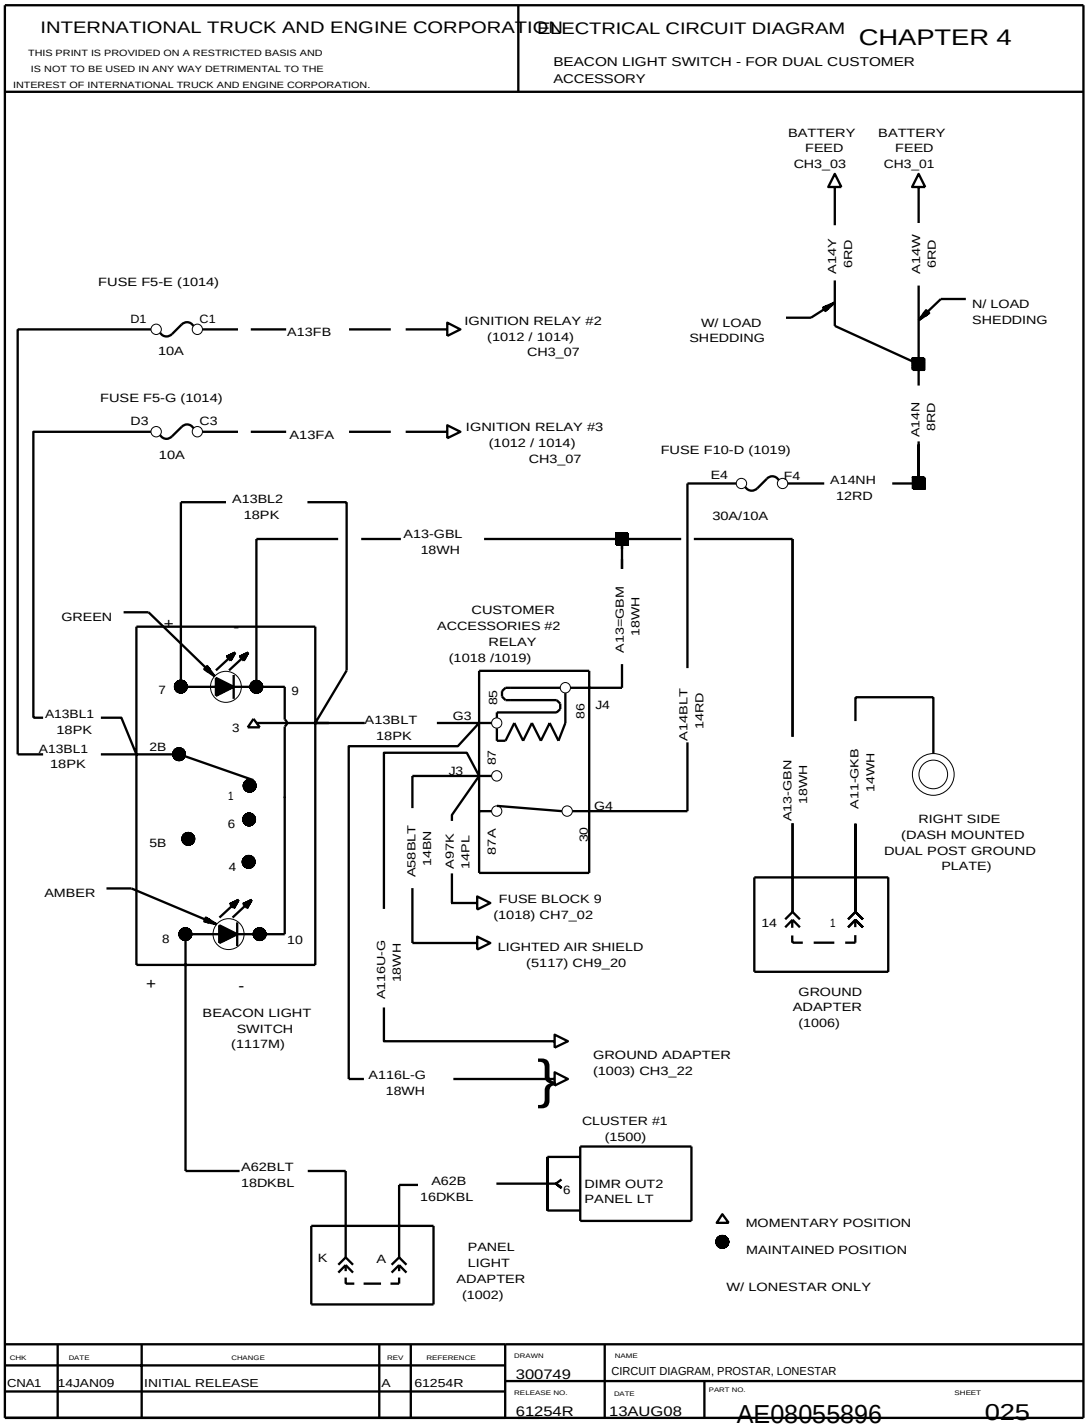


Figure 73 Beacon Light Switch — for Dual Customer Accessory

https://truckmanualshub.com/

4.28. DOOR SWITCHES — DOME LAMP, P. 26

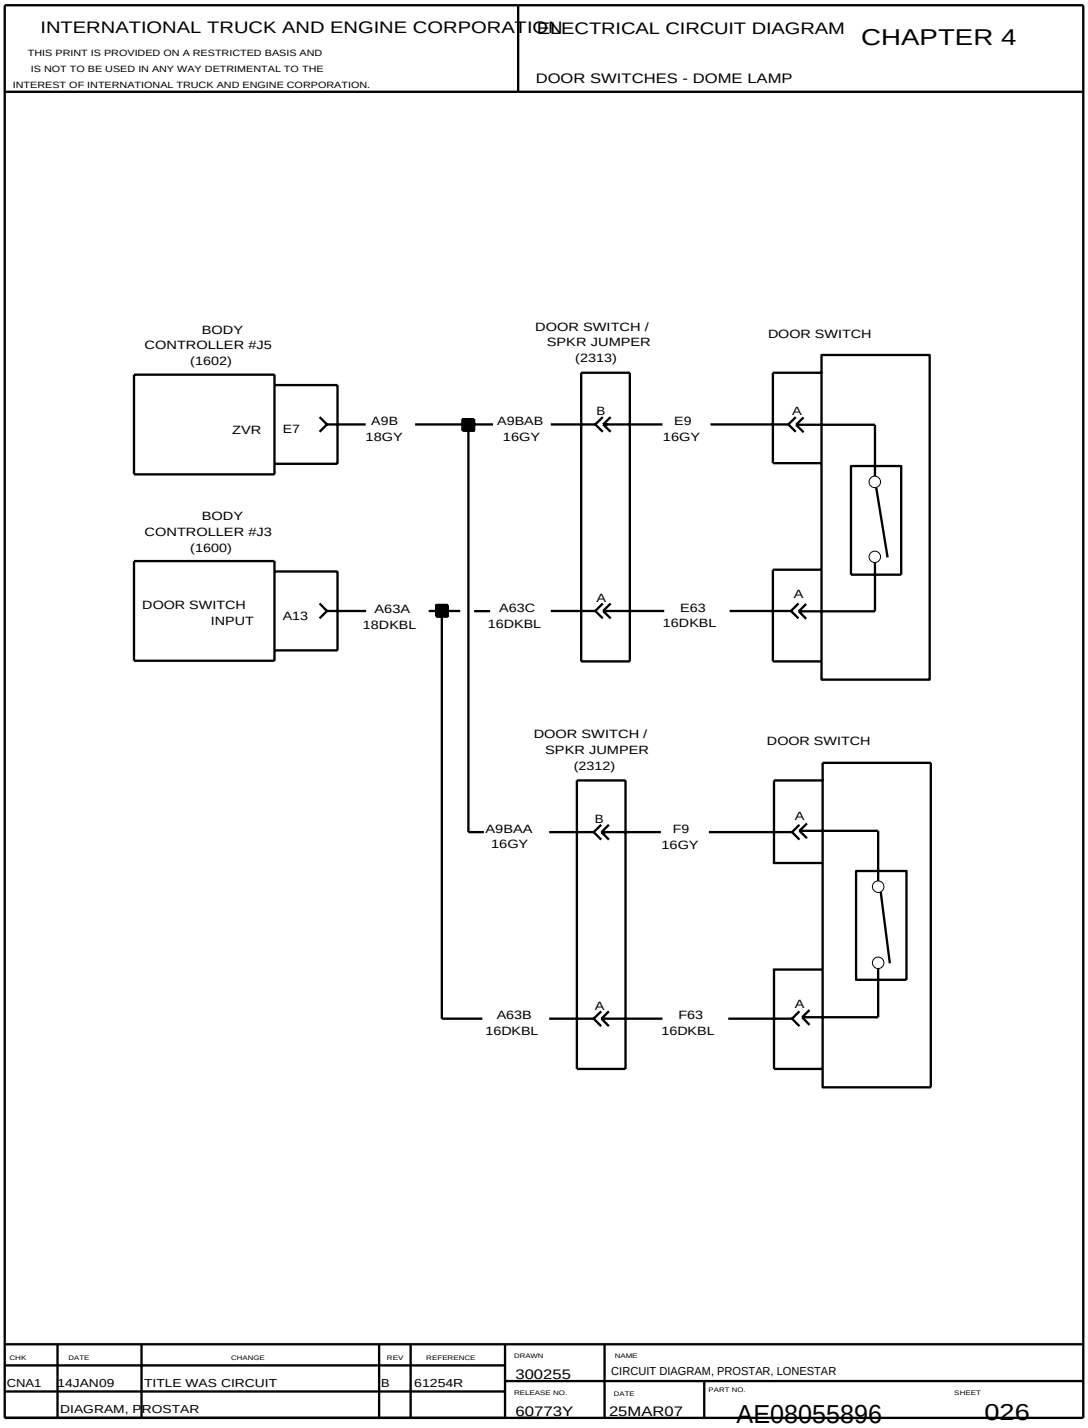


Figure 74 Door Switches — Dome Lamp

https://truckmanualshub.com/

4.29. SPARE SWITCH — FOR SINGLE CUSTOMER ACCESSORY, P. 27

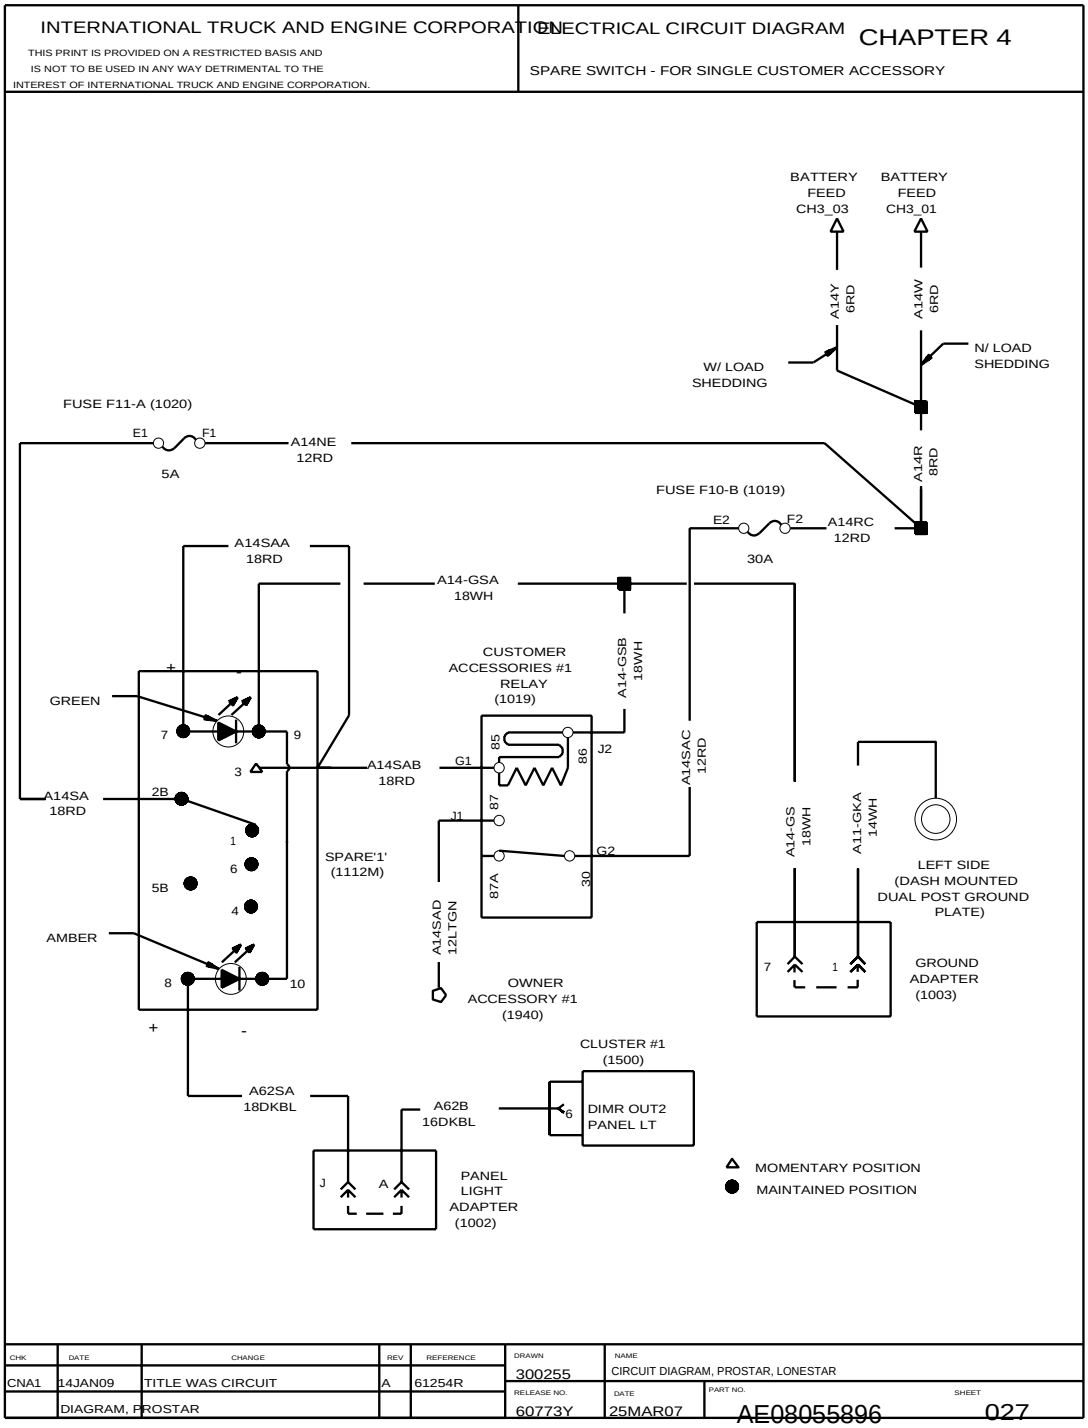


Figure 75 Spare Switch — For Single Customer Accessory

https://truckmanualshub.com/

4.30. SPARE SWITCH — FOR DUAL CUSTOMER ACCESSORY, P. 28

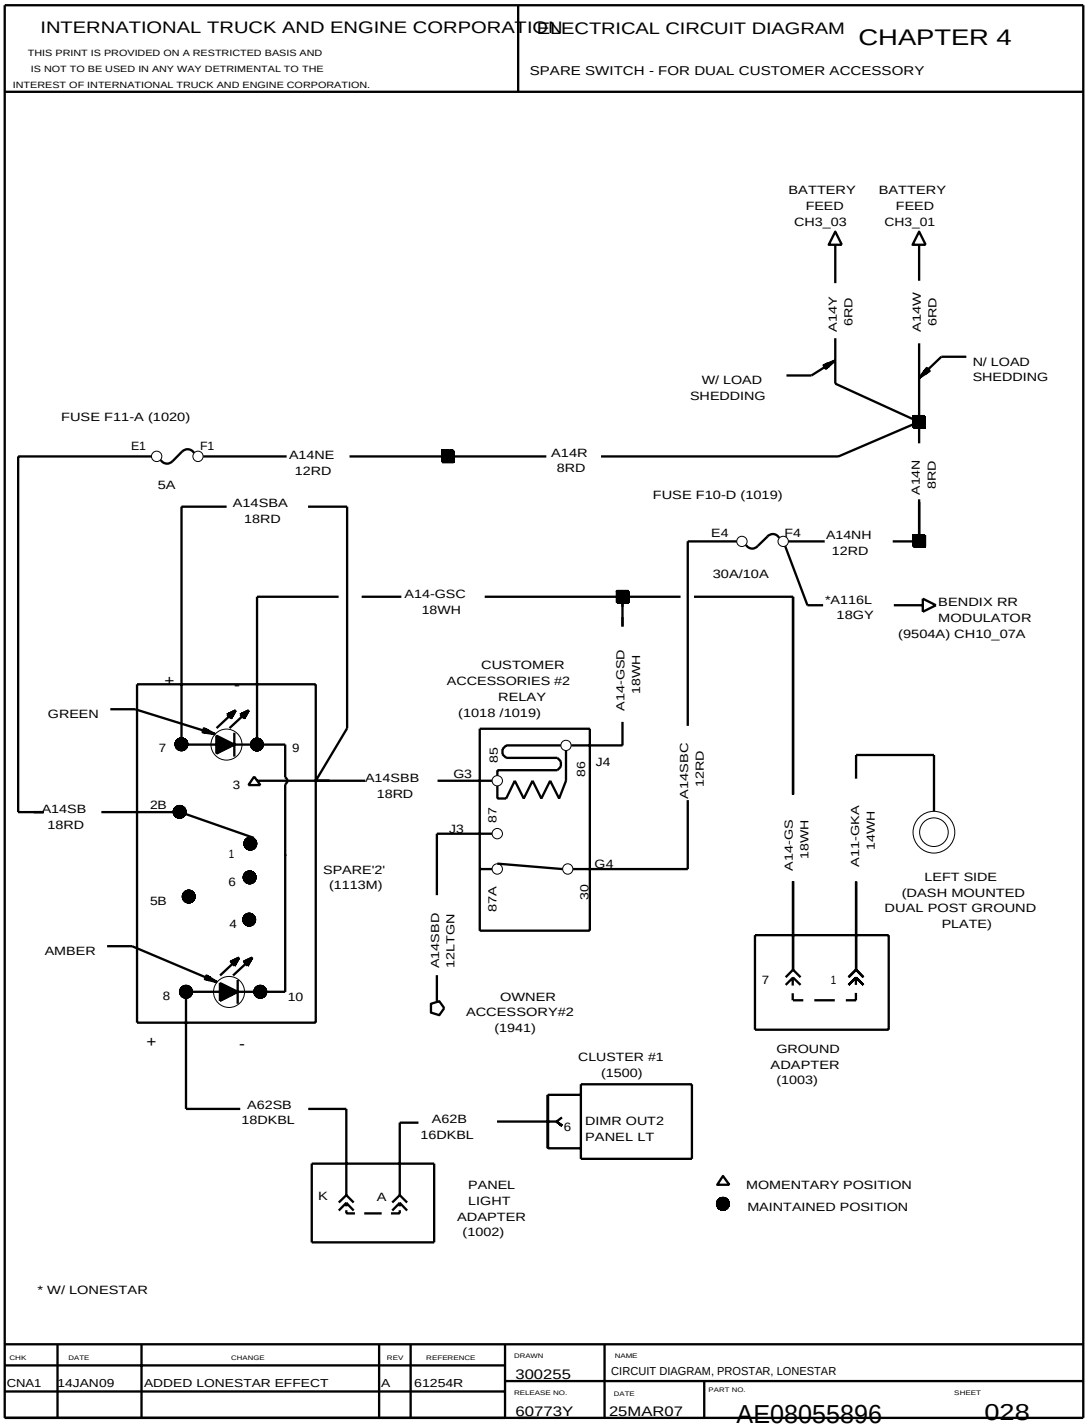


Figure 76 Spare Switch — For Dual Customer Accessory

https://truckmanualshub.com/

4.31. EATON VORAD EVT-300 SYSTEM, P. 29

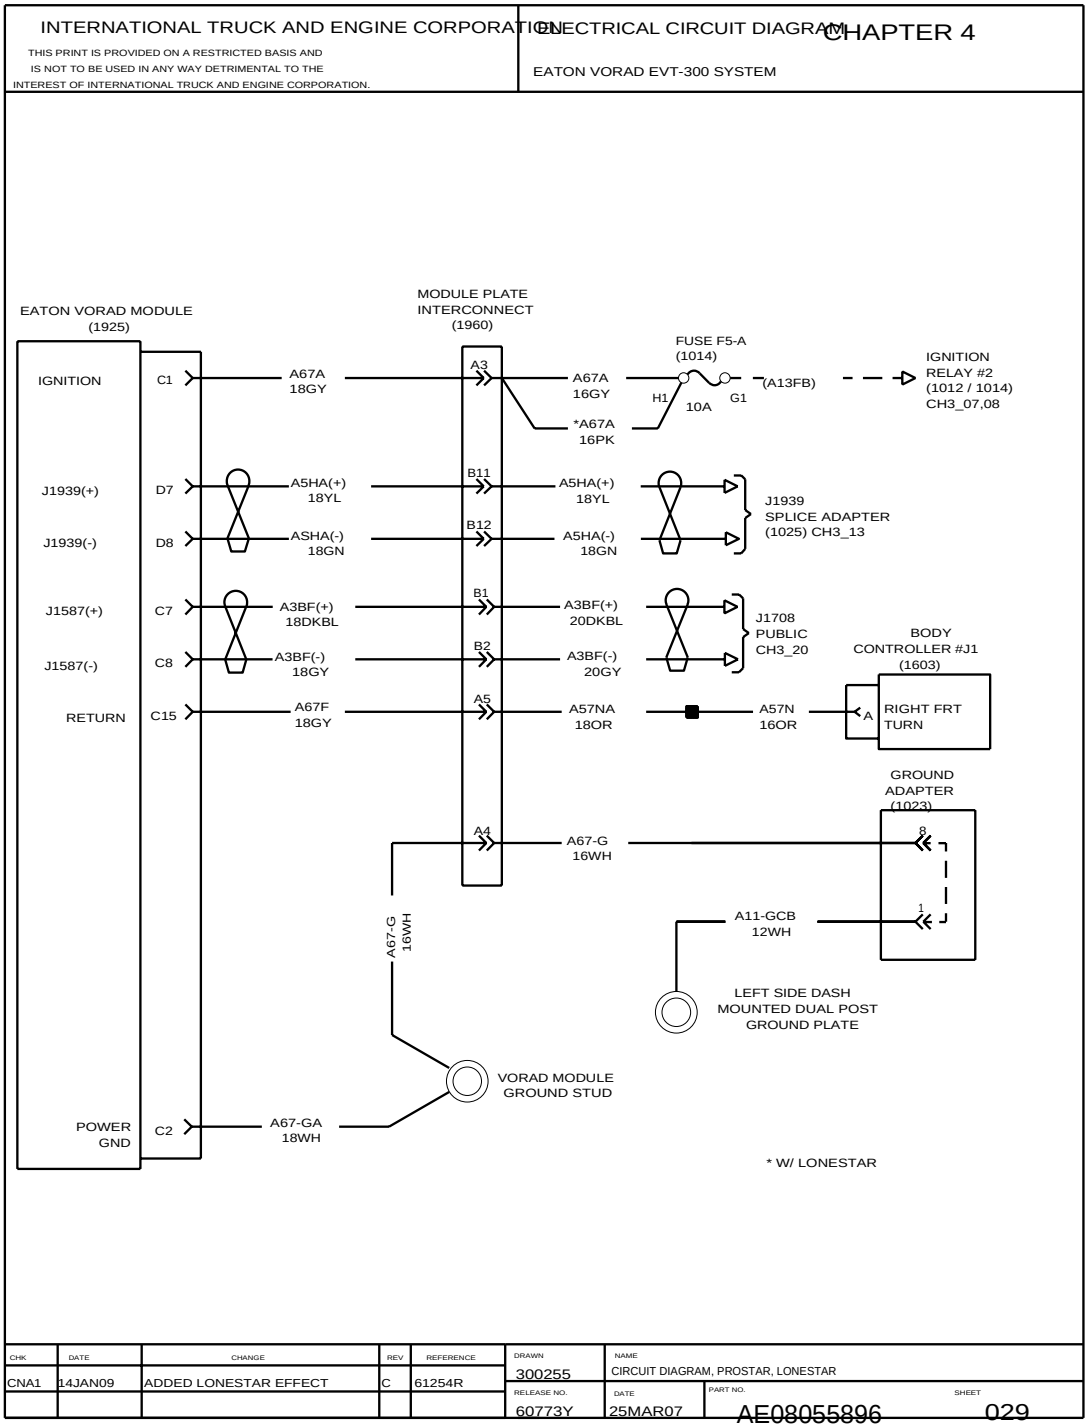


Figure 77 Eaton Vorad EVT-300 System

https://truckmanualshub.com/

4.32. EATON VORAD EVT-300 SYSTEM, P. 30

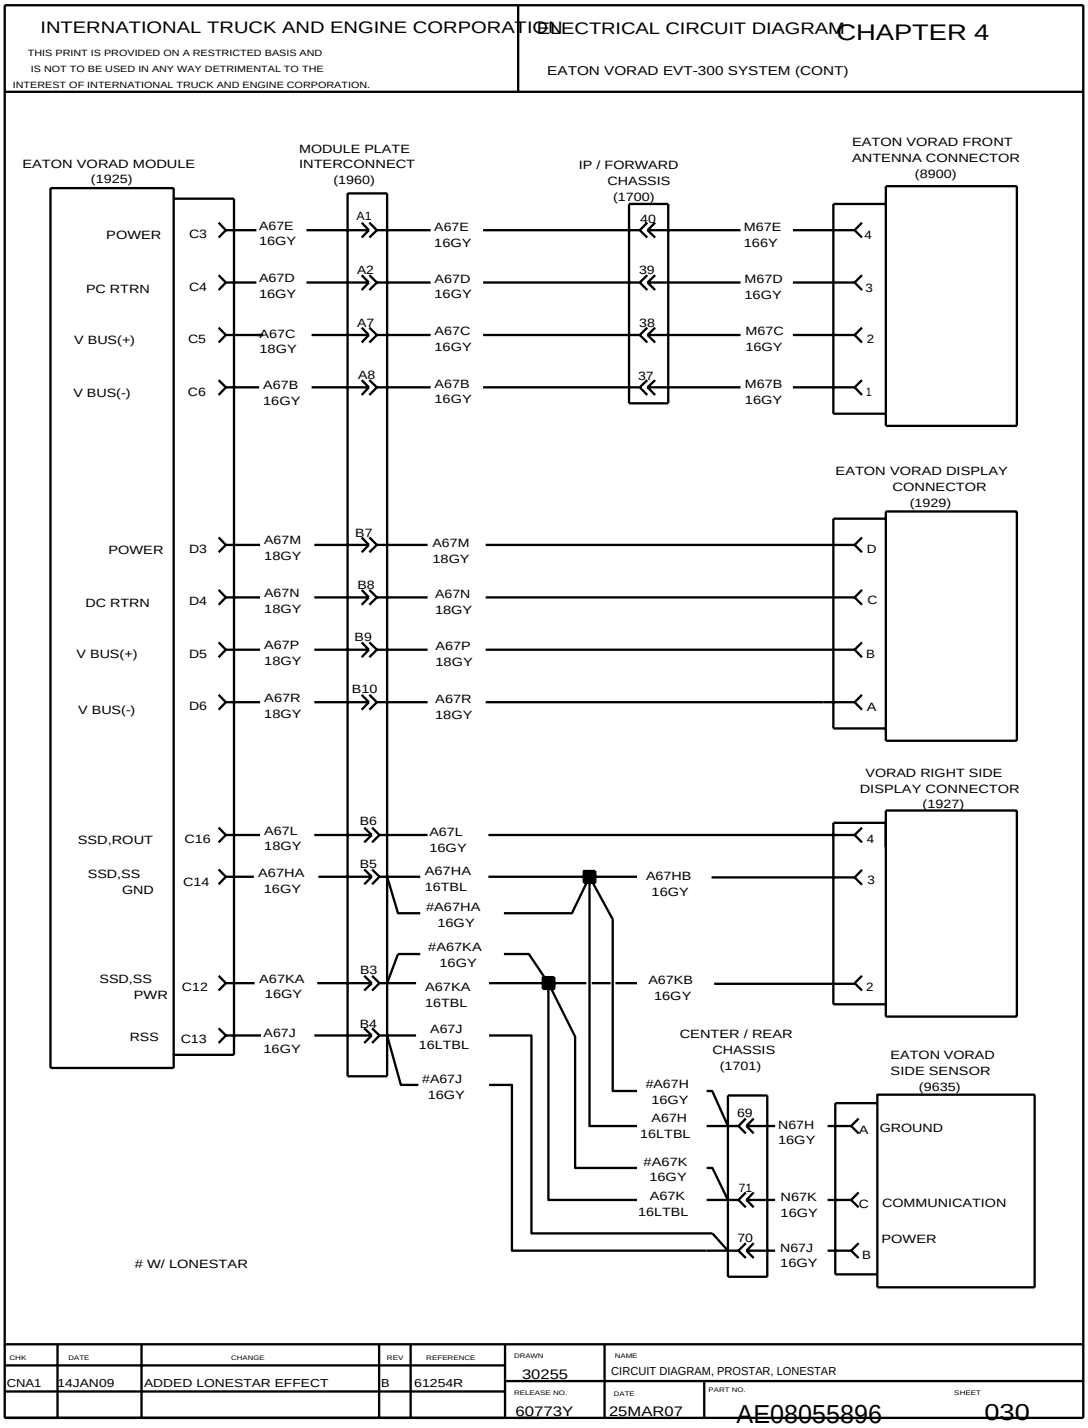


Figure 78 Eaton Vorad EVT-300 System

https://truckmanualshub.com/

4.33. EATON VORAD VS-400, P. 31

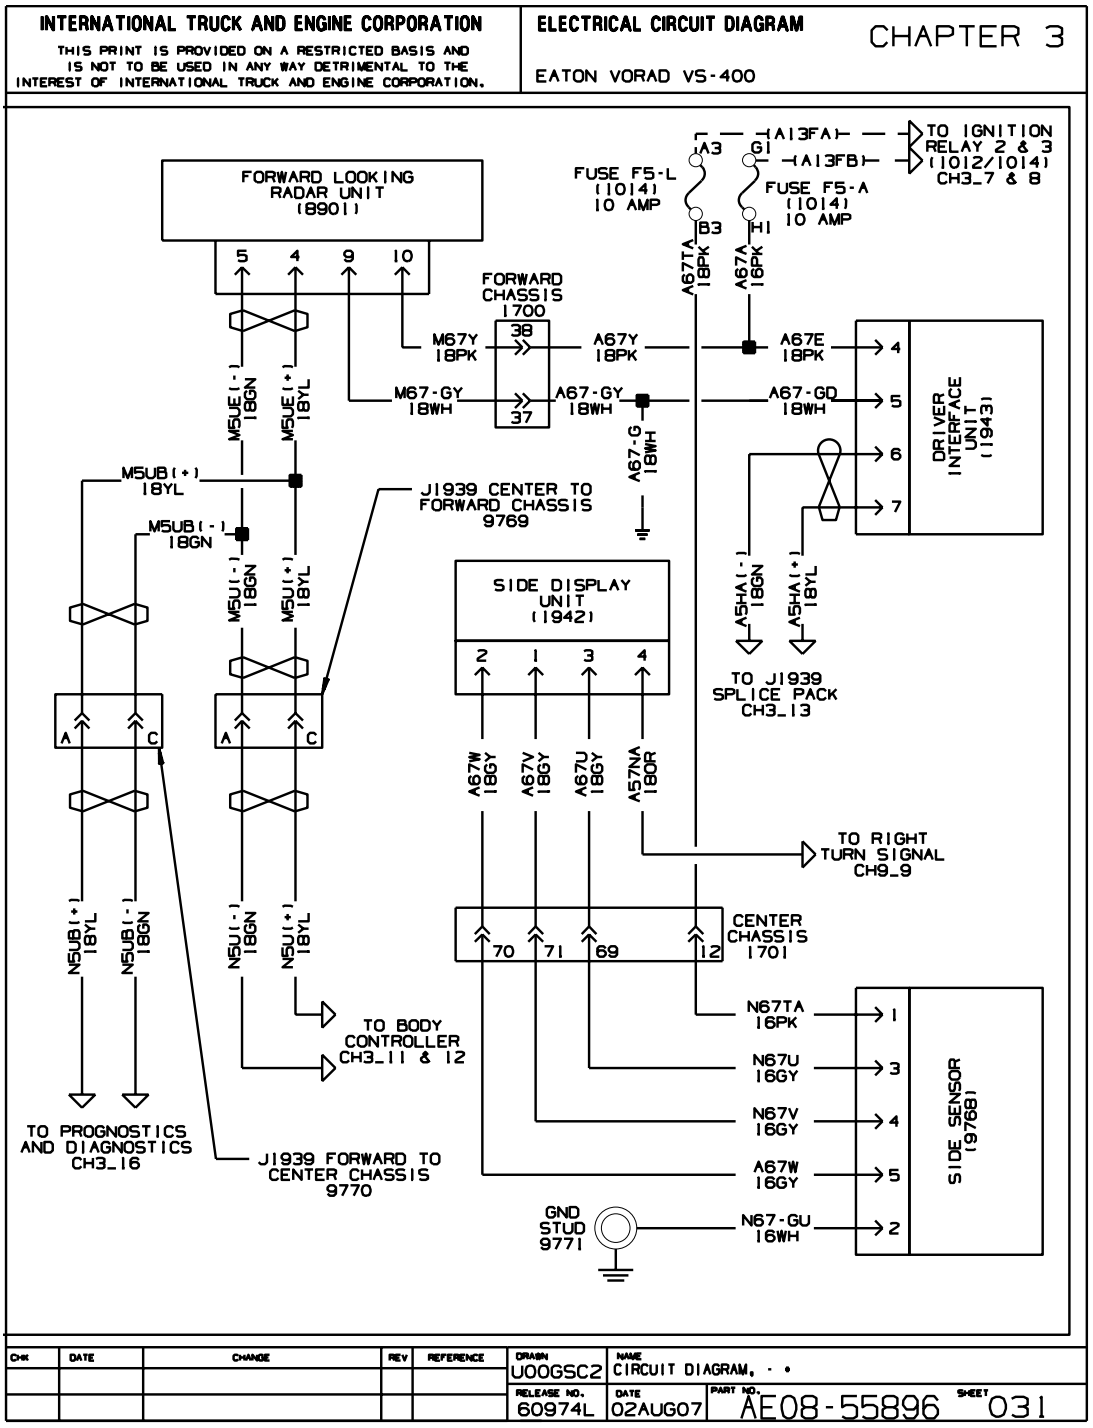


Figure 79 Eaton Vorad VS-400

https://truckmanualshub.com/

4.34. AWARE II, P. 32

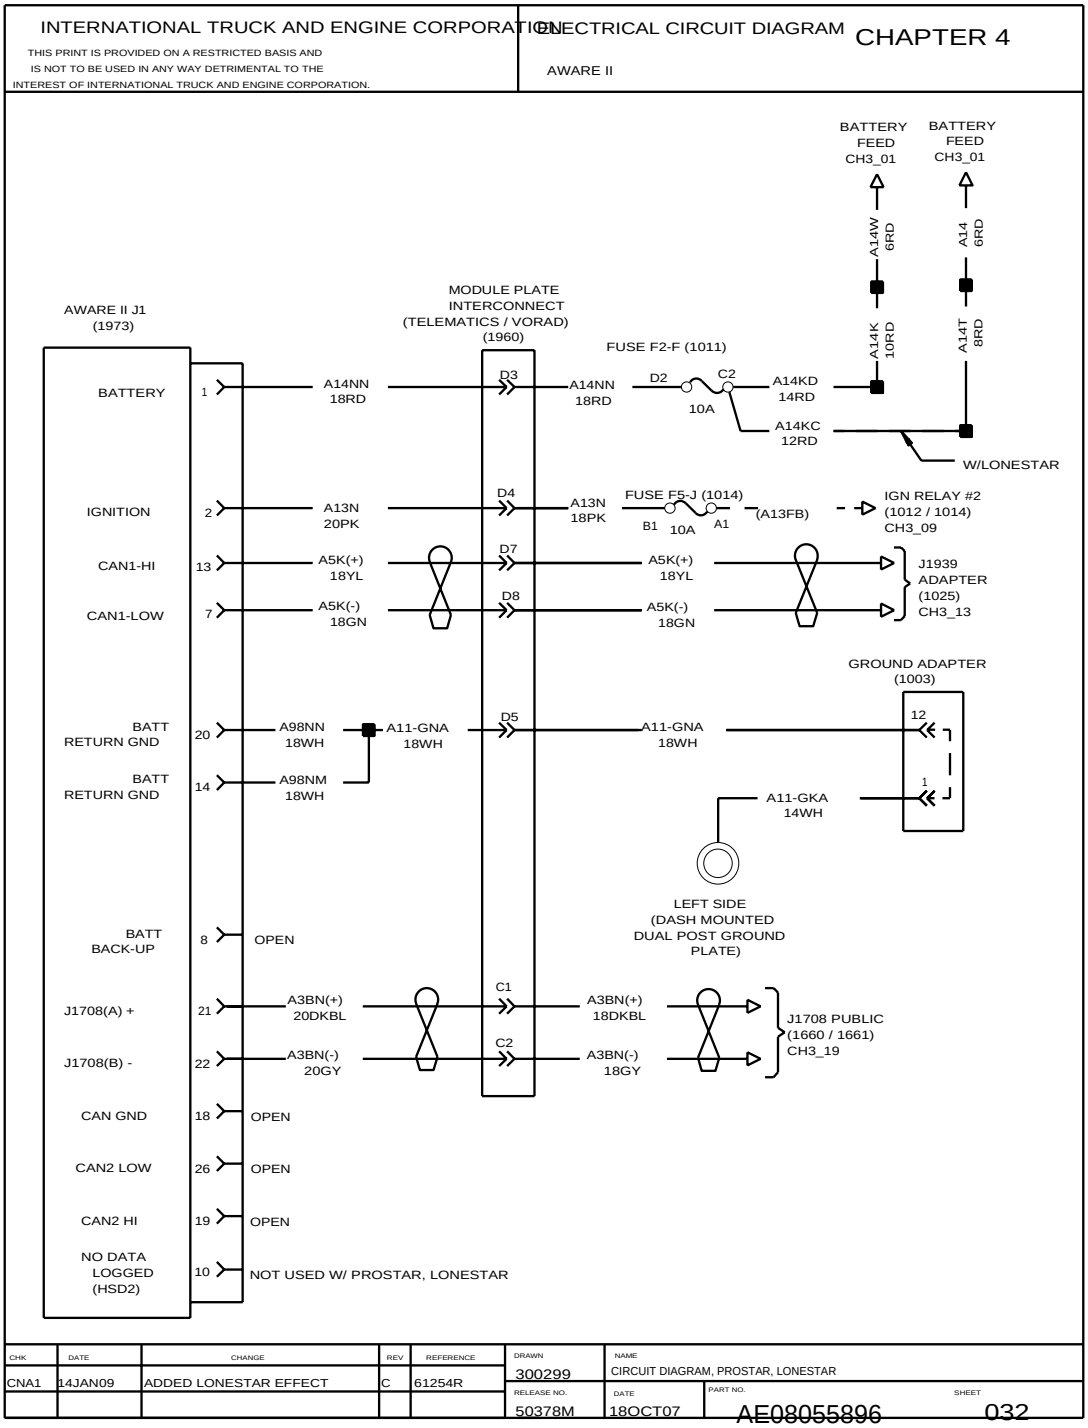


Figure 80 AWARE II

https://truckmanualshub.com/

4.35. AWARE II, P. 33

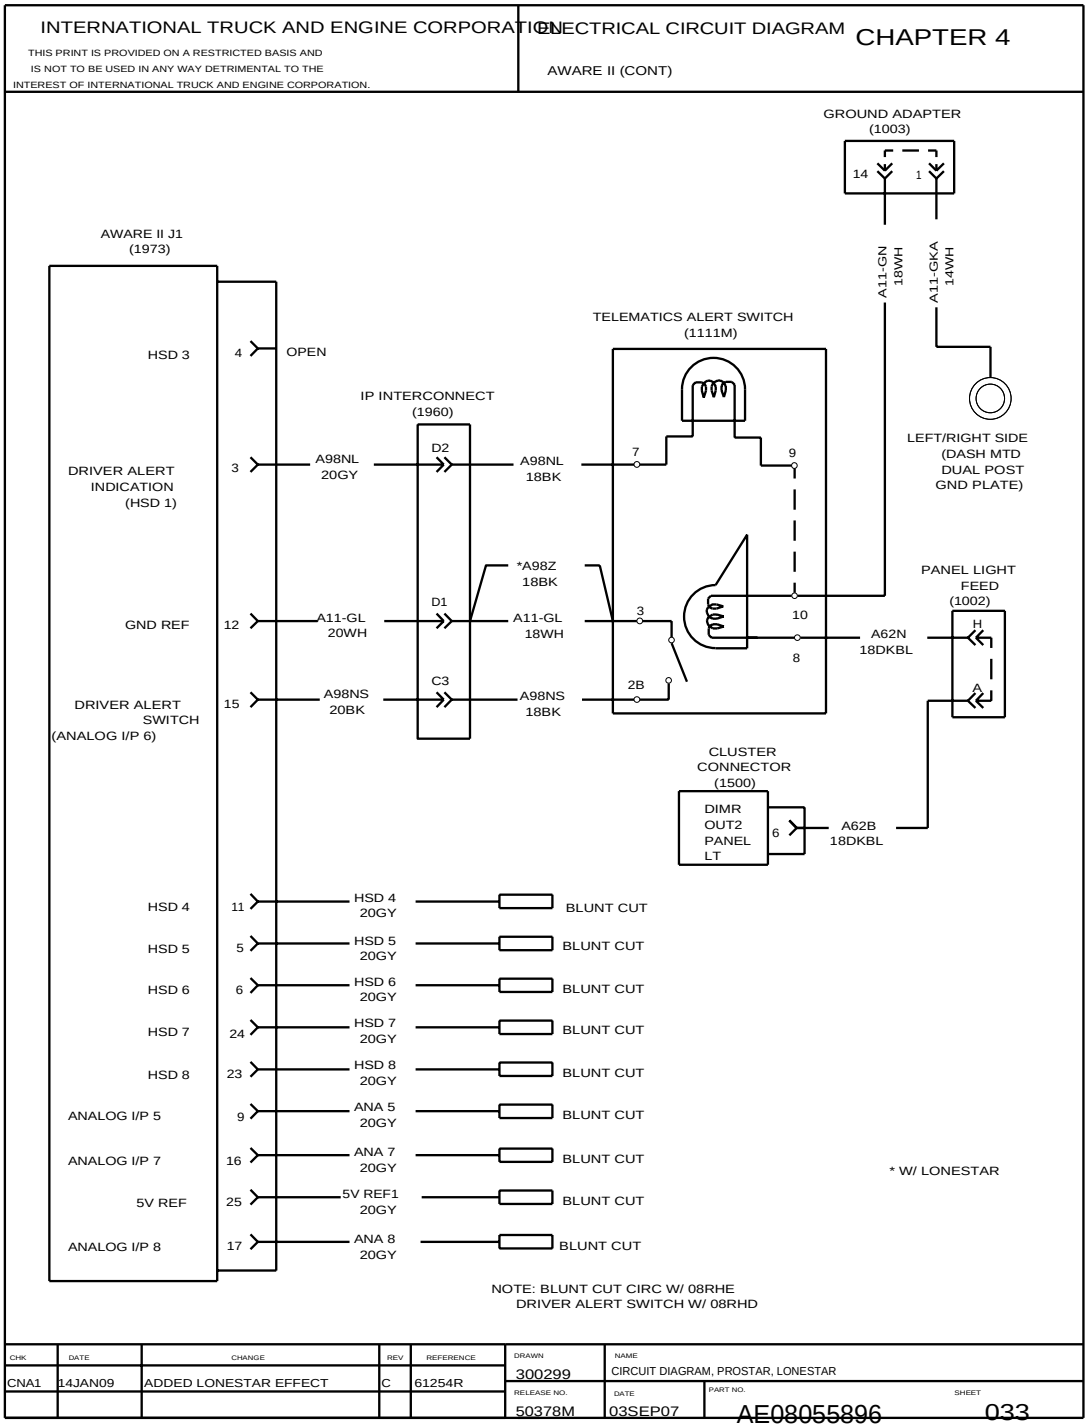


Figure 81 AWARE II

https://truckmanualshub.com/

4.36. AWARE II, P. 34

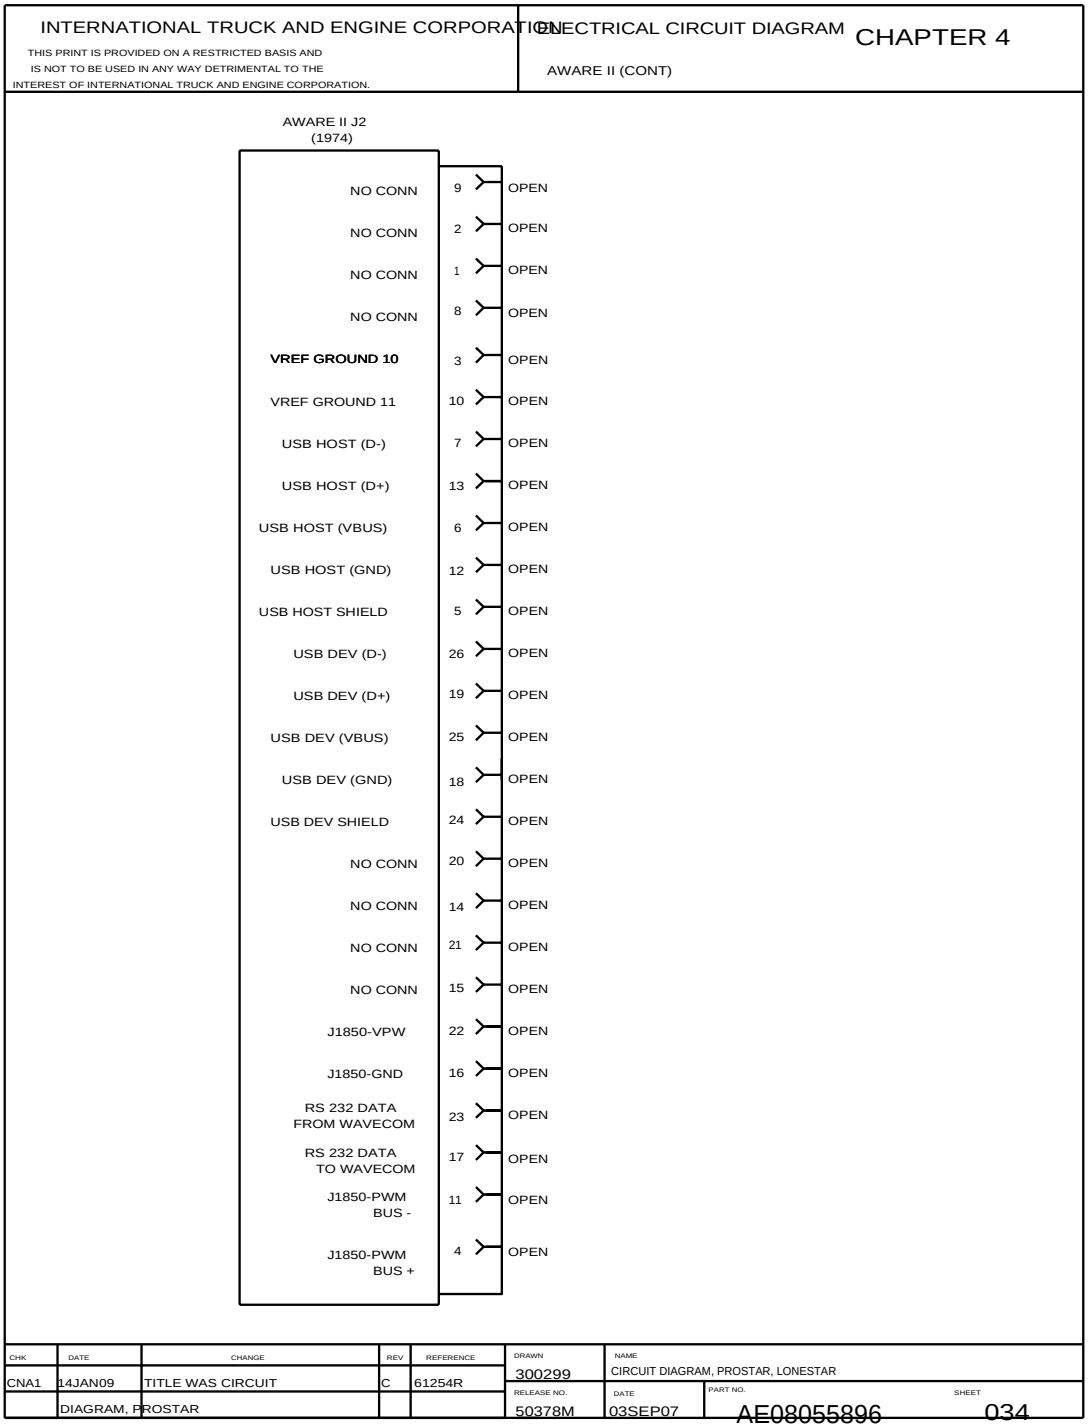


Figure 82 AWARE II

https://truckmanualshub.com/

4.37. AWARE II, P. 35

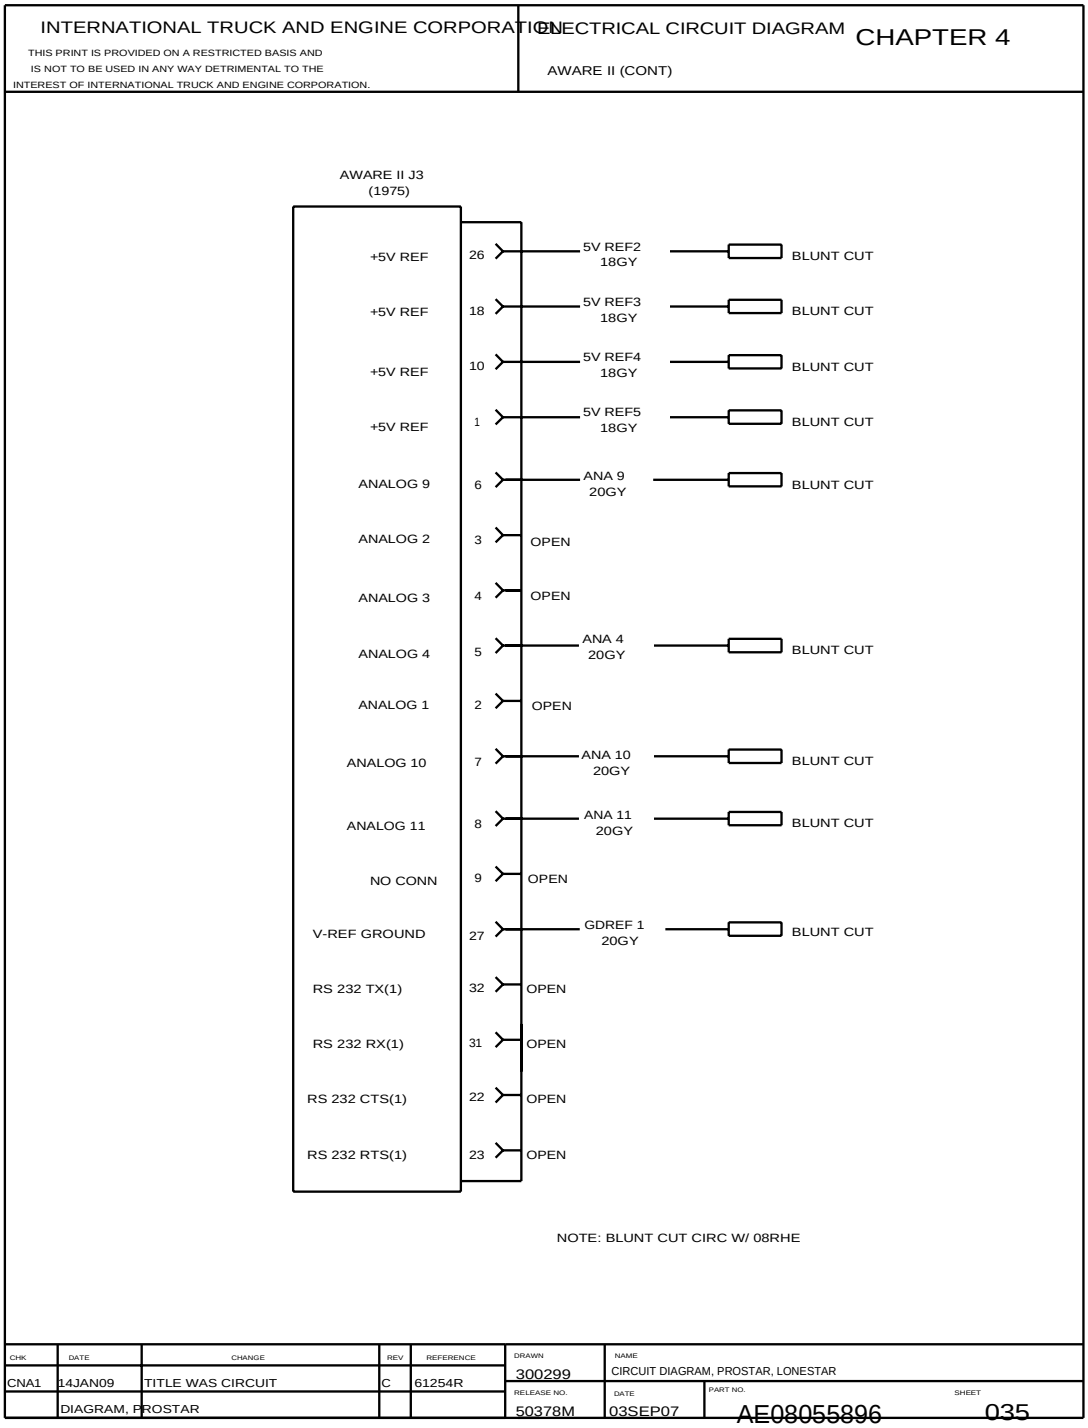


Figure 83 AWARE II

https://truckmanualshub.com/

4.38. AWARE II, P. 36

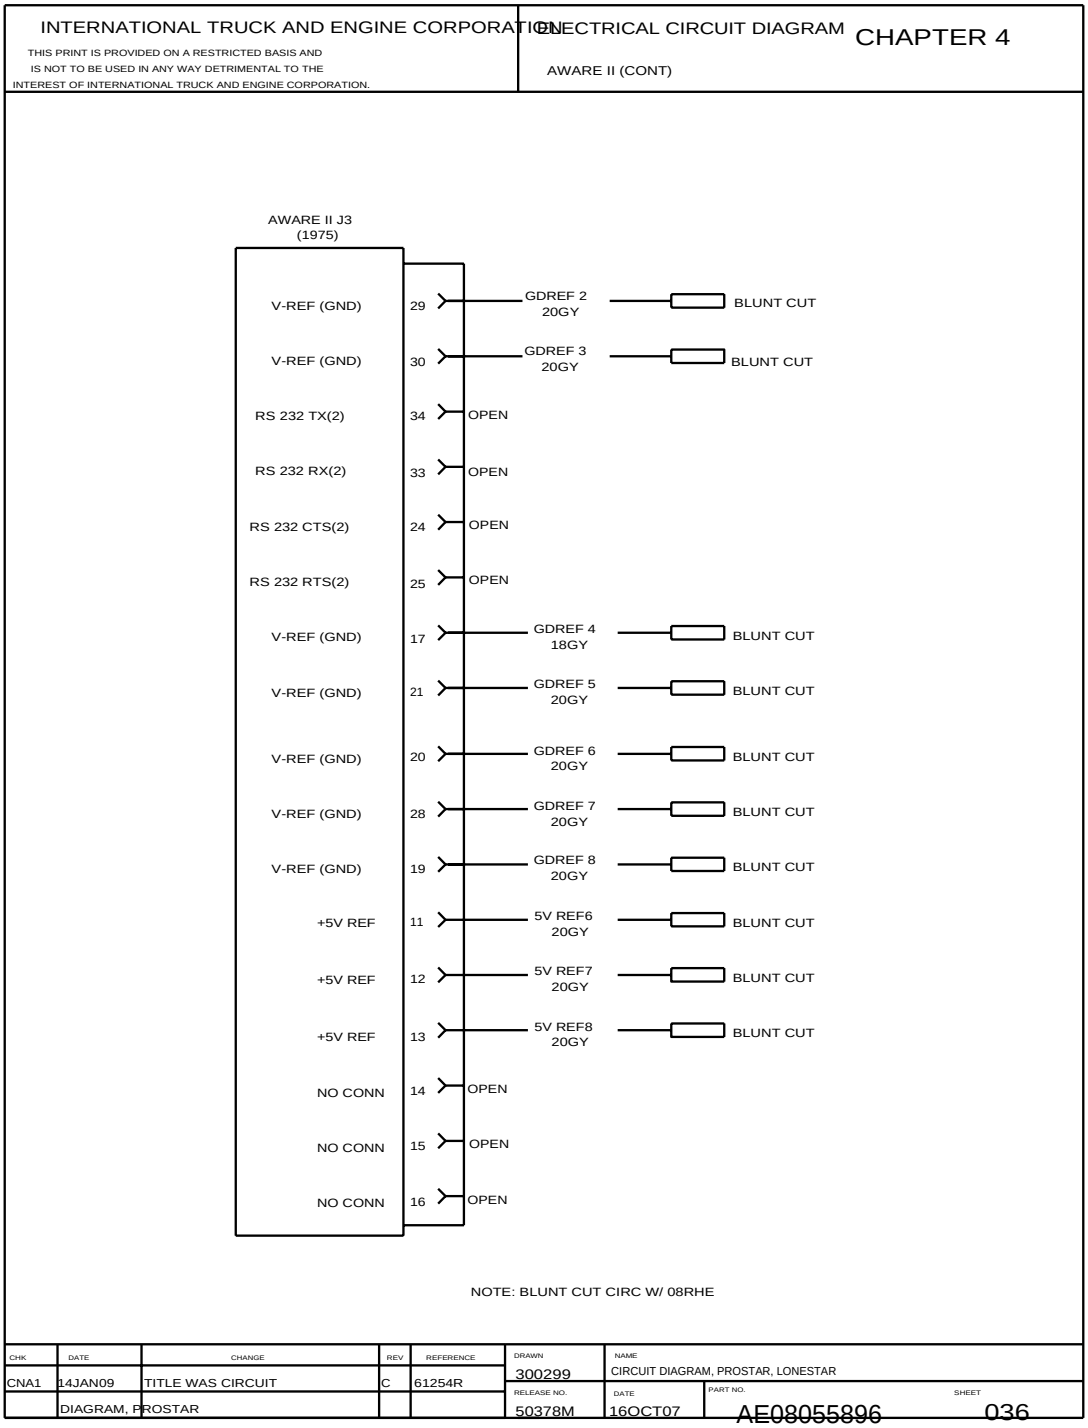


Figure 84 AWARE II

https://truckmanualshub.com/

4.39. QUALCOMM OMNIVISION, P. 37

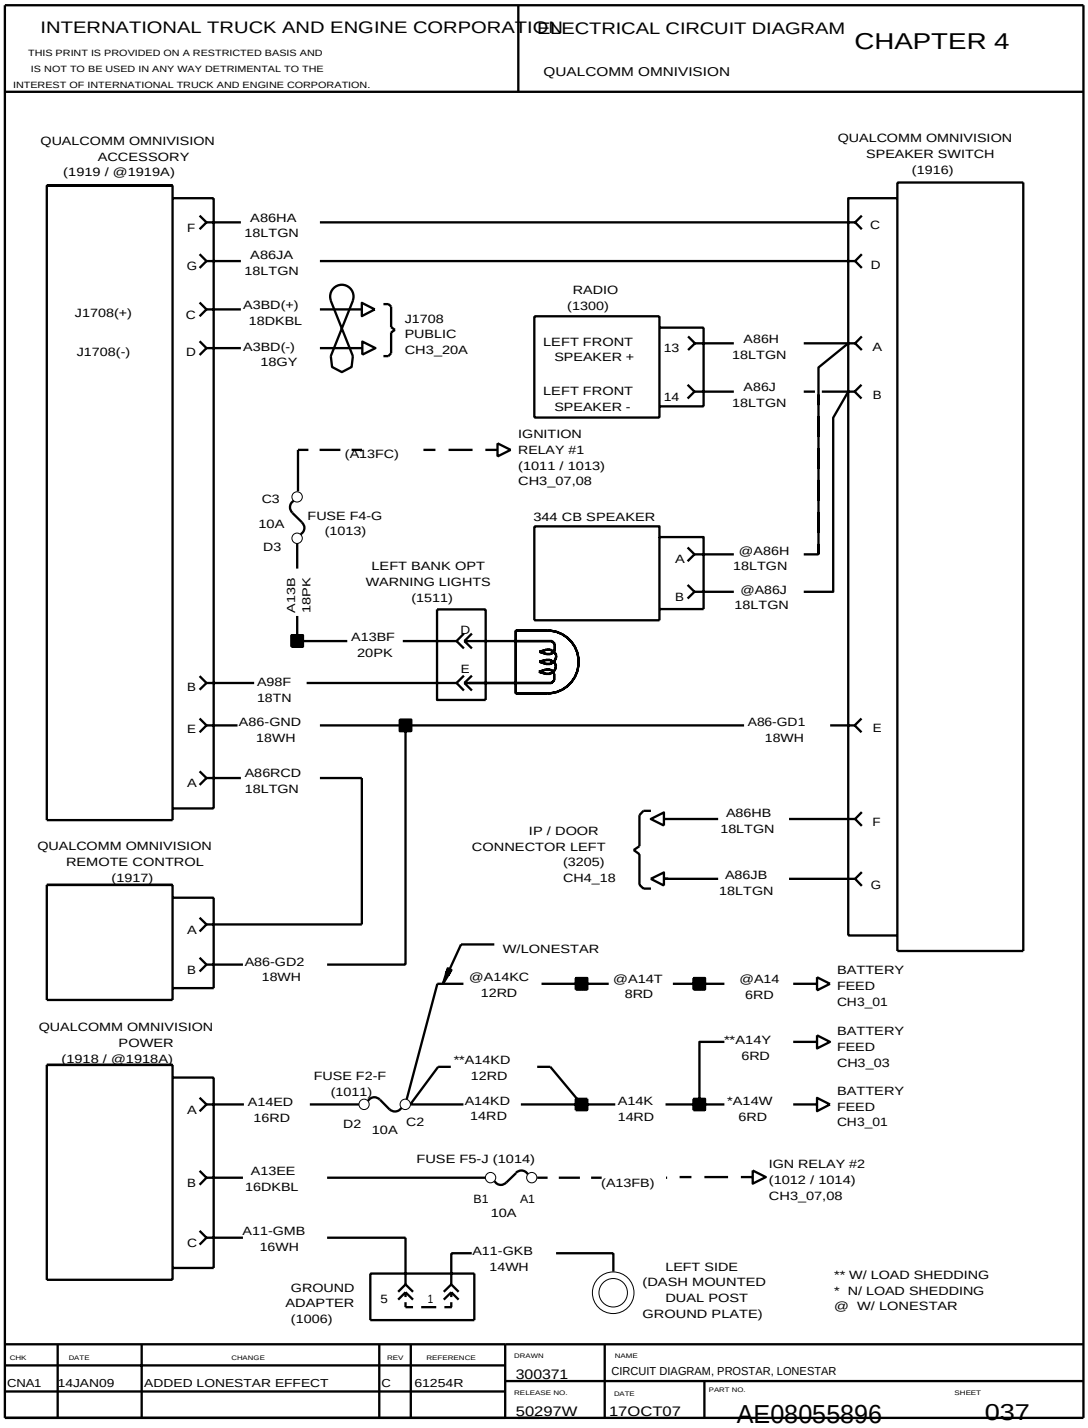


Figure 85 Qualcomm Omnivision

https://truckmanualshub.com/

4.40. QUALCOMM OMNIVISION, P. 38

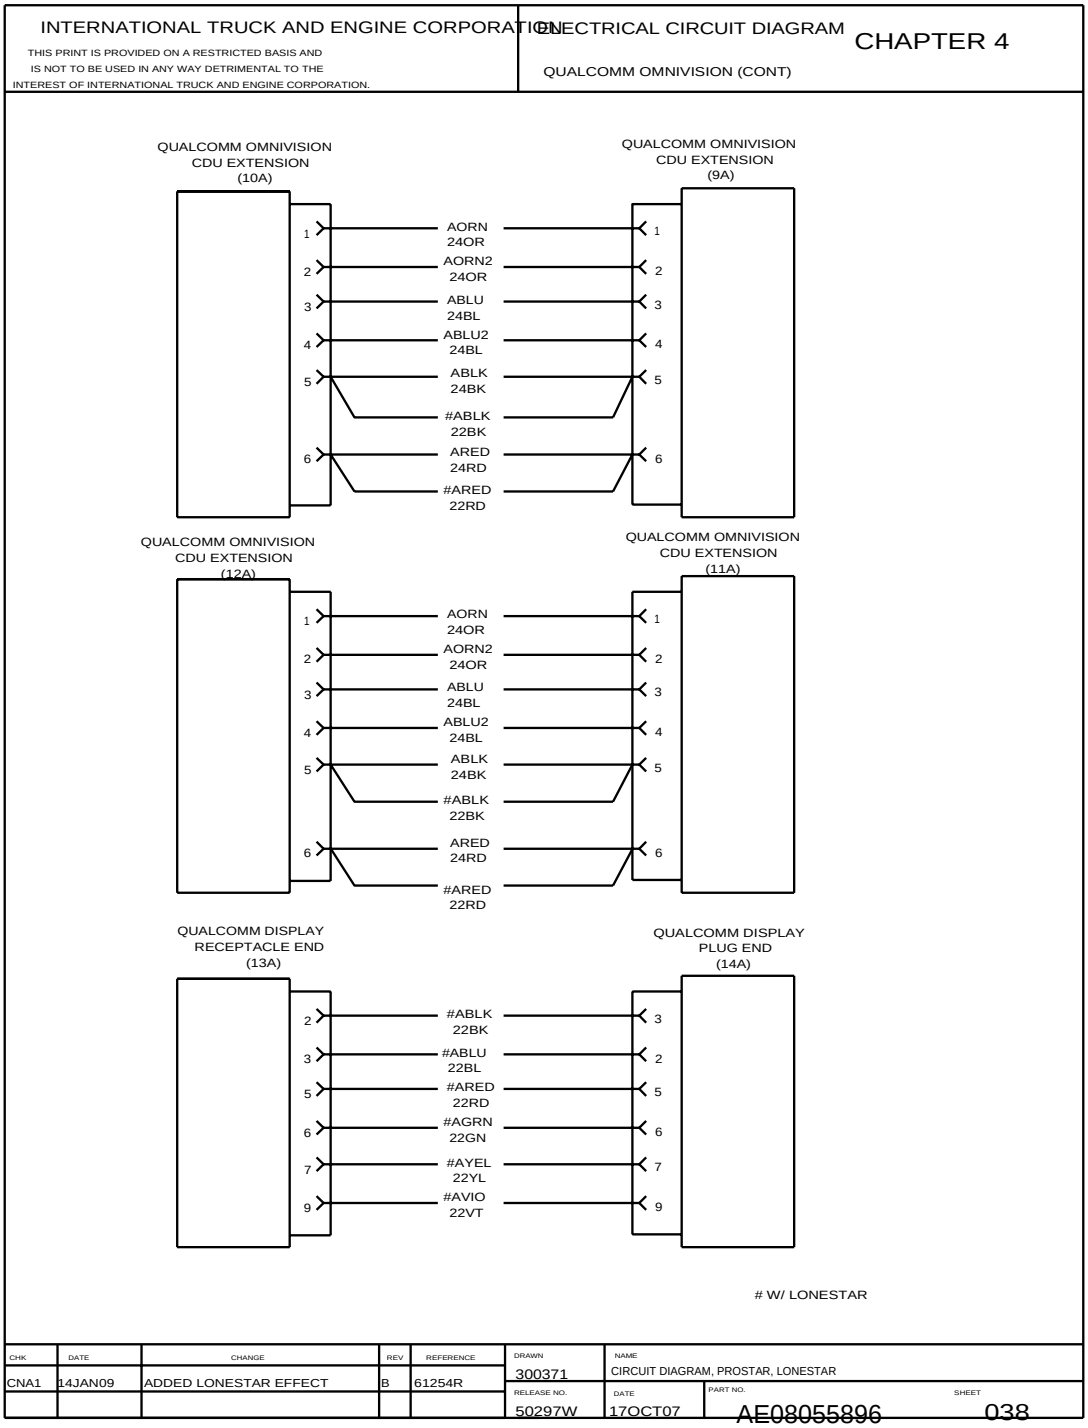


Figure 86 Qualcomm Omnivision

https://truckmanualshub.com/

4.41. MOTIENT MOBILE MAX, P. 39

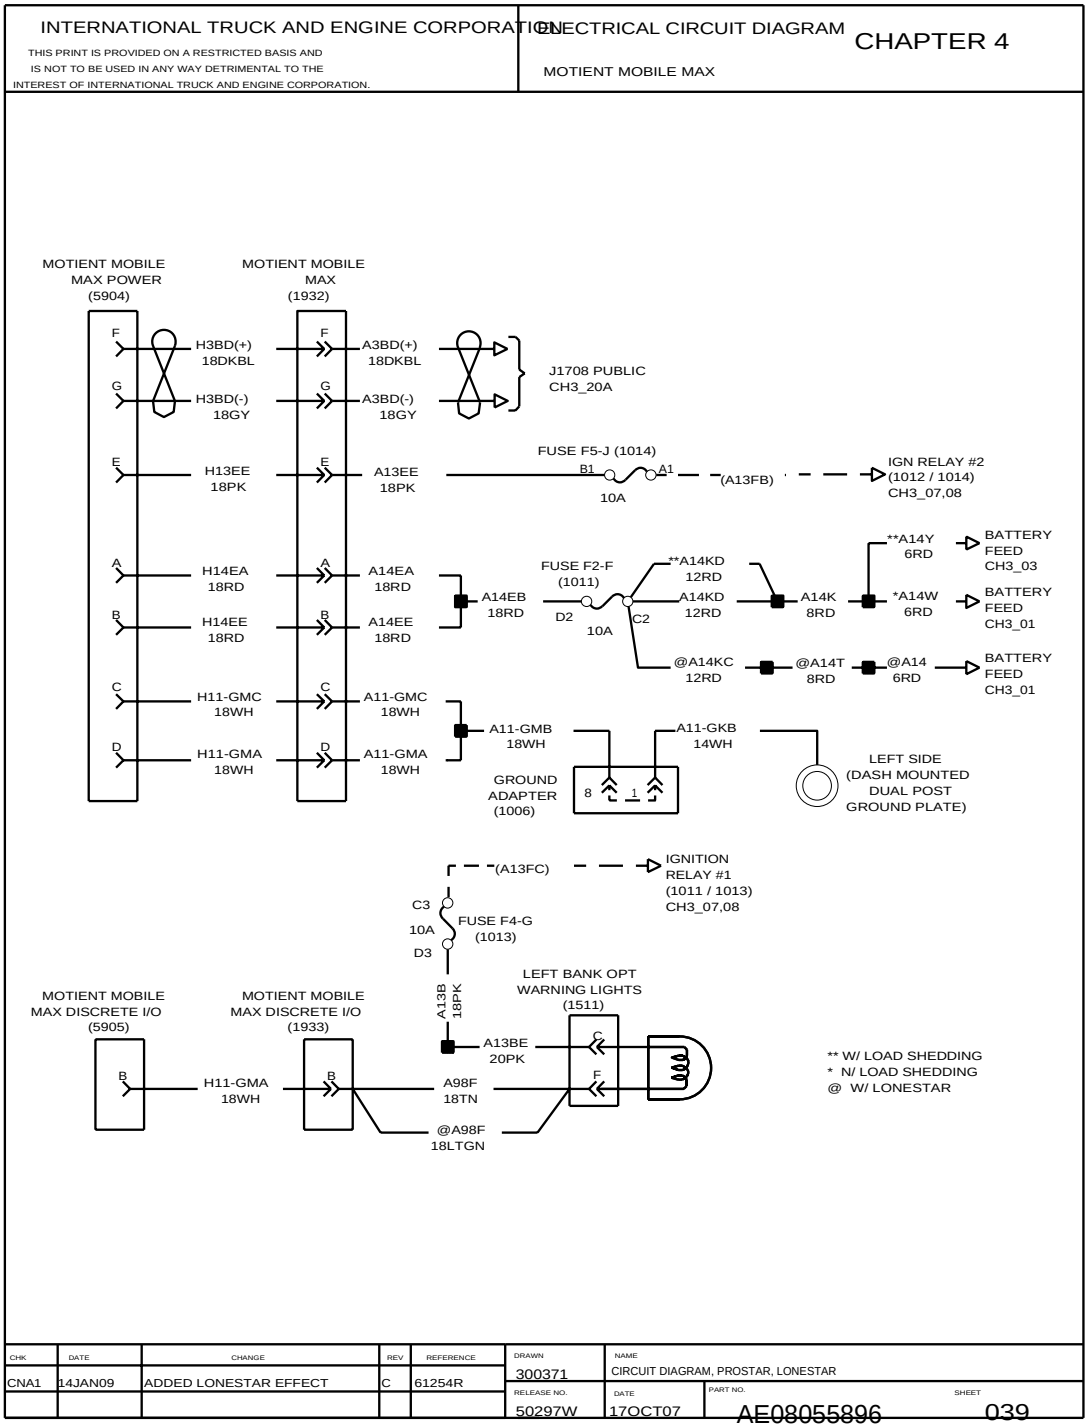


Figure 87 Motient Mobile Max

https://truckmanualshub.com/

4.42. REMOTE RADIO, P. 40

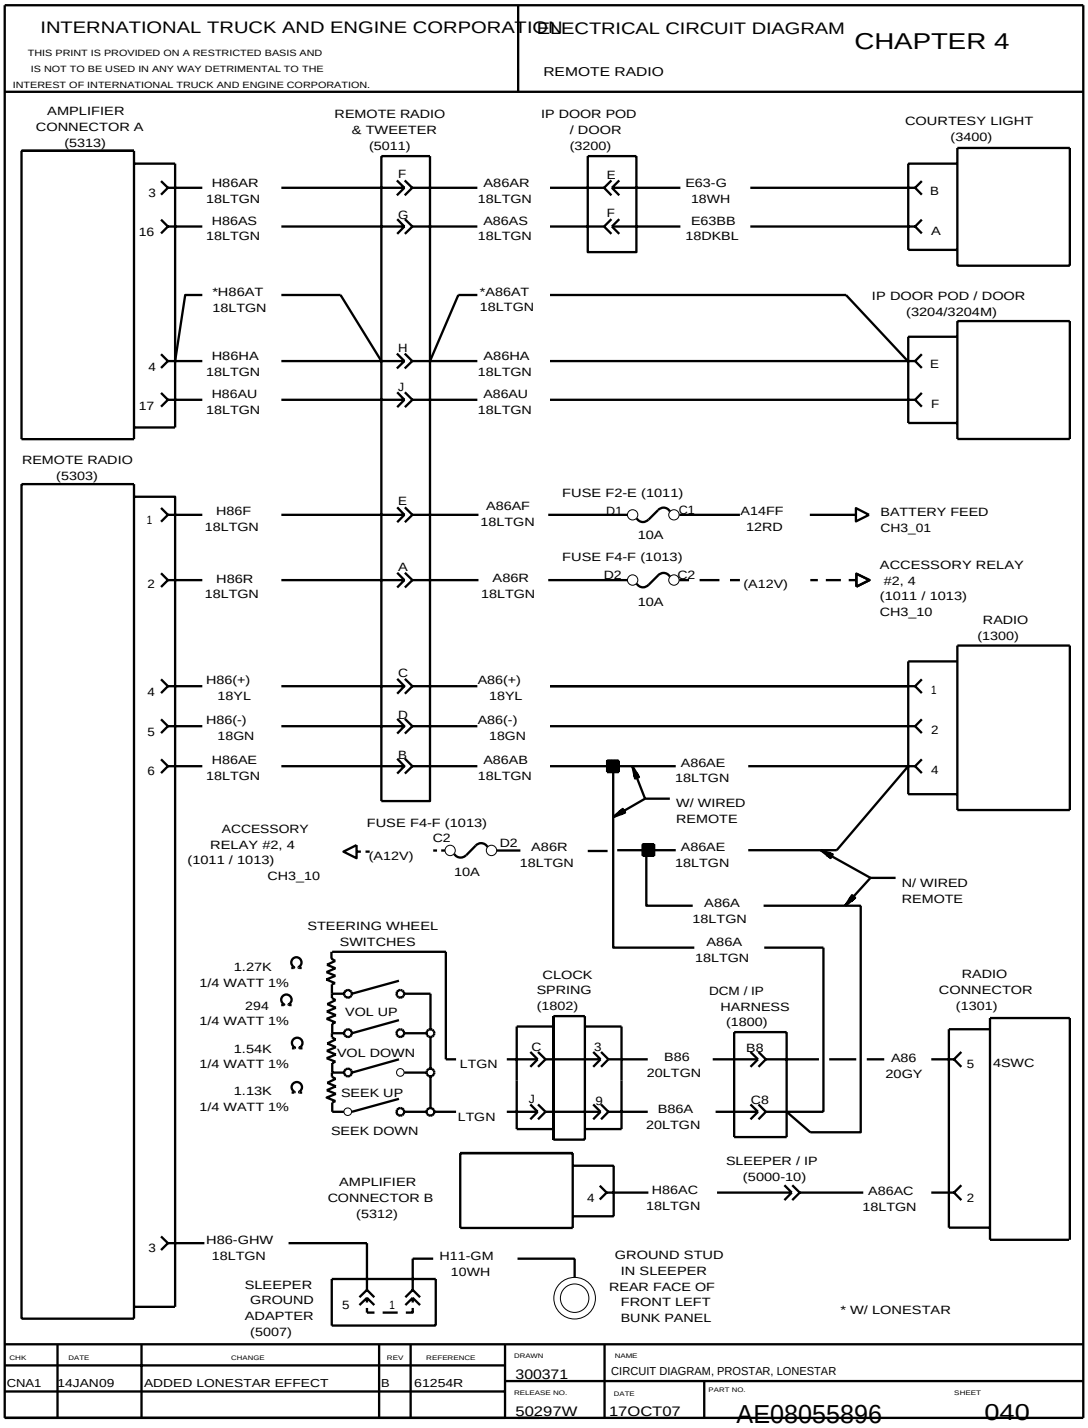


Figure 88 Remote Radio

https://truckmanualshub.com/

4.43. REMOTE RADIO, P. 41

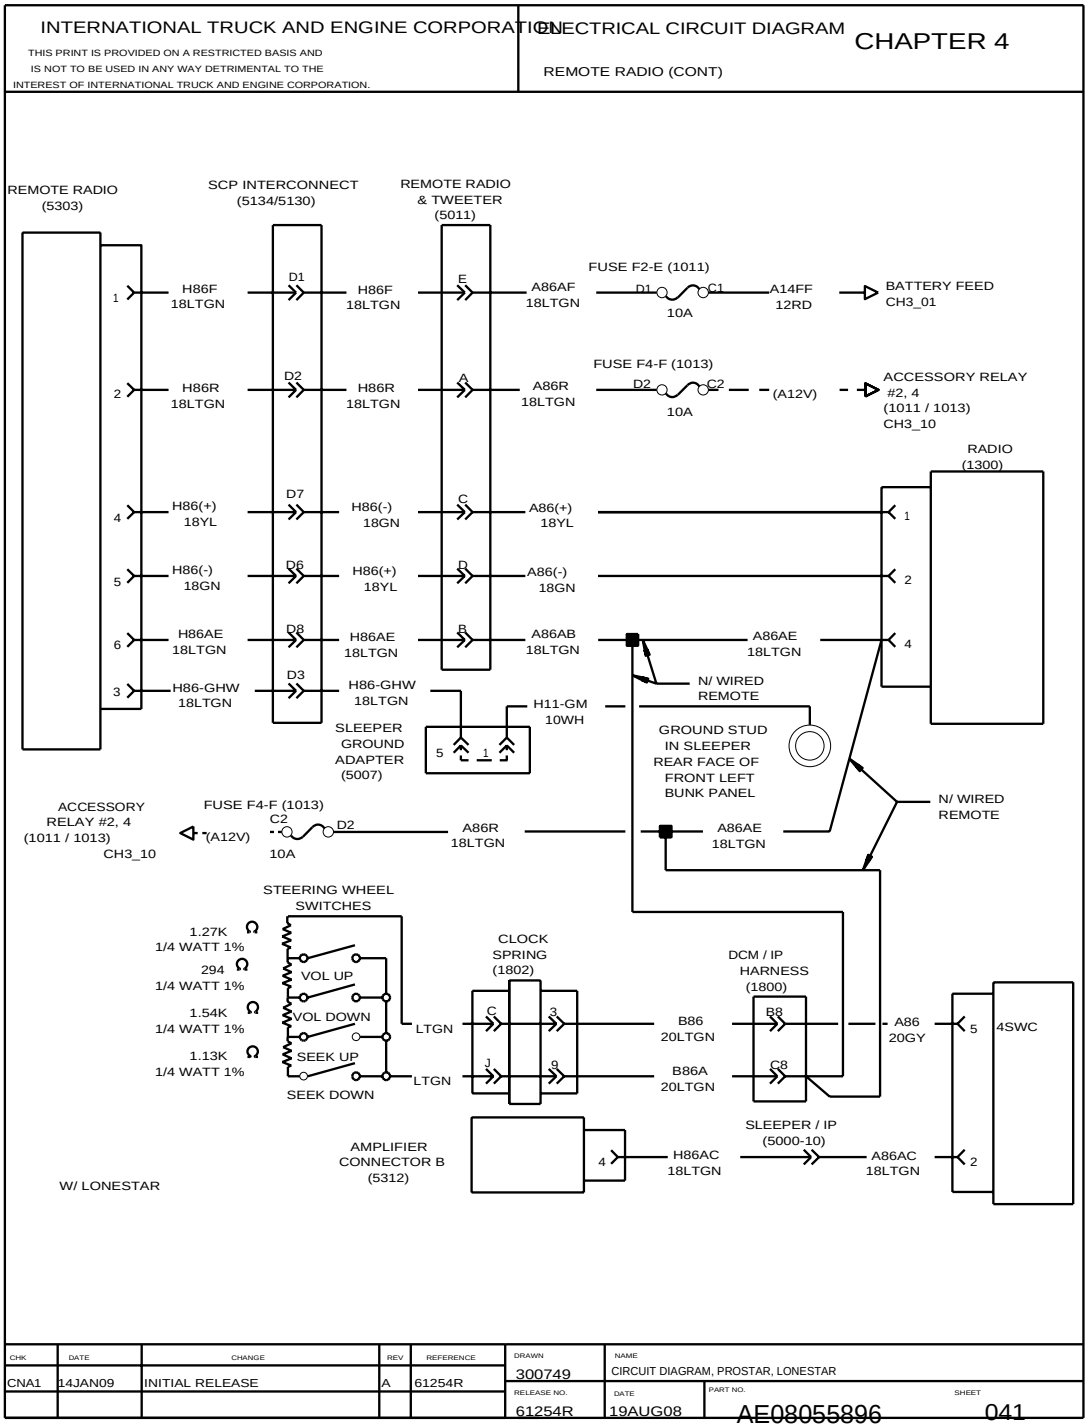


Figure 89 Remote Radio

https://truckmanualshub.com/

5. CHARGING AND CRANKING SYSTEM (CHAPTER 5)

5.1. MANUAL TRANSMISSION, P. 1

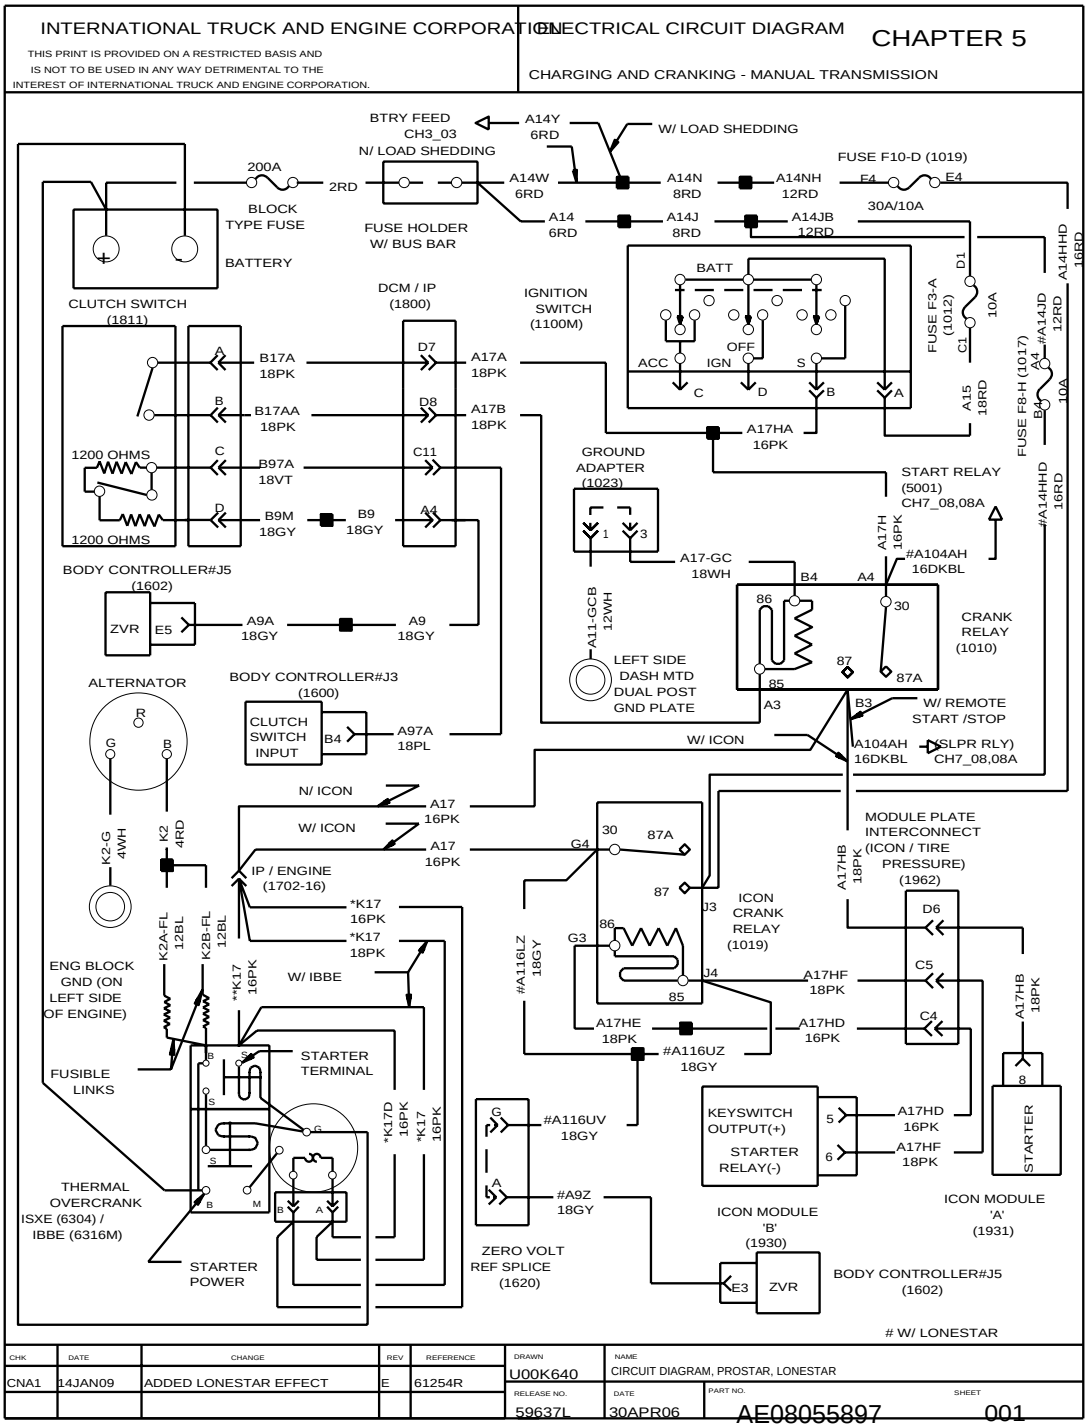


Figure 90 Manual Transmission

https://truckmanualshub.com/

5.2. MANUAL TRANSMISSION (CAT ENGINE), P. 1A

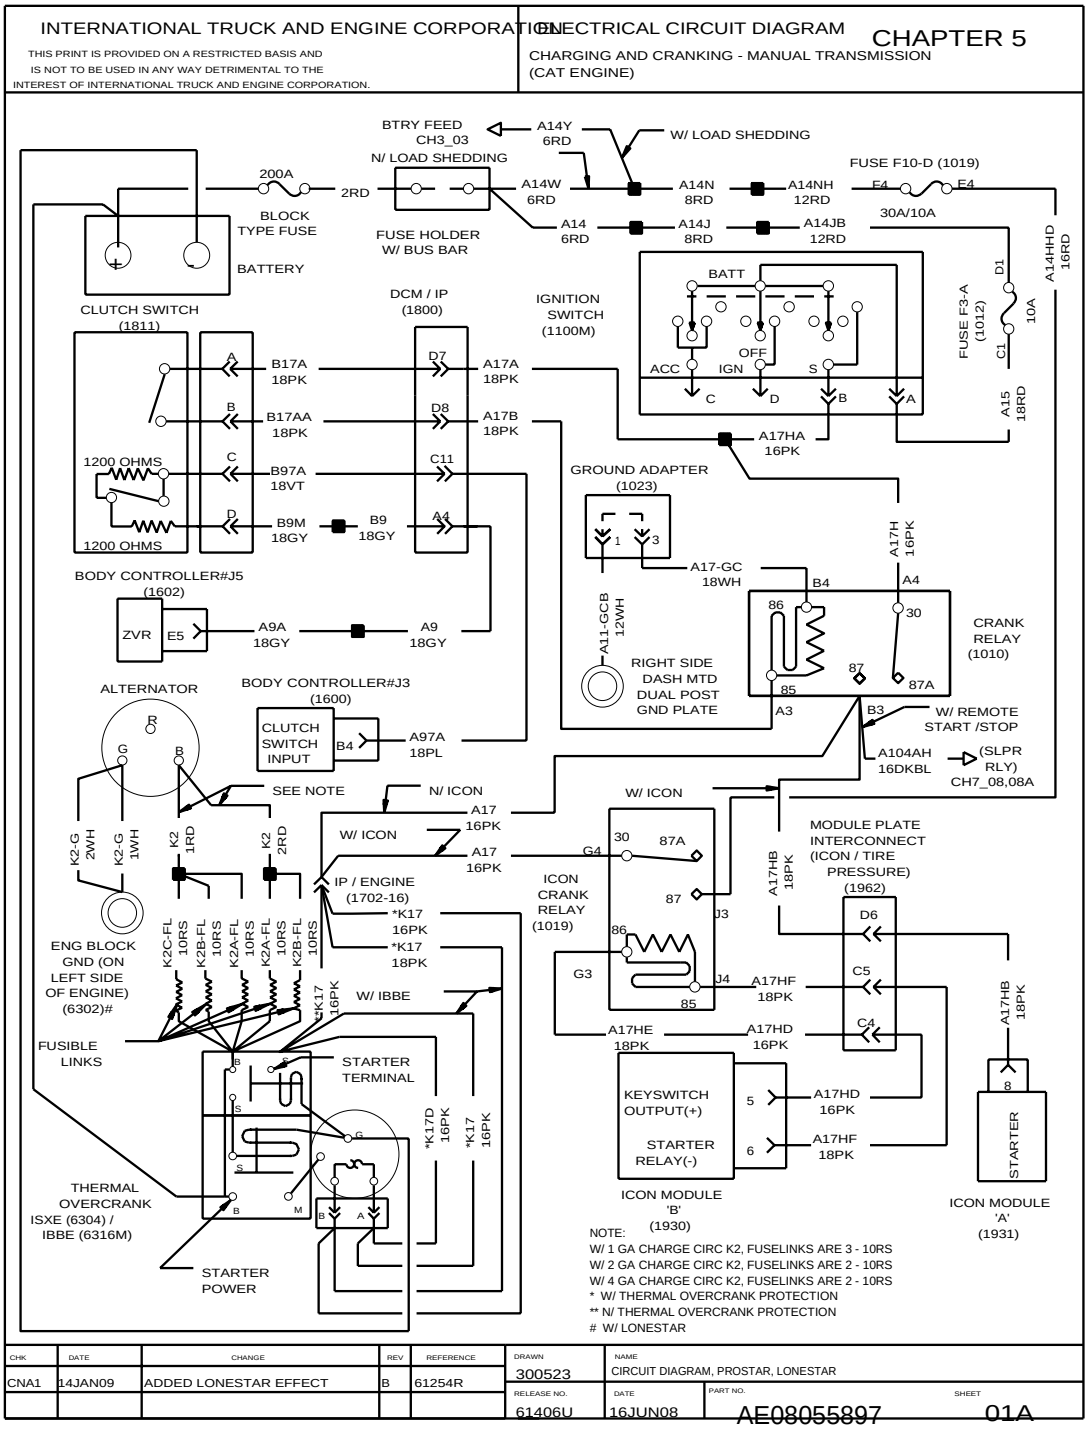


Figure 91 Manual Transmission (Cat Engine)

https://truckmanualshub.com/

5.3. AUTOMATIC TRANSMISSION, P. 2

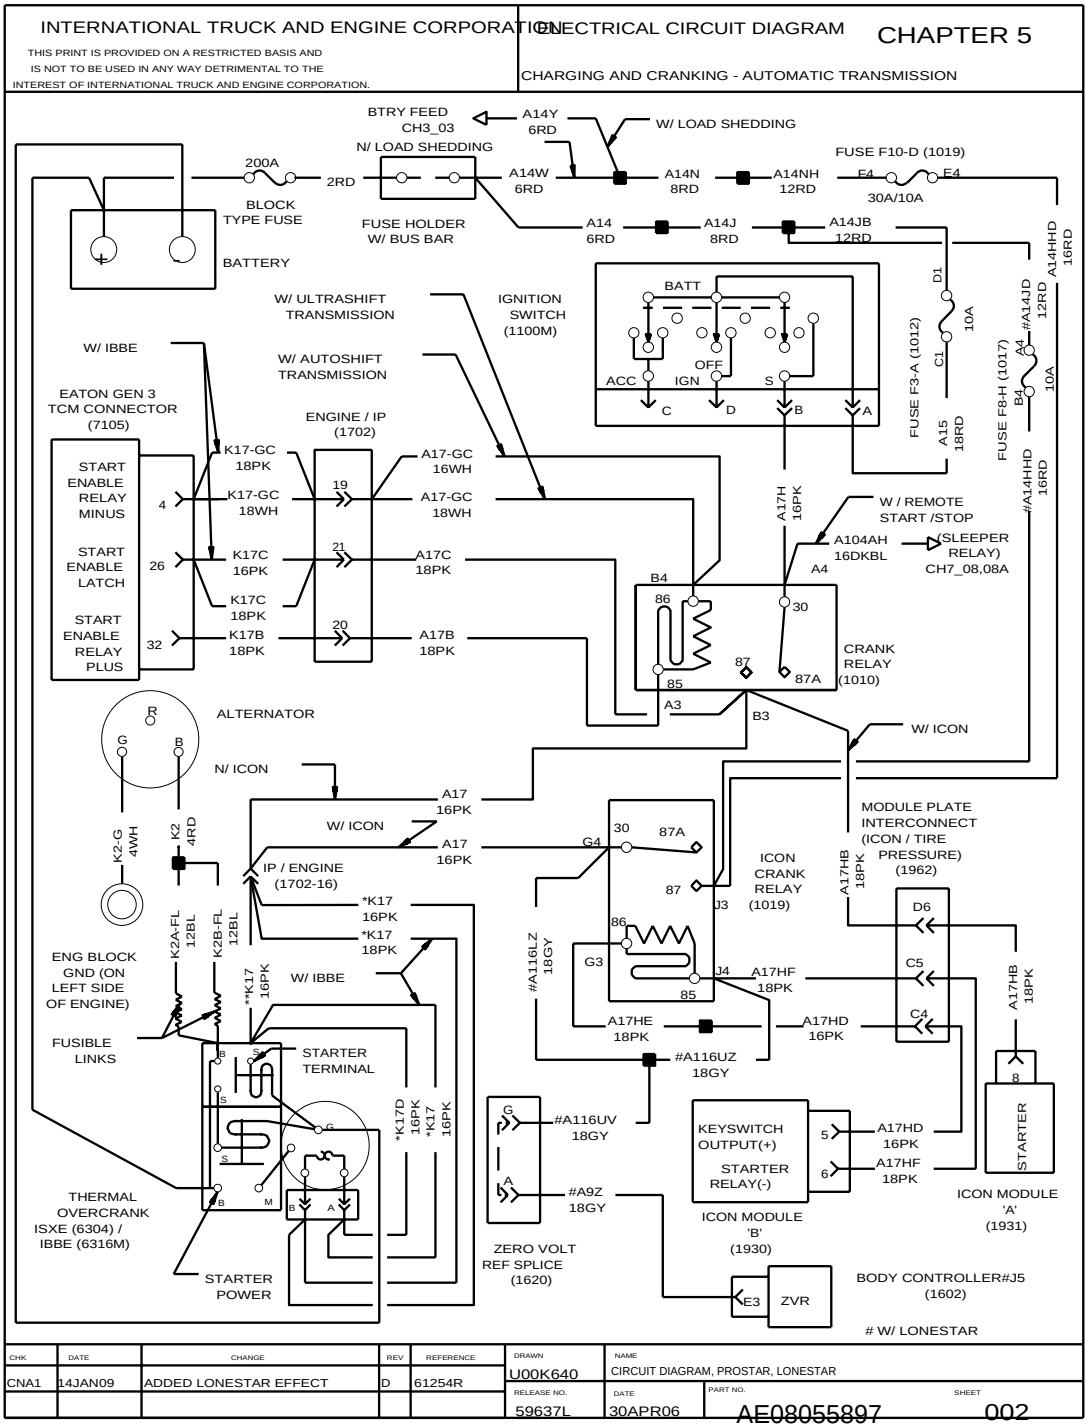


Figure 92 Automatic Transmission

https://truckmanualshub.com/

5.4. AUTOMATIC TRANSMISSION (CAT ENGINE), P. 2A

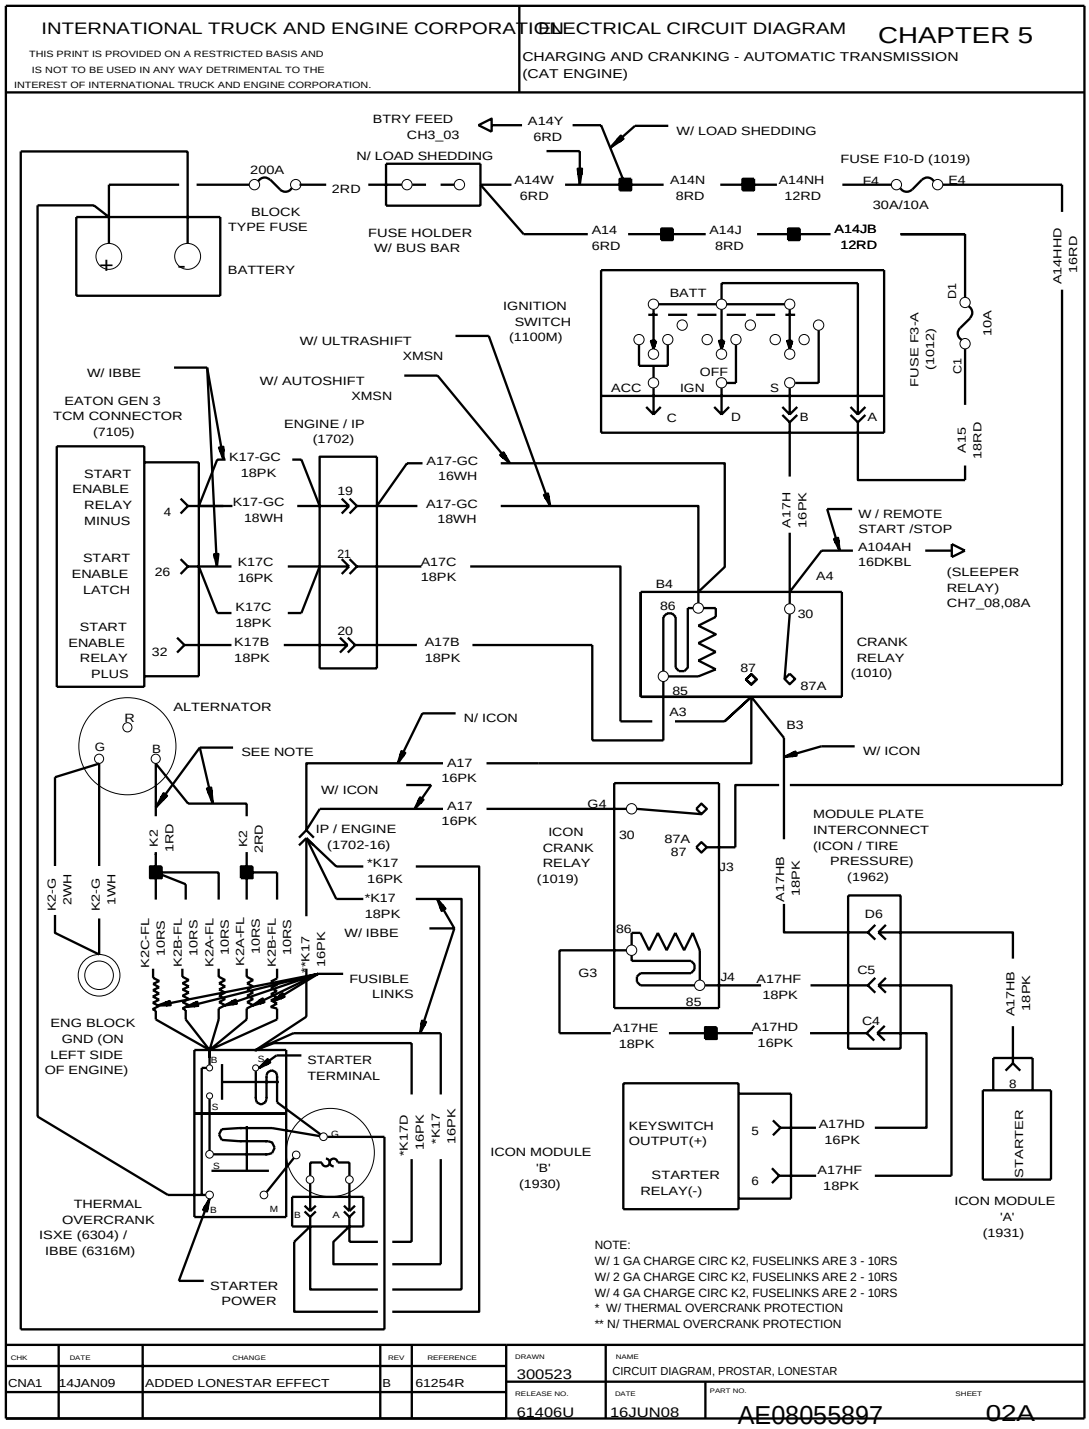


Figure 93 Automatic Transmission (Cat Engine)

https://truckmanualshub.com/

5.5. FREEDOMLINE TRANSMISSION, P. 3

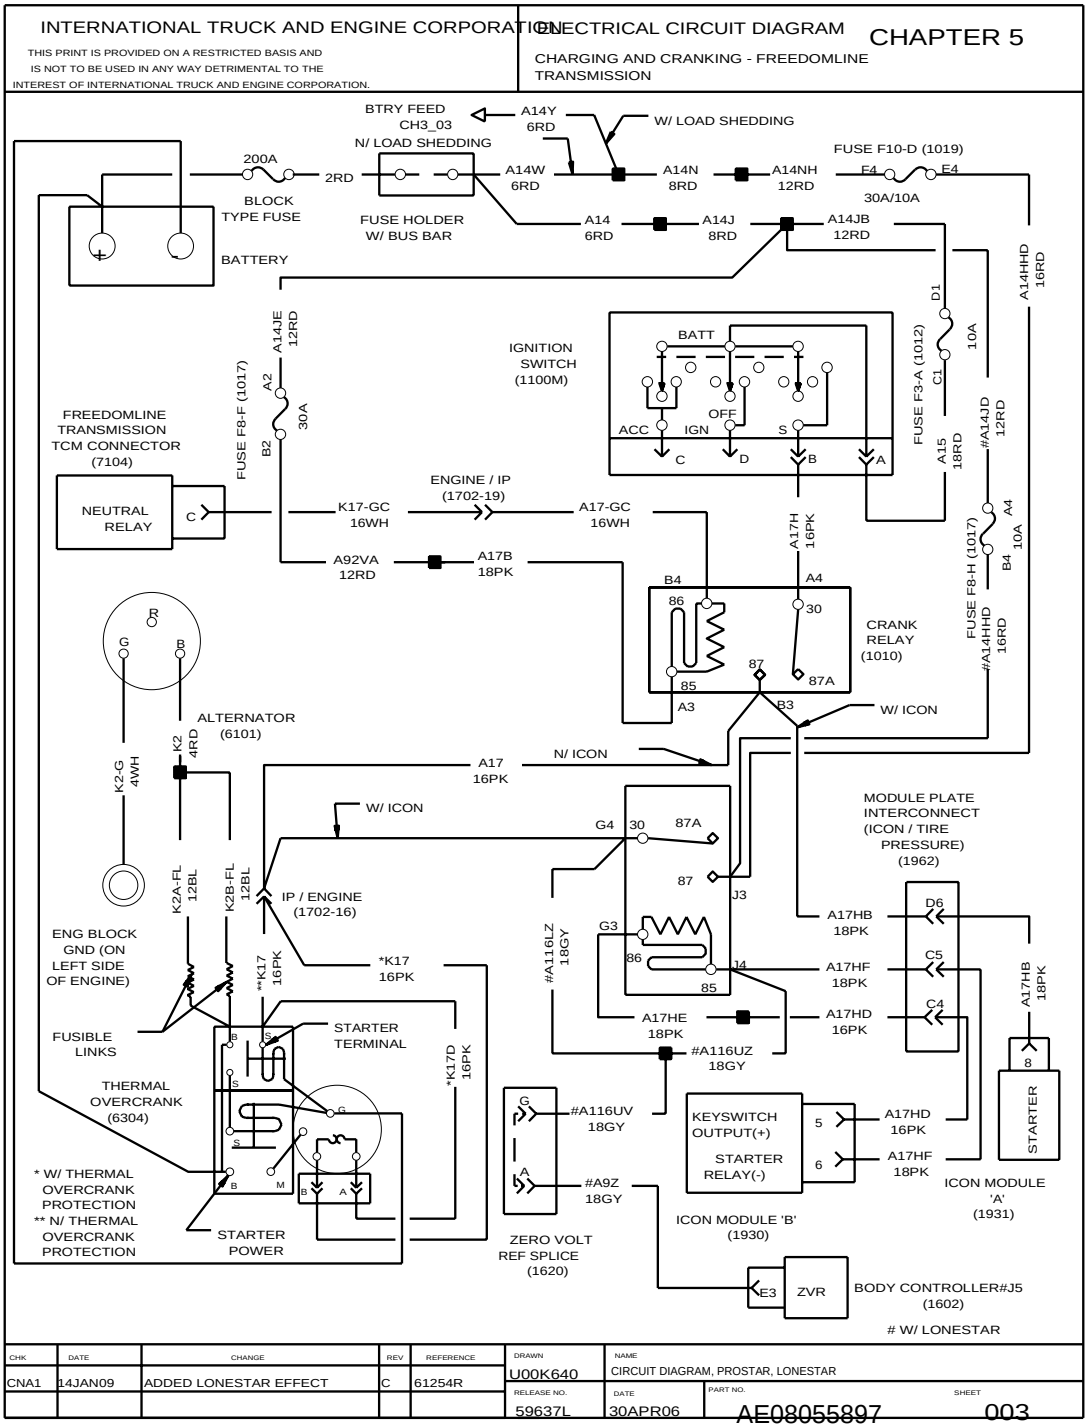


Figure 94 Freedomline Transmission

https://truckmanualshub.com/

5.6. FREEDOMLINE TRANSMISSION (CAT ENGINE), P. 3A

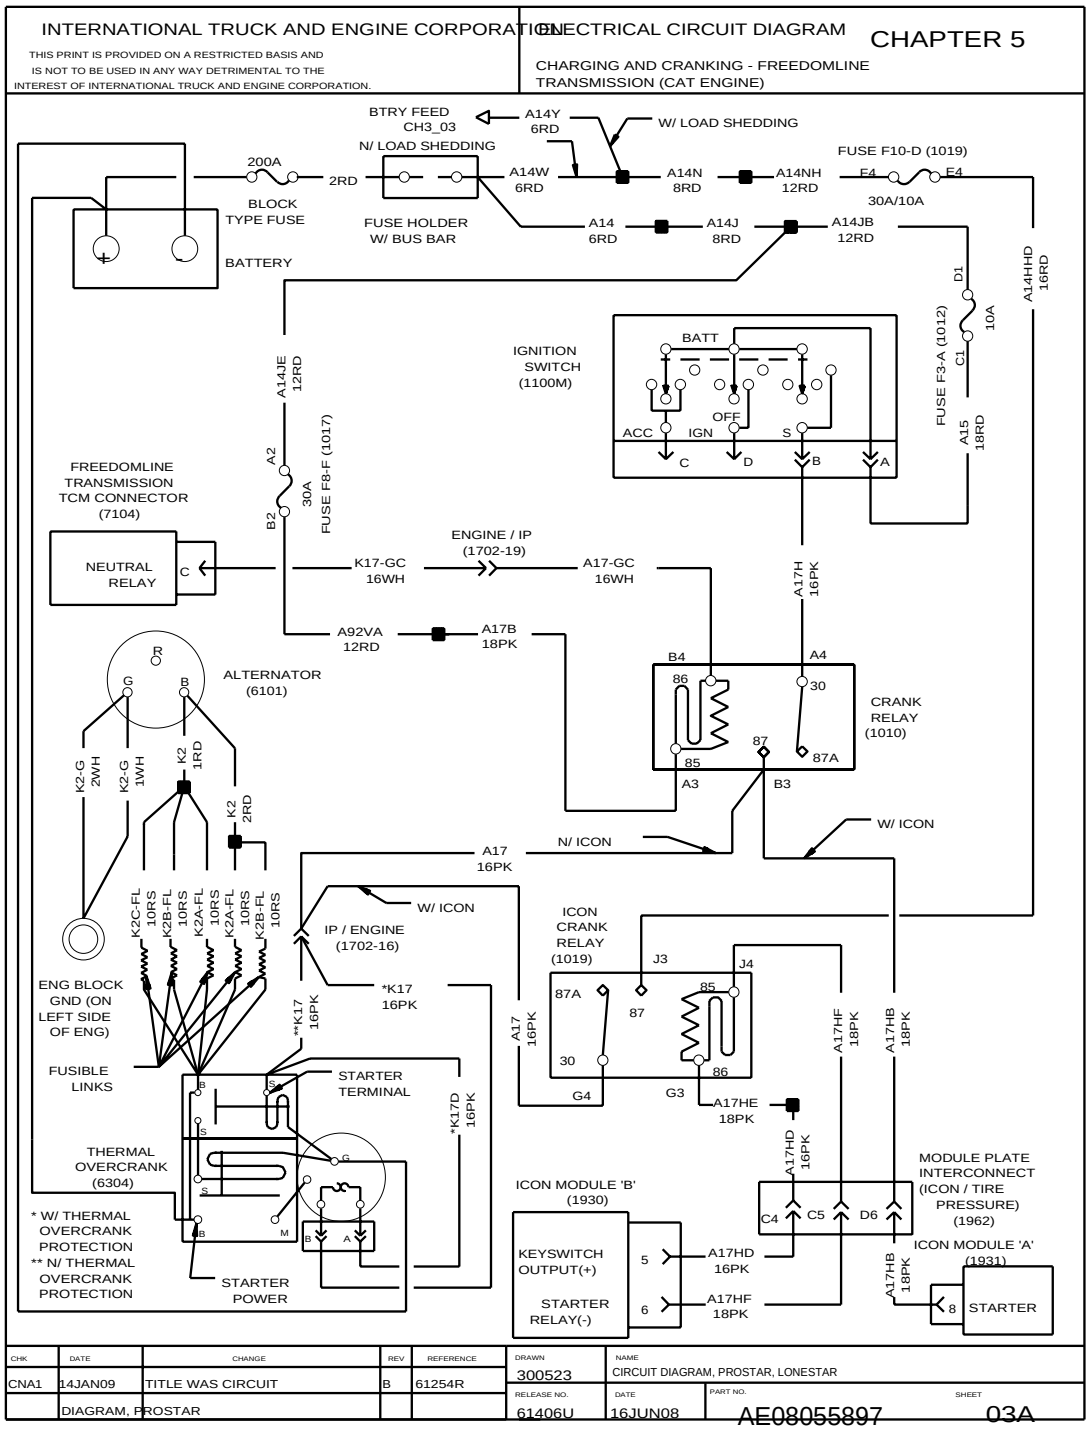


Figure 95 Freedomline Transmission (Cat Engine)

https://truckmanualshub.com/

6. ETHER START AND FAN WIRING (CHAPTER 6)

6.1. ETHER START CUMMINS ISX, P. 1

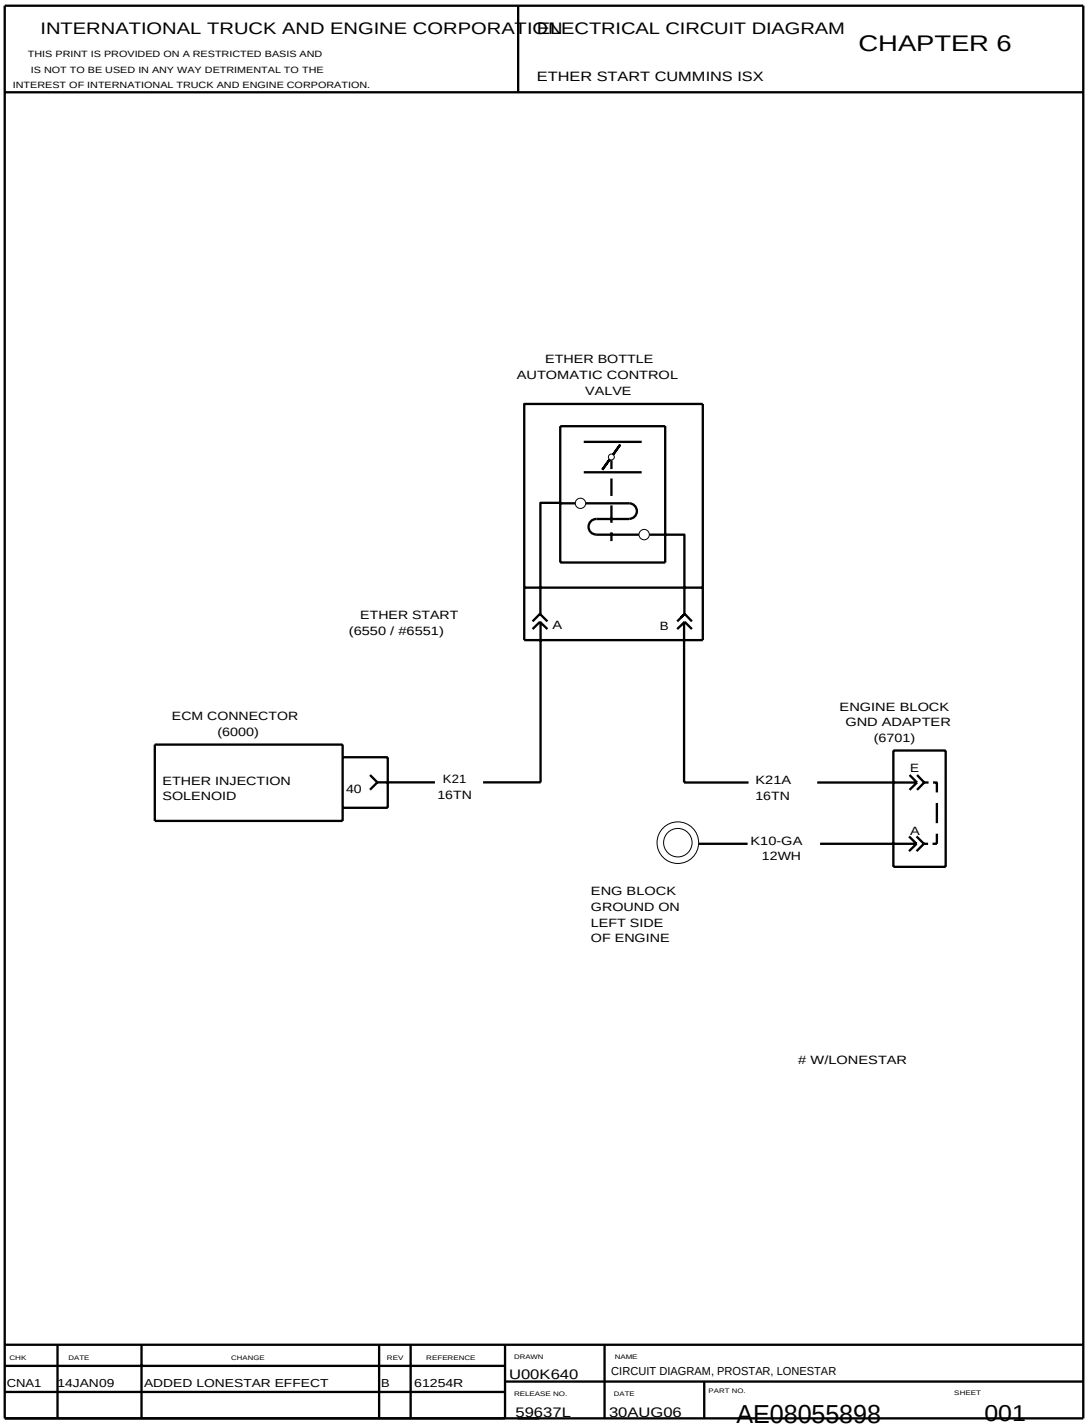


Figure 96 Ether Start Cummins ISX

https://truckmanualshub.com/

6.2. FAN WIRING, P. 2

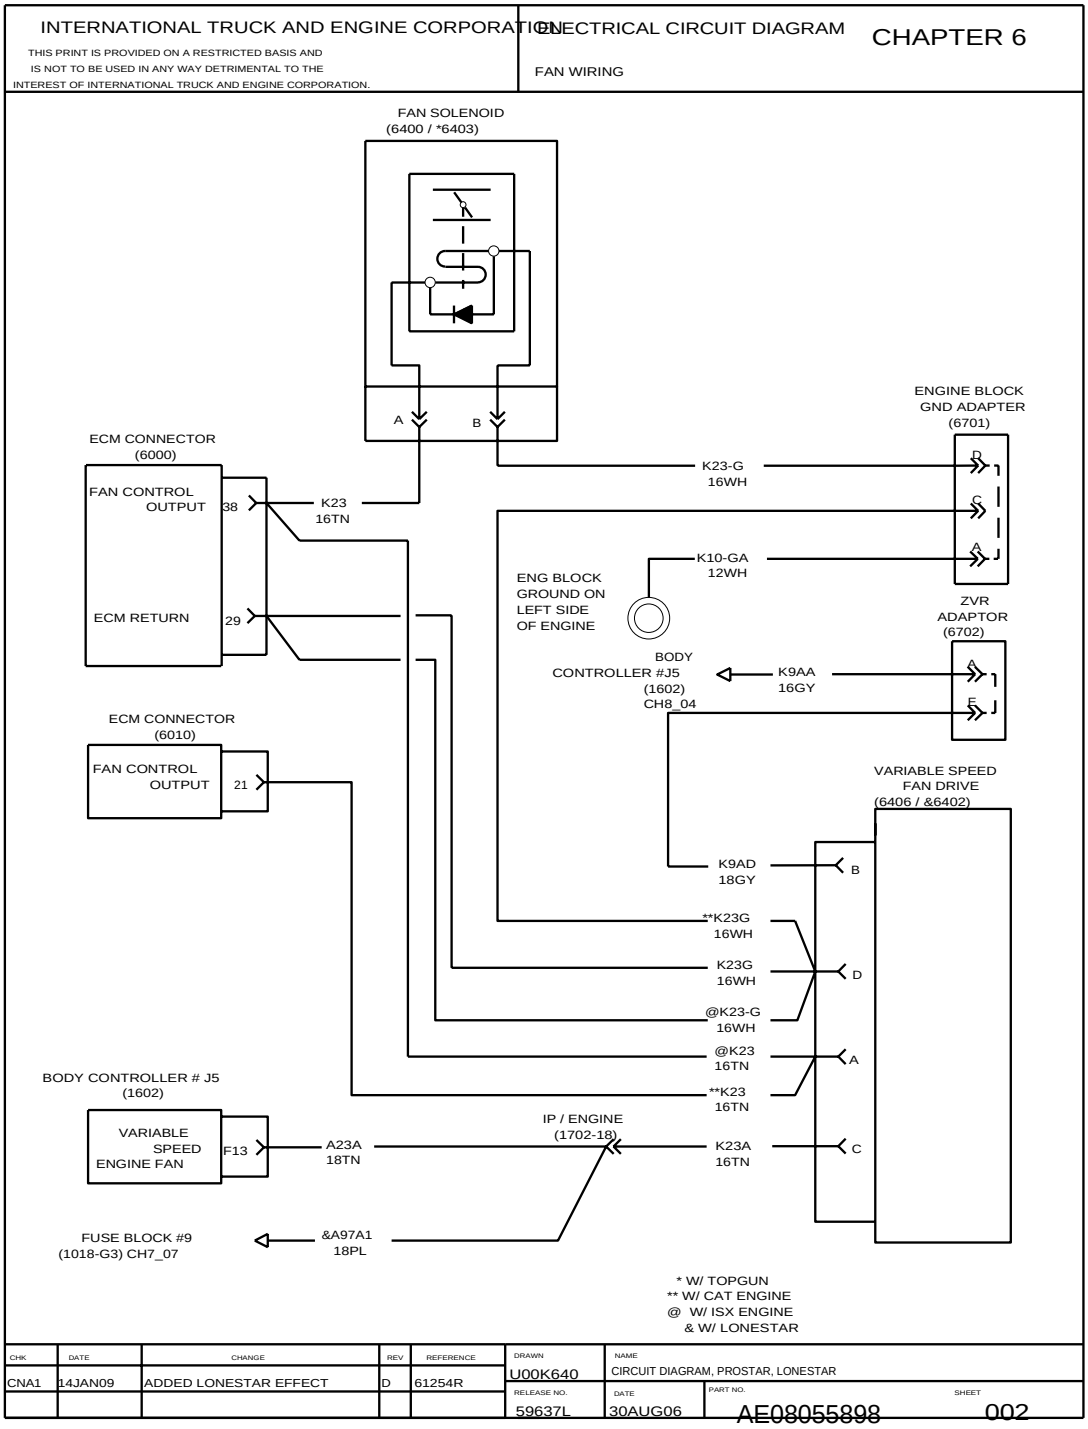


Figure 97 Fan Wiring

https://truckmanualshub.com/

6.3. FAN WIRING — IBB ENGINE, P. 3

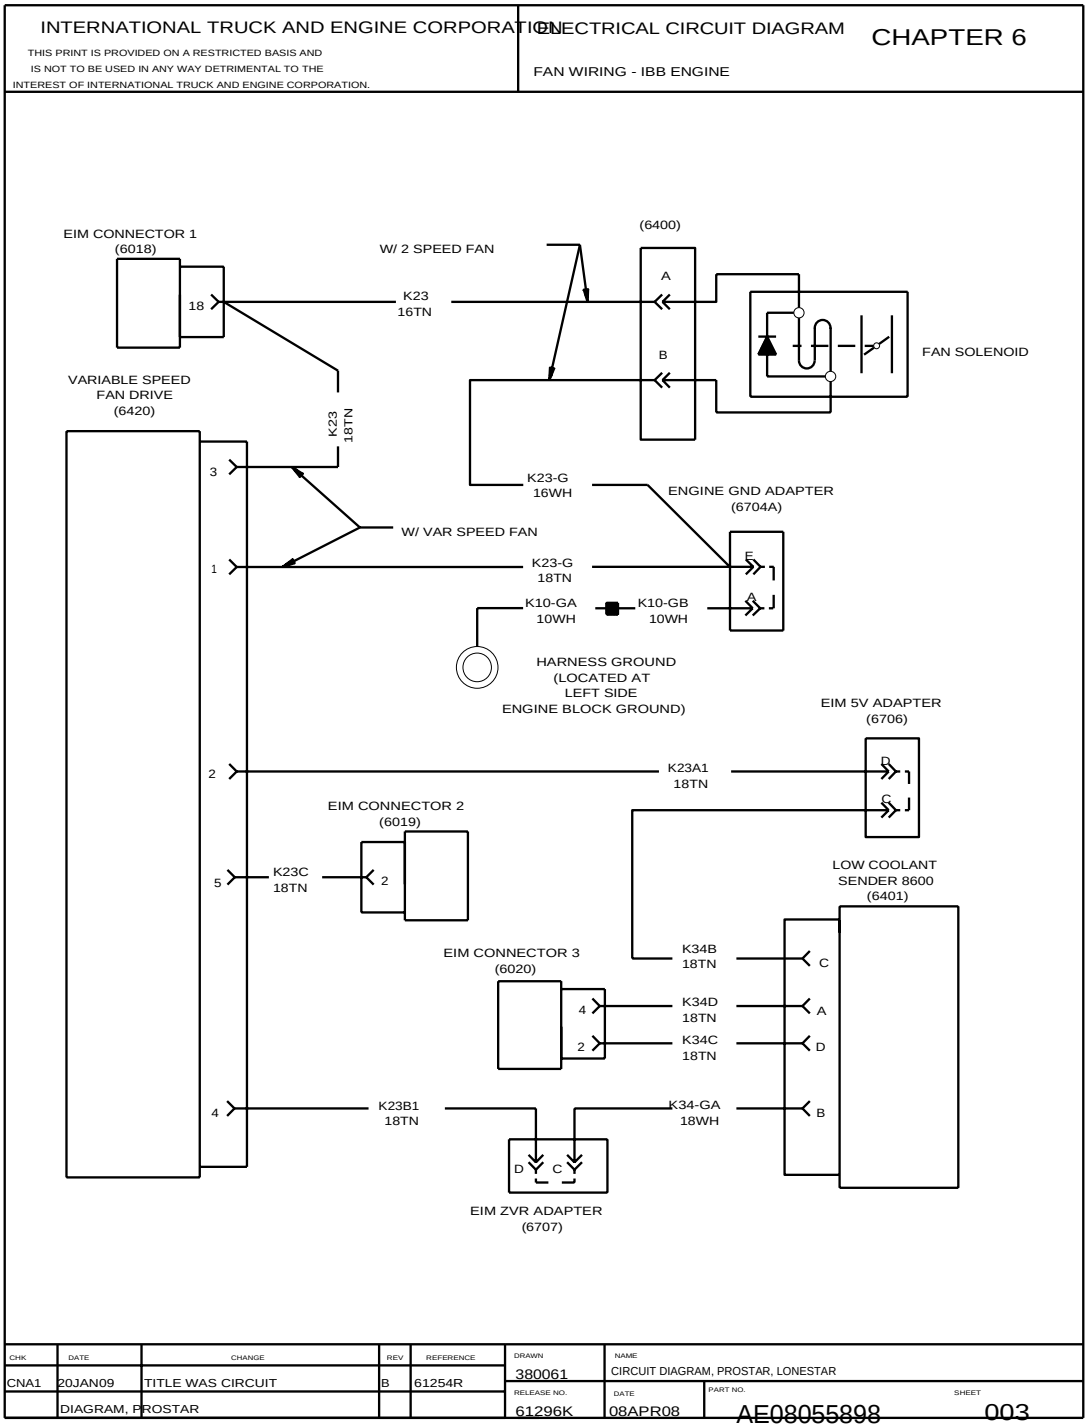


Figure 98 Fan Wiring — IBB Engine

https://truckmanualshub.com/

6.4. STARTING AID — COLD START ASSIST (IBB ENGINE), P. 4

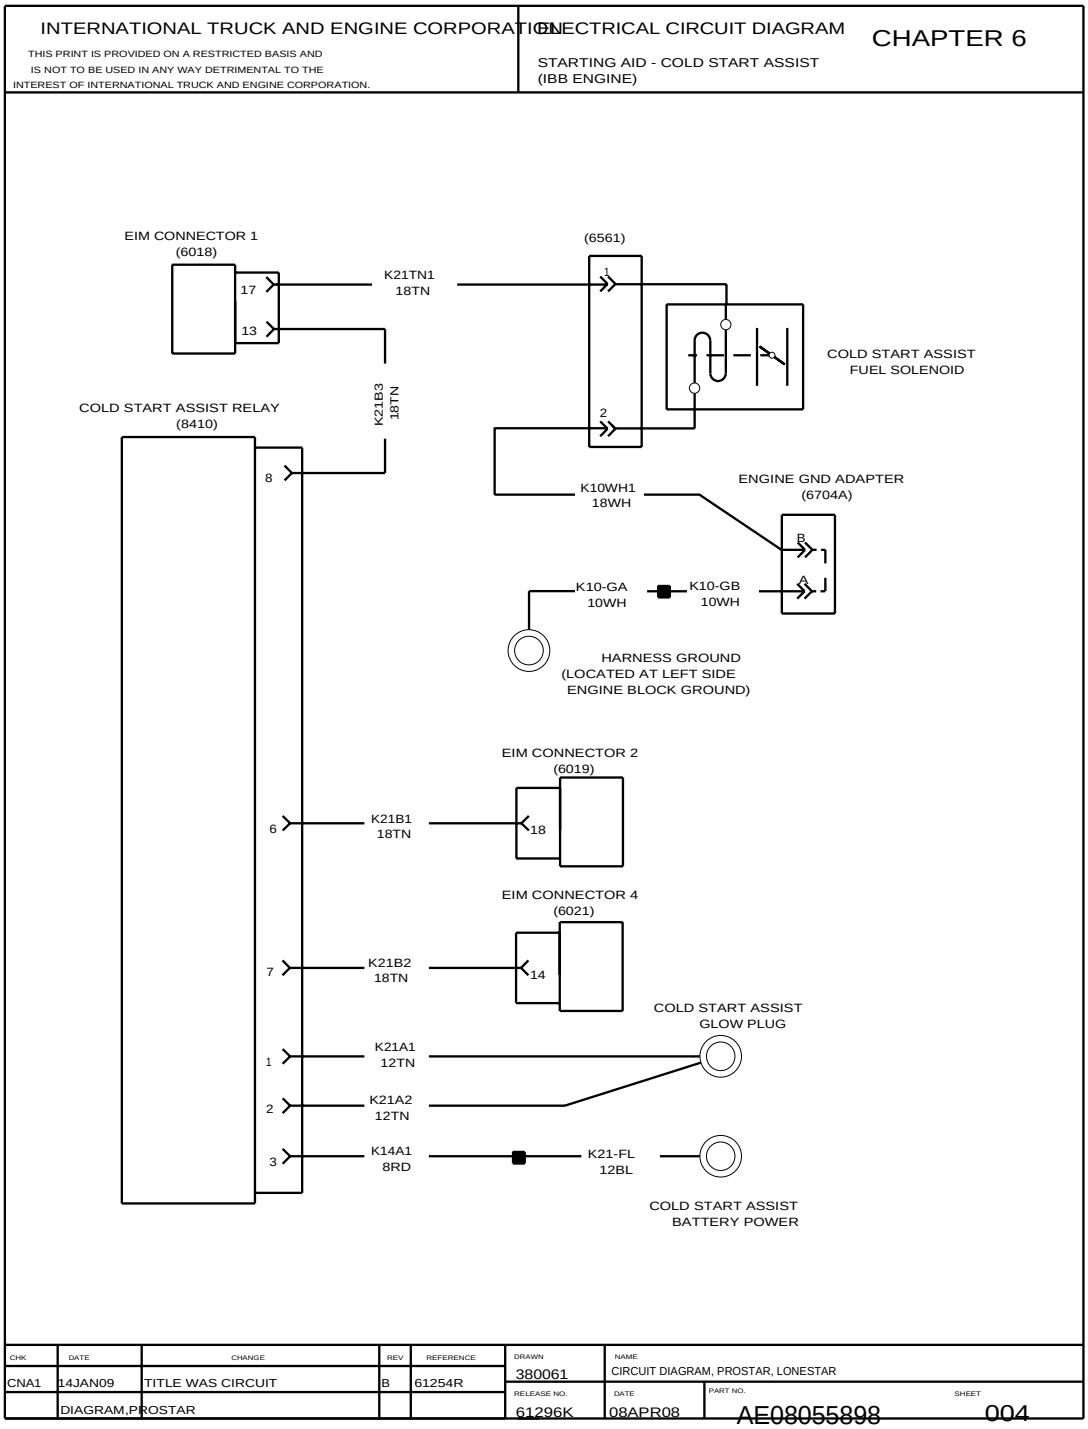


Figure 99 Starting Aid — Cold Start Assist (IBB Engine)

https://truckmanualshub.com/

7. ENGINES (CHAPTER 7)

7.1. ELECTRONIC ENGINE CONTROLS, P. 1

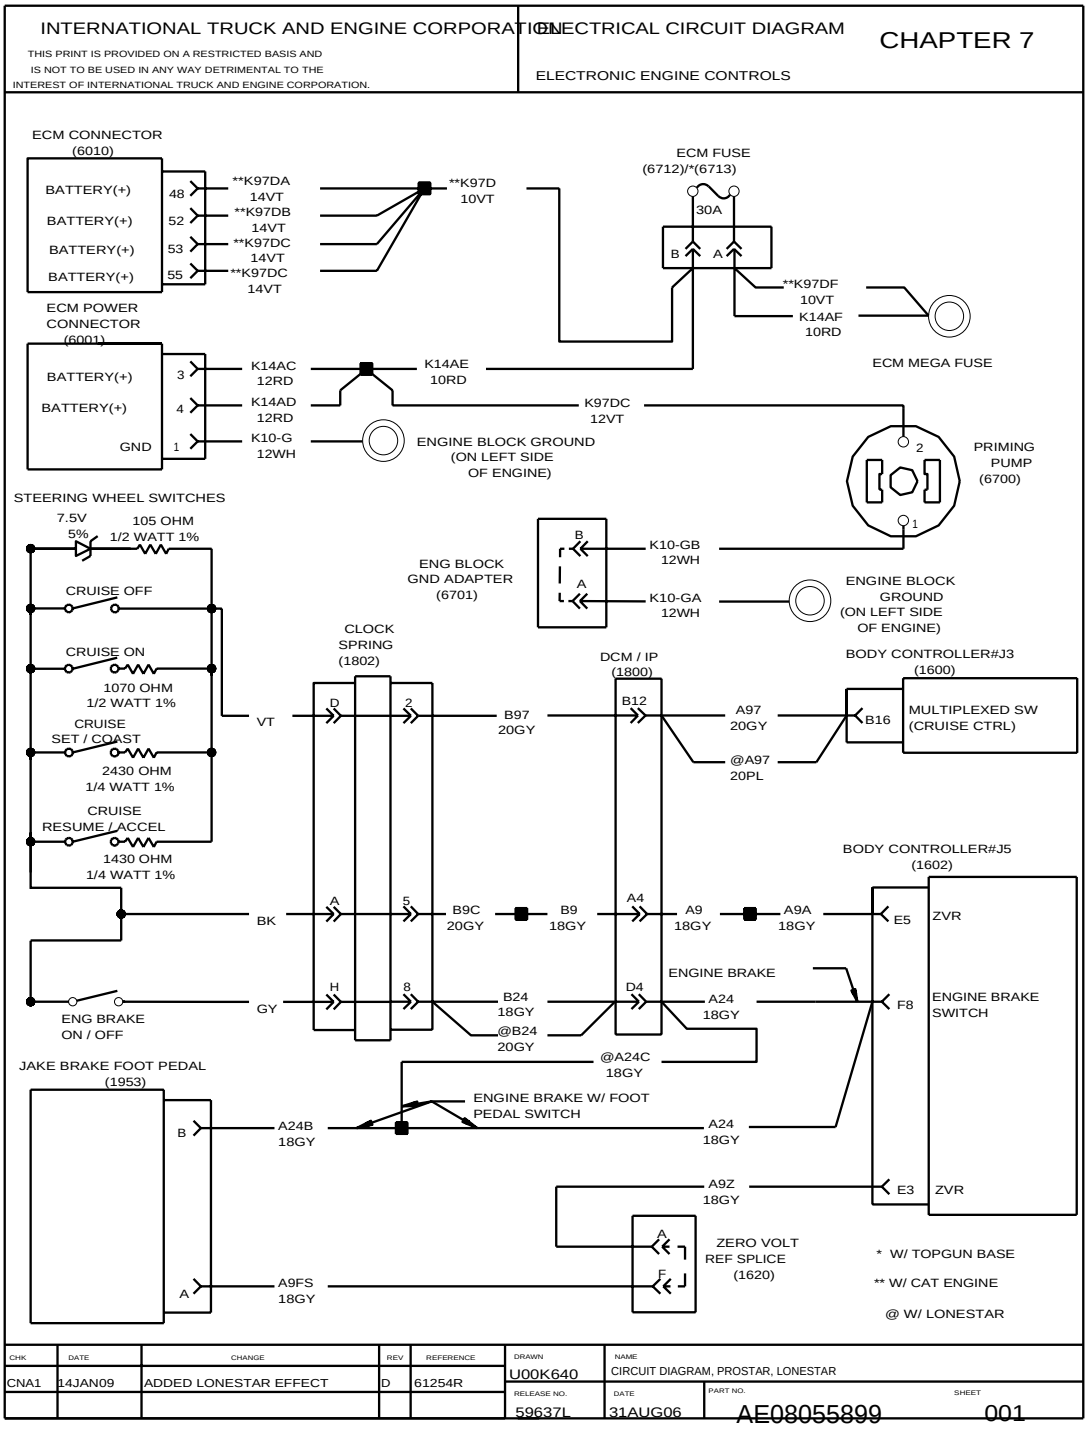


Figure 100 Electronic Engine Controls

https://truckmanualshub.com/

7.2. ELECTRONIC ENGINE CONTROLS — CUMMINS ENGINE, P. 2

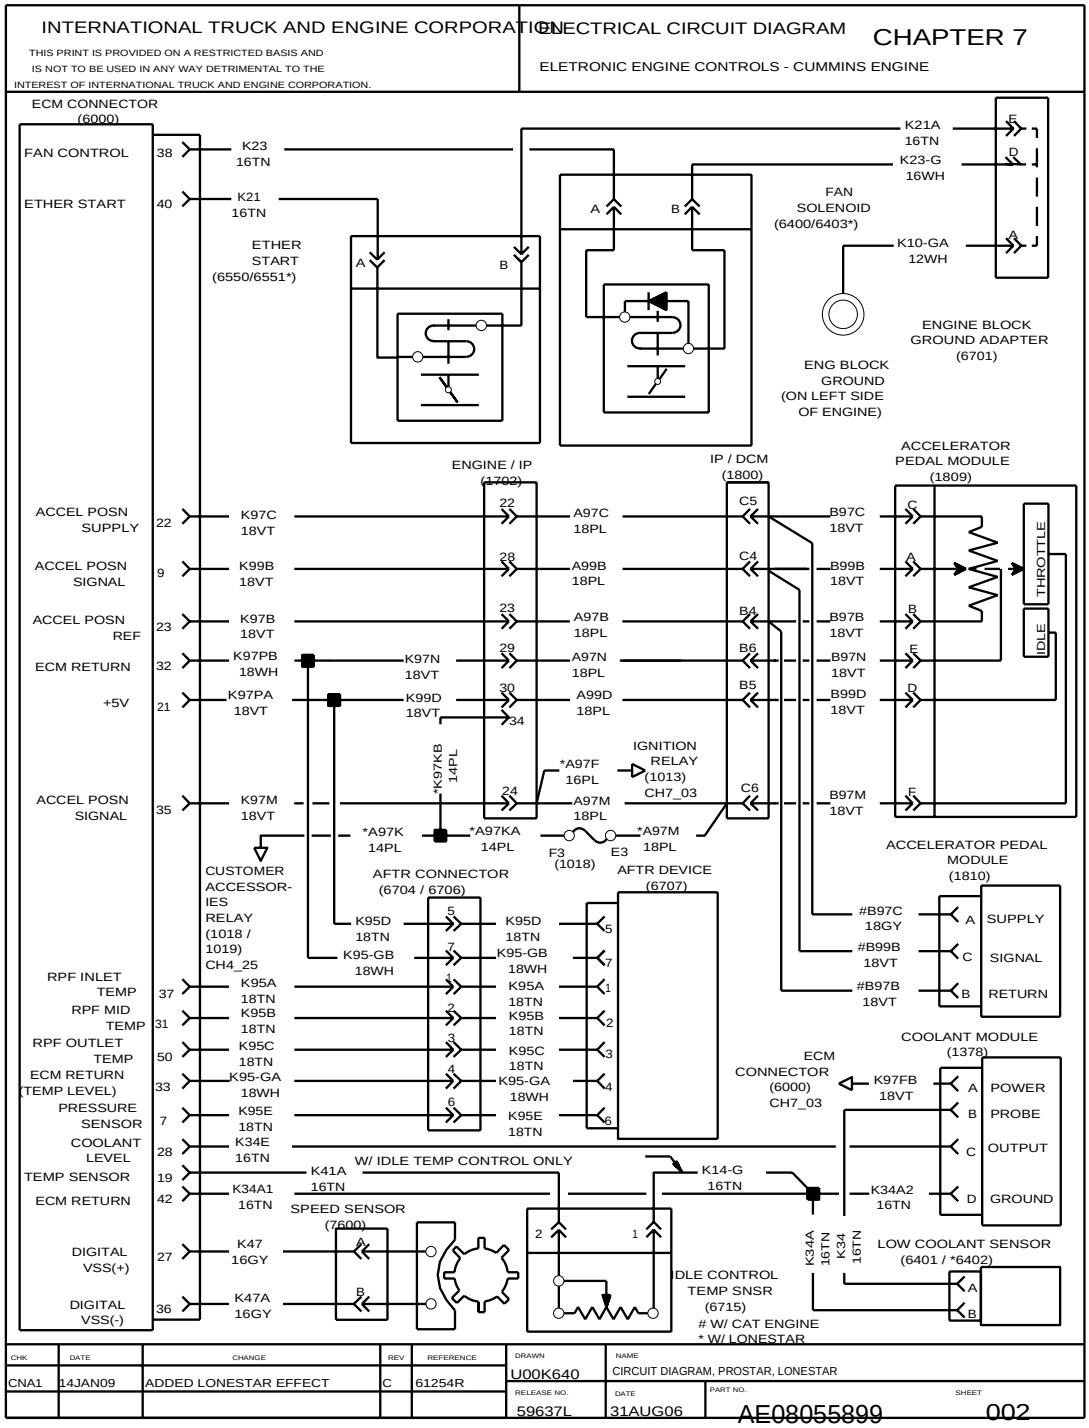


Figure 101 Electronic Engine Controls — Cummins Engine

https://truckmanualshub.com/

7.3. ELECTRONIC ENGINE CONTROLS — CAT ENGINE, P. 2A

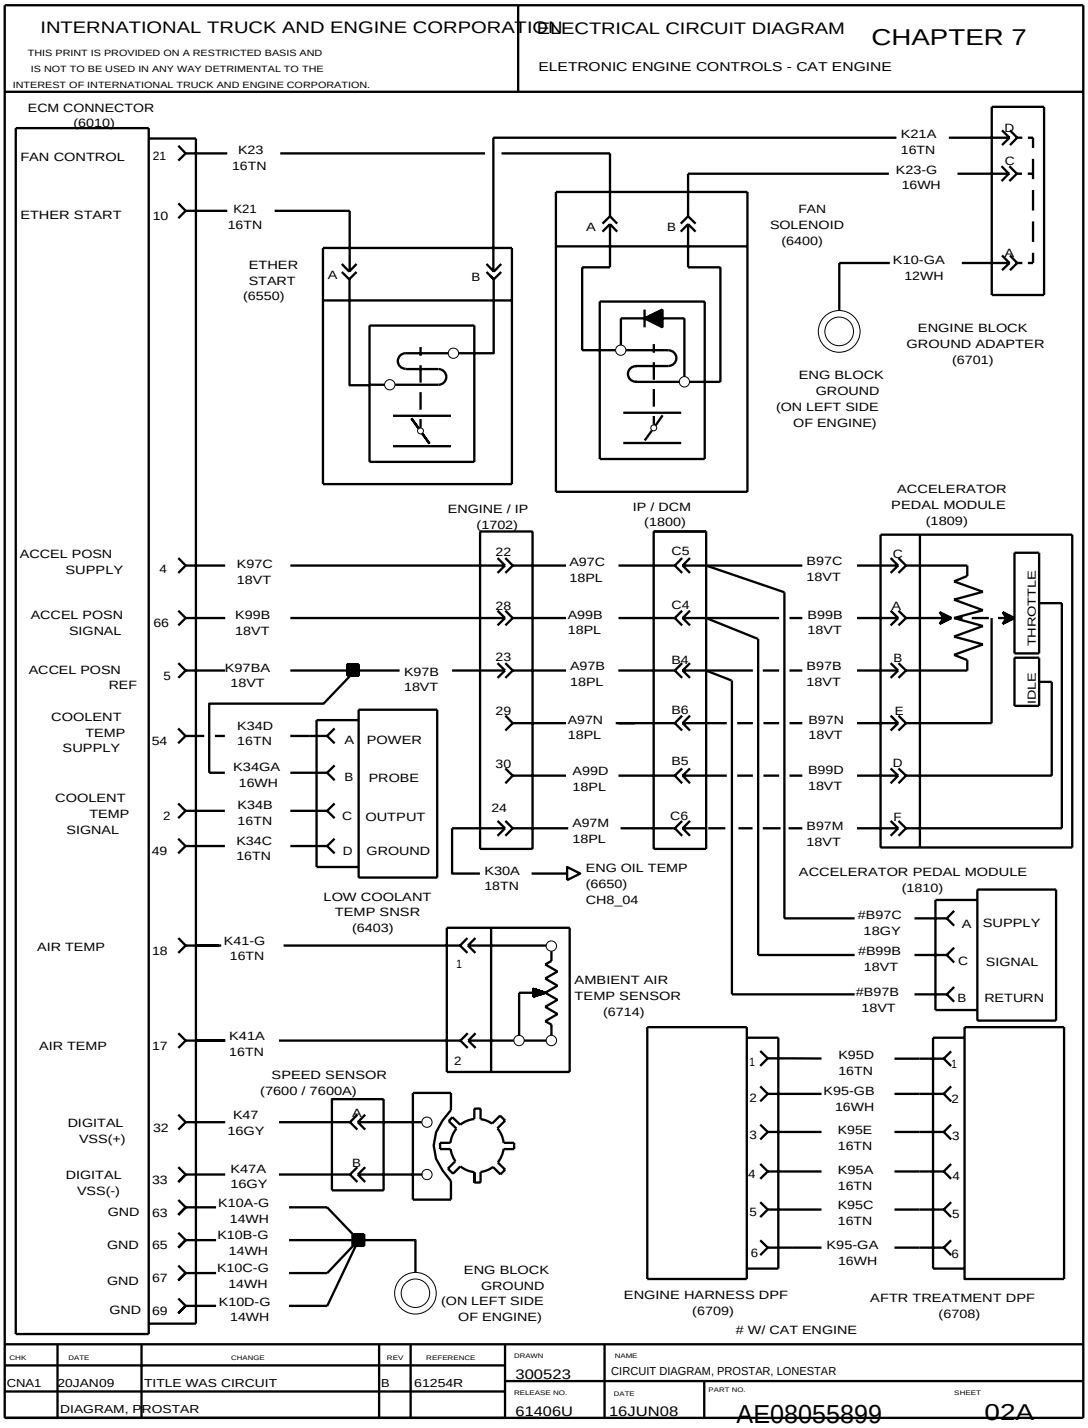


Figure 102 Electronic Engine Controls — Cat Engine

https://truckmanualshub.com/

7.4. ELECTRONIC ENGINE CONTROLS — CUMMINS ENGINES, P. 3

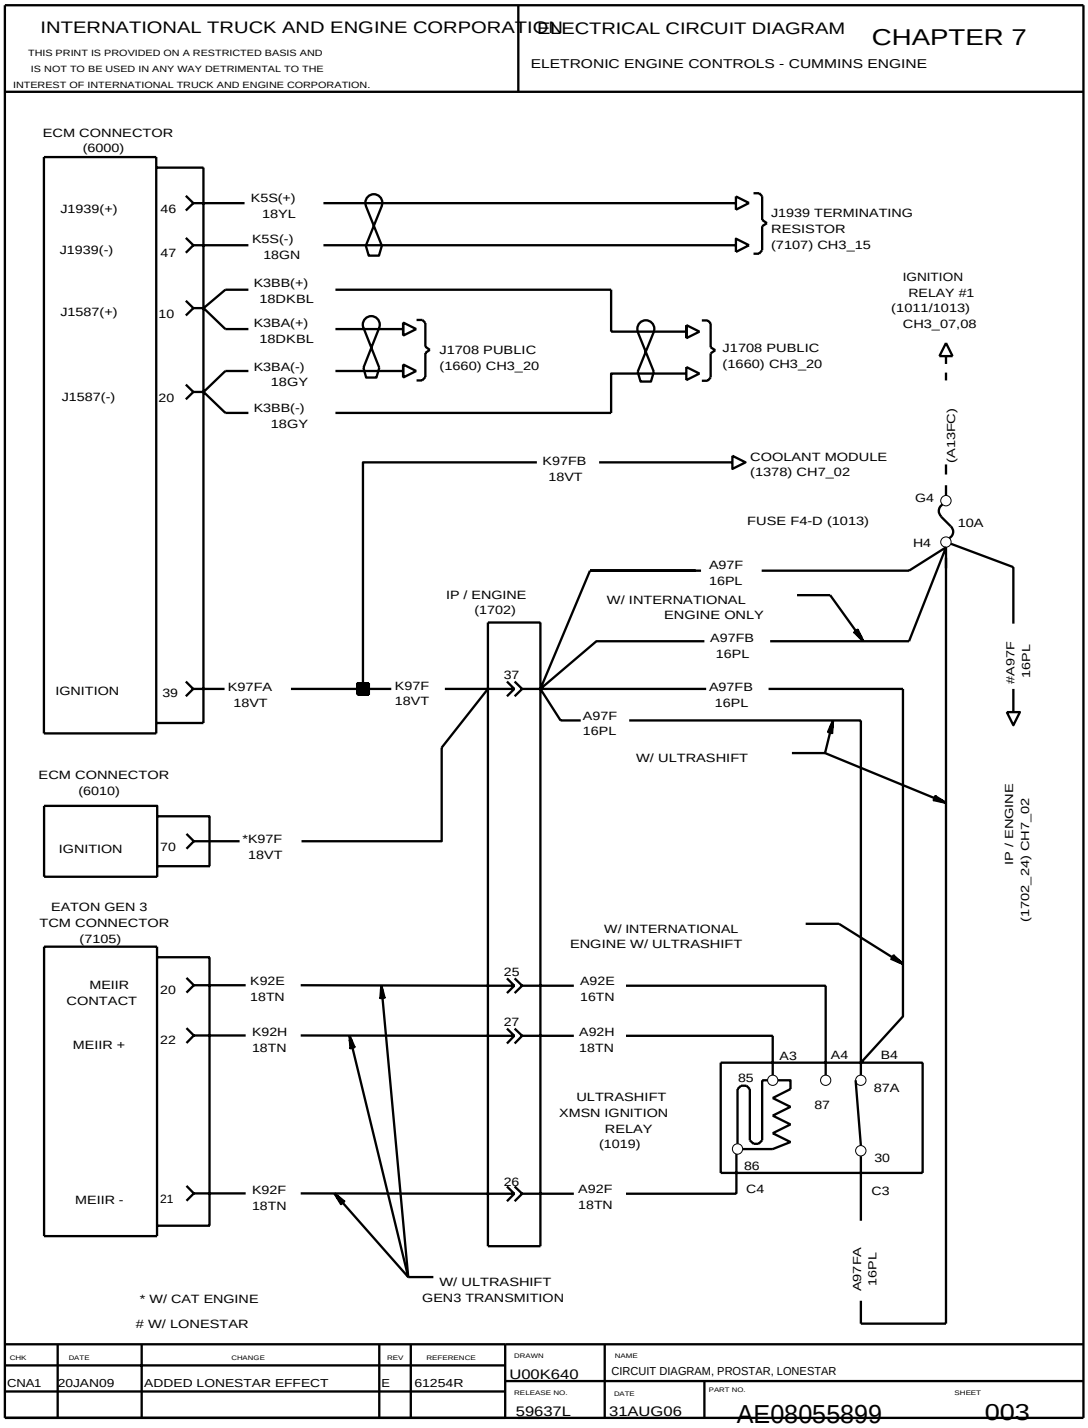


Figure 103 Electronic Engine Controls — Cummins Engines

https://truckmanualshub.com/

7.5. ELECTRONIC ENGINE CONTROLS WITH ICON, P. 4

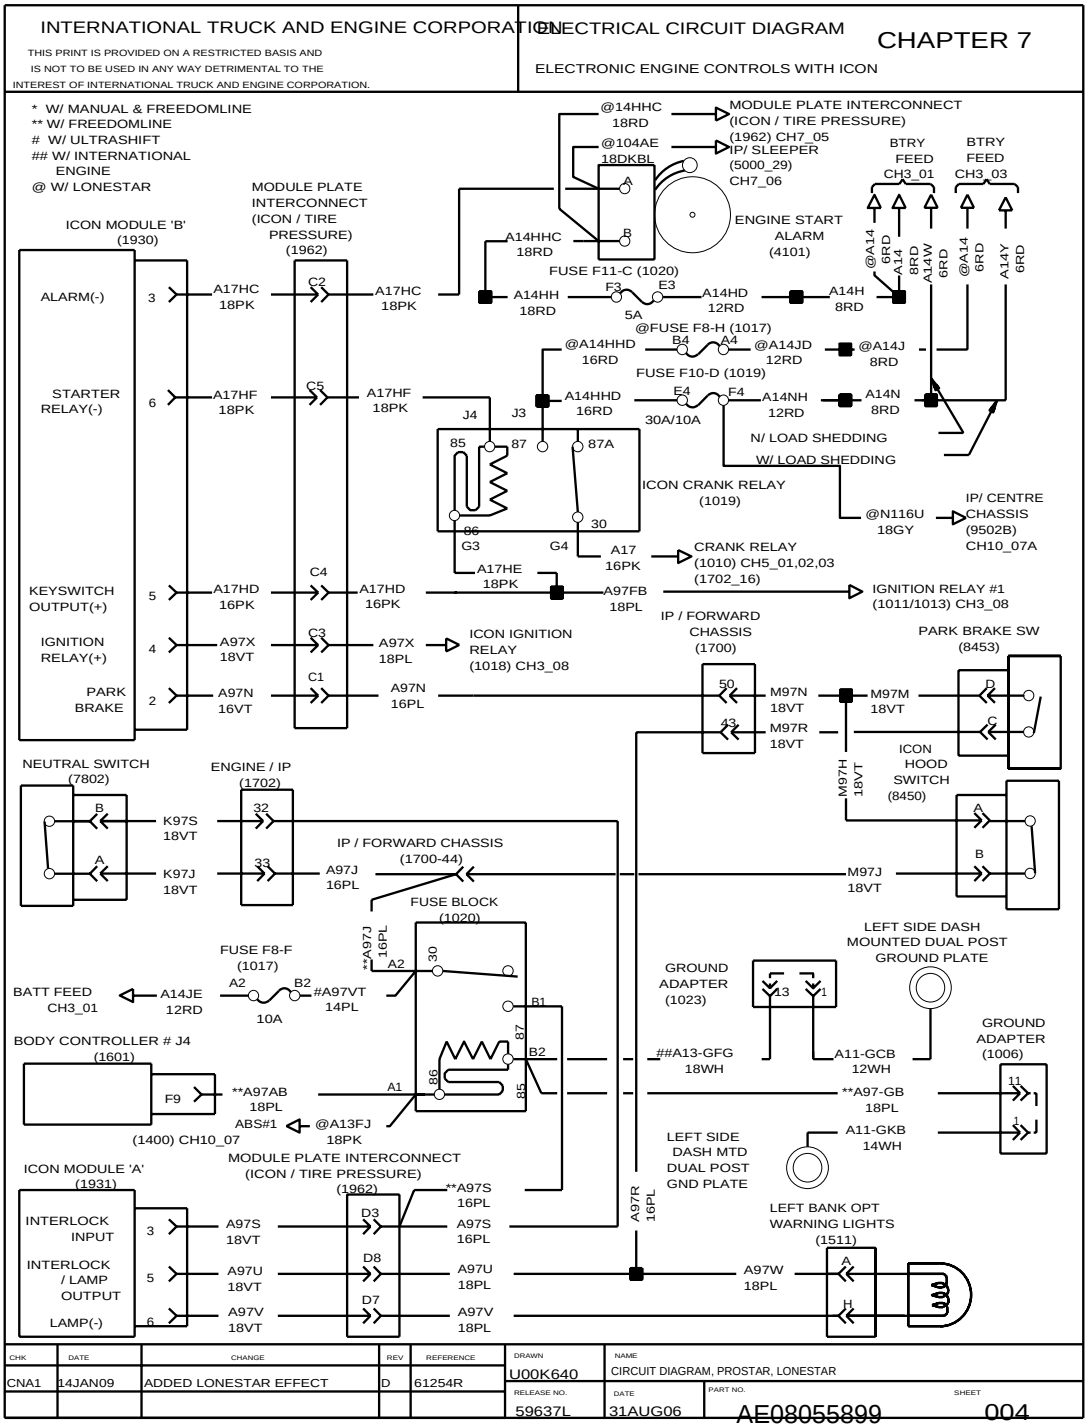


Figure 104 Electronic Engine Controls with ICON

https://truckmanualshub.com/

7.6. ELECTRONIC ENGINE CONTROLS WITH ICON, P. 5

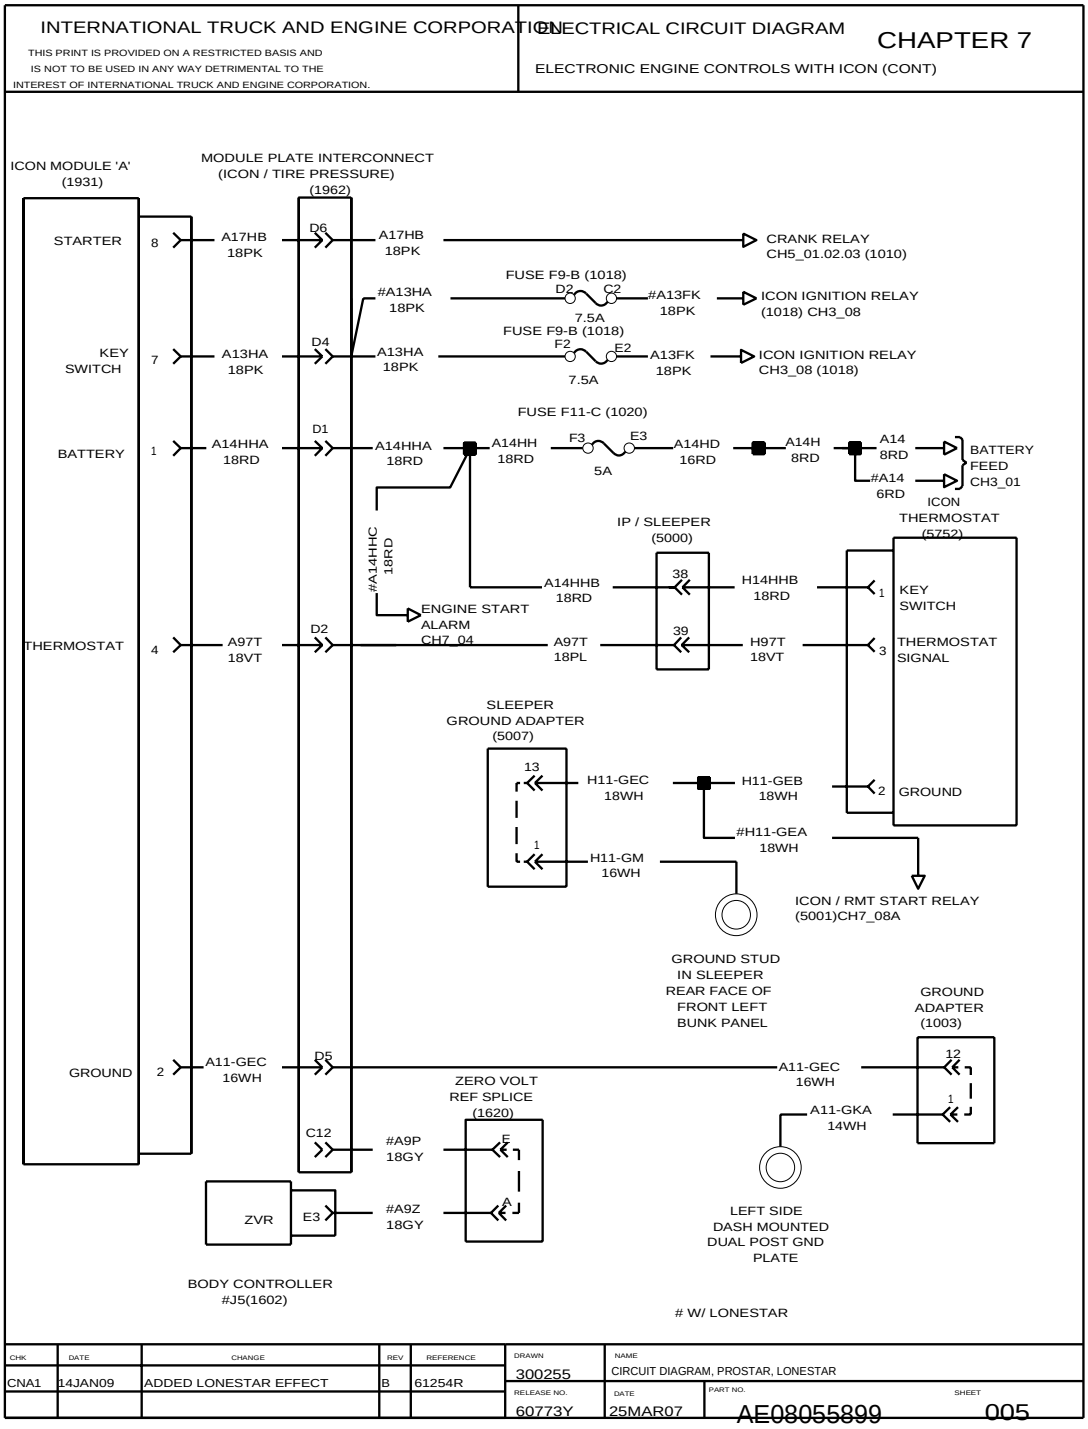


Figure 105 Electronic Engine Controls with ICON (Cont.)

https://truckmanualshub.com/

7.7. ELECTRONIC ENGINE CONTROLS WITH ICON, P. 6

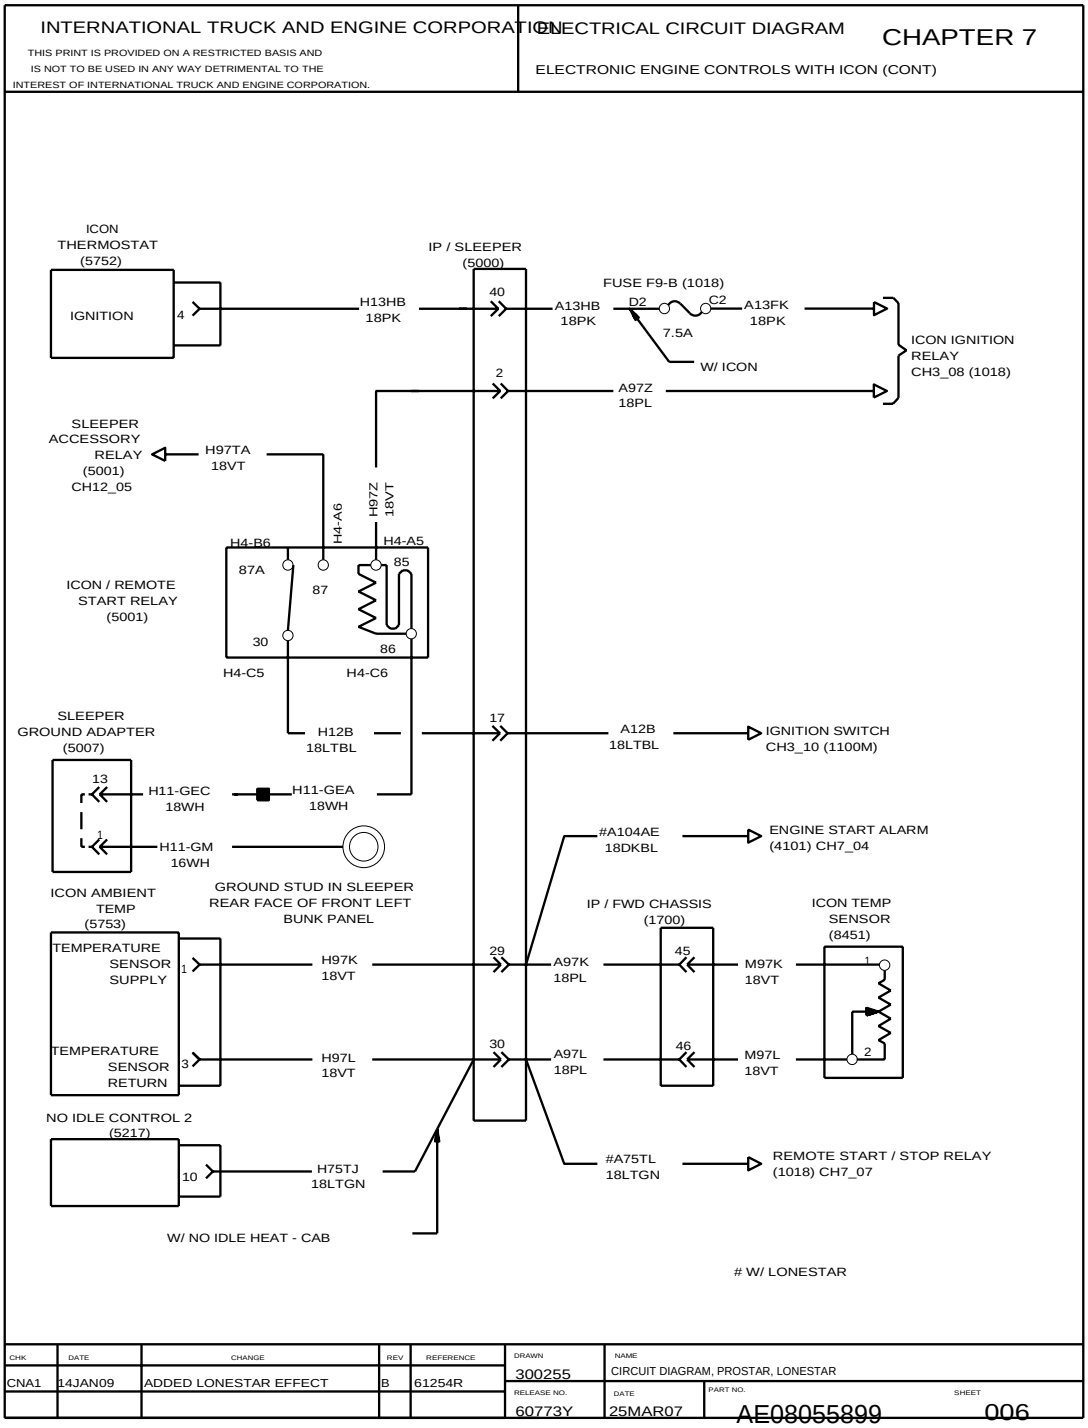


Figure 106 Electronic Engine Controls with ICON (Cont.)

https://truckmanualshub.com/

7.8. REMOTE START/STOP, P. 7

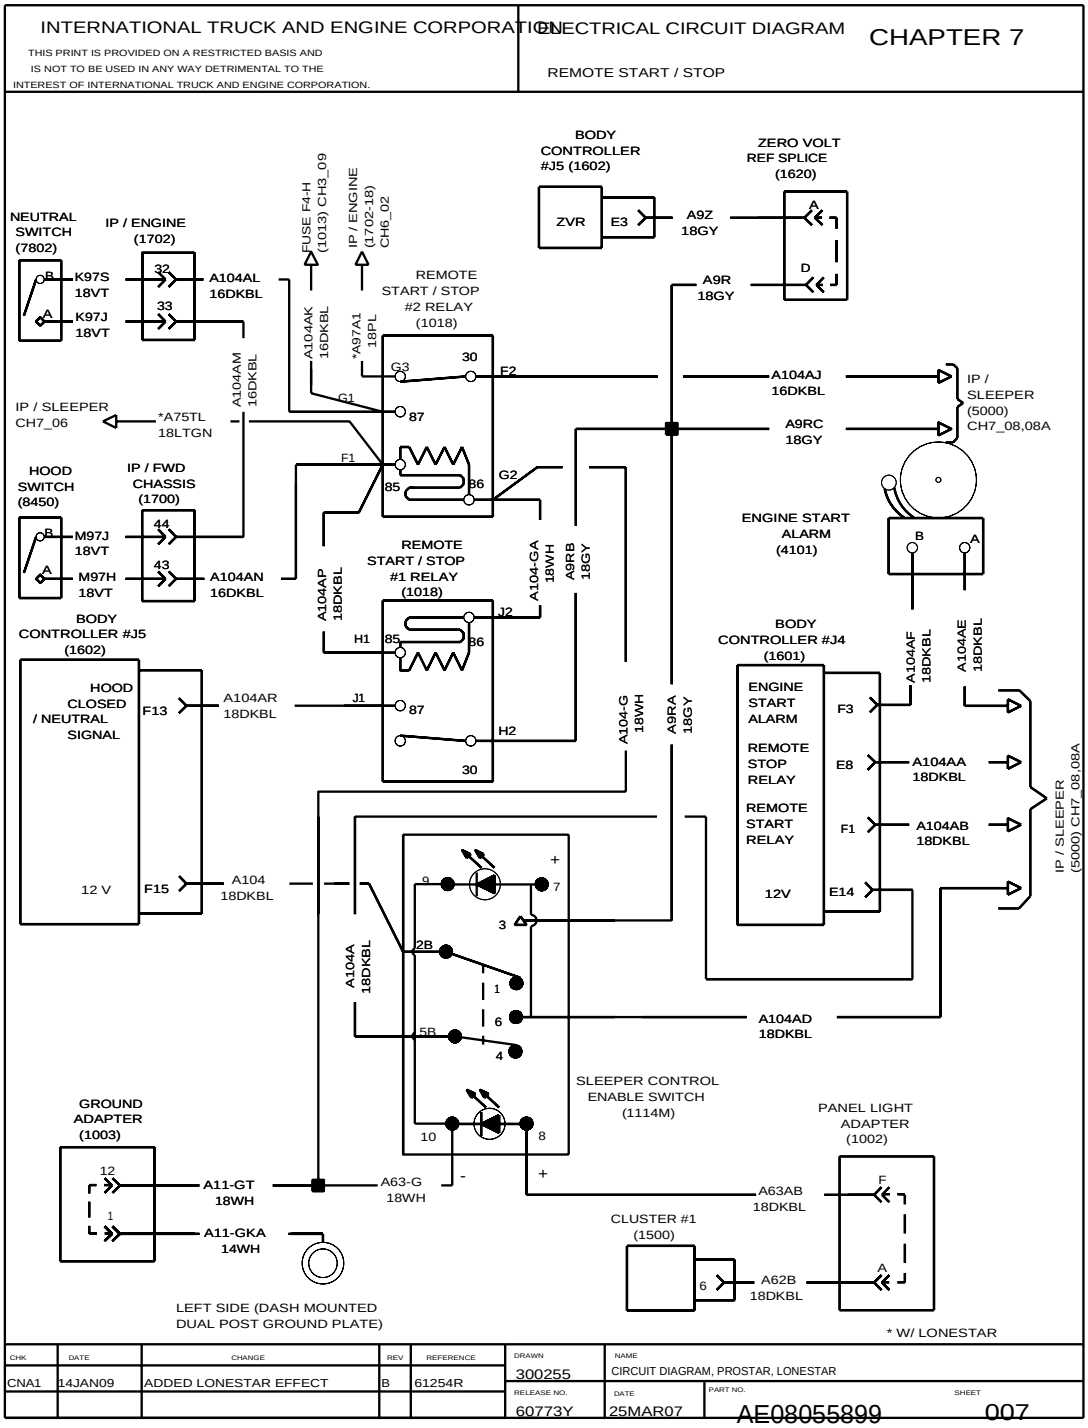


Figure 107 Remote Start/Stop

https://truckmanualshub.com/

7.9. REMOTE START/STOP, P. 8

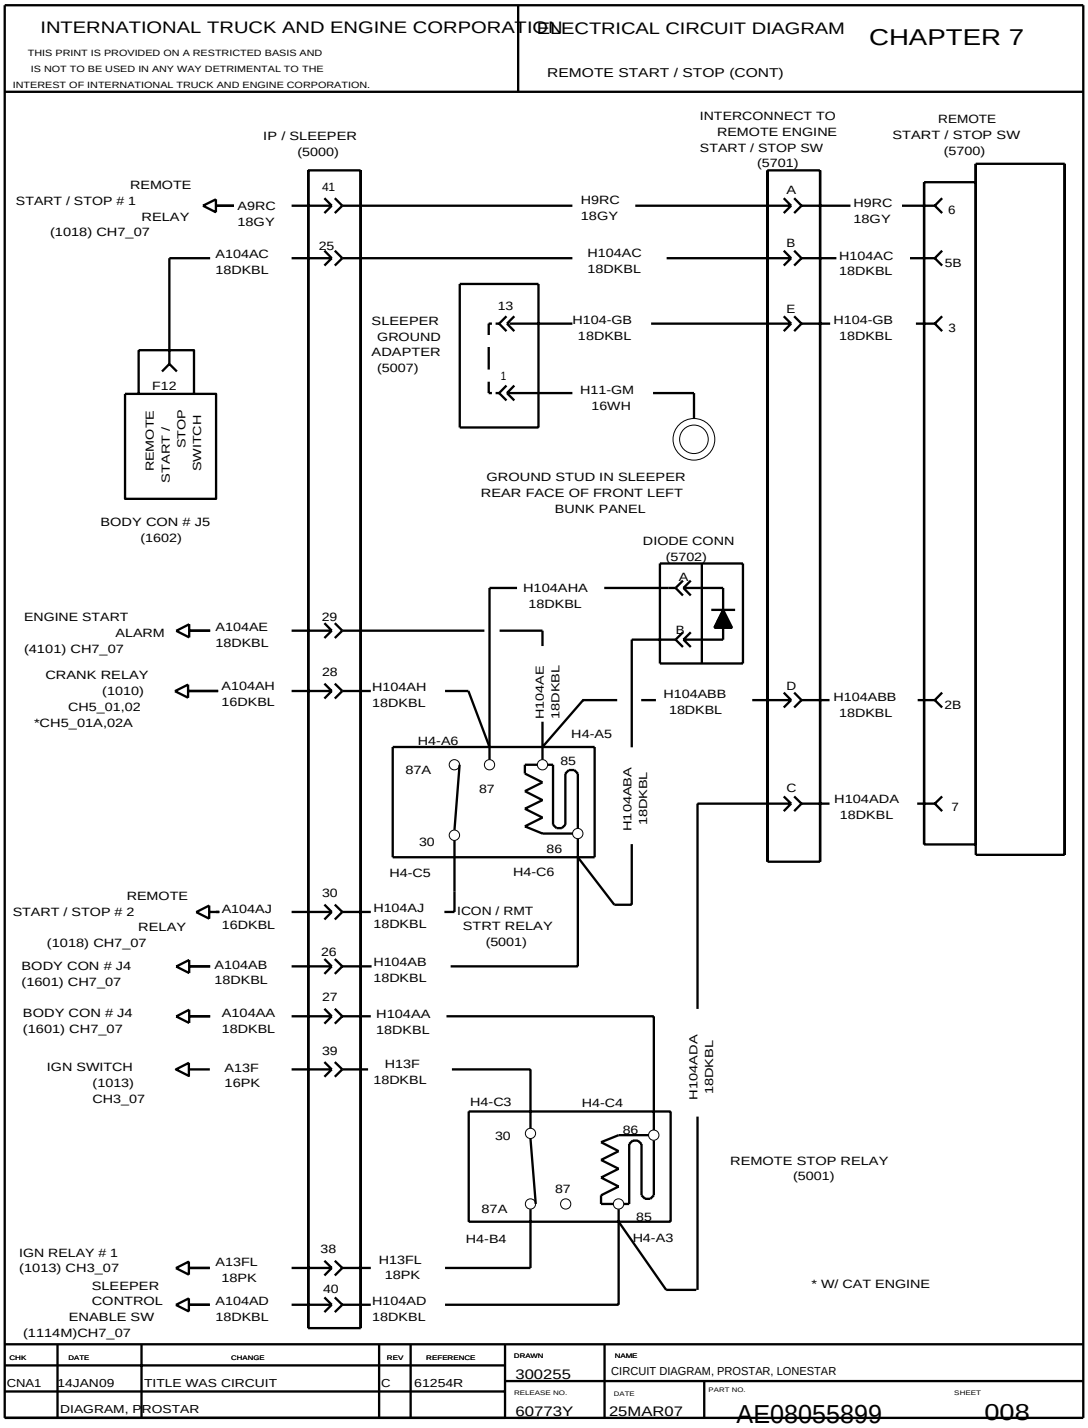


Figure 108 Remote Start/Stop (Cont.)

https://truckmanualshub.com/

7.10. REMOTE START/STOP, P. 8A

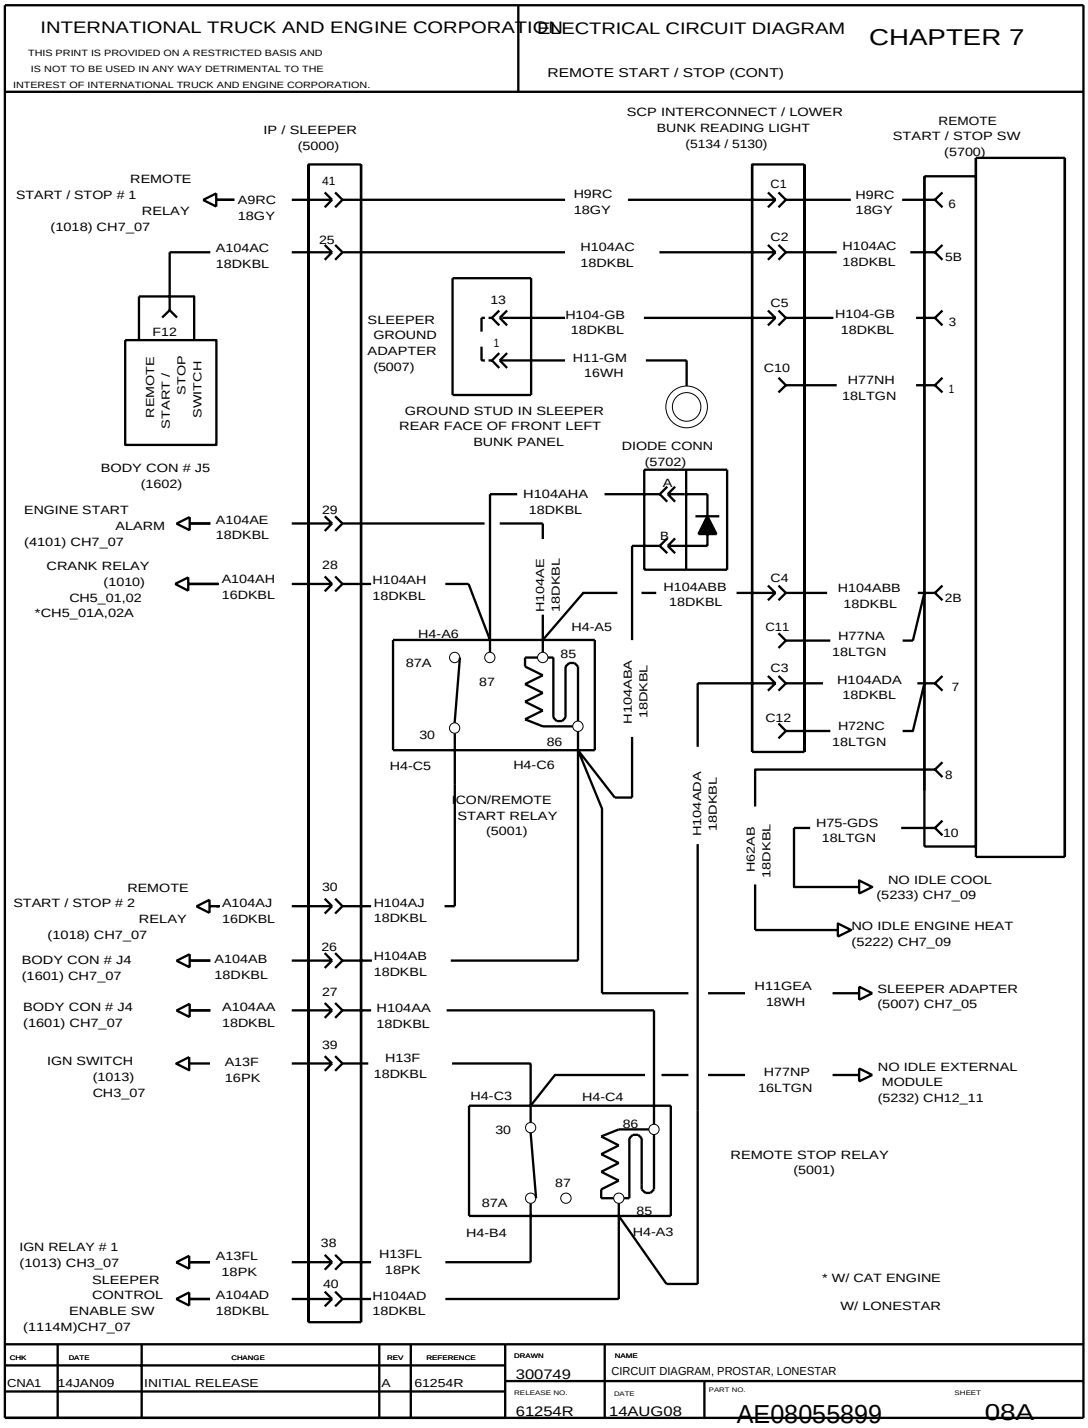


Figure 109 Remote Start/Stop (Cont.)

https://truckmanualshub.com/

7.11. NO IDLE ENGINE HEAT, P. 9

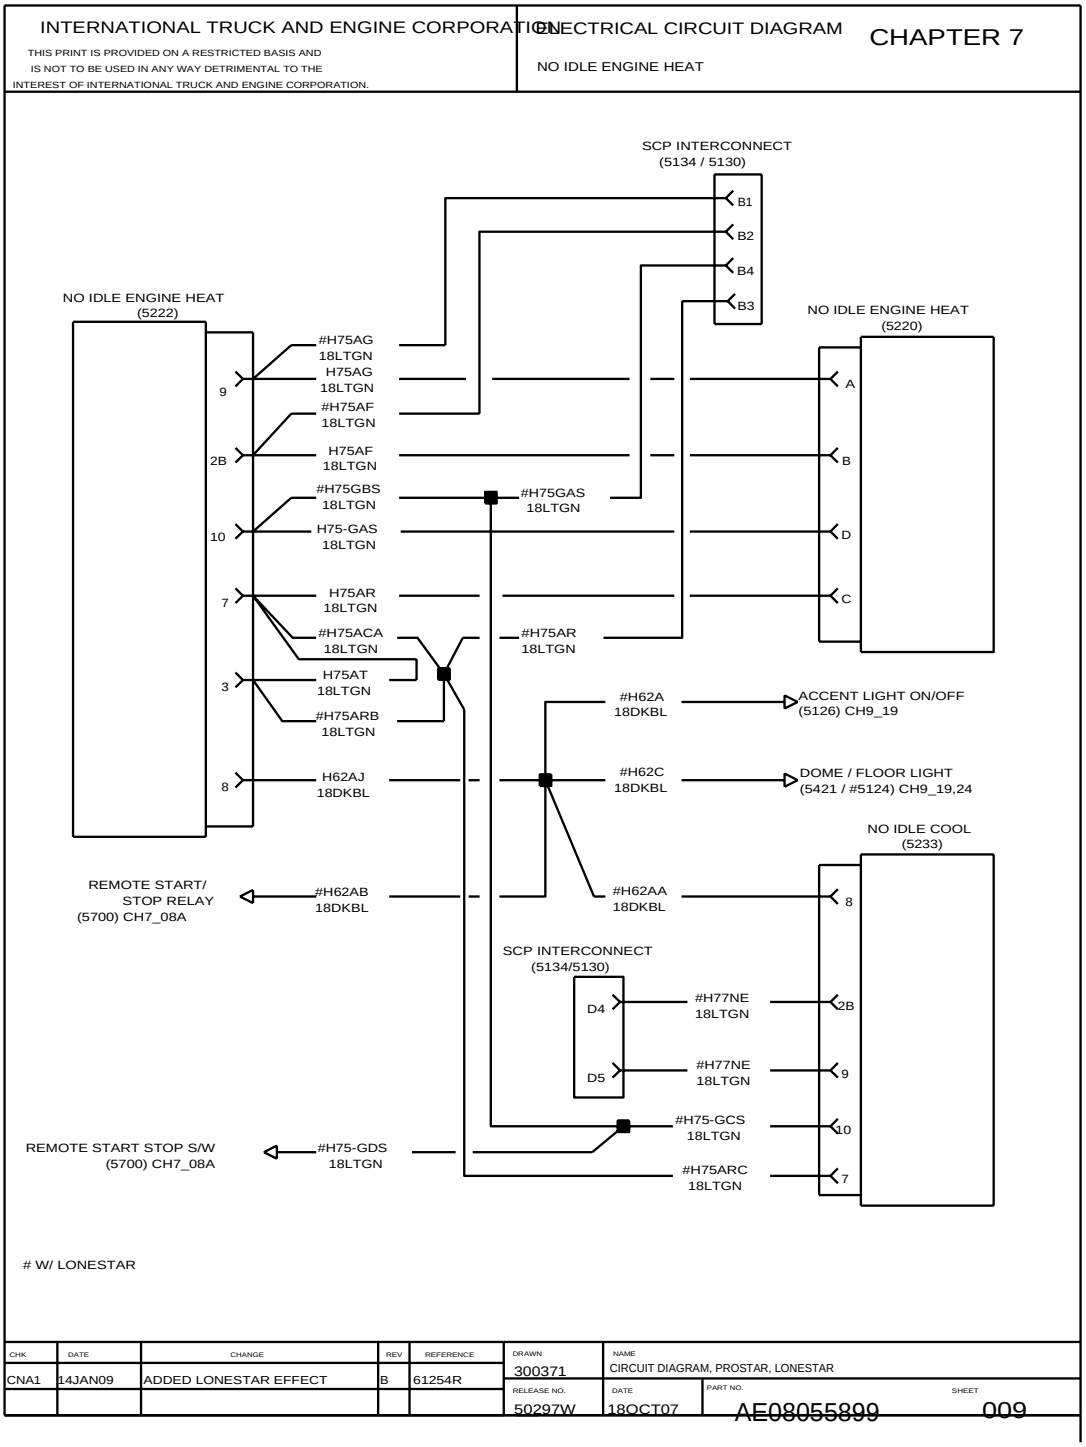


Figure 110 No Idle Engine Heat

https://truckmanualshub.com/

7.12. TRI-PAC NO IDLE, P. 10

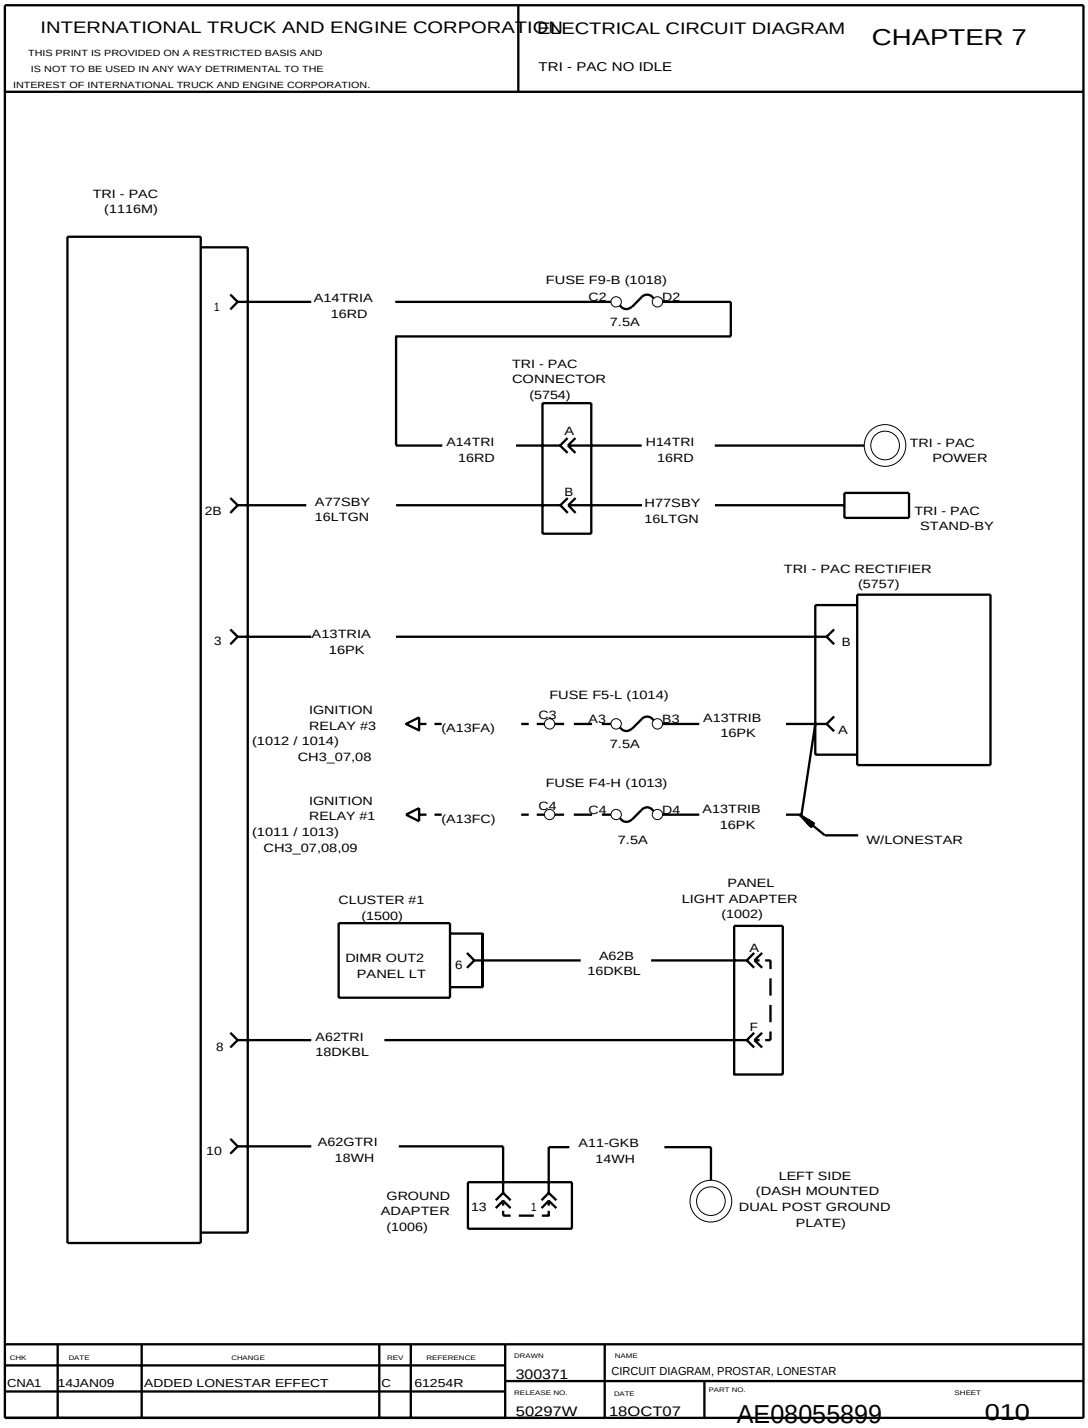


Figure 111 Tri-Pac No Idle

https://truckmanualshub.com/

7.13. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 11

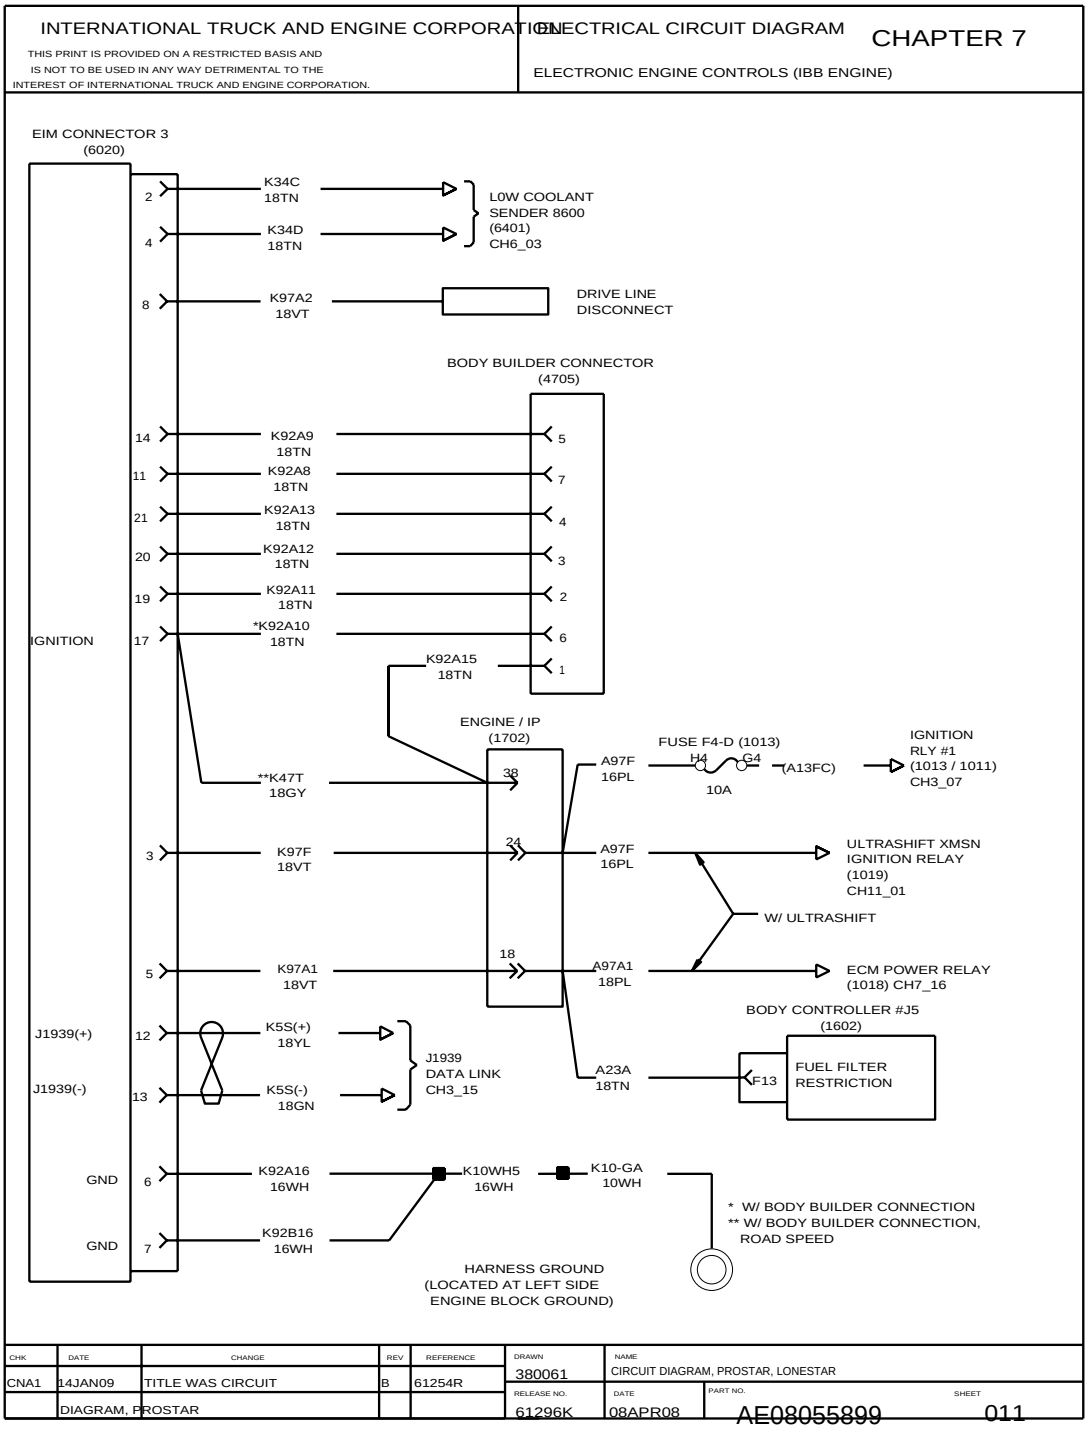


Figure 112 Electronic Engine Controls (IBB Engine)

https://truckmanualshub.com/

7.14. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 12

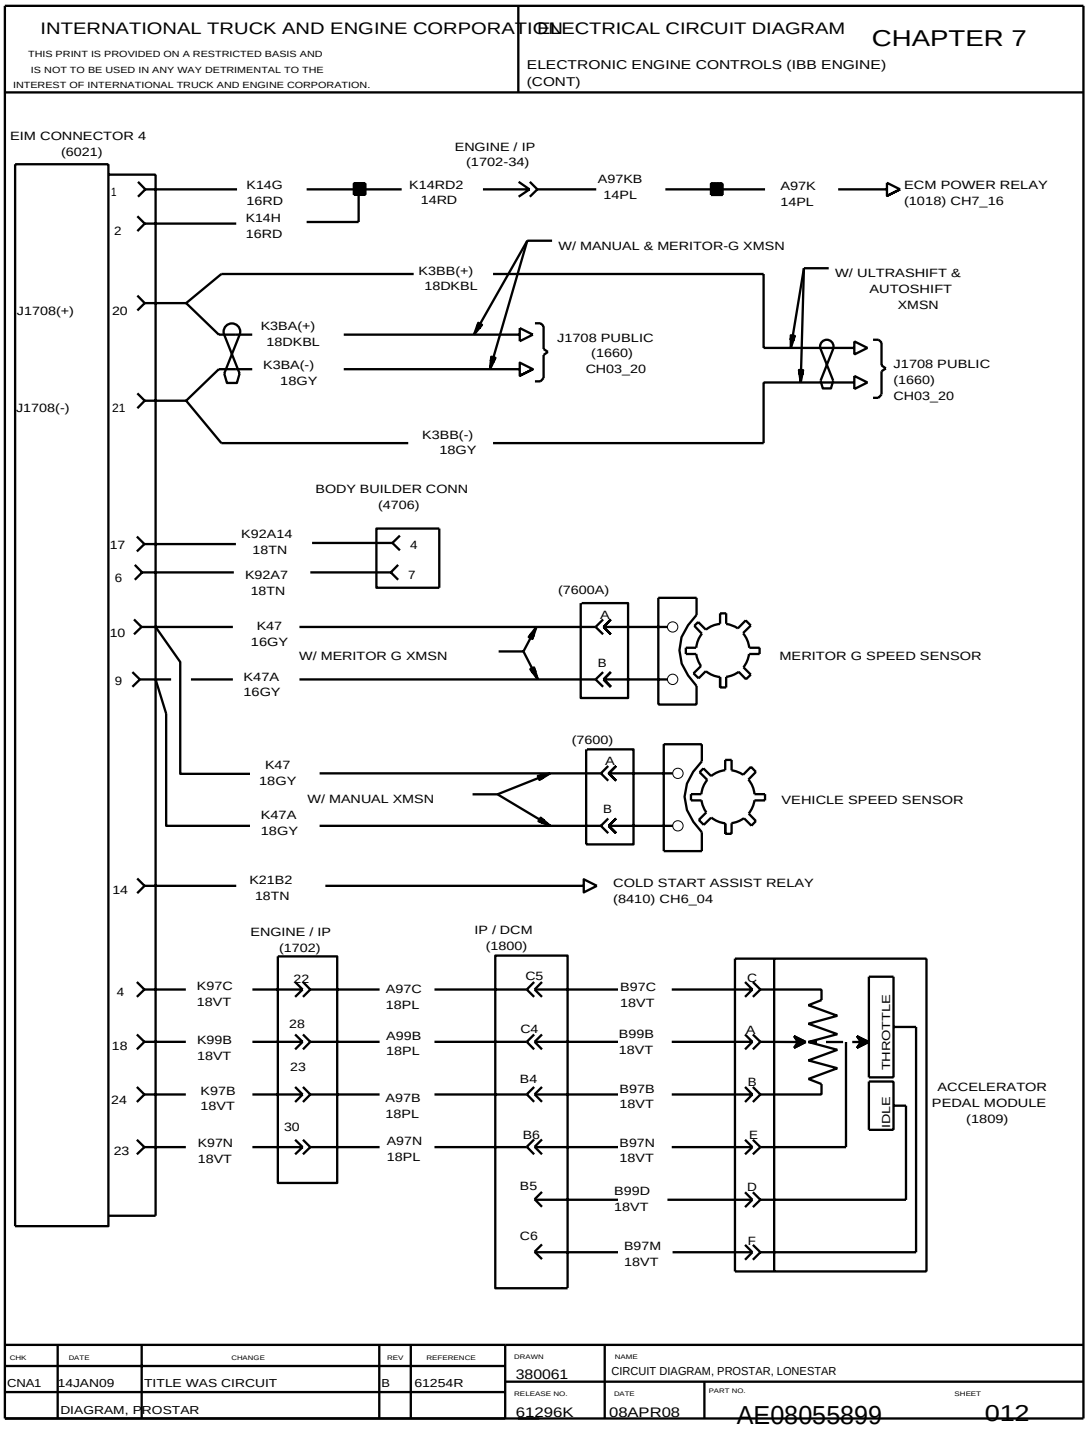


Figure 113 Electronic Engine Controls (IBB Engine)

https://truckmanualshub.com/

7.15. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 13

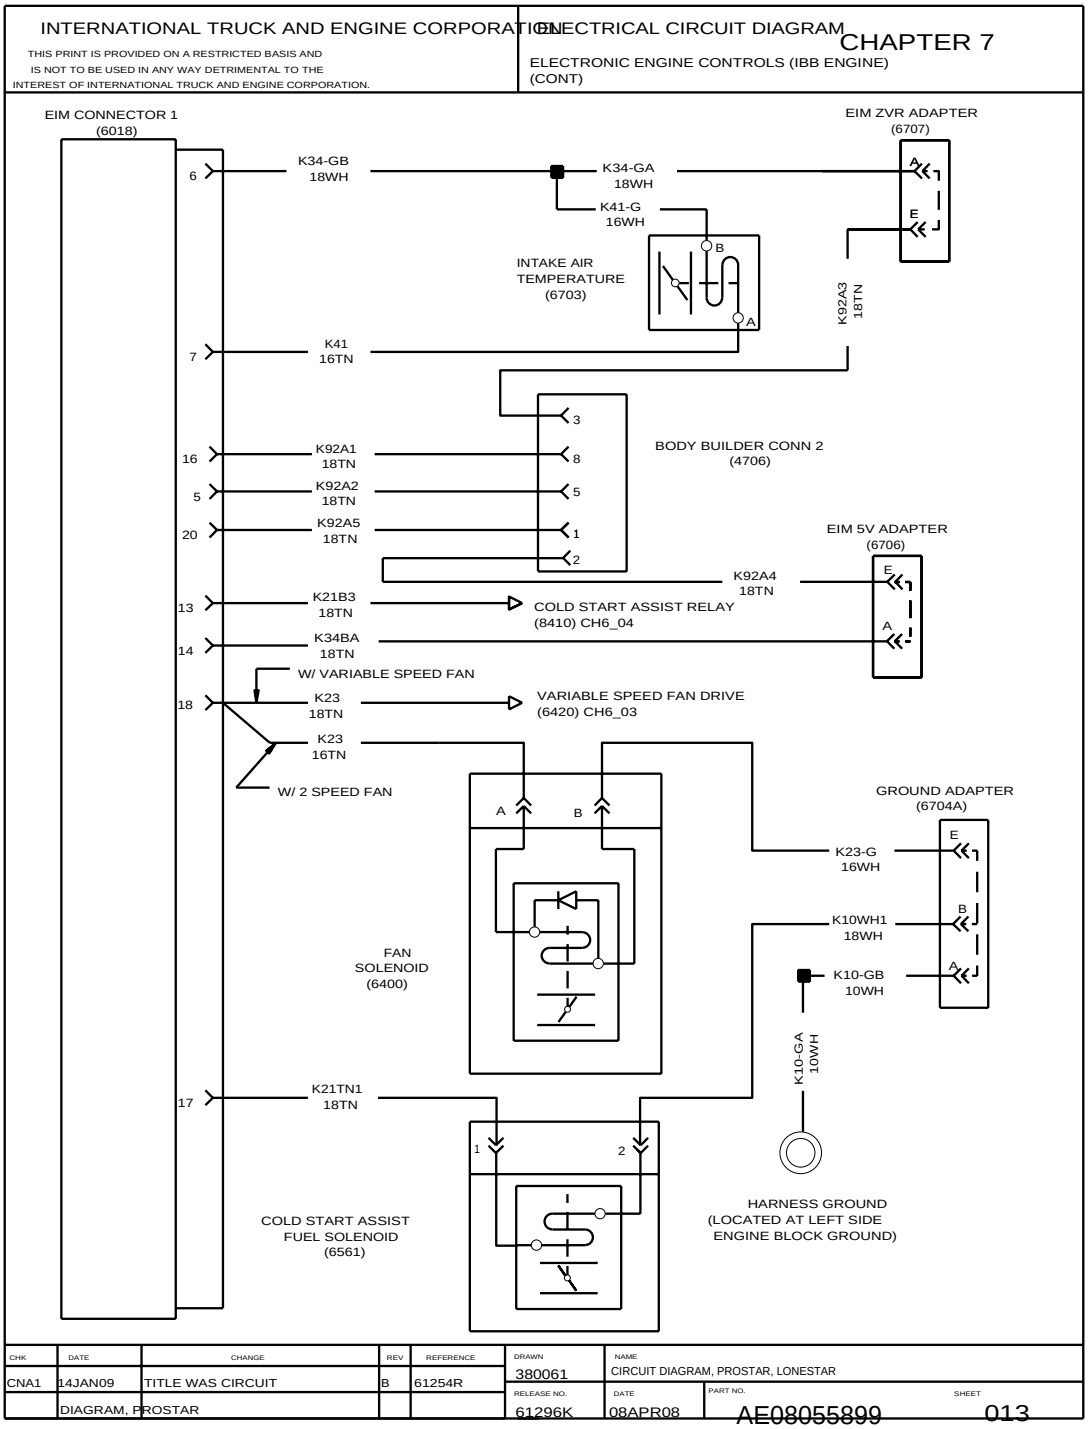


Figure 114 Electronic Engine Controls (IBB Engine)

https://truckmanualshub.com/

7.16. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 14

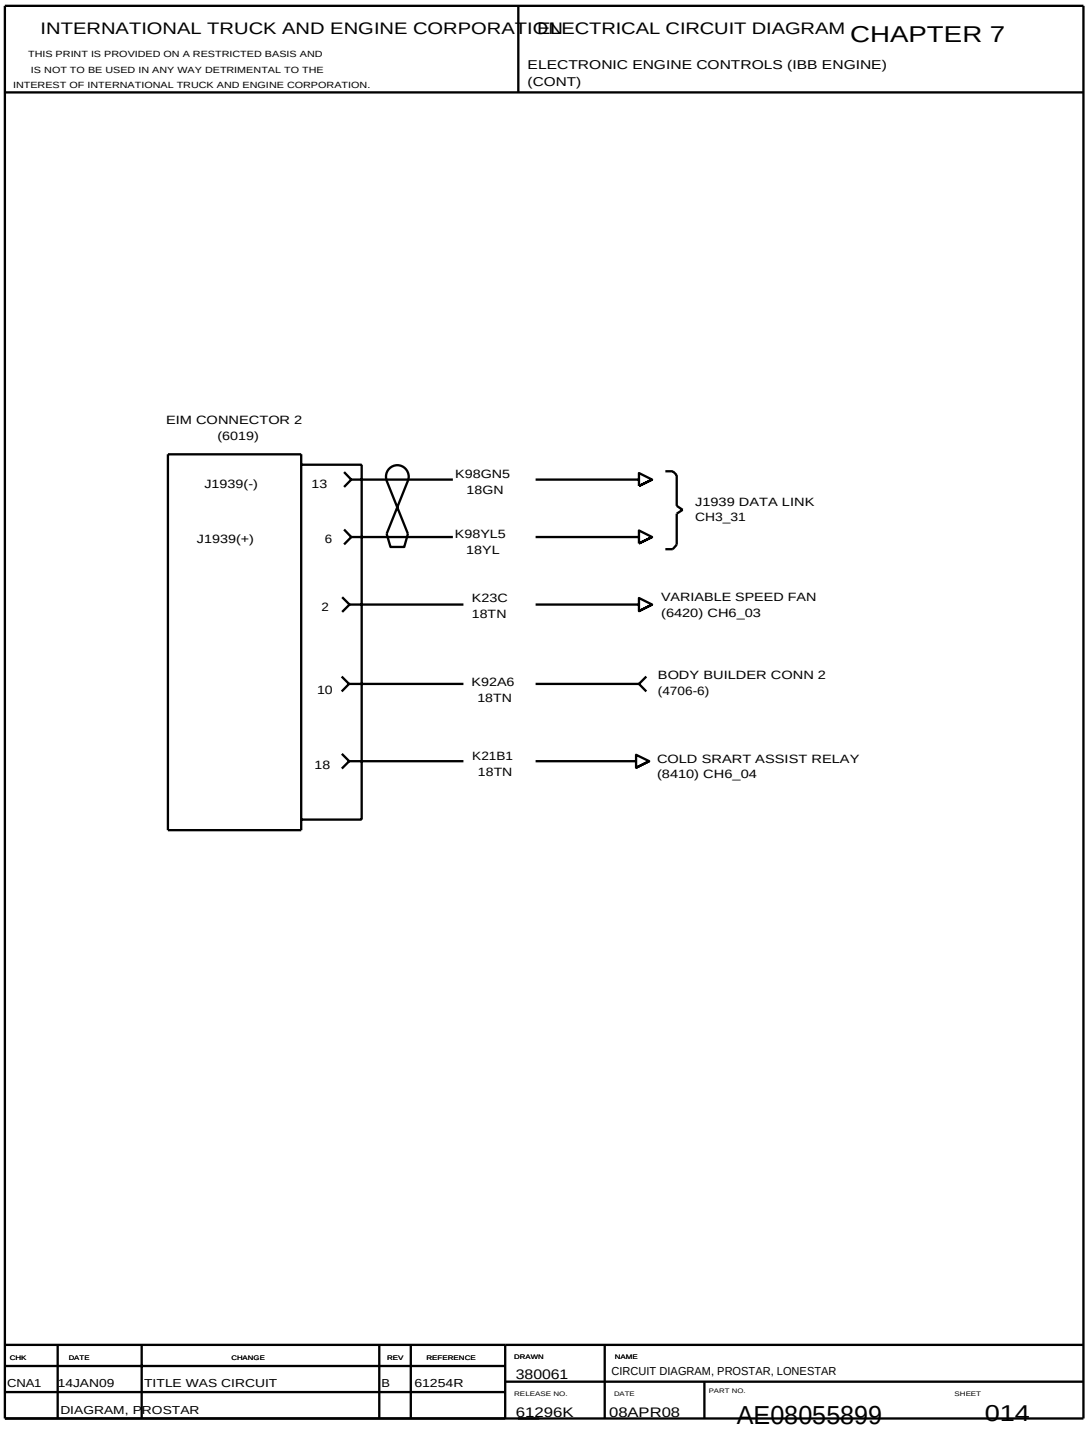


Figure 115 Electronic Engine Controls (IBB Engine)

https://truckmanualshub.com/

7.17. ELECTRONIC ENGINE CONTROLS (IBB ENGINE), P. 15

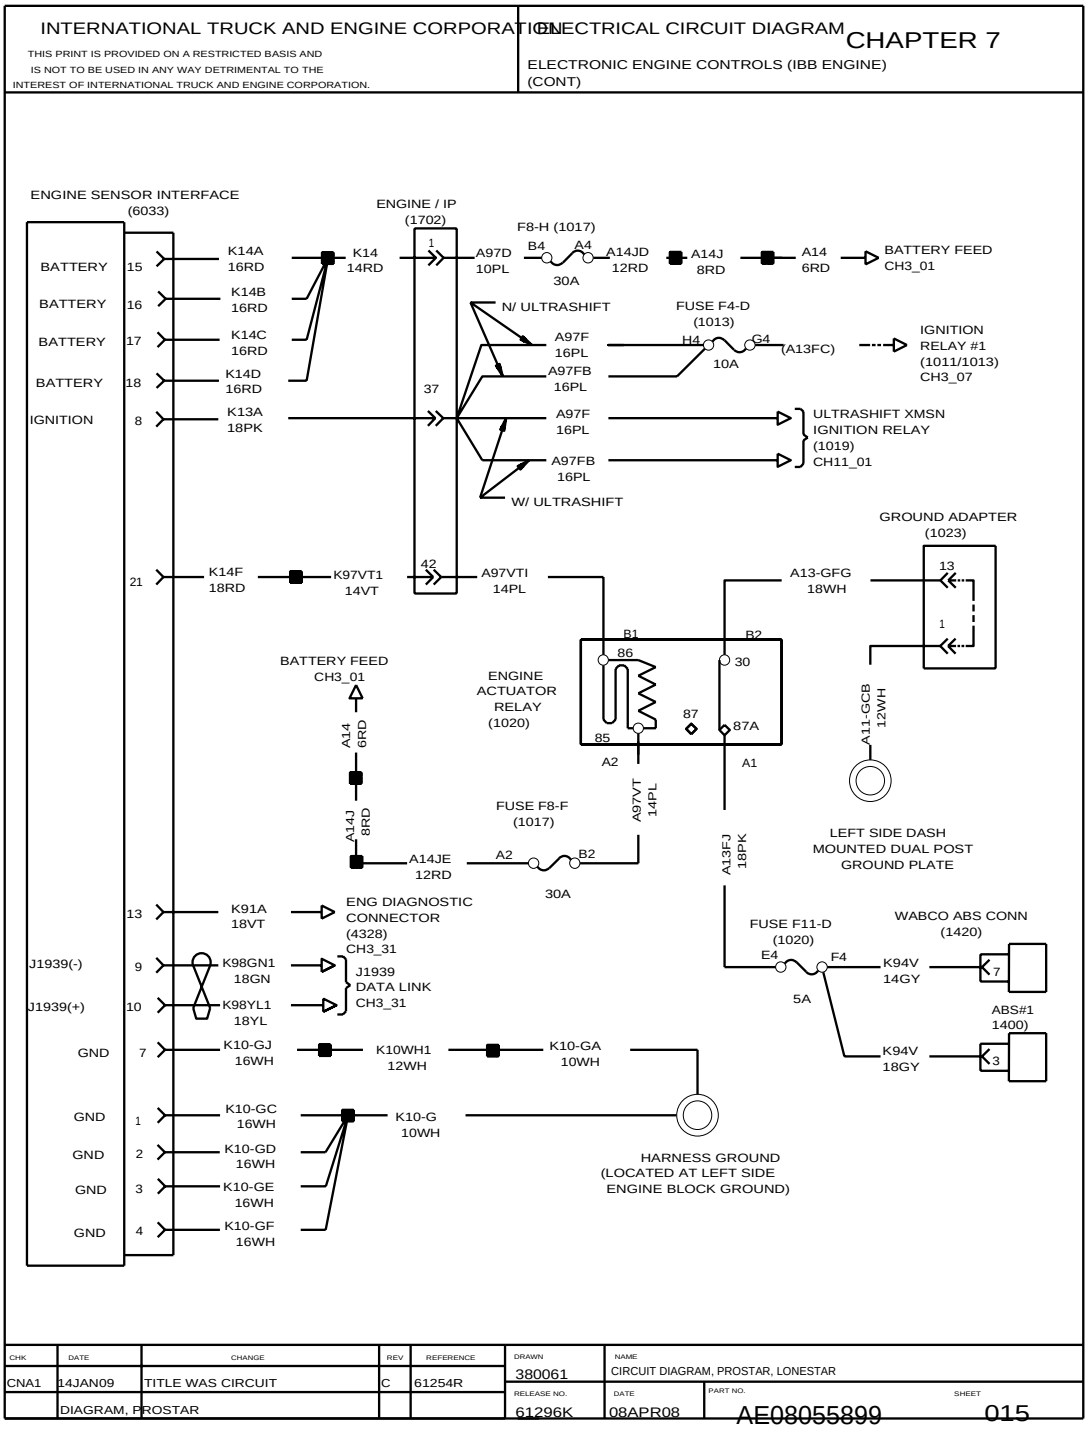


Figure 116 Electronic Engine Controls (IBB Engine)

https://truckmanualshub.com/

7.18. AFTERTREATMENT (IBB ENGINE), P. 16

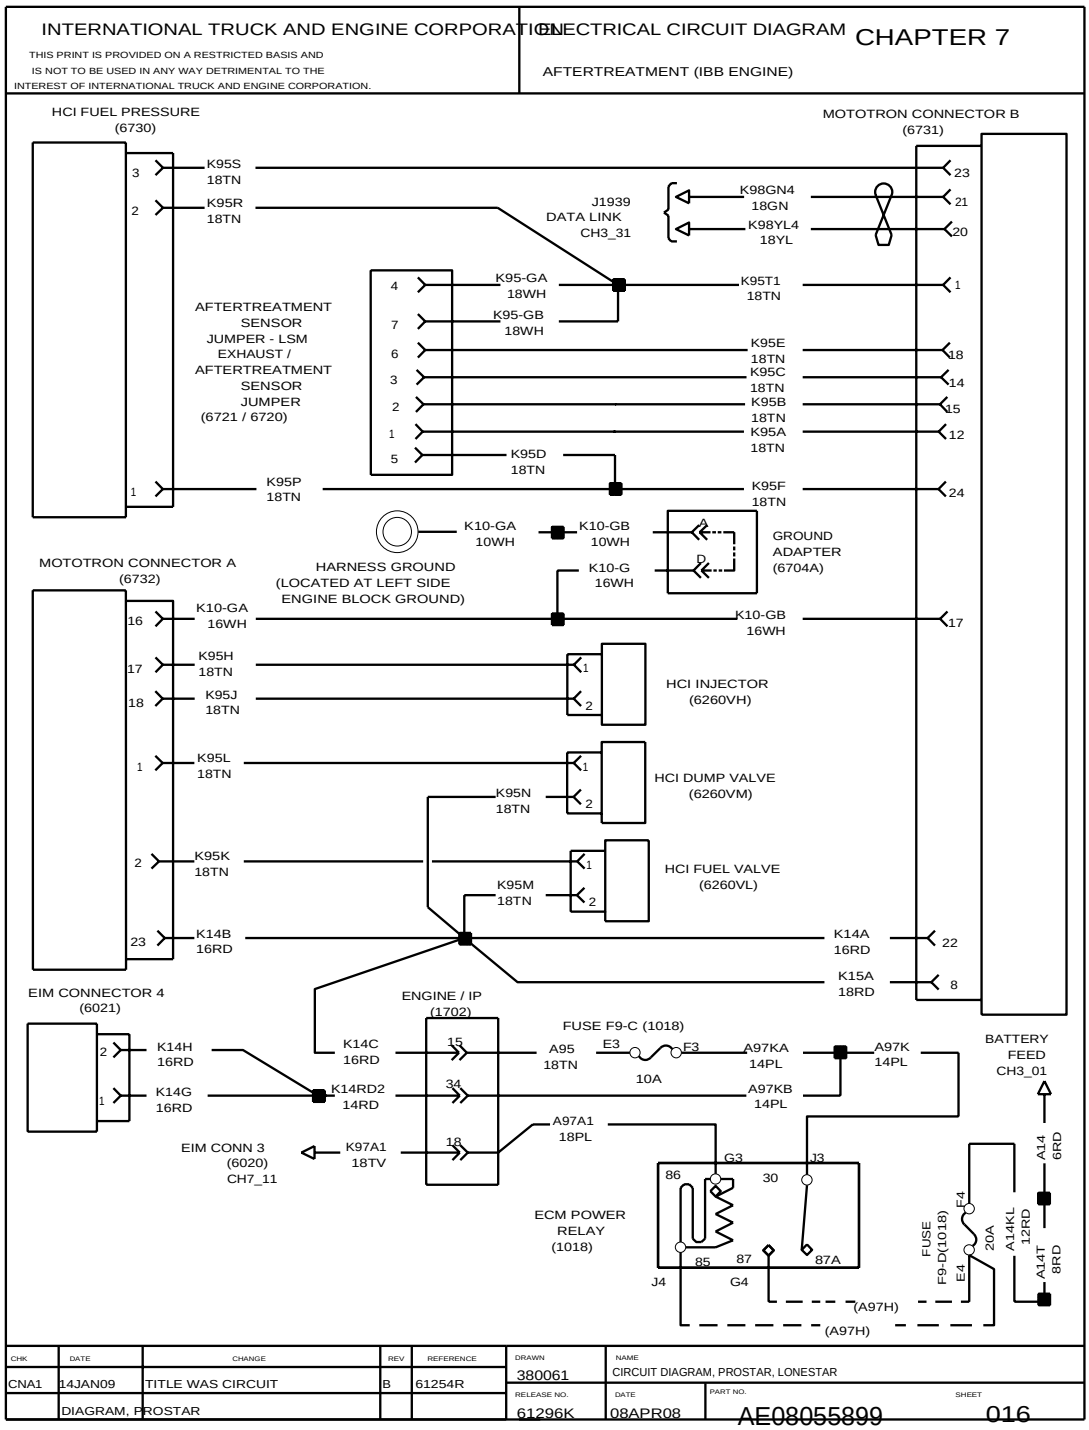


Figure 117 Aftertreatment (IBB Engine)

https://truckmanualshub.com/

8. GAUGES AND WARNING LIGHTS (CHAPTER 8)

8.1. AIR PRESSURE INPUT CIRCUIT AND AIR RESTRICTION GAUGE, P. 1

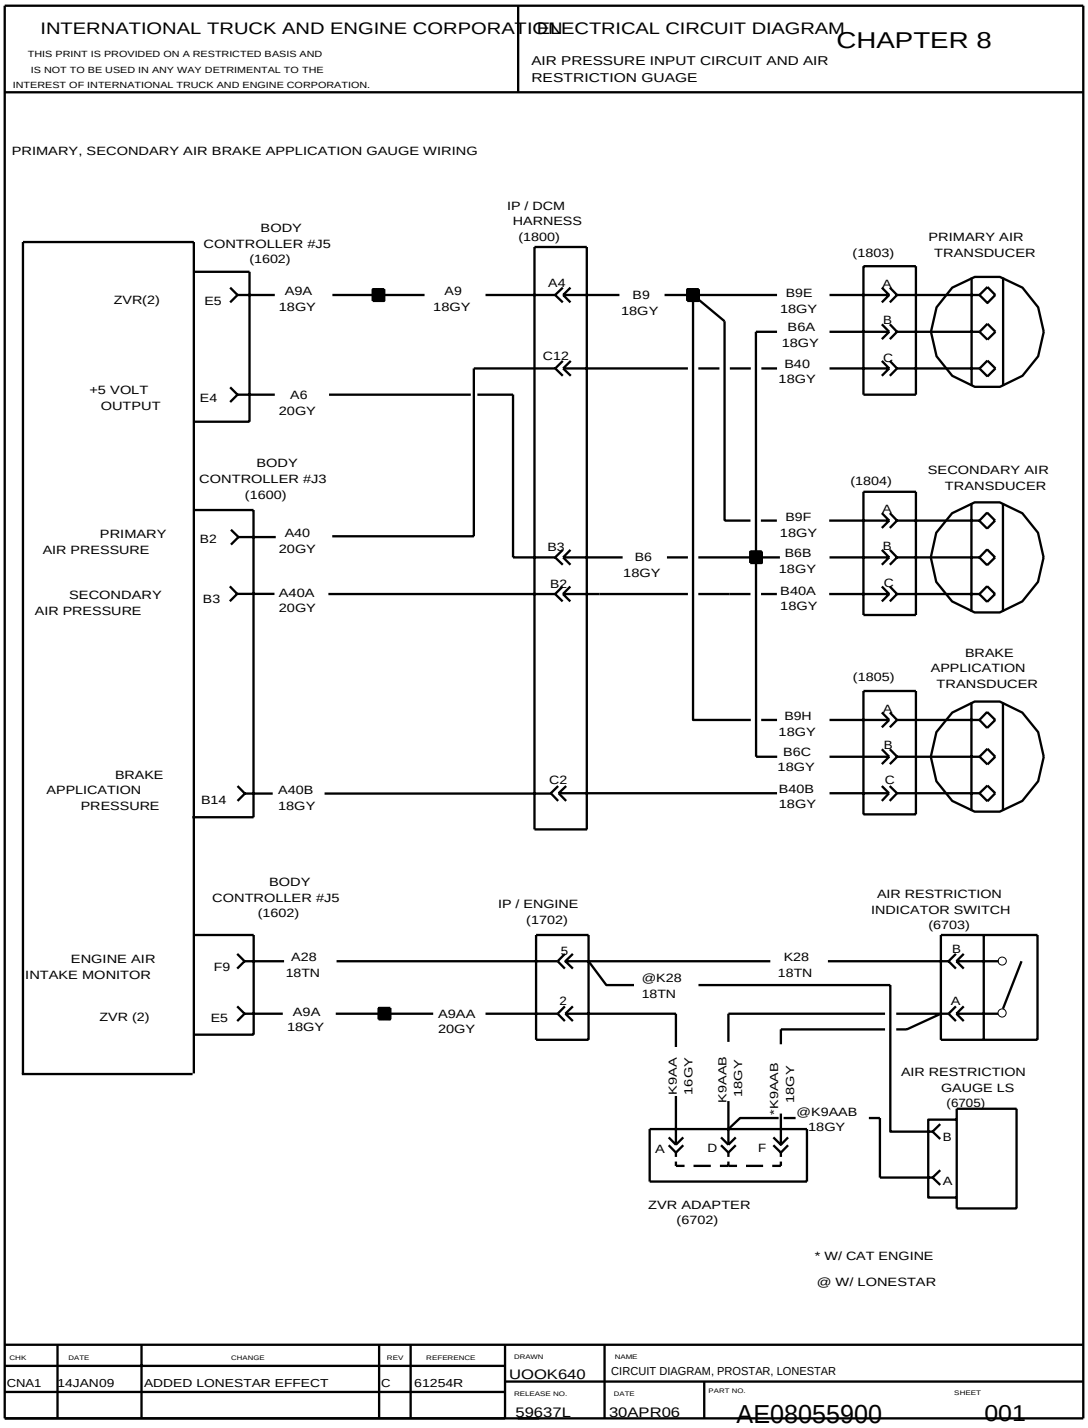


Figure 118 Air Pressure Input Circuit and Air Restriction Gauge

https://truckmanualshub.com/

8.2. AXLE TEMPERATURE GAUGES, P. 2

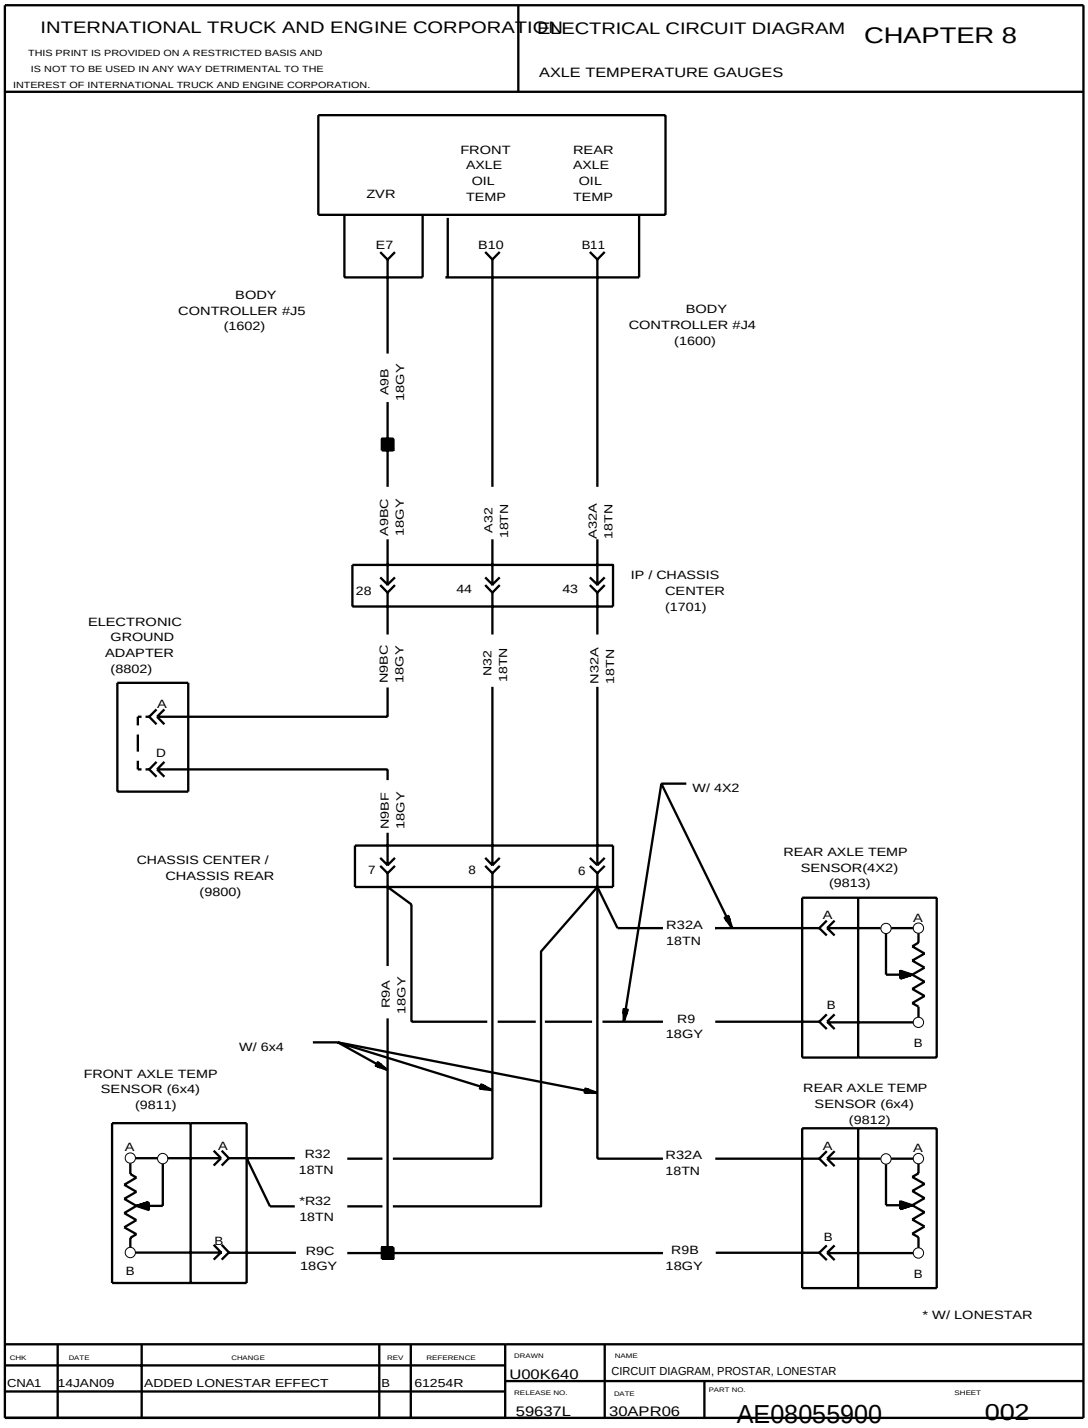


Figure 119 Axle Temperature Gauges

https://truckmanualshub.com/

8.3. ENGINE OIL PRESSURE AND TEMPERATURE, SPEEDOMETER, TACHOMETER, VOLTMETER AND WATER TEMP. GAUGES, P. 3

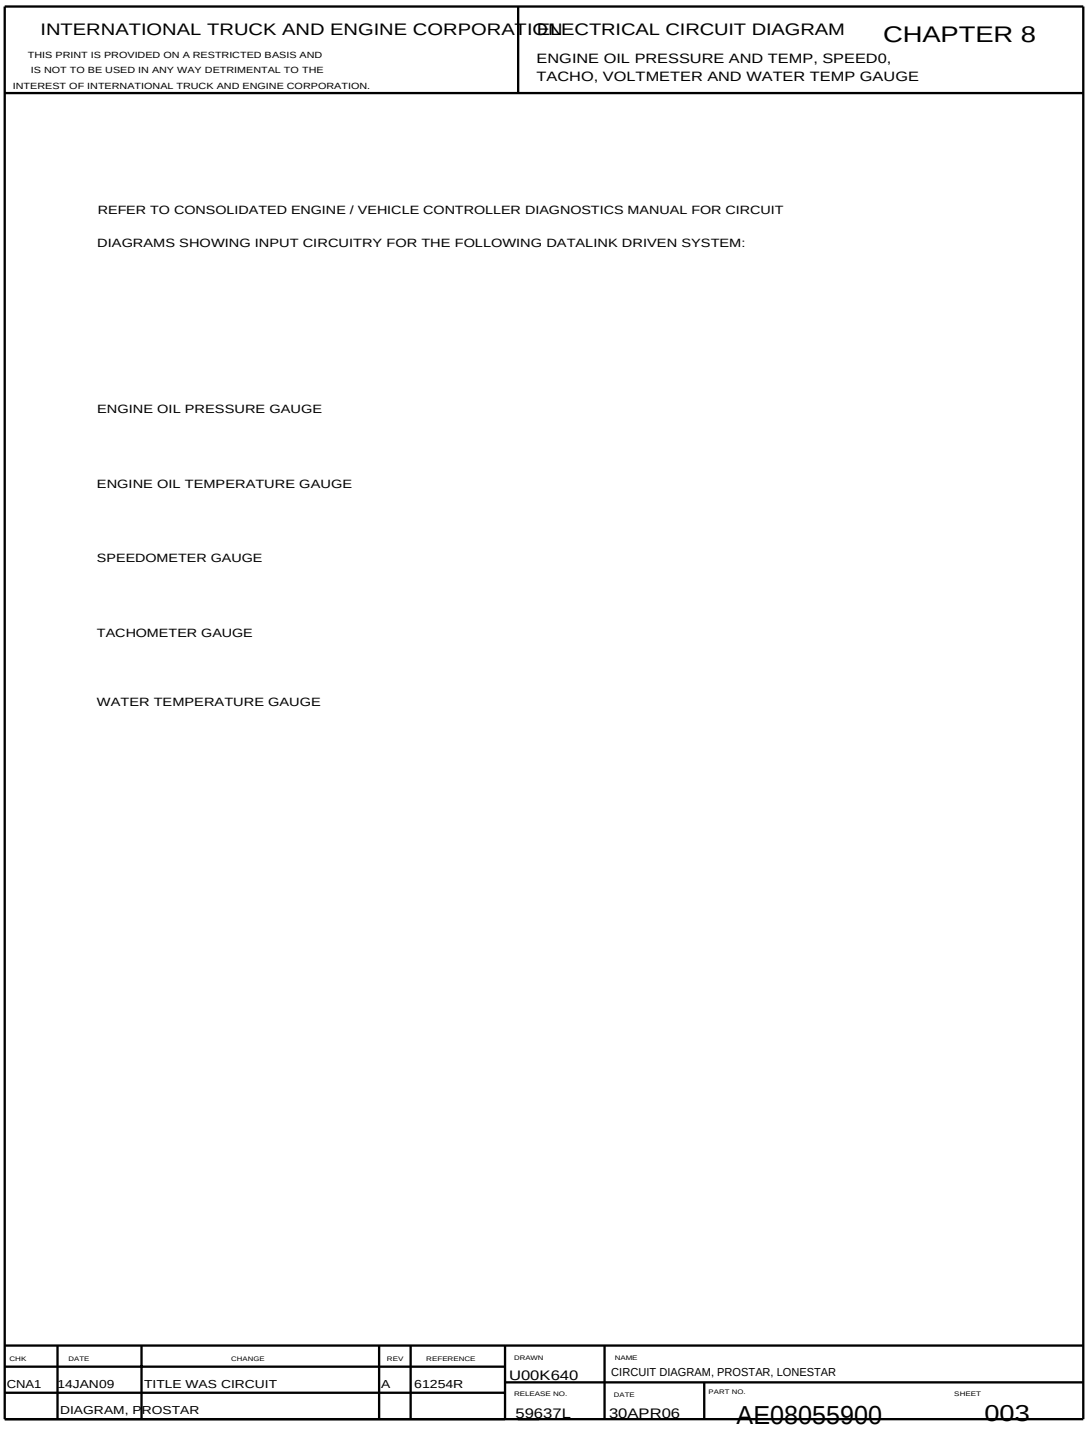


Figure 120 Engine Oil Pressure and Temperature, Speedometer, Tachometer, Voltmeter and Water Temp. Gauges

https://truckmanualshub.com/

8.4. ENGINE OIL AND TRANSMISSION OIL TEMPERATURE GAUGES, P. 4

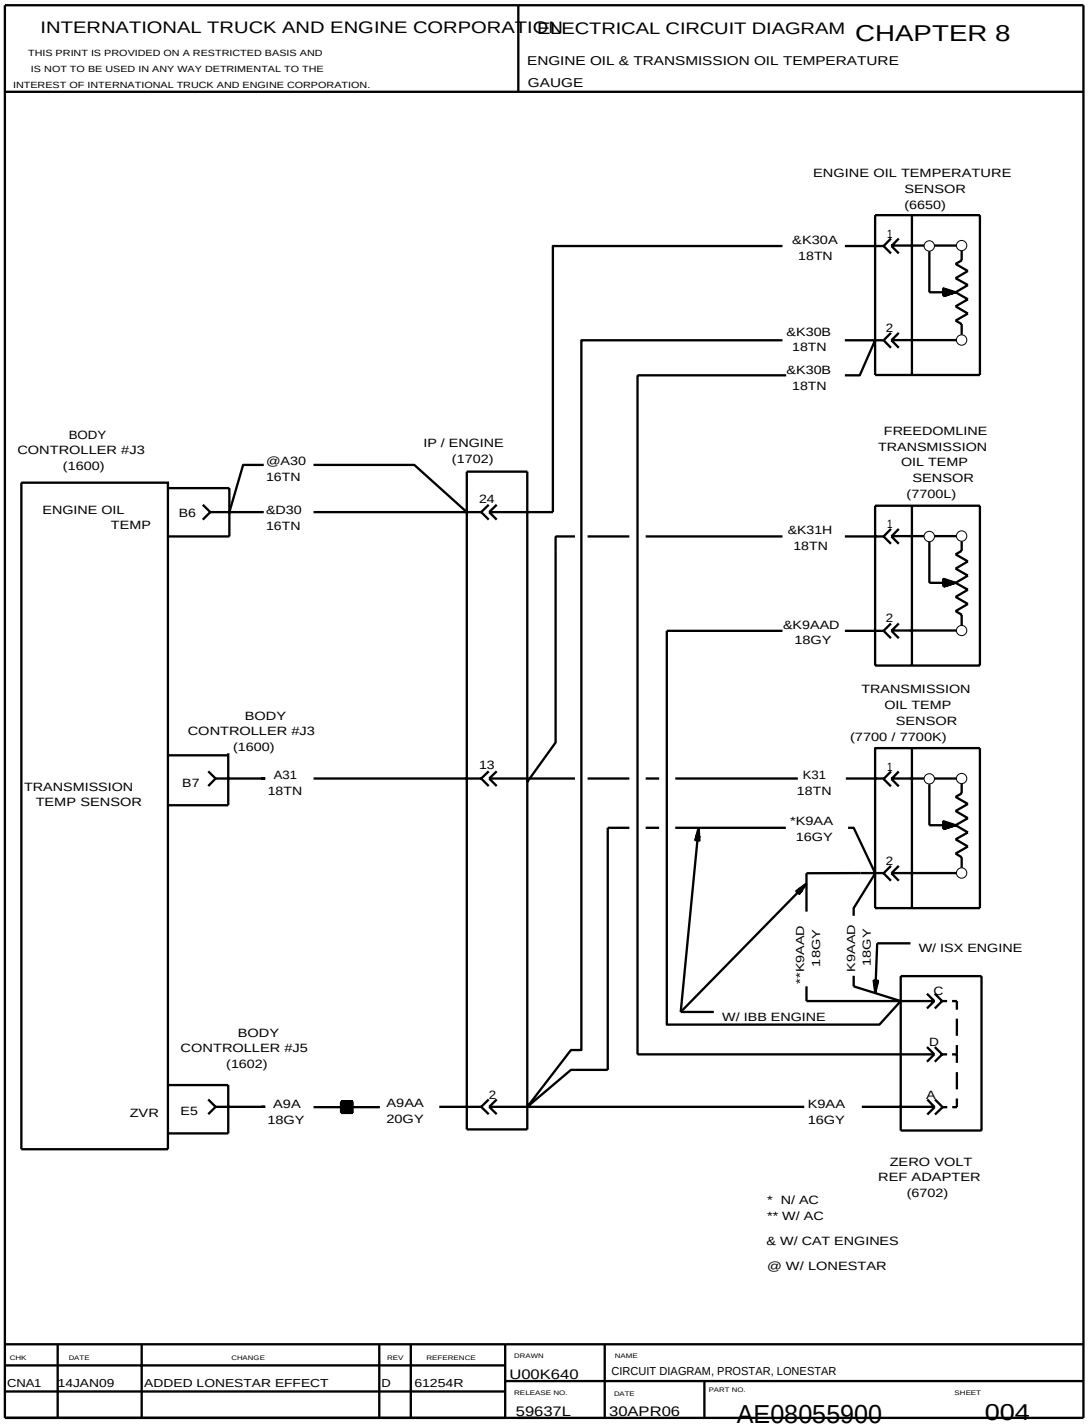


Figure 121 Engine Oil and Transmission Oil Temperature Gauges

https://truckmanualshub.com/

8.5. FUEL HEATER, P. 5

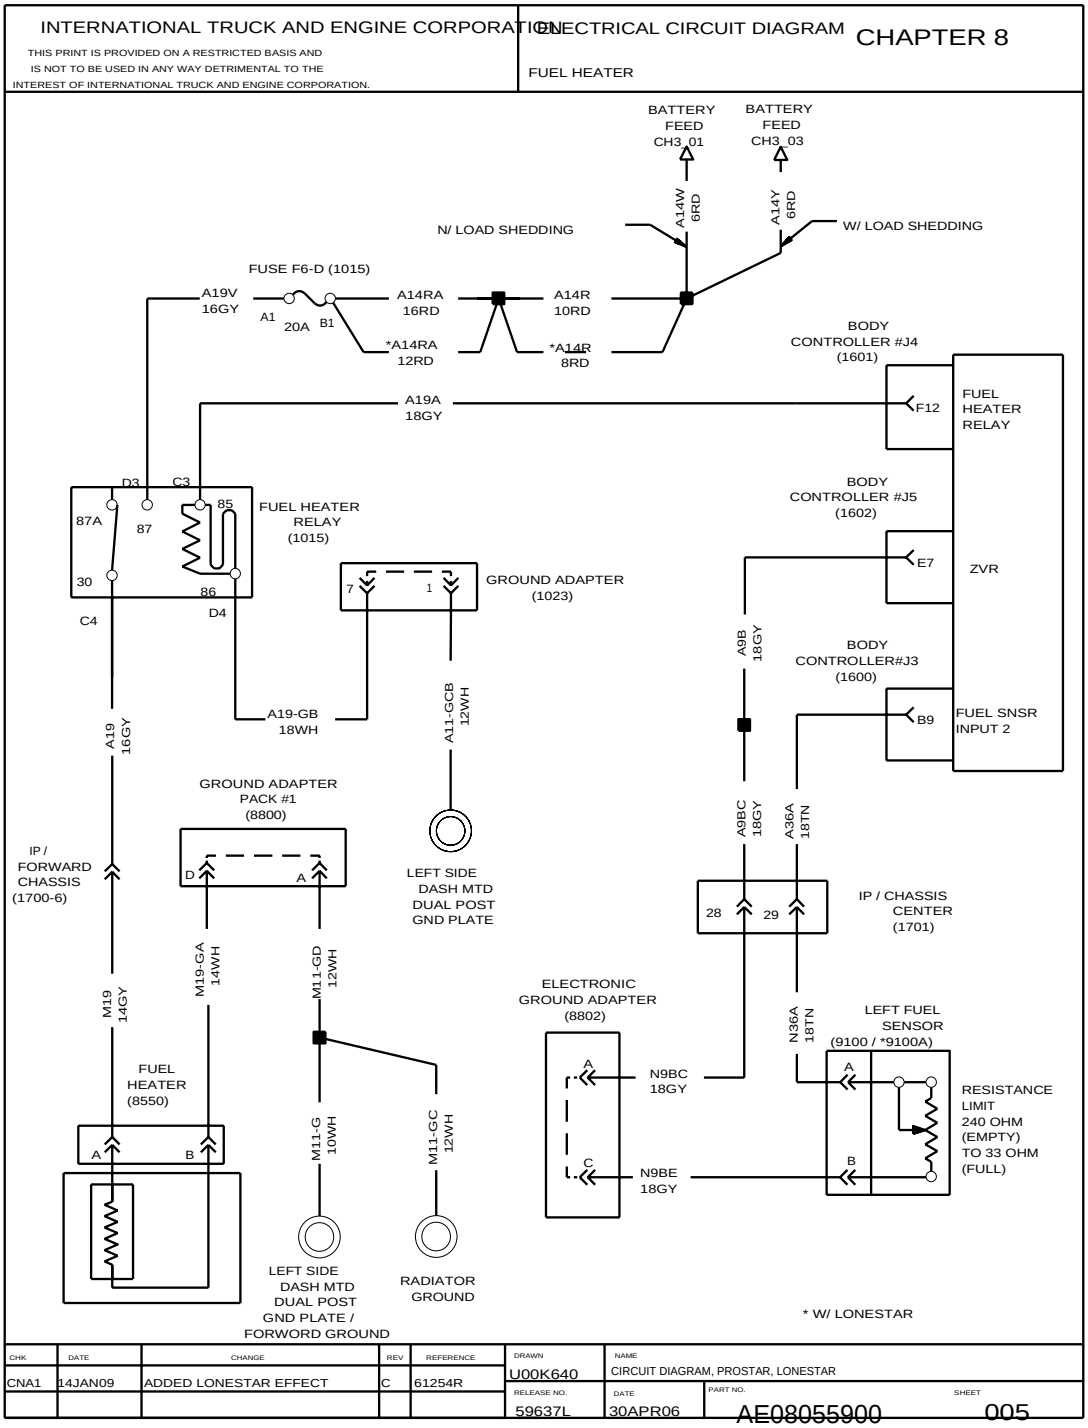


Figure 122 Fuel Heater

https://truckmanualshub.com/

8.6. FUEL TRANSFER PUMP FOR DUAL TANK, P. 6

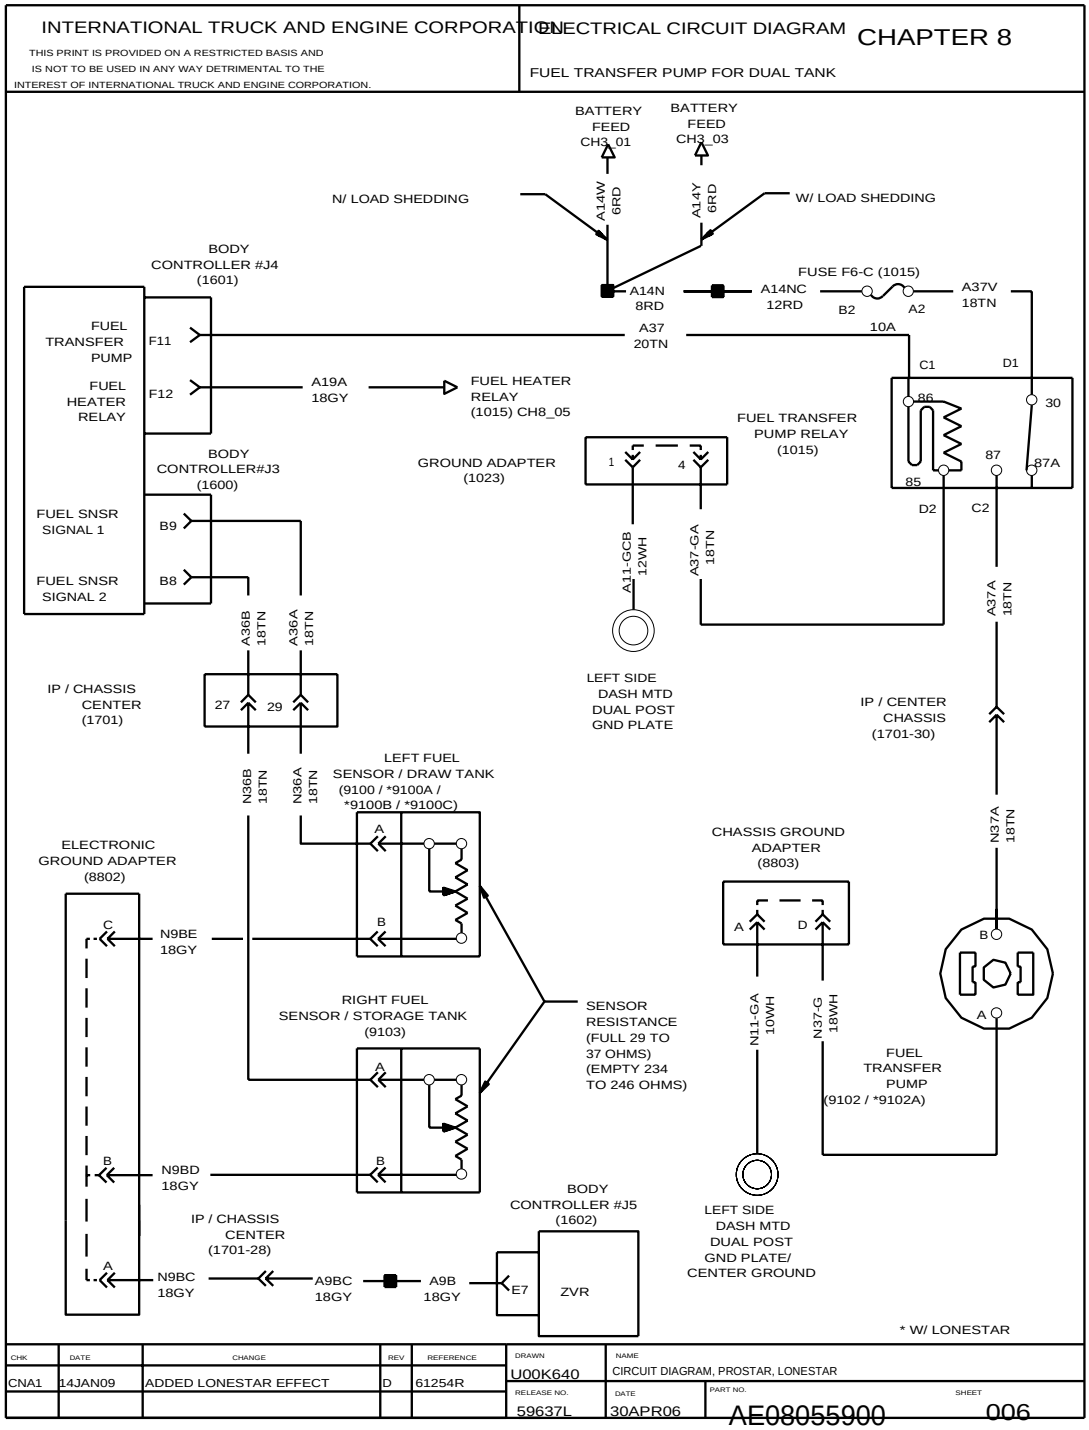


Figure 123 Fuel Transfer Pump for Dual Tank

https://truckmanualshub.com/

8.7. DIFFERENTIAL LOCK AND OPTIONAL INDICATOR, P. 7

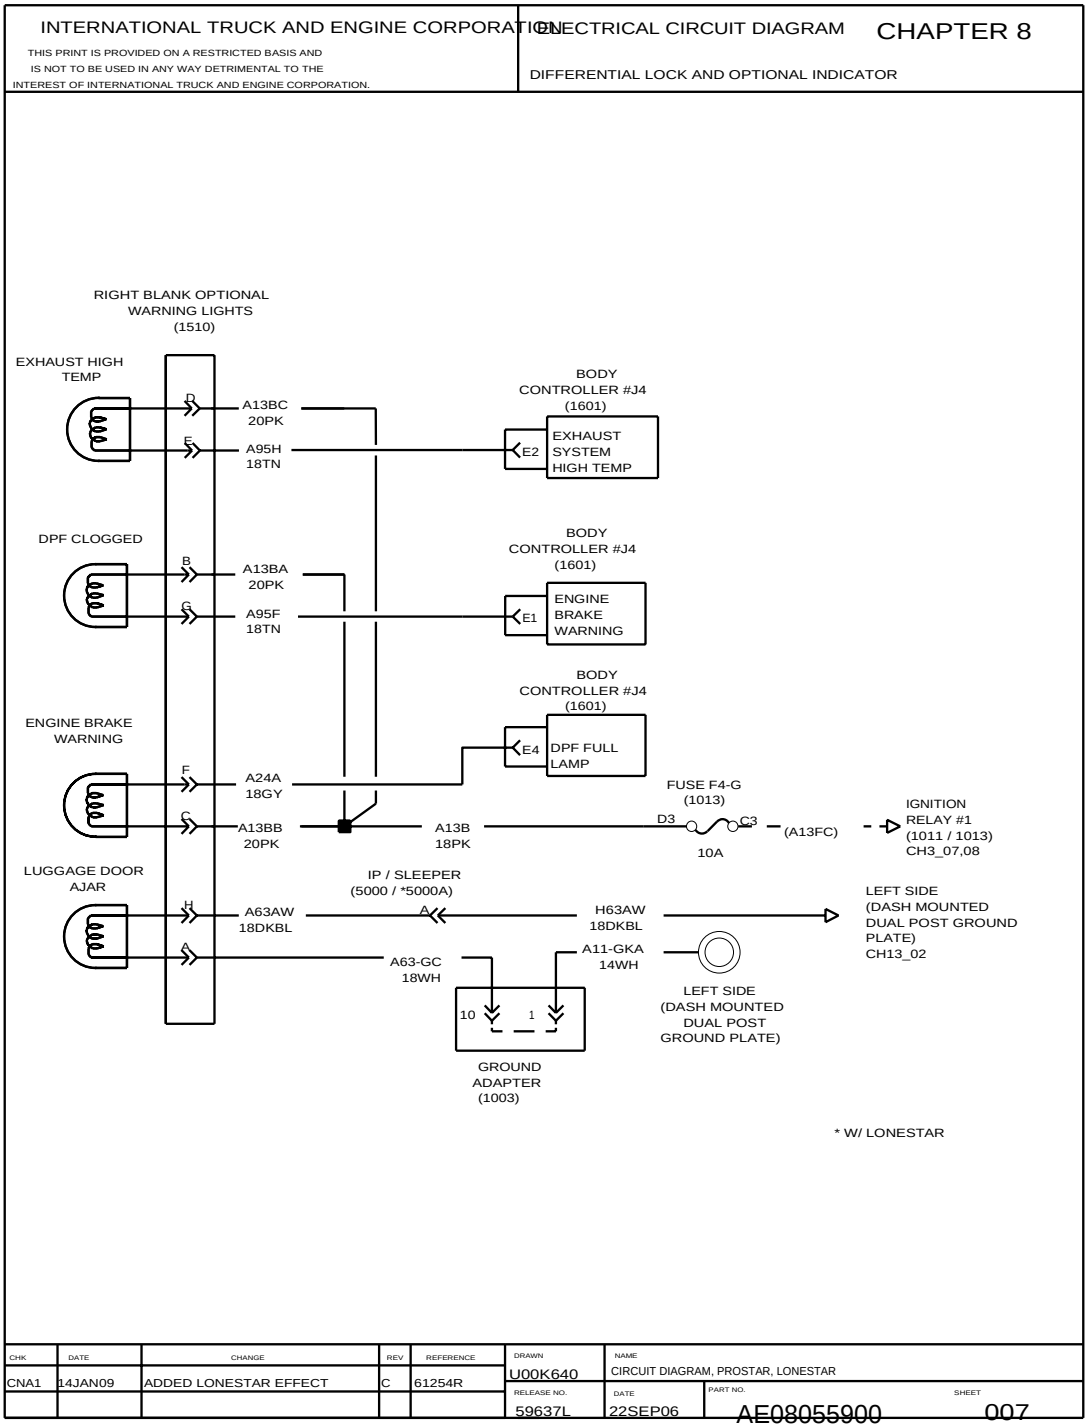


Figure 124 Differential Lock and Optional Indicator

https://truckmanualshub.com/

8.8. DIFFERENTIAL LOCK AND OPTIONAL INDICATOR, P. 8

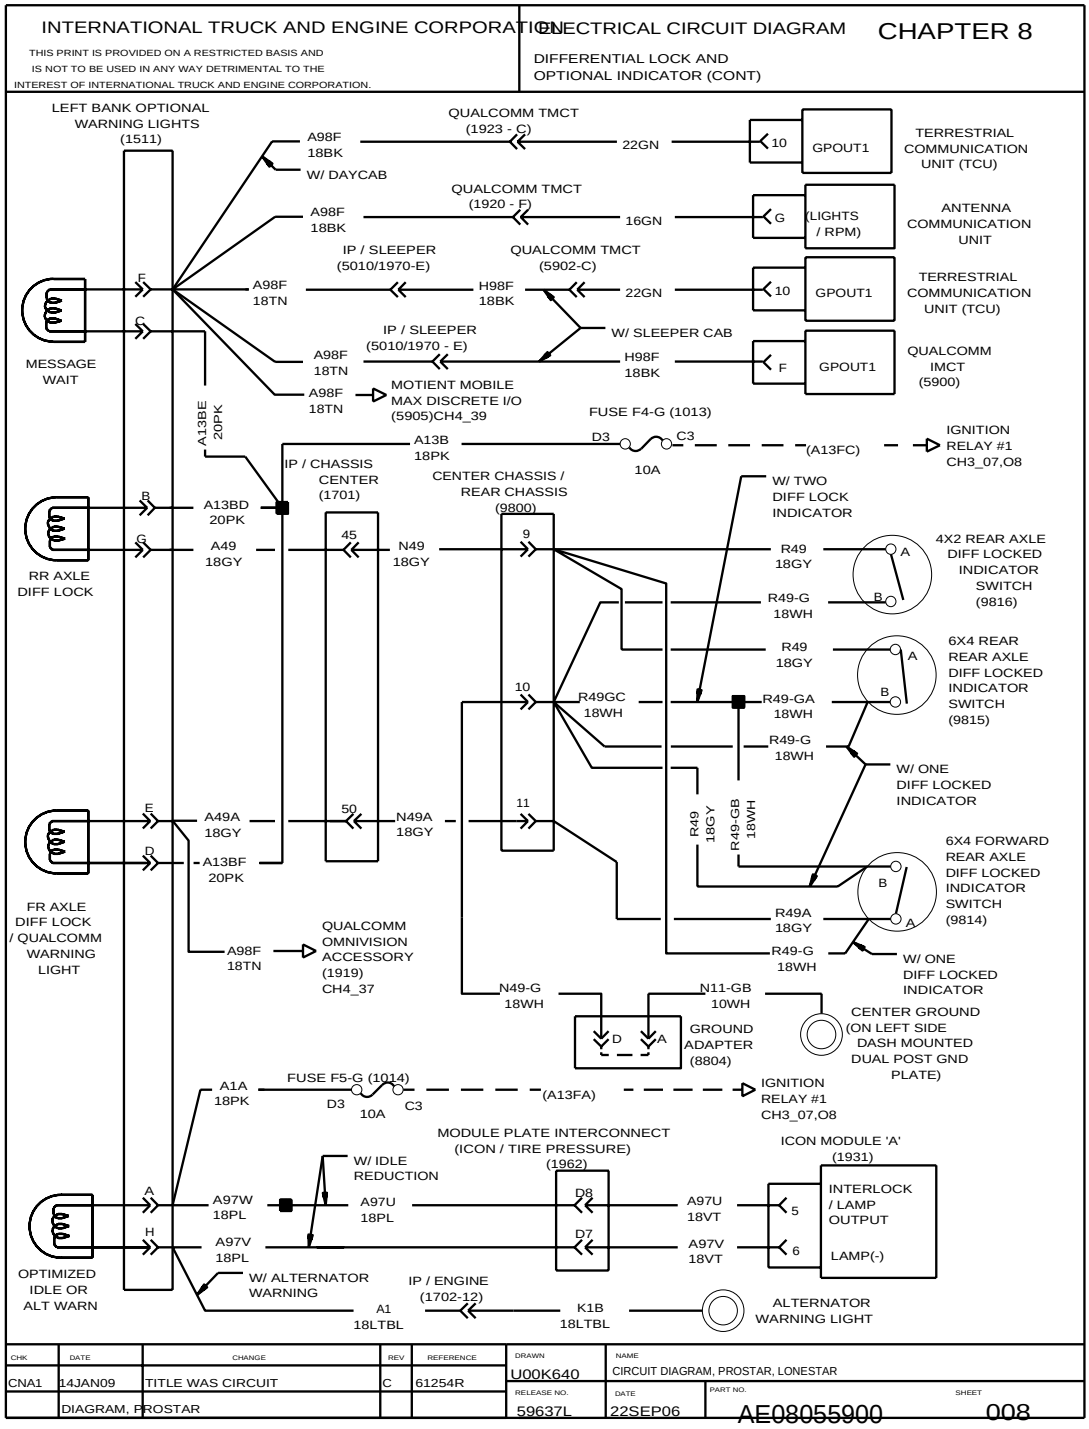


Figure 125 Differential Lock and Optional Indicator (Cont.)

https://truckmanualshub.com/

8.9. BLANK PAGE, P. 9

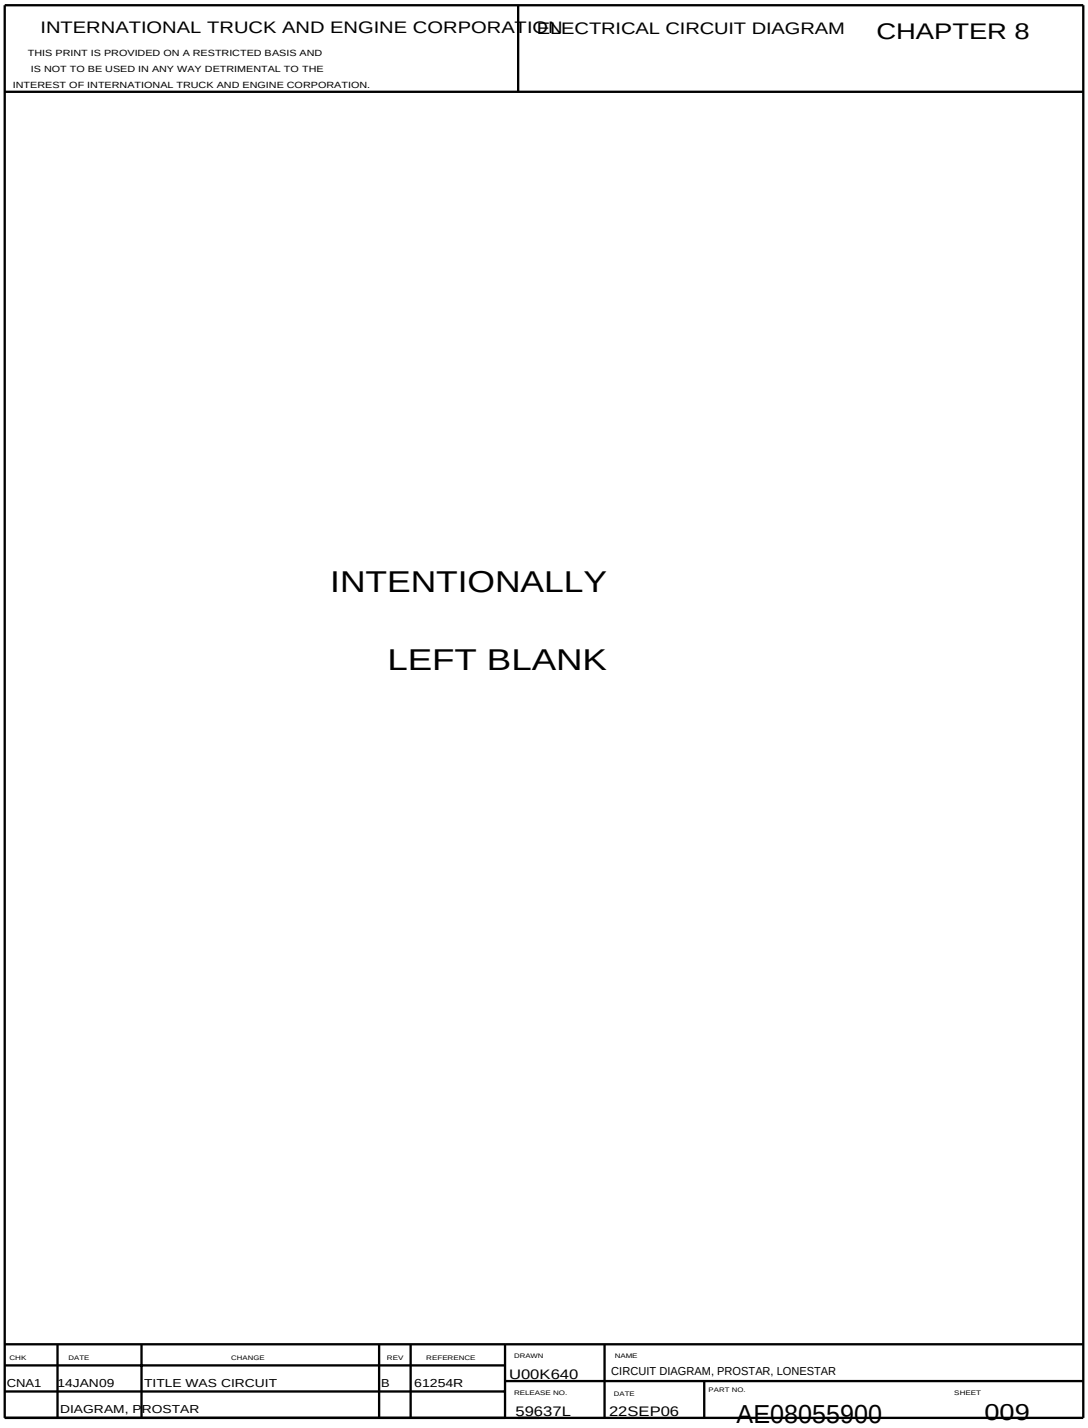


Figure 126 Blank Page

https://truckmanualshub.com/

8.10. IP / GAUGES, P. 10

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 8

IP / GAUGES

INSTRUMENT PANEL GAUGE CLUSTER

GAUGE	WARN LIGHT	SIGNAL PATH	SENSOR LOCATION
RPM (TACH)	NO	ENGINE CONT / DRIVE TRAIN J1939 / CLUSTER	ENGINE
MPH/KPH (SPD)	NO	ENGINE CONT / DRIVE TRAIN J1939 / CLUSTER	TRANSMISSION
FUEL	YES	BODY CONT / DRIVE TRAIN J1939 / CLUSTER	FUEL TANK
VOLT	YES	BODY CONT / DRIVE TRAIN J1939 / CLUSTER	-
AIR 1 (PRES)	YES	BODY CONT / DRIVE TRAIN J1939 / CLUSTER	DRIVER CONTROL MODULE
AIR 2 (PRES)	YES	BODY CONT / DRIVE TRAIN J1939 / CLUSTER	DRIVER CONTROL MODULE
WATER (TEMP)	YES	ENGINE CONT / DRIVE TRAIN J1939 / CLUSTER	ENGINE
ENG OIL (TEMP)	YES	ENGINE CONT / DRIVE TRAIN J1939 / CLUSTER	ENGINE
OIL (PRES)	YES	ENGINE CONT / DRIVE TRAIN J1939 / CLUSTER	ENGINE
TRANS (TEMP)	YES	BODY CONT / DRIVE TRAIN J1939 / CLUSTER	TRANSMISSION

SECONDARY GAUGE CLUSTER

GAUGE	WARN LIGHT	SIGNAL PATH	SENSOR LOCATION
REAR RR AXLE OIL TEMP	YES	BODY CONT / DRIVE TRAIN J1939 / CLUSTER	REAR RR AXLE
FORWARD RR AXLE OIL TEMP	YES	BODY CONT / DRIVE TRAIN J1939 / CLUSTER	FORWARD RR AXLE
BOOST PRESSURE	NO	ENGINE CONT / DRIVE TRAIN J1939 / CLUSTER	ENGINE
AIR APPLICATION	NO	BODY CONT / DRIVE TRAIN J1939 / CLUSTER	DRIVER CONTROL MODULE

NOTES:
1. WARNING LIGHTS ARE PART OF THE GAUGES AND LOCATED IN THE GAUGE CLUSTER

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 30AUG06

PART NO. AE08055900 SHEET 010

Figure 127 IP / Gauges

https://truckmanualshub.com/

8.11. IP / GAUGES AND WARNING LIGHTS — GAUGE CLUSTER, P. 11

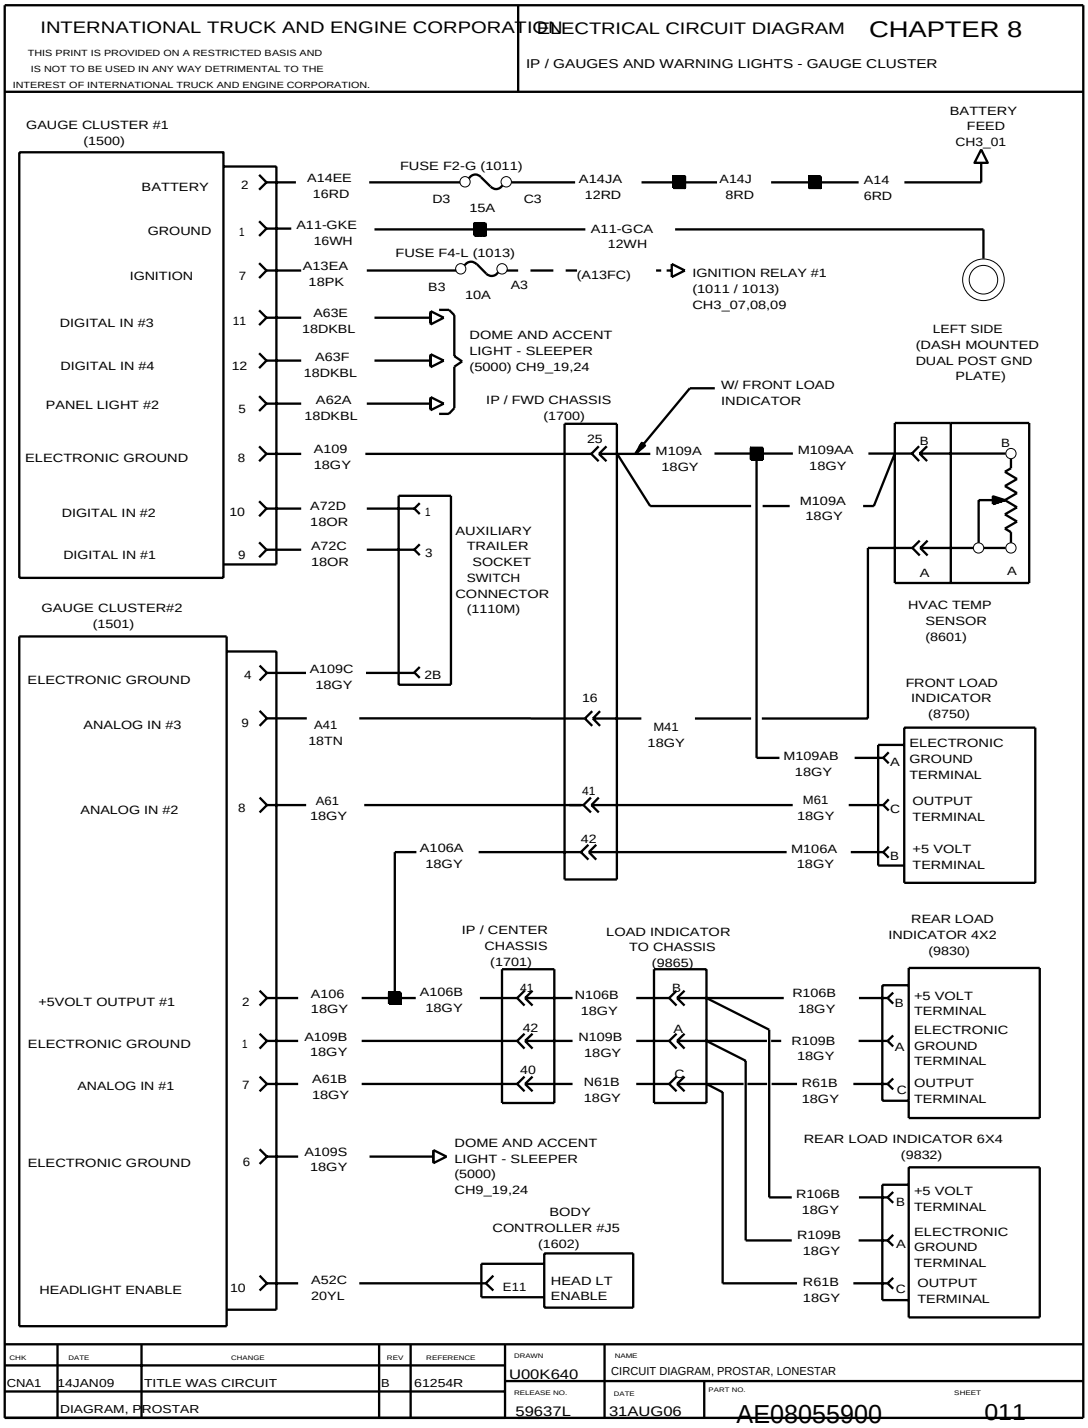


Figure 128 IP / Gauges and Warning Lights — Gauge Cluster

https://truckmanualshub.com/

8.12. SECONDARY INSTRUMENT CLUSTER, P. 12

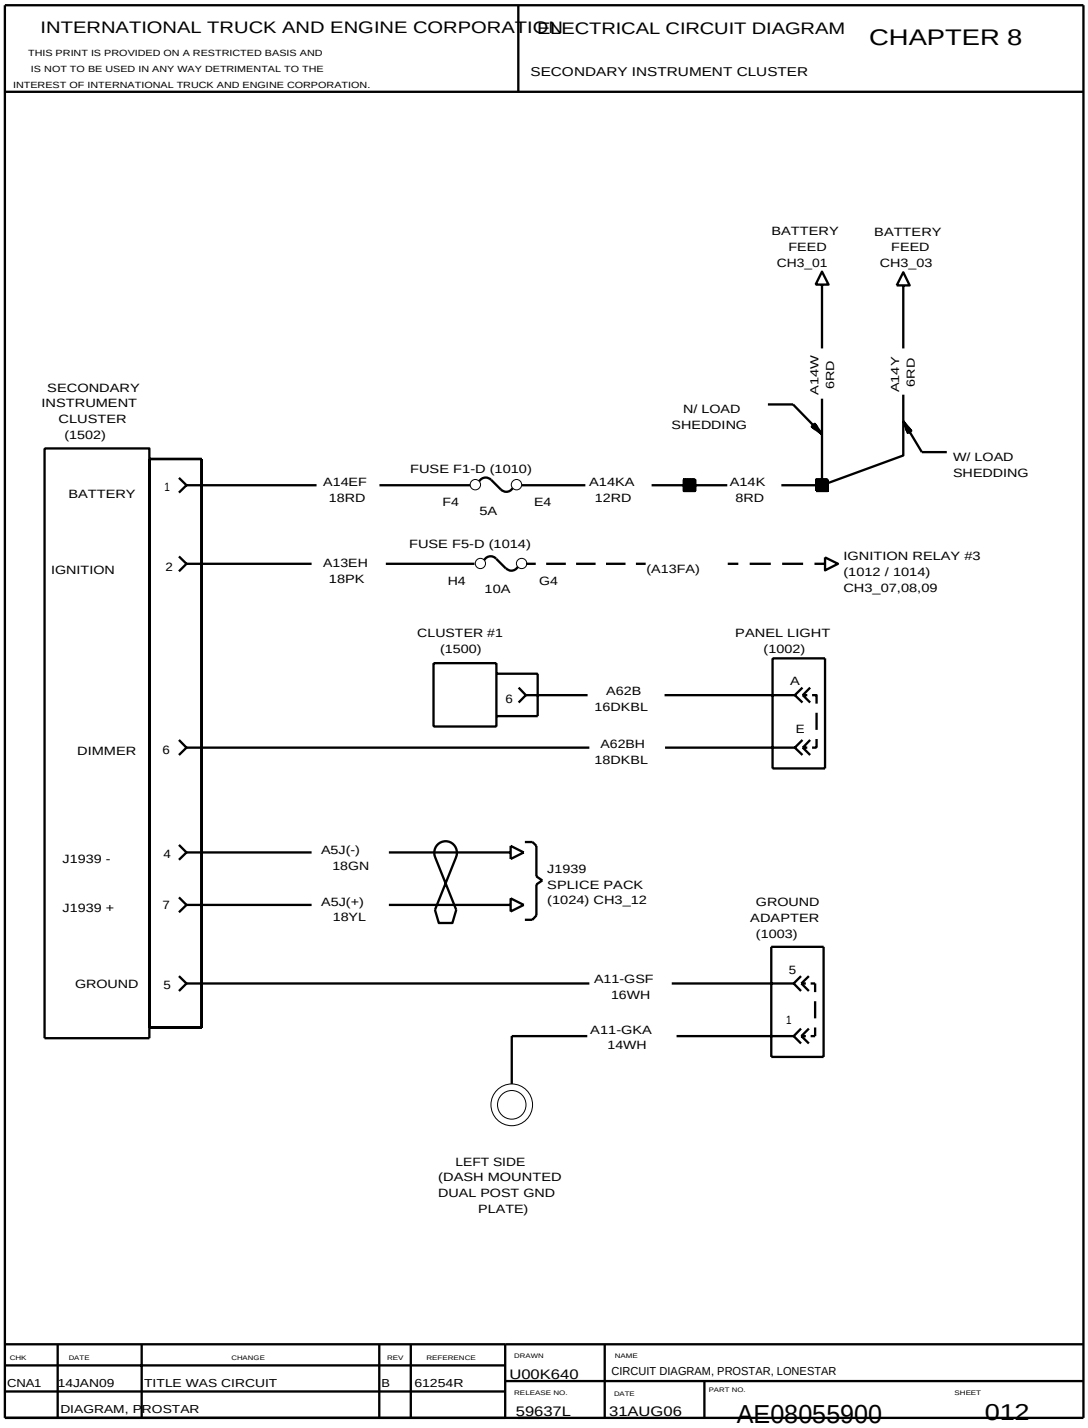


Figure 129 Secondary Instrument Cluster

https://truckmanualshub.com/

8.13. PARKING WARNING LIGHT, P. 13

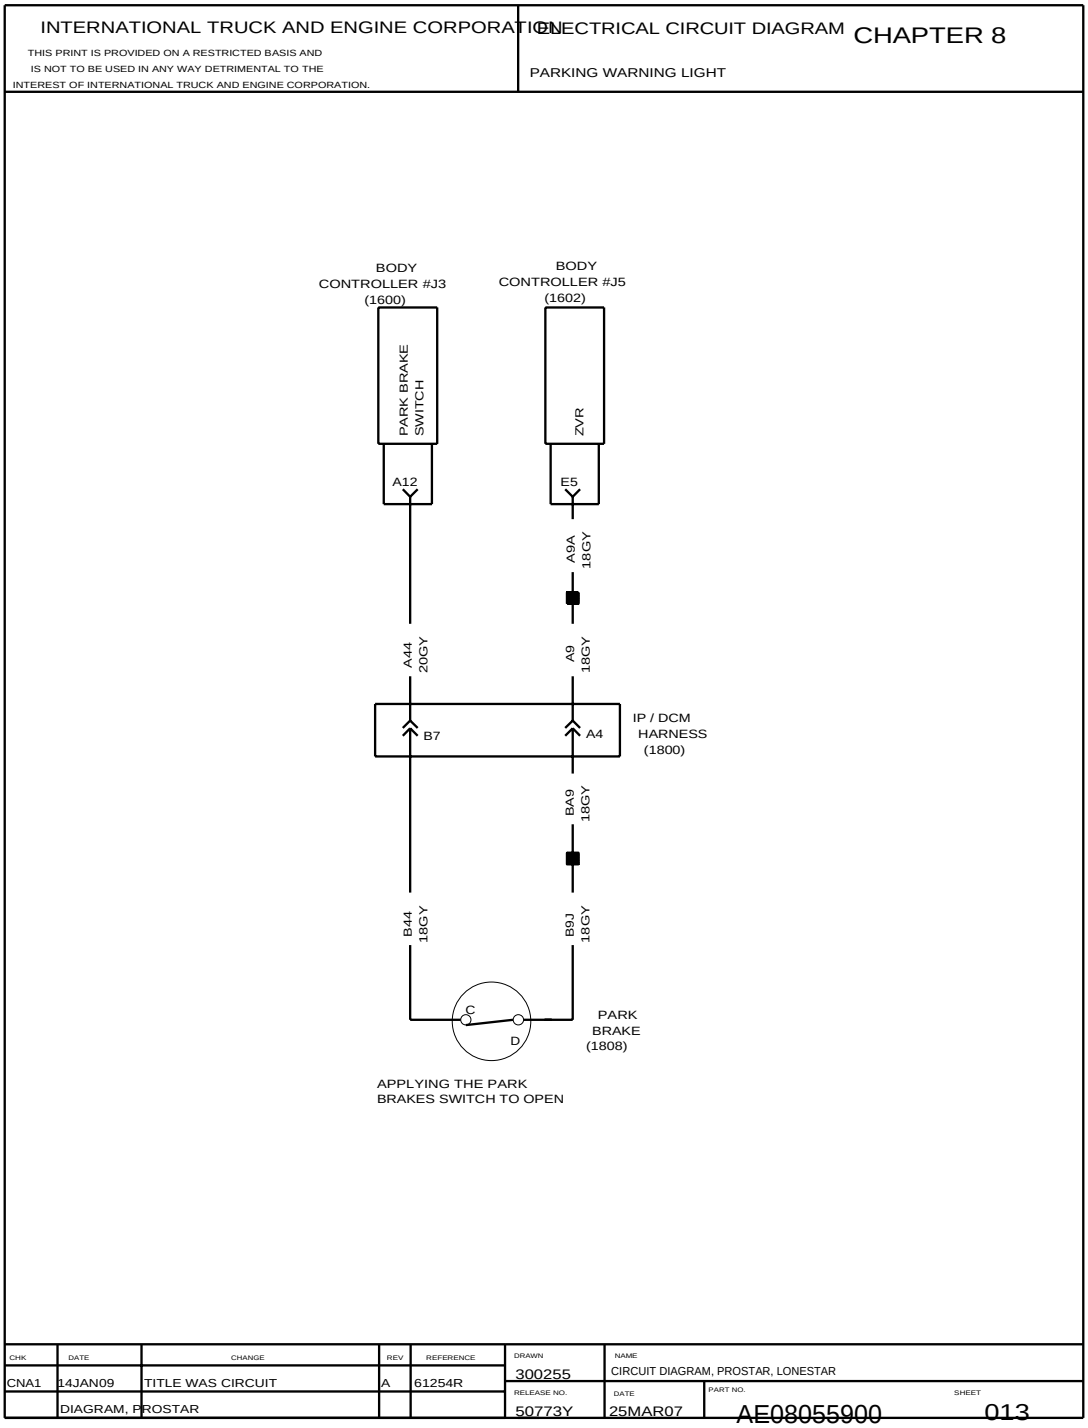


Figure 130 Parking Warning Light

https://truckmanualshub.com/

8.14. WARNING LIGHTS, P. 14

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 8

WARNING LIGHTS

IP WARNING LIGHTS

WARNING LIGHT	REPRESENTATION	COLOR	SIGNAL PATH
RANGE INHIBITED	RANGE INHIBITED	YELLOW	TCM / J1939 / CLUSTER
PROTECT	[ICON]	YELLOW	SAE DIAGNOSTIC LAMP
RETARD OVER HEAT	RETARD OVERHEAT	YELLOW	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
AMBER WARN (AWL)	[YIELD ICON]	YELLOW	STATUS TRANSMITTED IN J1939 MESSAGE FROM ANY MODULE SAE DIAGNOSTIC LAMP
RED STOP (RSL)	[STOP ICON]	RED	STATUS TRANSMITTED IN J1939 MESSAGE FROM ANY MODULE SAE DIAGNOSTIC LAMP
BRAKE PRESSURE	BRAKE PRESSURE [BRAKE ICON]	RED	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
PARK BRAKE	PARK [ICON]	RED	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
EMERGENCY EXIT	EMERG EXIT	RED	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
LIFT DOOR	LIFT DOOR	YELLOW	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
TRAILER ABS	ABS [TRAILER ICON]	YELLOW	STATUS TRANSMITTED IN J1939 MESSAGE FROM ABS
WAIT TO START	WAIT TO START	YELLOW	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
TRACTION CONTROL	TRAC CTRL	YELLOW	STATUS TRANSMITTED IN J1939 MESSAGE FROM ABS
IDLE SHUTDOWN	IDLE SHUTDOWN	YELLOW	STATUS TRANSMITTED IN J1939 MESSAGE FROM ECM
MALFUNCTION (MIL)	[ICON]	YELLOW	SAE DIAGNOSTIC LAMP
PTO ENGAGED INDICATOR	PTO	YELLOW	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
SERVICE PARK	SERVICE [ICON]	RED	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
SEAT BELT	FASTEN BELTS	RED	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
BRAKE FLUID	BRAKE FLUID [ICON]	RED	BODY CONT / J1939 / CLUSTER
RED FLASHER	RED FLASHER	RED	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
AMBER FLASHER	AMBER FLASHER	YELLOW	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
ANTILOCK BRAKING SYSTEM	[ABS ICON]	YELLOW	STATUS TRANSMITTED IN J1939 MESSAGE FROM ABS
ECONOMY MODE	ECON	YELLOW	STATUS TRANSMITTED IN J1939 MESSAGE FROM TCM
LEFT TURN	[ARROW ICON]	GREEN	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
HIGH BEAM	[ICON]	BLUE	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER
RIGHT TURN	[ARROW ICON]	GREEN	STATUS TRANSMITTED IN J1939 PROPRIETARY MESSAGE FROM BODY CONTROLLER

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 60773Y	DATE 30APR06

PART NO. AE08055900 SHEET 014

Figure 131 Warning Lights

https://truckmanualshub.com/

8.15. IP TEXT MESSAGES AND WARNING LIGHTS — CONTROLLED BY ENGINE, TRANSMISSION AND ABS CONTROLLER, P. 15

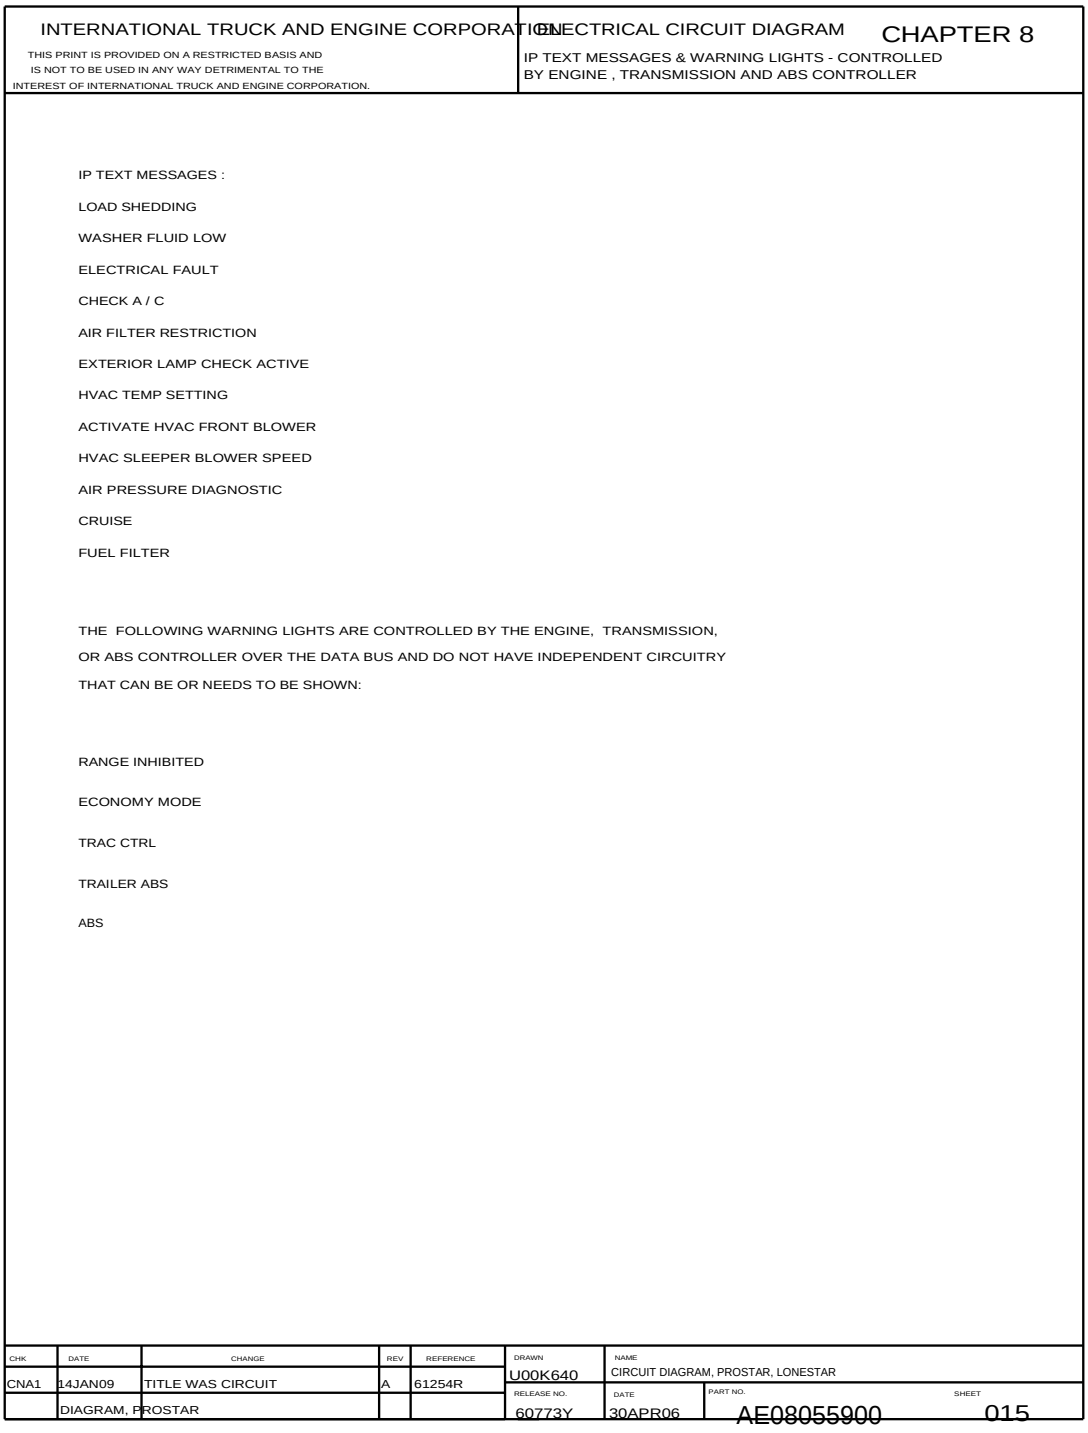


Figure 132 IP Text Messages and Warning Lights — Controlled by Engine, Transmission and ABS Controller

https://truckmanualshub.com/

8.16. DIFFERENTIAL LOCK AND OPTIONAL INDICATOR, P. 16

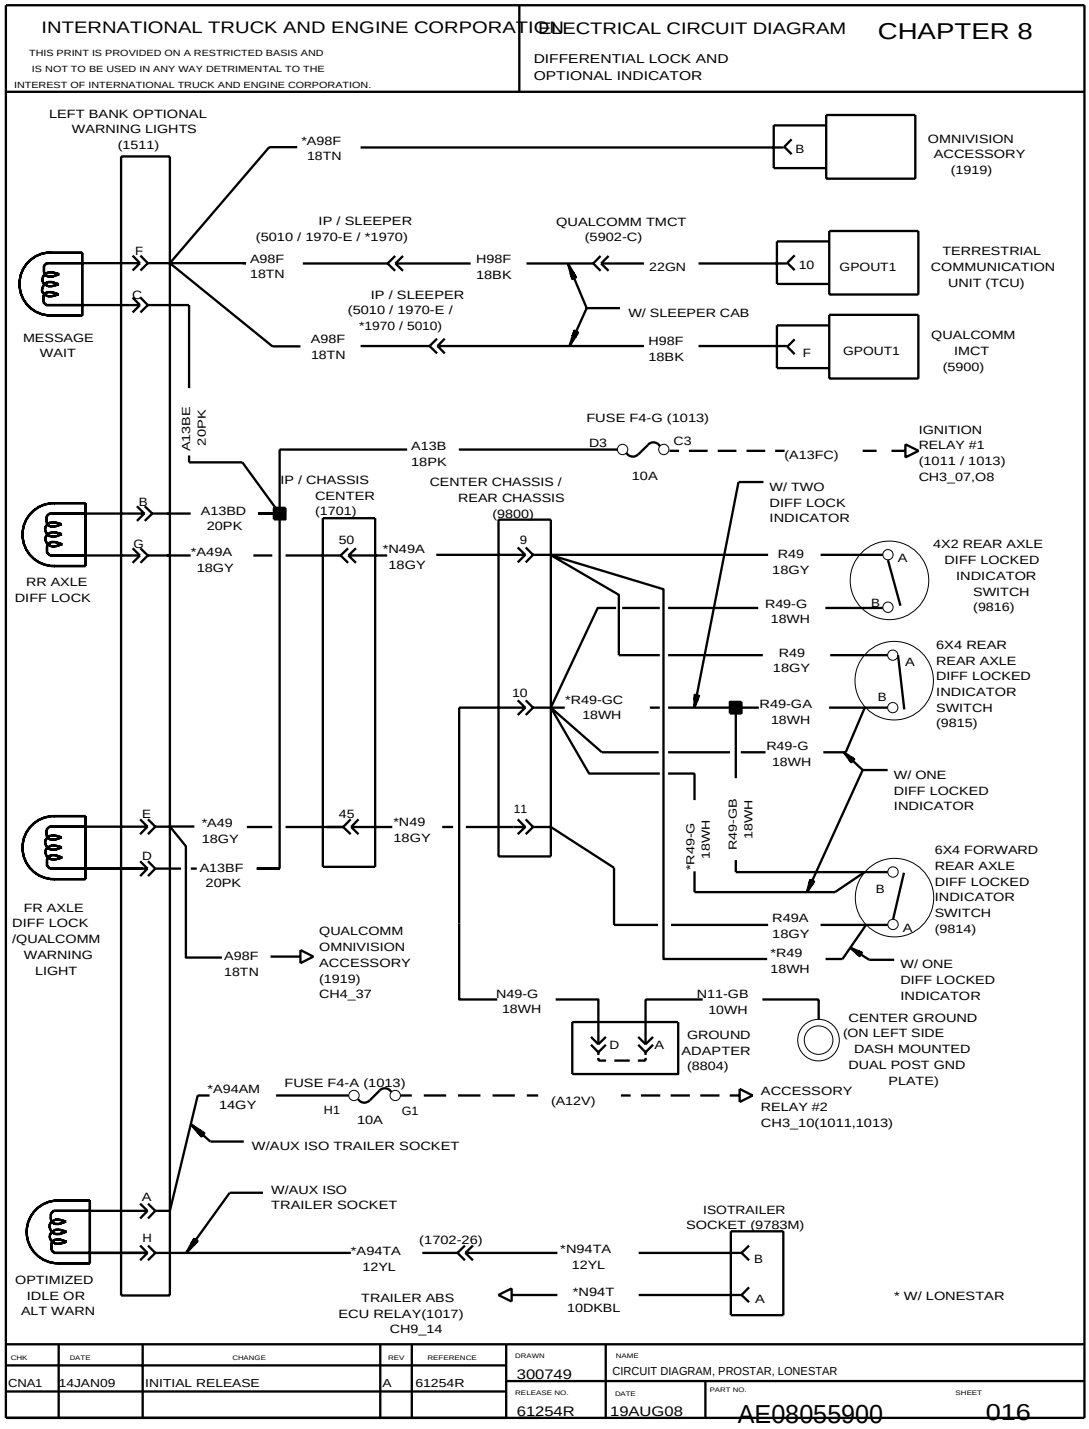


Figure 133 Differential Lock and Optional Indicator

https://truckmanualshub.com/

9. LIGHTING SYSTEM (CHAPTER 9)

9.1. LIGHTS — STOP, TAIL, TURN AND BACK-UP N/FREEDOMLINE, P. 1

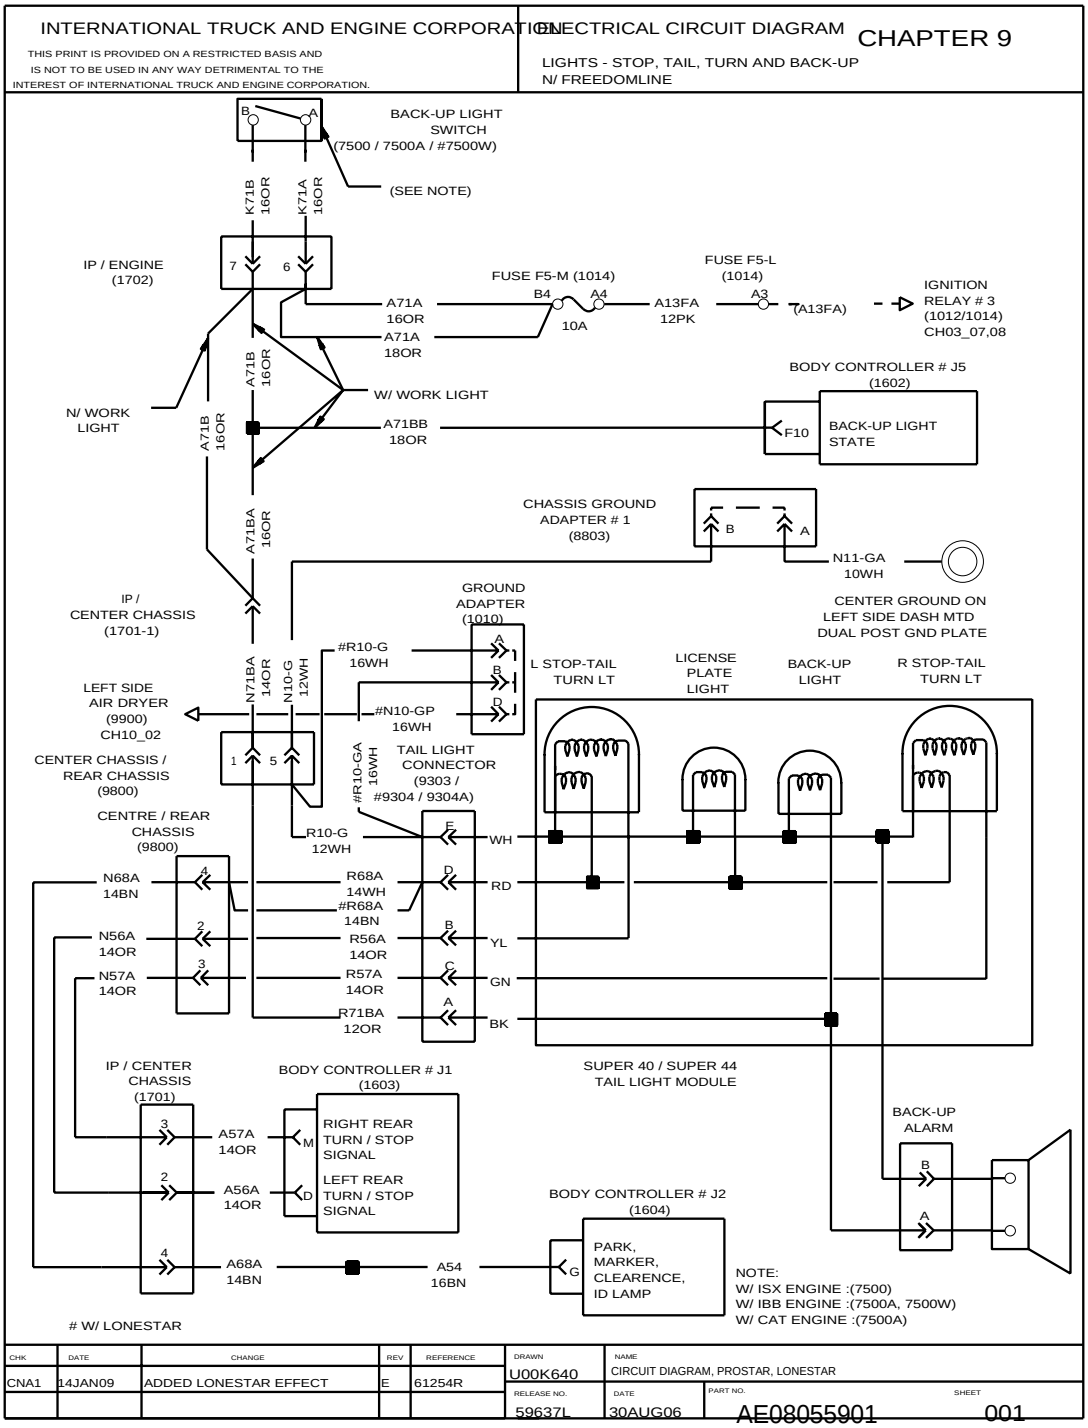


Figure 134 Lights — Stop, Tail, Turn and Back-Up N/Freedomline

https://truckmanualshub.com/

9.2. LIGHTS — STOP, TAIL, TURN AND BACK-UP W/FREEDOMLINE, P. 2

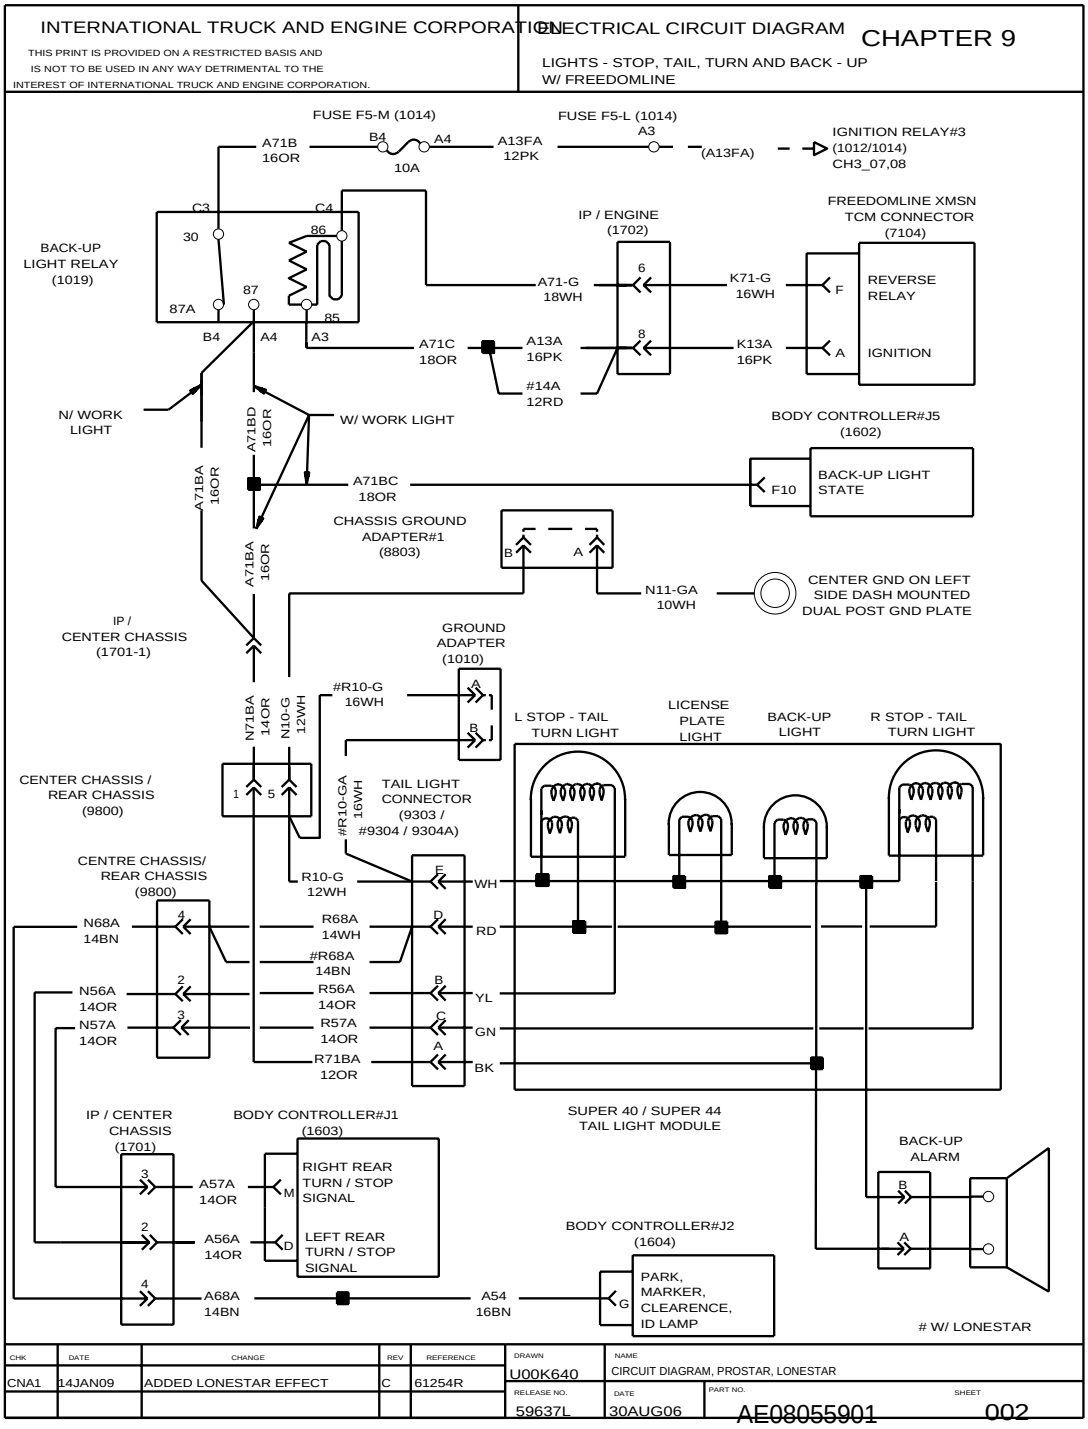


Figure 135 Lights — Stop, Tail, Turn and Back-Up W/Freedomline

https://truckmanualshub.com/

9.3. DOME/MAP AND COURTESY LIGHTS — DAY CAB, P. 3

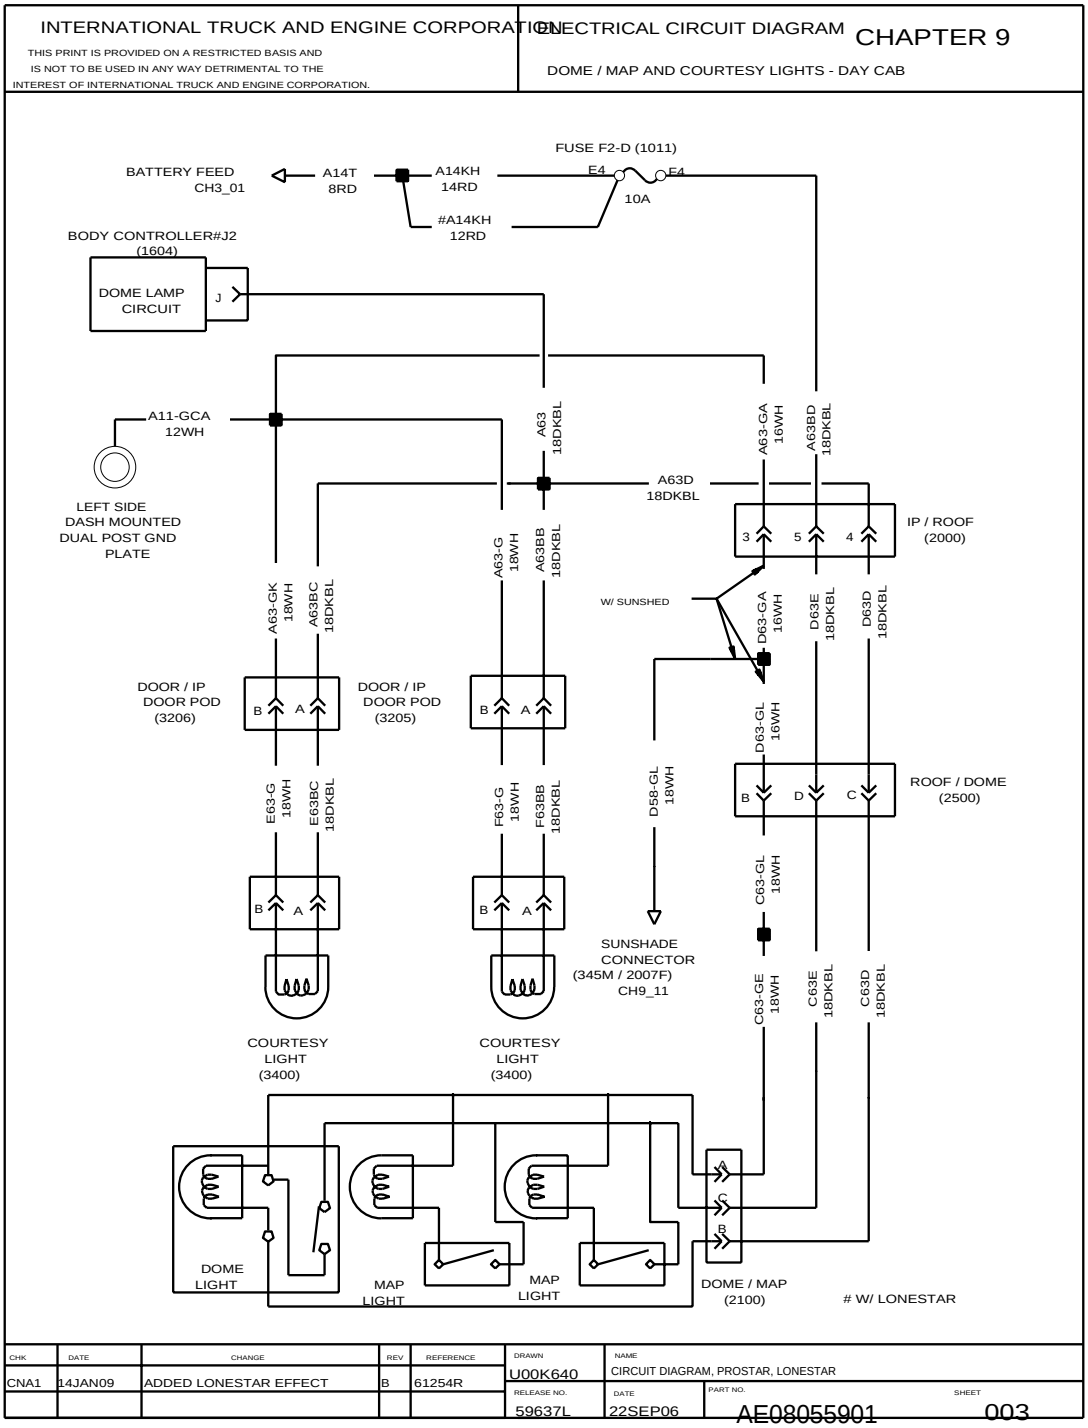


Figure 136 Dome/Map and Courtesy Lights — Day Cab

https://truckmanualshub.com/

9.4. DOME/MAP AND COURTESY LIGHTS — SLEEPER, P. 4

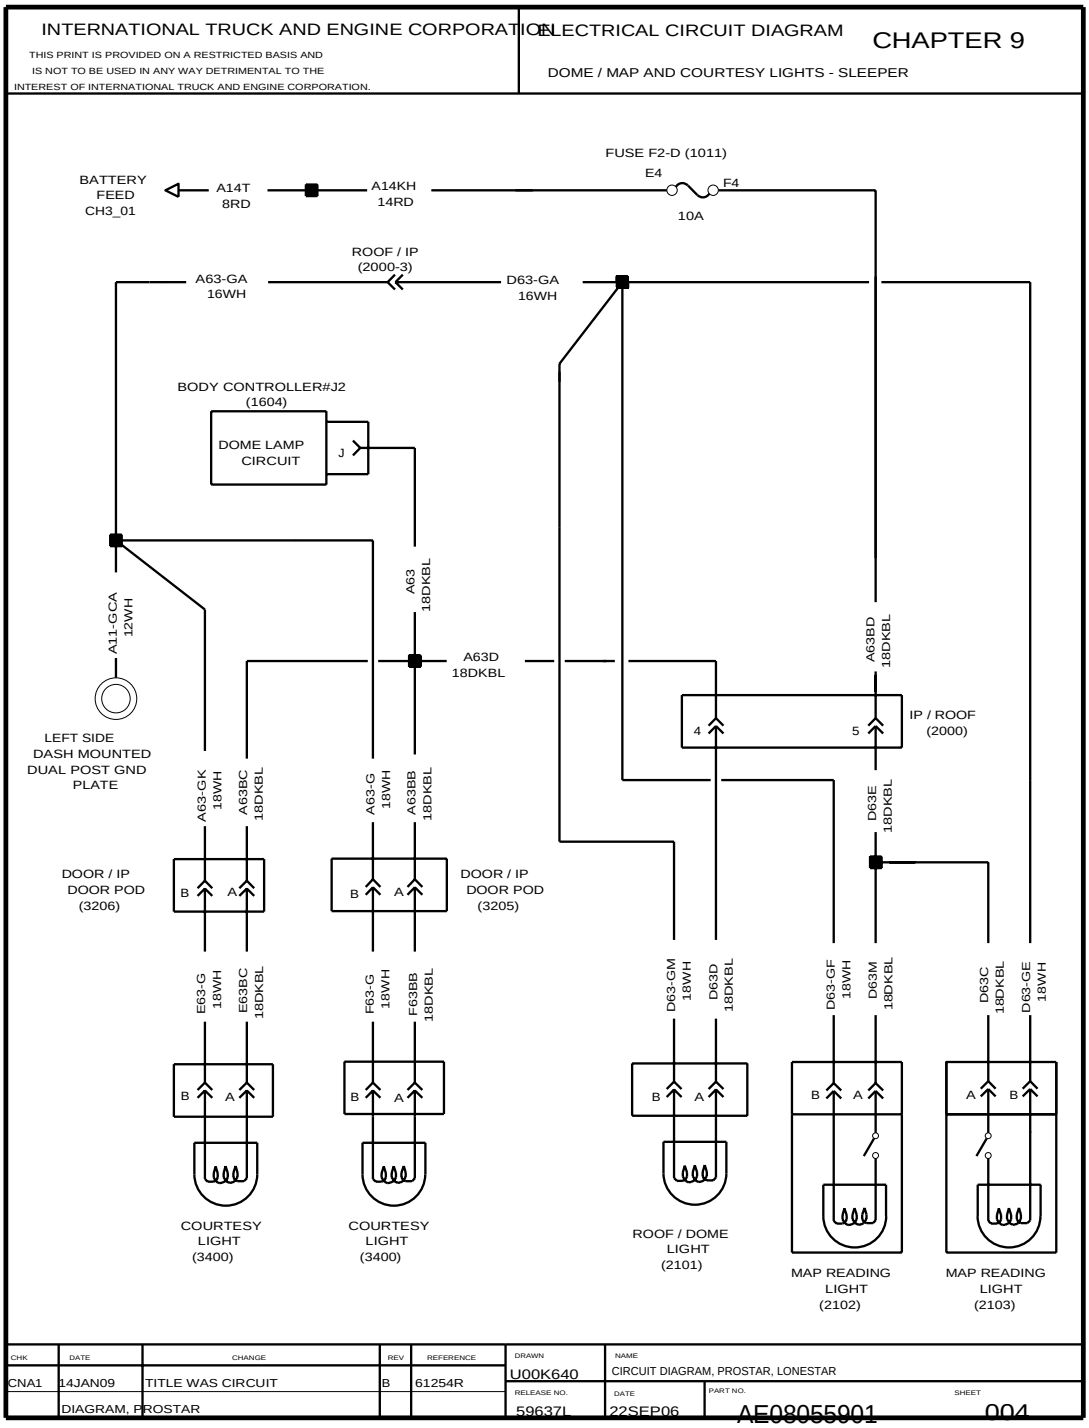


Figure 137 Dome/Map and Courtesy Lights — Sleeper

https://truckmanualshub.com/

9.5. FOG LIGHTS AND SPOT LIGHT, P. 5

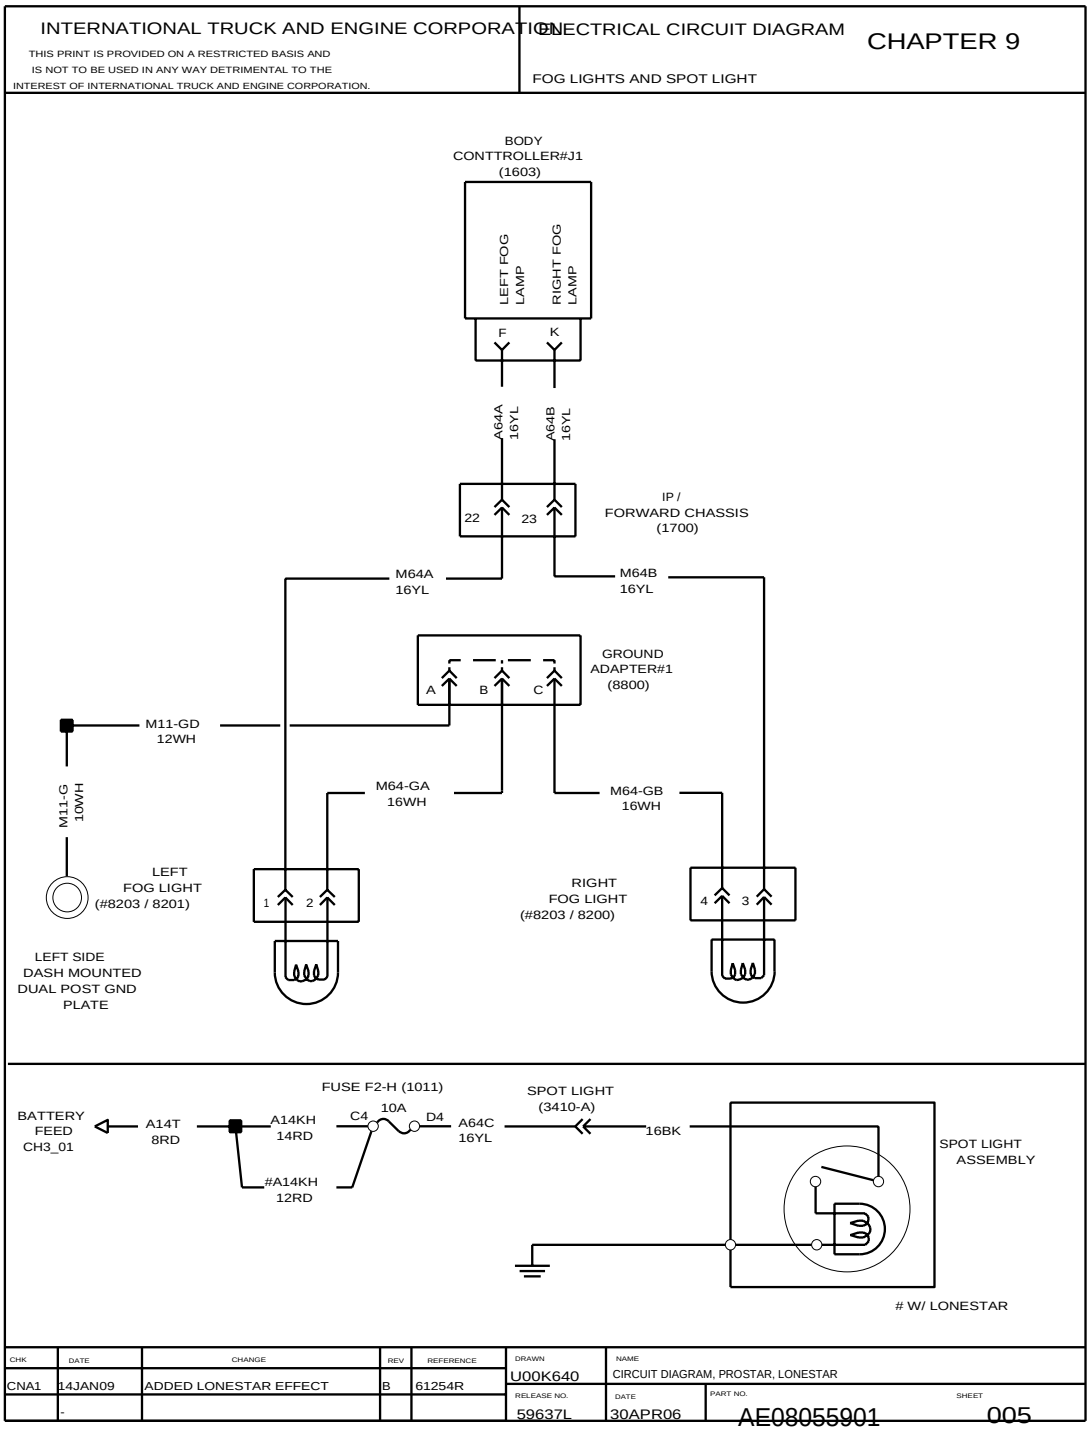


Figure 138 Fog Lights and Spot Light

https://truckmanualshub.com/

9.6. HEADLIGHTS, P. 6

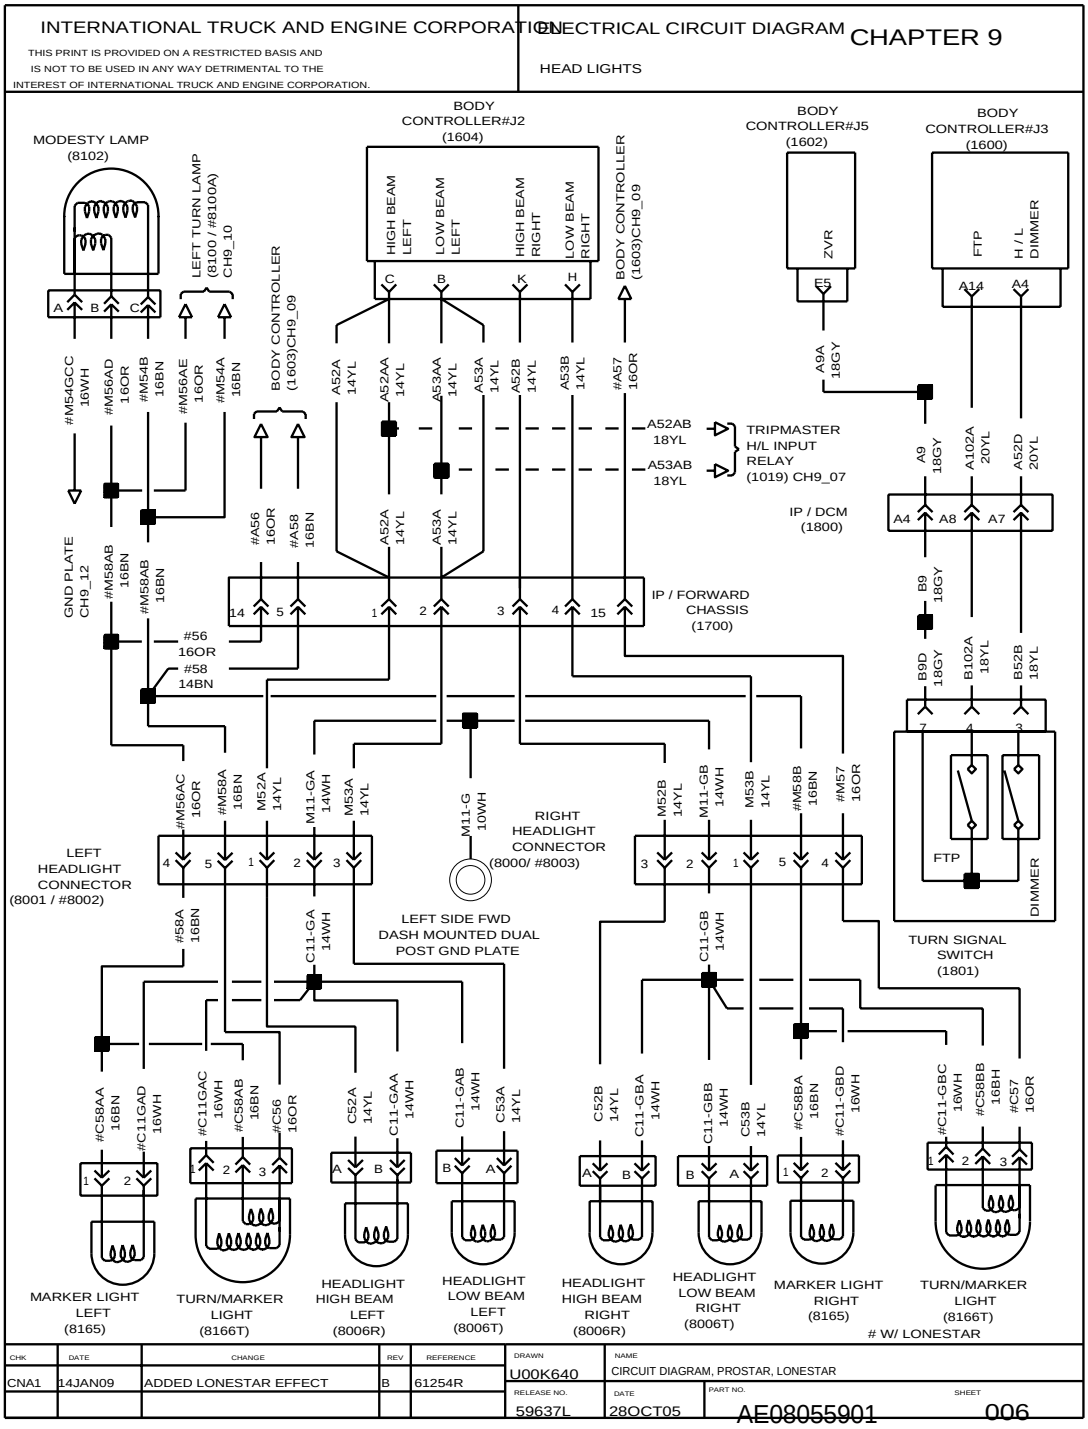


Figure 139 Headlights

https://truckmanualshub.com/

9.7. TRIPMASTER, P. 7

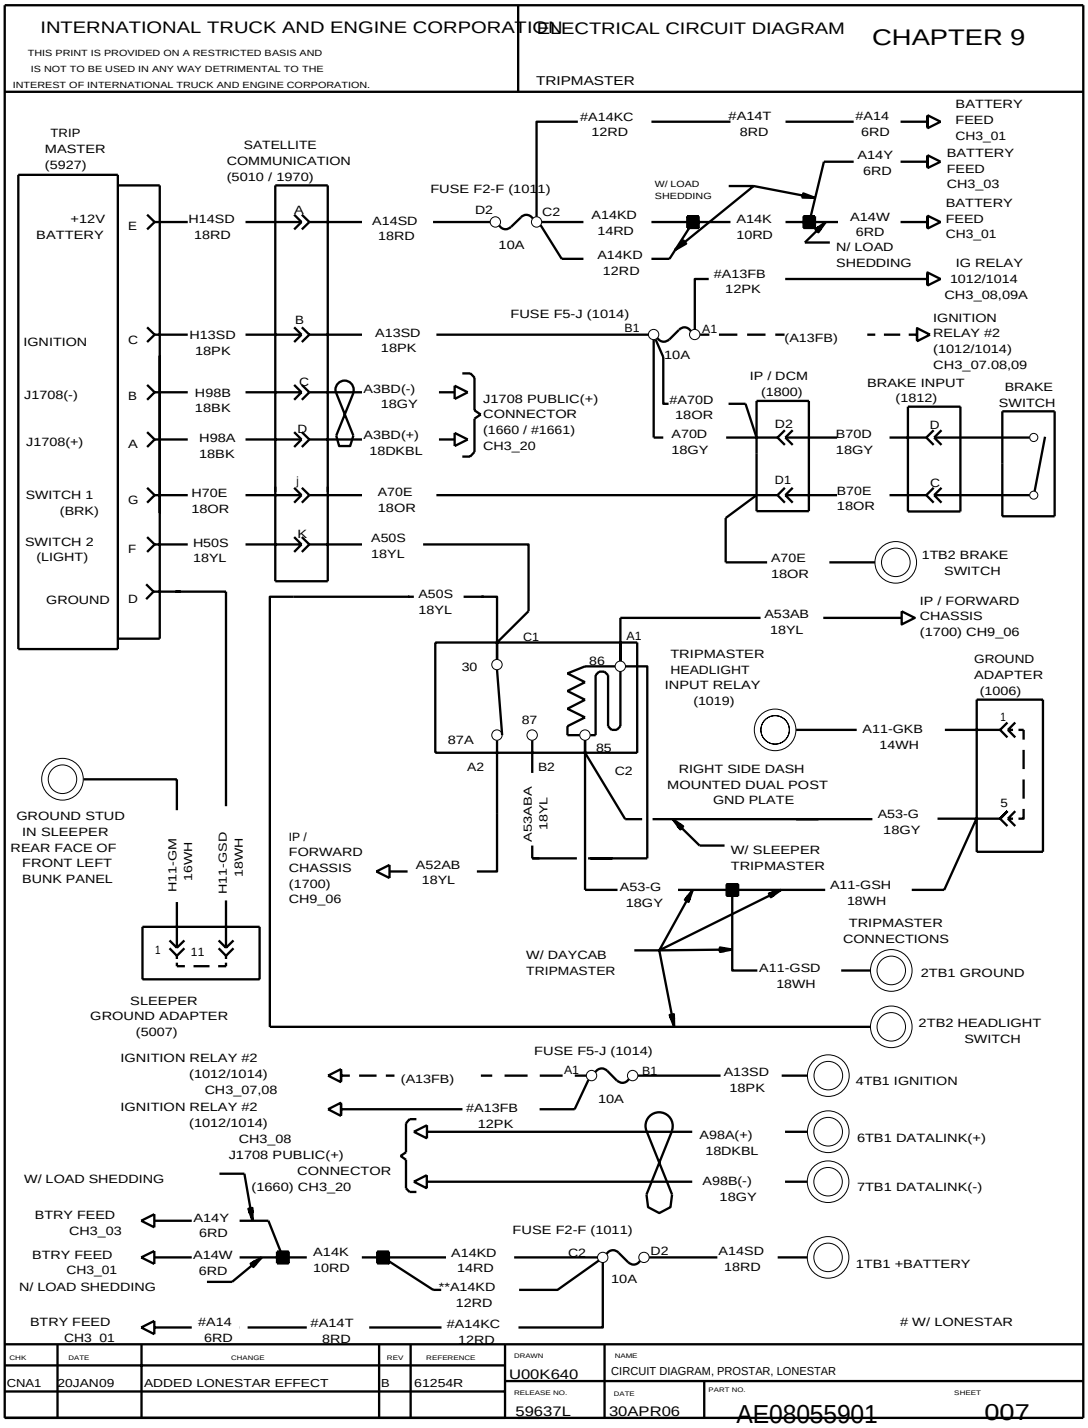


Figure 140 Tripmaster

https://truckmanualshub.com/

9.8. TURN AND STOP SWITCH, P. 8

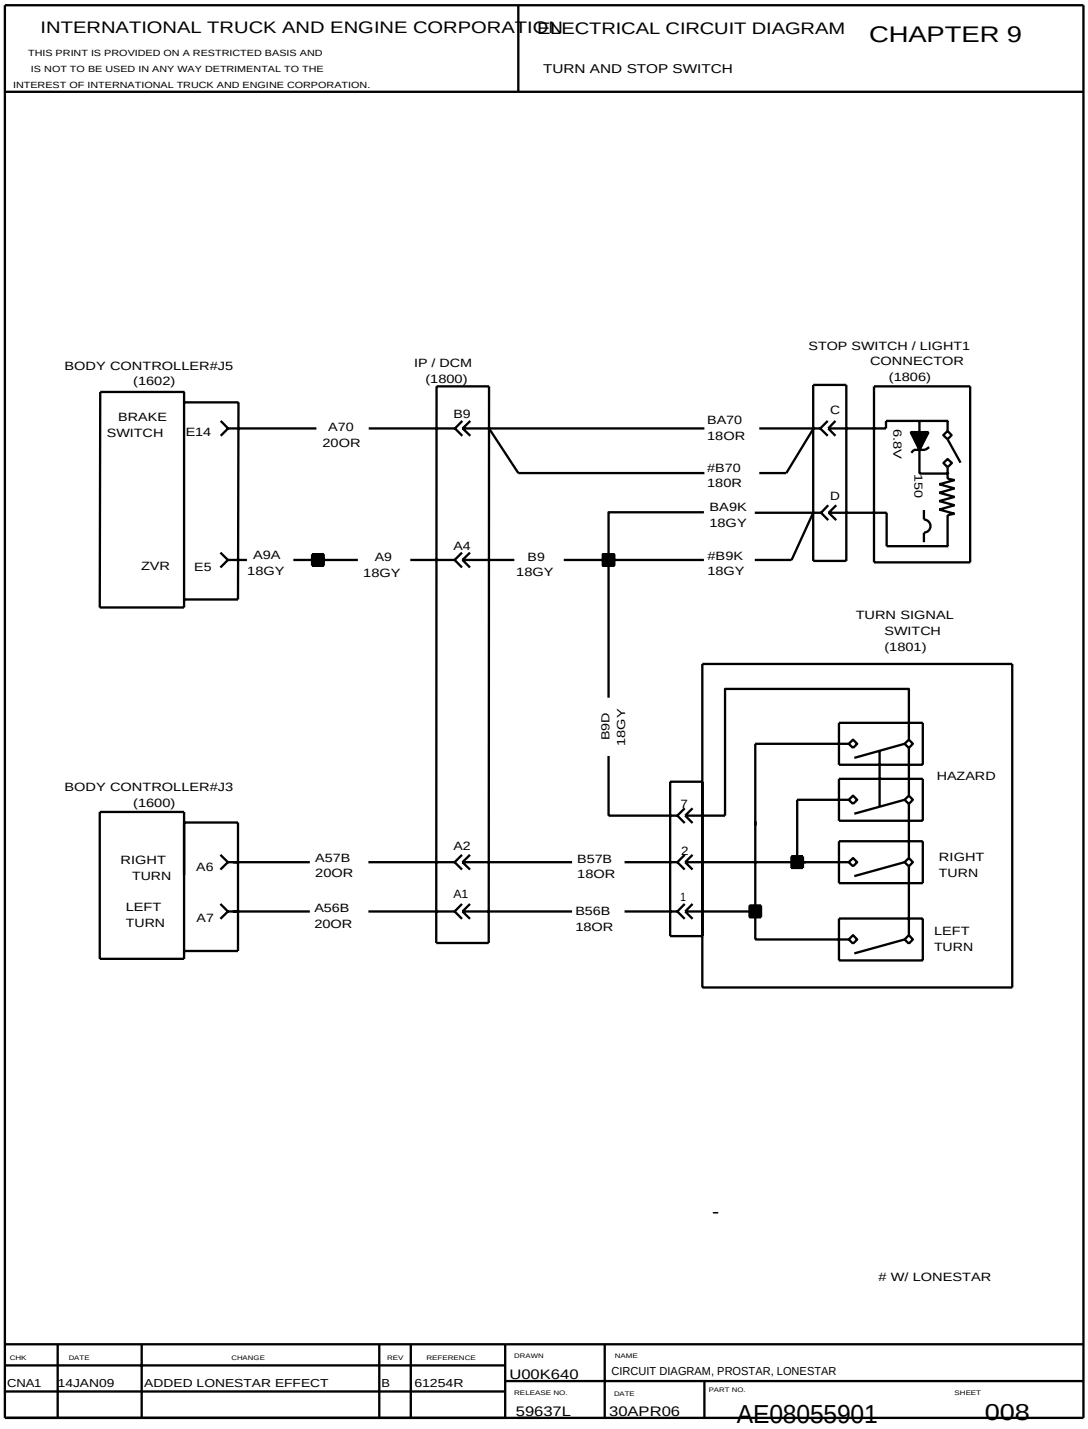


Figure 141 Turn and Stop Switch

https://truckmanualshub.com/

9.9. LIGHT SYSTEM — PARK, MARKER, CLEARANCE, ID, TURN, STOP, TAIL, P. 9

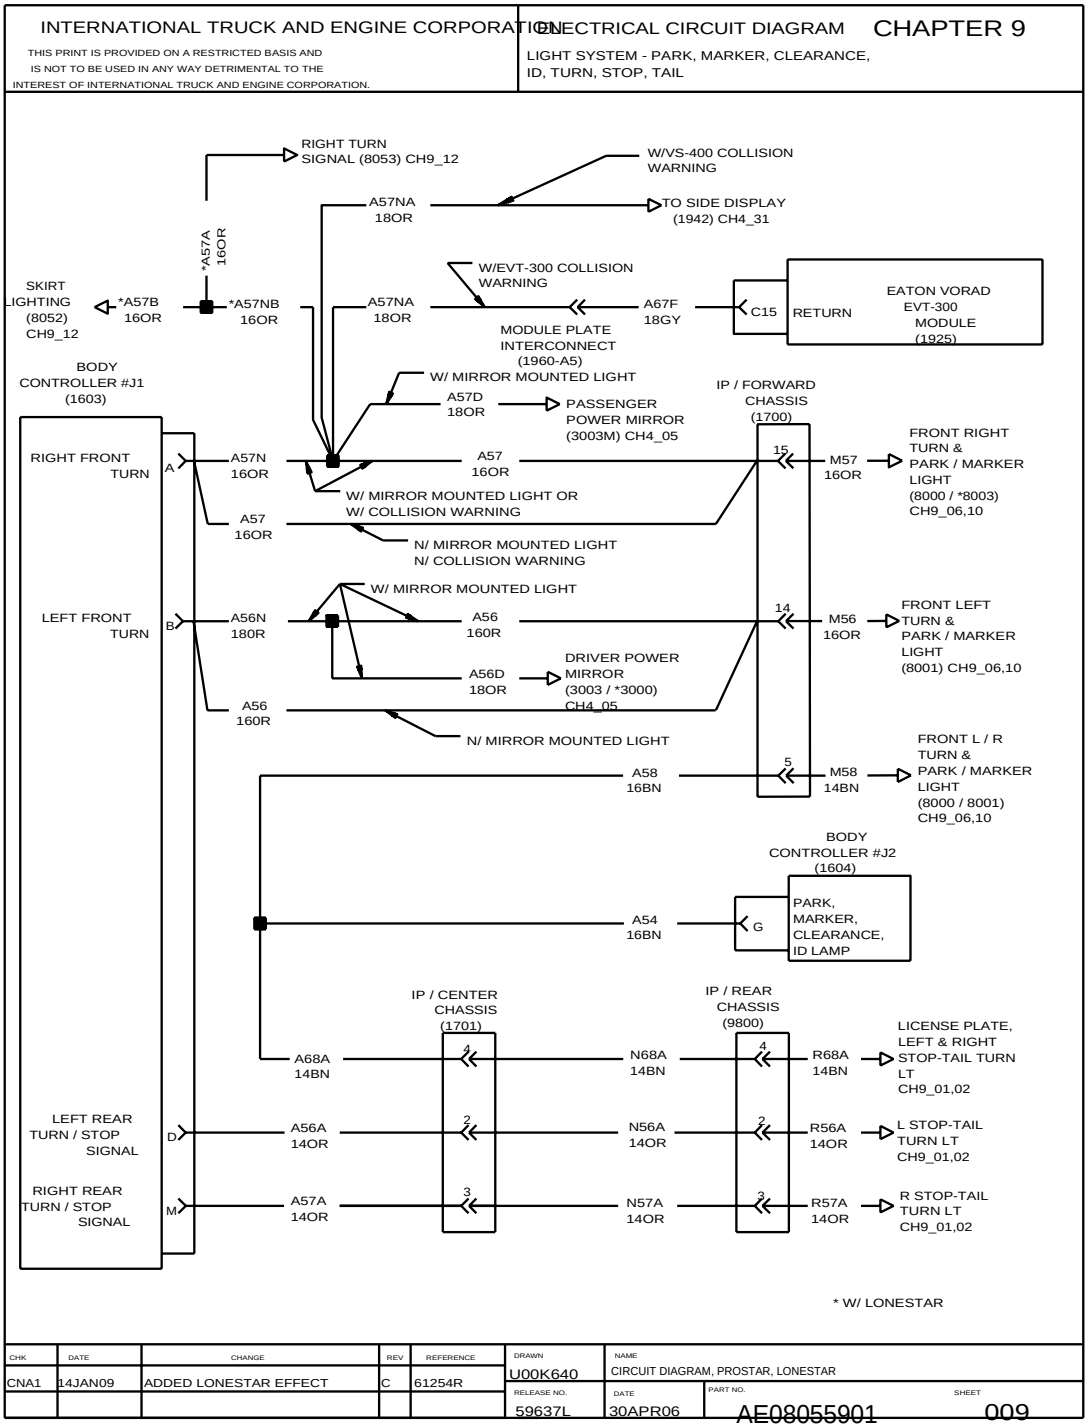


Figure 142 Light System — Park, Marker, Clearance, ID, Turn, Stop, Tail

https://truckmanualshub.com/

9.10. LIGHT SYSTEM — PARK, MARKER, FRONT TURN AND MODESTY PANEL LIGHT, P. 10

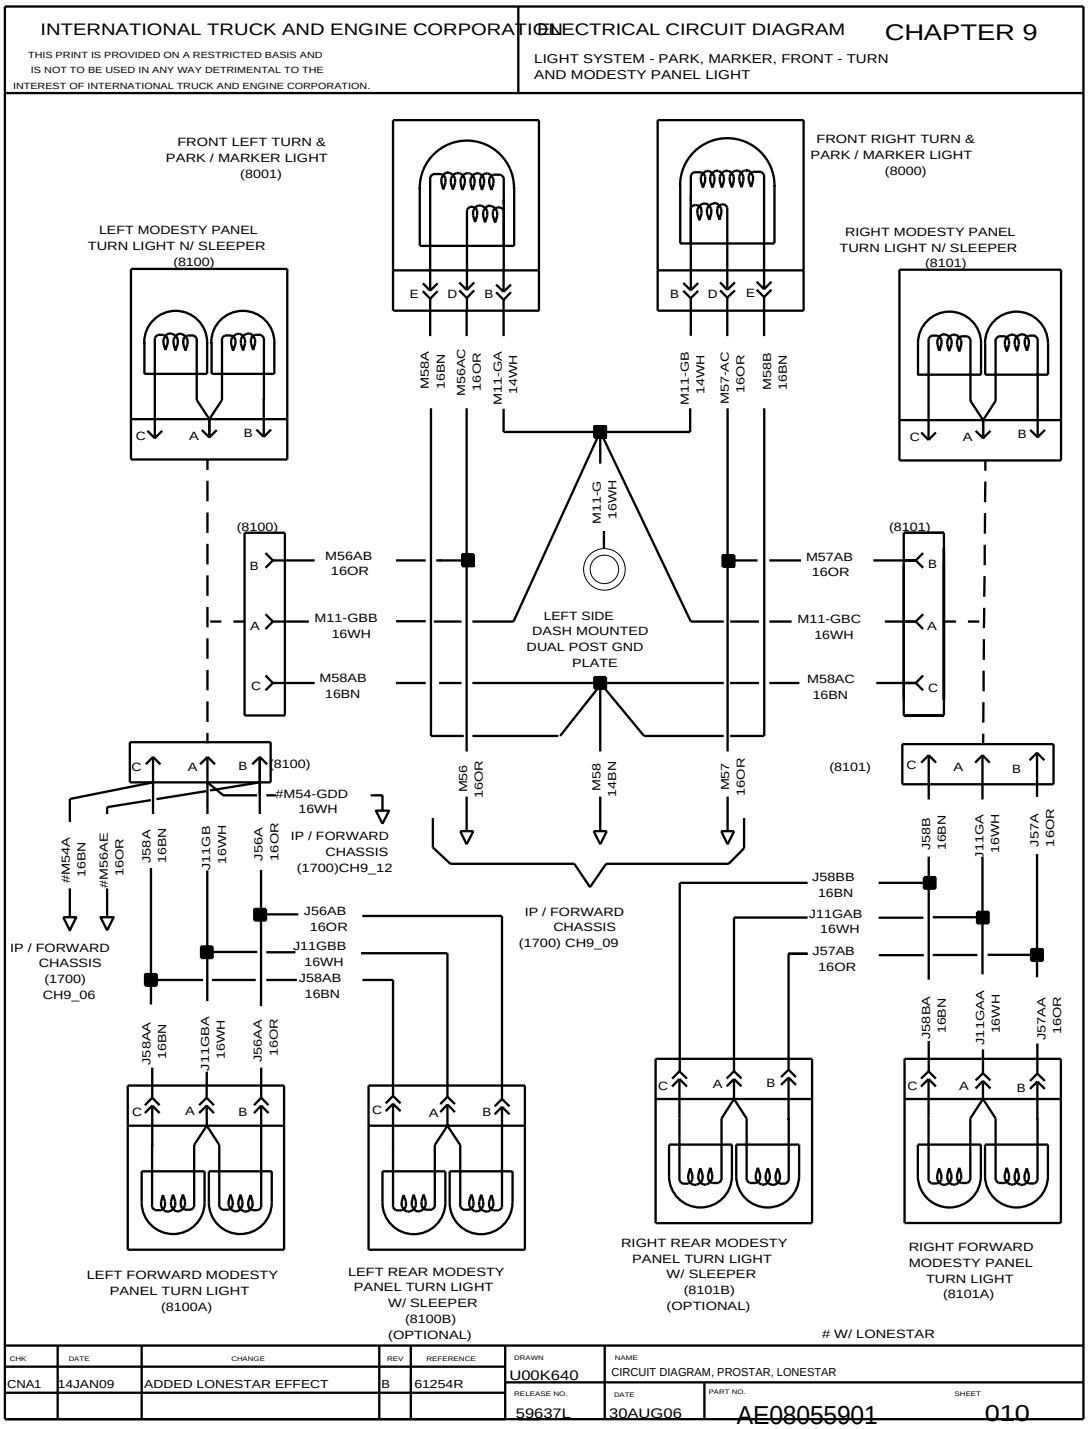


Figure 143 Light System — Park, Marker, Front Turn and Modesty Panel Light

https://truckmanualshub.com/

9.11. LIGHT SYSTEM — CLEARANCE, ID, P. 11

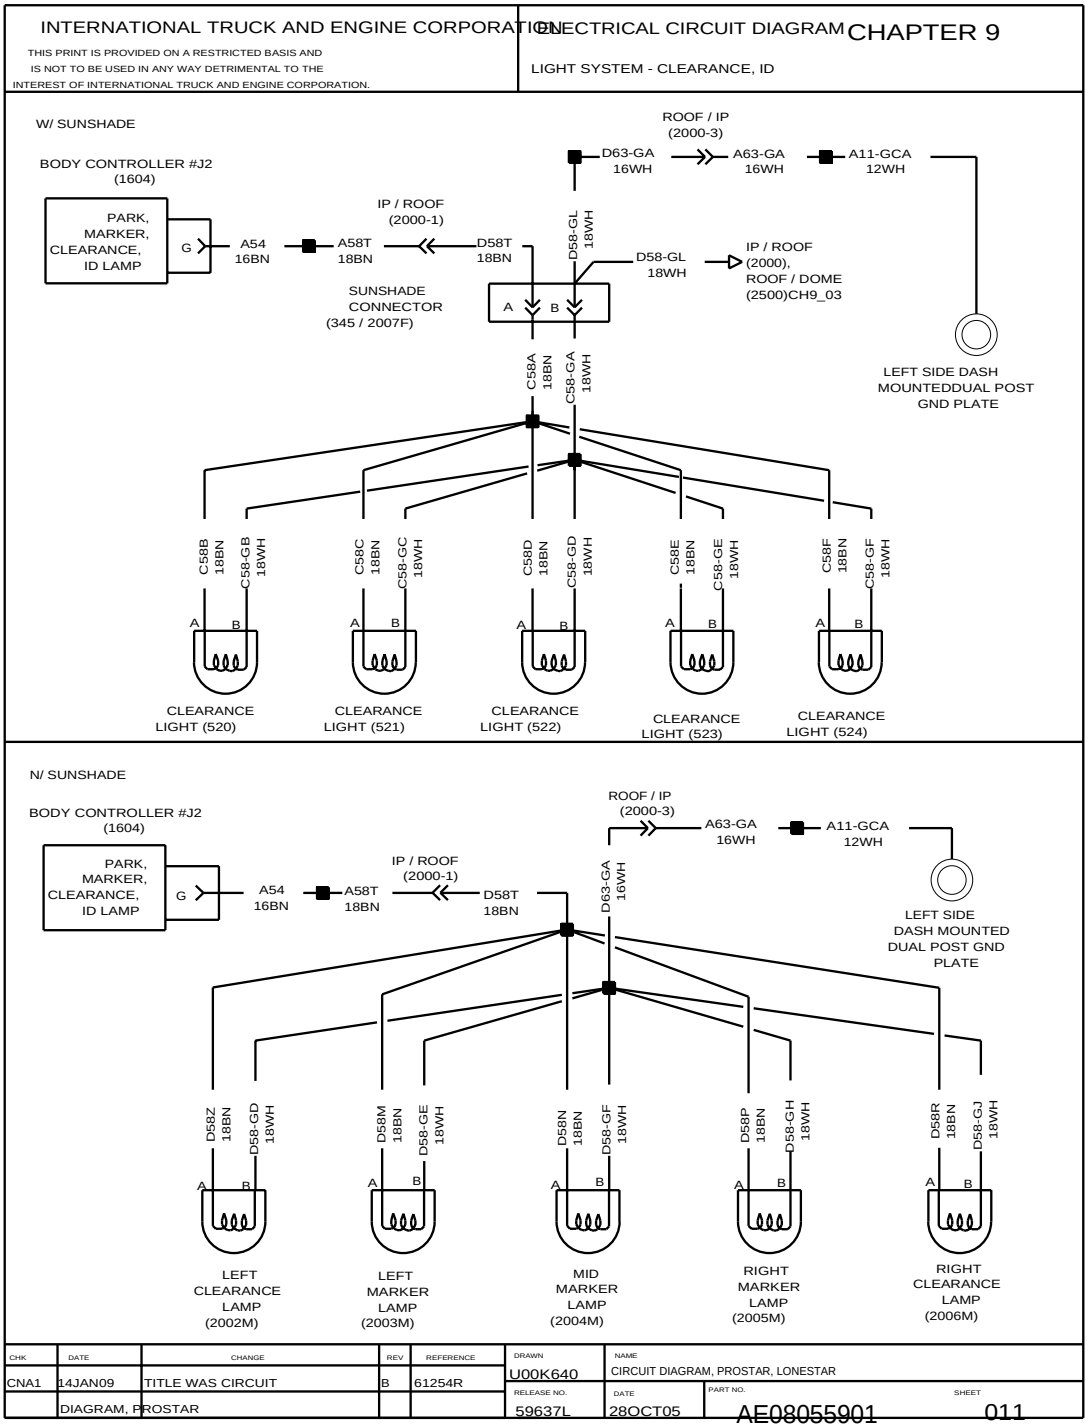


Figure 144 Light System — Clearance, ID

https://truckmanualshub.com/

9.12. LIGHT SYSTEM — SKIRT LIGHT, P. 12

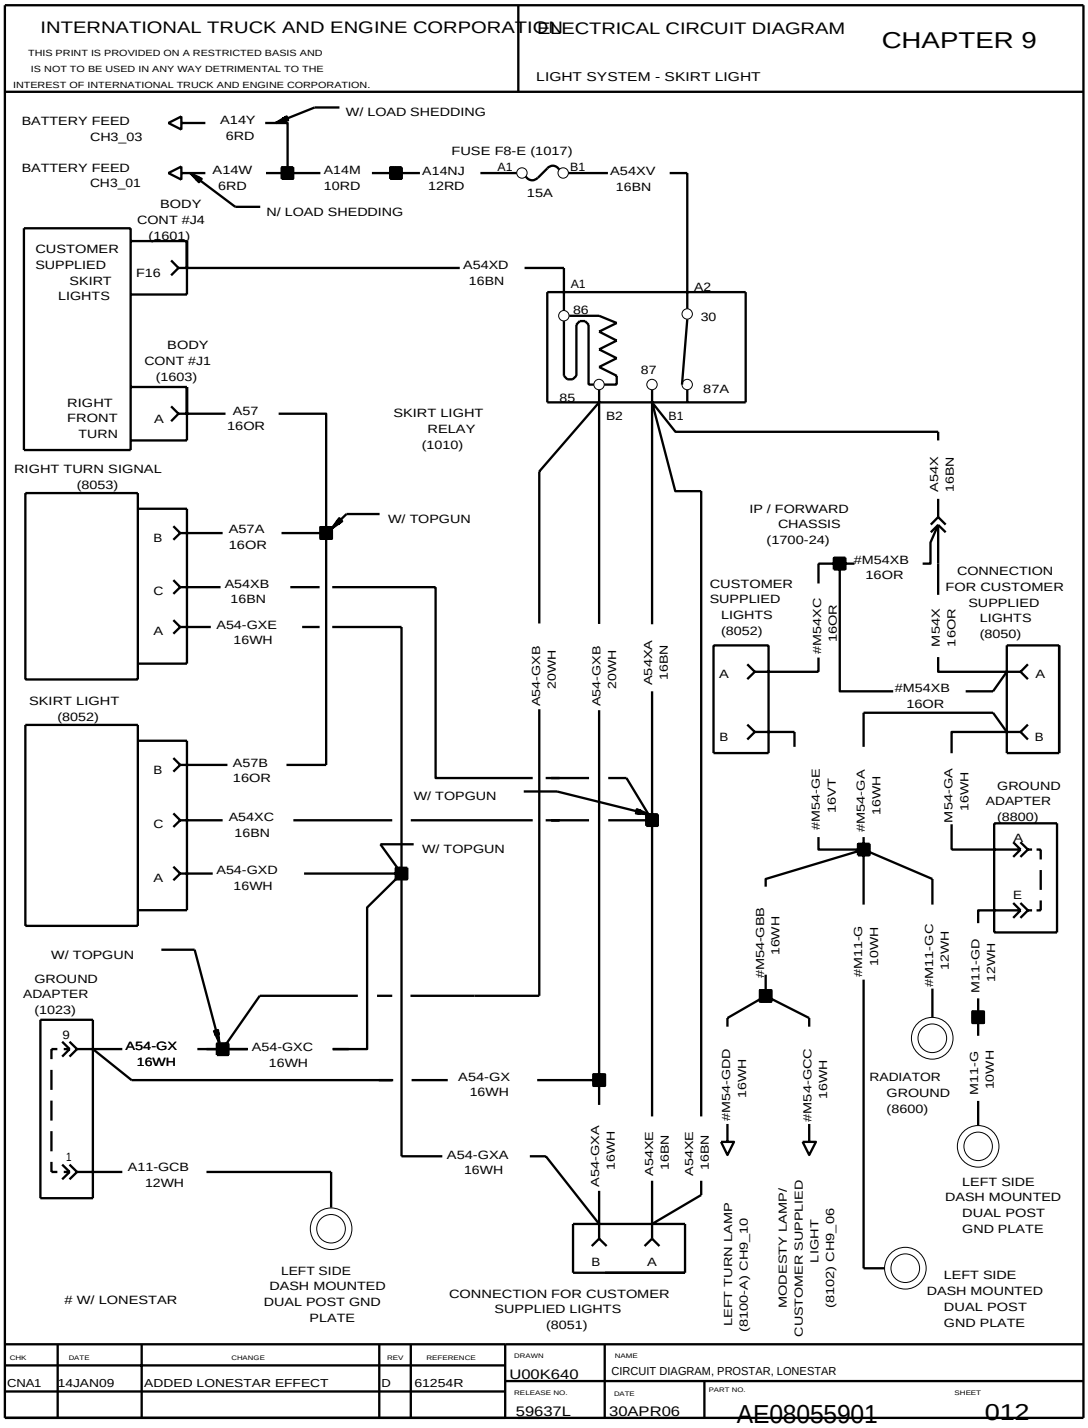


Figure 145 Light System — Skirt Light

https://truckmanualshub.com/

9.13. TRAILER LIGHT SYSTEM — MARKER, STOP, TAIL, TURN, P. 13

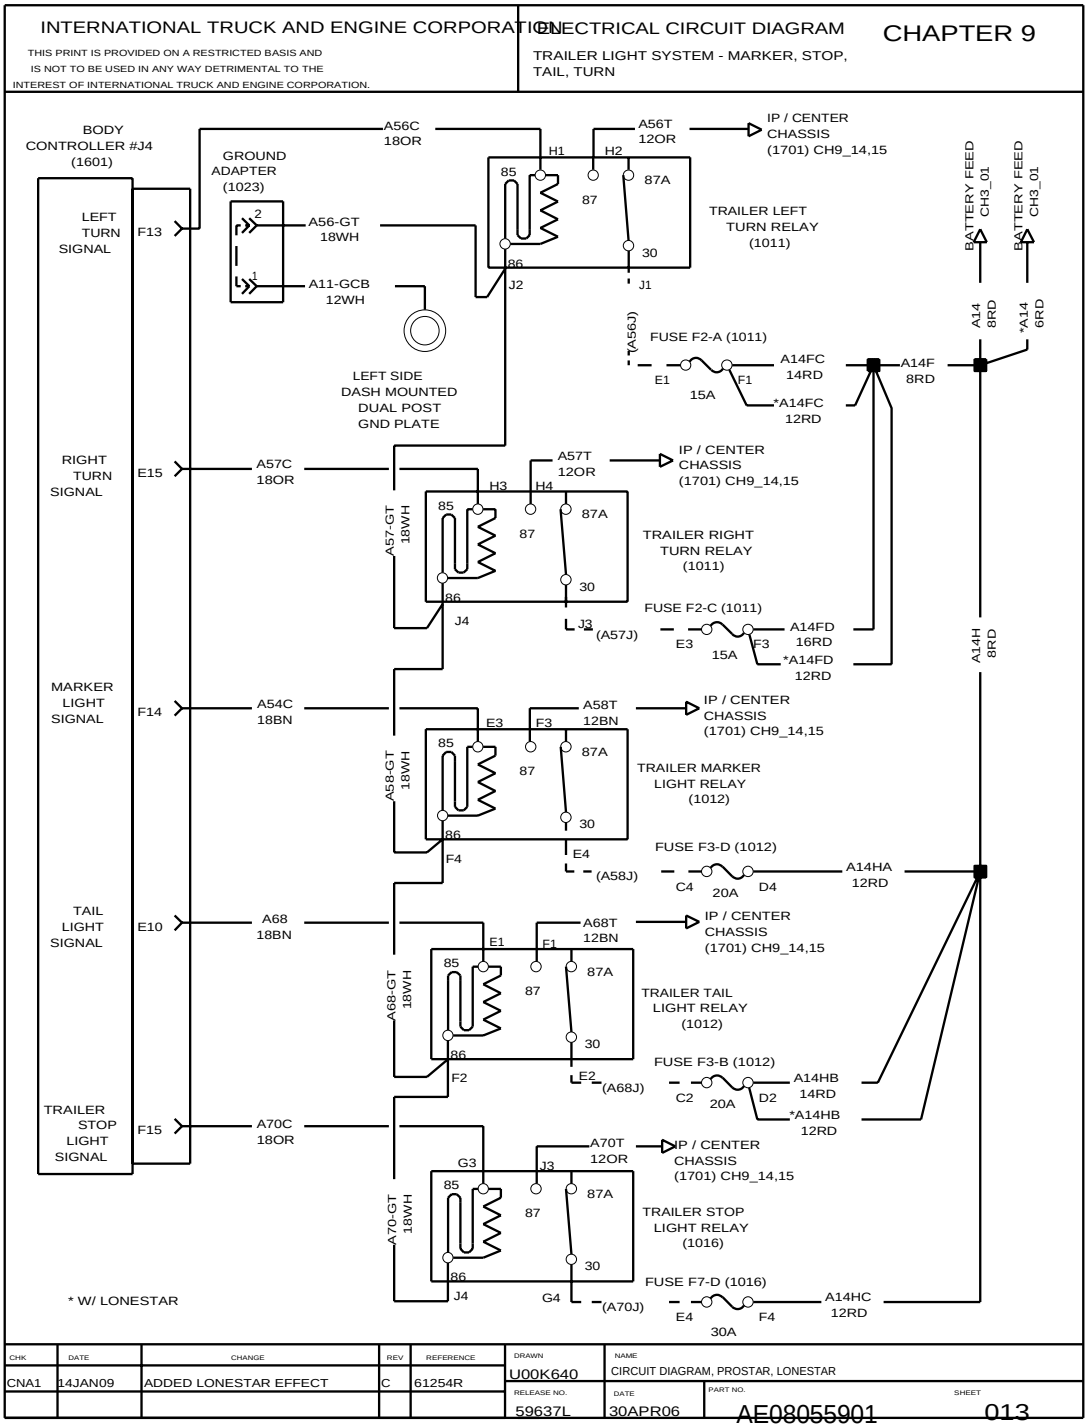


Figure 146 Trailer Light System — Marker, Stop, Tail, Turn

https://truckmanualshub.com/

9.14. TRAILER SOCKET — BOC, P. 14

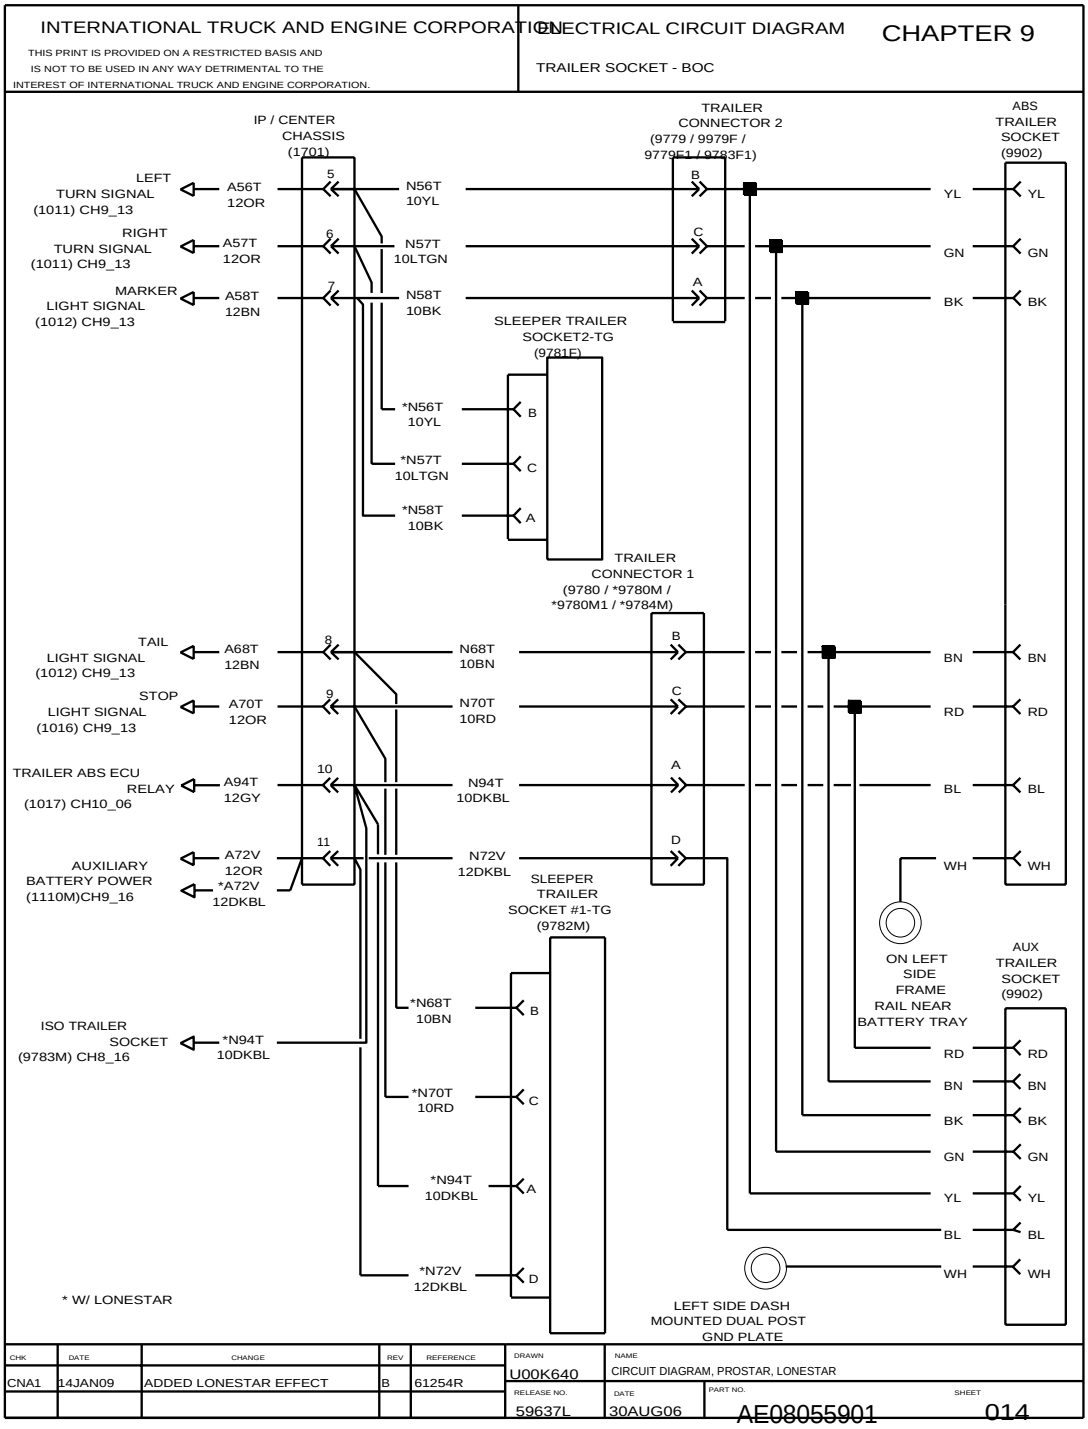


Figure 147 Trailer Socket — BOC

https://truckmanualshub.com/

9.15. TRAILER SOCKET — BOC AND EOF, P. 15

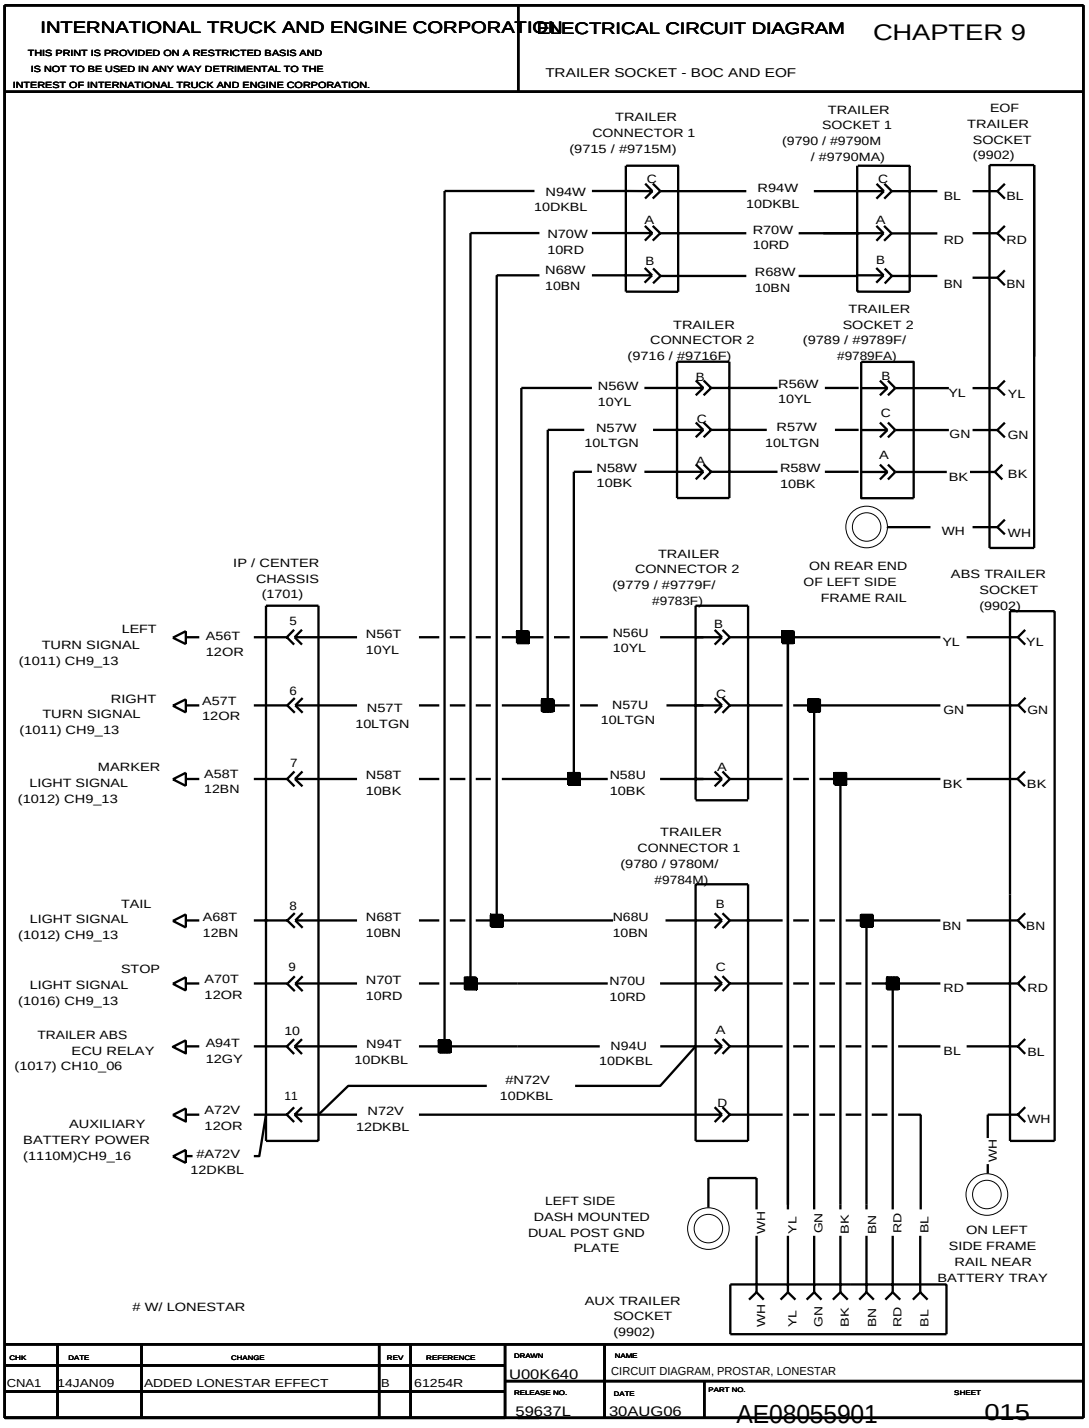


Figure 148 Trailer Socket — BOC and EOF

https://truckmanualshub.com/

9.16. TRAILER SOCKET — AUXILIARY, P. 16

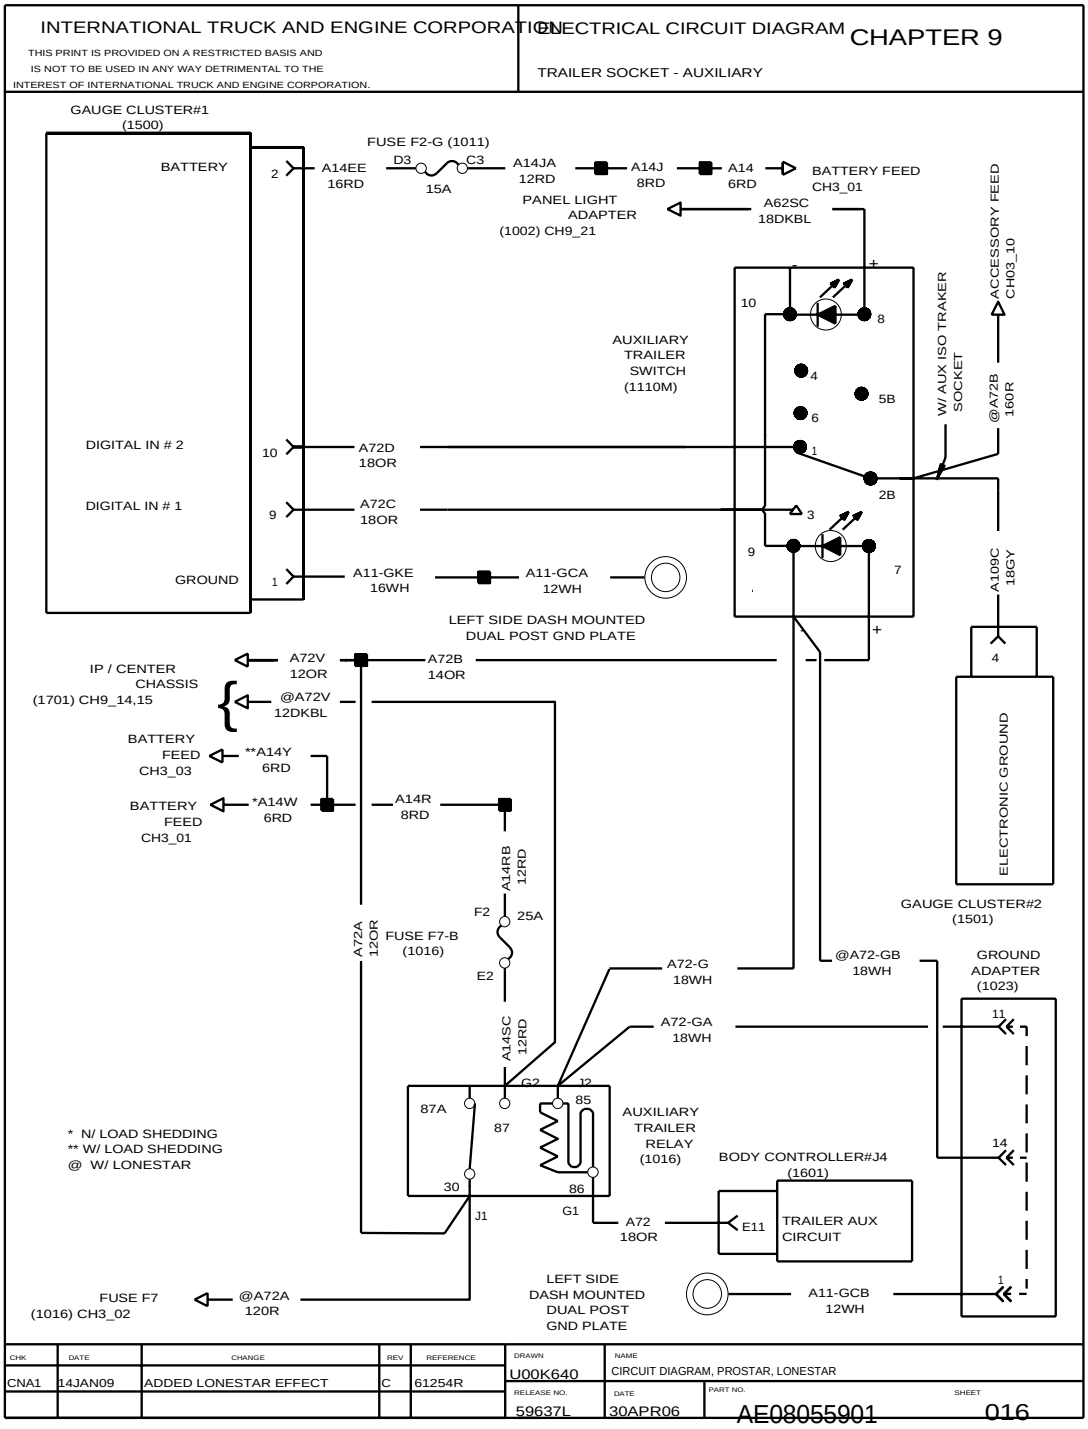


Figure 149 Trailer Socket — Auxiliary

https://truckmanualshub.com/

9.17. FLOOR LIGHT, P. 17

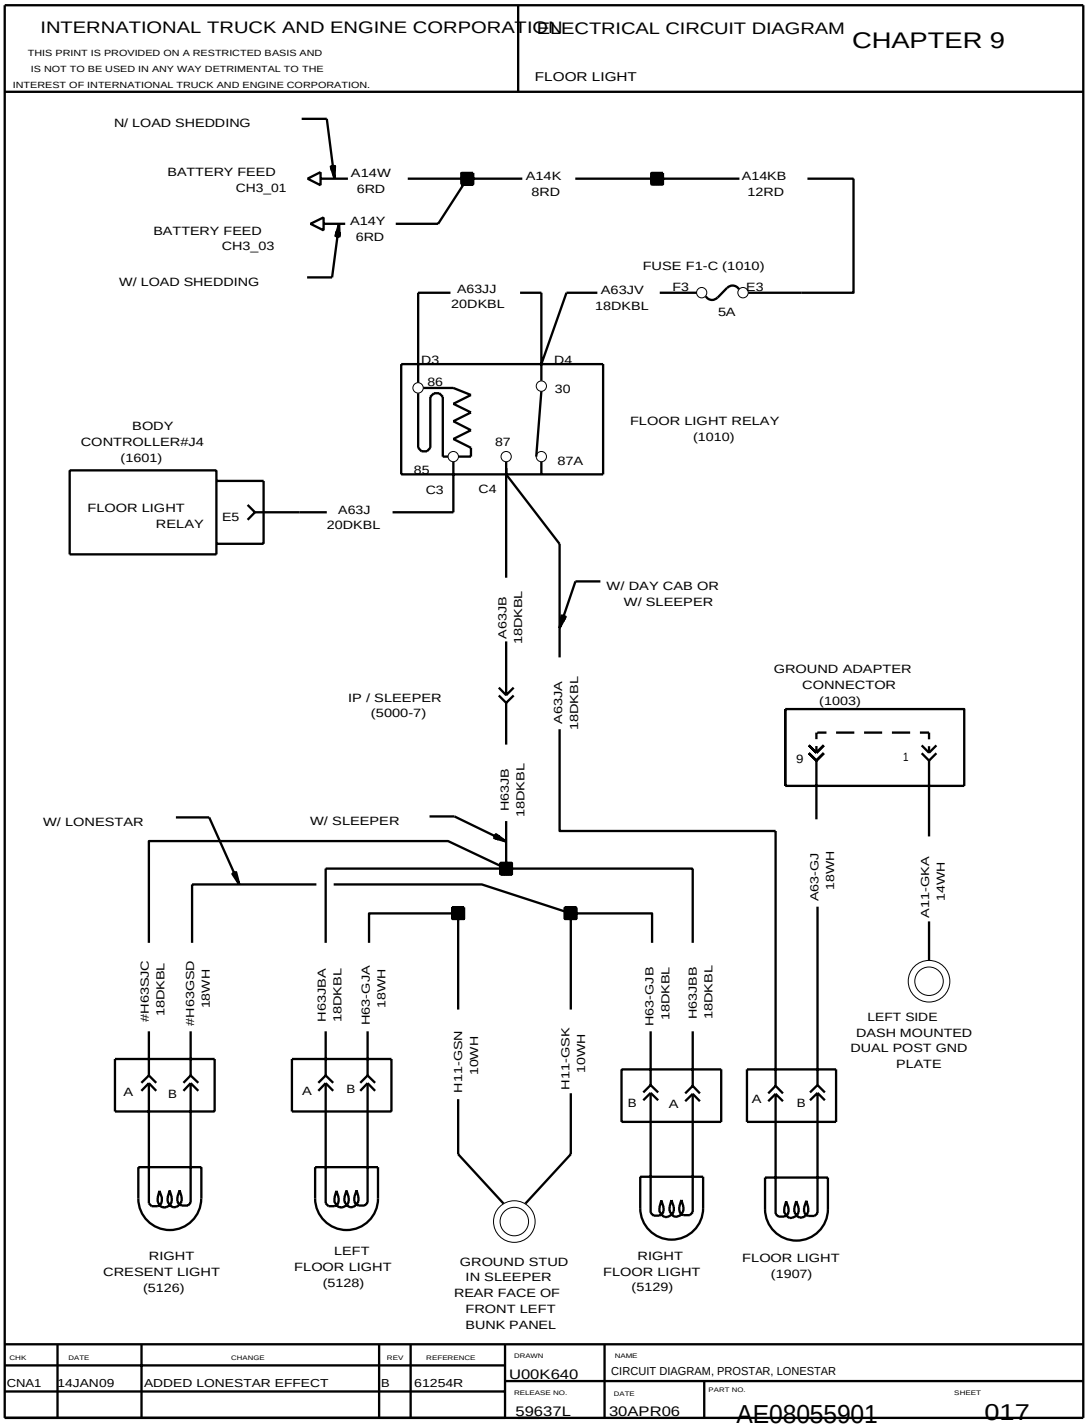


Figure 150 Floor Light

https://truckmanualshub.com/

9.18. DOME AND ACCENT LIGHT — SLEEPER, P. 18

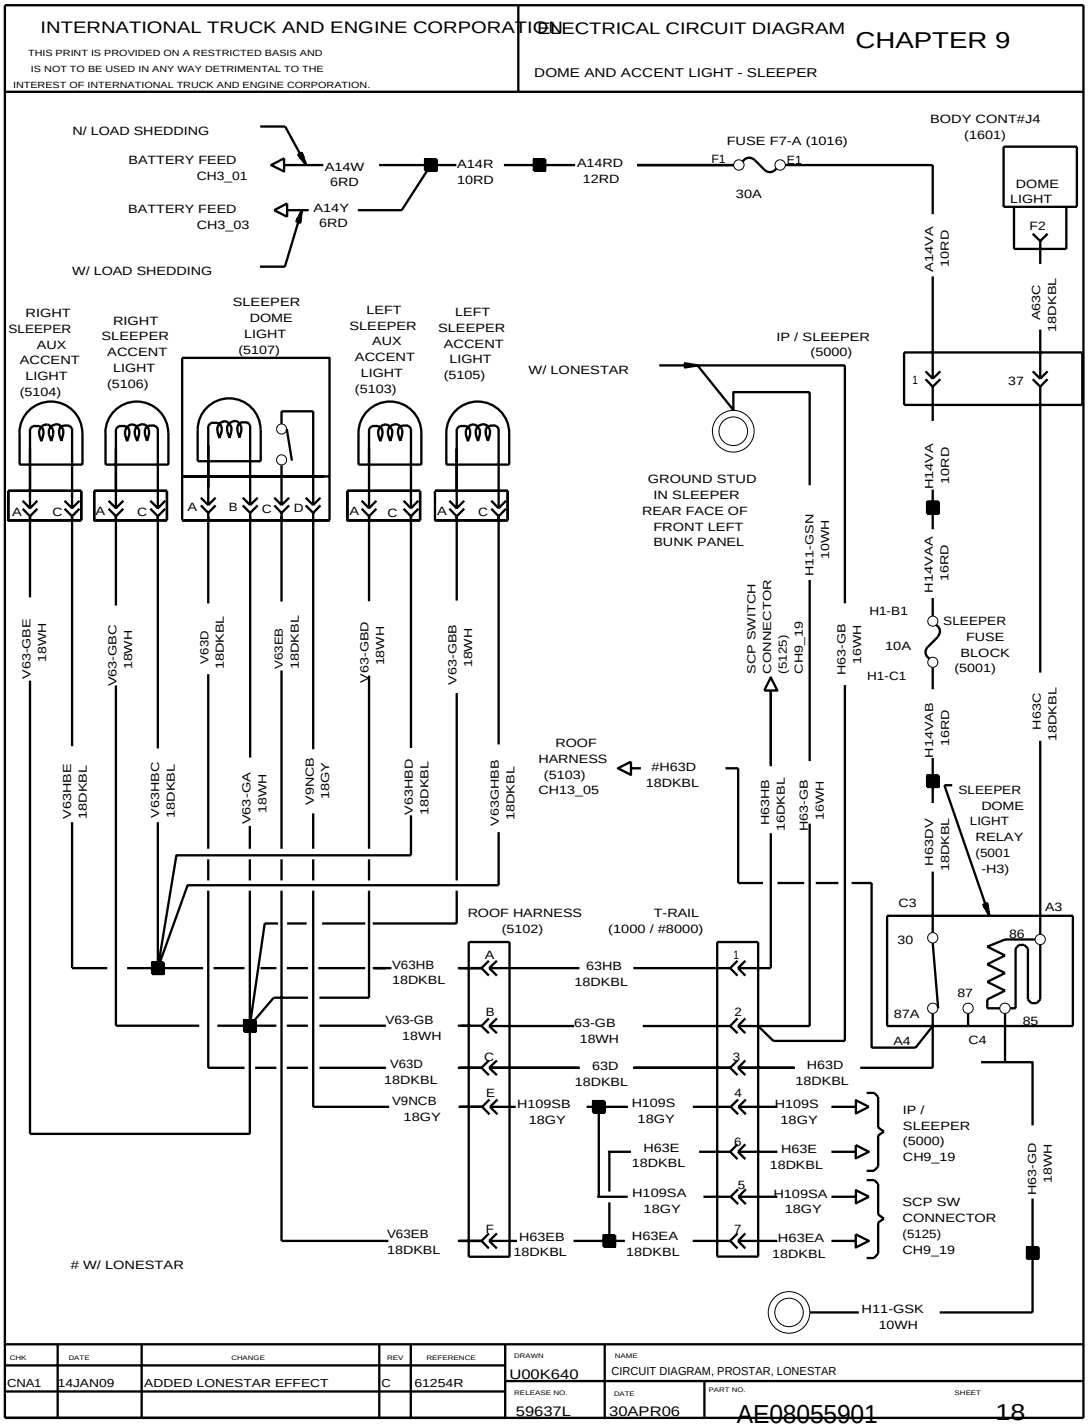


Figure 151 Dome and Accent Light — Sleeper

https://truckmanualshub.com/

9.19. DOME AND ACCENT LIGHT — SLEEPER, P. 19

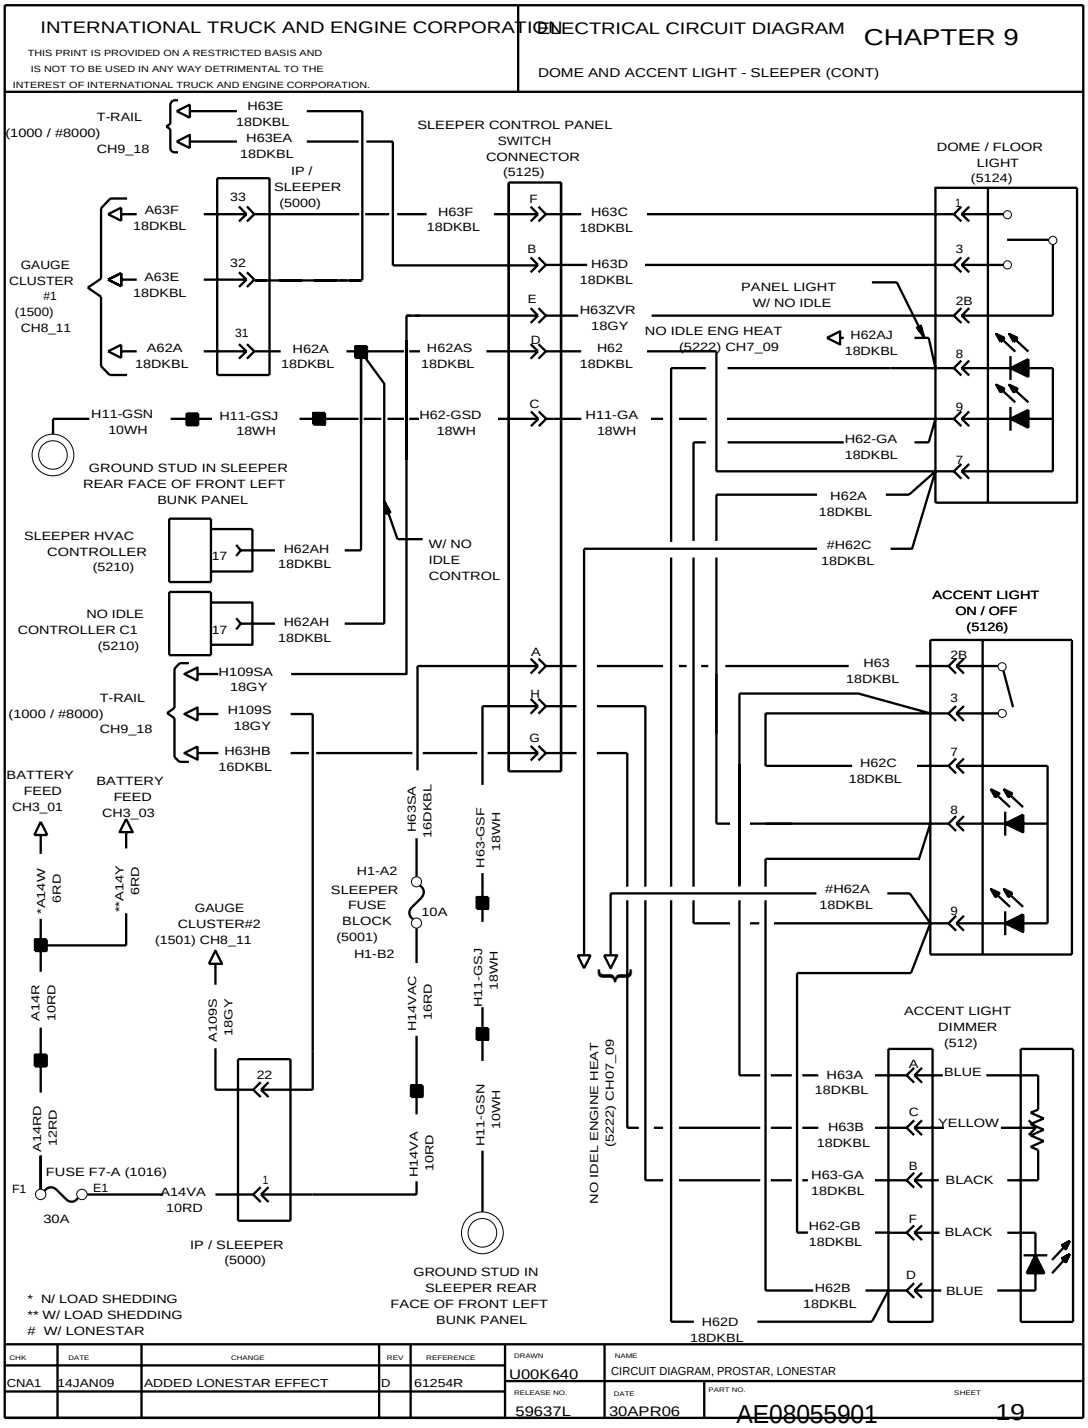


Figure 152 Dome and Accent Light — Sleeper

https://truckmanualshub.com/

9.20. LIGHTED AIR SHIELD, P. 20

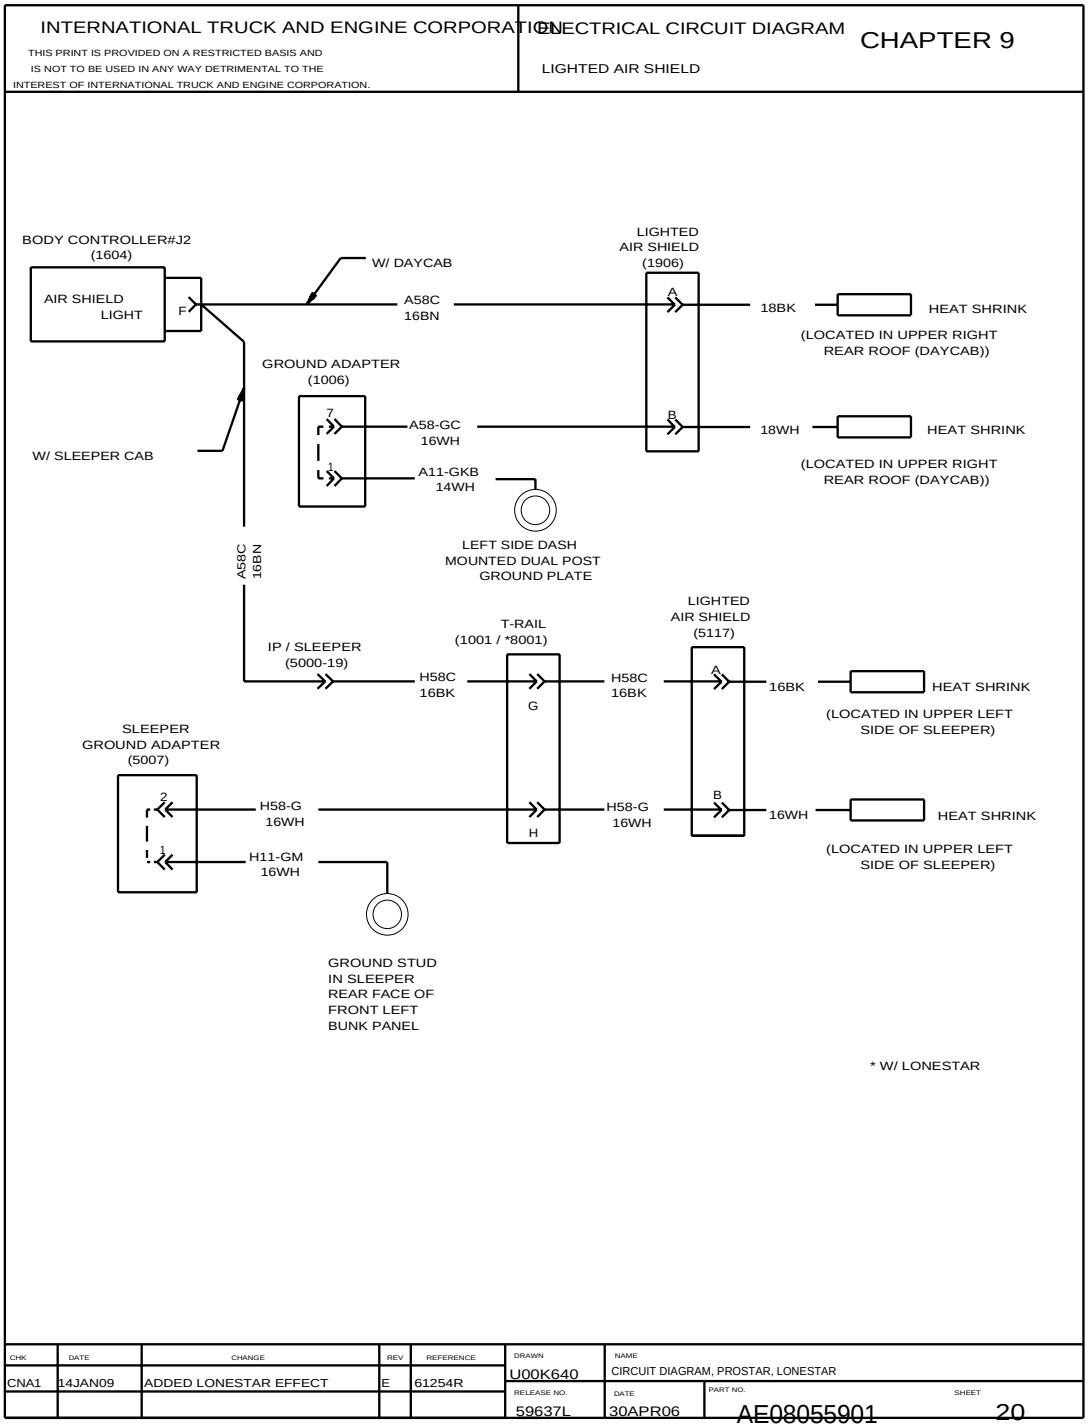


Figure 153 Lighted Air Shield

https://truckmanualshub.com/

9.21. PANEL LIGHTS, P. 21

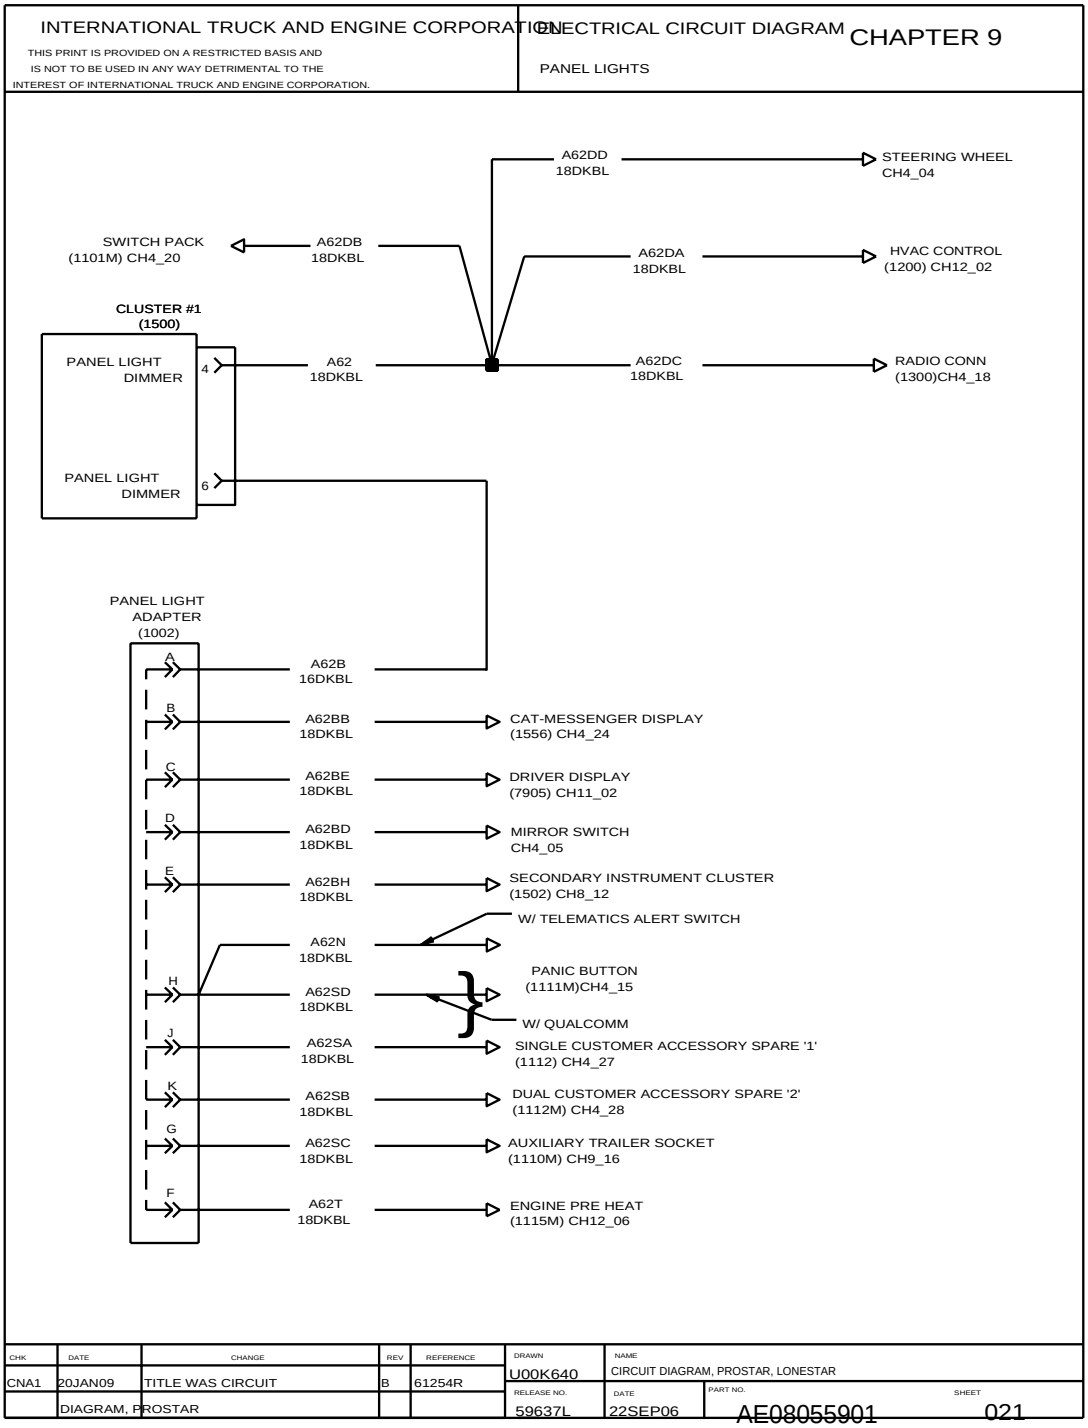


Figure 154 Panel Lights

https://truckmanualshub.com/

9.22. WORK LIGHTS — DAY CAB, P. 22

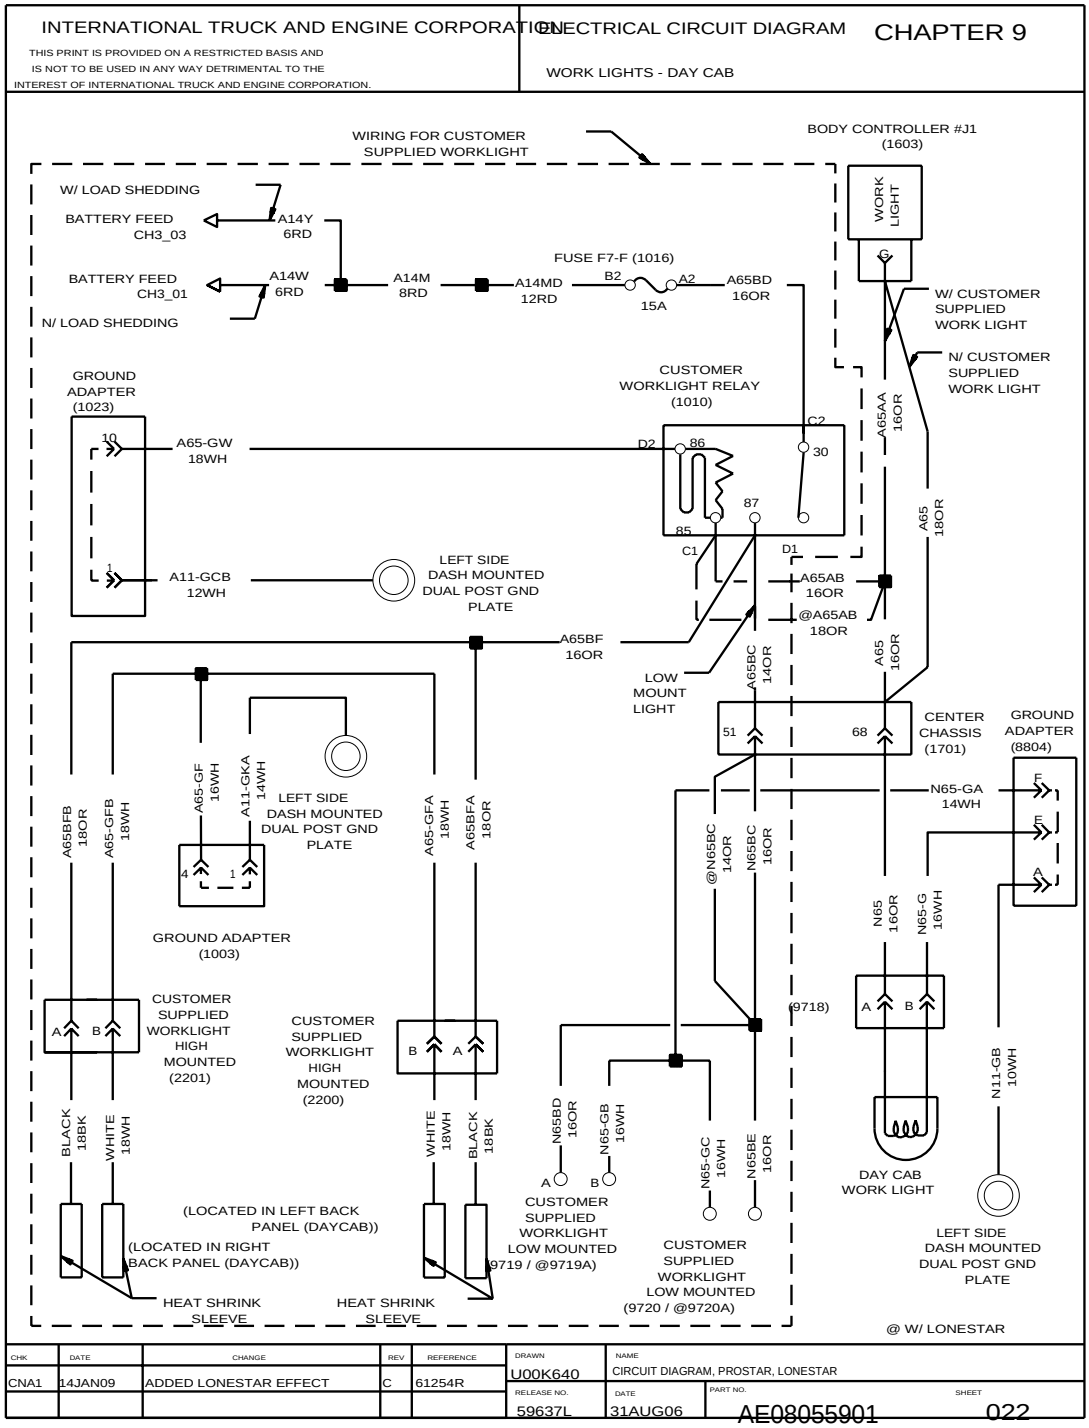


Figure 155 Work Lights — Day Cab

https://truckmanualshub.com/

9.23. WORK LIGHTS — SLEEPER CAB, P. 23

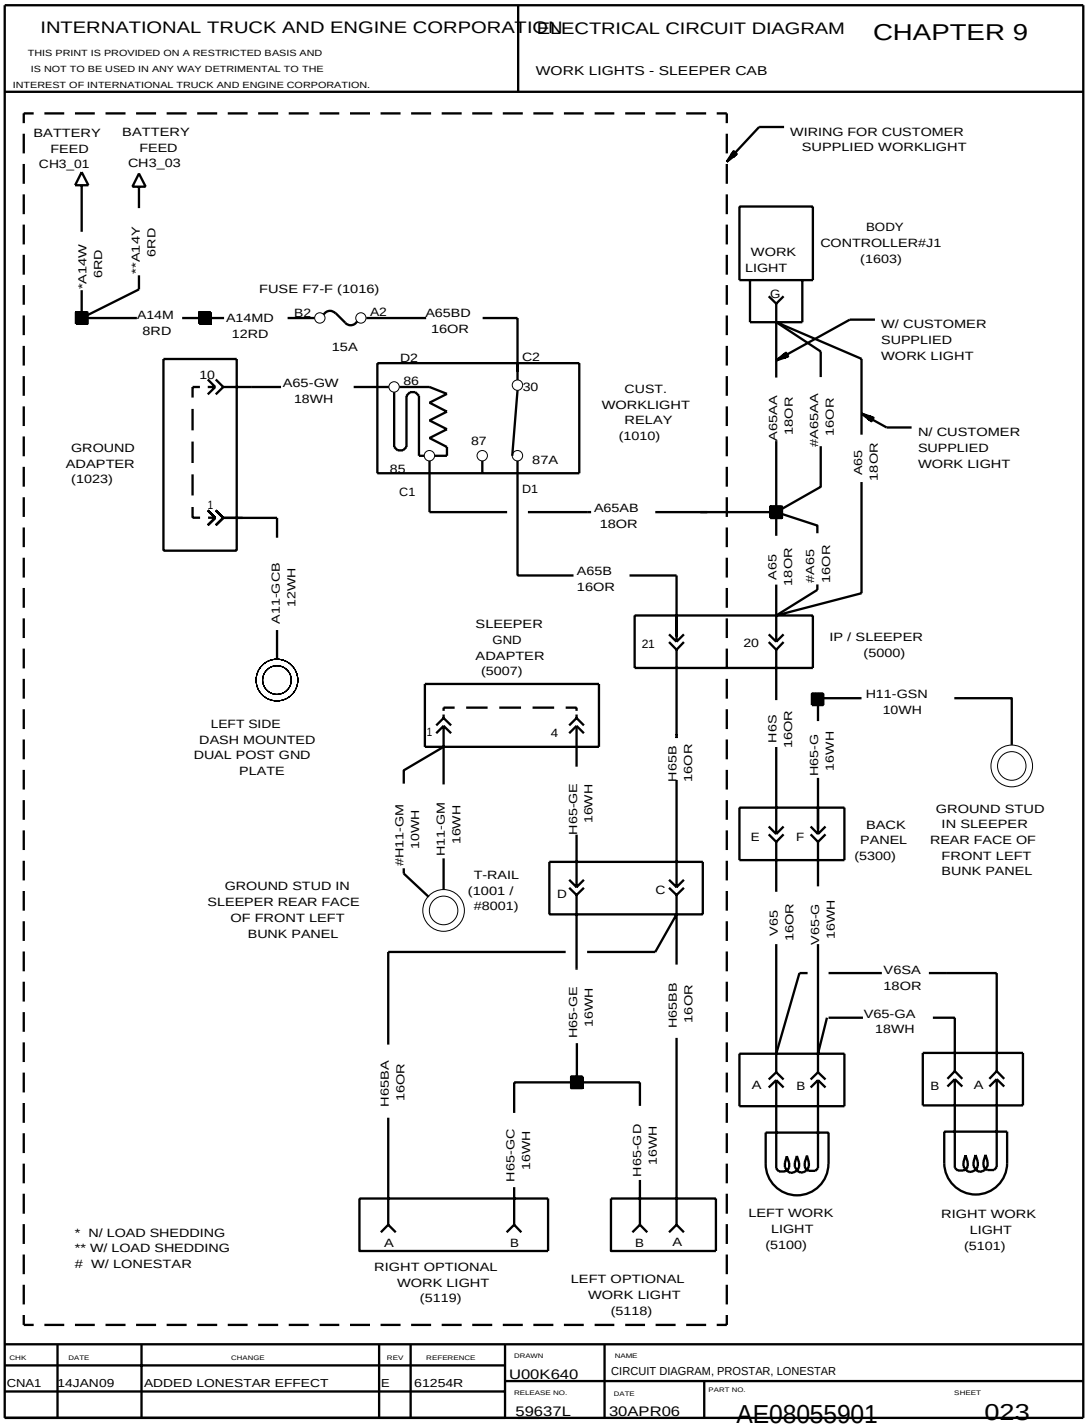


Figure 156 Work Lights — Sleeper Cab

https://truckmanualshub.com/

9.24. DOME AND ACCENT LIGHTS — SLEEPER, P. 24

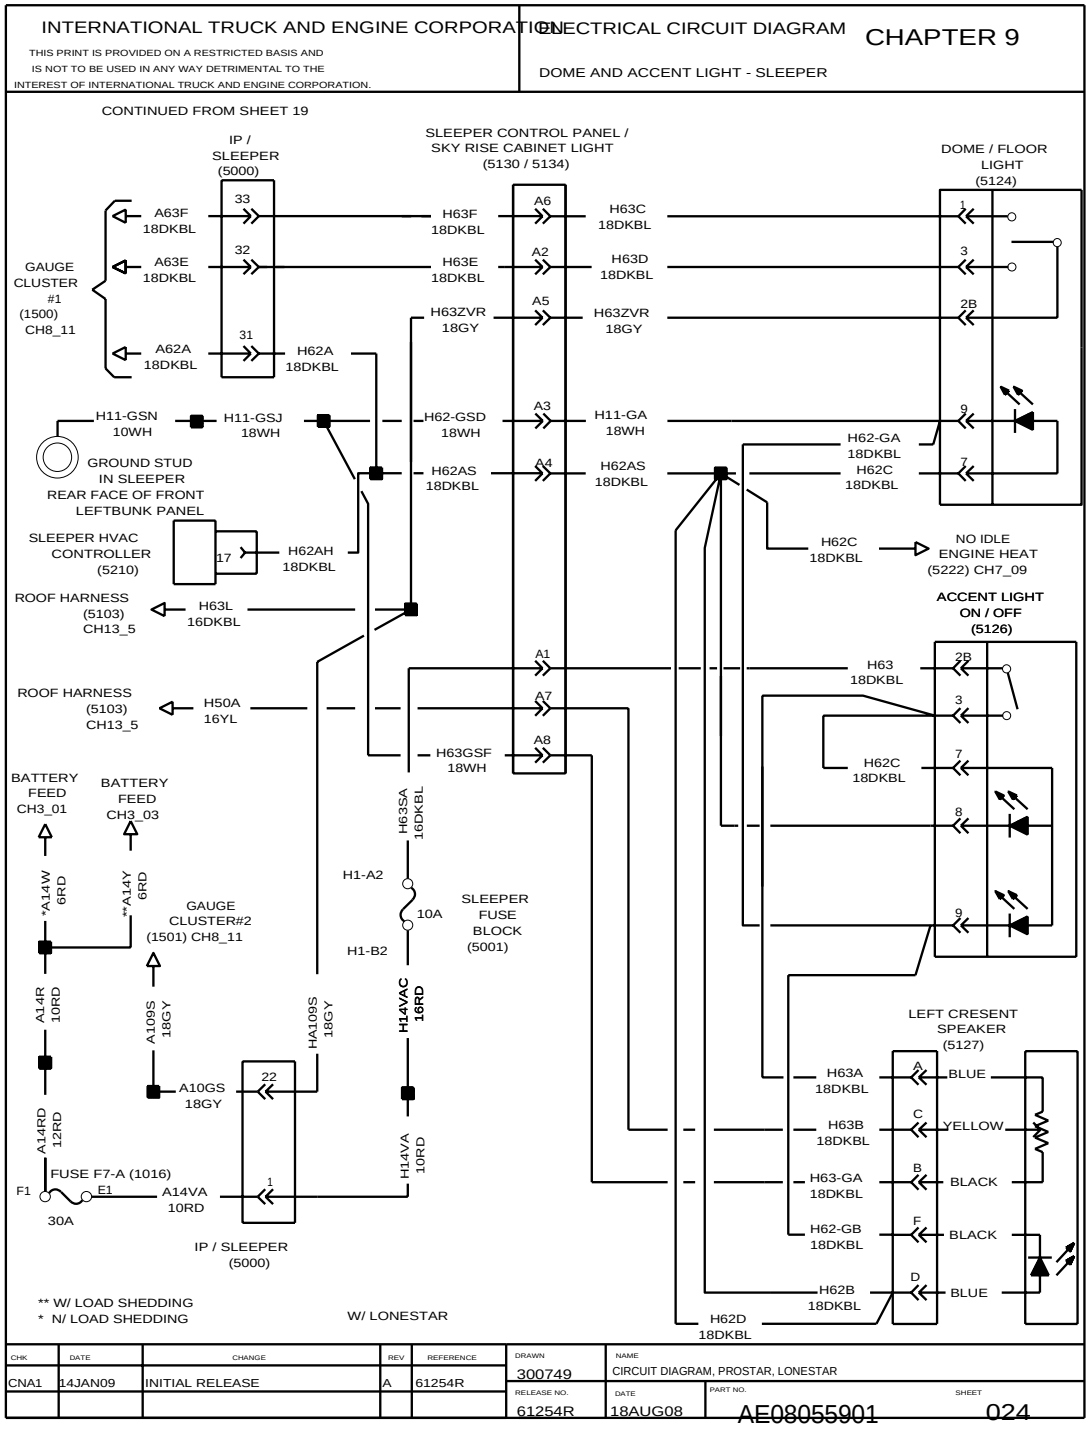


Figure 157 Dome and Accent Lights — Sleeper

https://truckmanualshub.com/

10. CHASSIS ACCESSORIES (CHAPTER 10)

10.1. TIRE PRESSURE MONITOR, P. 1

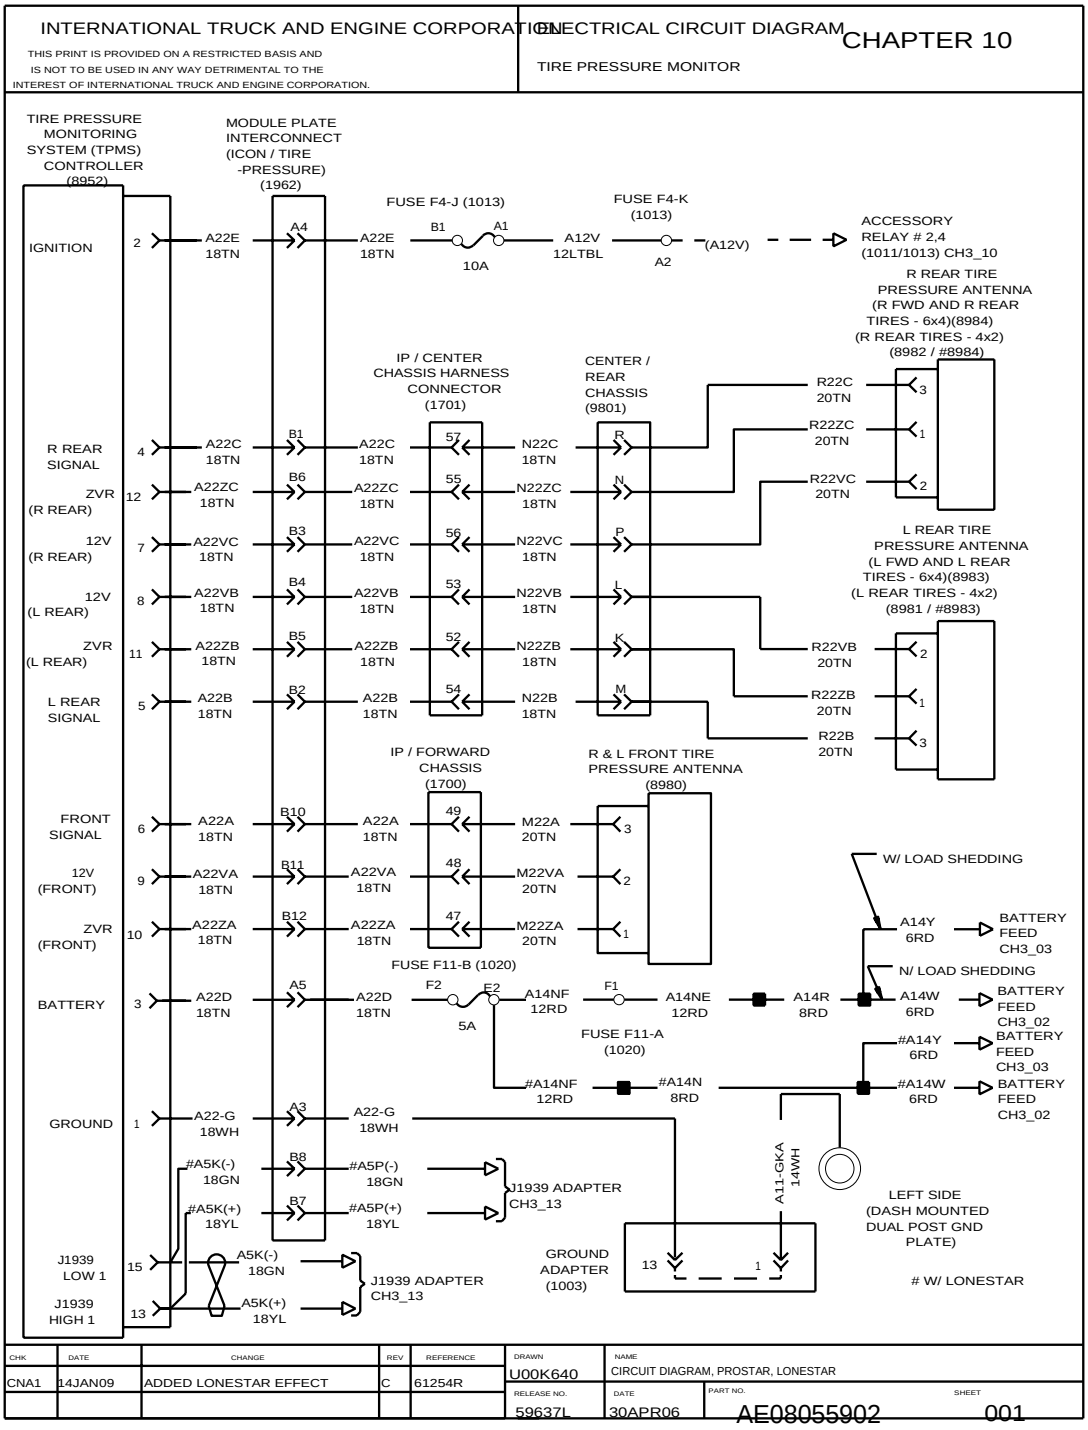


Figure 158 Tire Pressure Monitor

https://truckmanualshub.com/

10.2. AIR DRYER, P. 2

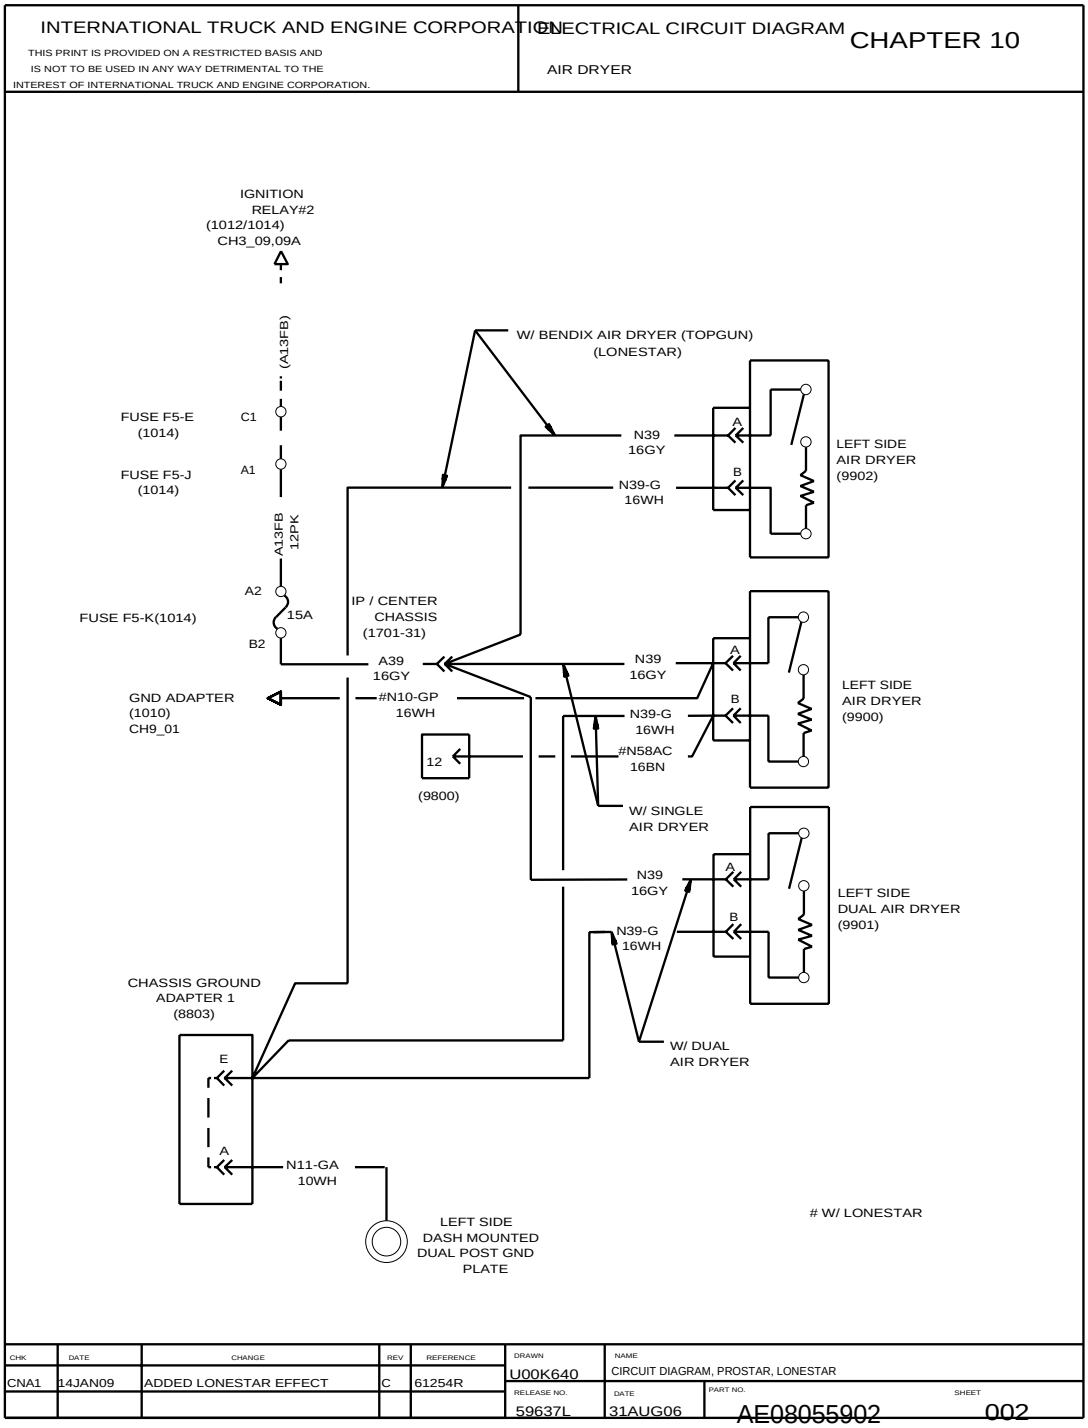


Figure 159 Air Dryer

https://truckmanualshub.com/

10.3. AIR SOLENOID PACK — 4 WAY, P. 3

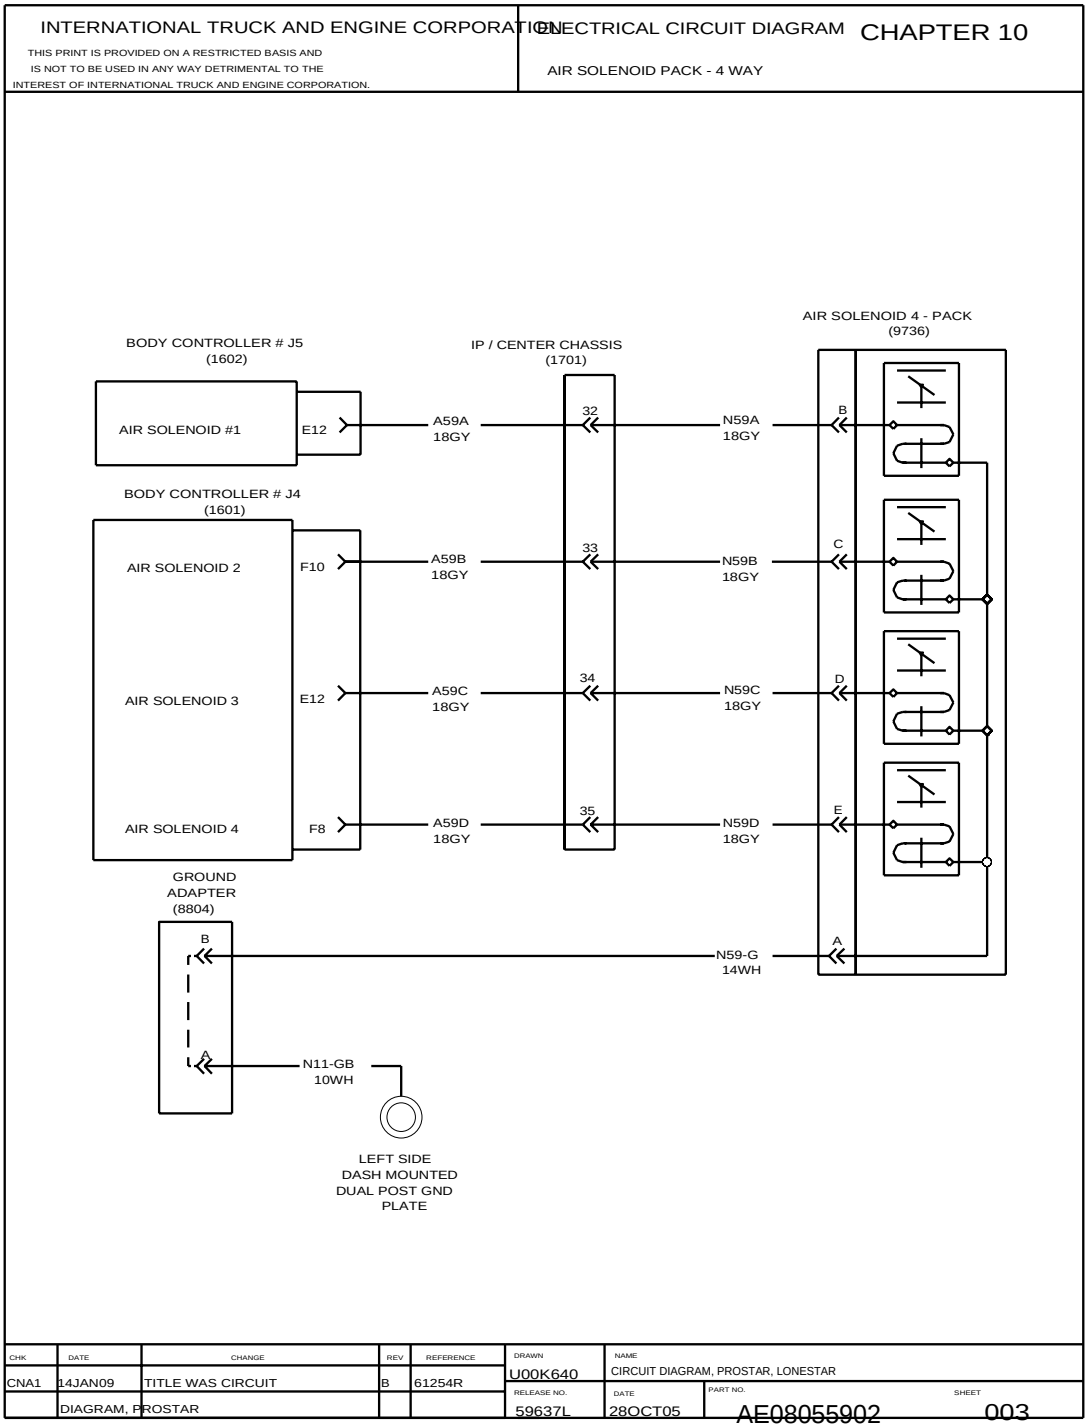


Figure 160 Air Solenoid Pack — 4 Way

https://truckmanualshub.com/

10.4. AIR SOLENOID PACK — 4 WAY, P. 4

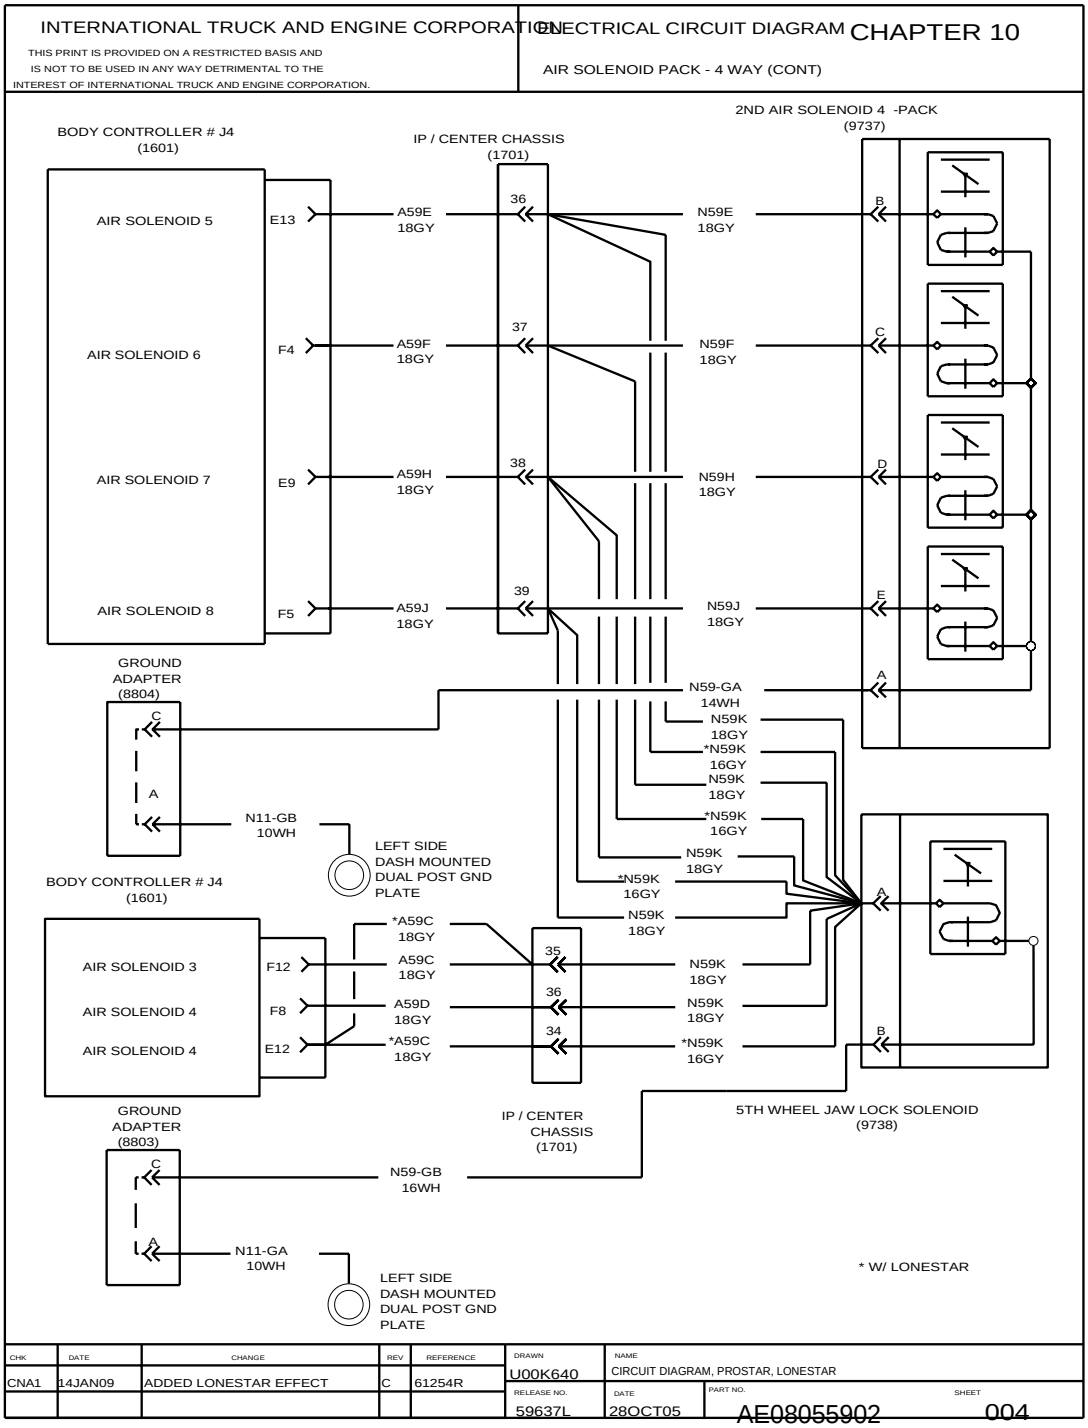


Figure 161 Air Solenoid Pack — 4 Way

https://truckmanualshub.com/

10.5. AIR SUSPENSION W/LOAD INDICATOR, P. 5

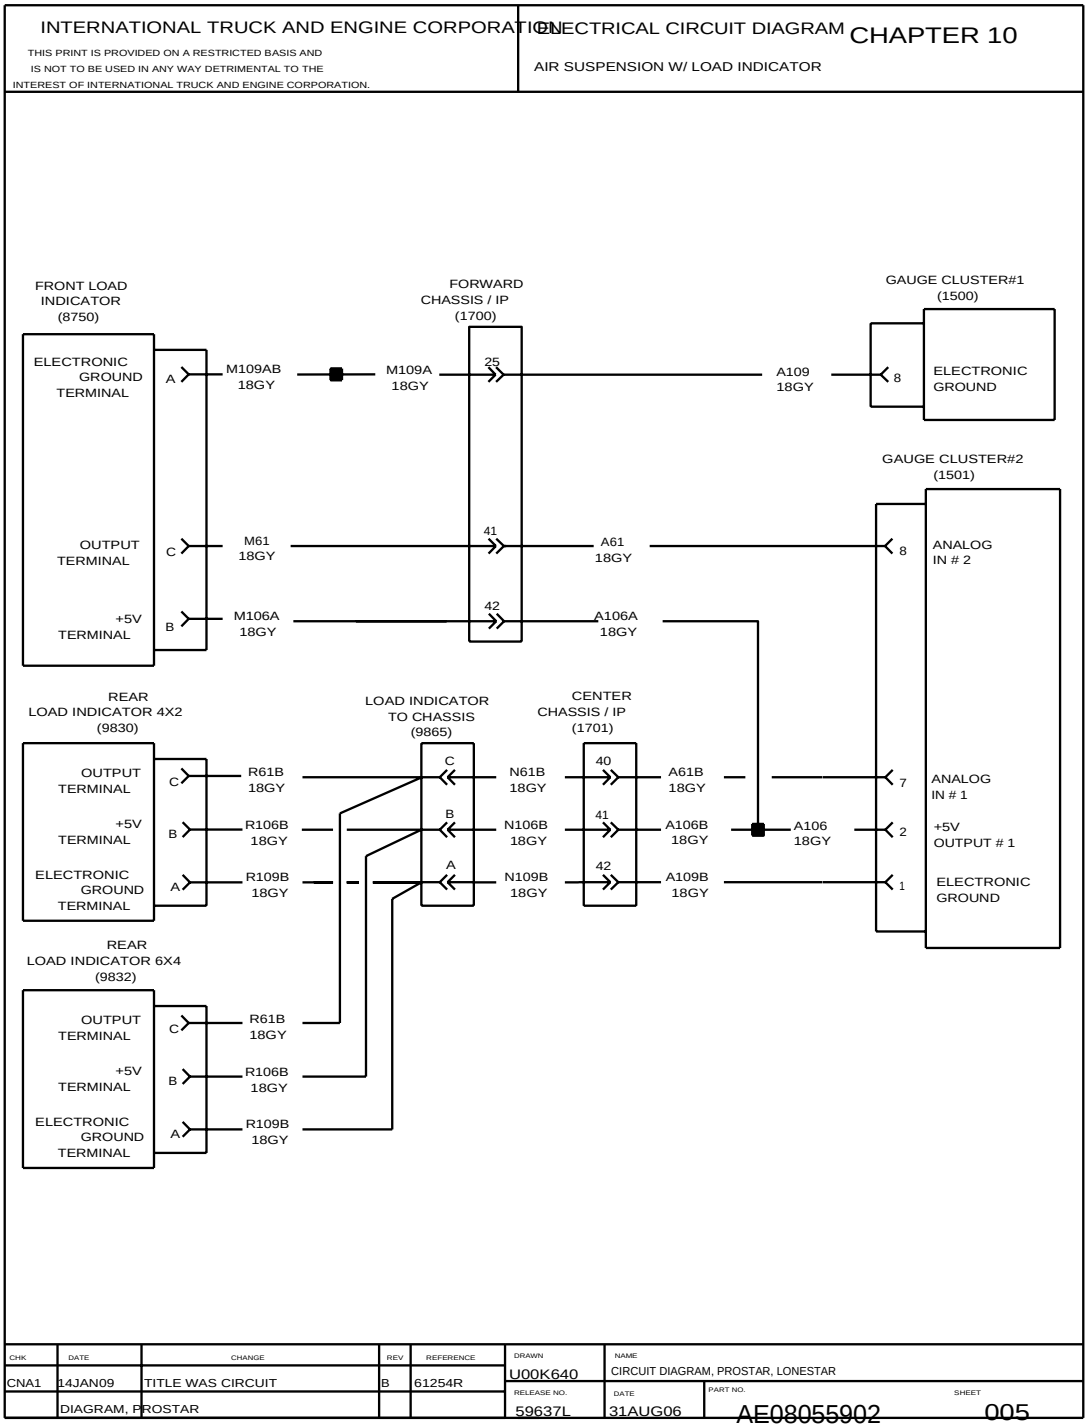


Figure 162 Air Suspension With Load Indicator

https://truckmanualshub.com/

10.6. BATTERY FEED — TRAILER AUXILIARY, P. 6

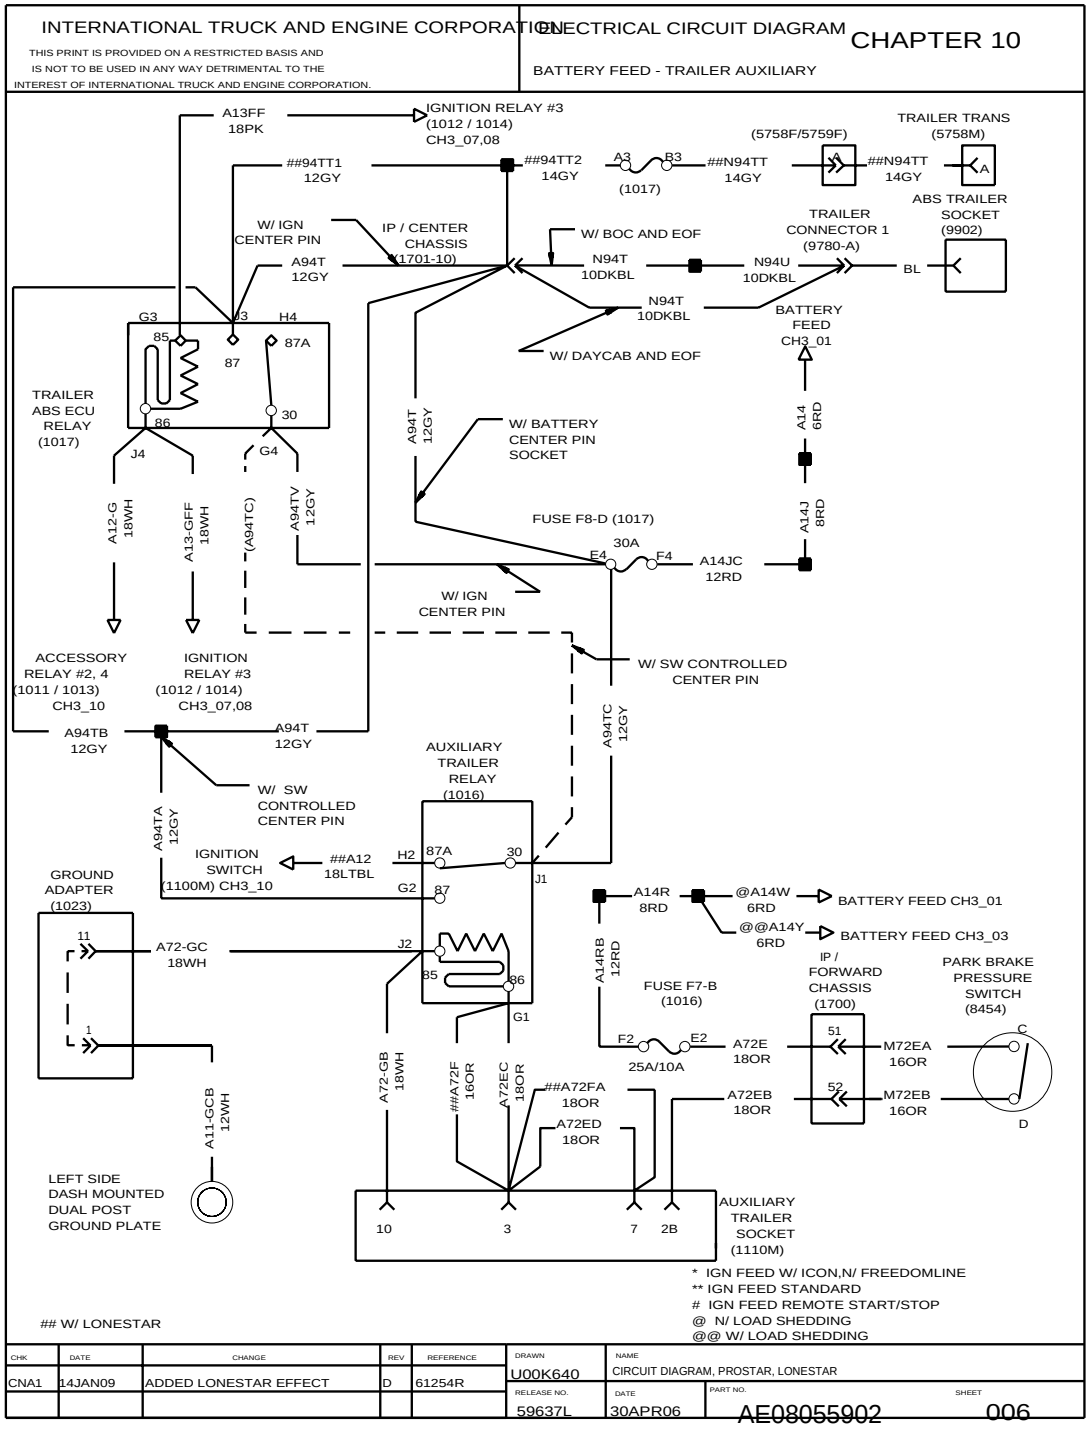


Figure 163 Battery Feed — Trailer Auxiliary

https://truckmanualshub.com/

10.7. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 7

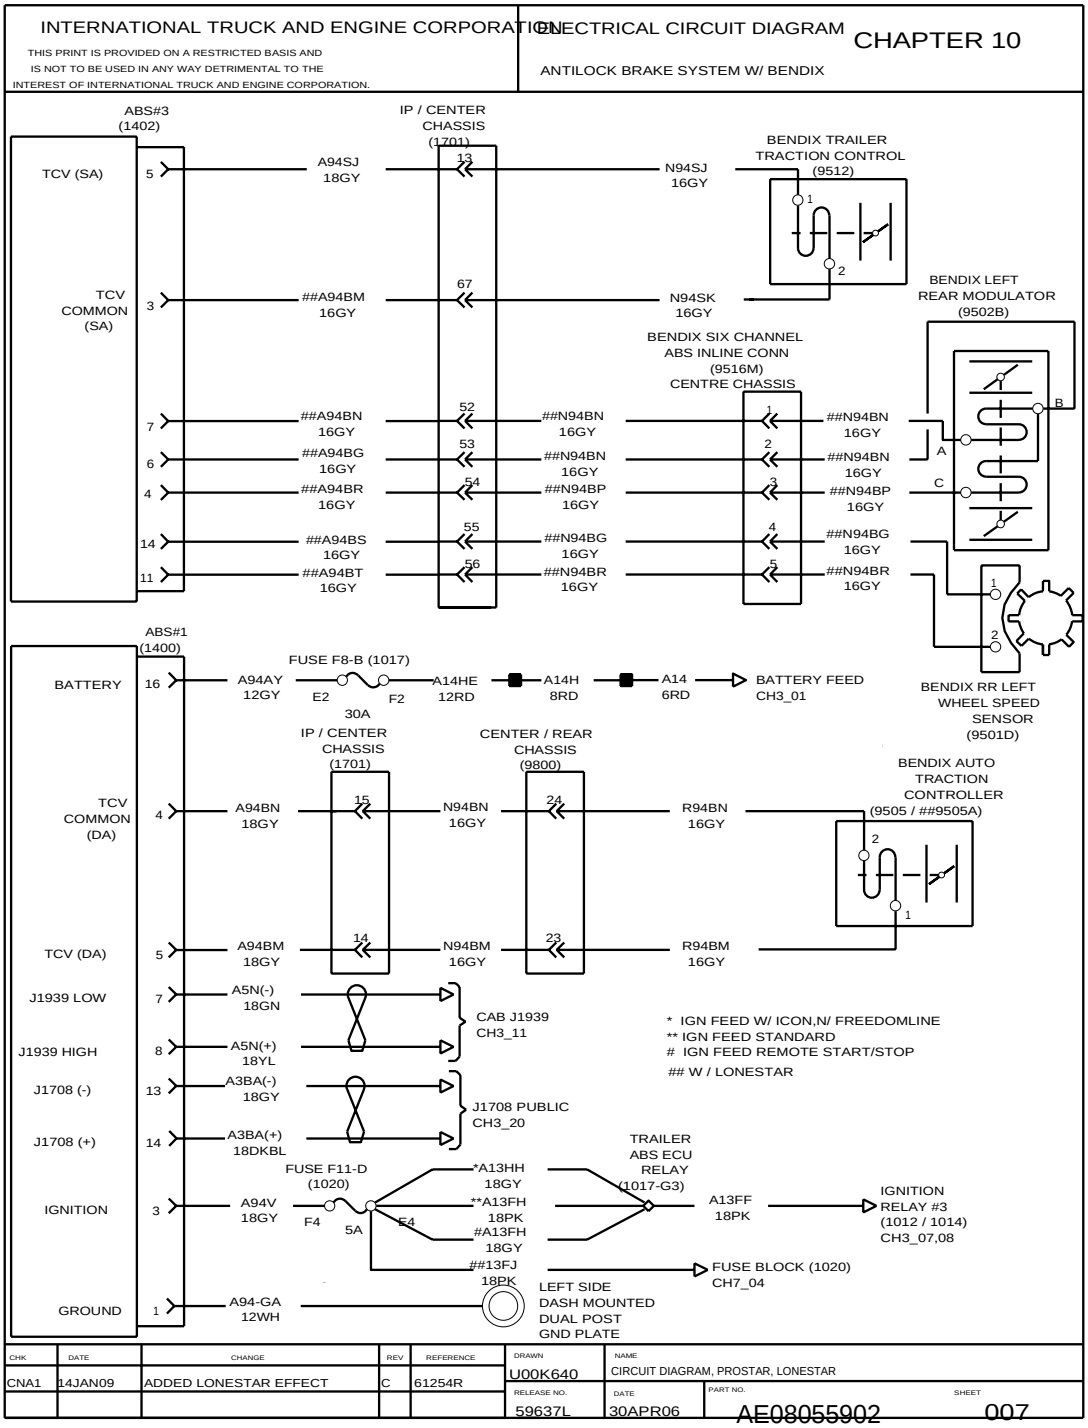


Figure 164 Antilock Brake System W/Bendix

https://truckmanualshub.com/

10.8. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 7A

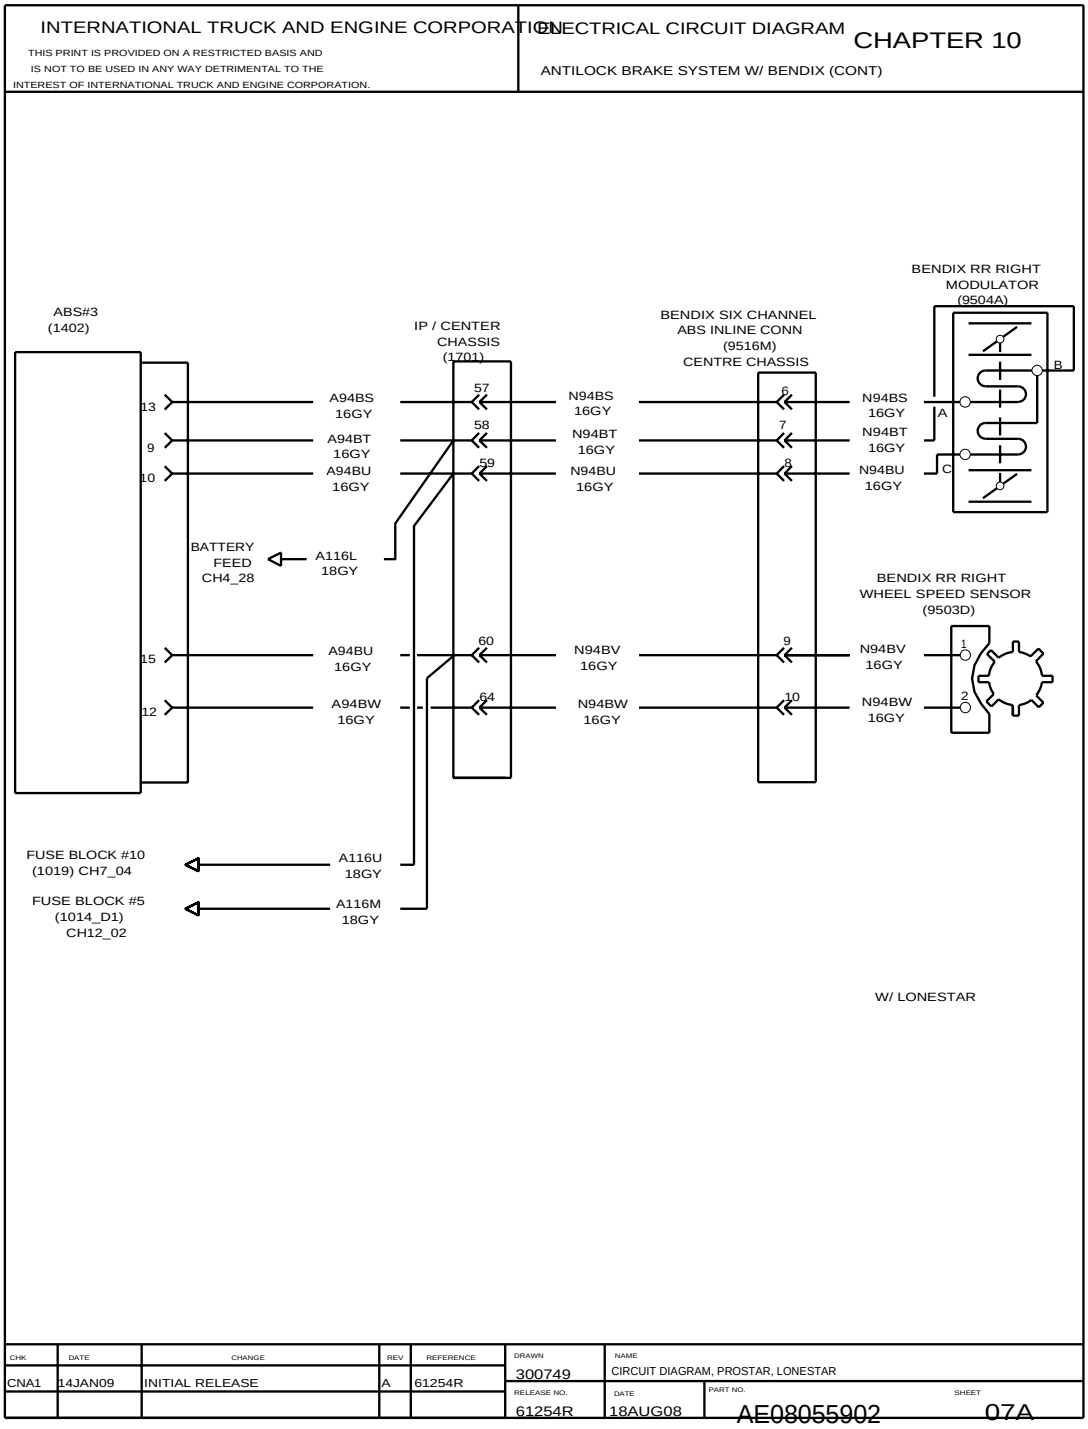


Figure 165 Antilock Brake System W/Bendix

https://truckmanualshub.com/

10.9. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 8

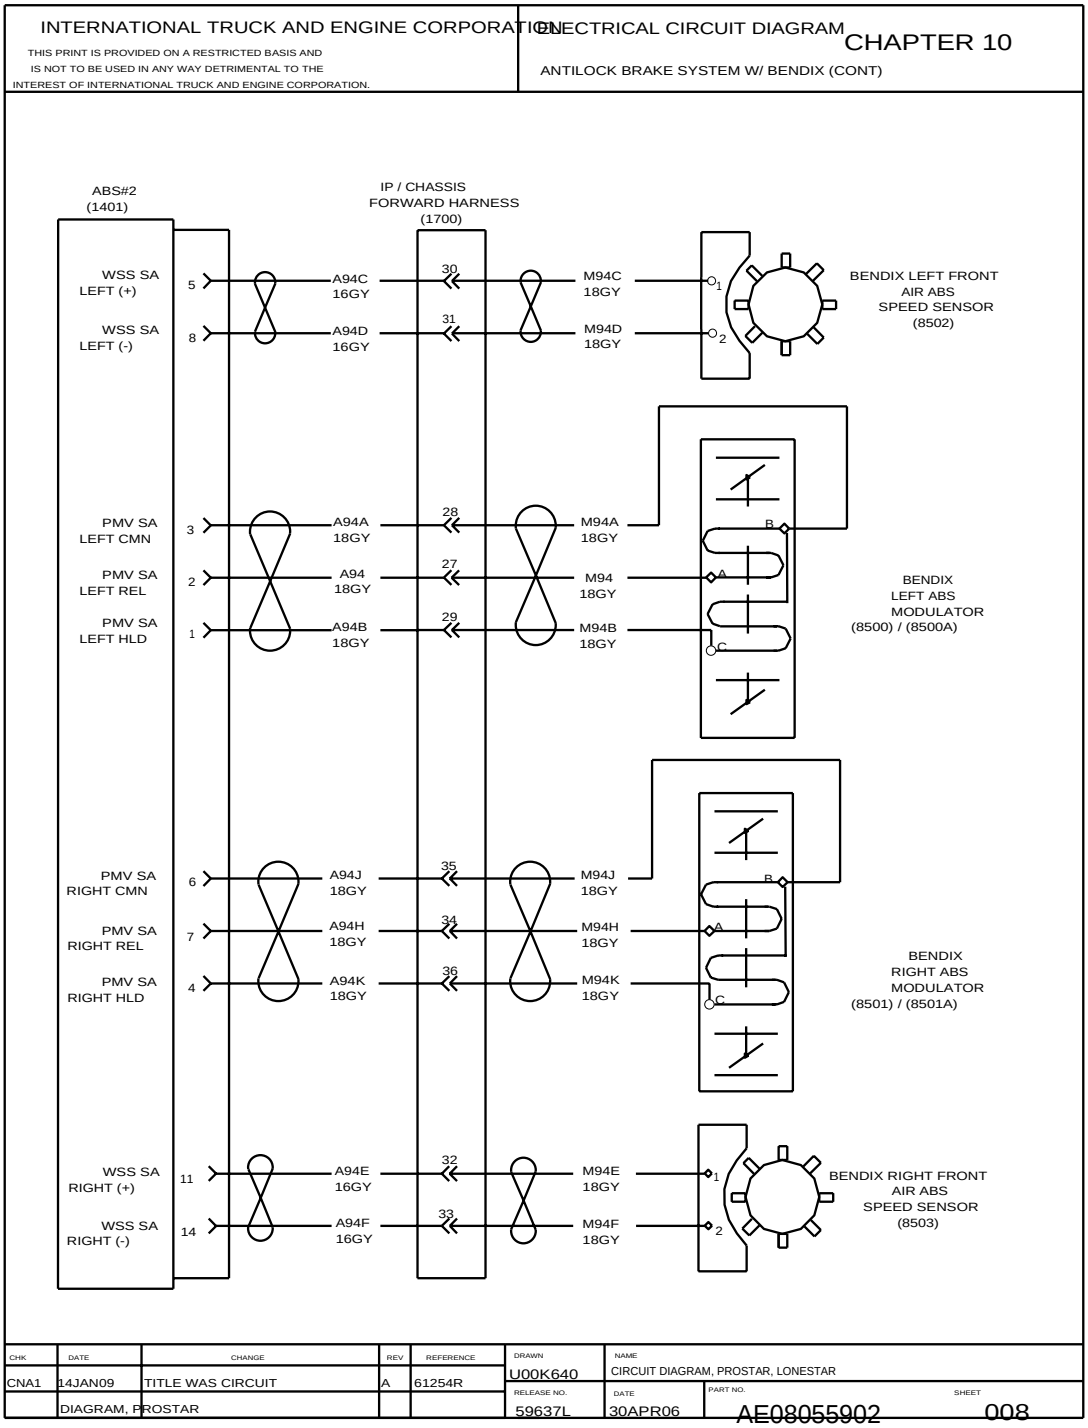


Figure 166 Antilock Brake System W/Bendix

https://truckmanualshub.com/

10.10. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 9

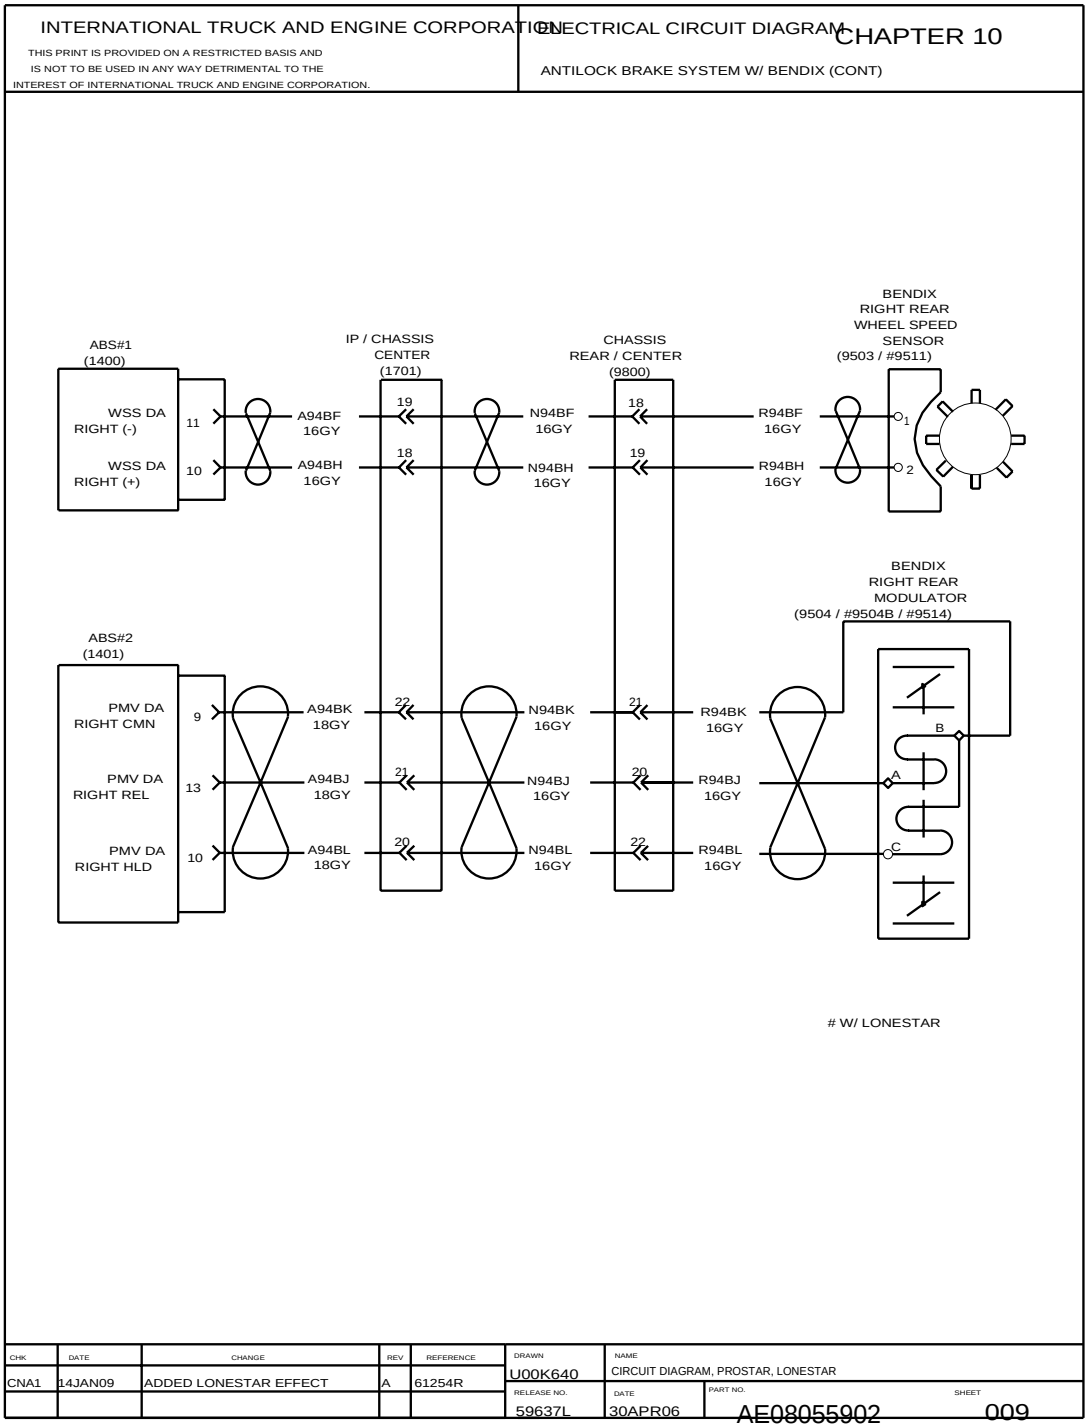


Figure 167 Antilock Brake System W/Bendix

https://truckmanualshub.com/

10.11. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 10

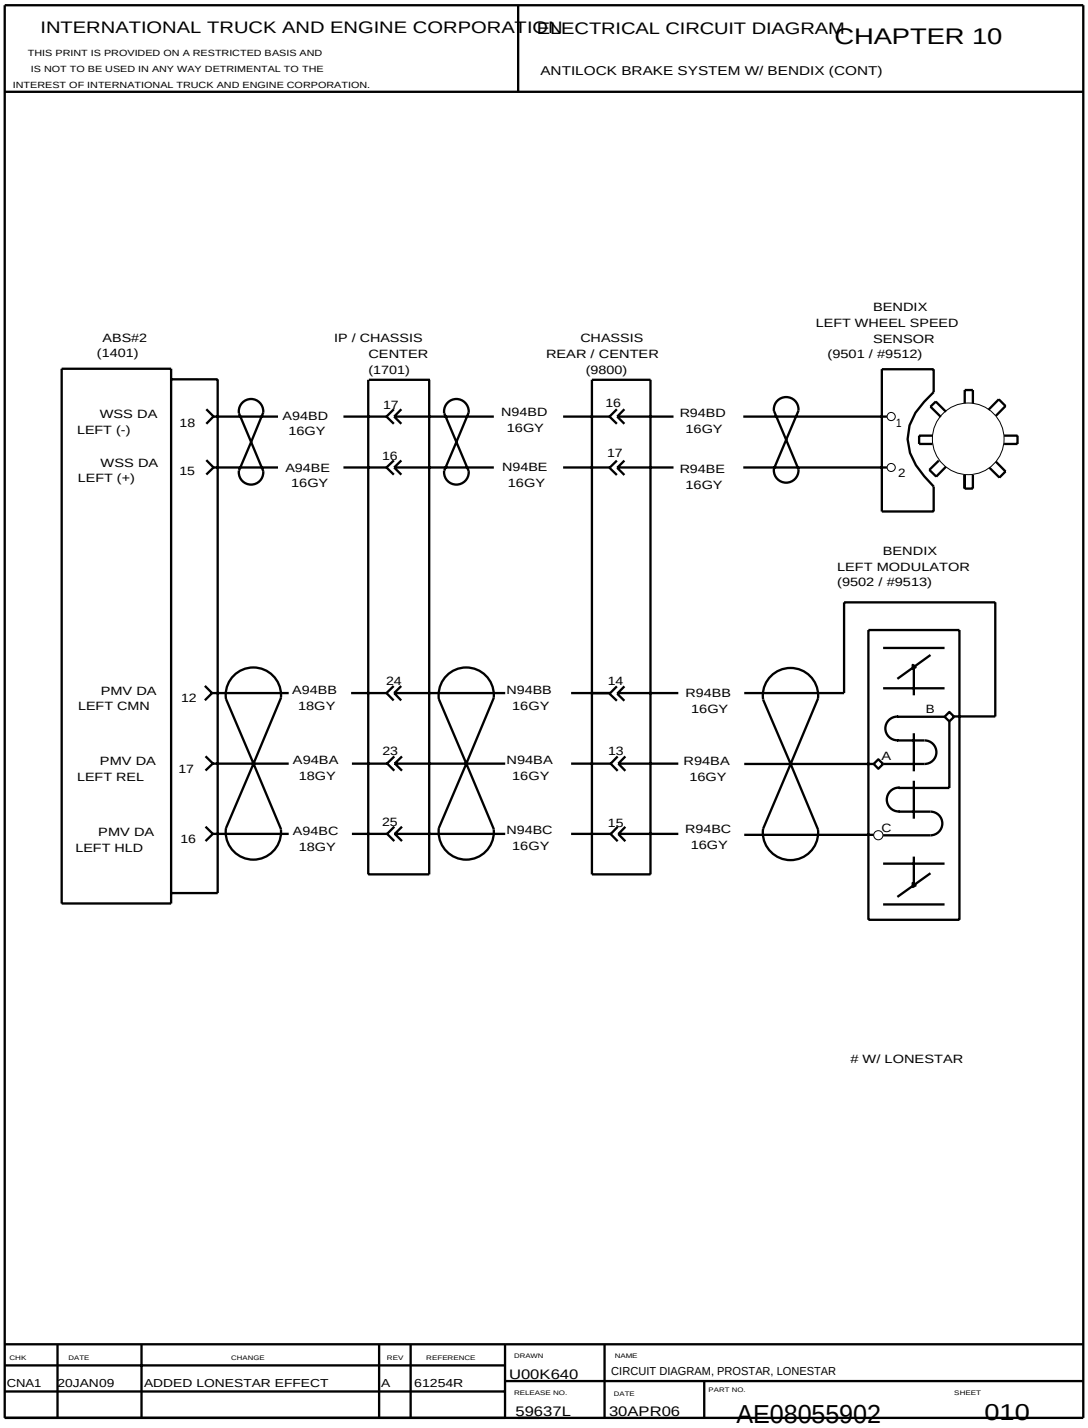


Figure 168 Antilock Brake System W/Bendix

https://truckmanualshub.com/

10.12. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 11

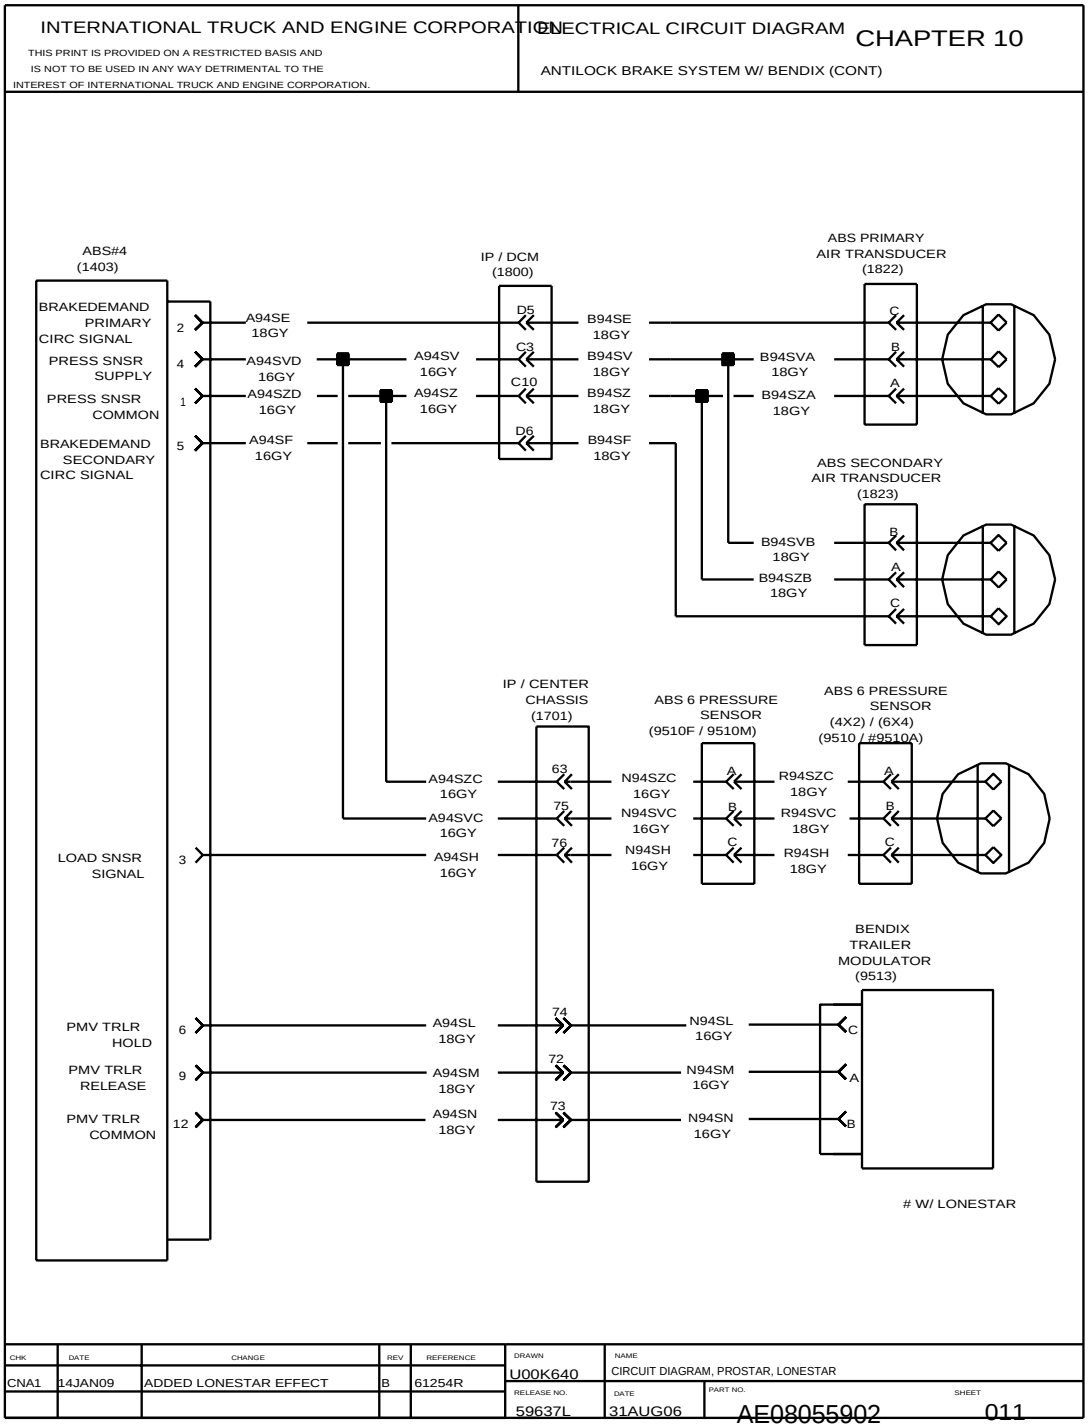


Figure 169 Antilock Brake System W/Bendix

https://truckmanualshub.com/

10.13. ANTILOCK BRAKE SYSTEM W/BENDIX, P. 12

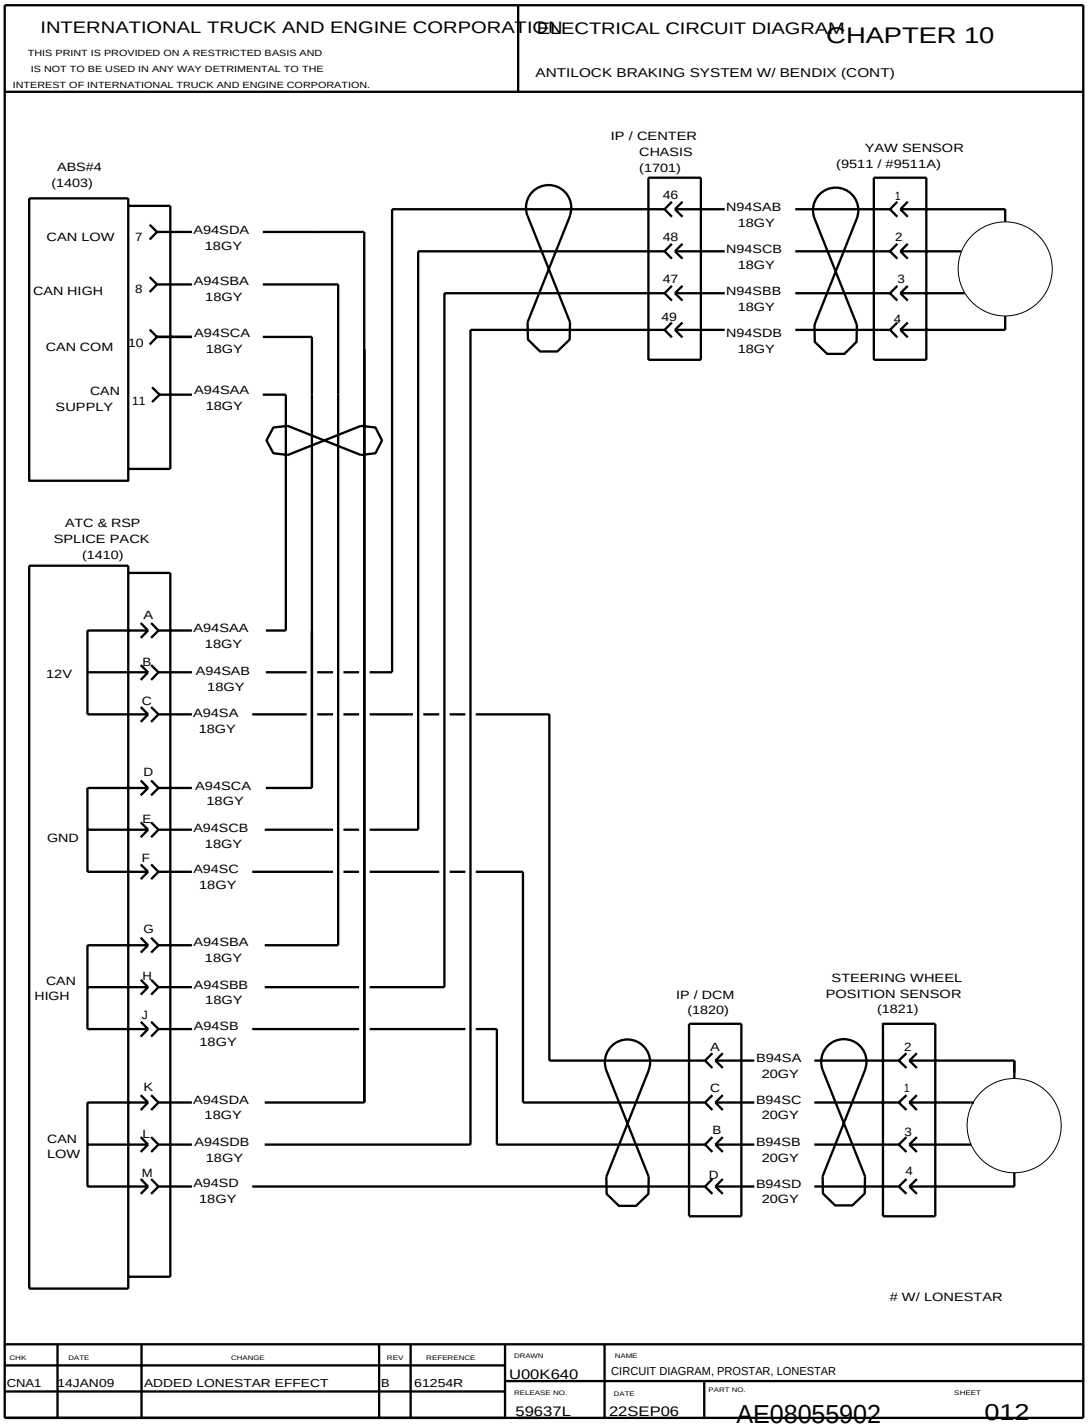


Figure 170 Antilock Brake System W/Bendix

https://truckmanualshub.com/

10.14. ANTILOCK BRAKE SYSTEM W/WABCO, P. 13

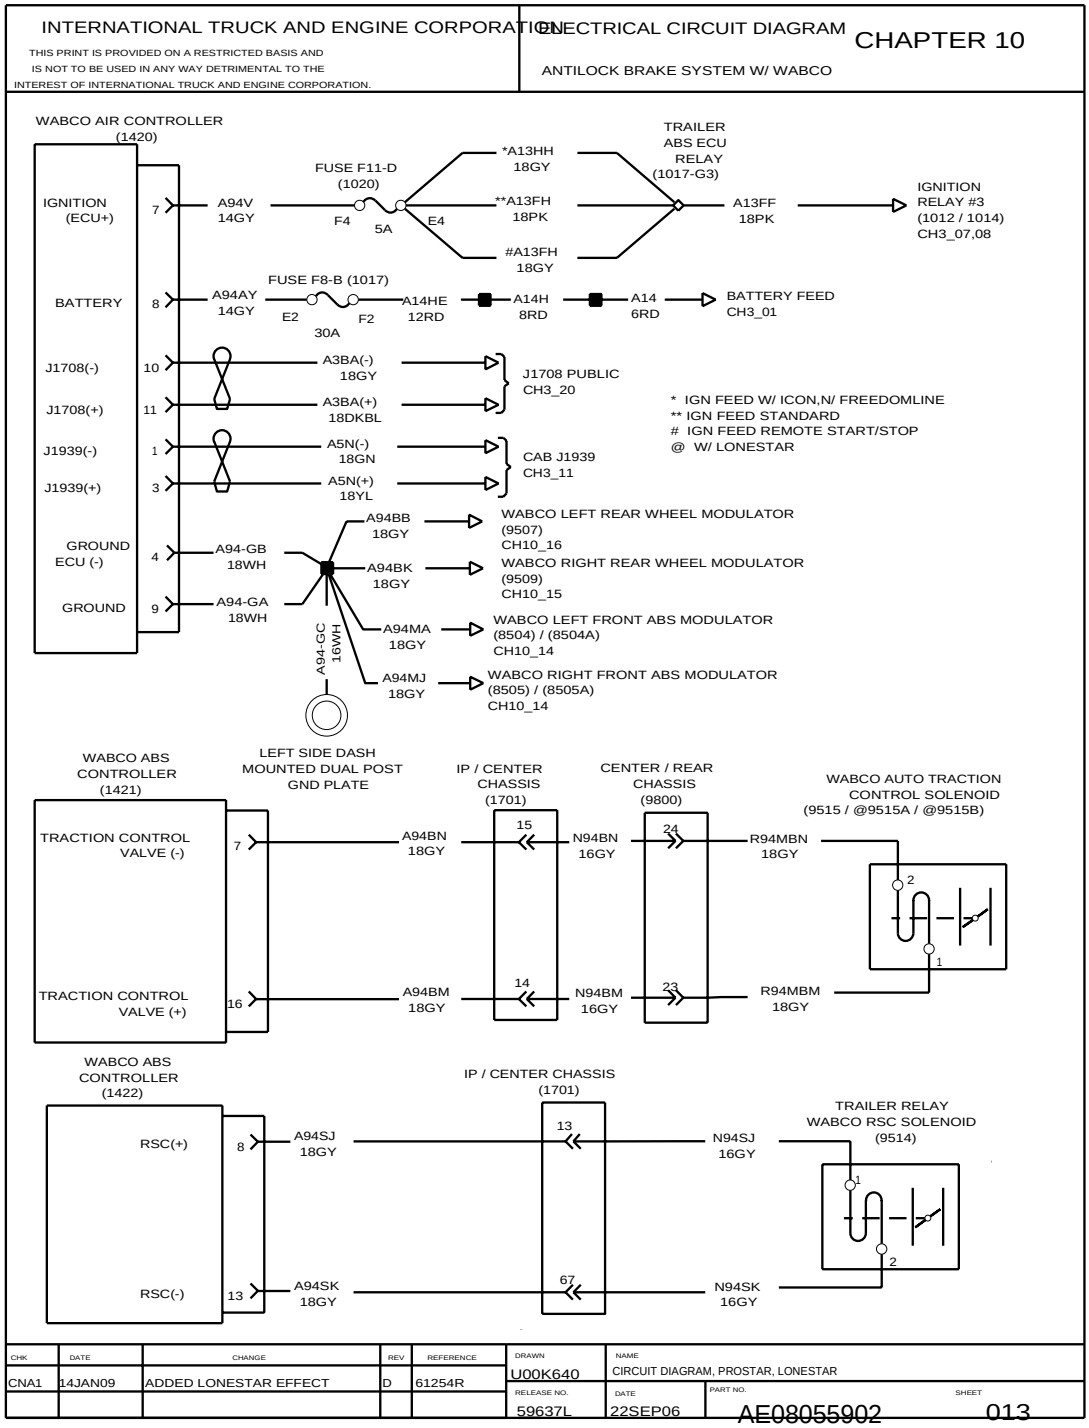


Figure 171 Antilock Brake System W/WABCO

https://truckmanualshub.com/

10.15. ANTILOCK BRAKE SYSTEM W/WABCO, P. 14

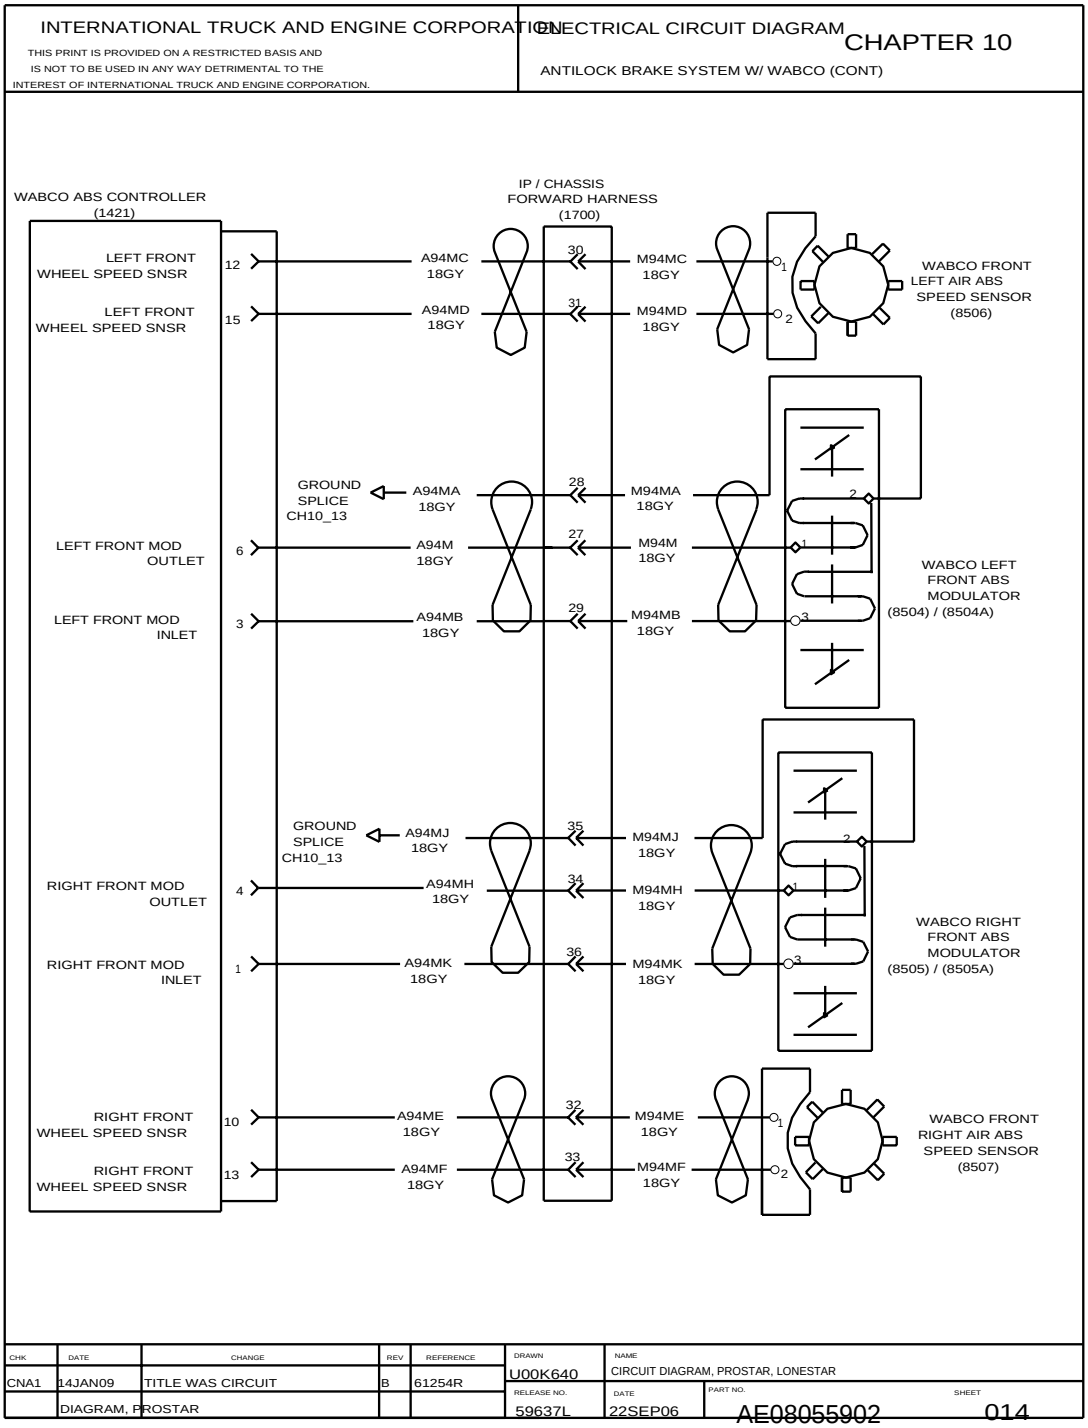


Figure 172 Antilock Brake System W/WABCO

https://truckmanualshub.com/

10.16. ANTILOCK BRAKE SYSTEM W/WABCO, P. 15

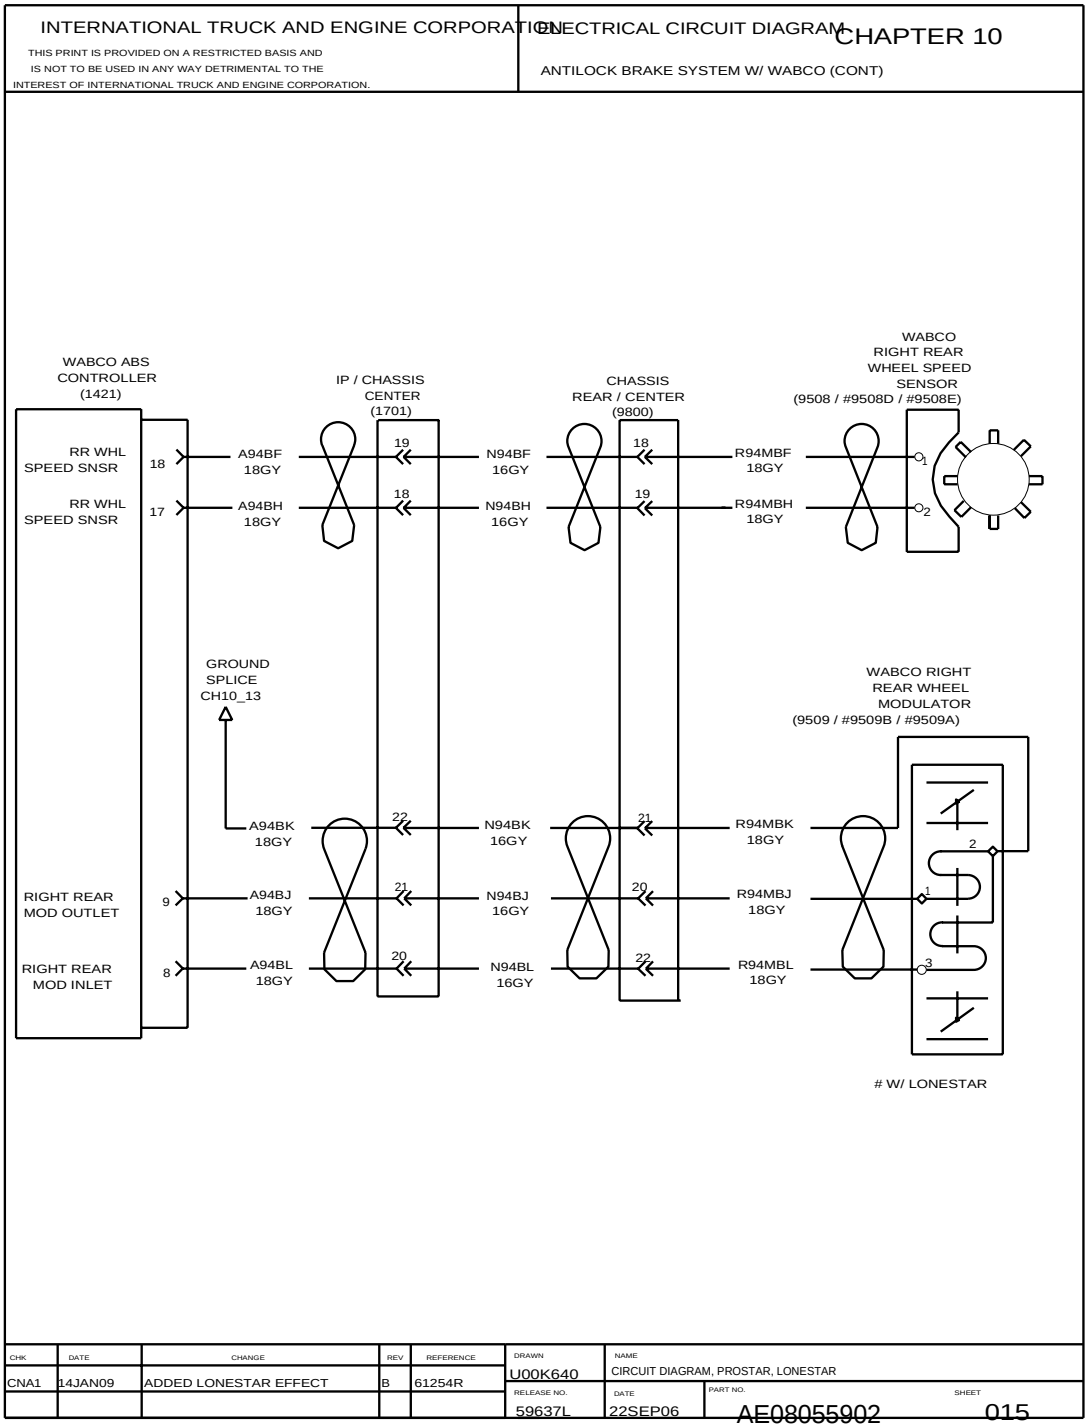


Figure 173 Antilock Brake System W/WABCO

https://truckmanualshub.com/

10.17. ANTILOCK BRAKE SYSTEM W/WABCO, P. 16

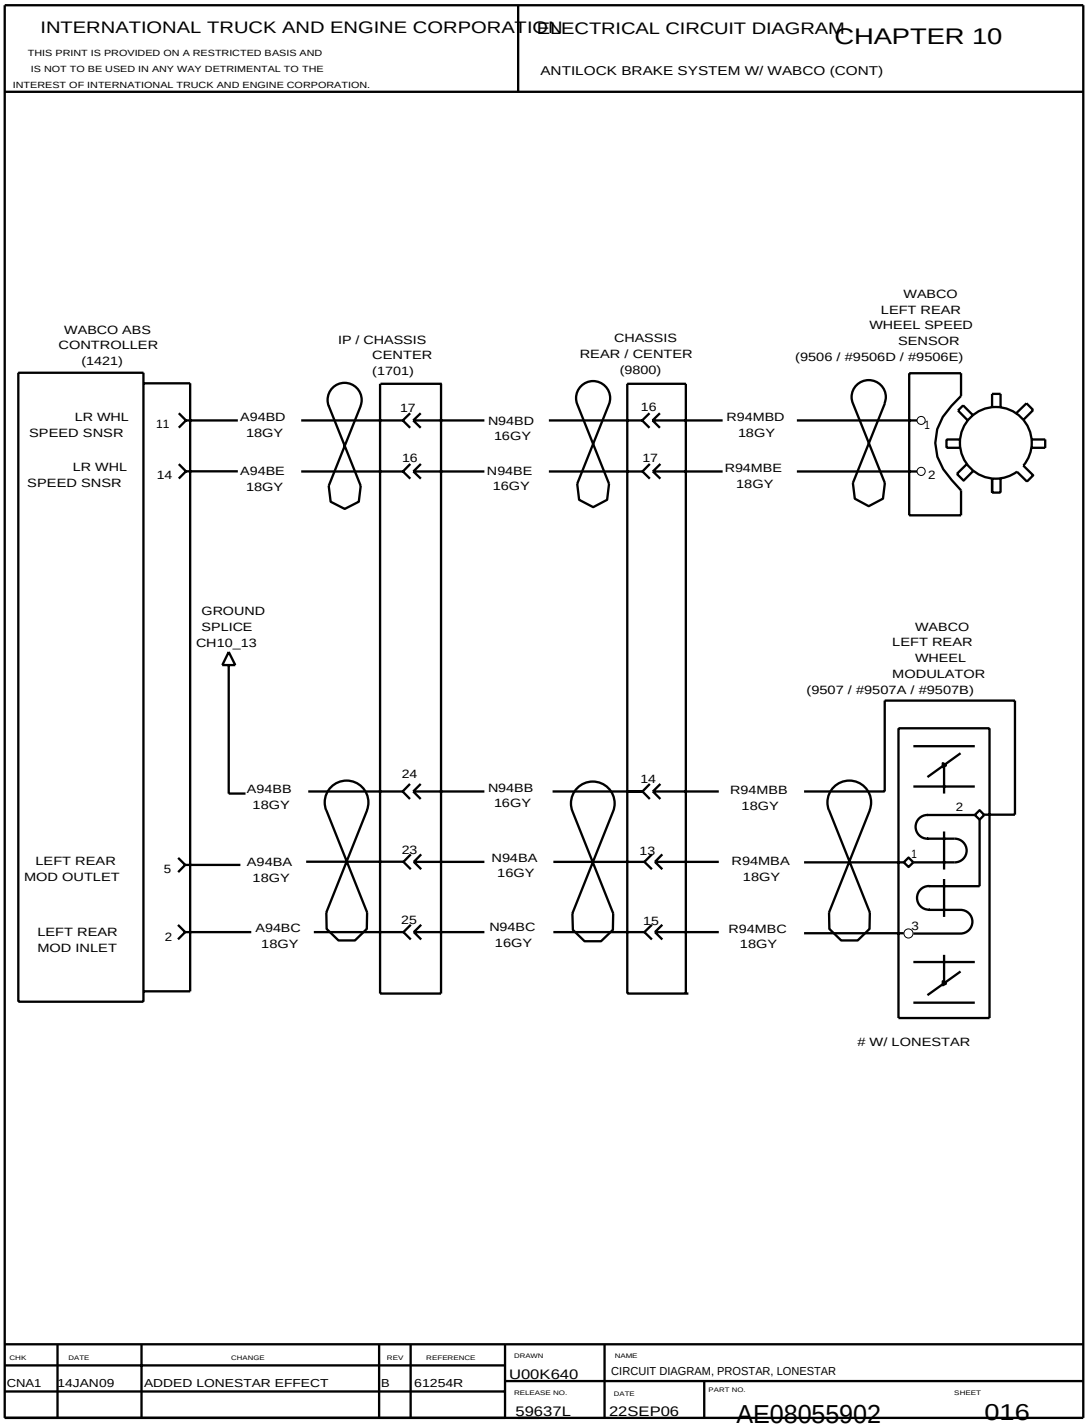


Figure 174 Antilock Brake System W/WABCO

https://truckmanualshub.com/

10.18. BLANK PAGE, P. 17

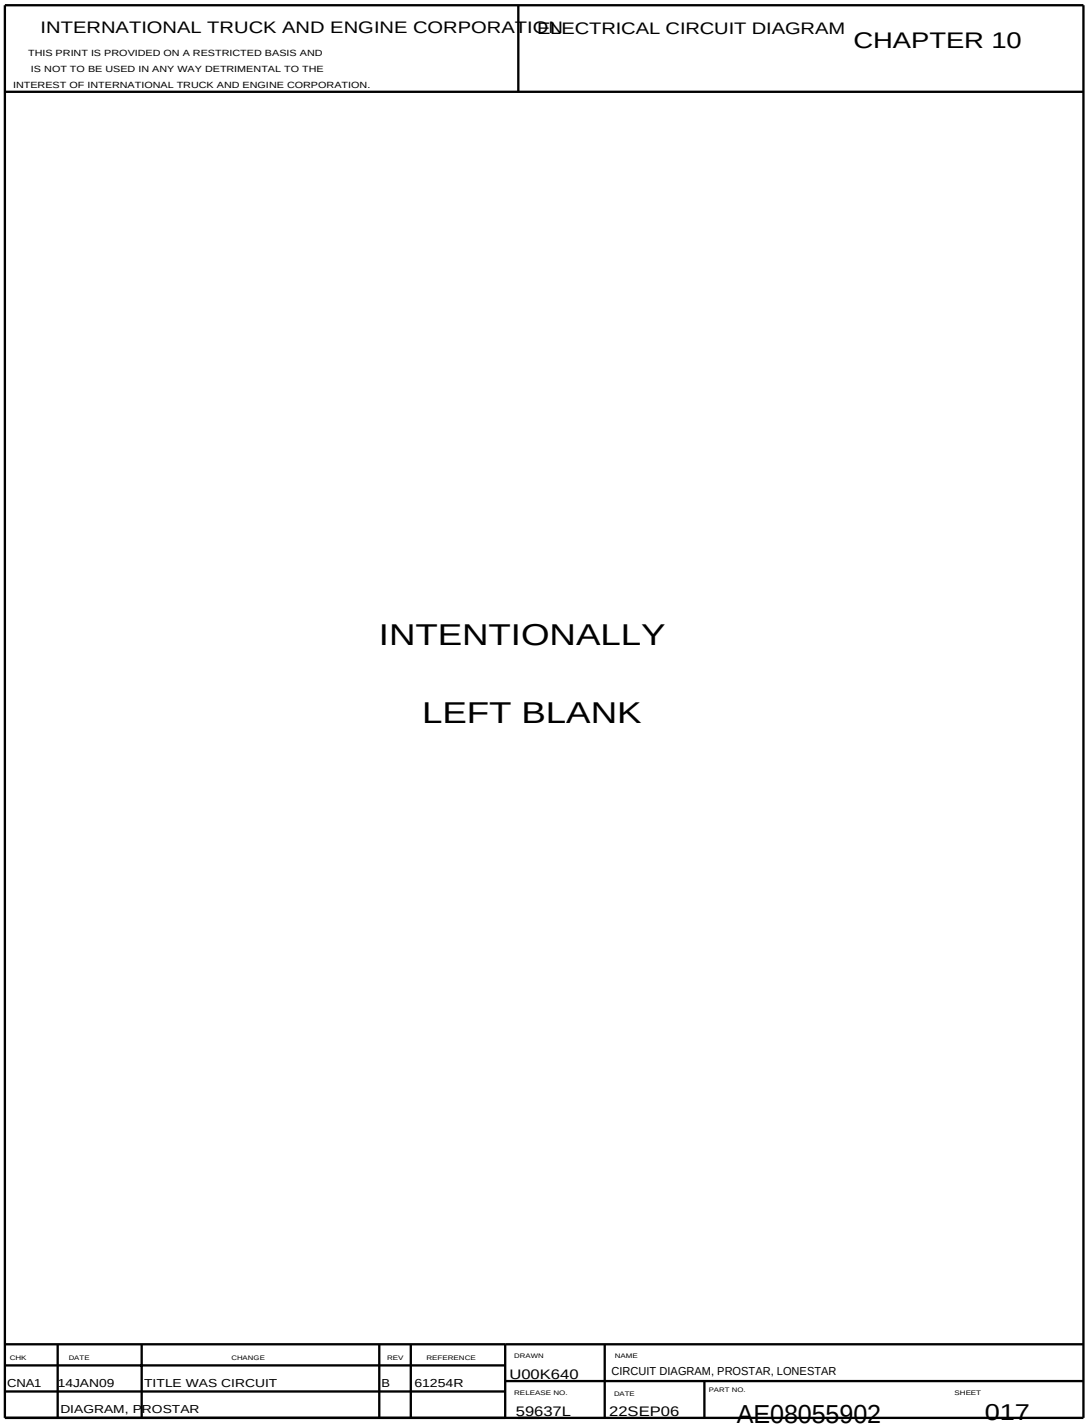


Figure 175 Blank Page

https://truckmanualshub.com/

10.19. POWER TAKE OFF, P. 18

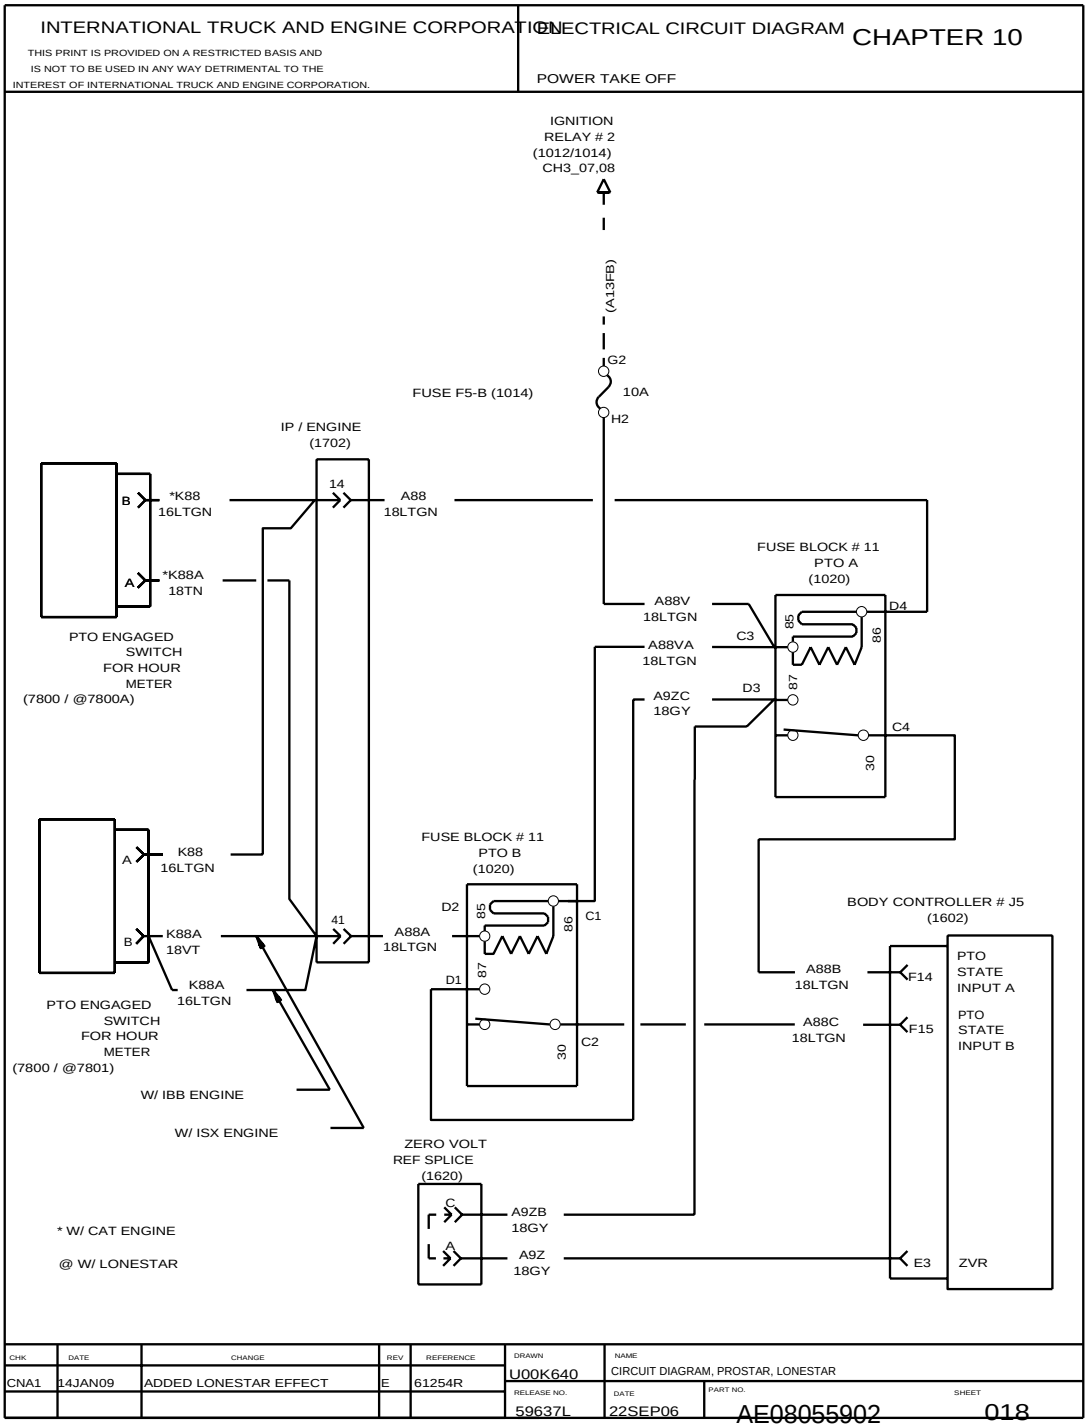


Figure 176 Power Take Off

https://truckmanualshub.com/

10.20. FUEL LEVEL, P. 19

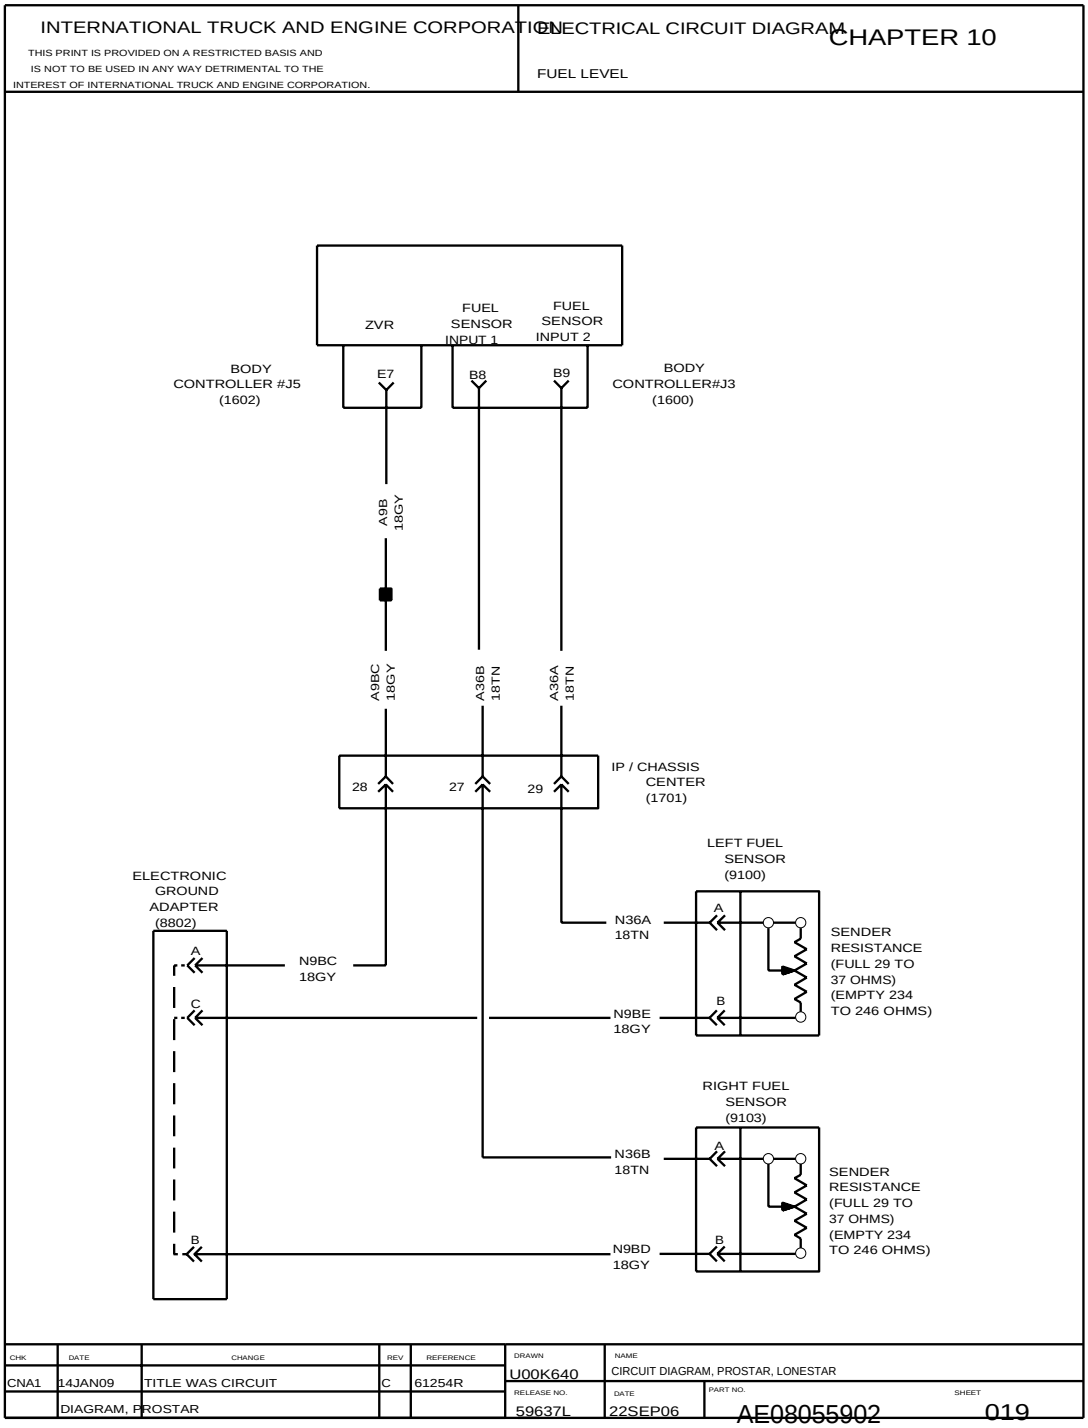


Figure 177 Fuel Level

https://truckmanualshub.com/

10.21. VEHICLE SENSOR MODULE, P. 20

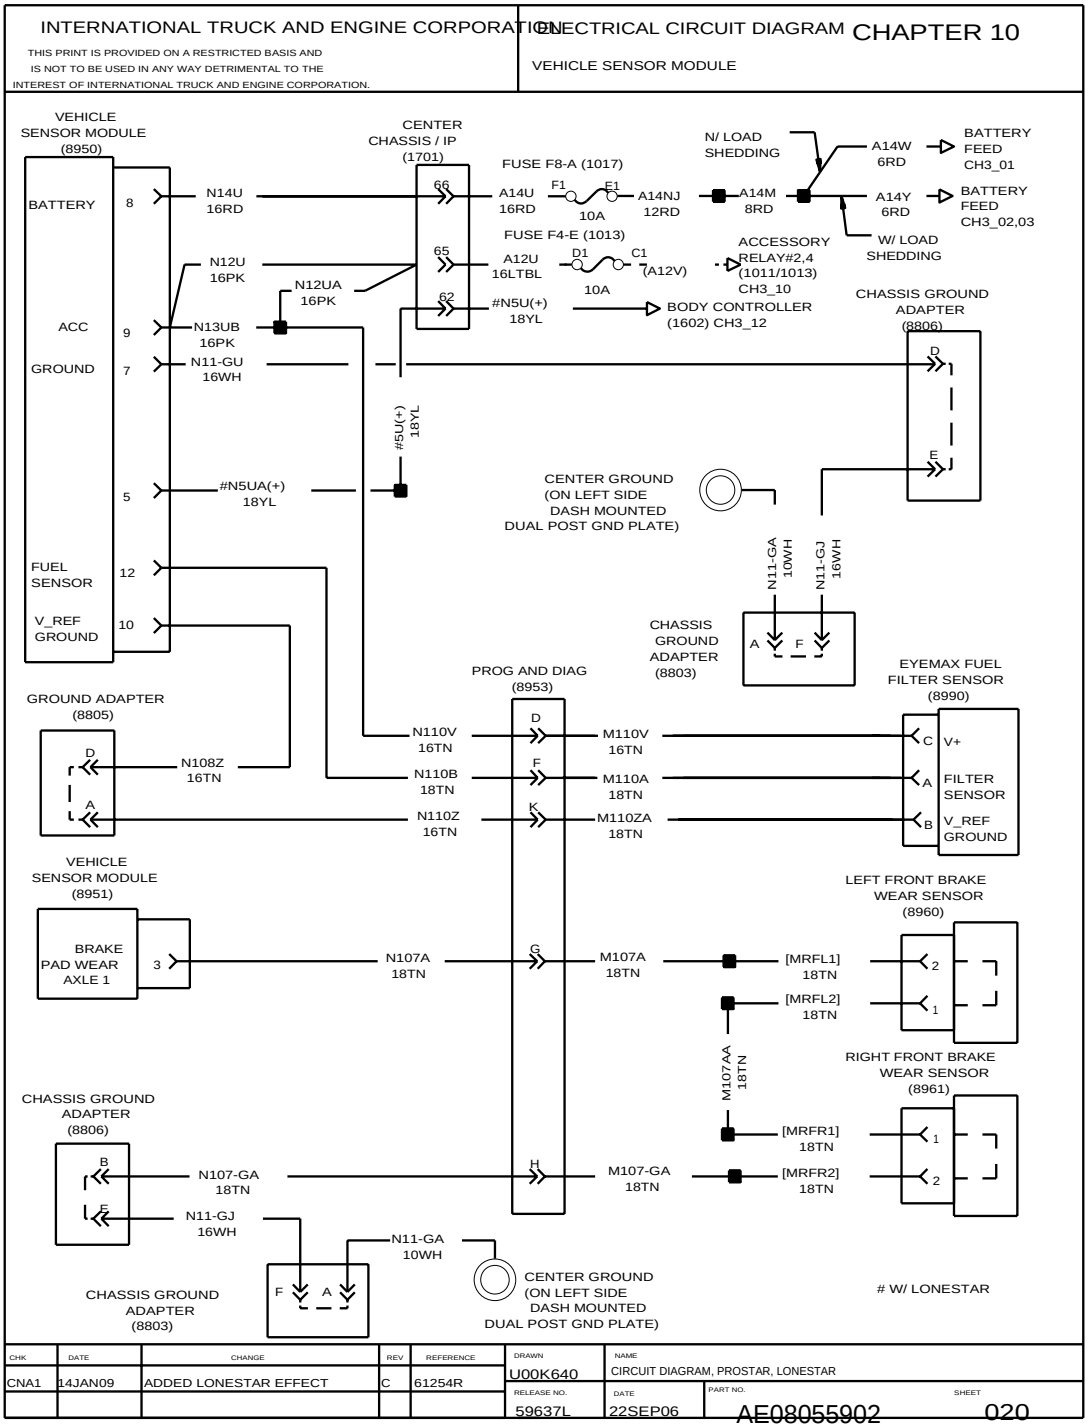


Figure 178 Vehicle Sensor Module

https://truckmanualshub.com/

10.22. VEHICLE SENSOR MODULE, P. 21

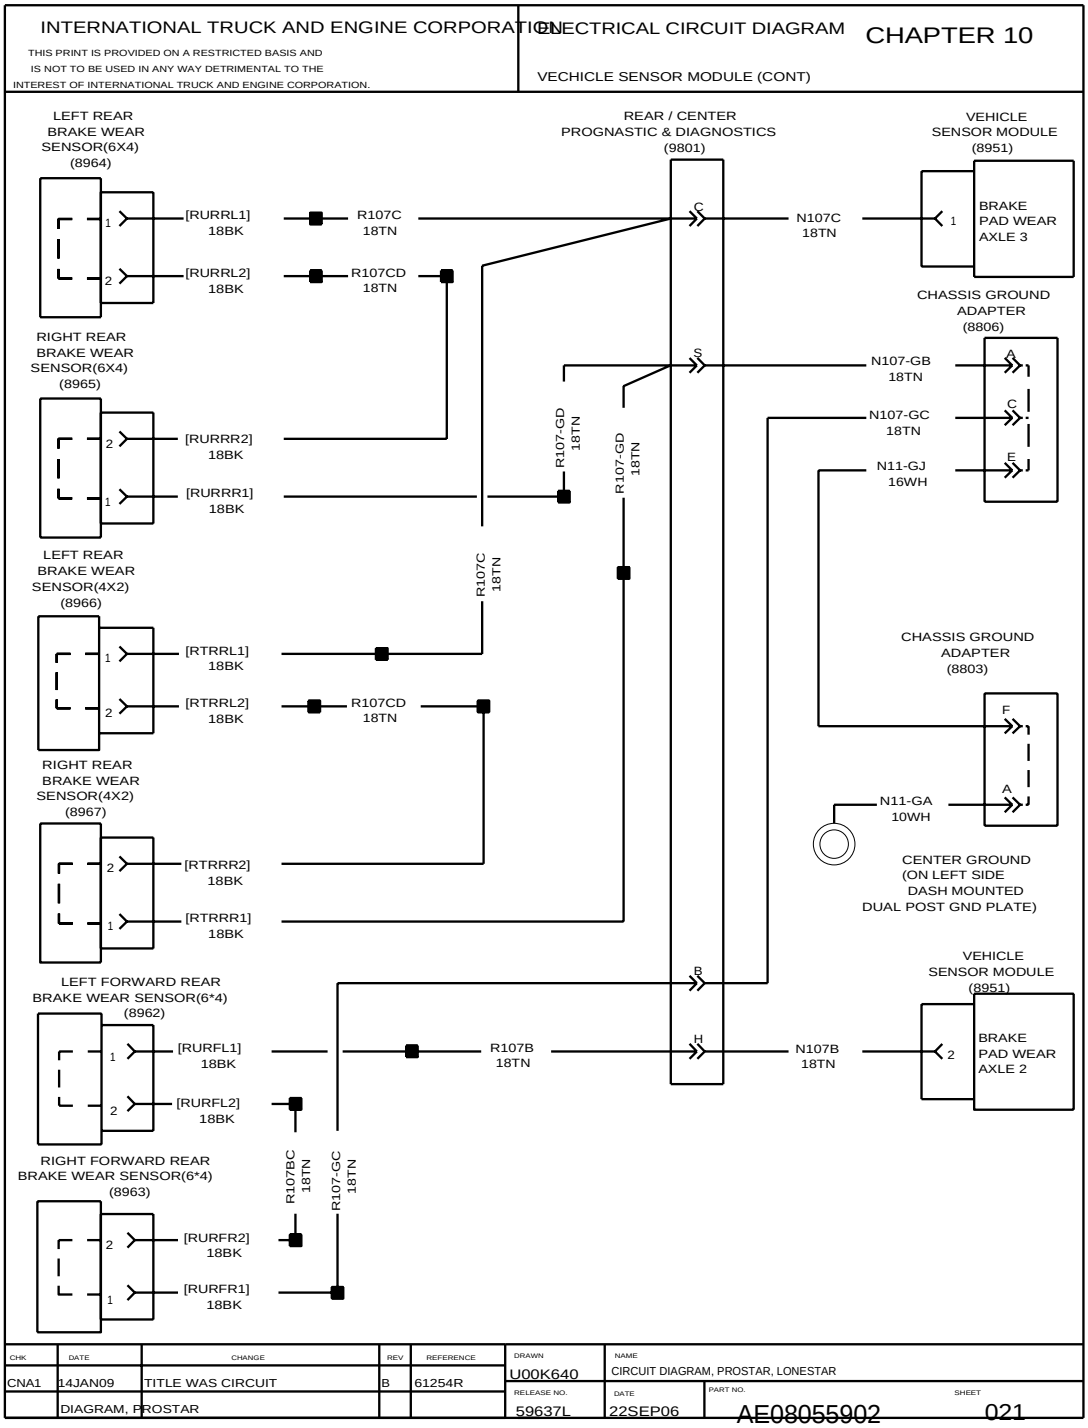


Figure 179 Vehicle Sensor Module

https://truckmanualshub.com/

10.23. BRAKE SENSOR — WEAR/STROKE, P. 22

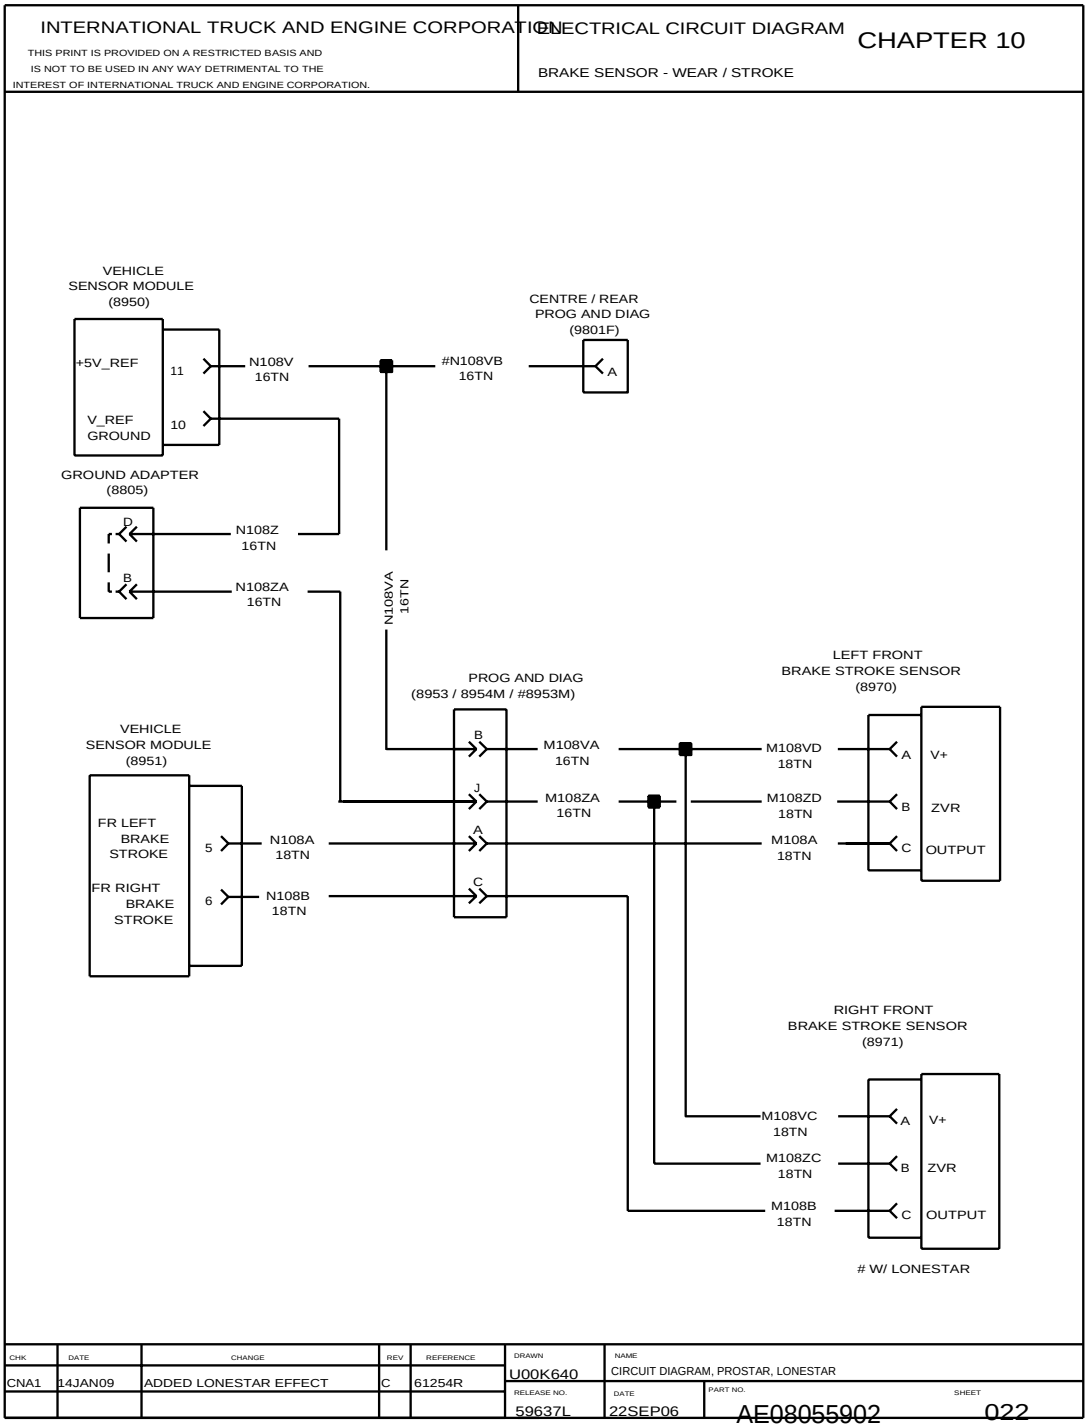


Figure 180 Brake Sensor — Wear/Stroke

https://truckmanualshub.com/

10.24. BRAKE SENSOR — WEAR/STROKE, P. 23

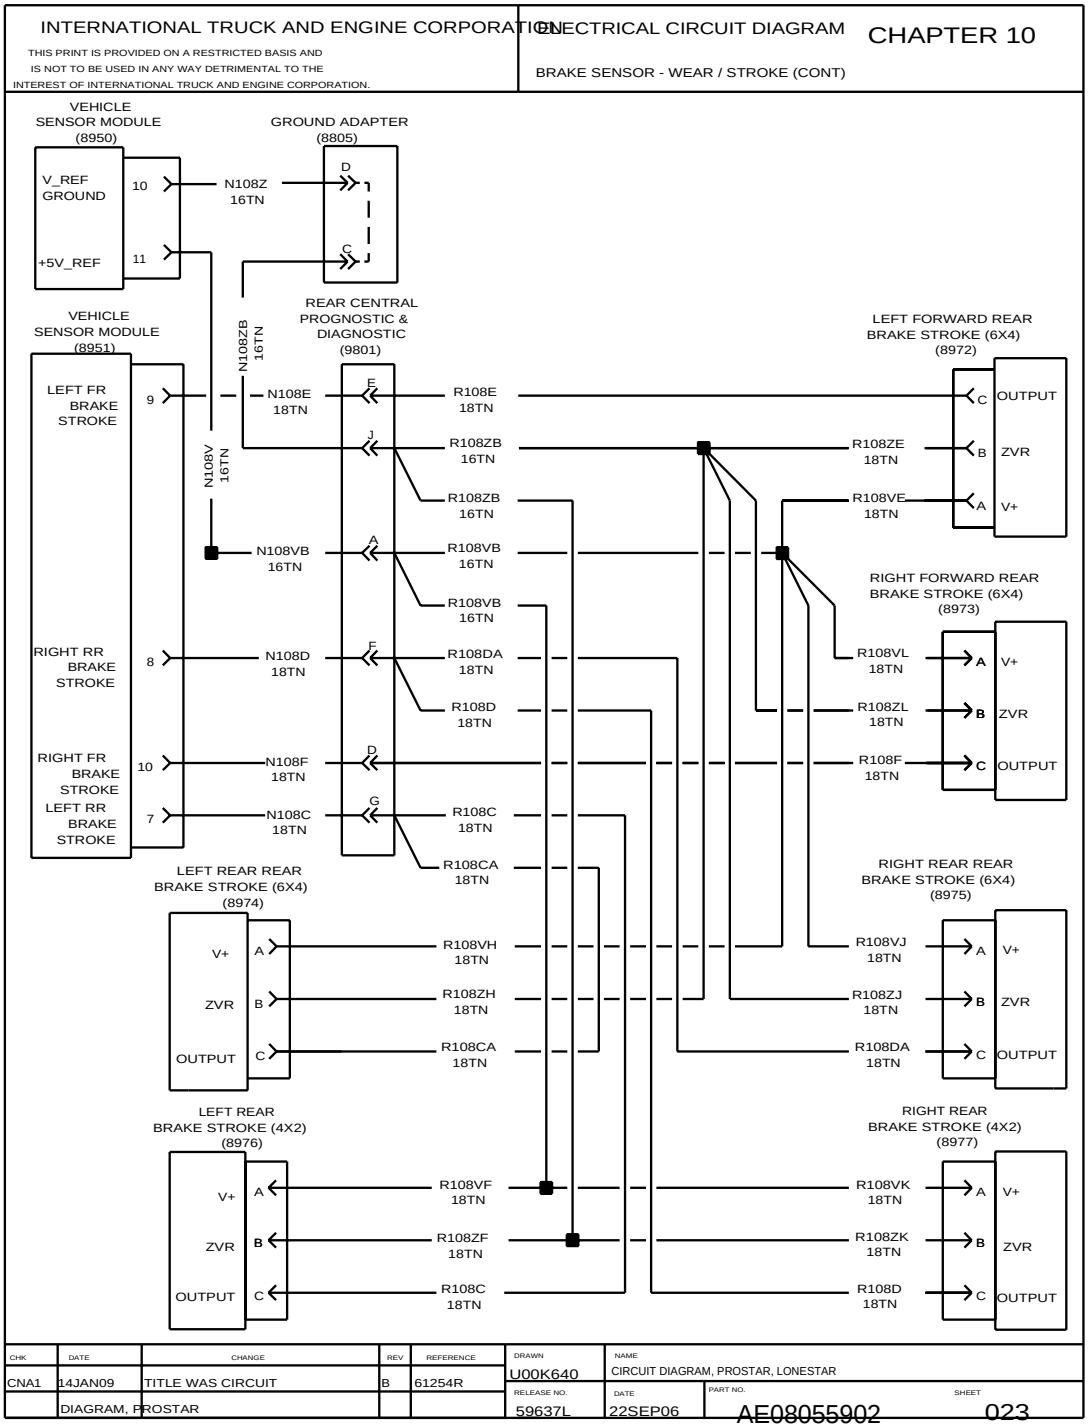


Figure 181 Brake Sensor — Wear/Stroke

https://truckmanualshub.com/

11. TRANSMISSION CONTROL MODULE (CHAPTER 11)

11.1. EATON AUTOSHIFT AND ULTRASHIFT TRANSMISSION, P. 1

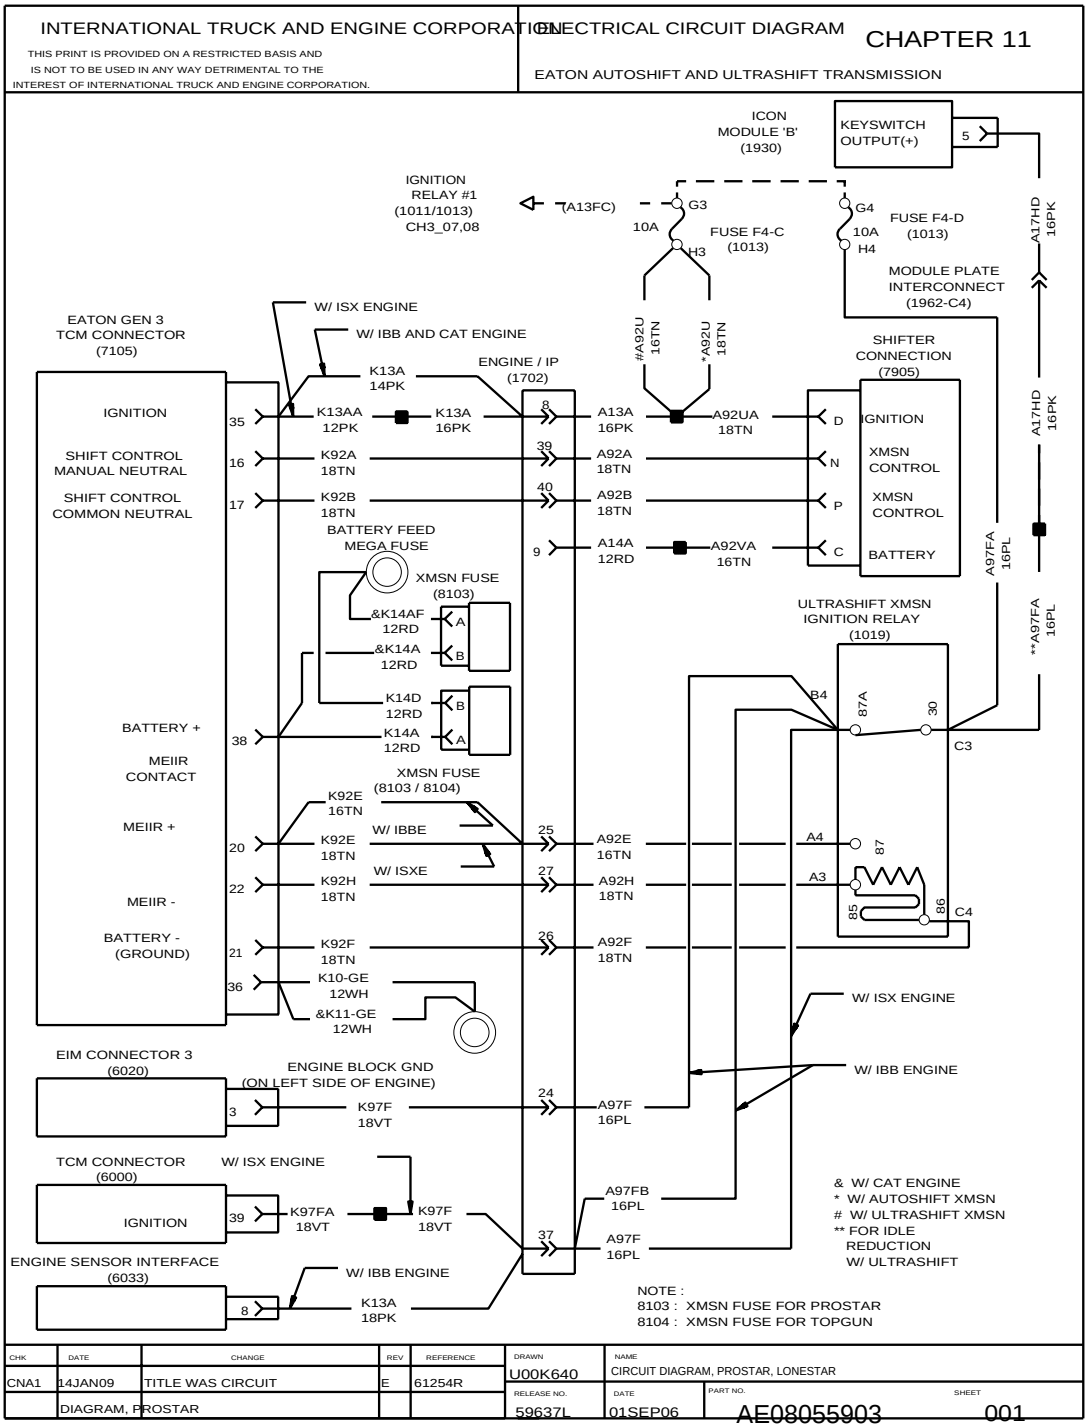


Figure 182 Eaton Autoshift and Ultrashift Transmission

https://truckmanualshub.com/

11.2. COLUMN SHIFTER AND MERITOR G TRANSMISSION, P. 2

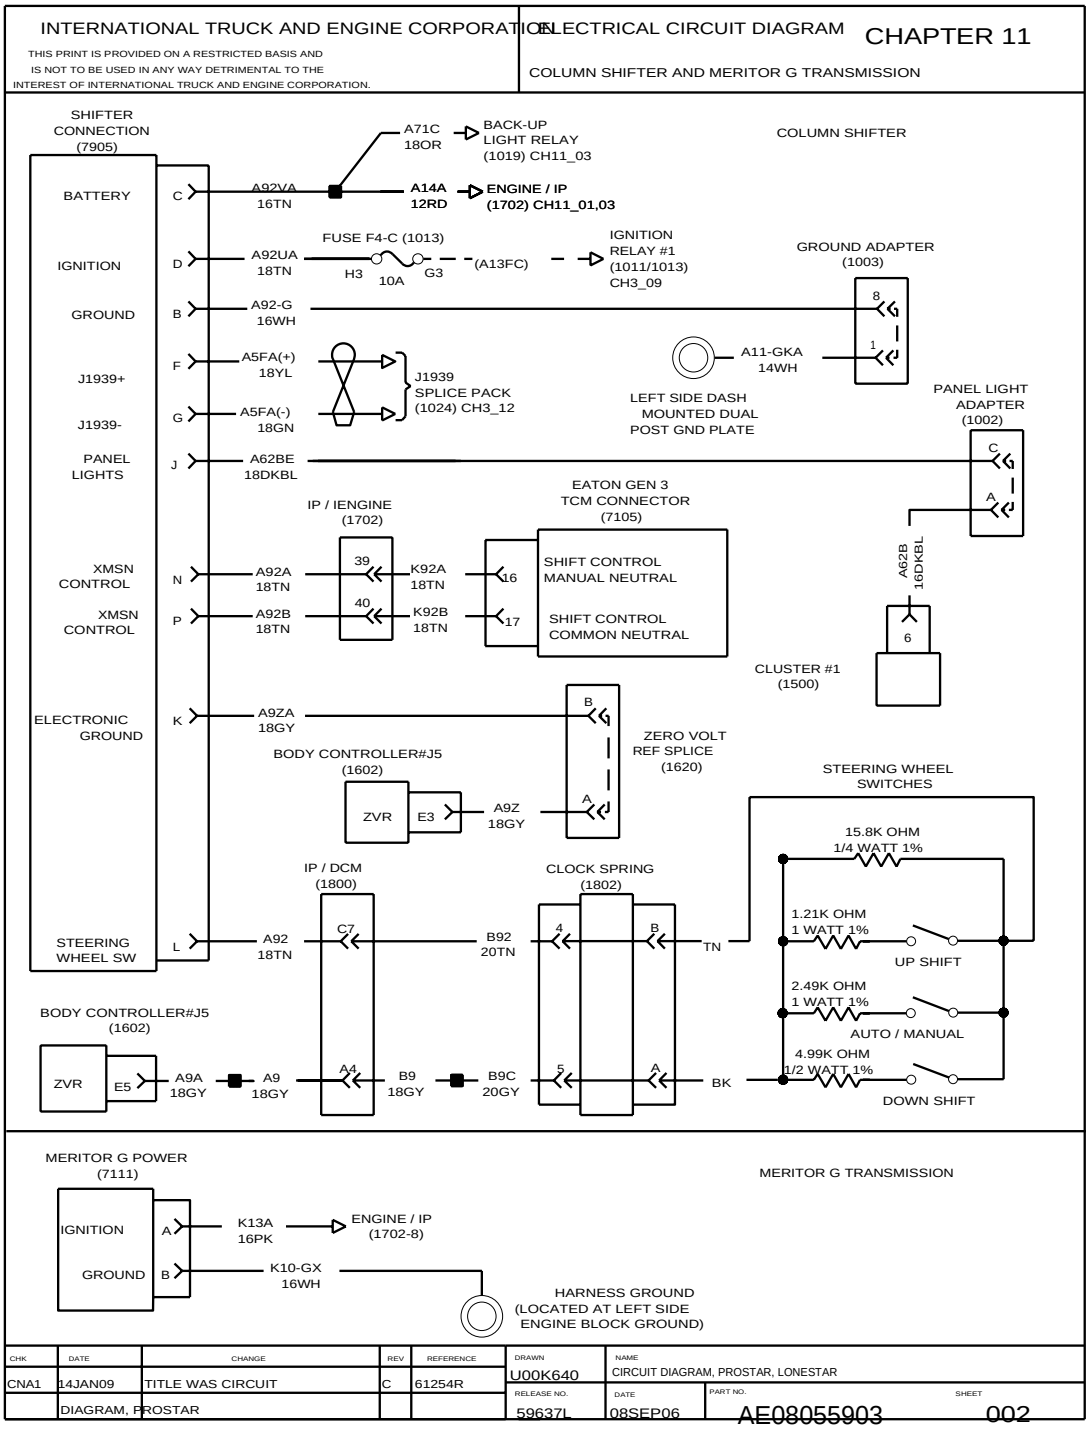


Figure 183 Column Shifter and Meritor G Transmission

https://truckmanualshub.com/

11.3. FREEDOMLINE TRANSMISSION, P. 3

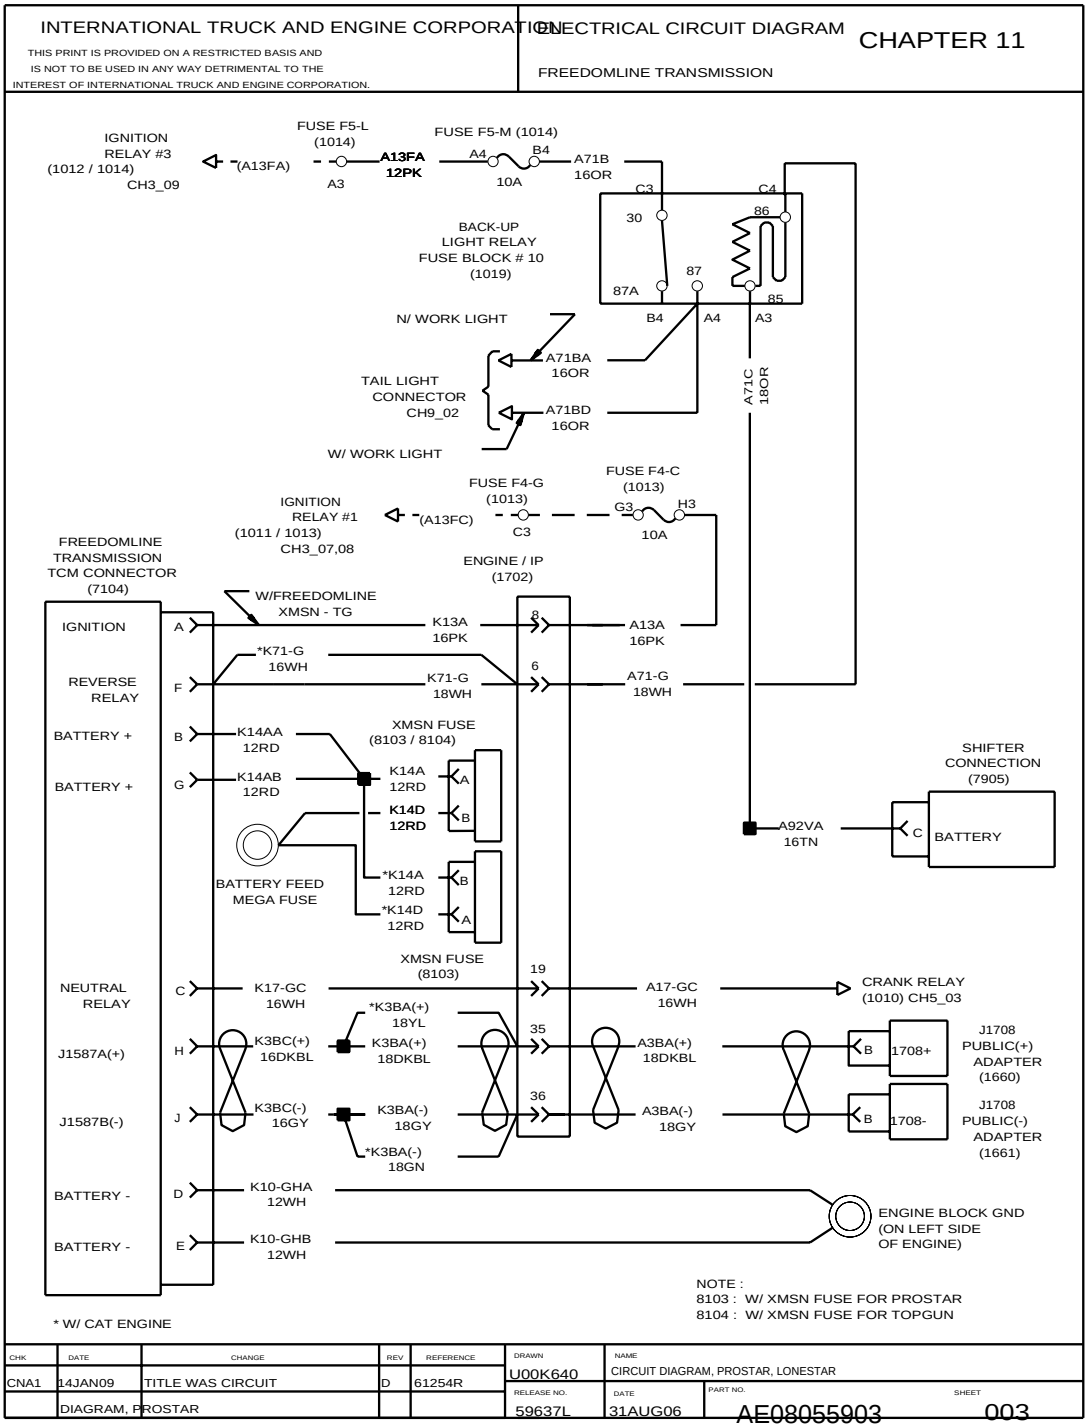


Figure 184 Freedomline Transmission

https://truckmanualshub.com/

12. HVAC (CHAPTER 12)

12.1. AIR CONDITIONING, P. 1

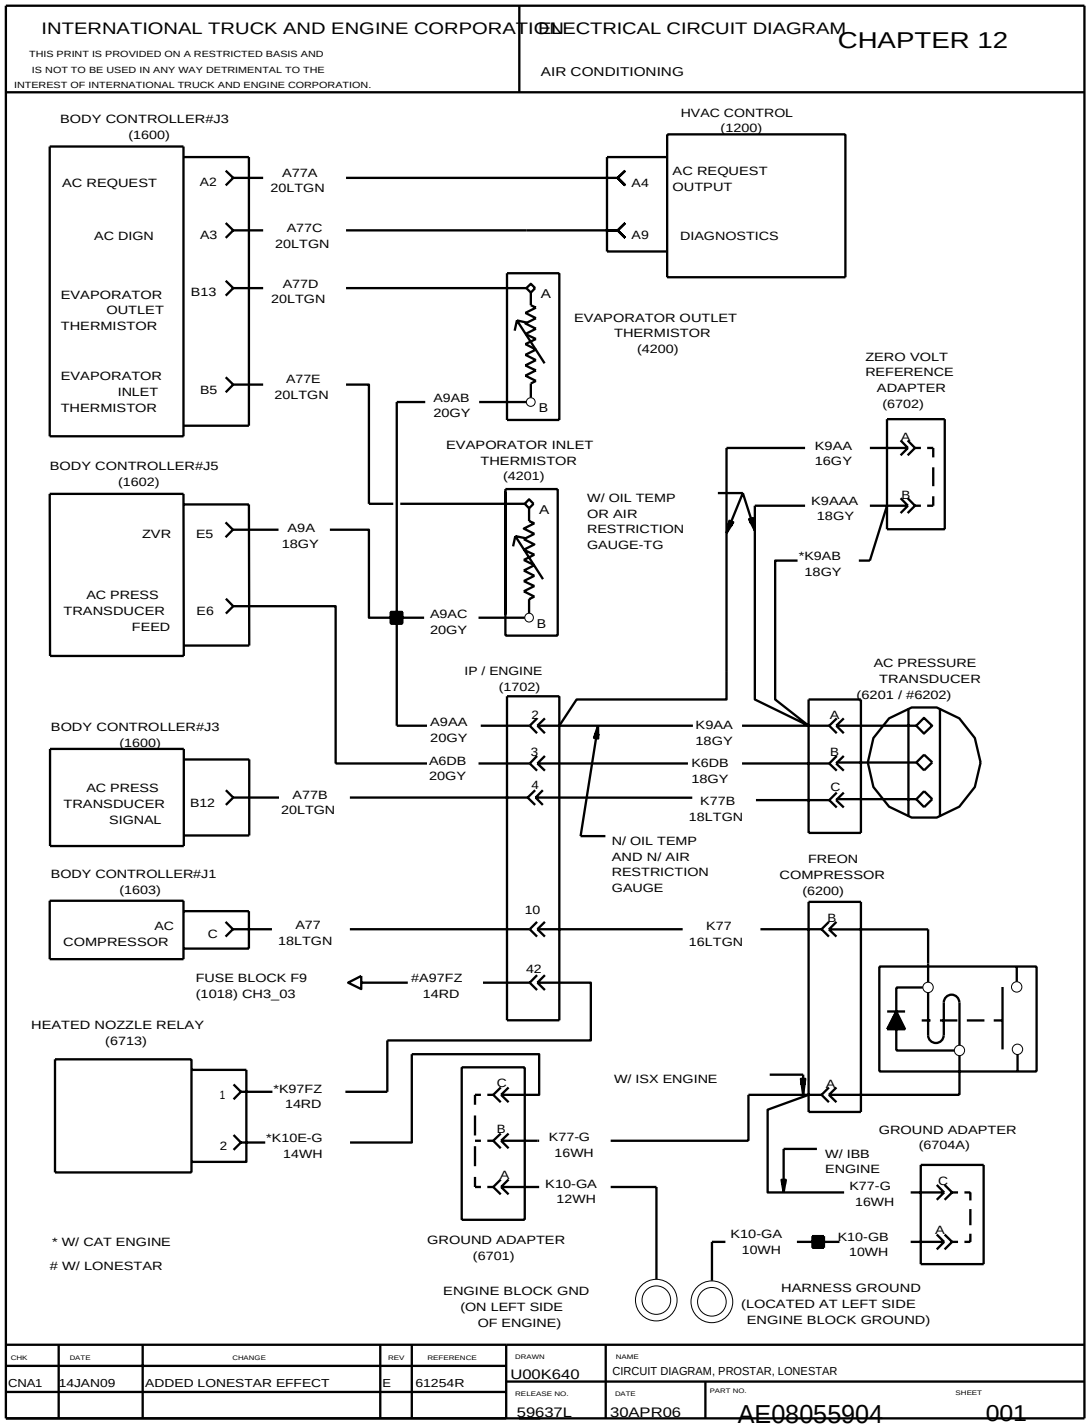


Figure 185 Air Conditioning

https://truckmanualshub.com/

12.2. HVAC SYSTEM — CAB, P. 2

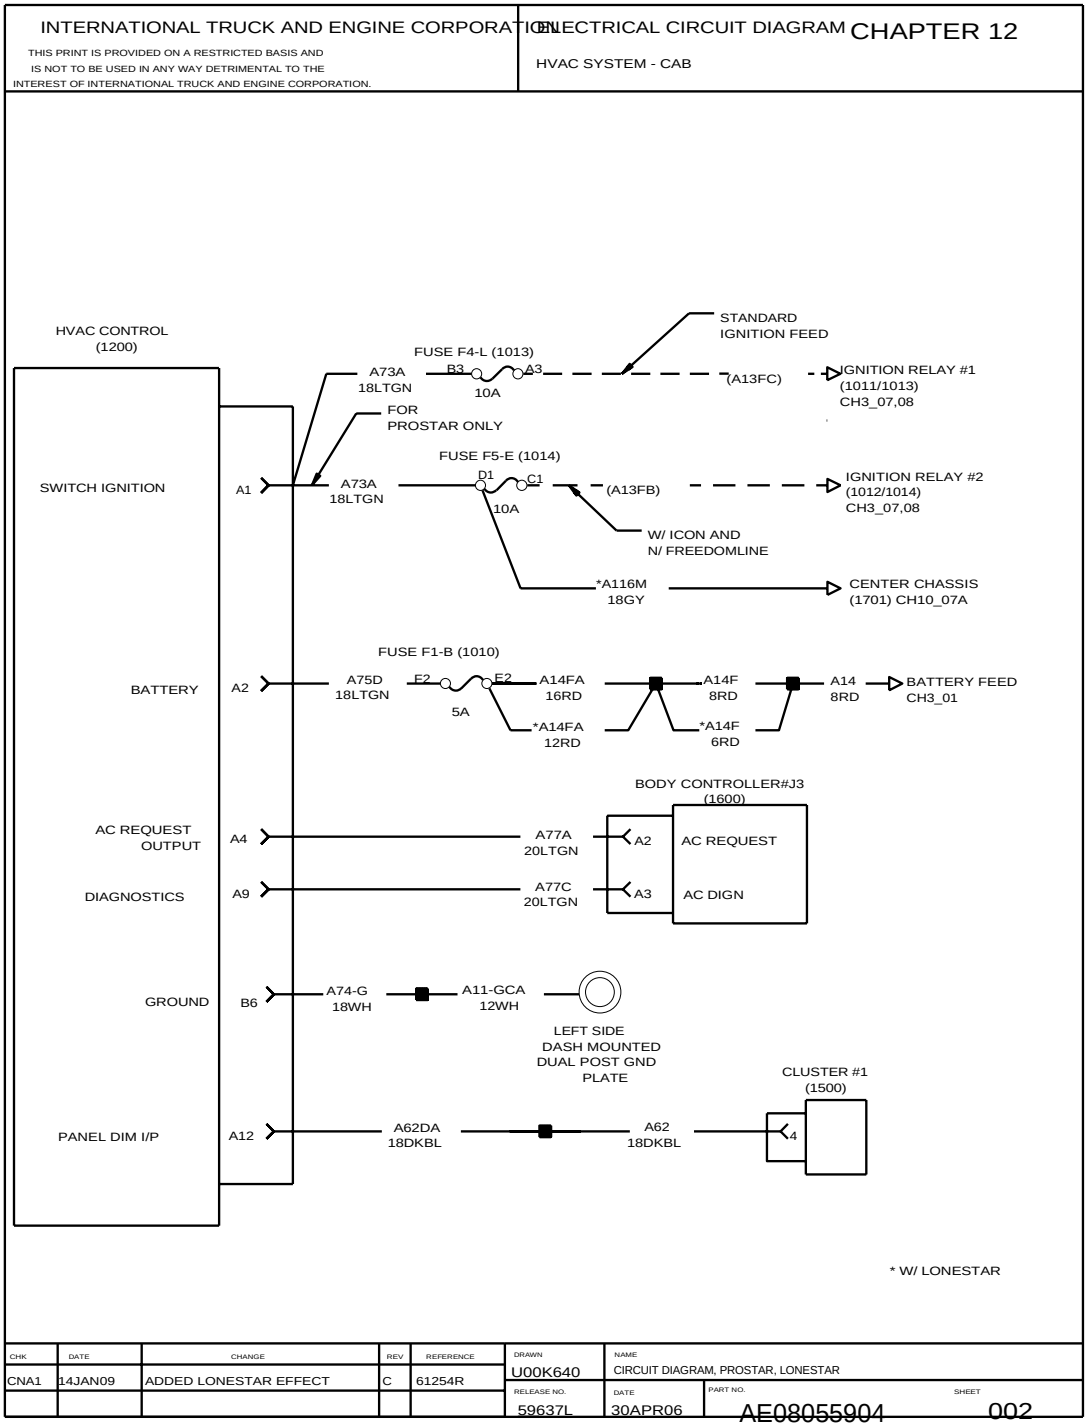


Figure 186 HVAC System — Cab

https://truckmanualshub.com/

12.3. HVAC SYSTEM — CAB, P. 3

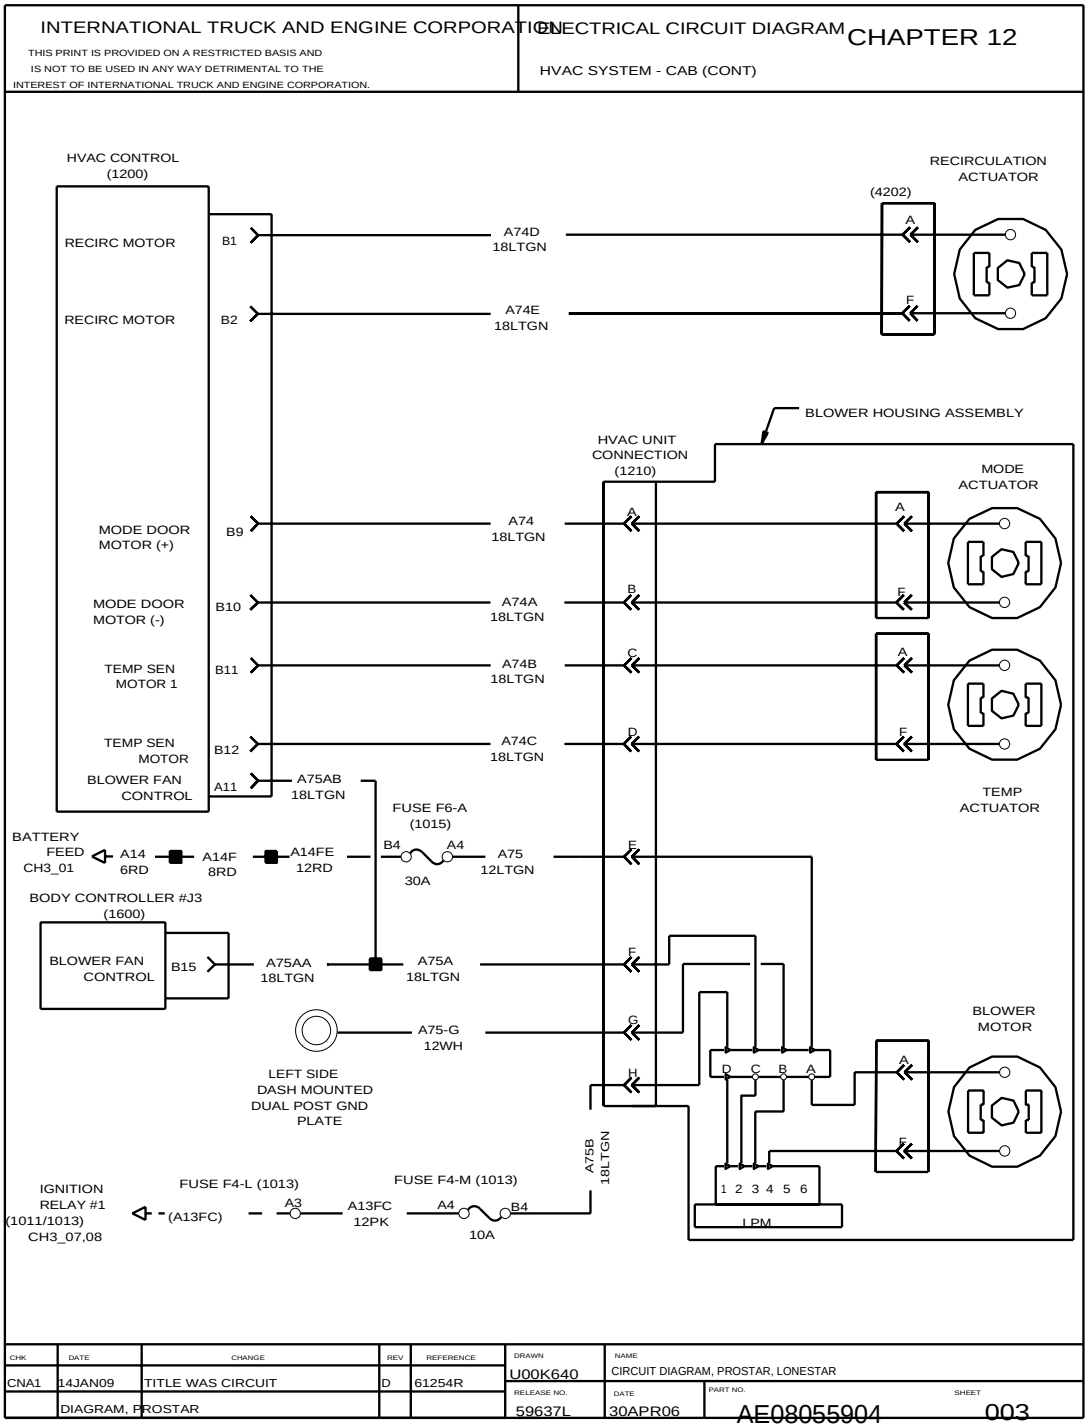


Figure 187 HVAC System — Cab

https://truckmanualshub.com/

12.4. HVAC SYSTEM — SLEEPER, P. 4

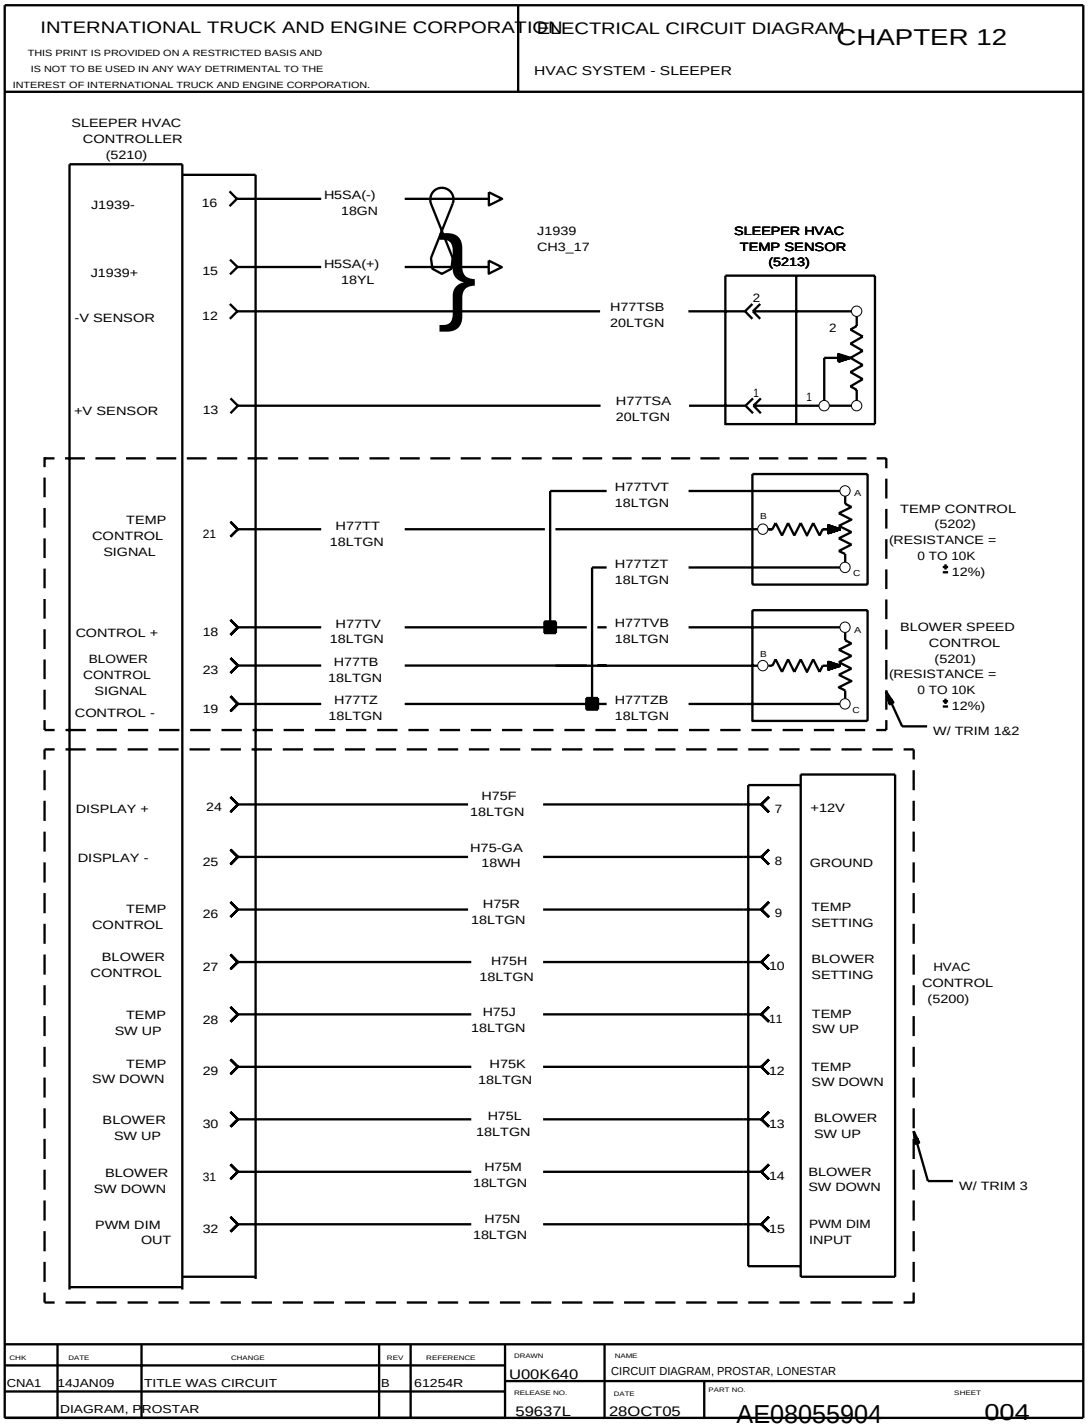


Figure 188 HVAC System — Sleeper

https://truckmanualshub.com/

12.5. HVAC SYSTEM — SLEEPER, P. 4A

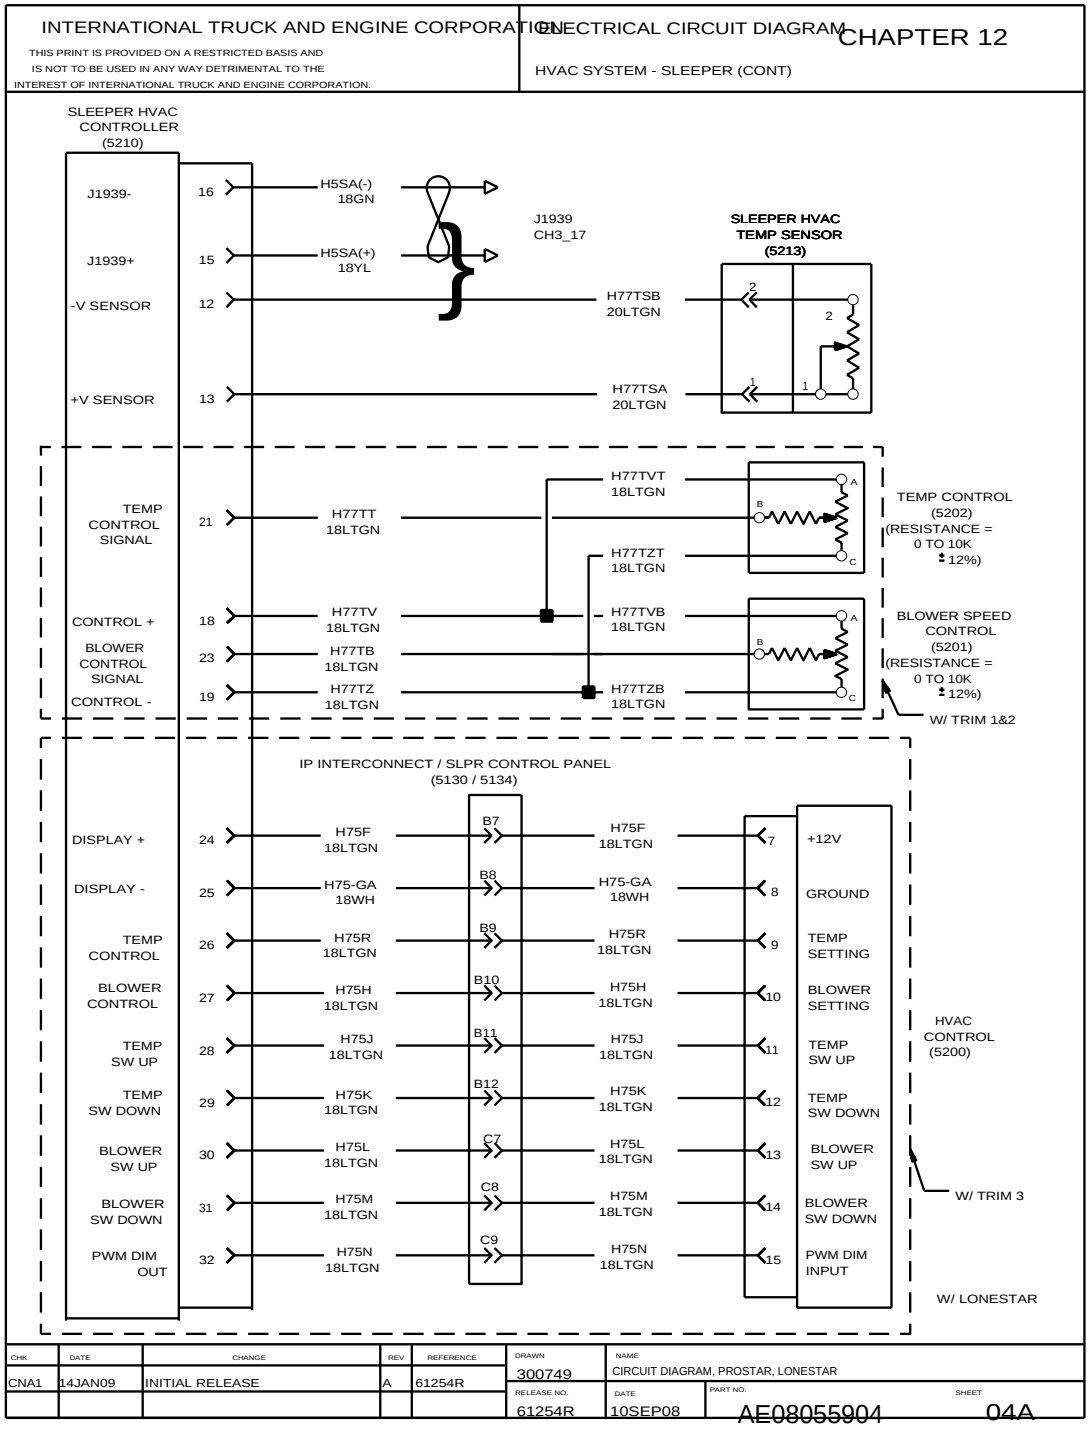


Figure 189 HVAC System — Sleeper

https://truckmanualshub.com/

12.6. HVAC SYSTEM — SLEEPER, P. 5

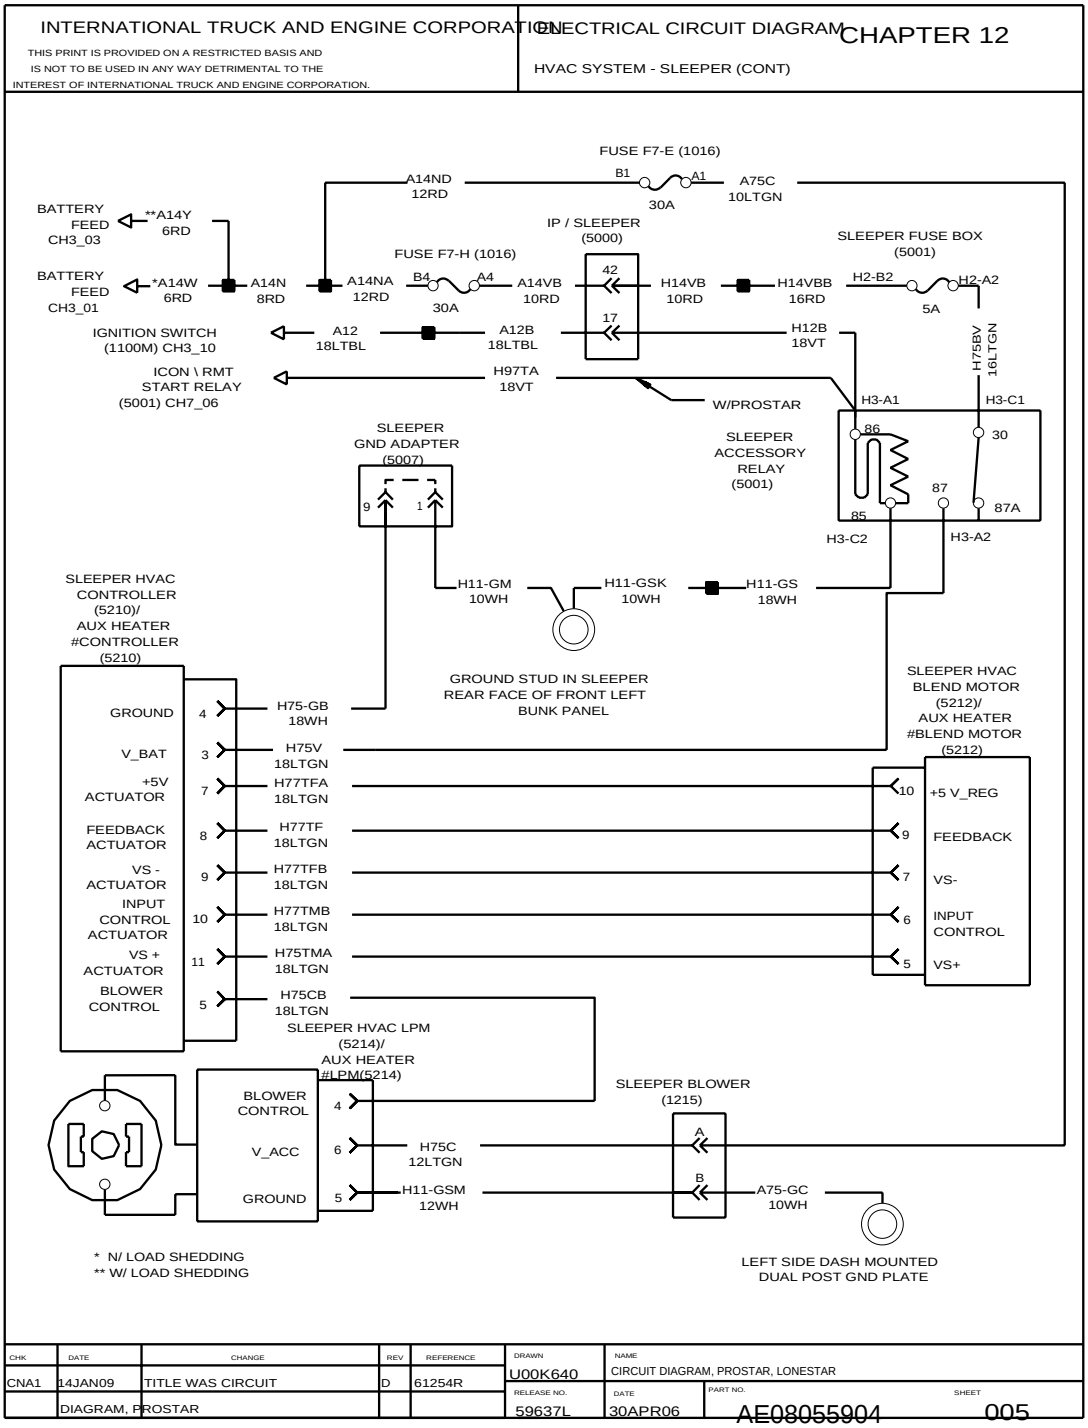


Figure 190 HVAC System — Sleeper

https://truckmanualshub.com/

12.7. NO IDLE HEAT AND HVAC — SWITCHES, P. 6

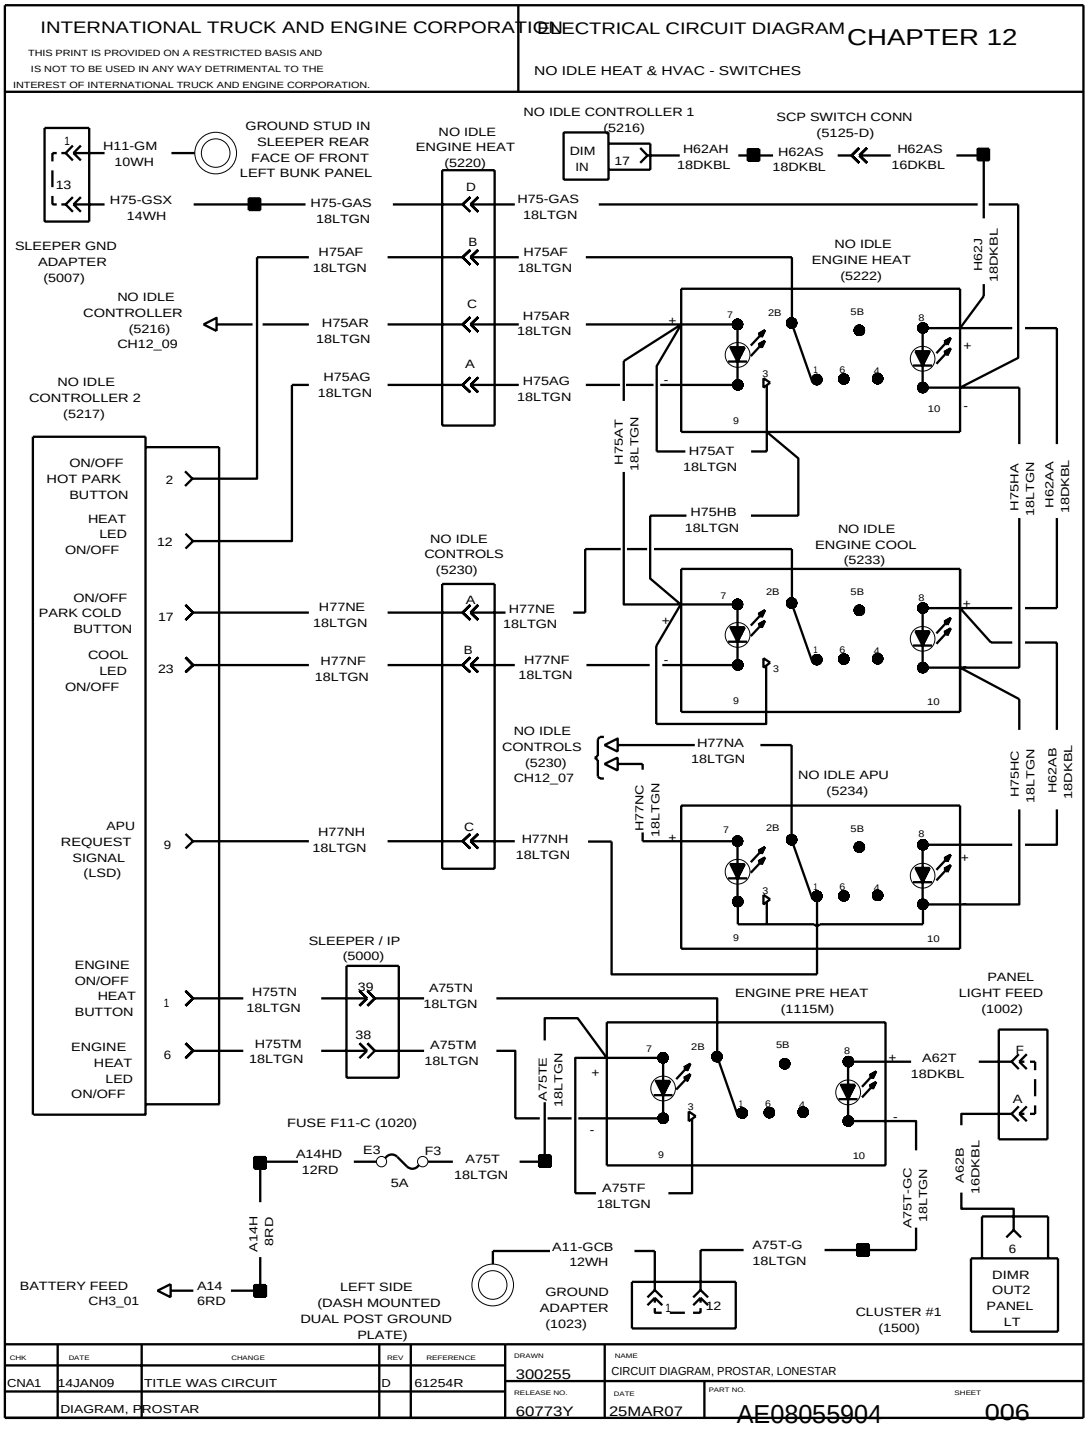


Figure 191 No Idle Heat and HVAC — Switches

https://truckmanualshub.com/

12.8. NO IDLE HEAT AND HVAC — APU, P. 7

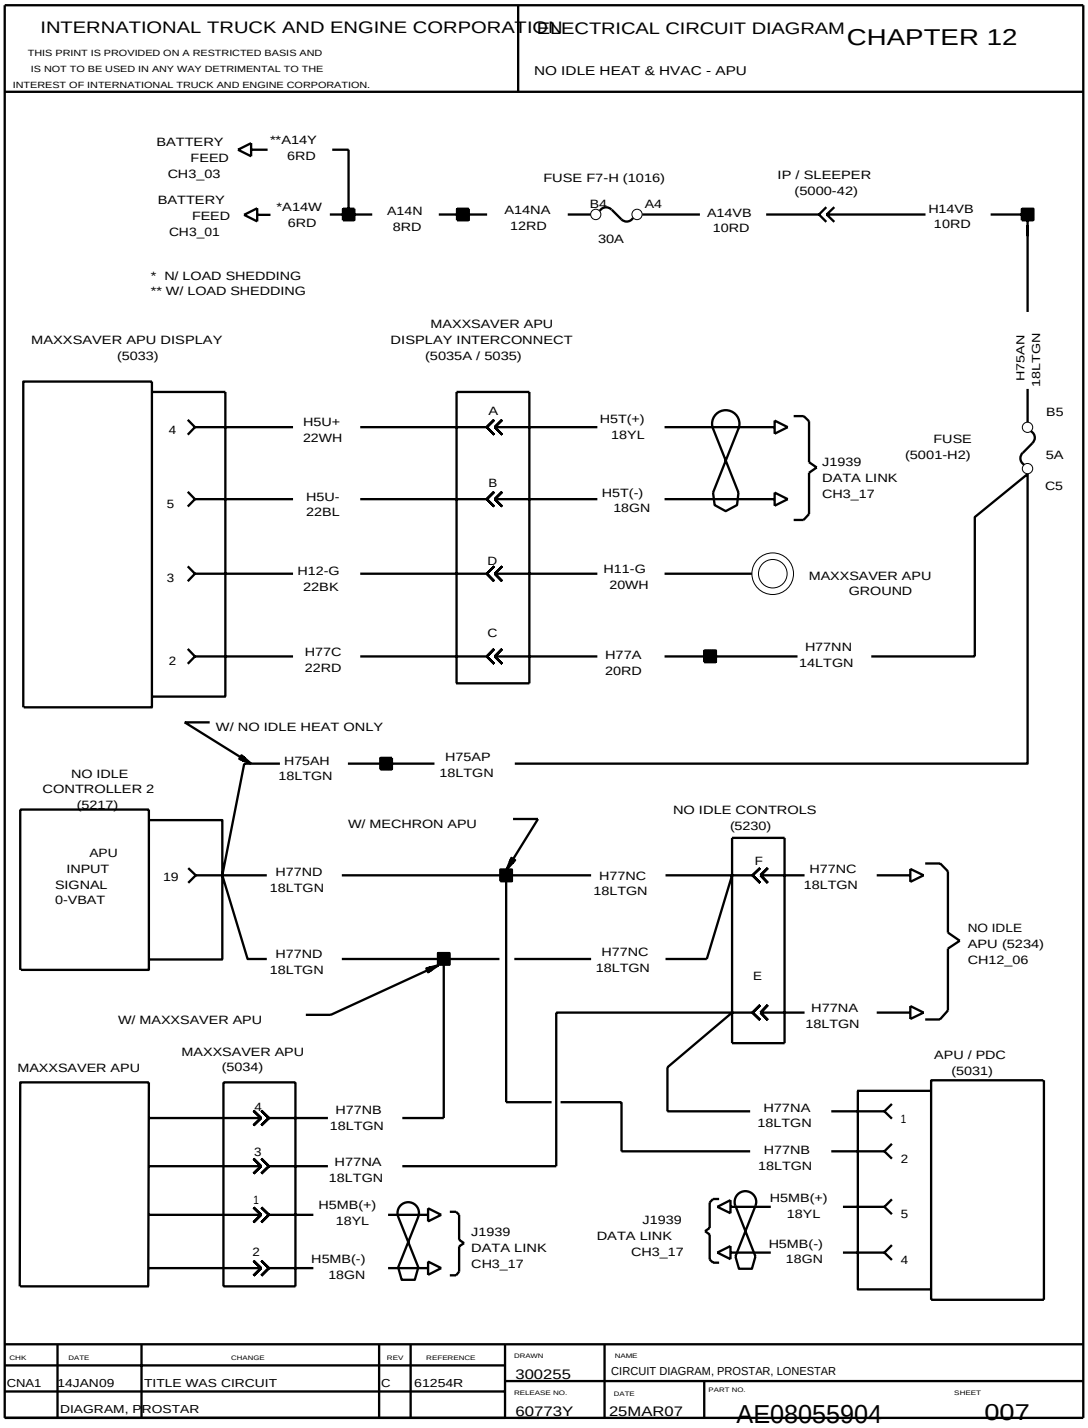


Figure 192 No Idle Heat and HVAC — APU

https://truckmanualshub.com/

12.9. NO IDLE HEAT AND HVAC — SENSORS AND HVAC CONTROL, P. 8

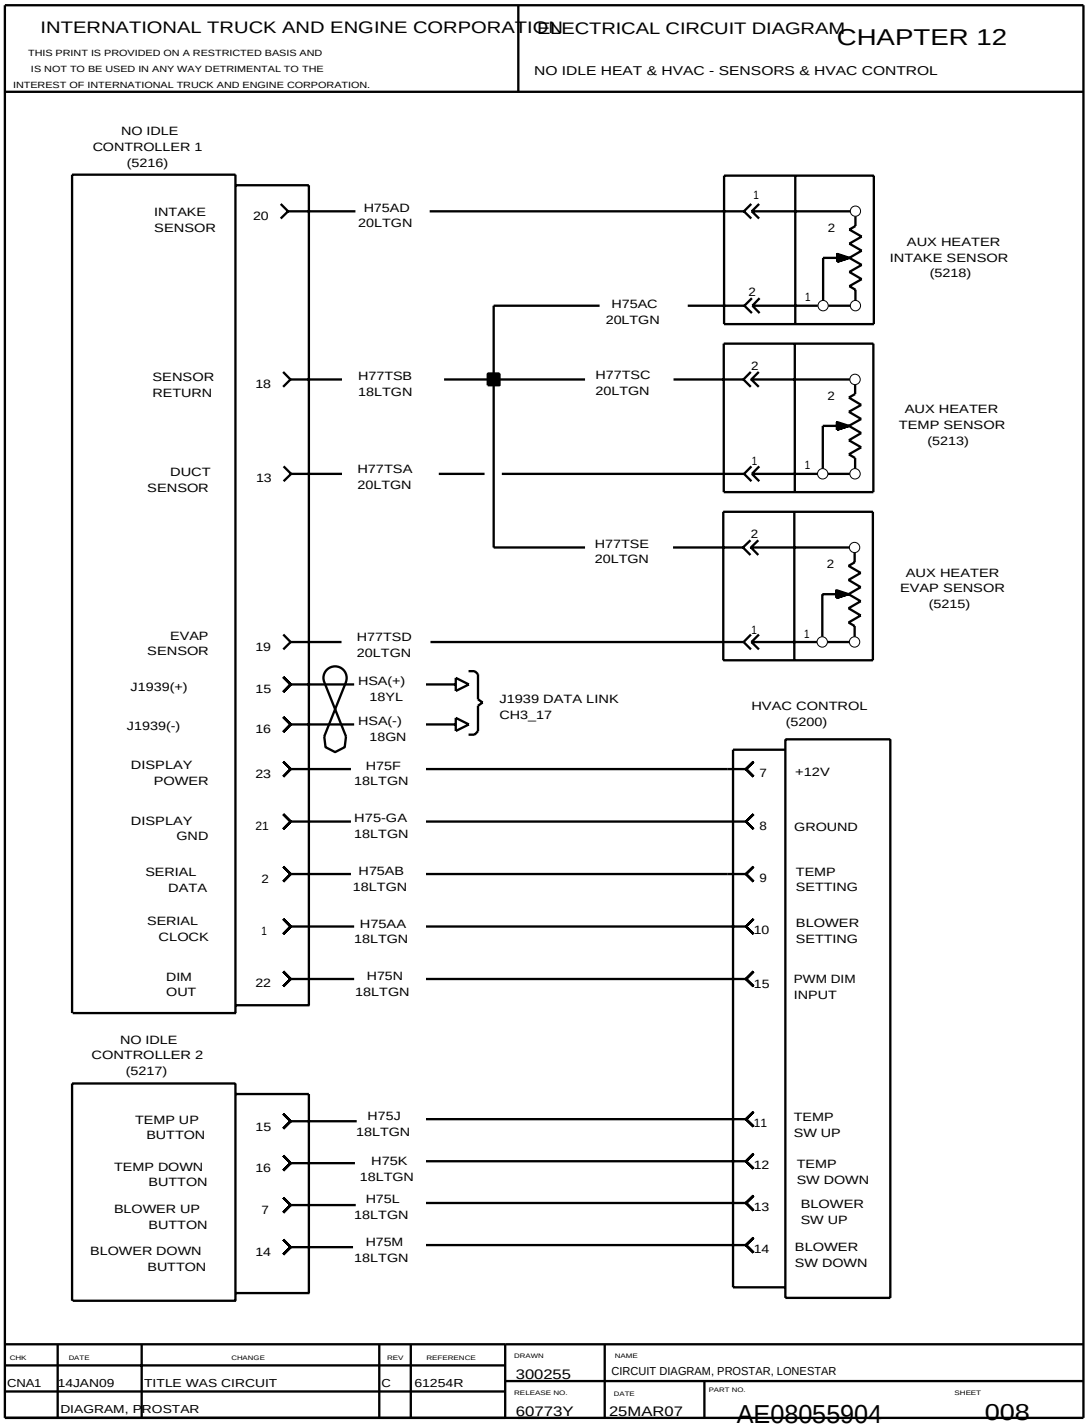


Figure 193 No Idle Heat and HVAC — Sensors and HVAC Control

https://truckmanualshub.com/

12.10. NO IDLE HEAT AND HVAC — POWER SUPPLY, P. 9

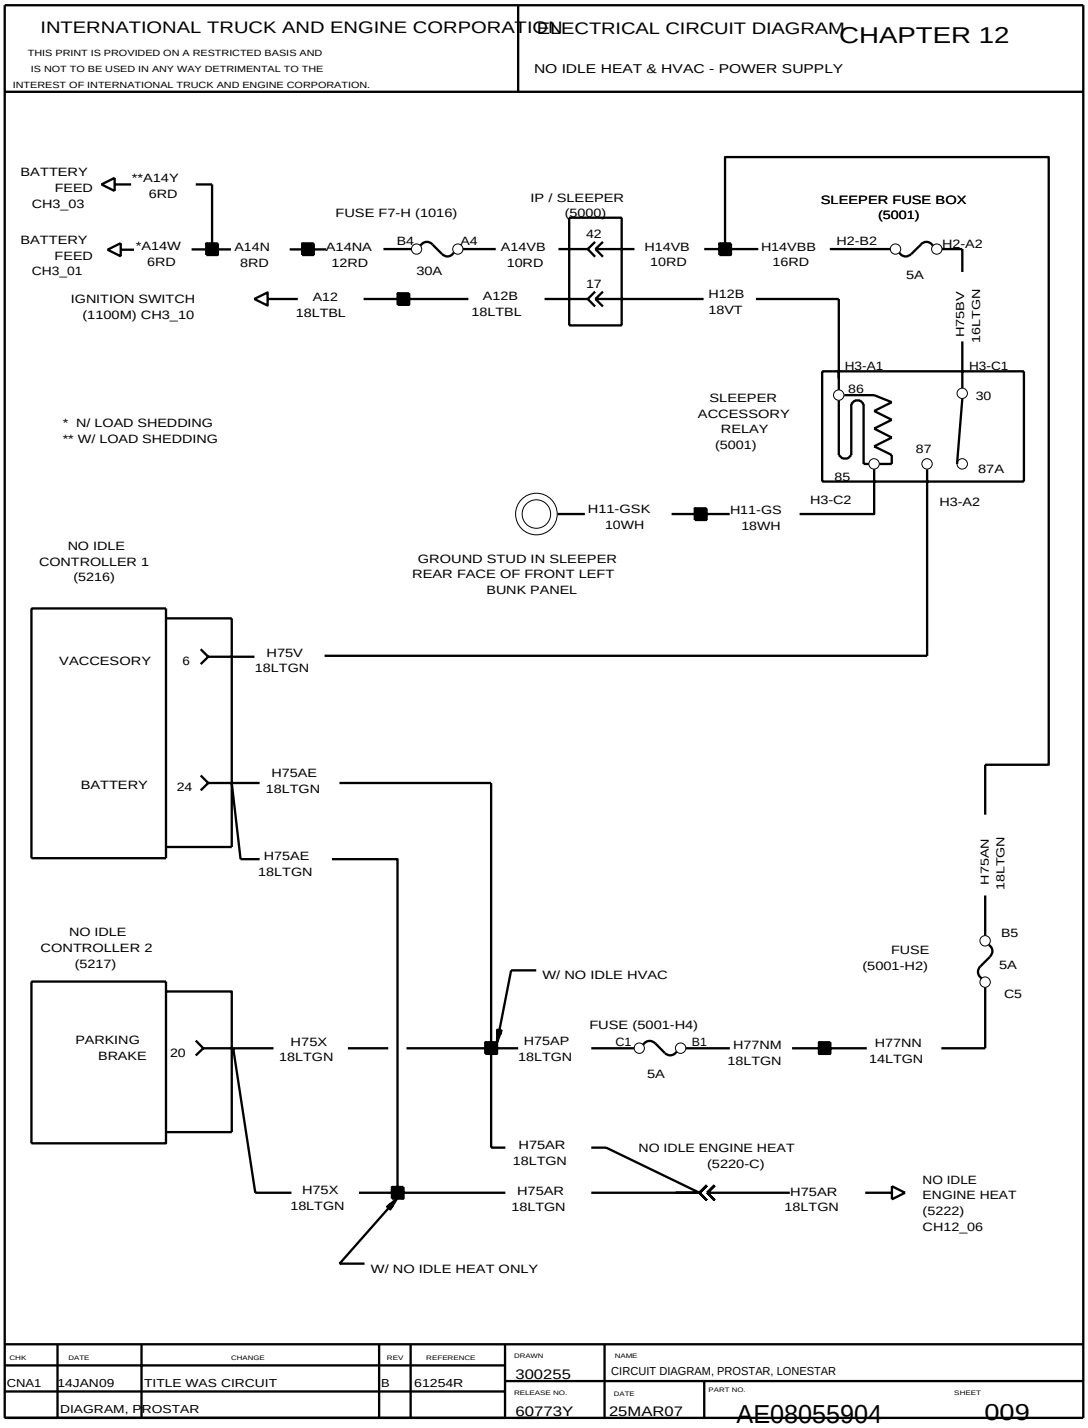


Figure 194 No Idle Heat and HVAC — Power Supply

https://truckmanualshub.com/

12.11. NO IDLE HEAT AND HVAC — HEAT VALVE, LPM AND BLEND MOTOR, P. 10

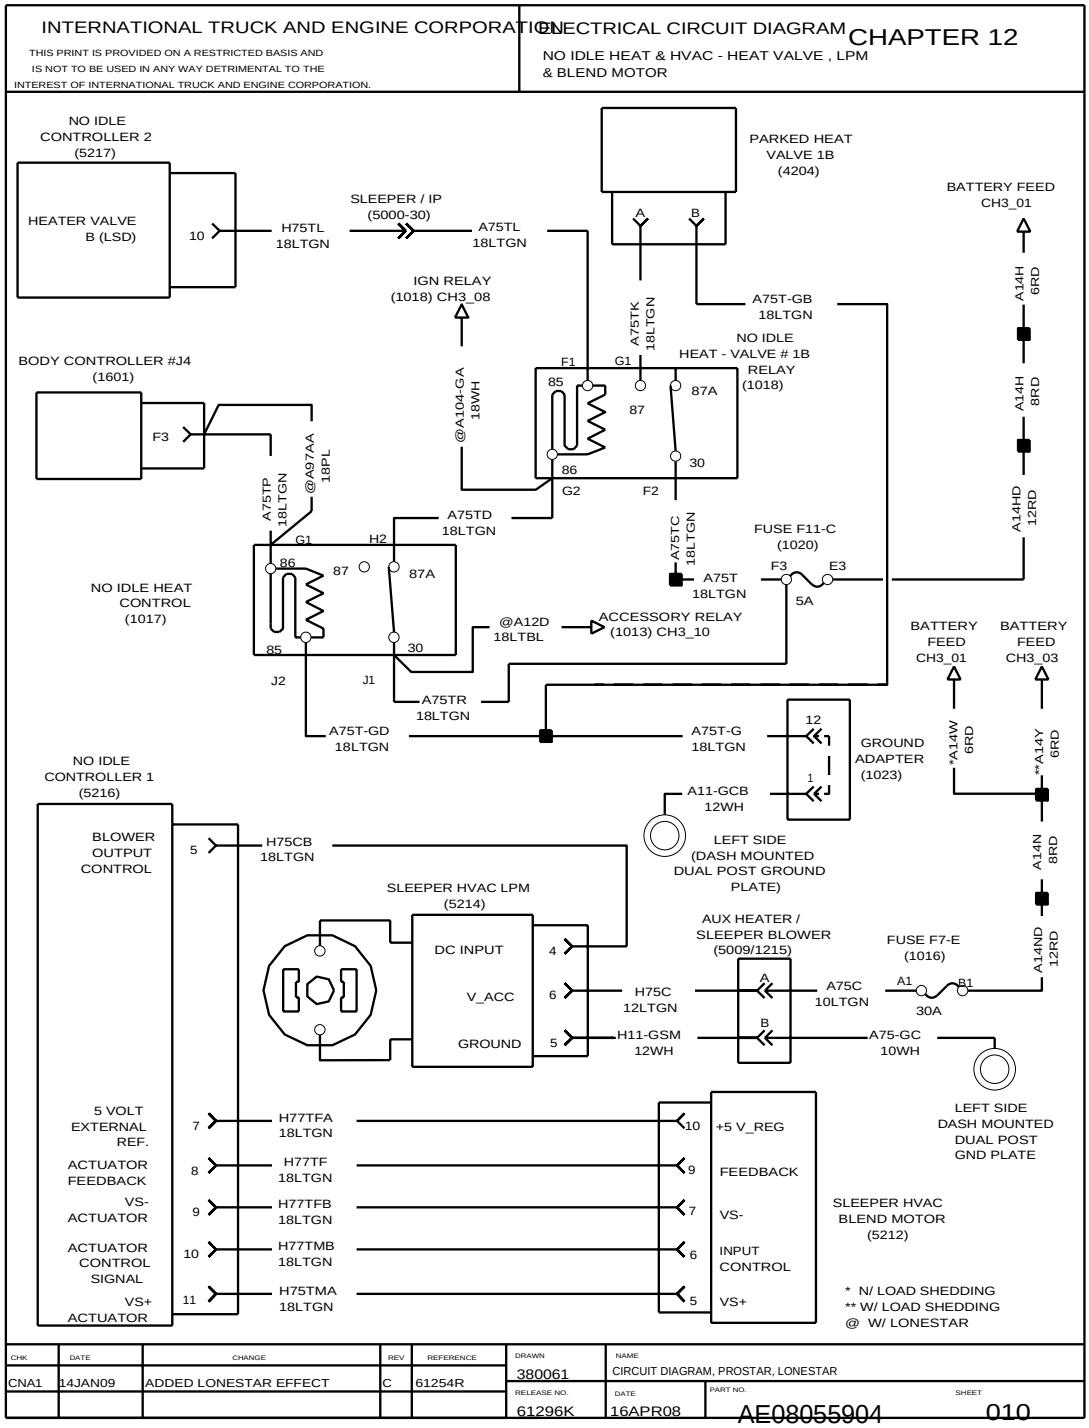


Figure 195 No Idle Heat and HVAC — Heat Valve, LPM and Blend Motor

https://truckmanualshub.com/

12.12. NO IDLE HEAT AND HVAC — FUEL FIRED HEATER AND A/C COMPRESSOR, P. 11

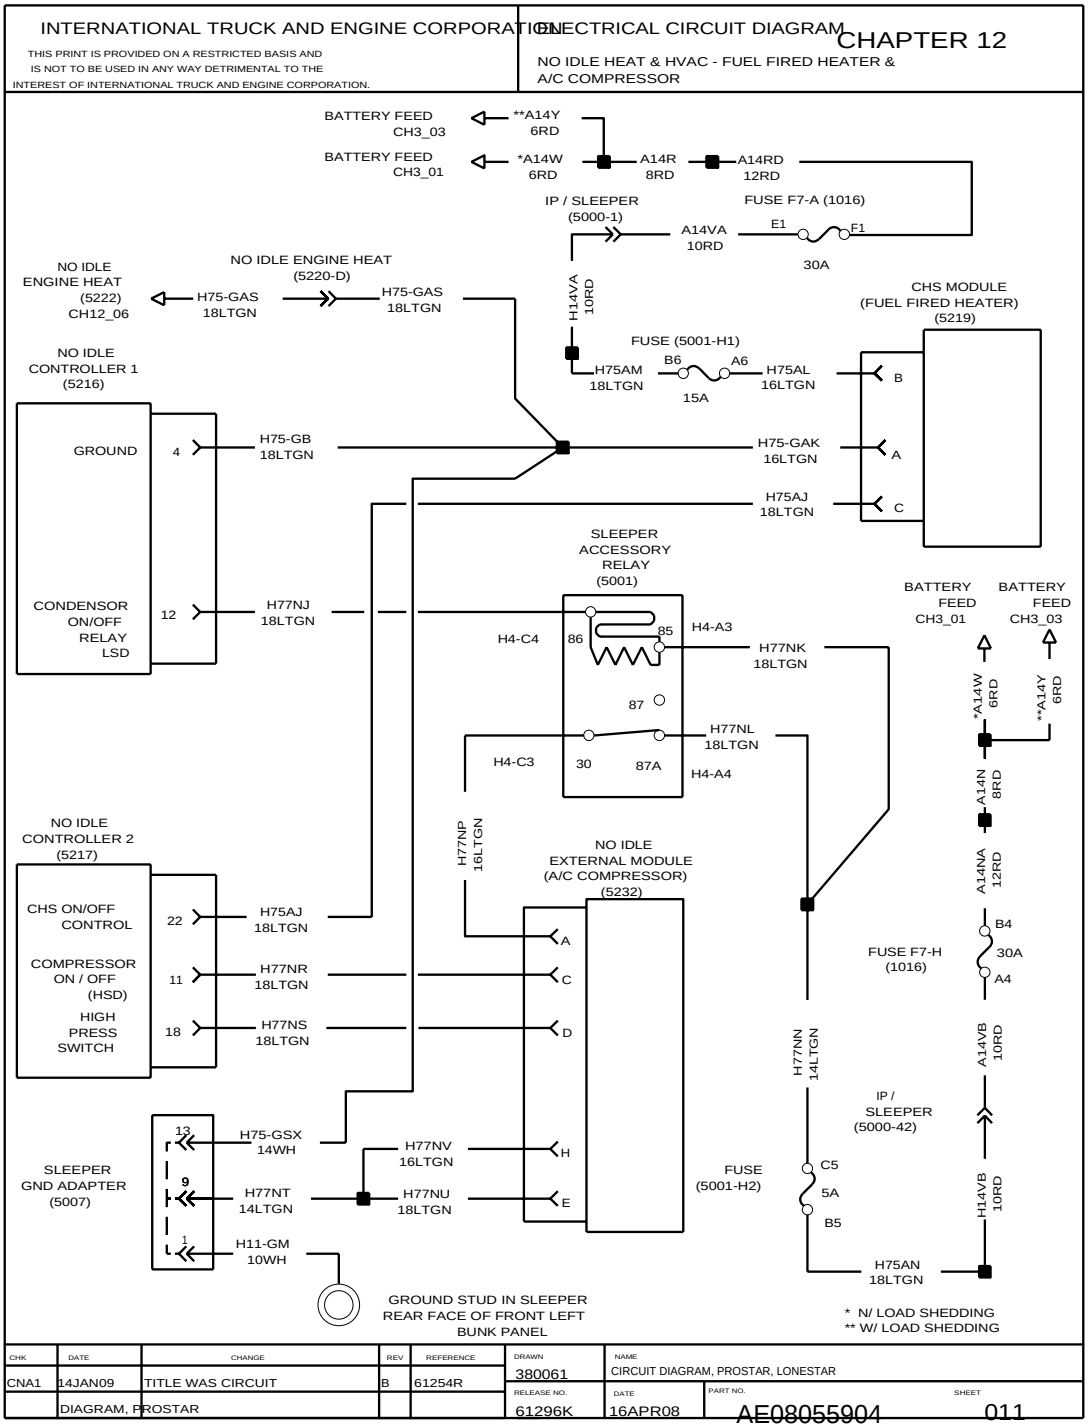


Figure 196 No Idle Heat and HVAC — Fuel Fired Heater and A/C Compressor

https://truckmanualshub.com/

12.13. NO IDLE HEATER, WEBASTO IN CAB FUEL FIRED HEATER W/LVD, P. 12

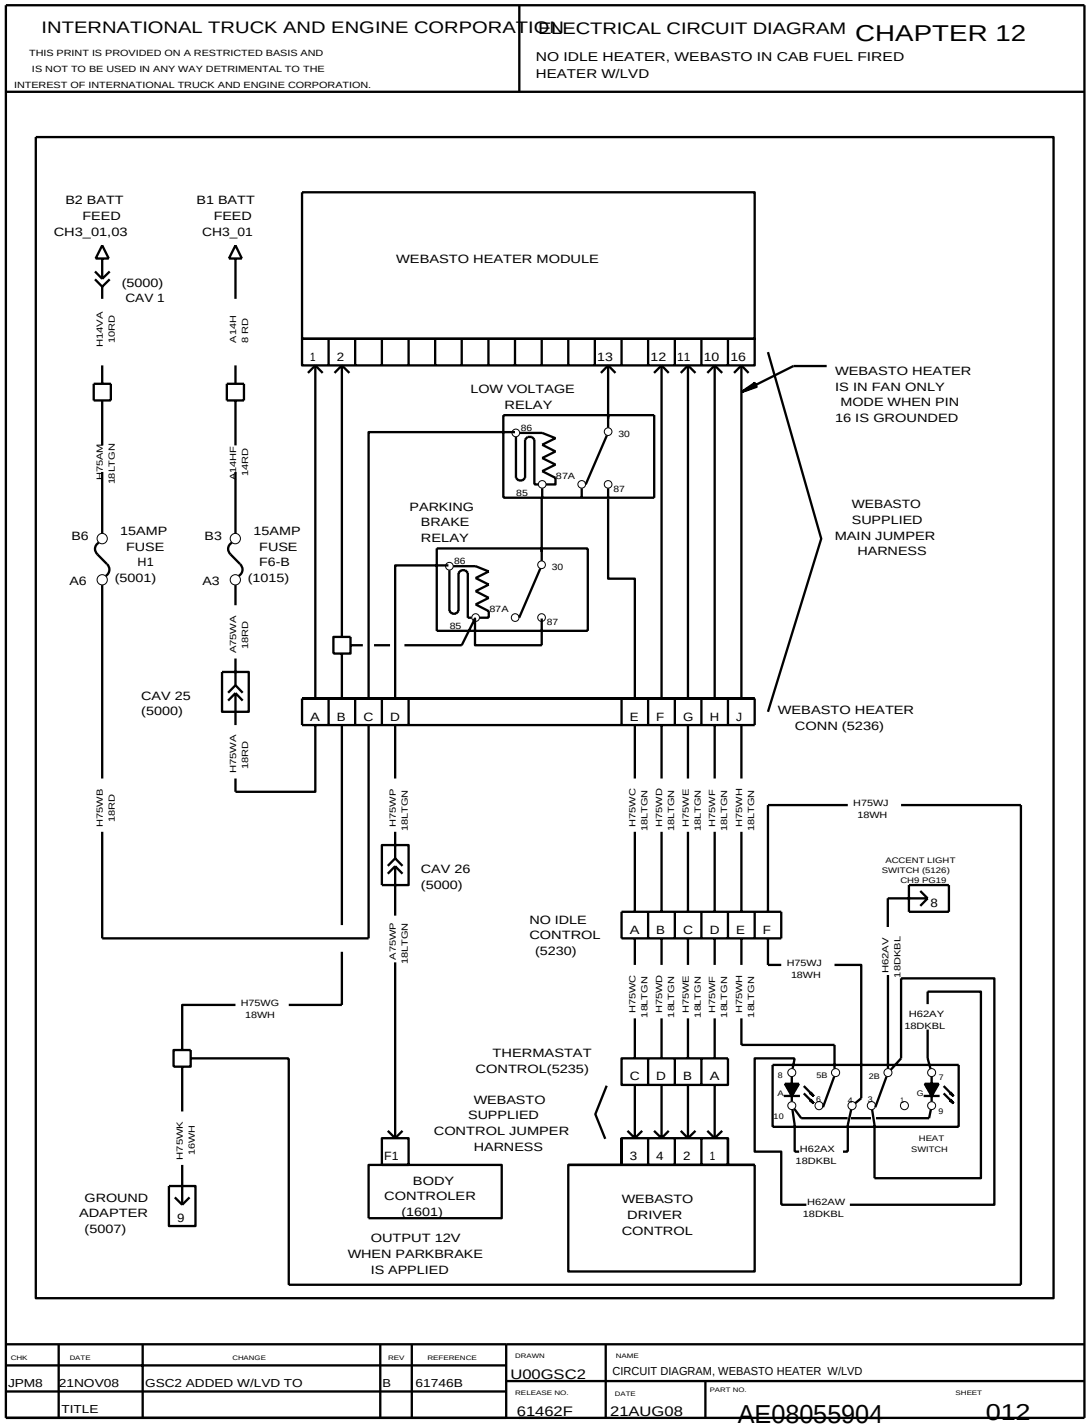


Figure 197 No Idle Heater, Webasto in Cab Fuel Fired Heater w/LVD

https://truckmanualshub.com/

12.14. NO IDLE HEATER, ESPAR IN CAB FUEL FIRED HEATER, P. 13

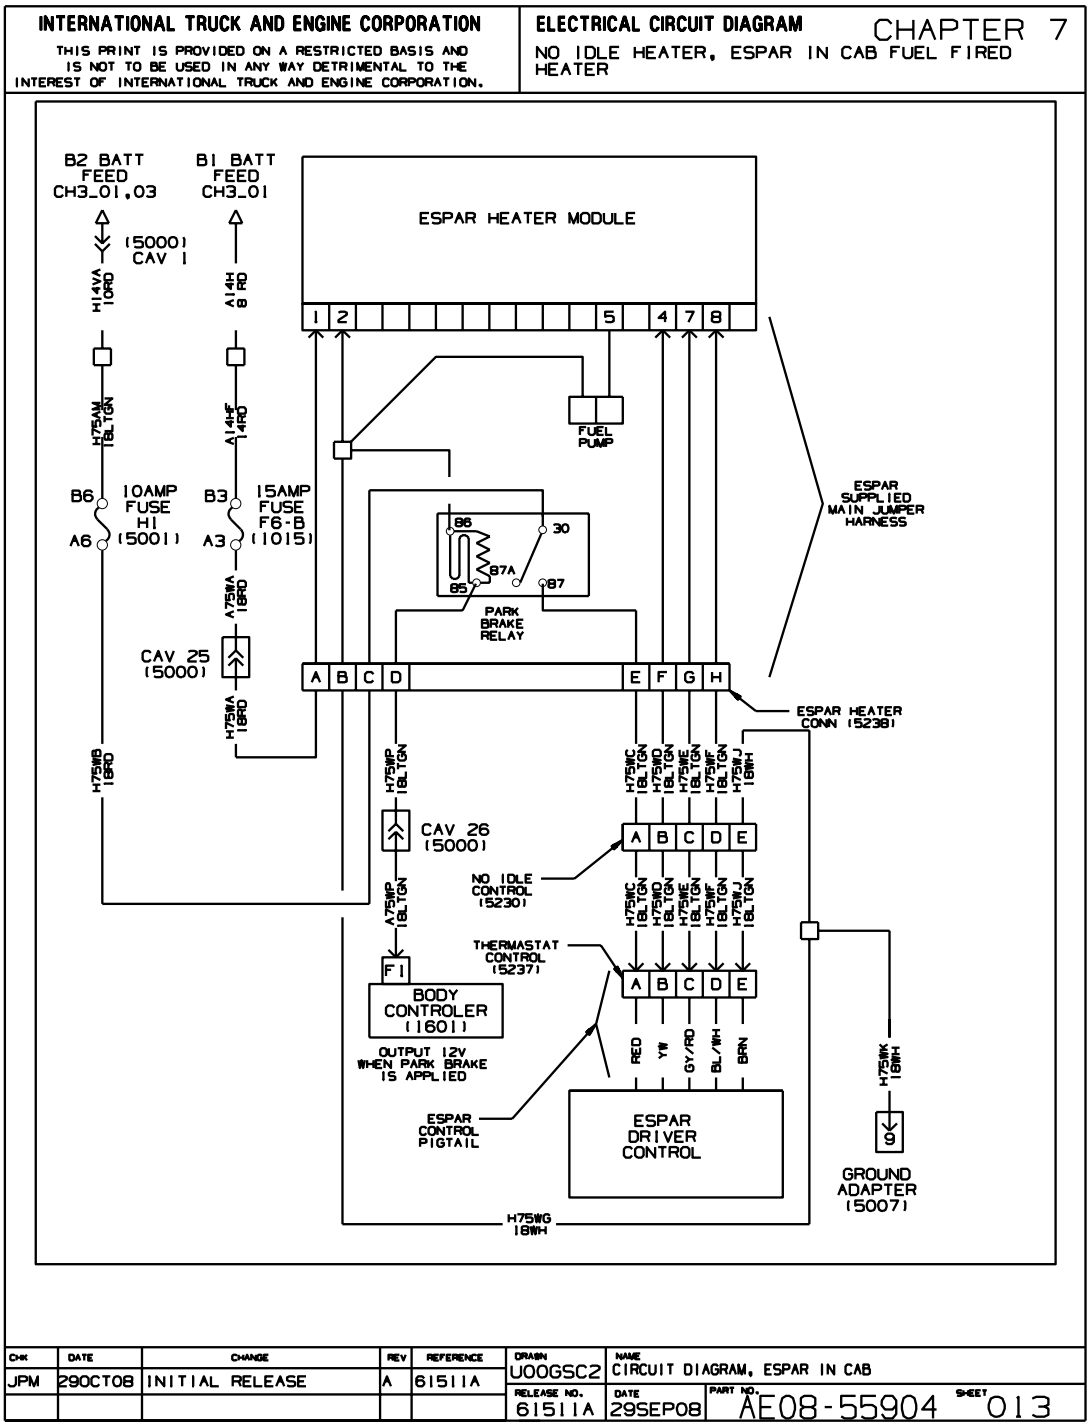


Figure 198 No Idle Heater, Espar in Cab Fuel Fired Heater

https://truckmanualshub.com/

12.15. HVAC SYSTEM — SLEEPER W/BERGSTROM NO IDLE, P. 14

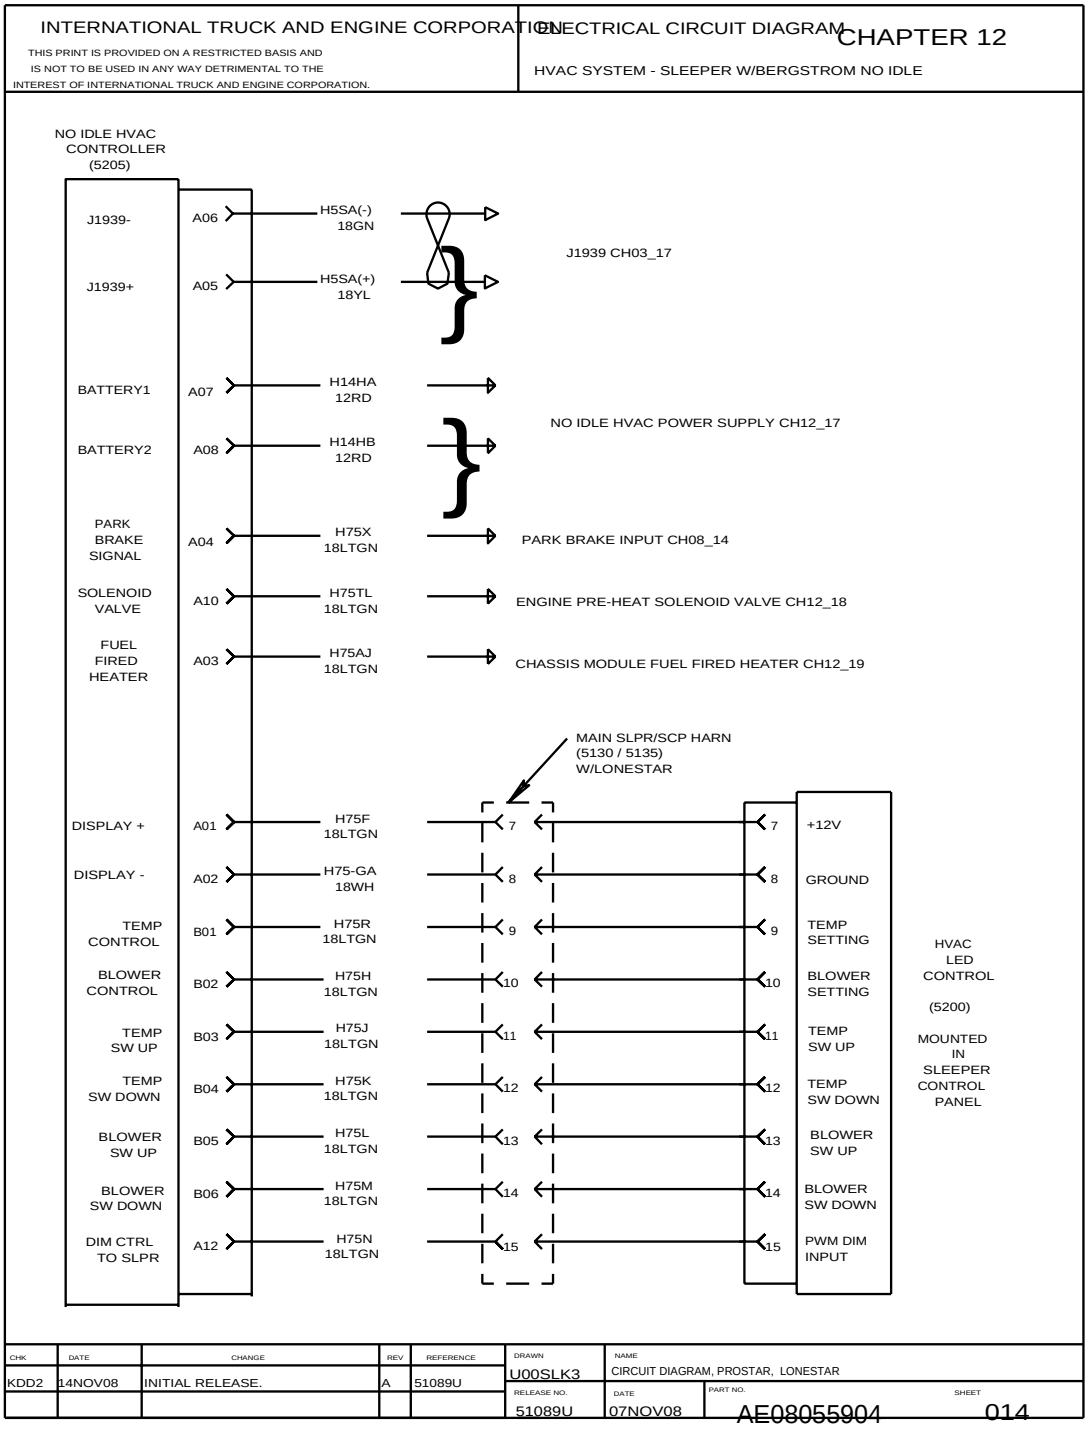


Figure 199 HVAC System — Sleeper w/Bergstrom No Idle

https://truckmanualshub.com/

12.16. NO IDLE HVAC W/BERGSTROM HVAC SWITCHES — LOCATED IN SLEEPER CONTROL PANEL, P. 15

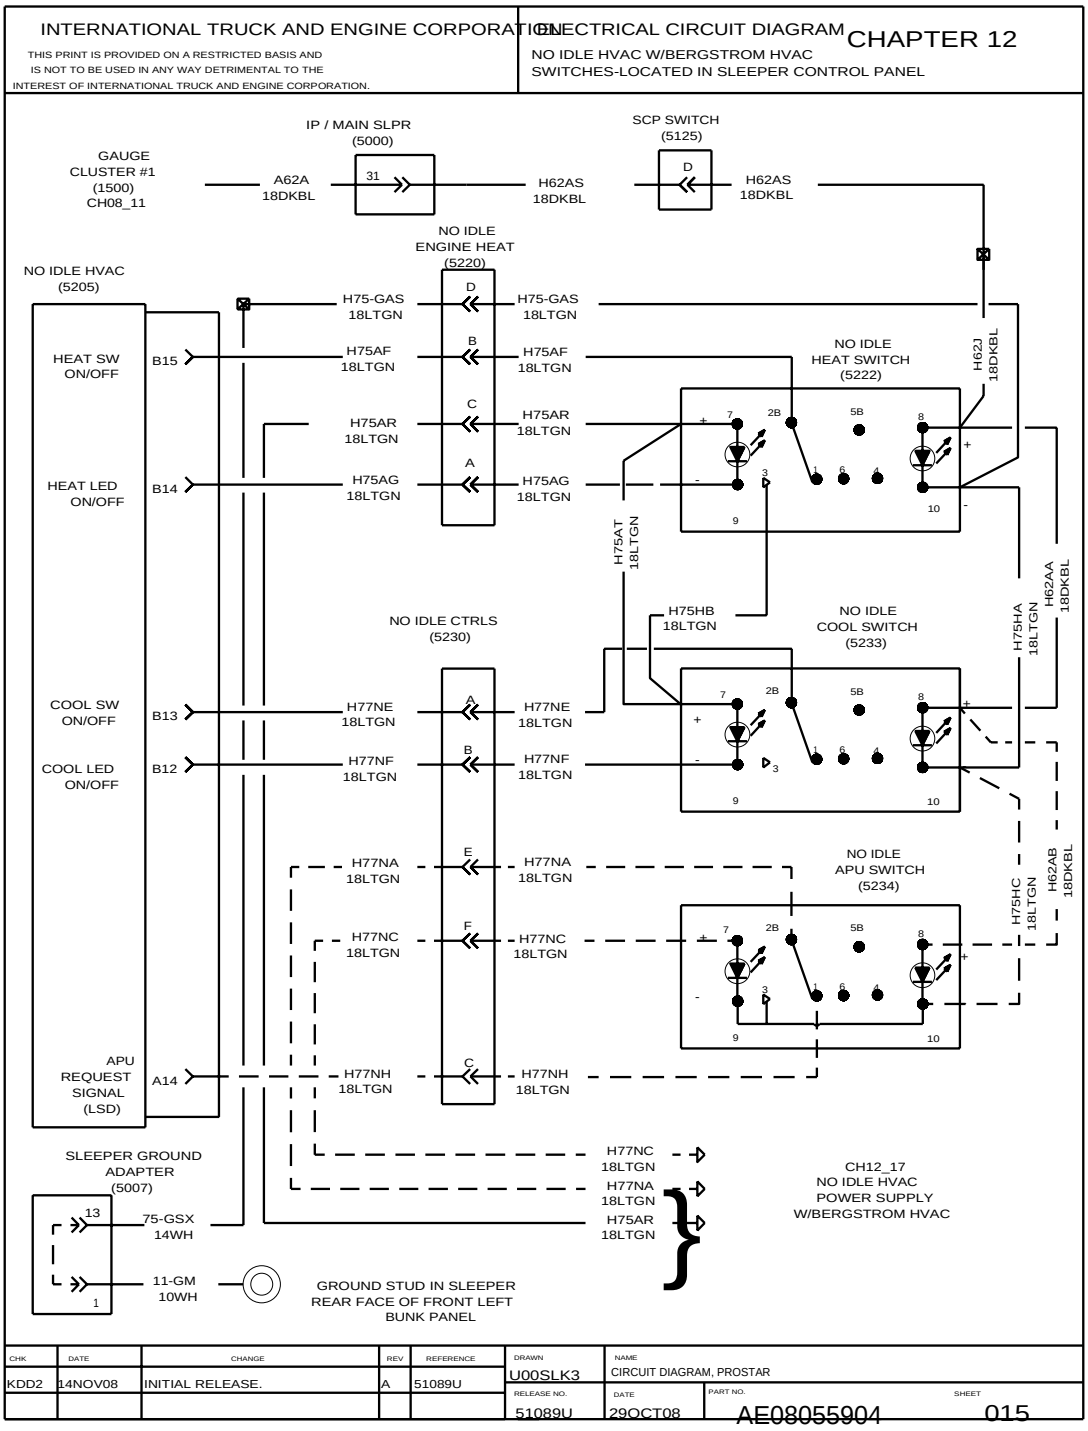


Figure 200 No Idle HVAC w/Bergstrom HVAC Switches — Located in Sleeper Control Panel

https://truckmanualshub.com/

12.17. NO IDLE HVAC W/BERGSTROM HVAC SWITCHES — LOCATED IN SLEEPER CONTROL PANEL, P. 16

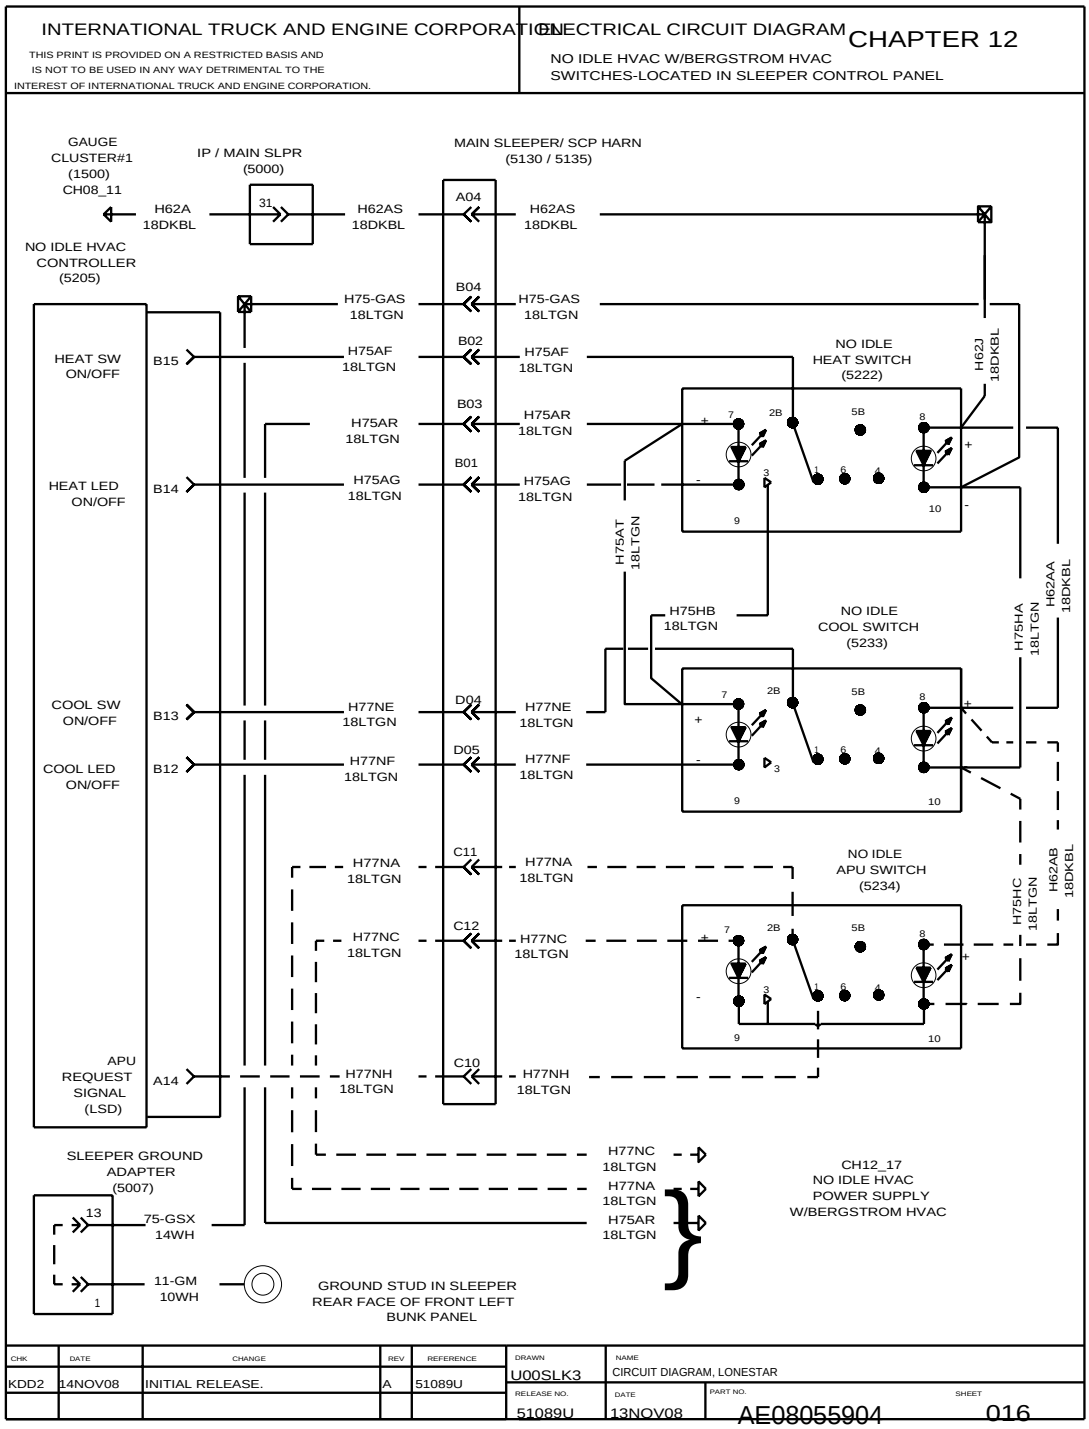


Figure 201 No Idle HVAC w/Bergstrom HVAC Switches — Located in Sleeper Control Panel

https://truckmanualshub.com/

12.18. NO IDLE HVAC W/BERGSTROM HVAC POWER SUPPLY, P. 17

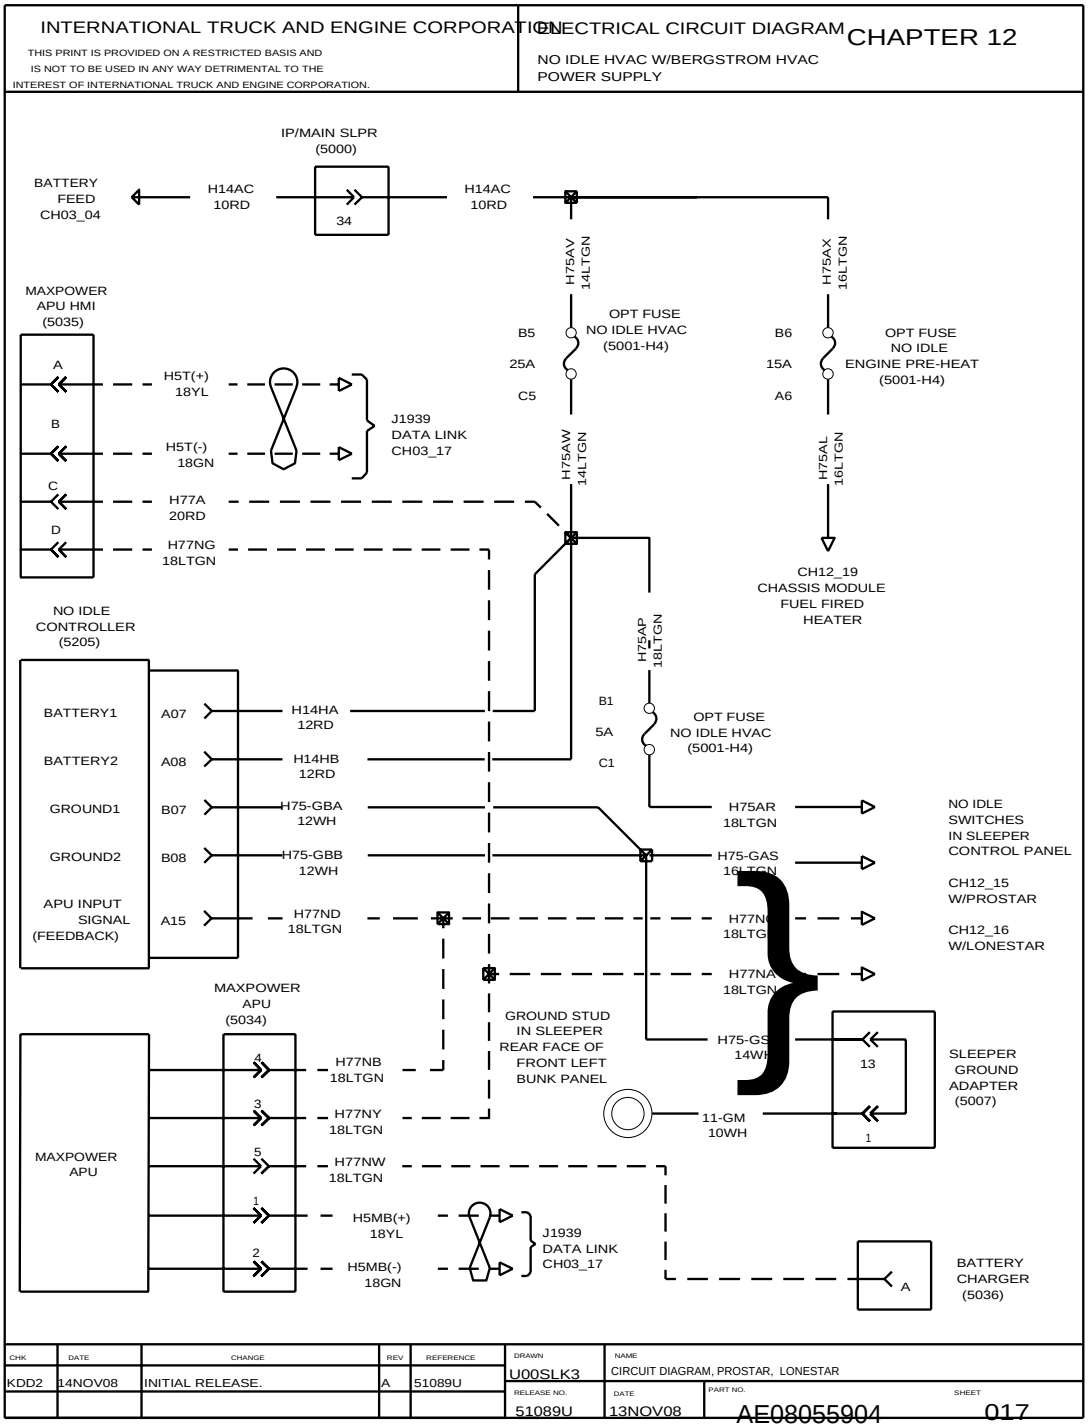


Figure 202 No Idle HVAC w/Bergstrom HVAC Power Supply

https://truckmanualshub.com/

12.19. NO IDLE HVAC W/BERGSTROM ENGINE PRE-HEAT VALVE, P. 18

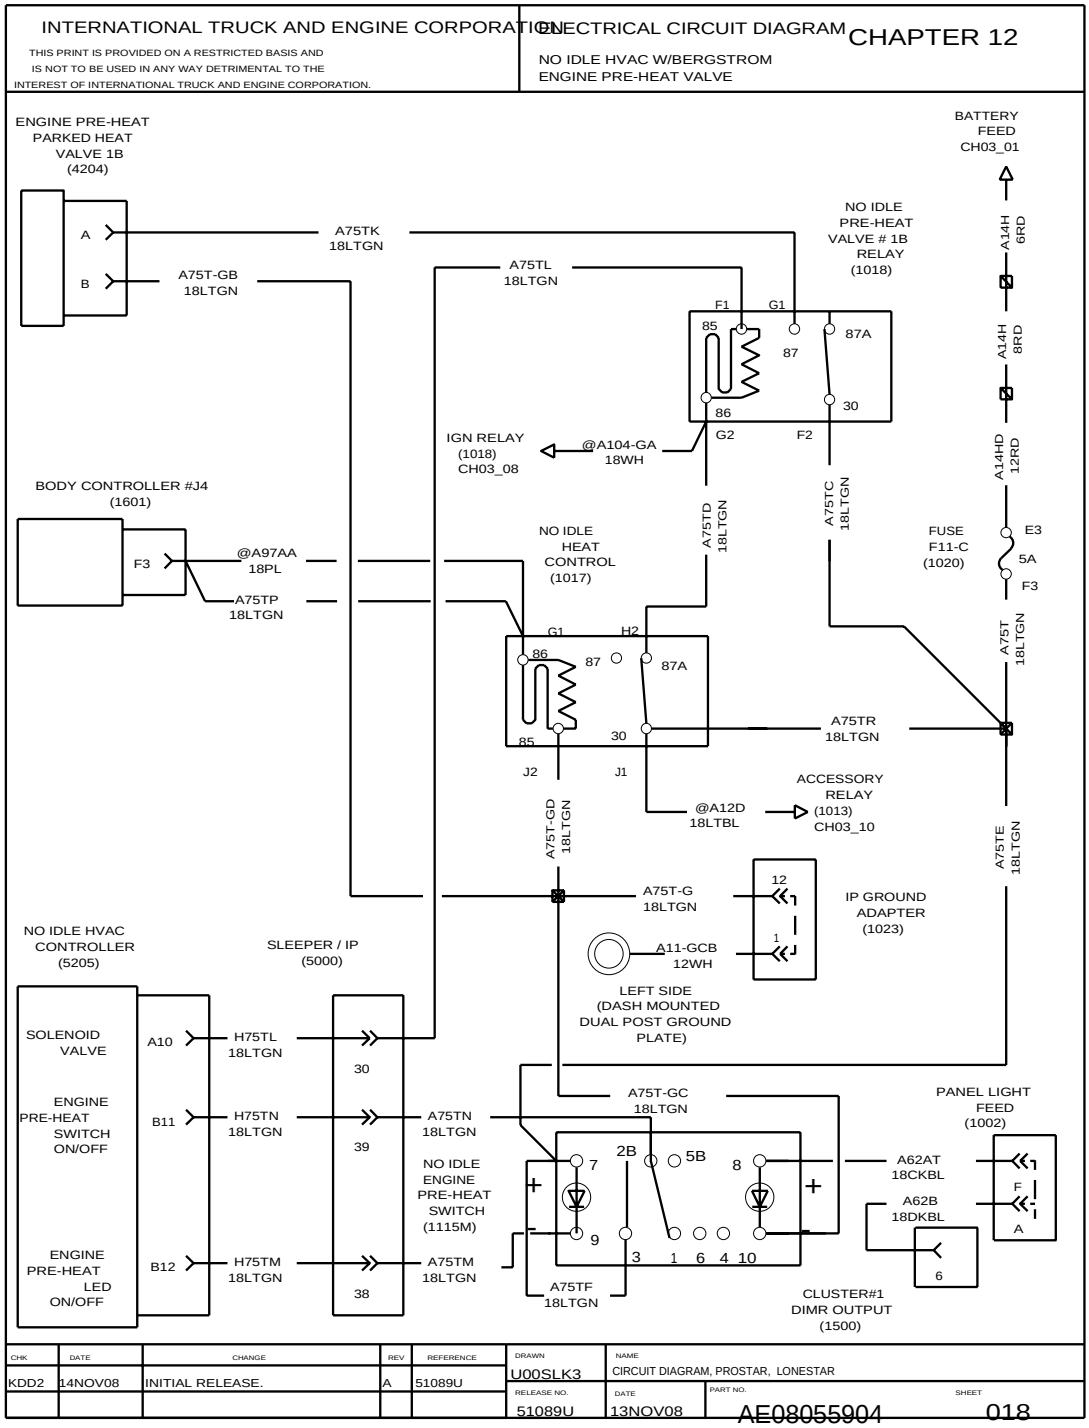


Figure 203 No Idle HVAC w/Bergstrom Engine Pre-Heat Valve

https://truckmanualshub.com/

12.20. NO IDLE HVAC W/BERGSTROM FUEL FIRED HEATER, P. 19

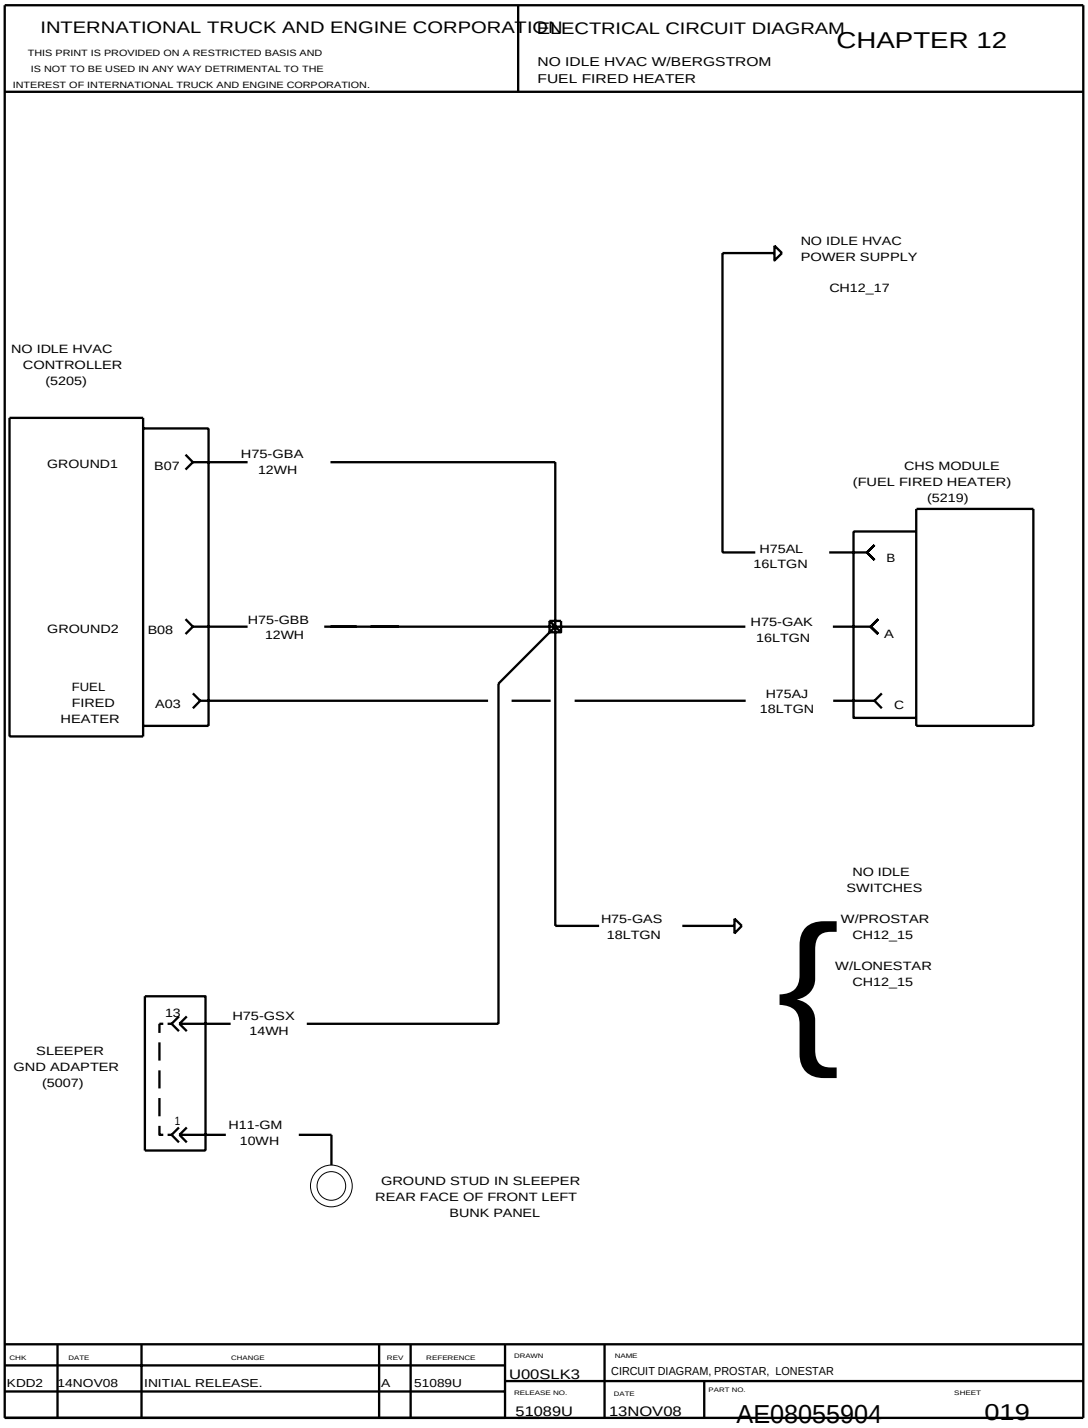


Figure 204 No Idle HVAC w/Bergstrom Fuel Fired Heater

https://truckmanualshub.com/

12.21. NO IDLE HEATER, WEBASTO IN CAB FUEL FIRED HEATER N/LVD, P. 21

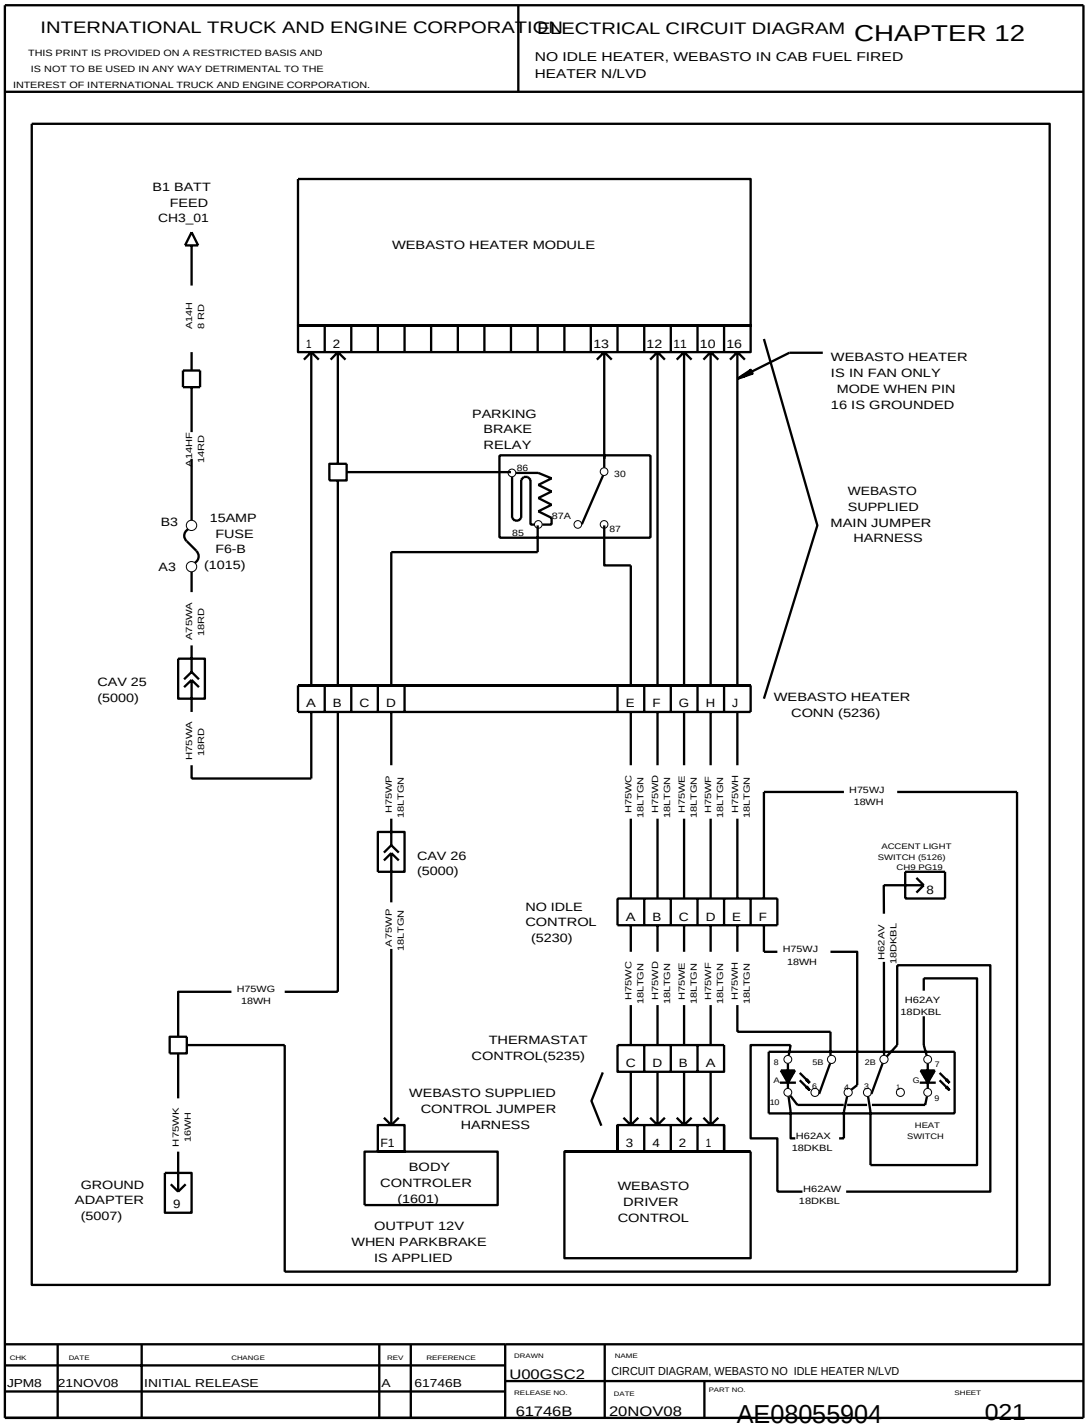


Figure 205 No Idle Heater, Webasto in Cab Fuel Fired Heater n/LVD

https://truckmanualshub.com/

13. BUNK LIGHTS AND ACCESSORIES (CHAPTER 13)

13.1. READING AND WARDROBE LIGHTS — BUNK, P. 1

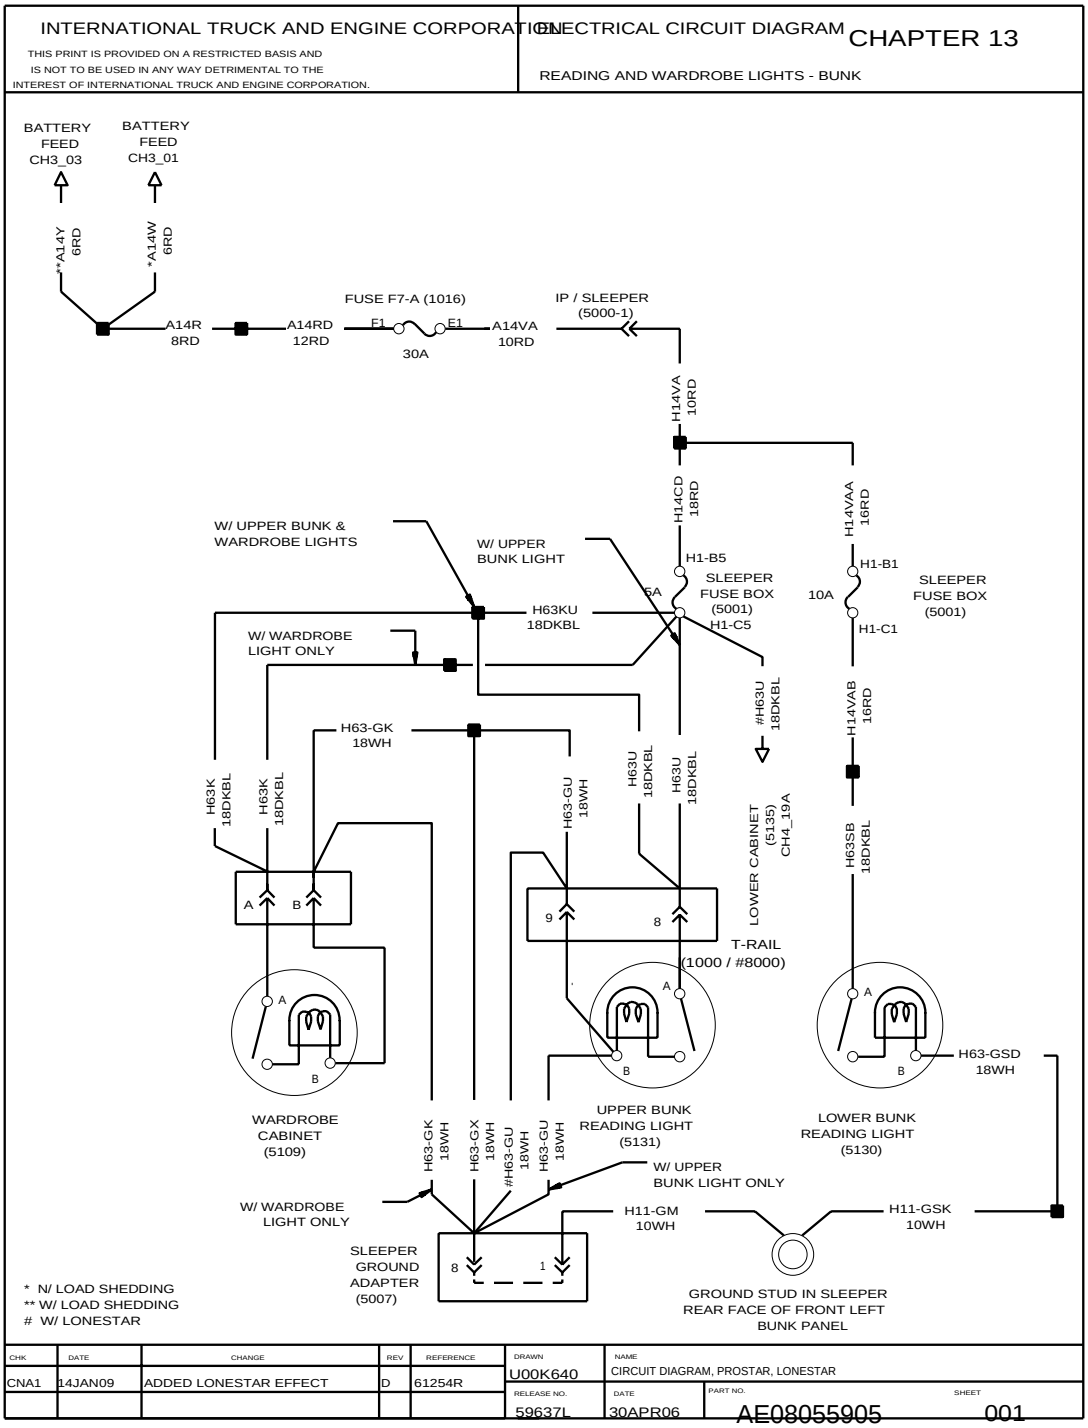


Figure 206 Reading and Wardrobe Lights — Bunk

https://truckmanualshub.com/

13.2. LUGGAGE COMPARTMENT LIGHTS — BUNK, P. 2

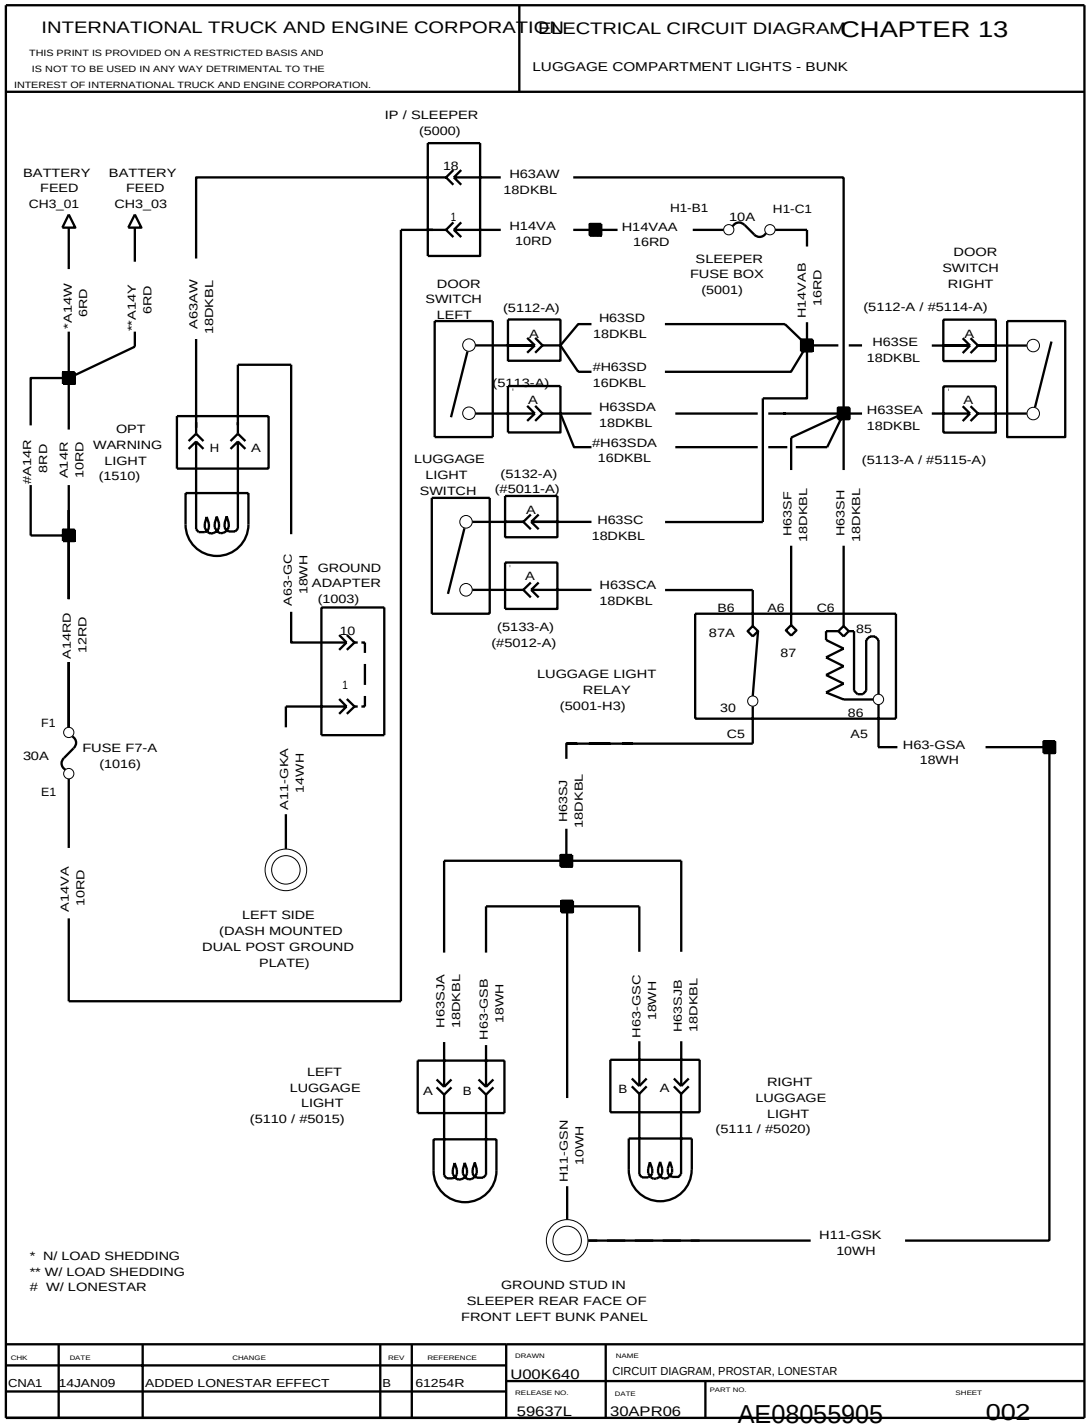


Figure 207 Luggage Compartment Lights — Bunk

https://truckmanualshub.com/

13.3. POWER SOURCE — BUNK, P. 3

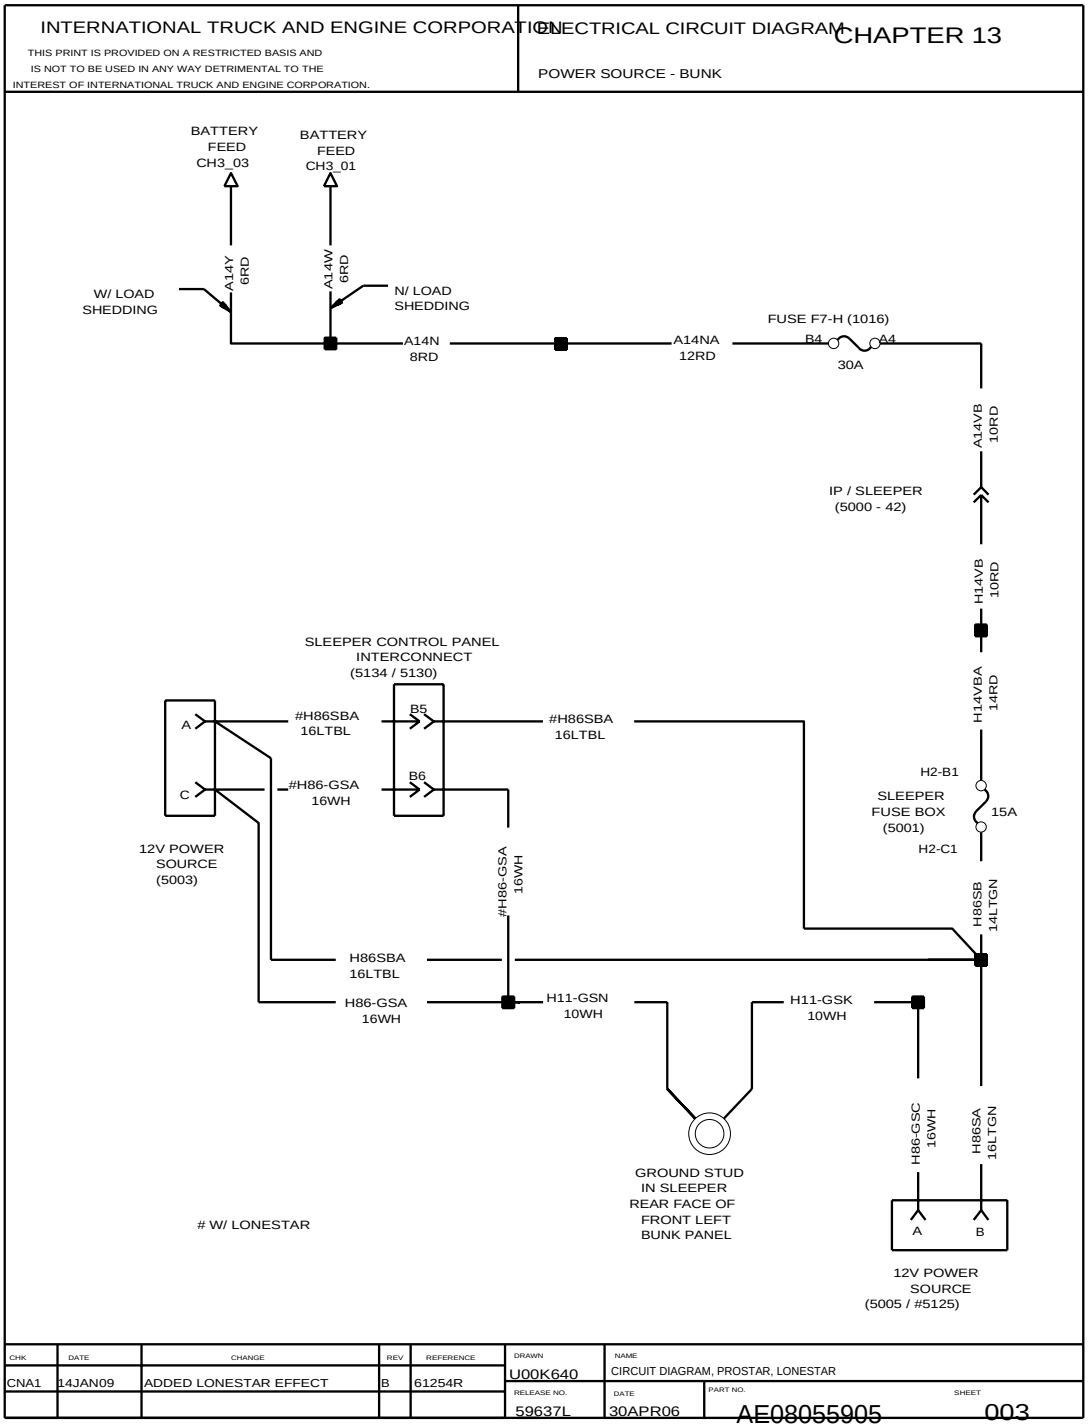


Figure 208 Power Source — Bunk

https://truckmanualshub.com/

13.4. TV / REFRIGERATOR WIRING, P. 4

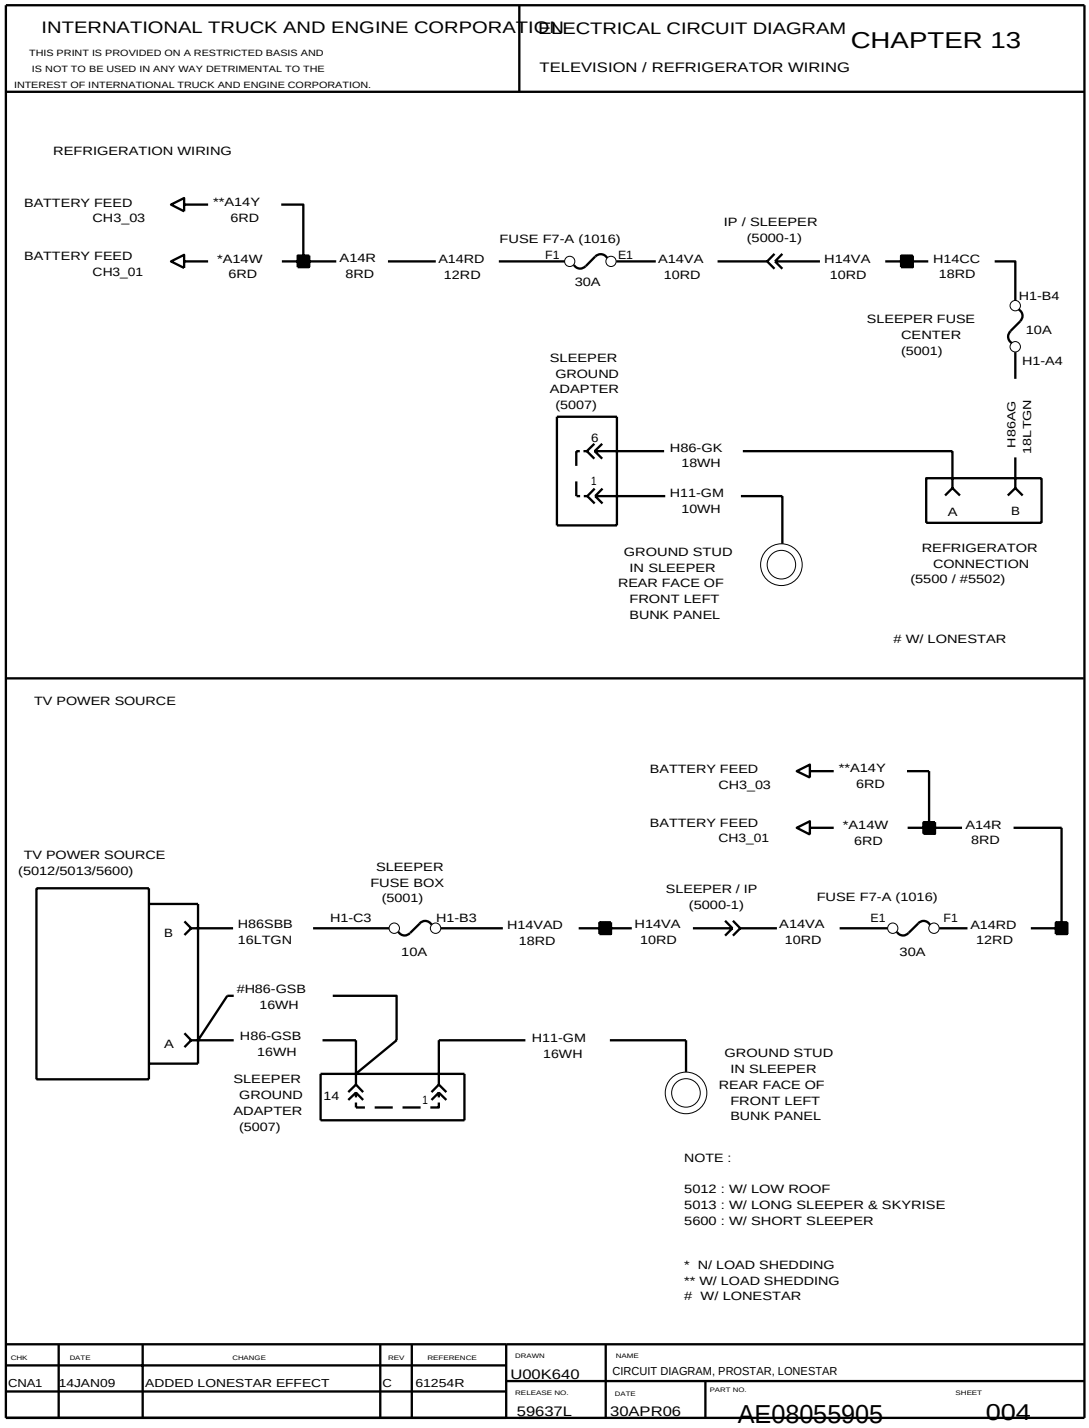


Figure 209 TV / Refrigerator Wiring

https://truckmanualshub.com/

13.5. SPEAKER — BUNK, P. 5

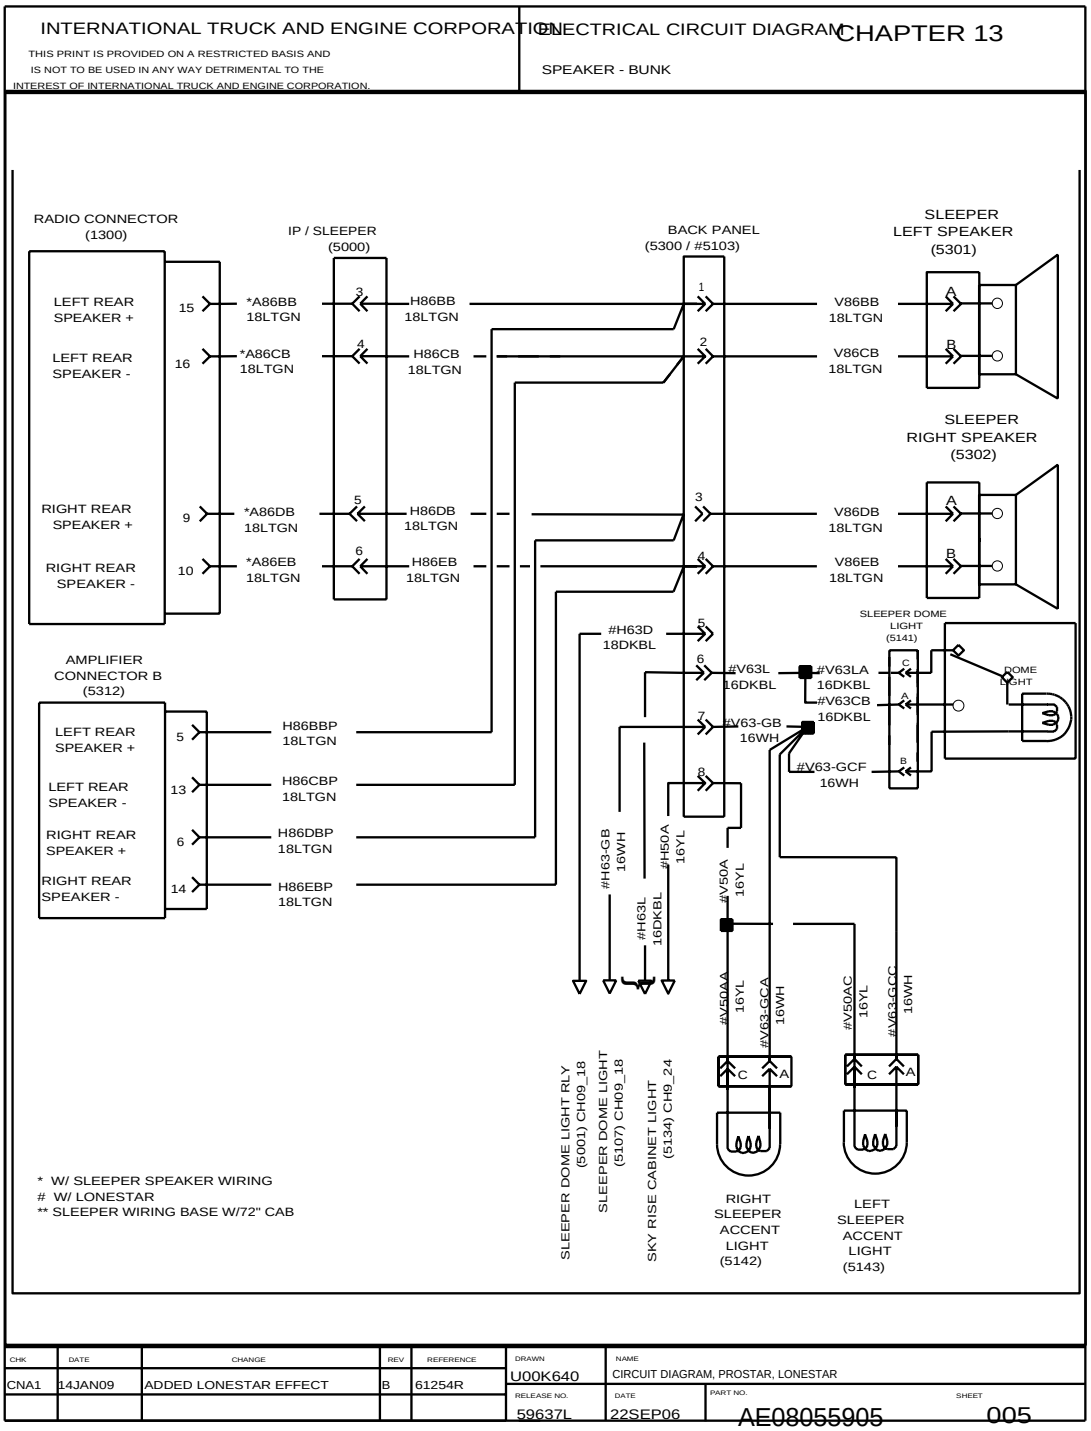


Figure 210 Speaker — Bunk

https://truckmanualshub.com/

13.6. FAN — BUNK, P. 6

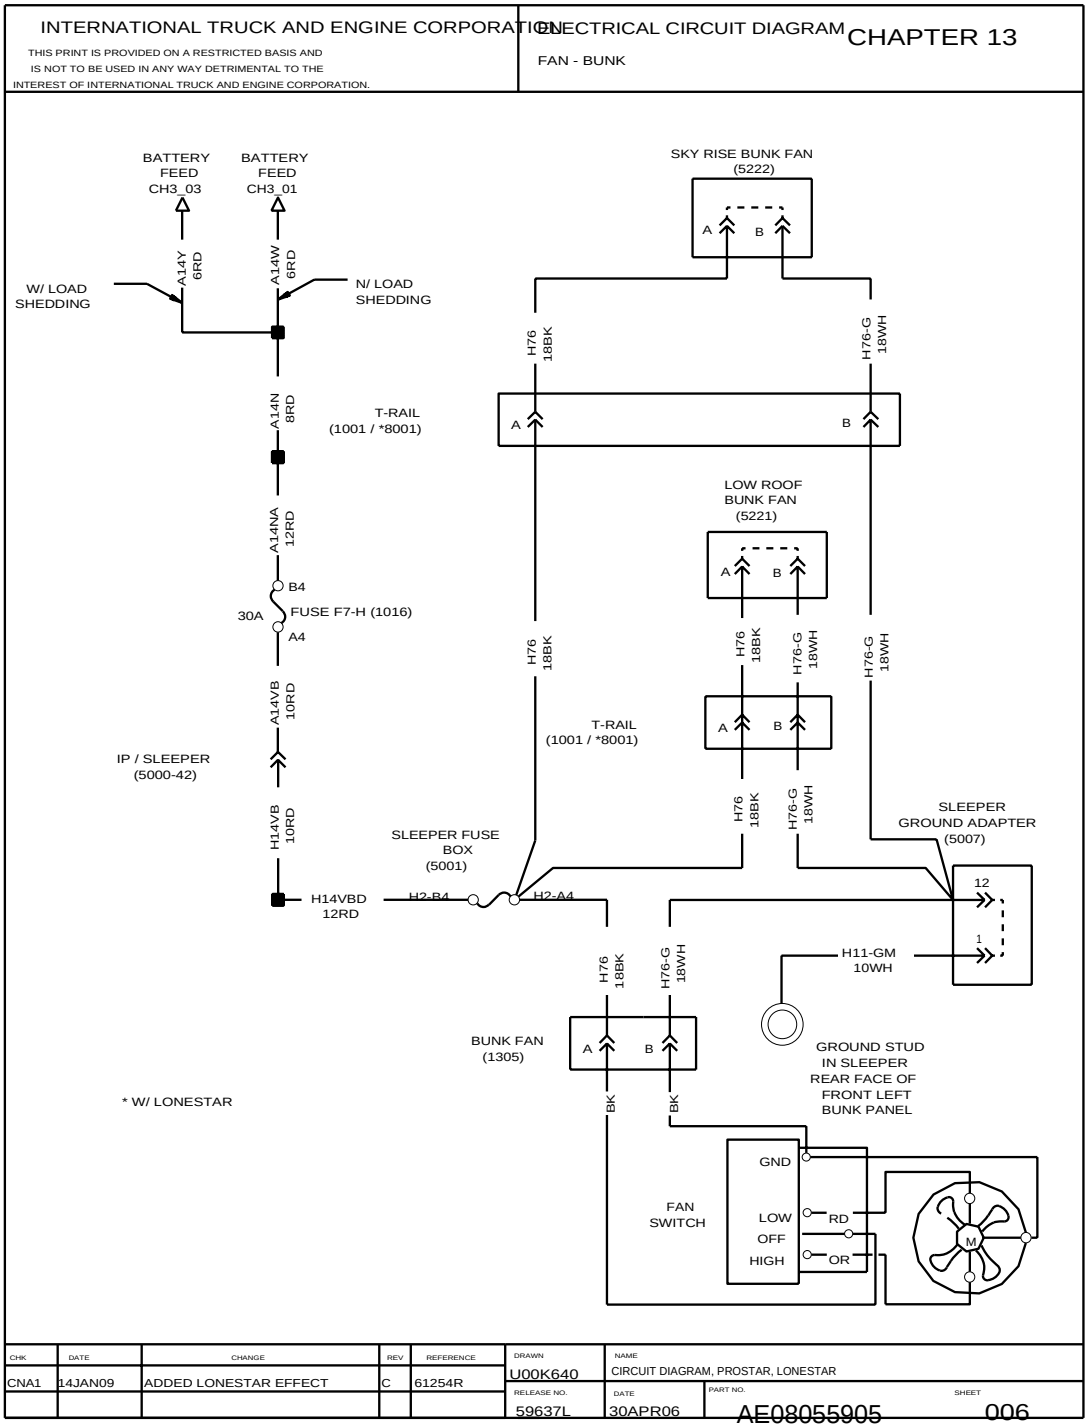


Figure 211 Fan — Bunk

https://truckmanualshub.com/

13.7. SKY RISE LIGHTS — BUNK, P. 7

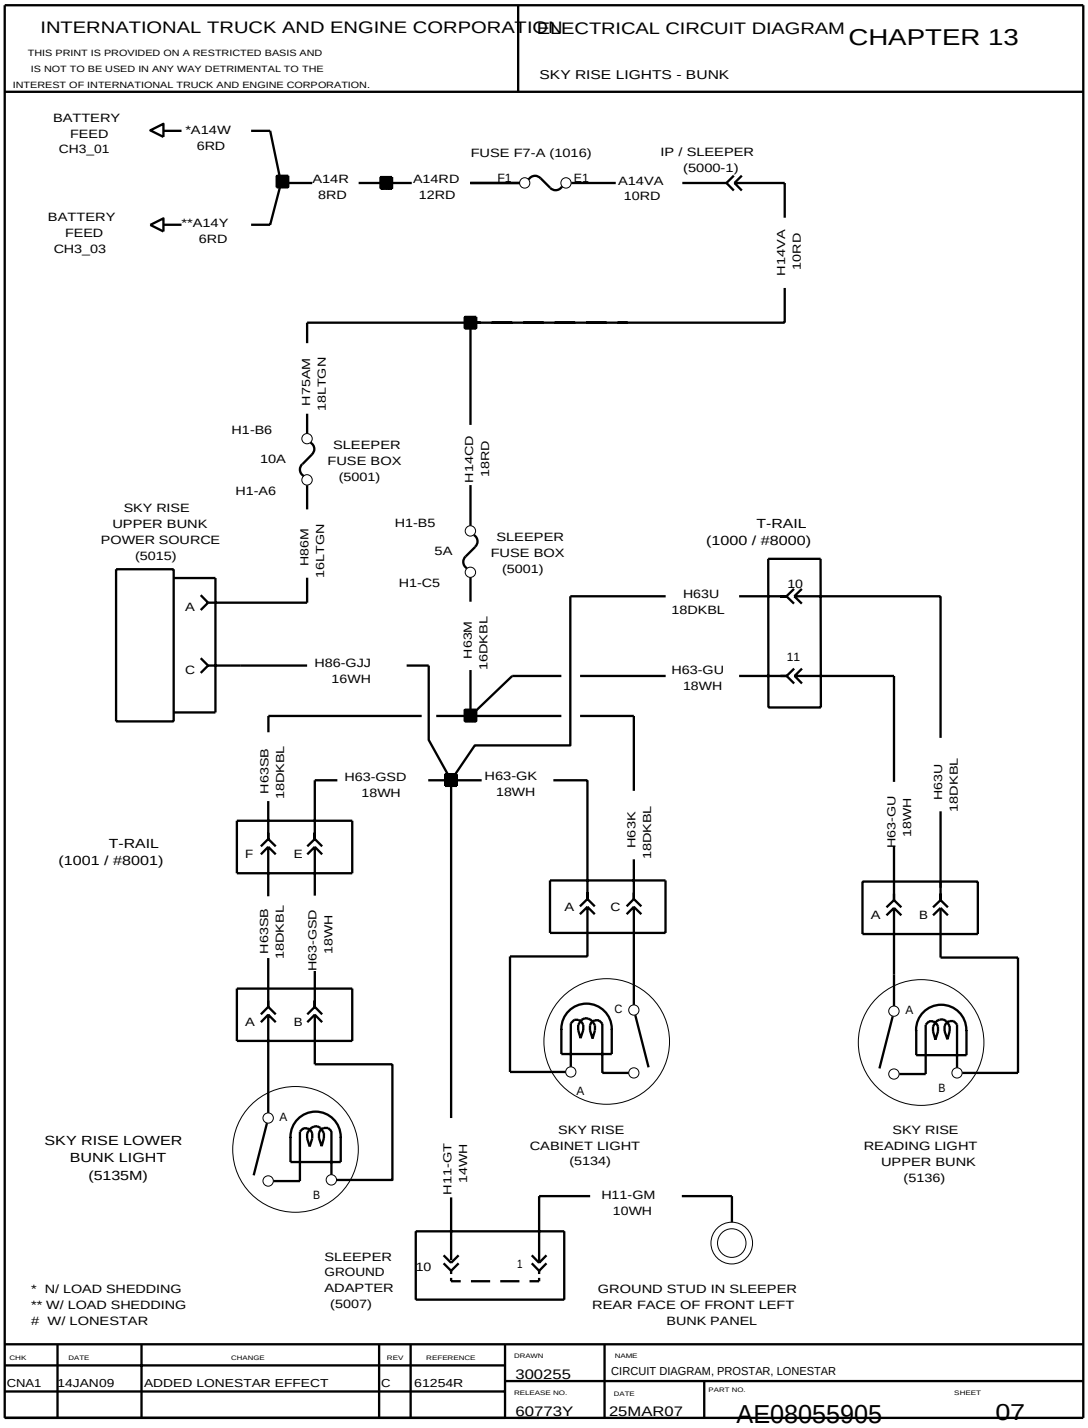


Figure 212 Sky Rise Lights — Bunk

https://truckmanualshub.com/

13.8. FLAT PANEL TV/DVD PLAYER — BUNK, P. 8

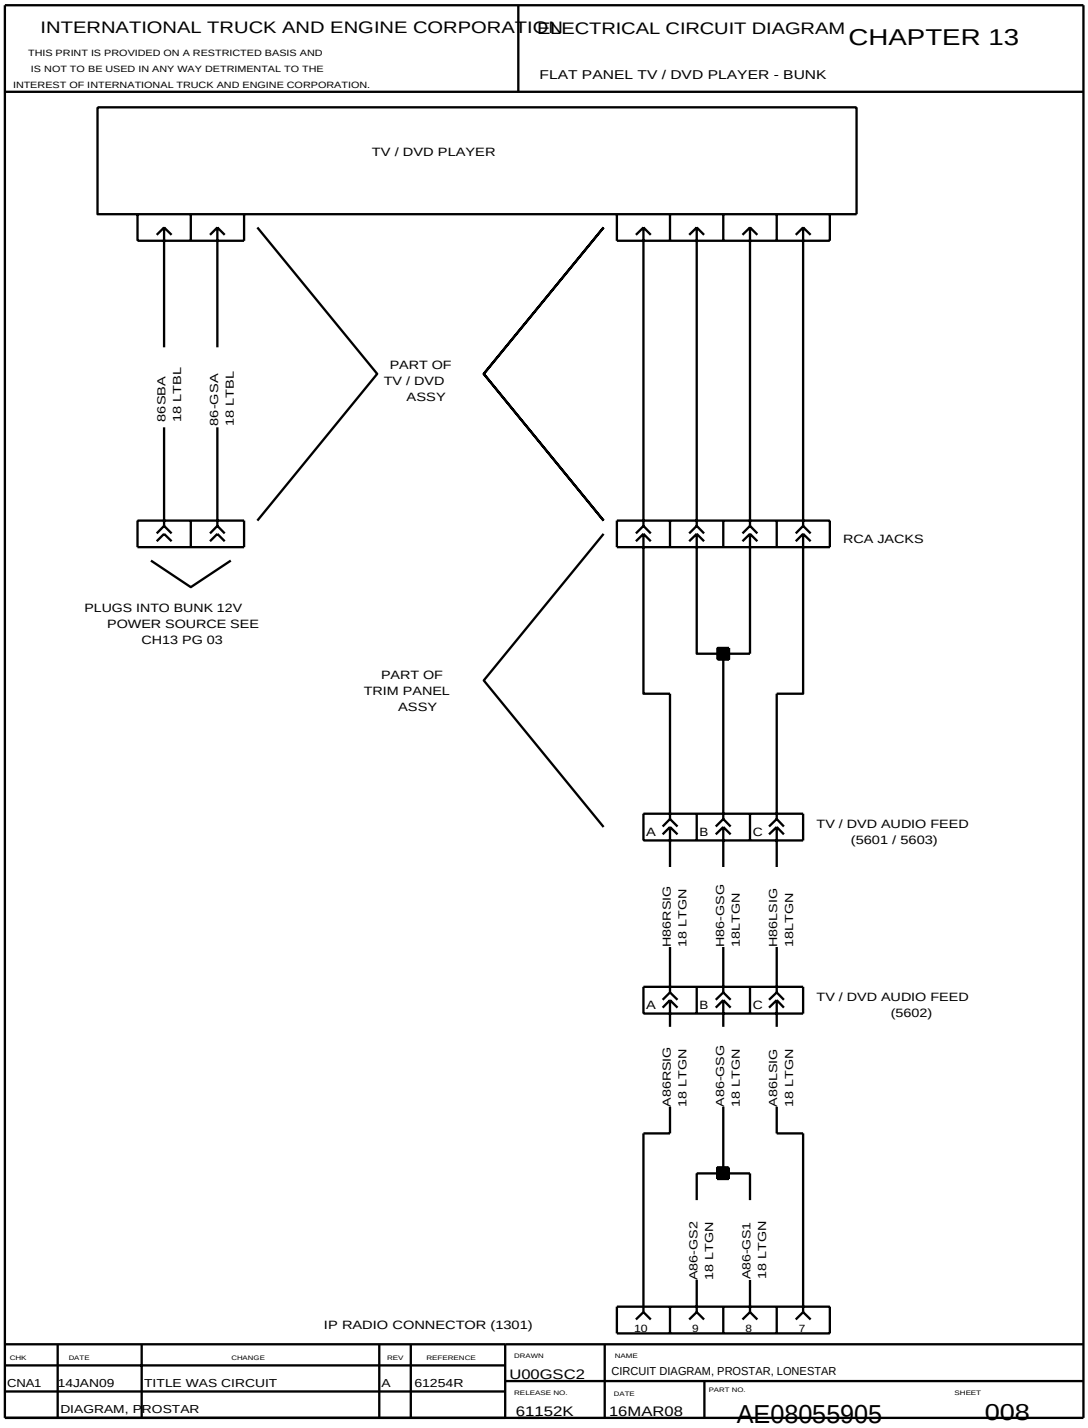


Figure 213 Flat Panel TV/DVD Player — Bunk

https://truckmanualshub.com/

14. CONNECTOR COMPOSITES (CHAPTER 14)

14.1. CONNECTOR COMPOSITES (7A), (8A), (9A), (10A), P. 1


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

QUALCOMM DISPLAY RECEPTACLE END (LOCATED ON LEFT SIDE - BACK OF DOOR) (7A)




CONNECTOR 3594066C92

CAV	CIR	GAUGE	COLOR	TERMINAL
1	ABLK	22	BK	ASSY
2	ARED	22	RD	ASSY
3	AORN	22	OR	ASSY
4	AYEL	22	YL	ASSY
5	AGRN	22	GN	ASSY
6	AGRA	22	GY	ASSY
6#	ABLU	22	BL	ASSY
7	-	-	-	-
8	AVIO	22	VT	ASSY
9	ABLU	22	BL	ASSY
9#	AGRA	22	GY	ASSY

W/ LONESTAR

QUALCOMM DISPLAY PLUG END (LOCATED IN LEFT SIDE B PILLAR) (8A)




CONNECTOR 3594066C9X

CAV	CIR	GAUGE	COLOR	TERMINAL
1	ABLK	22	BK	ASSY
2	ARED	22	RD	ASSY
3	AORN	22	OR	ASSY
4	AYEL	22	YL	ASSY
5	AGRN	22	GN	ASSY
6	AGRA	22	GY	ASSY
6#	ABLU	22	BL	ASSY
7	-	-	-	-
8	AVIO	22	VT	ASSY
9	ABLU	22	BL	ASSY
9#	AGRA	22	GY	ASSY

W/ LONESTAR


QUALCOMM OMNIVISION CDU EXTENSION (LOCATED IN LEFT BACK PANEL (DAY CAB))) (9A)

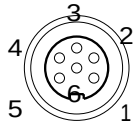

CONNECTOR 3668104C91

CAV	CIR	GAUGE	COLOR	TERMINAL
1	AORN	24	OR	ASSY
2	AORN2	24	OR	ASSY
3	ABLU	24	BL	ASSY
4	ABLU2	24	BL	ASSY
5	ABLK	22	BK	ASSY
6	ARED	22	RD	ASSY

QUALCOMM OMNIVISION CDU EXTENSION (LOCATED IN LEFT BACK PANEL (DAYCAB)) (10A)

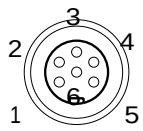

CONNECTOR 3668104C9X

CAV	CIR	GAUGE	COLOR	TERMINAL
1	AORN	24	OR	ASSY
2	AORN2	24	OR	ASSY
3	ABLU	24	BL	ASSY
4	ABLU2	24	BL	ASSY
5	ABLK	22	BK	ASSY
6	ARED	22	RD	ASSY

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R

DRAWN U00K640

NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR

RELEASE NO. 59637L

DATE 06SEP06

PART NO. AE08055906

SHEET 001

Figure 214 Connector Composites (7A), (8A), (9A), (10A)

https://truckmanualshub.com/

14.2. CONNECTOR COMPOSITES (10F), (11A), (12A), (13A), P. 1A


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

AUXILARY POWER
(10F)
(LOCATED IN INSTRUMENT PANEL CENTER)
(JUMPER HARNESS)




CONNECTOR 1661197C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A86M	16	LTGN	1661214C2
A*	A86N	14	LTGN	1661214C2
B	A86-GA	16	WH	1661214C2
B*	A86-GB	14	WH	1661214C2

* W/ 2 POST & CIGAR ONLY


QUALCOMM OMNIVISION
CDU EXTENSION
(LOCATED IN LEFT BACK PANEL (DAYCAB))
(11A)

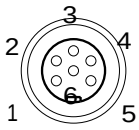

CONNECTOR 3668104C91

CAV	CIR	GAUGE	COLOR	TERMINAL
1	AORN	24	OR	ASSY
2	AORN2	24	OR	ASSY
3	ABLU	24	BL	ASSY
4	ABLU2	24	BL	ASSY
5	ABLK	22	BK	ASSY
6	ARED	22	RD	ASSY


QUALCOMM OMNIVISION
CDU EXTENSION
(LOCATED IN LEFT BACK PANEL (DAYCAB))
(12A)

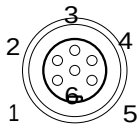

CONNECTOR 3668104C9X

CAV	CIR	GAUGE	COLOR	TERMINAL
1	AORN	24	OR	ASSY
2	AORN2	24	OR	ASSY
3	ABLU	24	BL	ASSY
4	ABLU2	24	BL	ASSY
5	ABLK	22	BK	ASSY
6	ARED	22	RD	ASSY

QUALCOMM DISPLAY
RECEPTACLE END
(13A)
(LOCATED IN LEFT BACK PANEL (DAYCAB))
(W/ LONESTAR)



CONNECTOR 3679731C91

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2	ABLK	22	BK	ASSY
3	ABLU	22	BL	ASSY
4	-	-	-	-
5	ARED	22	RD	ASSY
6	AGRN	22	GN	ASSY
7	AYEL	22	YL	ASSY
8	-	-	-	-
9	AVIO	22	VT	ASSY

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	20JAN09	ADDED LONESTAR EFFECT	B	61254R

DRAWN 300152
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 50297W
DATE 18OCT07
PART NO. AE08055906
SHEET 01A

Figure 215 Connector Composites (10F), (11A), (12A), (13A)

https://truckmanualshub.com/

14.3. CONNECTOR COMPOSITES (14A), (344), (345), (512), (520), P. 1B

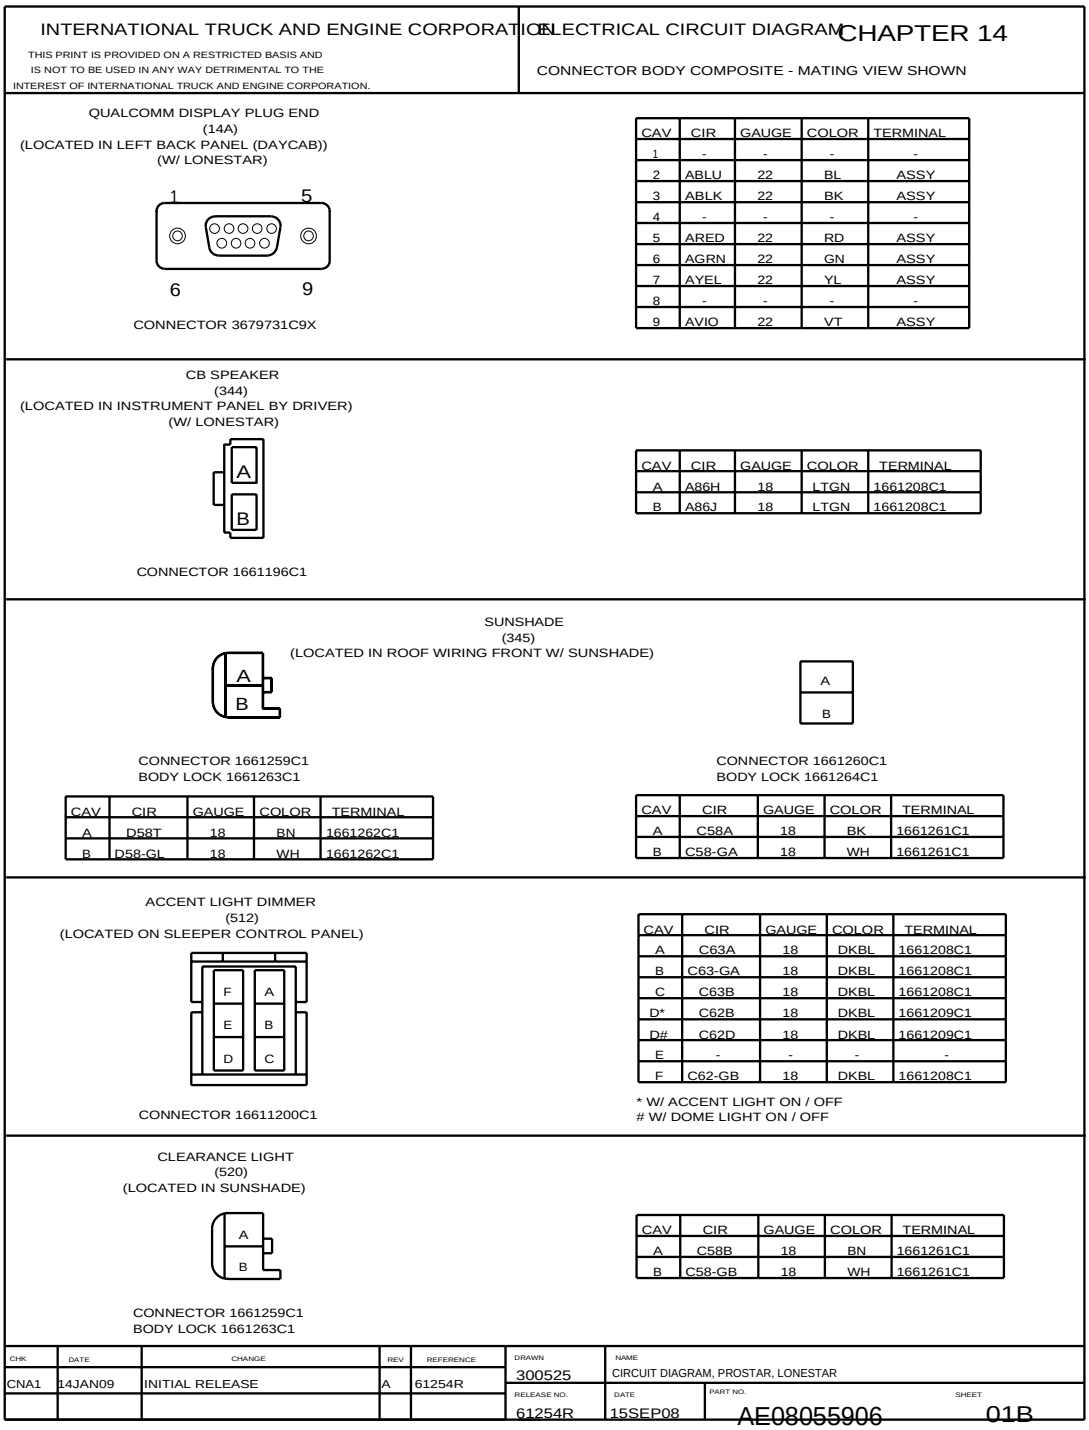


Figure 216 Connector Composites (14A), (344), (345), (512), (520)

https://truckmanualshub.com/

14.4. CONNECTOR COMPOSITES (521), (522), (523), (524), P. 2

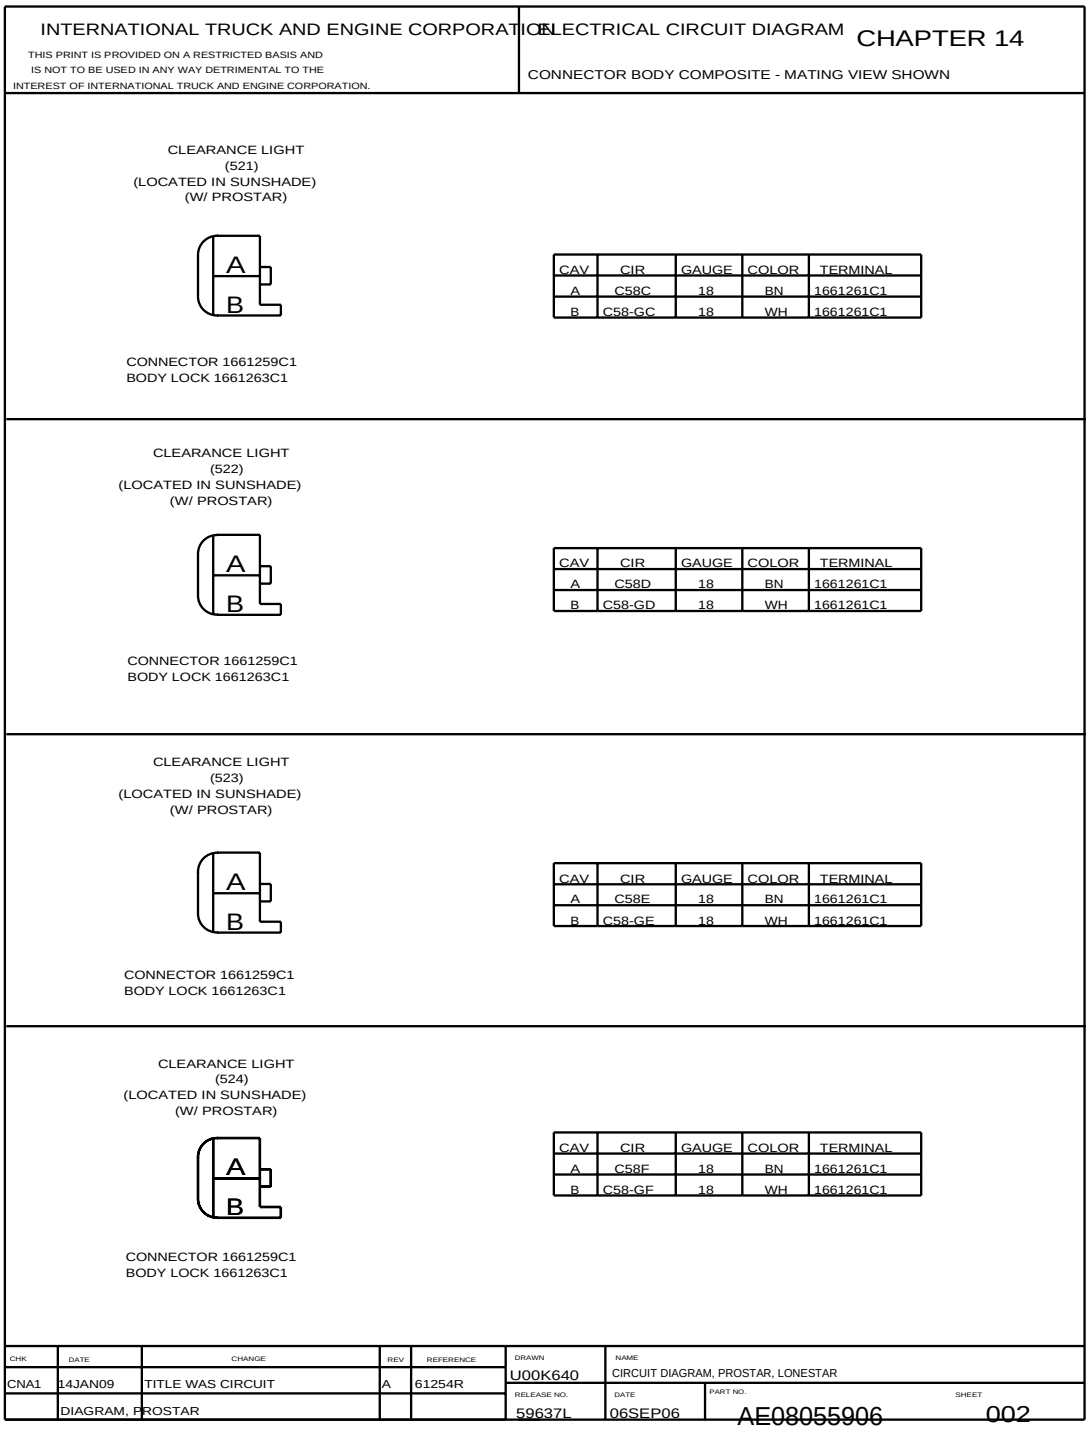


Figure 217 Connector Composites (521), (522), (523), (524)

https://truckmanualshub.com/

14.5. CONNECTOR COMPOSITES (1002), (1003), P. 3

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

PANEL LIGHT FEED
(1002)
(LOCATED IN INSTRUMENT PANEL)




CONNECTOR 2007315C1
BODY LOCK 2007316C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A62B	16	DKBL	1661208C1
B##	A62BB	18	DKBL	1661208C1
C	A62BE	18	DKBL	1661208C1
D	A62BD	18	DKBL	1661208C1
E	A62BH	18	DKBL	1661208C1
F	A63AB	18	DKBL	1661208C1
F%	A62T	18	DKBL	1661208C1
F@	A62TRI	18	DKBL	1661208C1
G	A62SC	18	DKBL	1661208C1
H*	A62SD	18	DKBL	1661208C1
H#	A62N	18	DKBL	1661208C1
I	-	-	-	-
J	A62SA	18	DKBL	1661208C1
K	A62SB	18	DKBL	1661208C1
K**	A62BLT	18	DKBL	1661208C1

* W/ PANIC BUTTON
** W/ BEACON LIGHT
W/ TELEMATICS ALERT SWITCH
W/ LONESTAR
% N/ IDLE HEAT - CAB
@ W/ TRI-PAC

GROUND
(1003)
(LOCATED IN INSTRUMENT PANEL)

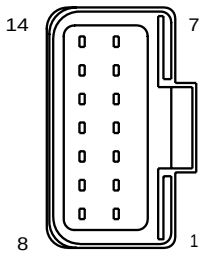

CONNECTOR 3613769C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A11-GKA	14	WH	3613770C1
2@	A11-GSE	18	WH	3613771C1
2@	11-GSE	18	WH	3613771C1
3	A14-GL	18	WH	3613771C1
4	A65-GF	16	WH	3613770C1
5	A11-GSF	16	WH	3613770C1
6	A84-G	16	WH	3613770C1
7	A14-GS	18	WH	3613771C1
7@	A14-GS	18	WH	3613771C1
7@	A116-G	18	WH	3613771C1
8	A92-G	16	WH	3613770C1
9	A63-GJ	18	WH	3613771C1
10	A63-GC	18	WH	3613771C1
11	A11-GKH	18	WH	3613771C1
12*	A11-GNA	18	WH	3613771C1
12#	A11-GEC	16	WH	3613770C1
12%	A11-GT	18	WH	3613771C1
13	A22-G	18	WH	3613771C1
14	A11-GN	18	WH	3613771C1

* W/ XMSN
W/ TELEMATICS
% W/ REMOTE START / STOP
@ W/ LONESTAR


CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 003

Figure 218 Connector Composites (1002), (1003)

https://truckmanualshub.com/

14.6. CONNECTOR COMPOSITES (1006), (1007), (1010), (1015), P. 4

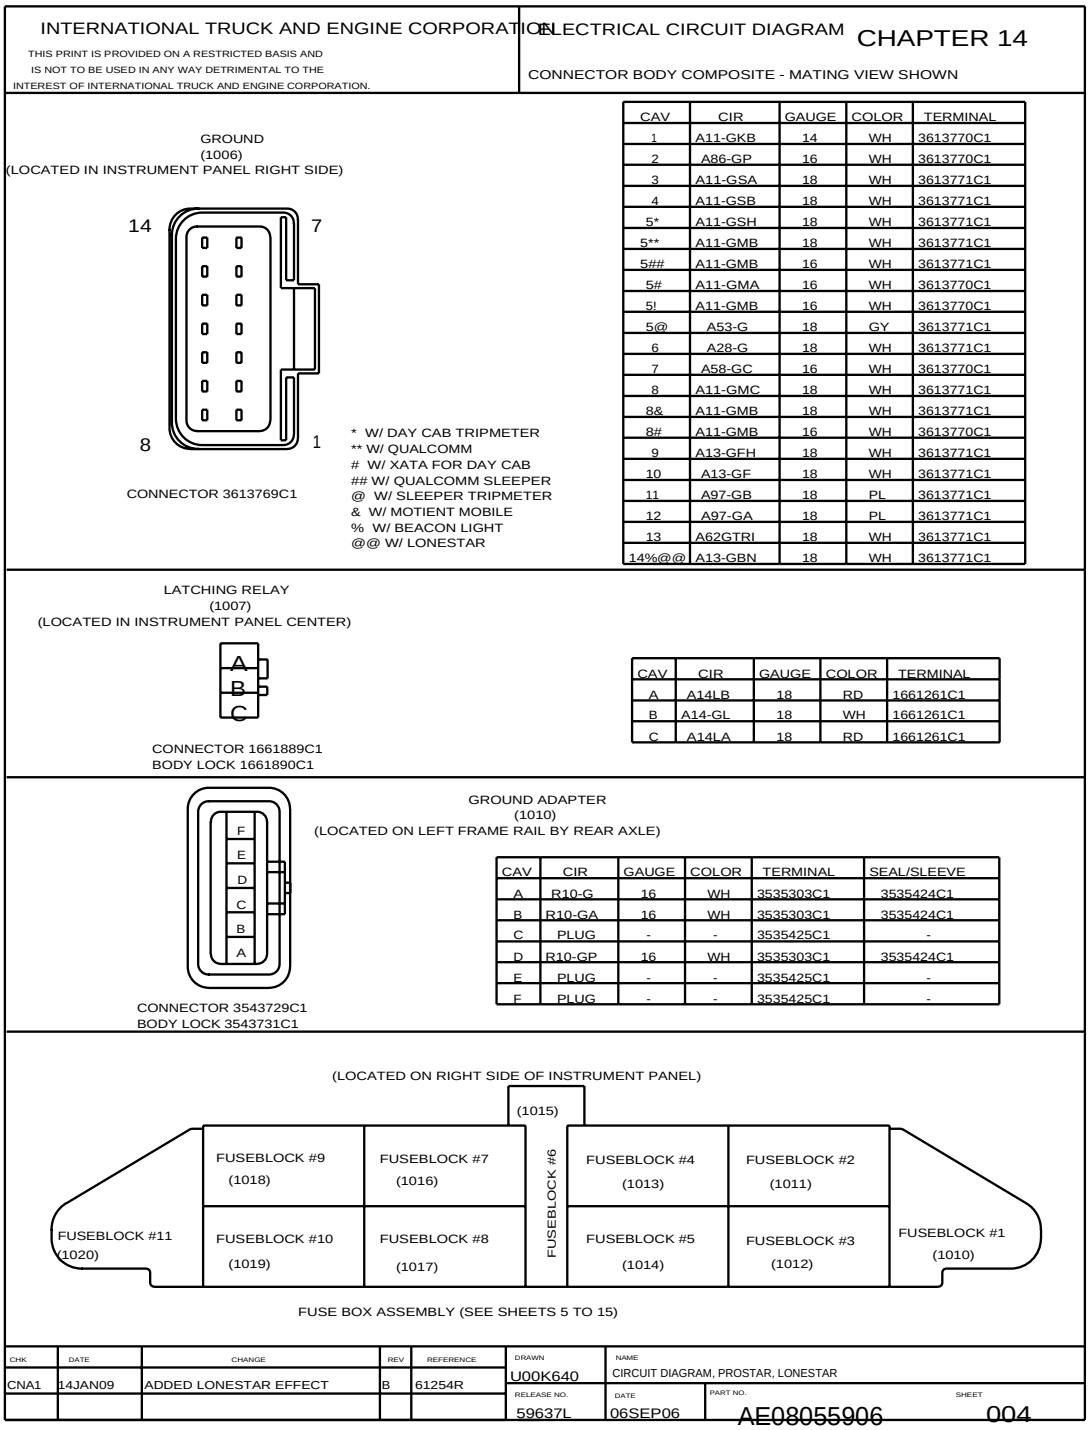

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A11-GKB	14	WH	3613770C1
2	A86-GP	16	WH	3613770C1
3	A11-GSA	18	WH	3613771C1
4	A11-GSB	18	WH	3613771C1
5*	A11-GSH	18	WH	3613771C1
5**	A11-GMB	18	WH	3613771C1
5##	A11-GMB	16	WH	3613771C1
5#	A11-GMA	16	WH	3613770C1
5!	A11-GMB	16	WH	3613770C1
5@	A53-G	18	GY	3613771C1
6	A28-G	18	WH	3613771C1
7	A58-GC	16	WH	3613770C1
8	A11-GMC	18	WH	3613771C1
8&	A11-GMB	18	WH	3613771C1
8#	A11-GMB	16	WH	3613770C1
9	A13-GFH	18	WH	3613771C1
10	A13-GF	18	WH	3613771C1
11	A97-GB	18	PL	3613771C1
12	A97-GA	18	PL	3613771C1
13	A62GTRI	18	WH	3613771C1
14%@@	A13-GBN	18	WH	3613771C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A14LB	18	RD	1661261C1
B	A14-GL	18	WH	1661261C1
C	A14LA	18	RD	1661261C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R10-G	16	WH	3535303C1	3535424C1
B	R10-GA	16	WH	3535303C1	3535424C1
C	PLUG	-	-	3535425C1	-
D	R10-GP	16	WH	3535303C1	3535424C1
E	PLUG	-	-	3535425C1	-
F	PLUG	-	-	3535425C1	-

Figure 219 Connector Composites (1006), (1007), (1010), (1015)

https://truckmanualshub.com/

14.7. CONNECTOR COMPOSITE (1010), P. 5


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 1
(1010)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

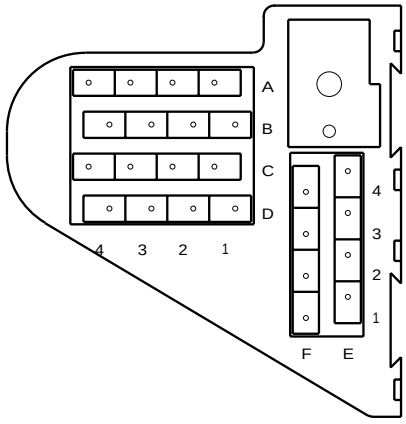

CONNECTOR 3599539C1
BODY LOCK 3536085C1

* W/ ULTRASHIFT XMSN
% CRIMPED TOGRTHER
W/ ICON & FREEDOMLINE & MANUAL XMSN
** W/ ICON & ULTRASHIFT XMSN
W/ FREEDOMLINE & AUTOSHIFT XMSN
@ MUTUALLY EXCLUSIVE
@@ W/ DAY CAB FLOOR LIGHT
& W/ MANUAL XMSN
&& W/ CUSTOMER SUPPLIED SKIRT LIGHTS

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A54XD	16	BN	3573312C1
A2	A54XV	16	BN	3573312C1
A3	A17B	18	PK	3534164C1
A4*	A104AH	16	DKBL	3573311C1
A4	A17H	16	PK	
B1%&&	A54X	16	BN	3573311C1
	A54XA	16	BN	3573311C1
B2	A54-GXB	20	WH	3535484C1
B3&	A104AH	16	DKBL	3573311C1
	A17	16	PK	3573311C1
B3%*	A17	16	PK	3573312C1
	A17C	18	PK	
B3#	A17HB	18	PK	3534164C1
B3%**	A17C	18	PK	3573312C1
	A17HB	18	PK	
B4##	A17-GC	16	WH	3573312C1
B4*	A17-GC	18	WH	3534164C1
C1	A65AB	18	OR	3534164C1
C2	A65BD	16	OR	3573312C1
C3	A63J	20	DKBL	3535484C1
C4%	A63JA	18	DKBL	3573312C1
	A63JB	18	DKBL	
C4@@	A63JA	18	DKBL	3534164C1
D1@	A65BC	14	OR	3573312C1
D1@	A65B	16	OR	3573312C1
D1@	A65BF	16	OR	3573312C1
D2	A65-GW	18	WH	3534164C1
D3	A63JJ	20	DKBL	3535484C1
D4%	A63JJ	20	DKBL	3573312C1
	A63JV	18	DKBL	
E1	A12C	18	LTBL	3534164C1
E2	A14FA	12	RD	3573312C1
E3	A14KB	12	RD	3573312C1
E4%	A14KA	12	RD	3573311C1
	A14KB	12	RD	
F1	A12CV	18	LTBL	3534164C1
F2	A75D	18	LTGN	3534164C1
F3	A63JV	18	DKBL	3534164C1
F4	A14EF	18	RD	3534164C1

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	BREAKER	
F1-A	E1, F1	5	3534208C1	-	BODY CONTROLLER
F1-B	E2, F2	5	3534208C1	-	CAB HVAC CONTROL
F1-C	E3, F3	5	3534208C1	-	FLOOR LIGHTS
F1-D	E4, F4	5	3534208C1	-	SECONDARY GAUGE CLUSTER

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
A1, A2, B1, B2	3600330C1	SKIRT LIGHTS
A3, A4, B3, B4	3600330C1	START
C1, C2, D1, D2	3600330C1	CUSTOMER SUPPLIED WORK LIGHTS
C3, C4, D3, D4	3600330C1	FLOOR LIGHTS

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 005

Figure 220 Connector Composite (1010)

https://truckmanualshub.com/

14.8. CONNECTOR COMPOSITE (1011), P. 6


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 2
(1011)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

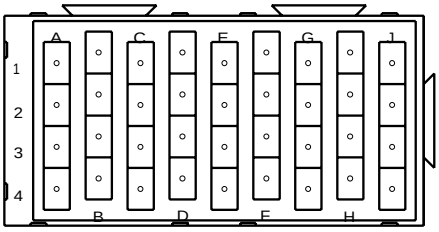

CONNECTOR 3534572C1
BODY LOCK 3536085C1

% CRIMPED TOGETHER
* W/ STD BATTERY FEED/ PROSTAR
** W/ LOAD SHEDDING/ PROSTAR
@ W/ XATA
W/ TRIPMASTER
W/ QUALCOMM
@@ W/ LONESTAR
%% W/ TELEMATICS

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A14KF	12	RD	3573311C1
A2	A12-G	18	WH	3534164C1
A3	A14FB	12	RD	3573311C1
A4%	A13-GF	18	WH	3573312C1
	A13-GFD	18	WH	
B1	-	-	-	-
B2	-	-	-	-
B3	-	-	-	-
B4	-	-	-	-
C1	A14FF	12	RD	3573312C1
C2*	A14KD	12	RD	3536304C1
C2**	A14KD	12	RD	3536304C1
C2@@	A14KC	12	RD	3573311C1
C3	A14JA	12	RD	3573312C1
C4	A14KH	12	RD	3536304C1
D1	A86P	18	LTGN	3534164C1
D2%@	A14EA	16	RD	3573312C1
	A14EB	18	RD	
D2##	A14ED	18	RD	3534164C1
D2%%	A14NN	18	RD	3534164C1

CAV	CIR	GAUGE	COLOR	TERMINAL
D2#	A14SD	18	RD	3534164C1
D3	A14EE	16	RD	3573312C1
D4	A64C	16	YL	3573312C1
E1	(A56J)			3536301C1
E2	(A14KD)			3536304C1
E3	(A57J)			3536301C1
E4	(A14KH)			3536304C1
F1	A14FC	12	RD	3573312C1
F2	A84	16	LTGN	3573312C1
F3	A14FD	12	RD	3573312C1
F4	A63BD	18	DKBL	3534164C1
G1	(A56J)			3536301C1
G2	-	-	-	-
G3	(A57J)			3536301C1
G4	-	-	-	-
H1	A56C	18	OR	3534164C1
H2	A56T	12	OR	3573311C1
H3	A57C	18	OR	3534164C1
H4	A57T	12	OR	3573311C1
J1	(A56J)			3536301C1
J2%	A56-GT	18	WH	3573312C1
	A57-GT	18	WH	
J3	(A57J)			3536301C1
J4%	A57-GT	18	WH	3573312C1
	A58-GT	18	WH	

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	BREAKER	
F2-A	E1, F1	15	3534210C1	3536179C1	TRAILER LEFT TURN
F2-B	E2, F2	15	3534210C1	3536179C1	CIGAR LIGHTER
F2-C	E3, F3	15	3534210C1	3536179C1	TRAILER RIGHT TURN
F2-D	E4, F4	10	3534209C1	3536178C1	CAB DOME / MAP LIGHTS
F2-E	C1, D1	10	3534209C1	3536178C1	ENTERTAINMENT RADIO MEMORY
F2-F	C2, D2	10	3534209C1	3536178C1	SATELLITE COMMUNICATION
F2-G	C3, D3	15	3534210C1	3536179C1	INSTRUMENT CLUSTER
F2-H	C4, D4	10	3534209C1	3536178C1	SPOT LIGHT

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
A1, A2	3600329C1	ACCESSORY *
A3, A4	3600329C1	IGNITION RELAY # 1 *
H1, H2, J1 J2	3600330C1	TRAILER LEFT TURN
H3, H4, J3, J4	3600330C1	TRAILER RIGHT TURN

* ALSO SEE CONNECTOR 1013

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 006

Figure 221 Connector Composite (1011)

https://truckmanualshub.com/

14.9. CONNECTOR COMPOSITE (1012), P. 7


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 3
(1012)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

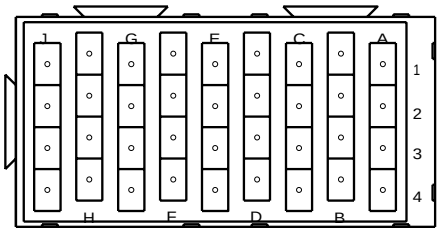

% CRIMPED TOGETHER
@ W/ LONESTAR

CONNECTOR 3534572C1
BODY LOCK 3536085C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A14MA	12	RD	3573311C1
A2%	A13-GFD	18	WH	3573312C1
	A13-GFE	18	WH	
A3	A14MC	12	RD	3573311C1
A4%	A13-FE	18	WH	3573312C1
	A13-FF	18	WH	
A4%@	A13-GFE	18	WH	3573312C1
	A13-GFF	18	WH	
B1	-	-	-	-
B2	-	-	-	-
B3	-	-	-	-
B4	-	-	-	-
C1%	A15	18	RD	3573312C1
	A98H	18	BK	
C2	(A68J)			3536299C1
C3	A86P	16	LTGN	3573312C1
C4	(A58J)			3536299C1
D1	A14JB	12	RD	3573312C1
D2	A14HB	12	RD	3573312C1
D3	A14KK	12	RD	3573312C1
D4	A14HA	14	RD	3573312C1
D4@	A14HA	12	RD	3573312C1

CAV	CIR	GAUGE	COLOR	TERMINAL
E1	A68	18	BN	3534164C1
E2	(A68J)			3536299C1
E3	A54C	18	BN	3534164C1
E4	(A58J)			3536299C1
F1	A68T	12	BN	3573311C1
F2%	A68-GT	18	WH	3573312C1
	A70-GT	18	WH	
F3	A58T	12	BN	3573311C1
F4%	A58-GT	18	WH	3573312C1
	A68-GT	18	WH	
G1	A82M	18	GY	3534164C1
G2	A82E	16	GY	3573312C1
G3	A82N	18	GY	3534164C1
G4	A82K	16	GY	3573312C1
H1	-	-	-	-
H2	A82J	16	GY	3573312C1
H3	-	-	-	-
H4	A82L	16	GY	3573312C1
J1	A82P	16	GY	3573312C1
J2	A82F	18	GY	3534164C1
J3	A82P	16	GY	3573312C1
J4	A82H	18	GY	3534164C1

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	BREAKER	
F3-A	C1, D1	10	3534209C1	3536178C1	KEY SWITCH
F3-B	C2, D2	20	3534211C1	3536180C1	TRAILER TAIL LIGHT
F3-C	C3, D3	15	3534210C1	3536179C1	AUX POWER SOURCES
F3-D	C4, D4	20	3534211C1	3536180C1	TRAILER MARKER LIGHTS

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
A1, A2	3600329C1	IGNITION RELAY # 2 *
A3, A4	3600329C1	IGNITION RELAY # 3 *
E1, E2, F1, F2	3600330C1	TRAILER TAIL LIGHT
E3, E4, F3, F4	3600330C1	TRAILER MARKER LIGHT
G1, G2, H2, J1, J2	3519350C1	WIPER POWER
G3, G4, H4, J3, J4	3519350C1	WIPER HI / LO

* ALSO SEE CONNECTOR 1014

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 007

Figure 222 Connector Composite (1012)

https://truckmanualshub.com/

14.10. CONNECTOR COMPOSITE (1013), P. 8

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.


ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 4
(1013)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

W/ STD IGN FEED
& W/ INTERNATIONAL ENGINE ECM
! W/ LONESTAR
&& W/ NO IDLE PACKAGE-TRI PAC

% CRIMPED TOGETHER
* W/ TIRE PRESSURE DISPLAY
** W/ AUTOSHIFT XMSN
@ W/ ULTRA SHIFT XMSN
@@ W/ ULTRASHIFT 3 XMSN
W/ REMOTE START / STOP

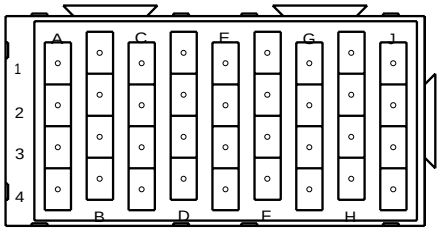

CONNECTOR 3534572C1
BODY LOCK 3536085C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A12V	12	LTBL	3573311C1
A2	A12V	12	LTBL	3536306C1
A3	A13FC	12	PK	3536304C1
A4	A13FC	12	PK	3536306C1
B1%*	A22E	18	TN	3573312C1
	A12C	18	LTBL	
B1	A12C	18	LTBL	3534164C1
B2	A12F	18	LTBL	3534164C1
B3%	A73A	18	LTGN	3573312C1
	A13EA	18	PK	
B4%	A75B	18	LTGN	3573312C1
	A13	18	PK	
C1	(A12V)			3536301C1
C2	(A12V)	-	-	3536306C1
C3	(A13FC)	-	-	3536304C1
C4	(A13FC)	-	-	3536306C1
D1	A12U	16	LTBL	3573312C1
D2%	A86F	18	LTGN	3573312C1
	A86R	18	LTGN	
D3	A13B	18	PK	3534164C1
D4	A97FC	16	PL	3573312C1
D4#!	A104AK	16	DKBL	3573312C1
D4&&!	A13TRIB	16	PK	3573312C1

CAV	CIR	GAUGE	COLOR	TERMINAL
E1	(A12V)			3536301C1
E2	(A12V)	-	-	3536306C1
E3	(A13FC)	-	-	3536304C1
E4	(A13FC)	-	-	3536306C1
F1	-	-	-	-
F2	-	-	-	-
F3	-	-	-	-
F4	-	-	-	-
G1	(A12V)			3536301C1
G2	(A12V)	-	-	3536306C1
G3	(A13FC)	-	-	3536304C1
G4	(A13FC)	-	-	3536306C1
H1%!	A73B	16	OR	3573311C1
	A94AM	14	GY	35733111C1
H2	A78V	18	LTGN	3534164C1
H3%	A13A	16	PK	3573312C1
	A92UA	18	TN	
H3**	A92U	16	TN	3534164C1
H3@	A92U	16	TN	3573312C1
H4%&	A97F	16	PL	3573312C1
	A97FB	16	PL	3573312C1
H4@@	A97FA	16	PL	3573312C1
J1	A12A	18	LTBL	3534164C1
J1%!	A12A	18	LTBL	3536295C1
	A12D	18	LTBL	3536295C1
J2	(A12V)	-	-	3536306C1
J3%#	A13FD	18	PK	3573312C1
	A13FL	16	PK	
J3%##!	A97FB	18	PL	3573312C1
	A13FE	18	PK	3573312C1
J3##	A97FB	18	PL	3534164C1
J3%	A13F	18	PK	3573312C1
	A13FD	18	PK	
J4	(A13FC)	-	-	3536306C1

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	BREAKER	
F4-A	G1, H1	-	-	-	OPEN / ISO TRAILER SOCKET
F4-B	G2, H2	10	3534209C1	3536178C1	POWER MIRROR
F4-C	G3, H3	10	3534209C1	3536178C1	TRANSMISSION - SEE NOTE 1
F4-D	G4, H4	10	3534209C1	3536178C1	ENGINE ECU - N/ ICON
F4-E	C1, D1	10	3534209C1	3536178C1	VEHICLE SENSOR MODULE
F4-F	C2, D2	10	3534209C1	3536178C1	CB RADIO / ENTERTAINMENT RADIO
F4-G	C3, D3	10	3534209C1	3536178C1	OPTIONAL WARNING LIGHTS
F4-H	C4, D4	10	3534209C1	3536178C1	REMOTE START / STOP / TRI-PAC
F4-J	A1, B1	10	3534209C1	3536178C1	SECONDARY DISPLAY / TIRE PRESSURE
F4-K	A2, B2	10	3534209C1	3536178C1	SWITCH PACK
F4-L	A3, B3	10	3534209C1	3536178C1	CLUSTER / CAB HVAC CONTROLLER N/ ICON
F4-M	A4, B4	10	3534209C1	3536178C1	BODY CONTROLLER / CAB HVAC / LPM / N/ ICON

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
J1, J2	3600329C1	* ACCESSORY RELAY
J3, J4	3600329C1	* IGNITION RELAY # 1

* ALSO SEE CONNECTOR 1011

NOTE 1: W/ EATON AUTOSHIFT,ULTRASHIFT XMSN & MERITOR FREEDOMLINE XMSN

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	UOOK640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 008

Figure 223 Connector Composite (1013)

https://truckmanualshub.com/

14.11. CONNECTOR COMPOSITE (1014), P. 9


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 5
(1014)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

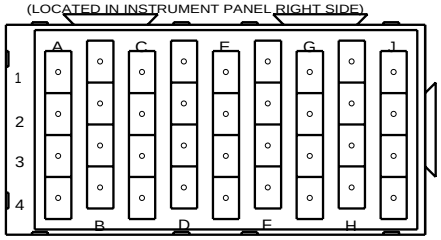

CONNECTOR 3534572C1
BODY LOCK 3536085C1

% CRIMPED TOGETHER
@@ W/ ICON
@ W/ QUALCOMM FOR SLEEPER
** W/ SMARTCRUISE ONLY (VORAD VS-400)
* MUTUALLY EXCLUSIVE
W/ SLEEPER TRIPMETER
W/ DAYCAB TRIPMETER
%% W/ LONESTAR
& W/ QUALCOMM FOR DAYCAB

CAV	CIR	GAUGE	COLOR	TERMINAL
G1	(A13FB)	-	-	3536304C1
G2	(A13FB)	-	-	3536306C1
G3	(A13FA)	-	-	3536304C1
G4	(A13FA)	-	-	3536306C1
H1	A67A	16	GY	3573312C1
H1**	A67A	16	PK	3573312C1
H2	A88V	18	LTGN	3534164C1
H3	A87C	18	GY	3534164C1
H4	A13EH	18	PK	3534164C1
J1%	A13FD	18	PK	3573312C1
	A13FE	18	PK	3573312C1
J1@@	A13FH	18	PK	3573312C1
J2	(A13FB)			3536306C1
J3%	A13-GFE	18	PK	3573312C1
	A13-GFF	18	PK	3573312C1
J4	(A13FA)			3536306C1
F4	-	-	-	-

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A13FB	12	PK	3536304C1
A2	A13FB	12	PK	3536306C1
A3	A13FA	12	PK	3536304C1
A4	A13FA	12	PK	3536306C1
B1%#	A13SD	18	PK	3573312C1
	A70D	18	OR	3573312C1
B1&	A13EE	16	DKBL	3515517C1
B1@	A13EE	18	PK	3534164C1
B1%##	A13EE	18	PK	3573312C1
	A13EF	18	PK	3573312C1
B1##	A70D	18	GY	3573312C1
B1	A13N	18	PK	3515517C1
B2	A39	16	GY	3573312C1
B3%%	A67FA	18	PK	3534164C1
B4*	A71B	16	OR	3573312C1
B4*	A71A	16	OR	3573312C1
B4*	A71A	18	OR	3534164C1
C1	(A13FB)	-	-	3536304C1
C2%%	(A13FB)	-	-	3536306C1
C3	(A13FA)	-	-	3536304C1
C4	(A13FA)	-	-	3536306C1
D1%%	A13BL1	18	PK	3515517C1
D1@@%%	A75B	18	LTGN	3534764C1
D1%	A13EA	18	PK	3573312C1
	A73A	18	LTGN	3573312C1
D2%%	A13SE	18	PK	3534164C1
D3	A1A	18	PK	3515517C1
D4	A28V	18	TN	3534164C1
E1	(A13FB)	-	-	3536304C1
E2	(A13FB)	-	-	3536306C1
E3	(A13FA)	-	-	3536304C1
E4	(A13FA)	-	-	3536306C1
F1	-	-	-	-
F2	-	-	-	-
F3	-	-	-	-

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	BREAKER	
F5-A	G1, H1	10	3534209C1	3536178C1	COLLISION AVOIDANCE
F5-B	G2, H2	10	3534209C1	3536178C1	PTO
F5-C	G3, H3	10	3534209C1	3536178C1	WINDSHIELD WASHER PUMP
F5-D	G4, H4	10	3534209C1	3536178C1	SECONDARY GAUGE CLUSTER
F5-E	C1, D1	10	3534209C1	3536178C1	CLUSTER / CAB HAVC CONTROLLER W/ ICON
F5-E	C1, D1	10	3534209C1	3536178C1	CLUSTER / CAB HAVC CONTROLLER W/ ICON
		10/5			CAB HVAC CPM W/ ICON / BEACON N/ ICON
F5-F	C2, D2	10	3534209C1	3536178C1	DRIVER DISPLAY
F5-G	C3, D3	-	-	-	A
F5-G	C3, D3	5A	-	-	ALTERNATOR WARNING
		10A			5TH WHEEL JAW UNLOCK AND MNTR
		5A			BEACON W/ ICON
F5-H	C4, D4	10	3534209C1	3536178C1	COMPASS MODULE
F5-J	A1, B1	10	3534209C1	3536178C1	SATELLITE COMMUNICATION
F5-K	A2, B2	15	3534210C1	3536179C1	AIR DRYER
F5-L	A3, B3	-	-	-	COLLISION AVOIDANCE SIDE
F5-M	A4, B4	10	3534209C1	3536178C1	BACK-UP LIGHTS

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
J1, J2	3600329C1	IGNITION RELAY # 2 *
J3, J4	3600329C1	IGNITION RELAY # 3 *

* ALSO SEE CONNECTOR 1012

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 009

Figure 224 Connector Composite (1014)

https://truckmanualshub.com/

14.12. CONNECTOR COMPOSITE (1015), P. 10


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 6
(1015)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

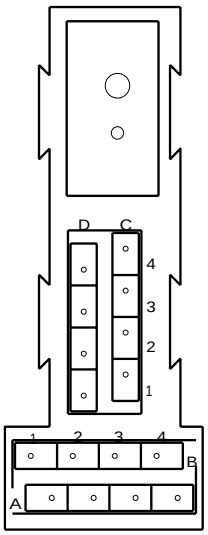

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A19V	16	GY	3573312C1
A2	A37V	18	TN	3534164C1
A3	-	-	-	-
A4	A75	12	LTGN	3573311C1
B1	A14RA	16	RD	3573312C1
B1*	A14RA	12	RD	3573311C1
B2	A14NC	14	RD	3573312C1
B2*	A14NC	12	RD	3573311C1
B3	-	-	-	-
B4	A14FE	12	RD	3573311C1
C1	A37	20	TN	3535484C1
C2	A37A	18	TN	3534164C1
C3	A19A	18	GY	3534164C1
C4	A19	16	GY	3573312C1
D1	A37V	18	TN	3534164C1
D2	A37-GA	18	TN	3534164C1
D3	A19V	16	GY	3573312C1
D4	A19-GB	18	WH	3534164C1

* W/ LONESTAR

CONNECTOR 3599501C1
BODY LOCK 3536085C1

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	BREAKER	
F6-A	A4, B4	30	3534213C1	3536182C1	CAB HVAC BLOWER MOTOR
F6-B	A3, B3	-	-	-	OPEN
F6-C	A2, B2	10	3534209C1	3536178C1	FUEL TRANSFER PUMP
F6-D	A1, B1	20	3534211C1	3536180C1	FUEL HEATER

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
C1, C2, D1, D2	3600330C1	FUEL TRANSFER PUMP
C3, C4, D3, D4	3600330C1	FUEL HEATER

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	20JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 010

Figure 225 Connector Composite (1015)

https://truckmanualshub.com/

14.13. CONNECTOR COMPOSITE (1016), P. 11


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 7
(1016)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

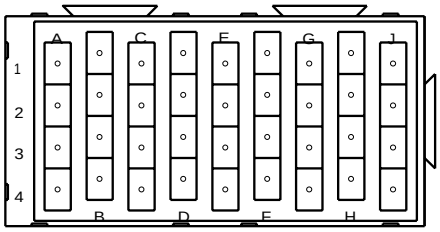

CONNECTOR 3536085C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A75C	10	LTGN	3573311C1
A2	A65BD	16	OR	3573312C1
A3	-	-	-	-
A4	A14VB	10	RD	3573311C1
B1	A14ND	12	RD	3573311C1
B2	A14MD	16	RD	3573312C1
B2@	A14MD	12	RD	3573311C1
B3	-	-	-	-
B4	A14NA	12	RD	3573311C1
C1	-	-	-	-
C2	-	-	-	-
C3	-	-	-	-
C4	-	-	-	-
D1	-	-	-	-
D2	-	-	-	-
D3	-	-	-	-
D4	-	-	-	-
E1	A14VA	10	RD	3573311C1
E2	A14SC	12	RD	3573311C1
E2*	A72E	18	OR	3534164C1
E2#@	A72A	12	OR	3573311C1

% MUTUALLY EXCLUSIVE
* W/ SWITCH CONTROLLED CENTER PIN
W/ AUX ISO TRAILOR SOCKET
@ W/ LONESTAR

CAV	CIR	GAUGE	COLOR	TERMINAL
E3	-	-	-	-
E4	(A70J)			3536299C1
F1	A14RD	12	RD	3573311C1
F2	A14RB	12	RD	3573311C1
F3	-	-	-	-
F4	A14HC	12	RD	3573311C1
G1	A72	18	OR	3534164C1
G1*	A72EC	18	OR	3534164C1
G1#@	A72F	16	OR	3573312C1
G2*	A94TA	12	GY	3573311C1
G2	A14SC	12	RD	3573311C1
G2#@	A72V	12	DKBL	3573311C1
G3	A70C	18	OR	3534164C1
G4	(A70J)			3536299C1
H1	-	-	-	-
H2	-	-	-	-
H3	-	-	-	-
H4	-	-	-	-
J1	A72A	12	OR	3573311C1
J1*	A94TC	12	GY	3573311C1
J2%*	A72-GB	18	WH	3573312C1
	A72-GC	18	WH	
J2%	A72-G	18	WH	3573312C1
	A72-GA	18	WH	
J2#@	A72-GA	16	WH	3573312C1
J3	A70T	12	OR	3573311C1
J4	A70-GT	18	WH	3534164C1

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	BREAKER	
F7-A	E1, F1	30	3534213C1	3536182C1	SLEEPER FUSE PANEL FEED
F7-B	E2, F2	25 / 10	3534209C1	3536178C1	TRAILER SOCKET AUX /SWITCHED CENTER PIN/ISO
F7-C	E3, F3	-	-	-	OPEN
F7-D	E4, F4	30	3534213C1	3536182C1	TRAILER STOP LIGHTS
F7-E	A1, B1	30	3534213C1	3536182C1	SLEEPER HVAC BLOWER
F7-F	A2, B2	15	3534210C1	3536179C1	CUSTOMER SUPPLIED WORK LIGHT
F7-G	A3, B3	-	-	-	OPEN
F7-H	A4, B4	30	3534213C1	3536182C1	SLEEPER FUSE PANEL FEED

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
G1, G2, J1, J2	3600329C1	TRAILER AUX / SOCKET CENTER PIN
G3, G4, J3, J4	3600329C1	TRAILER STOP LIGHTS

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 011

Figure 226 Connector Composite (1016)

https://truckmanualshub.com/

14.14. CONNECTOR COMPOSITE (1017), P. 12


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 8
(1017)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

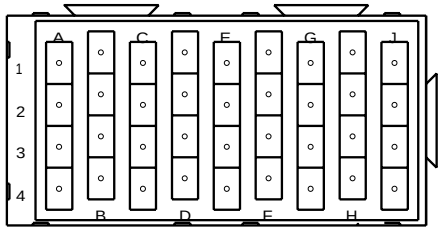

CONNECTOR 3536085C1

% CRIMPED TOGETHER
* IGNITION FEED WIRING
REMOTE START / STOP IGNITION FEED
@ IGNITION FEED W/ ICON & N/ FREEDOMLINE
& IGNITION CENTRE PIN FEED
N/ IDLE HEAT - CAB
** SLEEPER ACCESSORY FEED W/ ICON
&& ANTILOCK BRAKES W/ WABCO
@@ LONESTAR

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A14NJ	12	RD	3536301C1
A2	A14JE	12	RD	3573311C1
A3@@	A94TT2	14	GY	3573312C1
A4	A14JD	12	RD	3573311C1
B1	A54XV	16	BN	3573312C1
B2	A97VT	14	PL	3573312C1
B3@@	A94TT	14	GY	3573312C1
B4	-	-	-	-
C1	(A14NJ)	-	-	3536301C1
C2	-	-	-	-
C3	-	-	-	-
C4	-	-	-	-
D1	-	-	-	-
D2	-	-	-	-
D3	-	-	-	-
D4	-	-	-	-
E1	(A14NJ)	-	-	3536301C1
E2	A94AY	12	GY	3597157C1
E2&&	A94AY	14	GY	3548972C1
E3	-	-	-	-
E2	A94AY	18	GY	3515517C1
E4	A94T	12	GY	3573311C1
E4&	A94TV	12	GY	3573311C1
E4	A94TC	12	GY	3573311C1

CAV	CIR	GAUGE	COLOR	TERMINAL
F1	A14U	16	RD	3573312C1
F2	A14HE	12	RD	3573311C1
F3	-	-	-	-
F4	A14JC	12	RD	3573311C1
G1##	A75TP	18	LTGN	3515517C1
G2##	A14HHE	18	RD	3515517C1
G3%*	A13FF	18	PK	3573312C1
	A13FH	18	PK	
G3%@	A13FF	18	PK	3534164C1
	A13HH	18	GY	3573312C1
G3%#	A13FF	18	PK	3573312C1
	A13FH	18	GY	
G3	A13FF	18	PK	3573312C1
G4	(A94TC)	-	-	3536299C1
G4&	A94TV	12	GY	3573311C1
H1	-	-	-	-
H2**	A12	18	LTBL	3515517C1
H2##%	A75TB	18	LTGN	3573312C1
	A75TD	18	LTGN	
H3	-	-	-	-
H4	-	-	-	-
J1##	A75TR	18	LTGN	3515517C1
J1**	A12D	18	LTBL	3515517C1
J2##	A75T-GD	18	LTGN	3515517C1
J2**	A97-GA	18	PL	3515517C1
J3&	A94T	12	GY	3573311C1
J3	A94TB	12	GY	3573311C1
J4%	A13-GFF	18	WH	3573312C1
	A12-G	18	WH	3573312C1

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	BREAKER	
F8-A	E1, F1	10	3534209C1	3536178C1	VEHICLE SENSOR MODULE
F8-B	E2, F2	30	3534213C1	3536182C1	TRACTOR ABS ECU
F8-C	E3, F3	-	-	-	OPEN
F8-D	E4, F4	30	3534213C1	3536182C1	TRAILER ABS ECU
F8-E	A1, B1	15	3534210C1	3536179C1	SKIRT LIGHTING
F8-F	A2, B2	30	3534213C1	3536182C1	TRANSMISSION - SEE NOTE 1
F8-F	A2, B2	20	3534213C1	3536182C1	INTERNATIONAL ENGINE ACTUATOR
F8-G	A3, B3	5	3534208C1	-	TRLR TRACS
F8-H	A4, B4	30	3534213C1	3536182C1	ENGINE ECU
F8-H	A4, B4	25/10	3534213C1	3536182C1	INTERNATIONAL ENGINE ECM OR ICON

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
G3, G4, H4, J3, J4	3600329C1	TRAILER ABS ECU
G1, G2, J1, J2	3600329C1	ICON ACCESSORY NO IDLE HEAT CONTROL

NOTE 1: W/ EATON AUTOSHIFT,ULTRASHIFT XMSN & MERITOR FREEDOMLINE XMSN

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	D	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 012

Figure 227 Connector Composite (1017)

https://truckmanualshub.com/

14.15. CONNECTOR COMPOSITE (1018), P. 13


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND
IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE
INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 9
(1018)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

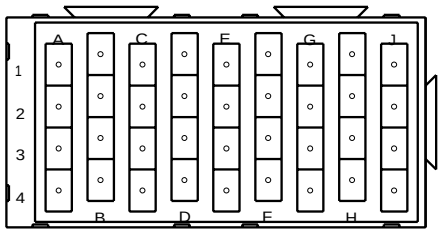

CONNECTOR 3536085C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A81C	12	LT GN	3573311C1
A2	-	-	-	-
A3	A97E	14	PL	3573312C1
A3@	A97EZ	14	RD	3573312C1
A4	-	-	-	-
B1	A14NB	12	RD	3573311C1
B2	-	-	-	-
B3	A14KJ	12	RD	3573311C1
B4	-	-	-	-
C1	A81B	12	LT GN	3573311C1
C2&	A13FK	18	PK	3534164C1
C2%%	A14TR1A	16	RD	3515517C1
C3	-	-	-	-
C4	-	-	-	-
D1	A14MB	12	RD	3573311C1
D2%*	A13HA	18	PK	3573312C1
	A13HB	18	PK	
D3	-	-	-	-
D4	-	-	-	-
E1	-	-	-	-
E2	-	-	-	-
E3	-	-	-	-
E4	(A97H)	-	-	3536301C1

% CRIMPED TOGETHER
* IDLE REDUCTION
IGNITION FEED WIRING
** N/ IDLE HEAT - CAB
W/ REMOTE START / STOP
@ W/ LONESTAR
%% W/ NO IDLE PACKAGE (TRI-PAC)

CAV	CIR	GAUGE	COLOR	TERMINAL
F1%##	A104AN	16	DKBL	3573312C1
	A104AP	18	DKBL	
F1**	A75TL	18	LTGN	3515517C1
F2**	A75TC	18	LTGN	3515517C1
F2##	A104AJ	16	DKBL	3573312C1
F3	-	-	-	-
F4	A14KL	12	RD	3573311C1
G1	A97X	18	PL	3573312C1
G1	A97Z	18	PL	3573312C1
G1%##	A104AL	16	DKBL	3573311C1
	A104AK	16	DKBL	
G1**	A75TK	18	LTGN	3515517C1
G2##	A104-GA	18	WH	3573312C1
G2**	A75TD	18	LTGN	3515517C1
G2%##@	A104G	18	WH	3573312C1
	A104-GA	18	WH	
G3	A97HB	16	PL	3573312C1
G4	(A97H)			3536301C1
	A104AP	18	DKBL	3515517C1
H1**	A75TJ	18	LTGN	3515517C1
H2	A13FH	18	PK	3534164C1
H2%&@	A13FH	18	PK	3573312C1
	A97Z	18	PL	
H2##	A9RB	18	GY	3534164C1
H2**	A75TA	18	LTGN	3534164C1
H3	-	-	-	-
H4	-	-	-	-
J1%#	A13F	18	PK	3573312C1
	A13FK	18	PK	
J1**	A75TH	18	LTGN	3515517C1
J1##	A104AR	18	DKBL	3515517C1
J2	A13-GFH	18	WH	3534164C1
J2##	A104-GA	18	WH	3534164C1
J2**	A75TB	18	LTGN	3534164C1
J3	A97HA	14	PL	3573312C1
J4	(A97H)			3536301C1

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	CIR BREAKER	
F9-A	C1, D1	30	3534213C1	3536182C1	POWER WINDOW / DOOR - DRIVER
F9-B	C2, D2	7.5/3	3546109C1	3536177C1	ICON OR TRI-PAC
F9-C	E3, F3	10	3534209C1	3536178C1	INTERNATIONAL ENGINE AFTER TREATMENT
F9-D	E4, F4	20	3534211C1	3536180C1	INTERNATIONAL ENGINE ECM RELAY
F9-E	A1, B1	30	3534213C1	3536182C1	POWER WINDOW / DOOR PASSENGER
F9-F	A2, B2	-	-	-	OPEN
F9-G	A3, B3	20	3534211C1	3536180C1	INTERNATIONAL ENGINE
F9-H	A4, B4	-	-	-	OPEN

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
H1, H2, J1, J2	3600330C1	SEE NOTE 1
G1, G2, F1, F2	3600330C1	SEE NOTE 2
G3, G4, H4, J3, J4	3600329C1	INTERNATIONAL ENGINE

NOTE 1: REMOTE START / STOP RELAY # 1 / NO IDLE HEAT - VALVE # 1A RELAY
NOTE 2: REMOTE START / STOP RELAY # 2 / NO IDLE HEAT - VALVE # 1B RELAY

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 013

Figure 228 Connector Composite (1018)

https://truckmanualshub.com/

14.16. CONNECTOR COMPOSITE (1019), P. 14


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 10
(1019)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

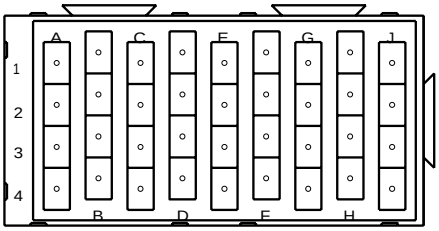

CONNECTOR 3534572C1
BODY LOCK 3536085C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1%*	A53ABA	18	YL	3573312C1
	A53AB	18	YL	3573312C1
A2	A52AB	18	YL	3534164C1
A3**@	A92H	18	TN	3534164C1
A3@**	A71C	18	OR	3534164C1
A4@@@	A71BD	16	OR	3573312C1
A4@@@	A92E	16	TN	3573312C1
A4@**	A71BA	16	OR	3573312C1
B1	-	-	-	-
B2	A53ABA	18	YL	3534164C1
B3	-	-	-	-
B4%	A97F	16	PL	3573312C1
	A97FB	16	PL	
B4#	A97FB	16	PL	3573312C1
C1	A50S	18	YL	3534164C1
C2	A53-G	18	GY	3534164C1

% CRIMPED TOGETHER
* W/ TRIPMASTER
** FREEDOMLINE XMSN
@ ULTRASHIFT XMSN
& IDLE REDUCTION
W/ INTERNATIONAL ENGINE
W/ DUAL CUSTOMER ACCESSORY
@@ W/ FREEDOMLINE & WORKLIGHT FEED
&& W/ BEACON LIGHT
%% W/ LONESTAR
! W/ PROSTAR

CAV	CIR	GAUGE	COLOR	TERMINAL
C3@	A97FA	16	PL	3573312C1
C3**	A71B	16	OR	3573312C1
C4**	A71-G	18	WH	3534164C1
C4@	A92F	18	TN	3534164C1
D1	-	-	-	-
D2	-	-	-	-
D3	-	-	-	-
D4	-	-	-	-
E1	-	-	-	-
E2	A14SAC	12	RD	3573311C1
E3	-	-	-	-
E4	A14SBC	12	RD	3573311C1
E4&&%%	A14BLT	14	RD	3573312C1
E4&!	A14HHD	16	RD	3573312C1
F1	-	-	-	-
F2	A14RC	12	RD	3573311C1
F3	-	-	-	-
F4	A14NH	12	RD	3573311C1
G1	A14SAB	18	RD	3534164C1
G2	A14SAC	12	RD	3573311C1
G3&	A17HE	18	PK	3534164C1
G3&&%%	A13BLT	18	PK	3534164C1
G3##	A14SBB	18	RD	3534164C1
G4	A14SBC	12	RD	3573311C1
G4&	A17	16	PK	3573312C1
G4&&%%	A14BLT	14	RD	3573312C1
G4##	A14SBC			
H1	-	-	-	-
H2	-	-	-	-
H3	-	-	-	-
H4	-	-	-	-
J1	A14SAD	12	LTGN	3573311C1
J2	A14-GSB	18	WH	3534164C1
J3	A14SBD	12	LTGN	3573311C1
J3&	A14HHD	16	RD	3573312C1
J3&&%%	A58BLT	14	BN	3534164C1
J3##	A14SBD			
J4	A14-GSD	18	WH	3534164C1
J4&	A17HF	18	PK	3534164C1
J4&&%%	A13-GBM	18	WH	3534164C1
J4##	A14GSD	18	WH	

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	CIR BREAKER	
F10-A	E1, F1	-	-	-	5TH WHL JAW MNTR - LOCK
F10-B	E2, F2	30	3435213C1	3536182C1	CUSTOMER ACCESSORY # 1
F10-C	E3, F3	-	-	-	OPEN
F10-D	E4, F4	30	3435213C1	3536182C1	CUSTOMER ACCESSORY # 2 / ICON

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
A1, A2, B2, C1, C2	3600329C1	TRIPMASTER HEADLIGHT INPUT
A3, A4, B4, C3, C4	3600329C1	SEE NOTE 1
G1, G2, H2, J1, J2	3600329C1	CUSTOMER ACCESSORY # 1
G3, G4, H4, J3, J4	3600329C1	CUSTOMER ACCESSORY # 2

NOTE 1 - RELAY: EATON ULTRASHIFT XMSN IGN / FREEDOMLINE XMSN BACK-UP

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 014

Figure 229 Connector Composite (1019)

https://truckmanualshub.com/

14.17. CONNECTOR COMPOSITE (1020), P. 15


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FUSE BLOCK 11
(1020)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

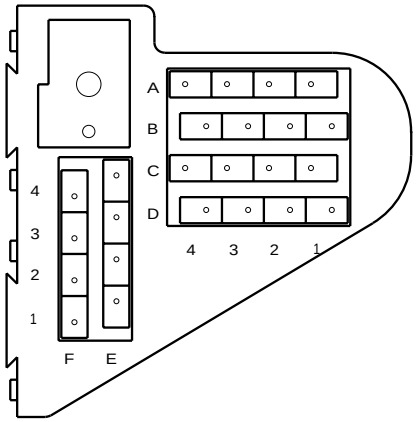

CONNECTOR 3599540C1
BODY LOCK 3536085C1

% CRIMPED TOGETHER
* W/ SINGLE PTO OVERLAY
** W/ DOUBLE PTO OVERLAY
W/ SINGLE CUSTOMER ACCESSORY
@ W/ TIRE PRESSURE DISPLAY
W/ PRODUCTIVITY DISPLAY
%% N/ IDLE HEAT - CAB
& W/ IDLE REDUCTION WITH FREEDOMLINE
&& W/ IDLE REDUCTION
@@ W/ INTERNATIONAL ENGINE & REMOTE START / STOP
*@ W/ INTERNATIONAL ENGINE
%* W/ BENDIX ABS
%# W/ WABCO ABS
#* W/ REMOTE START / STOP
*# W/ ICON
#& W/ NO IDLE HEAT

CAV	CIR	GAUGE	COLOR	TERMINAL
A1&	A97AB	18	PL	3515517C1
A1@@	A13FJ	18	PK	3515517C1
A2&	A97J	16	PL	3573312C1
A2&&*@	A97VT	14	PL	3573312C1
A3	-	-	-	-
A4	-	-	-	-
B1*@	A97VT1	14	PL	3573312C1
B1&	A97S	16	PL	3573312C1
B2&	A97-GB	18	PL	3515517C1
B2@@	A13-GFG	18	WH	3515517C1
B3	-	-	-	-
B4	-	-	-	-
C1	A88VA	18	LTGN	3534164C1
C2	A88C	18	LTGN	3534164C1
C3%**	A88V	18	LTGN	3573312C1
	A88VA	18	LTGN	
C3*	A88V	18	LTGN	3534164C1
C4	A88B	18	LTGN	3534164C1
D1	A9ZC	18	GY	3534164C1
D2	A88A	18	LTGN	3534164C1
D3%**	A9ZB	18	GY	3573312C1
	A9ZC	18	GY	
D3*	A9ZB	18	GY	3534164C1
D4	A88	18	LTGN	3534164C1
E1%	A14SA	18	RD	3573312C1
	A14SB	18	RD	
E1#	A14SA	18	RD	3534164C1
E2	A14NF	12	RD	3573312C1
E3	A14HD	12	RD	3573312C1
E4@@	A13FH	18	PK	3534164C1
	A13FJ	18	PK	
E4#*	A13FH	18	GY	3534164C1
E4*#	A13HH	18	GY	3534164C1
F1	A14NE	12	RD	3573311C1
F2	A14SE	18	PK	3534164C1
F2%@	A14SE	18	RD	3573312C1
	A22D	18	TN	
F2##	A14SE	18	PK	3534164C1
F3%&&	A14HH	18	RD	3536295C1
	A14HHE	18	RD	
F3%#&	A75T	18	LTGN	3536295C1
	A75TR	18	LTGN	
F3%%	A75T	18	LTGN	3536295C1
F4%*	A94V	18	GY	3534164C1
F4%#	A94V	14	GY	3516158C1

FUSE LOCATION	CAVITY	RATING	PART NUMBER		DESCRIPTION
			FUSE	BREAKER	
F11-A	E1, F1	5	3534208C1	N/A	CUSTOMER ACCESSORY SWITCH FEED
F11-B	E2, F2	5	3534208C1	N/A	DRIVER DISPLAY / SECONDARY DISPLAY
F11-C	E3, F3	5	3534208C1	N/A	ICON / NO - IDLE RELAY
F11-D	E4, F4	5	3534208C1	N/A	TRACTOR ABS ECU

RELAY LOCATION - CAVITY	PART NUMBER	DESCRIPTION
A1, A2, B1, B2	3600330C1	MERITOR FREEDOMLINE TRANSMISSION W/ ICON INTERNATIONAL ENGINE ACTUATOR (W/ LONESTAR)
A3, A4, B3, B4	-	NOT USABLE FOR RELAY
C1, C2, D1, D2	3600330C1	PTO B
C3, C4, D3, D4	3600330C1	PTO A

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 015

Figure 230 Connector Composite (1020)

https://truckmanualshub.com/

14.18. CONNECTOR COMPOSITES (1023), (1024), (1025), P. 16


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

GROUND
(1023)
(LOCATED IN INSTRUMENT PANEL RIGHT SIDE)

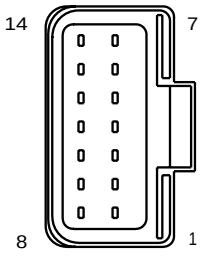


CONNECTOR 3613769C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A11-GCB	12	WH	3612307C1
2	A56-GT	18	WH	3613771C1
3	A17-GC	18	WH	3613771C1
4	A37-GA	18	TN	3613771C1
5	A78-GA	16	WH	3613770C1
6	A78-GB	16	WH	3613770C1
7	A19-GB	18	WH	3613771C1
8**	A67-G	16	WH	3613770C1
8*	A67-G	18	WH	3613771C1
9	A54-GX	16	WH	3613770C1
10	A65-GW	18	WH	3613771C1
11##	A72-GA	18	WH	3613771C1
11#	A72-GC	18	WH	3613771C1
12	A75T-G	18	LTGN	3613771C1
13	A13-GFG	18	WH	3613771C1
14@	A72-GB	18	WH	3613771C1

* W/ EATON VORAD VS-400
** W/ COLLISION WARNING-VORAD(EVT-300)
TRLR SOCKET W/ SW CONTROLLED CENTER PIN
W/ AUXILIARY TRAILER SOCKET
@ W/ LONESTAR


J1939 ADAPTER
(1024)
(LOCATED IN INSTRUMENT PANEL CENTER)



CONNECTOR 3601838C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A5RF(-)	18	GN	3534164C1
B	A5FA(-)	18	GN	3534164C1
C	A5RH(-)	18	LTGN	3534164C1
D	A5RH(-)	18	LTGN	3534164C1
E	A5J(-)	18	GN	3534164C1
F	A5RJ(-)	18	GN	3534164C1
G	A5RJ(+)	18	YL	3534164C1
H	CB5J(+)	18	YL	3534164C1
J	A5RH(+)	18	YL	3534164C1
K	A5RH(+)	18	YL	3534164C1
L	A5FA(+)	18	YL	3534164C1
M	A5RF(+)	18	YL	3534164C1

J1939 ADAPTER
(1025)
(LOCATED IN INSTRUMENT PANEL CENTER)



CONNECTOR 3601838C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A5RD(-)	18	GN	3534164C1
B	A5HA(-)	18	GN	3534164C1
C	A5RE(-)	18	LTGN	3534164C1
D	A5RE(-)	18	LTGN	3534164C1
E	A5K(-)	18	GN	3534164C1
F	A5RF(-)	18	GN	3534164C1
G	A5RF(+)	18	YL	3534164C1
H	A5K(+)	18	YL	3534164C1
J	A5RE(+)	18	YL	3534164C1
K	A5RE(+)	18	YL	3534164C1
L	A5HA(+)	18	YL	3534164C1
M	A5RD(+)	18	YL	3534164C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 016

Figure 231 Connector Composites (1023), (1024), (1025)

https://truckmanualshub.com/

14.19. CONNECTOR COMPOSITES (1026), (1100M), (1101M), (1110M), P. 17


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

J1939 ADAPTER
(1026)
(LOCATED IN INSTRUMENT PANEL CENTER)



CONNECTOR 3601838C1
BODY LOCK 3601839C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A5RB(-)	18	GN	3534164C1
A*	A5R(-)	18	GN	3534164C1
B	A5P(-)	18	GN	3534164C1
C	A5RC(-)	18	LTGN	3534164C1
D	A5RC(-)	18	LTGN	3534164C1
E	A5L(-)	18	GN	3534164C1
F	A5RD(-)	18	GN	3534164C1
G	A5RD(+)	18	YL	3534164C1
H	A5L(+)	18	YL	3534164C1
J	A5RC(+)	18	YL	3534164C1
K	A5RC(+)	18	YL	3534164C1
L	A5P(+)	18	YL	3534164C1
M	A5RB(+)	18	YL	3534164C1
M*	A5R(+)	18	YL	3534164C1

* W/ ALL OPTIONS & N/ ABS OR COMPASS

KEY SWITCH CONNECTOR
(1100M)
(LOCATED IN INSTRUMENT PANEL)




CONNECTOR 3546518C1
BODY LOCK 3546519C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A15	18	RD	1661208C1
B*	A17H	16	PK	1661208C1
B#	A17HA	16	PK	1661208C1
C	A12	18	LTBL	1661208C1
D	A13F	18	PK	1661208C1
D&@	A13F	16	PK	1661208C1

* W/ FREEDOM LINE XMSN
W/ MANUAL XMSN
& W/ REMOTE START-STOP
@ W/ LONESTAR

SWITCH PACK CONNECTOR
(1101M)
(LOCATED IN INSTRUMENT PANEL - CENTER)

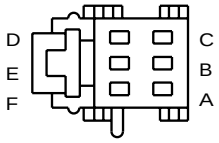


CONNECTOR 2031871C1
BODY LOCK 2031873C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A11-GKD	18	WH	1661261C1
B	A12F	18	LTBL	1661261C1
C	A62DB	18	DKBL	1661261C1
D*	A3AA(+)	20	DKBL	3544254C1
D	A3A(+)	18	DKBL	1661261C1
E*	A3AA(-)	20	GY	3544254C1
E	A3A(-)	18	GY	1661261C1
F	-	-	-	-

* W/ POWER DOOR LOCK & WINDOWS

AUX TRAILER SOCKET SWITCH CONNECTOR
(1110M)
(LOCATED IN INSTRUMENT PANEL CENTER)

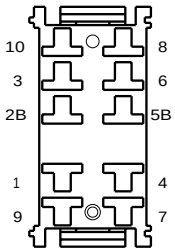

CONNECTOR 3520850C1

* TRAILER SOCKET W/ SWITCH CONTROLLED CENTER PIN
% CRIMPED TOGETHER
W/ AUX ISO TRAILER SOCKET
@ W/ LONESTAR

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A72D	18	OR	1661224C1
2B	A109C	18	GY	1661224C1
2B*	A72EB	18	OR	1661224C1
2B#@	A72B	16	OR	1661226C1
3%#@	A72-F	16	OR	1661226C1
	A72-FA	18	OR	1661226C1
3*%	A72ED	18	OR	3541250C1
	A72EC	18	OR	3541250C1
3	A72C	18	OR	1661224C1
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7	A72B	14	OR	1661226C1
7*	A72ED	18	OR	1661224C1
7#@	A72FA	18	OR	1661224C1
8	A62SC	18	DKBL	1661224C1
9	A72-G	18	WH	1661224C1
9#@	A72GB	18	WH	1661224C1
10	A72-GB	18	WH	1661224C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 06SEP06
PART NO. AE08055906
SHEET 017

Figure 232 Connector Composites (1026), (1100M), (1101M), (1110M)

https://truckmanualshub.com/

14.20. CONNECTOR COMPOSITES (1111M), (1112M), (1113M), P. 18


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

PANIC BUTTON
(1111M)
(LOCATED IN INSTRUMENT PANEL CENTER)

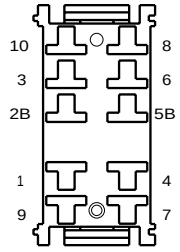


CONNECTOR 3520850C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2B*	A98NS	18	BK	1661224C1
2B#	A11-GSA	18	WH	1661224C1
3#	A98J	18	BK	1661224C1
3*	A98Z	18	BK	1661224C1
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7#	A62SDA	18	DKBL	1661224C1
7*	A98NL	18	BK	1661224C1
8#%	A62SDA	18	DKBL	3541250C1
	A62SD	18	DKBL	
8*	A62N	18	DKBL	1661224C1
9	-	-	-	-
10#	A11-GSB	18	WH	1661224C1
10*	A11-GN	18	WH	1661224C1

* W/ TELEMATICS ALERT SWITCH
W/ QUALCOMM PANIC BUTTON
% CRIMPED TOGETHER

SPARE # 1
(1112M)
(LOCATED IN INSTRUMENT PANEL CENTER)

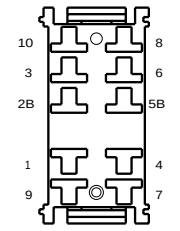


CONNECTOR 3520850C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2B	A14SA	18	RD	1661224C1
3%	A14SAA	18	RD	3541250C1
	A14SAB	18	RD	3541250C1
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7	A14SAA	18	RD	1661224C1
8	A62SA	18	DKBL	1661224C1
9	A14-GSA	18	WH	1661224C1
10	-	-	-	-

% CRIMPED TOGETHER

SPARE # 2
(1113M)
(LOCATED IN INSTRUMENT PANEL CENTER)

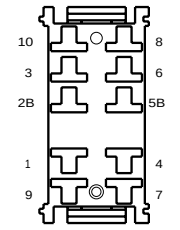

CONNECTOR 3520850C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2B	A14SB	18	RD	1661224C1
3%	A14SBB	18	RD	3541250C1
	A14SBA	18	RD	3541250C1
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7	A14SBA	18	RD	1661224C1
8	A62SB	18	DKBL	1661224C1
9	A14-GSC	18	WH	1661224C1
10	-	-	-	-

% CRIMPED TOGETHER

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 018

Figure 233 Connector Composites (1111M), (1112M), (1113M)

https://truckmanualshub.com/

14.21. CONNECTOR COMPOSITES (1114M), (1115M), (1116M), (1117M), P. 19


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


PANIC BUTTON
(1114M)
(LOCATED IN INSTRUMENT PANEL CENTER)

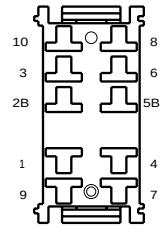

CONNECTOR 3520850C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2B	A104	18	DKBL	1661224C1
3	A9RA	18	GY	1661224C1
4	-	-	-	-
5B	A104A	18	DKBL	1661224C1
6	A104AD	18	DKBL	1661224C1
7	-	-	-	-
8	A63AB	18	DKBL	1661224C1
9	-	-	-	-
10	A63-G	18	WH	1661224C1

ENGINE PRE HEAT
(1115M)
(LOCATED IN INSTRUMENT PANEL CENTER)

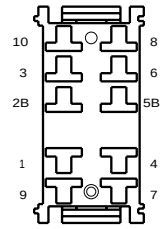


CONNECTOR 3520850C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2B	A75TN	18	LTGN	1661224C1
3	A75TF	18	LTGN	1661224C1
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7%	A75TE	18	LTGN	3541250C1
	A75TF	18	LTGN	
8	A62T	18	DKBL	1661224C1
9	A75TM	18	LTGN	1661224C1
10	A75T-GC	18	LTGN	1661224C1

% CRIMPED TOGETHER


TRI-PAC
(1116M)
(LOCATED IN INSTRUMENT PANEL CENTER)
(W/ LONESTAR)

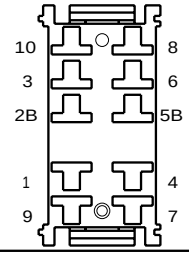

CONNECTOR 3520850C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A14TRIA	16	RD	1661226C1
2B	A77SBY	16	LTGN	1661226C1
3	13TRIA	16	PK	1661226C1
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7	-	-	-	-
8	A62TRI	18	DKBL	1661224C1
9	-	-	-	-
10	A62GTRI	18	WH	1661224C1

BEACON LIGHT
(1117M)
(LOCATED IN INSTRUMENT PANEL CENTER)
(W/ LONESTAR)

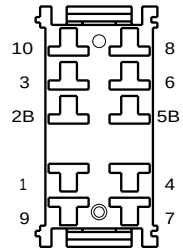

CONNECTOR 3520850C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2B	A13BL1	18	PK	1661224C1
3	A13BL2	18	PK	3541250C1
	A13BLT			
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7	A13BL2	18	PK	1661224C1
8	A62BLT	18	DKBL	1661224C1
9	A13-GBL	18	WH	1661224C1
10	-	-	-	-


CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	20JAN09	ADDED LONESTAR EFFECT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 019

Figure 234 Connector Composites (1114M), (1115M), (1116M), (1117M)

https://truckmanualshub.com/

14.22. CONNECTOR COMPOSITES (1200), (1210), (1215), (1300), P. 20

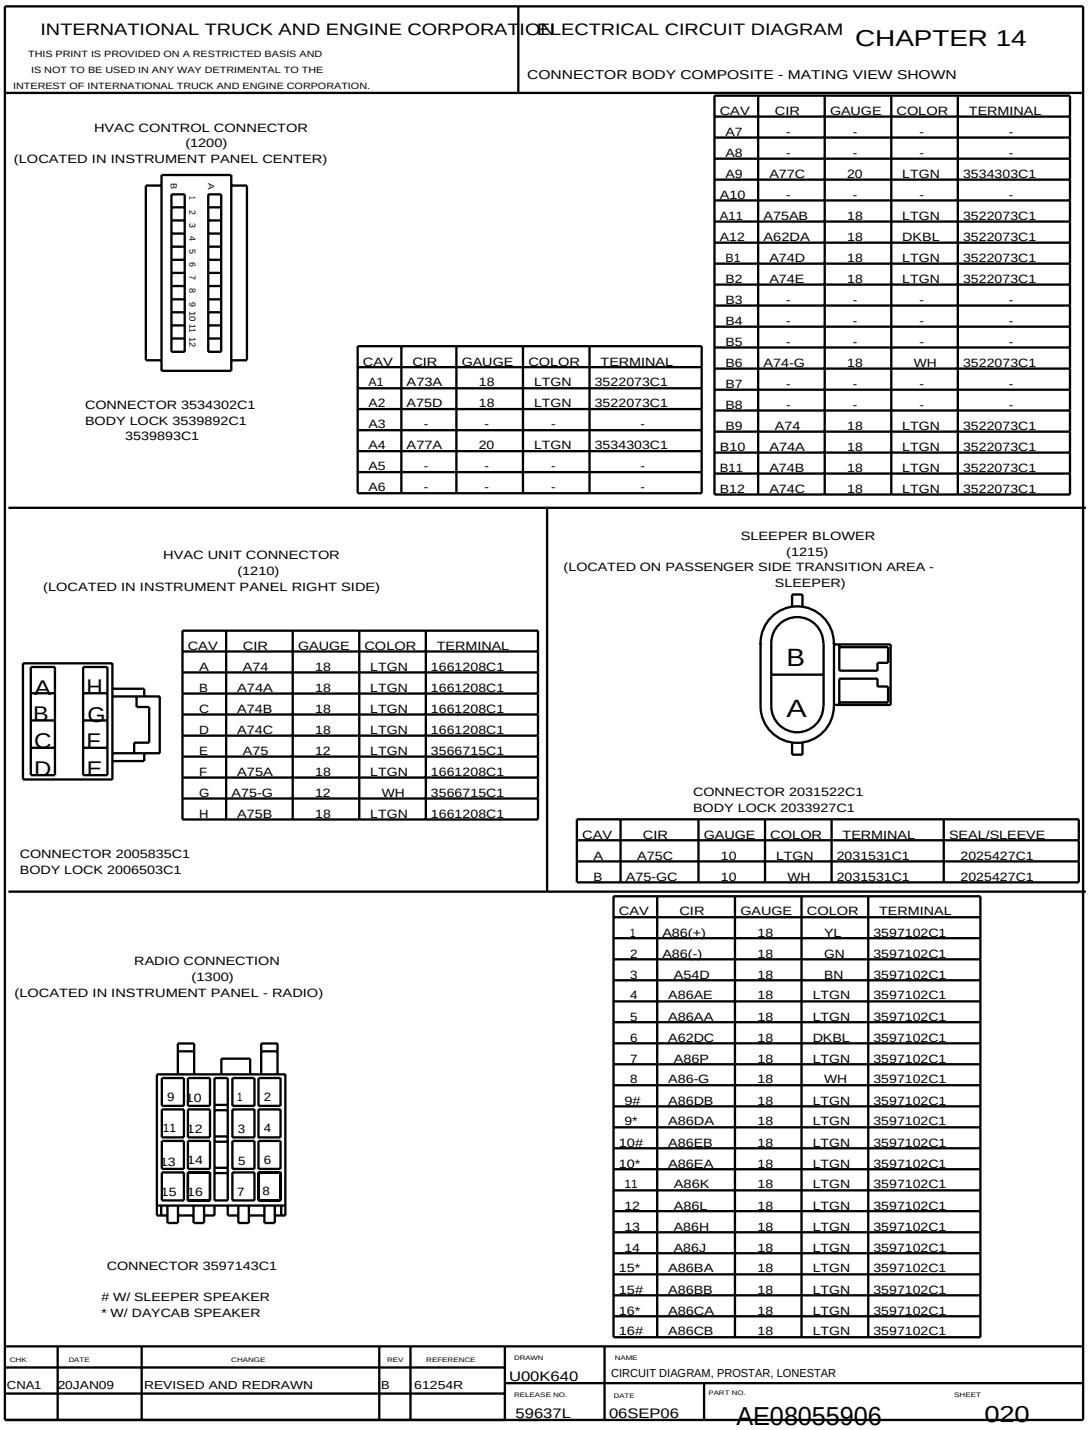

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A73A	18	LTGN	3522073C1
A2	A75D	18	LTGN	3522073C1
A3	-	-	-	-
A4	A77A	20	LTGN	3534303C1
A5	-	-	-	-
A6	-	-	-	-

CAV	CIR	GAUGE	COLOR	TERMINAL
A7	-	-	-	-
A8	-	-	-	-
A9	A77C	20	LTGN	3534303C1
A10	-	-	-	-
A11	A75AB	18	LTGN	3522073C1
A12	A62DA	18	DKBL	3522073C1
B1	A74D	18	LTGN	3522073C1
B2	A74E	18	LTGN	3522073C1
B3	-	-	-	-
B4	-	-	-	-
B5	-	-	-	-
B6	A74-G	18	WH	3522073C1
B7	-	-	-	-
B8	-	-	-	-
B9	A74	18	LTGN	3522073C1
B10	A74A	18	LTGN	3522073C1
B11	A74B	18	LTGN	3522073C1
B12	A74C	18	LTGN	3522073C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A74	18	LTGN	1661208C1
B	A74A	18	LTGN	1661208C1
C	A74B	18	LTGN	1661208C1
D	A74C	18	LTGN	1661208C1
E	A75	12	LTGN	3566715C1
F	A75A	18	LTGN	1661208C1
G	A75-G	12	WH	3566715C1
H	A75B	18	LTGN	1661208C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	A75C	10	LTGN	2031531C1	2025427C1
B	A75-GC	10	WH	2031531C1	2025427C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A86(+)	18	YL	3597102C1
2	A86(-)	18	GN	3597102C1
3	A54D	18	BN	3597102C1
4	A86AE	18	LTGN	3597102C1
5	A86AA	18	LTGN	3597102C1
6	A62DC	18	DKBL	3597102C1
7	A86P	18	LTGN	3597102C1
8	A86-G	18	WH	3597102C1
9#	A86DB	18	LTGN	3597102C1
9*	A86DA	18	LTGN	3597102C1
10#	A86EB	18	LTGN	3597102C1
10*	A86EA	18	LTGN	3597102C1
11	A86K	18	LTGN	3597102C1
12	A86L	18	LTGN	3597102C1
13	A86H	18	LTGN	3597102C1
14	A86J	18	LTGN	3597102C1
15*	A86BA	18	LTGN	3597102C1
15#	A86BB	18	LTGN	3597102C1
16*	A86CA	18	LTGN	3597102C1
16#	A86CB	18	LTGN	3597102C1

Figure 235 Connector Composites (1200), (1210), (1215), (1300)

https://truckmanualshub.com/

14.23. CONNECTOR COMPOSITES (1301), (1305), (1378), P. 21


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

RADIO CONNECTION
(1301)
(LOCATED IN INSTRUMENT PANEL - RADIO)



CONNECTOR 3600061C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2	A86AC	18	LTGN	3600062C1
3	-	-	-	-
4	-	-	-	-
5	A86	20	LTGN	3600062C1
6	-	-	-	-
7*	A86LSIG	18	LTGN	3600062C1
8*	A86-GS1	18	LTGN	3600062C1
9*	A86-GS2	18	LTGN	3600062C1
10*	A86RSIG	18	LTGN	3600062C1
11	-	-	-	-
12	-	-	-	-
13	-	-	-	-
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-
17	-	-	-	-
18	-	-	-	-
19	-	-	-	-
20	-	-	-	-

* W/ LONESTAR


BUNK FAN
(1305)
(LOCATED IN ROOF ON PASSENGER SIDE - SLEEPER)



CONNECTOR 0969541R1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H76	18	BK	0333732C1
B	H76-G	18	WH	0333732C1

COOLANT MODULE
(1378)
(LOCATED AT UPPER LEFT SIDE OF ENGINE)



CONNECTOR 1687789C1
BODY LOCK 1661376C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K97FB	18	VT	2033819C1	1652325C1
B	K34	16	TN	2033819C1	1652325C1
C	K34E	16	TN	2033819C1	1652325C1
D	K34A2	16	TN	2033819C1	1652325C1
E	PLUG	-	-	0587579C1	-

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 021

Figure 236 Connector Composites (1301), (1305), (1378)

https://truckmanualshub.com/

14.24. CONNECTOR COMPOSITES (1400), (1401), (1402), P. 22


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


ABS # 1
(1400)
(LOCATED ON RIGHT-SIDE KICK PANEL - ABS MODULE)

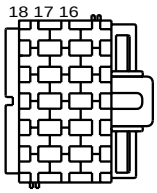

CONNECTOR 3596926C1
BODY LOCK 3562309C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A94-GA	12	WH	3597157C1
2	-	-	-	-
3	A94V	18	GY	3598072C1
4	A94BN	18	GY	3598072C1
5	A94BM	18	GY	3598072C1
6	-	-	-	-
7	A5N(-)	18	GN	3598072C1
8	A5N(+)	18	YL	3598072C1
9	-	-	-	-
10	A94BH	16	GY	3598073C1
11	A94BF	16	GY	3598073C1
12	A94-GB	16	WH	3548970C1
13	A3BA(-)	18	GY	3598072C1
14	A3BA(+)	18	DKBL	3598072C1
15	-	-	-	-
16	A94AY	12	GY	3597157C1
17	-	-	-	-
18	-	-	-	-


ABS # 2
(1401)
(LOCATED ON RIGHT-SIDE KICK PANEL ABS MODULE)

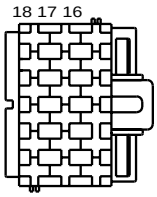

CONNECTOR 3596929C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A94B	18	GY	3598072C1
2	A94	18	GY	3598072C1
3	A94A	18	GY	3598072C1
4	A94K	18	GY	3598072C1
5	A94C	16	GY	3598073C1
6	A94J	18	GY	3598072C1
7	A94H	18	GY	3598072C1
8	A94D	16	GY	3598073C1
9	A94BK	18	GY	3598072C1
10	A94BL	18	GY	3598072C1
11	A94E	16	GY	3598073C1
12	A94BB	18	GY	3598072C1
13	A94BJ	18	GY	3598072C1
14	A94F	16	GY	3598073C1
15	A94BE	16	GY	3598073C1
16	A94BC	18	GY	3598072C1
17	A94BA	18	GY	3598072C1
18	A94BD	16	GY	3598073C1

ABS # 3
(1402)
(LOCATED ON RIGHT-SIDE KICK PANEL ABS MODULE)

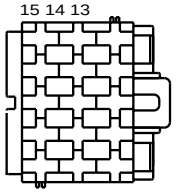

CONNECTOR 3596928C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2	-	-	-	-
3	A94SK	18	GY	3598072C1
4*	A94BP	16	GY	3598073C1
5	A94SJ	18	GY	3598072C1
6*	A94BN	16	GY	3598073C1
7*	A94BM	16	GY	3598073C1
8	-	-	-	-
9*	A94BT	16	GY	3598073C1
10*	A94BU	16	GY	3598073C1
11*	A94BR	16	GY	3598073C1
12*	A94BW	16	GY	3598073C1
13*	A94BS	16	GY	3598073C1
14*	A94BQ	16	GY	3598073C1
15*	A94BV	16	GY	3598073C1

* W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 06SEP06
PART NO. AE08055906
SHEET 022

Figure 237 Connector Composites (1400), (1401), (1402)

https://truckmanualshub.com/

14.25. CONNECTOR COMPOSITES (1403), (1410), (1420), P. 23


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


ABS #4
(1403)
(LOCATED ON RIGHT-SIDE KICK PANEL ABS MODULE)

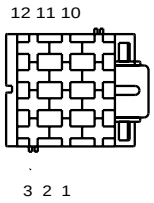

CONNECTOR 3596927C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A94SZD	16	GY	3598073C1
2	A94SE	18	GY	3598072C1
3	A94SH	16	GY	3598073C1
4	A94SVD	16	GY	3598073C1
5	A94SF	16	GY	3598073C1
6	A94SL	18	GY	3598072C1
7	A94SDA	18	GY	3598072C1
8	A94SBA	18	GY	3598072C1
9	A94SM	18	GY	3598072C1
10	A94SCA	18	GY	3598072C1
11	A94SAA	18	GY	3598072C1
12	A94SN	18	GY	3598072C1


ABS ATC & RSP
SPLICE PACK
(1410)
(LOCATED IN INSTRUMENT PANEL - CENTER)



CONNECTOR 3601838C1
BODY LOCK 3601839C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A94SAA	18	GY	3534164C1
B	A94SAB	18	GY	3534164C1
C	A94SA	18	GY	3534164C1
D	A94SCA	18	GY	3534164C1
E	A94SCB	18	GY	3534164C1
F	A94SC	18	GY	3534164C1
G	A94SBA	18	GY	3534164C1
H	A94SBB	18	GY	3534164C1
J	A94SB	18	GY	3534164C1
K	A94SDA	18	GY	3534164C1
L	A94SDB	18	GY	3534164C1
M	A94SD	18	GY	3534164C1

WABCO ABS CONN
(1420)
(LOCATED ON RIGHT-SIDE KICK PANEL - ABS MODULE)

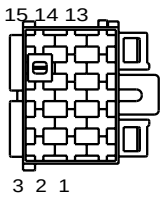

CONNECTOR 3557922C1
BODY LOCK 3549120C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	A5N(-)	18	GN	3548971C1
2	-	-	-	-
3	A5N(+)	18	YL	3548971C1
4	A94-GB	18	WH	3548971C1
5	-	-	-	-
6	-	-	-	-
7	A94V	18	GY	3548971C1
7*	A94V	14	GY	3548972C1
8	A94AY	18	GY	3548971C1
8*	A94AY	14	GY	3548972C1
9	A94-GA	18	WH	3548969C1
10	A3BA(-)	18	GY	3548971C1
11	A3BA(+)	18	DK BL	3548971C1
12	-	-	-	-
13	-	-	-	-
14	-	-	-	-
15	-	-	-	-

* W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 023

Figure 238 Connector Composites (1403), (1410), (1420)

https://truckmanualshub.com/

14.26. CONNECTOR COMPOSITES (1421), (1422), (1500), (1501), P. 24


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


WABCO ABS CONN (1421) (LOCATED ON RIGHT - SIDE KICK PANEL - ABS MODULE)

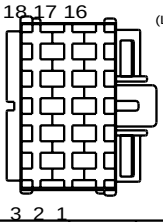

CONNECTOR 3557921C1
BODY LOCK 3562309C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	A94MK	18	GY	3548971C1
2	A94BC	18	GY	3548971C1
3	A94MB	18	GY	3548971C1
4	A94MH	18	GY	3548971C1
5	A94BA	18	GY	3548971C1
6	A94M	18	GY	3548971C1
7	A94BN	18	GY	3548971C1
8	A94BL	18	GY	3548971C1
9	A94BJ	18	GY	3548971C1
10	A94ME	18	GY	3548971C1
11	A94BD	18	GY	3548971C1
12	A94MC	18	GY	3548971C1
13	A94MF	18	GY	3548971C1
14	A94BE	18	GY	3548971C1
15	A94MD	18	GY	3548971C1
16	A94BM	18	GY	3548971C1
17	A94BH	18	GY	3548971C1
18	A94BF	18	GY	3548971C1


WABCO ABS CONN (1422) (LOCATED ON RIGHT-SIDE KICK PANEL - ABS MODULE)

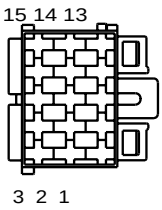

CONNECTOR 3548978C1
BODY LOCK 3549120C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2	-	-	-	-
3	-	-	-	-
4	-	-	-	-
5	-	-	-	-
6	-	-	-	-
7	-	-	-	-
8	A94SJ	18	GY	3548971C1
9	-	-	-	-
10	-	-	-	-
11	-	-	-	-
12	-	-	-	-
13	A94SK	18	GY	3548971C1
14	-	-	-	-
15	-	-	-	-


CLUSTER #1 (1500) (LOCATED IN INSTRUMENT PANEL - CLUSTER)

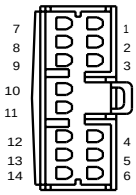

CONNECTOR 3548792C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A11-GKE	16	WH	2018639C1
2	A14EE	16	RD	2018639C1
3	-	-	-	-
4	A62	18	DKBL	2018639C1
5	A62A	18	DKBL	2018639C1
6	A62B	16	DKBL	2018639C1
7	A13EA	18	PK	2018639C1
8	A109	18	GY	2018639C1
9	A72C	18	OR	2018639C1
10	A72D	18	OR	2018639C1
11	A63E	18	DKBL	2018639C1
12	A63F	18	DKBL	2018639C1
13	-	-	-	-
14	-	-	-	-

CLUSTER #2 (1501) (LOCATED IN INSTRUMENT PANEL - CLUSTER)

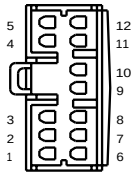

CONNECTOR 2018590C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A109B	18	GY	2018639C1
2	A106	18	GY	2018639C1
3	-	-	-	-
4	A109C	18	GY	2018639C1
5	-	-	-	-
6	A109S	18	GY	2018639C1
7	A61B	18	GY	2018639C1
8	A61	18	GY	2018639C1
9	A41	18	TN	2018639C1
10	A52C	20	YL	2018639C1
11	A5D(-)	18	GN	2018639C1
12	A5D(+)	18	YL	2018639C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 024

Figure 239 Connector Composites (1421), (1422), (1500), (1501)

https://truckmanualshub.com/

14.27. CONNECTOR COMPOSITES (1502), (1510), P. 25


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


SECONDARY INSTRUMENT CLUSTER
(1502)
(LOCATED IN INSTRUMENT PANEL - CENTER)

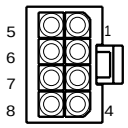

CONNECTOR 3534177C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A14EF	18	RD	3534193C1
2	A13EH	18	PK	3534193C1
3	-	-	-	-
4	A5J(-)	18	GN	3534193C1
5	A11-GSF	16	WH	3534193C1
6	A62BH	18	DKBL	3534193C1
7	A5J(+)	18	YL	3534193C1
8	-	-	-	-

RIGHT BANK OPTIONAL
WARNING LIGHTS
(1510)
(LOCATED IN INSTRUMENT PANEL - RIGHT REAR OF CLUSTER)

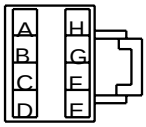

CONNECTOR 2005835C1
BODY LOCK 2006503C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A63-GC	18	WH	1661208C1
B	A13BA	20	PK	1661208C1
C	A13BB	20	PK	1661208C1
D	A13BC	20	PK	1661208C1
E	A49	18	GY	1661208C1
E*	A95H	18	TN	1661208C1
F	A24A	18	GY	1661208C1
G	A49A	18	GY	1661208C1
G*	A95F	18	TN	1661208C1
H	A63AW	18	DKBL	1661208C1

* W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	20JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 025

Figure 240 Connector Composites (1502), (1510)

https://truckmanualshub.com/

14.28. CONNECTOR COMPOSITES (1511), (1550), (1556), P. 26


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

LEFT BANK OPTIONAL WARNING LIGHTS (1511)
(LOCATED IN INSTRUMENT PANEL - LEFT REAR OF CLUSTER)

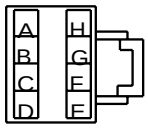


CONNECTOR 2005835C1
BODY LOCK 2006503C1

@@ W/ SLEEPER CAB
@ W/ DAY CAB
* W/ IDLE REDUCTION
ALTERNATOR WARNING LIGHT
MOTIENT MOBILE MAX - SLEEPER / DAYCAB

CAV	CIR	GAUGE	COLOR	TERMINAL
A*	A97W	18	PL	1661208C1
A#	A1A	18	PK	1661208C1
B	A13BD	20	PK	1661208C1
C	A13BE	20	PK	1661208C1
D	A13BF	20	PK	1661208C1
E	A49	18	GY	1661208C1
F@	A98F	18	BK	1661208C1
F@@	A98F	18	TN	1661208C1
F##	A98F	18	LTGN	1661208C1
G	A49A	18	GY	1661208C1
H*	A97V	18	PL	1661208C1
H#	A1	18	LTBL	1661208C1

VEHICLE INFORMATION DISPLAY (1550)
(LOCATED IN INSTRUMENT PANEL - CENTER)

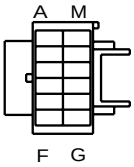


CONNECTOR 3609945C1
BODY LOCK 3609946C1
3609947C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	-	-	-	-
B	A12C	18	LTBL	3522073C1
C	A5L(-)	18	GN	3522073C1
D	A3BC(+)	20	DKBL	3534303C1
E	-	-	-	-
F	-	-	-	-
G	-	-	-	-
H	-	-	-	-
J	A11-GKH	18	WH	3522073C1
K	A3BC(-)	20	GY	3534303C1
L	A5L(+)	18	YL	3522073C1
M*	A14SE	18	RD	3522073C1
M	A14SE	18	PK	3522073C1

* W/ TIRE PRESSURE

CAT MESSENGER DISPLAY (1556)
(LOCATED IN INSTRUMENT PANEL CENTER)
(W/ LONESTAR)



CONNECTOR 3534763C1
BODY LOCK 3534766C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A14SE	18	RD	1680205C1
2	A11-GSE	18	WH	1680205C1
3	A13SE	18	PK	1680205C1
4	A62BB	18	DKBL	1680205C1
5	A3BC(-)	18	GY	1680205C1
6	A3BC(+)	18	DKBL	1680205C1
7	PLUG	-	-	0453133C1
8	PLUG	-	-	0453133C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 026

Figure 241 Connector Composites (1511), (1550), (1556)

https://truckmanualshub.com/

14.29. CONNECTOR COMPOSITES (1557), (1600), P. 27


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


ROAD RELAY FOR DISPLAY POWER
(1557)
(LOCATED IN INSTRUMENT PANEL - CENTER)
(W/ LONESTAR)



CONNECTOR 2031871C1
BODY LOCK 2031873C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A11-GSE	18	WH	1661261C1
B	A14SE	18	RD	1661261C1
C	A13SE	18	PK	1661261C1
D	A3BC(-)	20	GY	3544254C1
E	A3BC(+)	20	DKBL	3544254C1
F	A62BB	18	DKBL	1661261C1

BODY CONTROLLER # J3
(1600)
(LOCATED ON LEFT-SIDE KICK PANEL - BODY CONTROLLER)

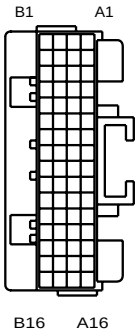

CONNECTOR 3598706C1
BODY LOCK 1618846C1
1618847C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A12CV	18	LTBL	3522073C1
A2	A77A	20	LTGN	3534303C1
A3	A77C	20	LTGN	3534303C1
A4	A52D	20	YL	3534303C1
A5	A85A	20	GY	3534303C1
A6	A57B	20	OR	3534303C1
A7	A56B	20	OR	3534303C1
A8	A87A	18	GY	3522073C1
A9	A82A	20	GY	3534303C1
A10	A82B	20	GY	3534303C1
A11	A82C	20	GY	3534303C1
A12	A44	20	GY	3534303C1
A13	A63A	18	DKBL	3522073C1
A14	A102A	20	YL	3534303C1
A15	A87B	20	GY	3534303C1
A16	A13	18	PK	3522073C1
B1	A100	20	GY	3534303C1
B2	A40	20	GY	3534303C1
B3	A40A	20	GY	3534303C1
B4	A97A	18	PL	3522073C1
B5	A77E	20	LTGN	3534303C1
B6	A30	16	TN	3522073C1
B7	A31	18	TN	3522073C1
B8	A36B	18	TN	3522073C1
B9	A36A	18	TN	3522073C1
B10	A32	18	TN	3522073C1
B11	A32A	18	TN	3522073C1
B12	A77B	20	LTGN	3534303C1
B13	A77D	20	LTGN	3534303C1
B14	A40B	18	GY	3522073C1
B15	A75AA	18	LTGN	3522073C2
B16	A97	20	PL	3534303C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 027

Figure 242 Connector Composites (1557), (1600)

https://truckmanualshub.com/

14.30. CONNECTOR COMPOSITE (1601), P. 28


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

BODY CONTROLLER # J4
(1601)
(LOCATED ON LEFT-SIDE KICK PANEL - BODY CONTROLLER)

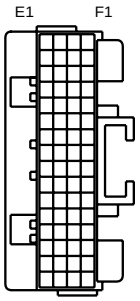

CONNECTOR 3598707C1
BODY LOCK 1618846C1
1618847C1

CAV	CIR	GAUGE	COLOR	TERMINAL
E1	A95F	18	TN	3522073C1
E2	A95H	18	TN	3522073C1
E3	-	-	-	-
E4	A24A	18	GY	3522073C1
E5	A63J	20	DKBL	3534303C1
E6	A82H	18	GY	3522073C1
E7	A82F	18	GY	3522073C1
E8	A104AA	18	DKBL	3522073C1
E9	A59H	18	GY	3522073C1
E10	A68	18	BN	3522073C1
E11	A72	18	OR	3522073C1
E12	A59C	18	GY	3522073C1
E13	A59E	18	GY	3522073C1
E14	A104A	18	DKBL	3522073C1
E15	A57C	18	OR	3522073C1
E16	-	-	-	-
F1	A104AB	18	DKBL	3522073C1
F2	A63C	18	DKBL	3522073C1
F3	A104AF	18	DKBL	3522073C1
F3*	A75TP	18	LTGN	3522073C1
F3#	A97AA	18	PL	3522073C1
F4	A59F	18	GY	3522073C1
F5	A59J	18	GY	3522073C1
F6	A14LA	18	RD	3522073C1
F7	A14LB	18	RD	3522073C1
F8	A59D	18	GY	3522073C1
F9	A97AB	18	PL	3522073C1
F10	A59B	18	GY	3522073C1
F11	A37	20	TN	3534303C1
F12	A19A	18	GY	3522073C1
F13	A56C	18	OR	3522073C1
F14	A54C	18	BN	3522073C1
F15	A70C	18	OR	3522073C1
F16	A54XD	16	BN	3522073C1

* NO IDLE HEAT WIRING
SLEEPER ACCESSORY FEED W/ ICON

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 028

Figure 243 Connector Composite (1601)

https://truckmanualshub.com/

14.31. CONNECTOR COMPOSITE (1602), P. 29


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

BODY CONTROLLER # J5
(1602)
(LOCATED ON LEFT-SIDE KICK PANEL - BODY CONTROLLER)

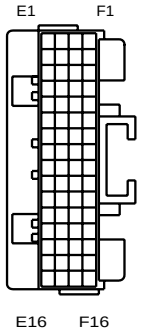

CONNECTOR 3598705C1
BODY LOCK 1618846C1
1618847C1

CAV	CIR	GAUGE	COLOR	TERMINAL
E1@	A3A(-)	20	GY	3534303C1
E1*	A3A(-)	18	GY	3522073C1
E2*	A3A(+)	18	DKBL	3522073C1
E2@	A3A(+)	20	DKBL	3534303C1
E3	A9Z	18	GY	3522073C1
E4	A6	20	GY	3534303C1
E5	A9A	18	GY	3522073C1
E6	A6DB	20	GY	3534303C1
E7	A9B	18	GY	3522073C1
E8	-	-	-	-
E9	-	-	-	-
E10	-	-	-	-
E11	A52C	20	YL	3534303C1
E12	A59A	18	GY	3522073C1
E13	A23A	18	TN	3522073C1
E14	A70	20	OR	3534303C1
E15	-	-	-	-
E16	A11-GL	18	WH	3522073C1
F1	-	-	-	-
F2	A5(-)	18	GN	3522073C1
F2@^	A5(-)	18	GN	3522073C1
F2*^	A5(-)	18	GN	3522073C1
F3	A5(+)	18	YL	3522073C1
F3@^	A5(+)	18	YL	3522073C1
F3*^	A5(+)	18	YL	3522073C1
F4	-	-	-	-
F5	A5E(-)	18	GN	3522073C1
F6	A5E(+)	18	YL	3522073C1
F7	-	-	-	-
F8	A24	18	GY	3522073C1
F9	A28	18	TN	3522073C1
F10	A71BB	18	OR	3522073C1
F10#	A71BC	18	OR	3522073C1
F11^	A116LB	18	GY	3522073C1
F12**	A104AC	18	DKBL	3522073C1
F12##	A97P	18	PL	3522073C1
F13**	A104AR	18	DKBL	3522073C1
F13&	A23A	18	TN	3522073C1
F14	A88B	18	LTGN	3522073C1
F15&&	A88C	18	LTGN	3522073C1
F15**	A104	18	DKBL	3522073C1
F16^	A116UB	18	GY	3522073C1

* N/ POWER DOOR LOCK & WINDOWS
@ W/ POWER DOOR LOCK & WINDOWS
W/ FREEDOM LINE
** W/ REMOTE START / STOP
W/ IDLE REDUCTION
& VARIABLE SPEED ENGINE FAN
&& W/ DUAL PTO
^ W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 029

Figure 244 Connector Composite (1602)

https://truckmanualshub.com/

14.32. CONNECTOR COMPOSITES (1603), (1604), P. 30


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

BODY CONTROLLER # J1
(1603)
(LOCATED ON LEFT - SIDE TRIM KICK PANEL - BODY CONTROLLER)

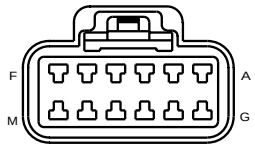

CONNECTOR 3598711C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A@	A57	16	OR	3544876C1
A*	A57N	16	OR	3544876C1
B@	A56	16	OR	3544876C1
B*	A56N	16	OR	3544876C1
C	A77	18	LTGN	3544876C1
D	A56A	14	OR	3544877C1
E	A85	16	GY	3544876C1
F	A64A	16	YL	3544876C1
G	A65	18	OR	3544876C1
G#	A65AA	16	OR	3544876C1
H	A78A	16	LTGN	3544876C1
J	-	-	-	-
K	A64B	16	YL	3544876C1
L	A78B	16	LTGN	3544876C1
M	A57A	14	OR	3544877C1

@ N/ COLLISION WARNING
* W/ MIRROR MTD TURN
W/ CUSTOMER SUPPLIED LIGHT

BODY CONTROLLER # J2
(1604)
(LOCATED ON LEFT-SIDE TRIM KICK PANEL - BODY CONTROLLER)



CONNECTOR 3598707C1
&3598710C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A82	16	GY	3544876C1
B@	A53AA	14	YL	3544877C1
B*	A53A	14	YL	3544877C1
C@	A52AA	14	YL	3544877C1
C*	A52A	14	YL	3544877C1
D	-	-	-	-
E	A11-GKC	12	WH	3544877C1
F#	A58C	16	BN	3544876C1
F##	A58C	18	BN	3544876C1
G@	A54	16	BN	3544876C1
G*&	A54	16	BN	3544876C1
H@	A53B	14	YL	3544877C1
H*&	A53B	14	YL	3544877C1
J	A63	18	DKBL	3544876C1
K@	A52B	14	YL	3544877C1
K*&	A52B	14	YL	3544877C1

@ W/ TRIP MASTER
* N/ TRIP MASTER
W/ DAY CAB AIR SHIELD
W/ SLEEPER CAB AIR SHIELD
& W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 030

Figure 245 Connector Composites (1603), (1604)

https://truckmanualshub.com/

14.33. CONNECTOR COMPOSITES (1620), (1650), (1657), (1657M), P. 31

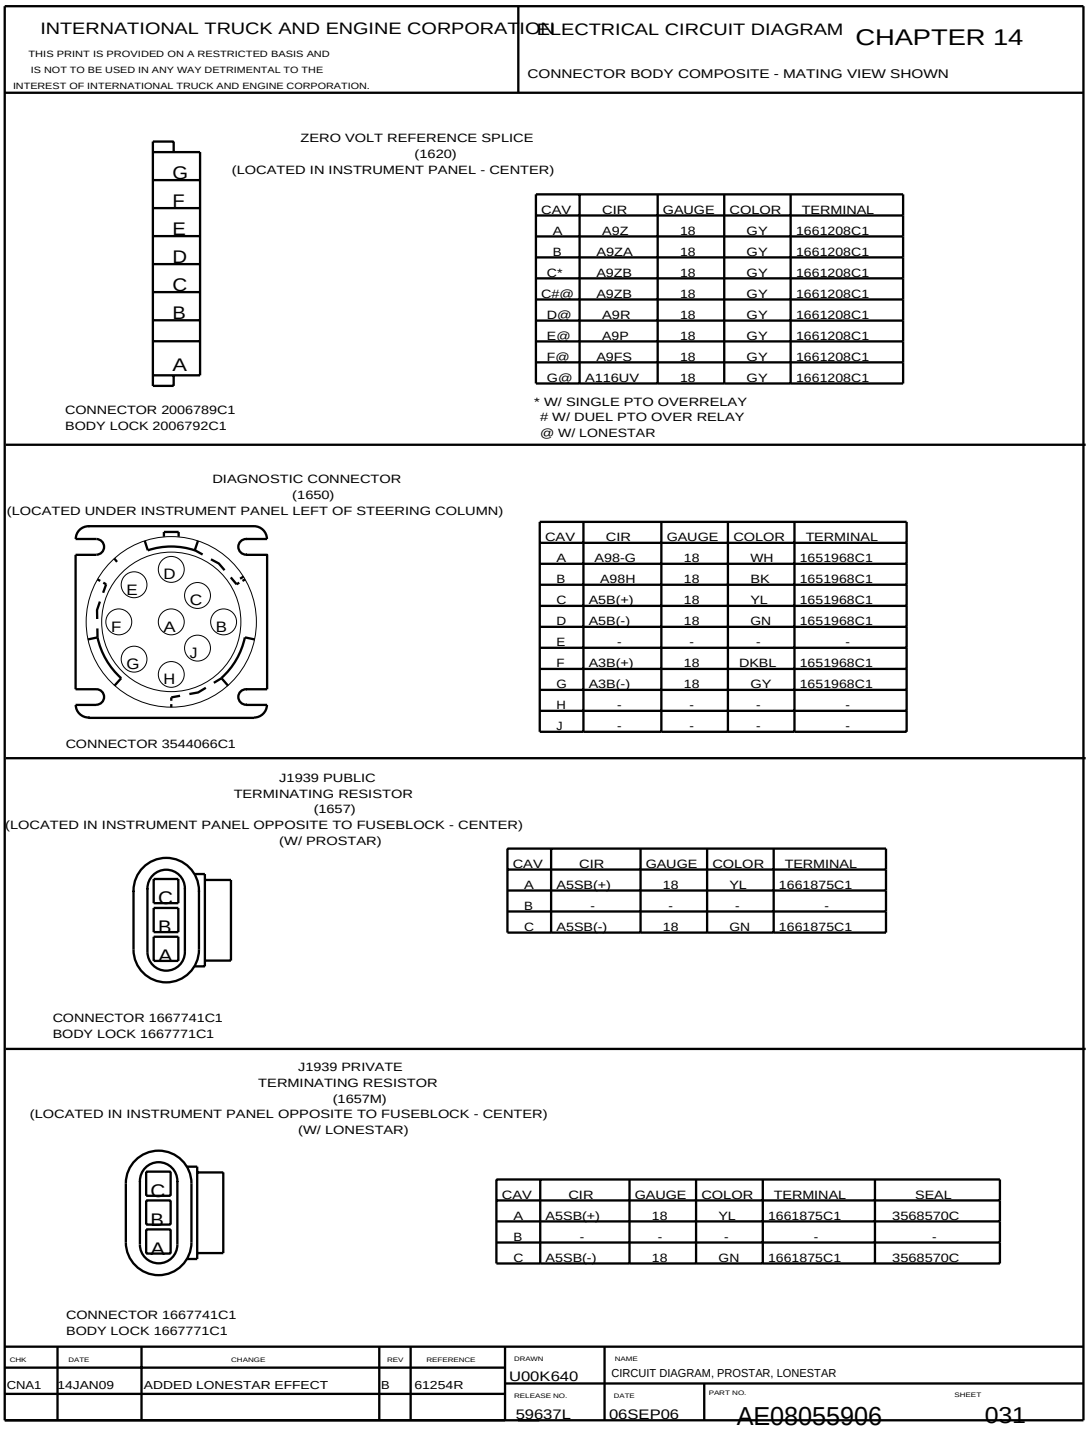


Figure 246 Connector Composites (1620), (1650), (1657), (1657M)

https://truckmanualshub.com/

14.34. CONNECTOR COMPOSITES (1660), (1661), P. 32

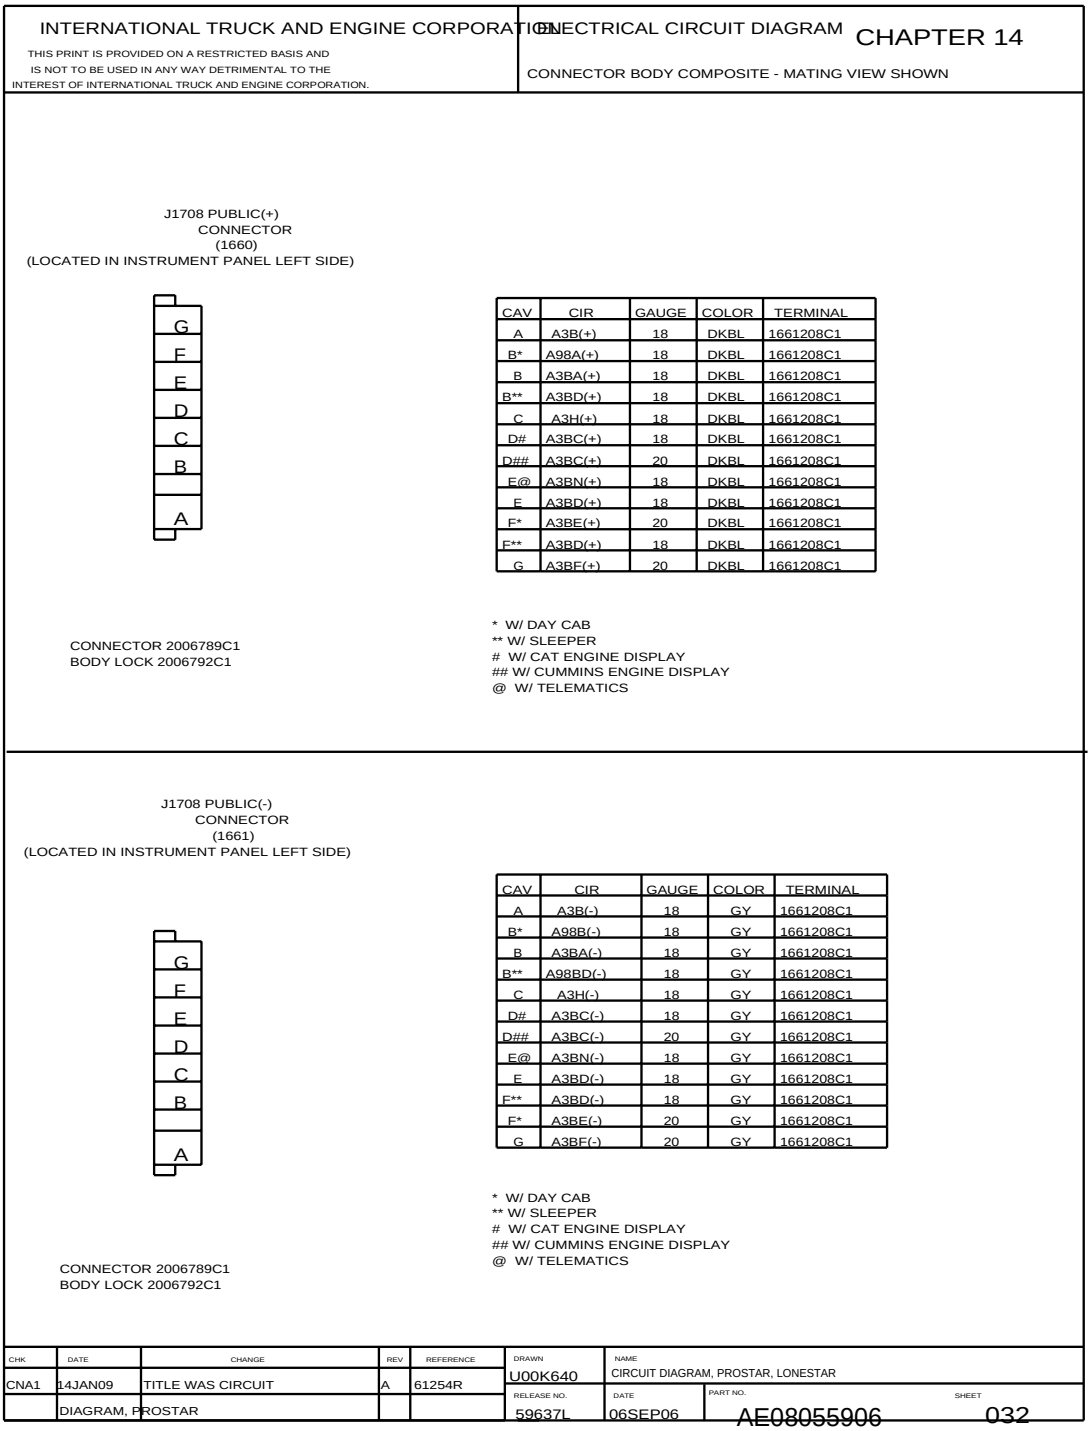


Figure 247 Connector Composites (1660), (1661)

https://truckmanualshub.com/

14.35. CONNECTOR COMPOSITE (1700), P. 33


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FORWARD CHASSIS
(1700)
(LOCATED ON DASH PANEL - LEFT SIDE (UPPER))

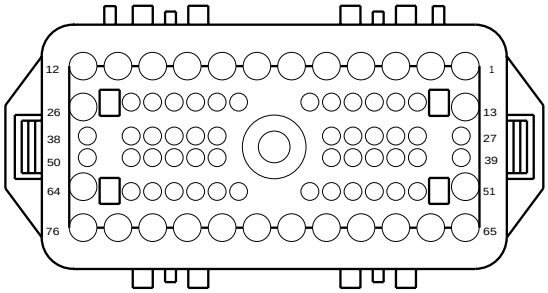

CONNECTOR 3595625C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A52A	14	YL	3574288C1
2	A53A	14	YL	3574288C1
3	A52B	14	YL	3574288C1
4	A53B	14	YL	3574288C1
5	A58	16	BN	3574288C1
6	A19	16	GY	3574288C1
7	-	-	-	-
8	-	-	-	-
9	-	-	-	-
10	-	-	-	-
11	-	-	-	-
12	-	-	-	-
13	-	-	-	-
14	A56	16	OR	3574285C1
15	A57	16	OR	3574285C1
16	A41	18	TN	2003343C1
17	A87A	18	GY	2003343C1
18	A9BB	18	GY	2003343C1
19	A87C	18	GY	2003343C1
20	A87D	18	GY	2003343C1
21	A85	16	GY	3574285C1
22	A64A	16	YL	3574285C1
23	A64B	16	YL	3574285C1
24	A54X	16	BN	3574285C1
25	A109	18	GY	2003343C1
26	-	-	-	-
27*	A94	18	GY	2003343C1
27#	A94M	18	GY	2003343C1
28#	A94MA	18	GY	2003343C1
28*	A94A	18	GY	2003343C1
29#	A94MB	18	GY	2003343C1
29*	A94B	18	GY	2003343C1
30#	A94MC	18	GY	2003343C1
30*	A94C	16	GY	3574285C1
31#	A94MD	18	GY	2003343C1
31*	A94D	16	GY	3574285C1
32#	A94ME	18	GY	2003343C1
32*	A94E	16	GY	3574285C1
33#	A94MF	18	GY	2003343C1
33*	A94F	16	GY	3574285C1

* W/ BENDIX ABS
\# W/ WABCO ABS
@ W/ SWITCH CONTROLLED CENTER PIN
% W/ REMOTE START / STOP
& W/ VORAD (EVT-300)
&& W/ VORAD (EVT-400)
** W/ LONESTAR

CAV	CIR	GAUGE	COLOR	TERMINAL
34#	A94MH	18	GY	2003343C1
34*	A94H	18	GY	2003343C1
35#	A94MJ	18	GY	2003343C1
35*	A94J	18	GY	2003343C1
36#	A94MK	18	GY	2003343C1
36*	A94K	18	GY	2003343C1
37&	A67B	16	GY	3574285C1
37&&	A67-GY	18	WH	2003343C1
38	A67C	16	GY	3574285C1
38&&	67Y	18	PK	2003343C1
39	A67D	16	GY	3574285C1
40	A67E	16	GY	3574285C1
41	A61	18	GY	2003343C1
42	A106A	18	GY	2003343C1
43	A97R	16	PL	3574285C1
43%	A104AN	16	DKBL	3574285C1
44	A97J	16	PL	3574285C1
44%	A104AM	16	DKBL	3574285C1
45	A97K	18	PL	2003343C1
46	A97L	18	PL	2003343C1
47	A22ZA	18	TN	2003343C1
48	A22VA	18	TN	2003343C1
49	A22A	18	TN	2003343C1
50	A97N	16	PL	3574285C1
51	A72E	18	OR	3574289C1
52@	A72EB	18	OR	2003343C1
52	AOUT2	18	TN	2003343C1
53	A5VREF	18	TN	2003343C1
54	APPU	18	TN	2003343C1
55	AANG1	18	TN	2003343C1
56	AANG2	18	TN	2003343C1
57	AANG3	18	TN	2003343C1
58	AANG4	18	TN	2003343C1
59	AANG5	18	TN	2003343C1
60	AANG-G	18	GY	2003343C1
61	A98ZA	18	BK	2003343C1
62	A14NP	16	RD	3574285C1
63**	OUT2	18	TN	2003343C1
63	-	-	-	-
64	-	-	-	-
65	-	-	-	-
66	-	-	-	-
67	-	-	-	-
68	-	-	-	-
69	-	-	-	-
70	-	-	-	-
71	-	-	-	-
72	-	-	-	-
73	-	-	-	-
74	-	-	-	-
75	-	-	-	-
76	-	-	-	-

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 033

Figure 248 Connector Composite (1700)

https://truckmanualshub.com/

14.36. CONNECTOR COMPOSITE (1700F), P. 34


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FORWARD CHASSIS CONNECTOR
(1700F)
(LOCATED ON FRONT LEFT DASH PANEL (UPPER))

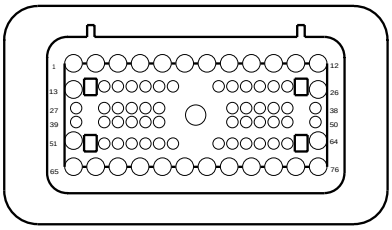

CONNECTOR 3595624C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	M52A	14	YL	3549416C1
2	M53A	14	YL	3549416C1
3	M52B	14	YL	3549416C1
4	M53B	14	YL	3549416C1
5	M58	14	BN	3549416C1
6	M19	14	GY	3549416C1
7	PLUG	-	-	3598921C1
8	PLUG	-	-	3598921C1
9	PLUG	-	-	3598921C1
10	PLUG	-	-	3598921C1
11	PLUG	-	-	3598921C1
12	PLUG	-	-	3598921C1
13	PLUG	-	-	3598921C1
14	M56	16	OR	3549417C1
15	M57	16	OR	3549417C1
16	M41	18	GY	3549418C1
17	M87A	18	GY	3549418C1
18	M9BB	18	GY	3549418C1
19	M87C	16	GY	3549417C1
20	M87D	16	GY	3549417C1
21	M85	16	GY	3549417C1
22	M64A	16	YL	3549417C1
23	M64B	16	YL	3549417C1
24	M54X	16	OR	3549417C1
25	M109A	18	GY	3549418C1
26	PLUG	-	-	3598921C1
27*	M94	18	GY	3549418C1
27#	M94M	18	GY	3549418C1
28*	M94A	18	GY	3549418C1
28#	M94MA	18	GY	3549418C1
29*	M94B	18	GY	3549418C1
29#	M94MB	18	GY	3549418C1
30*	M94C	18	GY	3549418C1
30#	M94MC	18	GY	3549418C1

CAV	CIR	GAUGE	COLOR	TERMINAL
31*	M94D	18	GY	3549418C1
31#	M94MD	18	GY	3549418C1
32*	M94E	18	GY	3549418C1
32#	M94ME	18	GY	3549418C1
33*	M94F	18	GY	3549418C1
33#	M94MF	18	GY	3549418C1
34*	M94H	18	GY	3549418C1
34#	M94MH	18	GY	3549418C1
35*	M94J	18	GY	3549418C1
35#	M94MJ	18	GY	3549418C1
36*	M94K	18	GY	3549418C1
36#	M94MK	18	GY	3549418C1
37	M67B	16	GY	3549417C1
37%	M67-GY	18	WH	3549418C1
38	M67C	16	GY	3549417C1
38%	M67Y	18	PK	3549418C1
39	M67D	16	GY	3549417C1
40	M67E	16	GY	3549417C1
41	M61	18	GY	3549418C1
42	M106A	18	GY	3549418C1
43@	M97H	18	VT	3549418C1
43@@	M97R	18	VT	3549418C1
44	M97J	18	VT	3549418C1
45	M97K	18	VT	3549418C1
46	M97L	18	VT	3549418C1
47	M22ZA	20	TN	3549418C1
48	M22VA	20	TN	3549418C1
49	M22A	20	TN	3549418C1
50	M97N	18	VT	3549418C1
51	M72EA	16	OR	3549416C1
52	M72EB	16	OR	3549417C1
53	PLUG	-	-	3598921C1
54	PLUG	-	-	3598921C1
55	PLUG	-	-	3598921C1
56	PLUG	-	-	3598921C1
57	PLUG	-	-	3598921C1
58	PLUG	-	-	3598921C1
59	PLUG	-	-	3598921C1
60	PLUG	-	-	3598921C1
61	PLUG	-	-	3598921C1
62	PLUG	-	-	3598921C1
63	PLUG	-	-	3598921C1
64	PLUG	-	-	3598921C1
65	PLUG	-	-	3598921C1
66	PLUG	-	-	3598921C1
67	PLUG	-	-	3598921C1
68	PLUG	-	-	3598921C1
69	PLUG	-	-	3598921C1
70	PLUG	-	-	3598921C1
71	PLUG	-	-	3598921C1
72	PLUG	-	-	3598921C1
73	PLUG	-	-	3598921C1
74	PLUG	-	-	3598921C1
75	PLUG	-	-	3598921C1

* W/ BENDIX ABS
\# W/ WABCO ABS
@ W/ REMOTE START STOP
@@ W/ CUMMINS ICON
% W/ VORAD VS-400

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	TITLE WAS CIRCUIT DIAGRAM, PROSTAR	B	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 06SEP06
PART NO. AE08055906
SHEET 034

Figure 249 Connector Composite (1700F)

https://truckmanualshub.com/

14.37. CONNECTOR COMPOSITE (1701), P. 35


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

CENTER CHASIS
(1701)
(LOCATED ON DASH PANEL - LEFT SIDE (LOWER))

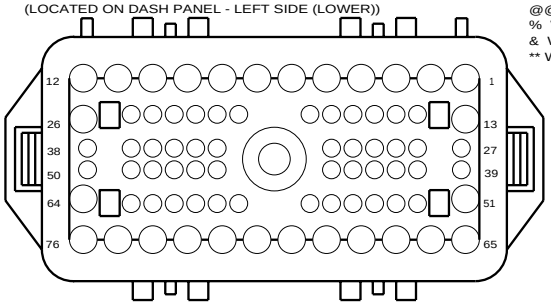

* W/ BENDIX ABS
@ W/ WABCO ABS
W/ STANDARD BACKUP LIGHTS
@@ W/ DAY CAB CUSTOMER SUPPLIED
% W/ VORAD VS-400 COLLISION AVOIDANCE
& W/ LONESTAR
** W/ MUTUALLY EXCLUSIVE

CONNECTOR 3595623C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1#	A71B	16	OR	3574288C1
1	A71BA	16	OR	3574288C1
2	A56A	14	OR	3574288C1
3	A57A	14	OR	3574288C1
4	A68A	14	BN	3574288C1
5	A56T	12	OR	3574287C1
6	A57T	12	OR	3574287C1
7	A58T	12	BN	3574287C1
8	A68T	12	BN	3574287C1
9	A70T	12	OR	3574287C1
10	A94T	12	GY	3574287C1
11	A72V	12	OR	3574287C1
11&	A72V	12	DKBL	3574287C1
12	A67TA	18	PK	3574289C1
13	A94SJ	18	GY	3574289C1
14	A94BM	18	GY	2003343C1
15	A94BN	18	GY	2003343C1
16@	A94BE	18	GY	2003343C1
16*	A94BE	16	GY	3574285C1
17@	A94BD	18	GY	2003343C1
17*	A94BD	16	GY	3574285C1
18@	A94BH	18	GY	2003343C1
18*	A94BH	16	GY	3574285C1
19@	A94BF	18	GY	2003343C1
19*	A94BF	16	GY	3574285C1
20	A94BL	18	GY	2003343C1
21	A94BJ	18	GY	2003343C1
22	A94BK	18	GY	2003343C1
23	A94BA	18	GY	2003343C1
24	A94BB	18	GY	2003343C1
25	A94BC	18	GY	2003343C1
26&	A94TA	12	YL	3574285C1
27	A36B	18	TN	2003343C1
28	A9BC	18	GY	2003343C1
29	A36A	18	TN	2003343C1
30	A37A	18	TN	2003343C1
31	A39	16	GY	3574285C1
32	A59A	18	GY	2003343C1
33	A59B	18	GY	2003343C1
34	A59C	18	GY	2003343C1
35	A59D	18	GY	2003343C1
36	A59E	18	GY	2003343C1
37	A59F	18	GY	2003343C1
38	A59H	18	GY	2003343C1
39	A59J	18	GY	2003343C1
40	A61B	18	GY	2003343C1
41	A106B	18	GY	2003343C1
42	A109B	18	GY	2003343C1
43	A32A	18	TN	2003343C1
44	A32	18	TN	2003343C1
45	A49	18	GY	2003343C1
46	A94SAB	18	GY	2003343C1
47	A94SBB	18	GY	2003343C1
48	A94SCB	18	GY	2003343C1
49	A94SDB	18	GY	2003343C1
50	A49A	18	GY	2003343C1
51	A65BC	14	OR	3574288C1
52	A22ZB	18	TN	2003343C1
52&	A94BM	16	GY	3574287C1
53	A22VB	18	TN	2003343C1
53&	A94BN	16	GY	3574287C1
54	A22B	18	TN	2003343C1
54&	A94BP	16	GY	3574287C1
55	A22ZC	18	TN	2003343C1
55&	A94BQ	16	GY	3574287C1
56	A22VC	18	TN	2003343C1
56&	A94BR	16	GY	3574287C1
57	A22C	18	TN	2003343C1
57&	A94BS	16	GY	3574287C1
58&**	A116L	18	GY	2003343C1
58&**	A94BT	16	GY	3574287C1
59&	A94BU	16	GY	3574287C1
60&	A94BV	16	GY	3574287C1
61	A5U(-)	18	GN	2003343C1
62	A5U(+)	18	YL	2003343C1
63	A94SZC	16	GY	3574285C1
64	-	-	-	-
65	A12U	16	LTBL	3574288C1
66	A14U	16	RD	3574288C1
67	A94SK	18	GY	3574289C1
68@@	A65	16	OR	3574288C1
68	A65	18	OR	3574289C1
69	A67H	16	GY	3574288C1
69%	A67U	18	GY	3574289C1
70	A67J	16	GY	3574288C1
70%	A67W	18	GY	3574289C1
71	A67K	16	GY	3574288C1
71%	A67V	18	GY	3574289C1
72	A94SM	18	GY	3574289C1
73	A94SN	18	GY	3574289C1
74	A94SL	18	GY	3574289C1
75	A94SVC	16	GY	3574288C1
76	A94SH	16	GY	3574288C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 035

Figure 250 Connector Composite (1701)

https://truckmanualshub.com/

14.38. CONNECTOR COMPOSITE (1701F), P. 36


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

CENTER CHASSIS CONNECTOR
(1701F)
(LOCATED ON FRONT LEFT DASH PANEL (LOWER))

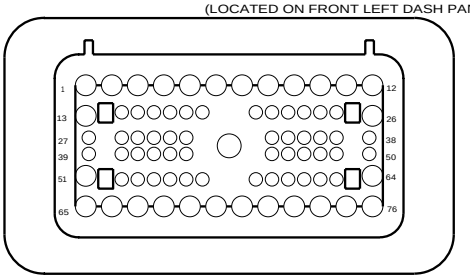

CONNECTOR 3595622C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	N71BA	14	OR	3549416C1
2	N56A	14	OR	3549416C1
3	N57A	14	OR	3549416C1
4	N68A	14	BN	3549416C1
5	N56T	10	YL	3549415C1
6	N57T	10	LTGN	3549415C1
7	N58T	10	BK	3549415C1
8	N68T	10	BN	3549415C1
9	N70T	10	RD	3549415C1
10	N94T	10	DKBL	3549415C1
11	N72V	12	DKBL	3549415C1
11##@	N72V	10	DKBL	3549415C1
12	N67TA	18	PK	3574289C1
12@	N67TA	16	PK	3549416C1
13	N94SJ	16	GY	3549416C1
14	N94BM	16	GY	3549417C1
15	N94BN	16	GY	3549417C1
16	N94BE	16	GY	3549417C1
17	N94BD	16	GY	3549417C1
18	N94BH	16	GY	3549417C1
19	N94BF	16	GY	3549417C1
20	N94BL	16	GY	3549417C1
21	N94BJ	16	GY	3549417C1
22	N94BK	16	GY	3549417C1
23	N94BA	16	GY	3549417C1
24	N94BB	16	GY	3549417C1
25	N94BC	16	GY	3549417C1
26##@	N94TA	12	YL	3549415C1
27	N36B	18	TN	3549418C1
27@	N36A	18	TN	3549418C1
28	N9BC	18	GY	3549418C1
29	N36A	18	TN	3549418C1
30	N37A	18	TN	3549418C1
31	N39	16	GY	3549417C1
32	N59A	18	GY	3549418C1
33	N59B	18	GY	3549418C1
34	N59C	18	GY	3549418C1
34**	N59K	16	GY	3549417C1
35	N59D	18	GY	3549418C1
35**	N59K	18	GY	3549418C1
36	N59E	18	GY	3549418C1
36**	N59K	16	GY	3549417C1
37	N59F	18	GY	3549418C1
37**	N59K	18	GY	3549418C1
38	N59H	18	GY	3549418C1
38**	N59K	16	GY	3549418C1
39	N59J	18	GY	3549418C1
40	N61B	18	GY	3549418C1
41	N106B	18	GY	3549418C1
42	N109B	18	GY	3549418C1
43	N32A	18	TN	3549418C1
44	N32	18	TN	3549418C1
45	N49	18	GY	3549418C1
46	N94SAB	18	GY	3549418C1
47	N94SBB	18	GY	3549418C1
48	N94SCB	18	GY	3549418C1
49	N94SDB	18	GY	3549418C1
50	N49A	18	GY	3549418C1
51	N65BC	14	OR	3549416C1
52	N22ZB	18	TN	3549418C1
52&@	N94BM	16	GY	3549417C1
53	N22VB	18	TN	3549418C1
53&@	N94BN	16	GY	3549417C1
54	N22B	18	TN	3549418C1
54&@	N94BP	16	GY	3549417C1
55	N22ZC	18	TN	3549418C1
55&@	N94BO	16	GY	3549417C1
56	N22VC	18	TN	3549418C1
56&@	N94BR	16	GY	3549417C1
57	N22C	18	TN	3549418C1
57&@	N94BS	16	GY	3549417C1
58	-	-	-	-
59	-	-	-	-
60	-	-	-	-
61	N5U(-)	18	GN	3549418C1
62	N5U(+)	18	YL	3549418C1
63	N94SZC	16	GY	3549417C1
64	-	-	-	-
65	N12UA	16	PK	3549416C1
65	N12U	16	PK	3549416C1
66	N14U	16	RD	3549416C1
67	N94SK	16	GY	3549416C1
68	N65	16	OR	3549416C1
69	N67H	16	GY	3549416C1
69*	N67U	16	GY	3549416C1
70	N67J	16	GY	3549416C1
70*	N67W	16	GY	3549416C1
71	N67K	16	GY	3549416C1
71*	N67V	16	GY	3549416C1
72	N94SM	16	GY	3549416C1
73	N94SN	16	GY	3549416C1
74	N94SL	16	GY	3549416C1
75	N94SVC	16	GY	3549416C1
76	N94SH	16	GY	3549416C1

** W/ VORAD VS-400
* W/ 5TH WHEEL JAW LOCK SENSOR
W/ TRAILER SOCKET W/ ISO
& W/ BENDIX 6 CHANNEL ABS W/ ACT
&& W/ NO FUEL FILTER SENSOR W/ VSM
@ W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 06SEP06
PART NO. AE08055906
SHEET 036

Figure 251 Connector Composite (1701F)

https://truckmanualshub.com/

14.39. CONNECTOR COMPOSITE (1702), P. 37


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

IP CONNECTOR
(1702)
(LOCATED ON FRONT CENTER DASH PANEL)

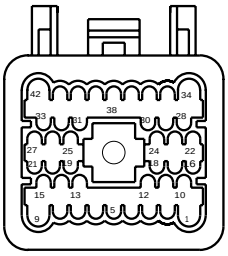

CONNECTOR 3595621C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1*	A97D	10	RD	3574287C1
1*	A97D	10	PL	3574287C1
2	A9AA	20	GY	2003343C1
3	A6DB	20	GY	2003343C1
4	A77B	20	LTGN	2003343C1
5	A28	18	TN	2003343C1
6#	A71A	16	OR	3574285C1
6	A71-G	18	WH	2003343C1
6##	A71A	18	OR	2003343C1
7	A71B	16	OR	3574285C1
8	A13A	16	PK	3574285C1
9*	A14A	16	RD	3574288C1
9*	A14A	12	RD	3574287C1
10	A77	18	LTGN	2003343C1
11	A5R(+)	18	YL	2003343C1
12	A1	18	LTBL	2003343C1
13	A31	18	TN	2003343C1
14	A88	18	LTGN	2003343C1
15	A95	18	TN	2003343c1
16	A17	16	PK	3574285C1
17	A5R(-)	18	GN	2003343C1
18*	A23A	18	TN	3522073C1
18*	A97A1	18	PL	3515517C1
19*	A17-GC	16	WH	3574285C1
19*	A17-GC	18	WH	2003343C1
20	A17B	18	PK	2003343C1
21	A17C	18	PK	2003343C1
22	A97C	18	PL	2003343C1
23	A97B	18	PL	2003343C1
24@	A97M	18	PL	2003343C1
24@@	A30	16	TN	3574285C1
24&	A97F	16	PL	3595621C1
25	A92E	16	TN	3574285C1
26	A92F	18	TN	2003343C1
27	A92H	18	TN	2003343C1
28	A99B	18	PL	2003343C1
29	A97N	18	PL	2003343C1
30*	A99D	18	PL	2003343C1
30*	A97N	18	PL	2003343c1
31	PLUG	-	-	3508928C1
32	A97S	16	PL	3574285C1
32%	A104AL	16	DKBL	3574285C1
33%	A104AM	16	DKBL	3574285C1
33	A97J	16	PL	3574285C1
34	A97KB	14	PL	0382181C1
35	A3BA(+)	18	DKBL	2003343C1
36	A3BA(-)	18	GY	2003343C1
37	A97F	16	PL	3574285C1
37&	A97FB	16	PL	3574285C1
38	PLUG	-	-	3508928C1
39	A92A	18	TN	2003343C1
40	A92B	18	TN	2003343C1
41	A88A	18	LTGN	2003343C1
42	A97VT1	14	PL	3574288C1
42**	A97FZ	14	RD	3574288C1

* MUTUALLY EXCLUSIVE
\# W/ STD BACKUP LIGHT
W/ WORK LIGHT FEED
@ W/ CUMMINS ENGINE
@@ W/ ENGINE OIL TEMPRATURE
% W/ REMOTE START / STOP
& W/ INTERNATIONAL ENGINE
** W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	D	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 037

Figure 252 Connector Composite (1702)

https://truckmanualshub.com/


14.40. CONNECTOR COMPOSITE (1702), P. 38

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

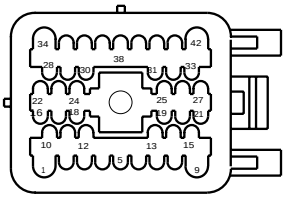


ENGINE CONNECTOR (1702) (LOCATED ON FRONT CENTER DASH PANEL) (W/ ISX ENGINE)

* W/ FREEDOMLINE XMSN
W/ AUTOSHIFT XMSN
@ W/ LONESTAR

CONNECTOR 3595620C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	K97D	10	VT	3549415C1
2	K9AA	16	GY	3549417C1
2@	K9AA	18	GY	3549418C1
3	K6DB	16	GY	3549417C1
3@	K6DB	18	GY	3549418C1
4	K77B	16	LTGN	3549417C1
5	K28	18	TN	3549418C1
6	K71A	16	OR	3549417C1
6*	K71-G	16	OR	3549417C1
6@	K71-G	16	WH	3549417C1
7	K71B	16	OR	3549417C1
8	K13A	16	PK	3549417C1
9	PLUG	-	-	3508928C1
10	KA77	16	LTGN	3549417C1
11	K5R(+)	18	YL	3549418C1
12	K1B	18	LTBL	3549418C1
13	K31	18	TN	3549418C1
14	K88	16	LTGN	3549417C1
15	PLUG	-	-	3508928C1
16	K17	16	PK	3549417C1
17	K5R(-)	18	GN	3549418C1
18	K23A	16	TN	3508928C1
19#	K17-GC	18	WH	3549418C1
19*	K17-GC	16	WH	3549417C1
20	K17B	18	PK	3549418C1
21	K17C	18	PK	3549418C1
22	K97C	18	VT	3549418C1
23	K97B	18	VT	3549418C1
24	K97M	18	VT	3549418C1
25	K92E	18	TN	3549418C1
26	K92F	18	TN	3549418C1
27	K92H	18	TN	3549418C1
28	K99B	18	VT	3549418C1
29	K97N	18	VT	3549418C1
30	K99D	18	VT	3549418C1
31	PLUG	-	-	3508928C1
32	K97S	18	VT	3549418C1
33	K97J	18	VT	3549418C1
34	PLUG	-	-	3508928C1
35	K3BA(+)	18	DKBL	3549418C1
36	K3BA(-)	18	GY	3549418C1
37	K97F	18	VT	3549418C1
38	PLUG	-	-	3508928C1
39	K92A	18	TN	3549418C1
40	K92B	18	TN	3549418C1
41	K88A	18	VT	3549418C1
42	-	-	-	-

ENGINE CONNECTOR (1702) (LOCATED ON FRONT CENTER DASH PANEL) (W/ PROSTAR)

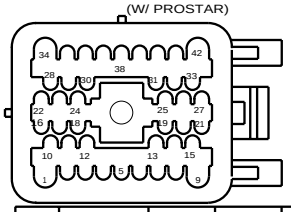

W/ IBB ENGINE CONNECTOR 3595620C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	K14	14	RD	3549416C1
2*	K9AA	16	GY	3549417C1
2*	K9AA	18	GY	3549418C1
3	K6DB	18	GY	3549418C1
4	K77B	18	LTGN	3549418C1
5	K28	18	TN	3549418C1
6	K71A	16	OR	3549417C1
7	K71B	16	OR	3549417C1
8*	K13A	16	PK	3549417C1
8*	K13A	14	PK	3549417C1
9	PLUG	-	-	3508928C1
10	K77	16	LTGN	3549417C1
11	K5R(+)	18	YL	3549418C1
12	PLUG	-	-	3508928C1
13	K31	18	TN	3549418C1
14	K88	16	LTGN	3549417C1
15	K14C	16	RD	3549417C1
16*	K17	16	PK	3549417C1
16*	K17	18	PK	3549418C1
17	K5R(-)	18	GN	3549418C1
18	K97A1	18	VT	3549418C1
19	K17-GC	18	PK	3549418C1
20	K17B	18	PK	3549418C1
21	K17C	16	PK	3549417C1
22	K97C	18	VT	3549418C1
23	K97B	18	VT	3549418C1
24	K97F	18	VT	3549418C1
25	K92E	16	TN	3549417C1
26	K92F	18	TN	3549418C1
27	K92H	18	TN	3549418C1
28	K99B	18	VT	3549418C1
29	PLUG	-	-	3508928C1
30	K97N	18	VT	3549418C1
31	PLUG	-	-	3508928C1
32	K97S	18	VT	3549418C1
33	K97J	18	VT	3549418C1
34	K14RD2	14	RD	3549416C1
35	K3BA(+)	18	DKBL	3549418C1
36	K3BA(-)	18	GY	3549418C1
37	K13A	18	PK	3549418C1
38*	K92A15	18	TN	3549418C1
38*	K47T	18	GY	3549418C1
39	K92A	18	TN	3549418C1
40	K92B	18	TN	3549418C1
41	K88A	16	LTGN	3549417C1
42	K97VT1	14	VT	3549416C1

* MUTUALLY EXCLUSIVE

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R

DRAWN U00K640 — NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR

RELEASE NO. 59637L — DATE 06SEP06 — PART NO. AE08055906 — SHEET 038

Figure 253 Connector Composite (1702)

https://truckmanualshub.com/

14.41. CONNECTOR COMPOSITE (1702), P. 38A

INTERNATIONAL TRUCK AND ENGINE CORPORATION


THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

CAT ENGINE

ENGINE CONNECTOR
(1702)
(LOCATED ON FRONT CENTER DASH PANEL)
(W/ CAT ENGINE)

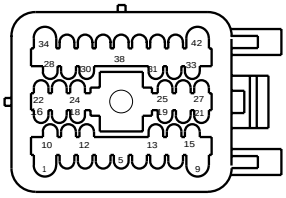

CONNECTOR 3595620C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	PLUG	-	-	3508928C1
2*	K9AA	16	GY	3549417C1
2*	K9AA	18	GY	3549418C1
2	K30B	18	TN	3549418C1
3	K6DB	18	GY	3549418C1
4	K77B	18	LTGN	3549418C1
5	K28	18	TN	3549418C1
6*	K71A	16	OR	3549417C1
6*	K71-G	16	WH	3549417C1
7	K71B	16	OR	3549417C1
8	K13A	16	PK	3549417C1
	K13A	14	PK	3549417C1
9	PLUG	-	-	3508928C1
10	K77	16	LTGN	3549417C1
11	K5R(+)	18	YL	3549418C1
12	PLUG	-	-	3508928C1
13	K31H	18	TN	3549418C1
	K31	18	TN	3549418C1
14	K88	16	LTGN	3549417C1
15	PLUG	-	-	3508928C1
16	K17	16	PK	3549417C1
17	K5R(-)	18	GN	3549418C1
18	K23A	16	TN	3549417C1
19	K17-GC	16	WH	3549417C1
	K17-GC	18	WH	3549418C1
20	K17B	18	PK	3549418C1
21	K17C	18	PK	3549418C1
22	K97C	18	VT	3549418C1
23	K97B	18	VT	3549418C1
24	K30A	18	TN	3549418C1
25	K92E	18	TN	3549418C1
26	K92F	18	TN	3549418C1
27	K92H	18	TN	3549418C1
28	K99B	18	VT	3549418C1
29	PLUG	-	-	3508928C1
30	PLUG	-	-	3508928C1
31	PLUG	-	-	3508928C1
32	PLUG	-	-	3508928C1
33	PLUG	-	-	3508928C1
34	PLUG	-	-	3508928C1
35	K3BA(+)	18	YL	3549418C1
35	K3BA(+)	18	DKBL	3549418C1
36	K3BA(-)	18	GN	3549418C1
36	K3BA(-)	18	GY	3549418C1
37	K97F	18	VT	3549418C1
38	PLUG	-	-	3508928C1
39	K92A	18	TN	3549418C1
40	K92B	18	TN	3549418C1
41	K88A	18	TN	3549418C1
42	K97FZ	14	RD	3549416C1

* MUTUALLY EXCLUSIVE

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	300523	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 61406U	DATE 15JUN08

PART NO. AE08055906 SHEET 38A

Figure 254 Connector Composite (1702)

https://truckmanualshub.com/

14.42. CONNECTOR COMPOSITE (1800), P. 39


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND
IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE
INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

DCM CONNECTOR
(1800)
(LOCATED IN INSTRUMENT PANEL TO THE RIGHT OF STEERING COLUMN)

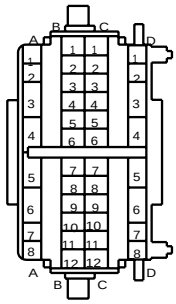

CONNECTOR 3553649C1

BODY LOCK 3553650C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A56B	20	OR	3544883C1
A2	A57B	20	OR	3544883C1
A3	A11-GA	18	GY	3544876C1
A4	A9	18	GY	3544876C1
A5	A87E	18	GY	3544876C1
A6	-	-	-	-
A7	A52D	20	YL	3544883C1
A8	A102A	20	YL	3544883C1
B1	A82C	20	GY	3544883C1
B2	A40A	20	GY	3544883C1
B3	A6	20	GY	3544883C1
B4	A97B	18	PL	3544884C1
B5	A99D	18	PL	3544884C1
B6	A97N	18	PL	3544884C1
B7	A44	20	GY	3544883C1
B8	A86	20	LTGN	3544883C1
B9	A70	20	OR	3544883C1
B10	A85A	20	GY	3544883C1
B11	A100	20	GY	3544883C1
B12	A97	20	PL	3544883C1
C1	A82B	20	GY	3544883C1
C2	A40B	18	GY	3544884C1
C3	A94SV	16	GY	3544884C1
C4	A99B	18	PL	3544884C1
C5	A97C	18	PL	3544884C1
C6	A97M	18	PL	3544884C1
C7	A92	18	TN	3544884C1
C8	A86A	18	LTGN	3544884C1
C9	A82A	20	GY	3544883C1
C10	A94SZ	16	GY	3544884C1
C11	A97A	18	PL	3544884C1
C12	A40	20	GY	3544883C1
D1*	A70E	18	OR	3544884C1
D1#	A14EB	18	RD	3544884C1
D1@	A14EB2	18	RD	3544884C1
D2**	A70D	18	GY	3544884C1
D2***	A70D	18	OR	3544884C1
D2#	A14EBA	18	RD	3544884C1
D2@	A11-GMB	16	WH	3544884C1
D3	A62DD	18	DKBL	3544876C1
D4	A24	18	GY	3544876C1
D4@	A24C	18	GY	3544884C1
D5	A94SE	18	GY	3544876C1
D6	A94SF	16	GY	3544876C1
D7	A17A	18	PK	3544884C1
D8	A17B	18	PK	3544884C1

* W/ TRIP MASTER
** W/ DAY CAB TRIPMASTER
*** W/ SLEEPER TRIPMASTER
W/ XATA
@ W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 5963ZL	DATE 06SEP06

PART NO. AE08055006 SHEET 039

Figure 255 Connector Composite (1800)

https://truckmanualshub.com/

14.43. CONNECTOR COMPOSITE (1800F), P. 40


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

CAB HARNESS CONN
(1800F)
(LOCATED IN INSTRUMENT PANEL TO THE RIGHT OF STEERING COLUMN)

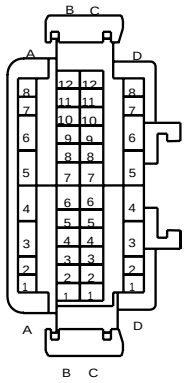

CONNECTOR 3612512C1
BODY LOCK 3553654C1
3553652C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	B56B	18	OR	3544886C1
A2	B57B	18	OR	3544886C1
A3	B11-GA	18	WH	3544880C1
A4	B9	18	GY	3544880C1
A5	B87E	18	GY	3544880C1
A6	-	-	-	-
A7	B52B	18	YL	3544886C1
A8	B102A	18	YL	3544886C1
B1	B82C	18	GY	3544886C1
B2	B40A	18	GY	3544886C1
B3	B6	18	GY	3544886C1
B4	B97B	18	VT	3544886C1
B5	B99D	18	VT	3544886C1
B6	B97N	18	VT	3544886C1
B7	B44	18	GY	3544886C1
B8	B86	20	LTGN	3544885C1
B9	B70	18	OR	3544886C1
B10	B85A	20	GY	3544885C1
B11	B100	20	GY	3544885C1
B12	B97	20	GY	3544885C1
C1	B82B	18	GY	3544886C1
C2	B40B	18	GY	3544886C1
C3	B94SV	18	GY	3544886C1
C4	B99B	18	VT	3544886C1
C5*	B97C	18	GY	3544886C1
C5*	B97C	18	VT	3544886C1
C6	B97M	18	VT	3544886C1
C7	B92	20	TN	3544885C1
C8	B86A	20	LTGN	3544885C1
C9	B82A	18	GY	3544886C1
C10	B94SZ	18	GY	3544886C1
C11	B97A	18	VT	3544886C1
C12	B40	18	GY	3544886C1
D1	B70E	18	OR	3544886C1
D2	B70D	18	GY	3544886C1
D3	B62DD	20	DKBL	3544879C1
D4	B24	20	GY	3544879C1
D5	B94SE	18	GY	3544880C1
D6	B94SF	18	GY	3544880C1
D7	B17A	18	PK	3544886C1
D8	B17AA	18	PK	3544886C1

* MUTUALLY EXCLUSIVE

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 040

Figure 256 Connector Composite (1800F)

https://truckmanualshub.com/

14.44. CONNECTOR COMPOSITES (1801), (1802), (1803), P. 41


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


TURN SIGNAL SWITCH CONNECTOR
(1801)
(LOCATED ON STEERING COLUMN)

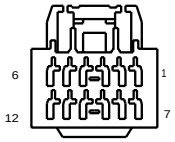

CONNECTOR 3539212C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	B56B	18	OR	3571717C1
2	B57B	18	OR	3571717C1
3	B52B	18	YL	3571717C1
4	B102A	18	YL	3571717C1
5	B82C	18	GY	3571717C1
6	B87-G	18	WH	3571717C1
7	B9D	18	GY	3571717C1
8	B82A	18	GY	3571717C1
9	-	-	-	-
10	-	-	-	-
11	B82B	18	GY	3571717C1
12	B87E	18	GY	3571717C1


CLOCKSPRING
(1802)
(LOCATED ON STEERING COLUMN)
(W/ PROSTAR)



CONNECTOR 3608496C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	B62DD	20	DKBL	3608495C1
2	B97	20	GY	3608495C1
3	B86	20	LTGN	3608495C1
4	B92	20	TN	3608495C1
5	B9C	20	GY	3608495C1
6	B100	20	GY	3608495C1
7	B85A	20	GY	3608495C1
8	B24	20	GY	3608495C1
9	B86A	20	LTGN	3608495C1
10	B62-GDD	20	WH	3608495C1


CLOCKSPRING
(1802)
(LOCATED ON STEERING COLUMN)
(W/ LONESTAR)



CONNECTOR 3608496C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	B62DD	20	DKBL	3608497C1
2	B97	20	GY	3608497C1
3	B86	20	LTGN	3608497C1
4	B92	20	TN	3608497C1
5	B9C	20	GY	3608497C1
6	B100	20	GY	3608497C1
7	B85A	20	GY	3608497C1
8	B24	20	GY	3608497C1
9	B86A	20	LTGN	3608497C1
10	B62-GDD	20	WH	3608497C1

PRIMARY AIR TRANSDUCER
(1803)
(LOCATED AT BASE OF STEERING COLUMN)



CONNECTOR 1678137C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B9E	18	GY	1651943C1
B	B6A	18	GY	1651943C1
C	B40	18	GY	1651943C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	20JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 041

Figure 257 Connector Composites (1801), (1802), (1803)

https://truckmanualshub.com/

14.45. CONNECTOR COMPOSITES (1804), (1805), (1806), P. 42


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


SECONDARY AIR TRANSDUCER
(1804)
(LOCATED AT BASE OF STEERING COLUMN)



CONNECTOR 1678137C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B9F	18	GY	1651943C1
B	B6B	18	GY	1651943C1
C	B40A	18	GY	1651943C1


TRANSDUCER CONNECTOR
(1805)
(LOCATED AT BASE OF STEERING COLUMN)



CONNECTOR 1678137C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B9H	18	GY	1651943C1
B	B6C	18	GY	1651943C1
C	B40B	18	GY	1651943C1

STOP LIGHT SWITCH CONNECTOR
(1806)
(LOCATED AT BASE OF STEERING COLUMN)

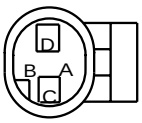

CONNECTOR 1661777C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
C	B70	18	OR	1661875C1	1661872C1
D	B9K	18	GY	1661875C1	1661872C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R
		DIAGRAM, PROSTAR		

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 06SEP06
PART NO. AE08055906
SHEET 042

Figure 258 Connector Composites (1804), (1805), (1806)

https://truckmanualshub.com/

14.46. CONNECTOR COMPOSITES (1808), (1809), (1810), P. 43


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


PARK BRAKE
(1808)
(LOCATED AT BASE OF STEERING COLUMN)

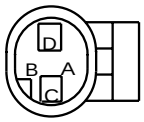

CONNECTOR 1661777C1
BODY LOCK 1661873C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
C	B44	18	GY	1661875C1	1661872C1
D	B9J	18	GY	1661875C1	1661872C1


ACCELERATOR PEDAL
(1809)
(LOCATED ABOVE ACCELERATOR PEDAL)



CONNECTOR 1687790C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B99B	18	VT	1651943C1
B	B97B	18	VT	1651943C1
C	B97C	18	VT	1651943C1
D	B99D	18	VT	1651943C1
E	B97N	18	VT	1651943C1
F	B97M	18	VT	1651943C1


ACCELERATOR PEDAL
(1810)
(LOCATED ABOVE ACCELERATOR PEDAL)
(W/ PROSTAR)



CONNECTOR 0453133C1
BODY LOCK 1655704C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B97C	18	GY	3572625C1
B	B97B	18	VT	3572625C1
C	B99B	18	VT	3572625C1

ACCELERATOR PEDAL
(1810)
(LOCATED ABOVE ACCELERATOR PEDAL)
(W/ LONESTAR)



CONNECTOR 1655702C1
BODY LOCK 1655704C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B97C	18	GY	1680205C1
B	B97B	18	VT	1680205C1
C	B99B	18	VT	1680205C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 043

Figure 259 Connector Composites (1808), (1809), (1810)

https://truckmanualshub.com/

14.47. CONNECTOR COMPOSITES (1811), (1812), (1820F/1820M), P. 44


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


CLUTCH SWITCH
(1811)
(LOCATED ON CLUTCH PEDAL)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	B17A	18	PK	1667742C1	1661872C1
B	B17AA	18	PK	1667742C1	1661872C1
C	B97A	18	VT	1667742C1	1661872C1
D	B9M	18	GY	1667742C1	1661872C1

CONNECTOR 3540757C1
BODY LOCK 3540758C1

BRAKE INPUT
(1812)
(LOCATED AT BASE OF STEERING COLUMN)

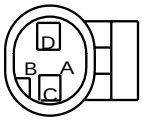

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
D	B70D	18	GY	1661875C1	1661872C1
C	B70E	18	OR	1661875C1	1661872C1

CONNECTOR 1661777C1
BODY LOCK 1661873C1

CAB HARNESS STEERING WHEEL SENSOR
(1820F / 1820M)
(LOCATED IN INSTRUMENT PANEL TO RIGHT OF STEERING COLUMN)



CONNECTOR 1667529C1
BODY LOCK 1667530C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B94SA	20	GY	3534481C1
B	B94SB	20	GY	3534481C1
C	B94SC	20	GY	3534481C1
D	B94SD	20	GY	3534481C1



CONNECTOR 1667305C1
BODY LOCK 1661263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A94SA	18	GY	1661261C1
B	A94SB	18	GY	1661261C1
C	A94SC	18	GY	1661261C1
D	A94SD	18	GY	1661261C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 044

Figure 260 Connector Composites (1811), (1812), (1820F/1820M)

https://truckmanualshub.com/

14.48. CONNECTOR COMPOSITES (1821), (1822), (1823), (1860), P. 45


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


STEERING WHEEL
POSITION SENSOR
(1821)
(LOCATED ON STEERING COLUMN)



CONNECTOR 3601800C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	B94SC	20	GY	3601801C1
2	B94SA	20	GY	3601801C1
3	B94SB	20	GY	3601801C1
4	B94SD	20	GY	3601801C1
5	-	-	-	-
6	-	-	-	-
7	-	-	-	-


ABS PRIMARY
AIR TRANSDUCER
(1822)
(LOCATED AT BASE OF STEERING COLUMN)



CONNECTOR 1678137C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B94SZA	18	GY	1651943C1
B	B94SVA	18	GY	1651943C1
C	B94SE	18	GY	1651943C1

ABS SECONDARY
AIR TRANSDUCER
(1823)
(LOCATED AT BASE OF STEERING COLUMN)



CONNECTOR 1678137C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B94SZB	18	GY	1651943C1
B	B94SVB	18	GY	1651943C1
C	B94SF	18	GY	1651943C1

CIGAR LIGHTER TYPE
POWER SOURCE
(1860)
(LOCATED IN INSTRUMENT PANEL - CENTER)
(JUMPER HARNESS)
(W/ PROSTAR)



CONNECTOR 3613000C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A86M	16	LT GN	3534165C1
B	-	-	-	-
C	A86-GA	16	WH	3534165C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 045

Figure 261 Connector Composites (1821), (1822), (1823), (1860)

https://truckmanualshub.com/

14.49. CONNECTOR COMPOSITES (1861), (1901), (1903), P. 46


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

TWO POST POWER SOURCE
(1861)
(LOCATED IN INSTRUMENT PANEL CENTER)
(JUMPER HARNESS)



CONNECTOR 3517473C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	B86N	14	LTGN	3517476C1
B	B86-GB	14	WH	3517476C1

AUX POWER
(1901)
(LOCATED IN INSTRUMENT PANEL - CENTER)



CONNECTOR 1661196C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A86P	16	LTGN	1661208C1
B	A86-GP	16	WH	1661208C1

CIGAR LIGHTER
(1903)
(LOCATED IN INSTRUMENT PANEL)



CONNECTOR 3590298C1
BODY LOCK 3557682C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A84	16	LTGN	3534165C1
B	-	-	-	-
C	A84-G	16	WH	3534165C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R
		DIAGRAM, PROSTAR		

DRAWN U00K640
RELEASE NO. 59637L
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
DATE 06SEP06
PART NO. AE08055906
SHEET 046

Figure 262 Connector Composites (1861), (1901), (1903)

https://truckmanualshub.com/

14.50. CONNECTOR COMPOSITES (1906), (1907), (1909M), (1910), (1912), (1916), P. 47

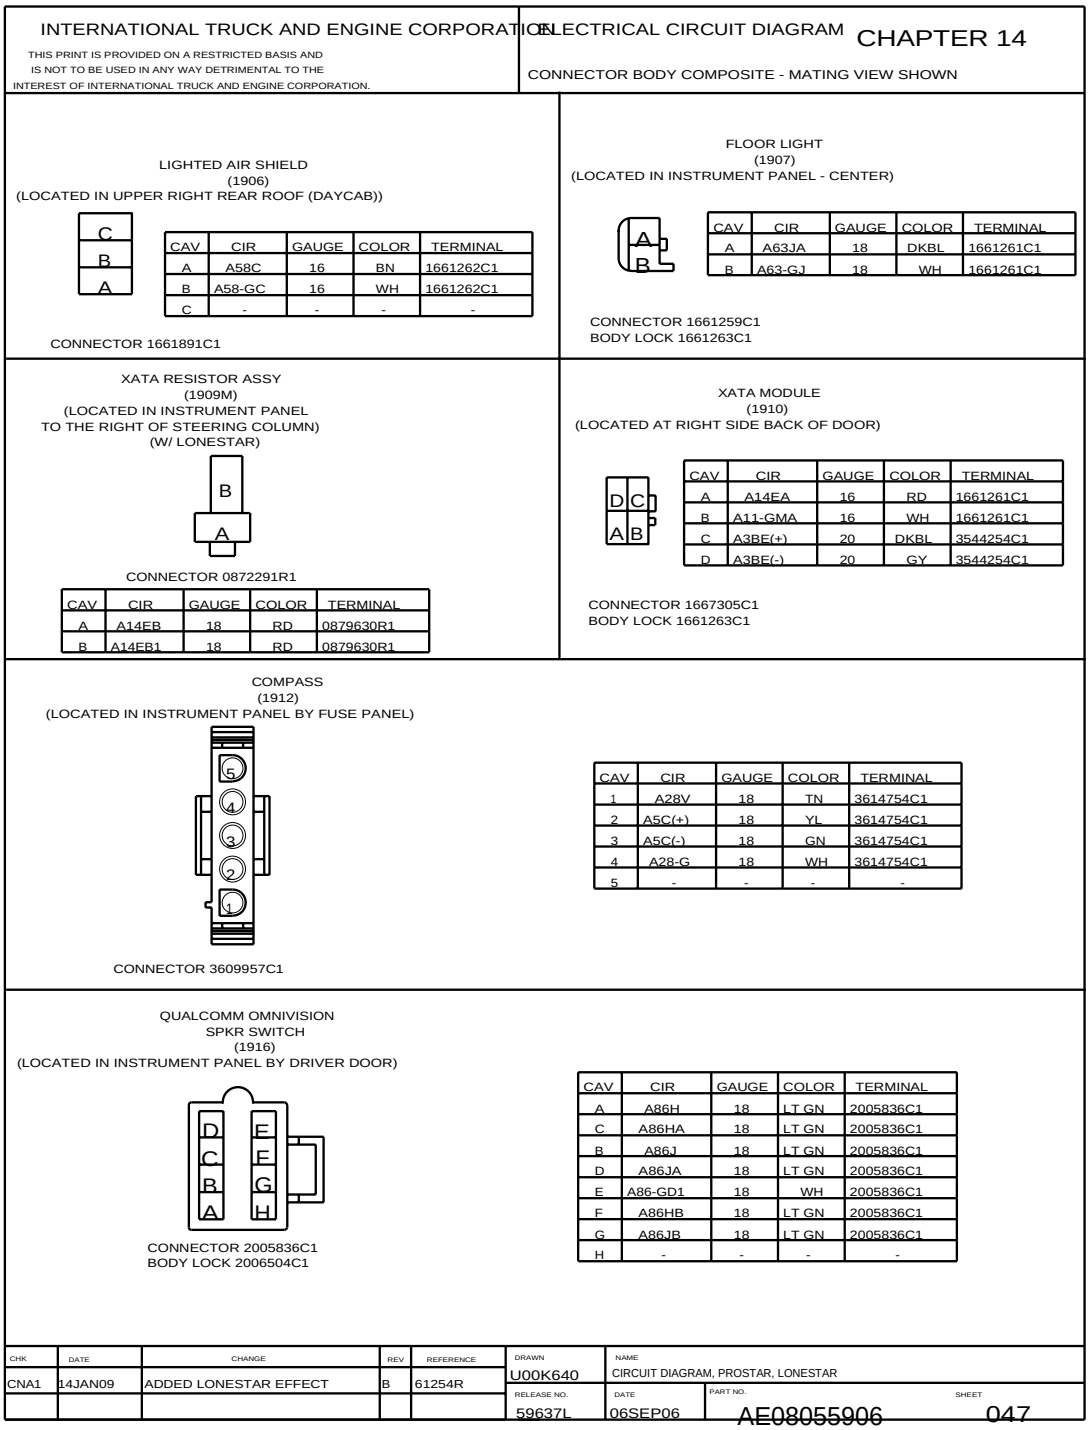


Figure 263 Connector Composites (1906), (1907), (1909M), (1910), (1912), (1916)

https://truckmanualshub.com/

14.51. CONNECTOR COMPOSITES (1917), (1918/1918A), (1919/1919A), (1920), (1922), (1922M), P. 48

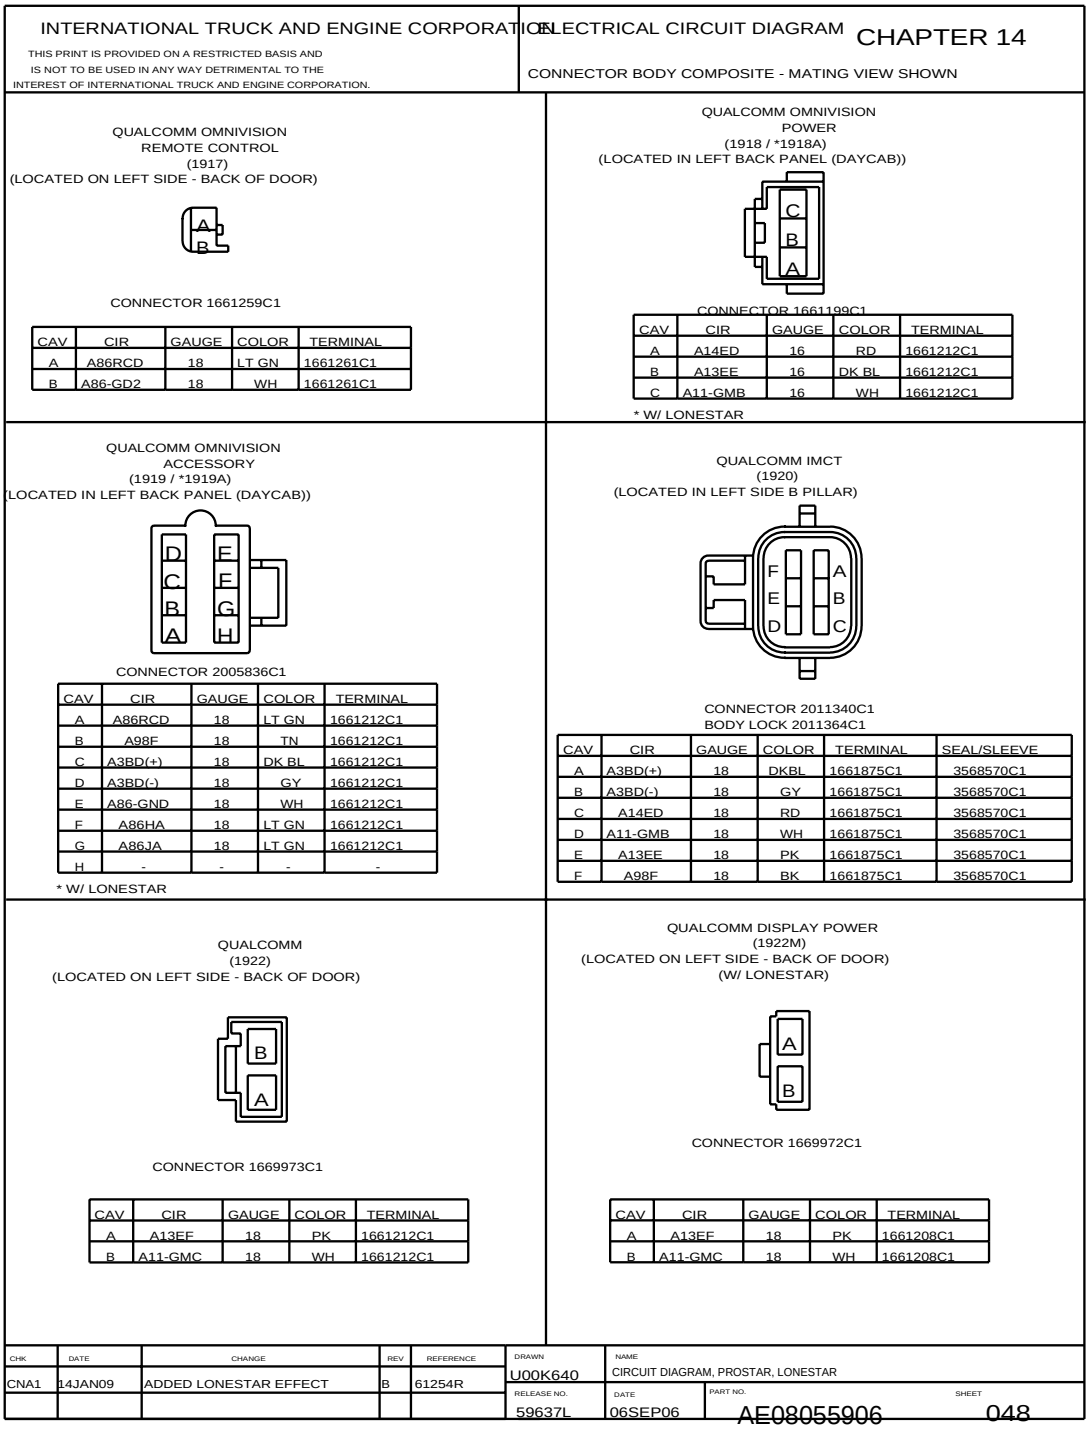


Figure 264 Connector Composites (1917), (1918/1918A), (1919/1919A), (1920), (1922), (1922M)

https://truckmanualshub.com/

14.52. CONNECTOR COMPOSITES (1923), (1925), P. 49


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


QUALCOMM TMCT
(1923)
(LOCATED ON RIGHT SIDE BACK OF DOOR)

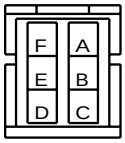

CONNECTOR 1661201C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A13EE	18	PK	1661212C1
B	A14ED	18	RD	1661212C1
C	A98F	18	BK	1661212C1
D	A11-GMB	18	WH	1661212C1
E	A3BD(+)	18	DKBL	1661212C1
F	A3BD(-)	18	GY	1661212C1

VORAD
(1925)
(LOCATED ON MODULE BRACKET)
(W/ PROSTAR)

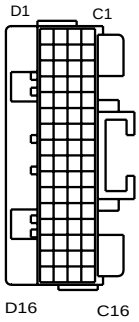

CONNECTOR 3545189C1
BODY LOCK 1618846C1
1618847C1

CAV	CIR	GAUGE	COLOR	TERMINAL
C1	A67A	18	GY	3522073C1
C2	A67-GA	18	WH	3522073C1
C3	A67E	16	GY	3522073C1
C4	A67D	16	GY	3522073C1
C5*	A67C	16	GY	3522073C1
C5*	A67C	18	GY	3522073C1
C6	A67B	16	GY	3522073C1
C7	A3BF(+)	18	DKBL	3522073C1
C8	A3BF(-)	18	GY	3522073C1
C9	-	-	-	-
C10	-	-	-	-
C11	-	-	-	-
C12	A67KA	16	GY	3522073C1
C13	A67J	16	GY	3522073C1
C14	A67HA	16	GY	3522073C1
C15	A67F	18	GY	3522073C1
C16	A67L	18	GY	3522073C1
D1	-	-	-	-
D2	-	-	-	-
D3	A67M	18	GY	3522073C1
D4	A67N	18	GY	3522073C1
D5	A67P	18	GY	3522073C1
D6	A67R	18	GY	3522073C1
D7	A5HA(+)	18	YL	3522073C1
D8	A5HA(-)	18	GN	3522073C1
D9	-	-	-	-
D10	-	-	-	-
D11	-	-	-	-
D12	-	-	-	-
D13	-	-	-	-
D14	-	-	-	-
D15	-	-	-	-
D16	-	-	-	-

* MUTUALLY EXCLUSIVE

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	REVISED AND REDRAWN	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 049

Figure 265 Connector Composites (1923), (1925)

https://truckmanualshub.com/

14.53. CONNECTOR COMPOSITES (1927), (1929), (1930), (1931), P. 50


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


VORAD DISPLAY CONNECTION
(1927)
(LOCATED IN RIGHT SIDE A PILLAR)

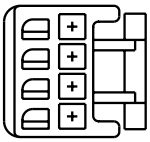

CONNECTOR 3545777C1
BODY LOCK 3545778C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2	A67KB	16	GY	3522073C1
3	A67HB	16	GY	3522073C1
4	A67L	16	GY	3522073C1


VORAD DISPLAY
(1929)
(LOCATED ON TOP OF INSTRUMENT PANEL)



CONNECTOR 2036585C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A67R	18	GY	2036586C1
B	A67P	18	GY	2036586C1
C	A67N	18	GY	2036586C1
D	A67M	18	GY	2036586C1


ICON MODULE "B" CONNECTOR
(1930)
(LOCATED ON MODULE BRACKET)
(W/ PROSTAR)

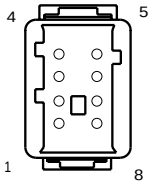

CONNECTOR 3539140C1
BODY LOCK 3539145C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	PLUG	-	-	3527276C1
2	A97N	16	VT	3518961C1
3	A17HC	18	PK	3518961C1
4	A97X	18	VT	3518961C1
5	A17HD	16	PK	3518961C1
6	A17HF	18	PK	3518961C1
7	A3H (+)	18	DKBL	3518961C1
8	A3H (-)	18	GY	3518961C1

ICON MODULE "A" CONNECTOR
(1931)
(LOCATED ON MODULE BRACKET)
(W/ PROSTAR)

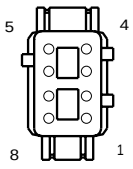

CONNECTOR 3539139C1
BODY LOCK 3539144C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A14HHA	18	RD	3518963C1
2	A11-GEC	16	WH	3518963C1
3	A97S	18	VT	3518963C1
4	A97T	18	VT	3518963C1
5	A97U	18	VT	3518963C1
6	A97V	18	VT	3518963C1
7	A13HA	18	PK	3518963C1
8	A17HB	18	PK	3518963C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 59637L	DATE 06SEPO6

PART NO. AE08055906 SHEET 050

Figure 266 Connector Composites (1927), (1929), (1930), (1931)

https://truckmanualshub.com/

14.54. CONNECTOR COMPOSITES (1932), (1933), (1942/1942F), (1943), (1943M), P. 50A


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


QUALCOM TMCT
(1932)
(LOCATED IN LEFT BACK PANEL(DAYCAB))

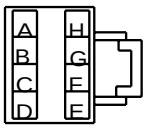

CONNECTOR 2005835C1
BODY LOCK 2006503C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A14EA	18	RD	1661208C1
B	A14EE	18	RD	1661208C1
C	A11-GMC	18	WH	1661208C1
D	A11-GMA	18	WH	1661208C1
E	A13EE	18	PK	1661208C1
F	A3BD(+)	18	DKBL	1661208C1
G	A3BD(-)	18	GY	1661208C1
H	-	-	-	-


MOTIENT MOBILE MAX
DISCRETE I/O
(1933)
(LOCATED IN LEFT BACK PANEL(DAYCAB))

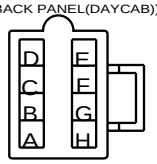

CONNECTOR 2005836C1
BODY LOCK 2006504C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	-	-	-	-
B	A98F	18	LTGN	1661212C1
C	-	-	-	-
D	-	-	-	-
E	-	-	-	-
F	-	-	-	-
G	-	-	-	-
H	-	-	-	-

EATON VORAD RIGHT SIDE DISPLAY
(1942 / *1942F)
(LOCATED IN INSTRUMENT PANEL TO THE RIGHT OF STEERING COLUMN)
(W/ PROSTAR)

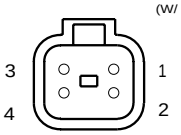


CONNECTOR 3673259C1
BODY LOCK 3503599C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A67V	18	GY	1680206C1
2	A67W	18	GY	1680206C1
3	A67U	18	GY	1680206C1
4	A57NA	18	OR	1680206C1

(* W/ LONESTAR)

EATON VORAD DRIVER
INTERFACE UNIT
(1943)
(LOCATED IN INSTRUMENT PANEL
TO THE RIGHT OF STEERING COLUMN)
(W/ PROSTAR)



CONNECTOR 367333C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2	-	-	-	-
3	-	-	-	-
4	A67E	18	PK	3673333C1
5	A67-GD	18	WH	3673333C1
6	A5HA(-)	18	GN	3673333C1
7	A5HA(+)	18	YL	3673333C1
8	-	-	-	-

EATON VORAD DRIVER INTERFACE UNIT
(1943M)
(LOCATED IN INSTRUMENT PANEL
TO THE RIGHT OF STEERING COLUMN)
(W/ LONESTAR)



CONNECTOR 3673332C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2	-	-	-	-
3	-	-	-	-
4	A67E	18	PK	3673333C1
5	A67-GD	18	WH	3673333C1
6	A5HA(-)	18	GN	3673333C1
7	A5HA(+)	18	YL	3673333C1
8	-	-	-	-

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R

DRAWN 300152
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 50297W
DATE 18OCT07
PART NO. AE08055906
SHEET 50A

Figure 267 Connector Composites (1932), (1933), (1942/1942F), (1943), (1943M)

https://truckmanualshub.com/

14.55. CONNECTOR COMPOSITES (1953), (1960), P. 51


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


JAKE BRAKE FOOT PEDAL
(1953)
(LOCATED IN INSTRUMENT PANEL - LEFT SIDE)
(W/ LONESTAR)



CONNECTOR 0872291R1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A9FS	18	GY	0879630R1
B	A24B	18	GY	0879630R1

MODULE BRACKET
"B" CONNECTOR
(1960)
(LOCATED ON MODULE BRACKET)

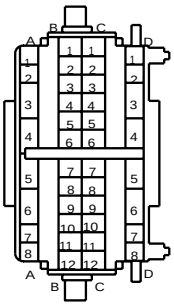

CONNECTOR 3553649C1
BODY LOCK 3553652C1
3553654C1
3553650C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A67E	16	GY	3544884C1
A2	A67D	16	GY	3544884C1
A3	A67A	16	GY	3544876C1
A4	A67-G	16	WH	3544876C1
A5	A57NA	18	OR	3544876C1
A5#	A57NA	16	OR	3544876C1
A6	A98ZA	18	BK	3544876C1
A7	A67C	16	GY	3544884C1
A8	A67B	16	GY	3544884C1
B1	A3BF(+)	20	DKBL	3544883C1
B2	A3BF(-)	20	GY	3544883C1
B3	A67KA	16	GY	3544884C1
B4	A67J	16	GY	3544884C1
B5	A67HA	16	GY	3544884C1
B6	A67L	16	GY	3544884C1
B7	A67M	18	GY	3544884C1
B8	A67N	18	GY	3544884C1
B9	A67P	18	GY	3544884C1
B10	A67R	18	GY	3544884C1
B11	A5HA(+)	18	YL	3544884C1
B12	A5HA(-)	18	GN	3544884C1
C1	A3BN(+)	18	DKBL	3544884C1
C2	A3BN(-)	18	GY	3544884C1
C3	A98NS	18	BK	3544884C1
C4	AOUT2	18	TN	3544884C1
C5	A5VREF	18	TN	3544884C1
C6	APPU	18	TN	3544884C1
C7	AANG1	18	TN	3544884C1
C8	AANG2	18	TN	3544884C1
C9	AANG3	18	TN	3544884C1
C10	AANG4	18	TN	3544884C1
C11	AANG5	18	TN	3544884C1
C12	AANG-G	18	GY	3544884C1
D1	A98Z	18	BK	3544884C1
D2	A98NL	18	BK	3544884C1
D3	A14NN	18	RD	3544876C1
D4	A13N	18	PK	3544876C1
D5	A11-GNA	18	WH	3544876C1
D6	A14NP	16	RD	3544876C1
D7	A5K(+)	18	YL	3544884C1
D8	A5K(-)	18	GN	3544884C1

W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06
						PART NO. AE08055906
						SHEET 051

Figure 268 Connector Composites (1953), (1960)

https://truckmanualshub.com/

14.56. CONNECTOR COMPOSITES (1960), P. 52


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

IP HARNESS INTERCONNECT
(1960)
(LOCATED ON MODULE BRACKET)

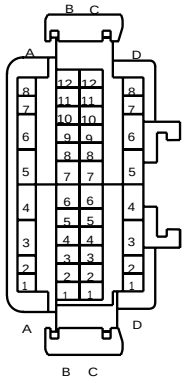

CONNECTOR 3612512C1
BODY LOCK 3553652C1
3553654C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	A67E	16	GY	3544886C1
A2	A67D	16	GY	3544886C1
A3	A67A	16	GY	3544880C1
A4	A67-G	18	WH	3544880C1
A5	A67F	18	GY	3544880C1
A6	-	-	-	-
A7	A67C	18	GY	3544886C1
A8	A67B	16	GY	3544886C1
B1	A3BF(+)	18	DKBL	3544886C1
B2	A3BF(-)	18	GY	3544886C1
B3	A67KA	16	GY	3544886C1
B4	A67J	16	GY	3544886C1
B5	A67HA	16	GY	3544886C1
B6	A67L	18	GY	3544886C1
B7	A67M	18	GY	3544886C1
B8	A67N	18	GY	3544886C1
B9	A67P	18	GY	3544886C1
B10	A67R	18	GY	3544886C1
B11	A5HA(+)	18	YL	3544886C1
B12	A5HA(-)	18	GN	3544886C1
C1*	A3BN(+)	18	DKBL	3544886C1
C1#	A3BN(+)	20	DKBL	3544885C1
C2*	A3BN(-)	18	GY	3544886C1
C2#	A3BN(-)	20	GY	3544885C1
C3*	A98NS	18	BK	3544886C1
C3#	A91AC	20	BK	3544885C1
C4	-	-	-	-
C5	-	-	-	-
C6	-	-	-	-
C7	-	-	-	-
C8	-	-	-	-
C9	-	-	-	-
C10	-	-	-	-
C11	-	-	-	-
C12	-	-	-	-
D1*	A98Z	18	BK	3544886C1
D1#	A91AA	20	BK	3544885C1
D2*	A98NL	18	A14NN	3544886C1
D2#	A91AB	20	GY	3544885C1
D3*	A14NN	18	RD	3544880C1
D3#	A14NN	20	RD	3544879C1
D4	A13N	18	PK	3544880C1
D5*	A11-GNA	18	WH	3544880C1
D5#	A98NL	18	BK	3544880C1
D6	-	-	-	-
D7	A5K(+)	18	YL	3544886C1
D8	A5K(-)	18	GN	3544886C1

* W/ TELEMATICS GEN I
W/ AWARE II

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 052

Figure 269 Connector Composites (1960)

https://truckmanualshub.com/

14.57. CONNECTOR COMPOSITES (1962), P. 53


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND
IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE
INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

MODULE BRACKET "A" CONNECTOR
(1962)
(LOCATED ON MODULE BRACKET)

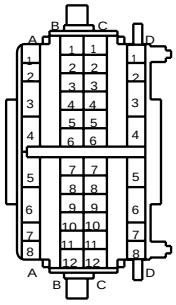

CONNECTOR 3612515C1
BODY LOCK 3553650C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	-	-	-	-
A2	-	-	-	-
A3	A22-G	18	WH	3544876C1
A4	A22E	18	TN	3544876C1
A5	A22D	18	TN	3544876C1
A6	-	-	-	-
A7	-	-	-	-
A8	-	-	-	-
B1	A22C	18	TN	3544884C1
B2	A22B	18	TN	3544884C1
B3	A22VC	18	TN	3544884C1
B4	A22VB	18	TN	3544884C1
B5	A22ZB	18	TN	3544884C1
B6	A22ZC	18	TN	3544884C1
B7	A5P(+)	18	YL	3544884C1
B8	A5P(-)	18	GN	3544884C1
B9	-	-	-	-
B10	A22A	18	TN	3544884C1
B11	A22VA	18	TN	3544884C1
B12	A22ZA	18	TN	3544884C1
C1	A97N	16	PL	3544884C1
C2	A17HC	18	PK	3544884C1
C3	A97X	18	PL	3544884C1
C4	A17HD	16	PK	3544884C1
C5	A17HF	18	PK	3544884C1
C6	A3H(+)	18	DKBL	3544884C1
C7	A3H(-)	18	GY	3544884C1
C8	-	-	-	-
C9	-	-	-	-
C10	-	-	-	-
C11#	A97P	18	PL	3544884C1
C12#	A9P	18	GY	3544884C1
D1	A14HHA	18	RD	3544884C1
D2	A97T	18	PL	3544884C1
D3	A97S	16	PL	3544876C1
D4	A13HA	18	PK	3544876C1
D5	A11-GEC	16	WH	3544876C1
D6	A17HB	18	PK	3544876C1
D7	A97V	18	PL	3544884C1
D8	A97U	18	PL	3544884C1

W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 053

Figure 270 Connector Composites (1962)

https://truckmanualshub.com/

14.58. CONNECTOR COMPOSITES (1962), P. 54


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

IP HARNESS INTERCONNECT
(1962)
(LOCATED ON MODULE BRACKET)

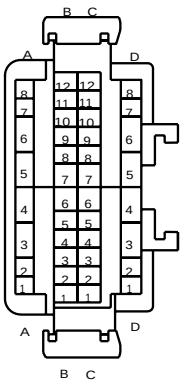

CONNECTOR 3612511C1
BODY LOCK 3553652C1
3553654C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	-	-	-	-
A2	-	-	-	-
A3	A22-G	18	WH	3544880C1
A4	A22E	18	TN	3544880C1
A5	A22D	18	TN	3544880C1
A6	-	-	-	-
A7	-	-	-	-
A8	-	-	-	-
B1	A22C	18	TN	3544886C1
B2	A22B	18	TN	3544886C1
B3	A22VC	18	TN	3544886C1
B4	A22VB	18	TN	3544886C1
B5	A22ZB	18	TN	3544886C1
B6	A22ZC	18	TN	3544886C1
B7	A5 (+)	18	GN	3544886C1
B8	A5 (-)	18	YL	3544886C1
B9	-	-	-	-
B10	A22A	18	TN	3544886C1
B11	A22VA	18	TN	3544886C1
B12	A22ZA	18	TN	3544886C1
C1	A97N	16	VT	3544886C1
C2	A17HC	18	PK	3544886C1
C3	A97X	18	VT	3544886C1
C4	A17HD	16	PK	3544886C1
C5	A17HF	18	PK	3544886C1
C6	A3H (+)	18	DKBL	3544886C1
C7	A3H (-)	18	GY	3544886C1
C8	-	-	-	-
C9	-	-	-	-
C10	-	-	-	-
C11	-	-	-	-
C12	-	-	-	-
D1	A14HHA	18	RD	3544886C1
D2	A97T	18	VT	3544886C1
D3	A97S	18	VT	3544880C1
D4	A13HA	18	PK	3544880C1
D5	A11-GEC	16	WH	3544880C1
D6	A17HB	18	PK	3544880C1
D7	A97V	18	VT	3544886C1
D8	A97U	18	VT	3544886C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 054

Figure 271 Connector Composites (1962)

https://truckmanualshub.com/

14.59. CONNECTOR COMPOSITES (1963), (1964), P. 55


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


TELEMATICS CONNECTOR 1
(1963)
(LOCATED ON MODULE BRACKET)
(W/ PROSTAR)

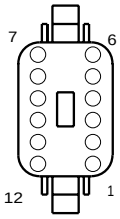

CONNECTOR 3601924C1
BODY LOCK 1689428C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A14NN	18	RD	1680205C1
2	PLUG	-	-	0453133C1
3	A13N	18	PK	1680205C1
4	PLUG	-	-	0453133C1
5	A98NL	18	BK	1680205C1
6	PLUG	-	-	0453133C1
7	PLUG	-	-	0453133C1
8	PLUG	-	-	0453133C1
9	A5K(+)	18	YL	1680205C1
10	A5K(-)	18	GN	1680205C1
11	A98Z	18	BK	1680205C1
12	A11-GNA	18	WH	1680205C1

TELEMATICS CONNECTOR 2
(1964)
(LOCATED ON MODULE BRACKET)
(W/ PROSTAR)

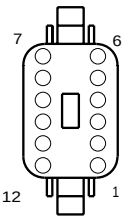

CONNECTOR 1689427C1
BODY LOCK 1689428C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A3BN(+)	18	DKBL	1680205C1
2	A3BN(-)	18	GY	1680205C1
3	PLUG	-	-	0453133C1
4	PLUG	-	-	0453133C1
5	PLUG	-	-	0453133C1
6	A98NS	18	BK	1680205C1
7	PLUG	-	-	0453133C1
8	PLUG	-	-	0453133C1
9	PLUG	-	-	0453133C1
10	PLUG	-	-	0453133C1
11	PLUG	-	-	0453133C1
12	PLUG	-	-	0453133C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 59637L	DATE 06SEP06

PART NO. AE08055906 SHEET 055

Figure 272 Connector Composites (1963), (1964)

https://truckmanualshub.com/

14.60. CONNECTOR COMPOSITES (1970), (1973), P. 56


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

SATELLITE COMMUNICATIONS
(1970)
(LOCATED ON RIGHT SIDE BACK OF DOOR)

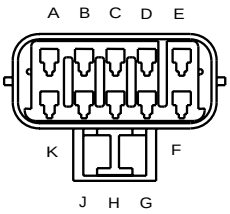


CONNECTOR 3538635C1
BODY LOCK 3538636C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A*	A14SD	18	RD	1661875C1	3568570C1
A*	A14EA	16	RD	1661875C1	1661872C1
A*	A14ED	18	RD	1661875C1	3568570C1
B*	A13SD	18	PK	1661875C1	3568570C1
B*	A13EE	18	PK	1661875C1	3568570C1
C	A3BD(-)	18	GY	1661875C1	3568570C1
D	A3BD(+)	18	DK BL	1661875C1	3568570C1
E*	A14EBA	18	RD	1661875C1	3568570C1
E*	A98F	18	TN	1661875C1	3568570C1
F	A98J	18	BK	1661875C1	3568570C1
F#	A11-GMB	18	WH	1661875C1	3568570C1
G	PLUG	-	-	2025431C1	2025431C1
H	PLUG	-	-	2025431C1	2025431C1
J	A70E	18	OR	1661875C1	3568570C1
K	A50S	18	YL	1661875C1	3568570C1

* MUTUALLY EXCLUSIVE

W/ LONESTAR

AWARE II
(1973)
(W/ PROSTAR)

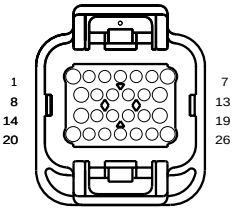

CONNECTOR 3672049C1

CAV	CIRCUIT	GA	COLOR	TERMINAL
1	A14NN	20	RD	3672049C1
2	PLUG	-	-	3674969C1
3	HSD1	20	GY	3672049C1
4	PLUG	-	-	3674969C1
5	A91AB	20	GY	3672049C1
6	HSD4	20	GY	3672049C1
7	HSD5	20	GY	3672049C1
8	A13N	18	PK	3672054C1
9	A5K(+)	20	YL	3672049C1
10	A5K(-)	20	GN	3672049C1
11	ANA8	20	LTGN	3672049C1
12	A91AA	20	BK	3672049C1
13	HSD6	18	GY	3672054C1
14	A98NM	18	BK	3672054C1
15	ANA5	20	GY	3672049C1
16	A3BN(+)	20	DKBL	3672049C1
17	PLUG	-	-	3674969C1
18	ANA7	20	GY	3672049C1
19	HSD7	18	GY	3672054C1
20	A98NN	18	BK	3672054C1
21	PLUG	-	-	3674969C1
22	A91AC	20	BK	3672049C1
23	A3BN(-)	20	GY	3672049C1
24	PLUG	-	-	3674969C1
25	5VREF1	20	LTGN	3672049C1
26	HSD8	20	GY	3672049C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 07SEP06

PART NO. AE08055906 SHEET 056

Figure 273 Connector Composites (1970), (1973)

https://truckmanualshub.com/

14.61. CONNECTOR COMPOSITES (1974), (1975), P. 56A


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


AWARE II
(1974)
(W/ PROSTAR)

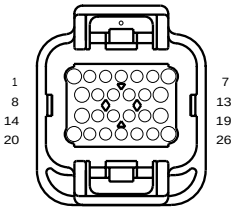

CONNECTOR 3672022C1

CAV	CIRCUIT	GA	COLOR	TERMINAL
1	PLUG	-	-	3674969C1
2	PLUG	-	-	3674969C1
3	PLUG	-	-	3674969C1
4	PLUG	-	-	3674969C1
5	PLUG	-	-	3674969C1
6	PLUG	-	-	3674969C1
7	PLUG	-	-	3674969C1
8	PLUG	-	-	3674969C1
9	PLUG	-	-	3674969C1
10	PLUG	-	-	3674969C1
11	PLUG	-	-	3674969C1
12	PLUG	-	-	3674969C1
13	PLUG	-	-	3674969C1
14	PLUG	-	-	3674969C1
15	PLUG	-	-	3674969C1
16	PLUG	-	-	3674969C1
17	PLUG	-	-	3674969C1
18	PLUG	-	-	3674969C1
19	PLUG	-	-	3674969C1
20	PLUG	-	-	3674969C1
21	PLUG	-	-	3674969C1
22	PLUG	-	-	3674969C1
23	PLUG	-	-	3674969C1
24	PLUG	-	-	3674969C1
25	PLUG	-	-	3674969C1
26	PLUG	-	-	3674969C1

AWARE II
(1975)
(W/ PROSTAR)

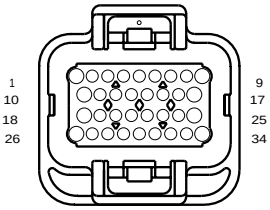

CONNECTOR 3672024C1

CAV	CIRCUIT	GA	COLOR	TERMINAL
1	5VREF5	20	LTGN	3672049C1
2	PLUG	-	-	3674969C1
3	PLUG	-	-	3674969C1
4	PLUG	-	-	3674969C1
5	ANA4	20	LTGN	3672049C1
6	ANA9	20	LTGN	3672049C1
7	ANA10	20	LTGN	3672049C1
8	ANA11	20	LTGN	3672049C1
9	PLUG	-	-	3674969C1
10	5VREF4	18	LTGN	3672054C1
11	5VREF6	20	LTGN	3672049C1
12	5VREF7	20	LTGN	3672049C1
13	5VREF8	20	LTGN	3672049C1
14	PLUG	-	-	3674969C1
15	PLUG	-	-	3674969C1
16	PLUG	-	-	3674969C1
17	GDREF4	18	GY	3672054C1
18	5VREF3	18	LTGN	3672054C1
19	GDREF8	20	GY	3672049C1
20	GDREF6	20	GY	3672049C1
21	GDREF5	20	GY	3672049C1
22	PLUG	-	-	3674969C1
23	PLUG	-	-	3674969C1
24	PLUG	-	-	3674969C1
25	PLUG	-	-	3674969C1
26	5VREF2	18	LTGN	3672054C1
27	GDREF1	20	GY	3672049C1
28	GDREF7	20	GY	3672049C1
29	GEREF2	20	GY	3672049C1
30	GEREF3	20	GY	3672049C1
31	PLUG	-	-	3674969C1
32	PLUG	-	-	3674969C1
33	PLUG	-	-	3674969C1
34	PLUG	-	-	3674969C1


CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	300152	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 50297W	DATE 18OCT07

PART NO. AE08055906 SHEET 56A

Figure 274 Connector Composites (1974), (1975)

https://truckmanualshub.com/

14.62. CONNECTOR COMPOSITES (2000), P. 56B

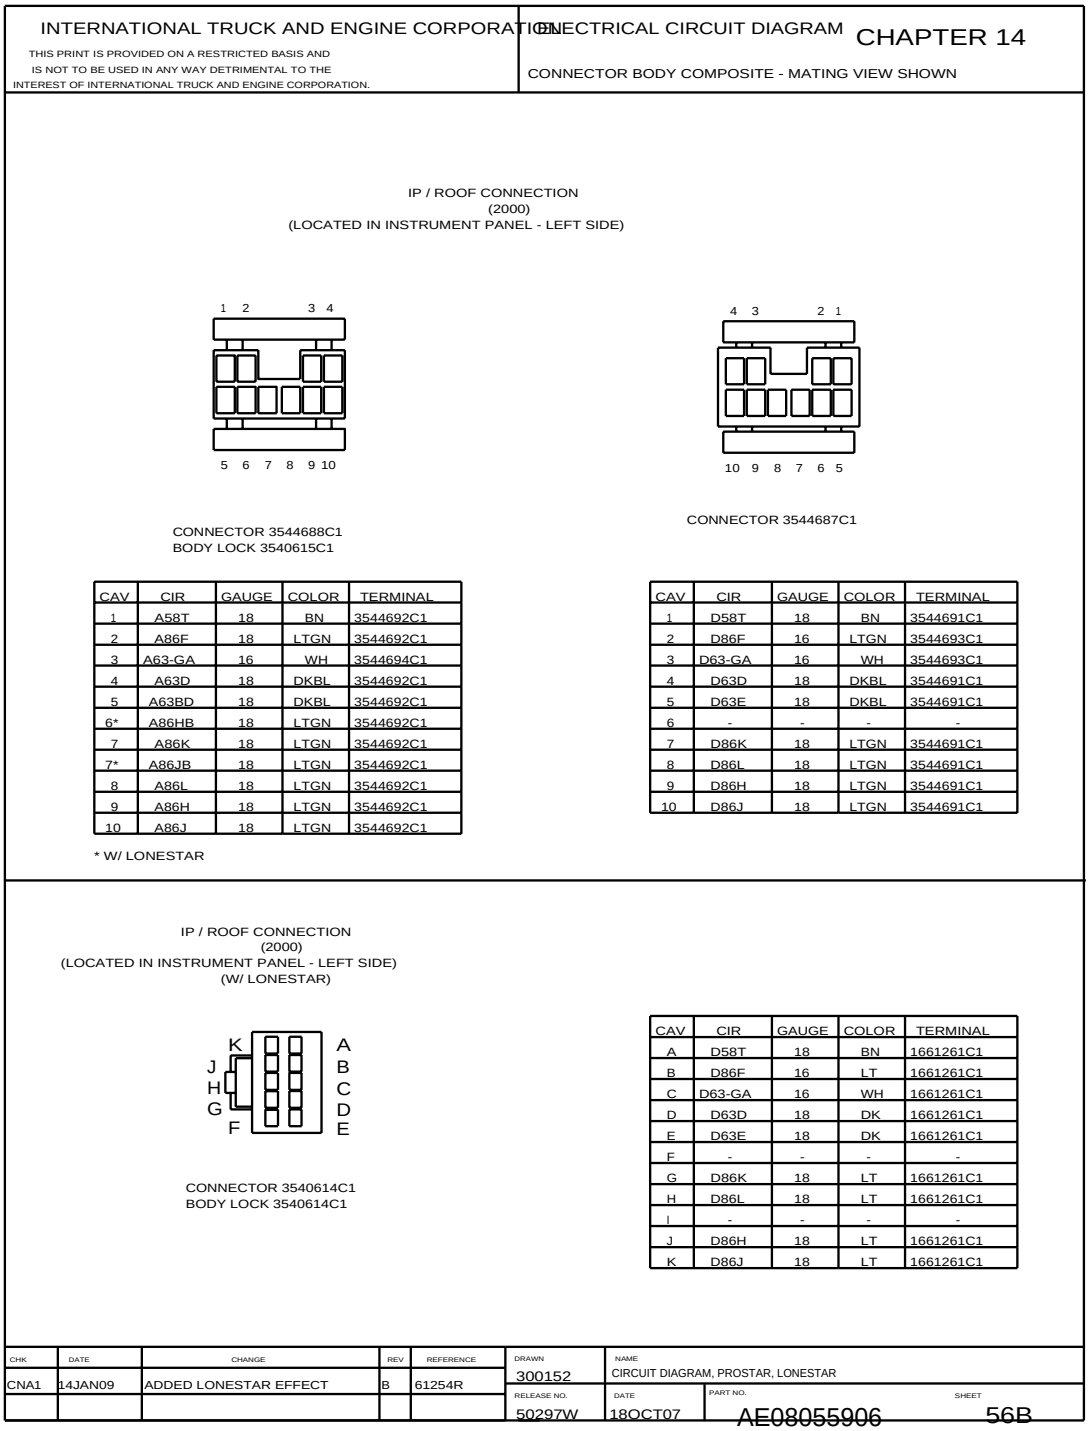

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A58T	18	BN	3544692C1
2	A86F	18	LTGN	3544692C1
3	A63-GA	16	WH	3544694C1
4	A63D	18	DKBL	3544692C1
5	A63BD	18	DKBL	3544692C1
6*	A86HB	18	LTGN	3544692C1
7	A86K	18	LTGN	3544692C1
7*	A86JB	18	LTGN	3544692C1
8	A86L	18	LTGN	3544692C1
9	A86H	18	LTGN	3544692C1
10	A86J	18	LTGN	3544692C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	D58T	18	BN	3544691C1
2	D86F	16	LTGN	3544693C1
3	D63-GA	16	WH	3544693C1
4	D63D	18	DKBL	3544691C1
5	D63E	18	DKBL	3544691C1
6	-	-	-	-
7	D86K	18	LTGN	3544691C1
8	D86L	18	LTGN	3544691C1
9	D86H	18	LTGN	3544691C1
10	D86J	18	LTGN	3544691C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	D58T	18	BN	1661261C1
B	D86F	16	LT	1661261C1
C	D63-GA	16	WH	1661261C1
D	D63D	18	DK	1661261C1
E	D63E	18	DK	1661261C1
F	-	-	-	-
G	D86K	18	LT	1661261C1
H	D86L	18	LT	1661261C1
I	-	-	-	-
J	D86H	18	LT	1661261C1
K	D86J	18	LT	1661261C1

Figure 275 Connector Composites (2000)

https://truckmanualshub.com/

14.63. CONNECTOR COMPOSITES (2002M), (2003M), (2004M), (2005M), (2006M), (2007F), P. 57

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

LEFT CLEARANCE
(2002M)
(LOCATED IN FRONT ROOF)
(W/ PROSTAR)



CONNECTOR 1661259C1
BODY LOCK 1661263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	D58Z	18	BN	1661261C1
B	D58-GD	18	WH	1661261C1

LEFT MARKER
(2003M)
(LOCATED IN FRONT ROOF)
(W/ PROSTAR)



CONNECTOR 1661259C1
BODY LOCK 1661263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	D58M	18	BN	1661261C1
B	D58-GE	18	WH	1661261C1

MID MARKER
(2004M)
(LOCATED IN FRONT ROOF)
(W/ PROSTAR)



CONNECTOR 1661259C1
BODY LOCK 1661263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	D58N	18	BN	1661261C1
B	D58-GF	18	WH	1661261C1

RIGHT MARKER
(2005M)
(LOCATED IN FRONT ROOF)
(W/ PROSTAR)



CONNECTOR 1661259C1
BODY LOCK 1661263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	D58P	18	BN	1661261C1
B	D58-GH	18	WH	1661261C1

RIGHT CLEARANCE
(2006M)
(LOCATED IN FRONT ROOF)
(W/ PROSTAR)



CONNECTOR 1661259C1
BODY LOCK 1661263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	D58R	18	BN	1661261C1
B	D58-GJ	18	WH	1661261C1

SUNSHADE
(2007F)
(LOCATED AT SUNSHADE)
(W/ LONESTAR)



CONNECTOR 1661260C1
BODY LOCK 1661264C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	D58T	18	BN	1661262C1
B	D58-GL	18	WH	1661262C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	20JAN09	ADDED LONESTAR EFFECT	A	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 07SEP06
PART NO. AE08055906
SHEET 057

Figure 276 Connector Composites (2002M), (2003M), (2004M), (2005M), (2006M), (2007F)

https://truckmanualshub.com/

14.64. CONNECTOR COMPOSITES (2100), (2101), (2102), (2103), P. 58

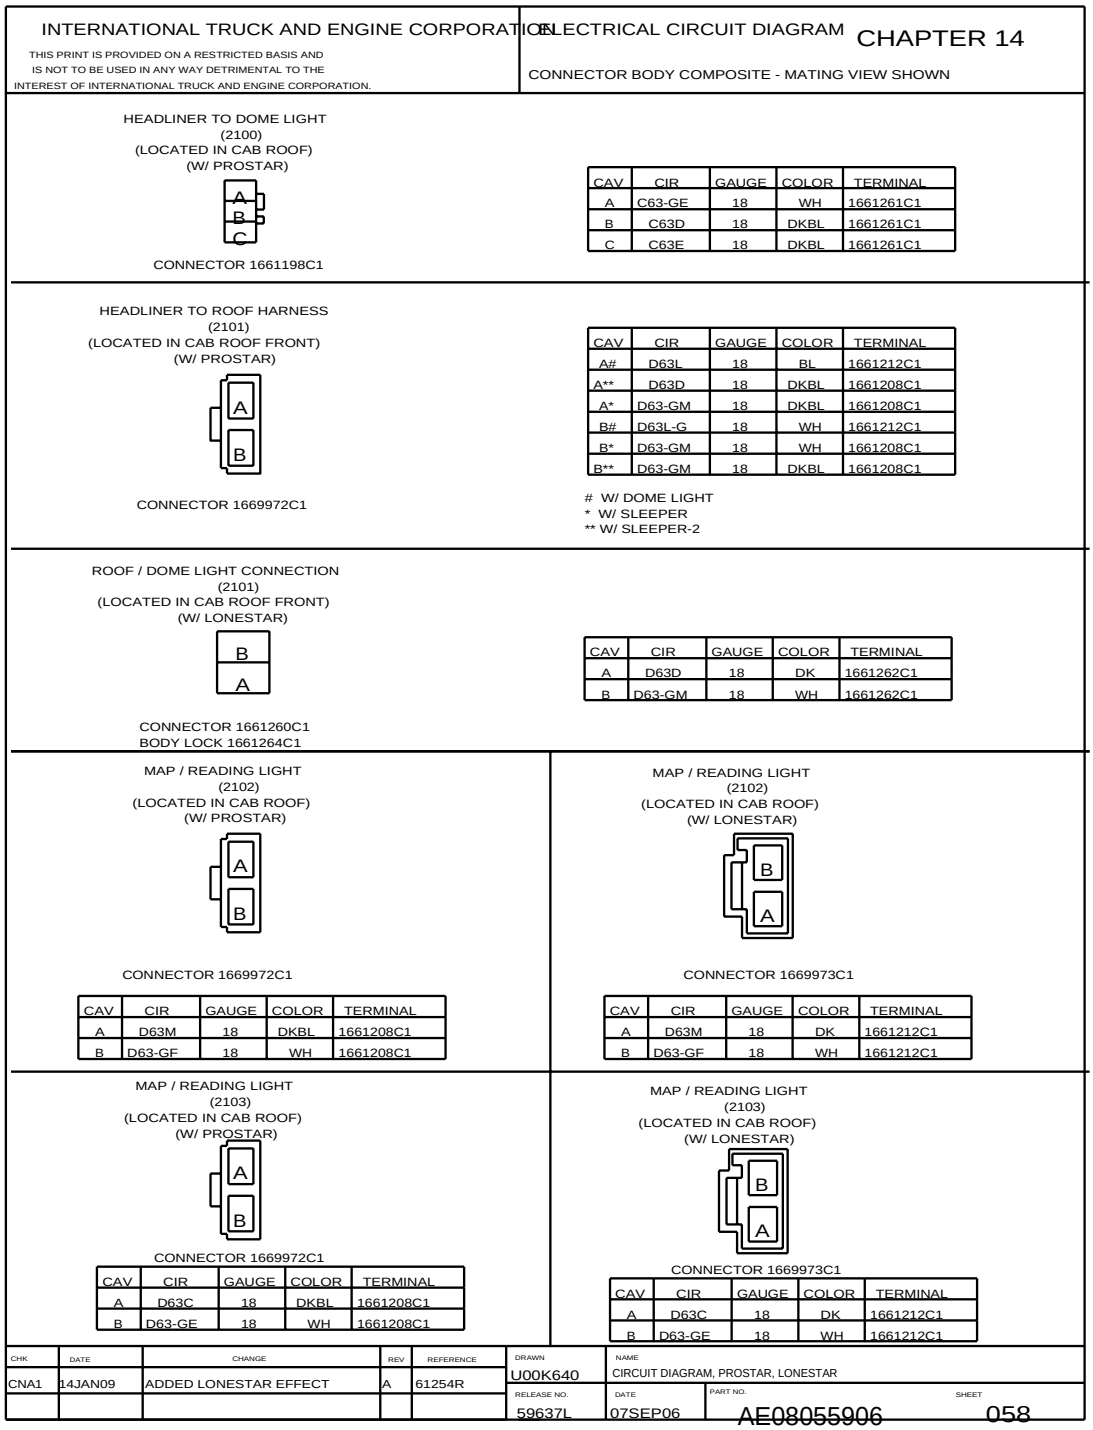


Figure 277 Connector Composites (2100), (2101), (2102), (2103)

https://truckmanualshub.com/

14.65. CONNECTOR COMPOSITES (2200), (2201), (2300), P. 59

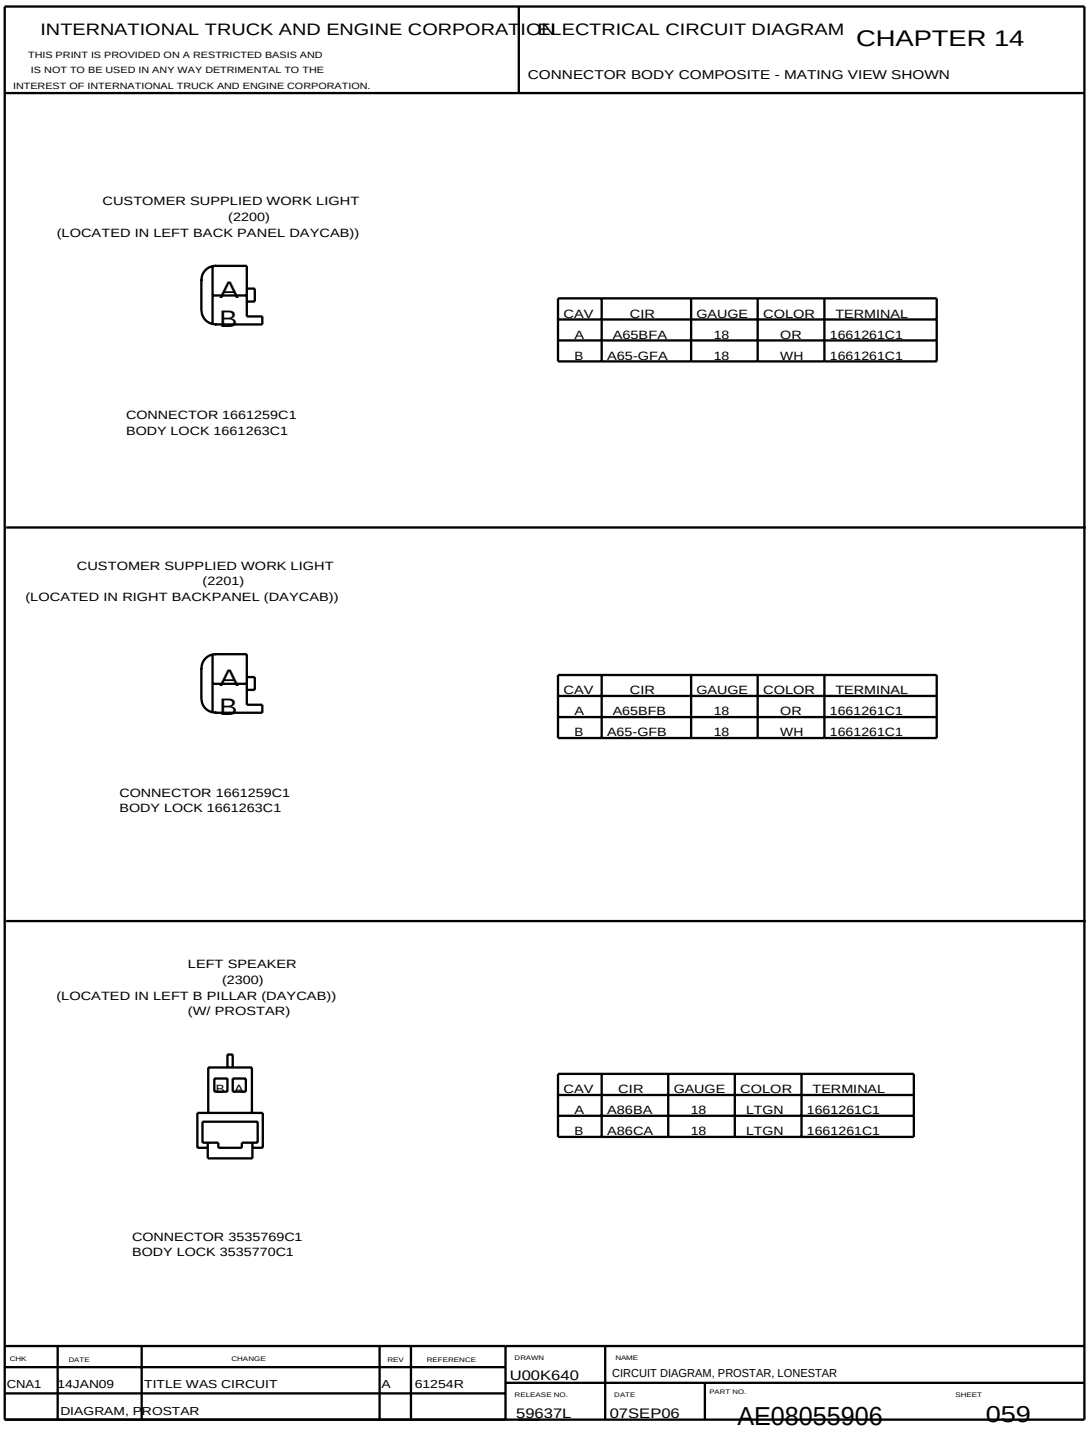


Figure 278 Connector Composites (2200), (2201), (2300)

https://truckmanualshub.com/

14.66. CONNECTOR COMPOSITES (2301), (2302), (2303F/2303M), (2304), (2312), P. 60

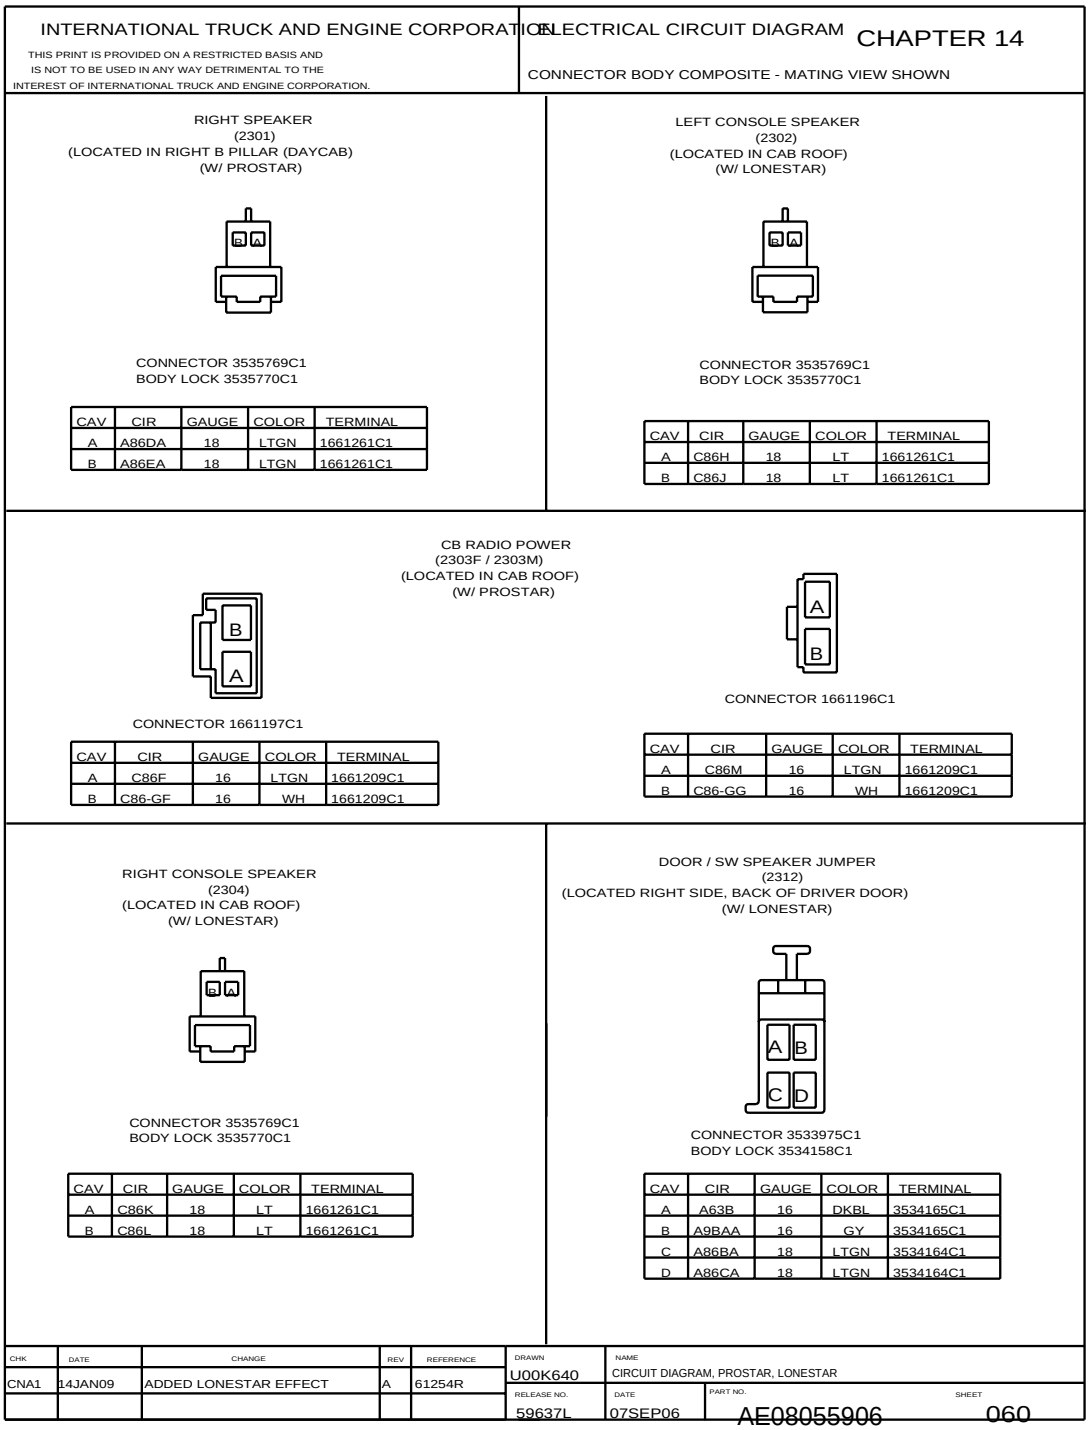


Figure 279 Connector Composites (2301), (2302), (2303F/2303M), (2304), (2312)

https://truckmanualshub.com/

14.67. CONNECTOR COMPOSITES (2313), (2500), P. 61

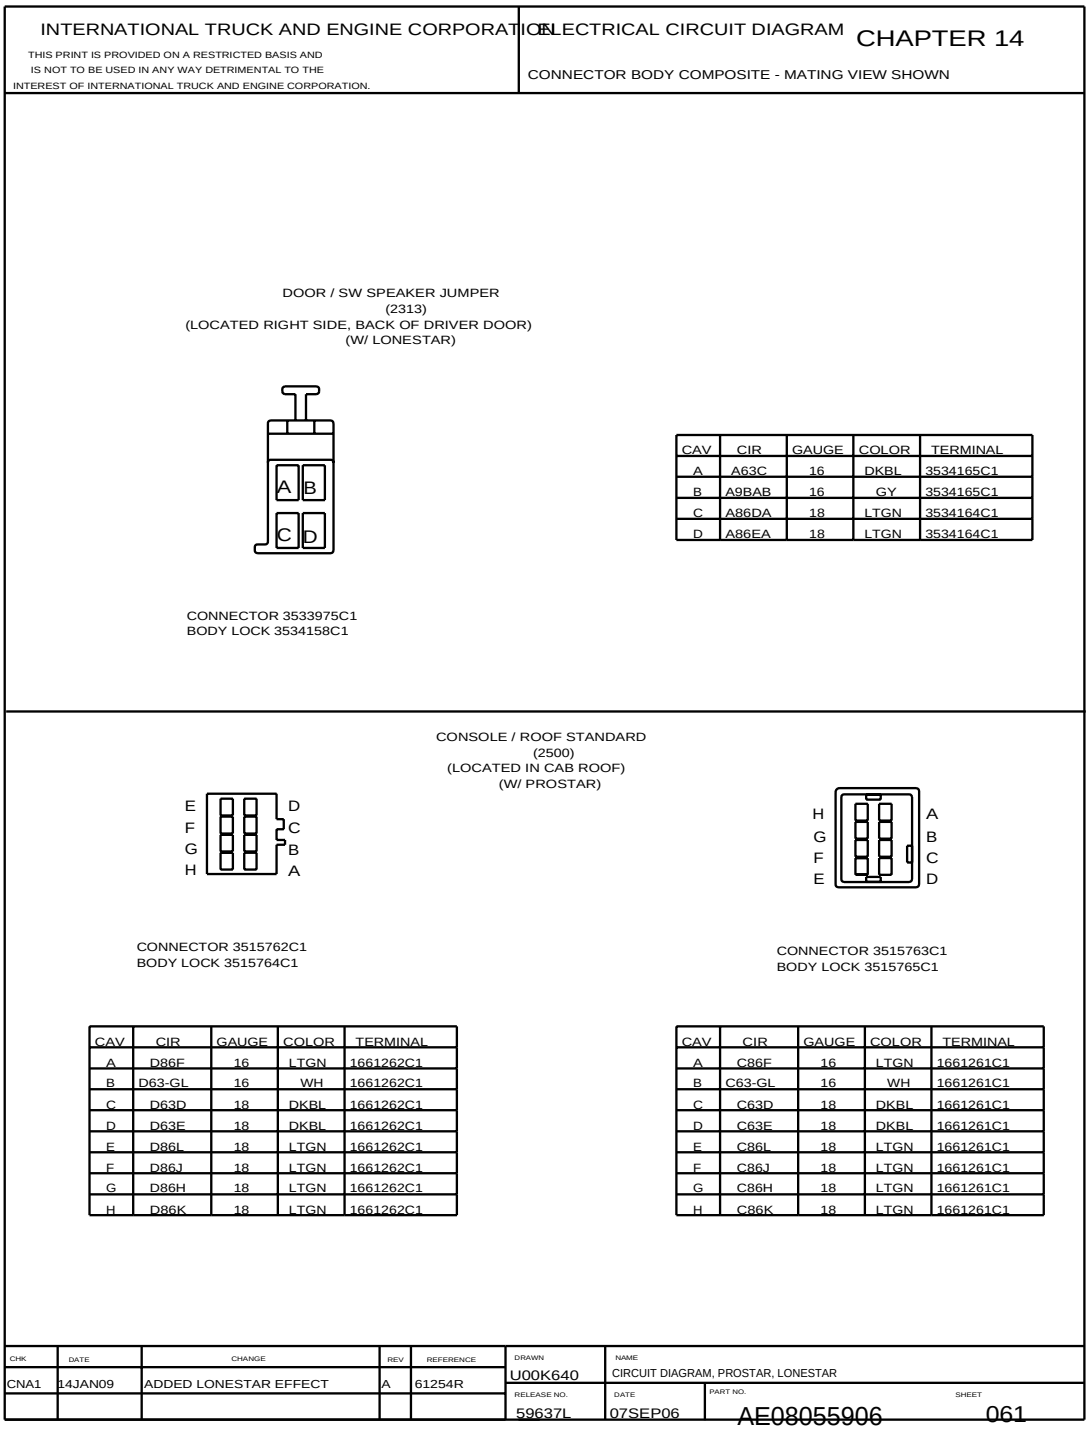


Figure 280 Connector Composites (2313), (2500)

https://truckmanualshub.com/

14.68. CONNECTOR COMPOSITES (3000), (3003/3003M), (3100/3100M), P. 62


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


DRIVER DOOR CONNECTOR
(3000)
(LOCATED IN INSTRUMENT PANEL BELOW FUSE PANEL COVER BY DRIVER DOOR)



CONNECTOR 3540612C1
BODY LOCK 3540614C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A78D	18	LTGN	1661261C1
B	A78E	18	LTGN	1661261C1
C	A78F	18	LTGN	1661261C1
D	A78A	16	LTGN	1661261C1
E	A62BD	18	DKBL	1661261C1
F	A58DA	18	BN	1661261C1
G	A78V	18	LTGN	1661261C1
H	A78-GA	16	WH	1661261C1
J	A56D	18	OR	1661261C1
K	-	-	-	-

PASSENGER DOOR HARNESS
(3003 / 3003M)
(LOCATED IN INSTRUMENT PANEL BELOW FUSE PANEL COVER BY PASSENGER DOOR)



CONNECTOR 3540612C1
BODY LOCK 3540614C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A78D	18	LTGN	1661261C1
B	A78E	18	LTGN	1661261C1
C	A78F	18	LTGN	1661261C1
D	A78B	16	LTGN	1661261C1
E	-	-	-	-
F	A58DB	18	BN	1661261C1
G	-	-	-	-
H	A78-GB	16	WH	1661261C1
J	A57D	18	OR	1661261C1
K	-	-	-	-

WINDOW MOTOR
(3100 / 3100M)
(LOCATED IN DOOR (DRIVER AND PASSENGER))



CONNECTOR 3534424C1
BODY LOCK 3534425C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	E83A	14	LTGN	3535486C1	0589391C1
B	E83E	14	LTGN	3535486C1	0589391C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 07SEP06

PART NO. AE08055906 SHEET 062

Figure 281 Connector Composites (3000), (3003/3003M), (3100/3100M)

https://truckmanualshub.com/

14.69. CONNECTOR COMPOSITES (3200/3200F), (3201M), (3202M), (3203), (3203M), P. 63


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14


CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

DOOR / IP DOOR POD
(3200 / 3200F)
(LOCATED IN INSTRUMENT PANEL BY DRIVER DOOR)



CONNECTOR 1661201C1


CAV	CIR	GAUGE	COLOR	TERMINAL
A	E3W(+)	18	DKBL	1661212C1
B	E3X(-)	18	GY	1661212C1
C	E81B	12	LTGN	3534167C1
D	E81-GA	12	WH	3534167C1
E	-	-	-	-
F	-	-	-	-

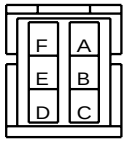

CONNECTOR 1661200C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A3AB(+)	20	DKBL	1661208C1
B	A3AB(-)	20	GY	1661208C1
C	A81B	12	LTGN	3566715C1
D	A81-GA	12	WH	3566715C1
E	-	-	-	-
F	-	-	-	-


DOOR POD LOAD
(3201M)
(LOCATED IN DOOR (DRIVER AND PASSENGER))



CONNECTOR 3535482C1
BODY LOCK 3535483C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	E83E	14	LTGN	2033816C1
B	E83A	14	LTGN	2033816C1
C	E81A	14	LTGN	2033816C1
D	E81E	14	LTGN	2033816C1


DRIVER OR PASSENGER
DOOR POD SIGNAL
(3202M)
(LOCATED IN DOOR (DRIVER AND PASSENGER))
(W/ PROSTAR)

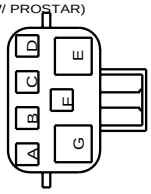

CONNECTOR 3540565C1
BODY LOCK 3540617C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	PLUG	-	-	2025431C1	-
B	PLUG	-	-	2025431C1	-
C	E3X(-)	18	GY	1661875C1	1661872C1
D	E3W(+)	18	DKBL	1661875C1	1661872C1
E	E81-GA	12	WH	2031531C1	2025428C1
F	PLUG	-	-	2025431C1	-
G	E81B	12	LTGN	2031531C1	2025428C1


DOOR LOCK
(3203)
(LOCATED IN DOOR (DRIVER AND PASSENGER))



CONNECTOR 1671608C1
BODY LOCK 1671608C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	E81A	14	LTGN	2033816C1	0589391C1
B	E81E	14	LTGN	2033816C1	0589391C1

DOOR LOCK
(3203M)
(LOCATED IN DOOR (DRIVER AND PASSENGER))
(W/ LONESTAR)



CONNECTOR 1671610C1
BODY LOCK 1671608C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	E81A	14	LTGN	2033816C1	0589391C1
B	E81E	14	LTGN	2033816C1	0589391C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 22SEP06

PART NO. AE08055906 SHEET 063

Figure 282 Connector Composites (3200/3200F), (3201M), (3202M), (3203), (3203M)

https://truckmanualshub.com/

14.70. CONNECTOR COMPOSITES (3204/3204M), (3205M/3205F), (3206M), (3300/3300M), (3400), (3410), P. 64

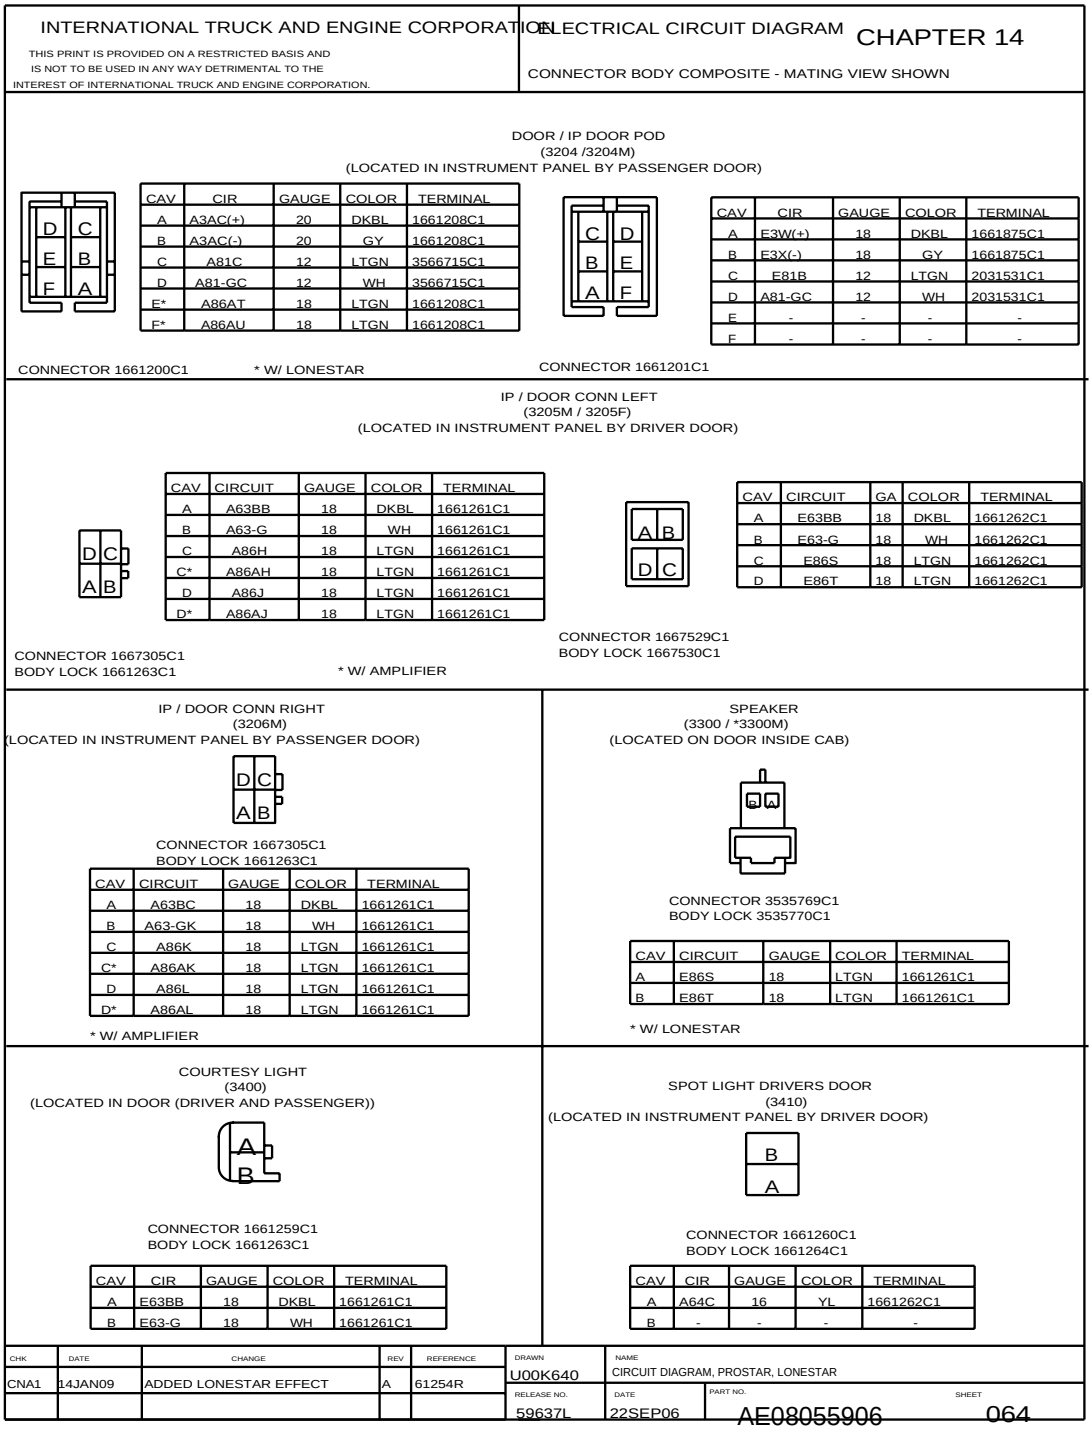


Figure 283 Connector Composites (3204/3204M), (3205M/3205F), (3206M), (3300/3300M), (3400), (3410)

https://truckmanualshub.com/

14.71. CONNECTOR COMPOSITES (4101), (4200), (4201), (4202), (4203), (4204), P. 65


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

ICON ALARM
(4101)
(LOCATED ON DASH PANEL UNDER COWL TRAY)




CONNECTOR 1671610C1
BODY LOCK 1671608C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	A17HC	18	PK	2033819C1	3517771C1
A*	A104AE	18	DK BL	2033819C1	3517771C1
B	A14HHC	18	RD	2033819C1	3517771C1
B*	A104AF	18	DK BL	2033819C1	3517771C1

* W/ REMOTE START / STOP


AC ACCUMULATOR EVAPORATOR
OUTLET THERMISTOR
(4200)
(LOCATED ON DASH PANEL - RIGHT SIDE)

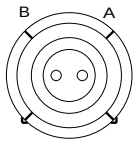

CONNECTOR 3535379C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A77D	20	LTGN	3536590C1
B	A9AB	20	GY	3536590C1


AC ACCUMULATOR EVAPORATOR
INLET THERMISTOR
(4201)
(LOCATED ON DASH PANEL - RIGHT SIDE)

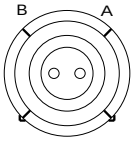

CONNECTOR 3535379C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	A77E	20	LTGN	3536590C1
B	A9AC	20	GY	3536590C1


HVAC RECIRCULATION ACTUATOR
(4202)
(LOCATED UNDER HOOD)
(W/ LONESTAR)

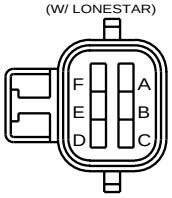

CONNECTOR 2011340C1
BODY LOCK 2011364C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	A74D	18	LTGN	1661875C1	3568570C1
B	PLUG	-	-	2025431C1	-
C	PLUG	-	-	2025431C1	-
D	PLUG	-	-	2025431C1	-
E	PLUG	-	-	2025431C1	-
F	A74E	18	LTGN	1661875C1	3568570C1

PARKED HEAT VALVE 1A
(4203)
(W/ PROSTAR)

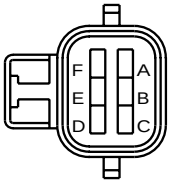

CONNECTOR 2011340C1
BODY LOCK 2011364C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	A74D	18	LTGN	1661875C1	3568570C1
B	PLUG	-	-	2025431C1	-
C	PLUG	-	-	2025431C1	-
D	PLUG	-	-	2025431C1	-
E	PLUG	-	-	2025431C1	-
F	A74E	18	LTGN	1661875C1	3568570C1

PARKED HEAT VALVE 1B
(4204)
(W/ PROSTAR)



CONNECTOR 3590299C1
BODY LOCK 1661874C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	A75TK	18	LTGN	1661875C1	3568570C1
B	A75T-GB	18	LTGN	1661875C1	3568570C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	20JAN09	ADDED LONESTAR EFFECT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 07SEP06

PART NO. AE08055906 SHEET 065

Figure 284 Connector Composites (4101), (4200), (4201), (4202), (4203), (4204)

https://truckmanualshub.com/

14.72. CONNECTOR COMPOSITES (4328), (4500), (4705), (4706), P. 65A

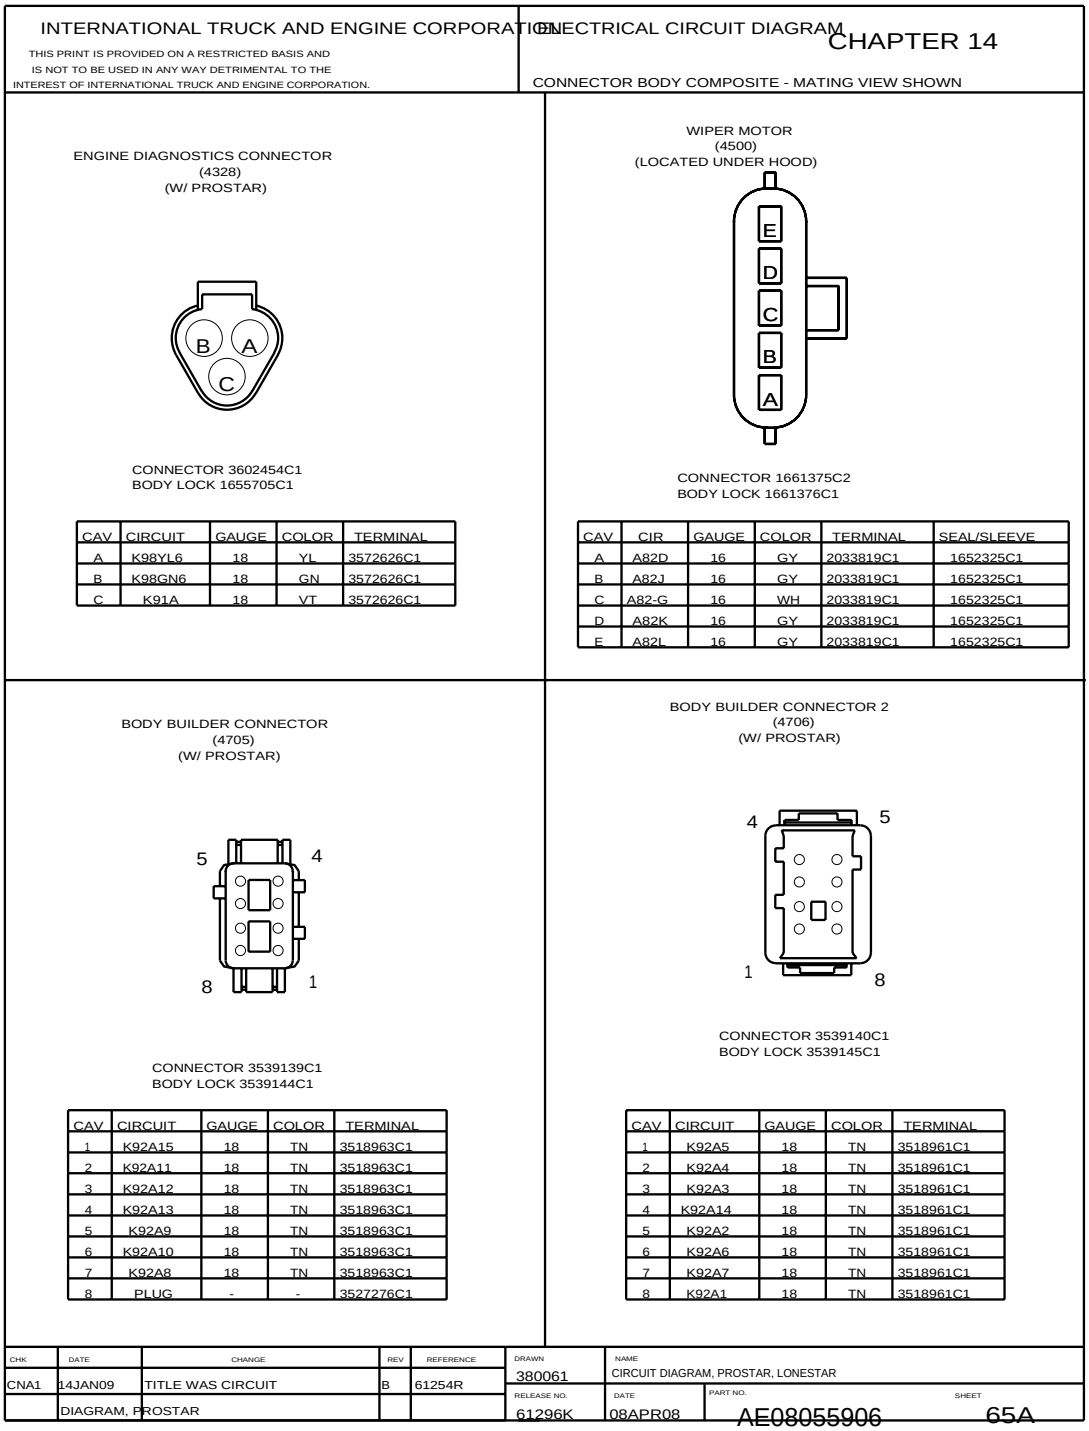


Figure 285 Connector Composites (4328), (4500), (4705), (4706)

https://truckmanualshub.com/

14.73. CONNECTOR COMPOSITES (5000/5000A), P. 66


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

CAB CONNECTOR
IP/SLEEPER CONNECTION
(5000 / ##5000A)
(LOCATED LEFT SIDE,
BACK OF DRIVER DOOR)

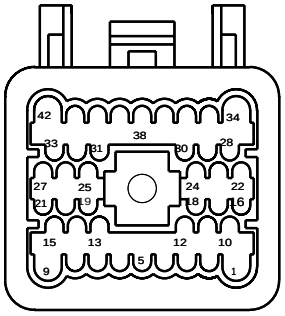

CONNECTOR 3595621C1
BODY LOCK 3598918C1
3598919C1

* W/ ICON
\# W/ REMOTE START STOP
% N/ IDLE HEAT - CAB
& W/ PROSTAR
W/ LONESTAR

CAV	CIR	GAUGE	COLOR	TERMINAL
1	A14VA	10	RD	3574287C1
2##	A97Z	18	PL	2003343C1
3##	A86BB	18	LTGN	2003343C1
4##	A86CB	18	LTGN	2003343C1
5##	A86DB	18	LTGN	2003343C1
6##	A86EB	18	LTGN	2003343C1
7##	A63JB	18	DKBL	2003343C1
8##	A86AA	18	LTGN	2003343C1
9	PLUG	-	-	3508928C91
10##	A86AC	18	LTGN	2003343C1
11##	A86K	18	LTGN	2003343C1
12##	A86L	18	LTGN	2003343C1
13##	A86AK	18	LTGN	2003343C1
14##	A86AL	18	LTGN	2003343C1
15##	A86AH	18	LTGN	2003343C1
16##	A86AJ	18	LTGN	2003343C1
17	A12B	18	LTBL	2003343C1
18	A63AW	18	DKBL	2003343C1
19	A58C	16	BN	3574285C1
19##	A58BLT	14	BN	3574285C1
20##	A65	16 18	OR	3574285C1 2003343C1
21	A65B	16	OR	3574285C1
22	A109S	18	GY	2003343C1
23	A86H	18	LTGN	2003343C1
24	A86J	18	LTGN	2003343C1
25#	A104AC	18	DKBL	2003343C1
26#	A104AB	18	DKBL	2003343C1
27#	A104AA	18	DKBL	2003343C1
28#	A104AH	16	DKBL	3574285C1
29	A97K	18	PL	2003343C1
29##	A104AE	18	DKBL	2003343C1
29%&	A75TJ	18	LTGN	2003343C1
30	A97L	18	PL	2003343C1
30%	A75TL	18	LTGN	2003343C1
30#%	A104AJ	18	DKBL	3574285C1
31	A62A	18	DKBL	2003343C1
32	A63E	18	DKBL	2003343C1
33	A63F	18	DKBL	2003343C1
34	PLUG	-	-	3508928C91
35	A5S(+)	18	YL	2003343C1
36	A5S(-)	18	GN	2003343C1
37	A63C	18	DKBL	2003343C1
38	A14HHB	18	RD	2003343C1
38%	A75TM	18	LTGN	2003343C1
38#	A13FL	16	PK	3574285C1
39	A97T	18	PL	2003343C1
39%	A75TN	18	LTGN	2003343C1
39#	A13F	16	PK	3574285C1
40*	A13HB	18	PK	2003343C1
40#	A104AD	18	DKBL	2003343C1
41#	A9RC	18	GY	2003343C1
42	A14VB	10	RD	3574287C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	D	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 07SEP06

PART NO. AE08055906 SHEET 066

Figure 286 Connector Composites (5000/5000A)

https://truckmanualshub.com/

14.74. CONNECTOR COMPOSITES (5000), P. 67


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

CAB / SLEEPER
SLEEPER CONNECTOR
(5000)
(LOCATED LEFT SIDE, BACK OF DRIVER DOOR)

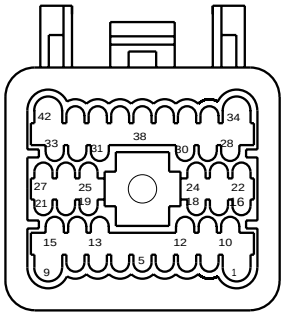

CONNECTOR 3595620C1
BODY LOCK 3598916C1
3598917C1

* W/ IDLE MANAGEMENT
\# N/ ICON
% N/ IDLE HEAT - CAB
** W/ REMOTE START / STOP
& W/ PROSTAR
W/ LONESTAR

CAV	CIR	GAUGE	COLOR	TERMINAL
1	H14VA	10	RD	3549415C1
2	H97Z	18	VT	3549418C1
3	H86BB	18	LTGN	3549418C1
4	H86CB	18	LTGN	3549418C1
5	H86DB	18	LTGN	3549418C1
6	H86ED	18	LTGN	3549418C1
7	H63JB	18	DKBL	3549418C1
8	H86AB	18	LTGN	3549418C1
9	PLUG	-	-	3508928C1
10	H86AC	18	LT GN	3549418C1
11	H86K	18	LT GN	3549418C1
12	H86L	18	LT GN	3549418C1
13	H86AK	18	LT GN	3549418C1
14	H86AL	18	LT GN	3549418C1
15	H86AH	18	LT GN	3549418C1
16	H86AJ	18	LT GN	3549418C1
17*	H12B	18	LTBL	3549418C1
17#	H12B	18	VT	3549418C1
18	H63AW	18	DKBL	3549418C1
19	H58C	16	BK	3549418C1
20	H65	16	OR	3549417C1
21	H65B	16	OR	3549418C1
22	H109S	18	GY	3549418C1
23##	H86H	18	LTGN	3549418C1
24##	H86J	18	LTGN	3549418C1
25**	H104AC	18	DKBL	3549418C1
26**	H104AB	18	DKBL	3549418C1
27**	H104AA	18	DKBL	3549418C1
28**	H104AH	18	DKBL	3549418C1
29	H97K	18	VT	3549418C1
29%&	HH75TJ	18	LTGN	3549418C1
29**	H104AE	18	DKBL	3549418C1
30	H97L	18	VT	3549418C1
30%	HH75TL	18	LTGN	3549418C1
30**	H104AJ	18	DKBL	3549418C1
31	H62A	18	DKBL	3549418C1
32	H63E	18	DKBL	3549418C1
33	H63F	18	DKBL	3549418C1
34	PLUG	-	-	3508928C1
35	H5S(+)	18	YL	3549418C1
36	H5S(-)	18	GN	3549418C1
37	H63C	18	DKBL	3549418C1
38	H14HHB	18	RD	3549418C1
38%	H75TM	18	LTGN	3549418C1
38**	H13FL	16	PK	3549418C1
39	H97T	18	VT	3549418C1
39%	H75TN	18	LTGN	3549418C1
39**	H13F	18	DKBL	3549418C1
40	H13HB	18	PK	3549418C1
40**	H104AD	18	DKBL	3549418C1
41**	H9RC	18	GY	3549418C1
42	H14VB	10	RD	3549415C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 07SEP06

PART NO. AE08055906 SHEET 067

Figure 287 Connector Composites (5000)

https://truckmanualshub.com/

14.75. CONNECTOR COMPOSITES (5001), P. 68


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

SLEEPER FUSE CENTER
(5001)
(LOCATED REAR FACE OF THE LEFT
FRONT BUNK COVER PLATE)

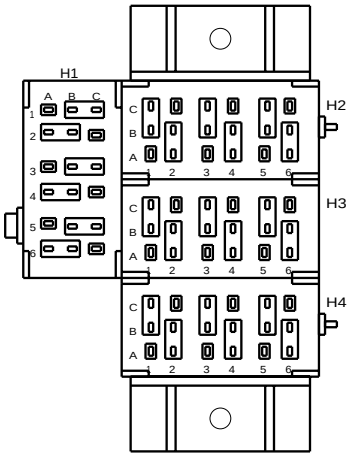

CONNECTOR 3600905C1

* W/ WARDROBE LIGHT
\# W/ UPPER BUNK LIGHT
@ W/ IDLE MANAGEMENT
% W/ REMOTE START / STOP
** CRIMPED TOGETHER
& W/ NO IDLE HVAC
&& W/ NO IDLE HEAT ONLY
W/ LONESTAR
^ MUTUALLY EXCLUSIVE

CAV	CIR	GAUGE	COLOR	TERMINAL
H1-A1	-	-	-	-
H1-A2	H63SA	16	DKBL	3584674C1
H1-A3	-	-	-	-
H1-A4	H86AG	18	LTGN	3577500C1
H1-A5	-	-	-	-
H1-A6	H75AL	16	LTGN	3584674C1
H1-B1	H14VAA	16	RD	3584674C1
H1-B2	H14VAC	16	RD	3584674C1
H1-B3	H14VAD	18	RD	3577500C1
H1-B4	H14CC	18	RD	3577500C1
H1-B5	H14CD	18	RD	3577500C1
H1-B6	H75AM	18	LTGN	3577500C1
H1-C1	H14VAB	16	RD	3584674C1
H1-C2	-	-	-	-
H1-C3	H86SBB	16	LTGN	3584674C1
H1-C3##^	H86SBB	18	LTGN	3662131C1
H1-C3##^	H86SBM	18	LTGN	3662131C1
H1-C4	-	-	-	-
H1-C5*	H63K	18	DKBL	3577500C1
H1-C5#	H63U	18	DKBL	3577500C1
H1-C5	H63KU	18	DKBL	3577500C1
H1-C6	-	-	-	-
H2-A1	-	-	-	-
H2-A2	H75BV	16	LTGN	3584674C1
H2-A3	-	-	-	-
H2-A4	H76	18	BK	3577500C1
H2-A5	-	-	-	-
H2-A6##	H86M	16	LTGN	3584674C1
H2-B1	H14VBA	14	RD	3584674C1
H2-B2	H14VBB	16	RD	3584674C1
H2-B3	H14VBC	16	RD	3584674C1
H2-B4	H14VBD	12	RD	3584673C1
H2-B5	H75AN	18	LTGN	3577500C1
H2-B6##	H14VBE	14	RD	3584674C1
H2-C1	H86SB	14	LTGN	3584674C1
H2-C2	-	-	-	-
H2-C3	H86AP	16	LTGN	3584674C1
H2-C4	-	-	-	-
H2-C5&&	H75AP	18	LTGN	3577500C1
H2-C5&	H75NA	14	LTGN	3584674C1
H2-C5##	H77NN	14	LTGN	3587674C1
H2-C6	-	-	-	-
H3-A1	H12B	18	VT	3577500C1
H3-A1@	H97TA	18	VT	3577500C1
H3-A2	H75V	16	LTGN	3577500C1
H3-A3	H63C	18	DKBL	3577500C1
H3-A4	H63D	18	DKBL	3577500C1
H3-A5	H63-GSA	18	WH	3577500C1
H3-A6	H63SF	18	DKBL	3577500C1
H3-B1	-	-	-	-
H3-B2	-	-	-	-
H3-B3	-	-	-	-
H3-B4	-	-	-	-
H3-B5	-	-	-	-

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	D	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 07SEP06

PART NO. AE08055906 SHEET 068

Figure 288 Connector Composites (5001)

https://truckmanualshub.com/

14.76. CONNECTOR COMPOSITES (5001), P. 68A


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

SLEEPER FUSE CENTER
(5001)
(LOCATED REAR FACE OF THE LEFT FRONT BUNK COVER PLATE)

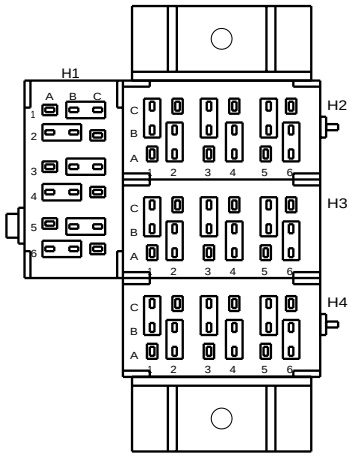

CONNECTOR 3600905C1

H3-B6	H63SCA	18	DKBL	3577500C1
H3-C1	H75BV	16	LTGN	3584674C1
H3-C2	H11-GS	18	WH	3577500C1
H3-C3	H63DV	18	DKBL	3577500C1
H3-C4	H63-GD	18	WH	3577500C1
H3-C5	H63SJ	18	DKBL	3577500C1
H3-C6	H63SH	18	DKBL	3577500C1
H4-A1	-	-	-	-
H4-A2	-	-	-	-
H4-A3%**	H104ADA	18	DKBL	3662131C1
	H104DA	18	DKBL	
H4-A3&	H77NK	18	LTGN	3577500C1
H4-A3##	H77WR	18	LTGN	3577500C1
H4-A4##	H77NL	16	LTGN	3584674C1
H4-A5	H97Z	18	VT	3577500C1
H4-A5%**	H104ABB	18	DKBL	3662131C1
	H104AE	18	DKBL	
H4-A6%	H104AHA	18	DKBL	3662131C1
H4-A6##	H104AH	18	DKBL	3662131C1
H4-A6##	H97TA	18	VT	3577500C1
H4-B1	H70NM	18	LTGN	3577500C1
H4-B2	-	-	-	-
H4-B3	-	-	-	-
H4-B4%	H13FL	18	PK	3577500C1
H4-B5	-	-	-	-
H4-B6	H97TA	18	VT	3577500C1
H4-C1##	H75AP	18	LTGN	3577500C1
H4-C2	-	-	-	-
H4-C3##	13F	18	DKBL	3577500C1
H4-C3	H77NP	16	LTGN	3584674C1
H4-C4	H77NJ	18	LTGN	3577500C1
H4-C4##	104AA	18	DKBL	3577500C1
H4-C5	H12B	18	LTBL	3577500C1
H4-C5%	H104AJ	18	DKBL	3577500C1
H4-C6	H11-GEA	18	WH	3577500C1
H4-C6%**	H104AB	18	DKBL	3662131C1
	H104ABA	18	DKBL	

* W/ WARDROBE LIGHT
\# W/ UPPER BUNK LIGHT
@ W/ IDLE MANAGEMENT
% W/ REMOTE START / STOP
** CRIMPED TOGETHER
& W/ NO IDLE HVAC
&& W/ NO IDLE HEAT ONLY
W/ LONESTAR

CONTINUED FROM SHEET NO. 68

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	INITIAL RELEASE	A	61254R

DRAWN 300749 | NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 61254R | DATE 04SEP08 | PART NO. AE08055906 | SHEET 68A

Figure 289 Connector Composites (5001)

https://truckmanualshub.com/

14.77. CONNECTOR COMPOSITES (5003), (5005), (5006), (5007), P. 69

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


12V POWER SOURCE
(5003)
(LOCATED IN SLEEPER CONTROL PANEL)



CONNECTOR 3613000C1
BODY LOCK 3557682C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H86SBA	16	LTBL	3534165C1
B	-	-	-	-
C	H86-GSA	16	WH	3534165C1

12V POWER SOURCE
(5005)
(LOCATED UNDER BUNK - RIGHT SIDE)



CONNECTOR 0872291R1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H86-GSC	16	WH	0188396R1
B	H86SA	16	LTGN	0188396R1


POWER PANEL GROUND
(5006)
(LOCATED UNDER BUNK)



CONNECTOR 1661197C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	-	-	-	-
B	HA11-GSP	14	WH	3534167C1

GROUND ADAPTER
(5007)
(LOCATED REAR FACE OF FRONT LEFT BUNK PANEL)

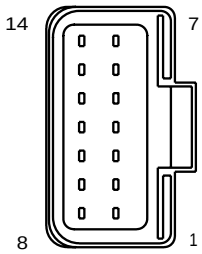

CONNECTOR 3613769C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	H11-GM	10	WH	3613770C1
1^	H11-GM	10	WH	3612307C1
2	H58-G	16	WH	3613771C1
2^	H58-G	16	WH	3613770C1
3	H86-GH	16	LTGN	3613770C1
3^	H86-GH	16	LTGN	3613770C1
4	H65-GE	16	WH	3613771C1
4^	H65-GE	16	WH	3613770C1
5	H86-GHW	18	LTGN	3613771C1
6	H86-GK	18	WH	3613771C1
7	H11-GSP	14	WH	3613770C1
8	H63-GK	18	WH	3613771C1
8&&	H63-GU	18	WH	3613771C1
8&	H63-GX	18	WH	3613771C1
9	H75-GB	18	WH	3613771C1
9#	H75-GB	18	LTGN	3613771C1
9%	H77NT	14	LTGN	3613770C1
10	H11-GT	14	WH	3613770C1
10^	H63-GU	18	WH	3613771C1
11*	H11-GSD	18	WH	3613771C1
11+	H11-GMB	18	WH	3613771C1
11++	H11-GMC	18	WH	3613771C1
11@	H11-GMB	18	WH	3613771C1
11**	H11-GMD	18	WH	3613771C1
12	H76-G	18	WH	3613771C1
12^	H86-GSB	16	WH	3613770C1
13	H75-GSX	14	WH	3613770C1
13##	H104-GB	18	DKBL	3613771C1
13@@	H11-GEC	18	WH	3613771C1
14	H86-GSB	16	WH	3613770C1
14^	H86-GSM	16	WH	3613770C1

* W/ TRIP MASTER
\+ W/ QUALCOMM W/ TMCT
++ W/ QUALCOMM W/ IMCT
@ W/ SATELLITE COMMUNICATION
** W/ XATA
W/ COOLANT HEATER
W/ REMOTE START / STOP
& W/ WARDROBE & UPPER BUNK LIGHTS-W/72"CAB
&& W/ UPPER BUNK LIGHT-W/72"CAB
@@ W/ IDLE MANAGEMENT-W/51" CAB
% W/ NO IDLE HVAC
^ W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	D	61254R

DRAWN U00K640
CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 07SEP06
PART NO. AE08055906
SHEET 069

Figure 290 Connector Composites (5003), (5005), (5006), (5007)

https://truckmanualshub.com/

14.78. CONNECTOR COMPOSITES (5009), (5010), (5011M/5011F), P. 69A

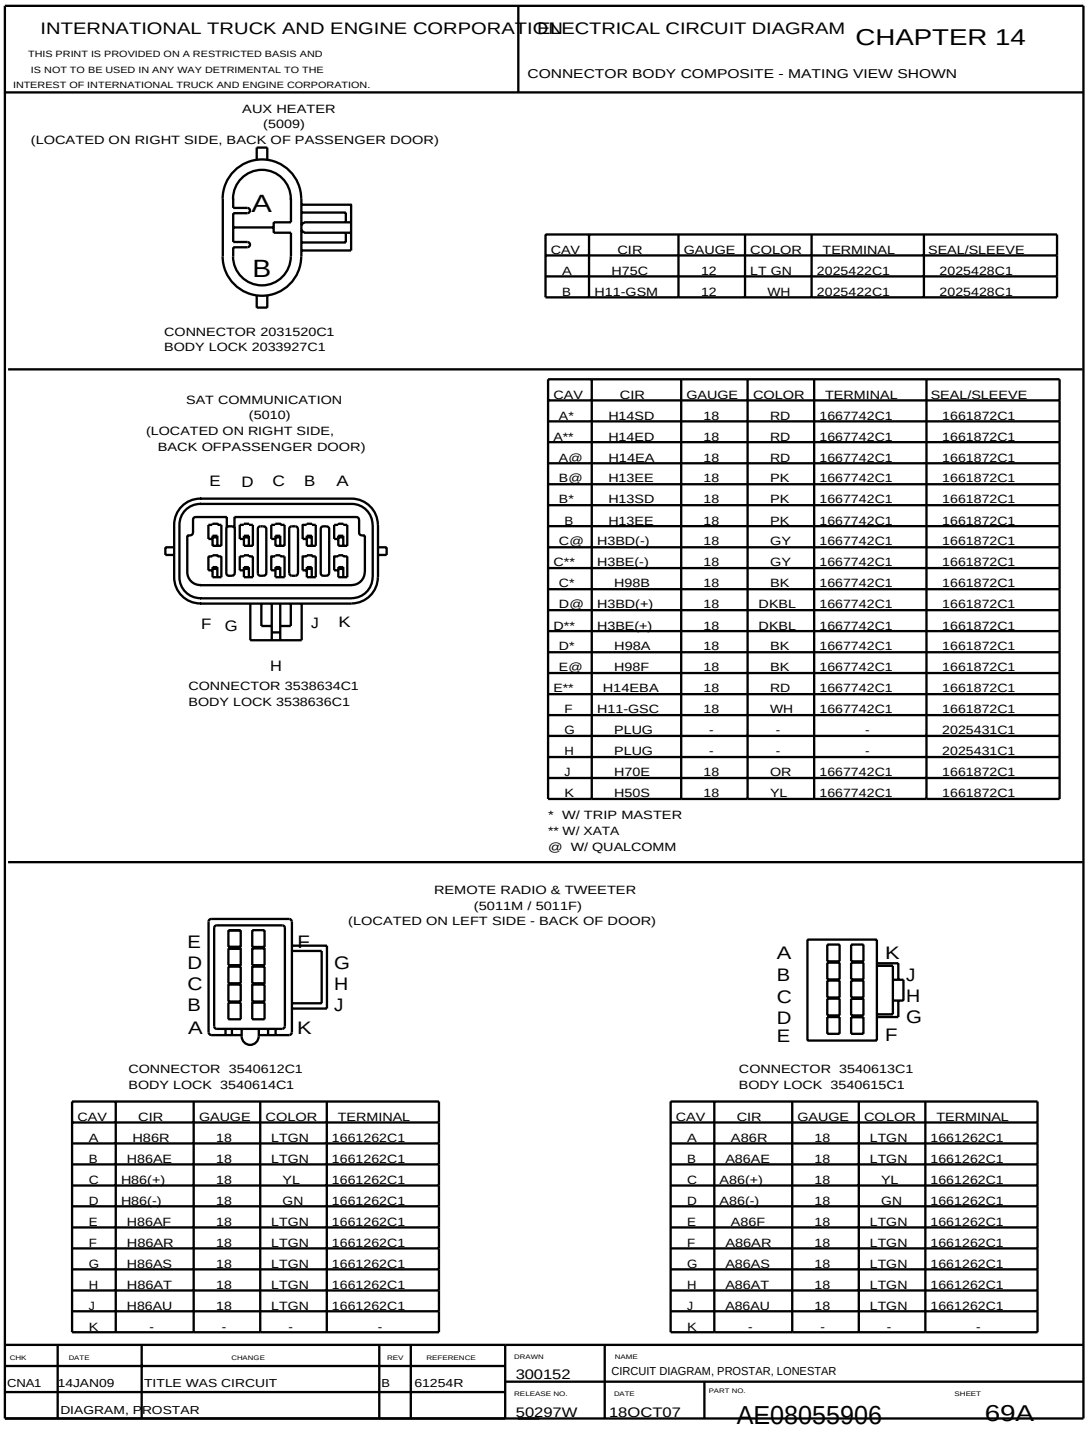


Figure 291 Connector Composites (5009), (5010), (5011M/5011F)

https://truckmanualshub.com/

14.79. CONNECTOR COMPOSITES (5012), (5013), (5014), (5015), (5020), (5031), P. 70


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

LONG SLEEPER SKY / RISE 12V POWER SOURCE
(5012)
(LOCATED IN RIGHT SIDE OF SLEEPER)




CONNECTOR 0872291R1
BODY LOCK 3557682C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H86-GSB	16	WH	0188396R1
A*	H63-SCA	18	DKBL	0573092C1
B	H86SBB	16	LTGN	0188396R1

* W/ LONESTAR

LONG SLEEPER SKY / RISE 12V POWER SOURCE
(5013)
(LOCATED IN RIGHT SIDE OF SLEEPER)



CONNECTOR 0872291R1
BODY LOCK 3557682C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H86-GSB	16	WH	0188396R1
A*	H86-GSM	16	WH	0188396R1
B	H86SBB	16	LTGN	0188396R1
B*	H86-SBM	18	LTGN	0879630R1

* W/ LONESTAR

PASS UPPER CABINET
(5014)
(LOCATED IN RIGHT SIDE OF SLEEPER)
(W/ LONESTAR)



CONNECTOR 3825188C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	H63UB	18	DKBL	3825382C1
2	H63-GUB	18	WH	3825382C1
3	H86-BBA	18	LTGN	3825382C1
4	H86-BBB	18	LTGN	3825382C1

UNDER BUNK LIGHT LEFT
(5015)
(LOCATED IN LEFT SIDE OF SLEEPER)
(W/ LONESTAR)



CONNECTOR 1669973C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63-SJA	18	DKBL	1661212C1
B	H63-GSB	18	WH	1661212C1


SKY RISE UPPER BUNK POWER SOURCE
(5015)
(W/ PROSTAR)



CONNECTOR 3613000C1


CAV	CIR	GAUGE	COLOR	TERMINAL
A	H86M	16	LT GN	3534165C1
B	-	-	-	-
C	H86-GJJ	16	WH	3534165C1

UNDER BUNK LIGHT RIGHT
(5020)
(LOCATED IN RIGHT SIDE OF SLEEPER)
(W/ LONESTAR)



CONNECTOR 1669973C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63-SJB	18	DKBL	1661212C1
B	H63-GSB	18	WH	1661212C1



CONNECTOR 3674957C1
BODY LOCK 3534766C1

APU/PDC
(5031)
(LOCATED UNDER BUNK)

CAV	CIR	GAUGE	COLOR	TERMINAL
1	H77NA	18	LTGN	1680205C1
2	H77NB	18	LTGN	1680205C1
3	PLUG	-	-	0453133C1
4	H5MB(-)	18	GN	1680205C1
5	H5MB(+)	18	YL	1680205C1
6	PLUG	-	-	0453133C1
7	PLUG	-	-	0453133C1
8	PLUG	-	-	0453133C1


CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	D	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 07SEP06

PART NO. AE08055906 SHEET 070

Figure 292 Connector Composites (5012), (5013), (5014), (5015), (5020), (5031)

https://truckmanualshub.com/

14.80. CONNECTOR COMPOSITES (5033), (5034), (5035/5035A), (5100), (5101), P. 70A

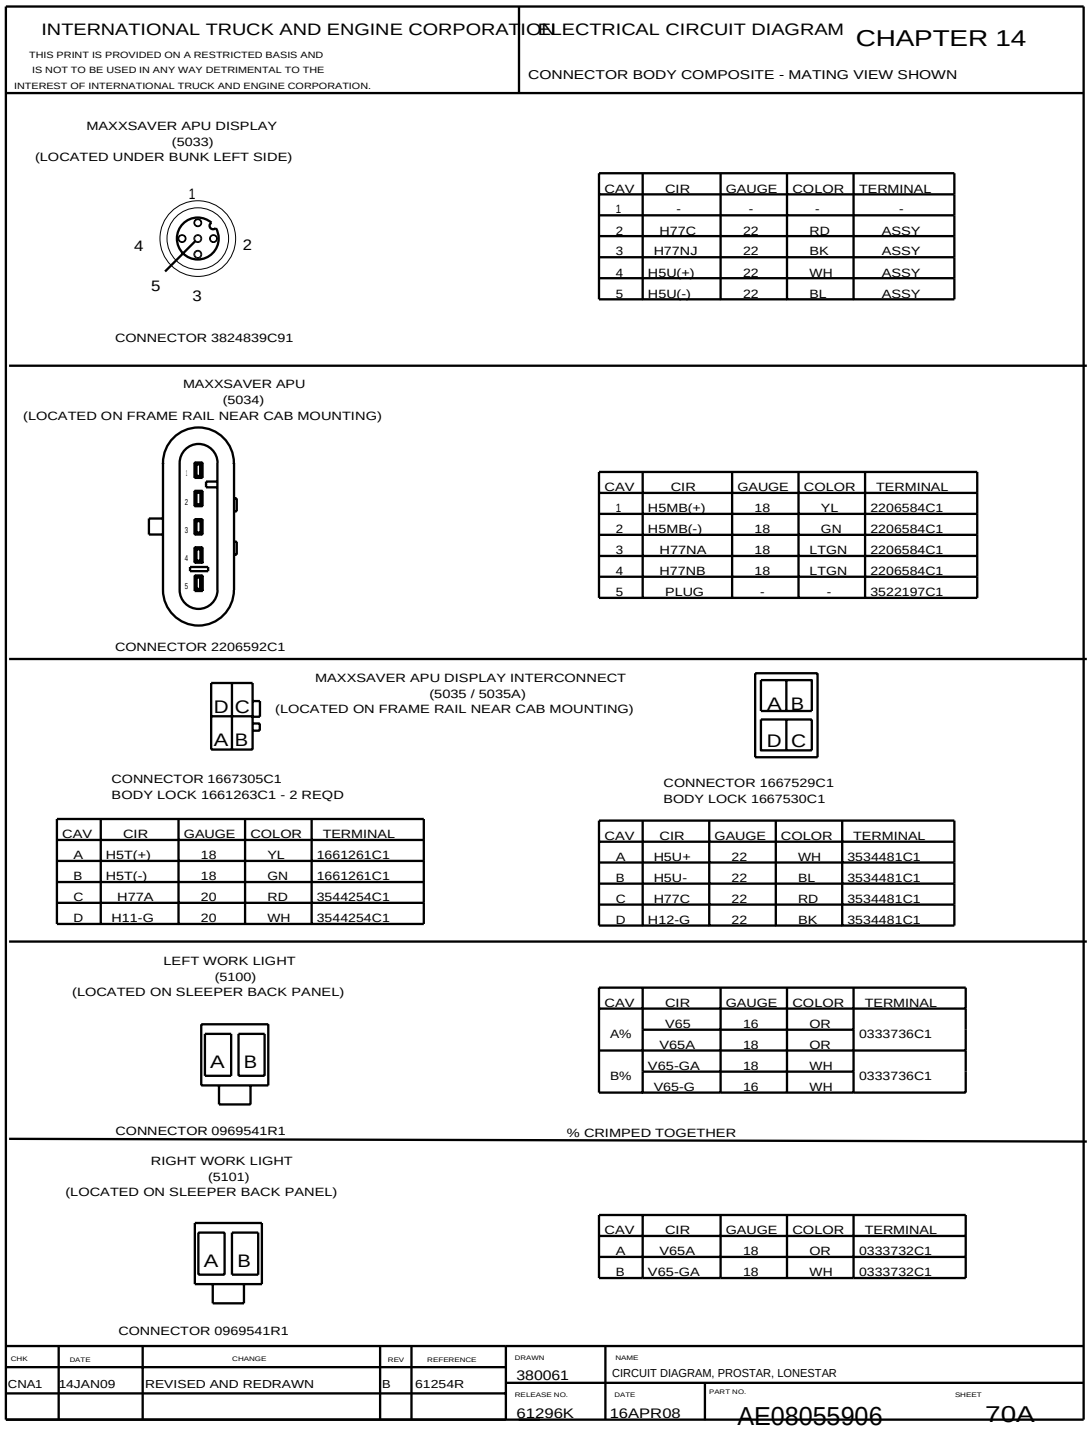

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2	H77C	22	RD	ASSY
3	H77NJ	22	BK	ASSY
4	H5U(+)	22	WH	ASSY
5	H5U(-)	22	BL	ASSY

CAV	CIR	GAUGE	COLOR	TERMINAL
1	H5MB(+)	18	YL	2206584C1
2	H5MB(-)	18	GN	2206584C1
3	H77NA	18	LTGN	2206584C1
4	H77NB	18	LTGN	2206584C1
5	PLUG	-	-	3522197C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H5T(+)	18	YL	1661261C1
B	H5T(-)	18	GN	1661261C1
C	H77A	20	RD	3544254C1
D	H11-G	20	WH	3544254C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H5U+	22	WH	3534481C1
B	H5U-	22	BL	3534481C1
C	H77C	22	RD	3534481C1
D	H12-G	22	BK	3534481C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A%	V65	16	OR	0333736C1
	V65A	18	OR	
B%	V65-GA	18	WH	0333736C1
	V65-G	16	WH	

CAV	CIR	GAUGE	COLOR	TERMINAL
A	V65A	18	OR	0333732C1
B	V65-GA	18	WH	0333732C1

Figure 293 Connector Composites (5033), (5034), (5035/5035A), (5100), (5101)

https://truckmanualshub.com/

14.81. CONNECTOR COMPOSITES (5102), (5103), (5104), (5105), P. 71

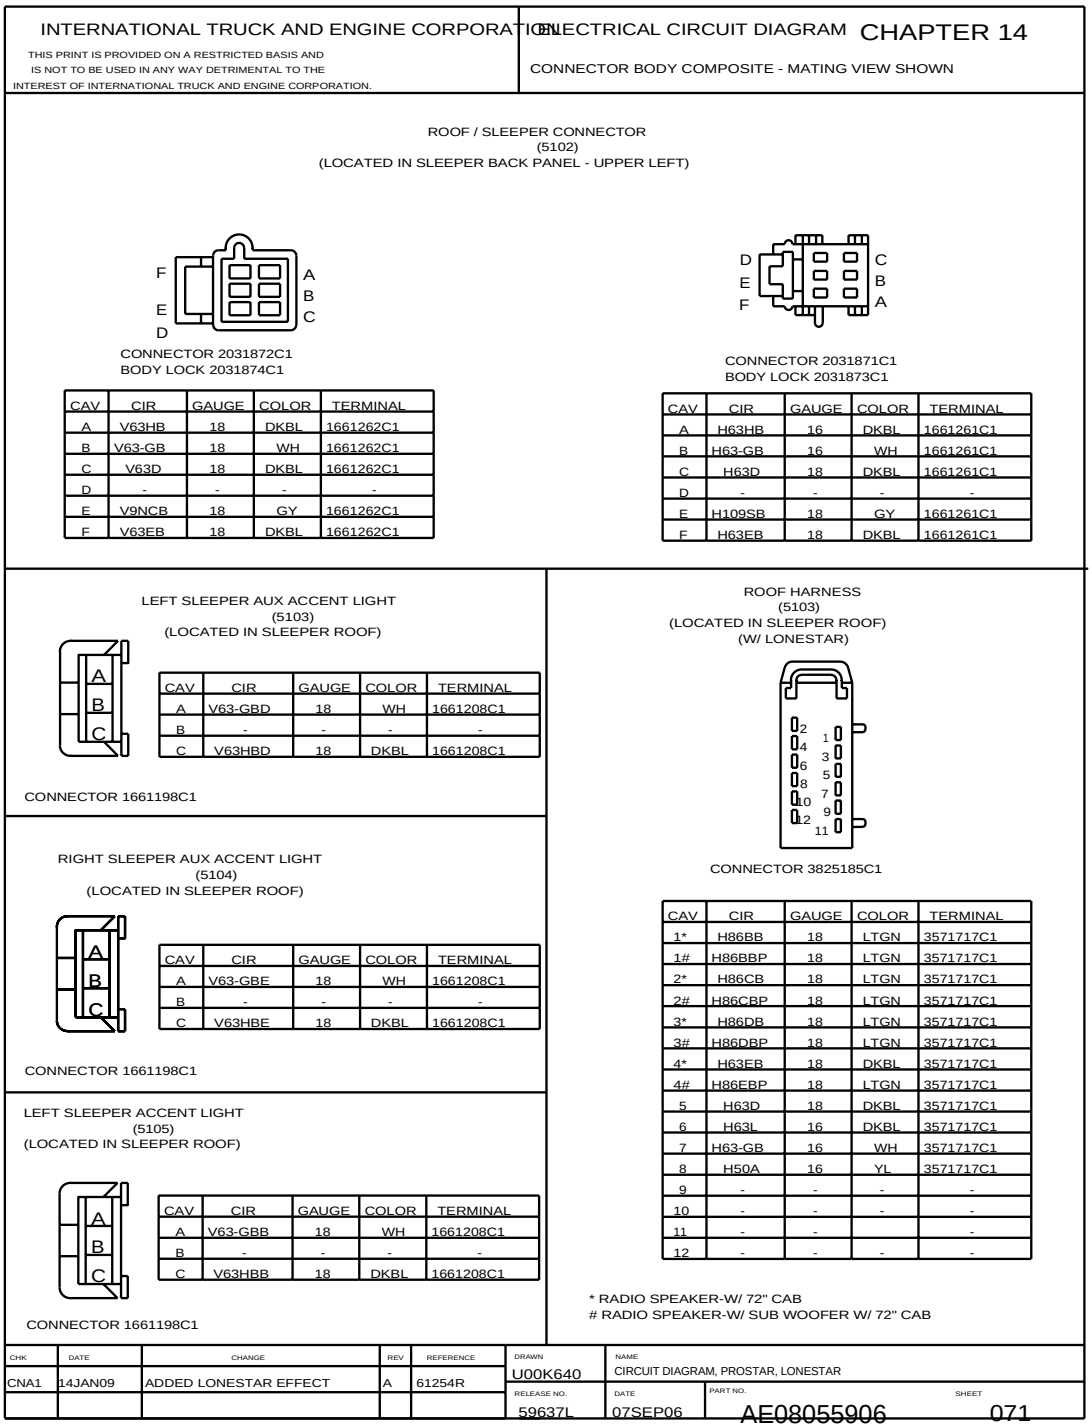


Figure 294 Connector Composites (5102), (5103), (5104), (5105)

https://truckmanualshub.com/

14.82. CONNECTOR COMPOSITES (5106), (5107), (5109), (5110), (5111), P. 72

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

RIGHT SLEEPER ACCENT LIGHT
(5106)
(LOCATED IN SLEEPER ROOF)
(W/ PROSTAR)



CONNECTOR 1661198C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	V63-GBC	18	WH	1661208C1
B	-	-	-	-
C	V63HBC	18	DKBL	1661208C1

SLEEPER DOME LIGHT
(5107)
(LOCATED IN SLEEPER ROOF)
(W/ PROSTAR)



CONNECTOR 1667305C1
BODY LOCK 1661263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	V63D	18	DKBL	1661261C1
B	V63-GA	18	WH	1661261C1
C	V63EB	18	DKBL	1661261C1
D	V9NCB	18	GY	1661261C1

WARDROBE CABINATE
(5109)
(LOCATED ON LEFT SIDE BY WARDROBE CABINET)



CONNECTOR 1661259C1
BODY LOCK 1661263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63K	18	DKBL	1661261C1
B	H63-GK	18	WH	1661261C1

LEFT LUGGAGE LIGHT
(5110)
(LOCATED UNDER BUNK - LEFT SIDE)



CONNECTOR 1669973C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63SJA	18	DKBL	1661212C1
B	H63-GSB	18	WH	1661212C1

RIGHT LUGGAGE LIGHT
(5111)
(LOCATED UNDER BUNK - RIGHT SIDE)



CONNECTOR 1669973C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63SJB	18	DKBL	1661212C1
B	H63-GSC	18	WH	1661212C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 07SEP06

PART NO. AE08055906 SHEET 072

Figure 295 Connector Composites (5106), (5107), (5109), (5110), (5111)

https://truckmanualshub.com/

14.83. CONNECTOR COMPOSITES (5117), (5118), (5119), P. 73

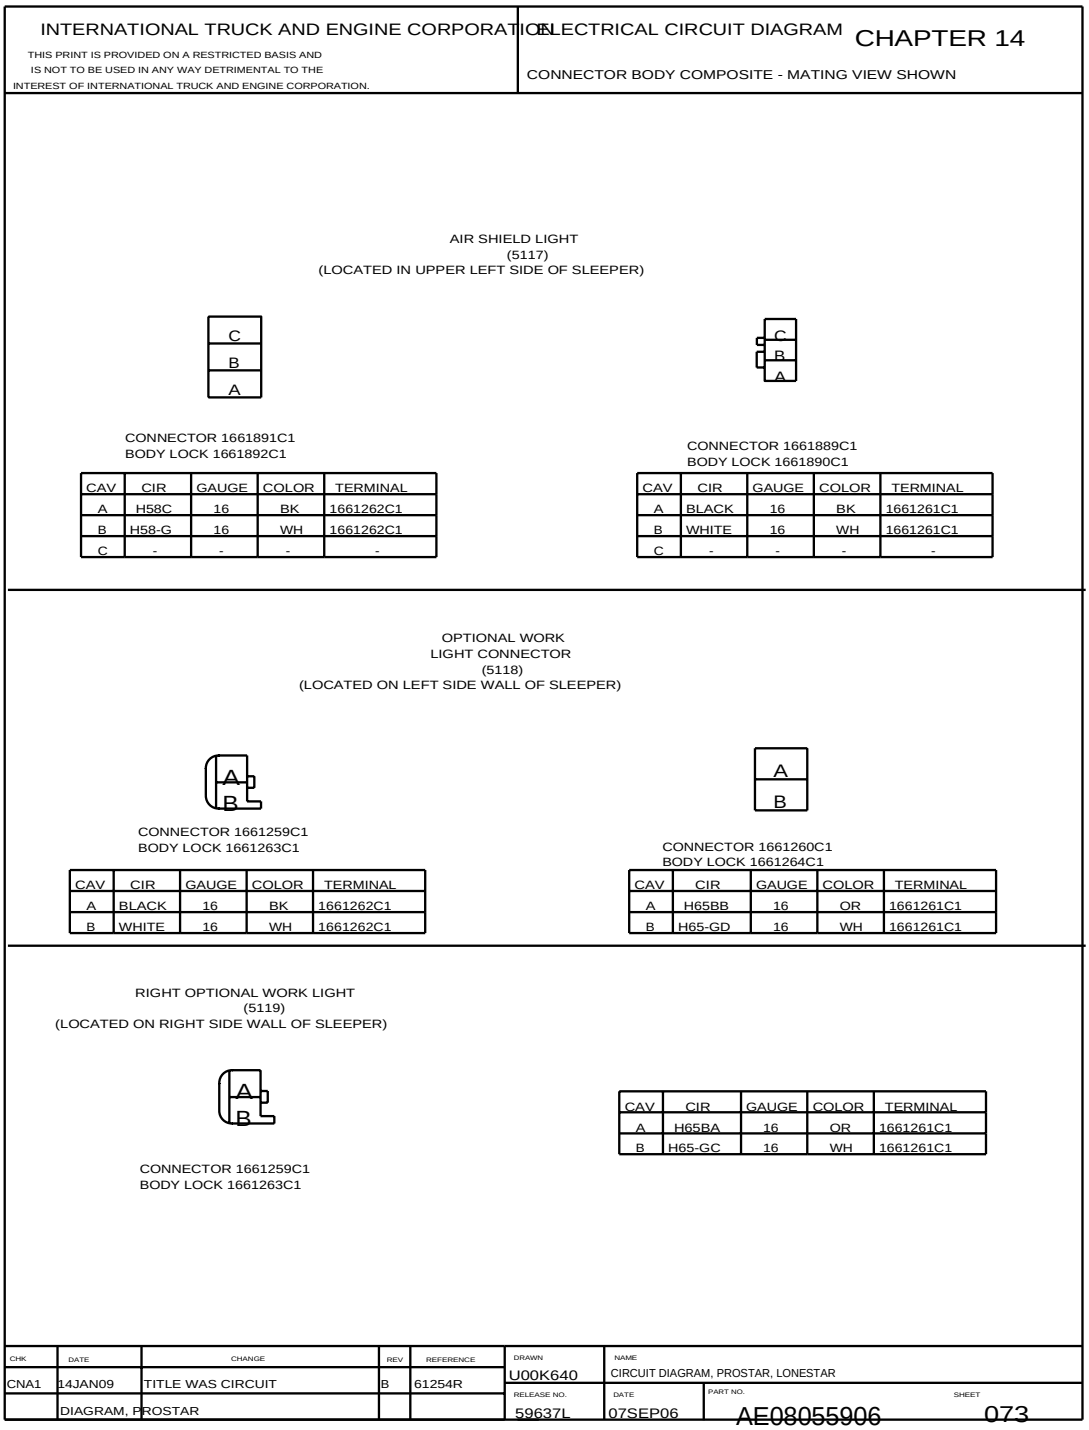


Figure 296 Connector Composites (5117), (5118), (5119)

https://truckmanualshub.com/

14.84. CONNECTOR COMPOSITES (5123), (5124), (5125), P. 74


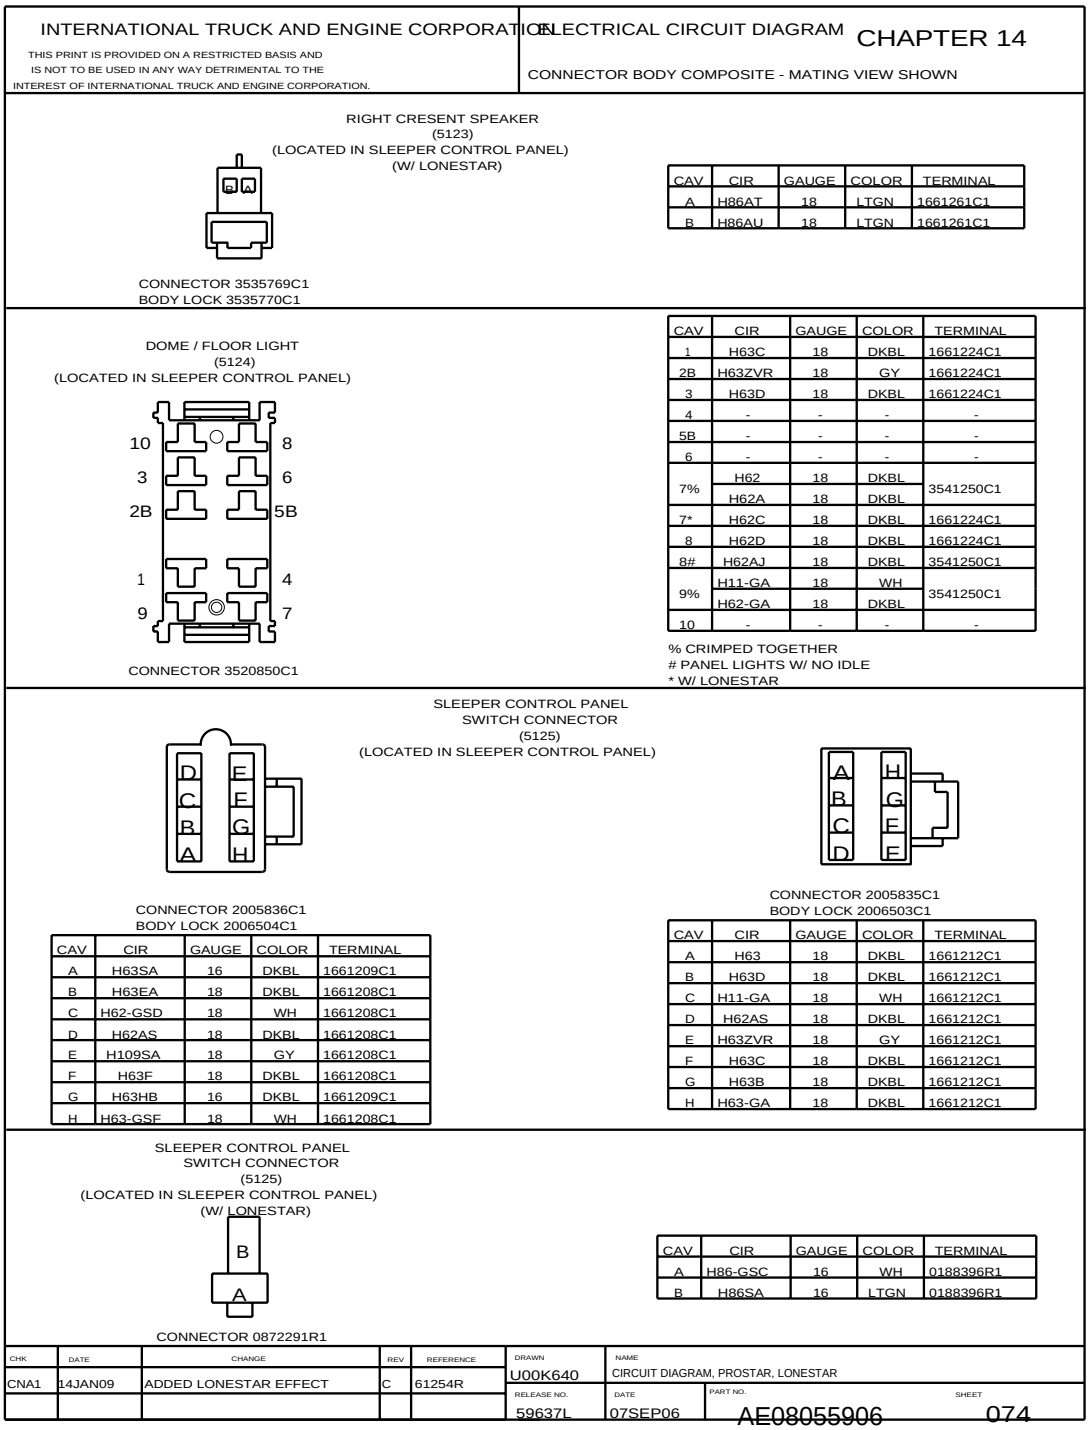


Figure 297 Connector Composites (5123), (5124), (5125)

https://truckmanualshub.com/

14.85. CONNECTOR COMPOSITES (5126), (5127), (5128), (5129), (5130), P. 75

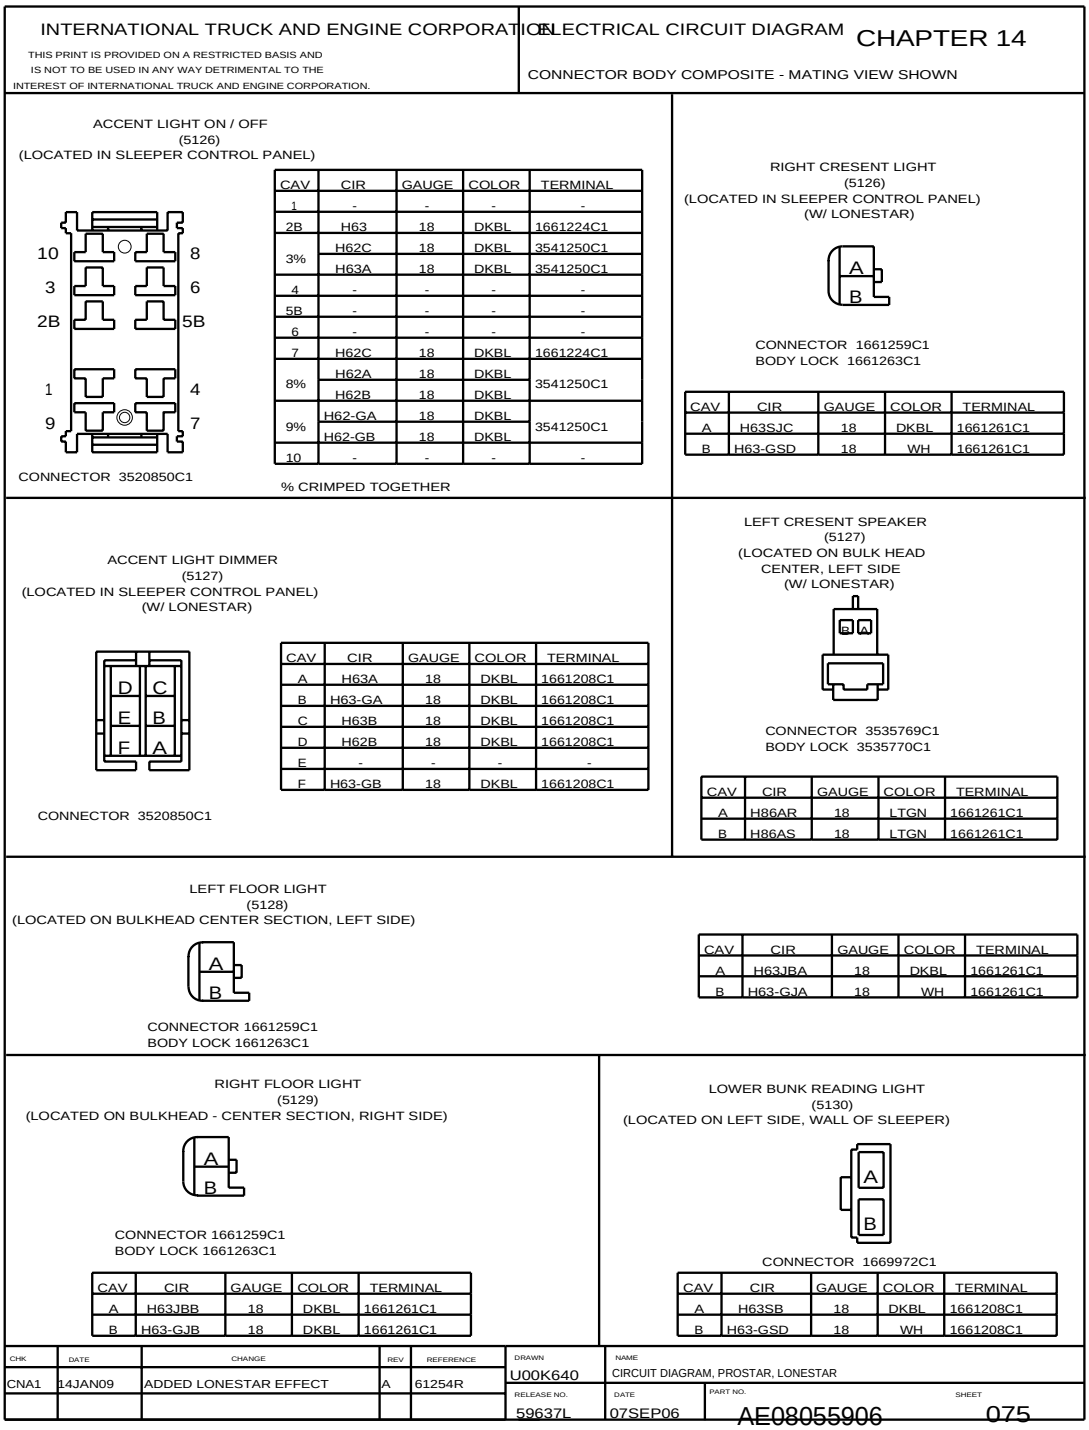

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2B	H63	18	DKBL	1661224C1
3%	H62C	18	DKBL	3541250C1
	H63A	18	DKBL	3541250C1
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7	H62C	18	DKBL	1661224C1
8%	H62A	18	DKBL	3541250C1
	H62B	18	DKBL	
9%	H62-GA	18	DKBL	3541250C1
	H62-GB	18	DKBL	
10	-	-	-	-

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63SJC	18	DKBL	1661261C1
B	H63-GSD	18	WH	1661261C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63A	18	DKBL	1661208C1
B	H63-GA	18	DKBL	1661208C1
C	H63B	18	DKBL	1661208C1
D	H62B	18	DKBL	1661208C1
E	-	-	-	-
F	H63-GB	18	DKBL	1661208C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H86AR	18	LTGN	1661261C1
B	H86AS	18	LTGN	1661261C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63JBA	18	DKBL	1661261C1
B	H63-GJA	18	WH	1661261C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63JBB	18	DKBL	1661261C1
B	H63-GJB	18	DKBL	1661261C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H63SB	18	DKBL	1661208C1
B	H63-GSD	18	WH	1661208C1

Figure 298 Connector Composites (5126), (5127), (5128), (5129), (5130)

https://truckmanualshub.com/

14.86. CONNECTOR COMPOSITES (5130), (5134), P. 75A


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


SLEEPER CONTROLER PANEL
(5130)
(W/ LONESTAR)

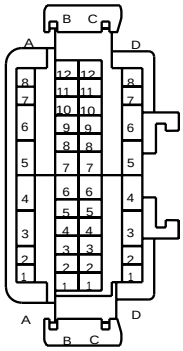

CONNECTOR 3612512C1
BODY LOCK 3553652C1
3553654C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	H63SA	18	DKBL	3544886C1
A2	H63E	18	DKBL	3544886C1
A3	H62-GSD	18	WH	3544880C1
A4	H62AS	18	DKBL	3544880C1
A5	H62ZVR	18	GY	3544880C1
A6	H63F	18	DKBL	3544880C1
A7	H50A	16	YL	3544886C1
A8	H63-GSF	18	WH	3544886C1
B1	-	-	-	-
B2	-	-	-	-
B3	-	-	-	-
B4	-	-	-	-
B5	H86SBA	16	LTGN	3544886C1
B6	H86-GSA	16	WH	3544886C1
B7	H75F	18	LTGN	3544886C1
B8	H75-GA	18	WH	3544886C1
B9	H75R	18	LTGN	3544886C1
B10	H75H	18	LTGN	3544886C1
B11	H75J	18	LTGN	3544886C1
B12	H75K	18	LTGN	3544886C1
C1	H9RC	18	GY	3544886C1
C2	H104AC	18	DKBL	3544886C1
C3	H104ADA	18	DKBL	3544886C1
C4	H104ABB	18	DKBL	3544886C1
C5	H104GB	18	DKBL	3544886C1
C6	-	-	-	-
C7	H75L	18	LTGN	3544886C1
C8	H75M	18	LTGN	3544886C1
C9	H75N	18	LTGN	3544886C1
C10	-	-	-	-
C11	-	-	-	-
C12	-	-	-	-
D1	H86F	18	LTGN	3544886C1
D2	H86R	18	LTGN	3544886C1
D3	H86-GHW	18	LTGN	3544880C1
D4	-	-	-	-
D5	-	-	-	-
D6	H86(-)	18	GN	3544880C1
D7	H86(+)	18	YL	3544886C1
D8	H86AE	18	LTGN	3544886C1

SCP INTERCONNECT
(5134)
(LOCATED IN SLEEPER CONTROL PANEL)
(W/ LONESTAR)

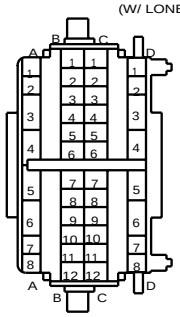

CONNECTOR 3553649C1
BODY LOCK 3553650C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A1	H63	18	DKBL	3544884C1
A2	H63D	18	DKBL	3544884C1
A3	H11-GA	18	WH	3544876C1
A4	H62AS	18	DKBL	3544876C1
A5	H63ZVR	18	GY	3544876C1
A6	H63C	18	DKBL	3544876C1
A7	H63B	18	DKBL	3544884C1
A8	H63-GA	18	DKBL	3544884C1
B1	H75AG	18	LTGN	3544884C1
B2	H75AF	18	LTGN	3544884C1
B3	H75AR	18	LTGN	3544884C1
B4	H75-GAS	18	LTGN	3544884C1
B5	H86SBA	16	LTGN	3544884C1
B6	H86-GSA	16	WH	3544884C1
B7	H75F	18	LTGN	3544884C1
B8	H75-GA	18	WH	3544884C1
B9	H75R	18	LTGN	3544884C1
B10	H75H	18	LTGN	3544884C1
B11	H75J	18	LTGN	3544884C1
B12	H75K	18	LTGN	3544884C1
C1	H9RC	18	GY	3544884C1
C2	H104AC	18	DKBL	3544884C1
C3	H104ADA	18	DKBL	3544884C1
C4	H104ABB	18	DKBL	3544884C1
C5	H104-GB	18	DKBL	3544884C1
C6	-	-	-	-
C7	H75L	18	LTGN	3544884C1
C8	H75M	18	LTGN	3544884C1
C9	H75N	18	LTGN	3544884C1
C10	H77NH	18	LTGN	3544884C1
C11	H77NA	18	LTGN	3544884C1
C12	H77NC	18	LTGN	3544884C1
D1	H86F	18	LTGN	3544884C1
D2	H86R	18	LTGN	3544884C1
D3	H86-GHW	18	LTGN	3544884C1
D4	H77NE	18	LTGN	3544876C1
D5	H77NF	18	LTGN	3544876C1
D6	H86(-)	18	GN	3544876C1
D7	H86(+)	18	YL	3544884C1
D8	H86AE	18	LTGN	3544884C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	INITIAL RELEASE	A	61254R

DRAWN 300749 | NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 61254R | DATE 10SEP08 | PART NO. AE08055906 | SHEET 75A

Figure 299 Connector Composites (5130), (5134)

https://truckmanualshub.com/

14.87. CONNECTOR COMPOSITES (5131), (5134), (5135), (5135M), (5136), (5200), (5201), P. 76

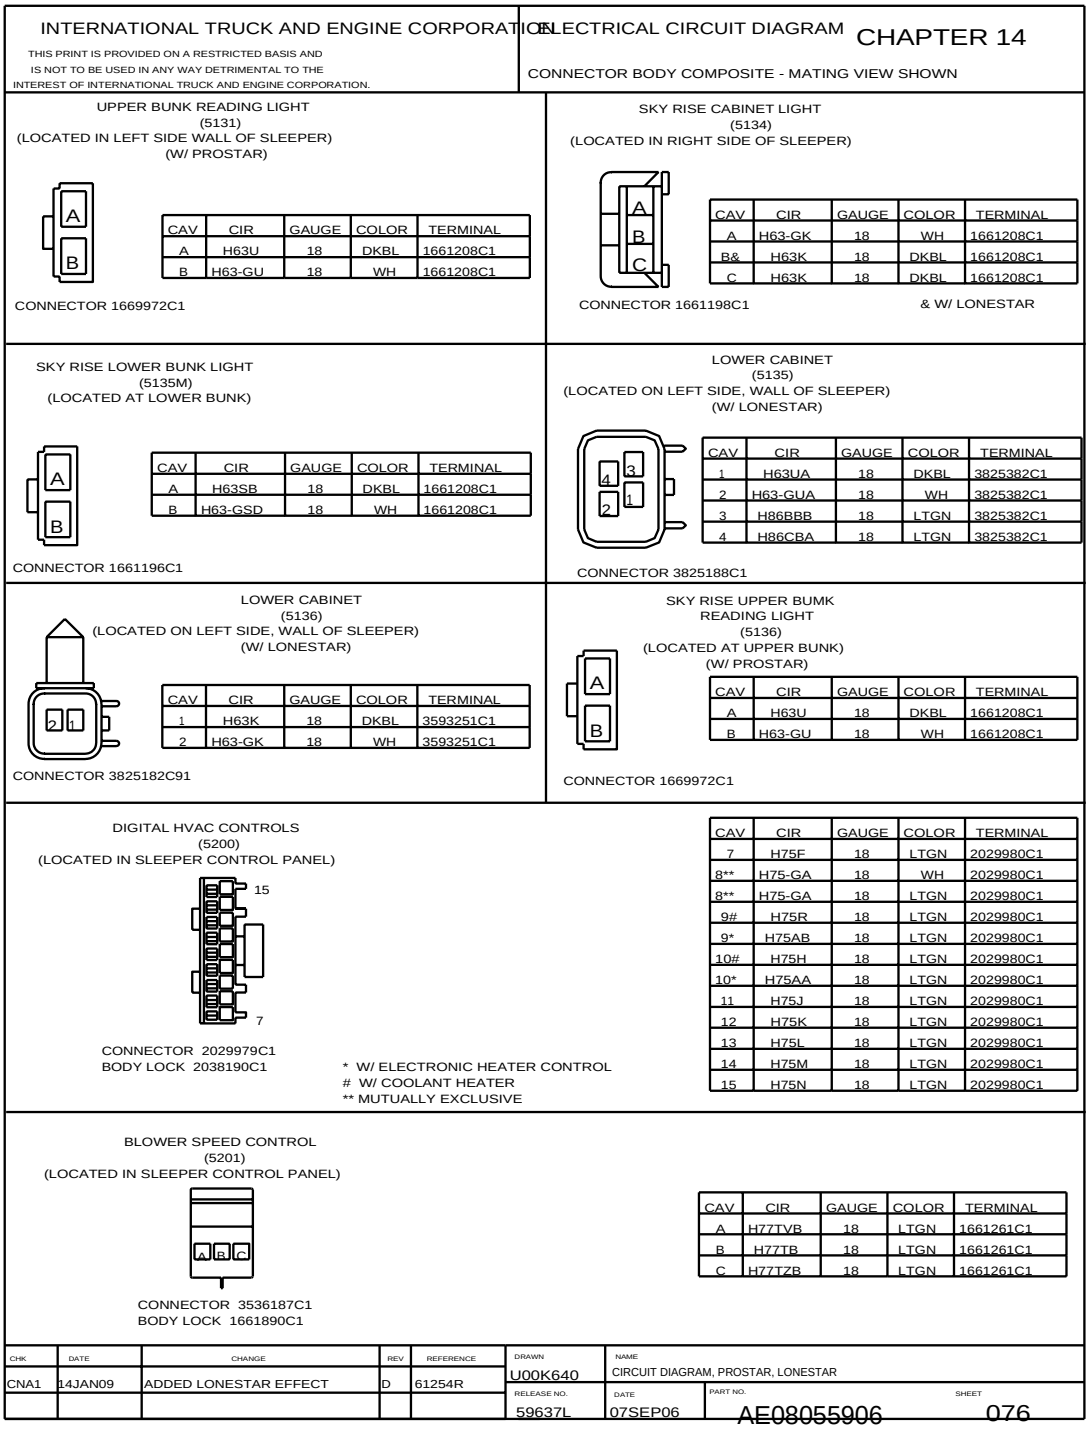


Figure 300 Connector Composites (5131), (5134), (5135), (5135M), (5136), (5200), (5201)

https://truckmanualshub.com/

14.88. CONNECTOR COMPOSITES (5202), (5210), (5212), (5213), P. 77

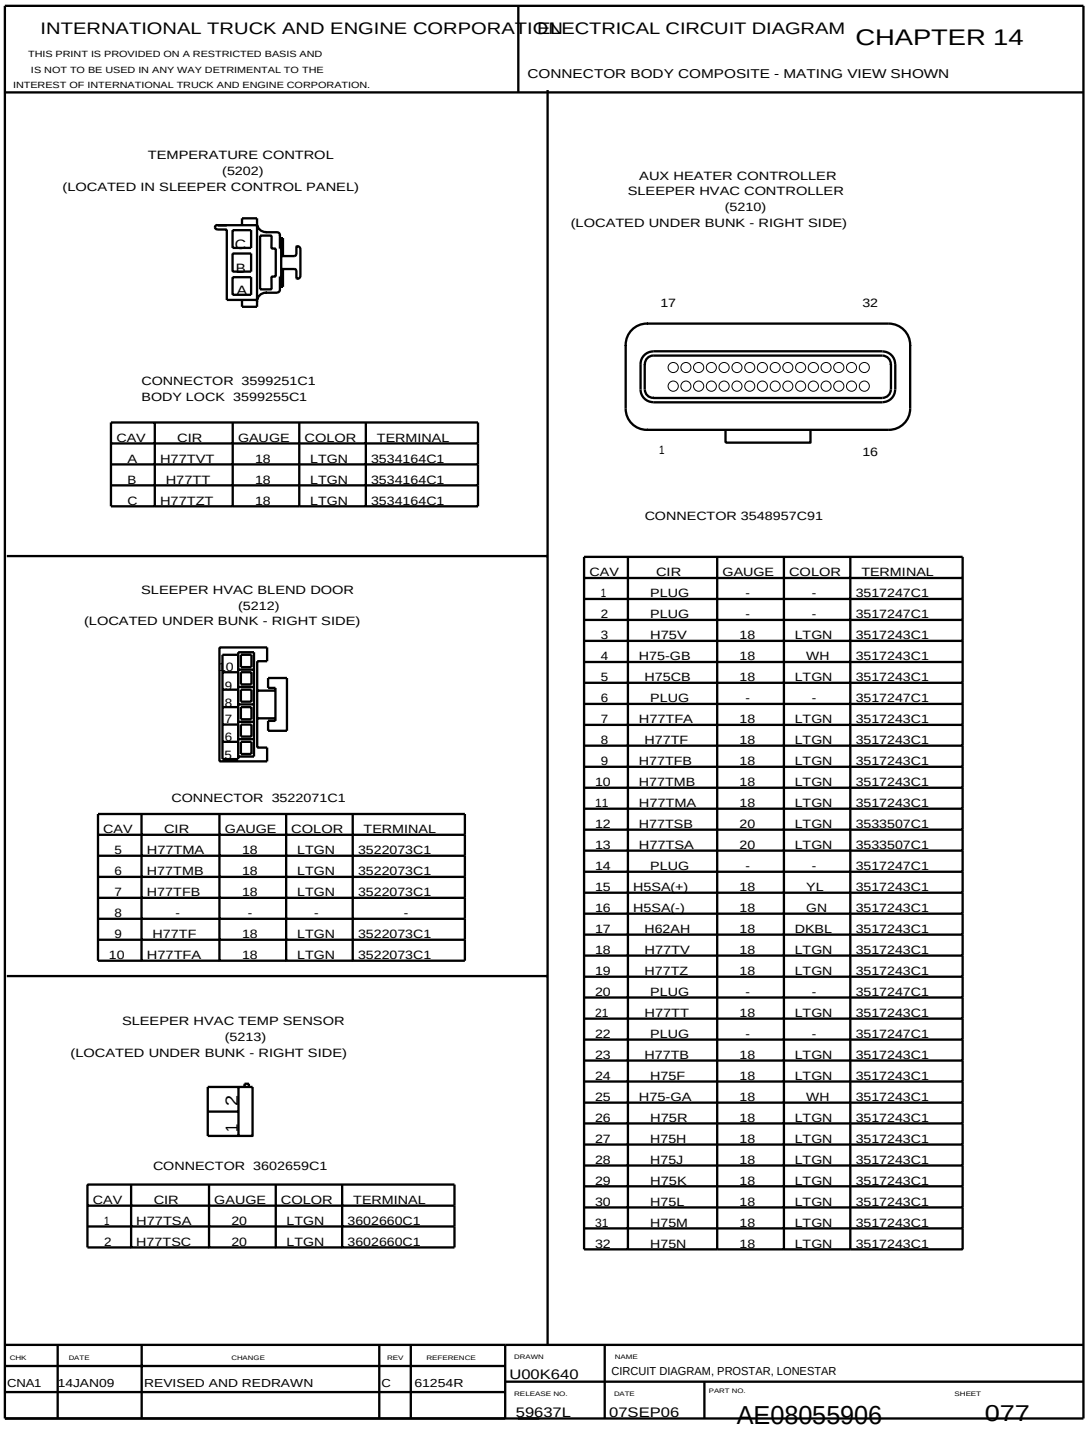


Figure 301 Connector Composites (5202), (5210), (5212), (5213)

https://truckmanualshub.com/

14.89. CONNECTOR COMPOSITES (5214), (5215), (5216), (5217), (5218), (5219), P. 78

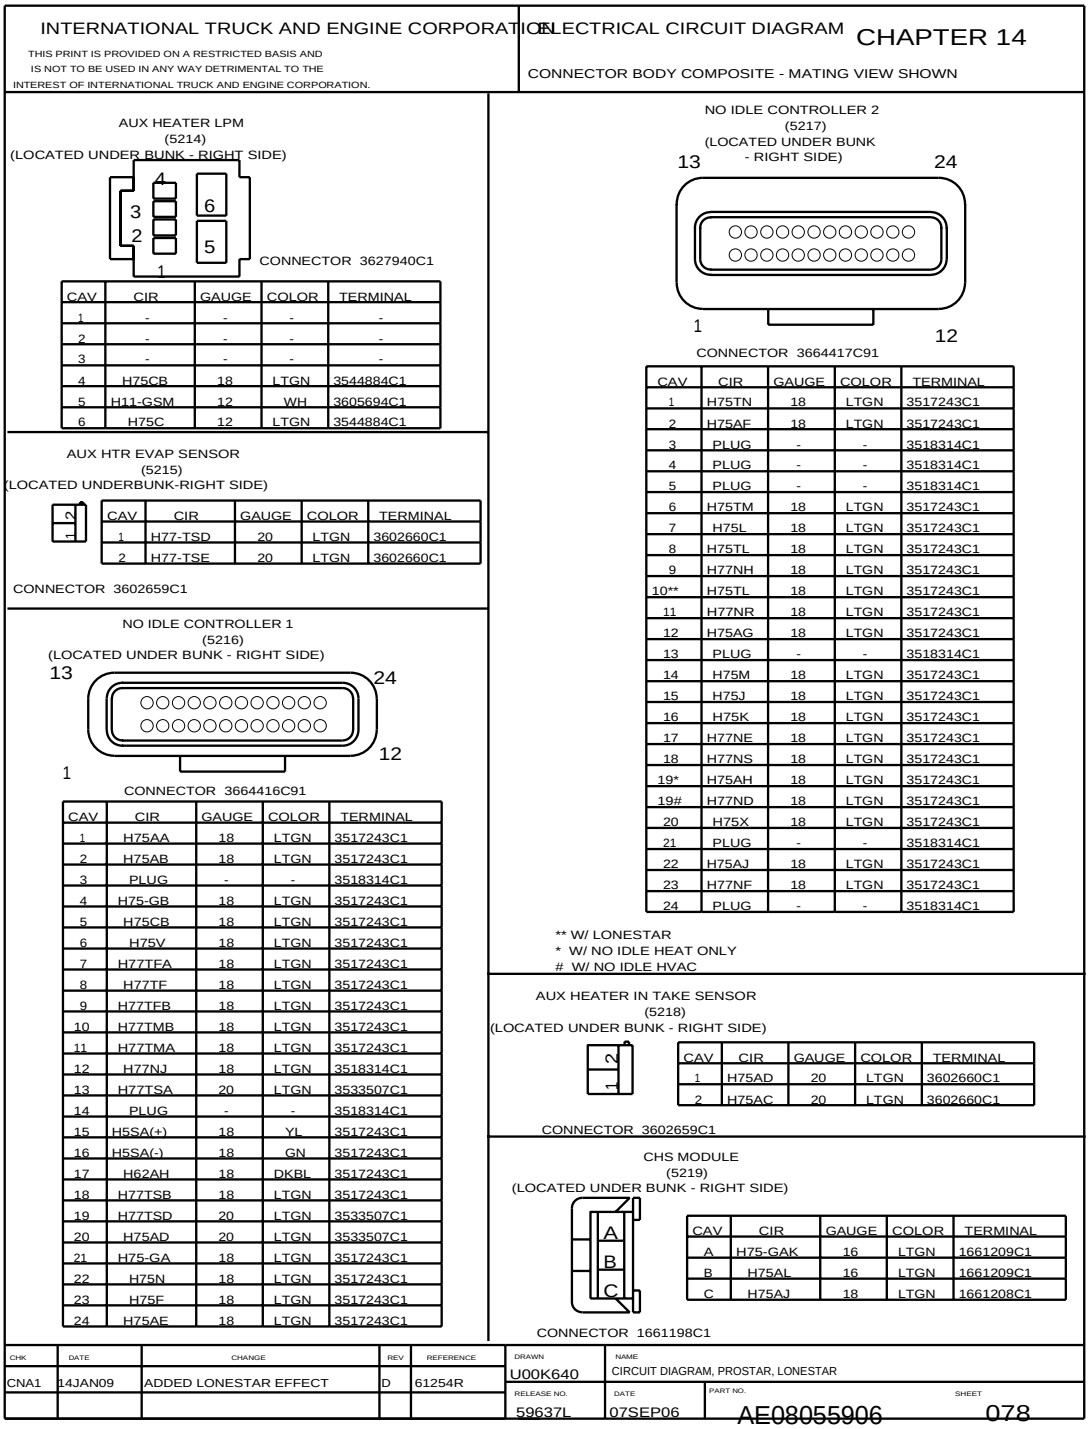


Figure 302 Connector Composites (5214), (5215), (5216), (5217), (5218), (5219)

https://truckmanualshub.com/

14.90. CONNECTOR COMPOSITES (5220), (5222), (5230), P. 78A

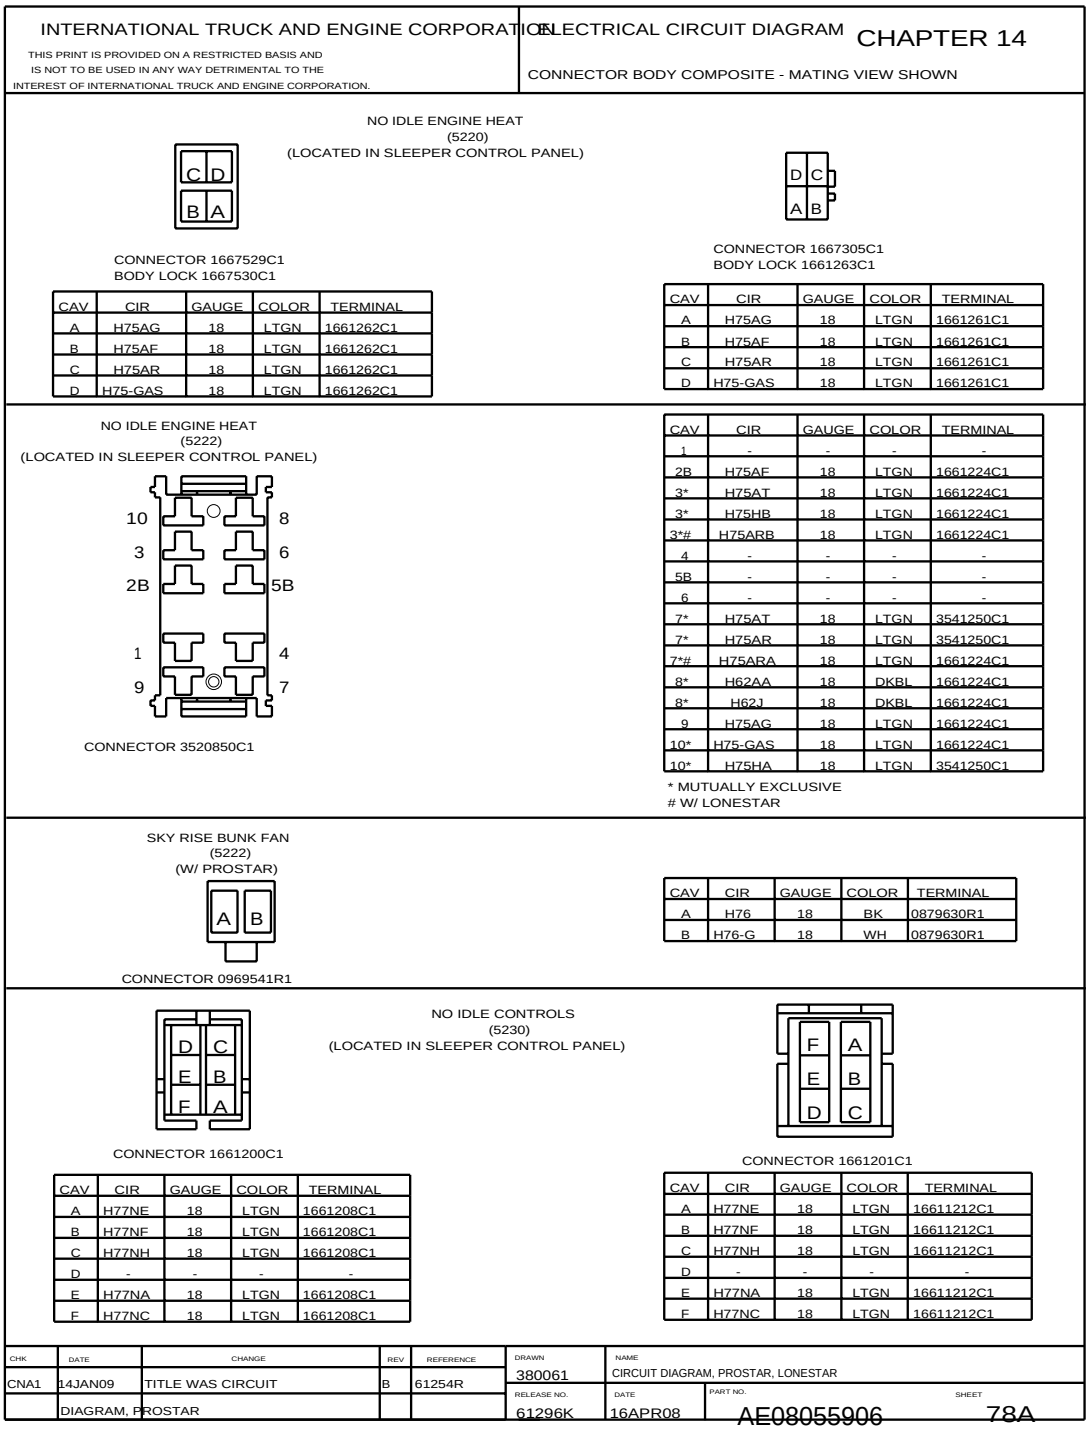


Figure 303 Connector Composites (5220), (5222), (5230)

https://truckmanualshub.com/

14.91. CONNECTOR COMPOSITES (5232), (5233), (5234), P. 79


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND
IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE
INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


NO IDLE EXTERNAL MODULE
(5232)
(LOCATED UNDER BUNK-RIGHT SIDE)

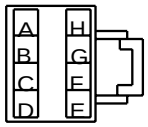

CONNECTOR 2005835C1
BODY LOCK 2006503C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H77NP	16	LTGN	1661209C1
B	-	-	-	-
C	H77NR	18	LTGN	1661208C1
D	H77NS	18	LTGN	1661208C1
E	H77NU	18	LTGN	1661208C1
F	-	-	-	-
G	-	-	-	-
H	H77NV	16	LTGN	1661209C1

NO IDLE COOL
(5233)
(LOCATED IN SLEEPER CONTROL PANEL)

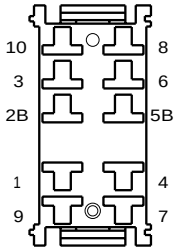


CONNECTOR 3520850C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2B	H77NE	18	LTGN	1661224C1
3	-	-	-	-
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7%	H75AT	18	LTGN	3541250C1
	H75HB	18	LTGN	
8%	H62AA	18	DKBL	3541250C1
	H62AB	18	DKBL	
9	H77NF	18	LTGN	1661224C1
10%	H75HA	18	LTGN	3541250C1
	H75HC	18	LTGN	

% CRIMPED TOGETHER

NO IDLE APU
(5234)
(W/ PROSTAR)

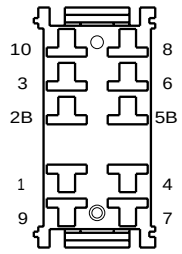

CONNECTOR 3520850C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	H77NH	18	LTGN	1661224C1
2B	H77NA	18	LTGN	1661224C1
3	-	-	-	-
4	-	-	-	-
5B	-	-	-	-
6	-	-	-	-
7	H77NC	18	LTGN	1661224C1
8	H62AB	18	DKBL	1661224C1
9	-	-	-	-
10	H75HC	18	LTGN	1661224C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	20JAN09	TITLE WAS CIRCUIT	D	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 59637L	DATE 07SEP06

PART NO. AE08055906 SHEET 079

Figure 304 Connector Composites (5232), (5233), (5234)

https://truckmanualshub.com/

14.92. CONNECTOR COMPOSITES (5300), (5301), (5302), (5303), P. 79A


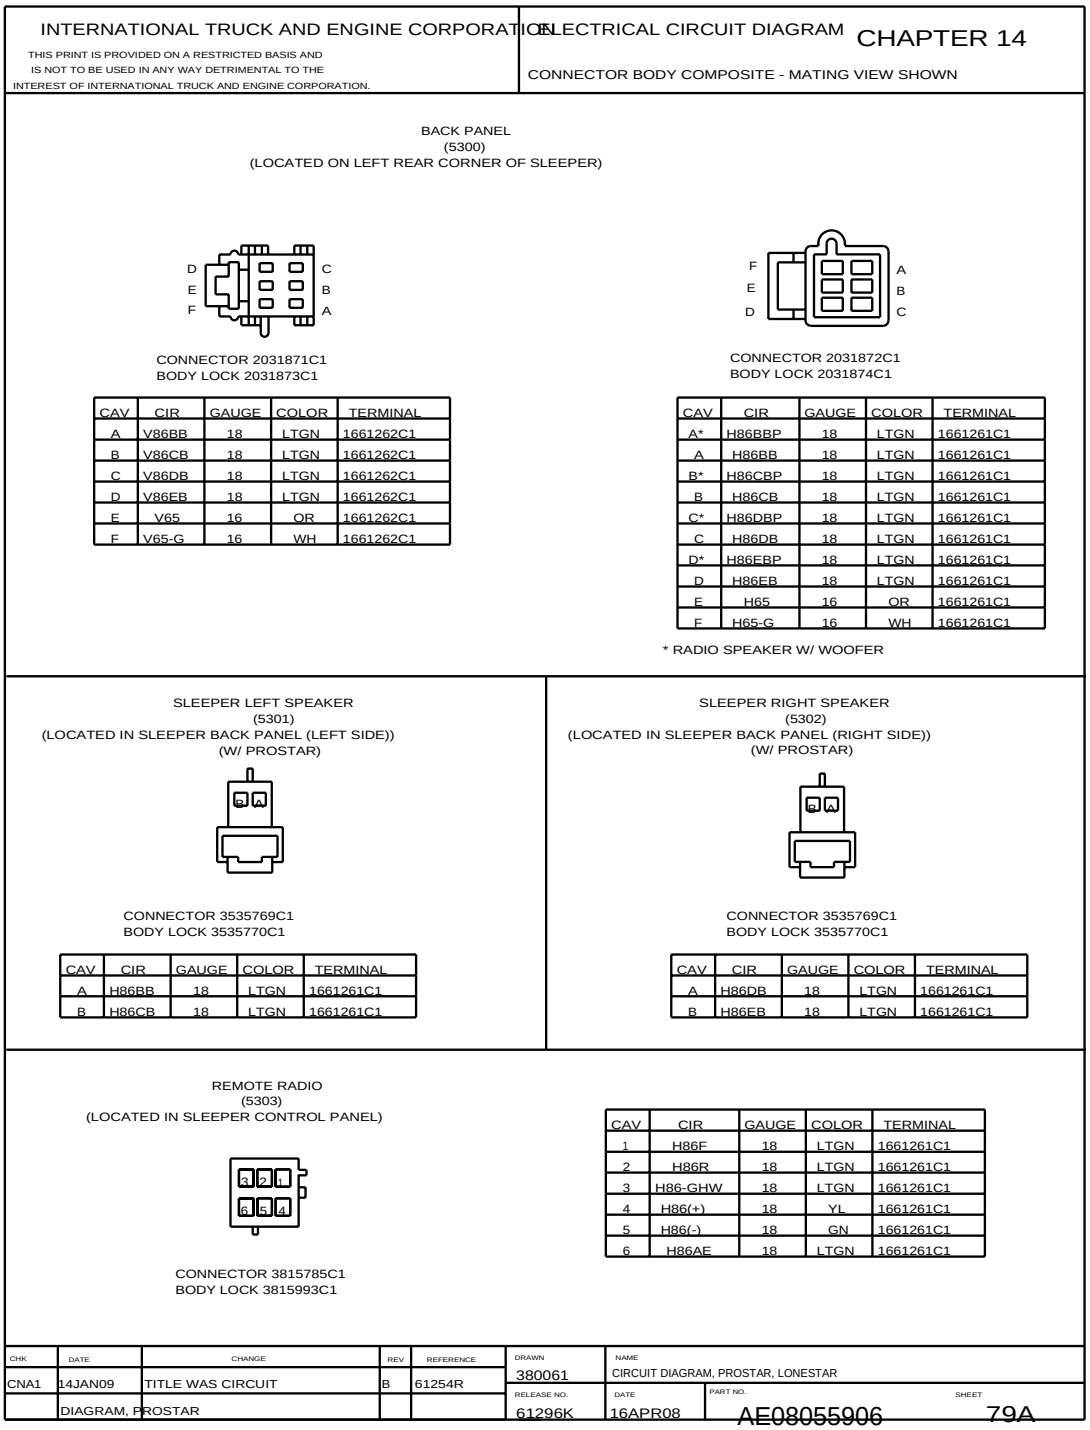


Figure 305 Connector Composites (5300), (5301), (5302), (5303)

https://truckmanualshub.com/

14.93. CONNECTOR COMPOSITES (5312), (5313), (5314), (5500), (5502), (5600), P. 80

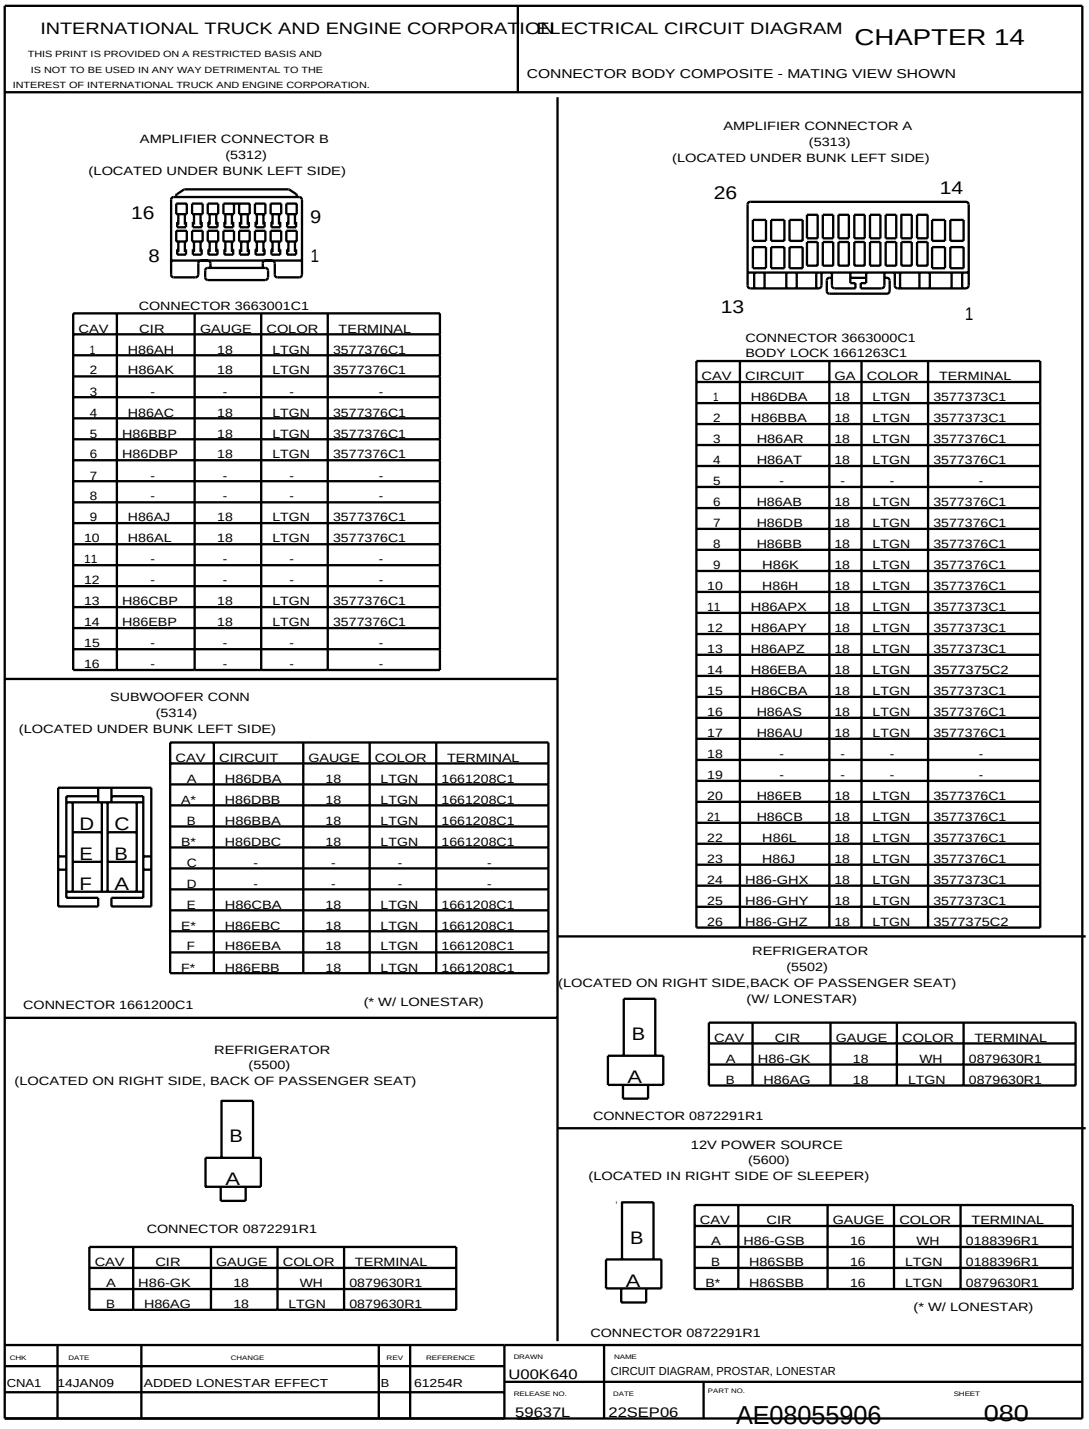

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

AMPLIFIER CONNECTOR B
(5312)
(LOCATED UNDER BUNK LEFT SIDE)

16 9
8 1

CONNECTOR 3663001C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	H86AH	18	LTGN	3577376C1
2	H86AK	18	LTGN	3577376C1
3	-	-	-	-
4	H86AC	18	LTGN	3577376C1
5	H86BBP	18	LTGN	3577376C1
6	H86DBP	18	LTGN	3577376C1
7	-	-	-	-
8	-	-	-	-
9	H86AJ	18	LTGN	3577376C1
10	H86AL	18	LTGN	3577376C1
11	-	-	-	-
12	-	-	-	-
13	H86CBP	18	LTGN	3577376C1
14	H86EBP	18	LTGN	3577376C1
15	-	-	-	-
16	-	-	-	-

SUBWOOFER CONN
(5314)
(LOCATED UNDER BUNK LEFT SIDE)

D C
E B
F A

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
A	H86DBA	18	LTGN	1661208C1
A*	H86DBB	18	LTGN	1661208C1
B	H86BBA	18	LTGN	1661208C1
B*	H86DBC	18	LTGN	1661208C1
C	-	-	-	-
D	-	-	-	-
E	H86CBA	18	LTGN	1661208C1
E*	H86EBC	18	LTGN	1661208C1
F	H86EBA	18	LTGN	1661208C1
F*	H86EBB	18	LTGN	1661208C1

CONNECTOR 1661200C1 (* W/ LONESTAR)

REFRIGERATOR
(5500)
(LOCATED ON RIGHT SIDE, BACK OF PASSENGER SEAT)

B
A

CONNECTOR 0872291R1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H86-GK	18	WH	0879630R1
B	H86AG	18	LTGN	0879630R1

AMPLIFIER CONNECTOR A
(5313)
(LOCATED UNDER BUNK LEFT SIDE)

26 14
13 1

CONNECTOR 3663000C1
BODY LOCK 1661263C1

CAV	CIRCUIT	GA	COLOR	TERMINAL
1	H86DBA	18	LTGN	3577373C1
2	H86BBA	18	LTGN	3577373C1
3	H86AR	18	LTGN	3577376C1
4	H86AT	18	LTGN	3577376C1
5	-	-	-	-
6	H86AB	18	LTGN	3577376C1
7	H86DB	18	LTGN	3577376C1
8	H86BB	18	LTGN	3577376C1
9	H86K	18	LTGN	3577376C1
10	H86H	18	LTGN	3577376C1
11	H86APX	18	LTGN	3577373C1
12	H86APY	18	LTGN	3577373C1
13	H86APZ	18	LTGN	3577373C1
14	H86EBA	18	LTGN	3577375C2
15	H86CBA	18	LTGN	3577373C1
16	H86AS	18	LTGN	3577376C1
17	H86AU	18	LTGN	3577376C1
18	-	-	-	-
19	-	-	-	-
20	H86EB	18	LTGN	3577376C1
21	H86CB	18	LTGN	3577376C1
22	H86L	18	LTGN	3577376C1
23	H86J	18	LTGN	3577376C1
24	H86-GHX	18	LTGN	3577373C1
25	H86-GHY	18	LTGN	3577373C1
26	H86-GHZ	18	LTGN	3577375C2

REFRIGERATOR
(5502)
(LOCATED ON RIGHT SIDE,BACK OF PASSENGER SEAT)
(W/ LONESTAR)

B
A

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H86-GK	18	WH	0879630R1
B	H86AG	18	LTGN	0879630R1

CONNECTOR 0872291R1

12V POWER SOURCE
(5600)
(LOCATED IN RIGHT SIDE OF SLEEPER)

B
A

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H86-GSB	16	WH	0188396R1
B	H86SBB	16	LTGN	0188396R1
B*	H86SBB	16	LTGN	0879630R1

(* W/ LONESTAR)

CONNECTOR 0872291R1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 22SEP06
PART NO. AE08055906
SHEET 080

Figure 306 Connector Composites (5312), (5313), (5314), (5500), (5502), (5600)

https://truckmanualshub.com/

14.94. CONNECTOR COMPOSITES (5601M), (5602F), (5602M), (5603M), (5700), P. 80A

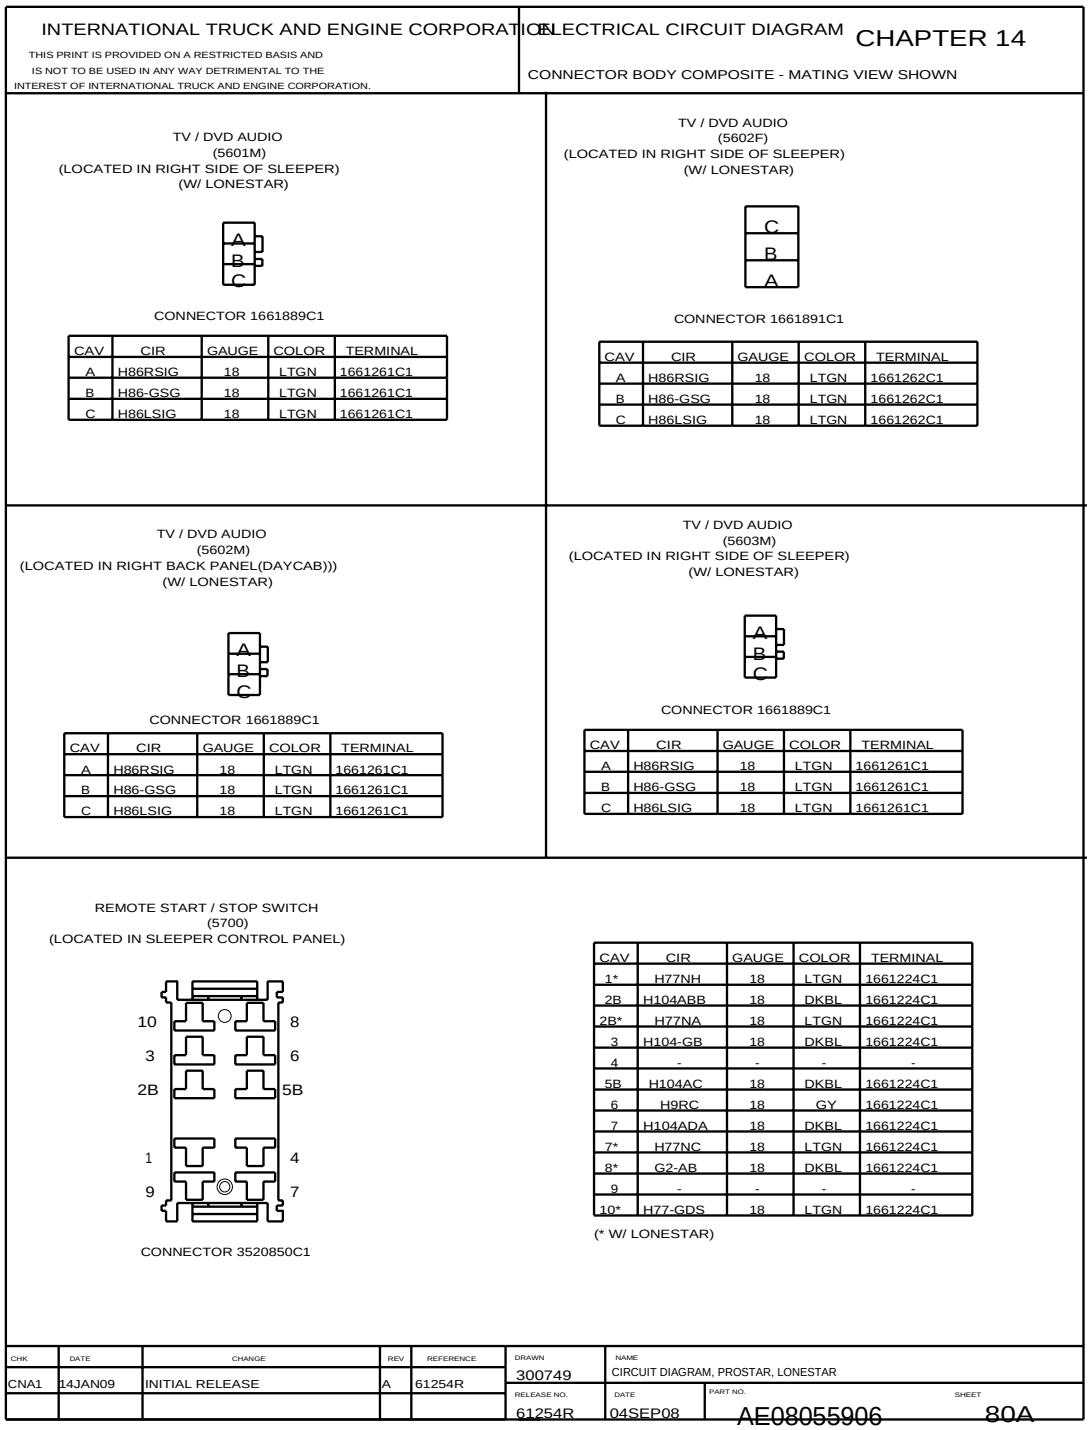


Figure 307 Connector Composites (5601M), (5602F), (5602M), (5603M), (5700)

https://truckmanualshub.com/

14.95. CONNECTOR COMPOSITES (5701), (5702), (5752), (5753), (5754), P. 81

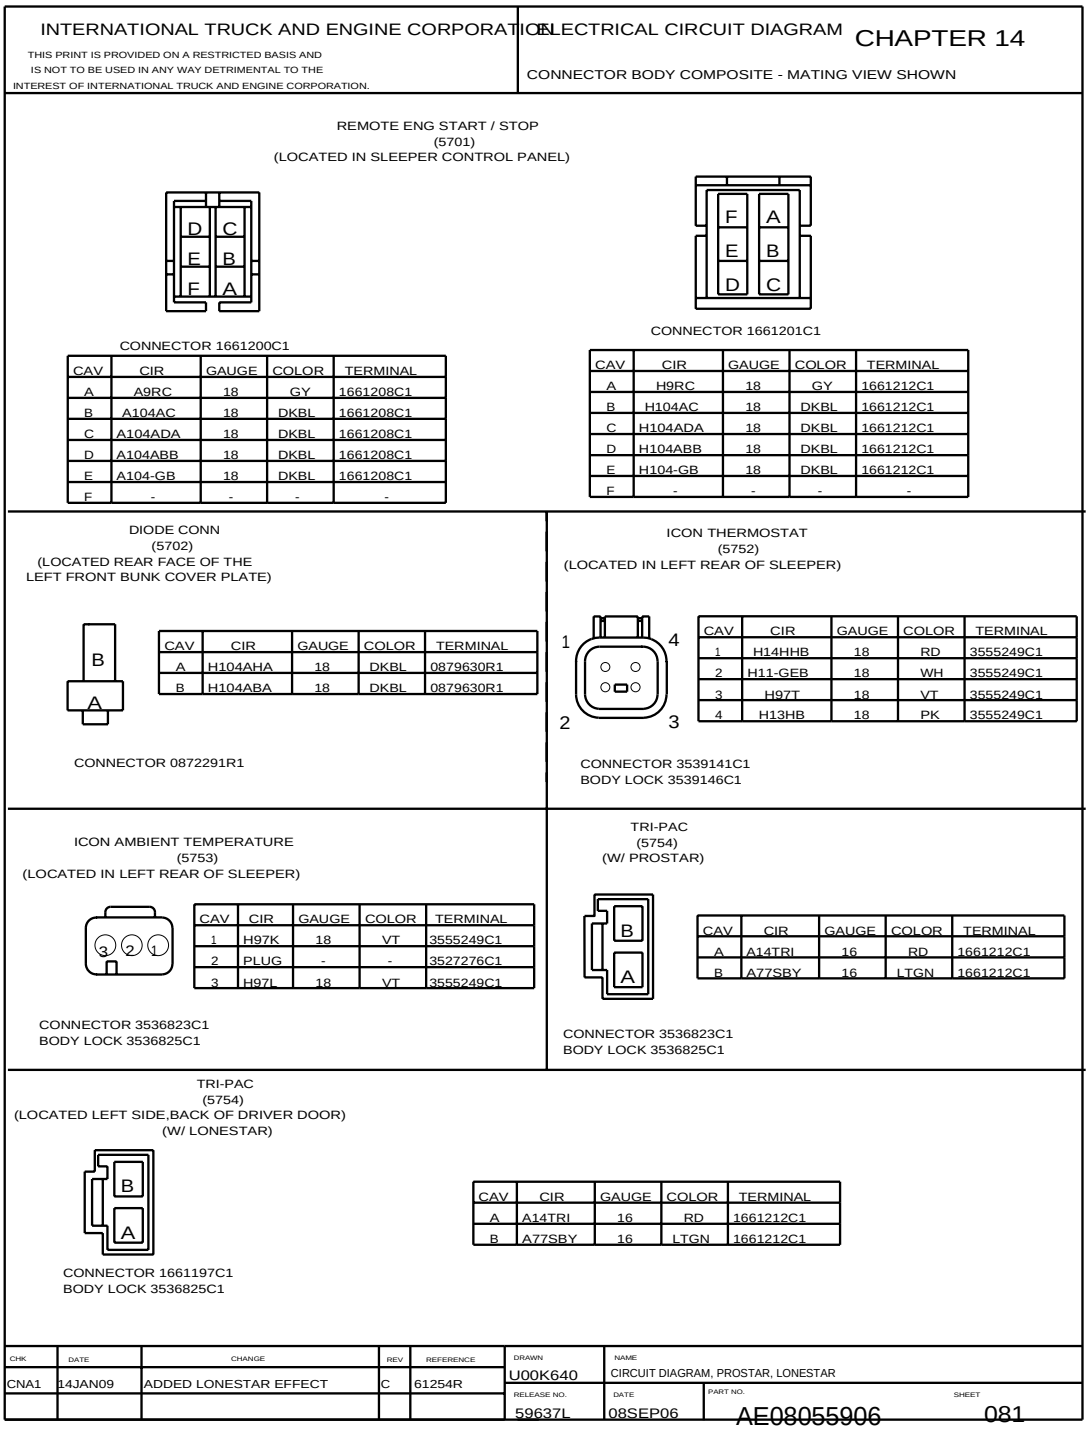


Figure 308 Connector Composites (5701), (5702), (5752), (5753), (5754)

https://truckmanualshub.com/

14.96. CONNECTOR COMPOSITES (5757), (5758), (5803), (5900), (5902), (5903), P. 82

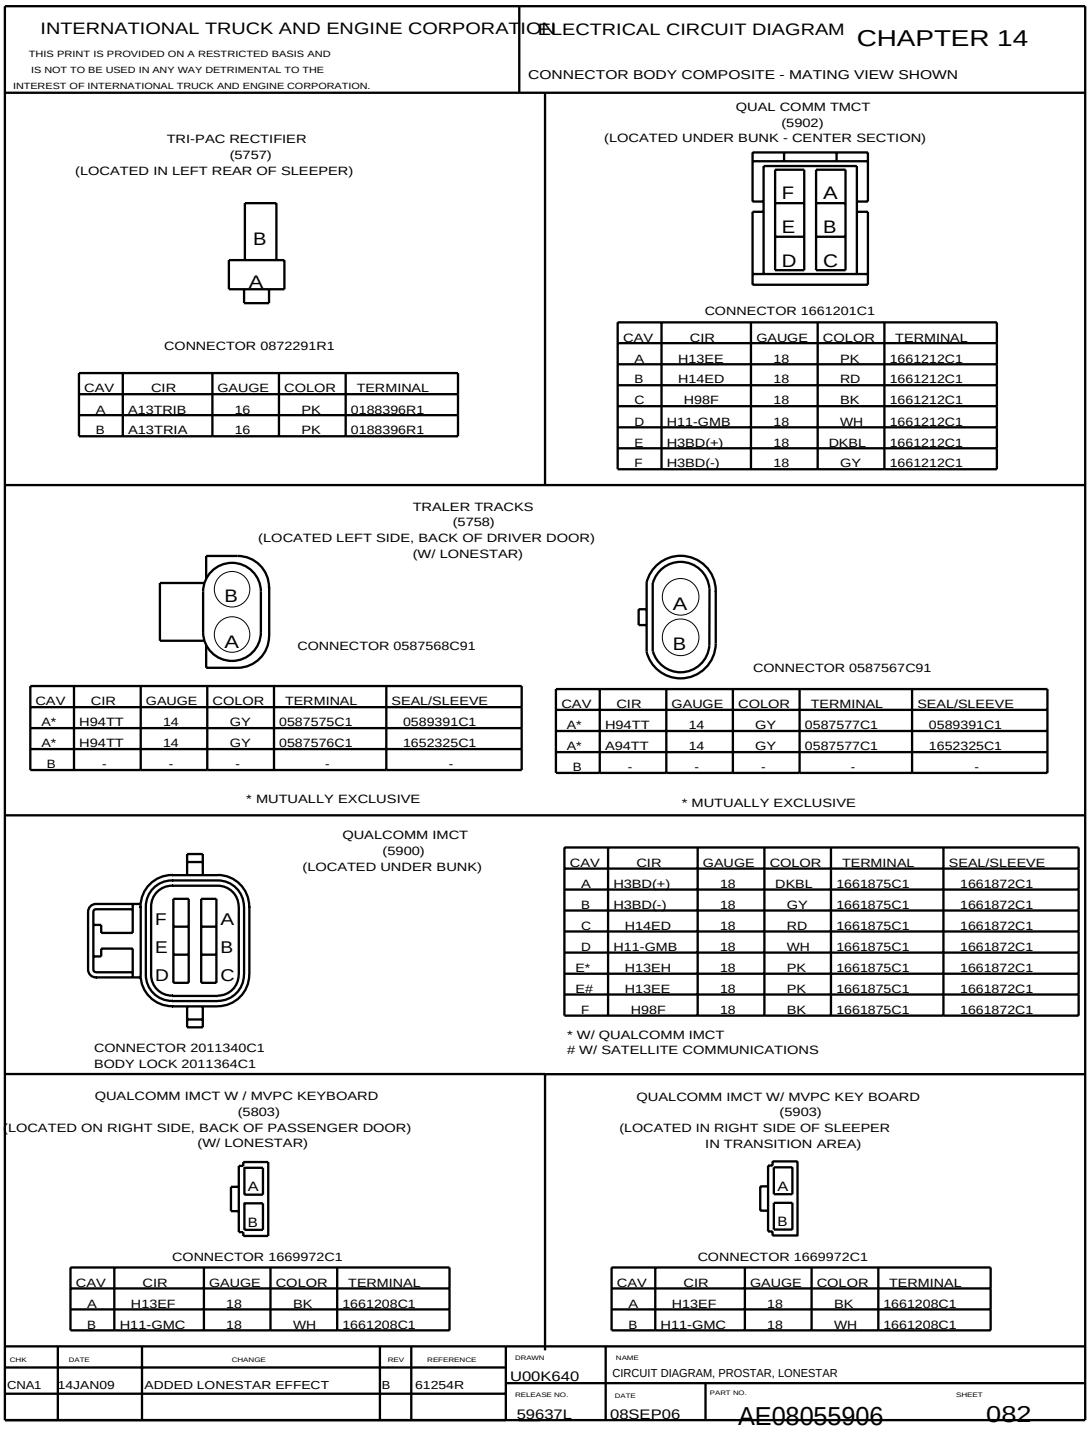


Figure 309 Connector Composites (5757), (5758), (5803), (5900), (5902), (5903)

https://truckmanualshub.com/

14.97. CONNECTOR COMPOSITES (5904/5904M), (5905/5905F), P. 83


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14


CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

MOTIENT MOBILE MAX POWER
(5904 / 5904M)
(LOCATED LEFT SIDE, BACK OF DRIVER DOOR)

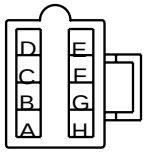

CONNECTOR 2005836C1


CAV	CIR	GAUGE	COLOR	TERMINAL
A	H14EA	18	RD	1661212C1
B	H14EE	18	RD	1661212C1
C	H11-GMC	18	WH	1661212C1
D	H11-GMA	18	WH	1661212C1
E	H13EE	18	PK	1661212C1
F	H3BD(+)	18	DKBL	1661212C1
G	H3BD(-)	18	GY	1661212C1

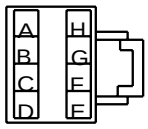

CONNECTOR 2005836C1


CAV	CIR	GAUGE	COLOR	TERMINAL
A	H14EA	18	RD	1661208C1
B	H14EE	18	RD	1661208C1
C	H11-GMC	18	WH	1661208C1
D	H11-GMA	18	WH	1661208C1
E	H13EE	18	PK	1661208C1
F	H3BD(+)	18	DKBL	1661208C1
G	H3BD(-)	18	GY	1661208C1

MOTIENT MOBILE MAX
DISCRETE I/O
(5905 / 5905F)
(LOCATED LEFT SIDE, BACK OF DRIVER DOOR)

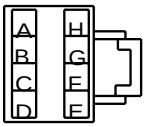

CONNECTOR 2005835C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	-	-	-	-
B	H14EE	18	RD	1661208C1
C	-	-	-	-
D	-	-	-	-
E	-	-	-	-
F	-	-	-	-
G	-	-	-	-
H	-	-	-	-

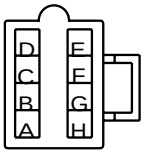

CONNECTOR 2005836C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	-	-	-	-
B	H14EE	18	RD	1661212C1
B*	H98F	18	LTGN	1661208C1
C	-	-	-	-
D	-	-	-	-
E	-	-	-	-
F	-	-	-	-
G	-	-	-	-
H	-	-	-	-

* W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 08SEP06

PART NO. AE08055906 SHEET 083

Figure 310 Connector Composites (5904/5904M), (5905/5905F)

https://truckmanualshub.com/

14.98. CONNECTOR COMPOSITES (5906), (5907), P. 83A


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


QUALCOMM MCT
(5906)
(LOCATED LEFT SIDE,
BACK OF DRIVER DOOR)
(W/ LONESTAR)

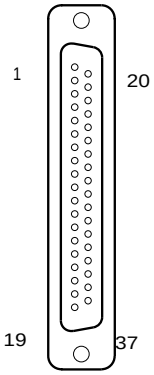

CONNECTOR 2028493C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	-	-	-	-
2	-	-	-	-
3	-	-	-	-
4	-	-	-	-
5	H3BD(-)	20	GY	2028495C1
6	H3BD(+)	20	DKBL	2028495C1
7	-	-	-	-
8	-	-	-	-
9	-	-	-	-
10	-	-	-	-
11	-	-	-	-
12	-	-	-	-
13	-	-	-	-
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-
17	-	-	-	-
18	-	-	-	-
19	-	-	-	-
20	-	-	-	-
21	-	-	-	-
22	-	-	-	-
23	-	-	-	-
24	-	-	-	-
25	-	-	-	-
26	-	-	-	-
27	-	-	-	-
28	-	-	-	-
29	-	-	-	-
30	-	-	-	-
31	-	-	-	-
32	-	-	-	-
33	-	-	-	-
34	-	-	-	-
35	-	-	-	-
36	-	-	-	-
37	H94TT	20	GY	2028495C1

QUALCOMM MCT
(5907)
(LOCATED LEFT SIDE, BACK OF DRIVER DOOR)
(W/ LONESTAR)

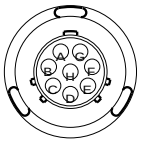

CONNECTOR 2017533C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H14EA	18	RD	2017535C1
B	H14EB	18	RD	2017535C1
C	H11-GMA	18	WH	2017535C1
D	H11-GMC	18	WH	2017535C1
E	H13EE	18	PK	2017535C1
F	H98F	18	BK	2017535C1
G	-	-	-	-
H	-	-	-	-

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	20JAN09	ADDED LONESTAR EFFECT	B	61254R

DRAWN 300152
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 50297W
DATE 18OCT07
PART NO. AE08055906
SHEET 83A

Figure 311 Connector Composites (5906), (5907)

https://truckmanualshub.com/

14.99. CONNECTOR COMPOSITES (5909), (5925/5926), (5927), (5930M), (5940), P. 83B


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

DRIVER TECH
(5909)
(LOCATED UNDER BUNK)
(W/ LONESTAR)

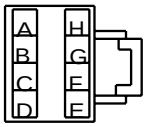

CONNECTOR 2005835C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H14ED	18	RD	1661208C1
C	H11-GMB	18	WH	1661208C1
E	H13EE	18	PK	1661208C1
F	H3BD(+)	18	DKBL	1661208C1
G	H3BD(-)	18	GY	1661208C1


INVERTER CONTROLER
(5925 / 5926)
(LOCATED ON LEFT SIDE, WALL OF SLEEPER)
(W/ LONESTAR)



CONNECTOR 3822477C91

CAV	CIR	GAUGE	COLOR	TERMINAL
1	HX0	8	BK	ASSY
1	HX1	24	-	ASSY
2	HX2	24	-	ASSY
3	HX3	24	-	ASSY
4	HX4	24	-	ASSY
5	HX5	24	-	ASSY
6	HX6	24	-	ASSY
7	HX7	24	-	ASSY
8	HX8	24	-	ASSY

TRIP MASTER
(5927)
(LOCATED UNDER BUNK - CENTER SECTION)

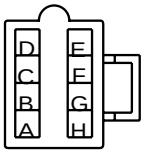

CONNECTOR 2005836C1
BODY LOCK 2006504C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	H98A	18	BK	1661212C1
B	H98B	18	BK	1661212C1
C	H13SD	18	PK	1661212C1
D	H11-GSD	18	WH	1661212C1
E	H14SD	18	RD	1661212C1
F	H50S	18	YL	1661212C1
G	H70E	18	OR	1661212C1
H	-	-	-	-

J1939
(5930M)
(LOCATED UNDER BUNK - RIGHT SIDE)



CONNECTOR 1667741C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	H5T(+)	18	YL	1661875C1	3568570C1
B	PLUG	-	-	2025431C1	-
C	H5T(-)	18	GN	1661875C1	3568570C1

XATA MODULE
(5940)
(LOCATED UNDER BUNK - CENTER SECTION)



CONNECTOR 1667305C1
BODY LOCK 1661263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	JE14EA	18	RD	1661261C1
B	JE11-GMD	18	WH	1661261C1
C	JE3BE(+)	18	DKBL	1661261C1
D	JE3BE(-)	18	GY	1661261C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	INITIAL RELEASE	A	61254R

DRAWN 300638
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 61254R
DATE 15SEP08
PART NO. AE08055906
SHEET 83B

Figure 312 Connector Composites (5909), (5925/5926), (5927), (5930M), (5940)

https://truckmanualshub.com/

14.100. CONNECTOR COMPOSITE (6000), P. 84


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

ECM CONNECTOR
(6000)
(LOCATED ON LEFT SIDE OF ENGINE)

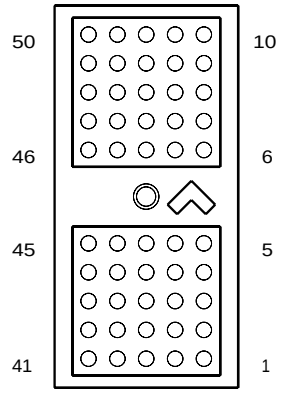

CONNECTOR 3555048C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	PLUG	-	-	0453133C1
2	PLUG	-	-	0453133C1
3	PLUG	-	-	0453133C1
4	PLUG	-	-	0453133C1
5	PLUG	-	-	0453133C1
6	PLUG	-	-	0453133C1
7	K95E	18	TN	3555249C1
8	PLUG	-	-	0453133C1
9	K99B	18	VT	3555249C1
10*	K3BA(+)	18	DKBL	3555249C1
10	K3BB(+)	18	DKBL	3555249C1
11	PLUG	-	-	0453133C1
12	PLUG	-	-	0453133C1
13	PLUG	-	-	0453133C1
14	PLUG	-	-	0453133C1
15	PLUG	-	-	0453133C1
16	PLUG	-	-	0453133C1
17	PLUG	-	-	0453133C1
18	PLUG	-	-	0453133C1
19#	K41A	16	TN	3555048C1
20*	K3BA(-)	18	GY	3555249C1
20	K3BB(-)	18	GY	3555249C1
21	K97PA	18	VT	3555249C1
22	K97C	18	VT	3555249C1
23	K97B	18	VT	3555249C1
24	PLUG	-	-	0453133C1
25	PLUG	-	-	0453133C1
26	PLUG	-	-	0453133C1
27	K47	16	GY	3555249C1
28	K34E	16	TN	3555249C1
29	PLUG	-	-	0453133C1
30	PLUG	-	-	0453133C1
31	K95B	18	TN	3555249C1
32	K97PB	18	WH	3555249C1
33	K95-GA	18	WH	3555249C1
34	PLUG	-	-	0453133C1
35	K97M	18	VT	3555249C1
36	K47A	16	GY	3555249C1
37	K95A	18	TN	3555249C1
38	K23	16	TN	3555249C1
39	K97FA	18	VT	3555249C1
40	K21	16	TN	3555249C1
41	PLUG	-	-	0453133C1
42	K34A1	16	TN	3555249C1
43	PLUG	-	-	0453133C1
44	PLUG	-	-	0453133C1
45	PLUG	-	-	0453133C1
46	K5S(+)	18	YL	3555249C1
47	K5S(-)	18	GN	3555249C1
48	PLUG	-	-	0453133C1
49	PLUG	-	-	0453133C1
50	K95C	18	TN	3555249C1

* W/ MANUAL XMSN
W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 08SEP06
PART NO. AE08055906
SHEET 084

Figure 313 Connector Composite (6000)

https://truckmanualshub.com/

14.101. CONNECTOR COMPOSITE (6010), P. 84A


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

ECM CONNECTOR
(6010)
(LOCATED ON LEFT SIDE OF ENGINE)
(ONLY FOR CAT ENGINE)

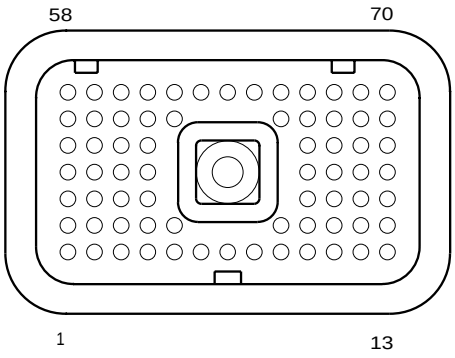

CONNECTOR 3526965C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	PLUG	-	-	2023143C1
2	K34B	16	TN	3526966C1
3	PLUG	-	-	2023143C1
4	K97C	18	VT	3526966C1
5	K97BA	18	VT	3526966C1
6	PLUG	-	-	2023143C1
7	PLUG	-	-	2023143C1
8	K3BB(+)	18	DKBL	3526966C1
9	K3BB(-)	18	GY	3526966C1
10	K21	16	TN	3526966C1
11	PLUG	-	-	2023143C1
12	PLUG	-	-	2023143C1
13	PLUG	-	-	2023143C1
14	PLUG	-	-	2023143C1
15	PLUG	-	-	2023143C1
16	PLUG	-	-	2023143C1
17	K41A	16	TN	3526966C1
18	K41-G	16	TN	3526966C1
19	PLUG	-	-	2023143C1
20	PLUG	-	-	2023143C1
21@	K23	16	TN	3526966C1
21	K23	16	TN	3526966C1
22	PLUG	-	-	2023143C1
23	PLUG	-	-	2023143C1
24	PLUG	-	-	2023143C1
25	PLUG	-	-	2023143C1
26	PLUG	-	-	2023143C1
27	PLUG	-	-	2023143C1
28	PLUG	-	-	2023143C1

CAV	CIR	GAUGE	COLOR	TERMINAL
29	PLUG	-	-	2023143C1
30	PLUG	-	-	2023143C1
31	PLUG	-	-	2023143C1
32	K47	16	GY	3526966C1
33	K47A	16	GY	3526966C1
34	K5S(-)	20	GN	3547816C1
35	PLUG	-	-	2023143C1
36	PLUG	-	-	2023143C1
37	PLUG	-	-	2023143C1
38	PLUG	-	-	2023143C1
39	PLUG	-	-	2023143C1
40	PLUG	-	-	2023143C1
41	PLUG	-	-	2023143C1
42	PLUG	-	-	2023143C1
43	PLUG	-	-	2023143C1
44	PLUG	-	-	2023143C1
45	PLUG	-	-	2023143C1
46	PLUG	-	-	2023143C1
47	PLUG	-	-	2023143C1
48	K97DA	14	VT	3526966C1
49	K34C	16	TN	3526966C1
50	K5S(+)	20	YL	3547816C1
51	PLUG	-	-	2023143C1
52	K97DB	14	VT	3526966C1
53	K97DC	14	VT	3526966C1
54	K34D	16	TN	3526966C1
55	K97DD	14	RD	3526966C1
56	PLUG	-	-	2023143C1
57	PLUG	-	-	2023143C1
58	PLUG	-	-	2023143C1
59	PLUG	-	-	2023143C1
60	PLUG	-	-	2023143C1
61	PLUG	-	-	2023143C1
62	PLUG	-	-	2023143C1
63	K10A-G	14	WH	3526966C1
64	PLUG	-	-	2023143C1
65	K10B-G	14	WH	3526966C1
66	K99B	18	VT	3526966C1
67	10C-G	14	WH	3526966C1
68	PLUG	-	-	2023143C1
69	K10-G	14	WH	3526966C1
70	K97F	18	VT	3526966C1

@ W/ ON/OFF FAN

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	REVISED AND REDRAWN	B	61254R	300749	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 61406U	DATE 17JUN08

PART NO. AE08055906 SHEET 84A

Figure 314 Connector Composite (6010)

https://truckmanualshub.com/

14.102. CONNECTOR COMPOSITES (6001), (6018), (6019), P. 85


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


ECM POWER CONNECTOR
(6001)
(LOCATED ON LEFT SIDE OF ENGINE)

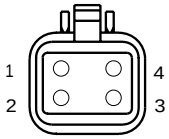

CONNECTOR 3557533C1
BODY LOCK 3557539C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	K10-G	12	WH	3557534C1
2	PLUG	-	-	0453133C1
3	K14AC	12	RD	0505040C1
4	K14AD	12	RD	0505040C1


EIM CONNECTOR
(6019)
(LOCATED ON LEFT SIDE OF ENGINE)
(W / PROSTAR)

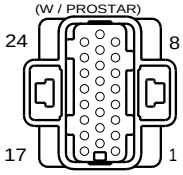

CONNECTOR 3803078C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	PLUG	-	-	3562316C1
2	K23C	18	TN	3562314C1
3	PLUG	-	-	3562316C1
4	PLUG	-	-	3562316C1
5	PLUG	-	-	3562316C1
6	K98YL5	18	YL	3562314C1
7	PLUG	-	-	3562316C1
8	PLUG	-	-	3562316C1
9	PLUG	-	-	3562316C1
10	K92A6	18	TN	3562314C1
11	PLUG	-	-	3562316C1
12	PLUG	-	-	3562316C1
13	K98GN5	18	GN	3562314C1
14	PLUG	-	-	3562316C1
15	PLUG	-	-	3562316C1
16	PLUG	-	-	3562316C1
17	PLUG	-	-	3562316C1
18	K21B1	18	TN	3562314C1
19	PLUG	-	-	3562316C1
20	PLUG	-	-	3562316C1
21	PLUG	-	-	3562316C1
22	PLUG	-	-	3562316C1
23	PLUG	-	-	3562316C1
24	PLUG	-	-	3562316C1

EIM CONNECTOR
(6018)
(LOCATED ON LEFT SIDE OF ENGINE)
(W / PROSTAR)

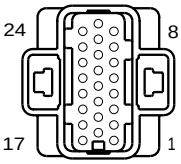

CONNECTOR 3803077C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	PLUG	-	-	3562316C1
2	PLUG	-	-	3562316C1
3	PLUG	-	-	3562316C1
4	PLUG	-	-	3562316C1
5	K92A2	18	TN	3562314C1
6	K34-GB	18	WH	3562314C1
7	K41	16	TN	3562315C1
8	PLUG	-	-	3562316C1
9	PLUG	-	-	3562316C1
10	PLUG	-	-	3562316C1
11	PLUG	-	-	3562316C1
12	PLUG	-	-	3562316C1
13	K21B3	18	TN	3562314C1
14	K34BA	18	TN	3562314C1
15	PLUG	-	-	3562316C1
16	K92A1	18	TN	3562314C1
17	K21TN1	18	TN	3562314C1
18*	K23	18	TN	3562314C1
18@	K23	16	TN	3562315C1
19	PLUG	-	-	3562316C1
20	K92A5	18	TN	3562314C1
21	PLUG	-	-	3562316C1
22	PLUG	-	-	3562316C1
23	PLUG	-	-	3562316C1
24	PLUG	-	-	3562316C1

* W/ VARIABLE SPEED FAN
@ W/ TWO SPEED FAN


CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 08SEP06

PART NO. AE08055906 SHEET 085

Figure 315 Connector Composites (6001), (6018), (6019)

https://truckmanualshub.com/

14.103. CONNECTOR COMPOSITES (6020), (6021), (6033), P. 85A

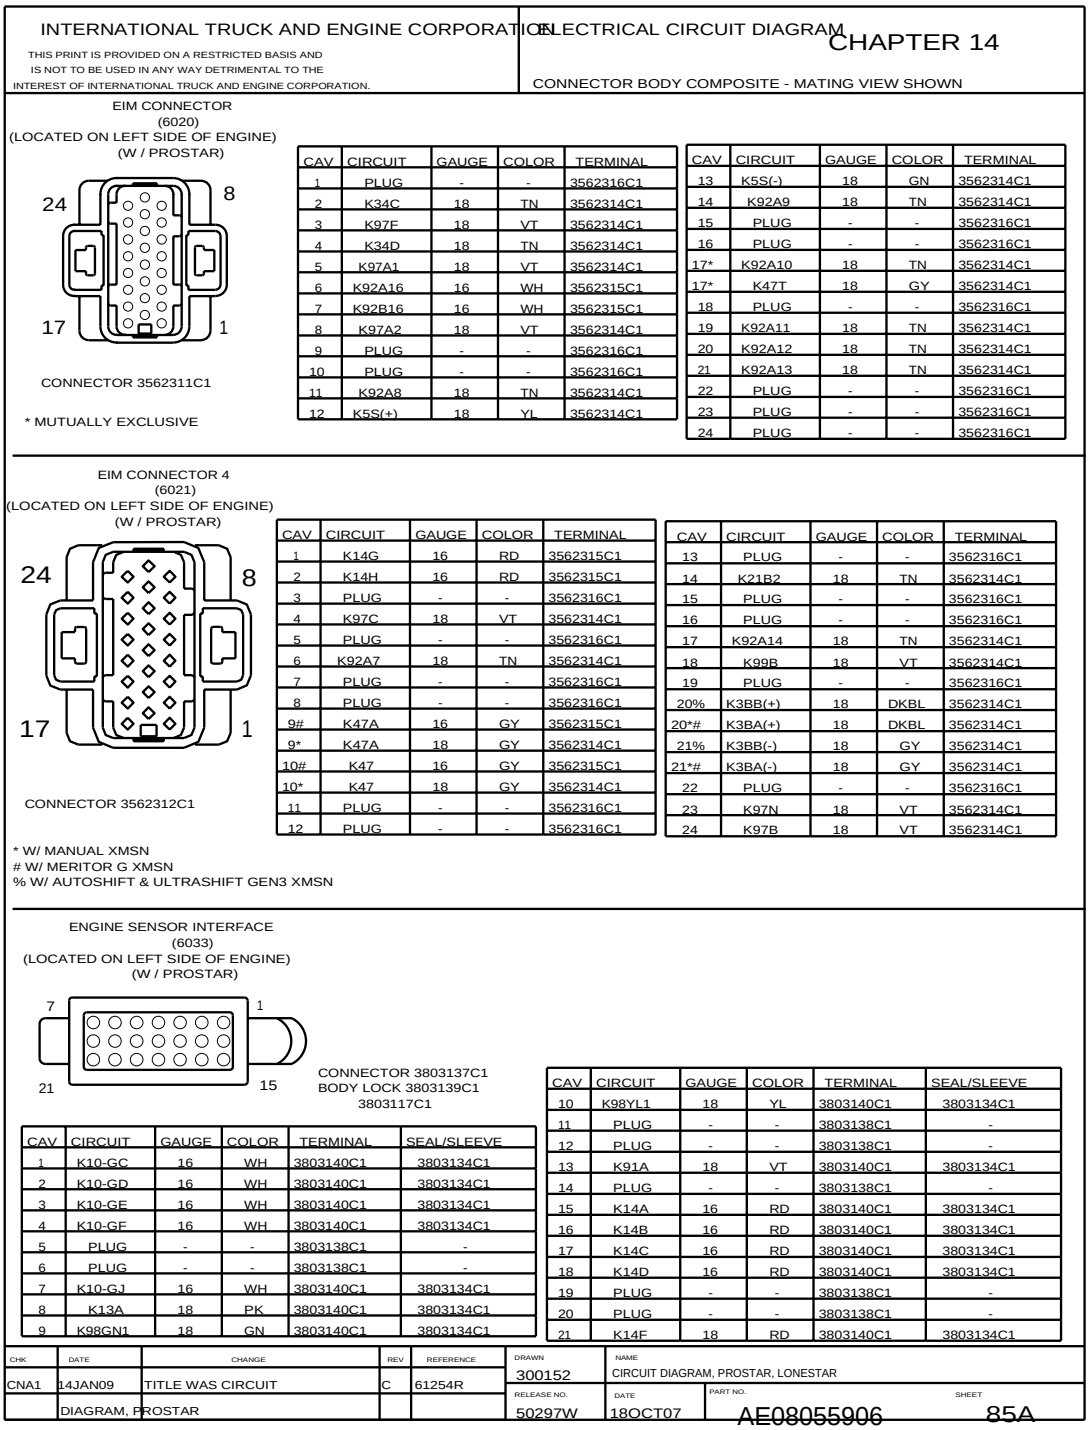

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

EIM CONNECTOR
(6020)
(LOCATED ON LEFT SIDE OF ENGINE)
(W / PROSTAR)

CONNECTOR 3562311C1

* MUTUALLY EXCLUSIVE

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	PLUG	-	-	3562316C1
2	K34C	18	TN	3562314C1
3	K97F	18	VT	3562314C1
4	K34D	18	TN	3562314C1
5	K97A1	18	VT	3562314C1
6	K92A16	16	WH	3562315C1
7	K92B16	16	WH	3562315C1
8	K97A2	18	VT	3562314C1
9	PLUG	-	-	3562316C1
10	PLUG	-	-	3562316C1
11	K92A8	18	TN	3562314C1
12	K5S(+)	18	YL	3562314C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
13	K5S(-)	18	GN	3562314C1
14	K92A9	18	TN	3562314C1
15	PLUG	-	-	3562316C1
16	PLUG	-	-	3562316C1
17*	K92A10	18	TN	3562314C1
17*	K47T	18	GY	3562314C1
18	PLUG	-	-	3562316C1
19	K92A11	18	TN	3562314C1
20	K92A12	18	TN	3562314C1
21	K92A13	18	TN	3562314C1
22	PLUG	-	-	3562316C1
23	PLUG	-	-	3562316C1
24	PLUG	-	-	3562316C1

EIM CONNECTOR 4
(6021)
(LOCATED ON LEFT SIDE OF ENGINE)
(W / PROSTAR)

CONNECTOR 3562312C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	K14G	16	RD	3562315C1
2	K14H	16	RD	3562315C1
3	PLUG	-	-	3562316C1
4	K97C	18	VT	3562314C1
5	PLUG	-	-	3562316C1
6	K92A7	18	TN	3562314C1
7	PLUG	-	-	3562316C1
8	PLUG	-	-	3562316C1
9#	K47A	16	GY	3562315C1
9*	K47A	18	GY	3562314C1
10#	K47	16	GY	3562315C1
10*	K47	18	GY	3562314C1
11	PLUG	-	-	3562316C1
12	PLUG	-	-	3562316C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
13	PLUG	-	-	3562316C1
14	K21B2	18	TN	3562314C1
15	PLUG	-	-	3562316C1
16	PLUG	-	-	3562316C1
17	K92A14	18	TN	3562314C1
18	K99B	18	VT	3562314C1
19	PLUG	-	-	3562316C1
20%	K3BB(+)	18	DKBL	3562314C1
20*#	K3BA(+)	18	DKBL	3562314C1
21%	K3BB(-)	18	GY	3562314C1
21*#	K3BA(-)	18	GY	3562314C1
22	PLUG	-	-	3562316C1
23	K97N	18	VT	3562314C1
24	K97B	18	VT	3562314C1

* W/ MANUAL XMSN
W/ MERITOR G XMSN
% W/ AUTOSHIFT & ULTRASHIFT GEN3 XMSN

ENGINE SENSOR INTERFACE
(6033)
(LOCATED ON LEFT SIDE OF ENGINE)
(W / PROSTAR)

CONNECTOR 3803137C1
BODY LOCK 3803139C1
3803117C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	K10-GC	16	WH	3803140C1	3803134C1
2	K10-GD	16	WH	3803140C1	3803134C1
3	K10-GE	16	WH	3803140C1	3803134C1
4	K10-GF	16	WH	3803140C1	3803134C1
5	PLUG	-	-	3803138C1	-
6	PLUG	-	-	3803138C1	-
7	K10-GJ	16	WH	3803140C1	3803134C1
8	K13A	18	PK	3803140C1	3803134C1
9	K98GN1	18	GN	3803140C1	3803134C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
10	K98YL1	18	YL	3803140C1	3803134C1
11	PLUG	-	-	3803138C1	-
12	PLUG	-	-	3803138C1	-
13	K91A	18	VT	3803140C1	3803134C1
14	PLUG	-	-	3803138C1	-
15	K14A	16	RD	3803140C1	3803134C1
16	K14B	16	RD	3803140C1	3803134C1
17	K14C	16	RD	3803140C1	3803134C1
18	K14D	16	RD	3803140C1	3803134C1
19	PLUG	-	-	3803138C1	-
20	PLUG	-	-	3803138C1	-
21	K14F	18	RD	3803140C1	3803134C1


CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	TITLE WAS CIRCUIT DIAGRAM, PROSTAR	C	61254R

DRAWN 300152
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 50297W
DATE 18OCT07
PART NO. AE08055906
SHEET 85A

Figure 316 Connector Composites (6020), (6021), (6033)

https://truckmanualshub.com/

14.104. CONNECTOR COMPOSITES (6200), (6201), (6202), (6260VH), (6260VL), (6260VM), (6304), (6316M), P. 85B

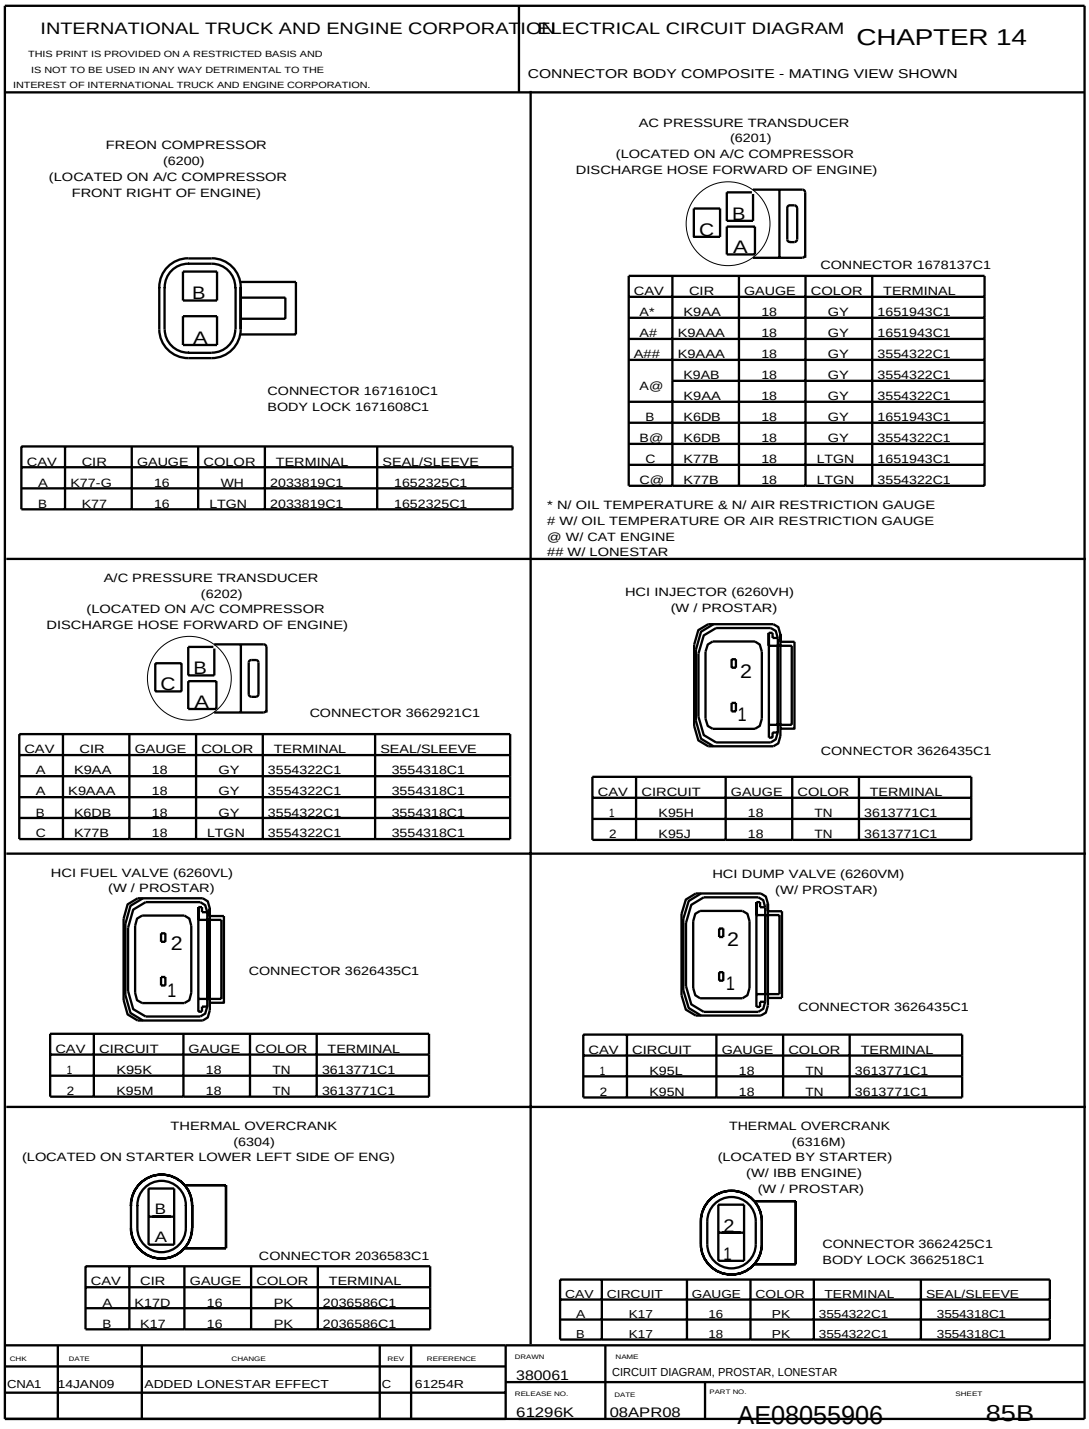

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FREON COMPRESSOR
(6200)
(LOCATED ON A/C COMPRESSOR FRONT RIGHT OF ENGINE)

B
A

CONNECTOR 1671610C1
BODY LOCK 1671608C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K77-G	16	WH	2033819C1	1652325C1
B	K77	16	LTGN	2033819C1	1652325C1

AC PRESSURE TRANSDUCER
(6201)
(LOCATED ON A/C COMPRESSOR DISCHARGE HOSE FORWARD OF ENGINE)

C B A

CONNECTOR 1678137C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A*	K9AA	18	GY	1651943C1
A#	K9AAA	18	GY	1651943C1
A##	K9AAA	18	GY	3554322C1
A@	K9AB	18	GY	3554322C1
	K9AA	18	GY	3554322C1
B	K6DB	18	GY	1651943C1
B@	K6DB	18	GY	3554322C1
C	K77B	18	LTGN	1651943C1
C@	K77B	18	LTGN	3554322C1

* N/ OIL TEMPERATURE & N/ AIR RESTRICTION GAUGE
W/ OIL TEMPERATURE OR AIR RESTRICTION GAUGE
@ W/ CAT ENGINE
W/ LONESTAR

A/C PRESSURE TRANSDUCER
(6202)
(LOCATED ON A/C COMPRESSOR DISCHARGE HOSE FORWARD OF ENGINE)

C B A

CONNECTOR 3662921C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K9AA	18	GY	3554322C1	3554318C1
A	K9AAA	18	GY	3554322C1	3554318C1
B	K6DB	18	GY	3554322C1	3554318C1
C	K77B	18	LTGN	3554322C1	3554318C1

HCI INJECTOR (6260VH)
(W / PROSTAR)

2
1

CONNECTOR 3626435C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	K95H	18	TN	3613771C1
2	K95J	18	TN	3613771C1

HCI FUEL VALVE (6260VL)
(W / PROSTAR)

2
1

CONNECTOR 3626435C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	K95K	18	TN	3613771C1
2	K95M	18	TN	3613771C1

HCI DUMP VALVE (6260VM)
(W/ PROSTAR)

2
1

CONNECTOR 3626435C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	K95L	18	TN	3613771C1
2	K95N	18	TN	3613771C1

THERMAL OVERCRANK
(6304)
(LOCATED ON STARTER LOWER LEFT SIDE OF ENG)

B
A

CONNECTOR 2036583C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	K17D	16	PK	2036586C1
B	K17	16	PK	2036586C1

THERMAL OVERCRANK
(6316M)
(LOCATED BY STARTER)
(W/ IBB ENGINE)
(W / PROSTAR)

2
1

CONNECTOR 3662425C1
BODY LOCK 3662518C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K17	16	PK	3554322C1	3554318C1
B	K17	18	PK	3554322C1	3554318C1


CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R

DRAWN 380061
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 61296K
DATE 08APR08
PART NO. AE08055906
SHEET 85B

Figure 317 Connector Composites (6200), (6201), (6202), (6260VH), (6260VL), (6260VM), (6304), (6316M)

https://truckmanualshub.com/

14.105. CONNECTOR COMPOSITES (6400), (6401), (6402), (6403), (6406/6402), P. 86

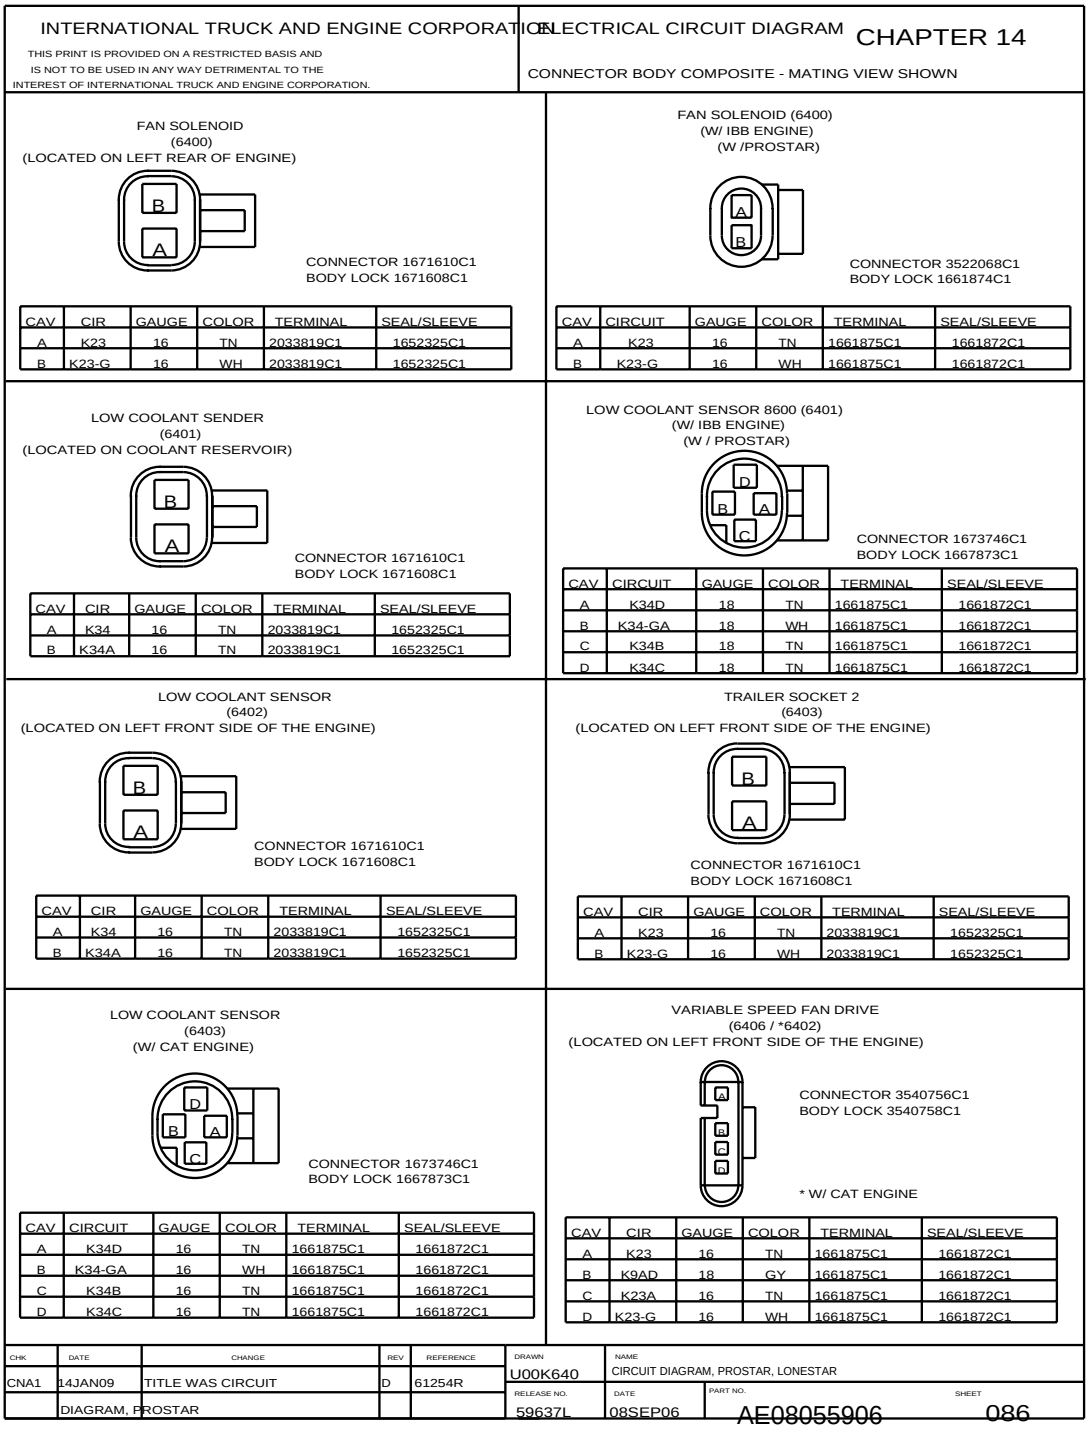

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K23	16	TN	2033819C1	1652325C1
B	K23-G	16	WH	2033819C1	1652325C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K23	16	TN	1661875C1	1661872C1
B	K23-G	16	WH	1661875C1	1661872C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K34	16	TN	2033819C1	1652325C1
B	K34A	16	TN	2033819C1	1652325C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K34D	18	TN	1661875C1	1661872C1
B	K34-GA	18	WH	1661875C1	1661872C1
C	K34B	18	TN	1661875C1	1661872C1
D	K34C	18	TN	1661875C1	1661872C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K34	16	TN	2033819C1	1652325C1
B	K34A	16	TN	2033819C1	1652325C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K23	16	TN	2033819C1	1652325C1
B	K23-G	16	WH	2033819C1	1652325C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K34D	16	TN	1661875C1	1661872C1
B	K34-GA	16	WH	1661875C1	1661872C1
C	K34B	16	TN	1661875C1	1661872C1
D	K34C	16	TN	1661875C1	1661872C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K23	16	TN	1661875C1	1661872C1
B	K9AD	18	GY	1661875C1	1661872C1
C	K23A	16	TN	1661875C1	1661872C1
D	K23-G	16	WH	1661875C1	1661872C1

Figure 318 Connector Composites (6400), (6401), (6402), (6403), (6406/6402)

https://truckmanualshub.com/

14.106. CONNECTOR COMPOSITES (6420), (6550), (6551), (6561), (6650), (6700), (6701), P. 86A

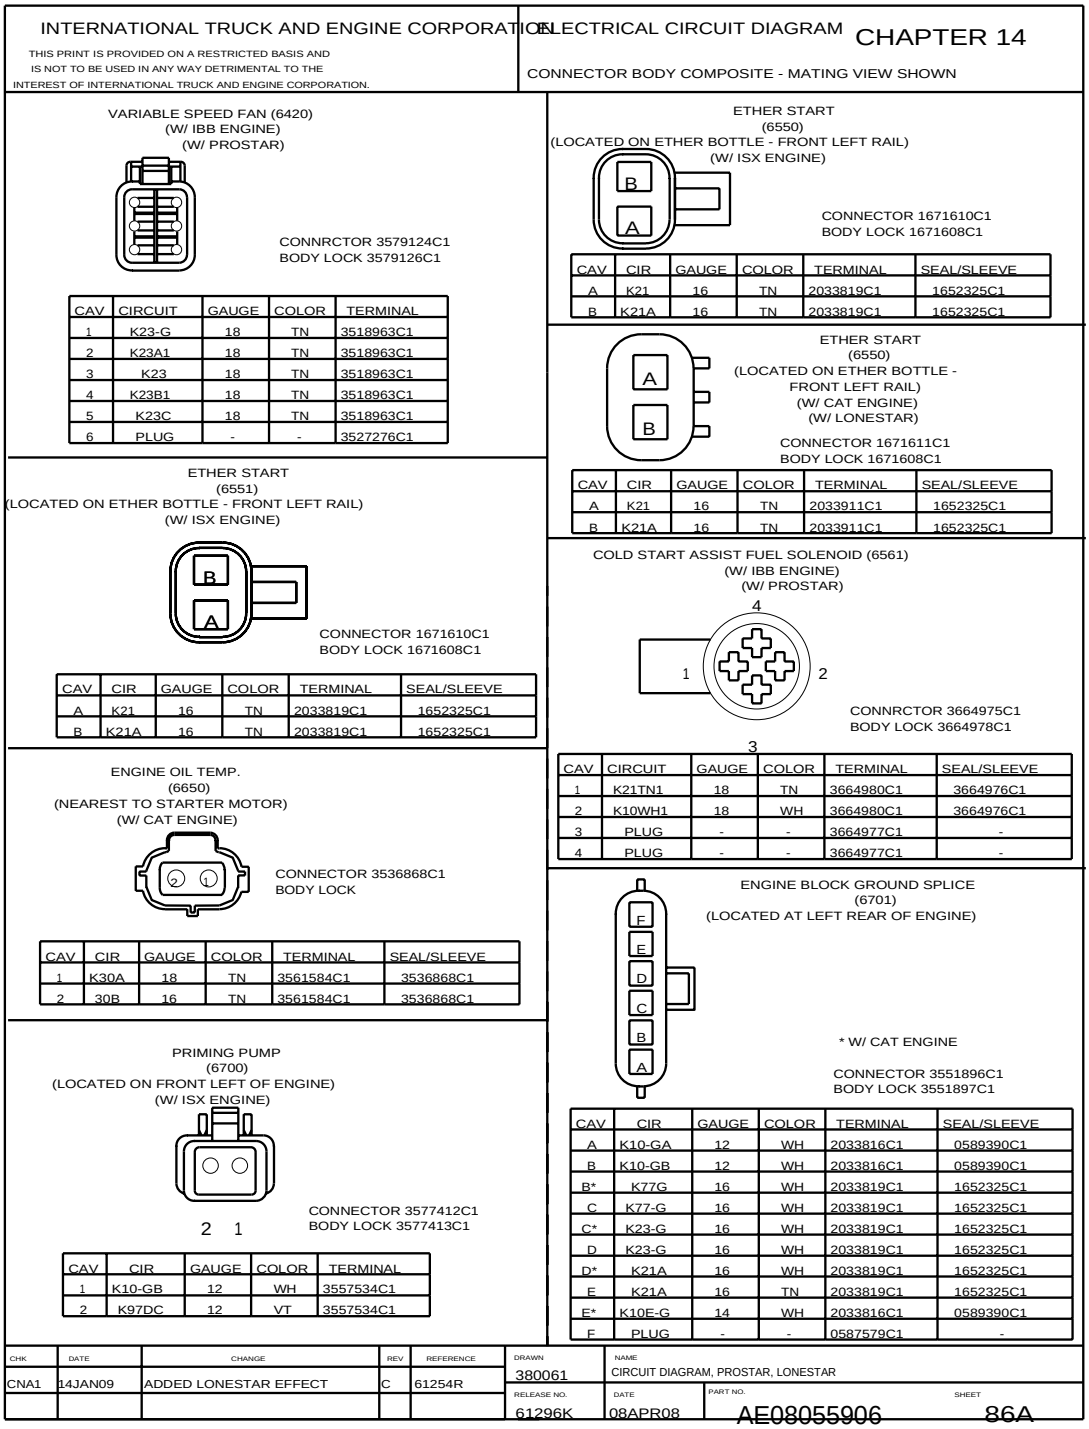


Figure 319 Connector Composites (6420), (6550), (6551), (6561), (6650), (6700), (6701)

https://truckmanualshub.com/

14.107. CONNECTOR COMPOSITES (6702), (6703), (6703/6703A), (6704), (6704A), P. 87

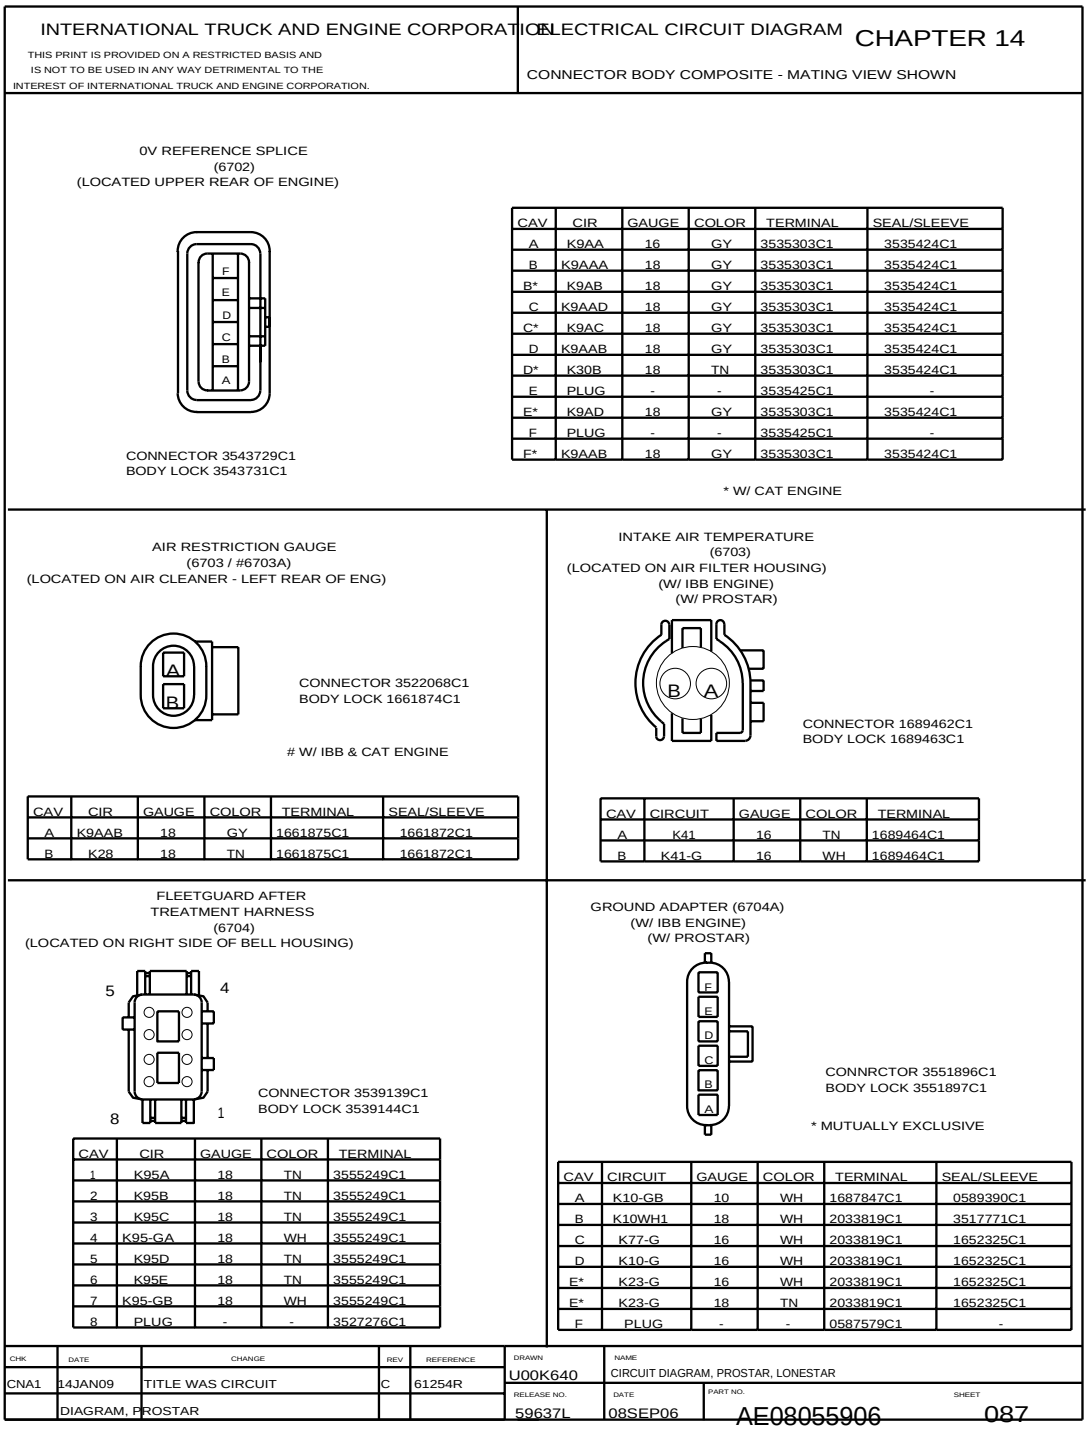


Figure 320 Connector Composites (6702), (6703), (6703/6703A), (6704), (6704A)

https://truckmanualshub.com/

14.108. CONNECTOR COMPOSITES (6705), (6706), (6707), P. 88

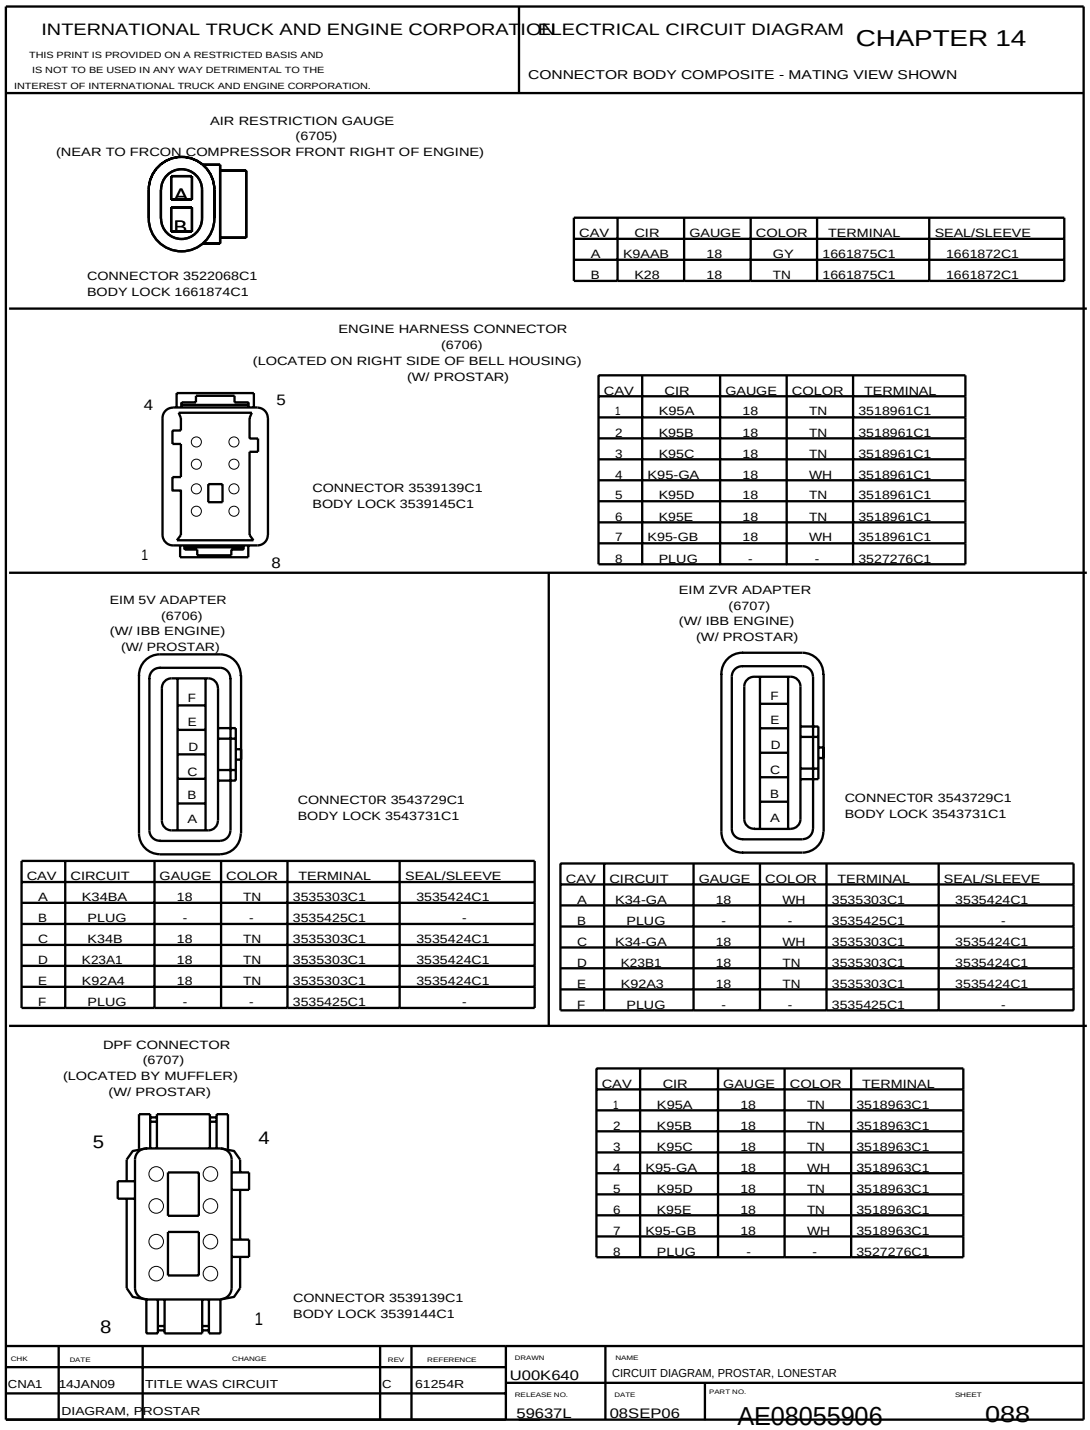


Figure 321 Connector Composites (6705), (6706), (6707)

https://truckmanualshub.com/

14.109. CONNECTOR COMPOSITES (6708), (6709), (6712), (6713), (6714), P. 88A

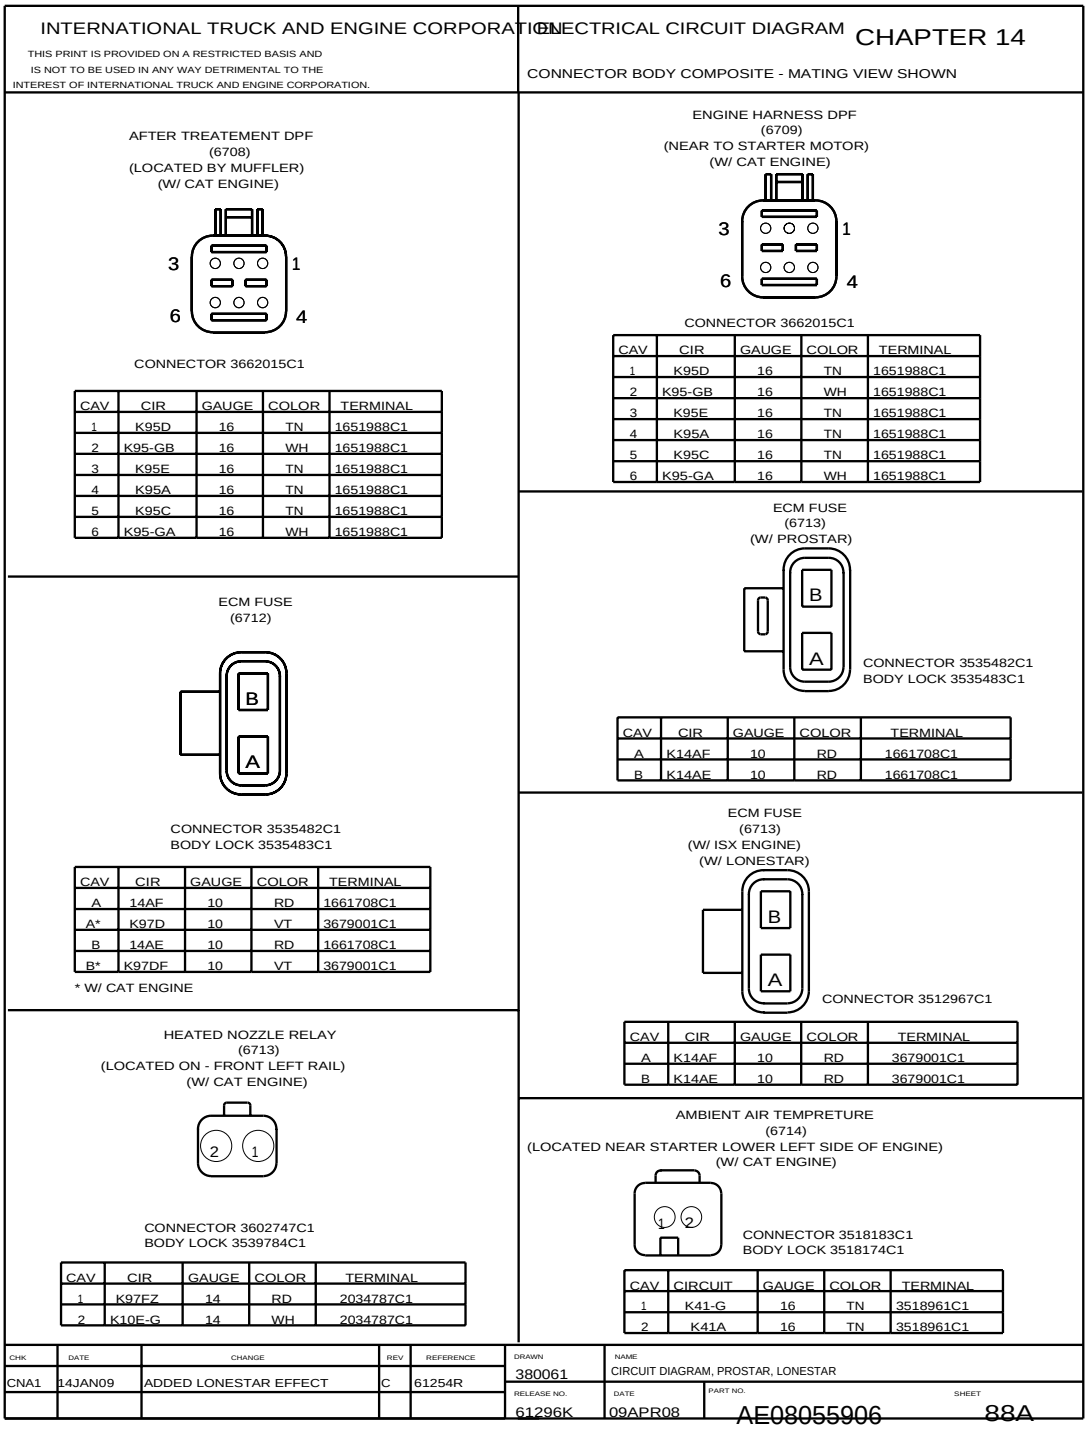


Figure 322 Connector Composites (6708), (6709), (6712), (6713), (6714)

https://truckmanualshub.com/

14.110. CONNECTOR COMPOSITES (6715), (6720/6721), (6730), (6731), P. 88B

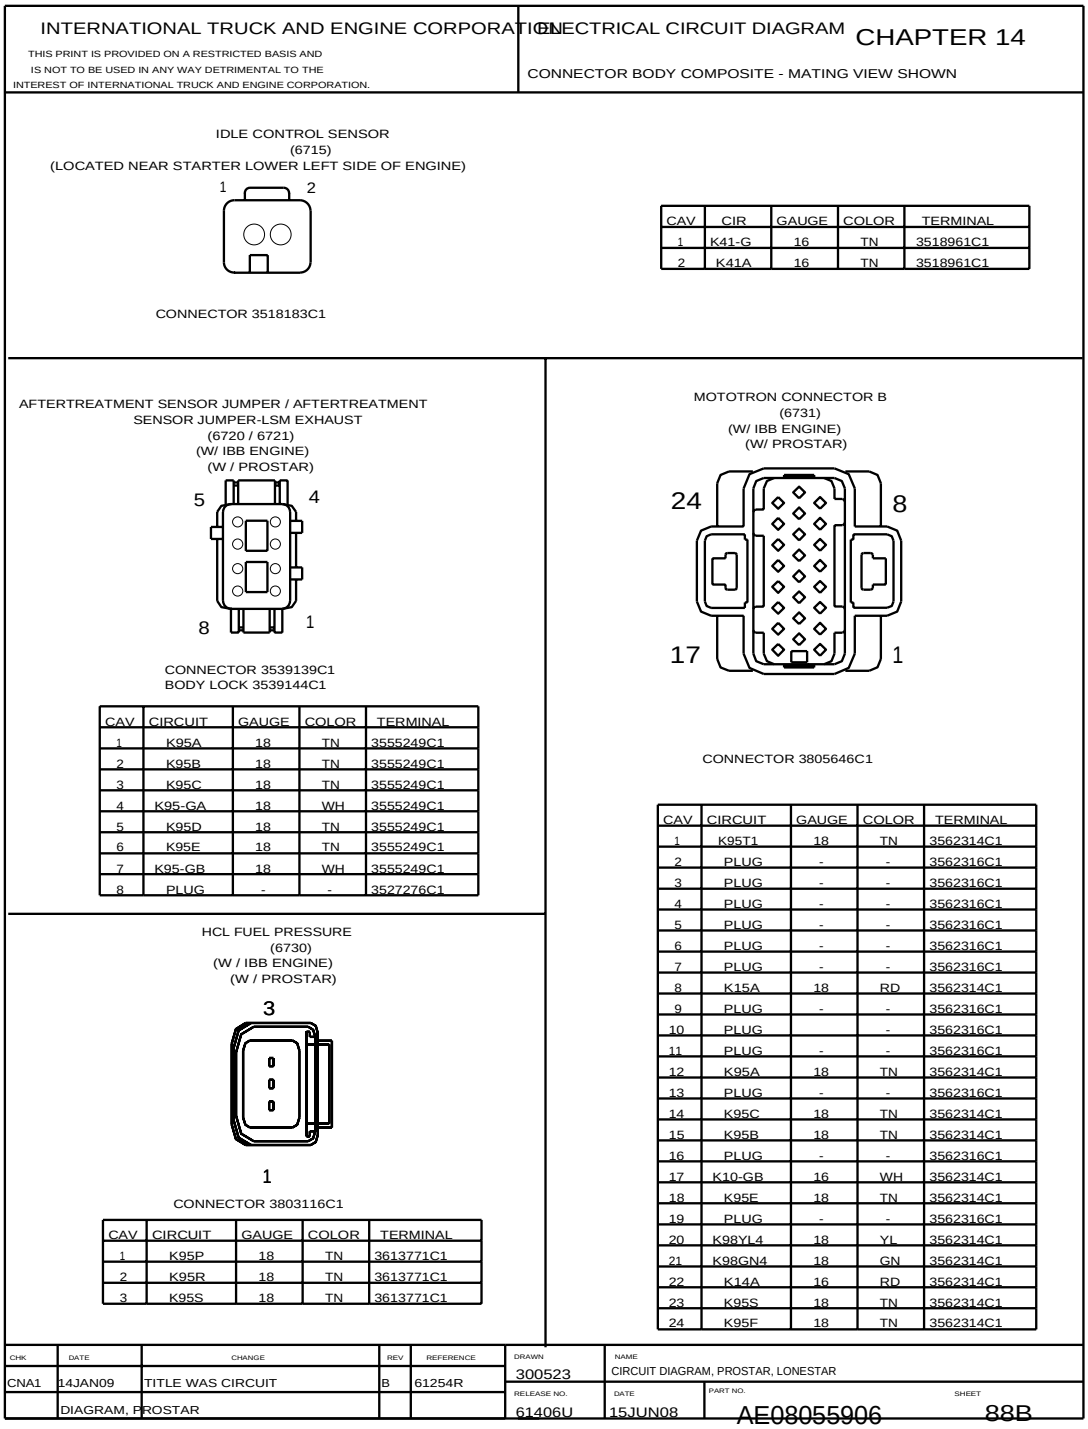


Figure 323 Connector Composites (6715), (6720/6721), (6730), (6731)

https://truckmanualshub.com/

14.111. CONNECTOR COMPOSITES (6732), (7103), (7104), P. 89


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

MOTOTRON CONNECTOR A (6732)
(W/ IBB ENGINE)
(W/ PROSTAR)

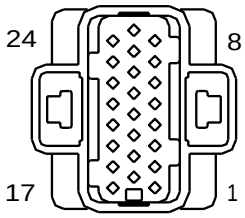

CONNECTOR 3805644C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
1	K95L	18	TN	3562314C1
2	K95K	18	TN	3562314C1
3	PLUG	-	-	3562316C1
4	PLUG	-	-	3562316C1
5	PLUG	-	-	3562316C1
6	PLUG	-	-	3562316C1
7	PLUG	-	-	3562316C1
8	PLUG	-	-	3562316C1
9	PLUG	-	-	3562316C1
10	PLUG		-	3562316C1
11	PLUG	-	-	3562316C1
12	PLUG	-	-	3562316C1
13	PLUG	-	-	3562316C1
14	PLUG	-	-	3562316C1
15	PLUG	-	-	3562316C1
16	K10-GA	16	WH	3562315C1
17	K95H	18	TN	3562314C1
18	K95J	18	TN	3562314C1
19	PLUG	-	-	3562316C1
20	PLUG	-	-	3562316C1
21	PLUG	-	-	3562316C1
22	PLUG	-	-	3562316C1
23	K14B	16	RD	3562315C1
24	PLUG	-	-	3562316C1


FREEDOMLINE XMSN
J1939 CONNECTION
(7103)
(LOCATED ON TOP OF TRANSMISSION)



CONNECTOR 3602454C1
BODY LOCK 1655705C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	K5V(+)	18	YL	1680206C1
B	K5V(-)	18	GN	1680206C1
C	PLUG	-	-	0453133C1

FREEDOMLINE XMSN
MAIN CONNECTION
(7104)
(LOCATED ON LEFT SIDE OF TRANSMISSION)

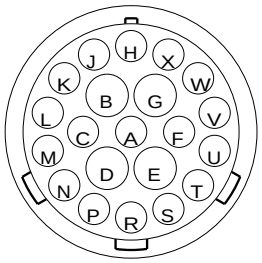

* W/ CAT ENGINE
W/ PROSTAR

CONNECTOR 3573145C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	K13A	16	PK	1680205C1
B	K14AA	12	RD	3557534C1
C	K17-GC	16	WH	1680205C1
D	K10-GHA	12	WH	3557534C1
E	K10-GHB	12	WH	3557534C1
F#	K71-G	16	OR	1680205C1
F*	K71-G	16	WH	1680205C1
G	K14AB	12	RD	3557534C1
H	K3BC(+)	16	DKBL	1680205C1
J	K3BC(-)	16	GY	1680205C1
K	PLUG	-	-	0453133C1
L	PLUG	-	-	0453133C1
M	PLUG	-	-	0453133C1
N	PLUG	-	-	0453133C1
P	PLUG	-	-	0453133C1
R	PLUG	-	-	0453133C1
S	PLUG	-	-	0453133C1
T	PLUG	-	-	0453133C1
U	PLUG	-	-	0453133C1
V	PLUG	-	-	0453133C1
W	PLUG	-	-	0453133C1
X	PLUG	-	-	0453133C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	D	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 59637L	DATE 08SEP06

PART NO. AE08055906 SHEET 089

Figure 324 Connector Composites (6732), (7103), (7104)

https://truckmanualshub.com/

14.112. CONNECTOR COMPOSITES (7105), (7107/7110), (7111), (7500/7500A), P. 90

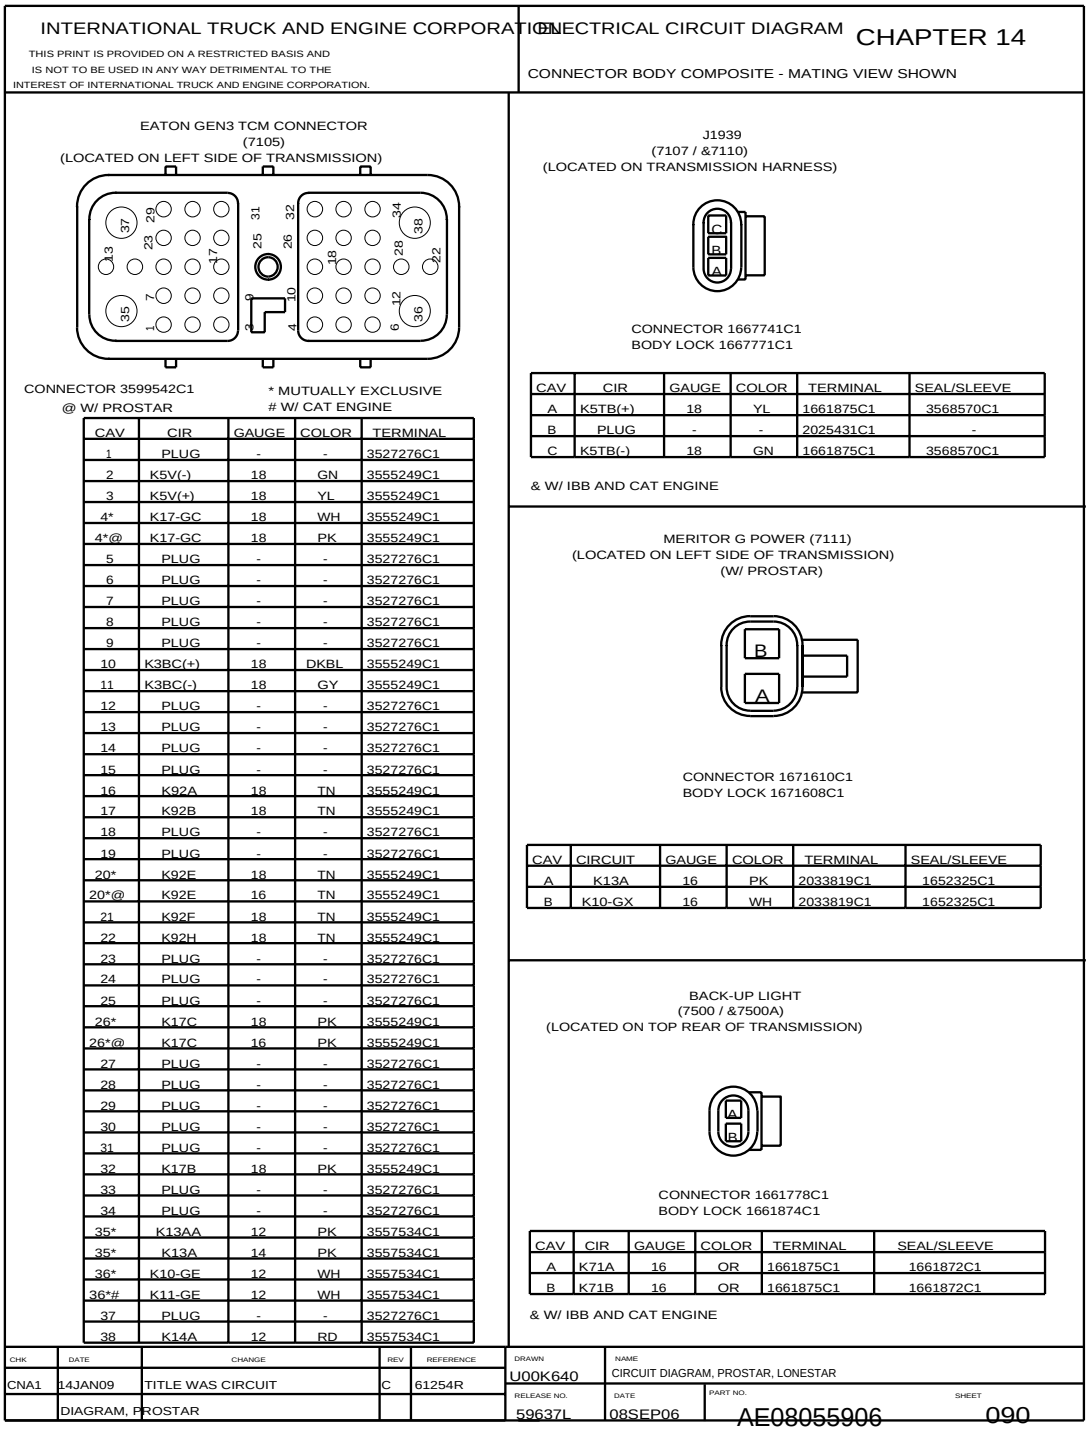


Figure 325 Connector Composites (7105), (7107/7110), (7111), (7500/7500A)

https://truckmanualshub.com/

14.113. CONNECTOR COMPOSITES (7500W), (7600), (7600/7600A), (7700/7700L/7700K), (7802), (7905), P. 91

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


REVERSE LIGHT
(7500W)
(LOCATED ON TOP OF TRANSMISSION)
(W/ PROSTAR)



CONNECTOR 1661778C1
BODY LOCK 1661874C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K71A	16	OR	1661875C1	1661872C1
B	K71B	16	OR	1661875C1	1661872C1


VEHICLE SPEED SENSOR
(7600)
(LOCATED ON TOP OF TRANSMISSION)
(W/ PROSTAR)



CONNECTOR 3662425C1
BODY LOCK 3662518C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K47	18	GY	3554322C1	3554318C1
B	K47A	18	GY	3554322C1	3554318C1

SPEED SENSOR
(7600 / &7600A)
(LOCATED ON REAR OF TRANSMISSION)




CONNECTOR 2036583C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	K47	16	GY	2036586C1
B	K47A	16	GY	2036586C1

(& W/ IBB / CAT ENGINE)

TRANSMISSION OIL TEMP SENSOR
(7700 / **7700L / 7700K)
(LOCATED ON UNDERSIDE OF TRANSMISSION)




CONNECTOR 3536864C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	K31	18	TN	3536865C1	3536868C1
1**	K31H	18	TN	3561584C1	3536868C1
2&	K9AAD	18	GY	3536865C1	3536868C1
2*	K9AA	16	GY	3561584C1	3536868C1
2#	K9AC	18	GY	3561584C1	3536868C1
2@	K9AAD	18	GY	3561584C1	3536868C1
2**	K9AAD	18	GY	3561584C1	3536868C1

& W/ ISX ENGINE
* W/ IBB / CAT ENGINE N/ AC
@ W/ IBB ENGINE W/ AC
W/ CAT ENGINE W/ AC
**W/ CAT ENGINE W/ FREEDOMLINE XMSN

NEUTRAL SWITCH
(7802)
(LOCATED ON TOP OF TRANSMISSION)

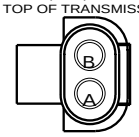

CONNECTOR 3593684C91
#3540054C91

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	K97J	18	VT	0587578C1	1652325C1
B	K97S	18	VT	0587578C1	1652325C1

W/ LONESTAR

SHIFTER CONNECTION
(7905)
(LOCATED ON SHIFTER MODULE)



CONNECTOR 3601746C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	PLUG	-	-	3535425C1	-
B	A92-G	16	WH	3535303C1	3535424C1
C	A92VA	16	TN	3535303C1	3535424C1
D	A92UA	18	TN	3535303C1	3535424C1
E	PLUG	-	-	3535425C1	-
F	A5FA(+)	18	YL	3535303C1	3535424C1
G	A5FA(-)	18	GN	3535303C1	3535424C1
H	PLUG	-	-	3535425C1	-
J	A62BE	18	DKBL	3535303C1	3535424C1
K	A9ZA	18	GY	3535303C1	3535424C1
L	A92	18	TN	3535303C1	3535424C1
M	PLUG	-	-	3535425C1	-
N	A92A	18	TN	3535303C1	3535424C1
P	A92B	18	TN	3535303C1	3535424C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	C	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 08SEP06
PART NO. AE08055906
SHEET 091

Figure 326 Connector Composites (7500W), (7600), (7600/7600A), (7700/7700L/7700K), (7802), (7905)

https://truckmanualshub.com/

14.114. CONNECTOR COMPOSITES (8000), (8001), (8001/8001F), P. 92

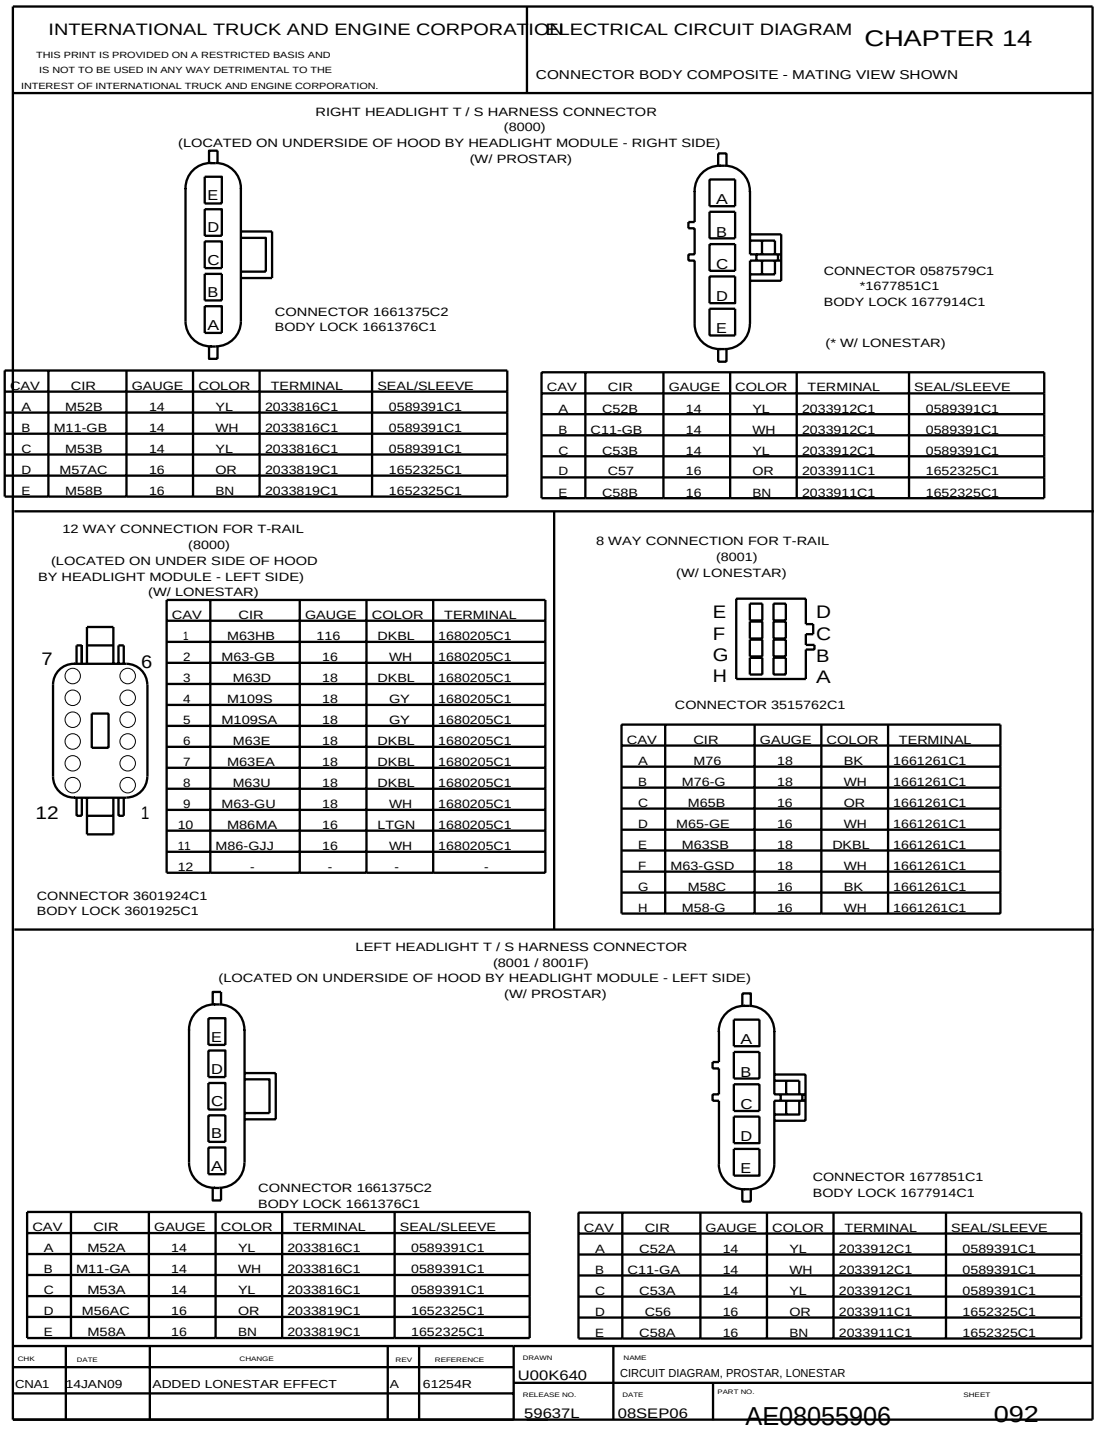


Figure 327 Connector Composites (8000), (8001), (8001/8001F)

https://truckmanualshub.com/

14.115. CONNECTOR COMPOSITES (8002), (8003), (8006R), (8006T), (8050), (8051), P. 93

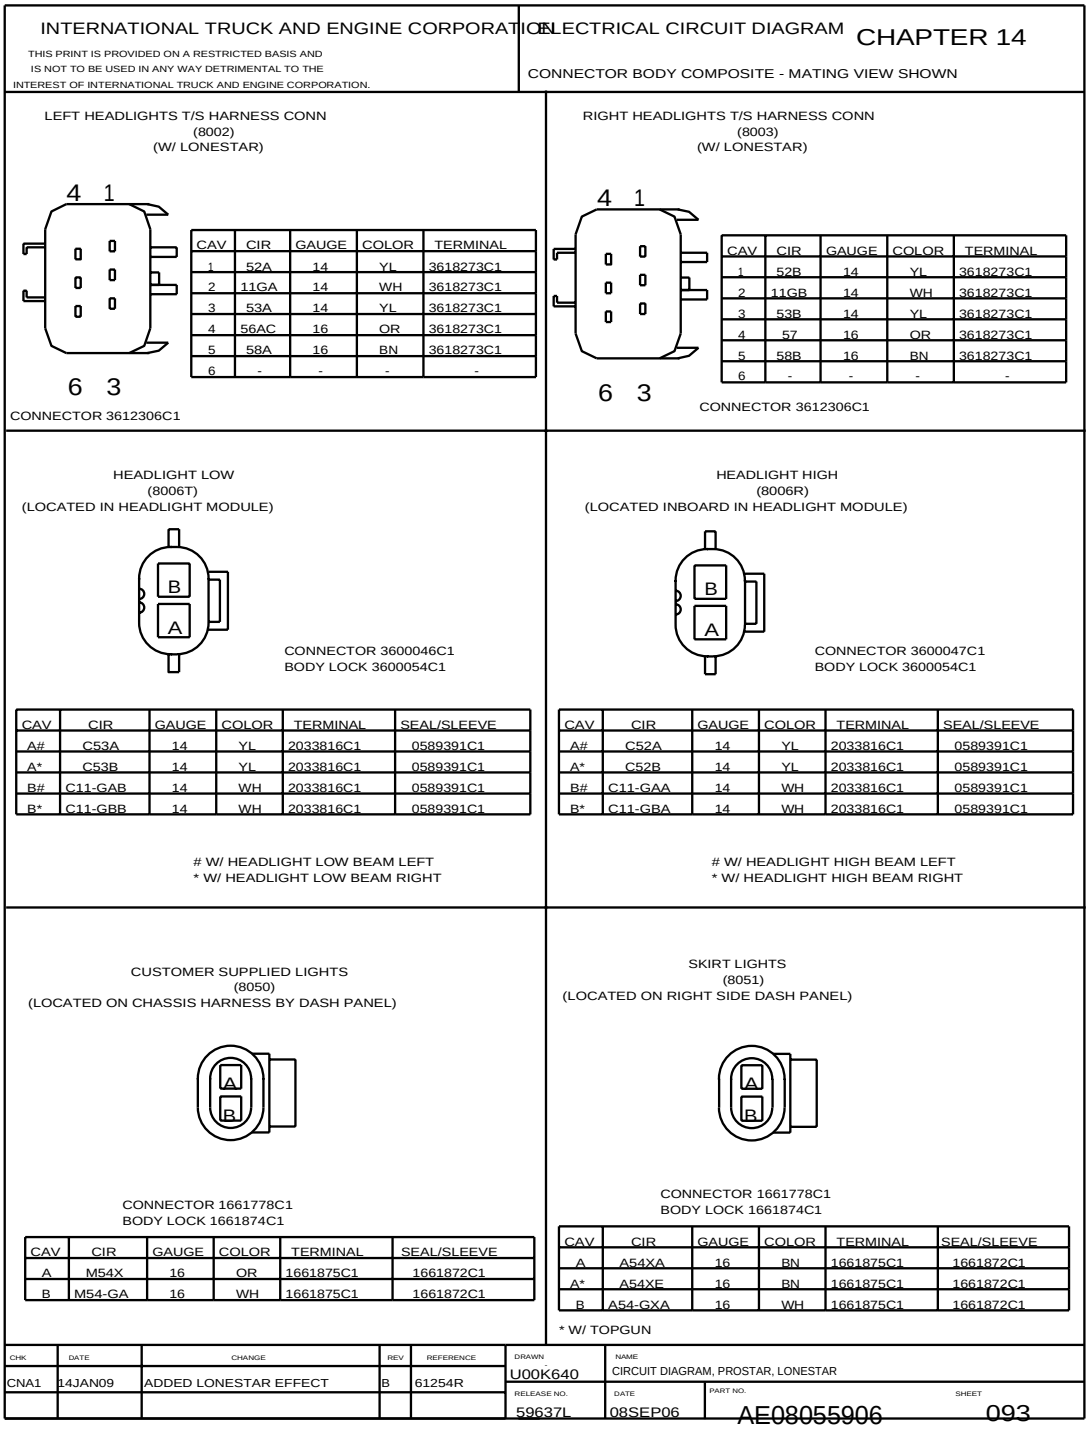


Figure 328 Connector Composites (8002), (8003), (8006R), (8006T), (8050), (8051)

https://truckmanualshub.com/

14.116. CONNECTOR COMPOSITES (8052), (8053), (8100), (8100A), (8100B), P. 93A

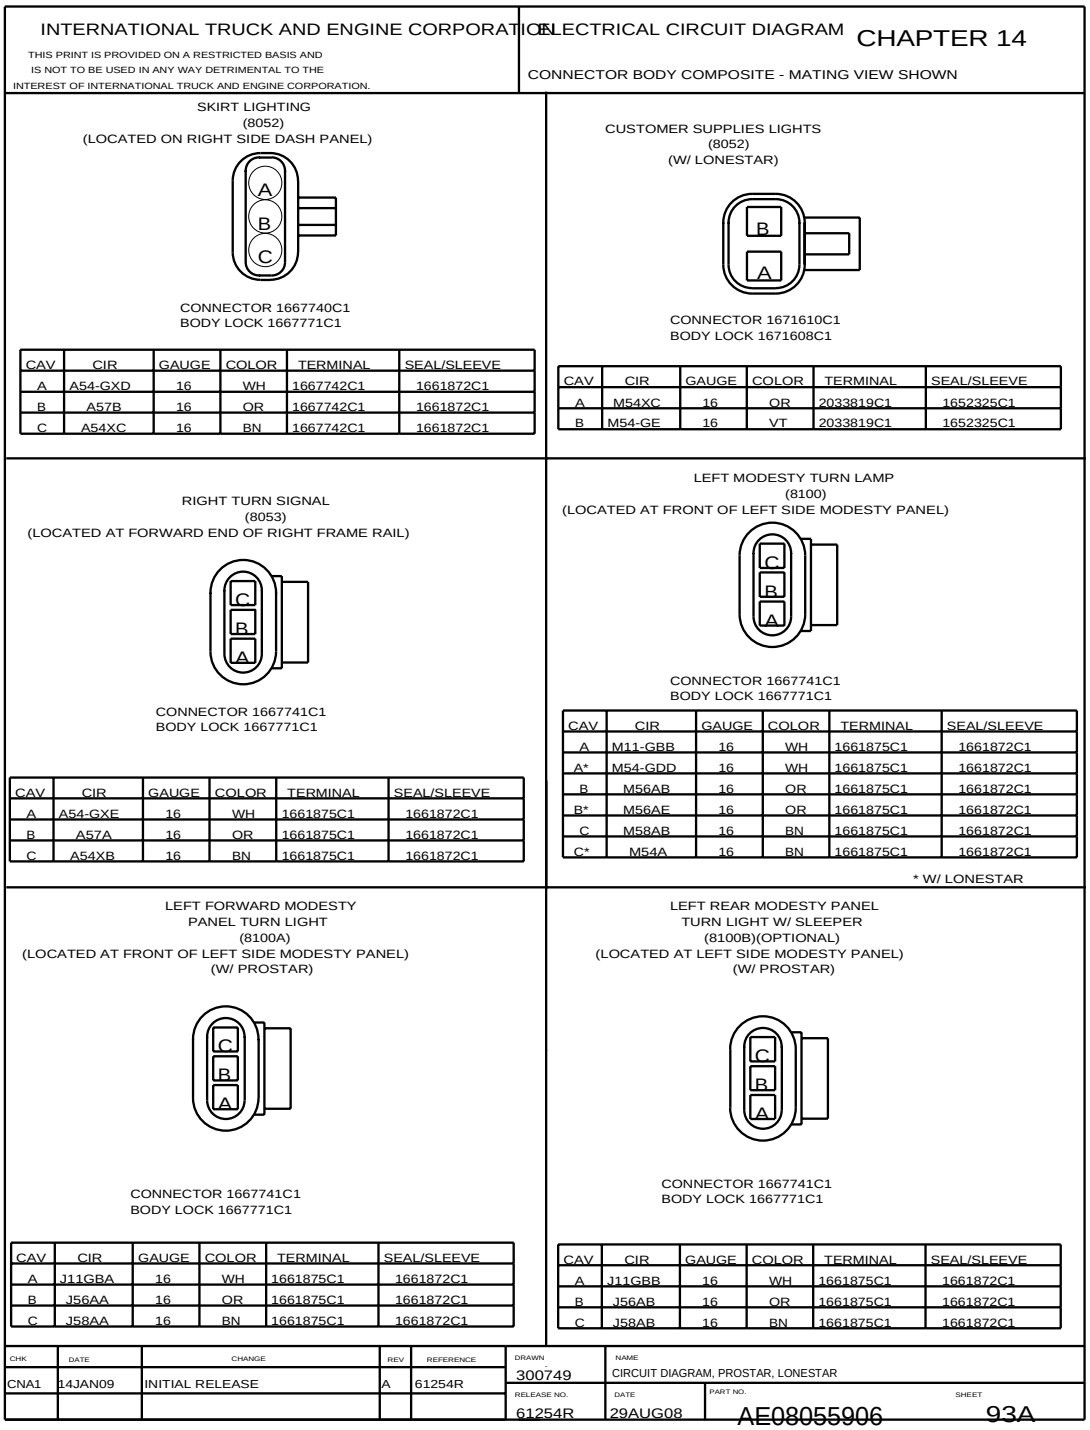


Figure 329 Connector Composites (8052), (8053), (8100), (8100A), (8100B)

https://truckmanualshub.com/

14.117. CONNECTOR COMPOSITES (8101), (8101A), (8101B), (8102), (8103), (8104), P. 94

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

RIGHT MODESTY TURN LAMP
(8101)
(LOCATED AT FRONT OF RIGHT SIDE MODESTY PANEL)
(W/ PROSTAR)



CONNECTOR 1667741C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M11-GBC	16	WH	1661875C1	1661872C1
B	M57AB	16	OR	1661875C1	1661872C1
C	M58AC	16	BN	1661875C1	1661872C1

RIGHT FORWARD MODESTY
PANEL TURN LIGHT
(8101A)
(LOCATED AT RIGHT SIDE MODESTY PANEL)
(W/ PROSTAR)



CONNECTOR 1667741C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	J11GAA	16	WH	1661875C1	1661872C1
B	J57AA	16	OR	1661875C1	1661872C1
C	J58BA	16	BN	1661875C1	1661872C1


RIGHT REAR MODESTY PANEL
TURN LIGHT W/ SLEEPER
(8101B)(OPTIONAL)
(LOCATED AT RIGHT SIDE MODESTY PANEL)
(W/ PROSTAR)



CONNECTOR 1667741C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	J11GAB	16	WH	1661875C1	1661872C1
B	J57AB	16	OR	1661875C1	1661872C1
C	J58BB	16	BN	1661875C1	1661872C1


MODESTY LAMP / CUSTIMER SUPPLIED LIGHTS
(8102)
(LOCATED AT RIGHT SIDE MODESTY PANEL)
(W/ LONESTAR)



CONNECTOR 1667740C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	J-GCC	16	WH	1667742C1	1661872C1
B	J56AD	16	OR	1667742C1`	1661872C1
C	J54B	16	BN	1667742C1	1661872C1

TRANSMISSION FUSE
(8103)




CONNECTOR 1667639C1
BODY LOCK 1675451C1

CAV	CIRCUIT	GAUGE	COLOR	TERMINAL
A	K14A	12	RD	1661708C1
A#	K14AF	12	RD	1661708C1
B	K14D	12	RD	1661708C1
B#	K14A	12	RD	1661708C1

W/ CAT ENGINE

XMSN ECU LS
(8104)
(MOUNTED ON TRANSMISSION)
(W/ LONESTAR)



CONNECTOR 3552915C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	K14A	12	RD	1661708C1
B	K14D	12	RD	1661708C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	D	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 08SEP06
PART NO. AE08055906
SHEET 094

Figure 330 Connector Composites (8101), (8101A), (8101B), (8102), (8103), (8104)

https://truckmanualshub.com/

14.118. CONNECTOR COMPOSITES (8165), (8166), (8166T), (8200), (8201), (8203), P. 95

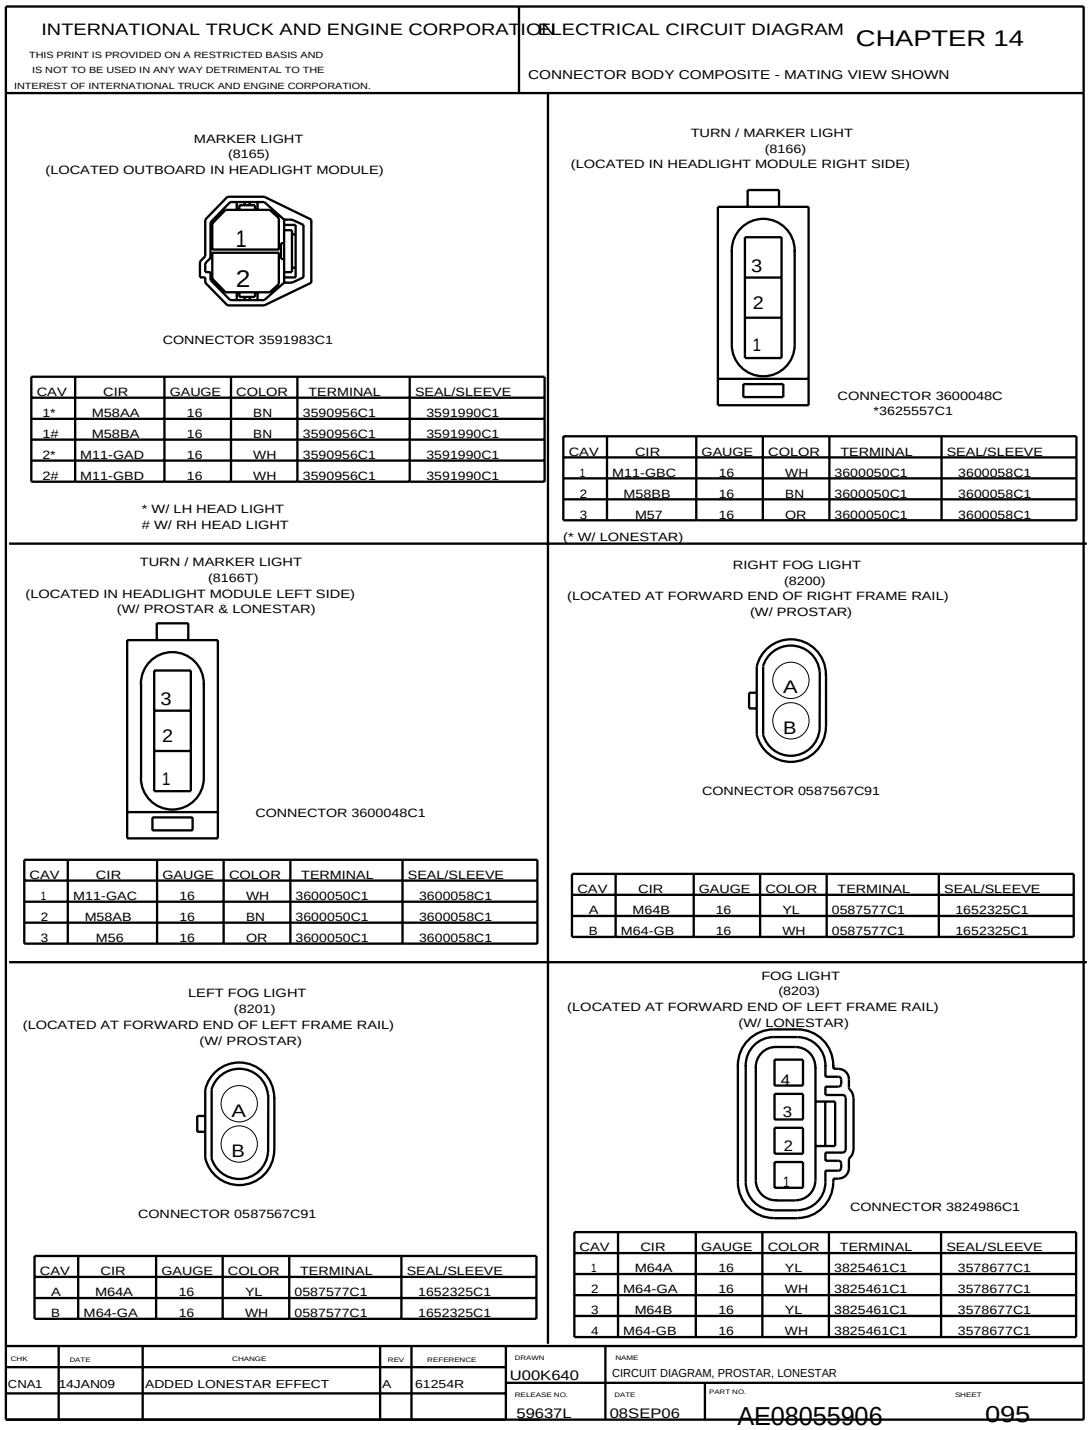


Figure 331 Connector Composites (8165), (8166), (8166T), (8200), (8201), (8203)

https://truckmanualshub.com/

14.119. CONNECTOR COMPOSITES (8303), (8310), (8311), (8312), P. 96

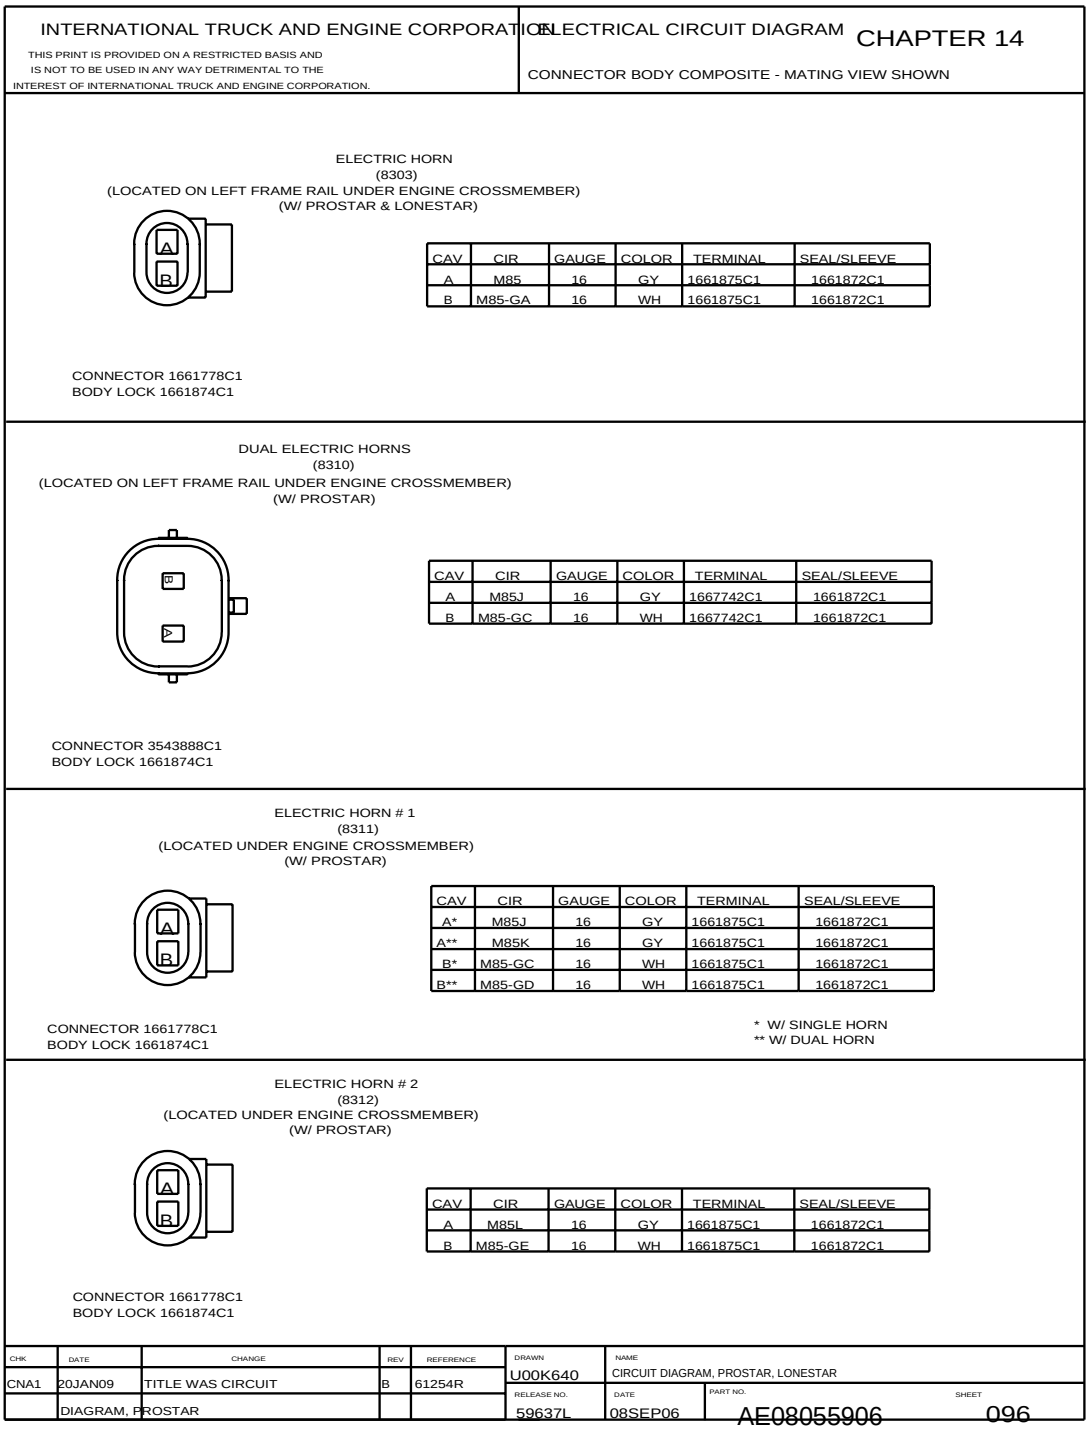


Figure 332 Connector Composites (8303), (8310), (8311), (8312)

https://truckmanualshub.com/

14.120. CONNECTOR COMPOSITES (8350), (8351), (8352), (8410), (8450), P. 97

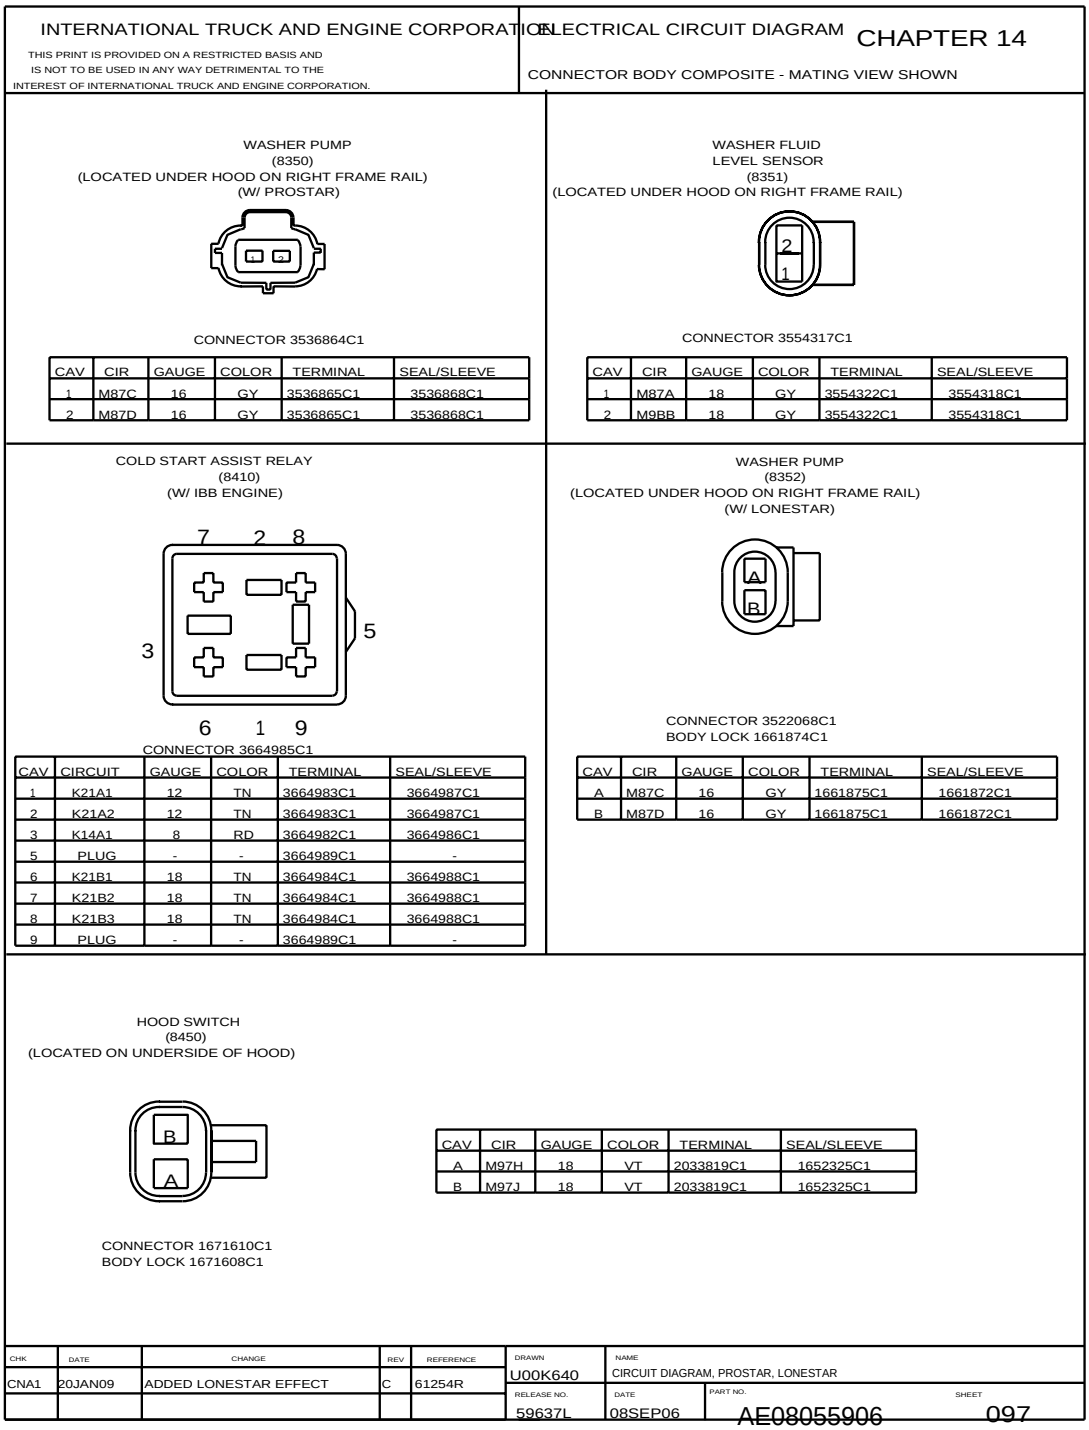


Figure 333 Connector Composites (8350), (8351), (8352), (8410), (8450)

https://truckmanualshub.com/

14.121. CONNECTOR COMPOSITES (8450A), (8450B), (8451), (8453), (8454), (8455), (8456), (8500), P. 98

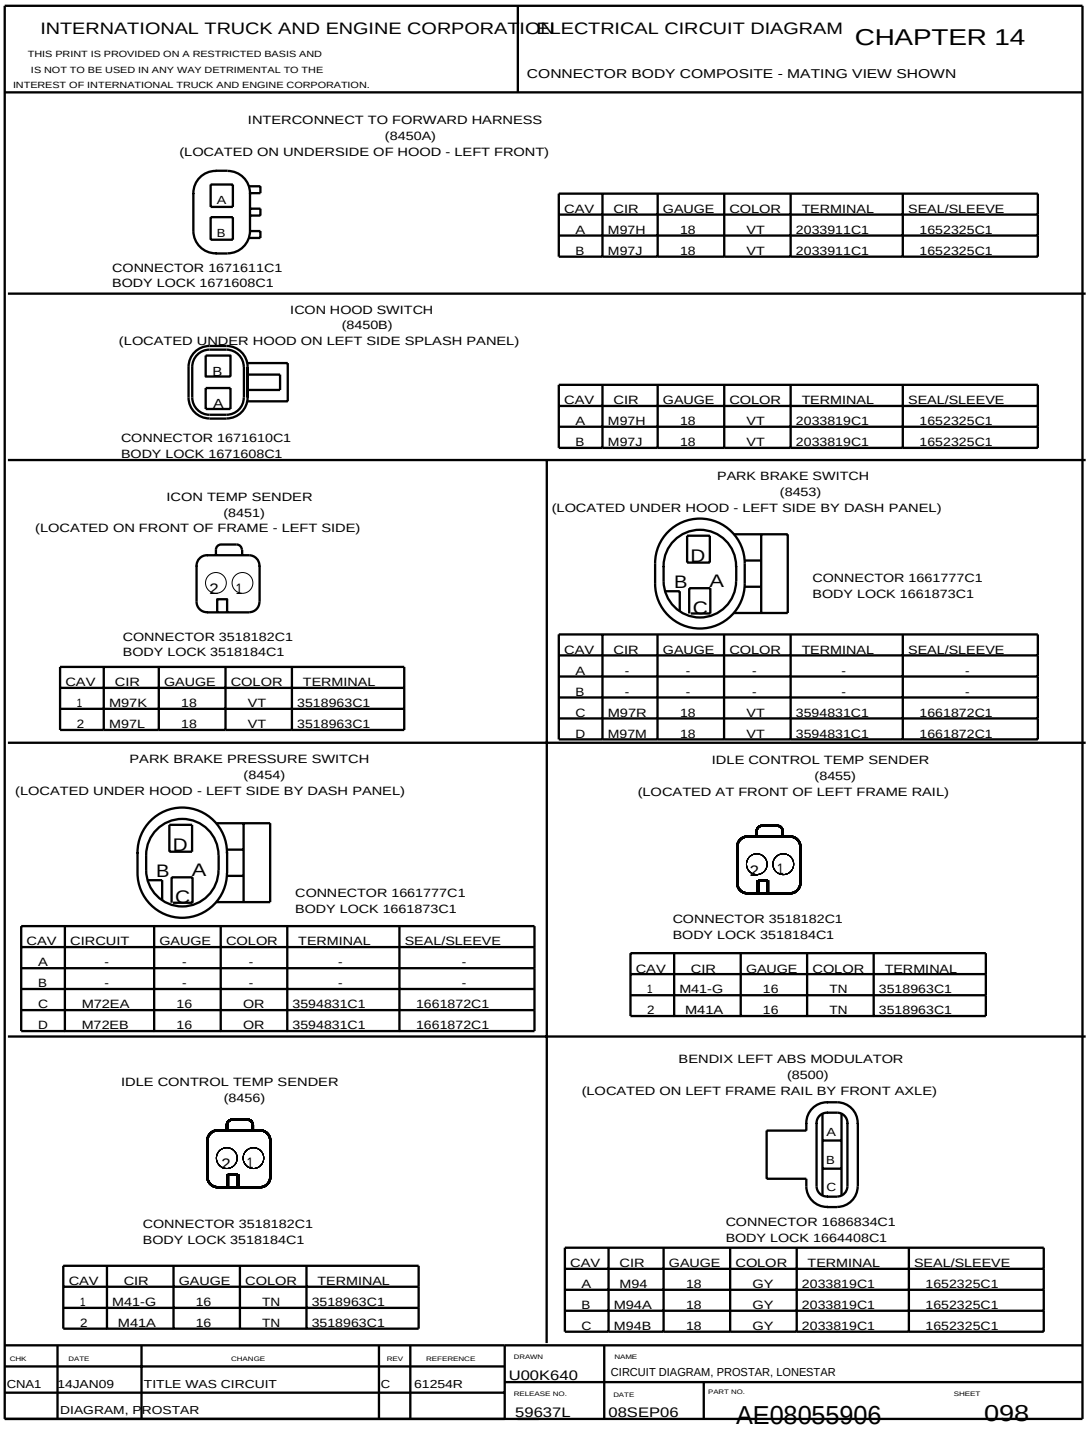


Figure 334 Connector Composites (8450A), (8450B), (8451), (8453), (8454), (8455), (8456), (8500)

https://truckmanualshub.com/

14.122. CONNECTOR COMPOSITES (8501), (8502), (8503), (8504), P. 99


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


BENDIX RIGHT ABS MODULATOR
(8501)
(LOCATED ON RIGHT FRAME RAIL BY FRONT AXLE)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M94H	18	GY	2033819C1	1652325C1
B	M94J	18	GY	2033819C1	1652325C1
C	M94K	18	GY	2033819C1	1652325C1

CONNECTOR 1686834C1
BODY LOCK 1664408C1


BENDIX LEFT AIR ABS SPEED SENSOR
(8502)
(LOCATED ON LEFT FRAME RAIL BY FRONT AXLE)



CAV	CIR	GAUGE	COLOR	TERMINAL
1	M94C	18	GY	1680205C1
2	M94D	18	GY	1680205C1

CONNECTOR 1684261C1
BODY LOCK 1684263C1


BENDIX RIGHT AIR ABS SPEED SENSOR
(8503)
(LOCATED ON RIGHT FRAME RAIL BY FRONT AXLE)



CAV	CIR	GAUGE	COLOR	TERMINAL
1	M94E	18	GY	1680205C1
2	M94F	18	GY	1680205C1

CONNECTOR 1684261C1
BODY LOCK 1684263C1

WABCO LEFT ABS MODULATOR
(8504)
(LOCATED ON LEFT FRAME RAIL BY FRONT AXLE)

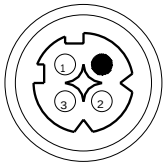

CAV	CIR	GAUGE	COLOR	TERMINAL
1	M94M	18	GY	ASSY
2	M94MA	18	GY	ASSY
3	M94MB	18	GY	ASSY

CONNECTOR 3667691C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 08SEP06

PART NO. AE08055906 SHEET 099

Figure 335 Connector Composites (8501), (8502), (8503), (8504)

https://truckmanualshub.com/

14.123. CONNECTOR COMPOSITES (8505), (8506), (8507), (8550), P. 100


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


WABCO RIGHT ABS MODULATOR
(8505)
(LOCATED ON RIGHT FRAME RAIL BY FRONT AXLE)

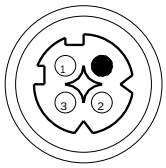

CONNECTOR 366769C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	M94MH	18	GY	ASSY
2	M94MJ	18	GY	ASSY
3	M94MK	18	GY	ASSY


WABCO LEFT ABS SPEED SENSOR
(8506)
(LOCATED ON LEFT FRAME RAIL BY FRONT AXLE)



CONNECTOR 3519878C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	M94MC	18	GY	ASSY
2	M94MD	18	GY	ASSY


WABCO RIGHT ABS SPEED SENSOR
(8507)
(LOCATED ON ROGHT FRAME RAIL BY FRONT AXLE)



CONNECTOR 3526351C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	M94ME	18	GY	ASSY
2	M94MF	18	GY	ASSY

FUEL HEATER
(8550)
(LOCATED ON LEFT FRAME RAIL ON FUEL FILTER)

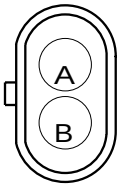

CONNECTOR 0587567C91
#CONNECTOR 3824963C91

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M19	14	GY	0587577C1	0589391C1
B	M19-GA	14	WH	0587577C1	0589391C1

W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 08SEP06

PART NO. AE08055906 SHEET 100

Figure 336 Connector Composites (8505), (8506), (8507), (8550)

https://truckmanualshub.com/

14.124. CONNECTOR COMPOSITES (8601), (8750), (8800), (8802), P. 101

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

HVAC TEMP SENDER
(8601)
(LOCATED AT FRONT OF LEFT FRAME RAIL)




CONNECTOR 3522068C1
BODY LOCK 1661874C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M41	18	GY	1661875C1	1661872C1
B	M109A	18	GY	1661875C1	1661872C1
B*	M109AA	18	GY	1661875C1	1661872C1

* W/ FRONT LOAD INDICATOR


FRONT LOAD INDICATOR
(8750)
(LOCATED AT FRONT LEFT SUSPENSION AIR BAG)



CONNECTOR 1678137C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	M109AB	18	GY	1651943C1
B	M106A	18	GY	1651943C1
C	M61	18	GY	1651943C1


GROUND SPLICE PACK # 1
(8800)
(LOCATED ON LEFT FRAME RAIL BY ENGINE CROSSMEMBER)



CONNECTOR 3551896C1
BODY LOCK 3551897C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M11-GD	12	WH	2033816C1	0589390C1
B	M64-GA	16	WH	2033819C1	1652325C1
C	M64-GB	16	WH	2033819C1	1652325C1
D	M19-GA	14	WH	2033816C1	0589391C1
E	M54-GA	16	WH	2033819C1	1652325C1
F	M85-GA	16	WH	2033819C1	1652325C1

ELECTRONIC GND SPLICE PACK
(8802)
(LOCATED ON LEFT FRAME RAIL UNDER CAB)



CONNECTOR 3551896C1
BODY LOCK 3551897C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N9BC	18	GY	2033819C1	1652325C1
B	N9BD	18	GY	2033819C1	1652325C1
C	N9BE	18	GY	2033819C1	1652325C1
D	N9BF	18	GY	2033819C1	1652325C1
E	PLUG	-	-	0587579C1	-
F	PLUG	-	-	0587579C1	-

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 101

Figure 337 Connector Composites (8601), (8750), (8800), (8802)

https://truckmanualshub.com/

14.125. CONNECTOR COMPOSITES (8803), (8804), (8805), (8806), P. 102


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


CHASSIS GND ADAPTER
(8803)
(LOCATED ON LEFT FRAME RAIL UNDER CAB)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N11-GA	10	WH	1687847C1	0589390C1
B	N10-G	12	WH	2033816C1	0589391C1
C	N59-GB	16	WH	2033819C1	1652325C1
D	N37-G	18	WH	2033819C1	1652325C1
E	N39-G	16	WH	2033819C1	1652325C1
F	N11-GJ	16	WH	2033819C1	1652325C1

CONNECTOR 3551896C1
BODY LOCK 3551897C1


CHASSIS GND ADAPTER
(8804)
(LOCATED ON LEFT FRAME RAIL UNDER CAB)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N11-GB	10	WH	1687847C1	0589390C1
B	N59-G	14	WH	2033816C1	0589391C1
C	N59-GA	14	WH	2033816C1	0589391C1
D	N49-G	18	WH	2033819C1	1652325C1
E	N65-G	16	WH	2033819C1	1652325C1
F	N65-GA	14	WH	2033816C1	0589391C1

CONNECTOR 3551896C1
BODY LOCK 3551897C1


ELECTRONIC GROUND ADAPTER
(8805)
(LOCATED ON CENTRE CHASSIS HARNESS, BOTTOM OF DASH PANEL)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N110Z	16	TN	2033819C1	1652325C1
B	N108ZA	16	TN	2033819C1	1652325C1
C	N108ZB	16	TN	2033819C1	1652325C1
D	N108Z	16	TN	2033819C1	1652325C1
E	PLUG	-	-	0587579C1	-
F	PLUG	-	-	0587579C1	-

CONNECTOR 3551896C1
BODY LOCK 3551897C1

CHASSIS GROUND ADAPTER
(8806)
(LOCATED ON LEFT FRAME RAIL BY AIR DRYER)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N107-GB	18	TN	2033819C1	3517771C1
B	N107-GA	18	TN	2033819C1	1652325C1
C	N107-GC	18	TN	2033819C1	1652325C1
D	N11-GU	16	WH	2033819C1	1652325C1
E	N11-GJ	16	WH	2033819C1	1652325C1
F	PLUG	-	-	0587579C1	-

CONNECTOR 3551896C1
BODY LOCK 3551897C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 102

Figure 338 Connector Composites (8803), (8804), (8805), (8806)

https://truckmanualshub.com/

14.126. CONNECTOR COMPOSITES (8900), (8901), (8950), (8951), P. 103


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


EATON VORAD ANTENNA ASSEMBLY
(8900)
(LOCATED CENTER OF BUMPER SUPPORT BRACKET)
(W/ PROSTAR)

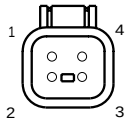

CONNECTOR 3545577C1
BODY LOCK 3545579C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	M67B	16	GY	1651969C1
2	M67C	16	GY	1651969C1
3	M67D	16	GY	1651969C1
4	M67E	16	GY	1651969C1


EATON VORAD VS - 400
(8901)
(LOCATED CENTER OF BUMPER SUPPORT BRACKET)

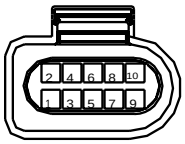

CONNECTOR 3673402C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	PLUG	-	-	3577744C1	-
2	PLUG	-	-	3577744C1	-
3	PLUG	-	-	3577744C1	-
4	M5UE(+)	18	YL	3673404C1	3573653C1
5	M5UE(-)	18	GN	3673404C1	3573653C1
6	PLUG	-	-	3577744C1	-
7	PLUG	-	-	3577744C1	-
8	PLUG	-	-	3577744C1	-
9	M67-GY	18	WH	3673404C1	3573653C1
10	M67Y	18	PK	3673404C1	3573653C1

VEHICLE SENSOR MOD CONNECTOR 1
(8950)
(LOCATED ON CAB SUPPORT CROSSMEMBER (DAY CAB)
OR UNDER CAB CROSSMEMBER (SLEEPER))

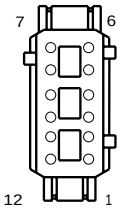


CONNECTOR 3553404C1
BODY LOCK 3553460C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	PLUG	-	-	3527276C1
2	PLUG	-	-	3527276C1
3	PLUG	-	-	3527276C1
4	PLUG	-	-	3527276C1
5	N5UA(+)	18	YL	3518963C1
5*	N5UD(+)	18	YL	3518963C1
6	N5UA(-)	18	GN	3518963C1
6*	N5UD(-)	18	GN	3518963C1
7	N11-GU	16	WH	3518963C1
8	N14U	16	RD	3518963C1
9**	N12UB	16	PK	3518963C1
9	N12U	16	PK	3518963C1
10	N108Z	16	TN	3518963C1
11	N108V	16	TN	3518963C1
12	N110B	18	TN	3518963C1

* W/ VORAD VS-400 (TG)
** w/ FUEL FILTER SENSOR (TG)

VEHICLE SENSOR MOD CONNECTOR 1
(8951)
(LOCATED ON CAB SUPPORT CROSSMEMBER (DAY CAB)
OR UNDER CAB CROSSMEMBER (SLEEPER))

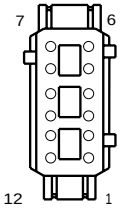

CONNECTOR 3586750C1
BODY LOCK 3553460C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	N107C	18	TN	3518963C1
2	N107B	18	TN	3518963C1
3	N107A	18	TN	3518963C1
4	PLUG	-	-	3527276C1
5	N108A	18	TN	3518963C1
6	N108B	18	TN	3518963C1
7	N108C	18	TN	3518963C1
8	N108D	18	TN	3518963C1
9	N108E	18	TN	3518963C1
10	N108F	18	TN	3518963C1
11	PLUG	-	-	3527276C1
12	PLUG	-	-	3527276C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 103

Figure 339 Connector Composites (8900), (8901), (8950), (8951)

https://truckmanualshub.com/

14.127. CONNECTOR COMPOSITES (8952), (8953/8954M/8953F), P. 104


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


TIRE PRESSURE MONITORING SYSTEM (TPMS)CONTROLLER (8952) (LOCATED ON MODULE BRACKET (IN CAM)) (W/ PROSTAR)

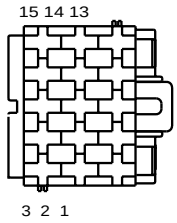


BODY LOCK 3596928C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	D22-G	18	WH	3598072C1
2	D22E	18	TN	3598072C1
3	D22D	18	TN	3598072C1
4	D22C	18	TN	3598072C1
5	D22B	18	TN	3598072C1
6	D22A	18	TN	3598072C1
7	D22VC	18	TN	3598072C1
8	D22VB	18	TN	3598072C1
9	D22VA	18	TN	3598072C1
10	D22ZA	18	TN	3598072C1
11	D22ZB	18	TN	3598072C1
12	D22ZC	18	TN	3598072C1
13	D5 (+)	18	GN	3598072C1
14	-	-	-	-
15	D5 (-)	18	YL	3598072C1

FORWARD / CENTER PROGNOSTICS & DIAGNOSTICS (8953 / #8954M / #8953F) (LOCATED ON LEFT SIDE DASH PANEL)

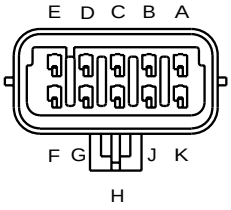

CONNECTOR 3538635C1
BODY LOCK 3538636C1

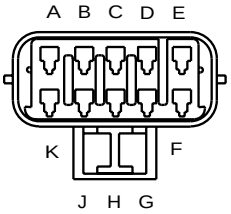

CONNECTOR 3538635C1
BODY LOCK 3538636C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M108A	18	TN	1667742C1	1661872C1
B	M108VA	16	TN	1667742C1	1661872C1
C	M108B	18	TN	1667742C1	1661872C1
D	M110V	16	TN	1667742C1	1661872C1
E	-	-	-	-	-
F	M110A	18	TN	1667742C1	1661872C1
G	M107A	18	TN	1667742C1	1661872C1
H	M107-GA	18	TN	1667742C1	1661872C1
J	M108ZA	16	TN	1667742C1	1661872C1
K	M110ZA	18	TN	1667742C1	1661872C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N108A	18	TN	1661875C1	1661872C1
B	N108VA	16	TN	1661875C1	1661872C1
C	N108B	18	TN	1661875C1	1661872C1
D	N110V	16	TN	1661875C1	1661872C1
E	-	-	-	-	-
F	N110B	18	TN	1661875C1	1661872C1
G	N107A	18	TN	1661875C1	1661872C1
H	N107-GA	18	TN	1661875C1	1661872C1
J	N108ZA	16	TN	1661875C1	1661872C1
K	N110Z	16	TN	1661875C1	1661872C1

W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 104

Figure 340 Connector Composites (8952), (8953/8954M/8953F)

https://truckmanualshub.com/

14.128. CONNECTOR COMPOSITES (8954), (8954M), (8960), (8961), (8962), P. 105

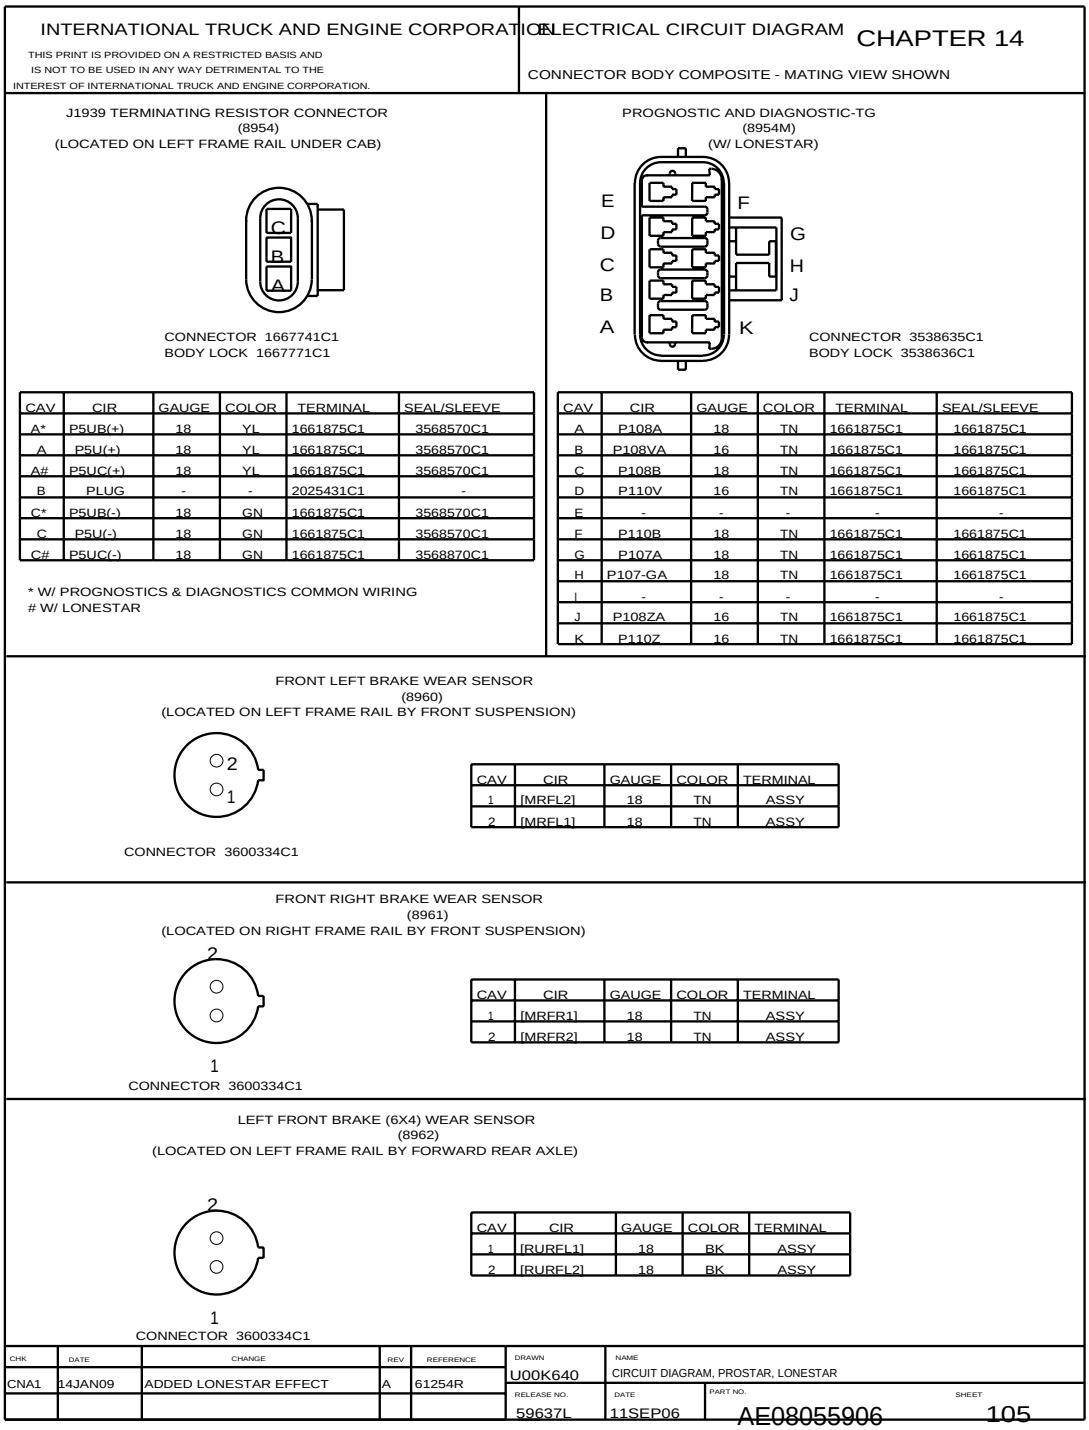


Figure 341 Connector Composites (8954), (8954M), (8960), (8961), (8962)

https://truckmanualshub.com/

14.129. CONNECTOR COMPOSITES (8963), (8964), (8965), (8966), (8967), P. 106

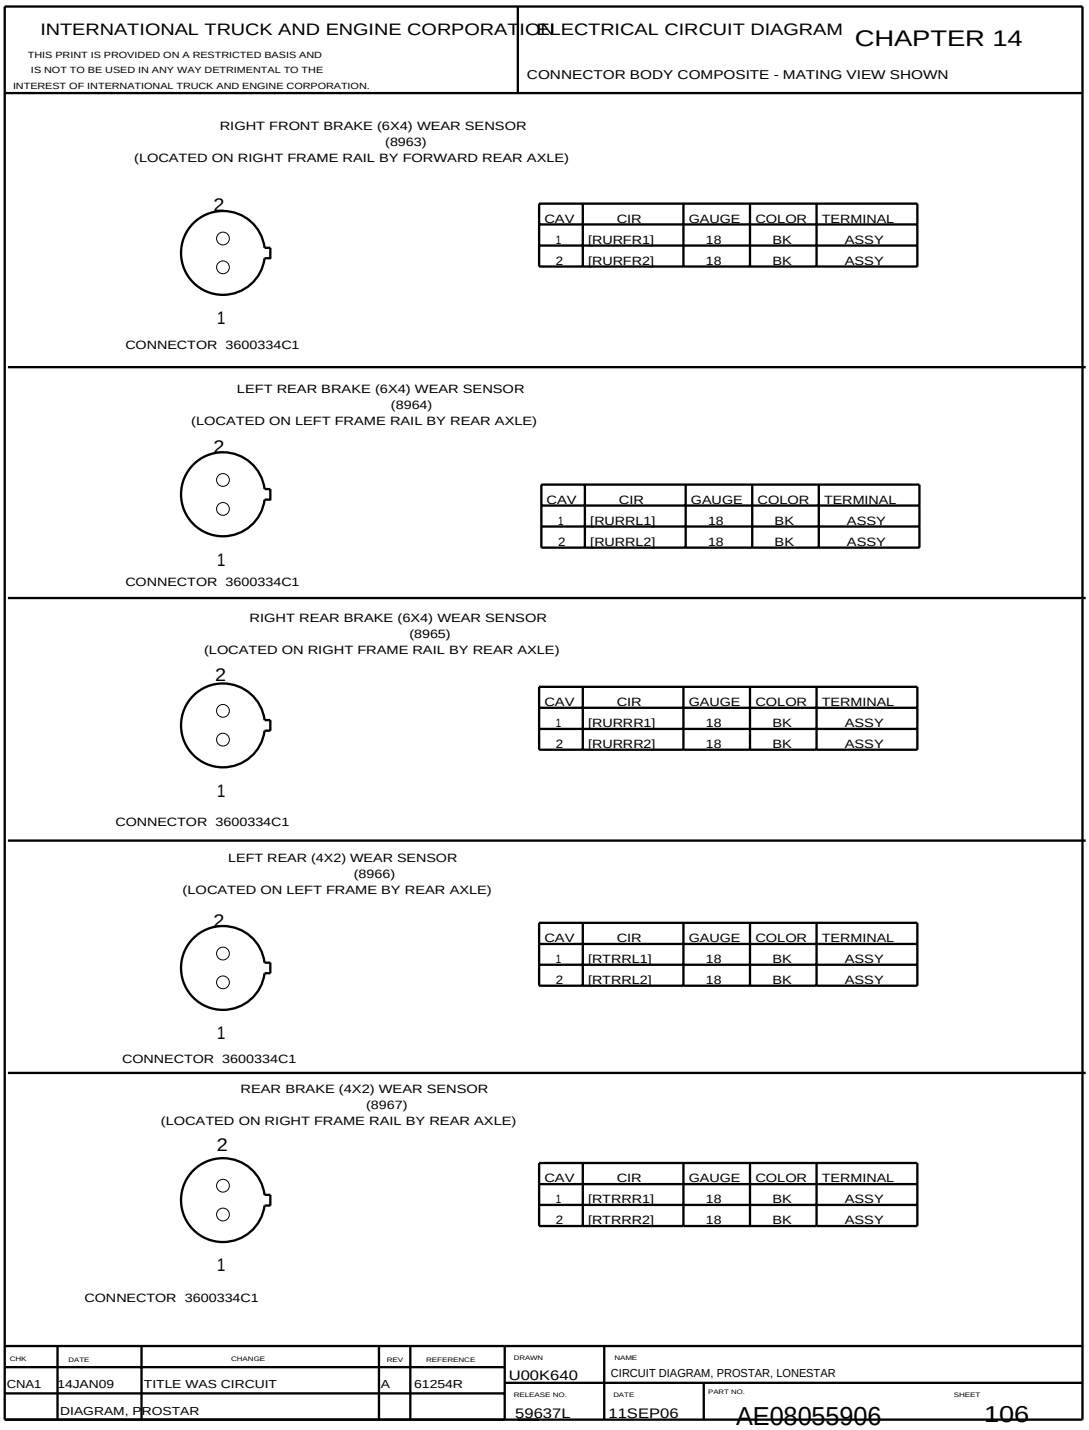


Figure 342 Connector Composites (8963), (8964), (8965), (8966), (8967)

https://truckmanualshub.com/

14.130. CONNECTOR COMPOSITES (8970), (8971), (8972), (8973), P. 107

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

FRONT LEFT BRAKE STROKE
(8970)
(LOCATED ON LEFT FRAME RAIL BY FRONT AXLE)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M108VD	18	TN	1661875C1	1661872C1
B	M108ZD	18	TN	1661875C1	1661872C1
C	M108A	18	TN	1661875C1	1661872C1

CONNECTOR 1667741C1
BODY LOCK 1667771C1

FRONT RIGHT BRAKE STROKE
(8971)
(LOCATED ON RIGHT FRAME RAIL BY FRONT AXLE)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M108VC	18	TN	1661875C1	1661872C1
B	M108ZC	18	TN	1661875C1	1661872C1
C	M108B	18	TN	1661875C1	1661872C1

CONNECTOR 1667741C1
BODY LOCK 1667771C1

LEFT FR BRAKE STROKE (6X4)
(8972)
(LOCATED ON LEFT FRAME RAIL BY FORWARD REAR AXLE)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R108VE	18	TN	1661875C1	1661872C1
B	R108ZE	18	TN	1661875C1	1661872C1
C	R108E	18	TN	1661875C1	1661872C1

CONNECTOR 1667741C1
BODY LOCK 1667771C1

RIGHT FR BRAKE STROKE (6X4)
(8973)
(LOCATED ON RIGHT FRAME RAIL BY FORWARD REAR AXLE)



CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R108VL	18	TN	1661875C1	1661872C1
B	R108ZL	18	TN	1661875C1	1661872C1
C	R108F	18	TN	1661875C1	1661872C1

CONNECTOR 1667741C1
BODY LOCK 1667771C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 107

Figure 343 Connector Composites (8970), (8971), (8972), (8973)

https://truckmanualshub.com/

14.131. CONNECTOR COMPOSITES (8974), (8975), (8976), (8977), P. 108

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

LEFT REAR BRAKE STROKE (6X4)
(8974)
(LOCATED ON LEFT FRAME RAIL BY REAR AXLE)



CONNECTOR 1667741C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R108VH	18	TN	1661875C1	1661872C1
B	R108ZH	18	TN	1661875C1	1661872C1
C	R108CA	18	TN	1661875C1	1661872C1

RIGHT REAR BRAKE STROKE (6X4)
(8975)
(LOCATED ON RIGHT RAIL FRAME BY RAER AXLE)



CONNECTOR 1667741C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R108VJ	18	TN	1661875C1	1661872C1
B	R108ZJ	18	TN	1661875C1	1661872C1
C	R108DA	18	TN	1661875C1	1661872C1

LEFT REAR BRAKE STROKE (4X2)
(8976)
(LOCATED ON LEFT FRAME RAIL BY REAR AXLE)



CONNECTOR 1667741C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R108VF	18	TN	1661875C1	1661872C1
B	R108ZF	18	TN	1661875C1	1661872C1
C	R108C	18	TN	1661875C1	1661872C1

RIGHT REAR BRAKE STROKE (4X2)
(8977)
(LOCATED ON RIGHT FRAME RAIL BY REAR AXLE)



CONNECTOR 1667741C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R108VK	18	TN	1661875C1	1661872C1
B	R108ZK	18	TN	1661875C1	1661872C1
C	R108D	18	TN	1661875C1	1661872C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
		DIAGRAM, PROSTAR			RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 108

Figure 344 Connector Composites (8974), (8975), (8976), (8977)

https://truckmanualshub.com/

14.132. CONNECTOR COMPOSITES (8980), (8981), (8982), (8983), (8984), P. 109


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


FRONT TIRE PRESSURE MONITOR
(8980)
(LOCATED ON ENGINE CROSS MEMBER)



CONNECTOR 3600324C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	M22ZA	20	TN	3600325C1	3600327C1
2	M22VA	20	TN	3600325C1	3600327C1
3	M22A	20	TN	3600325C1	3600327C1
4	PLUG	-	-	3600328C1	-


LEFT REAR TIRE PRESSURE MONITOR
(8981)
(LOCATED ON LEFT FRAME RAIL BY REAR AXLE(S))



CONNECTOR 3600324C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	R22ZB	20	TN	3600325C1	3600327C1
2	R22VB	20	TN	3600325C1	3600327C1
3	R22B	20	TN	3600325C1	3600327C1
4	PLUG	-	-	3600328C1	-


RIGHT REAR TIRE PRESSURE MONITOR
(8982)
(LOCATED ON RIGHT FRAME RAIL BY REAR AXLE(S))



CONNECTOR 3600324C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	R22ZC	20	TN	3600325C1	3600327C1
2	R22VC	20	TN	3600325C1	3600327C1
3	R22C	20	TN	3600325C1	3600327C1
4	PLUG	-	-	3600328C1	-


LEFT REAR TIRE PRESSURE MONITOR(6X4)
(8983)
(LOCATED ON RIGHT FRAME RAIL BY REAR AXLE(S))
(W/ LONESTAR)



CONNECTOR 3600324C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	R22ZB	20	TN	3600325C1	3600327C1
2	R22VB	20	TN	3600325C1	3600327C1
3	R22B	20	TN	3600325C1	3600327C1
4	PLUG	-	-	3600328C1	-

RIGHT REAR TIRE PRESSURE MONITOR(6X4)
(8984)
(LOCATED ON RIGHT FRAME RAIL BY REAR AXLE(S))
(W/ LONESTAR)



CONNECTOR 3600324C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	R22ZB	20	TN	3600325C1	3600327C1
2	R22VC	20	TN	3600325C1	3600327C1
3	R22C	20	TN	3600325C1	3600327C1
4	PLUG	-	-	3600328C1	-

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 109

Figure 345 Connector Composites (8980), (8981), (8982), (8983), (8984)

https://truckmanualshub.com/

14.133. CONNECTOR COMPOSITES (8990), (9100/9100A/9100B/9100C), (9102/9102A), P. 110


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


EYEMAX FUEL FILTER SENSOR
(8990)
(LOCATED ON FUEL FILTER - LEFT SIDE UNDER HOOD)



CONNECTOR 0587569C91

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M110A	18	TN	0587578C1	1652325C1
B	M110ZA	18	TN	0587578C1	1652325C1
C	M110V	16	TN	0587577C1	1652325C1

LEFT FUEL SENDER
(9100 / *9100A / *9100B / *9100C)
(LOCATED ON LEFT SIDE FUEL TANK)



CONNECTOR 1661778C1
BODY LOCK 1661874C1

(* W/ LONESTAR)

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N36A	18	TN	1661875C1	1661872C1
B	N9BE	18	GY	1661875C1	1661872C1

FUEL TRANSFER
(9102 / *9102A)
(LOCATED ON FUEL PUMP-TOP OF BELL HOUSING)



CONNECTOR 3522068C1
BODY LOCK 1661874C1

(* W/ LONESTAR)

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N37-G	18	WH	1661875C1	1661872C1
B	N37A	18	TN	1661875C1	1661872C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 110

Figure 346 Connector Composites (8990), (9100/9100A/9100B/9100C), (9102/9102A)

https://truckmanualshub.com/

14.134. CONNECTOR COMPOSITES (9103), (9303), (9303A), (9304), (9304A), P. 111


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


RIGHT FUEL SENDER
(9103)
(LOCATED ON RIGHT SIDE FUEL TANK)



CONNECTOR 1661778C1
BODY LOCK 1661874C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N36B	18	TN	1661875C1	1661872C1
B	N9BD	18	GY	1661875C1	1661872C1


(6*4) STOP TAIL AND TURN
(9303A)
(LOCATED AT REAR END OF LEFT FRAME RAIL)
(W/ LONESTAR)



CONNECTOR 1661375C2
BODY LOCK 1661376C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R71BA	12	OR	2033816C1	0589391C1
B	R56A	14	OR	2033816C1	0589391C1
C	R57A	14	OR	2033816C1	0589391C1
D	R68A	14	BN	2033816C1	0589391C1
E	R10-G	12	WH	2033816C1	0589391C1


STOP TAIL AND TURN
(9303 - COMMON BASE (6X4))
(9304 - COMMON BASE - TOPGUN (6x4)
(LOCATED AT REAR END OF LEFT FRAME RAIL)



CONNECTOR 1661375C2
BODY LOCK 1661376C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R71BA	12	OR	2033816C1	0589391C1
B	R56A	14	OR	2033816C1	0589391C1
C	R57A	14	OR	2033816C1	0589391C1
D	R68A	14	BN	2033816C1	0589391C1
E	R10-G	12	WH	2033816C1	0589391C1

(6*4) STOP TAIL AND TURN TOP GUN
(9304A)
(LOCATED AT REAR END OF LEFT FRAME RAIL)
(W/ LONESTAR)



CONNECTOR 1661375C2
BODY LOCK 1661376C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R71BA	12	OR	2033816C1	0589391C1
B	R56A	14	OR	2033816C1	0589391C1
C	R57A	14	OR	2033816C1	0589391C1
D	R68A	14	BN	2033816C1	0589391C1
E	R10-GA	16	WH	2033816C1	0589391C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 11SEP06
PART NO. AE08055906
SHEET 111

Figure 347 Connector Composites (9103), (9303), (9303A), (9304), (9304A)

https://truckmanualshub.com/

14.135. CONNECTOR COMPOSITES (9501), (9501D), (9502/9502A), (9502B), (9503/9503D), (9504/9504A/9504B), P. 112

INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

BENDIX LEFT WHEEL SPEED SENSOR (4X2) (9501) (LOCATED ON LEFT FRAME RAIL BY REAR AXLE)



CONNECTOR 1684261C1
BODY LOCK 1684263C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	R94BD	16	GY	1680205C1	1652325C1
2	R94BE	16	GY	1680205C1	1652325C1

BENDIX RR LEFT WHEEL SPEED SENSOR (6X4) (9501D) (LOCATED ON LEFT FRAME RAIL BY REAR AXLE) (W/ LONESTAR)




CONNECTOR 1684261C1
BODY LOCK 1684263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1*	R94BD	16	GY	1680205C1
1*	R94BO	16	GY	1680205C1
2*	R94BE	16	GY	1680205C1
2*	R94BR	16	GY	1680205C1

* MUTUALLY EXCLUSIVE

BENDIX LEFT MODULATOR (9502 / #9502A) (LOCATED ON LEFT FRAME RAIL BY REAR AXLE)

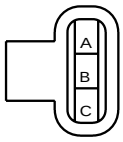


CONNECTOR 1686834C1
BODY LOCK 1664408C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R94BA	16	GY	2033819C1	1652325C1
B	R94BB	16	GY	2033819C1	1652325C1
C	R94BC	16	GY	2033819C1	1652325C1

(# W/ LONESTAR)

BENDIX LEFT REAR MODULATOR (9502B) (LOCATED ON LEFT FRAME RAIL BY REAR AXLE) (W/ LONESTAR)

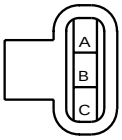

* MUTUALLY EXCLUSIVE

CONNECTOR 1686834C1
BODY LOCK 1664408C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A*	R94BA	16	GY	2033819C1	1652325C1
A*	R94BM	16	GY	2033819C1	1652325C1
B*	R94BB	16	GY	2033819C1	1652325C1
B*	R94BN	16	GY	2033819C1	1652325C1
C*	R94BC	16	GY	2033819C1	1652325C1
C*	R94BP	16	GY	2033819C1	1652325C1

BENDIX RIGHT WHEEL SPEED SENSOR (9503 / #9503D) (LOCATED ON RIGHT FRAME RAIL BY REAR AXLE)




CONNECTOR 1684261C1
BODY LOCK 1684263C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	R94BF	16	GY	1680205C1
1#	R94BV	16	GY	1680205C1
2	R94BH	16	GY	1680205C1
2#	R94BW	16	GY	1680205C1

(# W/ LONESTAR)

BENDIX RR RIGHT MODULATOR (9504 / #9504A / #9504B) (LOCATED ON RIGHT FRAME RAIL BY REAR AXLE)

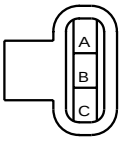

CONNECTOR 1686834C1
BODY LOCK 1664408C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R94BJ	16	GY	2033819C1	1652325C1
A#	R94BS	16	GY	2033819C1	1652325C1
B	R94BK	16	GY	2033819C1	1652325C1
B#	R94BT	16	GY	2033819C1	1652325C1
C	R94BL	16	GY	2033819C1	1652325C1
C#	R94BU	16	GY	2033819C1	1652325C1

(# W/ LONESTAR)

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 11SEP06
PART NO. AE08055906
SHEET 112

Figure 348 Connector Composites (9501), (9501D), (9502/9502A), (9502B), (9503/9503D), (9504/9504A/9504B)

https://truckmanualshub.com/

14.136. CONNECTOR COMPOSITES (9505/9505A), (9506/9506D/9506E), (9507/9507A/9507B), (9508/9508B/9508D/9508E), (9509/9509A/9509B), P. 113

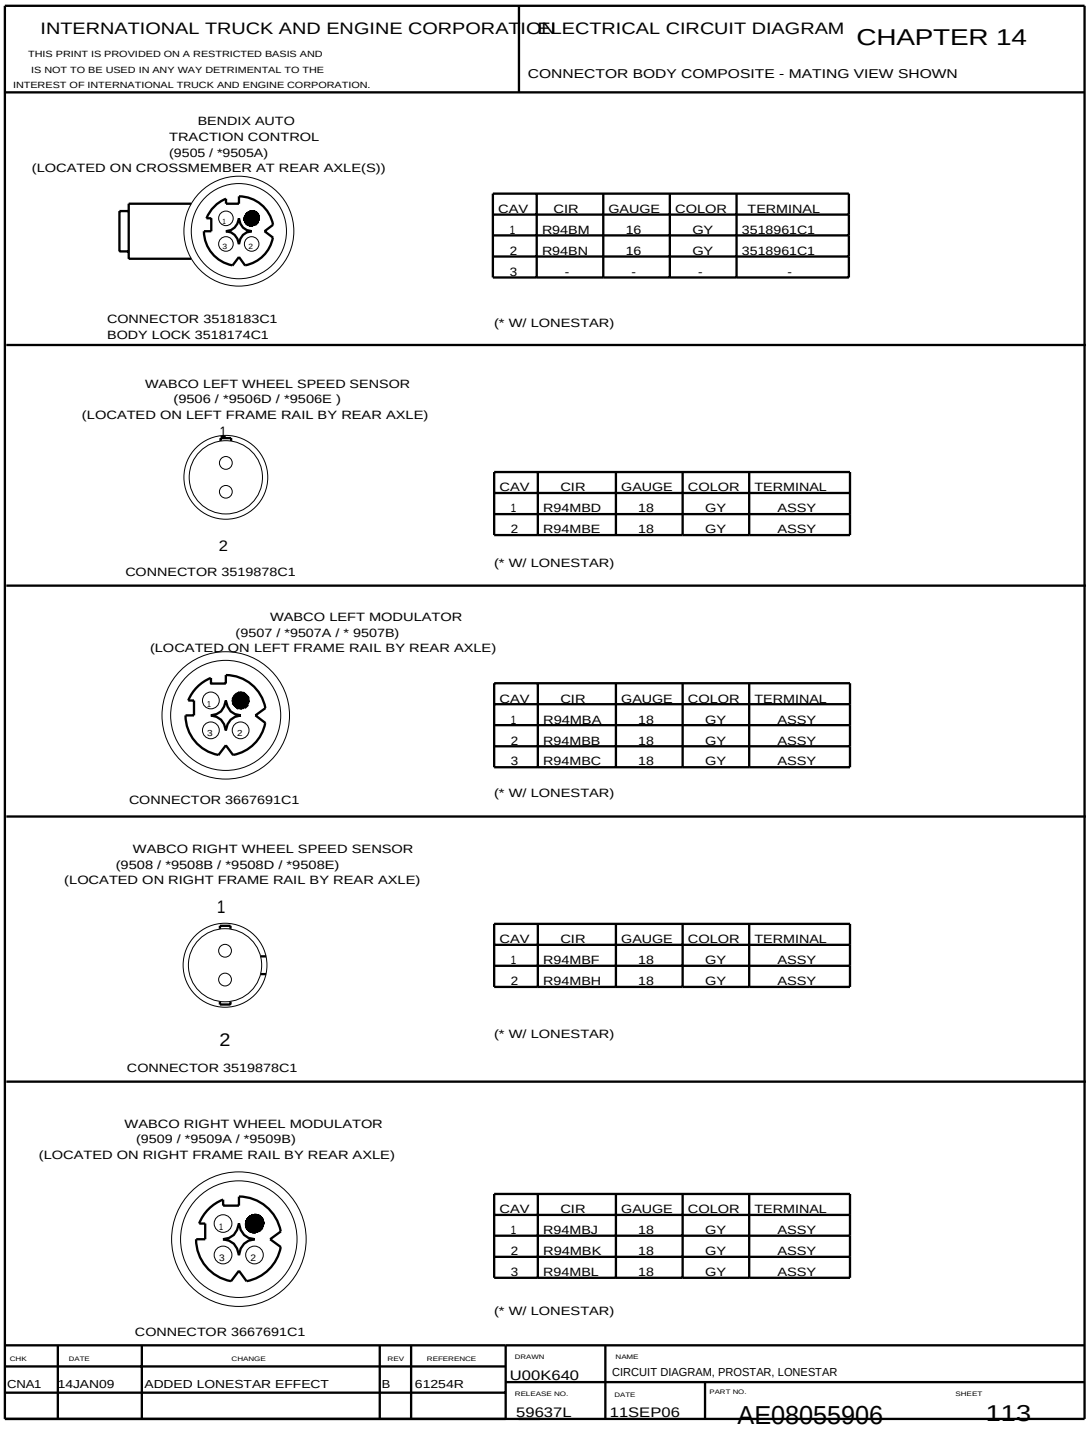


Figure 349 Connector Composites (9505/9505A), (9506/9506D/9506E), (9507/9507A/9507B), (9508/9508B/9508D/9508E), (9509/9509A/9509B)

https://truckmanualshub.com/

14.137. CONNECTOR COMPOSITES (9510/9510A/9510F), (9510F/9510M), (9511), (9511/9511A), (9512), P. 114


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

ABS6 PRESSURE SENSOR
(9510 / *9510A / *9510F)
(LOCATED ON REAR SUSPENSION AIR BAG:
LEFT SIDE (6X4)
RIGHT SIDE (4X2))



CONNECTOR 1678137C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	R94SZC	18	GY	1651943C1
B	R94SVC	18	GY	1651943C1
C	R94SH	18	GY	1651943C1


* W/ LONESTAR

ABS6 PRESSURE SENSOR
(9510F / 9510M)
(LOCATED ON LEFT FRAME RAIL, BACK OF CAB)



CONNECTOR 1667741C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N94SZC	16	GY	1661875C1	1661872C1
B	N94SVC	16	GY	1661875C1	1661872C1
C	N94SH	16	GY	1661875C1	1661872C1



CONNECTOR 1667740C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R94SZC	18	GY	1667742C1	1661872C1
B	R94SVC	18	GY	1667742C1	1661872C1
C	R94SH	18	GY	1667742C1	1661872C1

YAW SENSOR
(9511 / *9511A)
(LOCATED ON CAB SUPPORT CROSSMEMBER (DAYCAB),
BEHIND CAB CROSSMEMBER (SLEEPER))



CONNECTOR 3601685C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	N94SAB	18	GY	3601686C1	3601687C1
2	N94SCB	18	GY	3601686C1	3601687C1
3	N94SBB	18	GY	3601686C1	3601687C1
4	N94SDB	18	GY	3601686C1	3601687C1

* W/ LONESTAR

BENDIX FR RIGHT WHEEL SPEED SENSOR
(9511)
(LOCATED ON RIGHT FRAME RAIL BY FRONT AXLE)
(W/ LONESTAR)



CONNECTOR 1684261C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	R94BF	16	GY	1680205C1
2	R94BH	16	GY	1680205C1

BENDIX AUTO TRACTION CONTROL
(9512)
(LOCATED ON LEFT FRAME RAIL UNDER CAB)



CONNECTOR 3518183C1
BODY LOCK 3518174C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	N94SJ	16	GY	3518961C1
2	N94SK	16	GY	3518961C1

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 11SEP06
PART NO. AE08055906
SHEET 114

Figure 350 Connector Composites (9510/9510A/9510F), (9510F/9510M), (9511), (9511/9511A), (9512)

https://truckmanualshub.com/

14.138. CONNECTOR COMPOSITES (9512), (9513), (9514), (9515/9515A/9515B), P. 115

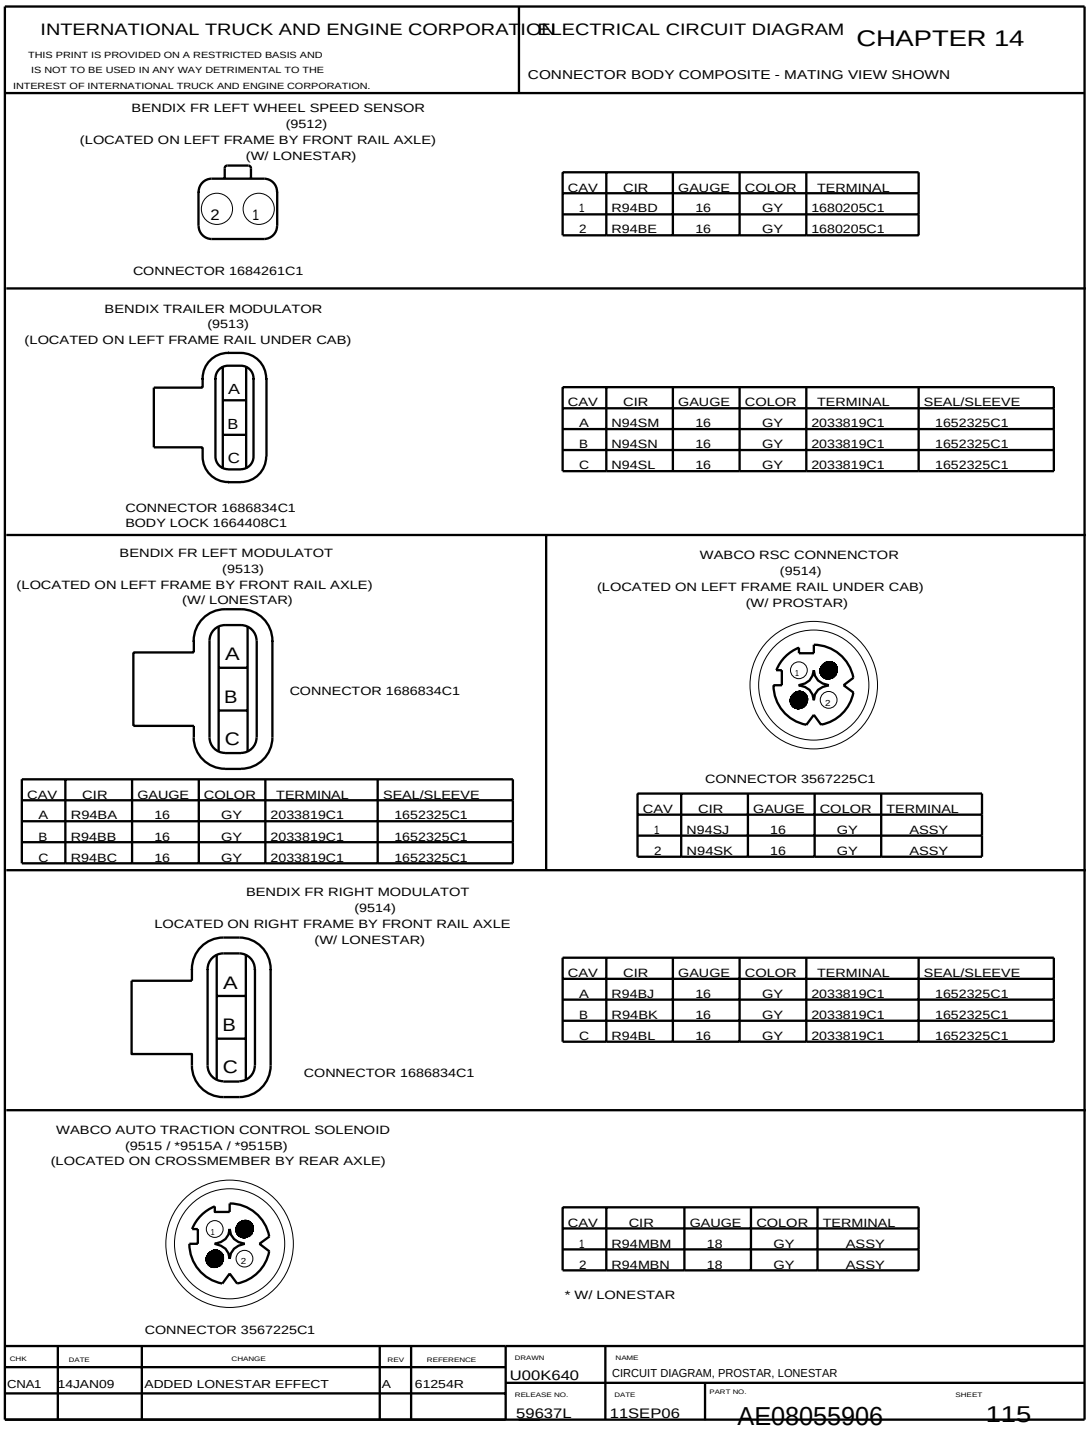


Figure 351 Connector Composites (9512), (9513), (9514), (9515/9515A/9515B)

https://truckmanualshub.com/

14.139. CONNECTOR COMPOSITES (9516M), (9635), (9715F/9715M), P. 116

INTERNATIONAL TRUCK AND ENGINE CORPORATION


THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14


CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

BENDIX 6- CHANNEL ABS INLINE CONNECTOR
(9516M)
(LOCATED ON LEFT FRAME RAIL BEHIND CAB)
(W/ LONESTAR)

CENTRE CHASSIS

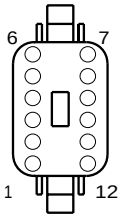

REAR CHASSIS

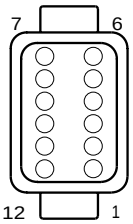


CONNECTOR 3602757C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	94BM	16	GY	1680205C1
2	94BN	16	GY	1680205C1
3	94BP	16	GY	1680205C1
4	94BQ	16	GY	1680205C1
5	94BR	16	GY	1680205C1
6	94BS	16	GY	1680205C1
7	94BT	16	GY	1680205C1
8	94BU	16	GY	1680205C1
9	94BV	16	GY	1680205C1
10	94BW	16	GY	1680205C1
11	-	-	-	-
12	-	-	-	-

CONNECTOR 3519462C1

CAV	CIR	GAUGE	COLOR	TERMINAL
1	94BM	16	GY	1680206C1
2	94BN	16	GY	1680206C1
3	94BP	16	GY	1680206C1
4	94BQ	16	GY	1680206C1
5	94BR	16	GY	1680206C1
6	94BS	16	GY	1680206C1
7	94BT	16	GY	1680206C1
8	94BU	16	GY	1680206C1
9	94BV	16	GY	1680206C1
10	94BW	16	GY	1680206C1
11	-	-	-	-
12	-	-	-	-


EATON VORAD SIDE SENSOR
(9635)
(LOCATED ON RIGHT SIDE OF CAB)




CONNECTOR 3519059C1

CAV	CIR	GAUGE	COLOR	TERMINAL
A	N67H	16	GY	1680206C1
B	N67J	16	GY	1680206C1
C	N67K	16	GY	1680206C1

TRAILER SOCKET 1
(9715F / 9715M)
(LOCATED ON LEFT ARM RAIL BEHIND CAB)

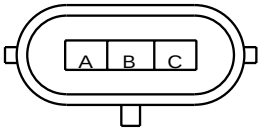



CONNECTOR 1667732C1
BODY LOCK 1667734C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R70W	10	RD	2025425C1	1667735C1
B	R68W	10	BN	2025425C1	1667735C1
C	R94W	10	DKBL	2025425C1	1667735C1

CONNECTOR 1667733C1
BODY LOCK 1667734C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N70W	10	RD	1667737C1	1667735C1
B	N68W	10	BN	1667737C1	1667735C1
C	N94W	10	DKBL	1667737C1	1667735C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	A	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 116

Figure 352 Connector Composites (9516M), (9635), (9715F/9715M)

https://truckmanualshub.com/

14.140. CONNECTOR COMPOSITES (9716M/9716F), (9718), (9736), (9737), P. 117

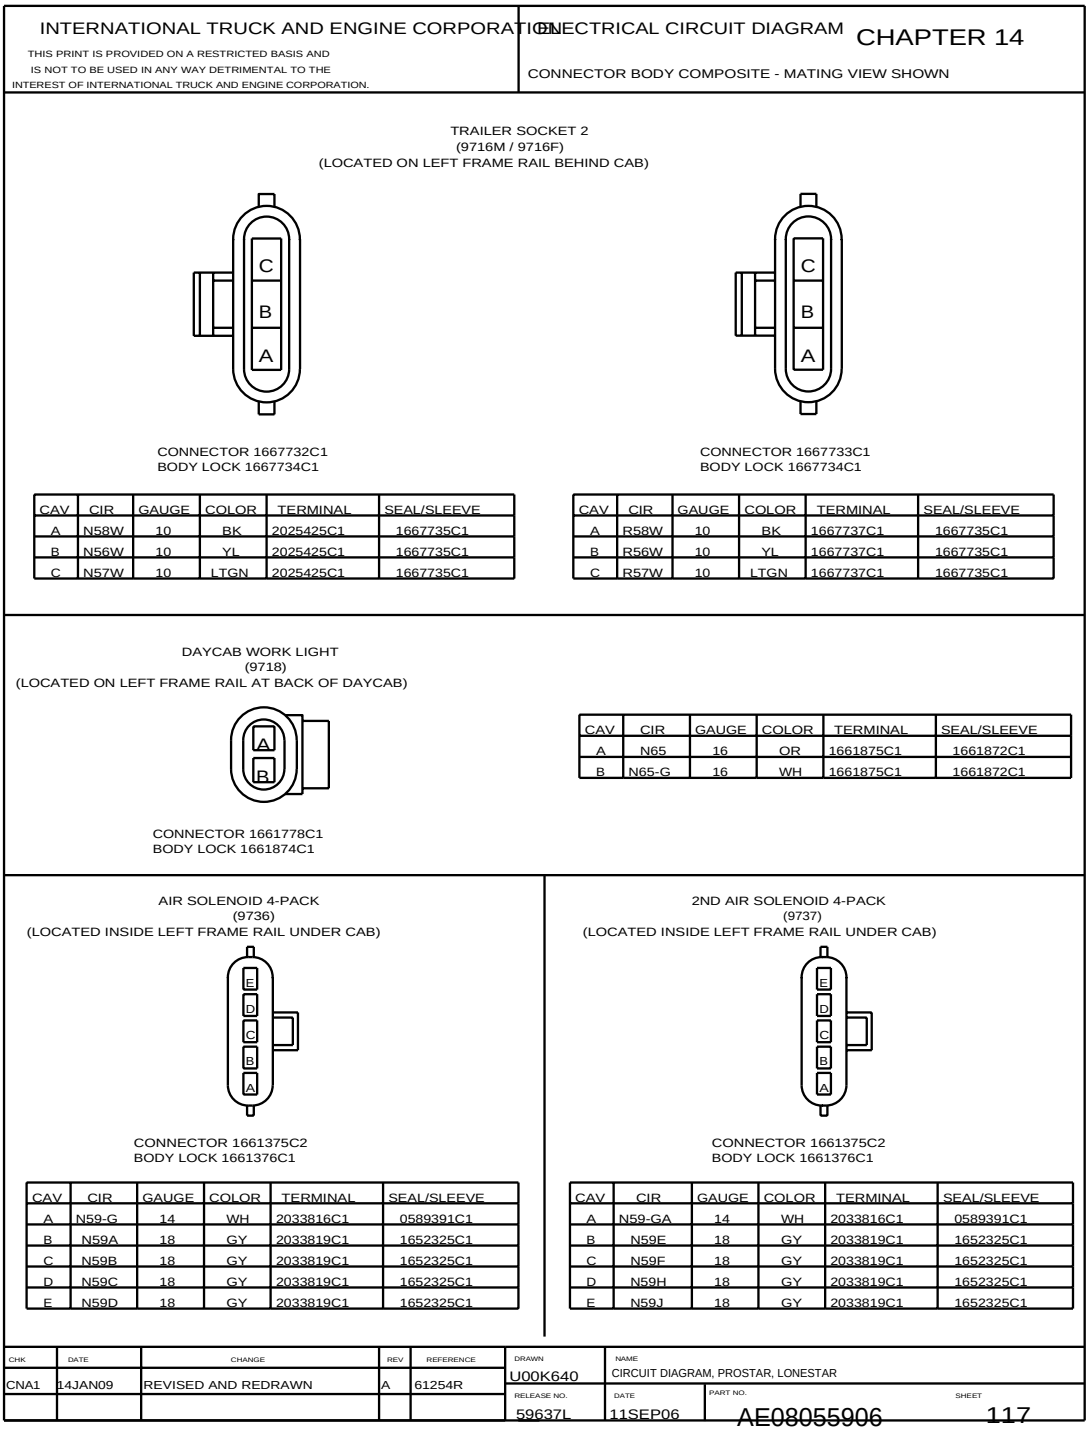


Figure 353 Connector Composites (9716M/9716F), (9718), (9736), (9737)

https://truckmanualshub.com/

14.141. CONNECTOR COMPOSITES (9738), (9768), (9769), P. 118


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

5TH WHEEL JAW LOCK SOLENOID
(9738)
(LOCATED AT END OF FRAME - LEFT SIDE)

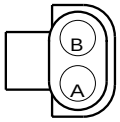


CONNECTOR 0587568C91

* W/ ONE SOLENOID 4 PACK W/ CNT = 3
\# W/ ONE SOLENOID 4 PACK W/ CNT = 4
** W/ TWO SOLENOID 4 PACK W/ CNT = 6
\## W/ TWO SOLENOID 4 PACK W/ CNT = 5
& W/ TWO SOLENOID 4 PACK W/ CNT = 7

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A*	N59K	16	GY	0587575C1	1652325C1
A#	N59K	18	GY	0587576C1	1652325C1
A**	N59K	18	GY	0587576C1	1652325C1
A##	N59K	16	GY	0587575C1	1652325C1
A&	N59K	16	GY	0587575C1	1652325C1
B	N59-GB	16	WH	0587575C1	1652325C1

EATON VORAD VS-400
(9768)
(LOCATED ON RIGHT SIDE CAB)

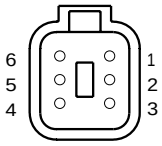

CONNECTOR 3673640C1
BODY LOCK 2005243C1


CAV	CIR	GAUGE	COLOR	TERMINAL
1	N67TA	16	PK	3572626C1
2	N67GU	16	WH	3572626C1
3	N67U	16	GY	3572626C1
4	N67V	16	GY	3572626C1
5	N67W	16	GY	3572626C1
6	PLUG	-	-	0453133C1

J1939 CENTER CHASSIS TO
FWD CHASSIS
(9769)
(LOCATED ON LEFT SIDE DASH PANEL)



CONNECTOR 1667741C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	M5U(+)	18	YL	1661875C1	3568570C1
B	-	-	-	-	-
C	M5U(-)	18	GN	1661875C1	3568570C1



CONNECTOR 1667740C1
BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N5U(+)	18	YL	1667742C1	3568570C1
B	-	-	-	-	-
C	N5U(-)	18	GN	1667742C1	3568570C1


CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	16JAN09	REVISED AND REDRAWN	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 118

Figure 354 Connector Composites (9738), (9768), (9769)

https://truckmanualshub.com/

14.142. CONNECTOR COMPOSITES (9770), (9779/9779F/9779FA), (9779F1), (9780/9780M), (9780M1), P. 119

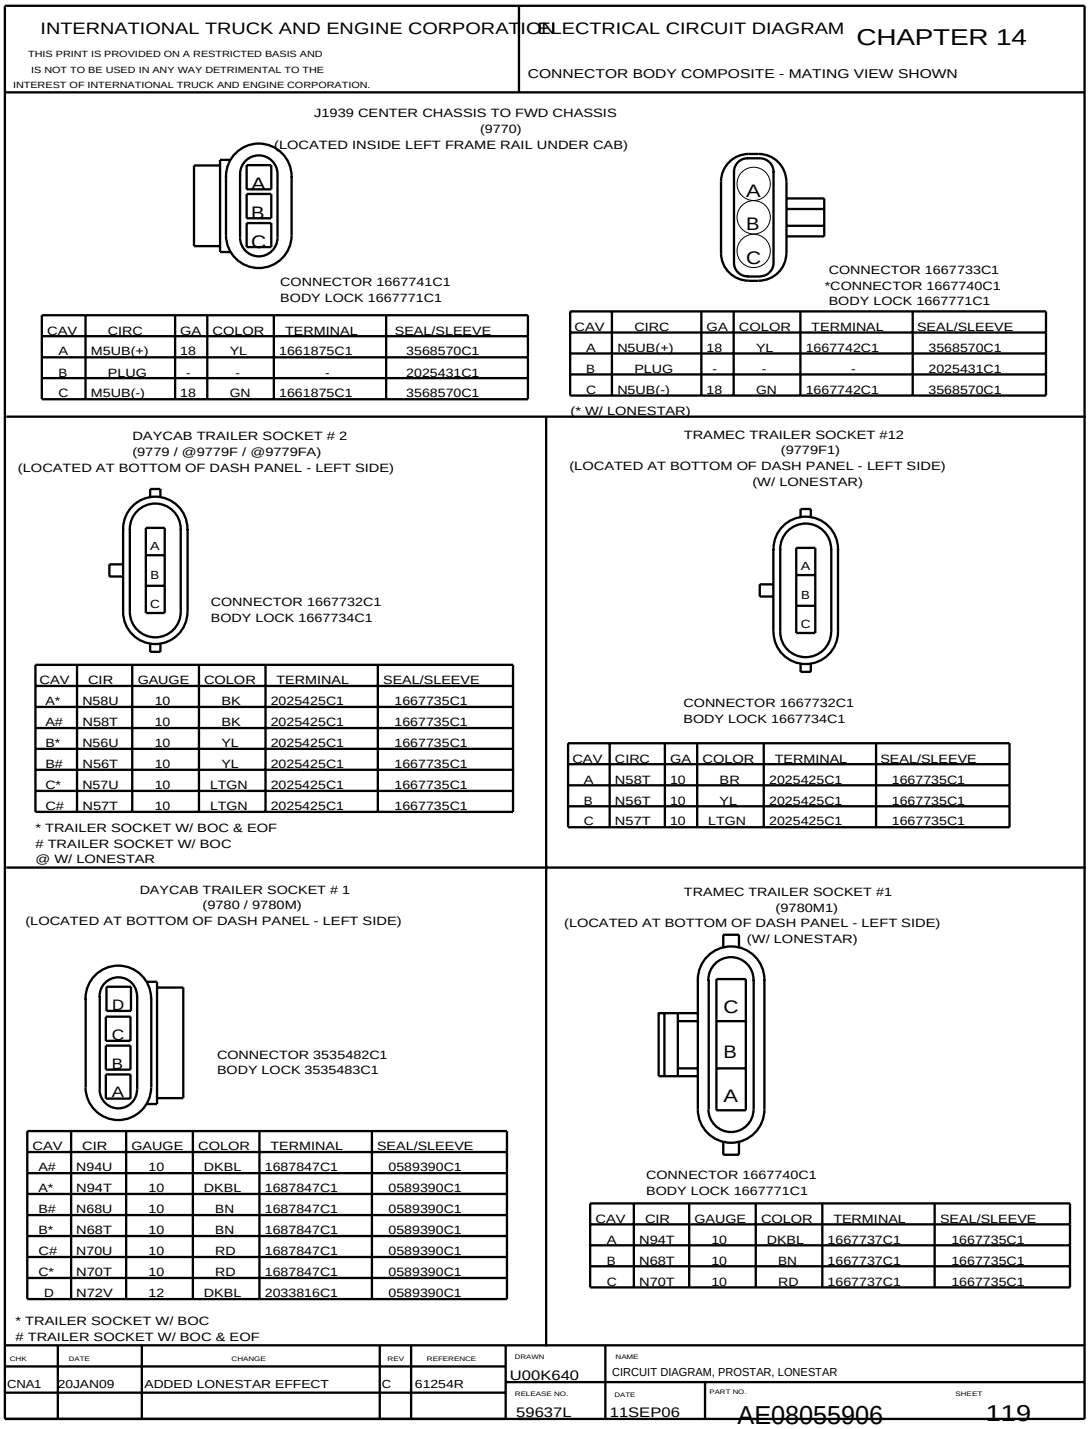

CAV	CIRC	GA	COLOR	TERMINAL	SEAL/SLEEVE
A	M5UB(+)	18	YL	1661875C1	3568570C1
B	PLUG	-	-	-	2025431C1
C	M5UB(-)	18	GN	1661875C1	3568570C1

CAV	CIRC	GA	COLOR	TERMINAL	SEAL/SLEEVE
A	N5UB(+)	18	YL	1667742C1	3568570C1
B	PLUG	-	-	-	2025431C1
C	N5UB(-)	18	GN	1667742C1	3568570C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A*	N58U	10	BK	2025425C1	1667735C1
A#	N58T	10	BK	2025425C1	1667735C1
B*	N56U	10	YL	2025425C1	1667735C1
B#	N56T	10	YL	2025425C1	1667735C1
C*	N57U	10	LTGN	2025425C1	1667735C1
C#	N57T	10	LTGN	2025425C1	1667735C1

CAV	CIRC	GA	COLOR	TERMINAL	SEAL/SLEEVE
A	N58T	10	BR	2025425C1	1667735C1
B	N56T	10	YL	2025425C1	1667735C1
C	N57T	10	LTGN	2025425C1	1667735C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A#	N94U	10	DKBL	1687847C1	0589390C1
A*	N94T	10	DKBL	1687847C1	0589390C1
B#	N68U	10	BN	1687847C1	0589390C1
B*	N68T	10	BN	1687847C1	0589390C1
C#	N70U	10	RD	1687847C1	0589390C1
C*	N70T	10	RD	1687847C1	0589390C1
D	N72V	12	DKBL	2033816C1	0589390C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N94T	10	DKBL	1667737C1	1667735C1
B	N68T	10	BN	1667737C1	1667735C1
C	N70T	10	RD	1667737C1	1667735C1

Figure 355 Connector Composites (9770), (9779/9779F/9779FA), (9779F1), (9780/9780M), (9780M1)

https://truckmanualshub.com/

14.143. CONNECTOR COMPOSITES (9781F), (9782M), (9783F), (9783M), (9784M), P. 120


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


TRAILER SOCKET 2
(9781F)
(LOCATED AT END OF FRAME - LEFT SIDE)



CONNECTOR 1667732C1
BODY LOCK 1667734C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N58T	10	BK	2025425C1	1667735C1
B	N56T	10	YL	2025425C1	1667735C1
C	N57T	10	LTGN	2025425C1	1667735C1


TRAILER SOCKET 2
(9782M)
(LOCATED AT END OF FRAME - LEFT SIDE)



CONNECTOR 3535482C1
BODY LOCK 3535483C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N94T	10	DKBL	1687847C1	0589390C1
B	N68T	10	BN	1687847C1	0589390C1
C	N70T	10	RD	1687847C1	0589390C1
D	N72V	12	DKBL	2033816C1	0589390C1


ISO TRAILER SOCKET
(9783M)
(LOCATED AT BOTTOM OF DASH PANEL - LEFT SIDE)
(W/ LONESTAR)

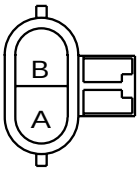

CONNECTOR 2031522C1
BODY LOCK 2033927C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N94T	10	DKBL	2031531C1	2025427C1
B	N94TA	10	YL	2031531C1	2025427C1

TRAILER SOCKET 2
(9783F)
(LOCATED AT END OF FRAME - LEFT SIDE)




CONNECTOR 1667732C1
BODY LOCK 1667734C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N58U	10	BK	2025425C1	1667732C1
A*	N58T	10	BK	2025425C1	1667732C1
B	N56U	10	YL	2025425C1	1667732C1
B*	N56T	10	YL	2025425C1	1667732C1
C	N57U	10	LTGN	2025425C1	1667732C1
C*	N57T	10	LTGN	2025425C1	1667732C1

* W/ LONESTAR

TRAILER SOCKET 1
(9784M)
(LOCATED AT END OF FRAME - LEFT SIDE)



CONNECTOR 3535482C1
BODY LOCK 3535483C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A*	N94U	10	DKBL	1687847C1	0589390C1
A	N94T	10	DKBL	1687847C1	0589390C1
B*	N68U	10	BN	1687847C1	0589390C1
B	N68T	10	BN	1687847C1	0589390C1
C	N70T	10	RD	1687847C1	0589390C1
C*	N70U	10	RD	1687847C1	0589390C1
D	N72V	12	DKBL	2033816C1	0589391C1

* W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 120

Figure 356 Connector Composites (9780), (9781F), (9782M), (9783F), (9783M), (9784M)

https://truckmanualshub.com/

14.144. CONNECTOR COMPOSITES (9789/9789F/9789FA), (9790/9790M/9790MA), P. 121

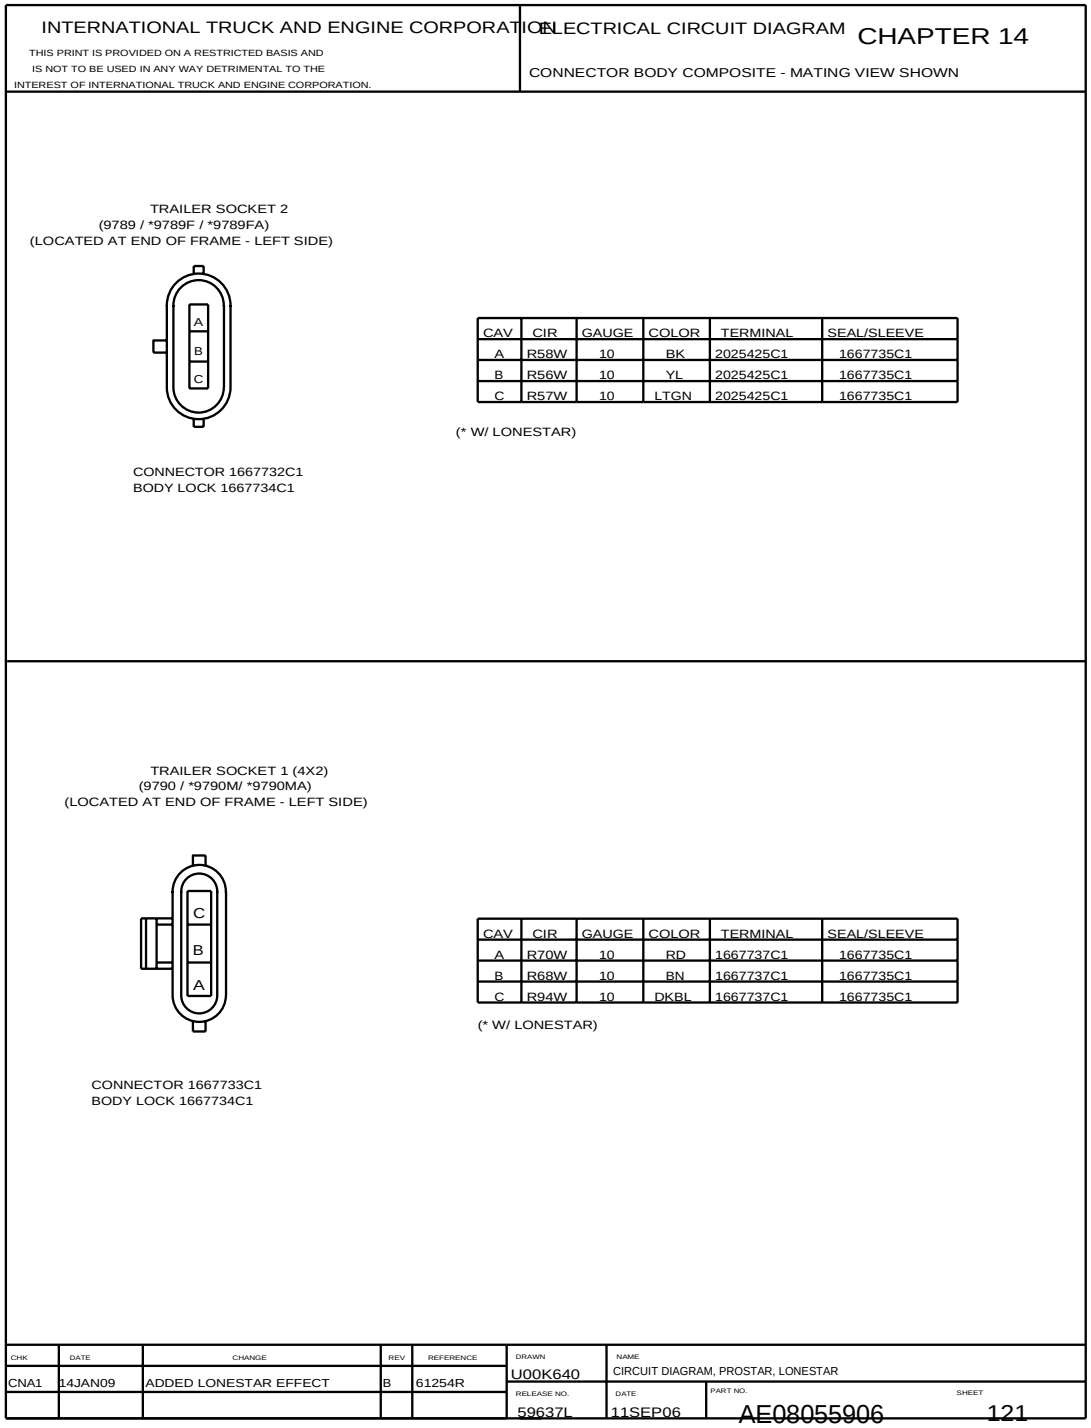


Figure 357 Connector Composites (9789/9789F/9789FA), (9790/9790M/9790MA)

https://truckmanualshub.com/

14.145. CONNECTOR COMPOSITES (9800/9800F/9800M), P. 122


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14


CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

CONNECTION TO REAR / CENTER CHASSIS HARNESS
(9800 / 9800F / 9800M)
(LOCATED ON LEFT FRAME RAIL BEHIND CAB)

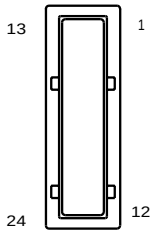

CONNECTOR 3558022C1
BODY LOCK 3558056C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	R71BA	14	OR	3559037C1	3575783C1
2	R56A	14	OR	3559037C1	3575783C1
3	R57A	14	OR	3559037C1	3575783C1
4	R68A	14	BN	3559037C1	3575783C1
5	R10-G	12	WH	3559037C1	3575783C1
5&	R10-G	16	WH	3559037C1	3509903C1
6	R32A	18	TN	3559036C1	3509903C1
6##	32	18	TN	3559036C1	3509903C1
7*	R9A	18	GY	3559036C1	3509903C1
7*	R9	18	GY	3559036C1	3509903C1
7##	9C	18	GY	3559036C1	3509903C1
8	R32	18	TN	3559036C1	3509903C1
9	R49	18	GY	3559036C1	3509903C1
10*	R49-GC	18	WH	3559036C1	3509903C1
10*	R49-G	18	WH	3559036C1	3509903C1
11	R49A	18	GY	3559036C1	3509903C1
12	R58AC	16	BN	3559037C1	3509903C1
13@	R94BA	16	GY	3559037C1	3509903C1
13#	R94MBA	18	GY	3559036C1	3509903C1
14@	R94BB	16	GY	3559037C1	3509903C1
14#	R94MBB	18	GY	3559036C1	3509903C1
15@	R94BC	16	GY	3559037C1	3509903C1
15#	R94MBC	18	GY	3559036C1	3509903C1
16@	R94BD	16	GY	3559037C1	3509903C1
16#	R94MBD	18	GY	3559036C1	3509903C1
17@	R94BE	16	GY	3559037C1	3509903C1
17#	R94MBE	18	GY	3559036C1	3509903C1
18@	R94BF	16	GY	3559037C1	3509903C1
18#	R94MBF	18	GY	3559036C1	3509903C1
19@	R94BH	16	GY	3559037C1	3509903C1
19#	R94MBH	18	GY	3559036C1	3509903C1
20@	R94BJ	16	GY	3559037C1	3509903C1
20#	R94MBJ	18	GY	3559036C1	3509903C1
21@	R94BK	16	GY	3559037C1	3509903C1
21#	R94MBK	18	GY	3559036C1	3509903C1
22@	R94BL	16	GY	3559037C1	3509903C1
22#	R94MBL	18	GY	3559036C1	3509903C1
23@	R94BM	16	GY	3559037C1	3509903C1
23#	R94MBM	18	GY	3559036C1	3509903C1
24@	R94BN	16	GY	3559037C1	3509903C1
24#	R94MBN	18	GY	3559036C1	3509903C1

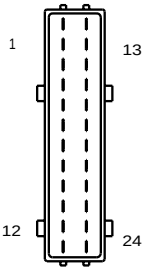

CONNECTOR 3558026C1
BODY LOCK 3558056C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
1	N71BA	14	OR	3559035C1	3575783C1
2	N56A	14	OR	3559035C1	3575783C1
3	N57A	14	OR	3559035C1	3575783C1
4	N68A	14	BN	3559035C1	3575783C1
5	N10-G	12	WH	3559035C1	3575783C1
6	N32A	18	TN	3509874C1	3509903C1
7	N9BF	18	GY	3509874C1	3509903C1
8	N32	18	TN	3509874C1	3509903C1
9	N49	18	GY	3509874C1	3509903C1
10	N49-G	18	WH	3509874C1	3509903C1
11	N49A	18	GY	3509874C1	3509903C1
12	PLUG	-	-	3532129C1	-
13	N94BA	16	GY	3559035C1	3509903C1
14	N94BB	16	GY	3559035C1	3509903C1
15	N94BC	16	GY	3559035C1	3509903C1
16	N94BD	16	GY	3559035C1	3509903C1
17	N94BE	16	GY	3559035C1	3509903C1
18	N94BF	16	GY	3559035C1	3509903C1
19	N94BH	16	GY	3559035C1	3509903C1
20	N94BJ	16	GY	3559035C1	3509903C1
21	N94BK	16	GY	3559035C1	3509903C1
22	N94BL	16	GY	3559035C1	3509903C1
23	N94BM	16	GY	3559035C1	3509903C1
24	N94BN	16	GY	3559035C1	3509903C1

* MUTUALLY EXCLUSIVE
@ W/ BENDIX ABS
W/ WABCO ABS
& W/ TOPGUN
W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	ADDED LONESTAR EFFECT	B	61254R

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 11SEP06
PART NO. AE08055906
SHEET 122

Figure 358 Connector Composites (9800/9800F/9800M)

https://truckmanualshub.com/

14.146. CONNECTOR COMPOSITES (9801/9801F/9801M), P. 123


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.


ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

CENTER / REAR PROGNOSTICS & DIAGNOSTICS
(9801 / 9801F / 9801M)
(LOCATED ON LEFT FRAME RAIL BEHIND CAB)

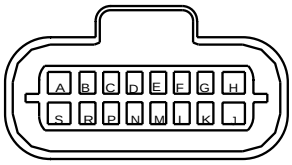

CONNECTOR 3533852C1

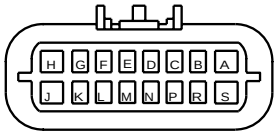

CONNECTOR 3533853C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N108VB	16	TN	3534162C1	3535428C1
B	N107-GC	18	TN	3535303C1	3535424C1
C	N107C	18	TN	3535303C1	3535424C1
D	N108F	18	TN	3535303C1	3535424C1
E	N108E	18	TN	3535303C1	3535424C1
F	N108D	18	TN	3535303C1	3535424C1
G	N108C	18	TN	3535303C1	3535424C1
H	N107B	18	TN	3534162C1	3535427C1
J	N108ZB	16	TN	3534162C1	3535428C1
K	N22ZB	18	TN	3535303C1	3535424C1
L	N22VB	18	TN	3535303C1	3535424C1
M	N22B	18	TN	3535303C1	3535424C1
N	N22ZC	18	TN	3535303C1	3535424C1
P	N22VC	18	TN	3535303C1	3535424C1
R	N22C	18	TN	3535303C1	3535424C1
S	N107-GB	18	TN	3534162C1	3535427C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R108VB	16	TN	3534160C1	3535428C1
B	R107-GC	18	TN	3535305C1	3535424C1
C	R107C	18	TN	3535305C1	3535424C1
D	R108F	18	TN	3535305C1	3535424C1
E	R108E	18	TN	3535305C1	3535424C1
F*	R108D	18	TN	3535305C1	3535424C1
F#	R108DA	18	TN	3535305C1	3535424C1
G*	R108C	18	TN	3535305C1	3535424C1
G#	R108CA	18	TN	3535305C1	3535424C1
H	R107B	18	TN	3534160C1	3535427C1
J	R108ZB	16	TN	3534160C1	3535428C1
K	R22ZB	20	TN	3535304C1	3535423C1
L	R22VB	20	TN	3535304C1	3535423C1
M	R22B	20	TN	3535304C1	3535423C1
N	R22ZC	20	TN	3535304C1	3535423C1
P	R22VC	20	TN	3535304C1	3535423C1
R	R22C	20	TN	3535304C1	3535423C1
S	R107-GD	18	TN	3534160C1	3535427C1

* W/ SLACK ADJUSTER SENSOR 4X2
W/ SLACK ADJUSTER SENSOR 6X4

CHK	DATE	CHANGE	REV	REFERENCE
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R
	DIAGRAM, PROSTAR			

DRAWN U00K640
NAME CIRCUIT DIAGRAM, PROSTAR, LONESTAR
RELEASE NO. 59637L
DATE 11SEP06
PART NO. AE08055906
SHEET 123

Figure 359 Connector Composites (9801/9801F/9801M)

https://truckmanualshub.com/

14.147. CONNECTOR COMPOSITES (9811), (9812), (9813), P. 124


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN


FRONT AXLE TEMP SENDER
(9811)
(LOCATED ON LEFT FRAME RAIL BY FORWARD REAR AXLE)

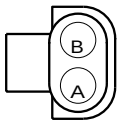

CONNECTOR 0587568C91

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R32	18	TN	0587576C1	1652325C1
B	R9C	18	GY	0587576C1	1652325C1


REAR AXLE TEMP (6X4) SENDER
(9812)
(LOCATED ON LEFT FRAME RAIL BY REAR REAR AXLE)

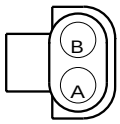

CONNECTOR 0587568C91

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R32A	18	TN	0587576C1	1652325C1
B	R9B	18	GY	0587576C1	1652325C1

REAR AXLE TEMP SENDER (4X2)
(9813)
(LOCATED ON LEFT FRAME RAIL BY REAR AXLE)

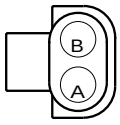

CONNECTOR 0587568C91

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R32A	18	TN	0587576C1	1652325C1
B	R9	18	GY	0587576C1	1652325C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	B	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 124

Figure 360 Connector Composites (9811), (9812), (9813)

https://truckmanualshub.com/

14.148. CONNECTOR COMPOSITES (9814), (9815), (9816), P. 125


INTERNATIONAL TRUCK AND ENGINE CORPORATION

THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

6X4 FORWARD REAR AXLE DIFF
LOCKED INDICATOR SWITCH
(9814)
(LOCATED ON FRONT OF FORWARD REAR AXLE)




CONNECTOR 0587567C91

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A*	R49A	18	GY	0587578C1	1652325C1
A#	R49	18	GY	0587578C1	1652325C1
B*	R49-GB	18	WH	0587578C1	1652325C1
B#	R49-G	18	WH	0587578C1	1652325C1

* W/ TWO DIFF LOCK WARN LIGHT (6X4)
W/ ONE DIFF LOCK WARN LT(6X4) W/ TAG

6X4 REAR REAR AXLE DIFF
LOCKED INDICATOR SWITCH
(9815)
(LOCATED ON FRONT OF REAR REAR AXLE)




CONNECTOR 0587567C91

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R49	18	GY	0587578C1	1652325C1
B*	R49-G	18	WH	0587578C1	1652325C1
B#	R49-GA	18	WH	0587578C1	1652325C1

* W/ ONE DIFF LOCK WARN LIGHT
W/ TWO DIFF LOCK WARN LIGHT

4X2 REAR AXLE DIFF
LOCKED INDICATOR SWITCH
(9816)
(LOCATED ON FRONT OF REAR AXLE)



CONNECTOR 0587567C91

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R49	18	GY	0587578C1	1652325C1
B	R49-G	18	WH	0587578C1	1652325C1

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	14JAN09	TITLE WAS CIRCUIT	C	61254R	U00K640	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
	DIAGRAM, PROSTAR				RELEASE NO. 59637L	DATE 11SEP06

PART NO. AE08055906 SHEET 125

Figure 361 Connector Composites (9814), (9815), (9816)

https://truckmanualshub.com/

14.149. CONNECTOR COMPOSITES (9830/9832), (9865/9865F/9865M), P. 126

INTERNATIONAL TRUCK AND ENGINE CORPORATION


THIS PRINT IS PROVIDED ON A RESTRICTED BASIS AND IS NOT TO BE USED IN ANY WAY DETRIMENTAL TO THE INTEREST OF INTERNATIONAL TRUCK AND ENGINE CORPORATION.

ELECTRICAL CIRCUIT DIAGRAM CHAPTER 14

CONNECTOR BODY COMPOSITE - MATING VIEW SHOWN

REAR LOAD INDICATOR
(9830 - 4X2)
(9832 - 6X4)

(LOCATED ON REAR SUSPENSION AIR BAG:
LEFT SIDE - 6X4
RIGHT SIDE 4X2)



CONNECTOR 1678137C1


CAV	CIR	GAUGE	COLOR	TERMINAL
A	R109B	18	GY	1651943C1
B	R106B	18	GY	1651943C1
C	R61B	18	GY	1651943C1

LOAD INDICATOR CENTER CHASSIS / REAR CHASSIS
(9865 / 9865M / 9865F)
(LOCATED ON LEFT FRAME RAIL BEHIND CAB)



CONNECTOR 1667741C1

BODY LOCK 1667771C1



CONNECTOR 1667740C1

BODY LOCK 1667771C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	N109B	18	GY	1667742C1	1661872C1
A*	N109B	18	GY	1661875C1	1661872C1
B	N106B	18	GY	1667742C1	1661872C1
B*	N106B	18	GY	1661875C1	1661872C1
C	N61B	18	GY	1667742C1	1661872C1
C*	N61B	18	GY	1661875C1	1661872C1

CAV	CIR	GAUGE	COLOR	TERMINAL	SEAL/SLEEVE
A	R109B	18	GY	1661875C1	1661872C1
A*	R109B	18	GY	1667742C1	1661872C1
B	R106B	18	GY	1661875C1	1661872C1
B*	R106B	18	GY	1667742C1	1661872C1
C	R61B	18	GY	1661875C1	1661872C1
C*	R61B	18	GY	1667742C1	1661872C1

* W/ LONESTAR

CHK	DATE	CHANGE	REV	REFERENCE	DRAWN	NAME
CNA1	20JAN09	ADDED LONESTAR EFFECT	B	61254R	300371	CIRCUIT DIAGRAM, PROSTAR, LONESTAR
					RELEASE NO. 50297W	DATE 18OCT07

PART NO. AE08055906 SHEET 126

Figure 362 Connector Composites (9830/9832), (9865/9865F/9865M)

https://truckmanualshub.com/

14.150. CONNECTOR COMPOSITES (9900), (9901), (9902), P. 127

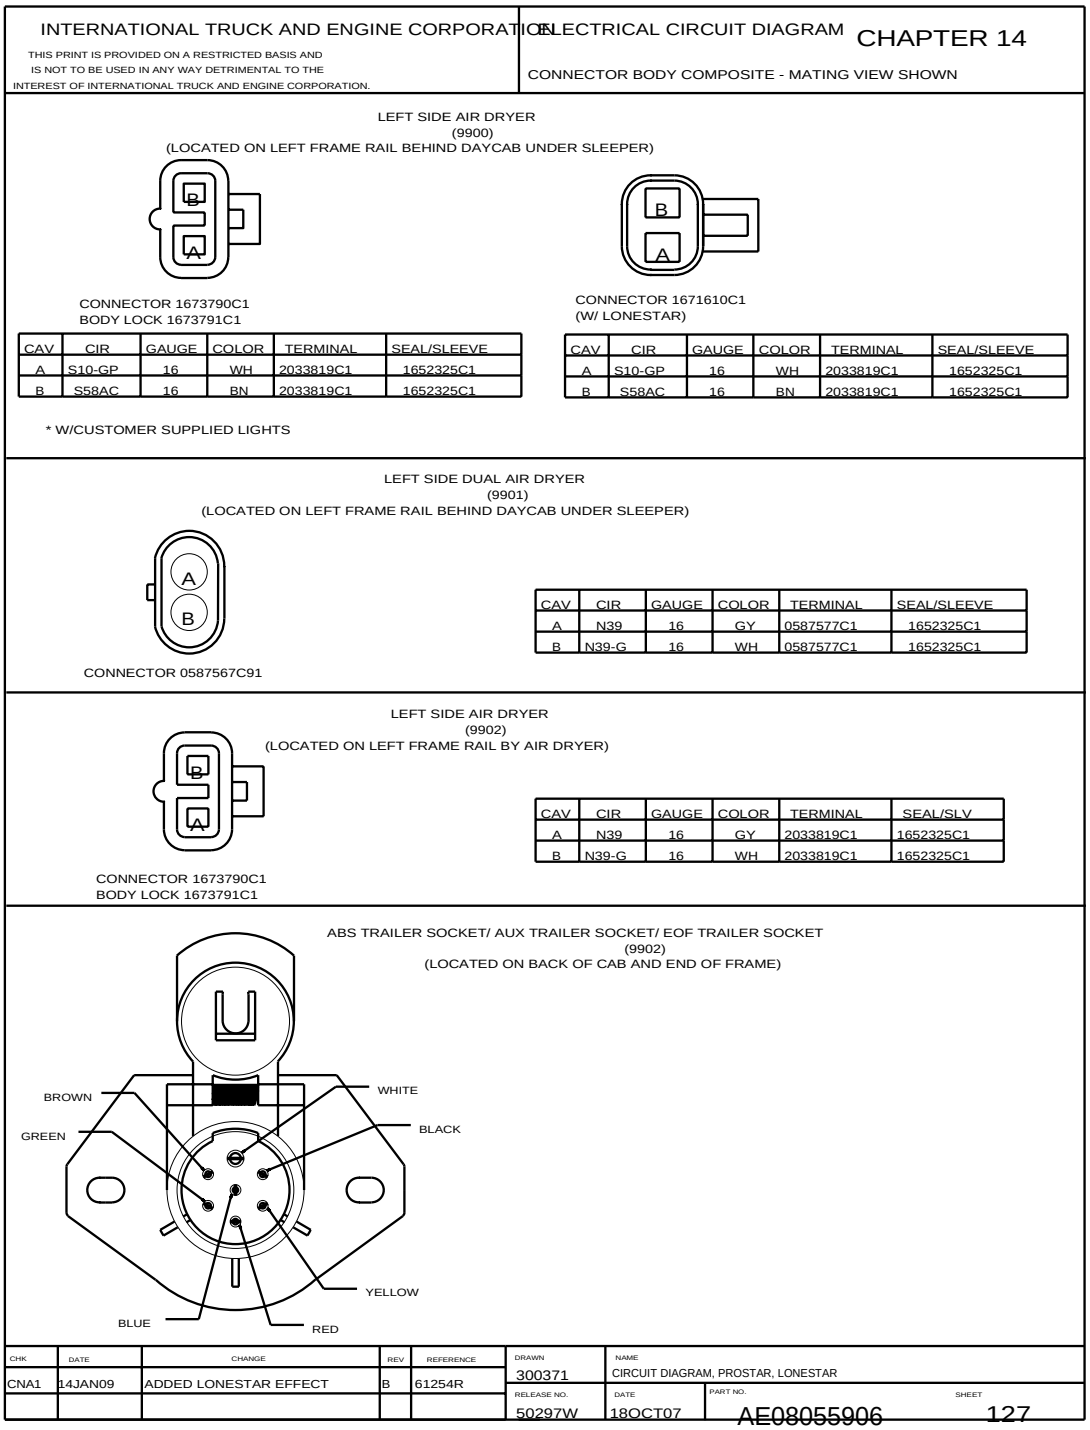


Figure 363 Connector Composites (9900), (9901), (9902)