https://www.pdfmanual4trucks.com/

T3571


S/N 3628 11001 & above

T3571L

S/N 3629 11001 & above

Bobcat®

PARTS MANUAL

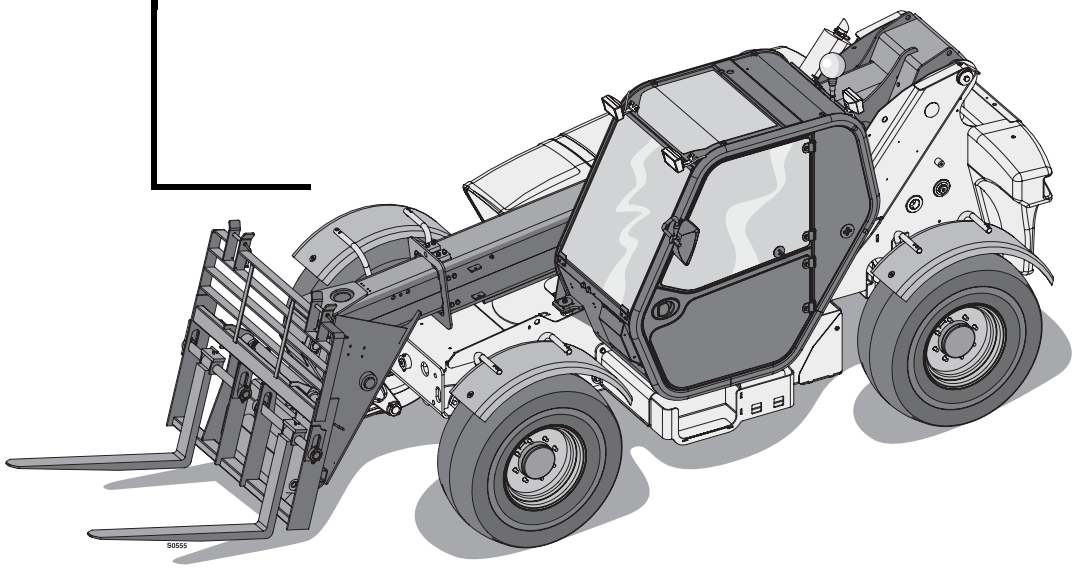

4950124 (09-05)

An Ingersoll-Rand business

© Bobcat Europe, 2005

https://www.pdfmanual4trucks.com/

GENERAL INFORMATION

When using the machine serial number (S/N), use the complete number.

In the serial number column S/N ranges are displayed as follows:

S/N 3632 11001 & above : range starting from and including S/N 3632 11001

S/N 3632 11001 & below : range up to and including S/N 3632 11001

3632 11001 thru 3632 11059 : from S/N 3632 11001 up to and including S/N 3632 11059

The number shown in the quantity column in this manual is the number of parts needed for the illustration on the page.

For some parts an “x” will be shown in the quantity column. This ”x” indicates that the quantity to be used is ”As Needed”.

When references L.H. and R.H. are used in this manual, it is done from the operator’s seat in the forward operating position.

Some of the illustrations and information found in this parts manual were supplied to Bobcat by machine component companies.

ABBREVIATIONS & SYMBOLS

NAP:	**Not Available as Parts**
NSS:	**Not Serviced Separately**
*** :**	**Changed or added pages or lines**
Qty:	**Quantity**
Pos.:	**See position .. on illustration**
Order:	**Order now the following part number for this part.**
See page .. for details:	**Refers to a page where more details on this part can be found.**

https://www.pdfmanual4trucks.com/

CONTENTS

MAIN FRAME

Chassis 3
Ballast 7
Fuel Tank Installation 9
Engine Cover 11
Engine Sound Proofing 15
Engine Basket 17
Cab & Fixations 19
Cab Assy 21
Cab Assy II 25
Seat & Suspension 29
Heating/ventilation Installation 31
Heating/ventilation Fan Assy 33
Pedals Installation 35
Steering Column Installation 37
Cowling Installation 39
Control Panel Switches 41
Door Assy 45
Rear Window Installation 49
Wiper Installation 51
Parking Brake Lever - 3628 11135 & below + 3629 11015 & below 53
Parking Brake Lever - 3628 11136 & above + 3629 11016 & above 55
Fixed Boom Assy 57
End Boom Assy 59
Manual Quick Attach Lock 61

DRIVE SYSTEM

Axle Installation 63
Cardan Shaft 65
Hub Reduction - Front Axle / Rear Axle - quantities are per axle 67
Reducer Box - Front Axle 69
Housing - Front Axle 71
Differential - Front Axle 75
Steering - Front Axle 77
Brakes - Front Axle 81
Housing - Rear Axle 83
Differential - Rear Axle 85
Steering - Rear Axle 87

HYDRAULIC SYSTEM

Boom Hydraulic Installation 91
Boom Hydraulic Supply 97
Lift & Compensation Cylinder Installation 99
Steering Hoses & Fittings (without damper) 101
Steering Hoses & Fittings (with damper) 103
Steering Hydraulics Cab 105
Joystick Installation (without AMA) 107
Joystick Installation (with AMA) 109
AMA - Installation 111
Service Brake Hydraulic Installation 113

https://www.pdfmanual4trucks.com/

Parking Brake Hydraulic Installation 115
Parking Brake Hydraulic Installation (accumulator) 117
Quick Attach Installation 119
Hydraulic Tank Installation 121
Frame Level Installation 125
Lift Cylinder 127
Compensating Cylinder 129
Telescope Cylinder - 6912582 131
Telescope Cylinder - 6913007 133
Tilt Cylinder 135
Quick Attach Cylinder 137
Frame Level Cylinder 139
Hydraulic Motor - for cooler fan 141
Hydraulic Pump Installation 143
Hydraulic Pump Assy 145
Hydraulic Control Valve Fixations 147
Hydraulic Control Valve Installation 149
Hydraulic Control Valve: In- and Outlet 155
Hydraulic Control Valve Lift Section 157
Hydraulic Control Valve Tilt Section 159
Hydraulic Control Valve Telescope Section 161
Hydraulic Control Valve Auxiliary Hydraulics Section 163

HYDROSTATIC SYSTEM

Hydrostatic Hoses and Fittings 165
Hydrostatic Pump Assy - 6910533 3628 11091 & below + 3629 11008 & below 169
Hydrostatic Pump Assy - 6913565 3628 11092 & above + 3629 11009 & above 173
Hydrostatic Motor Assy 179

ELECTRICAL SYSTEM

Electrical Circuit Chassis 183
Electrical Circuit Cab 187
Electrical Circuit Engine 189
Ventilation Reverse Electrical 191
Joystick 193
Joystick / Susmic Installation 195
Security Circuit 197

POWER UNIT

Engine Installation 199
Exhaust System 205
Cooling System Installation 207
Cooling Fan Circuit 211
Cooling Fan Circuit (with optional reverse) 213
Cylinder Block 215
Crankshaft - Pistons 219
Flywheel and Drive Pulley 221
Cylinder Head 223
Rocker Shaft 227
Timing Gear 229
Oil Sump - Oil Pump 231
Fuel Injection Equipment 233
Fuel Feeding 237
Cylinder Head Cover 239
Oil Cooler and Filter 241
Water Pump and Thermostat 243

https://www.pdfmanual4trucks.com/

Turbocharger 245
Alternator 249
Flywheel Housing and Starter 251
Engine Gaskets Sets 253

ACCESSORIES & OPTIONS

Air Conditioning Installation 255
DUNLOP 400/80-R24 153B Wheels 261
DUNLOP 400/80-R24 156B Wheels 263
TITAN 400/70-R20 Wheels 265
DUNLOP 405/70-R20 SPT9 Wheels 267
MICHELIN 440/70 XM37 Wheels 269
BFGOODRICH 400/70-20 Wheels 271
Mudguard 20" 273
Mudguard 24" 275
Tow Valve Installation 277
Wheel Wedge Option 279
Valve Braking Switch Option 281
Matriculation Plate Option 283
Trailer Plug 285
Tow Hitch 287
Rear View Mirror 289
Backup Alarm 291
Windshield Protection Grill 293
2nd Hydraulic Function On Boom 297
Rear Hydraulic Function 299
Rear Hydraulic Hook 303
Hook 307
Trailer Brake 309
Bobcat Decals 311
Germany Version 313
Italy Version 315
Italy Version with hook 317
Fuel Pre-Filter Kit 319
Hydraulic Tank Filling Kit 321
Damper Kit 323
Kit Boom Head Reinforcement at "Z" Bar Pin 325
Kit Boom Head Reinforcement at Carriage Connection 327
Pression Retaining Kit for Rear Hydr Function 329
Lift Cylinder Accumulator Kit 331
Tool Adaptor Kit 333
Concrete Bucket 335
Jig + Hook 337
Floating Pallet Forks 339
Bales Pikes - Narrow Quick Attach 341
Rigid Forks Holder - Narrow Quick Attach 343
Toothless Buckets - Narrow Quick Attach 345
Toothed Bucket - Narrow Quick Attach 347

https://www.pdfmanual4trucks.com/

Intentionally left blank

https://www.pdfmanual4trucks.com/


T3571(L) Telescopic Handlers

S/N 3628 11001 & above

S/N 3629 11001 & above

https://www.pdfmanual4trucks.com/

Chassis

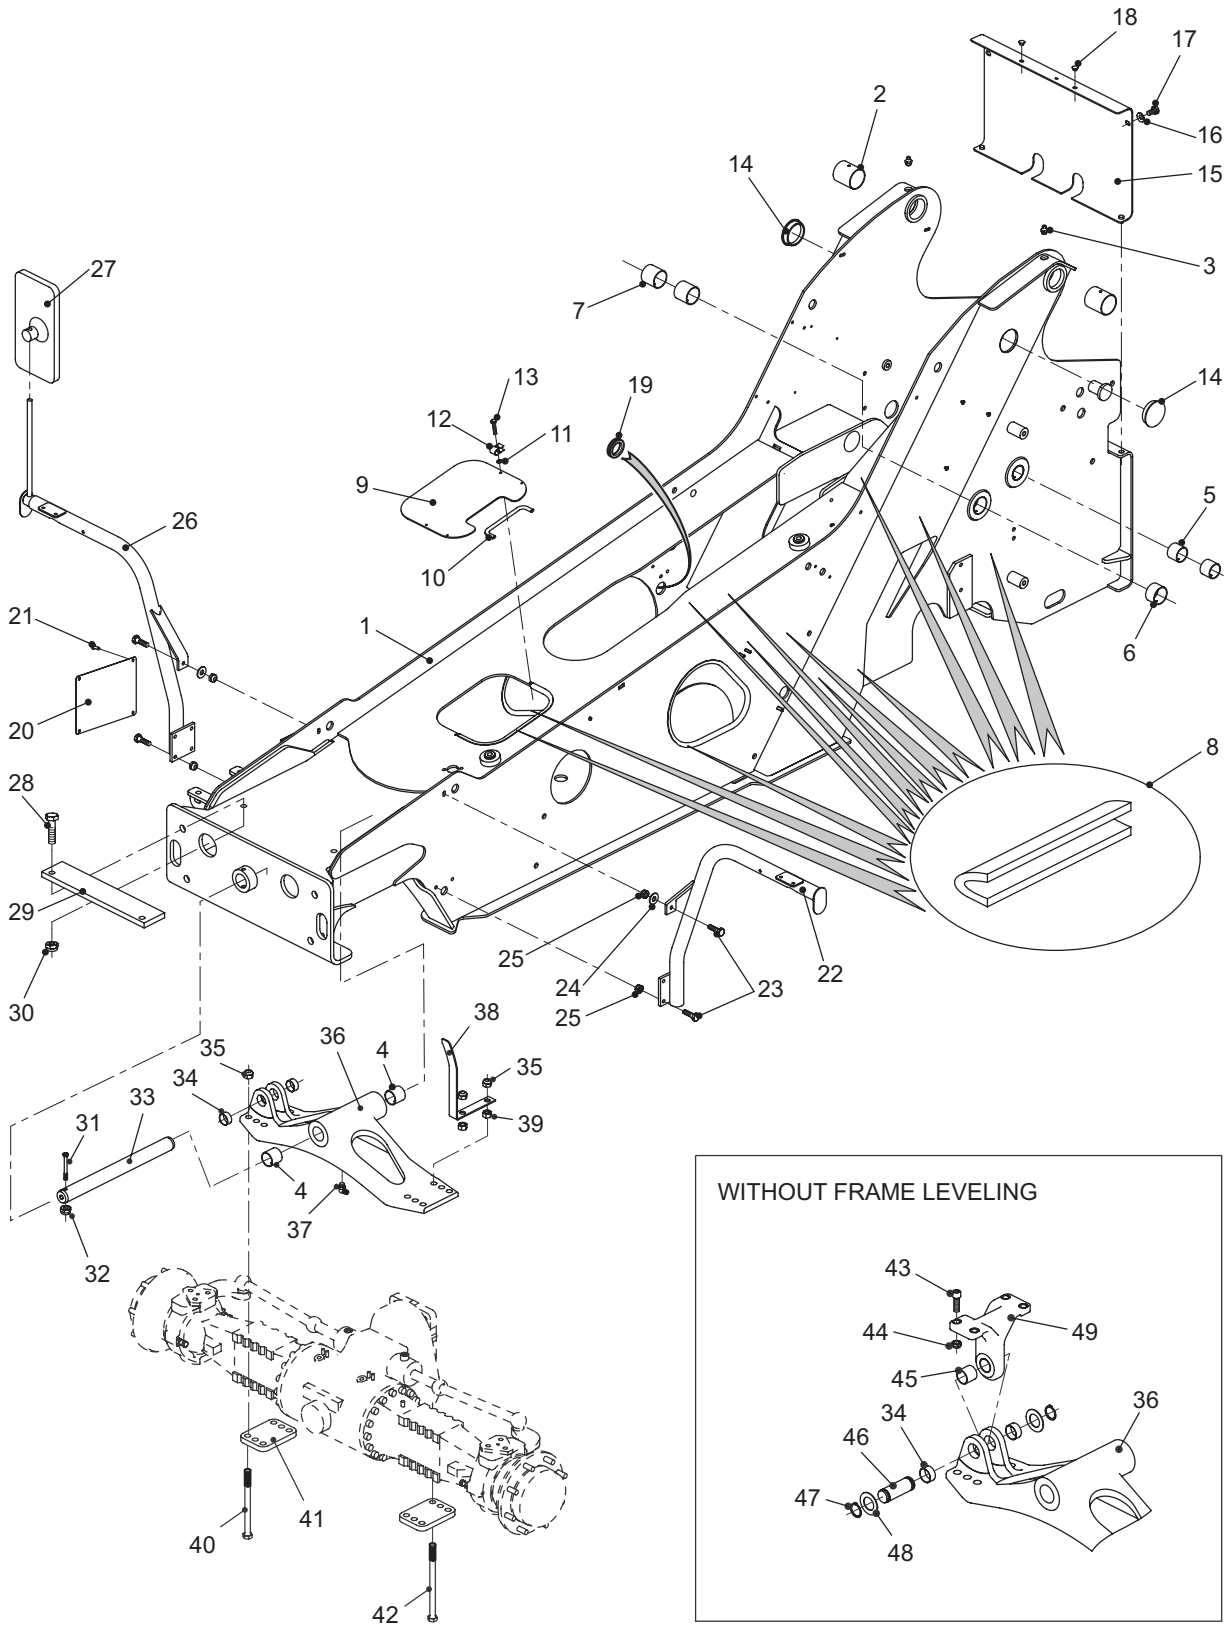

SPC001033

https://www.pdfmanual4trucks.com/


Chassis

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6915048	Frame	Was 6914714		1
2	77380.4	Boom Pivot Bushing			2
3	01775.6	Grease Nipple			2
4	70811.5	Bush	Was 70811.5		2
5	6909439	Bush			2
6	77261.6	Bush	If necessary		1
7	70811.5	Bush			2
8	80919.4	Bush			3
9	79123.6	Plate			1
10	79129.3	Seal			1
11	13415.5	Washer			2
12	79124.4	Nut			2
13	010338-02X	Screw			2
14	6909712	Plug			2
15	6908248	Plate			1
16	01719.4	Washer			2
17	01604.8	Screw			2
18	57702.3	Plug			2
19	79288.7	Rubber mounting			2
20	95632.6	Serial No. plate			1
21	43824.2	Rivet			4
22	92088.4	Bracket, LH			1
23	01607.1	Screw			6
24	000350-21R	Washer			2
25	100345-09A	Nut			6
26	92085.0	Support			1
27	100432-51C	Mirror			1
28	01608.9	Screw			2
29	6913019	Arm stop			1
30	100345-09A	Nut			2
31	65397.2	Screw			1

https://www.pdfmanual4trucks.com/

Chassis

Recurrence of previous drawing

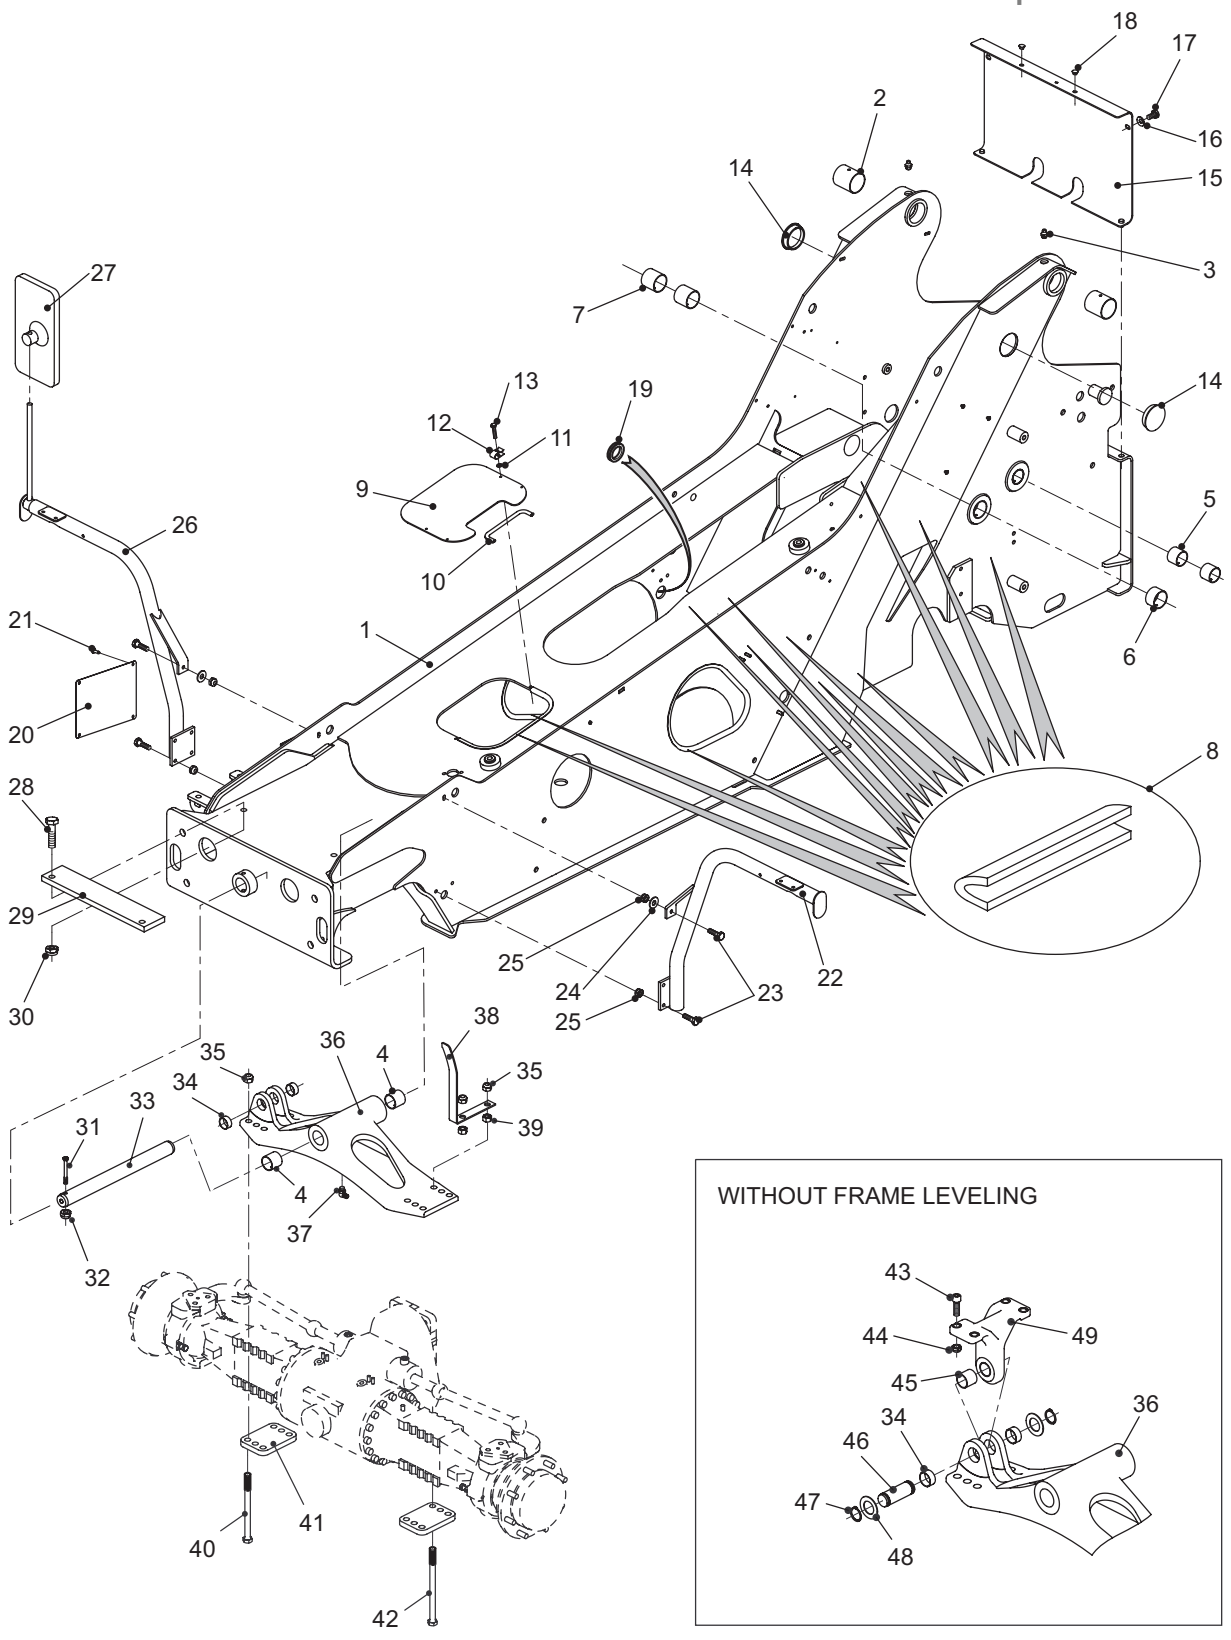

SPC001033


https://www.pdfmanual4trucks.com/

Chassis

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	100345-09A	Nut			1
33	6909147	Spindle			1
34	32974.8	Bush			2
35	100345-20M	Nut			12
36	6911386	Support			1
37	01782.2	Grease nipple			1
38	6913529	Indicator	With Frame Leveling		1
39	01674.1	Nut	With Frame Leveling		2
40	92099.1	Screw			10
41	101241-25J	Plate			2
42	48500.3	Screw	With Frame Leveling		2
	92099.1	Screw	Without Frame Leveling		2
43	53925.4	Screw	Without Frame Leveling		4
44	100345-16H	Nut	Without Frame Leveling		4
45	77192.3	Bush	Without Frame Leveling		1
46	67166.9	Spindle	Without Frame Leveling		1
47	06734.8	Retaining Ring	Without Frame Leveling		2
48	58880.6	Washer	Without Frame Leveling		2
49	6913153	Connecting rod	Without Frame Leveling		1

https://www.pdfmanual4trucks.com/

Ballast

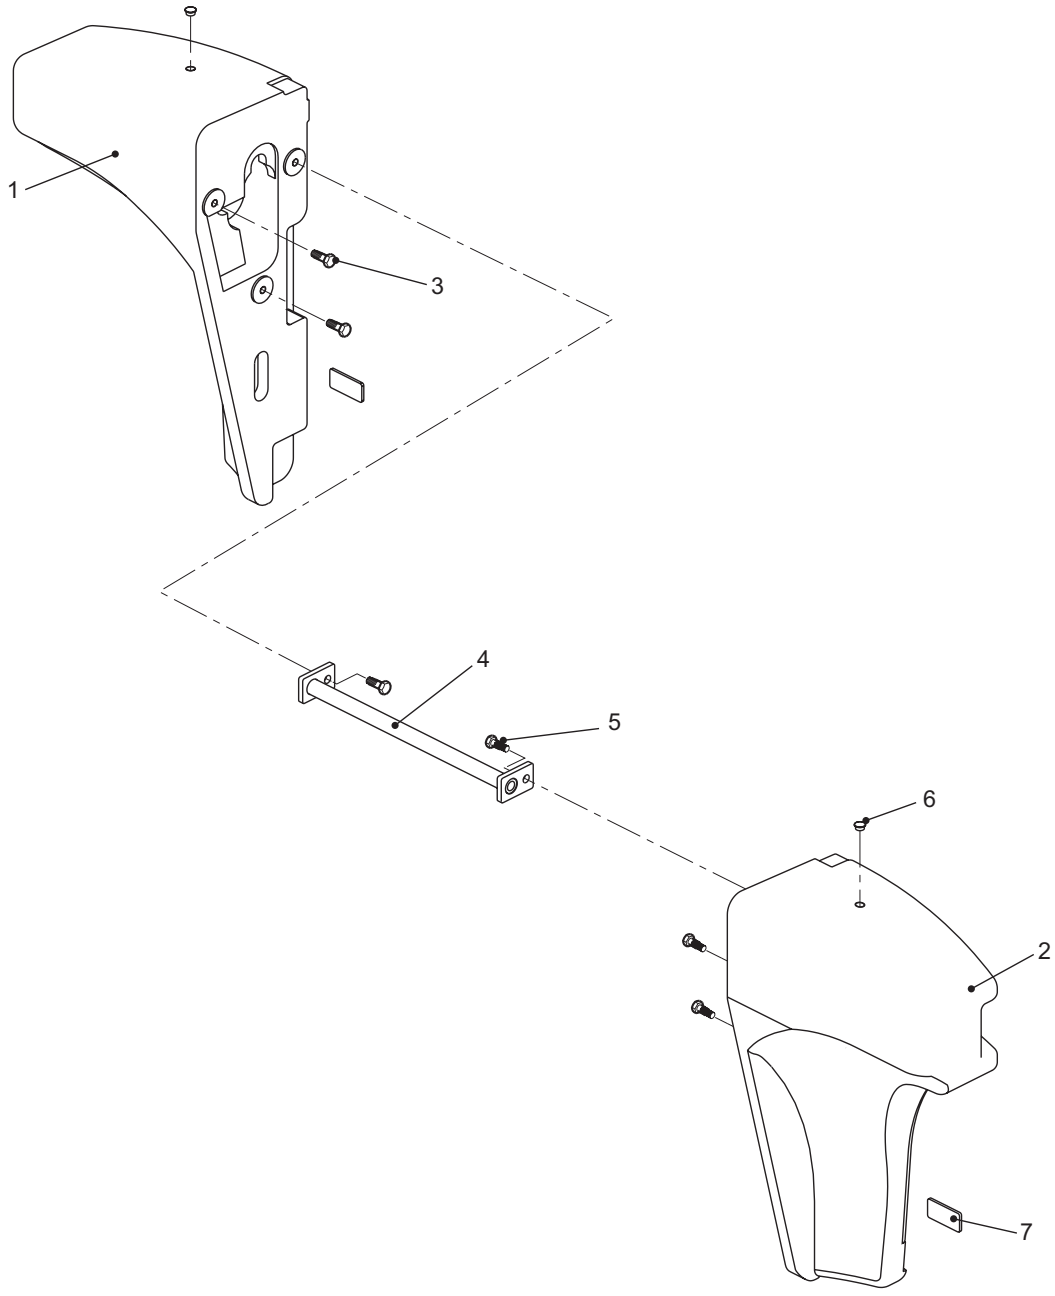

SPC001034


https://www.pdfmanual4trucks.com/

Ballast

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	90841.8	Counterweight RH			1
2	90842.6	Counterweight LH			1
3	01547.9	Screw			4
4	6910496	Tube			1
5	01549.5	Screw			2
6	94548.5	Plastic Cap			4
7	59736.9	Reflector			2

https://www.pdfmanual4trucks.com/

Fuel Tank Installation

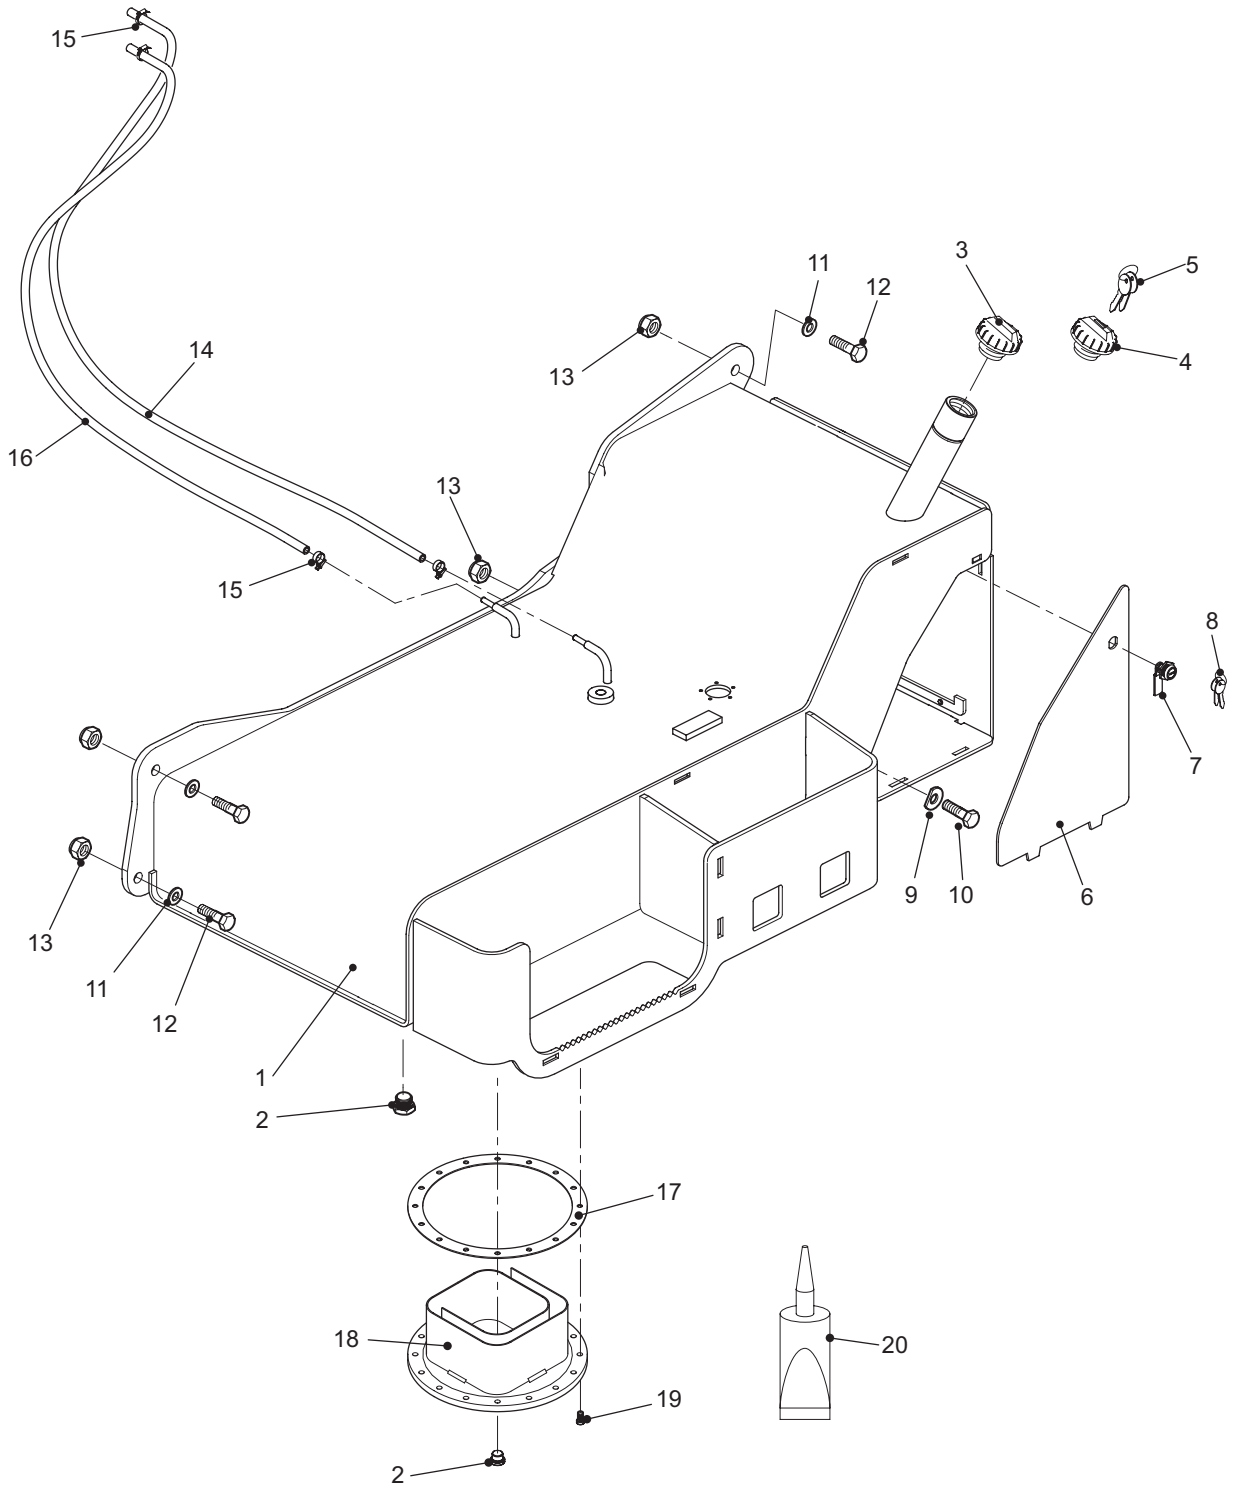

SPC001035


https://www.pdfmanual4trucks.com/

Fuel Tank Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6914735	Fuel tank	Without hatch ; Was 6910162		1
	6914736	Fuel tank	With hatch (Pos. 17-18-19)		1
2	100374-14H	Plug			2
3	6661114	Plug			1
4	6661696	Cap, fuel (with lock)	Pos. 4 + 5		1
5	6587458	Set of keys (fuel cap)			1
6	6910213	Battery door			1
7	6909611	Lock assy			1
8	57189.3	Set of keys (ignition)			1
9	6915235	Washer			1
10	000338-54X	Screw			1
11	01701.2	Washer			3
12	84625.3	Screw			3
13	100345-16H	Nut			4
14	6911074	Feed hose, fuel			1
15	62231.6	Clamp			4
16	6911074	Feed hose, fuel			1
17	95061.8	Seal	Only for hatch version		1
18	95068.3	Trap door	Only for hatch version		1
19	68509.9	Screw	Only for hatch version		16
20	97904.7	Glue	Only for hatch version		1

https://www.pdfmanual4trucks.com/

Engine Cover

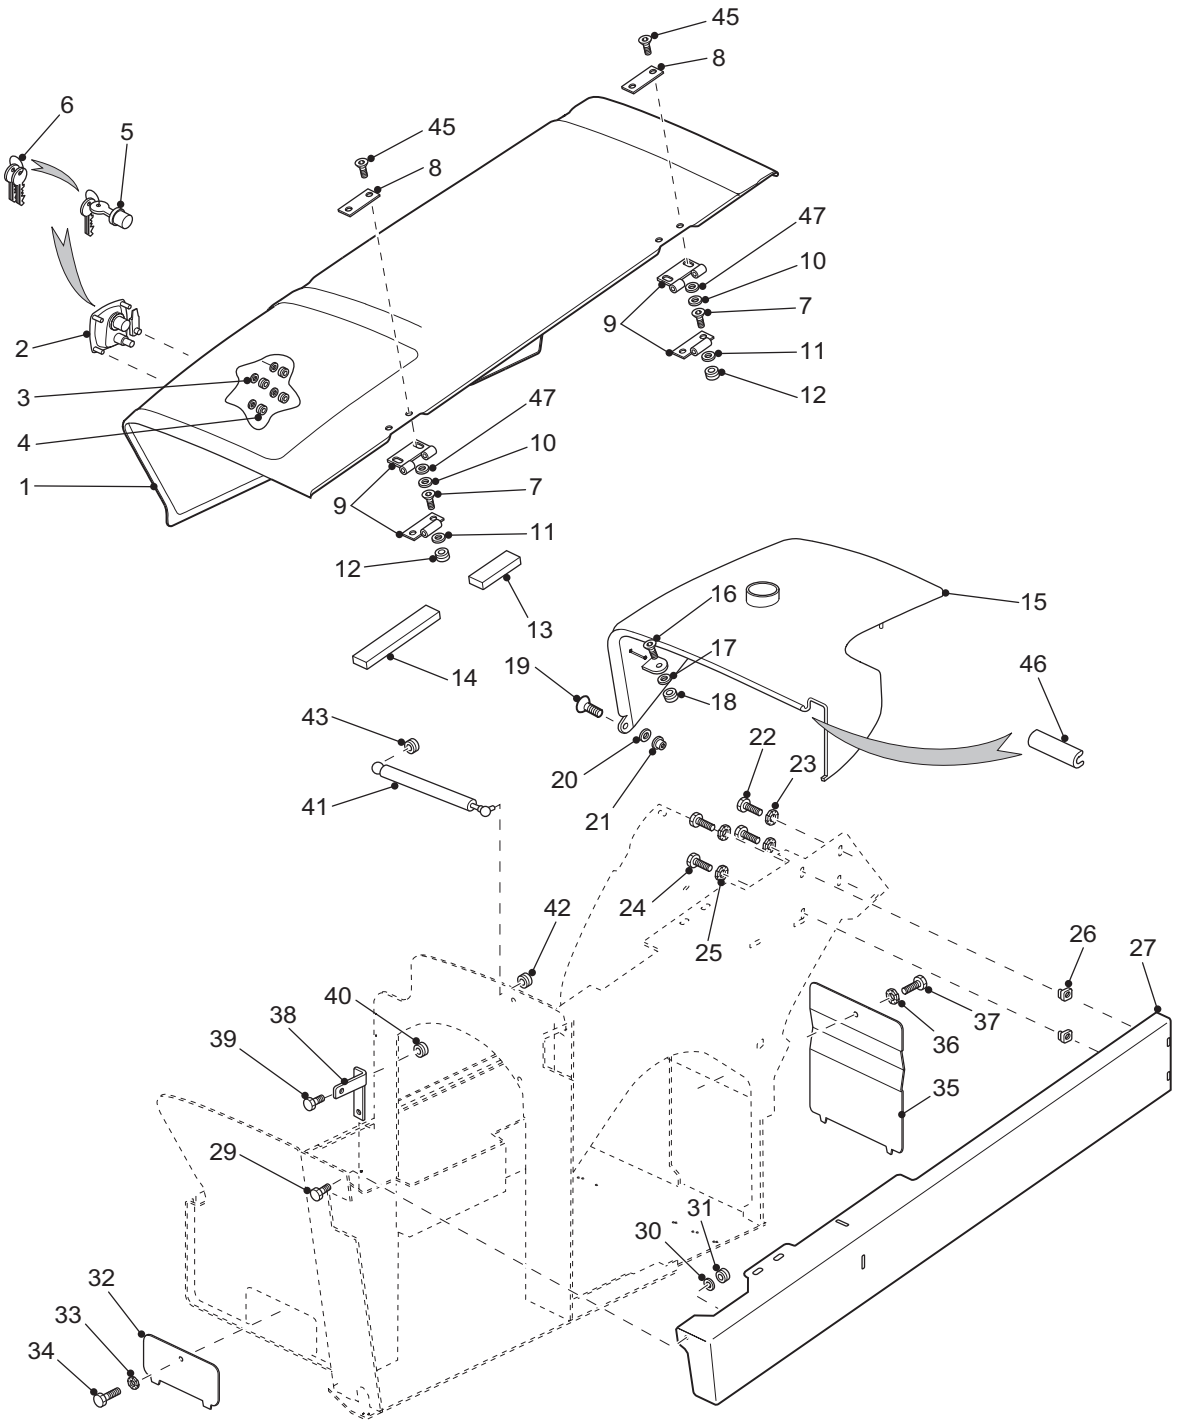

SPC001005

https://www.pdfmanual4trucks.com/


Engine Cover

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	98765.1	Engine cover	Pos. 1 + 2 + 8 + 9 + 45 ; Was 6910149 ; For details, see page 15		1
2	6909609	Lock, engine cover			1
3	13416.3	Washer			4
4	01666.7	Nut			4
5	NAP	Lock cylinder	Order now 6910557 ; Order Pos. 2		1
6	57189.3	Set of keys (ignition)			1
7	000324-65N	Screw			8
8	6909020	Plate			2
9	6912485	Hinge			2
10	01682.4	Nut			4
11	000350-03W	Washer			4
12	100345-09A	Nut			4
13	6914748	Seal	Was 6912496		1
14	6914748	Seal	Was 6912495		1
15	98777.6	Cover	Pos. 15 ; For details, see page 15		1
16	01597.4	Screw			1
17	000350-02V	Washer			1
18	51851.4	Nut			1
19	71825.4	Screw			1
20	000350-02V	Washer			1
21	51851.4	Nut			1
22	01597.4	Screw			2
23	01718.6	Washer			2
24	01597.4	Screw			2
25	01718.6	Washer			2
26	015369-50X	Nut			2
27	6911253	Sill plate			1
29	01597.4	Screw			1
30	000350-02V	Washer			1
31	51851.4	Nut			1
32	6908165	Plate, engine basket, rear			1

https://www.pdfmanual4trucks.com/

Engine Cover

Recurrence of previous drawing

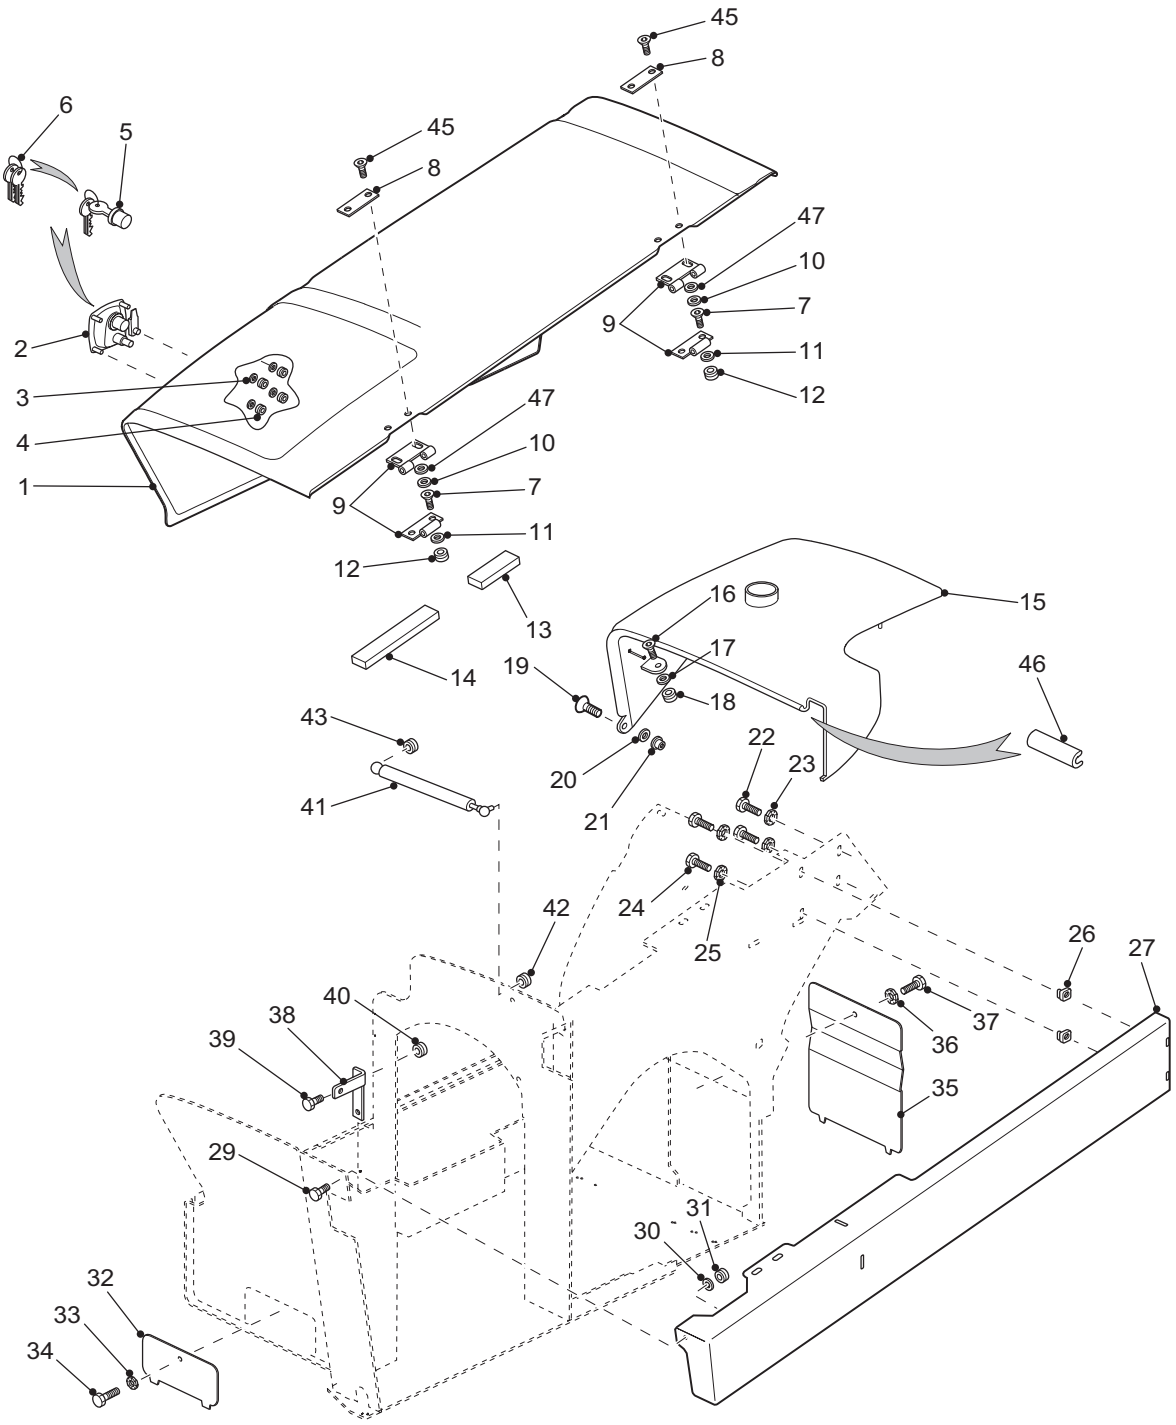

SPC001005


https://www.pdfmanual4trucks.com/

Engine Cover

Item	Part Number	Denomination	Remarks	Serial Number	Qty
33	01718.6	Washer			1
34	01597.4	Screw			1
35	98053.2	Plate, engine basket, front			1
36	01718.6	Washer			1
37	01597.4	Screw			1
38	6915513	Support	Was 6909591		1
39	01596.6	Screw			2
40	51851.4	Nut			2
41	83757.5	Gas Cylinder			1
42	01681.6	Nut			1
43	51851.4	Nut			1
45	000324-65N	Screw	Was 01638.6		4
46	6914678	Seal			1
47	89516.9	Washer			4

https://www.pdfmanual4trucks.com/

Engine Sound Proofing

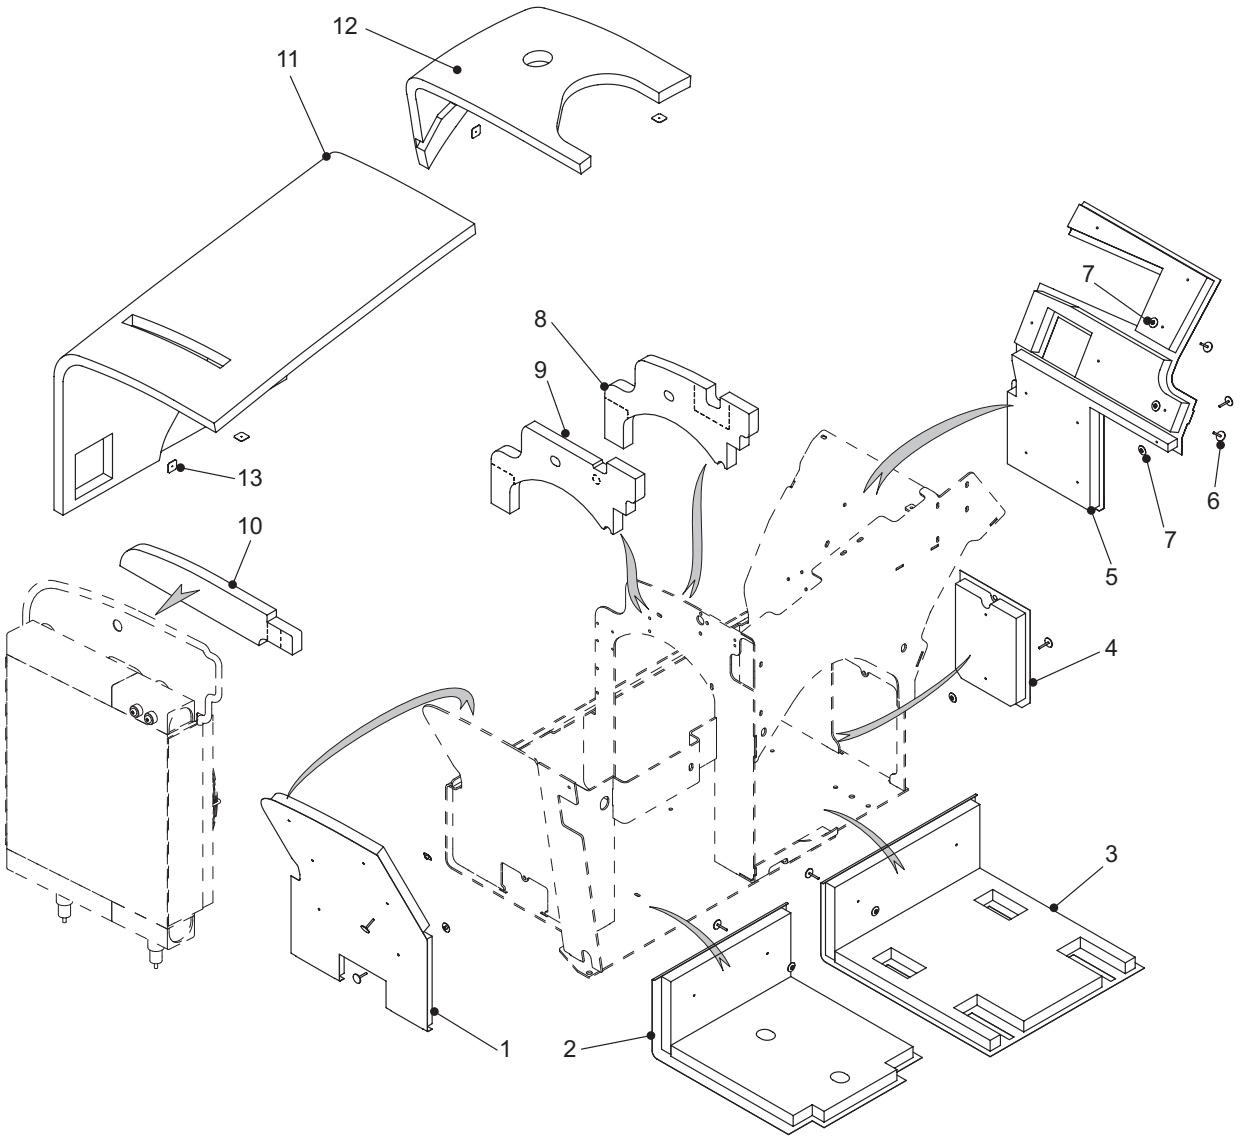

SPC001006


https://www.pdfmanual4trucks.com/

Engine Sound Proofing

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911753	Sponge plate			1
2	6911760	Sponge plate			1
3	6911761	Sponge plate			1
4	6911763	Sponge plate			1
5	6911762	Sponge plate			1
6	6911778	Barb			25
7	6911779	Clip			25
8	6911773	Sponge plate			1
9	6911764	Sponge plate			1
10	6911772	Sponge plate			1
11	6912439	Engine cover soundproofing			1
12	6912440	Rear cover soundproofing			1
13	98080.5	Clip			17

https://www.pdfmanual4trucks.com/

Engine Basket

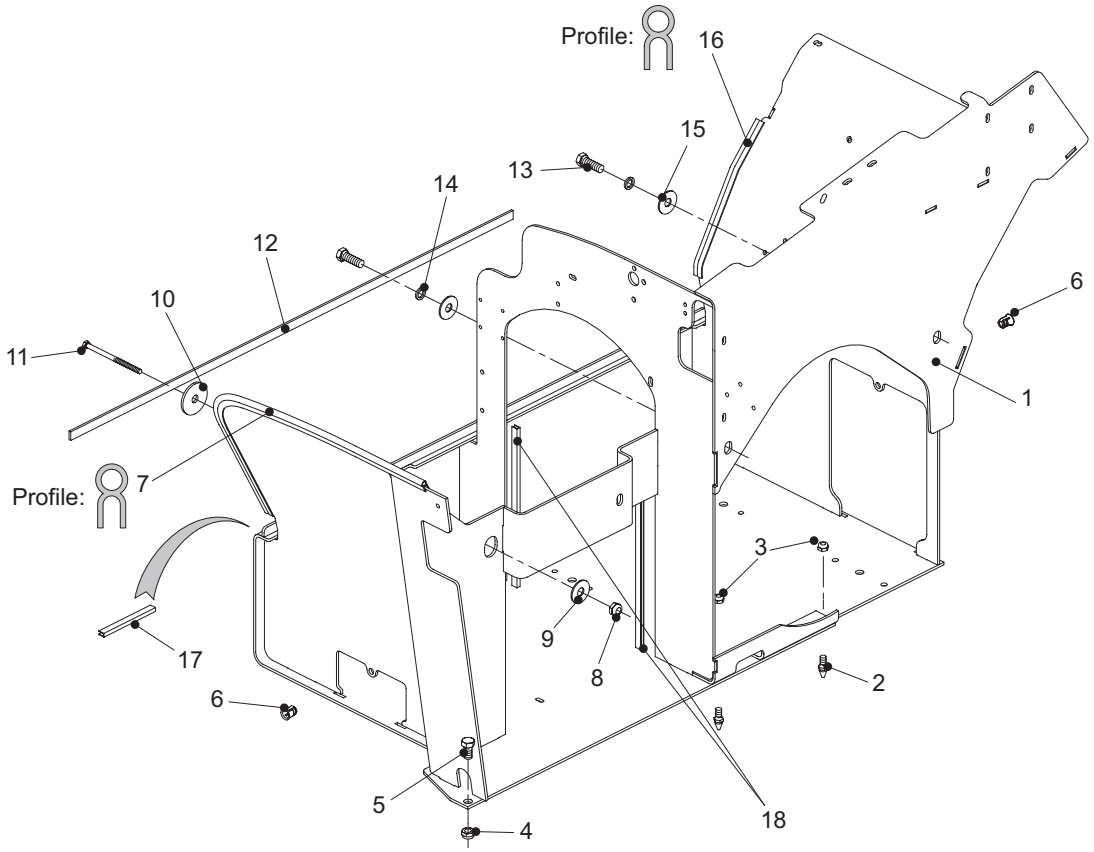

SPC001007


https://www.pdfmanual4trucks.com/

Engine Basket

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6914523	Engine basket	Was 6911088		1
2	6908170	Pin			2
3	000345-96E	Nut			2
4	100345-16H	Nut			1
5	10882.9	Screw			1
6	44334.1	Nut			2
7	6908847	Seal	Length: 1020 mm		1
8	100345-16H	Nut			1
9	88236.5	Washer			1
10	100454-05T	Washer			1
11	6910150	Screw			1
12	6911476	Seal			1
13	84997.6	Screw			2
14	89518.5	Washer			2
15	88236.5	Washer			2
16	6910272	Seal	Length: 340 mm		1
17	6913646	Seal			1
18	6913644	Seal			2

https://www.pdfmanual4trucks.com/

Cab & Fixations

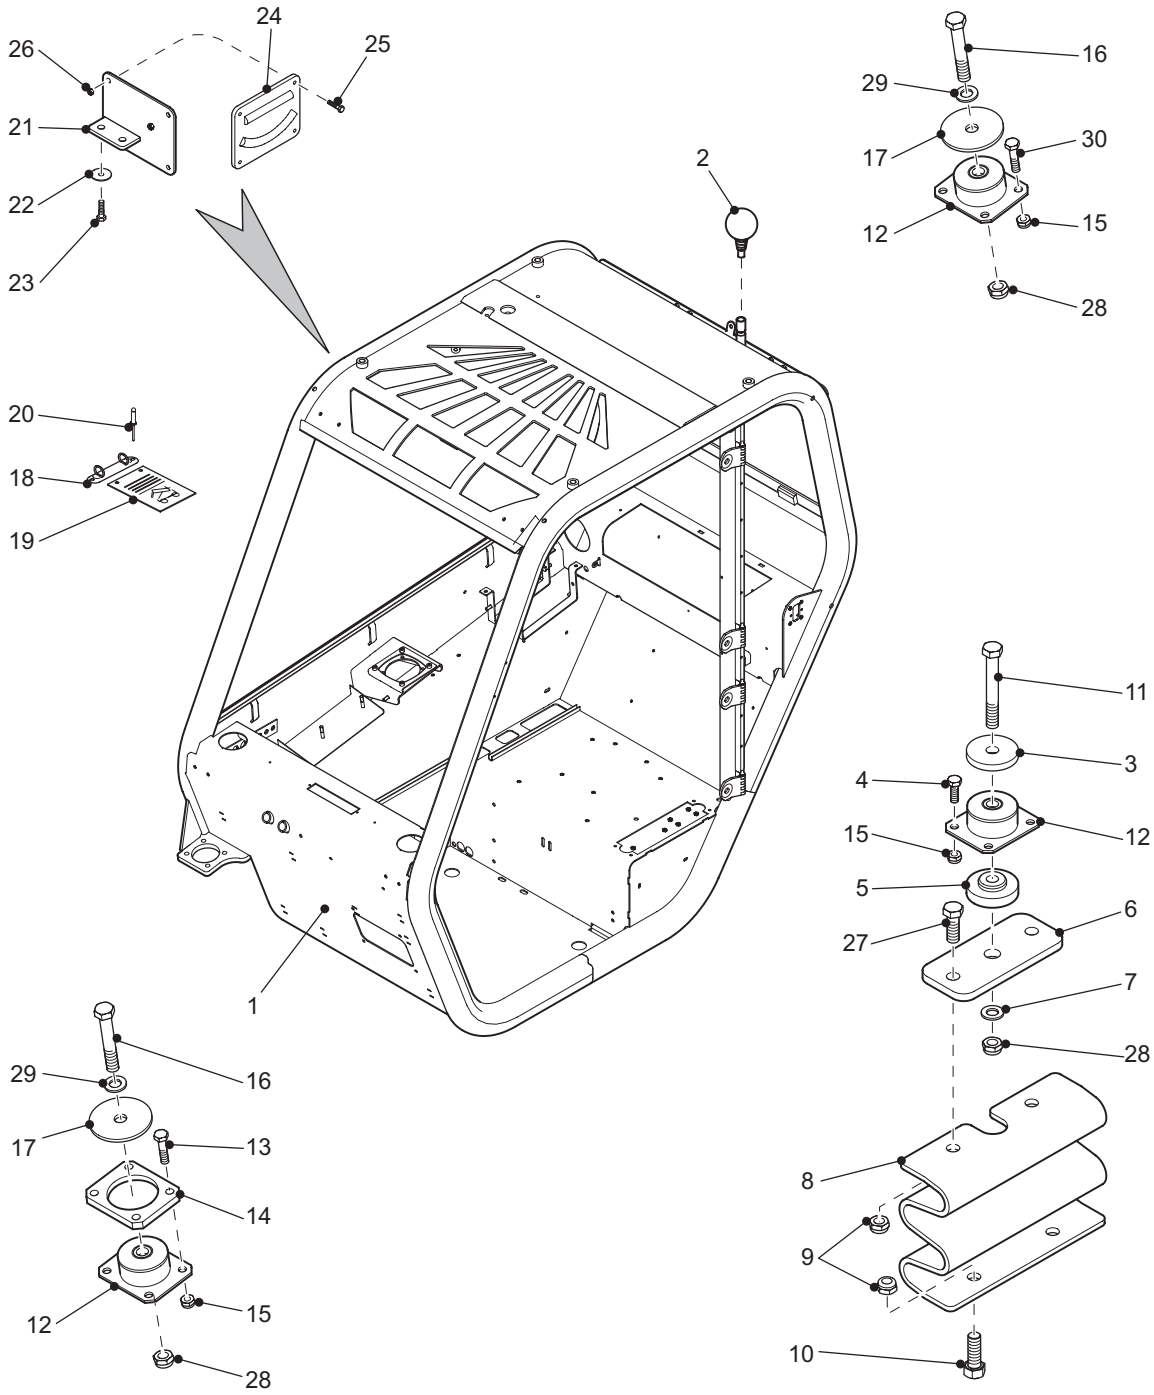

SPC001045


https://www.pdfmanual4trucks.com/

Cab & Fixations

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1		Cab			1
2	78817.4	Rotating Beacon Light	Option		1
3	79879.3	Washer			1
4	01606.3	Screw			8
5	79872.8	Spacer			1
6	78867.9	Support			1
7	01701.2	Washer			1
8	78856.2	Plate			1
9	100345-16H	Nut			4
10	01547.9	Screw			2
11	100338-07M	Screw			1
12	78021.3	Shock Absorber			3
13	79868.6	Shim			1
14	10944.7	Screw			4
15	100345-09A	Nut			12
16	66716.2	Screw			2
17	95704.3	Washer			2
18	78863.8	Support			1
19		Index card			1
20	79864.5	Screw			2
21	92303.7	Bracket	Only with frame leveling		1
22	94574.1	Washer	Only with frame leveling		2
23	15354.4	Screw	Only with frame leveling		2
24	100416-32S	Inclinometer	Only with frame leveling		1
25	01657.6	Screw	Only with frame leveling		3
26	100345-04U	Nut	Only with frame leveling		3
27	01549.5	Screw			2
28	100345-15G	Nut			3
29	01701.2	Washer			3
30	01607.1	Screw			4

https://www.pdfmanual4trucks.com/

Cab Assy

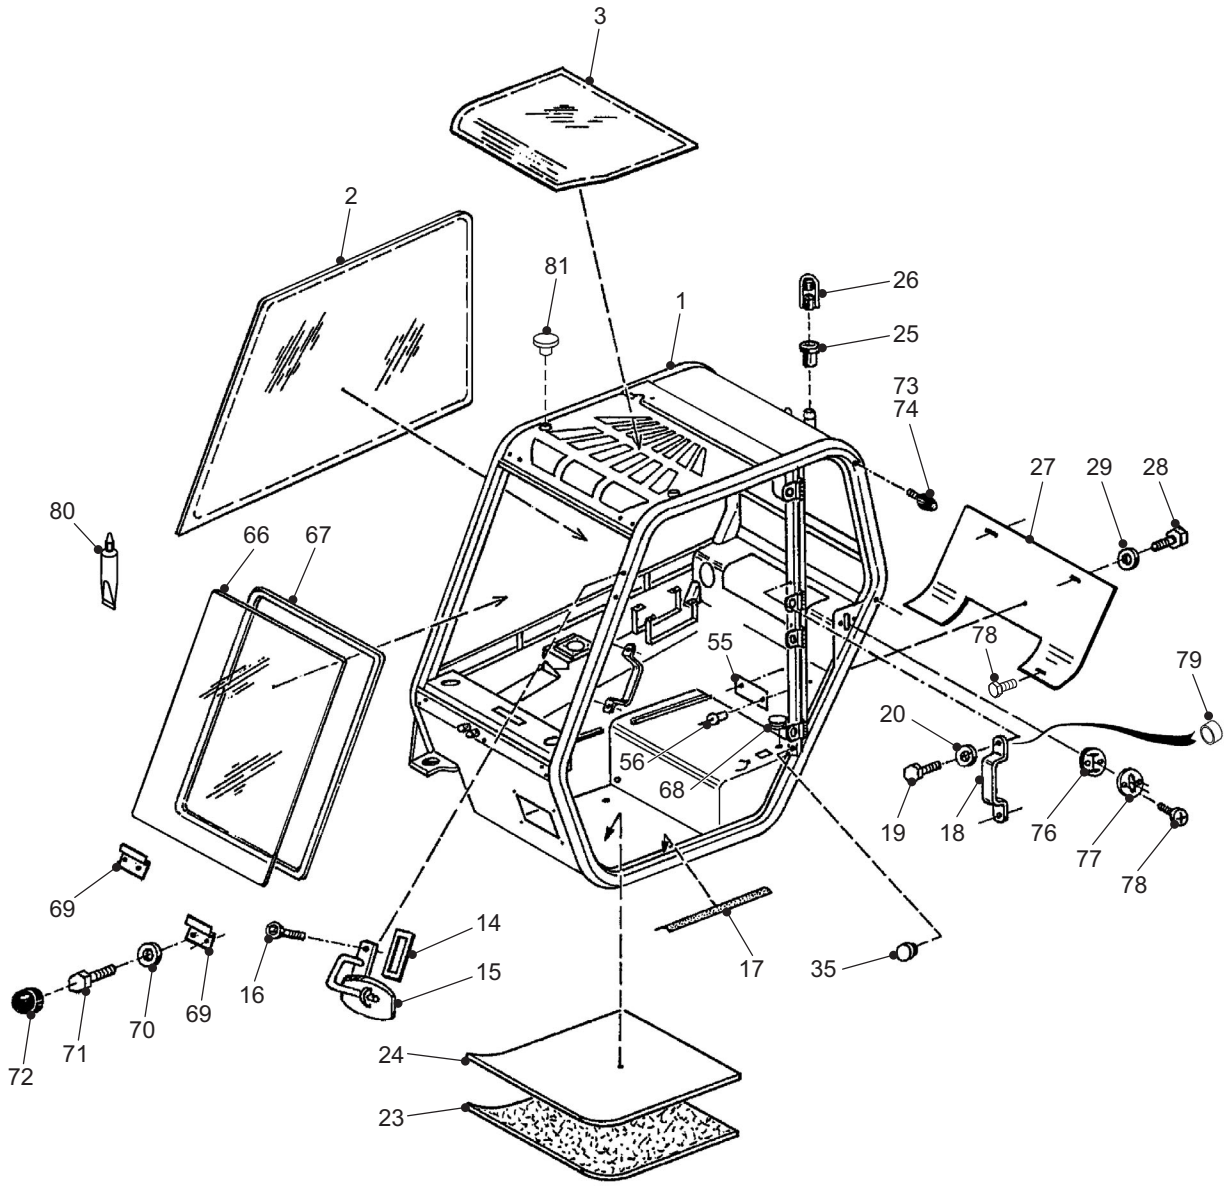

SPC001009

https://www.pdfmanual4trucks.com/


Cab Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6963094	Frame			1
2	6908788	Glass, right side			1
3	6908786	Glass, roof			1
14	NSS	Connection	Order now 6910557 ; Order Pos. 15		1
15	79903.1	Mirror LH	Pos. 14 + 15		1
16	6909997	Screw			2
17	6915508	Non-skid	Was 6564833		1
18	63349.5	Handle			2
19	01591.7	Screw			4
20	94574.1	Washer			4
23	6915519	Mat	Was 97089.7		1
24	97088.9	Mat			1
25	78818.2	Connection			1
26	78819.0	Gyrolight plug			1
27	96074.0	Cover			1
28	01590.9	Screw			3
29	29272.2	Washer			3
35	6910931	Plug			1
55	6809599	Plate			1
56	6909959	Rivet			2
66	6908790	Windshield			1
67	75944.9	Seal			1
68	6910930	Guide			1
69	6971665	Support			2
70	01696.4	Washer			4
71	01590.9	Screw			4
72	63332.1	Cap			4
73	6910542	Rubber stop			2
74	6910932	Nut			2
76	6910933	Spacer			1
77	6910934	Plate			1

https://www.pdfmanual4trucks.com/

Cab Assy

Recurrence of previous drawing

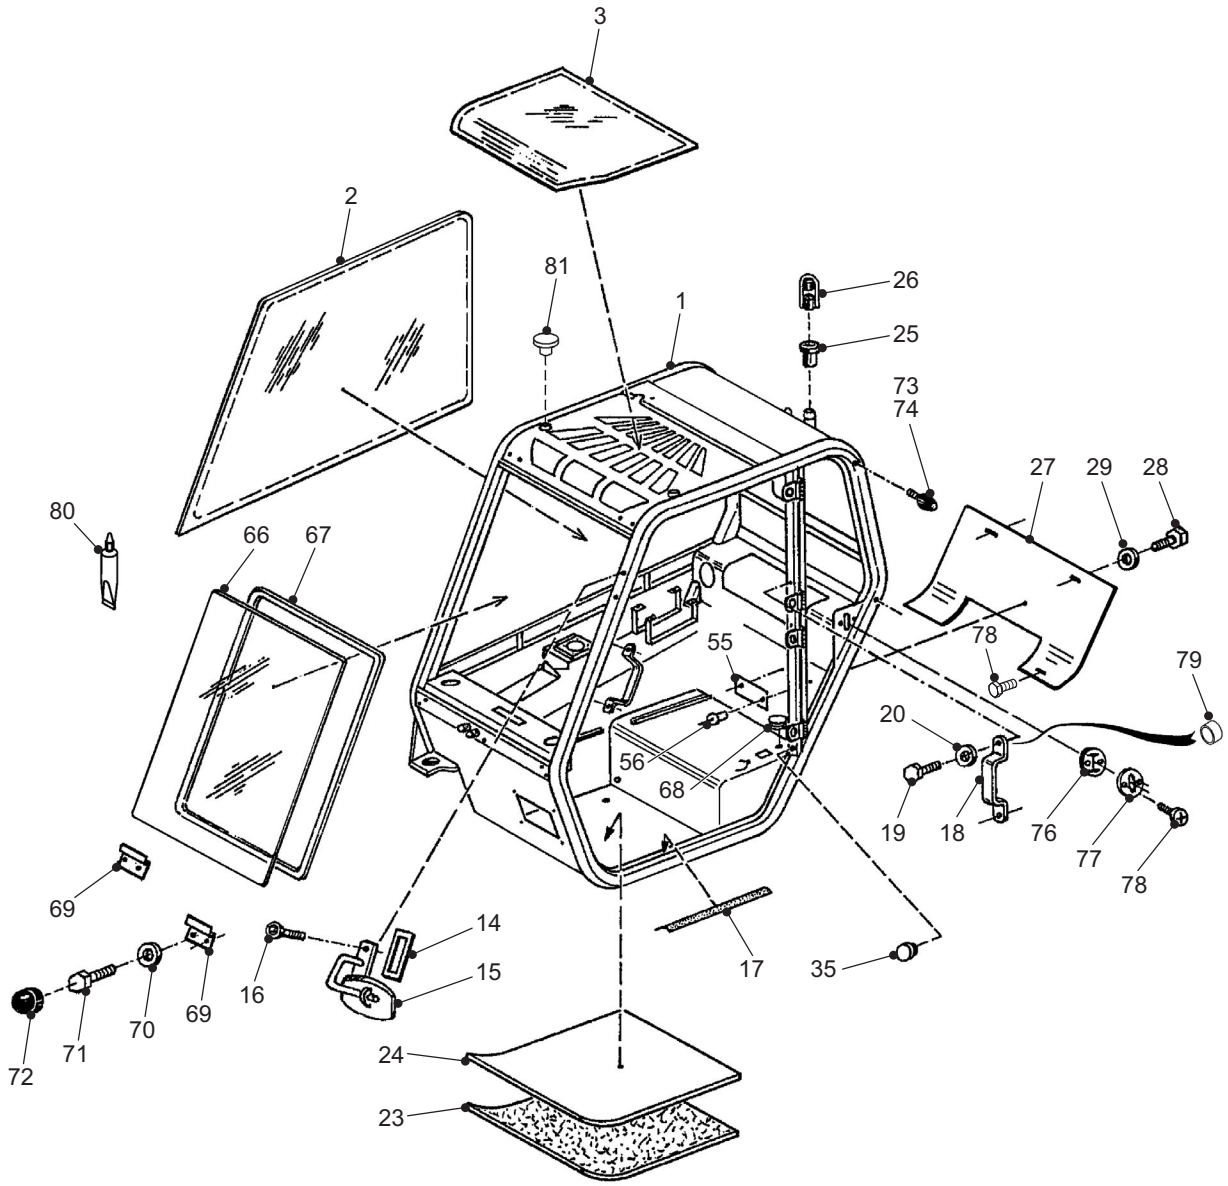

SPC001009


https://www.pdfmanual4trucks.com/

Cab Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
78	6910935	Screw			2
79	6914407	Spacer			4
80	64509.3	Glue			1
81	57702.3	Plug			4

https://www.pdfmanual4trucks.com/

Cab Assy II

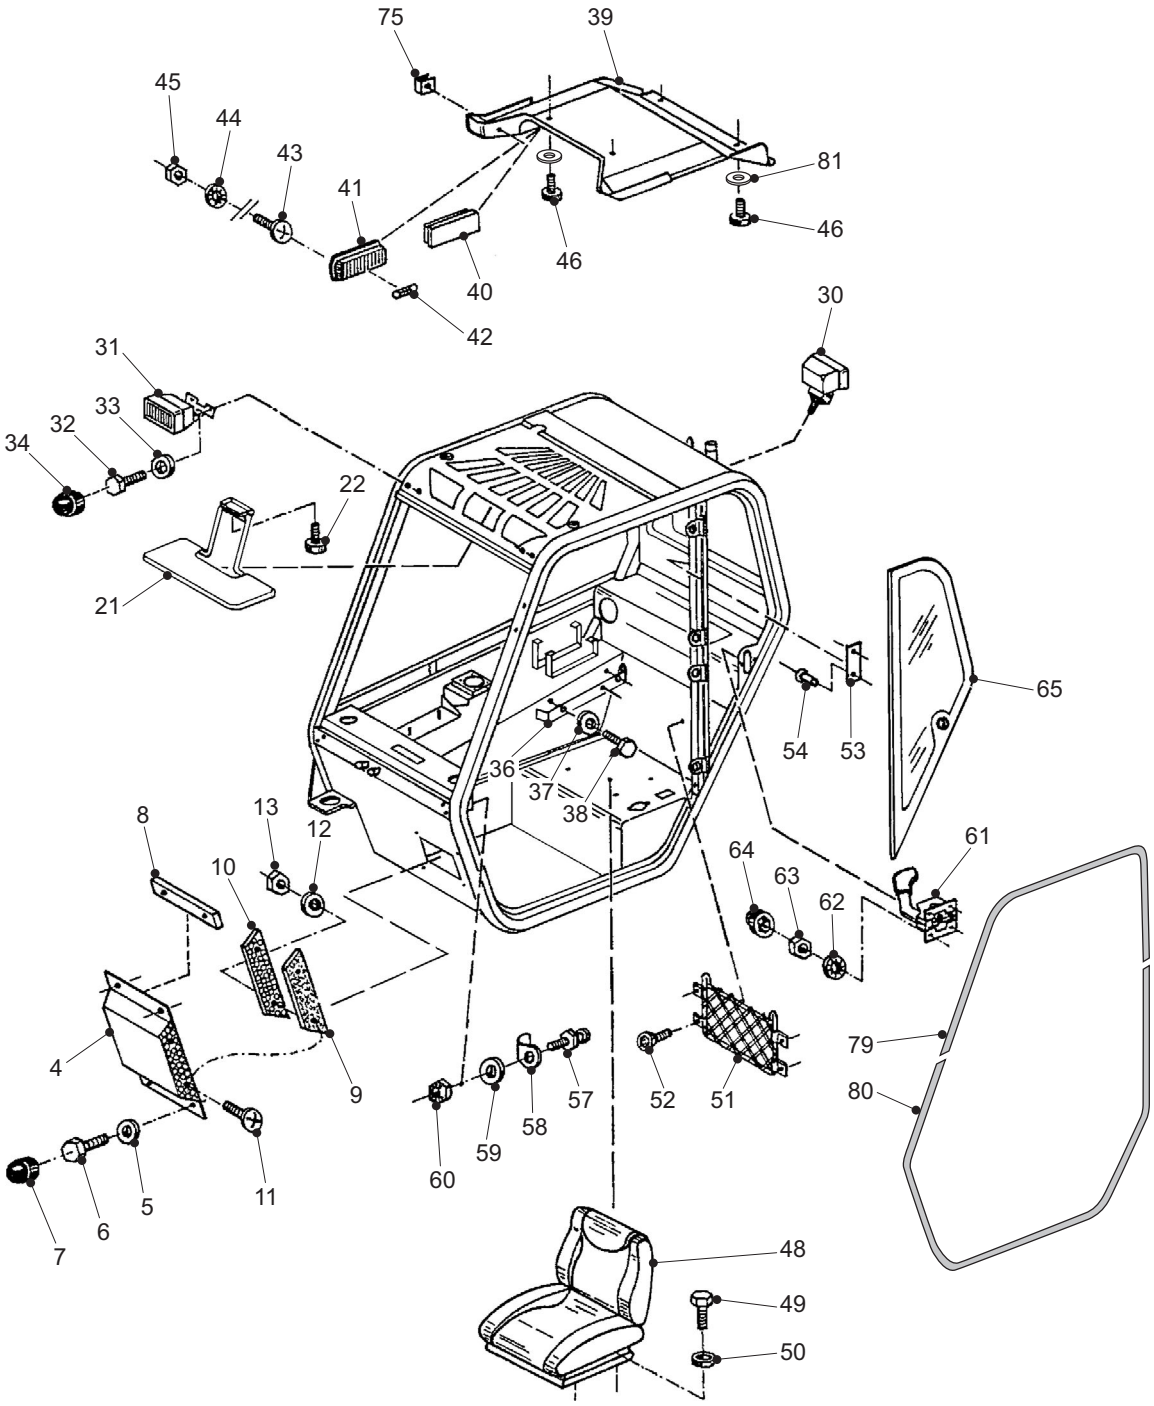

SPC001010

https://www.pdfmanual4trucks.com/


Cab Assy II

Item	Part Number	Denomination	Remarks	Serial Number	Qty
4	6910503	Box filter			1
5	01696.4	Washer			4
6	01590.9	Screw			4
7	63332.1	Cap			4
8	6910504	Seal			1.00m
9	6910502	Cab filter			2
10	6910929	Internal grille			2
11	6910505	Screw			4
12	61378.6	Washer			4
13	01664.2	Nut			4
21	79902.3	Sunshade			1
22	6910697	Screw			1
30	78816.6	Rear Worklight	Was 6909970		1
31	78815.8	Front worklight	Was 6909971		2
	58446.6	Bulb			3
32	01591.7	Screw			4
33	29272.2	Washer			4
34	63332.1	Cap			4
36	97504.5	Bracket			1
37	01717.8	Washer			2
38	100338-23F	Screw			2
39	6910878	Roof cowling			1
40	79581.5	Cover			1
41	101438-93V	Dome Light			1
42	01443.1	Bulb			1
43	6910505	Screw			2
44	007346-02F	Washer			2
45	100345-04U	Nut			2
46	34214.7	Screw			5
48	6911769	Seat assy	For details, see page 29		1
49	01596.6	Screw			4

https://www.pdfmanual4trucks.com/

Cab Assy II

Recurrence of previous drawing

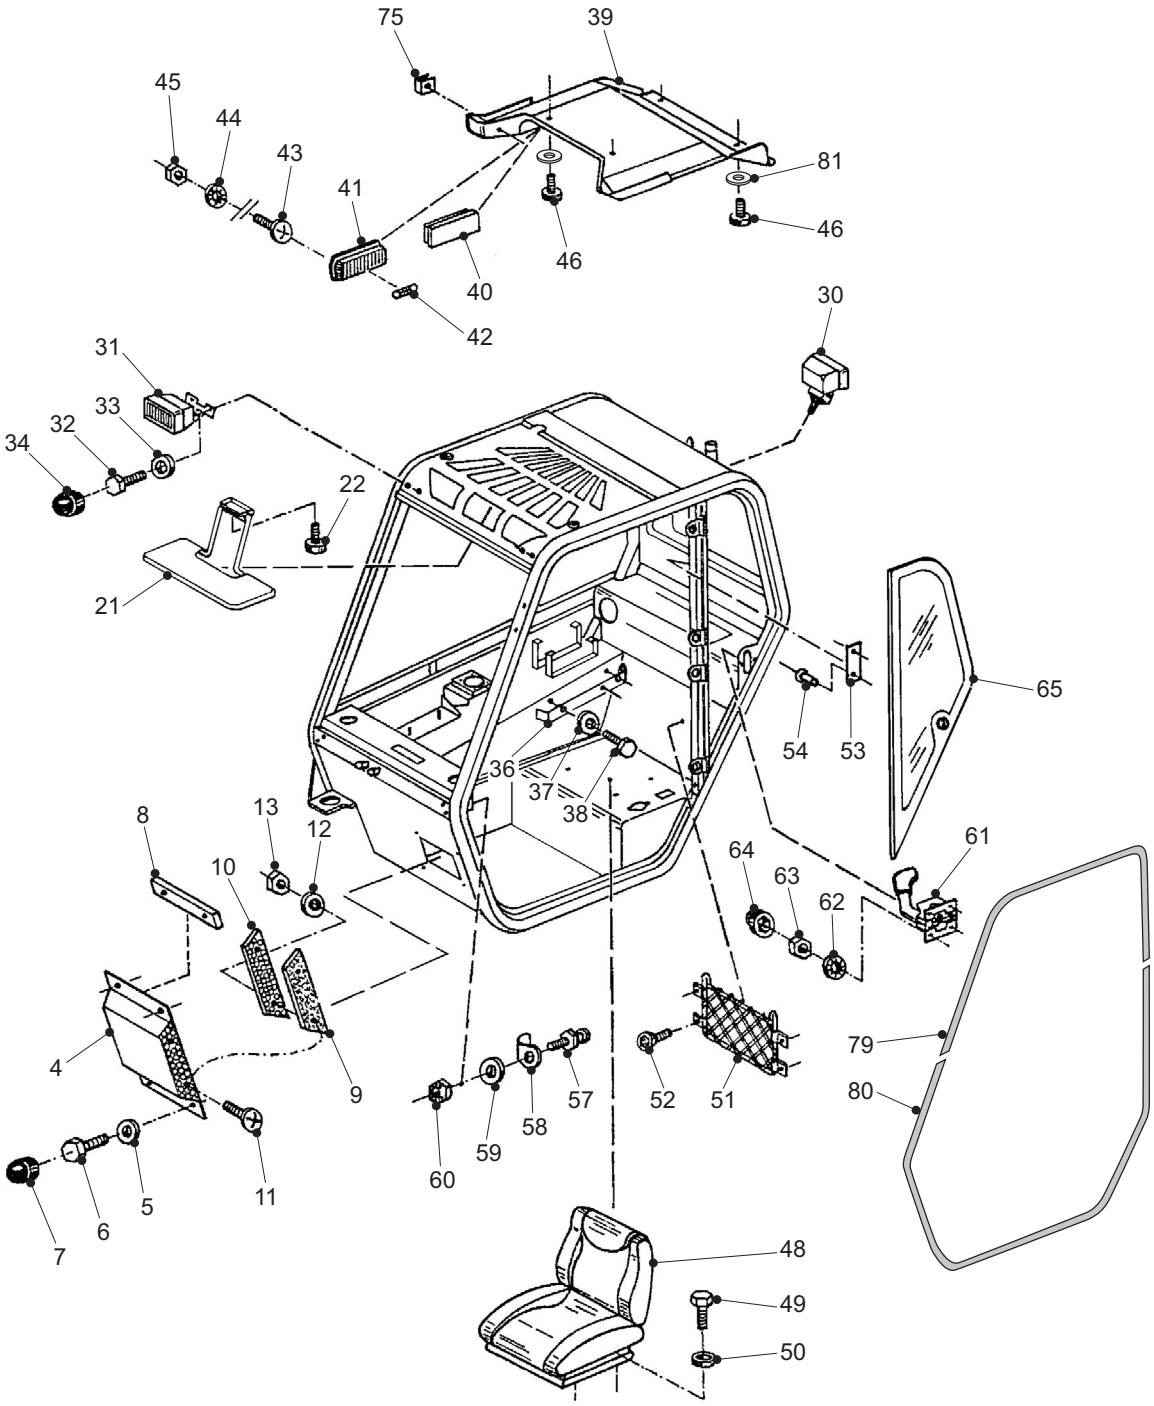

SPC001010


https://www.pdfmanual4trucks.com/

Cab Assy II

Item	Part Number	Denomination	Remarks	Serial Number	Qty
50	89519.3	Washer			4
51	75883.9	Rack			1
52	6910999	Screw			4
53	6909961	Plate			1
54	97964.1	Rivet			2
57	6910946	Catch			1
58	6910947	Catch protect			1
59	6910949	Washer			1
60	6910948	Catch fixation			1
61	6910552	Lock			1
62	01717.8	Washer			4
63	01666.7	Nut			4
64	63332.1	Cap			4
65	6908789	Glass, left side			1
75	86167.4	Nut			1
79	6914787	Seal, upper part			1
80	6914788	Seal, lower part			1
81	000350-21R	Washer			5

https://www.pdfmanual4trucks.com/

Seat & Suspension

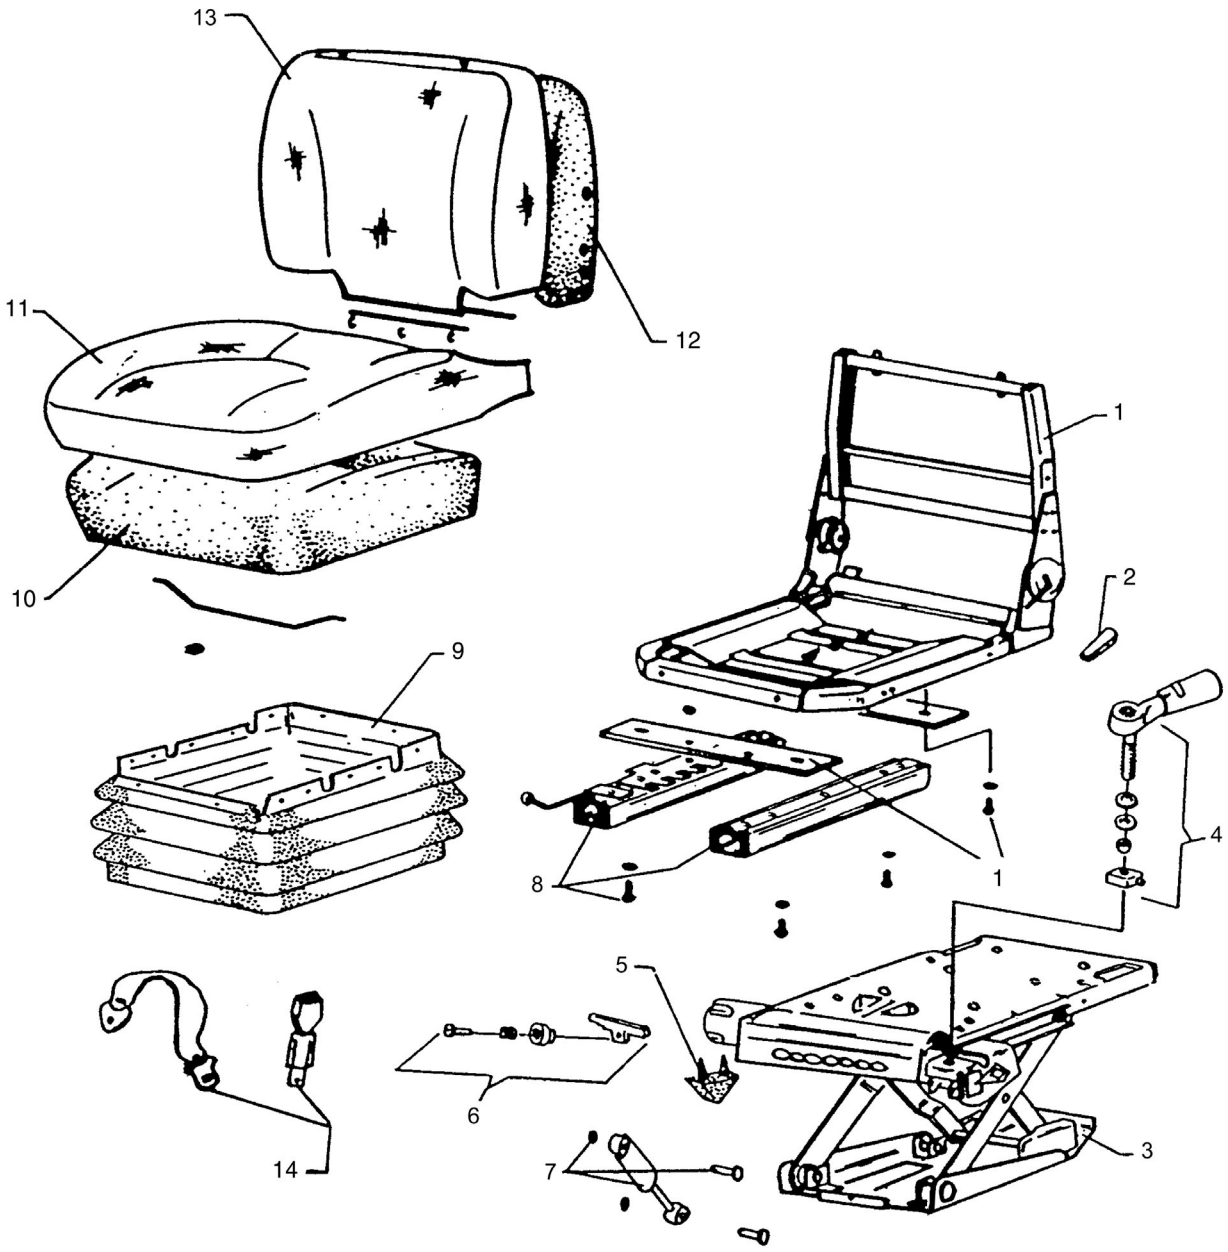

SPC001011


https://www.pdfmanual4trucks.com/

Seat & Suspension

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6911769	Seat assy			1
1	93247.5	Bracket			1
2	93240.0	Lever			1
3	93248.3	Suspension			1
4	93241.8	Lever			1
5	93237.6	Stop			1
6	93242.6	Lever			1
7	93249.1	Cylinder			1
8	93239.2	Slide bar			1
9	81632.2	Bellow			1
10	93244.2	Foam rubber			1
11	93246.7	Coating			1
12	93243.4	Foam rubber			1
13	93245.9	Coating			1
14	93238.4	Seat belt			1

https://www.pdfmanual4trucks.com/

Heating/ventilation Installation

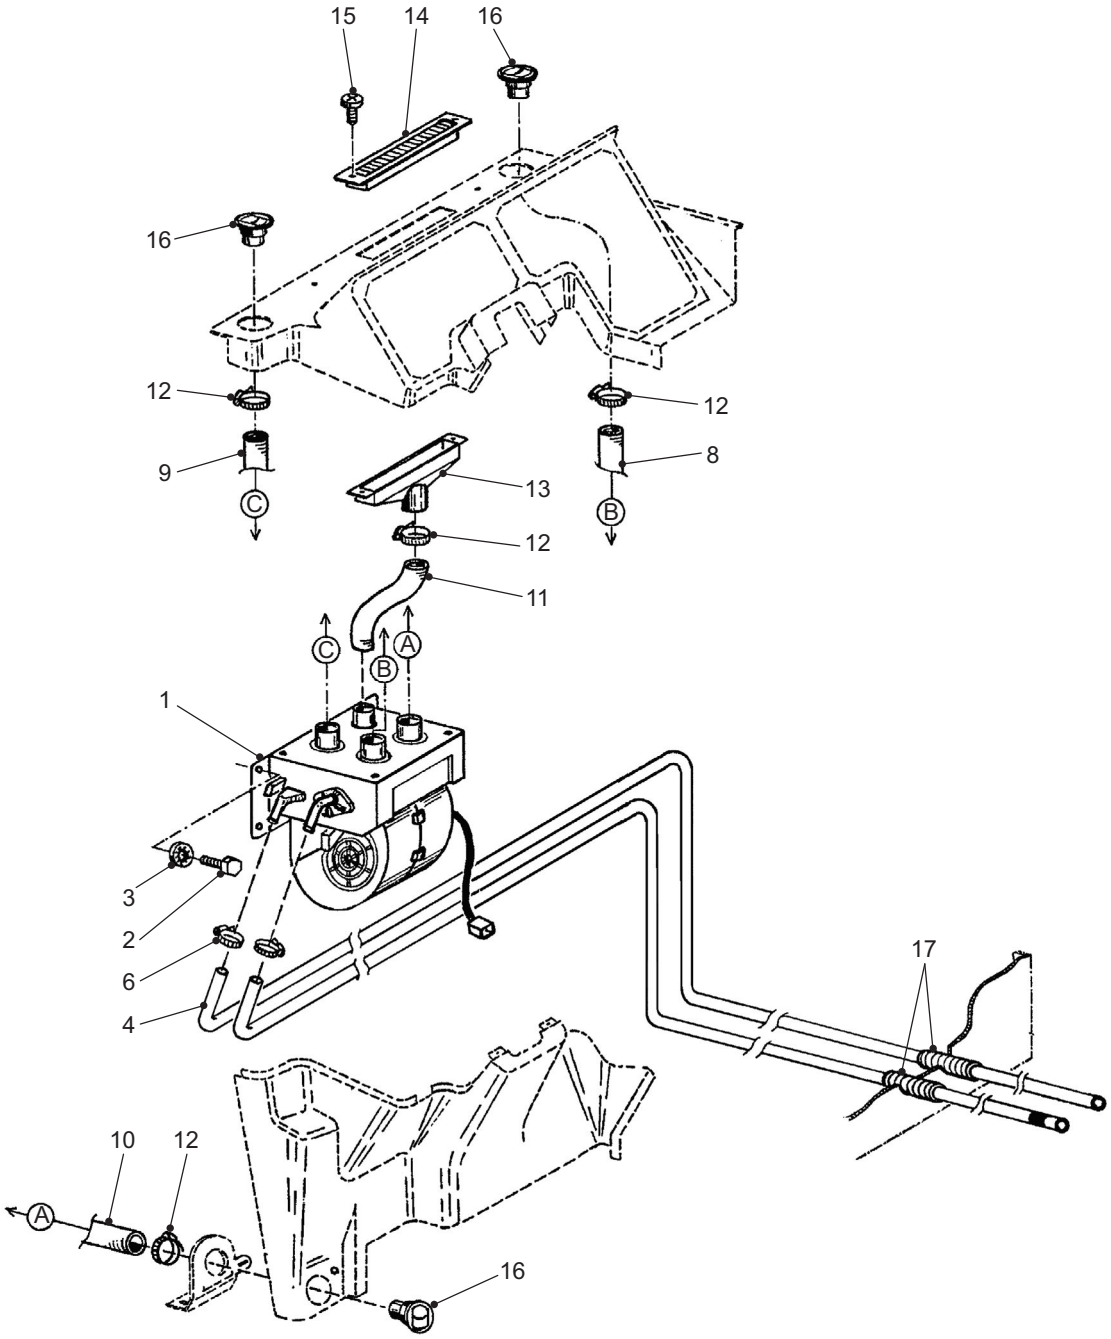

SPC001012


https://www.pdfmanual4trucks.com/

Heating/ventilation Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	97205.9	Heater	For details, see page 33		1
2	01590.9	Screw			4
3	01717.8	Washer			4
4	6913936	Heating pipe			2
6	100369-39Q	Clamp			4
8	97204.2	Pipe	Was 97202.6		1
9	97206.7	Pipe			1
10	97204.2	Pipe			1
11	6915465	Pipe	Was 97207.5		1
12	100369-80K	Clamp			8
13	97208.3	Vent Nozzle			1
14	97201.8	Vent			1
15	6911846	Screw			2
16	97099.6	Directional Vent			3
17	6914082	Insulation			1

https://www.pdfmanual4trucks.com/

Heating/ventilation Fan Assy

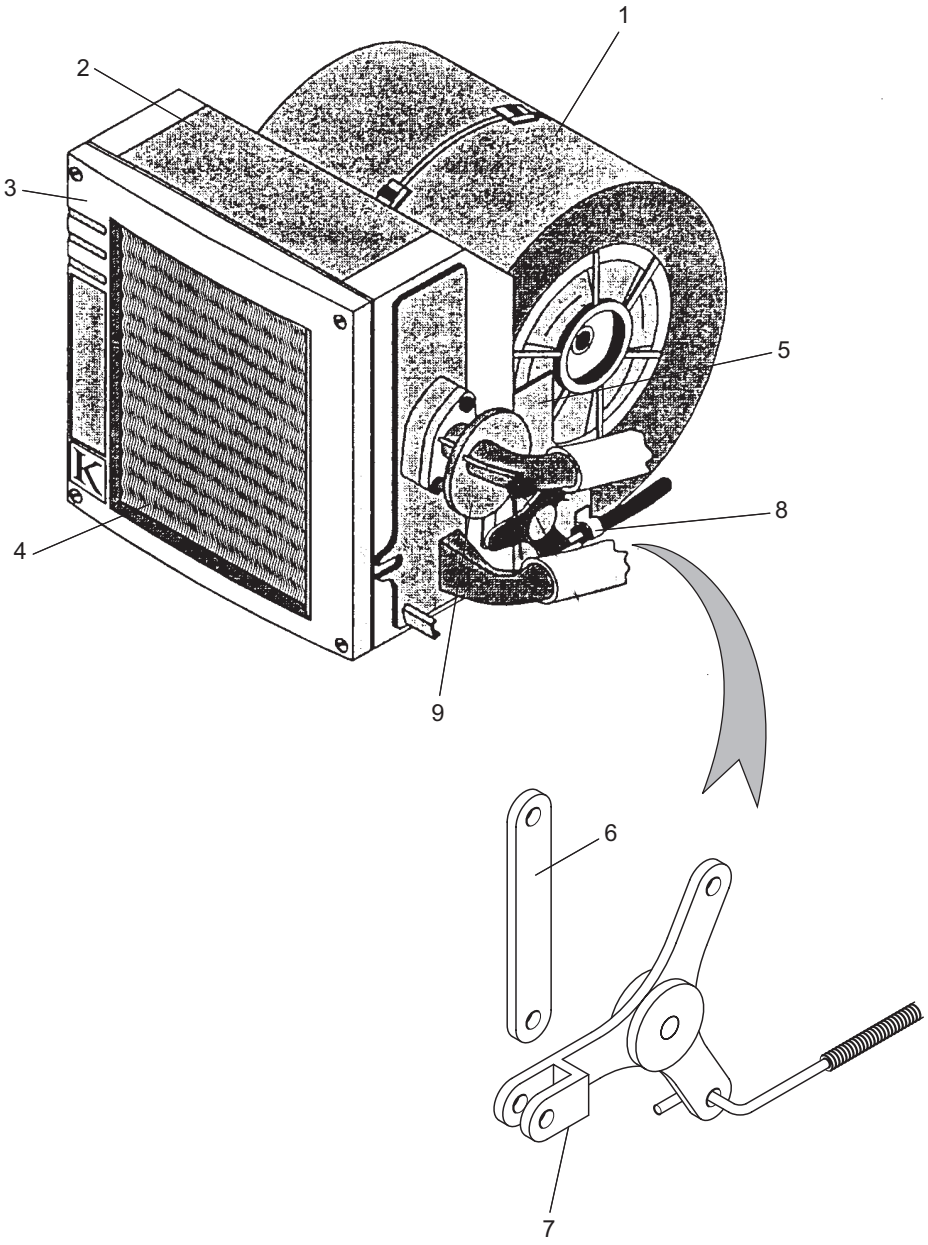

SPC001013


https://www.pdfmanual4trucks.com/

Heating/ventilation Fan Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	97205.9	Heater	Pos. 1 to 9		1
1	6684424	Blower			1
2	6684425	Case			1
3	6684426	Grille			1
4	6684427	Radiator			1
5	6684428	Mount			1
6	6684429	Rod			1
7	6684430	Lever			1
8	6684431	Clip			1
9	97350.3	Control Valve			1

https://www.pdfmanual4trucks.com/

Pedals Installation

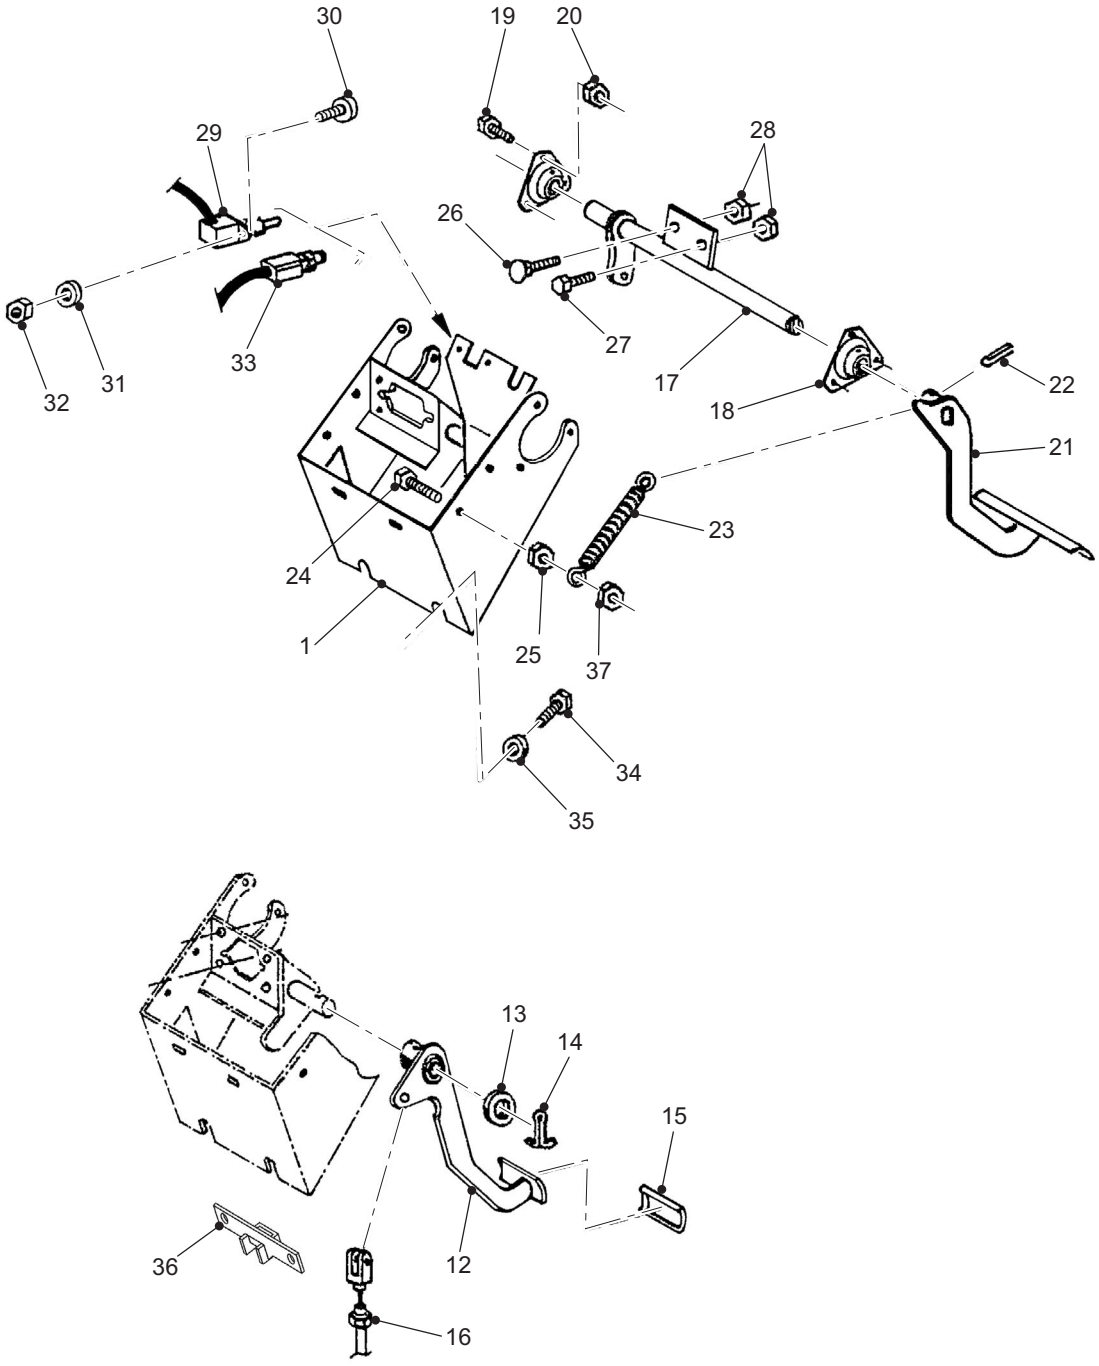

SPC001014


https://www.pdfmanual4trucks.com/

Pedals Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	96089.8	Support			1
	01596.6	Screw			4
	01697.2	Washer			4
12	6908480	Pedal			1
13	000350-08C	Washer			1
14	01754.1	Pin			1
15	59893.8	Brake pedal pad			1
16	98240.5	Throttle Cable			1
17	6908479	Pedal shaft			1
18	77919.9	Bracket			2
19	01605.5	Screw			6
20	100345-09A	Nut			6
21	6908478	Brake pedal			1
22	01736.8	Pin			1
23	01124.7	Spring			1
24	01608.9	Screw			1
25	01669.1	Nut			1
26	62185.4	Screw			1
27	01597.4	Screw			1
28	51851.4	Nut			2
29	6909383	Inching switch (detector)			1
30	01478.7	Screw			2
31	6910952	Washer			2
32	100345-05V	Nut			2
33	6909324	Service brake switch			1
34	01596.6	Screw			4
35	01697.2	Washer			4
36	6910649	Abutment			1
37	100345-09A	Nut			1

https://www.pdfmanual4trucks.com/

Steering Column Installation

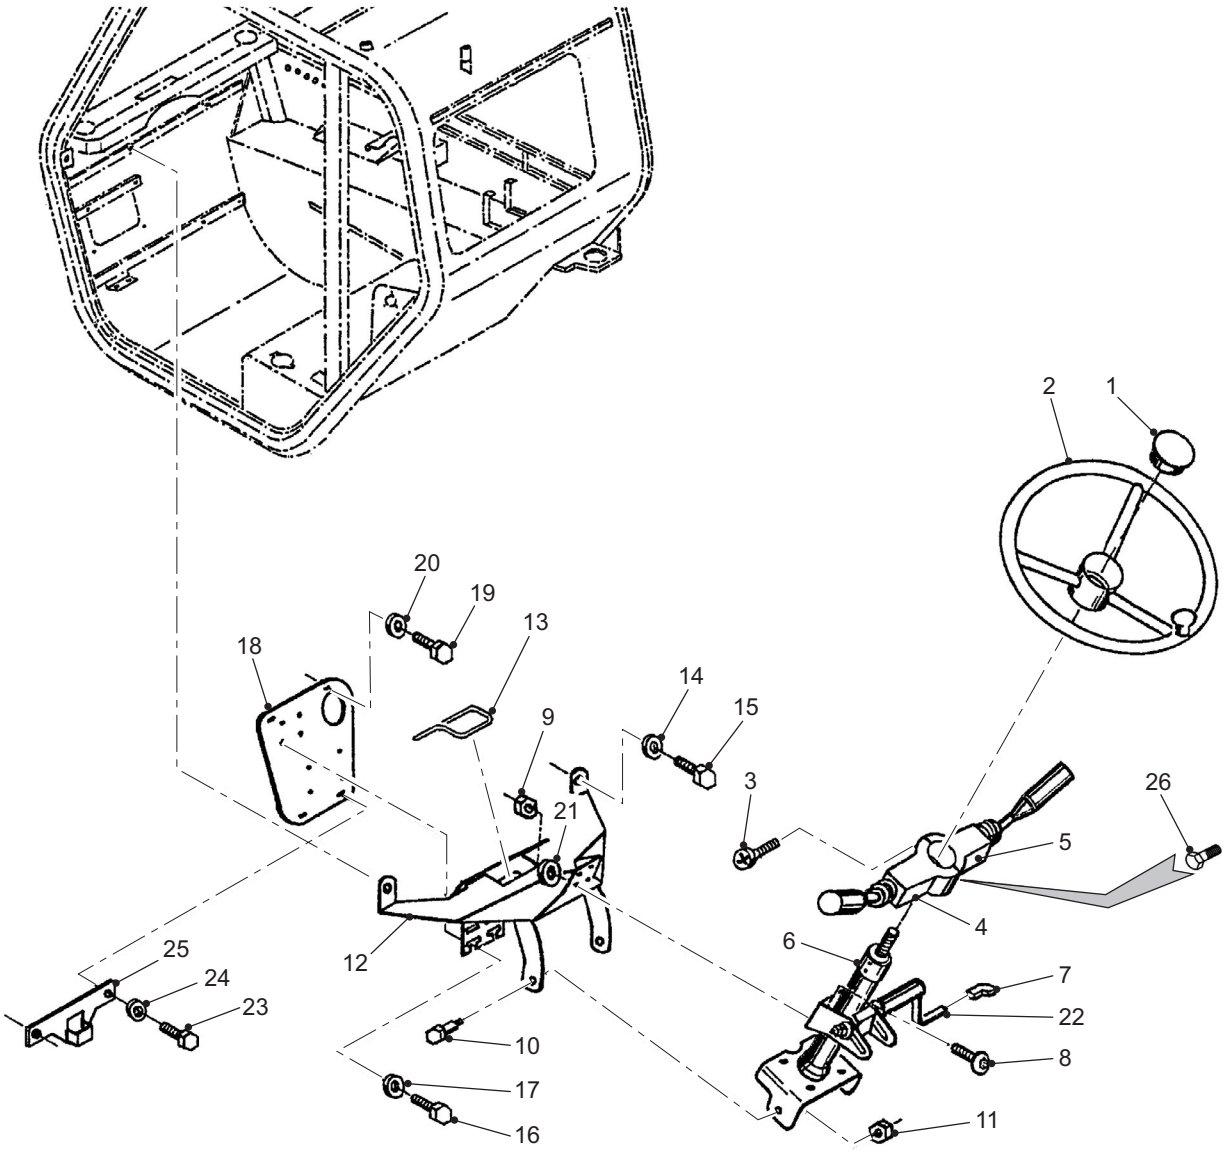

SPC001015


https://www.pdfmanual4trucks.com/

Steering Column Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	94018.9	Steering wheel cap			1
2	6908477	Steering wheel			1
3	6909993	Screw			2
4	98241.3	Reverser			1
5	98242.9	Drive/lighting control lever			1
6	6908476	Steering column			1
7	97502.9	Knob, steering column adjust			1
8	63359.4	Screw			4
9	51851.4	Nut			4
10	97210.9	Pin			2
11	51851.4	Nut			2
12	6915747	Support	Was 97503.7		1
13	6909935	Seal			1
14	01697.2	Washer			2
15	01596.6	Screw			2
16	01596.6	Screw			4
17	01697.2	Washer			4
18	6909977	Plate			1
19	01596.6	Screw			4
20	01697.2	Washer			4
21	01697.2	Washer			4
22	97501.1	Handle, steering column adjustment			1
23	01597.4	Screw			2
24	01697.2	Washer			2
25	6910649	Abutment			1
26	6909993	Screw			2

https://www.pdfmanual4trucks.com/

Cowling Installation

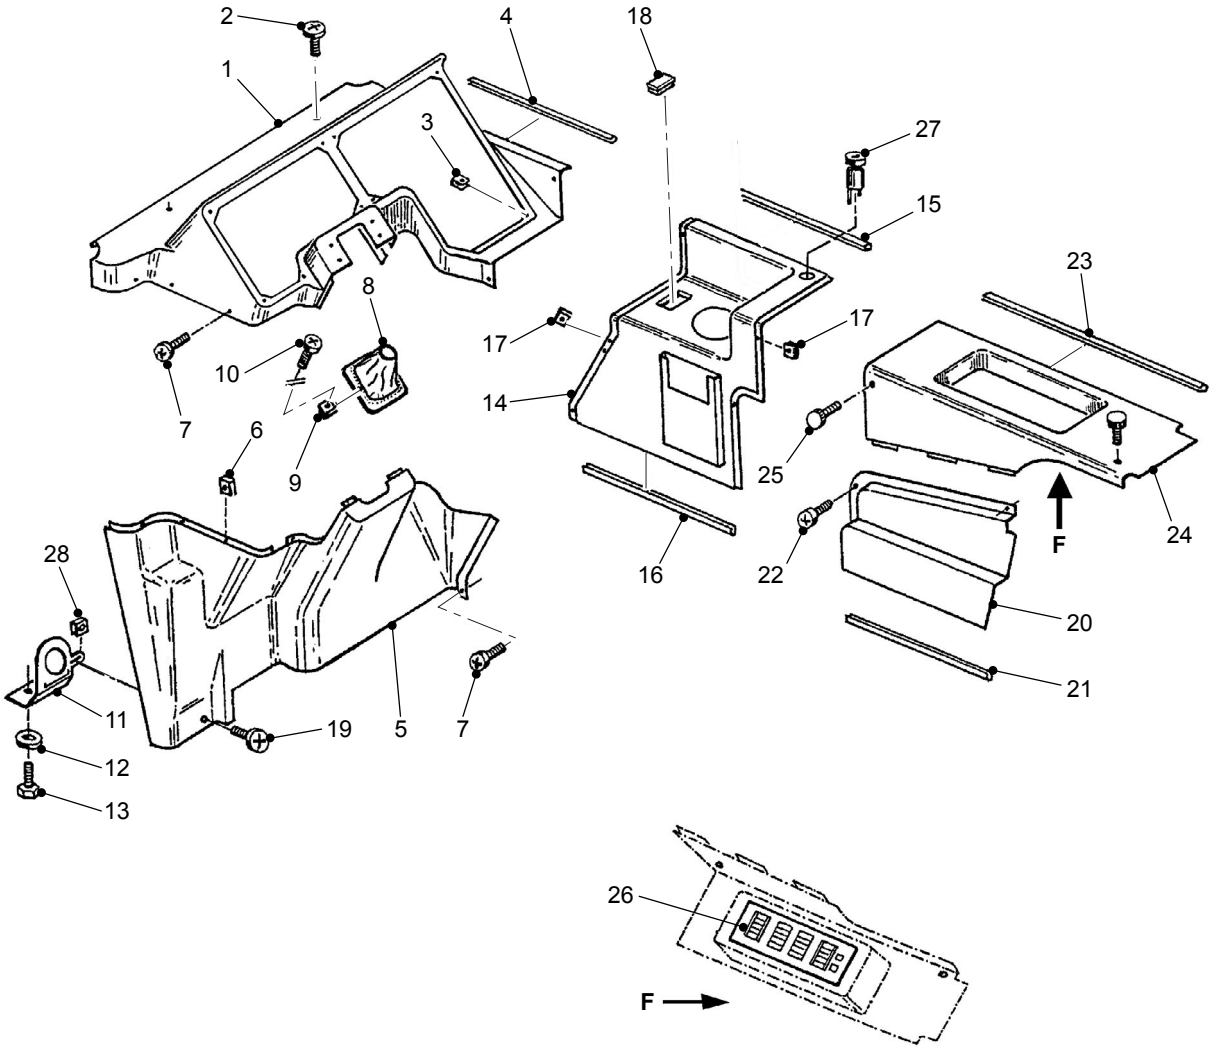

SPC001016


https://www.pdfmanual4trucks.com/

Cowling Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6910882	Dash cowling			1
2	79864.5	Screw			3
3	6909903	Clip			10
4	6909930	Seal			1
5	6910883	Steering column cowling			1
6	6909903	Clip			9
7	6910505	Screw			9
8	6909973	Bellow steering column			1
9	6909903	Clip			2
10	6909995	Screw			2
11	6914561	Lower support	Was 6909974		1
12	05698.6	Washer			2
13	01590.9	Screw			2
14	6912458	Joystick cowling			1
15	6909931	Seal			1
16	6909933	Seal			1
17	6909903	Clip			5
18	6909904	Cover			1
19	100331-01U	Screw			1
20	6910881	Fuse panel side cowling			1
21	6909932	Seal			1
22	6910505	Screw			2
23	6909934	Seal			1
24	6910879	Fuse panel top cowling			1
25	6909910	Button			2
26	6912455	Adhesive			1
27	97096.2	Cigarette Lighter			1
28	6914086	Nut			1

https://www.pdfmanual4trucks.com/

Control Panel Switches

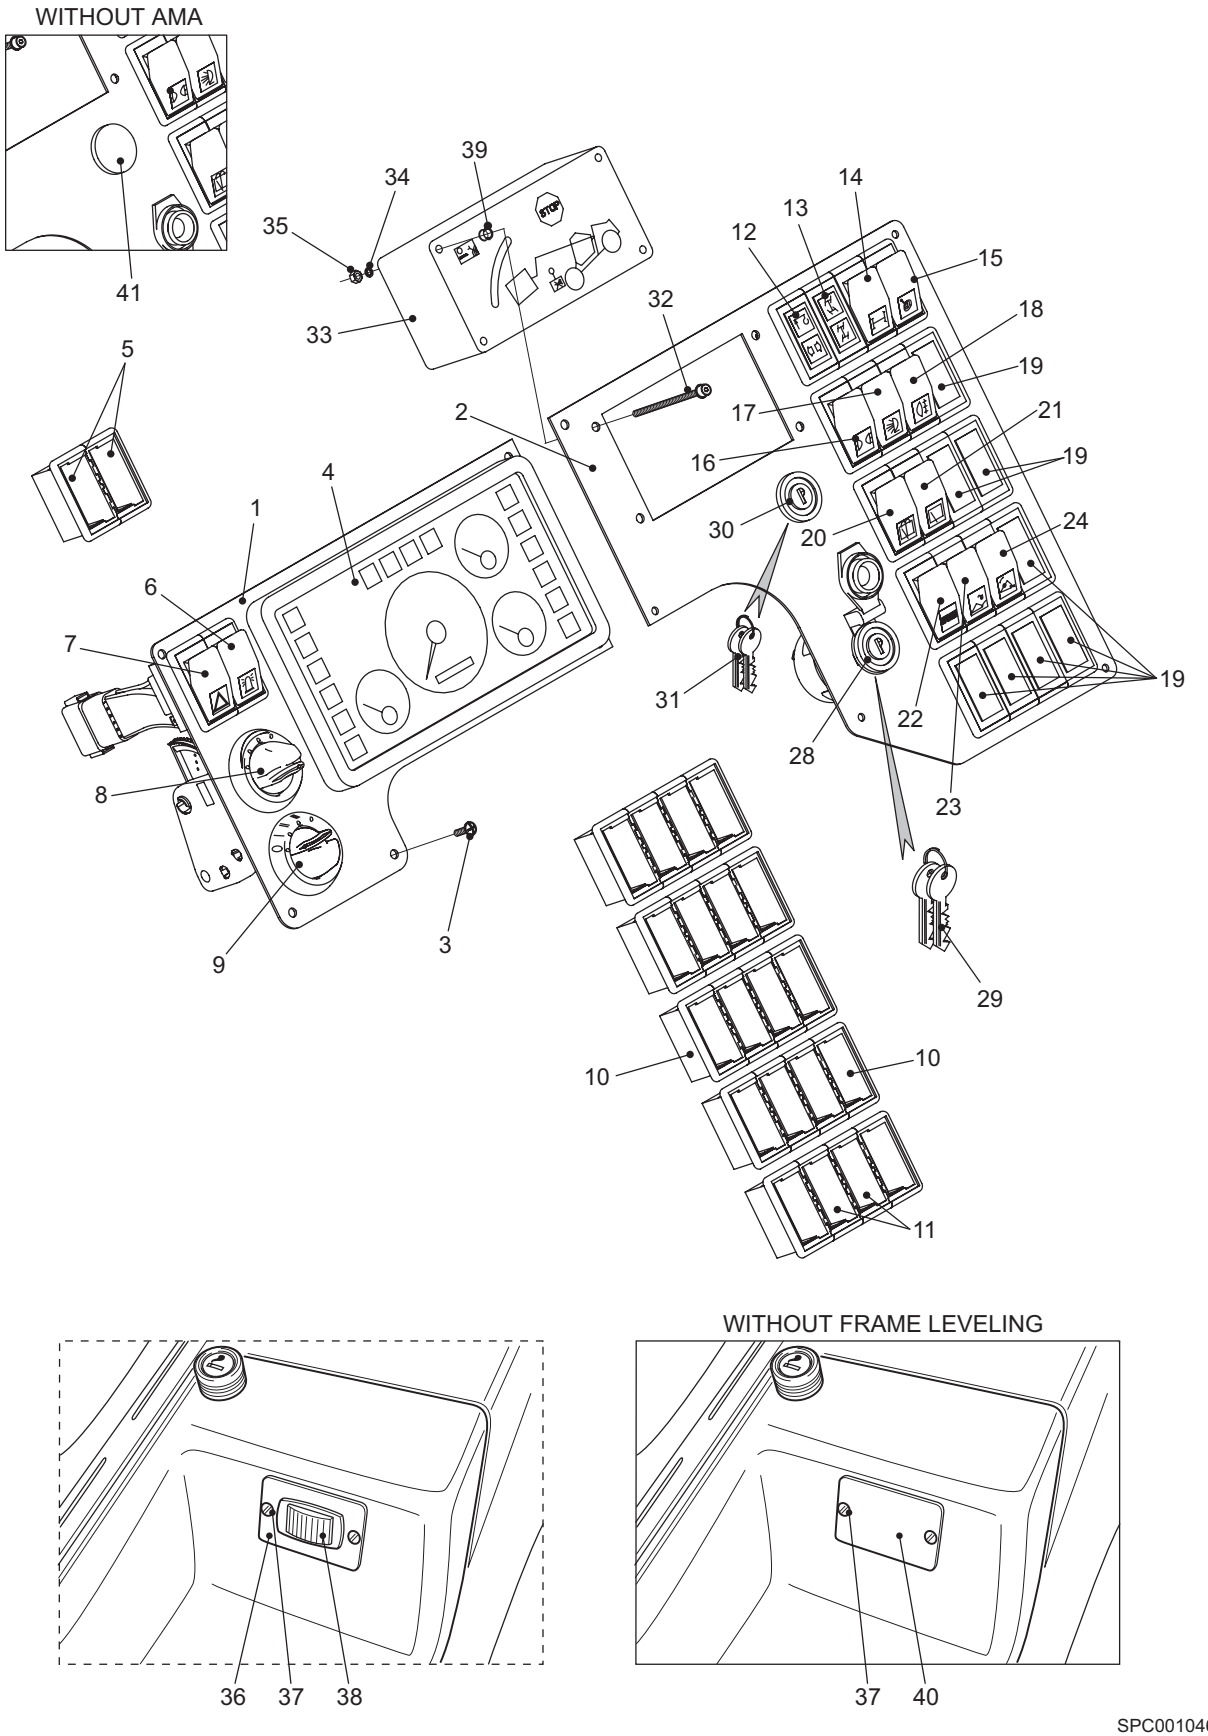

https://www.pdfmanual4trucks.com/


Control Panel Switches

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	96080.7	L.H. control panel plate			1
2	6914170	R.H. control panel plate	Was 6910511		1
3	6910505	Screw			10
4	6909356	Instrument panel			1
5	80220.7	Bezel	Pos. 6 + 7		2
6	96591.3	Switch, beacon light			1
7	96590.5	Warning Switch			1
8	96609.3	Heating Control Valve			1
9	96608.5	Fan Speed Switch			1
10	80220.7	Bezel	For outer left and right positions		10
11	80221.5	Bezel	For middle positions		10
12	96595.4	Trailer turn indicator			1
13	96594.7	Steering mode indicator			1
14	96593.9	Steering mode switch			1
15	96592.1	Lever Switch			1
16	96600.2	Switch, head lamp			1
17	96601.0	Working light switch			1
18	96597.0	Fog light switch			1
19	65784.1	Blank Plug			8
20	96602.8	Switch, rear wiper/washer			1
21	96603.6	Switch, roof wiper	Option		1
22	97519.3	Switch, transmission mode			1
23	6911728	Locking switch	Was 96606.9		1
24	6910895	Switch, aux. hydr.			1
28	55438.6	Ignition Switch	Pos. 28 + 29		1
29	57189.3	Set of keys (ignition)			1
30	97885.8	Knob block	Pos. 30 + 31		1
	97886.6	Knob head			1
31	97054.1	Set of keys			1
32	68566.9	Screw			4
33	6913764	Stability indicator and wire harness	Was 6913047		1

https://www.pdfmanual4trucks.com/

Control Panel Switches

Recurrence of previous drawing

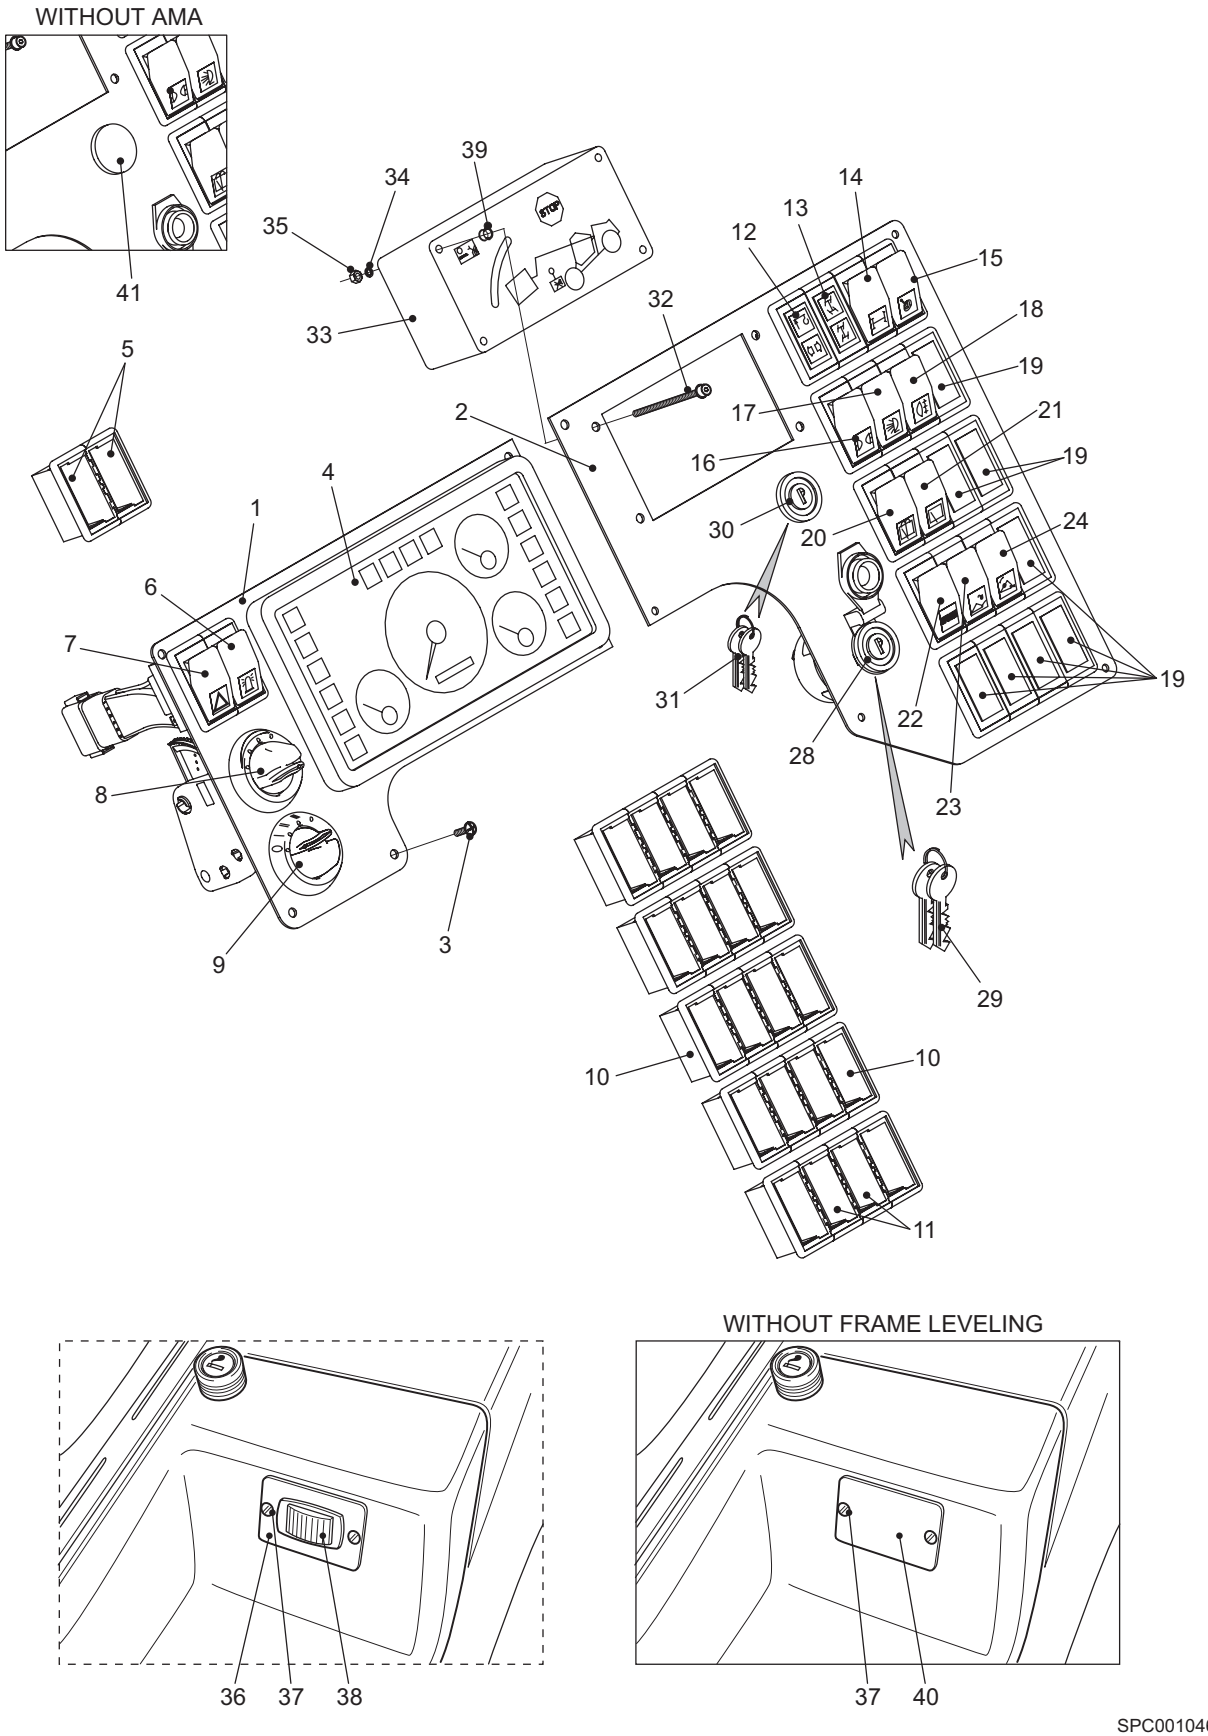


https://www.pdfmanual4trucks.com/

Control Panel Switches

Item	Part Number	Denomination	Remarks	Serial Number	Qty
34	13415.5	Washer			4
35	01665.9	Nut			4
36	6914586	Support for frame leveling knob			1
37	6910951	Screw			2
38	90930.9	Control Knob	Includes knob + cable + connector		1
39	6910953	Spacer			4
40	6910313	Plate			1
41	92299.7	Plug			1

https://www.pdfmanual4trucks.com/

Door Assy

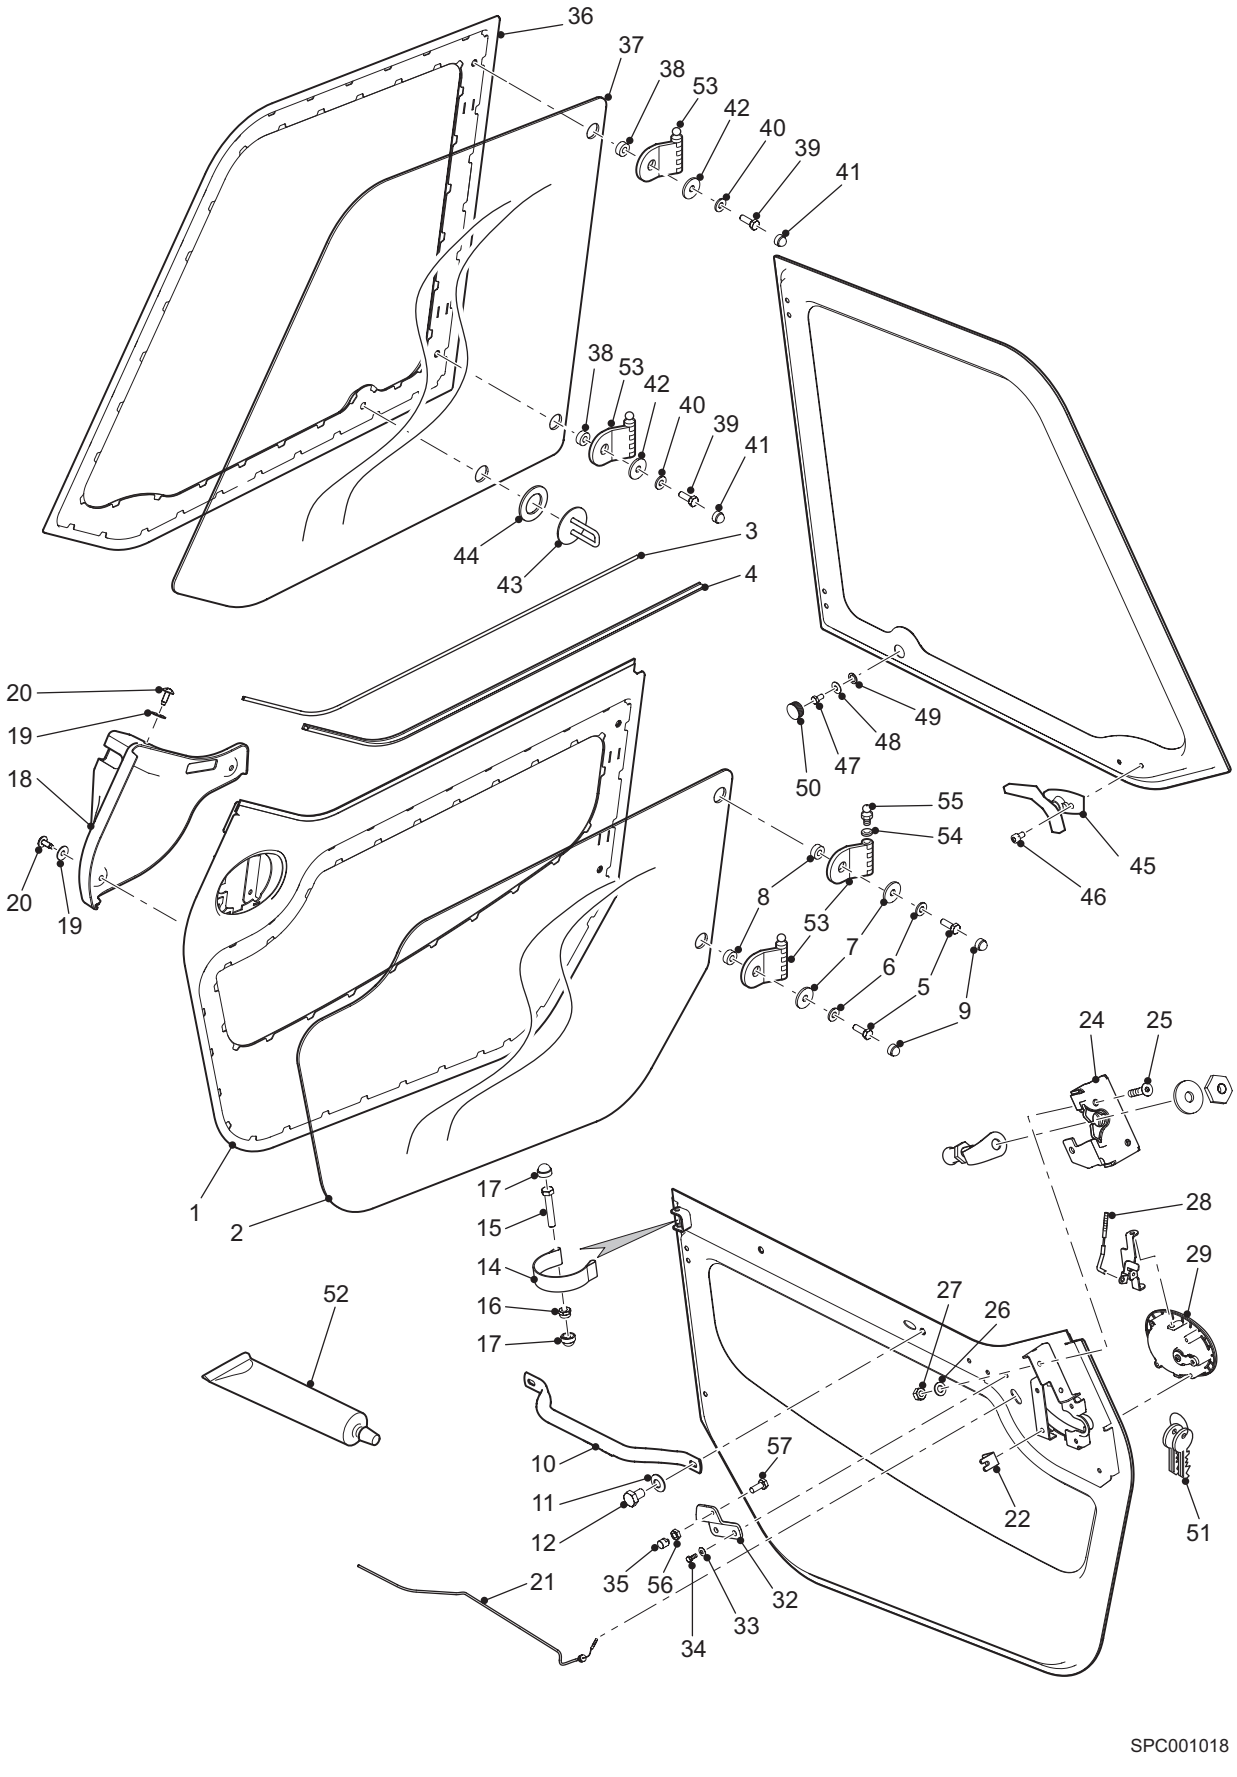

https://www.pdfmanual4trucks.com/


Door Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6910733	Upper door assy	Pos. 36 to 50 ; Was 6909925		1
	6910736	Lower door assy	Pos. 1 to 4 + 8 to 35 + 51+52 ; Was 6909923		1
	6910738	Lower door and glass	Pos. 1 + 2		1
1	6910737	Lower door	Was 6910510		1
2	6908791	Glass, lower part door			1
3	6911000	Seal			1
4	6911001	Seal			1
5	01606.3	Screw			2
6	6910991	Washer			2
7	6910990	Washer			2
8	6910989	Spacer			2
9	63334.7	Nut cap			2
10	6910543	Handle			1
11	01719.4	Washer			2
12	01603.0	Screw			2
13	63334.7	Nut cap			2
14	97360.2	Door Strap			1
15	01579.2	Screw			2
16	51851.4	Nut			2
17	63333.9	Nut cap			4
18	6910994	Lock cover			1
19	29272.2	Washer			3
20	6910996	Screw			3
21	6910544	Cable			1
22	6914942	Cable stop			1
23	63334.7	Nut cap			2
24	6910546	Lock			1
25	6910997	Screw			2
26	01697.2	Washer			2
27	01668.3	Nut			2
28	6910545	Cable			1

https://www.pdfmanual4trucks.com/

Door Assy

Recurrence of previous drawing

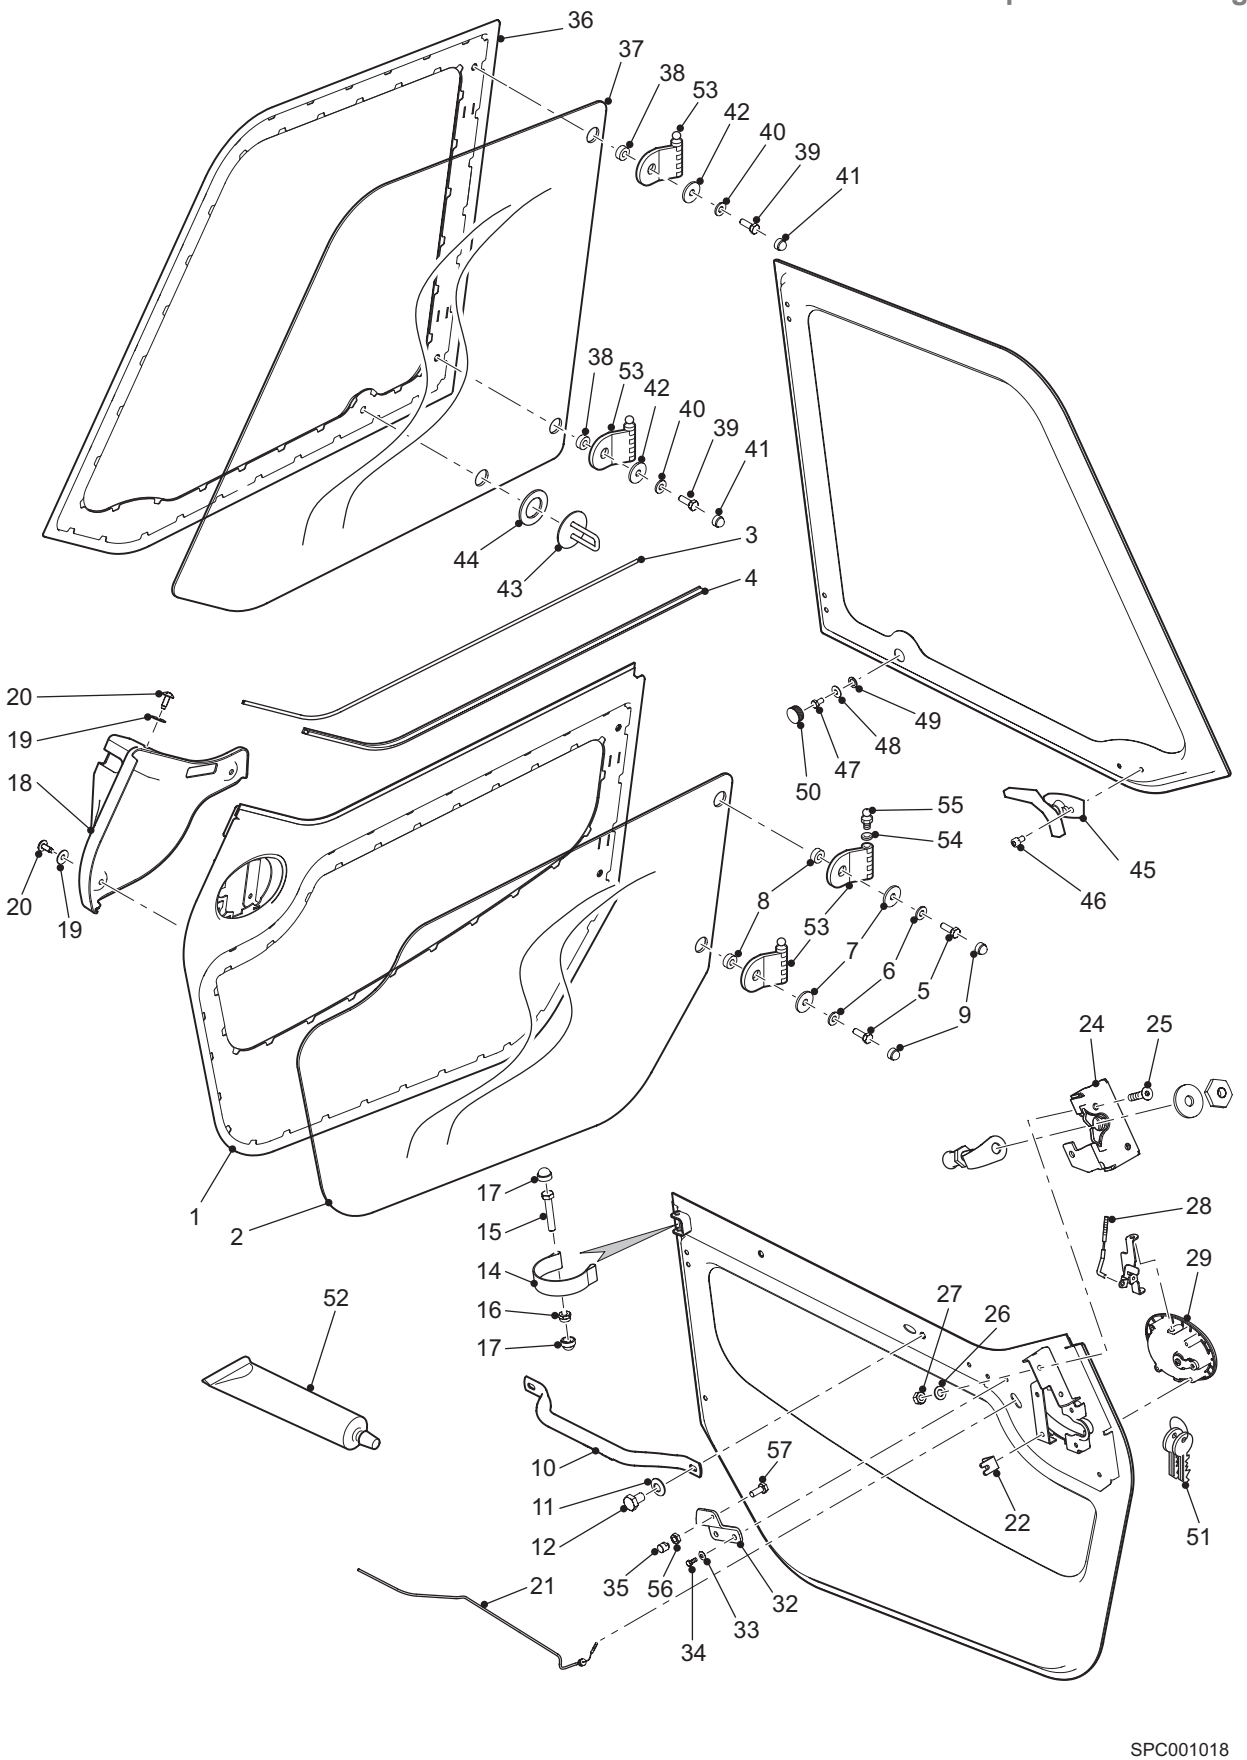

SPC001018


https://www.pdfmanual4trucks.com/

Door Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
29	6910540	Handle with key			1
30	01696.4	Washer			4
31	01575.0	Screw			4
32	6910993	Hook			1
33	01717.8	Washer			2
34	01590.9	Screw			2
35	6910992	Nut cap			1
	6910735	Upper door and glass	Pos. 36 + 37		1
36	6910734	Upper door	Was 6910509		1
37	6908792	Glass, upper part door			1
38	6910989	Spacer			2
39	01606.3	Screw			2
40	6910991	Washer			2
41	63334.7	Nut cap			2
42	6910990	Washer			2
43	6910547	Hook			1
44	6910984	Spacer			1
45	6910539	Handle			1
46	32397.2	Screw			2
47	01595.8	Screw			1
48	01718.6	Washer			1
49	6910988	Washer			1
50	79297.8	Cap			1
51	57189.3	Set of keys (ignition)			1
52	64509.3	Glue			1
53	6910554	Hinge assy			4
54		Washer			4
55		Grease nipple			4
56	01666.7	Nut			1
57	01590.9	Screw			1

https://www.pdfmanual4trucks.com/

Rear Window Installation

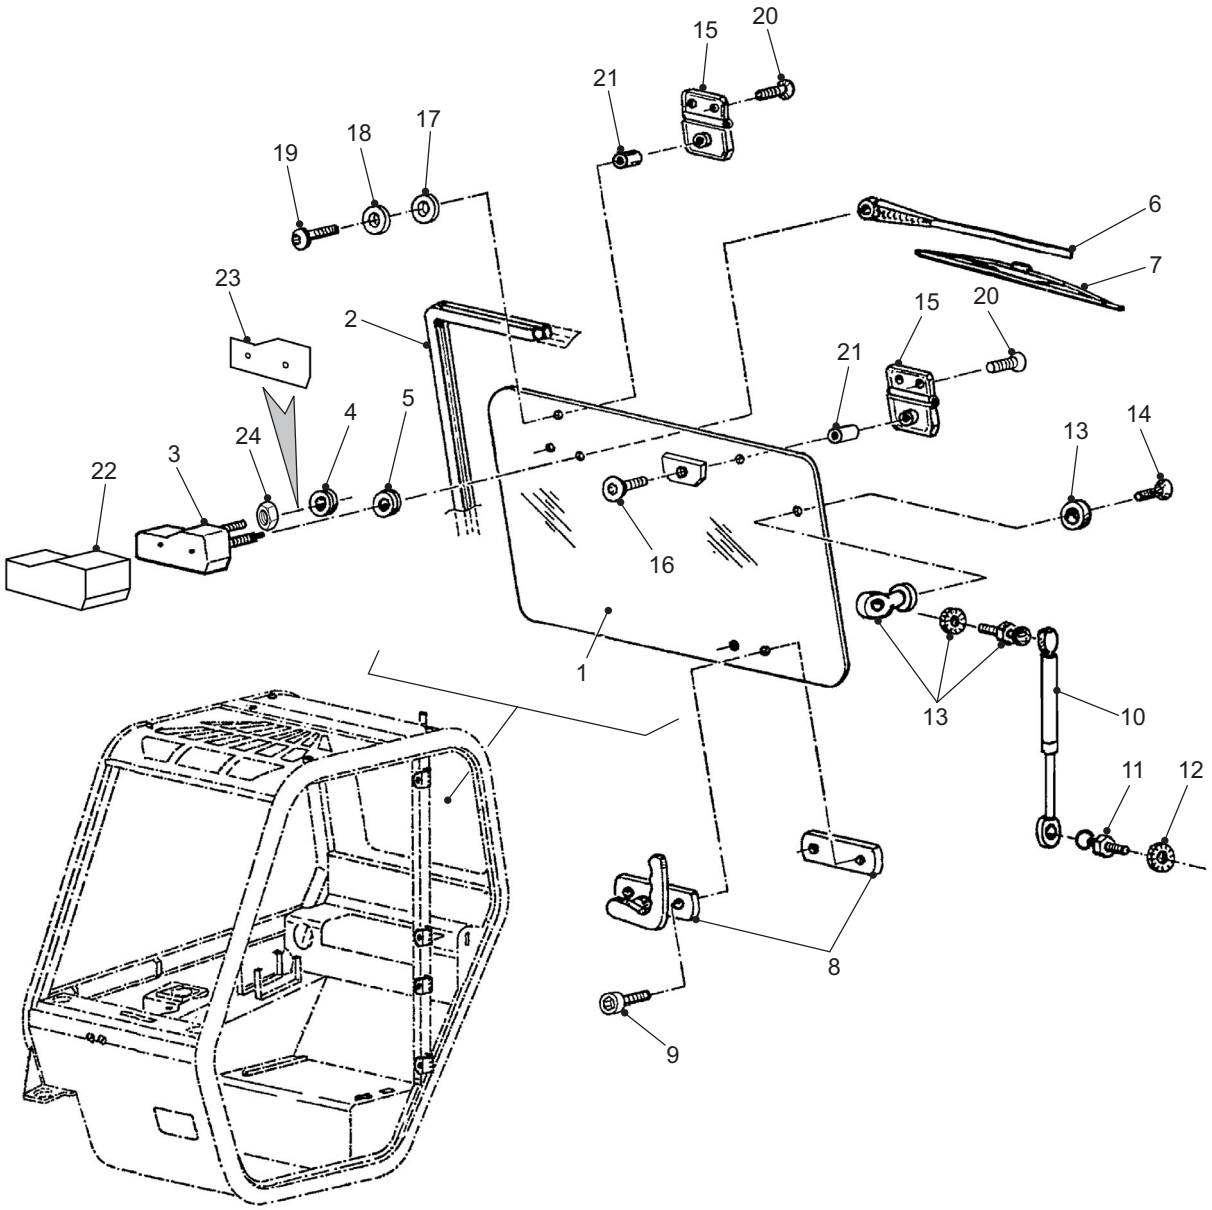

SPC001019


https://www.pdfmanual4trucks.com/

Rear Window Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6908787	Glass, rear cab			1
2	75956.3	Seal			1
3	6915534	Motor, rear wiper	Was 6909922		1
4	6910978	Guide			1
5	6910979	Guide			1
6	75900.1	Rear wiper arm			1
7	75896.1	Roof wiper blade			1
8	71162.2	Rear window handle			1
9	32397.2	Screw			2
10	75940.7	Cylinder			1
11	75935.7	Pivot Pin			1
12	000348-12P	Washer			1
13	81284.2	Screw			1
14	37469.4	Screw			1
15	75903.5	Hinge			2
16	37469.4	Screw			4
17	6910977	Washer			1
18	6910976	Washer			1
19	95502.1	Screw			1
20	37469.4	Screw			4
21	6910975	Spacer			2
22	NAP	Protector	Only with old wiper motor 6909922 ; Was 6914317		1
23	NAP	Cover	Only with old wiper motor 6909922 ; Was 6914318		1
24	01681.6	Nut			1

https://www.pdfmanual4trucks.com/

Wiper Installation

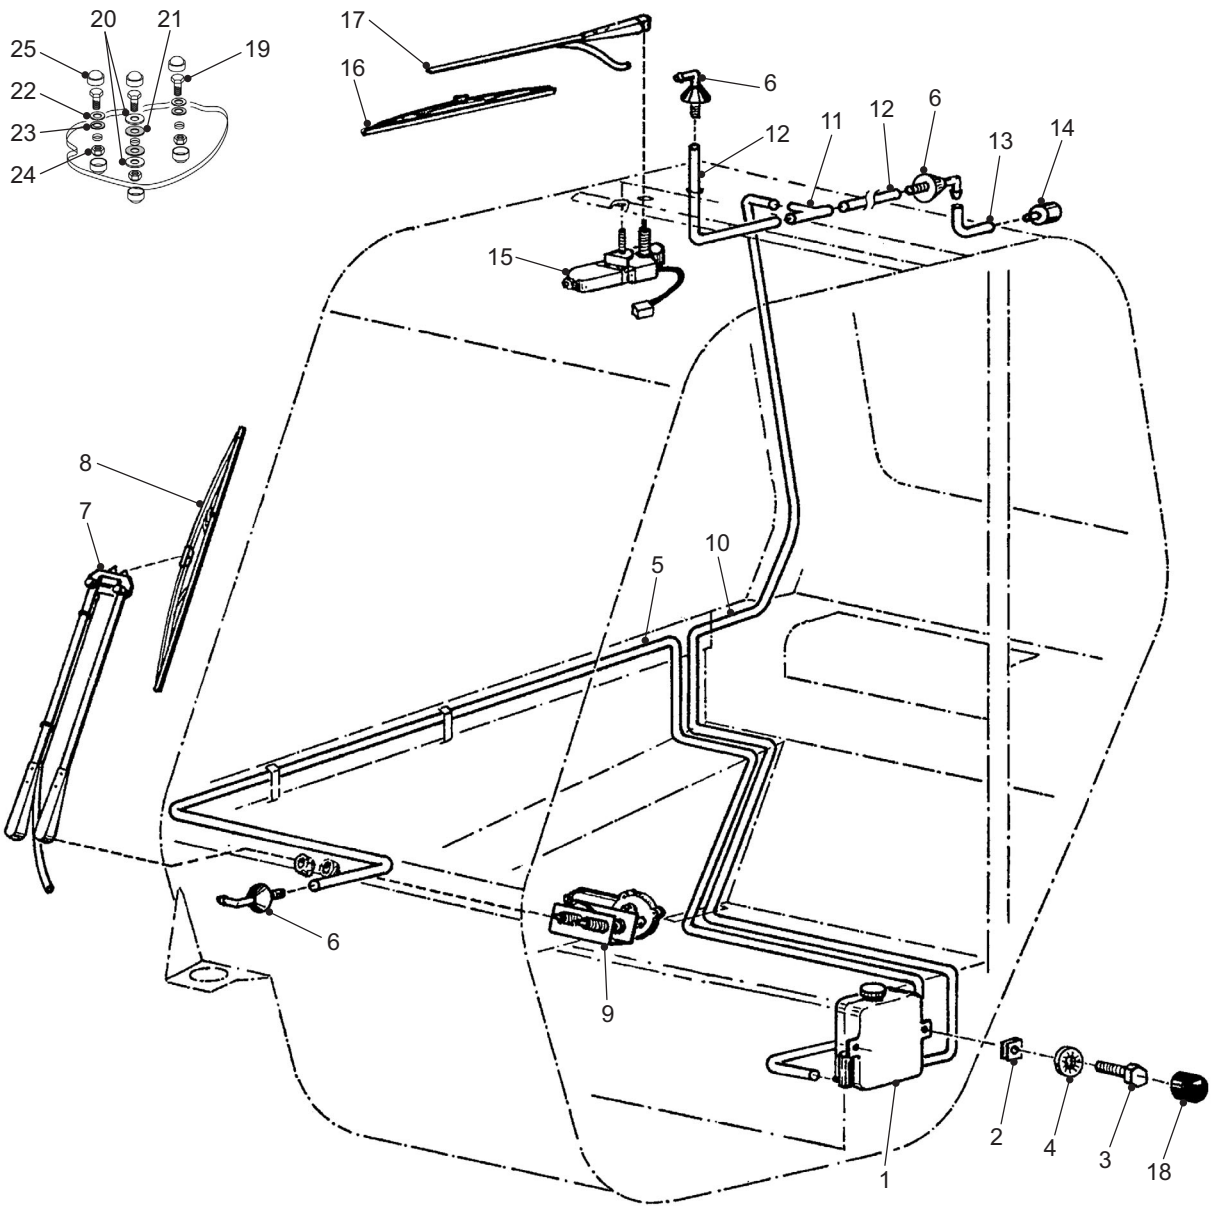

SPC001020


https://www.pdfmanual4trucks.com/

Wiper Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	97196.0	Windshield spray reservoir			1
2	6909903	Clip			2
3	6910505	Screw			2
4	01717.8	Washer			2
5	6910981	Washer pipe			1
6	75926.6	Adapter			3
7	75898.7	Windshield wiper arm			1
8	75895.3	Front Wiper Blade			1
9	6916061	Windshield Wiper Motor	Was 75920.9		1
10	97212.5	Hose			1
11	63848.6	T- union			1
12	6910982	Washer pipe			2
13	6910983	Washer pipe			1
14	97217.4	Jet			1
15	6915535	Roof wiper motor	Option ; Was 63856.9		1
16	75896.1	Roof wiper blade	Option ; Was 6911713		1
17	6911006	Roof wiper arm	Option ; Was 6911712		1
18	63332.1	Cap			2
19	01596.6	Screw	Without roof windscreen wiper		3
20	6910976	Washer	Without roof windscreen wiper		2
21	6909964	Washer	Without roof windscreen wiper		2
22	000350-20Q	Washer	Without roof windscreen wiper		2
23	6909963	Washer	Without roof windscreen wiper		2
24	01668.3	Nut	Without roof windscreen wiper		3
25	63333.9	Nut cap	Without roof windscreen wiper		6

https://www.pdfmanual4trucks.com/

Parking Brake Lever

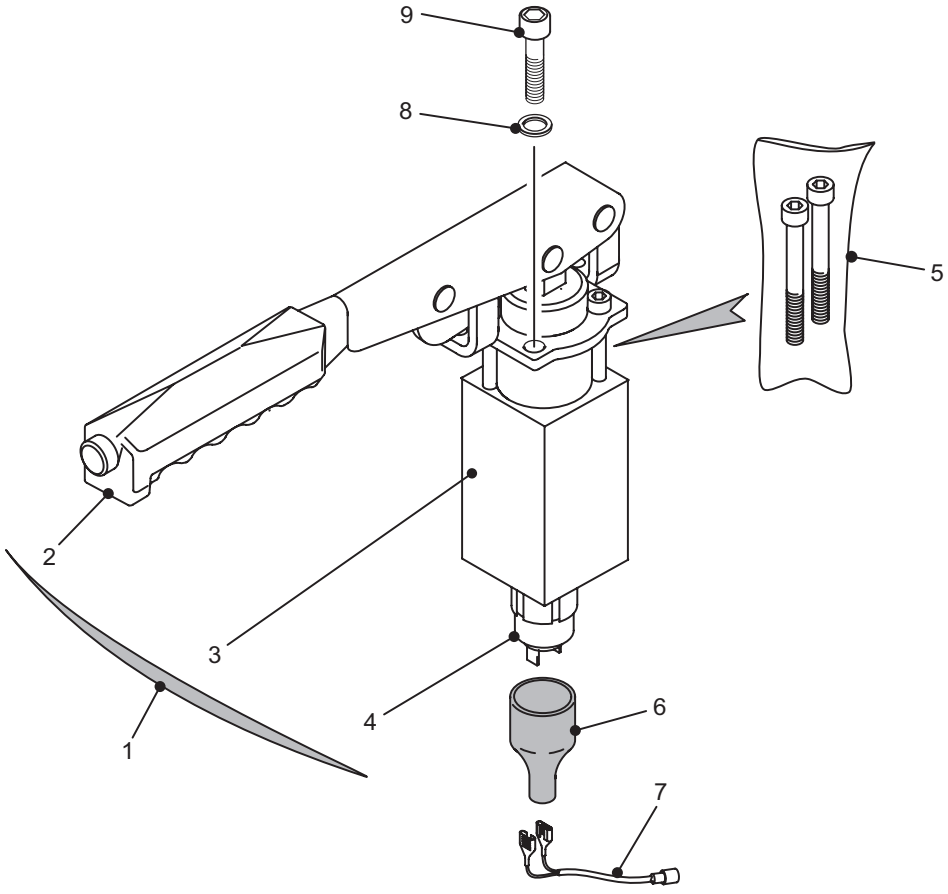

SPC001021


https://www.pdfmanual4trucks.com/

Parking Brake Lever

Item	Part Number	Denomination	Remarks	Serial Number	Qty
				3628 11135 & below + 3629 11015 & below	
1	NAP	Lever assy	Order now 6915524 ; Pos. 2 to 4 ; Was 6909330		1
2	93233.5	Lever and grip			1
3	NAP	Lever Body	Order now 6915524 ; Was 93232.7		1
4	93115.4	Pressure Switch			1
5	93227.7	Screw			1
6	6910557	Bellows and connection	Pos. 6 + 7		1
7	NSS	Connection	Order now 6910557		1
8	13416.3	Washer			2
9	10167.5	Screw			2

https://www.pdfmanual4trucks.com/

Parking Brake Lever

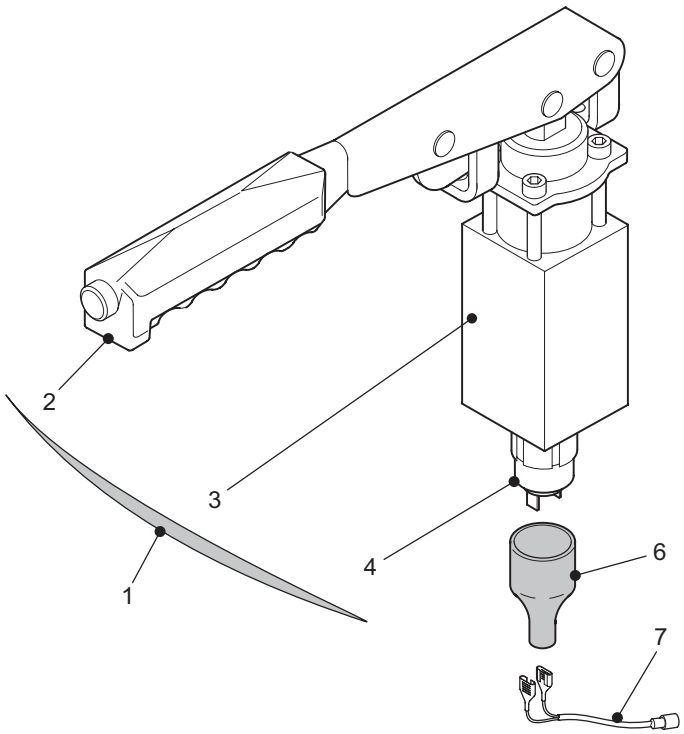

SPC001022


https://www.pdfmanual4trucks.com/

Parking Brake Lever

Item	Part Number	Denomination	Remarks	Serial Number	Qty
				3628 11136 & above + 3629 11016 & above	
1	6915524	Lever assy	Pos. 2 to 4		1
2	6912102	Grip	Including screws		1
3	6912103	Lever body	Including switch		1
4	6912104	Switch			1
6	6910557	Bellows and connection	Pos. 6 + 7		1
7	NSS	Connection	Order now 6910557		1

https://www.pdfmanual4trucks.com/

Fixed Boom Assy

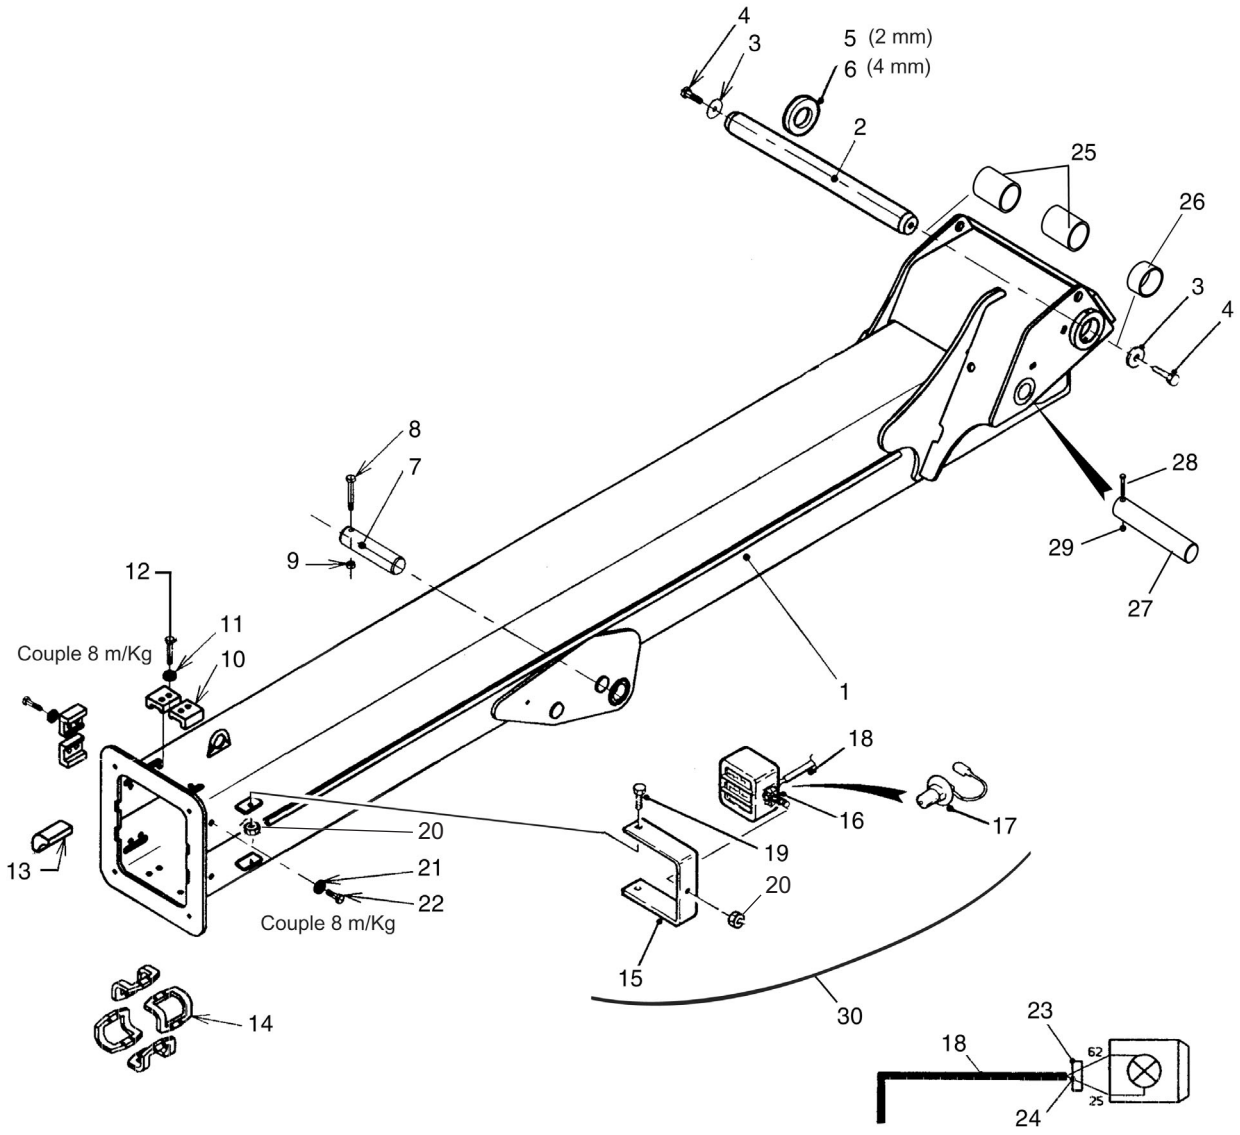

SPC001036


https://www.pdfmanual4trucks.com/

Fixed Boom Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6913187	Outer boom section			1
2	89328.9	Locating Pin			1
3	77430.7	Washer			2
4	44001.6	Screw			2
5	79428.9	Washer	Thickness : 2 mm		1
6	79429.7	Washer	Thickness : 4 mm		1
7	77419.0	Pin, lift cyl mounting			1
8	65397.2	Screw			1
9	100345-09A	Nut			1
10	88404.9	Mounting Block			4
11	89332.1	Washer			8
12	88497.3	Screw			8
13	88403.1	Wear Pad			4
14	88401.5	Shoe			4
15	84675.8	Bracket			1
16	79908.0	Light			1
17	58446.6	Bulb			1
18	78920.6	Wire harness			1
19	01605.5	Screw			2
20	100345-09A	Nut			2
21	89332.1	Washer			8
22	01616.2	Screw			8
23	79906.4	Connector			1
24	12940.3	Clip			2
25	77380.4	Boom Pivot Bushing			2
26	89323.0	Bush			1
27	77425.7	Locating Pin			1
28	65397.2	Screw			1
29	100345-09A	Nut			1
30		Working light option	Pos. 15 to 20 + 23 + 24		1

https://www.pdfmanual4trucks.com/

End Boom Assy

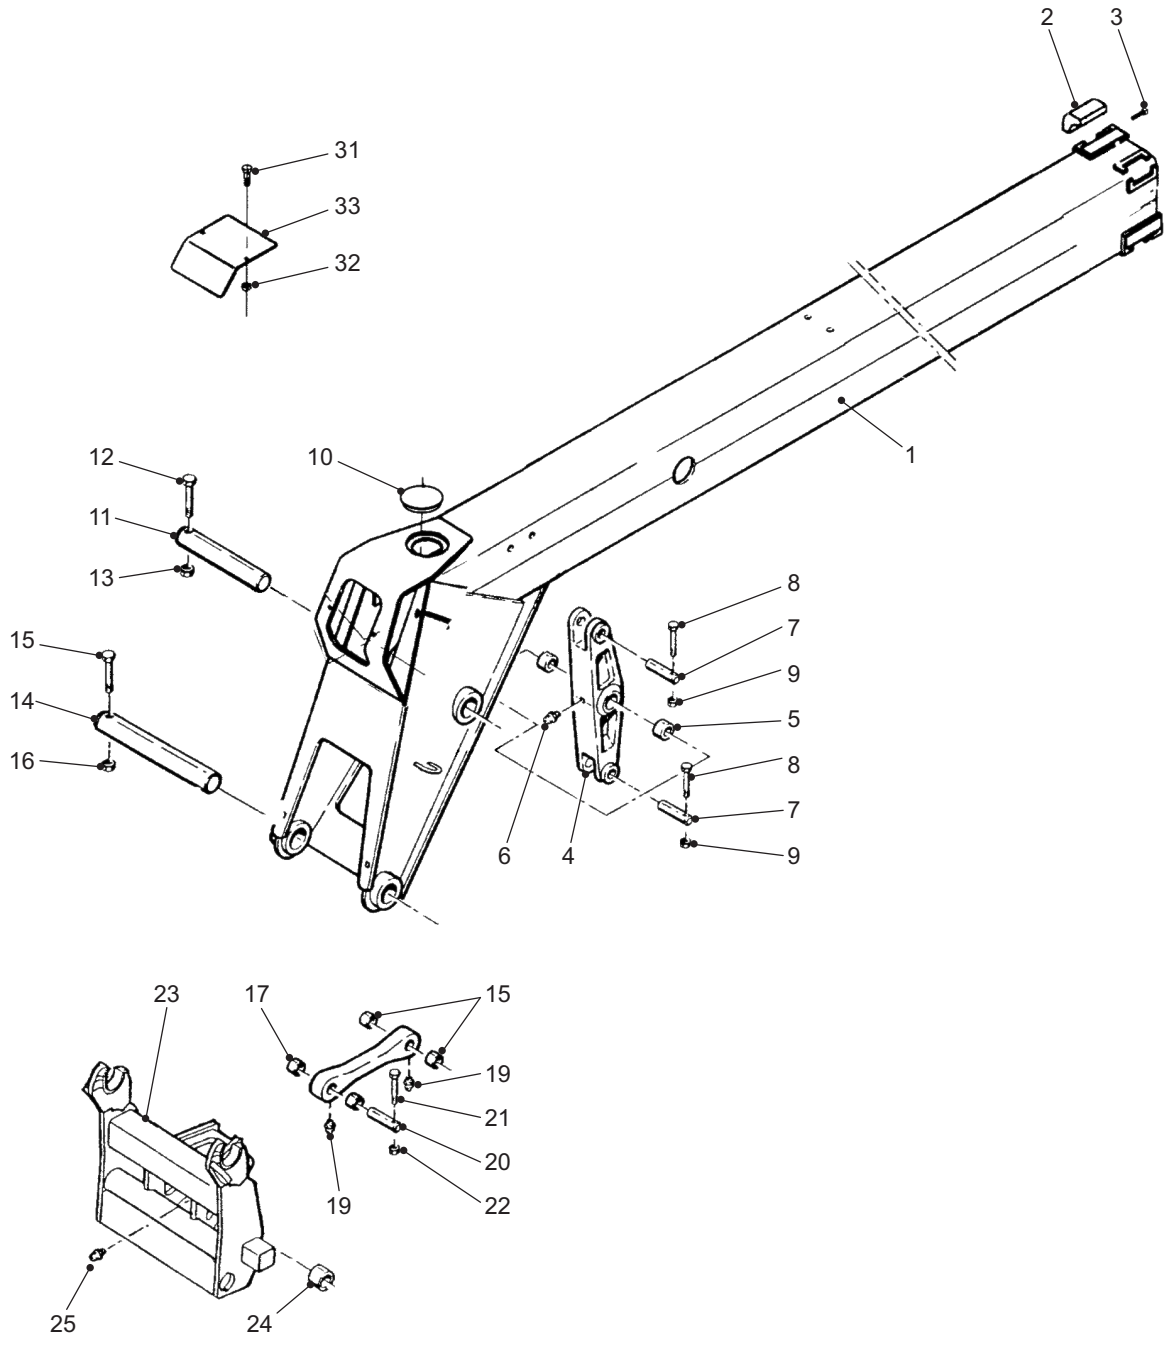

SPC001037


https://www.pdfmanual4trucks.com/

End Boom Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6913193	Inner boom			1
2	88403.1	Wear Pad			4
3	88540.0	Screw			4
4	6913192	“Z” bar link (cast iron)	Pos. 4 + 5 ; Optional		1
	79308.3	"Z" bar link (welded)	Pos. 4 + 5 ; Optional		1
5	77380.4	Boom Pivot Bushing			2
6	01775.6	Grease Nipple			1
7	77411.7	Locating Pin			2
8	65397.2	Screw			2
9	100345-09A	Nut			2
10	79137.6	Plug			1
11	77422.4	Locating Pin			1
12	82459.9	Screw			1
13	100345-09A	Nut			1
14	77421.6	Pin			1
15	82459.9	Screw			1
16	100345-09A	Nut			1
17	84632.9	Connecting Arm (cast iron)	Pos. 17 + 18 ; Optional		1
	6915025	Connecting arm (machined)	Pos. 17 + 18 ; Optional		1
18	72347.8	Bushing			4
19	01775.6	Grease Nipple			2
20	77411.7	Locating Pin			1
21	65397.2	Screw			1
22	100345-09A	Nut			1
23	80631.5	Carriage	Was 88457.7		1
24	77380.4	Boom Pivot Bushing			2
25	01775.6	Grease Nipple			1
31	01597.4	Screw			2
32	51851.4	Nut			2
33	85466.1	Cover Plate			1

https://www.pdfmanual4trucks.com/

Manual Quick Attach Lock

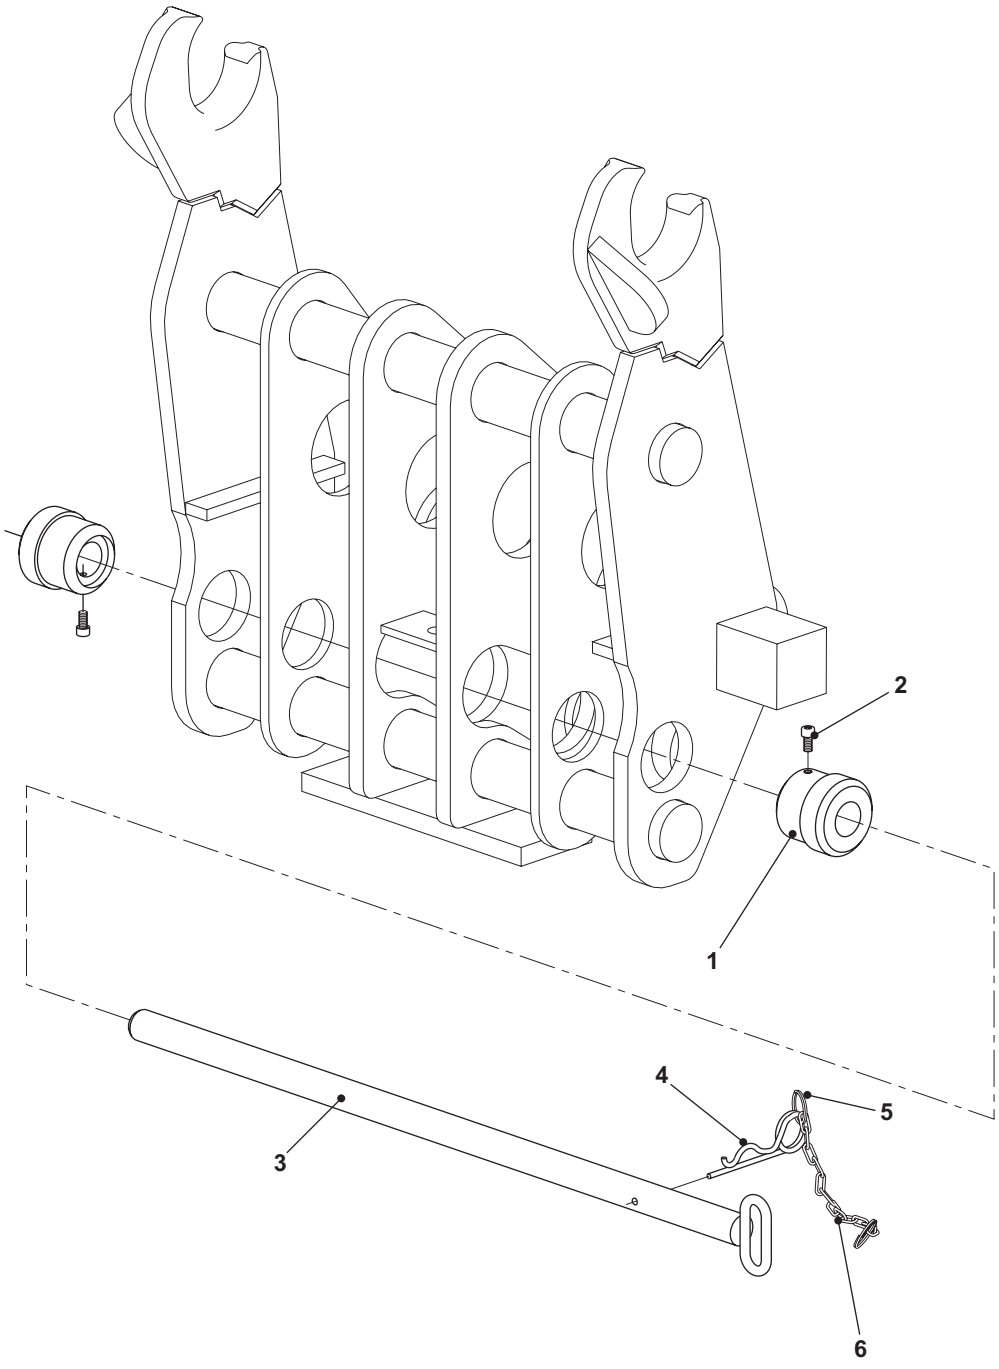

SPC001043


https://www.pdfmanual4trucks.com/

Manual Quick Attach Lock

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	79379.4	Bearing			2
2	29649.1	Screw			2
3	79380.2	Spindle			1
4	95428.9	Pin			1
5	58158.7	Ring			2
6	6910852	Chain			1

https://www.pdfmanual4trucks.com/

Axle Installation

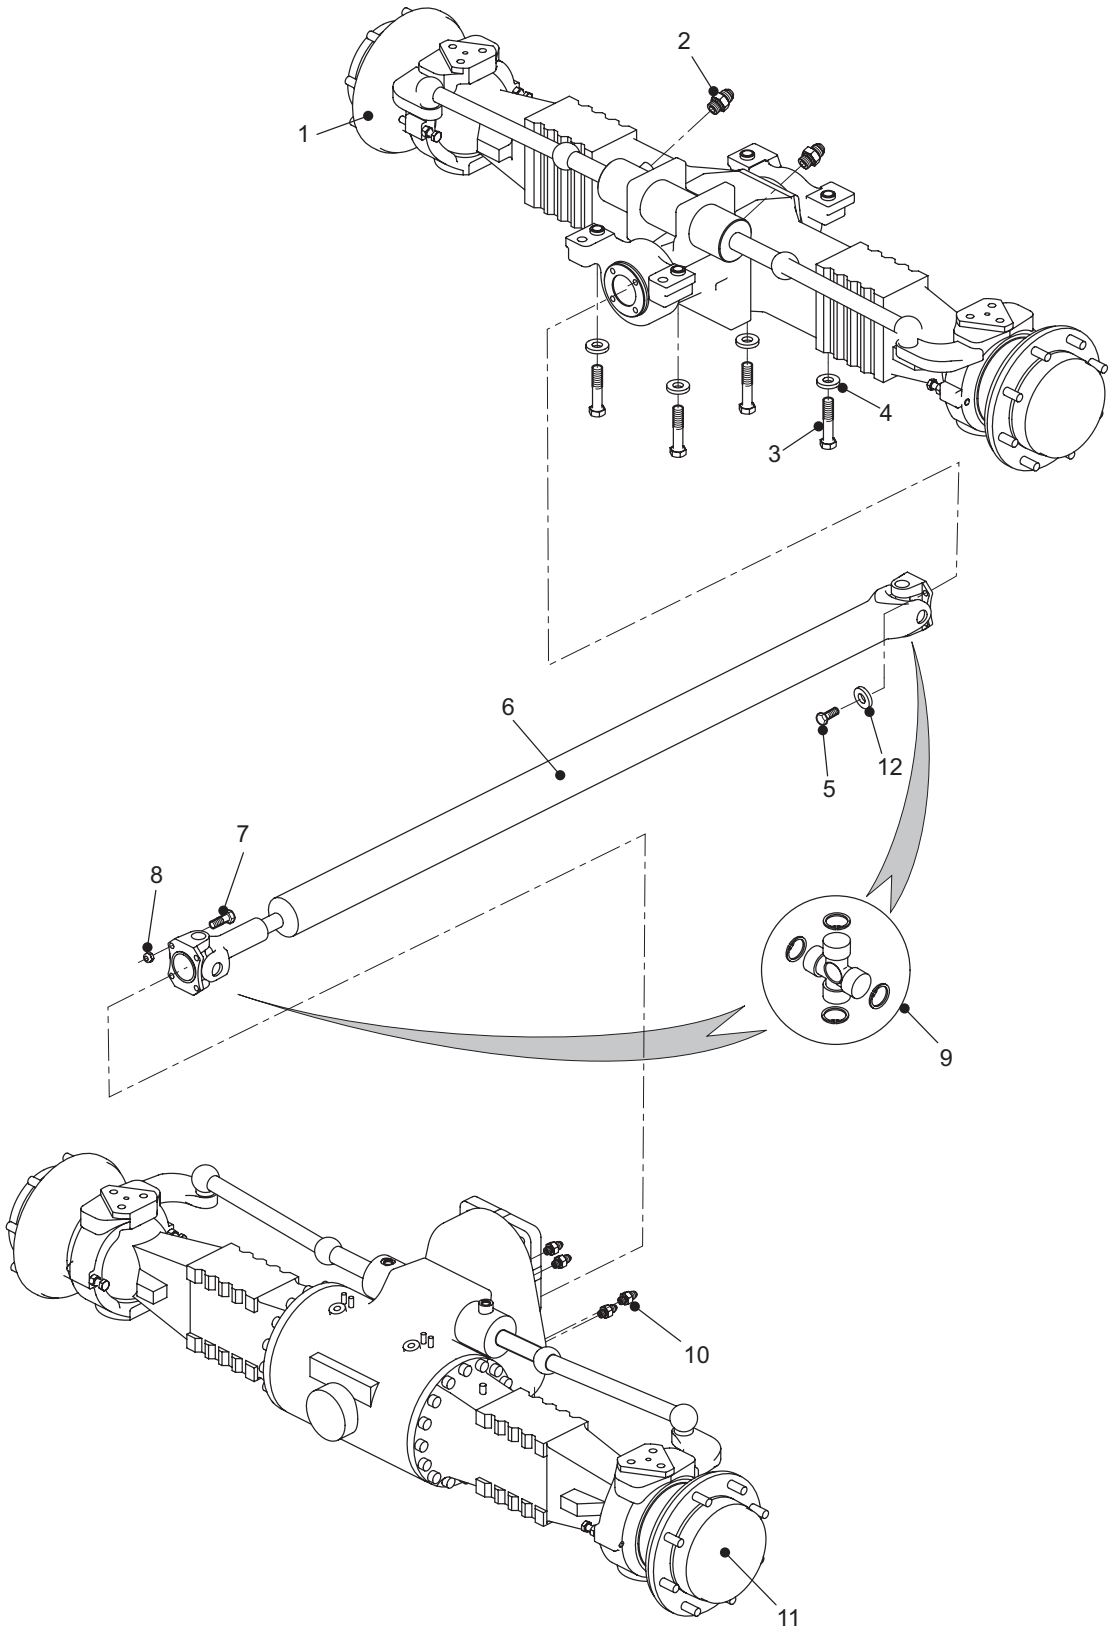

SPC002012


https://www.pdfmanual4trucks.com/

Axle Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	94670.7	Rear axle			1
2	89503.7	Adapter			2
3	57734.6	Screw			4
4	33107.4	Washer			4
5	66425.0	Screw			4
6	84169.2	Cardan shaft			1
7	100338-15V	Screw			4
8	100345-11C	Nut			4
9	75658.5	U-joint			1
10	100375-71D	Adapter			4
11	NAP	Front axle	Order now 6913223 ; Was 88197.9	3628 11096 & below + 3629 11008 & below	1
	6913223	Front axle	Was 88197.9	3628 11097 & above + 3629 11009 & above	1
12	89517.7	Washer			4

https://www.pdfmanual4trucks.com/

Cardan Shaft

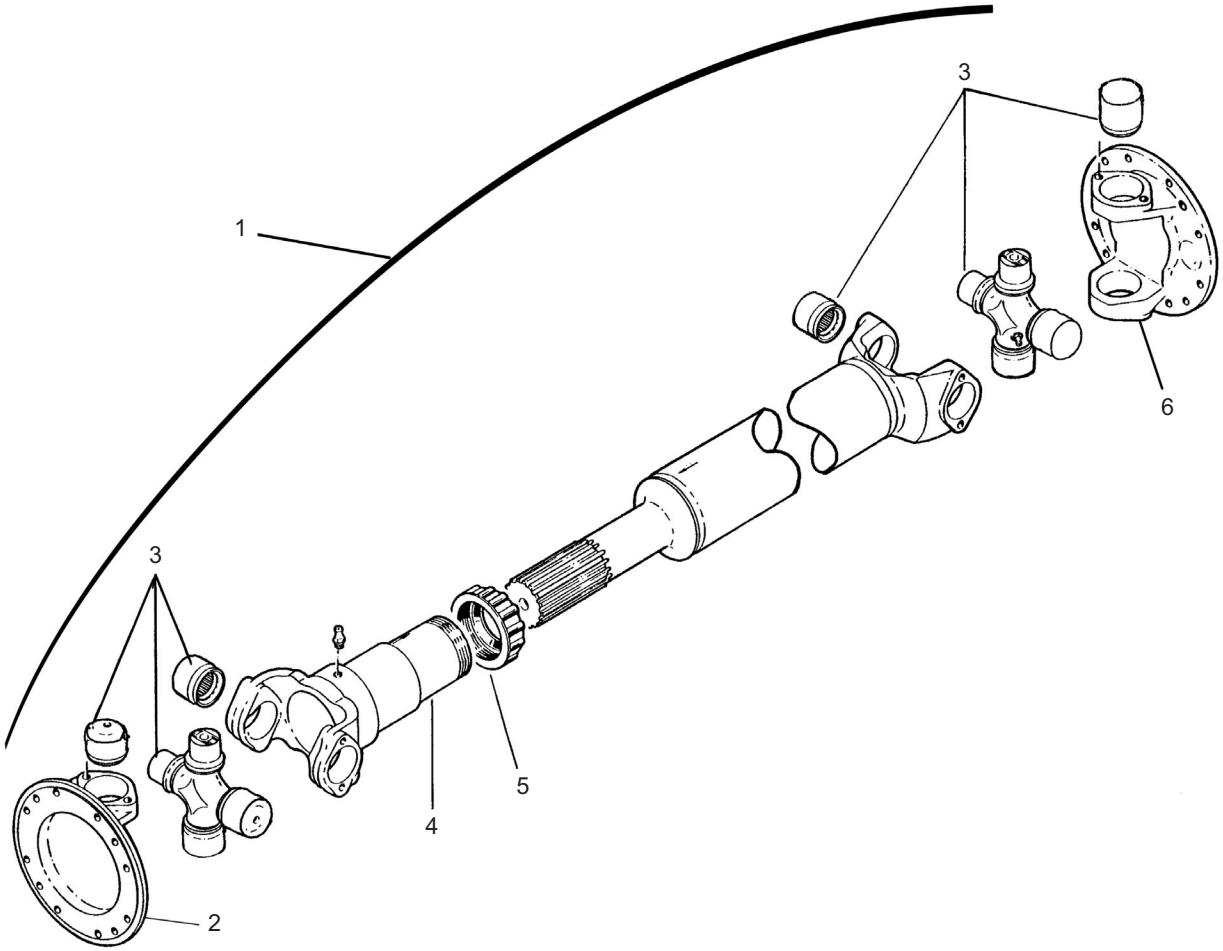

SPC002002

https://www.pdfmanual4trucks.com/


Cardan Shaft

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	84169.2	Cardan shaft	Pos. 2 to 6		1
2	97420.4	Flange			1
3	75658.5	U-joint			2
4	97418.8	Shaft			1
5	97416.2	Seal			1
6	97420.4	Flange			1

https://www.pdfmanual4trucks.com/

Hub Reduction - Front Axle / Rear Axle

quantities are per axle

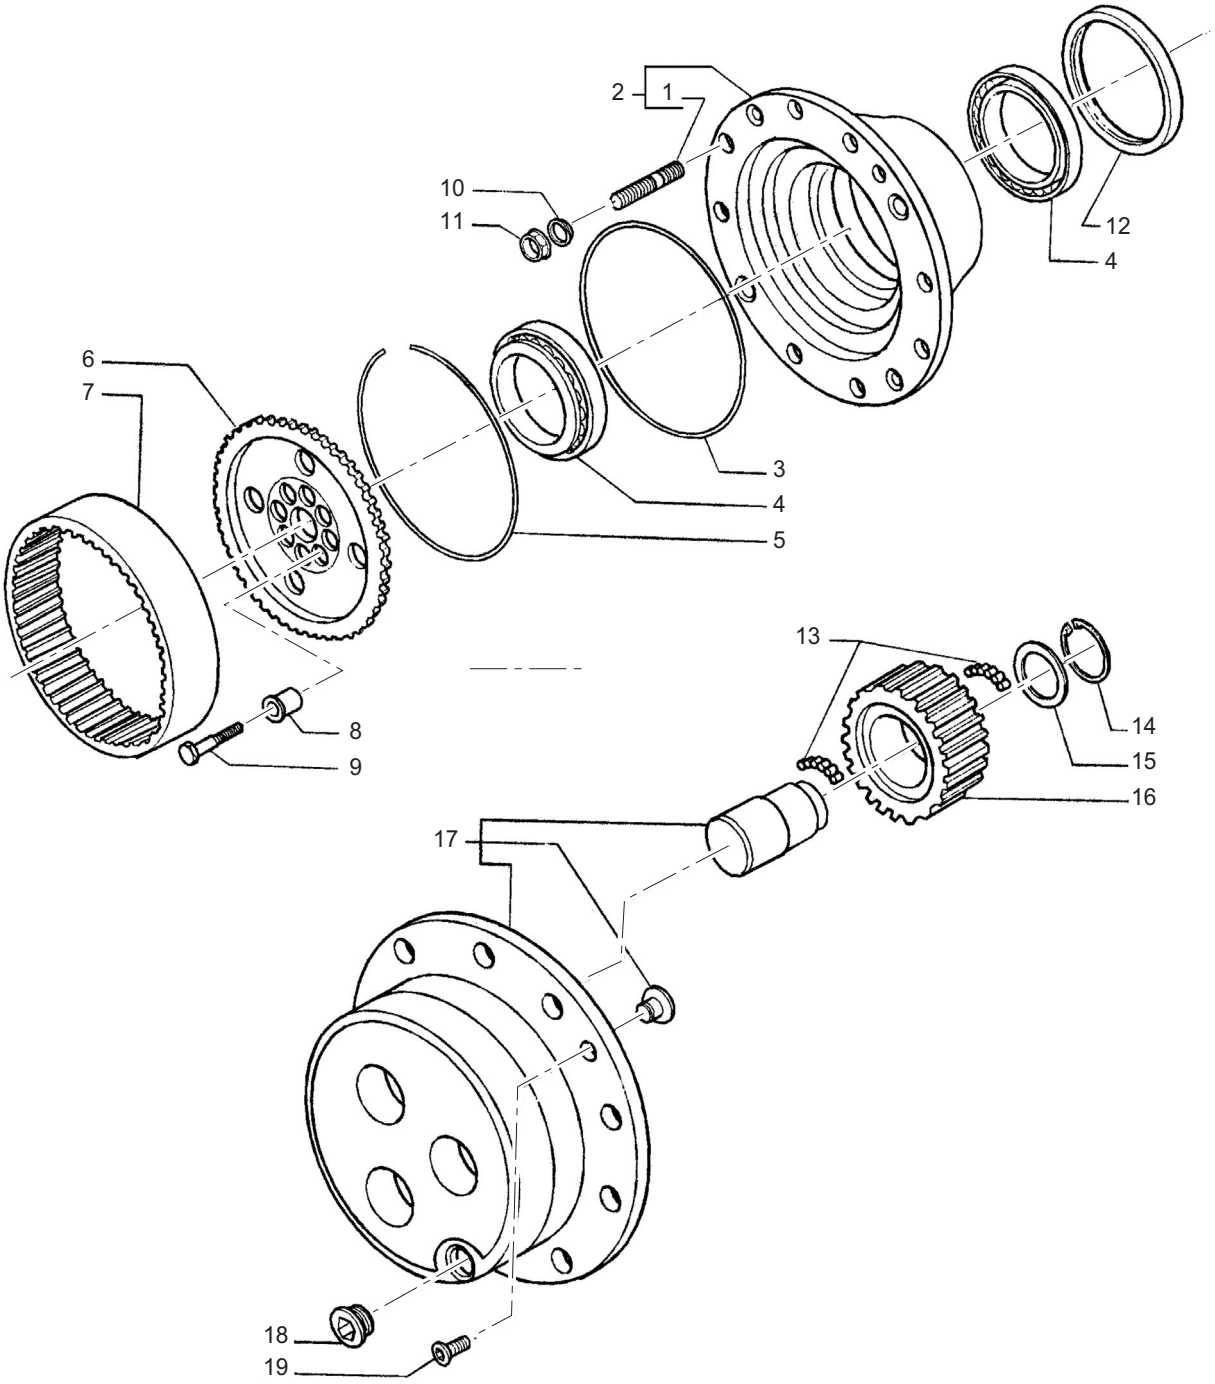

SPC002003

https://www.pdfmanual4trucks.com/


Hub Reduction - Front Axle / Rear Axle

quantities are per axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	75822.7	Stud			16
2	6912585	Hub	Pos. 1 + 2 ; Was 97413.9		2
3	75277.4	O-ring			2
4	6912931	Bearing	Was 100398-15S		4
5	75824.3	Lock Ring			2
6	75825.0	Support			2
7	75826.8	Toothed Ring			2
8	89963.3	Sleeve			16
9	89964.1	Screw			16
10	100349-02C	Washer			16
11	100345-41K	Wheel Nut			16
12	97414.7	Seal	150 mm x 180 mm x 16 mm		2
13	75834.2	Needle Bearing	Set of 10 needles		34
14	75831.8	Retaining Ring			6
15	75832.6	Washer			6
16	75833.4	Gear			6
17	75830.0	Pinion carrier			2
18	100374-32C	Plug			2
19	100324-04M	Screw			2

https://www.pdfmanual4trucks.com/

Reducer Box - Front Axle

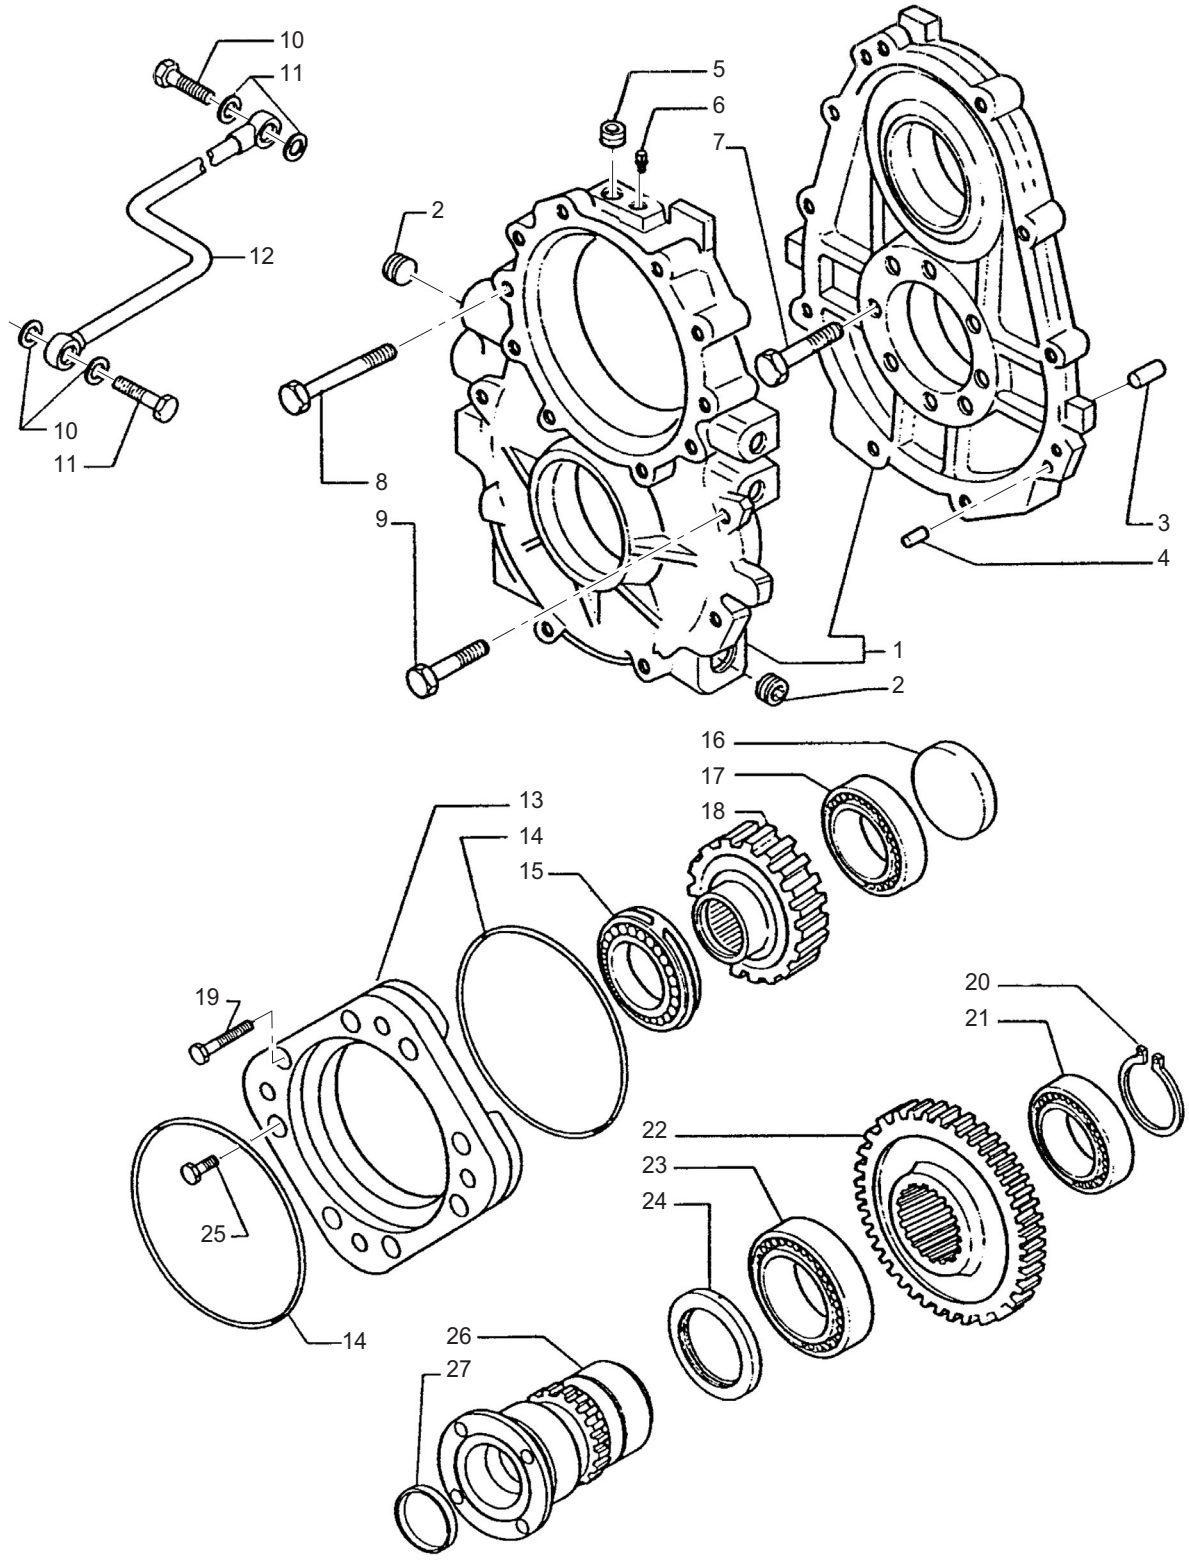


https://www.pdfmanual4trucks.com/

Reducer Box - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	75835.9	Housing			1
2	75505.8	Plug			2
3	75836.7	Pin			1
4	75713.8	Pin			2
5	75839.1	Plug			1
6	75717.9	Breather		3628 11096 & below + 3629 11008 & below	1
	100505-24H	Breather		3628 11097 & above + 3629 11009 & above	1
7	75840.9	Screw			8
8	75841.7	Screw			2
9	75842.5	Screw			6
10	75843.3	Screw			2
11	75844.1	Washer			4
12	75845.8	Tube			1
13	75846.6	Bracket			1
14	75847.4	O-ring			2
15	75848.2	Bearing			1
16	75849.0	Plug			1
17	75850.8	Bearing			1
18	75851.6	Gear		3628 11096 & below + 3629 11008 & below	1
	6912905	Gear		3628 11097 & above + 3629 11009 & above	1
19	75852.4	Screw			2
20	75853.2	Clip			1
21	75854.0	Bearing			1
22	75855.7	Gear		3628 11096 & below + 3629 11008 & below	1
	6912906	Gear		3628 11097 & above + 3629 11009 & above	1
23	75856.5	Bearing			1
24	75857.3	Seal			1
25	75858.1	Screw			6
26	75859.9	Pin			1
27	75860.7	Plug			1

https://www.pdfmanual4trucks.com/

Housing - Front Axle

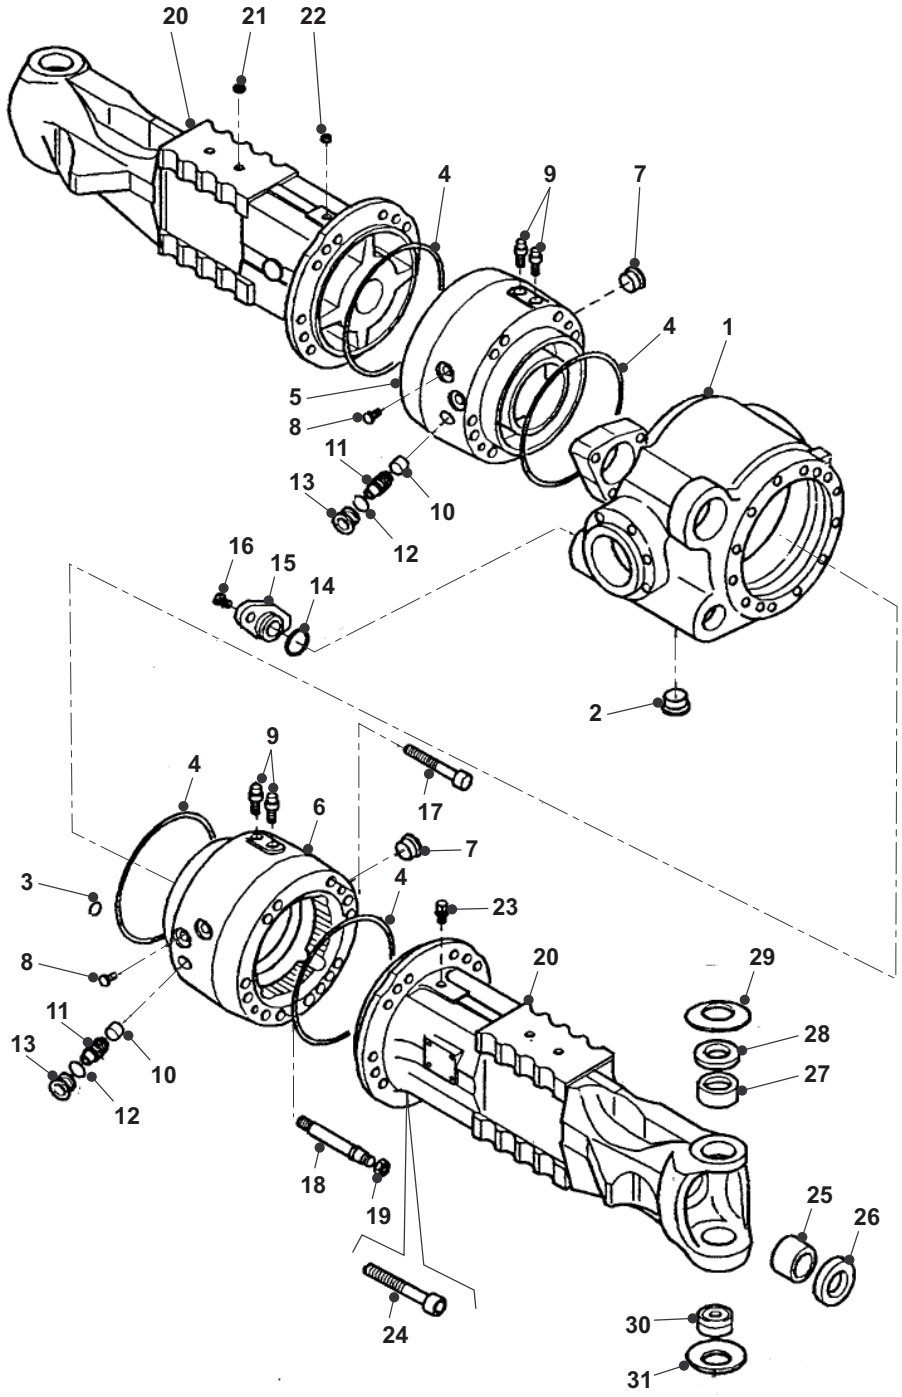

SPC002013

https://www.pdfmanual4trucks.com/


Housing - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	89955.9	Housing			1
2	100374-32C	Plug			1
3	93084.2	O-ring			2
4	75710.4	O-ring			4
5	89905.4	Support			1
6	89916.1	Support			1
7	100374-32C	Plug			2
8	64842.8	Plug			2
9	63238.0	Breather			4
10	89917.9	Pin CDS=sleeve			6
11	89908.8	Valve			6
12	89915.3	O-ring			6
13	89913.8	Bushing			6
14	75709.6	O-ring			1
15	75708.8	Cover Plate			1
16	01597.4	Screw			2
17	75716.1	Screw			2
18	89914.6	Stud			2
19	89912.0	Nut			2
20	98661.2	Housing			2
21	92608.9	Plug			4
22	75838.3	Grease Nipple	Was 100458-02A		1
23	75717.9	Breather		3628 11096 & below + 3629 11008 & below	1
	100505-24H	Breather		3628 11097 & above + 3629 11009 & above	1
24	75715.3	Screw			22
25	100288-63N	Washer			2
26	98660.4	Bushing			2
27	101288-35D	Bushing		3628 11096 & below + 3629 11008 & below	2
28	71131.7	Washer		3628 11096 & below + 3629 11008 & below	2
	6912908	Washer		3628 11097 & above + 3629 11009 & above	2
29	66011.8	Washer			2

https://www.pdfmanual4trucks.com/

Housing - Front Axle

Recurrence of previous drawing

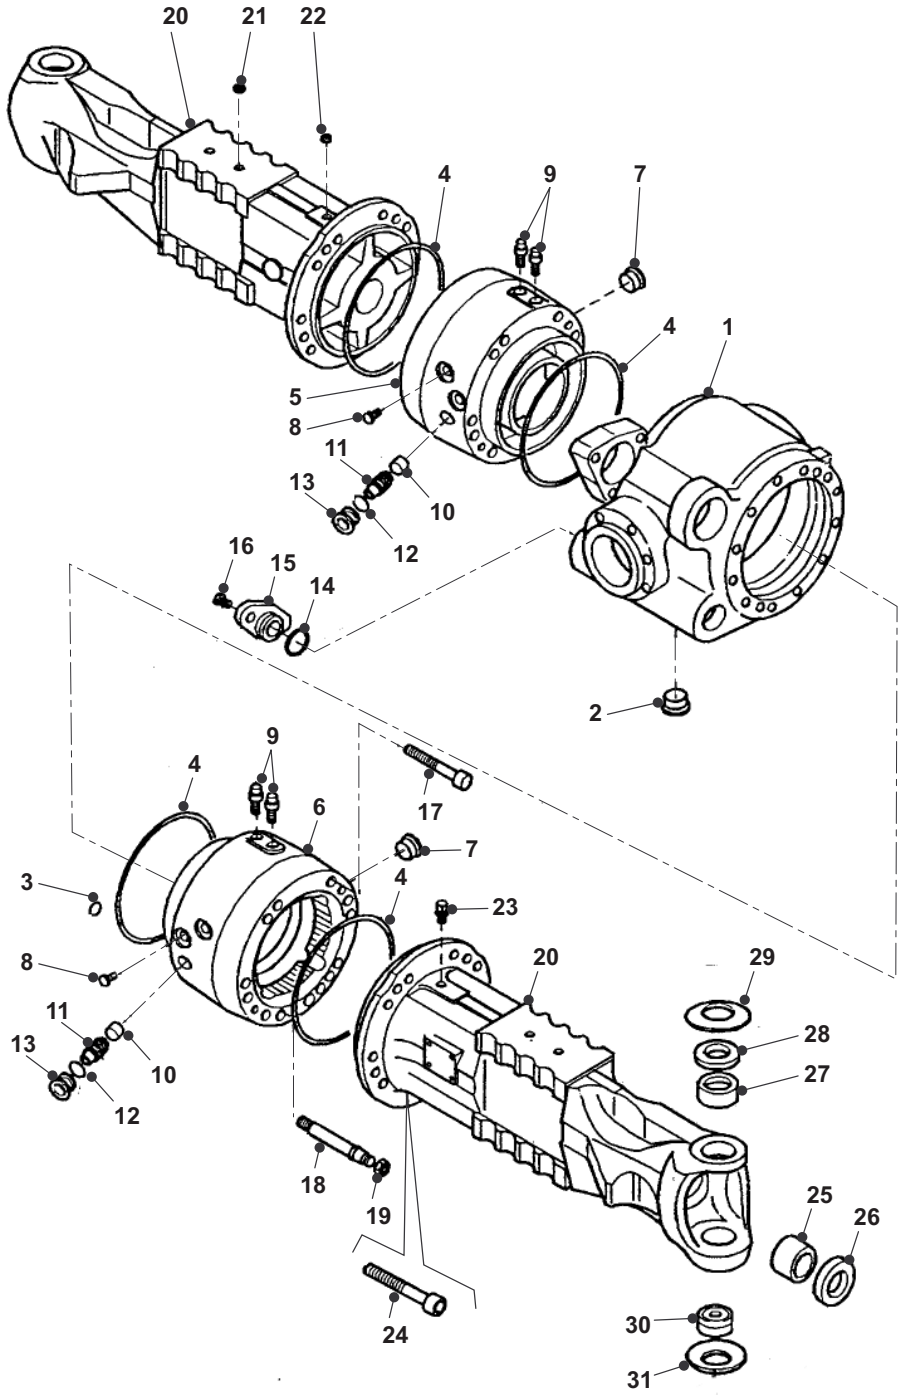

SPC002013


https://www.pdfmanual4trucks.com/

Housing - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
30	100400-19P	Bushing			2
31	66010.0	Washer			2

https://www.pdfmanual4trucks.com/

Differential - Front Axle

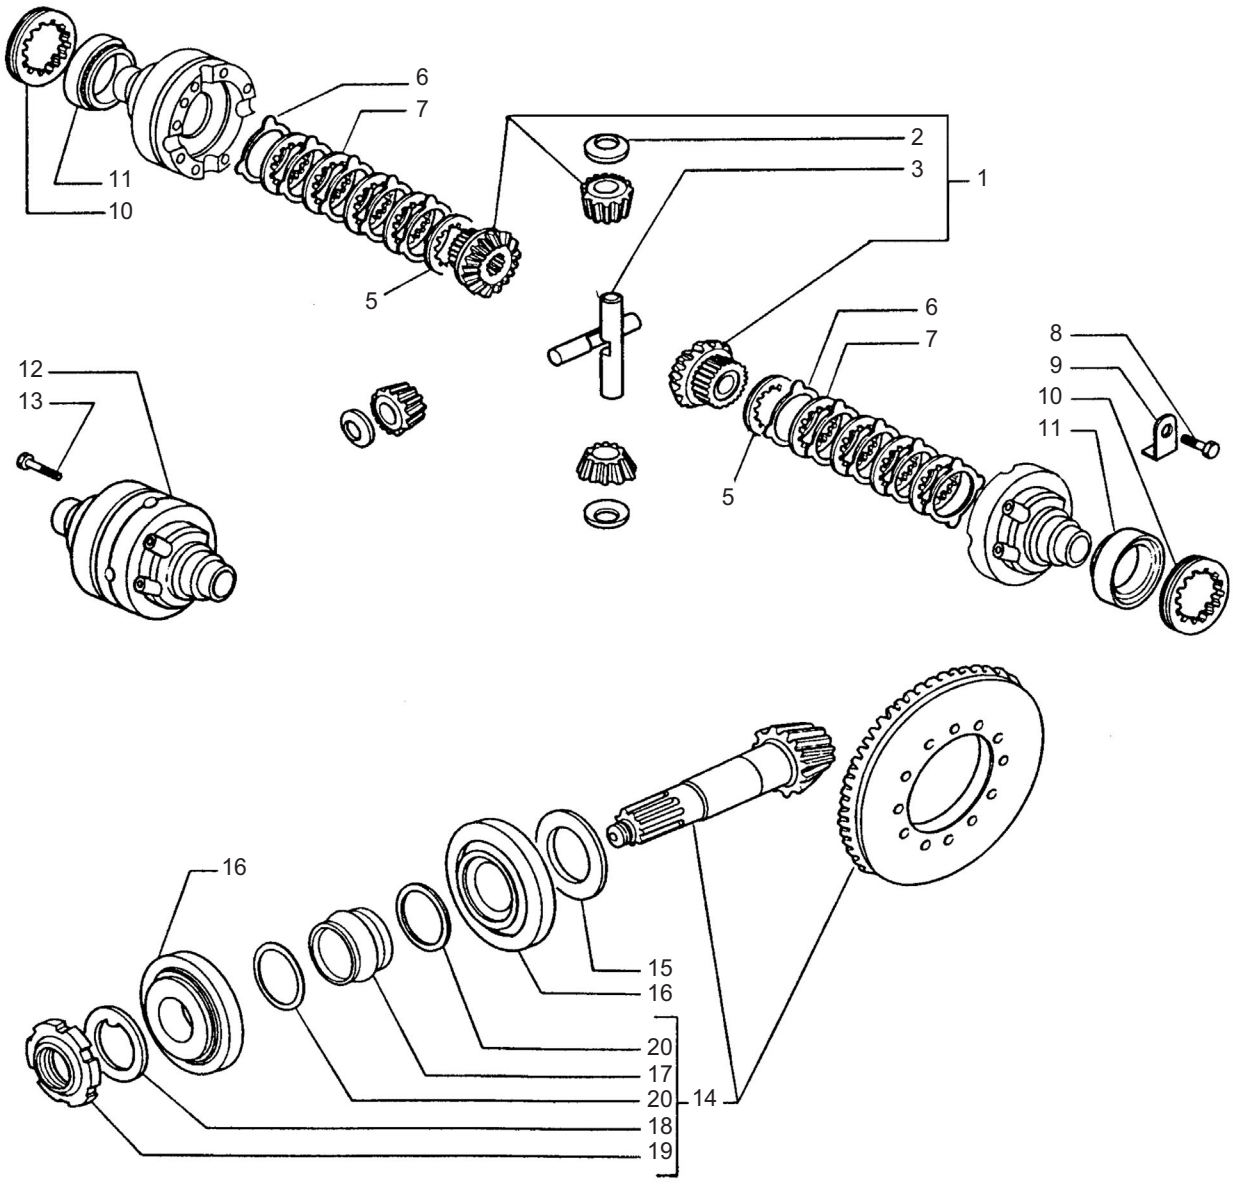

SPC002005


https://www.pdfmanual4trucks.com/

Differential - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	89957.5	Differential, Complete			1
2	100485-56T	Washer			4
3	100485-55S	Pin	See 89957.4		2
5	64855.0	Disc			2
6	64856.8	Counter Disc			10
7	75774.0	Disc	Was 64857.6		8
8	66048.0	Screw			2
9	75793.0	Plate			2
10	100345-40J	Clamp			2
11	00909.2	Bearing	Was 000398-08U		2
12	92601.4	Housing		3628 11096 & below + 3629 11008 & below	1
	89921.1	Housing		3628 11097 & above + 3629 11009 & above	1
13	100338-39W	Screw			12
14	75778.1	Bevel Gear			1
15	75779.9	Shim 2.50mm	Thickness 2.50 mm		1
	75780.7	Shim 2.60mm	Thickness 2.60 mm		1
	75781.5	Shim 2.70mm	Thickness 2.70 mm		1
	75782.3	Shim 2.80mm	Thickness 2.80 mm		1
	75783.1	Shim 2.90mm	Thickness 2.90 mm		1
	75784.9	Shim 3.00mm	Thickness 3.00 mm		1
	75785.6	Shim 3.10mm	Thickness 3.10 mm		1
	75786.4	Shim 3.20mm	Thickness 3.20 mm		1
	75787.2	Shim 3.30mm	Thickness 3.30 mm		1
	75788.0	Shim 3.40mm	Thickness 3.40 mm		1
16	07187.8	Bearing			1
17	101288-39H	Spacer			1
18	100348-06X	Washer			1
19	100345-37F	Nut			1
20	64851.9	Washer			1

https://www.pdfmanual4trucks.com/

Steering - Front Axle

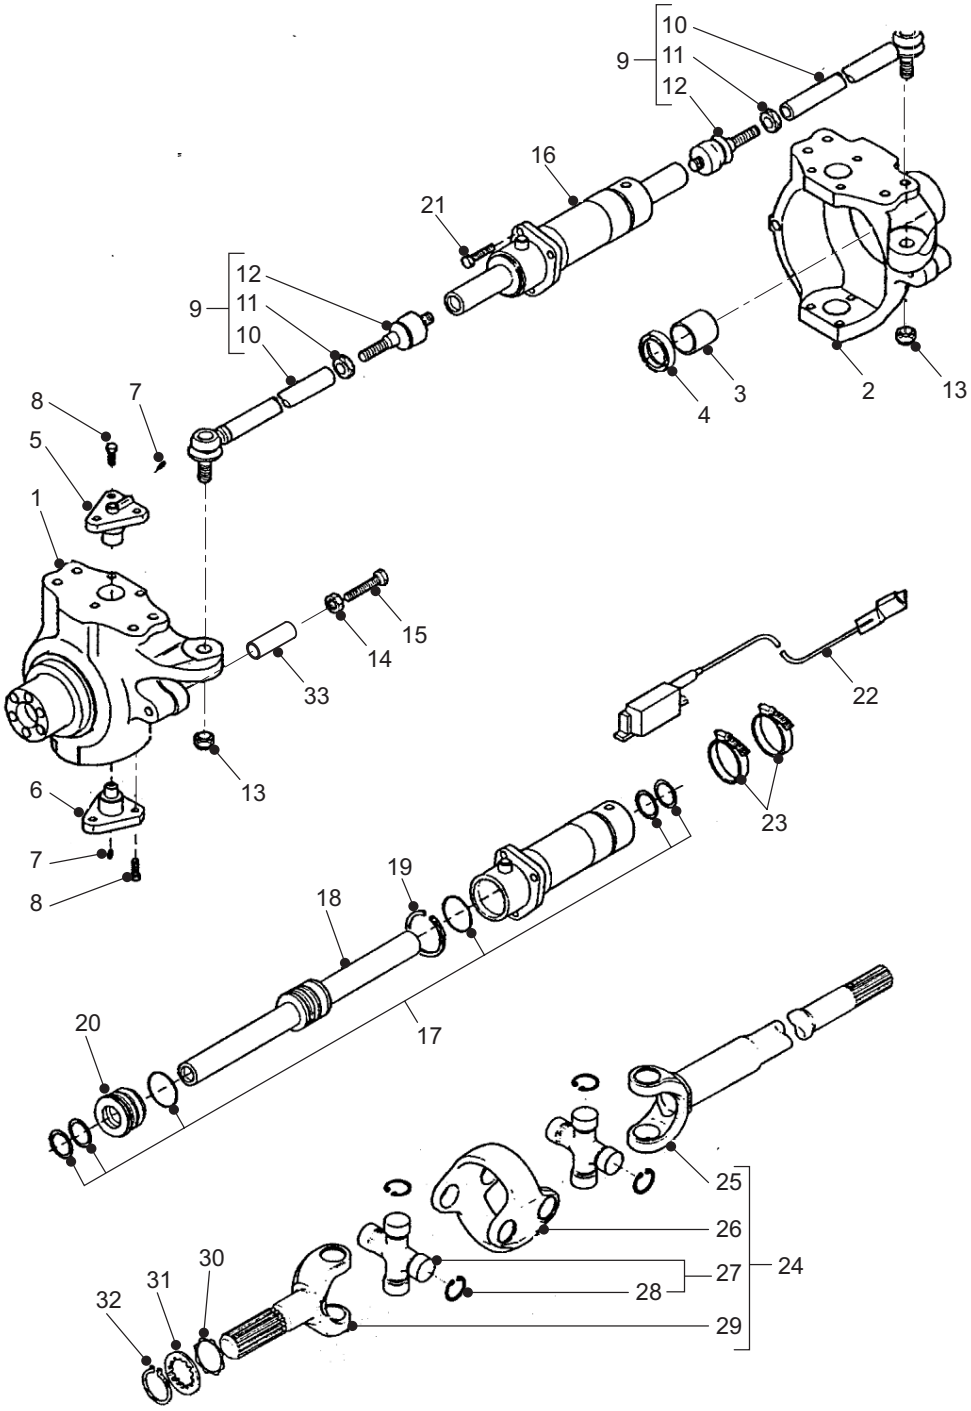

SPC002014

https://www.pdfmanual4trucks.com/


Steering - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	98669.5	Pivot			1
2	98668.7	Pivot			1
3	75296.4	Bushing			2
4	98645.5	Seal			2
5	66013.4	Pin			2
6	66014.2	Pin			2
7	006458-01H	Grease Nipple			4
8	64833.7	Screw			12
9	75723.7	Tie Rod Assembly			2
10	75722.9	Tie Rod End			2
11	66044.9	Nut			2
12	63225.7	Connecting Rod			2
13	63252.1	Nut			2
14	81514.2	Nut			4
15	75297.2	Screw		3628 11096 & below + 3629 11008 & below	4
	6912909	Screw		3628 11097 & above + 3629 11009 & above	4
16	75725.2	Steering Cylinder			1
17	75762.5	Seal Kit			1
18	81515.9	Rod			1
19	6912587	Rubber band	Was 89920.3	3628 11096 & below + 3629 11008 & below	1
	6912108	Rubber band		3628 11097 & above + 3629 11009 & above	1
20	75726.0	Cylinder head			1
21	75724.5	Screw			3
22	75727.8	Detector			1
23	75728.6	Clamp			2
24	92604.8	Universal Drive Assembly		3628 11096 & below + 3629 11008 & below	2
	6912911	Universal Drive Assembly		3628 11097 & above + 3629 11009 & above	2
25	93619.5	Long Axle Shaft			1
26	93618.7	U-joint			2
27	93616.1	Housing			1
28	93617.9	Clip			8

https://www.pdfmanual4trucks.com/

Steering - Front Axle

Recurrence of previous drawing

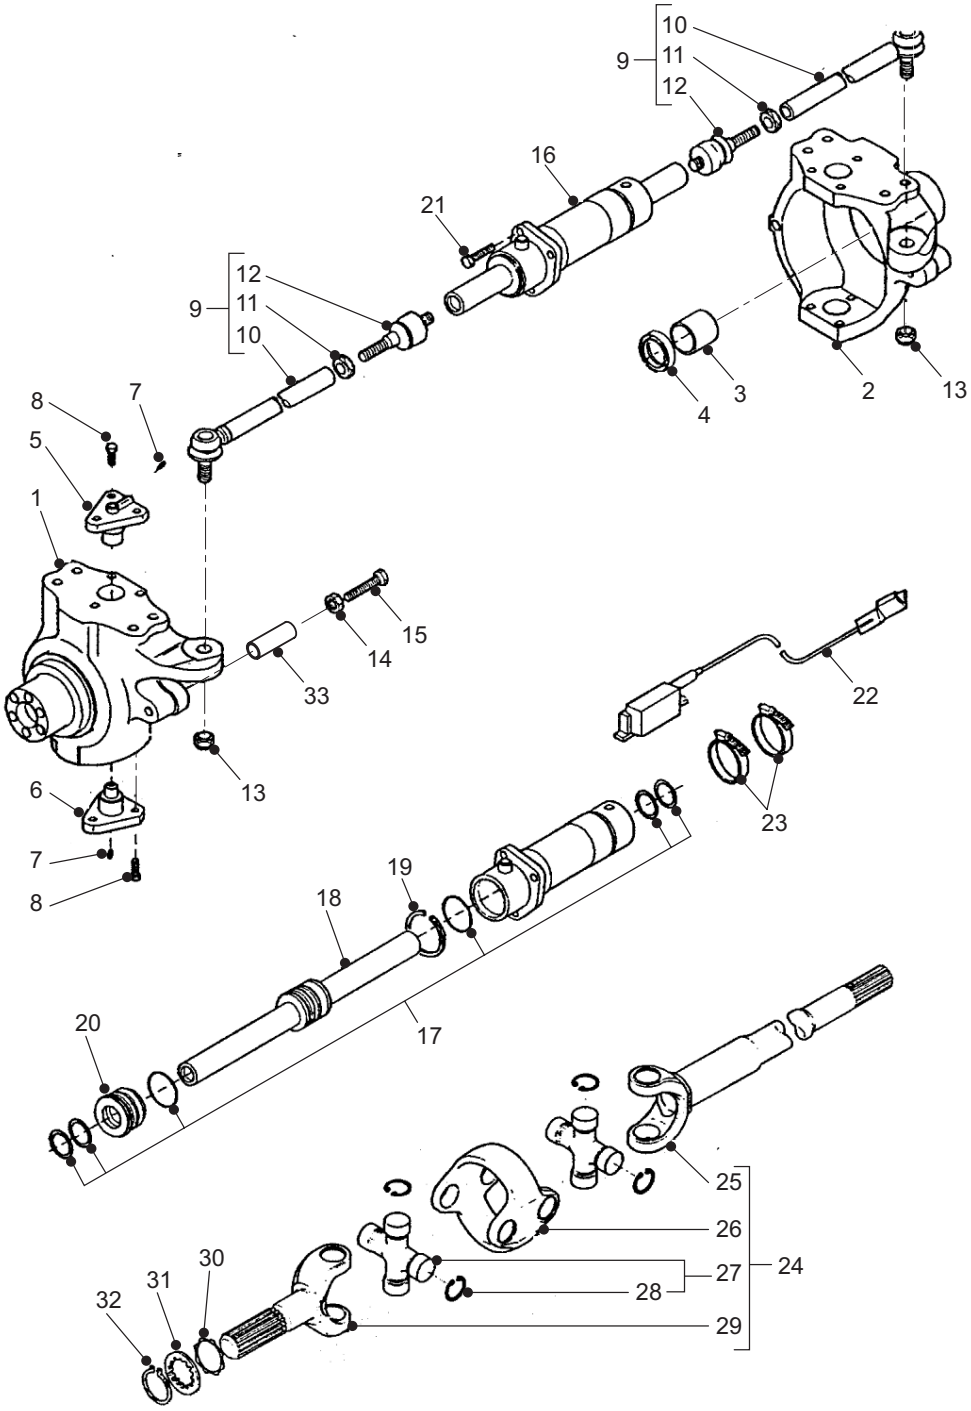

SPC002014


https://www.pdfmanual4trucks.com/

Steering - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
29	93615.3	Stub Axle		3628 11096 & below + 3629 11008 & below	1
	6912912	Stub Axle		3628 11097 & above + 3629 11009 & above	1
30	75734.4	Washer		3628 11096 & below + 3629 11008 & below	2
	6912913	Washer		3628 11097 & above + 3629 11009 & above	2
31	6912903	Washer	Was 75735.1	3628 11096 & below + 3629 11008 & below	2
	75734.4	Washer		3628 11097 & above + 3629 11009 & above	2
32	89918.7	Retaining Ring		3628 11096 & below + 3629 11008 & below	2
	6912914	Retaining Ring		3628 11097 & above + 3629 11009 & above	2
33	6912510	Bushing		3628 11097 & above + 3629 11009 & above	4

https://www.pdfmanual4trucks.com/

Brakes - Front Axle

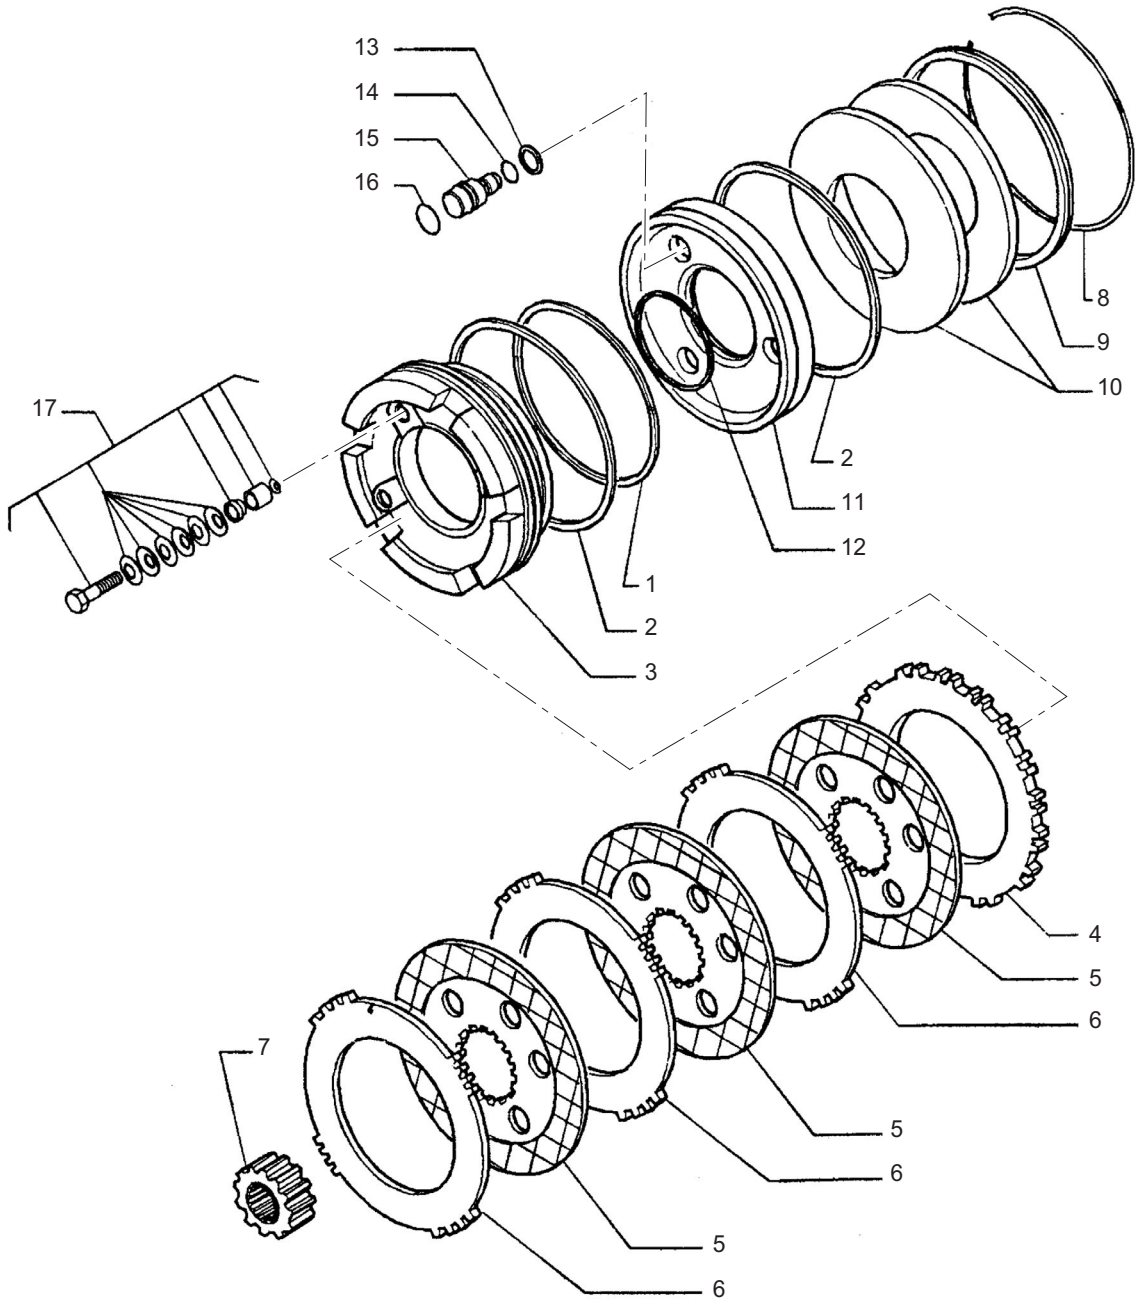

SPC002007


https://www.pdfmanual4trucks.com/

Brakes - Front Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	93088.3	O-ring			2
2	93086.7	O-ring			4
3	89924.5	Flange			2
4	89925.2	Counter Disc			2
5	89926.0	Disc			6
6	89927.8	Counter Disc			6
7	89928.6	Hub			2
8	89929.4	Seal			2
9	89936.9	Hub			2
10	89934.4	Washer			4
11	89937.7	Housing			2
12	93087.5	O-ring			2
13	6912577	Washer	Was 89935.1		6
14	93085.9	O-ring			6
15	6912576	Spindle			6
16	93084.2	O-ring			6
17	89930.2	Screw Assembly			2

https://www.pdfmanual4trucks.com/

Housing - Rear Axle

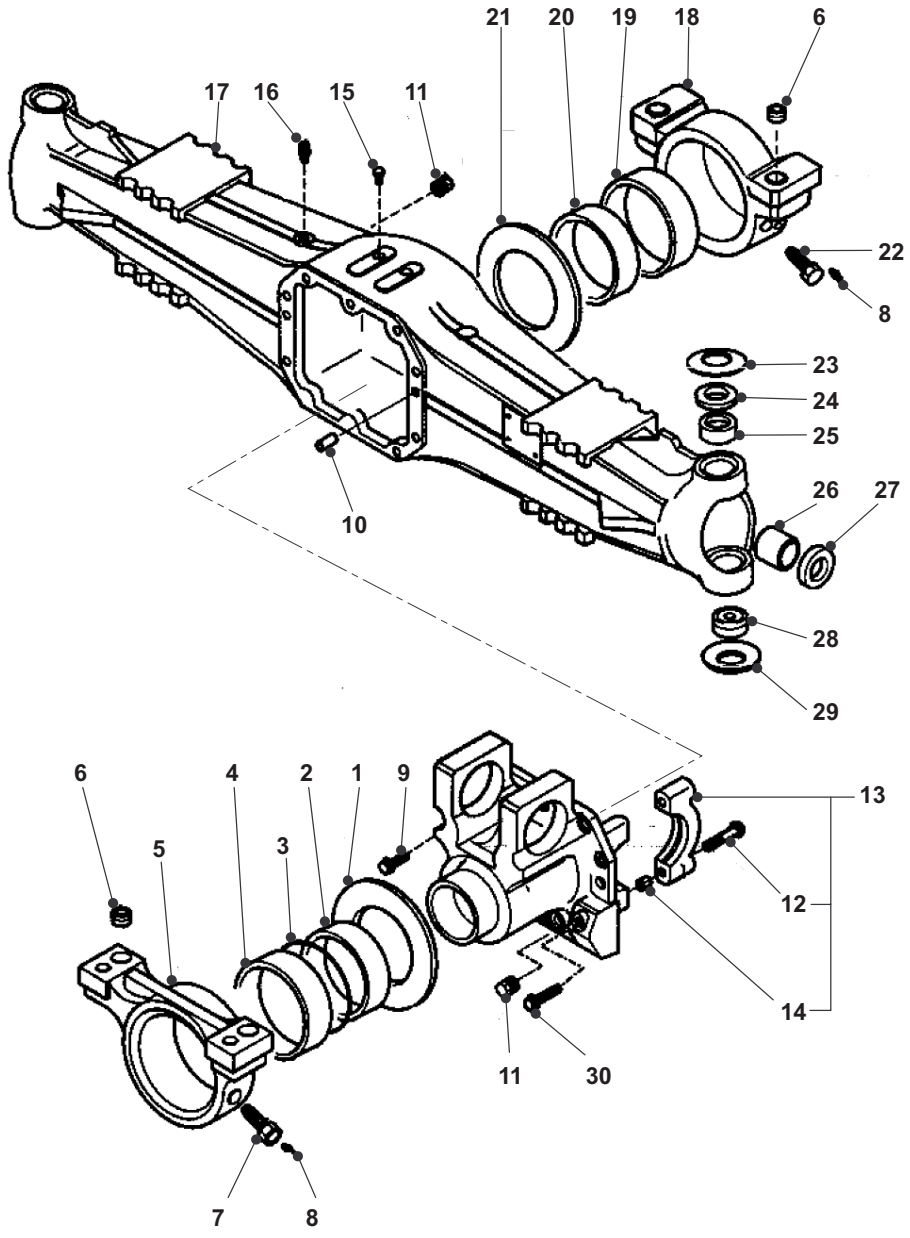

SPC002015


https://www.pdfmanual4trucks.com/

Housing - Rear Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	94670.7	Rear Axle			1
1	75739.3	Washer			1
2	64827.9	Bushing			1
3	64829.5	O-ring			1
4	64828.7	Bushing			1
5	64830.3	Support			1
6	64824.6	Sleeve			4
7	64831.1	Screw			1
8	64823.8	Grease Nipple			2
9	100338-42A	Screw			5
10	100273-25R	Safety Pin			2
11	100374-20P	Plug			2
12	89959.1	Screw			4
13	81544.9	Support			1
14	101288-10B	Bushing			4
15	64842.8	Plug			2
16	100505-24H	Breather			1
17	98662.0	Housing			1
18	75746.8	Support			1
19	75747.6	Bushing			1
20	75748.4	Bushing			1
21	75749.2	Washer			1
22	64822.0	Screw			1
23	66011.8	Washer			2
24	71131.7	Washer			2
25	101288-35D	Bushing			2
26	100288-63N	Washer			2
27	98660.4	Bushing			
28	100400-19P	Bushing			2
29	66010.0	Washer			2
30	89885.8	Screw			5

https://www.pdfmanual4trucks.com/

Differential - Rear Axle

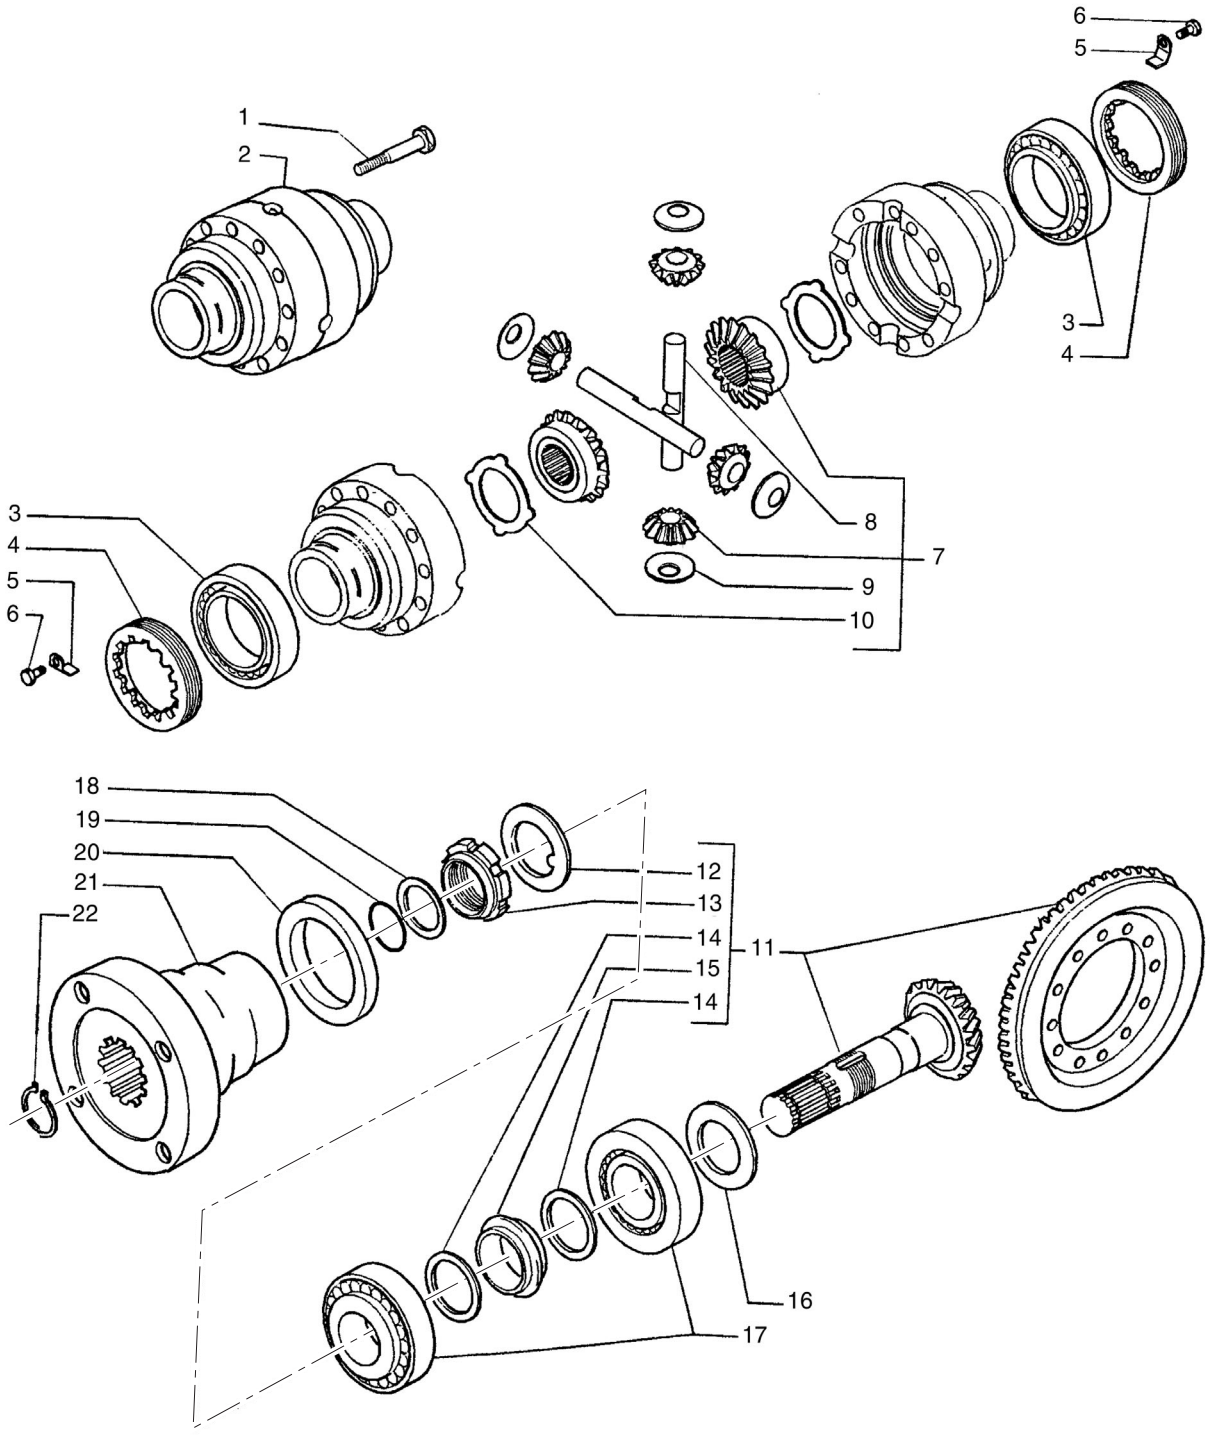

SPC002010


https://www.pdfmanual4trucks.com/

Differential - Rear Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	100338-39W	Screw			12
2	92601.4	Housing			1
3	00909.2	Bearing			2
4	100345-40J	Clamp			2
5	75775.7	Stop Plate			2
6	66048.0	Screw			2
7	71209.1	Differential Assembly	Pos. 7 to 10		1
8	100485-55S	Pin	See 71209.1		2
9	100485-56T	Washer			4
10	75789.8	Washer			2
11	75791.4	Ring Gear	Pos. 11 to 15		1
12	100348-06X	Washer			1
13	100345-37F	Nut			1
14	64851.9	Washer			2
15	101288-39H	Spacer			1
16	75779.9	Shim 2.50mm	Thickness: 2.50 mm		2
	75780.7	Shim 2.60mm	Thickness: 2.60 mm		2
	75781.5	Shim 2.70mm	Thickness: 2.70 mm		2
	75782.3	Shim 2.80mm	Thickness: 2.80 mm		2
	75783.1	Shim 2.90mm	Thickness: 2.90 mm		2
	75784.9	Shim 3.00mm	Thickness: 3.00 mm		2
	75785.6	Shim 3.10mm	Thickness: 3.10 mm		2
	75786.4	Shim 3.20mm	Thickness: 3.20 mm		2
	75787.2	Shim 3.30mm	Thickness: 3.30 mm		2
	75788.0	Shim 3.40mm	Thickness: 3.40 mm		2
17	07187.8	Bearing			2
18	75802.9	Washer			1
19	75728.6	Clamp			1
20	97410.5	Seal			1
21	75806.0	Bracket			1
22	75805.2	Clip			1

https://www.pdfmanual4trucks.com/

Steering - Rear Axle

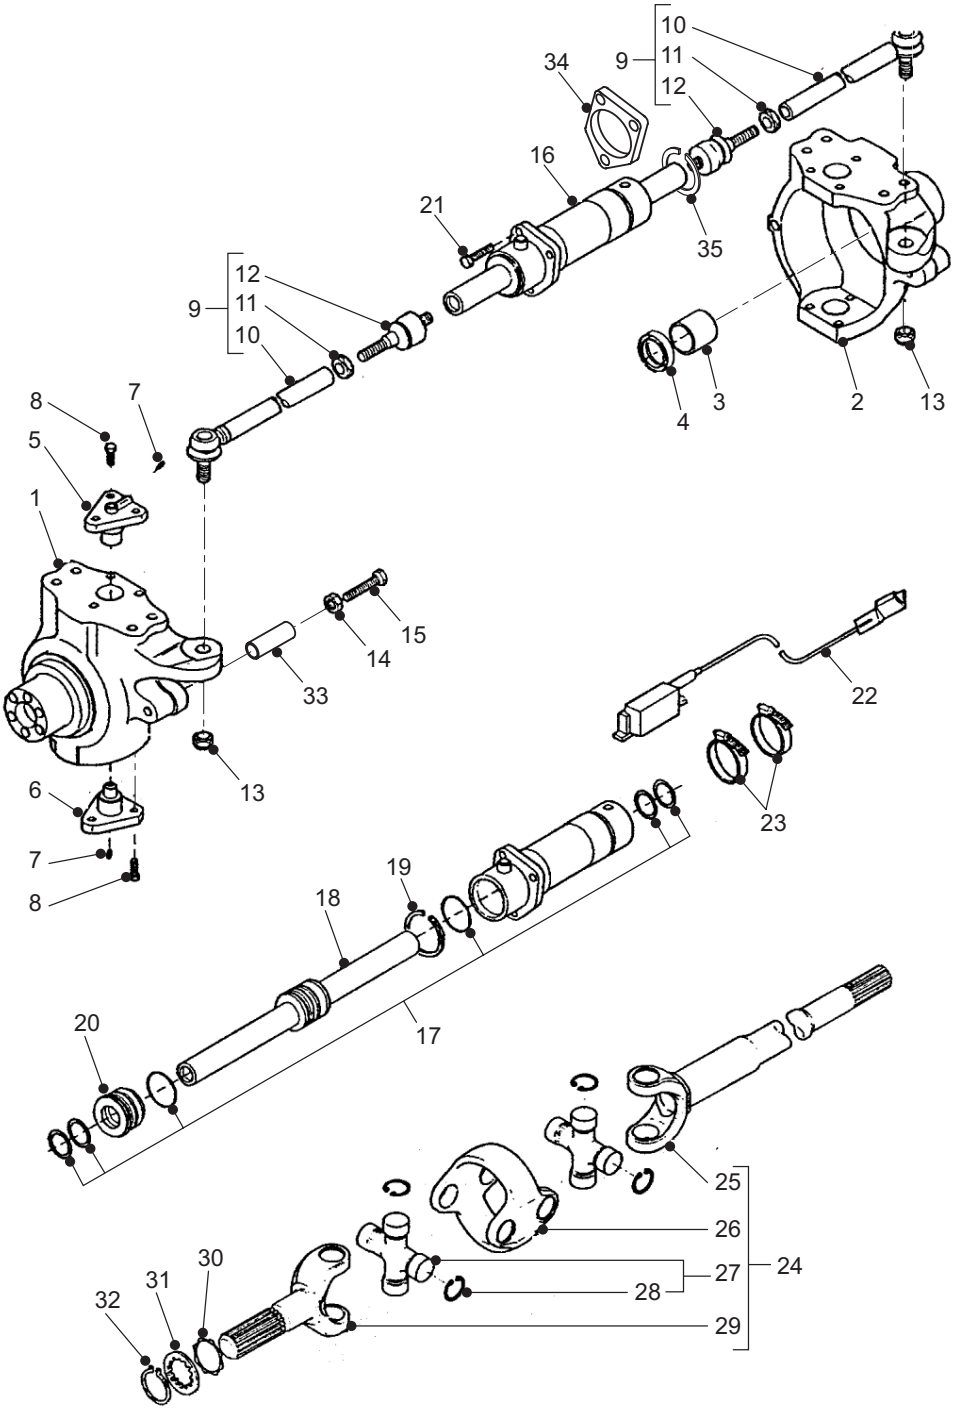

SPC002016

https://www.pdfmanual4trucks.com/


Steering - Rear Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	98669.5	Pivot			1
2	98668.7	Pivot			1
3	75296.4	Bushing			2
4	98645.5	Seal			2
5	66013.4	Pin			2
6	66014.2	Pin			2
7	006458-01H	Grease Nipple			4
8	64833.7	Screw			12
9	75723.7	Tie Rod Assembly			2
10	75722.9	Tie Rod End			2
11	66044.9	Nut			2
12	63225.7	Connecting Rod			2
13	63252.1	Nut			2
14	81514.2	Nut			4
15	75297.2	Screw			4
16	75758.3	Steering Cylinder			1
17	75762.5	Seal Kit			1
18	81515.9	Rod			1
19	6912587	Rubber band	Was 89920.3		1
20	75726.0	Cylinder head			1
22	75760.9	Detector			1
23	75728.6	Clamp			2
24	92604.8	Universal Drive Assembly			2
25	93619.5	Long Axle Shaft			1
26	93616.1	Housing			1
27	93618.7	U-joint			2
28	93617.9	Clip			8
29	93615.3	Stub Axle			1
30	75734.4	Washer			2
31	6912903	Washer	Was 75735.1		2
32	89918.7	Retaining Ring			2

https://www.pdfmanual4trucks.com/

Steering - Rear Axle

Recurrence of previous drawing

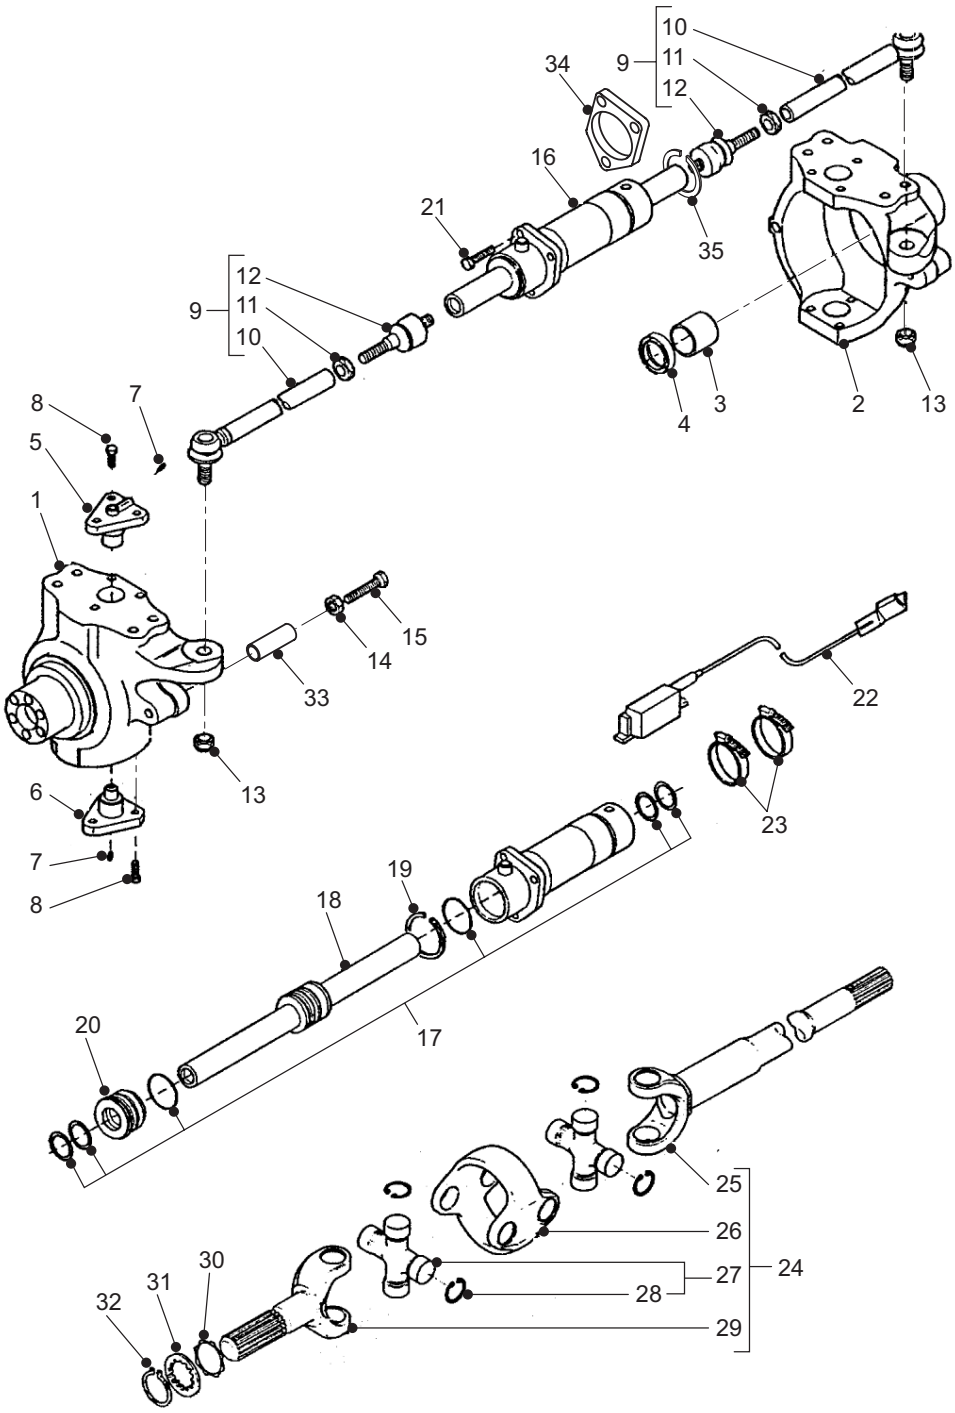

SPC002016


https://www.pdfmanual4trucks.com/

Steering - Rear Axle

Item	Part Number	Denomination	Remarks	Serial Number	Qty
34	81549.8	Bracket			1
35	6912932	Snap ring			1

https://www.pdfmanual4trucks.com/

Boom Hydraulic Installation

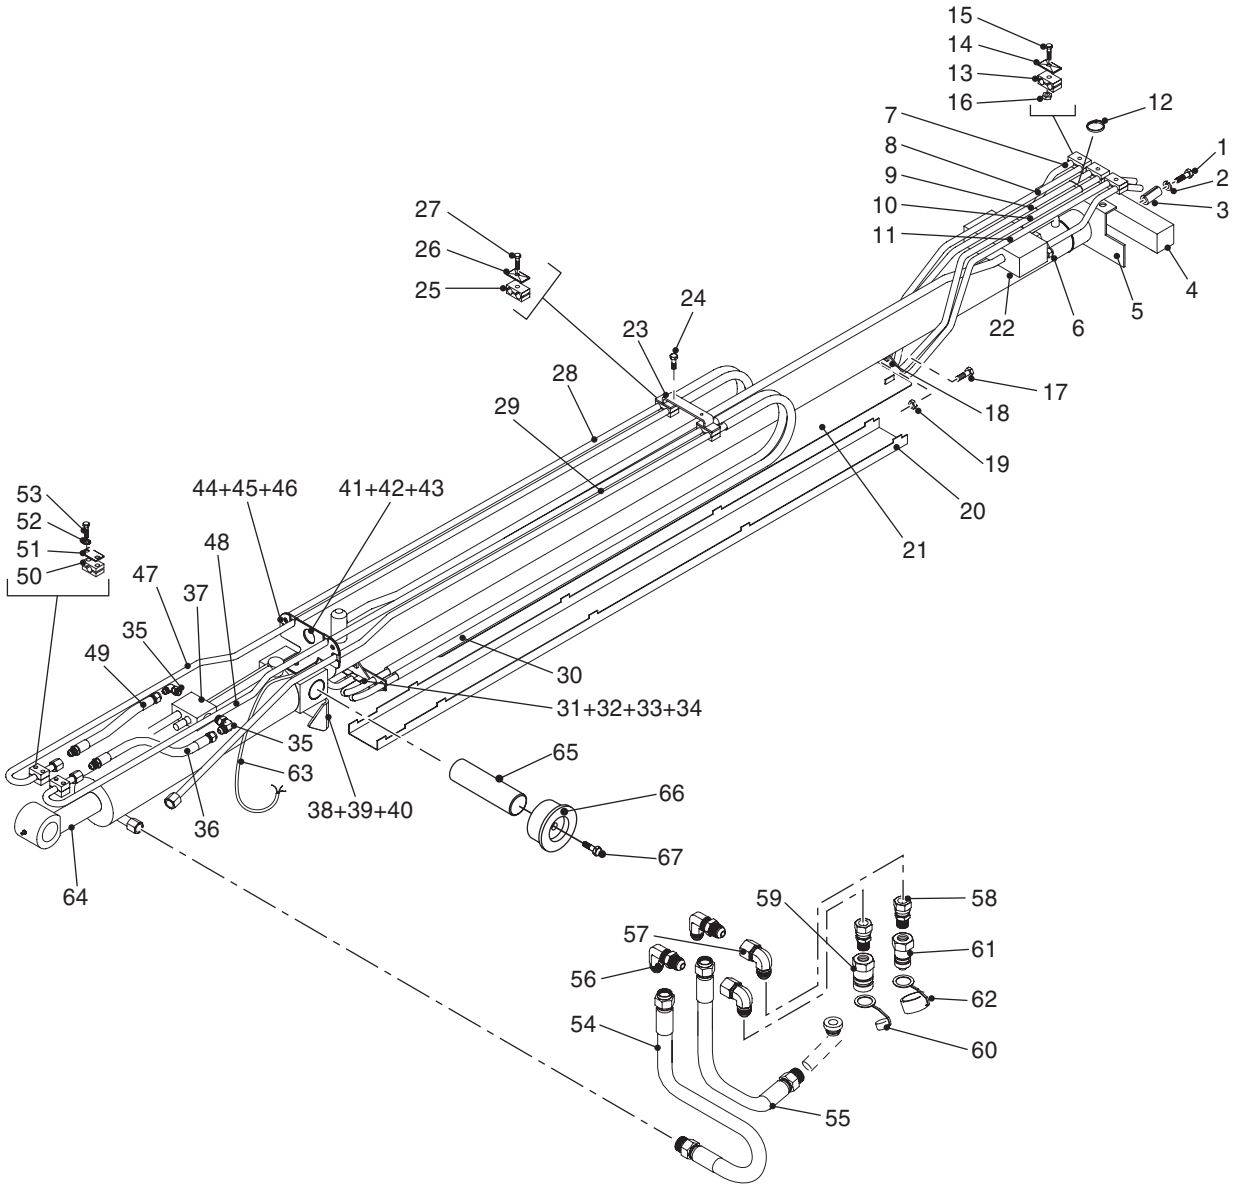

SPC003038

https://www.pdfmanual4trucks.com/


Boom Hydraulic Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	77492.7	Screw			1
2	89518.5	Washer			1
3	100357-03X	Pin			1
4	77798.7	Support			1
5	88523.8	Support			1
6	014375-30H	Adapter			2
7	77792.0	Hydraulic pipe			2
8	77386.1	Tube			1
9	77387.9	Tube			1
10	77388.7	Tube			1
11	77389.5	Tube			1
12	01275.7	Clamp			11
13	55932.8	Clamp			3
14	54215.9	Plate			3
15	01508.1	Screw			3
16	51851.4	Nut			3
17	01604.8	Screw			1
18	77791.2	Spacer			1
19	100345-09A	Nut			1
20	77396.0	Support			1
21	77652.6	Panel			1
22	6912582	Telescope cyl assy	For details, see page 131		1
	6913007	Telescope cyl assy	For details, see page 133		1
23	89390.9	Bracket			1
24	01595.8	Screw			2
25	55932.8	Clamp			2
26	54215.9	Plate			2
27	01578.4	Screw			2
28	77777.1	Hose			1
29	77778.9	Hose			1
30	77397.8	Hose			4

https://www.pdfmanual4trucks.com/

Boom Hydraulic Installation

Recurrence of previous drawing

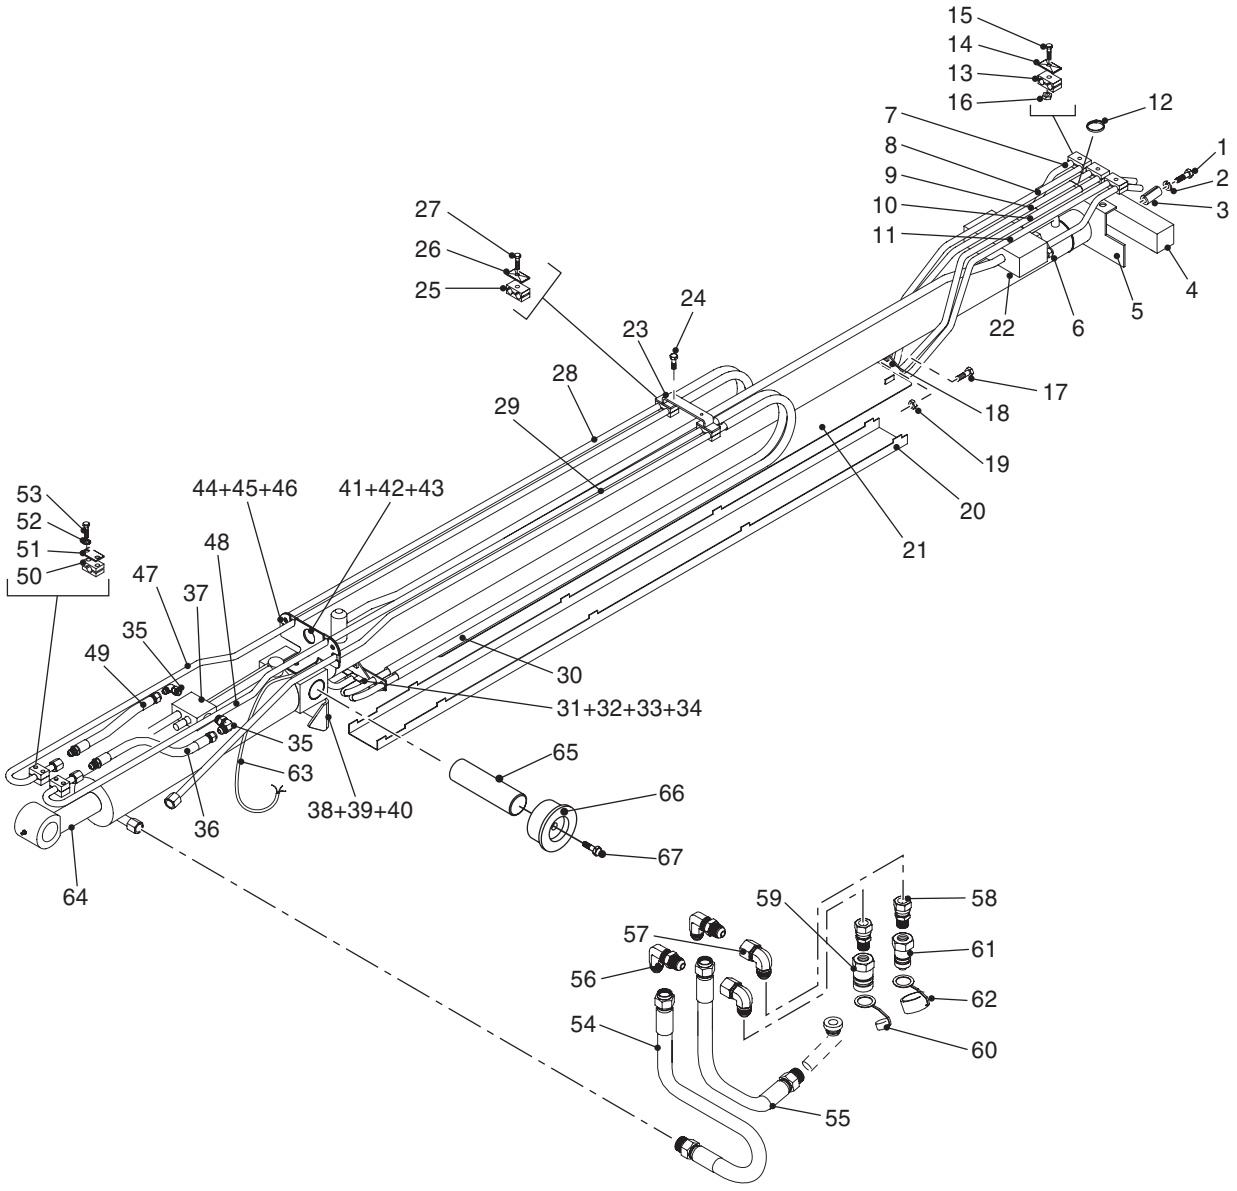

SPC003038

https://www.pdfmanual4trucks.com/


Boom Hydraulic Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
31	77655.9	Pin			1
32	77402.6	Support			1
33	01604.8	Screw			1
34	100345-09A	Nut			1
35	65285.9	Elbow			2
36	94414.0	Hose			1
38	77794.6	Support			1
39	89516.9	Washer			1
40	01604.8	Screw			1
41	77784.7	Support			1
42	89516.9	Washer			1
43	01604.8	Screw			1
44	77394.5	Bracket			2
45	32090.3	Screw			2
46	100345-09A	Nut			2
47	90180.1	Tube			1
48	90179.3	Tube			1
49	80407.0	Hose			1
50	61358.8	Collar			2
51	61357.0	Welding plate			2
52	01717.8	Washer			4
53	001338-08T	Screw			4
54	76367.2	Hose			1
55	77398.6	Hose			1
56	010370-57L	Elbow			2
57	010370-90W	Elbow			2
58	022375-06W	Adapter			2
59	95993.2	Female Coupling			1
60	96514.5	Cap			1
61	95994.0	Male coupling			1
62	96513.7	Cap			1

https://www.pdfmanual4trucks.com/

Boom Hydraulic Installation

Recurrence of previous drawing

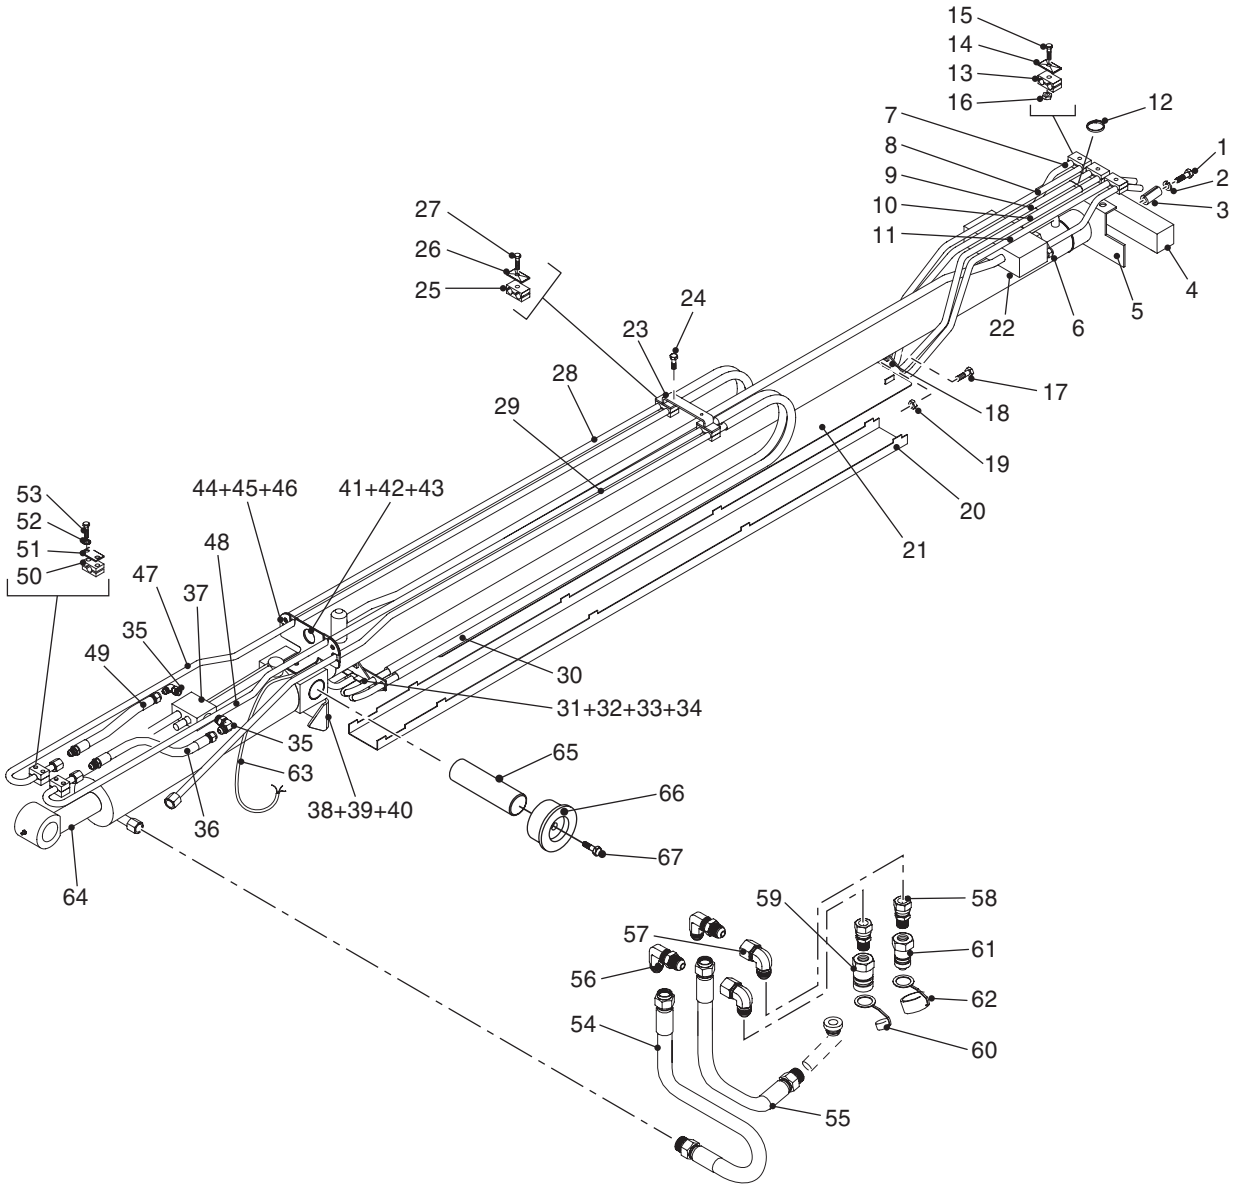

SPC003038


https://www.pdfmanual4trucks.com/

Boom Hydraulic Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
63	96474.2	Wiring			1
64	90788.1	Tilt Cylinder Assembly	For details, see page 135		1
65	84627.9	Pivot pin			1
66	84626.1	Plug			2
67	84630.3	Screw			2

https://www.pdfmanual4trucks.com/

Boom Hydraulic Supply

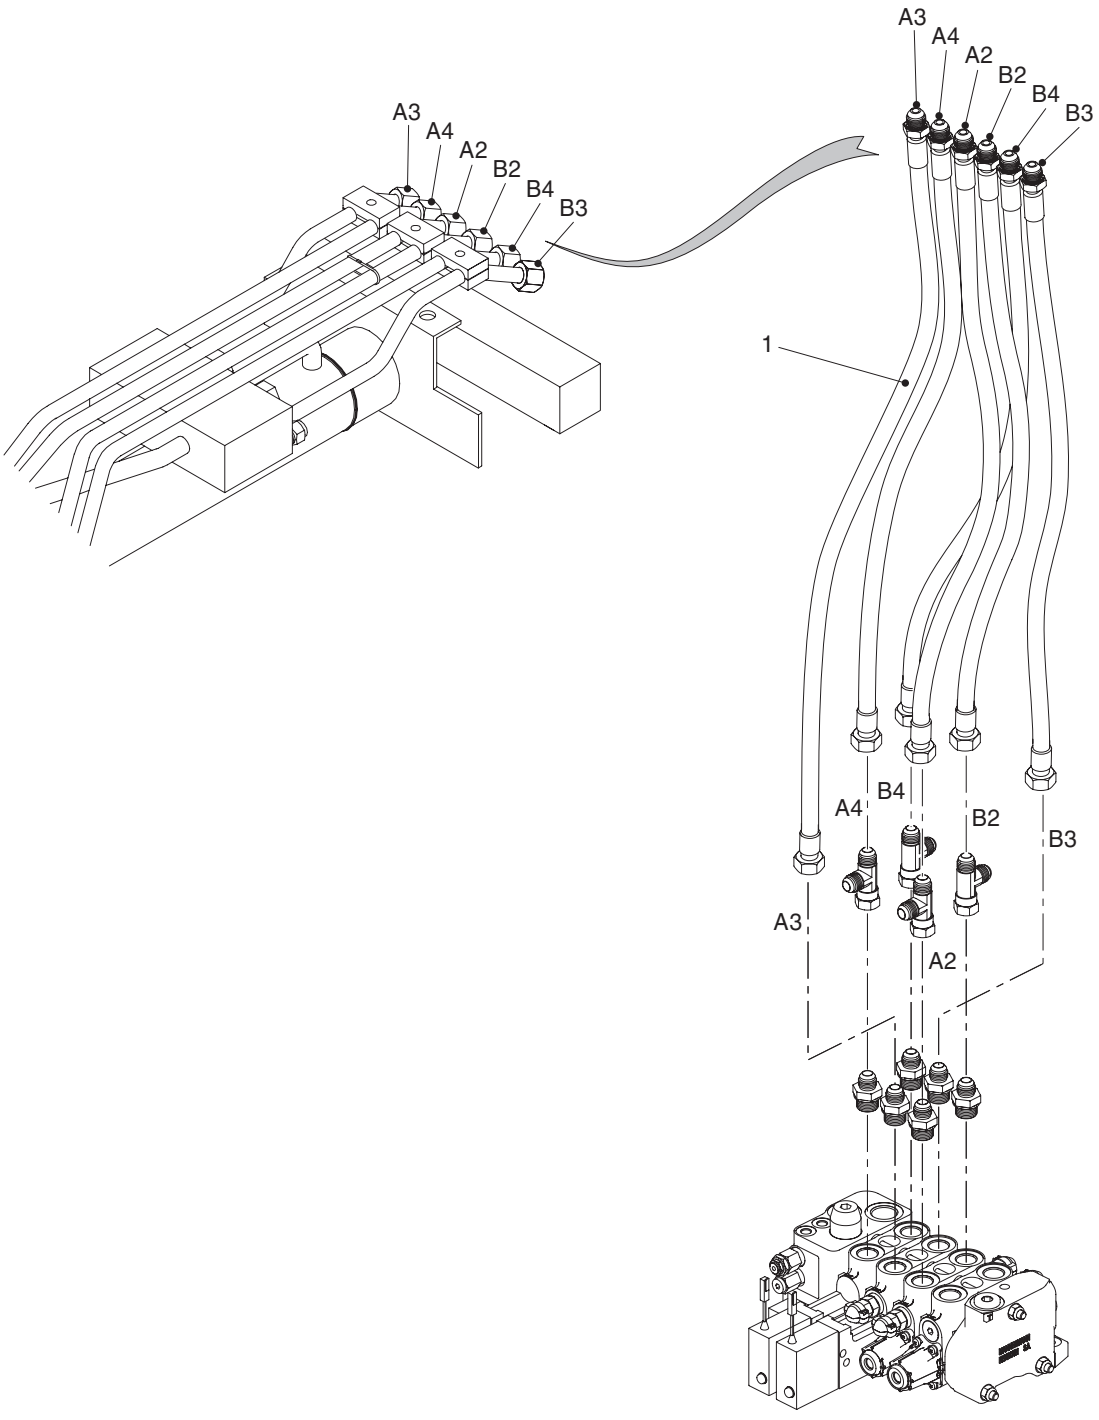

SPC003039


https://www.pdfmanual4trucks.com/

Boom Hydraulic Supply

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6909254	Hose			6

https://www.pdfmanual4trucks.com/

Lift & Compensation Cylinder Installation

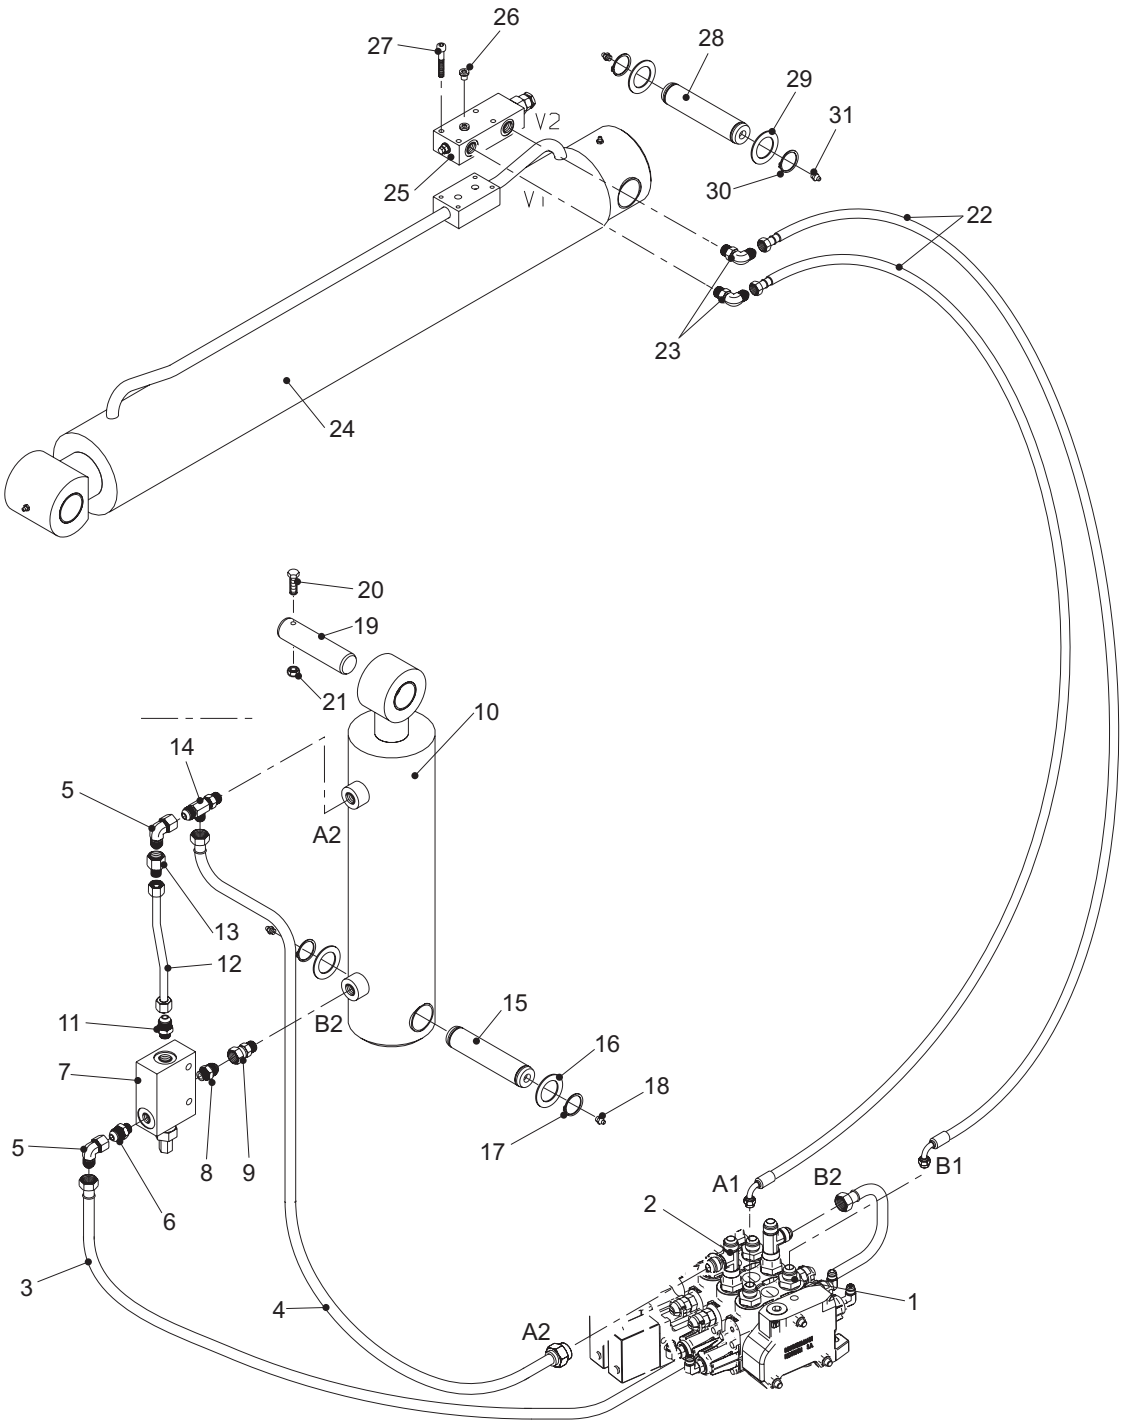

SPC003040


https://www.pdfmanual4trucks.com/

Lift & Compensation Cylinder Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	014375-02C	Union			4
2	008372-28F	T- union			2
3	83933.2	Hose			1
4	6909253	Hose			1
5	010370-90W	Elbow			2
6	100375-39T	Union			1
7	98235.5	Valve			1
8	100375-39T	Union			1
9	022375-06W	Adapter			1
10	90798.0	Compensation cyl assy	For details, see page 129		1
11	65614.0	Union			1
12	98275.1	Hydraulic Pipe			1
13	65641.3	Adapter			1
14	100372-08J	T- union			1
15	6910300	Pivot pin			1
16	009456-02D	Washer			2
17	31825.3	Clip			2
18	01775.6	Grease Nipple			2
19	77425.7	Locating Pin			1
20	65397.2	Screw			1
21	100345-09A	Nut			1
22	96788.5	Hose Assembly			2
23	65285.9	Elbow			2
24	90774.1	Lift Cylinder Assembly	For details, see page 127		1
25	6909363	Valve, lift cylinder			1
26	56028.4	Plug			1
27	88299.3	Screw			4
28	6910301	Pivot pin			1
29	009456-02D	Washer			2
30	31825.3	Clip			2
31	01775.6	Grease Nipple			2

https://www.pdfmanual4trucks.com/

Steering Hoses & Fittings (without damper)

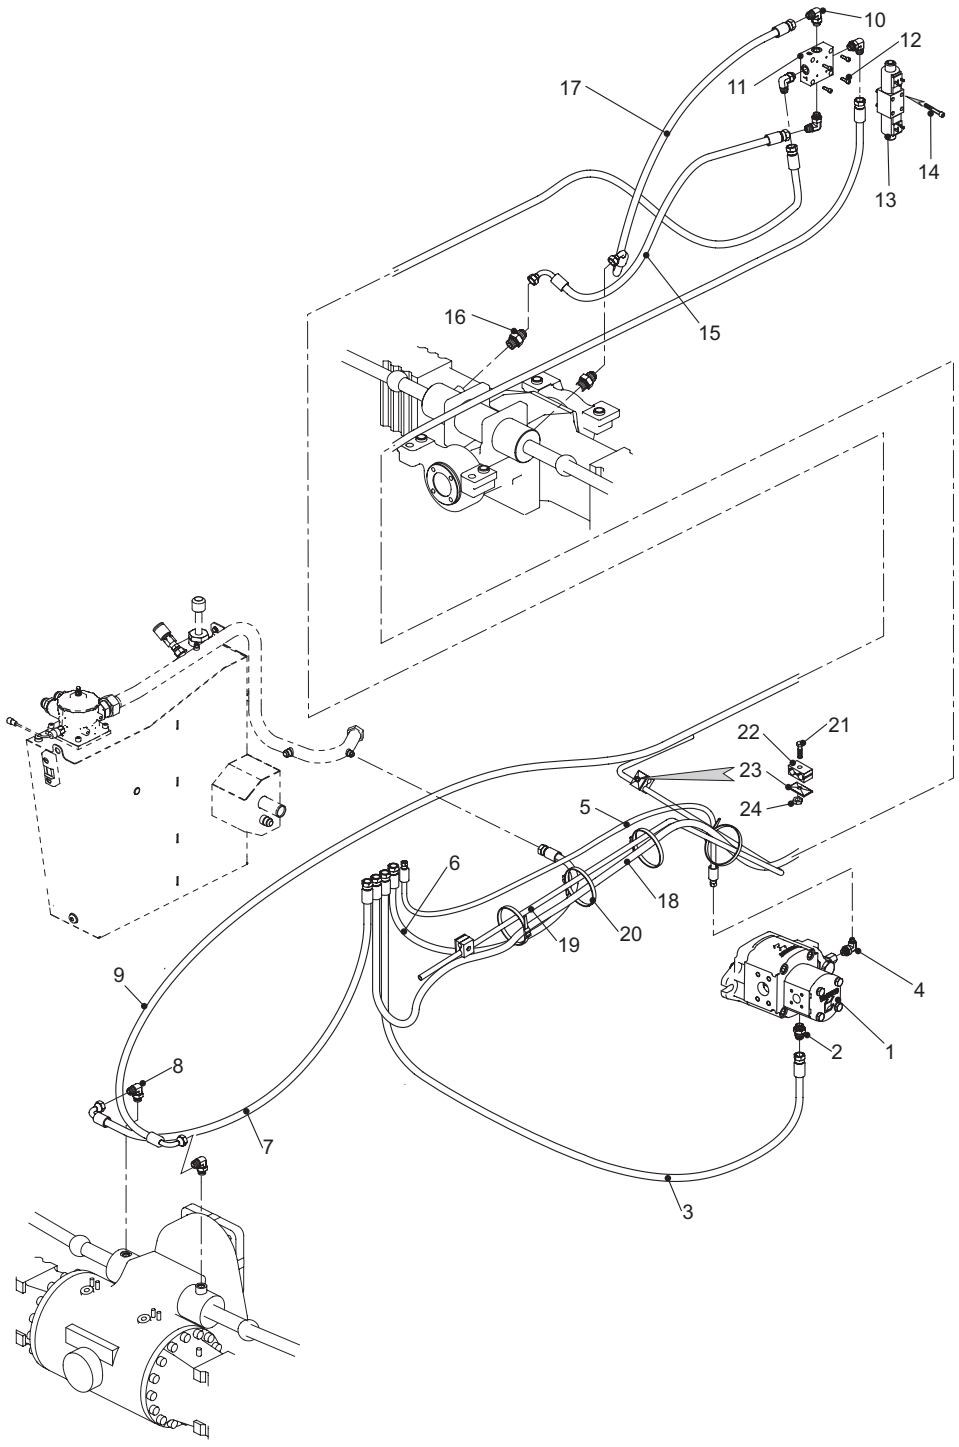

SPC003079


https://www.pdfmanual4trucks.com/

Steering Hoses & Fittings (without damper)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6909447	Hydraulic pump			1
2	100375-38S	Adapter			1
3	101319-27P	Hose			1
4	015370-11P	Elbow			1
5	79148.3	Hose			1
6	79147.5	Hose			1
7	96763.8	Hose			1
8	96333.0	Elbow			2
9	6910836	Hose			1
10	010370-94B	Elbow			4
11	98348.6	Support			1
12	10167.5	Screw			4
13	98349.4	Steering selector valve	Pos. 13 + 14		1
14	79160.8	Screw			4
15	6913653	Hose	Was 69211.1		1
16	89503.7	Adapter			2
17	74467.2	Hose			1
18	96761.2	Hose			1
19	96664.8	Hydraulic Pipe			1
20	001369-22D	Collar			4
21	48829.6	Screw			2
22	100369-18T	Split Clamp			4
23	100212-53R	Plate			2
24	100345-06W	Nut			2

https://www.pdfmanual4trucks.com/

Steering Hoses & Fittings (with damper)

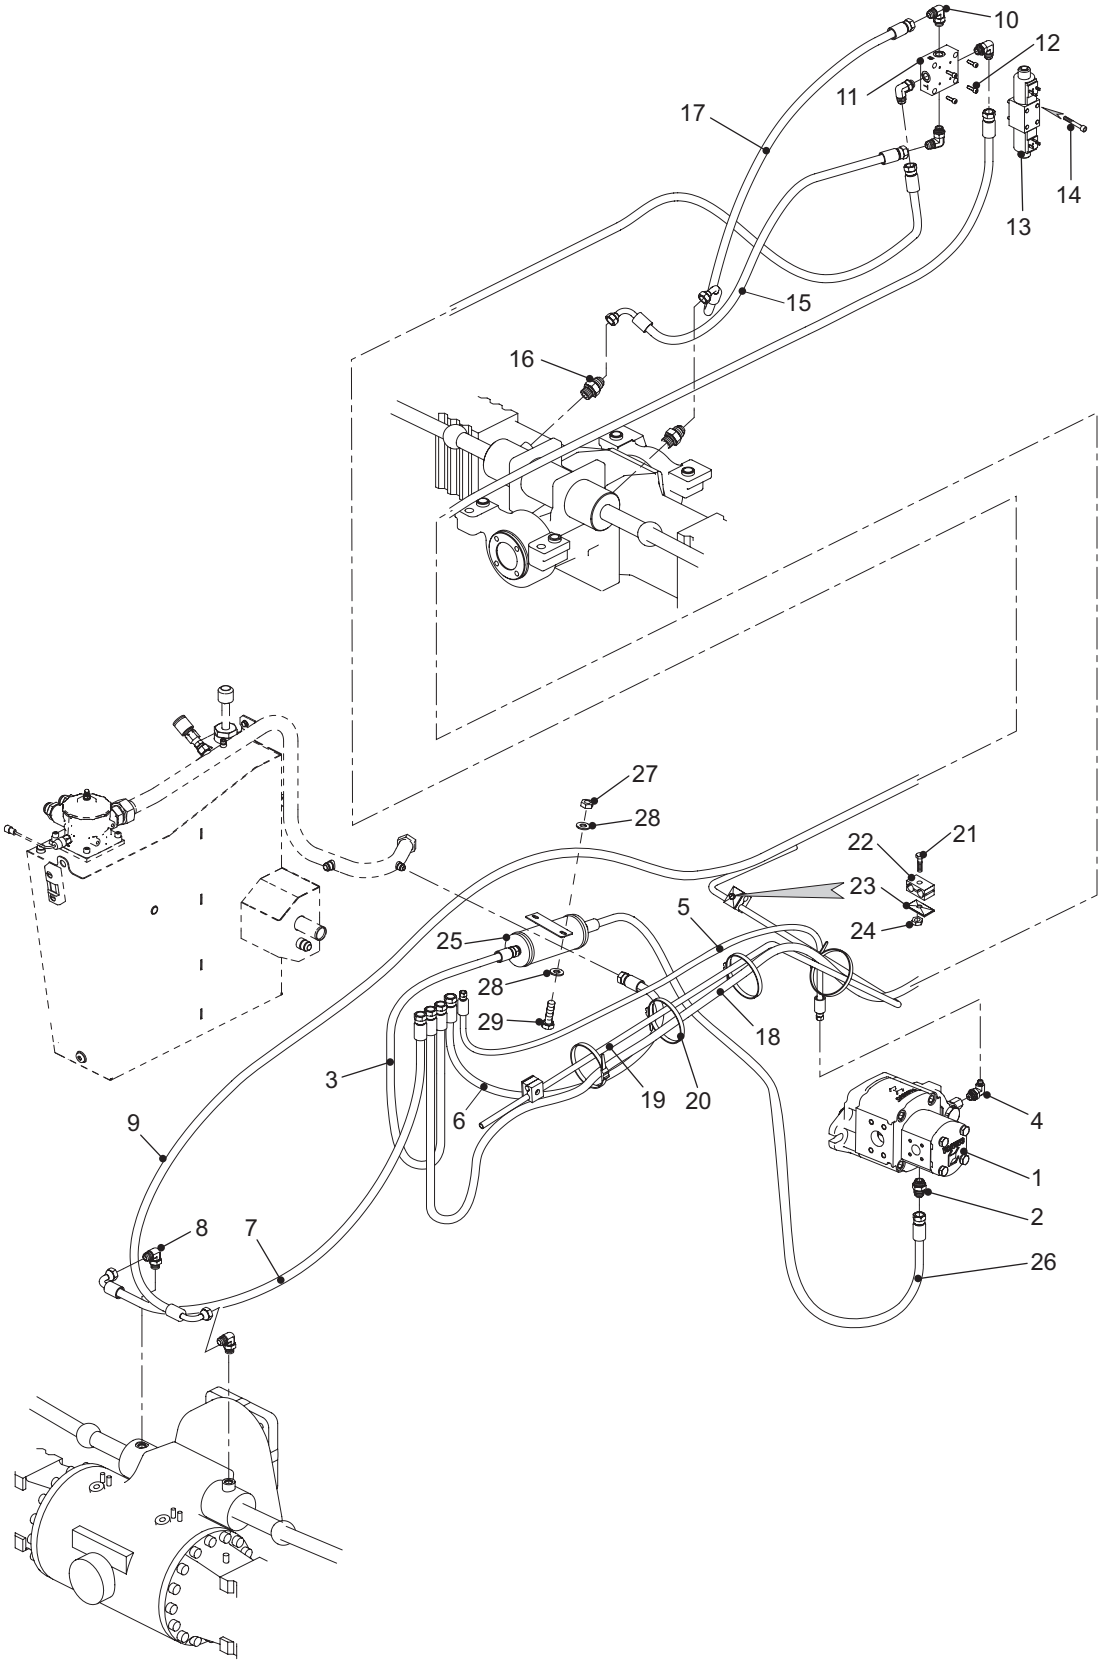


https://www.pdfmanual4trucks.com/

Steering Hoses & Fittings (with damper)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6909447	Hydraulic pump			1
2	100375-38S	Adapter			1
3	79147.5	Hose			1
4	015370-11P	Elbow			1
5	79148.3	Hose			1
6	79147.5	Hose			1
7	96763.8	Hose			1
8	96333.0	Elbow			2
9	6910836	Hose			1
10	010370-94B	Elbow			4
11	98348.6	Support			1
12	10167.5	Screw			4
13	98349.4	Steering selector valve	Pos. 13 + 14		1
14	79160.8	Screw			4
15	6913653	Hose	Was 69211.1		1
16	89503.7	Adapter			2
17	74467.2	Hose			1
18	96761.2	Hose			1
19	96664.8	Hydraulic Pipe			1
20	001369-22D	Collar			4
21	48829.6	Screw			2
22	100369-18T	Split Clamp			4
23	100212-53R	Plate			2
24	100345-06W	Nut			2
25	6914316	Damper			1
26	74467.2	Hose			1
27	51851.4	Nut			2
28	01697.2	Washer			4
29	01597.4	Screw			2

https://www.pdfmanual4trucks.com/

Steering Hydraulics Cab

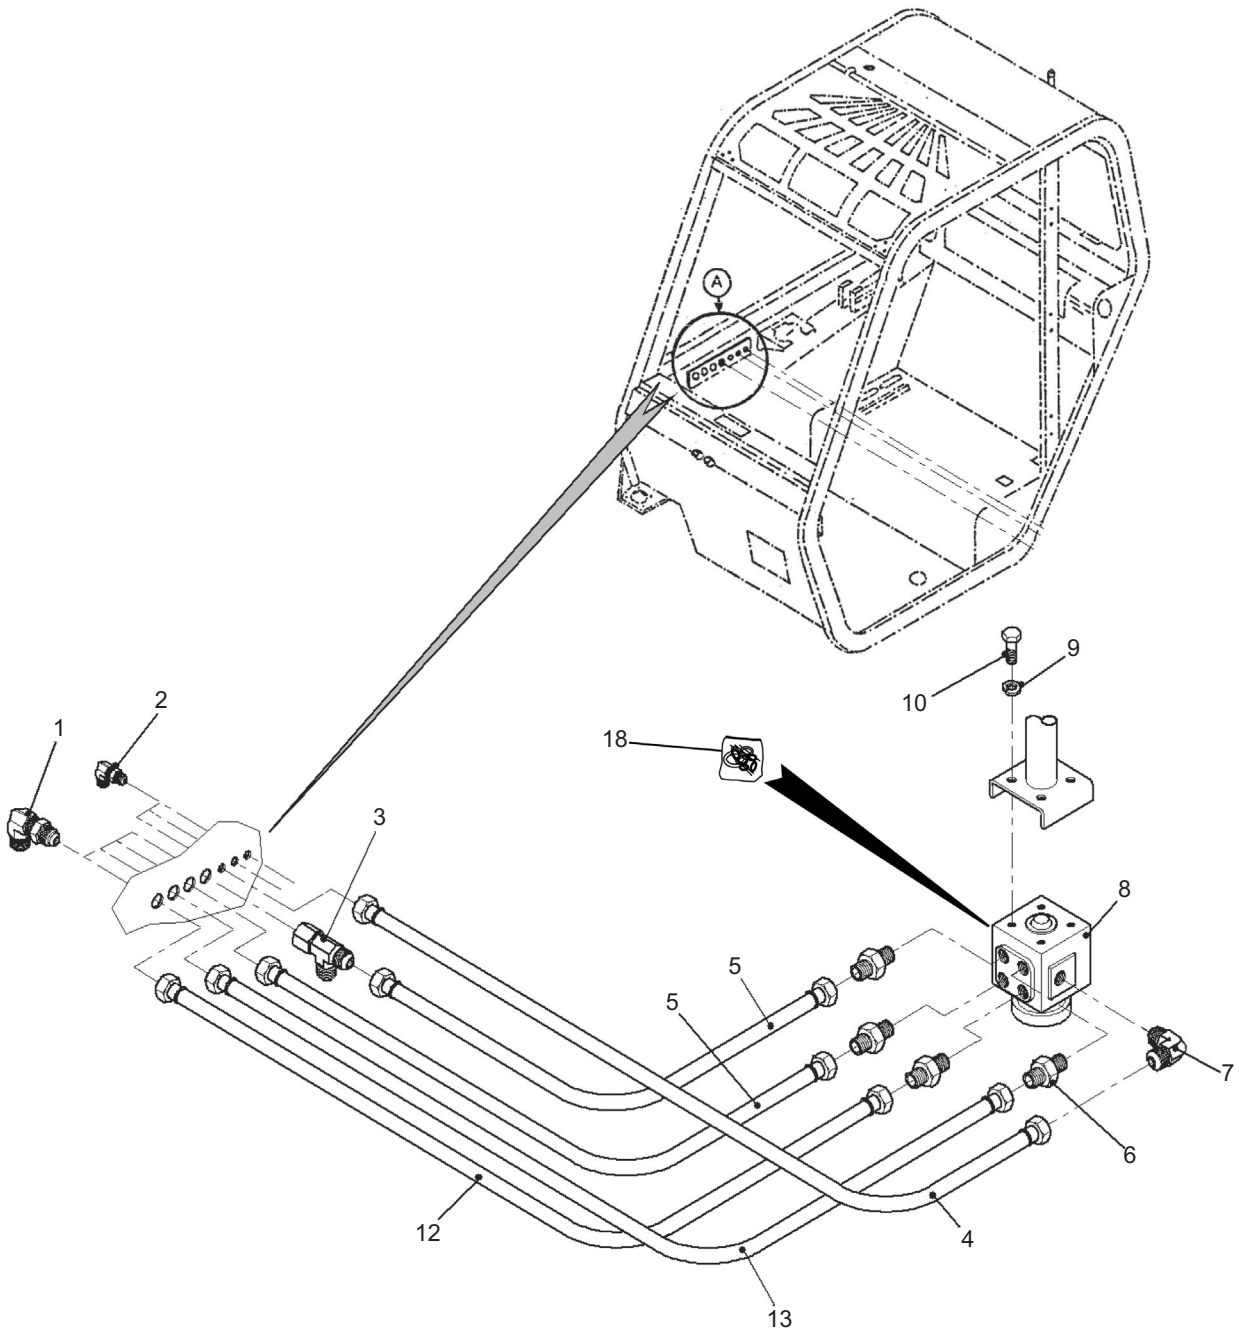


https://www.pdfmanual4trucks.com/

Steering Hydraulics Cab

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	010370-87T	Elbow			4
2	67196.6	Elbow			2
3	008372-02C	T- union			1
4	6910201	Hose			1
5	6915574	Hose	Was 6910200		2
6	6909839	Adapter			4
7	6909852	Elbow			1
8	79618.5	Steering valve (Orbitrol)			1
9	01720.2	Washer			4
10	01604.8	Screw			4
11	97271.1	Seal Kit			1
12	6915575	Hose	Was 6910200		1
13	6915576	Hose	Was 6910200		1

https://www.pdfmanual4trucks.com/

Joystick Installation (without AMA)

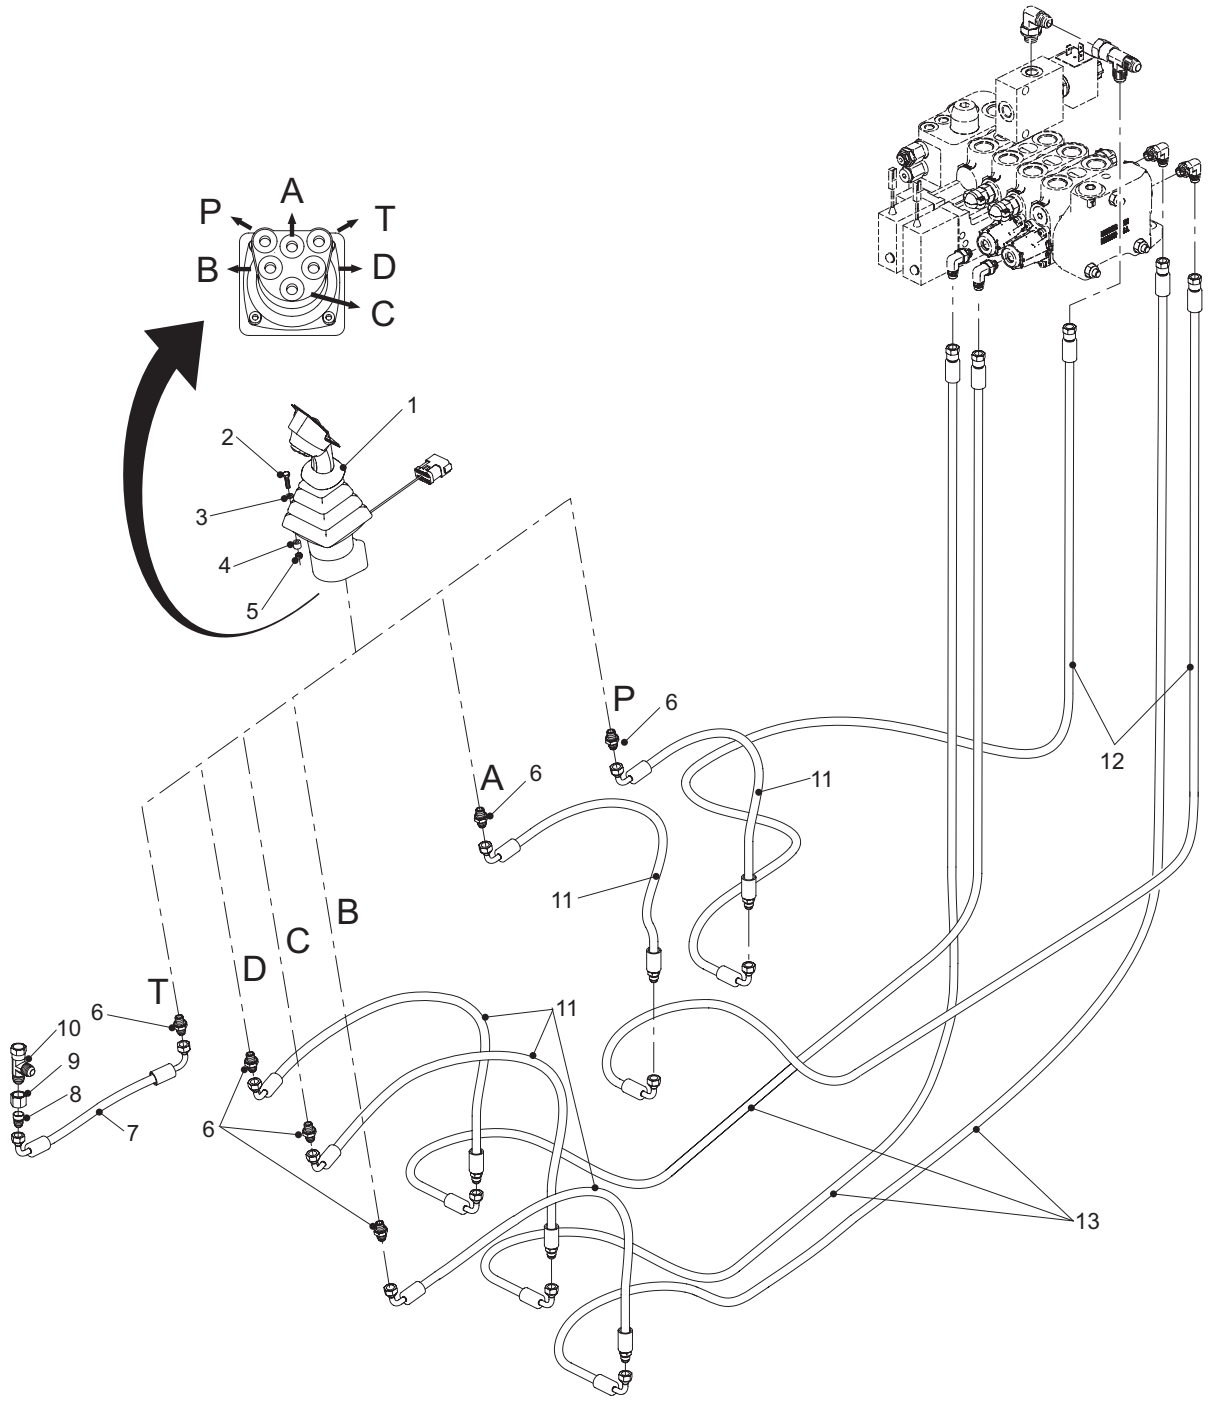

SPC003044


https://www.pdfmanual4trucks.com/

Joystick Installation (without AMA)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6910314	Joystick	For details, see page 193		1
2	01593.3	Screw			4
3	01696.4	Washer			4
4	6910953	Spacer	Was 98473.2 ; For details, see page 279		4
5	01666.7	Nut			4
6	022375-31Z	Adapter			6
7	6908594	Hose			1
8	100375-06H	Adaptor			1
9	014345-12C	Nut			1
10	008372-02C	T- union			1
11	6908672	Hose	For details, see page 283		5
12	6912494	Hose	For details, see page 287		2
13	6912494	Hose			3

https://www.pdfmanual4trucks.com/

Joystick Installation (with AMA)

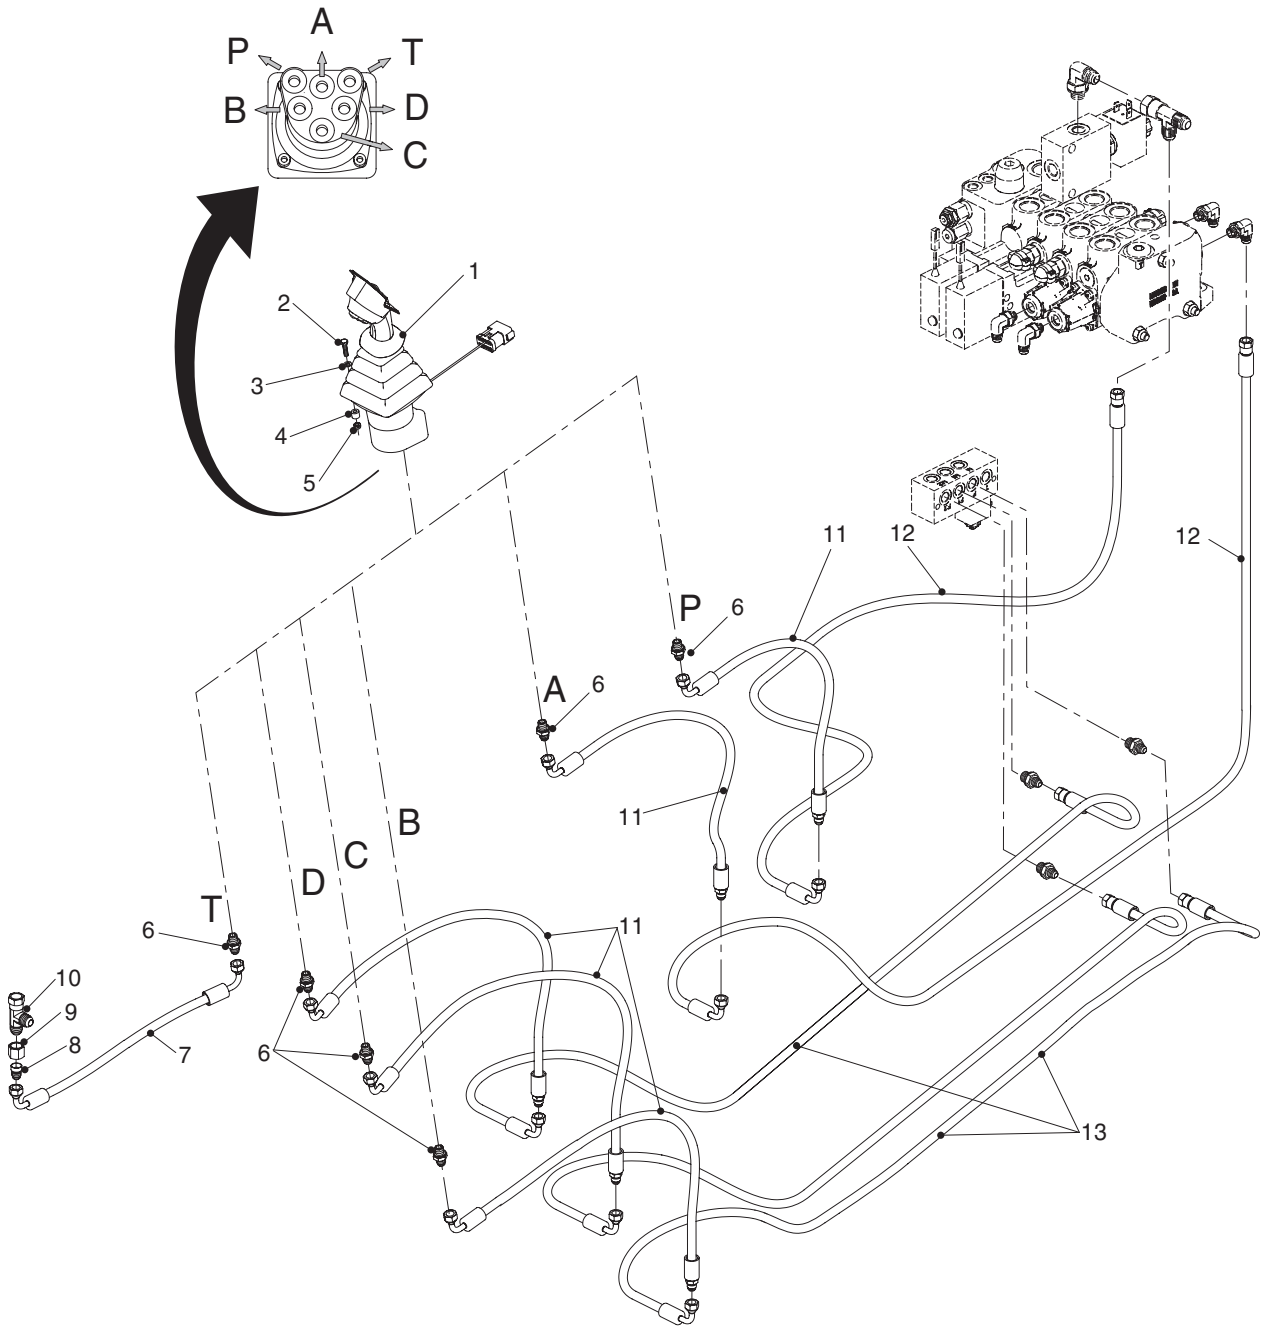

SPC003045


https://www.pdfmanual4trucks.com/

Joystick Installation (with AMA)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6910314	Joystick	For details, see page 193		1
2	01593.3	Screw			4
3	01696.4	Washer			4
4	6910953	Spacer	Was 98473.2		4
5	01666.7	Nut			4
6	022375-31Z	Adapter			6
7	6908594	Hose			1
8	100375-06H	Adaptor			1
9	014345-12C	Nut			1
10	008372-02C	T- union			1
11	6908672	Hose			5
12	6912494	Hose			2
13	6912493	Hose			3

https://www.pdfmanual4trucks.com/

AMA - Installation

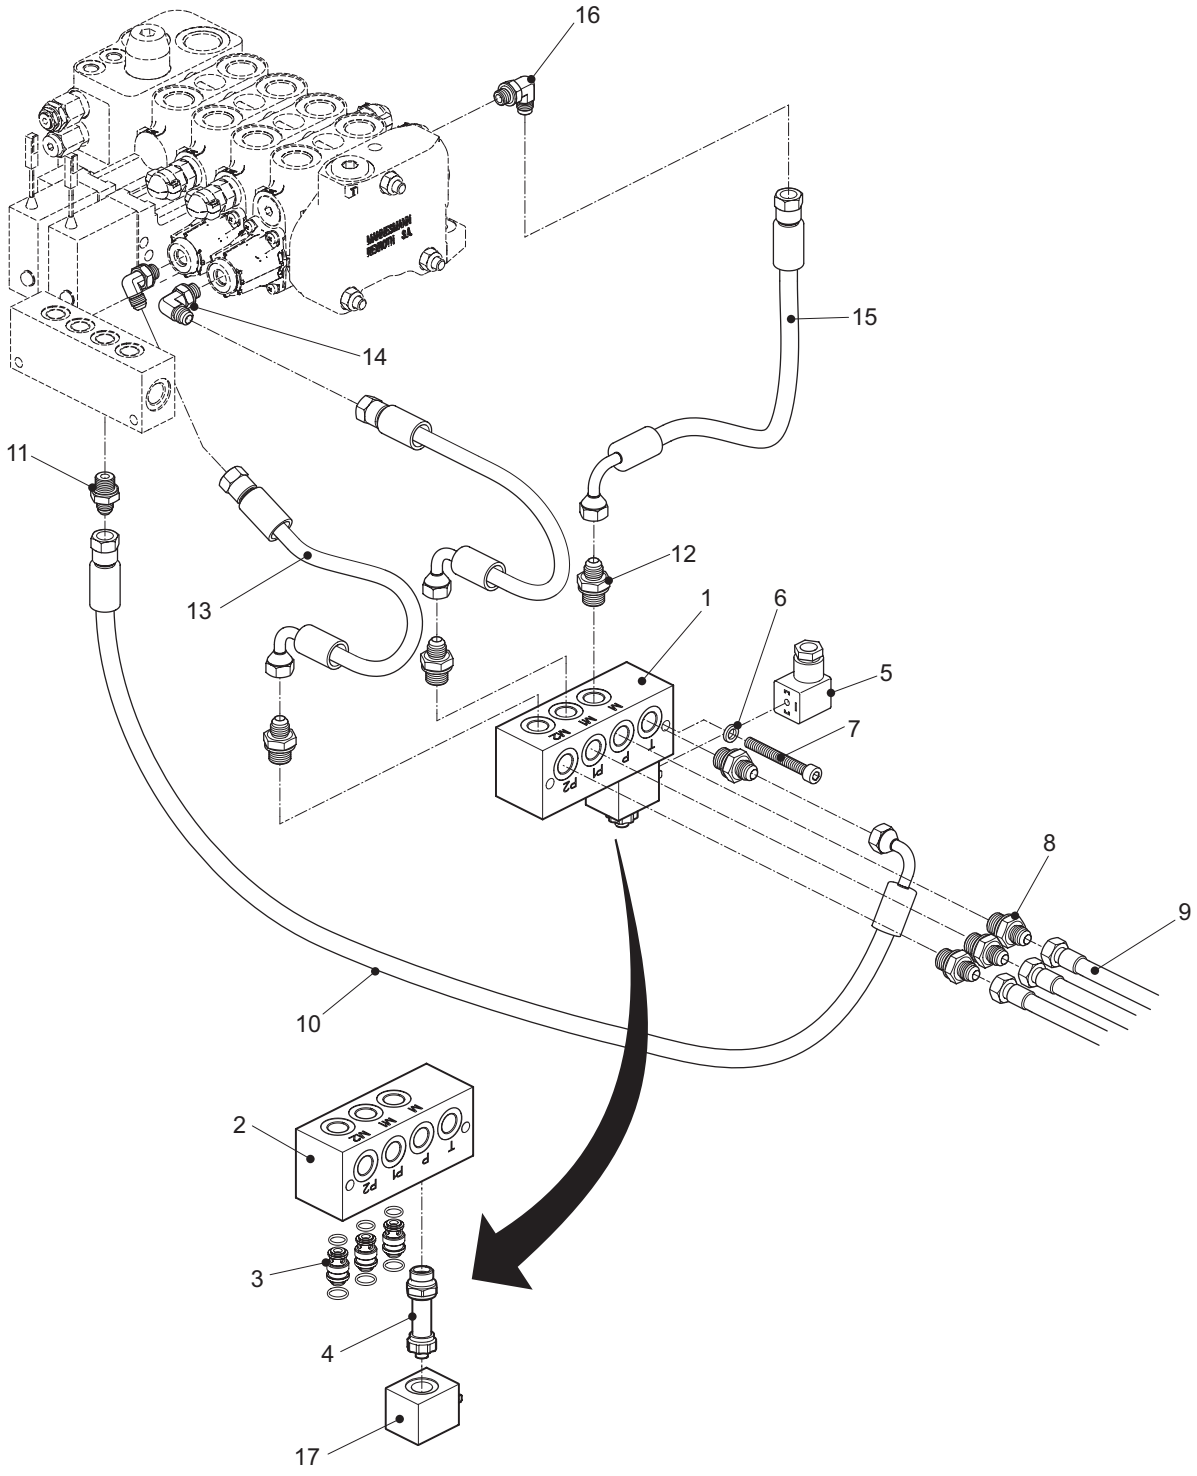


https://www.pdfmanual4trucks.com/

AMA - Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6910206	AMA valve	Pos. 2 + 3 + 4 +17		1
2	6912532	Collector			1
3	6912534	Coil			3
4	6912533	Valve			1
5	90924.2	Connection			1
6	89519.3	Washer			2
7	100329-22A	Screw			2
8	77013.1	Adapter			4
9	6912493	Hose			3
10	6914033	Hose	Was 6913657		1
11	77013.1	Adapter			1
12	77013.1	Adapter			3
13	101319-25M	Hose	Was 6909304		2
14	100370-18C	Elbow			2
15	6914033	Hose	Was 6913657		1
16	100370-18C	Elbow			1
17	6912573	Coil			1

https://www.pdfmanual4trucks.com/

Service Brake Hydraulic Installation

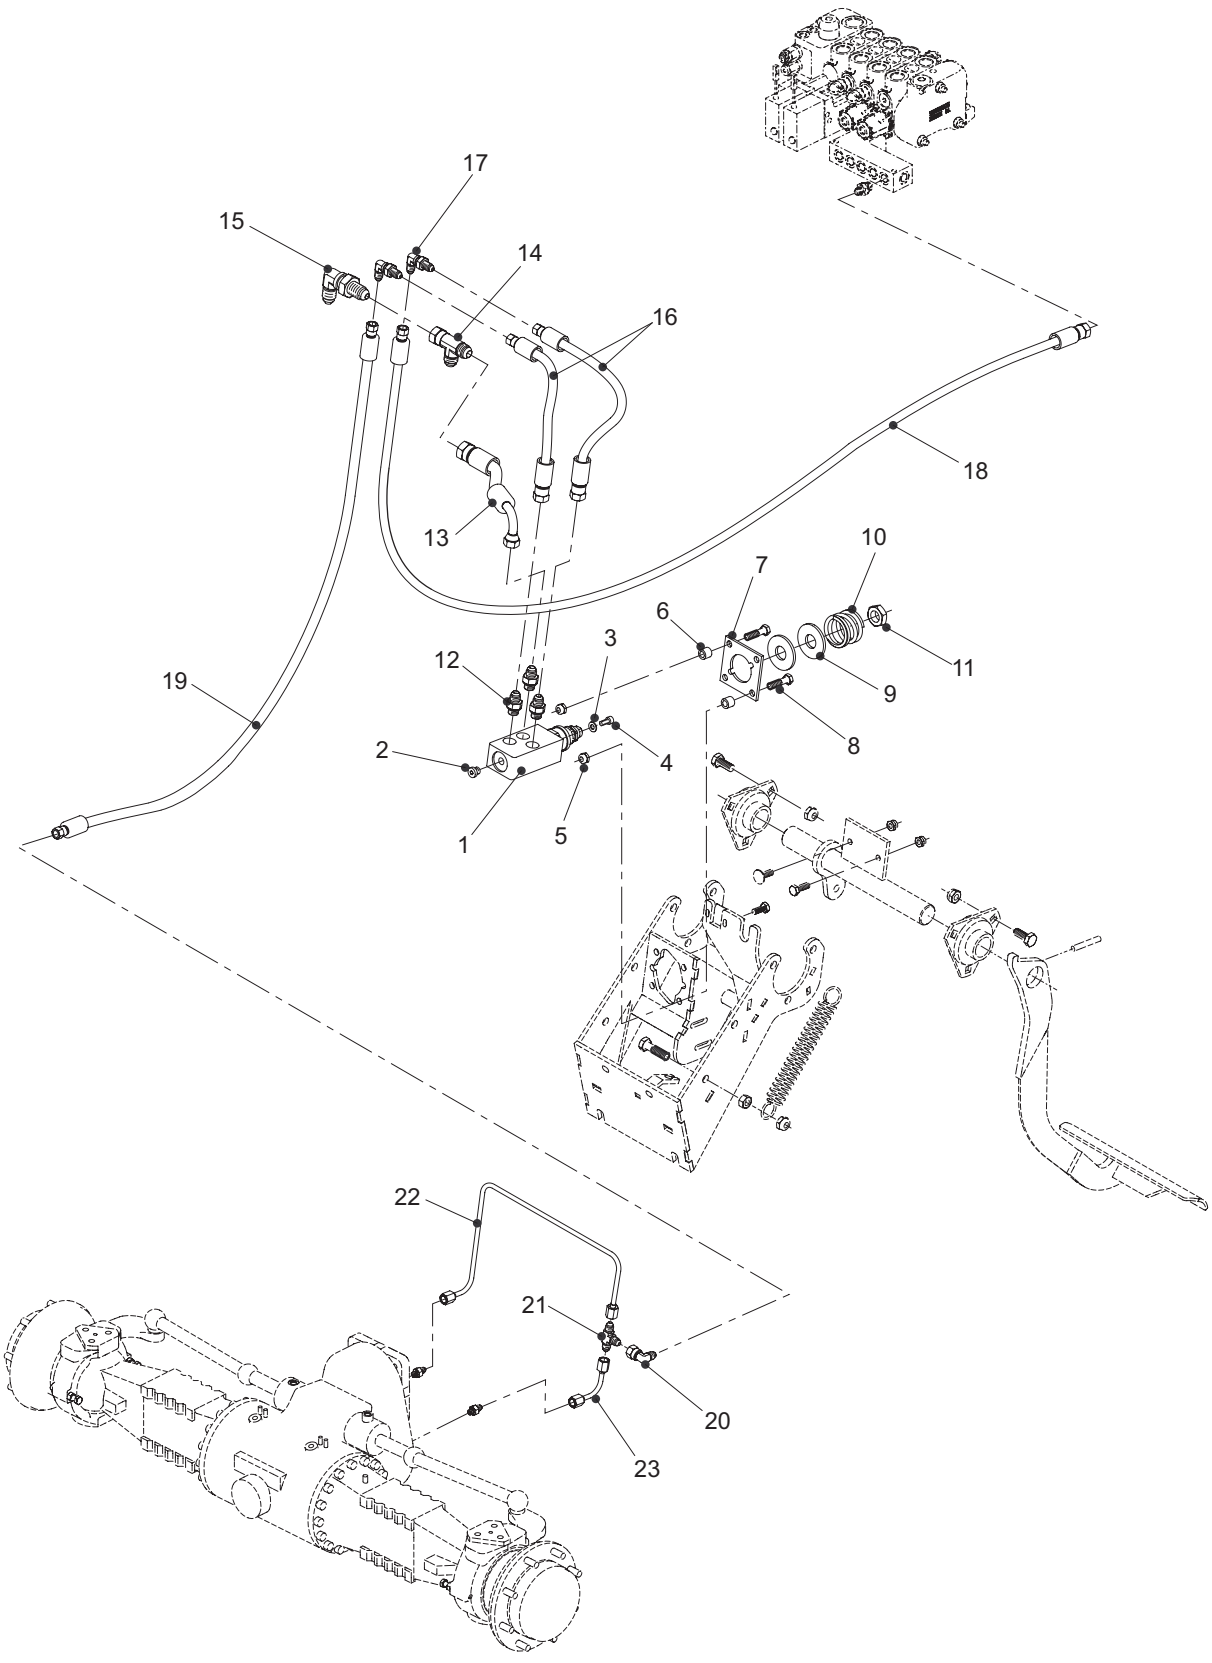


https://www.pdfmanual4trucks.com/

Service Brake Hydraulic Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	90807.9	Brake Valve			1
2	78927.1	Plug			1
3	000350-01U	Washer			2
4	15354.4	Screw			2
5	51851.4	Nut			4
6	96061.7	Spacer			4
7	96054.2	Spacer			1
8	01578.4	Screw			4
9	96655.6	Washer			2
10	96656.4	Spring			1
11	000342-17S	Nut			1
12	90289.0	Union			3
13	6908595	Hose			1
14	008372-02C	T- union			1
15	010370-87T	Elbow			1
16	98397.3	Hose			2
17	67196.6	Elbow			2
18	6913652	Hose			1
19	94993.3	Hose			1
20	72294.2	Elbow union			1
21	62849.5	T- union			1
22	89477.4	Tube			1
23	89474.1	Tube			1

https://www.pdfmanual4trucks.com/

Parking Brake Hydraulic Installation

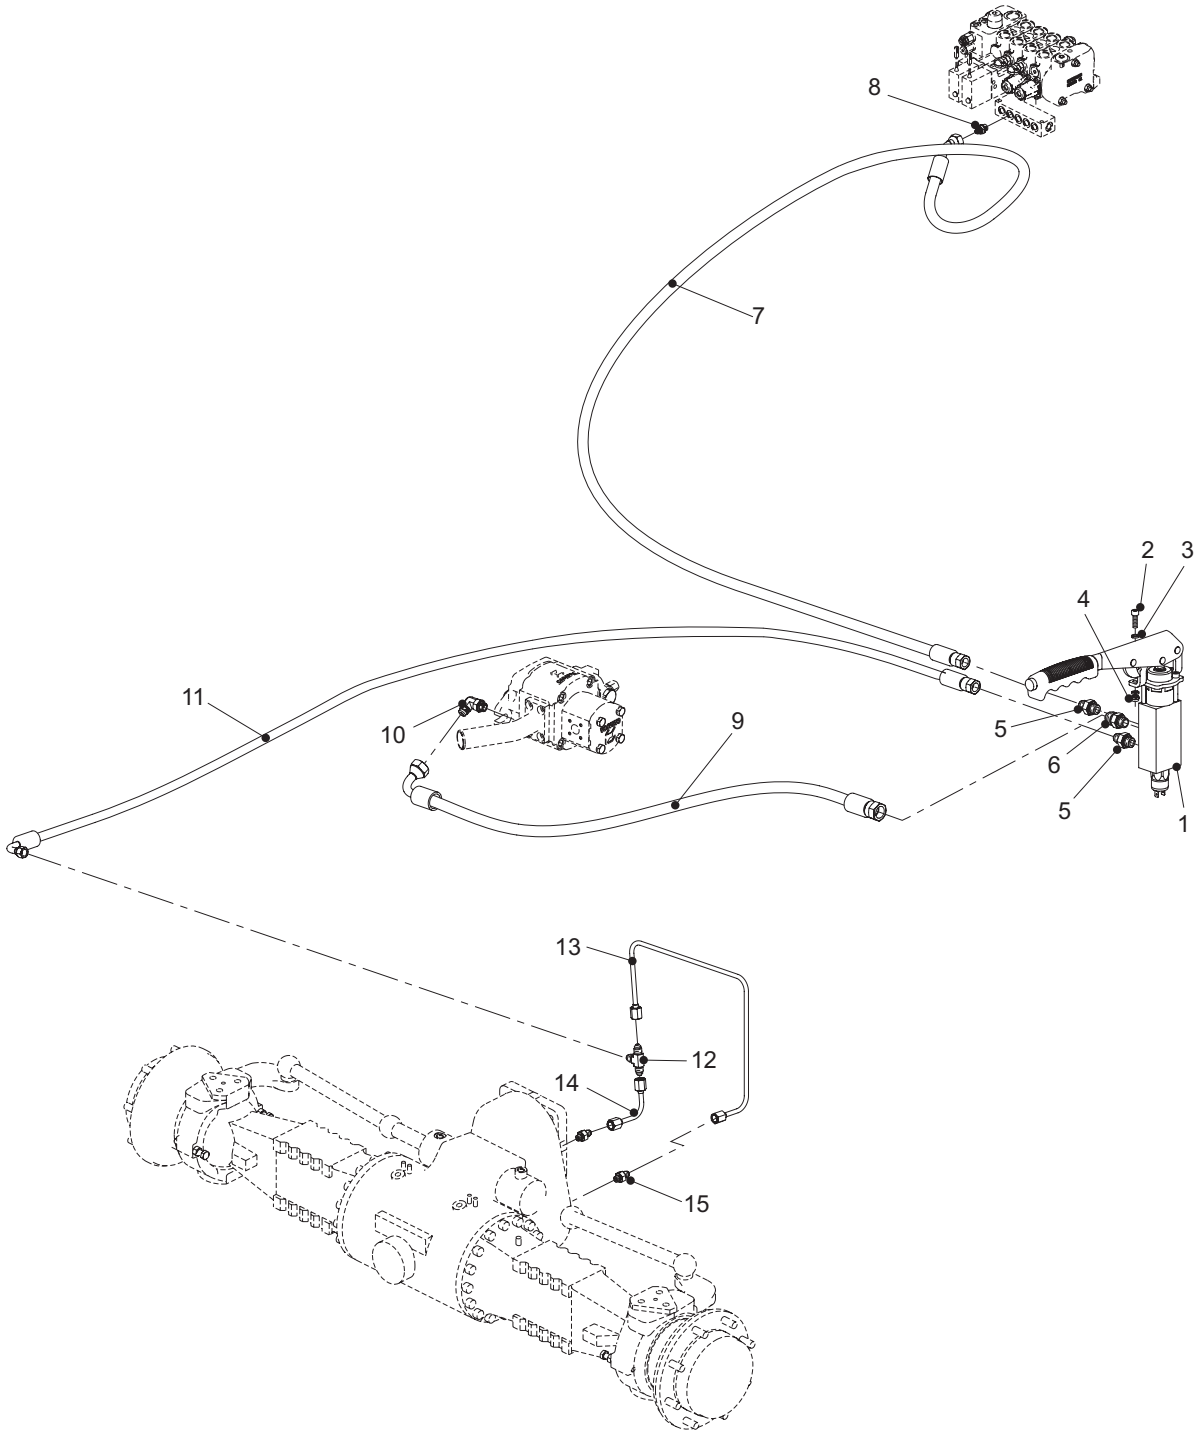

SPC003048


https://www.pdfmanual4trucks.com/

Parking Brake Hydraulic Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	NAP	Lever assy	Order now 6915524 ; Was 6909330 ; For details, see page 53		1
	6915524	Lever assy	For details, see page 55		1
2	10167.5	Screw			2
3	13416.3	Washer			4
4	100345-06W	Nut			2
5	90289.0	Union			2
6	96567.3	Union			1
7	70865.1	Hose			1
8	77013.1	Adapter			1
9	96776.0	Hose	Was 82421.9		1
10	010370-94B	Elbow			1
11	92991.9	Hose			1
12	62849.5	T- union			1
13	90191.8	Tube			1
14	89475.8	Tube			1
15	100375-71D	Adapter			2

https://www.pdfmanual4trucks.com/

Parking Brake Hydraulic Installation (accumulator)

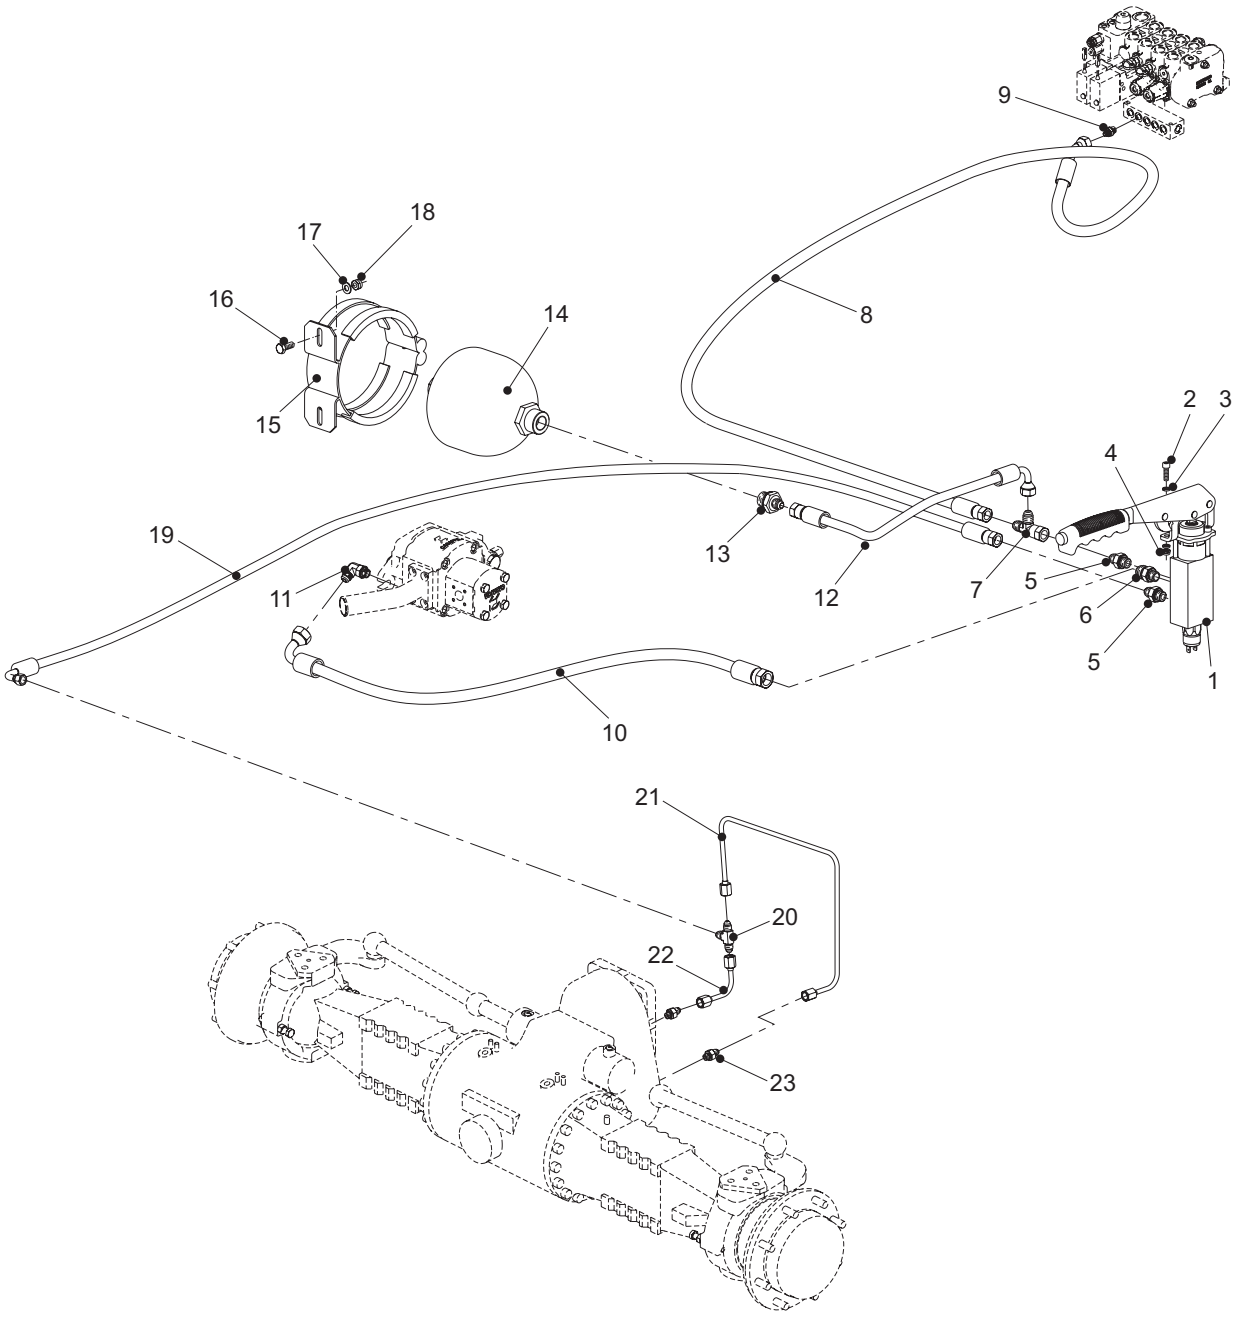

SPC003049


https://www.pdfmanual4trucks.com/

Parking Brake Hydraulic Installation (accumulator)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	NAP	Lever assy	Order now 6915524 ; Was 6909330 ; For details, see page 53		1
	6915524	Lever assy	For details, see page 55		1
2	10167.5	Screw			2
3	13416.3	Washer			4
4	100345-06W	Nut			2
5	90289.0	Union			2
6	96567.3	Union			1
7	100372-06G	T- union			1
8	70865.1	Hose			1
9	77013.1	Adapter			1
10	82421.9	Hose			1
11	010370-94B	Elbow			1
12	6909434	Hose			1
13	77912.4	Adapter			1
14	6911486	Accumulator			1
15	6911812	Collar			1
16	01596.6	Screw			2
17	01697.2	Washer			2
18	51851.4	Nut			2
19	92991.9	Hose			1
20	62849.5	T- union			1
21	90191.8	Tube			1
22	89475.8	Tube			1
23	100375-71D	Adapter			2

https://www.pdfmanual4trucks.com/

Quick Attach Installation

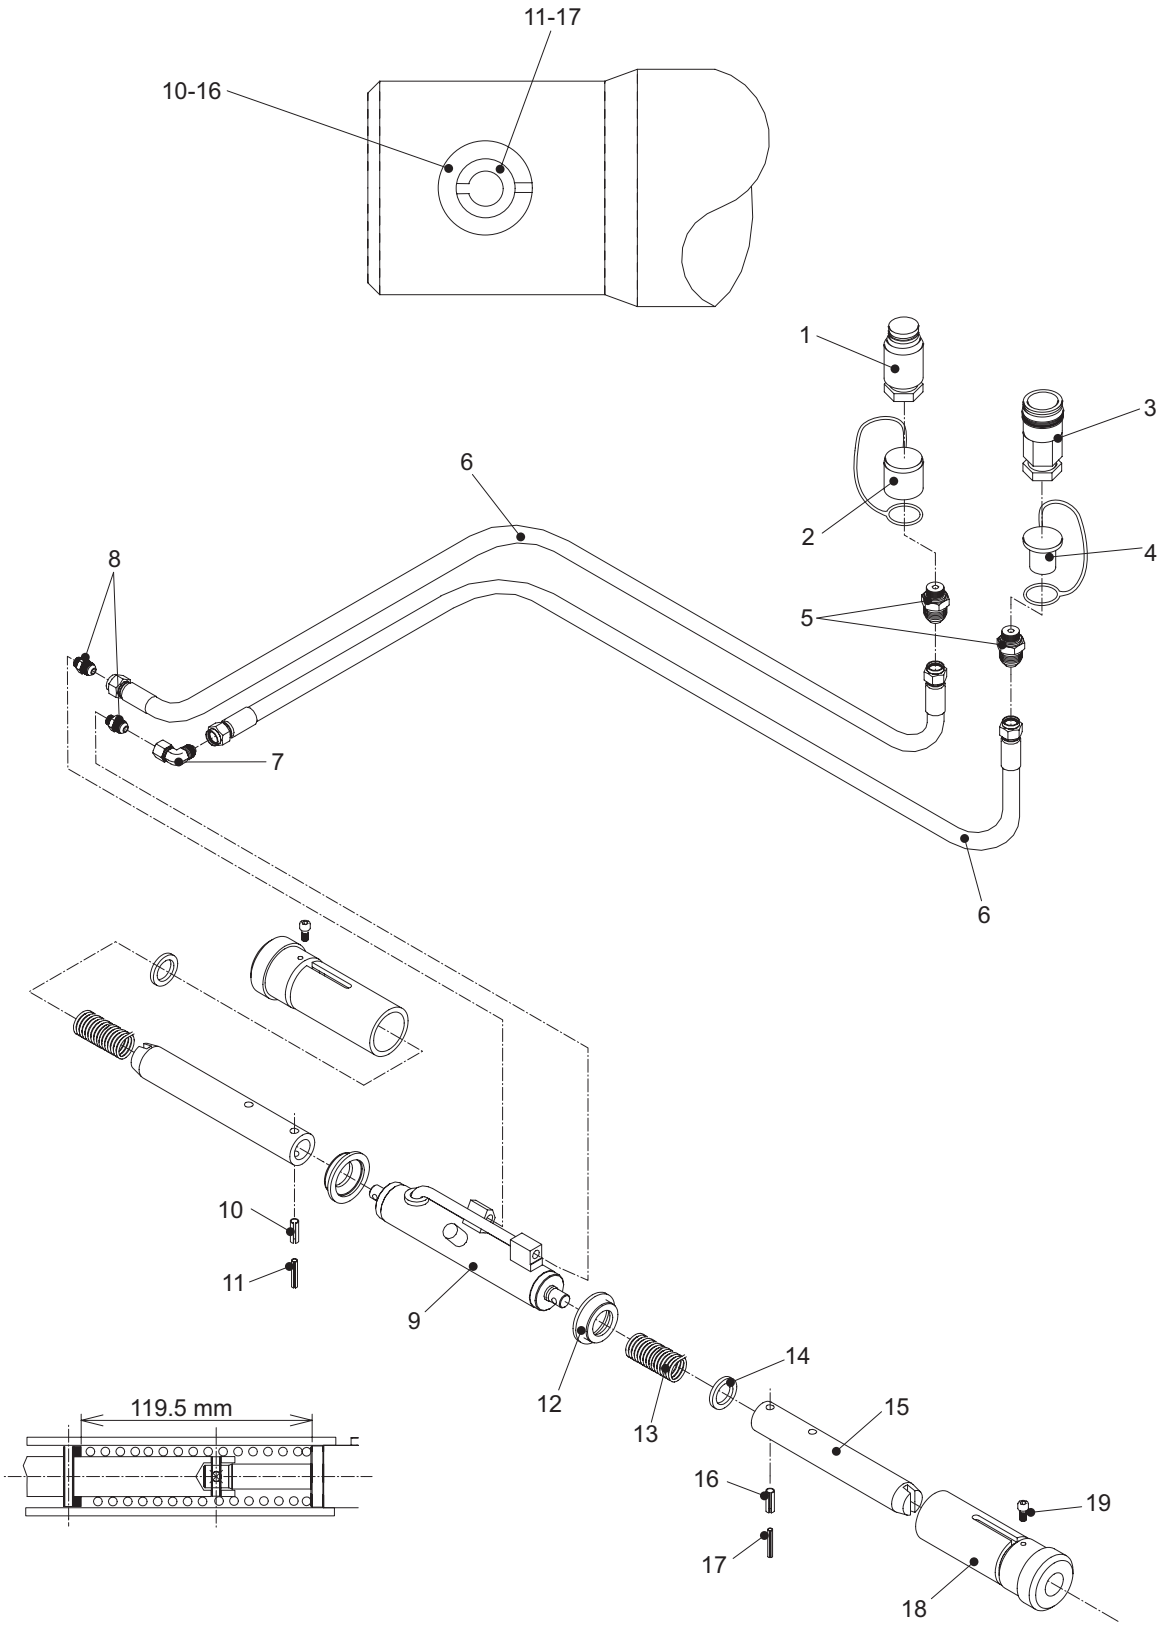

SPC003052


https://www.pdfmanual4trucks.com/

Quick Attach Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	95994.0	Male coupling			1
2	96513.7	Cap			1
3	95993.2	Female Coupling			1
4	96514.5	Cap			1
5	022375-27U	Adapter			2
6	65438.4	Hose			2
7	72294.2	Elbow union			1
8	022375-28V	Adapter			2
9	92420.9	Quick Attach Cylinder	For details, see page 137		1
10	01744.2	Pin			2
11	01735.0	Pin			2
12	79365.3	Bushing			2
13	92398.7	Spring			2
14	92588.3	Washer			2
15	92218.7	Pin			2
16	01745.9	Pin			2
17	85481.0	Pin			2
18	92220.3	Tube			2
19	29649.1	Screw			2

https://www.pdfmanual4trucks.com/

Hydraulic Tank Installation

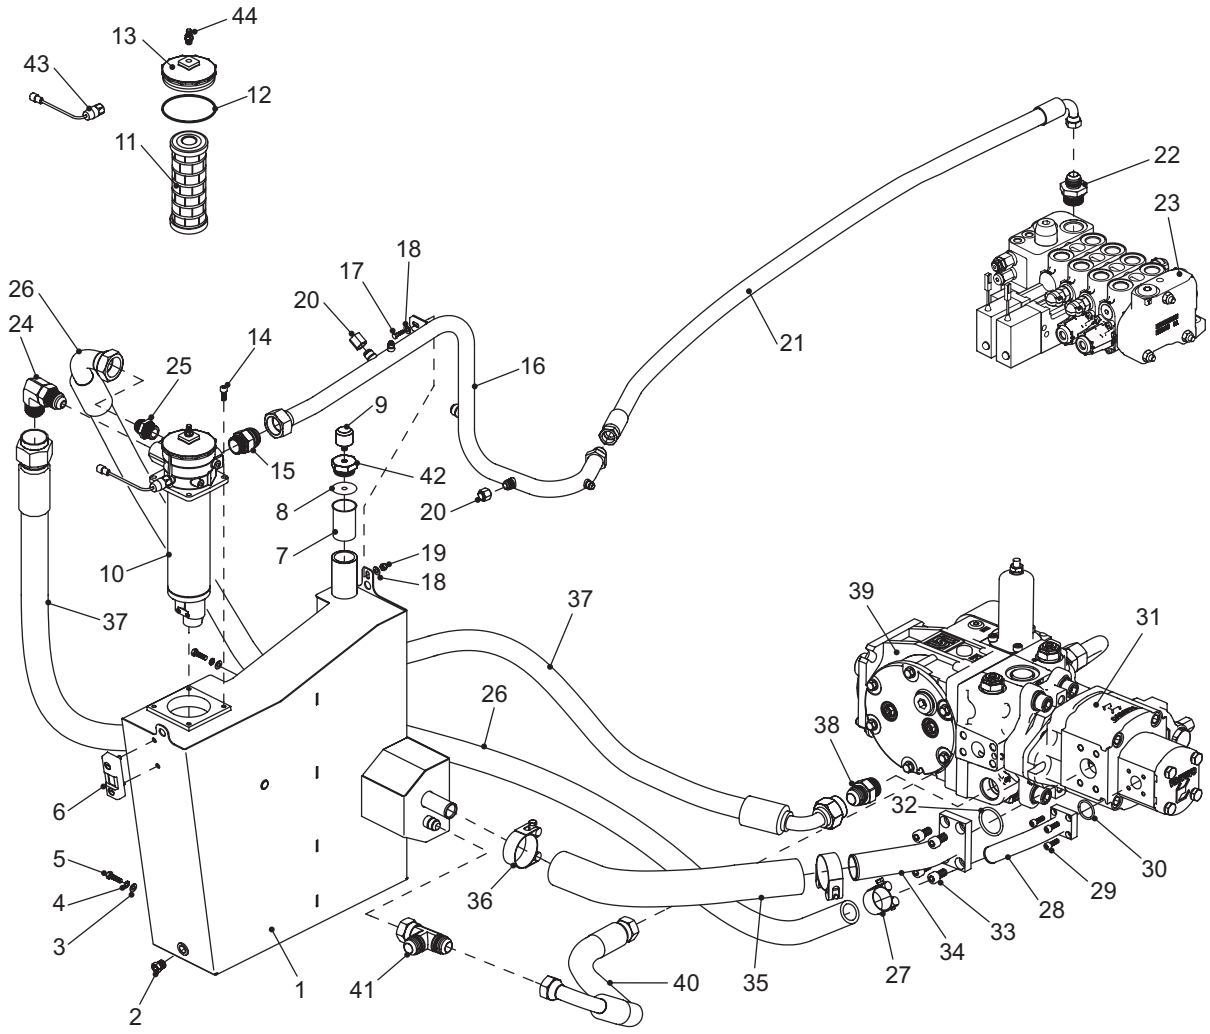

SPC003054

https://www.pdfmanual4trucks.com/


Hydraulic Tank Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6913526	Tank	Was 6911094		1
2	78743.2	Drain plug			1
3	38025.3	Washer			2
4	01718.6	Washer			2
5	01597.4	Screw			2
6	54194.6	Gauge			1
7	6913570	Strainer			1
8	6913569	Seal	Was 98583.8		1
9	37148.4	Breather			1
10	6911140	Hydraulic filter	Including Pos. 11 + 12 +13 + 43 + 44		1
11	6913059	Hydraulic filter element			1
12	6912548	Set of seals			1
13	6912572	Cap			1
14	01639.4	Screw			4
15	6909739	Union			1
16	6910972	Pipe			1
17	01597.4	Screw			1
18	000350-02V	Washer			2
19	51851.4	Nut			1
20	011374-62W	Plug			2
21	6913649	Hose			1
22	68609.7	Union	Was 6910603		1
23	6912484	Hydr. control valve assy	For details, see page 149		1
24	69274.9	Elbow union			1
25	85170.9	Union			1
26	6910602	Hose			1
27	89522.7	Clamp			1
28	6908091	Flange			1
29	10167.5	Screw			4
30	93049.5	O-ring			1
31	6909447	Hydraulic pump			1

https://www.pdfmanual4trucks.com/

Hydraulic Tank Installation

Recurrence of previous drawing

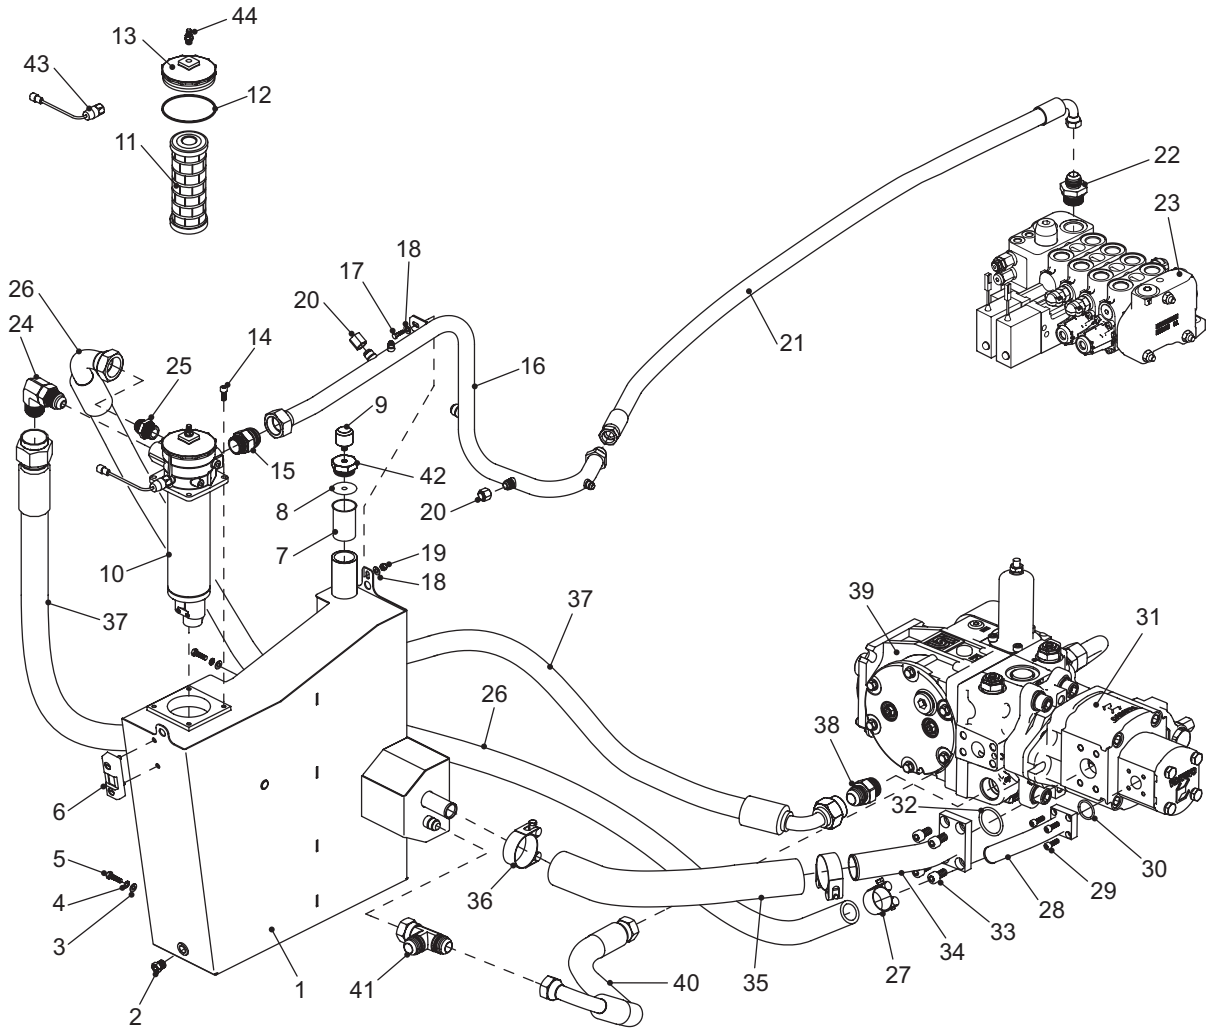

SPC003054


https://www.pdfmanual4trucks.com/

Hydraulic Tank Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	92637.8	O-ring			1
33	10662.5	Screw			4
34	6911767	Flange			1
35	6910573	Hose			1
36	89523.5	Clamp			2
37	6913204	Hose			1
38	78705.1	Adapter			1
39	NAP	Hydrostatic drive pump	Order now 6913565 ; Was 6910533 ; For details, see page 169	3628 11091 & below + 3629 11008 & below	1
	6913565	Hydrostatic pump	For details, see page 173	3628 11092 & above + 3629 11009 & above	1
40	6910599	Hose			1
41	008372-34M	T- union			1
42	6913567	Breather support			1
43	6912549	Plugging indicator	Was 6913238		1
44	6910741	Plug			1

https://www.pdfmanual4trucks.com/

Frame Level Installation

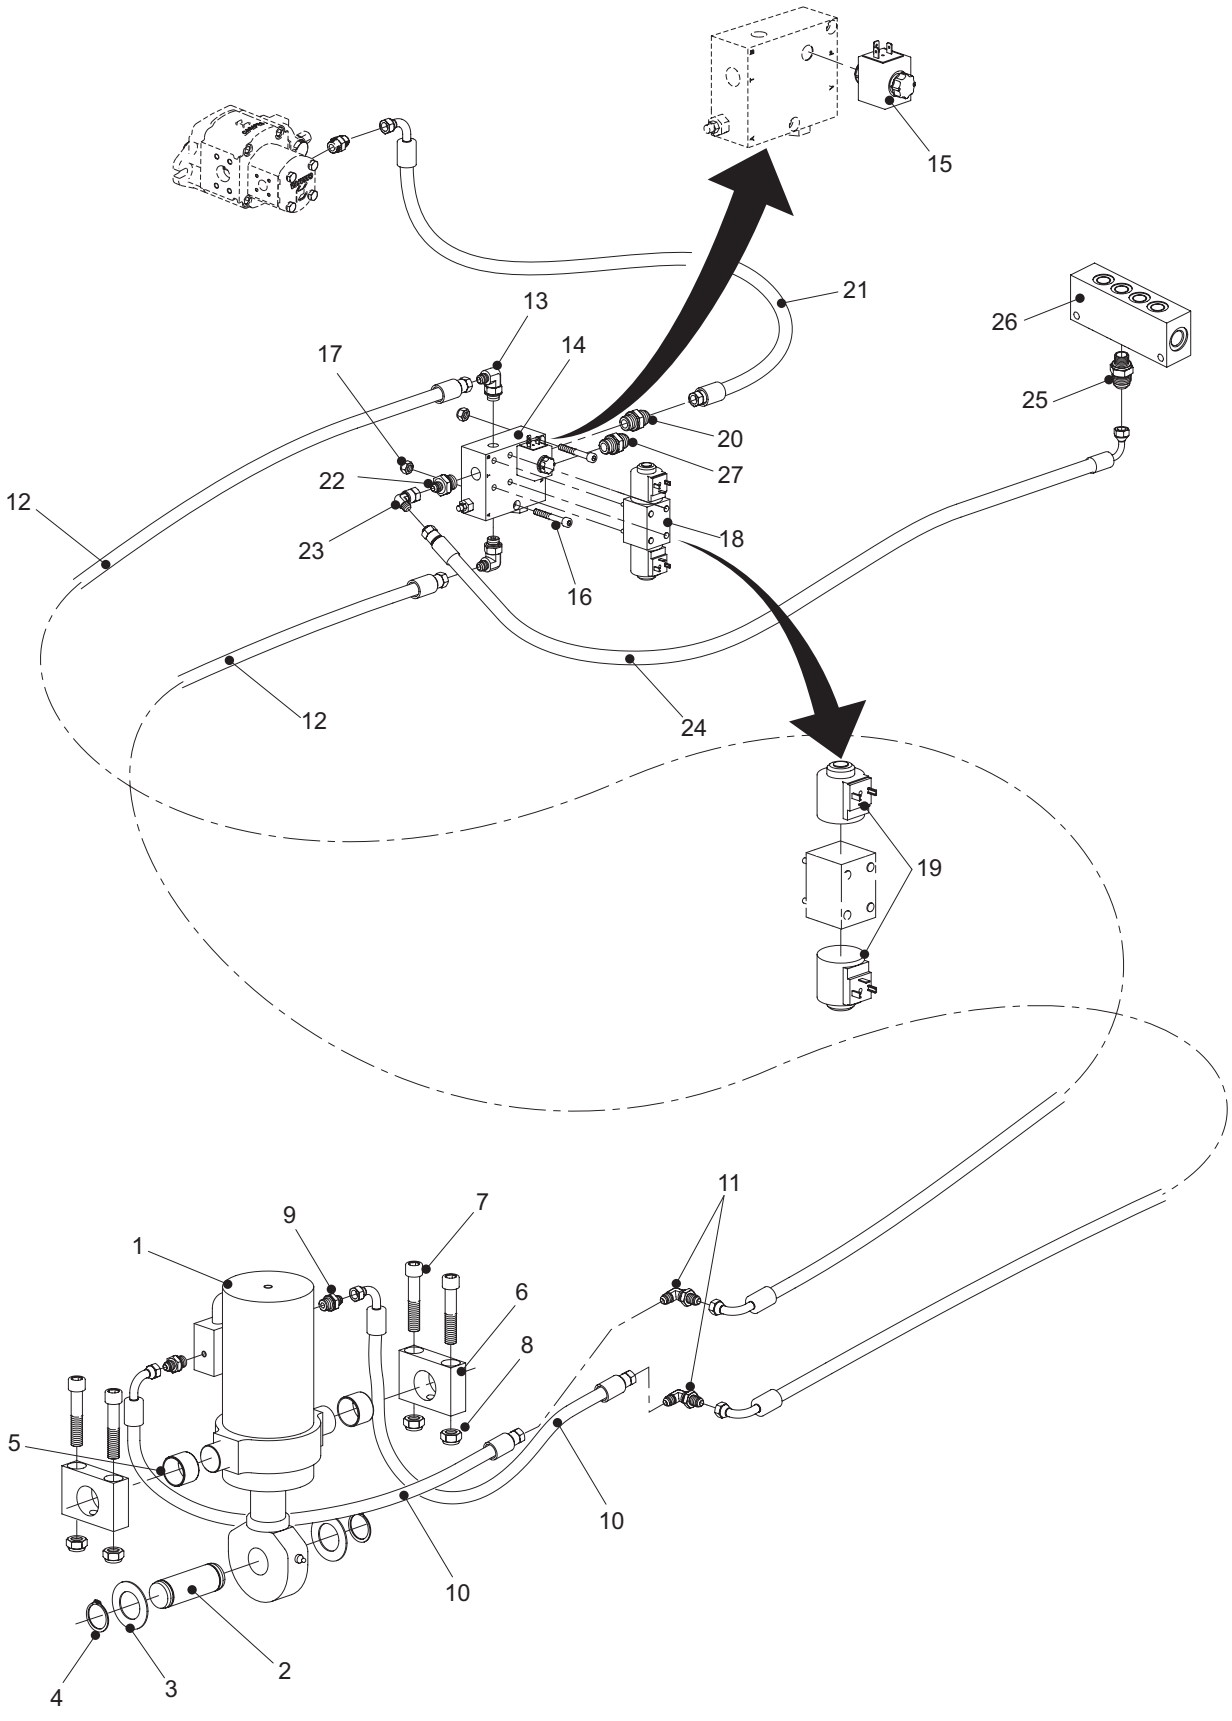


https://www.pdfmanual4trucks.com/

Frame Level Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	92089.2	Frame Level Cylinder Assembly	For details, see page 139		1
2	67166.9	Spindle			1
3	58880.6	Washer			2
4	06734.8	Retaining Ring			2
5	27052.0	Bush			2
6	68656.8	Mounting Block			2
7	94990.9	Screw			4
8	100345-16H	Nut			4
9	77013.1	Adapter			2
10	92126.2	Hose			2
11	100370-40B	Elbow			2
12	67198.2	Hose			2
13	77075.0	Elbow union			2
14	6911082	Hydraulic valve	Includes Pos. 15		1
15	6912537	Coil			2
16	15798.2	Screw			2
17	51851.4	Nut			2
18	6911081	Frame level selector valve	Includes Pos. 19		1
19	6912536	Coil			2
20	014375-30H	Adapter			1
21	6910691	Hose	With rear option		1
	6911059	Hose	Without rear option		1
22	77912.4	Adapter			1
23	100370-29P	Fitting			1
24	67198.2	Hose			1
25	77013.1	Adapter			1
26	6910822	Collector			1
27	022375-04U	Adapter			1

https://www.pdfmanual4trucks.com/

Lift Cylinder

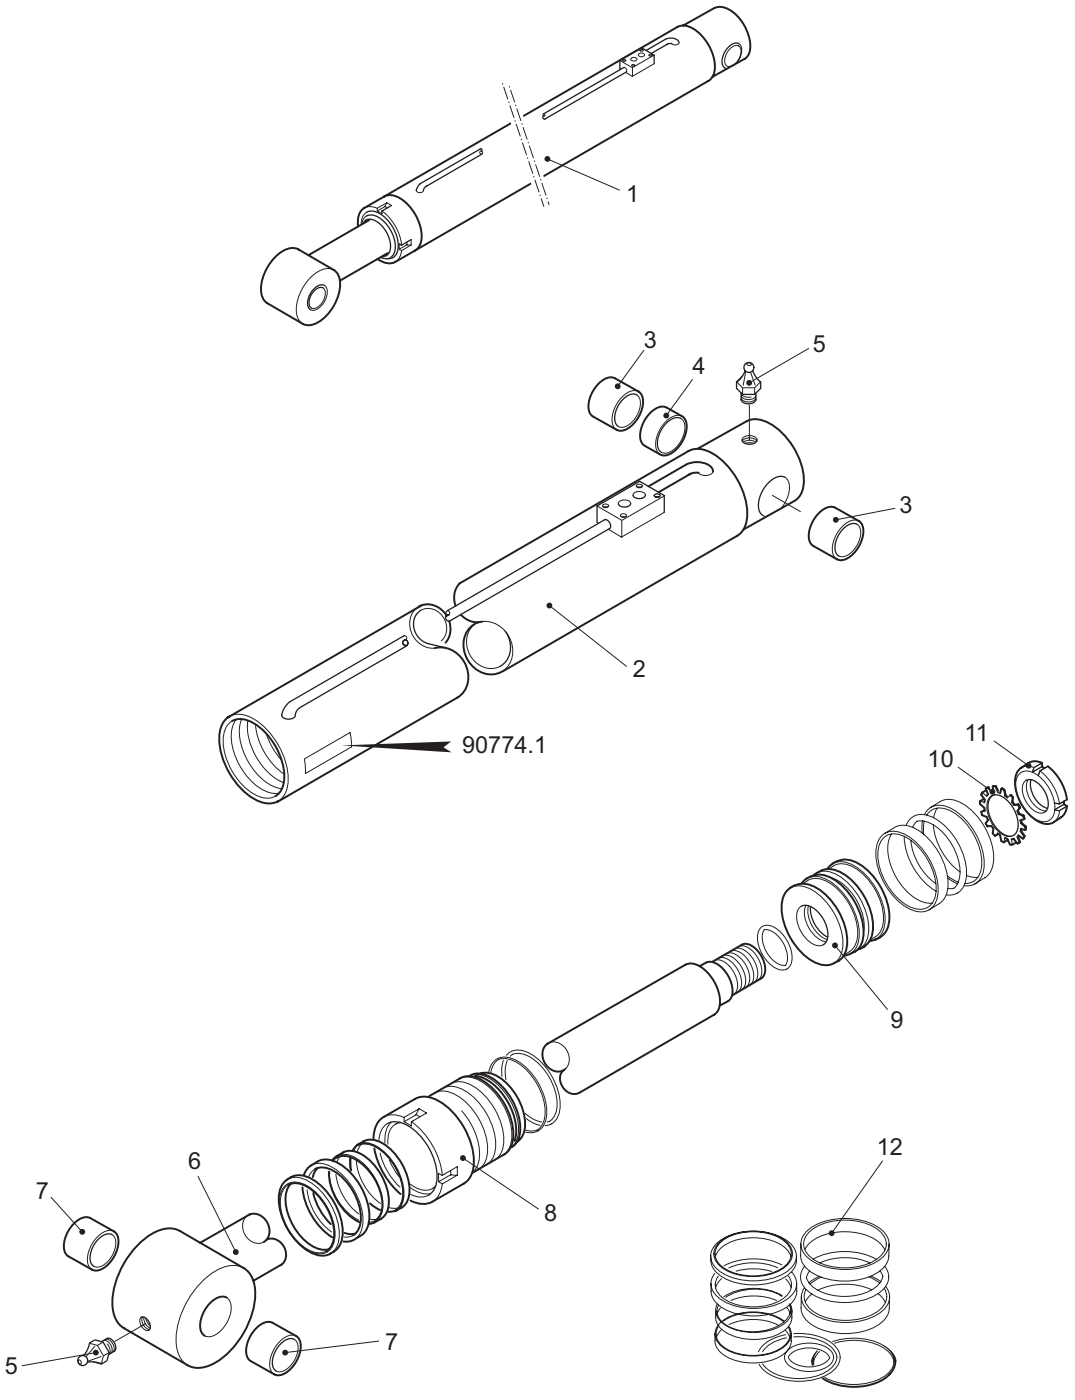

SPC003055


https://www.pdfmanual4trucks.com/

Lift Cylinder

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	90774.1	Lift Cylinder Assembly	Pos. 2 to 12		1
2	93685.6	Cylinder Barrel			1
3	75618.9	Bushing			2
4	93692.2	Spacer			1
5	93683.1	Grease nipple			2
6	93686.4	Rod			1
7	75618.9	Bushing			2
8	93687.2	Head			1
9	93688.0	Piston			1
10	93691.4	Washer			1
11	93689.8	Nut			1
12	93611.2	Lift Cylinder Seal Kit			1

https://www.pdfmanual4trucks.com/

Compensating Cylinder

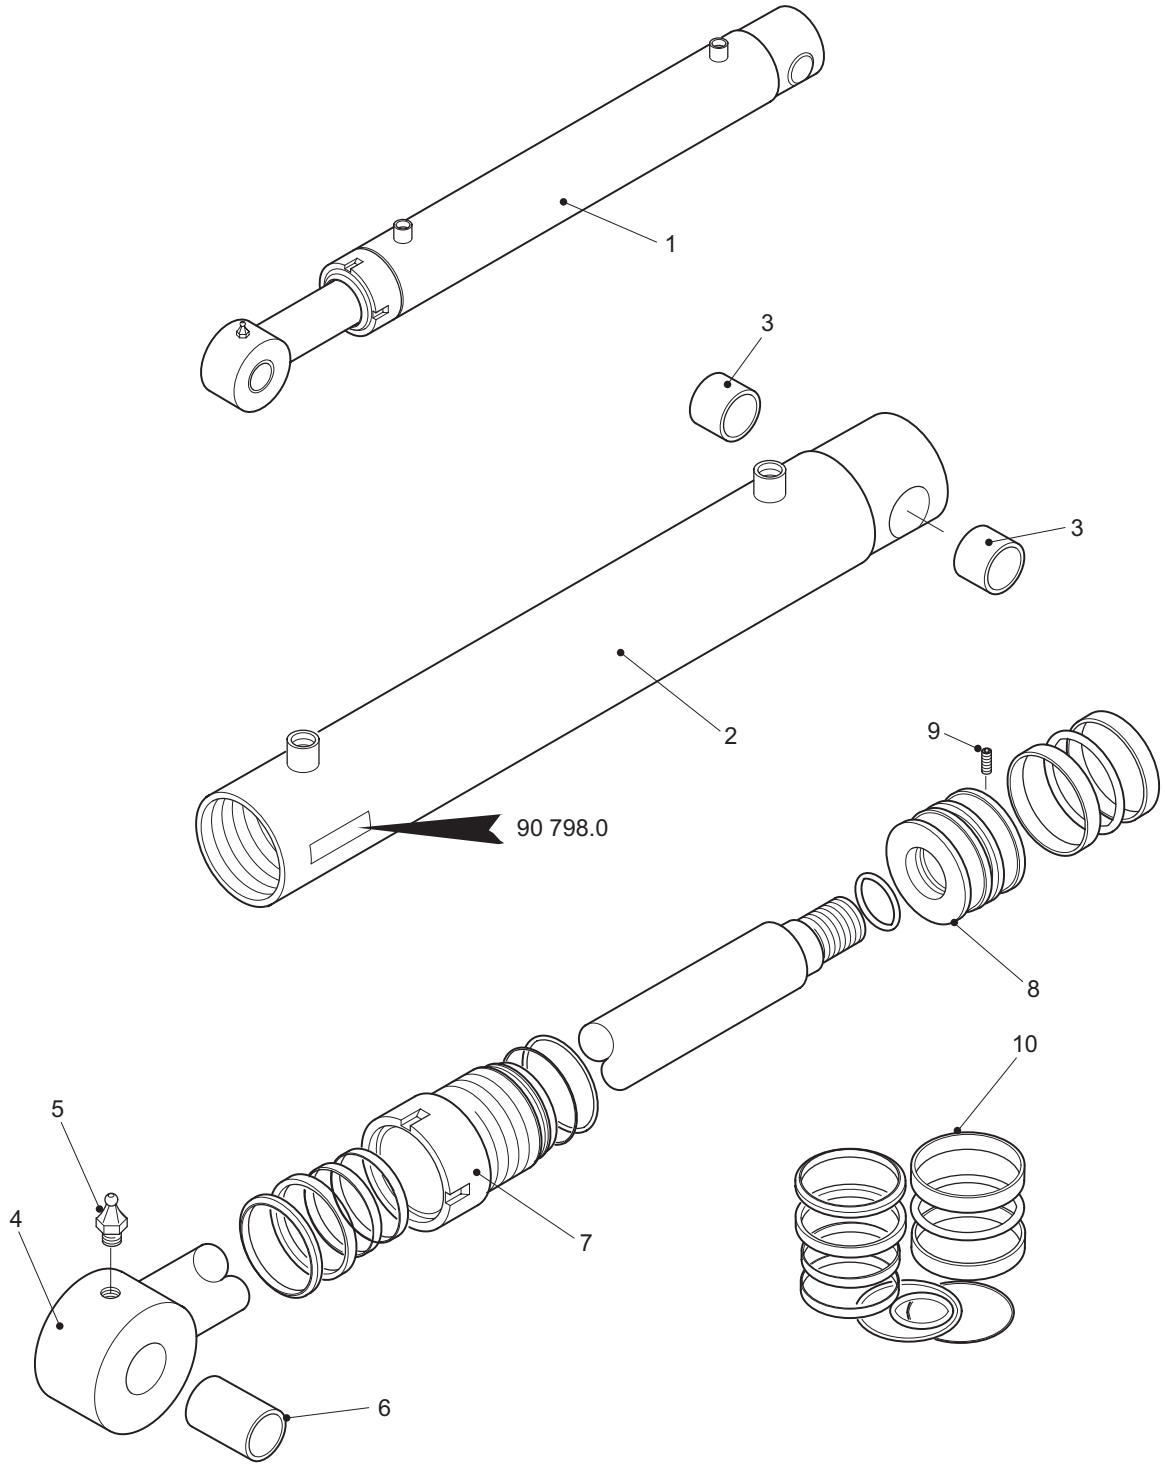

SPC003056


https://www.pdfmanual4trucks.com/

Compensating Cylinder

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	90798.0	Compensation cyl assy	Pos. 2 to 10		1
2	93678.1	Cylinder Barrel			1
3	75618.9	Bushing			2
4	93679.3	Rod			1
5	93683.1	Grease nipple			1
6	93684.9	Bushing			1
7	93680.7	Head			1
8	93681.5	Piston			1
9	93682.3	Screw			1
10	93610.4	Compensation Cylinder Seal Kit			1

https://www.pdfmanual4trucks.com/

Telescope Cylinder
6912582

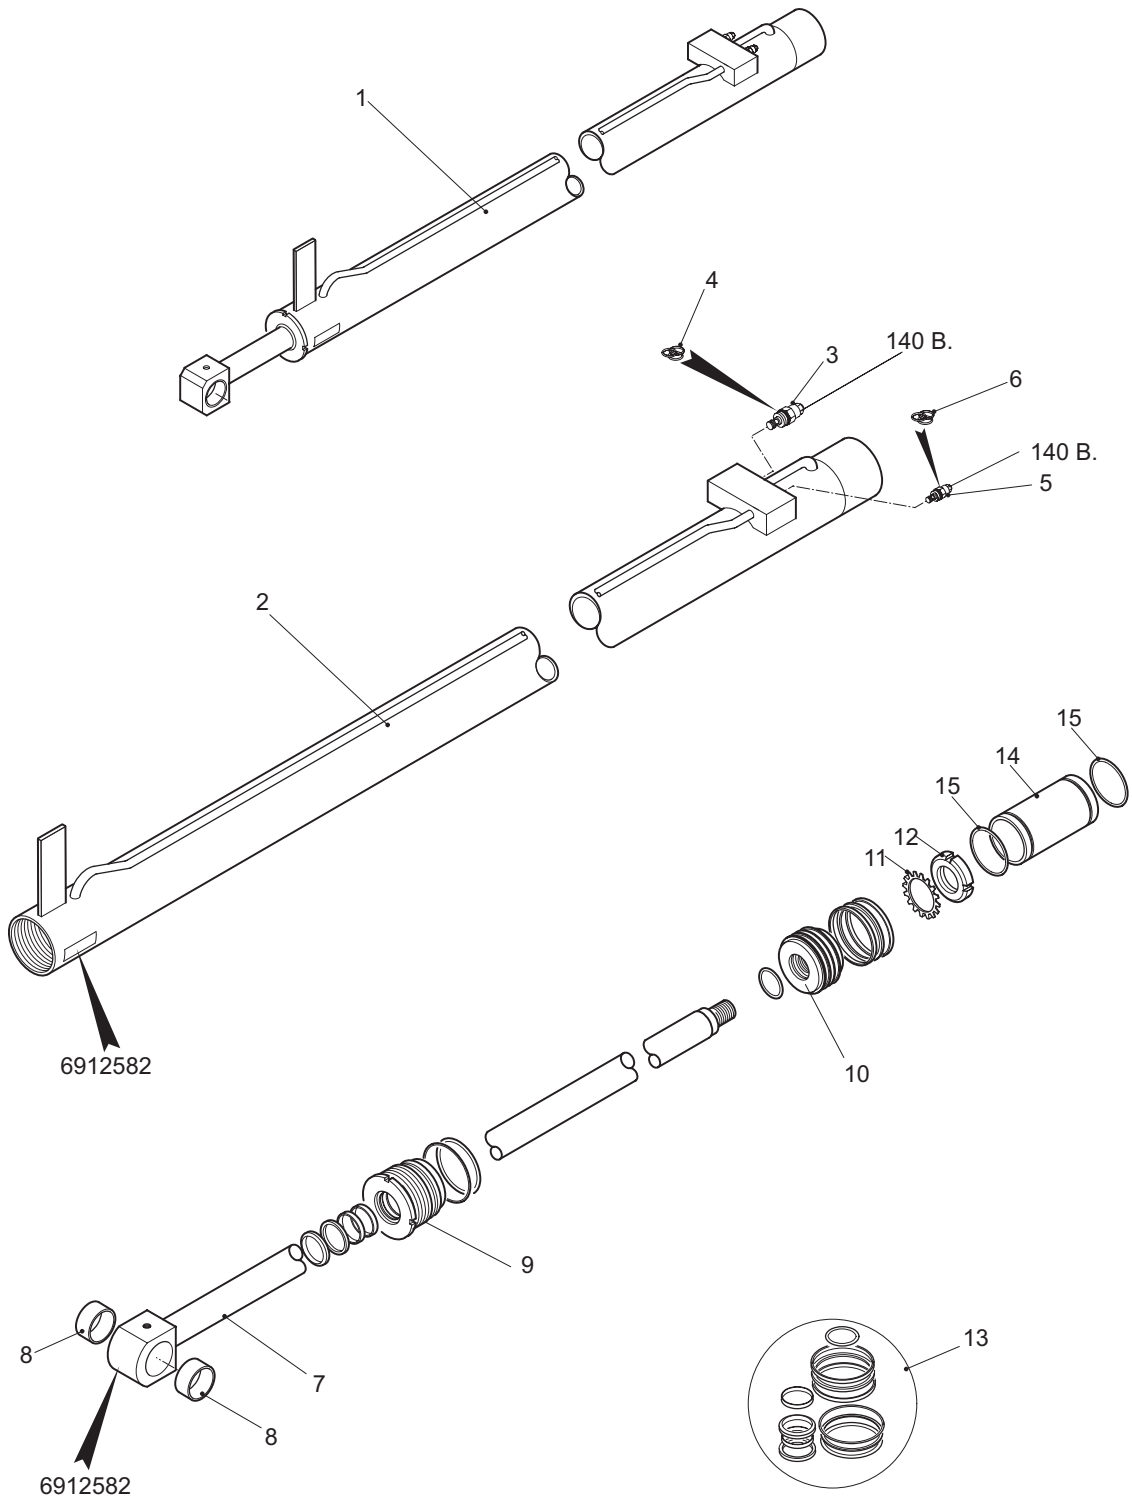

SPC003057


https://www.pdfmanual4trucks.com/

Telescope Cylinder
6912582

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	NAP	Ram assy	Order now 6913007 ; Was 6912582 ; For details, see page 133		1
2	6909948	Cylinder, barrel	Pos. 2 to 15		1
3	6909981	Valve, over center			1
4	100496-74K	Seal Kit			1
5	6909980	Valve, relief			1
6	100496-04H	Seal Kit			1
7	6909949	Rod			1
8	72347.8	Bushing			2
9	93973.6	Cylinder head			1
10	93974.4	Piston			1
11	00930.8	Washer			1
12	00939.9	Nut			1
13	93612.0	Seals kit			1
14	6909950	Spacer			1
15	97067.3	O-ring			2

https://www.pdfmanual4trucks.com/

Telescope Cylinder
6913007

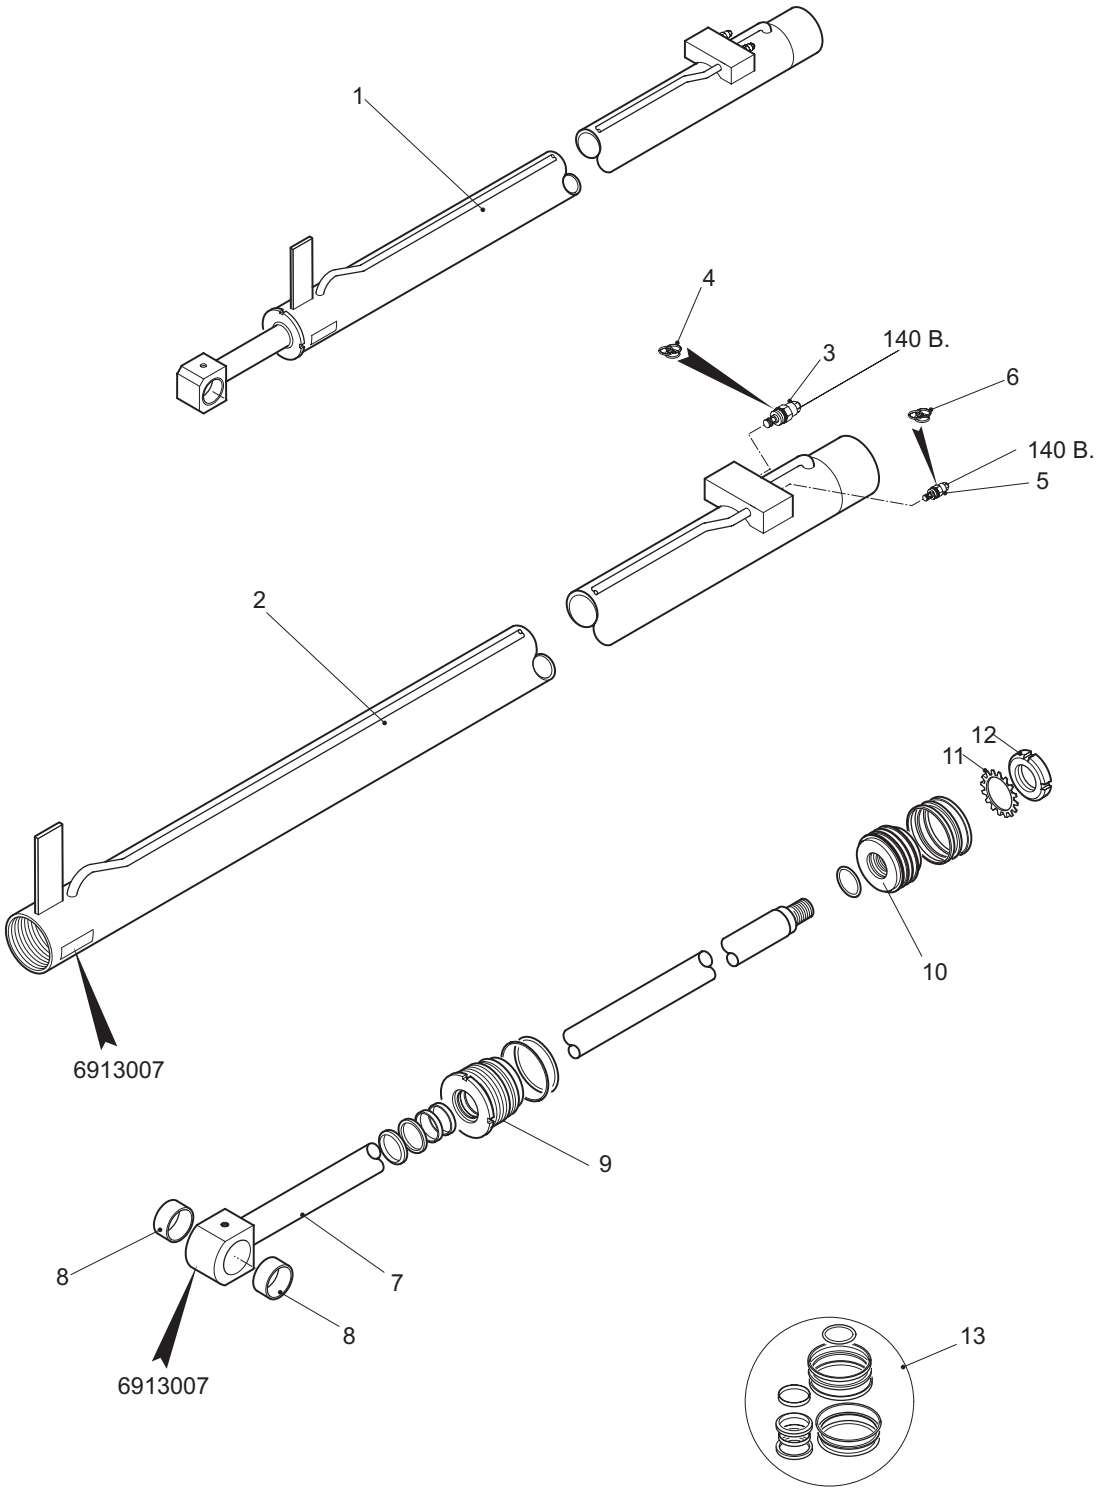

SPC003058


https://www.pdfmanual4trucks.com/

Telescope Cylinder
6913007

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6913007	Telescope cyl assy	Pos. 2 to 13		1
2	6909951	Cylinder, barrel			1
3	6909981	Valve, over center			1
4	100496-74K	Seal Kit			1
5	6909980	Valve, relief			1
6	100496-04H	Seal Kit			1
7	93972.8	Piston Rod			1
8	72347.8	Bushing			2
9	6909952	Cylinder head			1
10	6909954	Piston			1
11	00930.8	Washer			1
12	00939.9	Nut			1
13	6909947	Seals kit			1

https://www.pdfmanual4trucks.com/

Tilt Cylinder

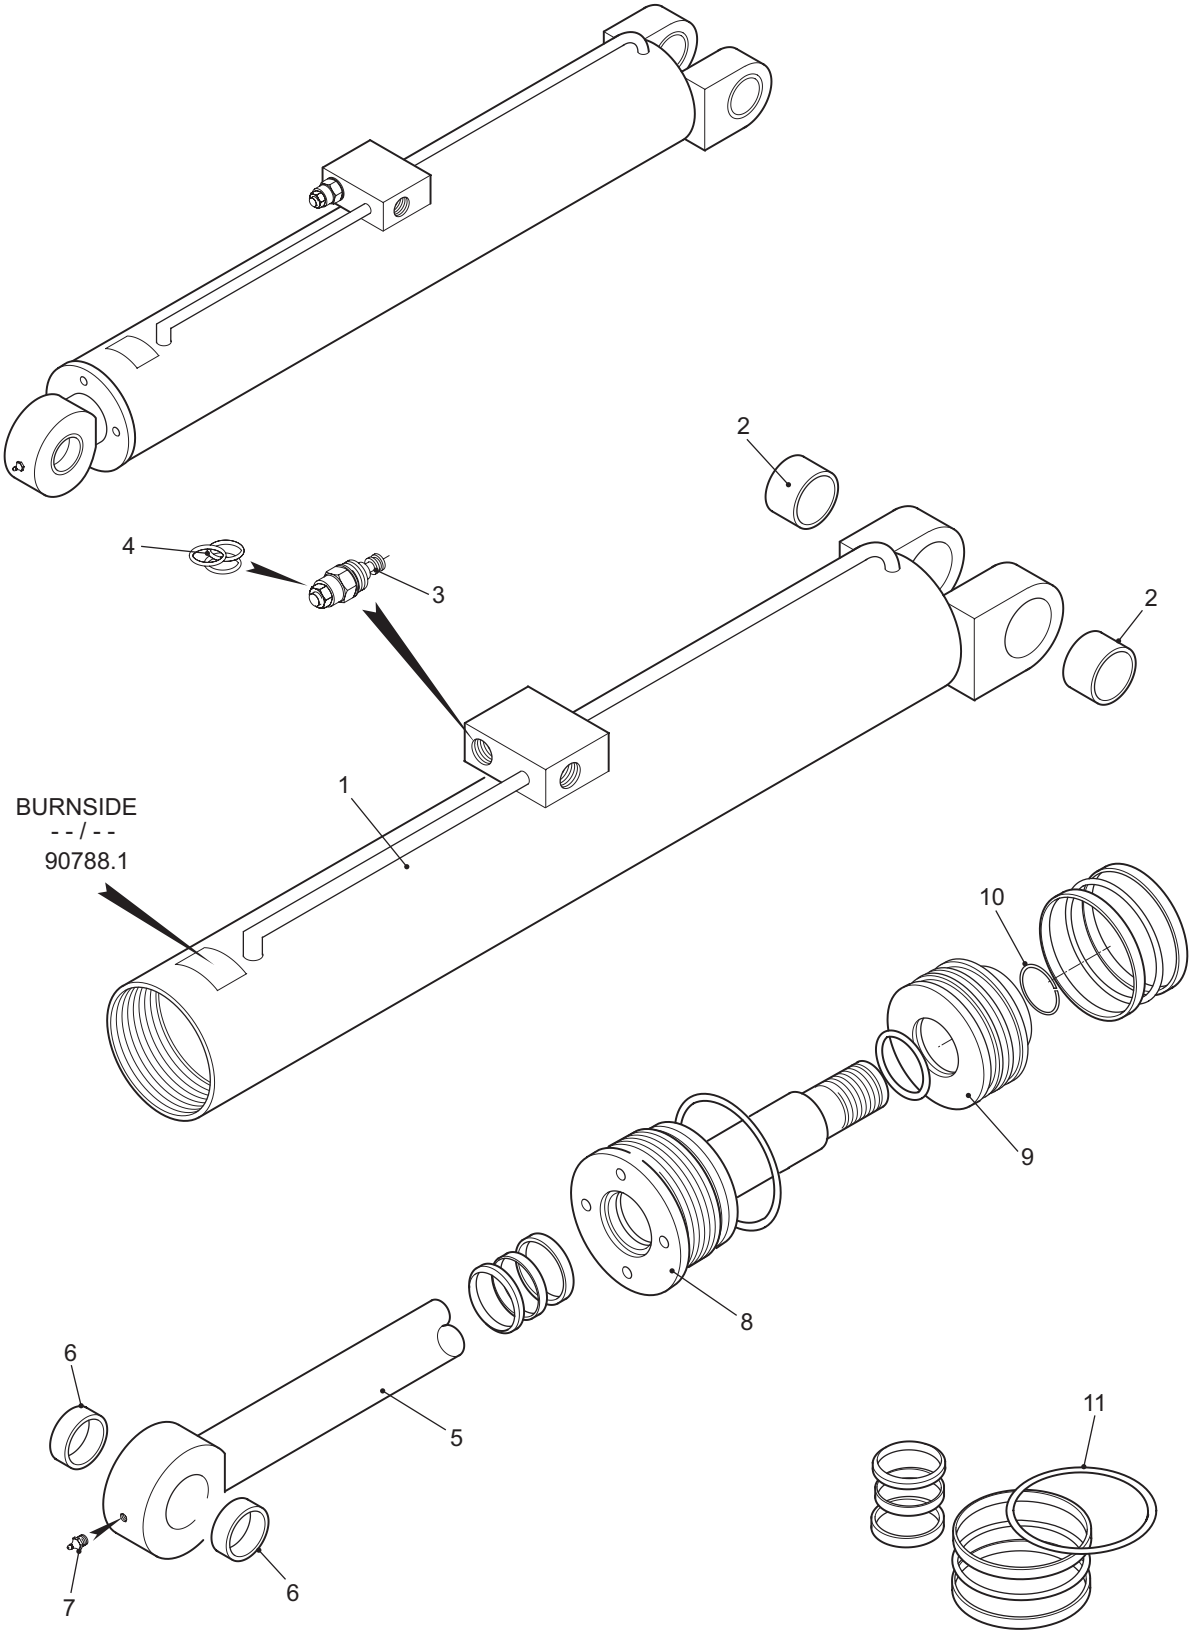


https://www.pdfmanual4trucks.com/

Tilt Cylinder

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	90788.1	Tilt Cylinder Assembly	Pos 1 to 11		1
1	NAP	Ram cylinder	Order now 90788.1		
2	75618.9	Bushing			2
3	75591.8	Lock Valve			1
4	100496-04H	Seal Kit			1
5	93487.7	Piston Rod			1
6	75618.9	Bushing			2
7	61182.2	Grease Nipple	Was 81573.8		1
8	93488.5	Head			1
9	93489.3	Piston			1
10	93647.6	Ring			1
11	93477.8	Tilt Cylinder Seal Kit			1

https://www.pdfmanual4trucks.com/

Quick Attach Cylinder

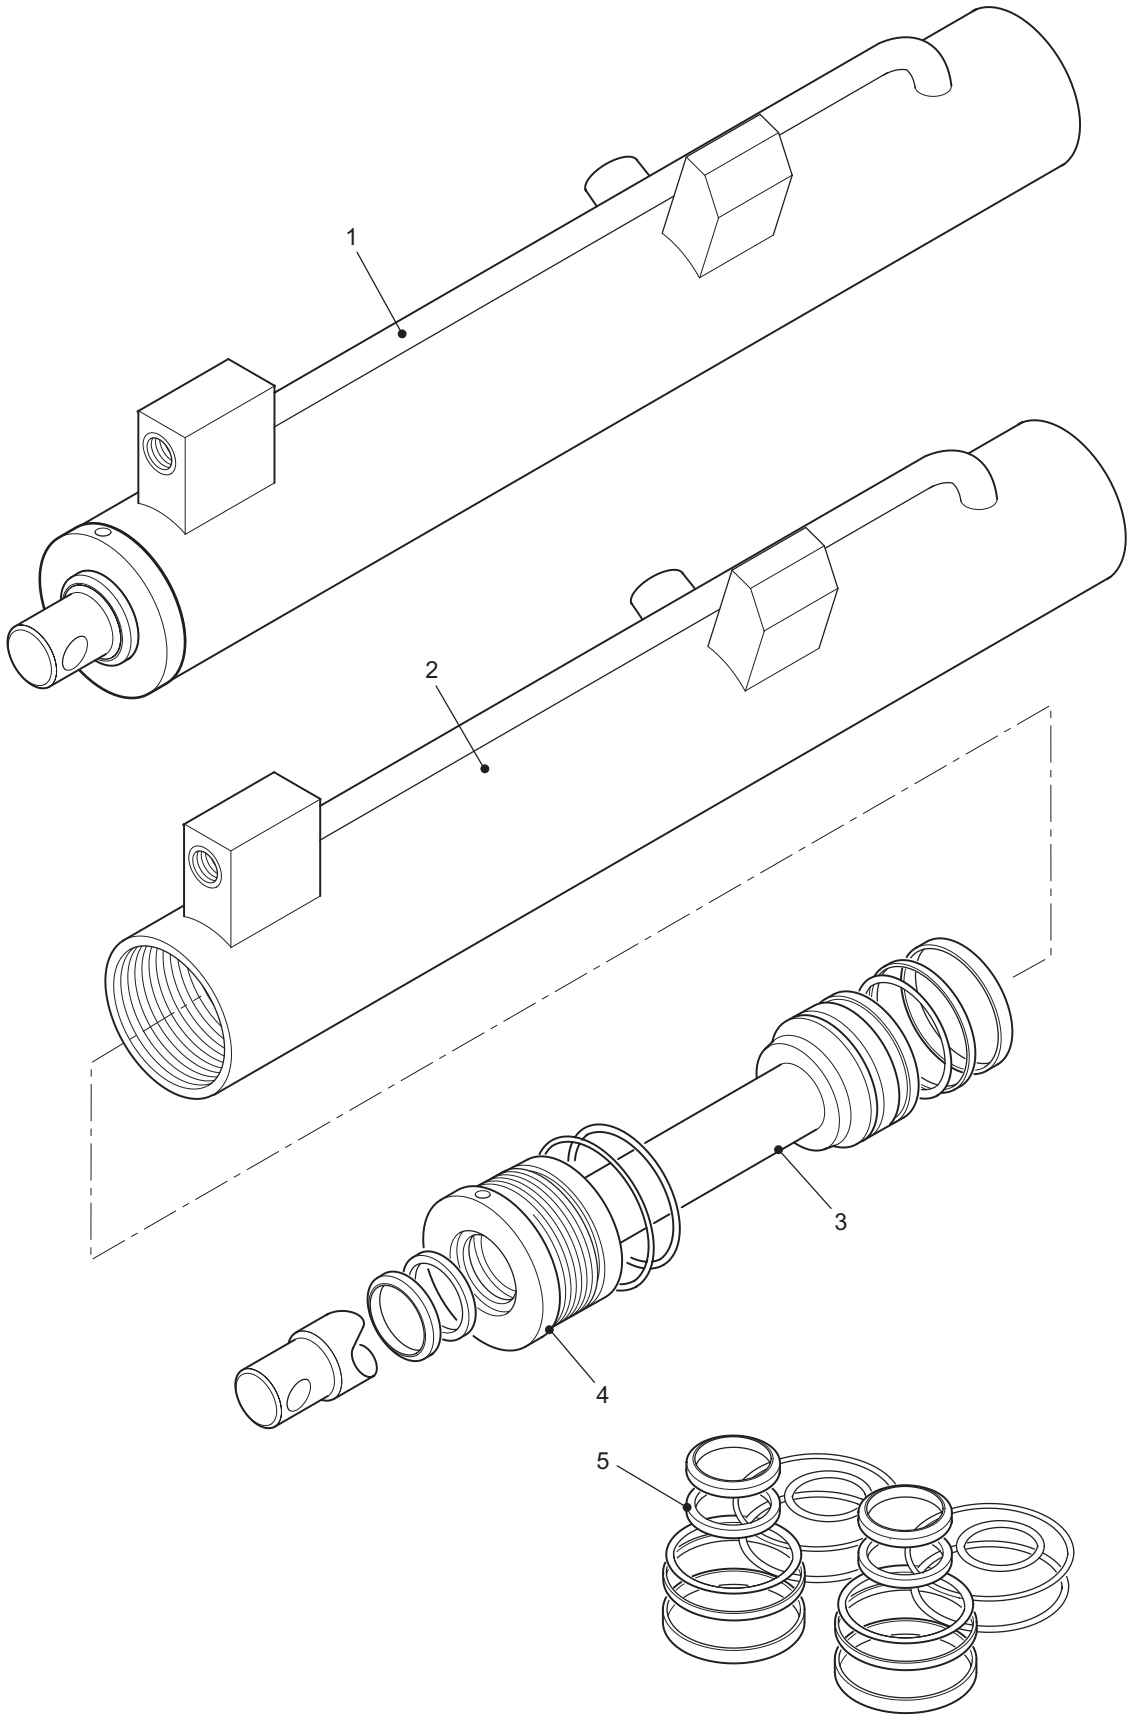


https://www.pdfmanual4trucks.com/

Quick Attach Cylinder

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	92420.9	Quick Attach Cylinder	Pos. 2 to 5		1
2	NAP	Cylinder body	Order now 92420.9		1
3	92645.1	Spindle			2
4	66392.2	Nut			2
5	66362.5	Seal kit			1

https://www.pdfmanual4trucks.com/

Frame Level Cylinder

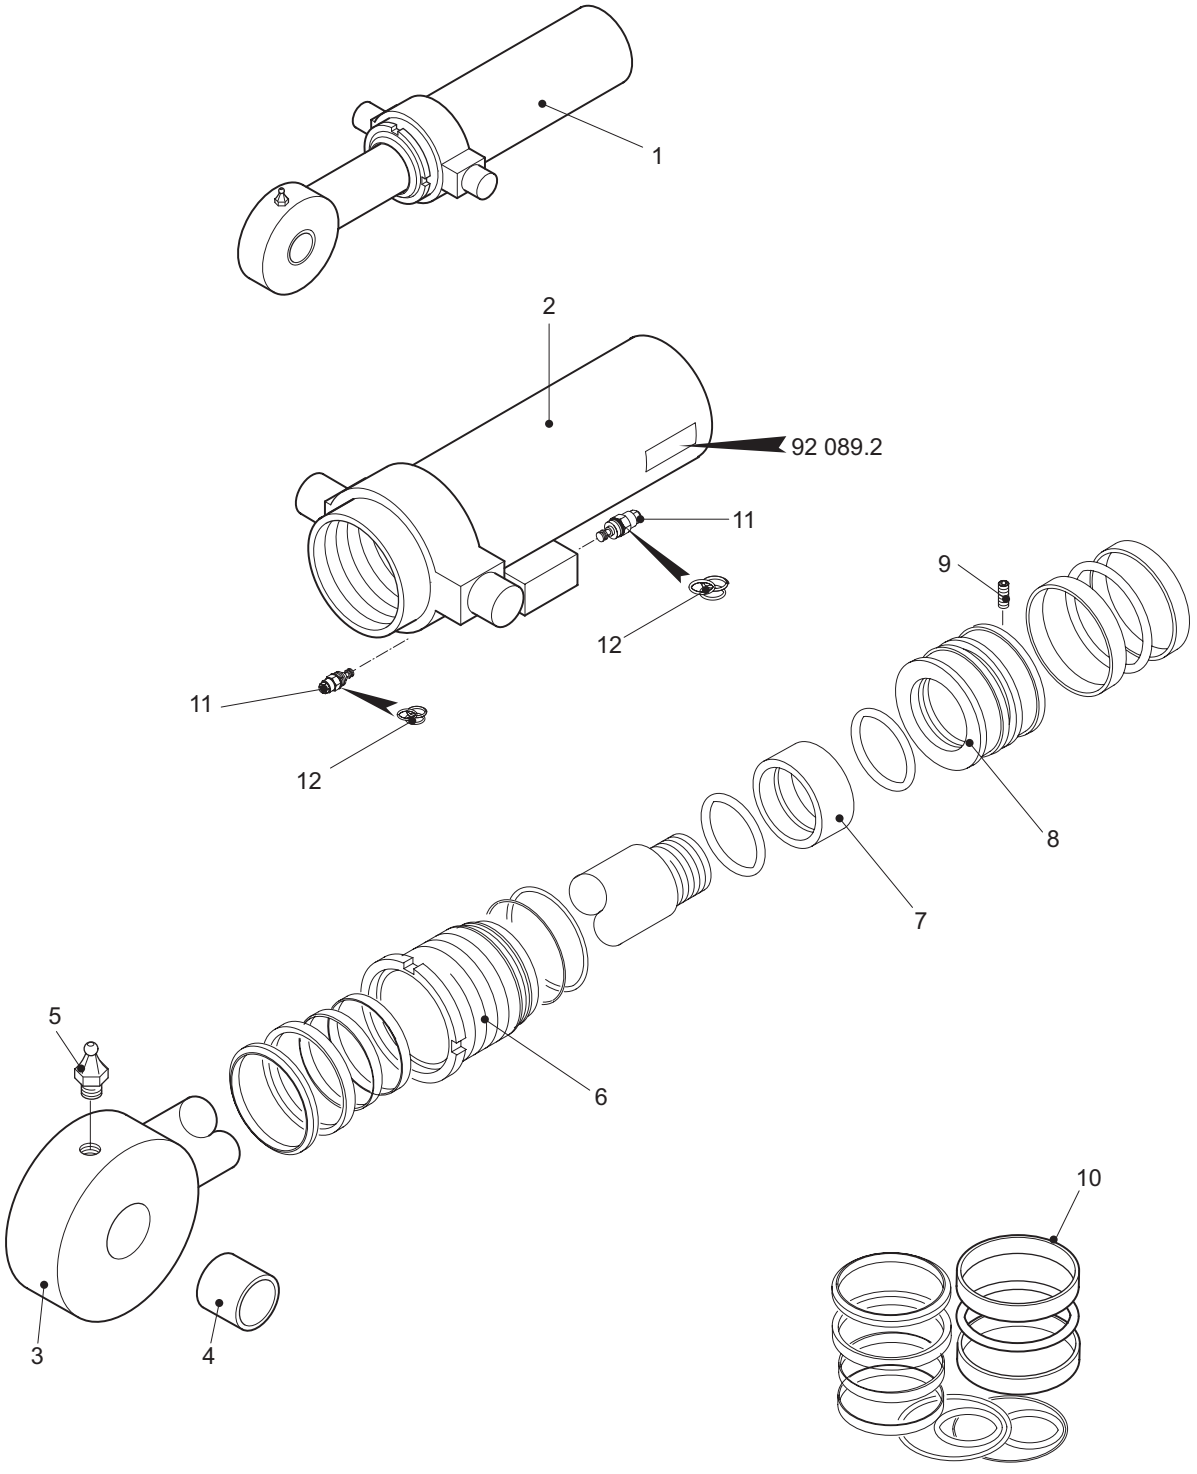

SPC003060


https://www.pdfmanual4trucks.com/

Frame Level Cylinder

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	92089.2	Frame Level Cylinder Assembly	Pos. 2 to 12		1
2	93982.7	Cylinder Barrel			1
3	93983.5	Rod			1
4	75181.8	Bushing			1
5	93683.1	Grease nipple			1
6	93984.3	Head			1
7	93986.8	Spacer			1
8	93985.0	Piston			1
9	93682.3	Screw			1
10	93981.9	Seal Kit			1
11	100377-32D	Valve			2
12	100496-04H	Seal Kit			1

https://www.pdfmanual4trucks.com/

Hydraulic Motor
for cooler fan

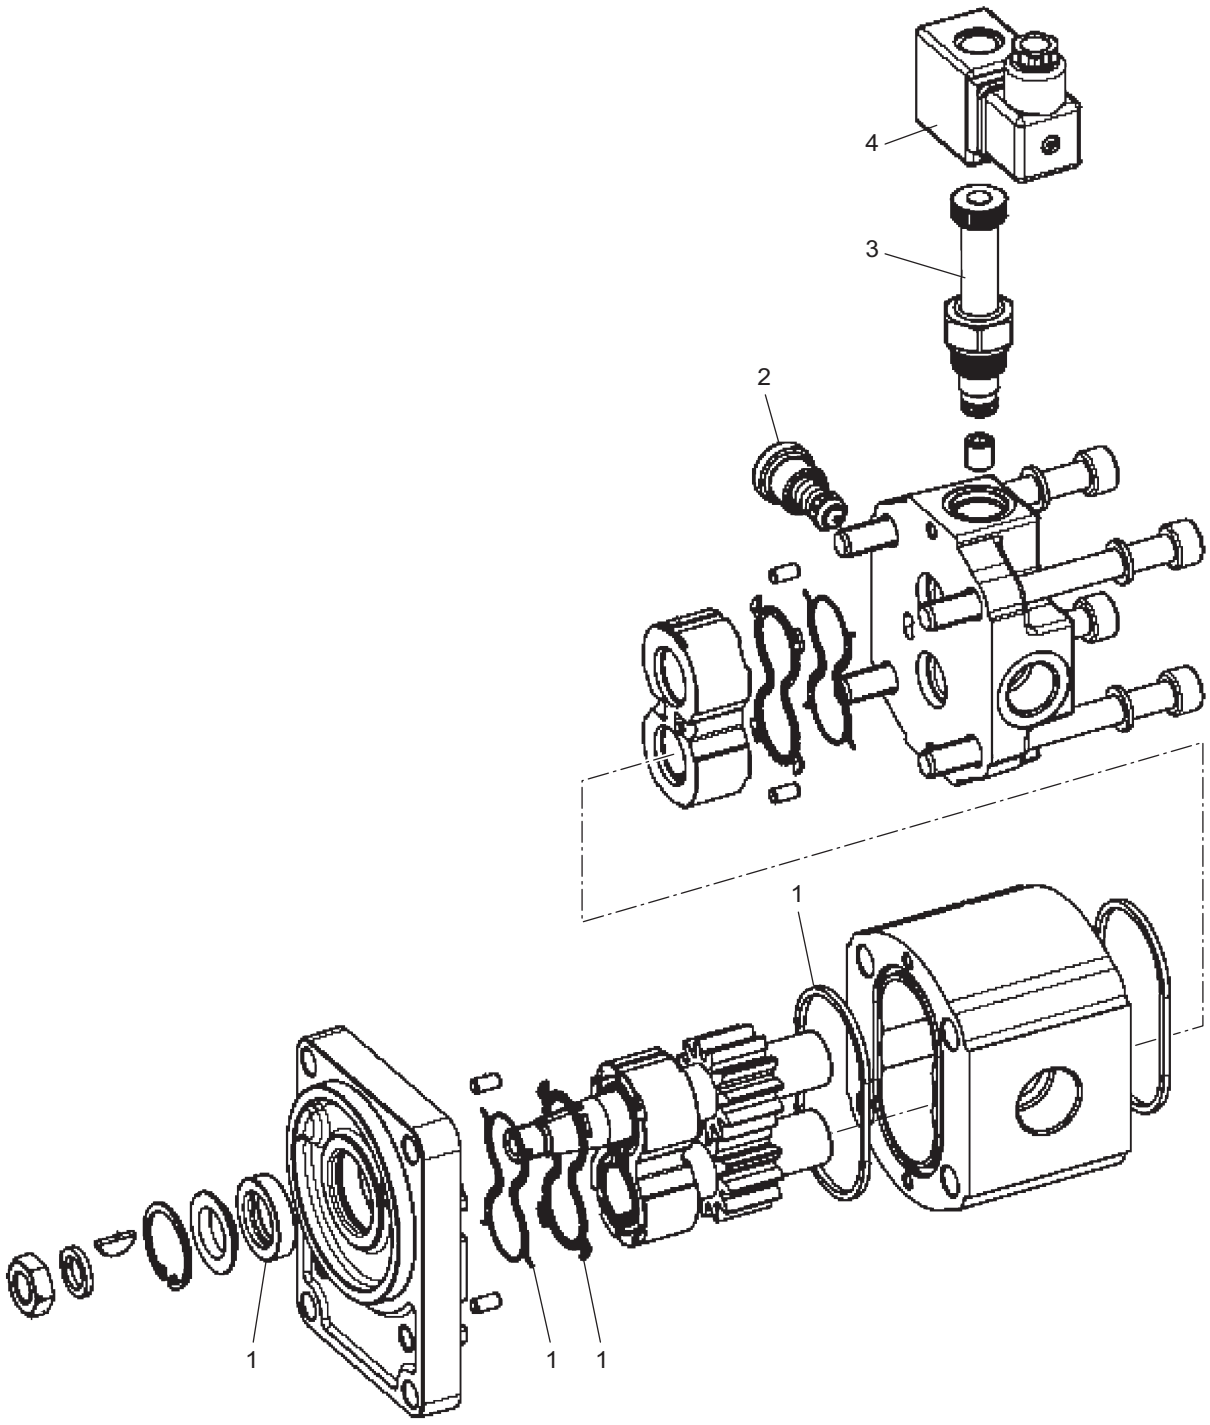

SPC003017


https://www.pdfmanual4trucks.com/

Hydraulic Motor
for cooler fan

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6909809	Hydraulic motor (2 speed)			1
1	6912538	Set of seals			1
2	6912539	Valve			1
3	6912540	Valve			1
4	6912541	Coil			1

https://www.pdfmanual4trucks.com/

Hydraulic Pump Installation

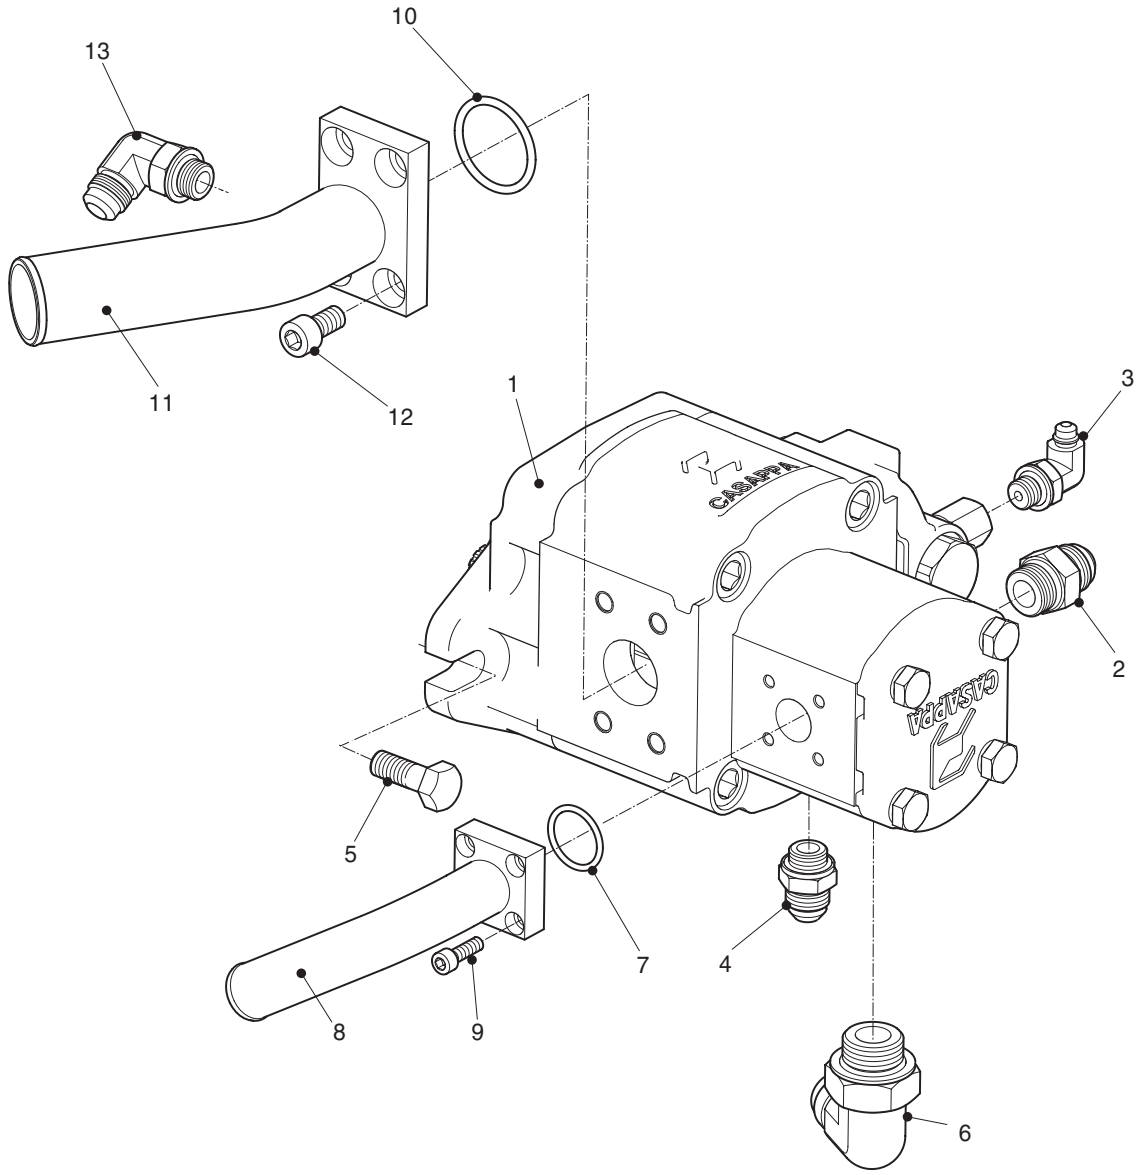

SPC003091


https://www.pdfmanual4trucks.com/

Hydraulic Pump Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6909447	Hydraulic pump			1
2	014375-30H	Adapter			1
3	015370-11P	Elbow			1
4	100375-38S	Adapter			1
5	26160.2	Screw			2
6	100370-31R	Elbow union			1
7	93049.5	O-ring			1
8	6908091	Flange			1
9	10167.5	Screw			4
10	92637.8	O-ring			1
11	6911767	Flange			1
12	10662.5	Screw			4
13	010370-94B	Elbow			1

https://www.pdfmanual4trucks.com/

Hydraulic Pump Assy

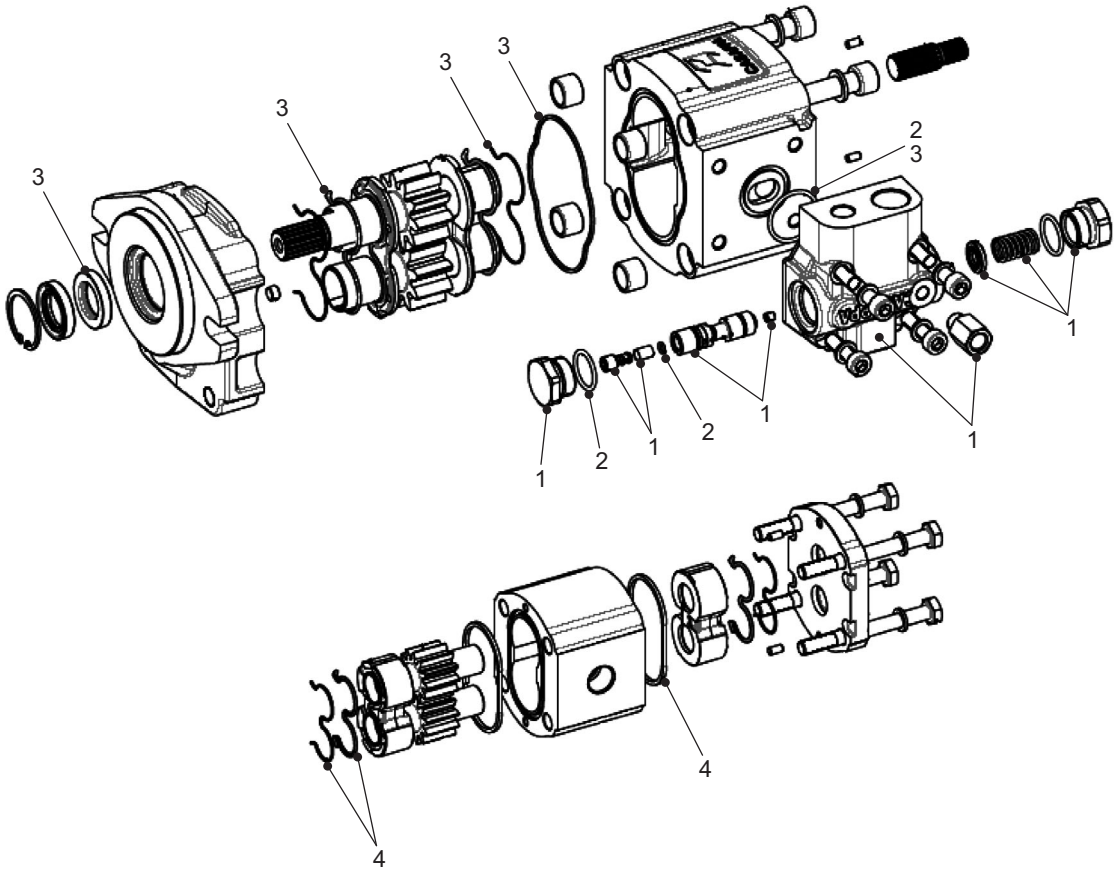

SPC003029


https://www.pdfmanual4trucks.com/

Hydraulic Pump Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6909447	Hydraulic pump			1
1	6912522	Valve	Includes pos. 2		1
2	6912523	Set of seals for valve			1
3	6912524	Set of seals			1
4	6912525	Set of seals			1

https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Fixations

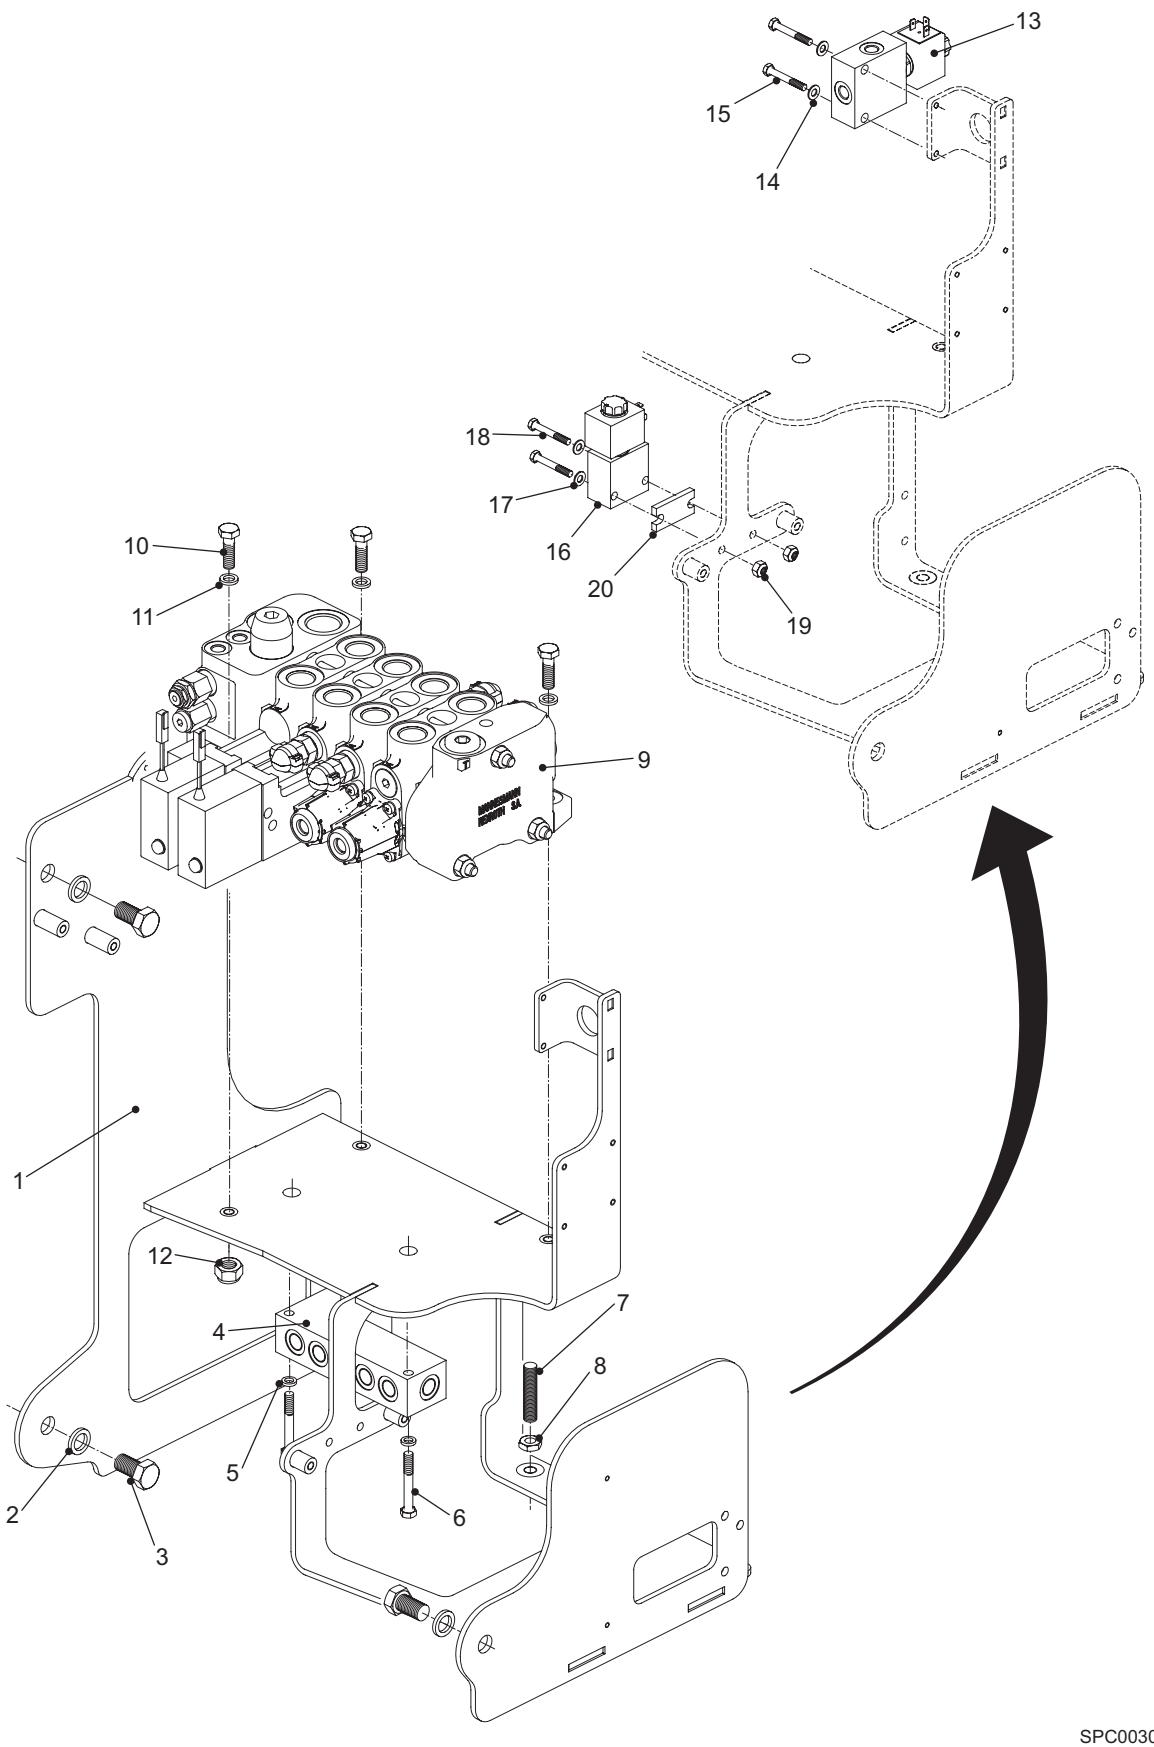


https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Fixations

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6915387	Support	Was 6910153		1
2	89518.5	Washer			3
3	10882.9	Screw			3
4	6910660	Hydraulic block			1
5	89519.3	Washer			2
6	10947.0	Screw			2
7	88946.9	Screw			1
8	01683.2	Nut			1
9	6912484	Hydr. control valve assy	For details, see page 149		1
10	01608.9	Screw			3
11	89516.9	Washer			3
12	100345-09A	Nut			3
13	6910208	Valve			1
14	94574.1	Washer			2
15	000326-25M	Screw			2
16	6911845	Valve			1
17	000350-01U	Washer			2
18	48829.6	Screw			2
19	100345-06W	Nut			2
20	6912483	Spacer			1

https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Installation

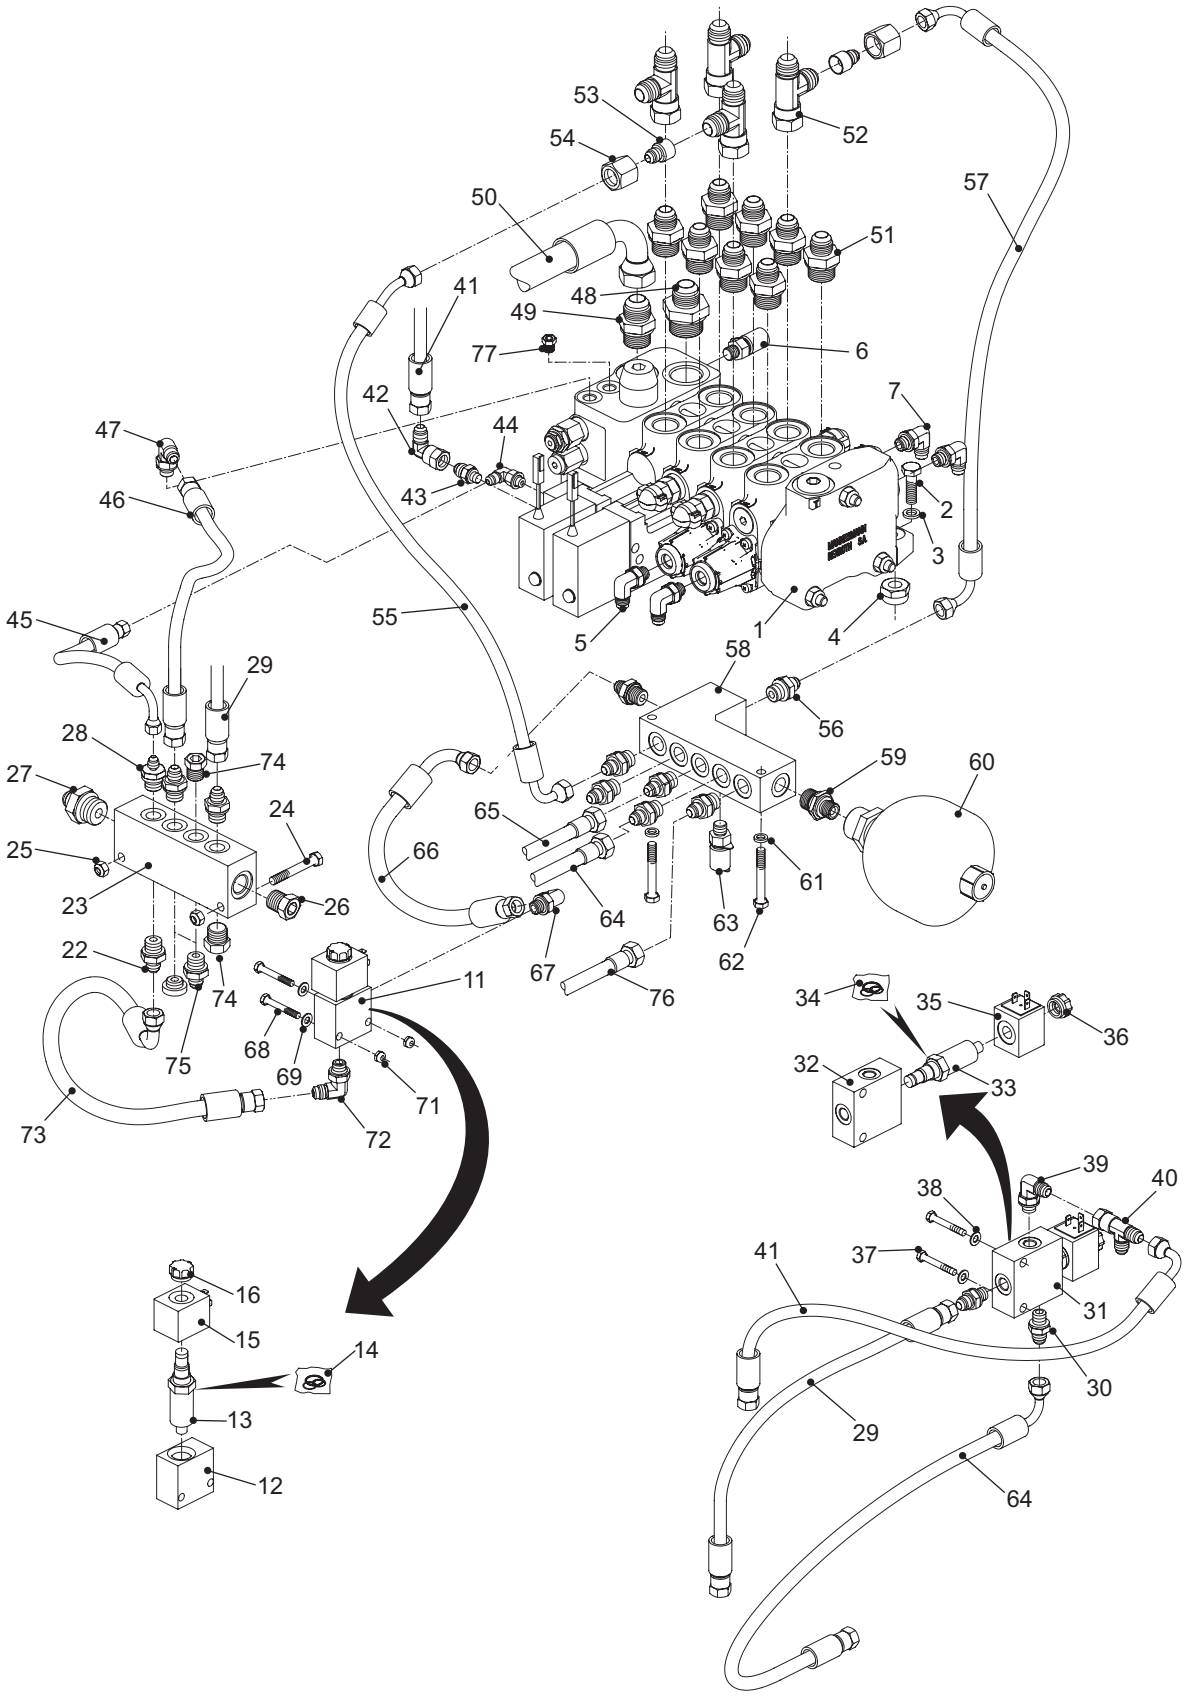

https://www.pdfmanual4trucks.com/


Hydraulic Control Valve Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912484	Hydr. control valve assy			1
2	01608.9	Screw			3
3	89516.9	Washer			3
4	100345-09A	Nut			3
5	100370-18C	Elbow			2
6	54367.8	Pressure Switch			1
7	100370-18C	Elbow			2
11	6911845	Valve	Pos. 12 to 16		1
12	6912530	Block			1
13	6912531	Valve			1
14	6912547	Seals kit			1
15	6912528	Coil			1
16	6912529	Nut			1
22	77013.1	Adapter			3
23	6910822	Collector			1
24	10947.0	Screw			2
25	51851.4	Nut			2
26	69187.3	Plug			1
27	100375-59Q	Union			1
28	65614.0	Union			1
29	6911817	Hose			1
30	022375-31Z	Adapter			2
31	6910208	Valve	Pos. 32 to 36		1
32	6912526	Block			1
33	6912527	Valve			1
34	6912546	Seals kit			1
35	6912528	Coil			1
36	6912529	Nut			1
37	000326-25M	Screw			2
38	94574.1	Washer			2
39	100370-18C	Elbow			1

https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Installation

Recurrence of previous drawing

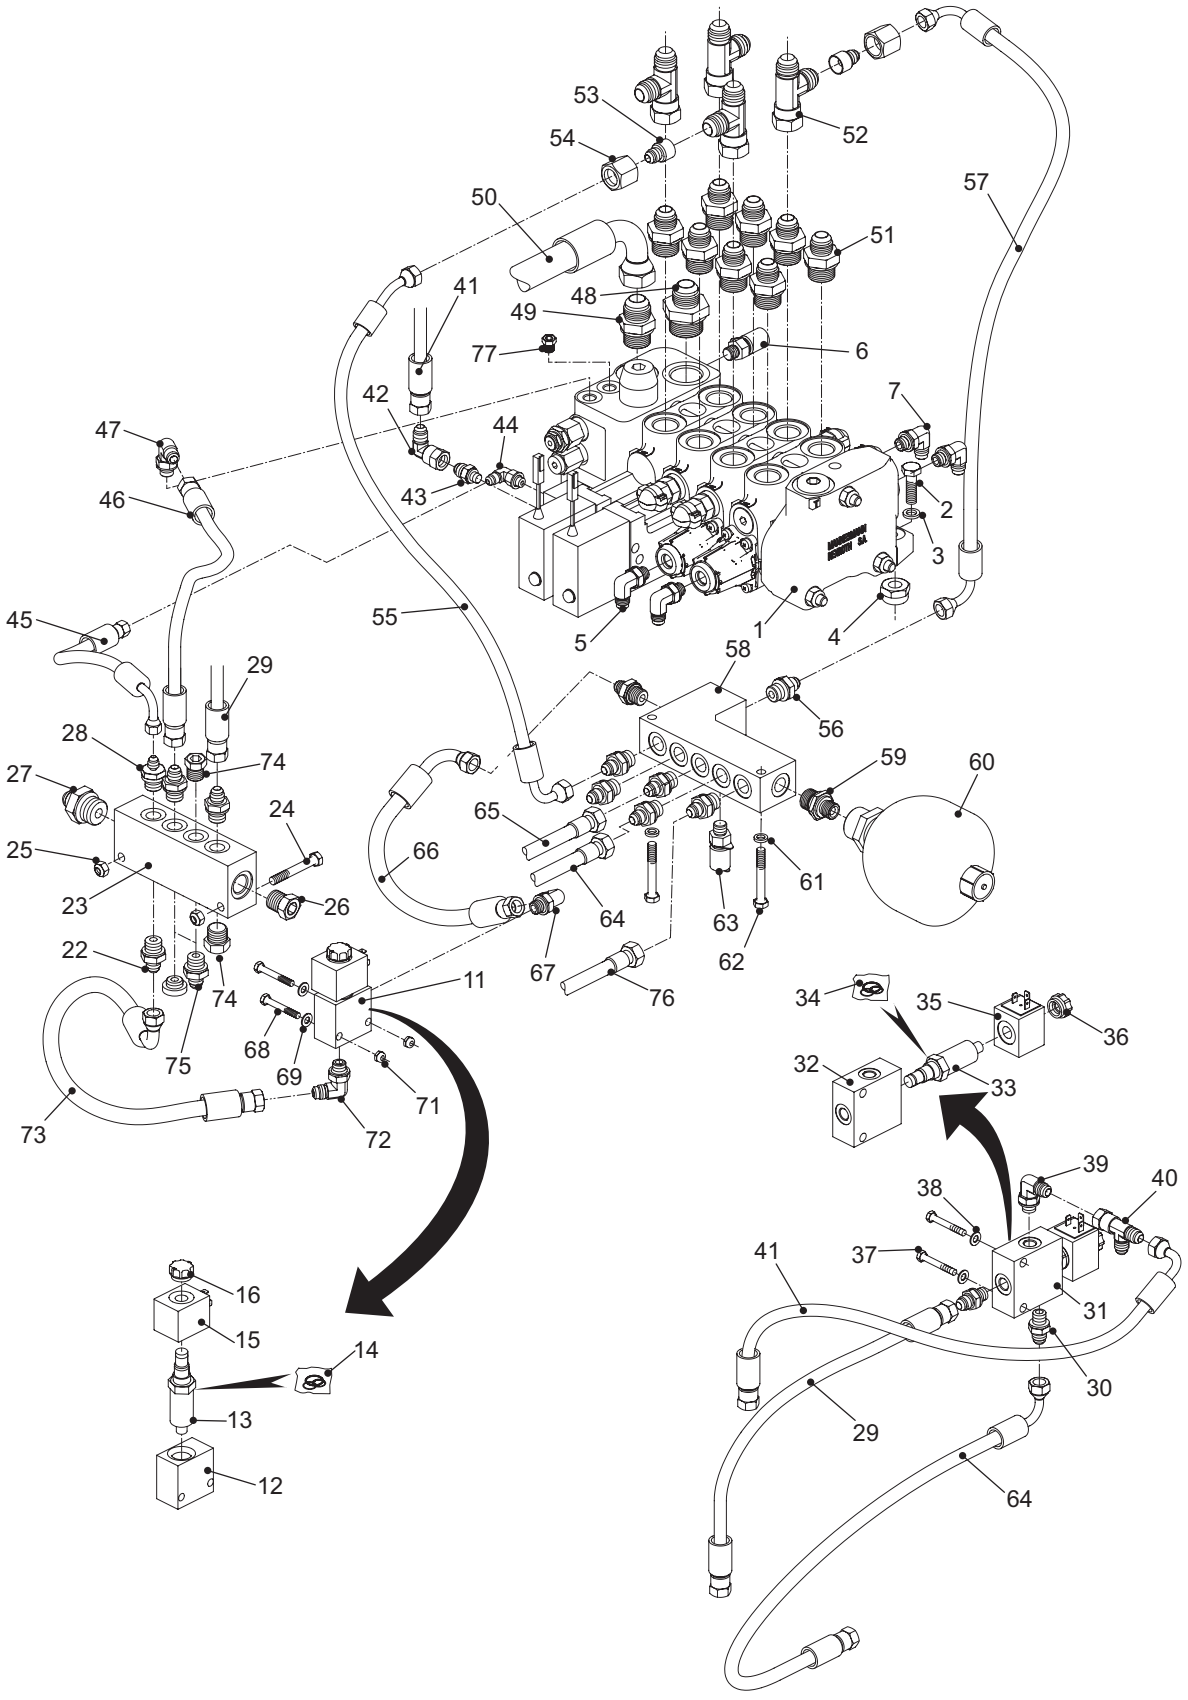

SPC003064

https://www.pdfmanual4trucks.com/


Hydraulic Control Valve Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
40	100372-06G	T- union			1
41	6913655	Hose	Was 6911111		1
42	100370-29P	Fitting			1
43	82181.9	Union			1
44	85955.3	Elbow			1
45	6913658	Hose	Was 6911825		1
46	6911817	Hose			1
47	100370-18C	Elbow			1
48	68609.7	Union			1
49	100375-40U	Adapter			1
50	6910390	Hose			1
51	014375-02C	Union			8
52	008372-28F	T- union			4
53	65236.2	Adapter			2
54	014345-13D	Nut			2
55	6912467	Hose			1
56	77013.1	Adapter			7
57	6912467	Hose			1
58	6910660	Hydraulic block			1
59	014375-69A	Union			1
60	6911487	Accumulator			1
61	89519.3	Washer			2
62	10947.0	Screw			2
63	54367.8	Pressure Switch			1
64	6913655	Hose	Was 6911111		1
65	6913656	Hose	Was 6912436		1
66	6914033	Hose	Was 85283.0		1
67	100370-18C	Elbow			1
68	48829.6	Screw			2
69	000350-01U	Washer			2
71	100345-06W	Nut			2

https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Installation

Recurrence of previous drawing

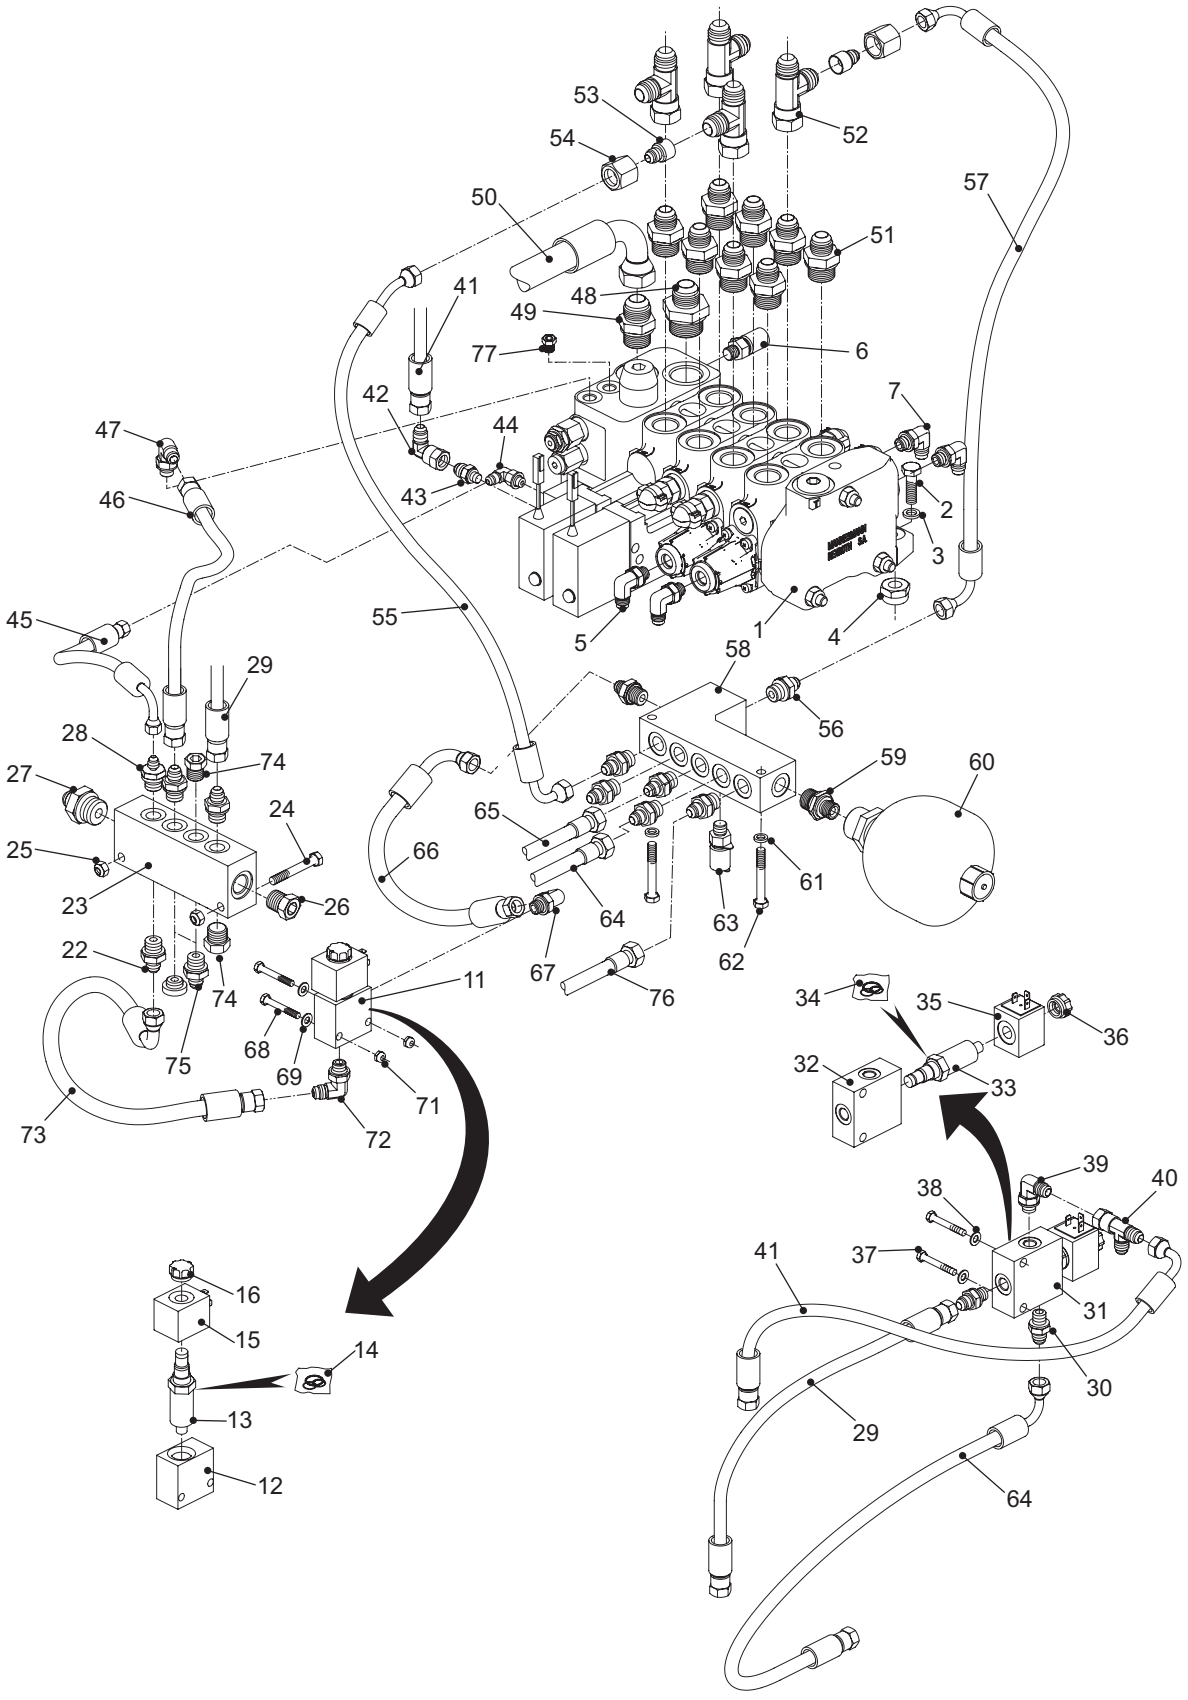

SPC003064


https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
72	100370-18C	Elbow			1
73	85283.0	Hose			1
74	56029.2	Plug			2
75	77013.1	Adapter			2
76	6910160	Hose			1
77	56028.4	Plug			1
78	00581.9	Ring			1
79	00580.1	Ring			1
80	022375-31Z	Adapter			1

https://www.pdfmanual4trucks.com/

Hydraulic Control Valve: In- and Outlet

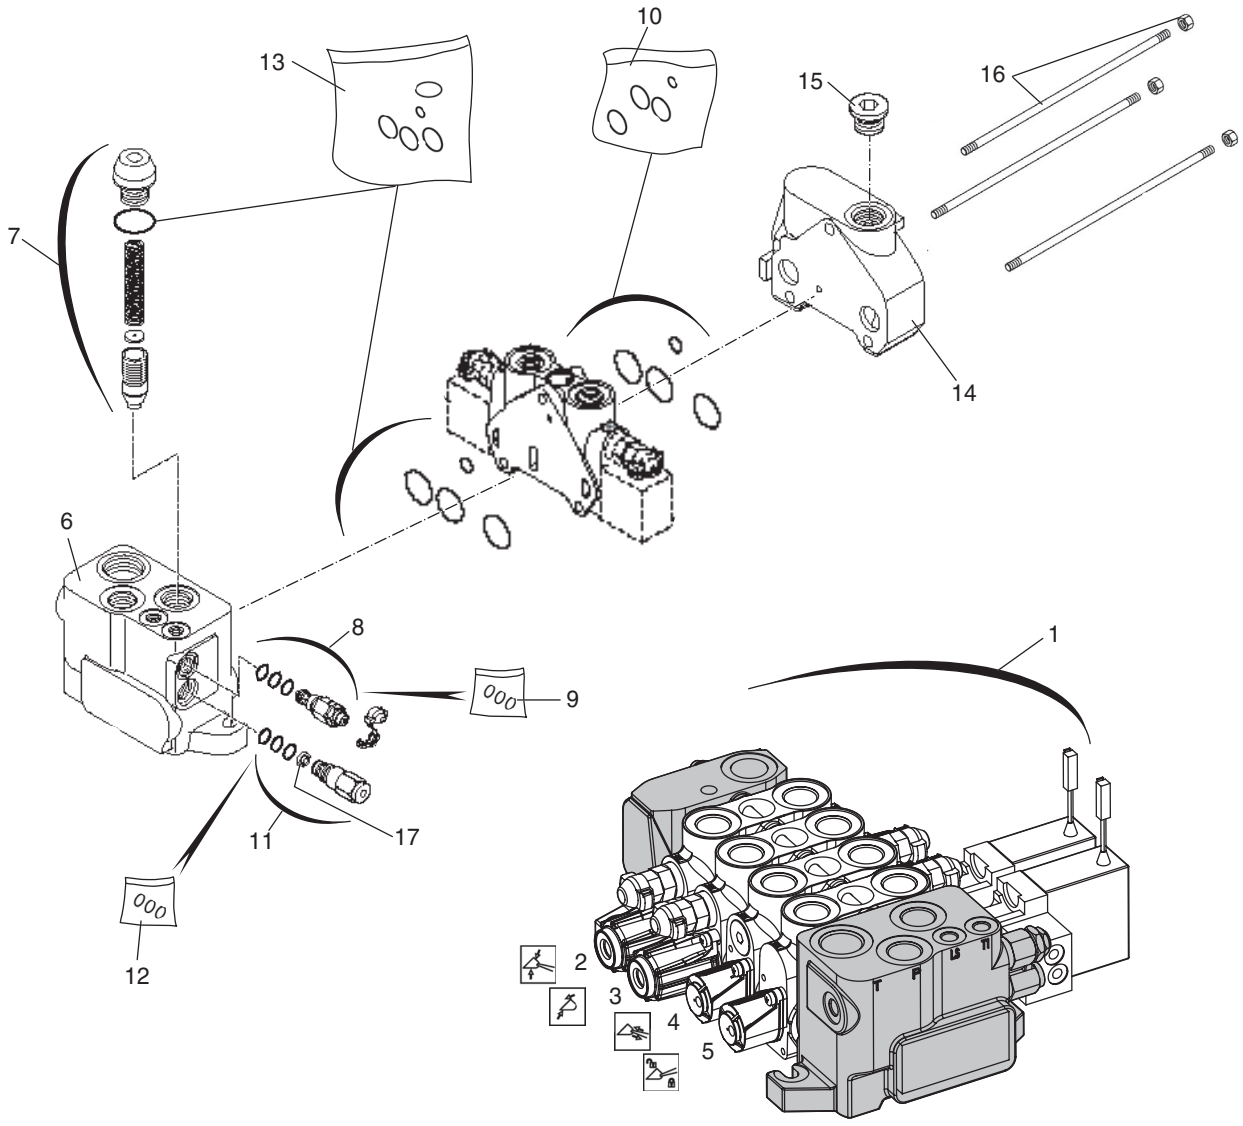

SPC003066


https://www.pdfmanual4trucks.com/

Hydraulic Control Valve: In- and Outlet

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912484	Hydr. control valve assy	See "Hydraulic Control Valve Installation" ; For details, see page 149		1
2	6910749	Lifting element	For details, see page 157		1
3	6910748	Tilting element	For details, see page 159		1
4	6910745	Telescope element	For details, see page 161		1
5	6910743	Equipment element	For details, see page 163		1
6	6910742	Inlet element			1
7	6910704	Regulation kit			1
8	97300.8	Pressure relief valve	265 bar ; Includes Pos. 9		1
9	6910708	Set of seals			1
10	97295.0	Set of seals			1
11	6910705	Flow regulator	Includes Pos. 12 + 17		1
12	6910708	Set of seals			1
13	6910710	Set of seals			1
14	6910706	Outlet element			1
15	6910709	Pipe thread plug			1
16	6910707	Tie rod kit			1
17	97297.6	Filter			1

https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Lift Section

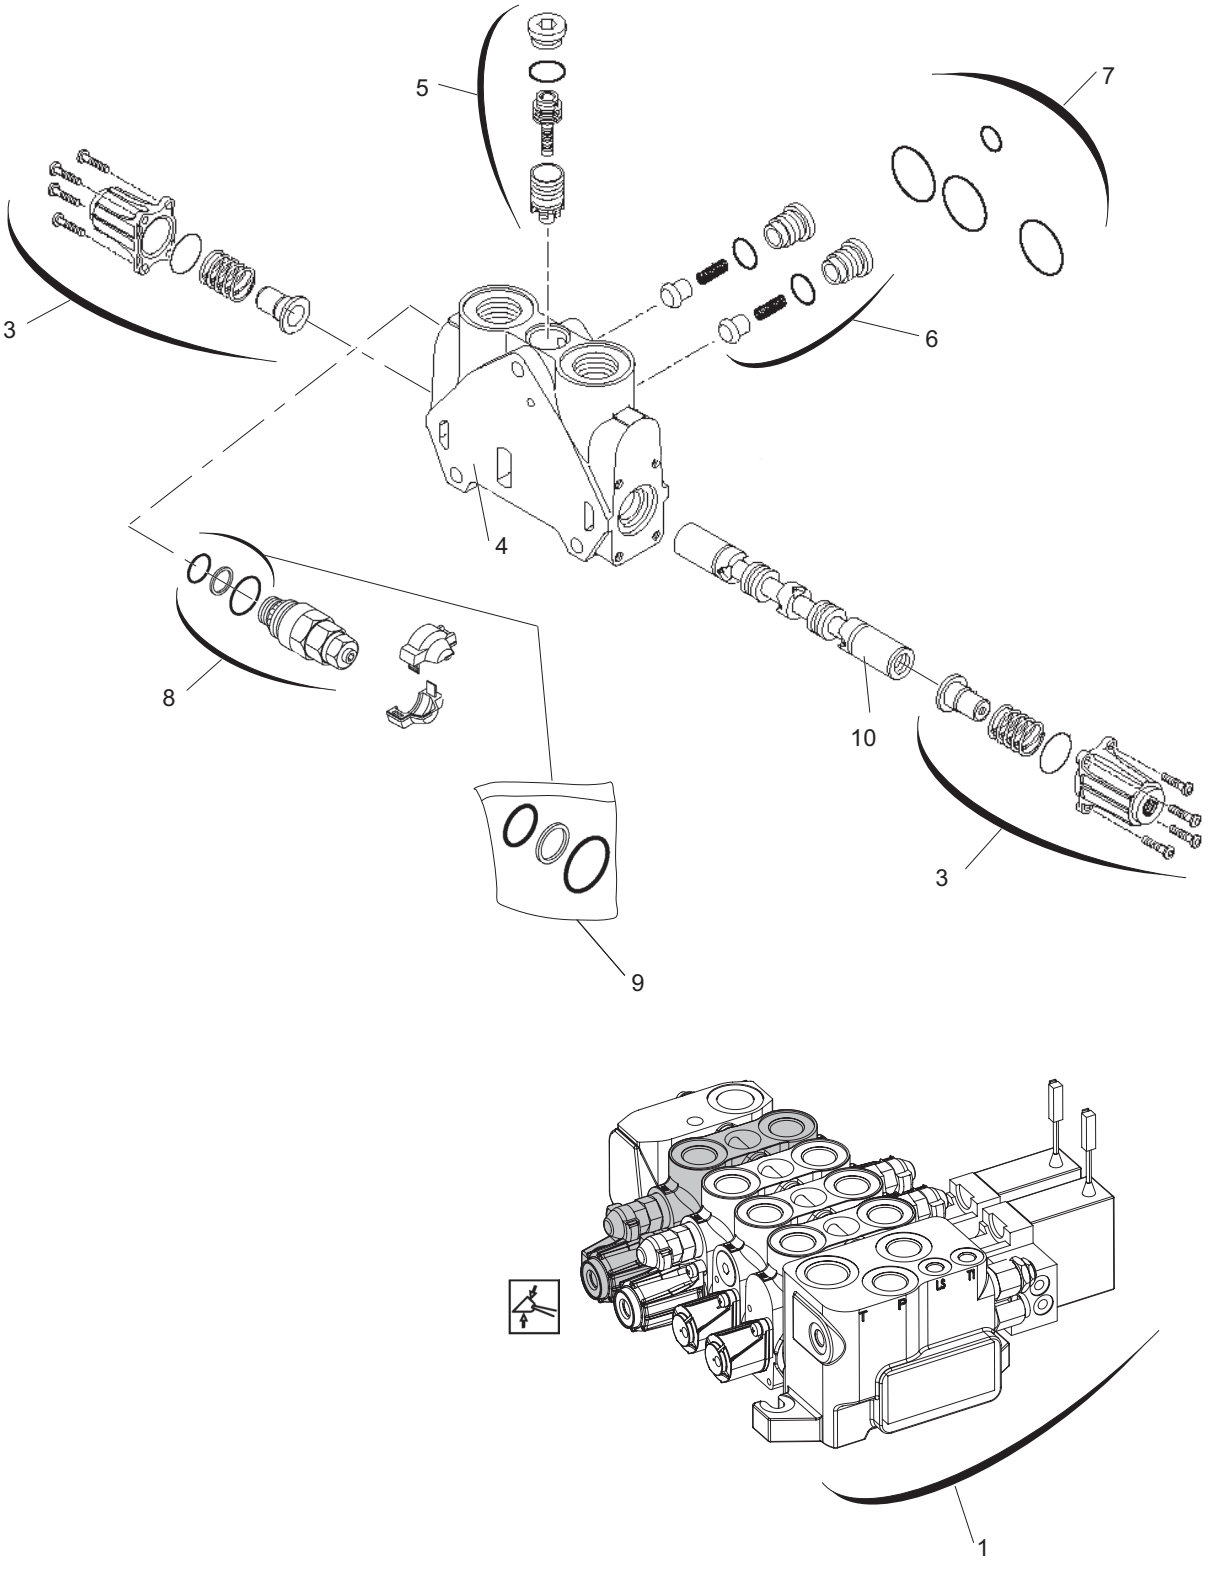


https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Lift Section

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912484	Hydr. control valve assy	See "Hydraulic Control Valve Installation" ; For details, see page 149		1
3	6910712	Hydraulic operation			2
4		Valve			1
5	97302.4	Pressure compensator kit			1
6	97303.2	No return valve kit			2
7	97295.0	Set of seals			1
8	54090.6	Pressure relief valve	275 bar ; Includes Pos. 9		1
9	6910713	Set of seals			1
10		Valve spool			1

https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Tilt Section

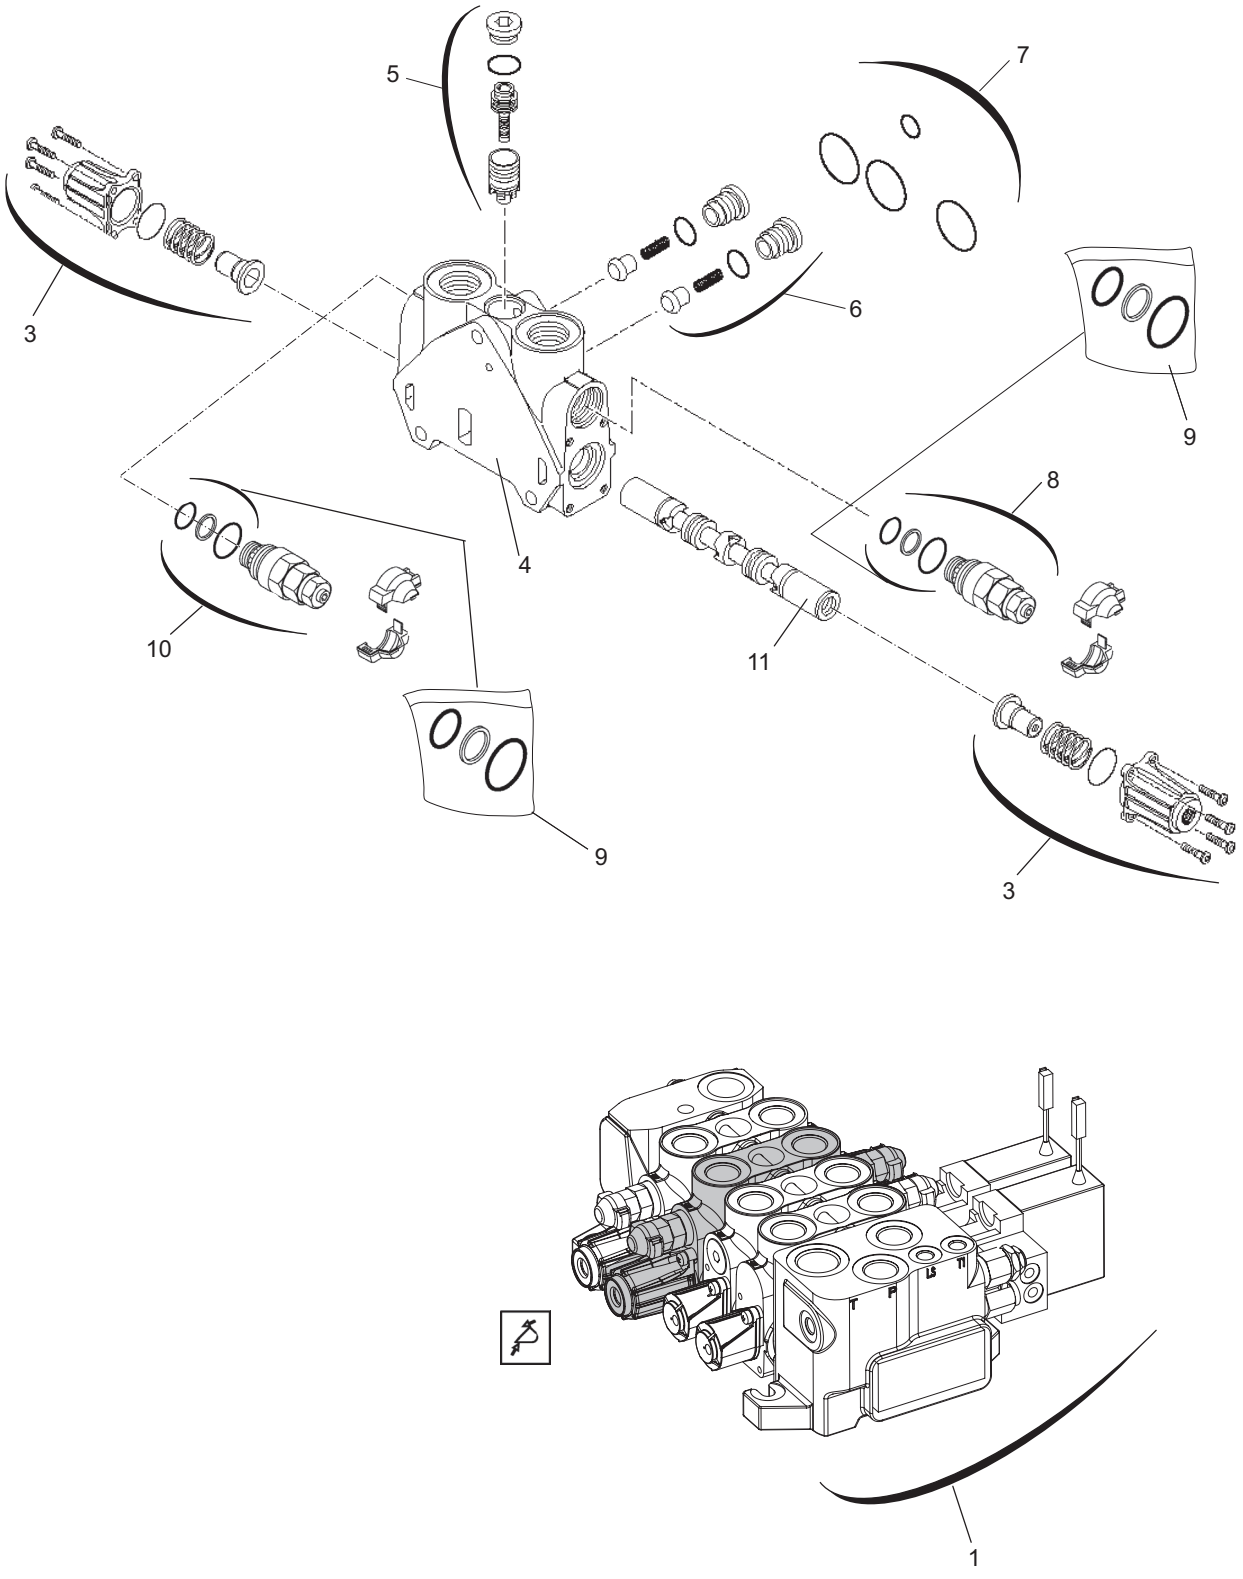

SPC003068


https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Tilt Section

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912484	Hydr. control valve assy	See "Hydraulic Control Valve Installation" ; For details, see page 149		1
3	6910712	Hydraulic operation			2
4		Valve			1
5	97302.4	Pressure compensator kit			1
6	97303.2	No return valve kit			2
7	97295.0	Set of seals			1
8	54090.6	Pressure relief valve	210 bar ; Includes Pos. 9		1
9	6910713	Set of seals			2
10	54090.6	Pressure relief valve	250 bar ; Includes Pos. 9		1
11		Valve spool			1

https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Telescope Section

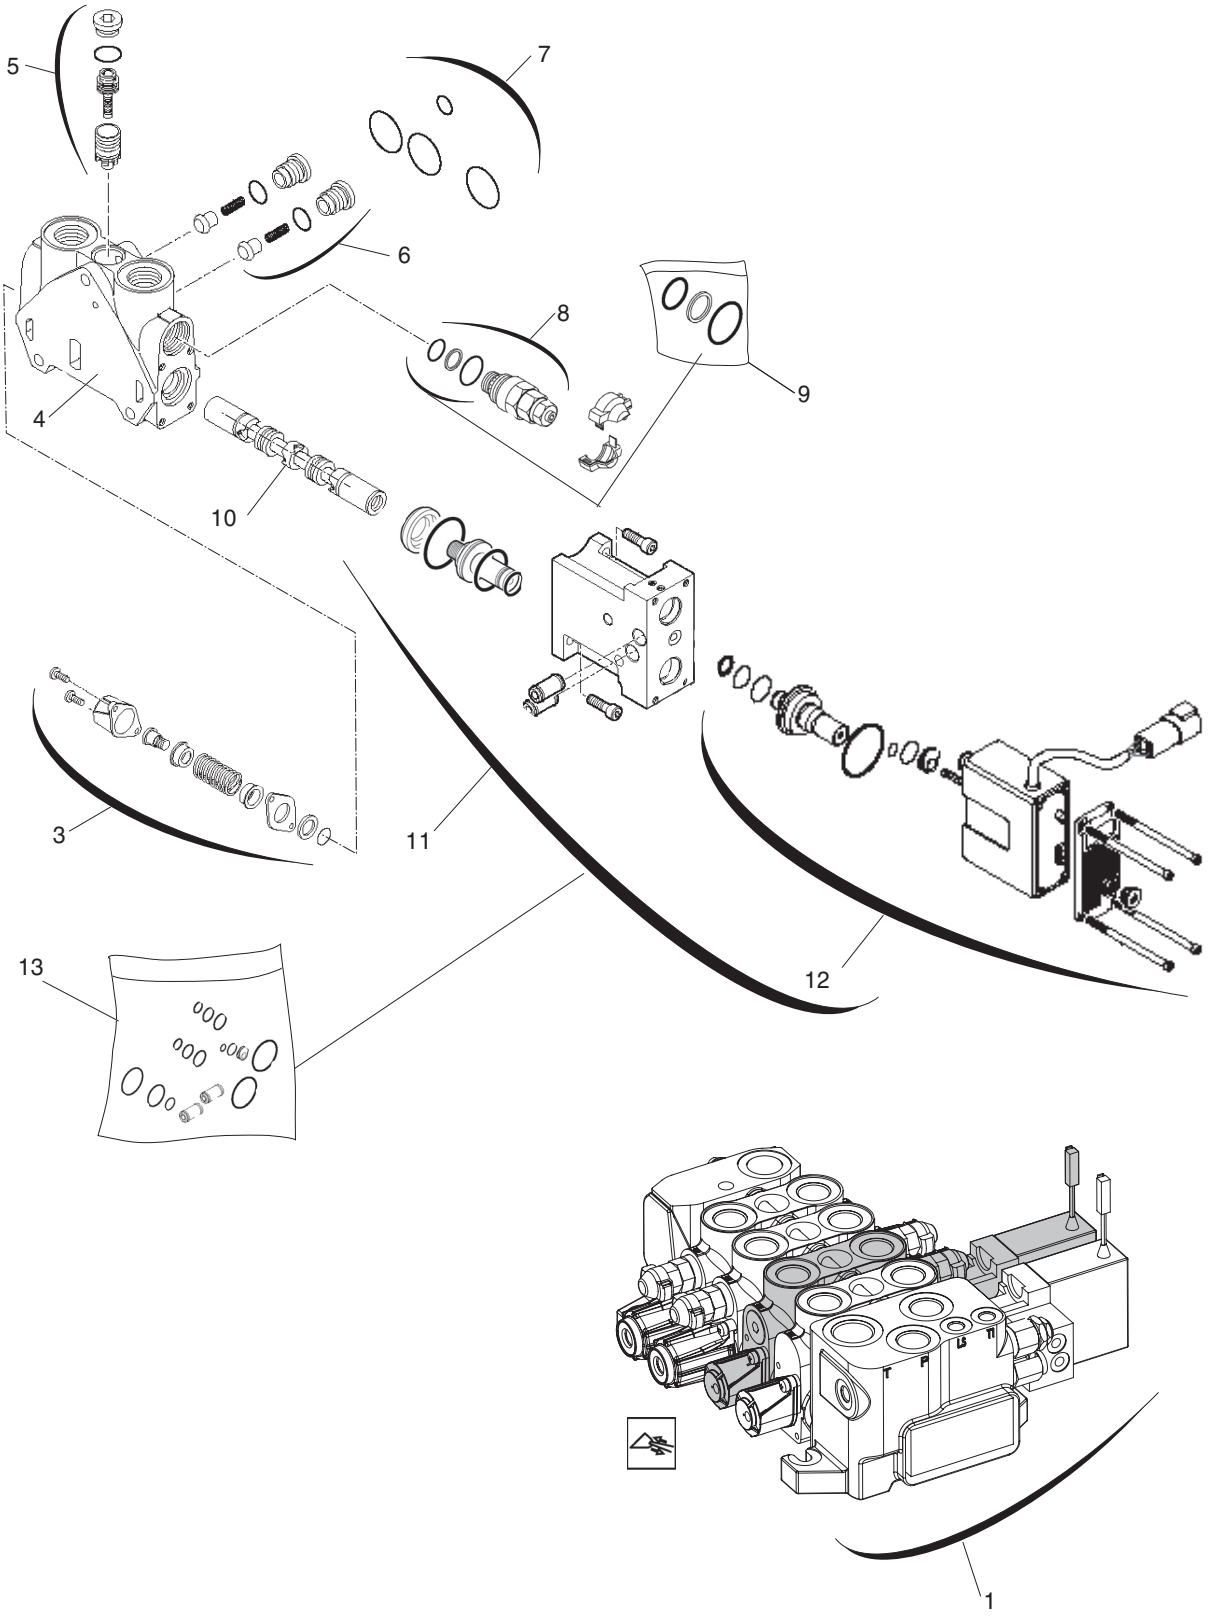


https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Telescope Section

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912484	Hydr. control valve assy	See "Hydraulic Control Valve Installation" ; For details, see page 149		1
3	6910714	Spool return			1
4		Valve			1
5	97302.4	Pressure compensator kit			1
6	97303.2	No return valve kit			2
7	97295.0	Set of seals			1
8	54090.6	Pressure relief valve	250 bar ; Includes Pos. 9		1
9	6910713	Set of seals			1
10		Valve spool			1
11	6910716	Electrohydro. actuation	Includes Pos. 13		1
12	6910715	Electrohydro. Interface			1
13	6910717	Set of seals			1

https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Auxiliary Hydraulics Section

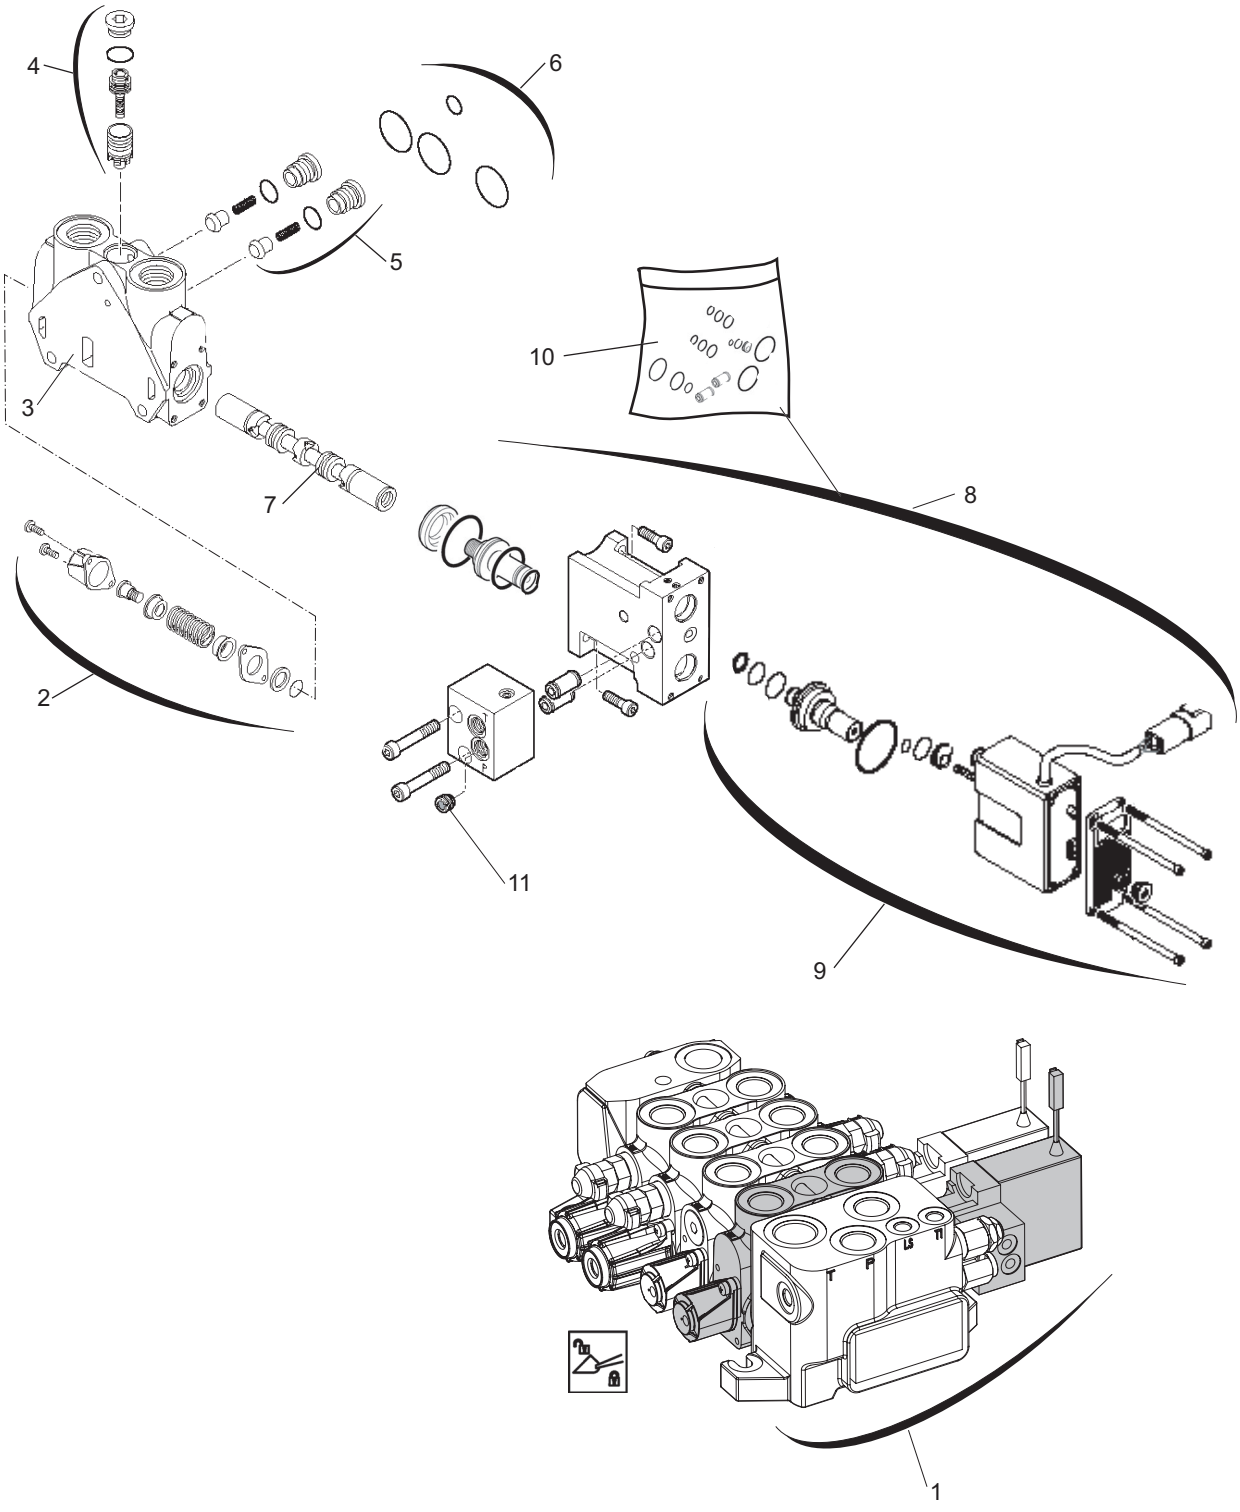

SPC003070


https://www.pdfmanual4trucks.com/

Hydraulic Control Valve Auxiliary Hydraulics Section

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912484	Hydr. control valve assy	See "Hydraulic Control Valve Installation" ; For details, see page 149		1
2	6910714	Spool return			1
3		Valve			1
4	97302.4	Pressure compensator kit			1
5	97303.2	No return valve kit			2
6	97295.0	Set of seals			1
7		Valve spool			1
8	6910718	Electrohydro. actuation	Includes Pos. 10		1
9	6910715	Electrohydro. Interface			1
10	6910717	Set of seals			1
11	6910719	Filter			1

https://www.pdfmanual4trucks.com/

Hydrostatic Hoses and Fittings

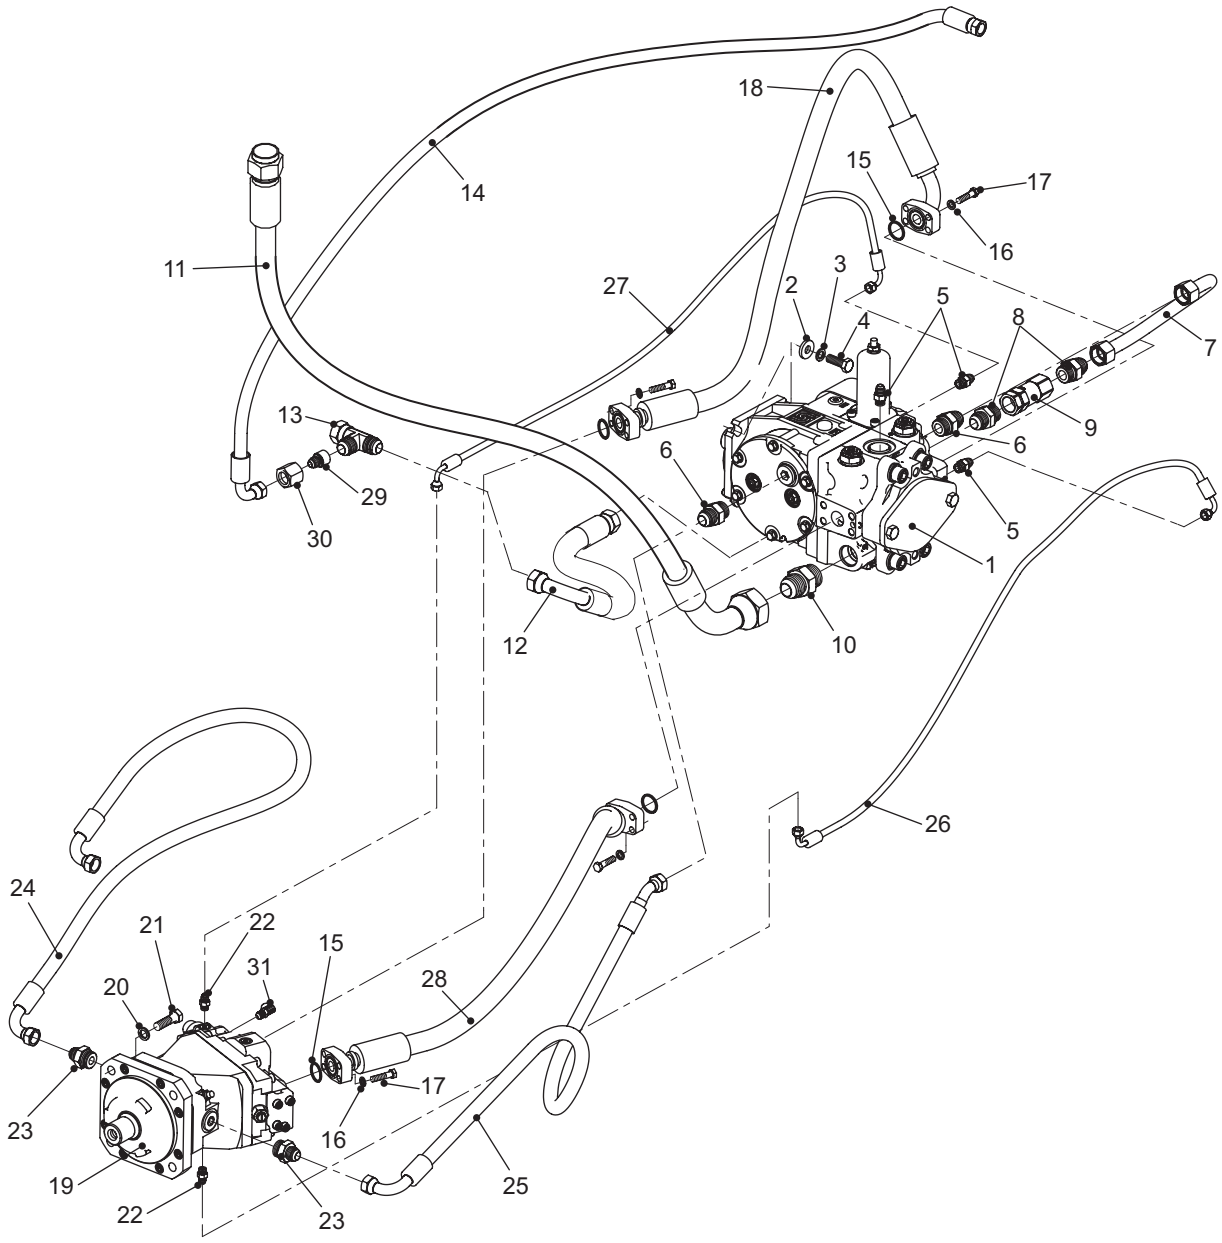

SPC004005

https://www.pdfmanual4trucks.com/


Hydrostatic Hoses and Fittings

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	NAP	Hydrostatic drive pump	Order now 6913565 ; Was 6910533 ; For details, see page 169	3628 11091 & below + 3629 11008 & below	1
	6913565	Hydrostatic pump	For details, see page 173	3628 11092 & above + 3629 11009 & above	1
2	100454-17G	Washer			4
3	89517.7	Washer			4
4	01613.9	Screw			4
5	67046.3	Adapter			3
6	014375-33L	Adapter			2
7	6909780	Pipe			1
8	100375-40U	Adapter			2
9	97880.9	Check valve			1
10	78705.1	Adapter			1
11	6913204	Hose			1
12	6910599	Hose			1
13	008372-34M	T- union			1
14	6910161	Hose			1
15	003304-21D	O-ring			4
16	92210.4	Washer			16
17	28689.8	Screw			16
18	6909745	Hose			1
19	78256.5	Hydrostatic Motor Assy	For details, see page 179		1
20	89518.5	Washer			4
21	100338-18Z	Screw			4
22	67046.3	Adapter			2
23	014375-96E	Connector			2
24	96795.0	Hose	Was 6913659		1
25	6914746	Hose	Was 6908560		1
26	96755.4	Hose			1
27	96756.2	Hose			1
28	6909746	Hose			1
29	100375-15S	Reducer			1
30	100345-34C	Nut			1

https://www.pdfmanual4trucks.com/

Hydrostatic Hoses and Fittings

Recurrence of previous drawing

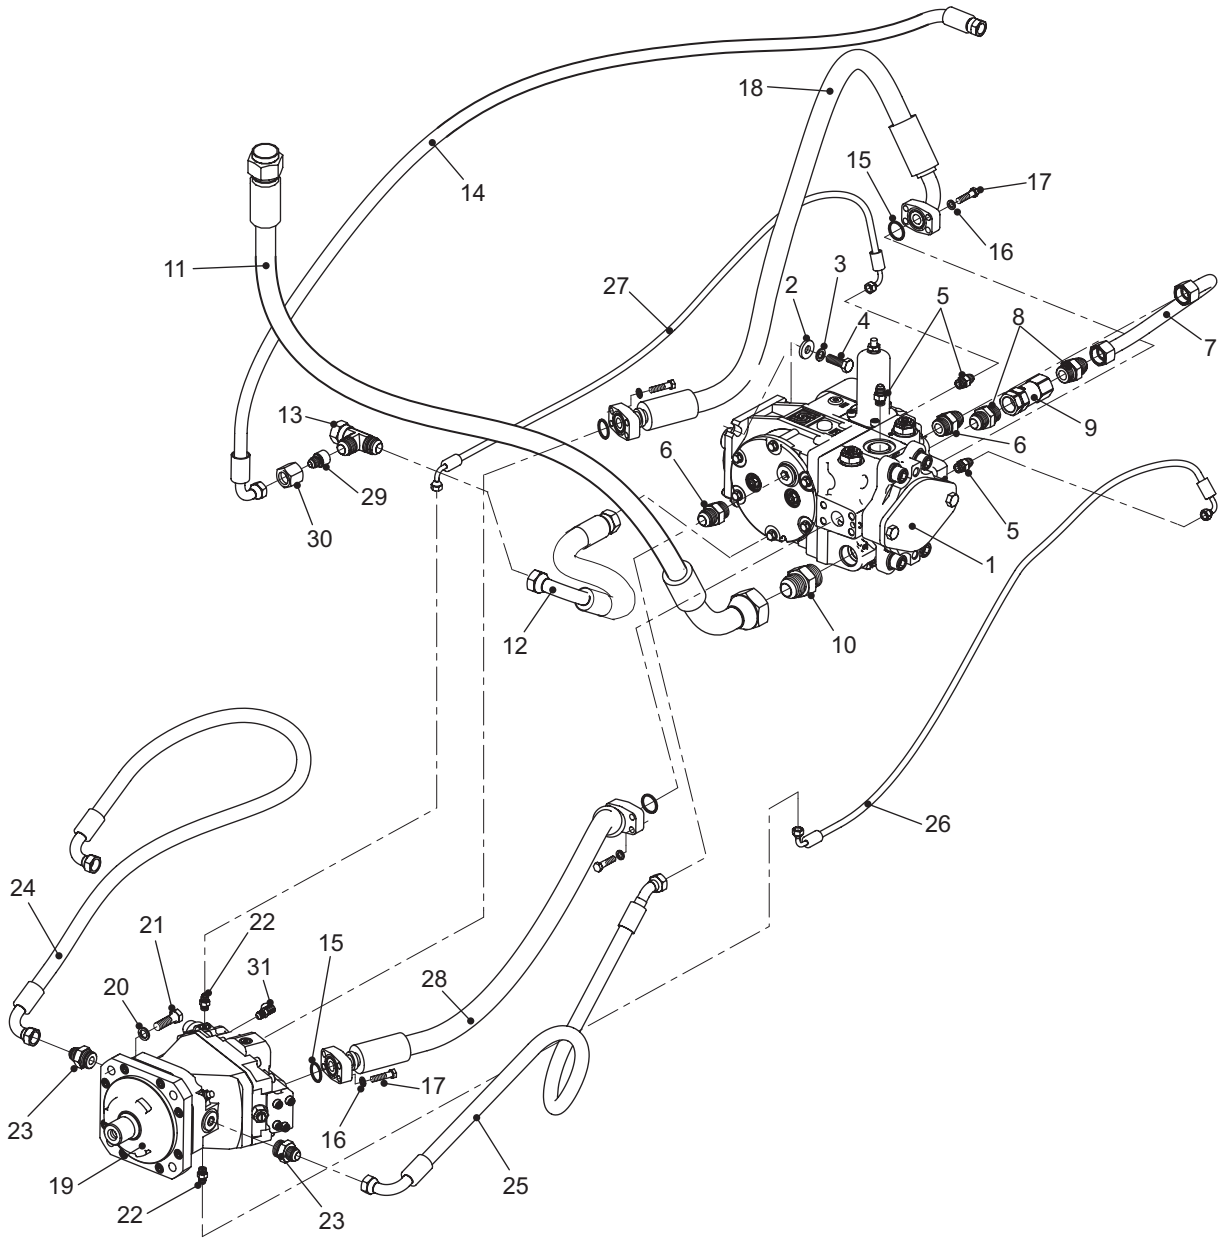

SPC004005


https://www.pdfmanual4trucks.com/

Hydrostatic Hoses and Fittings

Item	Part Number	Denomination	Remarks	Serial Number	Qty
31	72065.6	Pressure switch			1

https://www.pdfmanual4trucks.com/

Hydrostatic Pump Assy
6910533

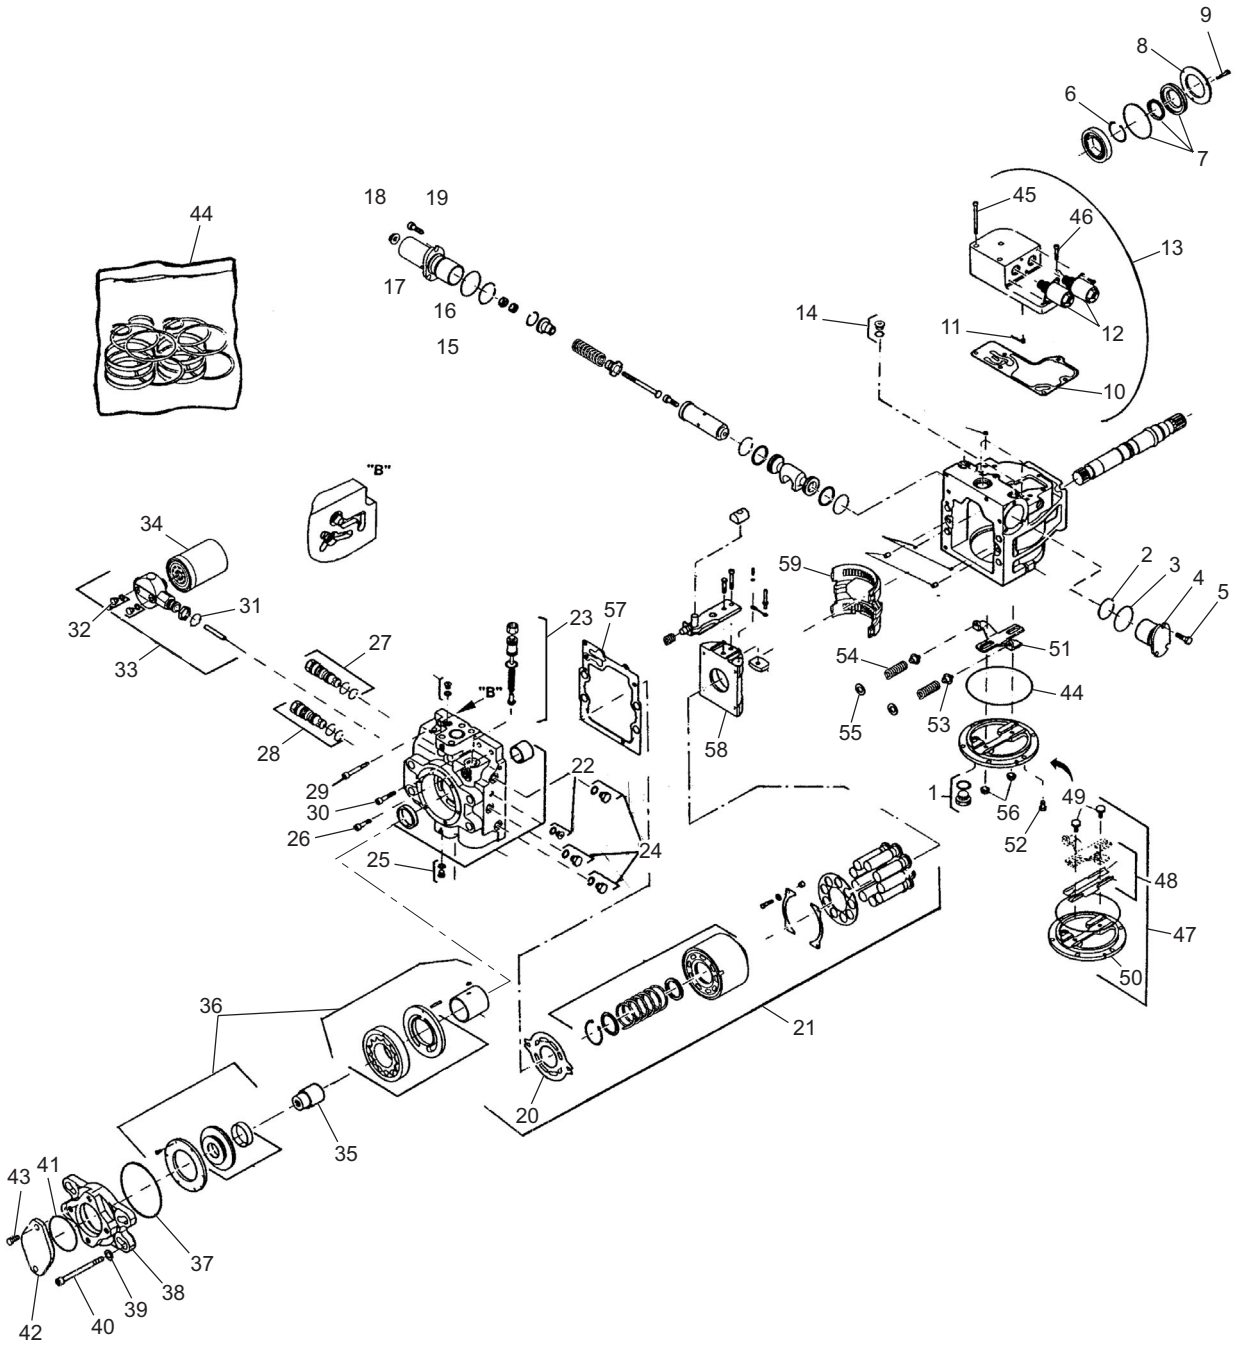

SPC004002

https://www.pdfmanual4trucks.com/


Hydrostatic Pump Assy
6910533

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6910533	Hydrostatic Pump Assy	Pos. 1 to 56	3628 11091 & below + 3629 11008 & below	1
1	71675.3	Plug			1
2	71732.2	Seal			1
3	71733.0	Seal			1
4	71734.8	Housing			1
5	71735.5	Screw			3
6	71702.5	Snap ring			1
7	81421.0	Axle seal kit			1
8	81428.5	Plate			1
9	71706.6	Screw			3
10	81429.3	Seal			1
11	81431.9	Nozzle			1
12	97400.6	Valve	Was 81418.6		2
13	81430.1	Control Block			1
14	71674.6	Plug	Was 71659.7		2
15	71732.2	Seal			1
16	71733.0	Seal			1
17	71736.3	Housing			1
18	71737.1	Seal-lock nut			1
19	71738.9	Screw			3
20	81423.6	Glass			1
21	81420.2	Cylinder block			1
22	71674.6	Plug	Was 71659.7		1
23	81427.7	Valve			1
24	71634.0	Plug			3
25	71674.6	Plug	Was 71659.7		1
26	81424.4	Screw			1
27	81296.6	Valve			1
28	81296.6	Valve			1
29	71753.8	Screw			1
30	81425.1	Screw			1

https://www.pdfmanual4trucks.com/

Hydrostatic Pump Assy
6910533

Recurrence of previous drawing

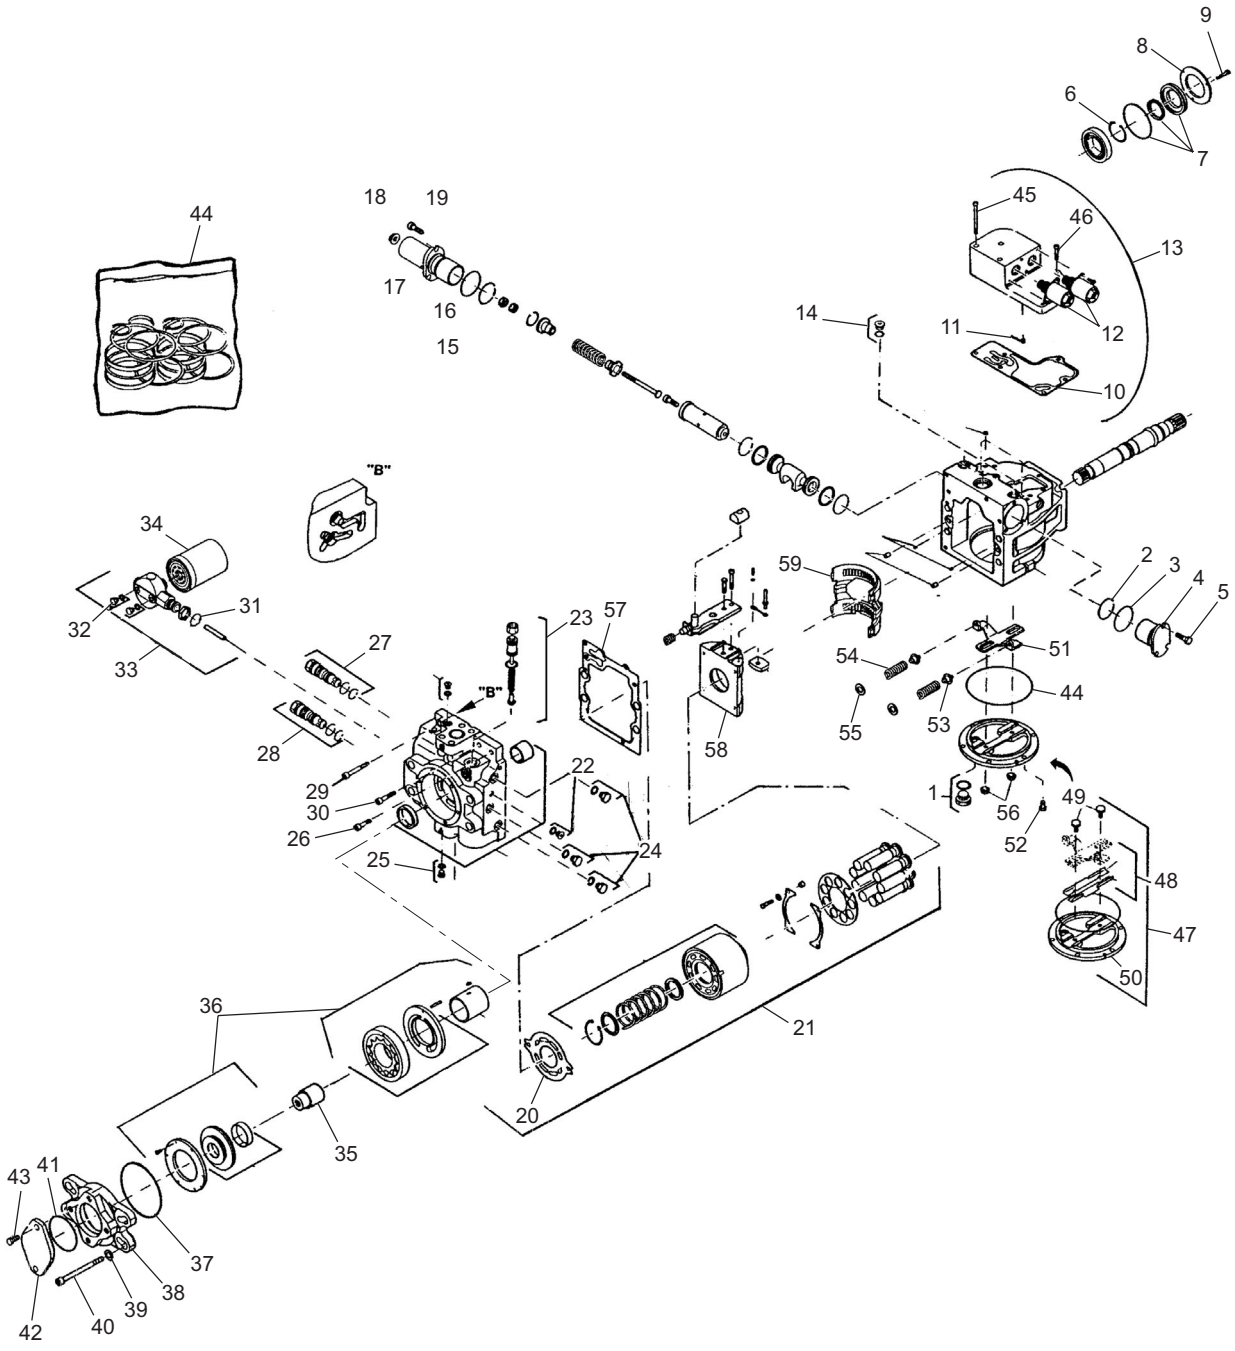

SPC004002


https://www.pdfmanual4trucks.com/

Hydrostatic Pump Assy
6910533

Item	Part Number	Denomination	Remarks	Serial Number	Qty
31	71778.5	O-ring			1
32	71634.0	Plug			1
33	81432.7	Filter			1
34	75990.2	Hydraulic Pump Filter			1
35	71758.7	Muff			1
36	81422.8	Charge pump			1
37	71761.1	O-ring			1
38	81426.9	Union			1
39	71763.7	Washer			4
40	71764.5	Screw			4
41	71765.2	O-ring			1
42	71766.0	Cover			1
43	71767.8	Screw			2
44	75037.2	Hydraulic Pump Seal Kit			1
45	97355.2	Screw			3
46	71744.7	Screw			3
47	97462.6	Cover assy	Including Pos. 48 + 49 + 50		1
48	97463.4	Slide assy			1
49	97464.2	Screw			1
50	97465.9	Cover			1
51	97466.7	Lever			1
52	97467.5	Screw			2
53	71710.8	Spring guide			2
54	71711.6	Spring			2
55	71713.2	Washer			2
56	71715.7	Seal-lock nut			2
57	98695.0	Gasket			1
58	6912556	Support	Was 71677.9		1
59	71676.1	Bearing			1

https://www.pdfmanual4trucks.com/

Hydrostatic Pump Assy
6913565

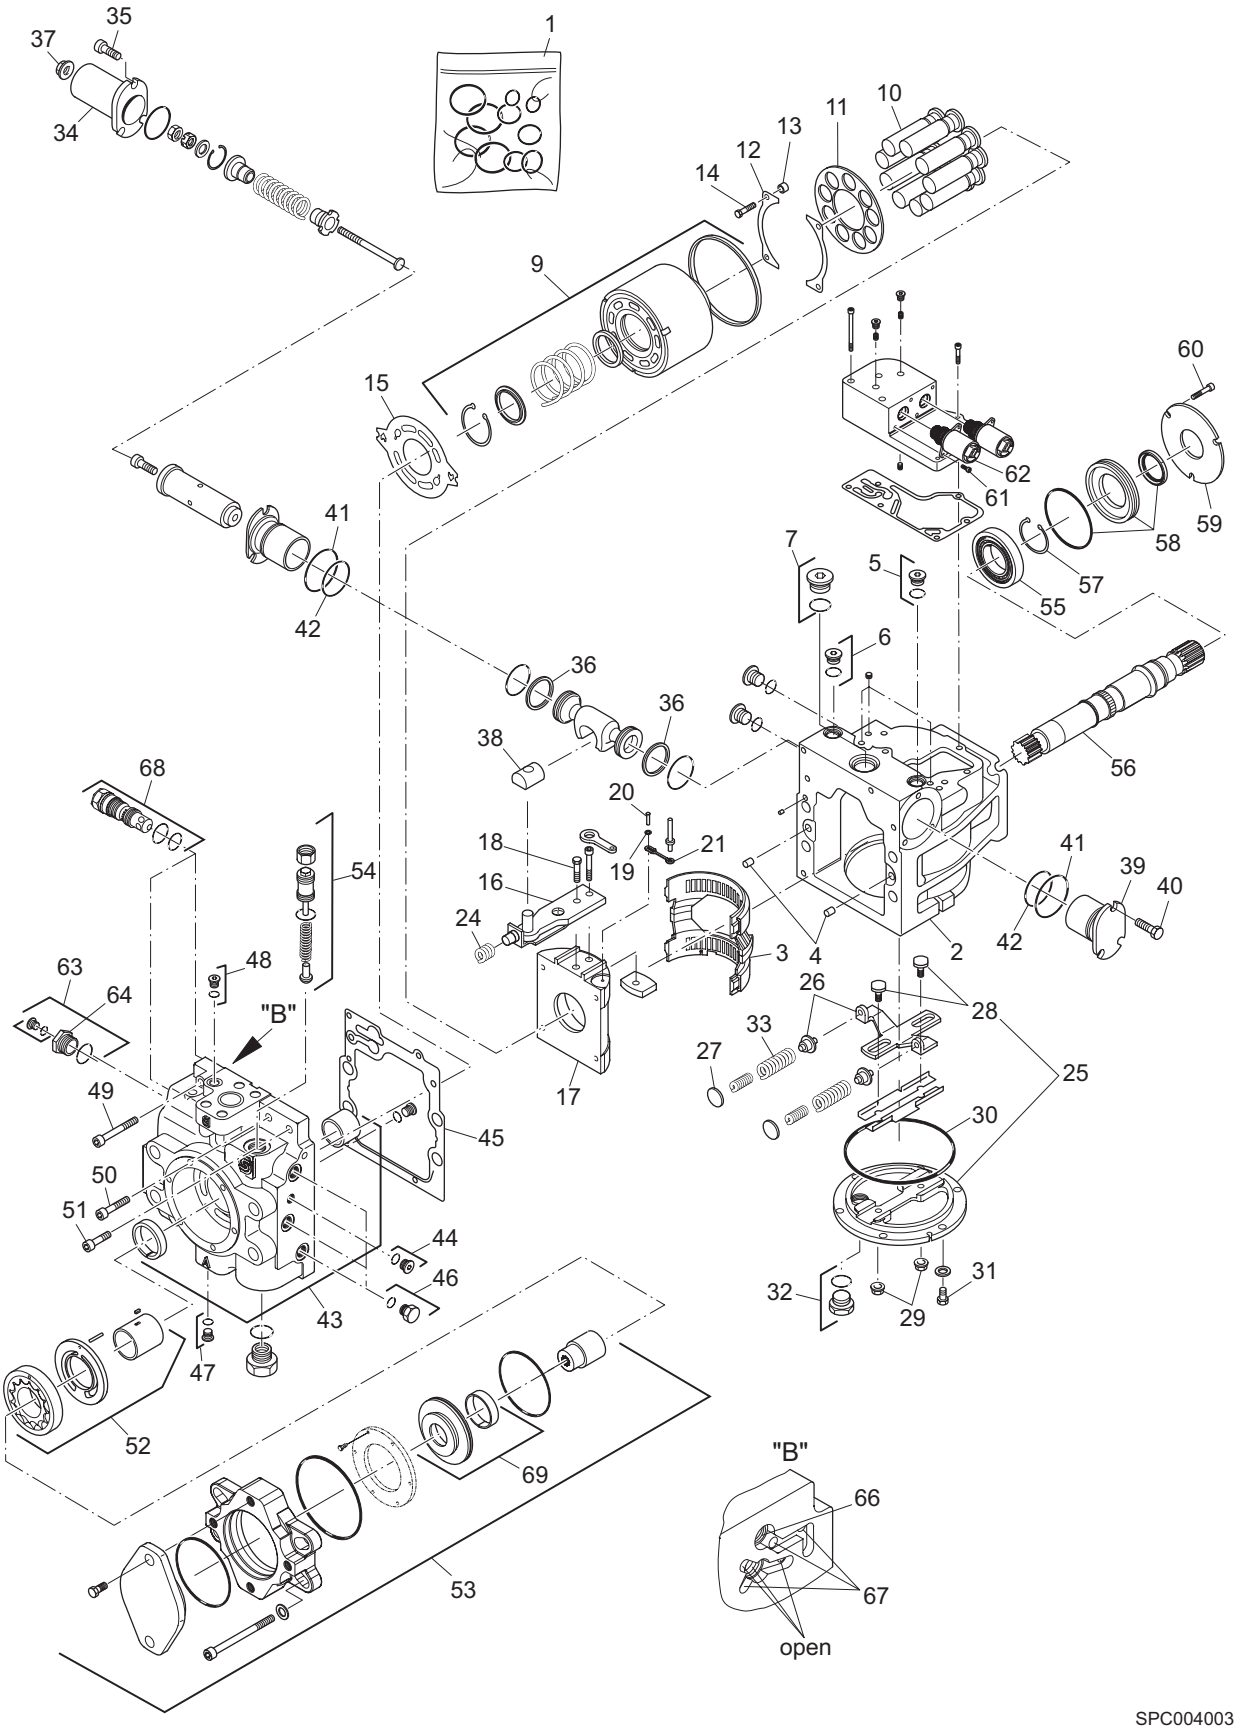

https://www.pdfmanual4trucks.com/

Hydrostatic Pump Assy
6913565


Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6913565	Hydrostatic pump		3628 11092 & above + 3629 11009 & above	1
1	75037.2	Hydraulic Pump Seal Kit	Including all seals		1
2	6912058	Housing			1
3	6912059	Bearing			1
4	71599.5	Dowel			2
5	71674.6	Plug			1
6	71674.6	Plug			1
7	71675.3	Plug			1
8	71636.5	Plug			1
9	6912533	Valve			1
10	71690.2	Piston			9
11	71691.0	Retainer			1
12	71692.8	Guide			2
13	71693.6	Spacer			4
14	98653.9	Screw			4
15	6912554	Valve plate			1
16	6912060	Lever			1
17	6912061	Support			1
18	6912062	Screw			1
19	71681.1	Washer			1
20	71682.9	Pin			1
21	71679.5	Pin			1
22	6912063	Pin			1
23	71636.5	Plug			1
24	71684.5	Spring			1
25	6912558	Cover assy			1
26	6912559	Spring guide	Including 2 springs		1
27	6912560	Washer			2
28	6912561	Guide bolt			2
29	71715.7	Seal-lock nut			2
30	6912562	O-ring			1

https://www.pdfmanual4trucks.com/

Hydrostatic Pump Assy

6913565

Recurrence of previous drawing

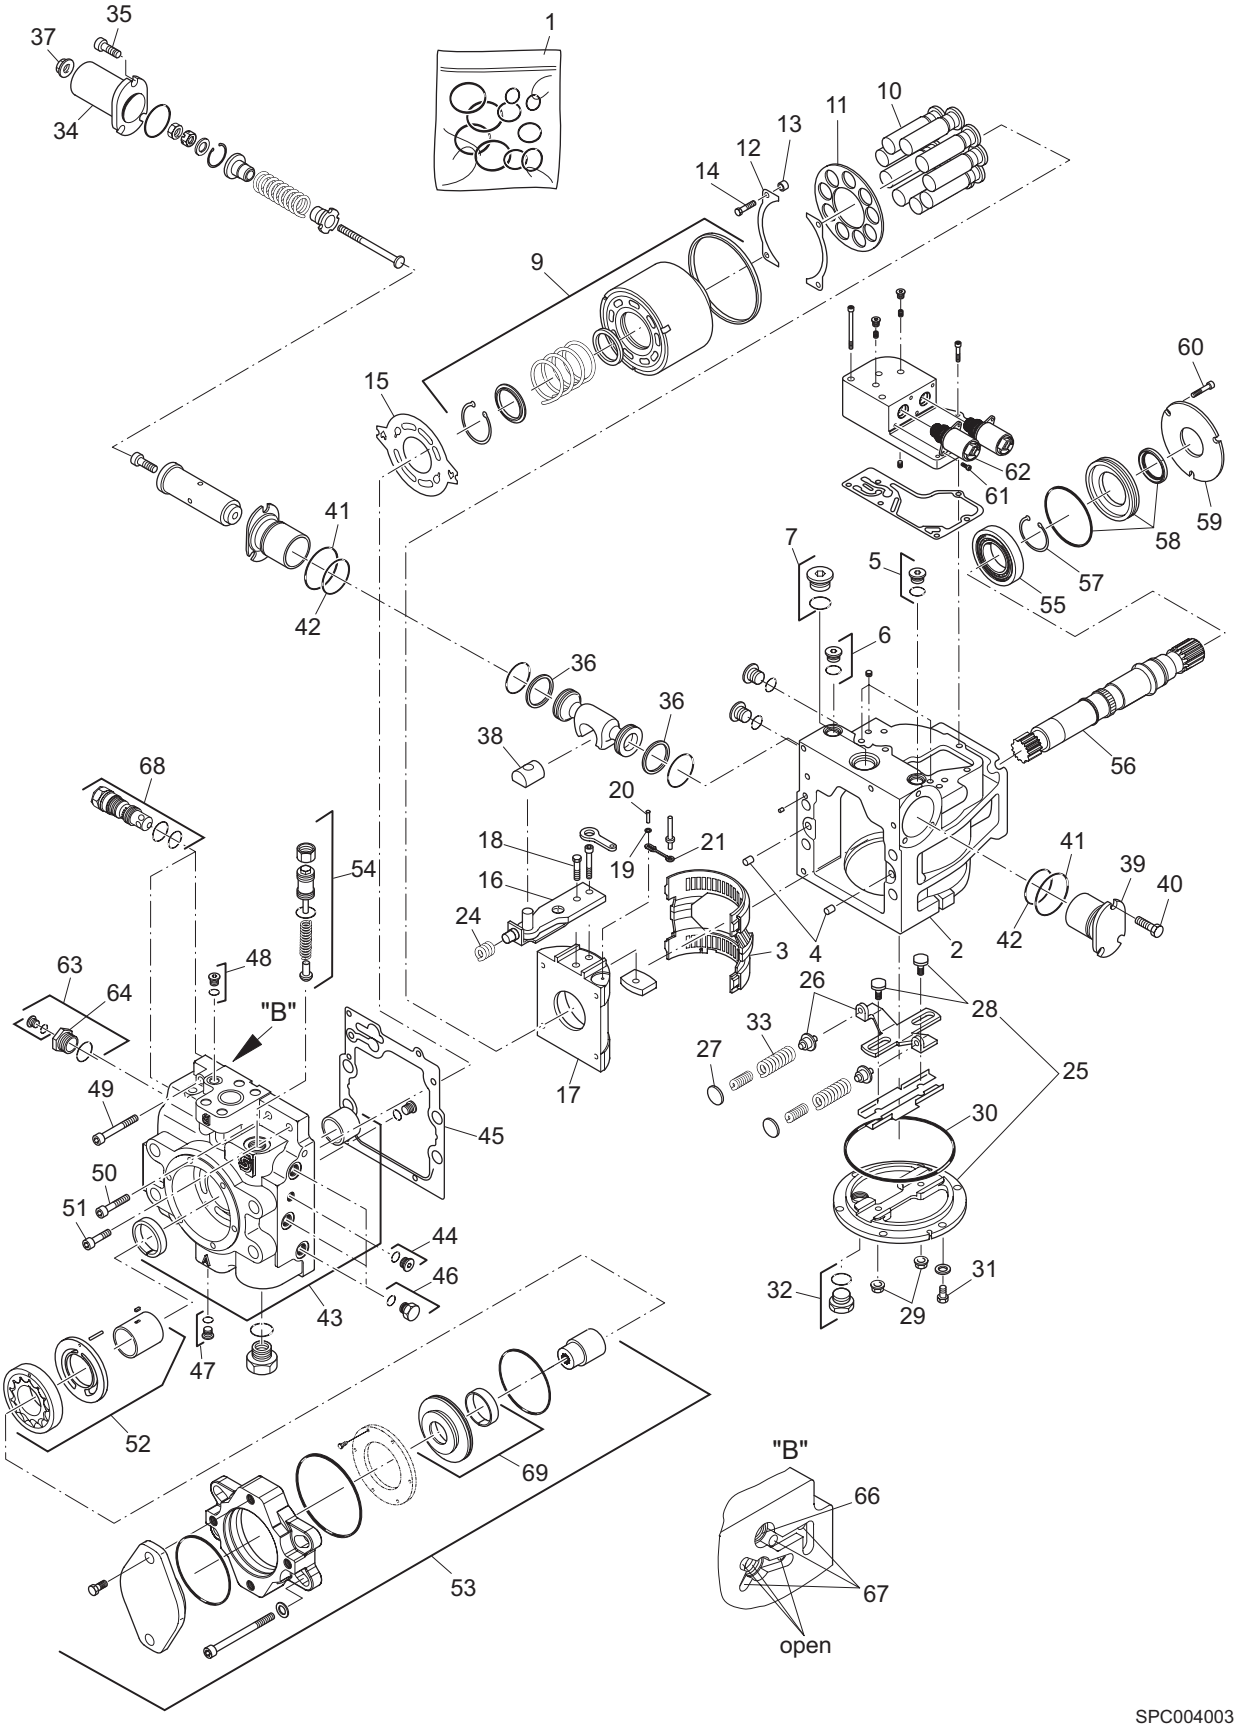

https://www.pdfmanual4trucks.com/

Hydrostatic Pump Assy
6913565


Item	Part Number	Denomination	Remarks	Serial Number	Qty
31	6912563	Screw			6
32	71675.3	Plug			1
33	71711.6	Spring			2
34	71736.3	Housing			1
35	6912564	Screw			3
36	6912064	Seal			2
37	71737.1	Seal-lock nut			1
38	71685.2	Slide nut			1
39	71734.8	Housing			1
40	71735.5	Screw			3
41	71733.0	Seal			2
42	71732.2	Seal			2
43	6912065	Housing			1
44	71674.6	Plug			1
45	98695.0	Gasket			1
46	6912066	Plug			1
47	71674.6	Plug			1
48	71674.6	Plug			1
49	71753.8	Screw			1
50	81424.4	Screw			1
51	81425.1	Screw			1
52	71757.9	Charge pump assy			1
53	71762.9	Flange	Also includes Pos. 69		1
54	81427.7	Valve			1
55	71585.4	Bearing			1
56	71701.7	Shaft			1
57	71702.5	Snap ring			1
58	81421.0	Axle seal kit			1
59	6912567	Plate			1
60	6912067	Screw			3
61	6912068	Screw			4

https://www.pdfmanual4trucks.com/

Hydrostatic Pump Assy

6913565

Recurrence of previous drawing

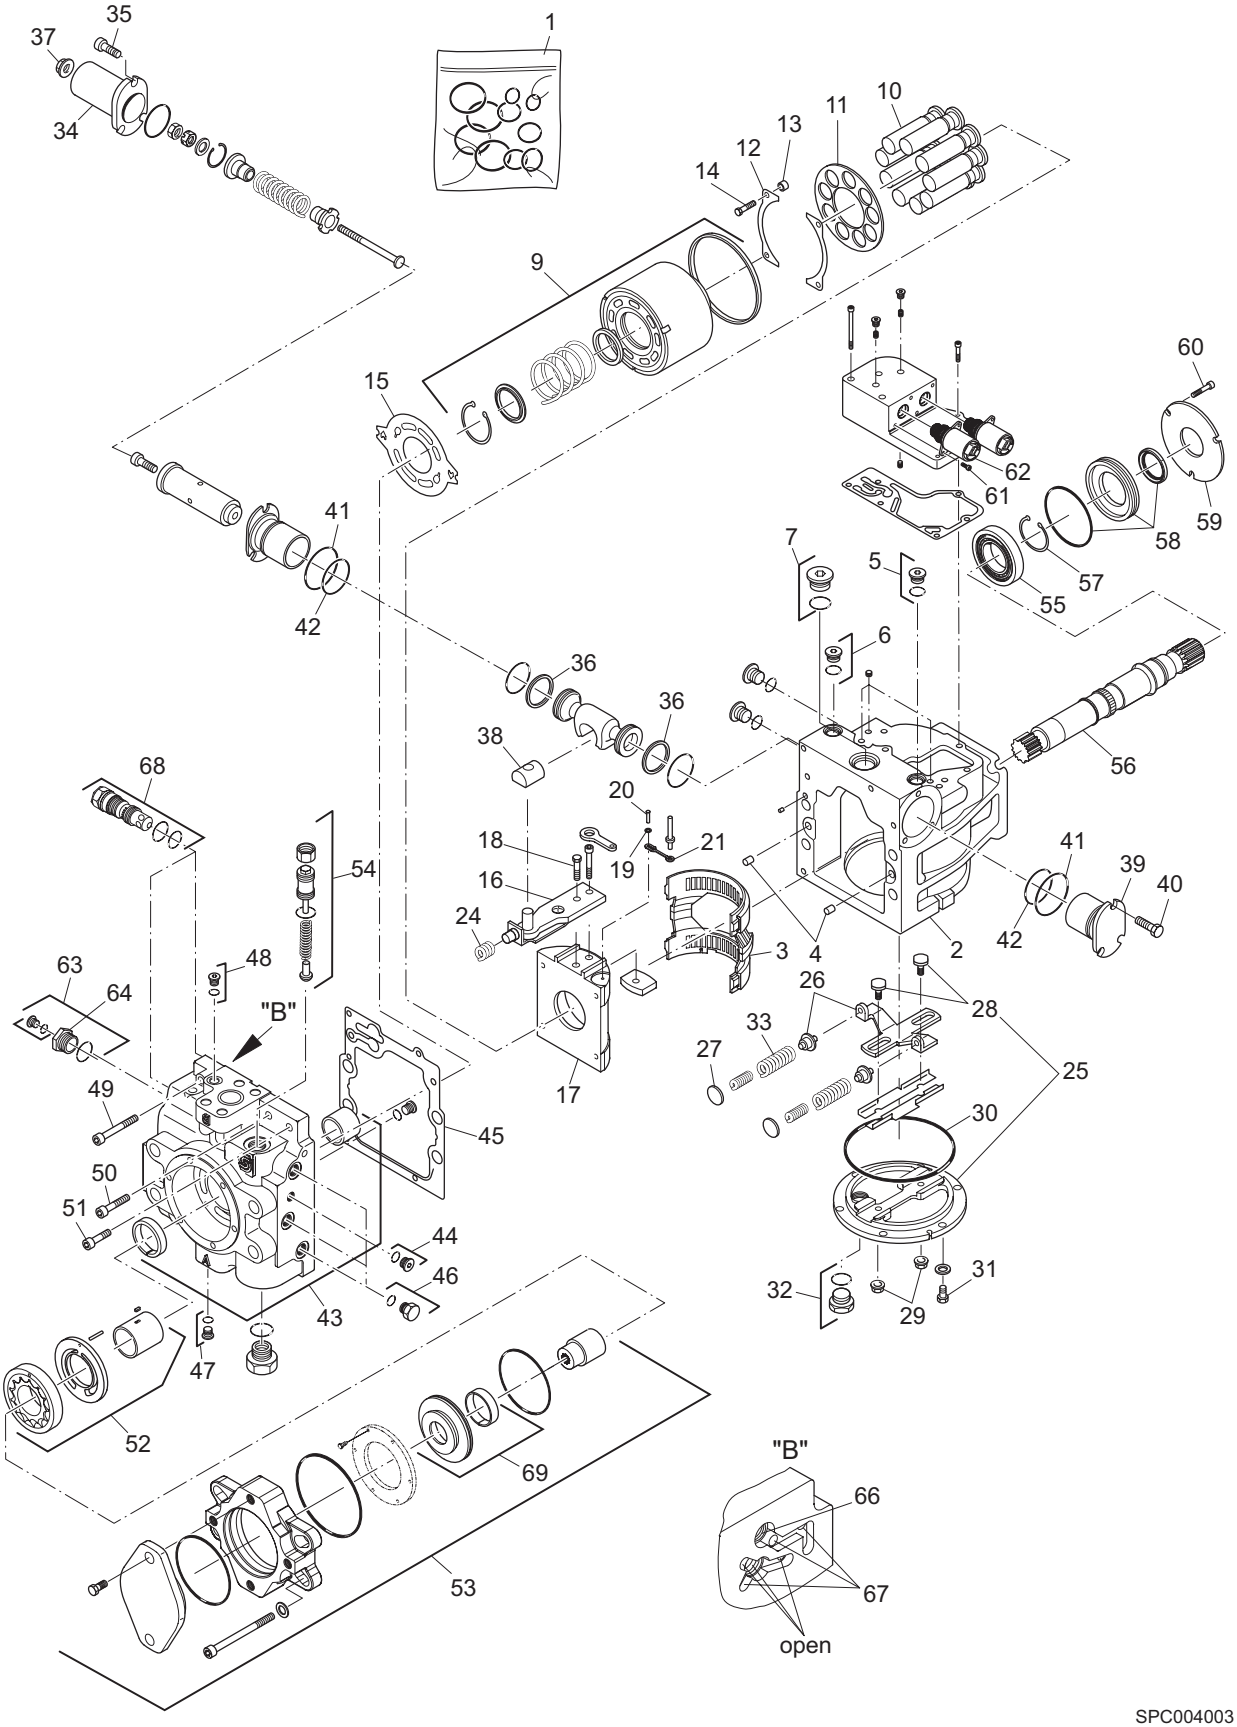


https://www.pdfmanual4trucks.com/

Hydrostatic Pump Assy
6913565

Item	Part Number	Denomination	Remarks	Serial Number	Qty
62	97400.6	Valve			2
63	6912568	Plug			1
64	6912070	Adaptor			1
65	71674.6	Plug			1
66	71748.8	Plug			1
67	6912069	Valve			3
68	81296.6	Valve			
69	71760.3	Cover assy			1

https://www.pdfmanual4trucks.com/

Hydrostatic Motor Assy

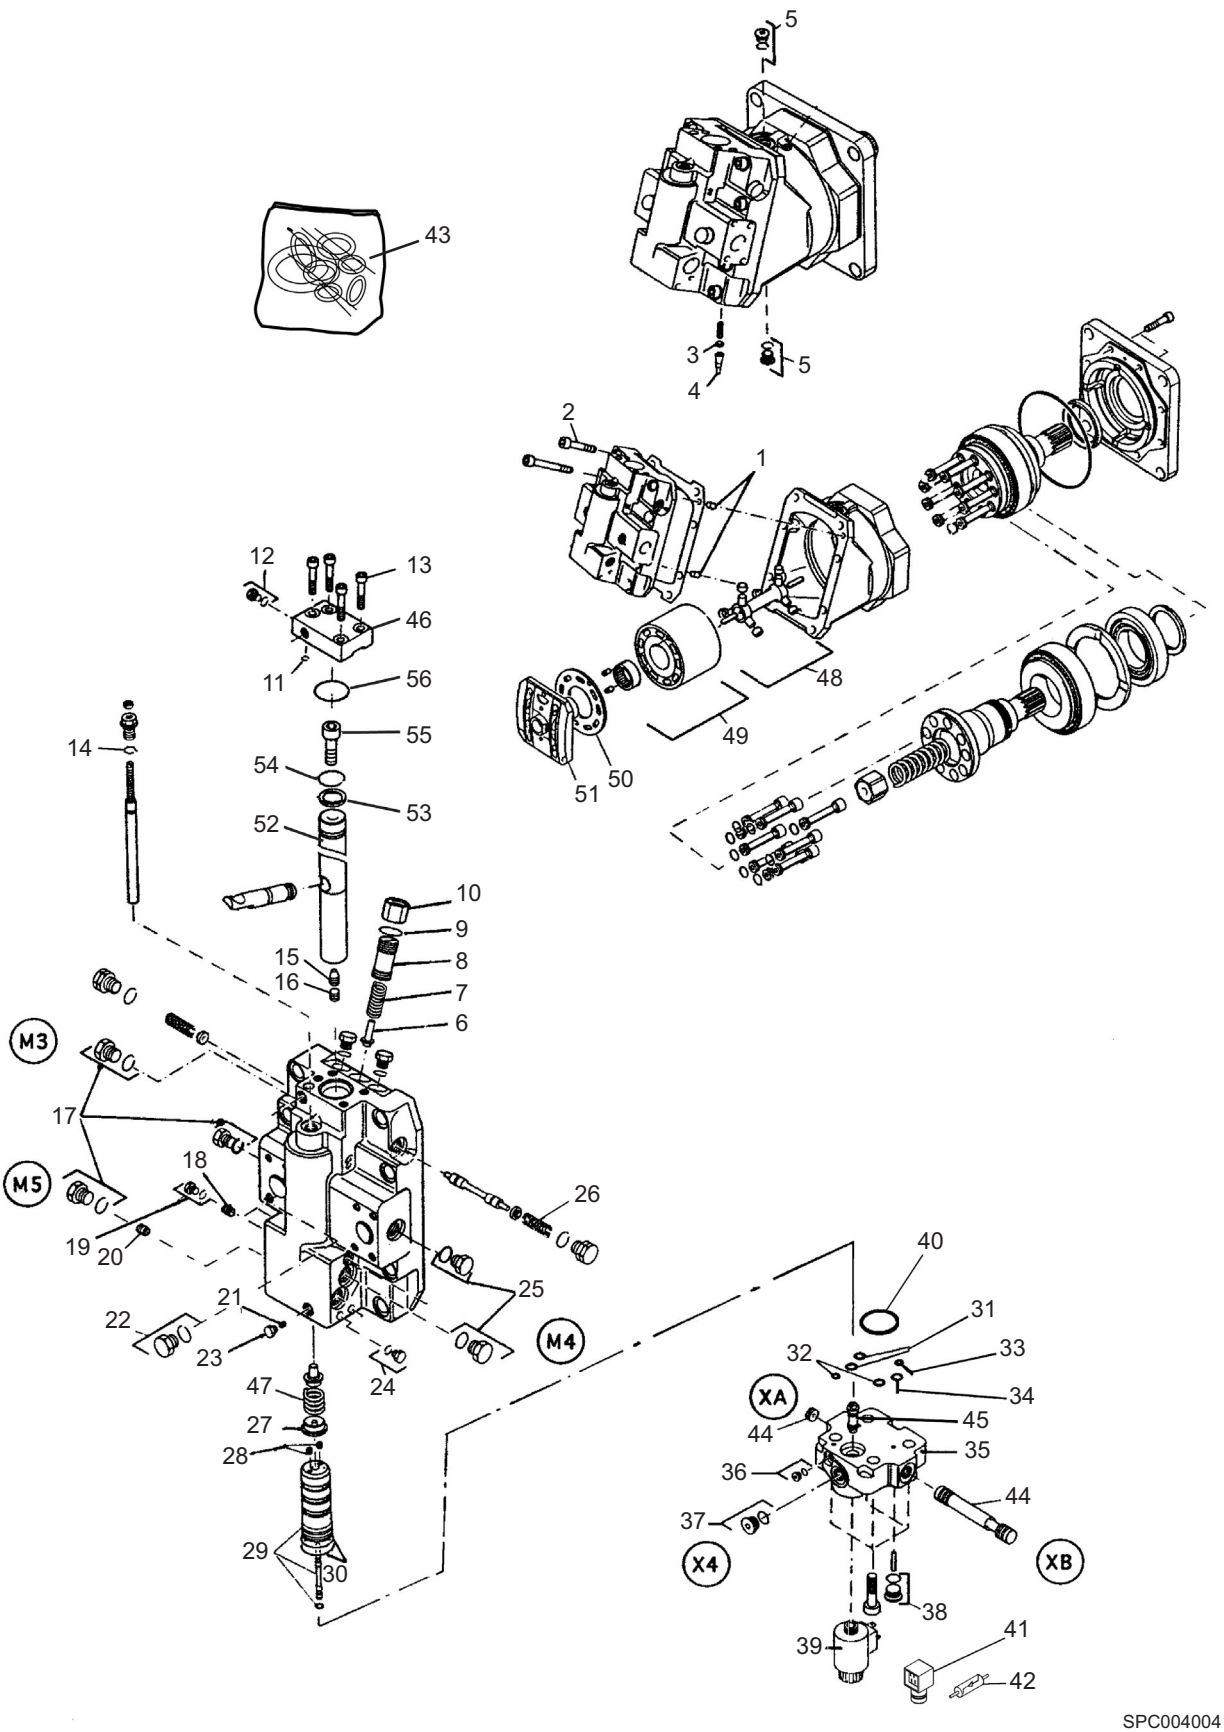

https://www.pdfmanual4trucks.com/


Hydrostatic Motor Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	78256.5	Hydrostatic Motor Assy	Pos. 1 to 56		1
1	71599.5	Dowel			2
2	71605.0	Screw			4
3	71610.0	Nut			1
4	71611.8	Cover			1
5	71785.0	Plug			2
6	71629.0	Cone			1
7	71630.8	Spring			1
8	71631.6	Screw			1
9	71632.4	O-ring			1
10	71633.2	Nut			1
11	71643.1	Seal			1
12	71636.5	Plug			1
13	71646.4	Screw			4
14	71626.6	Seal			1
15	71602.7	Screw			1
16	71603.5	Screw			1
17	71674.6	Plug			3
18	71638.1	Nozzle			1
19	71636.5	Plug			1
20	71635.7	Nozzle			1
21	71638.1	Nozzle			1
22	71674.6	Plug			1
23	71636.5	Plug			1
24	71636.5	Plug			1
25	71674.6	Plug			2
26	81460.8	Spring			1
27	71621.7	Washer			1
28	71622.5	Nozzle			2
29	81455.8	Control	Was 95424.8		1
30	71624.1	Seal			2

https://www.pdfmanual4trucks.com/

Hydrostatic Motor Assy

Recurrence of previous drawing

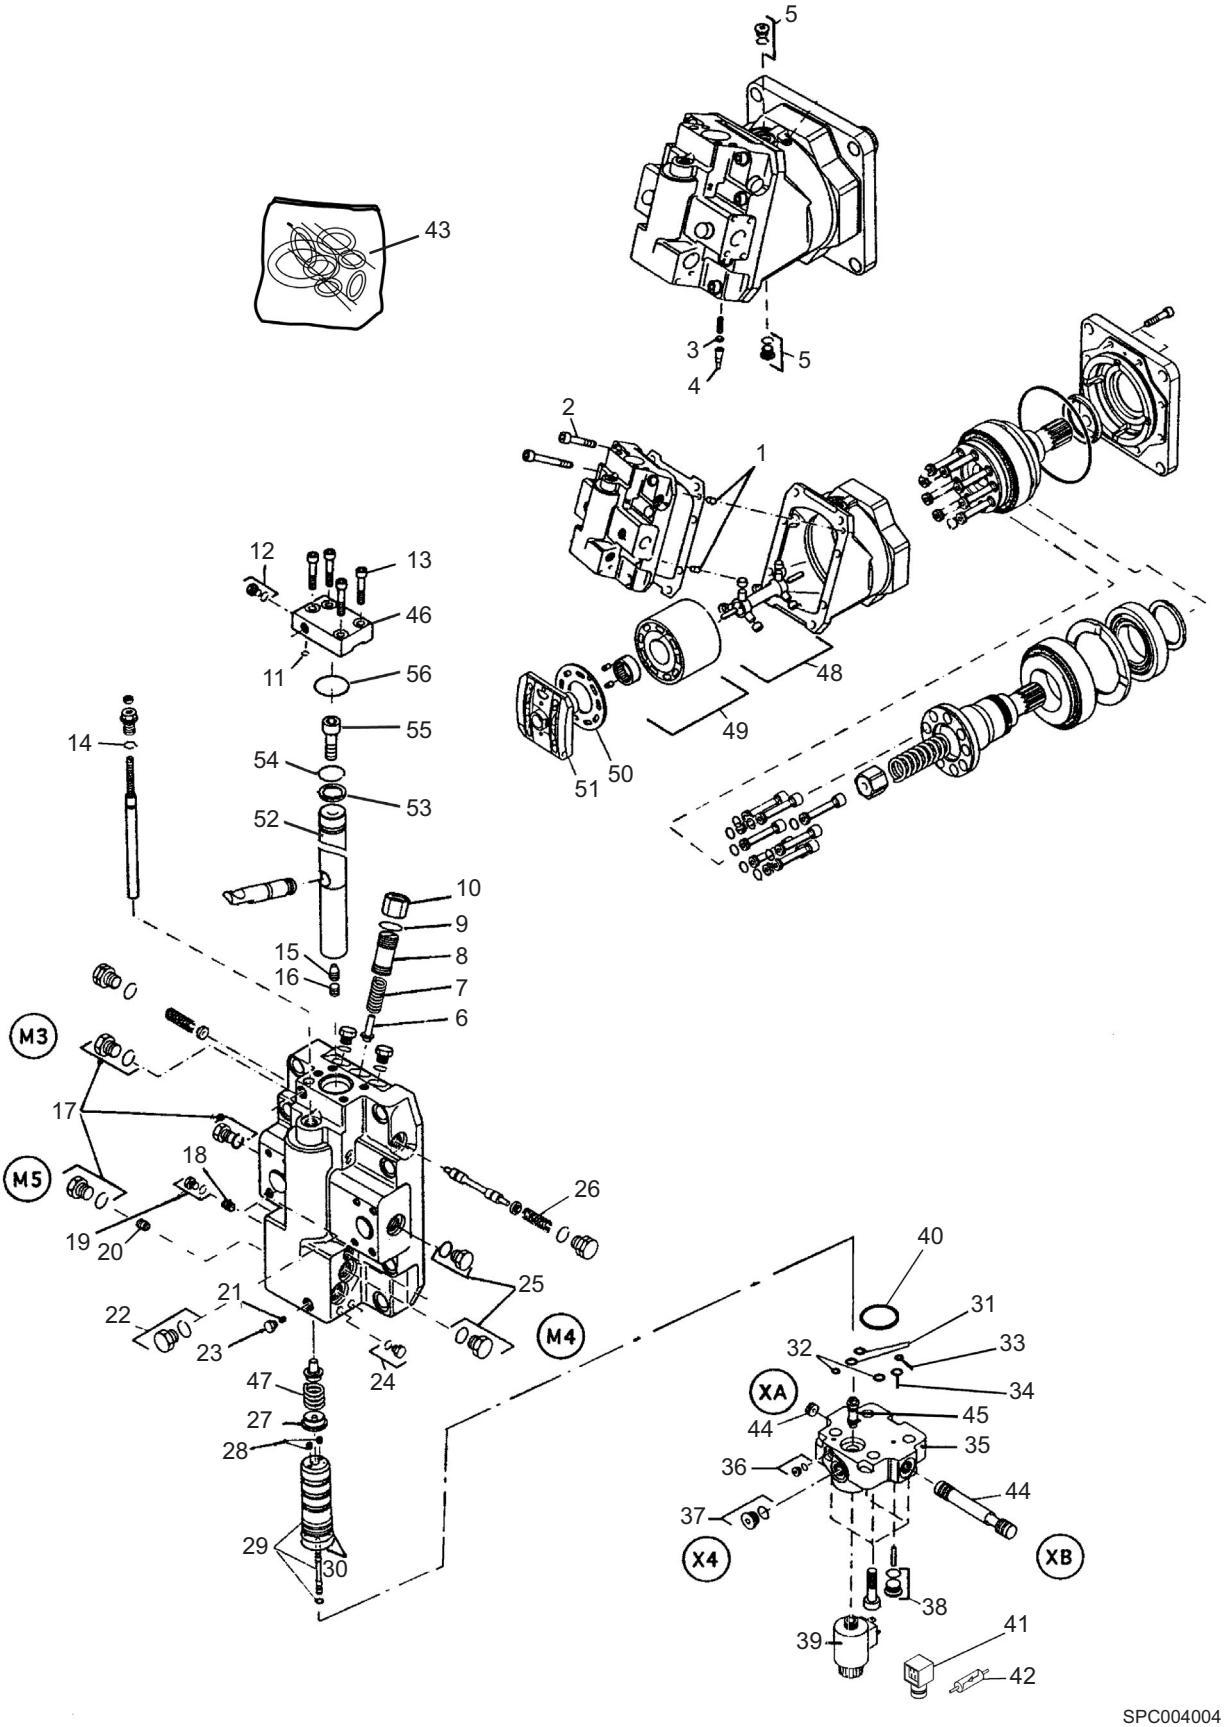

SPC004004


https://www.pdfmanual4trucks.com/

Hydrostatic Motor Assy

Item	Part Number	Denomination	Remarks	Serial Number	Qty
31	71644.9	Seal			3
32	71643.1	Seal			3
33	71643.1	Seal			1
34	71644.9	Seal			3
35	92614.7	Housing			1
36	71636.5	Plug			1
37	71674.6	Plug			1
38	71674.6	Plug			1
39	75594.2	Hydraulic Motor Solenoid			1
40	81450.9	Seal			1
41	41282.5	Solenoid			1
42	101472-20M	Diode			1
43	81463.2	Hydrostatic Motor Seal Kit			1
44	81458.2	Spindle			1
45	97258.8	Piston			1
46	81448.3	Cover			1
47	97357.8	Spring			1
48	81435.0	Shaft			1
49	81434.3	Cylinder block			1
50	81436.8	Bearing plate			1
51	81433.5	Valve segment			1
52	81445.9	Piston			1
53	81437.6	Seal			1
54	81444.2	O-ring			1
55	81443.4	Screw			1
56	81450.9	Seal			1

https://www.pdfmanual4trucks.com/

Electrical Circuit Chassis

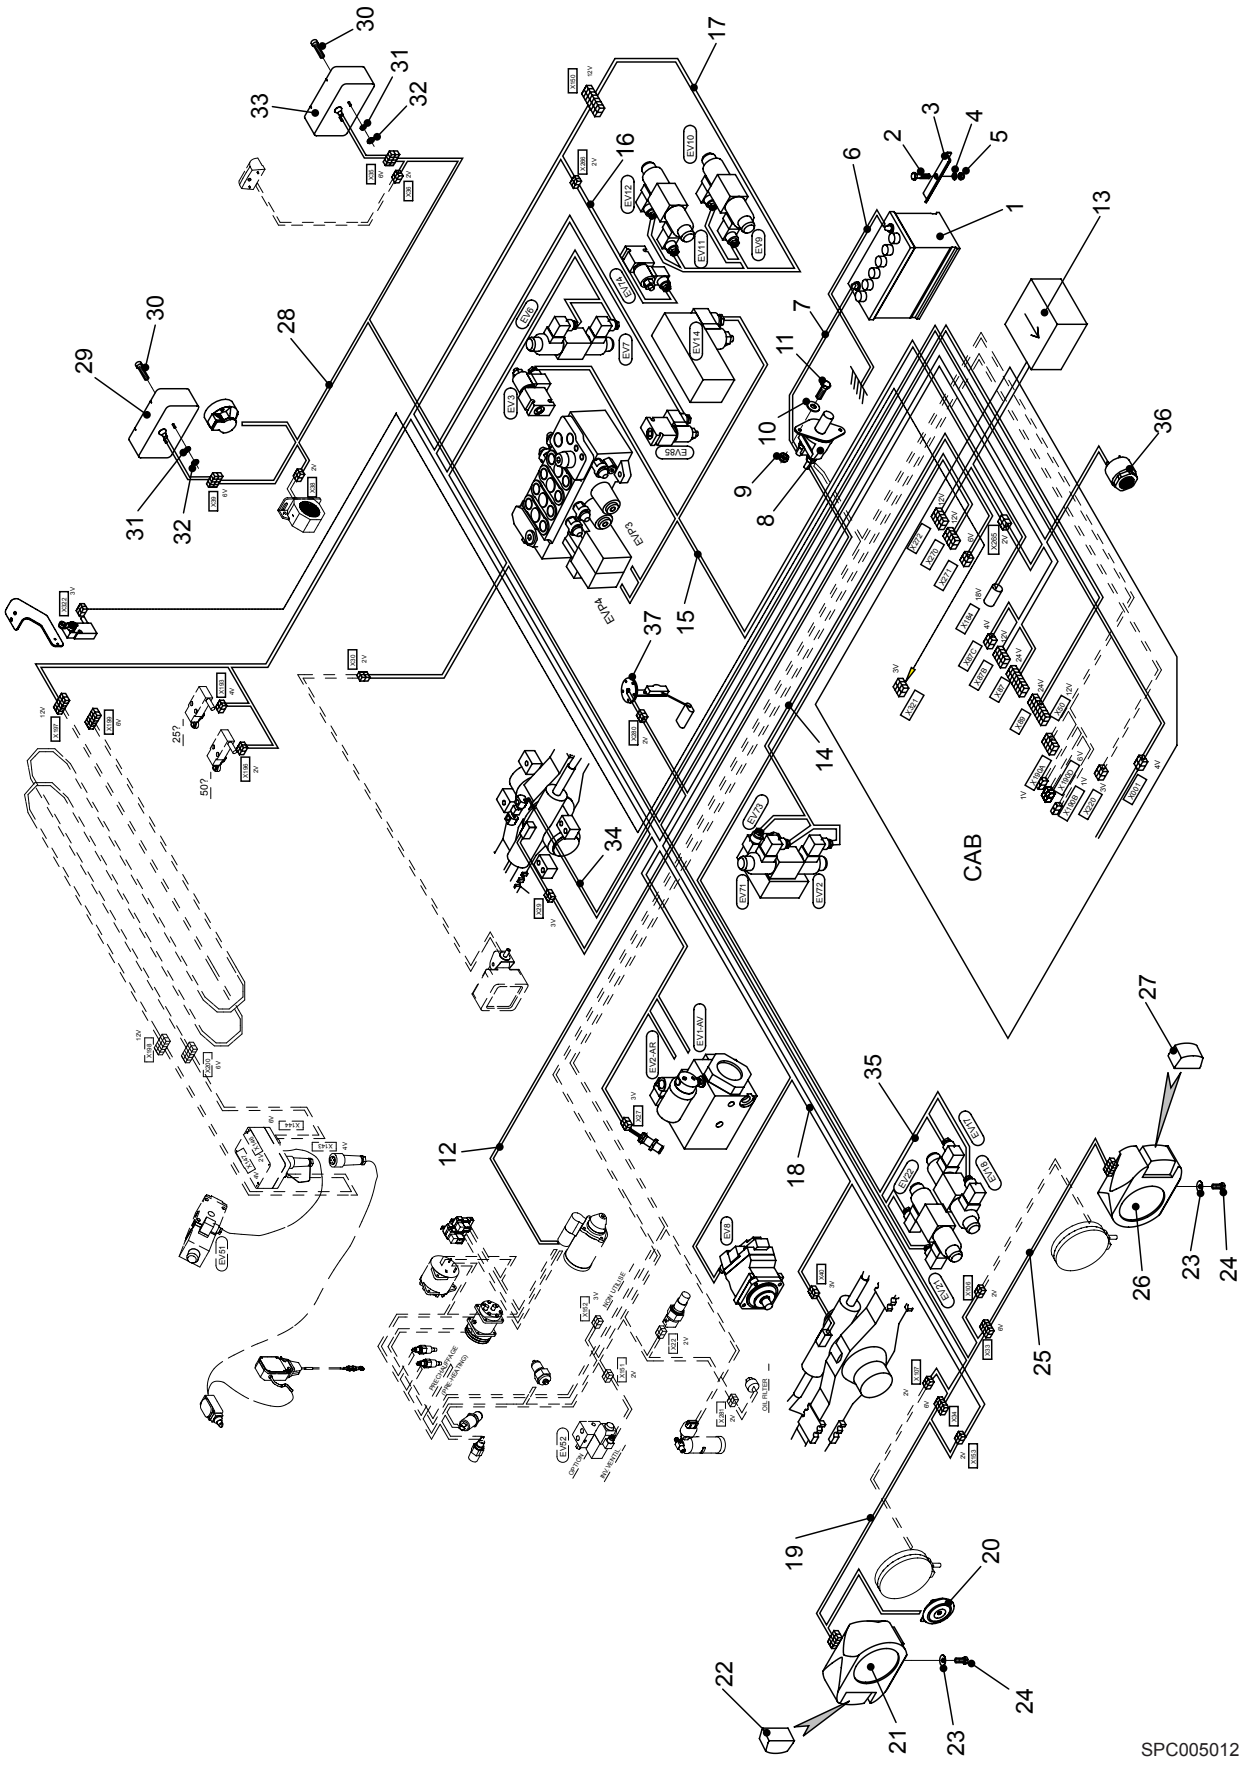

https://www.pdfmanual4trucks.com/


Electrical Circuit Chassis

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6914907	Battery			1
2	01598.2	Screw			1
3	77136.0	Bracket			1
4	000350-02V	Washer			1
5	51851.4	Nut			1
6	78869.5	Wire harness			1
7	79861.1	Positive Battery Cable			1
8	65764.3	Circuit Breaker			1
9	100345-06W	Nut			2
10	000350-01U	Washer			2
11	01591.7	Screw			2
13	6911367	Inclinometer			1
14	6910891	Wire harness	Only with frame leveling		1
15	6911357	Wire harness			1
17	96589.7	Wire harness			1
18	6911726	Wire harness			1
19	96587.1	Front Light Wire Harness, RH			1
20	100417-11D	Horn			1
21	79533.6	Front Light Assembly, RH	Includes pos. 22		1
	000405-62P	Bulb	40W		1
	27362.3	Bulb	4W		1
22	27089.2	Bulb	21W		1
	59758.3	Light, RH			1
23	01718.6	Washer			1
24	01596.6	Screw			4
25	79539.3	Front Light Wire Harness, LH			4
26	79534.4	Front Light Assembly, LH	Includes pos. 27		1
	000405-62P	Bulb	40W		1
	27362.3	Bulb	4W		1
27	59948.0	Light, LH			1
	27089.2	Bulb	21W		1

https://www.pdfmanual4trucks.com/

Electrical Circuit Chassis

Recurrence of previous drawing

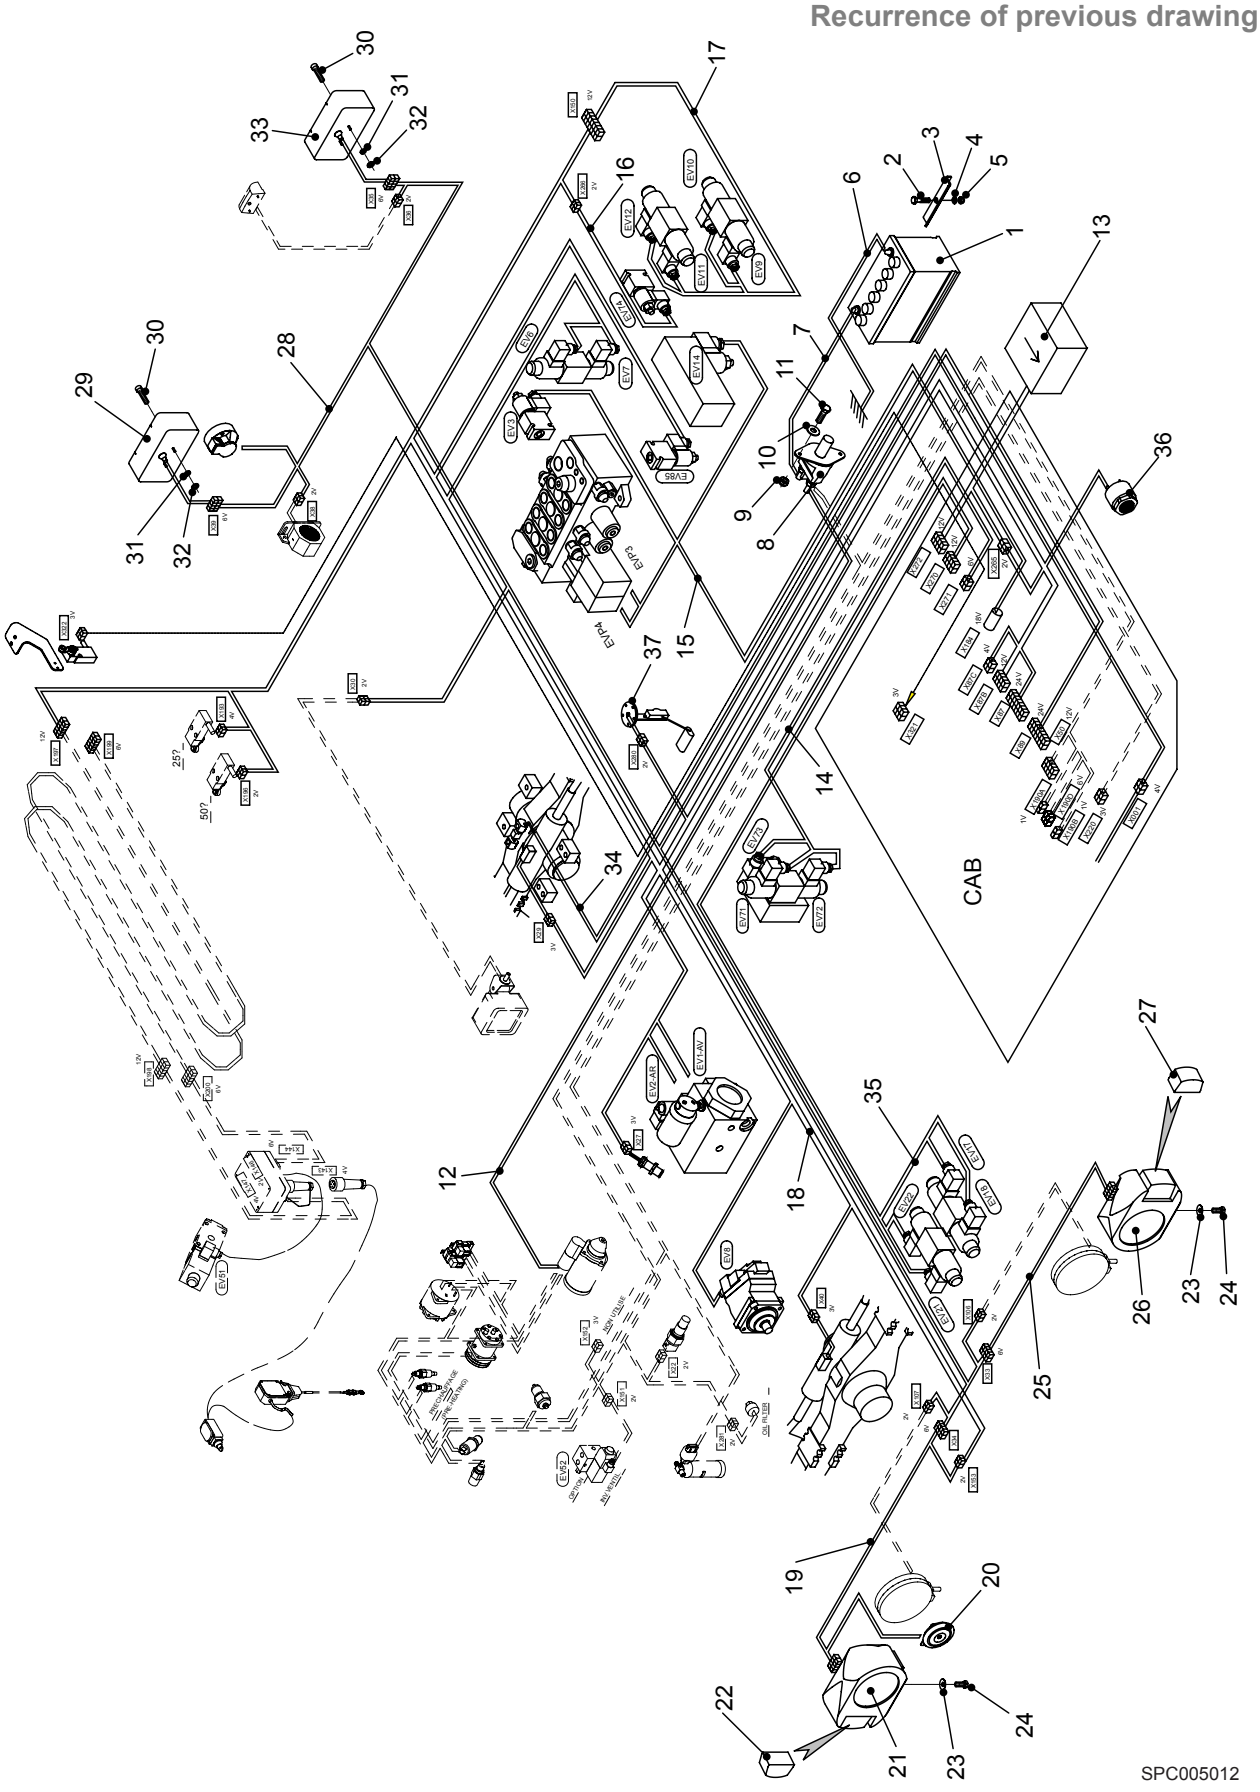


https://www.pdfmanual4trucks.com/

Electrical Circuit Chassis

Item	Part Number	Denomination	Remarks	Serial Number	Qty
28	98087.0	Wire harness			1
29	82265.0	Light			1
	27089.2	Bulb	21W		1
	97260.4	Glass			1
30	33786.5	Screw			4
31	13415.5	Washer			4
32	01695.6	Washer			4
33	82266.8	Rear Light, LH			1
	27089.2	Bulb	21W		1
	97261.2	Glass			1
34	6914109	Captor			1
35	6910892	Wire harness			1
36	90913.5	Buzzer			1
37	6909815	Fuel level sensor			1

https://www.pdfmanual4trucks.com/

Electrical Circuit Cab

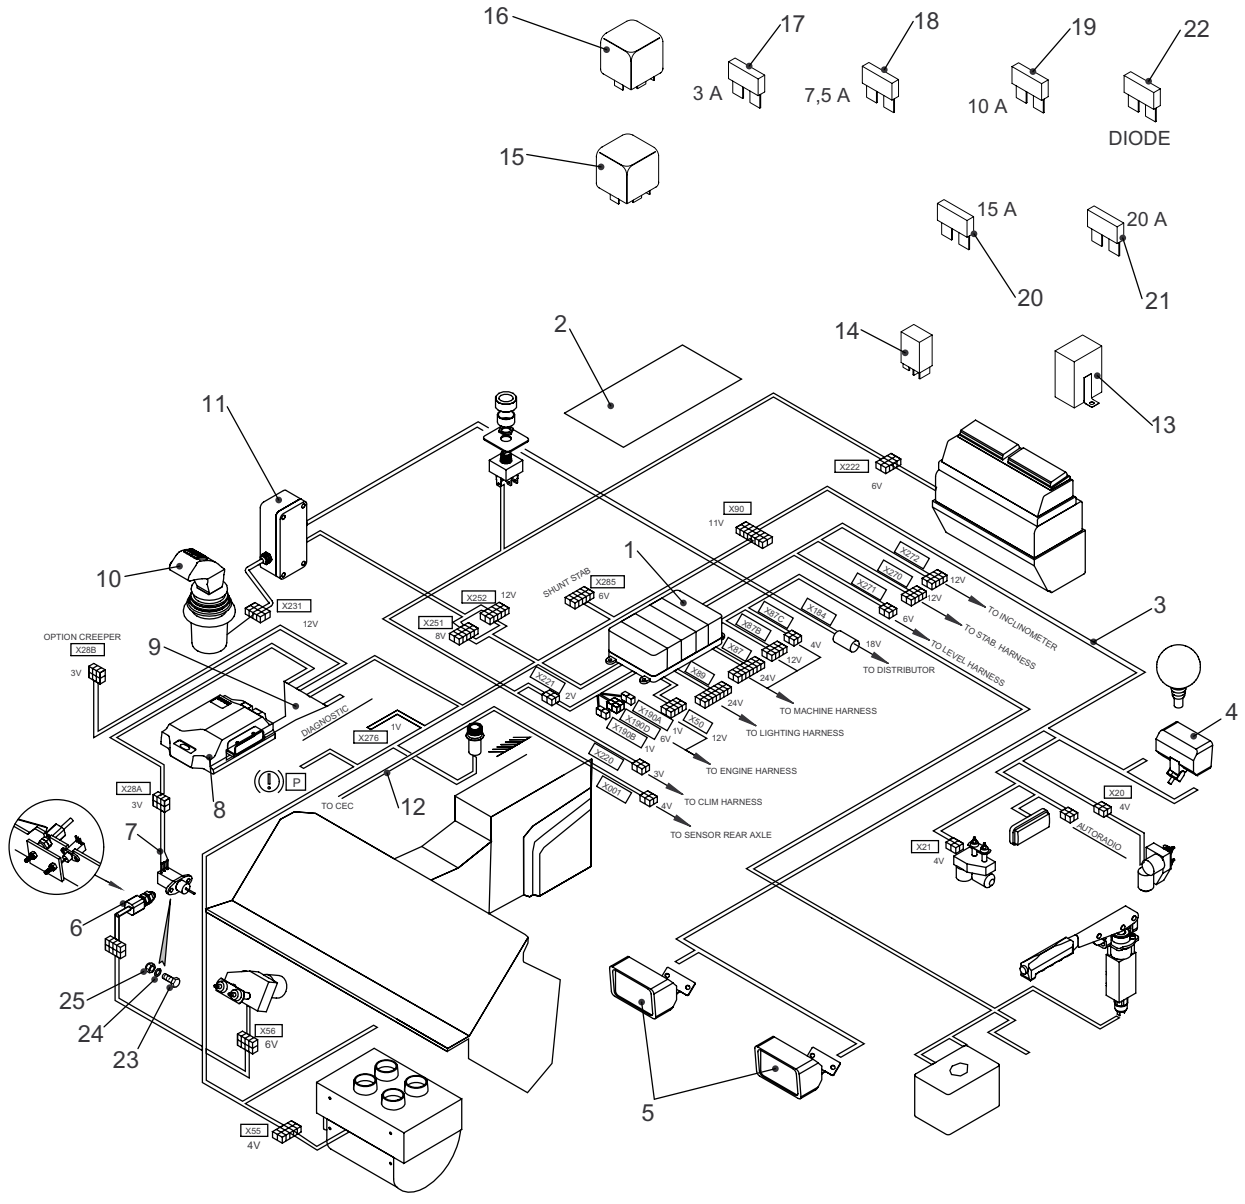

SPC005014


https://www.pdfmanual4trucks.com/

Electrical Circuit Cab

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911733	Fuse box	Includes Pos. 20 to 29		1
2	6912455	Adhesive			1
3	97236.4	Wire Harness			1
4	78816.6	Rear worklight			1
	58446.6	Bulb			1
5	78815.8	Front worklight			2
	58446.6	Bulb			2
6	6909324	Service brake switch			1
7	6909383	Inching switch (detector)			1
8	96038.5	Transmission box			1
9		Wire harness			1
10	6910314	Joystick			1
11	6911363	Control box			1
12	6913764	Stability indicator and wire harness			1
13	96623.4	Turn signal relay			1
14	6910955	Micro relay			20
15	79930.4	Relay			1
16	100411-05U	Relay			2
17	64120.9	Fuse	3 A		1
18	57792.4	Fuse	7.5 A		15
19	57752.8	Fuse	10 A		8
20	57793.2	Fuse	15 A		6
21	57753.6	Fuse	20 A		2
22	80226.4	Diode			2
23	100345-05V	Nut			2
24	6910952	Washer			2
25	100345-05V	Nut			2

https://www.pdfmanual4trucks.com/

Electrical Circuit Engine

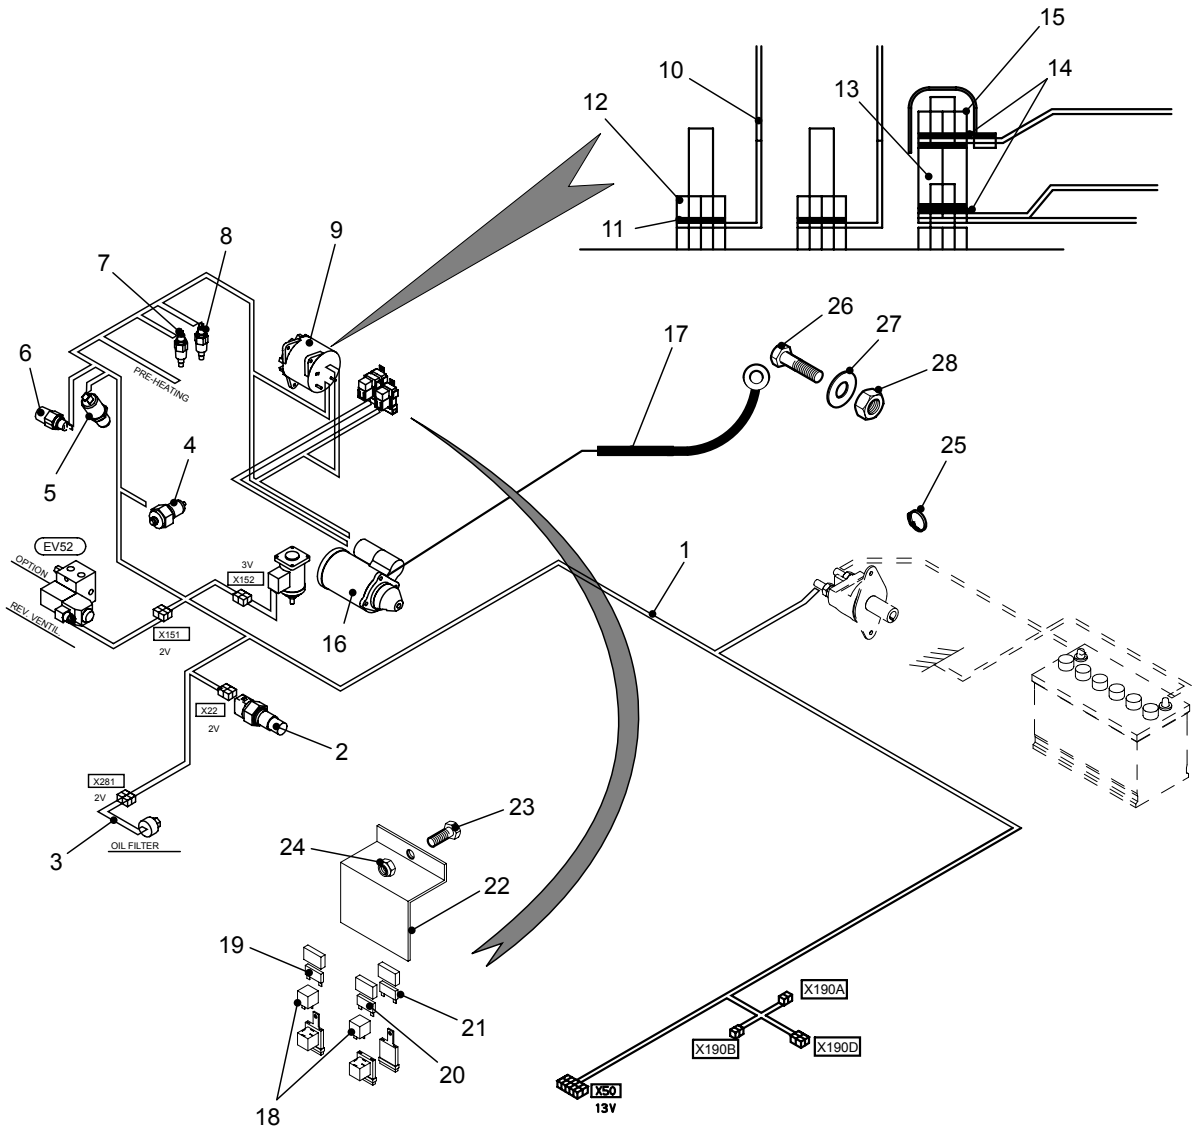

SPC005004


https://www.pdfmanual4trucks.com/

Electrical Circuit Engine

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911724	Engine wiring harness			1
2	78872.9	Hydraulic Oil Temperature Sender			1
3	6912549	Plugging indicator			1
4	26278.2	Oil Pressure Switch			1
5	97175.4	Solenoid			1
6	6911895	Thermostat			1
7	6911911	Switch, water temp			1
8	6911400	Switch, water temp			1
9	6911377	Alternator			1
10	79926.2	Terminal			1
11	13415.5	Washer			2
12	01665.9	Nut			2
13	96613.5	Spacer			1
14	13416.3	Washer			2
15	01666.7	Nut			1
16	6911913	Starter motor			1
17	018472-83R	Ground Cable			2
18	79930.4	Relay			2
19	6909767	Fuse	70 A		1
20	79947.8	Fuse 50 Amp	50 A		1
21	79946.0	Fuse	40 A		1
22	78895.0	Protector			1
23	01596.6	Screw			1
24	51851.4	Nut			1
25	50917.4	Collar			1
26	01606.3	Screw			1
27	000350-03W	Washer			1
28	100345-09A	Nut			1

https://www.pdfmanual4trucks.com/

Ventilation Reverse Electrical

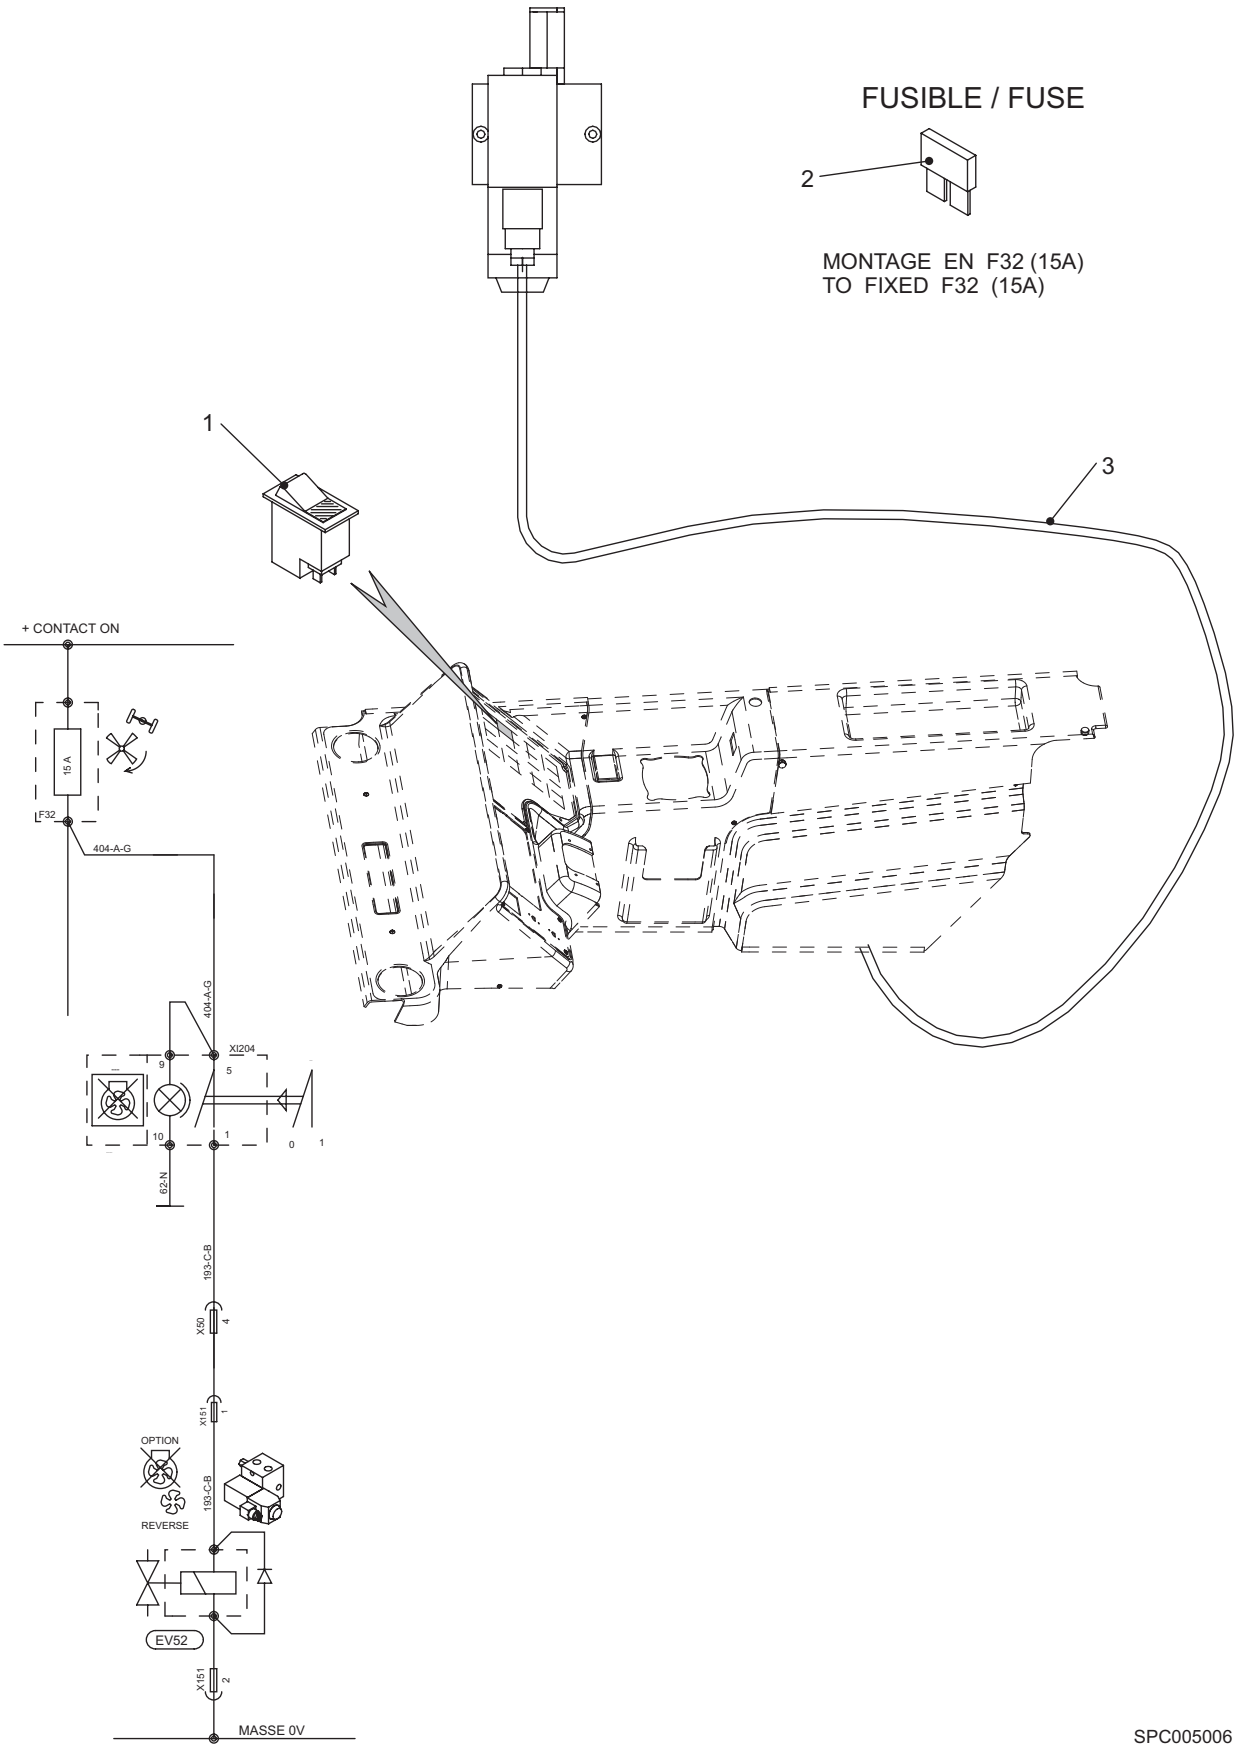


https://www.pdfmanual4trucks.com/

Ventilation Reverse Electrical

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	96596.2	Fan Switch			1
2	57793.2	Fuse	15 A		1
3	96588.9	Wire harness			1

https://www.pdfmanual4trucks.com/

Joystick

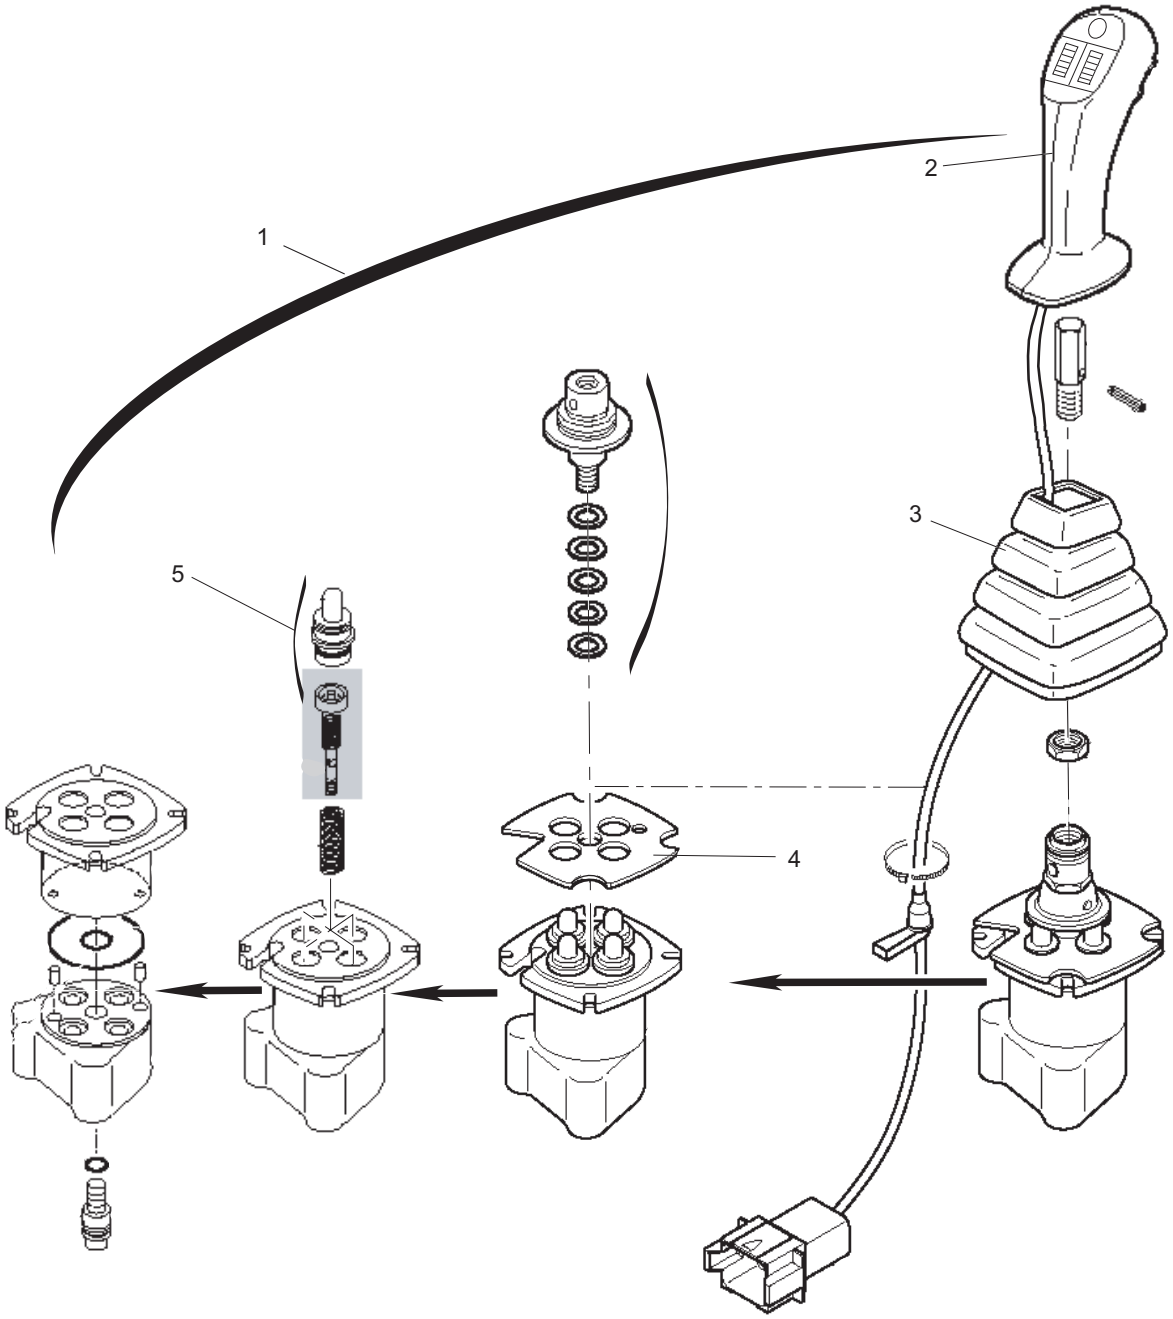

SPC005019


https://www.pdfmanual4trucks.com/

Joystick

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6910314	Joystick	Pos. 2 to 5		1
2	6910728	Lever assy			1
3	6910703	Bellows			1
4	6910702	Plate			1
5	75985.2	Set of push rod			1

https://www.pdfmanual4trucks.com/

Joystick / Susmic Installation

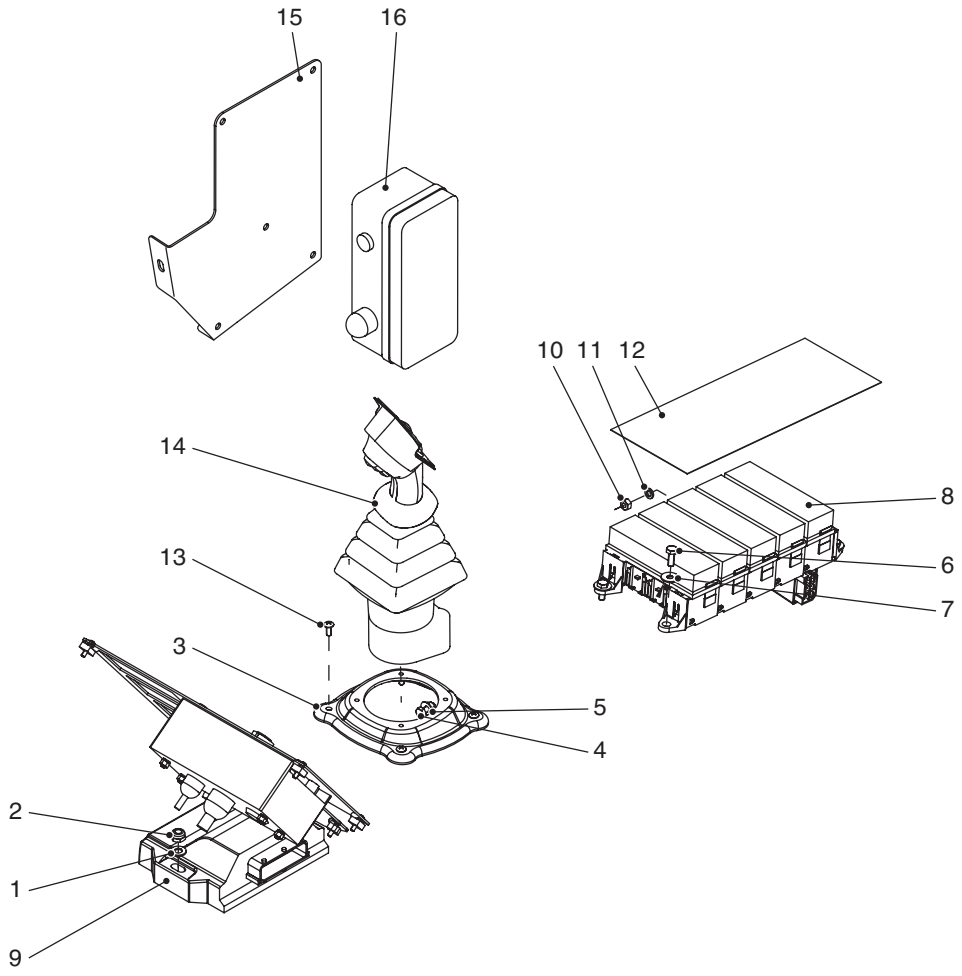

SPC005015


https://www.pdfmanual4trucks.com/


Joystick / Susmic Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	01697.2	Washer			6
2	51851.4	Nut			2
3	6909205	Joystick spacer			1
4	01717.8	Washer			1
5	01590.9	Screw			1
6	01590.9	Screw			4
7	29272.2	Washer			4
8	6911733	Fuse box			1
9	96038.5	Transmission box			1
10	01666.7	Nut			2
11	94574.1	Washer			3
12	6912455	Adhesive			1
13	6910697	Screw			7
14	6910314	Joystick			1
15	6909206	Support			1
16	6911363	Control box			1

https://www.pdfmanual4trucks.com/

Security Circuit

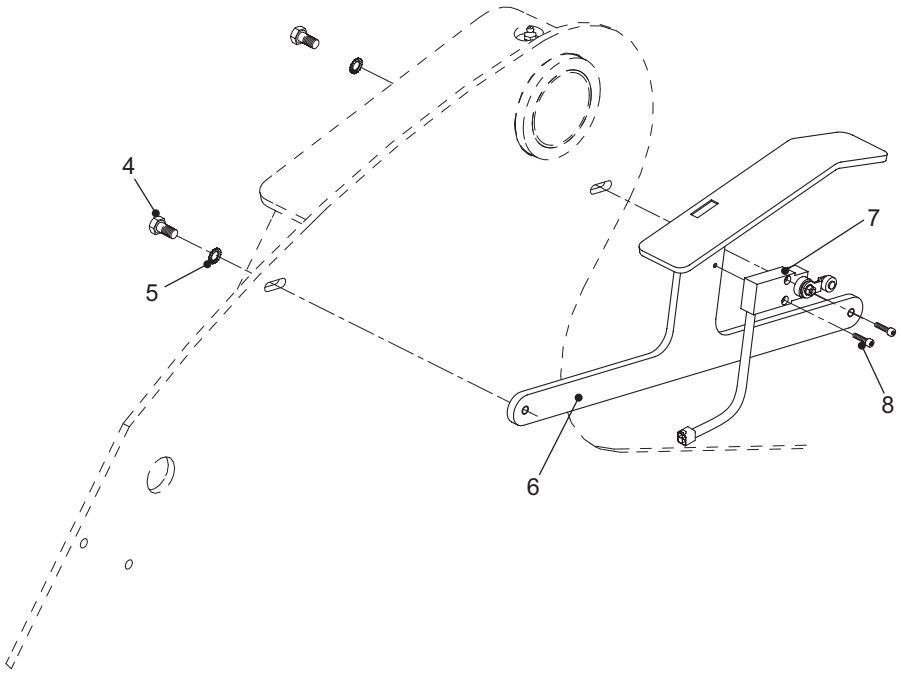

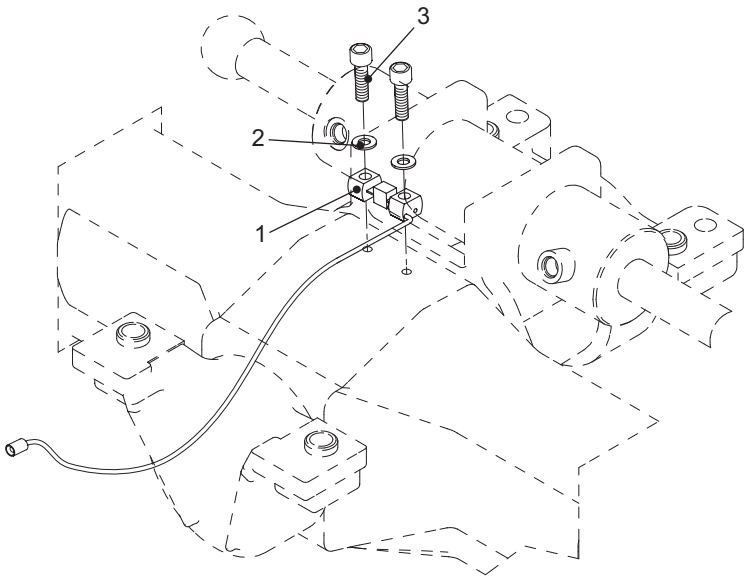

SPC005013


https://www.pdfmanual4trucks.com/

Security Circuit

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6914109	Captor			1
2	000350-03W	Washer			2
3	01640.2	Screw			2
4	01596.6	Screw	Frame leveling version only	3629 11001 & above	2
5	01718.6	Washer	Frame leveling version only	3629 11001 & above	2
6	6909871	Support	Frame leveling version only	3629 11001 & above	1
7	6911738	Switch	Frame leveling version only ; Was 92971.1	3629 11001 & above	1
8	61416.4	Screw	Frame leveling version only	3629 11001 & above	2

https://www.pdfmanual4trucks.com/

Engine Installation

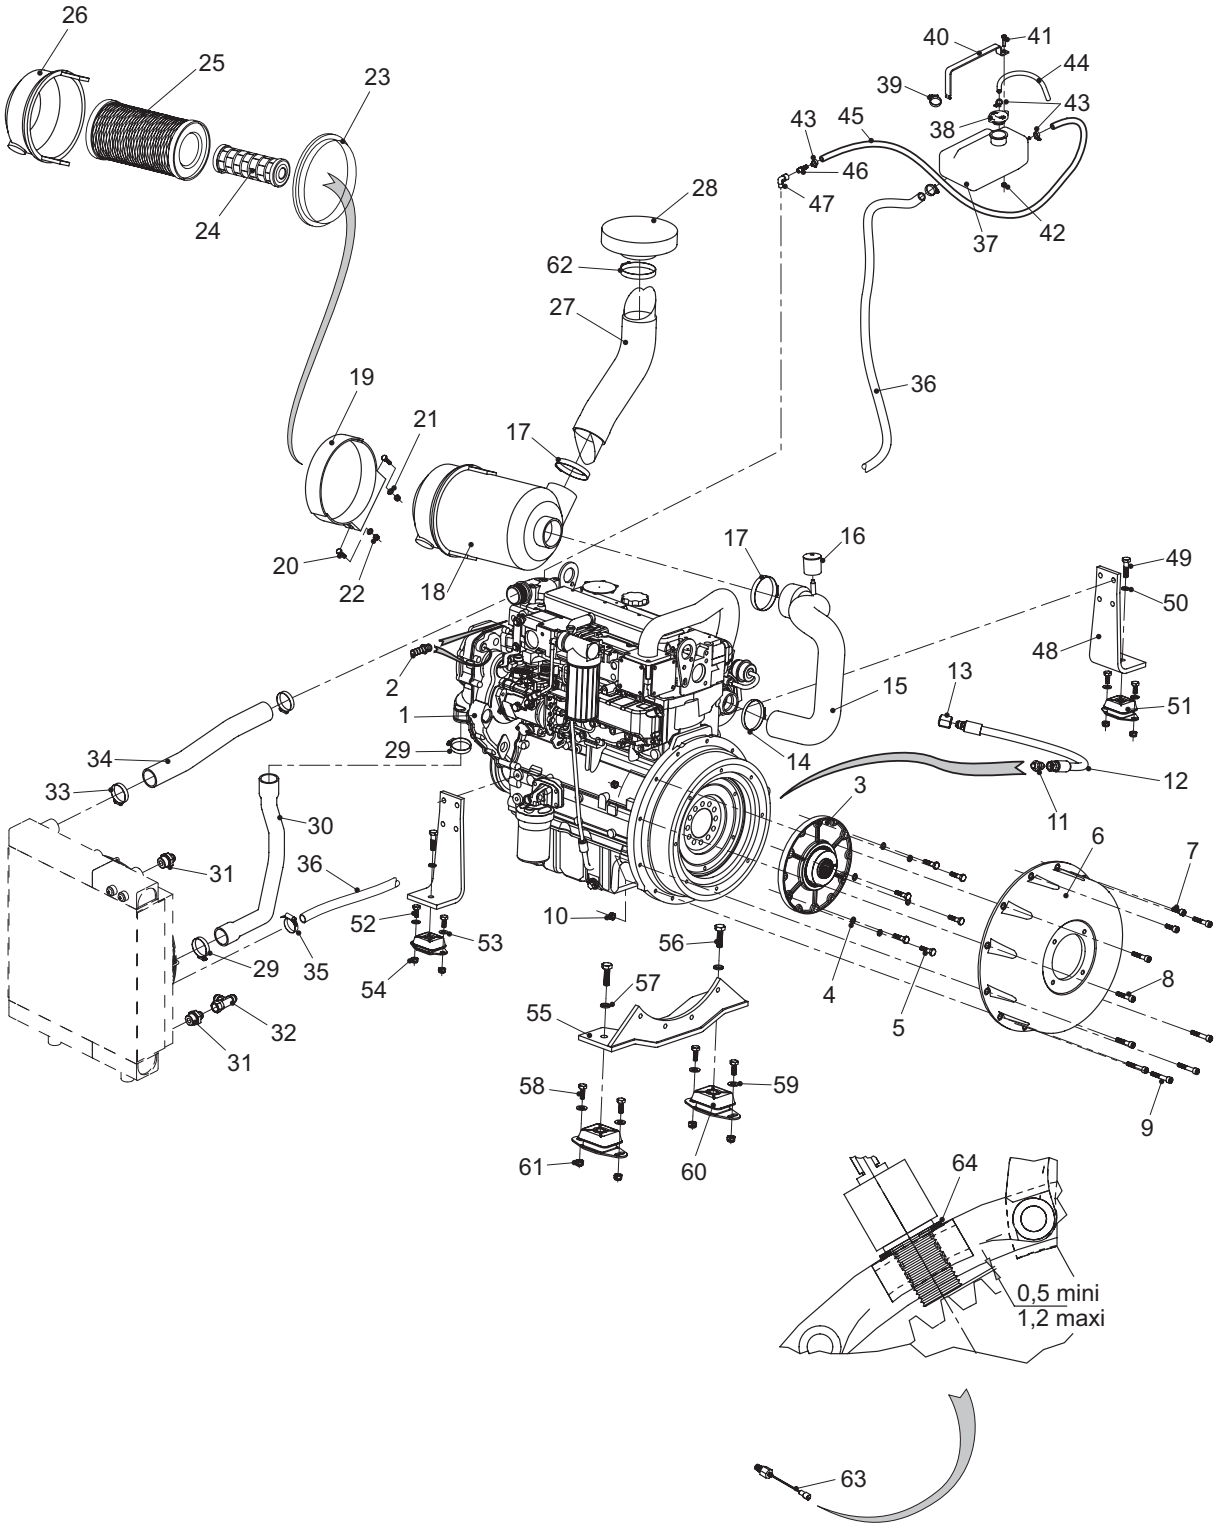

https://www.pdfmanual4trucks.com/


Engine Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	98038.3	Engine	See following pages for details		1
2	38441.2	Union			2
3	98011.0	Coupling			1
4	89516.9	Washer			6
5	01608.9	Screw			6
6	97878.3	Housing			1
7	01640.2	Screw			2
8	54009.6	Screw			4
9	14039.2	Screw			4
10	100345-09A	Nut			8
11	96461.9	Adapter			1
12	96462.7	Drain Hose			1
13	011374-44C	Plug			1
14	29713.5	Clamp			1
15	6913454	Hose	Was 6911277		1
16	6911276	Indicator filing			1
17	35949.7	Clamp			2
18	97746.2	Air Filter	Pos. 18 + 23 to 26		1
19	97747.0	Collar			1
20	007330-29V	Screw			2
21	01697.2	Washer			2
22	51851.4	Nut			2
23	6910727	Ring			1
24	6910726	Air filter element, secondary			1
25	6910725	Air filter element, primary			1
26	6910724	Air filter cover			1
27	6908586	Hose			1
28	6908363	Rain-proof cap			1
29	100369-80K	Clamp			2
30	6910970	Hose, lower radiator			1
31	68609.7	Union			2

https://www.pdfmanual4trucks.com/

Engine Installation

Recurrence of previous drawing

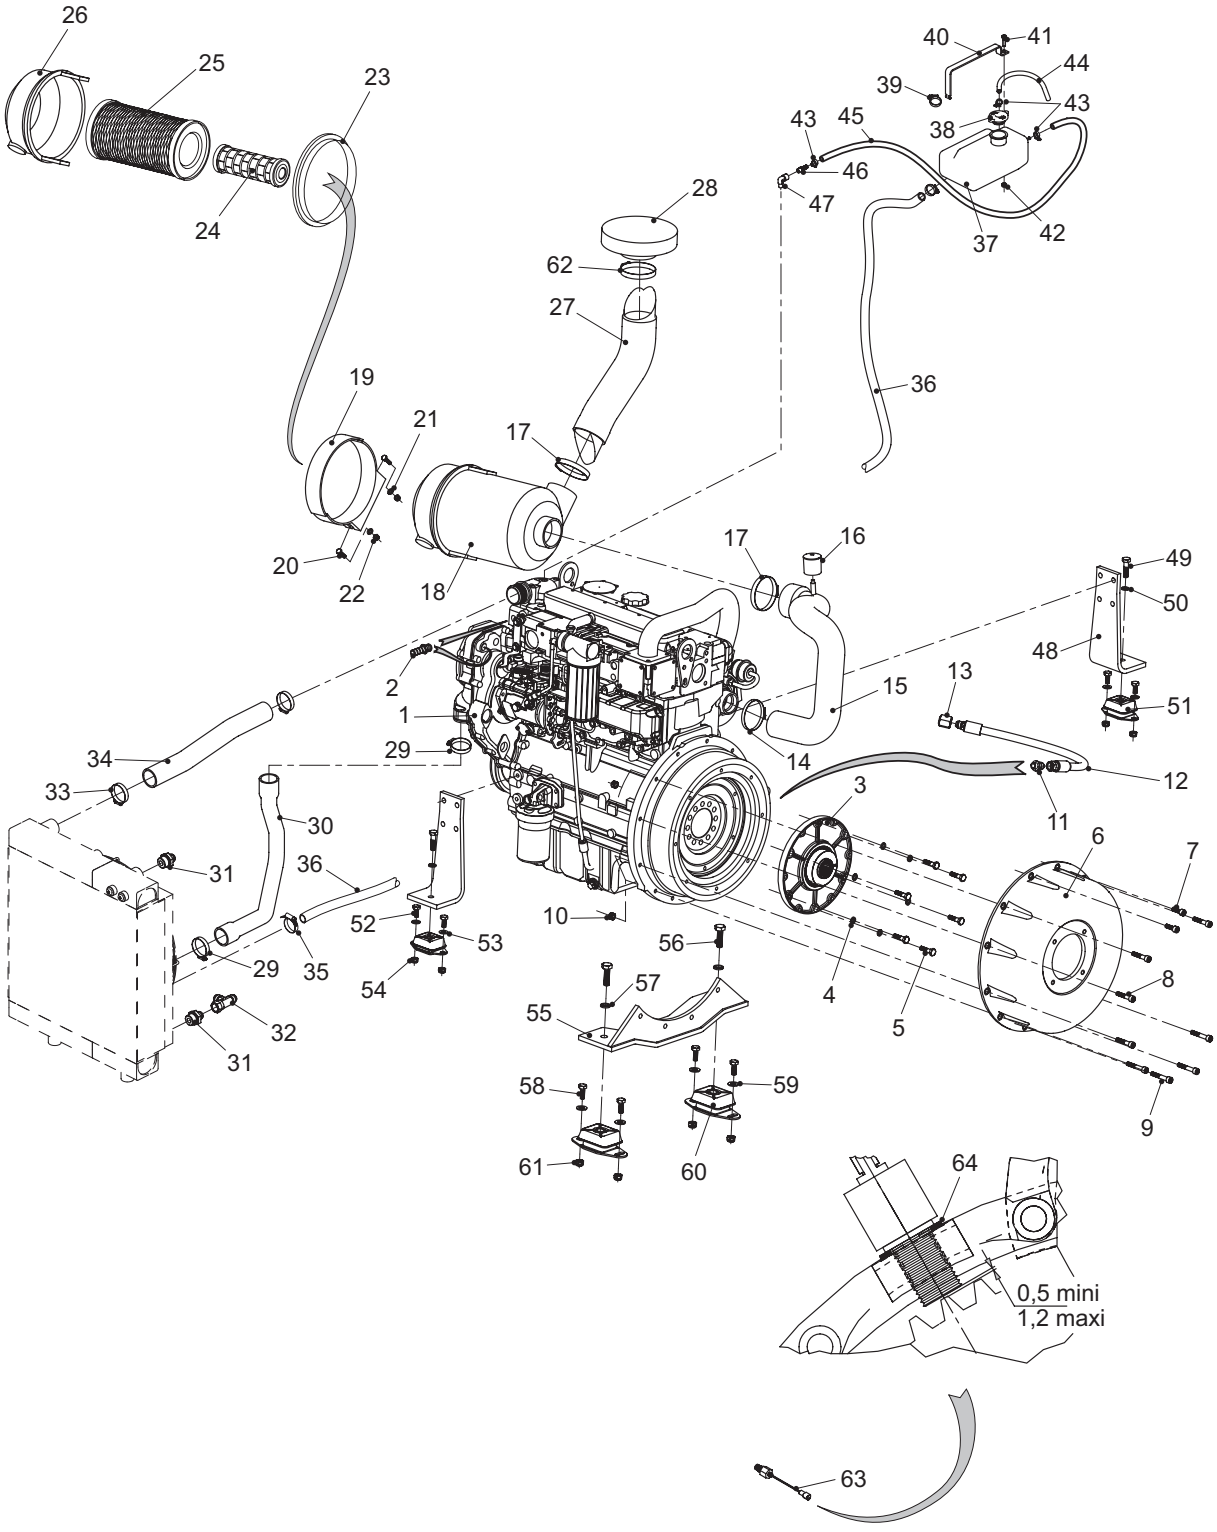

https://www.pdfmanual4trucks.com/


Engine Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	008372-34M	T- union			1
33	100369-80K	Clamp			2
34	6910969	Hose, upper radiator			1
35	11734.1	Collar			2
36	6908901	Hose, expansion tank			1
37	78688.9	Expansion tank			1
38	6909875	Plug			1
39	01275.7	Clamp			1
40	90490.4	Plate			1
41	01598.2	Screw			1
42	51851.4	Nut			1
43	62231.6	Clamp			3
44	6910264	Hose			1
45	6908902	Hose			1
46	014375-97F	Adapter			1
47	78745.7	Adapter			1
48	6908663	Plate			2
49	01528.9	Screw			2
50	89517.7	Washer			2
51	6914065	Shock Absorber			2
52	01605.5	Screw			4
53	000350-03W	Washer			4
54	100345-09A	Nut			4
55	6908071	Support			1
56	28439.8	Screw			2
57	89518.5	Washer			2
58	13399.1	Screw			4
59	000350-04X	Washer			4
60	6914064	Shock Absorber			2
61	000345-96E	Nut			4
62	38683.9	Collar			1

https://www.pdfmanual4trucks.com/

Engine Installation

Recurrence of previous drawing

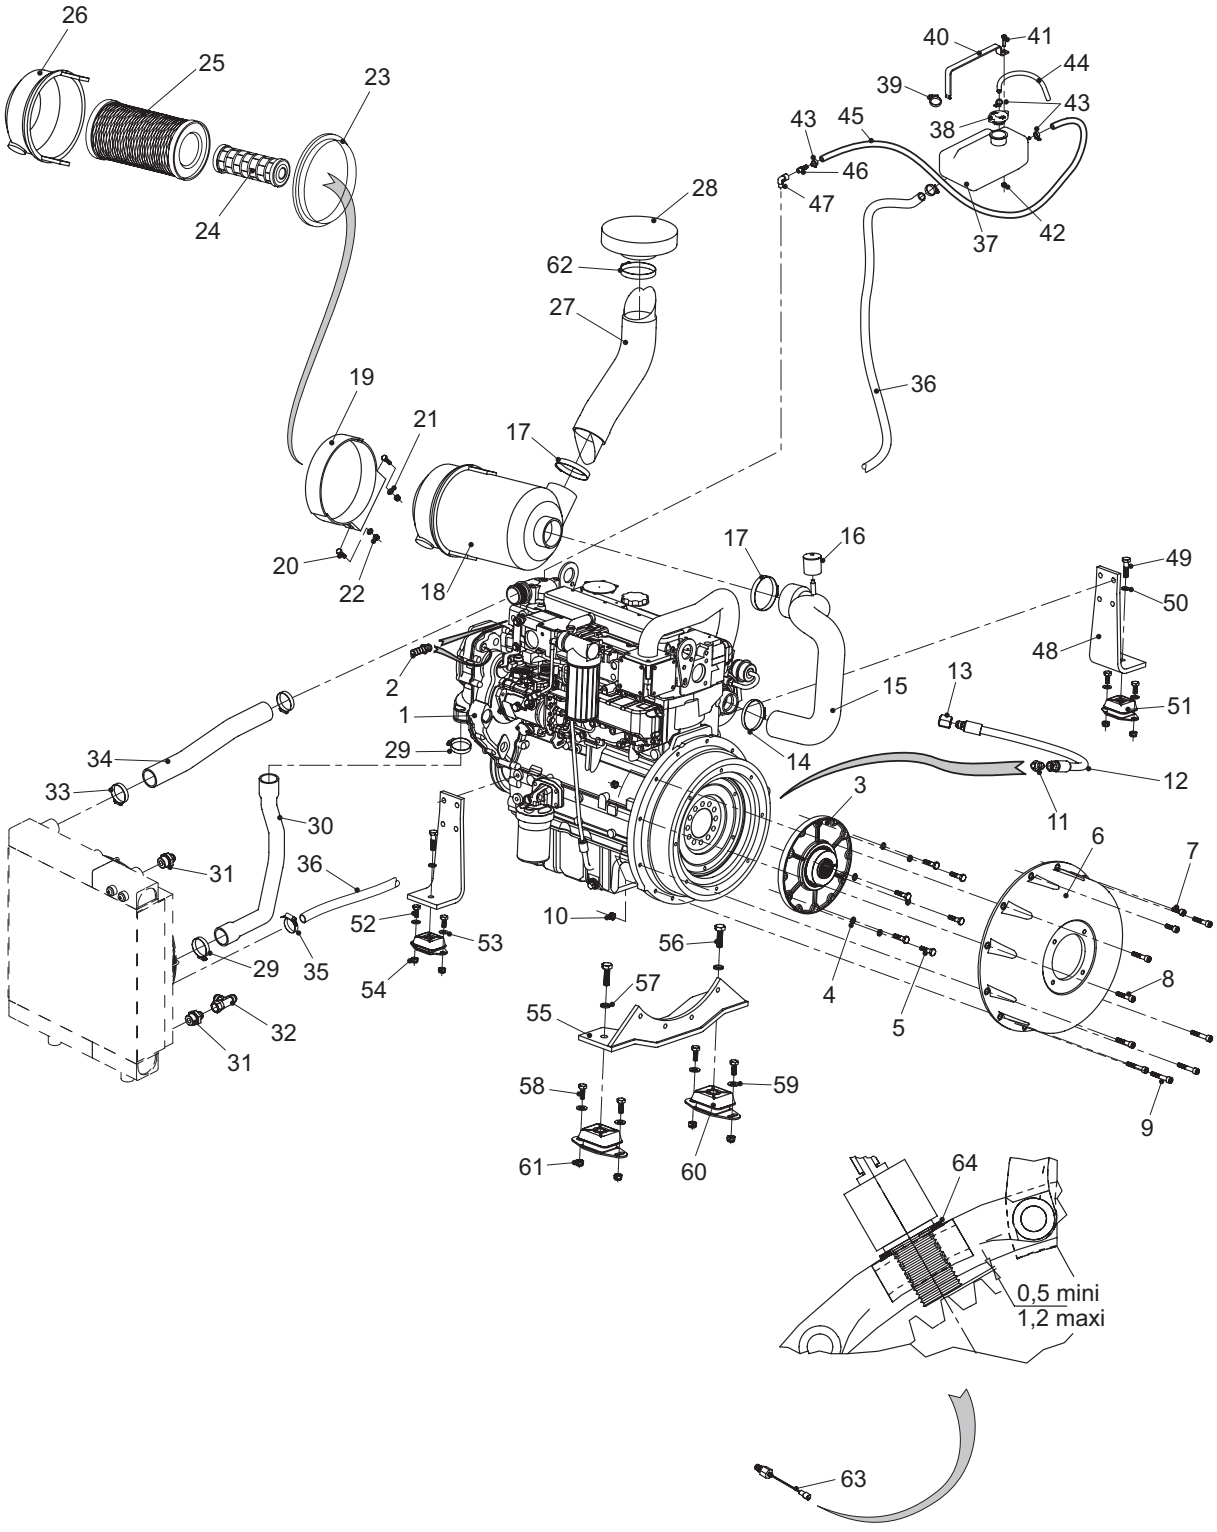


https://www.pdfmanual4trucks.com/

Engine Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
63	94751.5	Engine Speed Sensor			1
64	98132.4	Washer	As required		3

https://www.pdfmanual4trucks.com/

Exhaust System

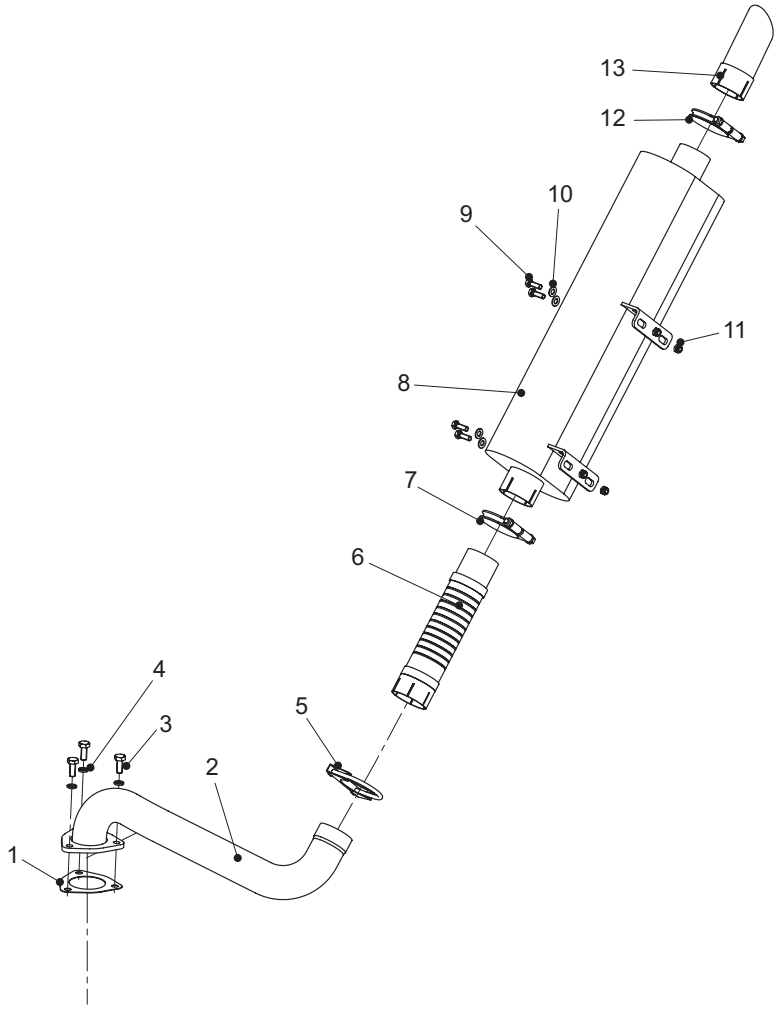

SPC006026


https://www.pdfmanual4trucks.com/

Exhaust System

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	66341.9	Seal			1
2	6915982	Exhaust tube	Was 6914387		1
3	01605.5	Screw			3
4	89516.9	Washer			3
5	95783.7	Clamp			1
6	6915352	Flexible exhaust pipe	Was 94677.2		1
7	79788.6	Clamp			1
8	6908100	Exhaust muffler			1
9	01597.4	Screw			4
10	000350-02V	Washer			4
11	51851.4	Nut			4
12	79788.6	Clamp			1
13	82234.6	Outlet pipe			1

https://www.pdfmanual4trucks.com/

Cooling System Installation

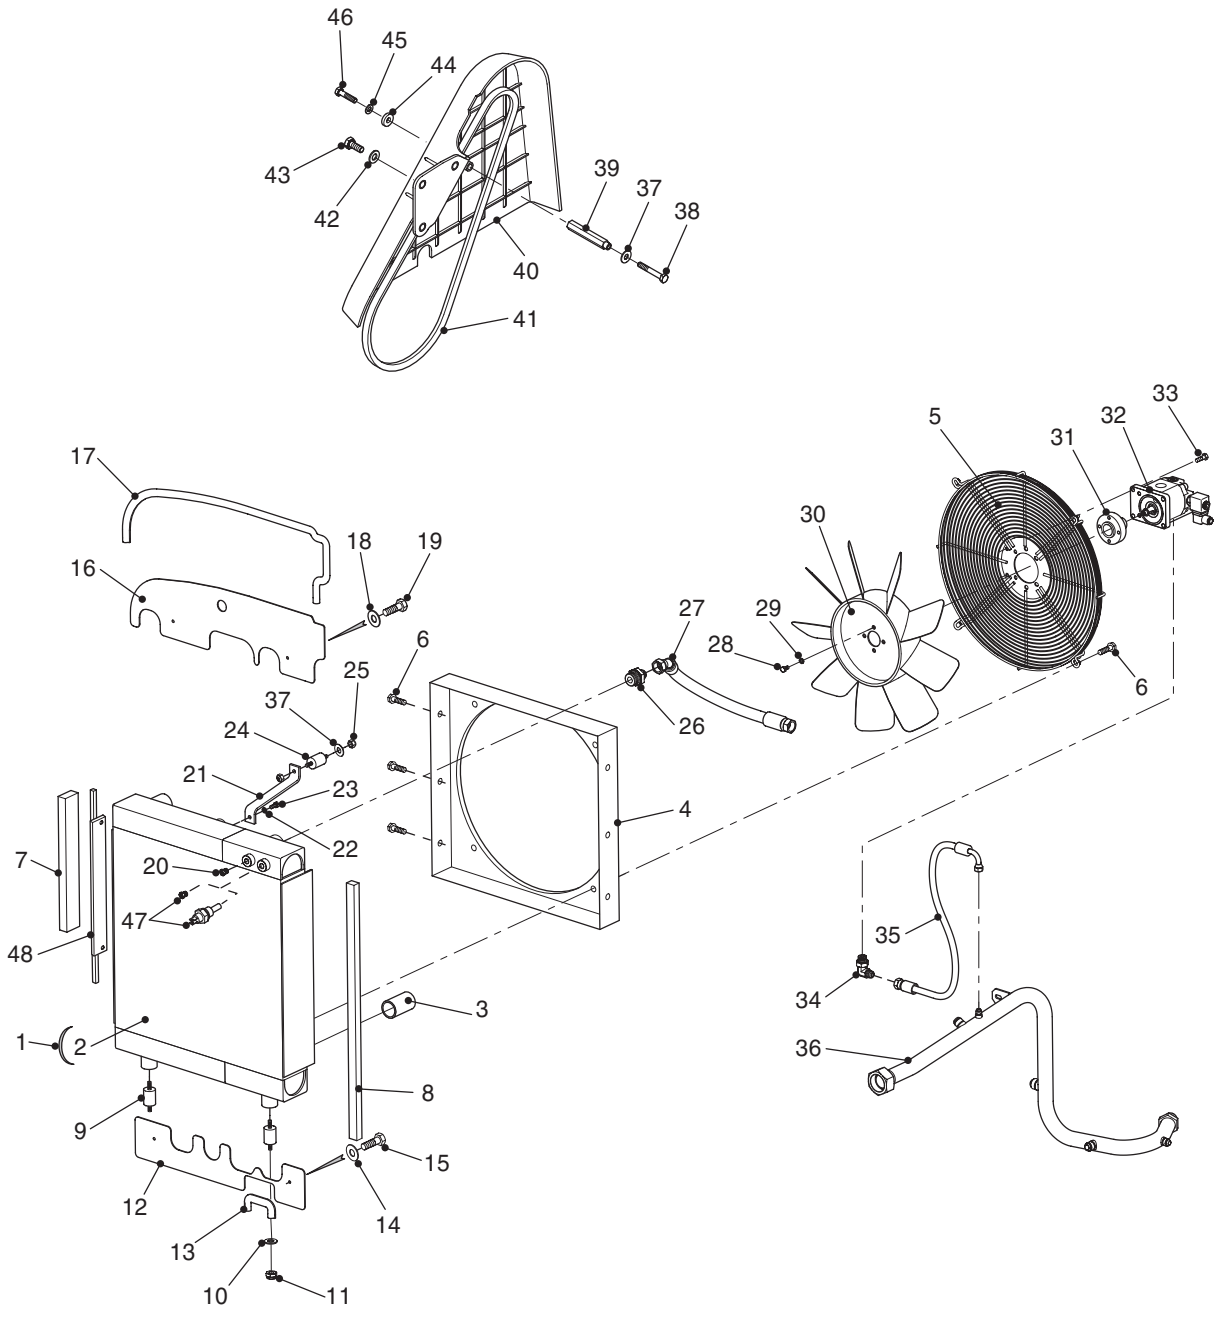

SPC006019

https://www.pdfmanual4trucks.com/


Cooling System Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6914085	Radiator assy	Pos. 2 to 6 ; Was 6910317		1
2	6912542	Cooler, water/oil			1
3	6912545	Hose			1
4	6912543	Housing			1
5	6912544	Fan grate			1
6	6912550	Screw			4
7	6914214	Plate			1
8	88395.9	Insulation			1
9	6910966	Support			2
10	89519.3	Washer			2
11	01668.3	Nut			2
12	6914199	Plate			1
13	6911213	Seal	Length: 170 mm		1
14	01717.8	Washer			2
15	01590.9	Screw			2
16	6914200	Plate			1
17	6911746	Seal	Length: 950 mm		1
18	01717.8	Washer			2
19	01590.9	Screw			2
20	100374-14H	Plug	Was 6911759		2
21	6910985	Plate			1
22	89519.3	Washer			1
23	01596.6	Screw			1
24	6910966	Support			1
25	51851.4	Nut			2
26	68609.7	Union			1
27	6913654	Hose			1
28	01595.8	Screw			4
29	89519.3	Washer			4
30	97915.3	Fan			1
31	6911798	Hub			1

https://www.pdfmanual4trucks.com/

Cooling System Installation

Recurrence of previous drawing

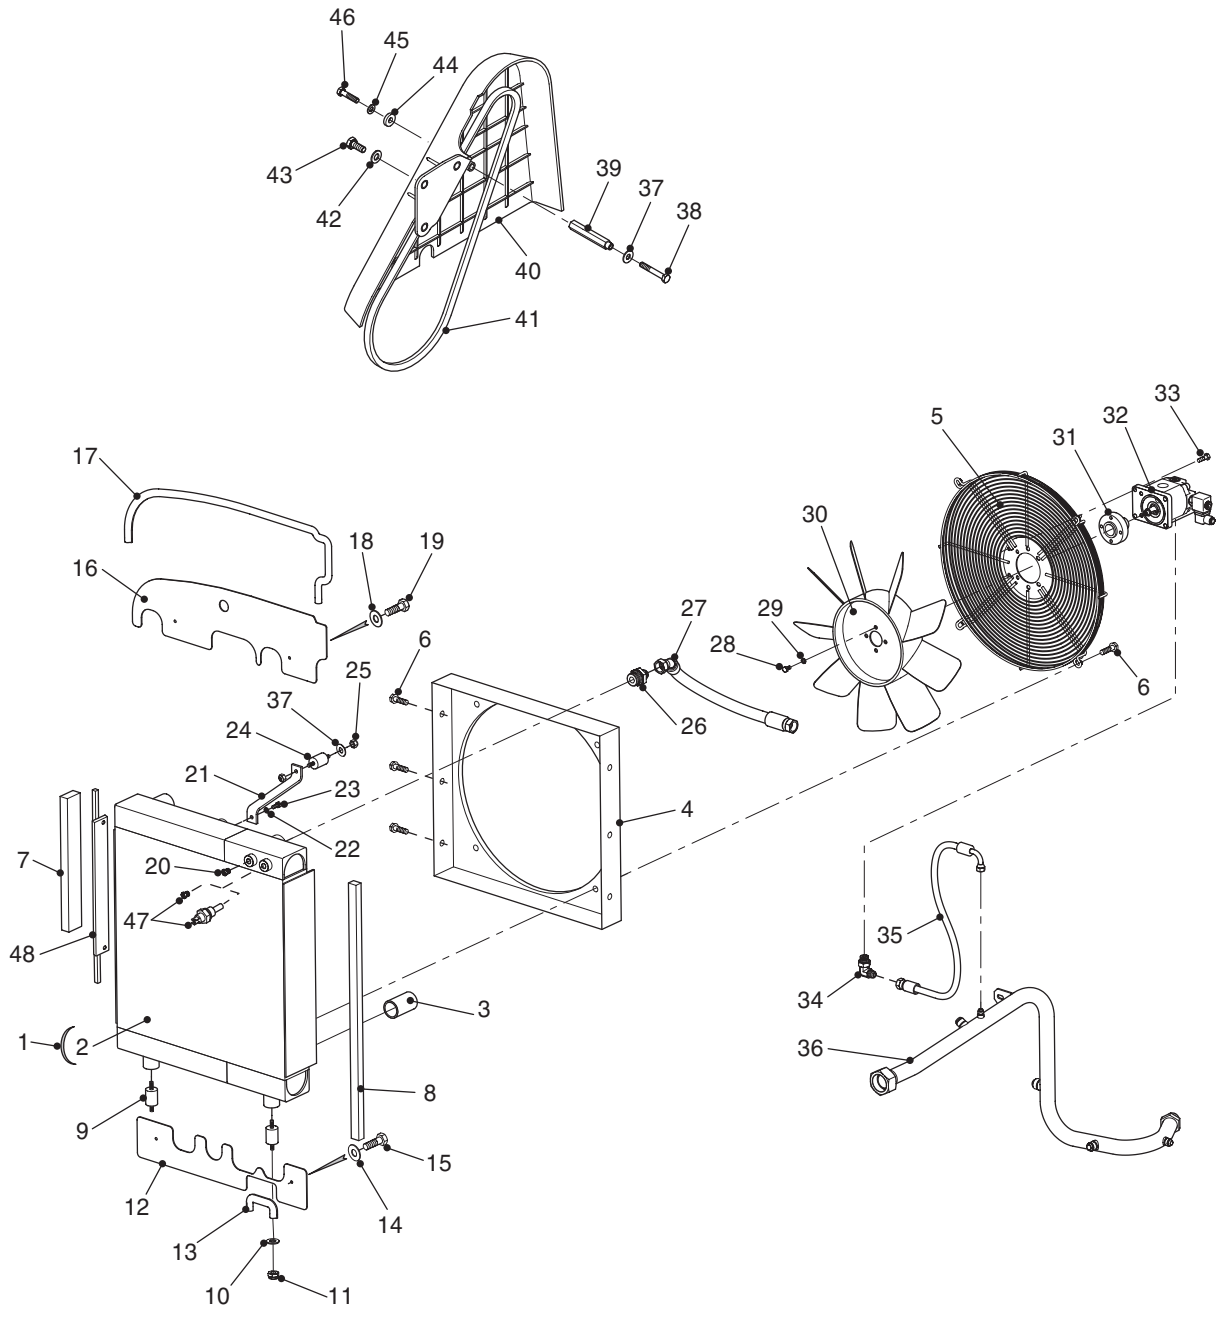

SPC006019


https://www.pdfmanual4trucks.com/

Cooling System Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	6909809	Hydraulic motor (2 speed)			1
33	01598.2	Screw			4
34	010370-93A	Elbow			1
35	6910622	Hose			1
36	6910972	Pipe			1
37	000350-20Q	Washer			1
38	01602.2	Screw			1
39	6915334	Spacer			1
40	6915517	Belt protector			1
41	79527.8	Engine Drive Belt			1
42	000350-03W	Washer			3
43	01605.5	Screw			3
44	97610.0	Washer			1
45	01697.2	Washer			1
46	01578.4	Screw			1
47	6914222	Thermo switch			1
48	6914219	Foam			1

https://www.pdfmanual4trucks.com/

Cooling Fan Circuit

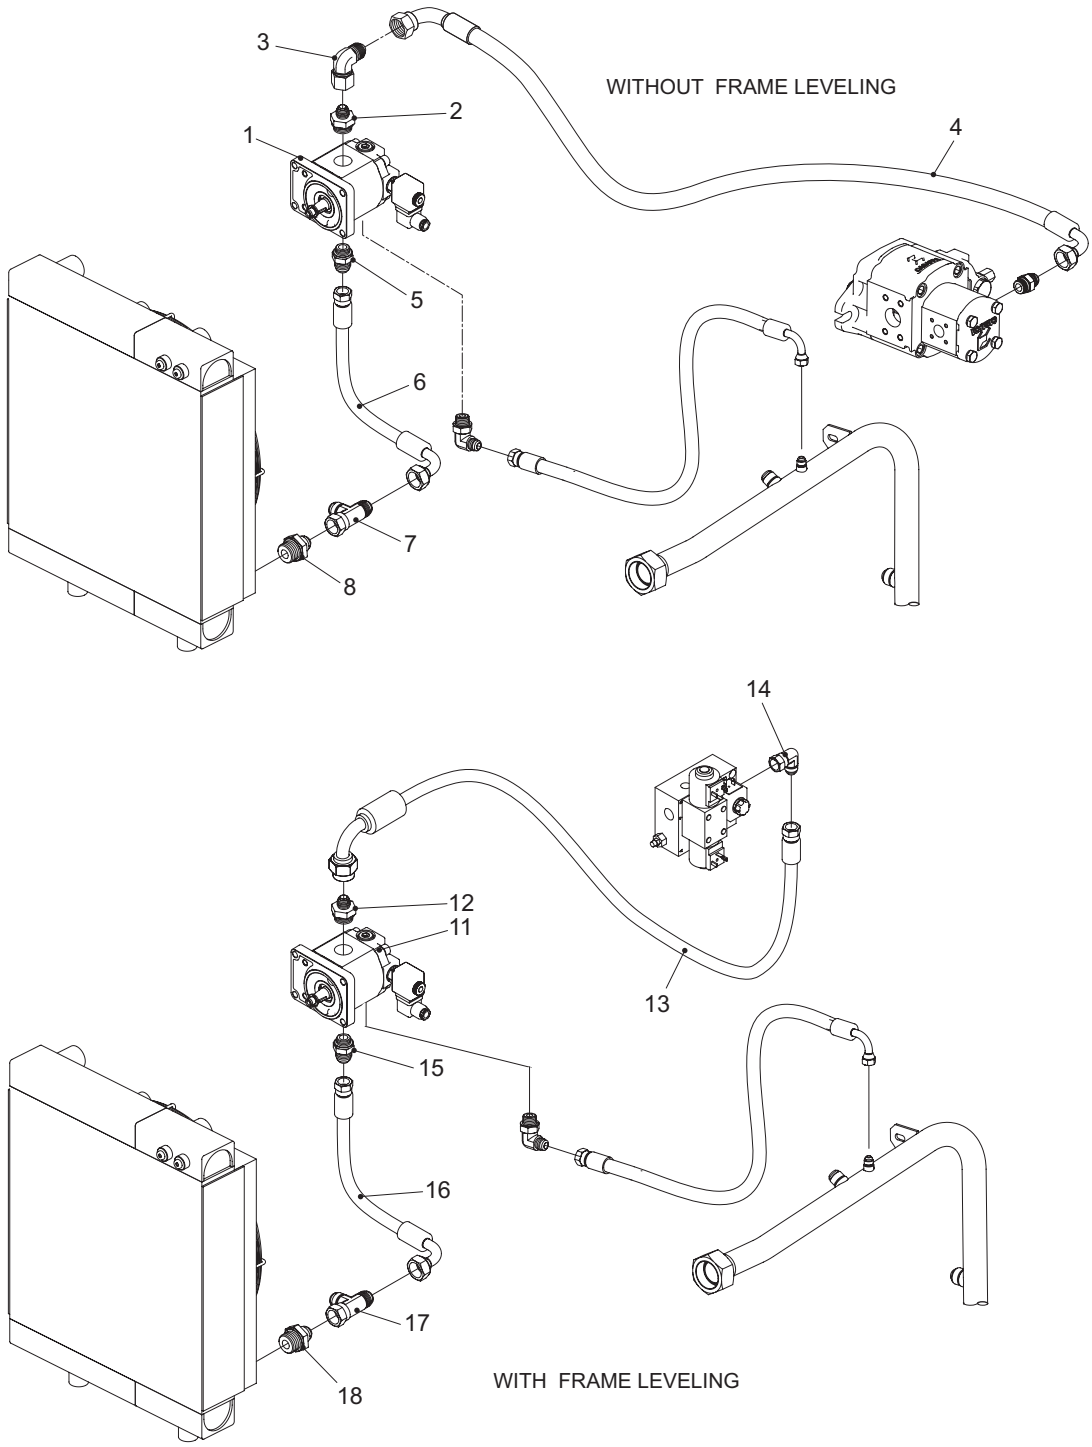

SPC006023


https://www.pdfmanual4trucks.com/

Cooling Fan Circuit

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6909809	Hydraulic motor (2 speed)	Without frame leveling		1
2	100375-59Q	Union	Without frame leveling		1
3	008372-01B	Elbow	Without frame leveling		1
4	6913611	Hose	Without frame leveling		1
5	100375-40U	Adapter	Without frame leveling		1
6	6914640	Hose	Without frame leveling ; Was 6913654		1
7	008372-34M	T- union	Without frame leveling		1
8	68609.7	Union	Without frame leveling		1
11	6909809	Hydraulic motor (2 speed)	With frame leveling		1
12	100375-59Q	Union	With frame leveling		1
13	94992.5	Hose	With frame leveling		1
14	008372-01B	Elbow	With frame leveling		1
15	100375-40U	Adapter	With frame leveling		1
16	6914640	Hose	With frame leveling ; Was 6913654		1
17	008372-34M	T- union	With frame leveling		1
18	68609.7	Union	With frame leveling		1

https://www.pdfmanual4trucks.com/

Cooling Fan Circuit (with optional reverse)

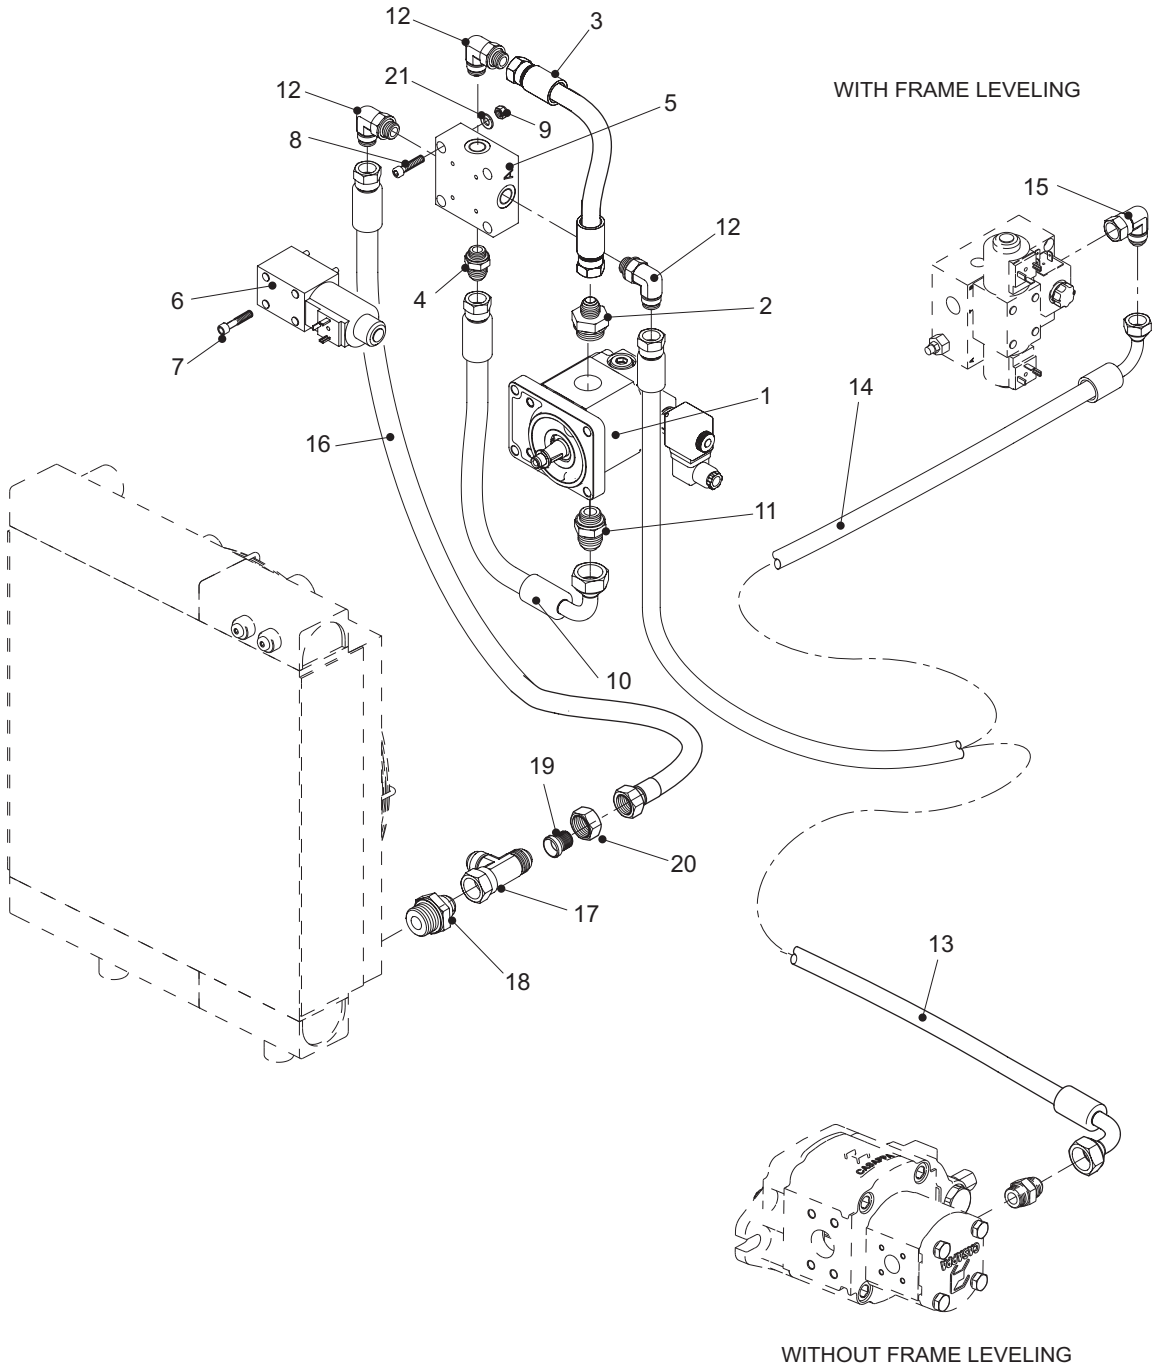

SPC006024


https://www.pdfmanual4trucks.com/

Cooling Fan Circuit (with optional reverse)

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6909809	Hydraulic motor (2 speed)			1
2	100375-59Q	Union			1
3	92995.0	Hose	Was 6911027		1
4	100375-38S	Adapter			1
5	98348.6	Support			1
6	98355.1	Electro distributor	Pos. 6 + 7		1
7	79160.8	Screw			4
8	13669.7	Screw			4
9	100345-06W	Nut			4
10	6911028	Hose			1
11	100375-40U	Adapter			1
12	010370-94B	Elbow			3
13	6913611	Hose	Without frame leveling		1
14	6911037	Hose	With frame leveling, without rear hydraulic function option		1
	6910691	Hose	With frame leveling, with rear hydraulic function option		1
15	008372-01B	Elbow			1
16	96759.6	Hose	Was 6911029		1
17	008372-34M	T- union			1
18	68609.7	Union			1
19	100375-15S	Reducer			1
20	100345-34C	Nut			1
21	01696.4	Washer			4

https://www.pdfmanual4trucks.com/

Cylinder Block

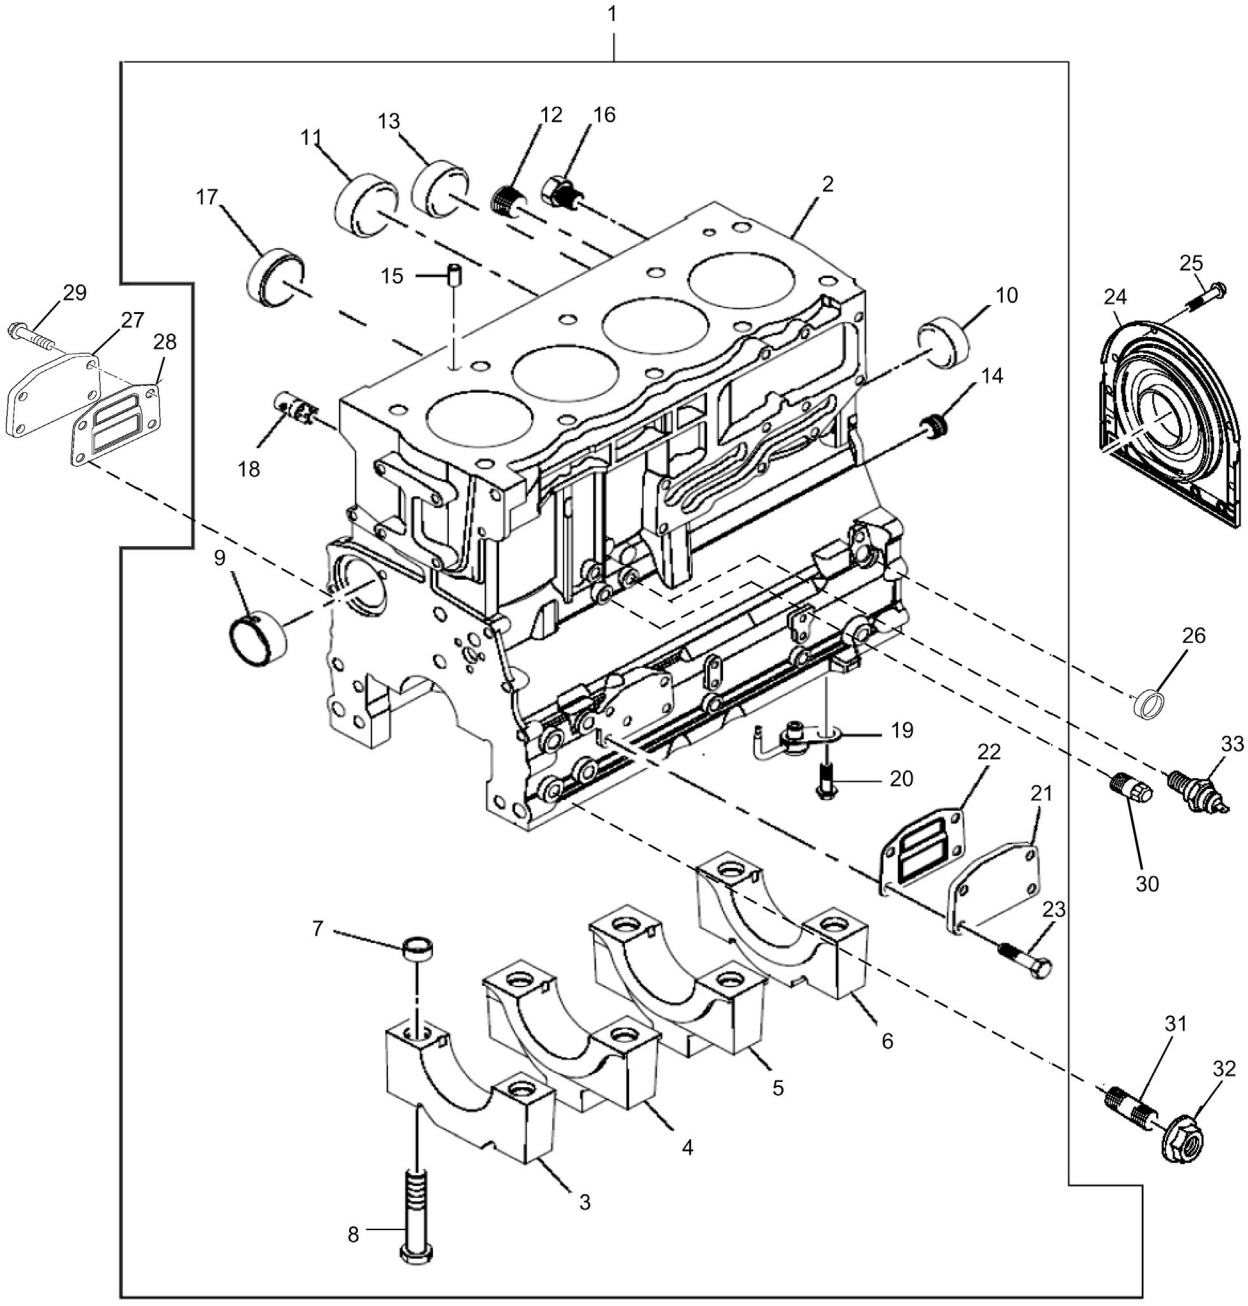

SPC006002

https://www.pdfmanual4trucks.com/


Cylinder Block

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912027	Cylinder block kit	Pos. 2 to 23		1
2		Cylinder block	Order Pos. 1		1
3		Bearing cap	Order Pos. 1		1
4		Bearing cap	Order Pos. 1		1
5		Bearing cap	Order Pos. 1		1
6		Bearing cap	Order Pos. 1		1
7	64627.3	Bush			10
8	64628.1	Screw			10
9	6911915	Bush			1
10	6911937	Plug			1
11	6911936	Plug			2
12	71263.8	Plug			1
13	32478.0	Plug			1
14	6911928	Plug			1
15	93379.6	Dowel			2
16	6911932	Plug			2
17	6911892	Plug			1
18	6911931	Plug			1
19	6911862	Piston cooling jet			4
20	71564.9	Screw			4
21	6911964	Plate			1
22	6911983	Gasket			1
23	71381.8	Screw			4
24	6911887	Oil seal housing			1
25	6912051	Screw			10
26	6911893	Plug			1
27	6911964	Plate			1
28	6911983	Gasket			1
29	71381.8	Screw			4
30	6911930	Plug			1
31	64988.9	Stud			8

https://www.pdfmanual4trucks.com/

Cylinder Block

Recurrence of previous drawing

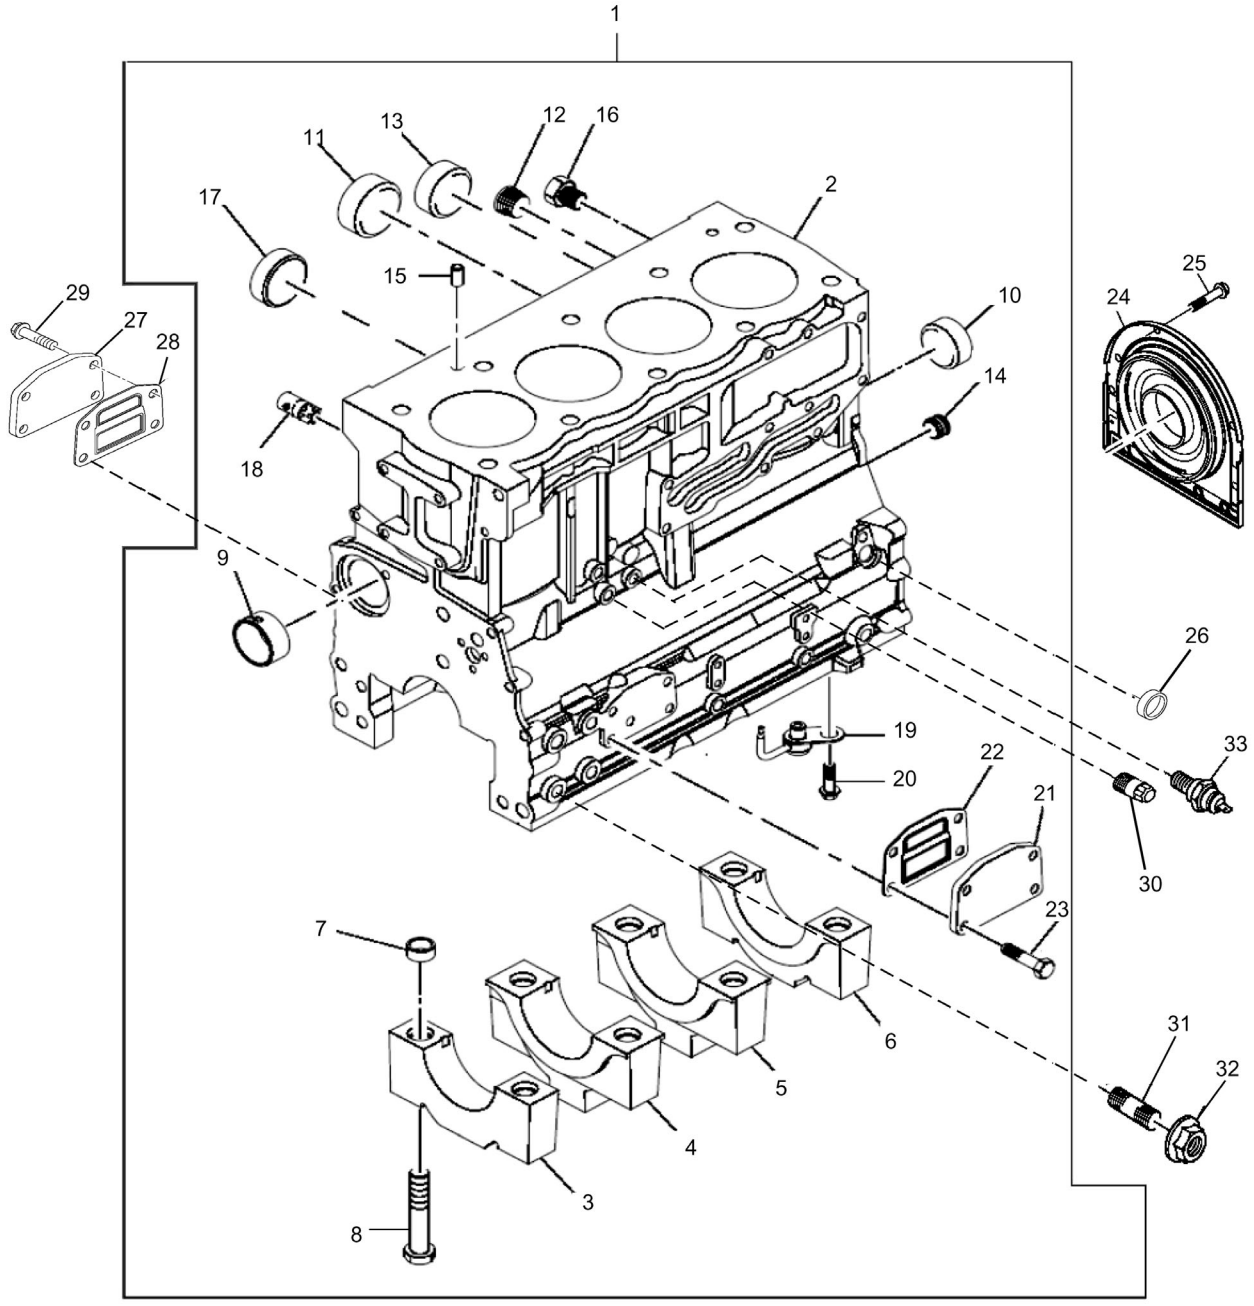

SPC006002


https://www.pdfmanual4trucks.com/

Cylinder Block

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	64796.6	Nut			8
33	26278.2	Oil Pressure Switch			1

https://www.pdfmanual4trucks.com/

Crankshaft - Pistons

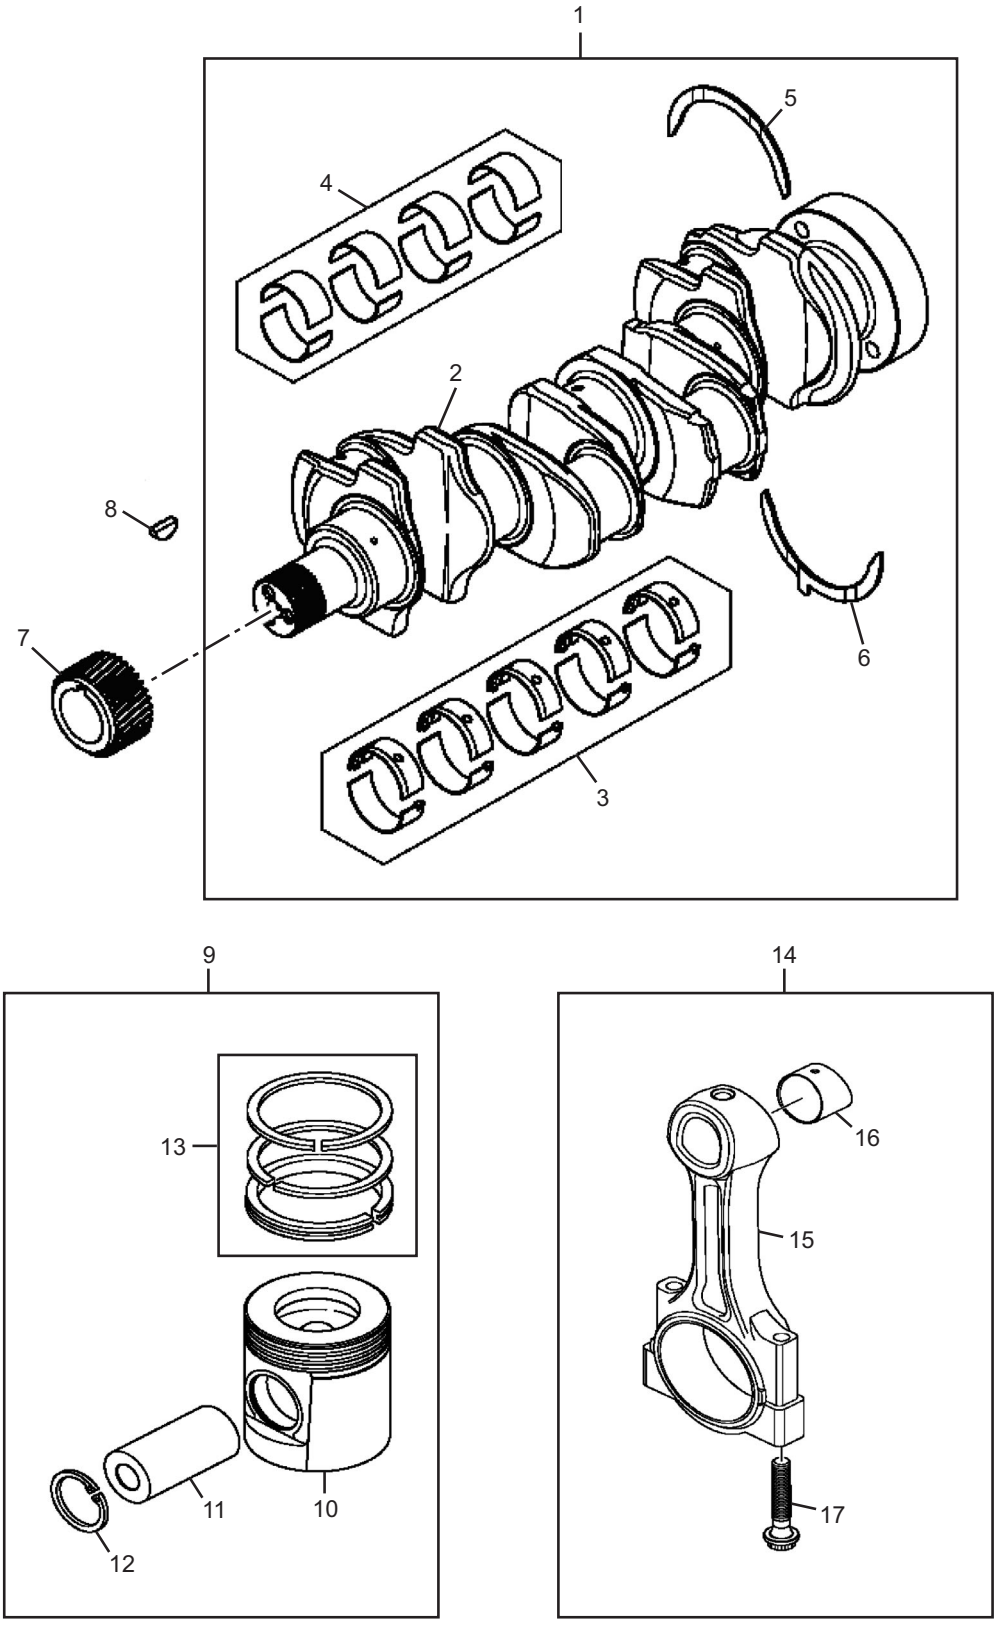

SPC006003


https://www.pdfmanual4trucks.com/

Crankshaft - Pistons

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912029	Crankshaft assy	Pos. 2 to 6		1
2		Crankshaft	Order Pos. 1		1
3	6912021	Bearing			1
	6912034	Bearing	+ 0.01		1
	6912035	Bearing	+ 0.02		1
	6912036	Bearing	+ 0.03		1
4	6912022	Bearing kit			1
	6912031	Bearing kit	+ 0.01		1
	6912032	Bearing kit	+ 0.02		1
	6912033	Bearing kit	+ 0.03		1
5	46893.4	Stop			2
	60583.2	Thrust washer	+ 0.007		2
6	46894.2	Stop			2
	60584.0	Stop washer	+ 0.007		2
7	6912046	Crankshaft gear			1
8	64655.4	Key			1
9	6912050	Piston assy	Pos. 10 to 13		4
10		Piston	Order Pos. 9		4
11		Piston pin	Order Pos. 9		4
12	93158.4	Snap ring			8
13	6912026	Piston ring kit			4
14	6911897	Conrod kit	Grade F (red)		4
	6912040	Conrod kit	Grade G (orange)		4
	6912041	Conrod kit	Grade H (white)		4
	6912042	Conrod kit	Grade J (green)		4
	6912043	Conrod kit	Grade K (violet)		4
	6912044	Conrod kit	Grade L (blue)		4
15		Conrod	Order Pos. 14		4
16	6911914	Bush			4
17	6911929	Screw			8

https://www.pdfmanual4trucks.com/

Flywheel and Drive Pulley

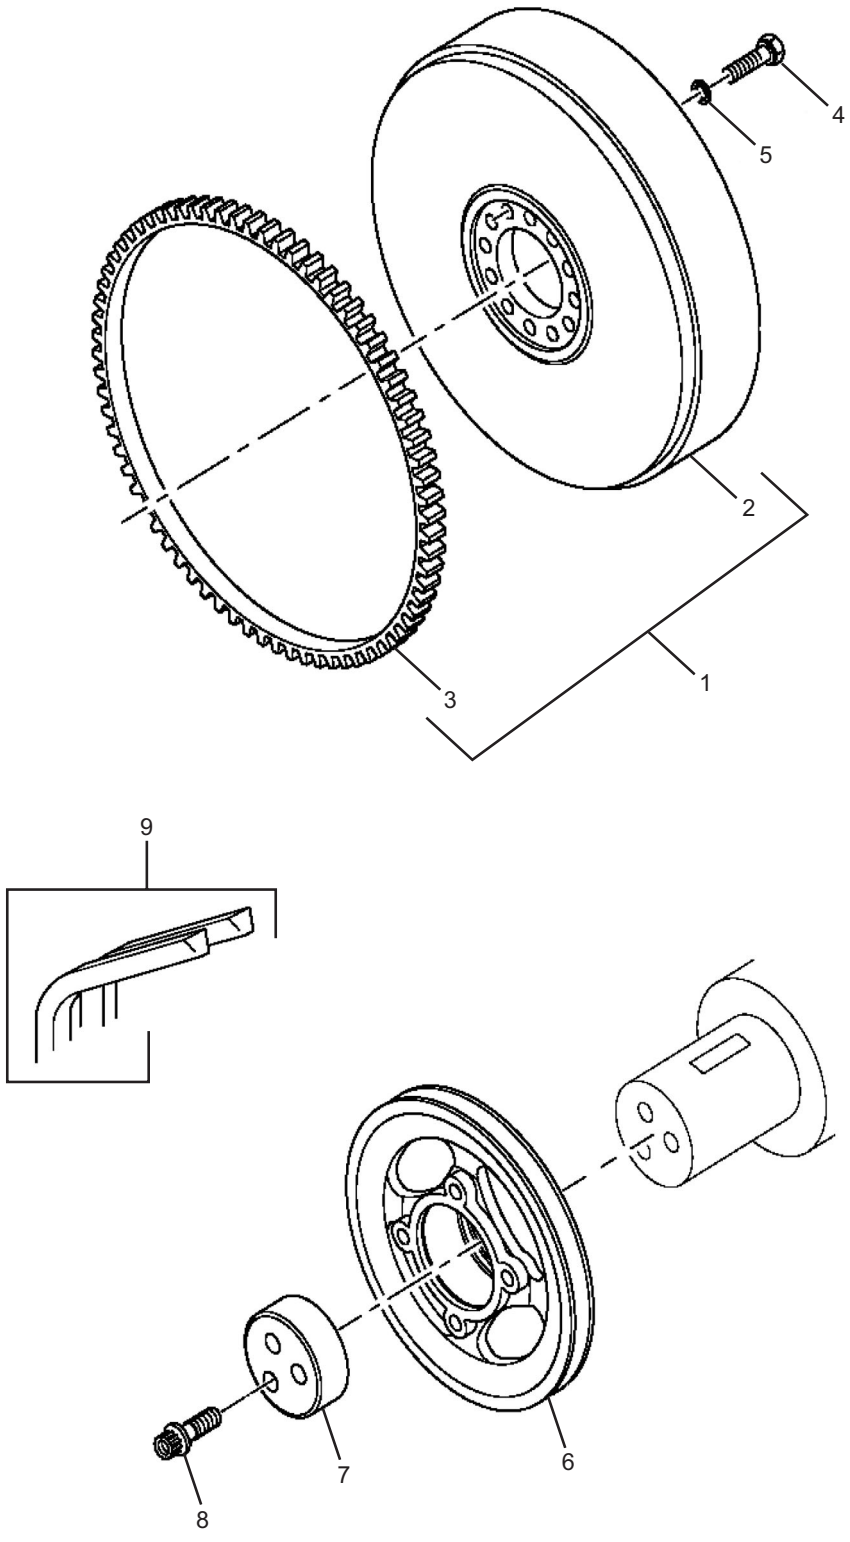

SPC006004


https://www.pdfmanual4trucks.com/

Flywheel and Drive Pulley

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	81038.2	Flywheel assembly	Pos. 2 + 3		1
2		Fly wheel	Order Pos. 1		1
3	55698.5	Gear	Was 100393-40B		1
4	6911852	Screw			1
5	71307.3	Washer			1
6	75254.3	Pulley			1
7	81037.4	Washer			1
8	81036.6	Screw			3
9	6912049	Belt	Serviced in pairs		1

https://www.pdfmanual4trucks.com/

Cylinder Head

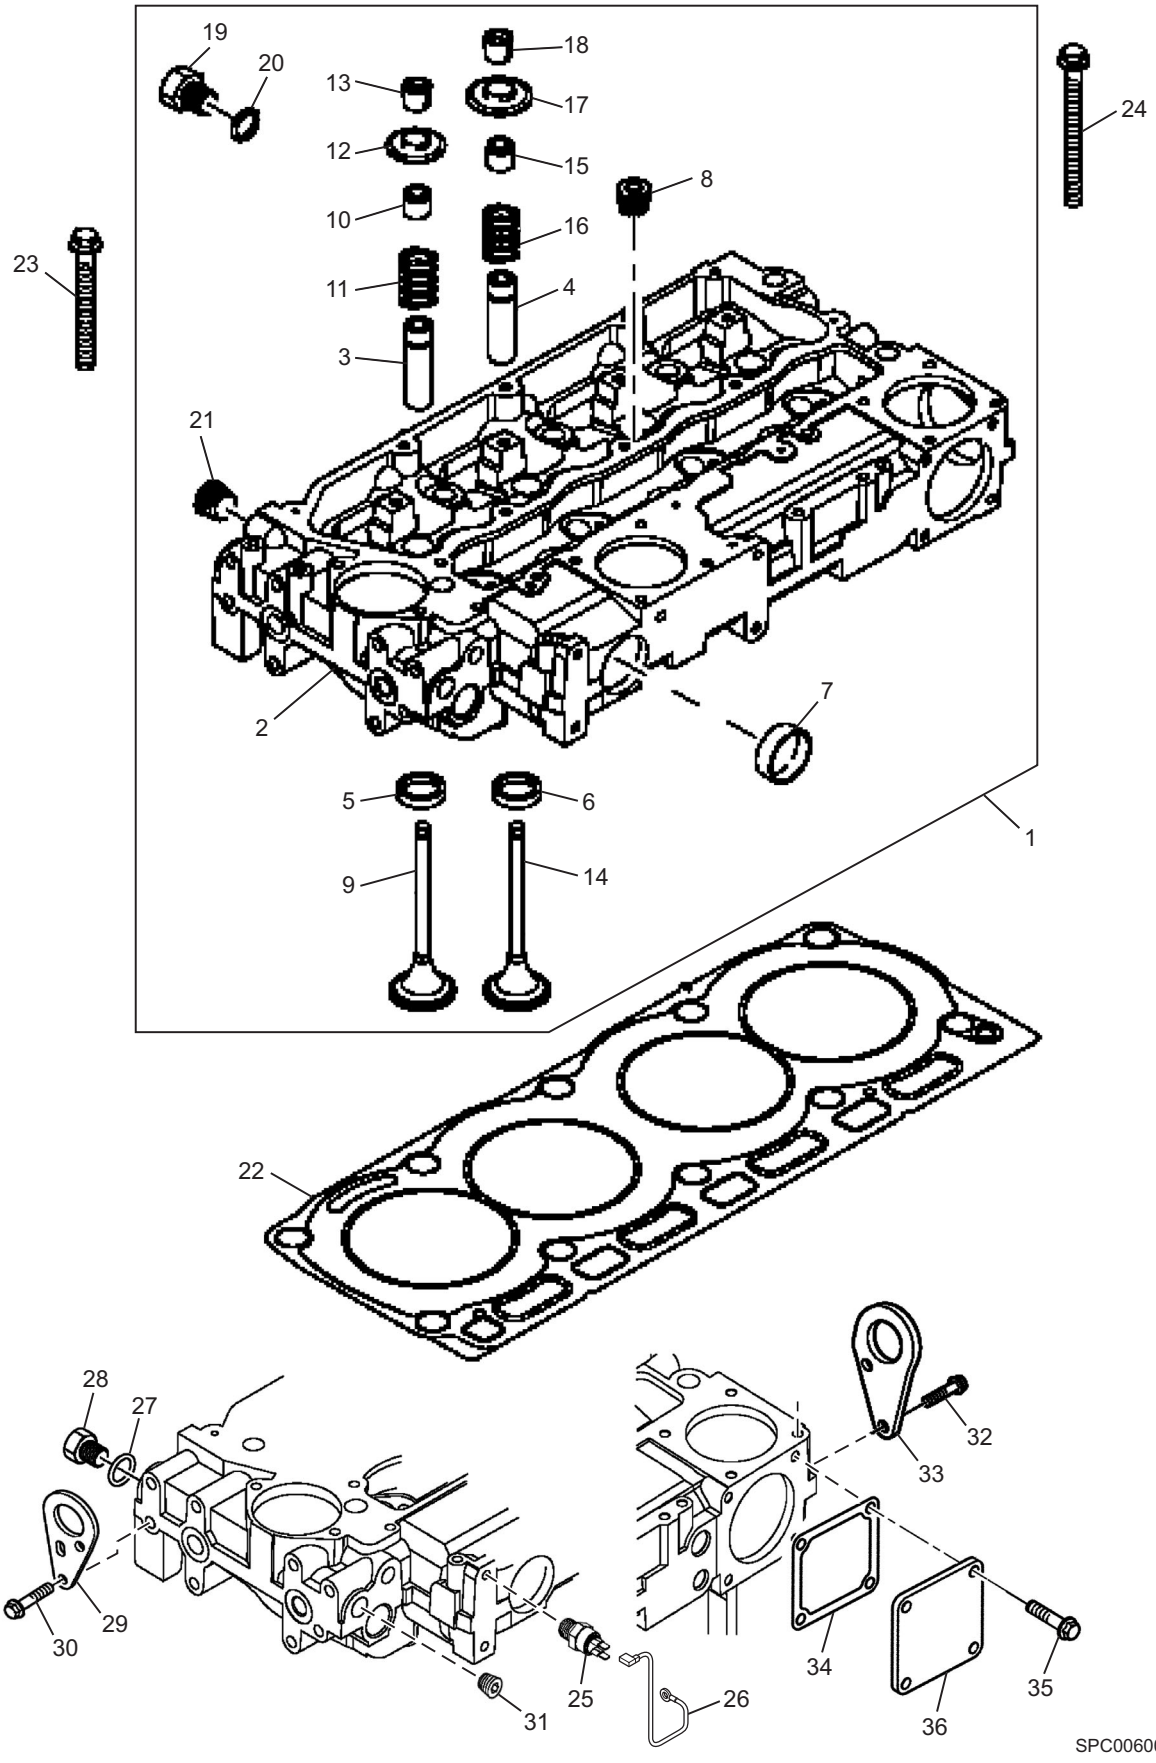

https://www.pdfmanual4trucks.com/


Cylinder Head

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912028	Cylinder head assy	Pos. 2 to 21		1
2		Cylinder head	Order Pos. 1		1
3	93164.2	Guide			4
4	93164.2	Guide			4
5	6911945	Insert			4
6	6911946	Insert			4
7	40968.0	Plug			2
8	71263.8	Plug			4
9	6911923	Inlet valve			4
10	6911888	Seal			4
11	6911925	Spring			4
12	6911947	Cap			4
13	93168.3	Cotter			8
14	6911922	Exhaust valve			4
15	6911888	Seal			4
16	6911925	Spring			4
17	6911947	Cap			4
18	93168.3	Cotter			8
19	6911939	Plug			1
20	6911881	O-ring			1
21	33219.7	Plug			1
22	6911969	Cylinder head gasket			1
23	6911933	Screw			7
24	6911934	Screw			3
25	6911911	Switch, water temp			1
26	6912101	Wire harness			1
27	6911881	O-ring			1
28	6911939	Plug			1
29	6911961	Lifting plate			1
30	71348.7	Screw			2
31	33219.7	Plug			1

https://www.pdfmanual4trucks.com/

Cylinder Head

Recurrence of previous drawing

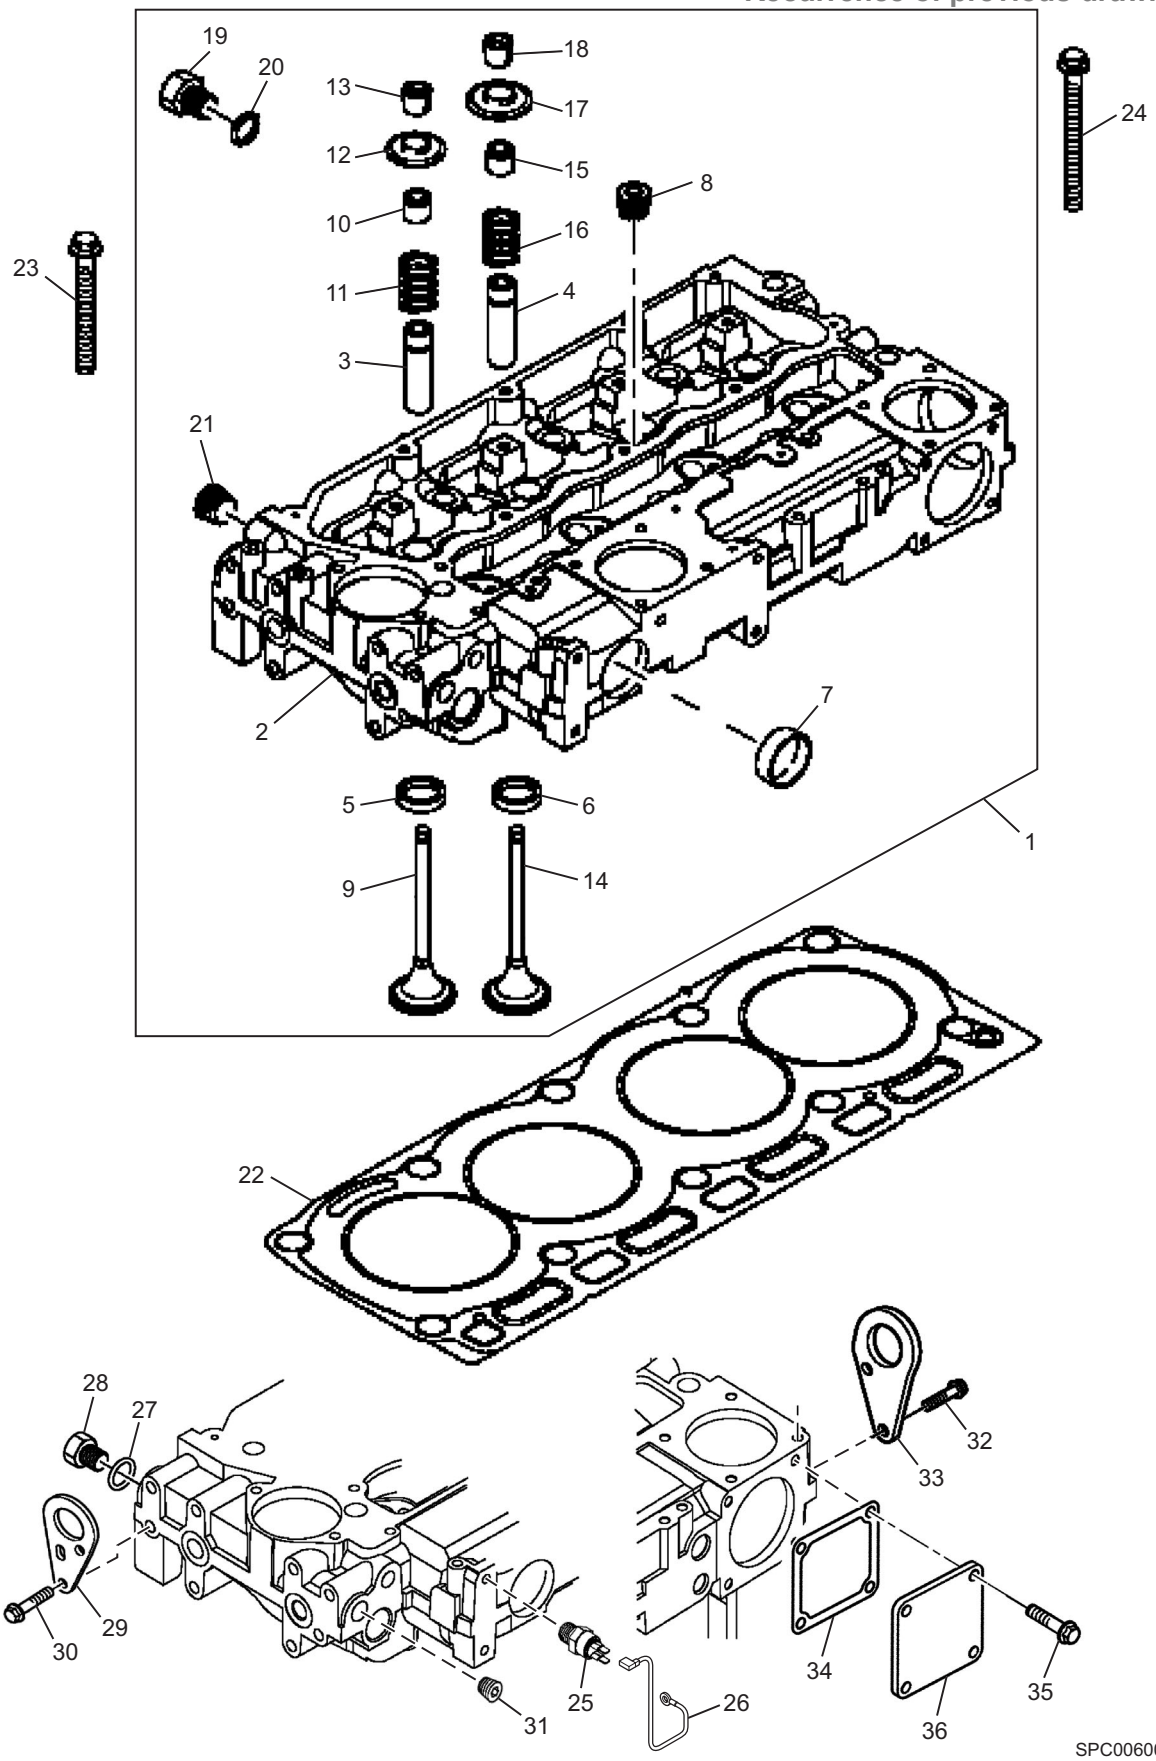


https://www.pdfmanual4trucks.com/

Cylinder Head

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	71348.7	Screw			2
33	6911967	Lifting plate			1
34	6911975	Gasket			3
35	71381.8	Screw			12
36	6911958	Plate			3

https://www.pdfmanual4trucks.com/

Rocker Shaft

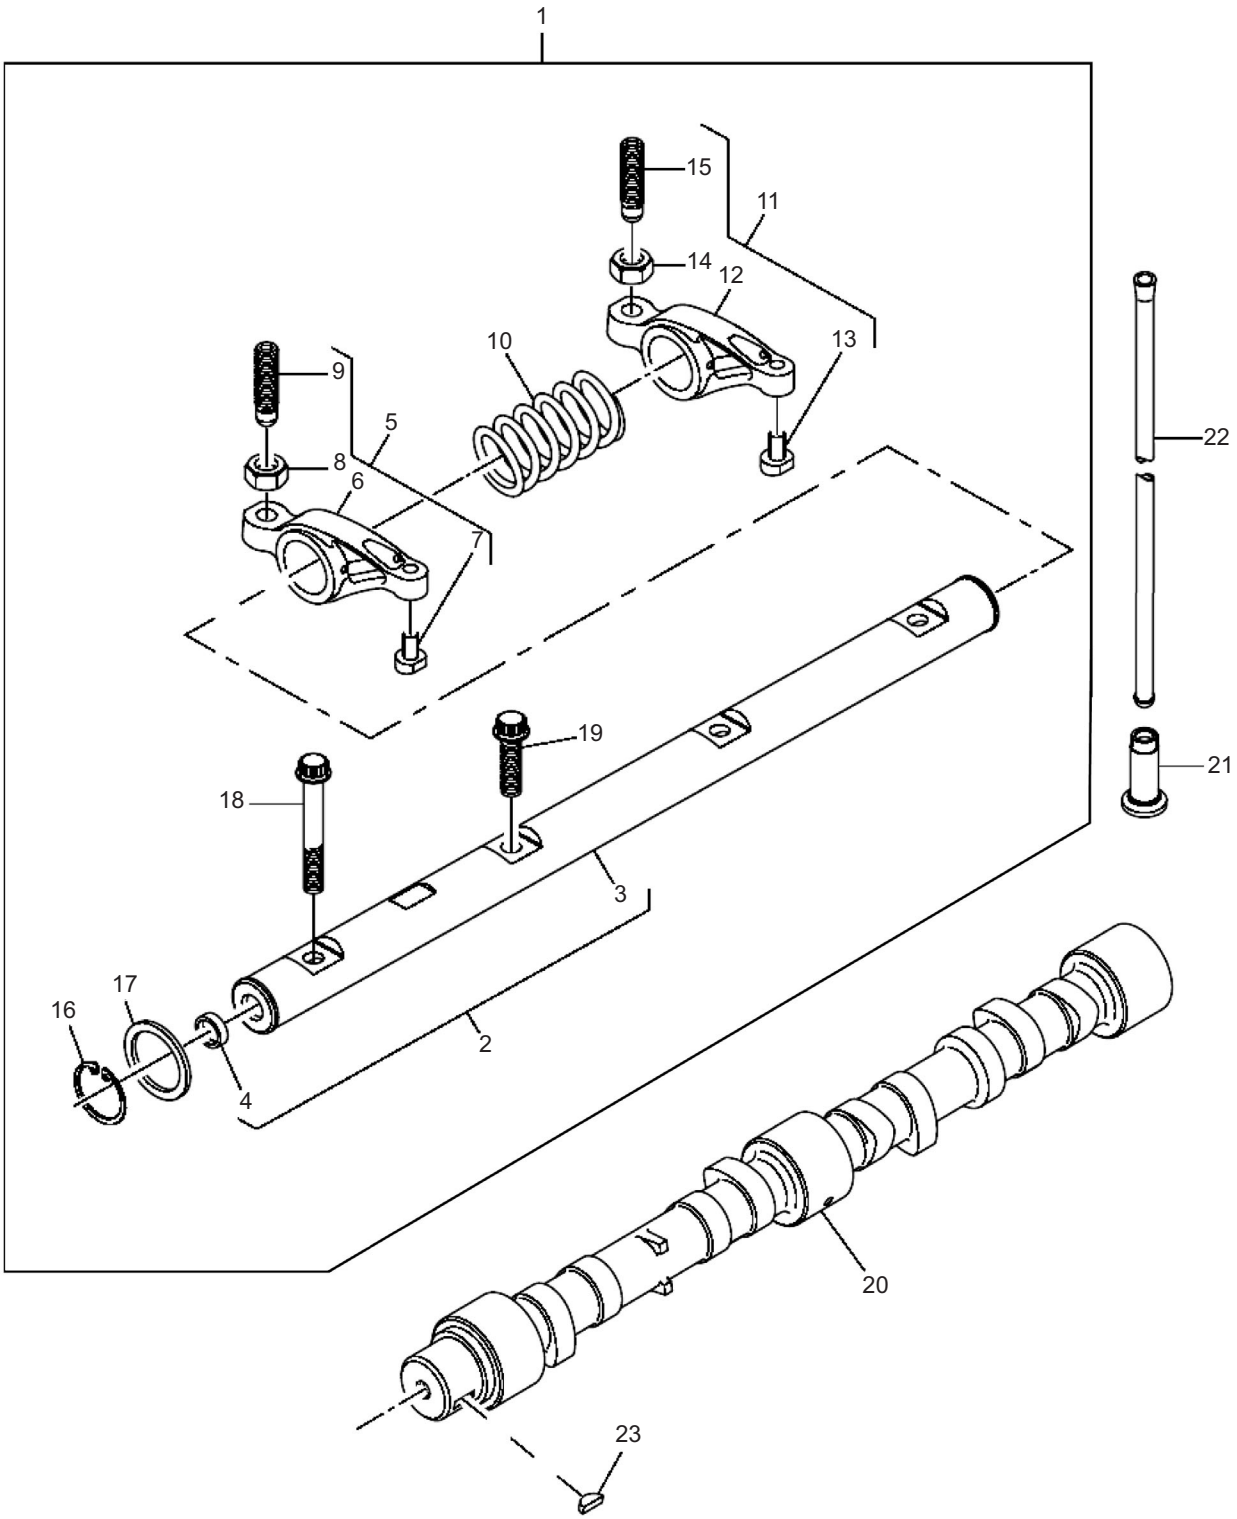


https://www.pdfmanual4trucks.com/

Rocker Shaft

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912004	Rocker assembly	Pos. 2 to 19		1
2	6912005	Spindle assy	Pos. 3 + 4		1
3		Spindle	Order Pos. 2		1
4	6911891	Plug			1
5	6912002	Rocker assy	Pos. 6 to 9		4
6		Rocker	Order Pos. 5		4
7		Pad	Order Pos. 5		4
8	32539.9	Nut			4
9	40982.1	Screw			4
10	6911924	Spring			3
11	6912003	Rocker assy	Pos. 12 to 15		4
12		Rocker	Order Pos. 11		4
13		Pad	Order Pos. 11		4
14	32539.9	Nut			4
15	40982.1	Screw			4
16	6911910	Snap ring			2
17	6911865	Washer			2
18	6911875	Screw			1
19	6911876	Screw			3
20	6911921	Camshaft			1
21	55103.6	Tappet			8
22	46032.9	Rod			8
23	64655.4	Key			1

https://www.pdfmanual4trucks.com/

Timing Gear

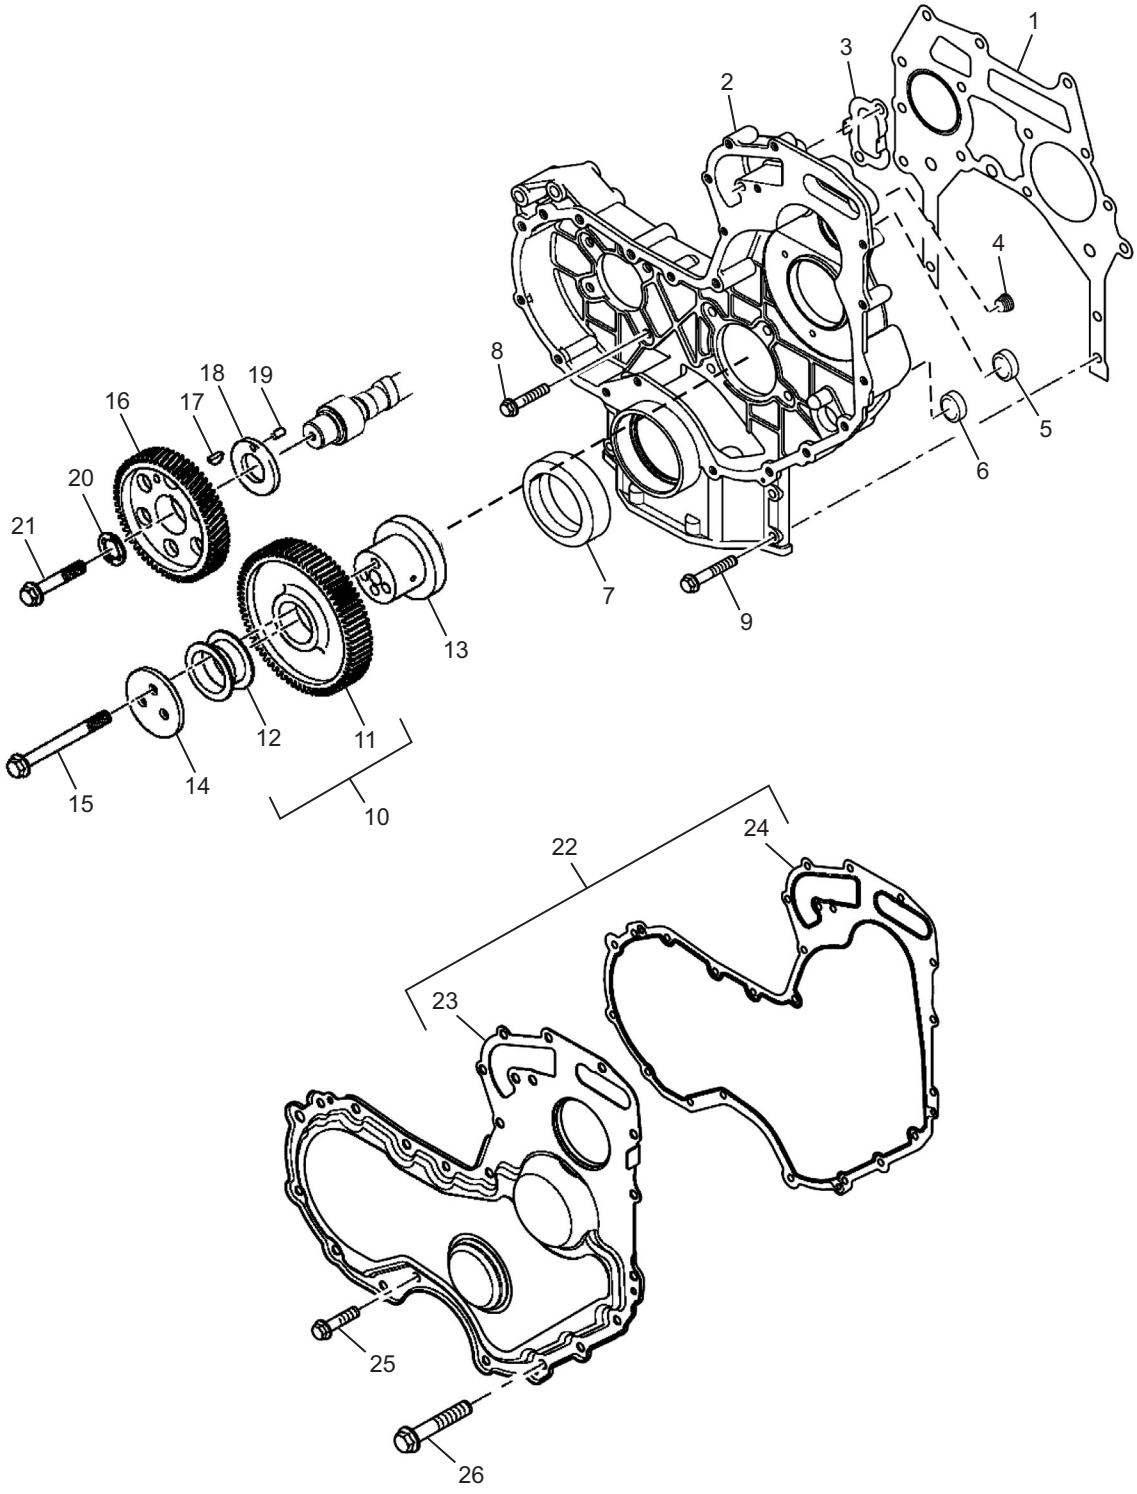

SPC006007


https://www.pdfmanual4trucks.com/

Timing Gear

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911961	Gasket			1
2	6911985	Case			1
3	6911963	Gasket			1
4	33219.7	Plug			1
5	6911894	Plug			1
6	6912047	Plug			1
7	40985.4	Seal			1
8	64878.2	Screw			8
9	71381.8	Screw			4
10	6911920	Gear	Pos. 11 + 12		1
11		Gear	Order Pos. 10		1
12	55714.0	Bush			2
13	64588.7	Hub			1
14	64590.3	Plate			1
15	71388.3	Screw			3
16	6911919	Gear			1
17	64655.4	Key			1
18	71386.7	Washer			1
19	64581.2	Pin			1
20	6911916	Washer			1
21	81019.2	Screw			1
22	6912016	Cover assy	Pos. 23 + 24		1
23		Cover	Order Pos. 22		1
24	6911971	Gasket			1
25	71456.8	Screw			10
26	93280.6	Screw			5

https://www.pdfmanual4trucks.com/

Oil Sump - Oil Pump

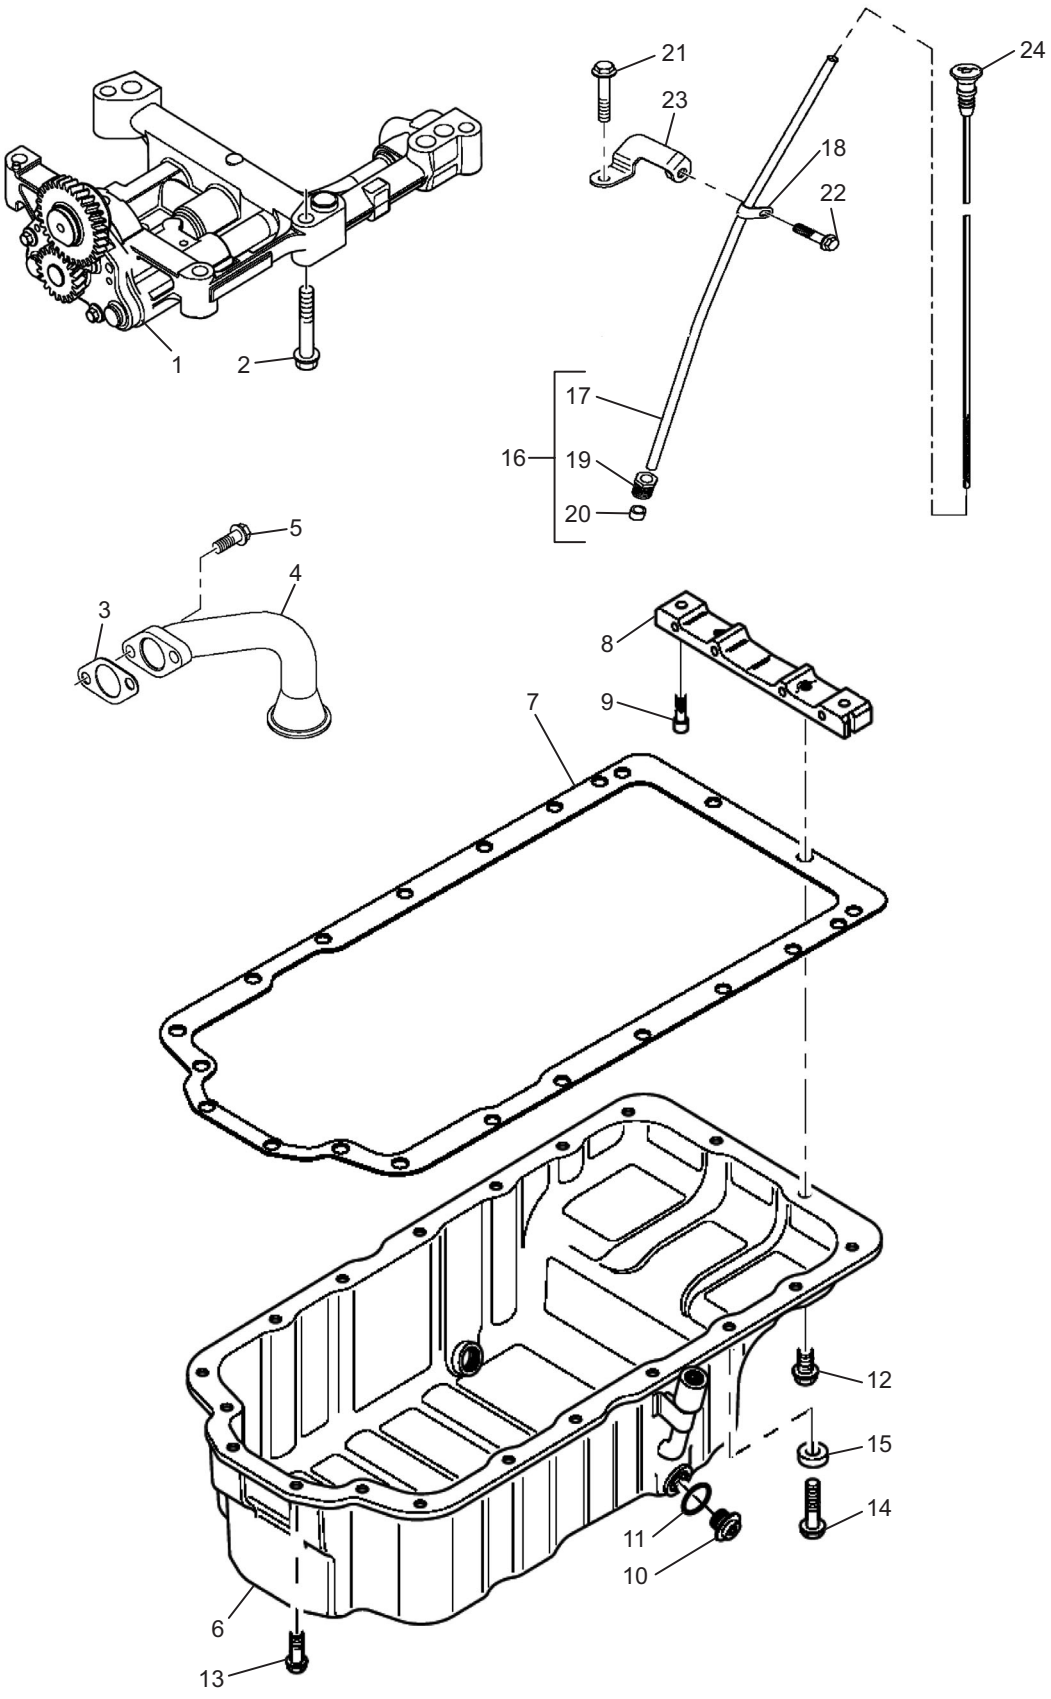

SPC006008


https://www.pdfmanual4trucks.com/

Oil Sump - Oil Pump

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912010	Oil pump			1
2	6912056	Screw			5
3	81063.0	Seal			1
4	6911956	Pipe			1
5	71338.8	Screw			2
6	6911986	Oil sump			1
7	6911970	Gasket			1
8	6911965	Gasket			1
9	71275.2	Screw			2
10	64753.7	Plug, drain, engine oil			2
11	64752.9	O-ring, engine oil drain plug			2
12	71468.3	Screw			2
13	71456.8	Screw			17
14	64878.2	Screw			1
15	6911942	Spacer			1
16	6912007	Dipstick tube	Pos. 17 to 19		1
17		Dipstick tube	Order Pos. 16		1
18	6911853	Collar			1
19	71465.9	Nut			1
20	71466.7	Olive			1
21	6911869	Screw			1
22	71507.8	Screw			1
23	6911988	Bracket			1
24	6911927	Dipstick			1

https://www.pdfmanual4trucks.com/

Fuel Injection Equipment

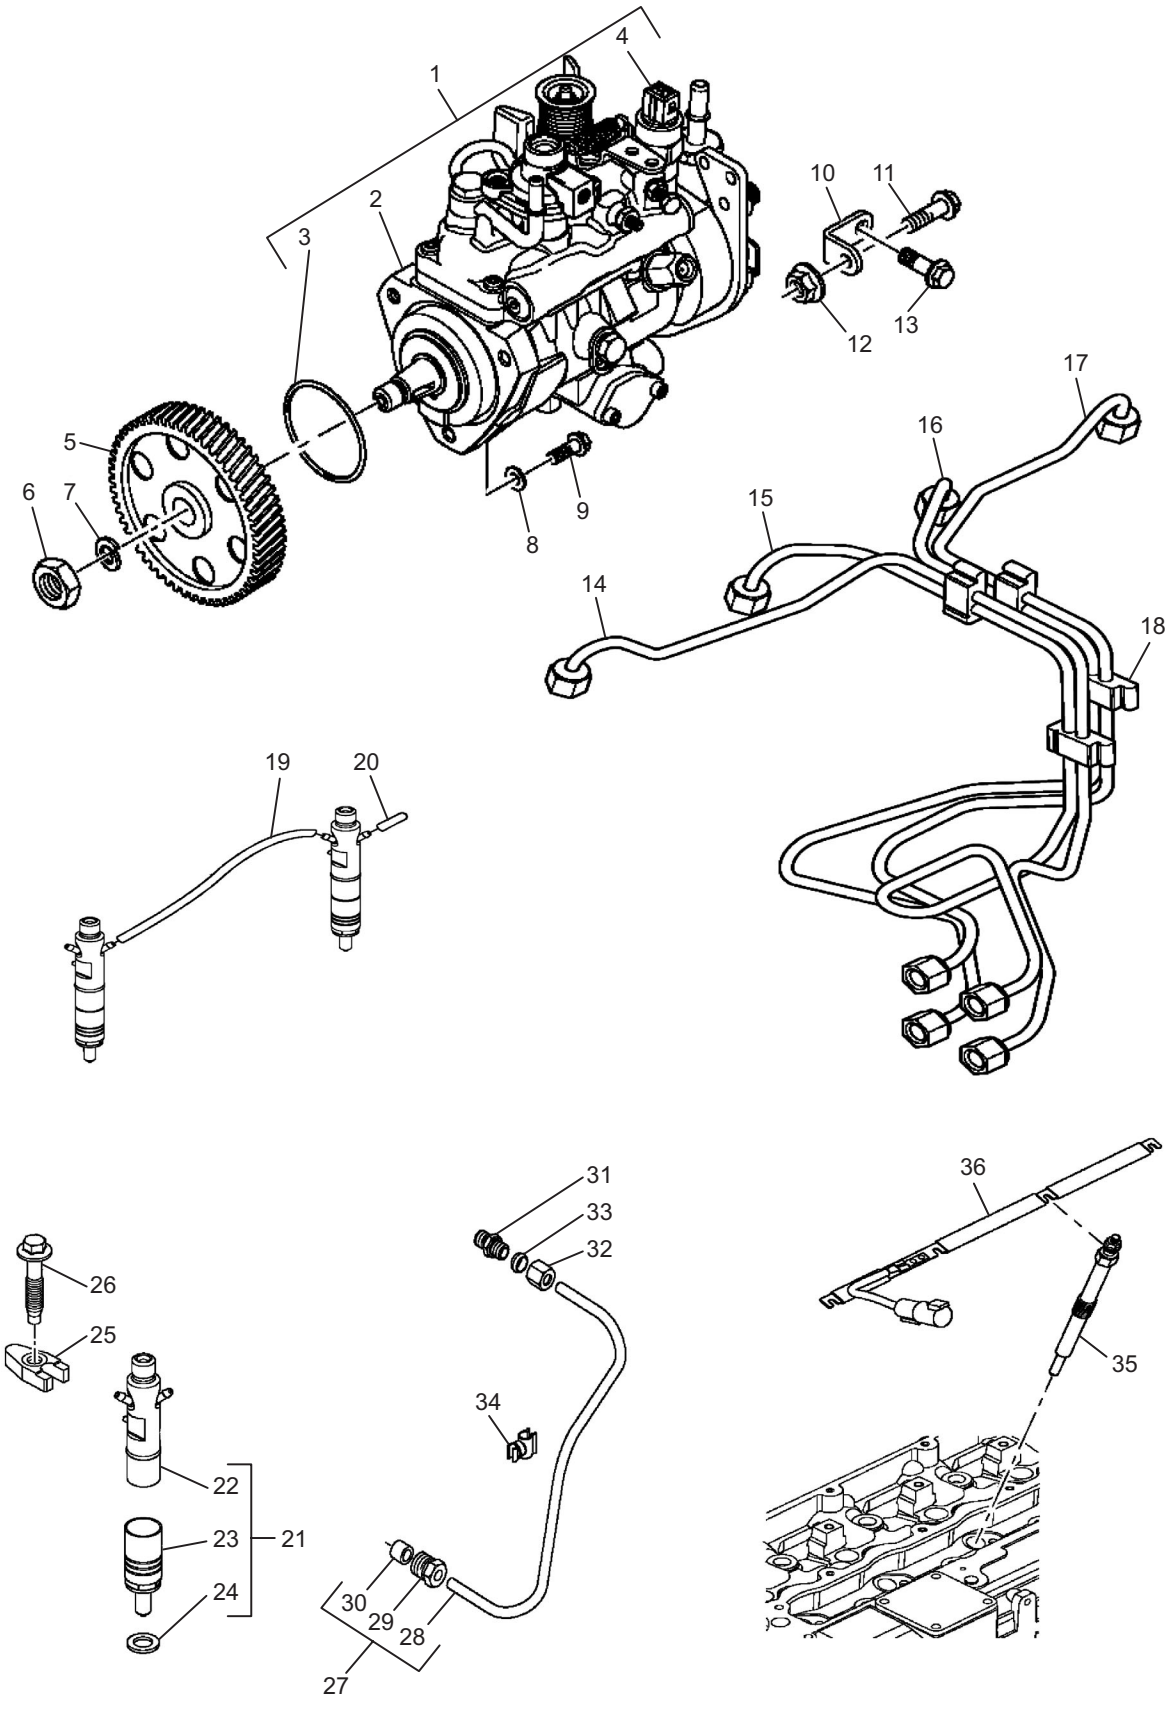

https://www.pdfmanual4trucks.com/


Fuel Injection Equipment

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911898	Fuel injection pump	Pos. 1 to 4		1
2		Injection pump	Order Pos. 1		1
3	93191.5	Seal			1
4	97175.4	Solenoid			1
5	6911918	Gear			1
6	81046.5	Nut			1
7	81045.7	Washer			1
8	6911877	Washer			1
9	71338.8	Screw			3
10	6911966	Bracket			1
11	64878.2	Screw			1
12	71329.7	Nut			1
13	71348.7	Screw			1
14	6911951	Injection pipe	Cyl.: 1		1
15	6911952	Injection pipe	Cyl.: 2		1
16	6911953	Injection pipe	Cyl.: 3		1
17	6911954	Injection pipe	Cyl.: 4		1
18	71417.0	Clip			1
19	6911904	Hose			3
20	6912038	Cap			1
21	6911899	Atomiser assy	Pos. 22 to 24		4
22		Atomiser	Order Pos. 21		4
23	6911900	Nozzle			4
24	93207.9	Washer			4
25	6911989	Clamp			4
26	6911874	Screw			4
27	6912006	Pipe pump	Pos. 28 to 30		1
28		Pipe	Order Pos. 27		1
29	71426.1	Nut			1
30	64624.0	Nut			1
31	6911854	Union			1

https://www.pdfmanual4trucks.com/

Fuel Injection Equipment

Recurrence of previous drawing

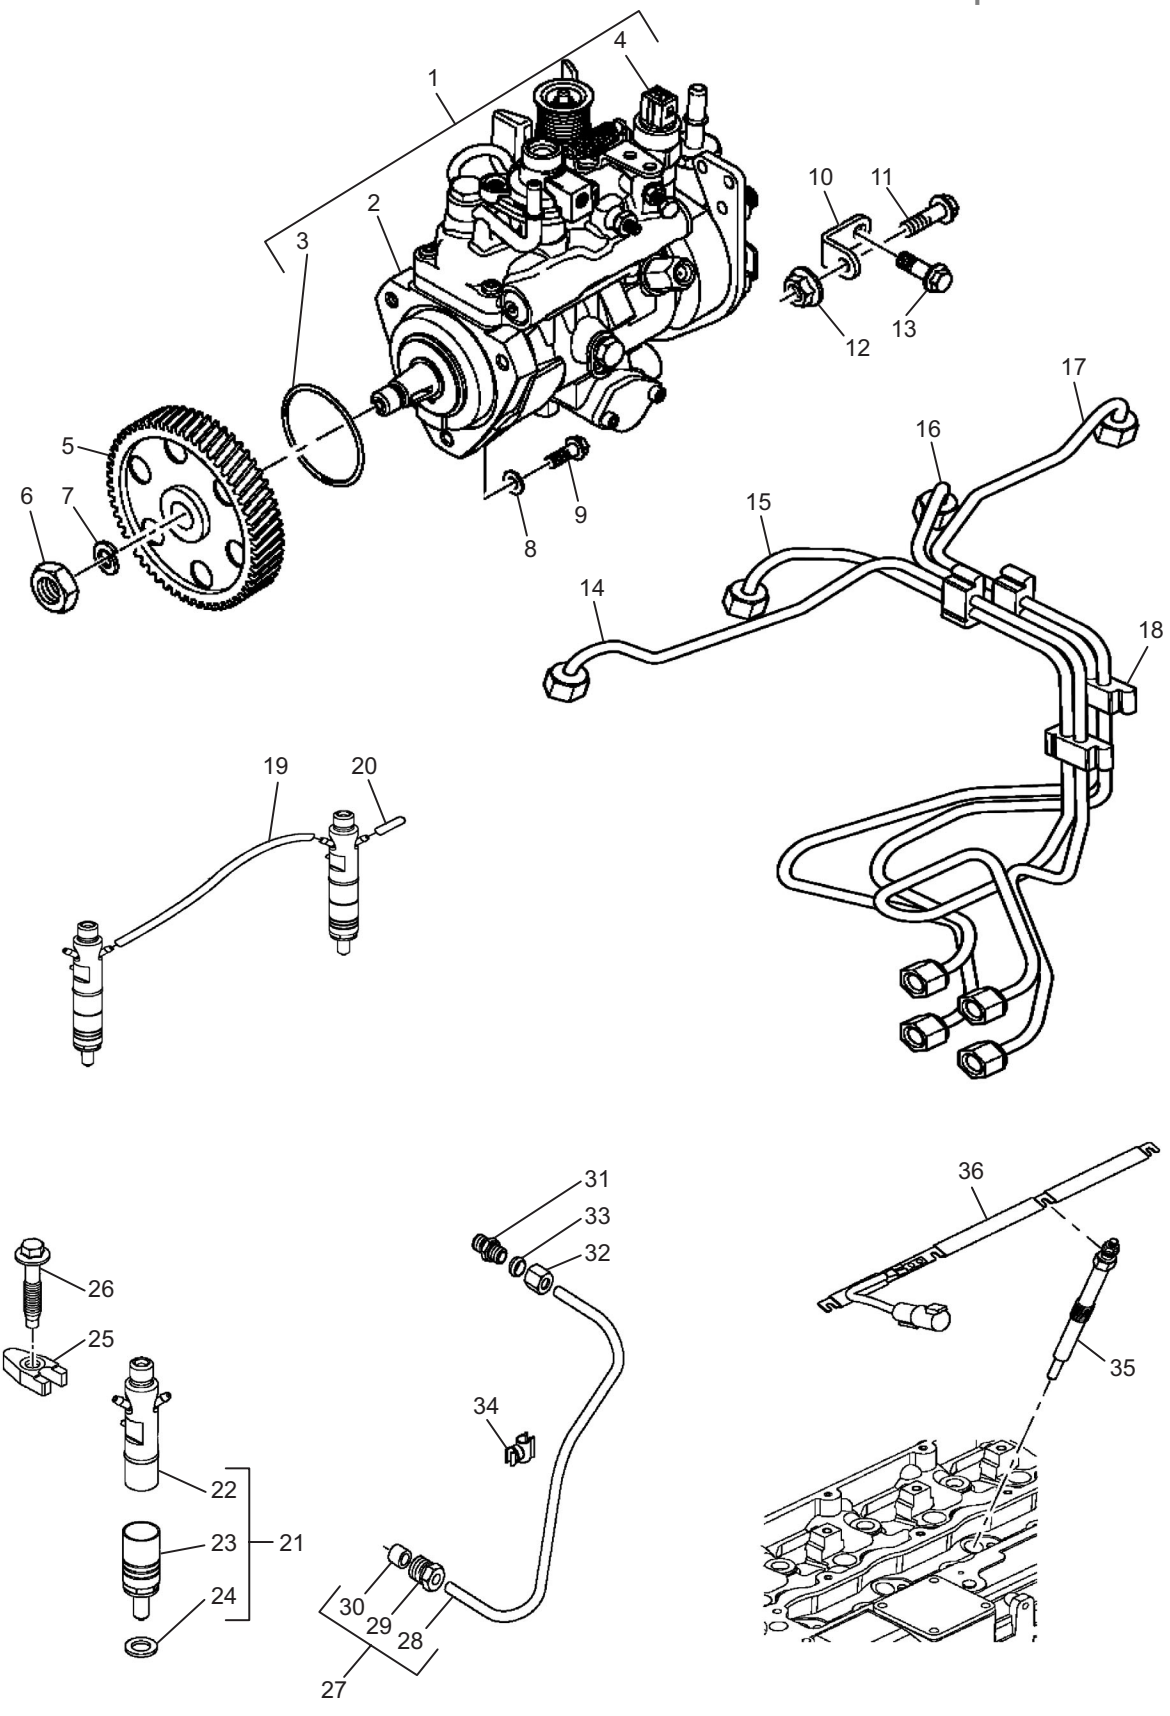

SPC006009


https://www.pdfmanual4trucks.com/

Fuel Injection Equipment

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	71432.9	Nut			1
33	42967.0	Olive			1
34	6912018	Clip			1
35	6911908	Glow plug			4
36	6912030	Bar			1

https://www.pdfmanual4trucks.com/

Fuel Feeding

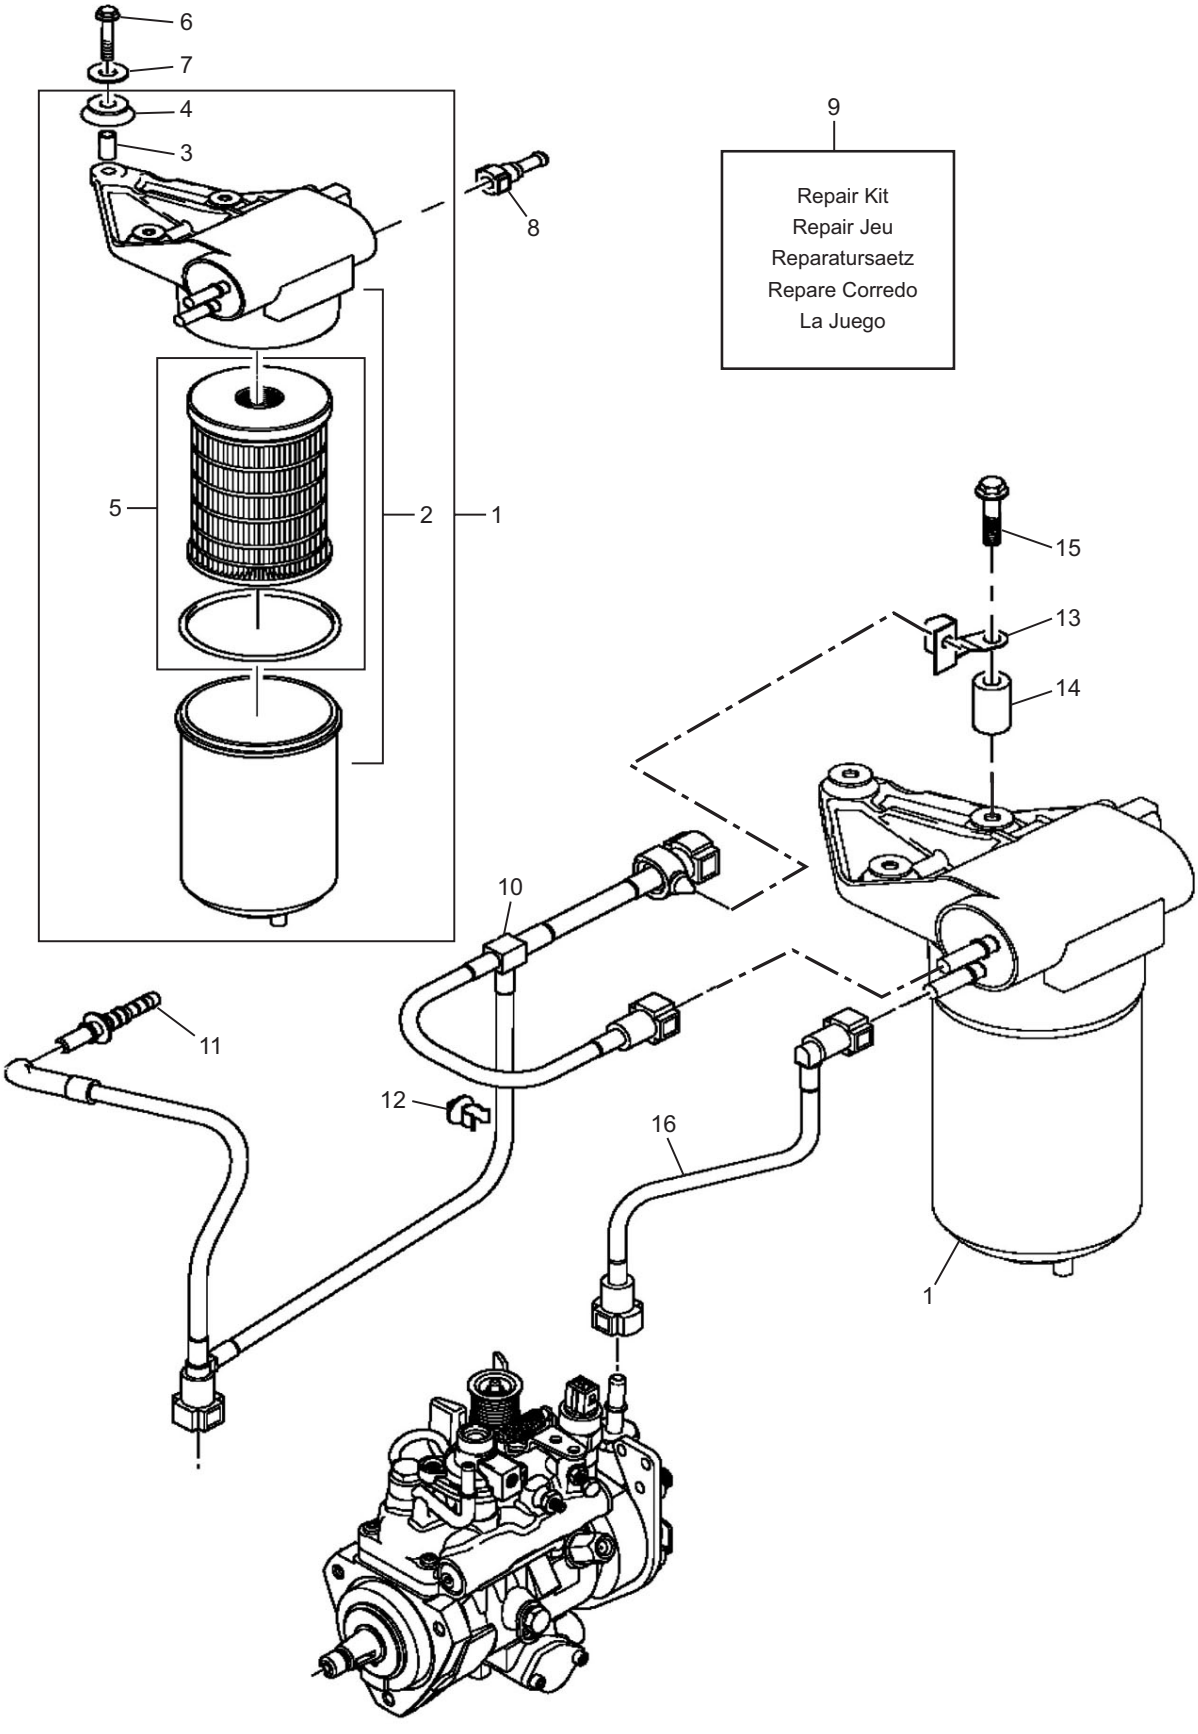


https://www.pdfmanual4trucks.com/

Fuel Feeding

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912009	Lift pump	Pos. 2 to 5		1
2		Pump	Order Pos. 1		1
3		Spacer	Order Pos. 9		1
4		Mounting	Order Pos. 9		1
5	6911907	Filter element, fuel			1
6	6911869	Screw			3
7	6911864	Washer			3
8	6911991	Connection			1
9	6912023	Mounting kit			1
10	6911903	Feeding pipe			1
11	6911990	Connector			1
12	6911890	Collar			1
13	6911987	Bracket			1
14	6911943	Spacer			1
15	71335.4	Screw			1
16	6911902	Feeding pipe			1

https://www.pdfmanual4trucks.com/

Cylinder Head Cover

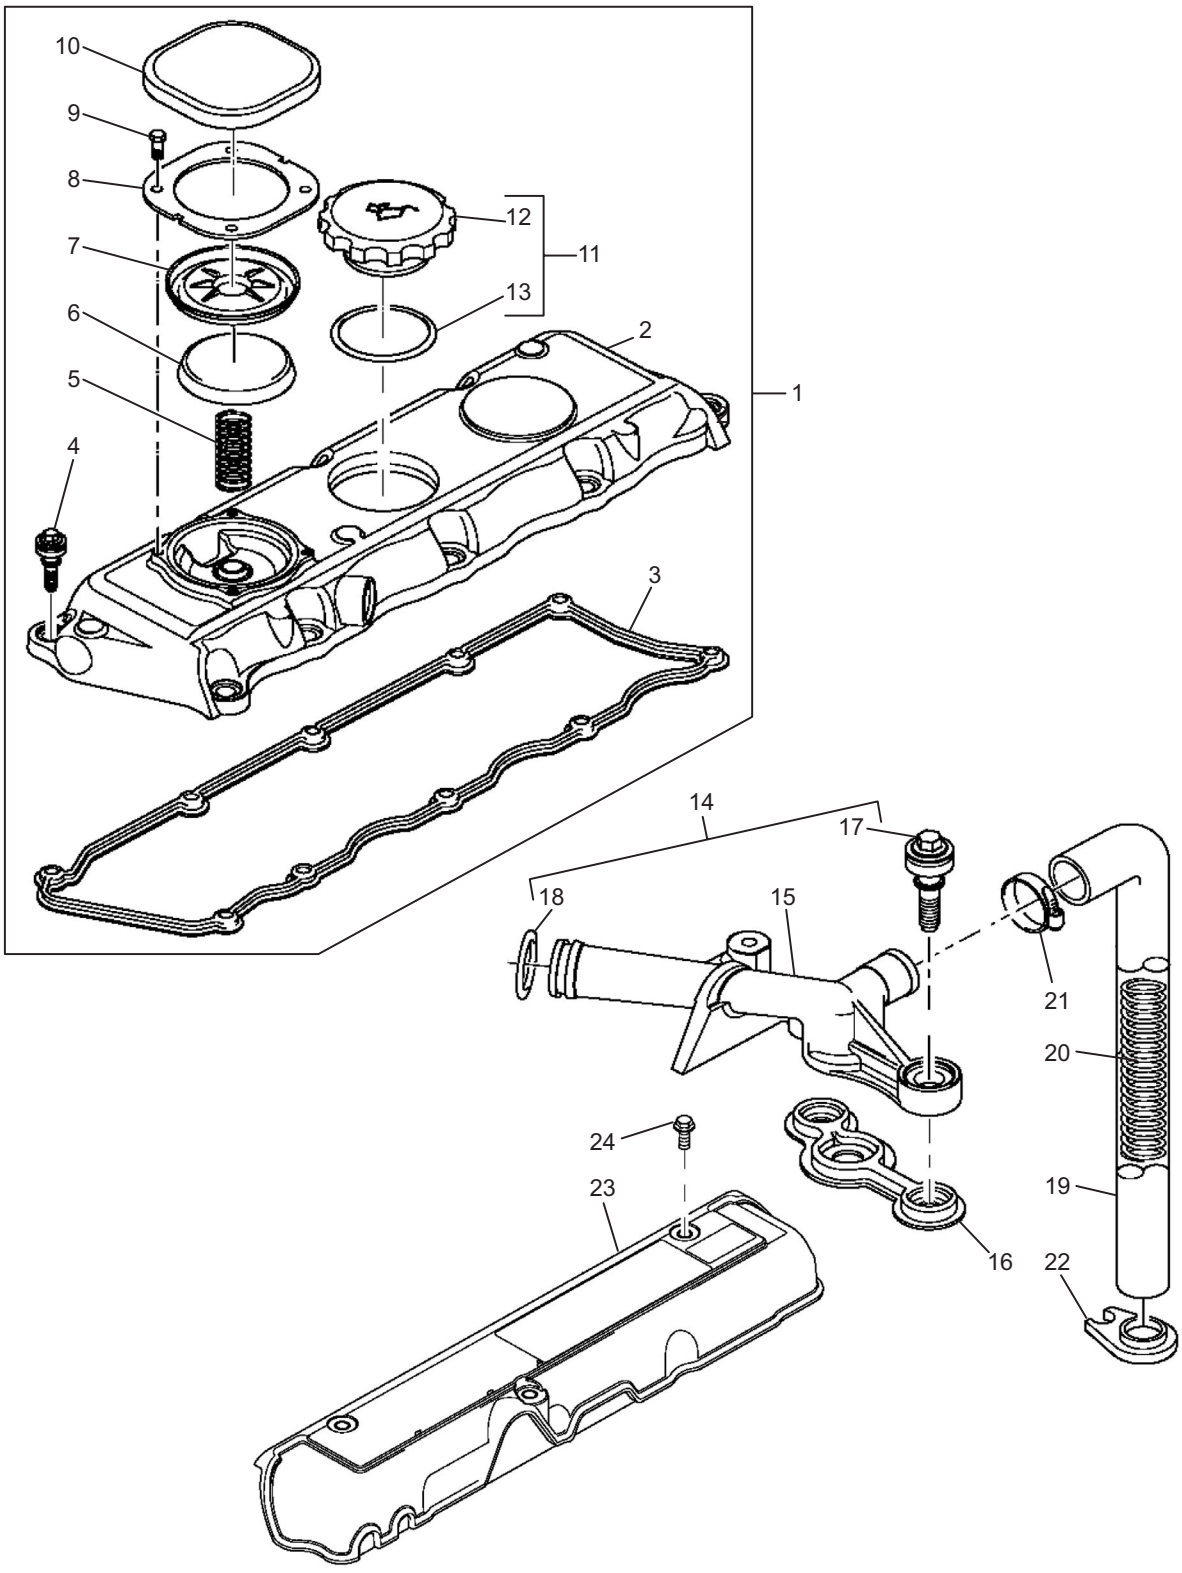

SPC006011


https://www.pdfmanual4trucks.com/


Cylinder Head Cover

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912017	Head cover assy	Pos. 2 to 13		1
2		Cover	Order Pos. 1		1
3	6911968	Seal			1
4	6911867	Screw			10
5	6911926	Spring			16
6	6911994	Cap			1
7	6911997	Diaphragm			18
8	6911960	Cover plate			1
9	6911866	Screw			1
10	6911995	Cap			1
11	81026.7	Plug	Pos. 12 + 13		1
12		Cap	Order Pos. 11		1
13	6911879	O-ring			1
14	6912014	Pipe assy	Pos. 15 to 18		1
15		Pipe	Order Pos. 14		1
16	6911982	Seal			1
17	6911867	Screw			2
18	6911878	O-ring			1
19	6911950	Hose			1
20	93274.9	Spring			1
21	93273.1	Collar			1
22	71366.9	Bracket			1
23	6911996	Cover			1
24	71399.0	Screw			3

https://www.pdfmanual4trucks.com/

Oil Cooler and Filter

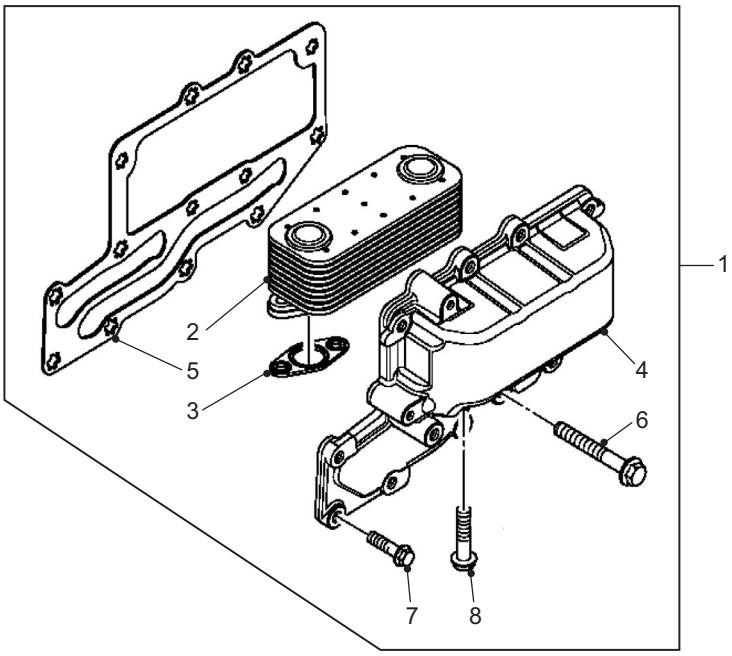

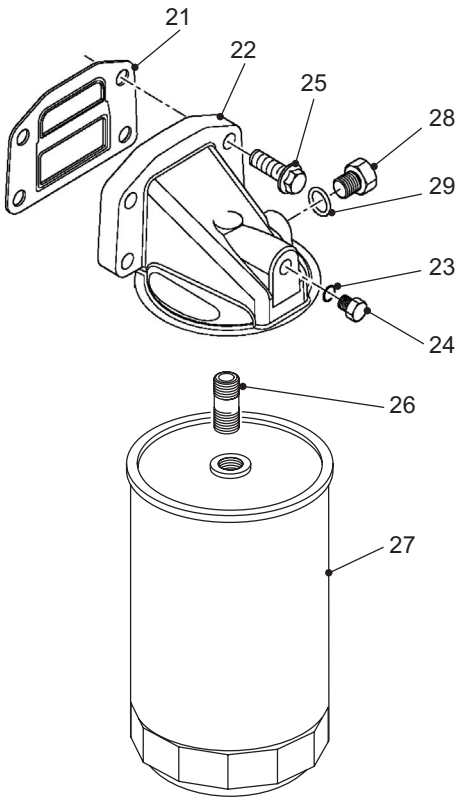

SPC006027


https://www.pdfmanual4trucks.com/

Oil Cooler and Filter

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912015	Oil cooler	Pos. 2 to 8		1
2	6911896	Cooler			1
3	6911977	Gasket, oil cooler			2
4		Housing	Order Pos. 1		1
5	6911976	Gasket, oil cooler housing			1
6	71338.8	Screw			3
7	71338.8	Screw			10
8	64960.8	Screw			4
21	6911983	Gasket			1
22	6911912	Head filter	Pos. 22 + 26		1
23	6911883	O-ring, oil filter			1
24	6911940	Plug, oil filter			1
25	71381.8	Screw			4
26	81088.7	Connection			1
27	36925.6	Engine Oil Filter Element			1
28	6911938	Plug			1
29	6911880	O-ring			1

https://www.pdfmanual4trucks.com/

Water Pump and Thermostat

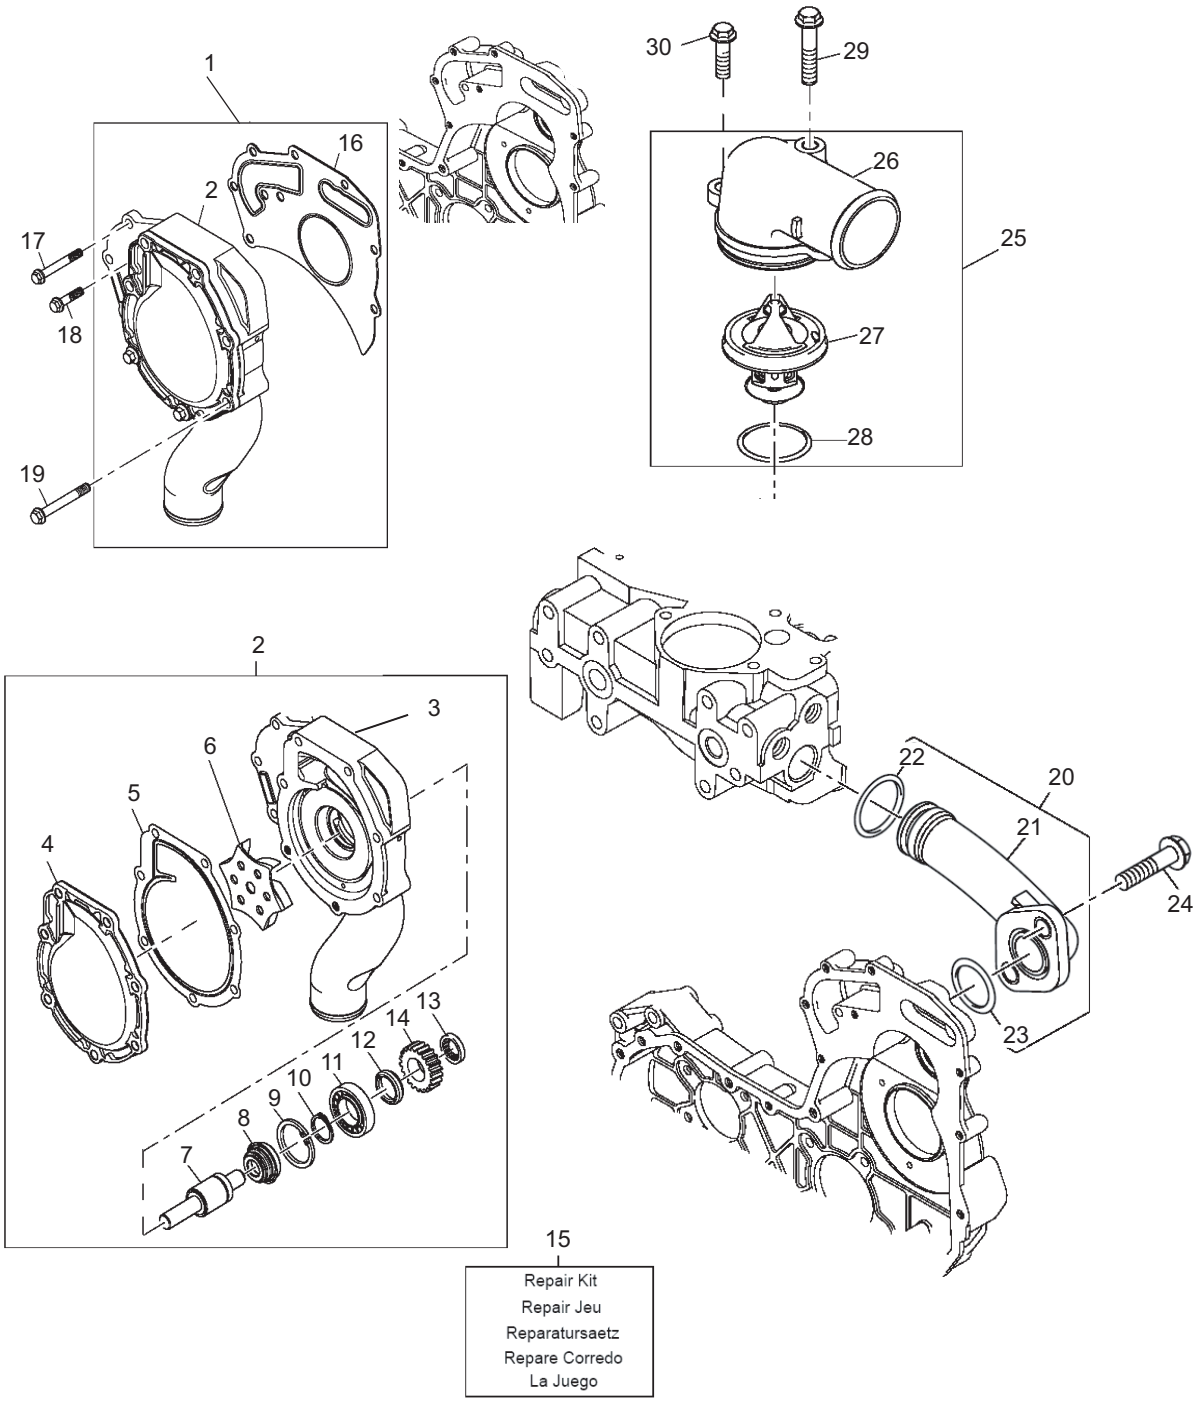

SPC006013


https://www.pdfmanual4trucks.com/

Water Pump and Thermostat

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912024	Water pump kit	Pos. 2 to 16		1
2		Water pump	Order Pos. 1		1
3		Body	Order Pos. 1		1
4		Cover	Order Pos. 1		1
5		Gasket	Order Pos. 1		1
6		Impeller	Order Pos. 1		1
7		Shaft	Order Pos. 1		1
8		Seal	Order Pos. 1		1
9		Snap ring	Order Pos. 1		1
10		Snap ring	Order Pos. 1		1
11		Bearing	Order Pos. 1		1
12		Oil seal	Order Pos. 1		1
13		Bearing	Order Pos. 1		1
14	6911850	Gear			1
15	6912025	Repair kit			1
16	6911974	Pump gasket			1
17	6911873	Screw			1
18	71439.4	Screw			2
19	93280.6	Screw			5
20	6912011	Pipe assy	Pos. 21 to 23		1
21		Pipe	Order Pos. 20		1
22	6911886	O-ring			1
23	6911885	O-ring			1
24	64878.2	Screw			2
25	6912012	Water inlet assy	Pos. 26 to 28		1
26		Connector	Order Pos. 25		1
27	6911895	Thermostat			1
28	6911882	O-ring, thermostat			1
29	93280.6	Screw			1
30	71338.8	Screw			1

https://www.pdfmanual4trucks.com/

Turbocharger

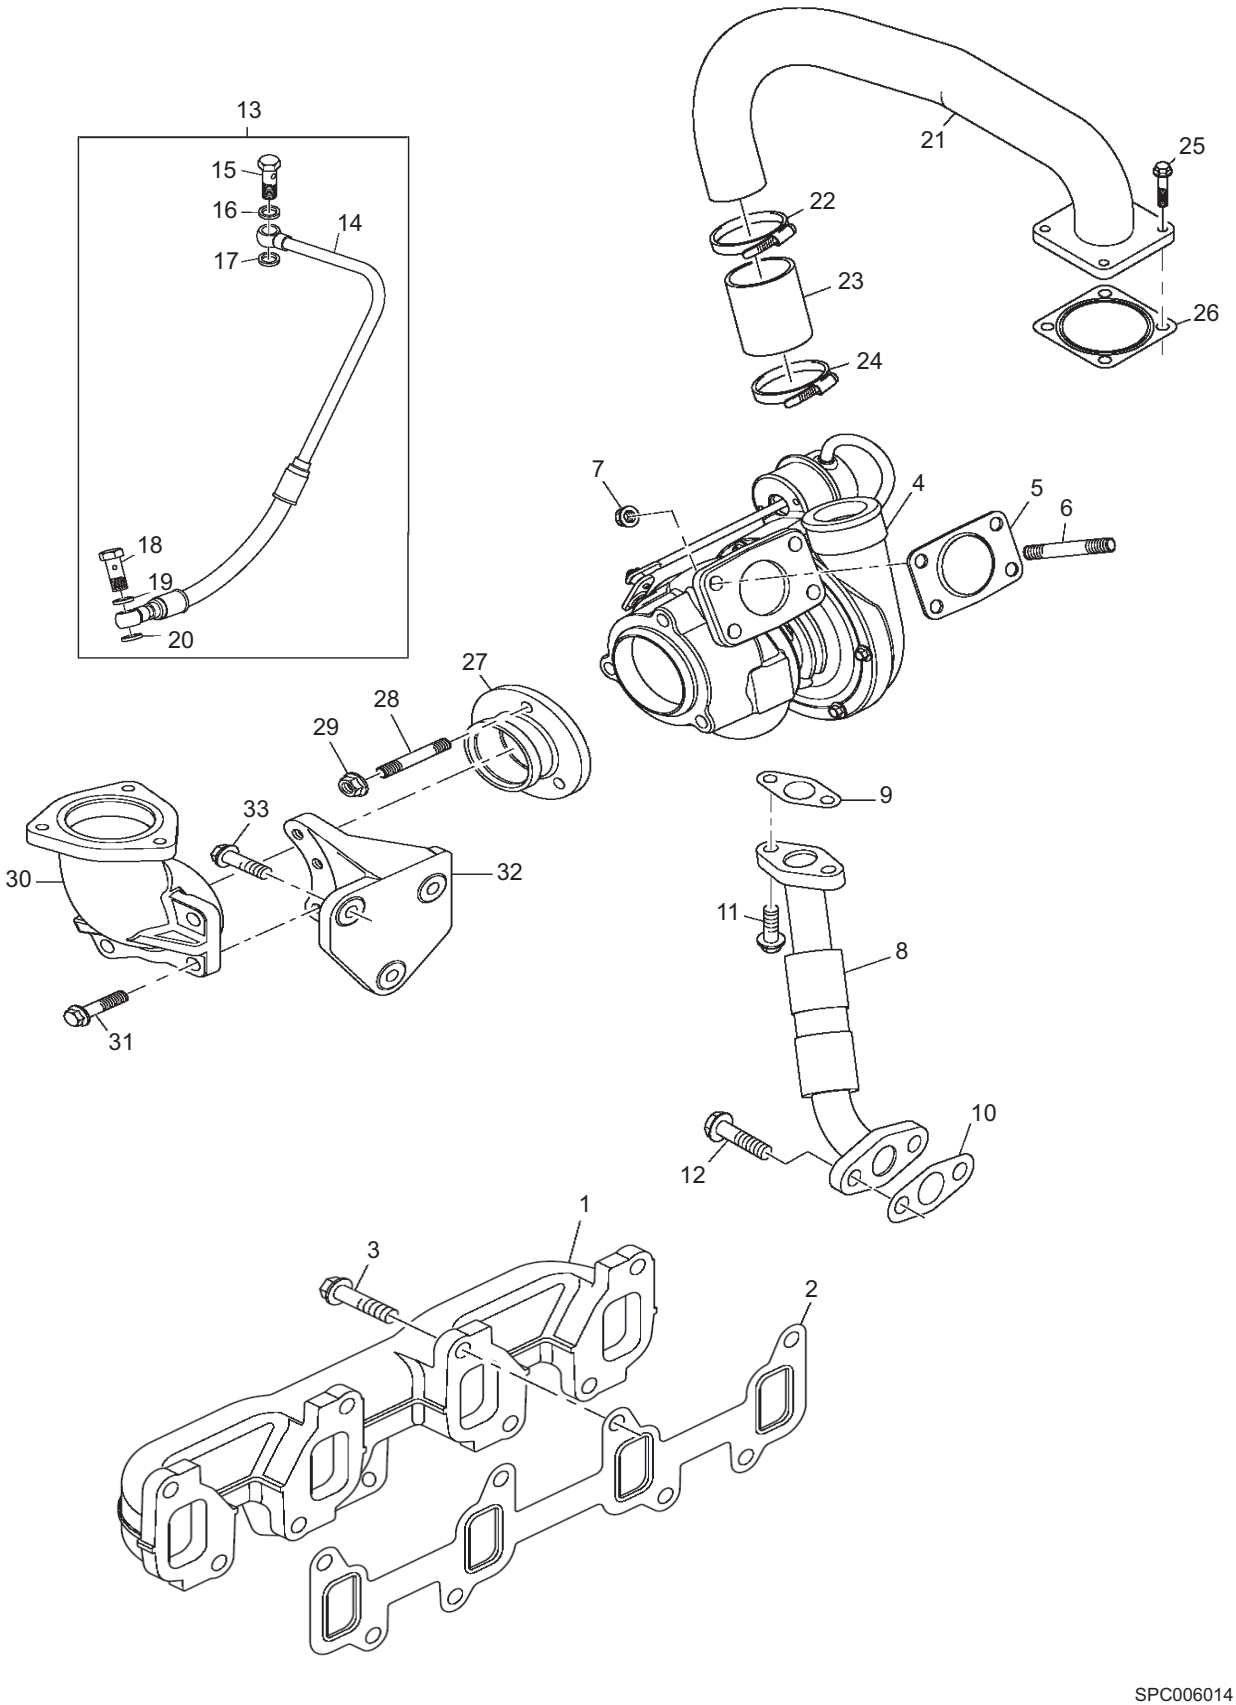

https://www.pdfmanual4trucks.com/


Turbocharger

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911993	Manifold			1
2	6911973	Gasket			1
3	93408.3	Screw			1
4	6911909	Turbocharger			1
5	6911978	Gasket			1
6	6911868	Stud			4
7	71490.7	Nut			4
8	6911957	Pipe			1
9	6911979	Gasket			1
10	6911980	Gasket			1
11	93321.8	Screw			2
12	64878.2	Screw			2
13	6912008	Pipe	Pos. 14 to 20		1
14		Pipe	Order Pos. 13		1
15	6911935	Banjo bolt			1
16	6911863	Washer			1
17	6911863	Washer			1
18	6911935	Banjo bolt			1
19	6911863	Washer			1
20	6911863	Washer			1
21	6911955	Pipe			1
22	6911889	Collar			1
23	6911949	Hose			1
24	6911889	Collar			1
25	71381.8	Screw			4
26	6911981	Gasket			1
27	6911948	Adaptor			1
28	6911868	Stud			3
29	71490.7	Nut			3
30	6911992	Exhaust elbow			1
31	71346.1	Screw			3

https://www.pdfmanual4trucks.com/

Turbocharger

Recurrence of previous drawing

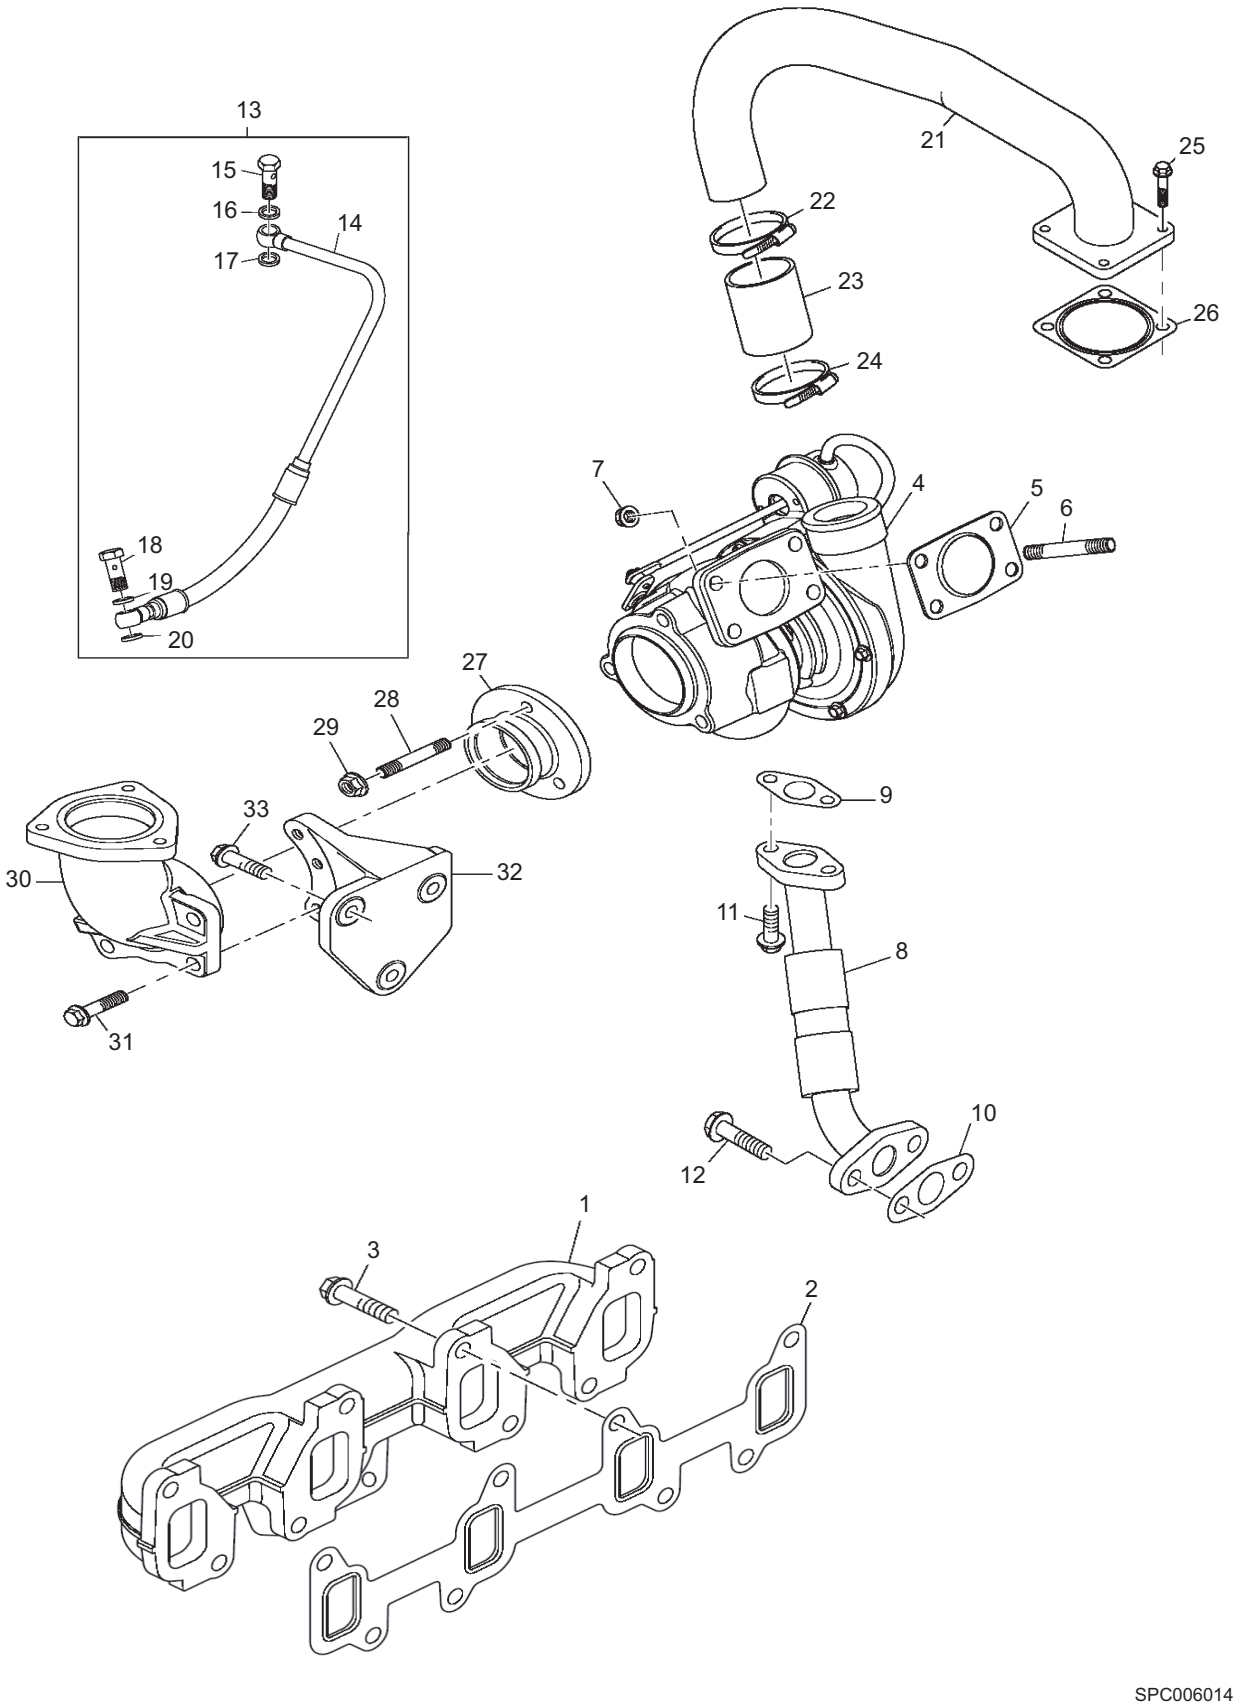

SPC006014


https://www.pdfmanual4trucks.com/

Turbocharger

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	6911998	Bracket			1
33	71286.9	Screw			2

https://www.pdfmanual4trucks.com/

Alternator

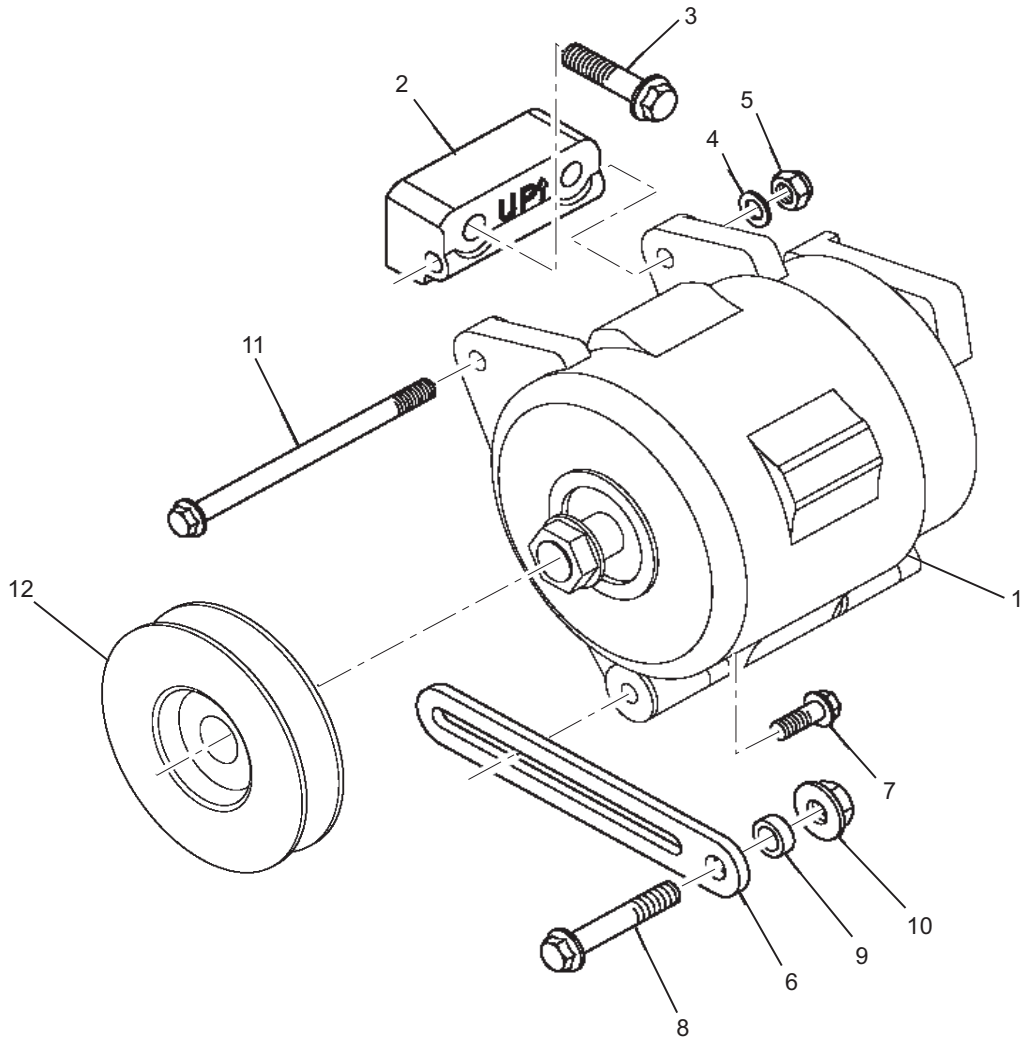

SPC006015


https://www.pdfmanual4trucks.com/


Alternator

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911377	Alternator			1
2	6911999	Bracket			1
3	6911871	Screw			2
4	93433.1	Washer			1
5	92642.8	Nut			1
6	6911959	Lever			1
7	71338.8	Screw			1
8	6911872	Screw			1
9	64803.0	Spacer			1
10	71495.6	Nut			1
11	6911870	Screw			1
12	6911917	Pulley			1

https://www.pdfmanual4trucks.com/

Flywheel Housing and Starter

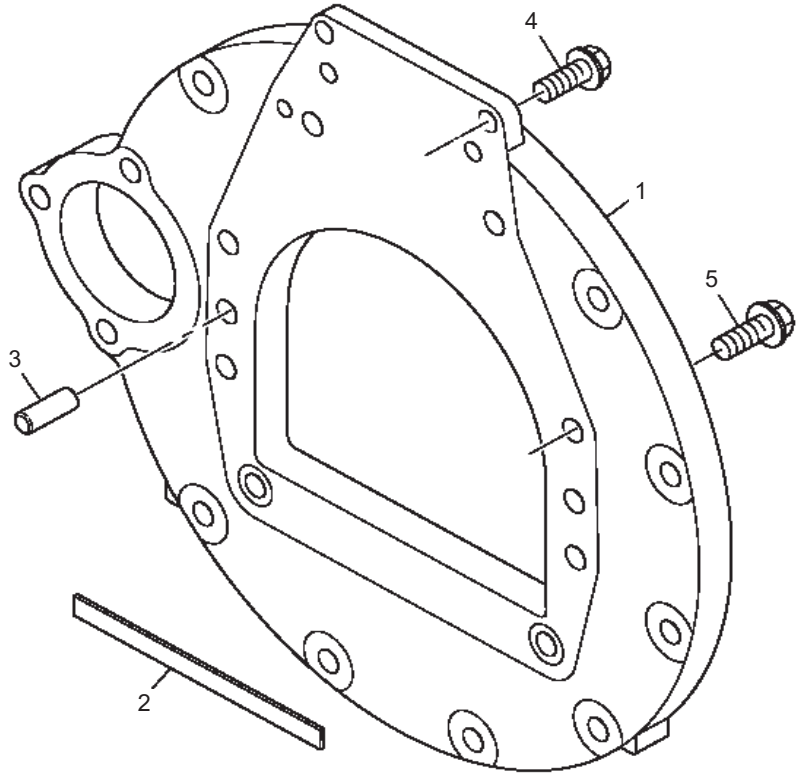

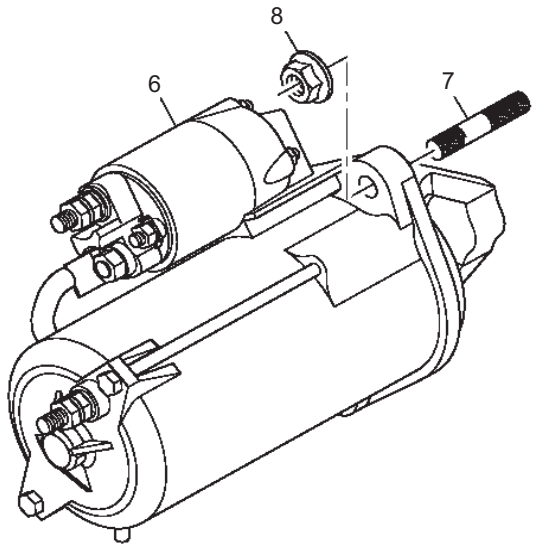

SPC006016


https://www.pdfmanual4trucks.com/

Flywheel Housing and Starter

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	81041.6	Housing			1
2	81039.0	Seal			1
3	64645.5	Dowel			2
4	71287.7	Screw			2
5	81040.8	Screw			6
6	6911913	Starter motor			1
7	71385.9	Stud			3
8	71495.6	Nut			3

https://www.pdfmanual4trucks.com/

Engine Gaskets Sets

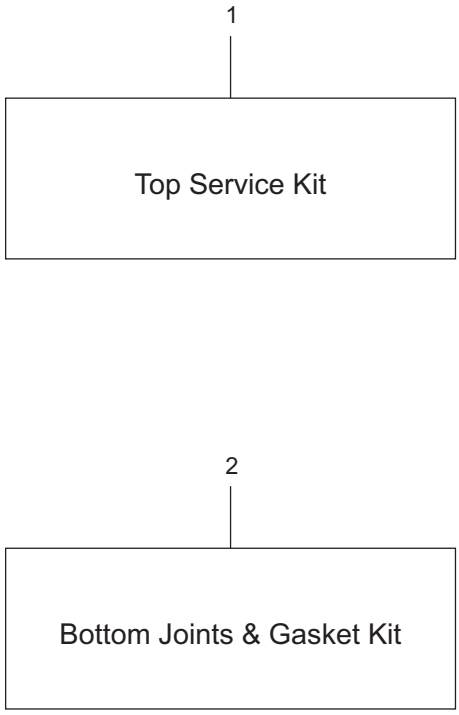

SPC006017


https://www.pdfmanual4trucks.com/

Engine Gaskets Sets

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6912020	Top joint and gasket kit			1
2	6912019	Bottom joint and gasket			1

https://www.pdfmanual4trucks.com/

Air Conditioning Installation

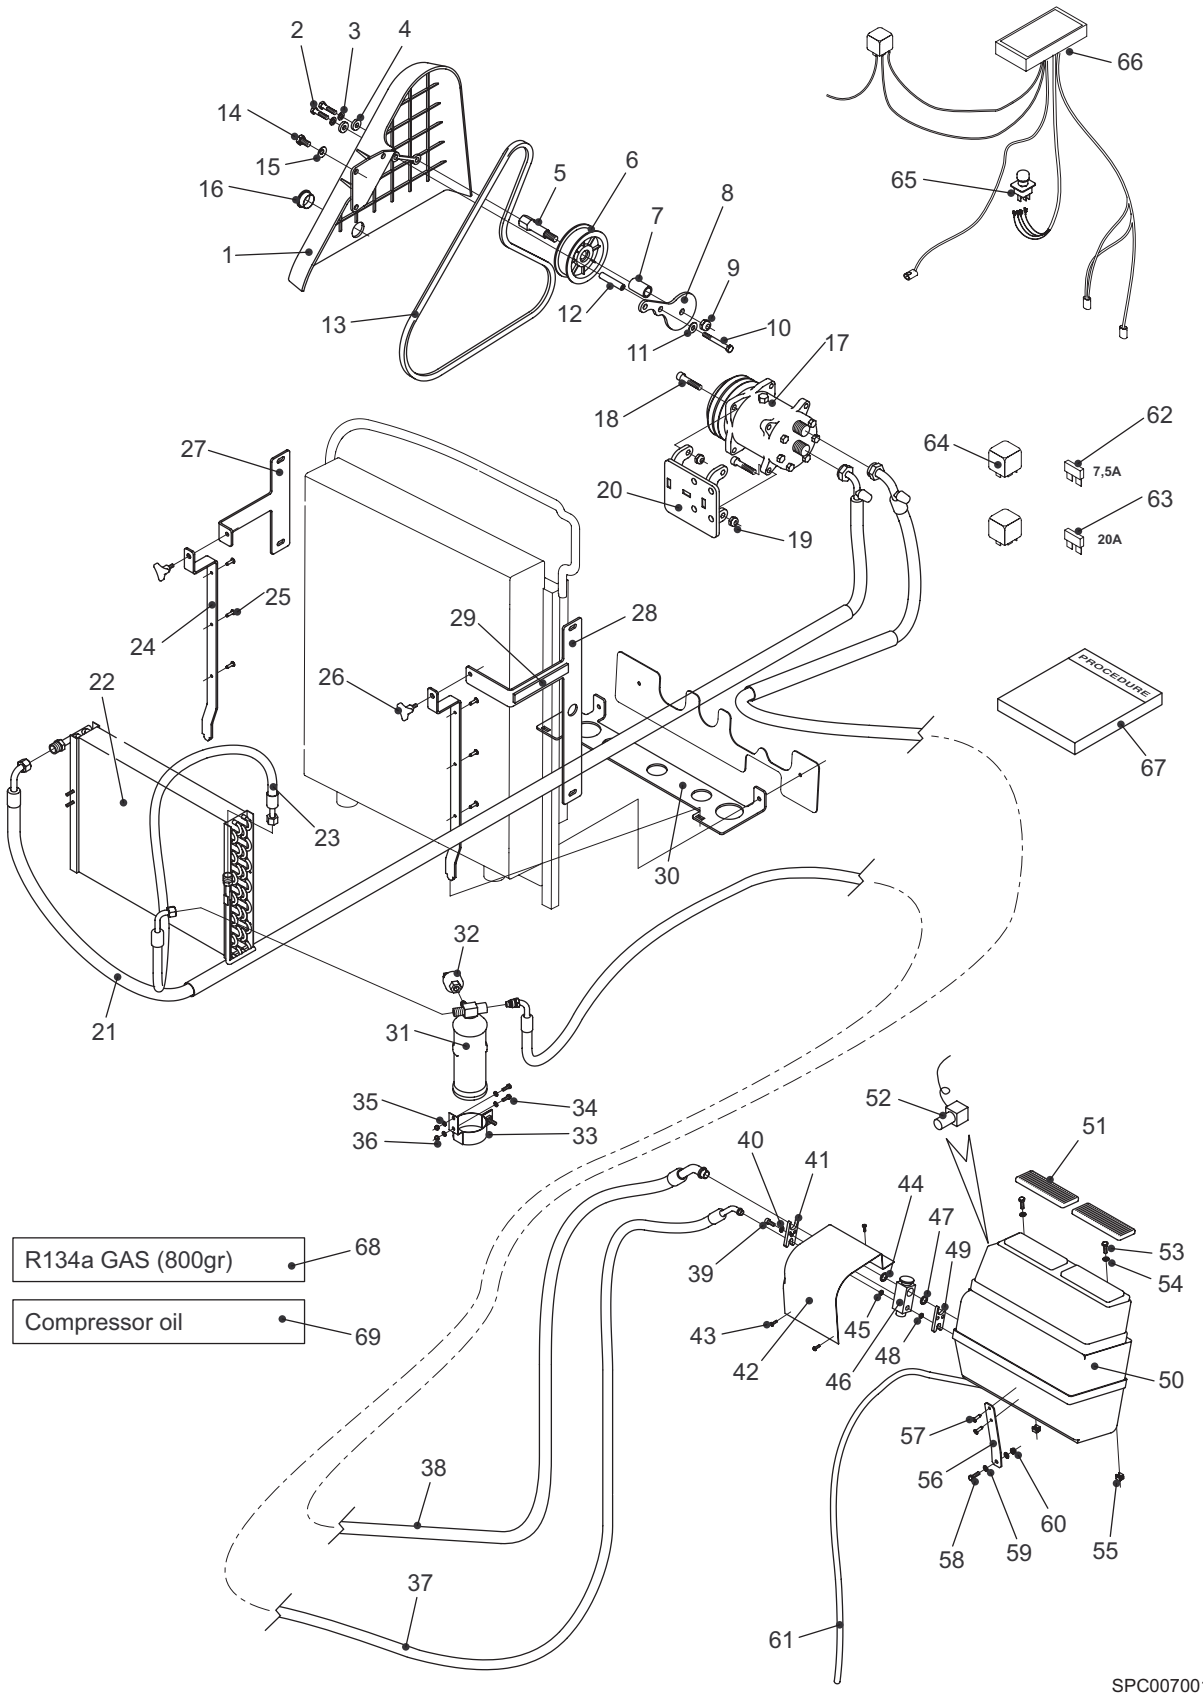

https://www.pdfmanual4trucks.com/


Air Conditioning Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6915517	Belt protector	Was 6914411		1
2	01578.4	Screw			2
3	01697.2	Washer			2
4	97610.0	Washer			2
5	6908181	Spindle			1
6	90531.5	Roller			1
7	6914328	Spacer			1
8	6908180	Support			1
9	000345-96E	Nut			1
10	01522.2	Screw			1
11	000350-20Q	Washer			1
12	100345-09A	Nut			1
13	90545.5	Alternator Belt			1
14	01605.5	Screw			3
15	000350-03W	Washer			3
16	74335.1	Plug			1
17	89644.9	Compressor			1
18	54009.6	Screw			4
19	100345-09A	Nut			4
20	6909391	Support			1
21	89647.2	Hose			1
22	81439.2	Condenser			1
23	88844.6	Hose			1
24	6911207	Support			2
25	66679.2	Rivet			6
26	85171.7	Thumb Screw			2
27	6911209	Support			1
28	6911210	Support			1
29	6913148	Adhesive sponge			1
30	6911201	Support			1
31	89643.1	Dryer			1

https://www.pdfmanual4trucks.com/

Air Conditioning Installation

Recurrence of previous drawing

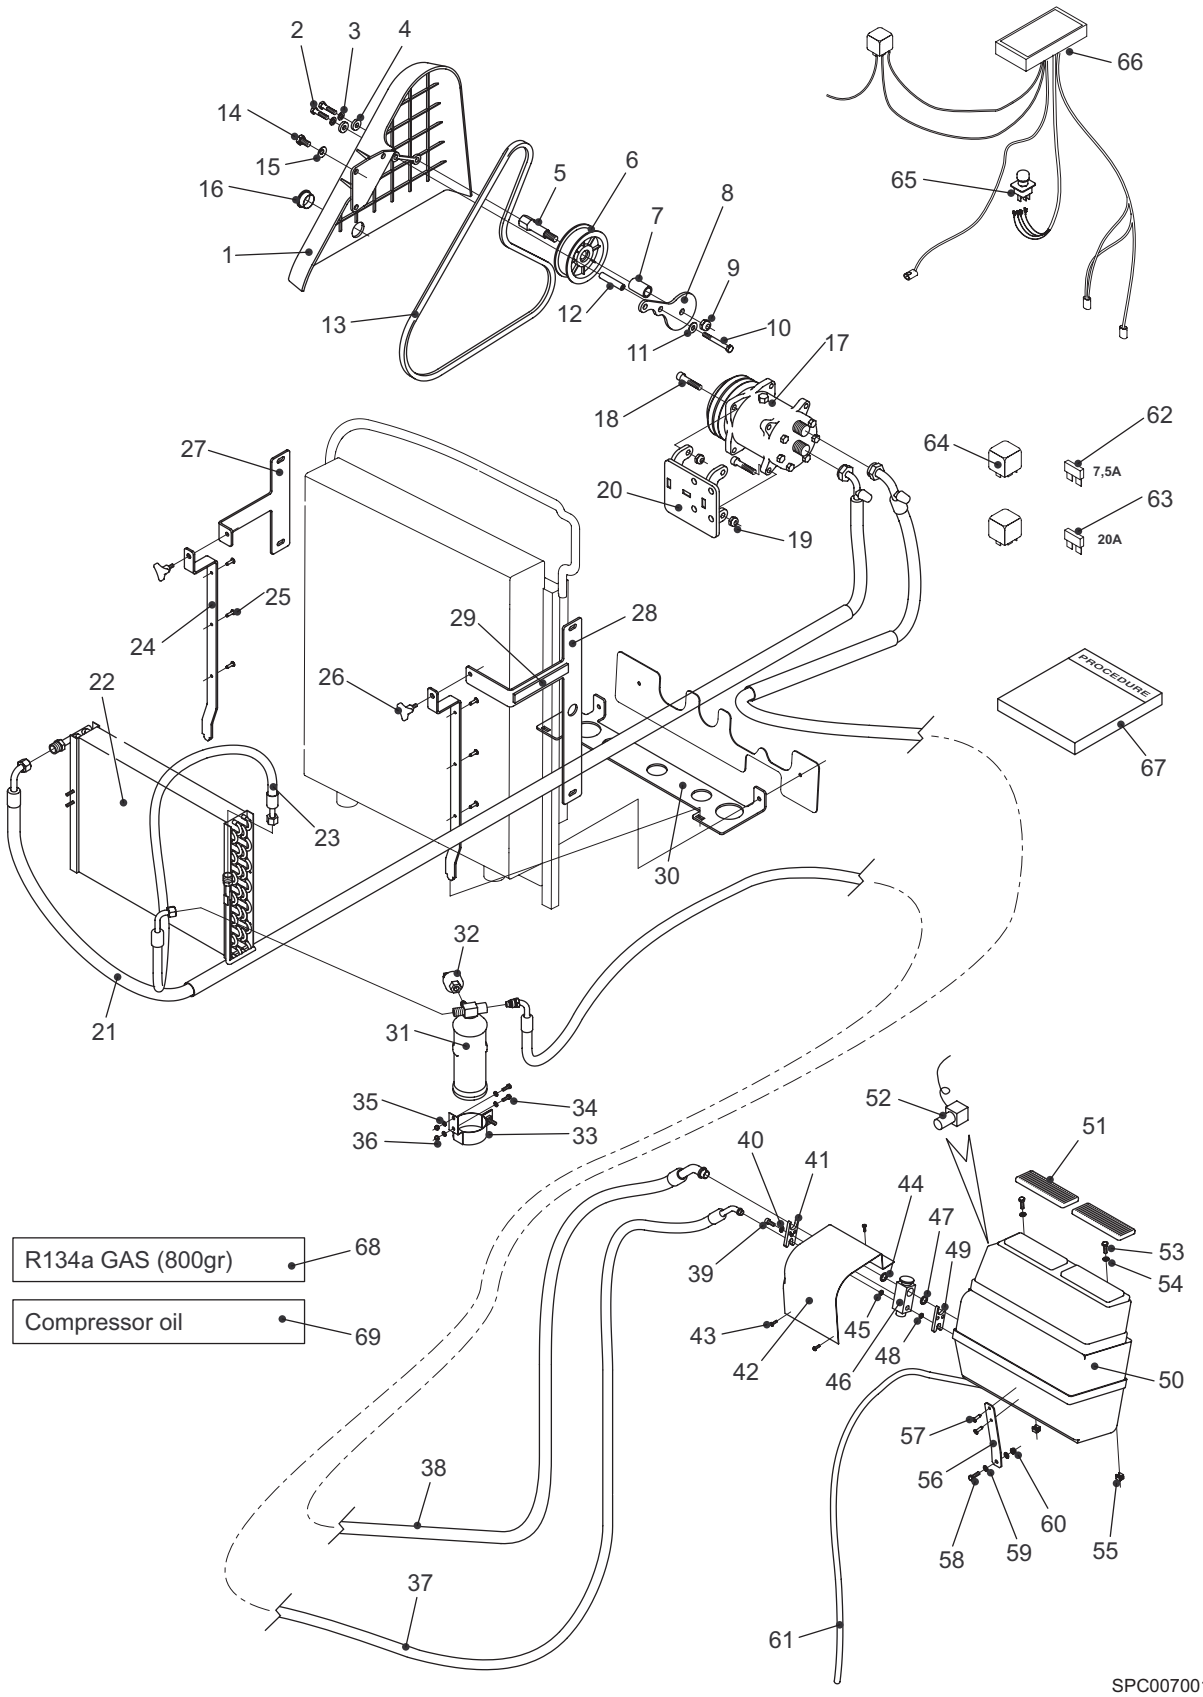

https://www.pdfmanual4trucks.com/


Air Conditioning Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	89642.3	Switch			1
33	89641.5	Bracket			1
34	01478.7	Screw			2
35	01695.6	Washer			4
36	100345-05V	Nut			2
37	89649.8	Hose			1
38	89648.0	Hose			1
39	15354.4	Screw			1
40	13416.3	Washer			1
41	88826.3	Plate			1
42	88827.1	Protector			1
43	6910951	Screw			3
44	98071.4	O-ring			1
45	98068.0	O-ring			1
46	97358.6	Valve			1
47	98070.6	O-ring			1
48	98069.8	O-ring			1
49	97359.4	Plate			1
50	96082.3	Evaporator			1
51	97265.3	Grill			2
52	97432.9	Thermostat			1
53	01591.7	Screw			2
54	01696.4	Washer			2
55	71921.1	Nut			2
56	88830.5	Plate			1
57	66679.2	Rivet			2
58	01591.7	Screw			1
59	01696.4	Washer			1
60	100345-06W	Nut			1
61	88848.7	Hose			1
62	57792.4	Fuse	7.5 A		1

https://www.pdfmanual4trucks.com/

Air Conditioning Installation

Recurrence of previous drawing

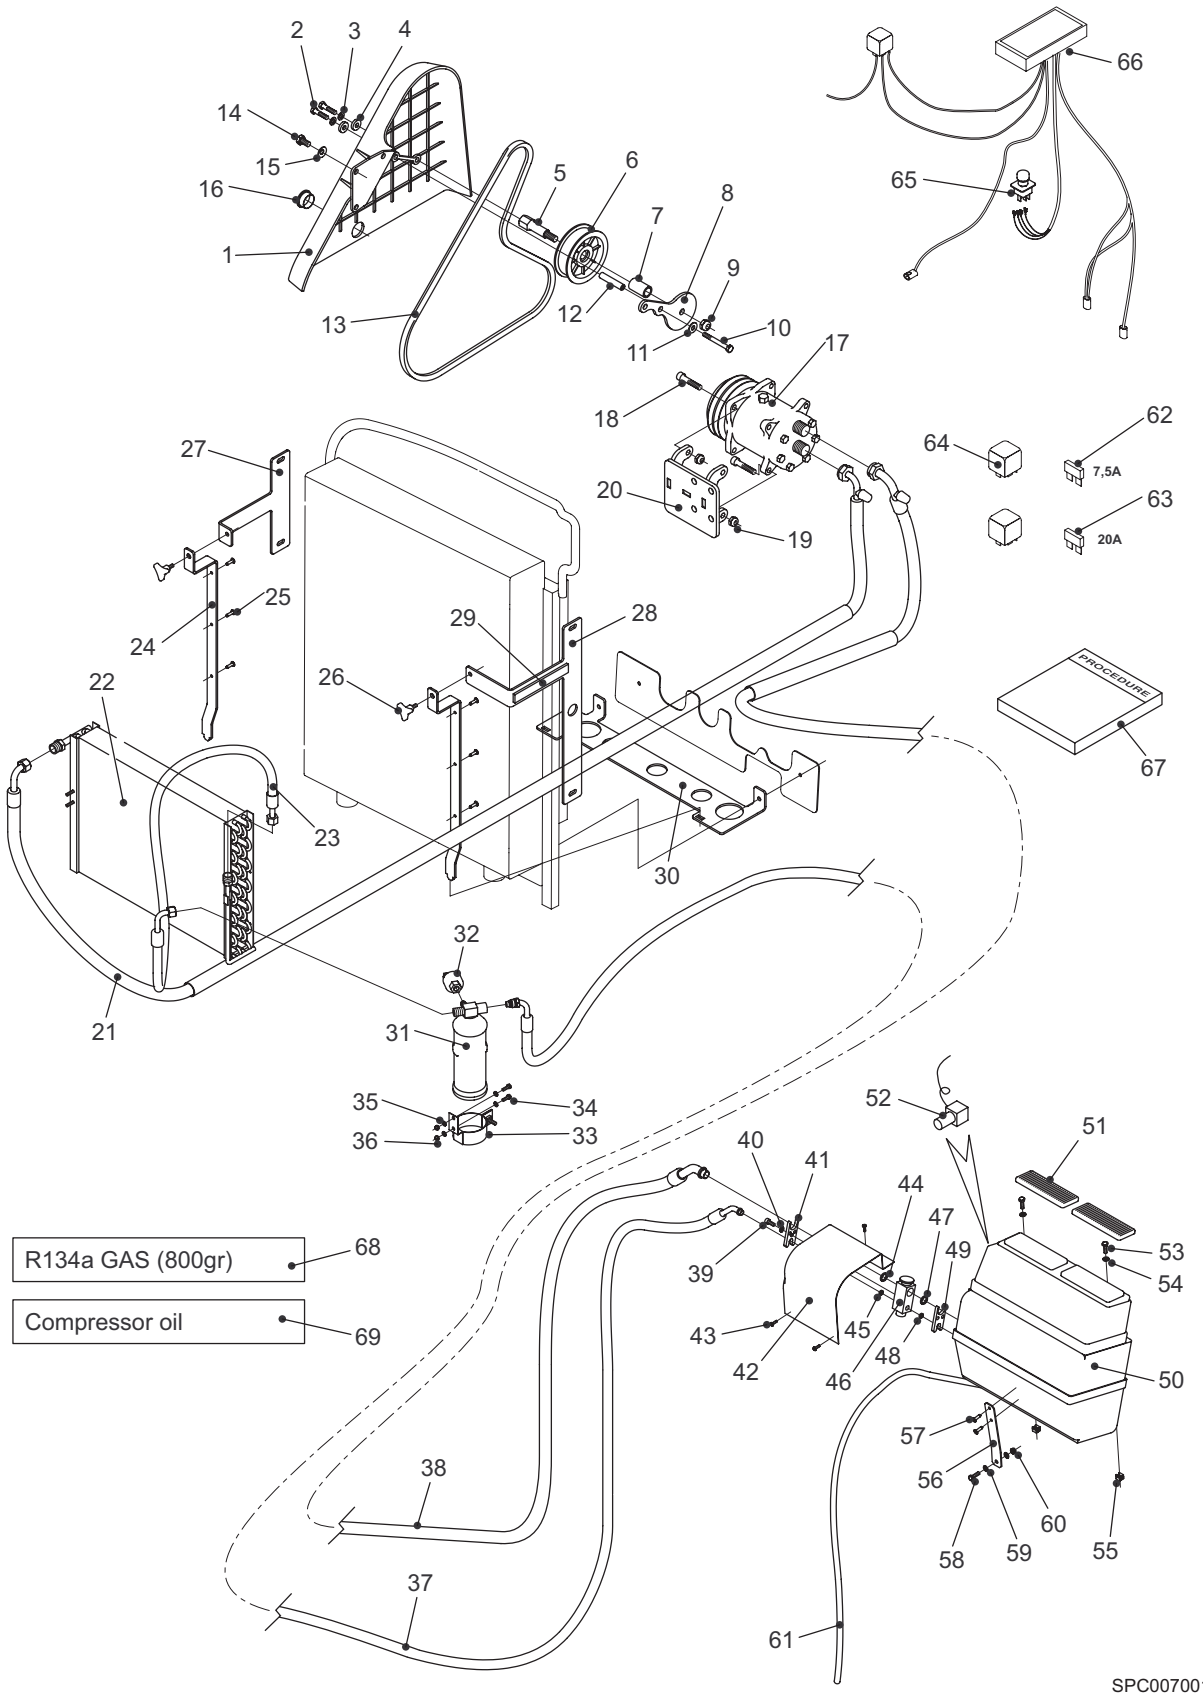


https://www.pdfmanual4trucks.com/

Air Conditioning Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
63	6625575	Fuse	20 A		1
64	80224.9	Relay			2
65	88825.5	Switch			1
66	96083.1	Wiring			1
67		Airco manual			1
68	88030.2	Gas R-134A			0.8
69	88029.4	Compressor oil			0.04

https://www.pdfmanual4trucks.com/

DUNLOP 400/80-R24 153B Wheels

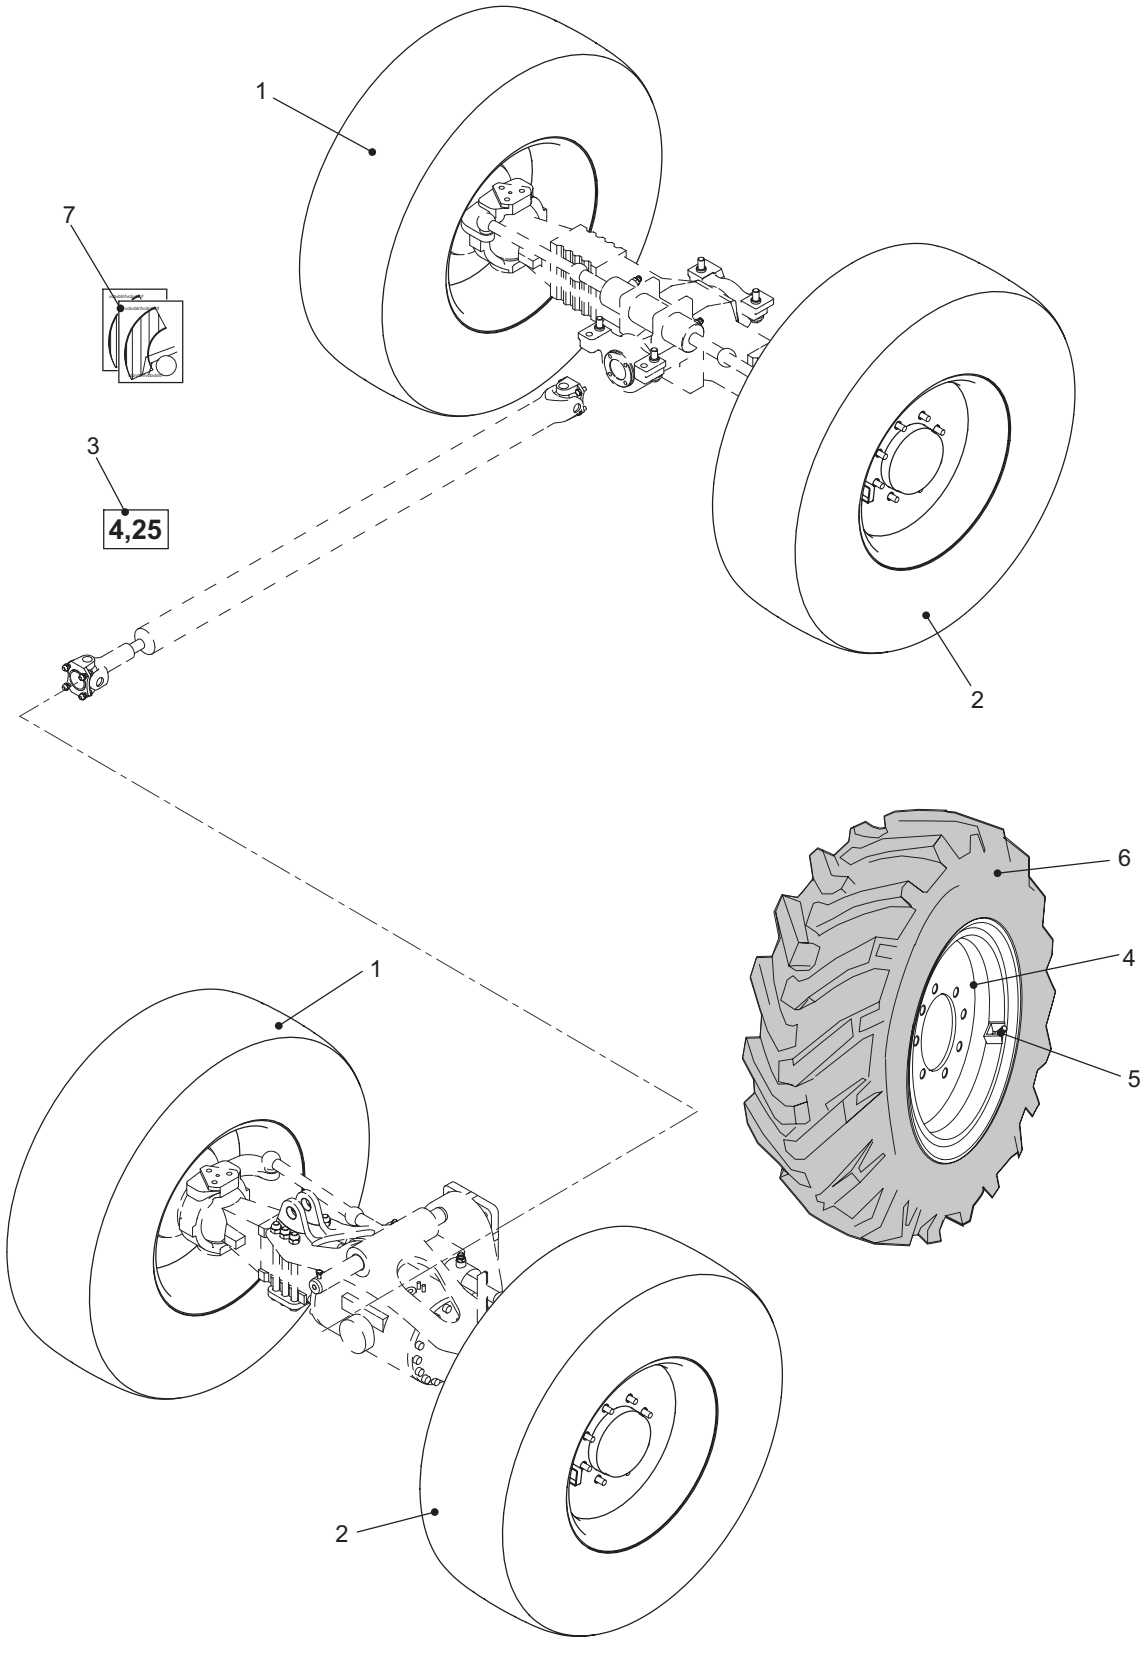

SPC007069


https://www.pdfmanual4trucks.com/

DUNLOP 400/80-R24 153B Wheels

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	NAP	Set of wheels	Order now 6915052 ; Pos. 1 to 2 ; Was 89702.5		1
1	NAP	R.H. wheel assy	Order now 6914963 ; Pos. 4 to 6 ; Was 89700.9		2
2	NAP	L.H. wheel assy	Pos. 4 to 6 ; Was 89701.7		2
3	6911014	Decal	4.25 B		4
4	89699.3	Rim			1
5	100426-06B	Air Valve			1
6	NAP	Tyre	Order now 96332.2 ; Was 82004.3		1
7	6912325	Abacus card	T3571	3628 11001 & above	1
	6912329	Abacus card	T3571L	3629 11001 & above	1

https://www.pdfmanual4trucks.com/

DUNLOP 400/80-R24 156B Wheels

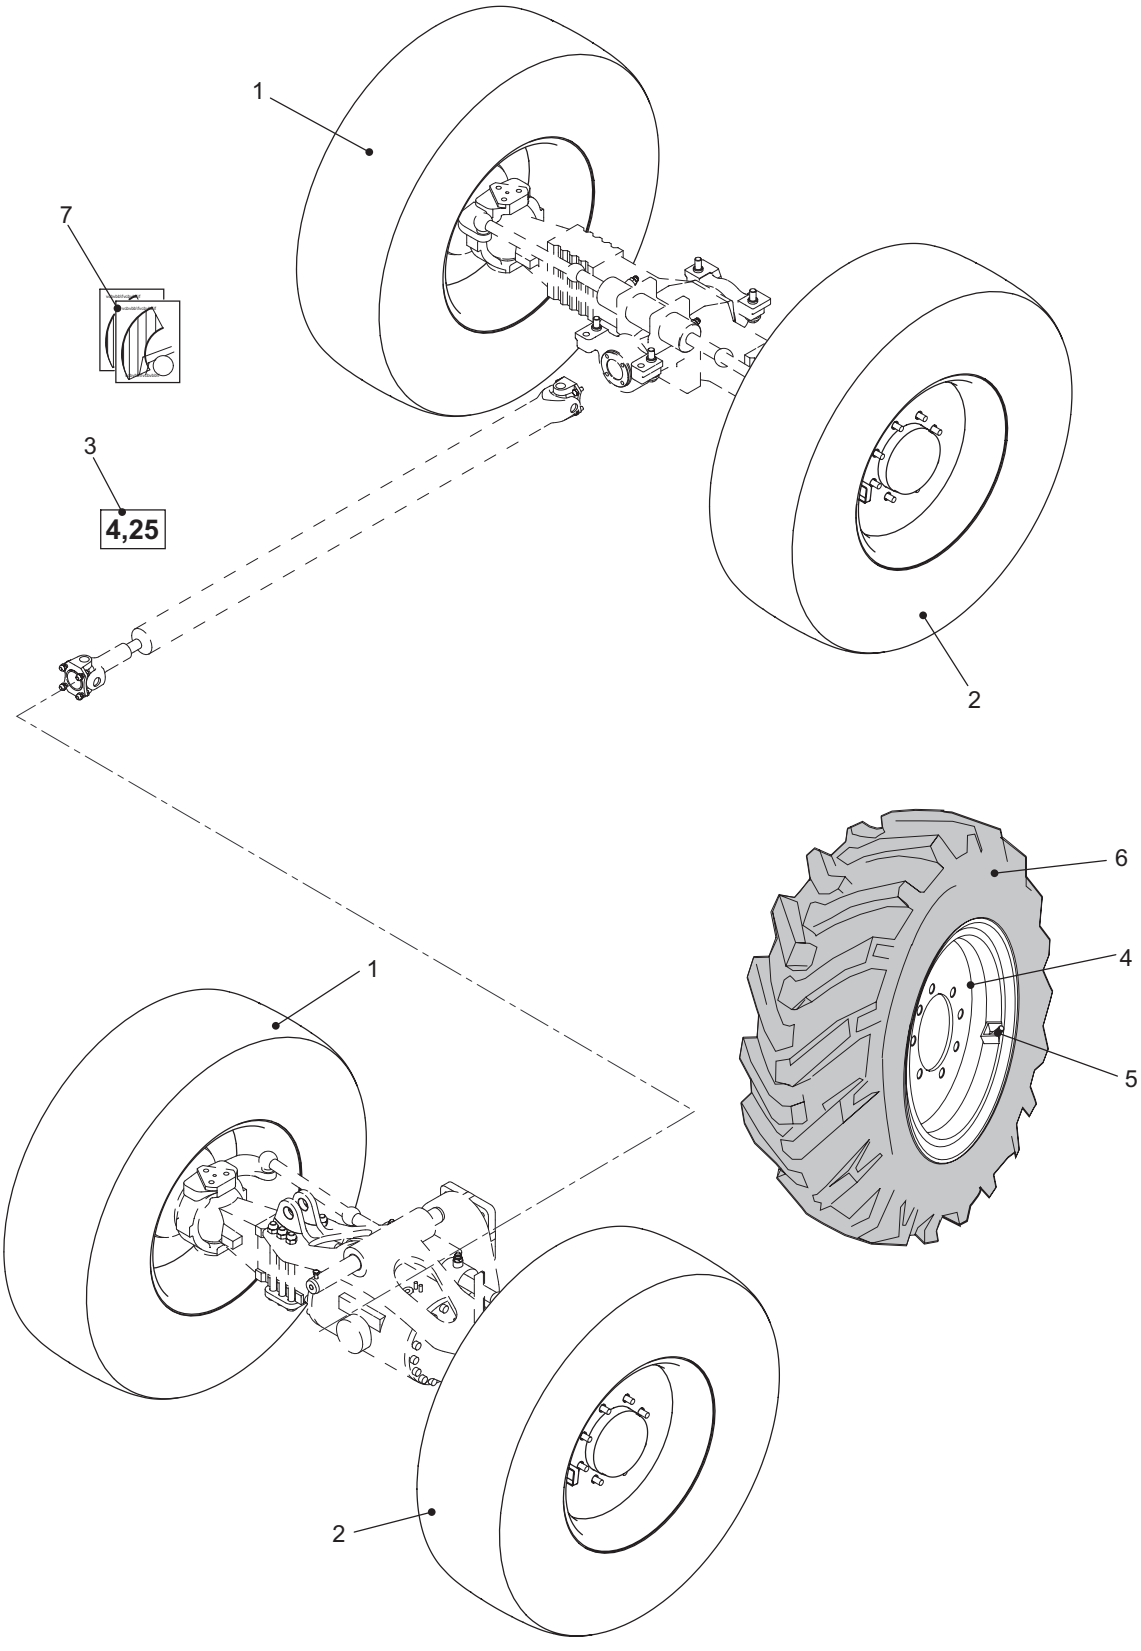

SPC007069


https://www.pdfmanual4trucks.com/

DUNLOP 400/80-R24 156B Wheels

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6915052	Set of wheels	Pos. 1 to 2		1
1	6914963	R.H. wheel assy	Pos. 4 to 6		2
2	6914964	L.H. wheel assy	Pos. 4 to 6		2
3	6914975	Shields (4.25b)	4.25 bar		4
4	89699.3	Rim			1
5	100426-06B	Air Valve			1
6	96332.2	Tyre			1
7	6914979	Abacus card	T3571	3629 11001 & above	1
	6914978	Abacus card	T3571L	3628 11001 & above	1

https://www.pdfmanual4trucks.com/

TITAN 400/70-R20 Wheels

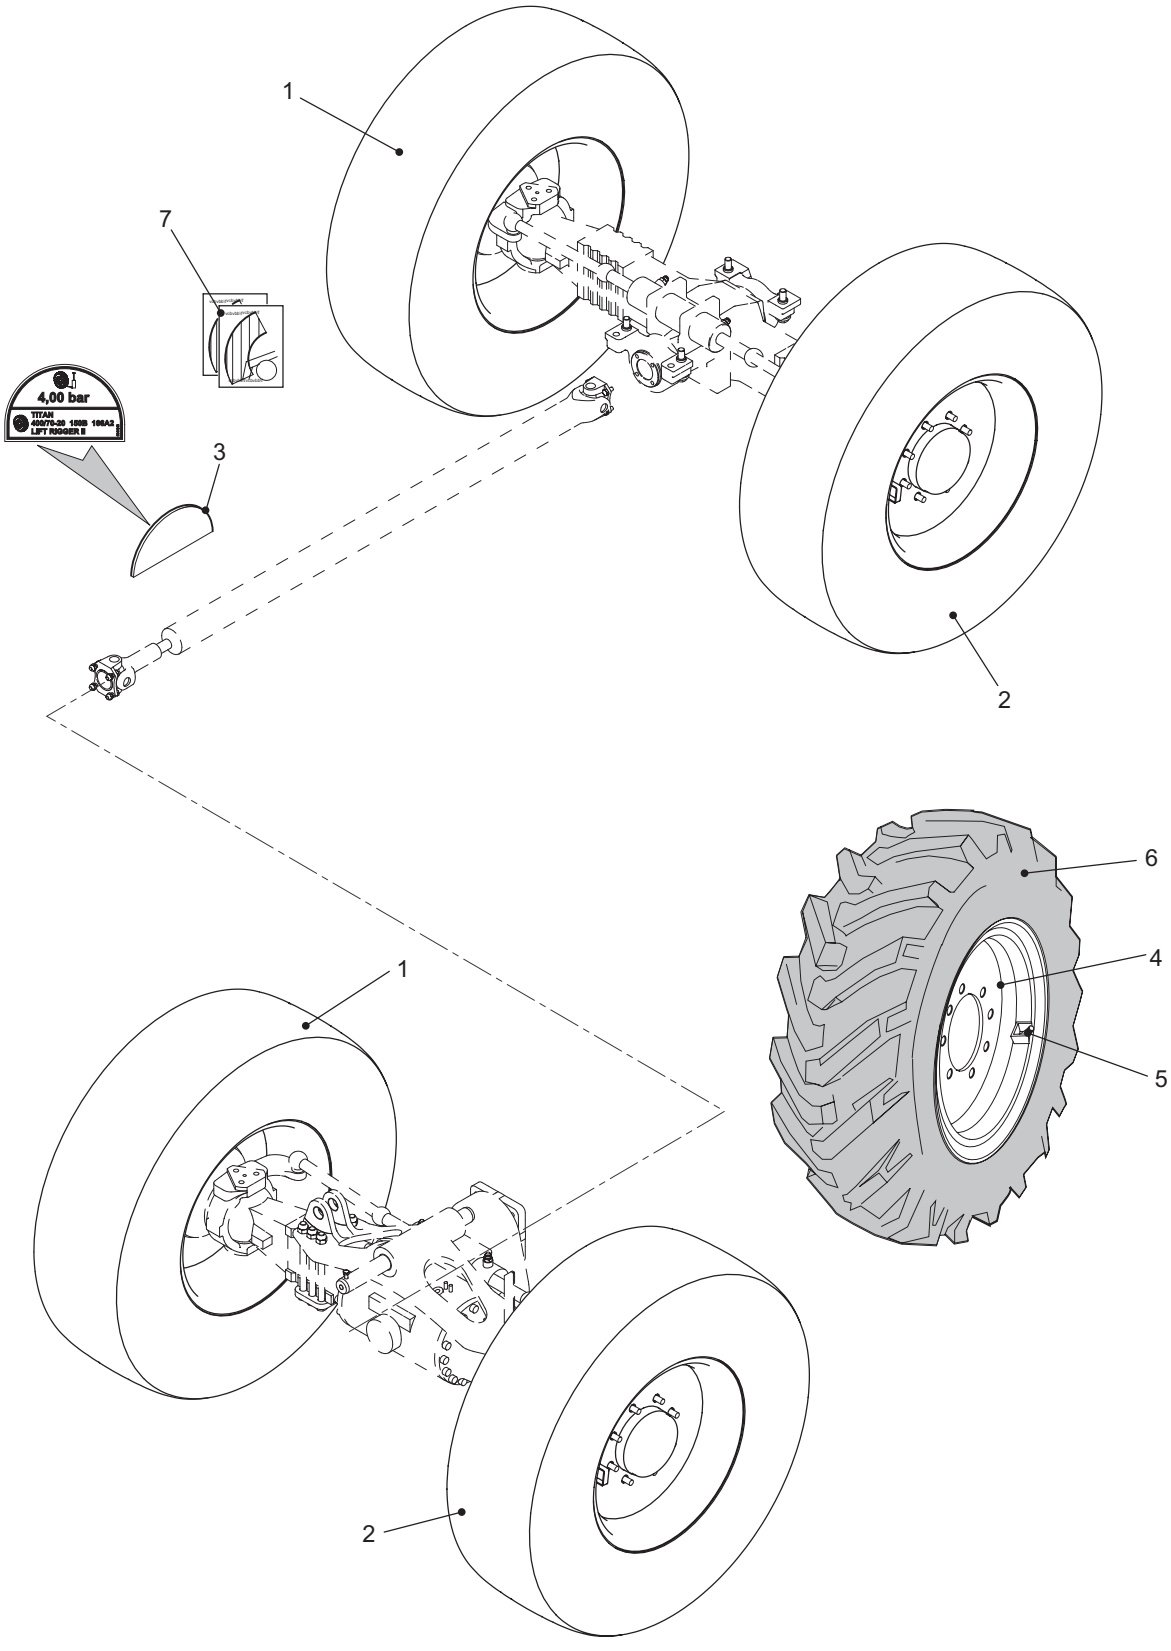

SPC007070


https://www.pdfmanual4trucks.com/

TITAN 400/70-R20 Wheels

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6909334	Set of wheels	Pos. 1 to 2		1
1	6909335	R.H. wheel assy	Pos. 4 to 6		2
2	6909336	L.H. wheel assy	Pos. 4 to 6		2
3	6911013	Decal	4.00 bar		4
4	90471.4	Rim			1
5	100426-06B	Air Valve			1
6	6909321	Tyre			1
7	6912321	Abacus card	T3571	3628 11001 & above	1
	6912320	Abacus card	T3571L	3629 11001 & above	1

https://www.pdfmanual4trucks.com/

DUNLOP 405/70-R20 SPT9 Wheels

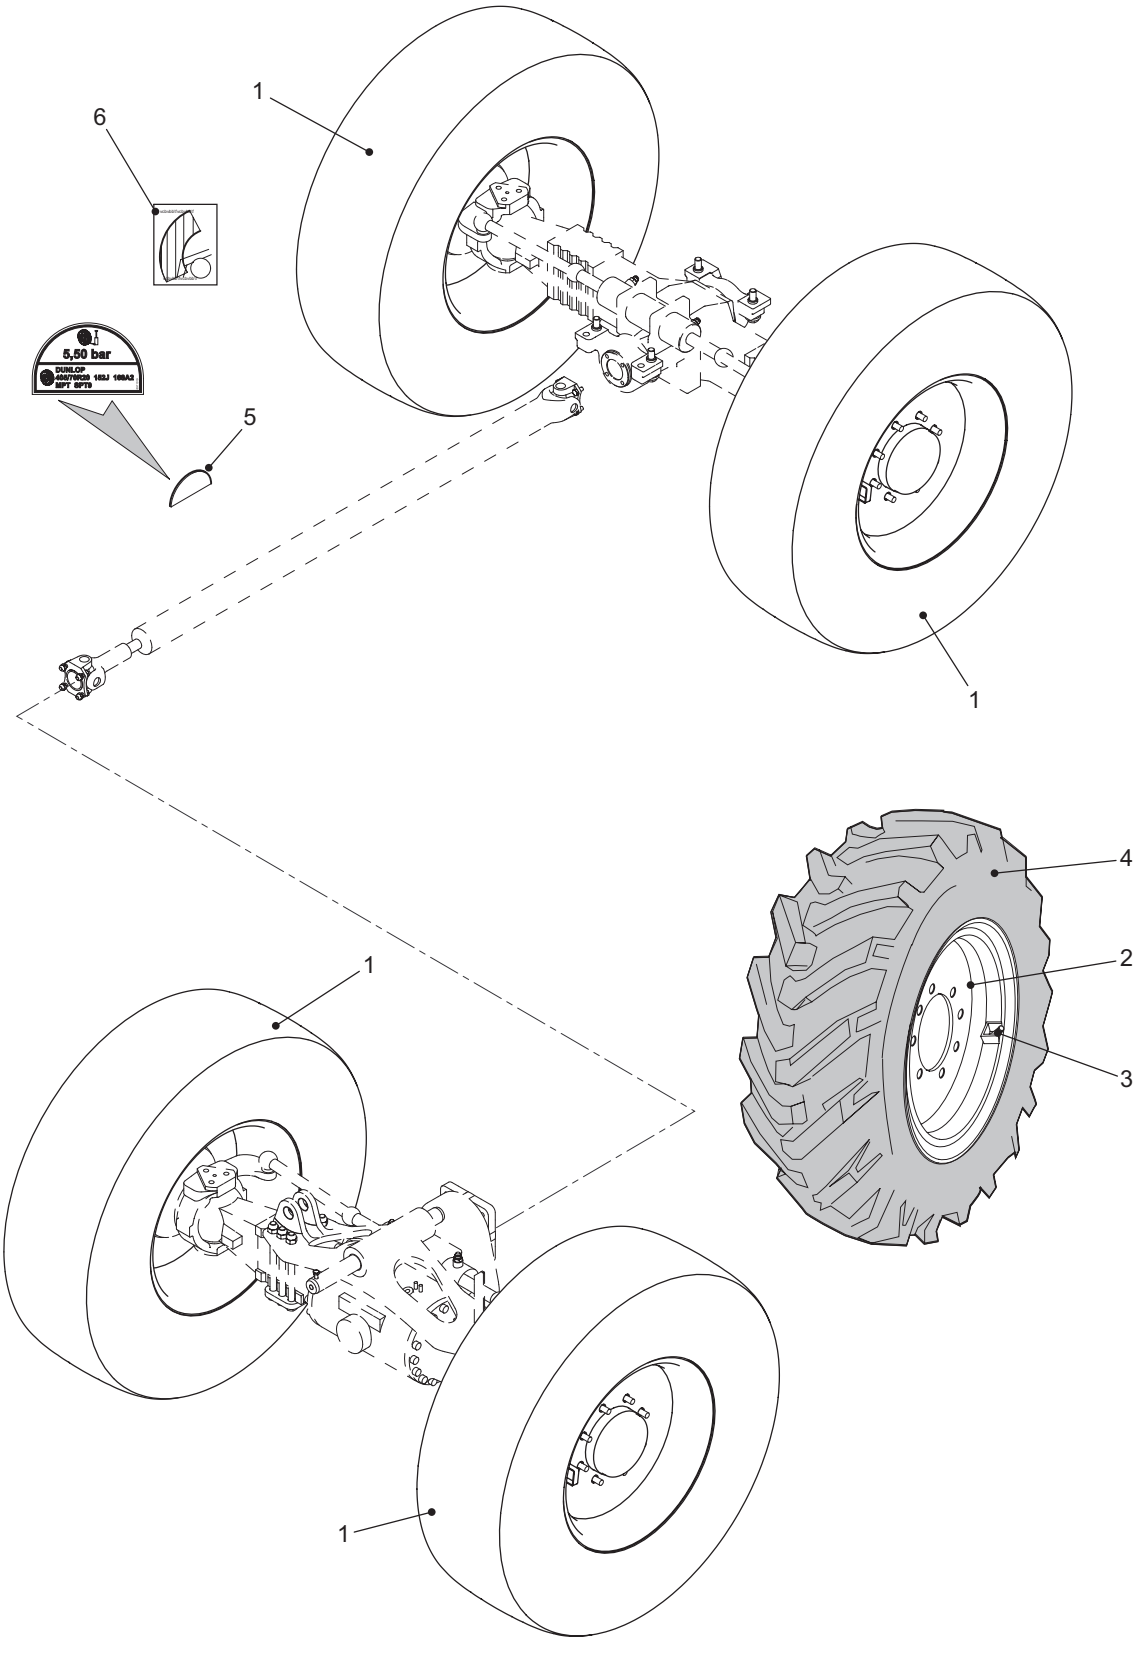

SPC007071


https://www.pdfmanual4trucks.com/

DUNLOP 405/70-R20 SPT9 Wheels

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	90478.9	Set of wheels	Pos. 1		1
1	90477.1	Wheel assy	Pos. 2 to 4		4
2	90471.4	Rim			1
3	100426-06B	Air Valve			1
4	77297.0	Tyre			1
5	6911019	Decal	5.5 B		4
6	6912313	Abacus card	T3571	3628 11001 & above	1
	6912312	Abacus card	T3571L	3629 11001 & above	1

https://www.pdfmanual4trucks.com/

MICHELIN 440/70 XM37 Wheels

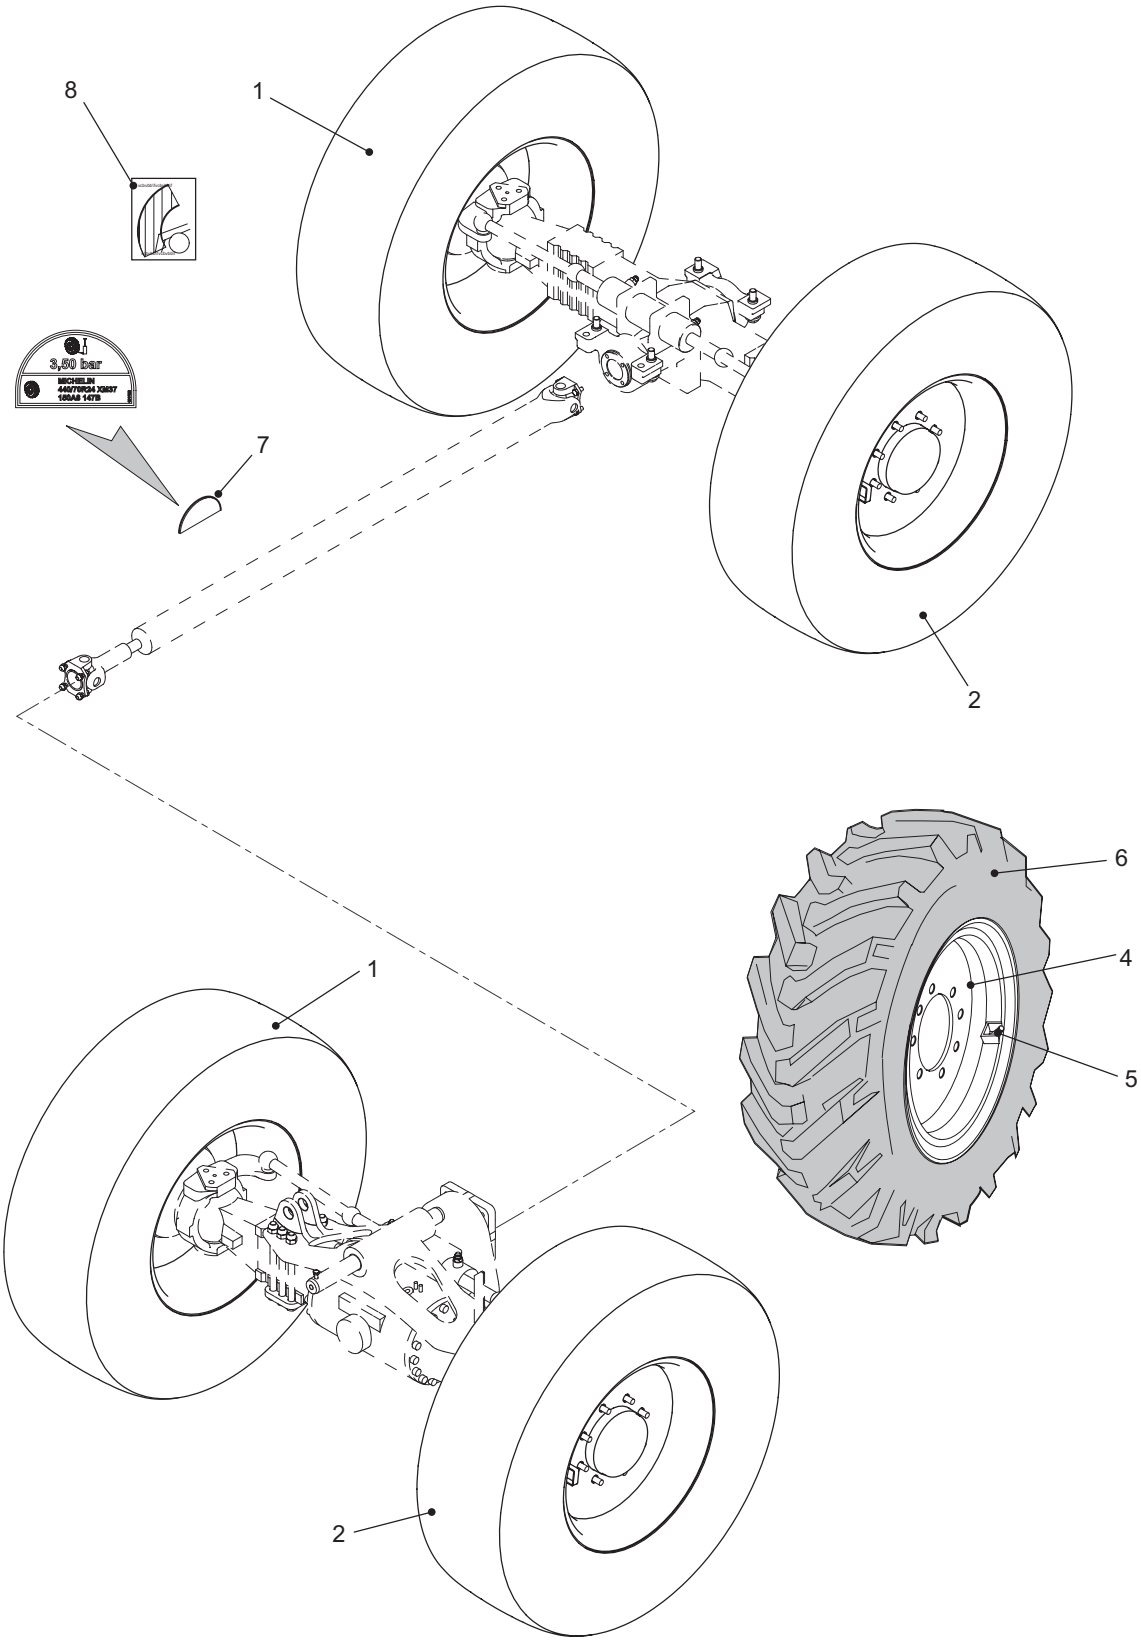

SPC007072


https://www.pdfmanual4trucks.com/

MICHELIN 440/70 XM37 Wheels

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6914256	Set of wheels	Pos. 1 to 2		1
1	6914156	R.H. wheel assy	Pos. 4 to 6		2
2	6914157	L.H. wheel assy	Pos. 4 to 6		2
4	90479.7	Rim			1
5	100426-06B	Air Valve			1
6	6914142	Tyre			1
7	6914158	Shields	3.5 bar		4
8	6914159	Abacus card	T3571	3628 11001 & above	1
	6914160	Abacus card	T3571L	3629 11001 & above	1

https://www.pdfmanual4trucks.com/

BFGOODRICH 400/70-20 Wheels

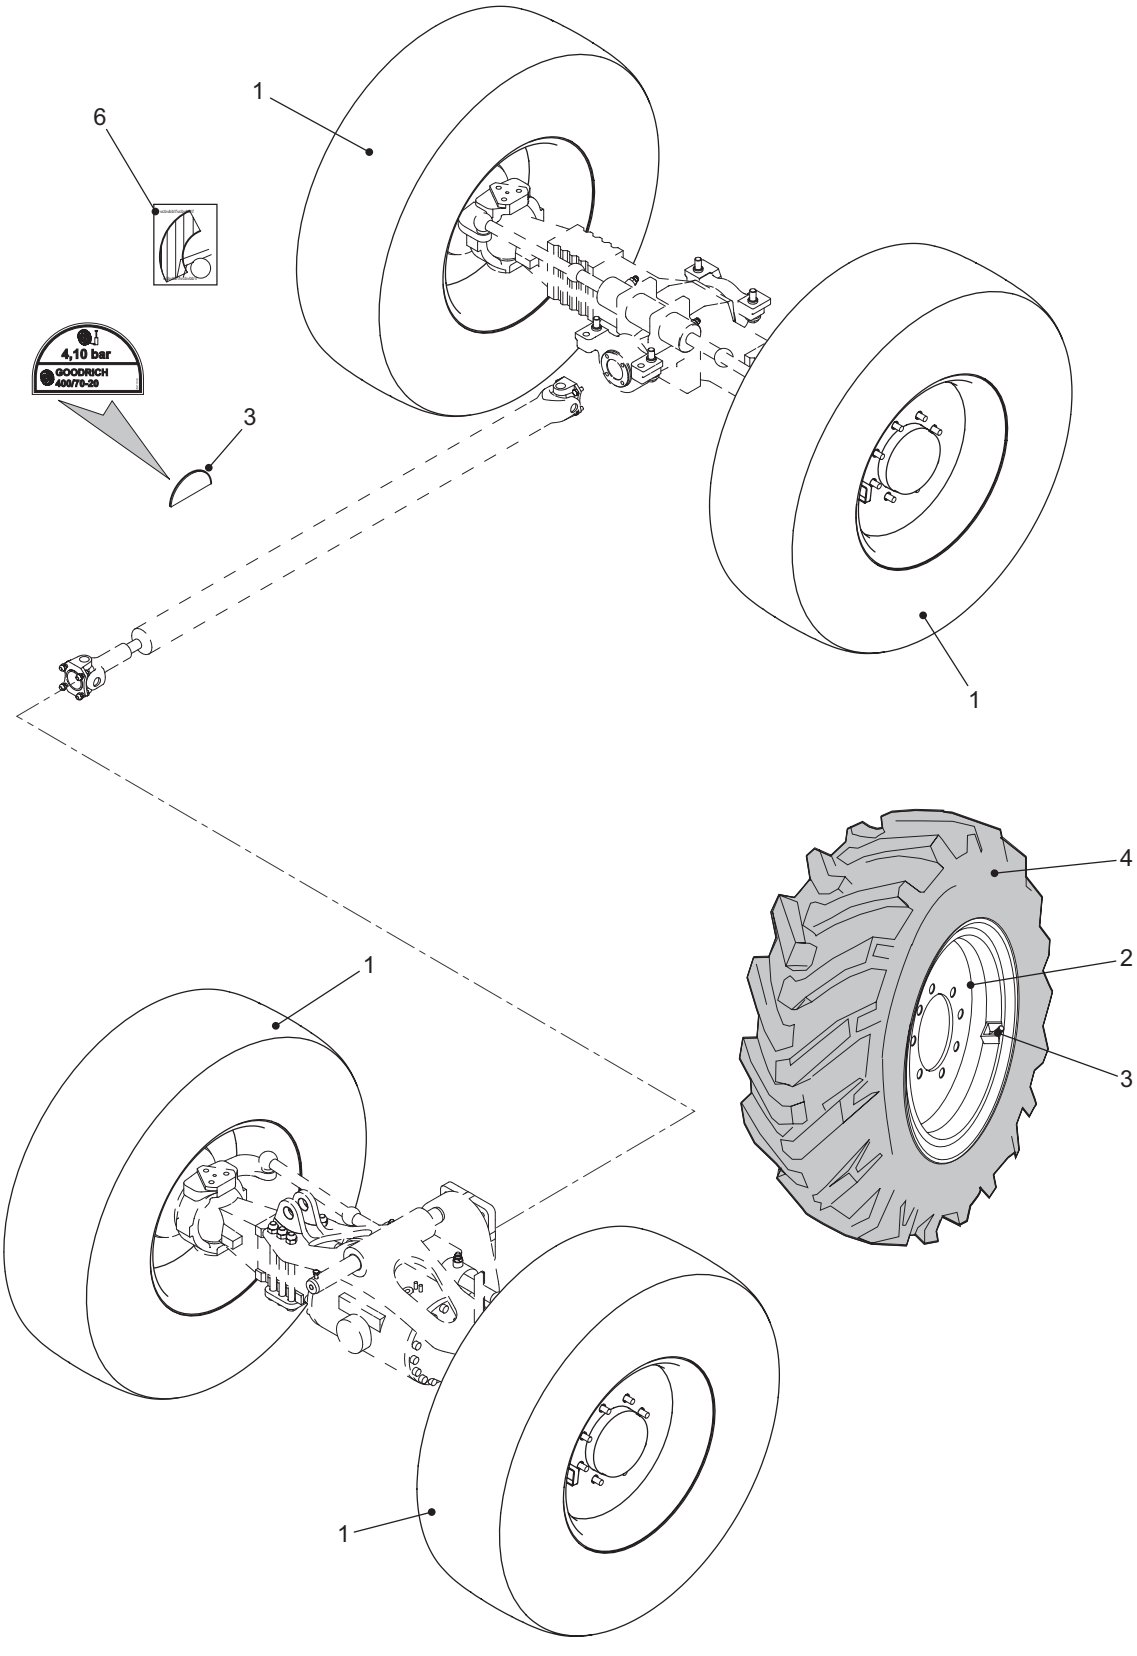

SPC007085


https://www.pdfmanual4trucks.com/

BFGOODRICH 400/70-20 Wheels

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6916485	Set of wheels	Pos. 1 + 2		1
1	6915503	R.H. wheel assy	Pos. 4 to 6		2
2	6915504	L.H. wheel assy	Pos. 4 to 6		2
3	6915461	Decal	4.1 bar		4
4	90471.4	Rim			1
5	100426-06B	Air Valve			1
6	6915511	Tyre			1
7	6915482	Abacus card	T3571	3628 11001 & above	1
	6912297	Abacus card	T3571L	3629 11001 & above	1

https://www.pdfmanual4trucks.com/

Mudguard 20"

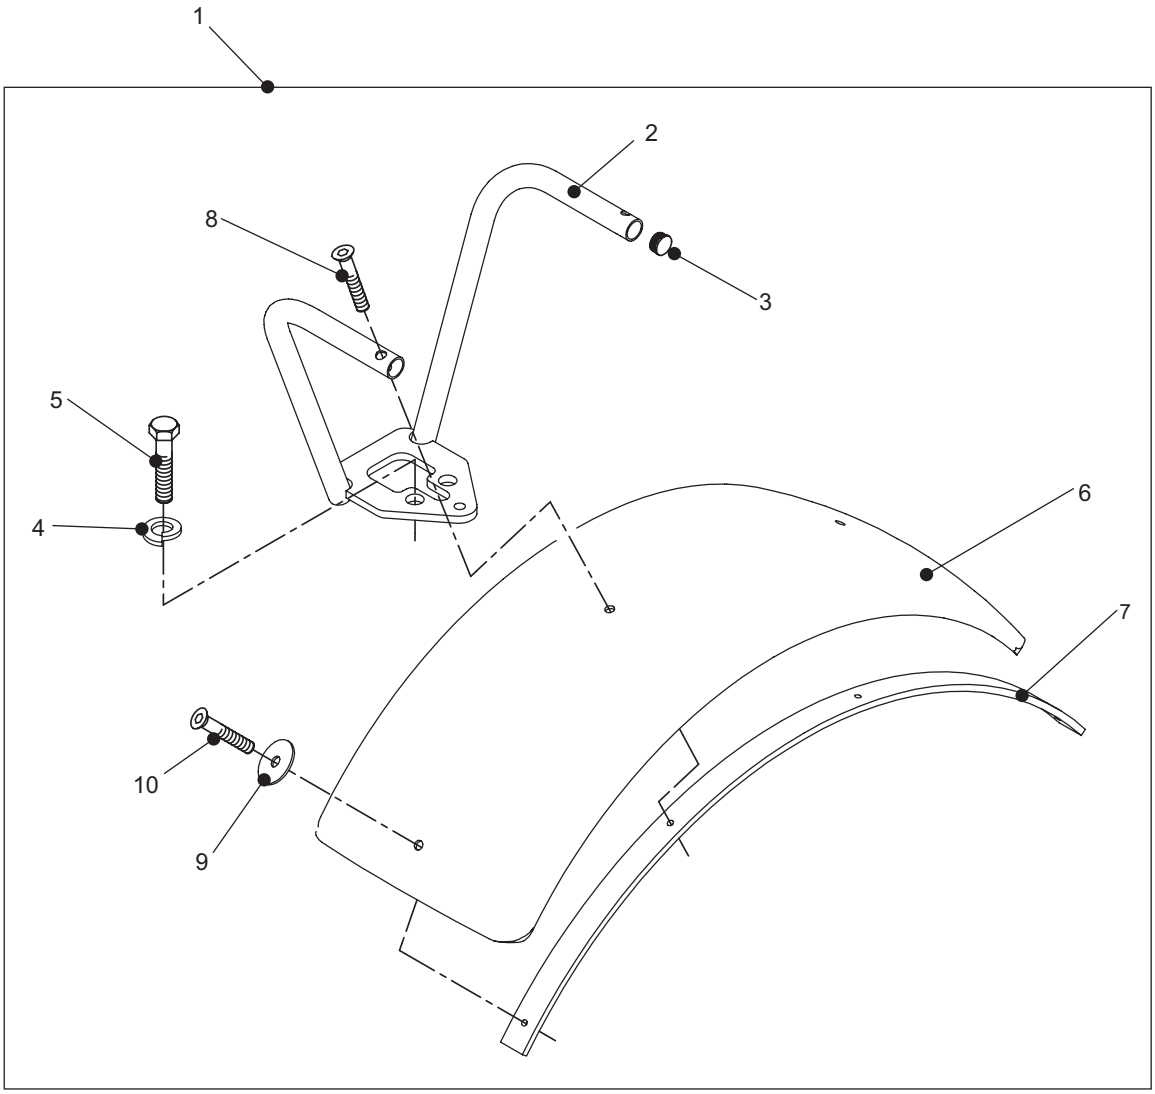

SPC007073


https://www.pdfmanual4trucks.com/

Mudguard 20"

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1		Mudguard 20"	Pos. 2 to 10		1
2	6913008	Support			4
3	79297.8	Cap			8
4	89332.1	Washer			8
5	76029.8	Screw			8
6	78568.3	Mudguard			4
7	79292.9	Reinforcement Plate			4
8	79293.7	Screw			8
9	001350-04T	Washer			8
10	79294.5	Screw			8

https://www.pdfmanual4trucks.com/

Mudguard 24"

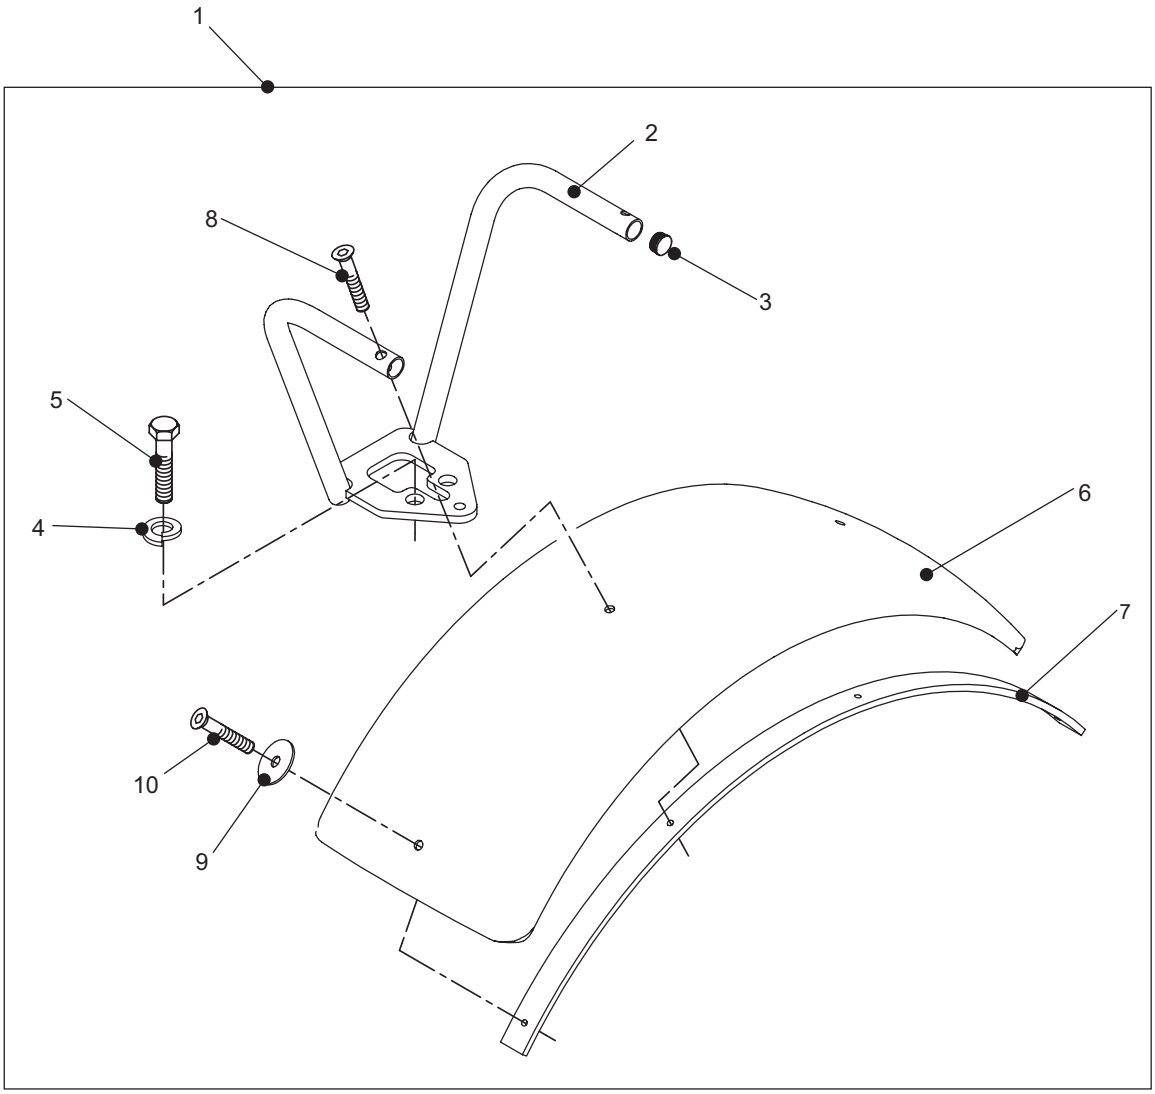

SPC007073


https://www.pdfmanual4trucks.com/

Mudguard 24"

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1		Mudguard 24"	Pos. 2 to 10		1
2	96922.0	Support			4
3	79297.8	Cap			8
4	89332.1	Washer			8
5	76029.8	Screw			8
6	78568.3	Mudguard			4
7	78569.1	Plate			4
8	79293.7	Screw			8
9	001350-04T	Washer			8
10	79294.5	Screw			8

https://www.pdfmanual4trucks.com/

Tow Valve Installation

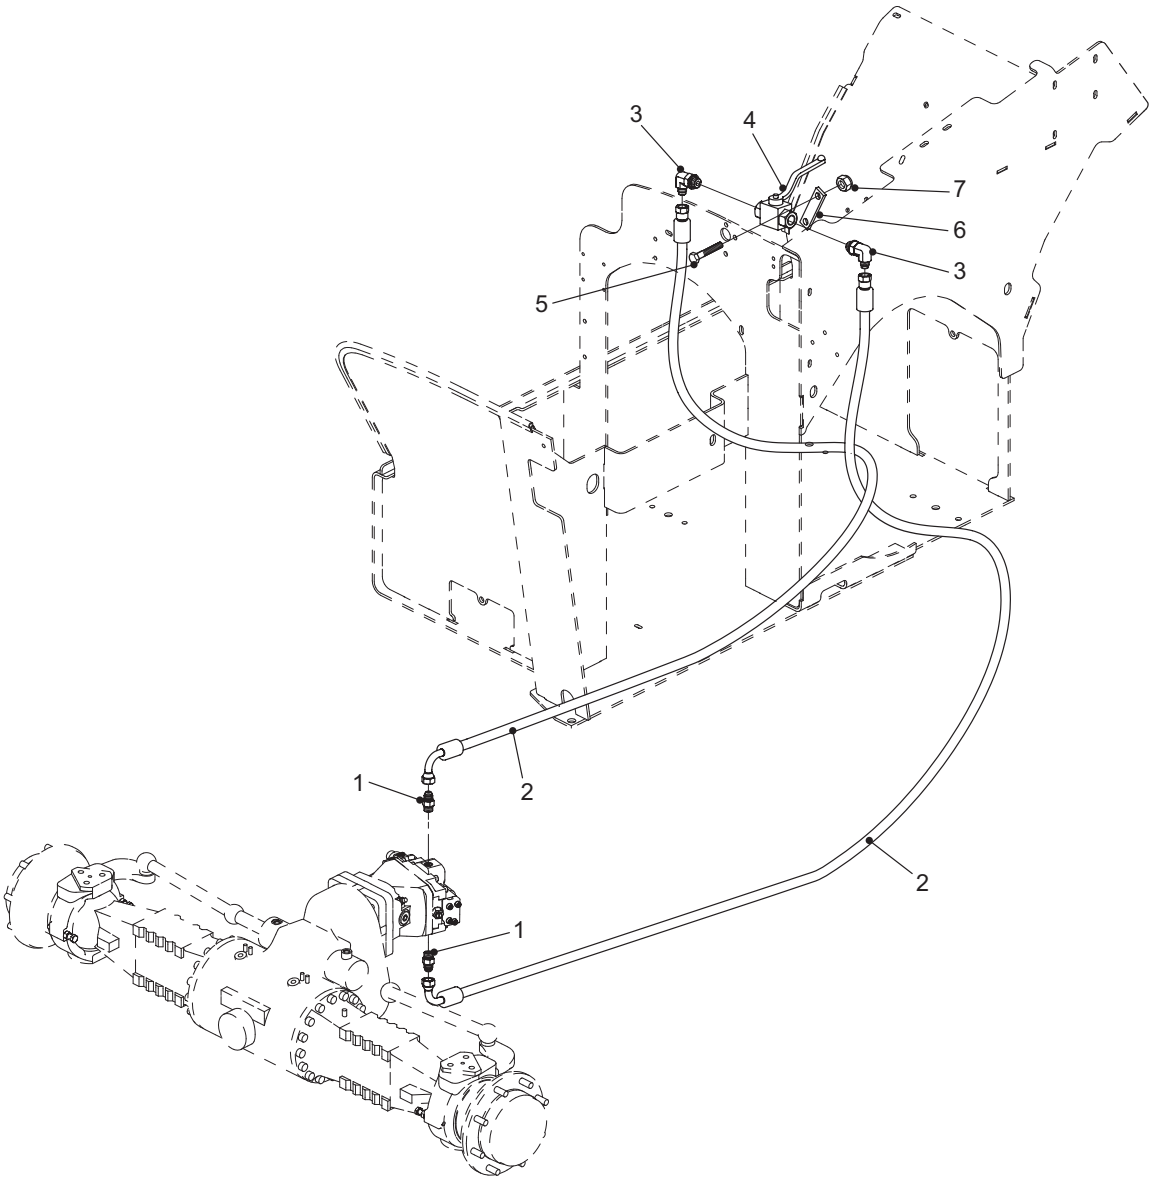

SPC007058


https://www.pdfmanual4trucks.com/

Tow Valve Installation

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	67046.3	Adapter			2
2	6910798	Hose			2
3	77075.0	Elbow union			2
4	100378-03F	Shutoff			1
5	01519.8	Screw			2
6	77014.9	Plate			1
7	100345-09A	Nut			2

https://www.pdfmanual4trucks.com/

Wheel Wedge Option

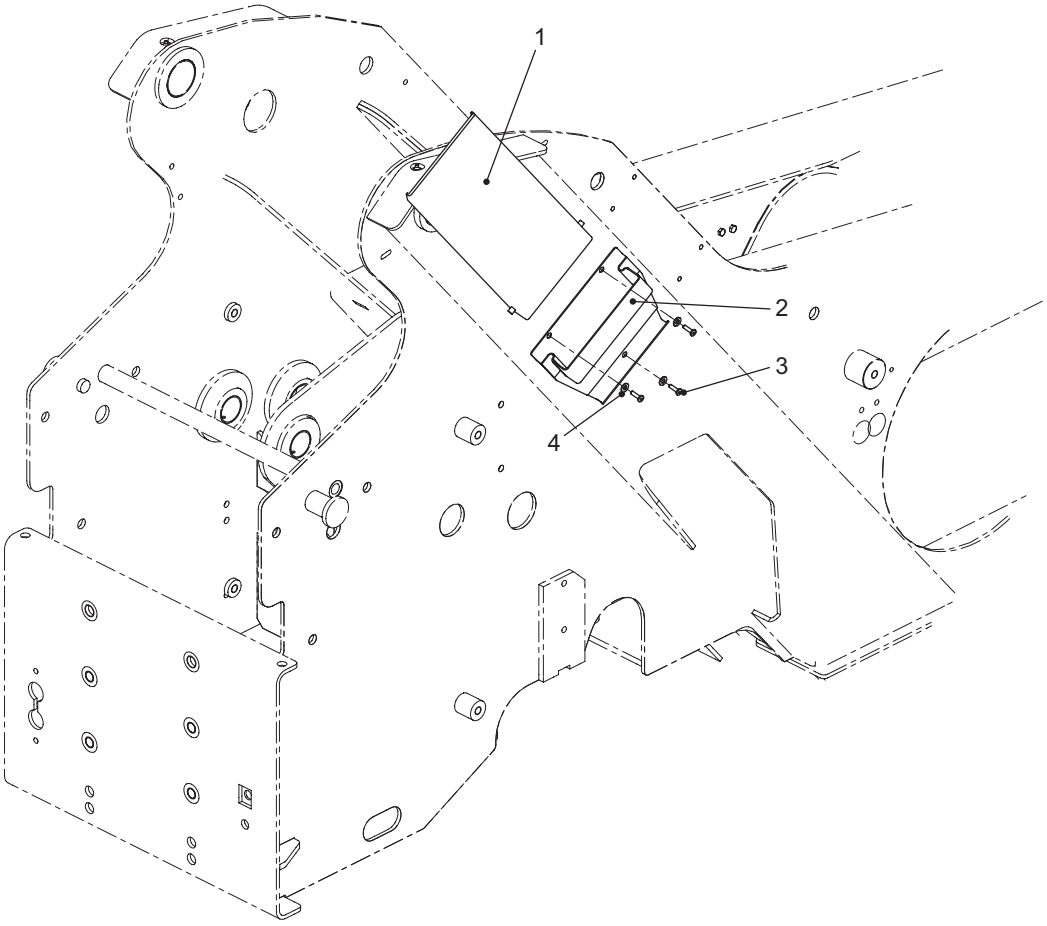

SPC007059


https://www.pdfmanual4trucks.com/

Wheel Wedge Option

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	89577.1	Wedge			1
2	6908252	Wheel wedge bracket			1
3	96541.8	Rivet			3
4	96554.1	Washer			3

https://www.pdfmanual4trucks.com/

Valve Braking Switch Option

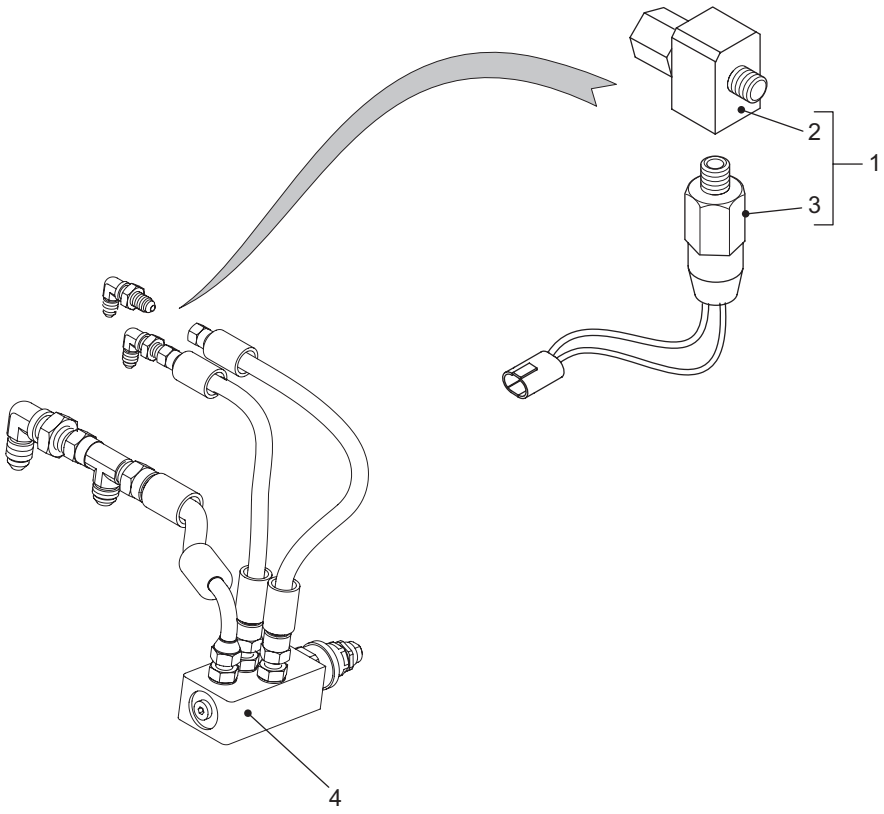

SPC007010


https://www.pdfmanual4trucks.com/

Valve Braking Switch Option

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1		Switch option on valve braking	Pos. 2 + 3		1
2	6912466	Union			1
3	6912465	Switch			1
4		Brake valve			1

https://www.pdfmanual4trucks.com/

Matriculation Plate Option

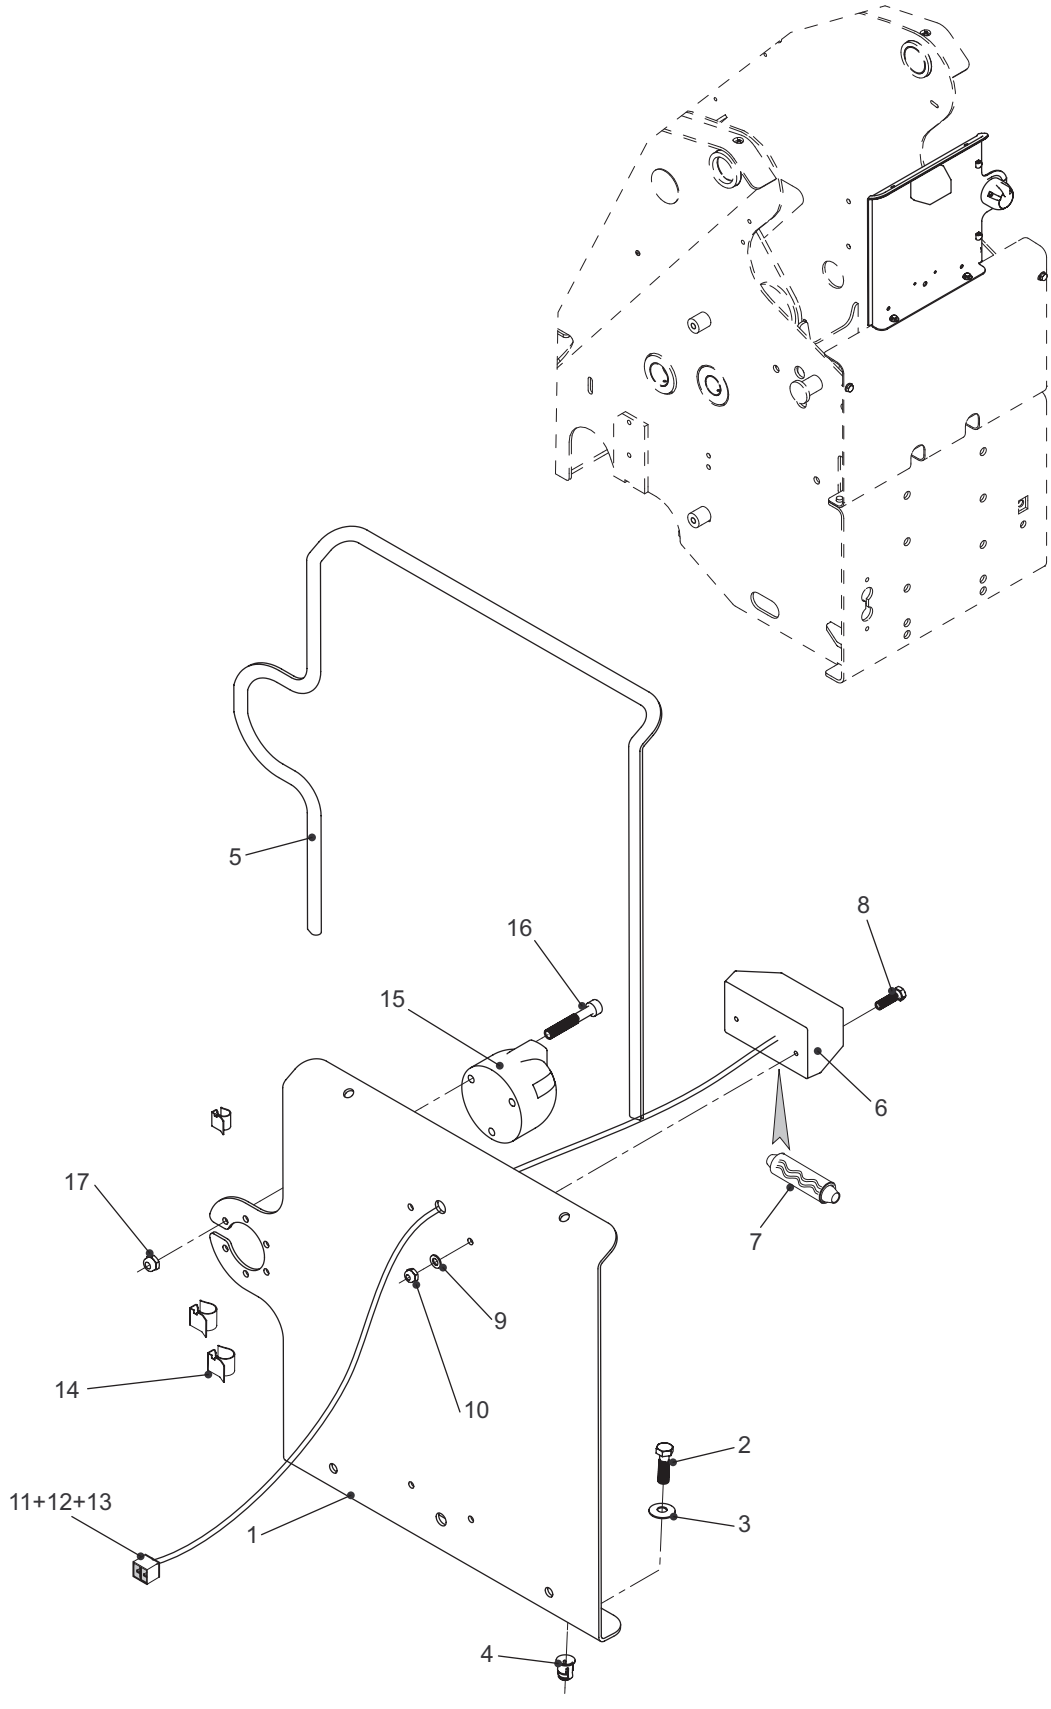


https://www.pdfmanual4trucks.com/

Matriculation Plate Option

Item	Part Number	Denomination	Remarks	Serial Number	Qty
		Matriculation plate option	Pos. 1 to 14		1
1	6909731	Plate			1
2	01598.2	Screw			2
3	01718.6	Washer			2
4	44334.1	Nut			2
5	88375.1	Seal	Length 890 mm		1
6	79334.9	Light			1
7	01443.1	Bulb			1
8	000326-10V	Screw			2
9	007346-02F	Washer			2
10	100345-04U	Nut			2
11	84654.3	Wire harness			1
12	26261.8	Clip			1
13	26267.5	Sleeve			1
14	30701.7	Clasp			3
15	6909711	Electric plug			1
16	39079.9	Screw			3
17	100345-05V	Nut			3

https://www.pdfmanual4trucks.com/

Trailer Plug

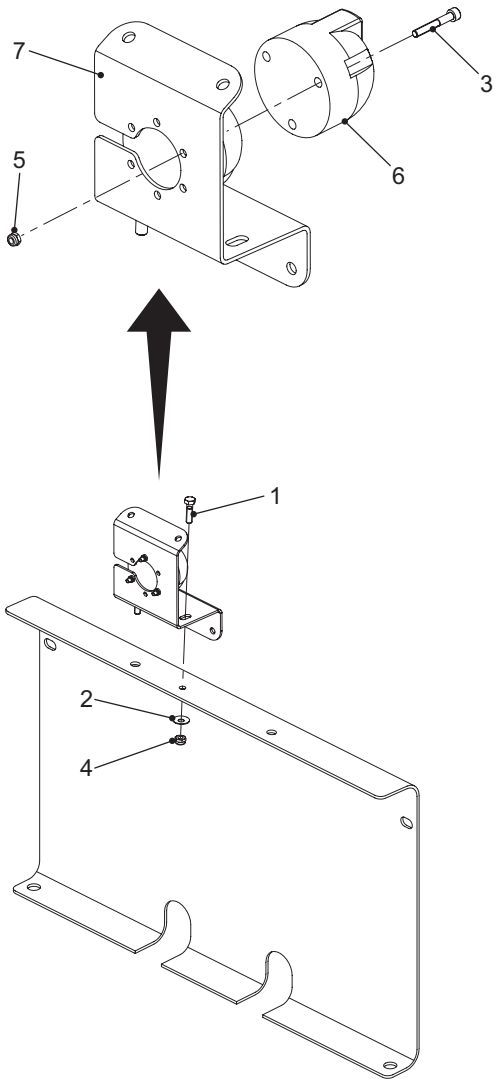

SPC007091


https://www.pdfmanual4trucks.com/

Trailer Plug

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	01598.2	Screw			2
2	01718.6	Washer			2
3	39079.9	Screw			3
4	51851.4	Nut			2
5	100345-05V	Nut			3
6	6909711	Electric plug			1
7	6909730	Support			1

https://www.pdfmanual4trucks.com/

Tow Hitch

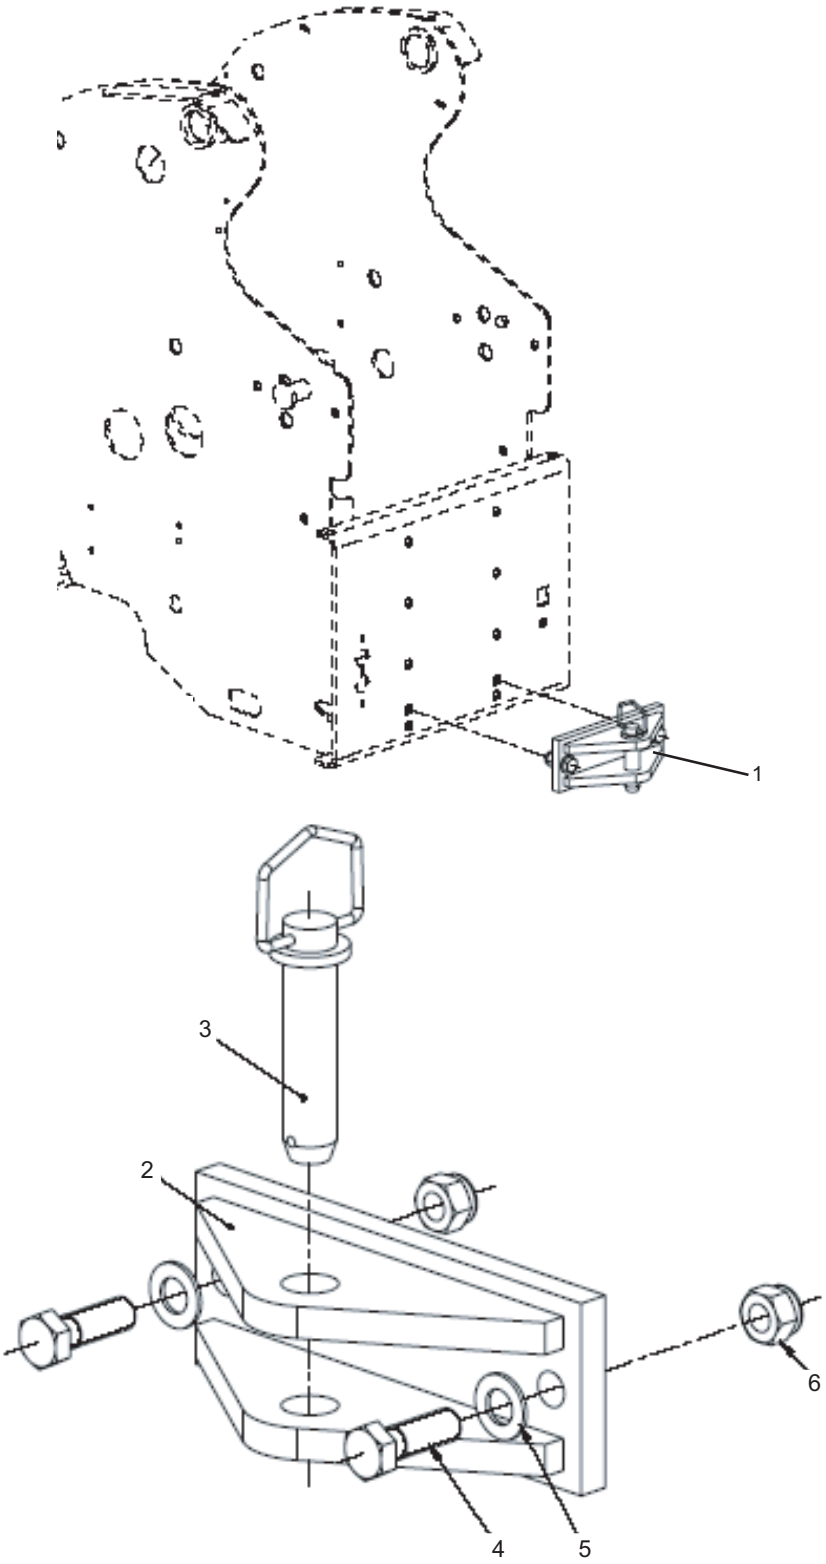

SPC007062


https://www.pdfmanual4trucks.com/

Tow Hitch

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6909872	Trailer fitting option	Pos. 2 to 6		1
2	80583.8	Trailer fitting			1
3	65226.3	Pin			1
4	39584.8	Screw			2
5	000350-08C	Washer			2
6	100345-20M	Nut			2

https://www.pdfmanual4trucks.com/

Rear View Mirror

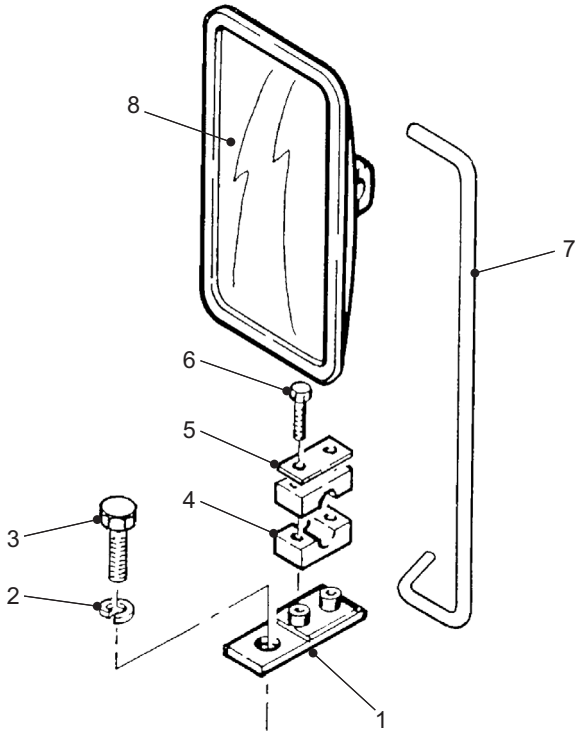

SPC007014


https://www.pdfmanual4trucks.com/

Rear View Mirror

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6908174	Support			1
2	30131.7	Washer			1
3	85360.6	Screw			1
4	61358.8	Collar			1
5	100228-57K	Cover			1
6	100338-23F	Screw			2
7	79300.0	Pipe			1
8	63860.1	Mirror			1

https://www.pdfmanual4trucks.com/

Backup Alarm

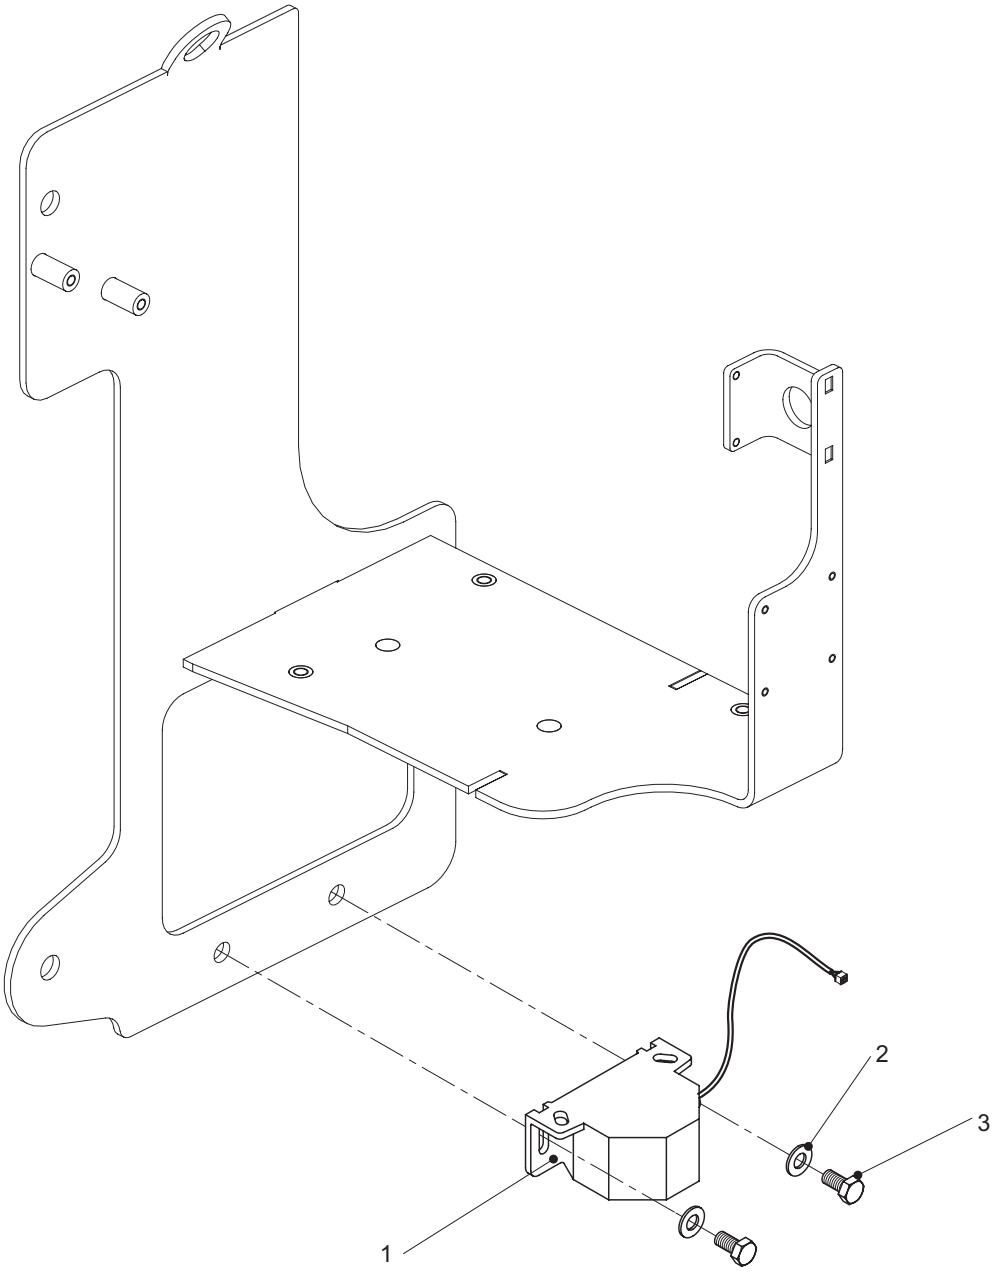

SPC007077


https://www.pdfmanual4trucks.com/

Backup Alarm

Item	Part Number	Denomination	Remarks	Serial Number	Qty
		Rear horn sonorous option	Pos. 1 to 3		1
1	97515.1	Rear horn			1
2	000350-02V	Washer			2
3	01595.8	Screw			2

https://www.pdfmanual4trucks.com/

Windshield Protection Grill

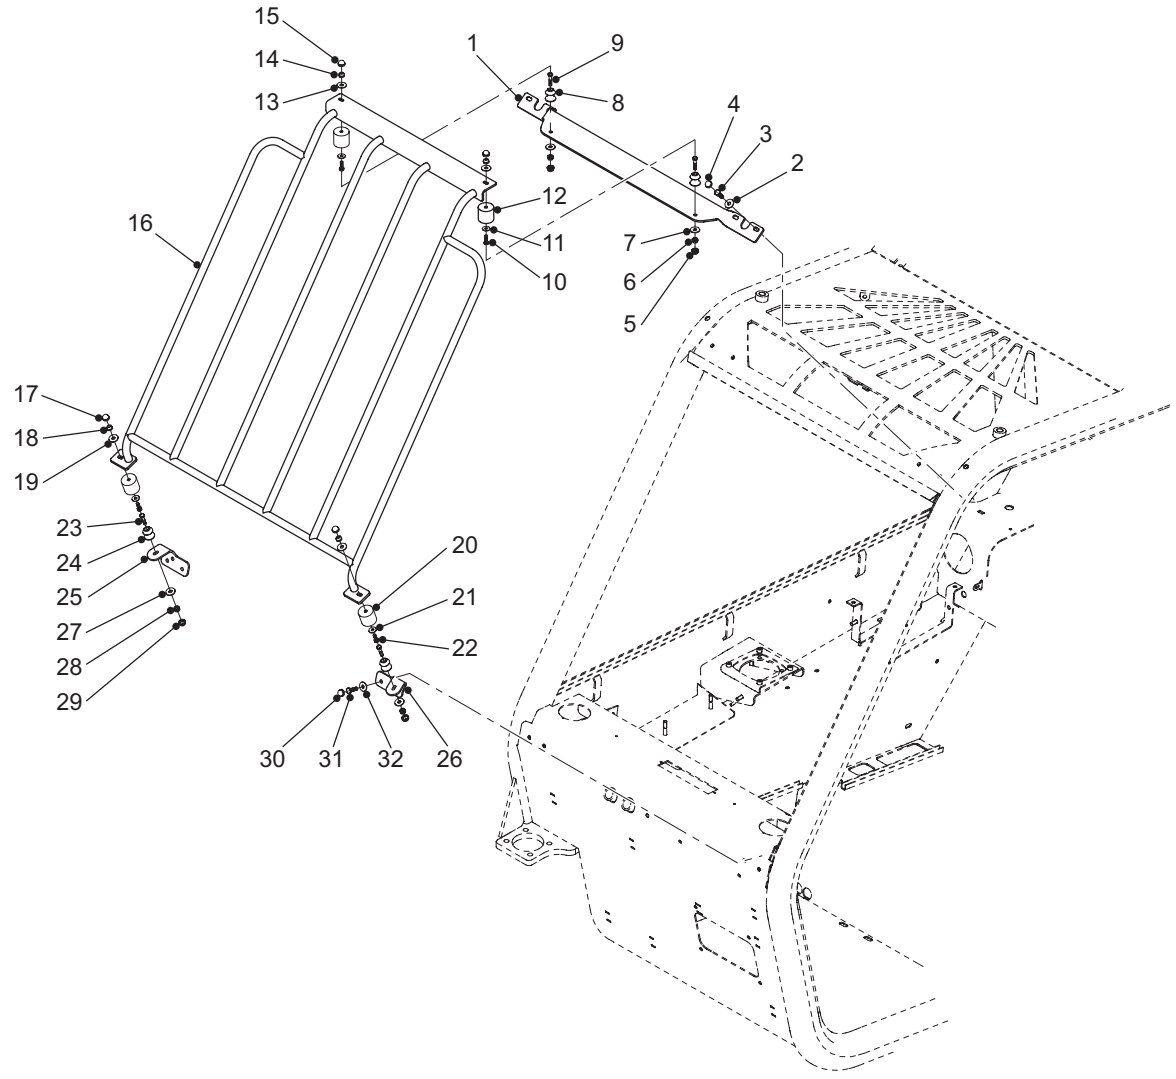

SPC007018

https://www.pdfmanual4trucks.com/


Windshield Protection Grill

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6914643	Upper support			1
2	29272.2	Washer			4
3	01591.7	Screw			4
4	63332.1	Cap			4
5	63332.1	Cap			2
6	100345-06W	Nut			2
7	29272.2	Washer			2
8	100520-18G	Female abutment	Pos. 8 + 12		2
9	01593.3	Screw			2
10	01591.7	Screw			2
11	29272.2	Washer			2
12	100520-19H	Male abutment	Pos. 8 + 12		2
13	29272.2	Washer			2
14	100345-06W	Nut			2
15	63332.1	Cap			2
16	6914657	Grill			1
17	63332.1	Cap			2
18	100345-06W	Nut			2
19	29272.2	Washer			2
20	100520-19H	Male abutment	Pos. 20 + 24		2
21	29272.2	Washer			2
22	01591.7	Screw			2
23	01593.3	Screw			2
24	100520-18G	Female abutment	Pos. 20 + 24		2
25	6914652	R.H. lower support			1
26	6914651	L.H. lower support			1
27	29272.2	Washer			2
28	100345-06W	Nut			2
29	63332.1	Cap			2
30	63332.1	Cap			4
31	01591.7	Screw			4

https://www.pdfmanual4trucks.com/

Windshield Protection Grill

Recurrence of previous drawing

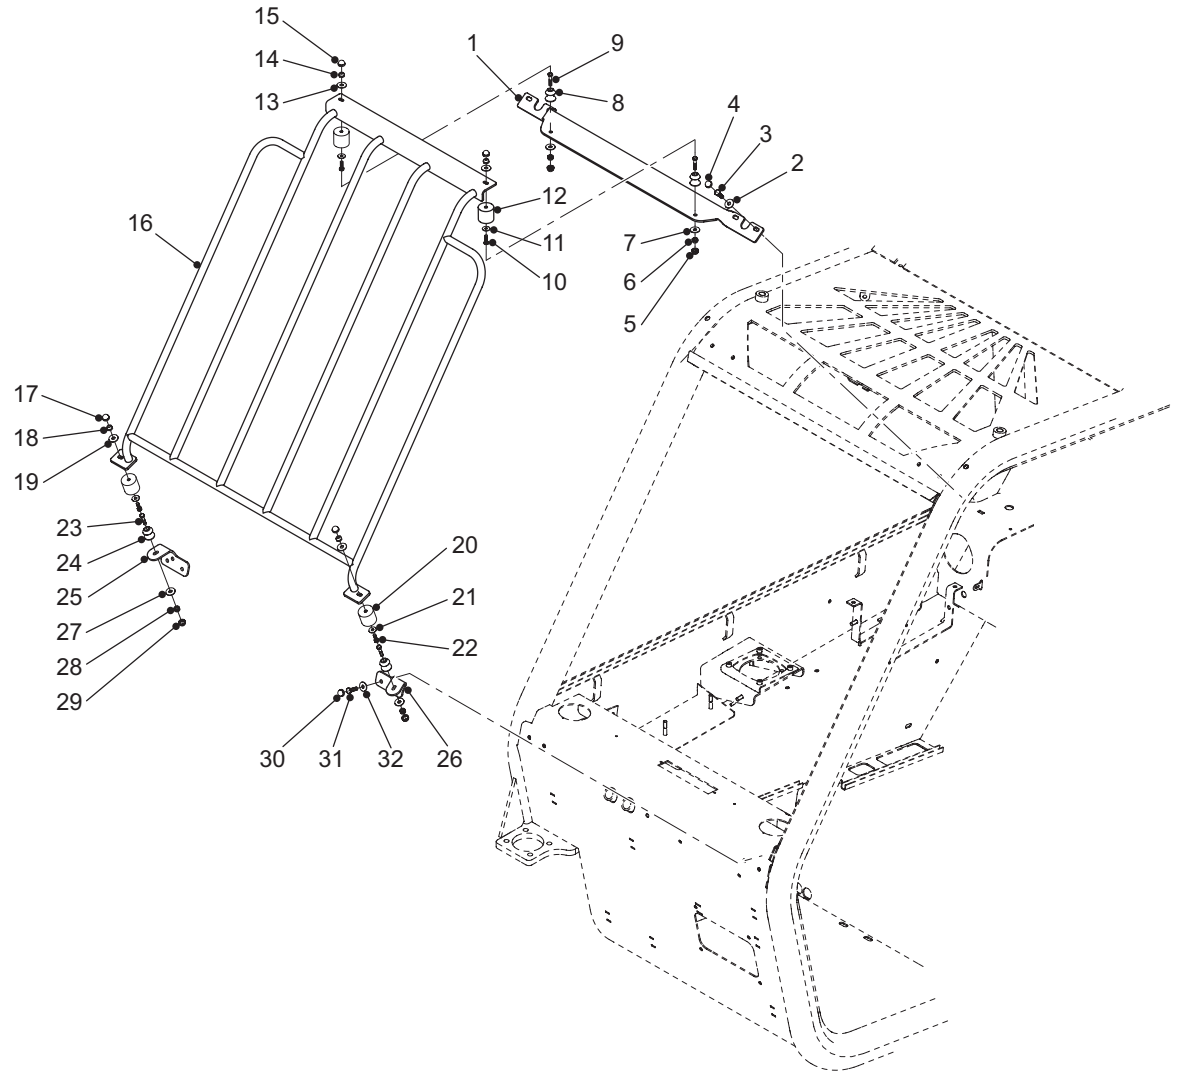

SPC007018


https://www.pdfmanual4trucks.com/

Windshield Protection Grill

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	29272.2	Washer			4

https://www.pdfmanual4trucks.com/

2nd Hydraulic Function On Boom

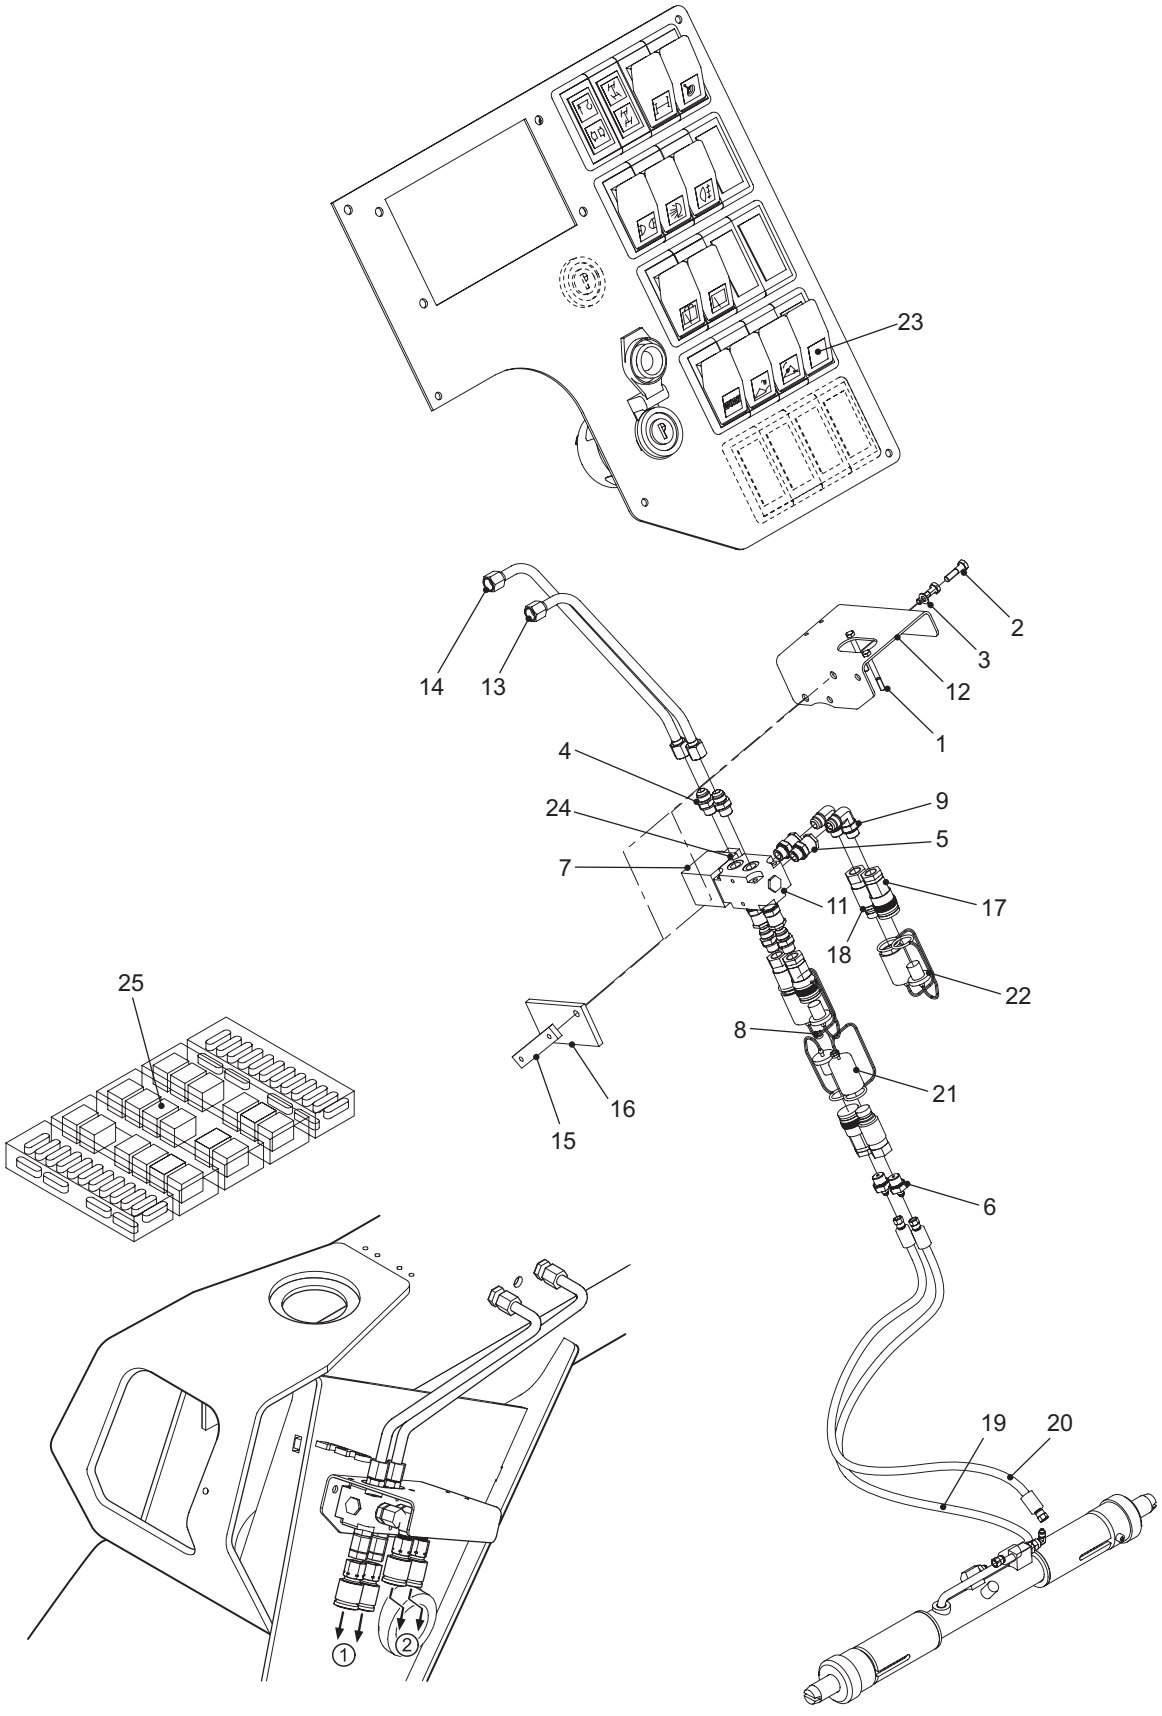


https://www.pdfmanual4trucks.com/

2nd Hydraulic Function On Boom

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	01511.5	Screw			2
2	01608.9	Screw			2
3	01698.0	Washer			2
4	014375-30H	Adapter			4
5	022375-06W	Adapter			4
6	022375-27U	Adapter			2
7	41282.5	Solenoid			1
8	51851.4	Nut			2
9	65285.9	Elbow			2
10	74470.6	Insulation			0.05m
11	92131.2	Selector Valve			1
12	92132.0	Housing			1
13	94206.0	Pipe			1
14	94207.8	Pipe			1
15	95791.0	Plate			1
16	95792.8	Plate			1
17	95993.2	Female Coupling			3
18	95994.0	Male coupling			3
19	96400.7	Hose			1
20	96400.7	Hose			1
21	96513.7	Cap			3
22	96514.5	Cap			3
23	96604.4	Auxiliary Hydraulics Switch			1
24	101472-20M	Diode			1
25	6910955	Micro relay			1

https://www.pdfmanual4trucks.com/

Rear Hydraulic Function

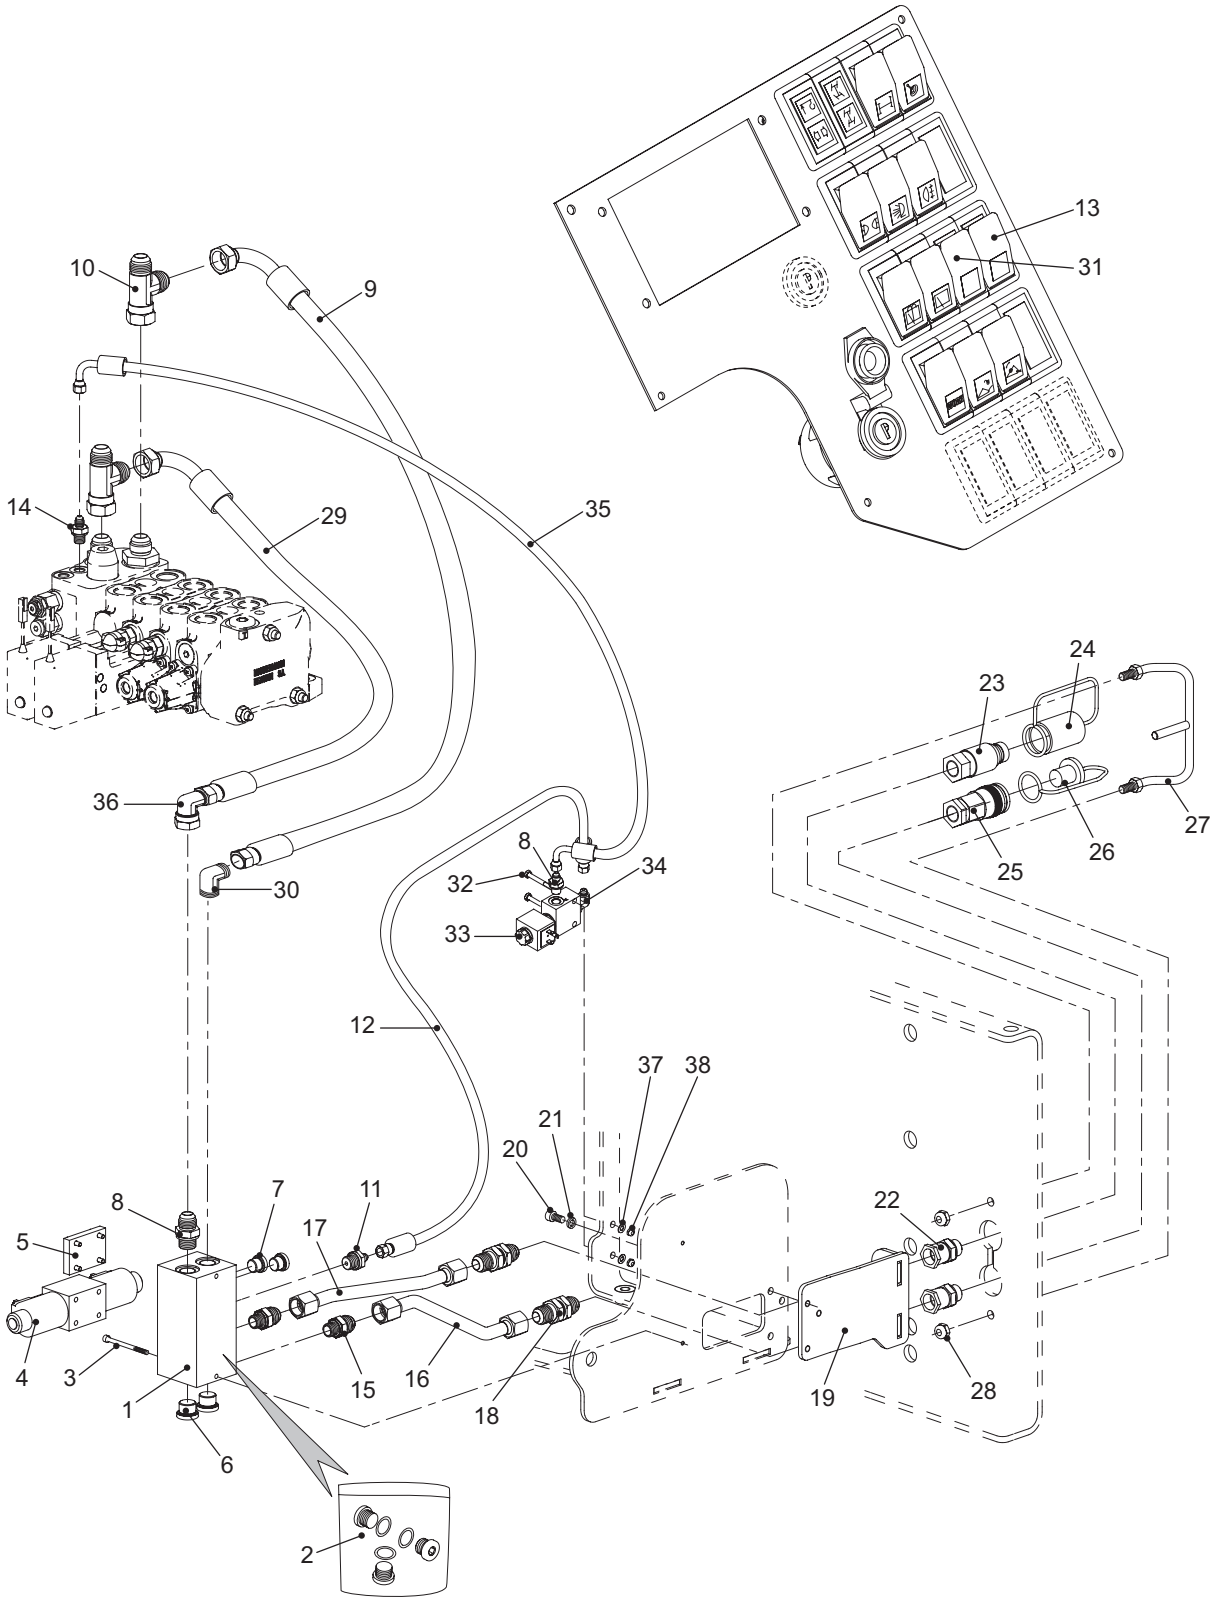

https://www.pdfmanual4trucks.com/


Rear Hydraulic Function

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911079	Hydraulic block			1
2	6912535	Set of plugs + seals			1
3	68566.9	Screw			2
4	98360.1	Union			1
5	98353.6	Plate			1
6	78743.2	Drain plug			2
7	56029.2	Plug			2
8	014375-30H	Adapter			1
9	6913675	Hose			2
10	008372-34M	T- union			2
11	65614.0	Union			1
12	65285.9	Elbow			1
13	65784.1	Blank Plug			1
14	022375-28V	Adapter			2
15	100375-39T	Union			2
16	6910512	Tube			1
17	6910513	Tube			1
18	100375-52H	Adapter			2
19	6910523	Support			1
20	29649.1	Screw			3
21	89519.3	Washer			3
22	022375-06W	Adapter			2
23	95994.0	Male coupling			1
24	96513.7	Cap			1
25	95993.2	Female Coupling			1
26	96514.5	Cap			1
27	6910517	Protection			1
28	100345-09A	Nut			2
29	6913675	Hose			1
30	010370-90W	Elbow			1
31	96599.6	Rear Option Switch			1

https://www.pdfmanual4trucks.com/

Rear Hydraulic Function

Recurrence of previous drawing

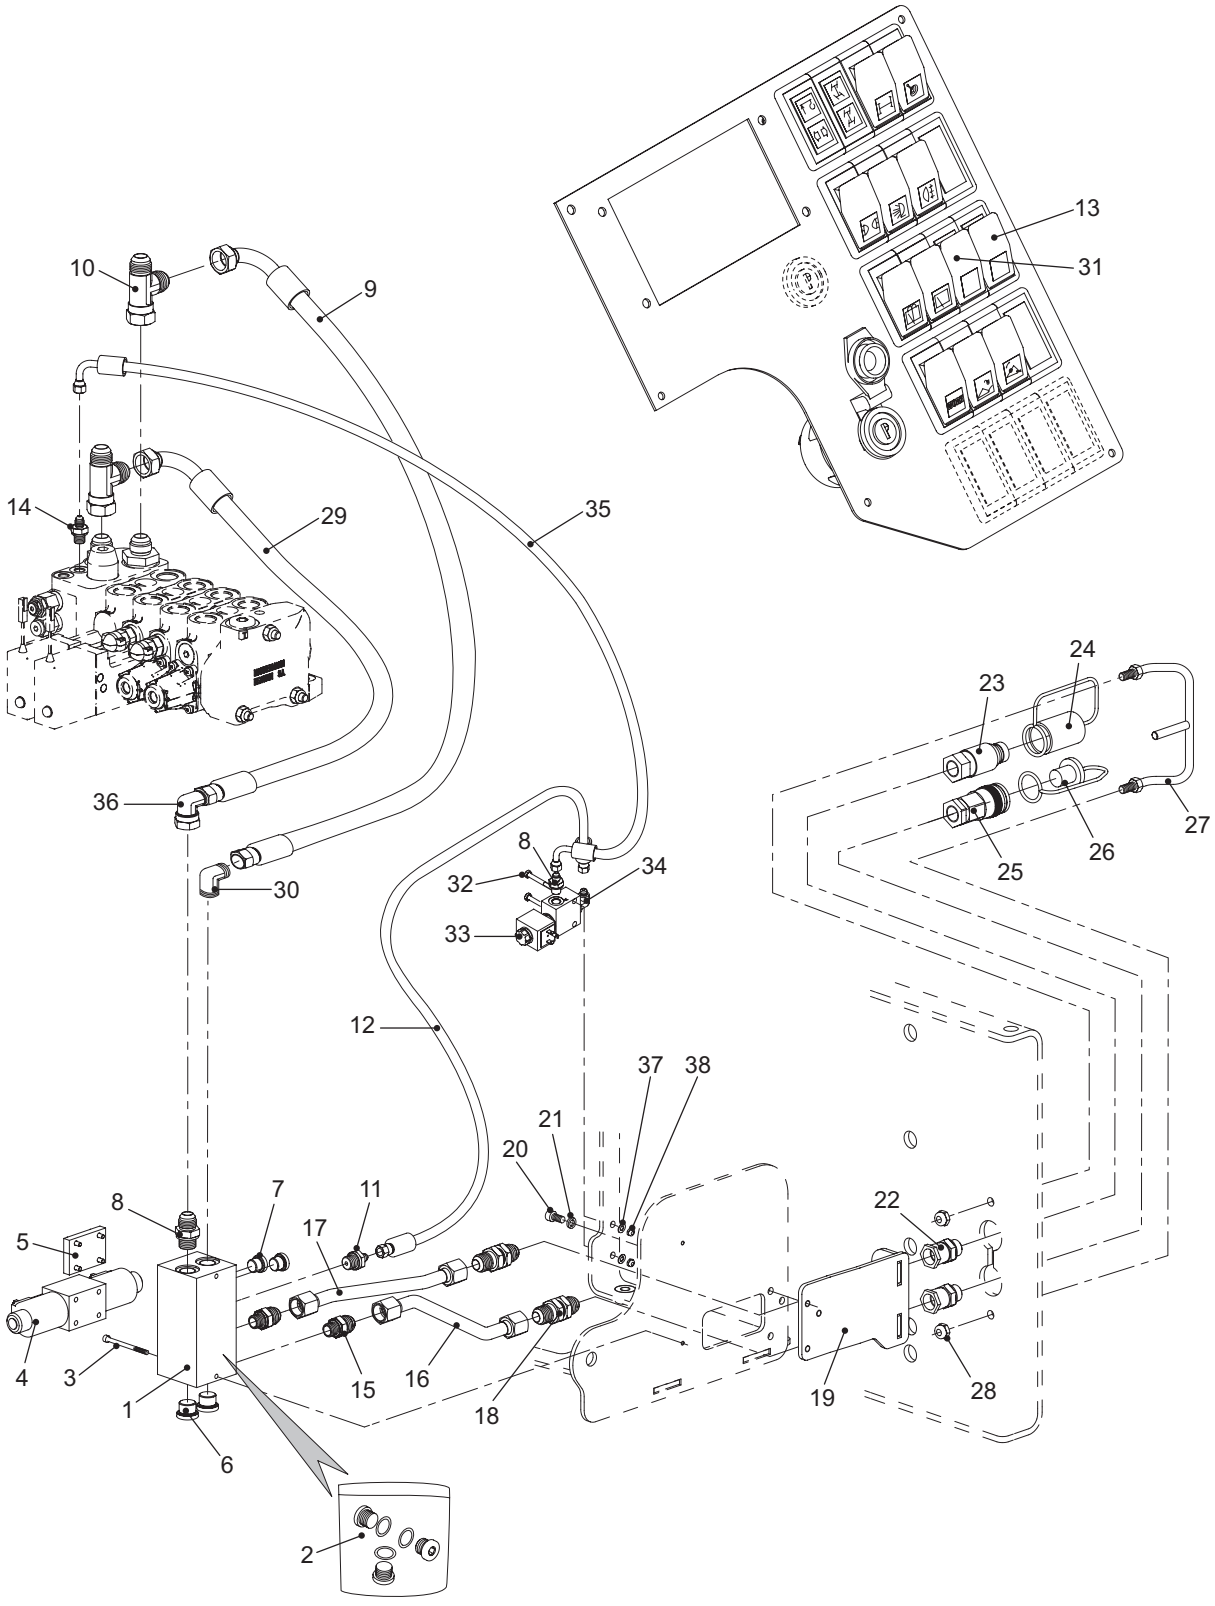

SPC007087


https://www.pdfmanual4trucks.com/

Rear Hydraulic Function

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	48829.6	Screw			1
33	6911845	Valve			1
34	015370-11P	Elbow			1
35	6912226	Hose			1
36	010370-90W	Elbow			1
37	000350-01U	Washer			2
38	100345-06W	Nut			2

https://www.pdfmanual4trucks.com/

Rear Hydraulic Hook

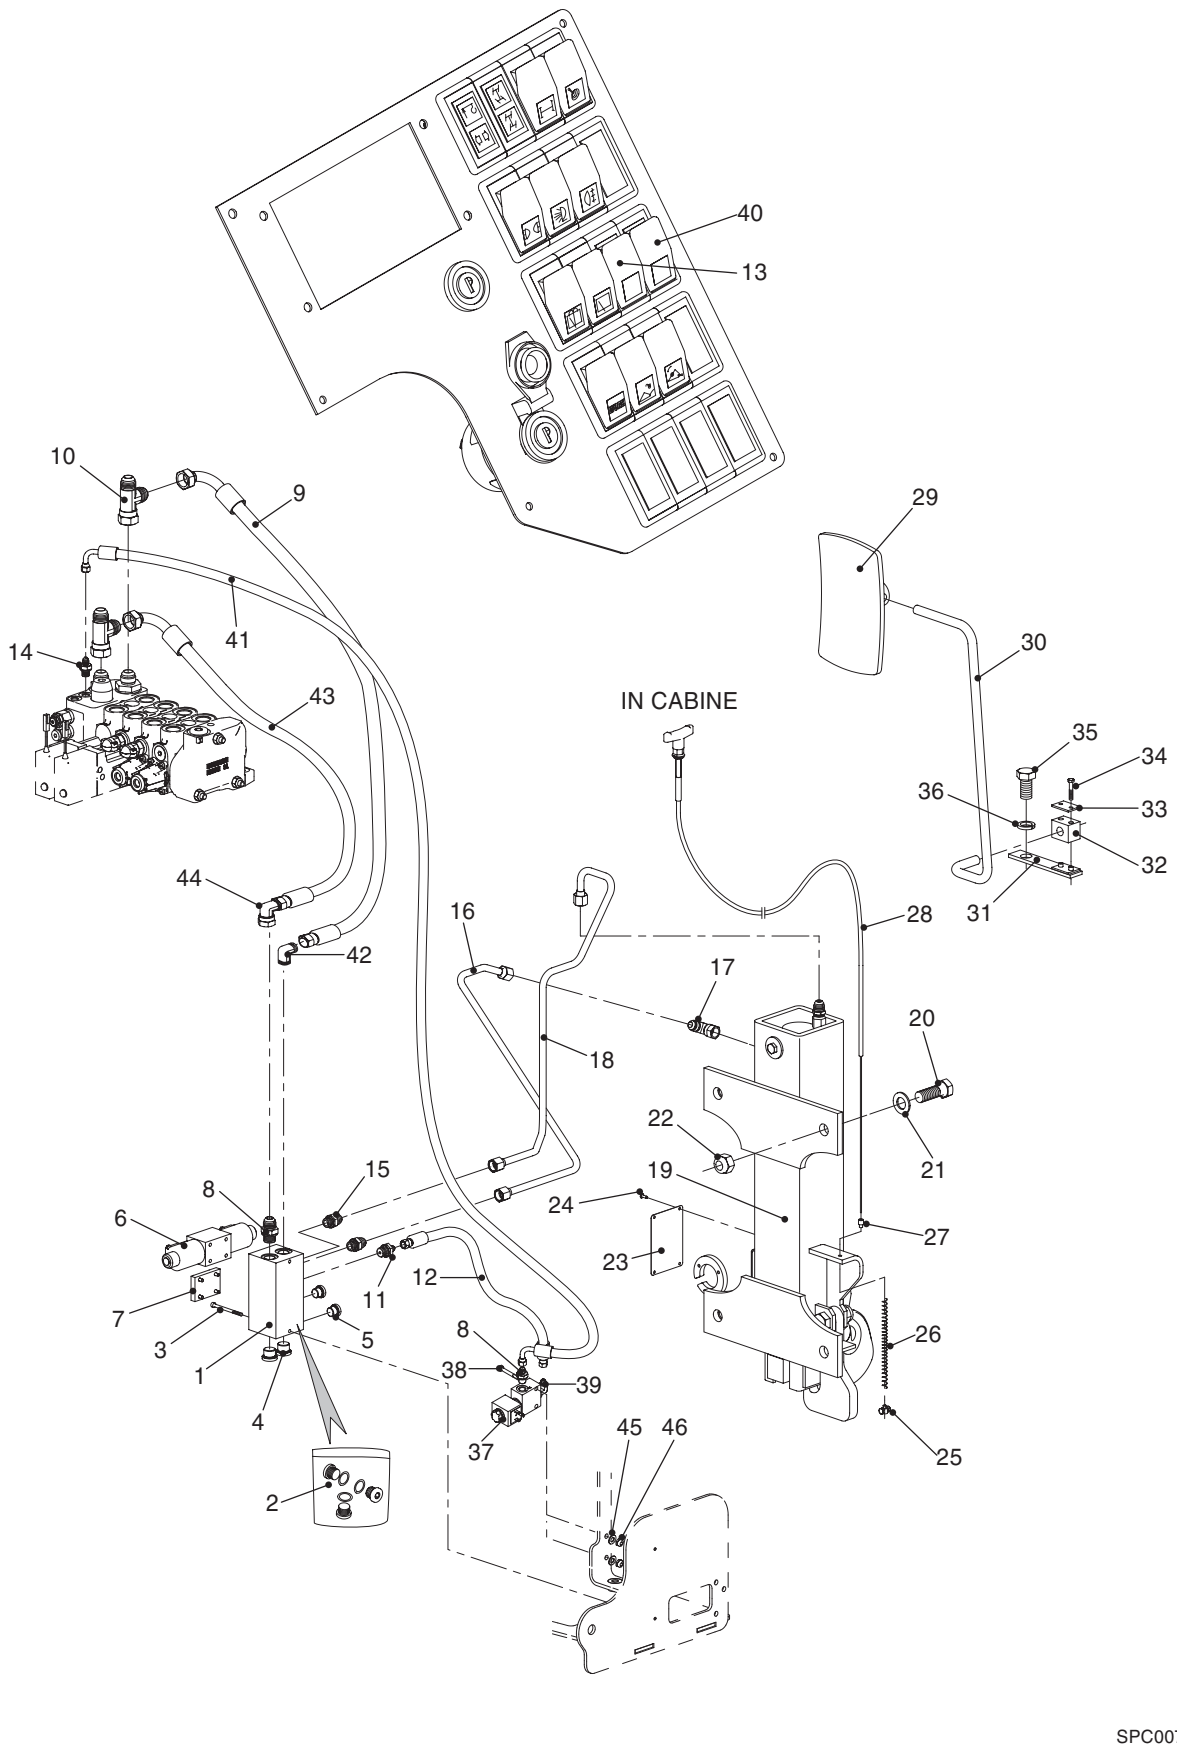

https://www.pdfmanual4trucks.com/


Rear Hydraulic Hook

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6911079	Hydraulic block			1
2	6912535	Set of plugs + seals			1
3	68566.9	Screw			2
4	78743.2	Drain plug			2
5	56029.2	Plug			3
6	98360.1	Union			1
7	98353.6	Plate			1
8	014375-30H	Adapter			1
9	6913675	Hose			2
10	008372-34M	T- union			2
11	65614.0	Union			1
12	6916079	Hose			1
13	65784.1	Blank Plug			1
14	022375-28V	Adapter			2
15	100375-38S	Adapter			2
16	6910535	Tube			1
17	008372-01B	Elbow			1
18	6910536	Tube			1
19	82425.0	Hydraulic hook			1
20	39584.8	Screw			4
21	000350-08C	Washer			4
22	100345-20M	Nut			4
23	98167.0	Plate			1
24	43824.2	Rivet			4
25	000368-80M	Cable end			1
26	79285.3	Spring			1
27	009368-06S	Cable stop			1
28	84468.8	Cable			1
29	63860.1	Mirror			1
30	79300.0	Pipe			1
31	84648.5	Plate			1

https://www.pdfmanual4trucks.com/

Rear Hydraulic Hook

Recurrence of previous drawing

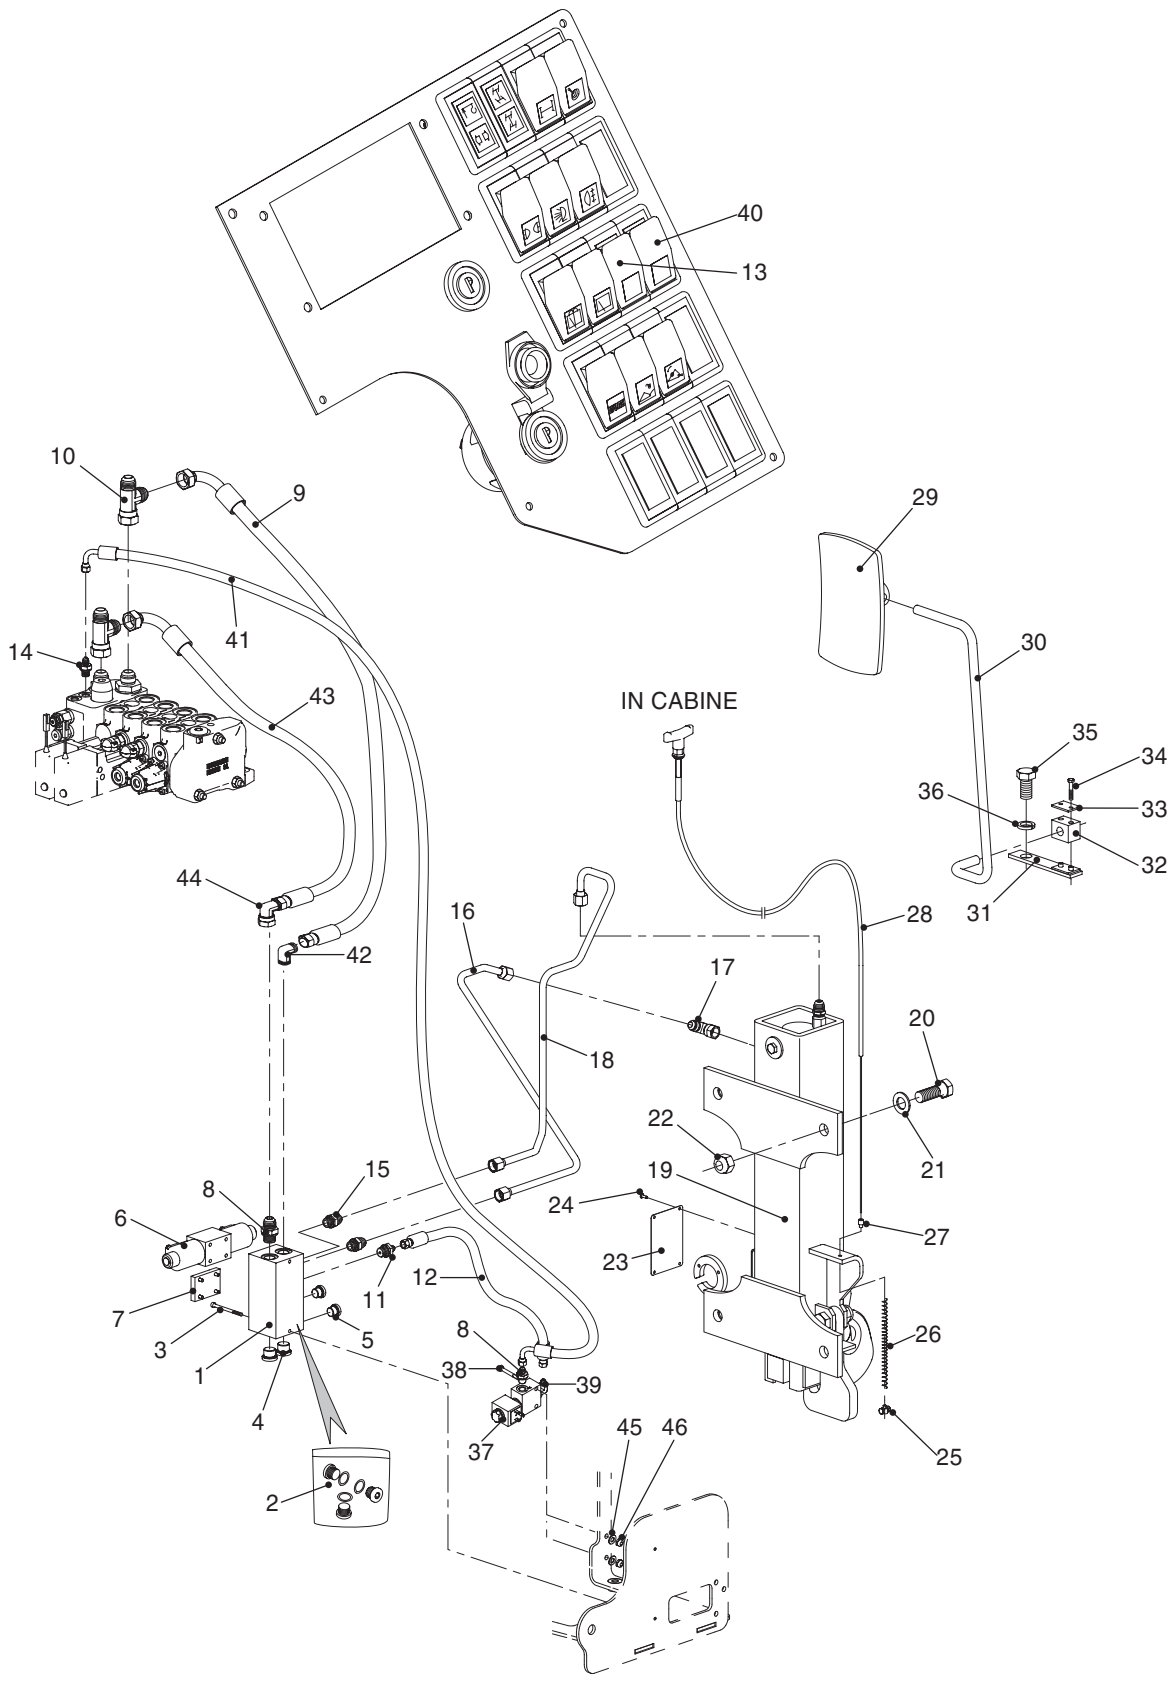

SPC007089


https://www.pdfmanual4trucks.com/

Rear Hydraulic Hook

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	61358.8	Collar			1
33	100228-57K	Cover			1
34	100338-23F	Screw			2
35	01620.4	Screw			1
36	15323.9	Washer			1
37	6911845	Valve			1
38	48829.6	Screw			1
39	015370-11P	Elbow			1
40	96598.8	Rear Hook Switch			1
41	6912226	Hose			1
42	65285.9	Elbow			1
43	6913675	Hose			1
44	010370-90W	Elbow			1
45	000350-01U	Washer			2
46	100345-06W	Nut			2

https://www.pdfmanual4trucks.com/

Hook

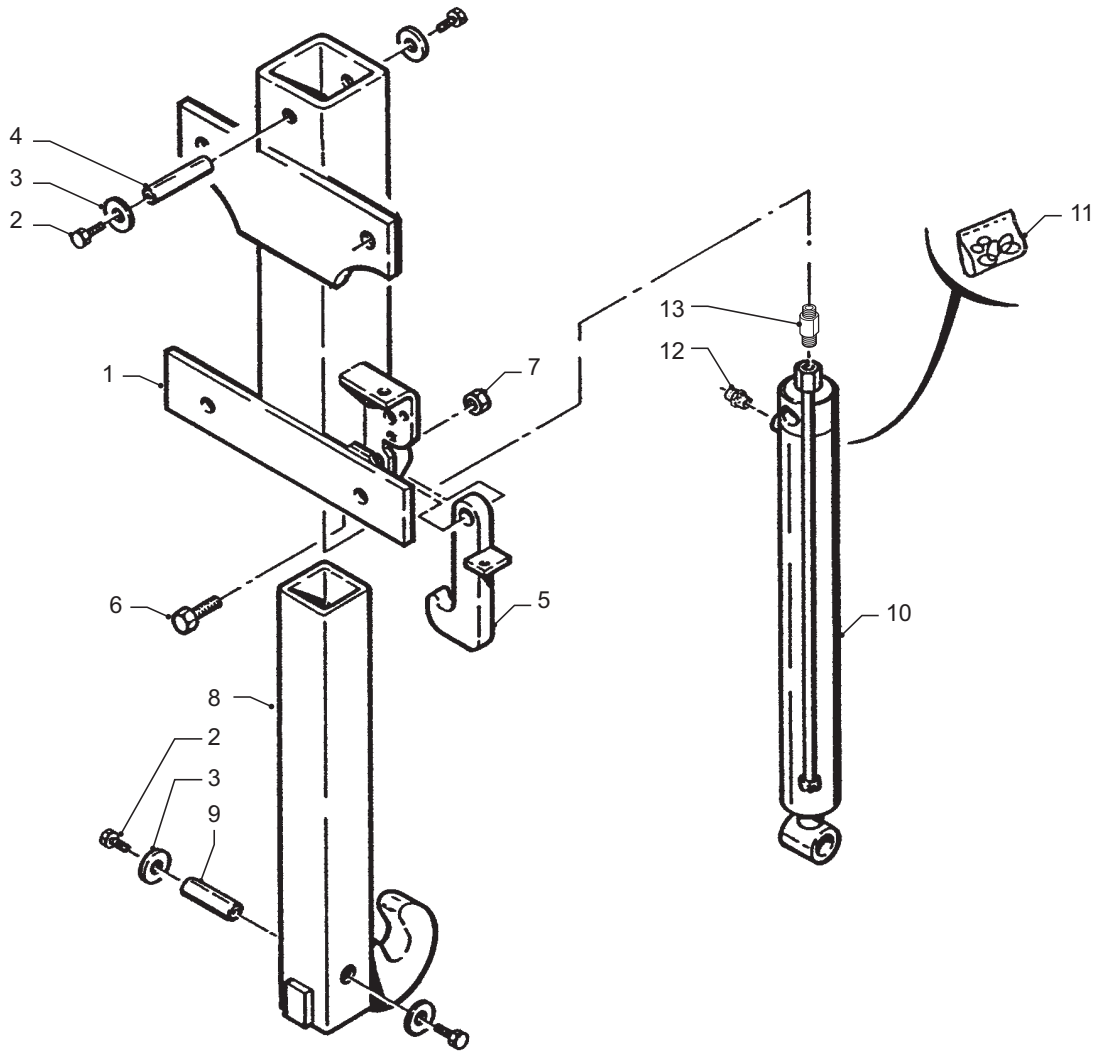

SPC007099


https://www.pdfmanual4trucks.com/

Hook

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	82426.8	Support			1
2	01603.0	Screw			4
3	79287.9	Washer			4
4	79260.6	Pin			1
5	79255.6	Hook			1
6	39584.8	Screw			1
7	100345-20M	Nut			1
8	78579.0	Slide			1
9	79259.8	Pin			1
10	78575.8	Cylinder			1
11	81578.7	Seal kit			1
12	65723.9	Union			1
13	100375-36Q	Union			1

https://www.pdfmanual4trucks.com/

Trailer Brake

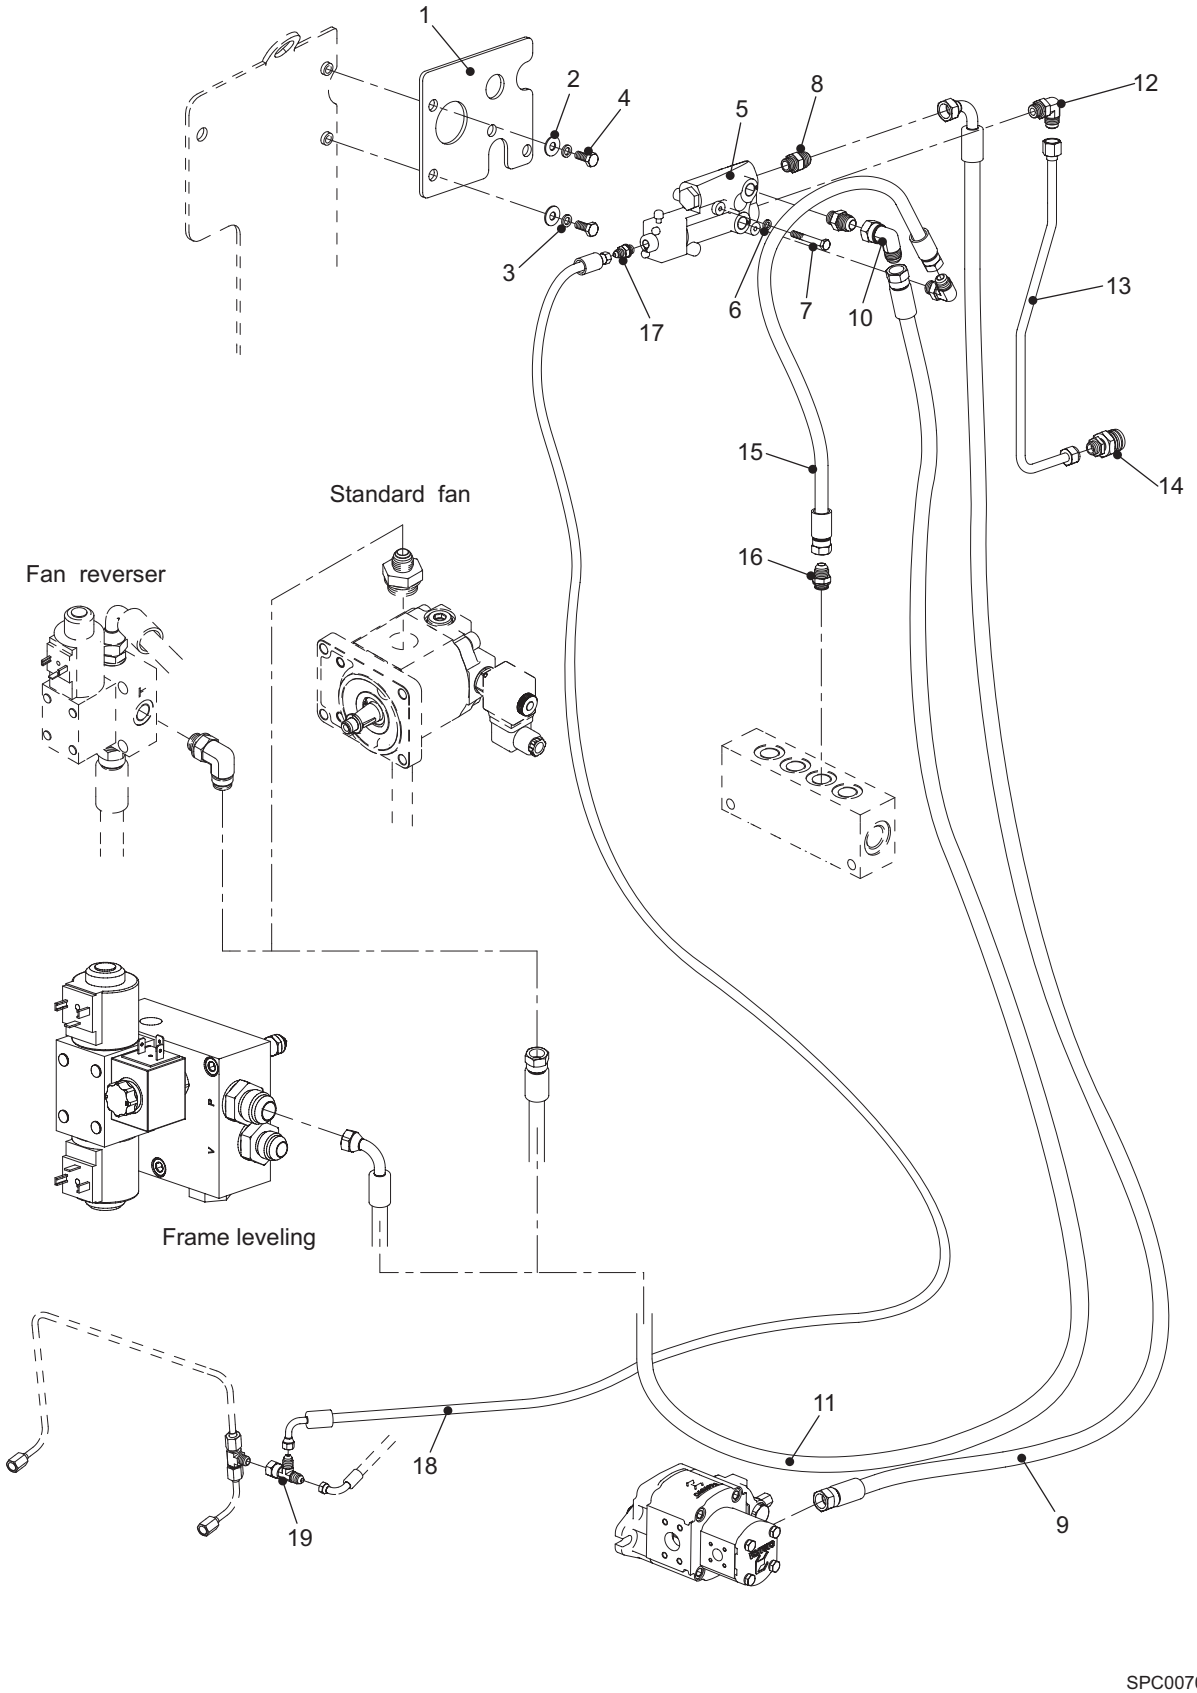


https://www.pdfmanual4trucks.com/

Trailer Brake

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	6913021	Support			1
2	000350-21R	Washer			2
3	89516.9	Washer			2
4	01605.5	Screw			2
5	96734.9	Valve			1
6	89519.3	Washer			2
7	10947.0	Screw			2
8	96568.1	Union			2
9	6910691	Hose			1
10	010370-90W	Elbow			1
11	6911056	Hose	T3571L		1
	6913684	Hose	T3571		1
12	100370-06P	Elbow			2
13	6910778	Hydraulic pipe			1
14	79170.7	Coupling			1
15	6913650	Hose			1
16	100375-38S	Adapter			1
17	96505.3	Union			1
18	6910779	Hose			1
19	69485.1	T- union			1

https://www.pdfmanual4trucks.com/

Bobcat Decals

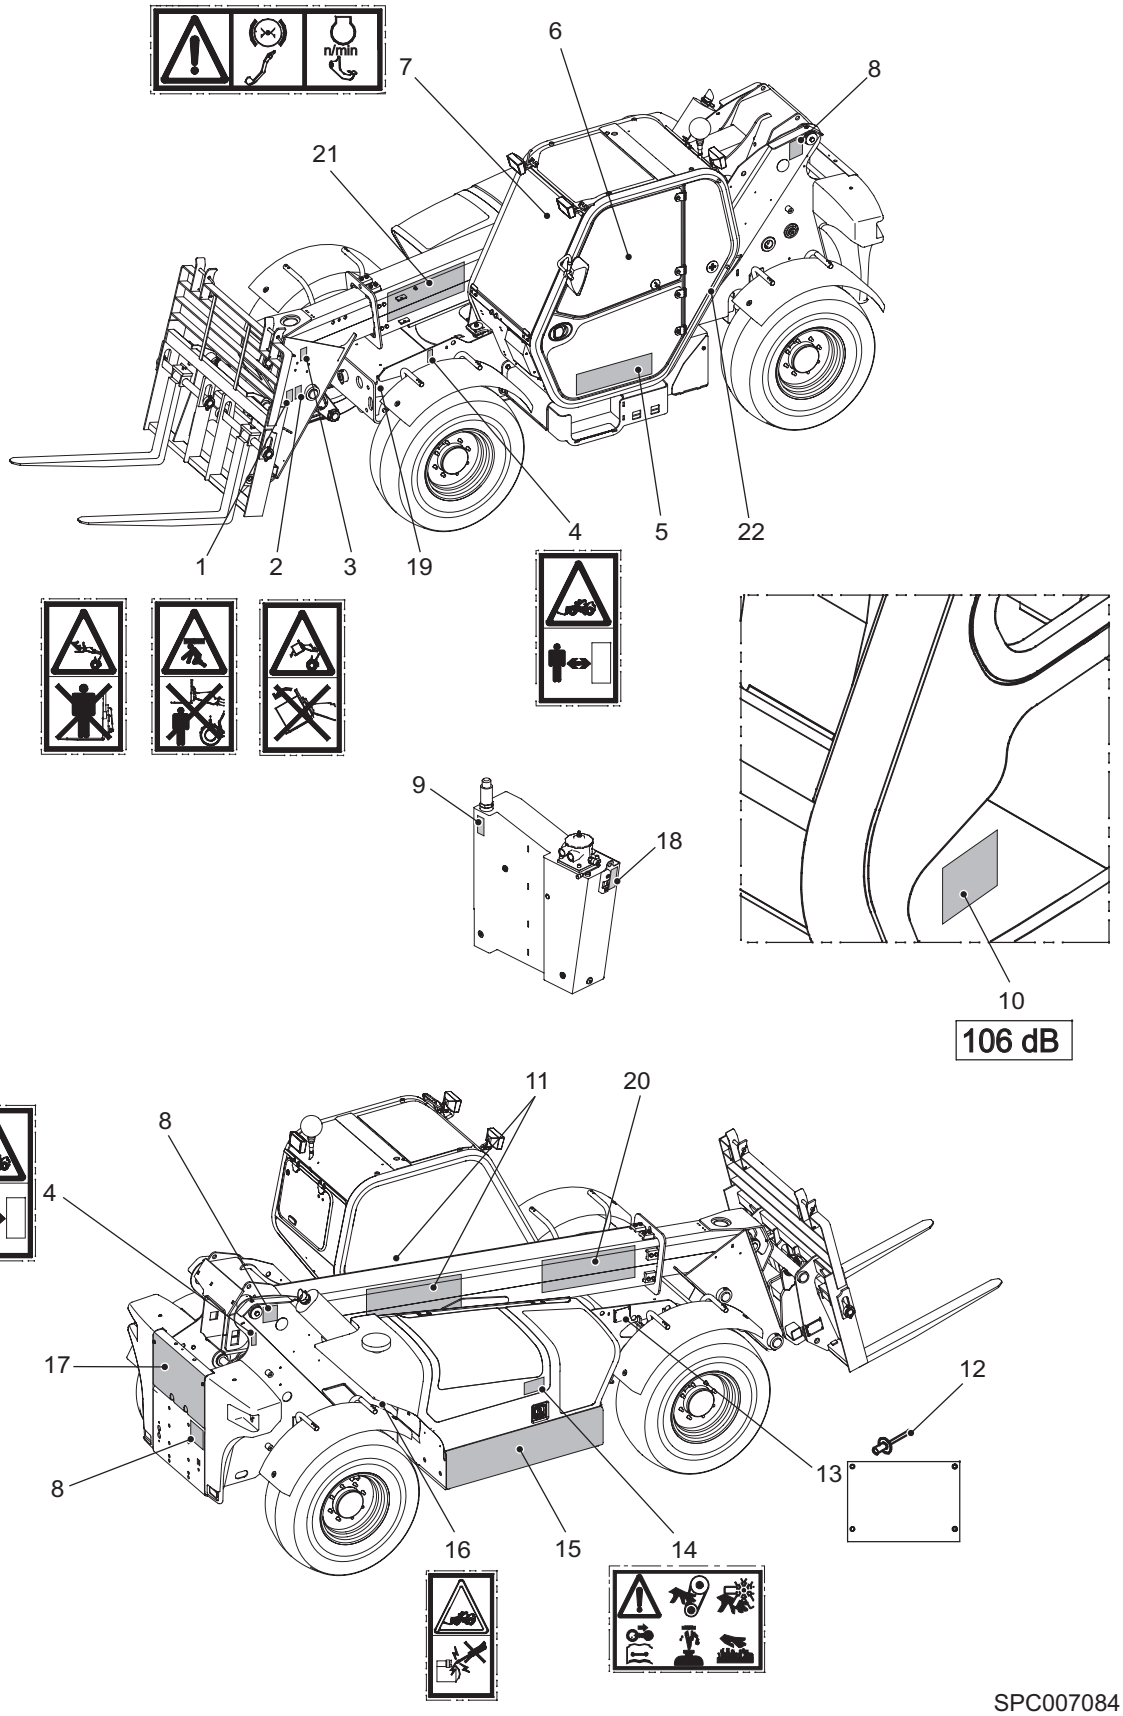


https://www.pdfmanual4trucks.com/

Bobcat Decals

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	79523.7	Decal - Safety - Do not ride forks			2
2	79524.5	Decal - Safety - Don't stand under forks			2
3	79645.8	Decal - Safety - Don't incline load			2
4	79525.2	Decal - Safety - Safety distance			4
5	6809625	Decal - Door logo			1
6	76324.3	Decal - Sound signal			1
7	92404.3	Decal - Pedal functions			1
8	6911354	Decal			2
9	6565990	Decal			1
10	96749.7	Decal - "106 dB"			1
11	6913244	Decal - Arm T3571	T3571		2
	6913245	Decal - Arm T3571L	T3571L		2
12	43824.2	Rivet			4
13	95632.6	Serial No. plate			1
14	92762.4	Decal - Safety - Engine			1
15	6809627	Decal - Bottom side engine cover			1
16	79526.0	Decal - Safety - Starting			1
17	6908050	Decal - IR rear			1
18	6910594	Decal - Oil level			1
19	6909446	Decal - Slinging points			8
20	96928.7	Decal - Arm "Bobcat" - RH			1
21	96932.9	Decal - Arm "Bobcat" - LH			1
22	6700388	Decal «diesel»			1

https://www.pdfmanual4trucks.com/

Germany Version

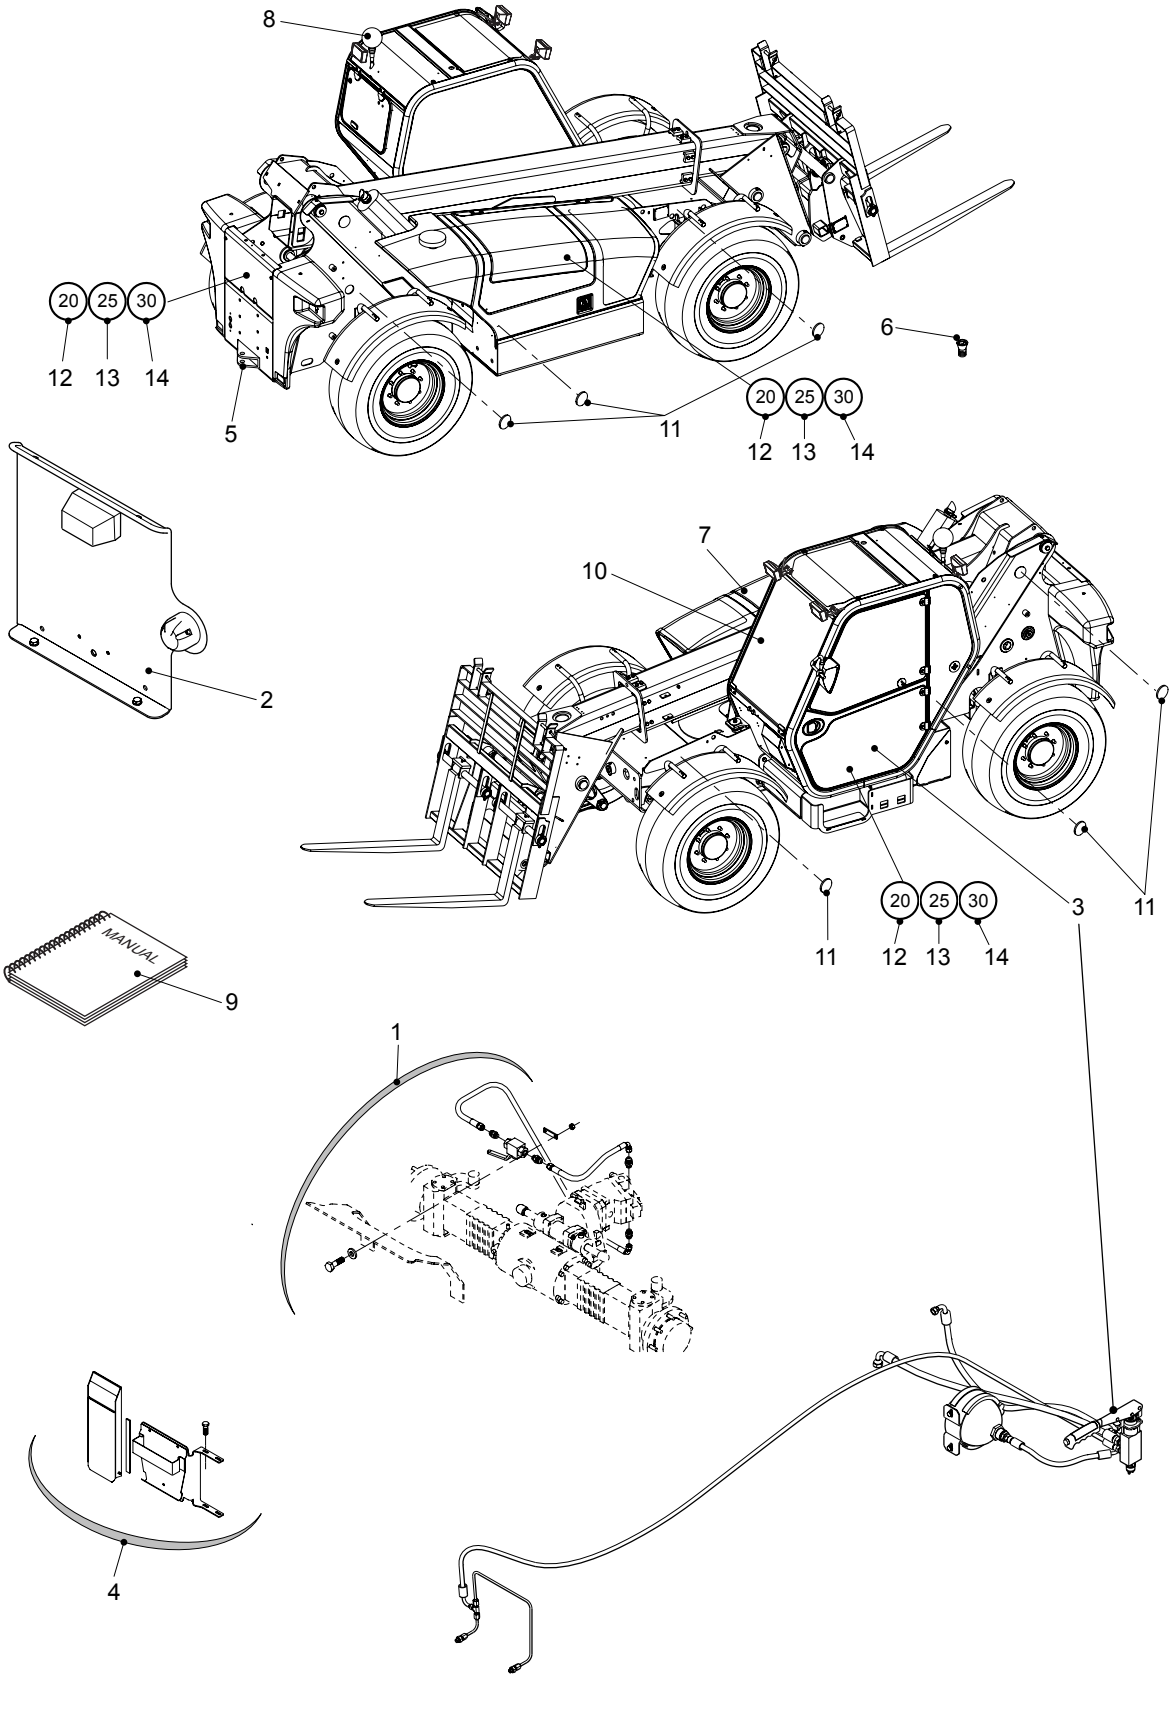


https://www.pdfmanual4trucks.com/

Germany Version

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1		Transmission by-pass (Germany)	For details, see page 277		1
2		Matriculation plate option	For 25-30 km/h version ; For details, see page 283		1
3		Parking brake hydraulic installation (accumulator)	For details, see page 193		1
4		Wheel wedge option	For details, see page 279		1
5		Tow hitch	For details, see page 287		1
6		Switch option on valve braking	For details, see page 281		1
8	78817.4	Rotating Beacon Light			1
9	4852110-DE	Operator manual in German language			1
10	100475-97B	Decal - Boom road position indicator			2
11	100417-16J	Reflector			6
12	82019.1	Adhesive 20 km/h	Was 90990.3		3
13	82020.9	Adhesive 25 km/h	Was 84915.8		3
14	82021.7	Adhesive 30 km/h	For details, see page 193		3

https://www.pdfmanual4trucks.com/

Italy Version

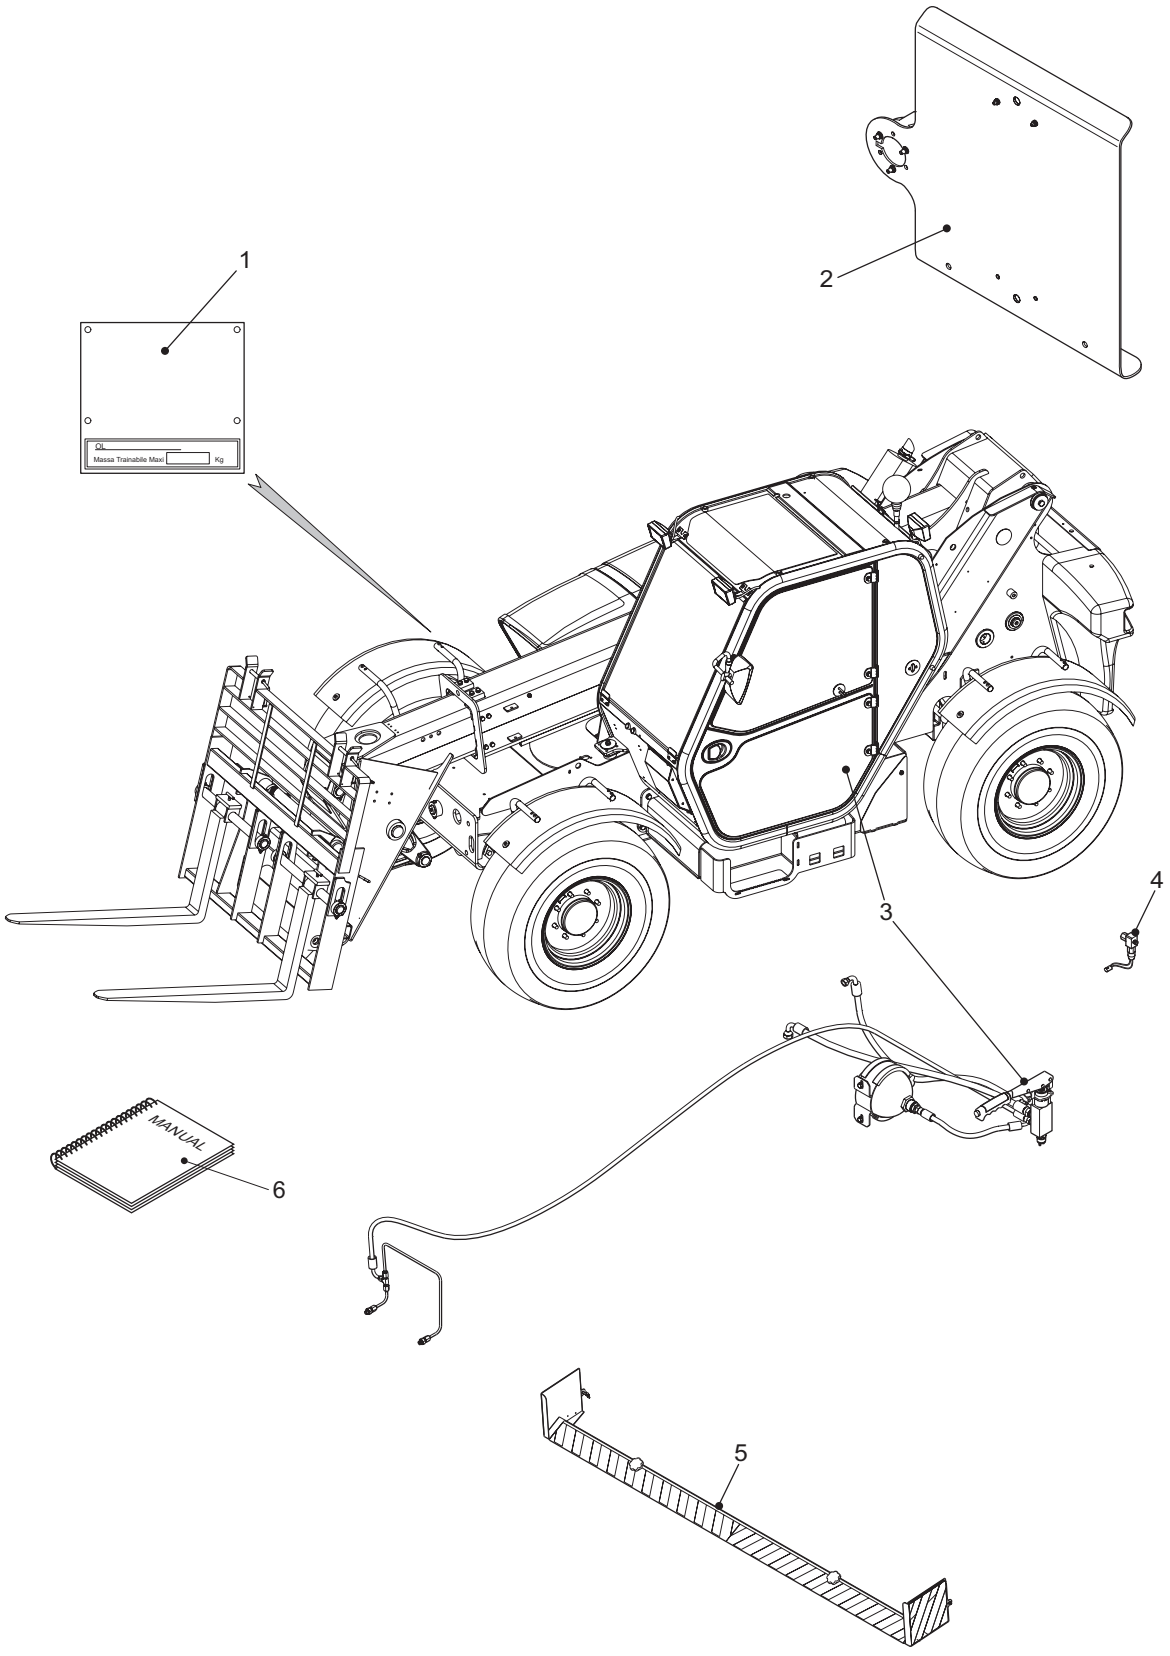

SPC007100


https://www.pdfmanual4trucks.com/

Italy Version

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	96392.6	Plate			1
2		Matriculation plate option	For details, see page 283		1
3		Parking brake hydraulic installation (accumulator)	For details, see page 117		1
4		Switch option on valve braking	For details, see page 281		1
5	92795.4	Protection for toothed buckets			1
	92790.5	Protection for toothless buckets			1
6	4852120-IT	Manual			1

https://www.pdfmanual4trucks.com/

Italy Version with hook

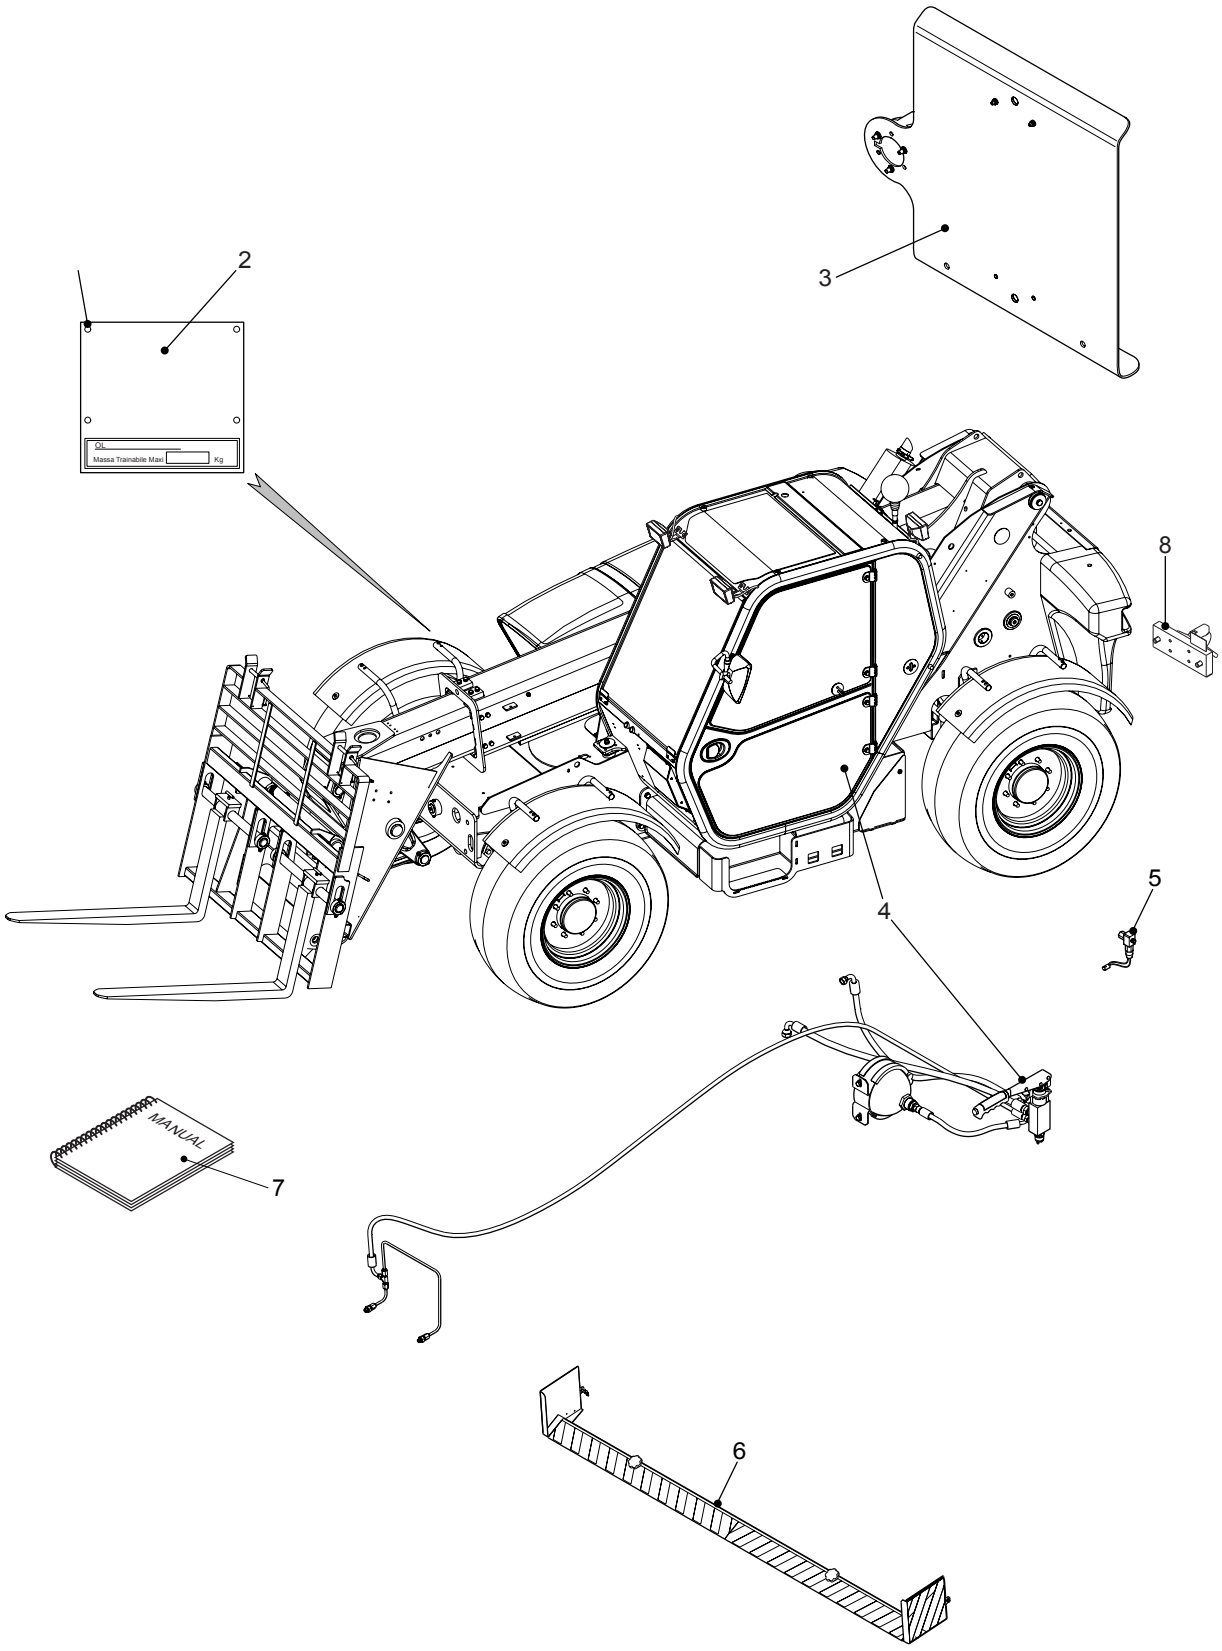

SPC007083


https://www.pdfmanual4trucks.com/

Italy Version with hook

Item	Part Number	Denomination	Remarks	Serial Number	Qty
2	96392.6	Plate	T3571	3628 11001 & above	1
	96392.6	Plate	T3571L	3629 11001 & above	1
3		Matriculation plate option	For details, see page 283		1
4		Parking brake hydraulic installation (accumulator)	For details, see page 117		1
5		Switch option on valve braking	For details, see page 281		1
6	92795.4	Protection for toothed buckets			1
	92790.5	Protection for toothless buckets			1
7	4852120-IT	Manual			1
8	6916262	Hook special IT			1

https://www.pdfmanual4trucks.com/

Fuel Pre-Filter Kit

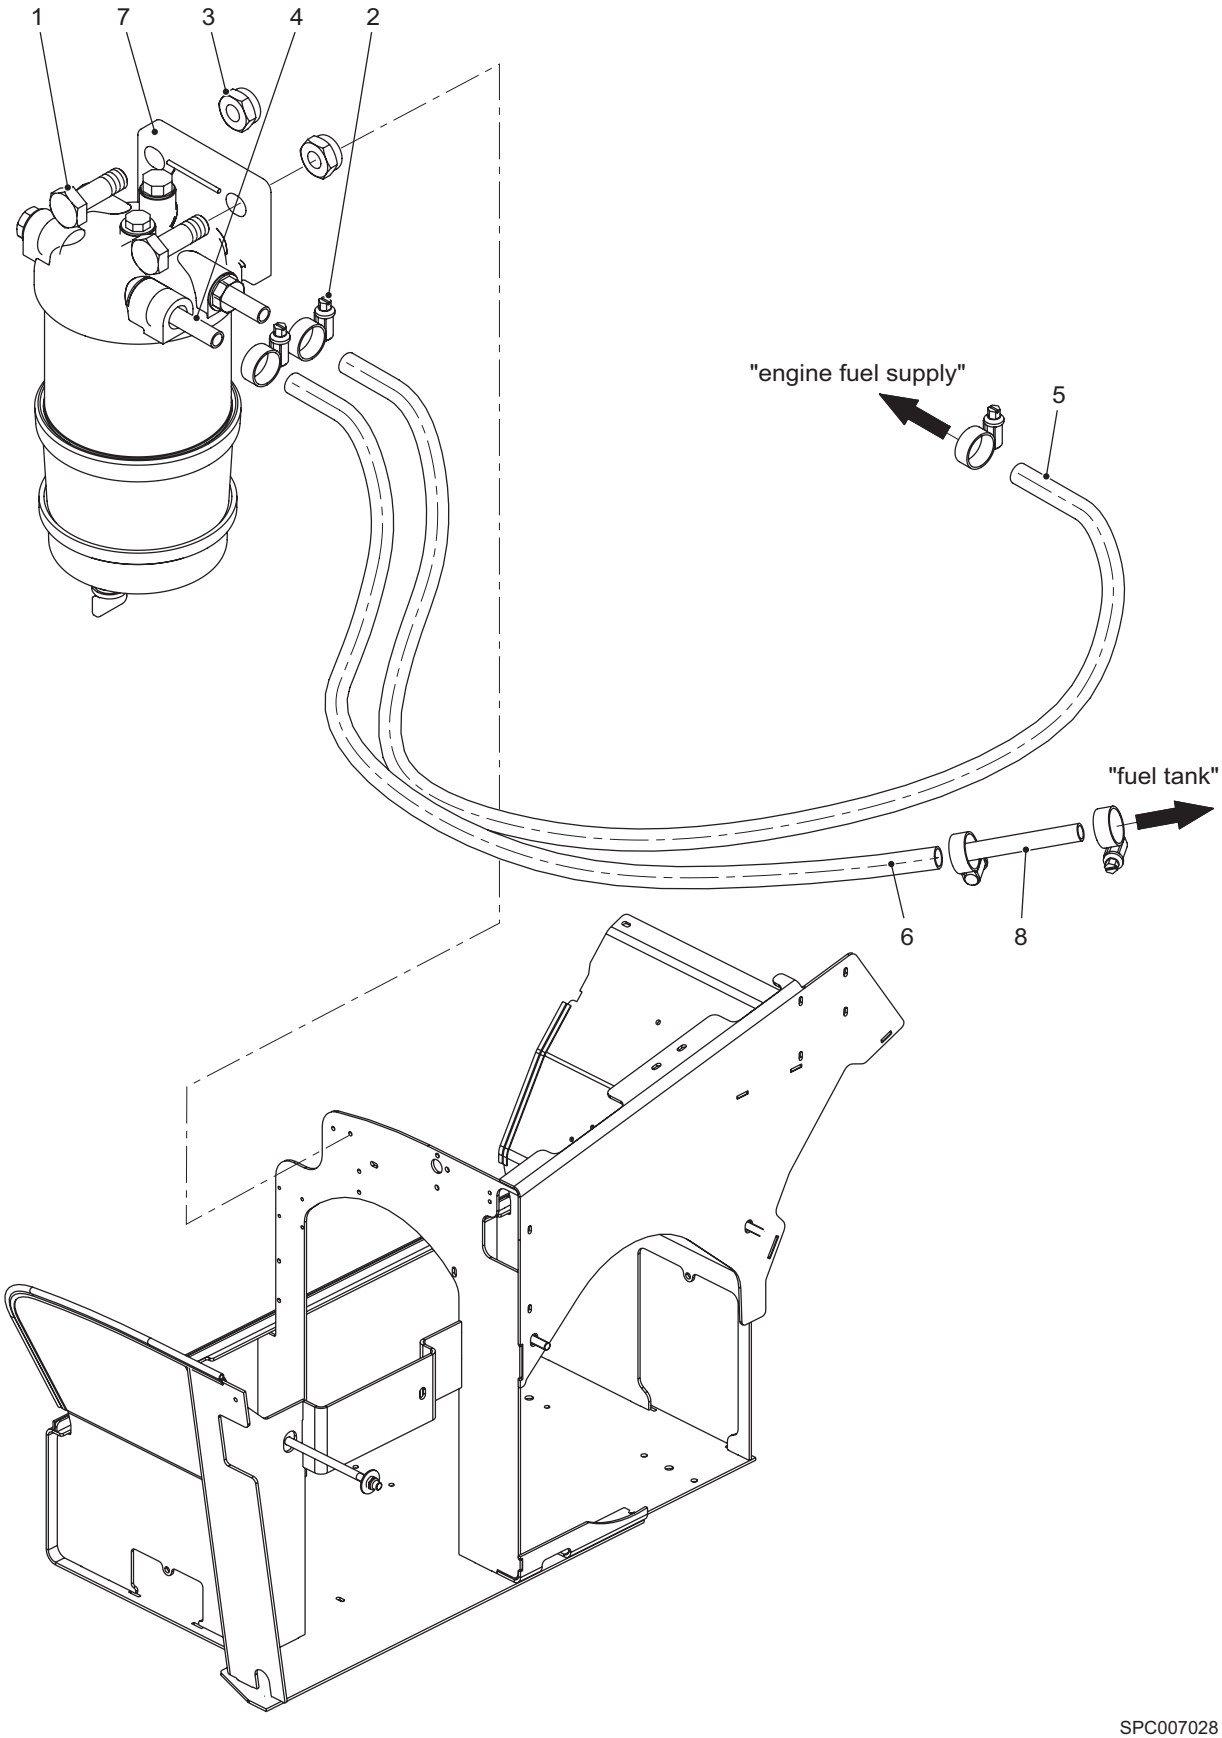


https://www.pdfmanual4trucks.com/

Fuel Pre-Filter Kit

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6915869	Fuel pre-filter Kit	Pos. 1 to 8		1
1	01606.3	Screw			2
2	62231.6	Clamp			5
3	100345-09A	Nut			2
4	6915872	Tube			2
5	6915873	Fuel feed hose			1
6	6915874	Fuel feed hose			1
7	6915875	Fuel pre-filter			1
8	6915876	Tube			1

https://www.pdfmanual4trucks.com/

Hydraulic Tank Filling Kit

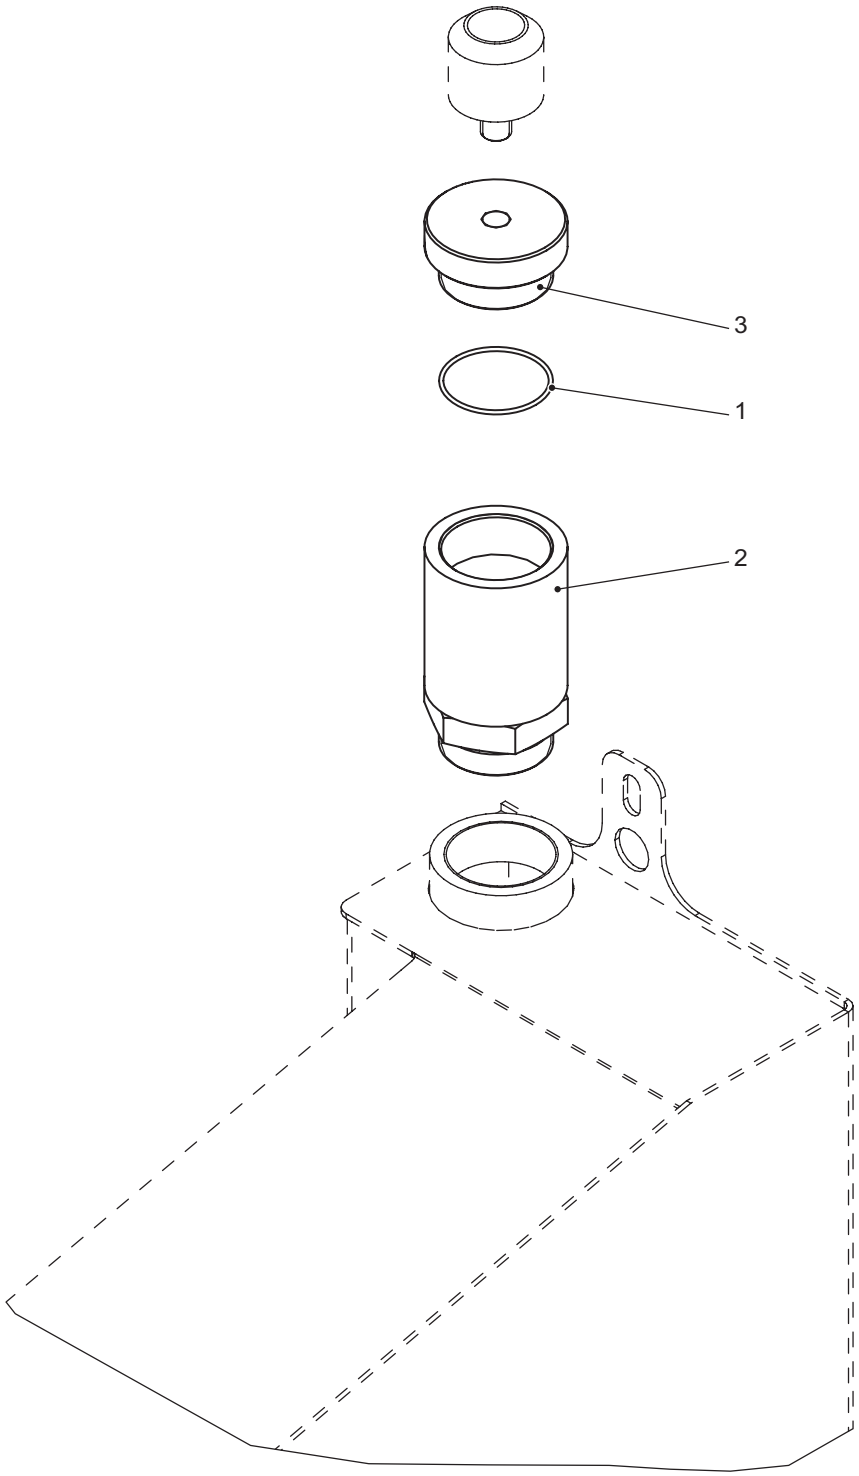

SPC007029


https://www.pdfmanual4trucks.com/

Hydraulic Tank Filling Kit

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6915523	Hydraulic tank filling kit	Pos. 1 to 3		
1	98583.8	O-ring			1
2	6913225	Tube			1
3	6913238	Cap			1

https://www.pdfmanual4trucks.com/

Damper Kit

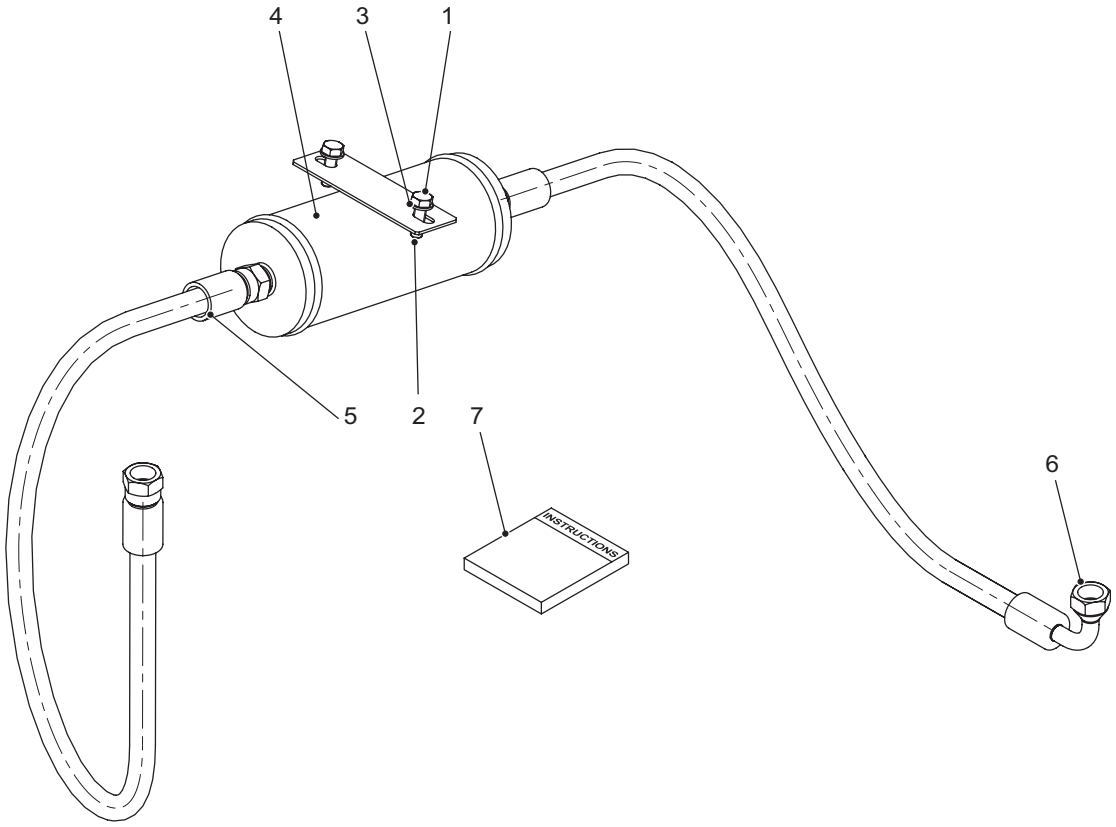

SPC007030


https://www.pdfmanual4trucks.com/

Damper Kit

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6915177	Damper kit	Pos. 1 to 7		
1	01597.4	Screw			2
2	51851.4	Nut			2
3	01697.2	Washer			4
4	6914316	Damper			1
5	79147.5	Hose			1
6	74467.2	Hose			1
7	6915178	Installation instructions			1

https://www.pdfmanual4trucks.com/

Kit Boom Head Reinforcement at "Z" Bar Pin

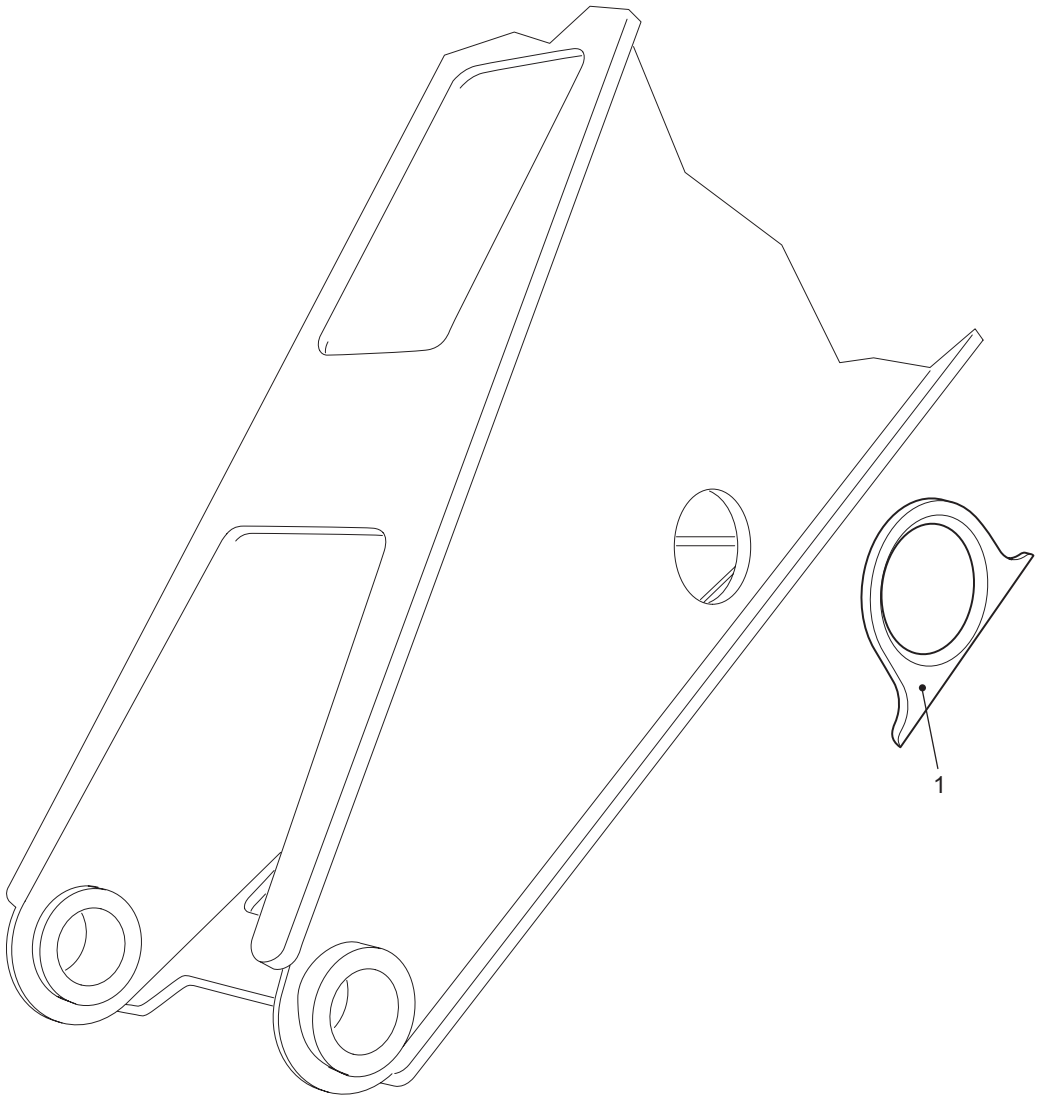

SPC007097


https://www.pdfmanual4trucks.com/

Kit Boom Head Reinforcement at "Z" Bar Pin

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6915533	Kit boom head reinforcement at "Z" bar pin	Pos. 1		1
1	6915531	Boom head reinforcement at "Z" bar pin			2

https://www.pdfmanual4trucks.com/

Kit Boom Head Reinforcement at Carriage Connection

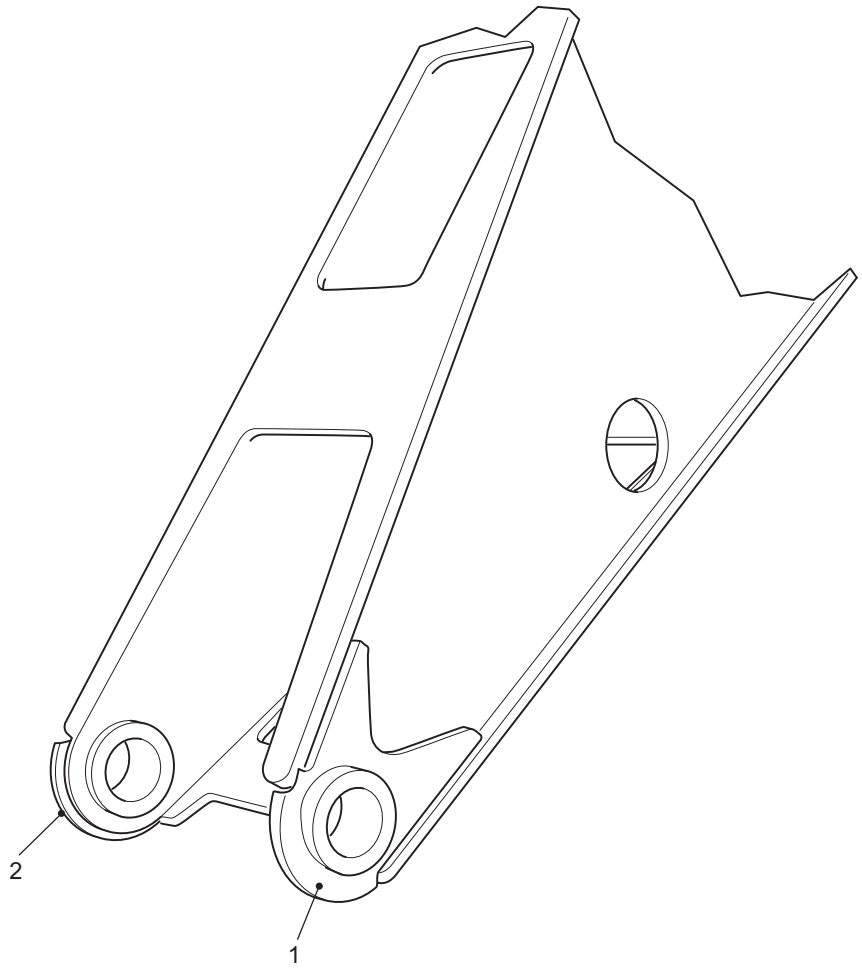

SPC007092


https://www.pdfmanual4trucks.com/

Kit Boom Head Reinforcement at Carriage Connection

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6915448	Kit boom head reinforcement at carriage connection	Pos. 1 + 2		1
1	6915449	Boom head reinforcement LH			1
2	6915454	Boom head reinforcement RH			1

https://www.pdfmanual4trucks.com/

Pression Retaining Kit for Rear Hydr Function

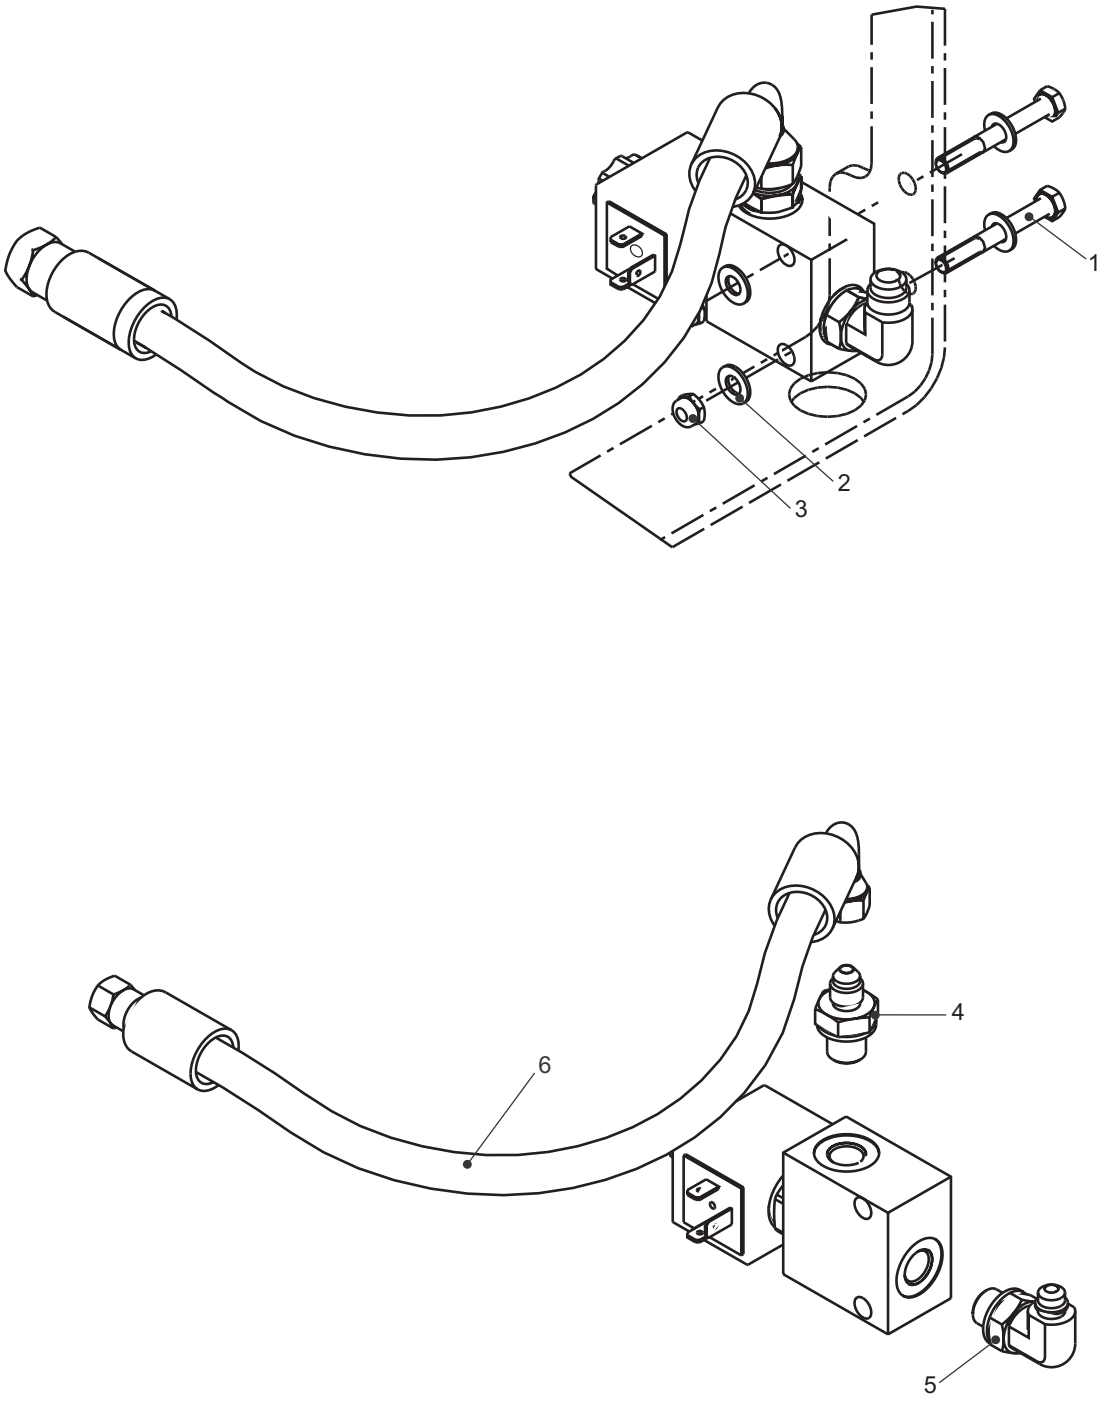

SPC007094

https://www.pdfmanual4trucks.com/


Pression Retaining Kit for Rear Hydr Function

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	48829.6	Screw			2
2	000350-01U	Washer			4
3	100345-06W	Nut			2
4	022375-28V	Adapter			1
5	015370-11P	Elbow			1
6	6915306	Hose			1


https://www.pdfmanual4trucks.com/

Lift Cylinder Accumulator Kit

FOR 7 METER BOOM:

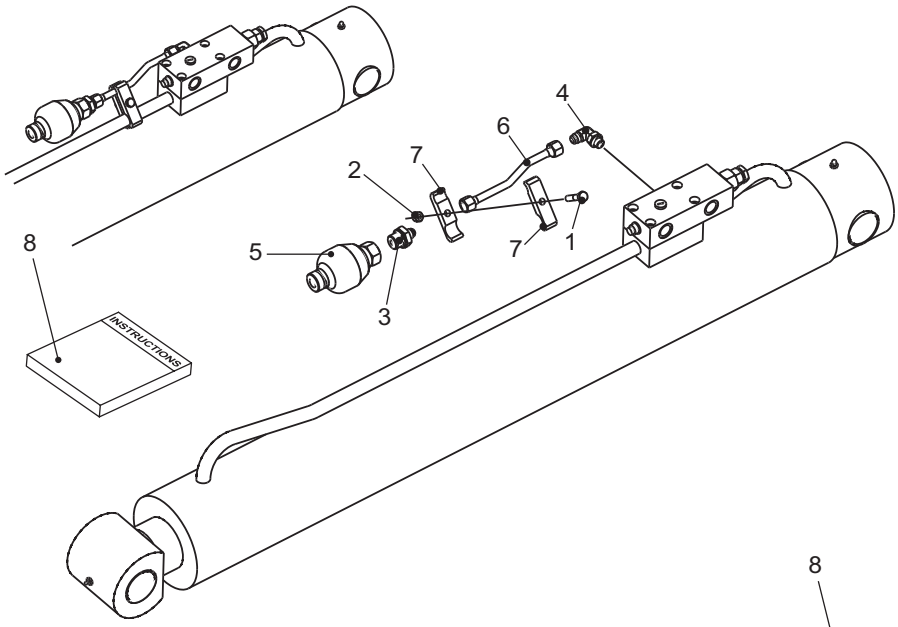

FOR 12 METER BOOM:

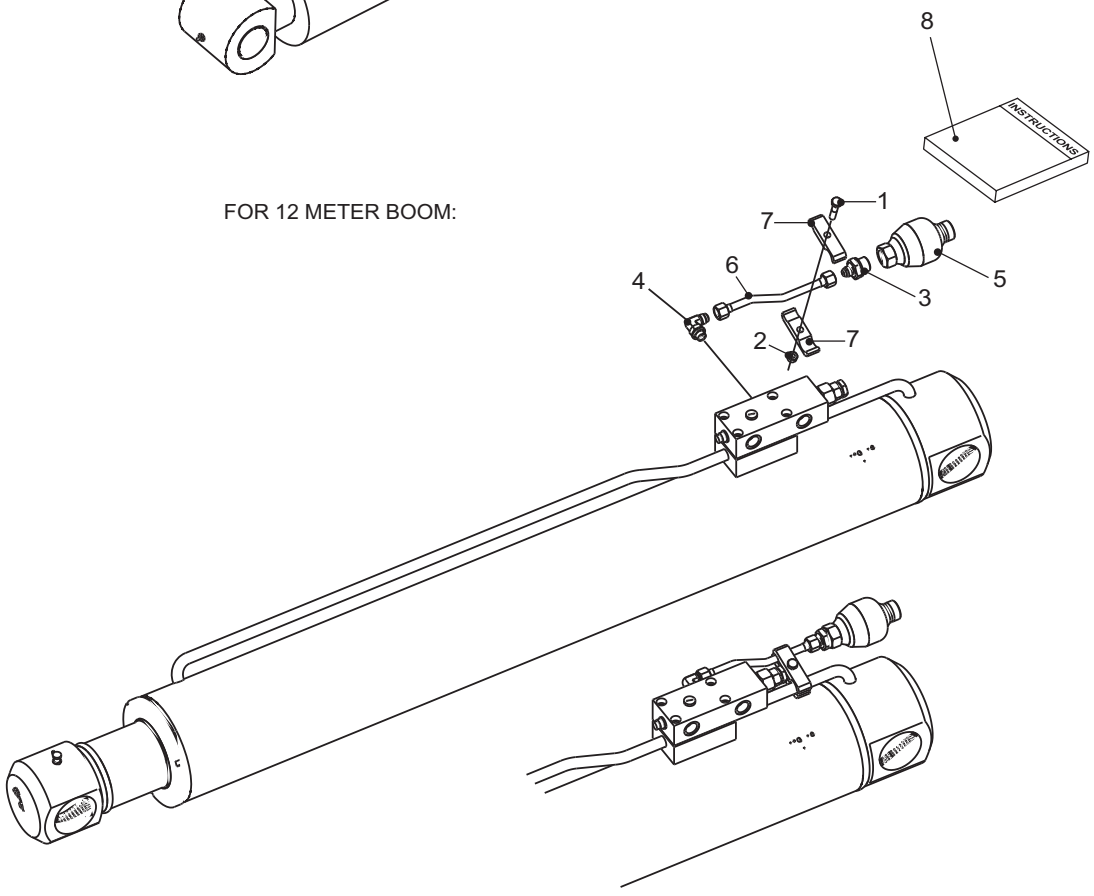

SPC007096


https://www.pdfmanual4trucks.com/

Lift Cylinder Accumulator Kit

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	6915301	Lift cylinder accumulator kit	Pos. 1 to 8		1
1	01599.0	Screw			1
2	51851.4	Nut			1
3	77912.4	Adapter			1
4	100370-18C	Elbow			1
5	6909362	Accumulator			1
6	6914807	Tube			1
7	6914808	Clamp/support			2
8	6915302	Installation Instruction			2

https://www.pdfmanual4trucks.com/

Tool Adaptor Kit

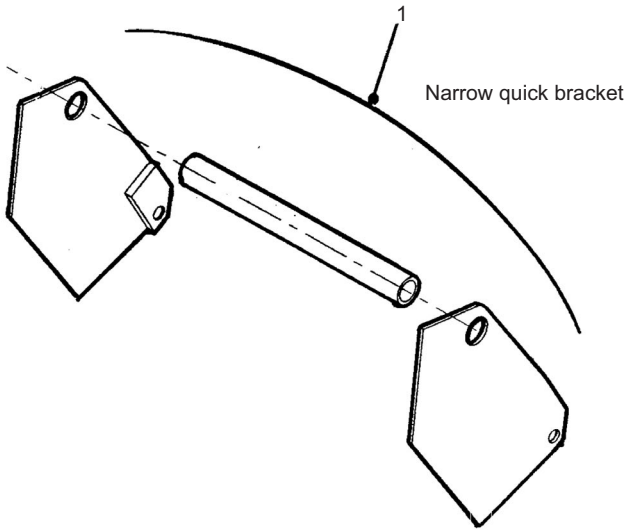

SPC007098


https://www.pdfmanual4trucks.com/

Tool Adaptor Kit

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	84450.6	Adapter kit	Narrow Quick Attach		1

https://www.pdfmanual4trucks.com/

Concrete Bucket

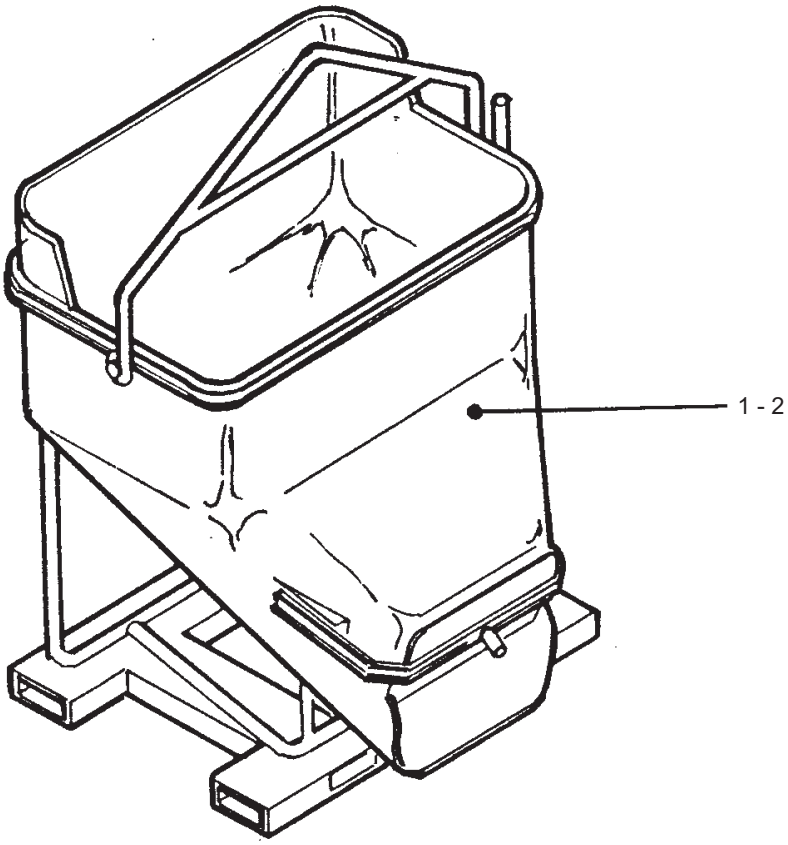

SPC007032


https://www.pdfmanual4trucks.com/

Concrete Bucket

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	100074-53R	Manual concrete skip	500 L		1
2	96524.4	Hydraulic concrete skip	500 L		1

https://www.pdfmanual4trucks.com/

Jig + Hook

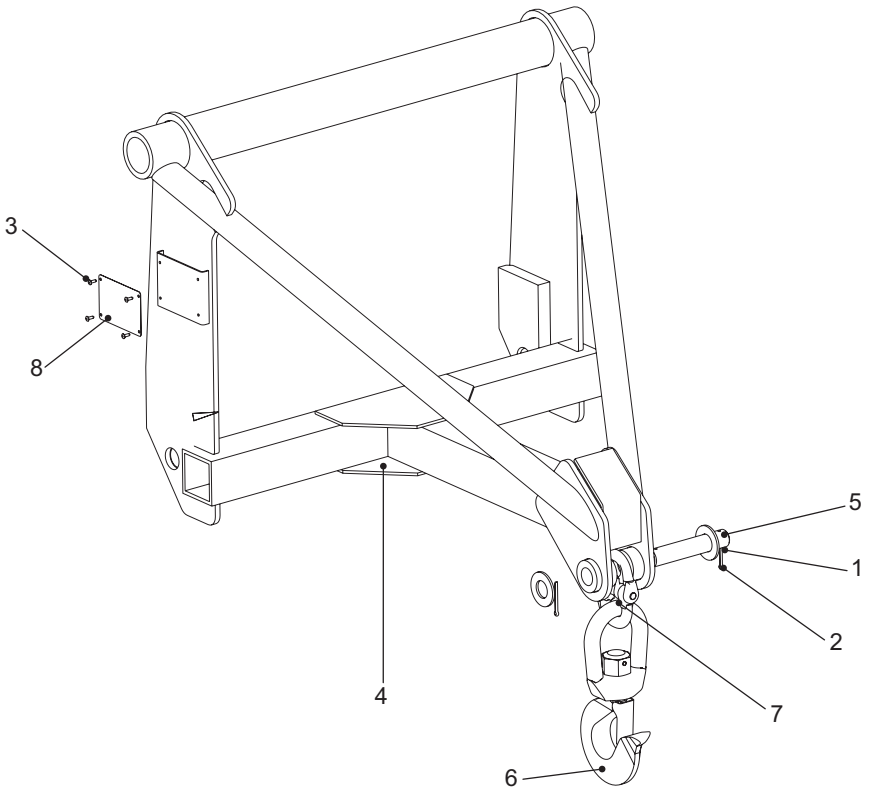

SPC007093


https://www.pdfmanual4trucks.com/

Jig + Hook

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	01763.2	Pin			2
2	10897.7	Washer			2
3	43824.2	Rivet			4
4	69866.2	Jig			1
5	69868.8	Spindle			1
6	70011.2	Hook			1
7	70012.0	Shackle			1
8	98167.0	Plate			1

https://www.pdfmanual4trucks.com/

Floating Pallet Forks

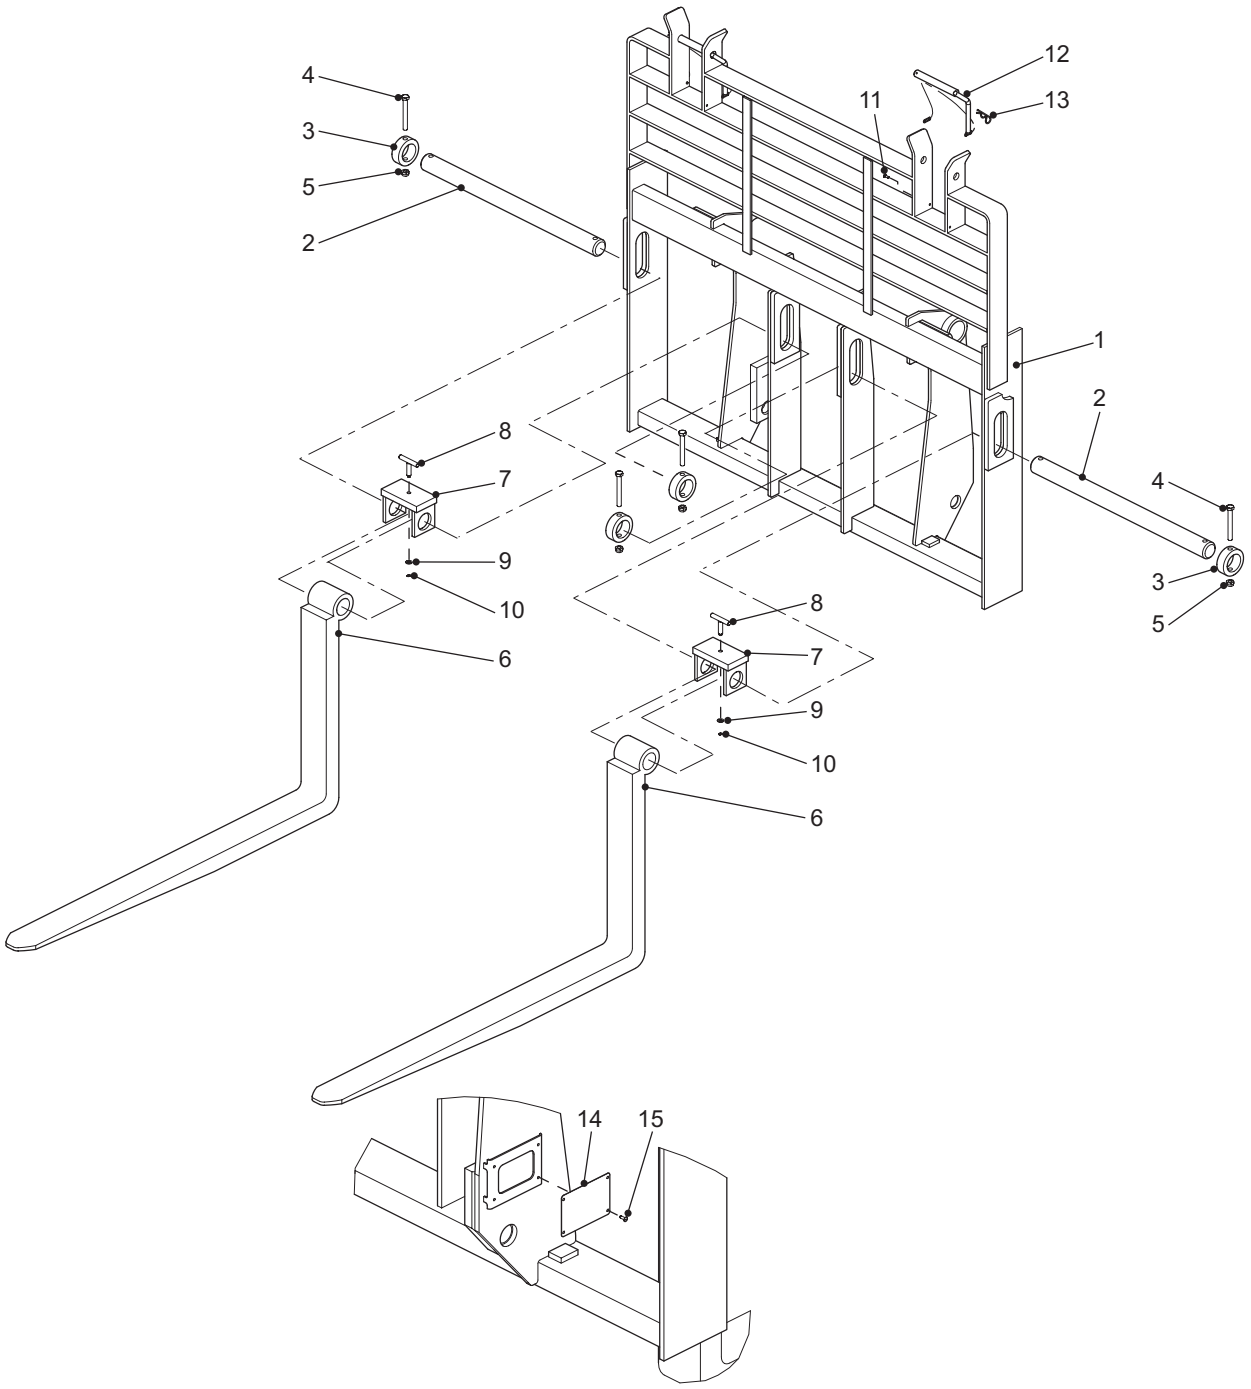

SPC007033

https://www.pdfmanual4trucks.com/


Floating Pallet Forks

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	74425.0	Forks holder assy	Pos. 1 to 5		1
1	6908659	Forks support			1
2	94074.2	Pin			2
3	100288-01V	Bush			4
4	01534.7	Screw			4
5	000345-96E	Nut			4
6	100083-13B	Fork			2
7	6908633	Forks lock			2
8	6908638	Stop			2
9	96554.1	Washer			2
10	43088.4	Clip			2
11	P02645	Rivet			2
12	6908656	Drift			2
13	01149.4	Pin			2
14	98167.0	Plate	Was 95634.2		1
15	43824.2	Rivet			4

https://www.pdfmanual4trucks.com/

Bales Pikes

Narrow Quick Attach

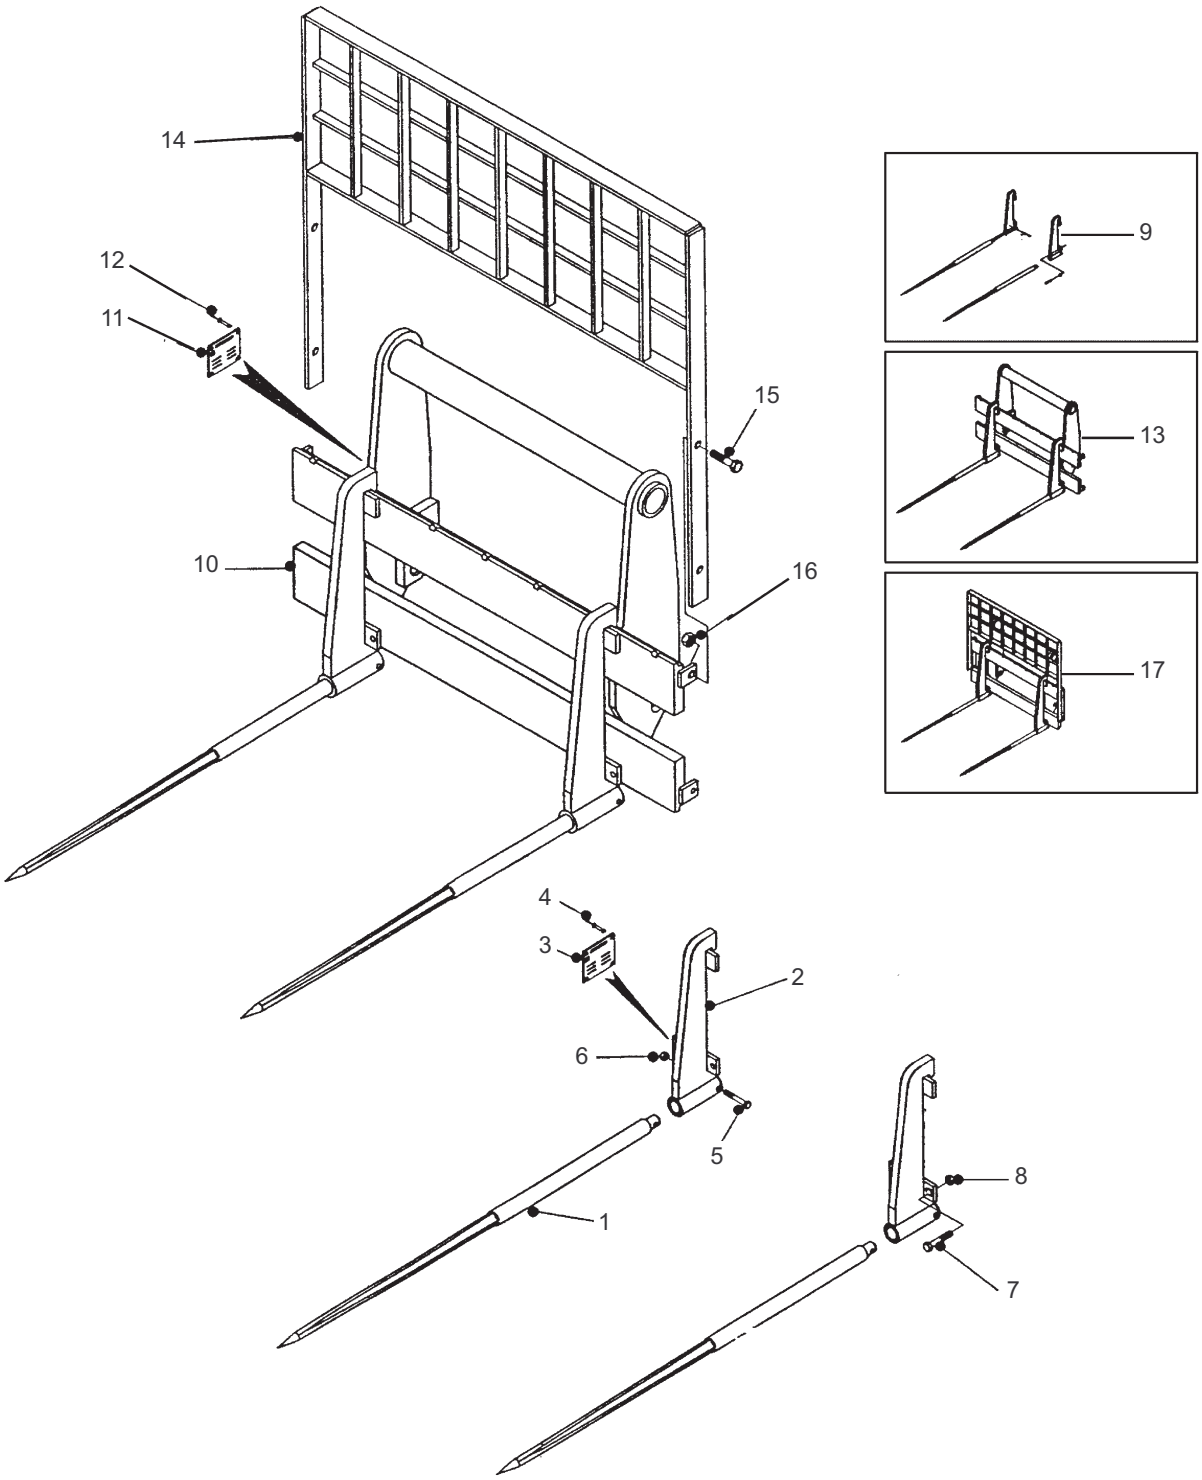

SPC007034

https://www.pdfmanual4trucks.com/


Bales Pikes
Narrow Quick Attach

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	75182.6	Tooth			1
2	76742.6	Bracket			1
3	98167.0	Plate			1
4	43824.2	Rivet			4
5	01522.2	Screw			1
6	100345-09A	Nut			1
7	10942.1	Screw			2
8	01672.5	Nut			2
9	76837.4	Round pin	Pos. 1 to 8		2
10	80942.6	Forks Holder			1
11	98167.0	Plate			1
12	43824.2	Rivet			4
13	76740.0	Bales pikes assy	Pos. 1 to 12		1
14	80917.8	Splash plate			1
15	01613.9	Screw			4
16	000345-96E	Nut			4
17	80945.9	Bales pikes assy	Pos. 1 to 16		1

https://www.pdfmanual4trucks.com/

Rigid Forks Holder

Narrow Quick Attach

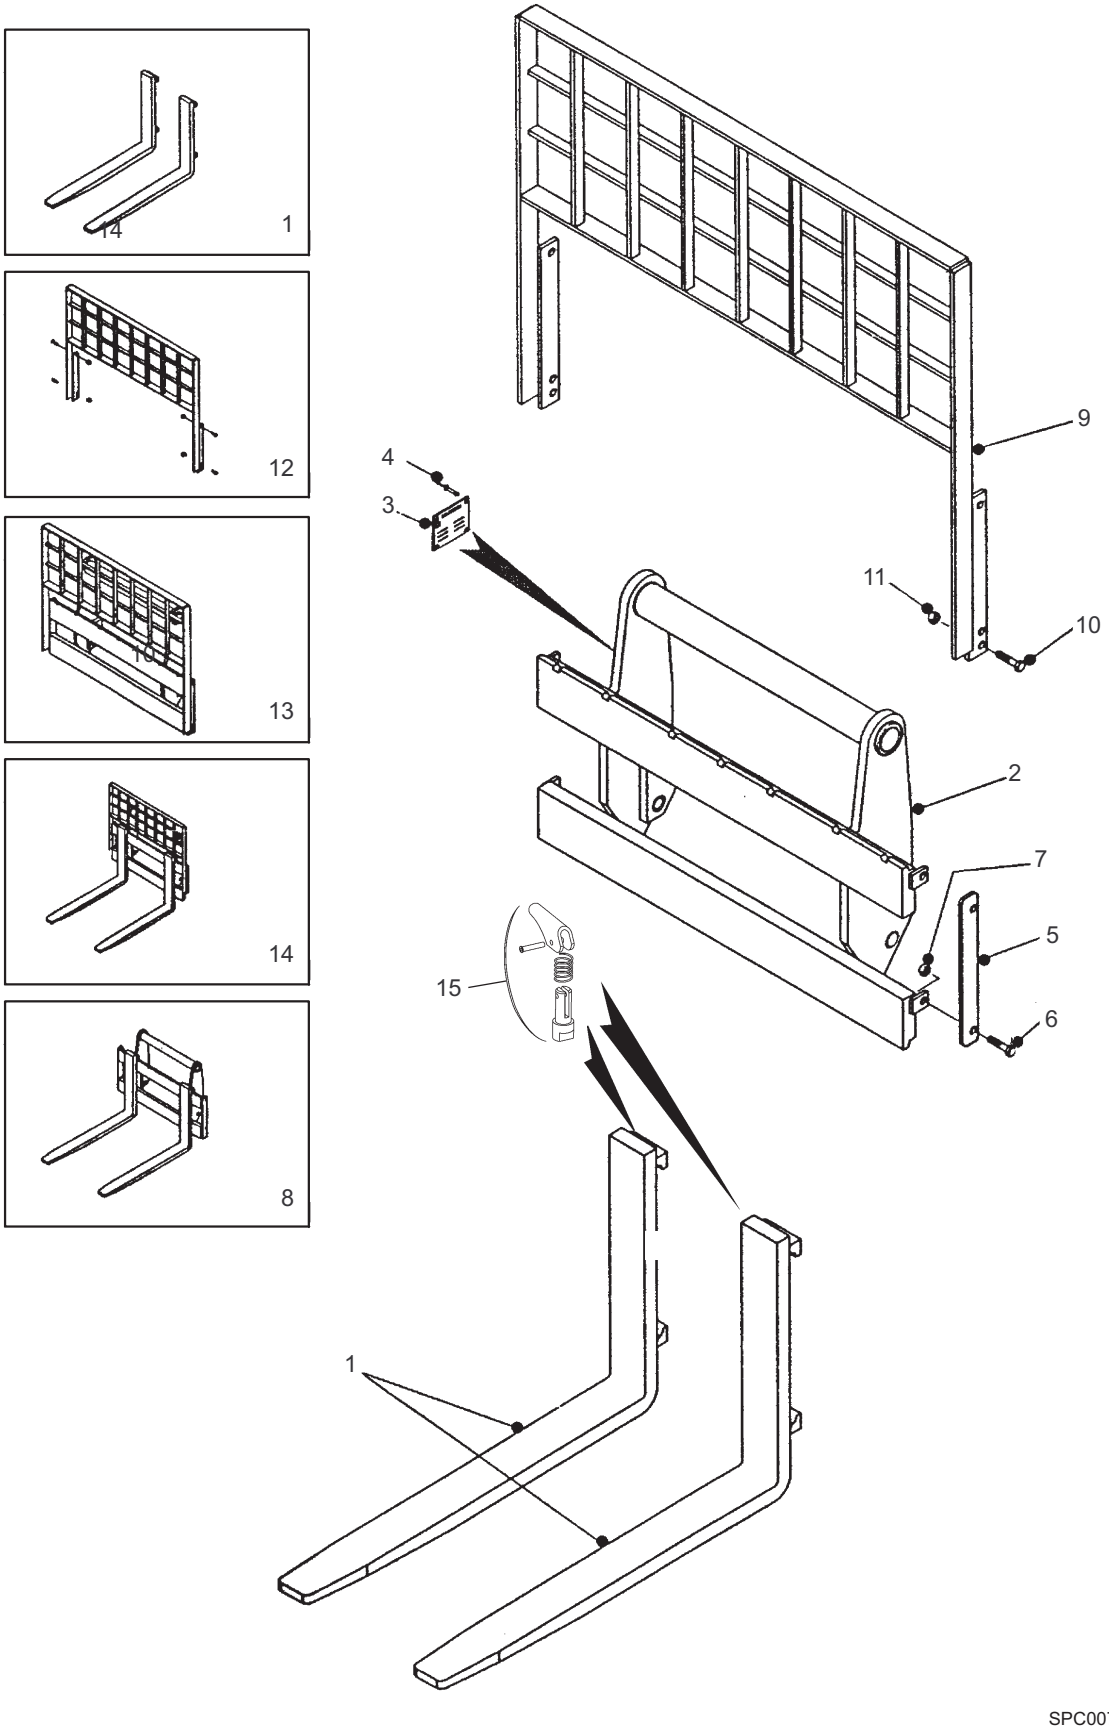

https://www.pdfmanual4trucks.com/


Rigid Forks Holder
Narrow Quick Attach

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	89034.3	Fork			2
2	80942.6	Forks Holder			1
3	98167.0	Plate			1
4	43824.2	Rivet			4
5	80997.0	Plate			2
6	01613.9	Screw			4
7	000345-96E	Nut			4
8	80908.7	Forks holder			1
9	62926.1	Splash plate			1
10	01613.9	Screw			4
11	000345-96E	Nut			4
12	80917.8	Splash plate			1
13	80943.4	Forks holder			1
14	80909.5	Forks holder			1
15	98677.8	Locking kit			2

https://www.pdfmanual4trucks.com/

Toothless Buckets

Narrow Quick Attach

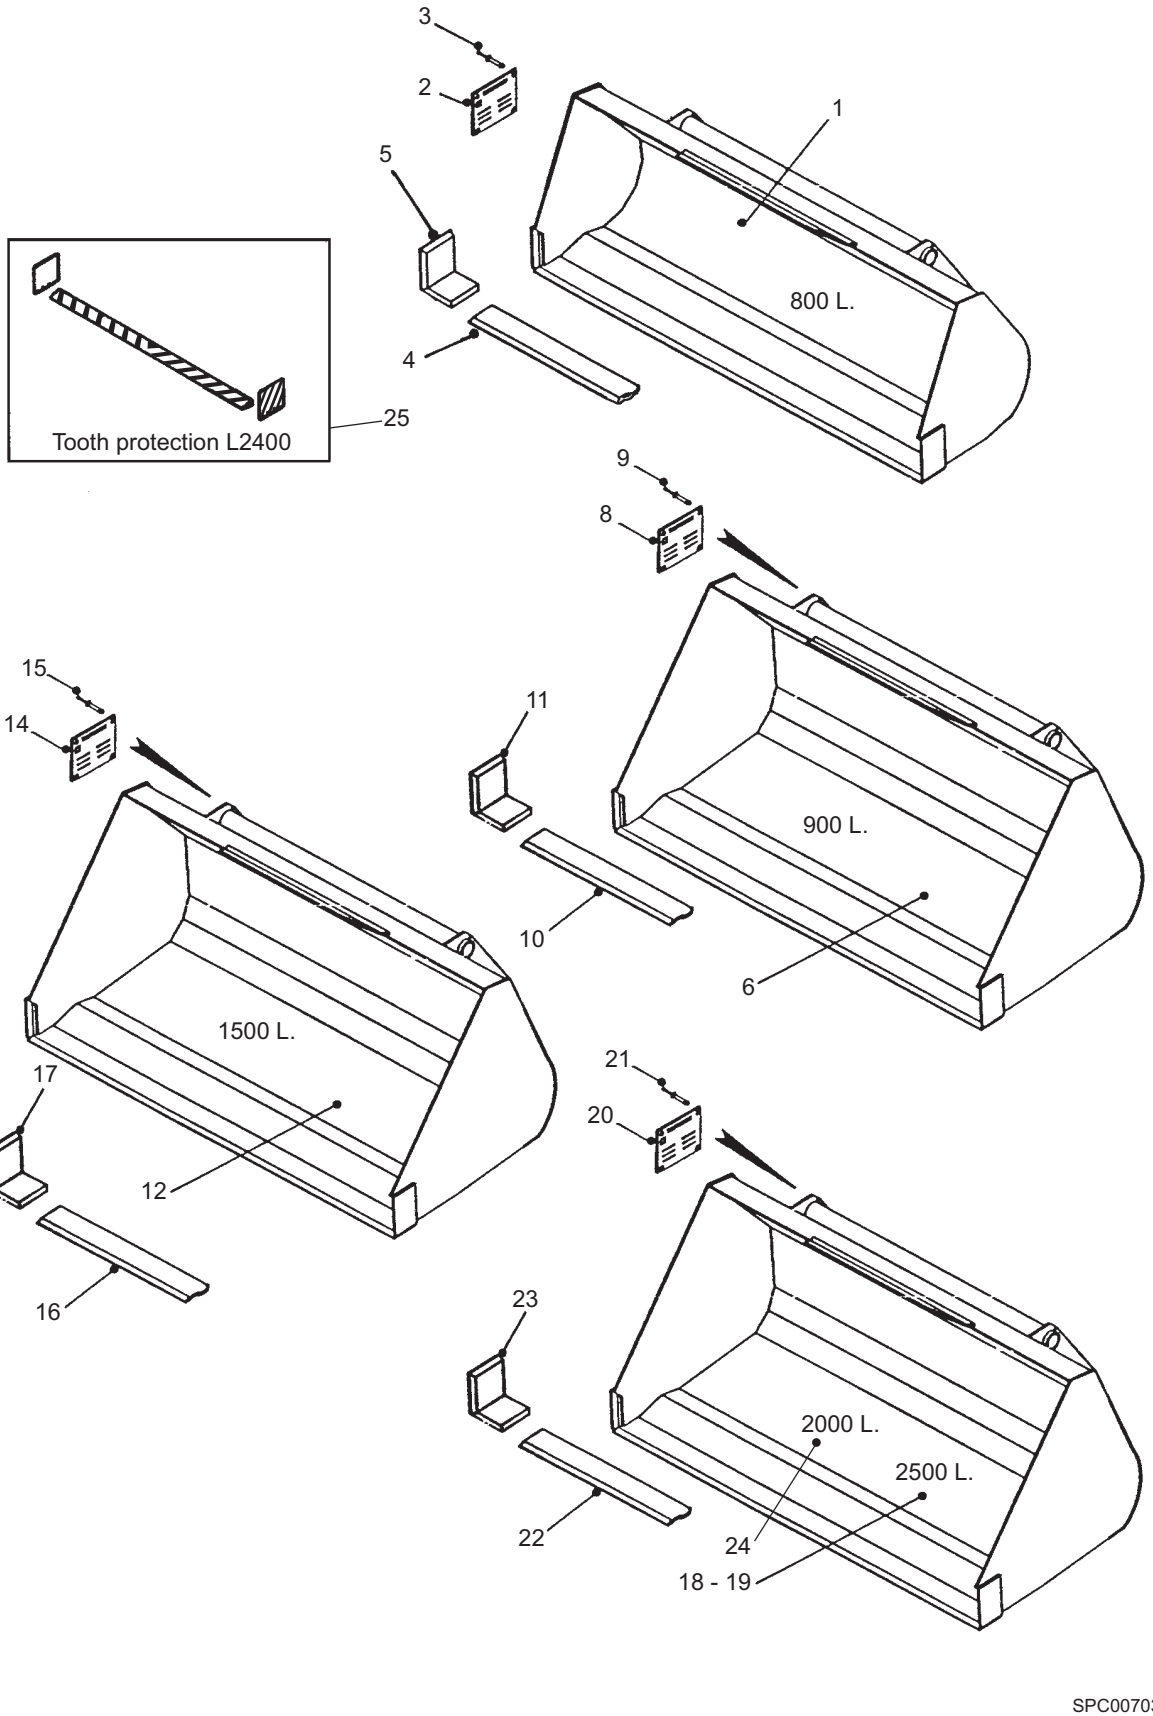


https://www.pdfmanual4trucks.com/


Toothless Buckets
Narrow Quick Attach


Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	80914.5	Bucket	800 L ; Pos. 1 to 5		1
2	98167.0	Plate	Was 95634.2		1
3	43824.2	Rivet			4
4	64012.8	Blade			1
5	64010.2	Wedge			2
6	80907.9	Bucket	900 L ; Pos. 6 + 8 to 11		1
8	98167.0	Plate	Was 95634.2		1
9	43824.2	Rivet			4
10	64011.0	Blade			1
11	64010.2	Wedge			2
12	84957.0	Bucket	1500 L ; Pos. 12 to 17		1
14	98167.0	Plate	Was 95634.2		1
15	43824.2	Rivet			4
16	67172.7	Blade			1
17	67173.5	Wedge			2
18	94997.4	Bucket	Sambron 2000 L ; Pos. 18 + 20 to 23		1
19	68948.9	Bucket	Riman 2000 L ; Pos.19 to 23		1
20	98167.0	Plate	Was 95634.2		1
21	43824.2	Rivet			4
22	72554.9	Blade			1
23	84536.2	Wedge			2
24	62935.2	Bucket	2500 L ; Pos.20 to 24		1
25	92790.5	Protection for toothless buckets			1


https://www.pdfmanual4trucks.com/


Toothed Bucket
Narrow Quick Attach

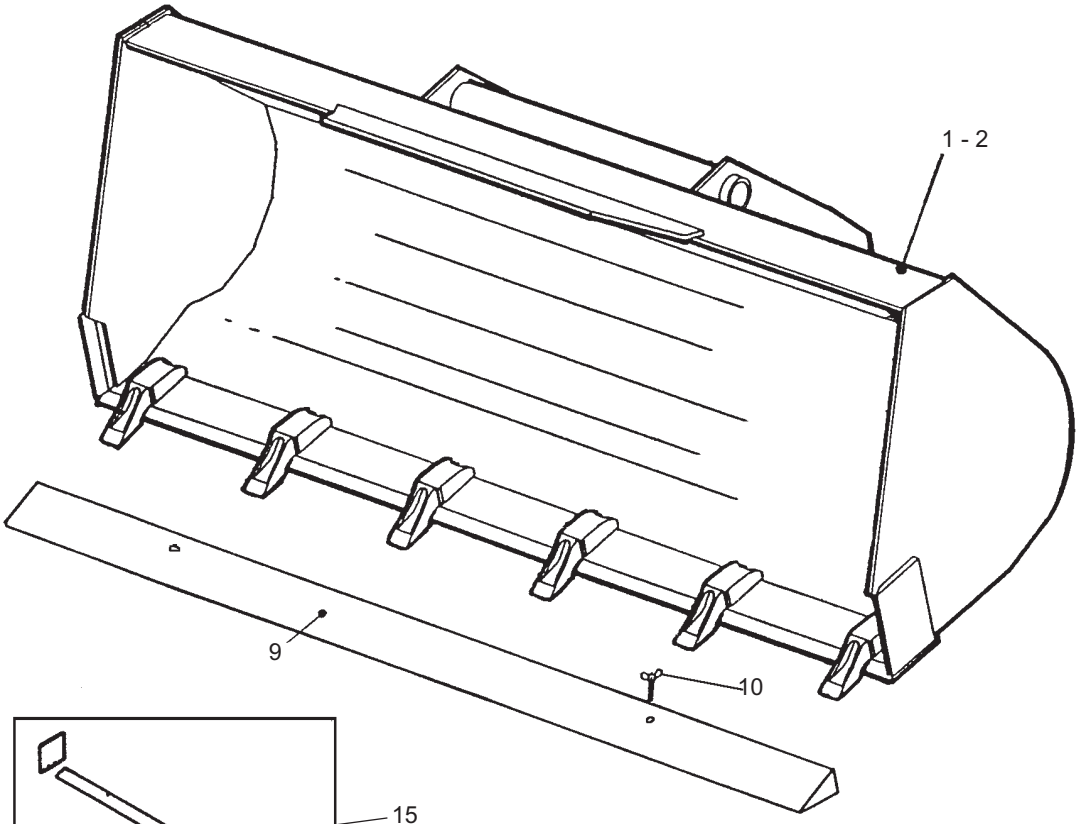

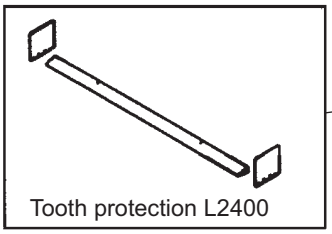

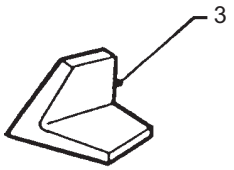

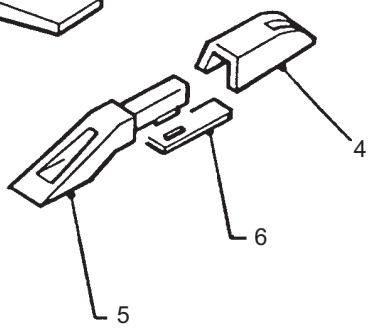

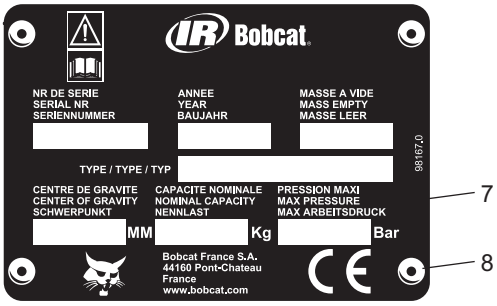



SPC007039

https://www.pdfmanual4trucks.com/

Toothed Bucket
Narrow Quick Attach

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	80910.3	Bucket	800 L ; Pos. 1 + 3 to 8		1
2	80906.1	Bucket	900 L ; Pos. 2 to 8		1
3	64010.2	Wedge			2
4	60794.5	Tooth support			6
5	69791.2	Tooth			6
6	60795.2	Lock			6
7	98167.0	Plate	Was 95634.2		1
8	43824.2	Rivet			4
9	62932.9	Protection	Length 2400 mm ; Pos. 9 to 12		1
	62948.5	Protection	Length 2200 mm ; Pos. 9 to 12		1
10	35497.7	Screw			2
11	92803.6	Decal			1
12	92805.1	Decal			1
13	92808.5	Decal			1
14	92783.0	Decal			1
15	92809.3	Protection	Length 2400 mm ; Pos. 10 to 15		1

https://www.pdfmanual4trucks.com/

Intentionally left blank

https://www.pdfmanual4trucks.com/

NUMERICAL INDEX

Part Number	Denomination	WAS	Page	Subgroup
			11	Engine Cover
000326-10V	Screw		283	Matriculation Plate Option
000326-25M	Screw		147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
000338-54X	Screw		9	Fuel Tank Installation
000342-17S	Nut		113	Service Brake Hydraulic Installation
000345-06W	Nut		299	Rear Hydraulic Function
000345-96E	Nut		17	Engine Basket
			199	Engine Installation
			255	Air Conditioning Installation
			339	Floating Pallet Forks
			341	Bales Pikes
			343	Rigid Forks Holder
000348-12P	Washer		49	Rear Window Installation
000350-01U	Washer		113	Service Brake Hydraulic Installation
			147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			183	Electrical Circuit Chassis
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
			329	Pression Retaining Kit for Rear Hydr Function
000350-02V	Washer		11	Engine Cover
			121	Hydraulic Tank Installation
			183	Electrical Circuit Chassis
			205	Exhaust System
			291	Backup Alarm
000350-03W	Washer		11	Engine Cover
			189	Electrical Circuit Engine
			197	Security Circuit
			199	Engine Installation
			207	Cooling System Installation
			255	Air Conditioning Installation
000350-04X	Washer		199	Engine Installation
000350-08C	Washer		35	Pedals Installation
			287	Tow Hitch
			303	Rear Hydraulic Hook
000350-20Q	Washer		51	Wiper Installation
			207	Cooling System Installation
			255	Air Conditioning Installation
000350-21R	Washer		3	Chassis
			25	Cab Assy II
			309	Trailer Brake
000368-80M	Cable end		303	Rear Hydraulic Hook
000405-62P	Bulb		183	Electrical Circuit Chassis
001338-08T	Screw		91	Boom Hydraulic Installation
001350-04T	Washer		273	Mudguard 20"
			275	Mudguard 24"
001369-22D	Collar		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
003304-21D	O-ring		165	Hydrostatic Hoses and Fittings
00580.1	Ring		149	Hydraulic Control Valve Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
006458-01H	Grease Nipple		77	Steering - Front Axle
			87	Steering - Rear Axle
007330-29V	Screw		199	Engine Installation
007346-02F	Washer		25	Cab Assy II
			283	Matriculation Plate Option
008372-01B	Elbow		211	Cooling Fan Circuit
			213	Cooling Fan Circuit (with optional reverse)
			303	Rear Hydraulic Hook
008372-02C	T- union		105	Steering Hydraulics Cab
			107	Joystick Installation (without AMA)
			109	Joystick Installation (with AMA)
			113	Service Brake Hydraulic Installation
008372-28F	T- union		99	Lift & Compensation Cylinder Installation
			149	Hydraulic Control Valve Installation
008372-34M	T- union		121	Hydraulic Tank Installation
			165	Hydrostatic Hoses and Fittings
			199	Engine Installation
			211	Cooling Fan Circuit
			213	Cooling Fan Circuit (with optional reverse)
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
00909.2	Bearing	000398-08U	75	Differential - Front Axle
			85	Differential - Rear Axle
00930.8	Washer		131	Telescope Cylinder
			133	Telescope Cylinder
009368-06S	Cable stop		303	Rear Hydraulic Hook
00939.9	Nut		131	Telescope Cylinder
			133	Telescope Cylinder
009456-02D	Washer		99	Lift & Compensation Cylinder Installation
010338-02X	Screw		3	Chassis
010370-57L	Elbow		91	Boom Hydraulic Installation
010370-87T	Elbow		105	Steering Hydraulics Cab
			113	Service Brake Hydraulic Installation
010370-90W	Elbow		91	Boom Hydraulic Installation
			99	Lift & Compensation Cylinder Installation
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
			309	Trailer Brake
010370-93A	Elbow		207	Cooling System Installation
010370-94B	Elbow		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
			143	Hydraulic Pump Installation
			213	Cooling Fan Circuit (with optional reverse)
01124.7	Spring		35	Pedals Installation
011374-44C	Plug		199	Engine Installation
011374-62W	Plug		121	Hydraulic Tank Installation
01149.4	Pin		339	Floating Pallet Forks
01275.7	Clamp		91	Boom Hydraulic Installation
			199	Engine Installation
014345-12C	Nut		107	Joystick Installation (without AMA)
			109	Joystick Installation (with AMA)

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
014345-13D	Nut		149	Hydraulic Control Valve Installation
014375-02C	Union		99	Lift & Compensation Cylinder Installation
			149	Hydraulic Control Valve Installation
014375-30H	Adapter		91	Boom Hydraulic Installation
			125	Frame Level Installation
			143	Hydraulic Pump Installation
			297	2nd Hydraulic Function On Boom
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
014375-33L	Adapter		165	Hydrostatic Hoses and Fittings
014375-69A	Union		149	Hydraulic Control Valve Installation
014375-96E	Connector		165	Hydrostatic Hoses and Fittings
014375-97F	Adapter		199	Engine Installation
01443.1	Bulb		25	Cab Assy II
			283	Matriculation Plate Option
01478.7	Screw		35	Pedals Installation
			255	Air Conditioning Installation
01508.1	Screw		91	Boom Hydraulic Installation
01511.5	Screw		297	2nd Hydraulic Function On Boom
01519.8	Screw		277	Tow Valve Installation
01522.2	Screw		255	Air Conditioning Installation
			341	Bales Pikes
01528.9	Screw		199	Engine Installation
01534.7	Screw		339	Floating Pallet Forks
015369-50X	Nut		11	Engine Cover
015370-11P	Elbow		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			143	Hydraulic Pump Installation
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
			329	Pression Retaining Kit for Rear Hydr Function
01547.9	Screw		7	Ballast
			19	Cab & Fixations
01549.5	Screw		7	Ballast
			19	Cab & Fixations
01575.0	Screw		45	Door Assy
01578.4	Screw		91	Boom Hydraulic Installation
			113	Service Brake Hydraulic Installation
			207	Cooling System Installation
			255	Air Conditioning Installation
01579.2	Screw		45	Door Assy
01590.9	Screw		21	Cab Assy
			25	Cab Assy II
			31	Heating/ventilation Installation
			39	Cowling Installation
			45	Door Assy
			195	Joystick / Susmic Installation
			207	Cooling System Installation
01591.7	Screw		21	Cab Assy
			25	Cab Assy II
			183	Electrical Circuit Chassis
			255	Air Conditioning Installation
			293	Windshield Protection Grill

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
01593.3	Screw		107	Joystick Installation (without AMA)
			109	Joystick Installation (with AMA)
			293	Windshield Protection Grill
01595.8	Screw		45	Door Assy
			91	Boom Hydraulic Installation
			207	Cooling System Installation
			291	Backup Alarm
01596.6	Screw		11	Engine Cover
			25	Cab Assy II
			35	Pedals Installation
			37	Steering Column Installation
			51	Wiper Installation
			117	Parking Brake Hydraulic Installation (accumulat
			183	Electrical Circuit Chassis
			189	Electrical Circuit Engine
			197	Security Circuit
			207	Cooling System Installation
01597.4	Screw		11	Engine Cover
			35	Pedals Installation
			37	Steering Column Installation
			59	End Boom Assy
			71	Housing - Front Axle
			103	Steering Hoses & Fittings (with damper)
			121	Hydraulic Tank Installation
			205	Exhaust System
			323	Damper Kit
01598.2	Screw		183	Electrical Circuit Chassis
			199	Engine Installation
			207	Cooling System Installation
			283	Matriculation Plate Option
			285	Trailer Plug
01599.0	Screw		331	Lift Cylinder Accumulator Kit
01602.2	Screw		207	Cooling System Installation
01603.0	Screw		45	Door Assy
			307	Hook
01604.8	Screw		3	Chassis
			91	Boom Hydraulic Installation
			105	Steering Hydraulics Cab
01605.5	Screw		35	Pedals Installation
			57	Fixed Boom Assy
			199	Engine Installation
			205	Exhaust System
			207	Cooling System Installation
			255	Air Conditioning Installation
			309	Trailer Brake
01606.3	Screw		19	Cab & Fixations
			45	Door Assy
			189	Electrical Circuit Engine
			319	Fuel Pre-Filter Kit
01607.1	Screw		3	Chassis
			19	Cab & Fixations
01608.9	Screw		3	Chassis
			35	Pedals Installation
			147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			199	Engine Installation
			297	2nd Hydraulic Function On Boom

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			341	Bales Pikes
			343	Rigid Forks Holder
01616.2	Screw		57	Fixed Boom Assy
01620.4	Screw		303	Rear Hydraulic Hook
01639.4	Screw		121	Hydraulic Tank Installation
01640.2	Screw		197	Security Circuit
			199	Engine Installation
01657.6	Screw		19	Cab & Fixations
01664.2	Nut		25	Cab Assy II
01665.9	Nut		41	Control Panel Switches
			189	Electrical Circuit Engine
01666.7	Nut		11	Engine Cover
			25	Cab Assy II
			45	Door Assy
			107	Joystick Installation (without AMA)
			109	Joystick Installation (with AMA)
			189	Electrical Circuit Engine
			195	Joystick / Susmic Installation
01668.3	Nut		45	Door Assy
			51	Wiper Installation
			207	Cooling System Installation
01669.1	Nut		35	Pedals Installation
01672.5	Nut		341	Bales Pikes
01674.1	Nut		3	Chassis
01681.6	Nut		11	Engine Cover
			49	Rear Window Installation
01682.4	Nut		11	Engine Cover
01683.2	Nut		147	Hydraulic Control Valve Fixations
01695.6	Washer		183	Electrical Circuit Chassis
			255	Air Conditioning Installation
01696.4	Washer		21	Cab Assy
			25	Cab Assy II
			45	Door Assy
			107	Joystick Installation (without AMA)
			109	Joystick Installation (with AMA)
			213	Cooling Fan Circuit (with optional reverse)
			255	Air Conditioning Installation
01697.2	Washer		35	Pedals Installation
			37	Steering Column Installation
			45	Door Assy
			103	Steering Hoses & Fittings (with damper)
			117	Parking Brake Hydraulic Installation (accumulat
			195	Joystick / Susmic Installation
			199	Engine Installation
			207	Cooling System Installation
			255	Air Conditioning Installation
			323	Damper Kit
01698.0	Washer		297	2nd Hydraulic Function On Boom
01701.2	Washer		9	Fuel Tank Installation
			19	Cab & Fixations
01717.8	Washer		25	Cab Assy II
			31	Heating/ventilation Installation
			45	Door Assy
			51	Wiper Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			195	Joystick / Susmic Installation
			207	Cooling System Installation
01718.6	Washer		11	Engine Cover
			45	Door Assy
			121	Hydraulic Tank Installation
			183	Electrical Circuit Chassis
			197	Security Circuit
			283	Matriculation Plate Option
			285	Trailer Plug
01719.4	Washer		3	Chassis
			45	Door Assy
01720.2	Washer		105	Steering Hydraulics Cab
01735.0	Pin		119	Quick Attach Installation
01736.8	Pin		35	Pedals Installation
01744.2	Pin		119	Quick Attach Installation
01745.9	Pin		119	Quick Attach Installation
01754.1	Pin		35	Pedals Installation
01763.2	Pin		337	Jig + Hook
01775.6	Grease Nipple		3	Chassis
			59	End Boom Assy
			99	Lift & Compensation Cylinder Installation
01782.2	Grease nipple		3	Chassis
018472-83R	Ground Cable		189	Electrical Circuit Engine
022375-04U	Adapter		125	Frame Level Installation
022375-06W	Adapter		91	Boom Hydraulic Installation
			99	Lift & Compensation Cylinder Installation
			297	2nd Hydraulic Function On Boom
			299	Rear Hydraulic Function
022375-27U	Adapter		119	Quick Attach Installation
			297	2nd Hydraulic Function On Boom
022375-28V	Adapter		119	Quick Attach Installation
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
			329	Pression Retaining Kit for Rear Hydr Function
022375-31Z	Adapter		107	Joystick Installation (without AMA)
			109	Joystick Installation (with AMA)
			149	Hydraulic Control Valve Installation
05698.6	Washer		39	Cowling Installation
06734.8	Retaining Ring		3	Chassis
			125	Frame Level Installation
07187.8	Bearing		75	Differential - Front Axle
			85	Differential - Rear Axle
100074-53R	Manual concrete skip		335	Concrete Bucket
100083-13B	Fork		339	Floating Pallet Forks
100212-53R	Plate		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
100228-57K	Cover		289	Rear View Mirror
			303	Rear Hydraulic Hook
100273-25R	Safety Pin		83	Housing - Rear Axle
100288-01V	Bush		339	Floating Pallet Forks
100288-63N	Washer		71	Housing - Front Axle
			83	Housing - Rear Axle

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
100324-04M	Screw		67	Hub Reduction - Front Axle / Rear Axle
100329-22A	Screw		111	AMA - Installation
100331-01U	Screw		39	Cowling Installation
100338-07M	Screw		19	Cab & Fixations
100338-15V	Screw		63	Axle Installation
100338-18Z	Screw		165	Hydrostatic Hoses and Fittings
100338-23F	Screw		25	Cab Assy II
			289	Rear View Mirror
			303	Rear Hydraulic Hook
100338-39W	Screw		75	Differential - Front Axle
			85	Differential - Rear Axle
100338-42A	Screw		83	Housing - Rear Axle
100345-04U	Nut		19	Cab & Fixations
			25	Cab Assy II
			283	Matriculation Plate Option
100345-05V	Nut		35	Pedals Installation
			187	Electrical Circuit Cab
			255	Air Conditioning Installation
			283	Matriculation Plate Option
			285	Trailer Plug
100345-06W	Nut		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
			147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			183	Electrical Circuit Chassis
			213	Cooling Fan Circuit (with optional reverse)
			255	Air Conditioning Installation
			293	Windshield Protection Grill
			303	Rear Hydraulic Hook
			329	Pression Retaining Kit for Rear Hydr Function
100345-09A	Nut		3	Chassis
			11	Engine Cover
			19	Cab & Fixations
			35	Pedals Installation
			57	Fixed Boom Assy
			59	End Boom Assy
			91	Boom Hydraulic Installation
			99	Lift & Compensation Cylinder Installation
			147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			189	Electrical Circuit Engine
			199	Engine Installation
			255	Air Conditioning Installation
			277	Tow Valve Installation
			299	Rear Hydraulic Function
			319	Fuel Pre-Filter Kit
			341	Bales Pikes
100345-11C	Nut		63	Axle Installation
100345-15G	Nut		19	Cab & Fixations
100345-16H	Nut		3	Chassis
			9	Fuel Tank Installation
			17	Engine Basket
			19	Cab & Fixations
			125	Frame Level Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
100345-20M	Nut		3	Chassis
			287	Tow Hitch
			303	Rear Hydraulic Hook
			307	Hook
100345-34C	Nut		165	Hydrostatic Hoses and Fittings
			213	Cooling Fan Circuit (with optional reverse)
100345-37F	Nut		75	Differential - Front Axle
			85	Differential - Rear Axle
100345-40J	Clamp		75	Differential - Front Axle
			85	Differential - Rear Axle
100345-41K	Wheel Nut		67	Hub Reduction - Front Axle / Rear Axle
100348-06X	Washer		75	Differential - Front Axle
			85	Differential - Rear Axle
100349-02C	Washer		67	Hub Reduction - Front Axle / Rear Axle
100357-03X	Pin		91	Boom Hydraulic Installation
100369-18T	Split Clamp		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
100369-39Q	Clamp		31	Heating/ventilation Installation
100369-80K	Clamp		31	Heating/ventilation Installation
			199	Engine Installation
100370-06P	Elbow		309	Trailer Brake
100370-18C	Elbow		111	AMA - Installation
			149	Hydraulic Control Valve Installation
			331	Lift Cylinder Accumulator Kit
100370-29P	Fitting		125	Frame Level Installation
			149	Hydraulic Control Valve Installation
100370-31R	Elbow union		143	Hydraulic Pump Installation
100370-40B	Elbow		125	Frame Level Installation
100372-06G	T- union		117	Parking Brake Hydraulic Installation (accumulat
			149	Hydraulic Control Valve Installation
100372-08J	T- union		99	Lift & Compensation Cylinder Installation
100374-14H	Plug		9	Fuel Tank Installation
		6911759	207	Cooling System Installation
100374-20P	Plug		83	Housing - Rear Axle
100374-32C	Plug		67	Hub Reduction - Front Axle / Rear Axle
			71	Housing - Front Axle
100375-06H	Adaptor		107	Joystick Installation (without AMA)
			109	Joystick Installation (with AMA)
100375-15S	Reducer		165	Hydrostatic Hoses and Fittings
			213	Cooling Fan Circuit (with optional reverse)
100375-36Q	Union		307	Hook
100375-38S	Adapter		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			143	Hydraulic Pump Installation
			213	Cooling Fan Circuit (with optional reverse)
			303	Rear Hydraulic Hook
			309	Trailer Brake
100375-39T	Union		99	Lift & Compensation Cylinder Installation
			299	Rear Hydraulic Function
100375-40U	Adapter		149	Hydraulic Control Valve Installation
			165	Hydrostatic Hoses and Fittings
			211	Cooling Fan Circuit

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
100375-52H	Adapter		299	Rear Hydraulic Function
100375-59Q	Union		149	Hydraulic Control Valve Installation
			211	Cooling Fan Circuit
			213	Cooling Fan Circuit (with optional reverse)
100375-71D	Adapter		63	Axle Installation
			115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
100377-32D	Valve		139	Frame Level Cylinder
100378-03F	Shutoff		277	Tow Valve Installation
100400-19P	Bushing		71	Housing - Front Axle
			83	Housing - Rear Axle
100411-05U	Relay		187	Electrical Circuit Cab
100416-32S	Inclinometer		19	Cab & Fixations
100417-11D	Horn		183	Electrical Circuit Chassis
100417-16J	Reflector		313	Germany Version
100426-06B	Air Valve		261	DUNLOP 400/80-R24 153B Wheels
			263	DUNLOP 400/80-R24 156B Wheels
			265	TITAN 400/70-R20 Wheels
			267	DUNLOP 405/70-R20 SPT9 Wheels
			269	MICHELIN 440/70 XM37 Wheels
			271	BFGOODRICH 400/70-20 Wheels
100432-51C	Mirror		3	Chassis
100454-05T	Washer		17	Engine Basket
100454-17G	Washer		165	Hydrostatic Hoses and Fittings
100475-97B	Decal - Boom road position indi		313	Germany Version
100485-55S	Pin		75	Differential - Front Axle
			85	Differential - Rear Axle
100485-56T	Washer		75	Differential - Front Axle
			85	Differential - Rear Axle
100496-04H	Seal Kit		131	Telescope Cylinder
			133	Telescope Cylinder
			135	Tilt Cylinder
			139	Frame Level Cylinder
100496-74K	Seal Kit		131	Telescope Cylinder
			133	Telescope Cylinder
100505-24H	Breather		69	Reducer Box - Front Axle
			71	Housing - Front Axle
			83	Housing - Rear Axle
100520-18G	Female abutment		293	Windshield Protection Grill
100520-19H	Male abutment		293	Windshield Protection Grill
101241-25J	Plate		3	Chassis
101288-10B	Bushing		83	Housing - Rear Axle
101288-35D	Bushing		71	Housing - Front Axle
			83	Housing - Rear Axle
101288-39H	Spacer		75	Differential - Front Axle
			85	Differential - Rear Axle
101319-25M	Hose	6909304	111	AMA - Installation
101319-27P	Hose		101	Steering Hoses & Fittings (without damper)
101438-93V	Dome Light		25	Cab Assy II
101472-20M	Diode		179	Hydrostatic Motor Assy

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
10167.5	Screw		53	Parking Brake Lever
			101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
			121	Hydraulic Tank Installation
			143	Hydraulic Pump Installation
10662.5	Screw		121	Hydraulic Tank Installation
			143	Hydraulic Pump Installation
10882.9	Screw		17	Engine Basket
			147	Hydraulic Control Valve Fixations
10897.7	Washer		337	Jig + Hook
10942.1	Screw		341	Bales Pikes
10944.7	Screw		19	Cab & Fixations
10947.0	Screw		147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			309	Trailer Brake
11734.1	Collar		199	Engine Installation
12940.3	Clip		57	Fixed Boom Assy
13399.1	Screw		199	Engine Installation
13415.5	Washer		3	Chassis
			41	Control Panel Switches
			183	Electrical Circuit Chassis
			189	Electrical Circuit Engine
13416.3	Washer		11	Engine Cover
			53	Parking Brake Lever
			115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
			189	Electrical Circuit Engine
			255	Air Conditioning Installation
13669.7	Screw		213	Cooling Fan Circuit (with optional reverse)
14039.2	Screw		199	Engine Installation
15323.9	Washer		303	Rear Hydraulic Hook
15354.4	Screw		19	Cab & Fixations
			113	Service Brake Hydraulic Installation
			255	Air Conditioning Installation
15798.2	Screw		125	Frame Level Installation
26160.2	Screw		143	Hydraulic Pump Installation
26261.8	Clip		283	Matriculation Plate Option
26267.5	Sleeve		283	Matriculation Plate Option
26278.2	Oil Pressure Switch		189	Electrical Circuit Engine
			215	Cylinder Block
27052.0	Bush		125	Frame Level Installation
27089.2	Bulb		183	Electrical Circuit Chassis
27362.3	Bulb		183	Electrical Circuit Chassis
28439.8	Screw		199	Engine Installation
28689.8	Screw		165	Hydrostatic Hoses and Fittings
29272.2	Washer		21	Cab Assy
			25	Cab Assy II
			45	Door Assy
			195	Joystick / Susmic Installation
			293	Windshield Protection Grill

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
29649.1	Screw		61	Manual Quick Attach Lock
			119	Quick Attach Installation
			299	Rear Hydraulic Function
29713.5	Clamp		199	Engine Installation
30131.7	Washer		289	Rear View Mirror
30701.7	Clasp		283	Matriculation Plate Option
31825.3	Clip		99	Lift & Compensation Cylinder Installation
32090.3	Screw		91	Boom Hydraulic Installation
32397.2	Screw		45	Door Assy
			49	Rear Window Installation
32478.0	Plug		215	Cylinder Block
32539.9	Nut		227	Rocker Shaft
32974.8	Bush		3	Chassis
33107.4	Washer		63	Axle Installation
33219.7	Plug		223	Cylinder Head
			229	Timing Gear
33786.5	Screw		183	Electrical Circuit Chassis
34214.7	Screw		25	Cab Assy II
35497.7	Screw		347	Toothed Bucket
35949.7	Clamp		199	Engine Installation
36925.6	Engine Oil Filter Element		241	Oil Cooler and Filter
37148.4	Breather		121	Hydraulic Tank Installation
37469.4	Screw		49	Rear Window Installation
38025.3	Washer		121	Hydraulic Tank Installation
38441.2	Union		199	Engine Installation
38683.9	Collar		199	Engine Installation
39079.9	Screw		283	Matriculation Plate Option
			285	Trailer Plug
39584.8	Screw		287	Tow Hitch
			303	Rear Hydraulic Hook
			307	Hook
40968.0	Plug		223	Cylinder Head
40982.1	Screw		227	Rocker Shaft
40985.4	Seal		229	Timing Gear
41282.5	Solenoid		179	Hydrostatic Motor Assy
			297	2nd Hydraulic Function On Boom
42967.0	Olive		233	Fuel Injection Equipment
43088.4	Clip		339	Floating Pallet Forks
43824.2	Rivet		3	Chassis
			303	Rear Hydraulic Hook
			311	Bobcat Decals
			337	Jig + Hook
			339	Floating Pallet Forks
			341	Bales Pikes
			343	Rigid Forks Holder
			345	Toothless Buckets
			347	Toothed Bucket
44001.6	Screw		57	Fixed Boom Assy
44334.1	Nut		17	Engine Basket

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
46032.9	Rod		227	Rocker Shaft
46893.4	Stop		219	Crankshaft - Pistons
46894.2	Stop		219	Crankshaft - Pistons
48500.3	Screw		3	Chassis
4852110-DE	Operator manual in German la		313	Germany Version
4852120-IT	Manual		315	Italy Version
			317	Italy Version with hook
48829.6	Screw		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
			329	Pression Retaining Kit for Rear Hydr Function
50917.4	Collar		189	Electrical Circuit Engine
51851.4	Nut		11	Engine Cover
			35	Pedals Installation
			37	Steering Column Installation
			45	Door Assy
			59	End Boom Assy
			91	Boom Hydraulic Installation
			103	Steering Hoses & Fittings (with damper)
			113	Service Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
			121	Hydraulic Tank Installation
			125	Frame Level Installation
			149	Hydraulic Control Valve Installation
			183	Electrical Circuit Chassis
			189	Electrical Circuit Engine
			195	Joystick / Susmic Installation
			199	Engine Installation
			205	Exhaust System
			207	Cooling System Installation
			285	Trailer Plug
			297	2nd Hydraulic Function On Boom
			323	Damper Kit
			331	Lift Cylinder Accumulator Kit
53925.4	Screw		3	Chassis
54009.6	Screw		199	Engine Installation
			255	Air Conditioning Installation
54090.6	Pressure relief valve		157	Hydraulic Control Valve Lift Section
			159	Hydraulic Control Valve Tilt Section
			161	Hydraulic Control Valve Telescope Section
54194.6	Gauge		121	Hydraulic Tank Installation
54215.9	Plate		91	Boom Hydraulic Installation
54367.8	Pressure Switch		149	Hydraulic Control Valve Installation
55103.6	Tappet		227	Rocker Shaft
55438.6	Ignition Switch		41	Control Panel Switches
55698.5	Gear	100393-40B	221	Flywheel and Drive Pulley
55714.0	Bush		229	Timing Gear
55932.8	Clamp		91	Boom Hydraulic Installation
56028.4	Plug		99	Lift & Compensation Cylinder Installation
			149	Hydraulic Control Valve Installation
56029.2	Plug		149	Hydraulic Control Valve Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			303	Rear Hydraulic Hook
57189.3	Set of keys (ignition)		9	Fuel Tank Installation
			11	Engine Cover
			41	Control Panel Switches
			45	Door Assy
57702.3	Plug		3	Chassis
			21	Cab Assy
57734.6	Screw		63	Axle Installation
57752.8	Fuse		187	Electrical Circuit Cab
57753.6	Fuse		187	Electrical Circuit Cab
57792.4	Fuse		187	Electrical Circuit Cab
			255	Air Conditioning Installation
57793.2	Fuse		187	Electrical Circuit Cab
			191	Ventilation Reverse Electrical
58158.7	Ring		61	Manual Quick Attach Lock
58446.6	Bulb		25	Cab Assy II
			57	Fixed Boom Assy
			187	Electrical Circuit Cab
58880.6	Washer		3	Chassis
			125	Frame Level Installation
59736.9	Reflector		7	Ballast
59758.3	Light, RH		183	Electrical Circuit Chassis
59893.8	Brake pedal pad		35	Pedals Installation
59948.0	Light, LH		183	Electrical Circuit Chassis
60583.2	Thrust washer		219	Crankshaft - Pistons
60584.0	Stop washer		219	Crankshaft - Pistons
60794.5	Tooth support		347	Toothed Bucket
60795.2	Lock		347	Toothed Bucket
61182.2	Grease Nipple	81573.8	135	Tilt Cylinder
61357.0	Welding plate		91	Boom Hydraulic Installation
61358.8	Collar		91	Boom Hydraulic Installation
			289	Rear View Mirror
			303	Rear Hydraulic Hook
61378.6	Washer		25	Cab Assy II
61416.4	Screw		197	Security Circuit
62185.4	Screw		35	Pedals Installation
62231.6	Clamp		9	Fuel Tank Installation
			199	Engine Installation
			319	Fuel Pre-Filter Kit
62849.5	T- union		113	Service Brake Hydraulic Installation
			115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
62926.1	Splash plate		343	Rigid Forks Holder
62932.9	Protection		347	Toothed Bucket
62935.2	Bucket		345	Toothless Buckets
62948.5	Protection		347	Toothed Bucket
63225.7	Connecting Rod		77	Steering - Front Axle
			87	Steering - Rear Axle
63238.0	Breather		71	Housing - Front Axle

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			87	Steering - Rear Axle
63332.1	Cap		21	Cab Assy
			25	Cab Assy II
			51	Wiper Installation
			293	Windshield Protection Grill
63333.9	Nut cap		45	Door Assy
			51	Wiper Installation
63334.7	Nut cap		45	Door Assy
63349.5	Handle		21	Cab Assy
63359.4	Screw		37	Steering Column Installation
63848.6	T- union		51	Wiper Installation
63860.1	Mirror		289	Rear View Mirror
			303	Rear Hydraulic Hook
64010.2	Wedge		345	Toothless Buckets
			347	Toothed Bucket
64011.0	Blade		345	Toothless Buckets
64012.8	Blade		345	Toothless Buckets
64120.9	Fuse		187	Electrical Circuit Cab
64509.3	Glue		21	Cab Assy
			45	Door Assy
64581.2	Pin		229	Timing Gear
64588.7	Hub		229	Timing Gear
64590.3	Plate		229	Timing Gear
64624.0	Nut		233	Fuel Injection Equipment
64627.3	Bush		215	Cylinder Block
64628.1	Screw		215	Cylinder Block
64645.5	Dowel		251	Flywheel Housing and Starter
64655.4	Key		219	Crankshaft - Pistons
			227	Rocker Shaft
			229	Timing Gear
64752.9	O-ring, engine oil drain plug		231	Oil Sump - Oil Pump
64753.7	Plug, drain, engine oil		231	Oil Sump - Oil Pump
64796.6	Nut		215	Cylinder Block
64803.0	Spacer		249	Alternator
64822.0	Screw		83	Housing - Rear Axle
64823.8	Grease Nipple		83	Housing - Rear Axle
64824.6	Sleeve		83	Housing - Rear Axle
64827.9	Bushing		83	Housing - Rear Axle
64828.7	Bushing		83	Housing - Rear Axle
64829.5	O-ring		83	Housing - Rear Axle
64830.3	Support		83	Housing - Rear Axle
64831.1	Screw		83	Housing - Rear Axle
64833.7	Screw		77	Steering - Front Axle
			87	Steering - Rear Axle
64842.8	Plug		71	Housing - Front Axle
			83	Housing - Rear Axle
64851.9	Washer		75	Differential - Front Axle
			85	Differential - Rear Axle

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
64856.8	Counter Disc		75	Differential - Front Axle
64878.2	Screw		229	Timing Gear
			231	Oil Sump - Oil Pump
			233	Fuel Injection Equipment
			243	Water Pump and Thermostat
			245	Turbocharger
64960.8	Screw		241	Oil Cooler and Filter
64988.9	Stud		215	Cylinder Block
65226.3	Pin		287	Tow Hitch
65236.2	Adapter		149	Hydraulic Control Valve Installation
65285.9	Elbow		91	Boom Hydraulic Installation
			99	Lift & Compensation Cylinder Installation
			297	2nd Hydraulic Function On Boom
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
65397.2	Screw		3	Chassis
			57	Fixed Boom Assy
			59	End Boom Assy
			99	Lift & Compensation Cylinder Installation
65438.4	Hose		119	Quick Attach Installation
65614.0	Union		99	Lift & Compensation Cylinder Installation
			149	Hydraulic Control Valve Installation
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
65641.3	Adapter		99	Lift & Compensation Cylinder Installation
6565990	Decal		311	Bobcat Decals
65723.9	Union		307	Hook
65764.3	Circuit Breaker		183	Electrical Circuit Chassis
65784.1	Blank Plug		41	Control Panel Switches
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
6587458	Set of keys (fuel cap)		9	Fuel Tank Installation
66010.0	Washer		71	Housing - Front Axle
			83	Housing - Rear Axle
66011.8	Washer		71	Housing - Front Axle
			83	Housing - Rear Axle
66013.4	Pin		77	Steering - Front Axle
			87	Steering - Rear Axle
66014.2	Pin		77	Steering - Front Axle
			87	Steering - Rear Axle
66044.9	Nut		77	Steering - Front Axle
			87	Steering - Rear Axle
66048.0	Screw		75	Differential - Front Axle
			85	Differential - Rear Axle
6625575	Fuse		255	Air Conditioning Installation
66341.9	Seal		205	Exhaust System
66362.5	Seal kit		137	Quick Attach Cylinder
66392.2	Nut		137	Quick Attach Cylinder
66425.0	Screw		63	Axle Installation
6661114	Plug		9	Fuel Tank Installation
6661696	Cap, fuel (with lock)		9	Fuel Tank Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
66679.2	Rivet		255	Air Conditioning Installation
66716.2	Screw		19	Cab & Fixations
6684424	Blower		33	Heating/ventilation Fan Assy
6684425	Case		33	Heating/ventilation Fan Assy
6684426	Grille		33	Heating/ventilation Fan Assy
6684427	Radiator		33	Heating/ventilation Fan Assy
6684428	Mount		33	Heating/ventilation Fan Assy
6684429	Rod		33	Heating/ventilation Fan Assy
6684430	Lever		33	Heating/ventilation Fan Assy
6684431	Clip		33	Heating/ventilation Fan Assy
6700388	Decal «diesel»		311	Bobcat Decals
67046.3	Adapter		165	Hydrostatic Hoses and Fittings
			277	Tow Valve Installation
67166.9	Spindle		3	Chassis
			125	Frame Level Installation
67172.7	Blade		345	Toothless Buckets
67173.5	Wedge		345	Toothless Buckets
67196.6	Elbow		105	Steering Hydraulics Cab
			113	Service Brake Hydraulic Installation
67198.2	Hose		125	Frame Level Installation
6809599	Plate		21	Cab Assy
6809625	Decal - Door logo		311	Bobcat Decals
6809627	Decal - Bottom side engine cov		311	Bobcat Decals
68509.9	Screw		9	Fuel Tank Installation
68566.9	Screw		41	Control Panel Switches
			299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
68609.7	Union	6910603	121	Hydraulic Tank Installation
			149	Hydraulic Control Valve Installation
			199	Engine Installation
			207	Cooling System Installation
			211	Cooling Fan Circuit
			213	Cooling Fan Circuit (with optional reverse)
68656.8	Mounting Block		125	Frame Level Installation
68948.9	Bucket		345	Toothless Buckets
6908050	Decal - IR rear		311	Bobcat Decals
6908071	Support		199	Engine Installation
6908091	Flange		121	Hydraulic Tank Installation
			143	Hydraulic Pump Installation
6908100	Exhaust muffler		205	Exhaust System
6908165	Plate, engine basket, rear		11	Engine Cover
6908170	Pin		17	Engine Basket
6908174	Support		289	Rear View Mirror
6908180	Support		255	Air Conditioning Installation
6908181	Spindle		255	Air Conditioning Installation
6908248	Plate		3	Chassis
6908252	Wheel wedge bracket		279	Wheel Wedge Option
6908363	Rain-proof cap		199	Engine Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6908476	Steering column		37	Steering Column Installation
6908477	Steering wheel		37	Steering Column Installation
6908478	Brake pedal		35	Pedals Installation
6908479	Pedal shaft		35	Pedals Installation
6908480	Pedal		35	Pedals Installation
6908586	Hose		199	Engine Installation
6908594	Hose		107 109	Joystick Installation (without AMA) Joystick Installation (with AMA)
6908595	Hose		113	Service Brake Hydraulic Installation
6908633	Forks lock		339	Floating Pallet Forks
6908638	Stop		339	Floating Pallet Forks
6908656	Drift		339	Floating Pallet Forks
6908659	Forks support		339	Floating Pallet Forks
6908663	Plate		199	Engine Installation
6908672	Hose		107 109	Joystick Installation (without AMA) Joystick Installation (with AMA)
6908786	Glass, roof		21	Cab Assy
6908787	Glass, rear cab		49	Rear Window Installation
6908788	Glass, right side		21	Cab Assy
6908789	Glass, left side		25	Cab Assy II
6908790	Windshield		21	Cab Assy
6908791	Glass, lower part door		45	Door Assy
6908792	Glass, upper part door		45	Door Assy
6908847	Seal		17	Engine Basket
6908901	Hose, expansion tank		199	Engine Installation
6908902	Hose		199	Engine Installation
6909020	Plate		11	Engine Cover
6909147	Spindle		3	Chassis
6909205	Joystick spacer		195	Joystick / Susmic Installation
6909206	Support		195	Joystick / Susmic Installation
6909253	Hose		99	Lift & Compensation Cylinder Installation
6909254	Hose		97	Boom Hydraulic Supply
6909321	Tyre		265	TITAN 400/70-R20 Wheels
6909324	Service brake switch		35 187	Pedals Installation Electrical Circuit Cab
6909334	Set of wheels		265	TITAN 400/70-R20 Wheels
6909335	R.H. wheel assy		265	TITAN 400/70-R20 Wheels
6909336	L.H. wheel assy		265	TITAN 400/70-R20 Wheels
6909356	Instrument panel		41	Control Panel Switches
6909362	Accumulator		331	Lift Cylinder Accumulator Kit
6909363	Valve, lift cylinder		99	Lift & Compensation Cylinder Installation
6909383	Inching switch (detector)		35 187	Pedals Installation Electrical Circuit Cab
6909391	Support		255	Air Conditioning Installation
6909434	Hose		117	Parking Brake Hydraulic Installation (accumulat
6909439	Bush		3	Chassis

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6909447	Hydraulic pump		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			121	Hydraulic Tank Installation
			143	Hydraulic Pump Installation
			145	Hydraulic Pump Assy
6909609	Lock, engine cover		11	Engine Cover
6909611	Lock assy		9	Fuel Tank Installation
6909711	Electric plug		283	Matriculation Plate Option
			285	Trailer Plug
6909712	Plug		3	Chassis
6909730	Support		285	Trailer Plug
6909731	Plate		283	Matriculation Plate Option
6909739	Union		121	Hydraulic Tank Installation
6909745	Hose		165	Hydrostatic Hoses and Fittings
6909746	Hose		165	Hydrostatic Hoses and Fittings
6909767	Fuse		189	Electrical Circuit Engine
6909780	Pipe		165	Hydrostatic Hoses and Fittings
6909809	Hydraulic motor (2 speed)		141	Hydraulic Motor
			207	Cooling System Installation
			211	Cooling Fan Circuit
			213	Cooling Fan Circuit (with optional reverse)
6909815	Fuel level sensor		183	Electrical Circuit Chassis
6909839	Adapter		105	Steering Hydraulics Cab
6909852	Elbow		105	Steering Hydraulics Cab
6909871	Support		197	Security Circuit
6909872	Trailer fitting option		287	Tow Hitch
6909875	Plug		199	Engine Installation
6909903	Clip		39	Cowling Installation
			51	Wiper Installation
6909904	Cover		39	Cowling Installation
6909910	Button		39	Cowling Installation
6909930	Seal		39	Cowling Installation
6909931	Seal		39	Cowling Installation
6909932	Seal		39	Cowling Installation
6909933	Seal		39	Cowling Installation
6909934	Seal		39	Cowling Installation
6909935	Seal		37	Steering Column Installation
6909947	Seals kit		133	Telescope Cylinder
6909948	Cylinder, barrel		131	Telescope Cylinder
6909949	Rod		131	Telescope Cylinder
6909950	Spacer		131	Telescope Cylinder
6909951	Cylinder, barrel		133	Telescope Cylinder
6909952	Cylinder head		133	Telescope Cylinder
6909954	Piston		133	Telescope Cylinder
6909959	Rivet		21	Cab Assy
6909961	Plate		25	Cab Assy II
6909963	Washer		51	Wiper Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6909973	Bellow steering column		39	Cowling Installation
6909977	Plate		37	Steering Column Installation
6909980	Valve, relief		131	Telescope Cylinder
			133	Telescope Cylinder
6909981	Valve, over center		131	Telescope Cylinder
			133	Telescope Cylinder
6909993	Screw		37	Steering Column Installation
6909995	Screw		39	Cowling Installation
6909997	Screw		21	Cab Assy
6910049	Fuel option		313	Germany Version
6910105	Wheel wedge option		313	Germany Version
6910150	Screw		17	Engine Basket
6910160	Hose		149	Hydraulic Control Valve Installation
6910161	Hose		165	Hydrostatic Hoses and Fittings
6910201	Hose		105	Steering Hydraulics Cab
6910206	AMA valve		111	AMA - Installation
6910208	Valve		147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
6910213	Battery door		9	Fuel Tank Installation
6910264	Hose		199	Engine Installation
6910272	Seal		17	Engine Basket
6910300	Pivot pin		99	Lift & Compensation Cylinder Installation
6910301	Pivot pin		99	Lift & Compensation Cylinder Installation
6910313	Plate		41	Control Panel Switches
6910314	Joystick		107	Joystick Installation (without AMA)
			109	Joystick Installation (with AMA)
			187	Electrical Circuit Cab
			193	Joystick
			195	Joystick / Susmic Installation
6910390	Hose		149	Hydraulic Control Valve Installation
6910496	Tube		7	Ballast
6910502	Cab filter		25	Cab Assy II
6910503	Box filter		25	Cab Assy II
6910504	Seal		25	Cab Assy II
6910505	Screw		25	Cab Assy II
			39	Cowling Installation
			41	Control Panel Switches
			51	Wiper Installation
6910512	Tube		299	Rear Hydraulic Function
6910513	Tube		299	Rear Hydraulic Function
6910517	Protection		299	Rear Hydraulic Function
6910523	Support		299	Rear Hydraulic Function
6910533	Hydrostatic Pump Assy		169	Hydrostatic Pump Assy
6910535	Tube		303	Rear Hydraulic Hook
6910536	Tube		303	Rear Hydraulic Hook
6910539	Handle		45	Door Assy
6910540	Handle with key		45	Door Assy

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6910543	Handle		45	Door Assy
6910544	Cable		45	Door Assy
6910545	Cable		45	Door Assy
6910546	Lock		45	Door Assy
6910547	Hook		45	Door Assy
6910552	Lock		25	Cab Assy II
6910554	Hinge assy		45	Door Assy
6910557	Bellows and connection		53	Parking Brake Lever
			55	Parking Brake Lever
6910573	Hose		121	Hydraulic Tank Installation
6910594	Decal - Oil level		311	Bobcat Decals
6910599	Hose		121	Hydraulic Tank Installation
			165	Hydrostatic Hoses and Fittings
6910602	Hose		121	Hydraulic Tank Installation
6910622	Hose		207	Cooling System Installation
6910649	Abutment		35	Pedals Installation
			37	Steering Column Installation
6910660	Hydraulic block		147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
6910691	Hose		125	Frame Level Installation
			213	Cooling Fan Circuit (with optional reverse)
			309	Trailer Brake
6910697	Screw		25	Cab Assy II
			195	Joystick / Susmic Installation
6910702	Plate		193	Joystick
6910703	Bellows		193	Joystick
6910704	Regulation kit		155	Hydraulic Control Valve: In- and Outlet
6910705	Flow regulator		155	Hydraulic Control Valve: In- and Outlet
6910706	Outlet element		155	Hydraulic Control Valve: In- and Outlet
6910707	Tie rod kit		155	Hydraulic Control Valve: In- and Outlet
6910708	Set of seals		155	Hydraulic Control Valve: In- and Outlet
6910709	Pipe thread plug		155	Hydraulic Control Valve: In- and Outlet
6910710	Set of seals		155	Hydraulic Control Valve: In- and Outlet
6910712	Hydraulic operation		157	Hydraulic Control Valve Lift Section
			159	Hydraulic Control Valve Tilt Section
6910713	Set of seals		157	Hydraulic Control Valve Lift Section
			159	Hydraulic Control Valve Tilt Section
			161	Hydraulic Control Valve Telescope Section
6910714	Spool return		161	Hydraulic Control Valve Telescope Section
			163	Hydraulic Control Valve Auxiliary Hydraulics Se
6910715	Electrohydro. Interface		161	Hydraulic Control Valve Telescope Section
			163	Hydraulic Control Valve Auxiliary Hydraulics Se
6910716	Electrohydro. actuation		161	Hydraulic Control Valve Telescope Section
6910717	Set of seals		161	Hydraulic Control Valve Telescope Section
			163	Hydraulic Control Valve Auxiliary Hydraulics Se
6910718	Electrohydro. actuation		163	Hydraulic Control Valve Auxiliary Hydraulics Se
6910719	Filter		163	Hydraulic Control Valve Auxiliary Hydraulics Se
6910724	Air filter cover		199	Engine Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6910726	Air filter element, secondary		199	Engine Installation
6910727	Ring		199	Engine Installation
6910728	Lever assy		193	Joystick
6910733	Upper door assy	6909925	45	Door Assy
6910734	Upper door	6910509	45	Door Assy
6910735	Upper door and glass		45	Door Assy
6910736	Lower door assy	6909923	45	Door Assy
6910737	Lower door	6910510	45	Door Assy
6910738	Lower door and glass		45	Door Assy
6910741	Plug		121	Hydraulic Tank Installation
6910742	Inlet element		155	Hydraulic Control Valve: In- and Outlet
6910743	Equipment element		155	Hydraulic Control Valve: In- and Outlet
6910745	Telescope element		155	Hydraulic Control Valve: In- and Outlet
6910748	Tilting element		155	Hydraulic Control Valve: In- and Outlet
6910749	Lifting element		155	Hydraulic Control Valve: In- and Outlet
6910778	Hydraulic pipe		309	Trailer Brake
6910779	Hose		309	Trailer Brake
6910798	Hose		277	Tow Valve Installation
6910822	Collector		125 149	Frame Level Installation Hydraulic Control Valve Installation
6910836	Hose		101 103	Steering Hoses & Fittings (without damper) Steering Hoses & Fittings (with damper)
6910852	Chain		61	Manual Quick Attach Lock
6910878	Roof cowling		25	Cab Assy II
6910879	Fuse panel top cowling		39	Cowling Installation
6910881	Fuse panel side cowling		39	Cowling Installation
6910882	Dash cowling		39	Cowling Installation
6910883	Steering column cowling		39	Cowling Installation
6910891	Wire harness		183	Electrical Circuit Chassis
6910892	Wire harness		183	Electrical Circuit Chassis
6910895	Switch, aux. hydr.		41	Control Panel Switches
6910929	Internal grille		25	Cab Assy II
6910930	Guide		21	Cab Assy
6910931	Plug		21	Cab Assy
6910932	Nut		21	Cab Assy
6910933	Spacer		21	Cab Assy
6910934	Plate		21	Cab Assy
6910935	Screw		21	Cab Assy
6910946	Catch		25	Cab Assy II
6910947	Catch protect		25	Cab Assy II
6910948	Catch fixation		25	Cab Assy II
6910949	Washer		25	Cab Assy II
6910951	Screw		41 255	Control Panel Switches Air Conditioning Installation
6910952	Washer		35 187	Pedals Installation Electrical Circuit Cab

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
		98473.2	107	Joystick Installation (without AMA)
		98473.2	109	Joystick Installation (with AMA)
6910955	Micro relay		187	Electrical Circuit Cab
			297	2nd Hydraulic Function On Boom
6910966	Support		207	Cooling System Installation
6910969	Hose, upper radiator		199	Engine Installation
6910970	Hose, lower radiator		199	Engine Installation
6910972	Pipe		121	Hydraulic Tank Installation
			207	Cooling System Installation
6910975	Spacer		49	Rear Window Installation
6910976	Washer		49	Rear Window Installation
			51	Wiper Installation
6910977	Washer		49	Rear Window Installation
6910978	Guide		49	Rear Window Installation
6910979	Guide		49	Rear Window Installation
6910981	Washer pipe		51	Wiper Installation
6910982	Washer pipe		51	Wiper Installation
6910983	Washer pipe		51	Wiper Installation
6910984	Spacer		45	Door Assy
6910985	Plate		207	Cooling System Installation
6910988	Washer		45	Door Assy
6910989	Spacer		45	Door Assy
6910990	Washer		45	Door Assy
6910991	Washer		45	Door Assy
6910992	Nut cap		45	Door Assy
6910993	Hook		45	Door Assy
6910994	Lock cover		45	Door Assy
6910996	Screw		45	Door Assy
6910997	Screw		45	Door Assy
6910999	Screw		25	Cab Assy II
6911000	Seal		45	Door Assy
6911001	Seal		45	Door Assy
6911006	Roof wiper arm	6911712	51	Wiper Installation
6911013	Decal		265	TITAN 400/70-R20 Wheels
6911014	Decal		261	DUNLOP 400/80-R24 153B Wheels
6911019	Decal		267	DUNLOP 405/70-R20 SPT9 Wheels
6911028	Hose		213	Cooling Fan Circuit (with optional reverse)
6911037	Hose		213	Cooling Fan Circuit (with optional reverse)
6911056	Hose		309	Trailer Brake
6911059	Hose		125	Frame Level Installation
6911074	Feed hose, fuel		9	Fuel Tank Installation
6911079	Hydraulic block		299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
6911081	Frame level selector valve		125	Frame Level Installation
6911082	Hydraulic valve		125	Frame Level Installation
6911140	Hydraulic filter		121	Hydraulic Tank Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6911207	Support		255	Air Conditioning Installation
6911209	Support		255	Air Conditioning Installation
6911210	Support		255	Air Conditioning Installation
6911213	Seal		207	Cooling System Installation
6911253	Sill plate		11	Engine Cover
6911276	Indicator filing		199	Engine Installation
6911325	Transmission box		187 195	Electrical Circuit Cab Joystick / Susmic Installation
6911354	Decal		311	Bobcat Decals
6911357	Wire harness		183	Electrical Circuit Chassis
6911363	Control box		187 195	Electrical Circuit Cab Joystick / Susmic Installation
6911367	Inclinometer		183	Electrical Circuit Chassis
6911377	Alternator		189 249	Electrical Circuit Engine Alternator
6911386	Support		3	Chassis
6911400	Switch, water temp		189	Electrical Circuit Engine
6911476	Seal		17	Engine Basket
6911486	Accumulator		117	Parking Brake Hydraulic Installation (accumulat
6911487	Accumulator		149	Hydraulic Control Valve Installation
6911724	Engine wiring harness		189	Electrical Circuit Engine
6911726	Wire harness		183	Electrical Circuit Chassis
6911728	Locking switch	96606.9	41	Control Panel Switches
6911733	Fuse box		187 195	Electrical Circuit Cab Joystick / Susmic Installation
6911738	Switch	92971.1	197	Security Circuit
6911746	Seal		207	Cooling System Installation
6911753	Sponge plate		15	Engine Sound Proofing
6911760	Sponge plate		15	Engine Sound Proofing
6911761	Sponge plate		15	Engine Sound Proofing
6911762	Sponge plate		15	Engine Sound Proofing
6911763	Sponge plate		15	Engine Sound Proofing
6911764	Sponge plate		15	Engine Sound Proofing
6911767	Flange		121 143	Hydraulic Tank Installation Hydraulic Pump Installation
6911769	Seat assy		25 29	Cab Assy II Seat & Suspension
6911772	Sponge plate		15	Engine Sound Proofing
6911773	Sponge plate		15	Engine Sound Proofing
6911778	Barb		15	Engine Sound Proofing
6911779	Clip		15	Engine Sound Proofing
6911798	Hub		207	Cooling System Installation
6911812	Collar		117	Parking Brake Hydraulic Installation (accumulat
6911817	Hose		149	Hydraulic Control Valve Installation
6911845	Valve		147 149 299	Hydraulic Control Valve Fixations Hydraulic Control Valve Installation Rear Hydraulic Function

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6911846	Screw		31	Heating/ventilation Installation
6911850	Gear		243	Water Pump and Thermostat
6911852	Screw		221	Flywheel and Drive Pulley
6911853	Collar		231	Oil Sump - Oil Pump
6911854	Union		233	Fuel Injection Equipment
6911862	Piston cooling jet		215	Cylinder Block
6911863	Washer		245	Turbocharger
6911864	Washer		237	Fuel Feeding
6911865	Washer		227	Rocker Shaft
6911866	Screw		239	Cylinder Head Cover
6911867	Screw		239	Cylinder Head Cover
6911868	Stud		245	Turbocharger
6911869	Screw		231 237	Oil Sump - Oil Pump Fuel Feeding
6911870	Screw		249	Alternator
6911871	Screw		249	Alternator
6911872	Screw		249	Alternator
6911873	Screw		243	Water Pump and Thermostat
6911874	Screw		233	Fuel Injection Equipment
6911875	Screw		227	Rocker Shaft
6911876	Screw		227	Rocker Shaft
6911877	Washer		233	Fuel Injection Equipment
6911878	O-ring		239	Cylinder Head Cover
6911879	O-ring		239	Cylinder Head Cover
6911880	O-ring		241	Oil Cooler and Filter
6911881	O-ring		223	Cylinder Head
6911882	O-ring, thermostat		243	Water Pump and Thermostat
6911883	O-ring, oil filter		241	Oil Cooler and Filter
6911885	O-ring		243	Water Pump and Thermostat
6911886	O-ring		243	Water Pump and Thermostat
6911887	Oil seal housing		215	Cylinder Block
6911888	Seal		223	Cylinder Head
6911889	Collar		245	Turbocharger
6911890	Collar		237	Fuel Feeding
6911891	Plug		227	Rocker Shaft
6911892	Plug		215	Cylinder Block
6911893	Plug		215	Cylinder Block
6911894	Plug		229	Timing Gear
6911895	Thermostat		189 243	Electrical Circuit Engine Water Pump and Thermostat
6911896	Cooler		241	Oil Cooler and Filter
6911897	Conrod kit		219	Crankshaft - Pistons
6911898	Fuel injection pump		233	Fuel Injection Equipment
6911899	Atomiser assy		233	Fuel Injection Equipment
6911900	Nozzle		233	Fuel Injection Equipment

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6911903	Feeding pipe		237	Fuel Feeding
6911904	Hose		233	Fuel Injection Equipment
6911907	Filter element, fuel		237	Fuel Feeding
6911908	Glow plug		233	Fuel Injection Equipment
6911909	Turbocharger		245	Turbocharger
6911910	Snap ring		227	Rocker Shaft
6911911	Switch, water temp		189 223	Electrical Circuit Engine Cylinder Head
6911912	Head filter		241	Oil Cooler and Filter
6911913	Starter motor		189 251	Electrical Circuit Engine Flywheel Housing and Starter
6911914	Bush		219	Crankshaft - Pistons
6911915	Bush		215	Cylinder Block
6911916	Washer		229	Timing Gear
6911917	Pulley		249	Alternator
6911918	Gear		233	Fuel Injection Equipment
6911919	Gear		229	Timing Gear
6911920	Gear		229	Timing Gear
6911921	Camshaft		227	Rocker Shaft
6911922	Exhaust valve		223	Cylinder Head
6911923	Inlet valve		223	Cylinder Head
6911924	Spring		227	Rocker Shaft
6911925	Spring		223	Cylinder Head
6911926	Spring		239	Cylinder Head Cover
6911927	Dipstick		231	Oil Sump - Oil Pump
6911928	Plug		215	Cylinder Block
6911929	Screw		219	Crankshaft - Pistons
6911930	Plug		215	Cylinder Block
6911931	Plug		215	Cylinder Block
6911932	Plug		215	Cylinder Block
6911933	Screw		223	Cylinder Head
6911934	Screw		223	Cylinder Head
6911935	Banjo bolt		245	Turbocharger
6911936	Plug		215	Cylinder Block
6911937	Plug		215	Cylinder Block
6911938	Plug		241	Oil Cooler and Filter
6911939	Plug		223	Cylinder Head
6911940	Plug, oil filter		241	Oil Cooler and Filter
6911942	Spacer		231	Oil Sump - Oil Pump
6911943	Spacer		237	Fuel Feeding
6911945	Insert		223	Cylinder Head
6911946	Insert		223	Cylinder Head
6911947	Cap		223	Cylinder Head
6911948	Adaptor		245	Turbocharger
6911949	Hose		245	Turbocharger

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6911951	Injection pipe		233	Fuel Injection Equipment
6911952	Injection pipe		233	Fuel Injection Equipment
6911953	Injection pipe		233	Fuel Injection Equipment
6911954	Injection pipe		233	Fuel Injection Equipment
6911955	Pipe		245	Turbocharger
6911956	Pipe		231	Oil Sump - Oil Pump
6911957	Pipe		245	Turbocharger
6911958	Plate		223	Cylinder Head
6911959	Lever		249	Alternator
6911960	Cover plate		239	Cylinder Head Cover
6911961	Lifting plate		223 229	Cylinder Head Timing Gear
6911963	Gasket		229	Timing Gear
6911964	Plate		215	Cylinder Block
6911965	Gasket		231	Oil Sump - Oil Pump
6911966	Bracket		233	Fuel Injection Equipment
6911967	Lifting plate		223	Cylinder Head
6911968	Seal		239	Cylinder Head Cover
6911969	Cylinder head gasket		223	Cylinder Head
6911970	Gasket		231	Oil Sump - Oil Pump
6911971	Gasket		229	Timing Gear
6911973	Gasket		245	Turbocharger
6911974	Pump gasket		243	Water Pump and Thermostat
6911975	Gasket		223	Cylinder Head
6911976	Gasket, oil cooler housing		241	Oil Cooler and Filter
6911977	Gasket, oil cooler		241	Oil Cooler and Filter
6911978	Gasket		245	Turbocharger
6911979	Gasket		245	Turbocharger
6911980	Gasket		245	Turbocharger
6911981	Gasket		245	Turbocharger
6911982	Seal		239	Cylinder Head Cover
6911983	Gasket		215 241	Cylinder Block Oil Cooler and Filter
6911985	Case		229	Timing Gear
6911986	Oil sump		231	Oil Sump - Oil Pump
6911987	Bracket		237	Fuel Feeding
6911988	Bracket		231	Oil Sump - Oil Pump
6911989	Clamp		233	Fuel Injection Equipment
6911990	Connector		237	Fuel Feeding
6911991	Connection		237	Fuel Feeding
6911992	Exhaust elbow		245	Turbocharger
6911993	Manifold		245	Turbocharger
6911994	Cap		239	Cylinder Head Cover
6911995	Cap		239	Cylinder Head Cover
6911996	Cover		239	Cylinder Head Cover

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6911998	Bracket		245	Turbocharger
6911999	Bracket		249	Alternator
6912002	Rocker assy		227	Rocker Shaft
6912003	Rocker assy		227	Rocker Shaft
6912004	Rocker assembly		227	Rocker Shaft
6912005	Spindle assy		227	Rocker Shaft
6912006	Pipe pump		233	Fuel Injection Equipment
6912007	Dipstick tube		231	Oil Sump - Oil Pump
6912008	Pipe		245	Turbocharger
6912009	Lift pump		237	Fuel Feeding
6912010	Oil pump		231	Oil Sump - Oil Pump
6912011	Pipe assy		243	Water Pump and Thermostat
6912012	Water inlet assy		243	Water Pump and Thermostat
6912014	Pipe assy		239	Cylinder Head Cover
6912015	Oil cooler		241	Oil Cooler and Filter
6912016	Cover assy		229	Timing Gear
6912017	Head cover assy		239	Cylinder Head Cover
6912018	Clip		233	Fuel Injection Equipment
6912019	Bottom joint and gasket		253	Engine Gaskets Sets
6912020	Top joint and gasket kit		253	Engine Gaskets Sets
6912021	Bearing		219	Crankshaft - Pistons
6912022	Bearing kit		219	Crankshaft - Pistons
6912023	Mounting kit		237	Fuel Feeding
6912024	Water pump kit		243	Water Pump and Thermostat
6912025	Repair kit		243	Water Pump and Thermostat
6912026	Piston ring kit		219	Crankshaft - Pistons
6912027	Cylinder block kit		215	Cylinder Block
6912028	Cylinder head assy		223	Cylinder Head
6912029	Crankshaft assy		219	Crankshaft - Pistons
6912030	Bar		233	Fuel Injection Equipment
6912031	Bearing kit		219	Crankshaft - Pistons
6912032	Bearing kit		219	Crankshaft - Pistons
6912033	Bearing kit		219	Crankshaft - Pistons
6912034	Bearing		219	Crankshaft - Pistons
6912035	Bearing		219	Crankshaft - Pistons
6912036	Bearing		219	Crankshaft - Pistons
6912038	Cap		233	Fuel Injection Equipment
6912040	Conrod kit		219	Crankshaft - Pistons
6912041	Conrod kit		219	Crankshaft - Pistons
6912042	Conrod kit		219	Crankshaft - Pistons
6912043	Conrod kit		219	Crankshaft - Pistons
6912044	Conrod kit		219	Crankshaft - Pistons
6912046	Crankshaft gear		219	Crankshaft - Pistons
6912047	Plug		229	Timing Gear
6912049	Belt		221	Flywheel and Drive Pulley

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6912050	Piston assy		219	Crankshaft - Pistons
6912051	Screw		215	Cylinder Block
6912056	Screw		231	Oil Sump - Oil Pump
6912058	Housing		173	Hydrostatic Pump Assy
6912059	Bearing		173	Hydrostatic Pump Assy
6912060	Lever		173	Hydrostatic Pump Assy
6912061	Support		173	Hydrostatic Pump Assy
6912062	Screw		173	Hydrostatic Pump Assy
6912063	Pin		173	Hydrostatic Pump Assy
6912064	Seal		173	Hydrostatic Pump Assy
6912065	Housing		173	Hydrostatic Pump Assy
6912066	Plug		173	Hydrostatic Pump Assy
6912067	Screw		173	Hydrostatic Pump Assy
6912068	Screw		173	Hydrostatic Pump Assy
6912069	Valve		173	Hydrostatic Pump Assy
6912070	Adaptor		173	Hydrostatic Pump Assy
6912101	Wire harness		223	Cylinder Head
6912102	Grip		55	Parking Brake Lever
6912103	Lever body		55	Parking Brake Lever
6912104	Switch		55	Parking Brake Lever
6912108	Rubber band		77	Steering - Front Axle
6912226	Hose		299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
6912297	Abacus card		271	BFGOODRICH 400/70-20 Wheels
6912312	Abacus card		267	DUNLOP 405/70-R20 SPT9 Wheels
6912313	Abacus card		267	DUNLOP 405/70-R20 SPT9 Wheels
6912320	Abacus card		265	TITAN 400/70-R20 Wheels
6912321	Abacus card		265	TITAN 400/70-R20 Wheels
6912325	Abacus card		261	DUNLOP 400/80-R24 153B Wheels
6912329	Abacus card		261	DUNLOP 400/80-R24 153B Wheels
6912439	Engine cover soundproofing		15	Engine Sound Proofing
6912440	Rear cover soundproofing		15	Engine Sound Proofing
6912455	Adhesive		39	Cowling Installation
			187	Electrical Circuit Cab
			195	Joystick / Susmic Installation
6912458	Joystick cowling		39	Cowling Installation
6912465	Switch		281	Valve Braking Switch Option
6912466	Union		281	Valve Braking Switch Option
6912467	Hose		149	Hydraulic Control Valve Installation
6912468	Switch option on valve braking		313	Germany Version
6912483	Spacer		147	Hydraulic Control Valve Fixations
6912484	Hydr. control valve assy		121	Hydraulic Tank Installation
			147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			155	Hydraulic Control Valve: In- and Outlet
			157	Hydraulic Control Valve Lift Section
			159	Hydraulic Control Valve Tilt Section

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			163	Hydraulic Control Valve Auxiliary Hydraulics Se
6912485	Hinge		11	Engine Cover
6912493	Hose		109	Joystick Installation (with AMA)
			111	AMA - Installation
6912494	Hose		107	Joystick Installation (without AMA)
			109	Joystick Installation (with AMA)
6912510	Bushing		77	Steering - Front Axle
6912522	Valve		145	Hydraulic Pump Assy
6912523	Set of seals for valve		145	Hydraulic Pump Assy
6912524	Set of seals		145	Hydraulic Pump Assy
6912525	Set of seals		145	Hydraulic Pump Assy
6912526	Block		149	Hydraulic Control Valve Installation
6912527	Valve		149	Hydraulic Control Valve Installation
6912528	Coil		149	Hydraulic Control Valve Installation
6912529	Nut		149	Hydraulic Control Valve Installation
6912530	Block		149	Hydraulic Control Valve Installation
6912531	Valve		149	Hydraulic Control Valve Installation
6912532	Collector		111	AMA - Installation
6912533	Valve		111	AMA - Installation
			173	Hydrostatic Pump Assy
6912534	Coil		111	AMA - Installation
6912535	Set of plugs + seals		299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
6912536	Coil		125	Frame Level Installation
6912537	Coil		125	Frame Level Installation
6912538	Set of seals		141	Hydraulic Motor
6912539	Valve		141	Hydraulic Motor
6912540	Valve		141	Hydraulic Motor
6912541	Coil		141	Hydraulic Motor
6912542	Cooler, water/oil		207	Cooling System Installation
6912543	Housing		207	Cooling System Installation
6912544	Fan grate		207	Cooling System Installation
6912545	Hose		207	Cooling System Installation
6912546	Seals kit		149	Hydraulic Control Valve Installation
6912547	Seals kit		149	Hydraulic Control Valve Installation
6912548	Set of seals		121	Hydraulic Tank Installation
6912549	Plugging indicator	6913238	121	Hydraulic Tank Installation
			189	Electrical Circuit Engine
6912550	Screw		207	Cooling System Installation
6912554	Valve plate		173	Hydrostatic Pump Assy
6912556	Support	71677.9	169	Hydrostatic Pump Assy
6912558	Cover assy		173	Hydrostatic Pump Assy
6912559	Spring guide		173	Hydrostatic Pump Assy
6912560	Washer		173	Hydrostatic Pump Assy
6912561	Guide bolt		173	Hydrostatic Pump Assy
6912562	O-ring		173	Hydrostatic Pump Assy

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6912564	Screw		173	Hydrostatic Pump Assy
6912567	Plate		173	Hydrostatic Pump Assy
6912568	Plug		173	Hydrostatic Pump Assy
6912572	Cap		121	Hydraulic Tank Installation
6912573	Coil		111	AMA - Installation
6912576	Spindle		81	Brakes - Front Axle
6912577	Washer	89935.1	81	Brakes - Front Axle
6912582	Telescope cyl assy		91	Boom Hydraulic Installation
6912585	Hub	97413.9	67	Hub Reduction - Front Axle / Rear Axle
6912587	Rubber band	89920.3	77	Steering - Front Axle
		89920.3	87	Steering - Rear Axle
6912903	Washer	75735.1	77	Steering - Front Axle
		75735.1	87	Steering - Rear Axle
6912905	Gear		69	Reducer Box - Front Axle
6912906	Gear		69	Reducer Box - Front Axle
6912908	Washer		71	Housing - Front Axle
6912909	Screw		77	Steering - Front Axle
6912911	Universal Drive Assembly		77	Steering - Front Axle
6912912	Stub Axle		77	Steering - Front Axle
6912913	Washer		77	Steering - Front Axle
6912914	Retaining Ring		77	Steering - Front Axle
6912931	Bearing	100398-15S	67	Hub Reduction - Front Axle / Rear Axle
6912932	Snap ring		87	Steering - Rear Axle
6913007	Telescope cyl assy		91	Boom Hydraulic Installation
			133	Telescope Cylinder
6913008	Support		273	Mudguard 20"
6913019	Arm stop		3	Chassis
6913021	Support		309	Trailer Brake
6913059	Hydraulic filter element		121	Hydraulic Tank Installation
6913148	Adhesive sponge		255	Air Conditioning Installation
6913153	Connecting rod		3	Chassis
6913187	Outer boom section		57	Fixed Boom Assy
6913192	“Z” bar link (cast iron)		59	End Boom Assy
6913193	Inner boom		59	End Boom Assy
6913204	Hose		121	Hydraulic Tank Installation
			165	Hydrostatic Hoses and Fittings
6913223	Front axle	88197.9	63	Axle Installation
6913225	Tube		321	Hydraulic Tank Filling Kit
6913238	Cap		321	Hydraulic Tank Filling Kit
6913244	Decal - Arm T3571		311	Bobcat Decals
6913245	Decal - Arm T3571L		311	Bobcat Decals
6913454	Hose	6911277	199	Engine Installation
6913490	Working light option		57	Fixed Boom Assy
6913526	Tank	6911094	121	Hydraulic Tank Installation
6913529	Indicator		3	Chassis
6913565	Hydrostatic pump		121	Hydraulic Tank Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			173	Hydrostatic Pump Assy
6913567	Breather support		121	Hydraulic Tank Installation
6913569	Seal	98583.8	121	Hydraulic Tank Installation
6913570	Strainer		121	Hydraulic Tank Installation
6913611	Hose		211	Cooling Fan Circuit
			213	Cooling Fan Circuit (with optional reverse)
6913644	Seal		17	Engine Basket
6913646	Seal		17	Engine Basket
6913649	Hose		121	Hydraulic Tank Installation
6913650	Hose		309	Trailer Brake
6913652	Hose		113	Service Brake Hydraulic Installation
6913653	Hose	69211.1	101	Steering Hoses & Fittings (without damper)
		69211.1	103	Steering Hoses & Fittings (with damper)
6913654	Hose		207	Cooling System Installation
6913655	Hose	6911111	149	Hydraulic Control Valve Installation
6913656	Hose	6912436	149	Hydraulic Control Valve Installation
6913658	Hose	6911825	149	Hydraulic Control Valve Installation
6913675	Hose		299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
6913684	Hose		309	Trailer Brake
6913764	Stability indicator and wire harn	6913047	41	Control Panel Switches
			187	Electrical Circuit Cab
6913936	Heating pipe		31	Heating/ventilation Installation
6914033	Hose	6913657	111	AMA - Installation
		85283.0	149	Hydraulic Control Valve Installation
6914064	Shock Absorber		199	Engine Installation
6914065	Shock Absorber		199	Engine Installation
6914082	Insulation		31	Heating/ventilation Installation
6914085	Radiator assy	6910317	207	Cooling System Installation
6914086	Nut		39	Cowling Installation
6914109	Captor		183	Electrical Circuit Chassis
			197	Security Circuit
6914142	Tyre		269	MICHELIN 440/70 XM37 Wheels
6914156	R.H. wheel assy		269	MICHELIN 440/70 XM37 Wheels
6914157	L.H. wheel assy		269	MICHELIN 440/70 XM37 Wheels
6914158	Shields		269	MICHELIN 440/70 XM37 Wheels
6914159	Abacus card		269	MICHELIN 440/70 XM37 Wheels
6914160	Abacus card		269	MICHELIN 440/70 XM37 Wheels
6914170	R.H. control panel plate	6910511	41	Control Panel Switches
6914199	Plate		207	Cooling System Installation
6914200	Plate		207	Cooling System Installation
6914214	Plate		207	Cooling System Installation
6914219	Foam		207	Cooling System Installation
6914222	Thermo switch		207	Cooling System Installation
6914256	Set of wheels		269	MICHELIN 440/70 XM37 Wheels
6914316	Damper		103	Steering Hoses & Fittings (with damper)
			323	Damper Kit

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6914407	Spacer		21	Cab Assy
6914523	Engine basket	6911088	17	Engine Basket
6914561	Lower support	6909974	39	Cowling Installation
6914586	Support for frame leveling knob		41	Control Panel Switches
6914640	Hose	6913654	211	Cooling Fan Circuit
6914643	Upper support		293	Windshield Protection Grill
6914651	L.H. lower support		293	Windshield Protection Grill
6914652	R.H. lower support		293	Windshield Protection Grill
6914657	Grill		293	Windshield Protection Grill
6914678	Seal		11	Engine Cover
6914735	Fuel tank	6910162	9	Fuel Tank Installation
6914736	Fuel tank		9	Fuel Tank Installation
6914746	Hose	6908560	165	Hydrostatic Hoses and Fittings
6914748	Seal	6912496	11	Engine Cover
6914787	Seal, upper part		25	Cab Assy II
6914788	Seal, lower part		25	Cab Assy II
6914807	Tube		331	Lift Cylinder Accumulator Kit
6914808	Clamp/support		331	Lift Cylinder Accumulator Kit
6914907	Battery		183	Electrical Circuit Chassis
6914942	Cable stop		45	Door Assy
6914963	R.H. wheel assy		263	DUNLOP 400/80-R24 156B Wheels
6914964	L.H. wheel assy		263	DUNLOP 400/80-R24 156B Wheels
6914975	Shields (4.25b)		263	DUNLOP 400/80-R24 156B Wheels
6914978	Abacus card		263	DUNLOP 400/80-R24 156B Wheels
6914979	Abacus card		263	DUNLOP 400/80-R24 156B Wheels
6915025	Connecting arm (machined)		59	End Boom Assy
6915048	Frame	6914714	3	Chassis
6915052	Set of wheels		263	DUNLOP 400/80-R24 156B Wheels
6915177	Damper kit		323	Damper Kit
6915178	Installation instructions		323	Damper Kit
6915235	Washer		9	Fuel Tank Installation
6915302	Installation Instruction		331	Lift Cylinder Accumulator Kit
6915306	Hose		329	Pression Retaining Kit for Rear Hydr Function
6915334	Spacer		207	Cooling System Installation
6915352	Flexible exhaust pipe	94677.2	205	Exhaust System
6915387	Support	6910153	147	Hydraulic Control Valve Fixations
6915448	Kit boom head reinforcement at		327	Kit Boom Head Reinforcement at Carriage Conn
6915449	Boom head reinforcement LH		327	Kit Boom Head Reinforcement at Carriage Conn
6915454	Boom head reinforcement RH		327	Kit Boom Head Reinforcement at Carriage Conn
6915461	Decal		271	BFGOODRICH 400/70-20 Wheels
6915465	Pipe	97207.5	31	Heating/ventilation Installation
6915482	Abacus card		271	BFGOODRICH 400/70-20 Wheels
6915503	R.H. wheel assy		271	BFGOODRICH 400/70-20 Wheels
6915504	L.H. wheel assy		271	BFGOODRICH 400/70-20 Wheels
6915508	Non-skid	6564833	21	Cab Assy

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
6915511	Tyre		271	BFGOODRICH 400/70-20 Wheels
6915513	Support	6909591	11	Engine Cover
6915517	Belt protector		207	Cooling System Installation
		6914411	255	Air Conditioning Installation
6915519	Mat	97089.7	21	Cab Assy
6915523	Hydraulic tank filling kit		321	Hydraulic Tank Filling Kit
6915524	Lever assy		55	Parking Brake Lever
			115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
6915531	Boom head reinforcement at "Z		325	Kit Boom Head Reinforcement at "Z" Bar Pin
6915533	Kit boom head reinforcement at		325	Kit Boom Head Reinforcement at "Z" Bar Pin
6915534	Motor, rear wiper	6909922	49	Rear Window Installation
6915535	Roof wiper motor	63856.9	51	Wiper Installation
6915574	Hose	6910200	105	Steering Hydraulics Cab
6915575	Hose	6910200	105	Steering Hydraulics Cab
6915576	Hose	6910200	105	Steering Hydraulics Cab
6915747	Support	97503.7	37	Steering Column Installation
6915869	Fuel pre-filter Kit		319	Fuel Pre-Filter Kit
6915872	Tube		319	Fuel Pre-Filter Kit
6915873	Fuel feed hose		319	Fuel Pre-Filter Kit
6915874	Fuel feed hose		319	Fuel Pre-Filter Kit
6915875	Fuel pre-filter		319	Fuel Pre-Filter Kit
6915876	Tube		319	Fuel Pre-Filter Kit
6915982	Exhaust tube	6914387	205	Exhaust System
6916061	Windshield Wiper Motor	75920.9	51	Wiper Installation
6916079	Hose		303	Rear Hydraulic Hook
6916262	Hook special IT		317	Italy Version with hook
6916434	Plate		317	Italy Version with hook
6916435	Plate		317	Italy Version with hook
6916450	Rivet		317	Italy Version with hook
6916485	Set of wheels		271	BFGOODRICH 400/70-20 Wheels
69187.3	Plug		149	Hydraulic Control Valve Installation
69274.9	Elbow union		121	Hydraulic Tank Installation
69485.1	T- union		309	Trailer Brake
6963094	Frame		21	Cab Assy
6971665	Support		21	Cab Assy
69791.2	Tooth		347	Toothed Bucket
69866.2	Jig		337	Jig + Hook
69868.8	Spindle		337	Jig + Hook
70011.2	Hook		337	Jig + Hook
70012.0	Shackle		337	Jig + Hook
70811.5	Bush		3	Chassis
70865.1	Hose		115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
71131.7	Washer		71	Housing - Front Axle
			83	Housing - Rear Axle

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
71209.1	Differential Assembly		85	Differential - Rear Axle
71263.8	Plug		215	Cylinder Block
			223	Cylinder Head
71275.2	Screw		231	Oil Sump - Oil Pump
71286.9	Screw		245	Turbocharger
71287.7	Screw		251	Flywheel Housing and Starter
71307.3	Washer		221	Flywheel and Drive Pulley
71329.7	Nut		233	Fuel Injection Equipment
71335.4	Screw		237	Fuel Feeding
71338.8	Screw		231	Oil Sump - Oil Pump
			233	Fuel Injection Equipment
			241	Oil Cooler and Filter
			243	Water Pump and Thermostat
			249	Alternator
71346.1	Screw		245	Turbocharger
71348.7	Screw		223	Cylinder Head
			233	Fuel Injection Equipment
71366.9	Bracket		239	Cylinder Head Cover
71381.8	Screw		215	Cylinder Block
			223	Cylinder Head
			229	Timing Gear
			241	Oil Cooler and Filter
			245	Turbocharger
71385.9	Stud		251	Flywheel Housing and Starter
71386.7	Washer		229	Timing Gear
71388.3	Screw		229	Timing Gear
71399.0	Screw		239	Cylinder Head Cover
71417.0	Clip		233	Fuel Injection Equipment
71426.1	Nut		233	Fuel Injection Equipment
71432.9	Nut		233	Fuel Injection Equipment
71439.4	Screw		243	Water Pump and Thermostat
71456.8	Screw		229	Timing Gear
			231	Oil Sump - Oil Pump
71465.9	Nut		231	Oil Sump - Oil Pump
71466.7	Olive		231	Oil Sump - Oil Pump
71468.3	Screw		231	Oil Sump - Oil Pump
71490.7	Nut		245	Turbocharger
71495.6	Nut		249	Alternator
			251	Flywheel Housing and Starter
71507.8	Screw		231	Oil Sump - Oil Pump
71564.9	Screw		215	Cylinder Block
71585.4	Bearing		173	Hydrostatic Pump Assy
71599.5	Dowel		173	Hydrostatic Pump Assy
			179	Hydrostatic Motor Assy
71602.7	Screw		179	Hydrostatic Motor Assy
71603.5	Screw		179	Hydrostatic Motor Assy
71605.0	Screw		179	Hydrostatic Motor Assy
71610.0	Nut		179	Hydrostatic Motor Assy

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
71621.7	Washer		179	Hydrostatic Motor Assy
71622.5	Nozzle		179	Hydrostatic Motor Assy
71624.1	Seal		179	Hydrostatic Motor Assy
71626.6	Seal		179	Hydrostatic Motor Assy
71629.0	Cone		179	Hydrostatic Motor Assy
71630.8	Spring		179	Hydrostatic Motor Assy
71631.6	Screw		179	Hydrostatic Motor Assy
71632.4	O-ring		179	Hydrostatic Motor Assy
71633.2	Nut		179	Hydrostatic Motor Assy
71634.0	Plug		169	Hydrostatic Pump Assy
71635.7	Nozzle		179	Hydrostatic Motor Assy
71636.5	Plug		173	Hydrostatic Pump Assy
			179	Hydrostatic Motor Assy
71638.1	Nozzle		179	Hydrostatic Motor Assy
71643.1	Seal		179	Hydrostatic Motor Assy
71644.9	Seal		179	Hydrostatic Motor Assy
71646.4	Screw		179	Hydrostatic Motor Assy
71674.6	Plug	71659.7	169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
			179	Hydrostatic Motor Assy
71675.3	Plug		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71676.1	Bearing		169	Hydrostatic Pump Assy
71679.5	Pin		173	Hydrostatic Pump Assy
71681.1	Washer		173	Hydrostatic Pump Assy
71682.9	Pin		173	Hydrostatic Pump Assy
71684.5	Spring		173	Hydrostatic Pump Assy
71685.2	Slide nut		173	Hydrostatic Pump Assy
71690.2	Piston		173	Hydrostatic Pump Assy
71691.0	Retainer		173	Hydrostatic Pump Assy
71692.8	Guide		173	Hydrostatic Pump Assy
71693.6	Spacer		173	Hydrostatic Pump Assy
71701.7	Shaft		173	Hydrostatic Pump Assy
71702.5	Snap ring		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71706.6	Screw		169	Hydrostatic Pump Assy
71710.8	Spring guide		169	Hydrostatic Pump Assy
71711.6	Spring		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71713.2	Washer		169	Hydrostatic Pump Assy
71715.7	Seal-lock nut		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71732.2	Seal		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71733.0	Seal		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71734.8	Housing		169	Hydrostatic Pump Assy

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
71735.5	Screw		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71736.3	Housing		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71737.1	Seal-lock nut		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71738.9	Screw		169	Hydrostatic Pump Assy
71744.7	Screw		169	Hydrostatic Pump Assy
71748.8	Plug		173	Hydrostatic Pump Assy
71753.8	Screw		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
71757.9	Charge pump assy		173	Hydrostatic Pump Assy
71758.7	Muff		169	Hydrostatic Pump Assy
71760.3	Cover assy		173	Hydrostatic Pump Assy
71761.1	O-ring		169	Hydrostatic Pump Assy
71762.9	Flange		173	Hydrostatic Pump Assy
71763.7	Washer		169	Hydrostatic Pump Assy
71764.5	Screw		169	Hydrostatic Pump Assy
71765.2	O-ring		169	Hydrostatic Pump Assy
71766.0	Cover		169	Hydrostatic Pump Assy
71767.8	Screw		169	Hydrostatic Pump Assy
71778.5	O-ring		169	Hydrostatic Pump Assy
71785.0	Plug		179	Hydrostatic Motor Assy
71825.4	Screw		11	Engine Cover
71921.1	Nut		255	Air Conditioning Installation
72065.6	Pressure switch		165	Hydrostatic Hoses and Fittings
72294.2	Elbow union		113	Service Brake Hydraulic Installation
			119	Quick Attach Installation
72347.8	Bushing		59	End Boom Assy
			131	Telescope Cylinder
			133	Telescope Cylinder
72554.9	Blade		345	Toothless Buckets
74335.1	Plug		255	Air Conditioning Installation
74425.0	Forks holder assy		339	Floating Pallet Forks
74467.2	Hose		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			323	Damper Kit
74470.6	Insulation		297	2nd Hydraulic Function On Boom
75037.2	Hydraulic Pump Seal Kit		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
75181.8	Bushing		139	Frame Level Cylinder
75182.6	Tooth		341	Bales Pikes
75254.3	Pulley		221	Flywheel and Drive Pulley
75277.4	O-ring		67	Hub Reduction - Front Axle / Rear Axle
75296.4	Bushing		77	Steering - Front Axle
			87	Steering - Rear Axle
75297.2	Screw		77	Steering - Front Axle
			87	Steering - Rear Axle

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
75591.8	Lock Valve		135	Tilt Cylinder
75594.2	Hydraulic Motor Solenoid		179	Hydrostatic Motor Assy
75618.9	Bushing		127	Lift Cylinder
			129	Compensating Cylinder
			135	Tilt Cylinder
75658.5	U-joint		63	Axle Installation
			65	Cardan Shaft
75708.8	Cover Plate		71	Housing - Front Axle
75709.6	O-ring		71	Housing - Front Axle
75710.4	O-ring		71	Housing - Front Axle
75713.8	Pin		69	Reducer Box - Front Axle
75715.3	Screw		71	Housing - Front Axle
75716.1	Screw		71	Housing - Front Axle
75717.9	Breather		69	Reducer Box - Front Axle
			71	Housing - Front Axle
75722.9	Tie Rod End		77	Steering - Front Axle
			87	Steering - Rear Axle
75723.7	Tie Rod Assembly		77	Steering - Front Axle
			87	Steering - Rear Axle
75724.5	Screw		77	Steering - Front Axle
75725.2	Steering Cylinder		77	Steering - Front Axle
75726.0	Cylinder head		77	Steering - Front Axle
			87	Steering - Rear Axle
75727.8	Detector		77	Steering - Front Axle
75728.6	Clamp		77	Steering - Front Axle
			85	Differential - Rear Axle
			87	Steering - Rear Axle
75734.4	Washer		77	Steering - Front Axle
			87	Steering - Rear Axle
75739.3	Washer		83	Housing - Rear Axle
75746.8	Support		83	Housing - Rear Axle
75747.6	Bushing		83	Housing - Rear Axle
75748.4	Bushing		83	Housing - Rear Axle
75749.2	Washer		83	Housing - Rear Axle
75758.3	Steering Cylinder		87	Steering - Rear Axle
75760.9	Detector		87	Steering - Rear Axle
75762.5	Seal Kit		77	Steering - Front Axle
			87	Steering - Rear Axle
75774.0	Disc	64857.6	75	Differential - Front Axle
75775.7	Stop Plate		85	Differential - Rear Axle
75778.1	Bevel Gear		75	Differential - Front Axle
75779.9	Shim 2.50mm		75	Differential - Front Axle
			85	Differential - Rear Axle
75780.7	Shim 2.60mm		75	Differential - Front Axle
			85	Differential - Rear Axle
75781.5	Shim 2.70mm		75	Differential - Front Axle
			85	Differential - Rear Axle
75782.3	Shim 2.80mm		75	Differential - Front Axle
			85	Differential - Rear Axle

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			85	Differential - Rear Axle
75784.9	Shim 3.00mm		75	Differential - Front Axle
			85	Differential - Rear Axle
75785.6	Shim 3.10mm		75	Differential - Front Axle
			85	Differential - Rear Axle
75786.4	Shim 3.20mm		75	Differential - Front Axle
			85	Differential - Rear Axle
75787.2	Shim 3.30mm		75	Differential - Front Axle
			85	Differential - Rear Axle
75788.0	Shim 3.40mm		75	Differential - Front Axle
			85	Differential - Rear Axle
75789.8	Washer		85	Differential - Rear Axle
75791.4	Ring Gear		85	Differential - Rear Axle
75793.0	Plate		75	Differential - Front Axle
75802.9	Washer		85	Differential - Rear Axle
75805.2	Clip		85	Differential - Rear Axle
75806.0	Bracket		85	Differential - Rear Axle
75822.7	Stud		67	Hub Reduction - Front Axle / Rear Axle
75824.3	Lock Ring		67	Hub Reduction - Front Axle / Rear Axle
75825.0	Support		67	Hub Reduction - Front Axle / Rear Axle
75826.8	Toothed Ring		67	Hub Reduction - Front Axle / Rear Axle
75830.0	Pinion carrier		67	Hub Reduction - Front Axle / Rear Axle
75831.8	Retaining Ring		67	Hub Reduction - Front Axle / Rear Axle
75832.6	Washer		67	Hub Reduction - Front Axle / Rear Axle
75833.4	Gear		67	Hub Reduction - Front Axle / Rear Axle
75834.2	Needle Bearing		67	Hub Reduction - Front Axle / Rear Axle
75835.9	Housing		69	Reducer Box - Front Axle
75836.7	Pin		69	Reducer Box - Front Axle
75838.3	Grease Nipple	100458-02A	71	Housing - Front Axle
75839.1	Plug		69	Reducer Box - Front Axle
75840.9	Screw		69	Reducer Box - Front Axle
75841.7	Screw		69	Reducer Box - Front Axle
75842.5	Screw		69	Reducer Box - Front Axle
75843.3	Screw		69	Reducer Box - Front Axle
75844.1	Washer		69	Reducer Box - Front Axle
75845.8	Tube		69	Reducer Box - Front Axle
75846.6	Bracket		69	Reducer Box - Front Axle
75847.4	O-ring		69	Reducer Box - Front Axle
75848.2	Bearing		69	Reducer Box - Front Axle
75849.0	Plug		69	Reducer Box - Front Axle
75850.8	Bearing		69	Reducer Box - Front Axle
75851.6	Gear		69	Reducer Box - Front Axle
75852.4	Screw		69	Reducer Box - Front Axle
75853.2	Clip		69	Reducer Box - Front Axle
75854.0	Bearing		69	Reducer Box - Front Axle
75855.7	Gear		69	Reducer Box - Front Axle

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
75857.3	Seal		69	Reducer Box - Front Axle
75858.1	Screw		69	Reducer Box - Front Axle
75859.9	Pin		69	Reducer Box - Front Axle
75860.7	Plug		69	Reducer Box - Front Axle
75883.9	Rack		25	Cab Assy II
75895.3	Front Wiper Blade		51	Wiper Installation
75896.1	Roof wiper blade		49	Rear Window Installation
		6911713	51	Wiper Installation
75898.7	Windshield wiper arm		51	Wiper Installation
75900.1	Rear wiper arm		49	Rear Window Installation
75903.5	Hinge		49	Rear Window Installation
75926.6	Adapter		51	Wiper Installation
75935.7	Pivot Pin		49	Rear Window Installation
75940.7	Cylinder		49	Rear Window Installation
75944.9	Seal		21	Cab Assy
75956.3	Seal		49	Rear Window Installation
75985.2	Set of push rod		193	Joystick
75990.2	Hydraulic Pump Filter		169	Hydrostatic Pump Assy
76029.8	Screw		273	Mudguard 20"
			275	Mudguard 24"
76324.3	Decal - Sound signal		311	Bobcat Decals
76367.2	Hose		91	Boom Hydraulic Installation
76740.0	Bales pikes assy		341	Bales Pikes
76742.6	Bracket		341	Bales Pikes
76837.4	Round pin		341	Bales Pikes
77013.1	Adapter		111	AMA - Installation
			115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
			125	Frame Level Installation
			149	Hydraulic Control Valve Installation
77014.9	Plate		277	Tow Valve Installation
77075.0	Elbow union		125	Frame Level Installation
			277	Tow Valve Installation
77136.0	Bracket		183	Electrical Circuit Chassis
77192.3	Bush		3	Chassis
77261.6	Bush		3	Chassis
77297.0	Tyre		267	DUNLOP 405/70-R20 SPT9 Wheels
77380.4	Boom Pivot Bushing		3	Chassis
			57	Fixed Boom Assy
			59	End Boom Assy
77386.1	Tube		91	Boom Hydraulic Installation
77387.9	Tube		91	Boom Hydraulic Installation
77388.7	Tube		91	Boom Hydraulic Installation
77389.5	Tube		91	Boom Hydraulic Installation
77394.5	Bracket		91	Boom Hydraulic Installation
77396.0	Support		91	Boom Hydraulic Installation
77397.8	Hose		91	Boom Hydraulic Installation

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
77402.6	Support		91	Boom Hydraulic Installation
77411.7	Locating Pin		59	End Boom Assy
77419.0	Pin, lift cyl mounting		57	Fixed Boom Assy
77421.6	Pin		59	End Boom Assy
77422.4	Locating Pin		59	End Boom Assy
77425.7	Locating Pin		57 99	Fixed Boom Assy Lift & Compensation Cylinder Installation
77430.7	Washer		57	Fixed Boom Assy
77492.7	Screw		91	Boom Hydraulic Installation
77652.6	Panel		91	Boom Hydraulic Installation
77655.9	Pin		91	Boom Hydraulic Installation
77777.1	Hose		91	Boom Hydraulic Installation
77778.9	Hose		91	Boom Hydraulic Installation
77784.7	Support		91	Boom Hydraulic Installation
77791.2	Spacer		91	Boom Hydraulic Installation
77792.0	Hydraulic pipe		91	Boom Hydraulic Installation
77794.6	Support		91	Boom Hydraulic Installation
77798.7	Support		91	Boom Hydraulic Installation
77912.4	Adapter		117 125 331	Parking Brake Hydraulic Installation (accumulat Frame Level Installation Lift Cylinder Accumulator Kit
77919.9	Bracket		35	Pedals Installation
78021.3	Shock Absorber		19	Cab & Fixations
78256.5	Hydrostatic Motor Assy		165 179	Hydrostatic Hoses and Fittings Hydrostatic Motor Assy
78568.3	Mudguard		273 275	Mudguard 20" Mudguard 24"
78569.1	Plate		275	Mudguard 24"
78575.8	Cylinder		307	Hook
78579.0	Slide		307	Hook
78688.9	Expansion tank		199	Engine Installation
78705.1	Adapter		121 165	Hydraulic Tank Installation Hydrostatic Hoses and Fittings
78743.2	Drain plug		121 299 303	Hydraulic Tank Installation Rear Hydraulic Function Rear Hydraulic Hook
78745.7	Adapter		199	Engine Installation
78815.8	Front worklight	6909971	25 187	Cab Assy II Electrical Circuit Cab
78816.6	Rear Worklight	6909970	25 187	Cab Assy II Electrical Circuit Cab
78817.4	Rotating Beacon Light		19 313	Cab & Fixations Germany Version
78818.2	Connection		21	Cab Assy
78819.0	Gyrolight plug		21	Cab Assy
78856.2	Plate		19	Cab & Fixations
78863.8	Support		19	Cab & Fixations
78867.9	Support		19	Cab & Fixations

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
78869.5	Wire harness		183	Electrical Circuit Chassis
78872.9	Hydraulic Oil Temperature Sen		189	Electrical Circuit Engine
78895.0	Protector		189	Electrical Circuit Engine
78920.6	Wire harness		57	Fixed Boom Assy
78927.1	Plug		113	Service Brake Hydraulic Installation
79123.6	Plate		3	Chassis
79124.4	Nut		3	Chassis
79129.3	Seal		3	Chassis
79137.6	Plug		59	End Boom Assy
79147.5	Hose		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			323	Damper Kit
79148.3	Hose		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
79160.8	Screw		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			213	Cooling Fan Circuit (with optional reverse)
79170.7	Coupling		309	Trailer Brake
79255.6	Hook		307	Hook
79259.8	Pin		307	Hook
79260.6	Pin		307	Hook
79285.3	Spring		303	Rear Hydraulic Hook
79287.9	Washer		307	Hook
79288.7	Rubber mounting		3	Chassis
79292.9	Reinforcement Plate		273	Mudguard 20"
79293.7	Screw		273	Mudguard 20"
			275	Mudguard 24"
79294.5	Screw		273	Mudguard 20"
			275	Mudguard 24"
79297.8	Cap		45	Door Assy
			273	Mudguard 20"
			275	Mudguard 24"
79300.0	Pipe		289	Rear View Mirror
			303	Rear Hydraulic Hook
79308.3	"Z" bar link (welded)		59	End Boom Assy
79334.9	Light		283	Matriculation Plate Option
79365.3	Bushing		119	Quick Attach Installation
79379.4	Bearing		61	Manual Quick Attach Lock
79380.2	Spindle		61	Manual Quick Attach Lock
79428.9	Washer		57	Fixed Boom Assy
79429.7	Washer		57	Fixed Boom Assy
79523.7	Decal - Safety - Do not ride for		311	Bobcat Decals
79524.5	Decal - Safety - Don't stand un		311	Bobcat Decals
79525.2	Decal - Safety - Safety distanc		311	Bobcat Decals
79526.0	Decal - Safety - Starting		311	Bobcat Decals
79527.8	Engine Drive Belt		207	Cooling System Installation
79533.6	Front Light Assembly, RH		183	Electrical Circuit Chassis

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
79539.3	Front Light Wire Harness, LH		183	Electrical Circuit Chassis
79581.5	Cover		25	Cab Assy II
79618.5	Steering valve (Orbitrol)		105	Steering Hydraulics Cab
79645.8	Decal - Safety - Don't incline lo		311	Bobcat Decals
79788.6	Clamp		205	Exhaust System
79861.1	Positive Battery Cable		183	Electrical Circuit Chassis
79864.5	Screw		19	Cab & Fixations
			39	Cowling Installation
79868.6	Shim		19	Cab & Fixations
79872.8	Spacer		19	Cab & Fixations
79879.3	Washer		19	Cab & Fixations
79902.3	Sunshade		25	Cab Assy II
79903.1	Mirror LH		21	Cab Assy
79906.4	Connector		57	Fixed Boom Assy
79908.0	Light		57	Fixed Boom Assy
79926.2	Terminal		189	Electrical Circuit Engine
79930.4	Relay		187	Electrical Circuit Cab
			189	Electrical Circuit Engine
79946.0	Fuse		189	Electrical Circuit Engine
79947.8	Fuse 50 Amp		189	Electrical Circuit Engine
80220.7	Bezel		41	Control Panel Switches
80221.5	Bezel		41	Control Panel Switches
80224.9	Relay		255	Air Conditioning Installation
80226.4	Diode		187	Electrical Circuit Cab
80407.0	Hose		91	Boom Hydraulic Installation
80583.8	Trailer fitting		287	Tow Hitch
80631.5	Carriage	88457.7	59	End Boom Assy
80906.1	Bucket		347	Toothed Bucket
80907.9	Bucket		345	Toothless Buckets
80908.7	Forks holder		343	Rigid Forks Holder
80909.5	Forks holder		343	Rigid Forks Holder
80910.3	Bucket		347	Toothed Bucket
80914.5	Bucket		345	Toothless Buckets
80917.8	Splash plate		341	Bales Pikes
			343	Rigid Forks Holder
80919.4	Bush	70811.5	3	Chassis
80942.6	Forks Holder		341	Bales Pikes
			343	Rigid Forks Holder
80943.4	Forks holder		343	Rigid Forks Holder
80945.9	Bales pikes assy		341	Bales Pikes
80997.0	Plate		343	Rigid Forks Holder
81019.2	Screw		229	Timing Gear
81026.7	Plug		239	Cylinder Head Cover
81036.6	Screw		221	Flywheel and Drive Pulley
81037.4	Washer		221	Flywheel and Drive Pulley
81038.2	Flywheel assembly		221	Flywheel and Drive Pulley

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
81040.8	Screw		251	Flywheel Housing and Starter
81041.6	Housing		251	Flywheel Housing and Starter
81045.7	Washer		233	Fuel Injection Equipment
81046.5	Nut		233	Fuel Injection Equipment
81063.0	Seal		231	Oil Sump - Oil Pump
81088.7	Connection		241	Oil Cooler and Filter
81284.2	Screw		49	Rear Window Installation
81296.6	Valve		169 173	Hydrostatic Pump Assy Hydrostatic Pump Assy
81420.2	Cylinder block		169	Hydrostatic Pump Assy
81421.0	Axle seal kit		169 173	Hydrostatic Pump Assy Hydrostatic Pump Assy
81422.8	Charge pump		169	Hydrostatic Pump Assy
81423.6	Glass		169	Hydrostatic Pump Assy
81424.4	Screw		169 173	Hydrostatic Pump Assy Hydrostatic Pump Assy
81425.1	Screw		169 173	Hydrostatic Pump Assy Hydrostatic Pump Assy
81426.9	Union		169	Hydrostatic Pump Assy
81427.7	Valve		169 173	Hydrostatic Pump Assy Hydrostatic Pump Assy
81428.5	Plate		169	Hydrostatic Pump Assy
81429.3	Seal		169	Hydrostatic Pump Assy
81430.1	Control Block		169	Hydrostatic Pump Assy
81431.9	Nozzle		169	Hydrostatic Pump Assy
81432.7	Filter		169	Hydrostatic Pump Assy
81433.5	Valve segment		179	Hydrostatic Motor Assy
81434.3	Cylinder block		179	Hydrostatic Motor Assy
81435.0	Shaft		179	Hydrostatic Motor Assy
81436.8	Bearing plate		179	Hydrostatic Motor Assy
81437.6	Seal		179	Hydrostatic Motor Assy
81439.2	Condenser		255	Air Conditioning Installation
81443.4	Screw		179	Hydrostatic Motor Assy
81444.2	O-ring		179	Hydrostatic Motor Assy
81445.9	Piston		179	Hydrostatic Motor Assy
81448.3	Cover		179	Hydrostatic Motor Assy
81450.9	Seal		179	Hydrostatic Motor Assy
81455.8	Control	95424.8	179	Hydrostatic Motor Assy
81458.2	Spindle		179	Hydrostatic Motor Assy
81460.8	Spring		179	Hydrostatic Motor Assy
81463.2	Hydrostatic Motor Seal Kit		179	Hydrostatic Motor Assy
81514.2	Nut		77 87	Steering - Front Axle Steering - Rear Axle
81515.9	Rod		77 87	Steering - Front Axle Steering - Rear Axle
81544.9	Support		83	Housing - Rear Axle
81549.8	Bracket		87	Steering - Rear Axle

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
81578.7	Seal kit		307	Hook
81632.2	Bellow		29	Seat & Suspension
82019.1	Adhesive 20 km/h	90990.3	313	Germany Version
82020.9	Adhesive 25 km/h	84915.8	313	Germany Version
82021.7	Adhesive 30 km/h		313	Germany Version
82181.9	Union		149	Hydraulic Control Valve Installation
82234.6	Outlet pipe		205	Exhaust System
82265.0	Light		183	Electrical Circuit Chassis
82266.8	Rear Light, LH		183	Electrical Circuit Chassis
82421.9	Hose		117	Parking Brake Hydraulic Installation (accumulat
82425.0	Hydraulic hook		303	Rear Hydraulic Hook
82426.8	Support		307	Hook
82459.9	Screw		59	End Boom Assy
83757.5	Gas Cylinder		11	Engine Cover
83933.2	Hose		99	Lift & Compensation Cylinder Installation
84169.2	Cardan shaft		63 65	Axle Installation Cardan Shaft
84450.6	Adapter kit		333	Tool Adaptor Kit
84468.8	Cable		303	Rear Hydraulic Hook
84536.2	Wedge		345	Toothless Buckets
84625.3	Screw		9	Fuel Tank Installation
84626.1	Plug		91	Boom Hydraulic Installation
84627.9	Pivot pin		91	Boom Hydraulic Installation
84630.3	Screw		91	Boom Hydraulic Installation
84632.9	Connecting Arm (cast iron)		59	End Boom Assy
84648.5	Plate		303	Rear Hydraulic Hook
84654.3	Wire harness		283	Matriculation Plate Option
84675.8	Bracket		57	Fixed Boom Assy
84957.0	Bucket		345	Toothless Buckets
84997.6	Screw		17	Engine Basket
85170.9	Union		121	Hydraulic Tank Installation
85171.7	Thumb Screw		255	Air Conditioning Installation
85283.0	Hose		149	Hydraulic Control Valve Installation
85360.6	Screw		289	Rear View Mirror
85466.1	Cover Plate		59	End Boom Assy
85481.0	Pin		119	Quick Attach Installation
85955.3	Elbow		149	Hydraulic Control Valve Installation
86167.4	Nut		25	Cab Assy II
88029.4	Compressor oil		255	Air Conditioning Installation
88030.2	Gas R-134A		255	Air Conditioning Installation
88236.5	Washer		17	Engine Basket
88299.3	Screw		99	Lift & Compensation Cylinder Installation
88375.1	Seal		283	Matriculation Plate Option
88395.9	Insulation		207	Cooling System Installation
88401.5	Shoe		57	Fixed Boom Assy

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			59	End Boom Assy
88404.9	Mounting Block		57	Fixed Boom Assy
88497.3	Screw		57	Fixed Boom Assy
88523.8	Support		91	Boom Hydraulic Installation
88540.0	Screw		59	End Boom Assy
88825.5	Switch		255	Air Conditioning Installation
88826.3	Plate		255	Air Conditioning Installation
88827.1	Protector		255	Air Conditioning Installation
88830.5	Plate		255	Air Conditioning Installation
88844.6	Hose		255	Air Conditioning Installation
88848.7	Hose		255	Air Conditioning Installation
88946.9	Screw		147	Hydraulic Control Valve Fixations
89034.3	Fork		343	Rigid Forks Holder
89323.0	Bush		57	Fixed Boom Assy
89328.9	Locating Pin		57	Fixed Boom Assy
89332.1	Washer		57	Fixed Boom Assy
			273	Mudguard 20"
			275	Mudguard 24"
89390.9	Bracket		91	Boom Hydraulic Installation
89474.1	Tube		113	Service Brake Hydraulic Installation
89475.8	Tube		115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
89477.4	Tube		113	Service Brake Hydraulic Installation
89503.7	Adapter		63	Axle Installation
			101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
89516.9	Washer		11	Engine Cover
			91	Boom Hydraulic Installation
			147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			199	Engine Installation
			205	Exhaust System
			309	Trailer Brake
89517.7	Washer		63	Axle Installation
			165	Hydrostatic Hoses and Fittings
			199	Engine Installation
89518.5	Washer		17	Engine Basket
			91	Boom Hydraulic Installation
			147	Hydraulic Control Valve Fixations
			165	Hydrostatic Hoses and Fittings
			199	Engine Installation
89519.3	Washer		25	Cab Assy II
			111	AMA - Installation
			147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			207	Cooling System Installation
			299	Rear Hydraulic Function
			309	Trailer Brake
89522.7	Clamp		121	Hydraulic Tank Installation
89523.5	Clamp		121	Hydraulic Tank Installation
89577.1	Wedge		279	Wheel Wedge Option

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
89642.3	Switch		255	Air Conditioning Installation
89643.1	Dryer		255	Air Conditioning Installation
89644.9	Compressor		255	Air Conditioning Installation
89647.2	Hose		255	Air Conditioning Installation
89648.0	Hose		255	Air Conditioning Installation
89649.8	Hose		255	Air Conditioning Installation
89699.3	Rim		261	DUNLOP 400/80-R24 153B Wheels
			263	DUNLOP 400/80-R24 156B Wheels
89885.8	Screw		83	Housing - Rear Axle
89905.4	Support		71	Housing - Front Axle
89908.8	Valve		71	Housing - Front Axle
89912.0	Nut		71	Housing - Front Axle
89913.8	Bushing		71	Housing - Front Axle
89914.6	Stud		71	Housing - Front Axle
89915.3	O-ring		71	Housing - Front Axle
89916.1	Support		71	Housing - Front Axle
89917.9	Pin CDS=sleeve		71	Housing - Front Axle
89918.7	Retaining Ring		77	Steering - Front Axle
			87	Steering - Rear Axle
89921.1	Housing		75	Differential - Front Axle
89924.5	Flange		81	Brakes - Front Axle
89925.2	Counter Disc		81	Brakes - Front Axle
89926.0	Disc		81	Brakes - Front Axle
89927.8	Counter Disc		81	Brakes - Front Axle
89928.6	Hub		81	Brakes - Front Axle
89929.4	Seal		81	Brakes - Front Axle
89930.2	Screw Assembly		81	Brakes - Front Axle
89934.4	Washer		81	Brakes - Front Axle
89936.9	Hub		81	Brakes - Front Axle
89937.7	Housing		81	Brakes - Front Axle
89955.9	Housing		71	Housing - Front Axle
89957.5	Differential, Complete		75	Differential - Front Axle
89959.1	Screw		83	Housing - Rear Axle
89963.3	Sleeve		67	Hub Reduction - Front Axle / Rear Axle
89964.1	Screw		67	Hub Reduction - Front Axle / Rear Axle
90179.3	Tube		91	Boom Hydraulic Installation
90180.1	Tube		91	Boom Hydraulic Installation
90191.8	Tube		115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
90289.0	Union		113	Service Brake Hydraulic Installation
			115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
90471.4	Rim		265	TITAN 400/70-R20 Wheels
			267	DUNLOP 405/70-R20 SPT9 Wheels
			271	BFGOODRICH 400/70-20 Wheels
90477.1	Wheel assy		267	DUNLOP 405/70-R20 SPT9 Wheels
90478.9	Set of wheels		267	DUNLOP 405/70-R20 SPT9 Wheels

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
90479.7	Rim		269	MICHELIN 440/70 XM37 Wheels
90490.4	Plate		199	Engine Installation
90531.5	Roller		255	Air Conditioning Installation
90545.5	Alternator Belt		255	Air Conditioning Installation
90774.1	Lift Cylinder Assembly		99 127	Lift & Compensation Cylinder Installation Lift Cylinder
90788.1	Tilt Cylinder Assembly		91 135	Boom Hydraulic Installation Tilt Cylinder
90798.0	Compensation cyl assy		99 129	Lift & Compensation Cylinder Installation Compensating Cylinder
90807.9	Brake Valve		113	Service Brake Hydraulic Installation
90841.8	Counterweight RH		7	Ballast
90842.6	Counterweight LH		7	Ballast
90913.5	Buzzer		183	Electrical Circuit Chassis
90924.2	Connection		111	AMA - Installation
90930.9	Control Knob		41	Control Panel Switches
92085.0	Support		3	Chassis
92088.4	Bracket, LH		3	Chassis
92089.2	Frame Level Cylinder Assembl		125 139	Frame Level Installation Frame Level Cylinder
92099.1	Screw		3	Chassis
92126.2	Hose		125	Frame Level Installation
92131.2	Selector Valve		297	2nd Hydraulic Function On Boom
92132.0	Housing		297	2nd Hydraulic Function On Boom
92210.4	Washer		165	Hydrostatic Hoses and Fittings
92218.7	Pin		119	Quick Attach Installation
92220.3	Tube		119	Quick Attach Installation
92299.7	Plug		41	Control Panel Switches
92303.7	Bracket		19	Cab & Fixations
92398.7	Spring		119	Quick Attach Installation
92404.3	Decal - Pedal functions		311	Bobcat Decals
92420.9	Quick Attach Cylinder		119 137	Quick Attach Installation Quick Attach Cylinder
92588.3	Washer		119	Quick Attach Installation
92601.4	Housing		75 85	Differential - Front Axle Differential - Rear Axle
92604.8	Universal Drive Assembly		77 87	Steering - Front Axle Steering - Rear Axle
92608.9	Plug		71	Housing - Front Axle
92614.7	Housing		179	Hydrostatic Motor Assy
92637.8	O-ring		121 143	Hydraulic Tank Installation Hydraulic Pump Installation
92642.8	Nut		249	Alternator
92645.1	Spindle		137	Quick Attach Cylinder
92762.4	Decal - Safety - Engine		311	Bobcat Decals
92783.0	Decal		347	Toothed Bucket
92790.5	Protection for toothless buckets		315	Italy Version

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			345	Toothless Buckets
92795.4	Protection for toothed buckets		315	Italy Version
			317	Italy Version with hook
92803.6	Decal		347	Toothed Bucket
92805.1	Decal		347	Toothed Bucket
92808.5	Decal		347	Toothed Bucket
92809.3	Protection		347	Toothed Bucket
92991.9	Hose		115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
92995.0	Hose	6911027	213	Cooling Fan Circuit (with optional reverse)
93049.5	O-ring		121	Hydraulic Tank Installation
			143	Hydraulic Pump Installation
93084.2	O-ring		71	Housing - Front Axle
			81	Brakes - Front Axle
93085.9	O-ring		81	Brakes - Front Axle
93086.7	O-ring		81	Brakes - Front Axle
93087.5	O-ring		81	Brakes - Front Axle
93088.3	O-ring		81	Brakes - Front Axle
93115.4	Pressure Switch		53	Parking Brake Lever
93158.4	Snap ring		219	Crankshaft - Pistons
93164.2	Guide		223	Cylinder Head
93168.3	Cotter		223	Cylinder Head
93191.5	Seal		233	Fuel Injection Equipment
93207.9	Washer		233	Fuel Injection Equipment
93227.7	Screw		53	Parking Brake Lever
93233.5	Lever and grip		53	Parking Brake Lever
93237.6	Stop		29	Seat & Suspension
93238.4	Seat belt		29	Seat & Suspension
93239.2	Slide bar		29	Seat & Suspension
93240.0	Lever		29	Seat & Suspension
93241.8	Lever		29	Seat & Suspension
93242.6	Lever		29	Seat & Suspension
93243.4	Foam rubber		29	Seat & Suspension
93244.2	Foam rubber		29	Seat & Suspension
93245.9	Coating		29	Seat & Suspension
93246.7	Coating		29	Seat & Suspension
93247.5	Bracket		29	Seat & Suspension
93248.3	Suspension		29	Seat & Suspension
93249.1	Cylinder		29	Seat & Suspension
93273.1	Collar		239	Cylinder Head Cover
93274.9	Spring		239	Cylinder Head Cover
93280.6	Screw		229	Timing Gear
			243	Water Pump and Thermostat
93321.8	Screw		245	Turbocharger
93379.6	Dowel		215	Cylinder Block
93408.3	Screw		245	Turbocharger

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
93477.8	Tilt Cylinder Seal Kit		135	Tilt Cylinder
93487.7	Piston Rod		135	Tilt Cylinder
93488.5	Head		135	Tilt Cylinder
93489.3	Piston		135	Tilt Cylinder
93610.4	Compensation Cylinder Seal Ki		129	Compensating Cylinder
93611.2	Lift Cylinder Seal Kit		127	Lift Cylinder
93612.0	Seals kit		131	Telescope Cylinder
93615.3	Stub Axle		77 87	Steering - Front Axle Steering - Rear Axle
93616.1	Housing		77 87	Steering - Front Axle Steering - Rear Axle
93617.9	Clip		77 87	Steering - Front Axle Steering - Rear Axle
93618.7	U-joint		77 87	Steering - Front Axle Steering - Rear Axle
93619.5	Long Axle Shaft		77 87	Steering - Front Axle Steering - Rear Axle
93647.6	Ring		135	Tilt Cylinder
93678.1	Cylinder Barrel		129	Compensating Cylinder
93679.3	Rod		129	Compensating Cylinder
93680.7	Head		129	Compensating Cylinder
93681.5	Piston		129	Compensating Cylinder
93682.3	Screw		129 139	Compensating Cylinder Frame Level Cylinder
93683.1	Grease nipple		127 129 139	Lift Cylinder Compensating Cylinder Frame Level Cylinder
93684.9	Bushing		129	Compensating Cylinder
93685.6	Cylinder Barrel		127	Lift Cylinder
93686.4	Rod		127	Lift Cylinder
93687.2	Head		127	Lift Cylinder
93688.0	Piston		127	Lift Cylinder
93689.8	Nut		127	Lift Cylinder
93691.4	Washer		127	Lift Cylinder
93692.2	Spacer		127	Lift Cylinder
93972.8	Piston Rod		133	Telescope Cylinder
93973.6	Cylinder head		131	Telescope Cylinder
93974.4	Piston		131	Telescope Cylinder
93981.9	Seal Kit		139	Frame Level Cylinder
93982.7	Cylinder Barrel		139	Frame Level Cylinder
93983.5	Rod		139	Frame Level Cylinder
93984.3	Head		139	Frame Level Cylinder
93985.0	Piston		139	Frame Level Cylinder
93986.8	Spacer		139	Frame Level Cylinder
94018.9	Steering wheel cap		37	Steering Column Installation
94074.2	Pin		339	Floating Pallet Forks
94206.0	Pipe		297	2nd Hydraulic Function On Boom

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
94414.0	Hose		91	Boom Hydraulic Installation
94548.5	Plastic Cap		7	Ballast
94574.1	Washer		19	Cab & Fixations
			21	Cab Assy
			147	Hydraulic Control Valve Fixations
			149	Hydraulic Control Valve Installation
			195	Joystick / Susmic Installation
94670.7	Rear axle		63	Axle Installation
			83	Housing - Rear Axle
94751.5	Engine Speed Sensor		199	Engine Installation
94990.9	Screw		125	Frame Level Installation
94992.5	Hose		211	Cooling Fan Circuit
94993.3	Hose		113	Service Brake Hydraulic Installation
94997.4	Bucket		345	Toothless Buckets
95061.8	Seal		9	Fuel Tank Installation
95068.3	Trap door		9	Fuel Tank Installation
95428.9	Pin		61	Manual Quick Attach Lock
95502.1	Screw		49	Rear Window Installation
95632.6	Serial No. plate		3	Chassis
			311	Bobcat Decals
95704.3	Washer		19	Cab & Fixations
95783.7	Clamp		205	Exhaust System
95791.0	Plate		297	2nd Hydraulic Function On Boom
95792.8	Plate		297	2nd Hydraulic Function On Boom
95993.2	Female Coupling		91	Boom Hydraulic Installation
			119	Quick Attach Installation
			297	2nd Hydraulic Function On Boom
			299	Rear Hydraulic Function
95994.0	Male coupling		91	Boom Hydraulic Installation
			119	Quick Attach Installation
			297	2nd Hydraulic Function On Boom
			299	Rear Hydraulic Function
96054.2	Spacer		113	Service Brake Hydraulic Installation
96061.7	Spacer		113	Service Brake Hydraulic Installation
96074.0	Cover		21	Cab Assy
96080.7	L.H. control panel plate		41	Control Panel Switches
96082.3	Evaporator		255	Air Conditioning Installation
96083.1	Wiring		255	Air Conditioning Installation
96089.8	Support		35	Pedals Installation
96332.2	Tyre		263	DUNLOP 400/80-R24 156B Wheels
96333.0	Elbow		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
96392.6	Plate		315	Italy Version
96400.7	Hose		297	2nd Hydraulic Function On Boom
96461.9	Adapter		199	Engine Installation
96462.7	Drain Hose		199	Engine Installation
96474.2	Wiring		91	Boom Hydraulic Installation
96505.3	Union		309	Trailer Brake

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			119	Quick Attach Installation
			297	2nd Hydraulic Function On Boom
			299	Rear Hydraulic Function
96514.5	Cap		91	Boom Hydraulic Installation
			119	Quick Attach Installation
			297	2nd Hydraulic Function On Boom
			299	Rear Hydraulic Function
96524.4	Hydraulic concrete skip		335	Concrete Bucket
96541.8	Rivet		279	Wheel Wedge Option
96554.1	Washer		279	Wheel Wedge Option
			339	Floating Pallet Forks
96567.3	Union		115	Parking Brake Hydraulic Installation
			117	Parking Brake Hydraulic Installation (accumulat
96568.1	Union		309	Trailer Brake
96587.1	Front Light Wire Harness, RH		183	Electrical Circuit Chassis
96588.9	Wire harness		191	Ventilation Reverse Electrical
96589.7	Wire harness		183	Electrical Circuit Chassis
96590.5	Warning Switch		41	Control Panel Switches
96591.3	Switch, beacon light		41	Control Panel Switches
96592.1	Lever Switch		41	Control Panel Switches
96593.9	Steering mode switch		41	Control Panel Switches
96594.7	Steering mode indicator		41	Control Panel Switches
96595.4	Trailer turn indicator		41	Control Panel Switches
96596.2	Fan Switch		191	Ventilation Reverse Electrical
96597.0	Fog light switch		41	Control Panel Switches
96598.8	Rear Hook Switch		303	Rear Hydraulic Hook
96599.6	Rear Option Switch		299	Rear Hydraulic Function
96600.2	Switch, head lamp		41	Control Panel Switches
96601.0	Working light switch		41	Control Panel Switches
96602.8	Switch, rear wiper/washer		41	Control Panel Switches
96603.6	Switch, roof wiper		41	Control Panel Switches
96604.4	Auxiliary Hydraulics Switch		297	2nd Hydraulic Function On Boom
96608.5	Fan Speed Switch		41	Control Panel Switches
96609.3	Heating Control Valve		41	Control Panel Switches
96613.5	Spacer		189	Electrical Circuit Engine
96623.4	Turn signal relay		187	Electrical Circuit Cab
96655.6	Washer		113	Service Brake Hydraulic Installation
96656.4	Spring		113	Service Brake Hydraulic Installation
96664.8	Hydraulic Pipe		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
96734.9	Valve		309	Trailer Brake
96749.7	Decal - "106 dB"		311	Bobcat Decals
96755.4	Hose		165	Hydrostatic Hoses and Fittings
96756.2	Hose		165	Hydrostatic Hoses and Fittings
96759.6	Hose	6911029	213	Cooling Fan Circuit (with optional reverse)
96761.2	Hose		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
			103	Steering Hoses & Fittings (with damper)
96776.0	Hose	82421.9	115	Parking Brake Hydraulic Installation
96788.5	Hose Assembly		99	Lift & Compensation Cylinder Installation
96795.0	Hose	6913659	165	Hydrostatic Hoses and Fittings
96922.0	Support		275	Mudguard 24"
96928.7	Decal - Arm "Bobcat" - RH		311	Bobcat Decals
96932.9	Decal - Arm "Bobcat" - LH		311	Bobcat Decals
97054.1	Set of keys		41	Control Panel Switches
97067.3	O-ring		131	Telescope Cylinder
97088.9	Mat		21	Cab Assy
97096.2	Cigarette Lighter		39	Cowling Installation
97099.6	Directional Vent		31	Heating/ventilation Installation
97175.4	Solenoid		189	Electrical Circuit Engine
			233	Fuel Injection Equipment
97196.0	Windshield spray reservoir		51	Wiper Installation
97201.8	Vent		31	Heating/ventilation Installation
97204.2	Pipe	97202.6	31	Heating/ventilation Installation
97205.9	Heater		31	Heating/ventilation Installation
			33	Heating/ventilation Fan Assy
97206.7	Pipe		31	Heating/ventilation Installation
97208.3	Vent Nozzle		31	Heating/ventilation Installation
97210.9	Pin		37	Steering Column Installation
97212.5	Hose		51	Wiper Installation
97217.4	Jet		51	Wiper Installation
97236.4	Wire Harness		187	Electrical Circuit Cab
97258.8	Piston		179	Hydrostatic Motor Assy
97260.4	Glass		183	Electrical Circuit Chassis
97261.2	Glass		183	Electrical Circuit Chassis
97265.3	Grill		255	Air Conditioning Installation
97271.1	Seal Kit		105	Steering Hydraulics Cab
97295.0	Set of seals		155	Hydraulic Control Valve: In- and Outlet
			157	Hydraulic Control Valve Lift Section
			159	Hydraulic Control Valve Tilt Section
			161	Hydraulic Control Valve Telescope Section
			163	Hydraulic Control Valve Auxiliary Hydraulics Se
97297.6	Filter		155	Hydraulic Control Valve: In- and Outlet
97300.8	Pressure relief valve		155	Hydraulic Control Valve: In- and Outlet
97302.4	Pressure compensator kit		157	Hydraulic Control Valve Lift Section
			159	Hydraulic Control Valve Tilt Section
			161	Hydraulic Control Valve Telescope Section
			163	Hydraulic Control Valve Auxiliary Hydraulics Se
97303.2	No return valve kit		157	Hydraulic Control Valve Lift Section
			159	Hydraulic Control Valve Tilt Section
			161	Hydraulic Control Valve Telescope Section
			163	Hydraulic Control Valve Auxiliary Hydraulics Se
97350.3	Control Valve		33	Heating/ventilation Fan Assy
97355.2	Screw		169	Hydrostatic Pump Assy
97357.8	Spring		179	Hydrostatic Motor Assy

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
97359.4	Plate		255	Air Conditioning Installation
97360.2	Door Strap		45	Door Assy
97400.6	Valve	81418.6	169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
97410.5	Seal		85	Differential - Rear Axle
97414.7	Seal		67	Hub Reduction - Front Axle / Rear Axle
97416.2	Seal		65	Cardan Shaft
97418.8	Shaft		65	Cardan Shaft
97420.4	Flange		65	Cardan Shaft
97432.9	Thermostat		255	Air Conditioning Installation
97462.6	Cover assy		169	Hydrostatic Pump Assy
97463.4	Slide assy		169	Hydrostatic Pump Assy
97464.2	Screw		169	Hydrostatic Pump Assy
97465.9	Cover		169	Hydrostatic Pump Assy
97466.7	Lever		169	Hydrostatic Pump Assy
97467.5	Screw		169	Hydrostatic Pump Assy
97501.1	Handle, steering column adjust		37	Steering Column Installation
97502.9	Knob, steering column adjust		37	Steering Column Installation
97504.5	Bracket		25	Cab Assy II
97515.1	Rear horn		291	Backup Alarm
97519.3	Switch, transmission mode		41	Control Panel Switches
97610.0	Washer		207	Cooling System Installation
			255	Air Conditioning Installation
97746.2	Air Filter		199	Engine Installation
97747.0	Collar		199	Engine Installation
97878.3	Housing		199	Engine Installation
97880.9	Check valve		165	Hydrostatic Hoses and Fittings
97885.8	Knob block		41	Control Panel Switches
97886.6	Knob head		41	Control Panel Switches
97904.7	Glue		9	Fuel Tank Installation
97915.3	Fan		207	Cooling System Installation
97964.1	Rivet		25	Cab Assy II
98011.0	Coupling		199	Engine Installation
98038.3	Engine		199	Engine Installation
98053.2	Plate, engine basket, front		11	Engine Cover
98068.0	O-ring		255	Air Conditioning Installation
98069.8	O-ring		255	Air Conditioning Installation
98070.6	O-ring		255	Air Conditioning Installation
98071.4	O-ring		255	Air Conditioning Installation
98080.5	Clip		15	Engine Sound Proofing
98087.0	Wire harness		183	Electrical Circuit Chassis
98132.4	Washer		199	Engine Installation
98167.0	Plate		303	Rear Hydraulic Hook
			337	Jig + Hook
		95634.2	339	Floating Pallet Forks
			341	Bales Pikes

https://www.pdfmanual4trucks.com/

Part Number	Denomination	WAS	Page	Subgroup
		95634.2	345	Toothless Buckets
		95634.2	347	Toothed Bucket
98235.5	Valve		99	Lift & Compensation Cylinder Installation
98240.5	Throttle Cable		35	Pedals Installation
98241.3	Reverser		37	Steering Column Installation
98242.9	Drive/lighting control lever		37	Steering Column Installation
98275.1	Hydraulic Pipe		99	Lift & Compensation Cylinder Installation
98348.6	Support		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
			213	Cooling Fan Circuit (with optional reverse)
98349.4	Steering selector valve		101	Steering Hoses & Fittings (without damper)
			103	Steering Hoses & Fittings (with damper)
98353.6	Plate		299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
98355.1	Electro distributor		213	Cooling Fan Circuit (with optional reverse)
98360.1	Union		299	Rear Hydraulic Function
			303	Rear Hydraulic Hook
98397.3	Hose		113	Service Brake Hydraulic Installation
98583.8	O-ring		321	Hydraulic Tank Filling Kit
98645.5	Seal		77	Steering - Front Axle
			87	Steering - Rear Axle
98653.9	Screw		173	Hydrostatic Pump Assy
98660.4	Bushing		71	Housing - Front Axle
			83	Housing - Rear Axle
98661.2	Housing		71	Housing - Front Axle
98662.0	Housing		83	Housing - Rear Axle
98668.7	Pivot		77	Steering - Front Axle
			87	Steering - Rear Axle
98669.5	Pivot		77	Steering - Front Axle
			87	Steering - Rear Axle
98677.8	Locking kit		343	Rigid Forks Holder
98695.0	Gasket		169	Hydrostatic Pump Assy
			173	Hydrostatic Pump Assy
98765.1	Engine cover	6910149	11	Engine Cover
98777.6	Cover		11	Engine Cover
NAP	Lock cylinder		11	Engine Cover
		6914317	49	Rear Window Installation
		6909330	53	Parking Brake Lever
		88197.9	63	Axle Installation
		6909330	115	Parking Brake Hydraulic Installation
		6909330	117	Parking Brake Hydraulic Installation (accumulat
		6910533	121	Hydraulic Tank Installation
		6912582	131	Telescope Cylinder
			135	Tilt Cylinder
			137	Quick Attach Cylinder
		6910533	165	Hydrostatic Hoses and Fittings
		89702.5	261	DUNLOP 400/80-R24 153B Wheels
NSS	Connection		21	Cab Assy
			53	Parking Brake Lever
			55	Parking Brake Lever
P02645	Rivet		339	Floating Pallet Forks