


PARTS CATALOGUE FOR TRACTORS T2334/2734HST

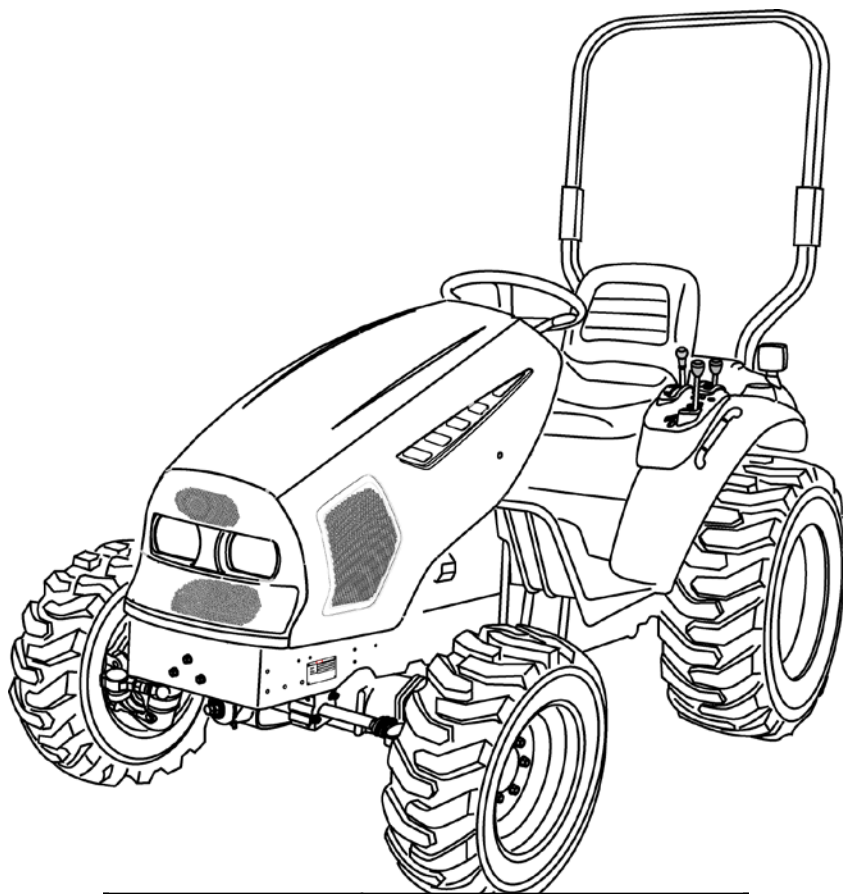

제 작 일	2006.07
작 성	
검 토	
승 인	

TMM 백산그룹 **동양물산 기계사업부**

Printed :2006/07 Version A

0 Part number of this book: 1328 912 003



TONG YANG MOOLSAN CO., LTD

KTB network B/D 12F, 826-14 Yeoksam-dong, Kangnam-gu, Seoul,
135-080, Korea

Head Office:

TEL: 82-2-3466-3331, FAX: 82-2-3466-3386

Factory:

TEL: 82-55-279-4346, 4379, FAX: 82-55-279-4447

Printed :2006/07 Version A

0 Part number of this book: 1328 912 003


Important tips of Parts Catalogue

We thank you for your purchasing our product, manufactured under strict quality control, by gathering plenty of experiences and new technology, designed for a comfort and pleasant work.

1. Part Composition

This catalogue deals with engine and chassis.

Detailed classifications are listed in the following page.

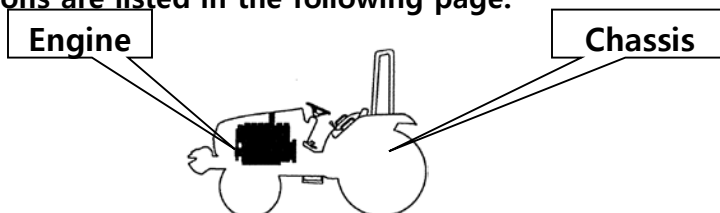

2. For locating parts easily, Please Note:


A. If you know the assembly where the part is used.

- Refer to the relevant figure from the identifying group symbol illustration,
- Locate the relevant chapter
- Refer to the particular chapter desired.

3. For ordering parts

To obtain spare parts please contact your nearest dealer and give him the details listed below.

- | | |
|---------------------------|----------------------|
| ① Tractor Model : | Tractor |
| ② Tractor Serial Number : | W050000 |
| ③ Part Number : | 16001032000 |
| ④ Description : | Air cleaner assembly |
| ⑤ Quantity required: | 1 |
- Serial Number

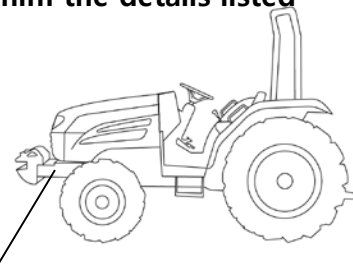

4. For ordering PARTS CATALOGUE

This is Priced item and one is to order the same on part No. 1328 912 003 0

This supersedes all our editions.

Note) When replacing parts, please use original spare parts to be sure of the performance and the longer life of the product

※ The information in this catalogue may at any time be modified without a prior notice for the

improvement of performance. please consult our spare parts dept. for the detailed inquiry

5. How to use parts catalogue

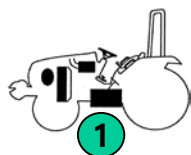
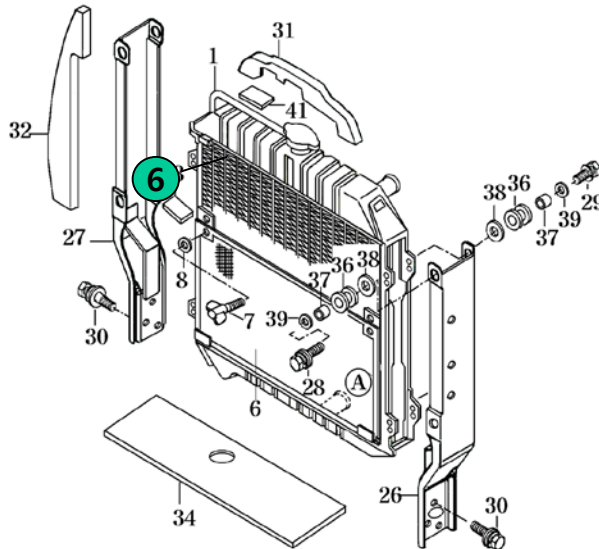
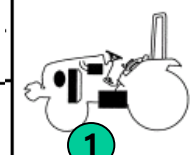
FIG 201		RADIATOR			P1	Year / Month		
2		3			4	5	1	
						2006 / 06		
								
NOTE		13						

FIG 201		RADIATOR			P1	Year / Month		
2		3			4	5	1	
						2006 / 06		
KEY NO	PART NO	PART NAME	SPEC	Q'TY	REPAIR	E/G SERIAL NO	REMARKS	
023 001	14571042001	RADIATOR SET		1				
023 002	14571042101	RADIATOR SET		1				
023 003	14571042171	SHROUD		1				
023 006	14571042301HB	NET COMP		1				
02 6	V27 7	BOLT, WING 8	M6X12 9	10	11	12	14	
NOTE		13						

① **Group Indication** : Indicate the relevant location of the part with a symbol illustration.

② **Figure Number**: Indicate the relevant section of the machine with a figure number.

③ **Section Name** : Indicate the section name of the machine

④ **Section Page** : Page number of the section in this catalogue.

⑤ **Date** : Show the Year/Month of the section made or updated

⑥ **Key number** : Indicating number of each parts in the illustration.

⑦ **Part Number** : Unique part number maintained in our system

The part number starting with V or M means it is TYM's standard part

The alphabet at the end of part number means the status of material or the color of paint

Legend : M:Machining, DG:Dark Gray, BR:Bright Red, SW:Summer White,

PB:Pure Black, GB:Glossy Black, SR:Super Red, MS:Metallic Silver

DD:Heat proof Black, TY: Tangerine Yellow etc.

⑧ **Description** : Description of a part, Abbreviation means as follows.

- Indicate the mixture condition of a part

ASSY : Assembly with a mixture of several parts, so can be broke up retaining their original form

COMP : Assembly with a mixture of several parts, but can not be broke up retaining their original form

SUB : mean the same as ASSY but used in lower level in aid.

SET : Part consist of ASSY, COMP, and part(s) as a group

- Indicate the location of a part

LH: Left, RH: Right, FR: Front, RR: Rear, UPR: Upper, LOW: Lower

⑨ **Type** : Type of the standard items like bolt or nut

⑩ **Quantity** : Total quantity of the part referred to in the page.

Symbol below indicate options. So, show the quantity of each option.

Note) AR means as requested quantity.

⑪ **Repair Parts consumption frequency class**: indicate the level of a part in aid of stocking spares, anticipating the service requirements.

A :Fast moving part(frequently required)

B :Medium moving part (sometimes required)

C :Slow moving part(rarely required)

⑫ **Modification** :


Year/Month~ : From which the change starts

~ Year/Month : To which the part installed


⑬ **Notes** : explain some reference data

⑭ **Remark** : indicate reference data or abbreviation in the content.


ENGINEERING GROUP INDEX

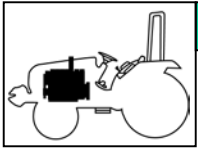


1 ENGINE

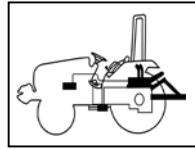


6 HYDRAULICS & 3-POINT LINK

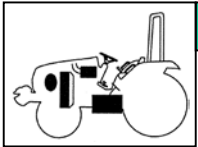


2 ENGINE ACCESSORIES & CONTROL

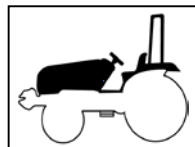


7 SHEET METAL & ROPS

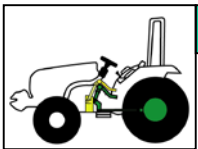


3 CLUTCH, BRAKE, STEERING

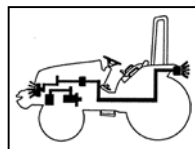


8 ELECTRICALS & HARNESS

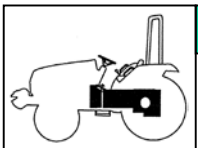

4 TRANSMISSION & REAR AXLE

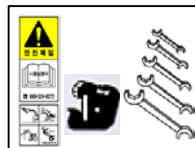

9 WEIGHT, LABEL, TOOLS

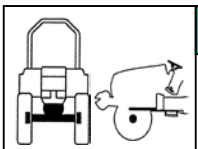

5 FRONT AXLE, SUPPORTER & DRIVE SHAFT

067 020	12305180020
077 036	12403160020
036 005	13022250030
037 010	13022250131
041 005	13022250232
046 002	13022250333

10 NUMERICAL INDEX

CONTENTS

ENGINE

1 ENGINE (S3L) : T2334 HST ENGINE (S3L2) : T2734 HST

FIG 101 CYLINDER HEAD-----	04
FIG 102 LIFTING EYE-----	06
FIG 103 VALVE MECHANISM-----	08
FIG 104 ROCKER COVER-----	10
FIG 105 CAMSHAFT & TAPPET-----	12
FIG 106 CRANKCASE-----	14
FIG 107 CRANKCASE-----	16
FIG 108 DRAIN COCK & PIPE-----	18
FIG 109 MAIN BEARING-----	20
FIG 110 TIMING GEAR CASE-----	22
FIG 111 FLYWHEEL HOUSING-----	24
FIG 112 OIL PAN-----	26
FIG 113 PISTON-----	28
FIG 114 CONNECTING-ROD-----	30
FIG 115 CRANKSHAFT & PULLEY-----	32
FIG 116 FLYWHEEL-----	34
FIG 117 TIMING GEAR-----	36
FIG 118 TACHO DRIVE-----	38
FIG 119 INLET SYSTEM-----	40
FIG 120 EXHAUST SYSTEM-----	42
FIG 121 OIL PUMP-----	44
FIG 122 OIL STRAINER-----	46
FIG 123 OIL SYSTEM-----	48
FIG 124 OIL FILTER & GAGE-----	50
FIG 125 BREATHER-----	52
FIG 126 WATER PUMP & PULLEY-----	54
FIG 127 COOLING SYSTEM-----	56
FIG 128 FAN & V-BELT-----	58
FIG 130 FUEL SYSTEM-----	60

FIG 131 NOZZLE & NOZZLE HOLDER-----	62
FIG 133 GOVERNOR-----	64
FIG 134 INJECTION PUMP-----	66
FIG 135 INJECTION PUMP-----	68
FIG 136 FUEL INJECTION PUMP DRIVE-----	70
FIG 137 STARTER-----	72
FIG 138 STARTER(12V-1.6KW)-----	74
FIG 139 GLOW PLUG-----	76
FIG 140 ALTERNATOR-----	78
FIG 141 ALTERNATOR(12V-50A)-----	80
FIG 142 ENGINE CONTROL-----	82
FIG 143 INSTRUMENT-----	84
FIG 144 ACCESSORY-----	86
FIG 145 OVERHAUL GASKET KIT-----	88

CHASSIS

2 ENGINE ACCESSORIES & CONTROL

FIG 201 AIR CLEANER-----	94
FIG 202 RADIATOR-----	96
FIG 203 MUFFLER-----	98
FIG 204 FUEL TANK & FUEL LINE-----	100
FIG 205 ACCELERATOR-----	102
FIG 206 OIL COOLER -----	104
FIG 207 FUEL PUMP & FILTER -----	106

3 CLUTCH,BRAKE,STEERING

FIG 301 FLYWHEEL COVER-----	112
FIG 302 SPEED CONTROL-----	114
FIG 303 BRAKE-----	118
FIG 304 BRAKE PEDAL & LINKAGE -----	120
FIG 305 STEERING WHEEL & DASH COVER-----	122
FIG 306 STEERING VALVE-----	124
FIG 307 STEERING CYLINDER-----	126
FIG 308 FRONT WHEEL-----	128
FIG 309 REAR WHEEL-----	130

4 TRANSMISSION & REAR AXLE

FIG 401 INPUT SHAFT-----	136
FIG 402 HST-----	138
FIG 404 4WD DRIVE GEAR-----	140
FIG 405 RANGE GEARS-----	142
FIG 406 P.T.O DRIVE SHAFT-----	144

FIG 407 DIFFERENTIAL LOCK-----	146
FIG 408 MID P.T.O GEARS-----	148
FIG 409 DIFF LOCK-----	150
FIG 410 REAR TRANSMISSION CASE-----	152
FIG 411 REAR AXLE HOUSINGS-----	154
FIG 413 RANGE SHIFT LEVER-----	156
FIG 414 P.T.O CHANGE LEVER-----	158
FIG 415 4WD CHANGE LEVER-----	160

5 FRONT AXLE

FIG 501 FRAME-----	166
FIG 502 FRONT DIFFERENTIAL GEARS & SHAFT-----	168
FIG 503 FRONT AXLE HOUSING-----	170
FIG 504 FRONT GEAR CASE (1)-----	172
FIG 505 FRONT GEAR CASE (2)-----	174

6 HYDRAULICS & 3-POINT LINK

FIG 601 CYLINDER CASE-----	180
FIG 602 LIFT ARM-----	182
FIG 603 FLOW CONTROL VALVE-----	184
FIG 604 CONTROL VALVE LINKAGE-----	186
FIG 605 MAIN CONTROL VALVE-----	188
FIG 606 REMOTE CONTROL VALVE-----	190
FIG 607 POSITION LEVER LINKAGE-----	192
FIG 608 HYDRAULIC PUMP & GEAR PUMP-----	194
FIG 609 HYDRAULIC HOSE (1)-----	196
FIG 610 HYDRAULIC HOSE (2)-----	198
FIG 611 P.T.O VALVE-----	200
FIG 612 HITCH & 3-POINT LINKAGE-----	202
FIG 613 JOYSTICK LEVER-----	206
FIG 614 HITCH & COVER-----	208

7

SHEET METAL & R.O.P.S

FIG 701 BONNET-----	214
FIG 702 DASH PANEL-----	216
FIG 703 FLOOR-----	218
FIG 704 SEAT -----	220
FIG 705 ROPS -----	222

8

ELECTRICALS & HARNESS

FIG 801 BATTERY & MOUNTING-----	228
FIG 802 LIGHTS-----	230
FIG 803 INSTRUMENT PANEL-----	232
FIG 804 ELECTRIC SYSTEM-----	234
FIG 805 HARNESS-----	236

9

WEIGHT,LABEL,TOOLS

FIG 901 TOOL & ACCESSORY-----	242
FIG 903 LABEL-----	244

10

NUMERICAL INDEX

ENGINE-----	249
CHASSIS-----	252

ENGINE

1 ENGINE (S3L) : T2334 HST ENGINE (S3L2) : T2734 HST

FIG 101 CYLINDER HEAD-----	04
FIG 102 LIFTING EYE-----	06
FIG 103 VALVE MECHANISM-----	08
FIG 104 ROCKER COVER-----	10
FIG 105 CAMSHAFT & TAPPET-----	12
FIG 106 CRANKCASE-----	14
FIG 107 CRANKCASE-----	16
FIG 108 DRAIN COCK & PIPE-----	18
FIG 109 MAIN BEARING-----	20
FIG 110 TIMING GEAR CASE-----	22
FIG 111 FLYWHEEL HOUSING-----	24
FIG 112 OIL PAN-----	26
FIG 113 PISTON-----	28
FIG 114 CONNECTING-ROD-----	30
FIG 115 CRANKSHAFT & PULLEY-----	32
FIG 116 FLYWHEEL-----	34
FIG 117 TIMING GEAR-----	36
FIG 118 TACHO DRIVE-----	38
FIG 119 INLET SYSTEM-----	40
FIG 120 EXHAUST SYSTEM-----	42
FIG 121 OIL PUMP-----	44
FIG 122 OIL STRAINER-----	46
FIG 123 OIL SYSTEM-----	48
FIG 124 OIL FILTER & GAGE-----	50
FIG 125 BREATHER-----	52
FIG 126 WATER PUMP & PULLEY-----	54
FIG 127 COOLING SYSTEM-----	56
FIG 128 FAN & V-BELT-----	58
FIG 130 FUEL SYSTEM-----	60

FIG 131 NOZZLE & NOZZLE HOLDER-----	62
FIG 133 GOVERNOR-----	64
FIG 134 INJECTION PUMP-----	66
FIG 135 INJECTION PUMP-----	68
FIG 136 FUEL INJECTION PUMP DRIVE-----	70
FIG 137 STARTER-----	72
FIG 138 STARTER(12V-1.6KW)-----	74
FIG 139 GLOW PLUG-----	76
FIG 140 ALTERNATOR-----	78
FIG 141 ALTERNATOR(12V-50A)-----	80
FIG 142 ENGINE CONTROL-----	82
FIG 143 INSTRUMENT-----	84
FIG 144 ACCESSORY-----	86
FIG 145 OVERHAUL GASKET KIT-----	88

CHASSIS

2 ENGINE ACCESSORIES & CONTROL

FIG 201 AIR CLEANER-----	94
FIG 202 RADIATOR-----	96
FIG 203 MUFFLER-----	98
FIG 204 FUEL TANK & FUEL LINE-----	100
FIG 205 ACCELERATOR-----	102
FIG 206 OIL COOLER -----	104
FIG 207 FUEL PUMP & FILTER -----	106

3 CLUTCH,BRAKE,STEERING

FIG 301 FLYWHEEL COVER-----	112
FIG 302 SPEED CONTROL-----	114
FIG 303 BRAKE-----	118
FIG 304 BRAKE PEDAL & LINKAGE -----	120
FIG 305 STEERING WHEEL & DASH COVER-----	122
FIG 306 STEERING VALVE-----	124
FIG 307 STEERING CYLINDER-----	126
FIG 308 FRONT WHEEL-----	128
FIG 309 REAR WHEEL-----	130

4 TRANSMISSION & REAR AXLE

FIG 401 INPUT SHAFT-----	136
FIG 402 HST-----	138
FIG 404 4WD DRIVE GEAR-----	140
FIG 405 RANGE GEARS-----	142
FIG 406 P.T.O DRIVE SHAFT-----	144
FIG 407 DIFFERENTIAL LOCK-----	146
FIG 408 MID P.T.O GEARS(OPTION)-----	148
FIG 409 DIFF LOCK-----	150
FIG 410 REAR TRANSMISSION CASE-----	152
FIG 411 REAR AXLE HOUSINGS-----	154
FIG 413 RANGE SHIFT LEVER-----	156
FIG 414 P.T.O CHANGE LEVER-----	158
FIG 415 4WD CHANGE LEVER-----	160

5

FRONT AXLE

FIG 501 FRAME-----	166
FIG 502 FRONT DIFFERENTIAL GEARS & SHAFT-----	168
FIG 503 FRONT AXLE HOUSING-----	170
FIG 504 FRONT GEAR CASE (1)-----	172
FIG 505 FRONT GEAR CASE (2)-----	174

6 HYDRAULICS & 3-POINT LINK

FIG 601 CYLINDER CASE-----	180
FIG 602 LIFT ARM-----	182
FIG 603 FLOW CONTROL VALVE-----	184
FIG 604 CONTROL VALVE LINKAGE-----	186
FIG 605 MAIN CONTROL VALVE-----	188
FIG 606 REMOTE CONTROL VALVE-----	190
FIG 607 POSITION LEVER LINKAGE-----	192
FIG 608 HYDRAULIC PUMP & GEAR PUMP-----	194
FIG 609 HYDRAULIC HOSE (1)-----	196
FIG 610 HYDRAULIC HOSE (2)-----	198
FIG 611 PTO VALVE-----	200
FIG 612 HITCH & 3-POINT LINKAGE-----	202
FIG 613 JOYSTICK LEVER-----	206
FIG 614 HITCH & COVER-----	208

7

SHEET METAL & R.O.P.S

FIG 701 BONNET-----	214
FIG 702 DASH PANEL-----	216
FIG 703 FLOOR-----	218
FIG 704 SEAT -----	220
FIG 705 ROPS -----	222

8

ELECTRICALS & HARNESS

FIG 801 BATTERY & MOUNTING-----	228
FIG 802 LIGHTS-----	230
FIG 803 INSTRUMENT PANEL-----	232
FIG 804 ELECTRIC SYSTEM-----	234
FIG 805 HARNESS-----	236

9

WEIGHT,LABEL,TOOLS

FIG 901 TOOL-----242

FIG 903 LABEL-----244

10

NUMERICAL INDEX

ENGINE	-----249
CHASSIS	-----252


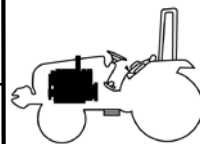


FIG 101

CYLINDER HEAD

P1

T2334 / T2734

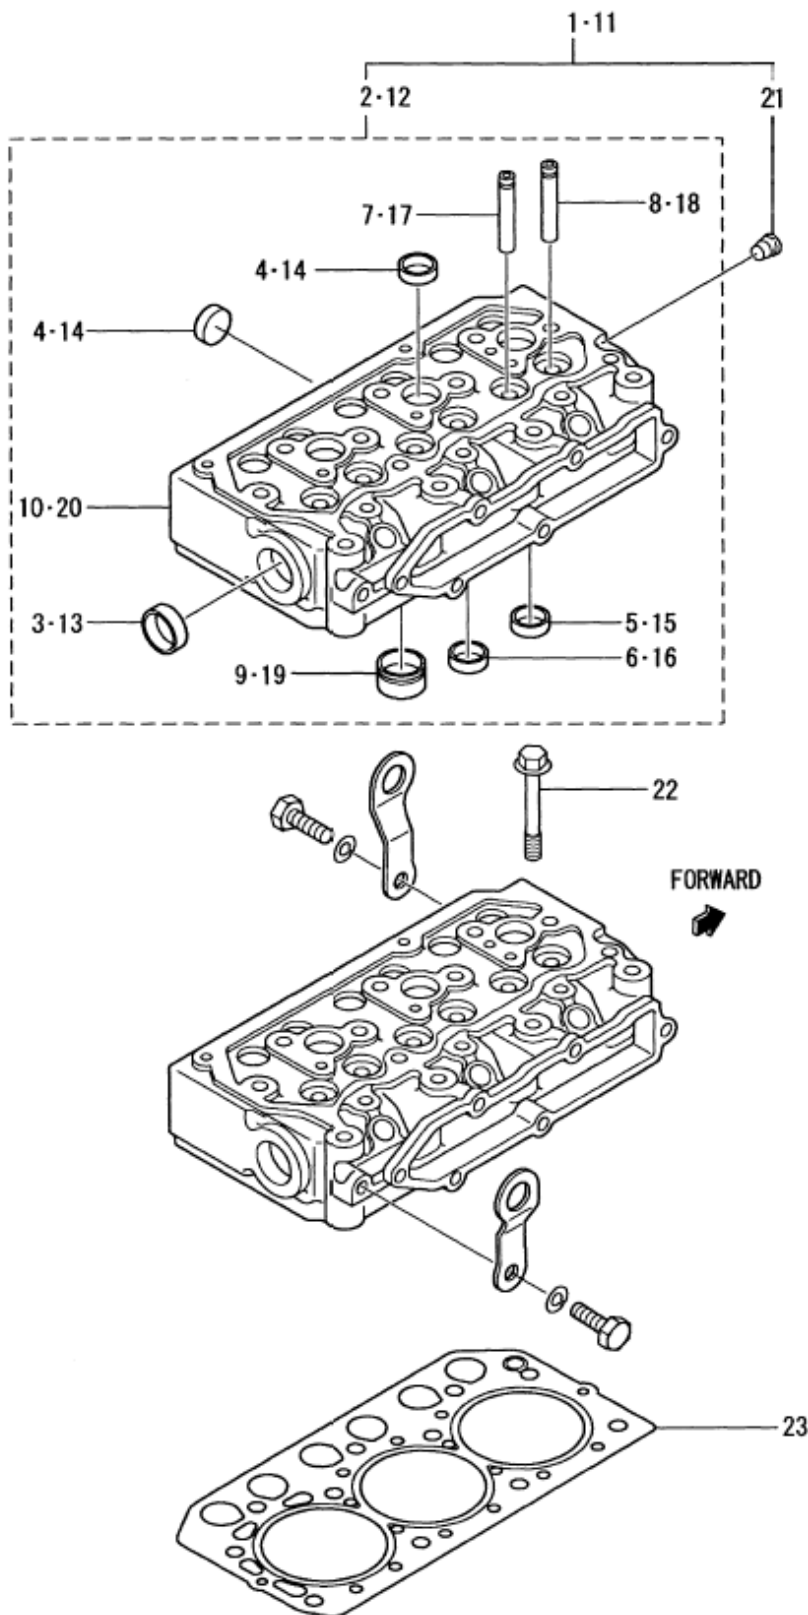

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


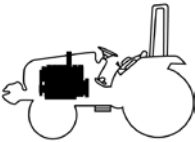


FIG 102

LIFTING EYE

T2334 / T2734

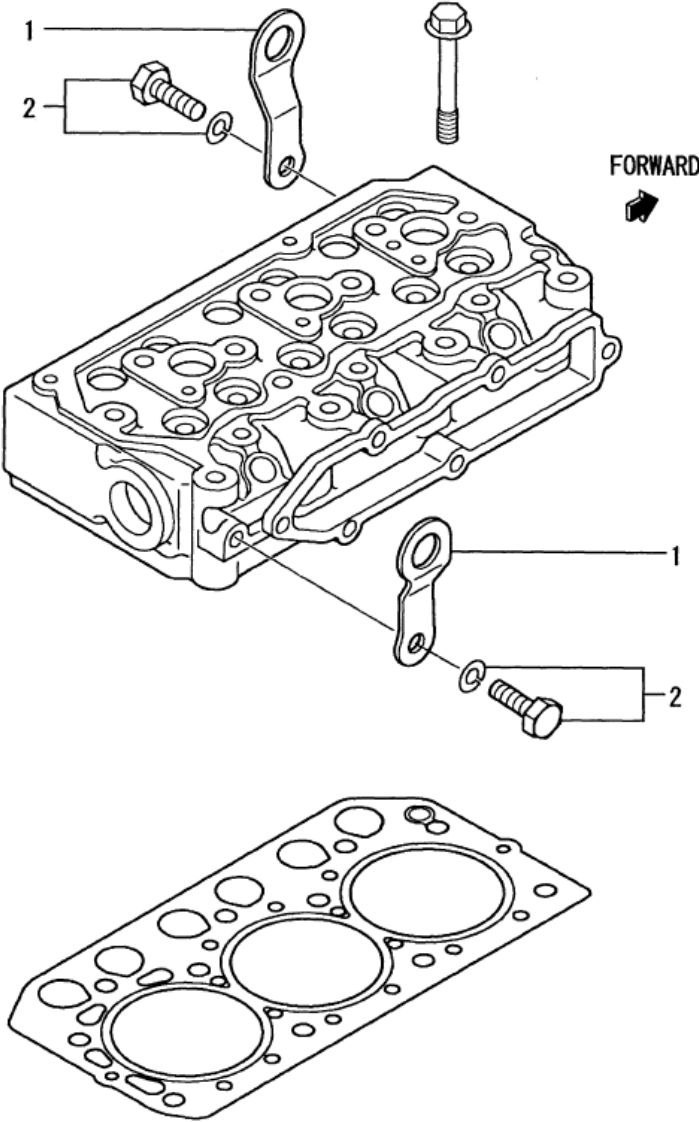

NOTE


T2734 : S3L2 , T2334 : S3L



FIG 103

VALVE MECHANISM

T2334 / T2734

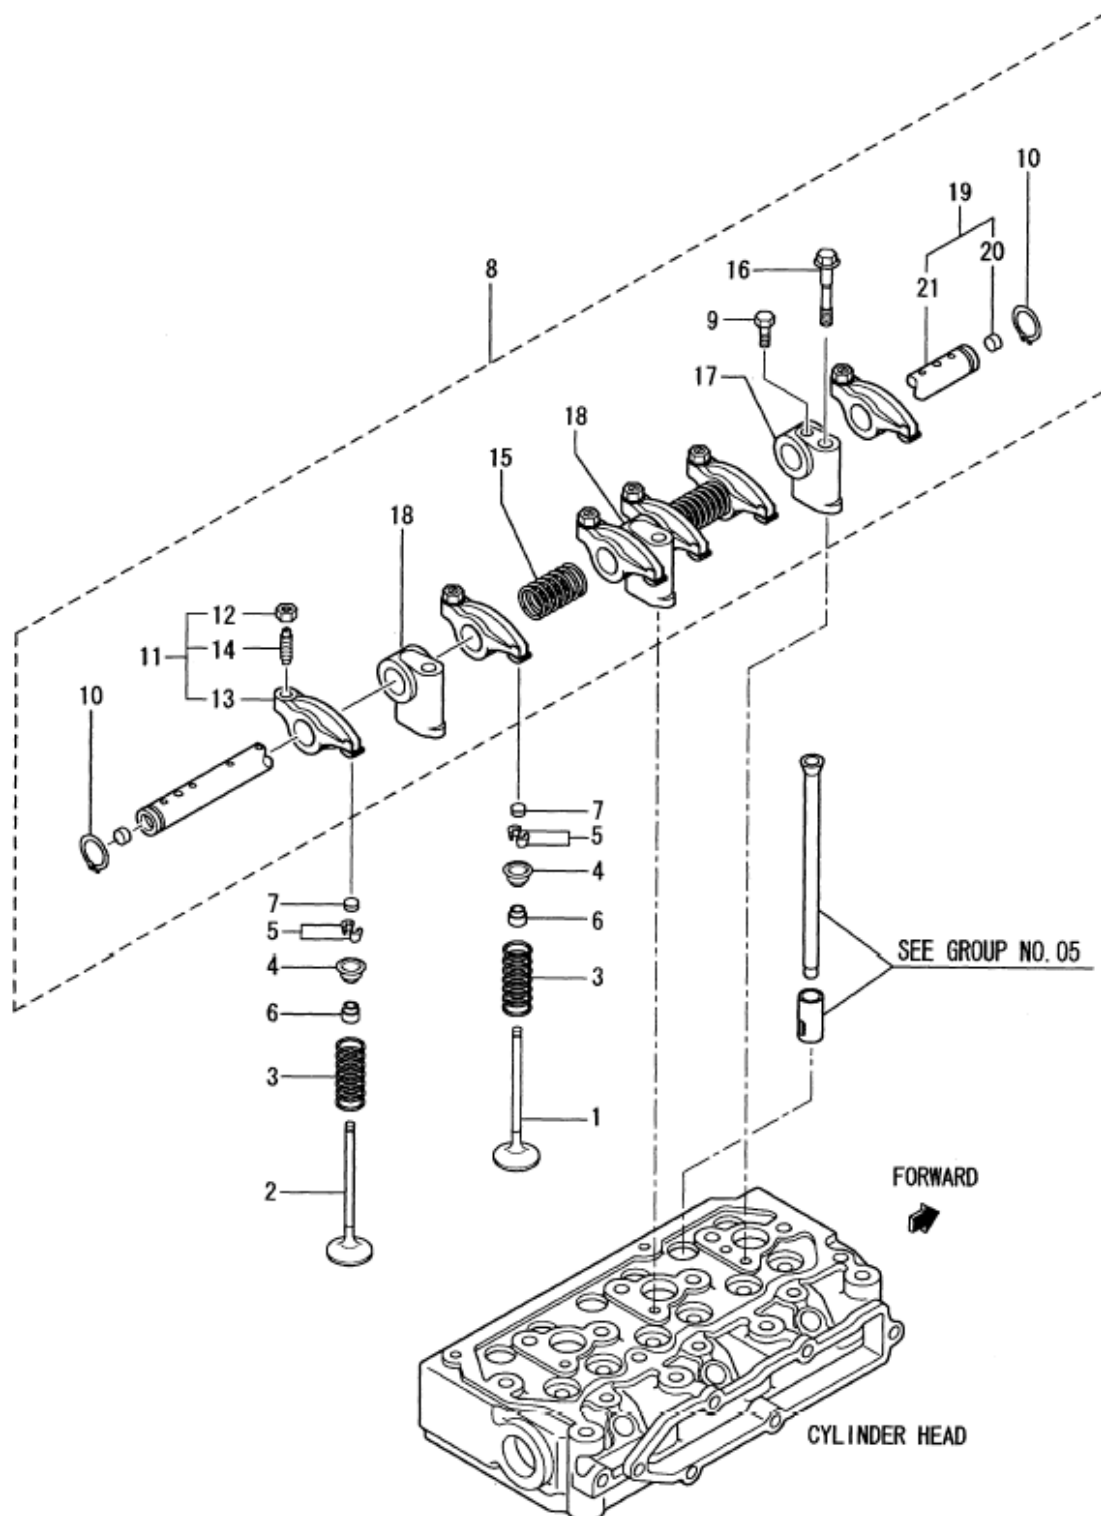

REF.NO.5 IS AVAILABELE IN A SET WITH PAIR.

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 104

ROCKER COVER


P1

Year / Month

2006 / 07

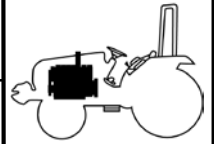

T2334 / T2734

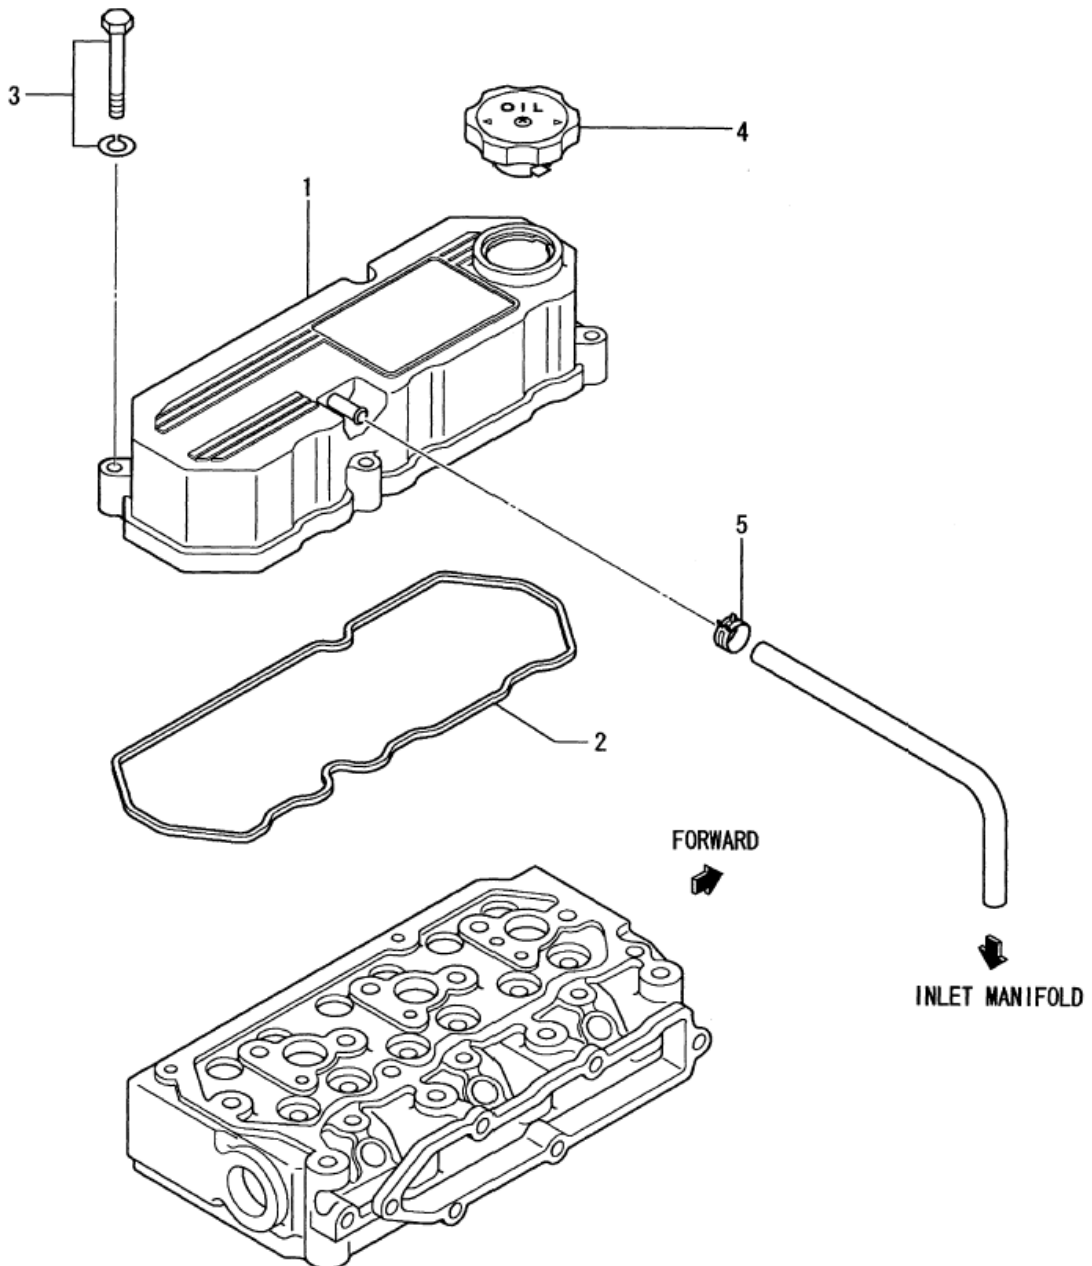

NOTE

T2734 : S3L2 , T2334 : S3L


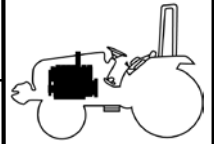


FIG 105

T2334 / T2734

CAMSHAFT & TAPPET

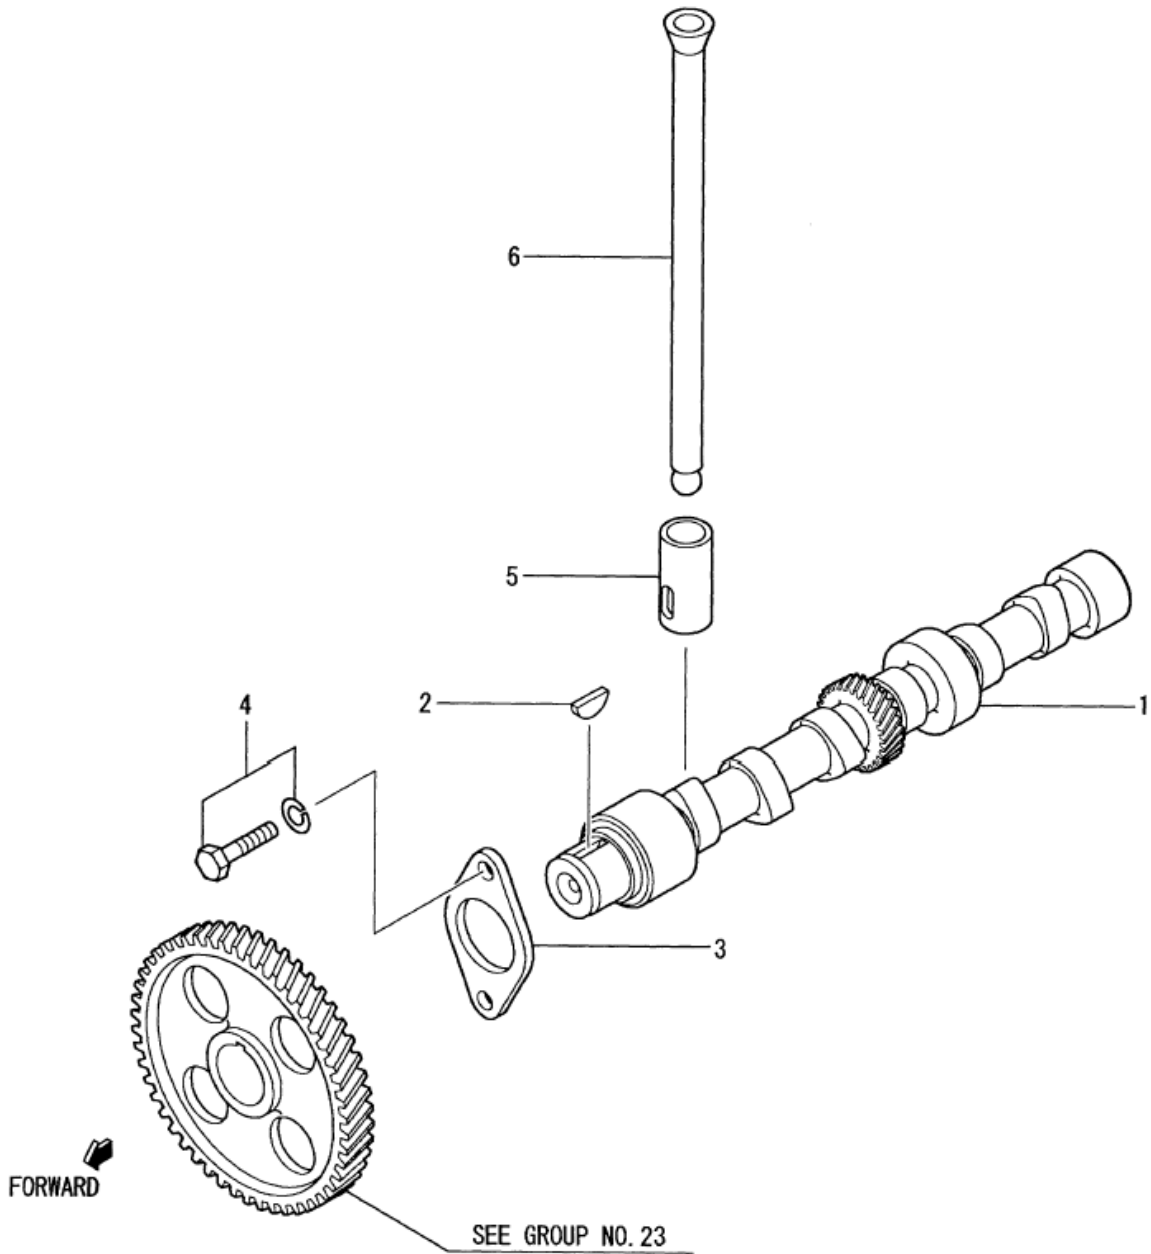

NOTE

T2734 : S3L2 , T2334 : S3L


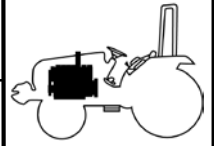


FIG 106

CRANKCASE

T2334 / T2734

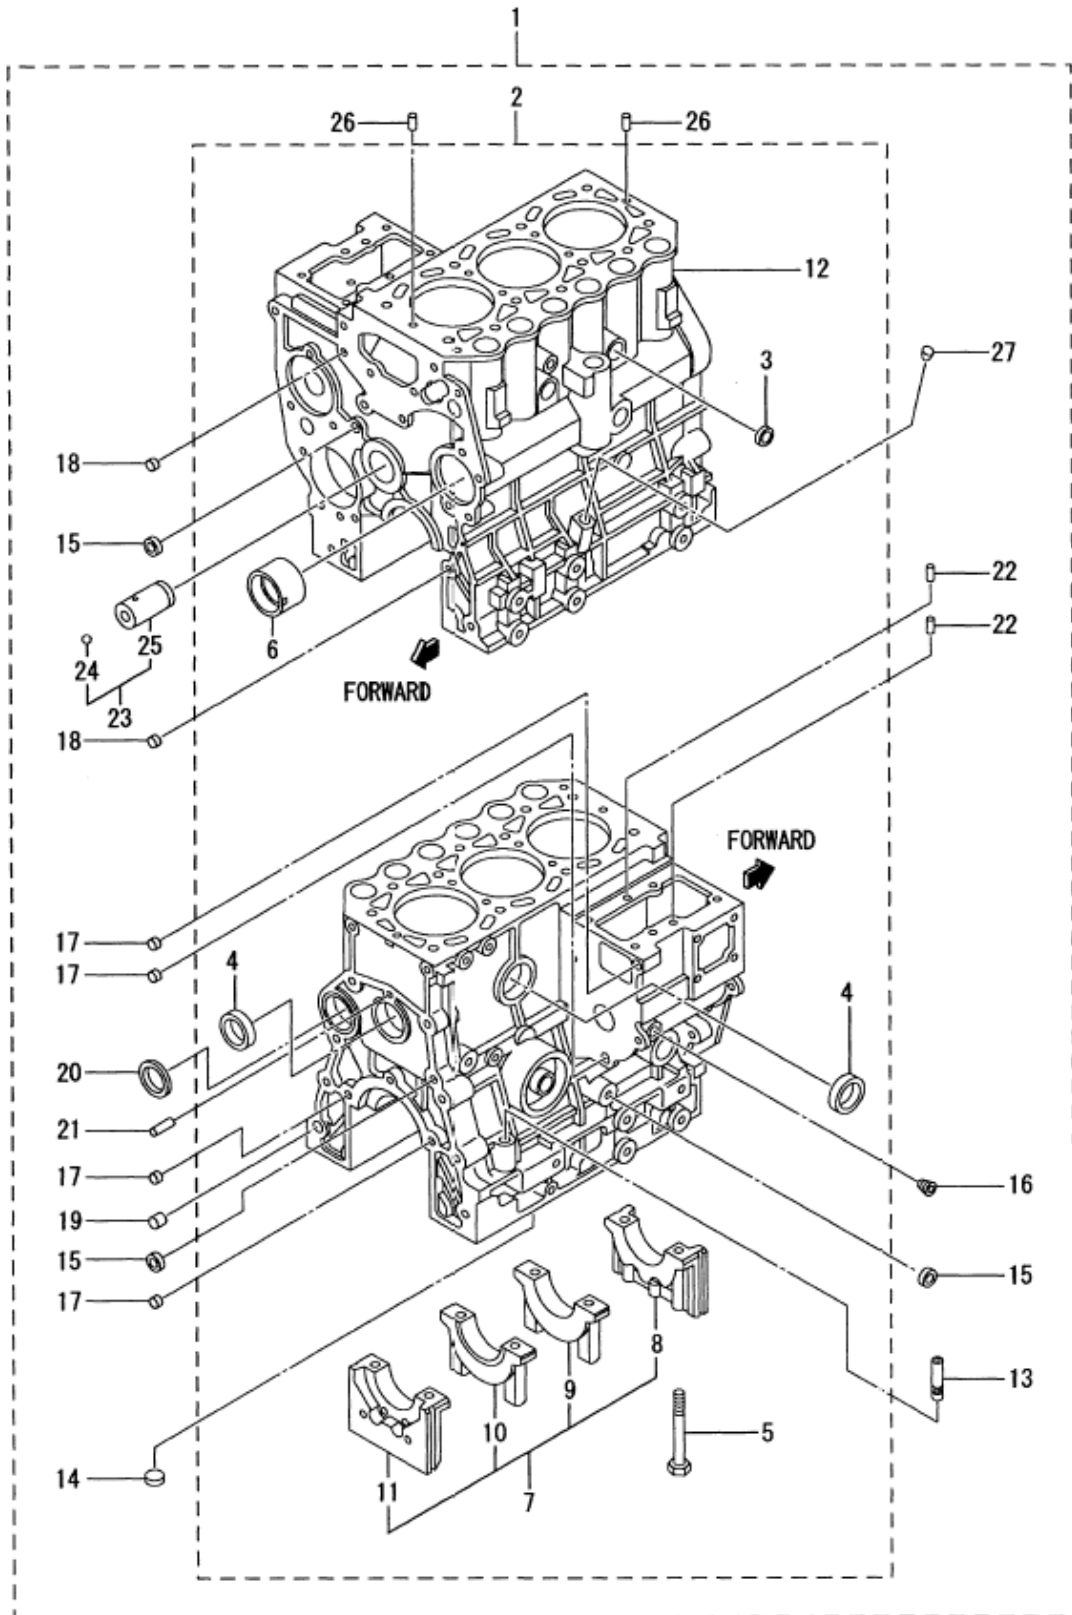

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


FIG 107

CRANKCASE


P1

Year / Month

2006 / 07

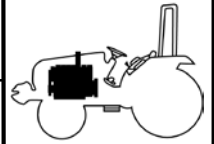

T2334 / T2734

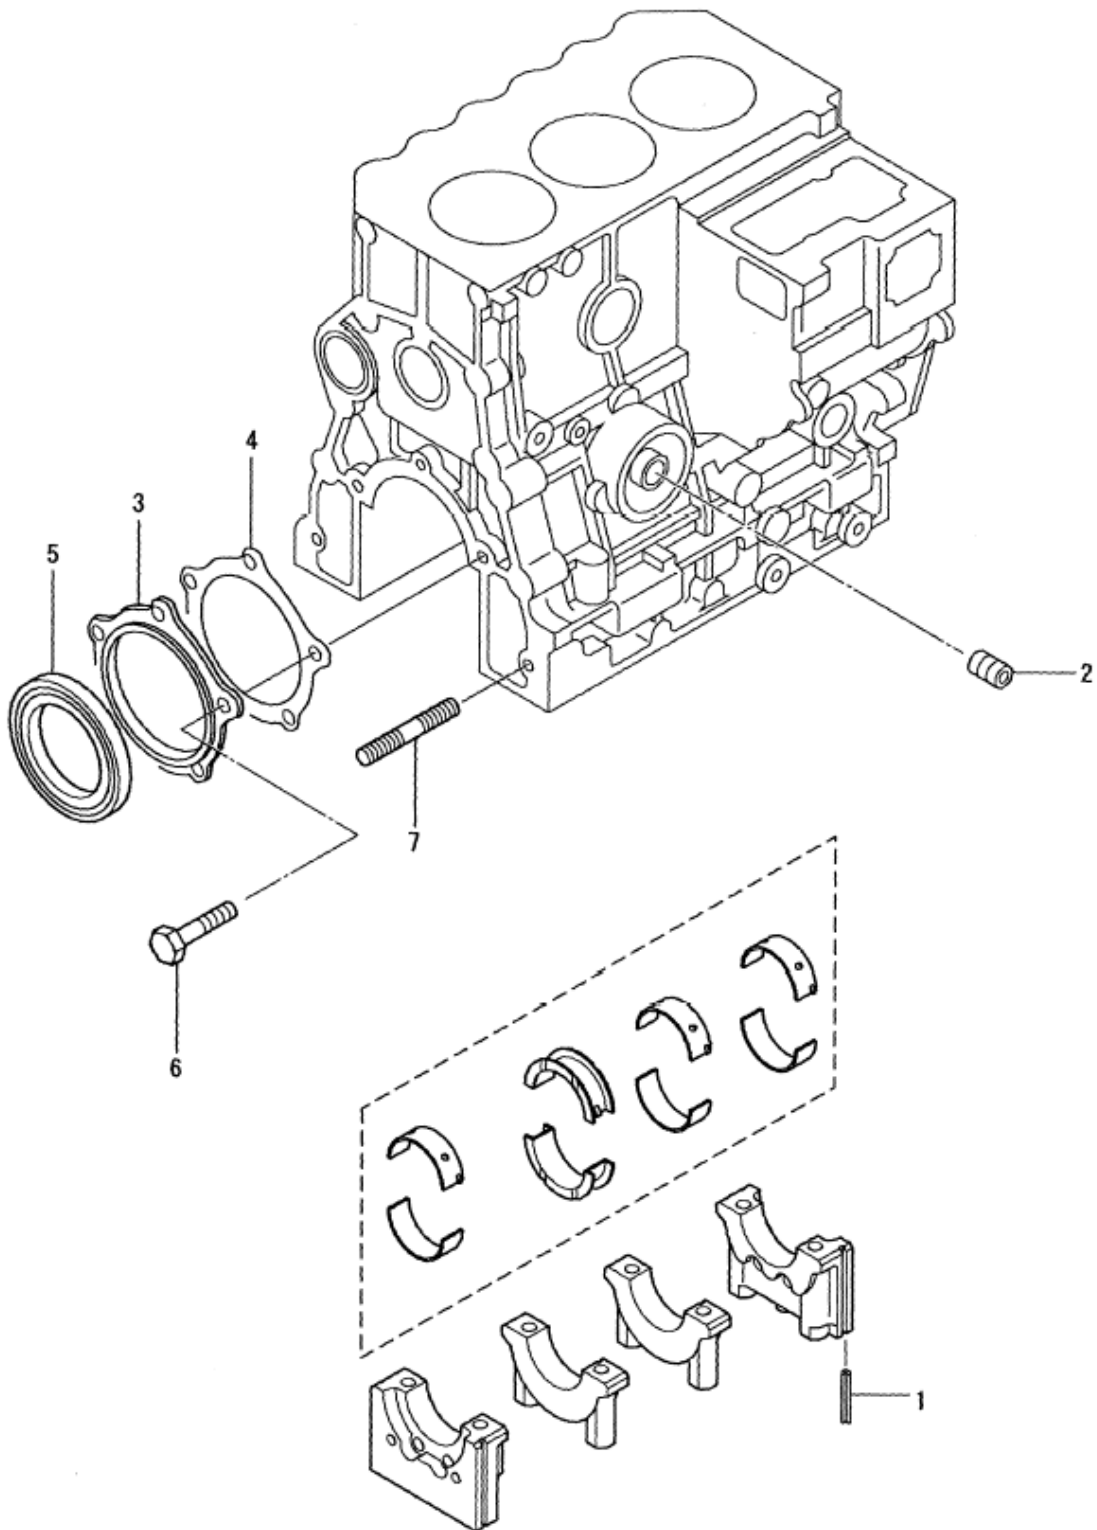

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


FIG 108

DRAIN COCK & PIPE


P1

Year / Month

2006 / 07

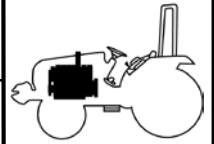

T2334 / T2734

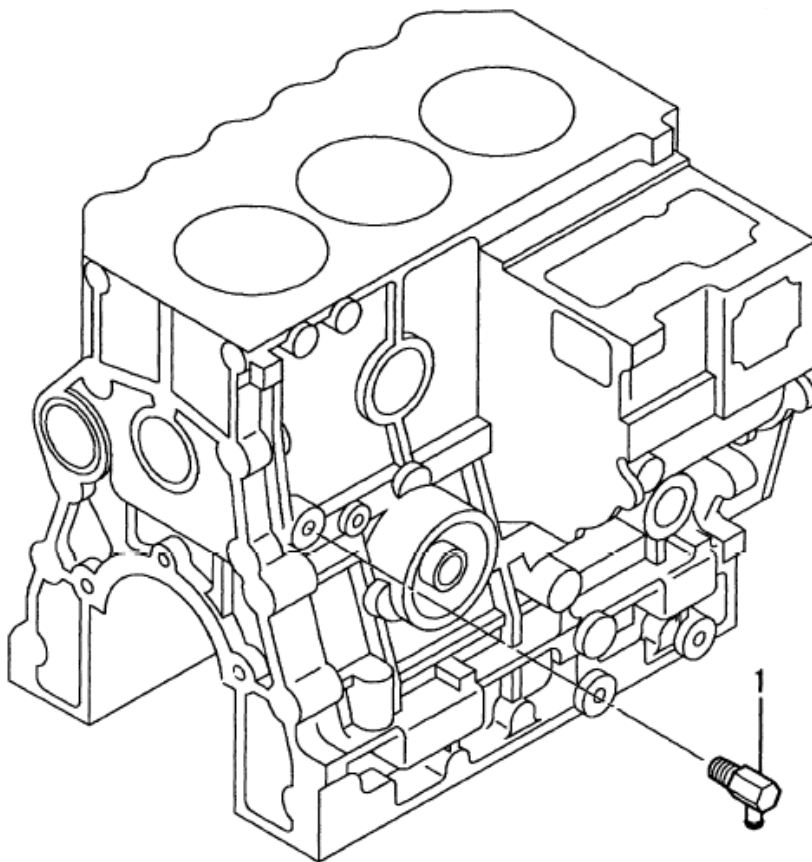

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 109

MAIN BEARING



P1

Year / Month

2006 / 07

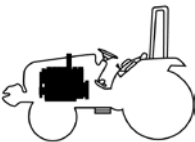

T2334 / T2734

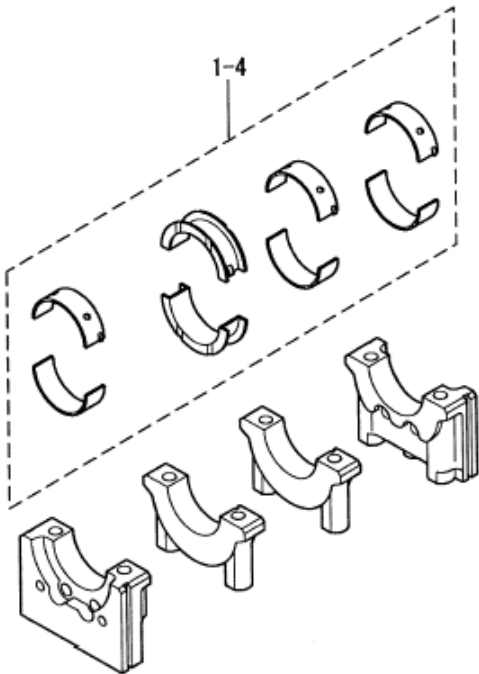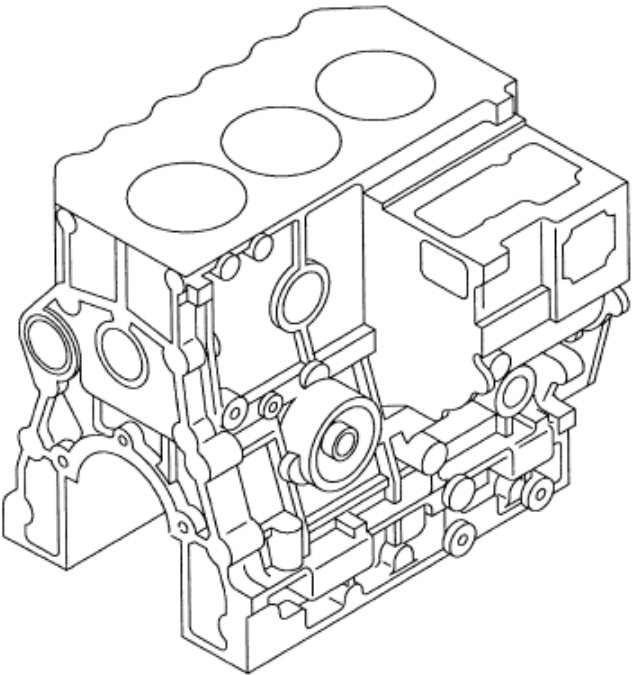

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 110

TIMING GEAR CASE


P1

Year / Month

2006 / 07

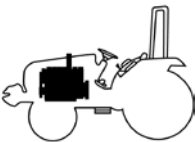

T2334 / T2734

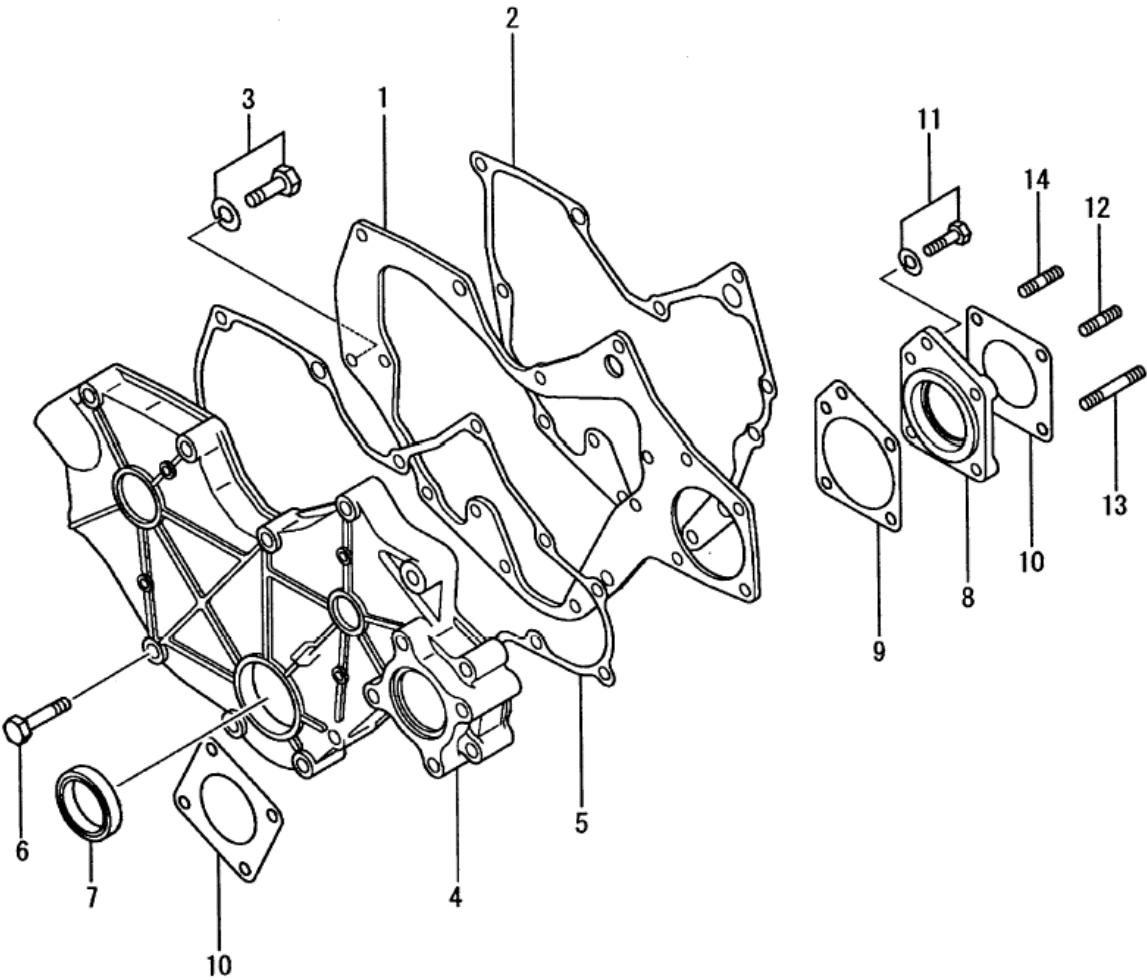

NOTE

T2734 : S3L2 , T2334 : S3L

FIG 111



T2334 / T2734

FLYWHEEL HOUSING

P1

Year / Month

2006 / 07

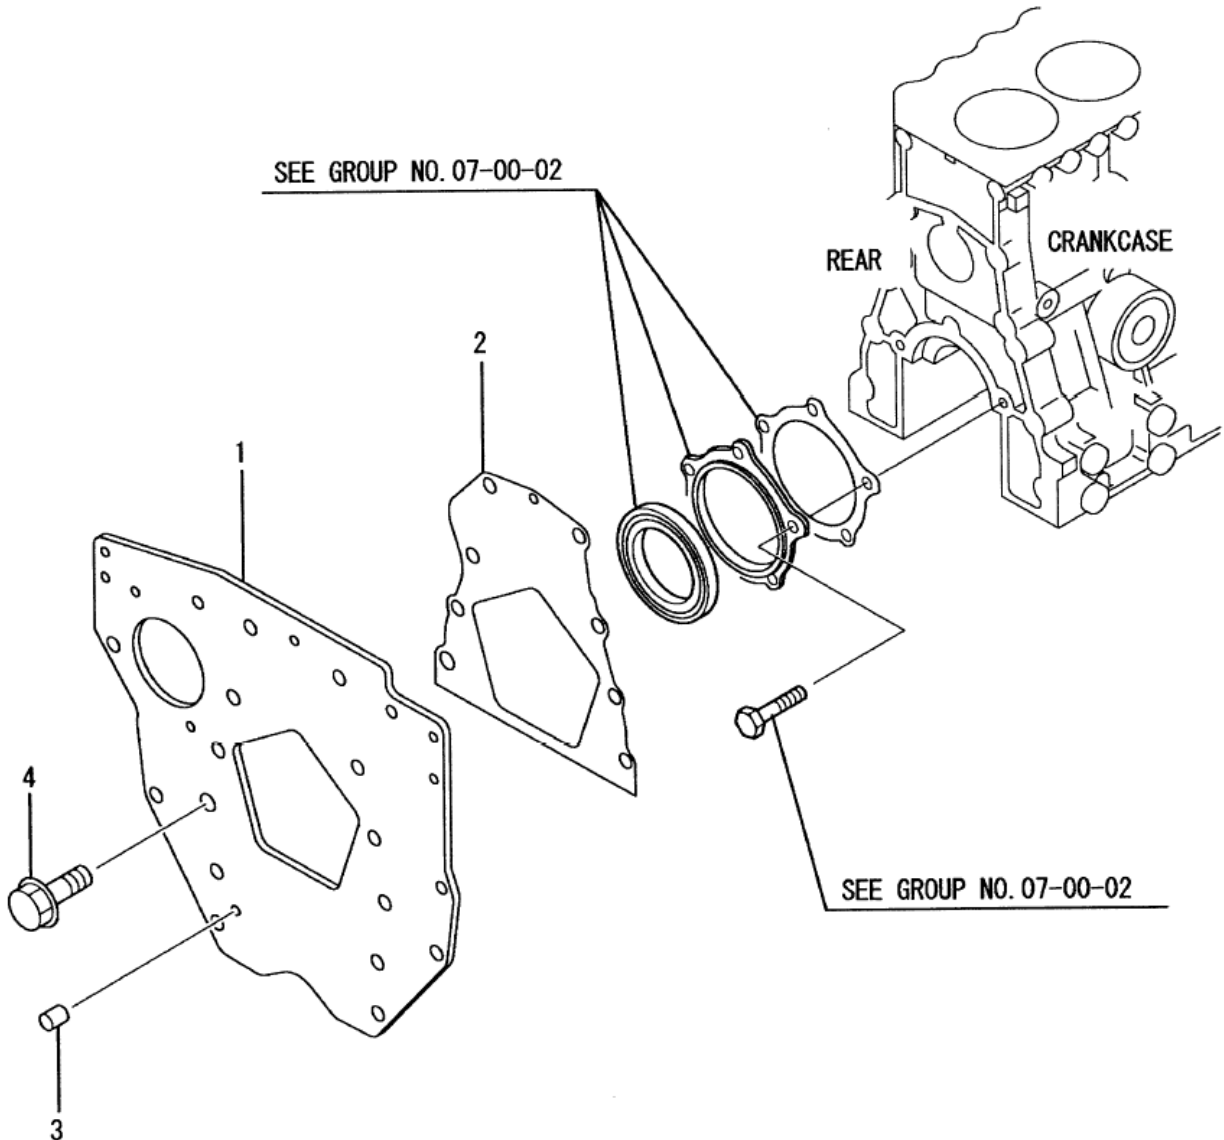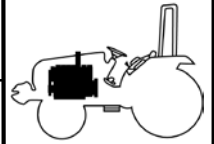

NOTE

T2734 : S3L2 , T2334 : S3L


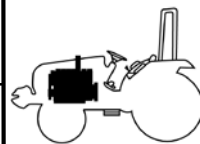


FIG 112

OIL PAN

T2334 / T2734

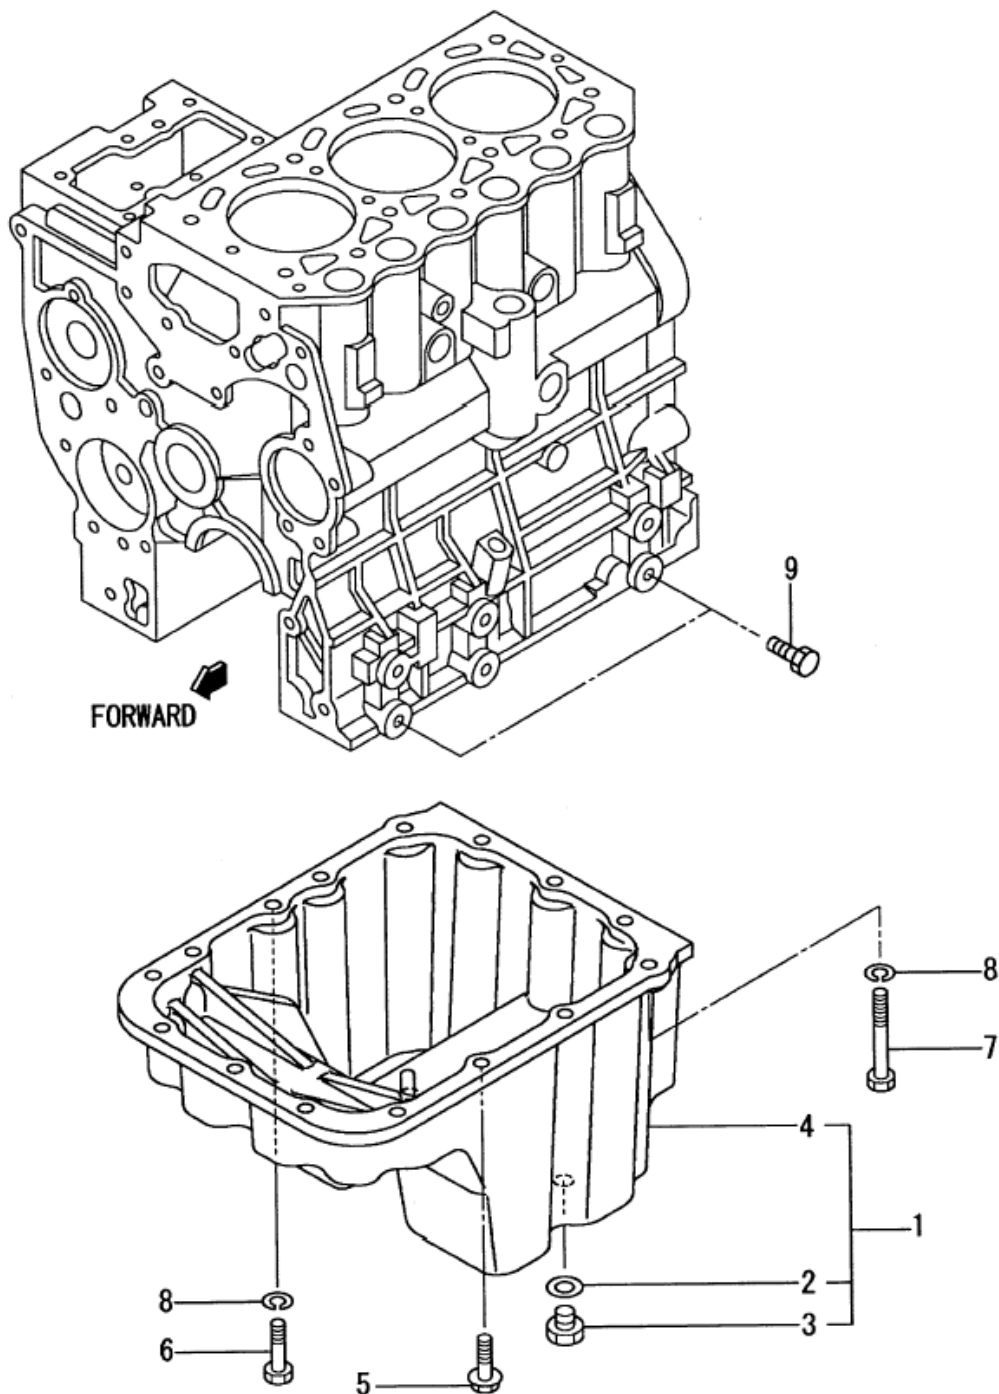

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 113

PISTON


P1

Year / Month

2006 / 07

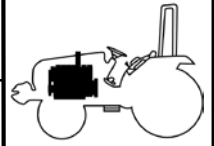

T2334 / T2734

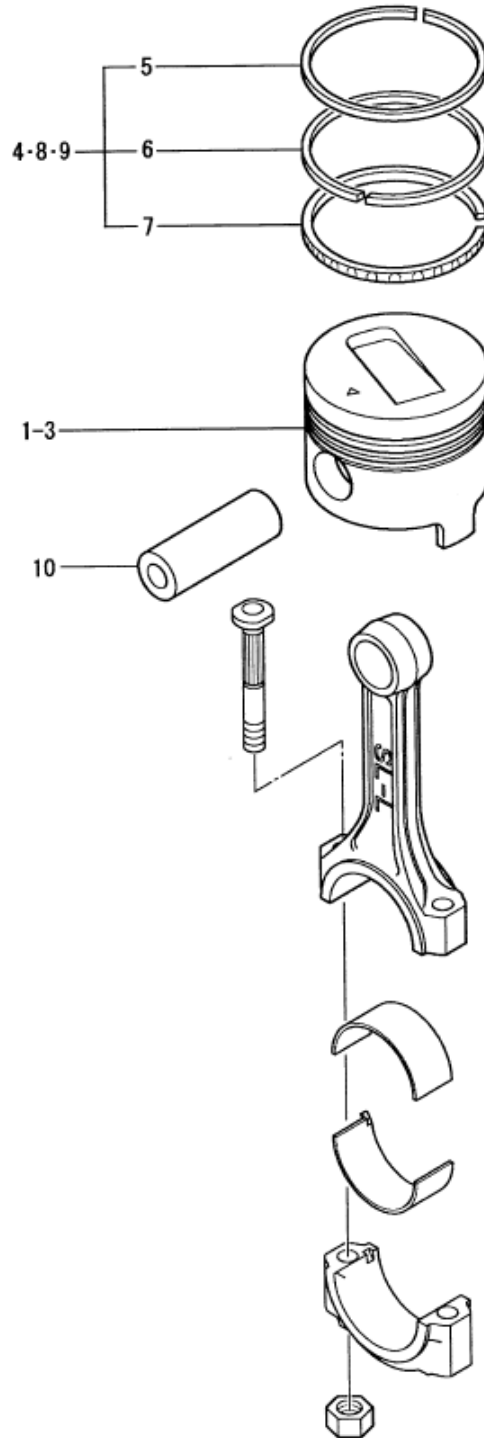

NOTE

T2734 : S3L2 , T2334 : S3L

FIG 114



T2334 / T2734

CONNECTING-ROD

P1

Year / Month

2006 / 07

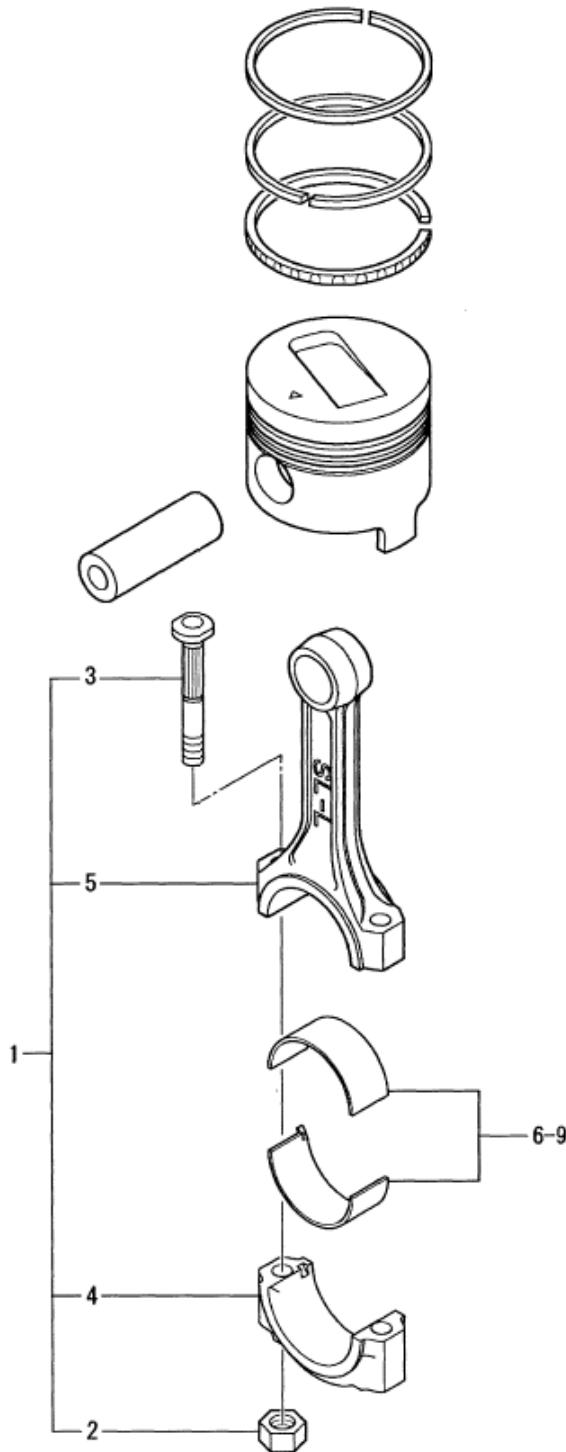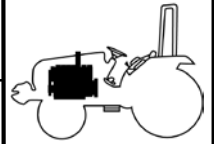

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


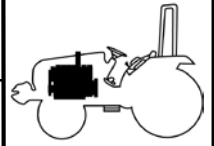


FIG 116

FLYWHEEL

T2334 / T2734

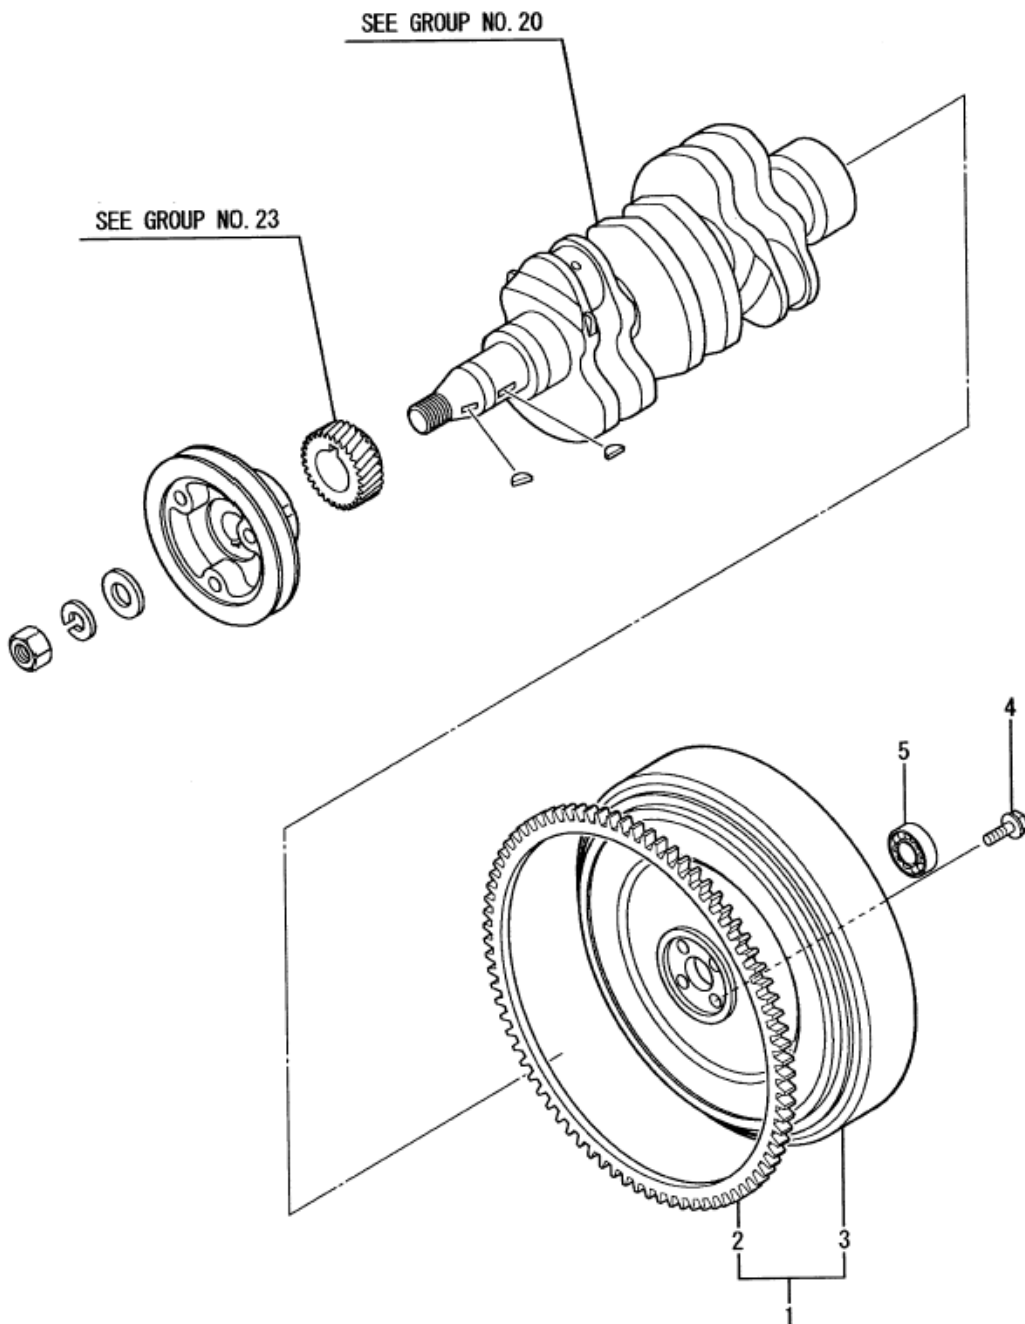

NOTE

T2734 : S3L2 , T2334 : S3L


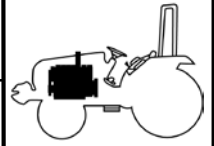


FIG 117

TIMING GEAR

T2334 / T2734

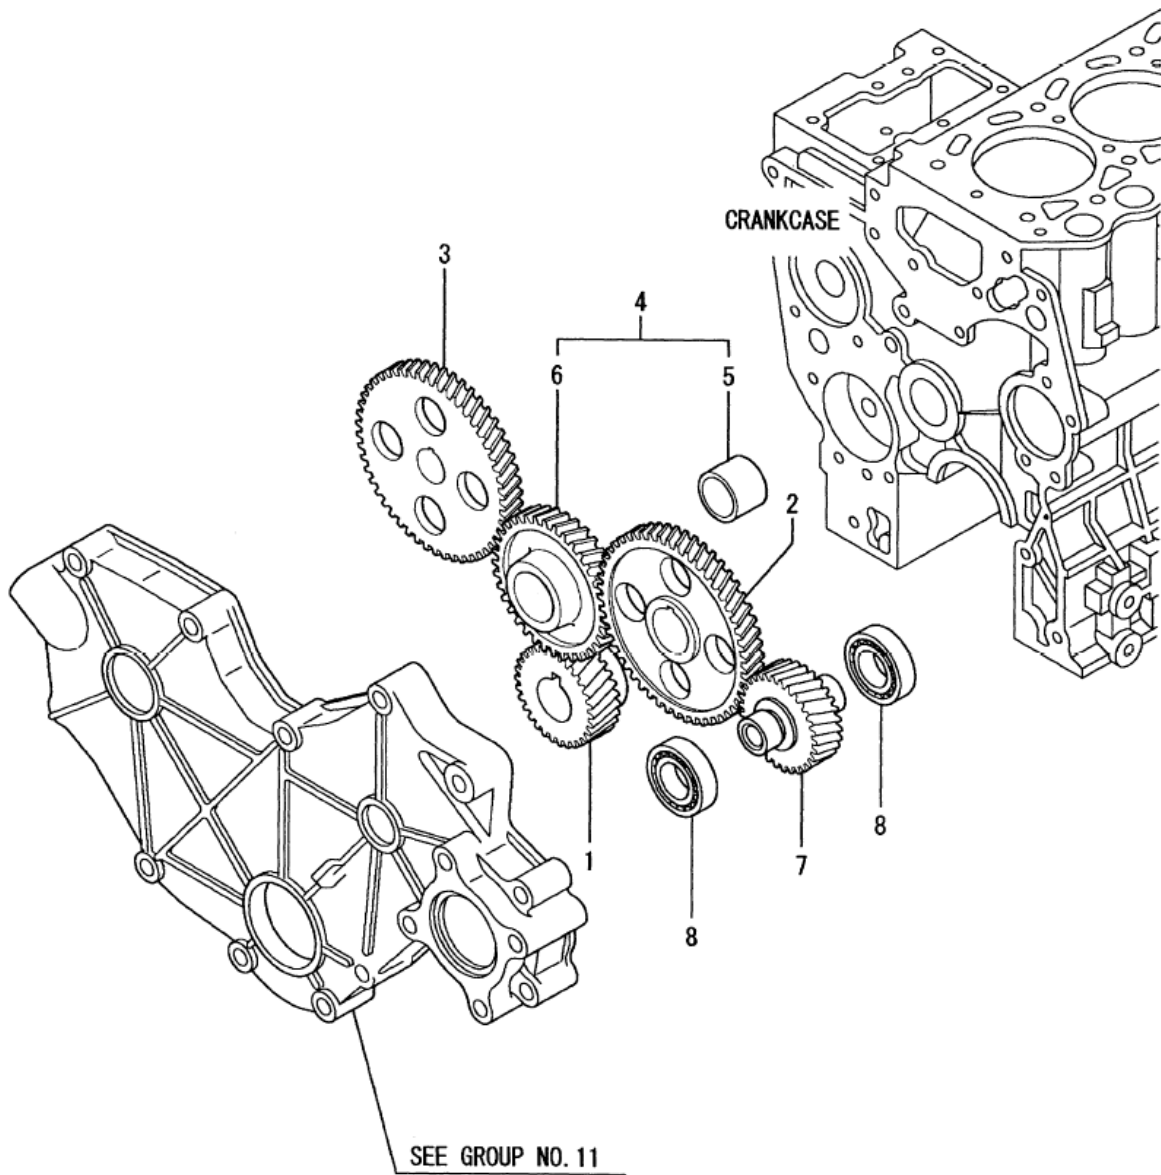

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 118

TACHO DRIVE


P1

Year / Month

2006 / 07

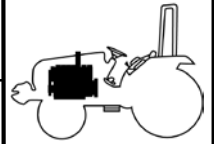

T2334 / T2734

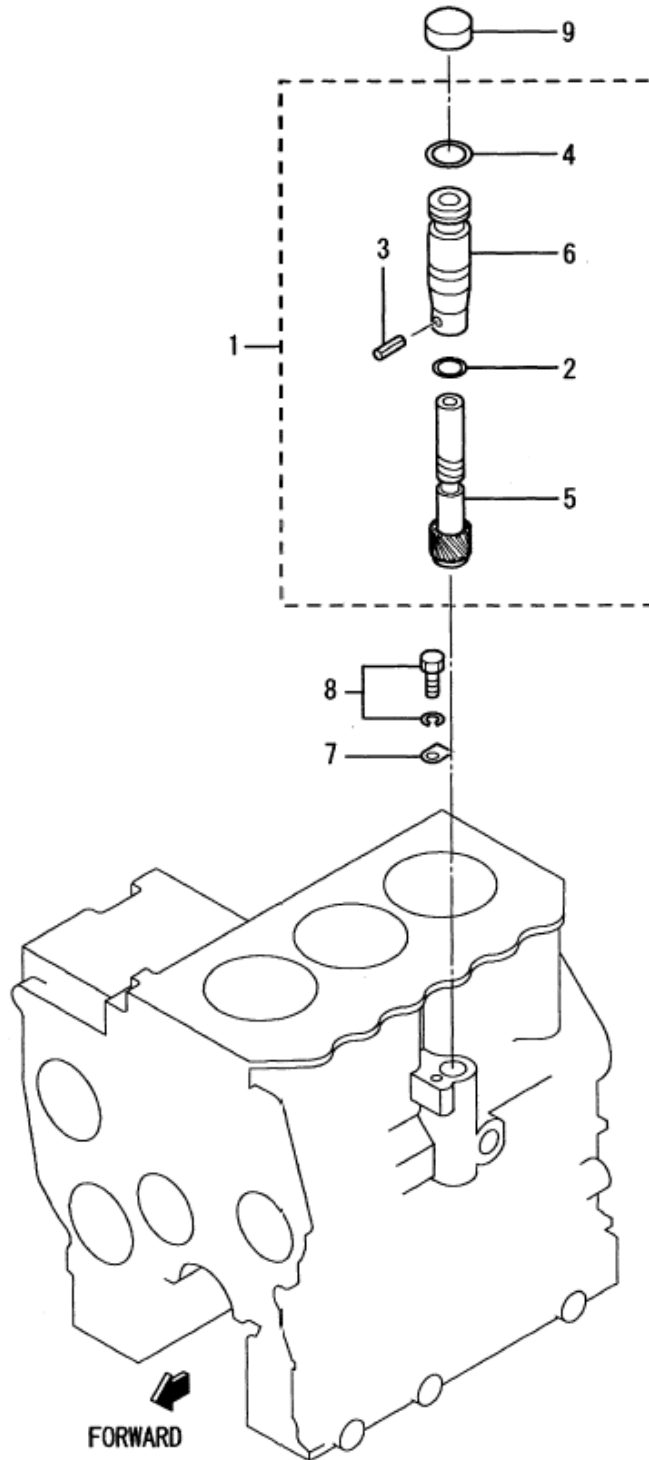

NOTE

T2734 : S3L2 , T2334 : S3L


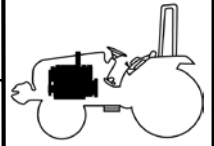


FIG 119

INLET SYSTEM

T2334 / T2734

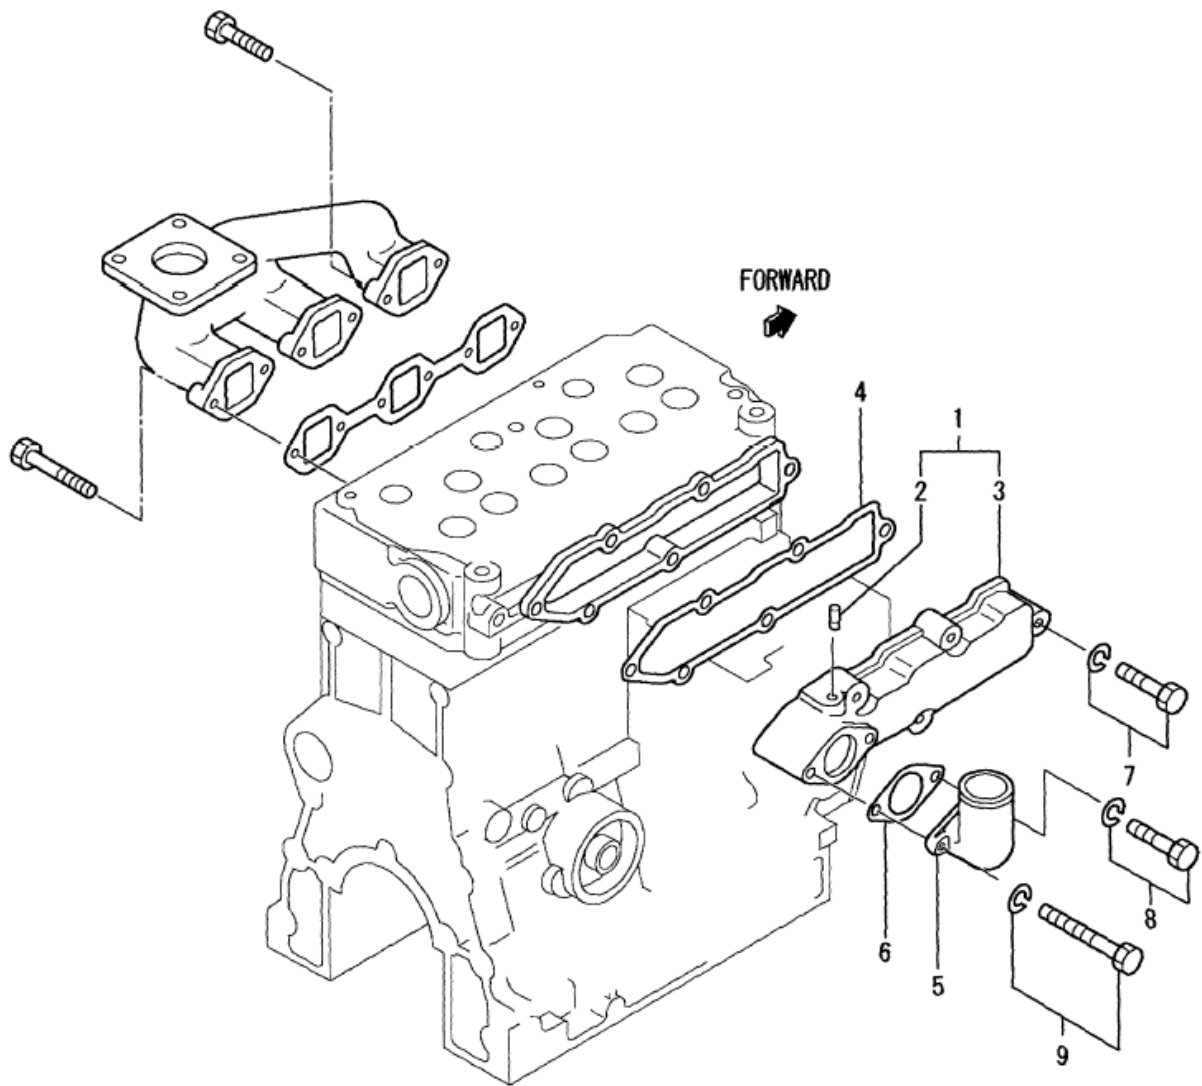

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


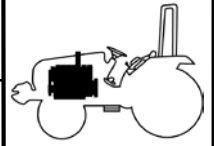


FIG 120

EXHAUST SYSTEM

T2334 / T2734

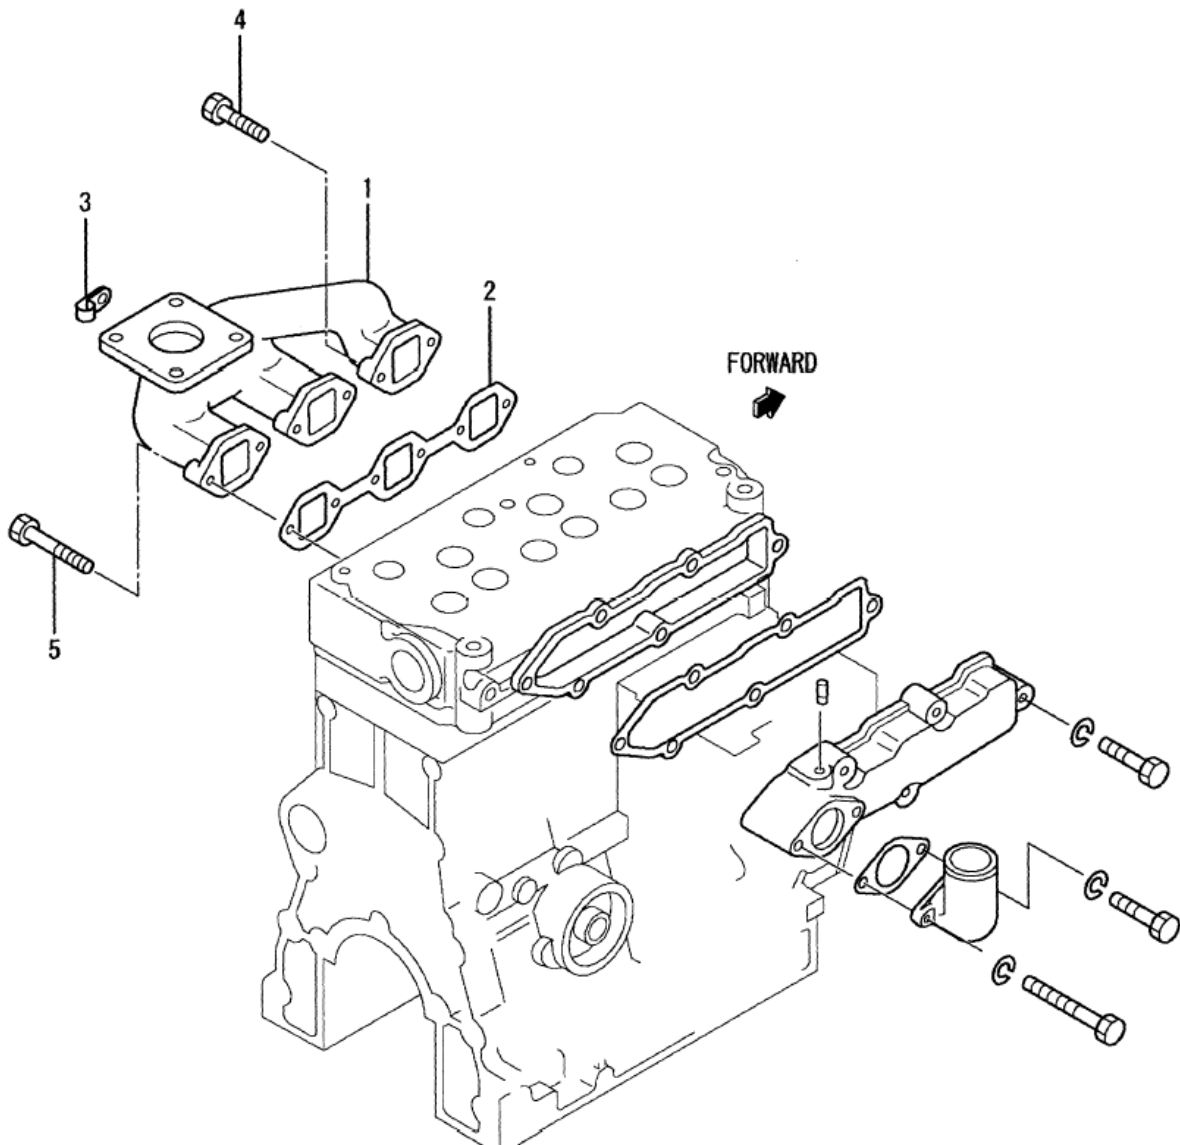

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 121

OIL PUMP


P1

Year / Month

2006 / 07

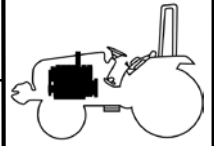

T2334 / T2734

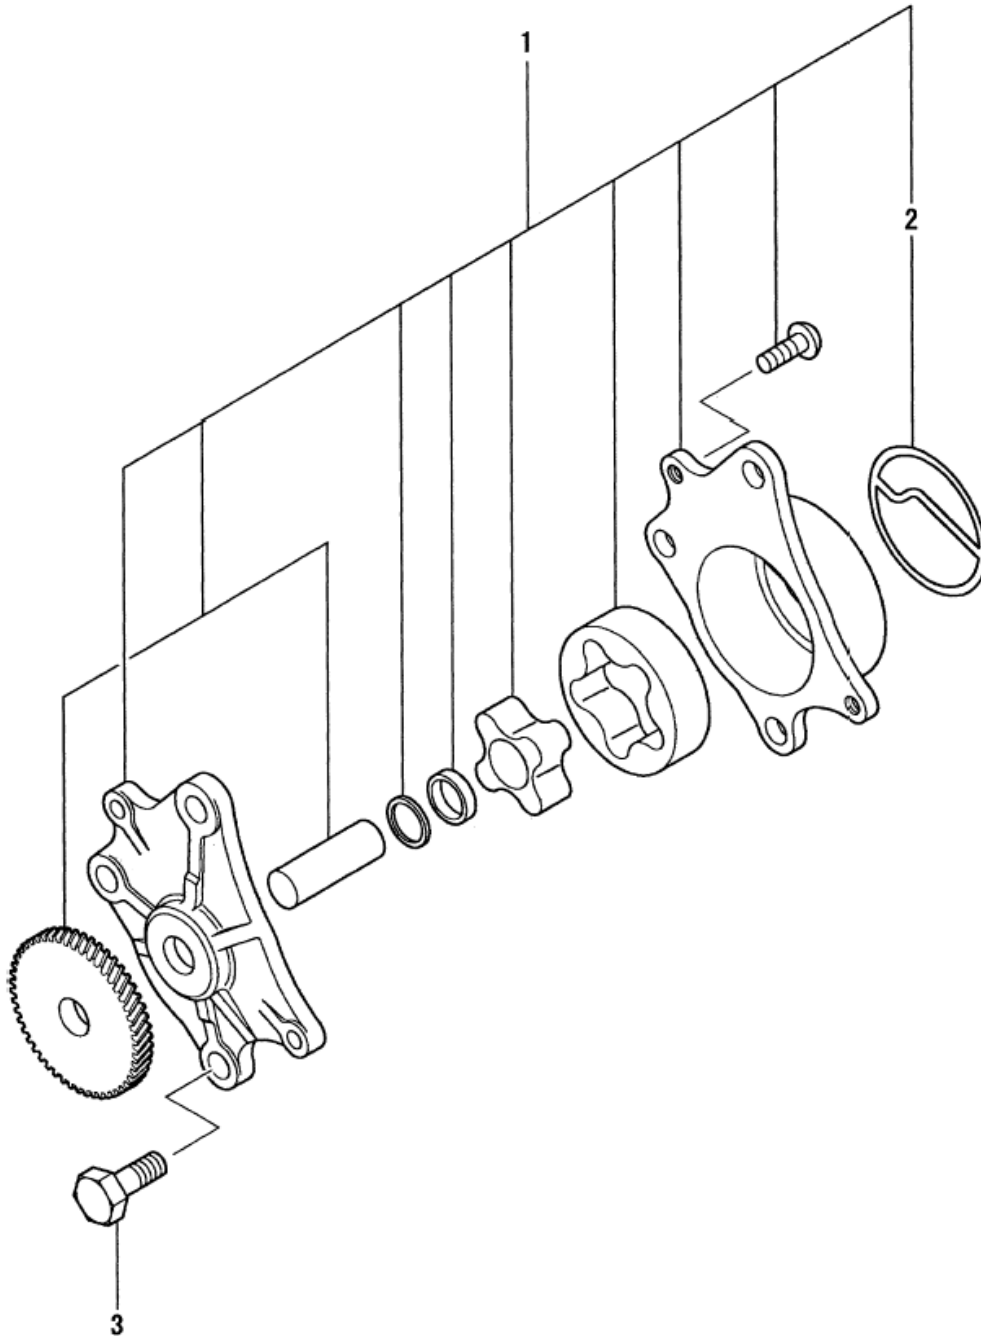

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 122

OIL STRAINER



P1

Year / Month

2006 / 07

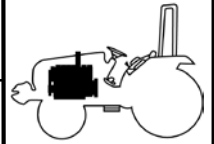

T2334 / T2734

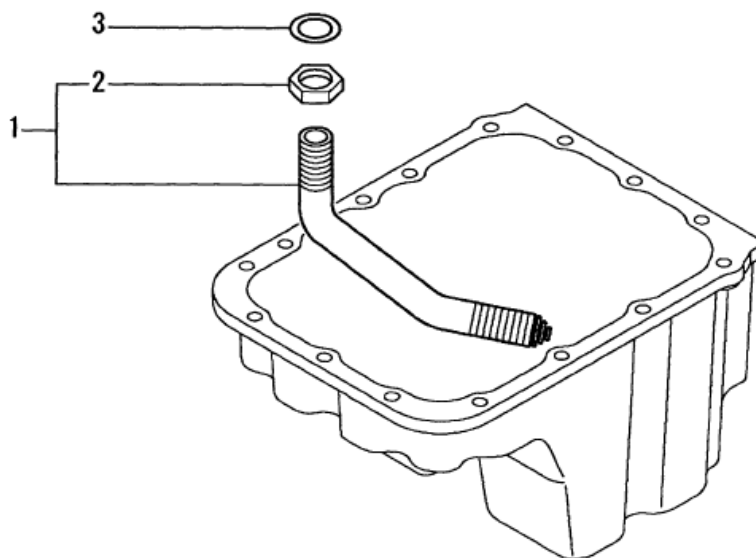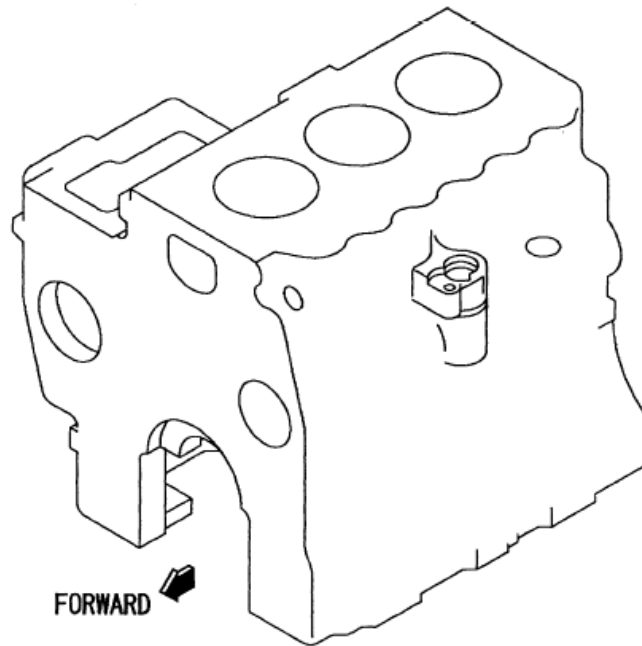

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 123

OIL SYSTEM


P1

Year / Month

2006 / 07

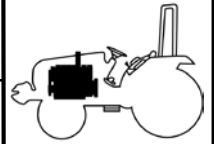

T2334 / T2734

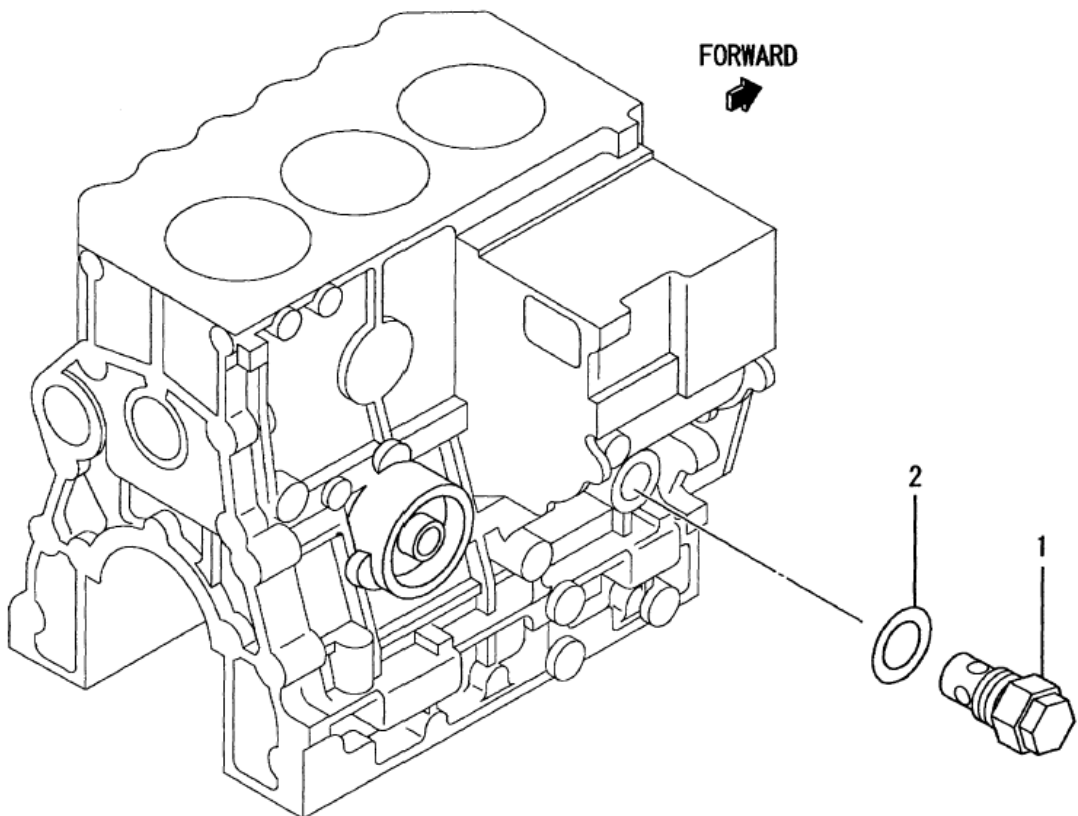

NOTE

T2734 : S3L2 , T2334 : S3L

FIG 124



T2334 / T2734

OIL FILTER & GAGE

P1

Year / Month

2006 / 07

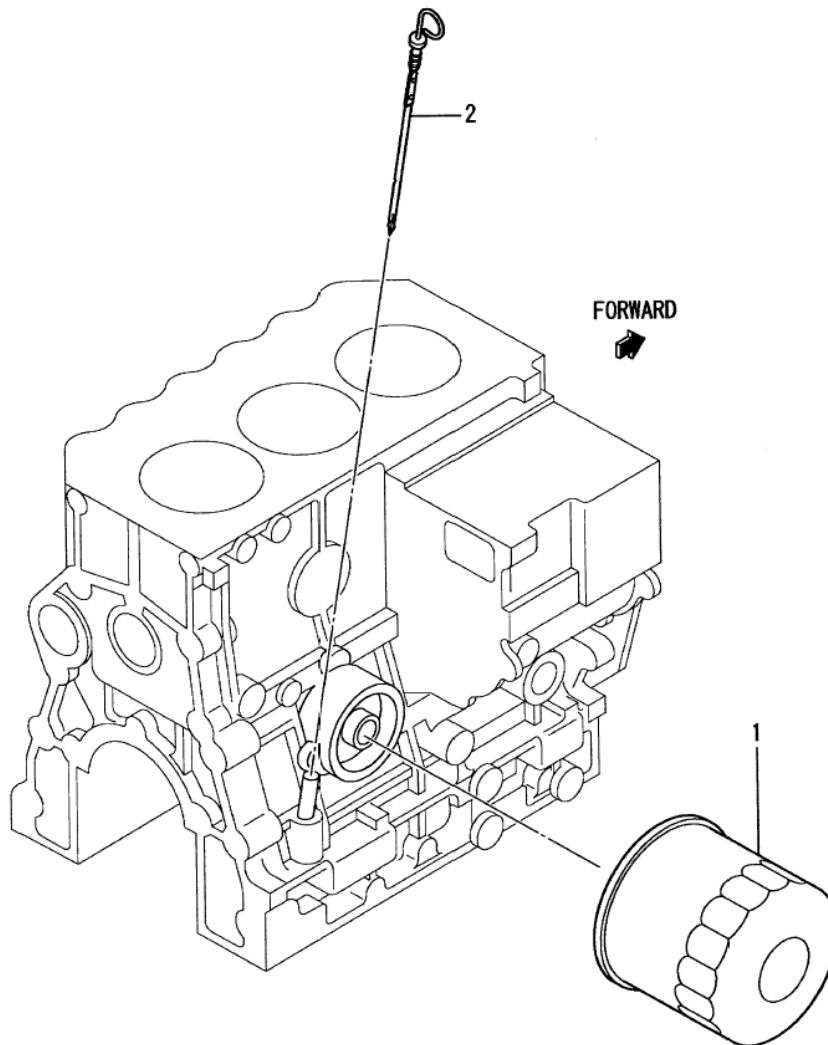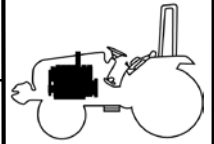

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 125

BREATHER


P1

Year / Month

2006 / 07

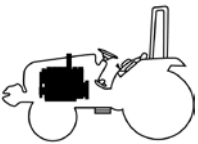

T2334 / T2734

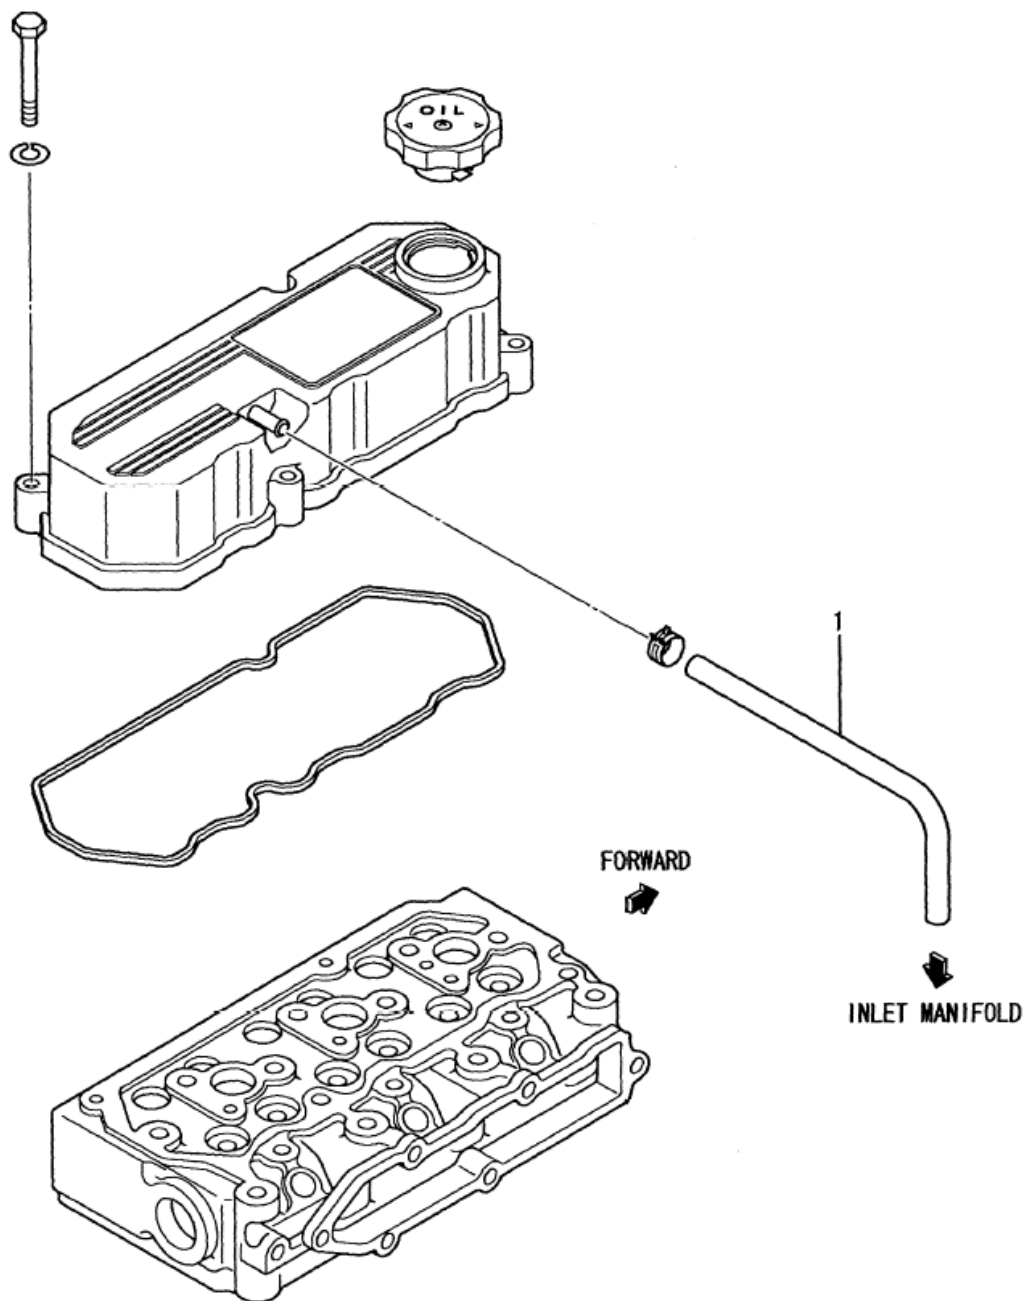

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]

FIG 127



T2334 / T2734

COOLING SYSTEM

P1

Year / Month

2006 / 07

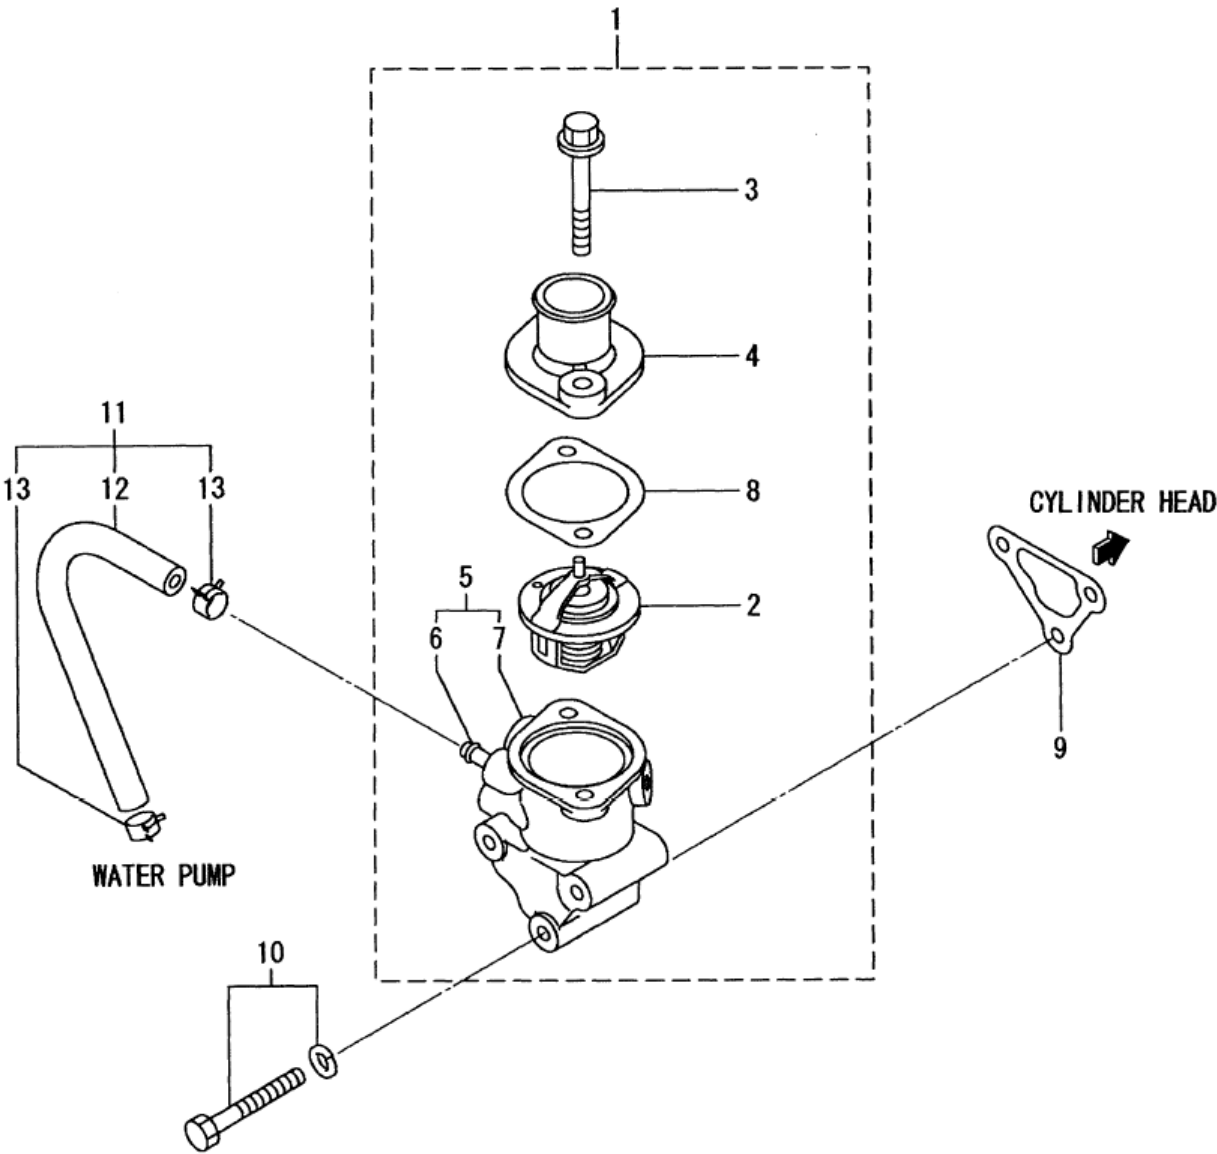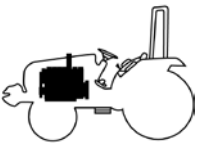

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


FIG 128

FAN & V-BELT


P1

Year / Month

2006 / 07

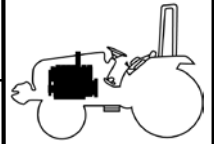


T2334 / T2734

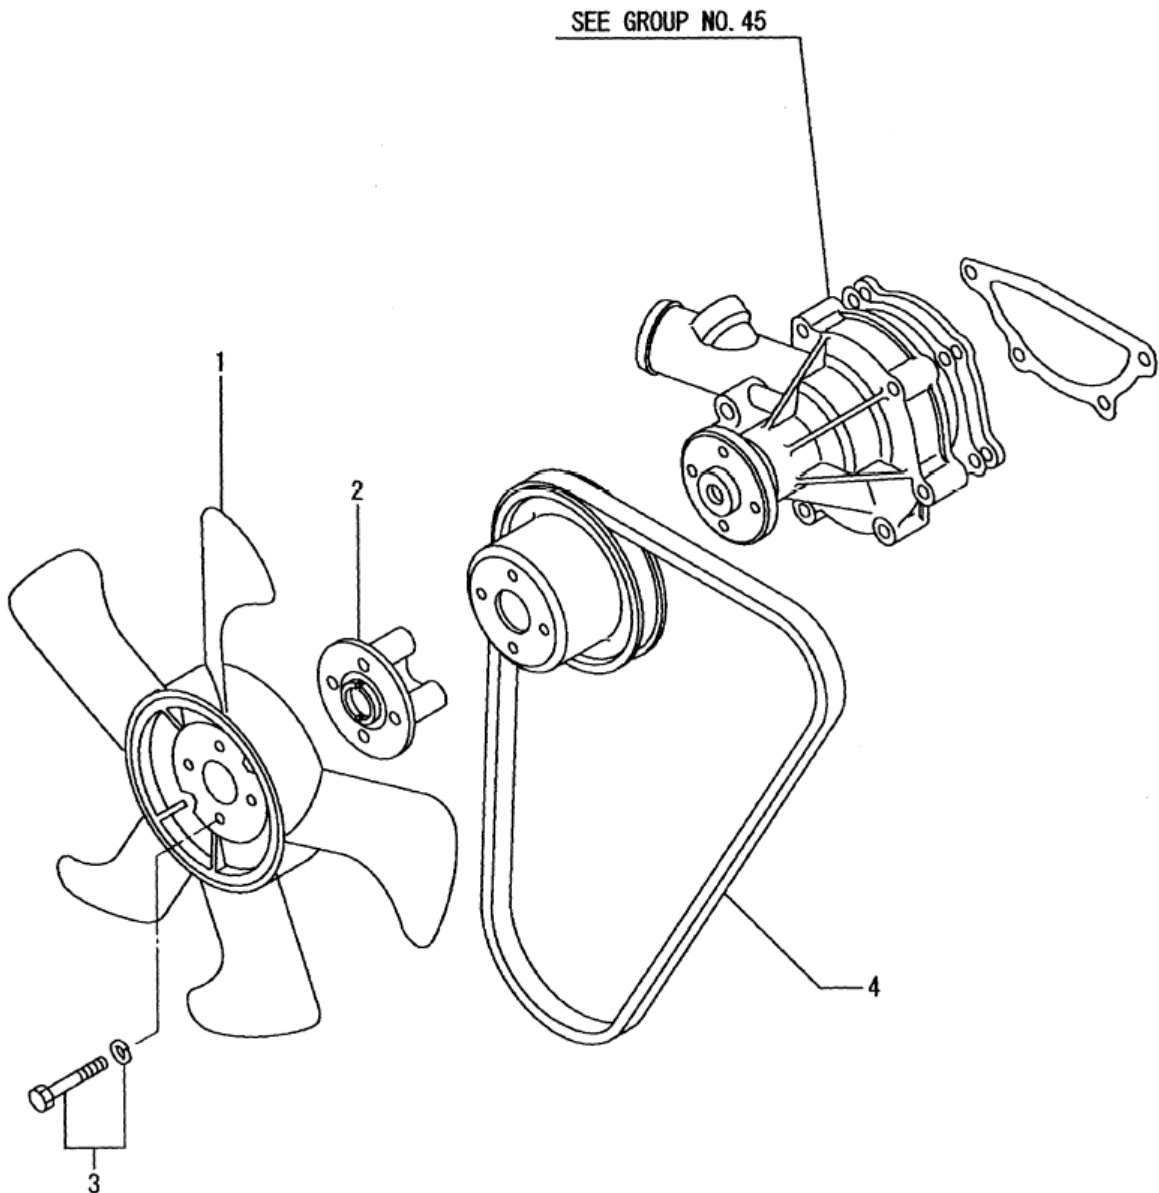

NOTE

T2734 : S3L2 , T2334 : S3L

2006 / 07

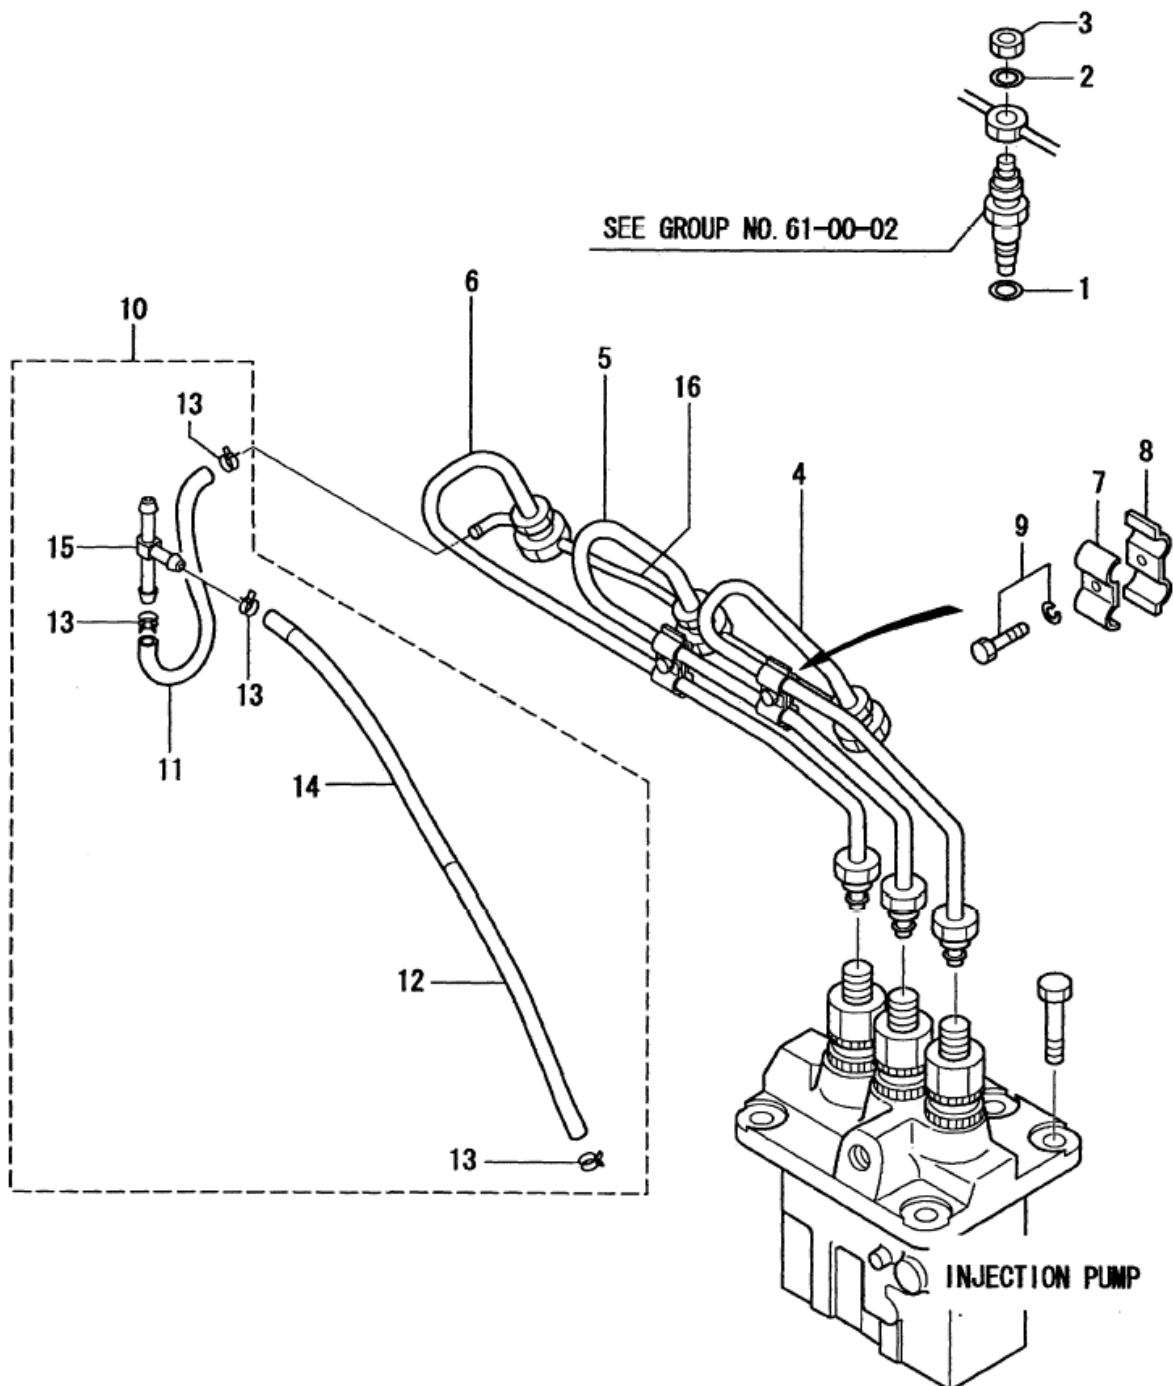

[illegible]



FIG 131

NOZZLE & NOZZLE HOLDER

P1

Year / Month

2006 / 07

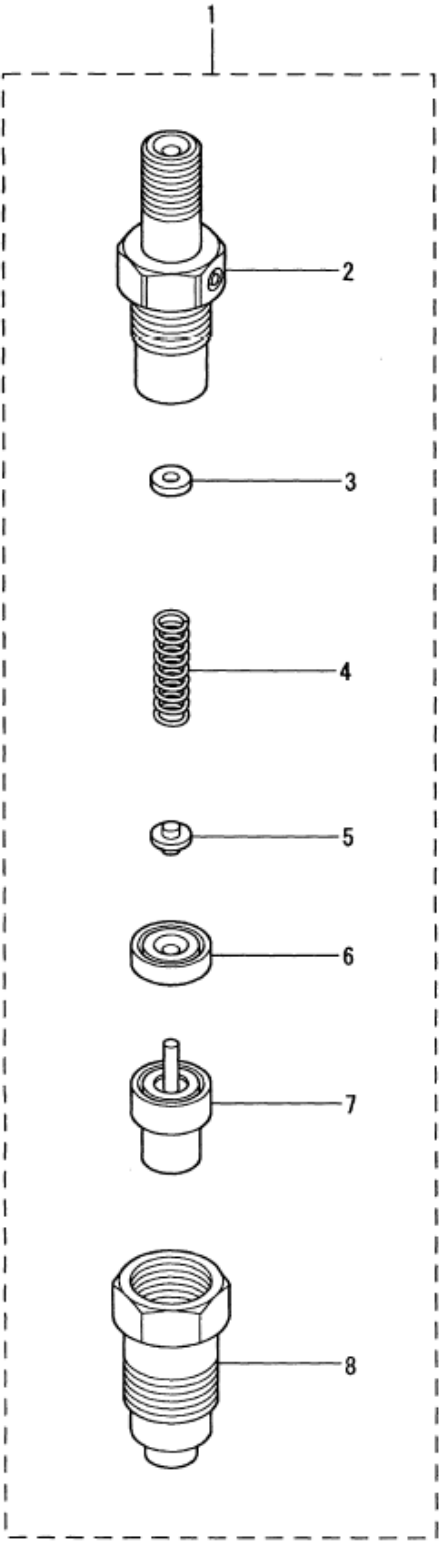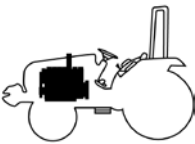

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


FIG 133

GOVERNOR


P1

Year / Month

2006 / 07

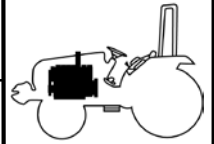

T2334 / T2734

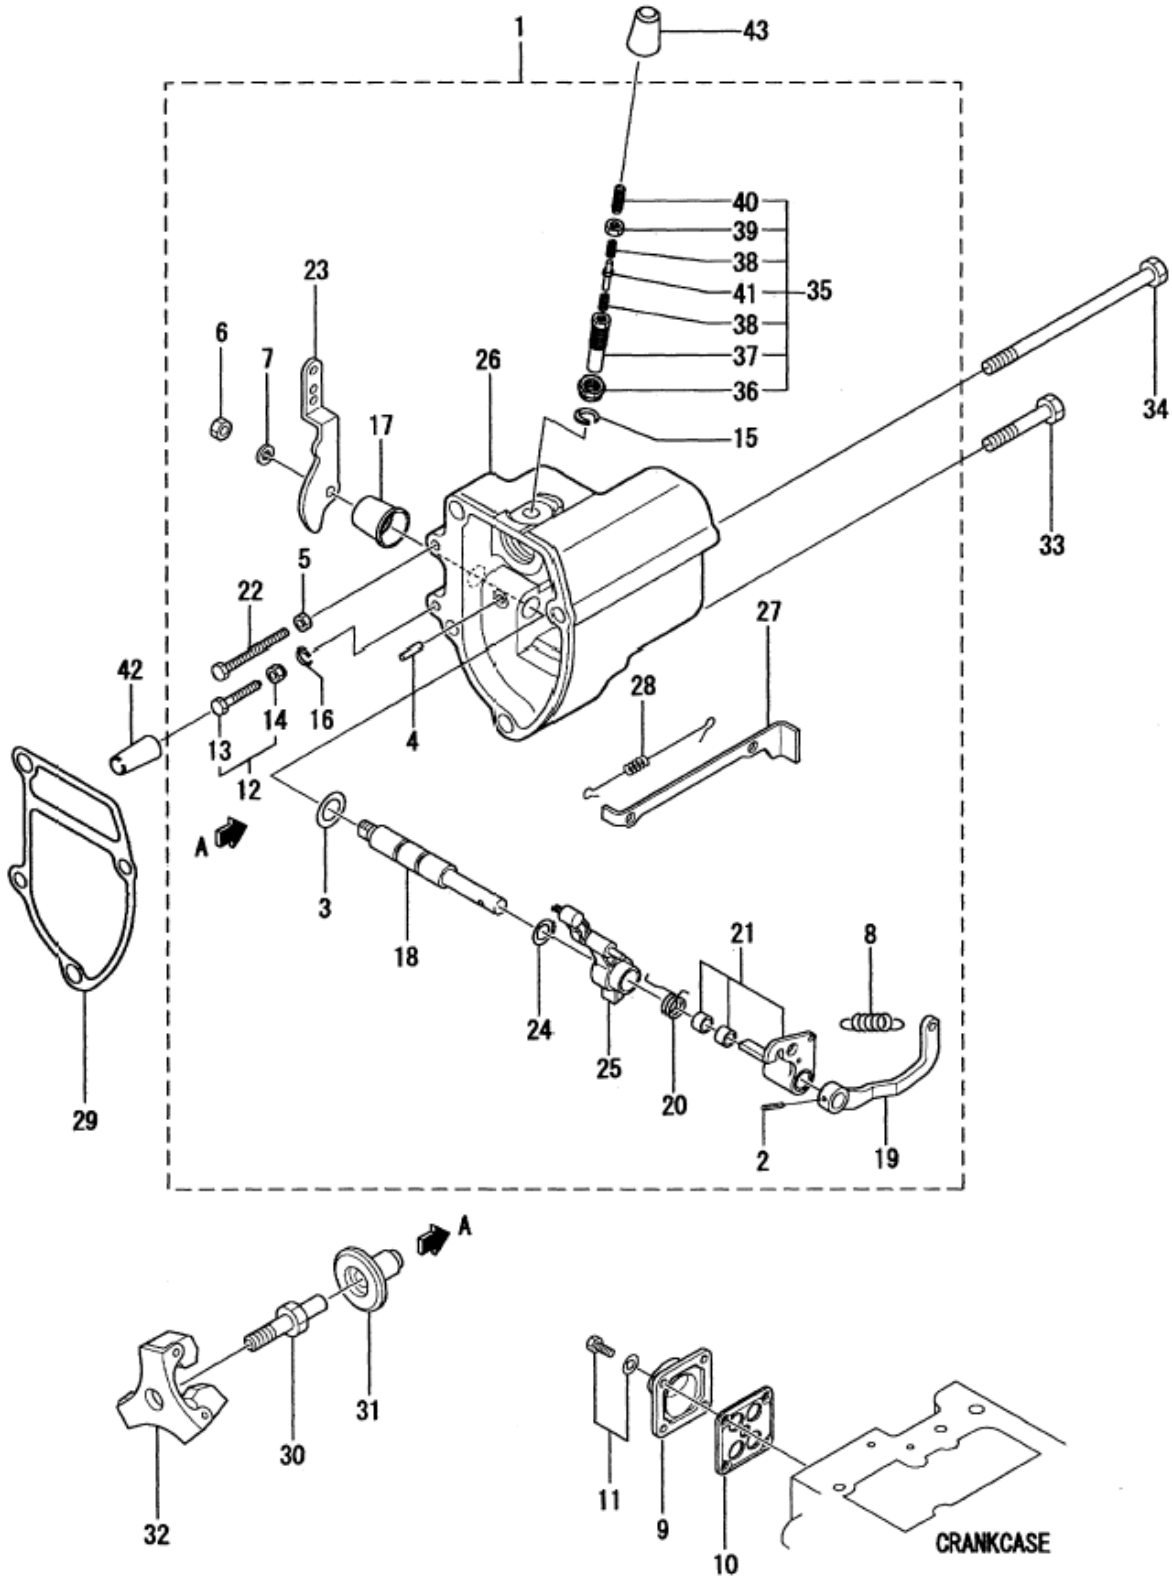

NOTE

T2734 : S3L2 , T2334 : S3L


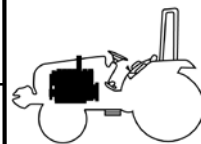


FIG 134

INJECTION PUMP

T2334 / T2734

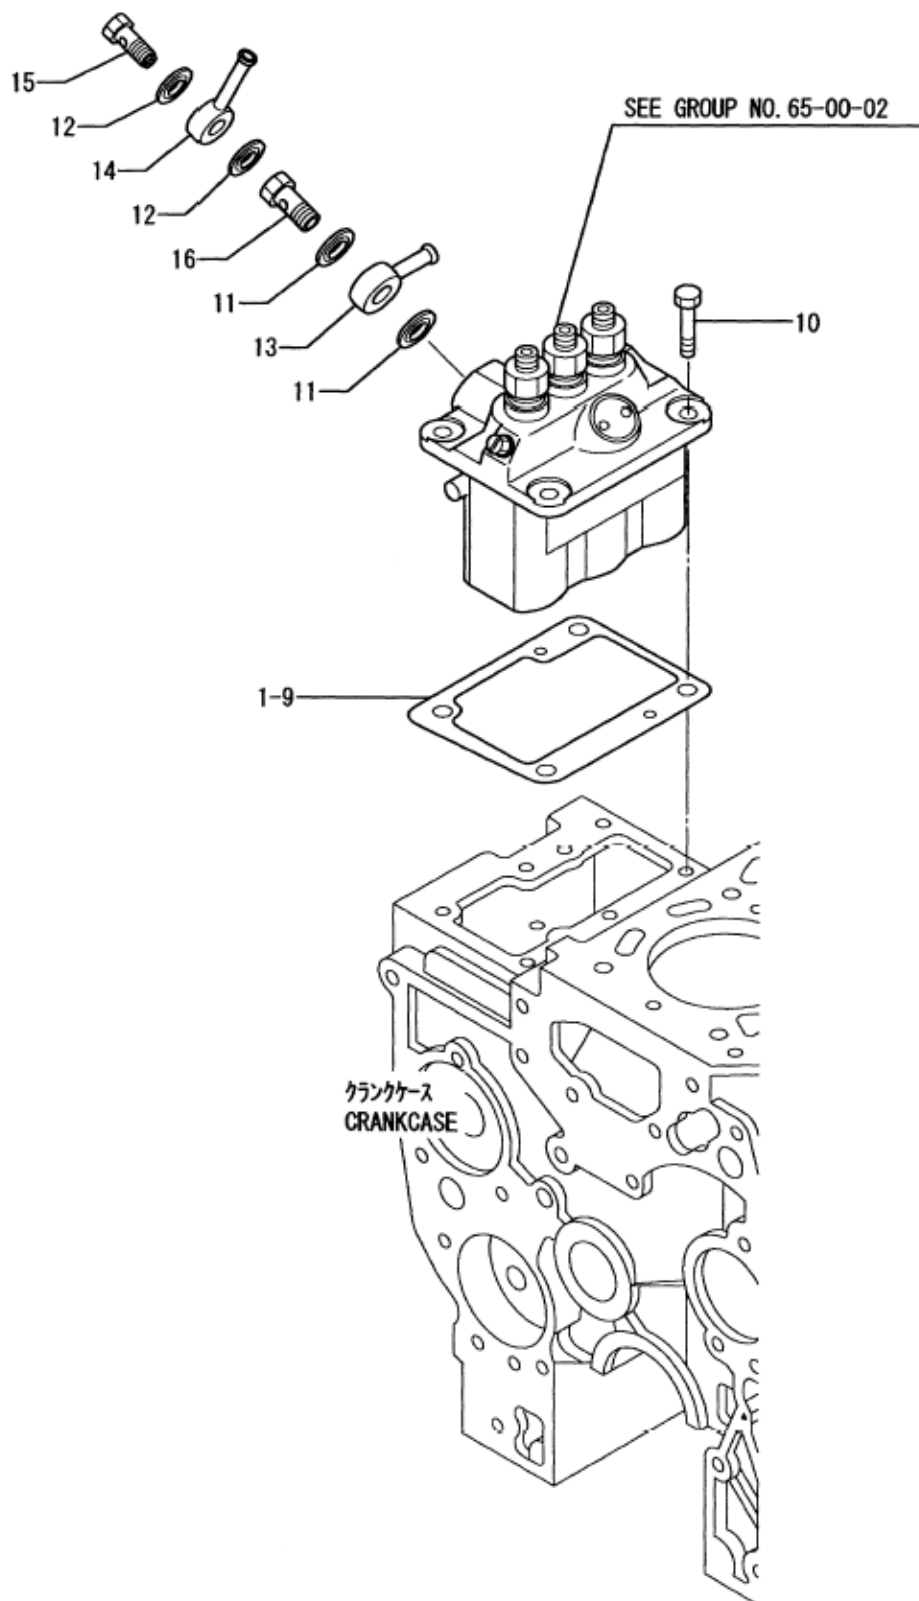

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]

FIG 135



T2334 / T2734

INJECTION PUMP

P1

Year / Month

2006 / 07

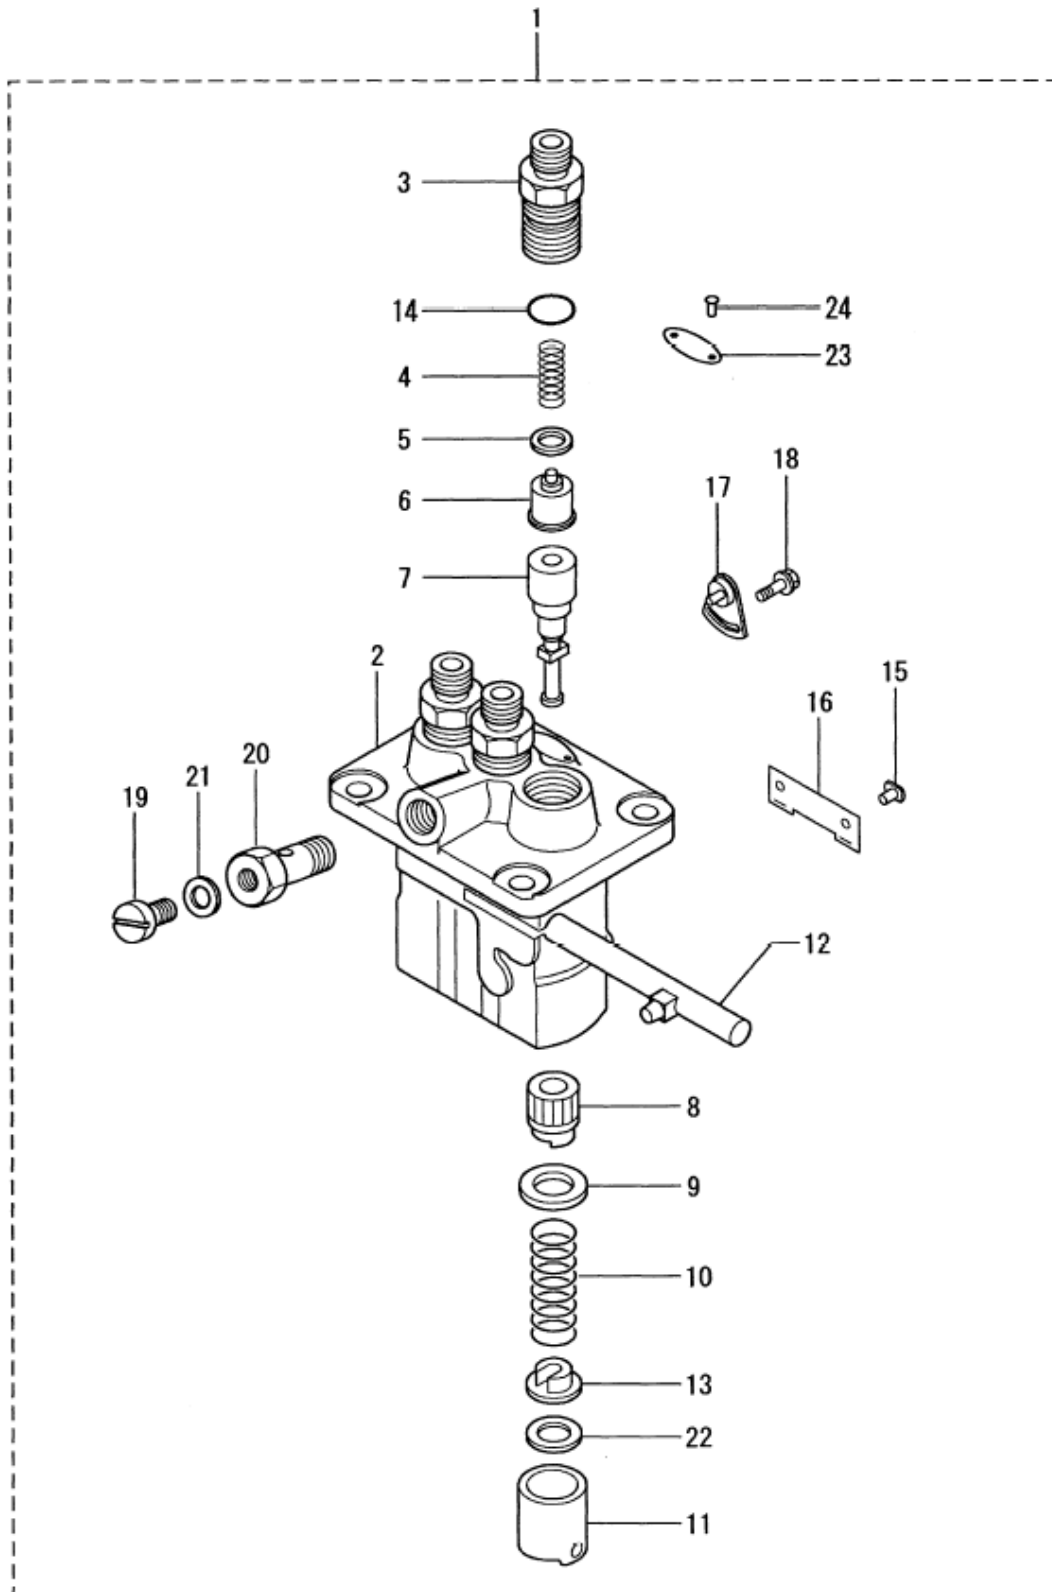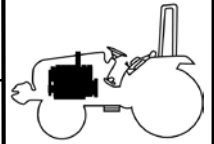

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]



FIG 136

FUEL INJECTION PUMP DRIVE

P1

Year / Month

2006 / 07

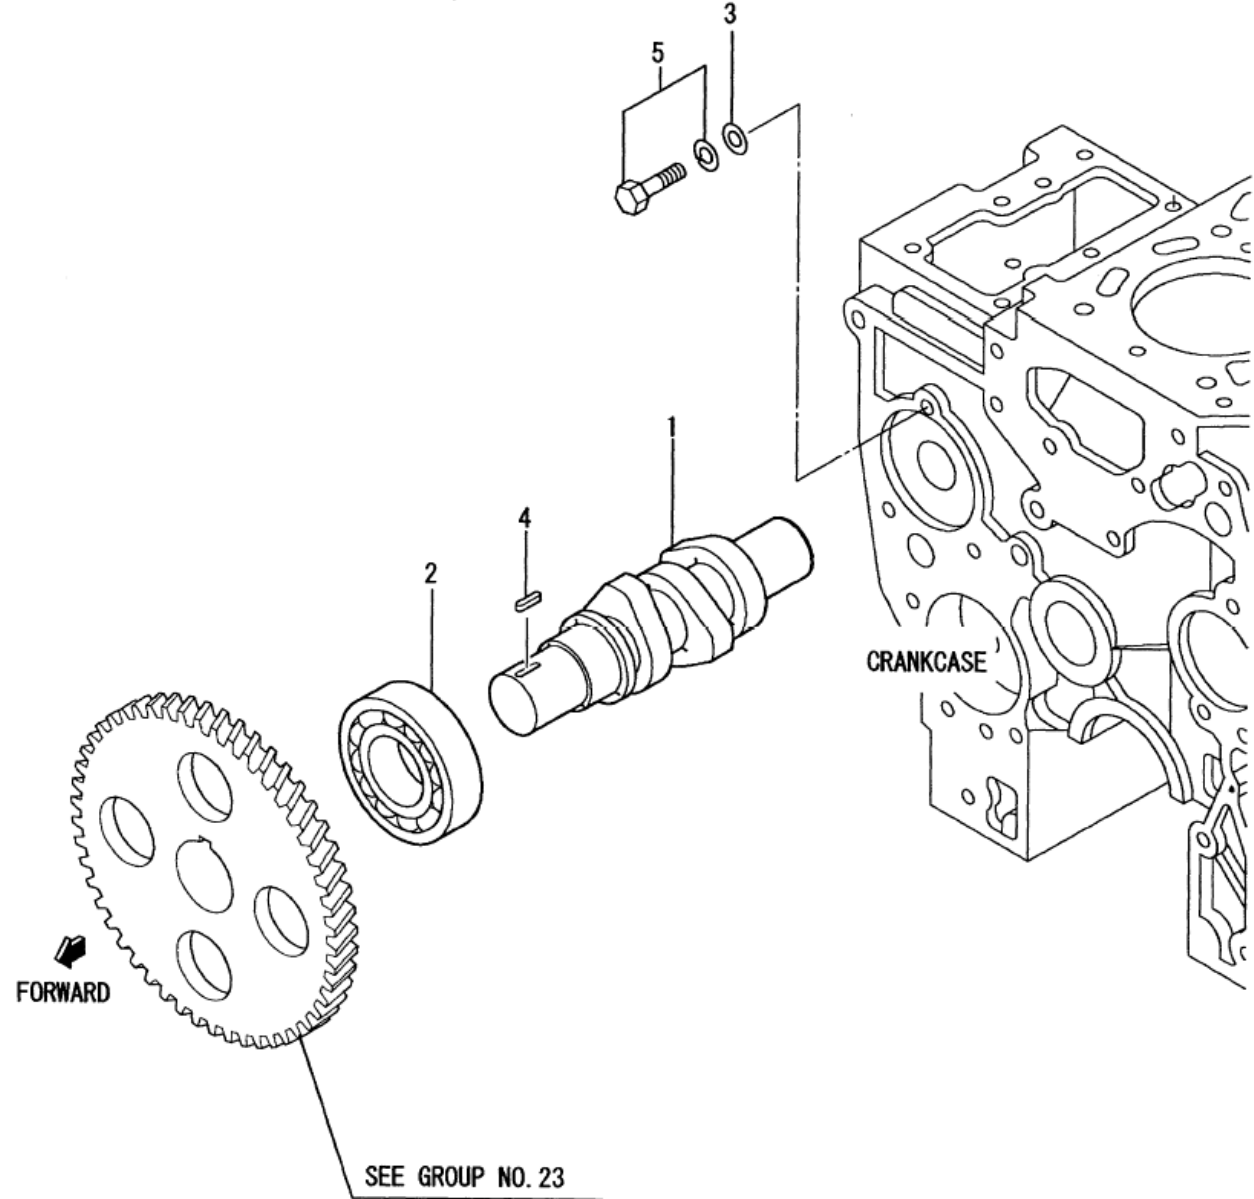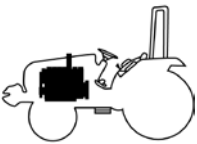

NOTE

T2734 : S3L2 , T2334 : S3L

FIG 137

STARTER


P1

Year / Month

2006 / 07



T2334 / T2734

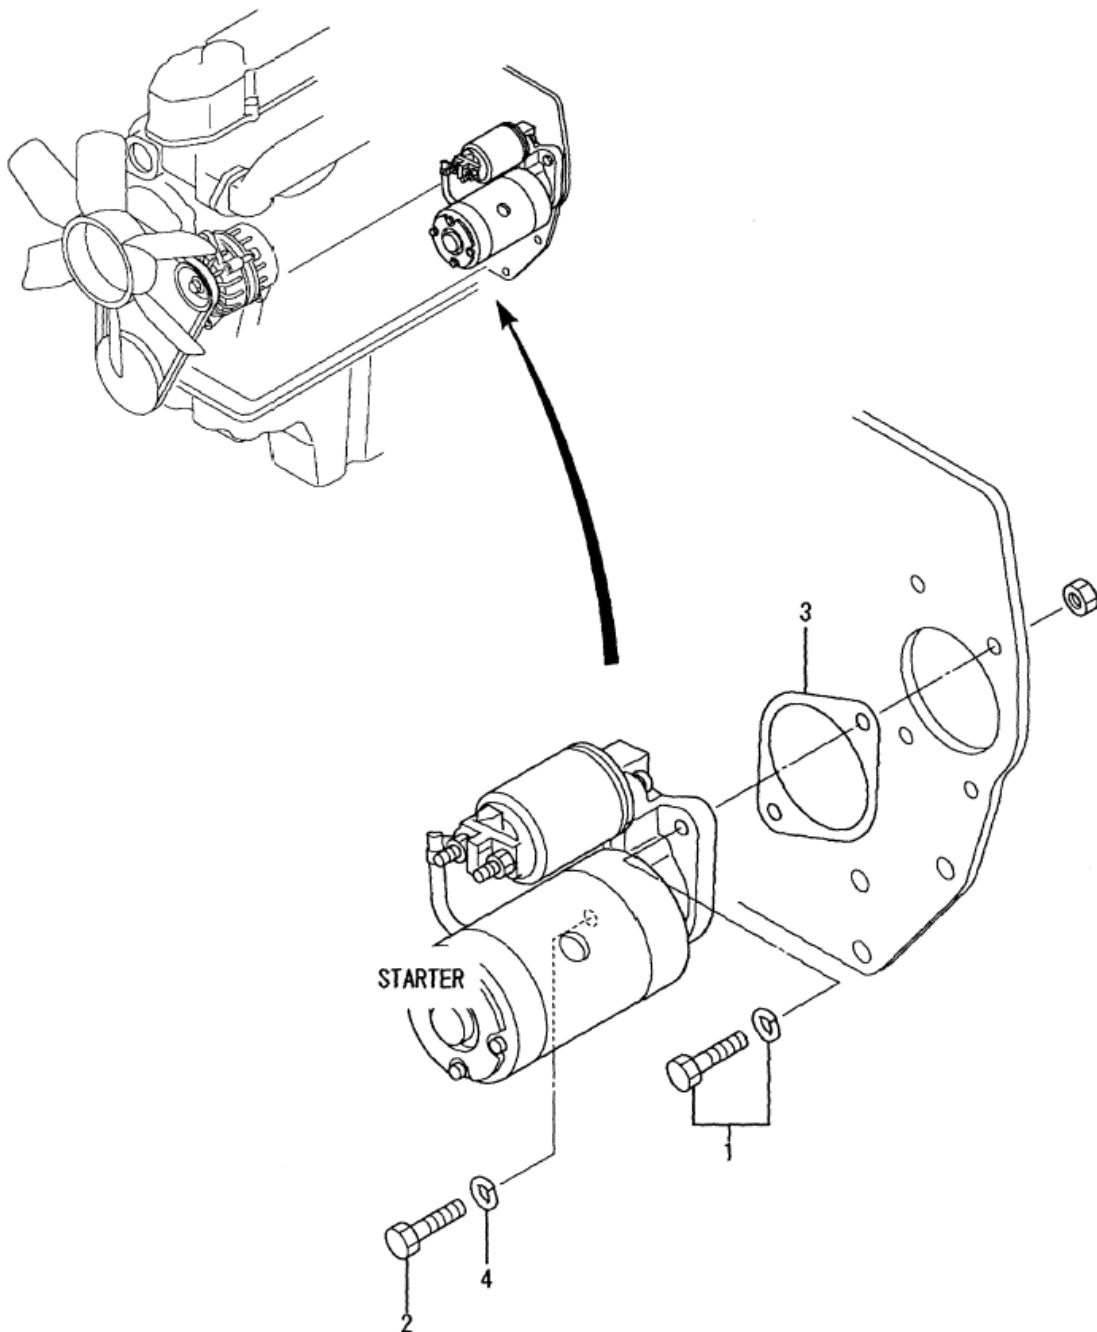

NOTE


T2734 : S3L2 , T2334 : S3L



FIG 138

STARTER(12V-1.6KW)

T2334 / T2734

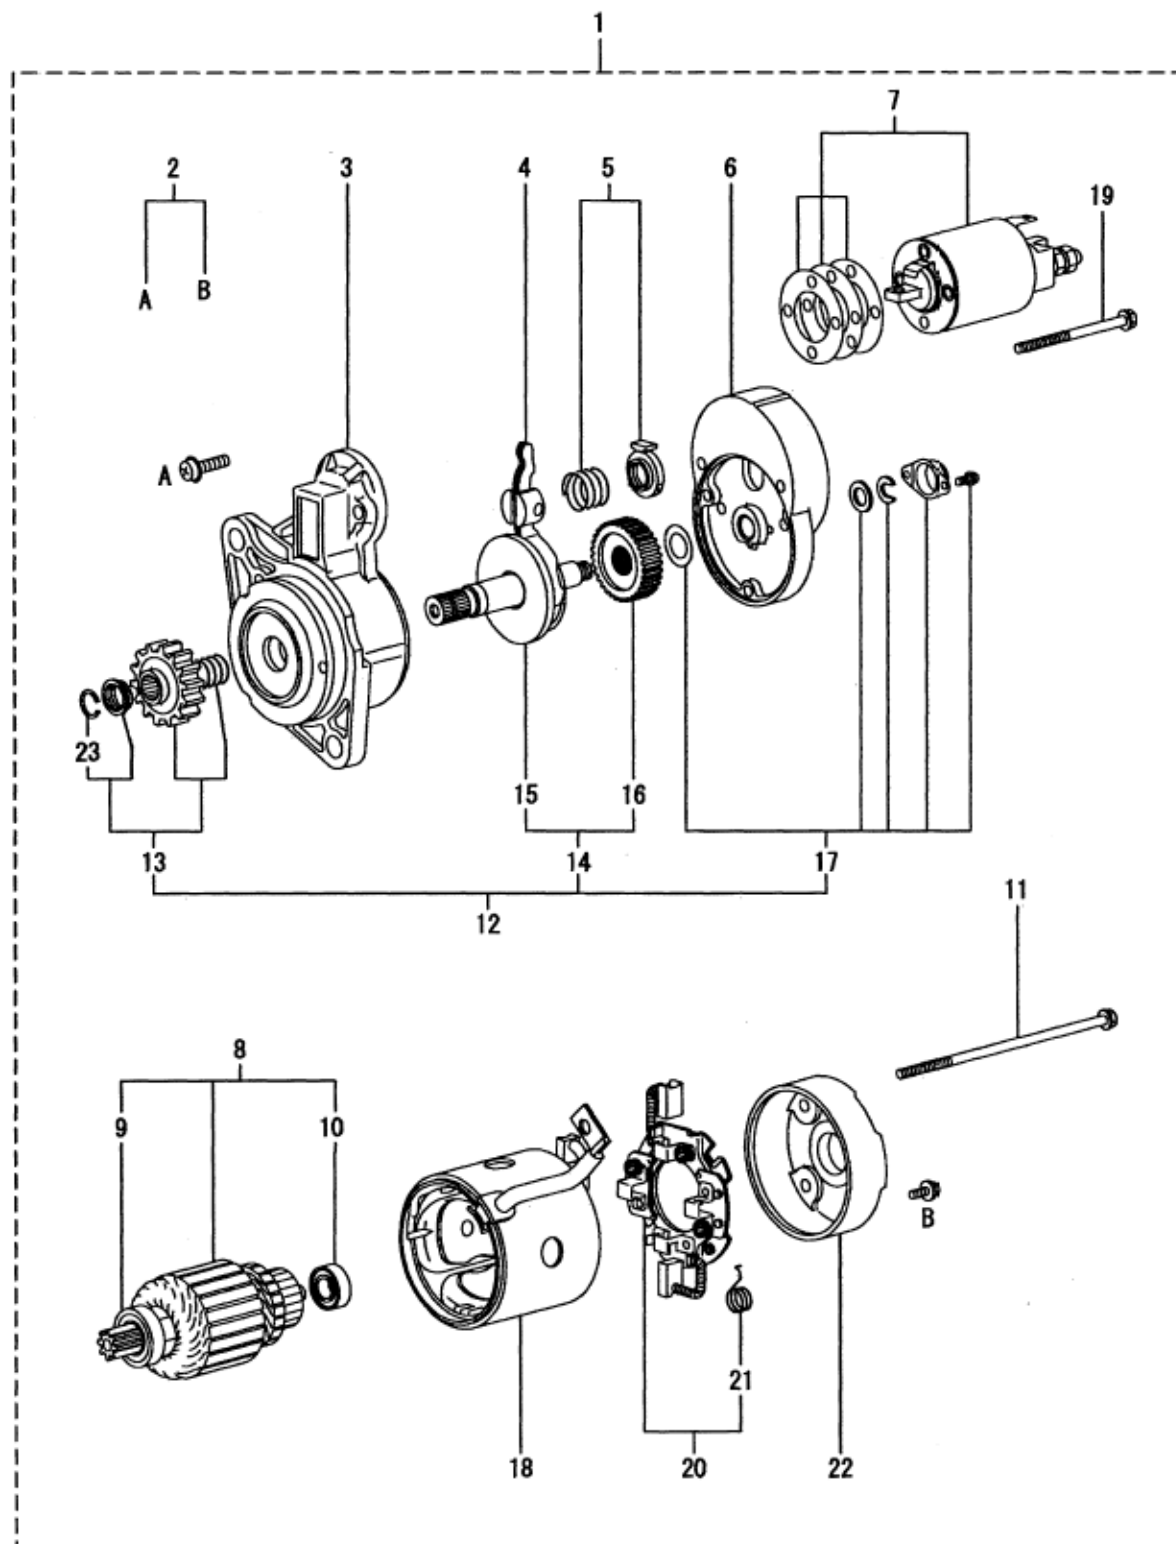

PART WITHOUT REF. NO. WON'T BE SUPPLIED

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


FIG 139

GLOW PLUG


P1

Year / Month

2006 / 07

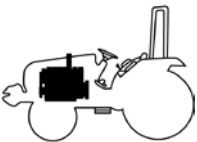

T2334 / T2734

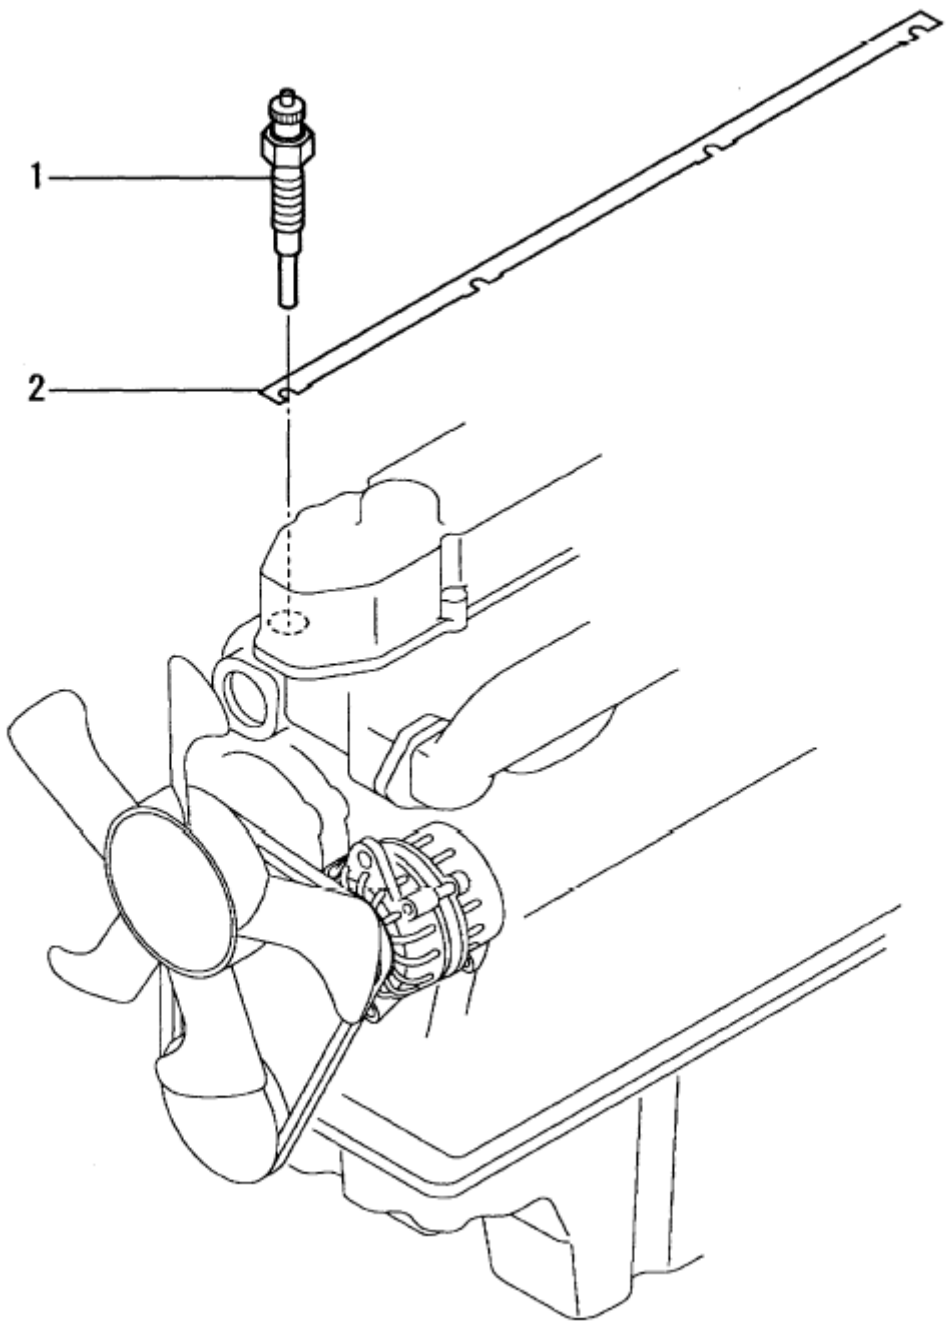

NOTE

T2734 : S3L2 , T2334 : S3L


FIG 140

ALTERNATOR


P1

Year / Month

2006 / 07

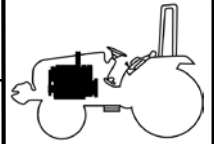

T2334 / T2734

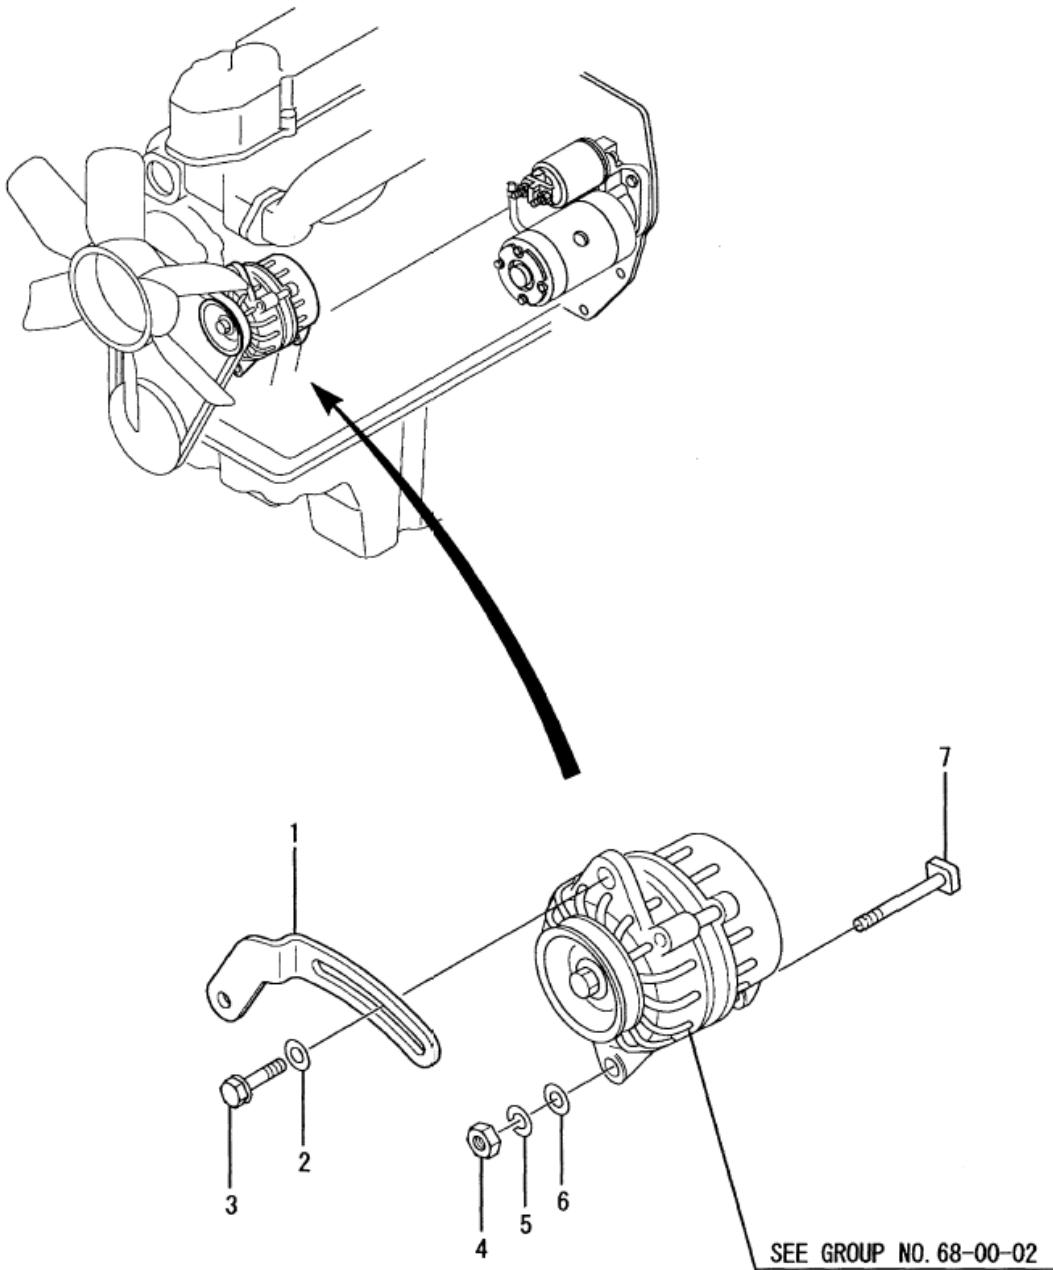

NOTE

T2734 : S3L2 , T2334 : S3L


[illegible]



FIG 141

ALTERNATOR(12V-50A)

T2334 / T2734

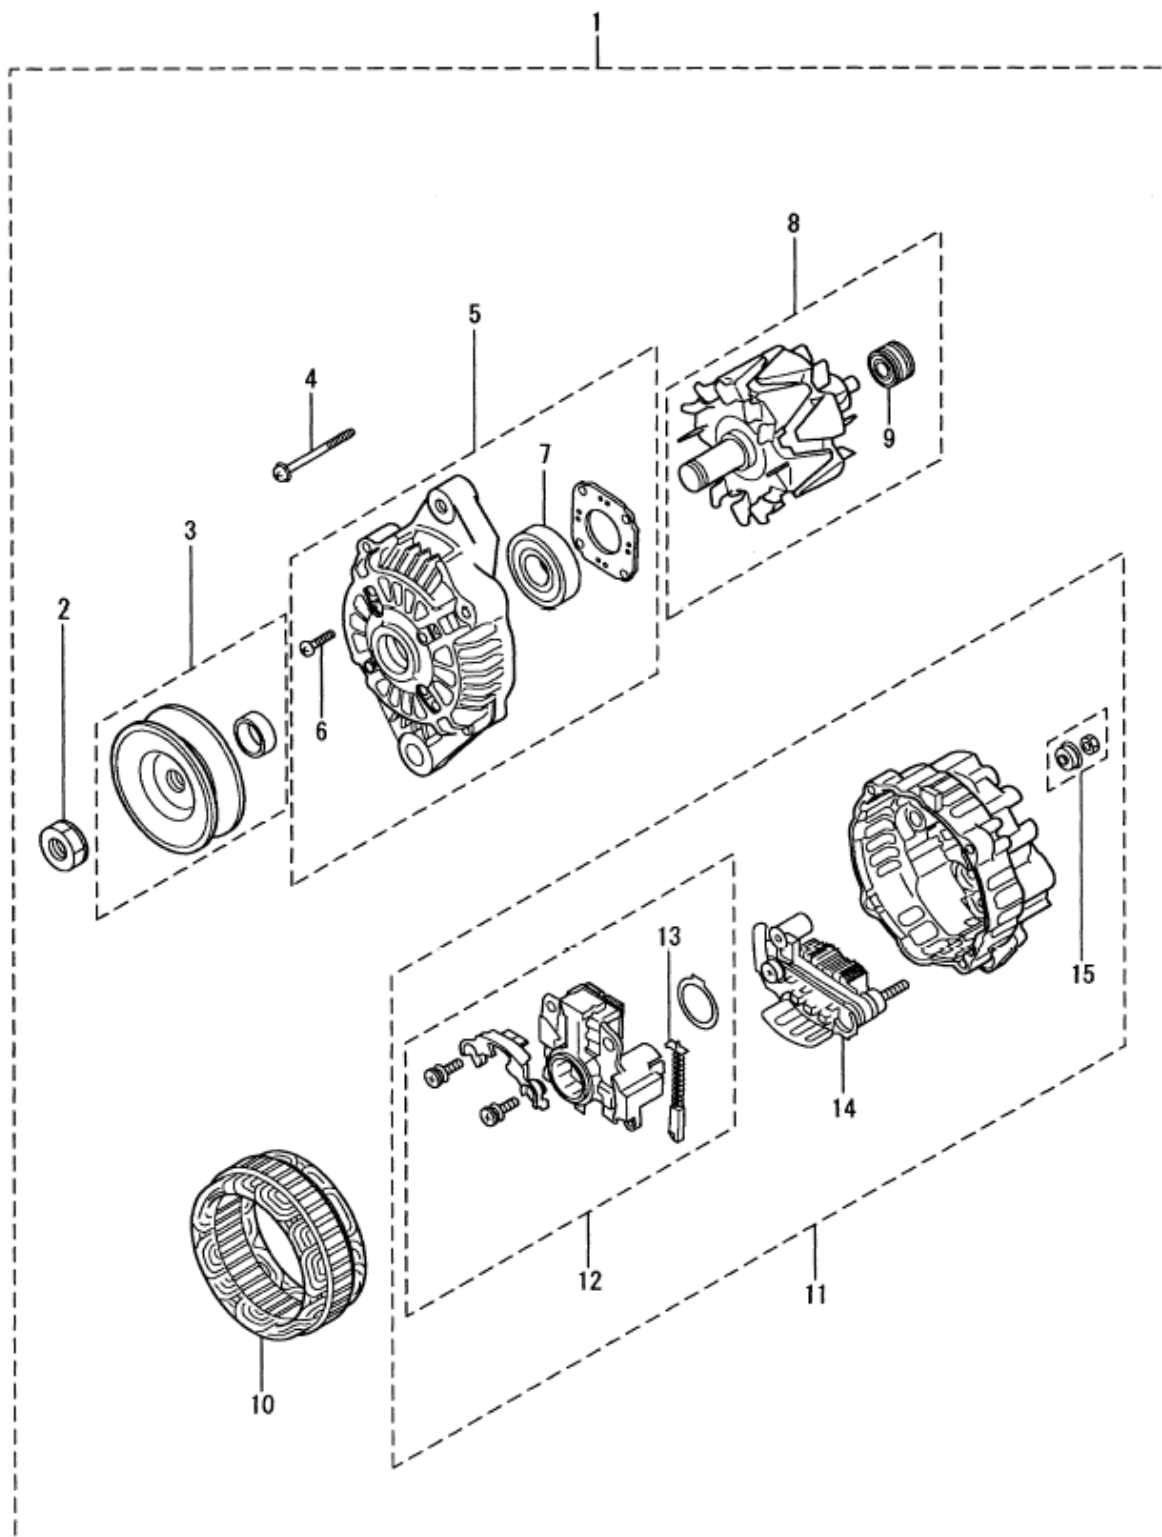

PART WITHOUT REF. NO. WON'T BE SUPPLIED

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]

FIG 142



T2334 / T2734

ENGINE CONTROL

P1

Year / Month

2006 / 07

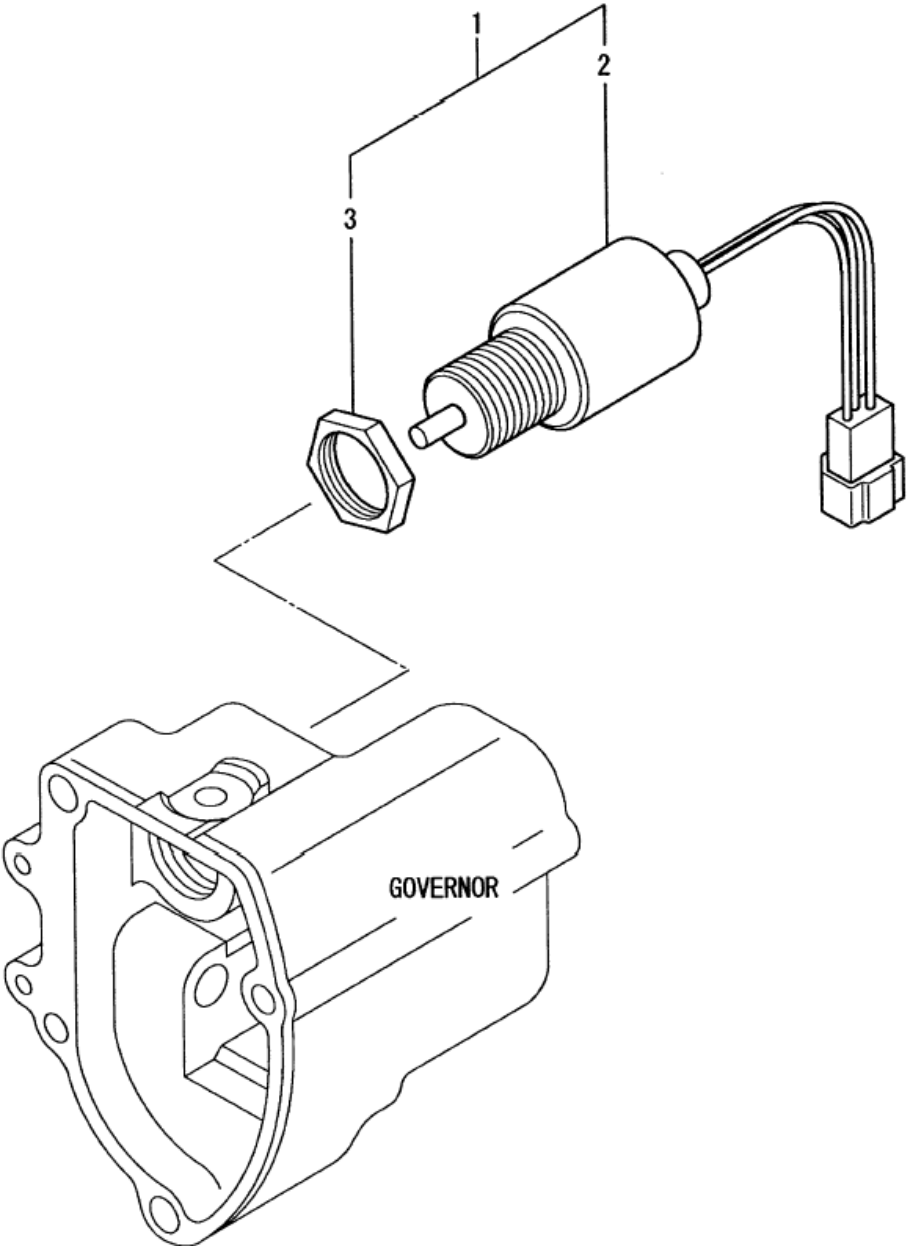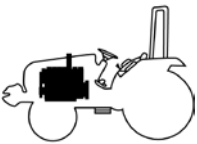

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


FIG 143

INSTRUMENT





P1

Year / Month

2006 / 07

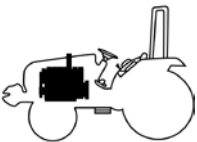

T2334 / T2734

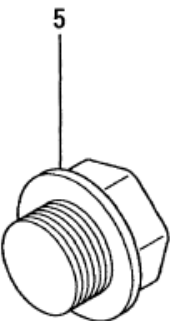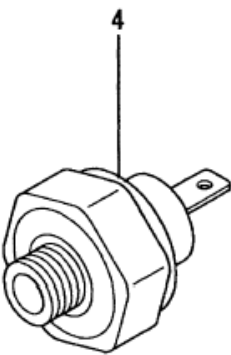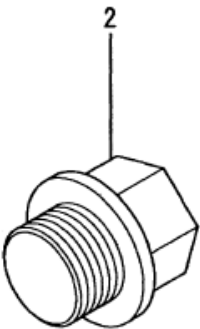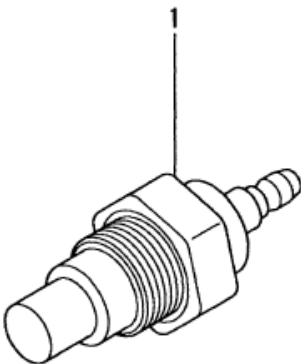

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]

FIG 144



T2334 / T2734

ACCESSORY

P1

Year / Month

2006 / 07

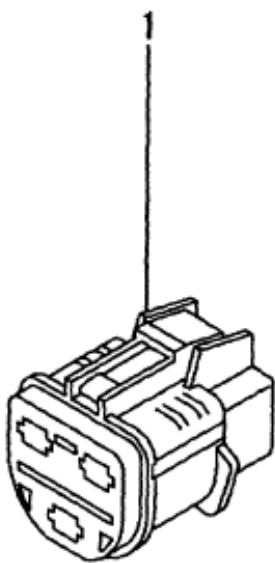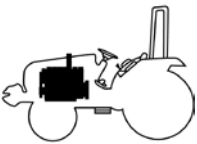

NOTE


T2734 : S3L2 , T2334 : S3L



FIG 145

OVERHAUL GASKET KIT

T2334 / T2734

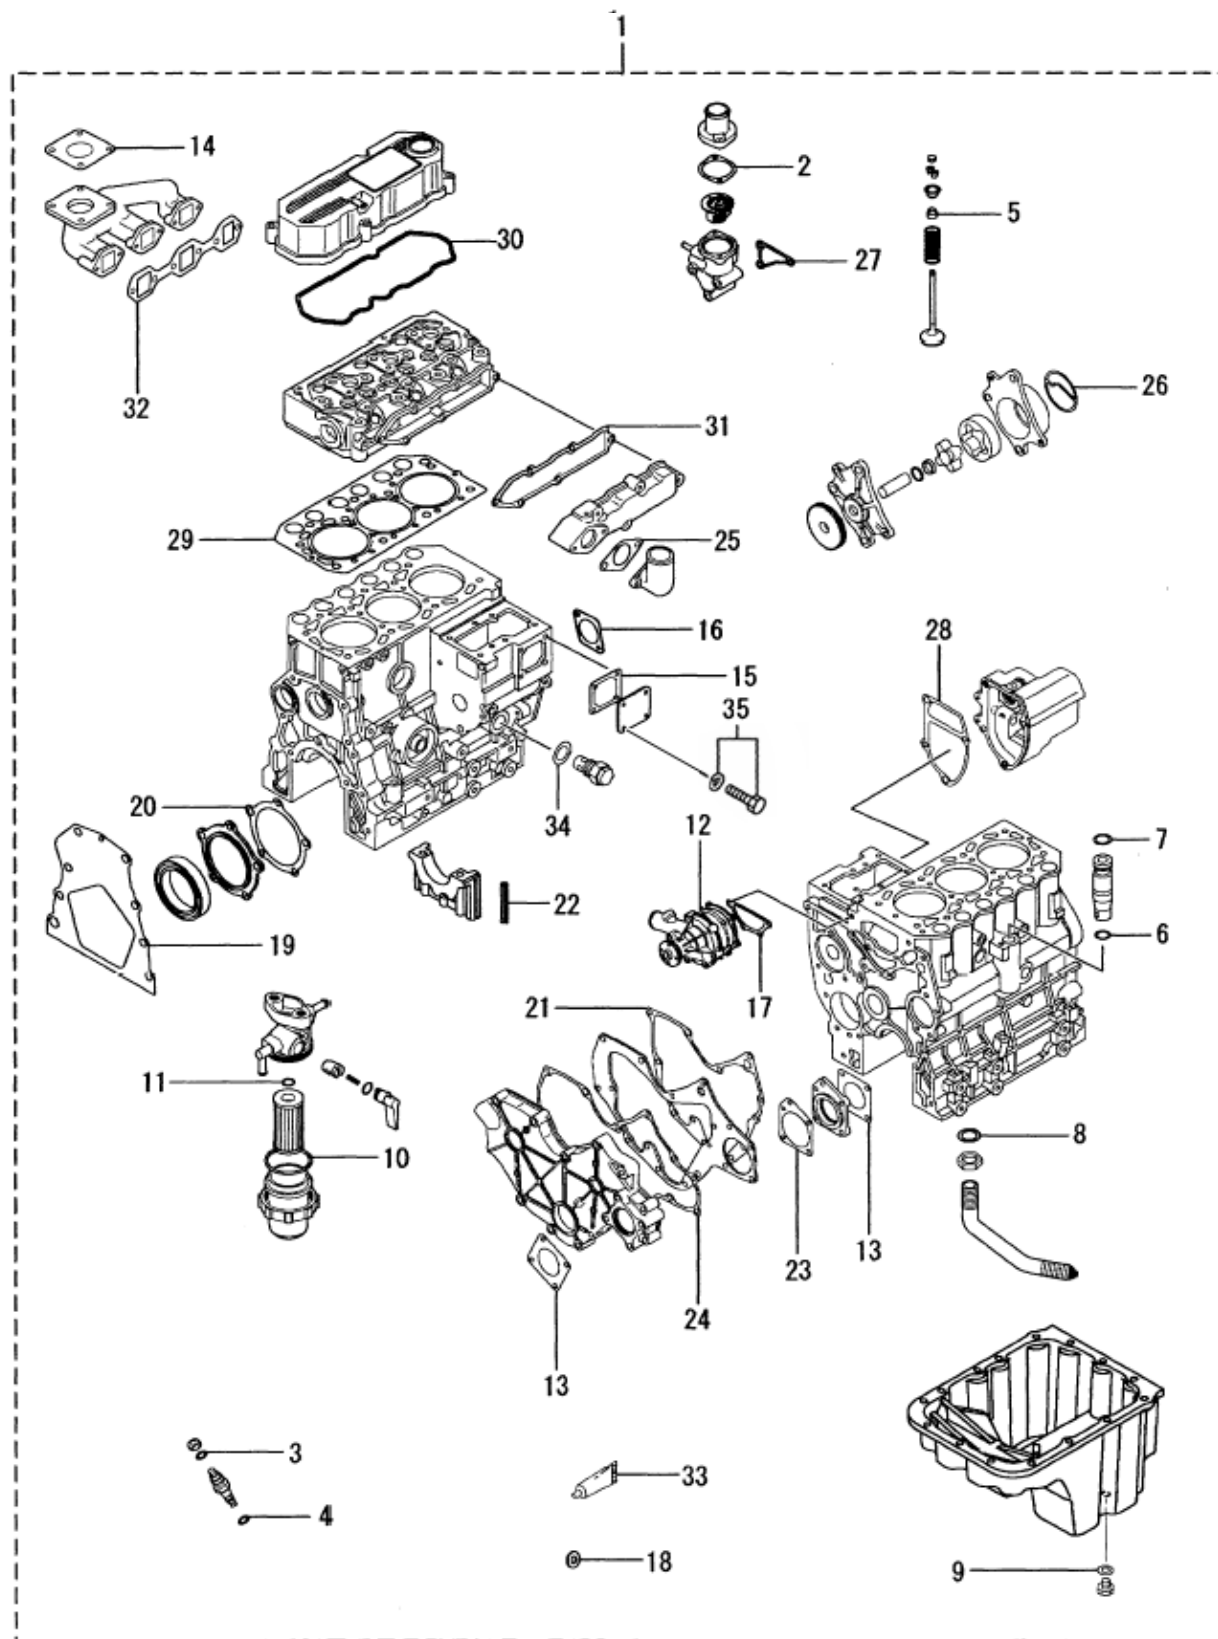

NOTE

T2734 : S3L2 , T2334 : S3L

[illegible]


FIG 201

AIR CLEANER


P1

Year / Month

2006 / 07

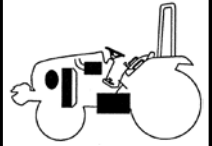

T2334 / T2734

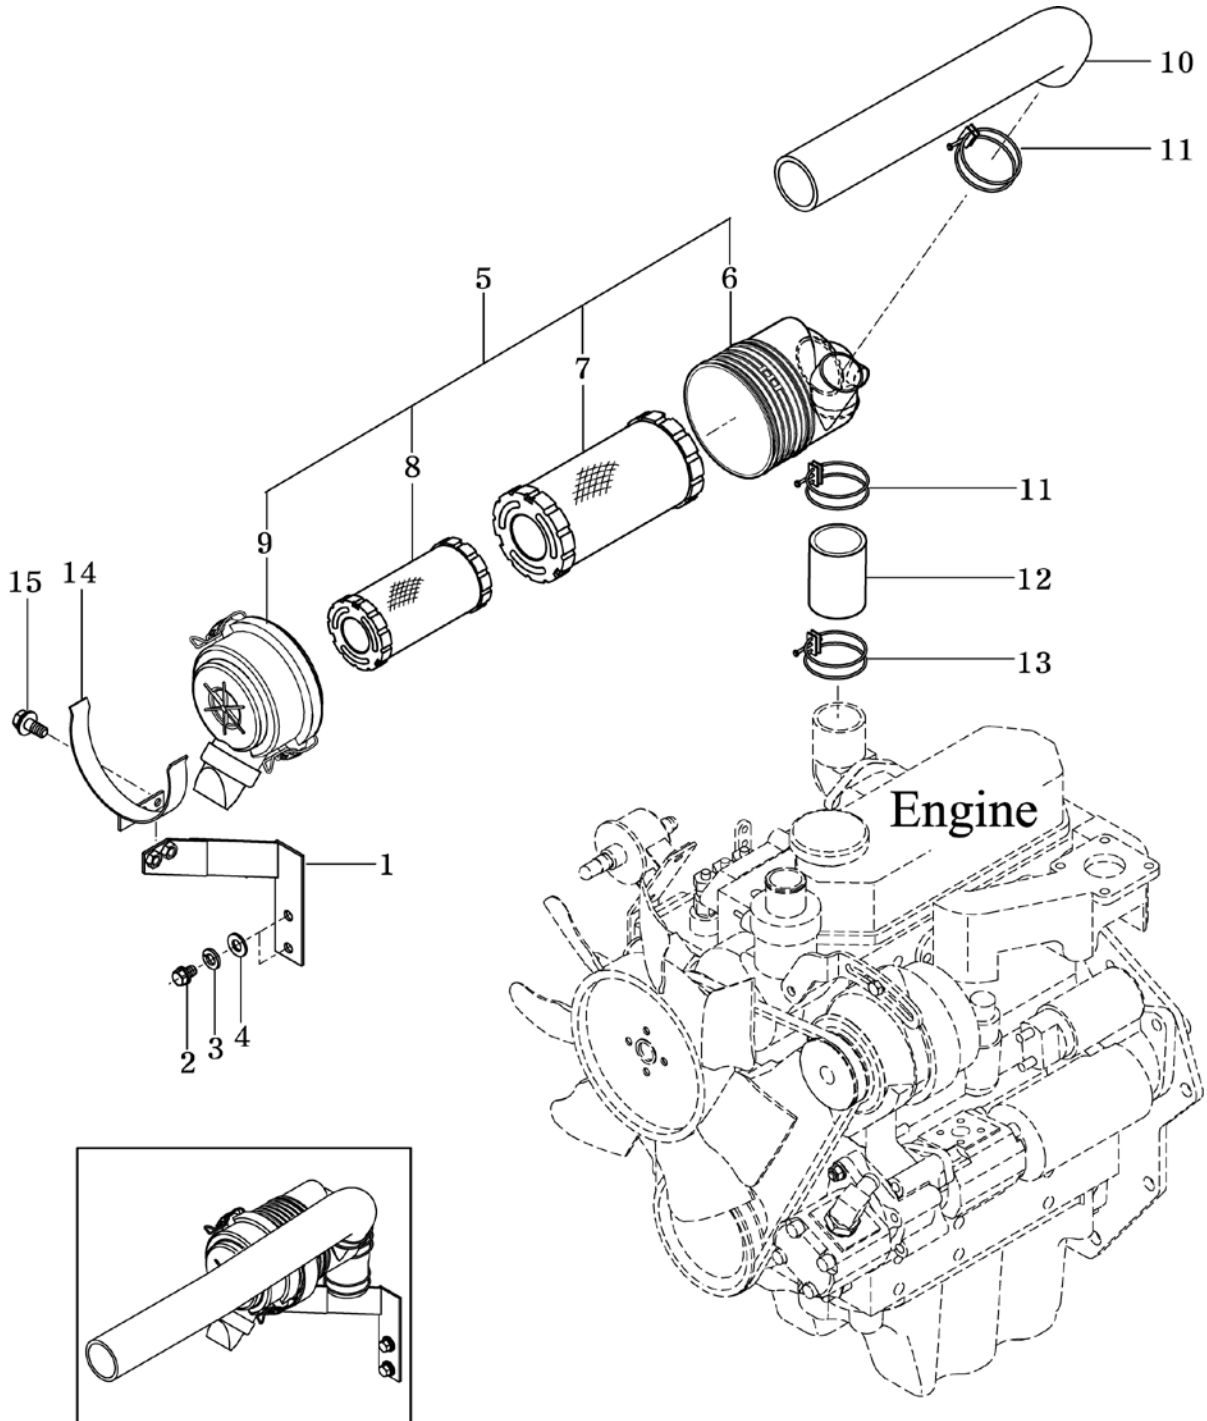

T233/T273-E-201B

NOTE

[illegible]


FIG 202

RADIATOR


P1

Year / Month

2006 / 07

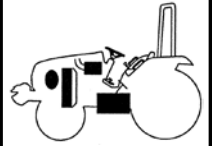

T2334 / T2734

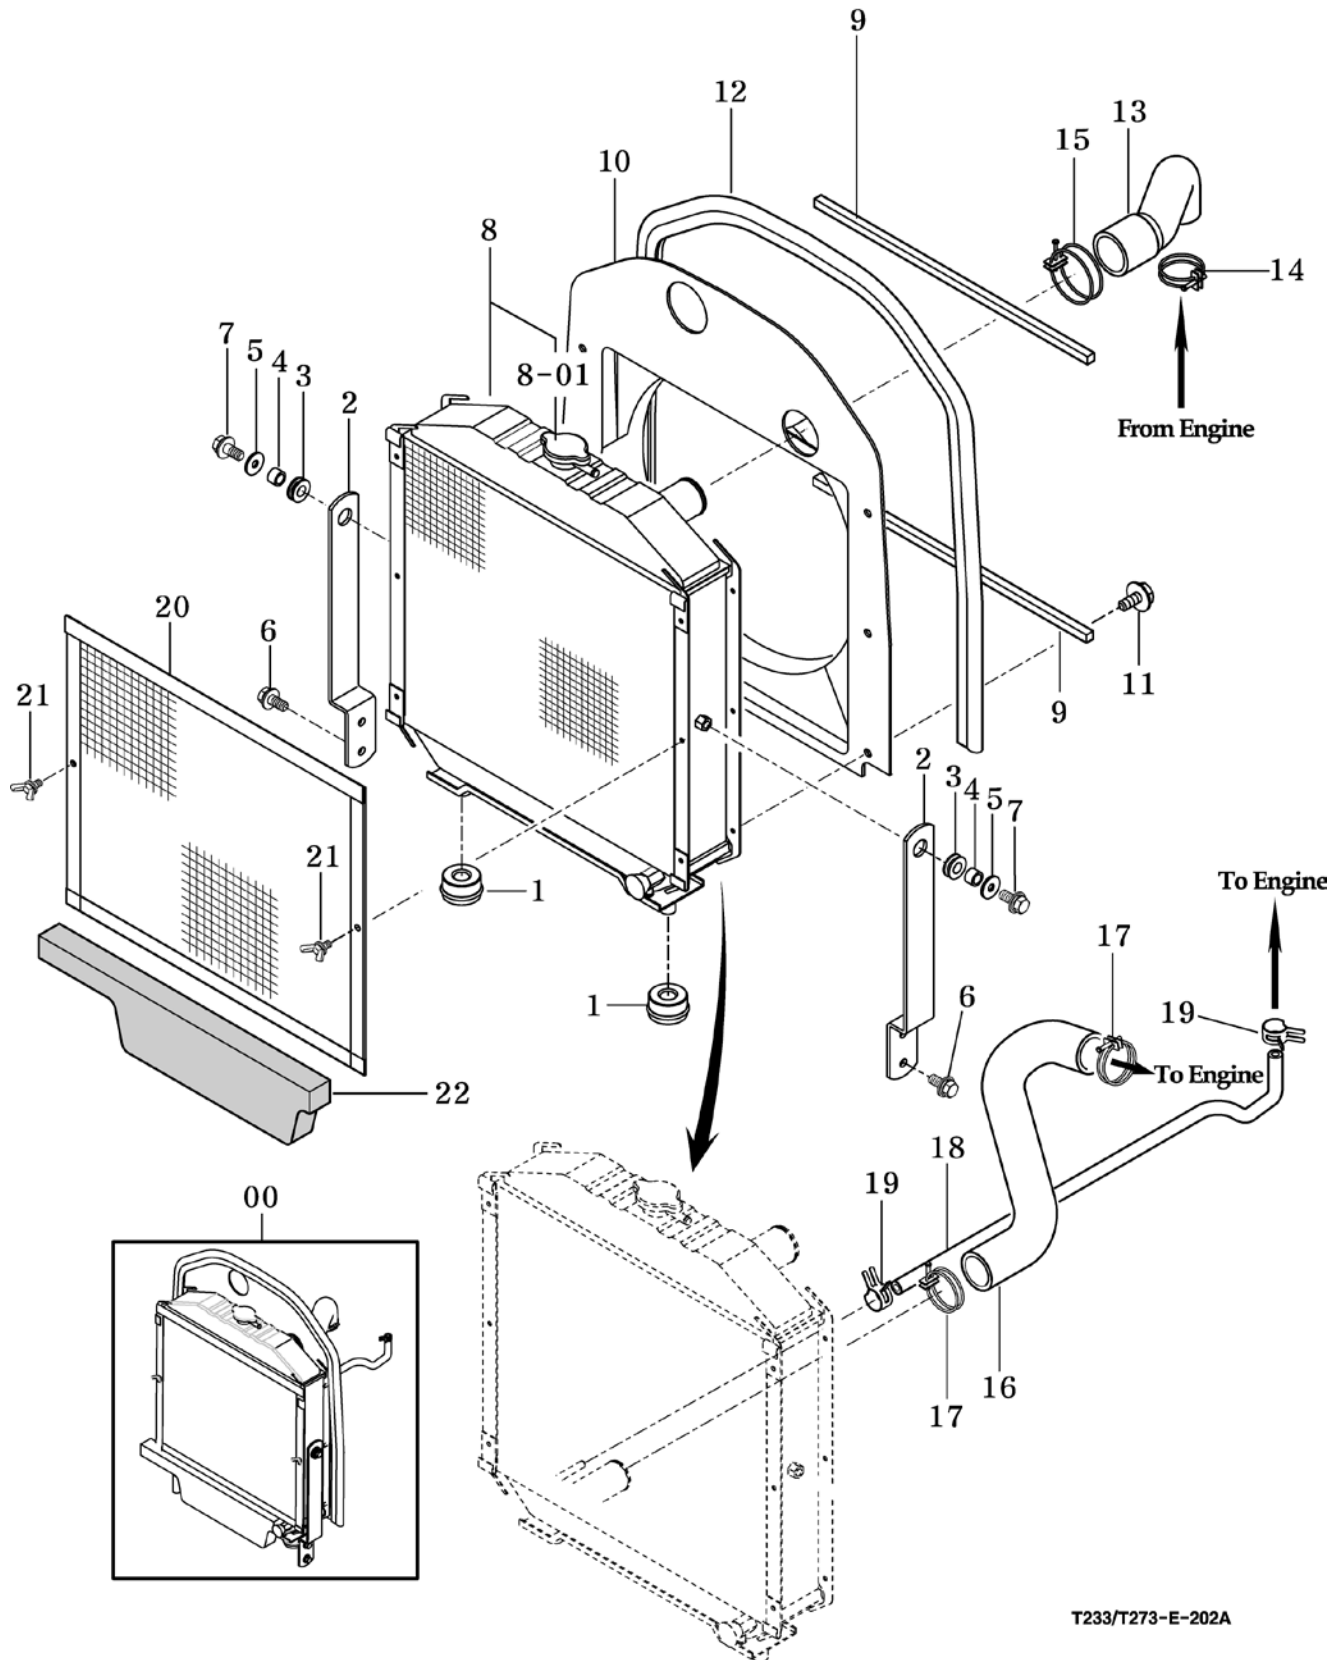

T233/T273-E-202A

NOTE


FIG 203

MUFFLER


P1

Year / Month

2006 / 07

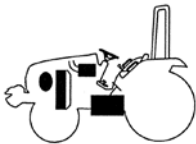

T2334 / T2734

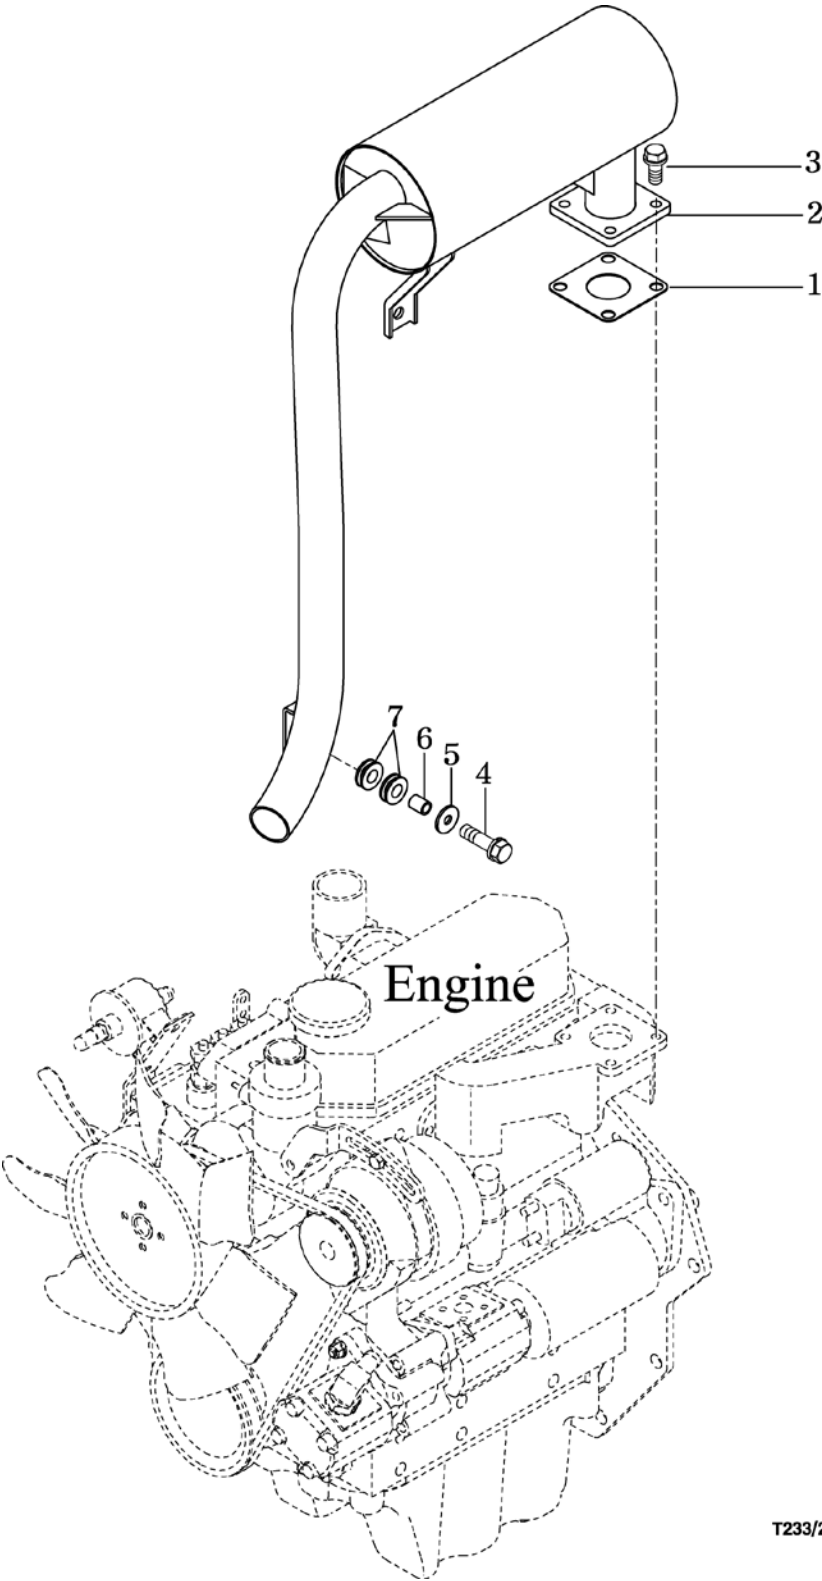

T233/273-E-203B

NOTE


FIG 204

FUEL TANK & FUEL LINE



P1

Year / Month

2006 / 07

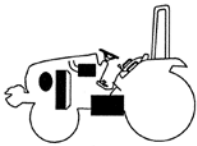

T2334 / T2734

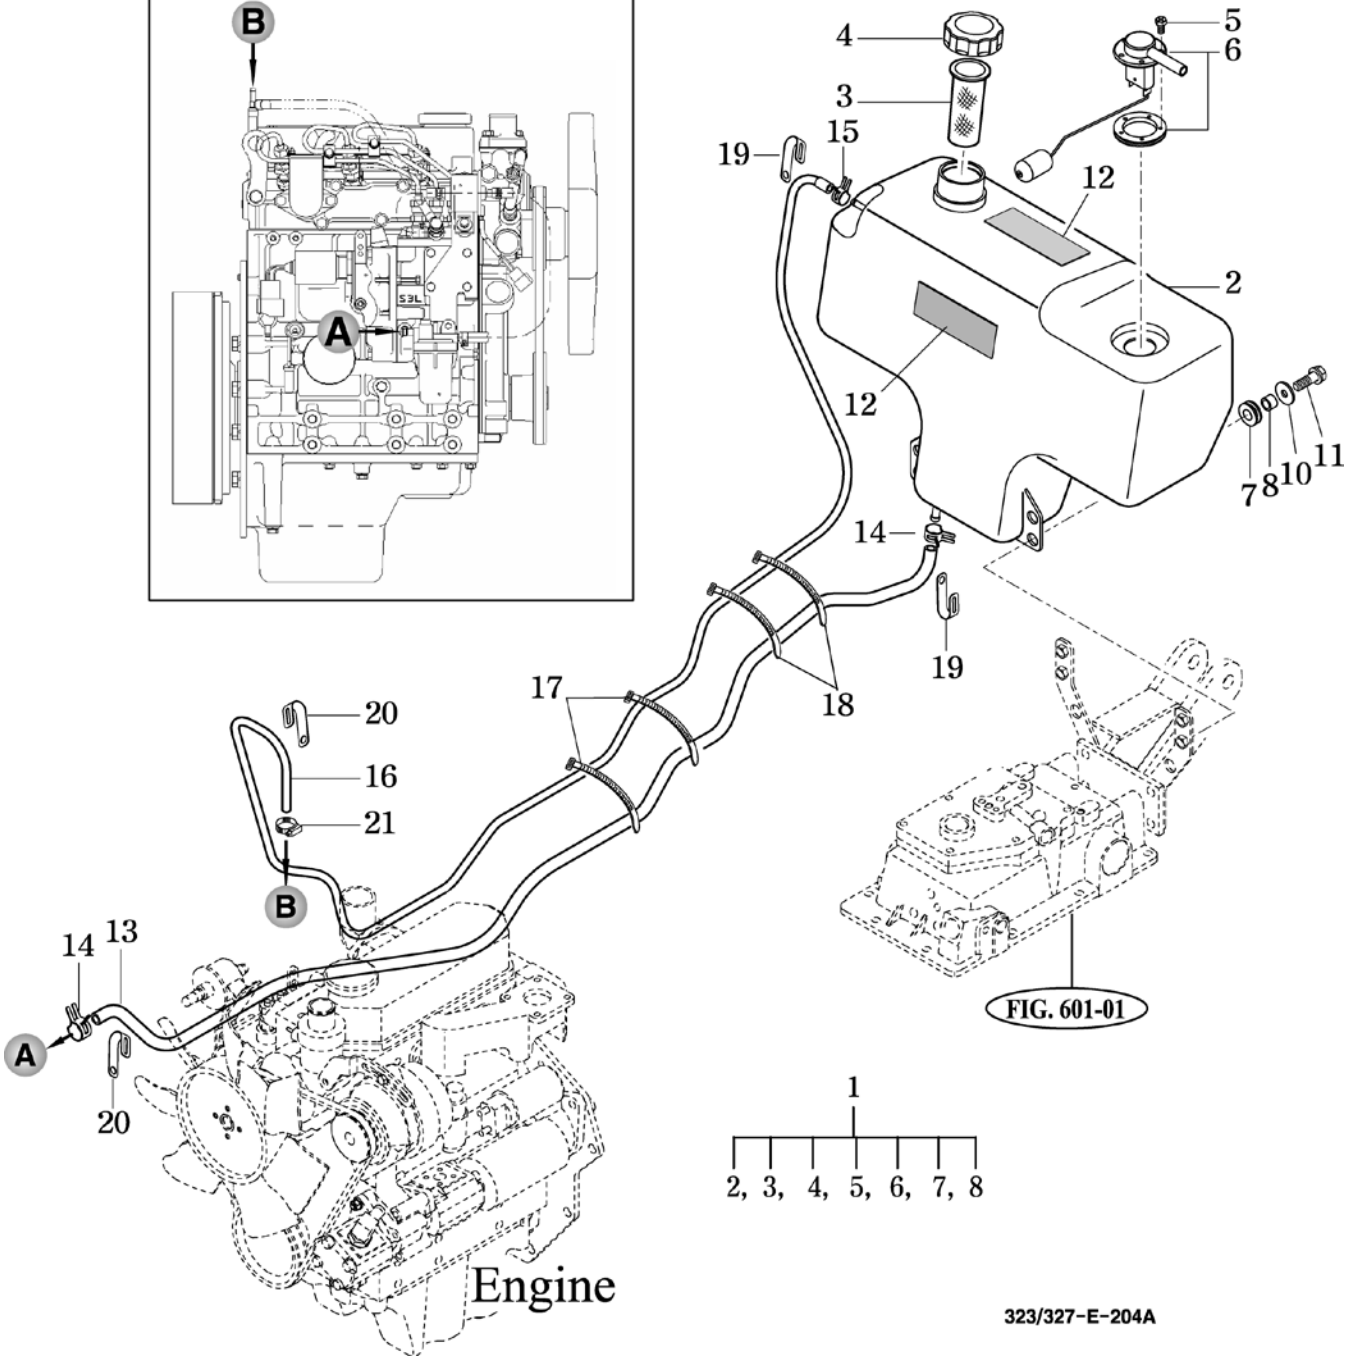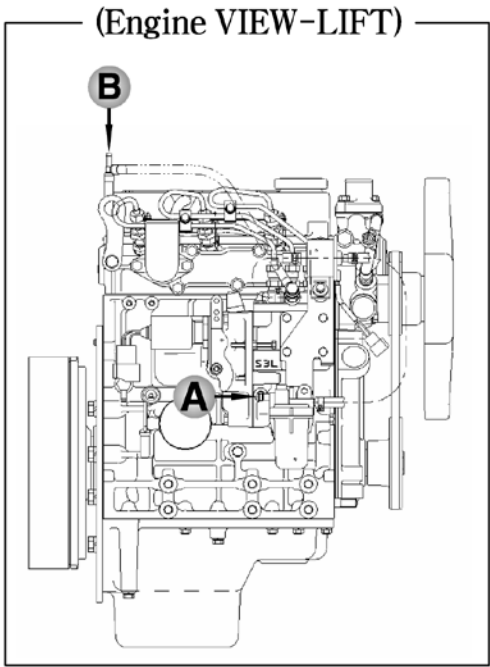

323/327-E-204A

NOTE


FIG 205

ACCELERATOR


P1

Year / Month

2006 / 07

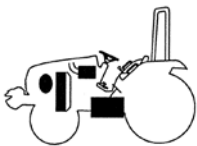

T2334 / T2734

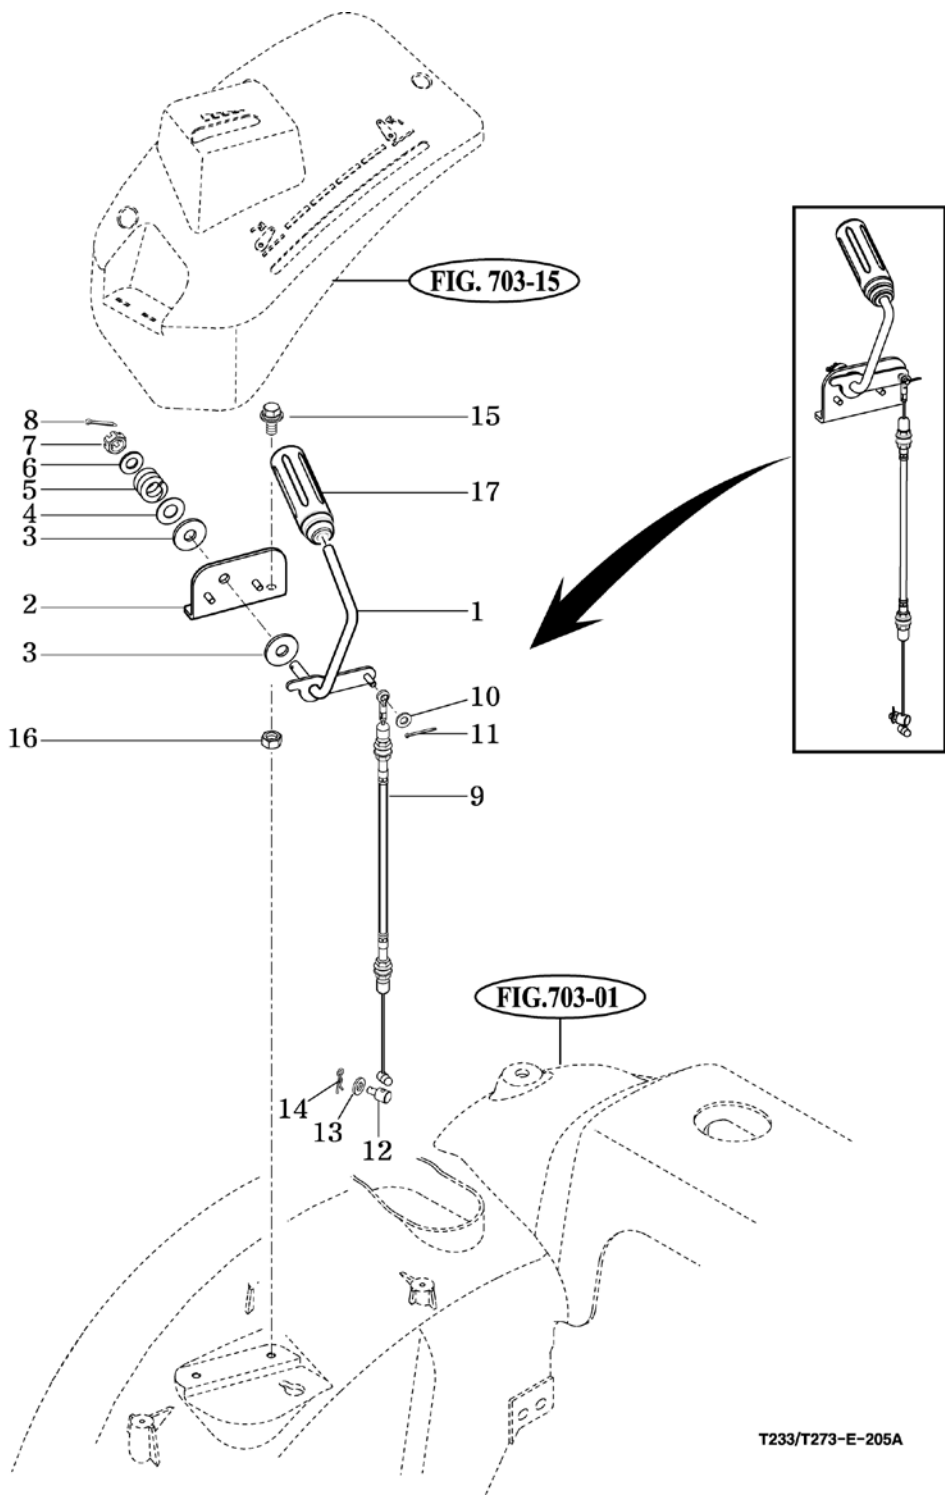

NOTE


FIG 206

OIL COOLER


P1

Year / Month

2006 / 07

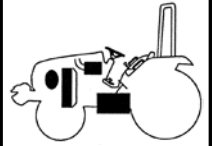

T2334 / T2734

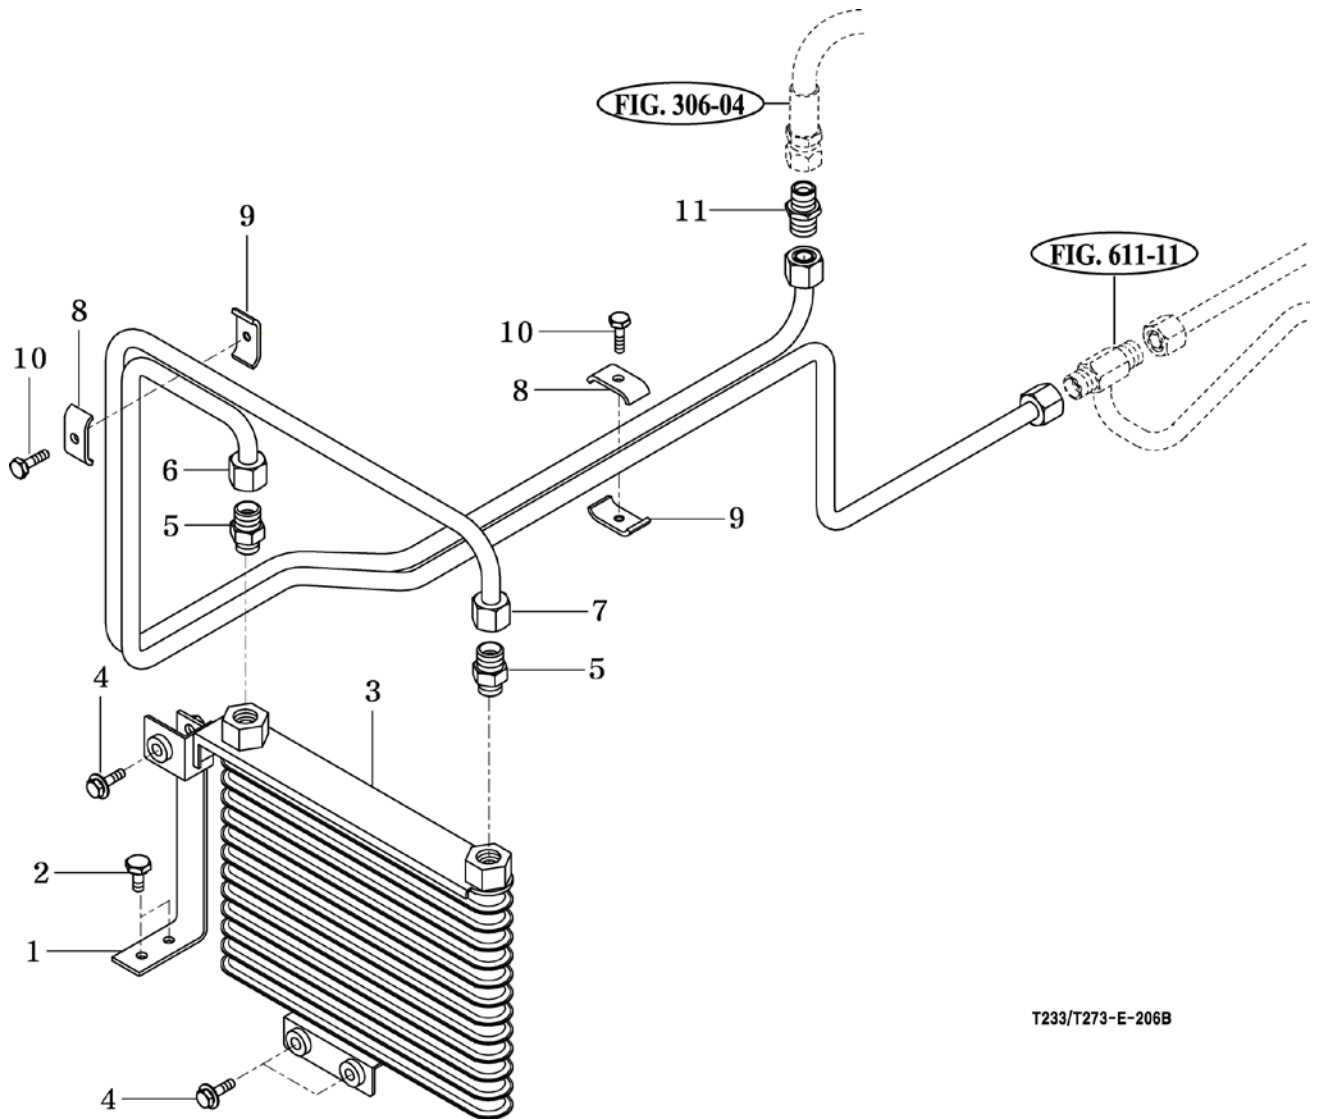

T233/T273-E-206B

NOTE



FIG 207

FUEL PUMP & FILTER

P1

Year / Month

2006 / 07

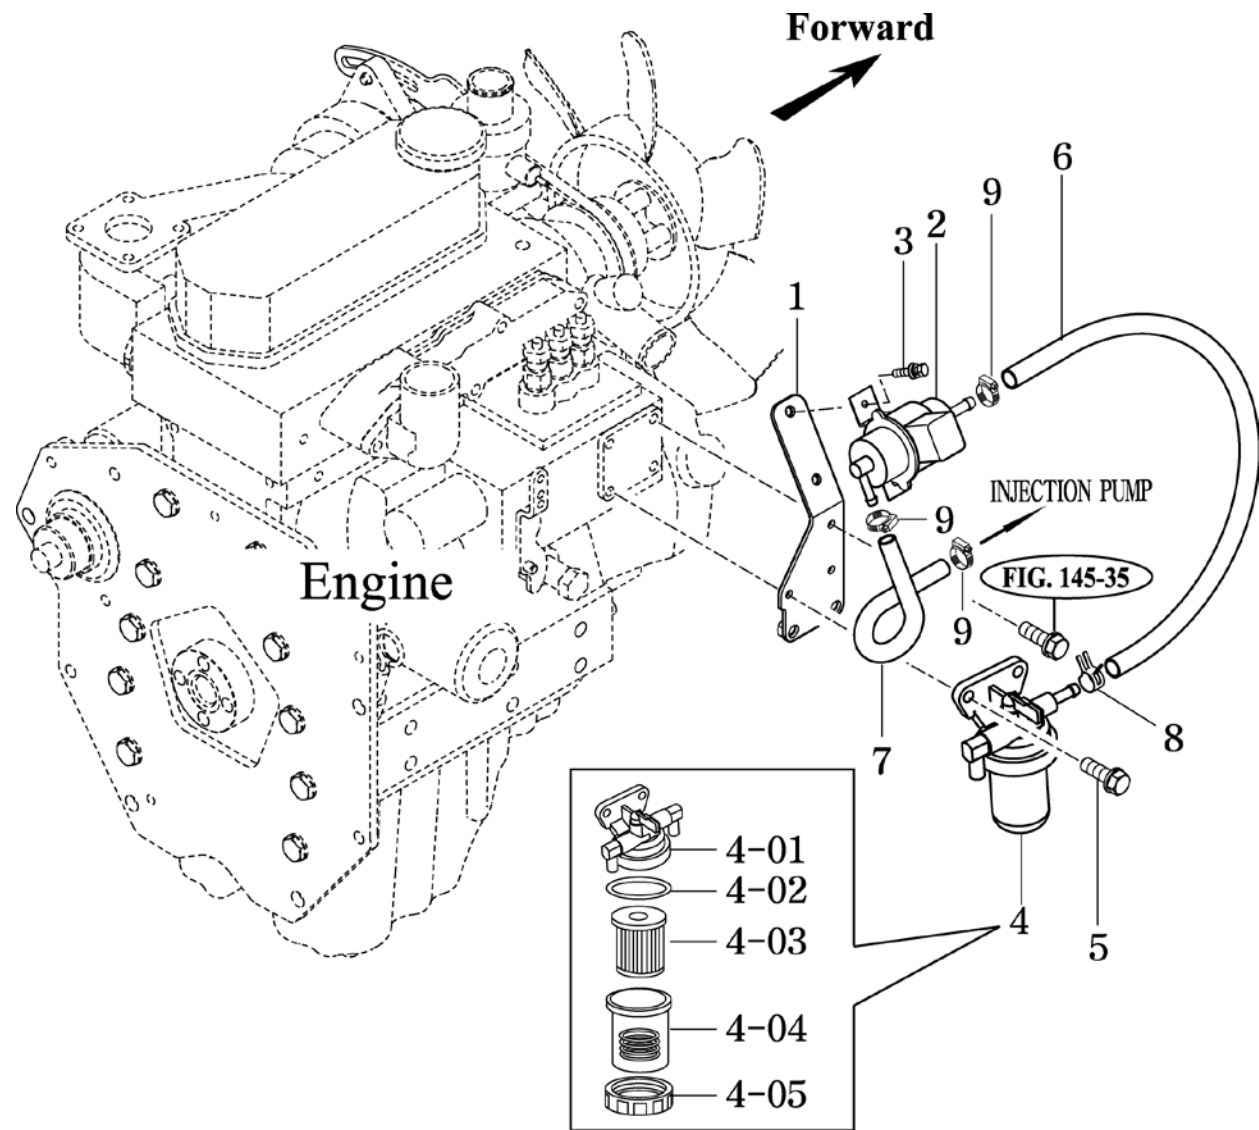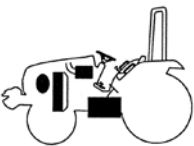

T2334/T2734-E-207A

NOTE



FIG 301

FLYWHEEL COVER

P1

Year / Month

2006 / 07

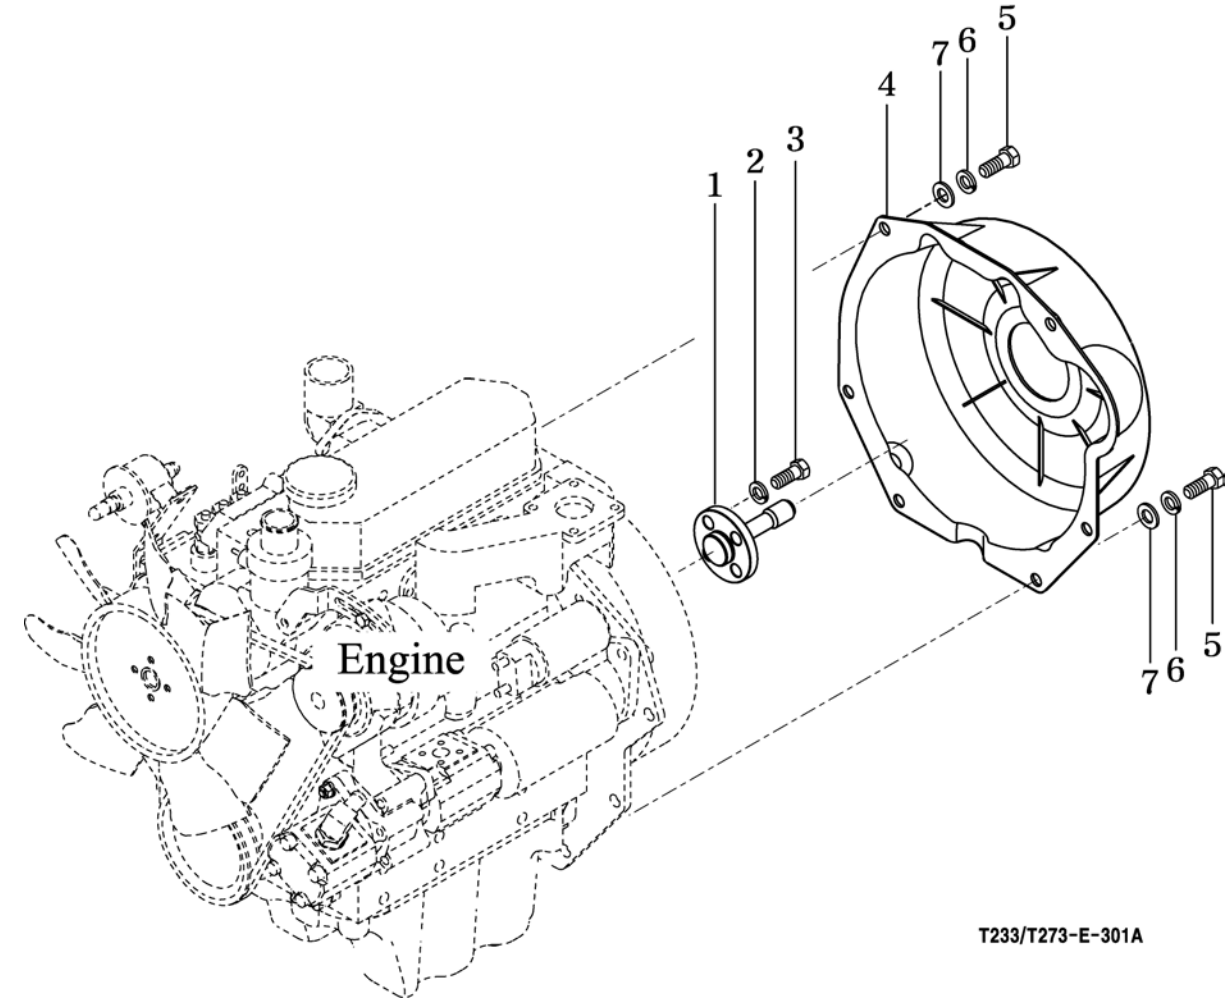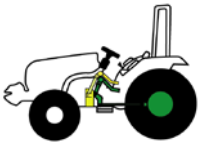

T233/T273-E-301A

NOTE

[illegible]


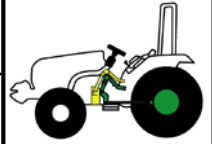


FIG 302

SPEED CONTROL

T2334 / T2734

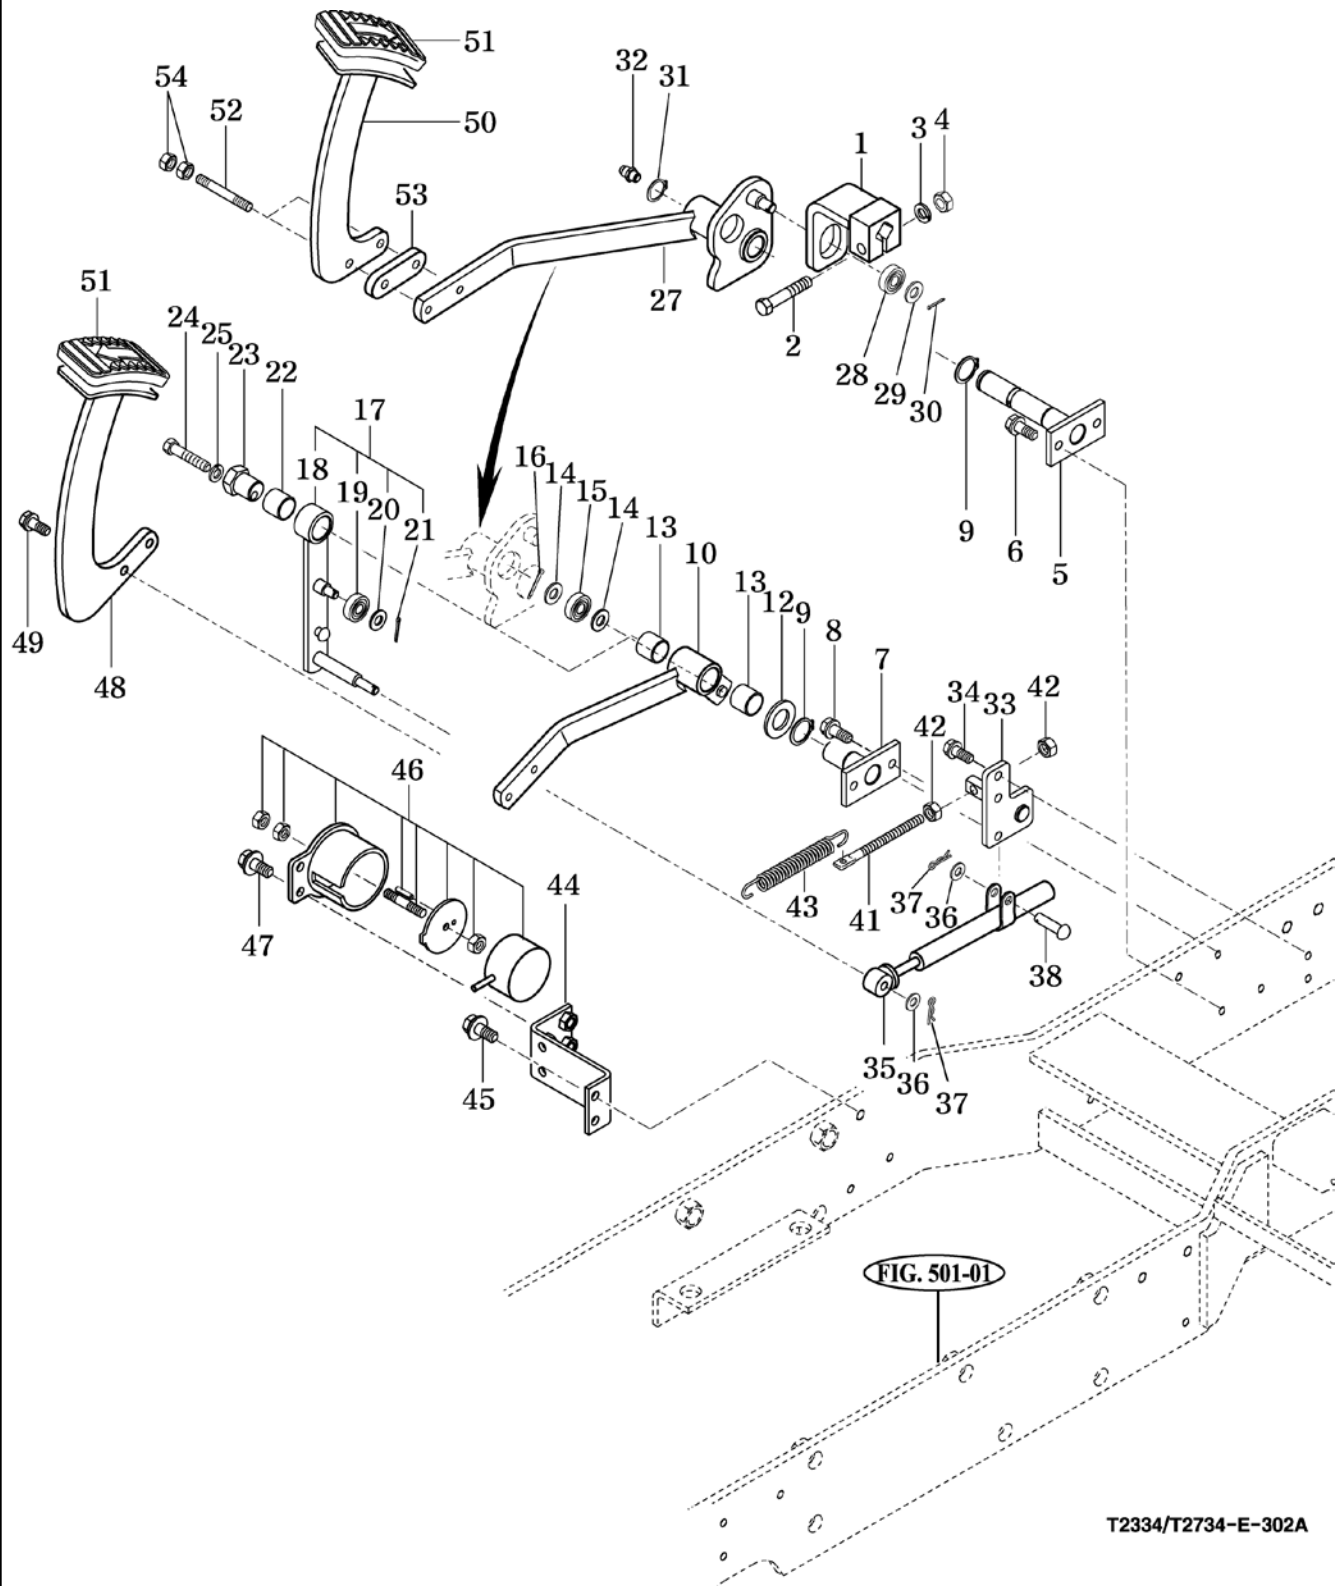

T2334/T2734-E-302A

NOTE

FIG 302		SPEED CONTROL				P1	Year / Month	
T2334 / T2734							2006 / 07	
KEY NO.	PART NO.	DESCRIPTION	SPEC.	QTY.		REPAIR	EFFECTIVE DATE	REMARKS
				T2334	T2734			
302 001	13152322103G	HOLDER COMP		1	1			
302 002	V2013610055	BOLT , HEX	M10X55	1	1			
302 003	V4011600100	WASHER , SPRING	M10	1	1			
302 004	V3042600100	NUT , HEX/2	M10	1	1			
302 005	13152322201G	PIN COMP, REVERSE		1	1			
302 006	V2173608020	BOLT , HEX/S	M8X20	2	2			
302 007	13152323102G	PIN COMP , FORWARD		1	1			
302 008	V2173608020	BOLT , HEX/S	M8X20	2	2			
302 009	V7041400200	C-RING , SHAFT	20	2	2			
302 010	13152323202G	ARM COMP , FORWARD		1	1			
302 012	V4111600200	WASHER , PLAIN	M20	1	1			
302 013	36707030080	BUSH , 20X23X20		2	2			
302 014	V4111600100	WASHER , PLAIN	M10	2	2			
302 015	V6001506000	BEARING , BALL	6000DD	1	1			
302 016	V5001920015	PIN , SPLIT	2X15	1	1			
302 017	13152324002	CAM SUB ASSY		1	1			
302 018	13152324102G	ARM COMP , CAM		1	1			
302 019	14722310060	.BEARING , BALL		1	1			
302 020	V4111600080	.WASHER , PLAIN	M8	1	1			
302 021	V5001920015	.PIN , SPLIT	2x15	1	1			
302 022	36707030080	BUSH , 20X23X20		1	1			
302 023	13152320023	PIN , NEUTRAL		1	1			
302 024	V2023610050	BOLT , HEX FINE	M10X50	1	1			
302 025	V4011600100	WASHER , SPRING	M10	1	1			
302 027	13152322304G	ARM COMP, REVERSE		1	1			
302 028	V6001506000	BEARING , BALL	6000DD	1	1			
302 029	V4111600100	WASHER , PLAIN	M10	1	1			
302 030	V5001920015	PIN , SPLIT	2X15	1	1			
302 031	V7041400200	C-RING , SHAFT	20	1	1			
302 032	V7601500000	NIPPLE , GREASE/A-M6F		1	1			
302 033	13152325101G	PIN COMP , SPRING		1	1			
302 034	V2173608020	BOLT , HEX/S	M8X20	2	2			
302 035	13152312400	DAMPER , OIL		1	1			
302 036	V4111600080	WASHER , PLAIN	M8	4	4			
302 037	V5601600008	PIN , SNAP	8	4	4			
302 038	14043120060	PIN , YOKE		1	1			
302 041	34522150080	ROD , CHAIN(TENSION)(82)		1	1			
302 042	V3043600080	NUT , HEX/2	M8	2	2			
302 043	14722310033	SPRING , RETURN		1	1			
302 044	13152332103G	BRACKET COMP , CRUISE		1	1			
302 045	V2173608020	BOLT , HEX/S	M8X20	2	2			
302 046	14722323002	MAGNETIC ASSY , CRUISE		1	1			
302 047	V2173608020	BOLT , HEX/S	M8X20	2	2			
302 048	13152323303G	PEDAL COMP, FORWARD		1	1			
302 049	V2173608020	BOLT , HEX/S	M8X20	2	2			
302 050	13152322401G	PEDAL COMP, REVERSE		1	1			
302 051	14722312730	PAD		2	2			
		-NEXT-						
NOTE								


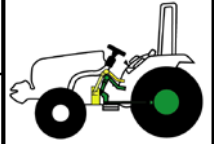


FIG 302

SPEED CONTROL

T2334 / T2734

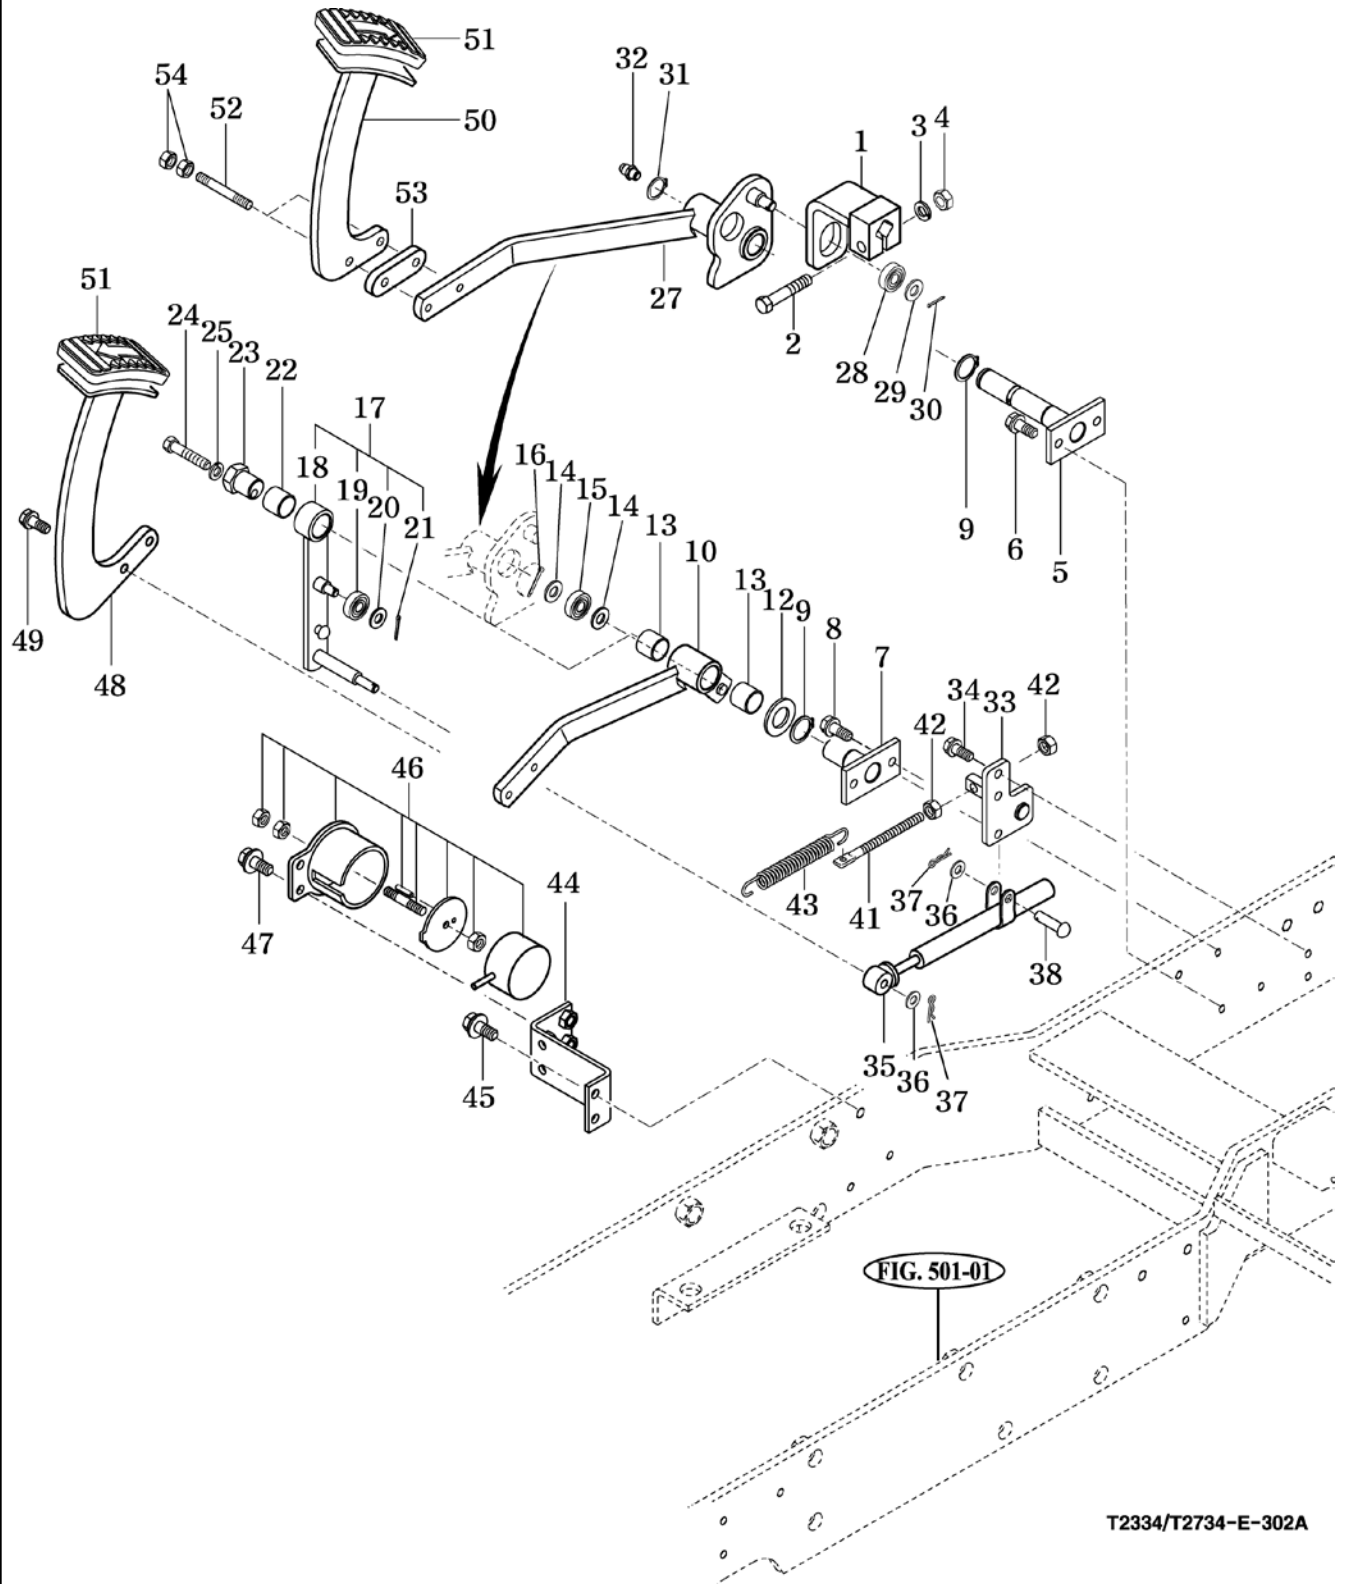

T2334/T2734-E-302A

NOTE


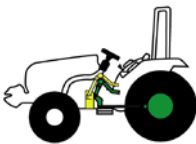


FIG 303

BRAKE

T2334 / T2734

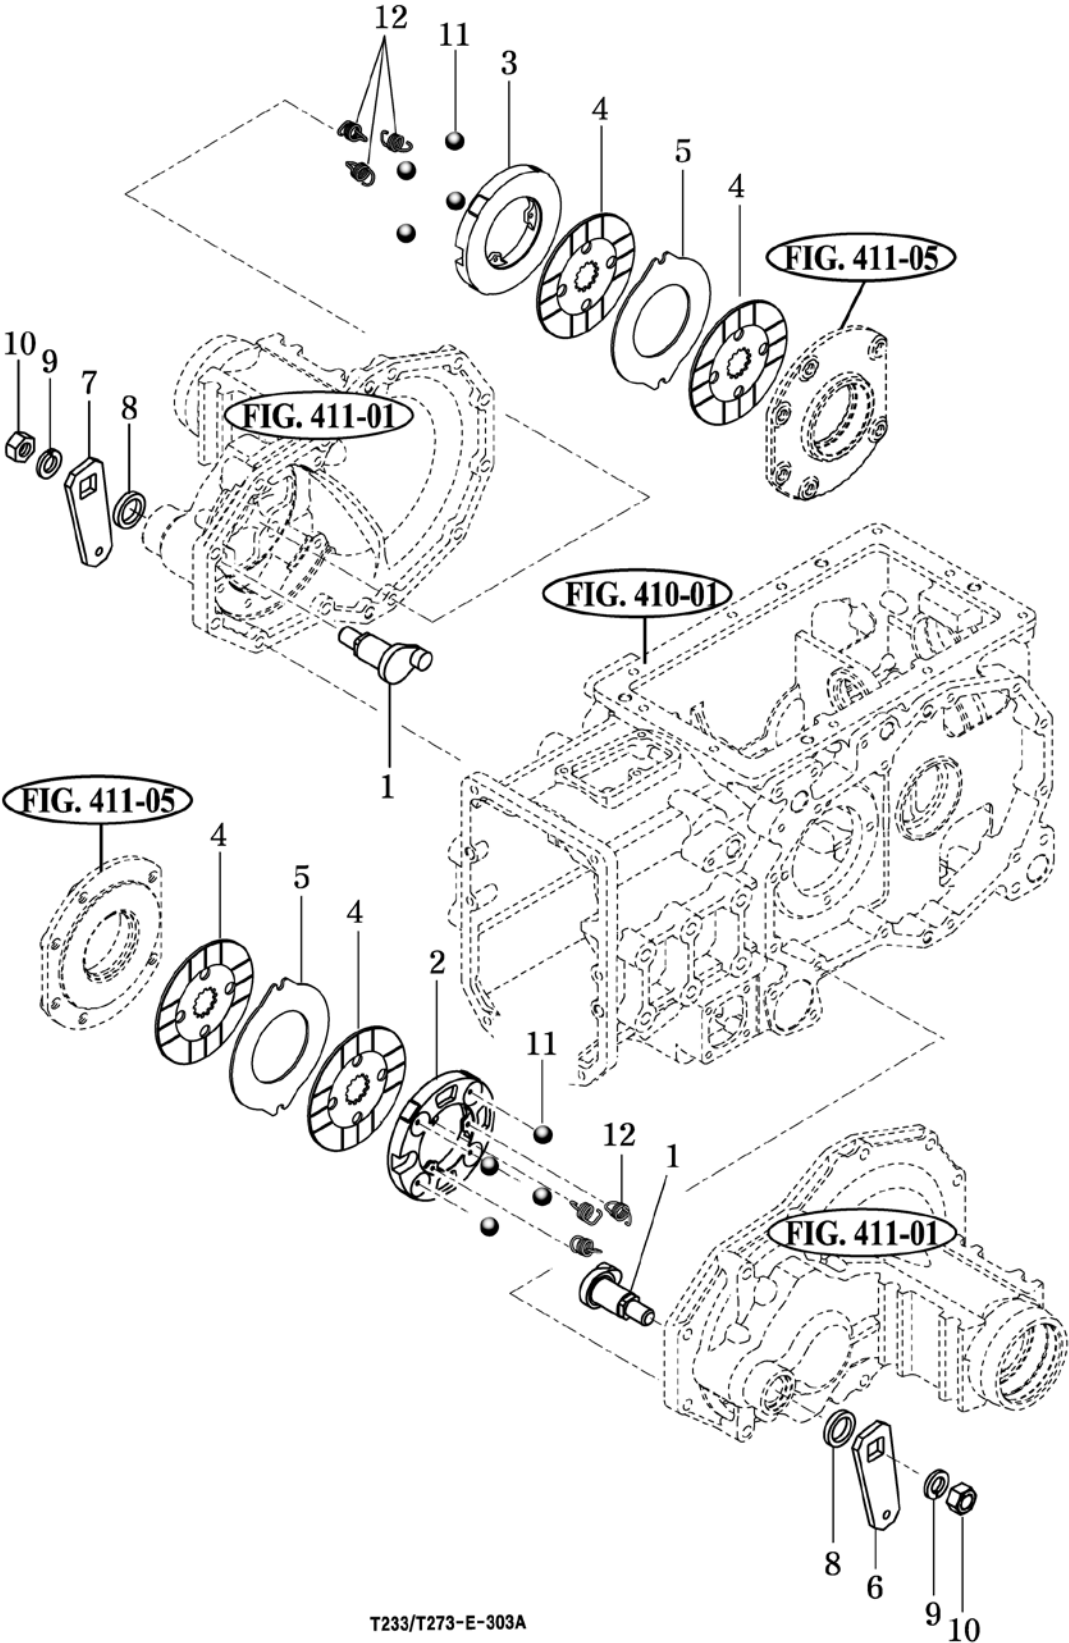

NOTE

[illegible]


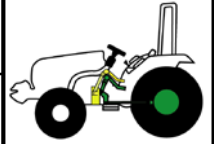


FIG 304

BRAKE PEDAL & LINKAGE

T2334 / T2734

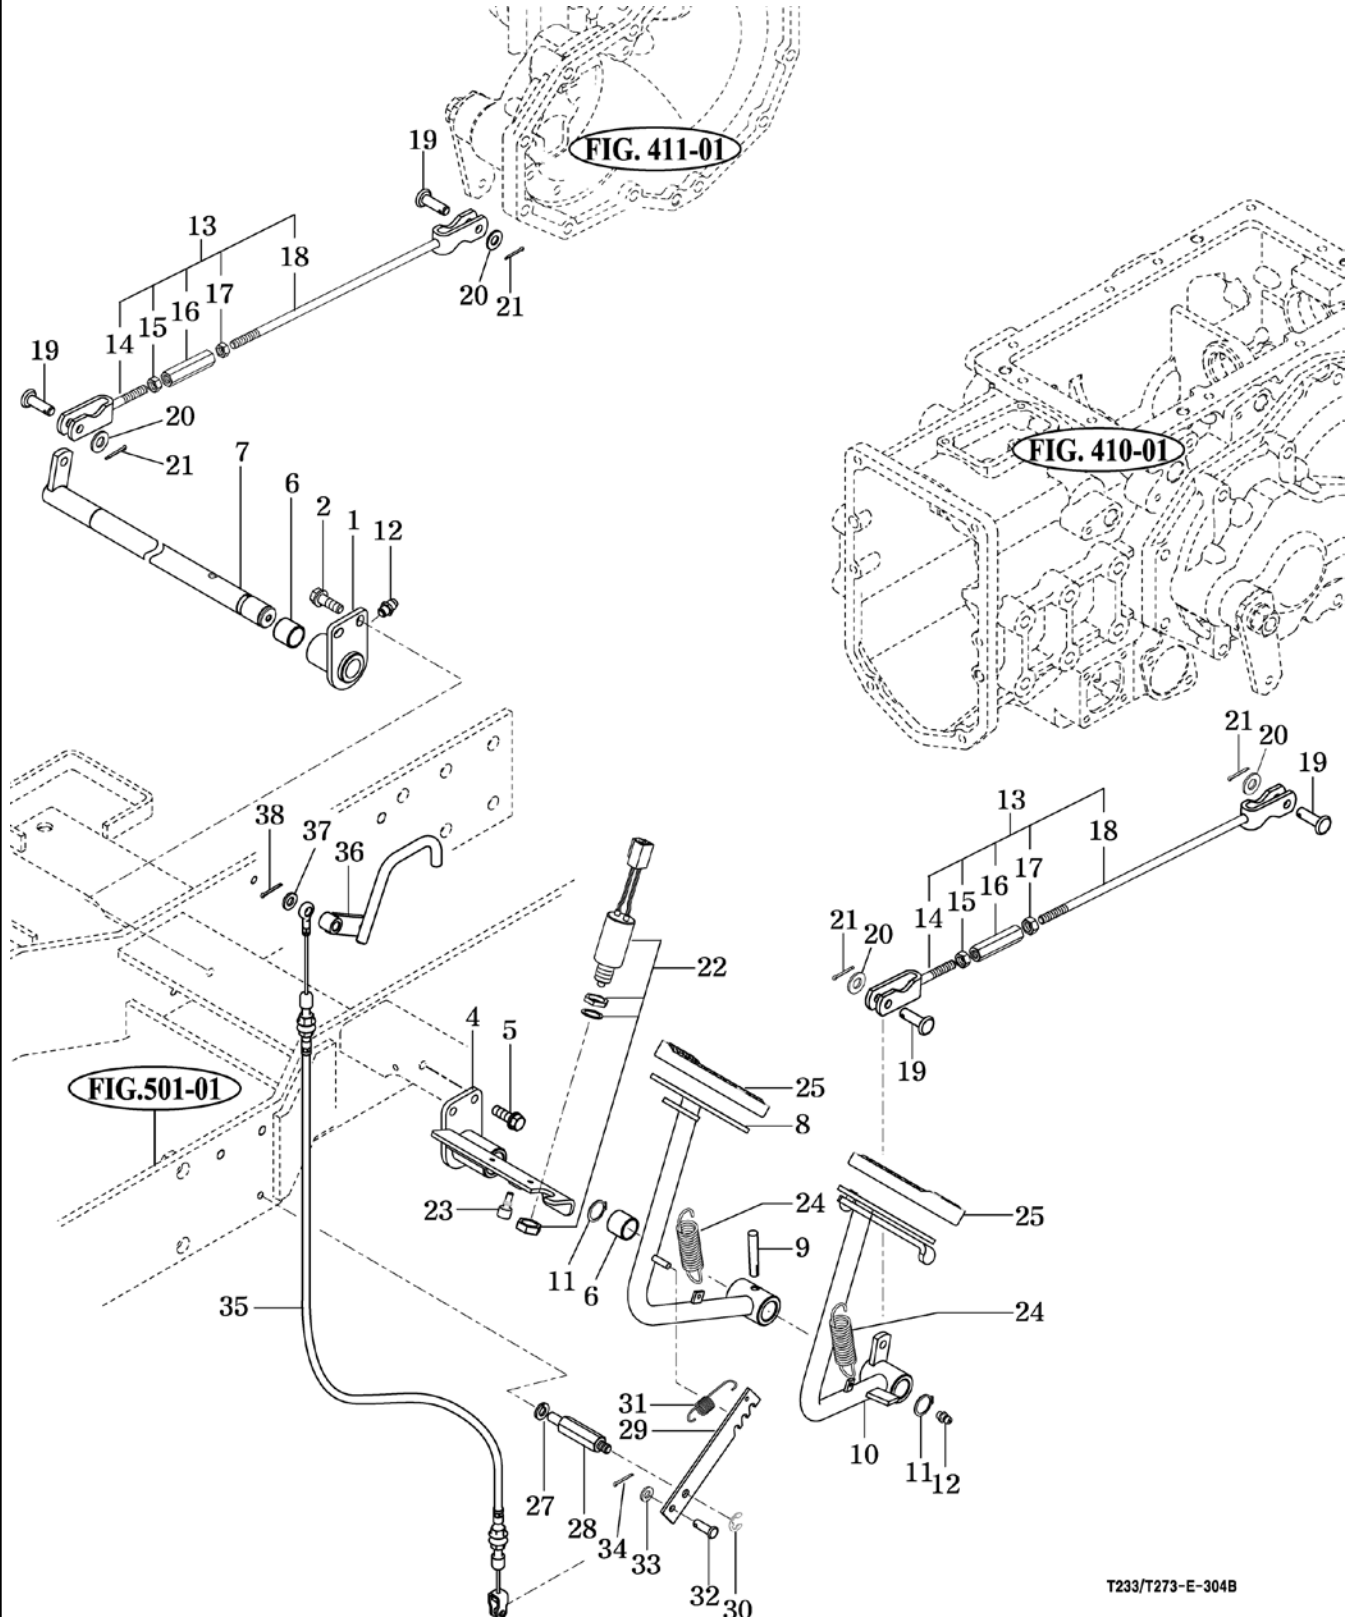

T233/T273-E-304B

NOTE



FIG 305

STEERING WHEEL & DASH COVER

P1

Year / Month

2006 / 07

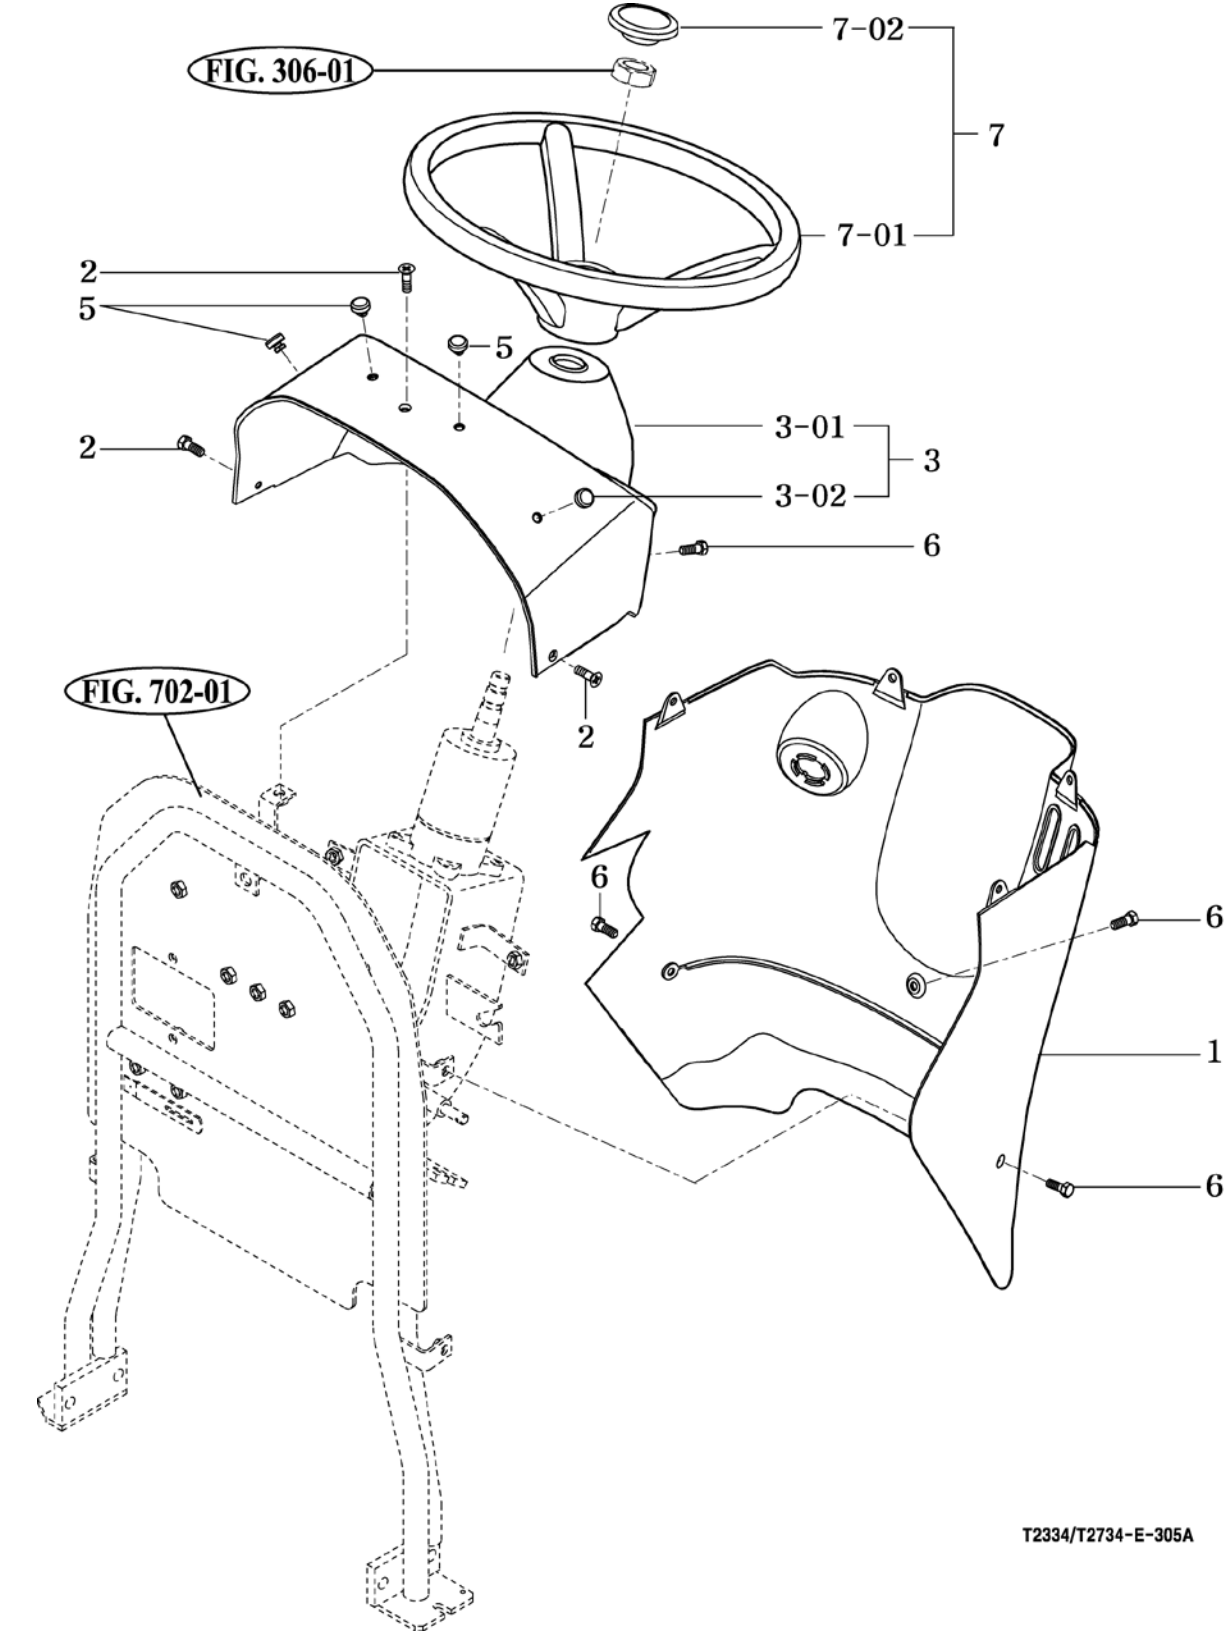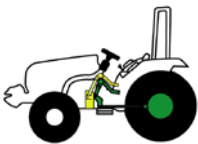

T2334/T2734-E-305A

NOTE


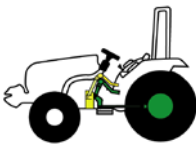


FIG 306

STEERING VALVE

T2334 / T2734

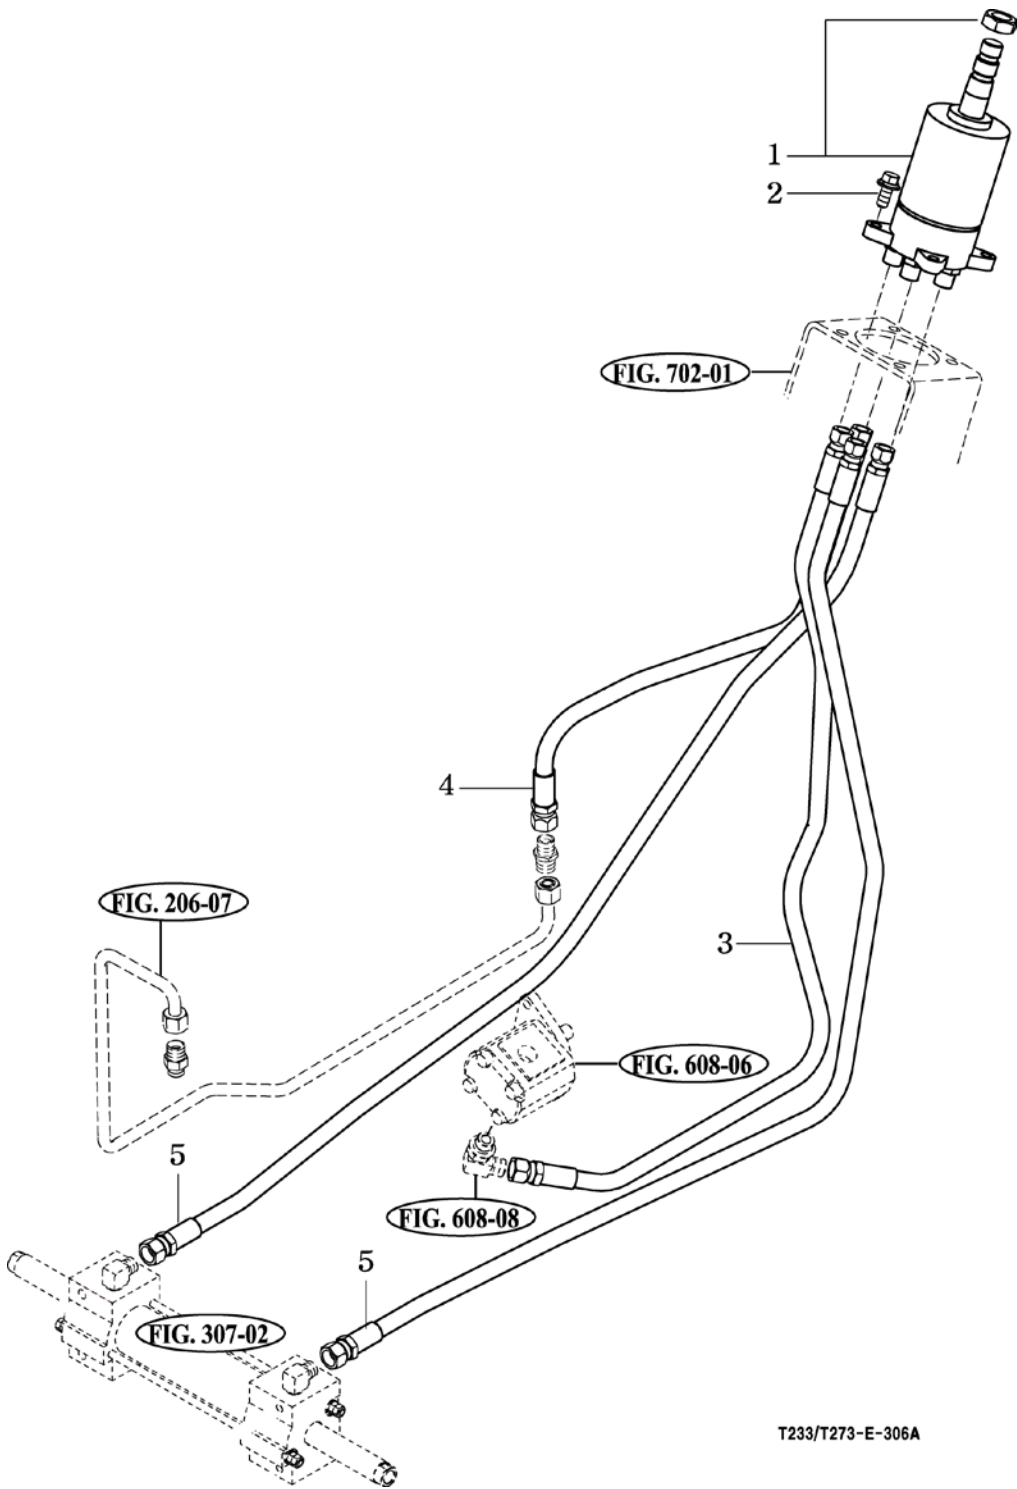

T233/T273-E-306A

NOTE


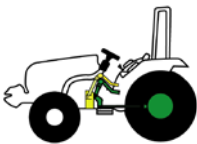


FIG 307

STEERING CYLINDER

T2334 / T2734

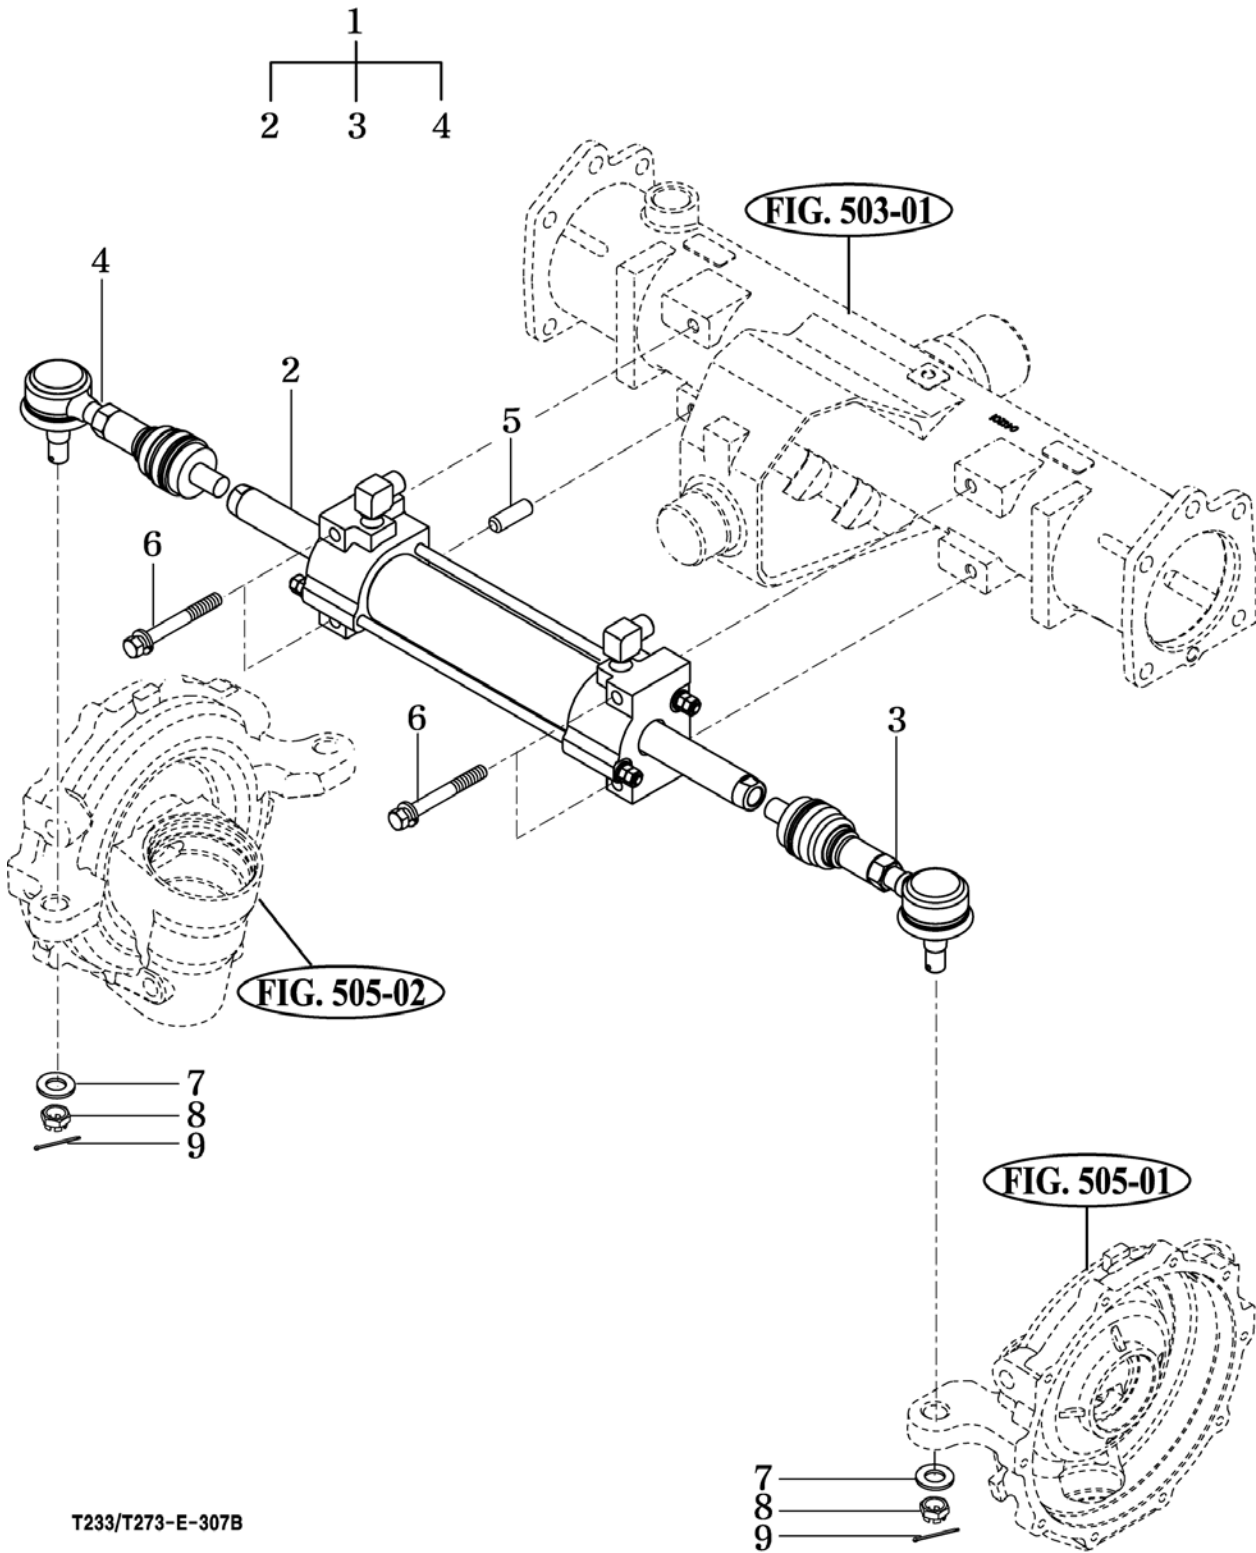

T233/T273-E-307B

NOTE

[illegible]


FIG 308

FRONT WHEEL


P1

Year / Month

2006 / 07

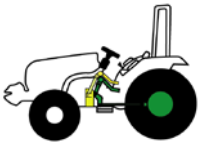

T2334 / T2734

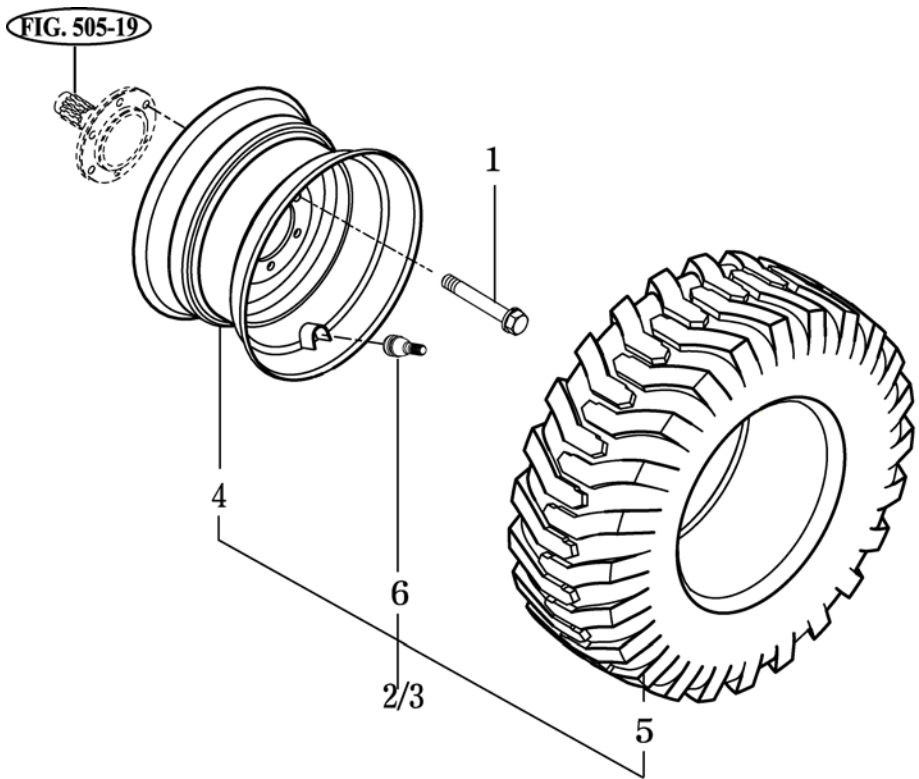

T233/T273-E-308B

NOTE

[illegible]


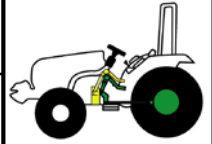


FIG 309

REAR WHEEL

T2334 / T2734

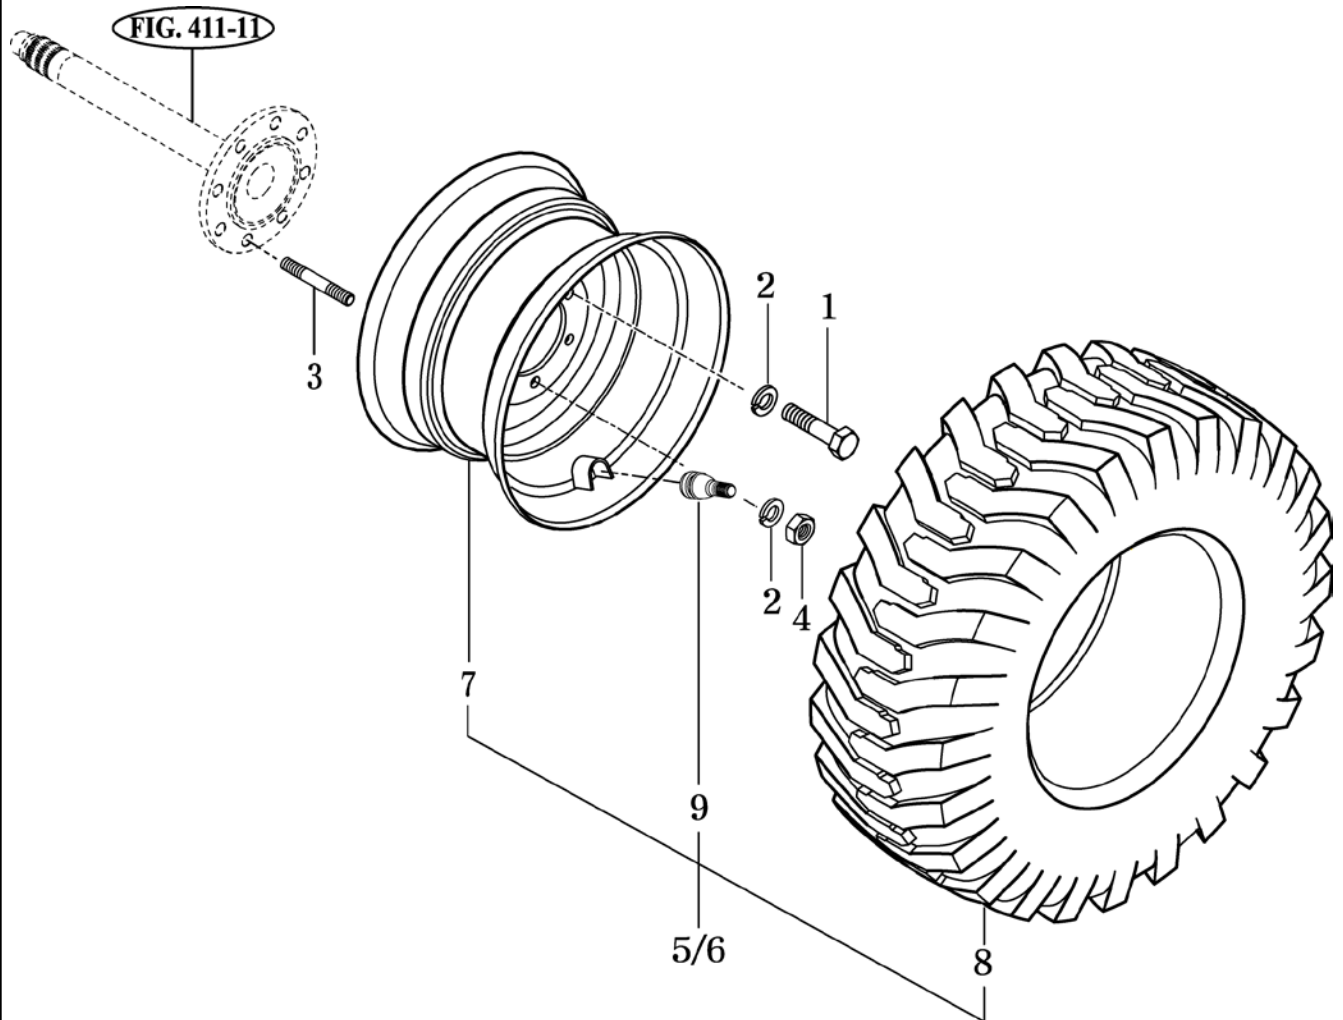

T233/T273-E-309A

NOTE



[illegible]

FIG 401
T2334 / T2734

INPUT SHAFT

P1

Year / Month
2006 / 07

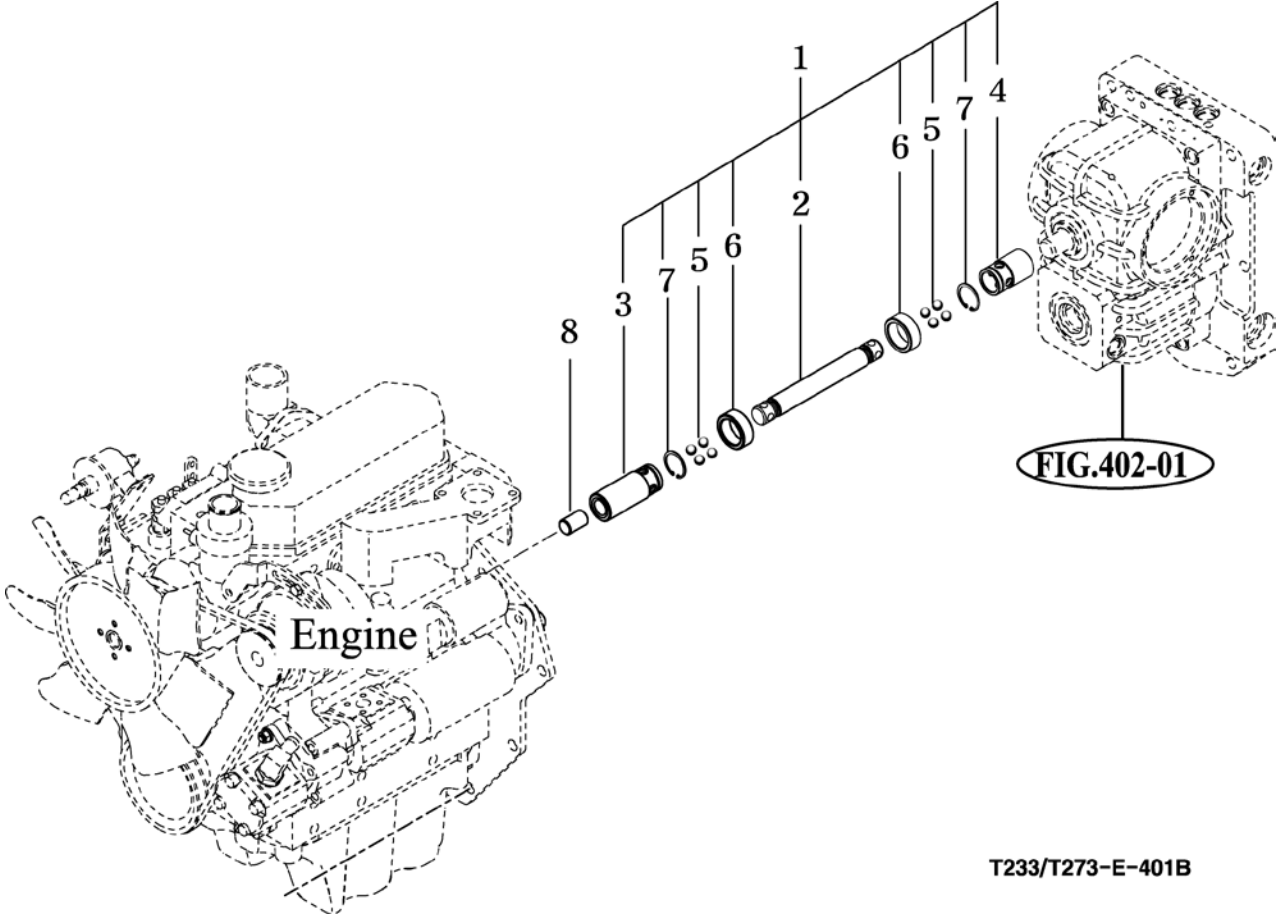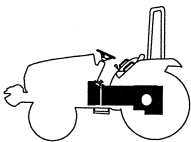

T233/T273-E-401B

NOTE

[illegible]

FIG 404



T2334 / T2734

4WD DRIVE GEAR

P1

Year / Month

2006 / 07

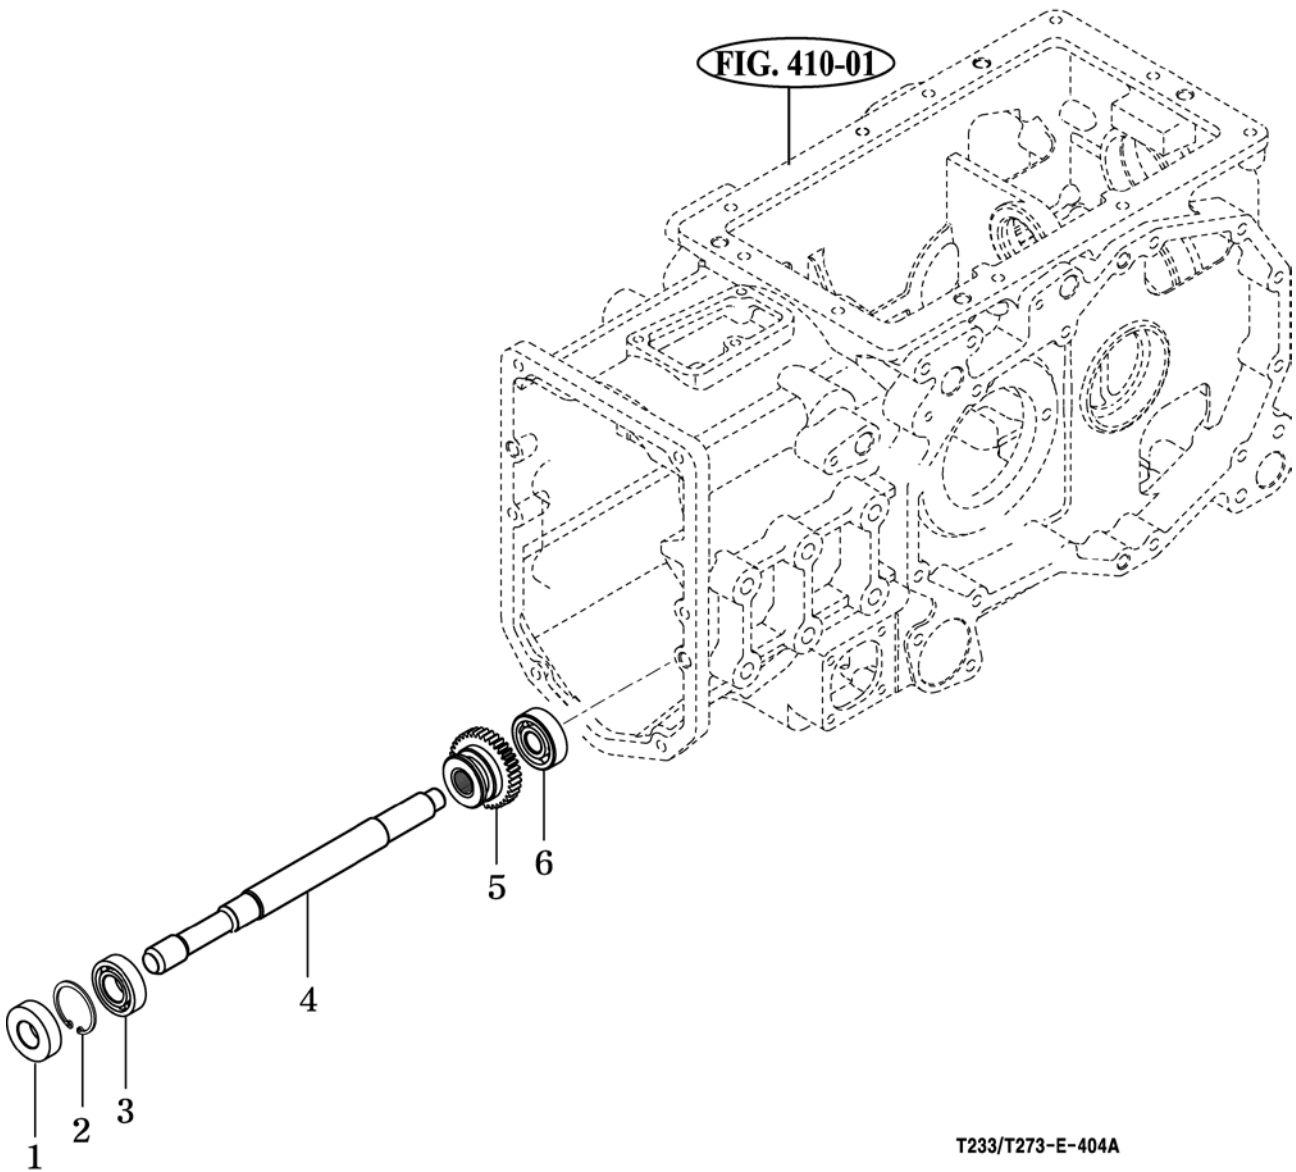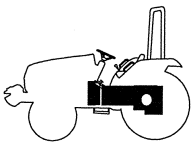

NOTE

FIG 405



RANGE GEARS

T2334 / T2734

P1

Year / Month

2006 / 07

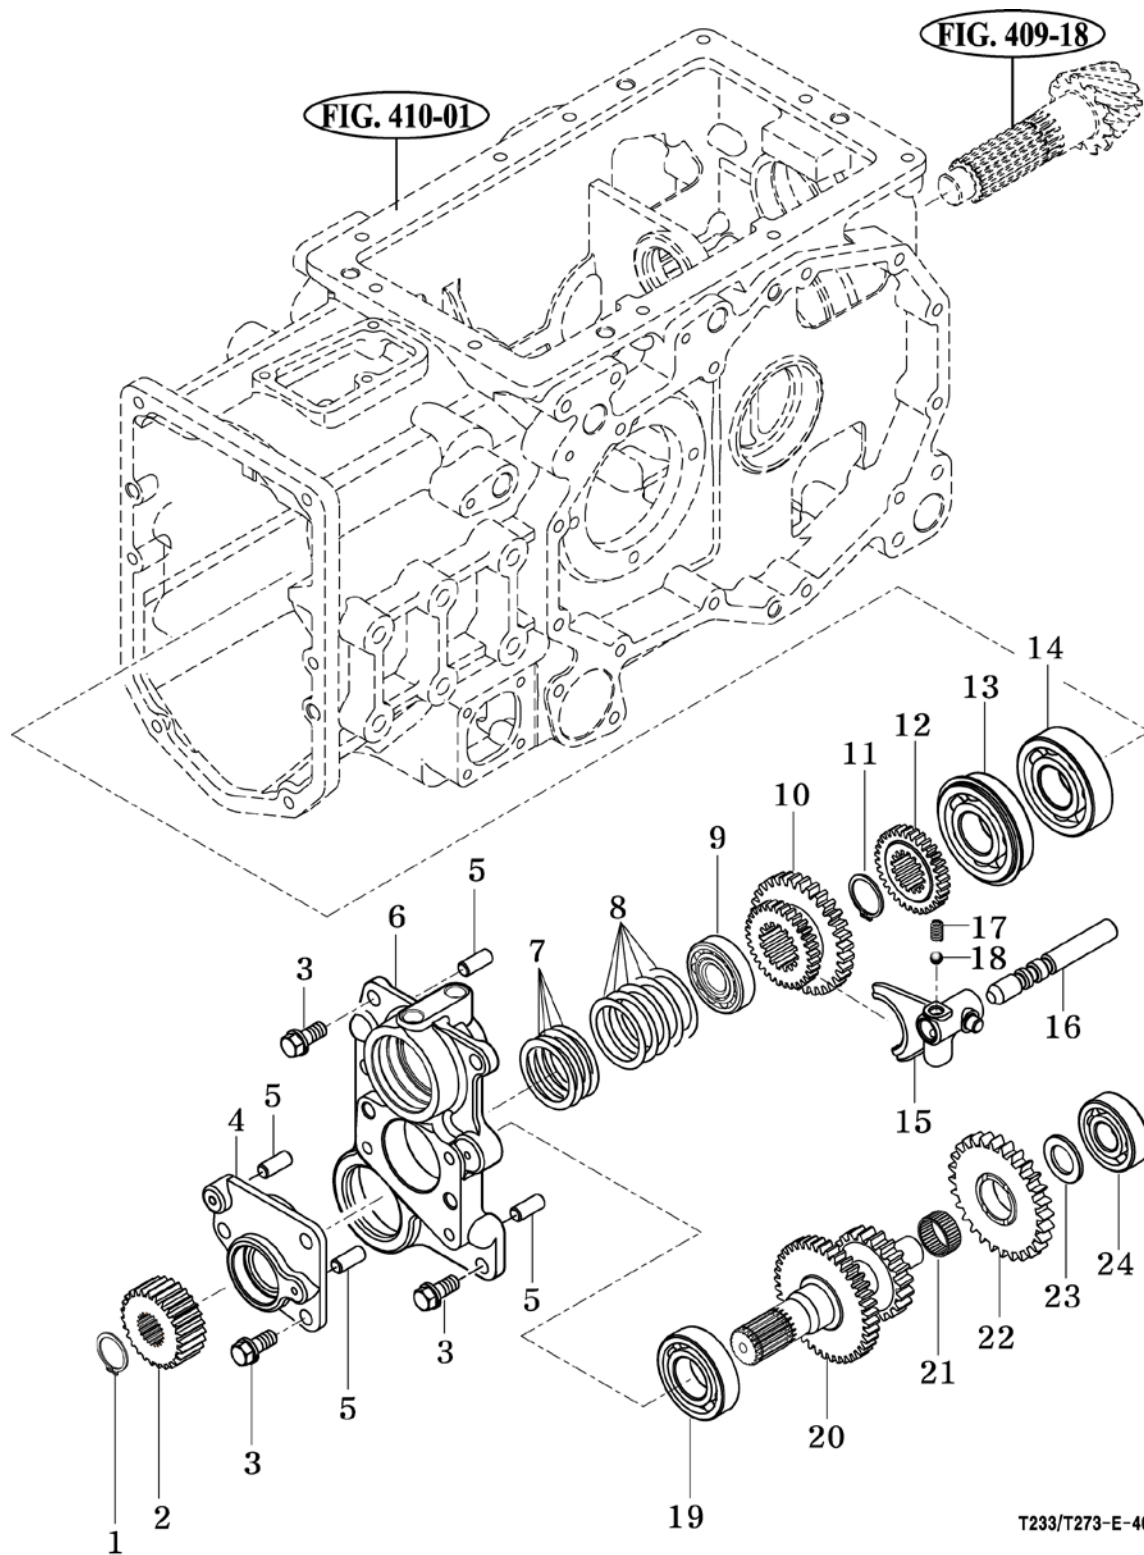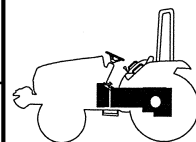

T233/T273-E-405A

NOTE


FIG 406

P.T.O DRIVE SHAFT


P1

Year / Month

2006 / 07

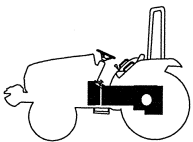

T2334 / T2734

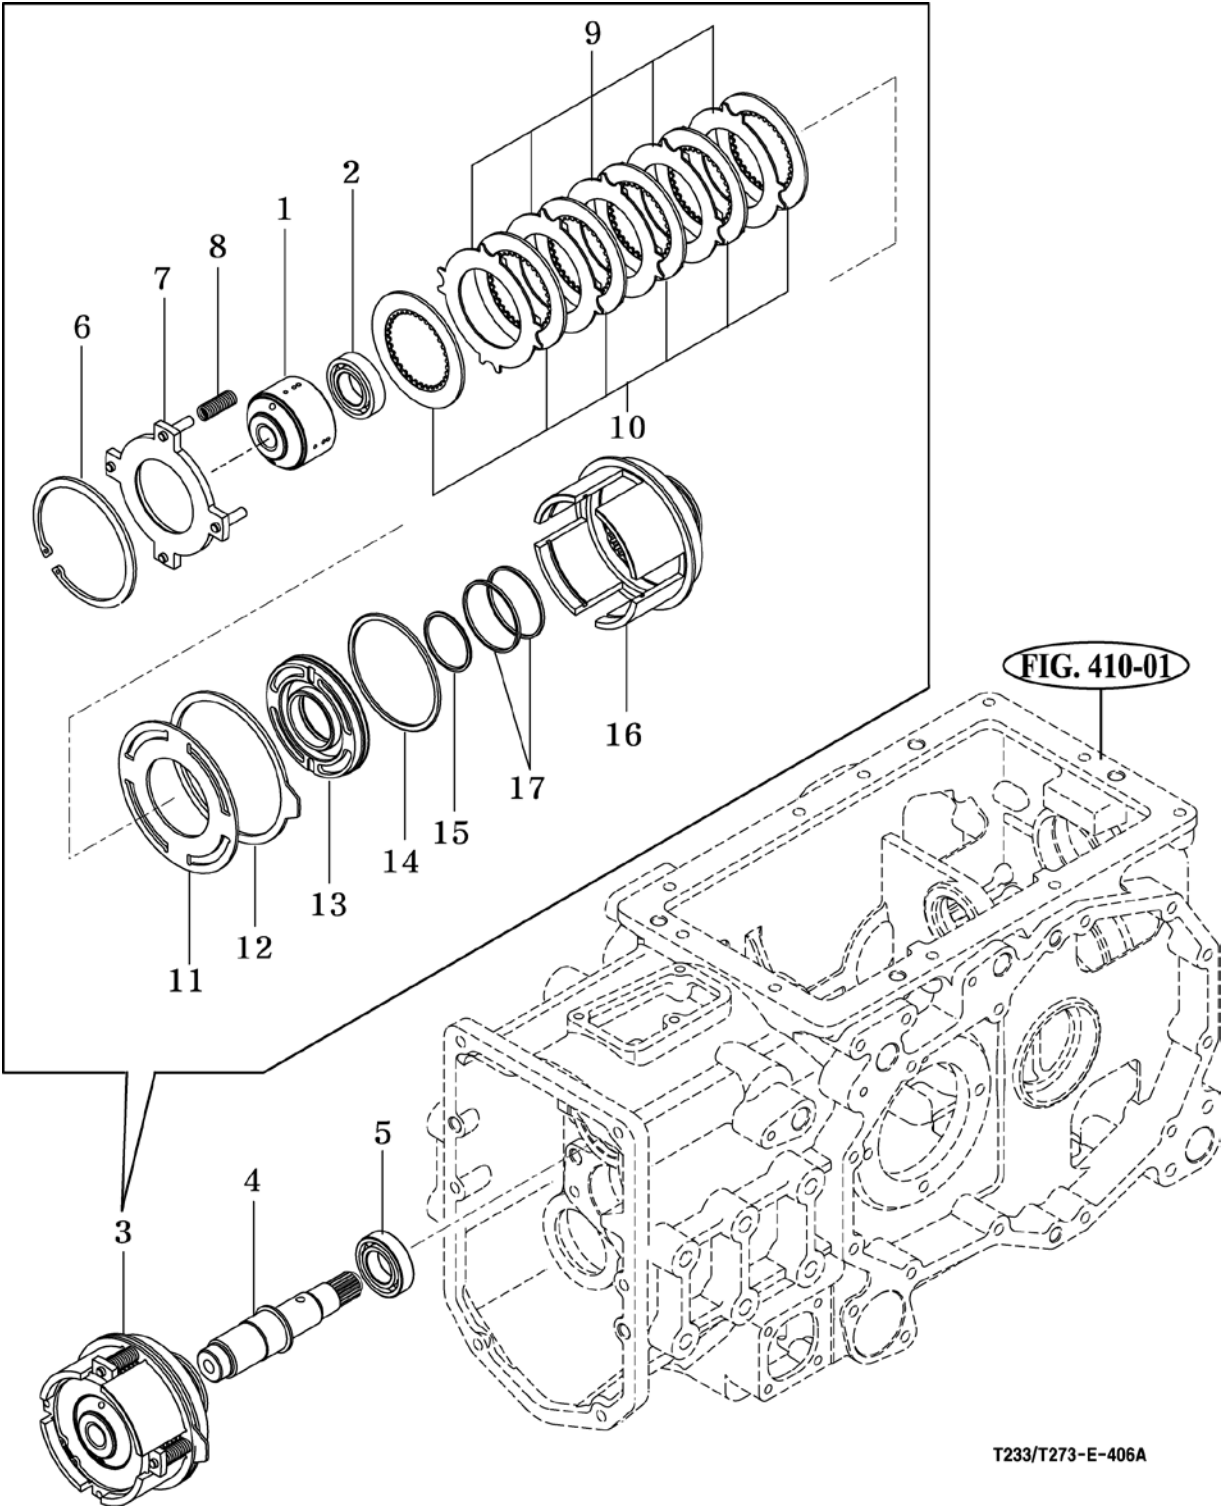

T233/T273-E-406A

NOTE

[illegible]


FIG 407

DIFFERENTIAL LOCK


P1

Year / Month

2006 / 07

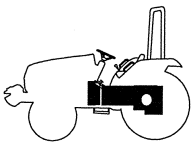

T2334 / T2734

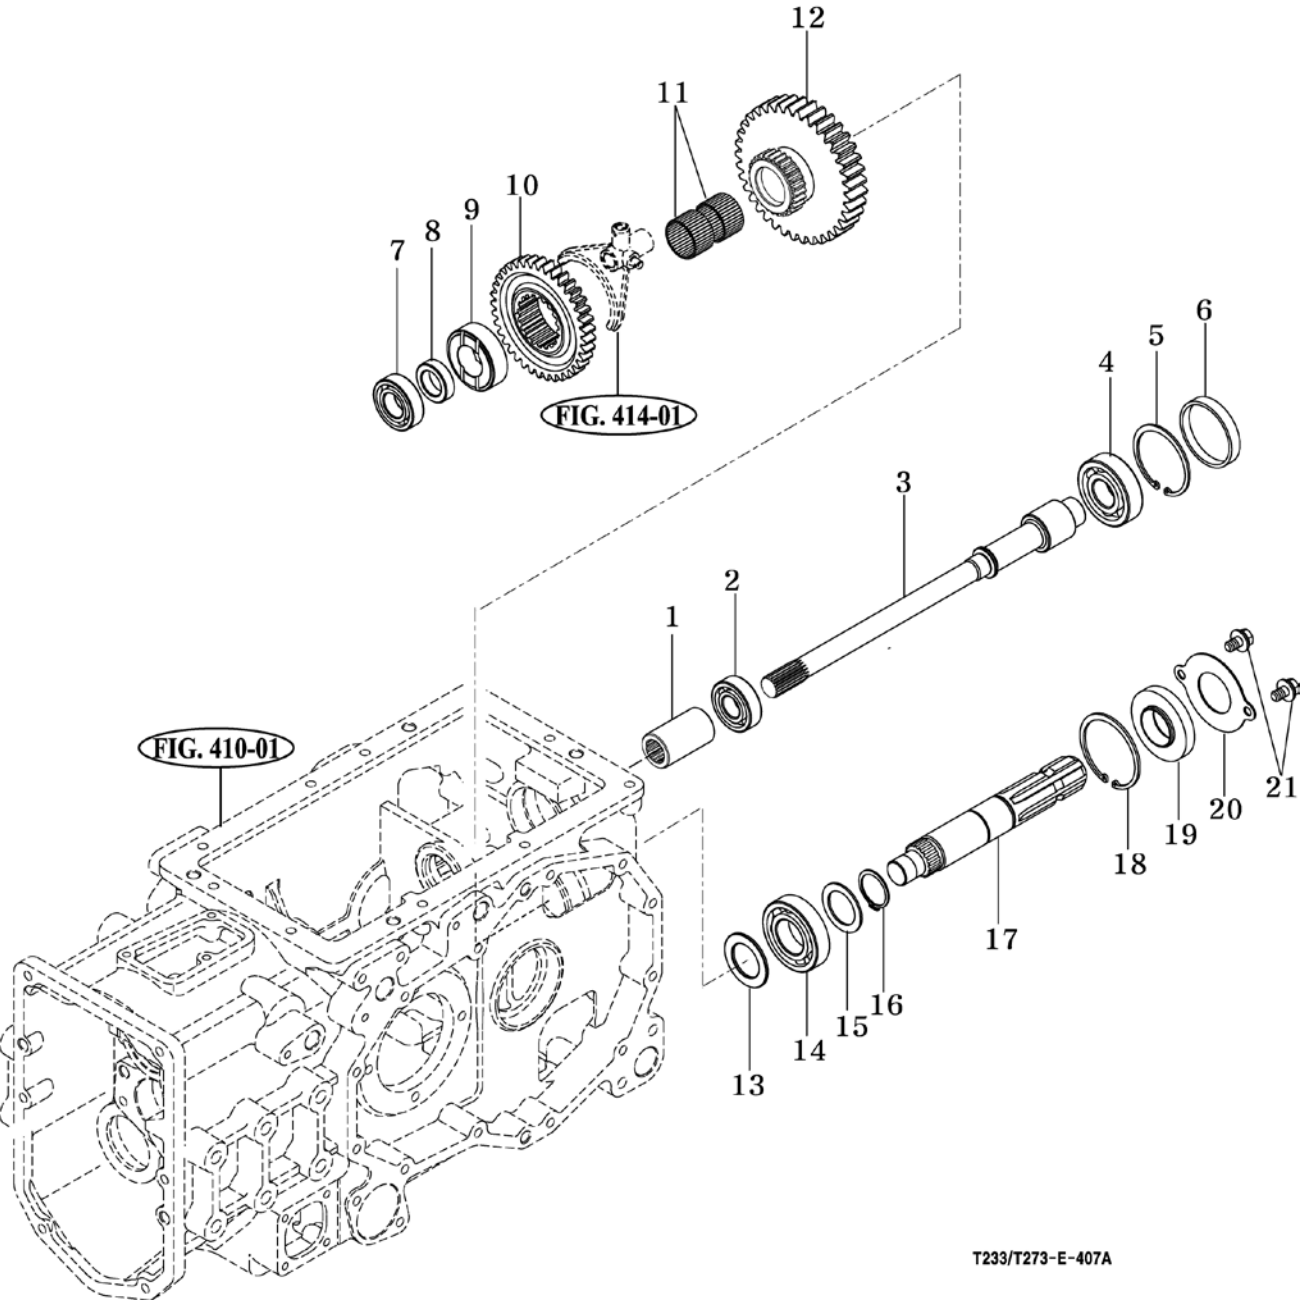

T233/T273-E-407A

NOTE

[illegible]

FIG 408



T2334 / T2734

MID P.T.O GEARS

P1

Year / Month

2006 / 07

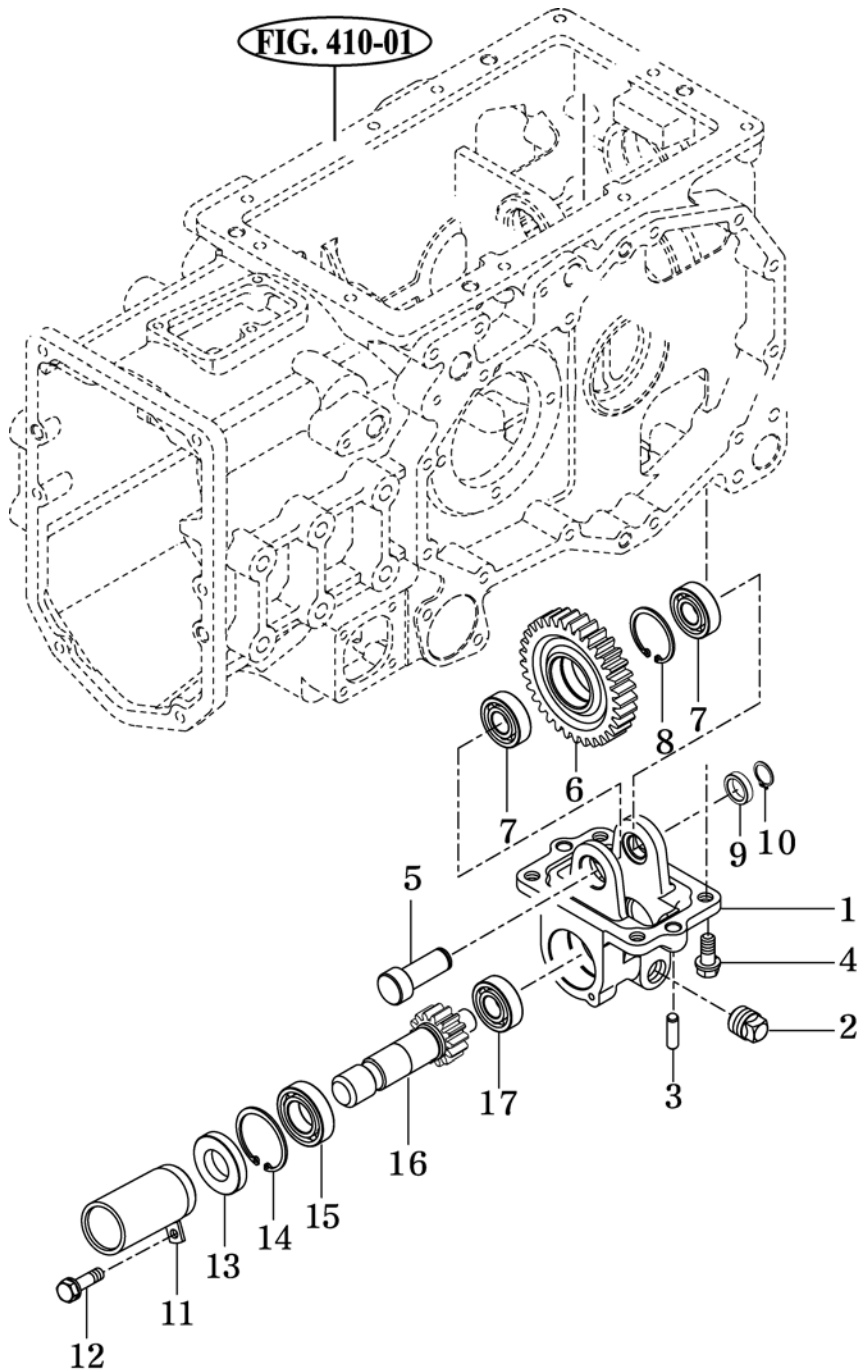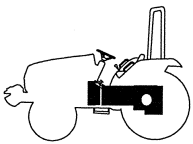

T233/T273-E-408B

NOTE

USM4(OPTION)


FIG 409

DIFF LOCK


P1

Year / Month

2006 / 07

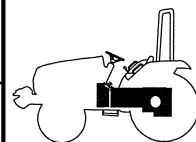

T2334 / T2734

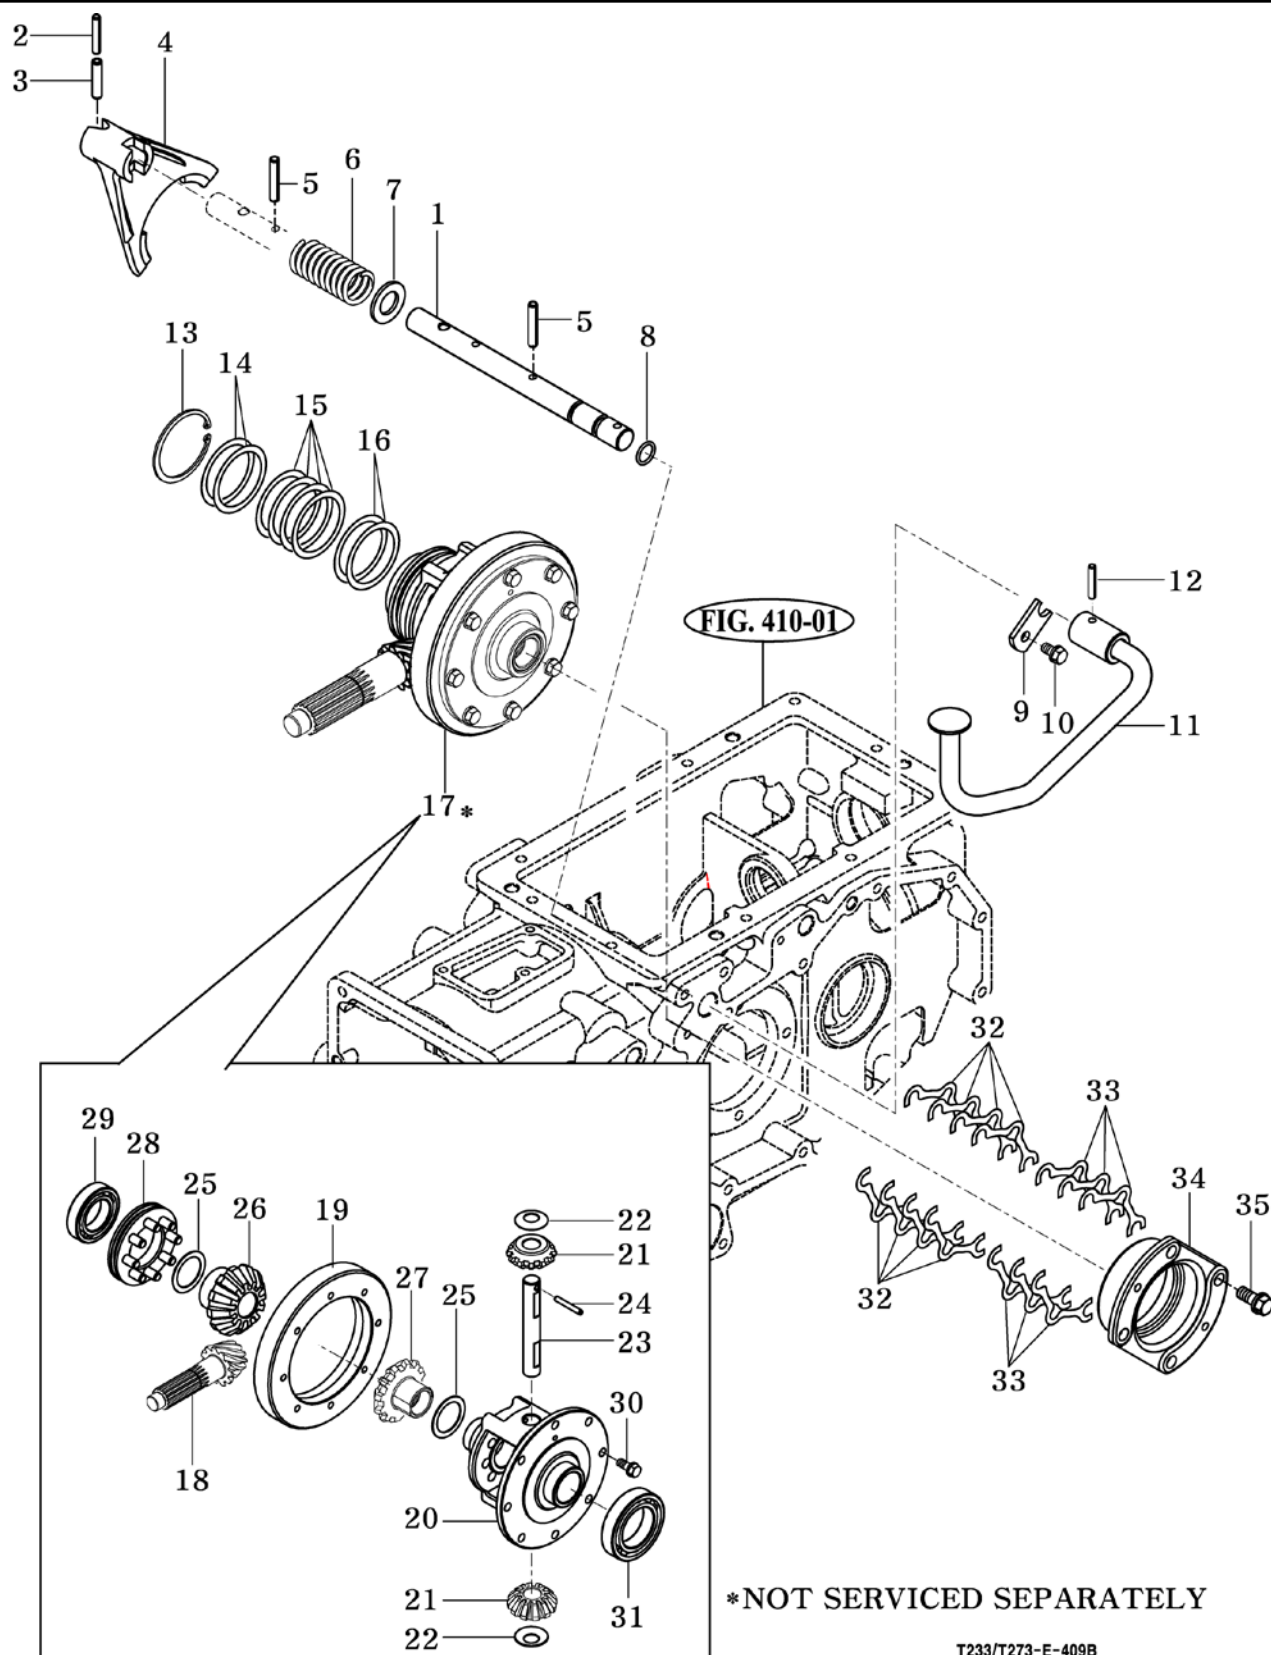

NOTE

[illegible]


FIG 410

REAR TRANSMISSION CASE


P1

Year / Month

2006 / 07

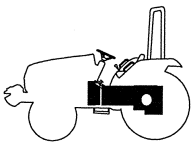

T2334 / T2734

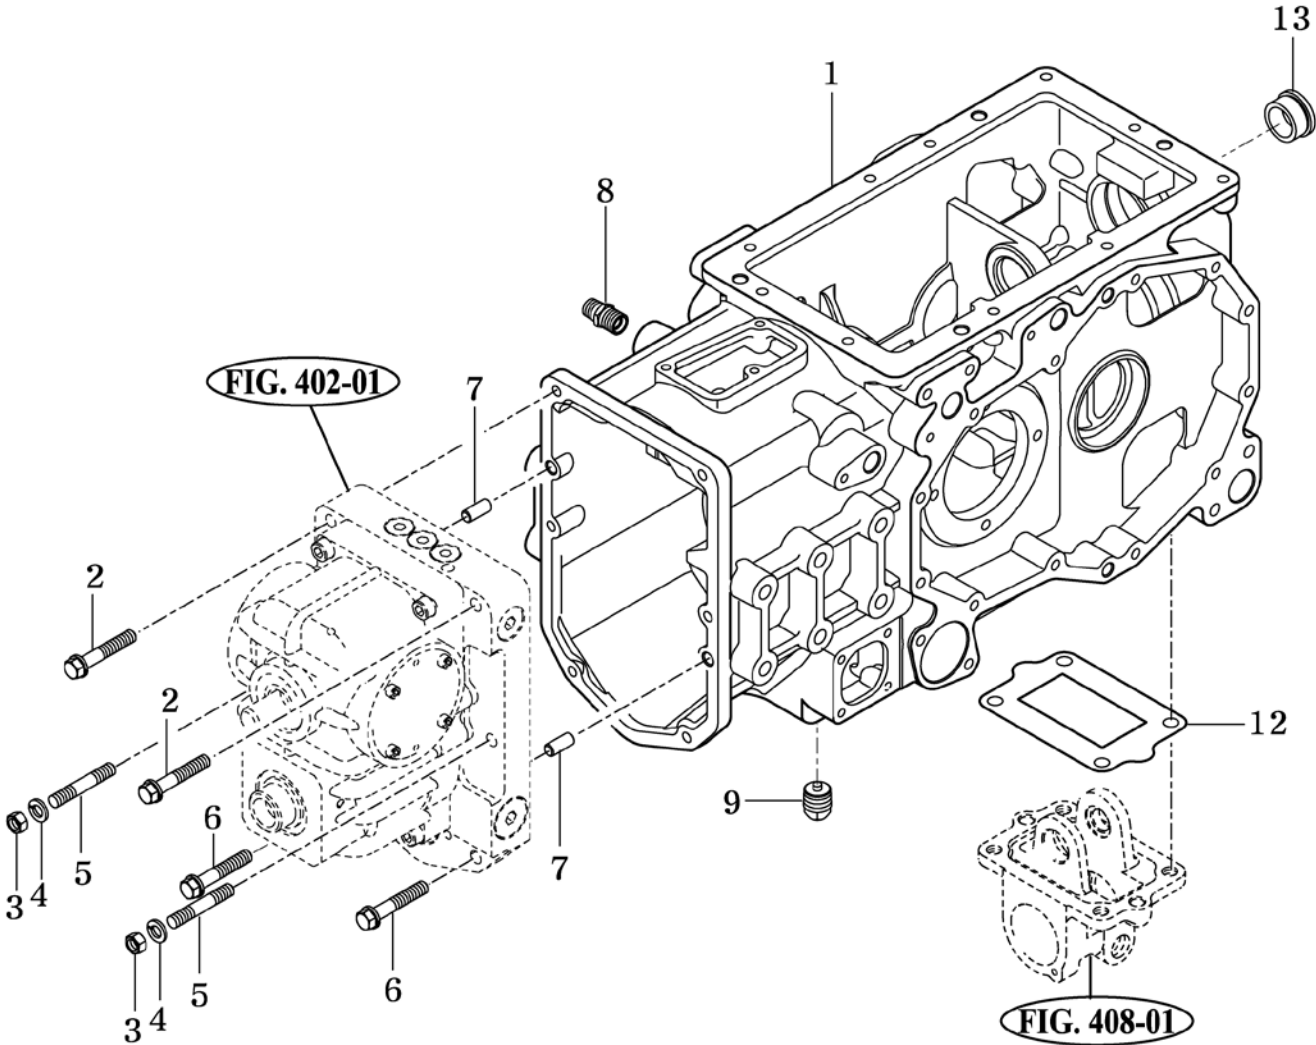

T2334/T2734-E-410A

NOTE

FIG 411



REAR AXLE HOUSINGS

T2334 / T2734

P1

Year / Month

2006 / 07

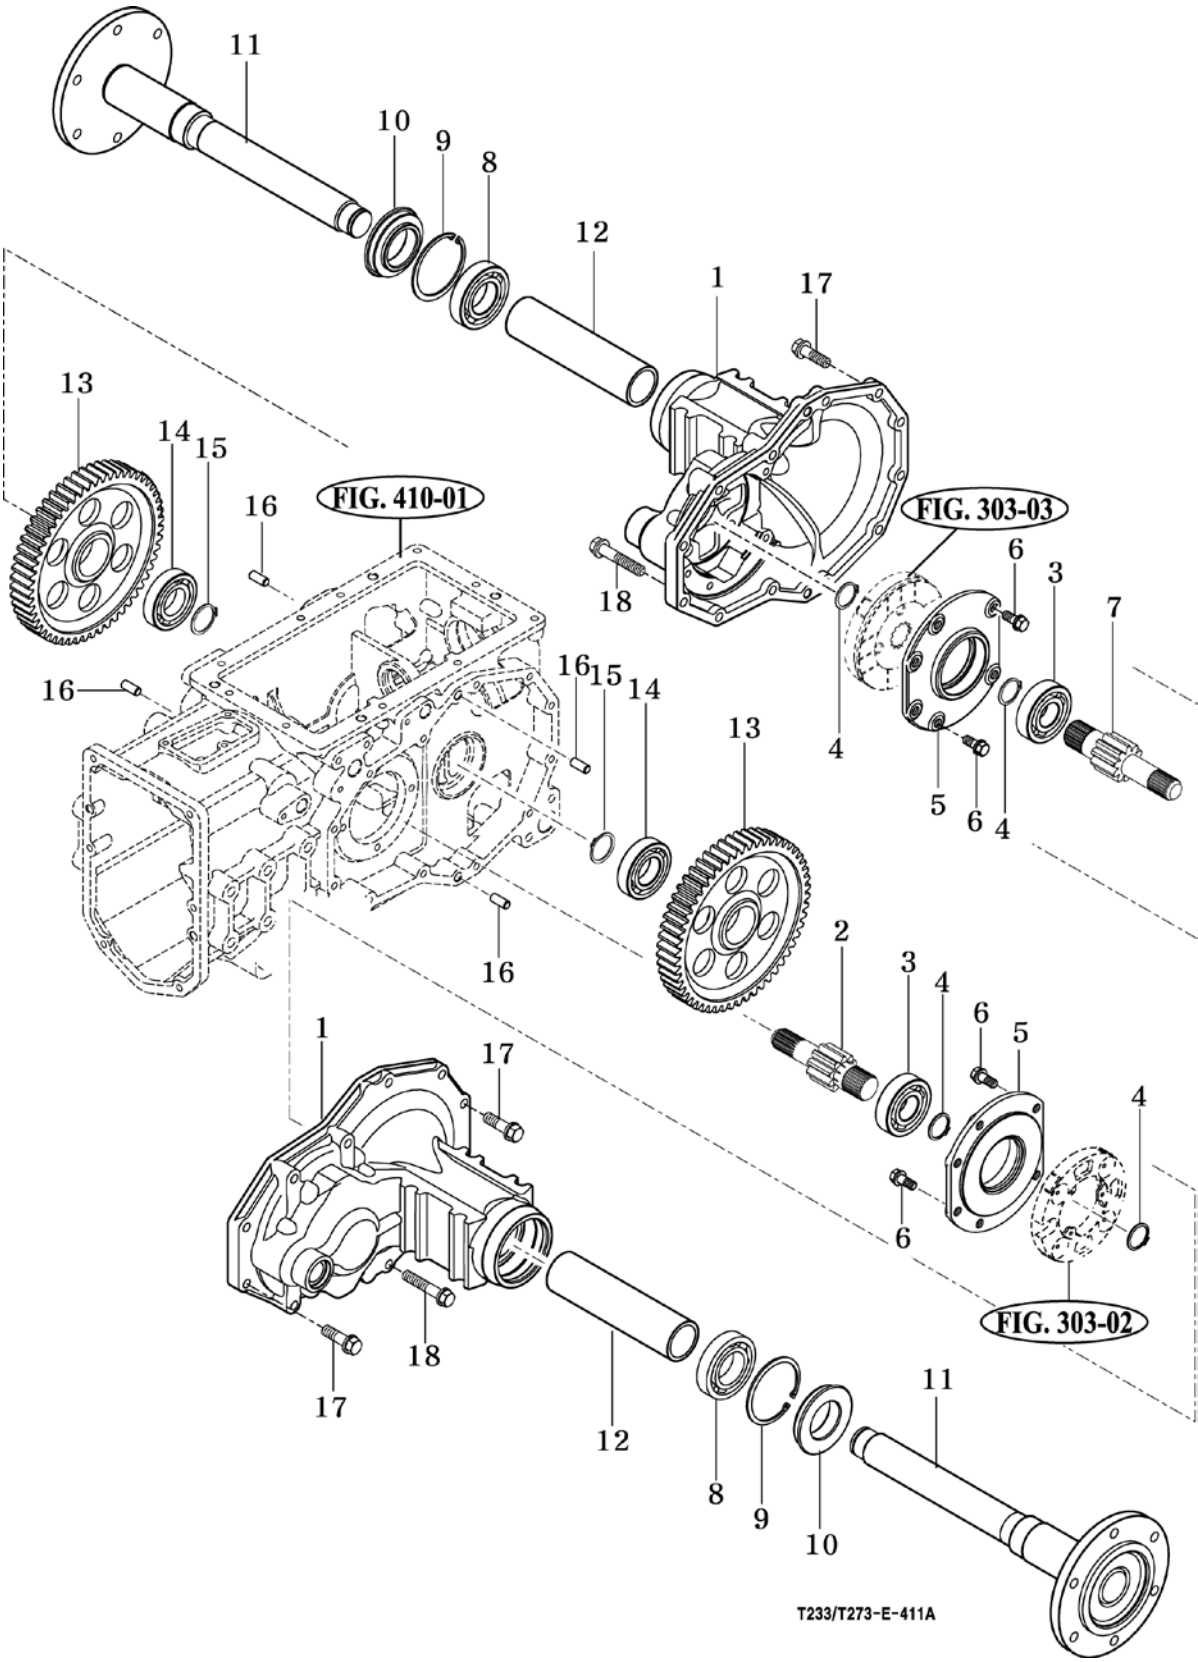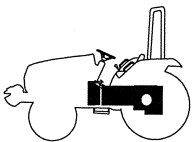

T233/T273-E-411A

NOTE

[illegible]

[illegible]

[illegible]

FIG 415



4WD CHANGE LEVER

T2334 / T2734

P1

Year / Month

2006 / 07

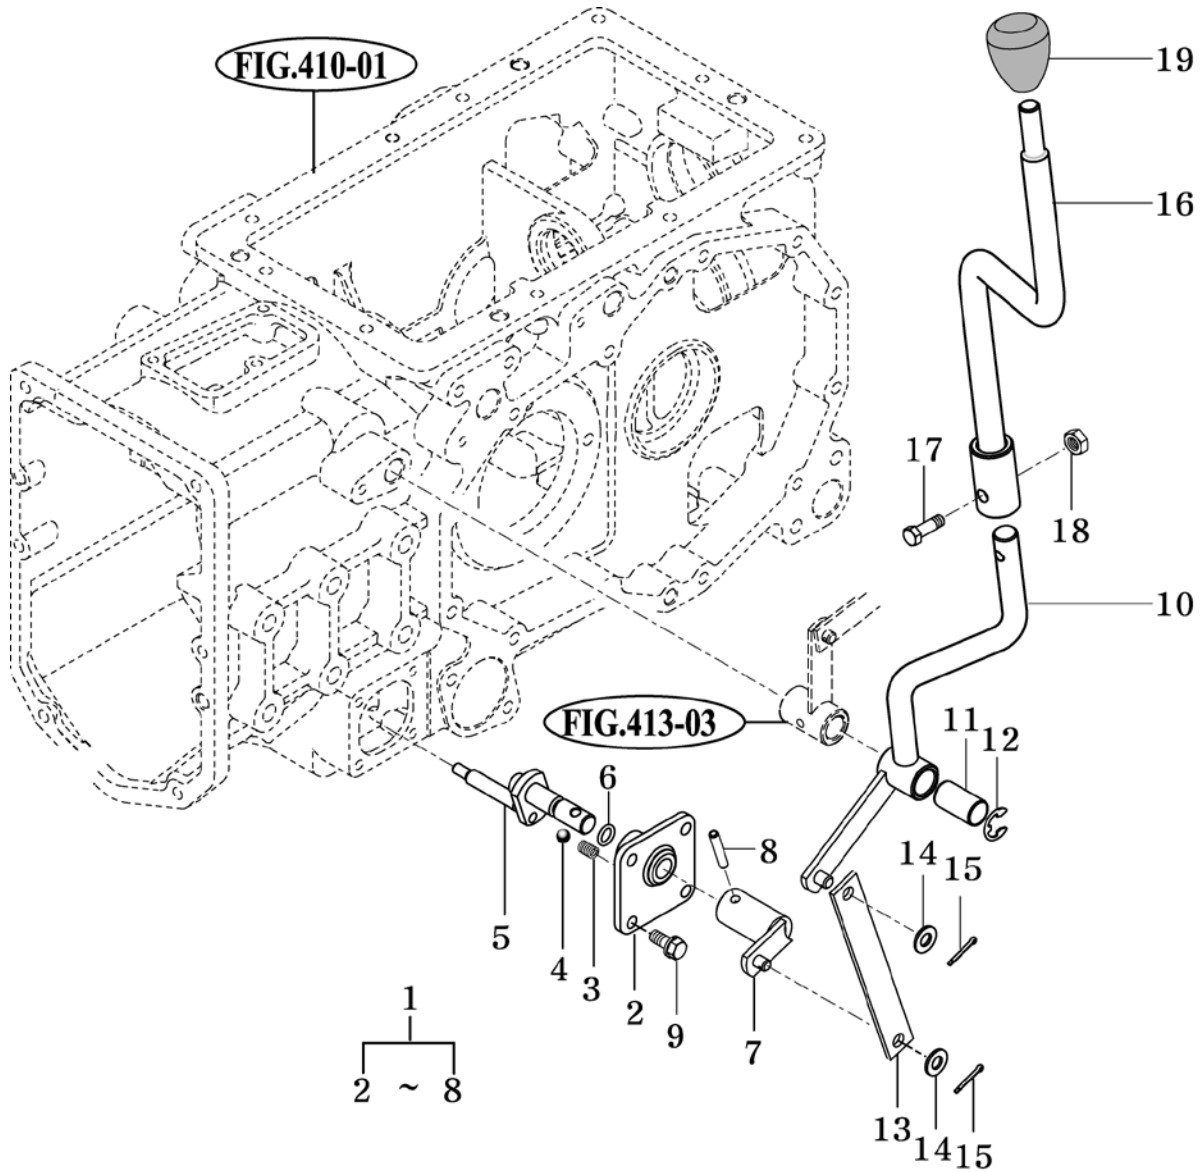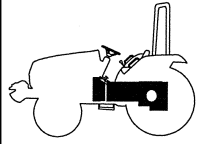

T233/T273-E-415A

NOTE

[illegible]


FIG 501

FRAME


P1

Year / Month

2006 / 07

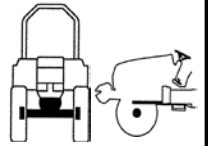

T2334 / T2734

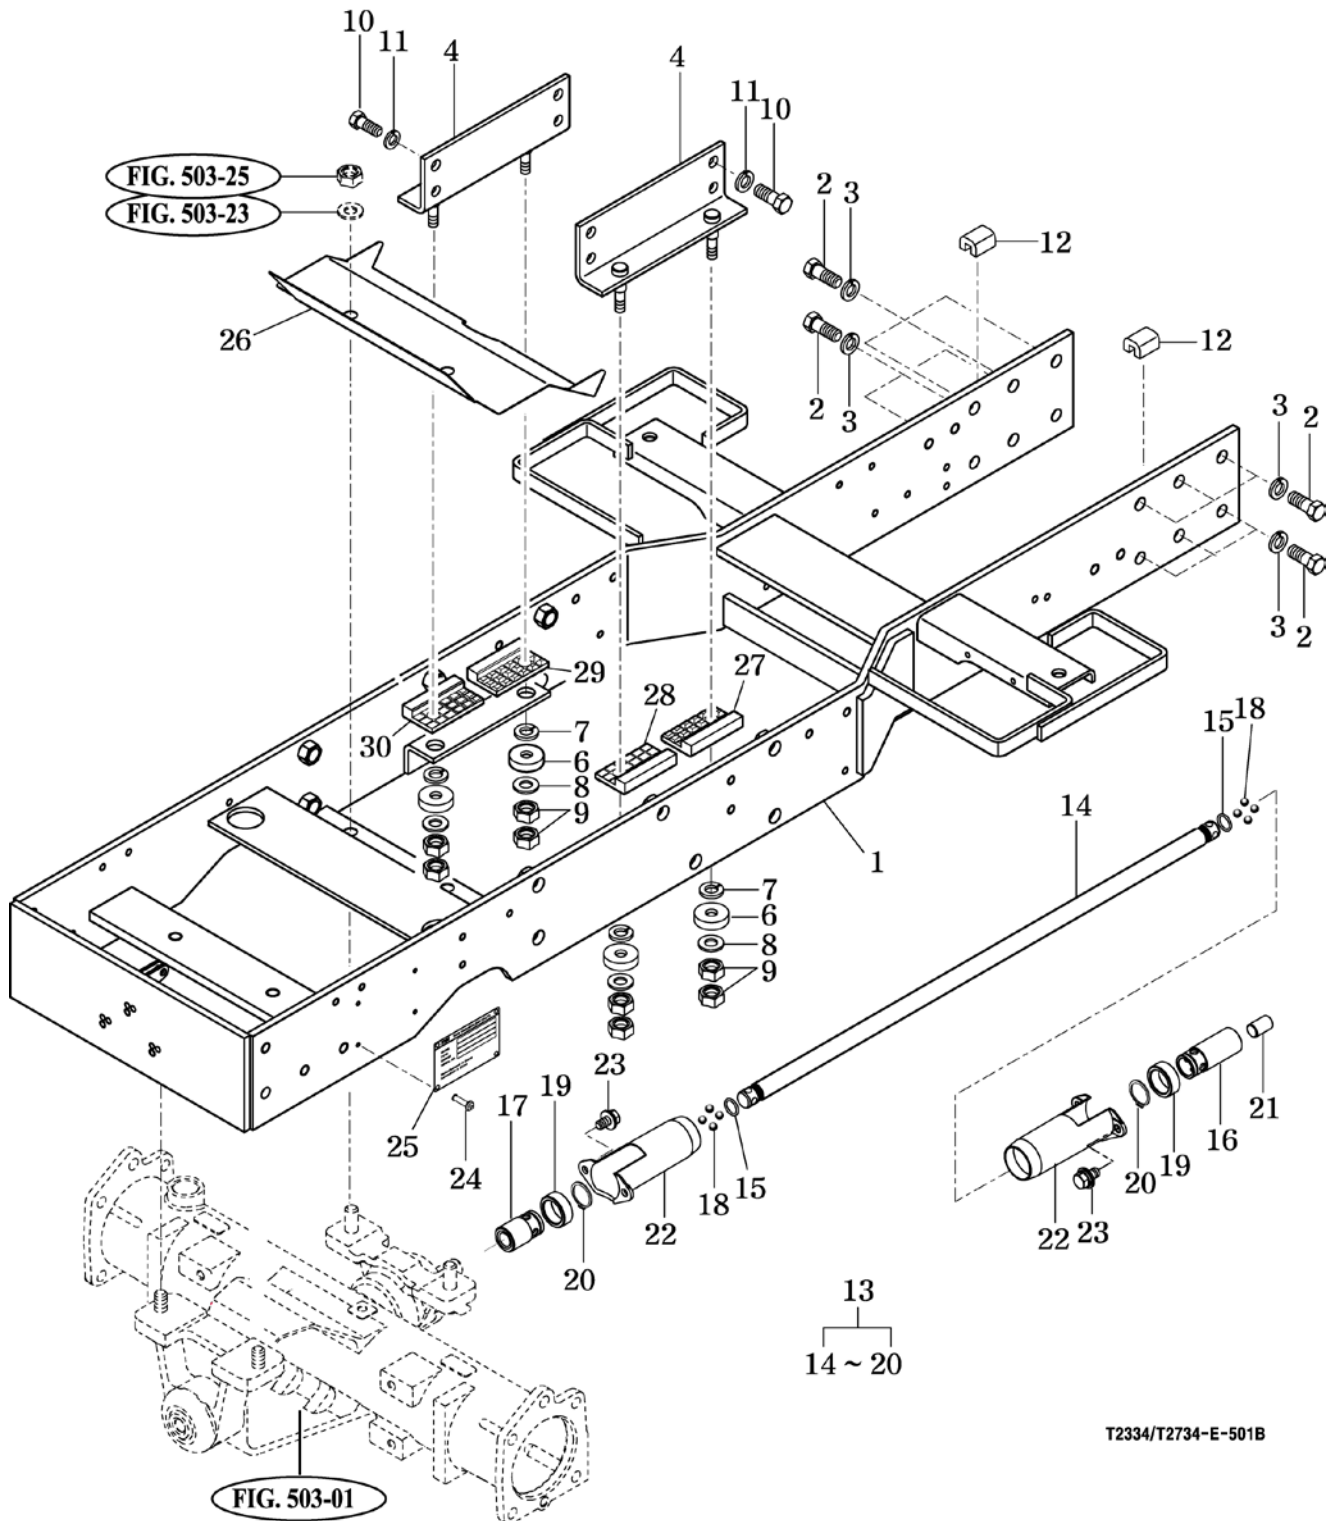

T2334/T2734-E-501B

NOTE


FIG 502

FRONT DIFFERENTIAL GEARS & SHAFT


P1

Year / Month

2006 / 07

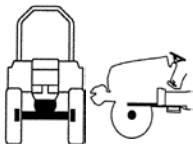

T2334 / T2734

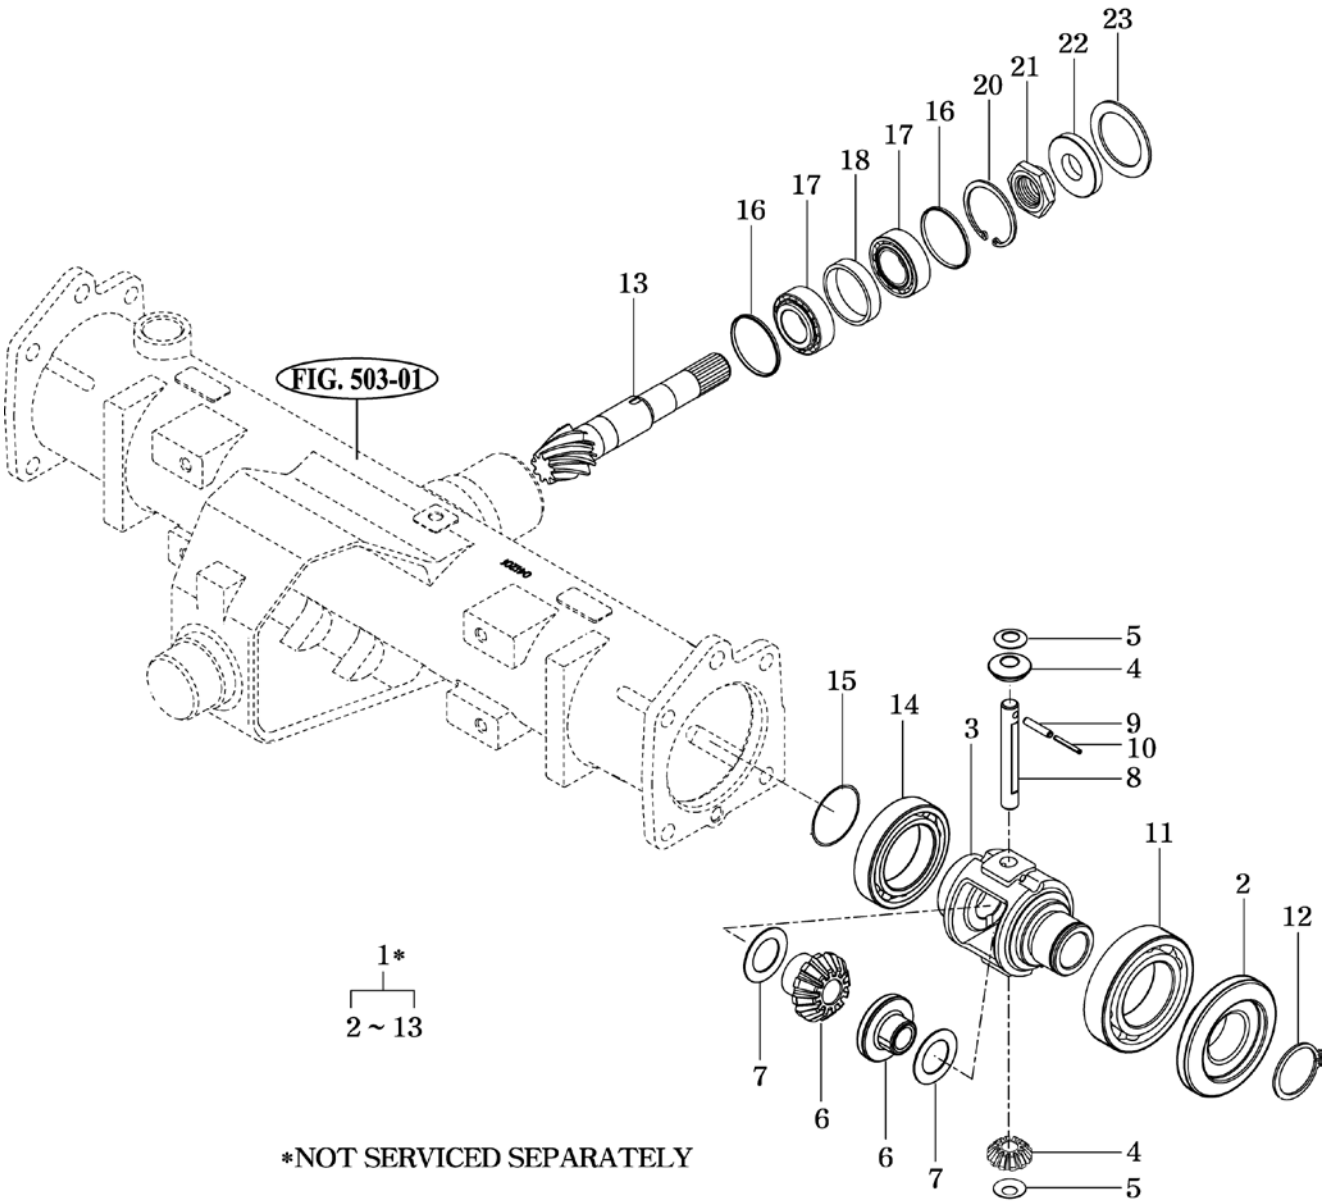

T233/T273-E-502A

NOTE

[illegible]


FIG 503

FRONT AXLE HOUSING


P1

Year / Month

2006 / 07

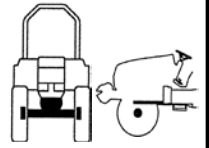

T2334 / T2734

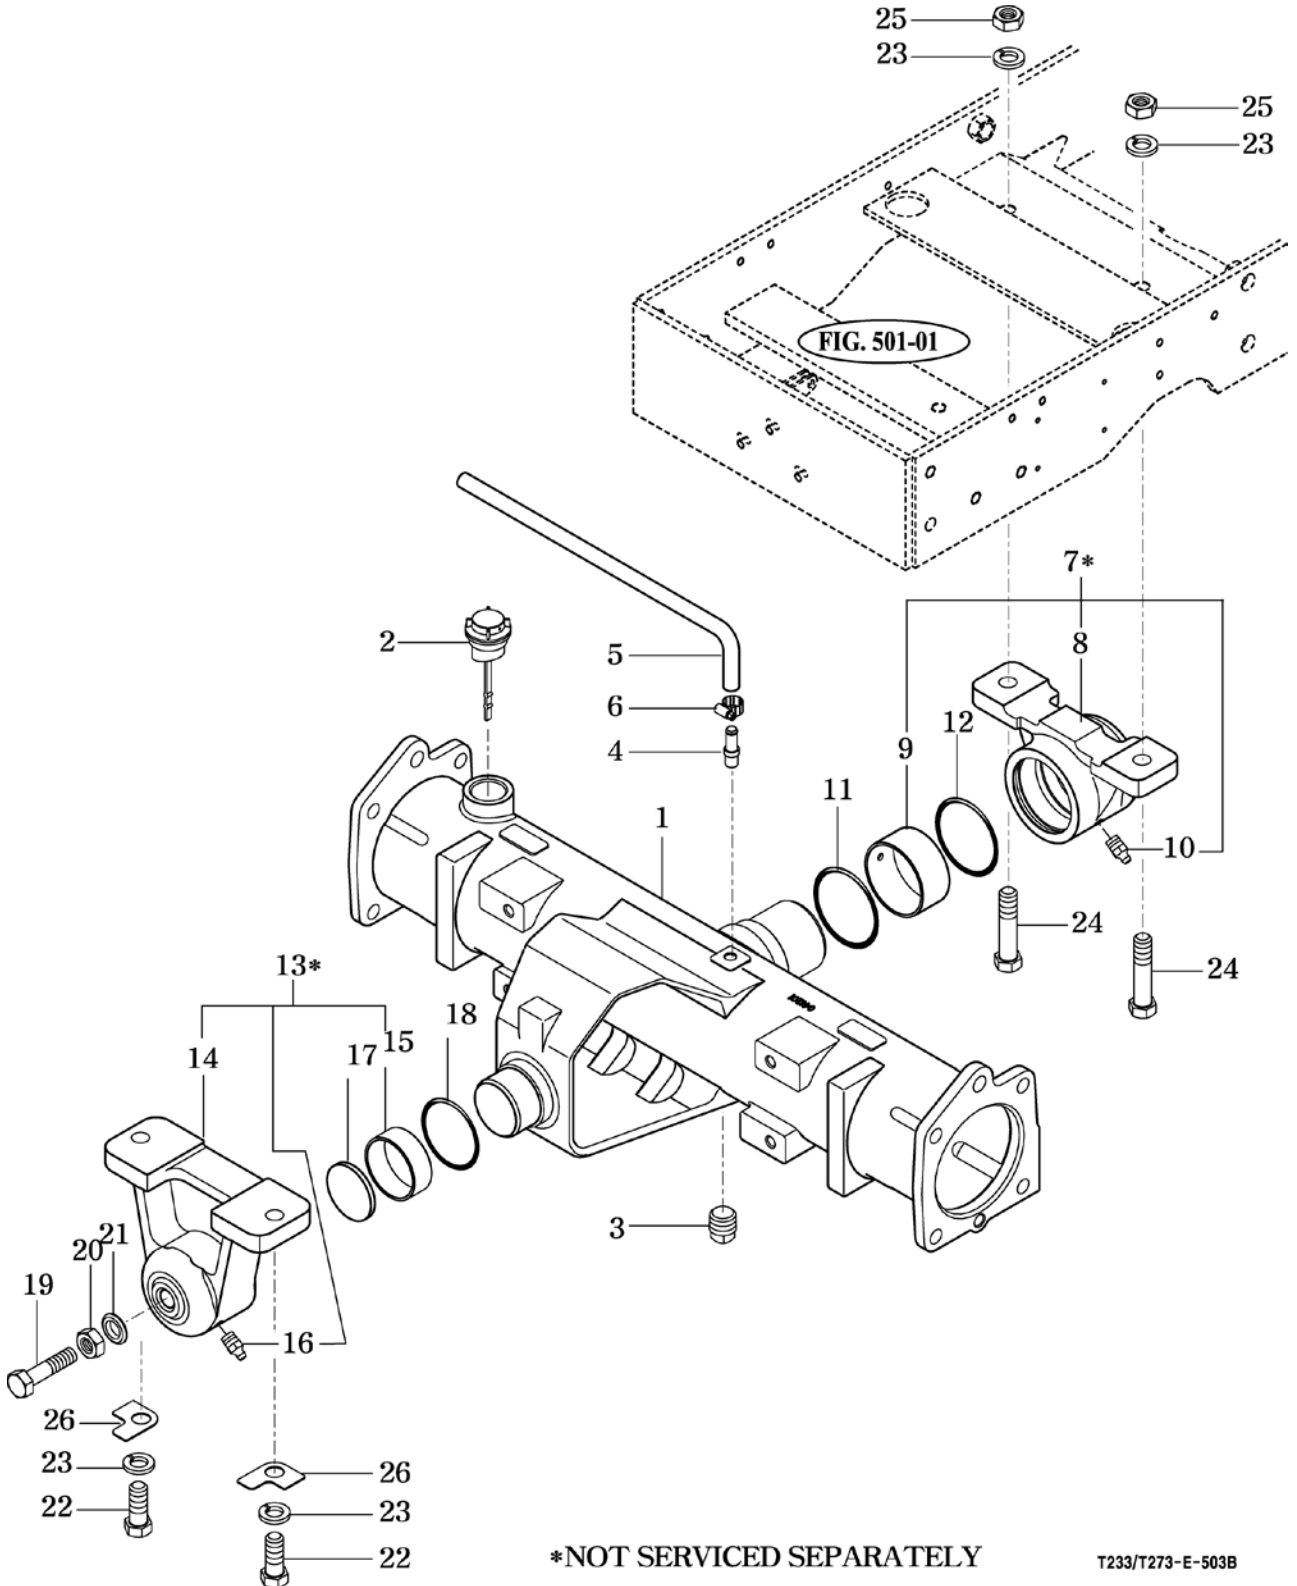


*NOT SERVICED SEPARATELY

T233/T273-E-503B

NOTE

[illegible]

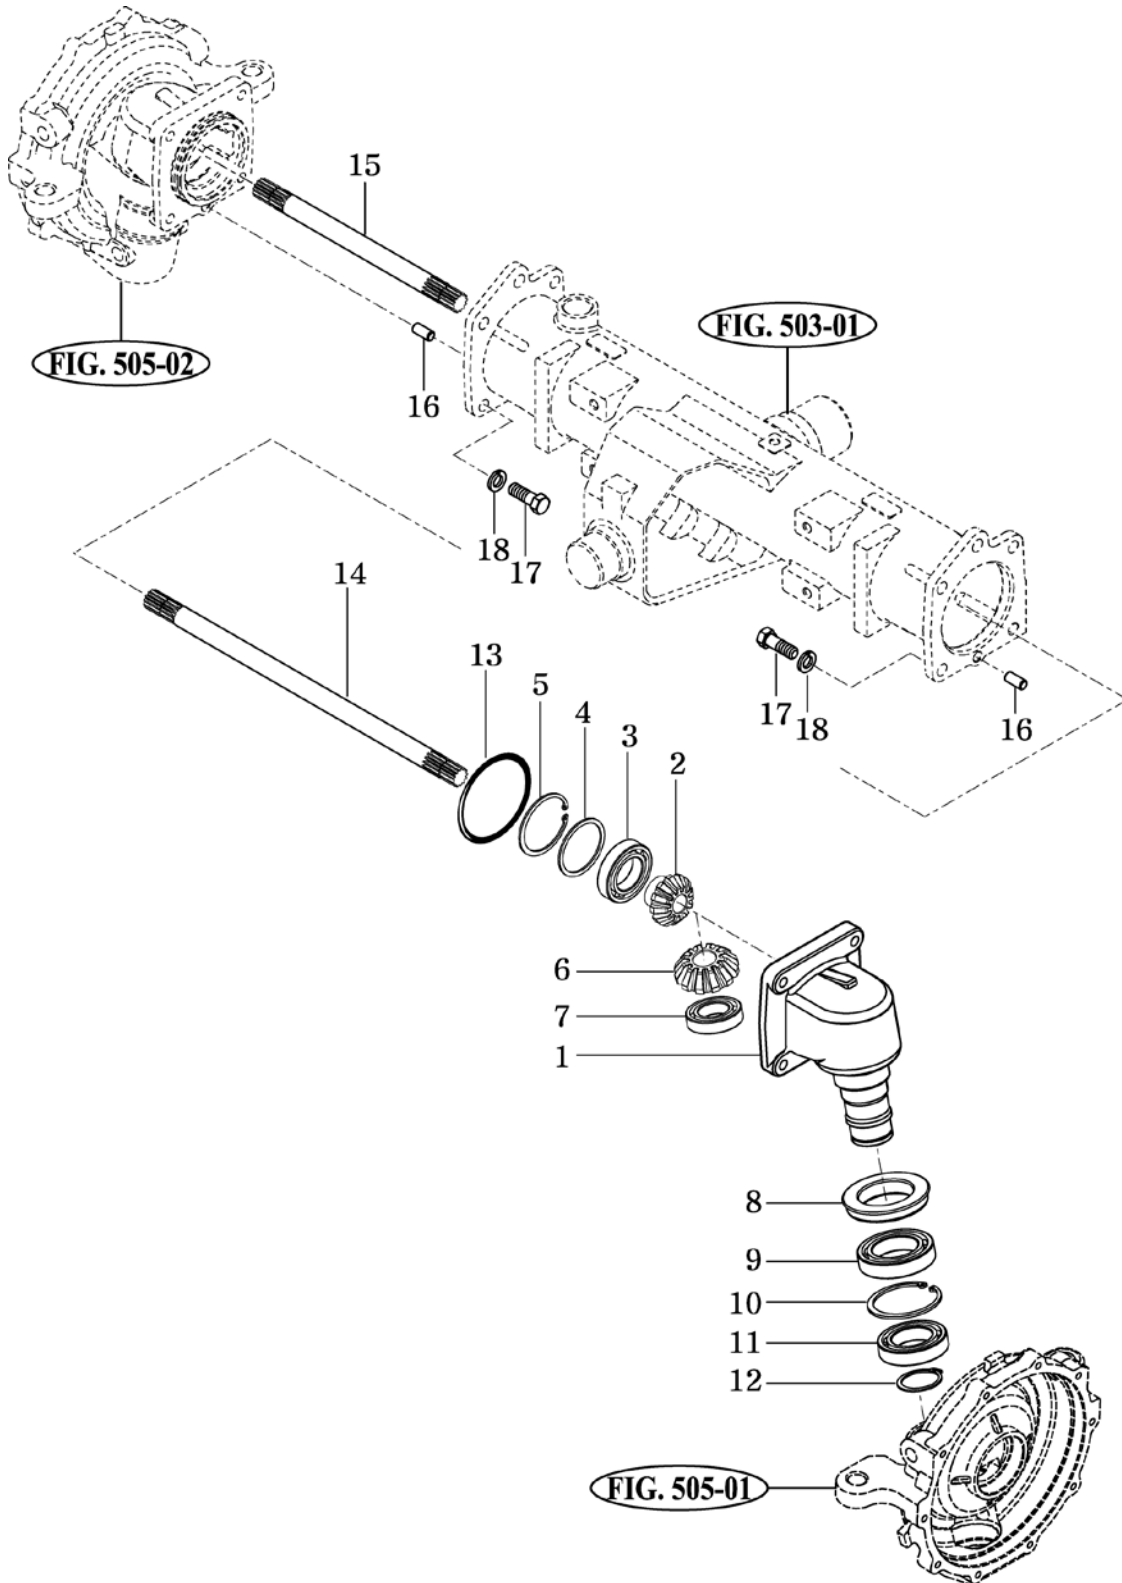

T233/T273-E-504A

NOTE


FIG 505

FRONT GEAR CASE (2)


P1

Year / Month

2006 / 07

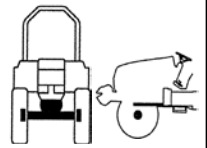

T2334 / T2734

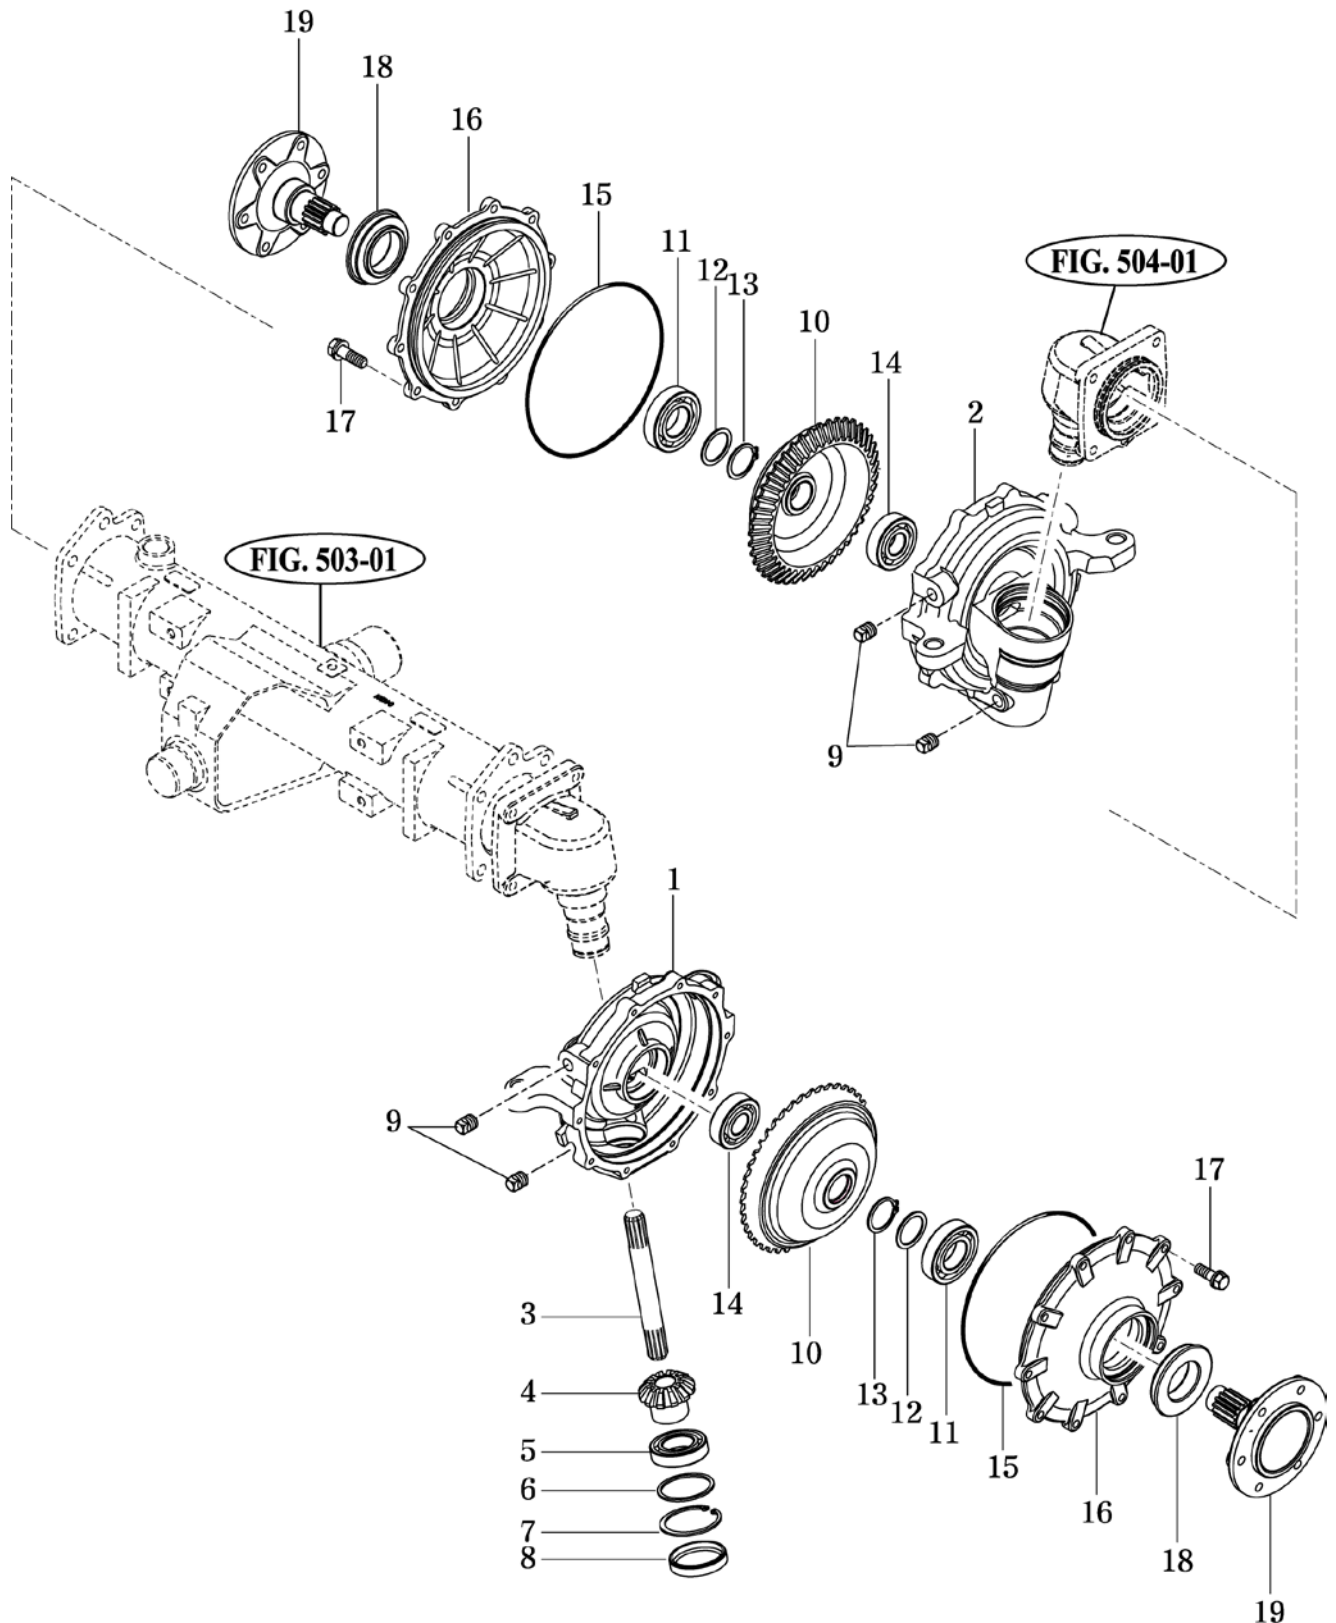

T233/T273-E-505A

NOTE

FIG 602



LIFT ARM

T2334 / T2734

P1

Year / Month

2006 / 07

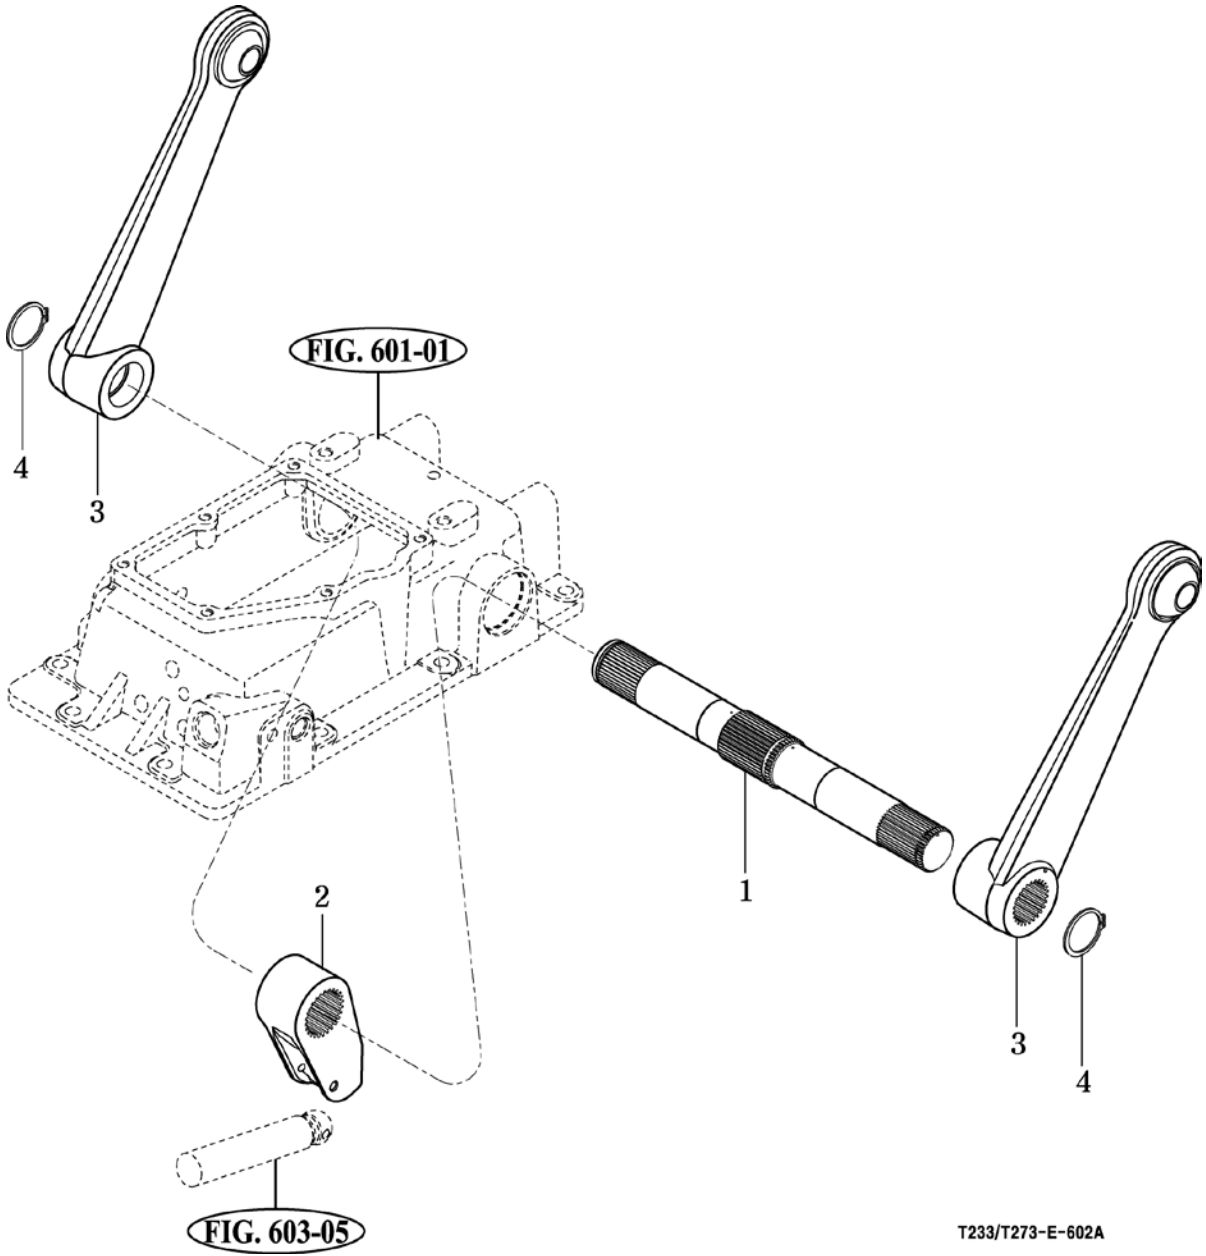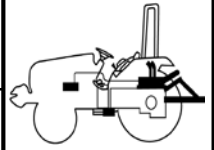

T233/T273-E-602A

NOTE


FIG 603

FLOW CONTROL VALVE


P1

Year / Month

2006 / 07

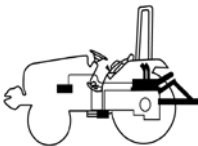

T2334 / T2734

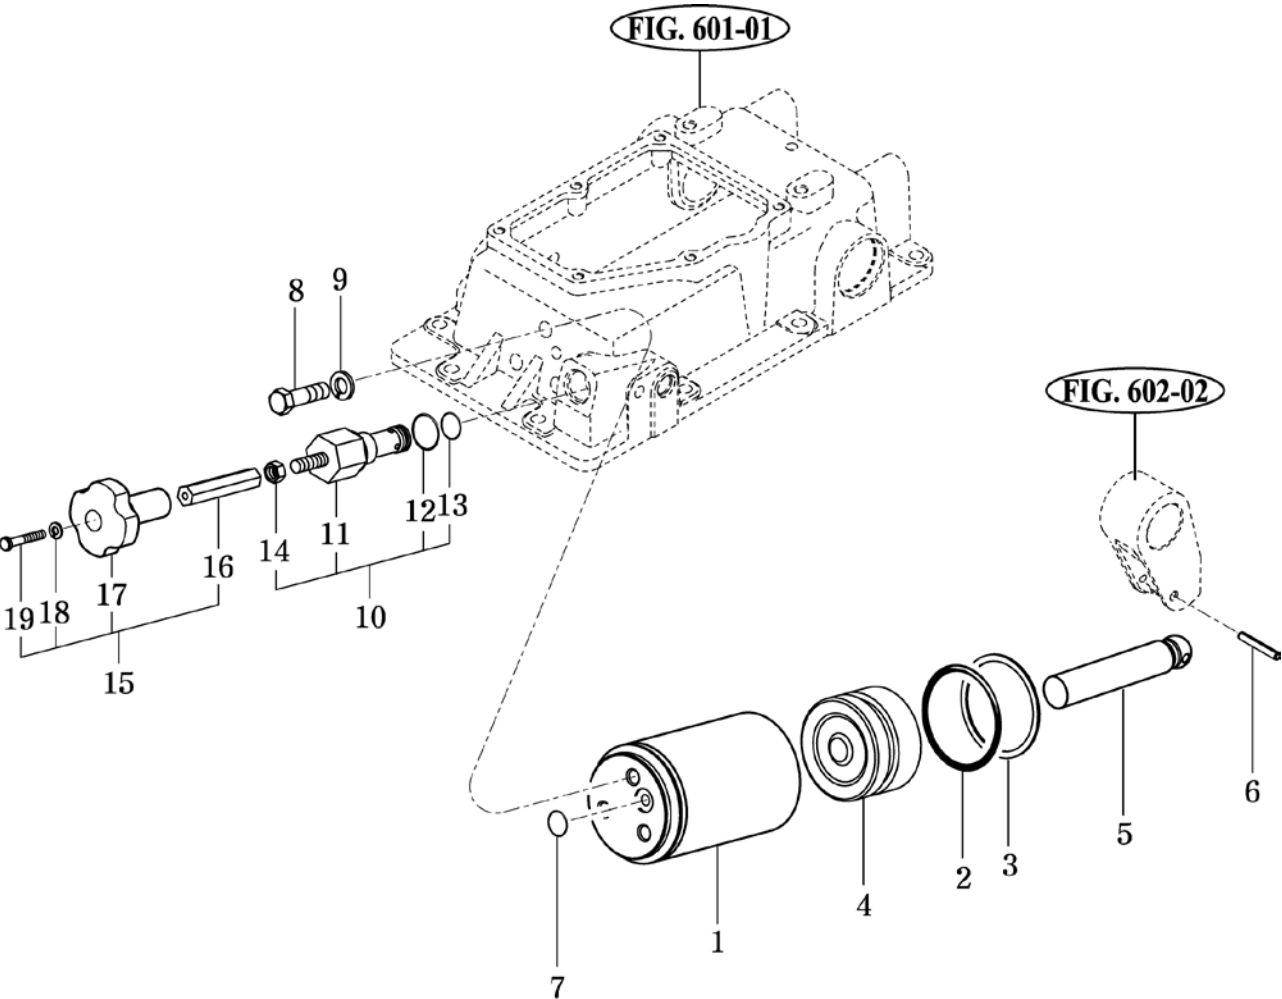

T233/T273-E-603A

NOTE

[illegible]

FIG 604



CONTROL VALVE LINKAGE

T2334 / T2734

P1

Year / Month

2006 / 07

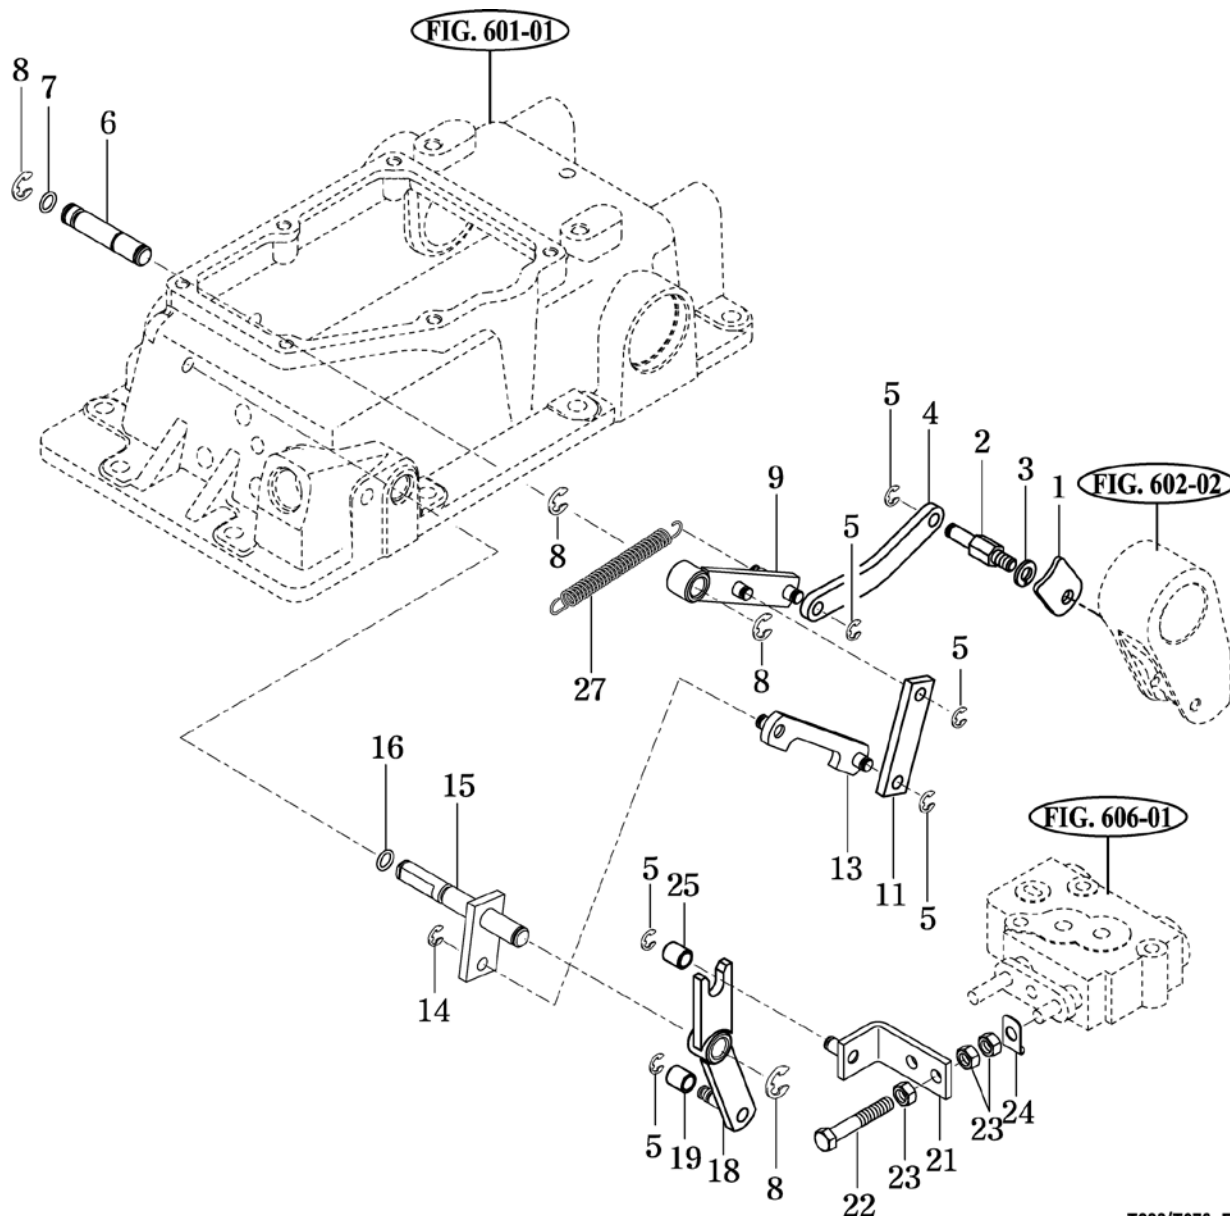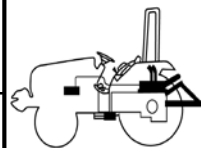

T233/T273-E-604A

NOTE

FIG 605



MAIN CONTROL VALVE

T2334 / T2734

P1

Year / Month

2006 / 07

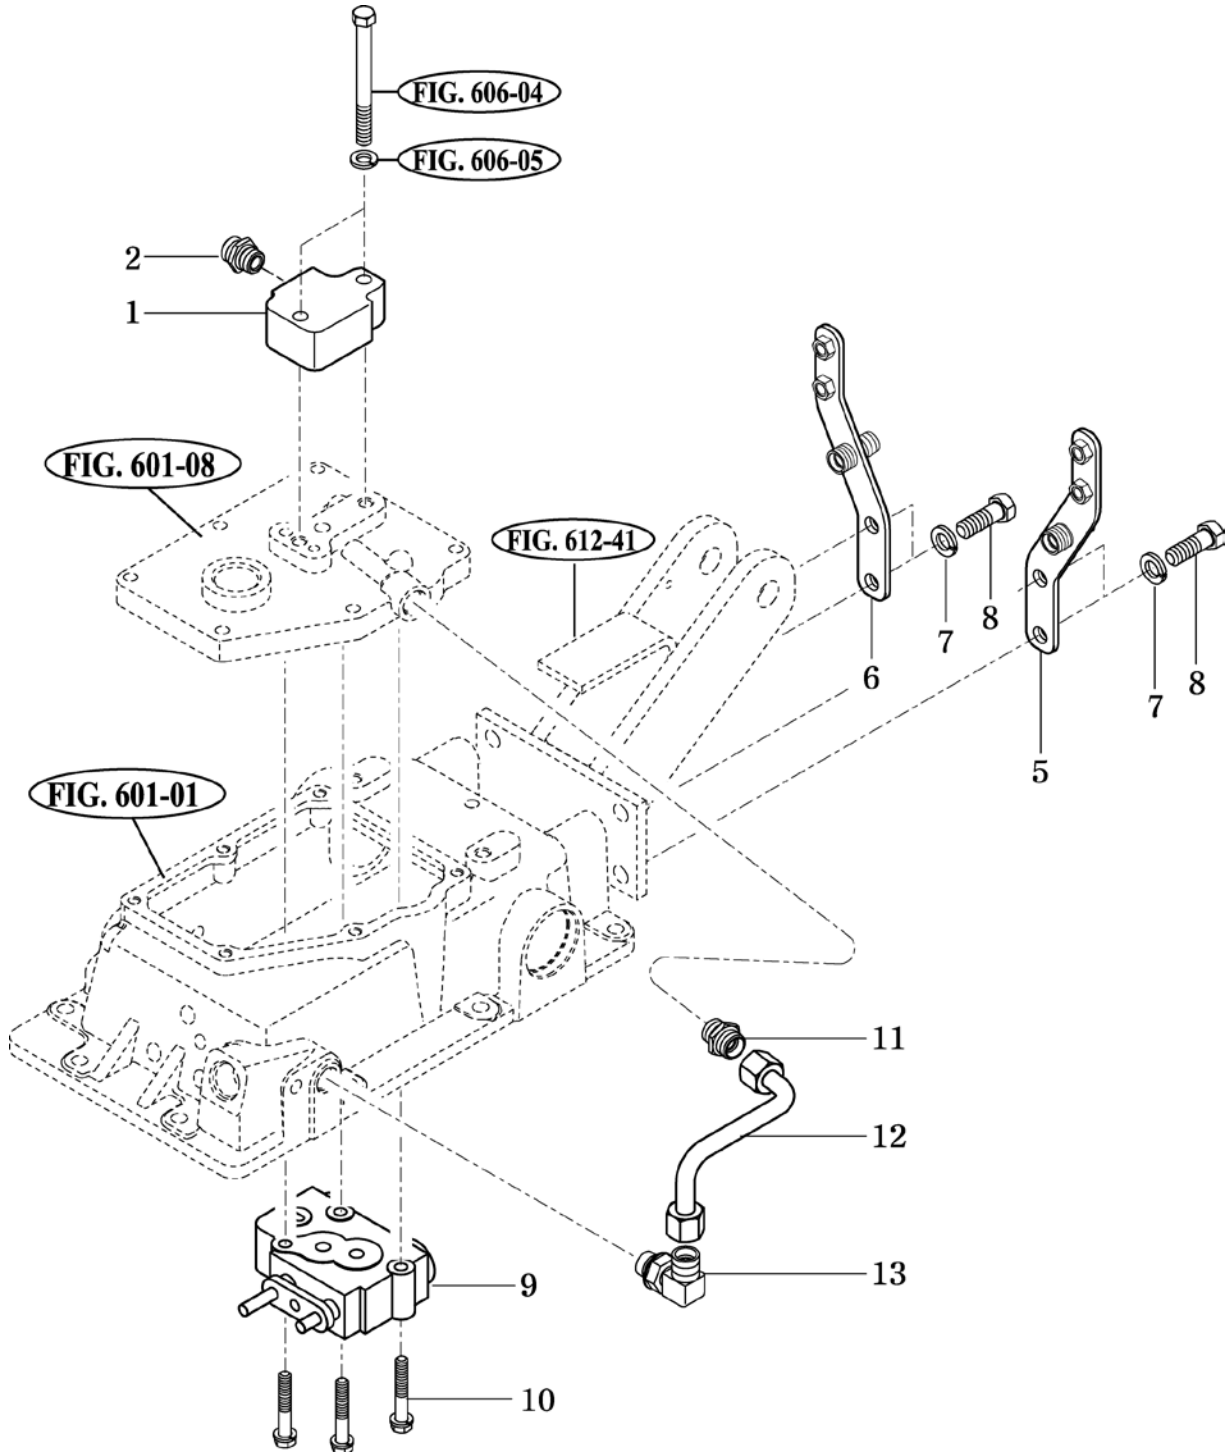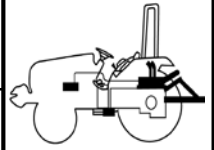

T2334/T2734-E-606B

NOTE

[illegible]

FIG 606



REMOTE CONTROL VALVE

T2334 / T2734

P1

Year / Month

2006 / 07

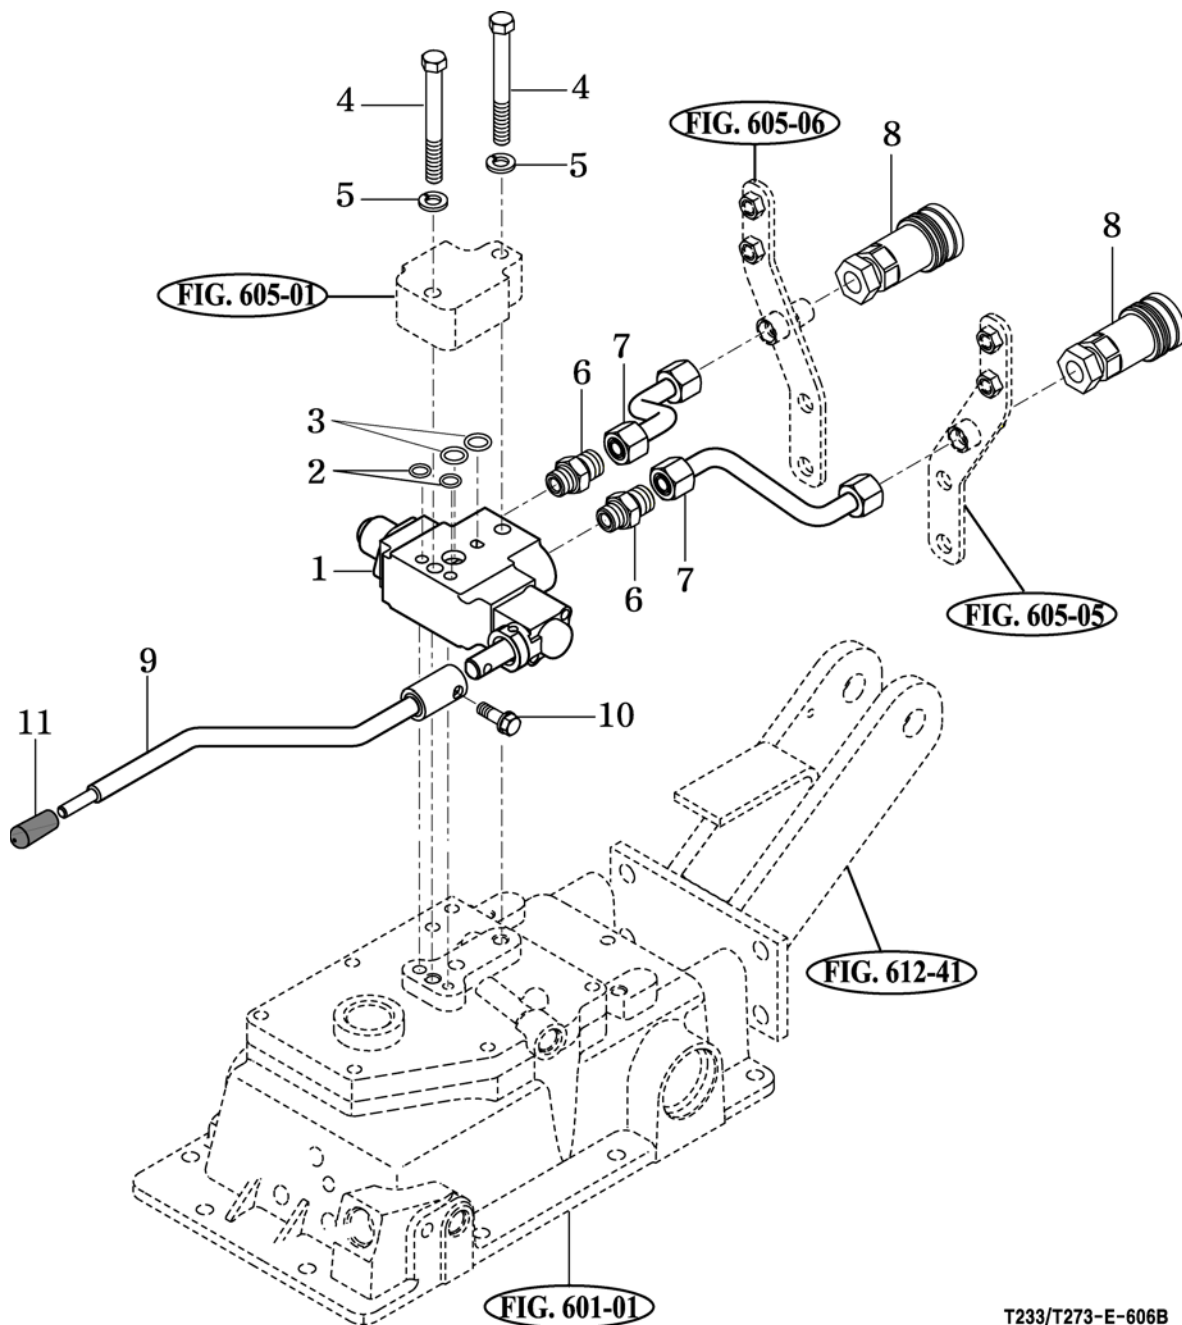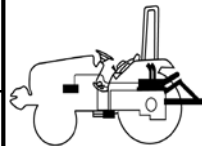

T233/T273-E-606B

NOTE


FIG 607

POSITION LEVER LINKAGE


P1

Year / Month

2006 / 07

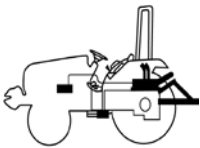

T2334 / T2734

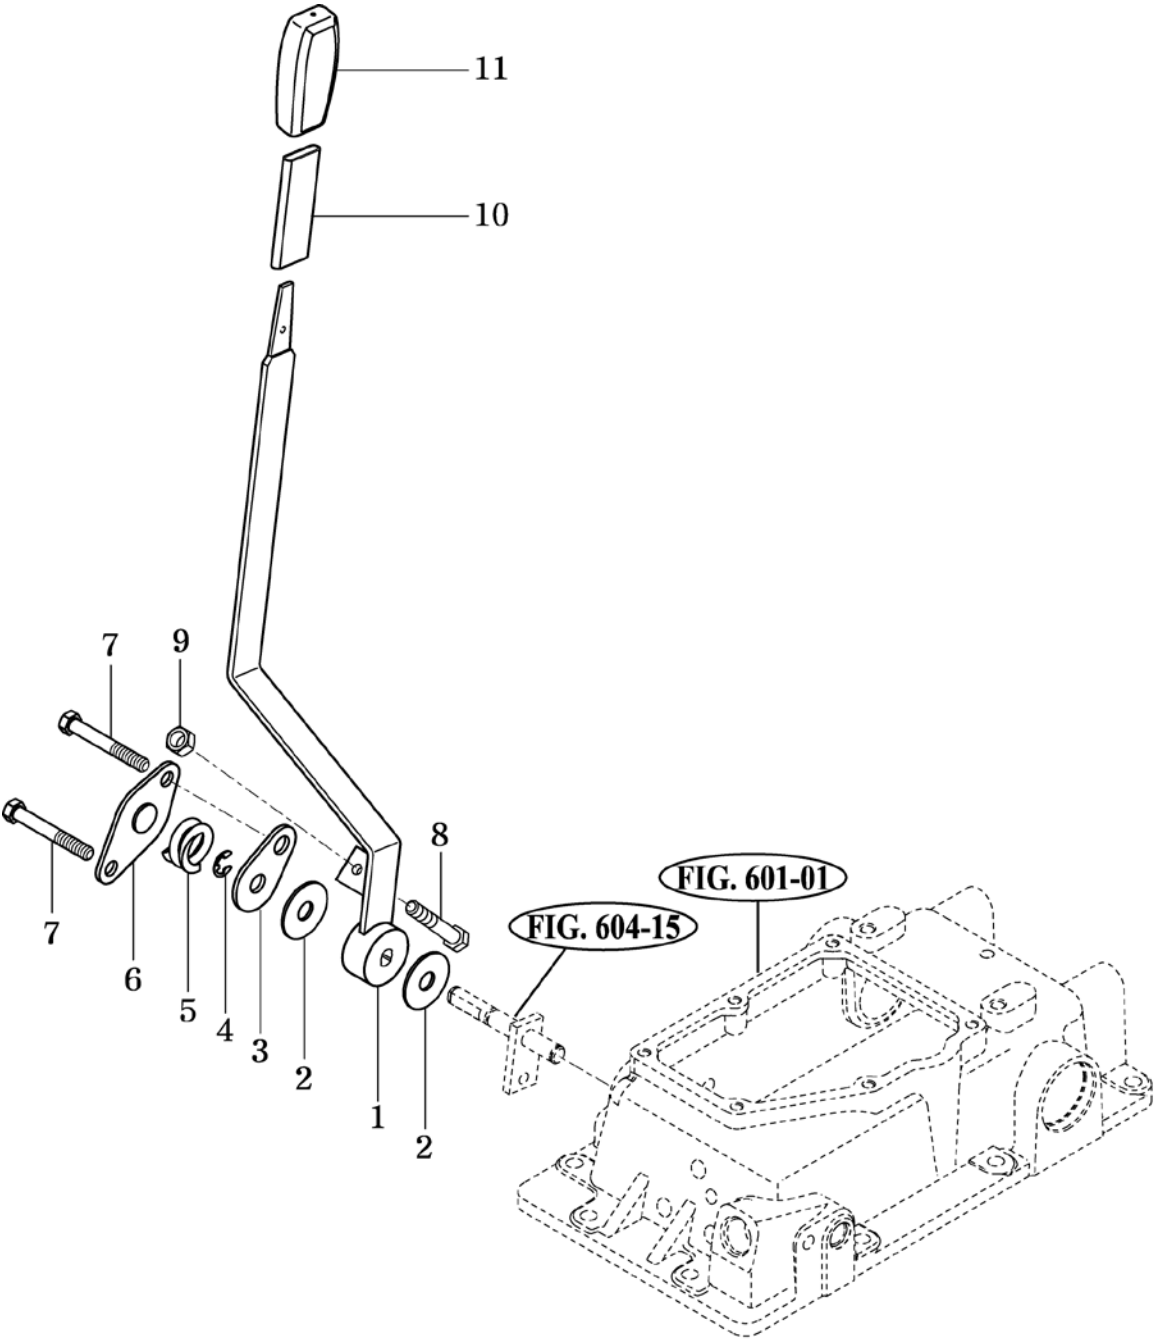

T233/T273-E-607A

NOTE



FIG 608

HYDRAULIC PUMP & GEAR PUMP

P1

Year / Month

2006 / 07

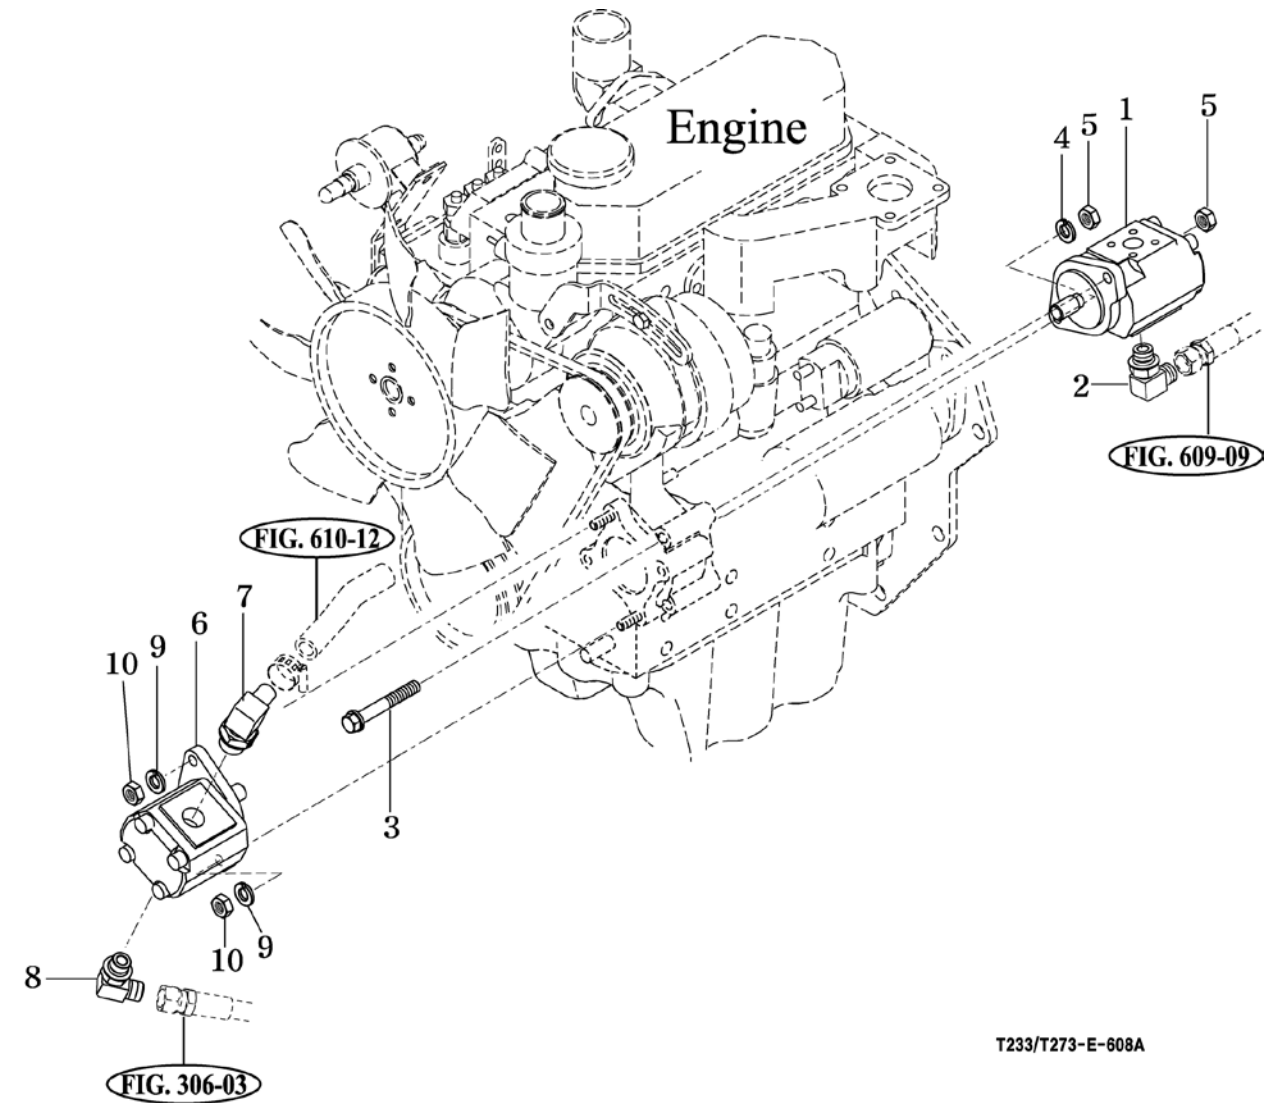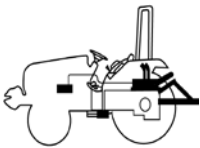

T233/T273-E-608A

NOTE

[illegible]


FIG 609

HYDRAULIC HOSE (1)


P1

Year / Month

2006 / 07

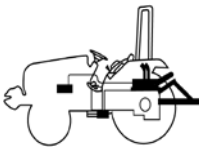

T2334 / T2734

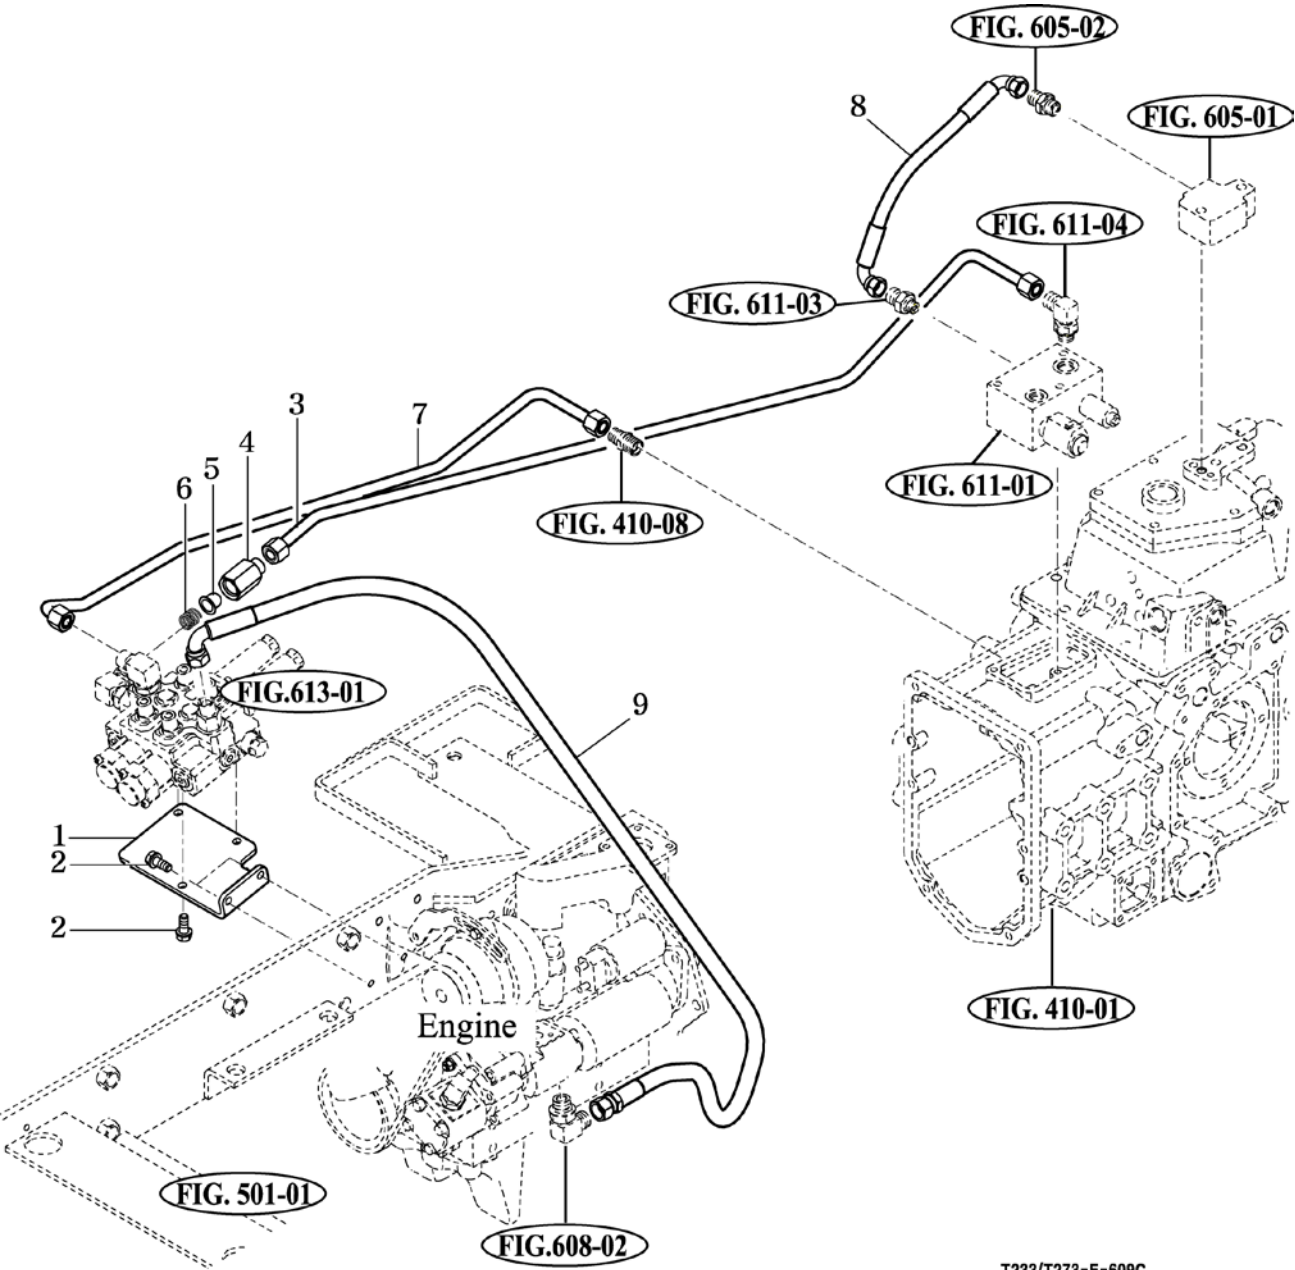

T233/T273-E-609C

NOTE


FIG 610

HYDRAULIC HOSE (2)


P1

Year / Month

2006 / 07

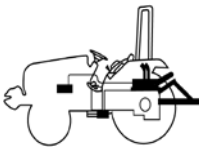

T2334 / T2734

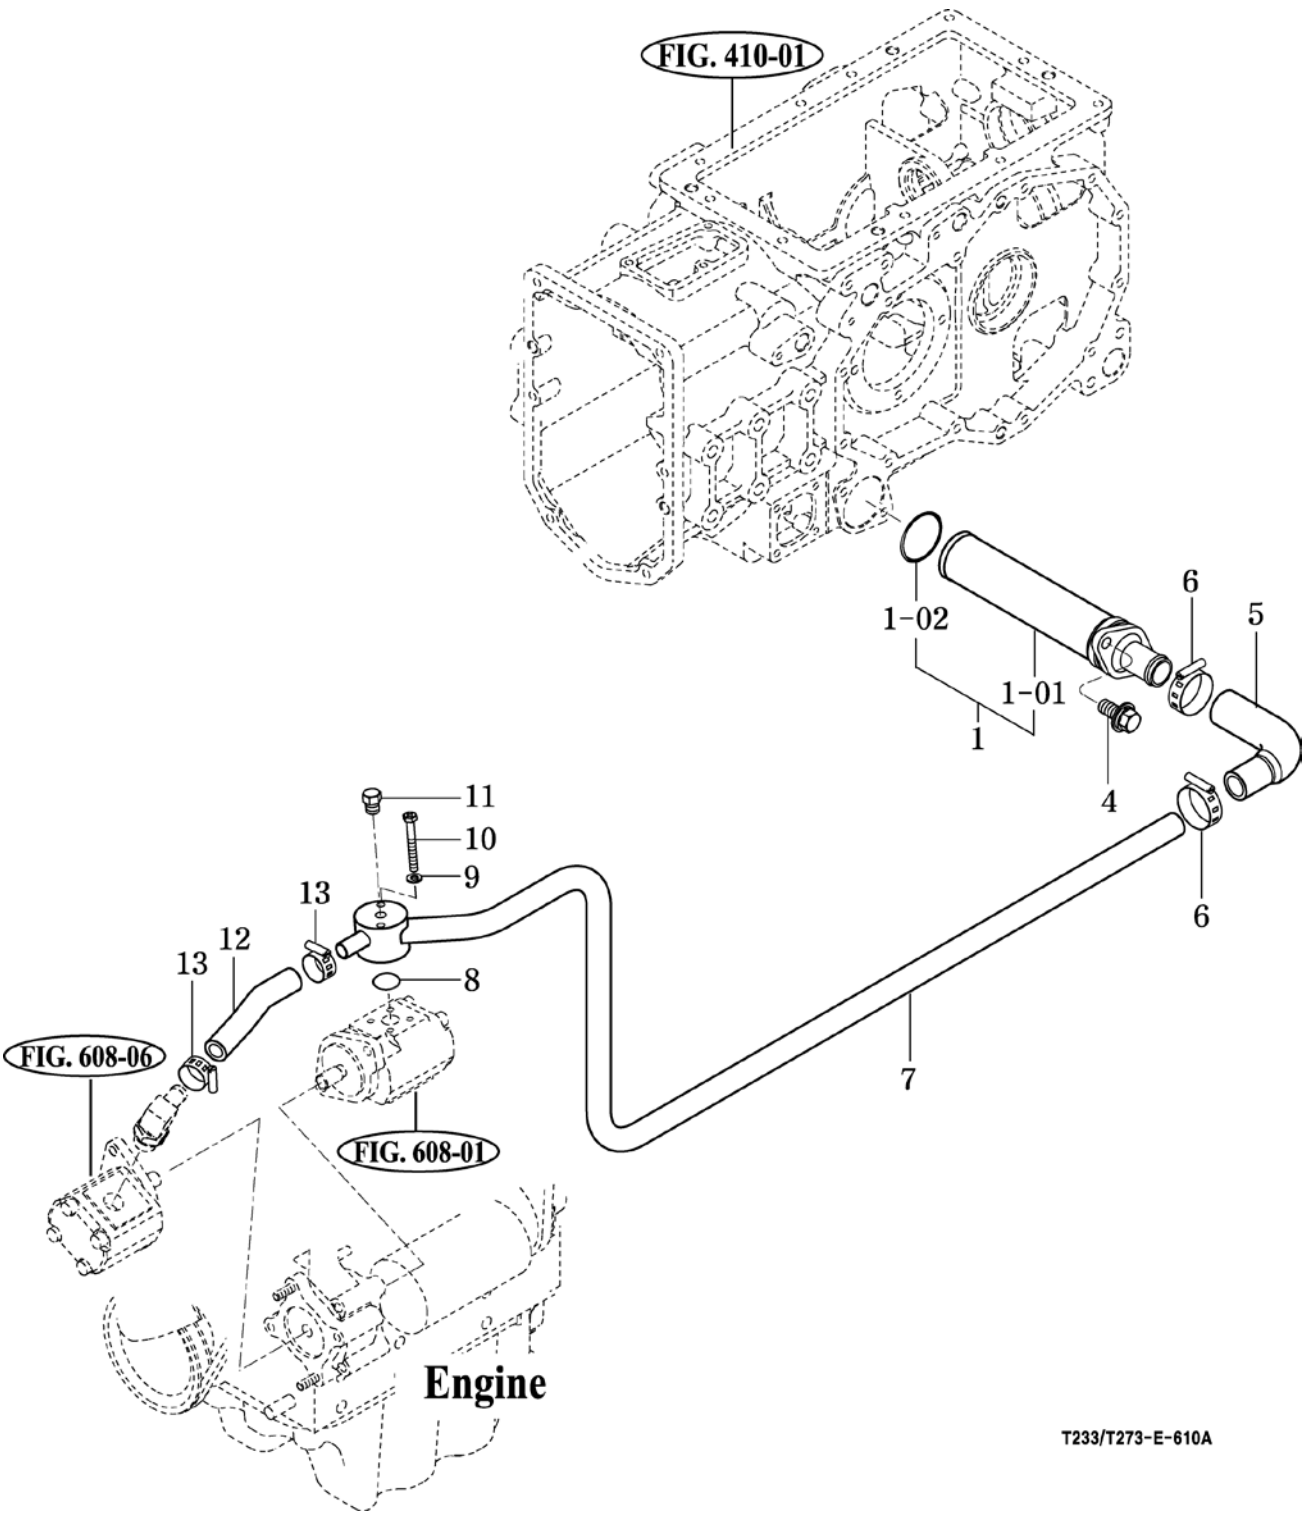

T233/T273-E-610A

NOTE



FIG 611

P.T.O VALVE

P1

Year / Month

2006 / 07

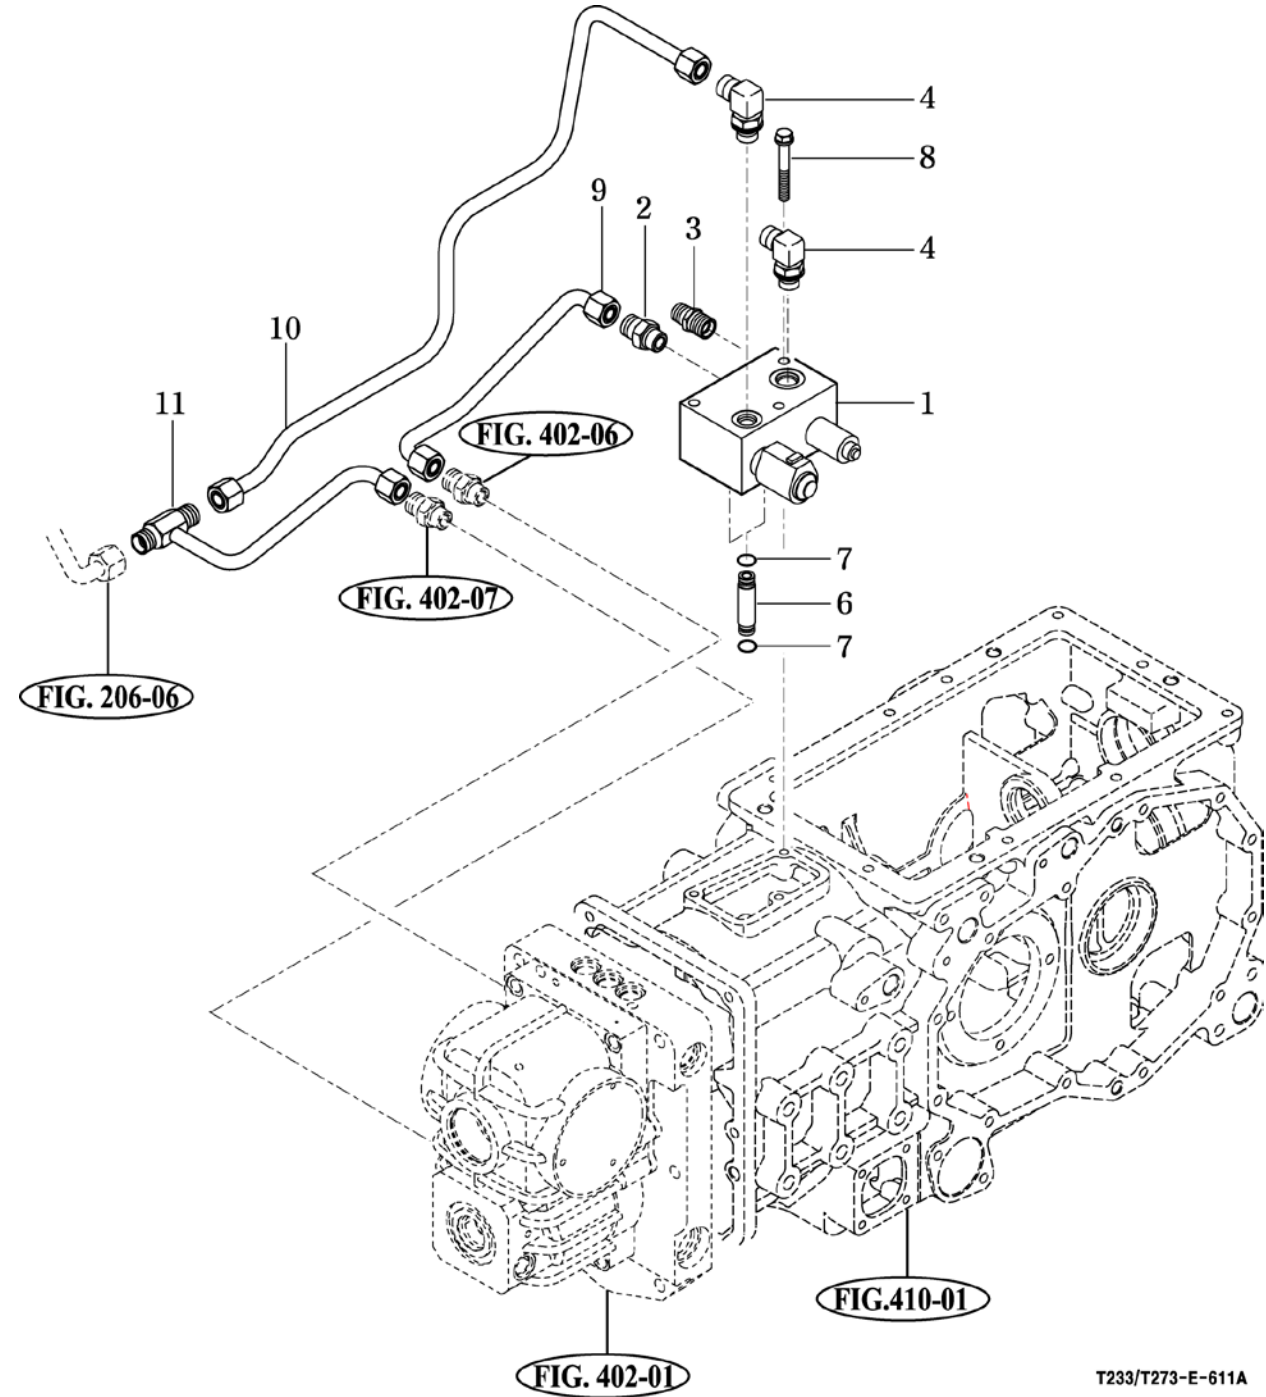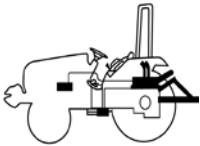

T233/T273-E-611A

NOTE

FIG 612



HITCH & 3-POINT LINKAGE

T2334 / T2734

P1

Year / Month

2006 / 07

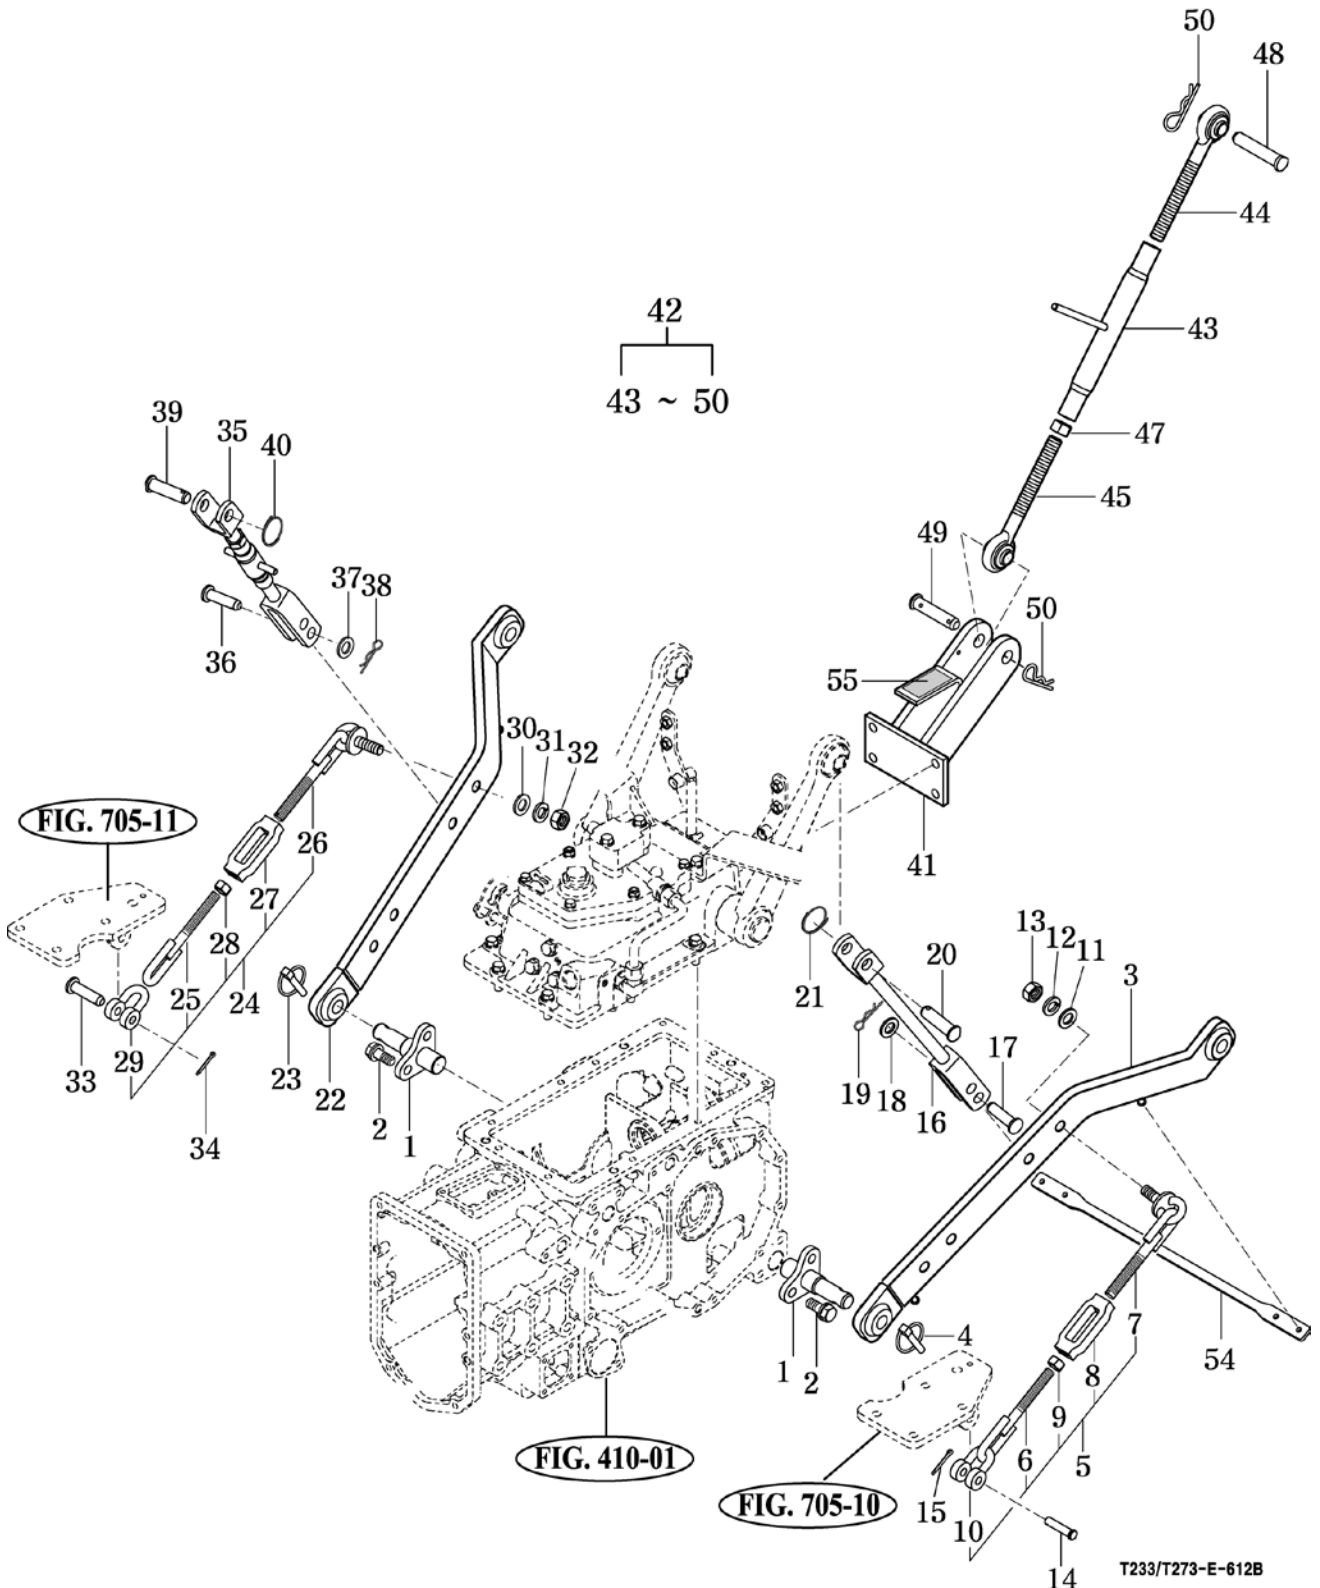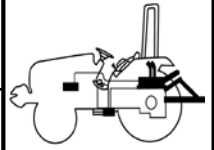

NOTE

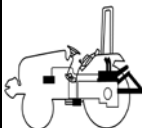
FIG 612		3-POINT LINKAGE				P1	Year / Month	
T2334 / T2734							2006 / 07	
KEY NO.	PART NO.	DESCRIPTION	SPEC.	QTY.		REPAIR	EFFECTIVE DATE	REMARKS
				T2334	T2734			
612 001	13155205100	PIN COMP, 115		2	2			
612 002	V2173612030	BOLT, HEX/S	M12X30	4	4			
612 003	13155202202	LOWER LINK COMP, LH		1	1			
612 004	14215020020	PIN, LINK		1	1			
612 005	13155202501	CHAIN ASSY, CHECK		1	1	C		
612 006	14585142600	.CHAIN COMP, RH CHECK		1	1			
612 007	14725142700	.CHAIN COMP, LH CHECK		1	1			
612 008	13155202511	.TURNBUCKLE		1	1			
612 009	V3042600140	.NUT, HEX/2	M14	1	1			
612 010	14585142520	.SHACKLE, CHECK CHAIN		1	1			
612 011	V4111600160	WASHER, PLAIN	M16	1	1			
612 012	V4011600160	WASHER, SPRING	M16	1	1			
612 013	V3013600160	NUT, HEX/2	M16	1	1			
612 014	79636110030	PIN, 12X48		1	1			
612 015	V5001930020	PIN, SPLIT	3X20	1	1			
612 016	13155202401	LIFT ROD COMP, LH		1	1			
612 017	79636130050	PIN, 16X60		1	1			
612 018	V4111600160	WASHER, PLAIN	M16	1	1			
612 019	13059310030	PIN		1	1			
612 020	16705020050	PIN, 19X69		1	1			
612 021	16735240060	SPRING		1	1			
612 022	13155203102	LOWER LINK COMP, RH		1	1			
612 023	14215020020	PIN, LINK		1	1			
612 024	13155202501	CHAIN ASSY, CHECK		1	1	C		
612 025	14585142600	.CHAIN COMP, RH CHECK		1	1			
612 026	14725142700	.CHAIN COMP, LH CHECK		1	1			
612 027	13155202511	.TURNBUCKLE		1	1			
612 028	V3042600140	.NUT, HEX/2	M14	1	1			
612 029	14585142520	.SHACKLE, CHECK CHAIN		1	1			
612 030	V4111600160	WASHER, PLAIN	M16	1	1			
612 031	V4011600160	WASHER, SPRING	M16	1	1			
612 032	V3013600160	NUT, HEX/2	M16	1	1			
612 033	79636110030	PIN, 12X48		1	1			
612 034	V5001930020	PIN, SPLIT	3X20	1	1			
612 035	13155203201	LIFT ROD ASSY, RH		1	1			
612 036	79636130050	PIN, 16X60		1	1			
612 037	V4111600160	WASHER, PLAIN	M16	1	1			
612 038	13059310030	PIN		1	1			
612 039	16705020050	PIN, 19X69		1	1			
612 040	16735240060	SPRING		1	1			
612 041	13155204104	BRACKET COMP, TOP LINK		1	1			
612 042	13155206002	TOP LINK ASSY		1	1			
612 043	13155206111	.TURN BUCKLE		1	1			
612 044	13155206121	.JOINT, LH		1	1			
612 045	13155206131	.JOINT, RH		1	1			
612 047	V3042600200	.NUT, HEX/2	M20	1	1			
612 048	15645220020	.PIN, 19X95		1	1			
612 049	15645220011	.PIN, 19X86		1	1			
NOTE								

FIG 612



HITCH & 3-POINT LINKAGE

T2334 / T2734

P2

Year / Month

2006 / 07

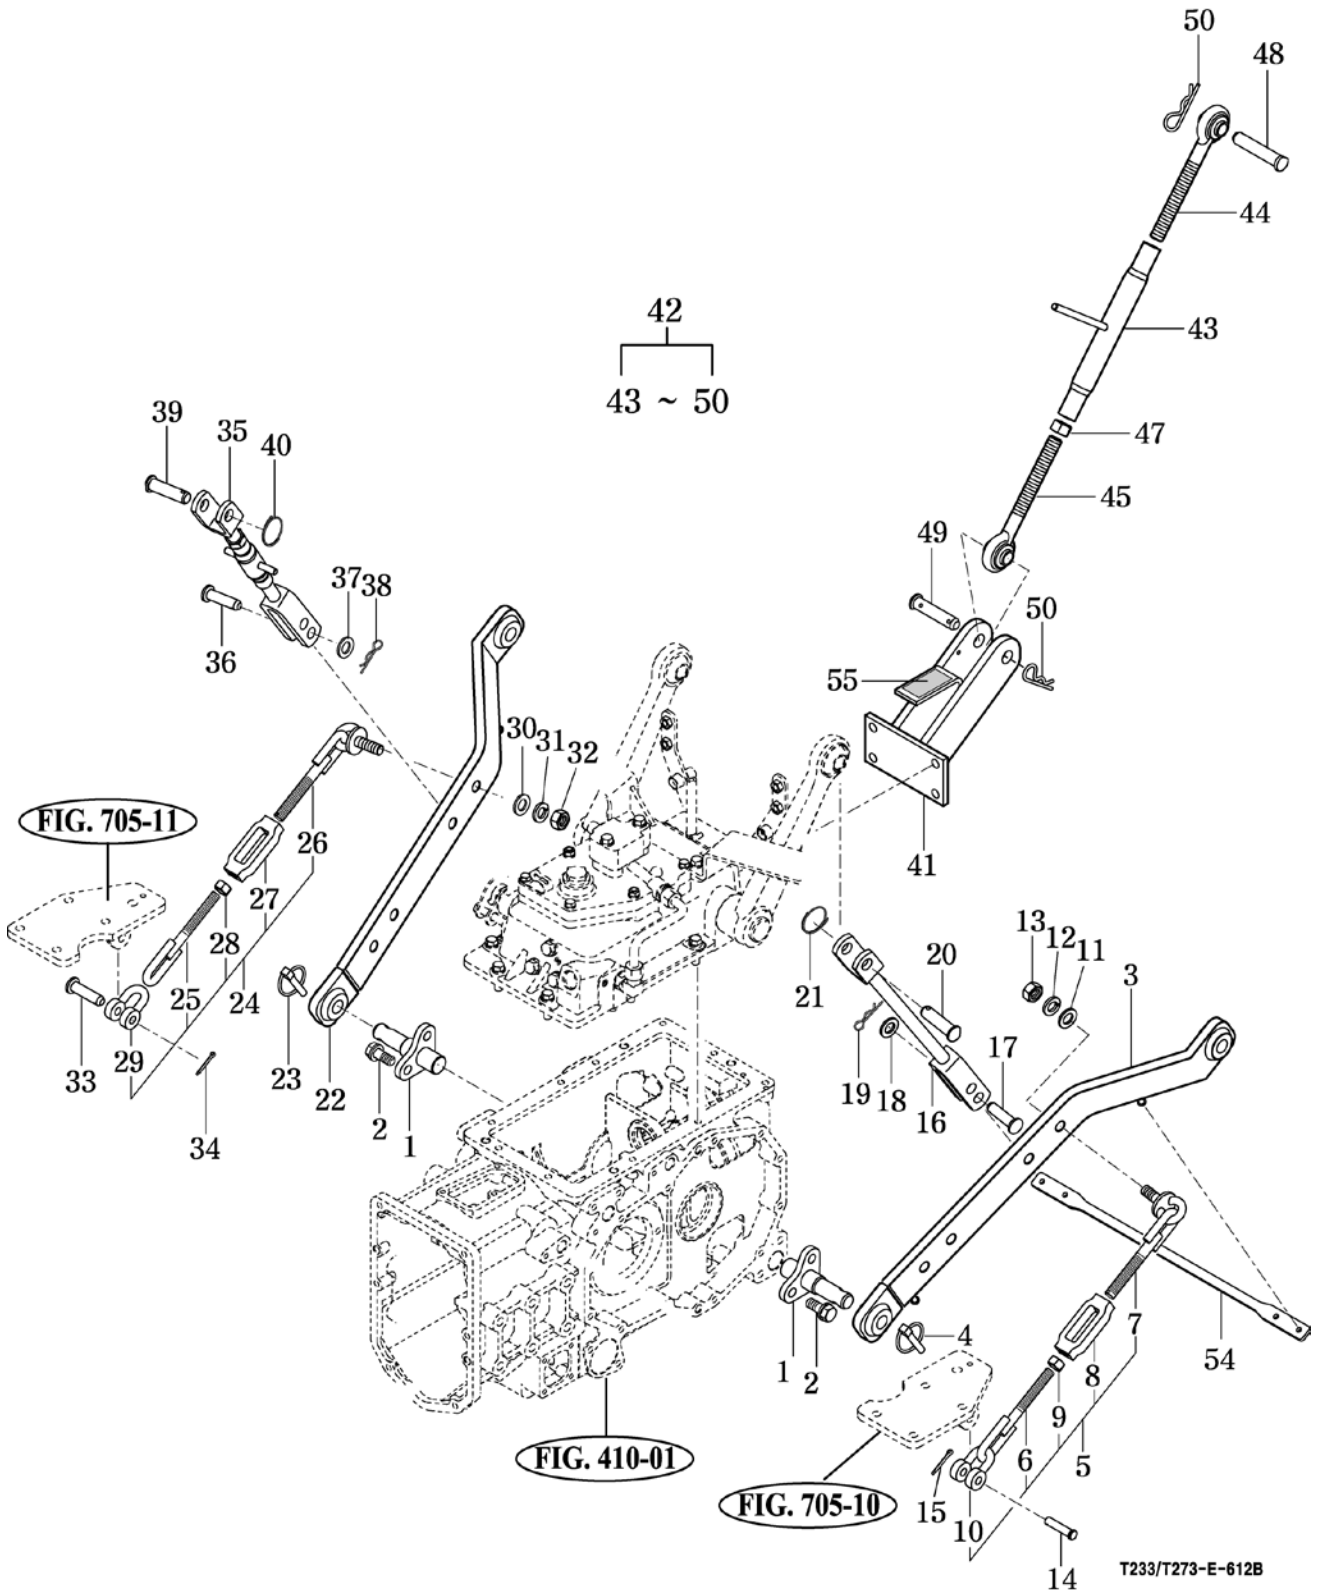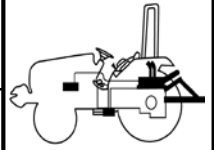

NOTE


FIG 613

JOYSTICK LEVER


P1

Year / Month

2006 / 07

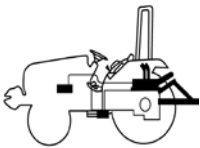

T2334 / T2734

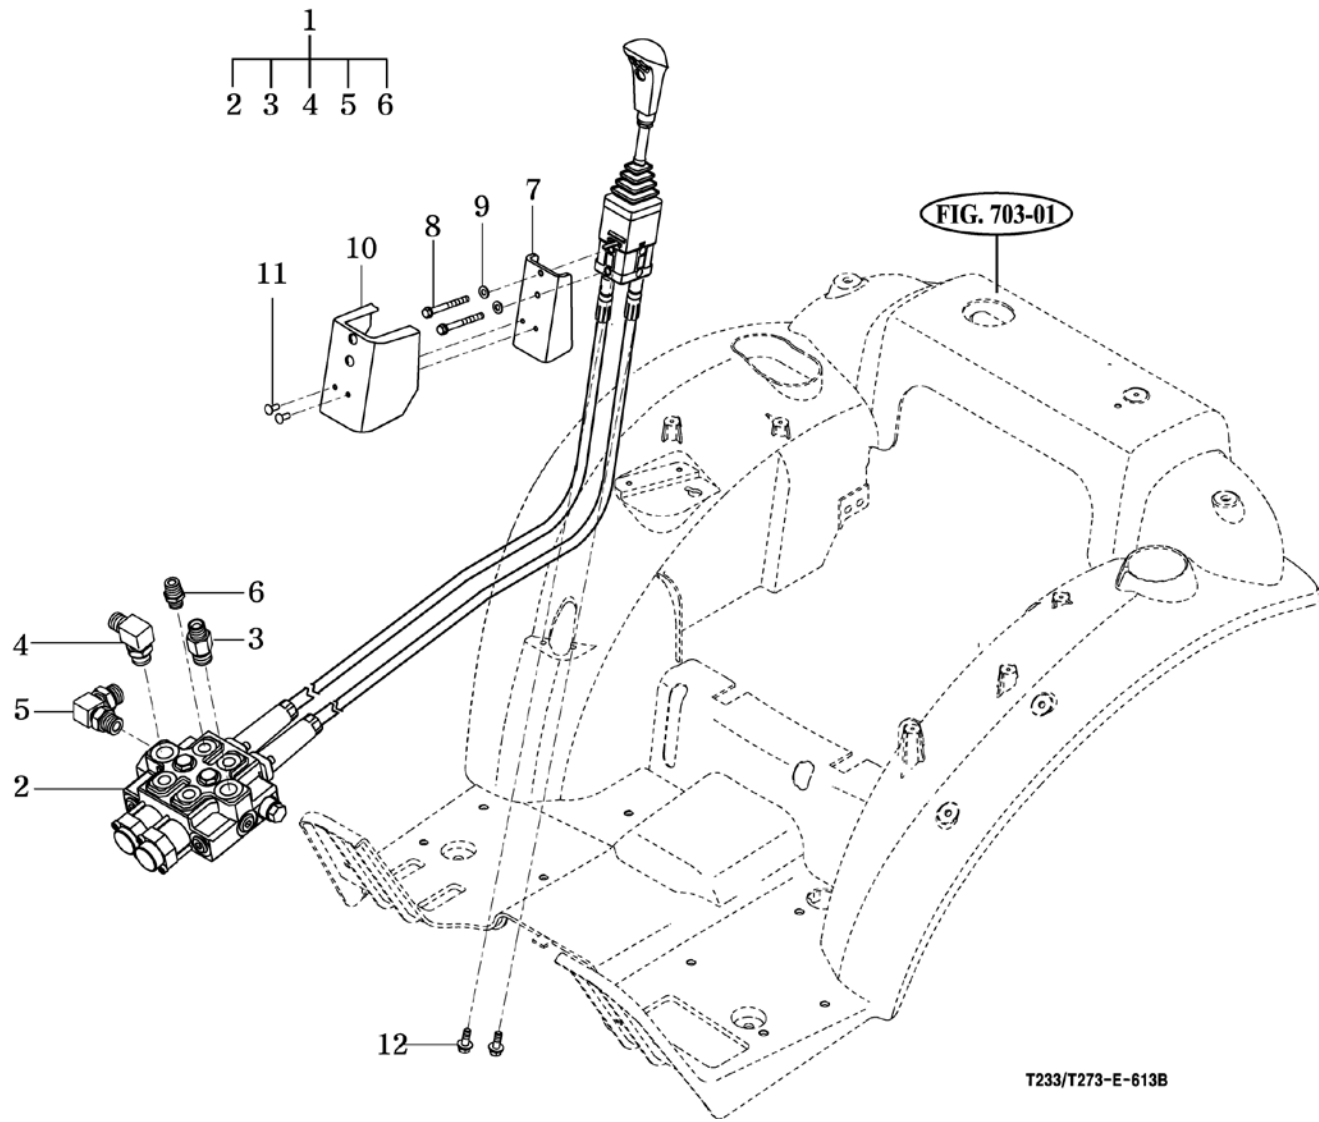

T233/T273-E-613B

NOTE

FIG 614



T2334 / T2734

HITCH & COVER

P1

Year / Month

2006 / 07

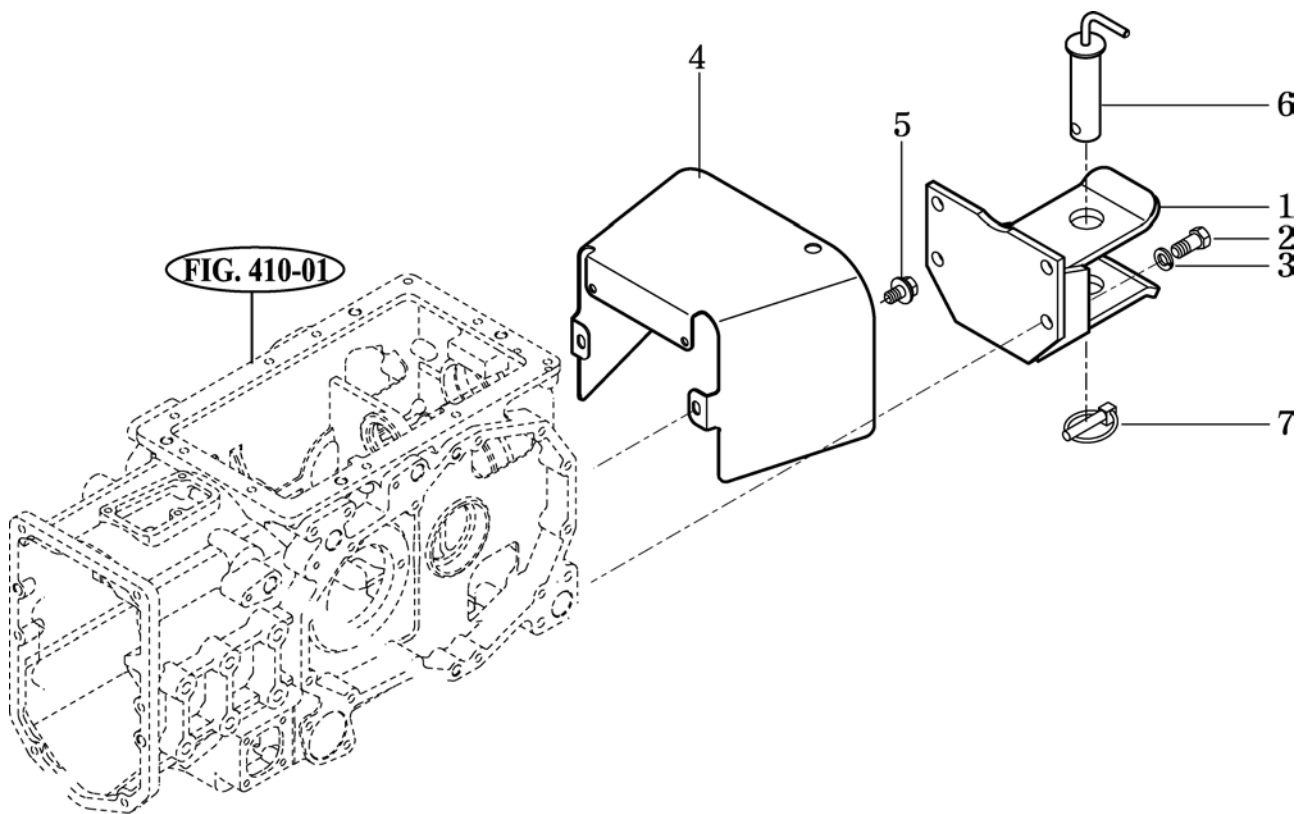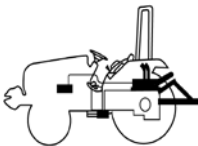

323/327-E-614A

NOTE


FIG 701

BONNET


P1

Year / Month

2006 / 07

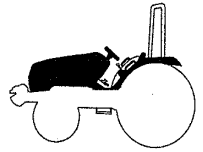

T2334 / T2734

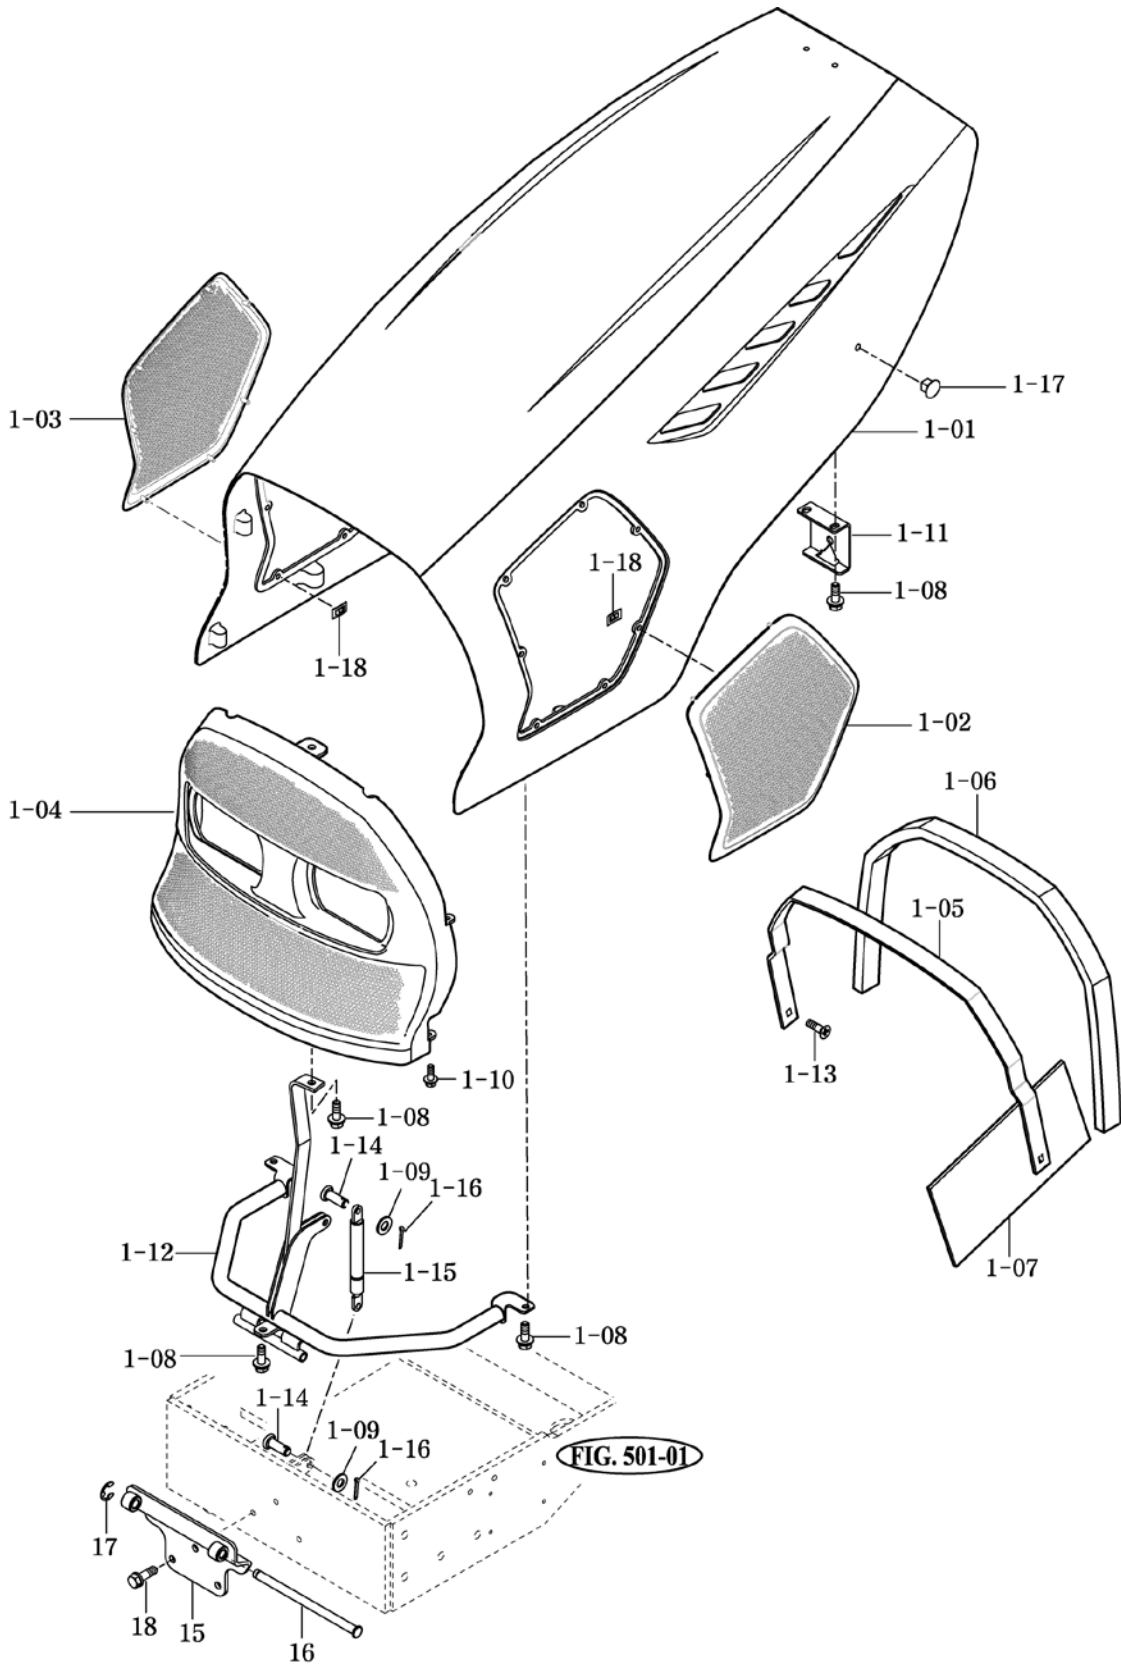

NOTE


FIG 702

DASH PANEL


P1

Year / Month

2006 / 07

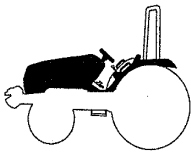

T2334 / T2734

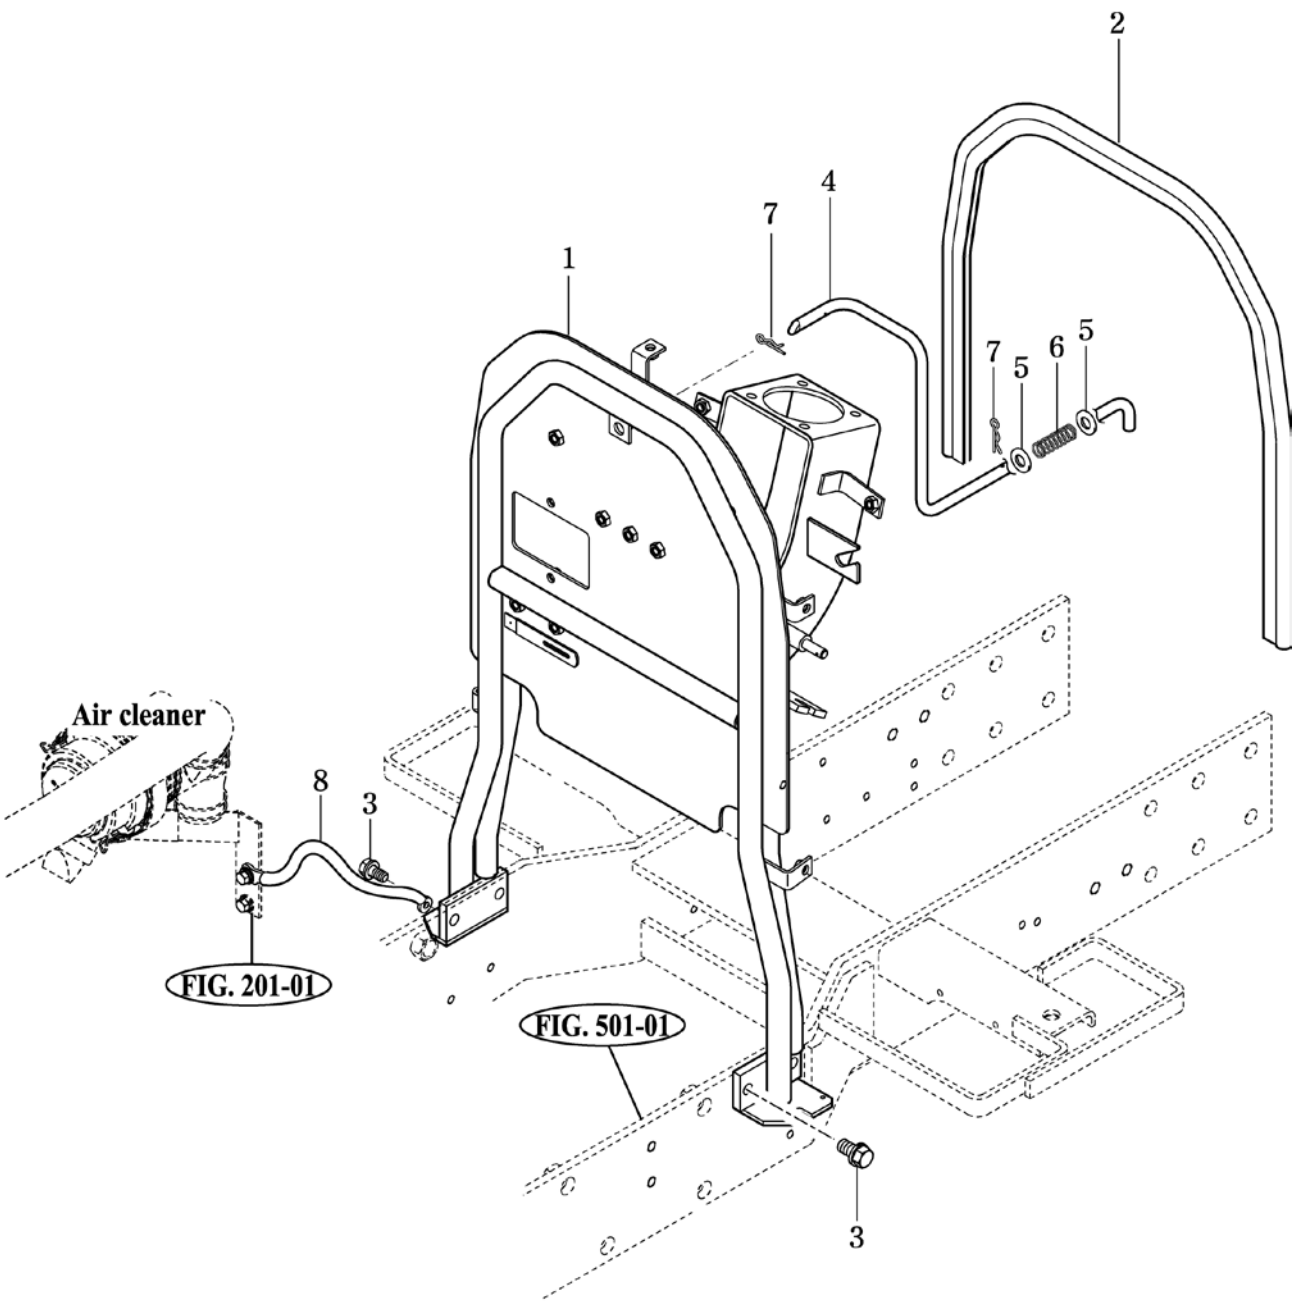

T2334/T2734-E-702B

NOTE


FIG 703

FLOOR


P1

Year / Month

2006 / 07

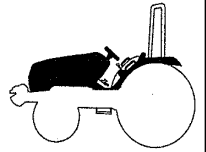

T2334 / T2734

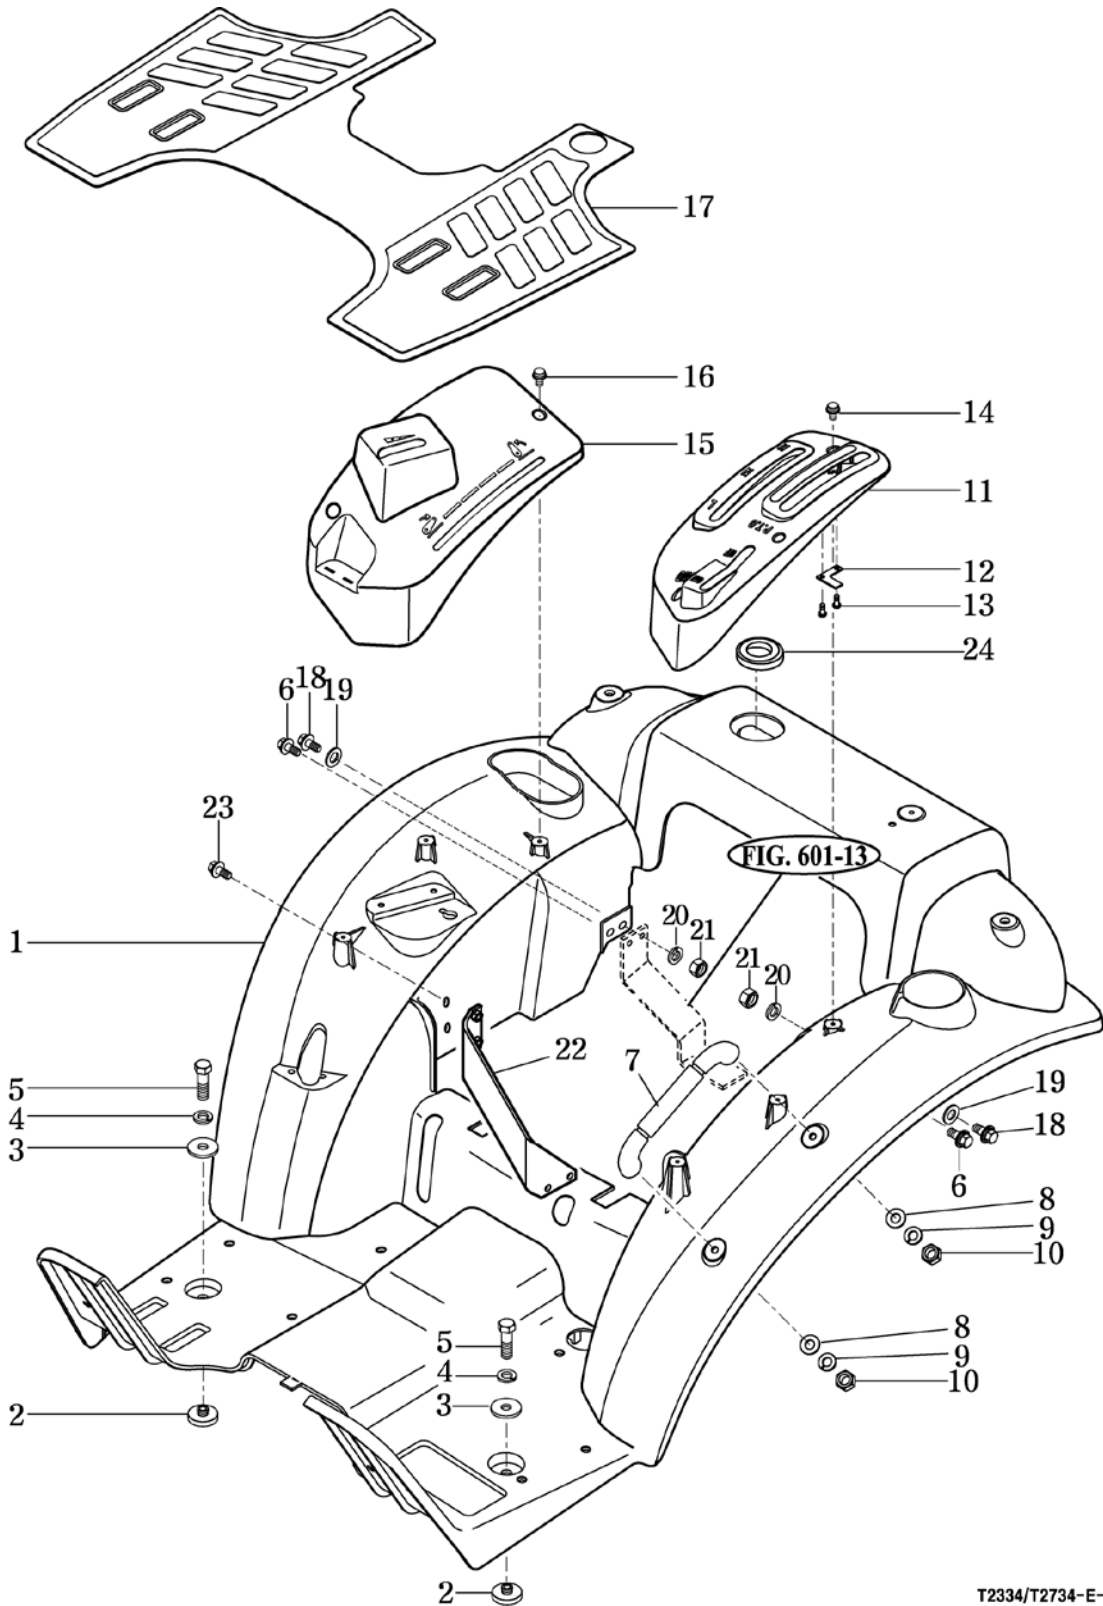

T2334/T2734-E-703A

NOTE


FIG 704

SEAT

P1

Year / Month

2006 / 07

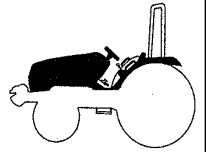

T2334 / T2734

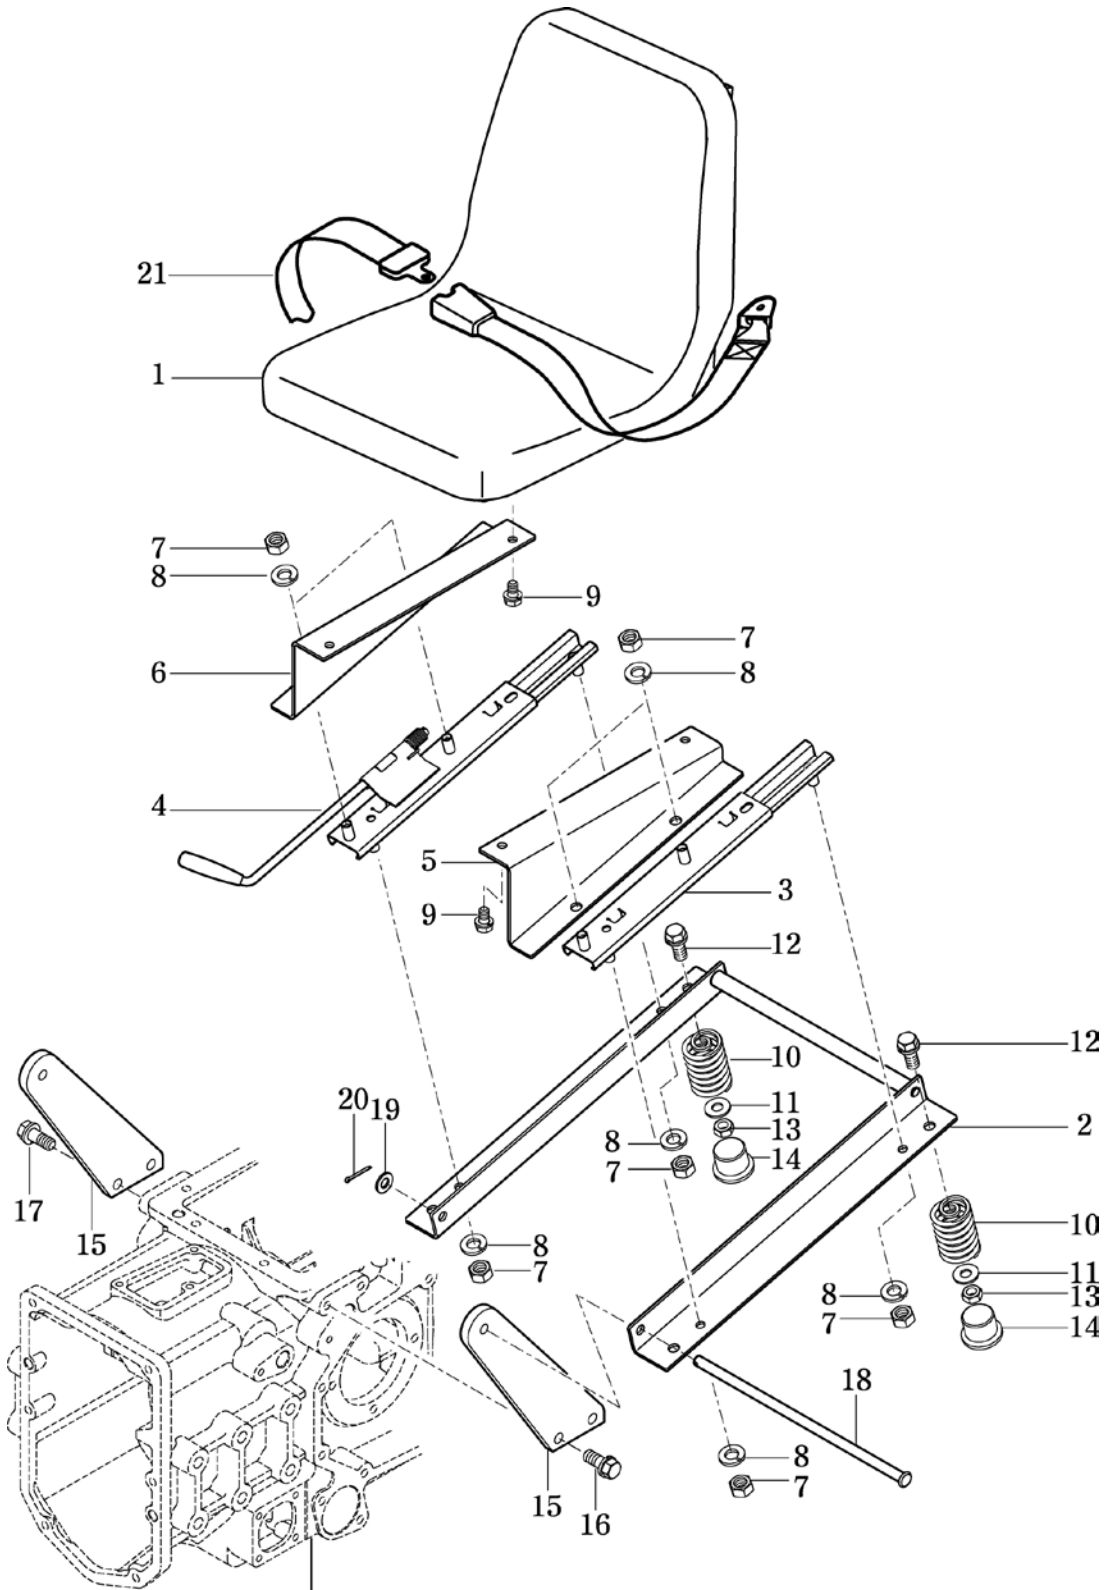


FIG. 410-01

T2334/T2734-E-704A

NOTE

[illegible]


FIG 705

ROPS


P1

Year / Month

2006 / 07

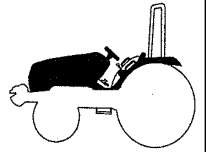

T2334 / T2734

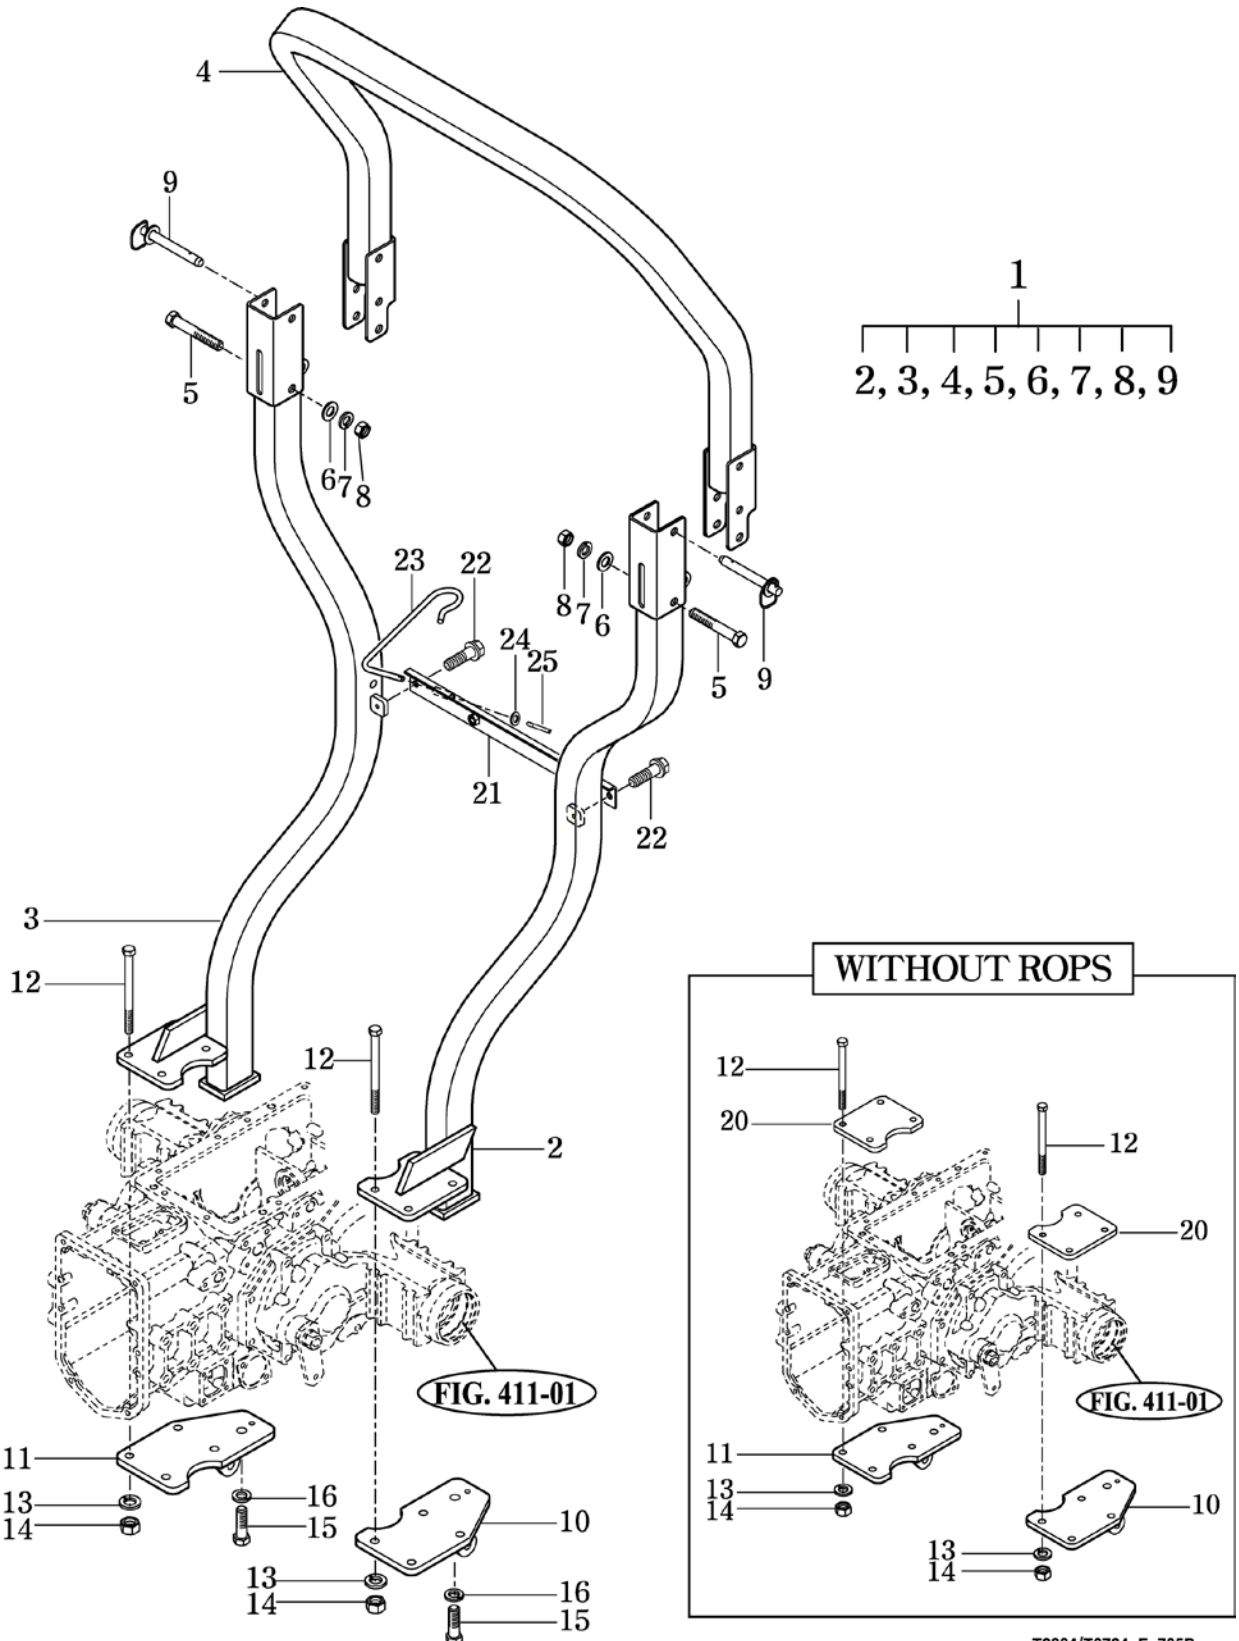

T2334/T2734-E-705B

NOTE

[illegible]


FIG 801

BATTERY & MOUNTING


P1

Year / Month

2006 / 07

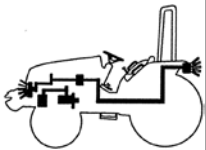

T2334 / T2734

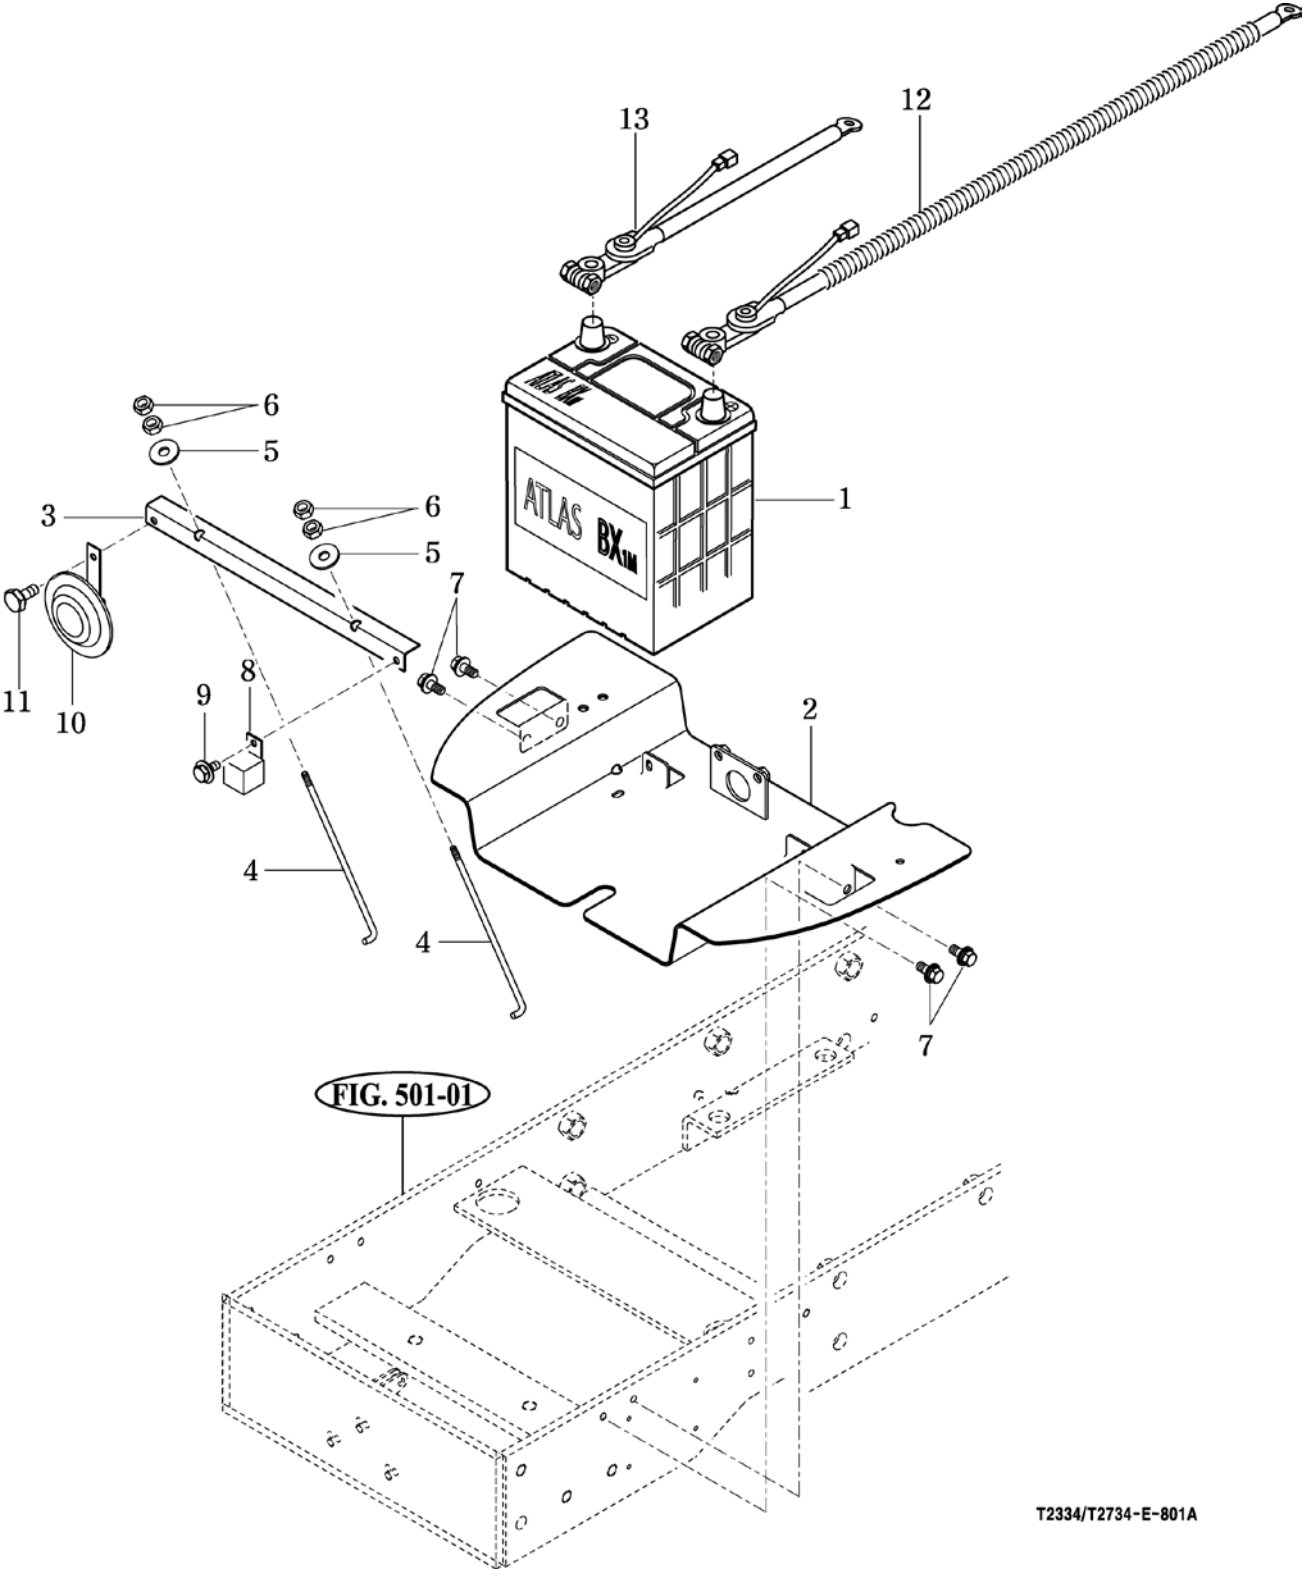

T2334/T2734-E-801A

NOTE

[illegible]


FIG 802

LIGHTS




P1

Year / Month

2006 / 07

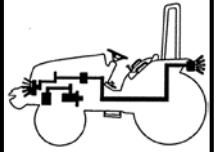

T2334 / T2734

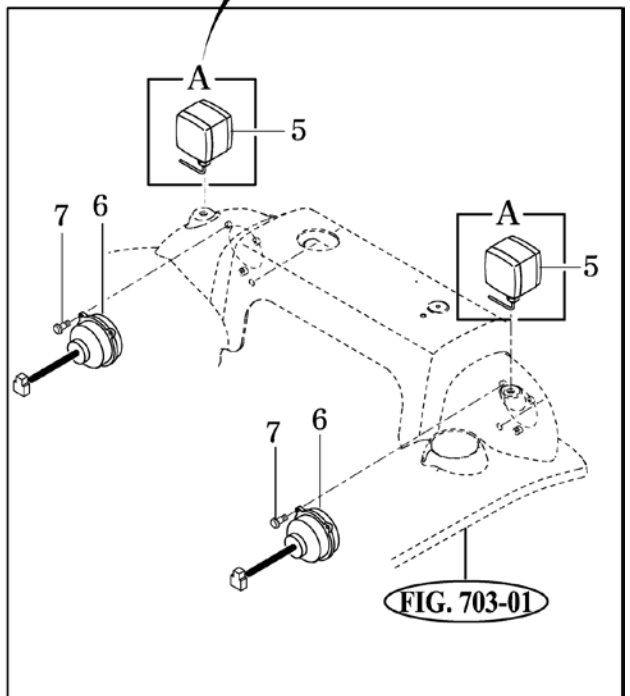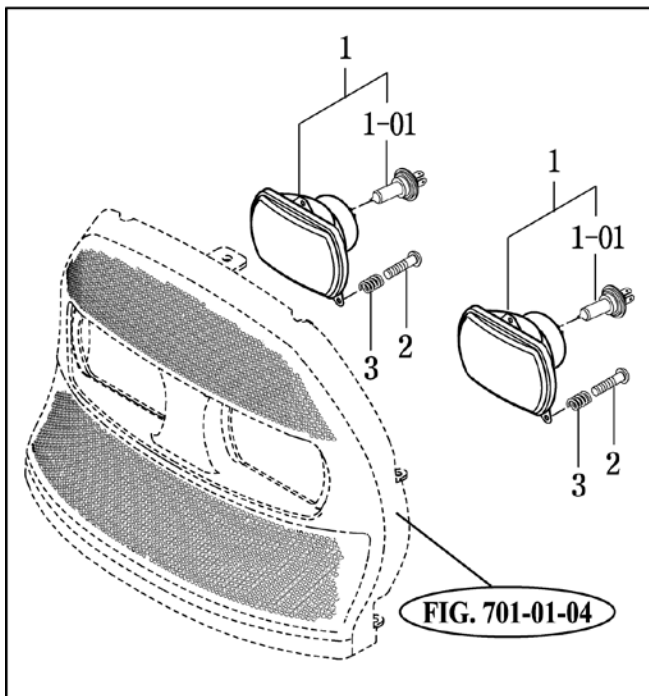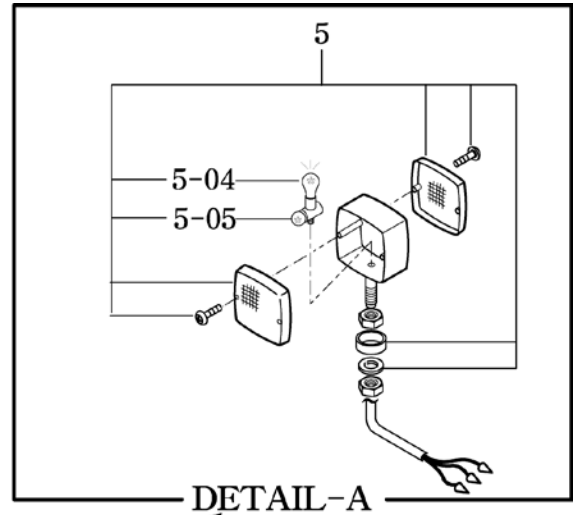

T2334/T2734-E-802B

NOTE


FIG 803
T2334 / T2734

INSTRUMENT PANEL


P1

Year / Month

2006 / 07

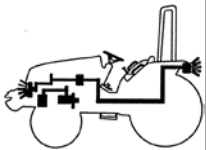

Forward

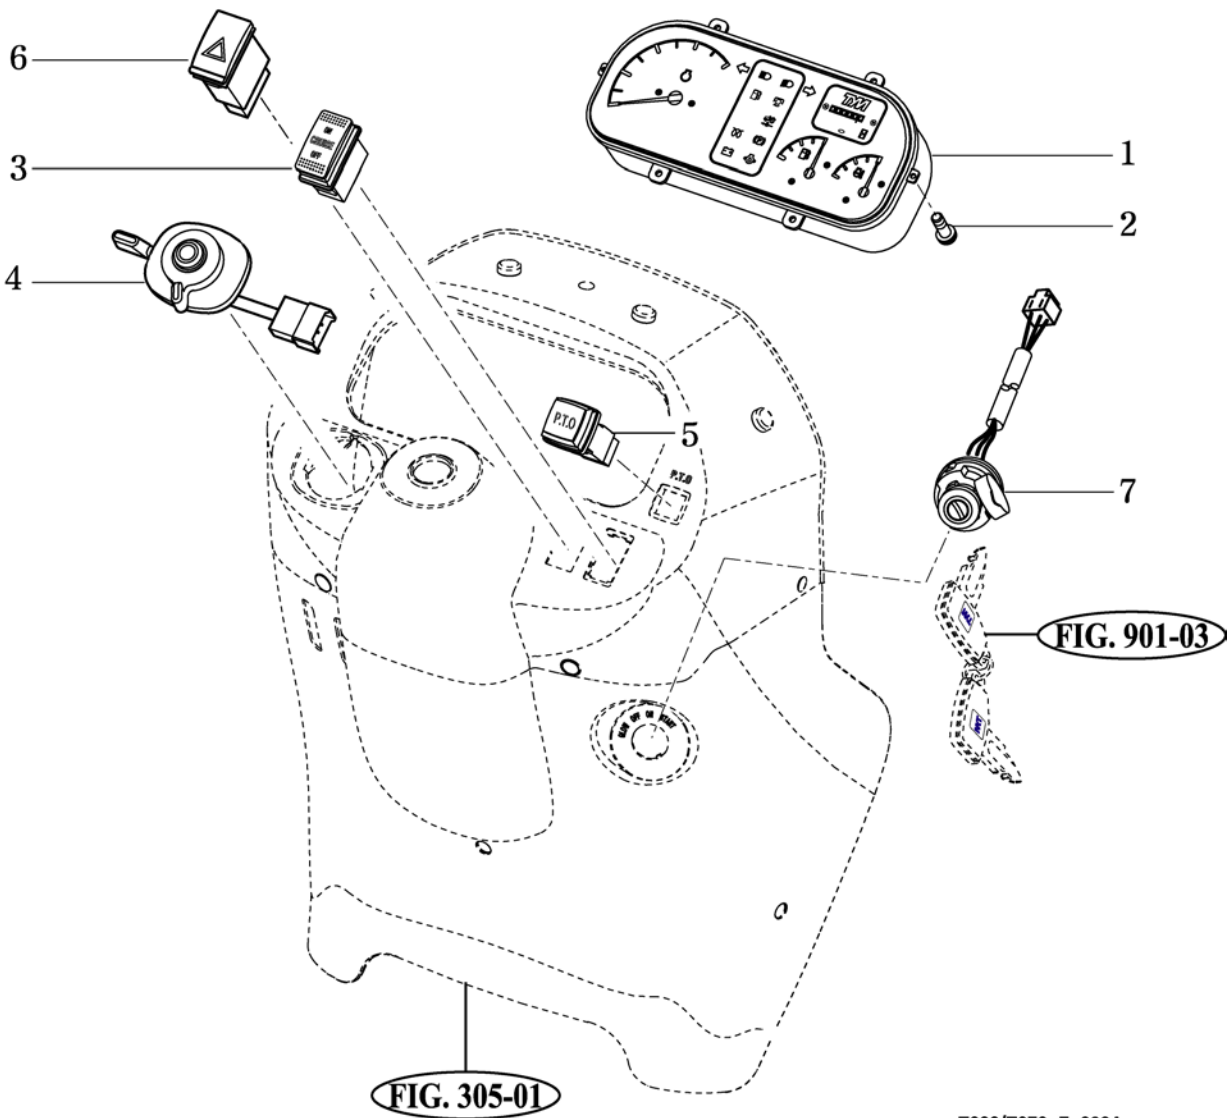

T233/T273-E-803A

NOTE

[illegible]


FIG 804

ELECTRIC SYSTEM


P1

Year / Month

2006 / 07

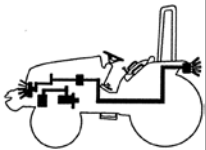

T2334 / T2734

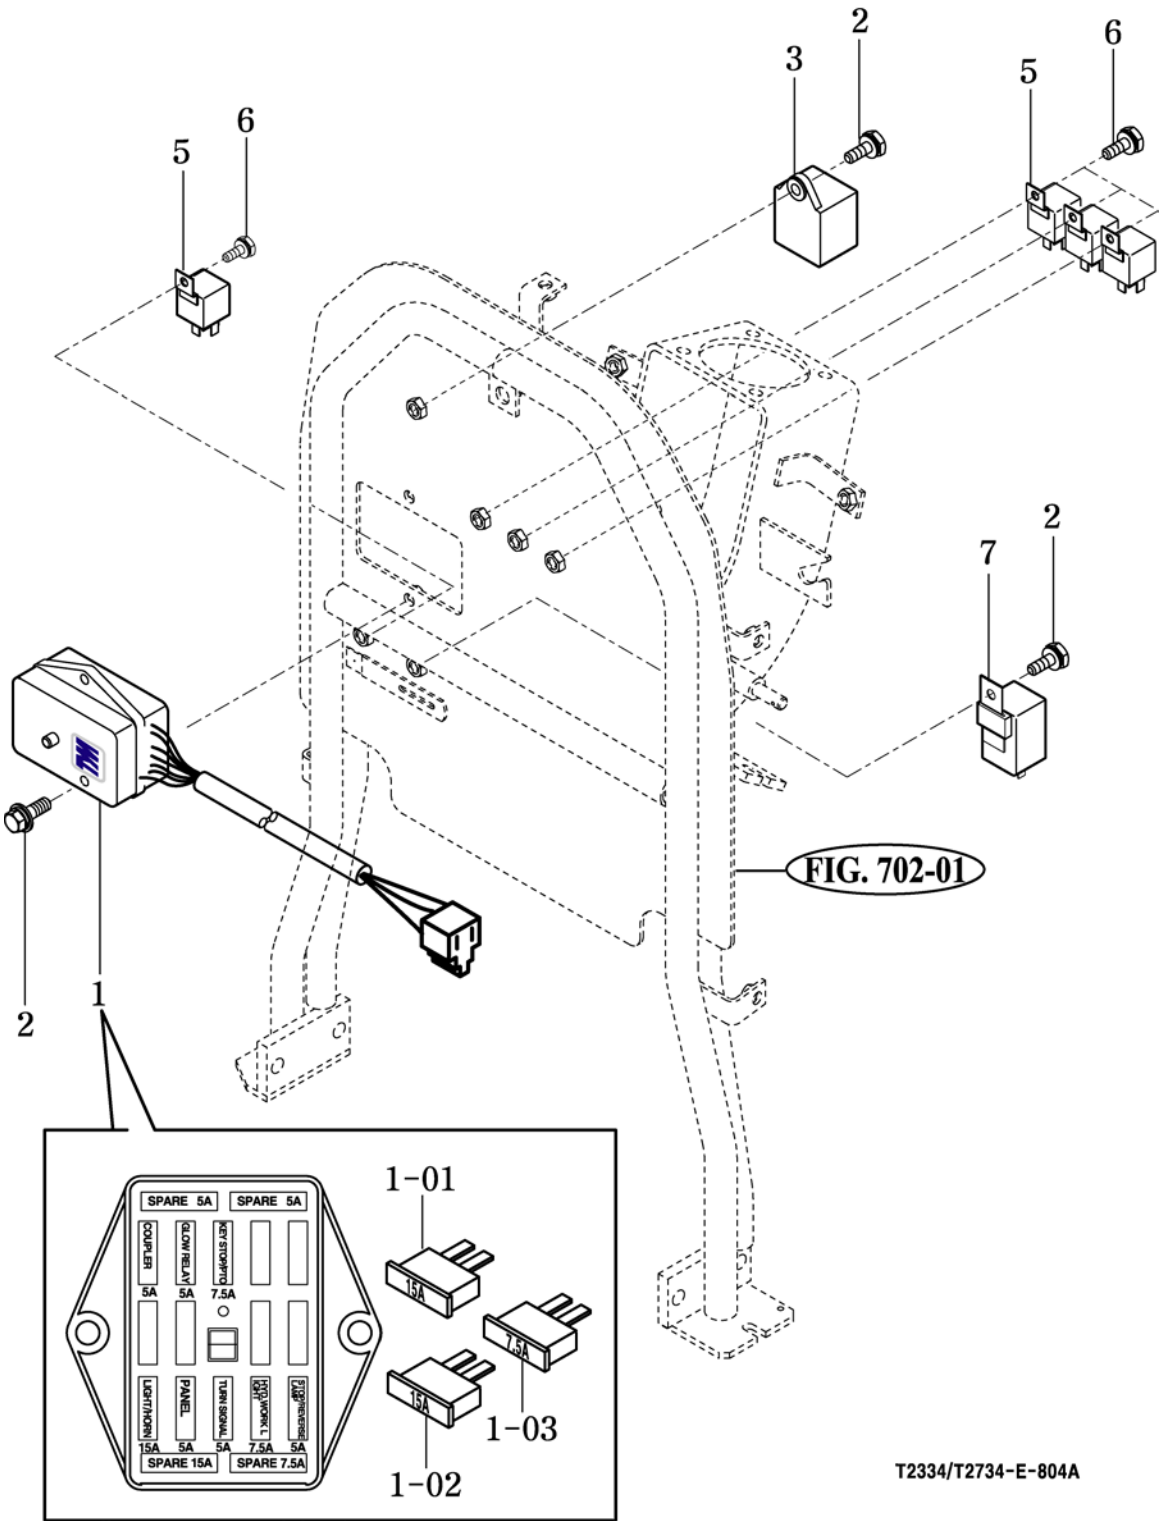

T2334/T2734-E-804A

NOTE

[illegible]


FIG 805

HARNESS


P1

Year / Month

2006 / 07

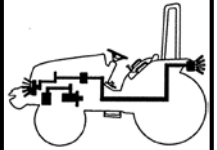

T2334 / T2734

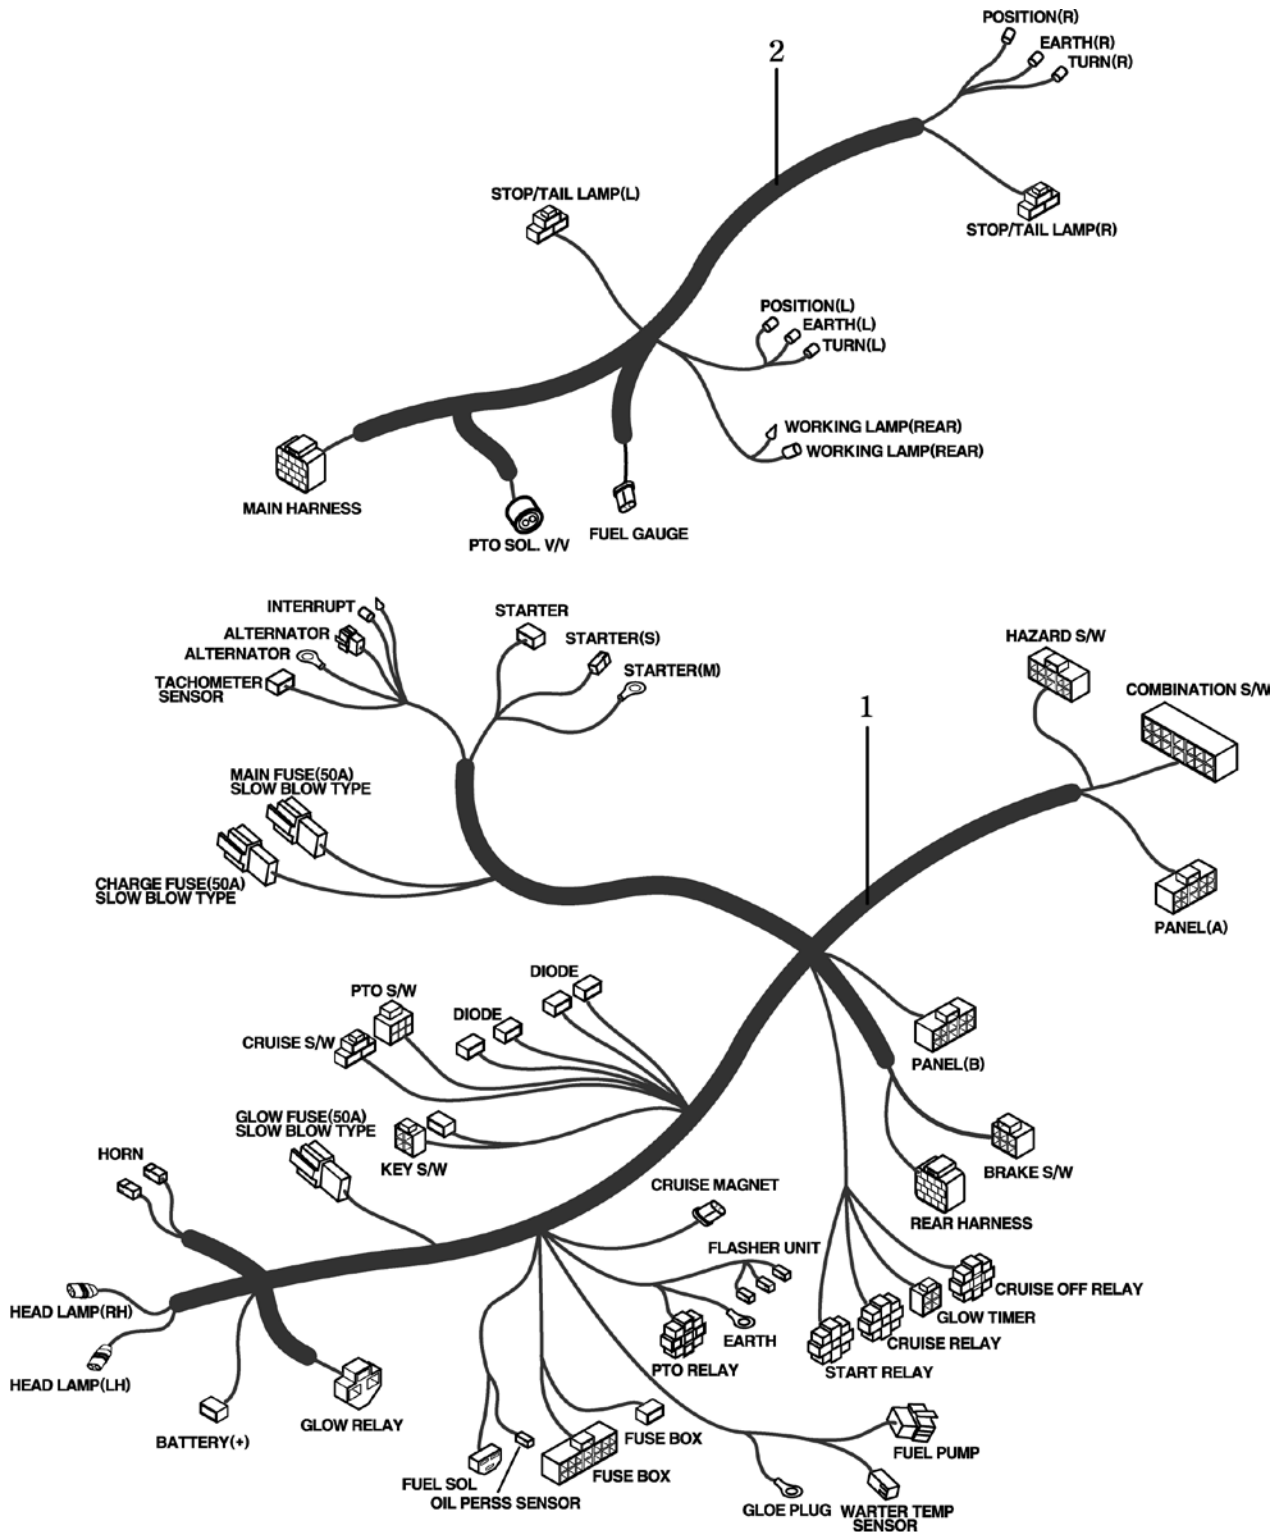

T2334/T2734-E-805A

NOTE

FIG 901



T2334 / T2734

TOOL & ACCESSORY

P1

Year / Month

2006 / 07

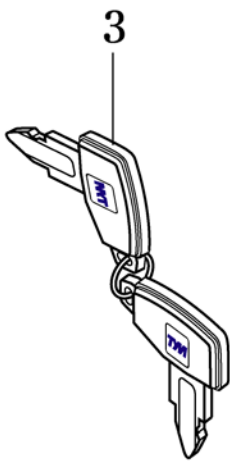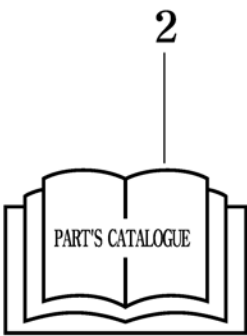

T2334/2734-E-901

NOTE

FIG 903


LABEL

T2334 / T2734


P1

Year / Month

2006 / 07

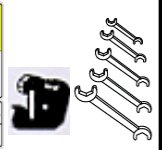

1

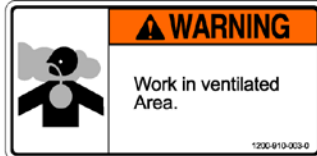

2



3



4



5



6



7



8



9



10



11



12



14



15



16



21



22



23



24



25



13

T2334/T2734-E-903A

