

Master Parts Manual



RC-50 Rubber Track Loader



Part Number: 0200-589
Printed (4-09)

Table of Contents

1. Cab (R.O.P.S.) Assembly Serial # RSC 00101-2285 1-A Serial # RSC 02286-Current* 1-B	14. Undercarriage Assembly (LT) Serial # RSC 00101-698 14-A Serial # RSC 00699-Current* 14-B
2. Light Bar Assembly Serial # RSC 00101-2285 2-A Serial # RSC 02286-Current* 2-B	15. Lift Arm Assembly Serial # RSC 00101-2285 15-A Serial # RSC 02286-Current* 15-B
3. Enclosed Cab (R.O.P.S.) Assembly (Optional)Serial # RSC 00101-Current* ... 3-A	16. Lift Arm Tubes and Fittings Serial # RSC 00101-2285 16-A Serial # RSC 02286-Current* 16-B
4. Chassis Assembly Serial # RSC 00101-2285 4-A Serial # RSC 02286-Current* 4-B	17. Quick Attach Assembly Serial # RSC 00101-2285 17-A Serial # RSC 02286-Current* 17-B
5. Hood Assembly Serial # RSC 00101-Current* 5-A	18. Cab Heater Assembly (Optional) Serial # RSC 00101-Current* ... 18-A
6. Radiator/Oil Cooler Assembly Serial # RSC 00101-2285 6-A Serial # RSC 02286-2554 6-B Serial # RSC 02555-Current* 6-C	19. Heater/Air Conditioning Assembly (Optional) Serial # RSC 00101-Current* ... 19-A
7. Hydraulic Reservoir Assembly Serial # RSC 00101-2285 7-A Serial # RSC 02286-Current* 7-B	20. Track Installation Tool (Tool) Serial # RSC 00101-Current* 20-A
8. Hydraulic Control Assembly Serial # RSC 00101-2285 8-A Serial # RSC 02286-Current* 8-B	
9. Drive/Auxiliary Pump Assembly Serial # RSC 00101-2285 9-A Serial # RSC 02286-Current* 9-B	
10. Engine Assembly Serial # RSC 01554-Current* 10-A	
11. Fuse Panel Assembly Serial # RSC 00101-2285 11-A Serial # RSC 02286-Current* 11-B	
12. Torsion Axle Assembly Serial # RSC 00101-Current* 12-A	
13. Undercarriage Assembly (RT) Serial # RSC 00101-698 13-A Serial # RSC 00699-Current* 13-B	

* Current refers to the machines being produced at the time this manual was printed. See manual cover for print date.

GENERAL SERVICE ITEMS & LUBRICANTS

<u>ITEM</u>	<u>MANUFACTURER/DESCRIPTION</u>	<u>ASV P/N</u>
-Engine Oil Filter	Perkins (140517050)	0200-377
-Primary Air Filter	Donaldson (P822768)	0200-339
-Secondary Air Filter	Donaldson (P822769)	0200-340
-Engine Fuel Filter	Perkins (26560017)	0200-213
-Fuel screen	Perkins (130366110)	0200-561
-Water Separator O-ring		0201-985
-Fan Belt	Perkins (080109107)	0200-363
-Antifreeze/Coolant (1 gal.)	Ethylene Glycol (long life)	0300-766
-Antifreeze/Coolant (Case/6 gal.)	Ethylene Glycol (long life)	0402-841
-Engine Oil (1 qt.)	Multi-Grade 10W-30	0300-767
-Engine Oil (Case/12 qt.)	Multi-Grade 10W-30	0402-838
-Engine Oil (1 gal.)	Multi-Grade 10W-30	0402-839
-Engine Oil (Case/6 gal.)	Multi-Grade 10W-30	0402-840
-Grease (1 Tube)	Multi-Purpose Lithium	0300-769
-Grease (Box/10 Tubes)	Multi-Purpose Lithium	0402-844
-Grease (Case/40 Tubes)	Multi-Purpose Lithium	0402-834

HYDRAULIC SERVICE ITEMS & LUBRICANTS

<u>ITEM</u>	<u>DESCRIPTION</u>	<u>ASV P/N</u>
-Hydraulic Oil Filter	Element,Filter,MP	0200-204
-Hydraulic Oil (5 gal.)	All Season MV	0400-253
-Hydraulic Oil (55 gal.)	All Season MV	0402-833
-Kit,Seal,Loader Valve & Relief	Flts Loader Valve (P/N:0304-020)	2010-094

<u>O-RING</u>	<u>ASV P/N</u>
# 4, ORB Type	0314-366
# 6, ORB Type	0310-619
# 8, ORB Type	0307-353
# 10, ORB Type	0310-620
# 12, ORB Type	0310-621
# 16, ORB Type	0307-354
# 20, ORB Type	0310-832

CYLINDER SERVICE ITEMS


<u>ITEM</u>	<u>DESCRIPTION</u>	<u>ASV P/N</u>
-Hydraulic Oil Filter	Element,Filter,MP	0200-204
-Hydraulic Oil (5 gal.)	All Season MV	0400-253
-Hydraulic Oil (55 gal.)	All Season MV	0402-833
-Kit,Seal,Loader Valve & Relief	Flts Loader Valve (P/N:0304-020)	2010-094
<u>SN:101-2285</u>		
-Kit,Seal,Bucket/Tilt Cylinder	Flts Cylinder (P/N:0200-121)	0200-305
-Rod,Bucket/Tilt Cylinder	Flts Cylinder (P/N:0200-121)	0081-019
-End Gland,Bucket/Tilt Cylinder	Flts Cylinder (P/N:0200-121)	0200-483
-Nut,Bucket/Tilt Cylinder	Flts Cylinder (P/N:0200-121)	0081-004
-Kit,Seal,Lift Arm Cylinder	Flts Cylinder (P/N:0200-005)	0200-304
-End Gland,Lift Arm Cylinder	Flts Cylinder (P/N:0200-005)	0081-003
-Rod,Lift Arm Cylinder	Flts Cylinder (P/N:0200-005)	0081-005
-Nut,Lift Arm Cylinder	Flts Cylinder (P/N:0200-005)	0081-004
<u>SN:2286-2743</u>		
-Kit,Seal,Bucket/Tilt Cylinder	Flts Cylinder (P/N:2030-234/235)	0003-046
-Rod,Bucket/Tilt Cylinder	Flts Cylinder (P/N:2030-234/235)	0003-044
-End Gland,Bucket/Tilt Cylinder	Flts Cylinder (P/N:2030-234/235)	0003-045
-Nut,Bucket/Tilt Cylinder	Flts Cylinder (P/N:2030-234/235)	0003-037
-Kit,Seal,Lift Arm Cylinder	Flts Cylinder (P/N:2030-236)	0003-046
-End Gland,Lift Arm Cylinder	Flts Cylinder (P/N:2030-236)	0003-045
-Rod,Lift Arm Cylinder	Flts Cylinder (P/N:2030-236)	0003-050
-Nut,Lift Arm Cylinder	Flts Cylinder (P/N:2030-236)	0003-037
<u>SN:2744-Current*</u>		
-Kit,Seal,Bucket/Tilt Cylinder	Flts Cylinder (P/N:2030-286/287)	0081-030
-Rod,Bucket/Tilt Cylinder	Flts Cylinder (P/N:2030-286/287)	0003-044
-End Gland,Bucket/Tilt Cylinder	Flts Cylinder (P/N:2030-286/287)	0003-045
-Nut,Bucket/Tilt Cylinder	Flts Cylinder (P/N:2030-286/287)	0003-037
-Kit,Seal,Lift Arm Cylinder	Flts Cylinder (P/N:2030-285)	0081-031
-End Gland,Lift Arm Cylinder	Flts Cylinder (P/N:2030-285)	0003-045
-Rod,Lift Arm Cylinder	Flts Cylinder (P/N:2030-285)	0003-050
-Nut,Lift Arm Cylinder	Flts Cylinder (P/N:2030-285)	0003-037

* Current refers to the machines being produced at the time this manual was printed. See manual cover for print date.


CATERPILLAR ENGINE SERVICE ITEMS (Machine Serial #: RSC 00101-1553)

<u>ITEM</u>	<u>MANUFACTURER/DESCRIPTION</u>	<u>ASV P/N</u>
Engine Oil Filter	Caterpillar (220-1523)	0304-398
Primary Air Filter	Donaldson (P822768)	0200-339
Secondary Air Filter	Donaldson (P822769)	0200-340
Engine Fuel Filter	Caterpillar (0676987)	0200-212
Fan Belt	Caterpillar (211-5172)	0200-363

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0304-318	1	BOX,OWNERS MANUAL	41	0304-473	1	SENSOR,SWITCH,LAPBAR
2	0304-320	1	DECAL,OWNER'S MANUAL	42	0304-305	1	DECAL,THROTTLE
3	0304-306	1	DECAL,WARNING,LOAD	43	0310-143	1	FILM-WARNING,RIDERS
4	0310-169	1	FILM-DANGER (LOADER) (REACHING	44	0201-265	1	DECAL,WARNING,FIRE HAZARD
5	8050-157	1	WASHER,WROUGHT,3/16,STD,ZN	45	0310-122	1	FILM-WARNING (MOUNT) (DISMOUNT
6	2030-220	1	SPRING,2.25x0.45	46	0304-400	6	CLIP,FASTENER
7	0301-033	1	WASHER,FENDER,1/4 x 1 1/4,STL,	47	0403-110	1	KIT, ROPS
8	2030-218	1	LEVER,THROTTLE	48	0301-637	1	GROMMET (1840)
9	0302-546	1	KNOB,PLASTIC,1-7/8 DIA,1/2-13	49	0304-247	1	LIGHT,REAR
10	8050-282	7	WASHER,WROUGHT,3/8,STD,ZN	50	0200-288	1	BULB,HALOGEN
11	0303-071	2	WASHER,NYLON,BLACK,1" OD	51	0200-320	2	WLMT,STOP LAP BAR
12	8040-486	6	NUT,HEX,NYLOCK,3/8-16 UNC,ZN	52	0200-321	2	PAD,RUBBER,W/ADHESIVE
13	0303-099	2	WASHER,STAR,3/8,INT/EXT TOOTH	53	8102-044	5	CAPSCREW,HH,1/4-20UNCx1.25,GD8
14	0304-496	1	PAD,SKID	54	8051-212	5	WASHER,SPRING LOCK,1/4,ZN
15	8102-227	2	CAPSCREW,HH,3/8-16UNCx2.0 GD8	55	0200-290	1	INSULATION,TOP
16	0201-865	1	BUSHING,FOOT PEDAL	56	0200-291	1	INSULATION,MIDDLE
17	0201-925	1	WLMT,PEDAL	57	0200-292	1	INSULATION,BOTTOM
18	0304-422	1	DECAL, R-SERIES	58	0200-328	1	PLATE,FIREWALL
19	0201-902	1	CLEVIS,1/4-28,W/PIN	59	0200-264	1	HOUSING,POWER SOURCE
20	2030-219	1	ROD,THREADED,1/4x28x4375	60	0304-579	6	PLUG,HOLE,PLASTIC,5/16
21	0301-121	2	NUT,JAM,1/4-28 UNF	61	0304-276	1	WLMT,LEVER,THROTTLE
22	0314-215	1	CONNECTOR,JOINT,BALL	62	0304-501	1	TUBING, SPACER
23	0314-214	1	STUD,JOINT,BALL	63	0304-602	1	CAPSCREW,FH,WIZLOC,3/8-16X1.75
24	0200-567	1	BRACKET,THROTTLE	64	0310-307	4	SCREW,MACHINE,4-40x.50
25	8040-396	2	NUT,HEX,NYLOCK,1/4-28 UNF,ZN	65	0310-308	4	NUT,HEX,NYLOCK 4-40
26	0307-606	1	PLUG,FINSISHING,STEEL,1-3/8"	66	0412-036	1	BRACKET LAP BAR ACTIVATION SWITCH
27	0201-867	1	BUSHING				
28	0304-466	1	STOP,LAPBAR				
29	8050-240	10	WASHER,STAINLESS,1/4",MS				
30	0304-465	4	CAPSCREW,HH,M6-1.0x16mm				
31	0304-467	1	BRKT,LAPBAR				
32	8040-606	4	NUT,HEX,NYLOCK,1/2-13 UNC,ZN				
33	0304-468	2	RING,SNAP,LAPBAR				
34	8102-404	4	CAPSCREW,HH 1/2-13UNCx1.25 GD8				
35	0304-019	1	ASSY,LAP BAR				
36	0304-470	1	MNT,LAPBAR				
37	0304-477	2	SPACER,LAPBAR				
38	0304-471	2	SPRING,GAS,ASSIST				
39	0304-472	1	MNT,LAPBAR,SWITCH				
40	0304-476	1	GROMMET,RUBBER				

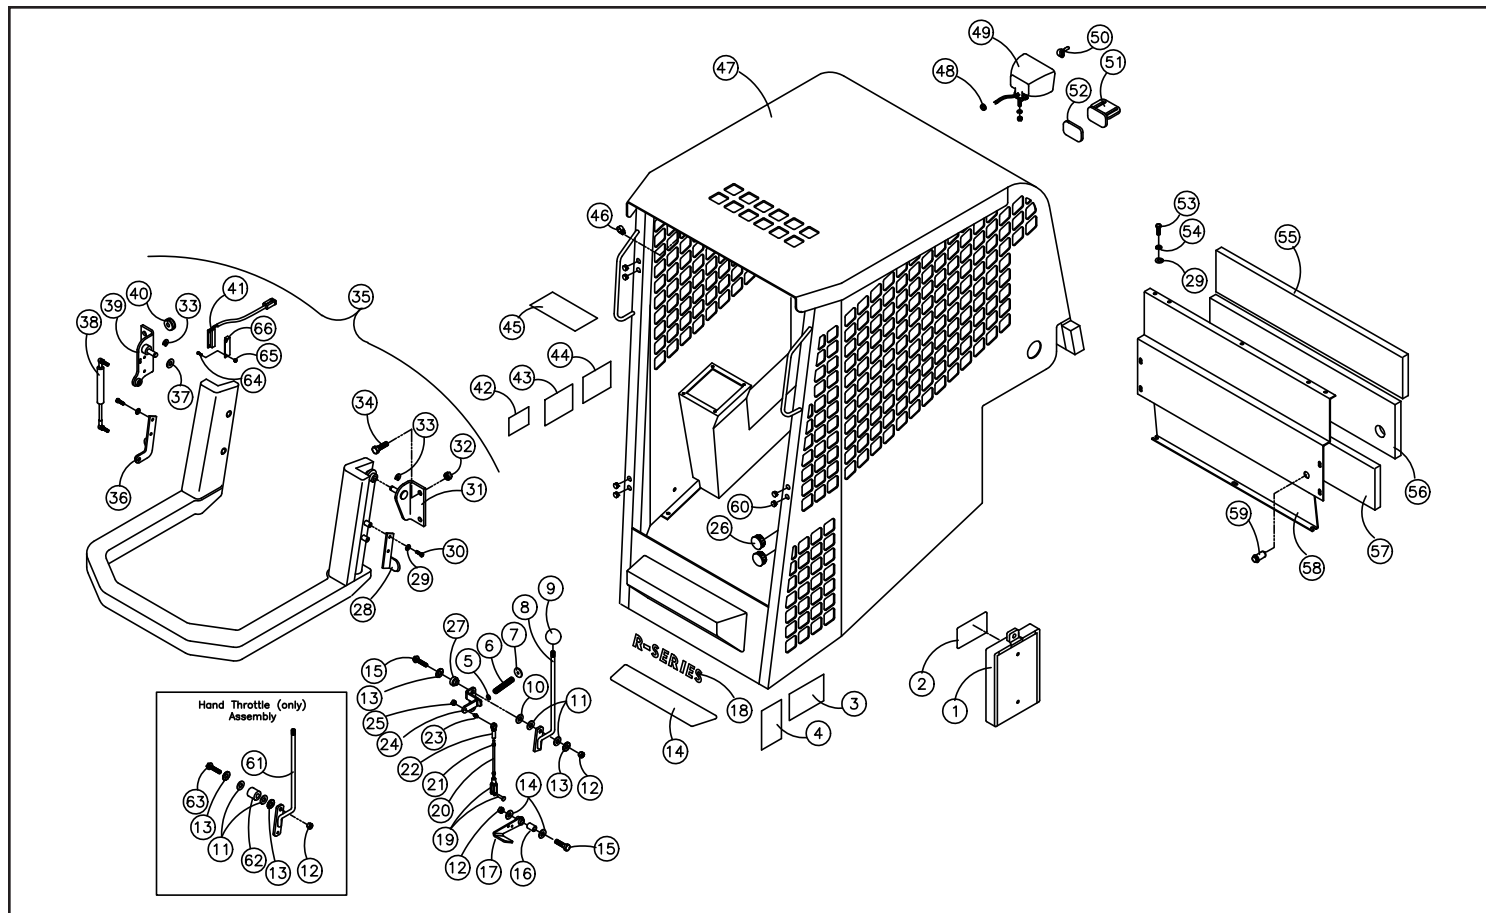

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0304-318	1	BOX,OWNERS MANUAL	41	0304-473	1	SENSOR,SWITCH,LAPBAR
2	0304-320	1	DECAL,OWNER'S MANUAL	42	0304-305	1	DECAL,THROTTLE
3	0304-306	1	DECAL,WARNING,LOAD	43	0310-143	1	FILM-WARNING,RIDERS
4	0310-169	1	FILM-DANGER (LOADER) (REACHING	44	0201-265	1	DECAL,WARNING,FIRE HAZARD
5	8050-157	1	WASHER,WROUGHT,3/16,STD,ZN	45	0310-122	1	FILM-WARNING (MOUNT) (DISMOUNT
6	0201-903	1	SPRING,1.75X0.48	46	0304-400	6	CLIP,FASTENER
7	0301-033	1	WASHER,FENDER,1/4 x 1 1/4,STL,	47	2030-237	1	WLMT,CAB
8	0201-912	1	LEVER,THROTTLE	48	0301-637	1	GROMMET (1840)
9	0302-546	1	KNOB,PLASTIC,1-7/8 DIA,1/2-13	49	0304-247	1	LIGHT,REAR
10	8050-282	7	WASHER,WROUGHT,3/8,STD,ZN	50	0200-288	1	BULB,HALOGEN
11	0303-071	2	WASHER,NYLON,BLACK,1" OD	51	0200-320	2	WLMT,STOP LAP BAR
12	8040-486	6	NUT,HEX,NYLOCK,3/8-16 UNC,ZN	52	0200-321	2	PAD,RUBBER,W/ADHESIVE
13	0303-099	2	WASHER,STAR,3/8,INT/EXT TOOTH	53	8102-044	5	CAPSCREW,HH,1/4-20UNCx1.25,GD8
14	0304-485	4	SCREW,MACH,10-24x3/4,STAINLESS	54	8051-212	5	WASHER,SPRING LOCK,1/4,ZN
15	8102-227	2	CAPSCREW,HH,3/8-16UNCx2.0 GD8	55	0200-290	1	INSULATION, TOP
16	0201-865	1	BUSHING,FOOT PEDAL	56	0200-291	1	INSULATION,MIDDLE
17	0201-925	1	WLMT,PEDAL	57	0200-292	1	INSULATION,BOTTOM
18	0200-587	1	CONSOLE,LH	58	0200-328	1	PLATE,FIREWALL
19	0201-902	1	CLEVIS,1/4-28,W/PIN	59	0200-264	1	HOUSING,POWER SOURCE
20	0201-910	1	ROD,THREADED,1/4-28x7.125	60	0304-579	6	PLUG,HOLE,PLASTIC,5/16
21	0301-121	2	NUT,JAM,1/4-28 UNF	61	0304-276	1	WLMT,LEVER,THROTTLE
22	0314-215	1	CONNECTOR,JOINT,BALL	62	0304-501	1	TUBING, SPACER
23	0314-214	1	STUD,JOINT,BALL	63	0304-602	1	CAPSCREW,FH,WIZLOC,3/8-16X1.75
24	0200-567	1	BRACKET,L,THROTTLE	64	0090-012	8	WASHER FINISHING #10 SS
25	8040-396	2	NUT,HEX,NYLOCK,1/4-28 UNF,ZN	65	0090-011	4	SCREW OH PH #10 x 1.25 SS
26	0307-606	4	PLUG,FINSISHING,STEEL,1-3/8"	66	0090-010	4	NUT SPEED #10
27	0201-867	1	BUSHING	67	8102-220	6	CAPSCREW,HH,3/8-16x0.75",GD8
28	0304-466	1	STOP,LAPBAR	68	8051-272	6	WASHER,SPRING LOCK,3/8,ZN
29	8050-240	10	WASHER,STAINLESS,1/4",MS	69	0200-600	2	MNT JOYSTICK
30	0304-465	4	CAPSCREW,HH,M6-1.0x16mm	70	0304-496	1	PAD,SKID
31	0304-467	1	BRKT,LAPBAR	71	0200-588	1	CONSOLE,RH
32	8040-606	4	NUT,HEX,NYLOCK,1/2-13 UNC,ZN	72	2030-231	1	HARNESS,CAB
33	0304-468	2	RING,SNAP,LAPBAR	73	0412-036	1	BRACKET LAP BAR ACTIVATION SWITCH
34	8102-404	4	CAPSCREW,HH 1/2-13UNCx1.25 GD8	74	0310-308	4	NUT,HEX,NYLOCK 4-40
35	0304-019	1	ASSY,LAP BAR	75	0310-307	4	SCREW,MACHINE,4-40x.50
36	0304-470	1	MNT,LAPBAR				
37	0304-477	2	SPACER,LAPBAR				
38	0304-471	2	SPRING,GAS,ASSIST				
39	0304-472	1	MNT,LAPBAR,SWITCH				
40	0304-476	1	GROMMET,RUBBER				

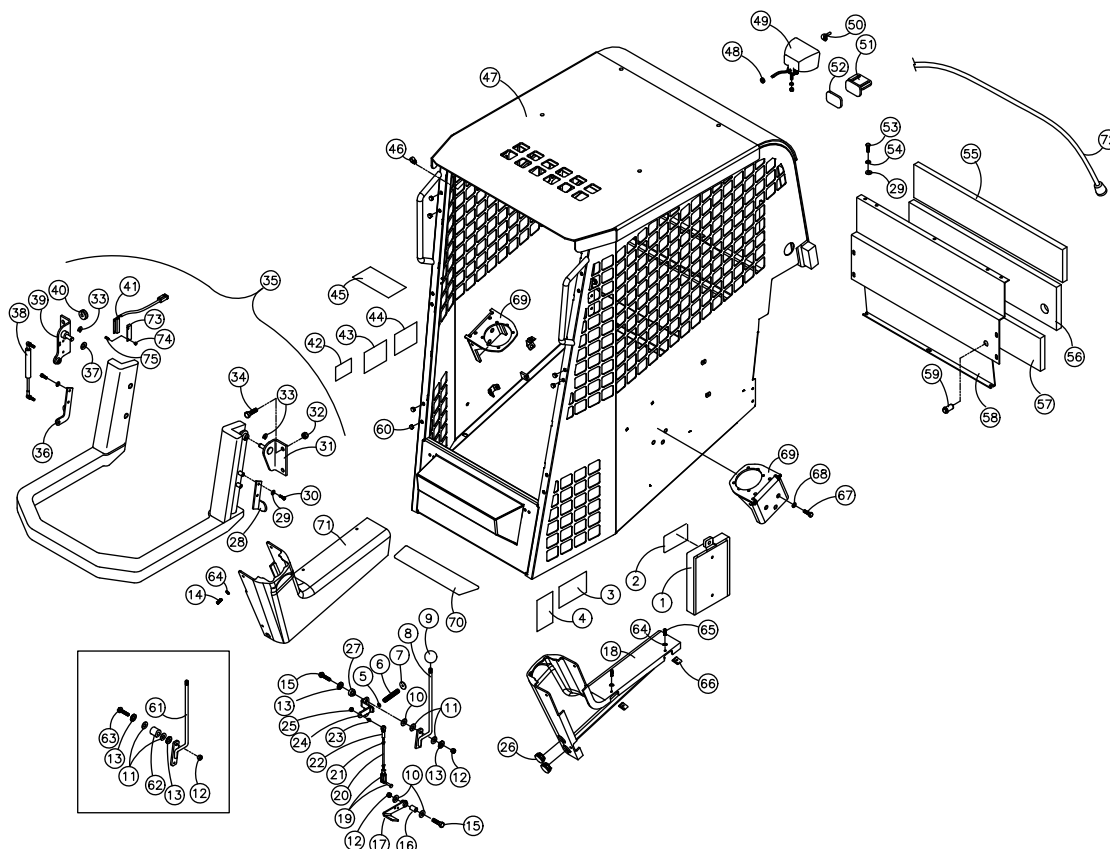


LIGHT BAR ASSEMBLY (SN: RSC 00101-2285)

<https://truckmanualshub.com/>

Section 2

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0304-463	1	WLMT,BAR,LIGHT				
2	8102-037	8	CAPSCREW,HH,1/4-20 UNCx.50,GD8				
3	8040-366	8	NUT,HEX,NYLOCK,1/4-20 UNC,ZN				
4	0304-411	1	PLUG, HOLE, 3/4", PLASTIC				
5	0200-272	1	DECAL,ASV LOGO				
6	8102-142	2	CAPSCREW,HH,5/16-18x3.25,GD8				
7	8051-242	2	WASHER,SPRING LOCK,5/16,ZN				
8	0304-650	1	HARNESS,GAUGE				
9	2030-146	1	DECAL,DASH,RC60				
10	0304-022	1	GAUGE,CONSOLE				
11	0304-028	1	SWITCH,IGNITION,RC				
12	8050-620	1	WASHER,WROUGHT,1.0,SAE,ZN				
13	2045-432	1	KEY,SWITCH,START				
14	0200-252	1	SWITCH,3 POSITION,LOCKING				
15	0310-126	1	SWITCH,LIGHT				
16	0310-138	4	PLUG				
17	0304-121	1	SWITCH,ON/OFF				
18	0200-254	1	GAUGE,LEVEL				
19	8009-220	2	SCREW,MACH,PH,6-32x.75				
20	8005-224	2	CAPSCREW,SOC HD,#6-32UNCx1.25				
21	0304-514	1	ASSY,LIGHT,DOME				
22	0302-965	2	WASHER,RIVET,#7				
23	8041-801	2	NUT,HEX,NYLOCK, 6-32				
24	0304-430	2	PLATE,MNT				
25	0310-713	4	GASKET, SWITCH				
26	0310-237	1	RECEPTACLE,POWER				
27	2015-042	1	HARNESS,JUMPER,QA				
28	0304-223	2	HOUSING,HEADLIGHT				
29	0304-475	2	BULB,HEADLIGHT				

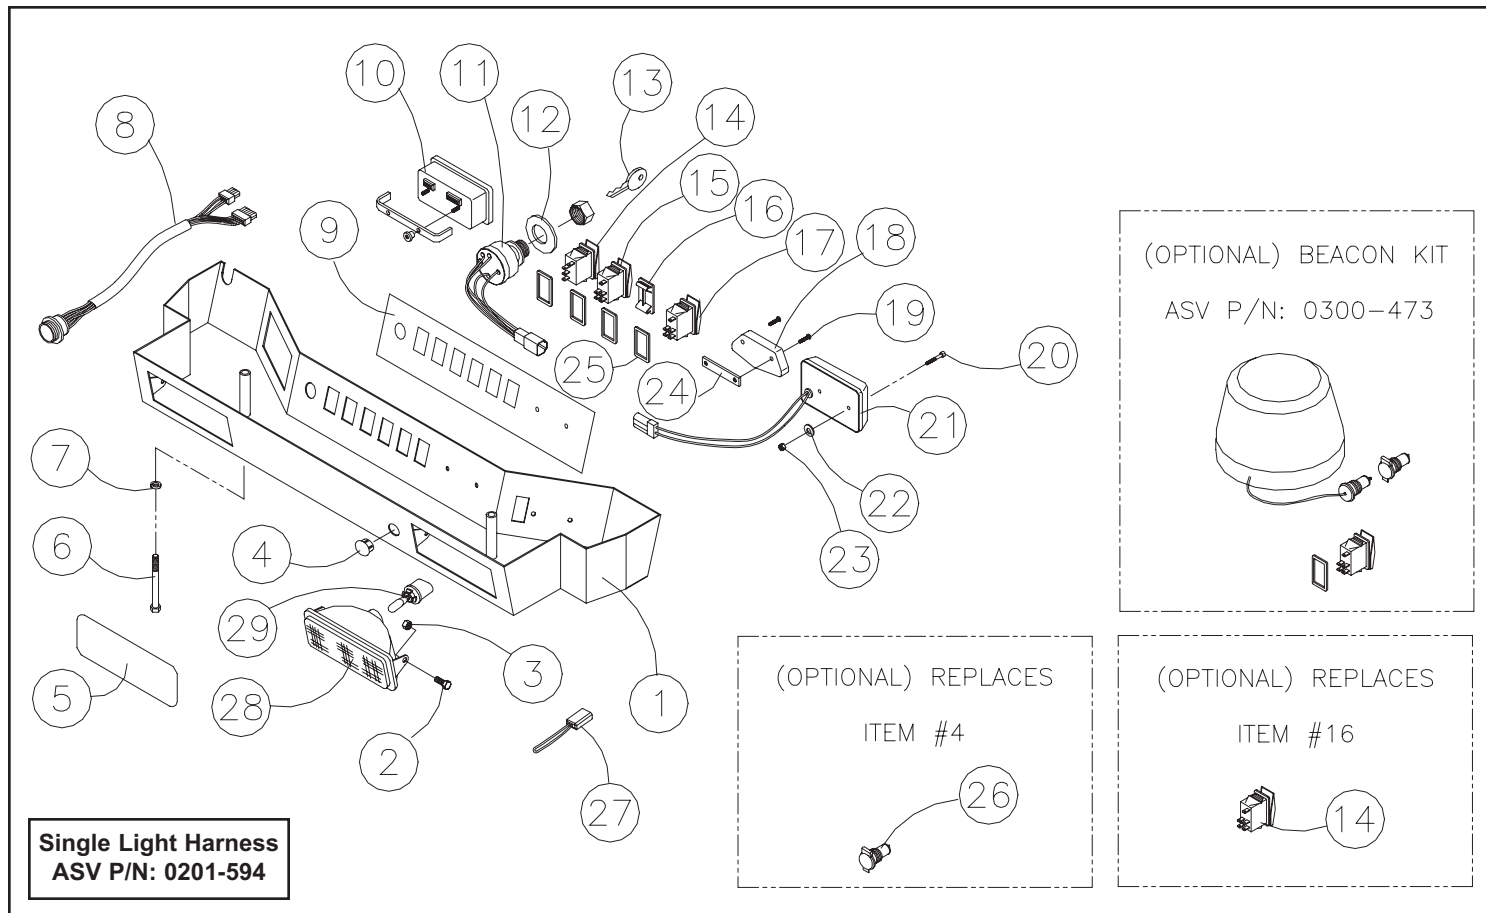


LIGHT BAR ASSEMBLY (SN: RSC 02286-Current)

<https://truckmanualshub.com/>

Section 2

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	2030-144	1	CONSOLE,RC60				
2	2045-756	4	LIGHT 35W W/BEZEL				
3	0201-595	2	HARNESS,LIGHT,DOUBLE				
4	0304-411	1	PLUG, HOLE, 3/4", PLASTIC				
5	0200-272	1	DECAL,ASV LOGO				
6	8102-142	2	CAPSCREW,HH,5/16-18x3.25,GD8				
7	8051-242	2	WASHER,SPRING LOCK,5/16,ZN				
8	0304-650	1	HARNESS,GAUGE				
9	0200-286	1	DECAL,DASH,RC50				
10	0304-022	1	GAUGE,CONSOLE				
11	0304-028	1	SWITCH,IGNITION,RC				
12	8050-620	1	WASHER,WROUGHT,1.0,SAE,ZN				
13	2045-432	1	KEY,SWITCH,START				
14	0200-252	1	SWITCH,3 POSITION,LOCKING				
15	0310-126	1	SWITCH,LIGHT				
16	0310-138	5	PLUG				
17	2015-042	1	HARNESS,JUMPER,QA				
18	0200-254	1	GAUGE,LEVEL				
19	8009-220	2	SCREW,MACH,PH,6-32x.75				
20	8005-224	2	CAPSCREW,SOC HD,#6-32UNCx1.25				
21	0304-514	1	ASSY,LIGHT,DOME				
22	0302-965	2	WASHER,RIVET,#7				
23	8041-801	2	NUT,HEX,NYLOCK, 6-32				
24	0304-430	2	PLATE,MNT				
25	0310-713	4	GASKET, SWITCH				
26	0310-237	1	RECEPTACLE,POWER				
27	0201-952	1	SPACER .625OD, .38 ID x 2 5/16"				
28	2030-189	1	SWITCH, SELF LEVEL				
29	2045-380	1	RING, KEY, ASV LOGO				

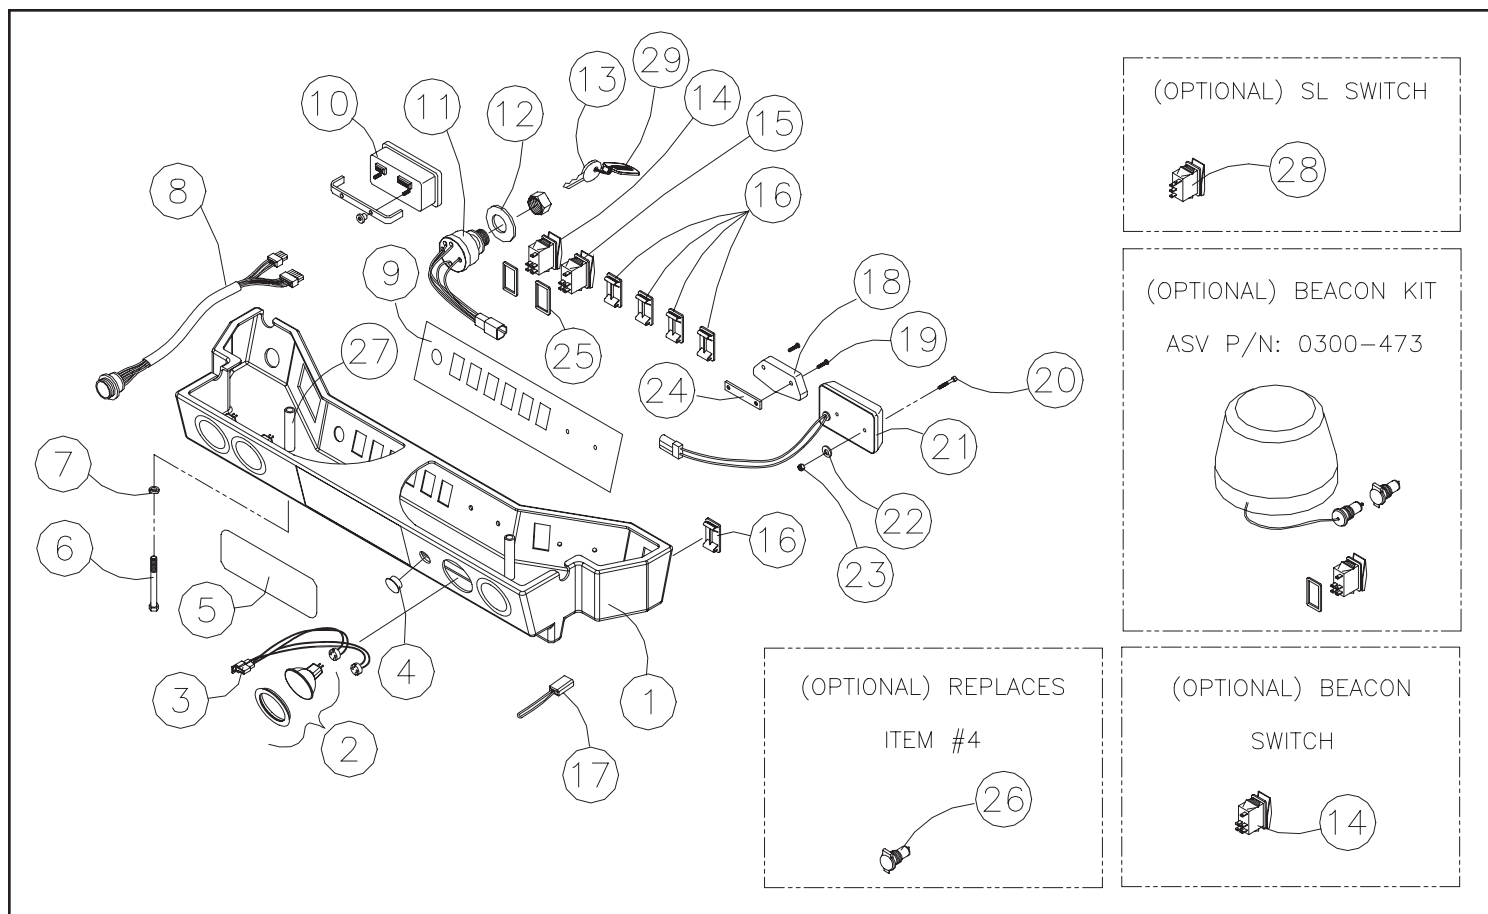


ENCLOSED CAB (R.O.P.S.) ASSEMBLY (SN: RSC 00101-Current)


<https://truckmanuals.hub.com/>

Section 3

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0402-760	1	GLASS,UPPER,RH	41	0200-298	1	WINDOW,REAR
2	0402-769	1	GLASS,SLIDER,SINGLE,RH	42	0402-758	1	GLASS,SLIDER,SINGLE,LH
3	0402-762	1	GLASS,LOWER,RH	43	0402-761	1	GLASS,UPPER,LH
4	0304-480	2	WLMT,HINGE,DOOR	44	0402-763	1	GLASS,LOWER,LH
5	0314-208	2	BUSHING,HINGE	45	0402-826	24	KIT,RETAINER,WINDOW
6	8102-136	6	CAPSCREW,HH,5/16-18x1.75 ZN GD	46	8102-128	2	CAPSCREW,HH 5/16-18UNCx7/8 GR8
7	8040-426	8	NUT,HEX,NYLOCK,5/16-18 UNC,ZN	47	8051-242	2	WASHER,SPRING LOCK,5/16,ZN
8	0304-619	1	MOTOR,WIPER,85°	48	8050-262	2	WASHER,WROUGHT,5/16,STD,ZN
9	0310-495	10"	STRIP,LOCK	49	0200-345	1	SEAL,WINDOW,72"
10	0304-674	1	SEAL,WINDOW,10FT	50	0200-552	1	MNT,BRACKET,BALLSTUD
11	0402-243	1	ARM,WIPER,15-19"	51	0200-324	1	STOP,WINDOW
12	0402-244	1	BLADE,FLAT,18"	52	0200-297	1	FRAME,WINDOW,REAR
13	0402-881	1	WINDOW,DOOR,RC,LH,RH	53	0307-779	2	HINGE,DETACHABLE
14	8102-040	7	CAPSCREW,HH,1/4-20 UNCx.75,GD8	54	0200-301	2	LATCH,COMPRESSION,1/4 TURN
15	8050-222	3	WASHER,WROUGHT,1/4,STD,ZN	55	8061-604	4	RIVET,ALUMINUM,3/16x.575
16	8040-366	3	NUT,HEX,NYLOCK,1/4-20 UNC,ZN	56	0310-641	1	MOUNT,SHOCK,90°
17	0304-495	2	STUD,BALL,10MM	57	0200-232	2	SPRING,GAS ASSIST
18	0304-484	11	TRIM,CAB RC-30	58	0200-552	1	MNT,BRACKET,BALLSTUD
19	0304-491	1	MNT,SHOCK	59	0200-545	2	CLIP,SAFETY,GAS SPRING
20	8102-143	2	CAPSCREW,HH,5/16-18UNC3.5,GD8	60	0402-932	1	BRACKET,SWITCH
21	0402-620	1	ASSY,WLMT,DOOR	61	0402-889	1	WLMT,DOOR,W/HINGES
22	0304-483	1	HANDLE,CAB	62	0402-878	2	HINGE,MALE
23	0304-485	2	SCREW,MACH,10-24x3/4,STAINLESS	63	0402-876	2	MNT,SENSOR,DOOR,LH
24	8040-246	8	NUT,HEX,NYLOCK,10-24 UNC,ZN				
25	0304-482	1	LOCK,CAB				
26	0304-381	8	SCREW,MACH,PH PAN HD 10-24X0.5				
27	0301-609	2	NUT,LOCK,STAR WASHER,#10-24NC				
28	0304-512	1	MNT,SENSOR,LOADER				
29	0304-574	1	HARNESS,DOOR				
30	0304-488	1	PLATE,STRIKER				
31	0304-573	1	HARNESS,WIPER,B				
32	0304-489	1	SPRING,GAS				
33	0310-587	2	CLAMP,WIRE,3/8,ADHESIVE				
34	0304-391	4	NUT,HEX,NYLOCK1/4-20,INSERT/CAP				
35	0304-646	1	PLATE, TOP				
36	0301-033	8	WASHER,FENDER,1/4 x 1 1/4,STL,				
37	0402-883	1	LOCK,CAB,W/INSIDE HANDLE				
38	0201-748	2	ASSY,TAG,EMERGENCY EXIT				
39	0310-495	7"	STRIP,LOCK				
40	1059-015	7	SEAL,WINDOW				

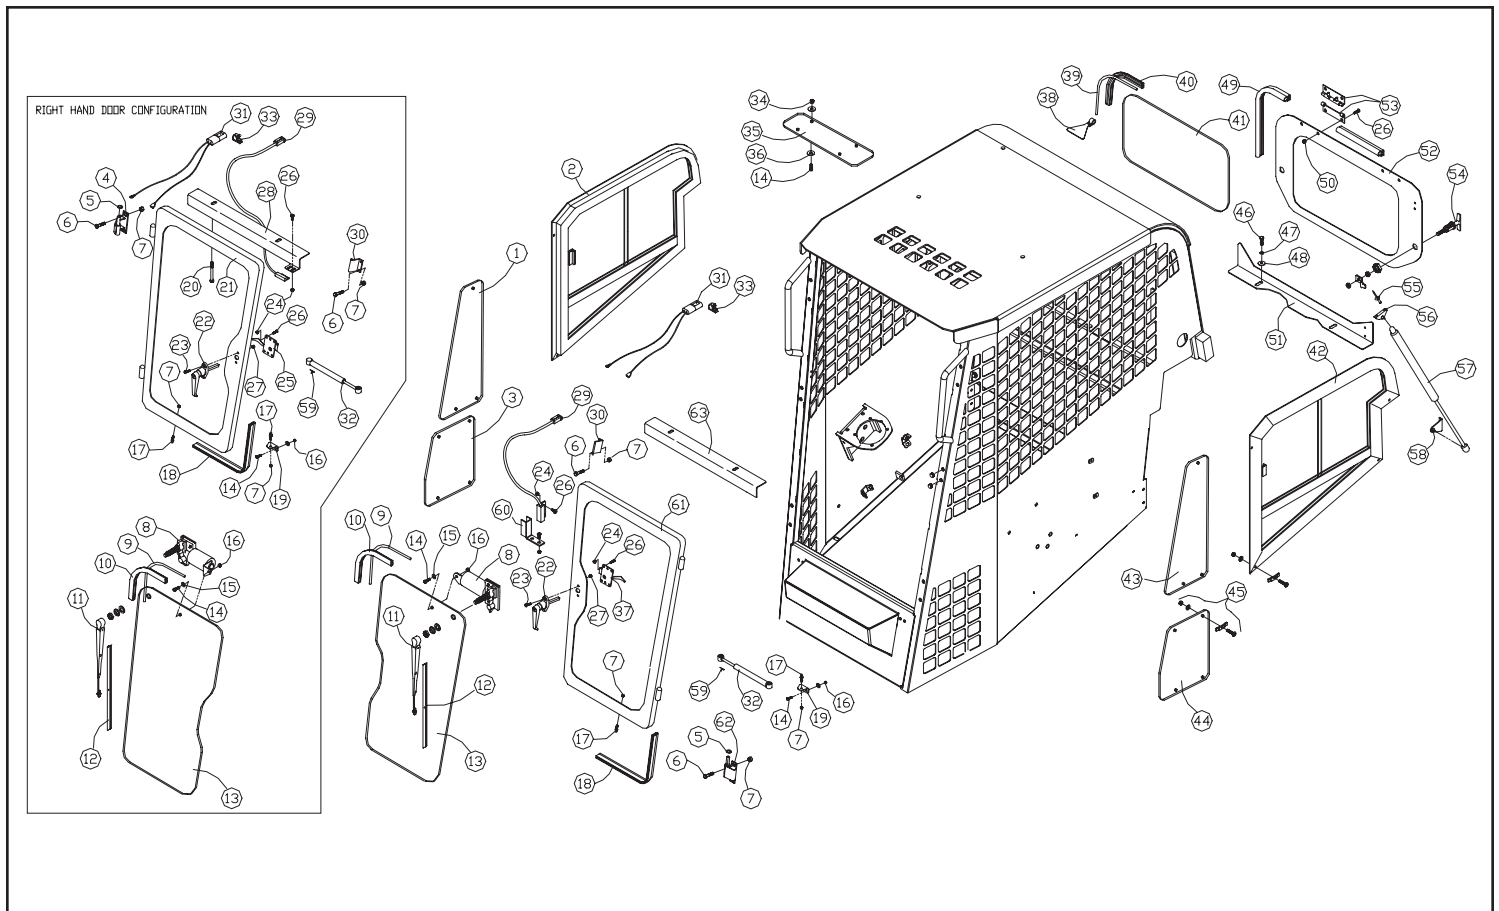

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0200-217	1	MAT,FLOOR,50 SERIES.	41	0200-271	3	DECAL,R-SERIES
2	0304-045	1	SEAT	42	0200-179	1	PLATE,SKID,CENTER
3	0304-248	1	BELT,SEAT 2" RETRACTABLE	43	0300-407	2	DECAL,TRACK,WARNING
4	0304-662	1	HARNESS,SWITCH,SEAT	44	0301-416	1	DECAL,FUEL-ONLY,DIESEL
5	8102-404	10	CAPSCREW,HH 1/2-13UNCx1.25 GD8	45	0200-006	1	WLMT,FILLER NECK,FUEL
6	8040-606	23	NUT,HEX,NYLOCK,1/2-13 UNC,ZN	46	8102-040	7	CAPSCREW,HH,1/4-20 UNCx.75,GD8
7	8102-042	5	CAPSCREW, HH 1/4-20UNC 1" GD8	47	0200-140	1	SCREEN,BACK,CHASSIS
8	0304-206	1	WLMT,MNT,SEAT,REAR	48	0310-516	1	CAP,FILLER,HOSE
9	8040-486	4	NUT,HEX,NYLOCK,3/8-16 UNC,ZN	49	8040-366	4	NUT,HEX,NYLOCK,1/4-20 UNC,ZN
10	0304-201	1	MNT,SEAT,FRAME	50	0304-515	1	SWITCH,SEAT
11	8102-130	4	CAPSCREW,HH 5/16-18x3/4,GR8	51	8051-212	10	WASHER,SPRING LOCK,1/4,ZN
12	0300-732	6	CLAMP,HOSE,#4	52	0200-105	1	PLATE,ENGINE,SURROUND
13	0200-361	1	HOSE,FUEL,3/16IDx35.00"	53	0200-235	1	WEIGHT,REAR
14	0200-353	1	HOSE,FUEL,5/16IDx30.00"	54	0200-167	2	WEIGHT
15	0304-600	1	ASSY,UNIT,SENDING,FUEL	55	8102-414	4	CAPSCREW,HH,1/2-13UNCx4.0,GD8,
16	0304-447	1	HOSE,7/16X5/16POLY,1.30FT	56	8050-347	8	WASHER,WROUGHT,1/2,STD,ZN
17	0301-375	1	WEIGHT,IN-TANK	57	8102-407	4	CAPSCREW,HH,1/2-13UNCx2.0,GD8,
18	0200-139	1	PLATE, SKID, REAR	58	0200-270	2	DECAL,POSI-TRACK,R-SERIES
19	8050-262	26	WASHER,WROUGHT,5/16,STD,ZN	59	8050-222	5	WASHER,WROUGHT,1/4,STD,ZN
20	0304-509	1	HOSE,FUEL,5/16x26"	60	0310-423	2	PLUG,STEEL,3.00"
21	0300-686	2	CLAMP,HOSE,2.0,#32	61	0200-437	2	PLUG,HOLE,6"
22	0304-037	1	HOSE,FILL,DIESEL,FUEL	62	0304-617	1	GASKET,TANK,FUEL
23	0304-315	1	DECAL,CONTROL,LIFT ARM	63	0304-157	6	SCREW,ORING,3/16-32x1/2,STAINL
24	0310-139	2	FILM-DANGER (LOADER) (CRUSHER)	64	8102-039	1	CAPSCREW,HH,1/4-20UNC X .625,GD8
25	0200-138	1	DECAL,FENDER,REAR,RH	65	2030-109	2	WEIGHT,REAR,SIDE
26	0200-135	1	WLMT,TANK,FUEL	66	8050-348	8	WASHER,1/2,SAE,ZN
27	0200-307	1	PLATE,FILLER,FLOOR	67	8051-332	8	WASHER,SPRING LOCK,1/2,ZN
28	0200-134	1	PLATE,SKID,FRONT	68	8051-407	8	CAPSCREW,HH,1/2-13UNCx2.0,GD8
29	8102-222	24	CAPSCREW,HH,3/8-16 UNCx1.0,GD8	69	0314-032	4	PLATE,LIFT,FRONT
30	8051-272	24	WASHER,SPRING LOCK,3/8,ZN	70	2030-190	4	BOLT,PLOW,1/2-13x1.50
31	0200-050	1	WLMT,CHASSIS	71	0201-066	2	PLATE,BOLT
32	0304-723	1	CLIP, HAIRPIN, .018 X 3.50	72	8040-606	4	NUT,HEX,NYLOCK,1/2-13 UNC,ZN
33	0304-316	1	DECAL,CONTROL,DRIVE				
34	8040-426	1	NUT,HEX,NYLOCK,5/16-18 UNC,ZN				
35	0304-401	1	BUMPER,STUD,MNT				
36	0304-425	1	SPRING,LOADER LOCK				
37	0200-080	1	WLMT,LOCKOUT,LOADER				
38	8102-413	1	CAPSCREW,HH,1/2-13 UNCx3.5,GD8				
39	0200-137	1	DECAL,FENDER,REAR,LH				
40	0304-313	1	DECAL,WARNING,LOADER LOCK				

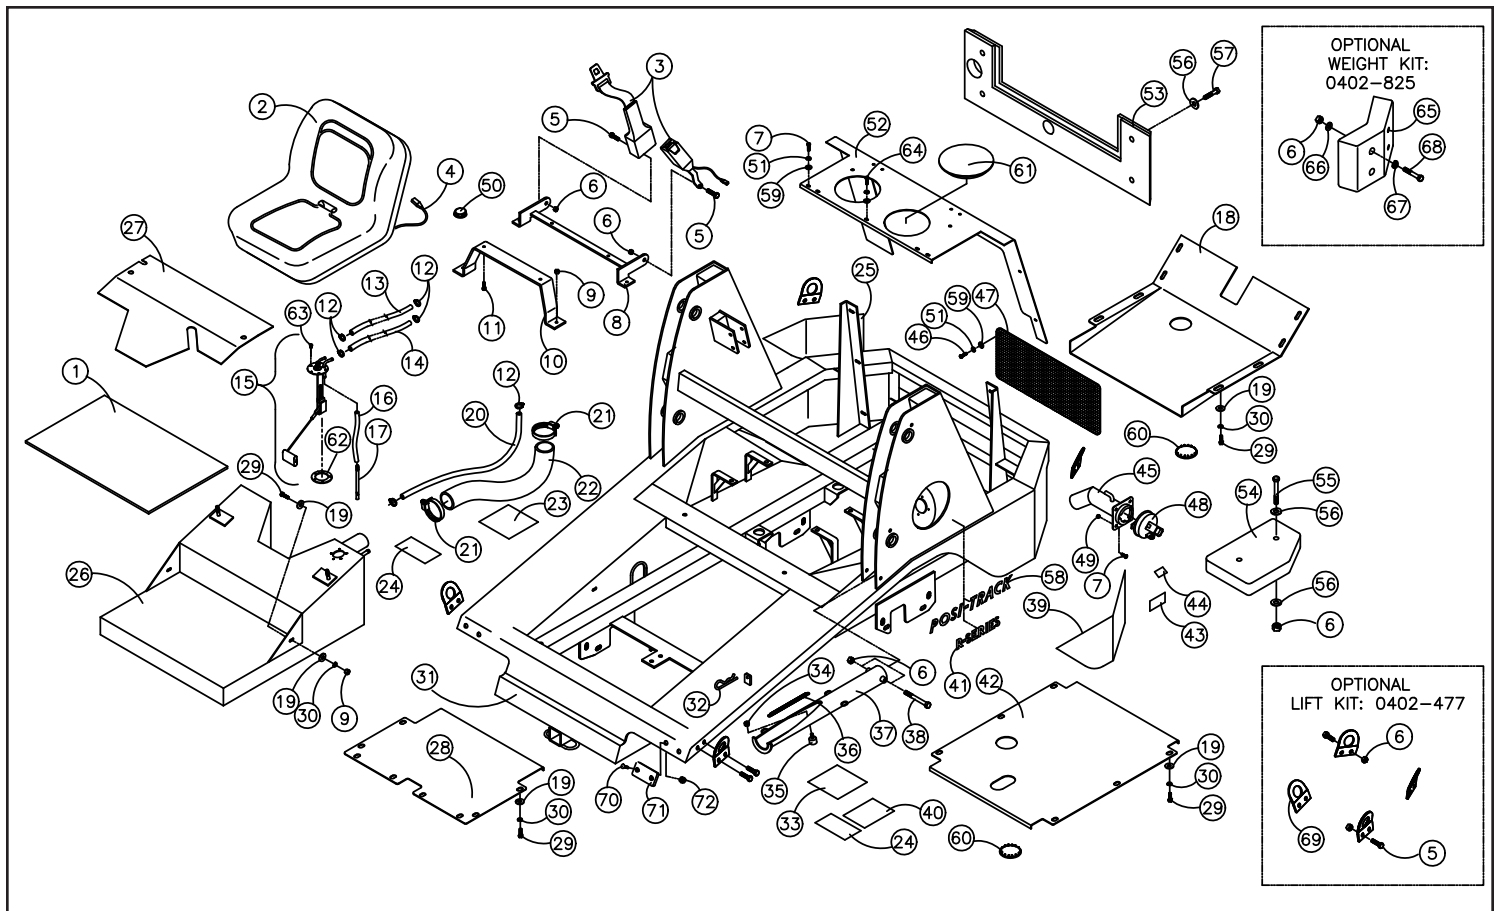


CHASSIS ASSEMBLY (SN: RSC 02286-Current)

<https://truckmanualshub.com/>

Section 4

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0200-217	1	MAT,FLOOR,50 SERIES.	41	0200-271	3	DECAL,R-SERIES
2	0304-045	1	SEAT	42	0200-179	1	PLATE,SKID,CENTER
3	0304-248	1	BELT,SEAT 2" RETRACTABLE	43	0300-407	2	DECAL,TRACK,WARNING
4	8050-222	5	WASHER,WROUGHT,1/4,STD,ZN	44	0301-416	1	DECAL,FUEL-ONLY,DIESEL
5	8102-404	10	CAPSCREW,HH 1/2-13UNCx1.25 GD8	45	0200-272	1	DECAL,ASV LOGO
6	8040-606	23	NUT,HEX,NYLOCK,1/2-13 UNC,ZN	46	8102-040	7	CAPSCREW,HH,1/4-20 UNCx.75,GD8
7	8102-042	5	CAPSCREW, HH 1/4-20UNC 1" GD8	47	0200-140	1	SCREEN,BACK,CHASSIS
8	0304-206	1	WLMT,MNT,SEAT,REAR	48	0310-516	1	CAP,FILLER,HOSE
9	8040-486	4	NUT,HEX,NYLOCK,3/8-16 UNC,ZN	49	0200-270	2	DECAL,POSI-TRACK,R-SERIES
10	0304-201	1	MNT,SEAT,FRAME	50	8102-410	4	CAPSCREW,HH 1/2-13UNCx2.75 GD8
11	8102-130	4	CAPSCREW,HH 5/16-18x3/4,GR8	51	8051-212	10	WASHER,SPRING LOCK,1/4,ZN
12	0300-732	6	CLAMP,HOSE,#4	52	0200-105	1	PLATE,ENGINE,SURROUND
13	0200-361	1	HOSE,FUEL,3/16IDx35.00"	53	0200-235	1	WEIGHT,REAR
14	0200-353	1	HOSE,FUEL,5/16IDx30.00"	54	0200-167	4	WEIGHT
15	0304-600	1	ASSY,UNIT,SENDING,FUEL	55	8102-416	4	CAPSCREW HH 1/2-13 x 5 GD 8
16	0304-447	1	HOSE,7/16X5/16POLY,1.30FT	56	8050-347	24	WASHER,WROUGHT,1/2,STD,ZN
17	0301-375	1	WEIGHT,IN-TANK	57	0310-423	2	PLUG,STEEL,3.00"PLUG,STEEL,3.00"
18	0200-139	1	PLATE, SKID, REAR	58	0304-157	6	SCREW,ORING,3/16-32x1/2
19	8050-262	26	WASHER,WROUGHT,5/16,STD,ZN	59	0304-662	1	HARNES,SWITCH,SEAT
20	0304-509	1	HOSE,FUEL,5/16x26"	60	2010-127	1	SWITCH,SEAT (TWIST IN STYLE)
21	0300-686	2	CLAMP,HOSE,2.0,#32	61	0304-617	1	GASKET,TANK,FUEL
22	0304-037	1	HOSE,FILL,DIESEL,FUEL	62	0200-437	2	PLUG,HOLE,6"
23	2030-188	2	FOAM,LOADER LOCK,15 1/2"	63	2030-190	4	BOLT,PLOW,1/2-13x1.50
24	0310-139	2	FILM-DANGER (LOADER) (CRUSHER)	64	0201-066	2	PLATE,BOLT
25	0200-138	1	DECAL,FENDER,REAR,RH	65	8040-606	4	NUT,HEX,NYLOCK,1/2-13 UNC,ZN
26	0200-135	1	WLMT,TANK,FUEL				
27	0200-307	1	PLATE,FILLER,FLOOR				
28	0200-134	1	PLATE,SKID,FRONT				
29	8102-222	24	CAPSCREW,HH,3/8-16 UNCx1.0,GD8				
30	8051-272	24	WASHER,SPRING LOCK,3/8,ZN				
31	2030-082	1	WLMT,CHASSIS,RC60				
32	2030-154	1	WLMT,LOCK,LOADER				
33	0314-032	4	PLATE,LIFT,FRONT				
34	0201-477	1	PIN,LOCKING,D-RING,3.00"				
35	2030-109	2	WEIGHT,REAR,SIDE				
36	0201-752	1	DECAL,BRACE,FENDER				
37	0310-423	2	PLUG,STEEL,3.00"				
38	8102-406	8	CAPSCREW,HH,1/2-13UNCx1.75,GD8				
39	0200-137	1	DECAL,FENDER,REAR,LH				
40	0304-313	1	DECAL,WARNING,LOADER LOCK				

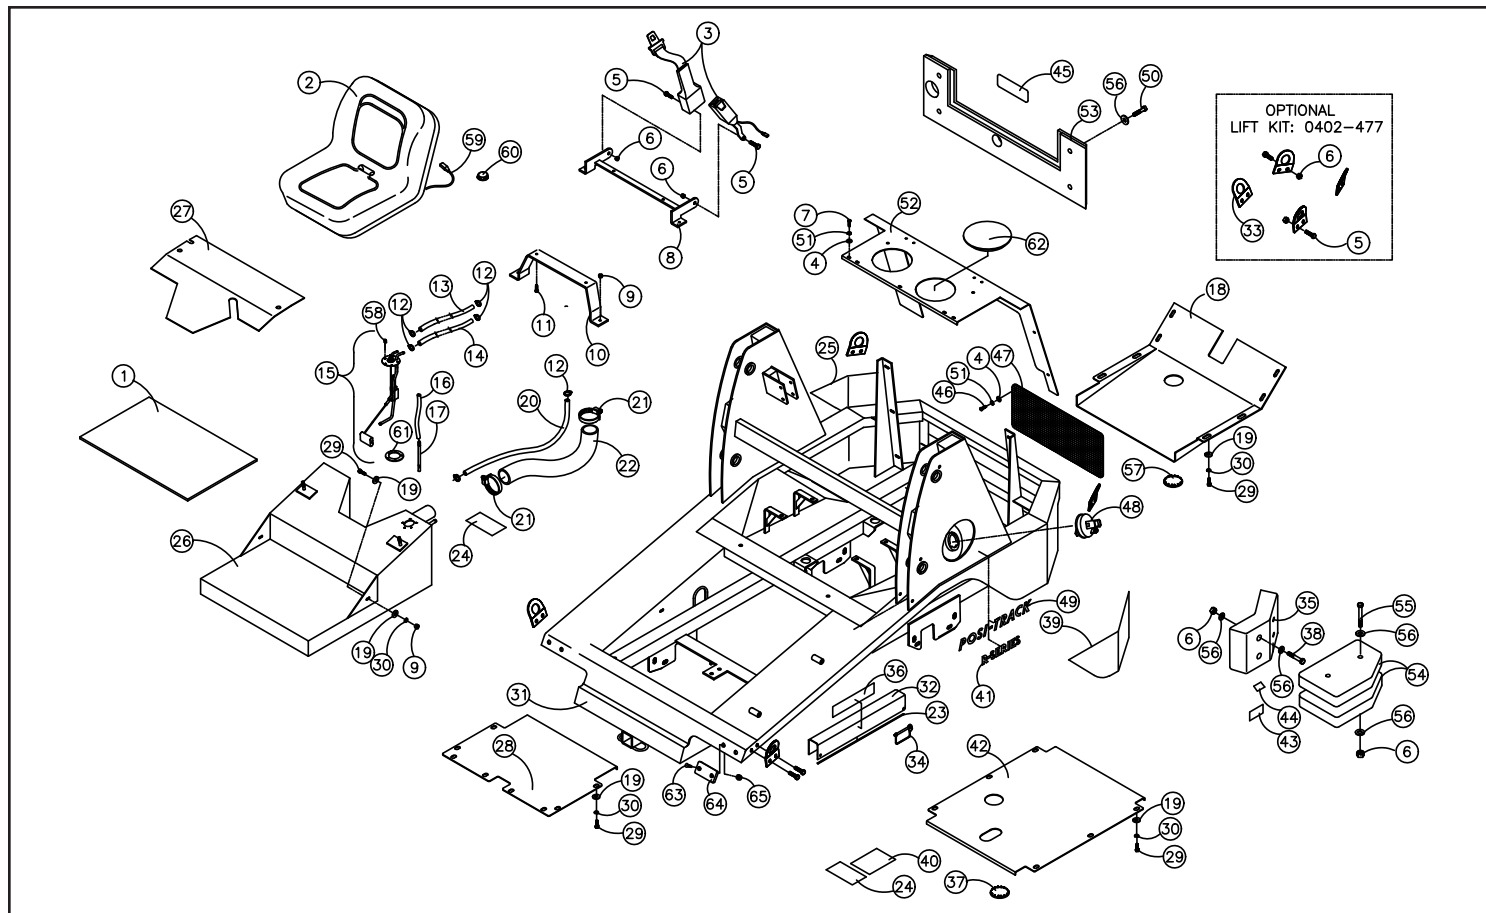


HOOD ASSEMBLY (SN: RSC 00101-Current)

<https://truckmanuals.sub.com/>

Section 5

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0200-141	1	DECAL,HOOD,SIDE,LH				
2	0200-143	1	SCREEN,HOOD,TOP				
3	0200-144	1	TRIM,SCREEN,TOP				
4	0200-146	1	TRIM,SEAL,HOOD				
5	0200-145	1	HOOD,RC-50				
6	8060-211	65	RIVET,BLIND,ALUM,0.125 x 0.75,				
7	0200-150	1	TRIM,HOOD,SCREEN,REAR				
8	0200-149	1	SCREEN,HOOD,REAR				
9	0302-042	2	LATCH,RUBBER,T-HANDLE				
10	8060-688	4	RIVET,BLIND,3/16 x .375 ABA				
11	0302-965	4	WASHER,RIVET,#7				
12	0200-142	1	DECAL,SIDE,HOOD,RH				
13	0200-148	2	TRIM,HOOD,SIDE				
14	0200-147	2	SCREEN,HOOD,SIDE				
15	0200-232	2	SPRING,GAS ASSIST				
16	0310-641	2	MOUNT,SHOCK,90^				
17	0200-289	2	WLMT,MNT,BRACKET,BALL STUD				
18	8040-366	4	NUT,HEX,NYLOCK,1/4-20 UNC,ZN				
19	8050-222	4	WASHER,WROUGHT,1/4,STD,ZN				
20	0310-648	4	SCREW,MACH,1/4-20UNCx1.25				
21	0310-640	2	HINGE,HOOD				
22	8060-731	8	RIVET,STAINLESS,3/16x.575				
23	8060-731	4	RIVET,ALUMINUM,3/16x.575				
24	0200-366	1	TRIM,SEAL,HOOD				

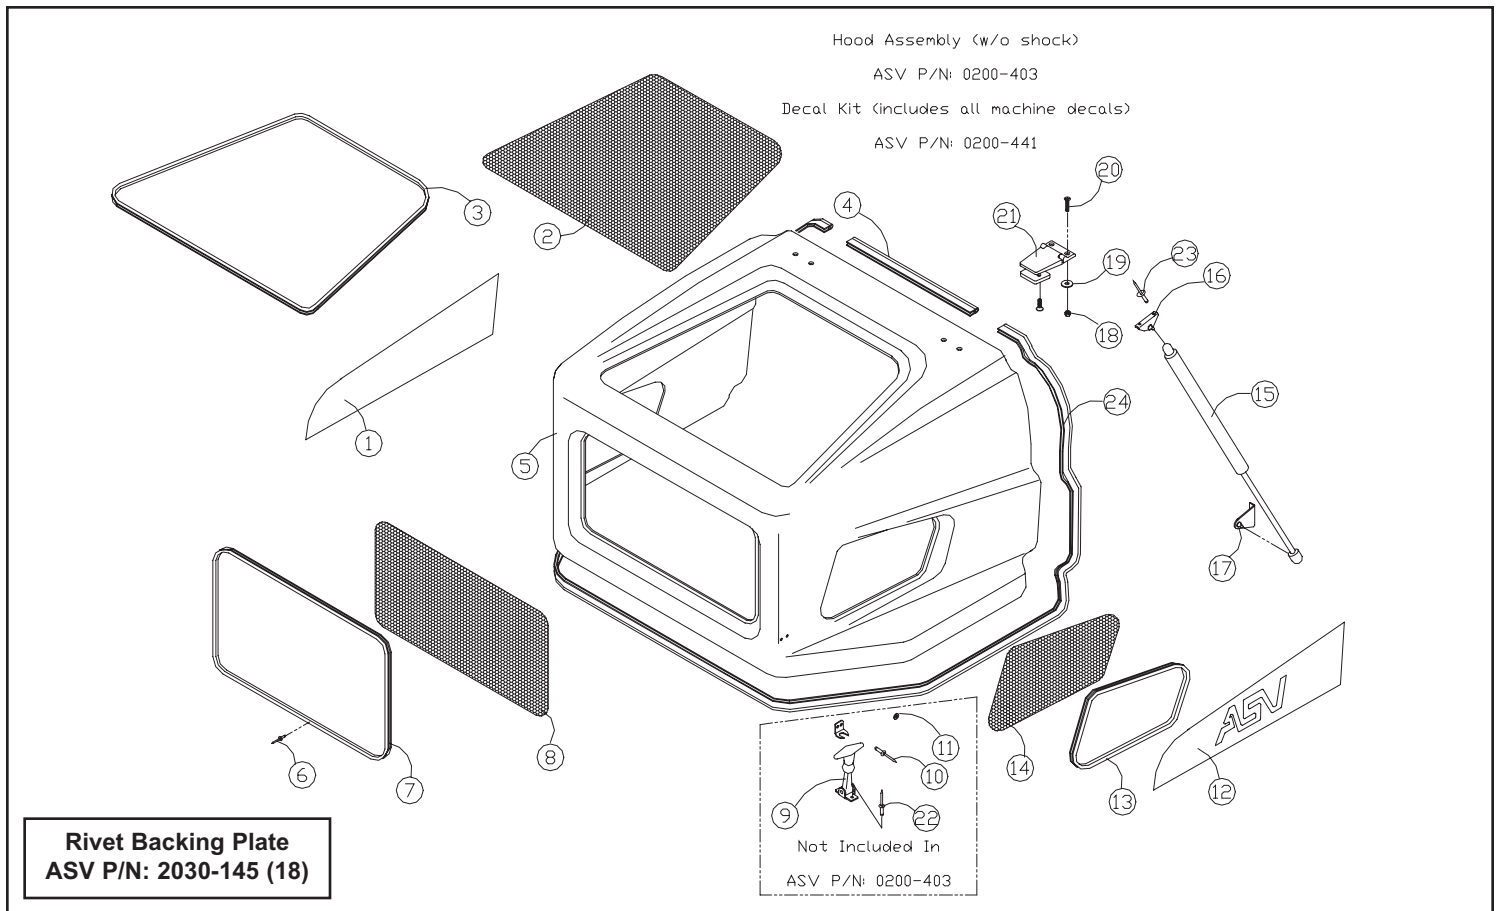


RADIATOR/OIL COOLER ASSEMBLY (SN: RSC 00101-2285)

<https://truckmanualshub.com/>

Section 6

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0200-336	4	CAPSCREW,HH,M6x1.0x40				
2	8102-040	11	CAPSCREW,HH,1/4-20 UNCx.75,GD8				
3	8051-212	11	WASHER,SPRING LOCK,1/4,ZN				
4	8050-222	11	WASHER,WROUGHT,1/4,STD,ZN				
5	0200-226	1	GUARD,FAN,RH				
6	0200-225	1	GUARD,FAN,LH				
7	0200-103	1	FAN,ENGINE,17"				
8	0304-035	1	HOSE,RADIATOR,TOP				
9	0300-686	4	CLAMP,HOSE,2.0,#32				
10	8040-366	11	NUT,HEX,NYLOCK,1/4-20 UNC,ZN				
11	0310-202	1	DECAL,WARNING,RADIATOR				
12	0200-358	1	CAP,RADIATOR,7PSI				
13	8060-728	8	RIVET,BLIND3/16X.550 1Y SSB66S				
14	0304-444	1	HOSE,7/16 x 5/16 POLY,3FT				
15	0200-086	1	ASSY,COOLER				
16	0300-289	2	ADAPTER,O-RING TO FLARE (16-12				
17	0200-087	1	SHROUD,FAN				
18	0304-036	1	HOSE,RADIATOR,BOTTOM				
19	0200-107	1	MNT,SHROUD,RH				
20	0200-106	1	MNT,SHROUD,LH				
21	0200-152	1	SPACER,FAN,3024C (W/O AIR CONDITIONING)				
22	8102-224	6	CAPSCREW,HH,3/8-16UNCx1.25,GD8				
23	8050-262	12	WASHER,WROUGHT,5/16,STD,ZN				
24	8040-486	6	NUT,HEX,NYLOCK,3/8-16 UNC,ZN				
25	0302-965	8	WASHER,RIVET,#7				
26	0307-439	2	ADAPTER,PLUG,8MB				
27	0200-360	1	SEAL,SHROUD,BOTTOM				
28	0200-359	1	SEAL,SHROUD,TOP				
29	0304-150	1	HOSE,12C2AT,3100PSI,64"				
30	0304-151	1	HOSE,12C2AT,3100PSI,45"				

If your machine falls between serial number 00101-2549 and the oil cooler needs to be replaced, you must update your machine to the current style cooler assembly. A kit is available that includes all components necessary for conversion. Order ASV PN: 0200-594.

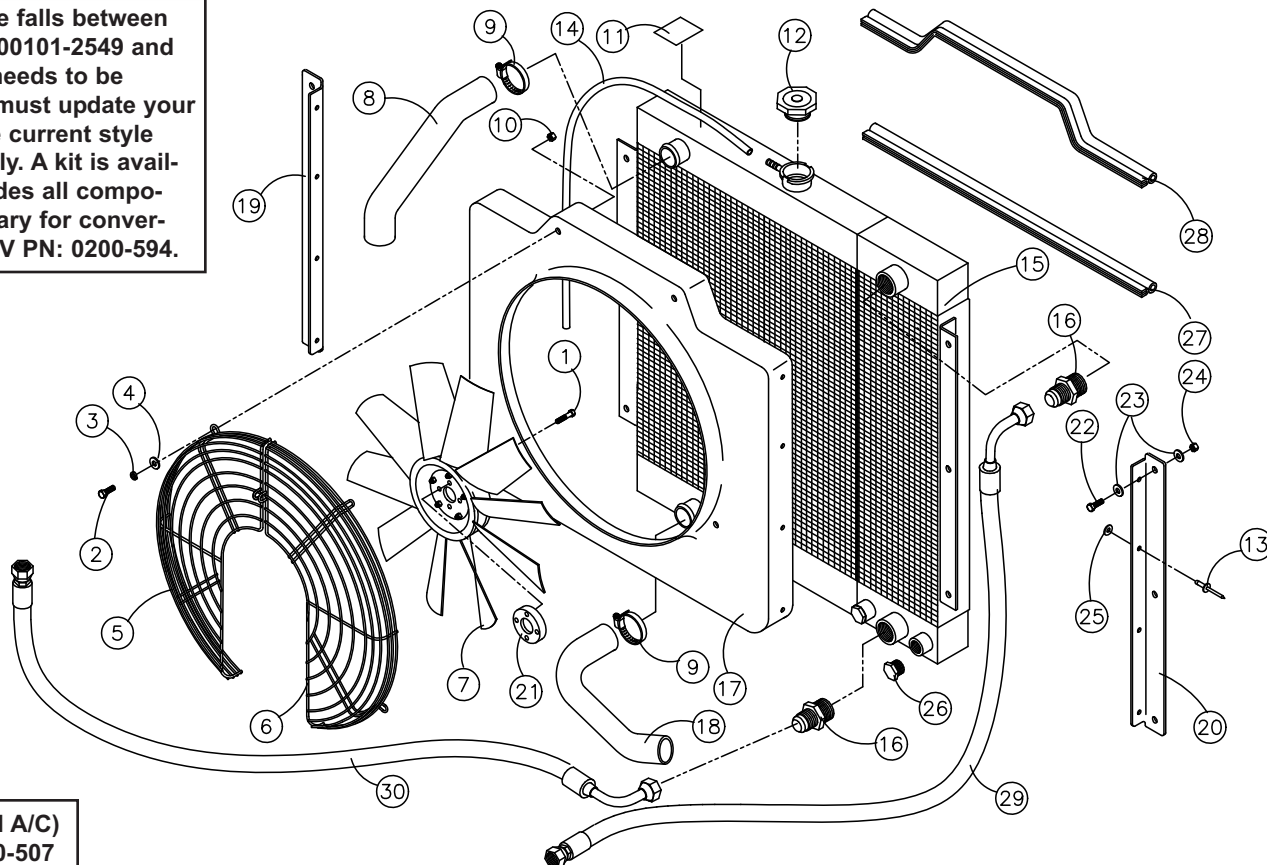

ITEM 21 (WITH A/C)
ASV P/N: 0200-507


RADIATOR/OIL COOLER ASSEMBLY (SN: RSC 02286-2549)

<https://truckmanualslib.com/>

Section 6

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0200-336	4	CAPSCREW,HH,M6x1.0x40				
2	8102-040	11	CAPSCREW,HH,1/4-20 UNCx.75,GD8				
3	8051-212	11	WASHER,SPRING LOCK,1/4,ZN				
4	8050-222	11	WASHER,WROUGHT,1/4,STD,ZN				
5	0200-226	1	GUARD,FANRH				
6	0200-225	1	GUARD,FAN,LH				
7	0200-103	1	FAN,ENGINE,17"				
8	0304-035	1	HOSE,RADIATOR, TOP				
9	0300-686	4	CLAMP,HOSE,2.0,#32				
10	8040-366	5	NUT,1/4-20UNC,NYLOK				
11	0310-202	1	DECAL,WARNING,RADIATOR				
12	0200-358	1	CAP,RADIATOR,7PSI				
13	8060-728	8	RIVET,BLIND3/16X.550 1Y SSB66S				
14	0304-444	1	HOSE,7/16 x 5/16 POLY,3FT				
15	0200-086	1	ASSY,COOLER				
16	2030-097	2	ADAPTER,FS6400-12-16-0				
17	0200-087	1	SHROUD,3024cT				
18	0304-036	1	HOSE,RADIATOR,BOTTOM				
19	2030-117	1	MNT,SHROUD,RH				
20	2030-116	1	MNT,SHROUD,LH				
21	0200-152	1	SPACER,FAN,3024C (W/O AIR CONDITIONING)				
22	8102-224	6	CAPSCREW,HH,3/8-16UNCx1.25,GD8				
23	8050-262	12	WASHER,WROUGHT,5/16,STD,ZN				
24	8040-486	6	NUT,HEX,NYLOCK,3/8-16 UNC,ZN				
25	0302-965	8	WASHER,RIVET,#7				
26	0307-439	2	ADAPTER,PLUG,8MB				
27	0200-360	1	SEAL,SHROUD,BOTTOM				
28	0200-359	1	SEAL,SHROUD, TOP				
29	2030-079	1	HOSE,12G1,12FFORX90S,12FFORX,6				
30	2030-078	1	HOSE,12G1,12FFORX90S,12FFORX90				

If your machine falls between serial number 00101-2549 and the oil cooler needs to be replaced, you must update your machine to the current style cooler assembly. A kit is available that includes all components necessary for conversion. Order ASV PN: 0200-594.

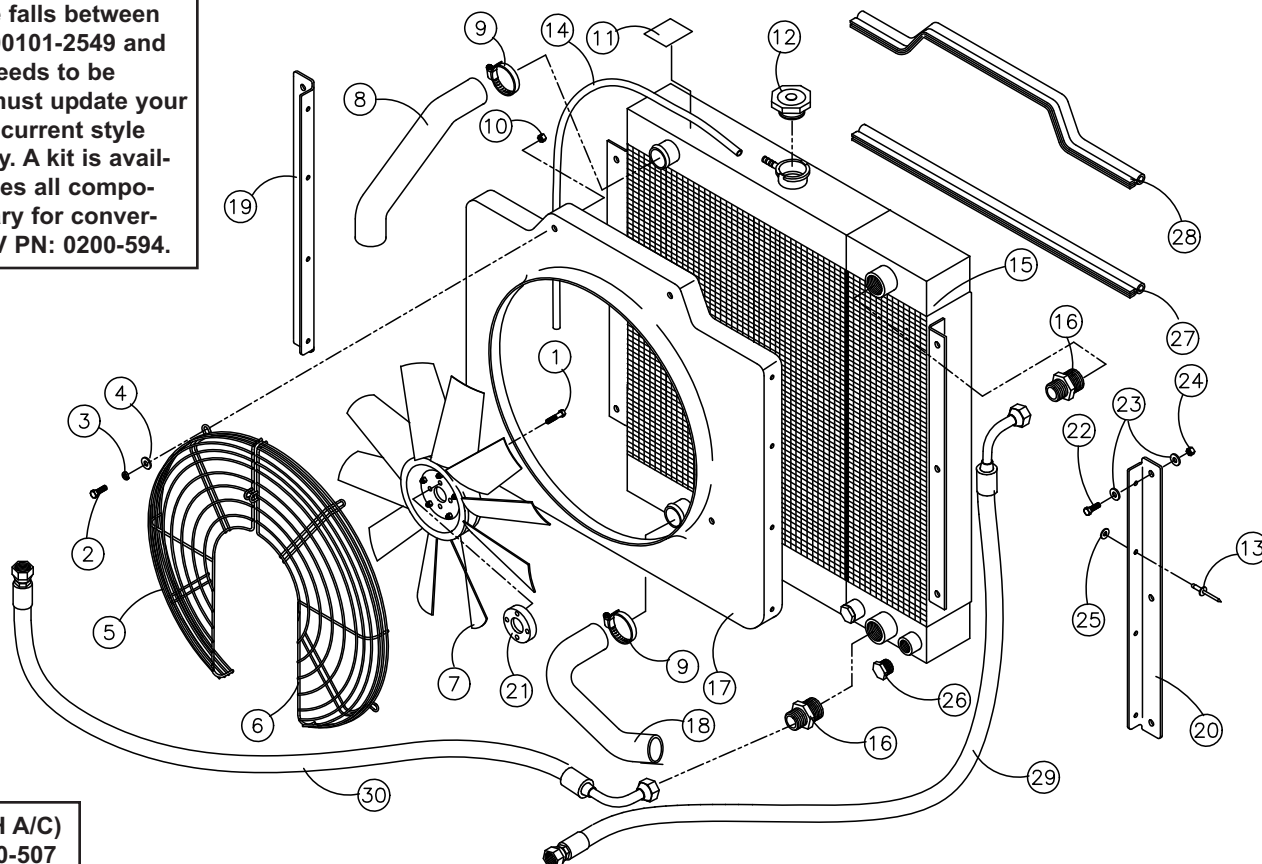


ITEM 21 (WITH A/C)
ASV P/N: 0200-507

RADIATOR/OIL COOLER ASSEMBLY (SN: RSC 02550-Current)

<https://truckmanualshub.com/>

Section 6

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0200-336	4	CAPSCREW,HH,M6x1.0x40				
2	8102-040	11	CAPSCREW,HH,1/4-20 UNCx.75,GD8				
3	8051-212	11	WASHER,SPRING LOCK,1/4,ZN				
4	8050-222	11	WASHER,WROUGHT,1/4,STD,ZN				
5	0200-226	1	GUARD,FANRH				
6	0200-225	1	GUARD,FAN,LH				
7	0200-103	1	FAN,ENGINE,17"				
8	0304-035	1	HOSE,RADIATOR,TOP				
9	0300-686	4	CLAMP,HOSE,2.0,#32				
10	8040-366	5	NUT,1/4-20UNC,NYLOK				
11	0310-202	1	DECAL,WARNING,RADIATOR				
12	0200-358	1	CAP,RADIATOR,7PSI				
13	8060-728	8	RIVET,BLIND3/16X.550 1Y SSB66S				
14	0304-444	1	HOSE,7/16 x 5/16 POLY,3FT				
15	0200-492	1	ASSY,COOLER				
16	2030-097	2	ADAPTER,FS6400-12-16-0				
17	2030-040	1	SHROUD,3024cT				
18	0304-036	1	HOSE,RADIATOR,BOTTOM				
19	2030-117	1	MNT,SHROUD,RH				
20	2030-116	1	MNT,SHROUD,LH				
21	0200-152	1	SPACER,FAN,3024C (W/O AIR CONDITIONING)				
22	8102-224	6	CAPSCREW,HH,3/8-16UNCx1.25,GD8				
23	8050-262	12	WASHER,WROUGHT,5/16,STD,ZN				
24	8040-486	6	NUT,HEX,NYLOCK,3/8-16 UNC,ZN				
25	0302-965	8	WASHER,RIVET,#7				
26	0307-439	2	ADAPTER,PLUG,8MB				
27	0200-360	1	SEAL,SHROUD,BOTTOM				
28	0200-359	1	SEAL,SHROUD,TOP				
29	2030-079	1	HOSE,12G1,12FFORX90S,12FFORX,6				
30	2030-078	1	HOSE,12G1,12FFORX90S,12FFORX90				

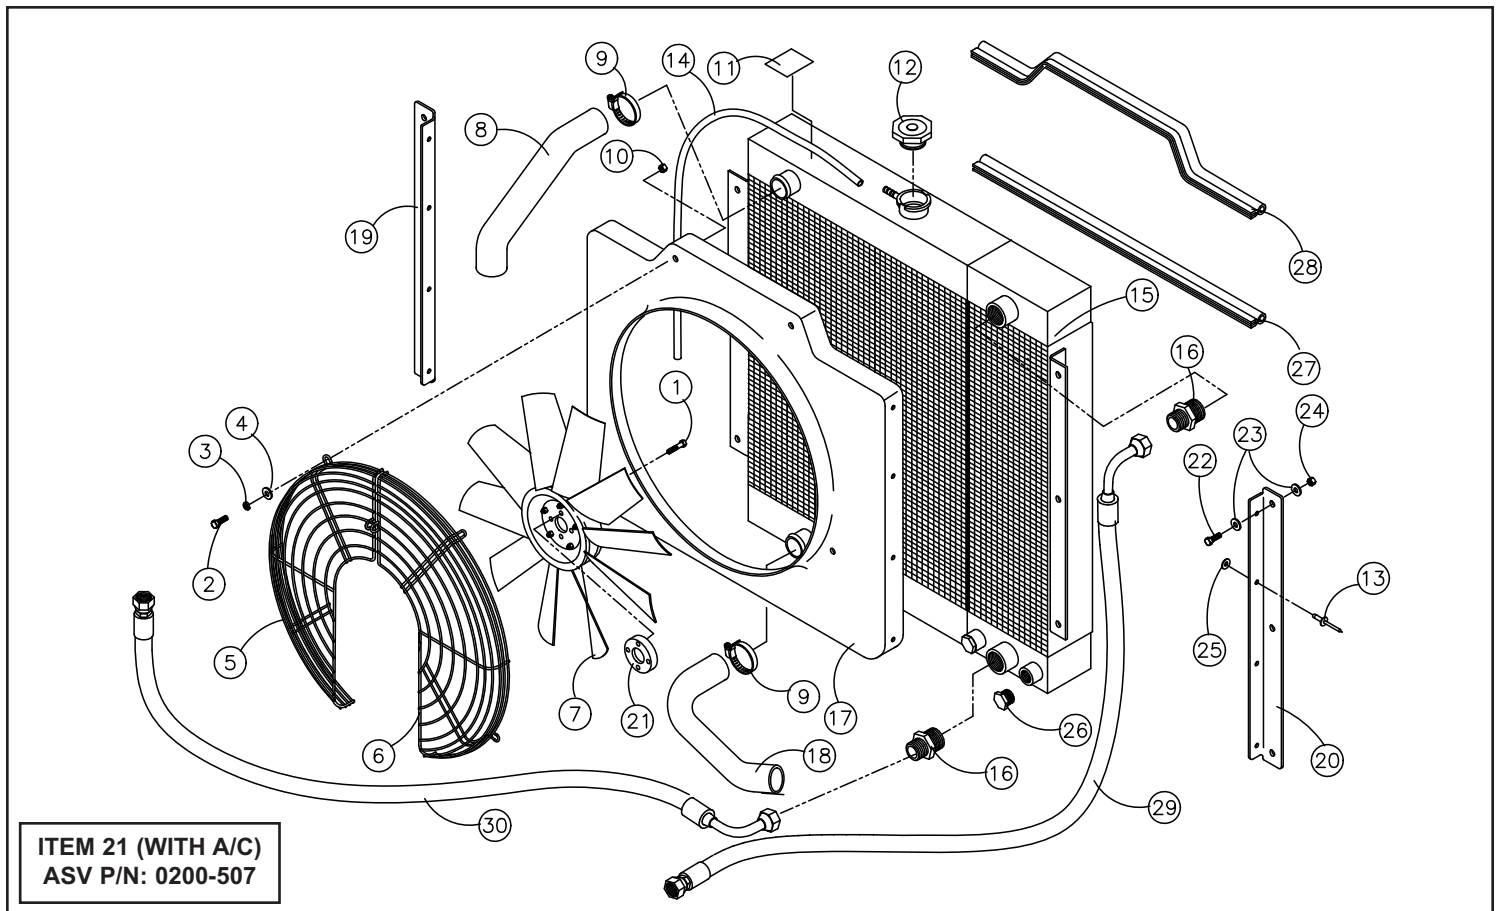


HYDRAULIC RESERVOIR ASSEMBLY (SN: RSC 00101-2285)

<https://truckmanualshub.com/>

Section 7

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0300-190	1	SCREEN,SUCTION				
2	0304-450	1	VALVE,RELIEF,RES.				
3	0304-832	1	CAP,SLOSH PROOF,0 PSI				
4	0304-452	1	ASSY,COVER,ACCESS				
5	0200-203	1	ASSY,FILTER,HYD,4-BOLT				
6	0200-204	1	ELEMENT,FILTER,MP				
7	0304-642	1	GAUGE,SIGHT 5"				
8	0307-879	1	SWITCH,TEMP,OIL,225° F				
9	8102-134	1	CAPSCREW,HH,5/16-18UNCx1.25GD8				
10	8102-132	3	CAPSCREW,HH,5/16-18UNCx1.0 GD8				
11	8040-426	4	NUT,HEX,NYLOCK,5/16-18 UNC,ZN				
12	0302-713	1	ADAPTER,O-RING TO FLARE (4-6)				
13	0200-201	1	RESERVOIR				
14	0304-384	2	CLAMP,HOSE # 16				
15	0304-442	1	HOSE,RES.				
16	0200-325	1	O-RING,FILTER CAP				
17	2030-093	1	ADAPTER,FS6804-06-06-06-NWO				
18	0200-221	1	GASKET,COVER,ACCESS				
19	8104-132	4	CAPSCREW,HH 5/16-24UNFx 1 GD 8				

ITEM 16 INCLUDES ALL IDENTIFIED O-RINGS

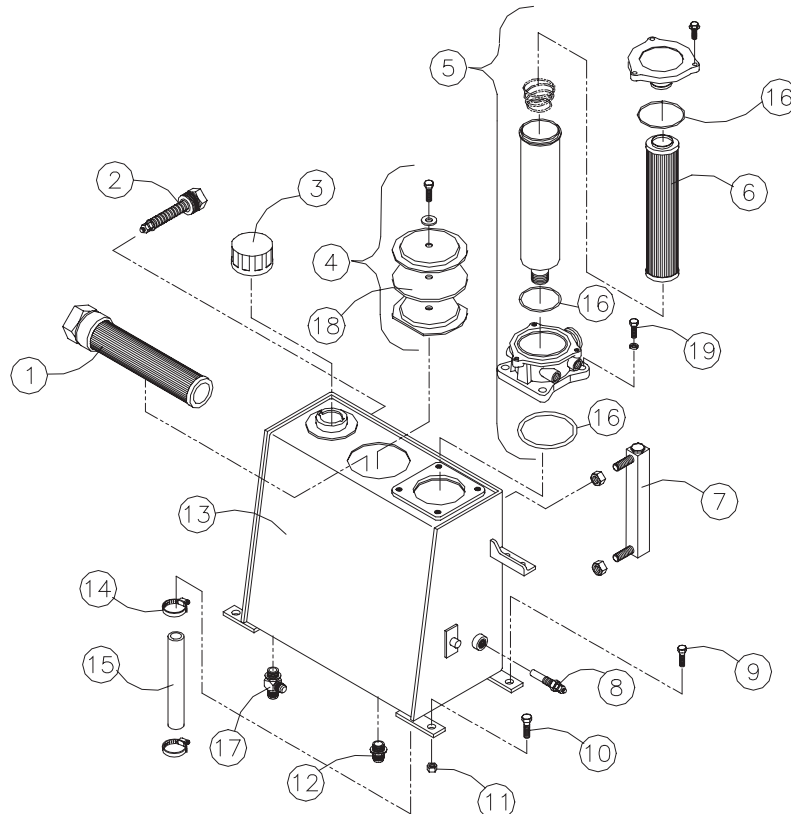


HYDRAULIC RESERVOIR ASSEMBLY (SN: RSC 02286-Current)

<https://truckmanualshub.com/>

Section 7

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0300-190	1	SCREEN,SUCTION				
2	0304-450	1	VALVE,RELIEF,RES.				
3	0304-832	1	CAP,SLOSH PROOF,0 PSI				
4	0304-452	1	ASSY,COVER,ACCESS				
5	0200-203	1	ASSY,FILTER,HYD,4-BOLT				
6	0200-204	1	ELEMENT,FILTER,MP				
7	0304-642	1	GAUGE,SIGHT 5"				
8	0307-879	1	SWITCH,TEMP,OIL,225° F				
9	8102-134	1	CAPSCREW,HH,5/16-18UNCx1.25GD8				
10	8102-132	3	CAPSCREW,HH,5/16-18UNCx1.0 GD8				
11	8040-426	4	NUT,HEX,NYLOCK,5/16-18 UNC,ZN				
12	0302-713	1	ADAPTER,O-RING TO FLARE (4-6)				
13	2030-066	1	RESERVOIR				
14	0304-384	2	CLAMP,HOSE # 16				
15	0304-442	1	HOSE,RES.				
16	0200-325	1	O-RING,FILTER CAP				
17	2030-093	1	ADAPTER,FS6804-06-06-06-NWO				
18	0200-221	1	GASKET,COVER,ACCESS				
19	8104-132	4	CAPSCREW,HH 5/16-24UNFx 1 GD 8				
20	0310-321	1	ADAPTER,12MFFOR-12MB90ADAPTER				

ITEM 16 INCLUDES ALL IDENTIFIED O-RINGS

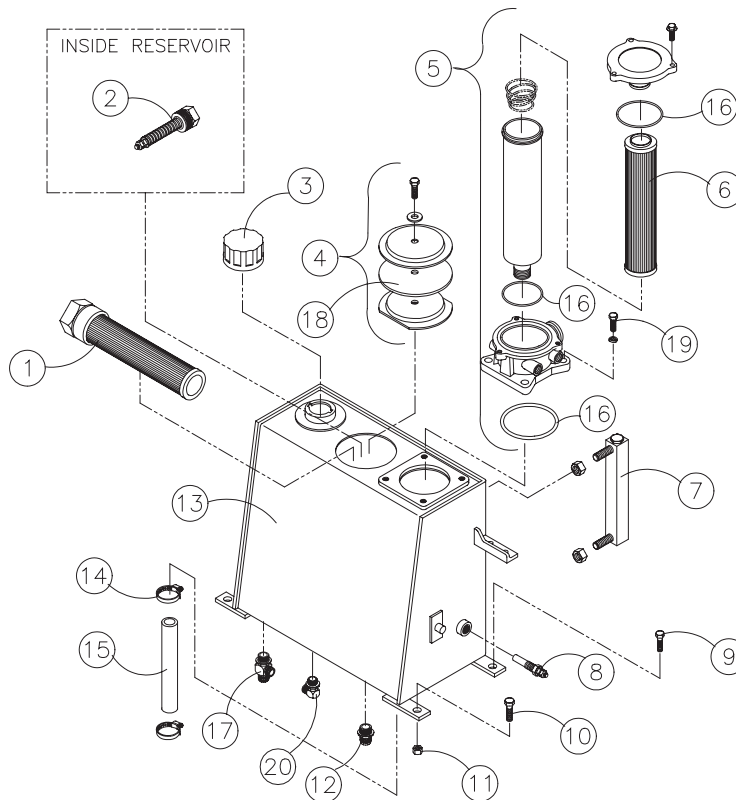


HYDRAULIC CONTROL ASSEMBLY (SN: RSC 00101-2285)

<https://truckmanualshub.com/>

Section 8

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0310-138	1	PLUG	41	0304-622	1	HOSE,4M3K,3000PSI,36.09
2	0201-263	1	JOYSTICK,CONTROL,HANDLE,RH	42	0304-498	1	PLATE,AUX.
3	0304-216	1	MNT,TUBE	43	8107-577	8	SCREW,PH,TH,1/4-20x1/2,ZN,GD8
4	0304-215	1	BRACKET	44	0304-144	1	HOSE,C2AT,4000PSI,13.5"
5	8102-222	2	CAPSCREW,HH,3/8-16 UNCx1.0,GD8	45	0304-230	1	HOSE,8M4K,4000PSI,26"
6	8104-040	8	CAPSCREW,HH 1/4-28UNFx .75 GD8	46	0304-231	1	HOSE,8M4K,4000PSI,28"
7	8040-396	8	NUT,HEX,NYLOCK,1/4-28 UNF,ZN	47	0118-165	2	SPOOL,SOLENOID,2POSITION,3WAY
8	0307-882	2	TIE,CABLE,BLACK,18.1",W/STL IN	48	0201-152	2	GRIP,CONTROL
9	0304-272	1	ASSY,CONTROL,LINE D	49	0201-775	1	BOOT,JOYSTICK,RH
10	0304-271	1	ASSY,CONTROL,LINE C	50	0304-516	1	MAGNET,DETENT
11	0304-137	2	ASSY,TUBE,VALVE,BOTTOM	51	0201-774	1	BOOT,JOYSTICK,LH
12	0304-136	2	ASSY,TUBE,VALVE, TOP	52	0304-441	1	SWITCH,PRESSURE
13	0304-328	2	ADAPTER,90°,10MJ-8MB90	53	0200-364	4	SOLENOID,W/DEUTSCH CONNECTOR
14	0300-288	2	ADAPTER,O-RING TO FLARE (8-8)	54	0118-164	1	SPOOL,SOLENOID,3POSITION,4WAY
15	0300-291	2	ADAPTER,O-RING TO FLARE (10-8)	55	0304-842	1	VALVE,ANTI-VOID
16	0301-397	1	ADAPTER,O-RING TO FLARE 90°	56	0201-557	1	VALVE,RELIEF,PORT,3000PSI
17	0302-713	18	ADAPTER,O-RING TO FLARE (4-6)	57	0304-186	1	PLUG,12 ORING,ALLEN HEAD
18	0304-383	1	ADAPTER,4MJ-6MB90				
19	0300-294	1	ADAPTER,O-RING TO FLARE 90°				
20	0304-020	1	VALVE,LOADER				
21	0304-268	1	ASSY,CONTROL,HOSE				
22	0304-270	1	ASSY,CONTROL,HOSE,B				
23	0304-269	1	ASSY,CONTROL,LINE,B				
24	0200-330	1	BRACKET,FILTER				
25	0304-267	1	ASSY,CONTROL,LINE				
26	0201-264	1	JOYSTICK,CONTROL,HANDLE,LH				
27	0304-159	4	ADAPTER,4 ORING-4 FLARE,90				
28	0304-088	1	TUBE,AUX, TOP				
29	0304-089	1	TUBE,AUX,BTM				
30	0304-395	2	CLAMP,PILOT LINES				
31	0304-155	2	HOSE,4C2AT,5800PSI,41.50				
32	0304-154	1	HOSE,4C2AT,5800PSI,51"				
33	0304-153	1	HOSE,4C2AT,5800PSI,47"				
34	0304-148	1	HOSE,4C2AT,5800PSI,48"				
35	0304-152	2	HOSE,4C2AT,5800PSI,62"				
36	0304-499	1	PLATE,STEERING				
37	0200-183	1	HOSE,4M3K,3000 PSI,52"				
38	0300-286	2	ADAPTER,O-RING TO FLARE (6-6)				
39	0200-326	1	ADAPTER,TEST PORT,#4 BLK				
40	0300-493	7	ADAPTER,O-RING TO FLARE (4-4)				

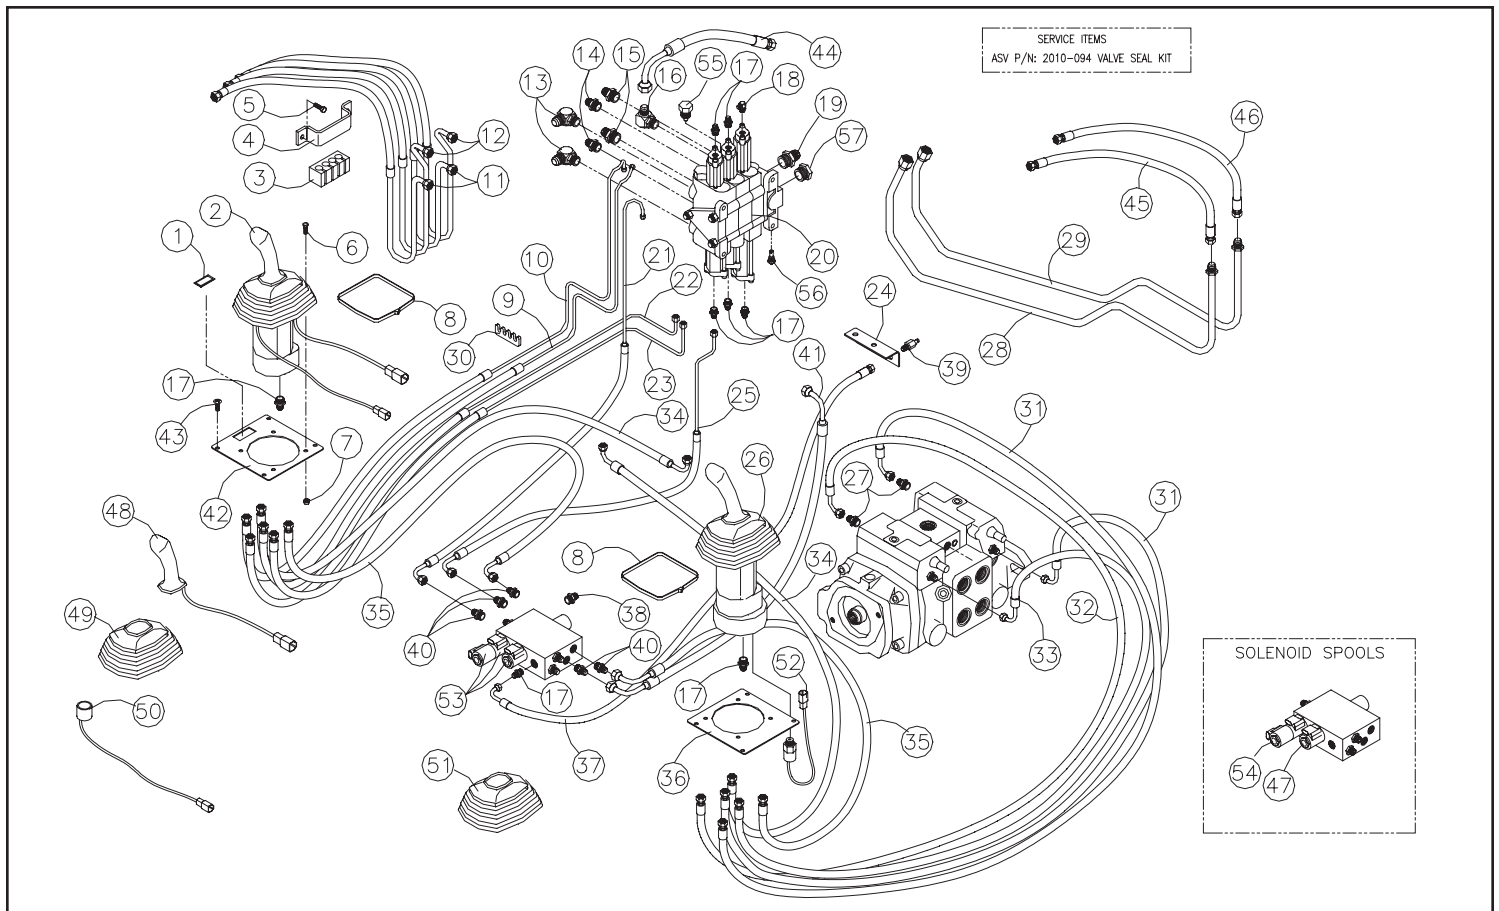


HYDRAULIC CONTROL ASSEMBLY (SN: RSC 02286-Current)

<https://truckmanualshub.com/>

Section 8

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0118-164	1	SPOOL,SOLENOID,3POSITION,4WAY	41	2030-036	1	HOSE,4G1,4FFORX90M,6FFORX,36.0
2	0201-263	1	ASSY,JOYSTICK,RH	42	0200-364	5	SOLENOID,W/DEUTSCH CONNECTOR
3	0201-625	1	VALVE,SELF-LEVELING	43	0118-165	2	SPOOL,SOLENOID,2POSITION,3WAY
4	2030-113	1	TUBE,LEVELER,FRONT	44	2030-112	1	TUBE,BUCKET,UPPER,LEVELER
5	2030-111	1	TUBE,LEVELER,REAR	45	2030-051	1	HOSE,4G1,4FFORX90S,4FFORX,41.5
6	8104-040	8	CAPSCREW,HH 1/4-28UNFx .75 GD8	46	2030-071	2	HOSE,10M4K,10FFORX,10FFORX,22.
7	8040-396	8	NUT,HEX,NYLOCK,1/4-28 UNF,ZN	47	0304-441	1	SWITCH,PRESSURE
8	0307-882	2	TIE,CABLE,BLACK,18.1",W/STL IN	48	2030-103	1	TUBE,LEVELER,TOP
9	2030-062	1	ASSY,LINE,CONTROL,UP,LOADER	49	2030-118	1	TUBE,RETURN,VALVE
10	2030-059	1	ASSY,LINE,CONTROL,DUMP,BUCKET	50	2030-005	1	TUBE,BOOM,LOWER,VALVE
11	2030-110	1	TUBE,BUCKET,LOWER,LEVELER	51	2030-104	1	TUBE,BOOM,LEVELER
12	0201-311	8	ADAPTER,FS6400-04-04-0	52	0201-668	2	ADAPTER,FF6801-10-10NW0
13	0310-330	2	ADAPTER,10MFFOR-8MB-90	53	0201-152	2	GRIP,CONTROL
14	0201-658	2	ADAPTER,10MFFOR-8MB-S	54	0201-775	1	BOOT,JOYSTICK,RH
15	0310-318	4	ADAPTER,10MFFOR-10MB	55	0304-516	1	MAGNET,DETENT
16	0310-313	1	ADAPTER,12MFFOR-12MB	56	0201-774	1	BOOT,JOYSTICK,LH
17	0201-309	18	ADAPTER,FS6400-04-06-0	57	0304-842	1	VALVE,ANTI-VOID
18	0201-319	1	ADAPTER,FS6801-04-06-NW0	58	2030-011	1	TUBE,BOOM,UPPER,VALVE
19	0310-321	1	ADAPTER,12MFFOR-12MB90				
20	0304-020	1	VALVE,LOADER				
21	2030-067	1	ASSY,LINE,CONTROL,TOP,AUX				
22	2030-057	1	ASSY,LINE,CONTROL,DOWN,LOADER				
23	2030-055	1	ASSY,LINE,CONTROL,CURL,BUCKET				
24	0200-330	1	BRACKET,FILTER				
25	2030-064	1	ASSY,LINE,CONTROL,BOTTOM,AUX.				
26	0201-264	1	ASSY,JOYSTICK,LH				
27	0201-314	3	ADAPTER,FS6801-04-04-NW0				
28	2030-004	1	TUBE,AUX,LOWER,VALVE				
29	2030-003	1	TUBE,AUX,TOP,VALVE				
30	0304-395	2	CLAMP,PILOT LINES				
31	2030-052	1	HOSE,4G1,4FFORX90S,4FFORX,47.5				
32	2030-050	1	HOSE,4G1,4FFORX,4FFORX,51.00"				
33	2030-049	1	HOSE,4G1,4FFORX,4FFORX,47.00"				
34	2030-054	1	HOSE,4G1,6FFORX90S,4FFORX,48.0				
35	2030-053	2	HOSE,4G1,4FFORX90S,4FFORX,62.0				
36	0310-339	2	ADAPTER,CAP,10FFOR				
37	2030-048	1	HOSE,4G1,4FFORX90S,4FJX,52.00"				
38	0310-329	2	ADAPTER,6MFFOR-6MB				
39	0200-326	1	ADAPTER,TEST PORT,#4 BLK				
40	0201-557	1	VALVE,RELIEF,PORT,3000PSI				

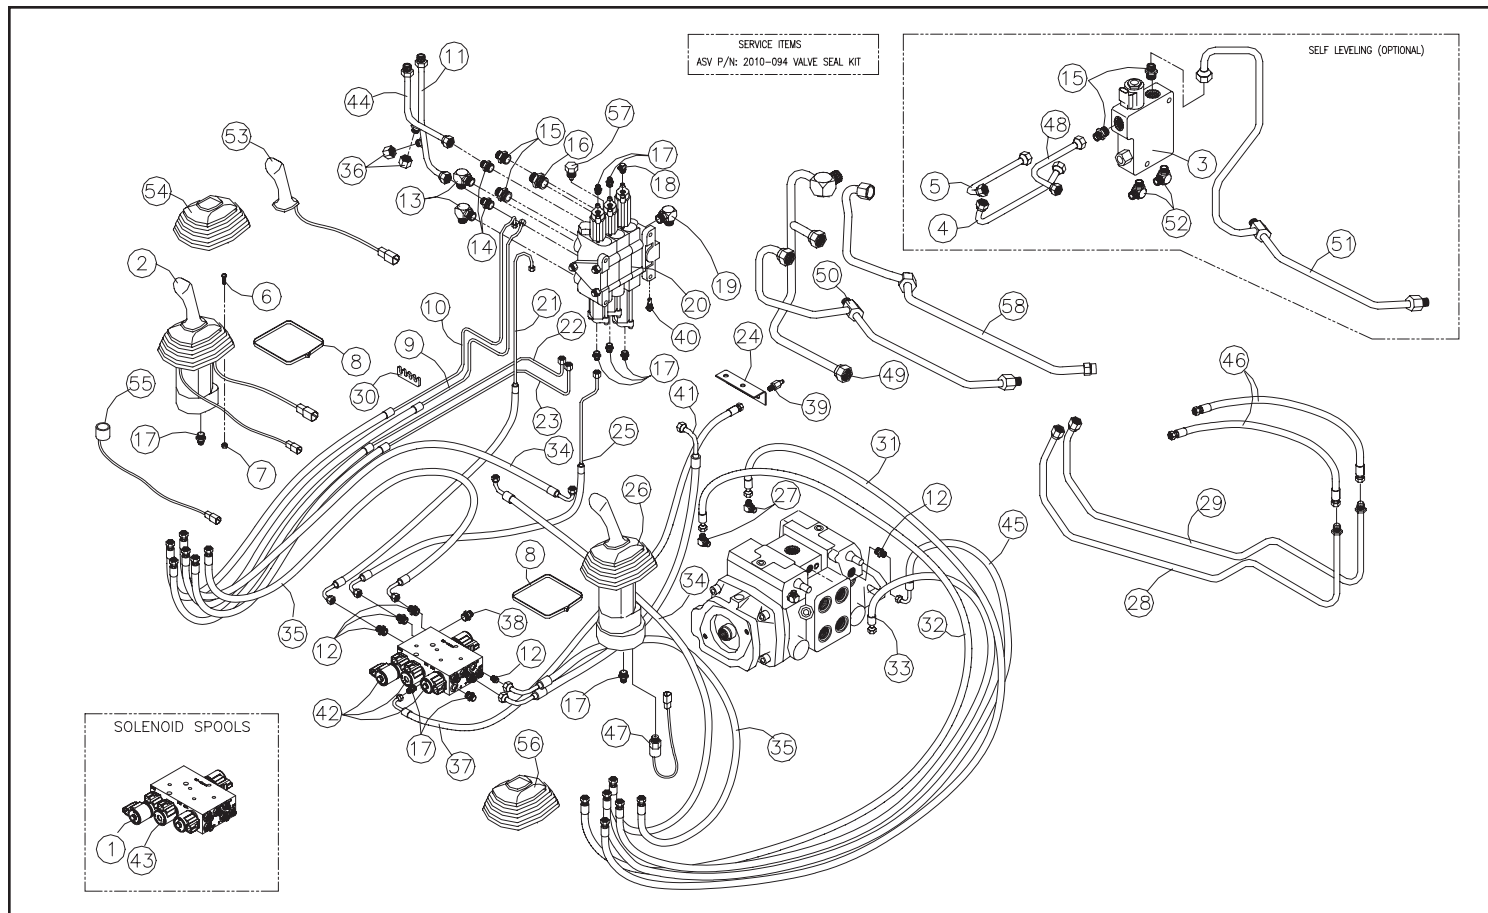


DRIVE/AUXILIARY PUMP ASSEMBLY (SN: RSC 00101-2285)

<https://truckmanualshub.com/>

Section 9

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0310-294	1	O-RING,#222,1.50x1.75x.13				
2	0200-002	1	MANIFOLD,PILOT GENERATION				
3	0300-286	3	ADAPTER,O-RING TO FLARE (6-6)				
4	0200-191	2	HOSE,4G2,5800 PSI,32.5"				
5	0200-259	1	HOSE,12G6K,6000 PSI,35.50"				
6	0200-197	1	HOSE,12G6K,6000 PSI,31.5"				
7	0200-194	1	HOSE,8M3K,3000 PSI,41"				
8	0310-329	2	ADAPTER,6MFFOR-6MB				
9	0200-195	1	HOSE,8M3K,3000 PSI,56.5"				
10	0200-216	1	TUBE,HYD,CHARGE PRESSURE				
11	0200-196	1	HOSE,12G6K,6000 PSI,44"				
12	0200-198	1	HOSE,12G6K,6000 PSI,47"				
13	0300-291	1	ADAPTER,O-RING TO FLARE (10-8)				
14	0200-172	1	COUPLING,SPLIT,CODE 61,0.75"				
15	0300-288	1	ADAPTER,O-RING TO FLARE (8-8)				
16	0300-294	2	ADAPTER,O-RING TO FLARE 90° (1				
17	0200-104	1	HUB,PUMP DRIVE,1 1/4" x 14 TOO				
18	2045-998	1	PUMP,TANDEM,TRANSMISSION				
19	0200-253	2	ADAPTER,12MB O-RING,12MJ,90° L				
20	0200-123	1	MANIFOLD,RES				
21	0200-193	1	HOSE,12M4K,4000 PSI,37"				
22	0200-192	1	HOSE,6G2,4800 PSI,41.5"				
23	0200-342	1	HOSE,INTAKE,1.50"IDx10.50"				
24	0300-687	4	CLAMP,HOSE,1.5,#24				
25	0200-355	1	ADAPTER,SPLINE				
26	0307-169	1	O-RING,AUXILIARY PUMP				
27	0200-124	1	TUBE,INTAKE,RC 50				
28	0200-171	1	COUPLING,SPLIT,CODE 61,1.25"				
29	0200-119	1	PUMP,HYD,AUX				
30	8051-272	2	WASHER,SPRING LOCK,3/8,ZN				
31	0304-227	1	HOSE,6C2AT,4800PSI,23"				
32	0310-468	8	CAPSCREW,HH,M10x1.5x35,ZINC PL				
33	0301-781	8	WASHER,SPLIT LOCK,10mm,ZN				
34	8102-222	2	CAPSCREW,HH,3/8-16 UNCx1.0,GD8				
35	0201-558	1	O-RING,0.984IDx0.139CS				
36	0403-001	4	O-RING VALVE RELIEF				
37	0403-002	4	O-RING BACK-UP VALVE RELIEF				
38	0201-876	4	VALVE,RELIEF,5500 PSI				
39	0403-100	1	RELIEF POSI POWER				

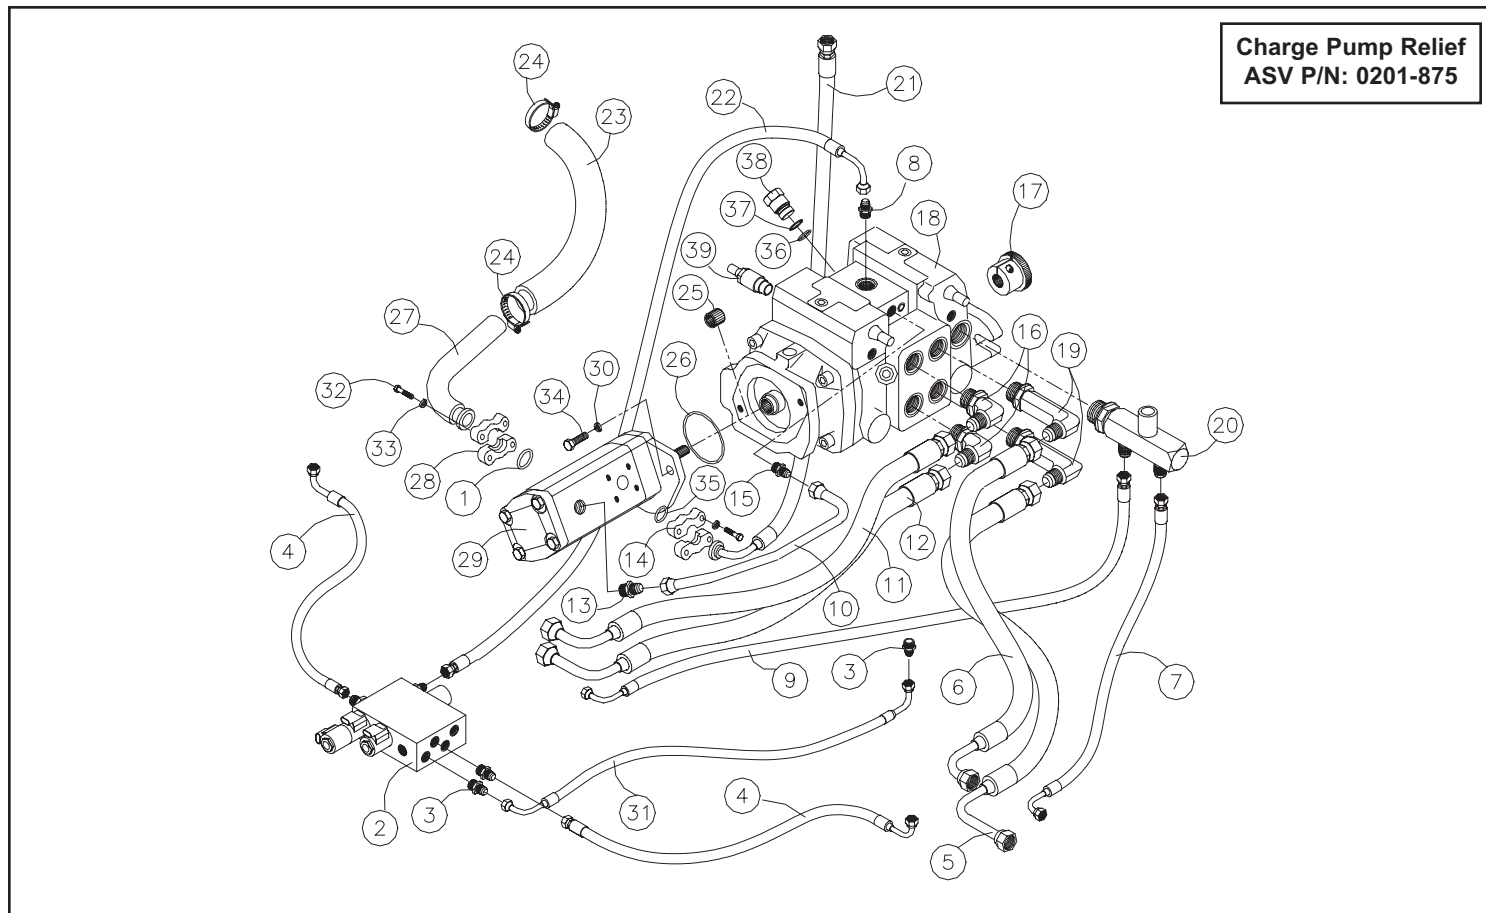


DRIVE/AUXILIARY PUMP ASSEMBLY (SN: RSC 02286-Current)



<https://truckmanualslib.com/>

Section 9

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	2030-045	2	HOSE,4G1,4FFORX90S,4FFORX,32.5				
2	2030-224	1	MANIFOLD,PILOT GENERATION				
3	0201-311	3	ADAPTER,FS6400-04-04-0				
4	8102-222	2	CAPSCREW,HH,3/8-16 UNCx1.0,GD8				
5	2030-043	1	HOSE,12G6K,12FFORX90L,12FFORX,				
6	2030-044	1	HOSE,12G6K,12FFORX90S,12FFORX,				
7	2030-039	1	HOSE,8G1,8FFORX,8FFORX-45,41.0				
8	0310-329	2	ADAPTER,6MFFOR-6MB				
9	2030-038	1	HOSE,8G1,8FFORX,8FFORX-45,56.5				
10	2030-091	1	TUBE,CHARGE,PRESSURE				
11	2030-041	1	HOSE,12G6K,12FFORX90S,12FFORX				
12	2030-042	1	HOSE,12G6K,12FFORX90L,12FFORX				
13	0310-314	1	ADAPTER,10MFFOR-8MB				
14	0200-172	1	COUPLING,SPLIT,CODE 61,0.75"				
15	0201-658	1	ADAPTER,10MFFOR-8MB-S				
16	0310-321	2	ADAPTER,12MFFOR-12MB90				
17	0200-104	1	HUB,PUMP DRIVE,1 1/4" x 14 TOO				
18	2045-998	1	PUMP,TANDEM,TRANSMISSION				
19	0201-316	2	ADAPTER,FS6801-L-12-12-NW0				
20	2030-072	1	MANIFOLD,DRAIN,CASE				
21	2030-037	1	HOSE,12M4K,12FL90M,12FFORX,37.				
22	2030-046	1	HOSE,6G1,6FFORX90S,6FFORX90L,2				
23	0200-342	1	HOSE,RES,1.5"IDx10.5"				
24	0300-687	4	CLAMP,HOSE,1.5,#24				
25	0200-355	1	ADAPTER,SPLINE				
26	0307-169	1	O-RING,AUXILIARY PUMP				
27	0200-124	1	TUBE,INTAKE,RC 50				
28	0200-171	1	COUPLING,SPLIT,CODE 61,1.25"				
29	0200-119	1	PUMP,HYD,AUX				
30	8051-272	2	WASHER,SPRING LOCK,3/8,ZN				
31	2030-047	1	HOSE,6G1,6FFORX90S,6FFORX,41.5				
32	0310-468	8	CAPSCREW,HH,M10x1.5x35,ZINC PL				
33	0301-781	8	WASHER,SPLIT LOCK,10mm,ZN				
34	0310-294	1	O-RING,#222,1.50x1.75x.13				
35	0201-558	1	O-RING,0.984IDx0.139CS				
36	0403-001	4	O-RING VALVE RELIEF				
37	0403-002	4	O-RING BACK-UP VALVE RELIEF				
38	0201-876	4	VALVE,RELIEF,5500 PSI				
39	0403-100	1	RELIEF POSI POWER				

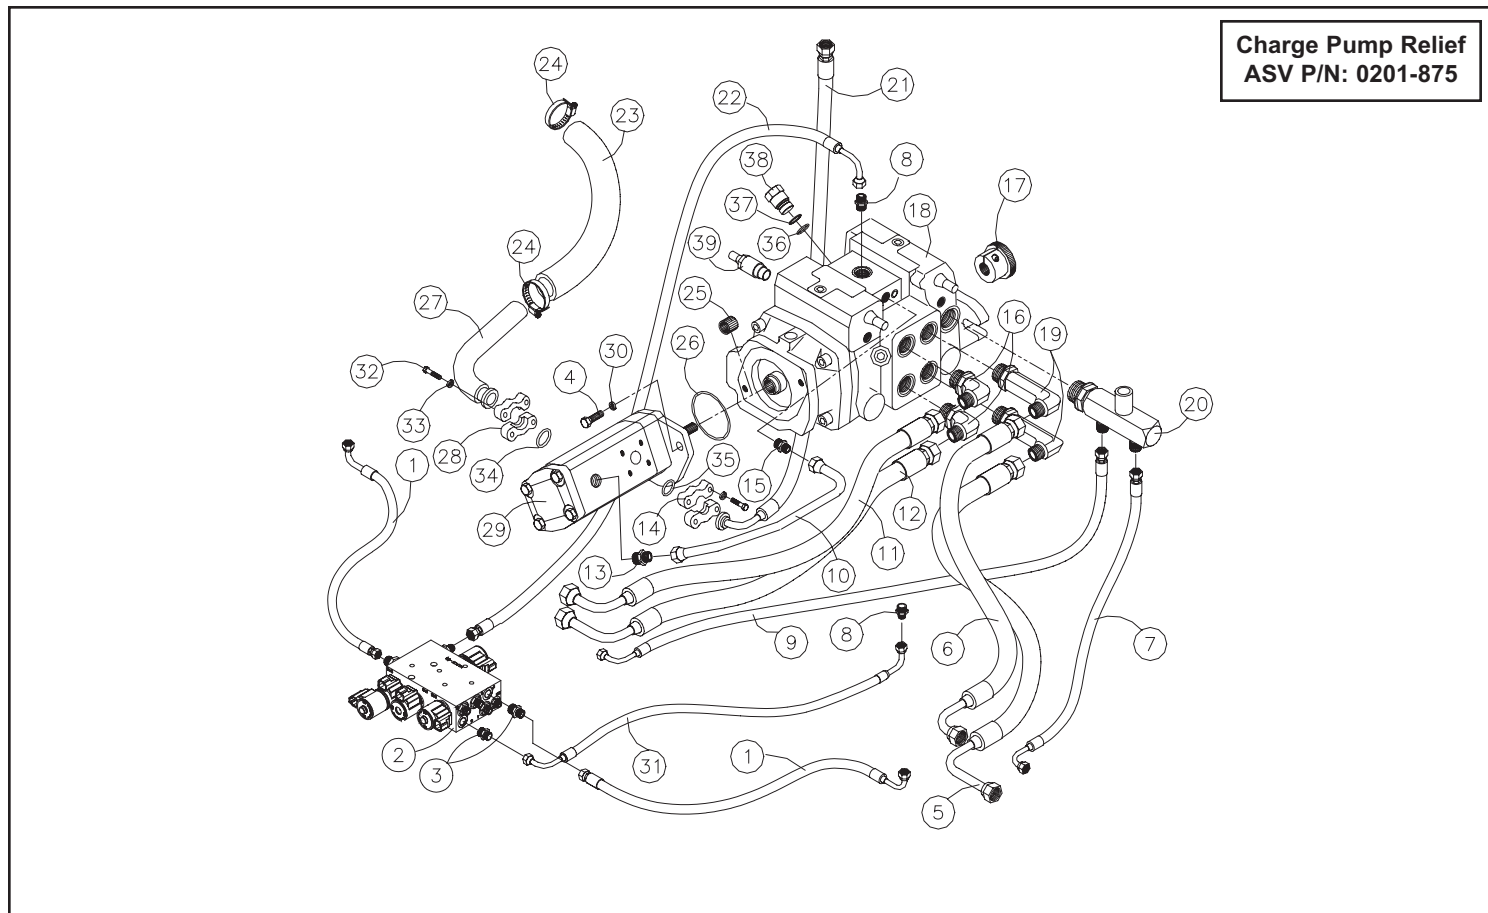

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	8040-726	4	NUT,HEX,NYLOCK,5/8-11 UNC,ZN	41	0304-835	1	BULB,PRIMER
2	0304-948	4	LIMITER,MNT,MOTOR	42	0300-455	1	CABLE,THROTTLE
3	0300-458	4	MOUNT,ENGINE,REAR	43	0200-234	1	CABLE,BATTERY,NEGATIVE
4	0300-686	2	CLAMP,HOSE,2.0,#32	44	0200-199	1	CABLE,BATTERY,POSITIVE
5	0200-156	1	ADAPTER,RUBBER,2.5X2.0	45	0304-131	8	CAPSCREW,HH, M14-1.5 X30MM,GD8
6	0200-157	1	ASSY,CLEANER,AIR	46	0200-178	1	WLMT,BRKT,MNT,FILTER
7	8102-591	4	CAPSCREW,HH,5/8-11x3,YZ	47	0200-377	1	FILTER,OIL,ENGINE (PERKINS #140517050)
8	0200-165	1	WLMT,MNT,ENGINE,RH	48	0300-732	4	CLAMP,HOSE,#4
9	0304-900	1	MNT,PLATE,PUMP	49	0304-509	1	HOSE,FUEL,5/16x26"
10	0304-507	1	PLATE,FLYWHEEL	50	0304-510	1	HOSE,FUEL,5/16x34"
11	0200-111	1	ENGINE,PERKINS,404C-22	51	0200-215	1	ASSY,FILTER,FUEL,PERKINS,404C22
12	0200-166	1	WLMT,MNT,ENGINE,LH	52	0200-213	1	FILTER,FUEL,PERKINS,404C22
13	0200-562	1	STARTER (PERKINS #185086600)	53	8102-220	2	CAPSCREW,HH,3/8-16x0.75",GD8
14	0304-503	1	VALVE,DUST	54	0310-501	1	GUARD,BATTERY
15	0200-339	1	FILTER,AIR,PRIMARY	55	8040-486	2	NUT,HEX,NYLOCK,3/8-16 UNC,ZN
16	0200-340	1	FILTER,AIR,SECONDARY	56	8102-132	8	CAPSCREW,HH,5/16-18UNCx1.0 GD8
17	0200-158	1	BAND,MNT,AIR CLEANER	57	0300-546	1	CABLE,GROUND,ENGINE
18	0200-329	5	CAPSCREW,HH,M8x1.25x16MM	58	0200-159	1	BRKT,MNT,AIR CLEANER
19	8051-242	17	WASHER,SPRING LOCK,5/16,ZN	59	8051-272	21	WASHER,SPRING LOCK,3/8,ZN
20	0200-034	1	MNT,ENGINE,REAR,RH	60	8102-222	20	CAPSCREW,HH,3/8-16 UNCx1.0,GD8
21	8040-426	2	NUT,HEX,NYLOCK,5/16-18 UNC,ZN	61	8102-138	1	CAPSCREW,HH,5/16-18 X 2.25 GD8
22	8102-130	7	CAPSCREW,HH 5/16-18x3/4,GR8	62	0304-351	1	CHANNEL,TREAD,LOADER RC-30
23	8050-247	2	WASHER,WROUGHT,5/16,SAE,ZN	63	0200-335	6	SPRING,TAIPIPE
24	0300-211	4	CAPSCREW,M8 x 1.25 x 25MM LG	64	0200-333	1	TAILPIPE,CENTER
25	0304-511	1	GASKET,MUFFLER	65	0200-332	1	TAILPIPE,W/MTG FLANGE
26	0200-334	1	TAILPIPE, OUTLET	66	0200-312	1	ASSY,TAILPIPE
27	0300-263	1	CLAMP,MUFFLER,2"	67	0304-549	1	HEATER,BLOCK
28	0200-122	1	MUFFLER,50 SERIES	68	0200-313	1	INDICATOR,AIRCLEANER
29	2045-793	1	BELT,FAN	69	0200-617	1	SCREEN,FILTER,WATER
30	8040-246	2	NUT,HEX,NYLOCK,10-24 UNC,ZN	70	0200-560	1	CAP,AIR CLEANER
31	0304-078	1	LEVER,THROTTLE	71	2030-279	1	GUARD,RAIN, STARTER
32	8105-429	2	CAPSCREW,SOC HD,10-24X5/8,BLZN				
33	8051-431	8	WASHER,SPRING LOCK,5/8,ZN				
34	0200-246	1	STRAP,HOLD-DOWN,BATTERY				
35	0200-338	1	ASSY,FILTER,WATER				
36	0200-160	1	BATTERY,50 SERIES				
37	0304-335	2	BOLT,BATTERY,SIDEMOUNT				
38	0200-219	1	WLMT,MNT,ENGINE,LH,REAR				
39	0300-718	2	W/PIN,CLEVIS (THROTTLE CABLE)				
40	0300-581	1	W/NUTS,U-BOLT,1/4-20				

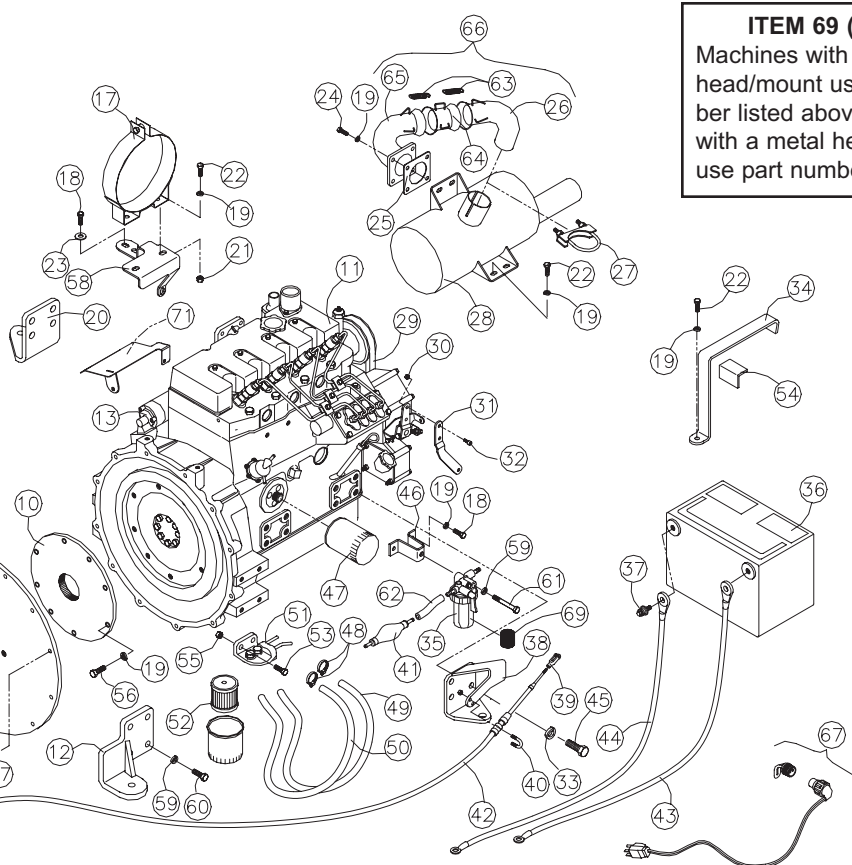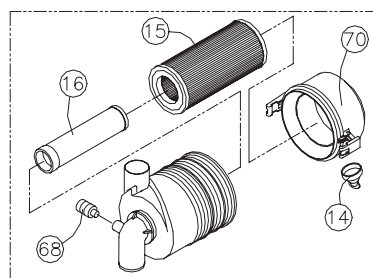

ITEM 69 (screen)


Machines with a plastic head/mount use the number listed above. Machines with a metal head/mount, use part number 0200-561.

FUSE PANEL ASSEMBLY (SN: RSC 00101-2285)

<https://truckmanualshub.com/>

Section 11


REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0200-558	1	HARNESS,WIRING,MAIN,RC50 (SERIAL #: 1554-2285)				
2	0310-807	2	RELAY,MINI, 35 AMP				
3	0310-805	1	FUSE,MAXI, 80 AMP				
4	0304-519	2	RELAY,PLUG,GLOW				
5	0310-800	1	FUSE,MAXI,20 AMP				
6	0310-803	2	FUSE,MAXI, 50 AMP				
7	0310-802	2	FUSE,MAXI, 40 AMP				
8	0310-794	3	FUSE,MINI, 5 AMP				
9	0310-795	9	FUSE,MINI,10 AMP				
10	0310-793	2	FUSE,MINI,2 AMP				
11	0310-806	11	RELAY,MICRO, 20 AMP				
12	0310-811	1	DIODE, 3 AMP				
13	0200-559	1	COVER,PANEL,FUSE,W/DECALS,RC50				
14	0200-510	1	RESISTOR,330HM/3WATT,OHMITE43F				

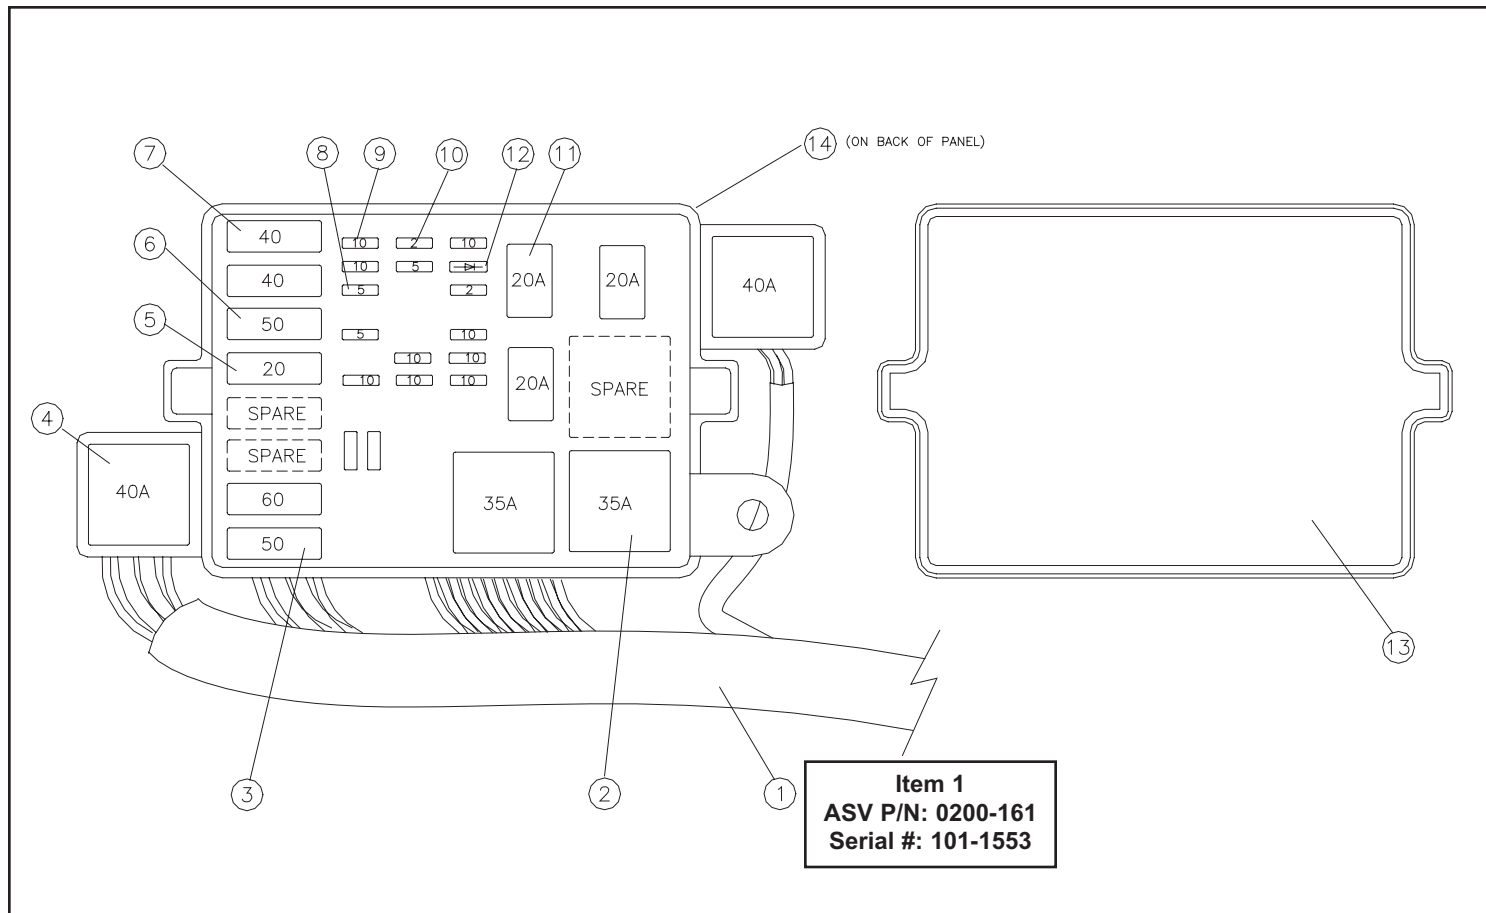

ASSEMBLY (SN: RSC
<https://truckmanualshub.com/>

Section 11

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	2030-226	1	HARNESS,W/FUSE PANEL				
2	0310-807	2	RELAY,MINI, 35 AMP				
3	0310-805	1	FUSE,MAXI, 80 AMP				
4	0304-519	2	RELAY,PLUG,GLOW				
5	0310-800	1	FUSE,MAXI,20 AMP				
6	0310-803	2	FUSE,MAXI, 50 AMP				
7	0310-802	2	FUSE,MAXI, 40 AMP				
8	0310-794	3	FUSE,MINI, 5 AMP				
9	0310-795	9	FUSE,MINI,10 AMP				
10	0310-793	2	FUSE,MINI,2 AMP				
11	0310-806	11	RELAY,MICRO, 20 AMP				
12	0310-811	1	DIODE, 3 AMP				
13	0310-796	1	FUSE,MINI,15 AMP				
14	0310-801	1	FUSE,MAXI, 30 AMP				
15	0310-798	2	FUSE,MINI,25 AMP				
16	2030-196	1	COVER,PANEL,FUSE,W/DECALS,RC60				
17	0200-510	1	RESISTOR,33OHM/3WATT,OHMITE43F				

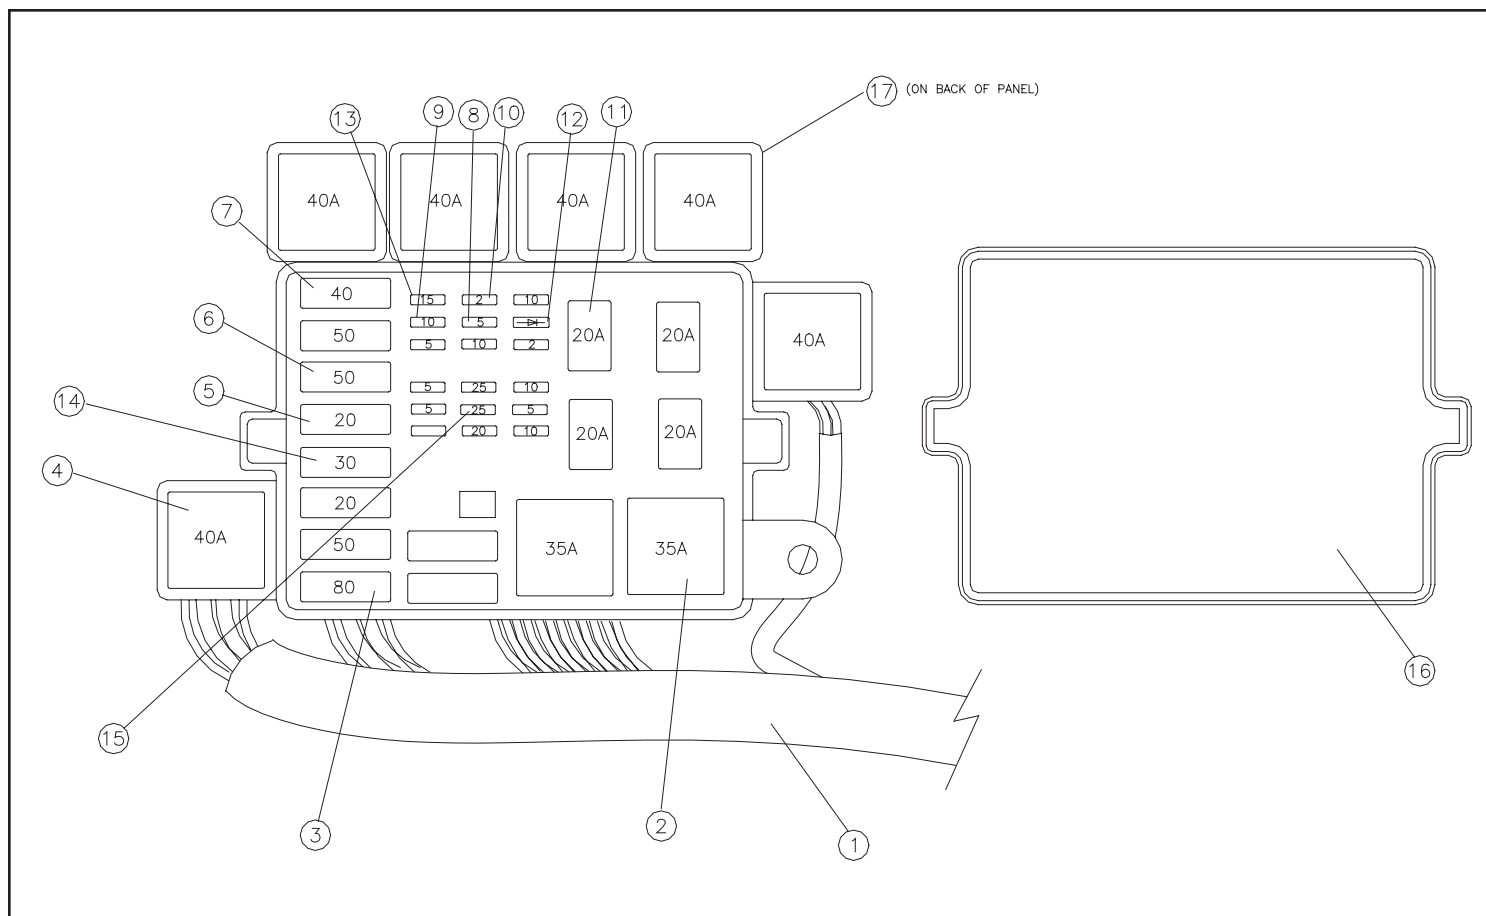


TORSION AXLE ASSEMBLY (SN: RSC 00101-Current)

<https://truckmanualshub.com/>

Section 12

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0702-006	2	TRACK,15 x 165.9				
2	0200-162	1	AXLE,TORSION,5000LB,-10^,30.84				
3	0200-163	1	AXLE,TORSION,5000LB,-45^,30.84				
4	8102-586	16	CAPSCREW,HH,5/8-11X1.75ZN,GD8				
5	8040-726	16	NUT,HEX,NYLOCK,5/8-11 UNC,ZN				
6	8050-408	32	WASHER,5/8 x .120,ZN				
7	8051-431	16	WASHER,SPRING LOCK,5/8,ZN				
8	0200-341	4	CAPSCREW,HH,3/4-16x2.25,GD8				
9	8051-440	4	WASHER,SPRING LOCK,3/4,ZN				
10	0200-287	4	WASHER,1/2"THICK				

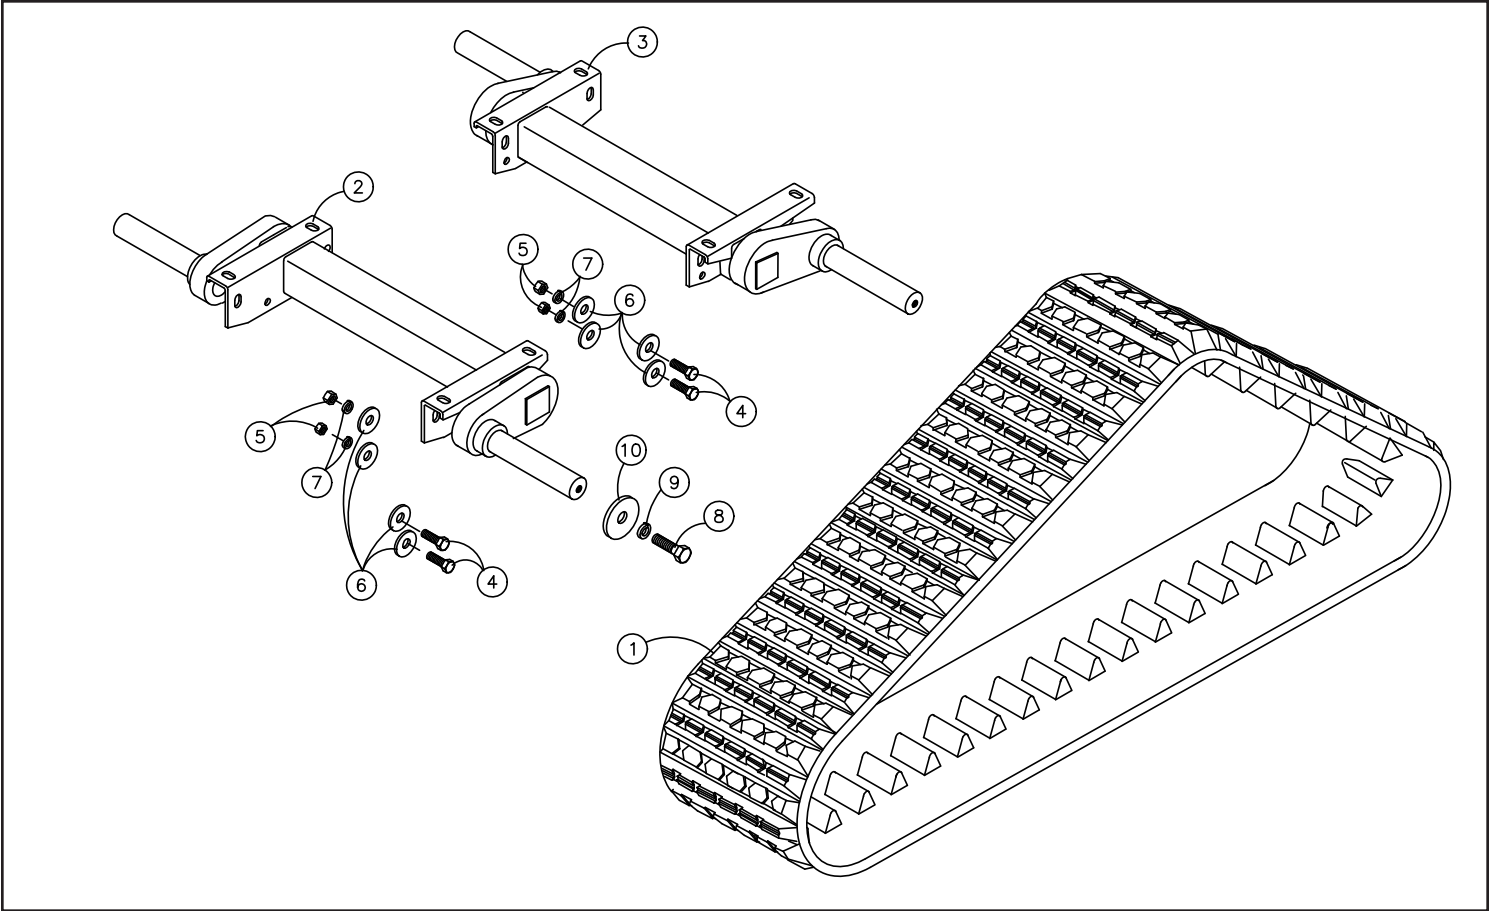


UNDERCARRIAGE ASSEMBLY RT (SN: RSC 00101-698)

<https://truckmanualshub.com/>

Section 13

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0702-049	1	WLMT,SPROCKET,MACH	41	0304-722	14	NUT,HEX,JAM,LOCKING,3/4-10UNC,
2	0303-217	1	SEAL,AP5,50x90x11.4	42	0307-011	2	WHEEL,END,14"
3	0307-039	1	BEARING (62092RS)	43	0702-091	2	PLATE,WHEEL,14"
4	0700-147	1	ASSY,HOUSING,BEARING	44	8051-272	32	WASHER,SPRING LOCK,3/8,ZN
5	0314-304	1	WLMT,GUARD,SEAL	45	8040-486	32	NUT,HEX,NYLOCK,3/8-16 UNC,ZN
6	8051-332	7	WASHER,SPRING LOCK,1/2,ZN	46	8102-683	1	CAPSCREW,HH,3/4-10UNCx3.5 GD 8
7	0702-024	1	WLMT,PLATE,BEARING	47	0304-118	8	SNAP,RING
8	8102-407	4	CAPSCREW,HH,1/2-13UNCx2.0,GD8,	48	0304-117	8	GUARD,BEARING
9	0700-144	1	RING,SNAP,INT,85mm	49	0702-075	16	BEARING,CONE
10	0700-145	1	RING,SNAP,EXT,45mm	50	0303-141	10	SEAL,APY,1.250x2.062x.450
11	0307-074	1	PLUG,HOUSING,BEARING	51	0702-076	16	BEARING,CUP
12	0700-124	12	NUT,TOPLOCK,1/2-13UNC,ZN,GD8	52	0702-057	8	WHEEL,10"
13	0702-008	1	MOTOR,HYD	53	0702-132	8	CAP,WHEEL
14	0200-282	10	NUT,FLANGE,M14x1.5	54	0702-141	8	RING,RETAINING,INTERNAL
15	8040-726	8	NUT,HEX,NYLOCK,5/8-11 UNC,ZN	55	0702-263	1	WLMT,RAIL,ALPHA,HEAVY
16	0200-003	12	TUBE,COVER	56	8051-431	8	WASHER,SPRING LOCK,5/8,ZN
17	0200-004	12	TUBE,INNER	57	0310-313	2	ADAPTER,12MFFOR-12MB
18	8043-806	1	NUT,HEX,1-8 UNC,STEEL LOCK,ZN	58	0310-345	1	ADAPTER,8MFFOR--8MB
19	8102-890	1	CAPSCREW,HH,1.0 x 8UNC x 10.0,	59	0702-090	2	PLATE,WHEEL,10"
20	8102-405	3	CAPSCREW,HH,1/2-13 UNCx1.5,GD8	60	0307-010	2	WHEEL,UHMW,CENTER,10"
21	8040-606	3	NUT,HEX,NYLOCK,1/2-13 UNC,ZN	61	0702-145	2	AXLE,MACHINED,10.32
22	0310-328	1	ADAPTER,6MFFOR-6MB-90	62	0300-946	2	FITTING,GREASE,1/8 NPT
23	8102-685	1	CAPSCREW,HH 3/4-10UNCx 4.5 GD8	63	0702-241	4	AXLE,ONE PIECE,CENTER
24	0702-048	1	RING,SPROCKET,ALPHA	64	0702-117	1	WLMT,ROD,LH
25	8102-419	12	CAPSCREW,HH 1/2-13UNCx 7.0,GD8	65	0304-957	1	TENSIONER,TRACK
26	0702-044	1	WLMT,TABLE,2	66	0304-077	1	NUT,HEX,JAM,1 1/4 - 7,RH
27	8102-588	8	CAPSCREW,HH,5/8-11UNCx2.25,GD8	67	0702-118	1	WLMT,ROD,RH
28	0702-064	1	ASSY,TENSIONER	68	0703-102	1	VALVE,BLEEDER,5/16-UNF
29	0702-077	4	BUSHING,DU,1.75 x 2.0	69	0200-505	1	ASSY,CYLINDER,TENSION,W/ZERK
30	0702-060	2	SPACER,AXLE	70	0702-052	1	ASSY,SPROCKET
31	0702-115	8	RING,SNAP,INT,PLATED	71	0702-114	1	RING,RETAINER,INT
32	0702-098	4	ASSY,SEAL	72	0702-112	1	RETAINER,SEAL
33	0702-106	8	BEARING,CONE	73	0303-141	1	SEAL,APY,1.250x2.062x.450
34	0702-105	8	BEARING,CUP	74	0702-113	1	O-RING,2-037,2-625 ODx2.5 IDx.
35	0702-080	2	WLMT,HUB,WHEEL,14"	75	-----	1	SUB-ASSY,HOUSING,BEARING (SEE NOTE)
36	0702-111	4	CAP,WHEEL	76	0302-435	2	FITTING,GREASE,1/8 NPT,90D
37	8011-227	32	BOLT,CARRIAGE,3/8-16 UNC x 2.0	77	0210-001	10	STUD,WHEEL,M14x1.5
38	0702-079	2	WLMT,HUB,WHEEL,10"	78	0702-251	1	ZERK,GREASE,1/8NPT,HIGH PRESSURE
39	0300-985	32	SPEED NUT,3/8				
40	0702-155	12	WASHER,BEARING				

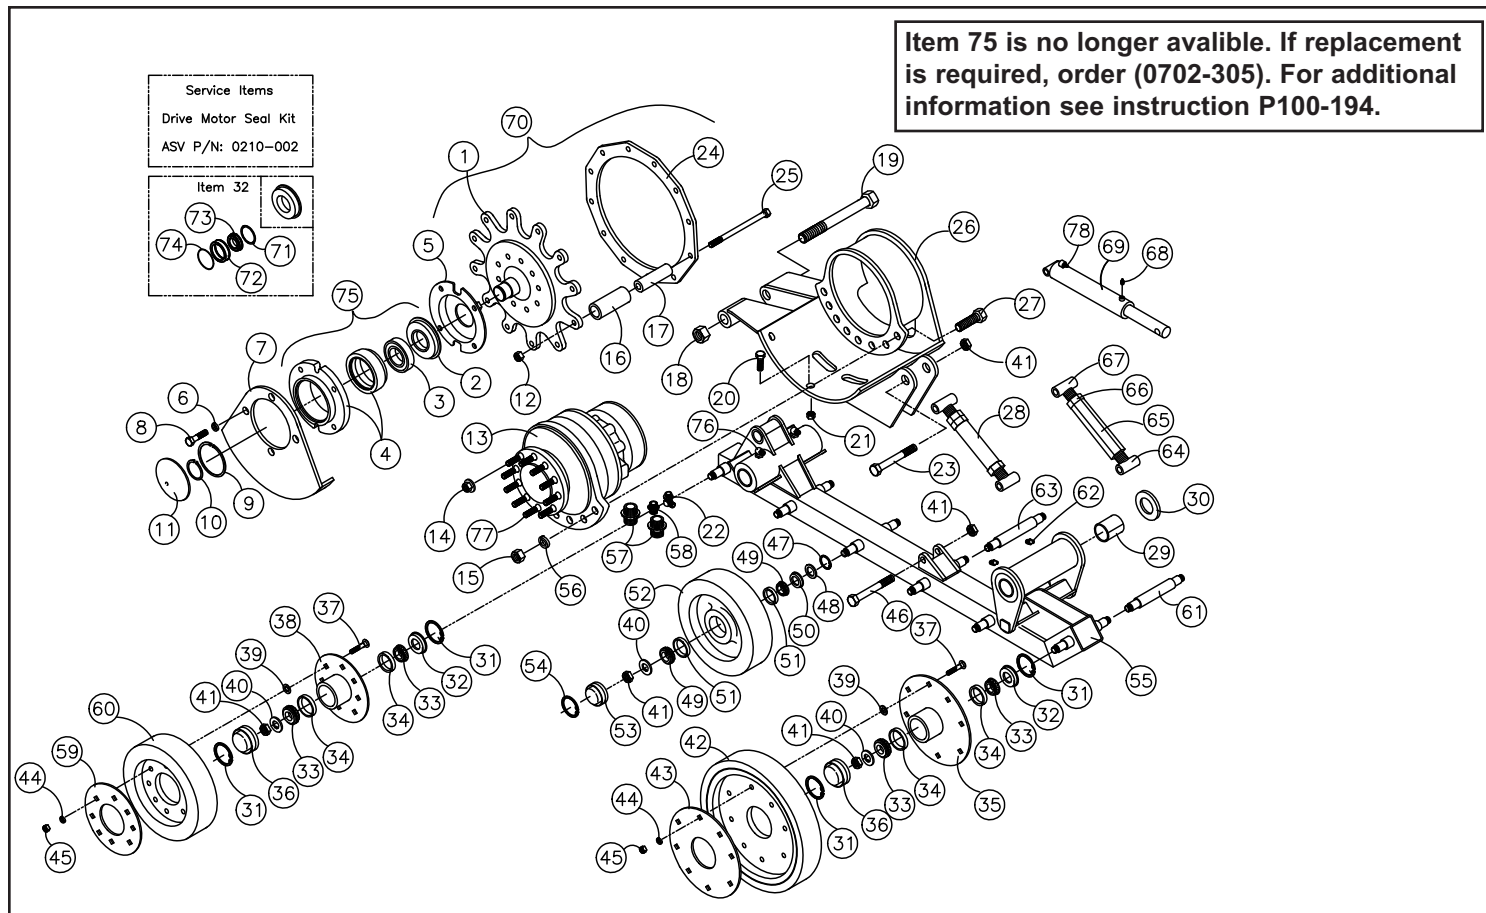


UNDERCARRIAGE ASSEMBLY RT (SN: RSC 00699-Current)

<https://truckmanualshub.com/>

Section 13

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0702-230	1	SPROCKET,CAST,MACHINED (SERIAL # 699-CURRENT)	41	0304-722	14	NUT,HEX,JAM,LOCKING,3/4-10UNC,
2	0303-217	1	SEAL,AP5,50x90x11.4	42	0702-200	2	WHEEL,10",W/HUB
3	0307-039	1	BEARING (62092RS)	43	0702-252	2	ASSY,END WHEEL,10",SERVICE
4	0700-147	1	ASSY,HOUSING,BEARING	44	0300-290	2	ADAPTER,O-RING TO FLARE 12MJ-12MB
5	0314-304	1	WLMT,GUARD,SEAL	45	0310-345	1	ADAPTER,8MFFOR--8MB
6	8051-332	7	WASHER,SPRING LOCK,1/2,ZN	46	8102-683	1	CAPSCREW,HH,3/4-10UNCx3.5 GD 8
7	0702-024	1	WLMT,PLATE,BEARING	47	0304-118	8	SNAP,RING
8	8102-406	7	CAPSCREW,HH,1/2-13UNCx1.75,GD8	48	0304-117	8	GUARD,BEARING
9	0700-144	1	RING,SNAP,INT,85mm	49	0702-075	16	BEARING,CONE
10	0700-145	1	RING,SNAP,EXT,45mm	50	0303-141	8	SEAL,APY,1.250x2.062x.450
11	0307-074	1	PLUG,HOUSING,BEARING	51	0702-076	16	BEARING,CUP
12	0700-124	12	NUT,TOPLOCK,1/2-13UNC,ZN,GD8	52	0702-057	8	WHEEL,10"
13	0702-335	1	MOTOR,HYD (SERIAL # 699-CURRENT)	53	0702-132	8	CAP,WHEEL
14	0200-282	12	NUT,FLANGE,M14x1.5	54	0702-141	8	RING,RETAINING,INTERNAL
15	8040-726	8	NUT,HEX,NYLOCK,5/8-11 UNC,ZN	55	0702-263	1	WLMT,RAIL,ALPHA,HEAVY
16	0200-003	12	TUBE,COVER	56	0200-505	1	ASSY,CYLINDER,TENSION,W/ZERK
17	0200-004	12	TUBE,INNER	57	0703-102	1	VALVE,BLEEDER,5/16-UNF
18	8043-806	1	NUT,HEX,1-8 UNC,STEEL LOCK,ZN	58	-----	1	SUB-ASSY,HOUSING,BEARING (SEE NOTE)
19	8102-890	1	CAPSCREW,HH,1.0 x 8UNC x 10.0,	59	0210-001	12	STUD,WHEEL,M14x1.5
20	8051-431	8	WASHER,SPRING LOCK,5/8,ZN	60	0200-331	8	WASHER,4.05x2.1875x0.188
21	8040-606	3	NUT,HEX,NYLOCK,1/2-13 UNC,ZN	61	0702-210	4	WASHER,4.41x2.00x.104
22	0201-309	1	ADAPTER,FS6400-04-06-0	62	0302-435	2	FITTING,GREASE,1/8 NPT,90D
23	8102-685	1	CAPSCREW,HH 3/4-10UNCx 4.5 GD8	63	0702-241	4	AXLE,ONE PIECE,CENTER
24	0702-048	1	RING,SPROCKET,ALPHA	64	0702-145	2	AXLE,ONE PIECE,END
25	8102-423	12	CAPSCREW,HH,1/2-13UNCx7.25,GD8	65	0702-117	1	WLMT,ROD,LH
26	0702-227	1	TABLE,MACHINED,RH	66	0304-957	1	TENSIONER,TRACK
27	8102-588	8	CAPSCREW,HH,5/8-11UNCx2.25,GD8	67	0304-077	1	NUT,HEX,JAM,1 1/4 - 7,RH
28	0702-064	1	ASSY,TENSIONER	68	0702-118	1	WLMT,ROD,RH
29	0702-077	4	BUSHING,DU,1.75 x 2.0	69	0300-946	2	FITTING,GREASE,1/8 NPT
30	0702-113	4	O-RING,2-037,2-625 ODX2.5 IDx.	70	0702-196	1	ASSY,SPROCKET (SERIAL #699-CURRENT)
31	0702-115	8	RING,SNAP,INT,PLATED	71	0702-114	1	RING,RETAINER,INT
32	0702-098	4	ASSY,SEAL	72	0303-141	1	SEAL,APY,1.250x2.062x.450
33	0702-106	8	BEARING,CONE	73	0702-112	1	RETAINER,SEAL
34	0702-105	8	BEARING,CUP	74	0702-113	1	O-RING,2-037,2-625 ODX2.5 IDx.
35	0702-202	2	WHEEL,14",W/HUB	75	0702-251	1	ZERK,GREASE,1/8NPT,HIGH PRESSURE.
36	0702-111	4	CAP,WHEEL				
37	0702-060	2	SPACER,AXLE				
38	0702-254	2	ASSY,WHEEL,14",SERVICE				
39	0702-253	8	ASSY,MIDWHEEL,10",SERVICE				
40	0702-155	12	WASHER,BEARING				

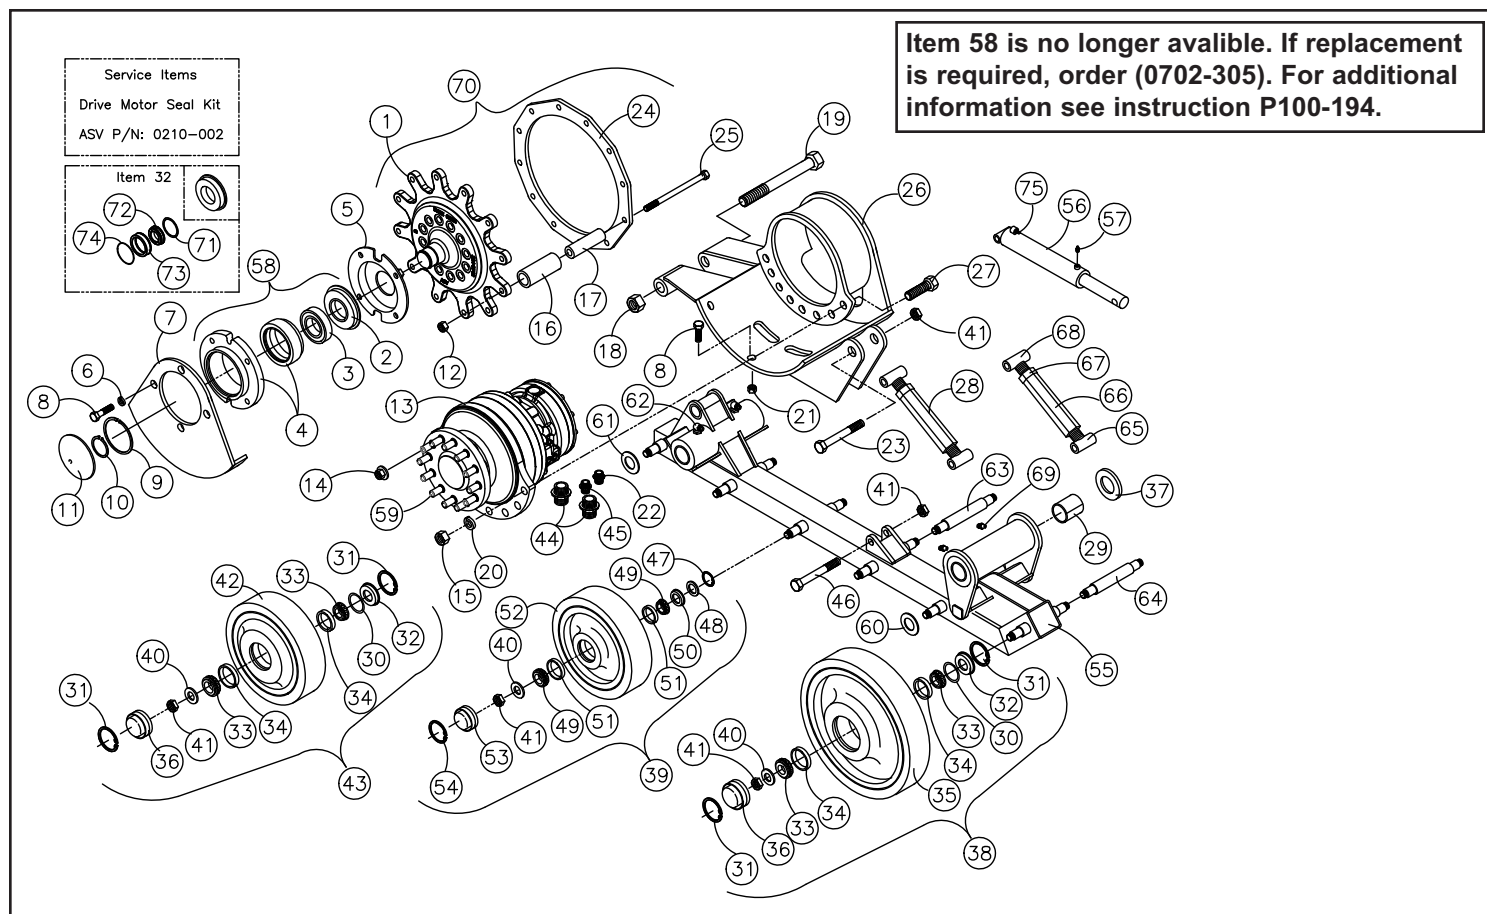


UNDERCARRIAGE ASSEMBLY LT (SN: RSC 00101-698)

<https://truckmanualshub.com/>

Section 14

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0702-049	1	WLMT,SPROCKET,MACH	41	0304-722	14	NUT,HEX,JAM,LOCKING,3/4-10UNC,
2	0303-217	1	SEAL,AP5,50x90x11.4	42	0307-011	2	WHEEL,END,14"
3	0307-039	1	BEARING (62092RS)	43	0702-091	2	PLATE,WHEEL,14"
4	0700-147	1	ASSY,HOUSING,BEARING	44	8051-272	32	WASHER,SPRING LOCK,3/8,ZN
5	0314-304	1	WLMT,GUARD,SEAL	45	8040-486	32	NUT,HEX,NYLOCK,3/8-16 UNC,ZN
6	8051-332	7	WASHER,SPRING LOCK,1/2,ZN	46	8102-683	1	CAPSCREW,HH,3/4-10UNCx3.5 GD 8
7	0702-024	1	WLMT,PLATE,BEARING	47	0304-118	8	SNAP,RING
8	8102-407	4	CAPSCREW,HH,1/2-13UNCx2.0,GD8,	48	0304-117	8	GUARD,BEARING
9	0700-144	1	RING,SNAP,INT,85mm	49	0702-075	16	BEARING,CONE
10	0700-145	1	RING,SNAP,EXT,45mm	50	0303-141	10	SEAL,APY,1.250x2.062x.450
11	0307-074	1	PLUG,HOUSING,BEARING	51	0702-076	16	BEARING,CUP
12	0700-124	12	NUT,TOPLock,1/2-13UNC,ZN,GD8	52	0702-057	8	WHEEL,10"
13	0702-008	1	MOTOR,HYD	53	0702-132	8	CAP,WHEEL
14	0200-282	10	NUT,FLANGE,M14x1.5	54	0702-141	8	RING,RETAINING,INTERNAL
15	8040-726	8	NUT,HEX,NYLOCK,5/8-11 UNC,ZN	55	0702-263	1	WLMT,RAIL,ALPHA,HEAVY
16	0200-003	12	TUBE,COVER	56	8051-431	8	WASHER,SPRING LOCK,5/8,ZN
17	0200-004	12	TUBE,INNER	57	0310-313	2	ADAPTER,12MFFOR-12MB
18	8043-806	1	NUT,HEX,1-8 UNC,STEEL LOCK,ZN	58	0310-345	1	ADAPTER,8MFFOR--8MB
19	8102-890	1	CAPSCREW,HH,1.0 x 8UNC x 10.0,	59	0702-090	2	PLATE,WHEEL,10"
20	8102-405	3	CAPSCREW,HH,1/2-13 UNCx1.5,GD8	60	0307-010	2	WHEEL,UHMW,CENTER,10"
21	8040-606	3	NUT,HEX,NYLOCK,1/2-13 UNC,ZN	61	0702-145	2	AXLE,MACHINED,10.32
22	0310-328	1	ADAPTER,6MFFOR-6MB-90	62	0300-946	2	FITTING,GREASE,1/8 NPT
23	8102-685	1	CAPSCREW,HH 3/4-10UNCx 4.5 GD8	63	0702-241	4	AXLE,ONE PIECE,CENTER
24	0702-048	1	RING,SPROCKET,ALPHA	64	0702-117	1	WLMT,ROD,LH
25	8102-419	12	CAPSCREW,HH 1/2-13UNCx 7.0,GD8	65	0304-957	1	TENSIONER,TRACK
26	0702-042	1	WLMT,TABLE,1	66	0304-077	1	NUT,HEX,JAM,1 1/4 - 7,RH
27	8102-588	8	CAPSCREW,HH,5/8-11UNCx2.25,GD8	67	0702-118	1	WLMT,ROD,RH
28	0702-064	1	ASSY,TENSIONER	68	0703-102	1	VALVE,BLEEDER,5/16-UNFE
29	0702-077	4	BUSHING,DU,1.75 x 2.0	69	0200-505	1	ASSY,CYLINDER,TENSION,W/ZERK
30	0702-060	2	SPACER,AXLE	70	0702-052	1	ASSY,SPROCKET
31	0702-115	8	RING,SNAP,INT,PLATED	71	0702-114	1	RING,RETAINER,INT
32	0702-098	4	ASSY,SEAL	72	0702-112	1	RETAINER,SEAL
33	0702-106	8	BEARING,CONE	73	0303-141	1	SEAL,APY,1.250x2.062x.450
34	0702-105	8	BEARING,CUP	74	0702-113	1	O-RING,2-037,2-625 ODx2.5 IDx.
35	0702-080	2	WLMT,HUB,WHEEL,14"	75	-----	1	SUB-ASSY,HOUSING,BEARING (SEE NOTE)
36	0702-111	4	CAP,WHEEL	76	0302-435	2	FITTING,GREASE,1/8 NPT,90D
37	8011-227	32	BOLT,CARRIAGE,3/8-16 UNC x 2.0	77	0210-001	10	STUD,WHEEL,M14x1.5
38	0702-079	2	WLMT,HUB,WHEEL,10"	78	0702-251	1	ZERK,GREASE,1/8NPT,HIGH PRESSURE
39	0300-985	32	SPEED NUT,3/8				
40	0702-155	12	WASHER,BEARING				

Item 75 is no longer available. If replacement is required, order (0702-305). For additional information see instruction P100-194.

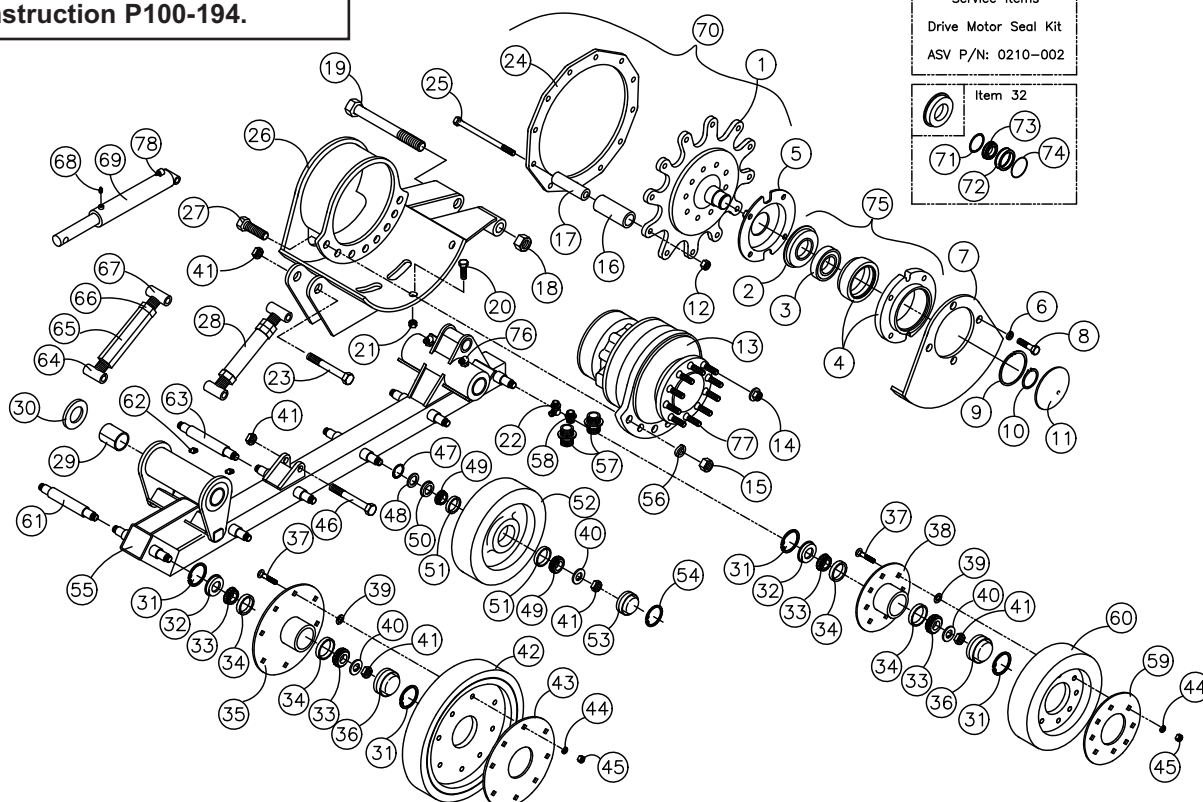


UNDERCARRIAGE ASSEMBLY LT (SN: RSC 00699-Current)

<https://truckmanuals.hub.com/>

Section 14

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0702-230	1	SPROCKET,CAST,MACHINED (SERIAL #699-CURRENT)	41	0304-722	14	NUT,HEX,JAM,LOCKING,3/4-10UNC,
2	0303-217	1	SEAL,AP5,50x90x11.4	42	0702-200	2	WHEEL,10",W/HUB
3	0307-039	1	BEARING (62092RS)	43	0702-252	2	ASSY,END WHEEL,10",SERVICE
4	0700-147	1	ASSY,HOUSING,BEARING	44	0300-290	2	ADAPTER,O-RING TO FLARE 12MJ-12MB
5	0314-304	1	WLMT,GUARD,SEAL	45	0310-345	1	ADAPTER,8MFFOR--8MB
6	8051-332	7	WASHER,SPRING LOCK,1/2,ZN	46	8102-683	1	CAPSCREW,HH,3/4-10UNCx3.5 GD 8
7	0702-024	1	WLMT,PLATE,BEARING	47	0304-118	8	SNAP,RING
8	8102-406	7	CAPSCREW,HH,1/2-13UNCx1.75,GD8	48	0304-117	8	GUARD,BEARING
9	0700-144	1	RING,SNAP,INT,85mm	49	0702-075	16	BEARING,CONE
10	0700-145	1	RING,SNAP,EXT,45mm	50	0303-141	8	SEAL,APY,1.250x2.062x.450
11	0307-074	1	PLUG,HOUSING,BEARING	51	0702-076	16	BEARING,CUP
12	0700-124	12	NUT,TOPLOCK,1/2-13UNC,ZN,GD8	52	0702-057	8	WHEEL,10"
13	0702-335	1	MOTOR,HYD (SERIAL #699-CURRENT)	53	0702-132	8	CAP,WHEEL
14	0200-282	12	NUT,FLANGE,M14x1.5	54	0702-141	8	RING,RETAINING,INTERNAL
15	8040-726	8	NUT,HEX,NYLOCK,5/8-11 UNC,ZN	55	0702-263	1	WLMT,RAIL,ALPHA,HEAVY
16	0200-003	12	TUBE,COVER	56	0200-505	1	ASSY,CYLINDER,TENSION,W/ZERK
17	0200-004	12	TUBE,INNER	57	0703-102	1	VALVE,BLEEDER,5/16-UNF
18	8043-806	1	NUT,HEX,1-8 UNC,STEEL LOCK,ZN	58	-----	1	SUB-ASSY,HOUSING,BEARING (SEE NOTE)
19	8102-890	1	CAPSCREW,HH,1.0 x 8UNC x 10.0,	59	0210-001	12	STUD,WHEEL,M14x1.5
20	8051-431	8	WASHER,SPRING LOCK,5/8,ZN	60	0200-331	8	WASHER,4.05x2.1875x0.188
21	8040-606	3	NUT,HEX,NYLOCK,1/2-13 UNC,ZN	61	0702-210	4	WASHER,4.41x2.00x.104
22	0201-309	1	ADAPTER,FS6400-04-06-0	62	0302-435	2	FITTING,GREASE,1/8 NPT,90D
23	8102-685	1	CAPSCREW,HH 3/4-10UNCx 4.5 GD8	63	0702-241	4	AXLE,ONE PIECE,CENTER
24	0702-048	1	RING,SPROCKET,ALPHA	64	0702-145	2	AXLE,ONE PIECE,END
25	8102-423	12	CAPSCREW,HH,1/2-13UNCx7.25,GD8	65	0702-117	1	WLMT,ROD,LH
26	0702-228	1	TABLE,MACHINED,LH	66	0304-957	1	TENSIONER,TRACK
27	8102-588	8	CAPSCREW,HH,5/8-11UNCx2.25,GD8	67	0304-077	1	NUT,HEX,JAM,1 1/4 - 7,RH
28	0702-064	1	ASSY,TENSIONER	68	0702-118	1	WLMT,ROD,RH
29	0702-077	4	BUSHING,DU,1.75 x 2.0	69	0300-946	2	FITTING,GREASE,1/8 NPT
30	0702-113	4	O-RING,2-037,2-625 ODX2.5 IDx.	70	0702-196	1	ASSY,SPROCKET (SERIAL #699-CURRENT)
31	0702-115	8	RING,SNAP,INT,PLATED	71	0702-114	1	RING,RETAINER,INT
32	0702-098	4	ASSY,SEAL	72	0303-141	1	SEAL,APY,1.250x2.062x.450
33	0702-106	8	BEARING,CONE	73	0702-112	1	RETAINER,SEAL
34	0702-105	8	BEARING,CUP	74	0702-113	1	O-RING,2-037,2-625 ODX2.5 IDx.
35	0702-202	2	WHEEL,14",W/HUB	75	0702-251	1	ZERK,GREASE,1/8NPT,HIGH PRESSURE
36	0702-111	4	CAP,WHEEL				
37	0702-060	2	SPACER,AXLE				
38	0702-254	2	ASSY,WHEEL,14",SERVICE				
39	0702-253	8	ASSY,MIDWHEEL,10",SERVICE				
40	0702-155	12	WASHER,BEARING				

Item 58 is no longer available. If replacement is required, order (0702-305). For additional information see instruction P100-194.

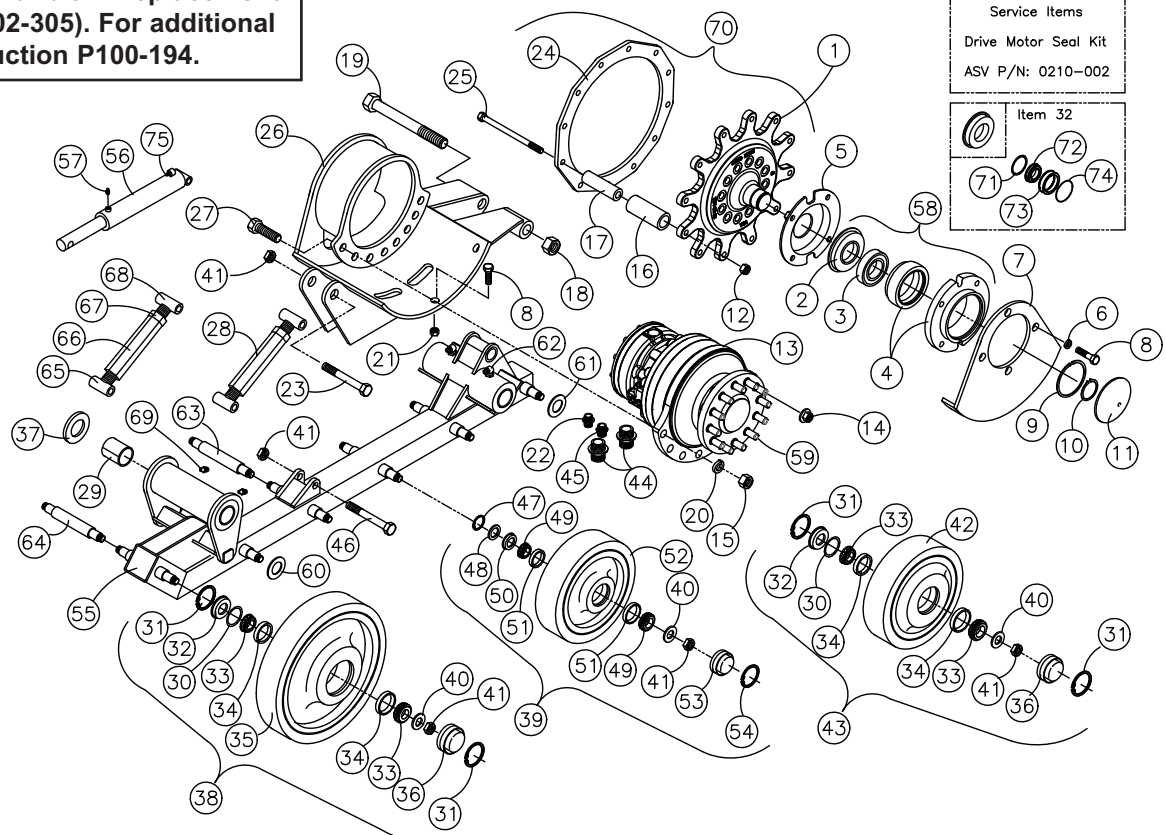


LIFT ARM ASSEMBLY (SN: RSC 00101-2285)

<https://truckmanuals.rub.com/>

Section 15

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0200-079	1	WLMT,LOADER	41	0200-083	8	BUSHING,LOADER,3" (weld-in)
2	0200-306	1	WLMT,STEP-PLATE,LOADER	42	0402-886	1	KIT,DUST,COVER,RC60/50
3	8050-247	2	WASHER,WROUGHT,5/16,SAE,ZN	43	0200-553	1	DECAL,LOADER,RH,FRONT,RC50
4	8051-242	2	WASHER,SPRING LOCK,5/16,ZN	44	0200-554	1	DECAL,LOADER,LH,FRONT,RC50
5	8001-135	2	CAPSCREW,HH,5/16-18 UNCx1.5,GD				
6	8102-226	8	CAPSCREW,HH 3/8-16UNCx1.75 GD8				
7	0304-339	2	SCREW,SELF-TAPPING,5/16X1.25				
8	0200-115	2	WLMT,PIN,1.00x3.49				
9	0304-341	2	CLAMP,TUBE,LOADER, RC-30				
10	0300-607	12	ZERK,GREASE,1/4-28				
11	8042-486	12	NUT,HEX,3/8-16 UNC,ZN				
12	0200-005	2	CYLINDER,BOOM				
13	0200-129	1	TUBE,LOADER,0.50x36.50				
14	0200-128	1	TUBE,LOADER,0.50x37.80				
15	0200-127	1	TUBE,LOADER,0.50x39.60				
16	0200-126	1	TUBE,LOADER,0.50x41.50				
17	0304-359	1	CLAMP,DOUBLE,LOADER, RC-30				
18	0304-665	1	TUBE,AUX,LOWER,LOADER				
19	0304-666	1	TUBE,AUX,UPPER,LOADER				
20	0304-342	1	TUBE,G,LOADER RC-30				
21	0304-340	1	CLAMP,OIL LINE,LOADER RC-30				
22	0304-667	2	ADAPTER,8MB-10MJ				
23	8102-050	4	CAPSCREW,HH,1/4-20,UNC,2.75ZN,				
24	0304-357	1	ADAPTER,9/16-18,JIC-9/16-18,O-				
25	0304-876	1	MANIFOLD,AUX,HYD				
26	0304-356	1	PLUG,9/16-18,LOADER RC-30				
27	0310-240	1	COVER,DUST,1/2,M				
28	0310-076	1	COUPLER,QUICK,FF,FEMALE,7/8-14				
29	0310-077	1	COUPLER,QUICK,FF,MALE,7/8-14UN				
30	0310-241	1	COVER,DUST,1/2,F				
31	8040-366	11	NUT,HEX,NYLOCK,1/4-20 UNC,ZN				
32	0200-121	2	CYLINDER,BUCKET				
33	0304-464	1	TUBE,CLAMP,RUBBER,LOADER RC-30				
34	0200-266	1	DECAL,LOADER,RH,RC50				
35	0200-267	1	DECAL,LOADER,LH,RC50				
36	0200-113	4	WLMT,PIN,1.00x4.51				
37	0201-838	1	SPOOL,VALVE,QD BLOCK				
38	0200-296	2	ADAPTER,O-RING HEX NIPPLE,10-8				
39	0200-388	2	WLMT,PIN,1.00x4.12				
40	0200-114	4	WLMT,PIN,1.00x5.51				

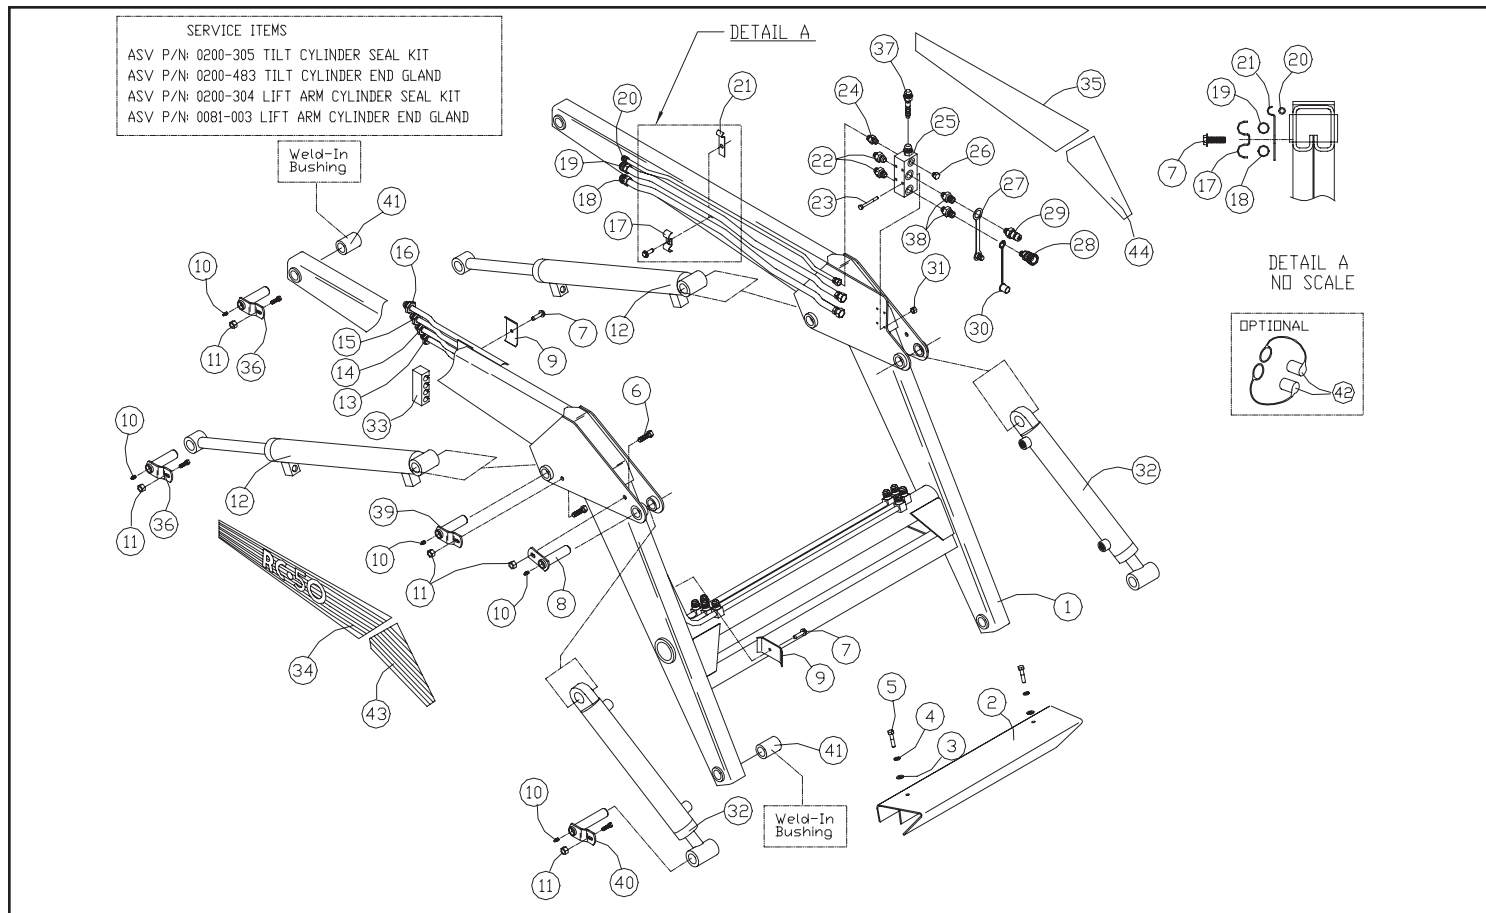

LIFT ARM ASSEMBLY (SN: RSC 02286-Current)


<https://truckmanualshub.com/>

Section 15


REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	2030-121	1	DECAL,LOADER,RIGHT,FRONT,RC60				
2	0200-597	1	DECAL,LOADER,RIGHT,REAR,RC50				
3	0200-113	4	WLMT,PIN,1.00x4.51				
4	0300-607	10	ZERK,GREASE,1/4-28				
5	8011-222	6	BOLT,CARRIAGE,3/8-16 UNCx1.0,Z				
6	0314-269	6	NUT,FLANGE,TOPLK,3/8-16UNC,GDG				
7	2030-285	2	CYLINDER,BOOM (Serial # 02744-Current)				
8	0304-672	2	PIN,1.00"x3.91"				
9	2030-069	2	HOSE,10M4K,10FFFORX,10FFFORX,28.				
10	0201-770	1	CAP,W/CHAIN				
11	2030-070	2	HOSE,10M4K,10FFFORX,10FFFORX,50.				
12	0310-345	8	ADAPTER,8MFFOR--8MB				
13	2030-035-yel	1	WLMT,LOADER,RC60				
14	0200-598	1	DECAL,LOADER,LEFT,REAR,RC50				
15	2030-123	1	DECAL,LOADER,LEFT,FRONT,RC60				
16	8102-220	2	CAPSCREW,HH,3/8-16x0.75",GD8				
17	0201-408	1	DECAL,LOADER,FRONT				
18	2030-081	2	WLMT,PIN				
19	0201-852	4	WLMT,PIN,6.00"				
20	2030-286	1	CYLINDER,BUCKET/TILT,LH (Serial # 02744-Current)				
21	8102-222	4	CAPSCREW,HH,3/8-16 UNCx1.0,GD8				
22	2030-287	1	CYLINDER,BUCKET/TILT,RH (Serial # 02744-Current)				
23	2030-147	2	BUSHING,1.00IDx1.50ODx3.00				
24	0003-083	2	BUSHING,BASE,CYLINDER				
25	0201-233	2	BUSHING,1.50IDx2.00ODx3.00L				
26	0003-053	2	BUSHING,ROD,CYLINDER				
27	0003-082	2	BUSHING,BASE,CYLINDER				
28	0304-496	1	PAD,SKID				
29	0201-392	1	HARNESS,AUXILIARY				
30	0201-771	1	HARNESS,ELEC,AUX,RC100/85/60				
31	0201-002	4	WLMT,PIN				
32	0003-084	2	BUSHING,ROD,CYLINDER				

WARNING: When ordering Cylinders


Machines serial number 02286-02743 came equipped with cylinders that are now obsolete. These early cylinders will not work side by side with current cylinders. If a cylinder on one side needs to be replaced, both cylinders must be replaced at that time to maintain proper function and avoid machine damage. (see page III)

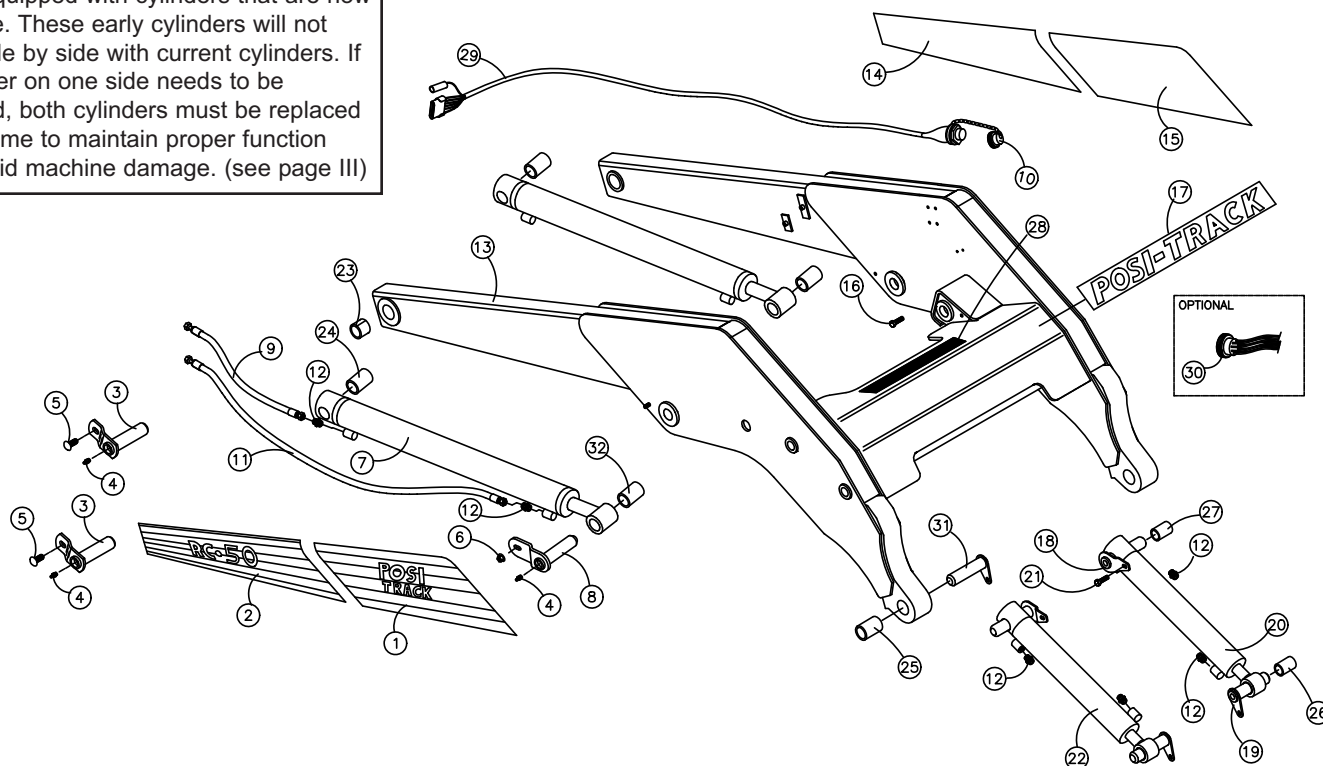

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0200-186	2	HOSE,6G2,4800 PSI,38.5"				
2	0200-187	2	HOSE,6G2,4800 PSI,18"				
3	0304-361	4	FITTING,6MB-6MJ90,LOADER RC-30				
4	0200-189	2	HOSE,6G2,4800 PSI,22.25"				
5	0200-188	2	HOSE,6G2,4800 PSI,47"				
6	0300-582	2	CABLE,TIE,SMALL				

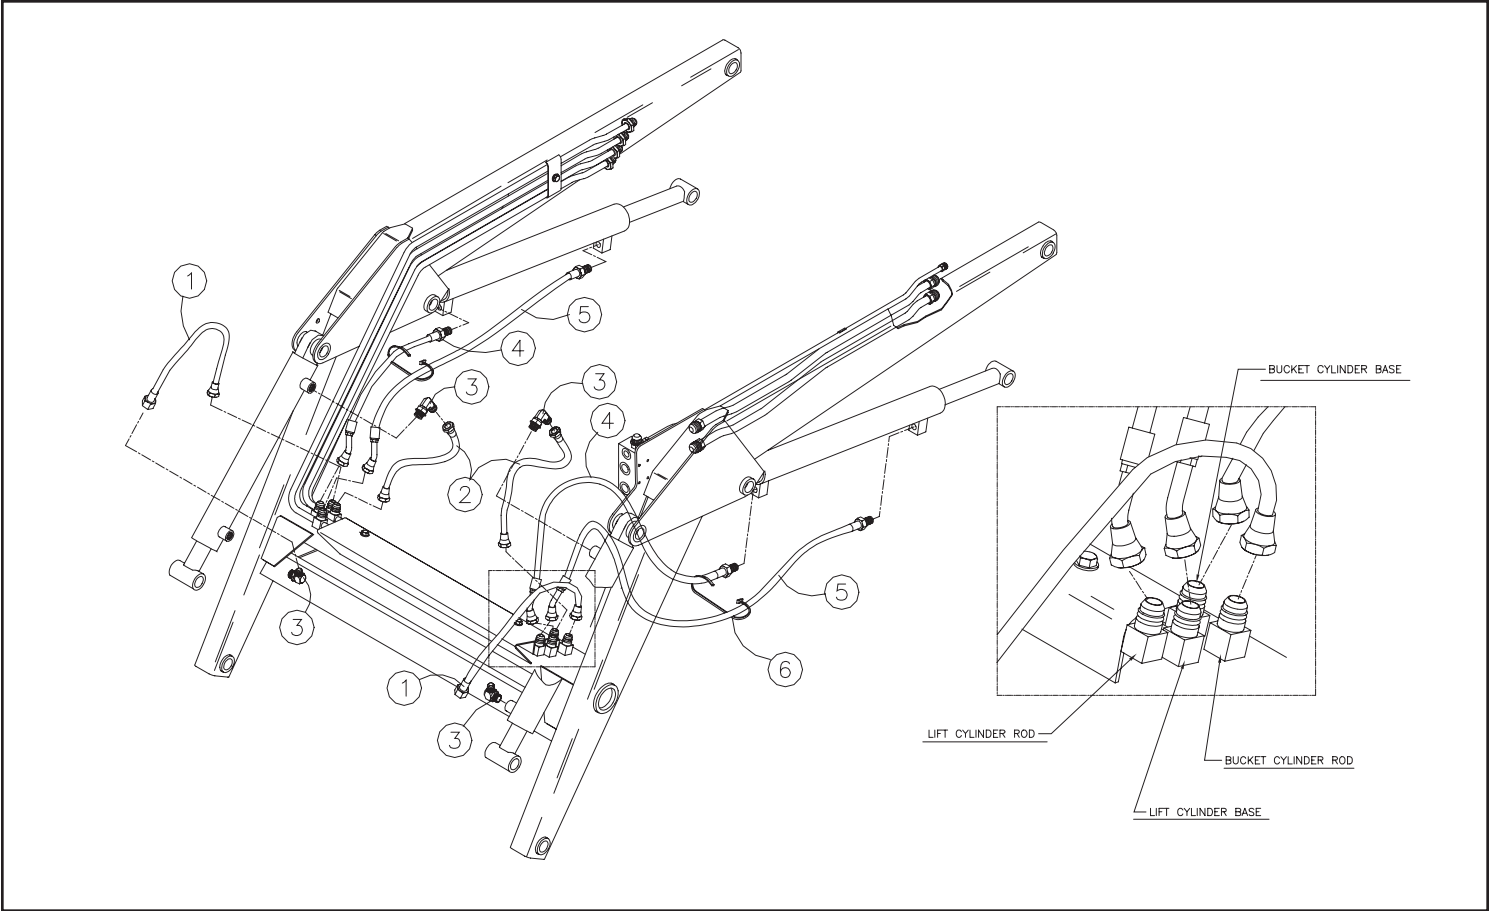

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	2030-010	1	TUBE,BUCKET,LOWER				
2	2030-009	1	TUBE,BUCKET,UPPER				
3	2030-008	1	TUBE,CASE DRAIN,QD				
4	2030-001	1	TUBE,AUX,UPPER,QD				
5	2030-002	1	TUBE,AUX,LOWER,QD				
6	0310-567	1	ADAPTER,8MFFOR-6MB				
7	0310-831	4	CLAMP, SET, T2062-PP				
8	0310-584	9	PLATE,COVER TCP-T2				
9	8102-134	9	CAPSCREW,HH,5/16-18UNCx1.25GD8				
10	0201-658	2	ADAPTER,10MFFOR-8MB-S				
11	0304-876	1	MANIFOLD,AUX,HYD				
12	8102-050	4	CAPSCREW,HH,1/4-20,UNC,2.75ZN,				
13	0304-356	1	PLUG,9/16-18,LOADER RC-30				
14	0200-296	2	ADAPTER,O-RING HEX NIPPLE,10-8				
15	8040-366	4	NUT,HEX,NYLOCK,1/4-20 UNC,ZN				
16	0310-076	1	COUPLER,QUICK,FF,FEMALE,7/8-14				
17	0310-077	1	COUPLER,QUICK,FF,MALE,7/8-14UN				
18	0310-241	1	COVER,DUST,1/2,F				
19	0310-240	1	COVER,DUST,1/2,M				
20	0201-402	5	CLAMP,SET,2050-PP				
21	0201-224	7	COVER,CLAMP,COP-2				
22	8102-044	14	CAPSCREW,HH,1/4-20UNCx1.25,GD8				
23	0201-223	2	CLAMP,SET,2062-PP				
24	0201-488	2	HOSE,8M4K,23.50"				
25	0201-489	2	HOSE,8M4K,17.50"				
26	0201-838	1	SPOOL,VALVE,QD BLOCK				
27	0402-886	1	KIT,DUST,COVER,RC60/50				

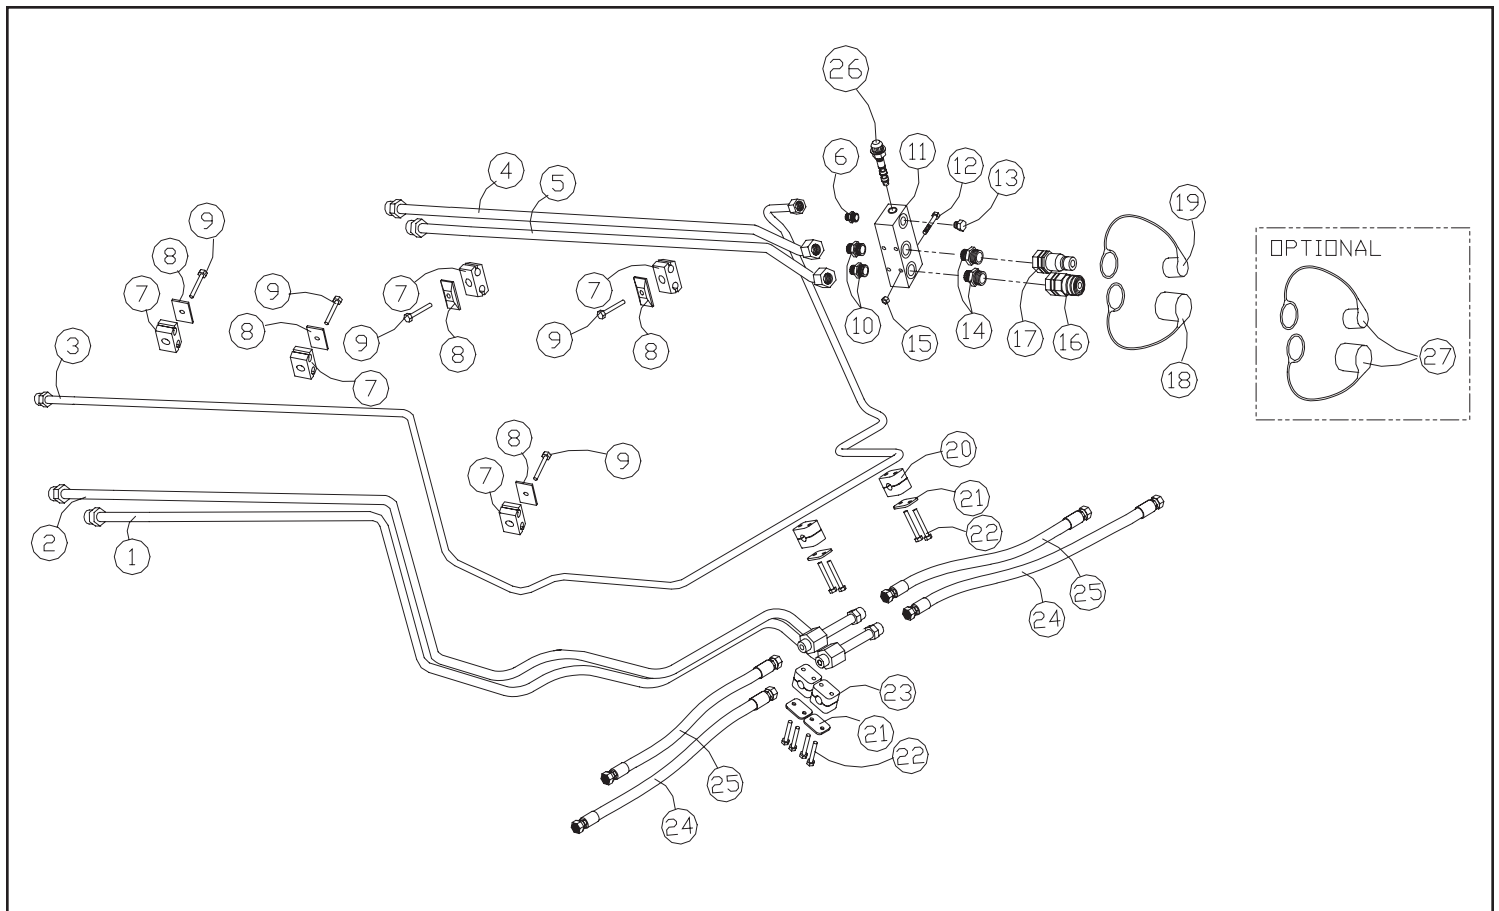


QUICK ATTACH ASSEMBLY (SN: RSC 00101-2285)

<https://truckmanuals.hud.com/>

Section 17

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	8002-418	2	CAPSCREW,HH,1/2-13 UNCx6.0,GD5				
2	0400-620	1	WLMT,PIN,LATCH,LH				
3	0400-621	2	SPOOL,PIVOT				
4	0400-651	2	SPRING,COMPRESSION				
5	8050-347	8	WASHER,WROUGHT,1/2,STD,ZN				
6	0400-653	2	CAPSCREW,SHOULDER,.5 x.63x3/8-				
7	0400-617	2	BLOCK,LATCH				
8	8002-222	2	CAPSCREW,HH,3/8-16 UNCx1.0,GD5				
9	8051-272	2	WASHER,SPRING LOCK,3/8,ZN				
10	8050-277	2	WASHER,WROUGHT,3/8,SAE,ZN				
11	0400-697	1	LEVER,LATCH,LH				
12	0400-652	2	SPRING,COMPRESSION,.88 x .88 x				
13	0400-632	1	WLMT,QUICK-ATTACH				
14	0400-634	4	SLIDE,PLASTIC,QUICK-ATTACH				
15	0400-676	1	WLMT,PIN,LATCH,RH				
16	0400-698	1	LEVER,LATCH,RH				
17	0400-629	2	STAND-OFF,LEVER,LATCH				

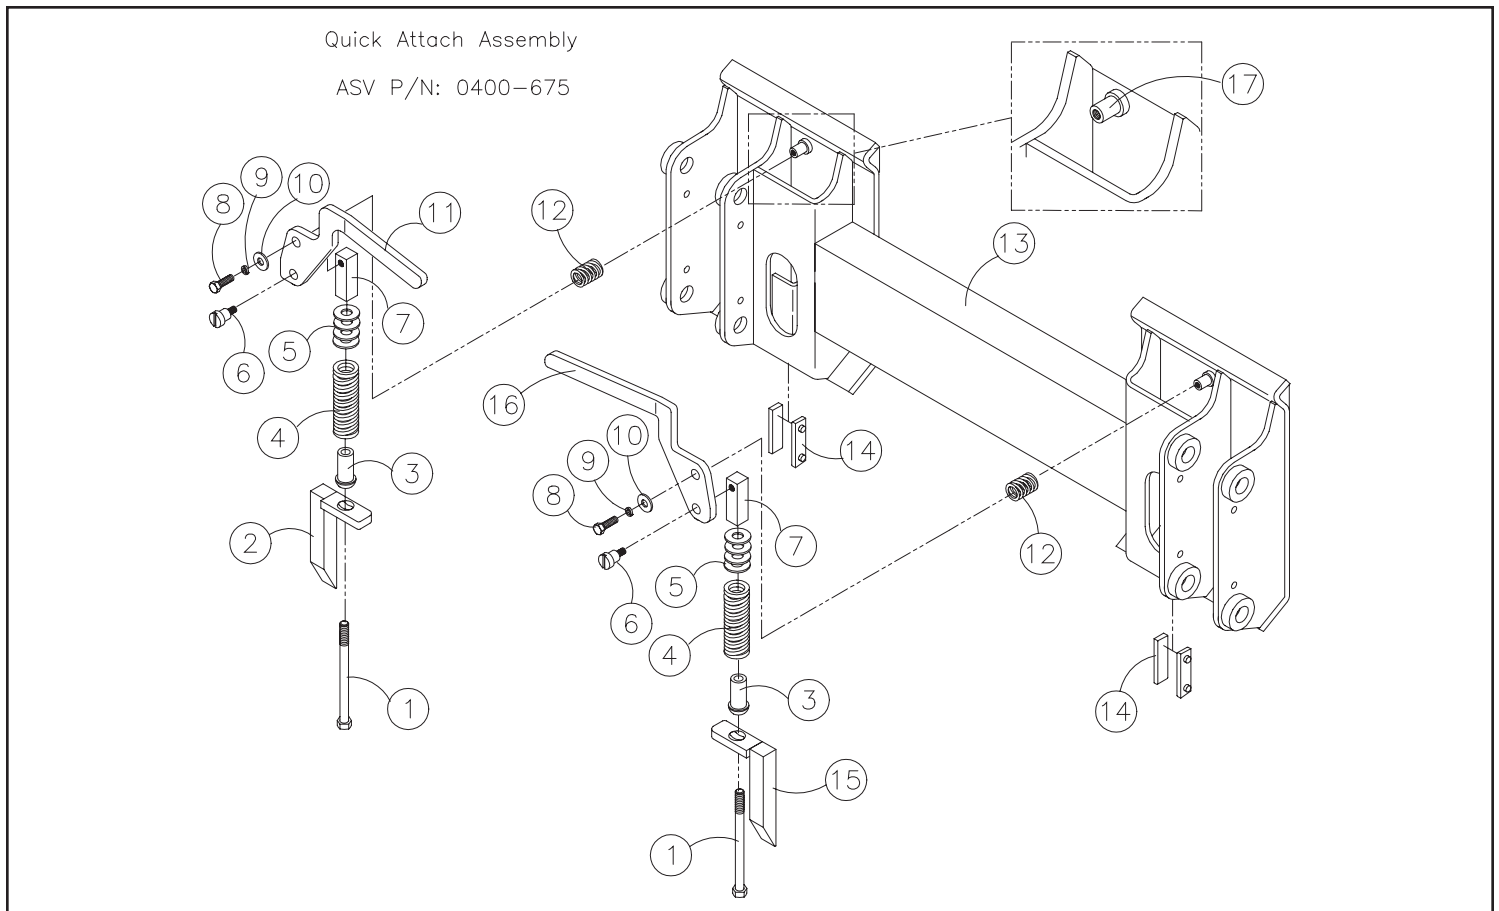


QUICK ATTACH ASSEMBLY (SN: RSC 02286-Current)


<https://truckmanualshub.com/>

Section 17

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	2045-359	1	WLMT,QUICK-ATTACH,MANUAL				
2	2045-761	1	HANDLE,QA,LH				
3	2045-762	1	HANDLE,QA,RH				
4	2045-242	1	WLMT PIN RH				
5	2045-243	1	WLMT PIN LH				
6	2045-245	2	BLOCK LATCH				
7	8102-418	2	CAPSCREW,HH,1/2-13UNCx 6.0,GD8				
8	0090-002	2	BOLT,SHOULDER,5/8"x.625" GD 8				
9	8050-347	4	WASHER,WROUGHT,1/2,STD,ZN				
10	2015-018	2	WASHER,FENDER,1.75x0.53x0.125				
11	8051-620	6	WASHER,SPRING LOCK,1.0,ZN				
12	0400-621	2	SPOOL,PIVOT				
13	0304-799	2	CAPSCREW,HH,1/2-13UNCx3.75,GD8				
14	8040-606	2	NUT,HEX,NYLOCK,1/2-13 UNC,ZN				
15	0400-651	2	SPRING,COMPRESSION				
16	0300-607	2	ZERK,GREASE,1/4-28				

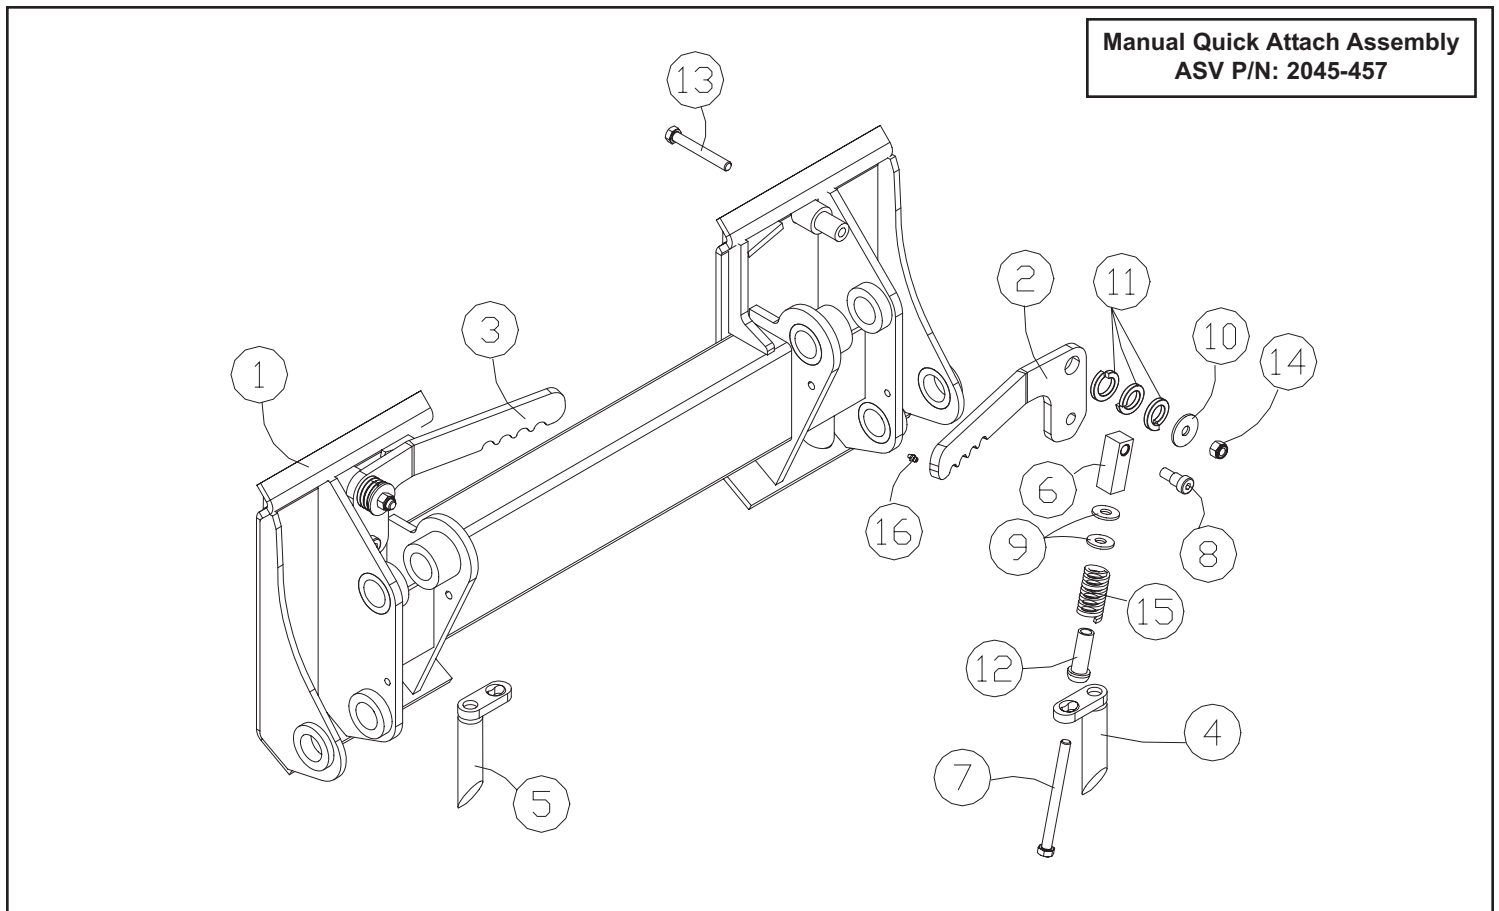

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0304-546	1	HEATER,CAB, RC-30				
2	0304-548	2	MNT,HEATER				
3	0305-214	1	HOSE,HEATER,5/8 x 33"				
4	0304-553	1	HOSE,HEATER,5/8,72"				
5	0304-554	1	HOSE,HEATER,5/8,38"				
6	0301-558	1	VALVE,FLOW,HEATER				
7	0401-975	1	CABLE,PUSH-PULL,HEATER				
8	0301-514	1	KNOB,SWITCH,HEATER				
9	8102-038	2	CAPSCREW,HH 1/4-20UNCx7/8 GRD8				
10	8040-366	2	NUT,HEX,NYLOCK,1/4-20 UNC,ZN				
11	0301-654	1	NUT,JAM,3/8-24 UNF				
12	0301-110	6	CLAMP,HOSE,#8				
13	0310-838	1	CLAMP,TUBE,DOUBLE,1.0				
14	0304-670	1	ADAPTER,5/8BARB-3/8MPT-90^				
15	0304-570	1	ADAPTER,6MP-10HOSE,BARB				
16	0307-720	1	CAPSCREW,HH,M8x1.25x20				
17	8051-242	1	WASHER,SPRING LOCK,5/16,ZN				
18	8050-277	1	WASHER,WROUGHT,3/8,SAE,ZN				
19	0304-575	1	HARNESS,HEATER				
20	0304-122	1	SWITCH,ON/OFF,HEATER				
21	0310-587	4	CLAMP,WIRE,3/8,ADHESIVE				
22	2045-748	2	GROMMET,RUBBER,1-3/8"				
23	8050-222	6	WASHER,WROUGHT,1/4,STD,ZN				
24	0310-713	1	GASKET, SWITCH				
25	8102-039	4	CAPSCREW,HH,1/4-20UNCx.625,GD8				
26	8051-212	4	WASHER,SPRING LOCK,1/4,ZN				

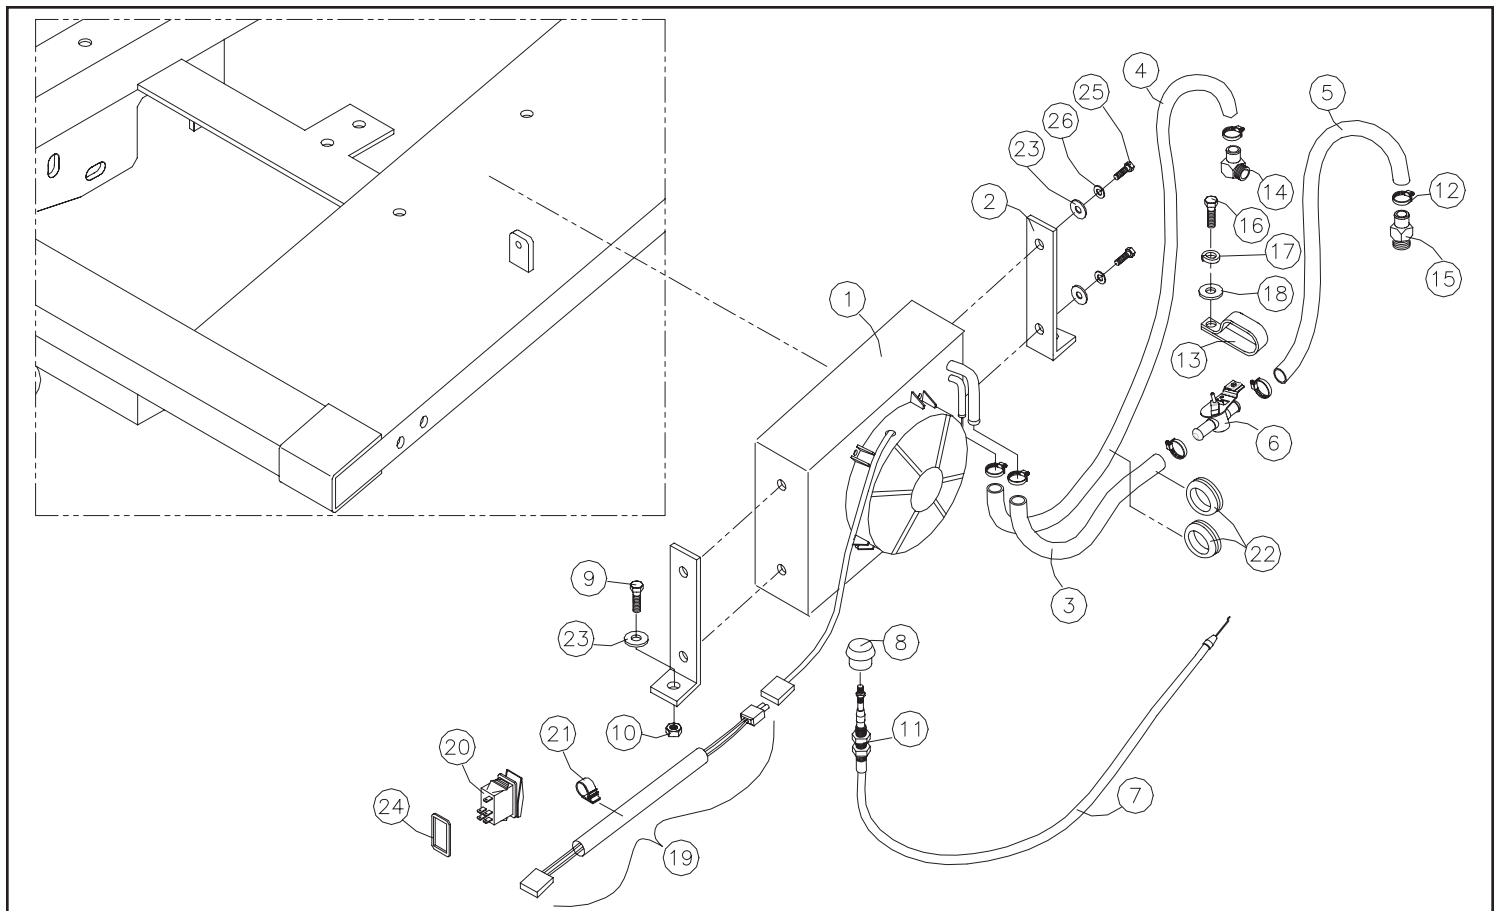


HEATER/AIR CONDITIONING ASSEMBLY (SN: RSC 00101-Current)

<https://truckmanuals.hub.com/>


Section 19

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	8102-139	1	CAPSCREW,HH5/16-18UNCx2.50 GD8	41	0782-065	1	ARM,TENSION,COMPRESSOR
2	8051-242	3	WASHER,SPRING LOCK,5/16,ZN				
3	8050-222	1	WASHER,WROUGHT,1/4,STD,ZN				
4	0201-573	1	SPACER,TUBE,.75x.5x1				
5	0782-019	1	DRYER				
6	0201-628	1	SPACER,CLAMP				
7	0782-048	2	HOSE,A/C,#6,92.00"				
8	0782-053	2	HOSE,A/C,#6,55.50"				
9	0314-269	3	NUT,FLANGE,TOPLK,3/8-16UNC,GDG				
10	8050-277	1	WASHER,WROUGHT,3/8,SAE,ZN				
11	0782-064	1	WLMT,MNT,COMPRESSOR				
12	8050-262	3	WASHER,WROUGHT,5/16,STD,ZN				
13	8102-225	2	CAPSCREW,HH,3/8-16 UNCx1.5,GD8				
14	8102-236	1	CAPSCREW,HH,3/8-16UNCx5.0 GD8,				
15	8102-132	1	CAPSCREW,HH,5/16-18UNCx1.0 GD8				
16	0200-507	1	SPACER,FAN,3024C,A/C				
17	0200-508	1	PULLEY,ADDITIONAL,CRANKSHAFT,3				
18	0304-670	1	ADAPTER,5/8BARB-3/8MPT-90				
19	0782-049	2	HOSE,A/C,#10,98.50"				
20	0782-052	2	HOSE,A/C,#8,64.80"				
21	0782-038	1	COMPRESSOR,AC,RC				
22	0201-645	1	BELT,V, A SERIES, 1/2 x 48.00				
23	0782-088	1	RELAY,CONDENSER,12V				
24	0782-078	1	COIL,CONDENSER				
25	0782-070	1	MNT,CONDENSER,ROOFTOP				
26	0301-558	1	VALVE,FLOW,HEATER				
27	0782-066	1	VALVE,EXPANSION,905				
28	0782-067	2	ASSY,BLOWER				
29	0782-073	1	COVER,AC				
30	0782-072	1	SWITCH,TOGGLE,AC				
31	0782-082	2	KNOB				
32	0782-075	1	CABLE,CONTROL				
33	0782-037	3	LOUVER,A/C,PERRIN				
34	0782-060	4	LOUVER,ROUND,AC,RC50				
35	0782-085	1	ASSY,FAN				
36	0782-069	2	RESISTOR				
37	0782-068	1	THERMOSTAT,AC				
38	0782-081	1	COVER,HOUSING				
39	0782-089	1	ASSY,EVAPORATOR				
40	0200-527	1	TEE,5/8,BARBED				


COMPRESSOR ASSEMBLY

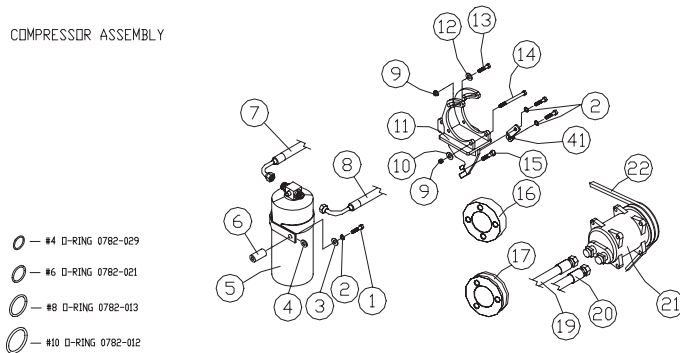


UPPER HOUSING ASSEMBLY

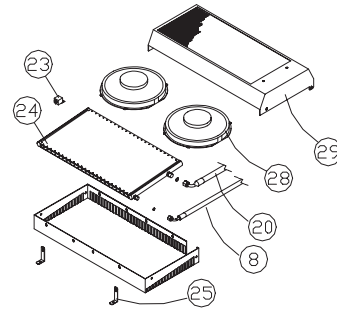

LOWER HOUSING ASSEMBLY

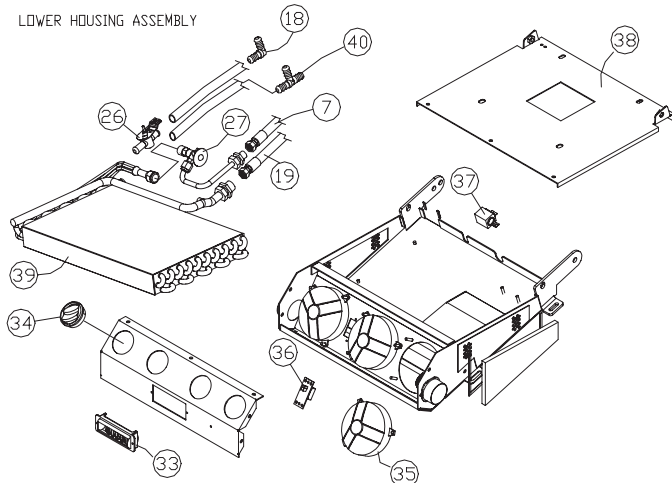

SIDE CONSOLE ASSEMBLY

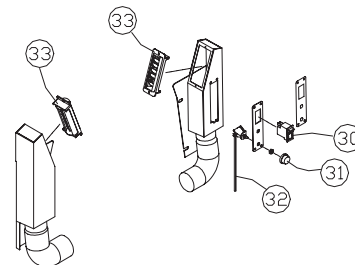


TRACK INSTALLATION TOOL (SN: RSC 00101-Current)

<https://truckmanuals.hud.com/>

Section 20

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	0702-214	1	ASSY,INSTALLATION,TRACK				
2	0702-171	1	WLMT,HOOK,TRACK				
3	8102-235	1	CAPSCREW,HH,3/8-16UNCx4.5,GD8,				
4	8102-232	1	CAPSCREW,HH,3/8-16,UNCx3.25,GD				
5	0702-175	1	WLMT,TRACK,HANDLE				
6	0702-143	1	CAP,3/4-10				
7	0702-180	1	WLMT,CATCH,TRACK				
8	8040-486	2	NUT,HEX,NYLOCK,3/8-16 UNC,ZN				
9	0702-219	1	INSERT,WHEEL				

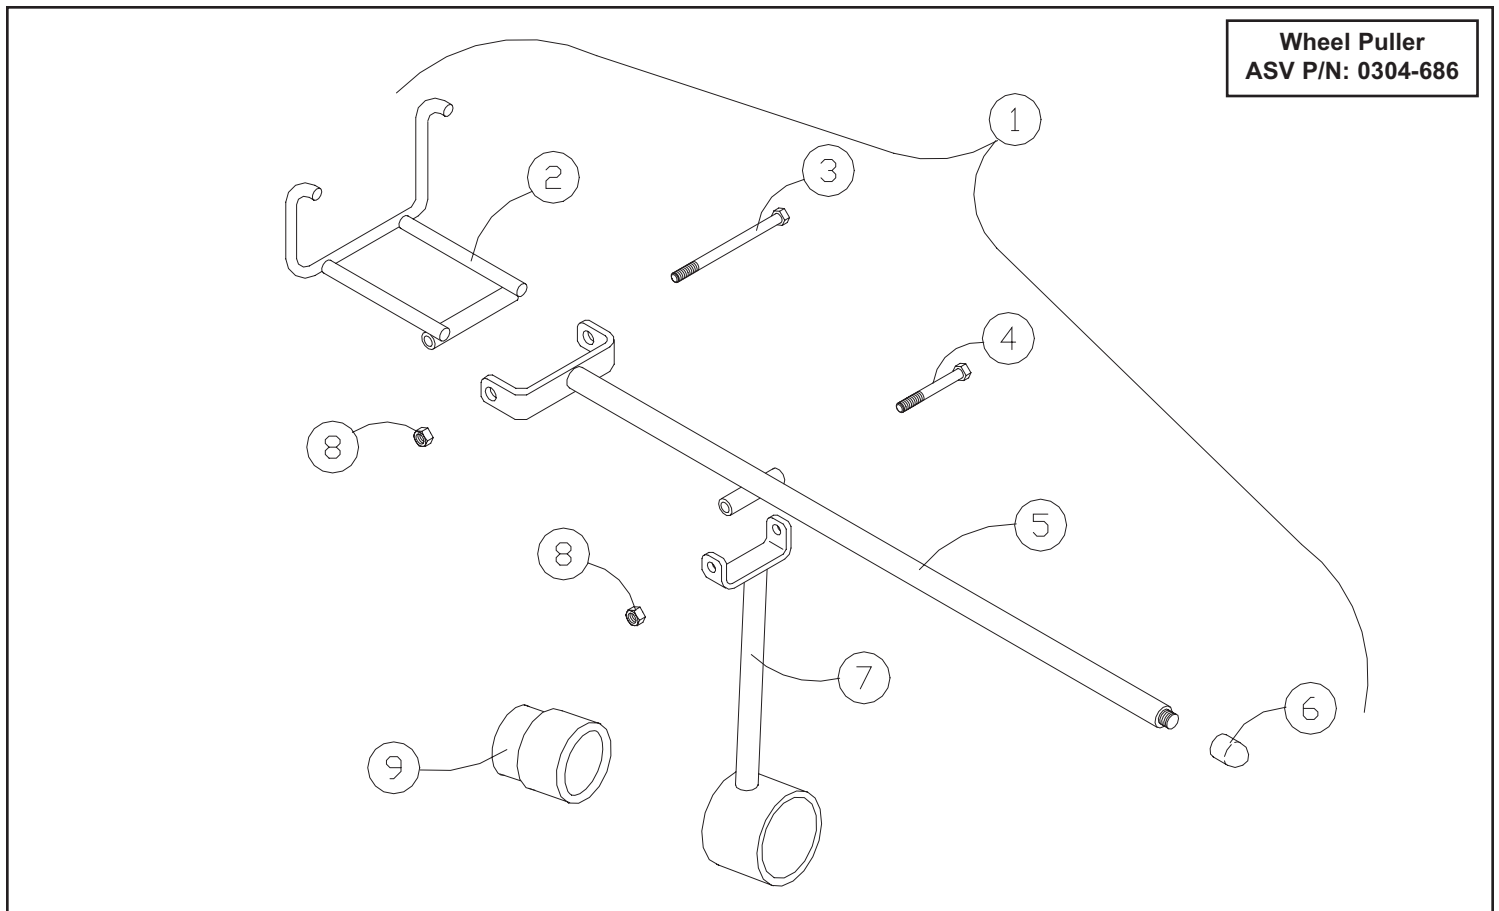

Terex Construction Americas

8800 Rostin Road

Southaven, MS 38671

(888)-201-6008

(662)-393-1800

www.terex.com
