
https://truckmanualshub.com/

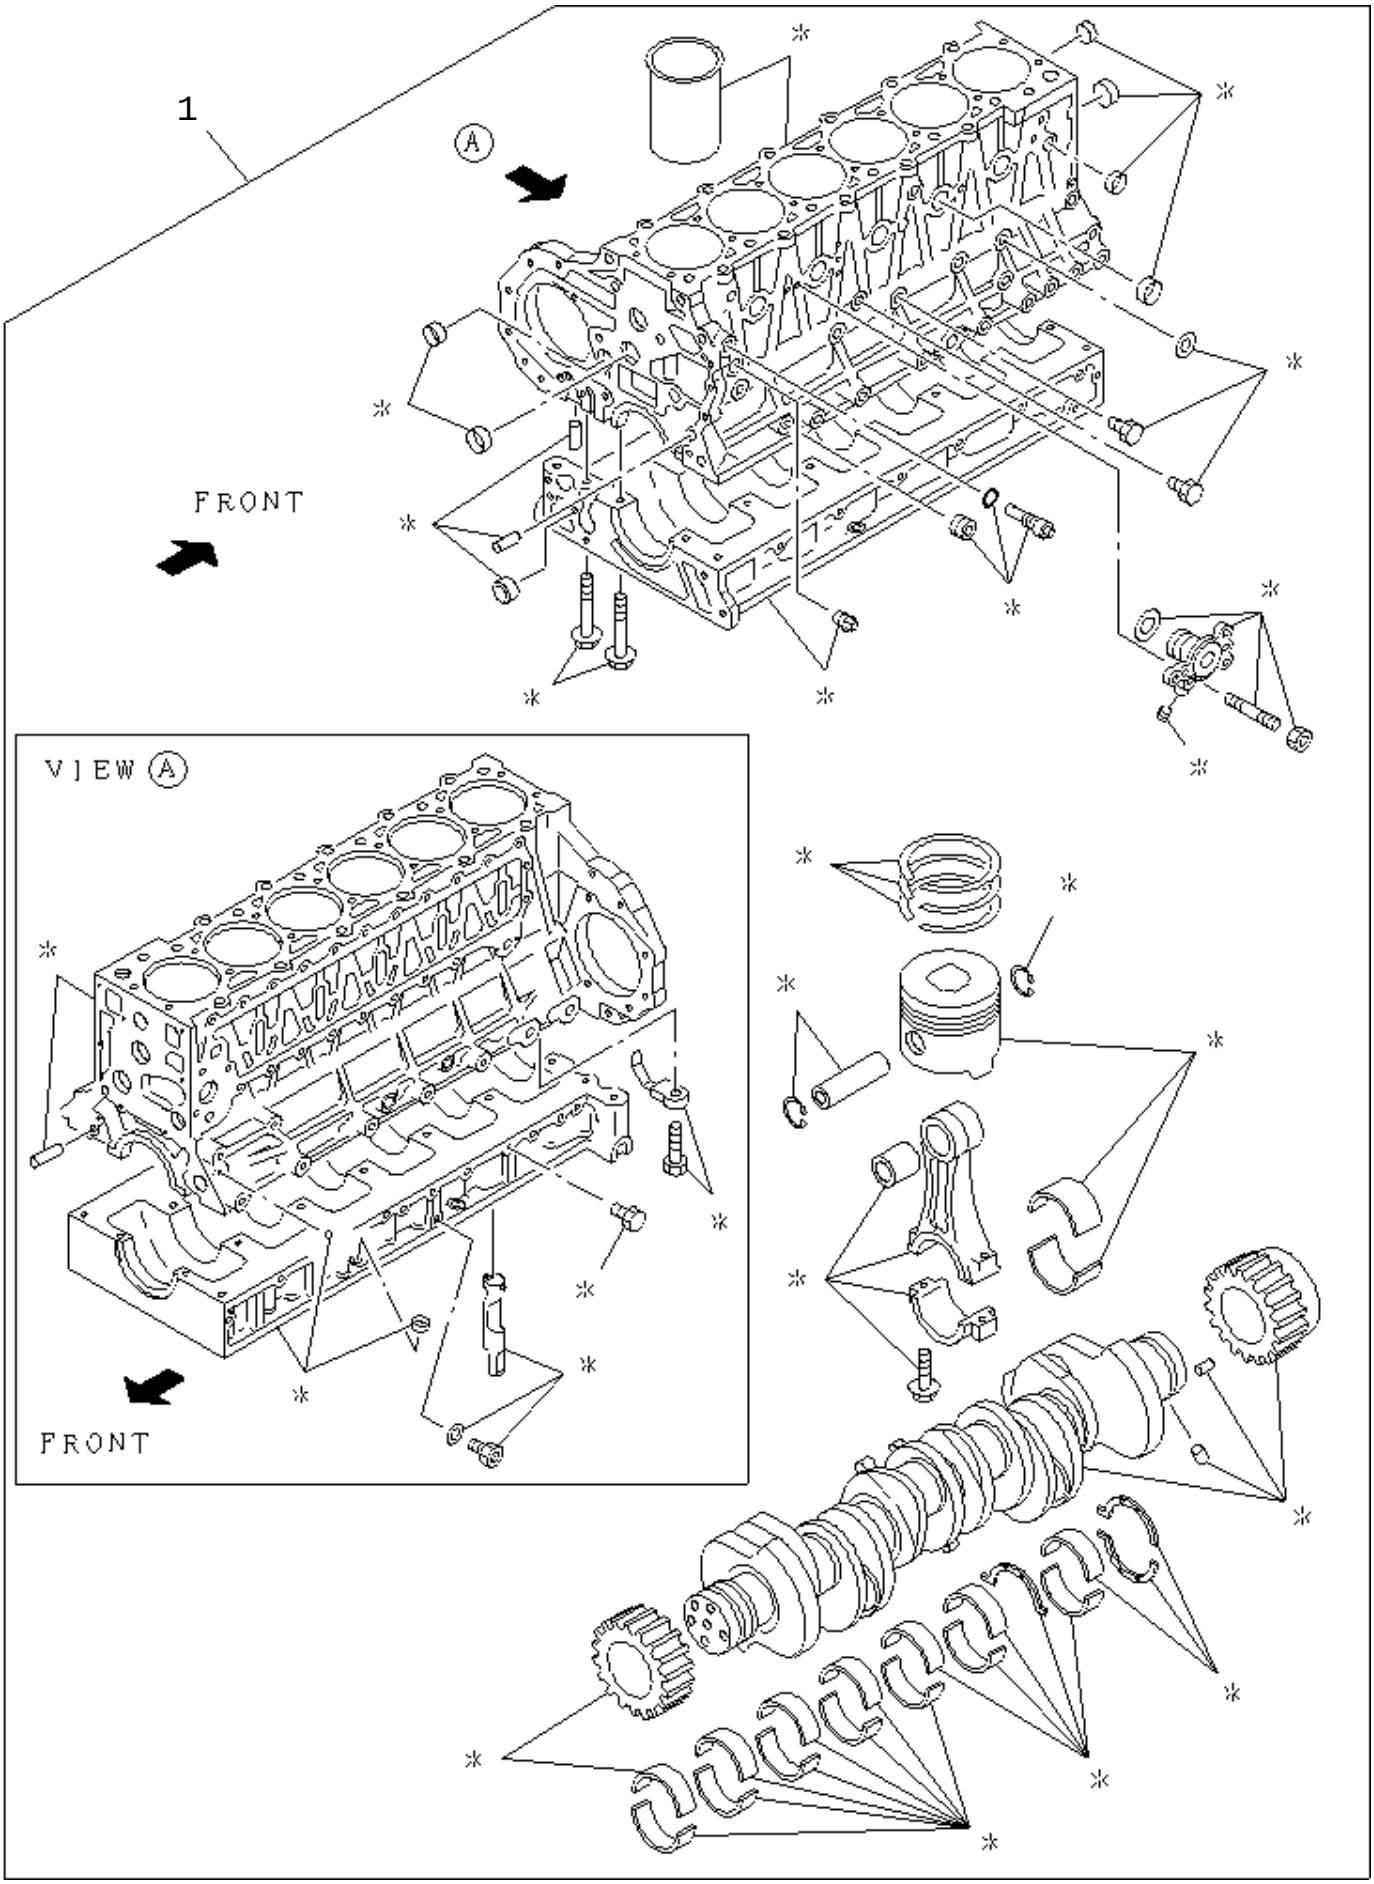

https://truckmanualshub.com/


0-01 PARTIAL ENGINE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		ENGINE ASM; PARTIAL 1-87310-799-0 1-87310-942-0	C	1312-1312 1401-	01 01	A A	

https://truckmanualshub.com/

0-05 ENGINE GASKET KIT


ENG OVERHAUL NO.1

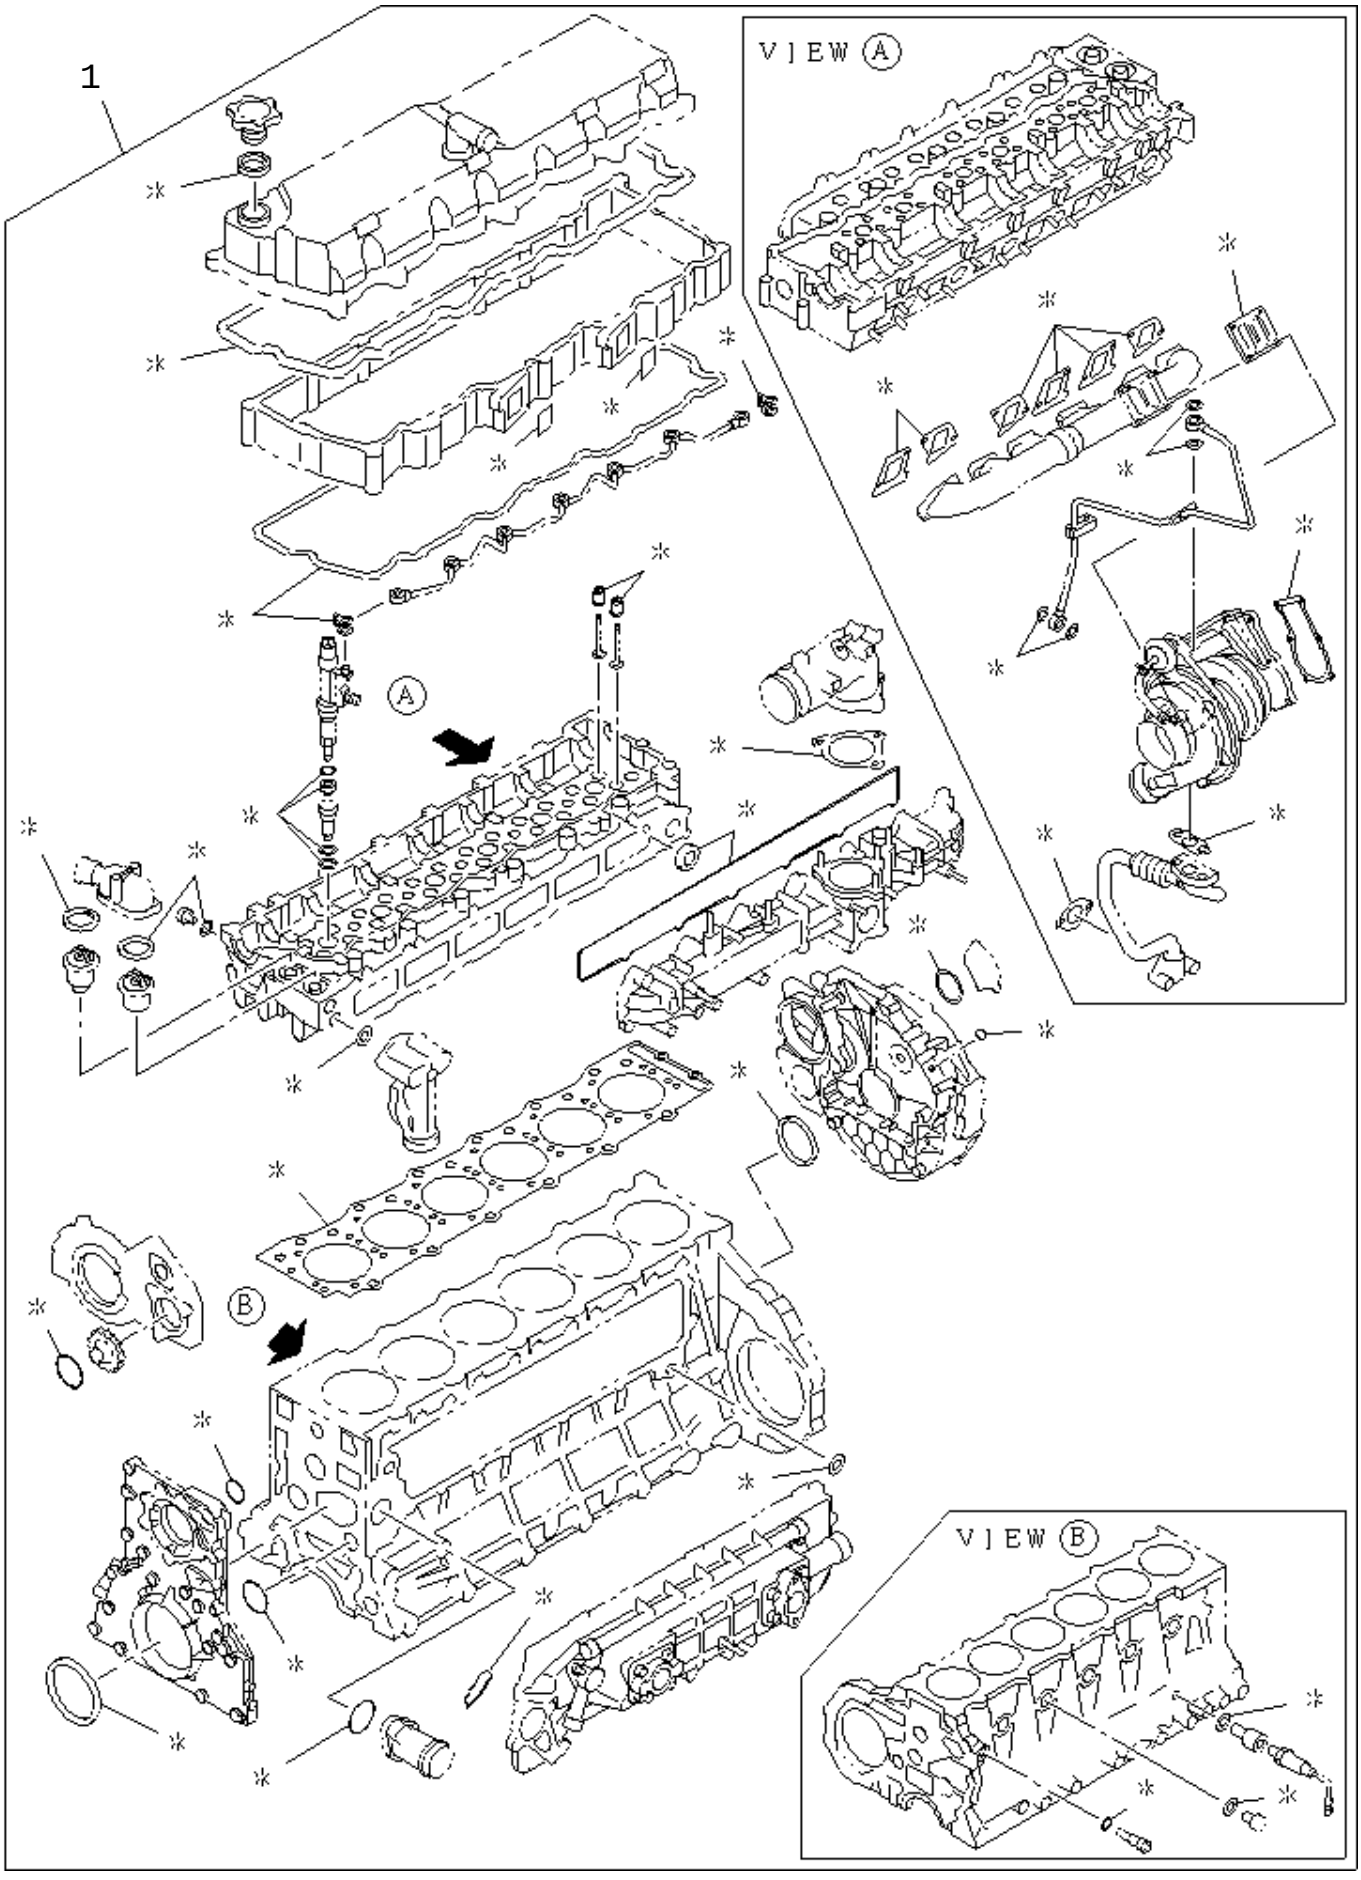

https://truckmanualshub.com/

0-05 ENGINE GASKET KIT


ENG OVERHAUL NO.2

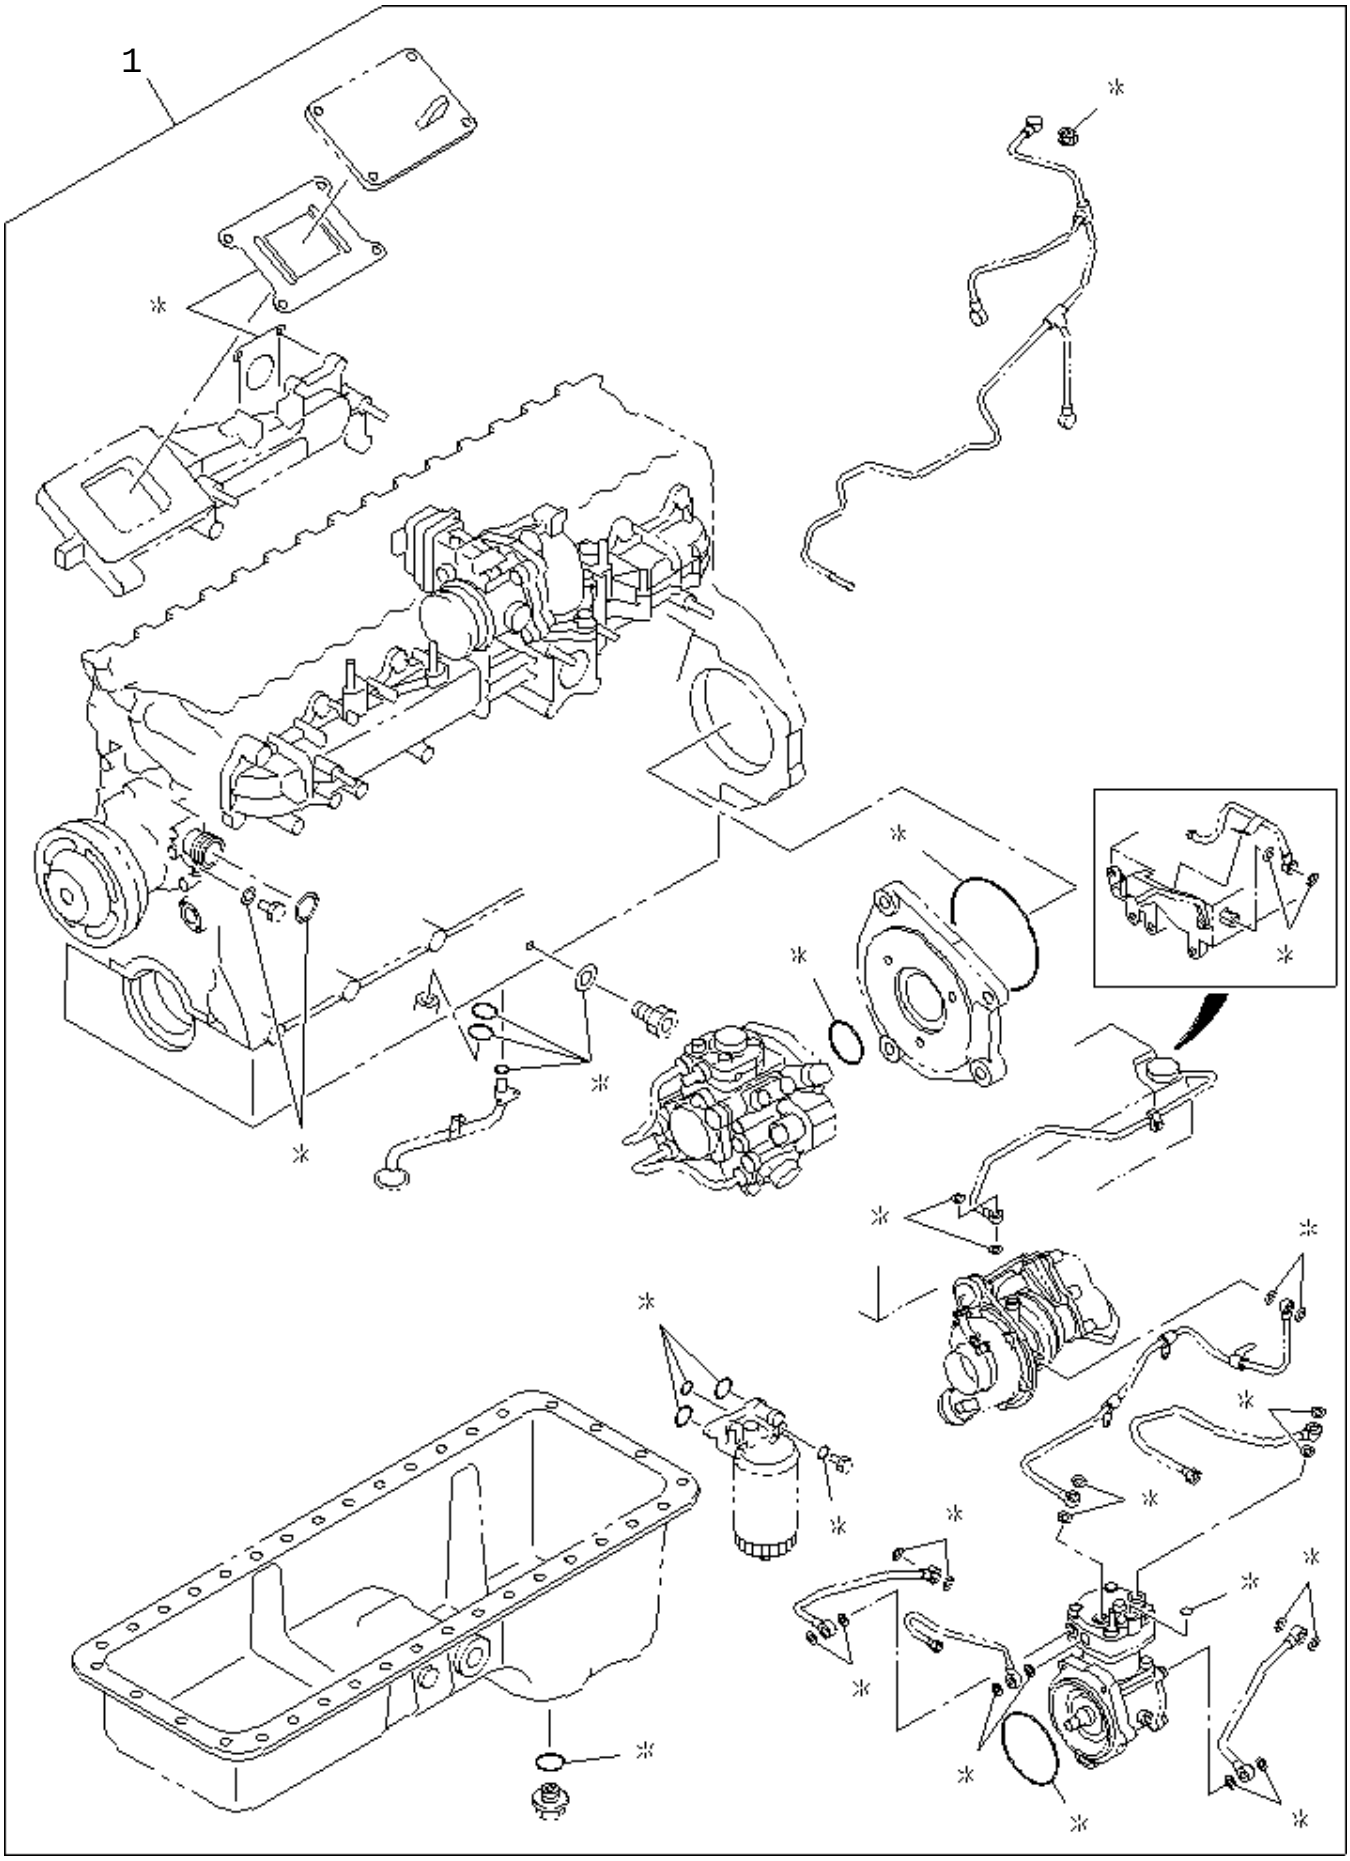

https://truckmanualshub.com/

0-05 ENGINE GASKET KIT

ENG HD OVERHAUL

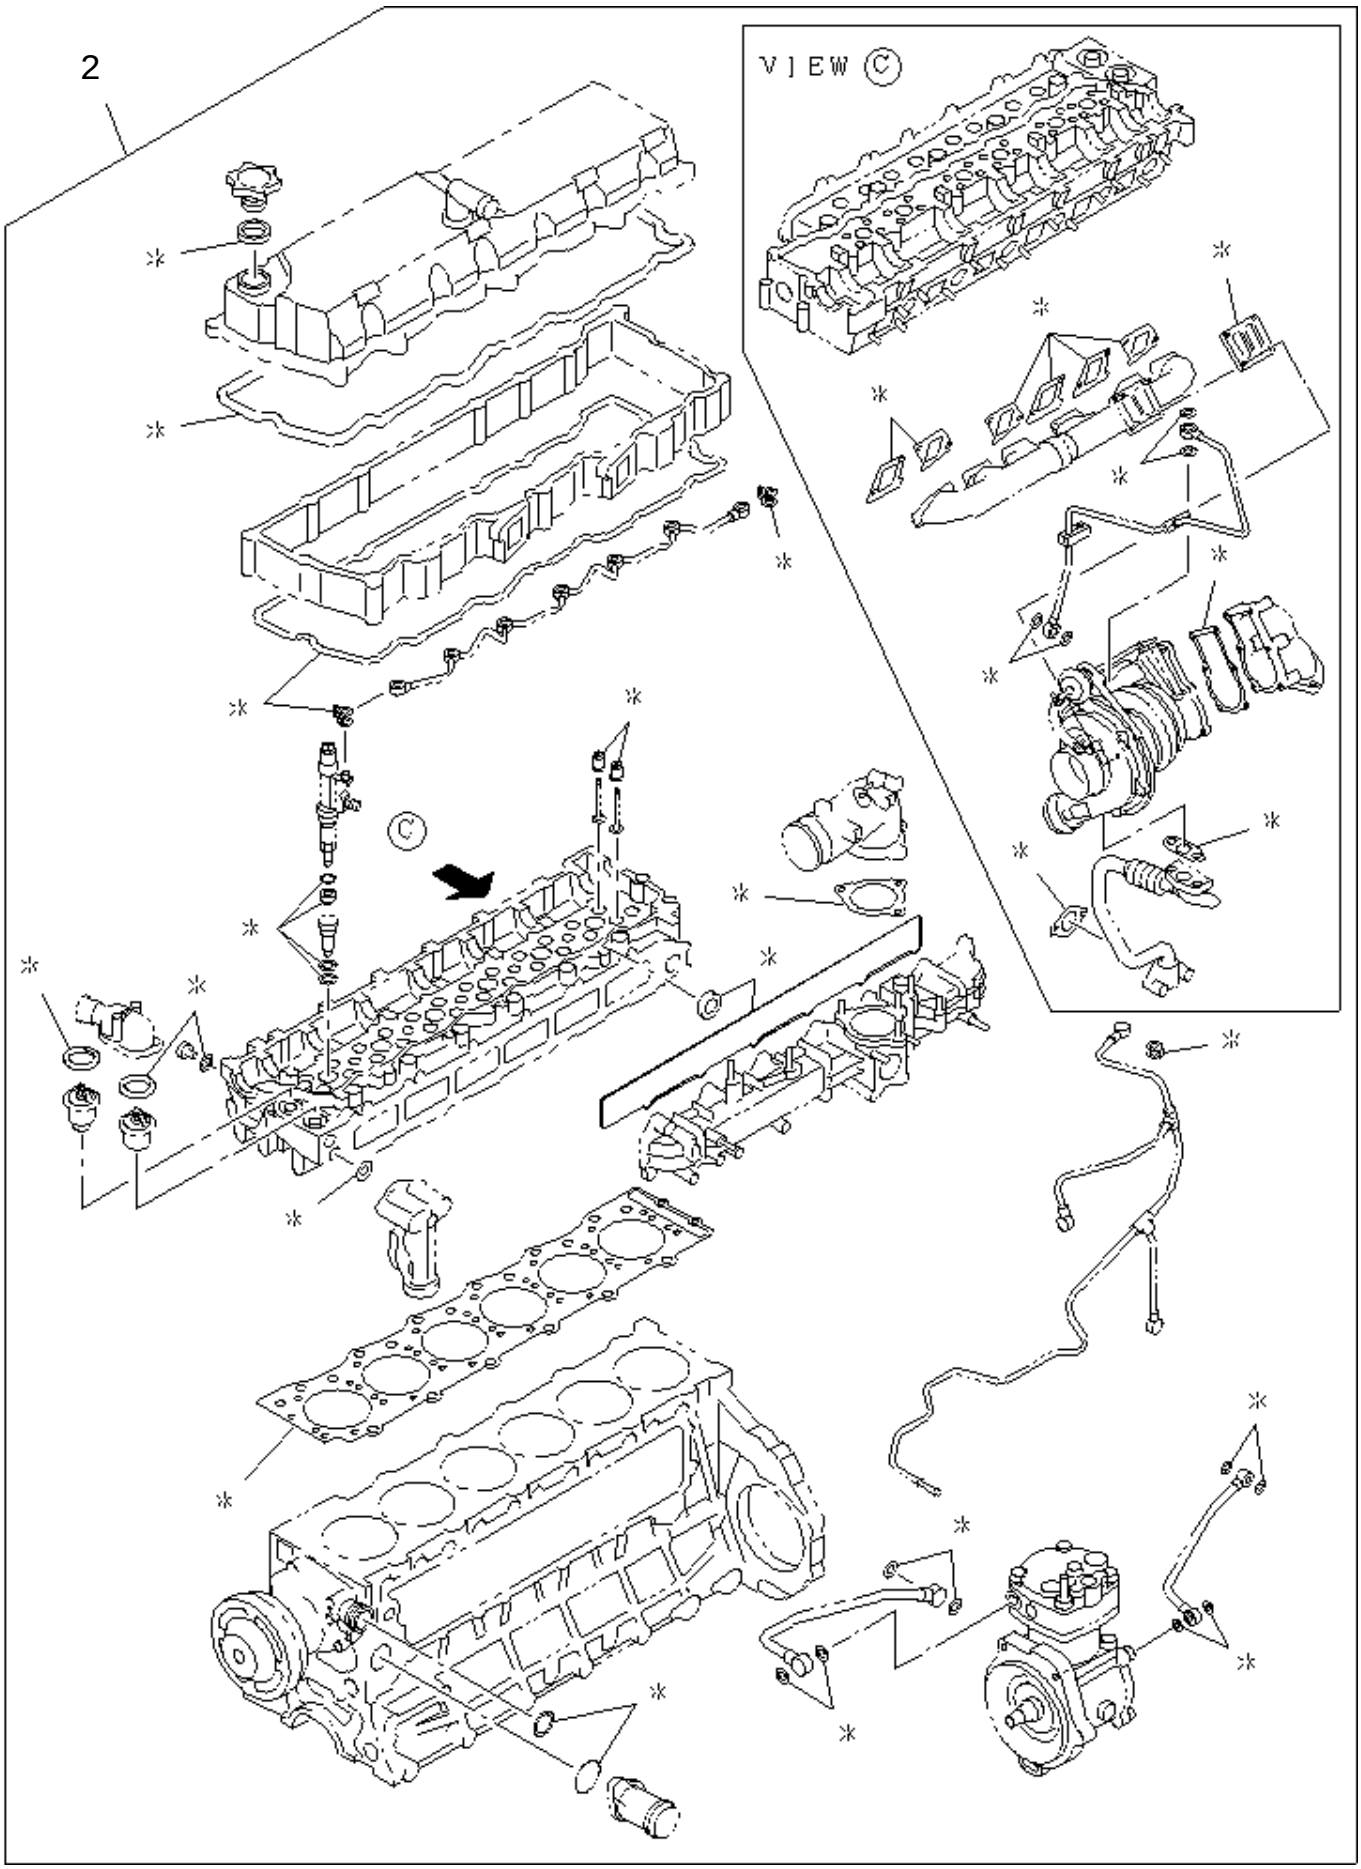


https://truckmanualshub.com/

0-05 ENGINE GASKET KIT

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1	B	GASKET SET; ENG OVERHAUL					
		1-87814-157-0	C	1312-1312	01	A	
		1-87814-212-0		1401-1408	01	A	
		1-87814-681-0		1409-	01	A	
2		GASKET SET; ENG HD OVERHAUL					
		1-87814-061-0	C	1312-1312	01	A	
		1-87814-213-0		1401-1408	01	A	
		1-87814-682-0		1409-	01	A	

https://truckmanualshub.com/

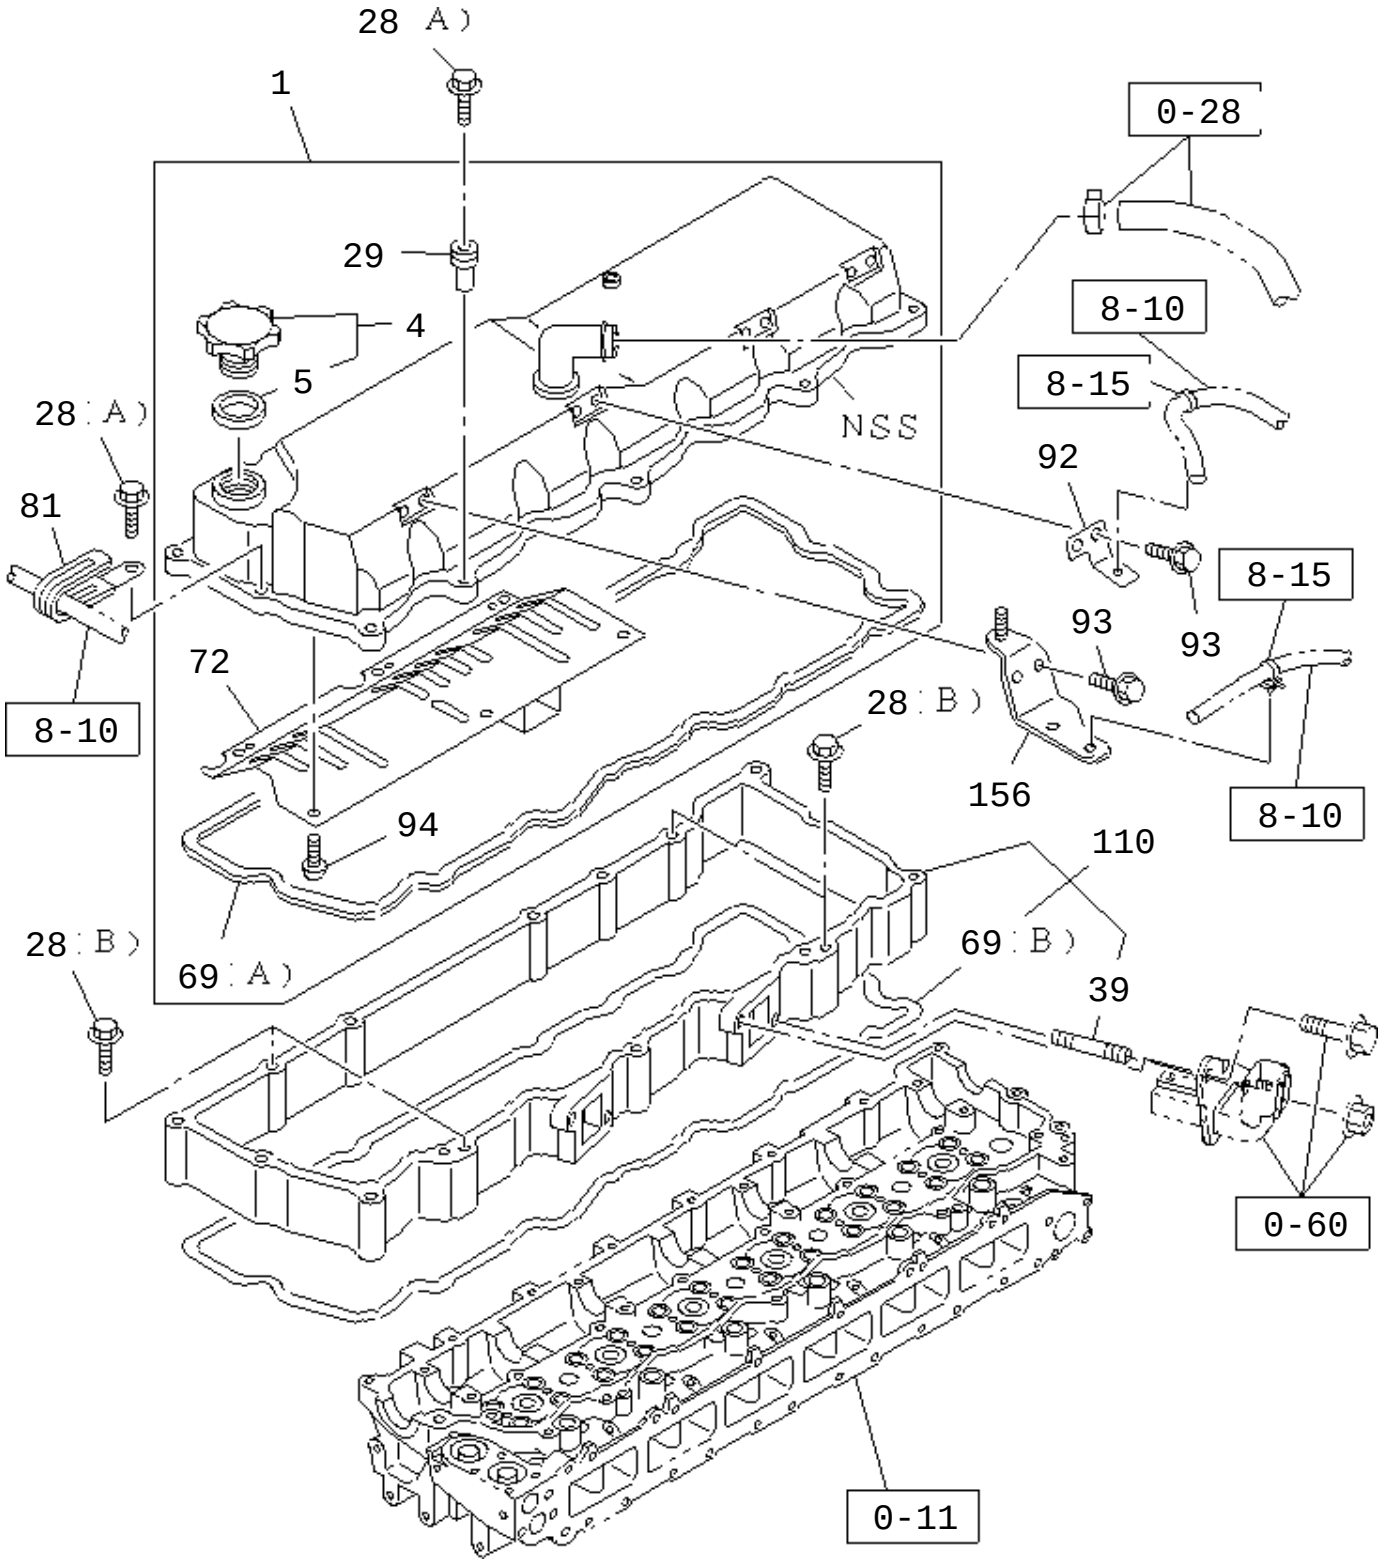


https://truckmanualshub.com/

0-10 CYLINDER HEAD COVER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		COVER; CYL HD					
		8-98208-874-0		1312-	01	A	
4		CAP; OIL FILLER					
		8-94399-723-0		1312-	01	A	
5		GASKET; OIL FILLER					ALSO INCLUDED IN GASKET SET(ENGINE).
		8-94399-689-0		1312-	01	A	
							ID=49 OD=58
28		BOLT; HD COVER					
		0-28050-845-0		1312-	04	A	
							(B)
							M8X45 FLANGE
		0-28050-870-0		1312-	11	A	
							(A)
							M8X70 FLANGE
29		RUBBER; MTG,HD COVER					
		8-94392-097-0		1312-	11	A	
39		STUD; COVER,HD					
		8-94396-512-0		1312-	02	A	
							M8X28 L=38
69		GASKET; HD TO COVER					ALSO INCLUDED IN GASKET SET(ENG. & H
		8-94391-379-0		1312-	01	A	
							(A)
		8-94391-380-0		1312-	01	A	
							(B)
72		PLATE; INNER HD COVER					
		8-94392-655-0		1312-	01	A	
81		CLIP; HARNESS					
		8-97367-985-1		1312-	02	A	
							ID=18 L=44
92		BRACKET; CLIP					
		8-97602-621-0		1312-1405	01	A	
		8-98271-674-0		1406-	01	A	
93		BOLT; BRKT					
		0-28050-812-0		1312-	04	A	
							M8X12 FLANGE
94		SCREW; BAFFLE PLATE,CYL HD COVER					
		0-35050-408-0		1312-	06	A	
							M4X8
110		COVER; CYL HEAD LWR					
		8-94390-862-3		1312-	01	A	
156		BRACKET; ENGINE COVER					
		8-97616-751-0		1312-	01	A	
0-11		Move to 0-11					
0-28		Move to 0-28					
0-60		Move to 0-60					
8-10		Move to 8-10					
8-15		Move to 8-15					


https://truckmanualshub.com/

CYL HEAD COMPONENT

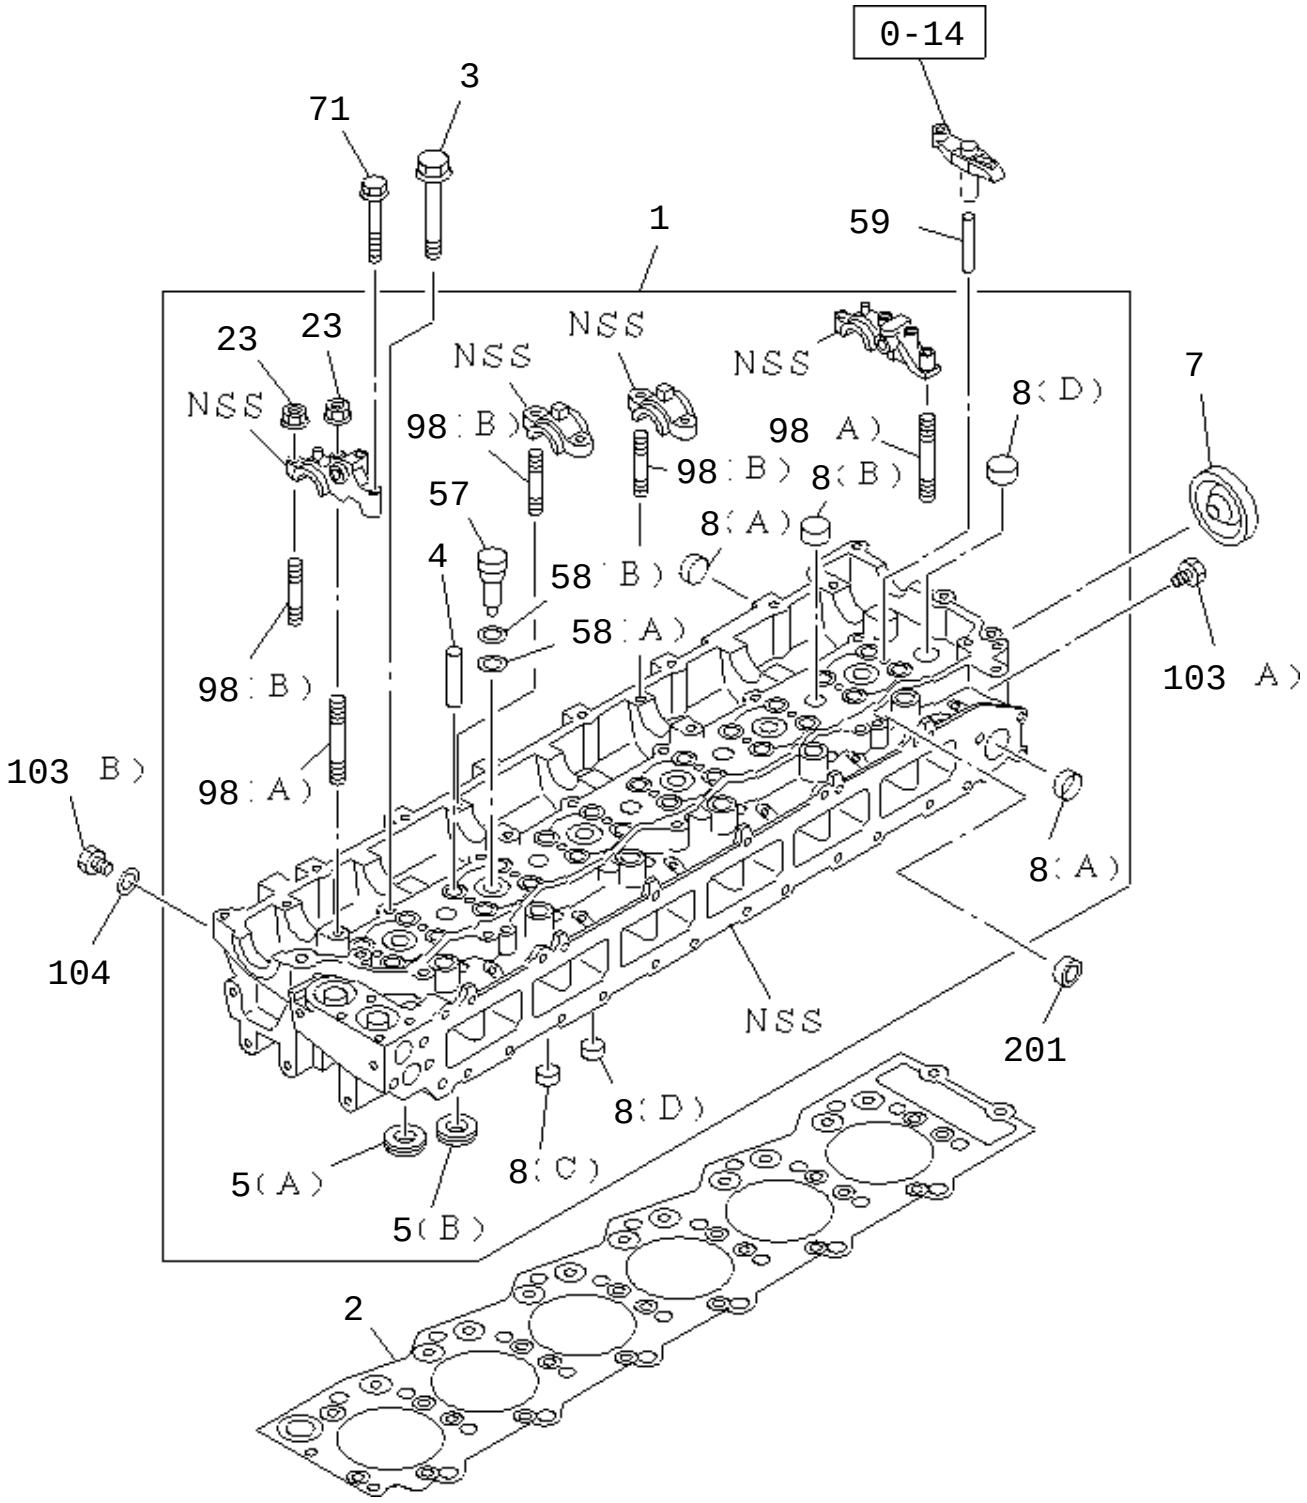


https://truckmanualshub.com/

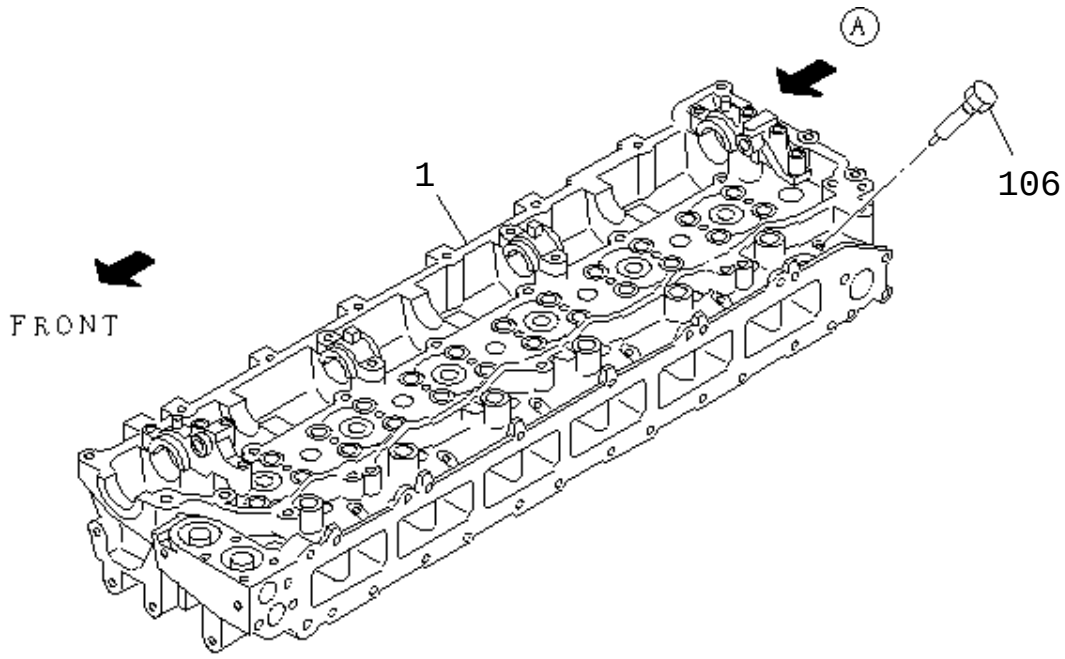


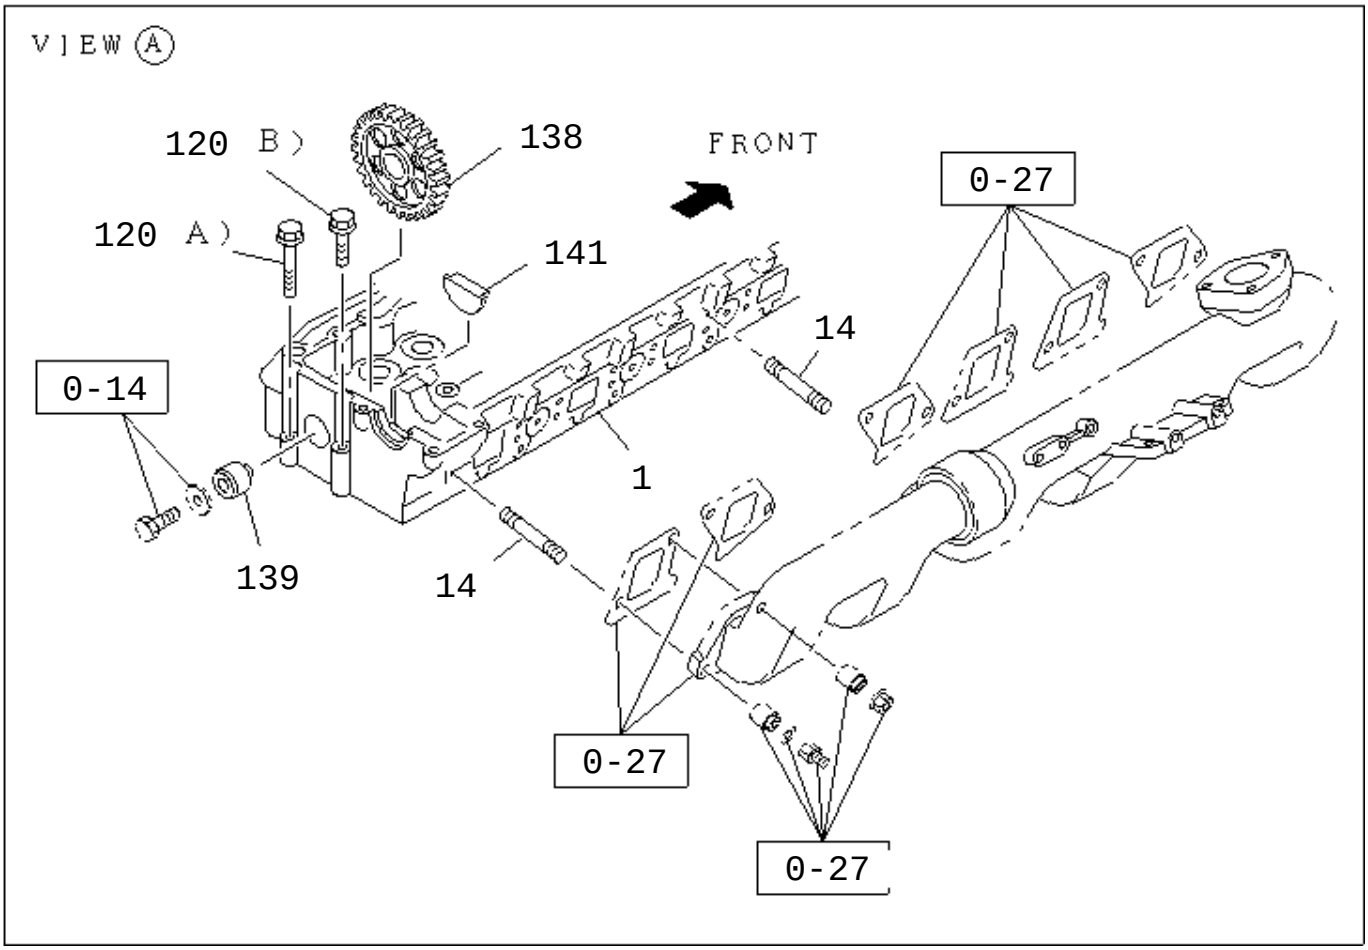

https://truckmanualshub.com/

ENG HANGER AND FIXING

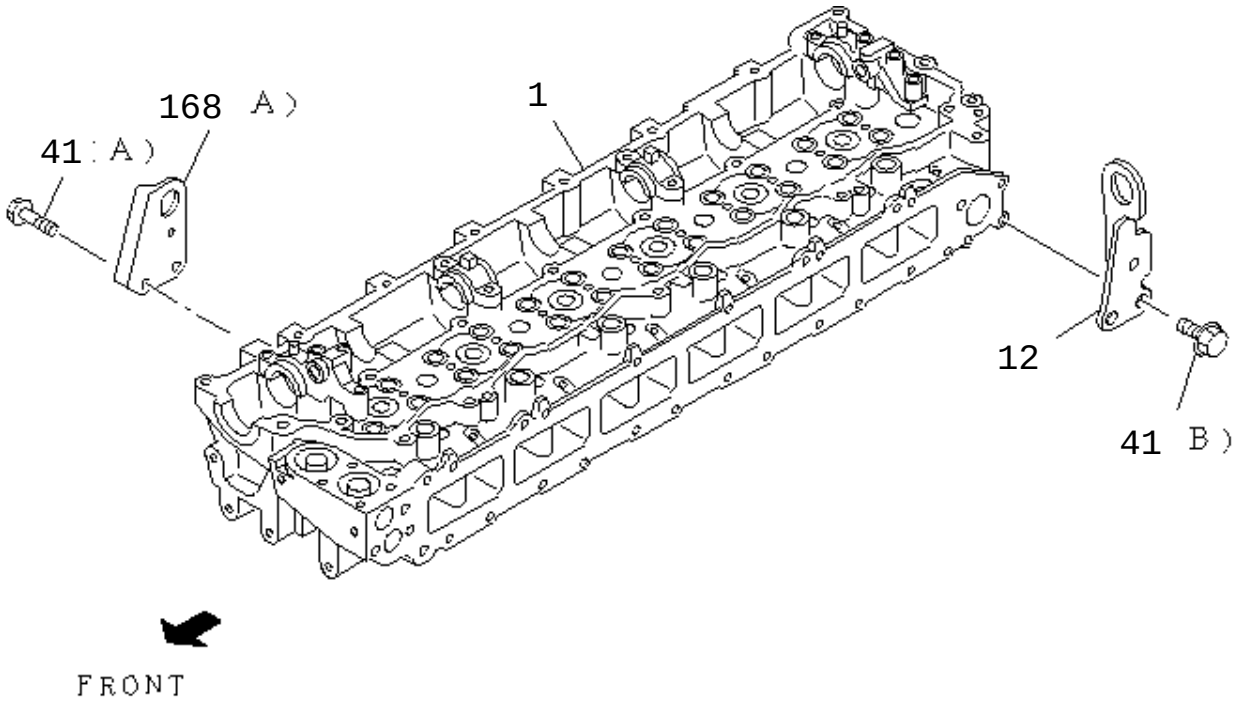

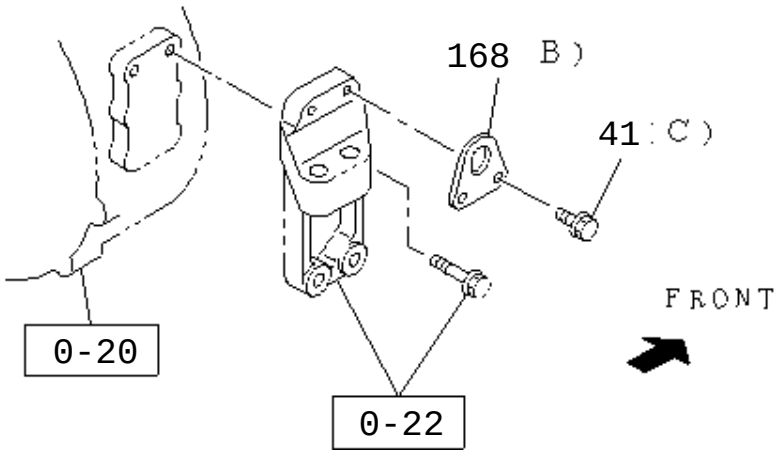

https://truckmanualshub.com/

0-11 CYLINDER HEAD

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		HEAD ASM; CYL					
		8-98243-823-0		1312-	01	A	
2		GASKET; CYL HD					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
		8-97601-819-5		1312-	01	A	
3		BOLT; CYL HD TO BLOCK					
		8-97077-638-0		1312-1407	26	A	
							M14X115 W/FLANGE
		8-98260-005-0		1408-	26	A	
4		GUIDE; VLV					
		8-97376-719-2		1312-	24	A	
							L=57
5		SEAT; VLV INSERT					
		8-98028-874-0		1312-	12	A	
							(A) INLET ID=32 OD=38
		8-98028-875-0		1312-	12	A	
							(B) EXHAUST ID=31 OD=38
7		CUP; SEALING,CYL HEAD					
		8-98209-813-0		1402-	01	A	KD ENGINE<7MB> OD=51
		8-97096-826-0		1312-1401	01	A	
							OD=51
		8-97096-826-0		1402-	01	A	EXC. KD ENGINE<7MB> OD=51
8		CUP; SEALING,WATER JACKET					
		1-09600-012-2		1312-	07	A	
							(A) OD=32
		1-09600-016-0		1312-	06	A	
							(B) OD=25
		5-11129-006-0		1312-	07	A	
							(C) OD=16
		9-11129-128-0		1312-	11	A	
							(D) OD=20
12		HANGER; ENG,RR					
		8-94392-081-1		1312-	01	A	
14		STUD; EXH MANIF					
		8-94397-286-0		1312-	12	A	
							M10X60 L=75
23		NUT; CAM BRKT					
		0-91180-208-0		1312-	08	A	
							M8 FLANGE IDN
41		BOLT; ENG HANGER					
		0-28151-020-0		1312-	02	A	
							(A) M10X20 FLANGE
		0-28751-025-0		1312-	02	A	
							(B) M10X25 FLANGE
		0-28751-225-0		1312-	02	A	
							(C) M12X25 FLANGE
57		SLEEVE; NOZZLE HOLDER					
		8-97606-661-0		1312-	06	A	
58		GASKET; SLEEVE,NOZZLE HOLDER					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
		8-97604-916-0		1312-	06	A	
							(A) ID=26.4
		8-98004-187-0		1312-	06	A	
							(B) ID=26.2
59		GUIDE; BRIDGE					
		8-97381-603-1		1312-	12	A	
71		BOLT; CAM BRKT					
		0-28050-835-0		1312-	02	A	
							M8X35 FLANGE
98		STUD; CAM BRKT					
		8-94322-512-2		1312-	02	A	
							(A) M8X54 L=79


https://truckmanualshub.com/


0-11 CYLINDER HEAD

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
98		8-94322-513-2		1312-	06	A	(B) M8X41 L=66
103		PLUG; HD					
		8-98003-416-0		1312-	01	A	(A) M8X10
		9-09862-156-0		1312-	01	A	(B) M14X14 IDN
104		GASKET; PLUG					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09630-085-0		1312-1312	01	A	ID=14.2 OD=19.2
		8-98251-345-0		1401-	01	A	ID=14.2 OD=19.2
106		PLUG; GLOW PLUG HOLE					
		8-94392-236-0		1312-	06	A	
120		BOLT; CYL HD TO HSG					
		8-94399-554-0		1312-	01	A	(A) M10X73
		8-94399-555-0		1312-	01	A	(B) M10X43
138		GEAR; IDLE					
		8-97606-929-0		1312-	01	A	Z=41
139		SHAFT; IDLE GEAR					
		8-97186-398-1		1312-	01	A	
141		PLUG; RUBBER,CYL HD					
		8-98163-813-0		1312-	02	A	
168		HANGER; ENG,FRT					
		8-94394-071-2		1312-	01	A	(A)
		8-94394-398-1		1312-	01	A	(B)
201		GASKET; SLEEVE,INJ PUMP					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
		1-09639-034-0		1312-	06	A	
0-14		Move to 0-14					
0-27		Move to 0-27					
0-20		Move to 0-20					
0-22		Move to 0-22					

https://truckmanualshub.com/


BLOCK ASM AND OTHER PARTS

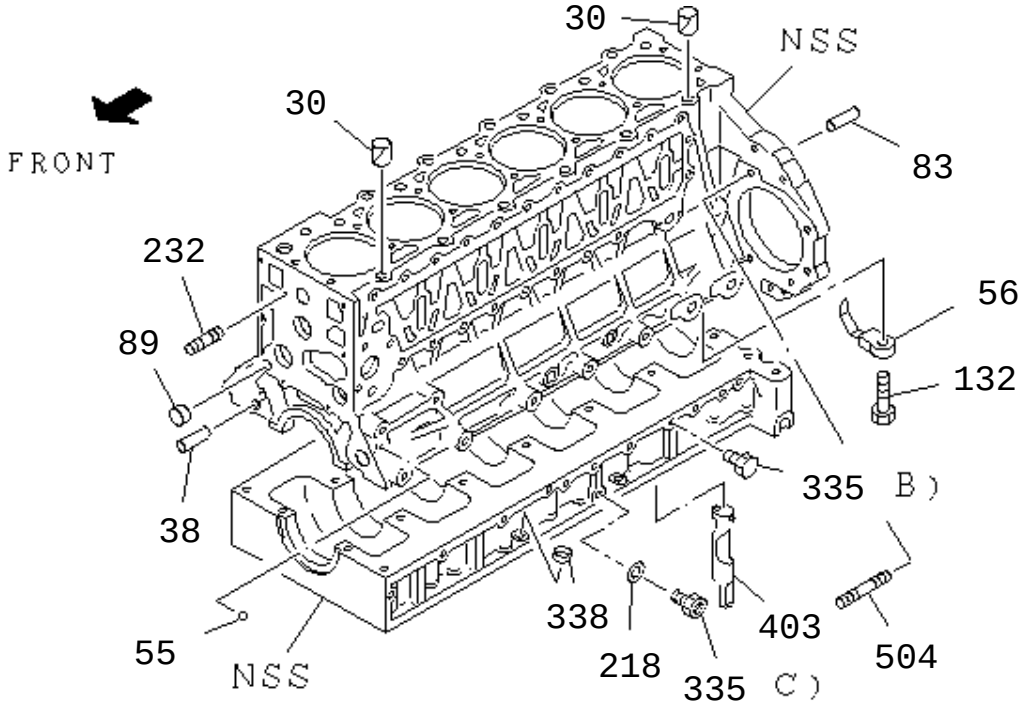


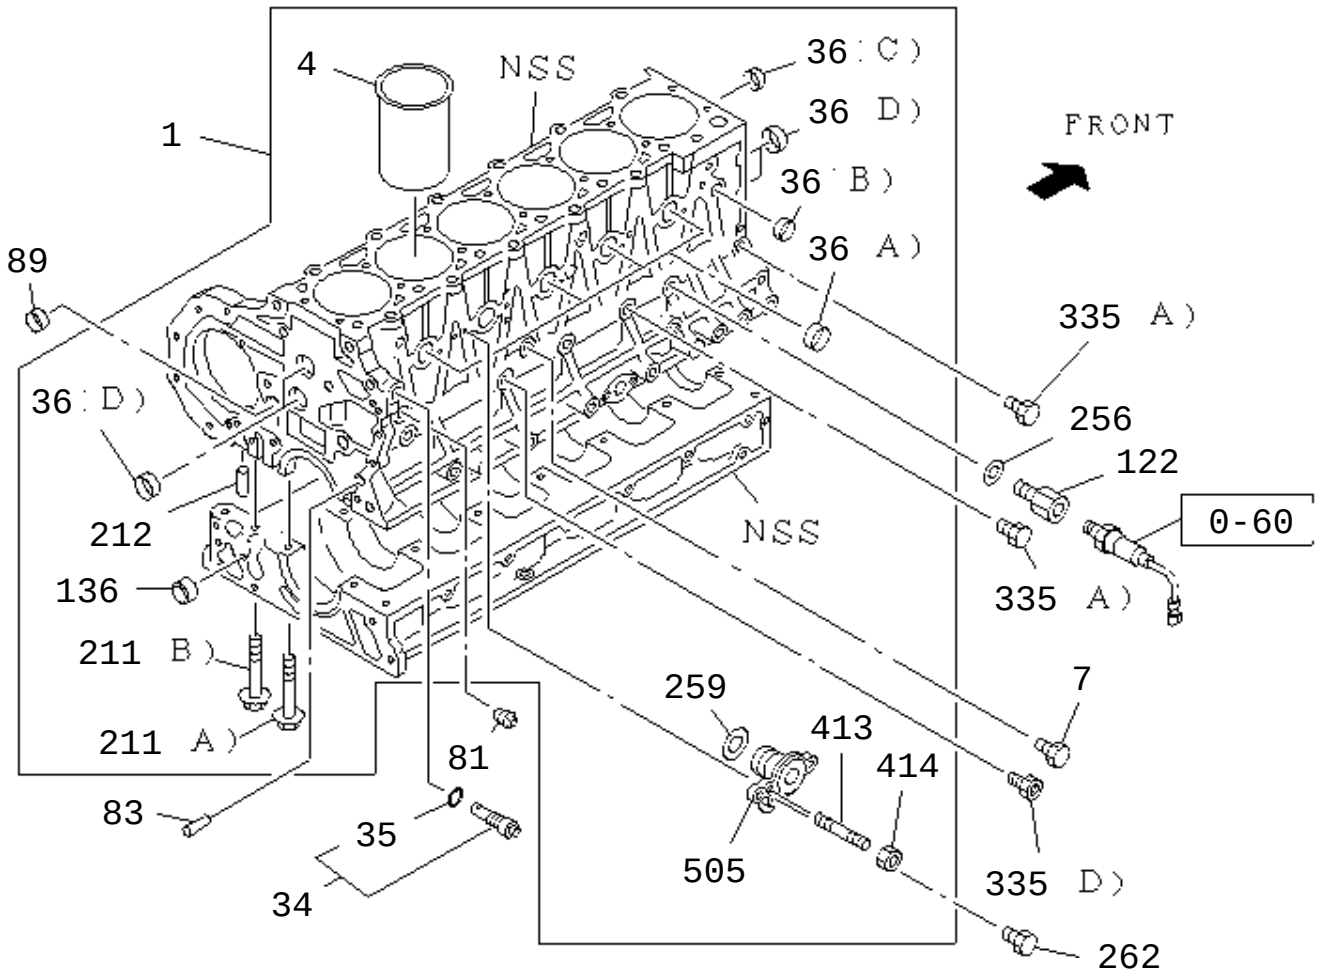

https://truckmanualshub.com/

LINER SET AND PR0TECTOR

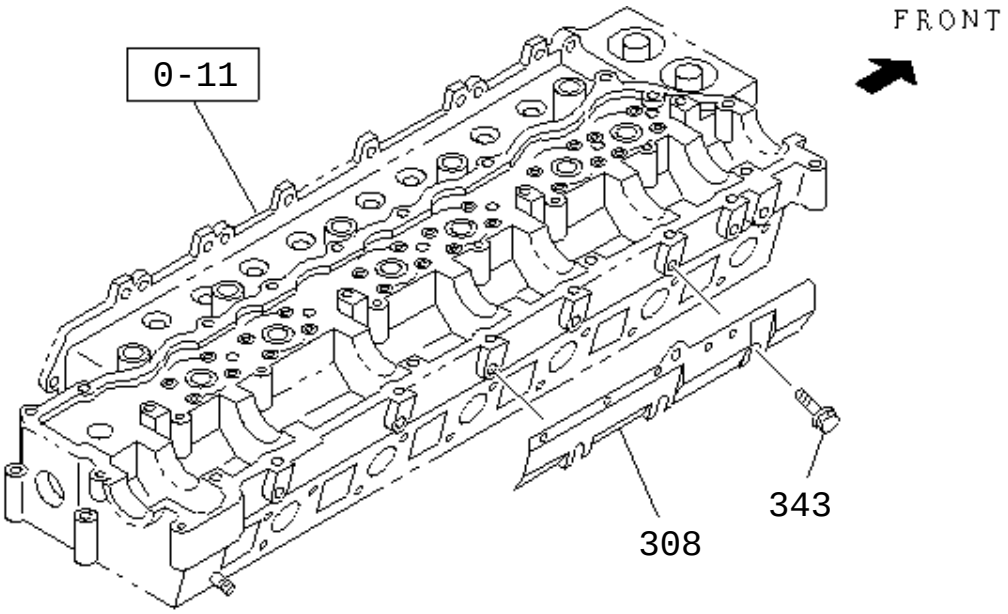

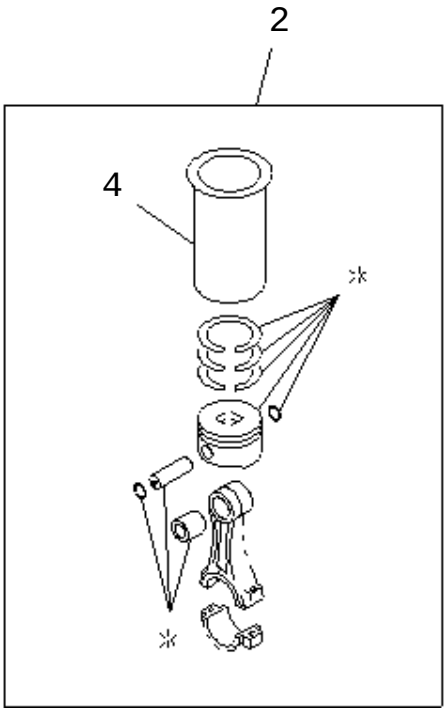

https://truckmanualshub.com/

0-12 CYLINDER BLOCK

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		BLOCK ASM; CYL					
		8-98206-966-0		1312-	01	A	
2		LINER SET; ENG CYL					
		1-87813-119-6		1312-	06	A	GRADE=1X
		1-87813-120-6		1312-	06	A	GRADE=3X
4		LINER; C/BL					ALSO INCLUDED IN LINER SET.
		8-98014-046-1		1312-	06	A	OD GRADE=1X,ID GRADE=NON
		8-98014-047-1		1312-	06	A	OD GRADE=3X,ID GRADE=NON
7		PLUG; WATER DRAIN					
		8-97329-617-0		1312-	01	A	M14X16.5
30		PIN; CYL HD GASKET SETTING					
		8-94399-688-1		1312-	02	A	OD=18.15
34		VALVE; OIL RELIEF					
		8-94393-077-1		1312-	01	A	
35		GASKET; RELIEF VLV					ALSO INCLUDED IN GASKET SET(ENGINE).
		5-09623-035-0		1312-	01	A	ID=27.7
36		CUP; SEALING,WATER JACKET					
		1-09600-005-2		1312-	04	A	(A) OD=45
		1-09600-016-0		1312-	01	A	(B) OD=25
		8-94399-005-0		1312-	01	A	(C) OD=25
		8-97096-824-0		1312-	04	A	(D) OD=40
38		PIN; TIMING GEAR CASE					
		8-94483-674-0		1312-	02	A	L=22
55		PLUG; OIL GALLERY					
		9-00097-011-0		1312-	01	A	3/8" BALL
56		JET; OIL,PISTON COOLING					
		8-98173-342-0		1312-	06	A	
81		PLUG; WATER JACKET					
		8-94397-338-0		1312-	01	A	PT3/8
83		PIN; FLYWHEEL HSG					
		8-94483-674-0		1312-	02	A	L=22
89		CUP; SEALING,OIL GALLERY					
		9-11129-128-0		1312-	03	A	OD=20
122		ADAPTER; OIL PRESSURE SWITCH					
		8-97603-667-0		1312-	01	A	
132		VALVE; CHECK,OIL					
		8-94394-419-1		1312-	06	A	M12X18.5
136		BUSHING; DRIVE SHAFT,OIL PUMP					
		8-98091-566-0		1312-	02	A	
211		BOLT; CRANKCASE					
		8-94399-553-2		1312-	25	A	(B) M10X82
		8-97077-638-0		1312-	14	A	(A) M14X115 W/FLANGE
212		PIN; CRANKCASE					
		8-97135-423-0		1312-	02	A	OD=10 L=20
218		GASKET; PLUG,C/BL SIDE					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09630-084-0		1312-1312	01	A	ID=12.2
		8-98251-344-0		1401-	01	A	ID=12.2


https://truckmanualshub.com/

0-12 CYLINDER BLOCK

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
232		STUD; WATER PUMP 0-41010-855-0		1312-	03	A	M8X55 L=67
256		GASKET; ADAPTER 1-09630-141-0		1312-	01	A	ALSO INCLUDED IN GASKET SET(ENGINE). ID=14.2 OD=25
259		GASKET; ADAPTER 1-09623-184-0		1312-	01	A	ALSO INCLUDED IN GASKET SET(ENGINE). ID=38.7
262		PLUG; ADAPTER 9-09862-156-0		1312-	01	A	M14X14 IDN
308		PROTECTOR; HEAT,HD COVER 8-94390-997-0		1312-	01	A	
335		PLUG; C/BL,SIDE 8-94396-547-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (D) M14 M10
		5-13265-001-0		1312-	01	A	(C) M12X10
		8-97329-617-0		1312-	02	A	(A) M14X16.5
		8-98003-416-0		1312-	01	A	(B) M8X10
338		CUP; SEALING,GUIDE TUBE HOLE 5-11129-003-0		1312-	02	A	OD=15.6
343		BOLT; HEAT PROTECTOR 0-28050-812-0		1312-	03	A	M8X12 FLANGE
403		GUIDE; GALLERY 8-94395-351-1		1312-	01	A	
413		STUD; ADAPTER 0-41010-830-0		1312-	02	A	M8X30 L=41
414		NUT; ADAPTER 0-91180-208-0		1312-	02	A	M8 FLANGE IDN
504		STUD; INJ PUMP 8-97363-237-0		1312-	02	A	M10X46.5 L=58.5
505		ADAPTER; WATER FEED 8-97611-854-0		1312-	01	A	
0-60		Move to 0-60					
0-11		Move to 0-11					


https://truckmanualshub.com/

OIL PAN

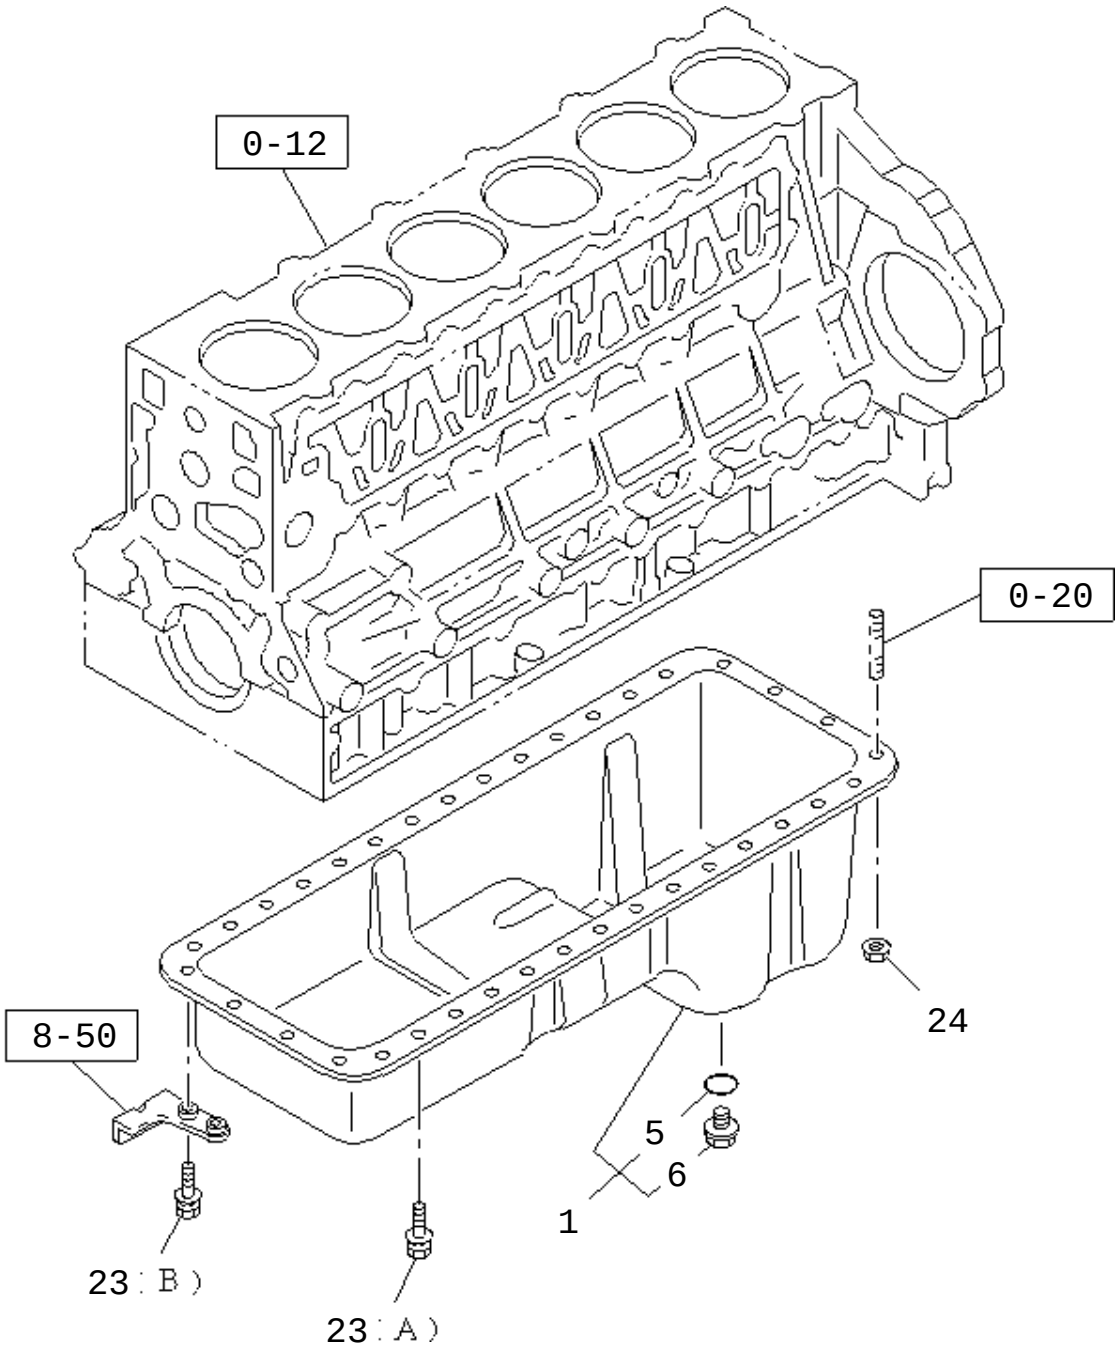

https://truckmanualshub.com/

LEVEL GAUGE AND GUIDE TUBE

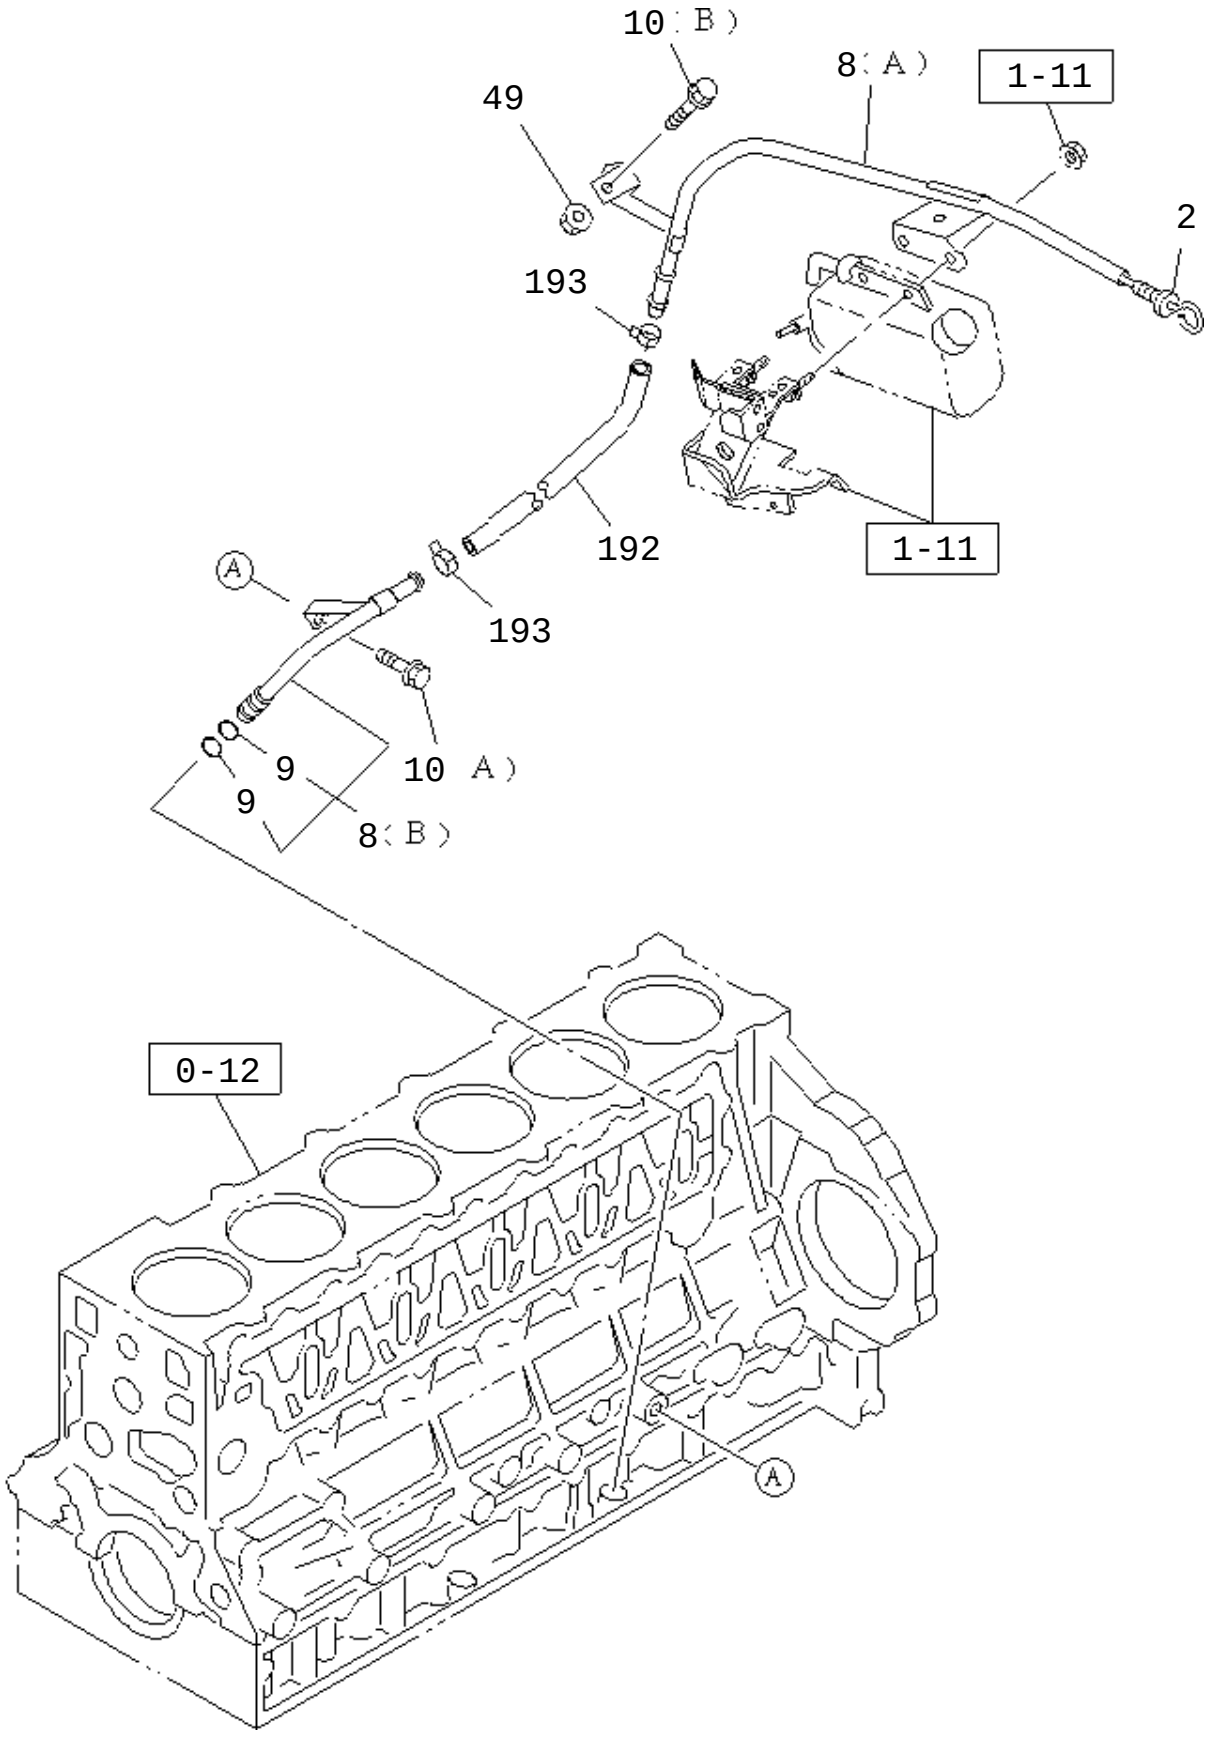


https://truckmanualshub.com/

0-13 OIL PAN AND LEVEL GAUGE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		PAN ASM; OIL					
		8-98179-005-0		1312-	01	A	
2		GAUGE; OIL LEVEL					
		8-98092-600-0		1312-	01	A	
5	A	GASKET; PLUG,OIL DRAIN					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09623-057-0		1312-	01	A	ID=24.4
6	A	PLUG; OIL DRAIN					
		9-09662-012-0		1312-	01	A	
8		TUBE; GUIDE,OIL LEVEL GAUGE					
		8-98063-554-0		1312-	01	A	(B)
		8-98084-773-0		1312-	01	A	(A)
9		GASKET; GUIDE TUBE,OIL LEVEL GAUGE					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09623-469-0		1312-	02	A	ID=11
10		BOLT; GUIDE TUBE					
		0-28151-035-0		1312-	01	A	(A) M10X35 FLANGE
		0-28650-820-0		1312-	01	A	(B) M8X20 FLANGE IDN
23		BOLT; OIL PAN					
		0-28080-818-0		1312-	28	A	(A) M8X18 FLANGE
		8-97329-626-0		1312-	02	A	(B) M8X28 FLANGE
24		NUT; OIL PAN					
		0-91180-108-0		1312-	04	A	M8 FLANGE
49		NUT; GUIDE TUBE					
		0-91180-108-0		1312-	01	A	M8 FLANGE
192		HOSE; GUIDE TUBE					
		8-98054-844-1		1312-	01	A	L=463 IDN
193		CLIP; HOSE,GUIDE TUBE					
		1-09707-158-0		1312-	02	A	ID=17
0-12		Move to 0-12					
0-20		Move to 0-20					
8-50		Move to 8-50					
1-11		Move to 1-11					


https://truckmanualshub.com/


VALVE AND CAMSHAFT

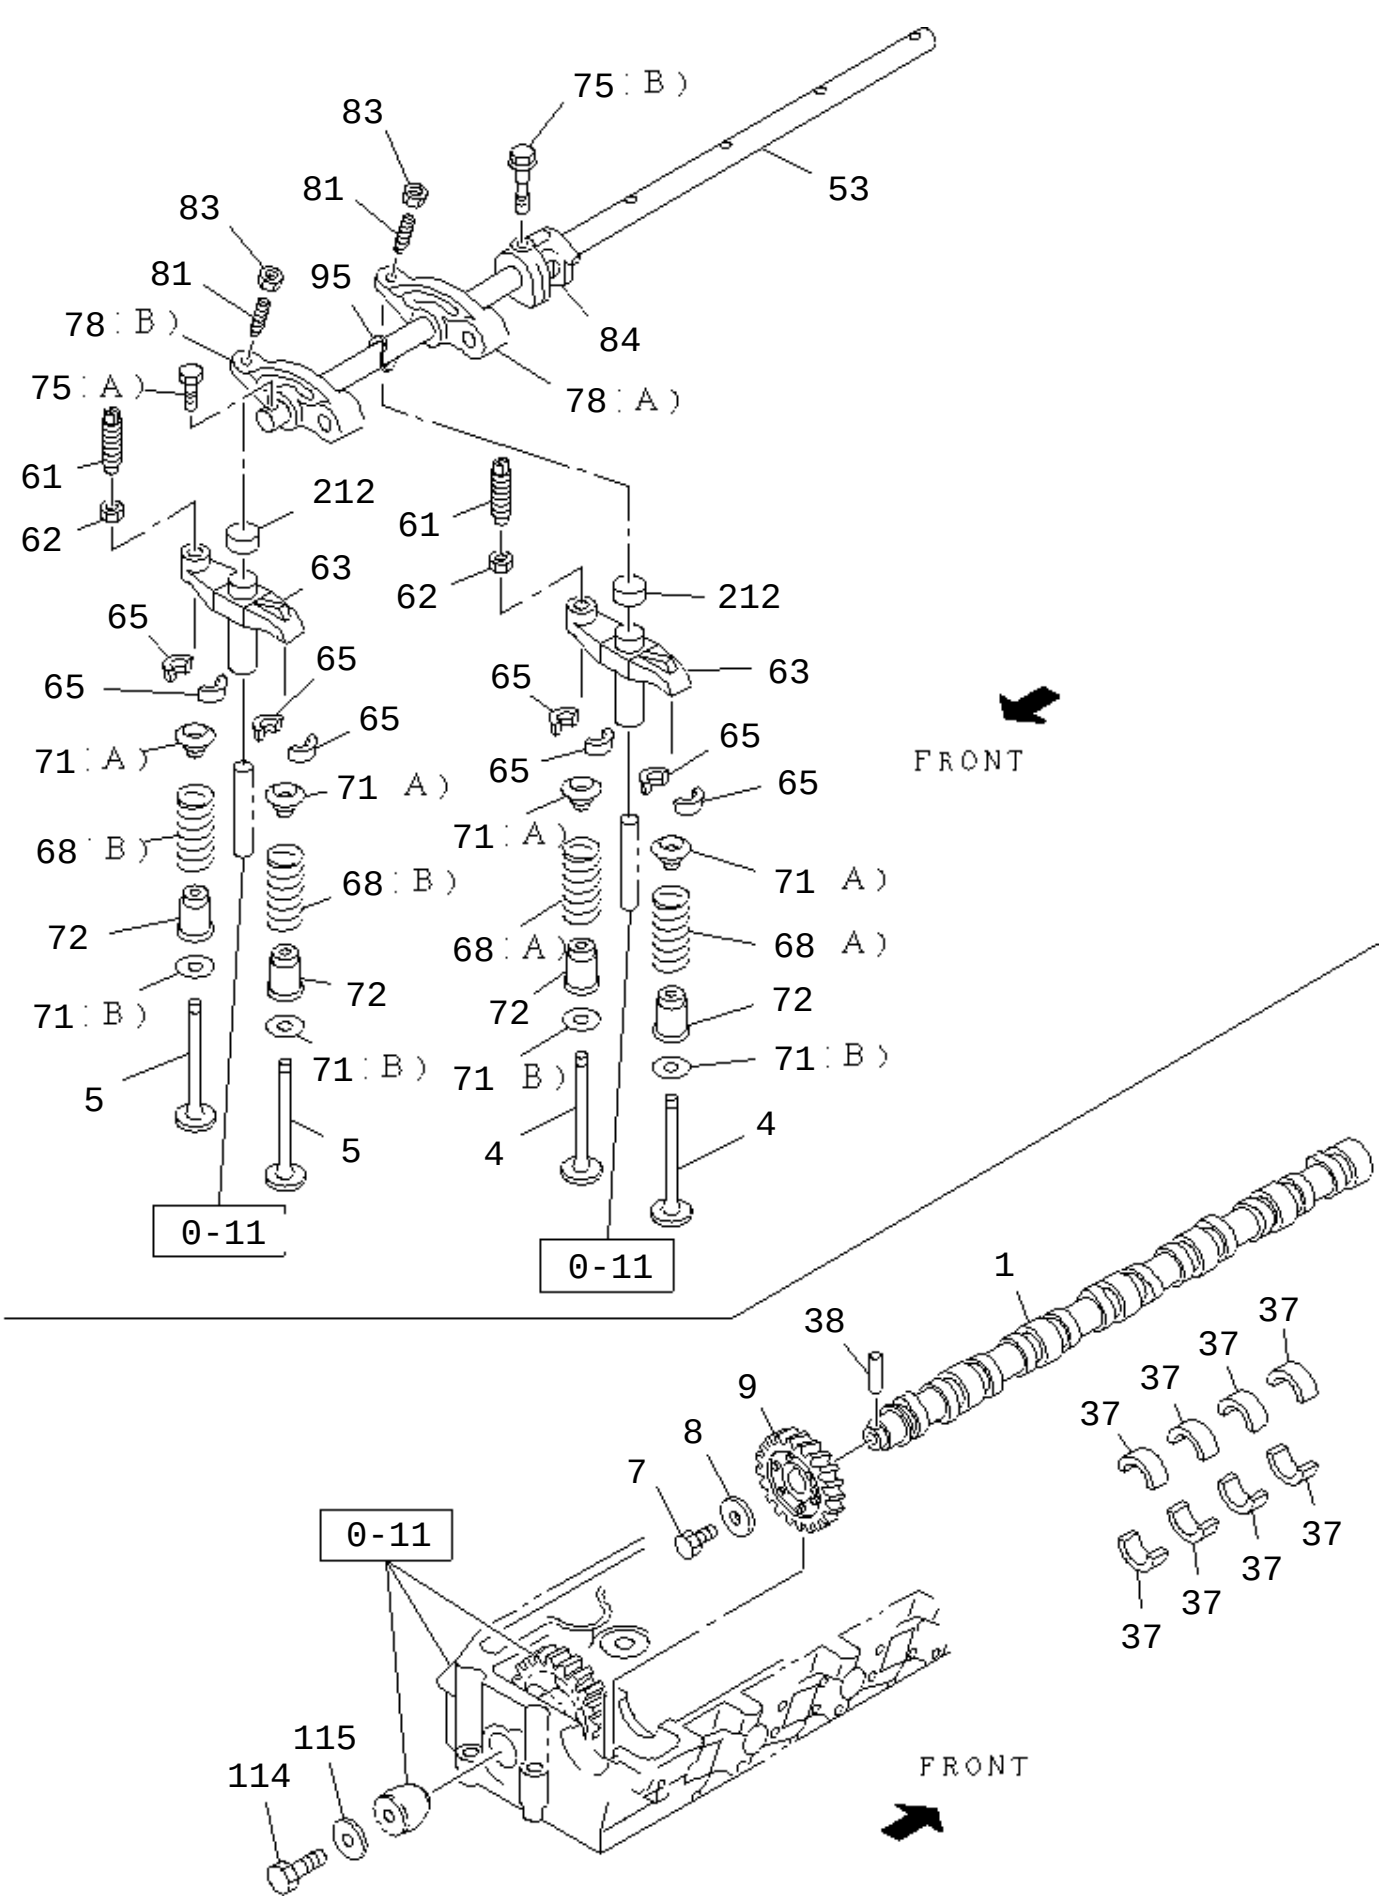

https://truckmanualshub.com/

IDLE GEAR

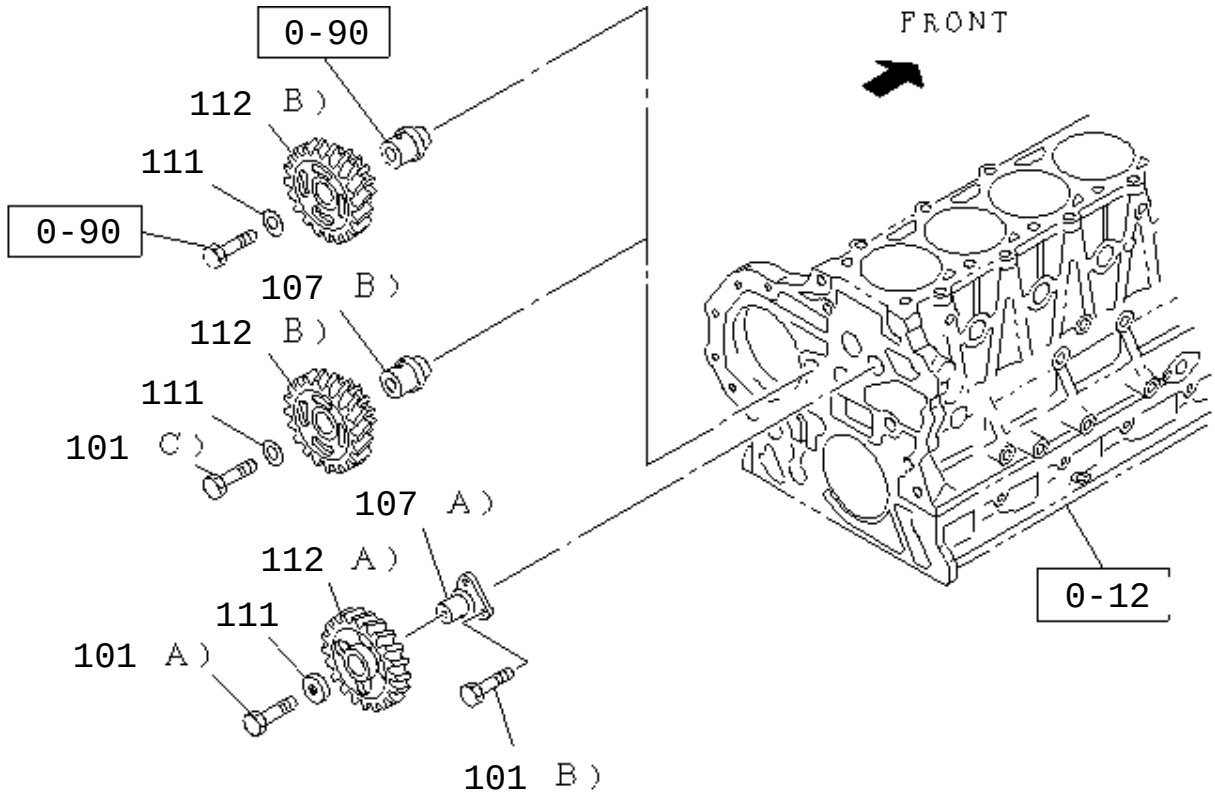

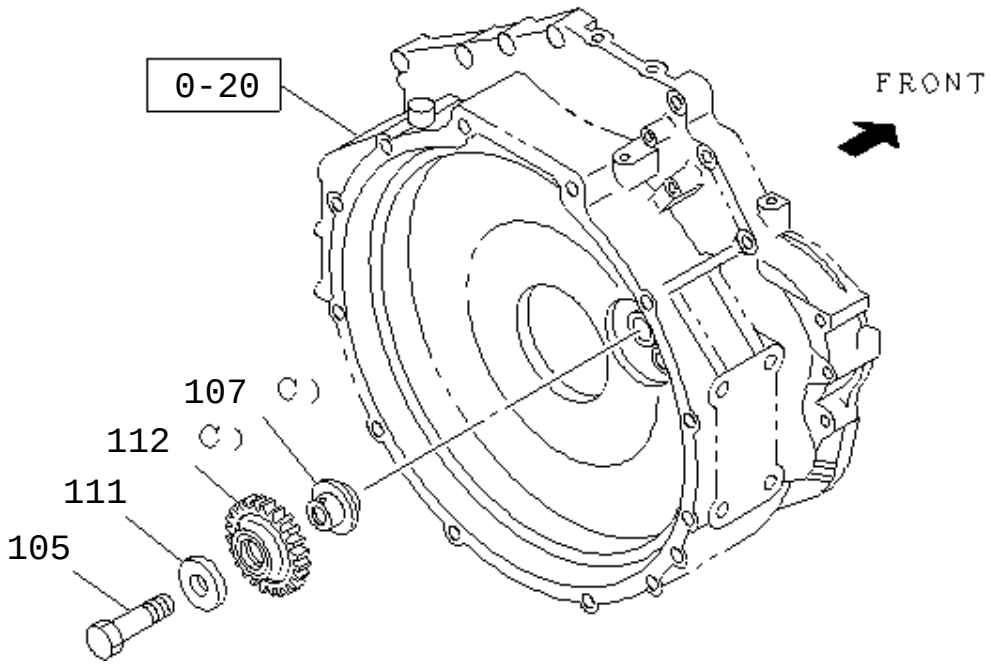

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		CAMSHAFT					
		8-97601-438-0	C	1312-1312	01	A	
		8-98227-261-0		1312-	01	A	
4		VALVE; INL					
		8-94395-882-2		1312-	12	A	
5		VALVE; EXH					
		8-97209-876-3		1312-	12	A	
7		BOLT; CM/SHF GEAR					
		8-94396-439-0		1312-	01	A	
							M14X40
8		WASHER; CM/SHF GEAR					
		8-98209-848-0		1402-	01	A	KD ENGINE<7MB>
							ID=14.5
		9-09851-850-3		1312-1401	01	A	
							ID=14.5
		9-09851-850-3		1402-	01	A	EXC. KD ENGINE<7MB>
							ID=14.5
9		GEAR; CM/SHF					
		8-98018-934-3		1312-	01	A	
							Z=35
37		METAL; CM/SHF					
		8-97386-189-0		1312-	04	A	
							UPPER
							B=16
		8-97602-699-0		1312-	04	A	
							LOWER
							B=26
38		PIN; CAM BRG SET					
		8-94399-487-0		1312-	01	A	
53		SHAFT; ROCKER ARM					
		8-97389-918-0		1312-	01	A	
61		SCREW; ADJ,BRIDGE					
		8-94394-803-0		1312-	12	A	
							M8X21
62		NUT; ADJ SCREW LK BRIDGE					
		9-09844-574-0		1312-	12	A	
							M8 FLANGE
63		BRIDGE					
		8-94392-002-3		1312-	12	A	
65		COLLAR; SPLIT					
		5-12565-004-0		1312-	48	A	
68		SPRING; VLV					
		8-94395-885-1		1312-	12	A	
							(B) EXHAUST
							MARK WHITE
		8-97352-888-0		1312-	12	A	
							(A) INLET
							MARK BLUE
71		SEAT; SPR					
		8-94390-783-2		1312-	24	A	
							(A) UPPER
							OD=32.8 T=12.75
		8-94391-468-0		1312-	24	A	
							(B) LOWER
							ID=14.3 T=1.0
72		SEAL; VLV GUIDE					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
		8-97376-720-0		1312-	24	A	
75		BOLT; BRKT					
		0-28050-840-0		1312-	02	A	
							(A)
							M8X40 FLANGE
		8-94393-131-0		1312-	05	A	
							(B)
							M10X62 FLANGE
78		ARM; ROCKER					
		8-97306-421-3		1312-	06	A	
							(A) INLET
		8-97306-424-3		1312-	06	A	
							(B) EXHAUST
81		SCREW; ADJ,ROCKER ARM					
		8-94395-024-0		1312-	12	A	
							M10 L=32
83		NUT; ADJ SCREW,LK					
		0-91111-510-0		1312-	12	A	
							M10


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
84		BRACKET; ROCKER SHAFT,INTER					
		8-94395-836-2		1312-	05	A	
95		SPRING; ROCKER SHAFT					
		8-94392-999-0		1312-	06	A	
101		BOLT; THRUST COLLAR					
		0-16956-460-0		1312-1401	01	A	(C) M14X60
		0-16956-460-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (C) M14X60
		0-23951-430-0		1312-	01	A	(A) M14X30
		0-28060-816-0		1312-	03	A	(B) M8X16 FLANGE
105		BOLT; IDLE GEAR SHAFT					
		8-97066-798-0		1312-	01	A	M14X65
107		SHAFT; IDLE GEAR					
		8-98209-525-0		1402-	01	A	KD ENGINE<7MB> (A)
		8-94334-682-1		1312-	01	A	(C)
		8-97350-021-0		1312-1401	01	A	(A)
		8-97350-021-0		1402-	01	A	EXC. KD ENGINE<7MB> (A)
		8-98060-780-0		1312-1401	01	A	(B)
		8-98060-780-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
111		COLLAR; THRUST,IDLE GEAR					
		8-98209-850-0		1406-	02	A	KD ENGINE<7MB> ID=14.5 OD=46 IDN
		8-94396-897-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) ID=24 OD=60
		8-97209-728-2		1402-1405	02	A	ID=14.5 OD=46
		8-97209-728-2		1406-	02	A	EXC. KD ENGINE<7MB> ID=14.5 OD=46
		8-98209-850-0		1402-	01	A	KD ENGINE<7MB> EXC. POWER TAKE OFF-FLYWHEEL(6SZ) ID=14.5 OD=46 IDN
		8-97209-728-2		1312-1401	03	A	ID=14.5 OD=46
		8-97209-728-2		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ),KD ENGI ID=14.5 OD=46
112		GEAR; IDLE					
		8-98021-069-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B) Z=72-60-30
		8-97600-586-1		1312-1401	01	A	(B) Z=72-60-30
		8-97600-586-1		1402-1402	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) Z=72-60-30
		8-98254-970-0		1403-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) Z=72-60-30
		8-97606-767-0		1312-	01	A	(A) Z=61
		8-97606-771-0		1312-	01	A	(C) Z=34
114		BOLT; IDLE GEAR					
		8-94372-221-1		1312-	01	A	M14X36.5
115		WASHER; THRUST,IDLE GEAR					

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
115		8-98209-850-0		1406-	01	A	KD ENGINE<7MB> ID=14.5 OD=46 IDN
		8-97209-728-2		1312-1405	01	A	ID=14.5 OD=46
		8-97209-728-2		1406-	01	A	EXC. KD ENGINE<7MB> ID=14.5 OD=46
212		CAP; ADJ SCREW 8-94396-015-2		1312-	12	A	
0-11		Move to 0-11					
0-12		Move to 0-12					
0-20		Move to 0-20					
0-90		Move to 0-90					

https://truckmanualshub.com/

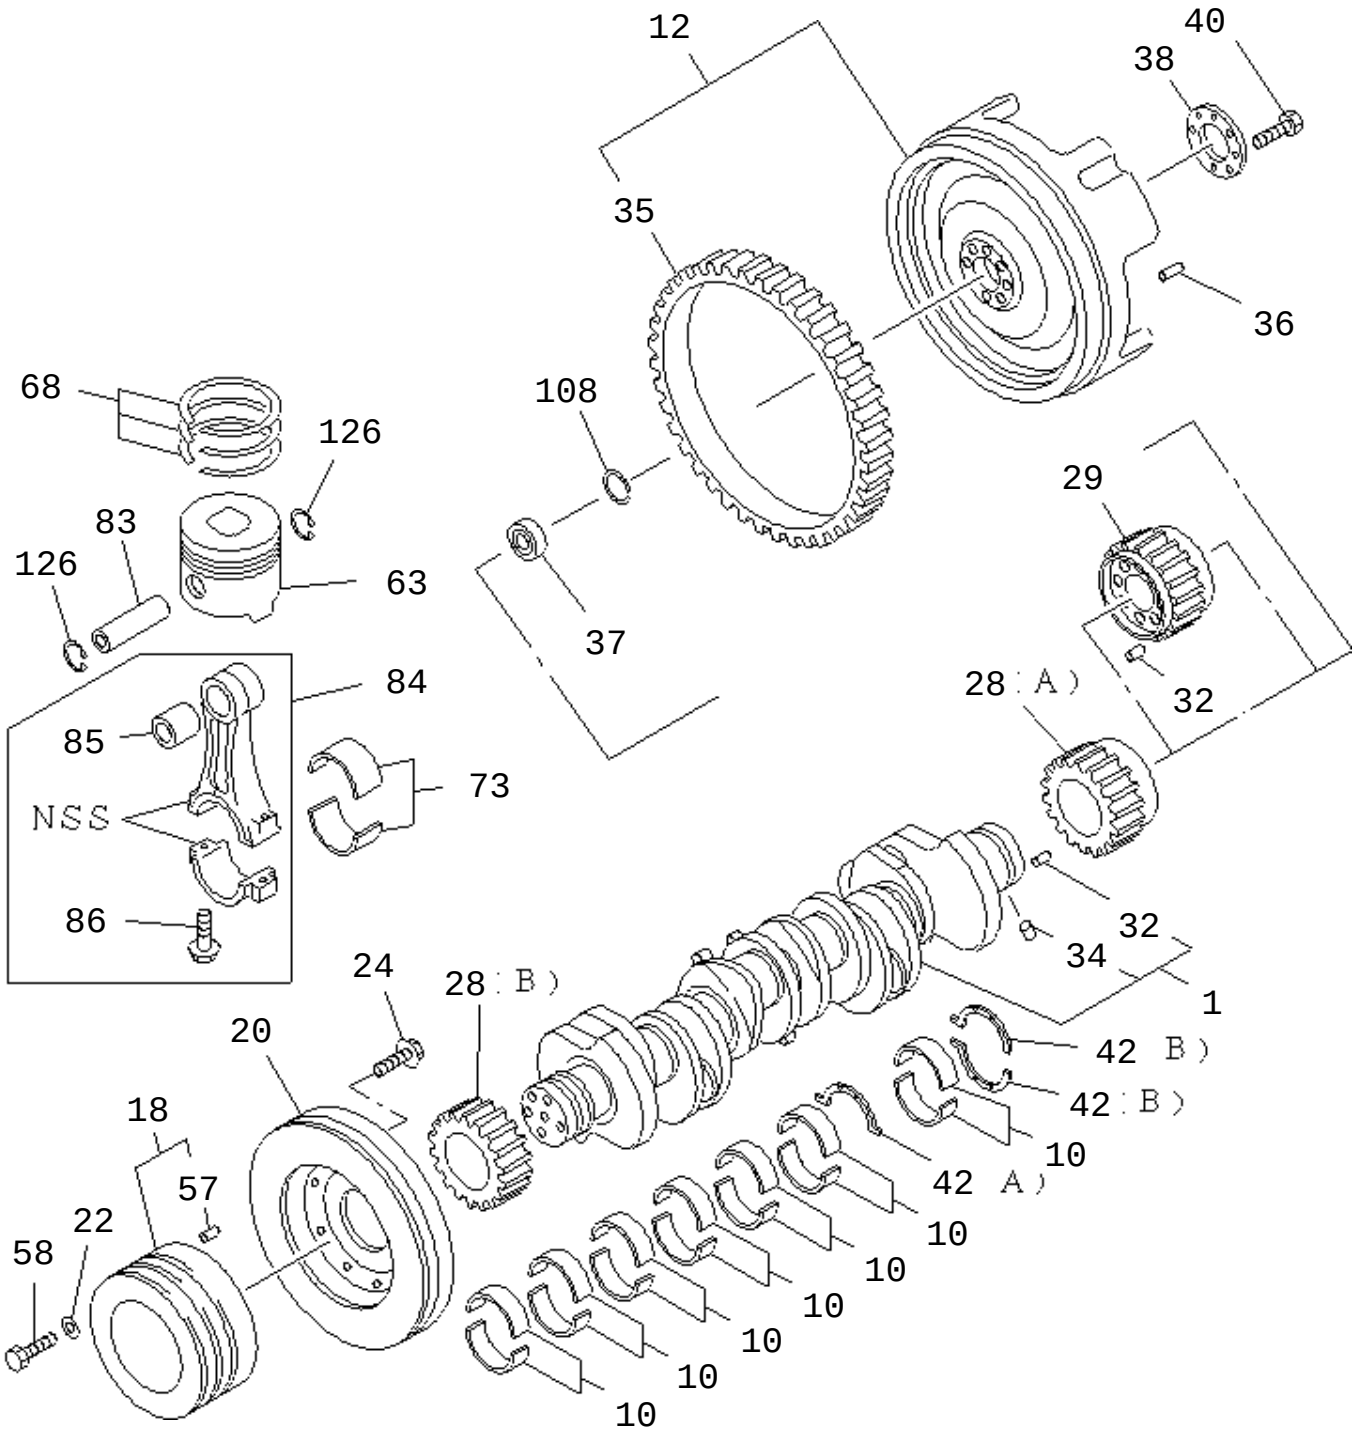

https://truckmanualshub.com/

0-15 CRANKSHAFT,PISTON AND FLYWHEEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		CRANKSHAFT 8-97603-004-0		1312-	01	A	
10		METAL SET; CRANKSHAFT,STANDARD 8-97372-076-1		1312-	07	A	BLUE
		8-97372-077-1		1312-	07	A	BLACK
		8-97372-078-1		1312-	07	A	BROWN
12		FLYWHEEL 8-97602-463-2		1312-	01	A	
18		PULLEY; CR/SHF 8-97606-944-0		1312-	01	A	3-GROOVE
20		DAMPER; CR/SHF 8-97613-696-1		1312-	01	A	
22		PLATE; PULLEY 9-09851-935-0		1312-	04	A	ID=17 OD=30
24		BOLT; DAMPER 0-28151-016-0		1312-	06	A	M10X16 FLANGE
28		GEAR; CR/SHF 8-94392-255-1		1312-	01	A	(A) Z=42
		8-94396-954-2		1312-	01	A	(B) Z=41
29		GEAR; CR/SHF,PTO 8-98011-443-1		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) Z=42
32		PIN; FLYWHEEL 9-08150-816-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) OD=8 L=16
		9-08150-816-0		1312-	02	A	OD=8 L=16
34		PIN; GEAR SETTING 9-09878-626-0		1312-	01	A	OD=5 L=6
35		GEAR; RING 8-94396-784-1		1312-	01	A	Z=140
36		PIN; FLYWHEEL 9-08151-022-0		1312-	02	A	OD=10 L=22
37	B	BEARING; PILOT,TOP GEAR SHAFT 8-94392-288-0		1312-	01	A	
38		WASHER; FLYWHEEL 8-98210-373-0		1402-	01	A	KD ENGINE<7MB> ID=55 OD=110
		8-94397-496-1		1312-1401	01	A	ID=55 OD=110
		8-94397-496-1		1402-	01	A	EXC. KD ENGINE<7MB> ID=55 OD=110
40		BOLT; FLYWHEEL 8-94393-071-2		1402-	08	A	POWER TAKE OFF-FLYWHEEL(6SZ) M16X119
		8-94393-070-2		1312-1401	08	A	M16X62
		8-94393-070-2		1402-	08	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M16X62
42		WASHER; THRUST,CR/SHF 8-97386-548-0		1312-	01	A	(A)
		8-97386-549-0		1312-	02	A	(B)
57		PIN; PULLEY 8-94391-156-0		1312-	01	A	OD=8 L=16
58		BOLT; CR/SHF PULLEY 0-20951-650-0		1312-	04	A	M16X50
63		PISTON					ALSO INCLUDED IN LINER SET.


https://truckmanualshub.com/

CRANKSHAFT,PISTON AND FLYWHEEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
63		8-98041-141-2		1312-	06	A	NON GRADE
68		RING SET; PISTON,STANDARD					ALSO INCLUDED IN LINER SET.
		8-98040-125-0		1312-	06	A	
73		METAL SET; CONN ROD,STANDARD					
		8-97616-358-0		1312-	06	A	GREEN
		8-97616-359-0		1312-	06	A	YELLOW
83		PIN; PISTON					ALSO INCLUDED IN LINER SET.
		8-98018-863-1		1312-	06	A	
84		ROD ASM; CONN					
		8-98018-425-2		1312-	06	A	
85		BUSHING; CONNROD					ALSO INCLUDED IN LINER SET.
		8-94391-794-1		1312-	06	A	
86		BOLT; CONNROD					
		8-98091-141-0		1312-	12	A	M13X57 FLANGE
108		RING; SNAP,BRG SET					
		9-09180-155-0		1312-	01	A	OD=59.2
126		RING; SNAP,PISTON PIN					ALSO INCLUDED IN LINER SET.
		8-98006-828-0		1312-	12	A	OD=43.7


https://truckmanualshub.com/

TIMING GEAR CASE

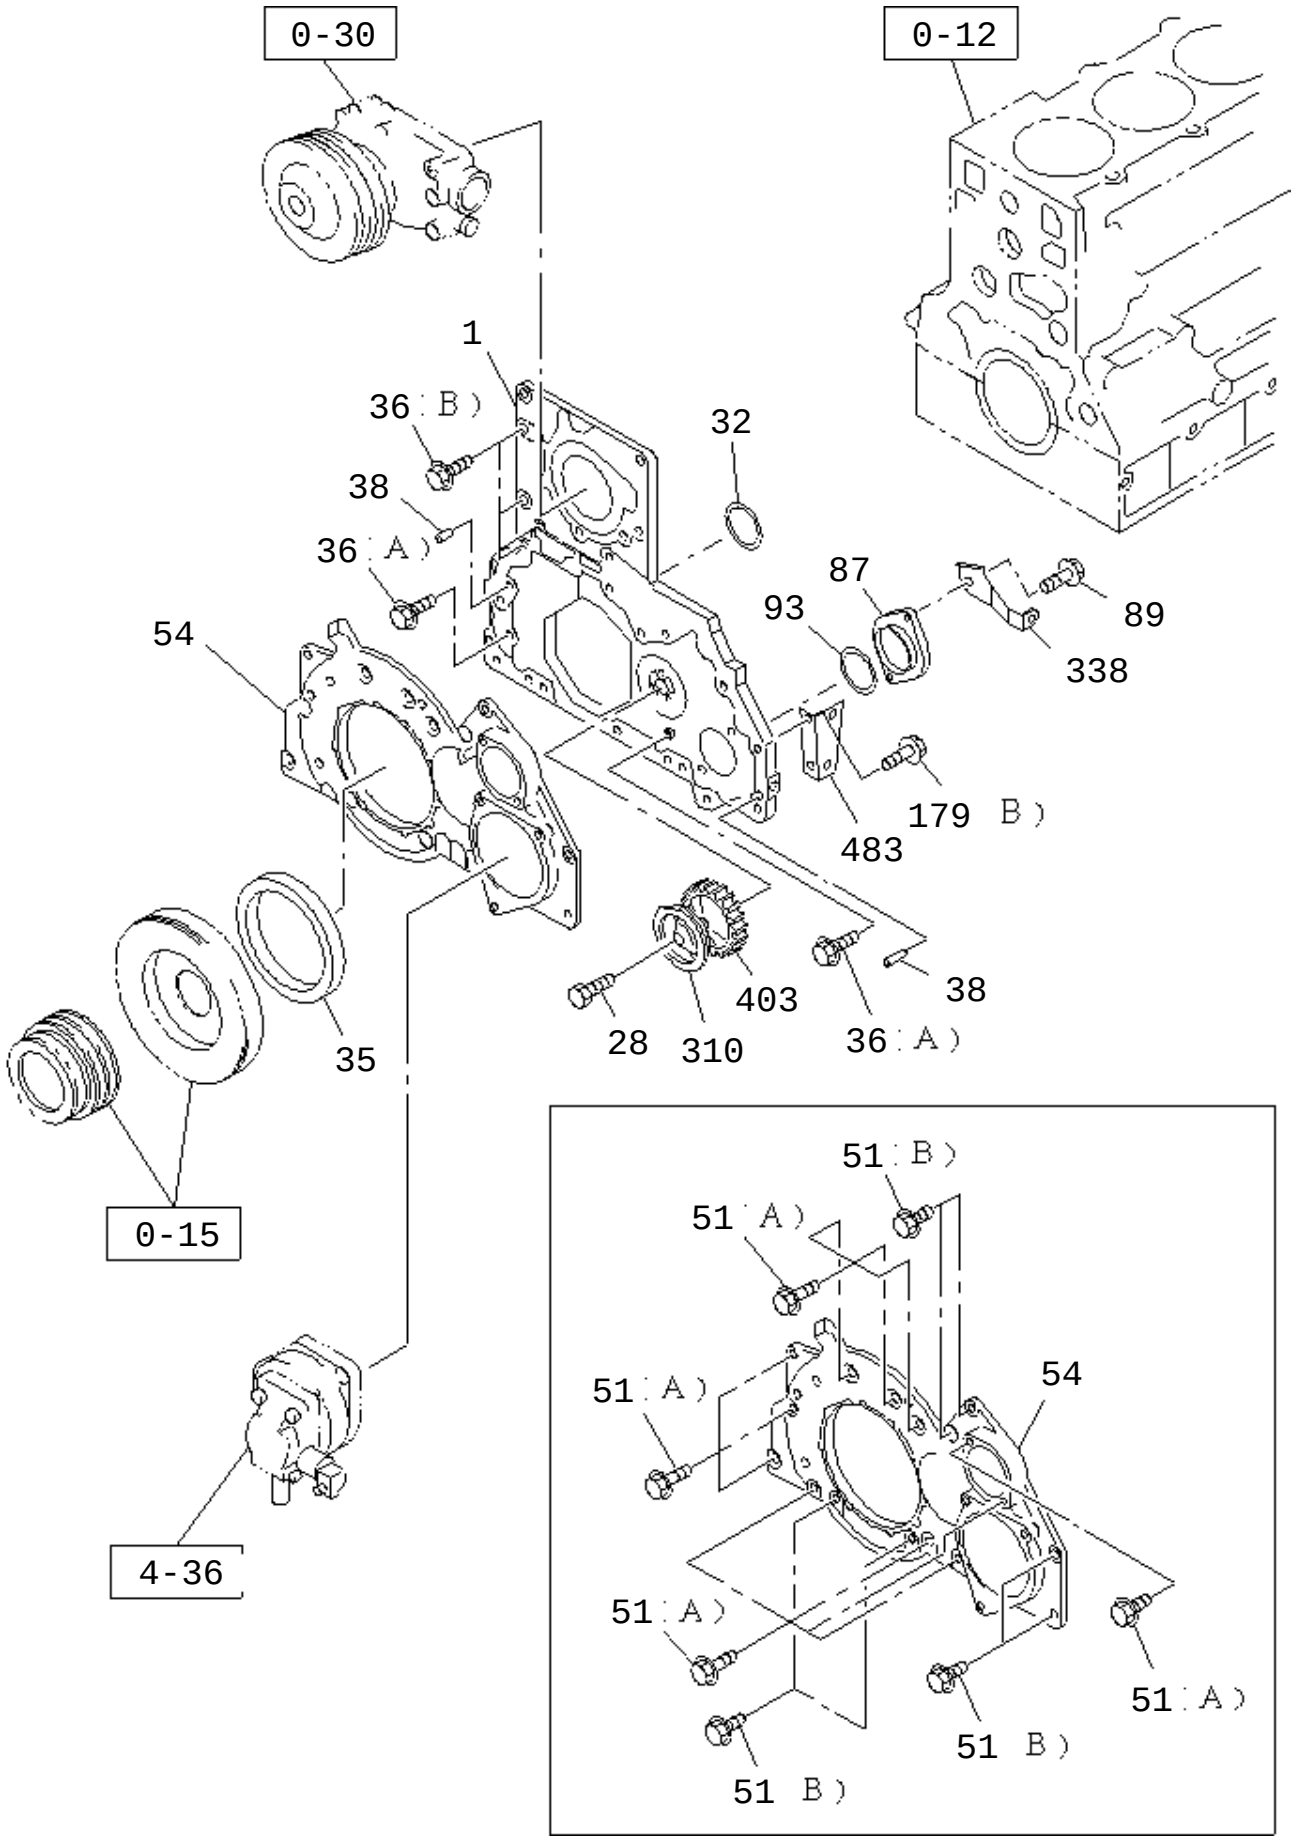


https://truckmanualshub.com/

FIXING;F/W HSG,COVER EXC.PTO-F/W NO.1

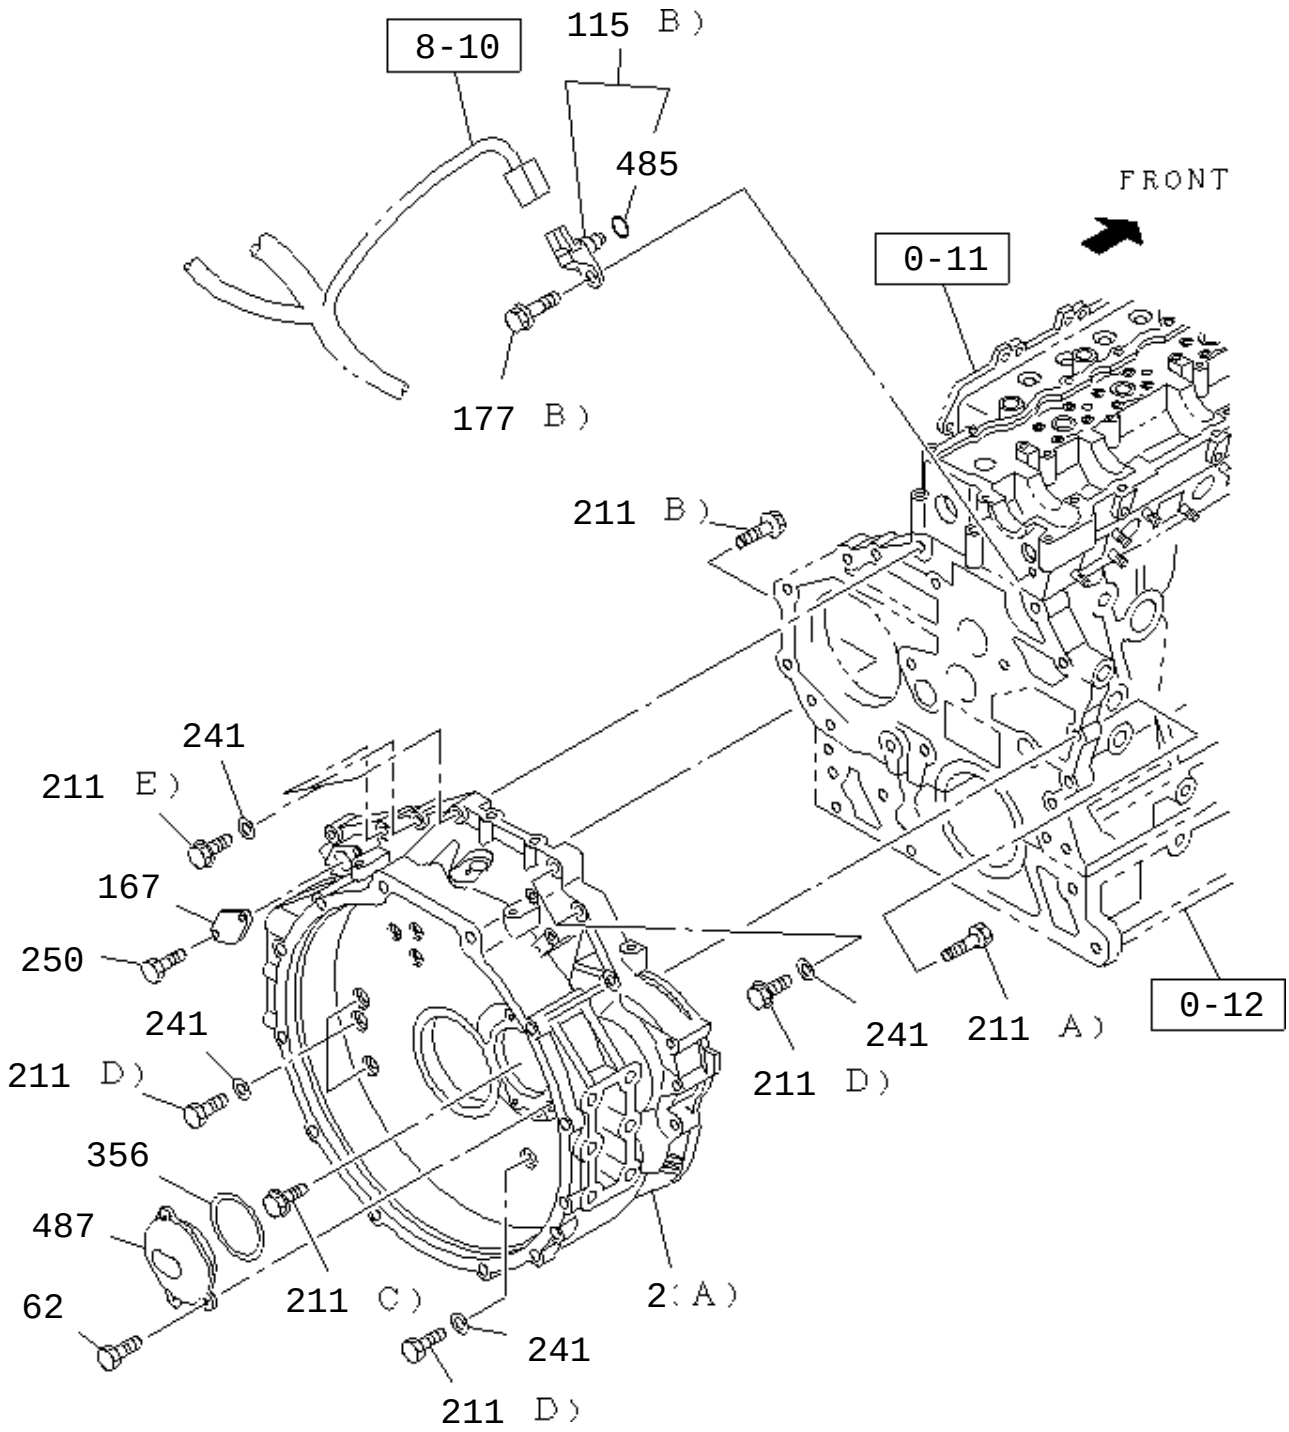


https://truckmanualshub.com/

FIXING;F/W HSG,COVER EXC.PTO-F/W NO.2

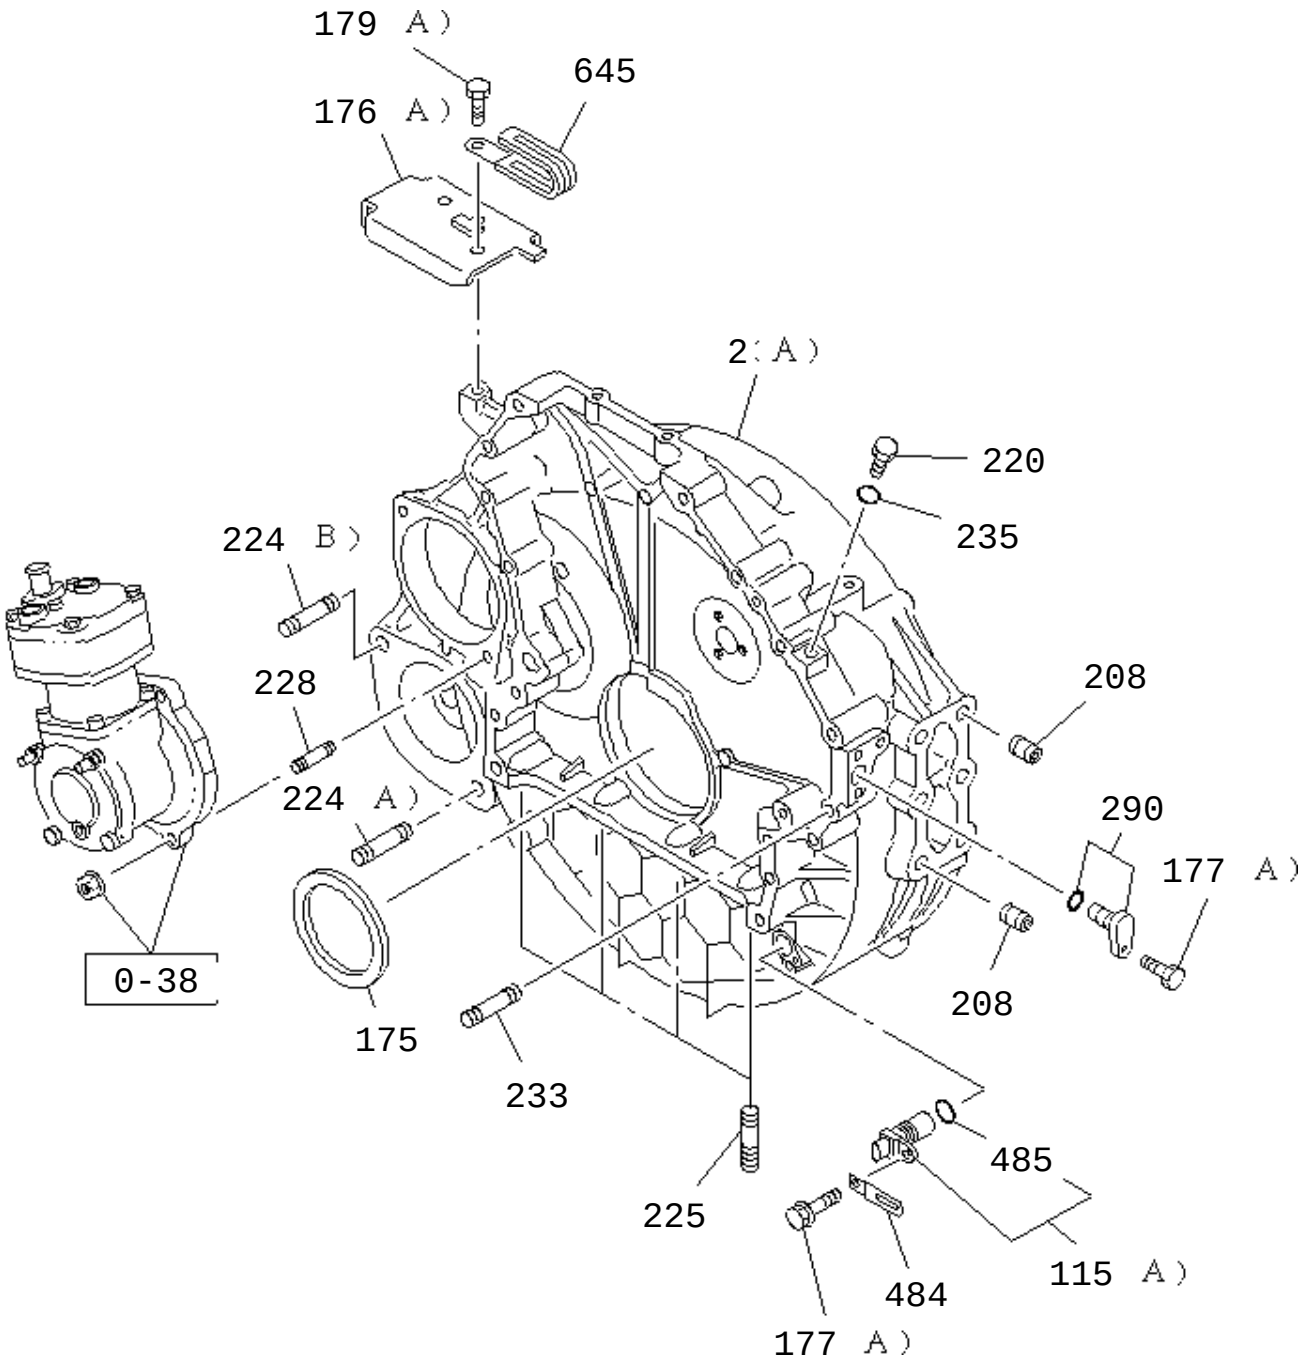


https://truckmanualshub.com/

FIXING;F/W HSG,COVER PTO-F/W NO.1

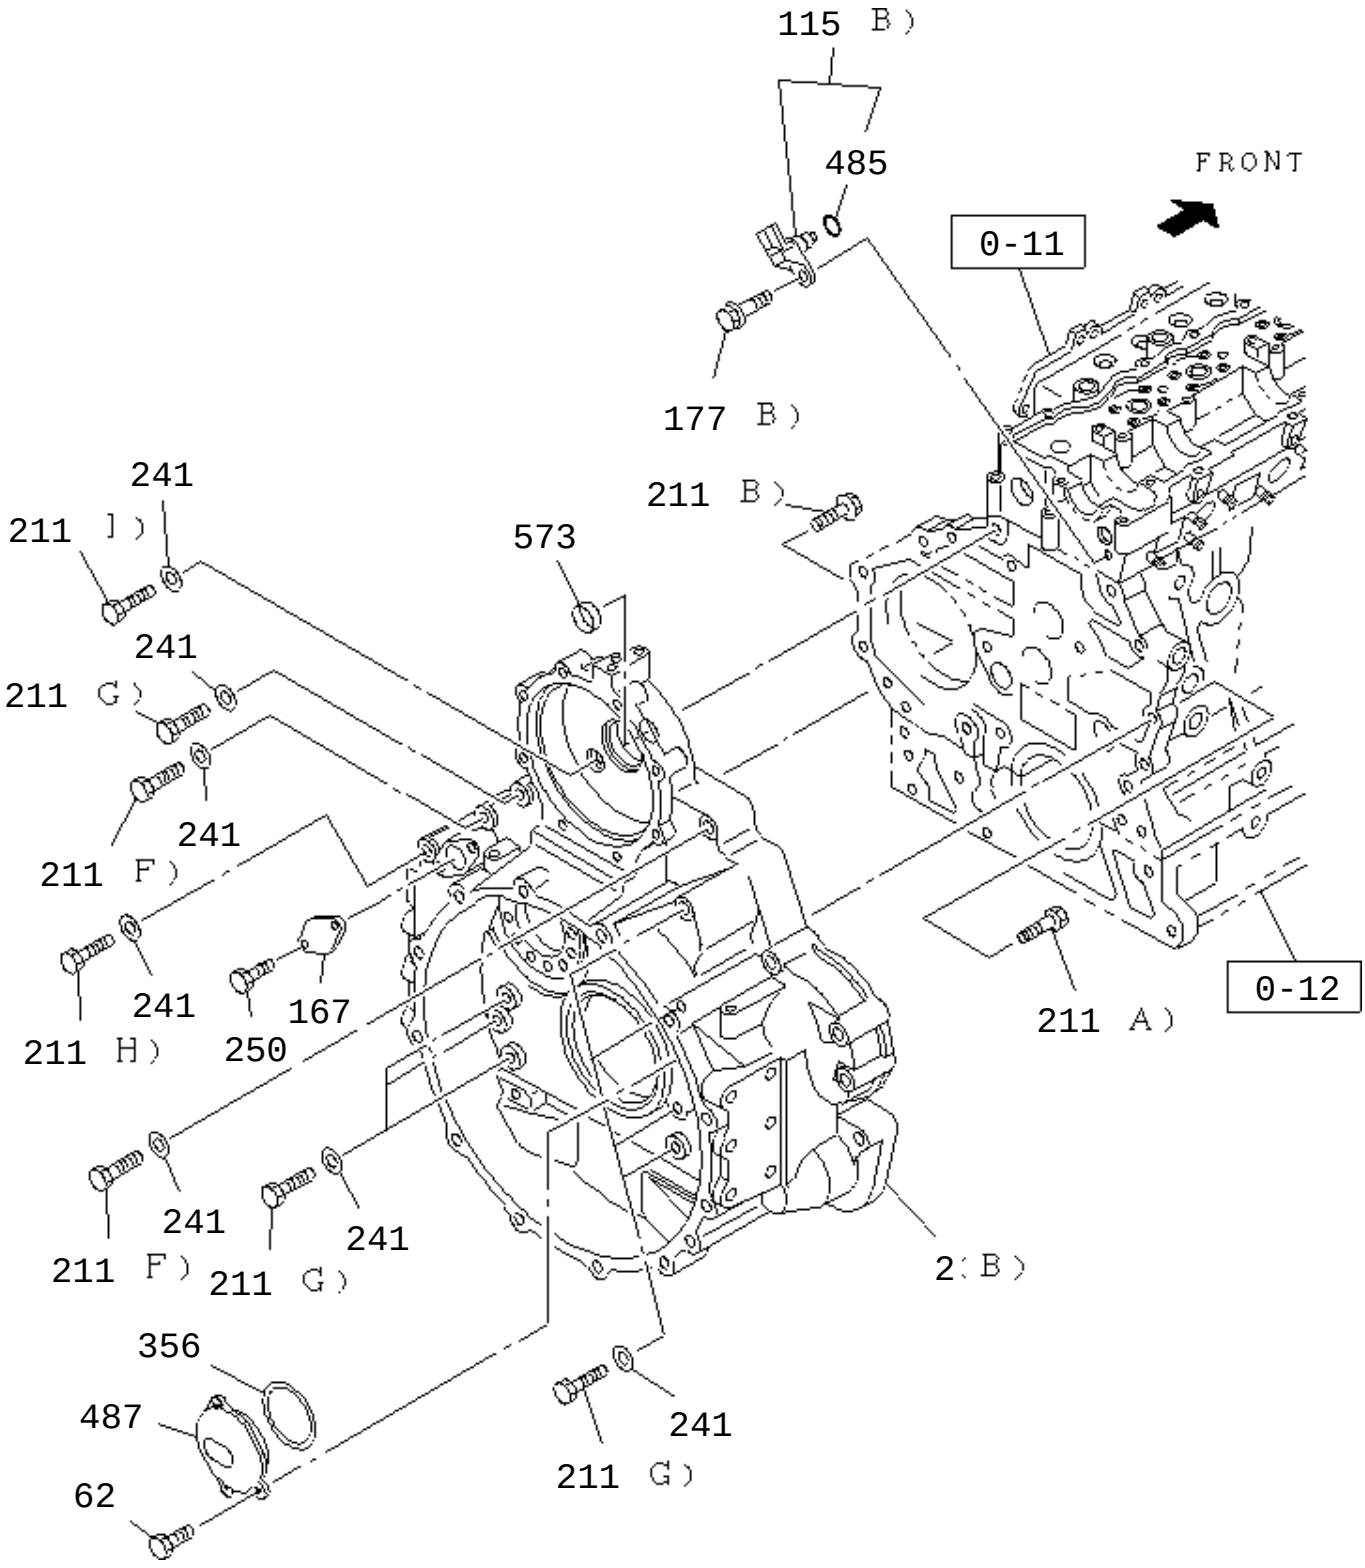


https://truckmanualshub.com/

FIXING;F/W HSG,COVER PTO-F/W NO.2

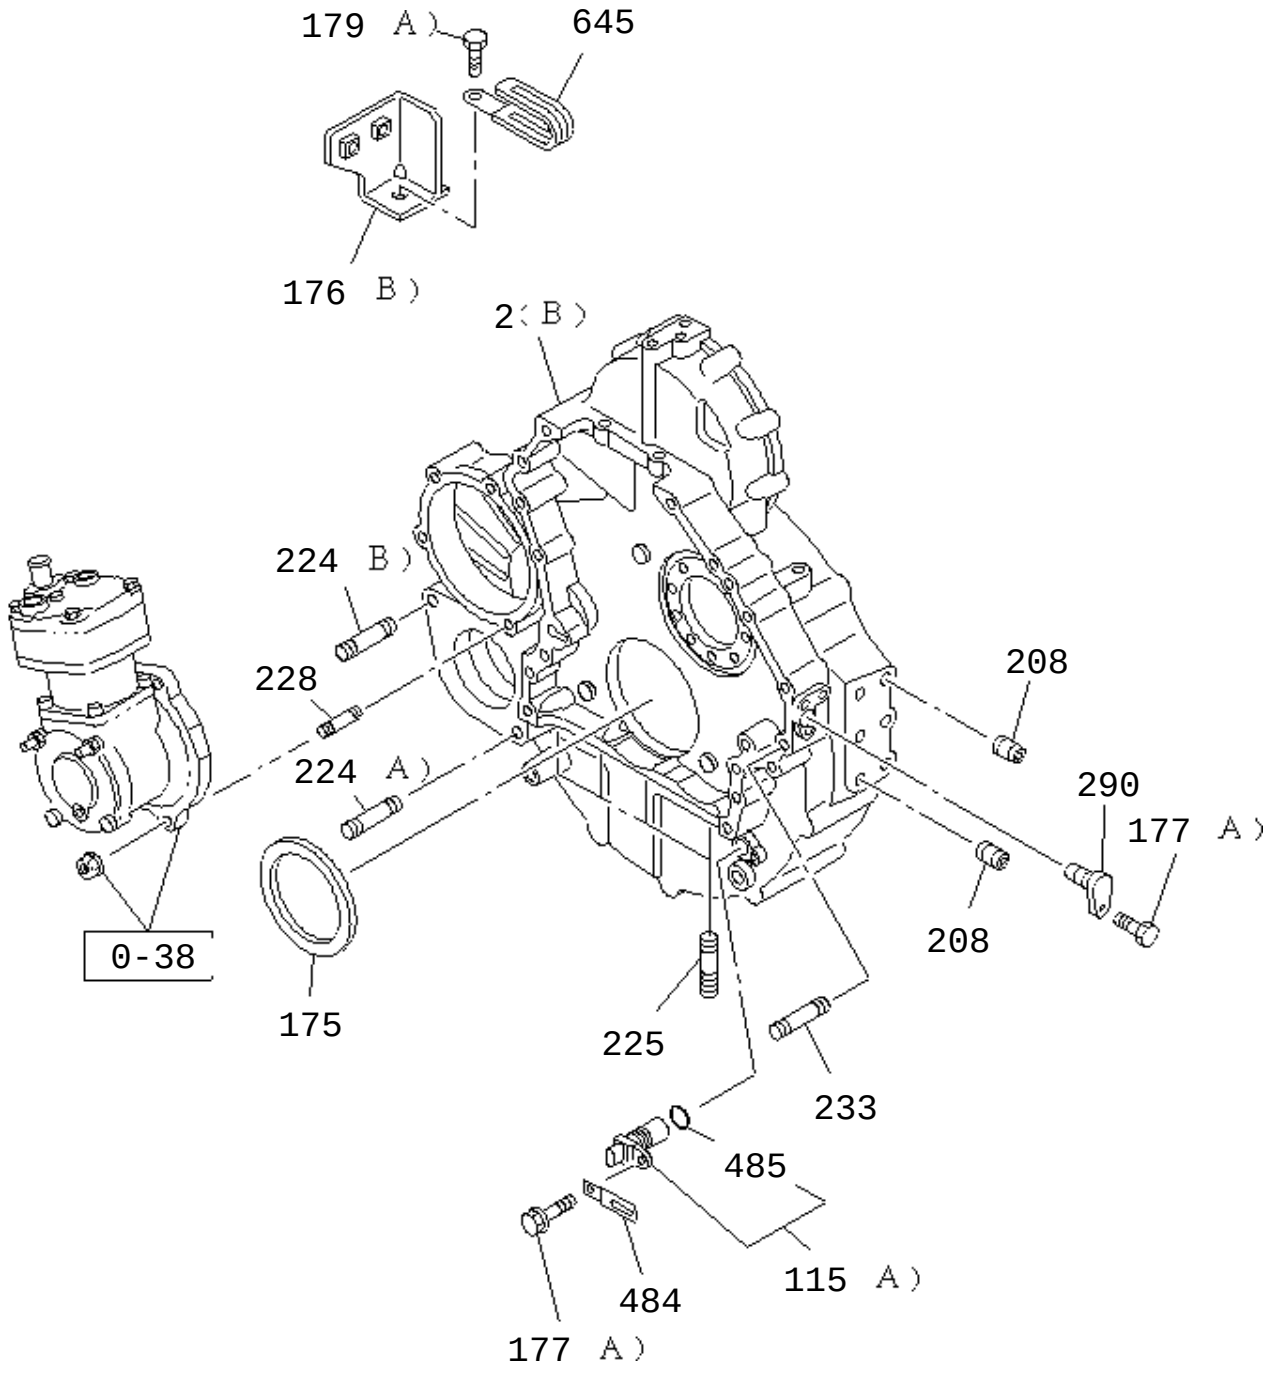

https://truckmanualshub.com/

INJ PUMP GEAR

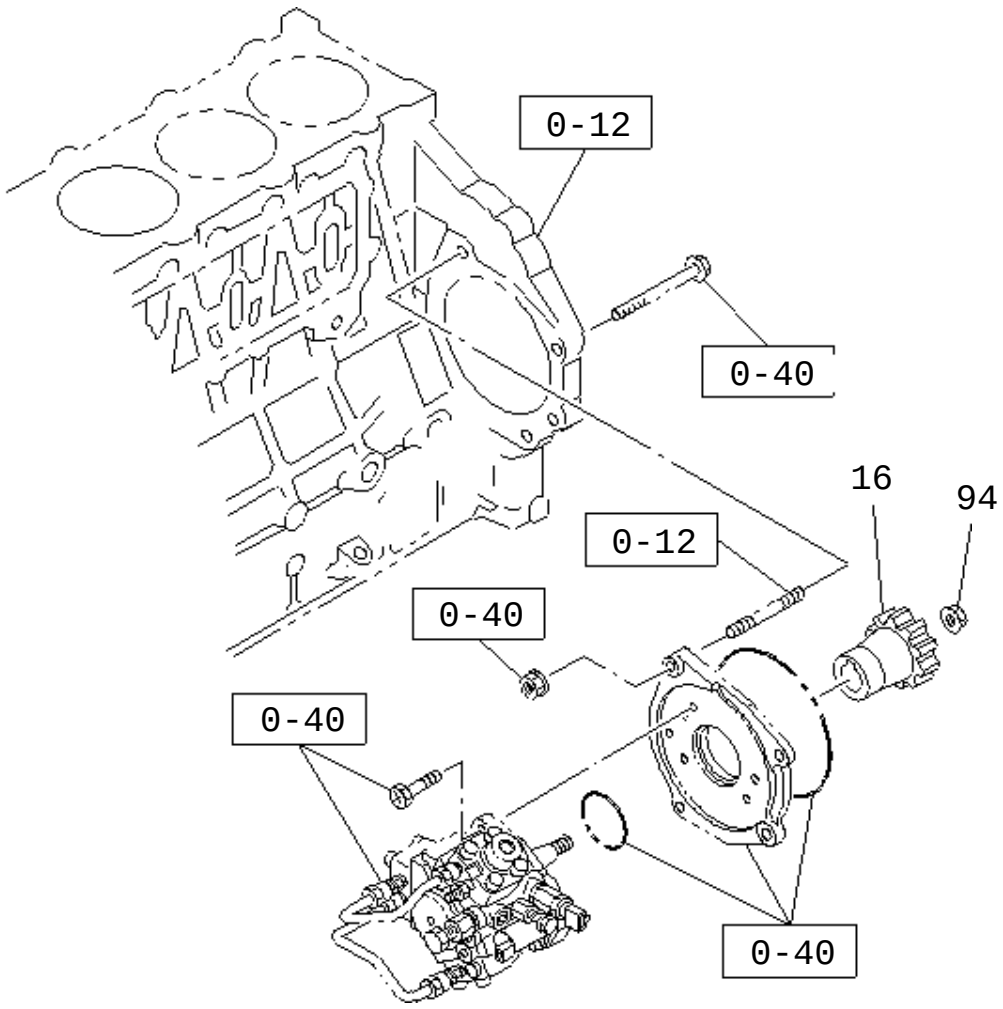

https://truckmanualshub.com/

TIMING GEAR CASE AND FLYWHEEL HOUSING

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		CASE; TIMING GEAR					
		8-94396-434-6		1312-	01	A	
2		HOUSING; FLYWHEEL					
		8-98021-479-5		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-97609-996-9		1312-1401	01	A	(A)
		8-97609-996-9		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
16		GEAR; INJ PUMP DRIVE					
		8-97601-153-1		1312-	01	A	Z=35
28		BOLT; DRIVE GEAR					
		8-94399-256-0		1312-	03	A	M8X28
32		GASKET; GEAR CASE TO C/BL					ALSO INCLUDED IN GASKET SET(ENGINE).
		8-97028-748-1		1312-	01	A	ID=35.1
35	B	SEAL; OIL,CRANKSHAFT FRT					ALSO INCLUDED IN GASKET SET(ENGINE).
		8-97602-378-3		1312-	01	A	ID=104 OD=137
36		BOLT; GEAR CASE					
		0-28050-835-0		1312-	04	A	(B) M8X35 FLANGE
		0-28650-830-0		1312-	02	A	(A) M8X30 FLANGE
38		PIN; GEAR CASE COVER					
		8-94483-674-0		1312-	02	A	L=22
51		BOLT; GEAR CASE COVER					
		0-28050-840-0		1312-	11	A	(A) M8X40 FLANGE
		0-28650-820-0		1312-	06	A	(B) M8X20 FLANGE IDN
54		COVER; GEAR CASE					
		8-94393-304-1		1312-	01	A	
62		BOLT; COVER					
		0-28080-814-0		1312-	03	A	M8X14 FLANGE
87		COVER; TACHOMETER DRIVE					
		8-94396-370-0		1312-	01	A	
89		BOLT; ELBOW					
		0-28080-818-0		1312-	02	A	M8X18 FLANGE
93		GASKET; ELBOW					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09623-465-0		1312-	01	A	ID=47.7
94		NUT; GEAR					
		0-91180-214-0		1312-	01	A	M14 FLANGE
115		SENSOR; REVOLUTION,ENG SPD					
		8-97606-943-0		1312-	01	A	(A)
		8-98019-024-0		1312-	01	A	(B)
167		COVER; OIL					
		1-11219-163-0		1312-	01	A	
175	B	SEAL; OIL,CR/SHF,RR					ALSO INCLUDED IN GASKET SET(ENGINE).
		8-97602-379-0		1312-	01	A	
176		BRACKET; HARNESS					
		8-98076-213-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98076-212-0		1312-1401	01	A	(A)
		8-98076-212-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
177		BOLT; SENSOR					
		0-28050-612-0		1312-	01	A	(B) M6X12 FLANGE

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
177		0-28050-616-0		1312-	02	A	(A) M6X16 FLANGE IDN
179		BOLT; BRKT					
		0-28050-816-0		1312-	01	A	(B) M8X16 FLANGE
		0-28050-820-0		1312-	02	A	(A) M8X20 FLANGE
208		DOWEL; ENG FOOT					
		9-43269-009-1		1312-	04	A	
211		BOLT; HSG					
		8-94393-483-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (F) M12X185
		8-94399-252-0		1402-	08	A	POWER TAKE OFF-FLYWHEEL(6SZ) (G) M12X128
		8-97388-159-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (H) M12X160
		9-01666-275-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (I) M12X75
		0-16856-260-0		1312-	01	A	(A) M12X60
		0-16956-270-0		1312-1401	08	A	(D) M12X70
		0-16956-270-0		1402-	08	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (D) M12X70
		0-16956-290-0		1312-1401	03	A	(E) M12X90
		0-16956-290-0		1402-	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (E) M12X90
		0-28151-050-0		1312-	01	A	(B) M10X50 FLANGE
		8-94393-995-0		1312-	01	A	(C) M14X27 FLANGE
220		PLUG; GEAR CHECK HOLE					
		5-13265-001-0		1312-	01	A	M12X10
224		STUD; STARTER					
		0-44011-435-0		1312-	01	A	(A) M14X35 L=56
		0-44011-445-0		1312-	01	A	(B) M14X45 L=66
225		STUD; OIL PAN					
		8-94396-512-0		1312-	04	A	M8X28 L=38
228		STUD; AIR CMPR					
		0-44011-235-0		1312-	01	A	M12X35 L=53
233		STUD; BRKT					
		1-09302-112-0		1312-	01	A	M12X67 L=82
235		GASKET; PLUG GEAR CHECK HOLE					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09630-084-0		1312-1312	01	A	ID=12.2
		8-98251-344-0		1401-	01	A	ID=12.2
241		WASHER; PL,HSG					
		8-94393-140-1		1312-	12	A	ID=12.5 OD=22
250		BOLT; COVER,OIL					

https://truckmanualshub.com/

TIMING GEAR CASE AND FLYWHEEL HOUSING

KEY	R/C	PART NAME / PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS
							A 6HK1-TCS ENG(80L)
250		0-28080-818-0		1312-	02	A	M8X18 FLANGE
290		PLUG; SENSOR HOLE					
		8-97101-974-0		1312-	01	A	
310		SHAFT; IDLE GEAR					
		8-94394-806-0		1312-	01	A	
338		BRACKET; CLIP,HARNESS					
		1-82699-889-0		1312-	01	A	
356		GASKET; COVER					ALSO INCLUDED IN GASKET SET(ENGINE).
		8-94394-186-0		1312-	01	A	ID=110
403		GEAR; IDLE,FRONT					
		8-94395-943-1		1312-	01	A	Z=33
483		BRACKET; WATER DUCT					
		8-94394-405-1		1312-	01	A	
484		CLIP; BAND					
		5-09700-307-1		1312-	01	A	L=80
485		GASKET; SENSOR					
		8-97369-404-0		1312-	02	A	ID=14.2 OD=18.8
487		COVER; HOLE					
		8-98023-824-1		1312-	01	A	
573		CUP; SEALING					
		5-11219-018-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) OD=36
645		CLIP; HARNESS					
		8-97367-985-1		1312-	01	A	ID=18 L=44
0-12		Move to 0-12					
0-15		Move to 0-15					
0-30		Move to 0-30					
4-36		Move to 4-36					
0-11		Move to 0-11					
8-10		Move to 8-10					
0-38		Move to 0-38					
0-40		Move to 0-40					


https://truckmanualshub.com/

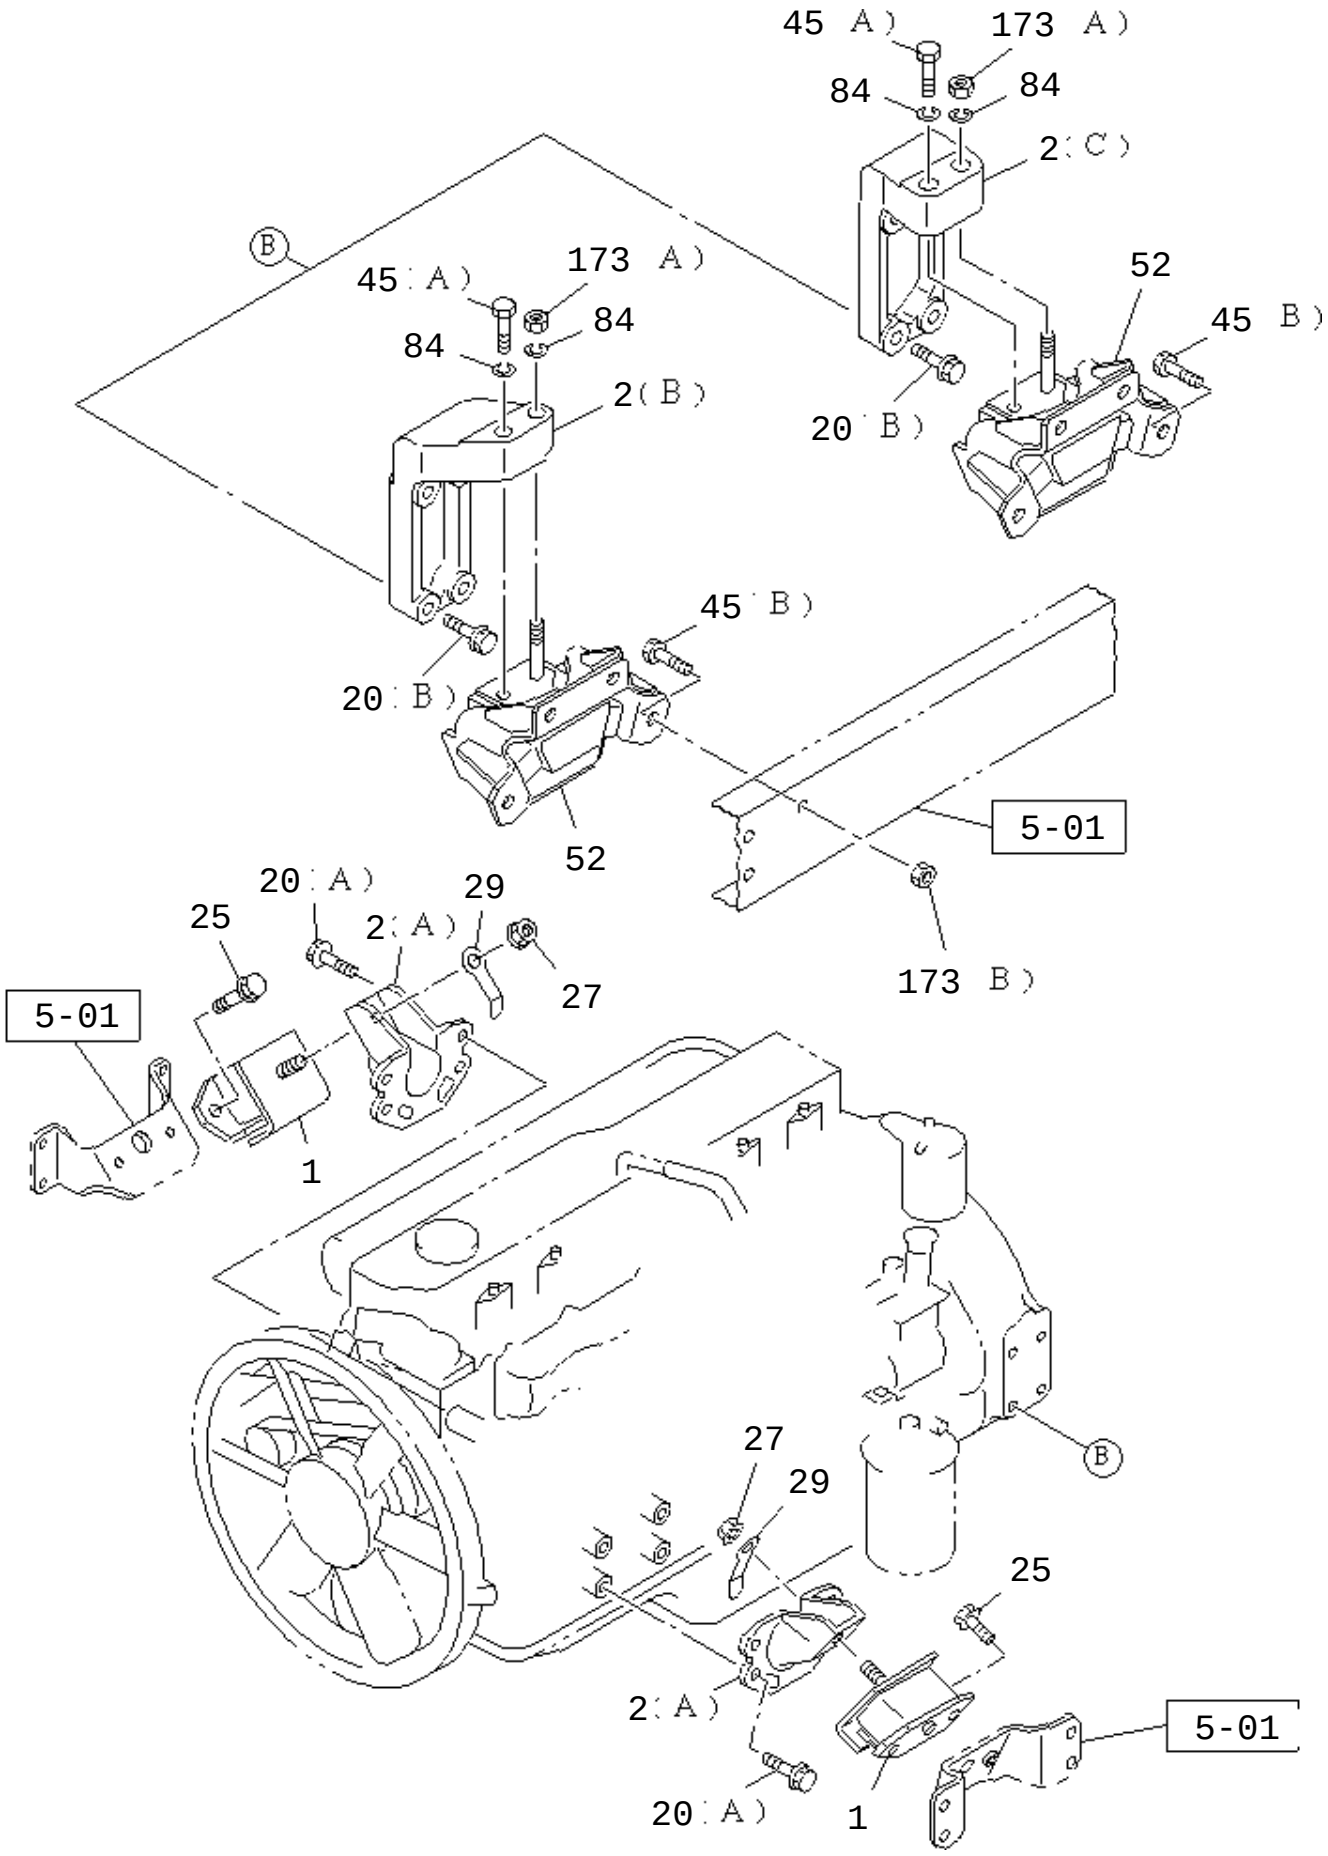

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		RUBBER; ENG FOOT,FRT 1-53215-172-0		1312-		02	A	
2		FOOT; ENG 8-97616-619-0		1402-		01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (C)
		8-97616-620-0		1402-		01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (C)
		8-97602-589-1		1312-		02	A	(A)
		8-97611-990-0		1312-1401	R	01	A	(B)
		8-97611-990-0		1402-	R	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-97611-991-0		1312-1401	L	01	A	(B)
		8-97611-991-0		1402-	L	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
20		BOLT; ENG FOOT 8-94395-721-0		1312-		08	A	(A) M10X20 FLANGE
		8-94399-884-1		1312-		08	A	(B) M12X55
25		BOLT; CUSHION RUBBER TO BRKT 0-28651-235-0		1312-		04	A	M12X35 FLANGE
27		NUT; CUSHION RUBBER TO ENG FOOT 0-91180-212-0		1312-		02	A	M12 FLANGE
29		PLATE; LK,CUSHION RUBBER,FRT 8-98010-312-0		1312-		02	A	
45		BOLT; CUSHION RUBBER TO FRAME 0-10956-660-0		1312-		02	A	(A) M16X60
		0-29261-450-0		1312-		08	A	(B) M14X50
52		RUBBER; CUSHION,ENG MTG,RR 8-98013-022-1		1312-		02	A	
84		WASHER; PL,ENG MTG RR TO FRAME 0-91614-516-0		1312-		04	A	ID=17
173		NUT; ENG MTG RR TO FRAME 0-91110-516-0		1312-		02	A	(A) M16
		0-91180-214-0		1312-		08	A	(B) M14 FLANGE
5-01		Move to 5-01						

https://truckmanualshub.com/

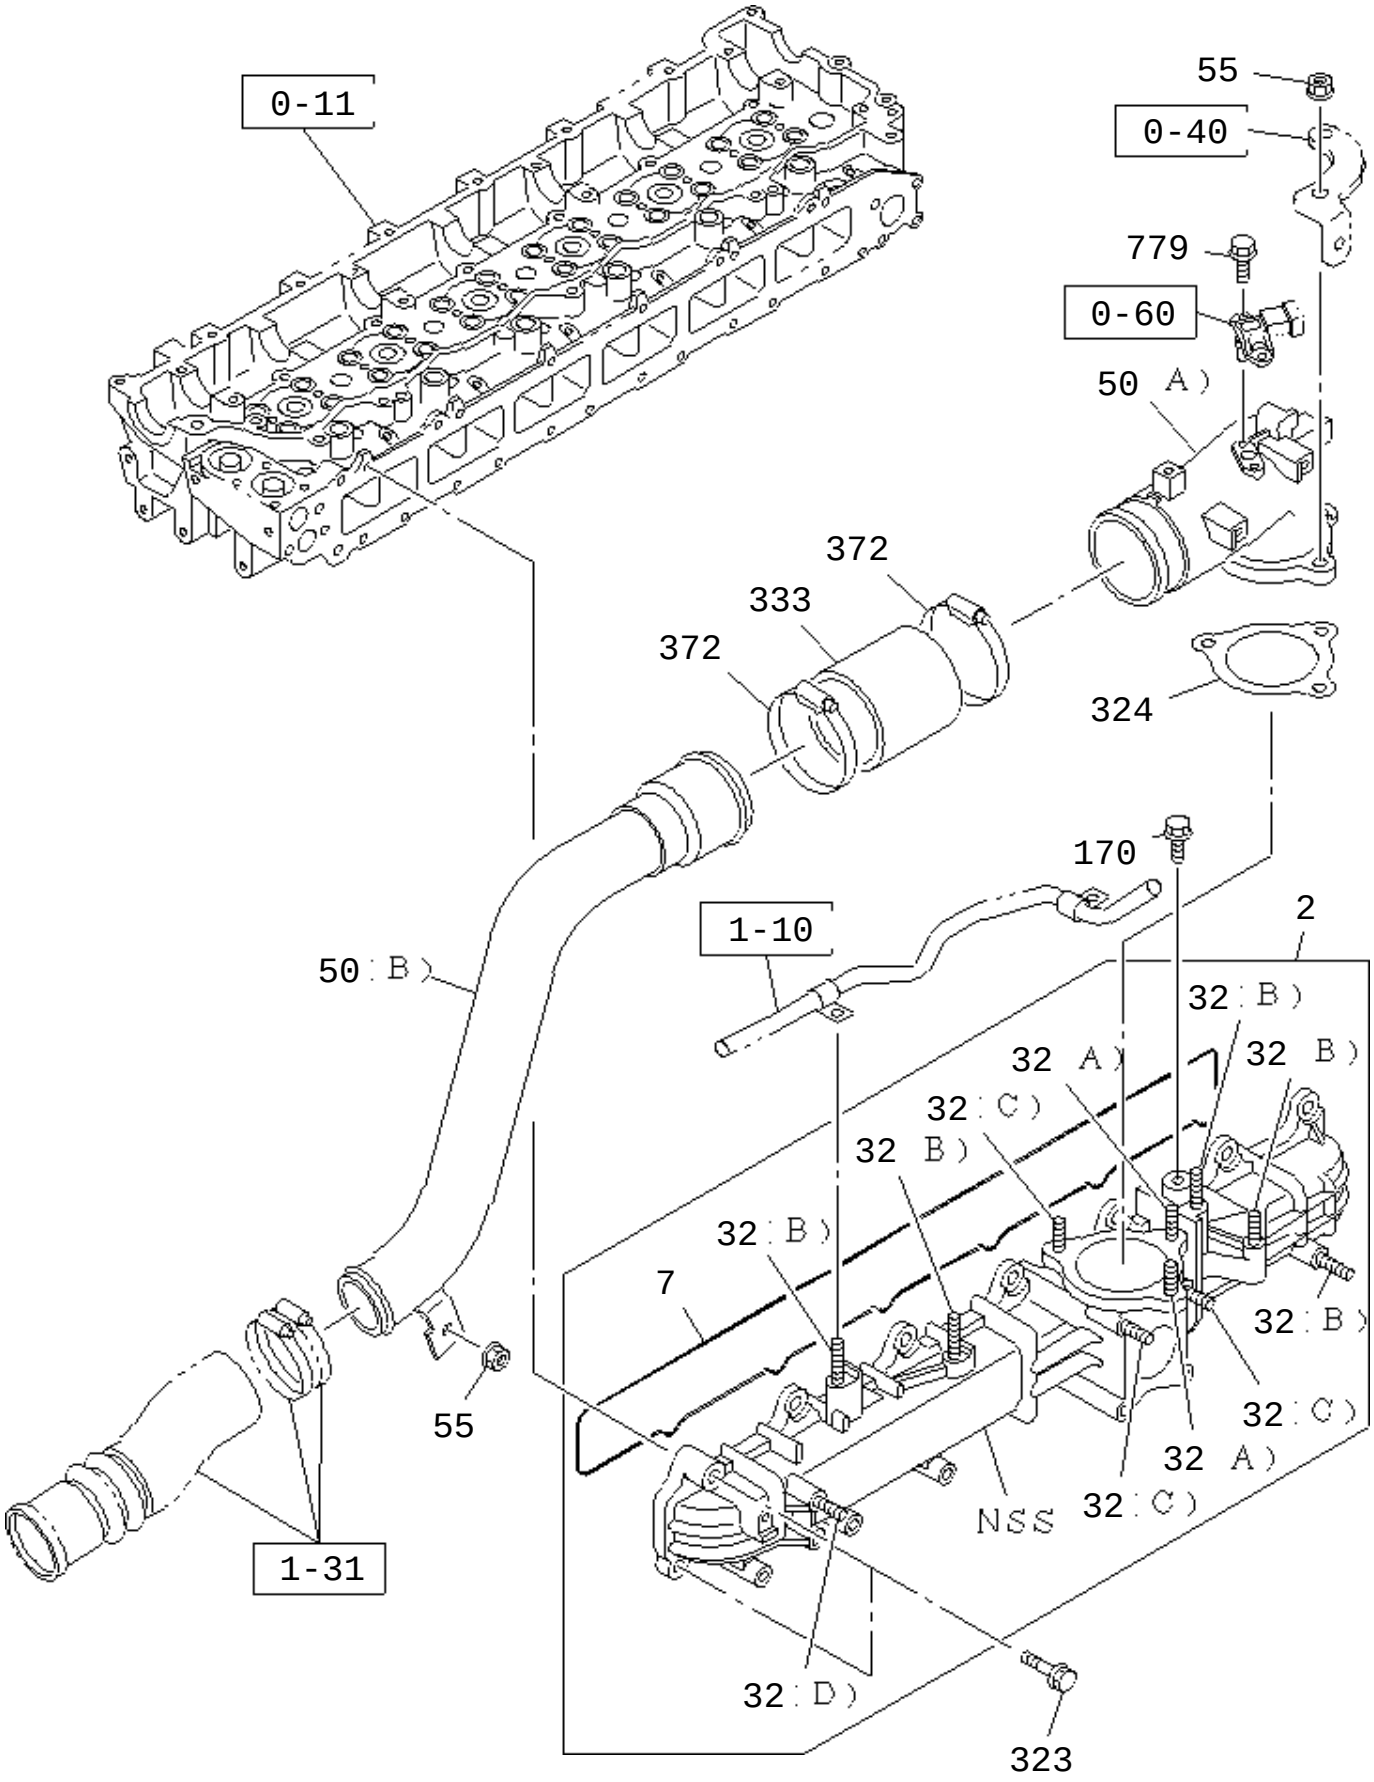


https://truckmanualshub.com/

0-25 INLET MANIFOLD

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
2		COVER; INL					
		8-98061-091-0		1312-	01	A	
7		GASKET; INL MANIF TO HD					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
		8-94390-775-0		1312-	01	A	
32		STUD; INL PIPE					
		0-41010-630-0		1312-	05	A	(B) M6X30 L=38
		0-41010-828-0		1312-	03	A	(C) M8X28 L=40
		0-41010-840-0		1312-	02	A	(A) M8X40 L=52
		0-44011-030-0		1312-	01	A	(D) M10X30 L=45
50		PIPE; INL					
		8-97607-412-2		1312-	01	A	(B)
		8-98061-804-1		1312-	01	A	(A)
55		NUT; INL PIPE					
		0-91180-108-0		1312-	04	A	M8 FLANGE
170		BOLT; BRKT					
		0-28050-835-0		1312-	01	A	M8X35 FLANGE
323		BOLT; DUCT					
		0-28050-850-0		1312-	06	A	M8X50 FLANGE
		0-28650-825-0		1312-	06	A	M8X25 FLANGE IDN
		8-97229-317-1		1312-	02	A	M8X48 FLANGE
324		GASKET; INL PIPE TO INL CVR					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
		8-97601-777-0		1312-	01	A	
333		HOSE; RUBBER,INL PIPE					
		8-97611-306-0		1312-	01	A	
372		CLIP; HOSE					
		1-09707-141-0		1312-	02	A	ID=77-99
779		BOLT; SENSOR					
		8-97316-615-0		1312-	02	A	M4X10 W/PL WASHER
0-11		Move to 0-11					
0-40		Move to 0-40					
0-60		Move to 0-60					
1-10		Move to 1-10					
1-31		Move to 1-31					

https://truckmanualshub.com/

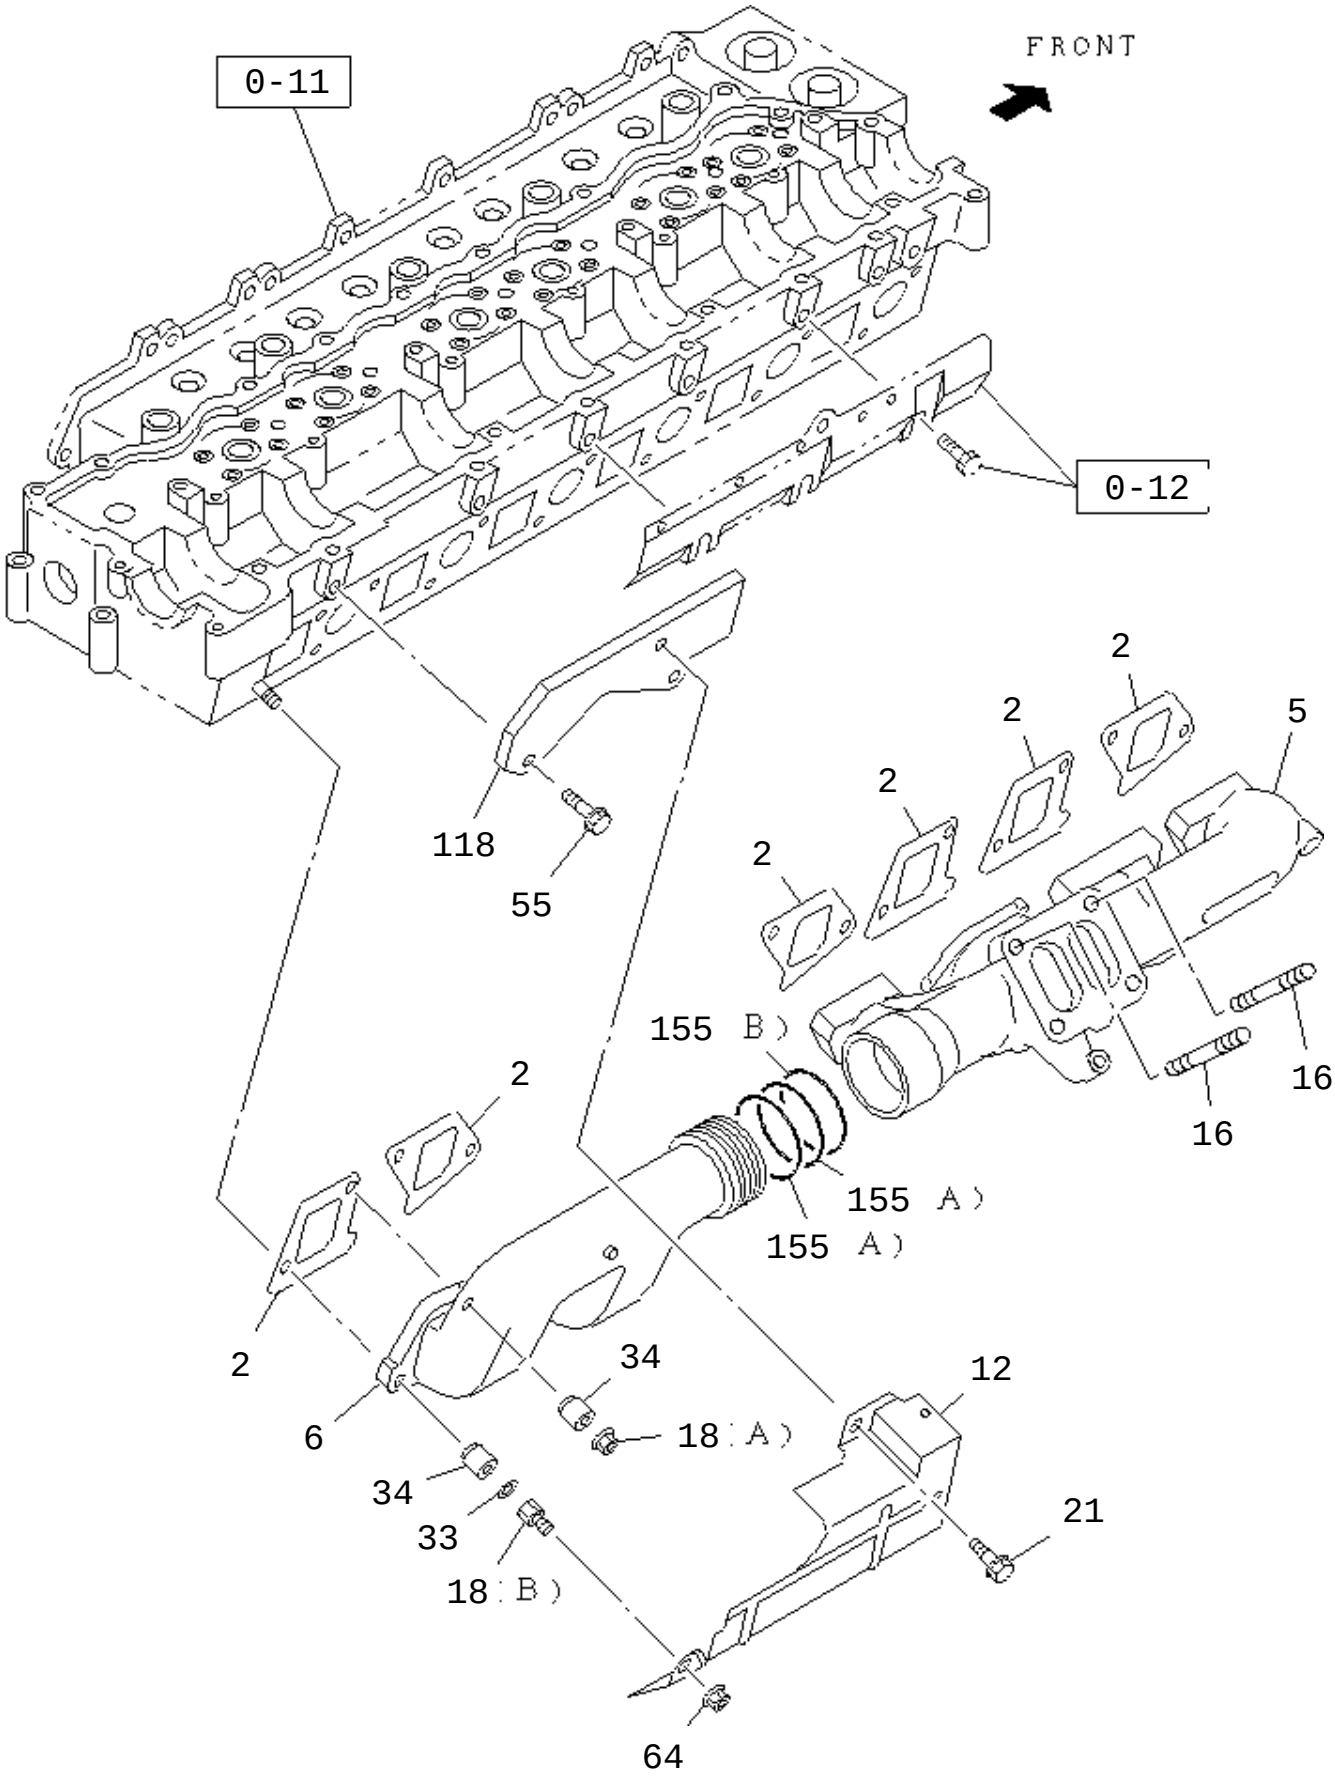



https://truckmanualshub.com/

0-27 EXHAUST MANIFOLD

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
2		GASKET; EXH MANIF TO HD					ALSO INCLUDED IN GASKET SET(ENG.
		8-94393-672-4		1312-	06	A	
5		MANIFOLD; EXH,FRT					
		8-97602-056-0		1312-	01	A	
6		MANIFOLD; EXH,RR					
		8-97600-970-0		1312-	01	A	
12		PROTECTOR; HEAT,TURBOCHARGER,EXH MANIF					
		8-97601-632-0		1312-	01	A	
16		STUD; EXH PIPE TO MANIF					
		9-04731-025-0		1312-	02	A	M10X25 L=40
18		NUT; EXH MANIF					
		0-91370-010-0		1312-	10	A	(A) M10 LOCK NUT IDN
		8-98205-394-0		1312-	02	A	(B)
21		BOLT; HEAT PROTECTOR					
		0-28050-816-0		1312-	01	A	M8X16 FLANGE
33		WASHER; EXH MANIF					
		1-09556-015-0		1312-	02	A	T=2.2
34		COLLAR; DIST,EXH MANIF					
		8-97250-073-1		1312-	12	A	L=28
55		BOLT; BRKT					
		0-28050-816-0		1312-	02	A	M8X16 FLANGE
64		NUT; HEAT PROTECTOR					
		0-91180-210-0		1312-	02	A	M10 FLANGE
118		BRACKET; HEAT PROTECTOR					
		8-97603-366-0		1312-	01	A	
155		RING; SEAL,EXH MANIF					
		1-14149-151-0		1312-	01	A	(B)
		1-14149-184-0		1312-	02	A	(A)
0-11		Move to 0-11					
0-12		Move to 0-12					

https://truckmanualshub.com/

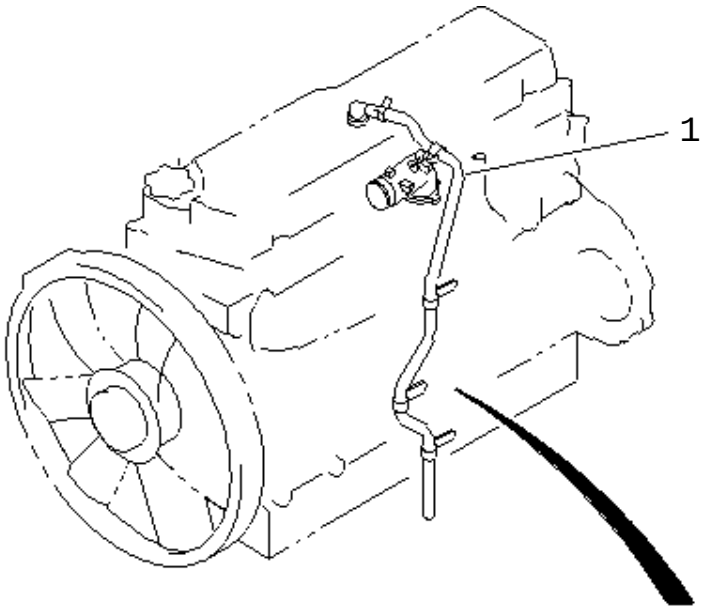

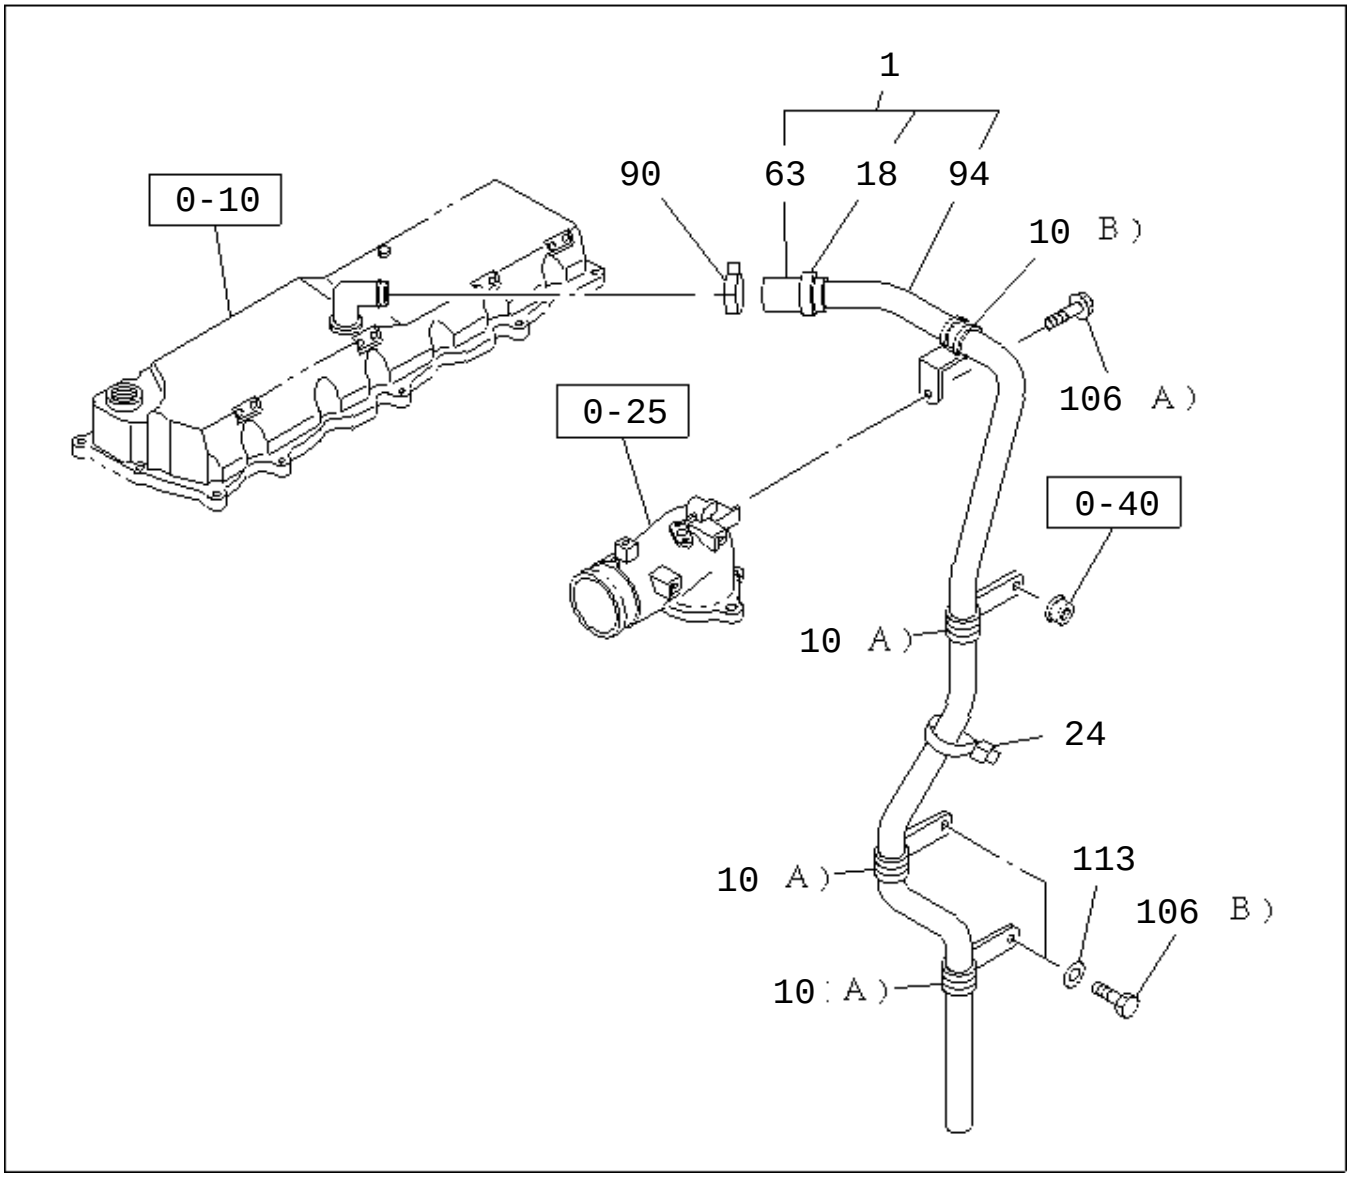


https://truckmanualshub.com/

0-28 VENTILATION SYSTEM

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		BREATHER; AIR					
		8-94392-083-3		1312-	01	A	
10		CLIP; AIR BREATHER					
		1-09700-704-1		1312-	03	A	(A) ID=32 L=75
		1-09700-994-0		1312-	01	A	(B) ID=31 H=30 L=35
18		CLIP; RUBBER HOSE,AIR BREATHER					
		8-94362-518-0		1312-	01	A	ID=33.6
24		CLIP; RUBBER HOSE,VENTILATOR					
		8-98216-430-0		1312-	01	A	L=250
63		HOSE; RUBBER,AIR BREATHER					
		0-02728-070-0		1312-	01	A	L=70
90		CLIP; RUBBER HOSE					
		8-94362-518-0		1312-	01	A	ID=33.6
94		HOSE; BREATHER TO PIPE					
		8-94392-082-0		1312-	01	A	L=1260
106		BOLT; DRAIN PIPE					
		0-28050-612-0		1312-	01	A	(A) M6X12 FLANGE
		0-28151-016-0		1312-	02	A	(B) M10X16 FLANGE
113		WASHER; PL,CLIP					
		0-91610-510-0		1312-	02	A	ID=10.5
0-10		Move to 0-10					
0-25		Move to 0-25					
0-40		Move to 0-40					

https://truckmanualshub.com/

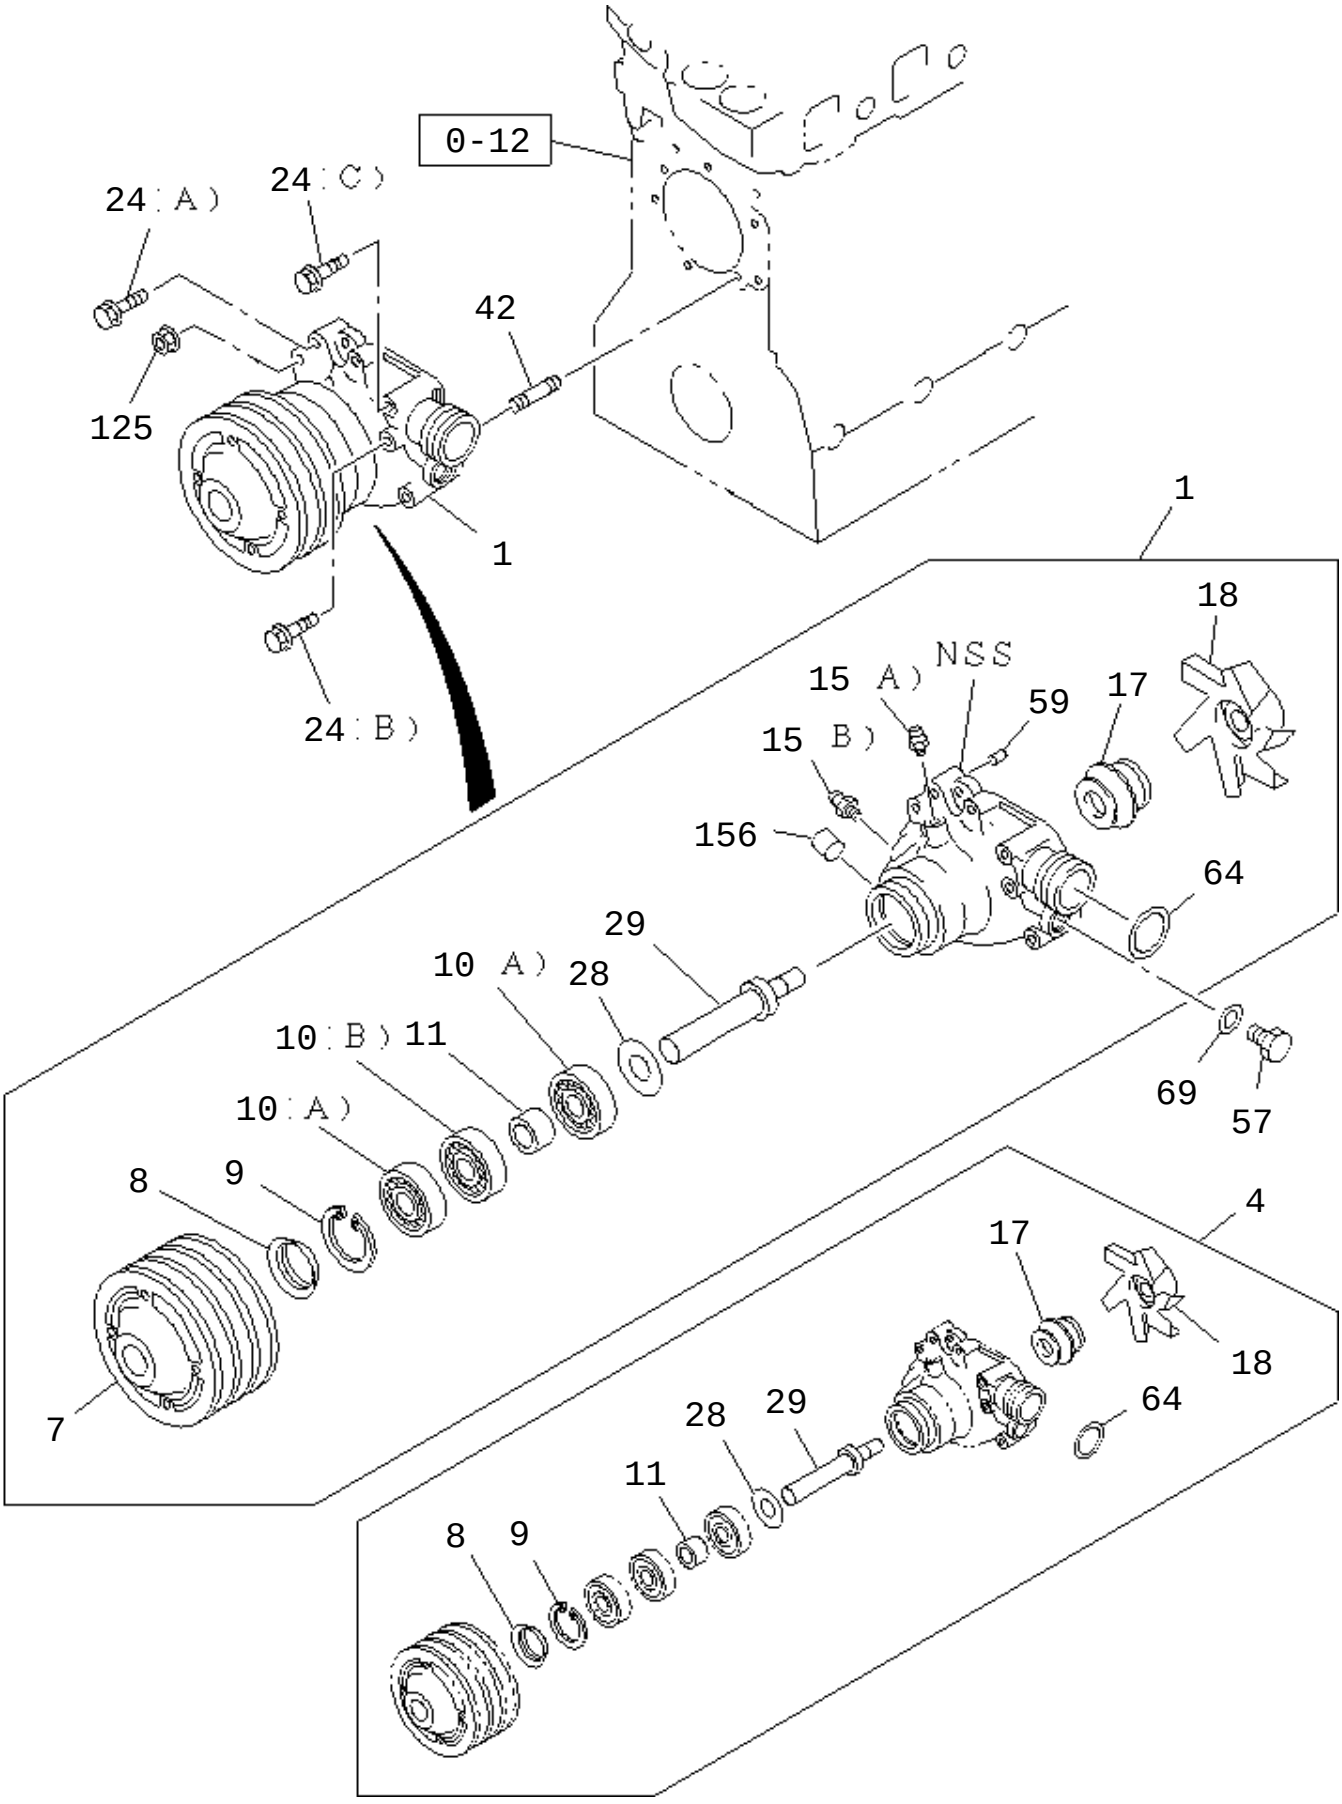


https://truckmanualshub.com/

0-30 WATER PUMP AND CORROSION RESISTOR

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		PUMP ASM; WATER,W/GASKET					
		1-87310-835-0	C	1312-1312	01	A	
		1-87310-902-0	C	1401-1405	01	A	
		1-87310-974-0		1406-	01	A	
4	B	REPAIR KIT; WATER PUMP					
		1-87813-949-0		1312-1312	01	A	
		1-87814-167-0		1401-1405	01	A	
		1-87814-615-0		1406-	01	A	
7		PULLEY; WATER PUMP					
		8-97616-657-0		1312-1405	01	A	
		8-98281-099-0		1406-	01	A	
8		THROWER; DUST,WATER PUMP					
		8-94399-457-0		1312-	01	A	
9		RING; SNAP,WATER PUMP					
		9-09180-162-0		1312-	01	A	
							ID=57.9
10		BEARING; WATER PUMP					
		8-94391-298-0		1312-	02	A	
							(A)
		8-94391-299-0		1312-	01	A	
							(B)
11		SPACER; BRG,WATER PUMP					
		1-13634-040-0		1312-	01	A	
15		NIPPLE; GREASE,WATER PUMP					
		0-90301-410-0		1312-	01	A	
							(B)
							PT1/8 STRAIGHT
		1-09380-002-0		1312-	01	A	
							(A)
							PT1/8 STRAIGHT
17		SEAL UNIT; WATER PUMP					
		8-98221-159-0		1312-1312	01	A	
		8-94392-090-0		1401-1405	01	A	
		8-98272-791-0		1406-	01	A	
18		IMPELLER; WATER PUMP					
		8-94392-922-0		1312-	01	A	
24		BOLT; WATER PUMP					
		0-28050-880-0		1312-	01	A	
							(B)
							M8X80 FLANGE
		8-94130-055-1		1312-	03	A	
							(A)
							M8X58 FLANGE
		8-94397-359-1		1312-	01	A	
							(C)
							M10X85 FLANGE
28		WASHER; WATER PUMP					
		8-94397-097-0		1312-	01	A	
							ID=25.5 OD=50
29		SHAFT; WATER PUMP					
		8-94396-130-1		1312-1405	01	A	
		8-98280-700-0		1406-	01	A	
42		STUD; WATER PUMP					
		0-40110-830-0		1312-	01	A	
							M8X30 L=46
57		PLUG; HTR,WATER PUMP					
		9-99202-320-0		1312-	01	A	
							M20
59		DOWEL; WATER PUMP					
		1-13119-003-0		1312-	02	A	
							OD=12 L=9
64		GASKET; WATER PUMP TO DUCT					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09623-383-0		1312-	01	A	
							ID=44.7
69		GASKET; PLUG,HTR					
		9-09571-420-0		1312-	01	A	
							ID=20.5 OD=28.0
125		NUT; WATER PUMP					
		0-91180-108-0		1312-	04	A	
							M8 FLANGE
156		CUP; SEALING					
		1-09600-016-0		1312-	01	A	
							OD=25
0-12		Move to 0-12					

https://truckmanualshub.com/

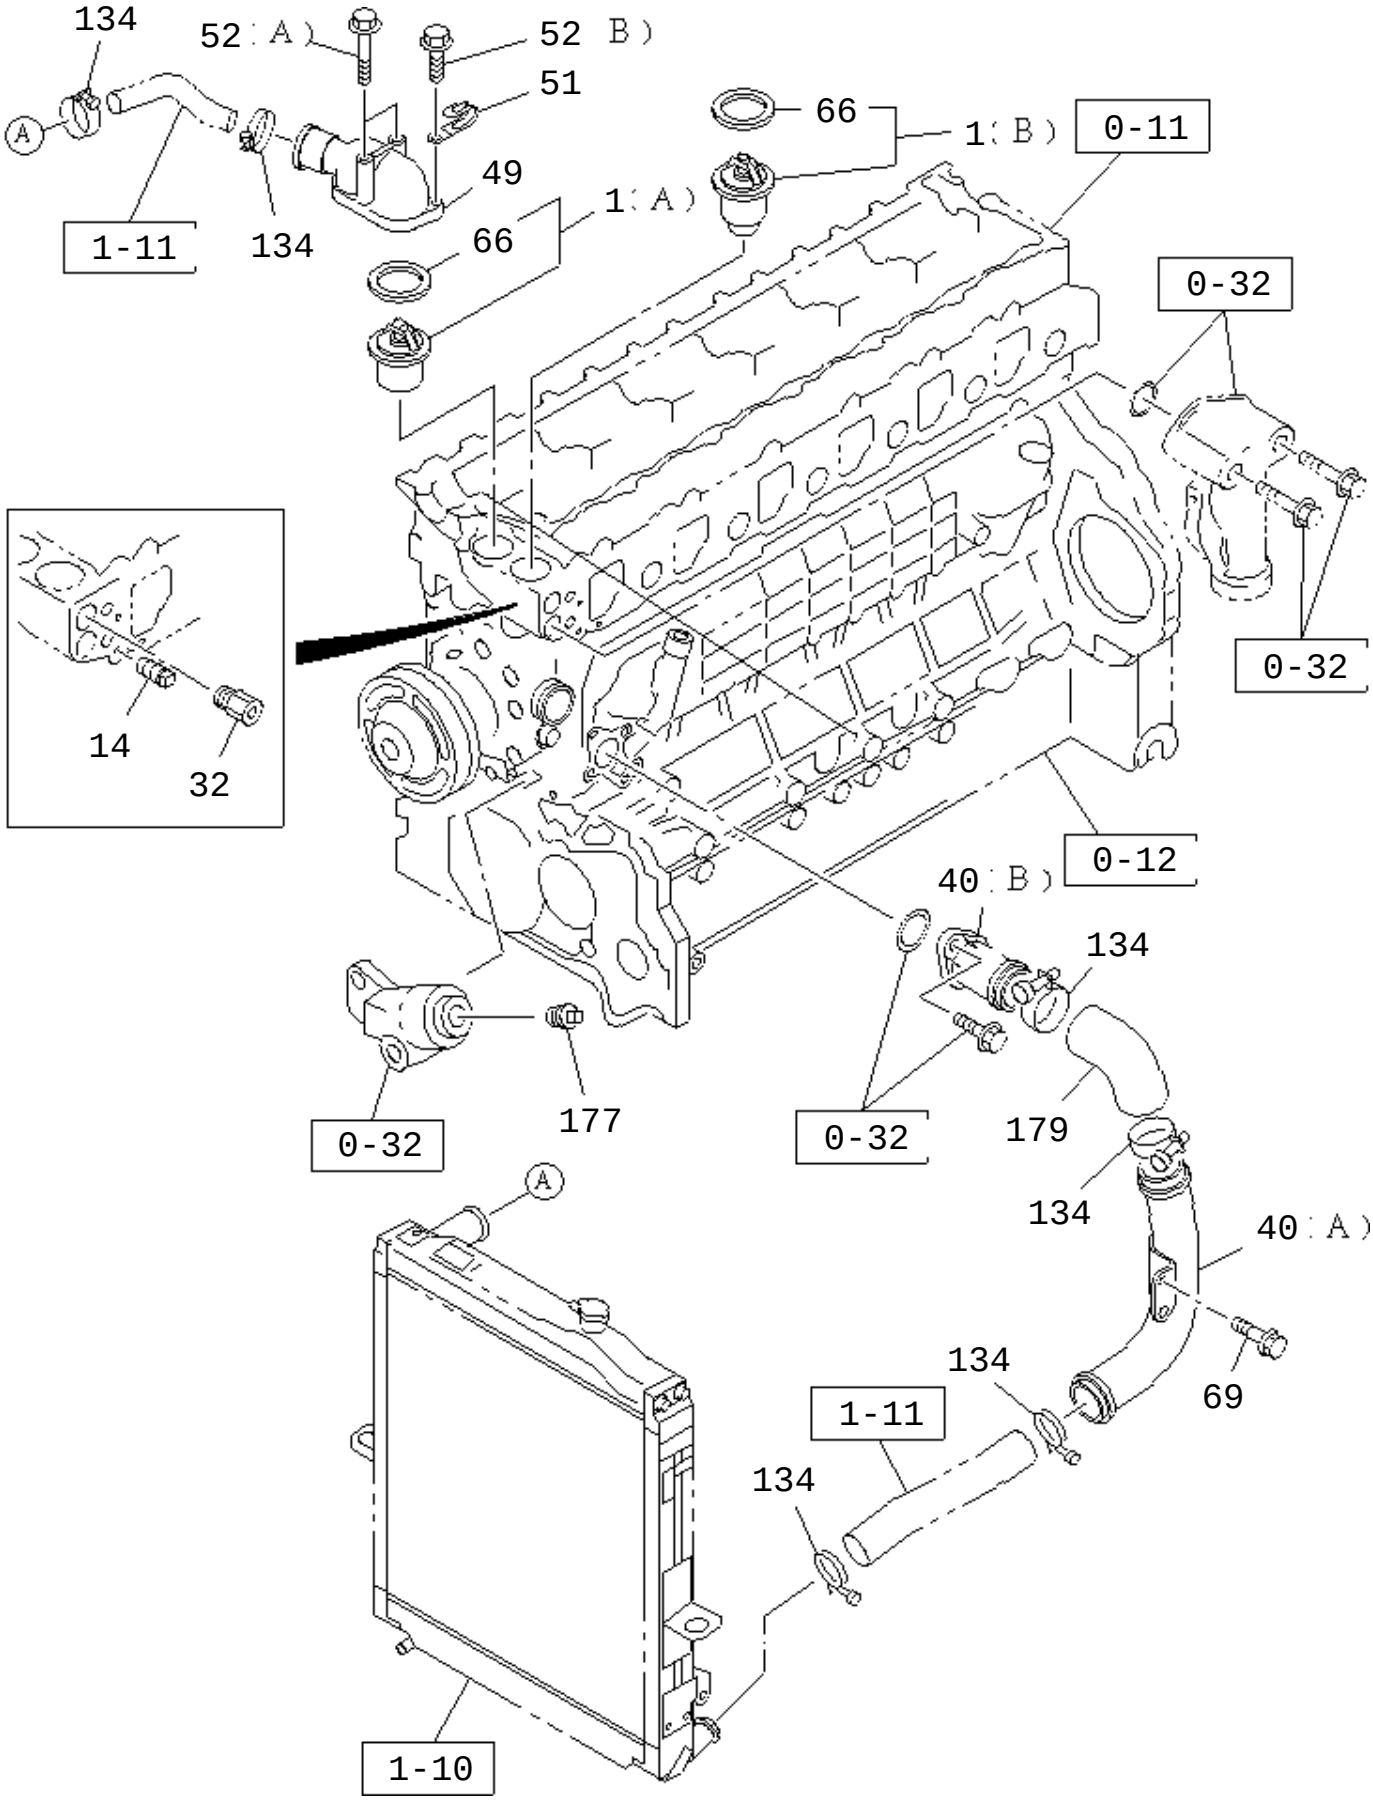


https://truckmanualshub.com/


0-31 THERMOSTAT AND HOUSING

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1	A	THERMOSTAT					
		8-97602-048-2		1312-	01	A	(A) 82 CELSIUS
		8-97602-393-1		1312-	01	A	(B) 82 CELSIUS
14		PLUG; SW					
		8-94397-338-0		1312-	01	A	PT3/8
32		CONNECTOR; HTR					
		8-98177-501-0		1312-	01	A	
40		DUCT; WATER,SUCTION					
		8-94391-091-1		1312-	01	A	(B)
		8-94394-404-1		1312-	01	A	(A)
49		PIPE; WATER OUTLET					
		8-97602-047-0		1312-	01	A	
51		CLIP; JOINT,THERMOSTAT					
		8-97367-985-1		1312-	01	A	ID=18 L=44
52		BOLT; JOINT,THERMOSTAT					
		0-28050-880-0		1312-	02	A	(A) M8X80 FLANGE
		0-28650-825-0		1312-	02	A	(B) M8X25 FLANGE IDN
66		GASKET; THERMOSTAT HSG					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
		8-97300-793-0		1312-	02	A	
69		BOLT; DUCT,WATER OUTLET					
		0-28650-820-0		1312-	02	A	M8X20 FLANGE IDN
134		CLIP; RUBBER HOSE					
		1-09704-067-0		1312-	02	A	ID=63
		1-09704-067-0		1312-	04	A	ID=63
177		PLUG; PIPE,WATER DUCT					
		9-09204-521-0		1312-	01	A	PT1/2
179		HOSE; RUBBER,WATER DUCT					
		8-94390-400-3		1312-	01	A	
0-11		Move to 0-11					
0-12		Move to 0-12					
0-32		Move to 0-32					
1-10		Move to 1-10					
1-11		Move to 1-11					

https://truckmanualshub.com/


WATER DUCT

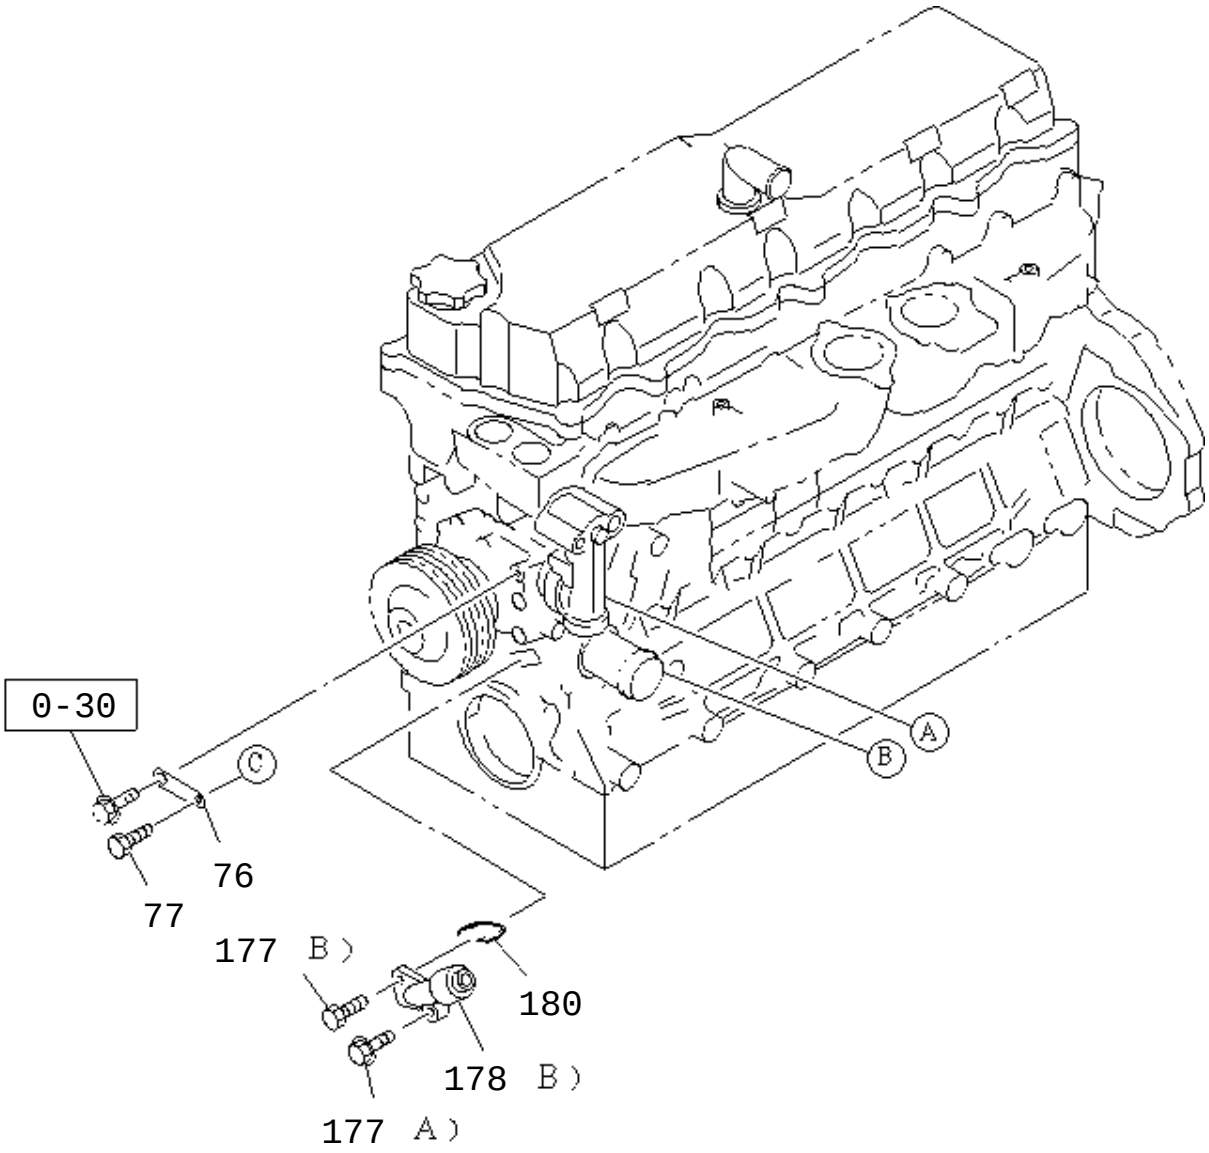

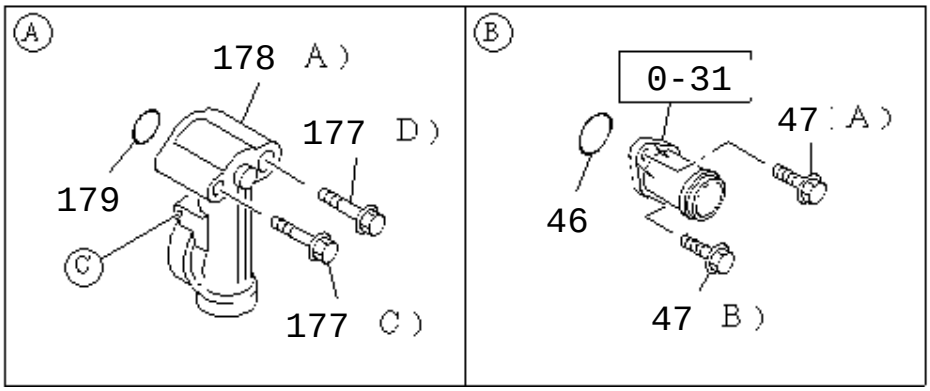

https://truckmanualshub.com/

TURBOCHARGER AND AIR CMPR SIDE

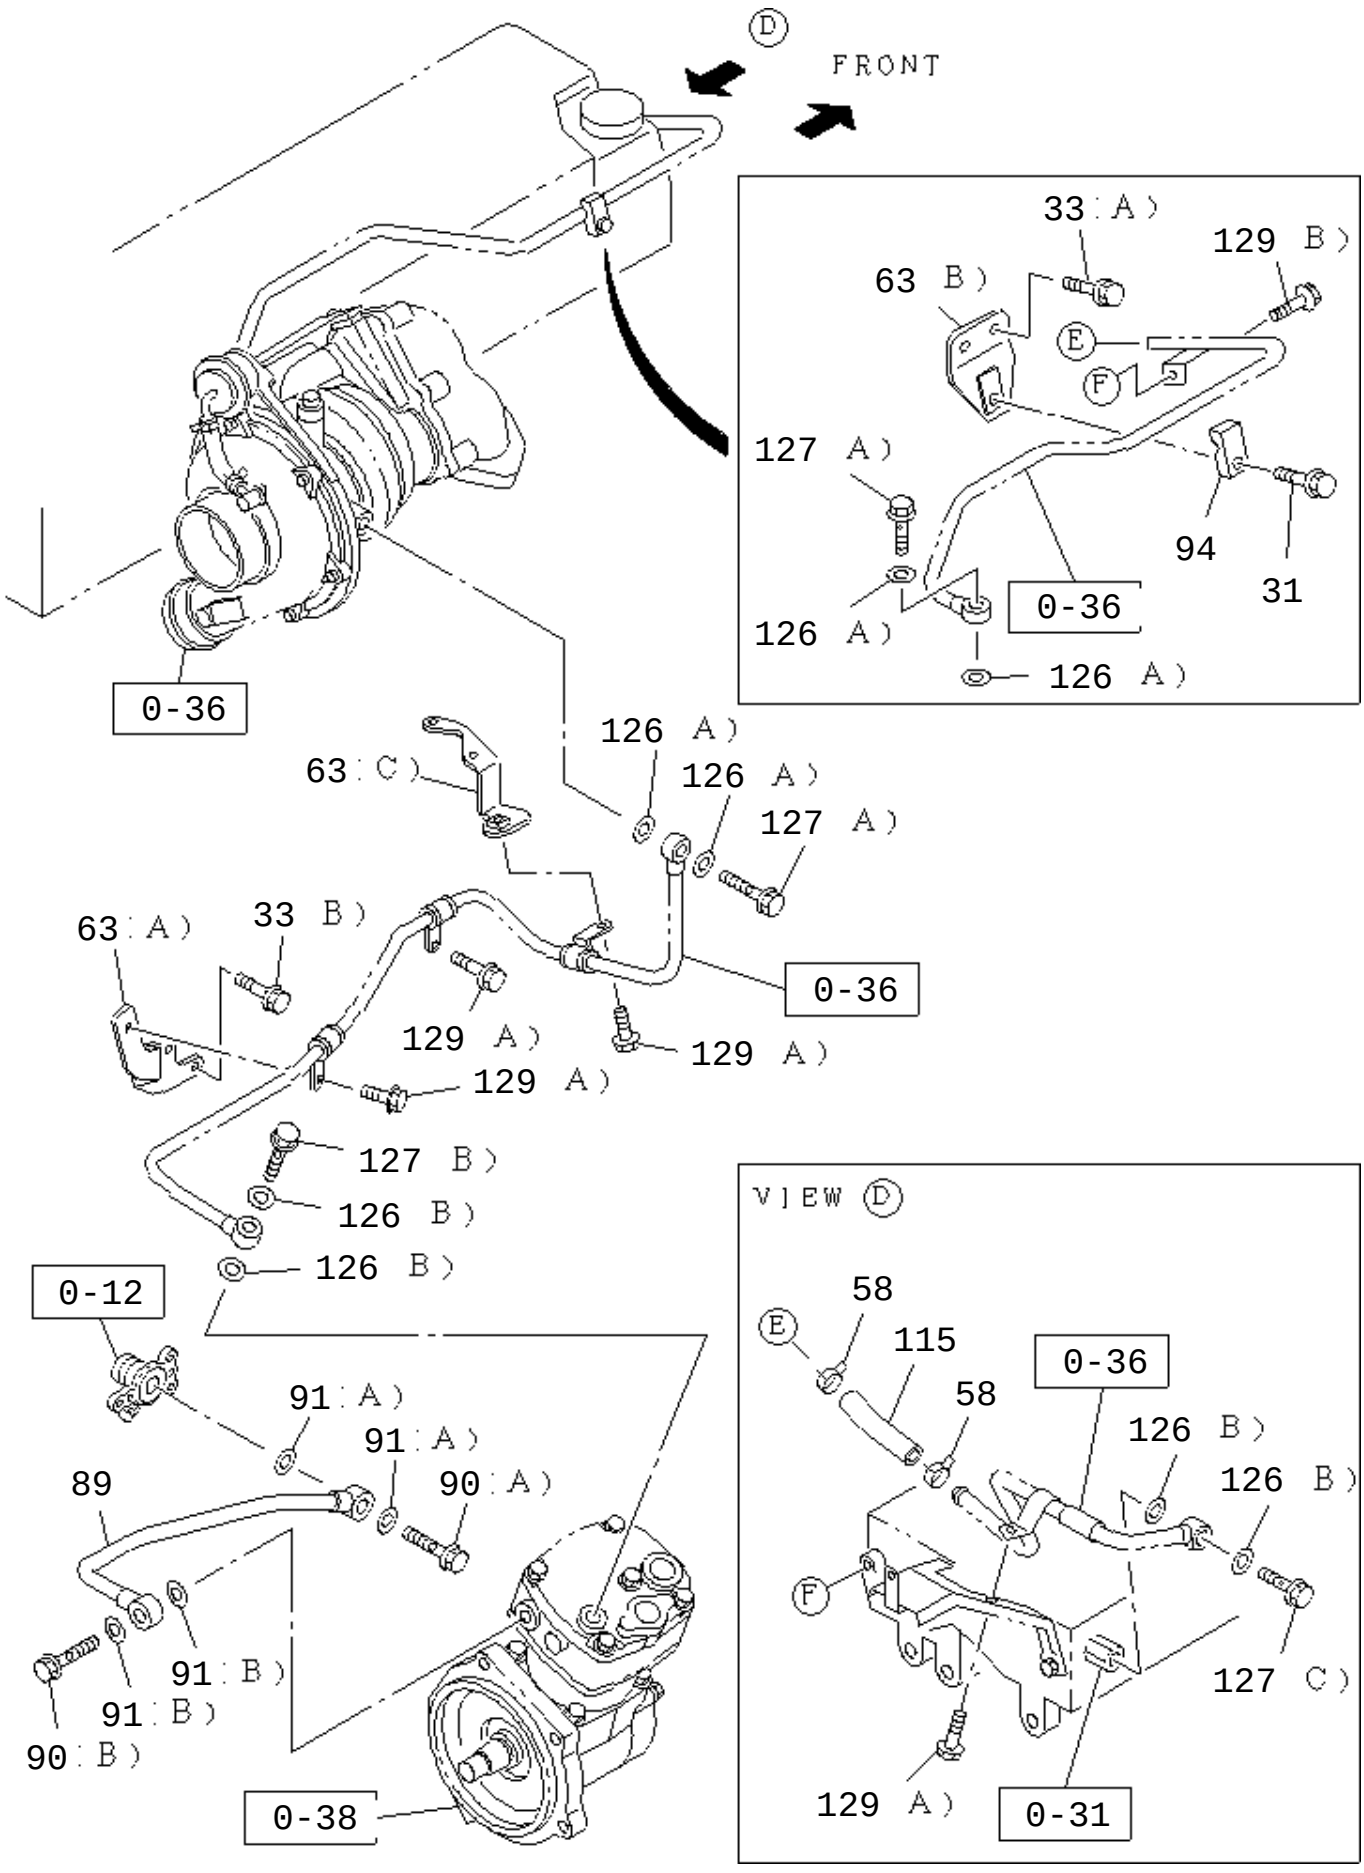

https://truckmanualshub.com/

0-32 WATER PIPING; ENGINE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
31		BOLT; CLIP 0-28650-635-0		1312-	01	A	M6X35 FLANGE
33		BOLT; BRKT 0-28050-816-0		1312-	02	A	(A) M8X16 FLANGE
		0-28050-820-0		1312-	02	A	(B) M8X20 FLANGE
46		GASKET; WATER DUCT,TO OIL COOLER 8-94396-680-2		1312-	01	A	ALSO INCLUDED IN GASKET SET(ENGINE). ID=48.5 OD=53.3
47		BOLT; DUCT,TO OIL COOLER 0-28050-845-0		1312-	01	A	(A) M8X45 FLANGE
		0-28650-825-0		1312-	01	A	(B) M8X25 FLANGE IDN
58		CLIP; RUBBER HOSE 8-94392-924-0		1312-	02	A	ID=16
63		BRACKET; WATER PIPE 8-94392-951-0		1312-	01	A	(B)
		8-98074-252-0		1312-	01	A	(C)
		8-98074-253-0		1312-	01	A	(A)
76		BRACKET; WATER DUCT,PUMP 8-94394-784-0		1312-	01	A	
77		BOLT; BRKT,WATER DUCT 0-28050-850-0		1312-	01	A	M8X50 FLANGE
89		PIPE; WATER,AIR CMPR,IN 8-97611-095-0		1312-	01	A	
90		BOLT; EYE,WATER PIPE,AIR CMPR 1-09675-193-0		1312-	01	A	(A) M14X27 EYE-BOLT
		8-94383-489-0		1312-	01	A	(B) M16X28
91		GASKET; WATER PIPE,AIR CMPR 1-09630-085-0		1312-1312	02	A	ALSO INCLUDED IN GASKET SET(ENG. & H (A) ID=14.2 OD=19.2
		8-98251-345-0		1401-	02	A	(A) ID=14.2 OD=19.2
		1-09630-086-0		1312-	02	A	(B) ID=16.2
94		CLIP; WATER PIPE 8-94396-860-0		1312-	01	A	
115		HOSE; RUBBER 0-03561-300-0		1312-	01	A	L=60 SERVICED BY L=3000
126		GASKET; CAP NUT 1-09630-085-0		1312-1312	04	A	ALSO INCLUDED IN GASKET SET(ENGINE). (A) ID=14.2 OD=19.2
		8-98251-345-0		1401-	04	A	(A) ID=14.2 OD=19.2
		1-09630-086-0		1312-	04	A	(B) ID=16.2
127		BOLT; EYE 1-09675-193-0		1312-	02	A	(A) M14X27 EYE-BOLT


https://truckmanualshub.com/


0-32 WATER PIPING; ENGINE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
127		5-09675-028-2		1312-	01	A	(C) M16X25
		8-94383-489-0		1312-	01	A	(B) M16X28
129		BOLT; WATER PIPE TO BRKT					
		0-28050-816-0		1312-	05	A	(A) M8X16 FLANGE
		0-28151-220-0		1312-	01	A	(B) M12X20 FLANGE
177		BOLT; WATER DUCT					
		0-28050-880-0		1312-	01	A	(C) M8X80 FLANGE
		0-28650-825-0		1312-	01	A	(B) M8X25 FLANGE IDN
		1-09044-072-1		1312-	01	A	(A) M8X65 FLANGE
		8-94397-360-1		1312-	01	A	(D) M16X75 FLANGE
178		DUCT; WATER,BYPASS					
		8-94390-644-0		1312-	01	A	(B)
		8-94396-627-3		1312-	01	A	(A)
179		GASKET; WATER DUCT					ALSO INCLUDED IN GASKET SET(ENG. & H
		8-94396-679-0		1312-1408	01	A	ID=31.2
		8-98276-756-0		1409-	01	A	ID=31.2
180		GASKET; WATER DUCT					ALSO INCLUDED IN GASKET SET(ENGINE).
		8-94396-720-1		1312-	01	A	
0-30		Move to 0-30					
0-31		Move to 0-31					
0-12		Move to 0-12					
0-36		Move to 0-36					
0-38		Move to 0-38					

https://truckmanualshub.com/

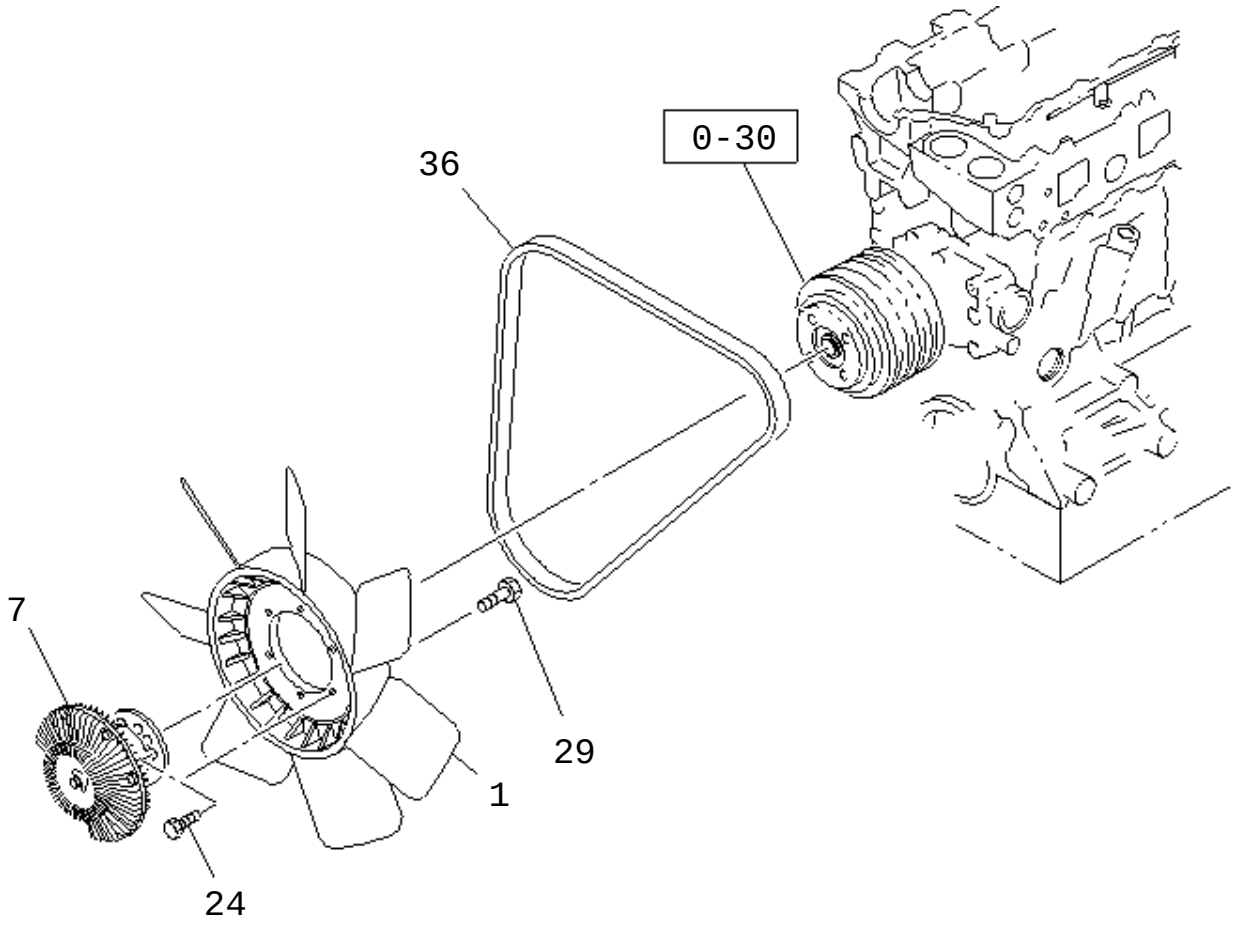

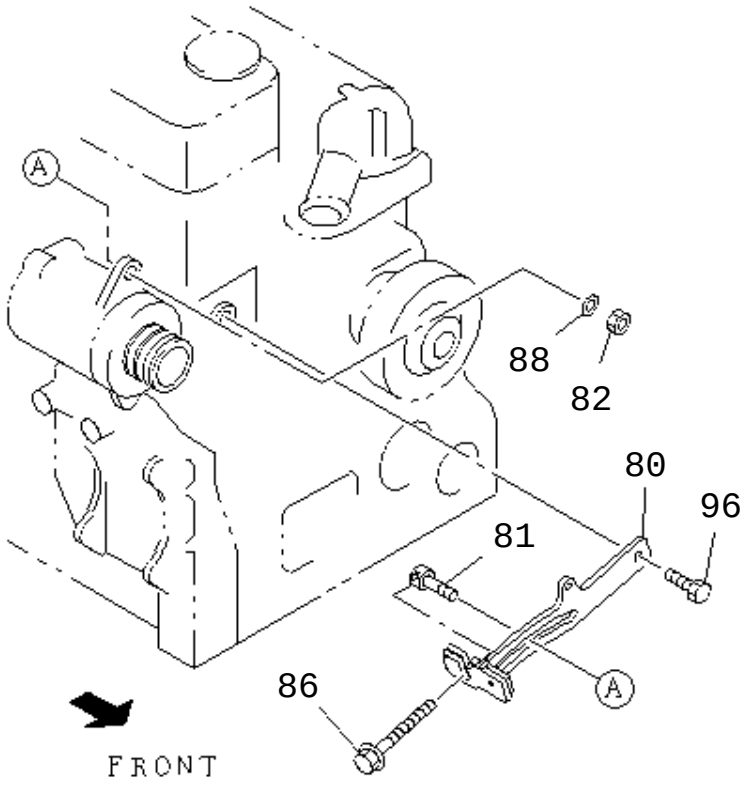

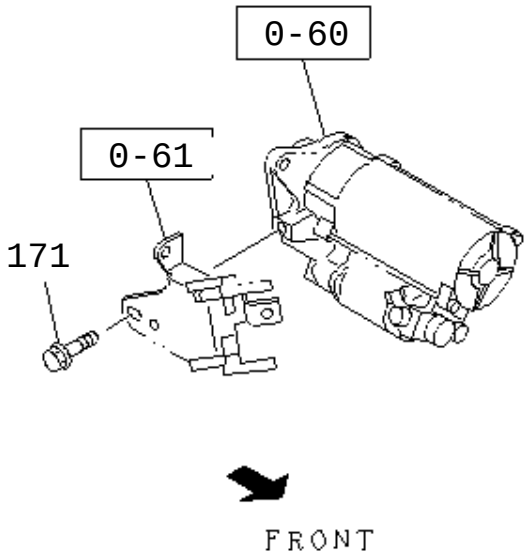


https://truckmanualshub.com/

0-33 FAN AND FAN BELT

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		FAN; COOLING					
		8-98073-467-1		1312-	01	A	
7		COUPLING; FAN					
		8-98075-290-1		1312-	01	A	
24		BOLT; FAN					
		0-28151-025-0		1312-	04	A	
							M10X25 FLANGE
29		BOLT; COUPLING TO WATER PUMP					
		0-28050-816-0		1312-	06	A	
							M8X16 FLANGE
36	A	BELT; COOLING FAN					
		8-98241-115-0		1402-	01	A	KD ENGINE<7MB>
							L=1170
		8-97611-859-1		1312-1401	01	A	
							L=1170
		8-97611-859-1		1402-	01	A	EXC. KD ENGINE<7MB>
							L=1170
80		PLATE; ADJ					
		8-97601-020-1		1312-	01	A	
81		PIECE; SLIDING					
		1-13674-160-0		1312-	01	A	
							M12X45
82		NUT; ADJ PLATE					
		0-91180-112-0		1312-	01	A	
							M12 FLANGE
							IDN
86		BOLT; ADJ					
		1-09009-114-1		1312-	01	A	
							M10X155 FLANGE
88		WASHER; PL,ADJ PLATE					
		0-91614-712-0		1312-	01	A	
							ID=12.5 OD=32
							IDN
96		BOLT; ADJ PLATE					
		0-28151-045-0		1312-	01	A	
							M10X45 FLANGE
171		BOLT; HEAT PROTECTOR					
		0-28051-020-0		1312-	01	A	
							M10X20 FLANGE
0-30		Move to 0-30					
0-60		Move to 0-60					
0-61		Move to 0-61					

https://truckmanualshub.com/

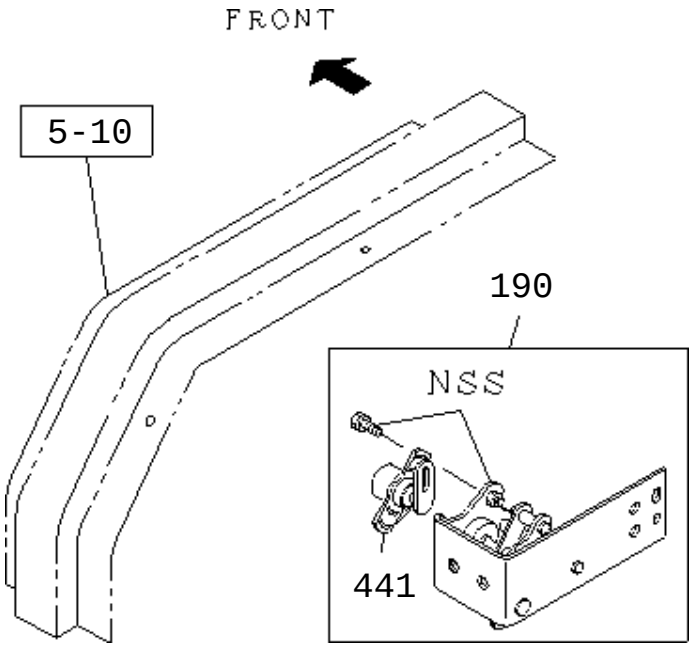


https://truckmanualshub.com/

ENGINE CONTROL VALVE AND LEVER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
190		LEVER; ENG CONT 8-97219-466-4		1405-	01	A	FVZ WIDE CAB(FG****) MIXER CHASSIS<6NR>
441		SENSOR; THROTTLE POSITION 8-97200-308-0		1405-	01	A	FVZ WIDE CAB(FG****) MIXER CHASSIS<6NR>
5-10		Move to 5-10					


https://truckmanualshub.com/

TURBOCHARGER ASM AND FIXING

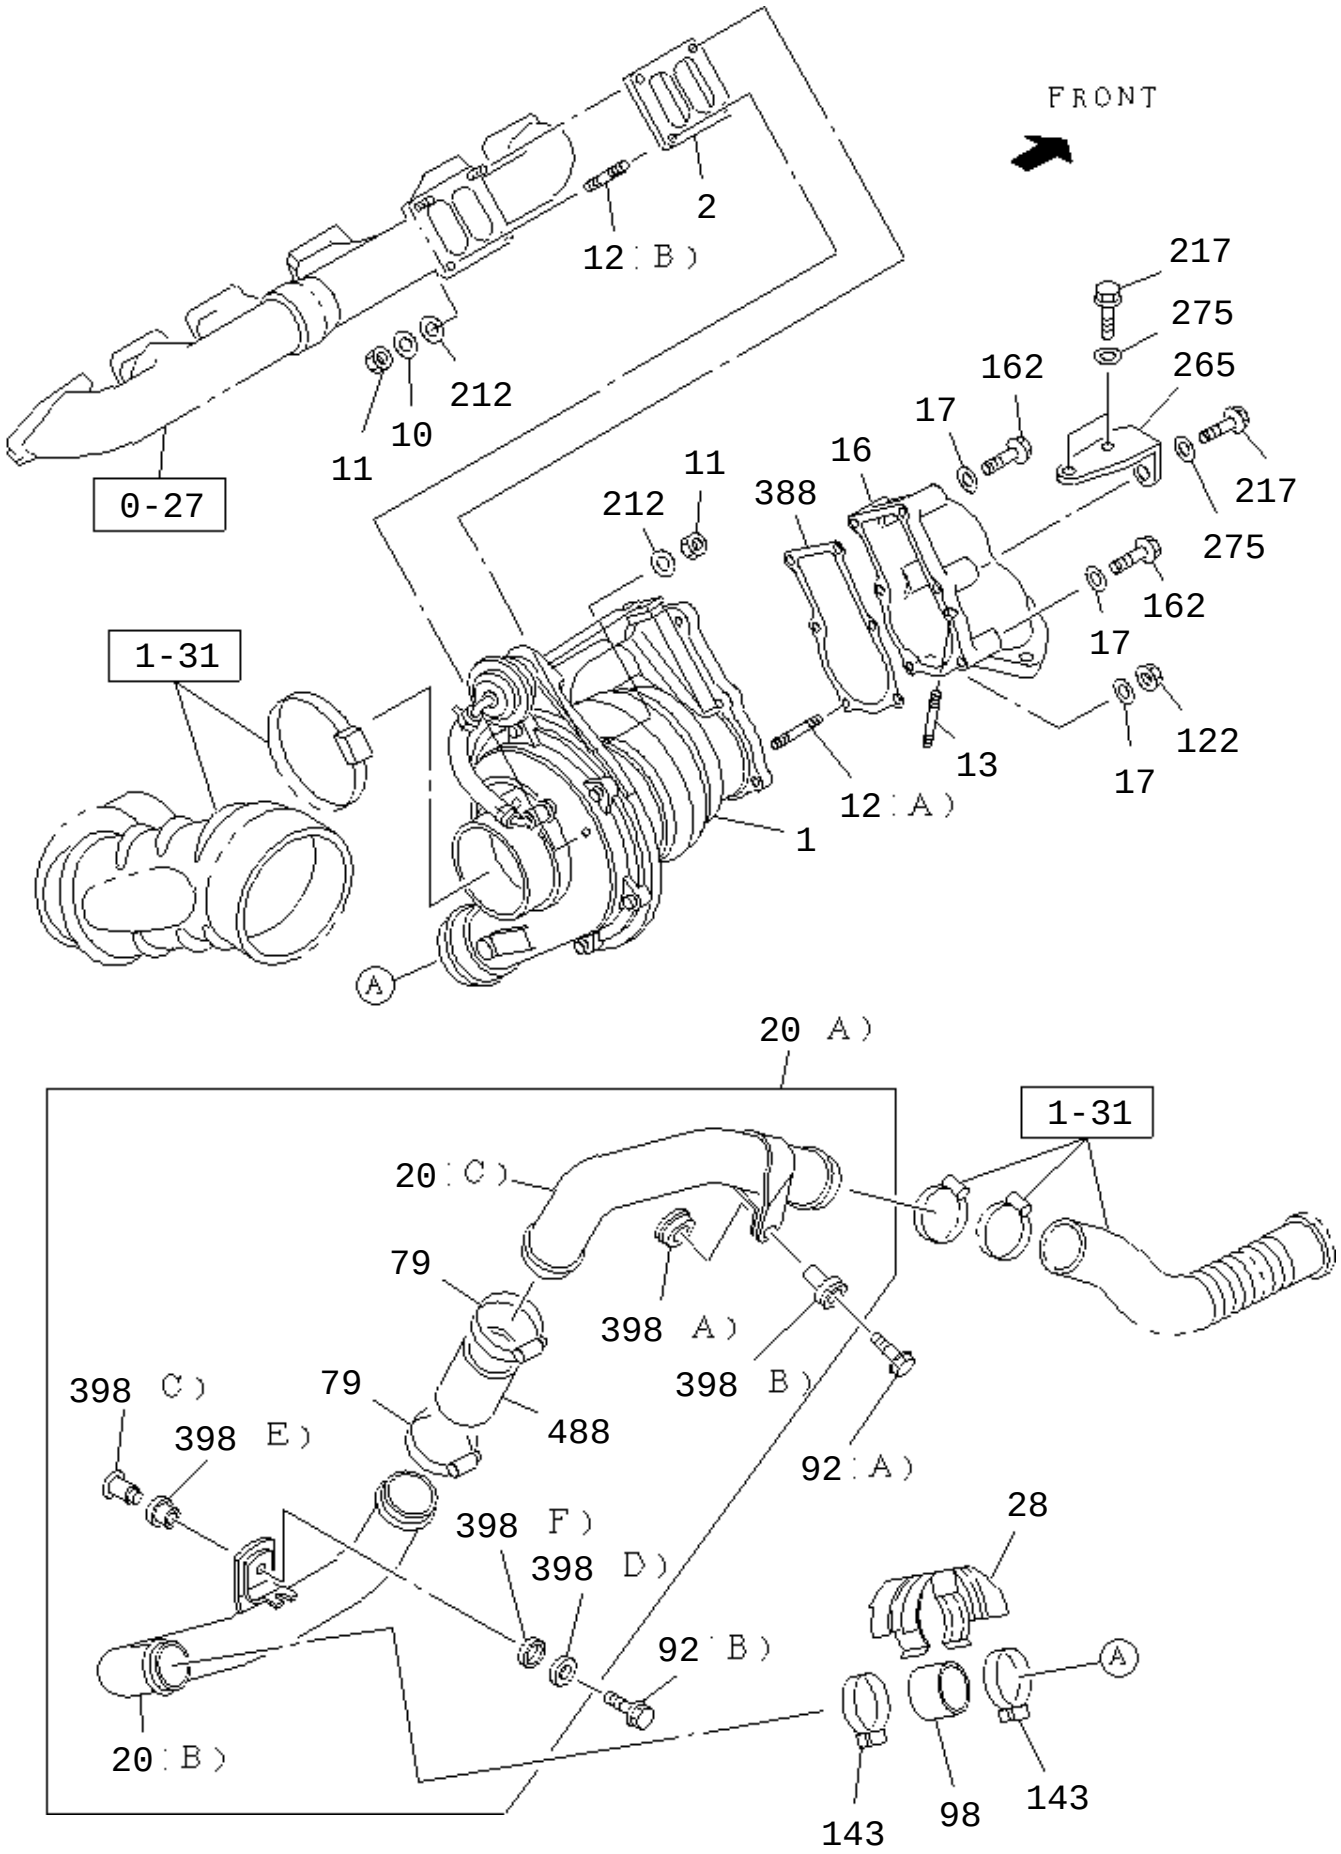

https://truckmanualshub.com/

WATER PIPING

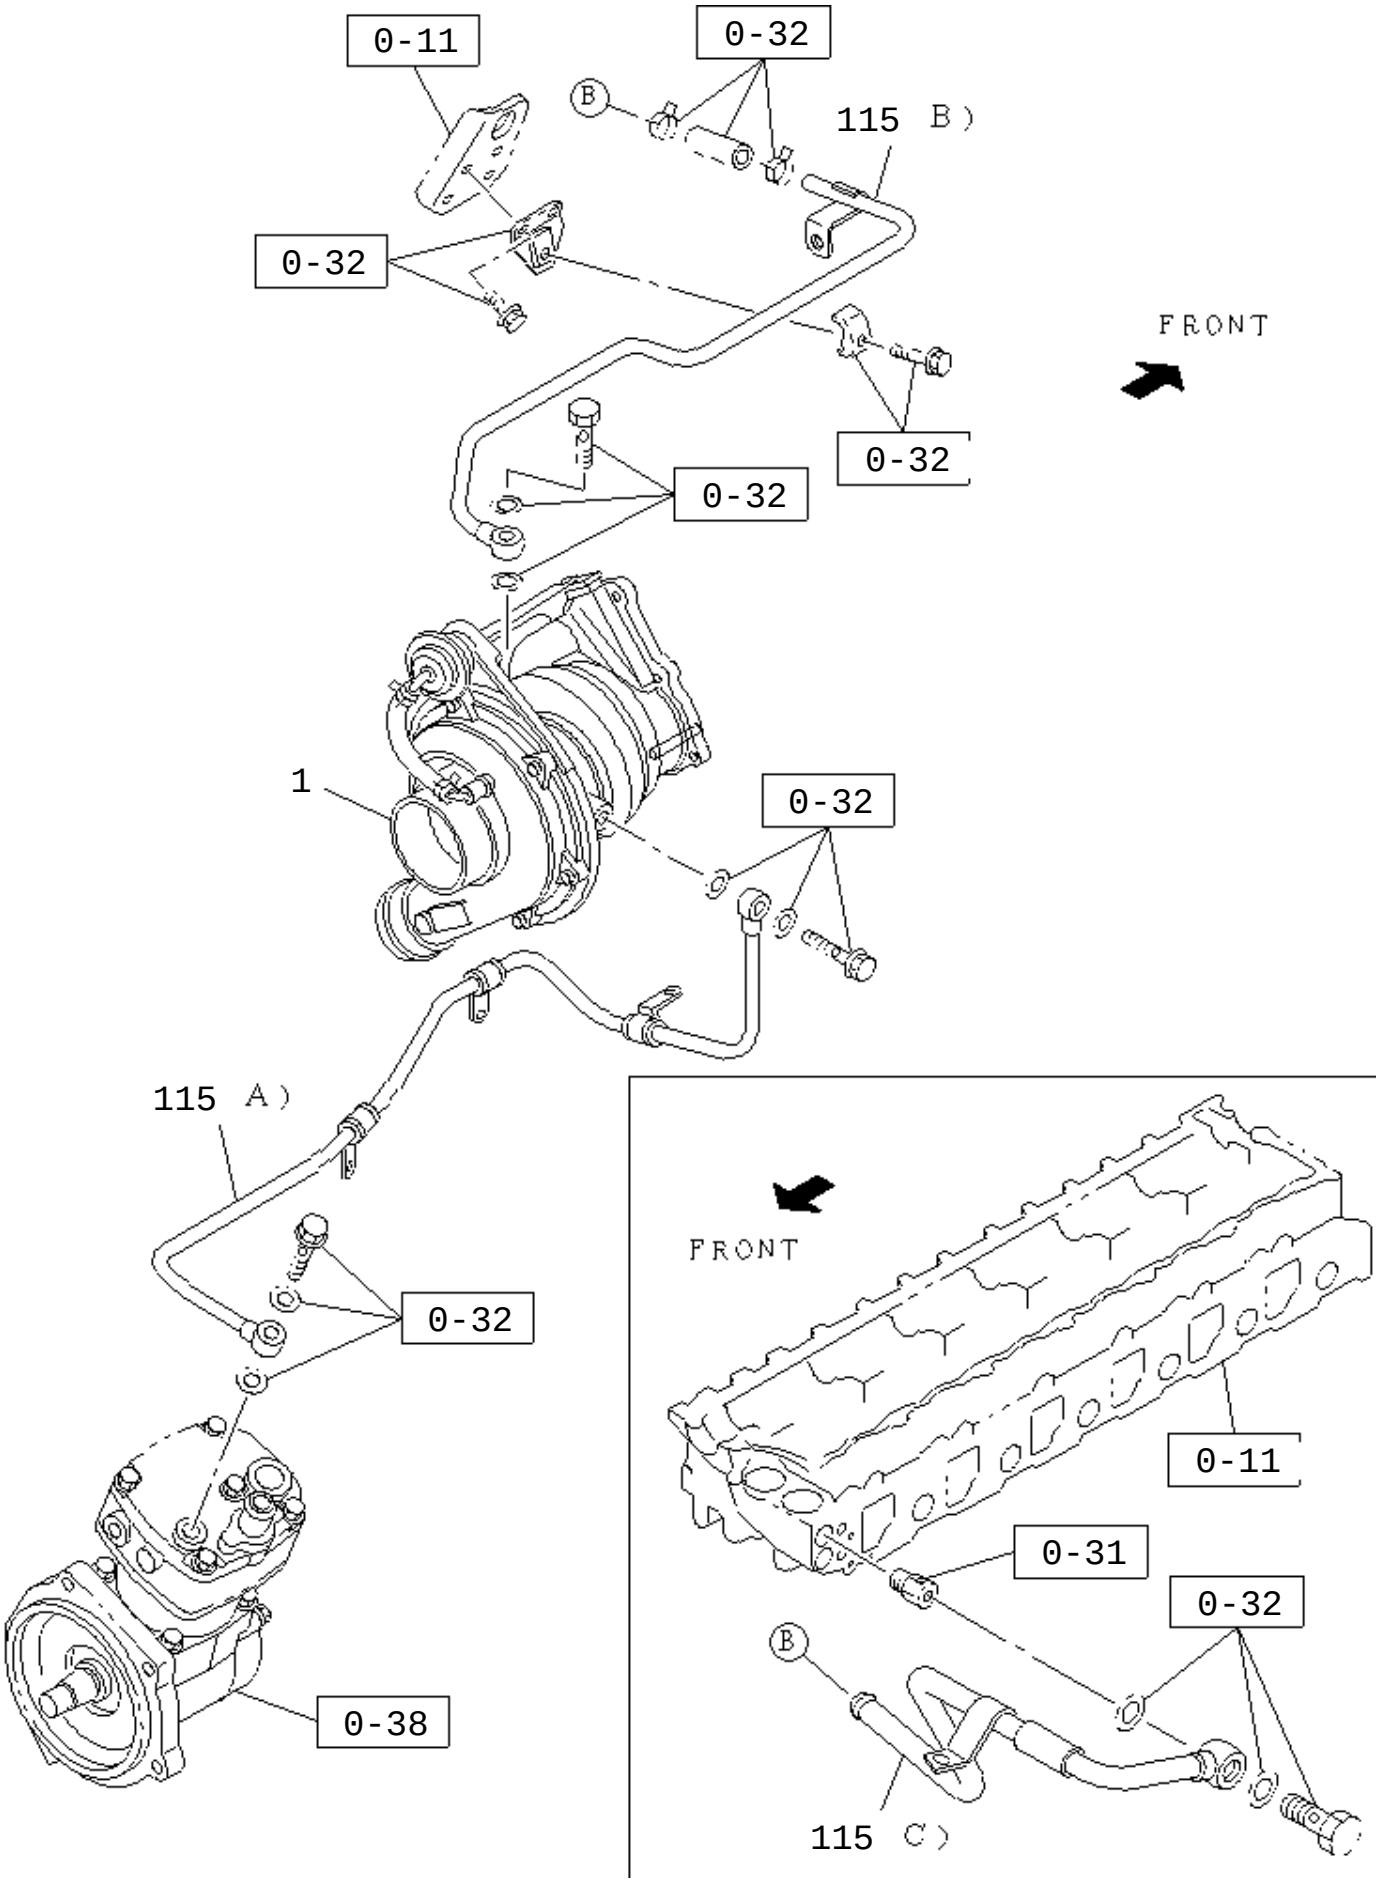


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		TURBOCHARGER ASM					SEE FIG-NO 0-37 FOR COMPONENT.
		8-98078-779-1		1312-	01	A	
2		GASKET; TURBOCHARGER TO EXH MANIF					ALSO INCLUDED IN GASKET SET(ENG. &
		8-94390-044-0		1312-	01	A	
10		WASHER; LK,TURBOCHARGER					
		1-09556-015-0		1312-	02	A	
							T=2.2
11		NUT; TURBOCHARGER					
		1-09420-005-0		1312-	04	A	
							M10
12		STUD; TURBOCHARGER					
		9-04130-825-0		1312-	01	A	
							(A)
		9-04731-080-0		1312-	02	A	
							(B)
13		STUD; EXH PIPE					
		8-94394-656-0		1312-	01	A	
							M12X103 L=123
16		ADAPTER; EXH PIPE					
		8-94395-767-0		1312-	01	A	
17		WASHER; PL,ADAPTER					
		5-09500-012-0		1312-	06	A	
							T=1.9
20		PIPE; INL,TURBOCHARGER OUT					
		8-97606-675-1		1312-	01	A	
							(B)
		8-97618-726-2		1312-1407	01	A	
							(A)
		8-98251-577-0		1408-	01	A	
							(A)
		8-97618-734-0		1312-	01	A	
							(C)
28		PROTECTOR; HEAT,HOSE,AIR DUCT					
		8-94393-182-0		1312-	01	A	
79		CLIP; RUBBER HOSE					
		1-09707-136-0		1312-	02	A	
							ID=58-79
92		BOLT; INL PIPE					
		0-28650-835-0		1312-	01	A	
							(B)
							M8X35 FLANGE
		0-28650-840-0		1312-	01	A	
							(A)
							M8X40 FLANGE
98		HOSE; RUBBER,TURBOCHARGER OUTLET					
		1-09360-797-1		1312-1407	01	A	
		8-98245-240-0		1408-	01	A	
115		PIPE; WATER,TURBOCHARGER OUT					
		8-94392-950-0		1312-	01	A	
							(B)
		8-94395-454-4		1312-	01	A	
							(C)
		8-97618-808-0		1312-	01	A	
							(A)
122		NUT; ADAPTER					
		1-09400-118-1		1312-	01	A	
							M8
143		CLIP; HOSE,TURBOCHARGER OUTLET					
		8-94126-771-0		1312-	02	A	
							ID=58-79
162		BOLT; ADAPTER					
		5-09000-275-0		1312-	05	A	
							M8X57
212		WASHER; PL,TURBOCHARGER					
		1-09503-033-1		1312-	04	A	
							ID=10
217		BOLT; BRKT					
		8-94394-324-0		1312-	03	A	
							M12X30
265		BRACKET; EXH PIPE					
		8-94395-764-2		1312-	01	A	
275		WASHER; PL					
		1-09503-008-0		1312-	03	A	
							ID=12.2
388		GASKET; EXH PIPE					ALSO INCLUDED IN GASKET SET(ENG. &


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
388		8-94394-248-2		1312-	01	A	
398		MOUNTING					
		8-94160-177-0		1312-	01	A	(F)
		8-94390-551-1		1312-	01	A	(C)
		8-94394-504-0		1312-	01	A	(D)
		8-94394-529-0		1312-	01	A	(E)
		8-94395-766-0		1312-	01	A	(A)
		8-97105-689-6		1312-	01	A	(B) OD=23
488		HOSE; RUBBER					
		1-09360-797-1		1312-1407	01	A	
		8-98245-240-0		1408-	01	A	
0-27		Move to 0-27					
1-31		Move to 1-31					
0-11		Move to 0-11					
0-31		Move to 0-31					
0-32		Move to 0-32					
0-38		Move to 0-38					

https://truckmanualshub.com/

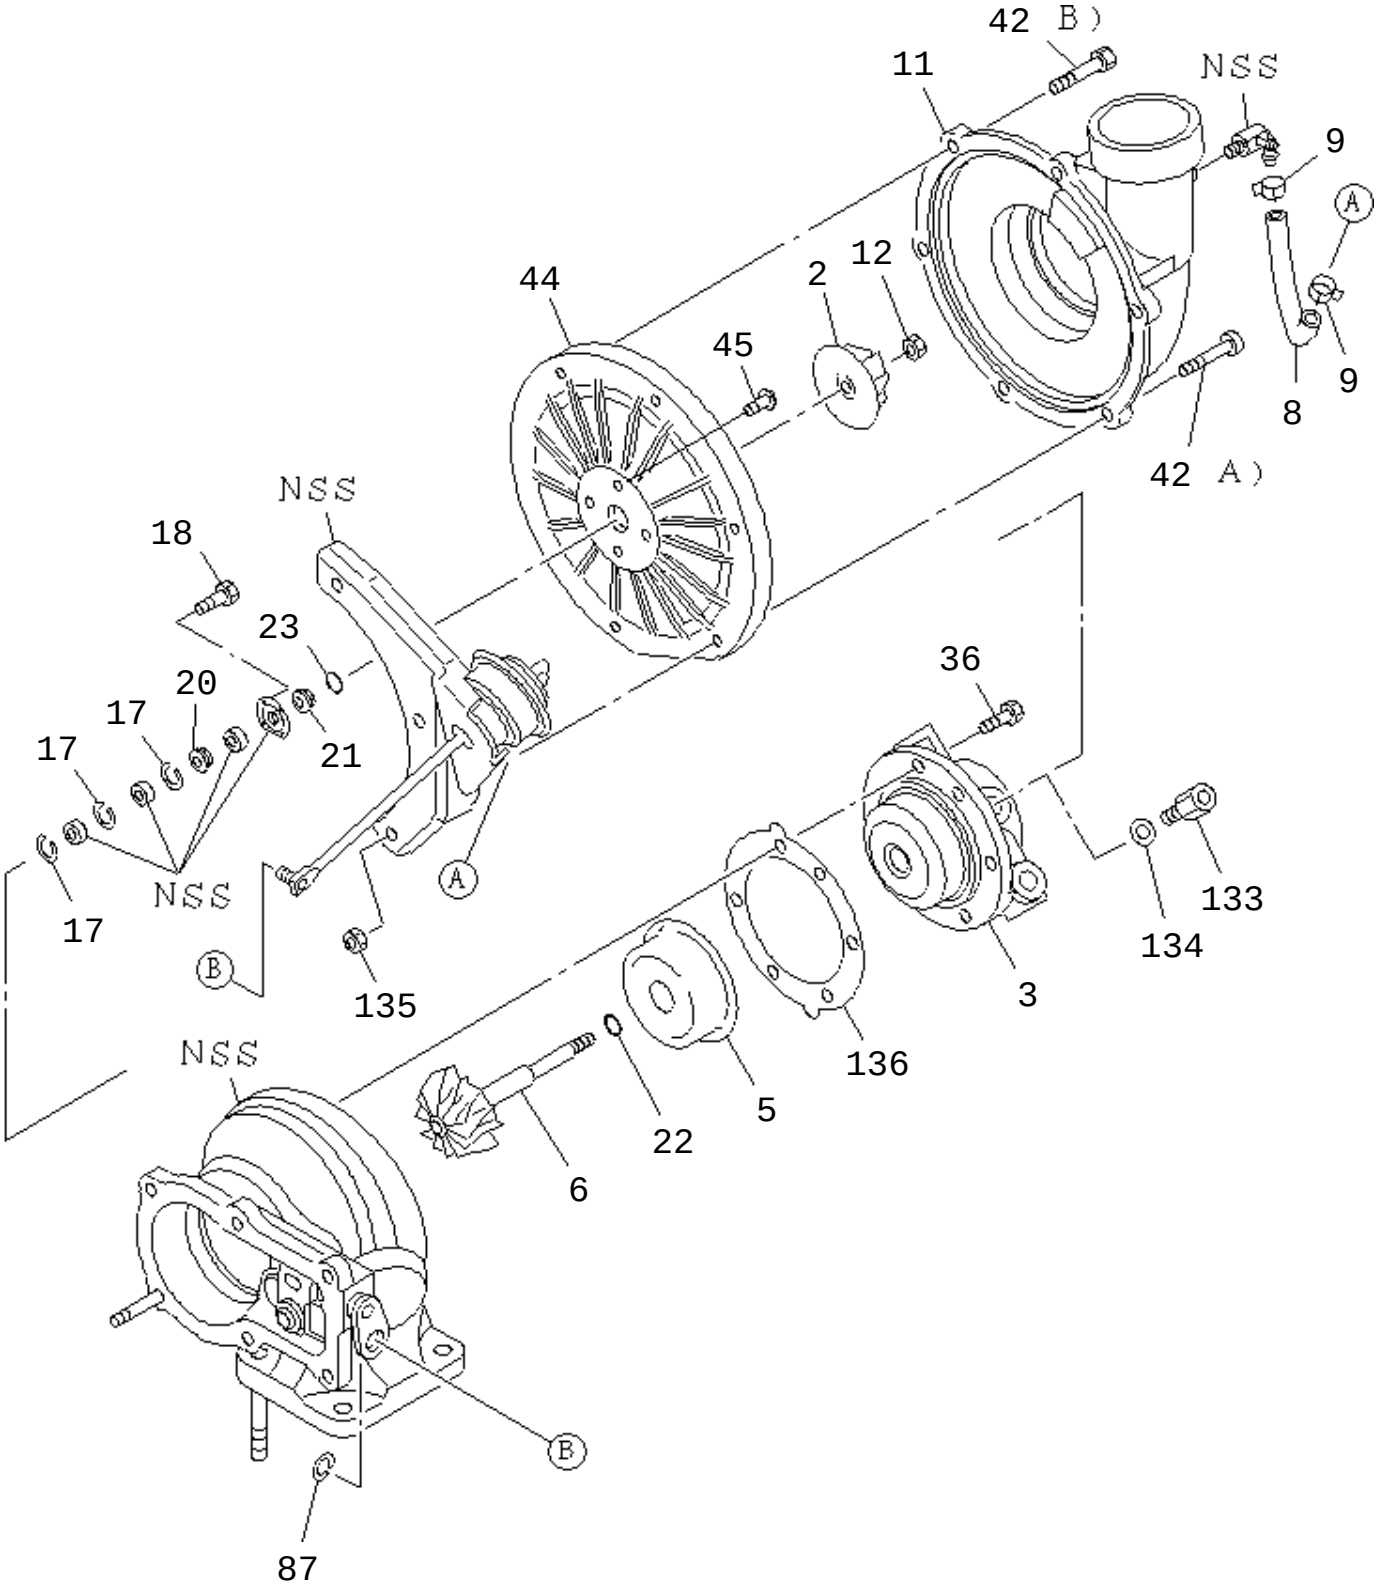

https://truckmanualshub.com/

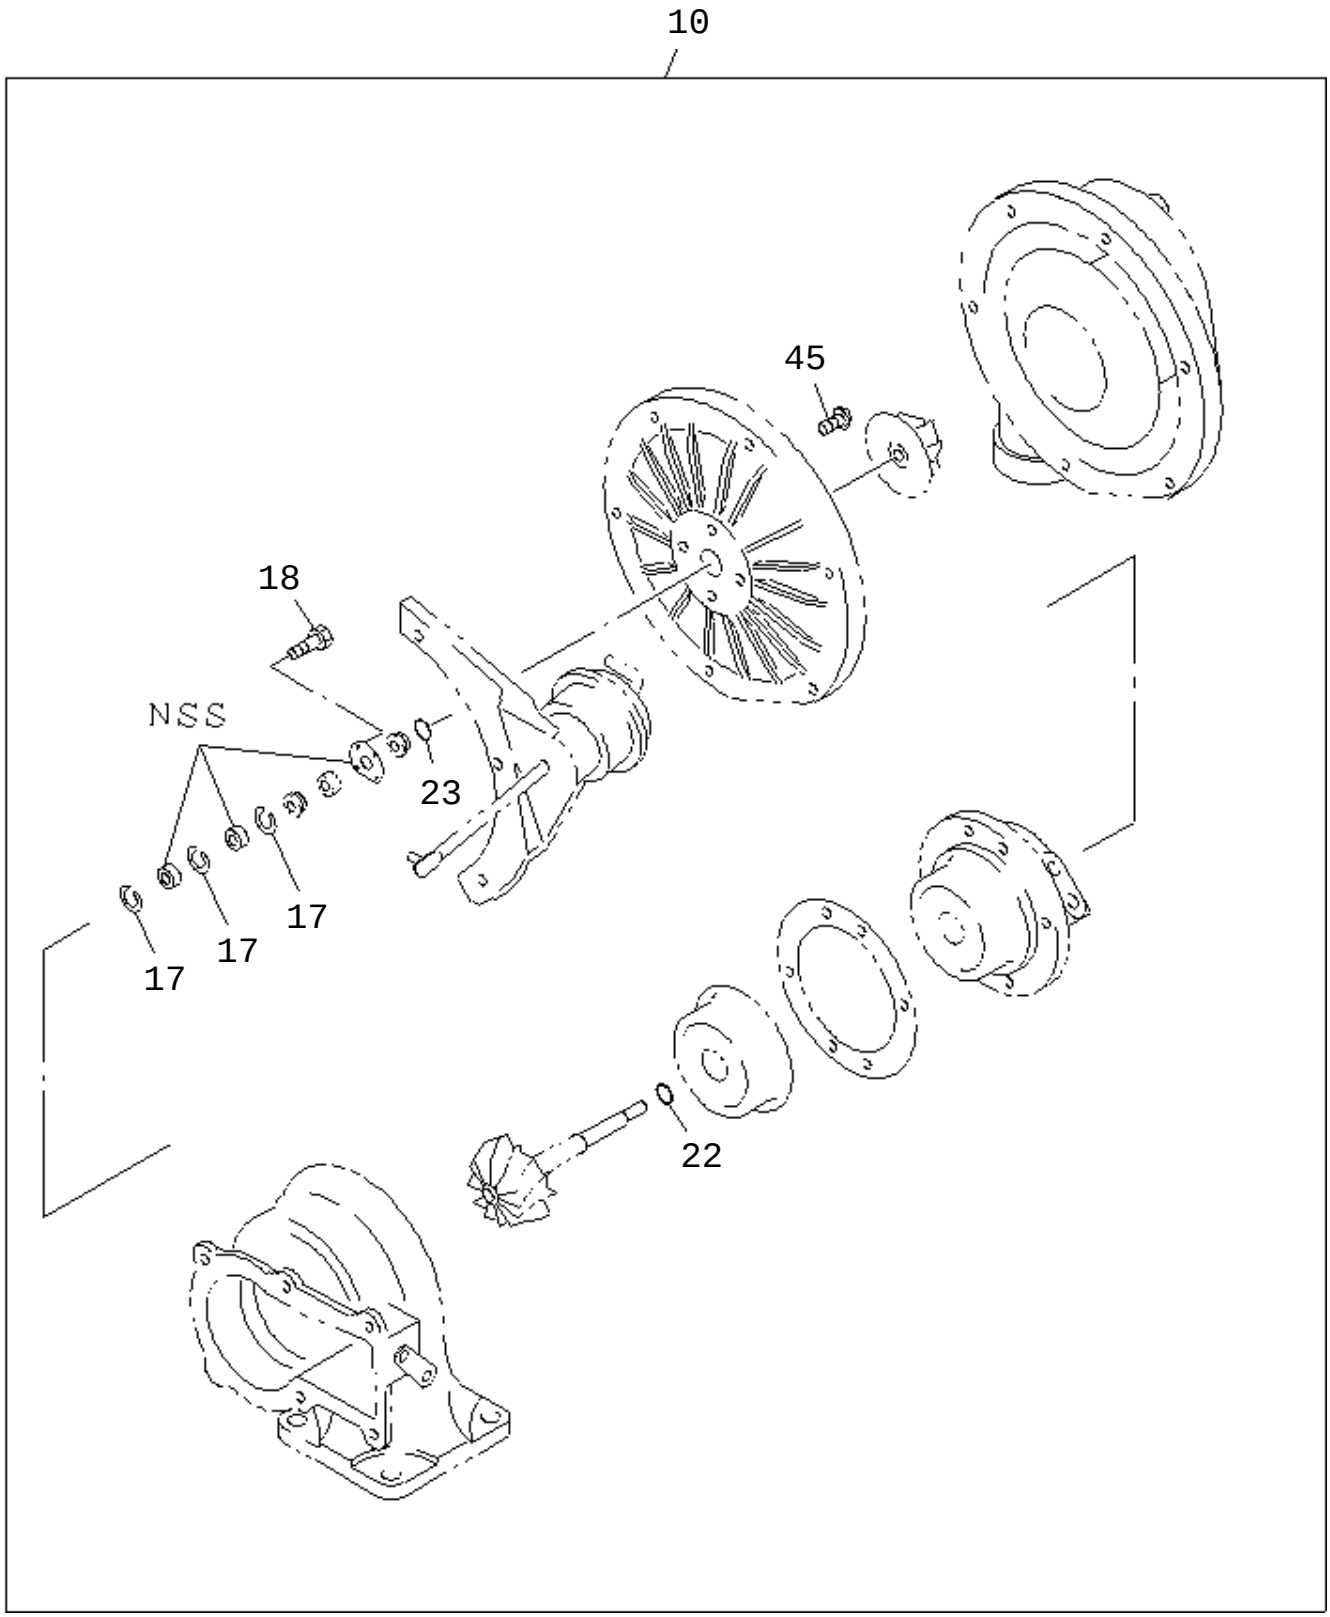

https://truckmanualshub.com/


0-37 TURBOCHARGER

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	RESTRICTION/REMARKS A 8980787791
2		IMPELLER; TURBOCHARGER				
		8-97603-425-0			01	
3		HOUSING; BRG,TURBOCHARGER				
		1-14411-054-0			01	
5		PROTECTOR; HEAT,TURBOCHARGER				
		1-14425-023-0			01	
6		SHAFT; TURBINE,TURBOCHARGER				
		1-14450-048-0			01	
8		HOSE; ACTUATOR TO BLOWER HSG,TC				
		1-14469-036-0			01	
9		CLIP; ACTUATOR HOSE,TURBOCHARGER				
		1-14469-035-0			02	
10		REPAIR KIT; TURBOCHARGER				
		1-14453-075-0			01	
11		HOUSING ASM; TURBOCHARGER				
		8-98154-221-0			01	
12		NUT; LK,TURBINE SHAFT TO IMPELLER,TC				
		1-09400-041-0			01	
17		RING; JOURNAL BRG,TURBOCHARGER				
		1-14455-038-0			03	
18		SCREW; THRUST BRG,TURBOCHARGER				
		1-09100-027-0			03	
20		BUSHING; THRUST,TURBOCHARGER				
		1-14453-078-0			01	
21		THROWER; OIL,TURBOCHARGER				
		1-14455-039-0			01	
22		RING; SEAL,TURBINE SIDE,TURBOCHARGER				
		1-14453-076-0			01	
23		RING; SEAL,BLOWER SIDE,TURBOCHARGER				
		1-14453-077-0			01	
36		BOLT; LK PLATE,TURBINE HSG,TURBOCHARGE				
		8-97600-259-0			06	
42		BOLT; LK PLATE,BLOWER HSG,TURBOCHARGER				
		1-09100-030-0			03	(A)
		1-09100-031-0			03	(B)
44		PLATE; SEAL,TURBOCHARGER				
		1-14425-024-0			01	
45		SCREW; SEAL PLATE,TURBOCHARGER				
		1-09100-028-0			04	
87		RING; ACTUATOR,TURBOCHARGER				
		1-14469-037-0			01	
133		ADAPTER; OIL PIPE				
		1-14469-034-0			01	
134		GASKET; ADAPTER				
		1-09630-084-0			01	ID=12.2
135		NUT; BLOWER HOUSING				
		1-09400-127-0			03	
136		GASKET; TURBINE HSG,TURBOCHARGER				
		8-97600-289-0			01	


https://truckmanualshub.com/

0-38 AIR COMPRESSOR PIPING; ENGINE SIDE

EXC. POWER TAKE OFF-FLYWHEEL

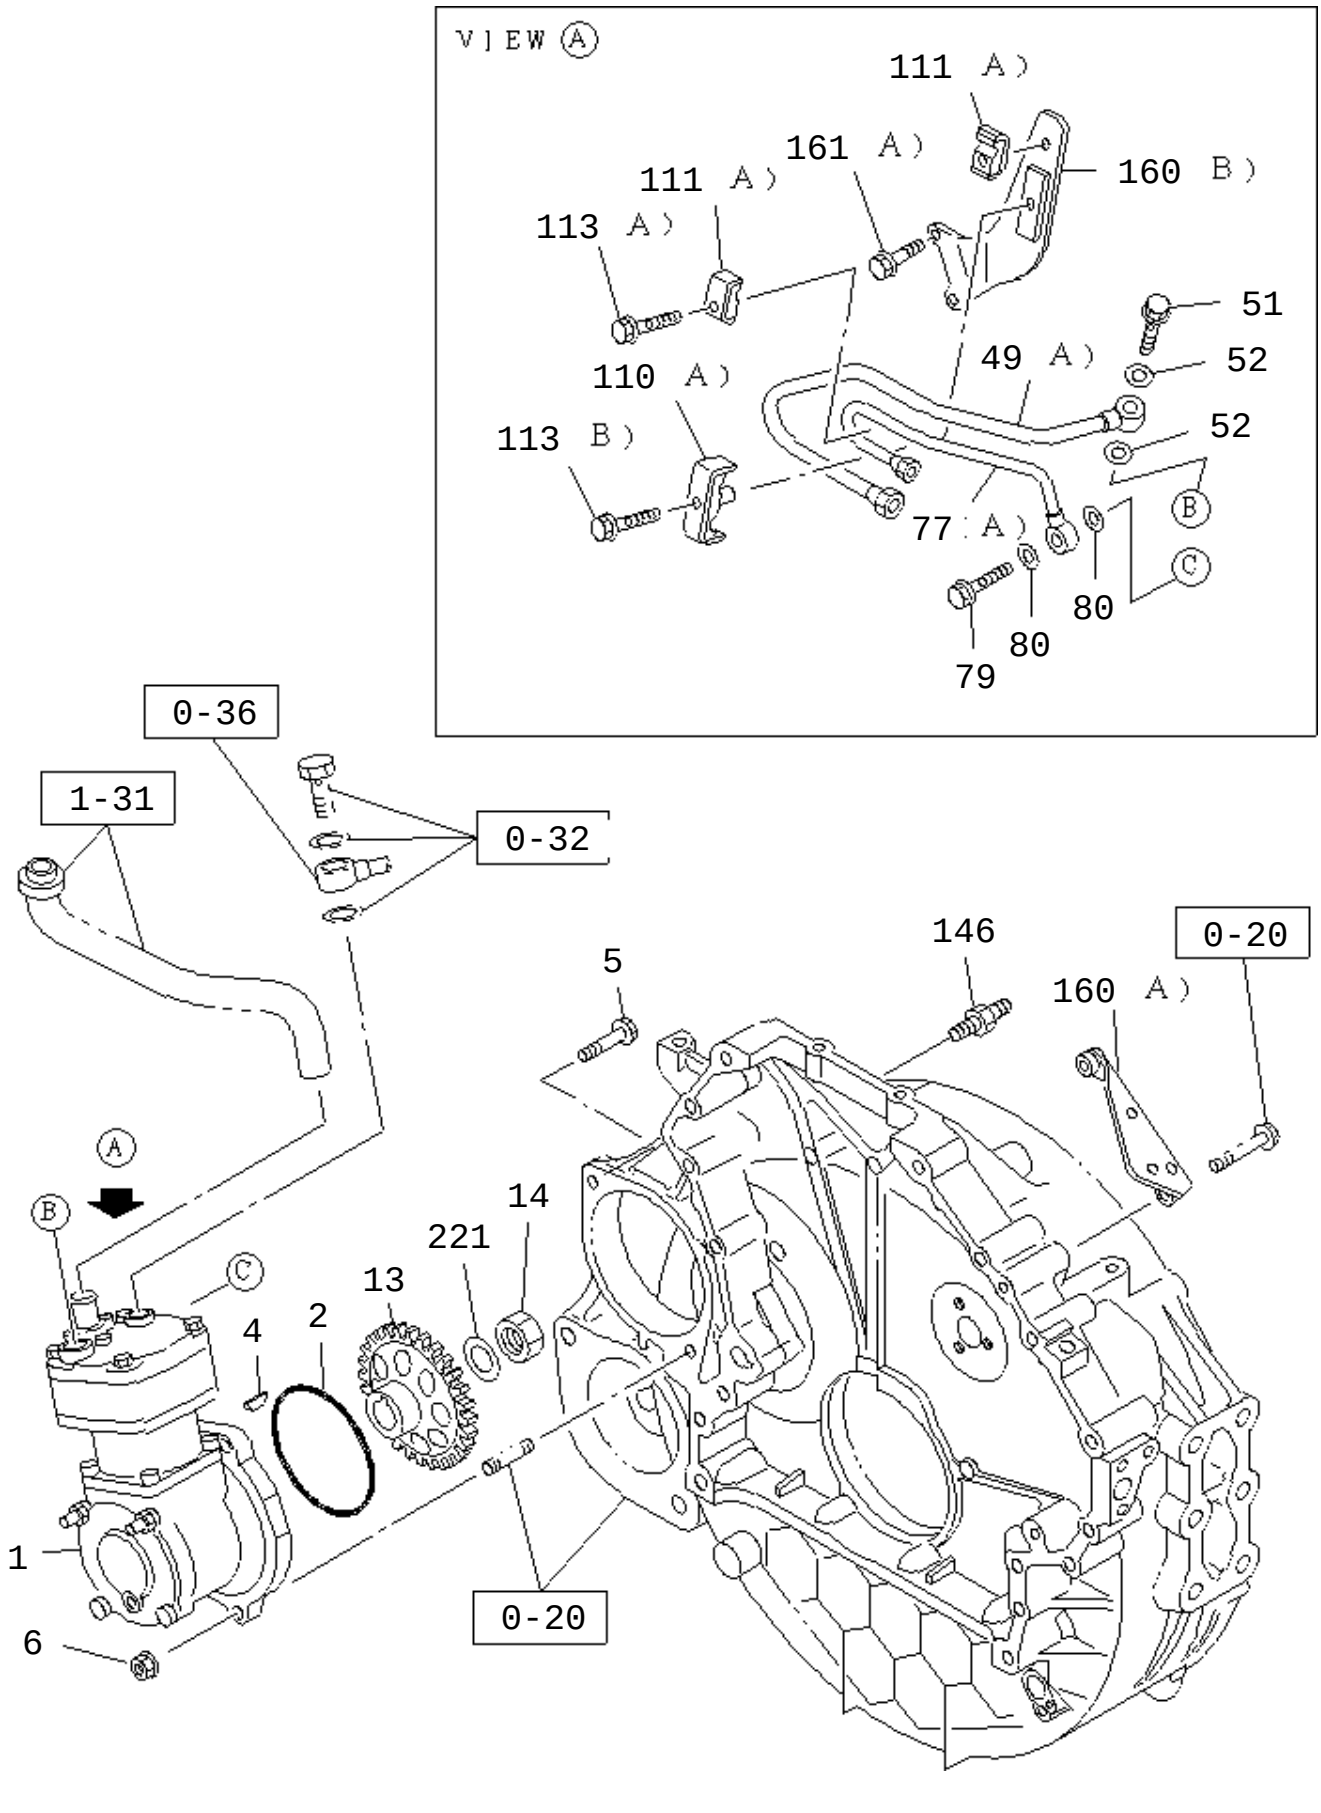

https://truckmanualshub.com/

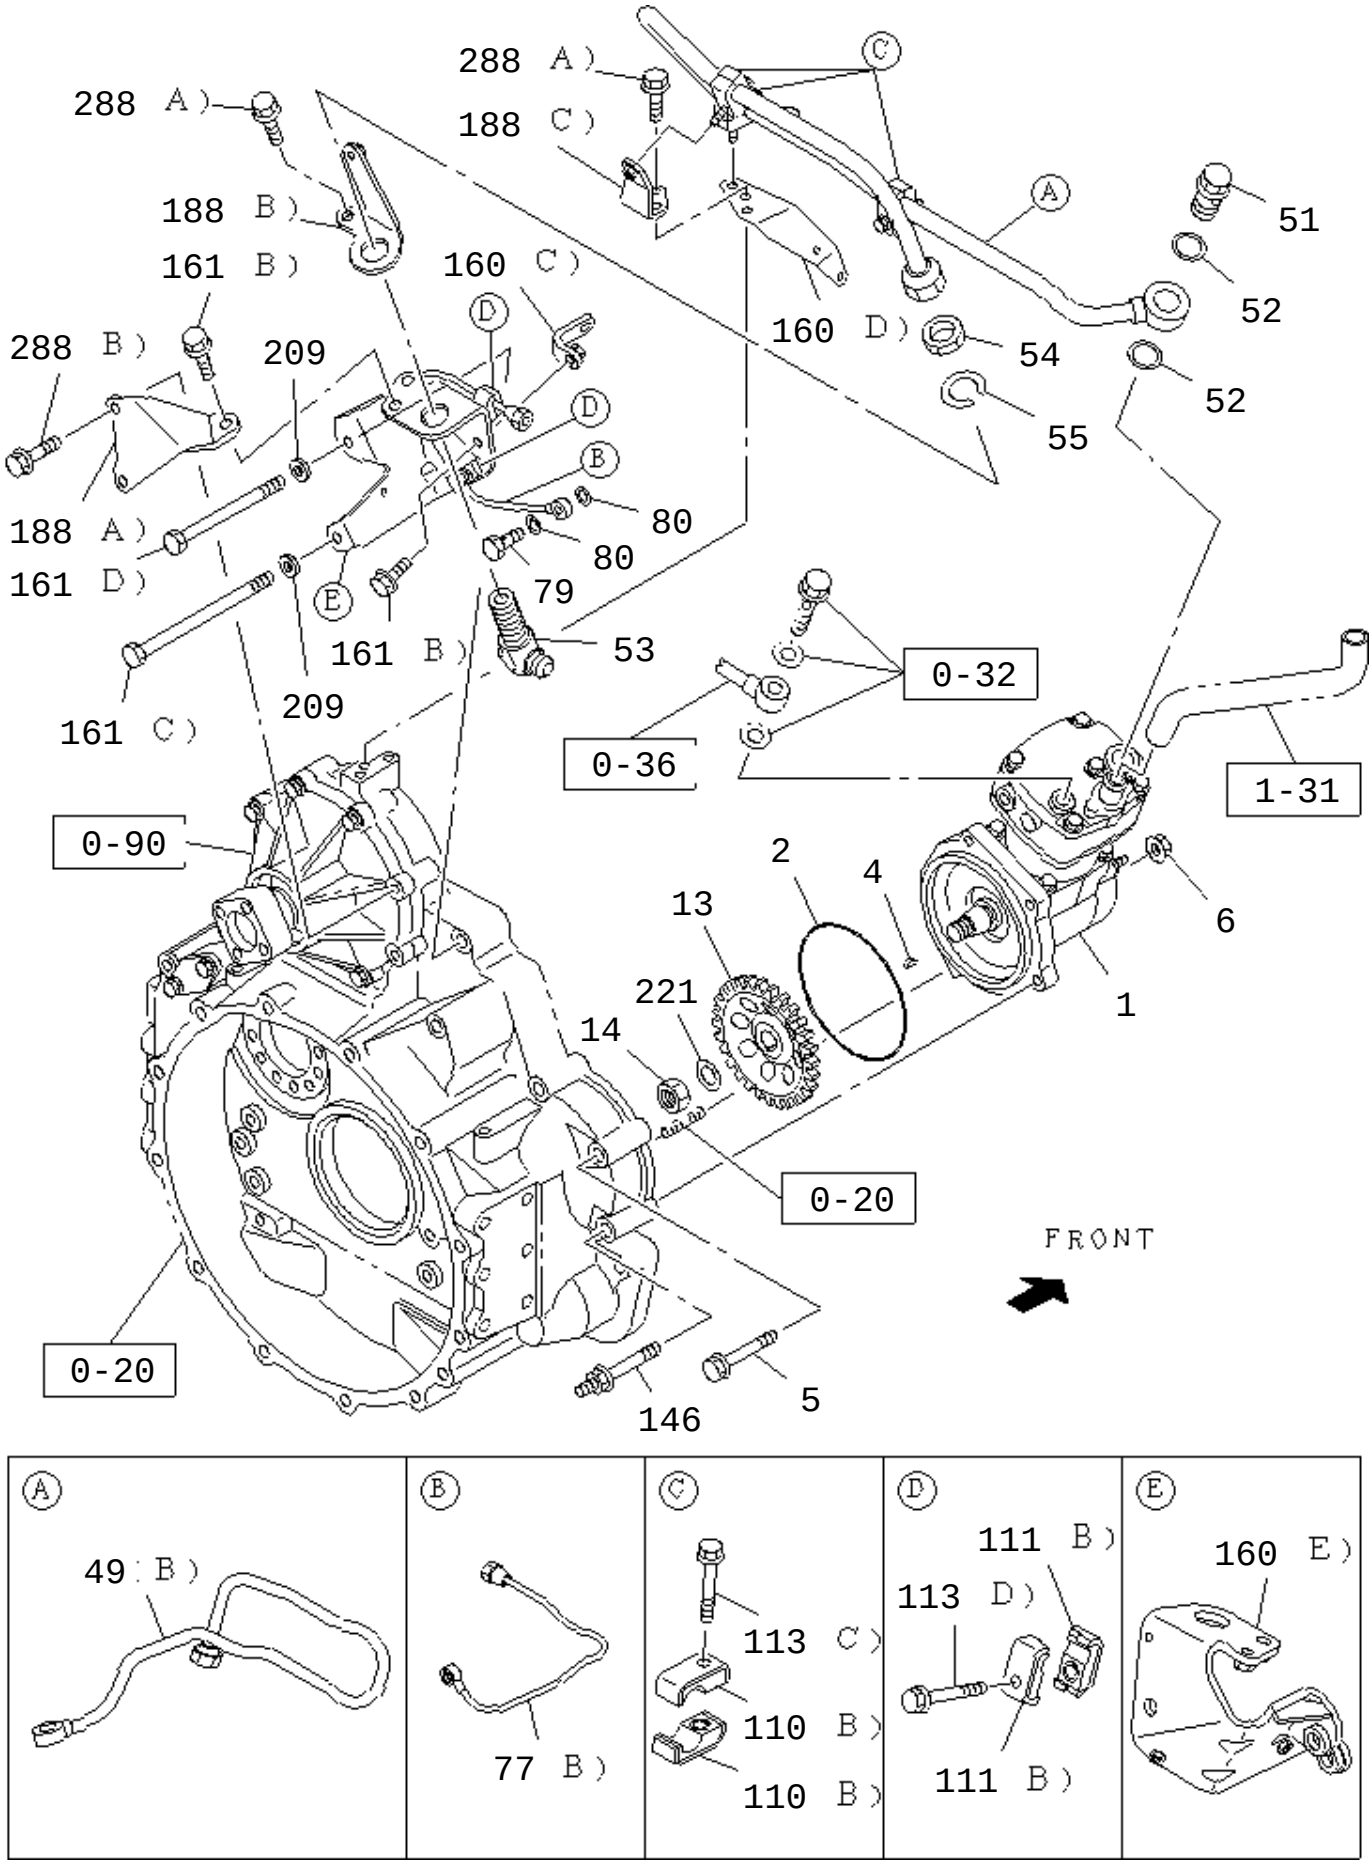

https://truckmanualshub.com/

0-38 AIR COMPRESSOR PIPING; ENGINE SIDE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		COMPRESSOR ASM; AIR					SEE FIG-NO 0-39 FOR COMPONENT.
		8-98187-299-0		1312-	01	A	
2		GASKET; AIR CMPR					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09623-570-0		1312-	01	A	
							ID=162.6
4		KEY; INJ PUMP GEAR					
		9-08055-516-0		1312-	01	A	
5		BOLT; AIR CMPR FIX					
		0-28151-270-0		1312-	02	A	
							M12X70 FLANGE
6		NUT; AIR CMPR					
		0-91180-212-0		1312-	01	A	
							M12 FLANGE
13		GEAR; AIR CMPR DRIVE					
		8-94394-511-4		1312-	01	A	
							Z=49
14		NUT; GEAR					
		0-91110-520-0		1312-	01	A	
							M20
49		PIPE; AIR,CHARGE					
		8-98248-811-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-97618-722-0		1312-1401	01	A	(A)
		8-97618-722-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
51		BOLT; EYE,AIR PIPE TO CMPR					
		1-09675-175-2		1312-	01	A	
							M24X39
52		GASKET; EYE BOLT,AIR PIPE					ALSO INCLUDED IN GASKET SET(ENGINE).
		9-09571-424-0		1312-	02	A	
							ID=24.5 OD=32
53		UNION; CHARGE PIPE					
		8-98008-887-2		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
54		NUT; PIPE UNION					
		8-98049-390-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
55		WASHER; LK,PIPE UNION					
		0-91510-527-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) ID=27.5
77		PIPE; AIR,GOV					
		8-98249-512-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-97618-724-0		1312-1401	01	A	(A)
		8-97618-724-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
79		BOLT; EYE,AIR PIPE TO CMPR					
		8-98037-824-0		1312-	01	A	
							M10X23
80		GASKET; AIR PIPE TO CMPR					ALSO INCLUDED IN GASKET SET(ENG. & HEAD)
		1-09630-083-0		1312-	02	A	
							ID=10.2 OD=15.2
110		CLIP; AIR PIPE					
		1-09701-284-0		1402-	06	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-94393-037-0		1312-1401	01	A	(A)
		8-94393-037-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
111		CLIP; AIR PIPE					
		8-98249-713-1		1402-	04	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98029-953-1		1312-1401	02	A	(A)
		8-98029-953-1		1402-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
113		BOLT; CLIP,AIR PIPE					
		0-28050-635-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (D) M6X35 FLANGE
		0-28050-845-0		1402-	03	A	POWER TAKE OFF-FLYWHEEL(6SZ) (C) M8X45 FLANGE

https://truckmanualshub.com/

0-38 AIR COMPRESSOR PIPING; ENGINE SIDE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
113		0-28050-640-0		1312-1401	01	A	(B) M6X40 FLANGE
		0-28050-640-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) M6X40 FLANGE
		0-28650-640-0		1312-1401	01	A	(A) M6X40 FLANGE
		0-28650-640-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M6X40 FLANGE
146		STUD; AIR CMPR					
		1-09049-038-1		1312-	01	A	M10X16,M12X70 L=97.7
160		BRACKET; AIR PIPE					
		8-98052-613-1		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (C)
		8-98052-614-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (D)
		8-98248-812-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (E)
		8-97614-182-2		1312-1401	01	A	(A)
		8-97614-182-2		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		8-98074-255-0		1312-1401	01	A	(B)
		8-98074-255-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
161		BOLT; BRKT,AIR PIPE					
		0-28151-030-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B) M10X30 FLANGE
		8-94393-483-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (C) M12X185
		8-94399-252-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (D) M12X128
		0-28050-816-0		1312-1401	02	A	(A) M8X16 FLANGE
		0-28050-816-0		1402-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X16 FLANGE
188		STAY; AIR PIPE					
		8-98052-615-1		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		8-98053-882-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98053-883-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (C)
209		WASHER; PL					
		8-94393-140-1		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) ID=12.5 OD=22
221		WASHER; PL,GEAR					
		0-91610-520-0		1312-	01	A	ID=21
288		BOLT; STAY FIX					
		0-28050-820-0		1402-	03	A	POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X20 FLANGE
		0-28151-045-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B) M10X45 FLANGE
0-20		Move to 0-20					
0-32		Move to 0-32					
0-36		Move to 0-36					
1-31		Move to 1-31					
0-90		Move to 0-90					

https://truckmanualshub.com/

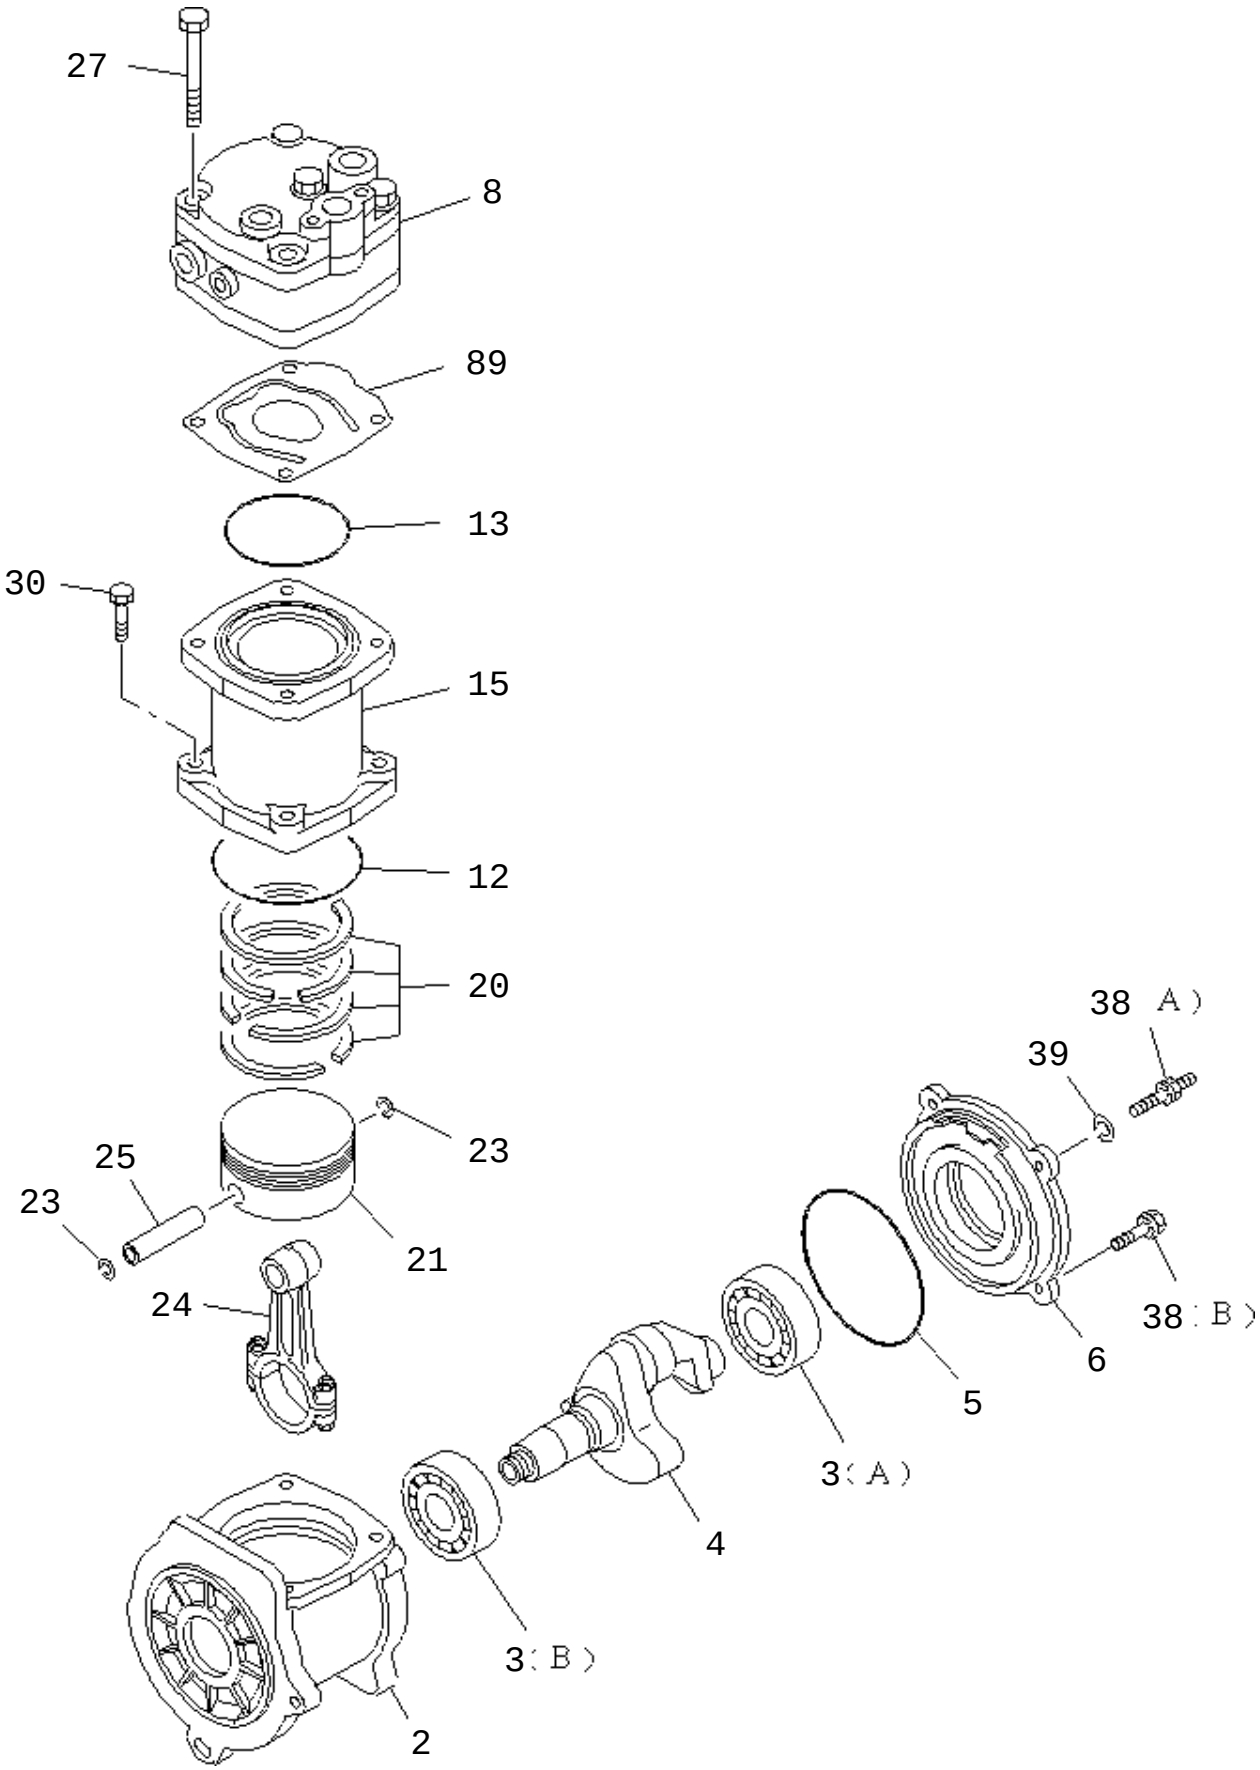


https://truckmanualshub.com/


0-39 AIR COMPRESSOR; BRAKE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
2		CRANKCASE; AIR CMPR 1-19151-274-0		1312-	01	A	
3		BEARING; AIR CMPR 9-00006-206-0		1312-	01	A	(A)
		9-00090-152-0		1312-	01	A	(B)
4		CRANKSHAFT; AIR CMPR 1-19171-096-0		1312-	01	A	
5		GASKET; AIR CMPR 8-98192-460-0		1312-	01	A	
6		COVER ASM; BRG,AIR CMPR 1-19156-039-0		1312-	01	A	
8		HEAD ASM; CYL,AIR CMPR 8-98167-014-0		1312-	01	A	
12		GASKET; AIR CMPR 8-98185-684-0		1312-	01	A	
13		GASKET; AIR CMPR 8-98048-640-0		1312-	01	A	
15		CYLINDER; AIR CMPR 8-98038-668-0		1312-	01	A	
20		RING KIT; PISTON,AIR CMPR 1-19163-058-0		1312-	01	A	
21		PISTON; AIR CMPR 1-19161-027-0		1312-	01	A	
23		RING; SNAP,PISTON,AIR CMPR 1-19169-004-0		1312-	02	A	
24		ROD ASM; CONN,AIR CMPR 1-19173-010-0		1312-	01	A	
25		PIN; PISTON,AIR CMPR 1-19167-003-0		1312-	01	A	
27		BOLT; HD 8-98167-018-0		1312-	04	A	M10X75
30		BOLT; CYL TO CRANKCASE 8-98038-763-0		1312-	04	A	M10X25
38		BOLT; COVER FIX 8-97617-894-0		1312-	02	A	(A)
		8-97617-895-0		1312-	02	A	(B) M8X20
39		WASHER; LK,COVER FIX 8-97617-893-0		1312-	02	A	
89		VALVE; SUCTION 1-19119-045-0		1312-	01	A	


https://truckmanualshub.com/

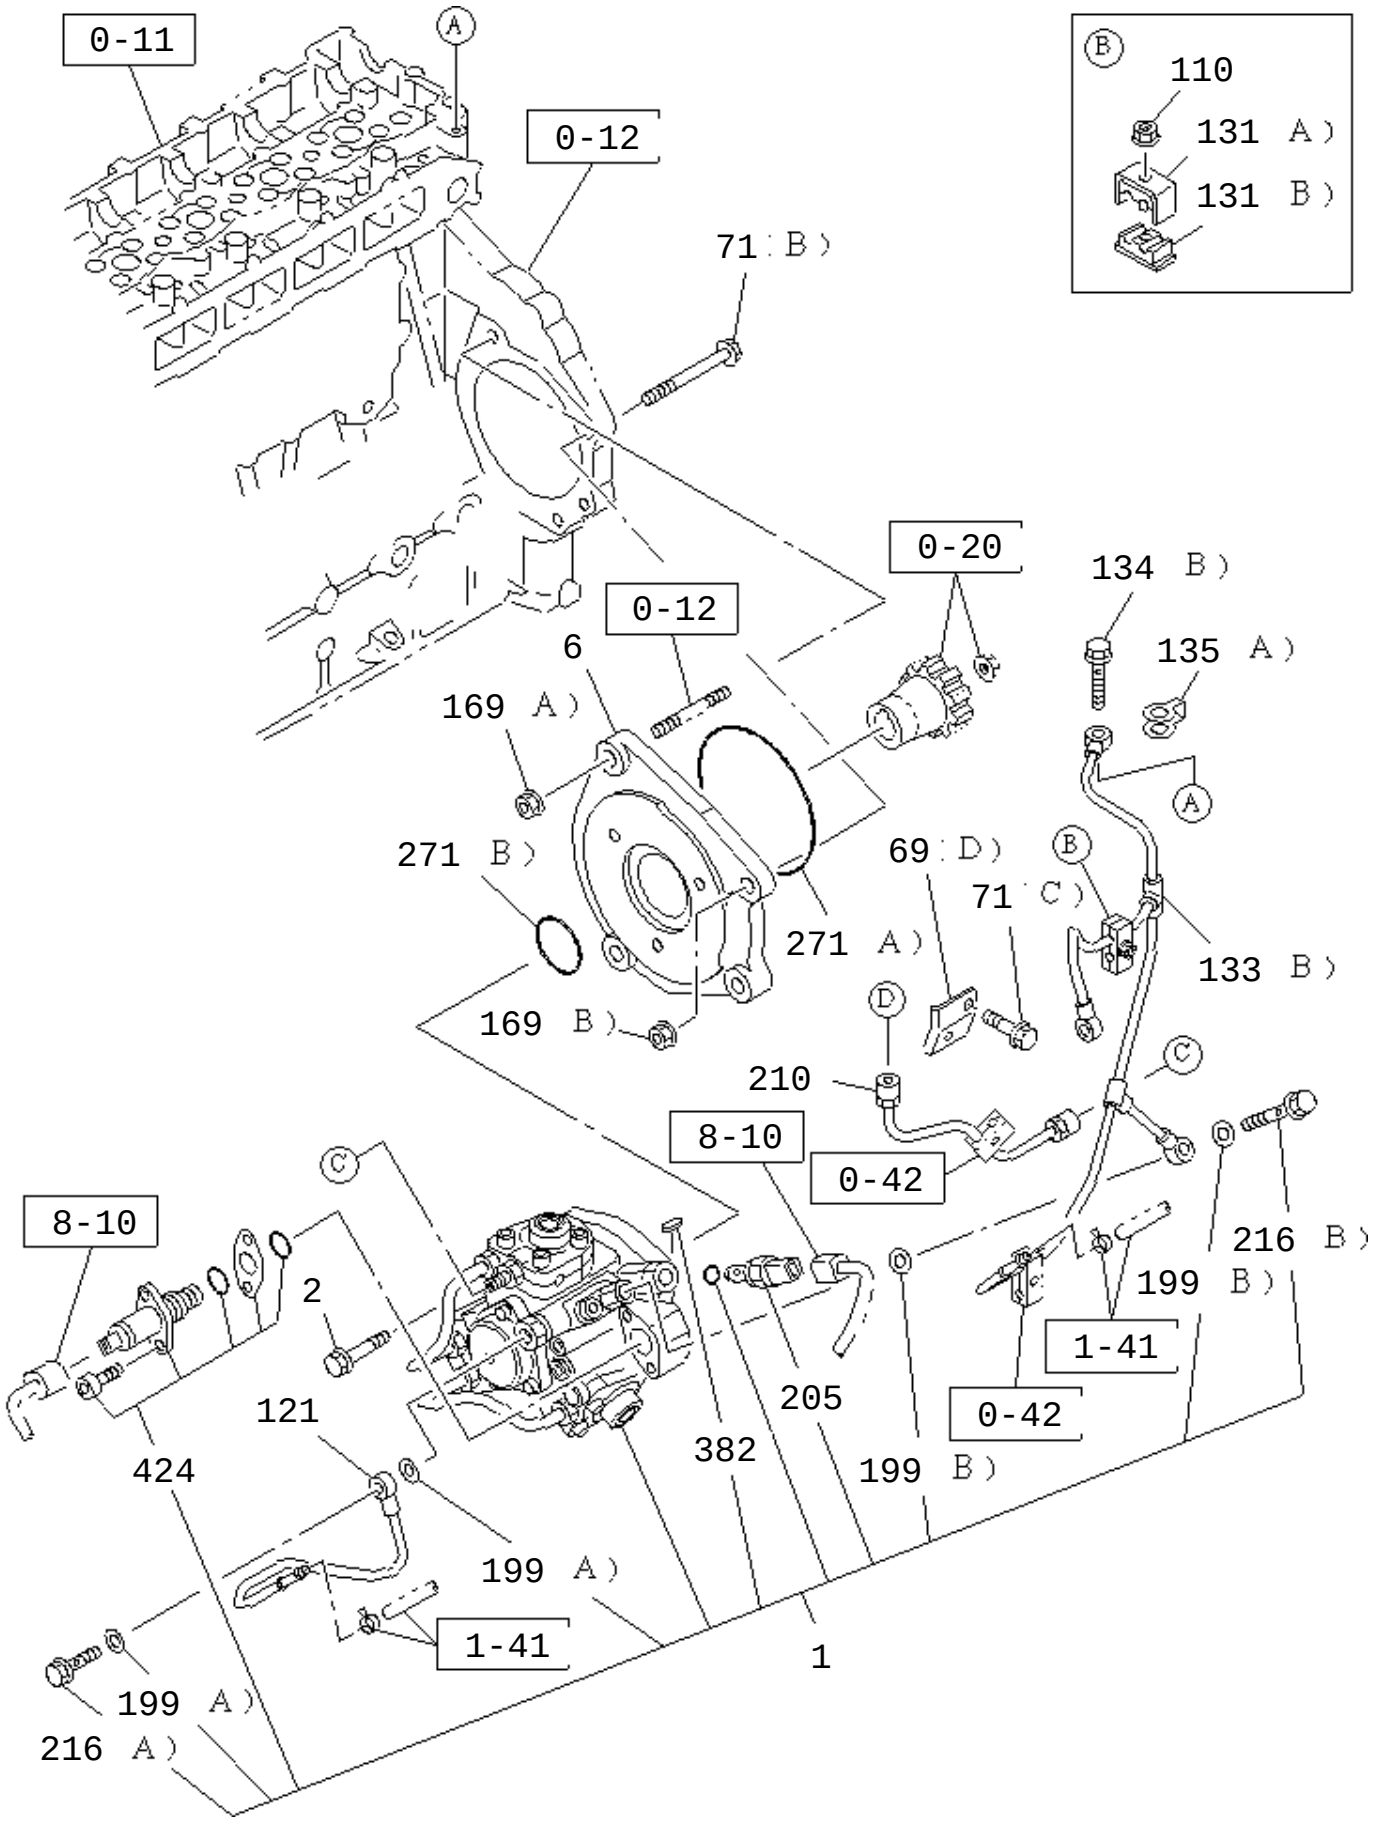

https://truckmanualshub.com/

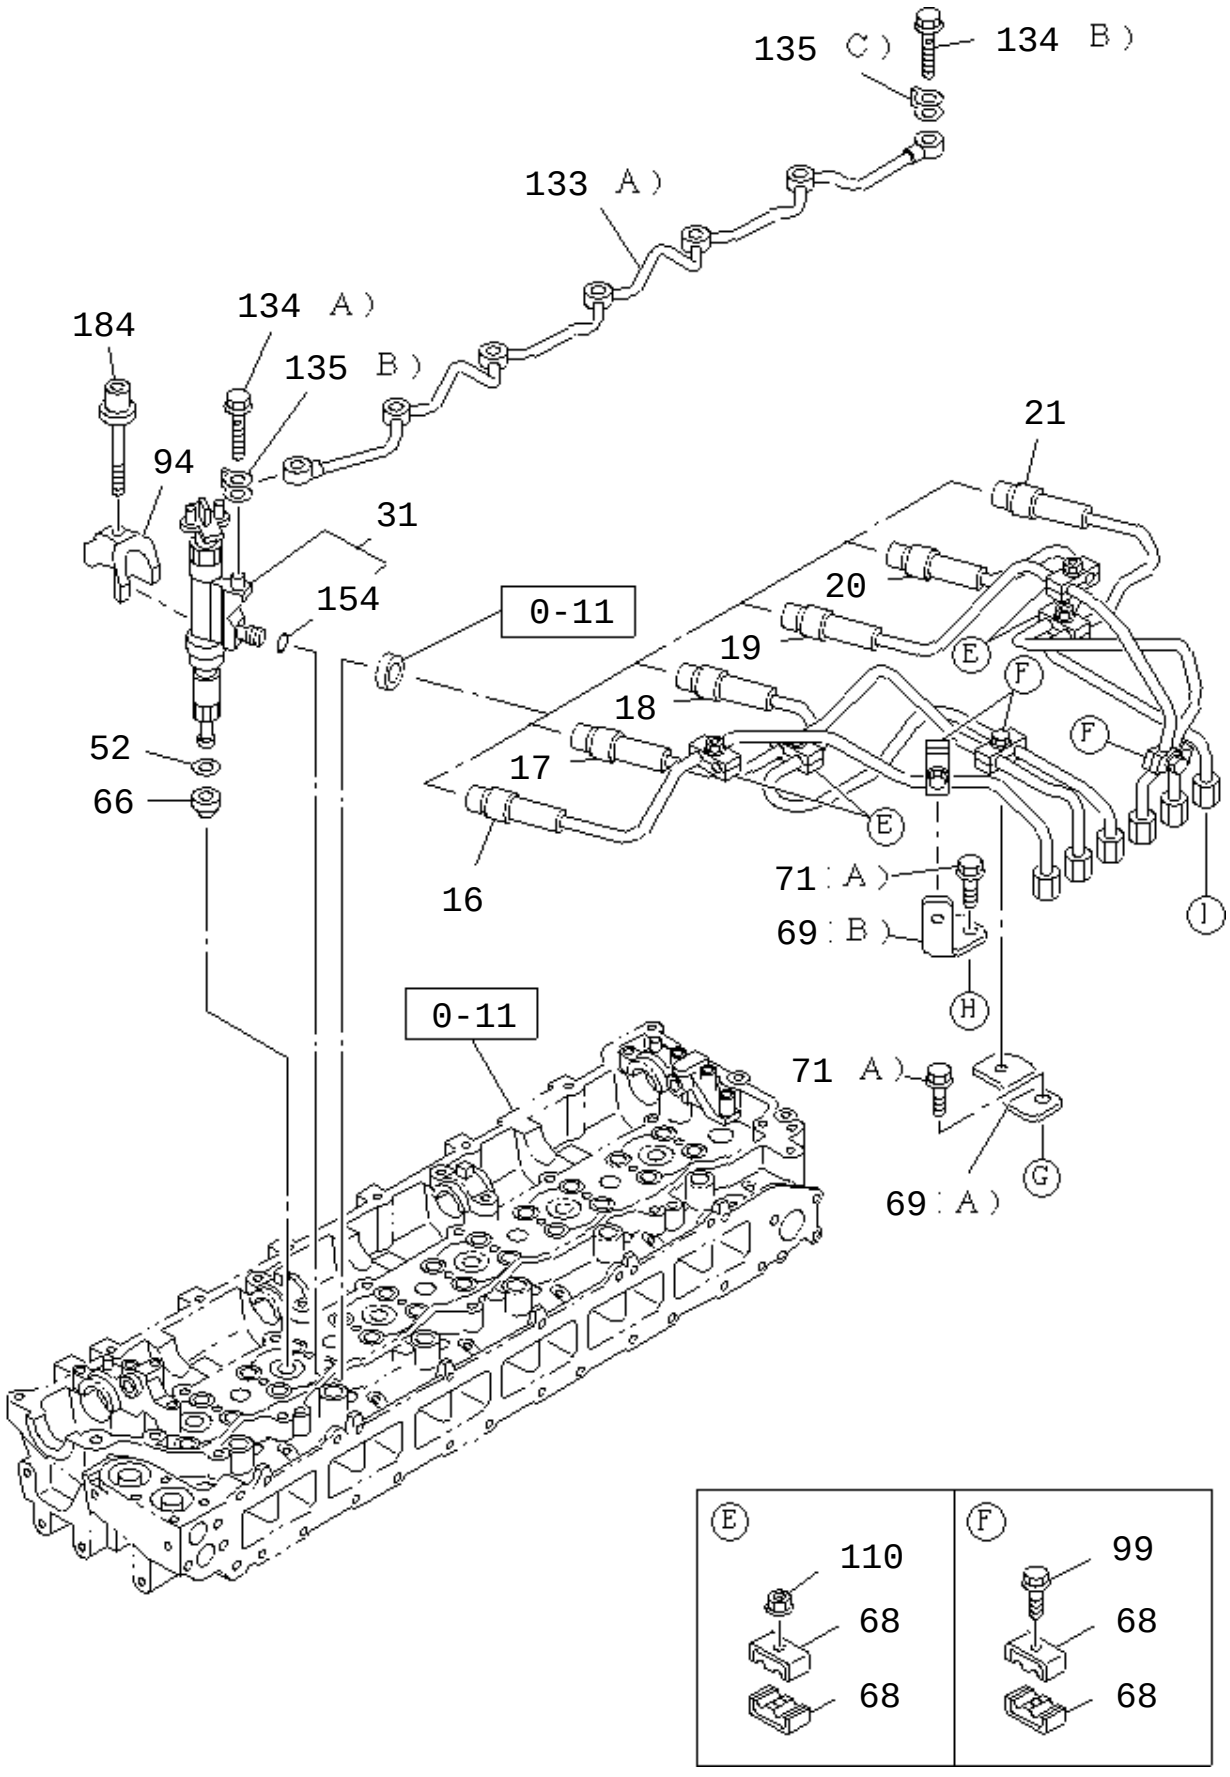

https://truckmanualshub.com/

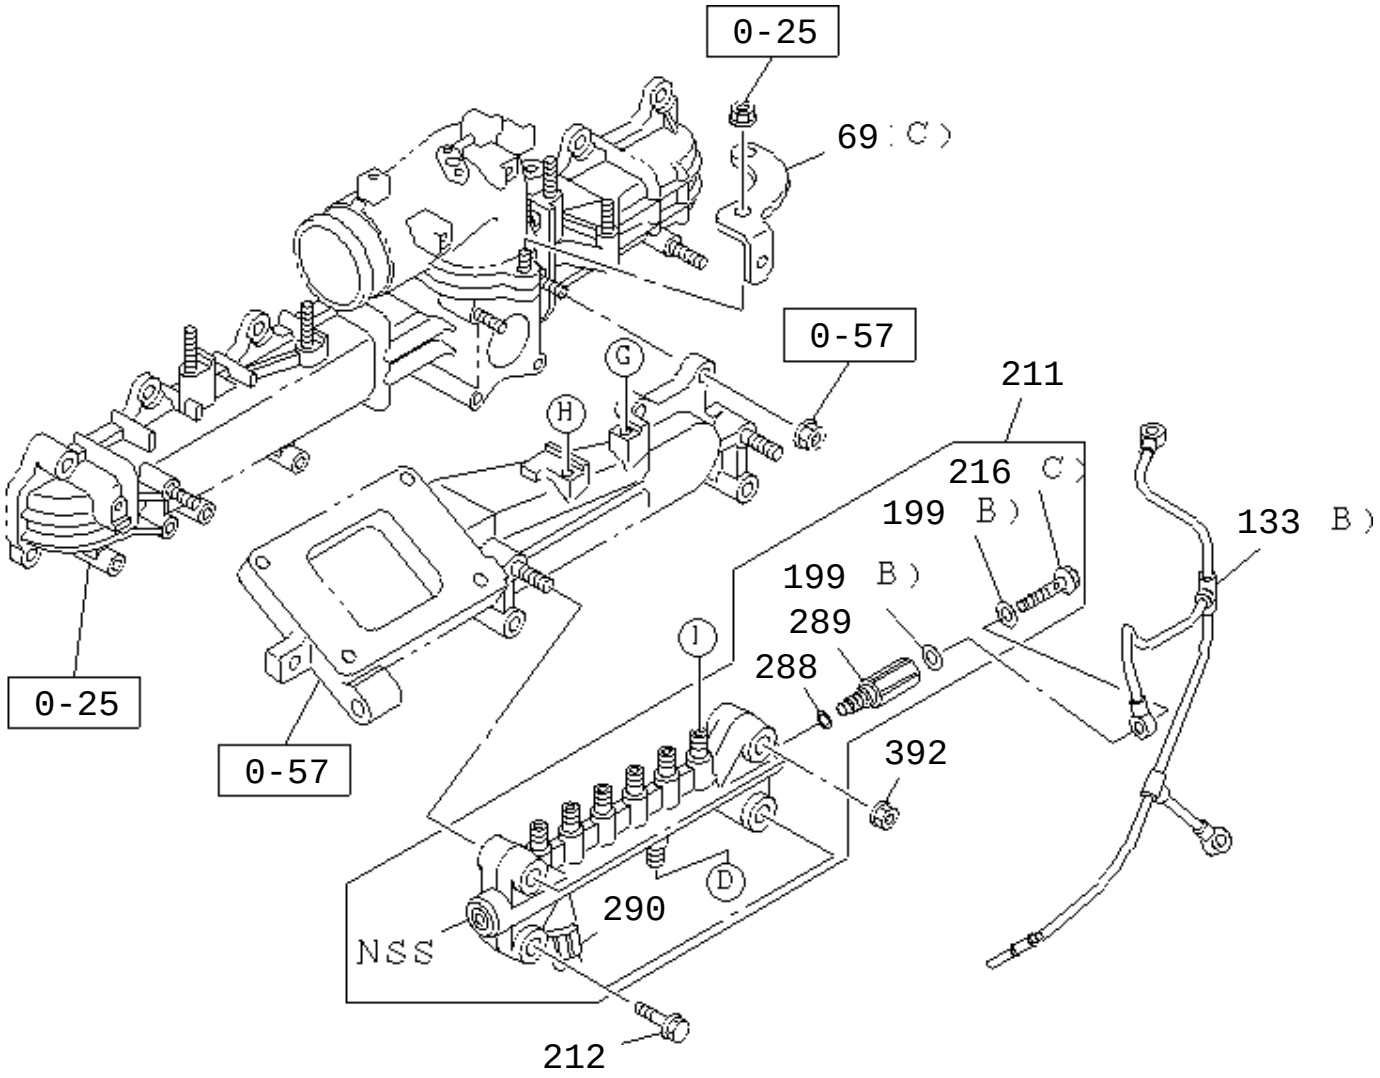

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1	D	PUMP ASM; INJ					
		8-97605-946-7		1312-	01	A	
2		BOLT; INJ PUMP					
		8-94399-256-0		1312-	03	A	
							M8X28
6		BRACKET; INJ PUMP TO C/BL					
		8-97601-154-1		1312-	01	A	
16		PIPE; INJ NO.1					
		8-98185-362-0	C	1312-1403	01	A	
		8-98271-207-0		1404-	01	A	
17		PIPE; INJ NO.2					
		8-98185-363-0	C	1312-1403	01	A	
		8-98271-208-0		1404-	01	A	
18		PIPE; INJ NO.3					
		8-98185-364-0	C	1312-1403	01	A	
		8-98271-209-0		1404-	01	A	
19		PIPE; INJ NO.4					
		8-98185-365-0	C	1312-1403	01	A	
		8-98271-210-0		1404-	01	A	
20		PIPE; INJ NO.5					
		8-98185-366-0	C	1312-1403	01	A	
		8-98271-211-0		1404-	01	A	
21		PIPE; INJ NO.6					
		8-98185-367-0	C	1312-1403	01	A	
		8-98271-212-0		1404-	01	A	
31	A	NOZZLE ASM; INJ					
		8-97609-789-6		1312-	06	A	
52		GASKET; SLEEVE					ALSO INCLUDED IN GASKET SET(ENG. & H
		8-94173-412-0		1312-	06	A	
							ID=23.3
66		GASKET; INJ NOZZLE					ALSO INCLUDED IN GASKET SET(ENG. & H
		8-98079-248-0		1312-	06	A	
							ID=9.2 T=8.1
68		CLIP; INJ PIPE					
		8-98039-293-0		1312-1405	14	A	
		8-98148-996-2		1406-	14	A	
69		BRACKET; INJ PIPE CLIP					
		8-98038-940-0		1312-	01	A	
							(B)
		8-98038-941-0		1312-	01	A	
							(C)
		8-98049-015-0		1312-	01	A	
							(A)
		8-98059-807-0		1312-	01	A	
							(D)
71		BOLT; BRKT					
		0-28050-816-0		1312-	02	A	
							(A)
							M8X16 FLANGE
		0-28151-016-0		1312-	01	A	
							(C)
							M10X16 FLANGE
		0-28151-200-0		1312-	01	A	
							(B)
							M12X100 FLANGE
94		BRACKET; INJ NOZZLE					
		8-98028-999-1		1312-	06	A	
99		BOLT; CLIP,INJ,PIPE					
		0-28050-635-0		1312-	03	A	
							M6X35 FLANGE
110		NUT; CLIP					
		0-91180-106-0		1312-	05	A	
							M6 FLANGE
121		PIPE; FUEL,FEED PUMP,SUCTION					
		8-98126-331-0		1312-	01	A	
131		CLIP; OVERFLOW LEAK OFF					
		8-98000-010-2		1312-	01	A	
							(A)
		8-98000-011-2		1312-	01	A	
							(B)
133		PIPE; INJ NOZZLE LEAK OFF					
		8-98059-804-0		1312-	01	A	
							(B)
		8-98203-705-1		1312-	01	A	
							(A)


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
134		BOLT; JOINT,LEAK OFF PIPE					
		1-09675-037-1		1312-	06	A	(A) M8X18 EYE-BOLT
		8-94396-711-0		1312-	02	A	(B) M10X21 FLANGE
135		GASKET; JOINT BOLT,LEAK OFF PIPE					ALSO INCLUDED IN GASKET SET(ENG. & H
		8-98065-992-0		1312-	06	A	(B) ID=8.3
		8-98079-755-0		1312-	01	A	(A) ID=10.2 OD=17
		8-98231-393-0		1312-	01	A	(C) ID=10.6
154		GASKET; CONNECTOR					ALSO INCLUDED IN GASKET SET(ENG. & H
		0-95690-111-0		1312-	06	A	ID=11.0
169		NUT; BRKT					
		0-91180-110-0		1312-	02	A	(A) M10 FLANGE
		0-91180-112-0		1312-	01	A	(B) M12 FLANGE IDN
184		BOLT; NOZZLE HOLDER					
		8-98008-895-0		1312-	06	A	M8X54
199		GASKET; EYE BOLT					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-15619-507-0		1312-	02	A	(A)
		8-97602-218-0		1312-	04	A	(B)
205		SENSOR; FUEL TEMP					
		8-98023-581-0		1312-	01	A	
210		PIPE; INJ,C/R					
		8-98059-805-0		1312-	01	A	
211		RAIL ASM; COMMON					
		8-97609-980-2		1312-	01	A	
212		BOLT; RAIL ASM					
		8-97372-243-0		1312-	02	A	M10X50 FLANGE
216		BOLT; EYE					
		5-15759-003-0		1312-	01	A	(A)
		8-97351-388-0		1312-	01	A	(B)
		8-98043-033-0		1312-	01	A	(C)
271		GASKET; INJ PUMP					
		1-09623-464-0		1312-	01	A	(A) ID=139.6
		8-98031-844-0		1312-	01	A	(B) ID=52
288		GASKET					
		1-15641-046-0		1312-	01	A	ID=11 OD=16.3
289		LIMITER; FUEL PRESS					
		8-98032-549-0		1312-	01	A	
290		SENSOR; PRESS					
		8-98119-790-0		1312-	01	A	
382		KEY; DRIVE SHAFT					
		8-98161-995-0		1312-	01	A	
392		NUT; RAIL ASM					
		0-91180-110-0		1312-	02	A	M10 FLANGE
424		OVERHAUL KIT; SUPPLY PUMP					
		8-98145-449-1		1312-	01	A	
0-11		Move to 0-11					
0-12		Move to 0-12					

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
0-20		Move to 0-20					
0-42		Move to 0-42					
1-41		Move to 1-41					
8-10		Move to 8-10					
0-25		Move to 0-25					
0-57		Move to 0-57					

https://truckmanualshub.com/

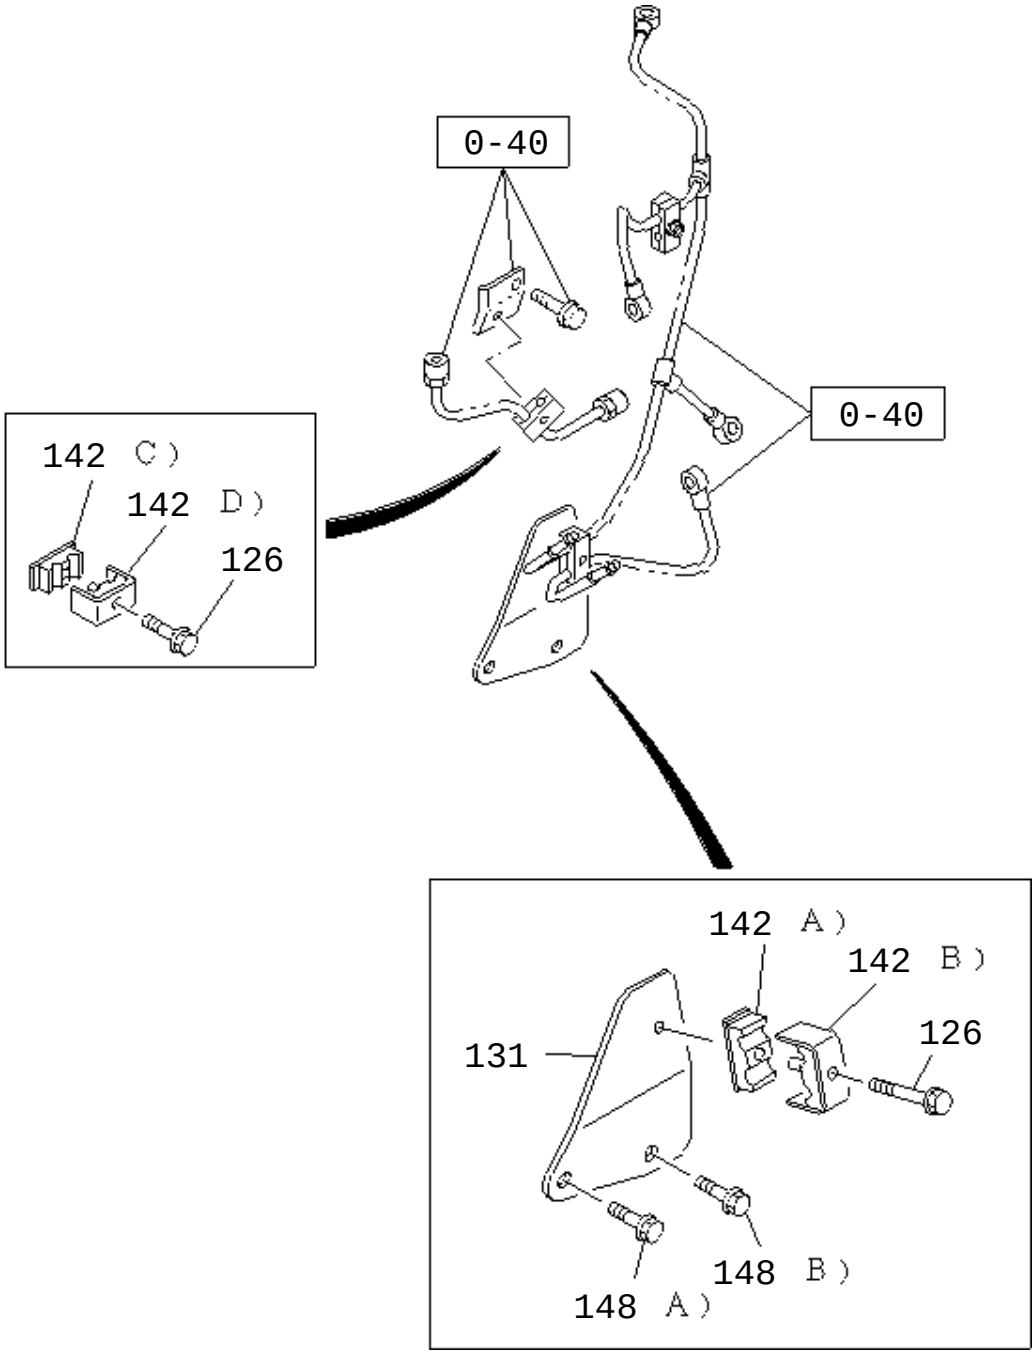


https://truckmanualshub.com/

0-42 FUEL PUMP AND PIPE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
126		BOLT; CLIP,FUEL PIPE 0-28650-635-0		1312-	02	A	M6X35 FLANGE
131		BRACKET; FUEL PIPE CLIP 8-98059-806-0		1312-	01	A	
142		CLIP; FUEL PIPE 1-09701-180-0		1312-	01	A	(C)
		8-94393-280-3		1312-	01	A	(D) ID=10 & 10 L=25
		8-98000-010-2		1312-	01	A	(A)
		8-98000-011-2		1312-	01	A	(B)
148		BOLT; BRKT 0-28151-016-0		1312-	01	A	(B) M10X16 FLANGE
		0-28151-025-0		1312-	01	A	(A) M10X25 FLANGE
0-40		Move to 0-40					


https://truckmanualshub.com/


OIL COOLER

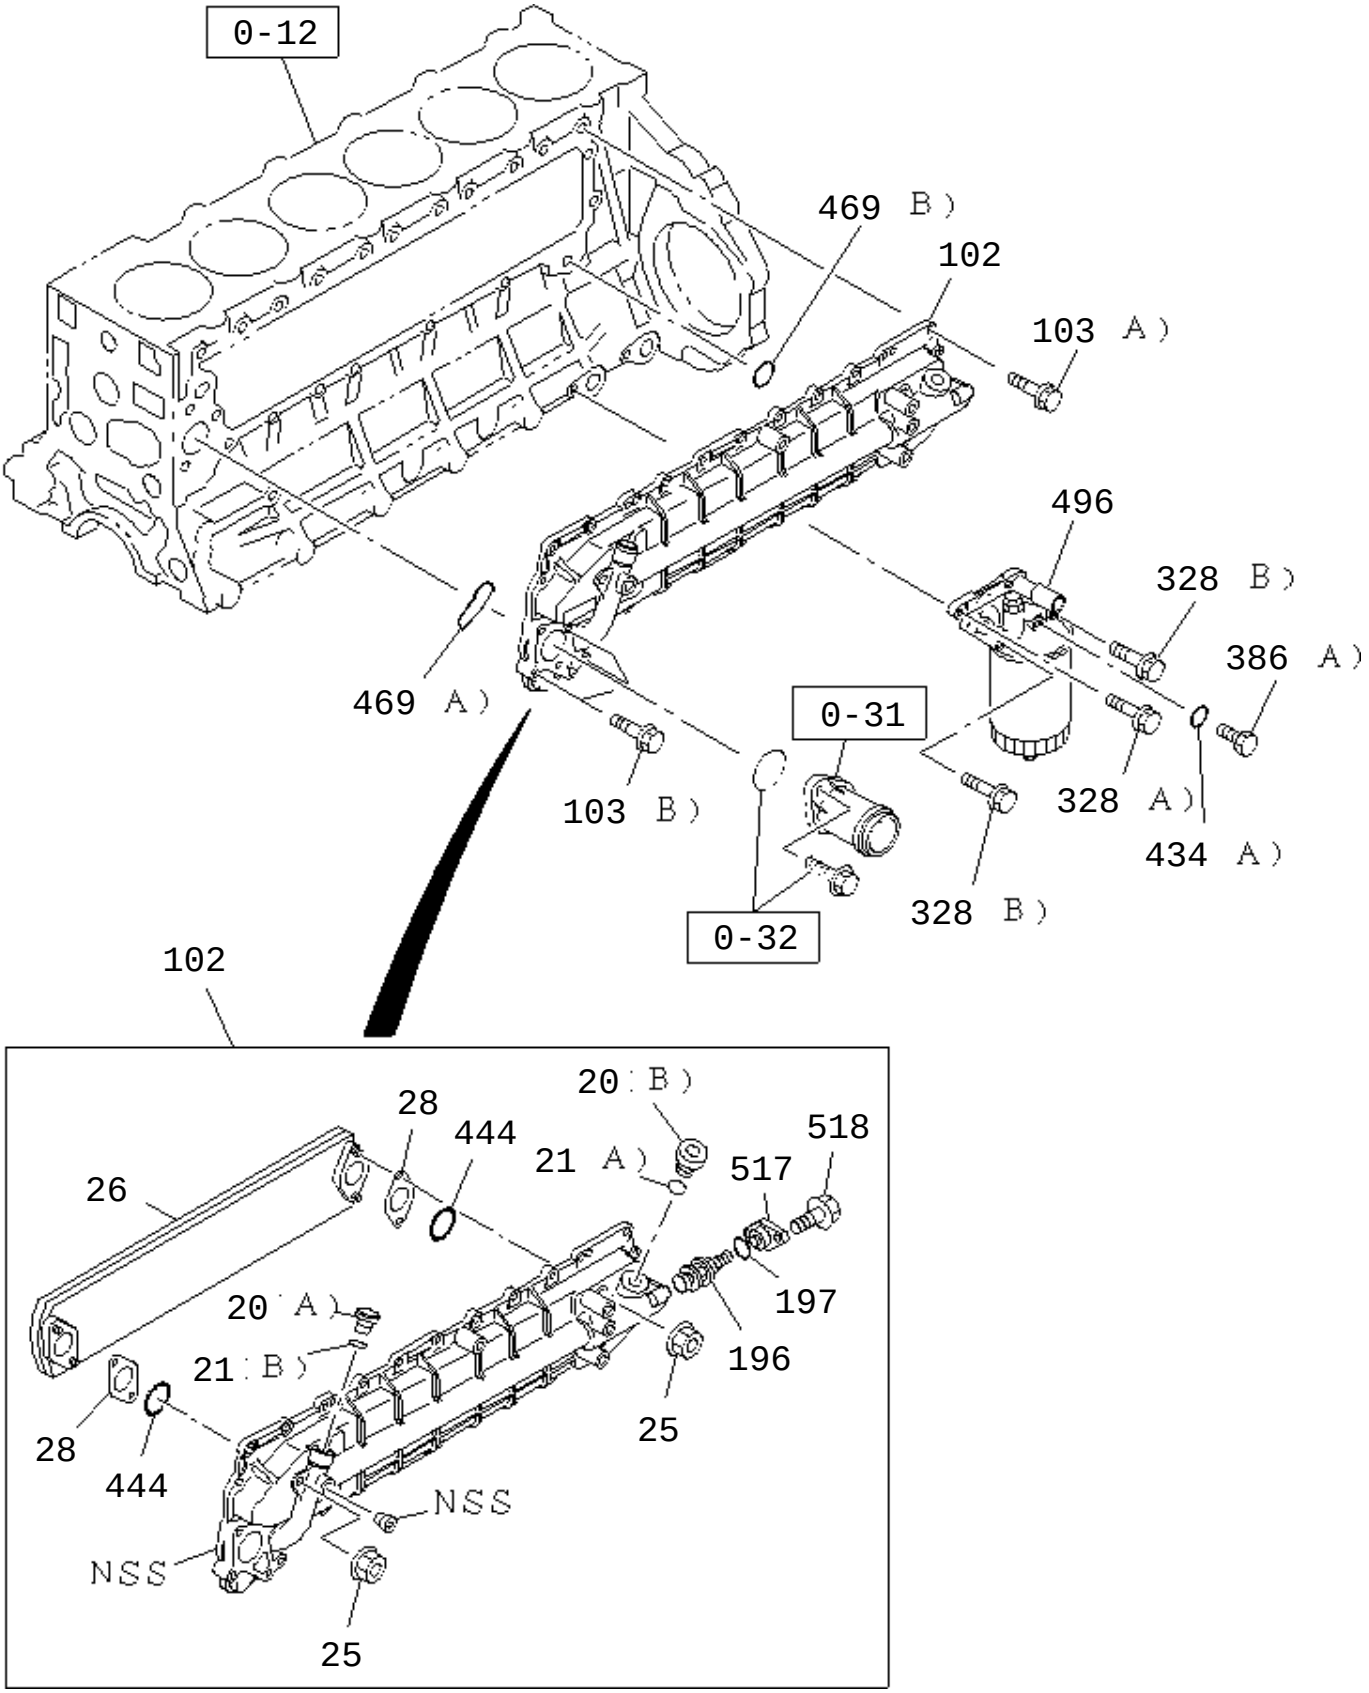

https://truckmanualshub.com/

OIL FILTER

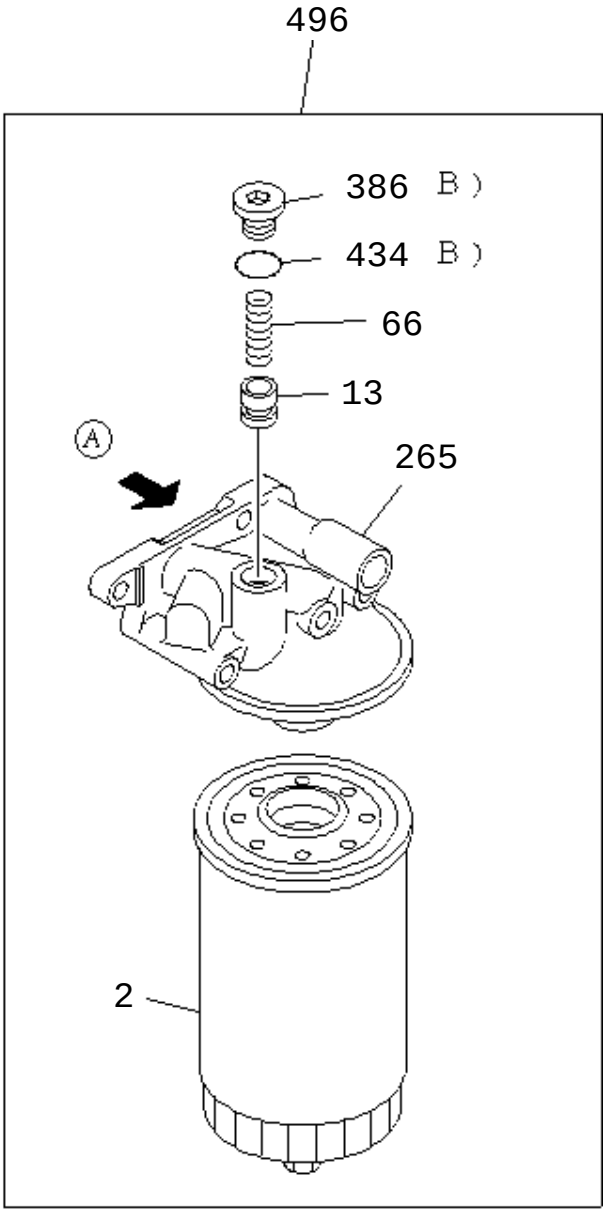

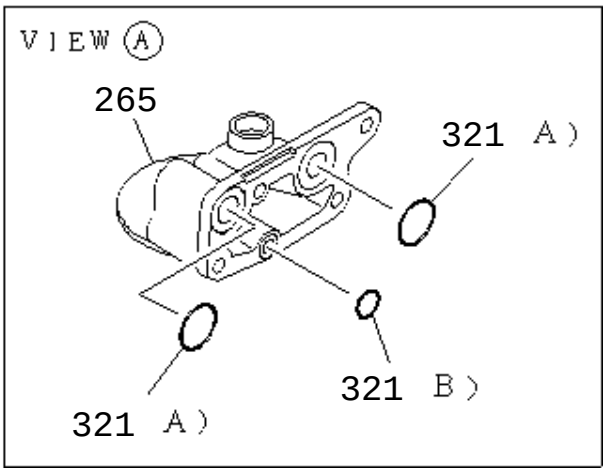

https://truckmanualshub.com/

0-50 OIL COOLER AND OIL FILTER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
2	A	ELEMENT; OIL FILTER 8-94391-049-4		1312-	01	A	
13		VALVE; RELIEF 8-98238-944-0		1312-	01	A	
20		PLUG; COOLER BODY 8-94393-604-0		1312-	01	A	(A)
		8-94396-753-0		1312-	01	A	(B)
21		GASKET; PLUG 1-13219-253-0		1312-	01	A	(B)
		8-94396-755-0		1312-	01	A	(A) M24
25		NUT; CORE TO BODY 1-13219-324-0		1312-	04	A	M10 FLANGE
26		CORE ASM; OIL COOLER 8-94391-738-1		1312-	01	A	
28		GASKET; CORE TO BODY 8-94394-930-0		1312-	02	A	
66		SPRING; VLV 8-98238-943-0		1312-	01	A	
102		COOLER ASM; OIL 8-97600-156-1		1312-	01	A	
103		BOLT; OIL COOLER 0-28050-835-0		1312-	03	A	(B) M8X35 FLANGE
		0-28080-822-0		1312-	24	A	(A) M8X22 FLANGE
196		THERMOSTAT; OIL COOLER 8-97600-936-0		1312-	01	A	90 CELSIUS
197		GASKET; THERMOSTAT 8-94399-279-0		1312-	01	A	ID=25.7
265		BODY; OIL FILTER 8-98238-939-0		1312-	01	A	
321		GASKET; OIL FILTER TO C/BL 8-94399-339-0		1312-	01	A	ALSO INCLUDED IN GASKET SET(ENGINE). (B) ID=9.8
		8-94399-399-0		1312-	02	A	(A) ID=22.1
328		BOLT; OIL FILTER 0-28151-030-0		1312-	02	A	(A) M10X30 FLANGE
		0-28151-090-0		1312-	02	A	(B) M10X90 FLANGE
386		PLUG; OIL FILTER 1-09604-074-0		1312-	01	A	(A) M10X10
		8-98238-941-0		1312-	01	A	(B)
434		GASKET; PLUG,OIL FILTER 1-09630-083-0		1312-	01	A	(A) ID=10.2 OD=15.2
		8-98238-942-0		1312-	01	A	(B)
444		GASKET; ELEMENT TO BODY 8-94396-810-0		1312-	02	A	
469		GASKET; OIL COOLER TO C/BL 8-94399-002-0		1312-	01	A	ALSO INCLUDED IN GASKET SET(ENGINE). (A)
		8-98045-449-0		1312-	01	A	(B)
496		FILTER ASM; OIL					

https://truckmanualshub.com/

0-50 OIL COOLER AND OIL FILTER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
496		8-98236-649-0		1312-	01	A	
517		PLUG; THERMOSTAT,OIL COOLER 8-94391-740-0		1312-	01	A	
518		BOLT; PLUG,THERMOSTAT 0-28050-816-0		1312-	02	A	M8X16 FLANGE
0-12		Move to 0-12					
0-31		Move to 0-31					
0-32		Move to 0-32					

https://truckmanualshub.com/

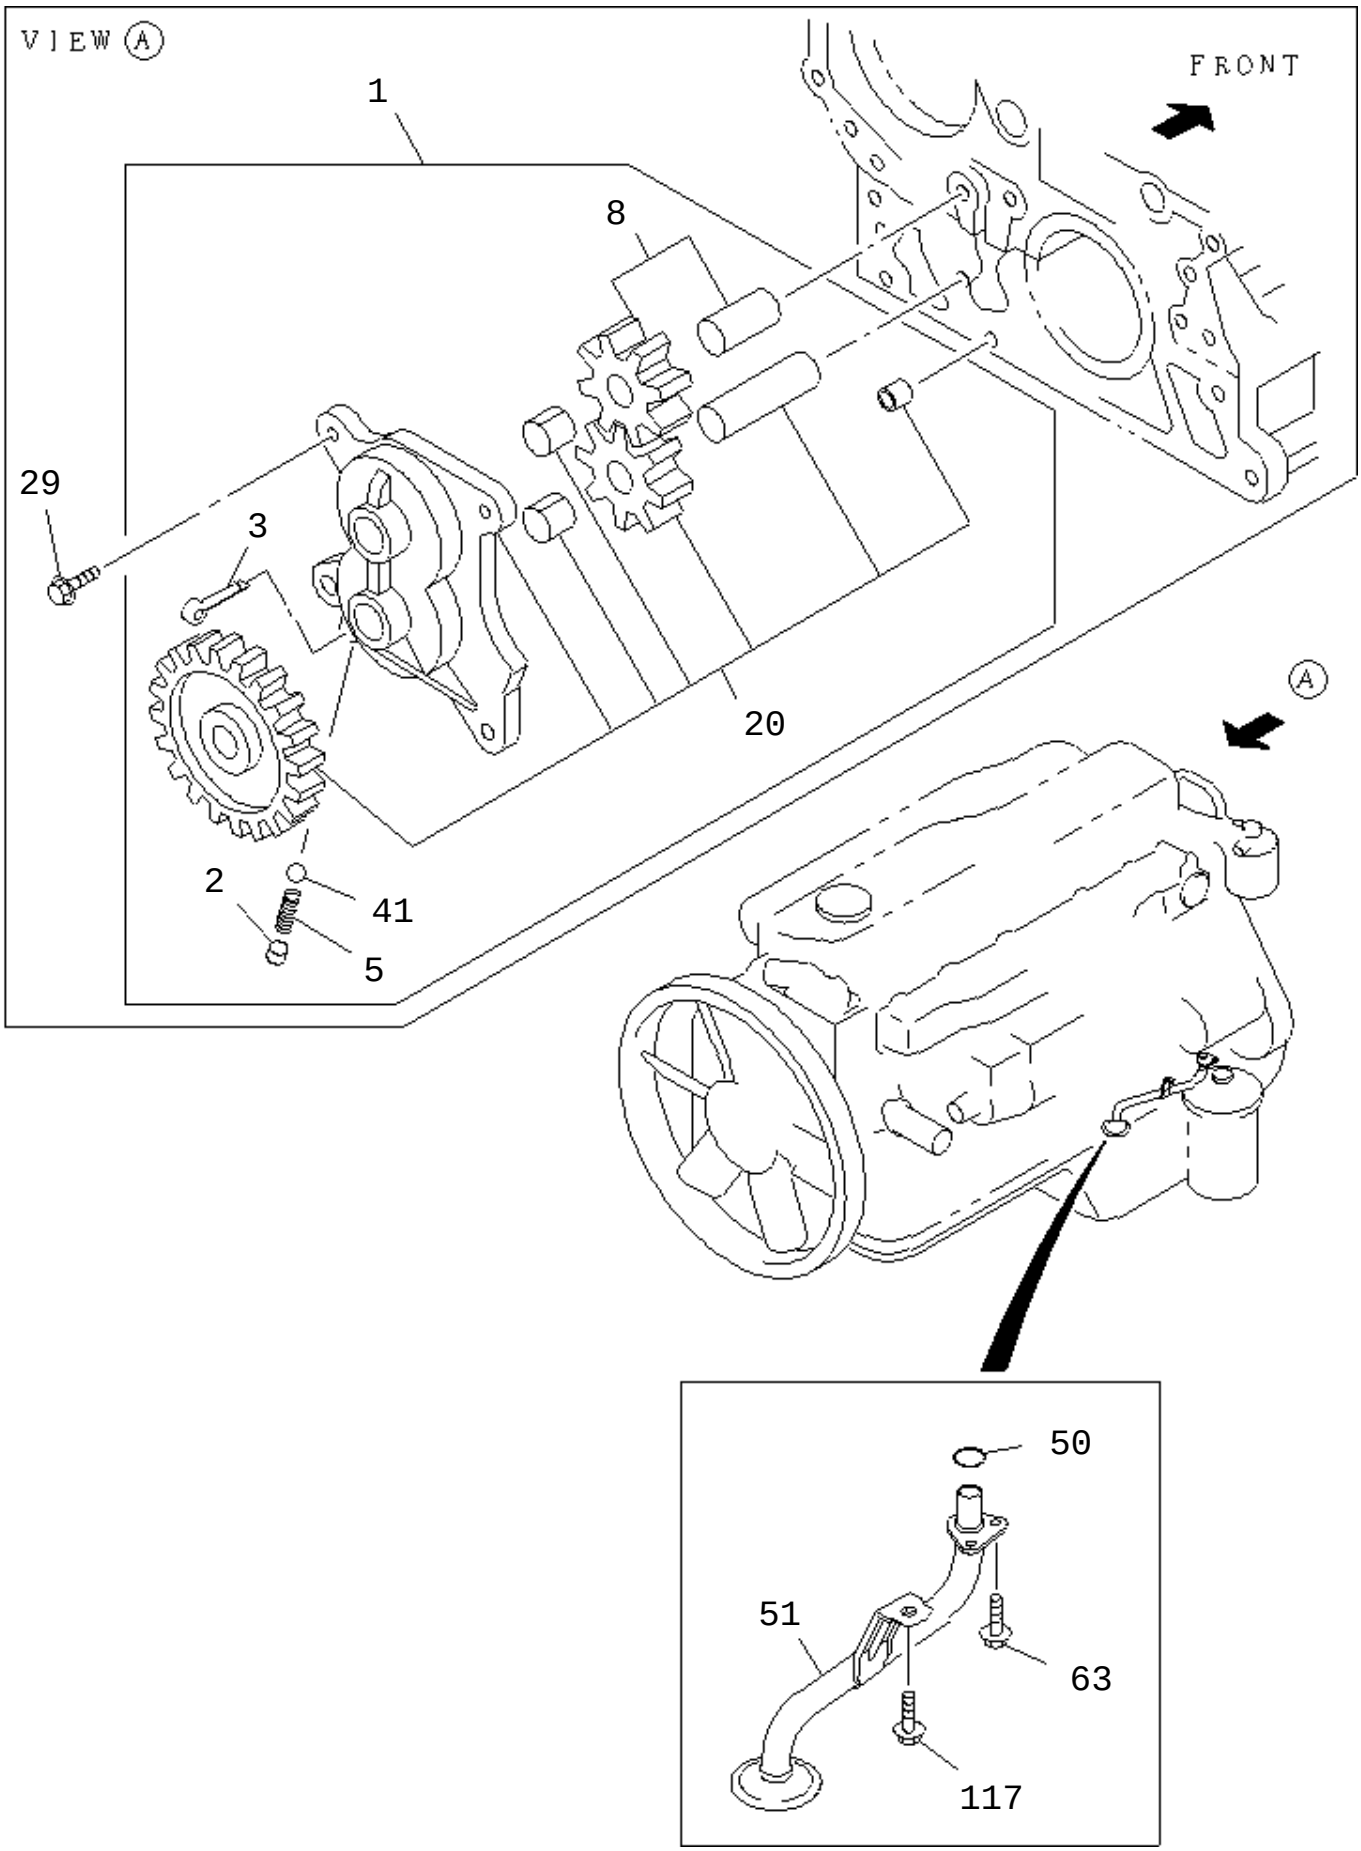


https://truckmanualshub.com/

0-51 OIL PUMP AND OIL STRAINER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		PUMP ASM; OIL 8-97641-835-0		1312-	01	A	
2		SEAT; SPR 5-13165-004-0		1312-	01	A	
3		PIN; SPLIT 9-08104-030-0		1312-	01	A	L=30
5		SPRING; COIL 5-09580-098-0		1312-	01	A	
8		GEAR; DRIVEN,OIL PUMP 8-97641-838-0		1312-	01	A	
20		GEAR; DRIVE,OIL PUMP 8-97641-839-0		1312-	01	A	
29		BOLT; OIL PUMP 0-28050-825-0		1312-	04	A	M8X25 FLANGE
41		BALL; OIL RELIEF VLV 5-09843-003-0		1312-	01	A	
50		GASKET; OIL PIPE,STRAINER TO PUMP 8-94399-398-0		1312-	01	A	ALSO INCLUDED IN GASKET SET(ENGINE). ID=24.5
51		STRAINER & PIPE ASM; OIL 8-98204-158-0		1312-	01	A	
63		BOLT; OIL PIPE,STRAINER TO PUMP 0-58330-816-0		1312-	02	A	M8X16 HEX SOCKET
117		BOLT; STAY TO CRANKCASE 8-94399-669-1		1312-	01	A	M10X75 FLANGE

https://truckmanualshub.com/

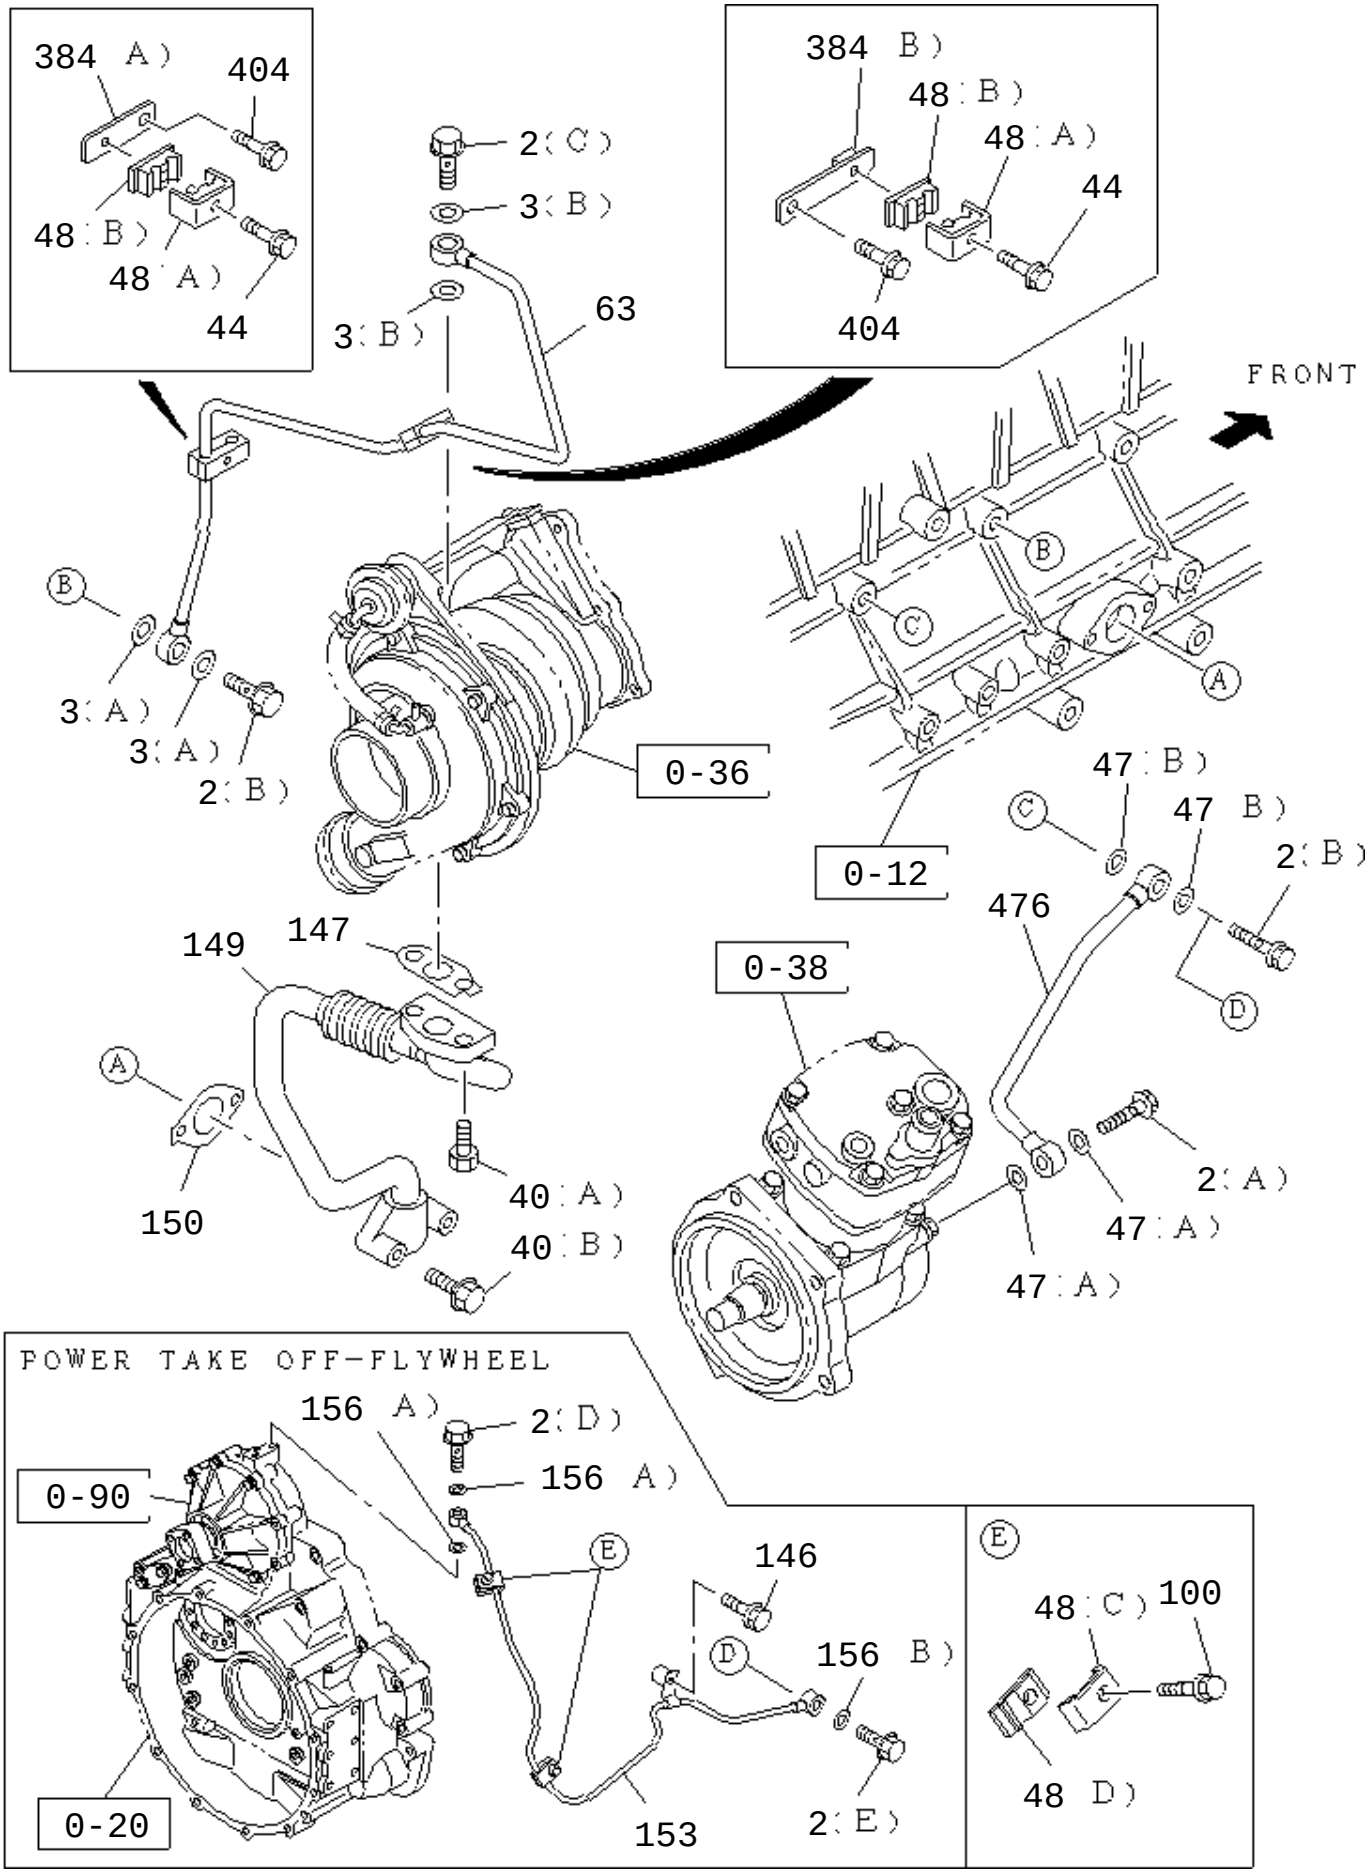

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
2		BOLT; EYE,OIL PIPE					
		8-97372-239-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (D) M10X21 FLANGE
		8-98037-829-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (E) M14X43
		1-09675-086-0		1312-	02	A	(B) M14X27 FLANGE
		5-09675-006-1		1312-	01	A	(C) M12X25
		8-97372-238-0		1312-	01	A	(A) M10X21 FLANGE
3		GASKET; EYE BOLT,OIL PIPE					ALSO INCLUDED IN GASKET SET(ENGIN
		1-09630-084-0		1312-1312	02	A	(B) ID=12.2
		8-98251-344-0		1401-	02	A	(B) ID=12.2
		1-09630-085-0		1312-1312	02	A	(A) ID=14.2 OD=19.2
		8-98251-345-0		1401-	02	A	(A) ID=14.2 OD=19.2
40		BOLT; OIL PIPE					
		0-28151-030-0		1312-	02	A	(A) M10X30 FLANGE
		0-28650-825-0		1312-	02	A	(B) M8X25 FLANGE IDN
44		BOLT; CLIP,OIL PIPE					
		0-28050-630-0		1312-	02	A	M6X30 FLANGE
47		GASKET; OIL PIPE					ALSO INCLUDED IN GASKET SET(ENG.
		1-09630-083-0		1312-	02	A	(A) ID=10.2 OD=15.2
		1-09630-085-0		1312-1312	02	A	(B) ID=14.2 OD=19.2
		8-98251-345-0		1401-	02	A	(B) ID=14.2 OD=19.2
48		CLIP; OIL PIPE					
		8-97372-487-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (C)
		8-97372-488-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (D)
		1-09701-228-3		1312-	02	A	(A)
		1-09701-229-2		1312-	02	A	(B)
63		PIPE; OIL,TURBOCHARGER FEED					
		8-98074-254-0		1312-	01	A	
100		BOLT; CLIP					
		0-28650-630-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) M6X30 FLANGE
146		BOLT; BRKT					
		0-28650-830-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) M8X30 FLANGE
147		GASKET; OIL PIPE TO TURBOCHARGER					ALSO INCLUDED IN GASKET SET(ENGIN
		1-09637-058-2		1312-	01	A	
149		PIPE; OIL RETURN,TURBOCHARGER					
		8-98147-092-0		1312-	01	A	
150		GASKET; OIL PIPE TO C/BL					ALSO INCLUDED IN GASKET SET(ENGIN
		8-94394-671-0		1312-	01	A	ID=30
153		PIPE; OIL,C/BL TO PTO					

https://truckmanualshub.com/

OIL AND VACUUM PIPING; ENGINE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
153		8-98052-616-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
156		GASKET; EYE JOINT,OIL PIPE					
		8-98251-345-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=14.2 OD=19.2
		9-09571-410-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=10.2 OD=16.0
384		BRACKET; CLIP,OIL PIPE,TURBOCHARGER					
		1-13319-020-0		1312-	01	A	(A)
		1-13319-041-0		1312-	01	A	(B)
404		BOLT; BRKT					
		1-09000-114-0		1312-	02	A	M8X15
476		PIPE; OIL,C/BL TO AIR CMPR					
		8-97608-935-0		1312-	01	A	
0-12		Move to 0-12					
0-20		Move to 0-20					
0-36		Move to 0-36					
0-38		Move to 0-38					
0-90		Move to 0-90					

https://truckmanualshub.com/

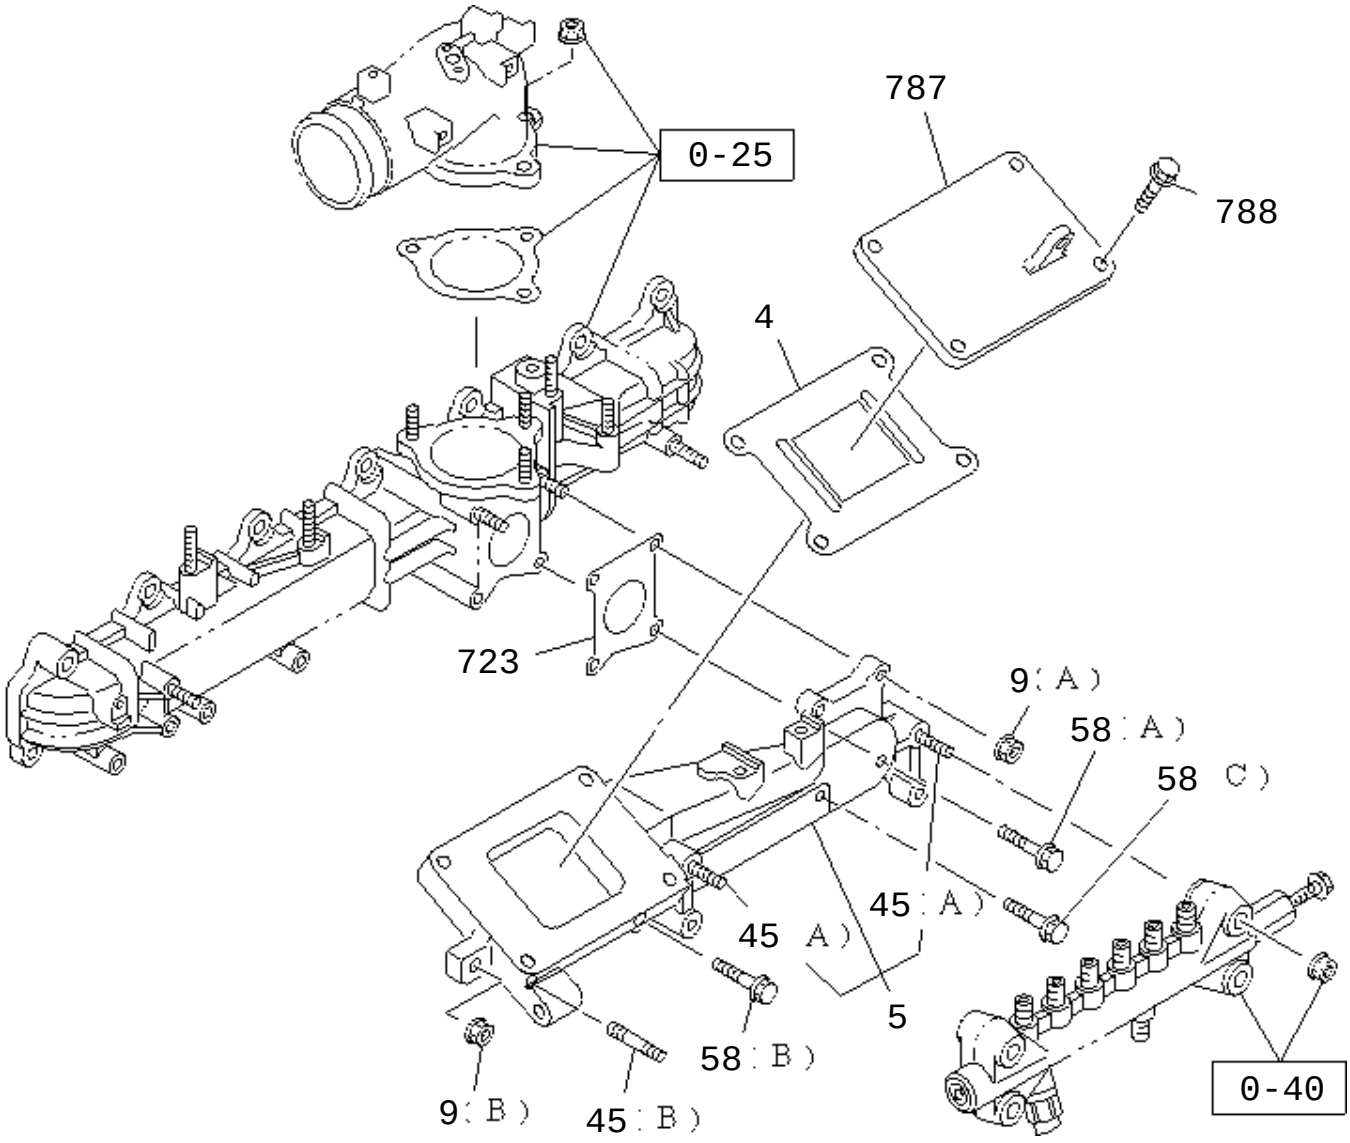



https://truckmanualshub.com/

0-57 EMISSION PIPING

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
4		GASKET; EGR VLV					ALSO INCLUDED IN GASKET SET(ENGINE).
		8-97608-423-0		1312-	01	A	
5		ADAPTER ASM					
		8-98240-157-0		1312-	01	A	
9		NUT; EGR ADAPTER					
		0-91180-108-0		1312-	02	A	(A) M8 FLANGE
		0-91180-110-0		1312-	02	A	(B) M10 FLANGE
45		STUD; ADAPTER,EGR					
		0-44011-030-0		1312-	01	A	(B) M10X30 L=45
		0-44011-050-0		1312-	02	A	(A) M10X50 L=65
58		BOLT; PIPE					
		0-28151-030-0		1312-	01	A	(B) M10X30 FLANGE
		0-28650-830-0		1312-	01	A	(C) M8X30 FLANGE
		8-98034-764-0		1312-	01	A	(A) M8X30 FLANGE
723		GASKET; REED VLV					ALSO INCLUDED IN GASKET SET(ENGINE).
		8-97605-995-0		1312-	01	A	
787		COVER; DUCT,EGR VLV					
		8-98238-416-0		1402-1402	01	A	KD ENGINE<7MB>
		8-98238-416-0		1403-	01	A	
		8-98058-709-0		1312-1401	01	A	
		8-98058-709-0		1402-1402	01	A	EXC. KD ENGINE<7MB>
788		BOLT; COVER					
		0-28751-025-0		1402-1402	04	A	KD ENGINE<7MB> M10X25 FLANGE
		0-28751-025-0		1403-	04	A	M10X25 FLANGE
		0-28751-035-0		1312-1401	04	A	M10X35 FLANGE
		0-28751-035-0		1402-1402	04	A	EXC. KD ENGINE<7MB> M10X35 FLANGE
0-25		Move to 0-25					
0-40		Move to 0-40					


https://truckmanualshub.com/

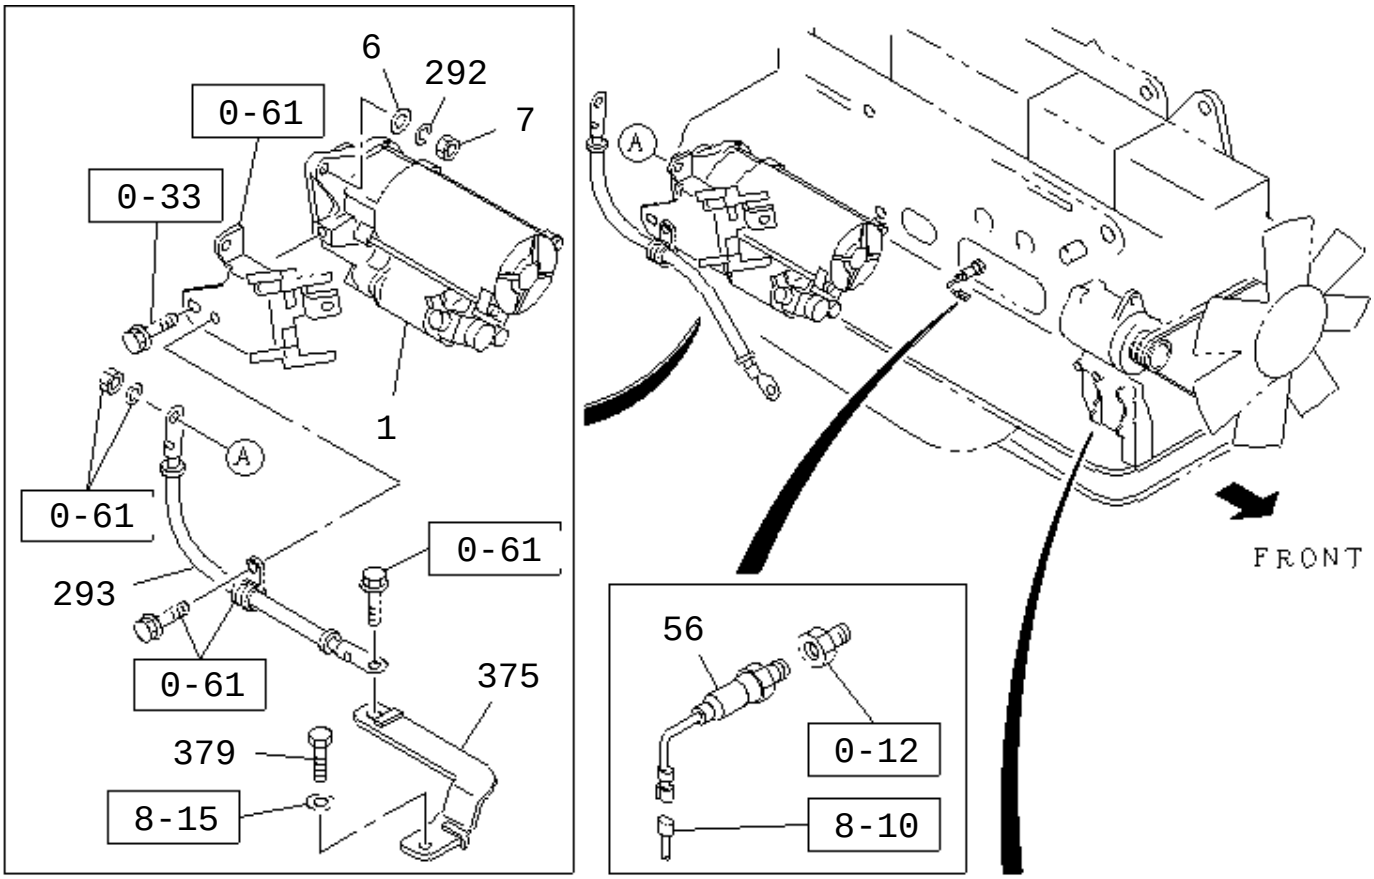


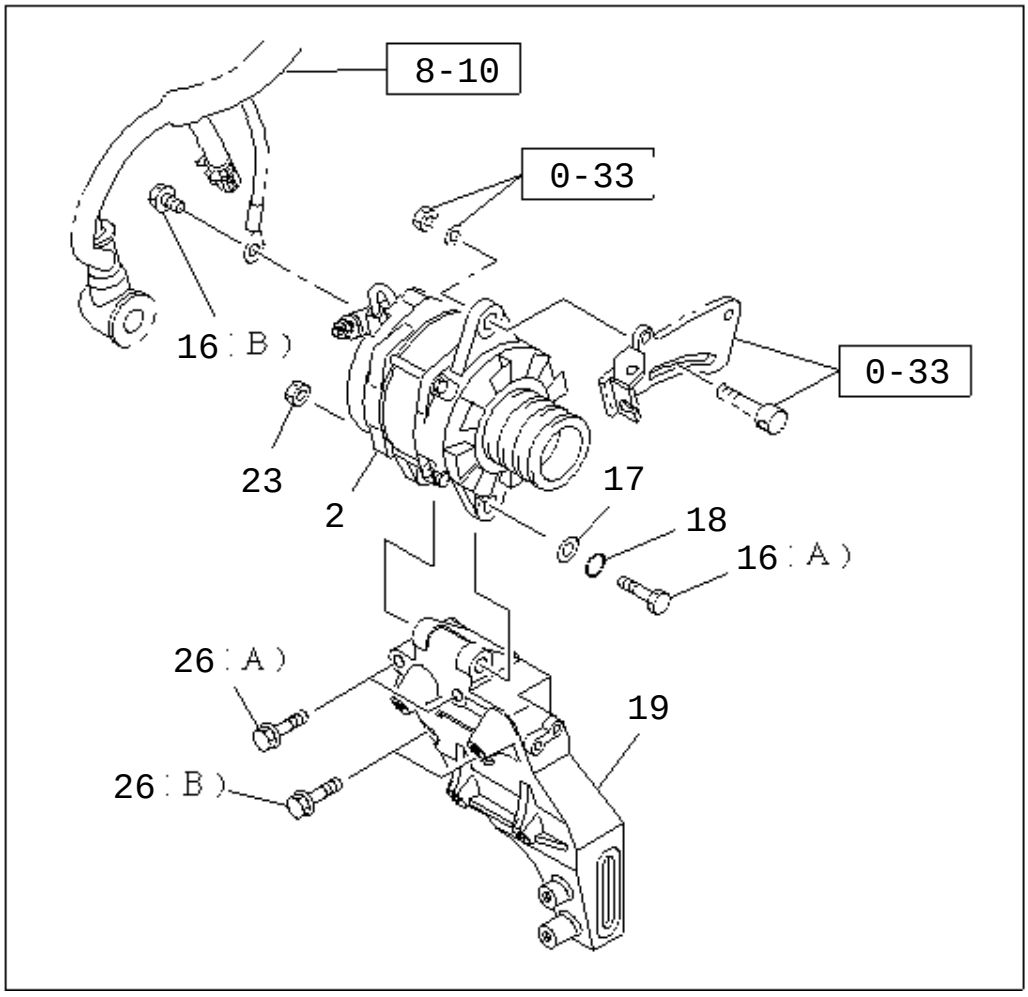

https://truckmanualshub.com/


ENGINE SIDE

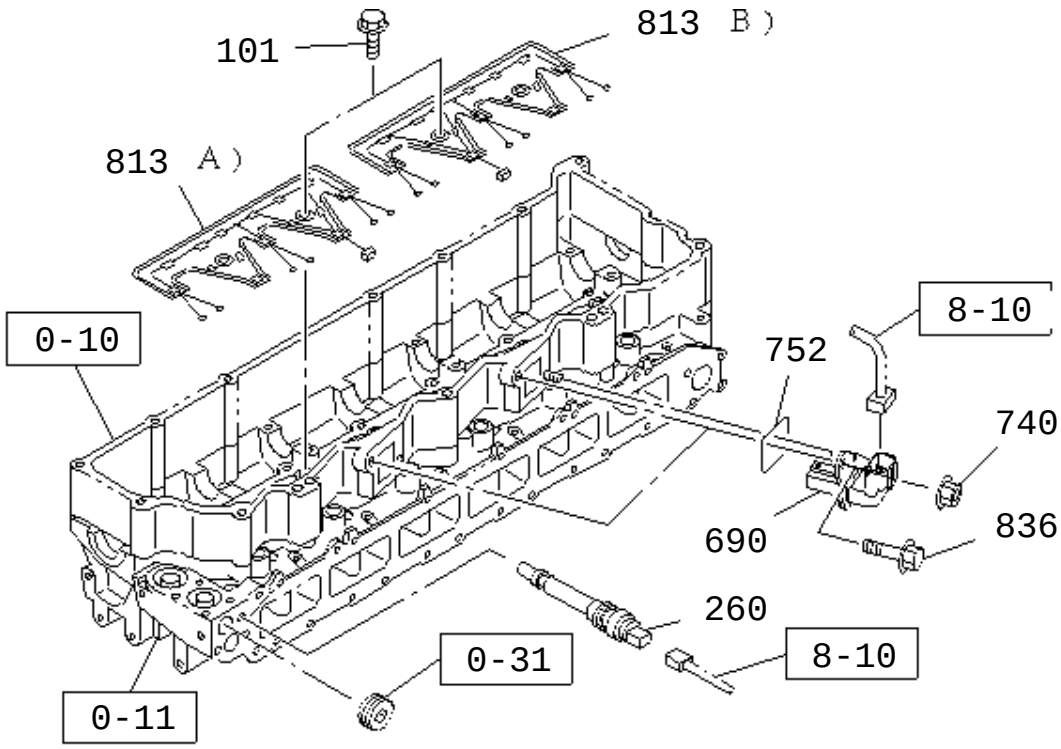

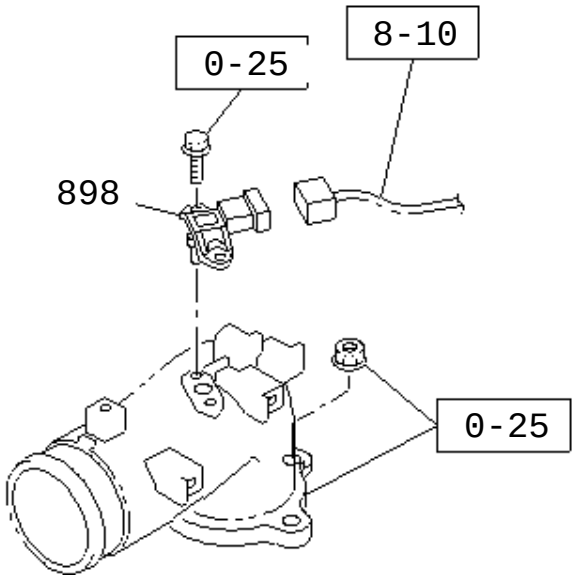

https://truckmanualshub.com/


FRAME SIDE

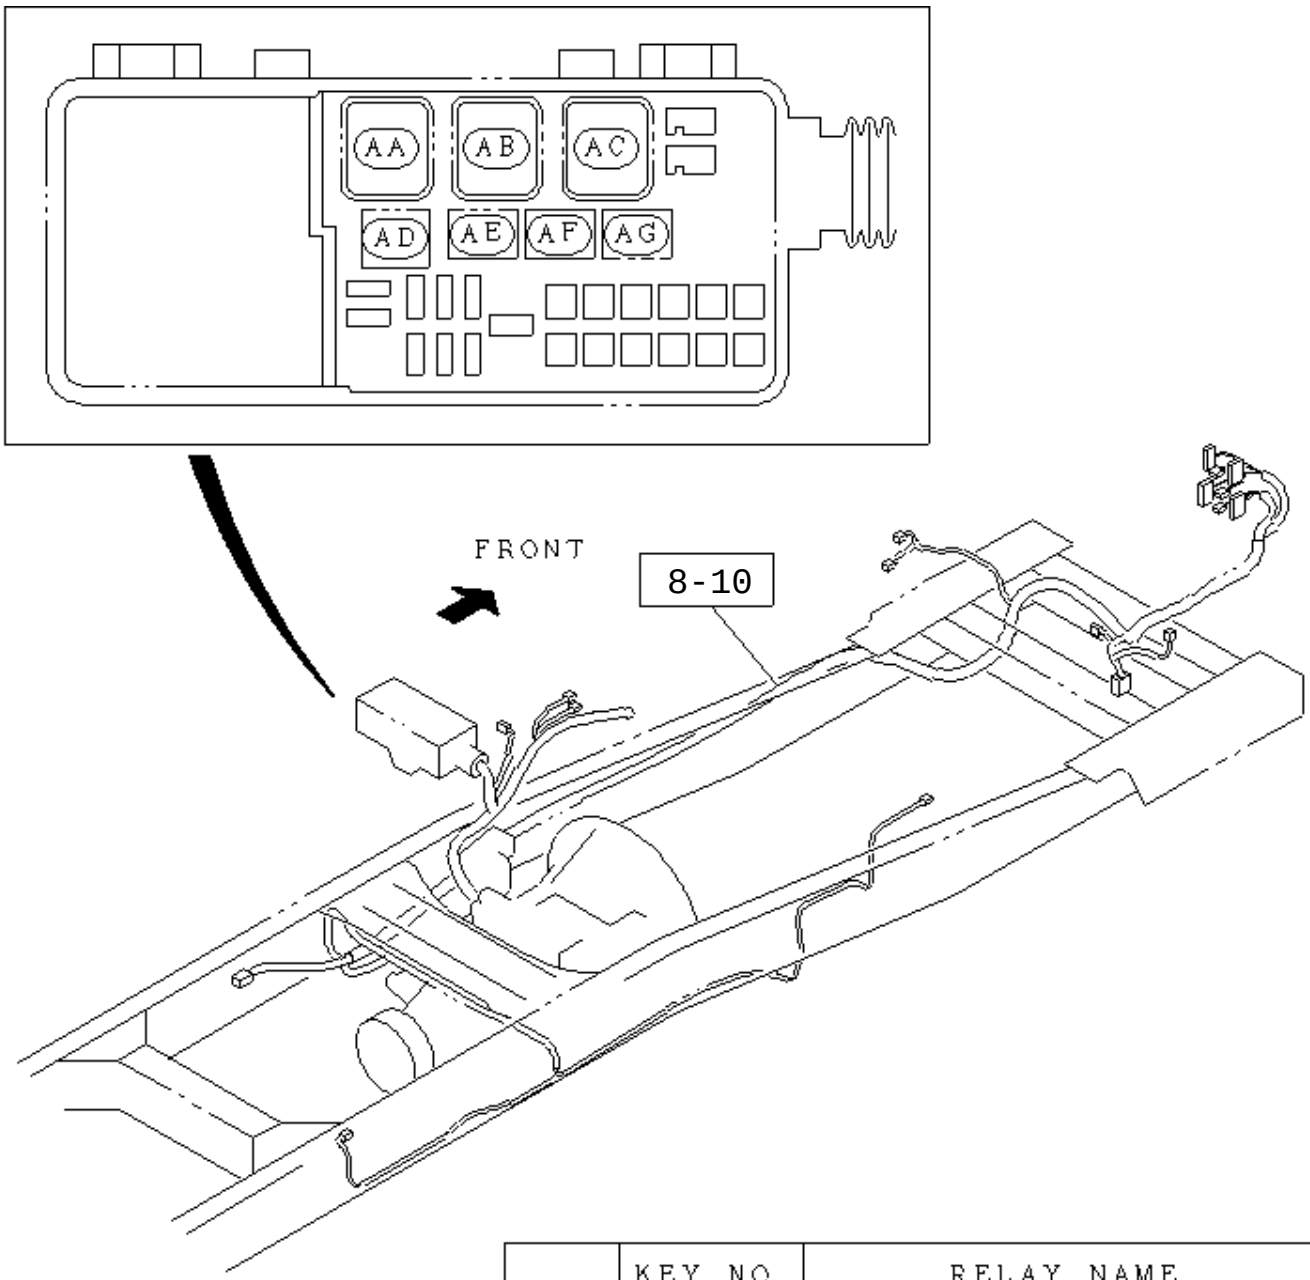


	KEY NO.	RELAY NAME
AA	—	—
AB	8-28	MAIN
AC	—	—
AD	—	—
AE	—	—
AF	10 A)	STARTER
AG	—	—

https://truckmanualshub.com/

ENGINE CONTROL UNIT AND OTHER PARTS

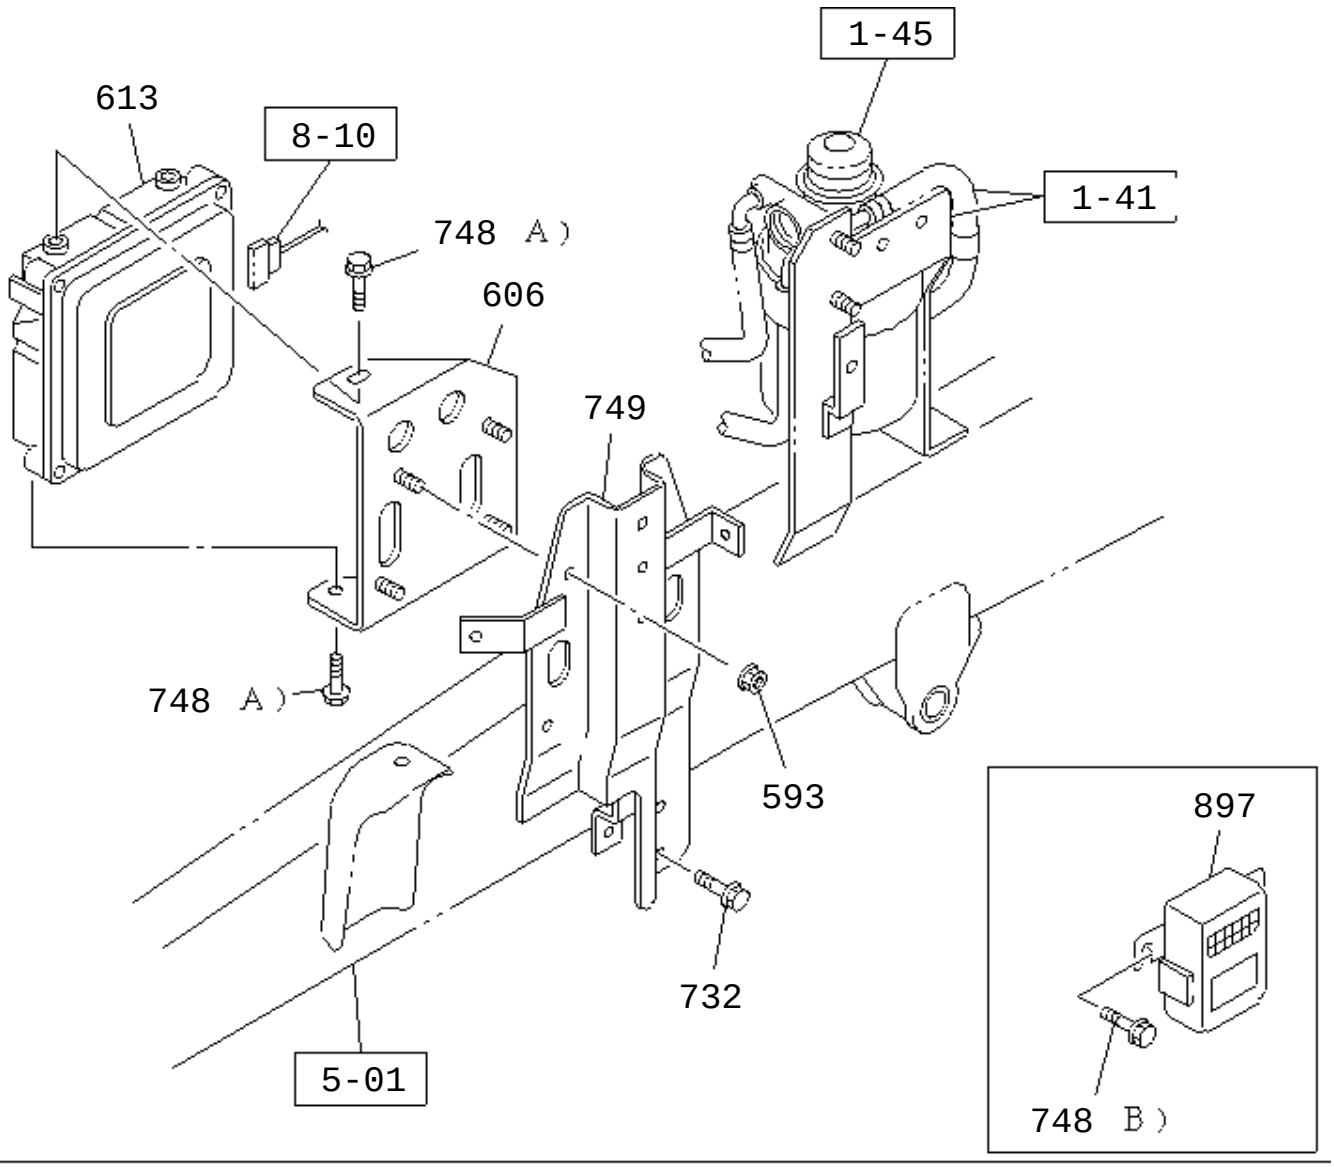

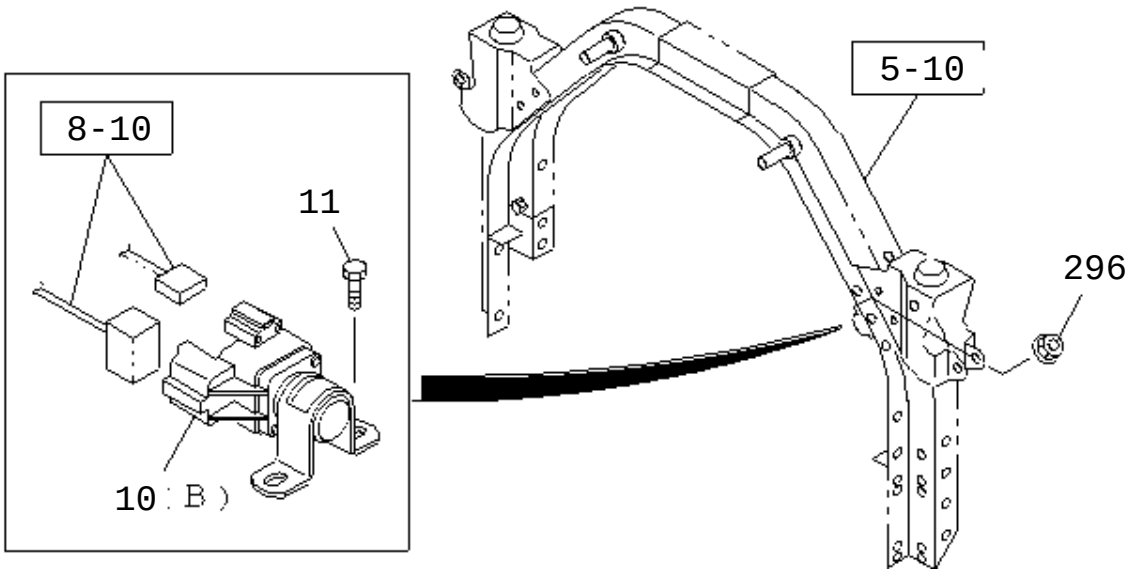

https://truckmanualshub.com/

ENGINE ELECTRICAL CONTROL PARTS

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	D	STARTER ASM					SEE FIG-NO 0-65 FOR COMPONENT.
		8-98141-206-3		1312-1403	01	A	24V 5.0KW MITSUBISHI
		8-98141-206-3		1404-	01	AB	24V 5.0KW MITSUBISHI
2	D	GENERATOR ASM					SEE FIG-NO 0-66 FOR COMPONENT.
		8-98013-461-4		1312-1403	01	A	24V 50A NIKKO
		8-98013-461-4		1404-	01	AB	24V 50A NIKKO
6		WASHER; PL,STARTER					
		0-91610-514-0		1312-1403	01	A	ID=15
		0-91610-514-0		1404-	01	AB	ID=15
7		NUT; STARTER					
		0-91110-514-0		1312-1403	02	A	M14
		0-91110-514-0		1404-	02	AB	M14
10		RELAY; STARTER					
		8-98005-631-1		1312-1403	01	A	(B) 24V NIKKO
		8-98005-631-1		1404-	01	AB	(B) 24V NIKKO
		8-98167-173-0		1312-1403	01	A	(A) 24V 10A
		8-98167-173-0		1404-	01	AB	(A) 24V 10A
11		BOLT; RELAY STARTER					
		0-28650-820-0		1312-1403	02	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	M8X20 FLANGE IDN
16		BOLT; GEN					
		0-28050-610-0		1312-1403	01	A	(B) M6X10 FLANGE IDN
		0-28050-610-0		1404-	01	AB	(B) M6X10 FLANGE IDN
		1-09000-133-1		1312-1403	01	A	(A) M14X135
		1-09000-133-1		1404-	01	AB	(A) M14X135
17		WASHER; PL,GEN					
		0-91610-514-0		1312-1403	01	A	ID=15
		0-91610-514-0		1404-	01	AB	ID=15
18		WASHER; LK,GEN					
		0-91510-514-0		1312-1403	01	A	ID=14.2
		0-91510-514-0		1404-	01	AB	ID=14.2
19		BRACKET; GEN					
		8-98082-615-1		1312-1403	01	A	
		8-98082-615-1		1404-	01	AB	
23		NUT; GEN					
		0-91110-514-0		1312-1403	01	A	M14
		0-91110-514-0		1404-	01	AB	M14
26		BOLT; GEN BRKT					

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
26		0-28151-040-0		1312-1403	02	A	(B) M10X40 FLANGE
		0-28151-040-0		1404-	02	AB	(B) M10X40 FLANGE
		0-28151-080-0		1312-1403	02	A	(A) M10X80 FLANGE
		0-28151-080-0		1404-	02	AB	(A) M10X80 FLANGE
56	B	SWITCH; OIL PRESSURE WARNING					
		1-82410-170-1		1312-1403	01	A	
		1-82410-170-1		1404-	01	AB	
101		BOLT; HARNESS					
		0-28650-840-0		1312-1403	04	A	M8X40 FLANGE
		0-28650-840-0		1404-	04	AB	M8X40 FLANGE
260		SENSOR; WATER TEMP					
		8-98023-883-0		1312-1403	01	A	MITSUBISHI
		8-98023-883-0		1404-	01	AB	MITSUBISHI
292		WASHER; LK,STARTER					
		0-91510-514-0		1312-1403	01	A	ID=14.2
		0-91510-514-0		1404-	01	AB	ID=14.2
293		CABLE; STARTER EARTH					
		8-97621-357-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) L=430
		8-98131-856-0		1312-1401	01	A	L=420
		8-98131-856-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=420
		8-98131-856-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=420
		8-98131-856-0		1404-	01	B	L=420
296		NUT; RELAY,STARTER					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
375		BRACKET					
		8-98131-726-0		1312-1401	01	A	
		8-98131-726-0		1402-1403	01	A	EXC. MIXER CHASSIS<6NR>
		8-98131-726-0		1404-	01	A	EXC. MIXER CHASSIS<6NR>
		8-98131-726-0		1404-	01	B	
379		BOLT; BRKT					
		8-97087-205-0		1312-1401	01	A	M10X25 W/LK&PL WASHER
		8-97087-205-0		1402-1403	01	A	EXC. MIXER CHASSIS<6NR> M10X25 W/LK&PL WASHER
		8-97087-205-0		1404-	01	A	EXC. MIXER CHASSIS<6NR> M10X25 W/LK&PL WASHER
		8-97087-205-0		1404-	01	B	M10X25 W/LK&PL WASHER
593		NUT; BRKT					
		0-91180-106-0		1312-1403	04	A	M6 FLANGE
		0-91180-106-0		1404-	04	AB	M6 FLANGE
606		BRACKET; CONT UNIT					
		1-53194-675-0		1312-1403	01	A	
		1-53194-675-0		1404-	01	AB	
613		CONTROL UNIT; ENG					
		8-98247-126-0		1402-1403	01	A	MANUAL TRANSMISSION<X9C> KD ENGINE<7MB> EXC. VIN MODEL YEAR 2014<VZE>

https://truckmanualshub.com/

ENGINE ELECTRICAL CONTROL PARTS


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
613		8-98247-126-0		1404-1404	01	A	MANUAL TRANSMISSION<X9C> KD ENGINE<7MB> EXC. VIN MODEL YEAR 2014<VZE>
		8-98247-126-0		1404-1404	01	B	KD ENGINE<7MB> EXC. VIN MODEL YEAR 2014<VZE>
		8-98247-127-0		1405-	01	A	MANUAL TRANSMISSION<X9C> KD ENGINE<7MB> EXC. VIN MODEL YEAR 2014<VZE>
		8-98247-127-0		1405-	01	B	KD ENGINE<7MB> EXC. VIN MODEL YEAR 2014<VZE>
		8-98229-599-0		1312-1401	01	A	
		8-98229-599-0		1402-1403	01	A	EXC. KD ENGINE<7MB>
		8-98229-599-0		1404-	01	AB	EXC. KD ENGINE<7MB>
690		CONNECTOR					
		8-94390-858-1		1312-1403	02	A	
		8-94390-858-1		1404-	02	AB	
732		BOLT; BRKT					
		0-28651-030-0		1312-1403	03	A	M10X30 FLANGE
		0-28651-030-0		1404-	03	AB	M10X30 FLANGE
740		NUT					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
748		BOLT; CONT UNIT					
		0-28050-612-0		1312-1403	03	A	(A) M6X12 FLANGE
		0-28050-612-0		1404-	03	AB	(A) M6X12 FLANGE
		0-28650-616-0		1312-1403	02	A	(B) M6X16 FLANGE
		0-28650-616-0		1404-	02	AB	(B) M6X16 FLANGE
749		STAY; CONT UNIT					
		1-53194-595-3		1312-1403	01	A	
		1-53194-595-3		1404-	01	AB	
752		GASKET					ALSO INCLUDED IN GASKET SET(ENGINE).
		8-94391-310-0		1312-1403	02	A	
		8-94391-310-0		1404-	02	AB	
813		HARNESS; INJECTOR					
		8-98204-717-0		1312-1403	01	A	(A) FRONT
		8-98204-717-0		1404-	01	AB	(A) FRONT
		8-98204-718-0		1312-1403	01	A	(B) REAR
		8-98204-718-0		1404-	01	AB	(B) REAR
836		BOLT; CONNECTOR					
		0-28050-812-0		1312-1403	02	A	M8X12 FLANGE
		0-28050-812-0		1404-	02	AB	M8X12 FLANGE
897		DRM					
		8-97948-260-1		1312-1403	01	A	IDN
		8-97948-260-1		1404-	01	AB	IDN
898		SENSOR; BOOST					
		8-98009-418-0		1312-1403	01	A	
		8-98009-418-0		1404-	01	AB	
0-12		Move to 0-12					
0-33		Move to 0-33					
0-61		Move to 0-61					
8-10		Move to 8-10					
8-15		Move to 8-15					
0-10		Move to 0-10					
0-11		Move to 0-11					

https://truckmanualshub.com/


ENGINE ELECTRICAL CONTROL PARTS

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
0-25		Move to 0-25					
0-31		Move to 0-31					
8-28		Move to 8-28					
1-41		Move to 1-41					
1-45		Move to 1-45					
5-01		Move to 5-01					
5-10		Move to 5-10					

https://truckmanualshub.com/

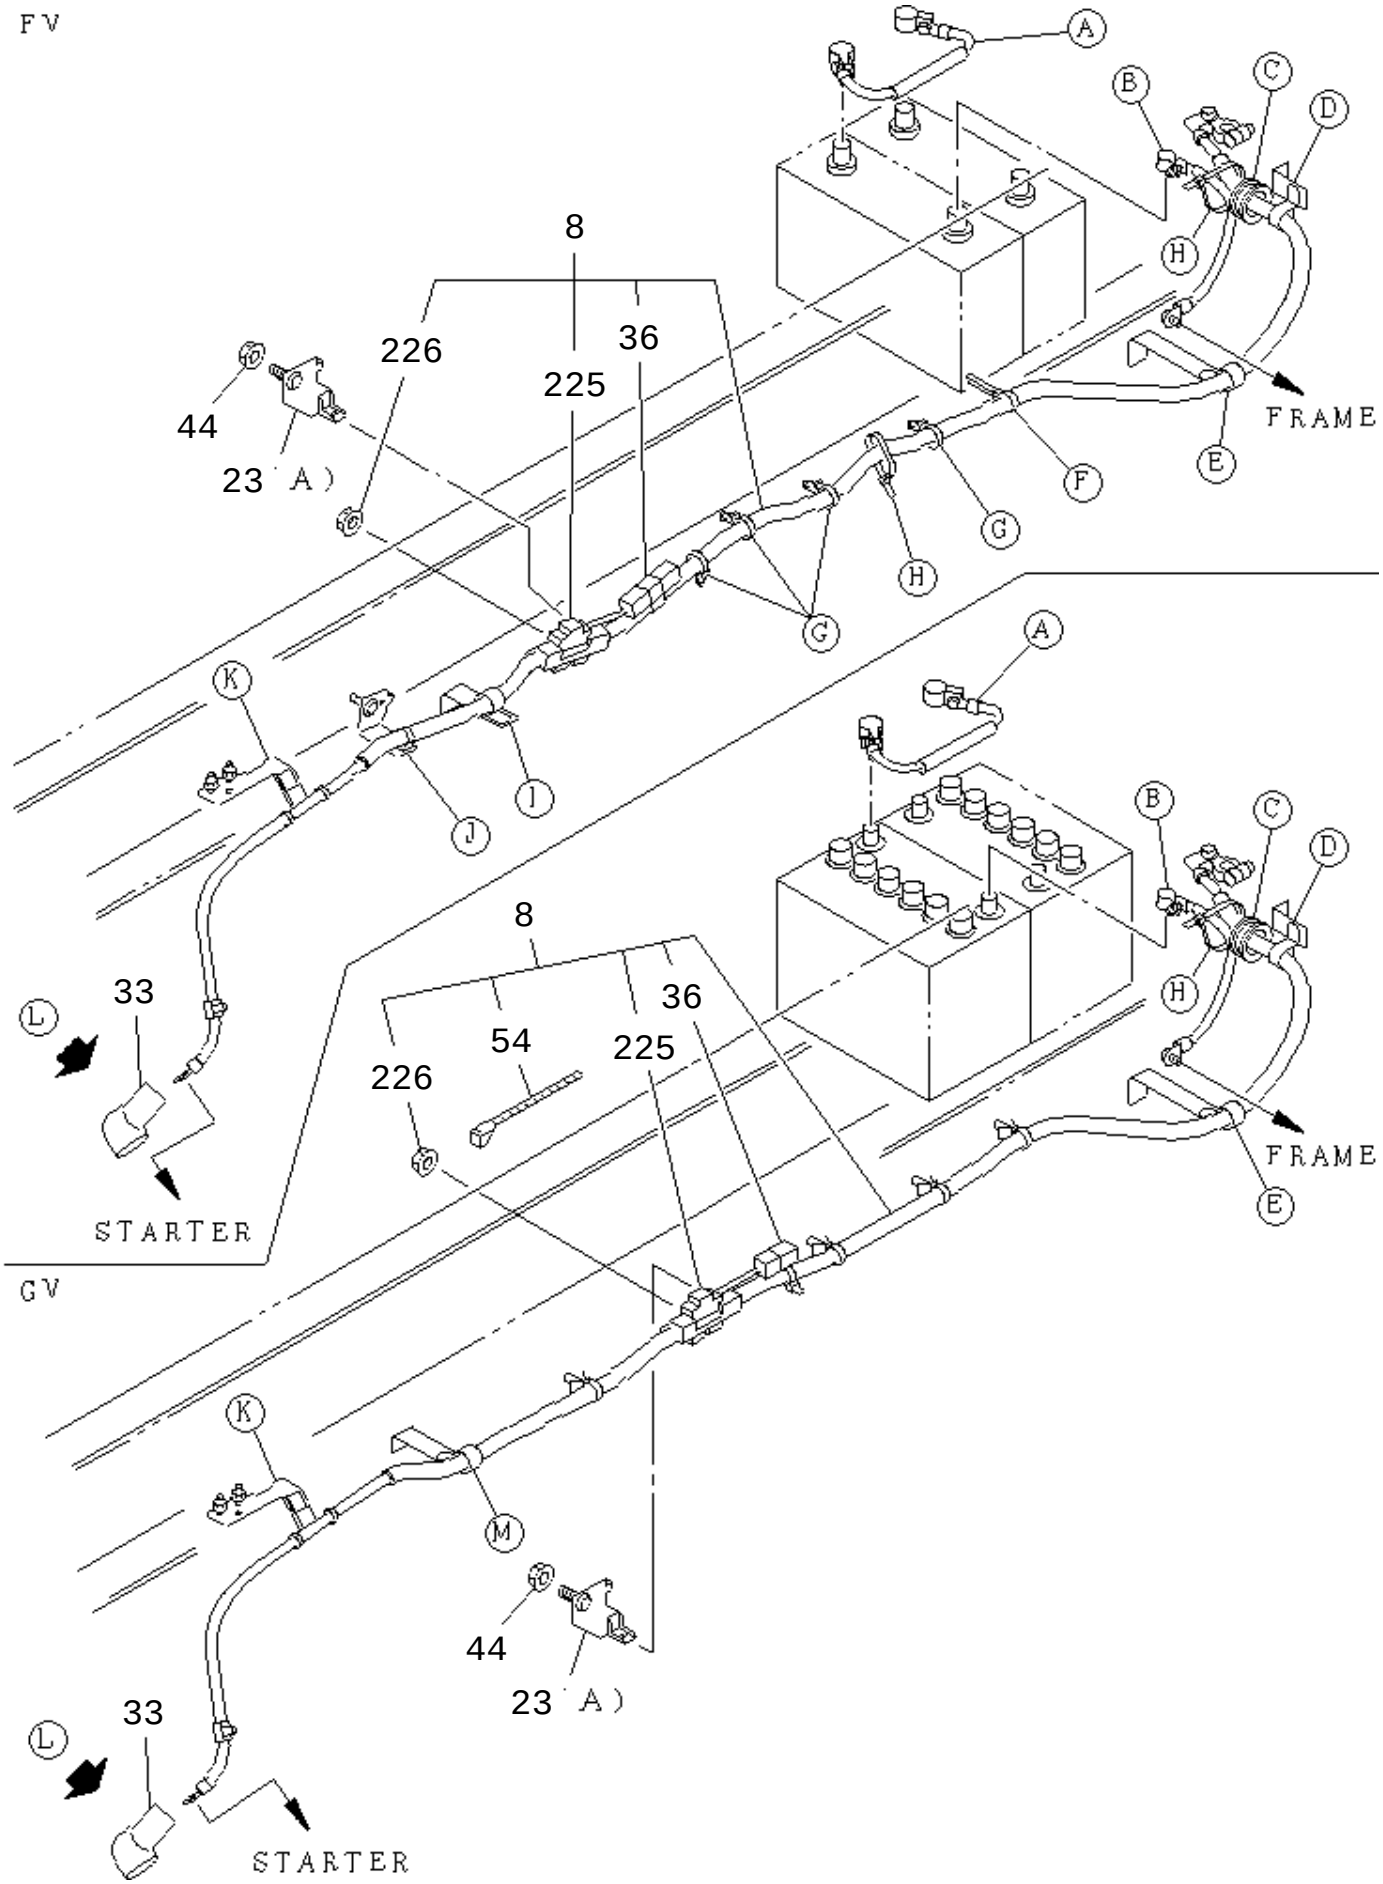

https://truckmanualshub.com/

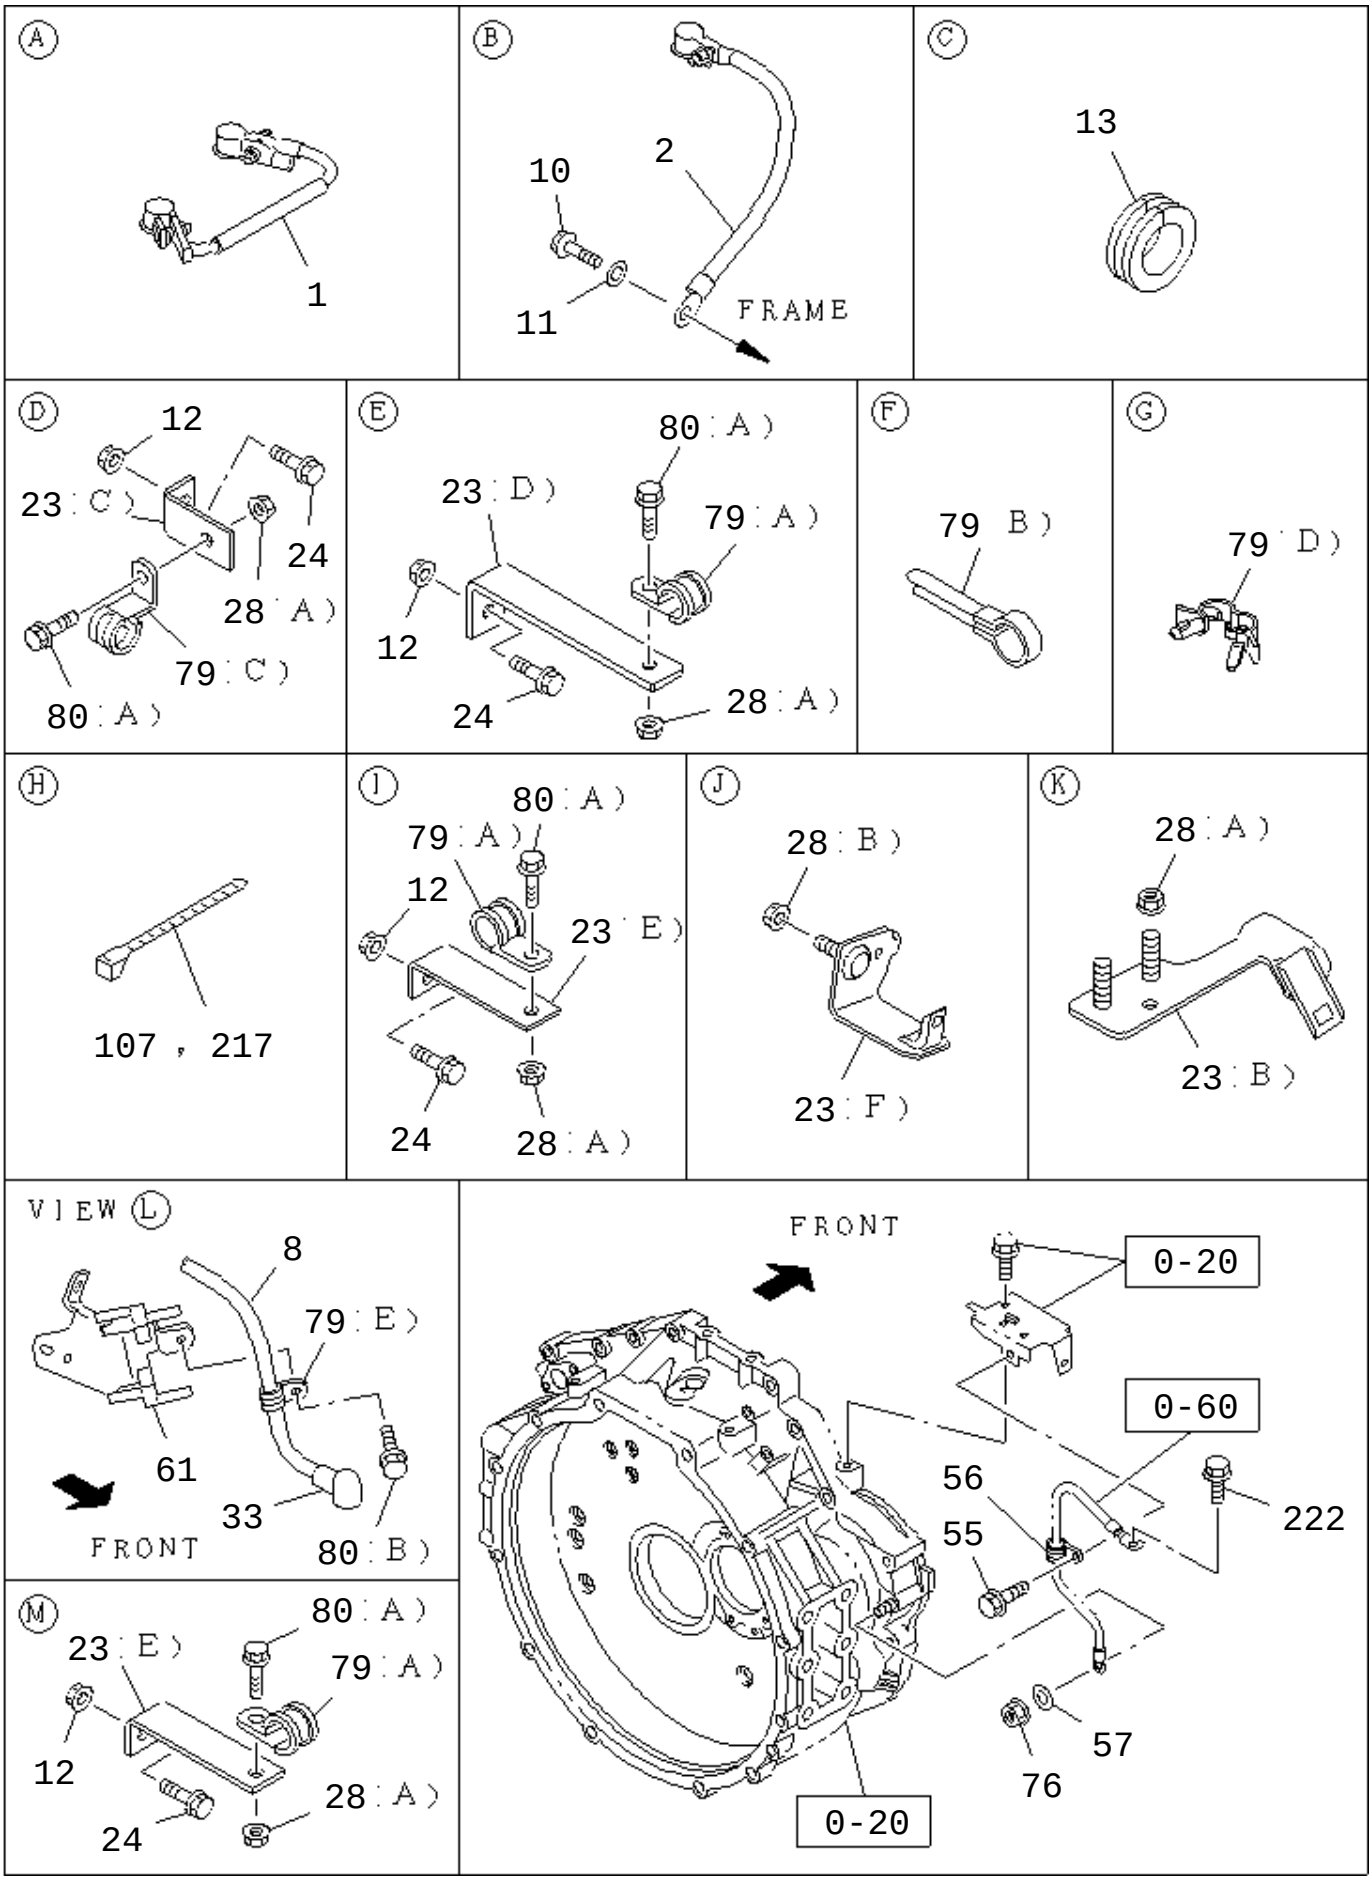

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		CABLE; BATTERY					
		8-98025-412-3		1312-1403	01	A	L=280 IDN
		8-98025-412-3		1404-	01	AB	L=280 IDN
2		CABLE; BATTERY					
		8-98035-647-1		1312-1403	01	A	L=280 IDN
		8-98035-647-1		1404-	01	AB	L=280 IDN
8		CABLE; BATTERY,STARTER					
		8-98248-210-0		1402-	01	A	MIXER CHASSIS<6NR> IDN
		8-98250-280-0		1404-	01	B	IDN
		8-98182-518-0		1312-1401	01	A	IDN
		8-98182-518-0		1402-	01	A	EXC. MIXER CHASSIS<6NR> IDN
10		BOLT; BATTERY CABLE CLIP					
		8-97087-205-0		1312-1403	01	A	M10X25 W/LK&PL WASHER
		8-97087-205-0		1404-	01	AB	M10X25 W/LK&PL WASHER
11		WASHER; BATTERY CABLE EARTH					
		1-09503-265-0		1312-1403	01	A	ID=10.5 OD=22 T=2.0
		1-09503-265-0		1404-	01	AB	ID=10.5 OD=22 T=2.0
12		NUT; BATTERY CABLE CLIP					
		0-91180-108-0		1312-1403	03	A	M8 FLANGE
		0-91180-108-0		1404-	03	AB	M8 FLANGE
13		GROMMET; BATTERY CABLE					
		1-09332-112-0		1312-1403	01	A	ID=32 OD=40 T=23
		1-09332-112-0		1404-	01	AB	ID=32 OD=40 T=23
23		BRACKET; CABLE CLIP TO FRAME					
		8-98091-358-0		1402-	01	A	MIXER CHASSIS<6NR> (F)
		1-47475-304-0		1312-1403	01	A	(C) L=55
		1-47475-304-0		1404-	01	AB	(C) L=55
		1-47475-655-0		1312-1403	01	A	(D) L=145
		1-47475-655-0		1404-	01	AB	(D) L=145
		1-82699-085-0		1312-1403	01	A	(E) L=95
		1-82699-085-0		1404-	01	AB	(E) L=95
		8-98044-882-0		1312-1403	01	A	(A)
		8-98044-882-0		1404-	01	AB	(A)
		8-98201-490-0		1312-1403	01	A	(B)
		8-98201-490-0		1404-	01	AB	(B)
24		BOLT; BRKT TO FRAME					

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
24		0-28650-830-0		1312-1403	03	A	M8X30 FLANGE
		0-28650-830-0		1404-	03	AB	M8X30 FLANGE
28		NUT; BRKT TO FRAME					
		0-91180-210-0		1402-	01	A	MIXER CHASSIS<6NR> (B) M10 FLANGE
		0-91180-108-0		1312-1403	05	A	(A) M8 FLANGE
		0-91180-108-0		1404-	05	AB	(A) M8 FLANGE
33		CAP; INSULATOR					
		1-82699-431-0		1312-1403	01	A	
		1-82699-431-0		1404-	01	AB	
36		FUSIBLE LINK; BATTERY					
		8-97615-498-1		1312-1403	01	A	
		8-97615-498-1		1404-	01	AB	
44		NUT; BRKT					
		0-91180-210-0		1312-1403	01	A	M10 FLANGE
		0-91180-210-0		1404-	01	AB	M10 FLANGE
54		CLIP; BAND,BATTERY CABLE					
		1-09707-176-1		1404-	01	B	L=175
55		BOLT; CLIP,BATTERY CABLE					
		0-28050-816-0		1312-1403	01	A	M8X16 FLANGE
		0-28050-816-0		1404-	01	AB	M8X16 FLANGE
56		CLIP; BATTERY CABLE					
		1-09700-872-0		1312-1403	01	A	ID=16 L=28
		1-09700-872-0		1404-	01	AB	ID=16 L=28
57		WASHER; PL,BATTERY CABLE					
		0-91610-610-0		1312-1403	01	A	ID=10.5 OD=22 T=1.6
		0-91610-610-0		1404-	01	AB	ID=10.5 OD=22 T=1.6
61		BRACKET; BATTERY CABLE					
		8-98051-379-1		1312-1403	01	A	
		8-98051-379-1		1404-	01	AB	
76		NUT; BATTERY CABLE					
		0-91180-210-0		1312-1403	01	A	M10 FLANGE
		0-91180-210-0		1404-	01	AB	M10 FLANGE
79		CLIP; BATTERY CABLE					
		1-09709-293-0		1402-	01	A	MIXER CHASSIS<6NR> (D) ID=13-18 L=26
		1-09700-109-1		1312-1403	01	A	(C) ID=19 L=24 H=21
		1-09700-109-1		1404-	01	AB	(C) ID=19 L=24 H=21
		1-09700-485-0		1312-	01	A	(B) ID=20 L=70
		1-09700-872-0		1312-1403	01	A	(E) ID=16 L=28
		1-09700-872-0		1404-	01	AB	(E) ID=16 L=28
		1-09709-293-0		1312-	03	A	(D) ID=13-18 L=26

https://truckmanualshub.com/

BATTERY AND ENGINE ELECTRICAL PARTS

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
79		8-98019-191-0		1312-1403	02	A	(A) ID=21 L=24
		8-98019-191-0		1404-	02	AB	(A) ID=21 L=24
80		BOLT; BATTERY CABLE CLIP					
		0-28050-816-0		1312-1403	01	A	(B) M8X16 FLANGE
		0-28050-816-0		1404-	01	AB	(B) M8X16 FLANGE
		0-28650-825-0		1312-1403	03	A	(A) M8X25 FLANGE IDN
		0-28650-825-0		1404-	03	AB	(A) M8X25 FLANGE IDN
107		CLIP; BAND					
		5-09707-031-1		1312-1403	01	A	L=140 IDN
		5-09707-031-1		1404-	01	AB	L=140 IDN
217		CLIP; BAND,CABLE					
		5-09707-030-1		1312-	01	A	L=250 IDN
222		BOLT; EARTH CABLE					
		8-97087-205-0		1312-1403	01	A	M10X25 W/LK&PL WASHER
		8-97087-205-0		1404-	01	AB	M10X25 W/LK&PL WASHER
225		BLOCK; TERMINAL					
		8-98029-689-0		1312-1403	01	A	
		8-98029-689-0		1404-	01	AB	
226		NUT; FUSIBLE LINK					
		8-94424-179-0		1312-1403	01	A	M6 W/LK WASHER
		8-94424-179-0		1404-	01	AB	M6 W/LK WASHER
0-20		Move to 0-20					
0-60		Move to 0-60					

https://truckmanualshub.com/

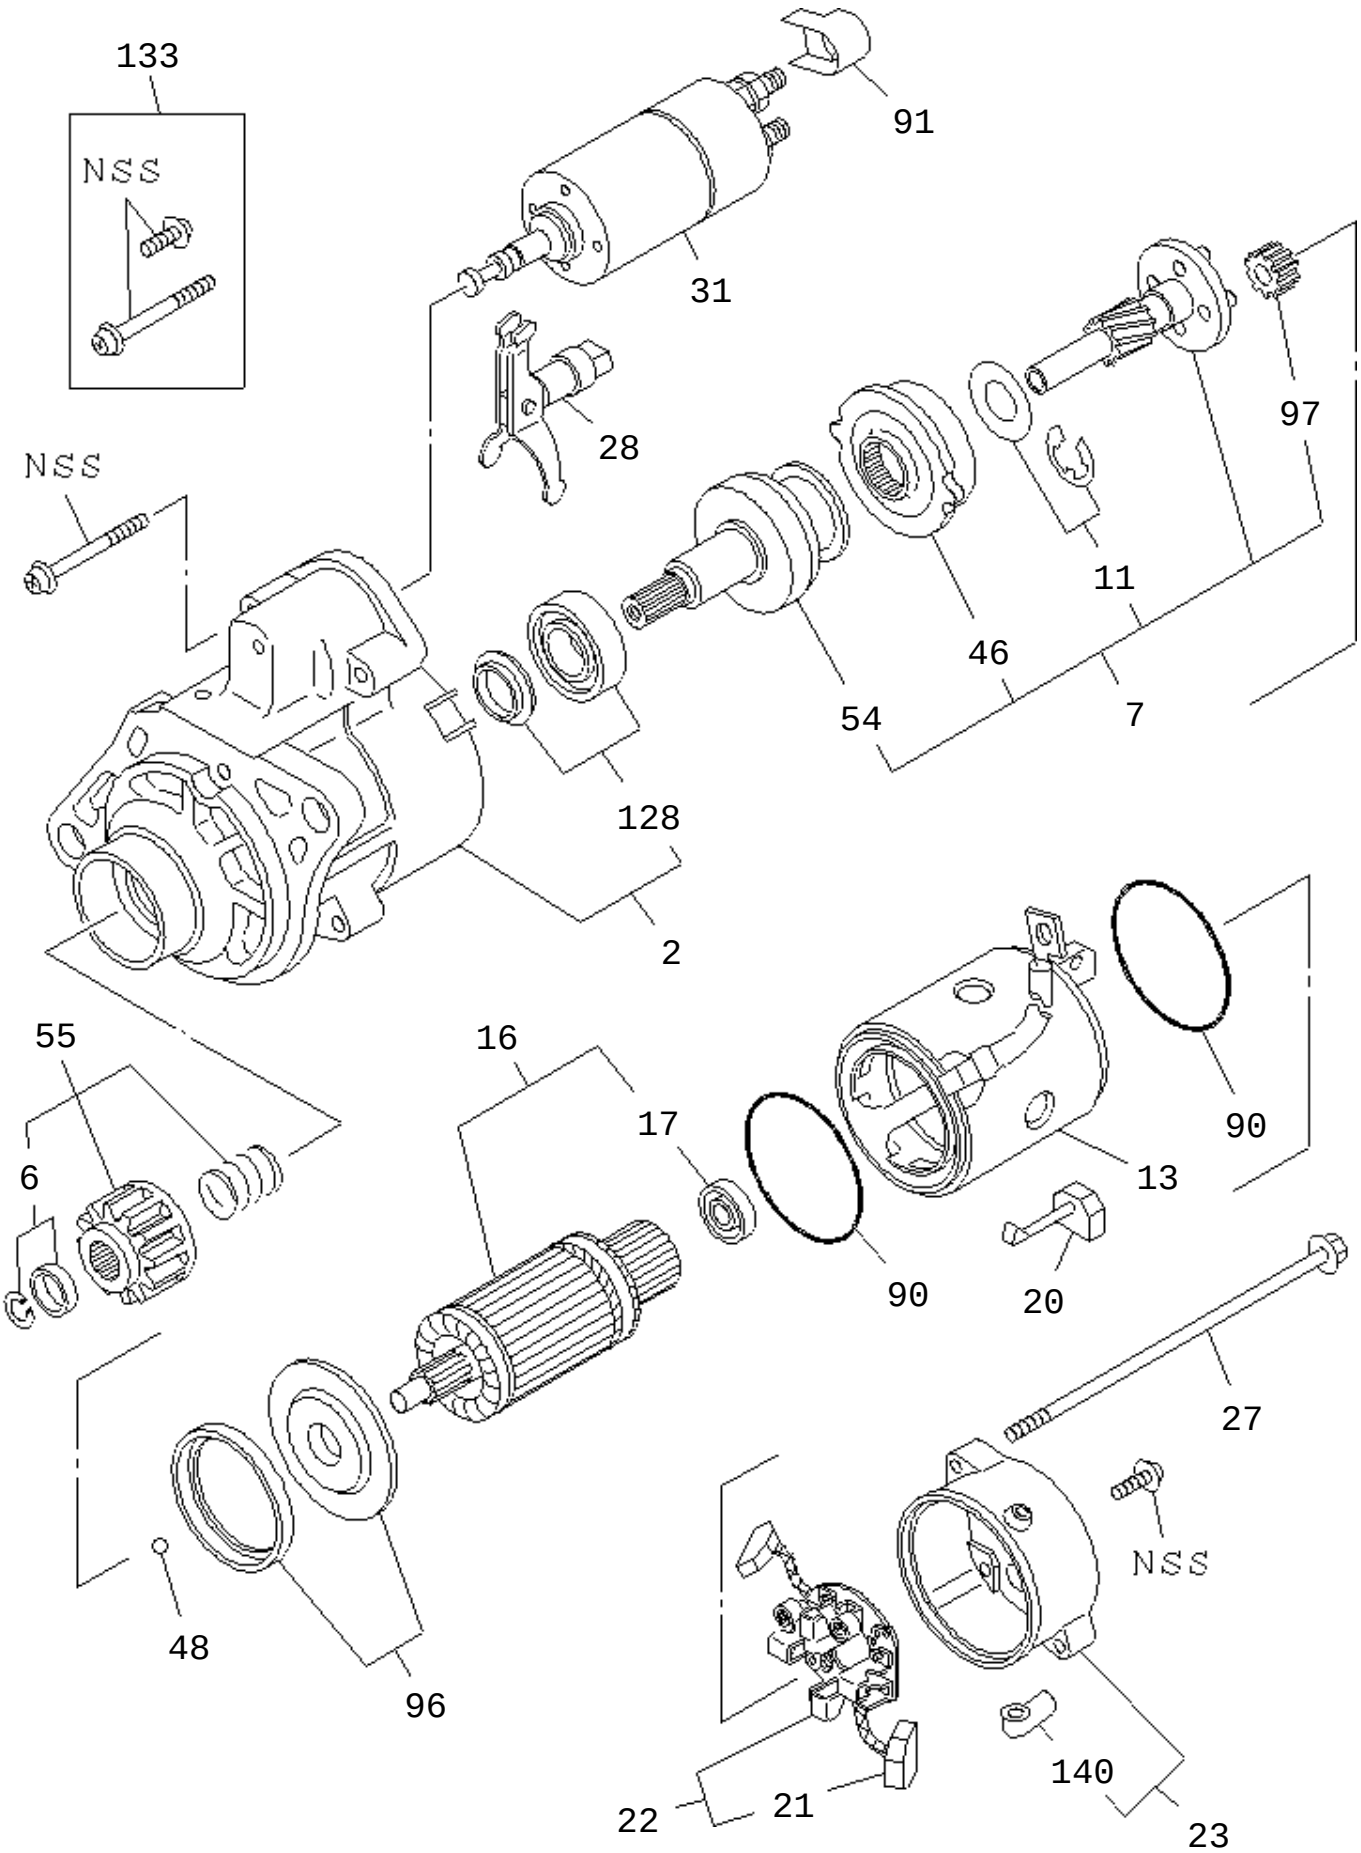

https://truckmanualshub.com/

0-65 STARTER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	RESTRICTION/REMARKS A 8981412063
2		CASE; PINION,STARTER				
		8-98152-868-0			01	
		8-98152-868-0			01	
6		STOPPER; PINION STARTER				
		8-94475-688-0			01	
		8-94475-688-0			01	
7		CLUTCH ASM; PINION,STARTER				
		1-81129-759-0		-1407	01	
		1-81129-759-0		-1407	01	
		8-98245-549-0		1408-	01	
		8-98245-549-0		1408-	01	
11		WASHER; GEAR SHAFT STARTER				
		8-97116-484-0			01	
		8-97116-484-0			01	
13		YOKE; STARTER				
		8-98152-277-0			01	
		8-98152-277-0			01	
16		ARMATURE; STARTER				
		1-81121-075-0			01	
		1-81121-075-0			01	
17		BEARING; ARMATURE,STARTER				
		1-81129-837-0			01	
		1-81129-837-0			01	
20		BRUSH; (+),STARTER				
		1-81116-066-0			02	
		1-81116-066-0			02	
21		SPRING; BRUSH HOLDER STARTER				
		1-81129-768-0			04	
		1-81129-768-0			04	
22		HOLDER; BRUSH STARTER				
		1-81121-066-0		-1407	01	
		1-81121-066-0		-1407	01	
		8-98245-553-0		1408-	01	
		8-98245-553-0		1408-	01	
23		COVER; RR COVER STARTER				
		1-81115-229-0			01	
		1-81115-229-0			01	
27		BOLT; THROUGH,STARTER				
		1-81129-769-0			01	
		1-81129-769-0			01	
28		LEVER; SHIFT,STARTER				
		1-81129-762-0			01	
		1-81129-762-0			01	
31		SWITCH; ENGAGE STARTER				
		8-98237-257-0			01	
		8-98237-257-0			01	
46		GEAR; CLU STARTER				
		8-97178-153-0		-1407	01	
		8-97178-153-0		-1407	01	
		8-97116-485-0		1408-	01	
		8-97116-485-0		1408-	01	
48		BALL; PINION,STARTER				
		8-97116-515-0			01	
		8-97116-515-0			01	
54		CLUTCH; PINION,STARTER				
		1-81129-761-0			01	
		1-81129-761-0			01	
55		PINION; CLU,STARTER				
		8-98060-835-0			01	
		8-98060-835-0			01	
90		GASKET; ARMATURE				
		1-81129-767-0			02	
		1-81129-767-0			02	
91		COVER; STARTER				
		1-81129-764-0			01	
		1-81129-764-0			01	
96		GASKET; FRT CASE				
		8-97116-489-0			01	
		8-97116-489-0			01	
97		GEAR; STARTER				
		8-97116-490-0			04	
		8-97116-490-0			04	
128		BEARING; STARTER				

https://truckmanualshub.com/

0-65 STARTER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	RESTRICTION/REMARKS A 8981412063
128		1-81129-758-0			01	
		1-81129-758-0			01	
133		SCREW SET; STARTER				
		1-81129-765-0			01	
		1-81129-765-0			01	
140		GROMMET; RR COVER				
		8-97376-390-0			01	
		8-97376-390-0			01	

https://truckmanualshub.com/

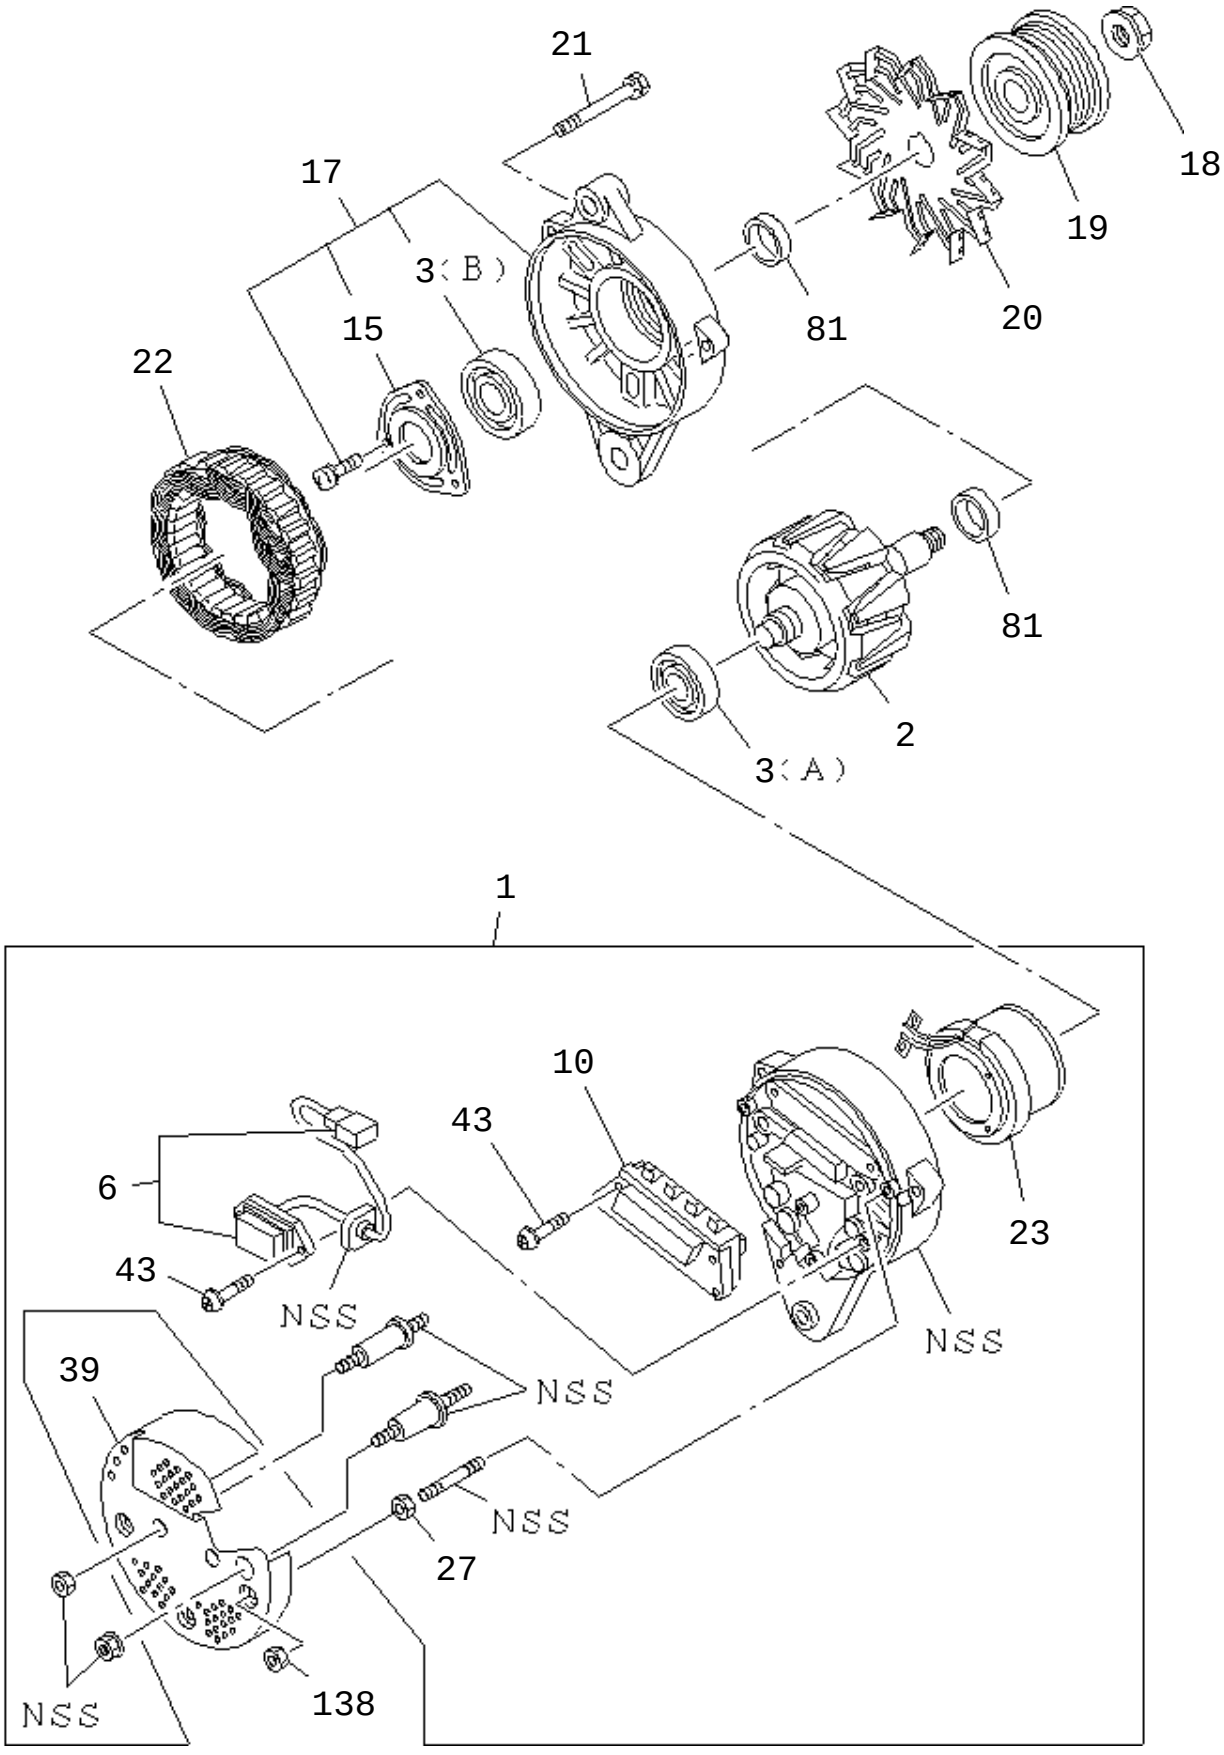


https://truckmanualshub.com/

0-66 GENERATOR

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	RESTRICTION/REMARKS A 8980134614
1		COVER ASM; RR,GEN				
		8-98040-684-0			01	
		8-98040-684-0			01	
2		ROTOR; GEN				
		8-98040-638-0			01	
		8-98040-638-0			01	
3		BEARING; ROTOR,GEN				
		1-81229-723-0			01	(A)
		1-81229-723-0			01	(A)
		1-81229-758-0			01	(B)
		1-81229-758-0			01	(B)
6		REGULATOR ASM; VOLTAGE,GEN				
		8-98040-688-0			01	
		8-98040-688-0			01	
10		RECTIFIER; GEN				
		8-98040-686-0			01	
		8-98040-686-0			01	
15		RETAINER; ROTOR,GEN				
		1-81229-760-1			01	
		1-81229-760-1			01	
17		COVER ASM; FRT,GEN				
		8-97382-872-0			01	
		8-97382-872-0			01	
18		NUT; PULLEY,GEN				
		8-98040-643-0			01	
		8-98040-643-0			01	
19		PULLEY; GEN				
		8-98040-641-0			01	
		8-98040-641-0			01	
20		FAN; GEN				
		8-97382-874-0			01	
		8-97382-874-0			01	
21		BOLT; THROUGH,GEN				
		1-81229-382-0			03	IDN
		1-81229-382-0			03	IDN
22		STATOR; GEN				
		8-98040-639-0			01	
		8-98040-639-0			01	
23		COIL; ROTOR GEN				
		8-98040-645-0			01	
		8-98040-645-0			01	
27		NUT; RECTIFIER,GEN				
		8-98040-687-0			01	
		8-98040-687-0			01	
39		COVER; END,RR COVER,GEN				
		8-98181-103-0			01	
		8-98181-103-0			01	
43		SCREW; RR END COVER				
		1-81229-476-0			03	
		1-81229-476-0			03	
81		SPACER; ROTOR,GEN				
		8-97382-870-0			02	
		8-97382-870-0			02	
138		NUT; COVER,GENERATOR				
		8-98040-690-0			03	
		8-98040-690-0			03	

https://truckmanualshub.com/

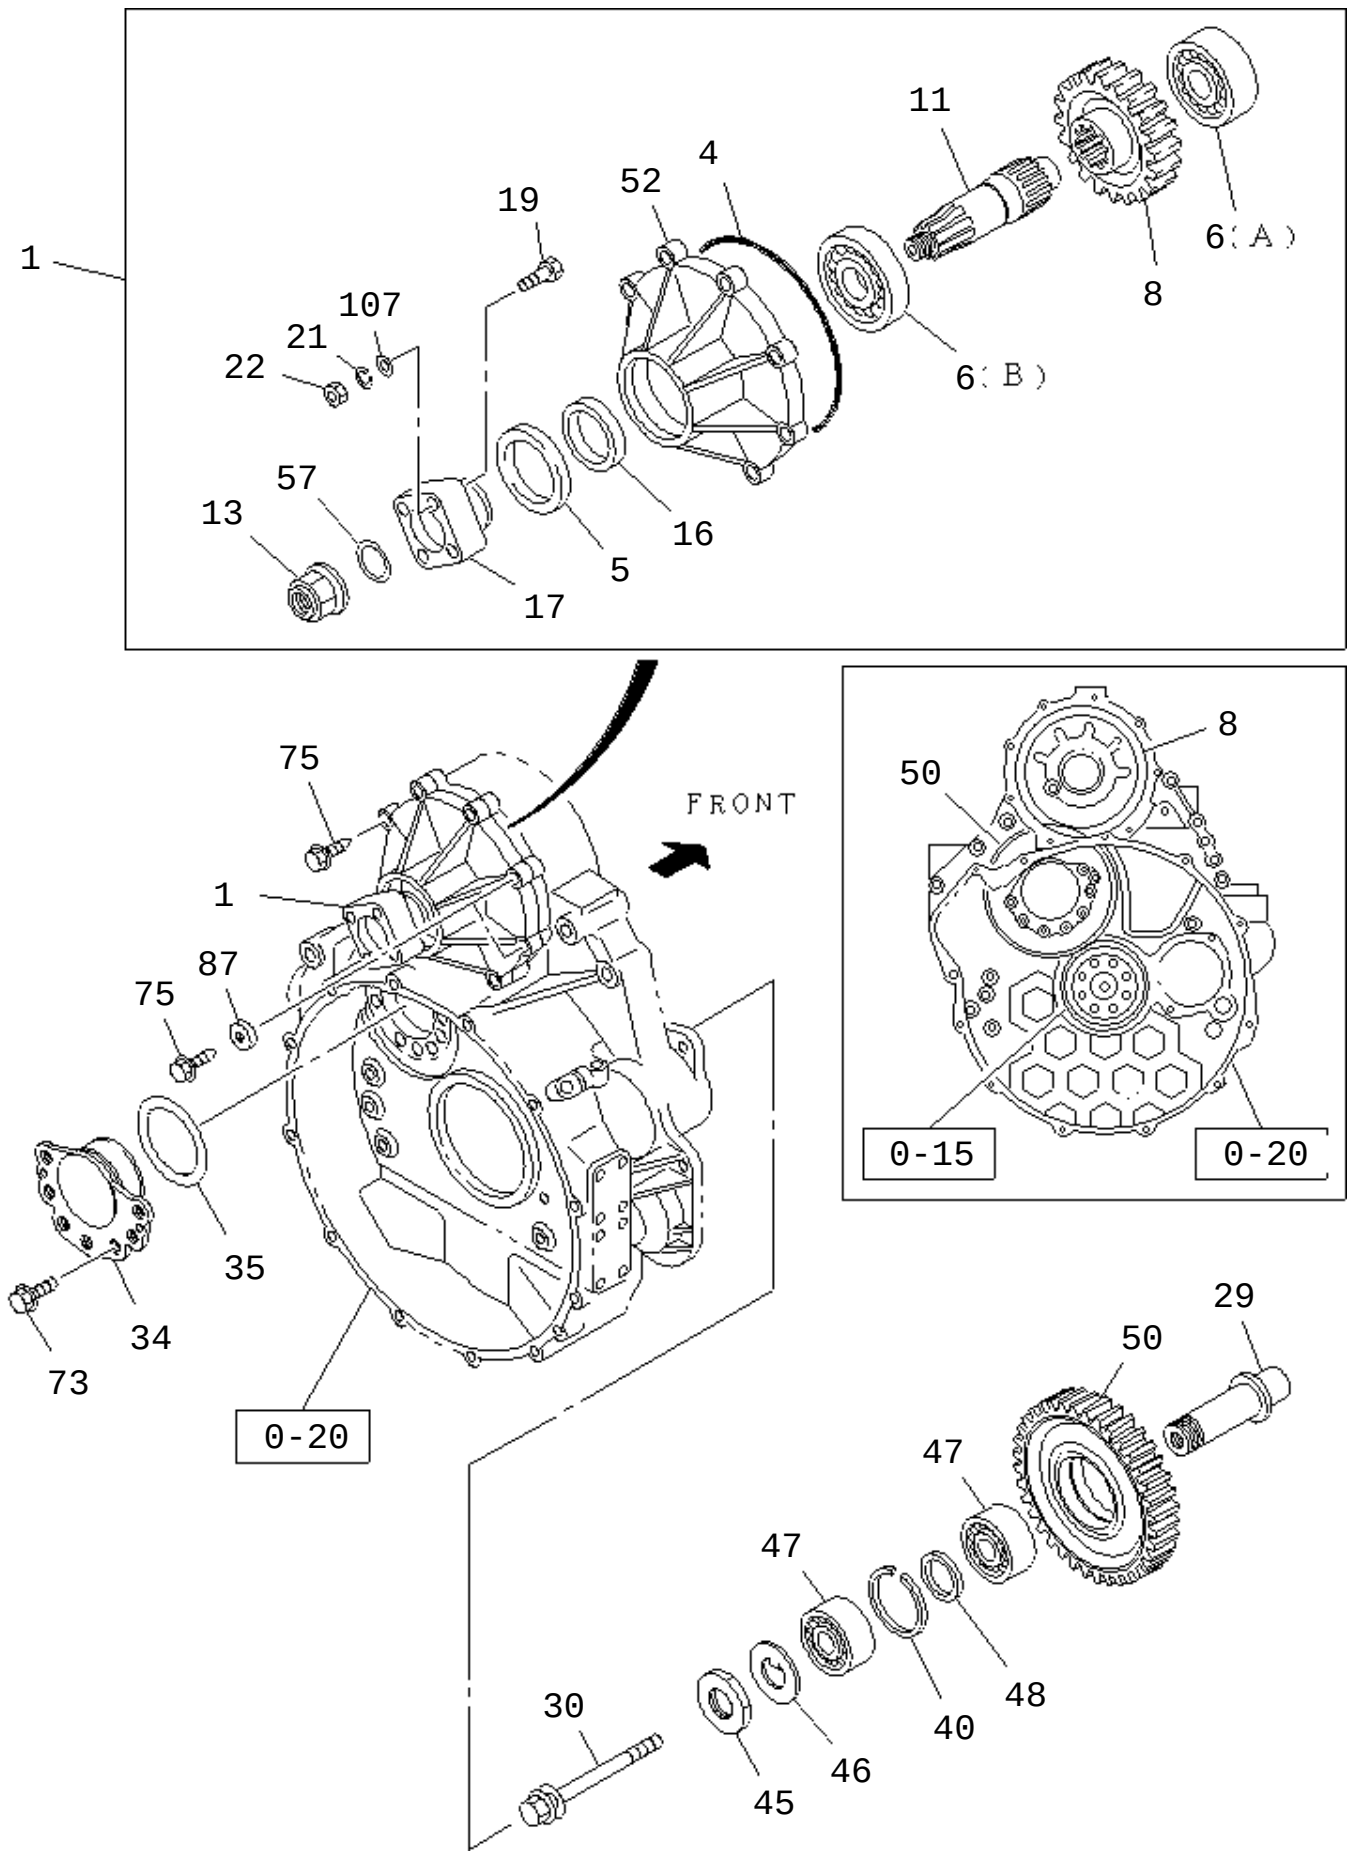

https://truckmanualshub.com/

0-90 POWER TAKE OFF; FLYWHEEL


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		POWER TAKE OFF ASM; ENG RR 8-98011-447-1		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
4		GASKET; BRG CASE 9-09720-519-0		1402-	01	A	ALSO INCLUDED IN GASKET SET(ENGINE). POWER TAKE OFF-FLYWHEEL(6SZ)
5		SEAL; OIL,BRG CASE,PTO 8-97388-533-0		1402-	01	A	ALSO INCLUDED IN GASKET SET(ENGINE). POWER TAKE OFF-FLYWHEEL(6SZ)
6		BEARING; FLYWHEEL PTO 8-98011-439-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98066-078-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (A)
8		GEAR; FLYWHEEL PTO 8-98011-441-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) Z=60
11		SHAFT; PTO,FLYWHEEL 8-98011-444-1		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
13		NUT; SHAFT,FLYWHEEL PTO 8-97360-410-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) M27 H=25
16		THROWER; OIL,FLYWHEEL PTO 8-98011-449-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
17		FLANGE; PTO,FLYWHEEL 1-38189-010-2		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
19		BOLT; FLANGE 0-20951-240-0		1402-	04	A	POWER TAKE OFF-FLYWHEEL(6SZ) M12X40
21		WASHER; LK,FLANGE 0-91510-812-0		1402-	04	A	POWER TAKE OFF-FLYWHEEL(6SZ) ID=12.2
22		NUT; FLANGE 0-91110-512-0		1402-	04	A	POWER TAKE OFF-FLYWHEEL(6SZ) M12
29		SPINDLE; IDLE GEAR,PTO 8-94396-895-1		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
30		BOLT; SPINDLE 1-09070-043-1		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) M14X125 FLANGE W/PL WASHER
34		COVER; PTO,FLYWHEEL 8-97600-138-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
35		GASKET; COVER 8-94396-903-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
40		SPACER; IDLE GEAR 1-38226-015-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=3
45		NUT; BRG,IDLE GEAR 8-98013-634-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) M45
46		WASHER; LK,BRG 1-09533-003-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) ID=47
47		BEARING; TAPER ROLLER 9-00032-209-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) ID=45 OD=85
48		SPACER; INNER 1-38226-016-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.05
		1-38226-017-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.12
		1-38226-018-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.19
		1-38226-019-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.26
		1-38226-020-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.33
		1-38226-021-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.40
		1-38226-022-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.47
		1-38226-023-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.54
		1-38226-024-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.61
		1-38226-025-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.68

https://truckmanualshub.com/


0-90 POWER TAKE OFF; FLYWHEEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
48		1-38226-026-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.75
		1-38226-027-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.82
		1-38226-028-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.89
		1-38226-029-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=6.96
		1-38226-030-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=7.03
		1-38226-031-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=7.10
		1-38226-032-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=7.17
		1-38226-033-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=7.24
		1-38226-034-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=7.31
		1-38226-035-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=7.38
		1-38226-036-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) T=7.45
50		GEAR; IDLE A					
		8-98011-442-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) Z=72
52		CASE; BRG,PTO					
		8-98011-446-1		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
57		GASKET; FLANGE,PTO,FLYWHEEL					
		1-09623-285-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
73		BOLT; COVER,PTO					
		0-28151-025-0		1402-	07	A	POWER TAKE OFF-FLYWHEEL(6SZ) M10X25 FLANGE
75		BOLT; COVER					
		0-28151-030-0		1402-	06	A	POWER TAKE OFF-FLYWHEEL(6SZ) M10X30 FLANGE
87		TUBE; DISTANCE,COVER					
		9-53319-007-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ)
107		WASHER; PL,FLANGE					
		0-91610-512-0		1402-	04	A	POWER TAKE OFF-FLYWHEEL(6SZ) ID=12.5 OD=22 IDN
0-15		Move to 0-15					
0-20		Move to 0-20					


https://truckmanualshub.com/

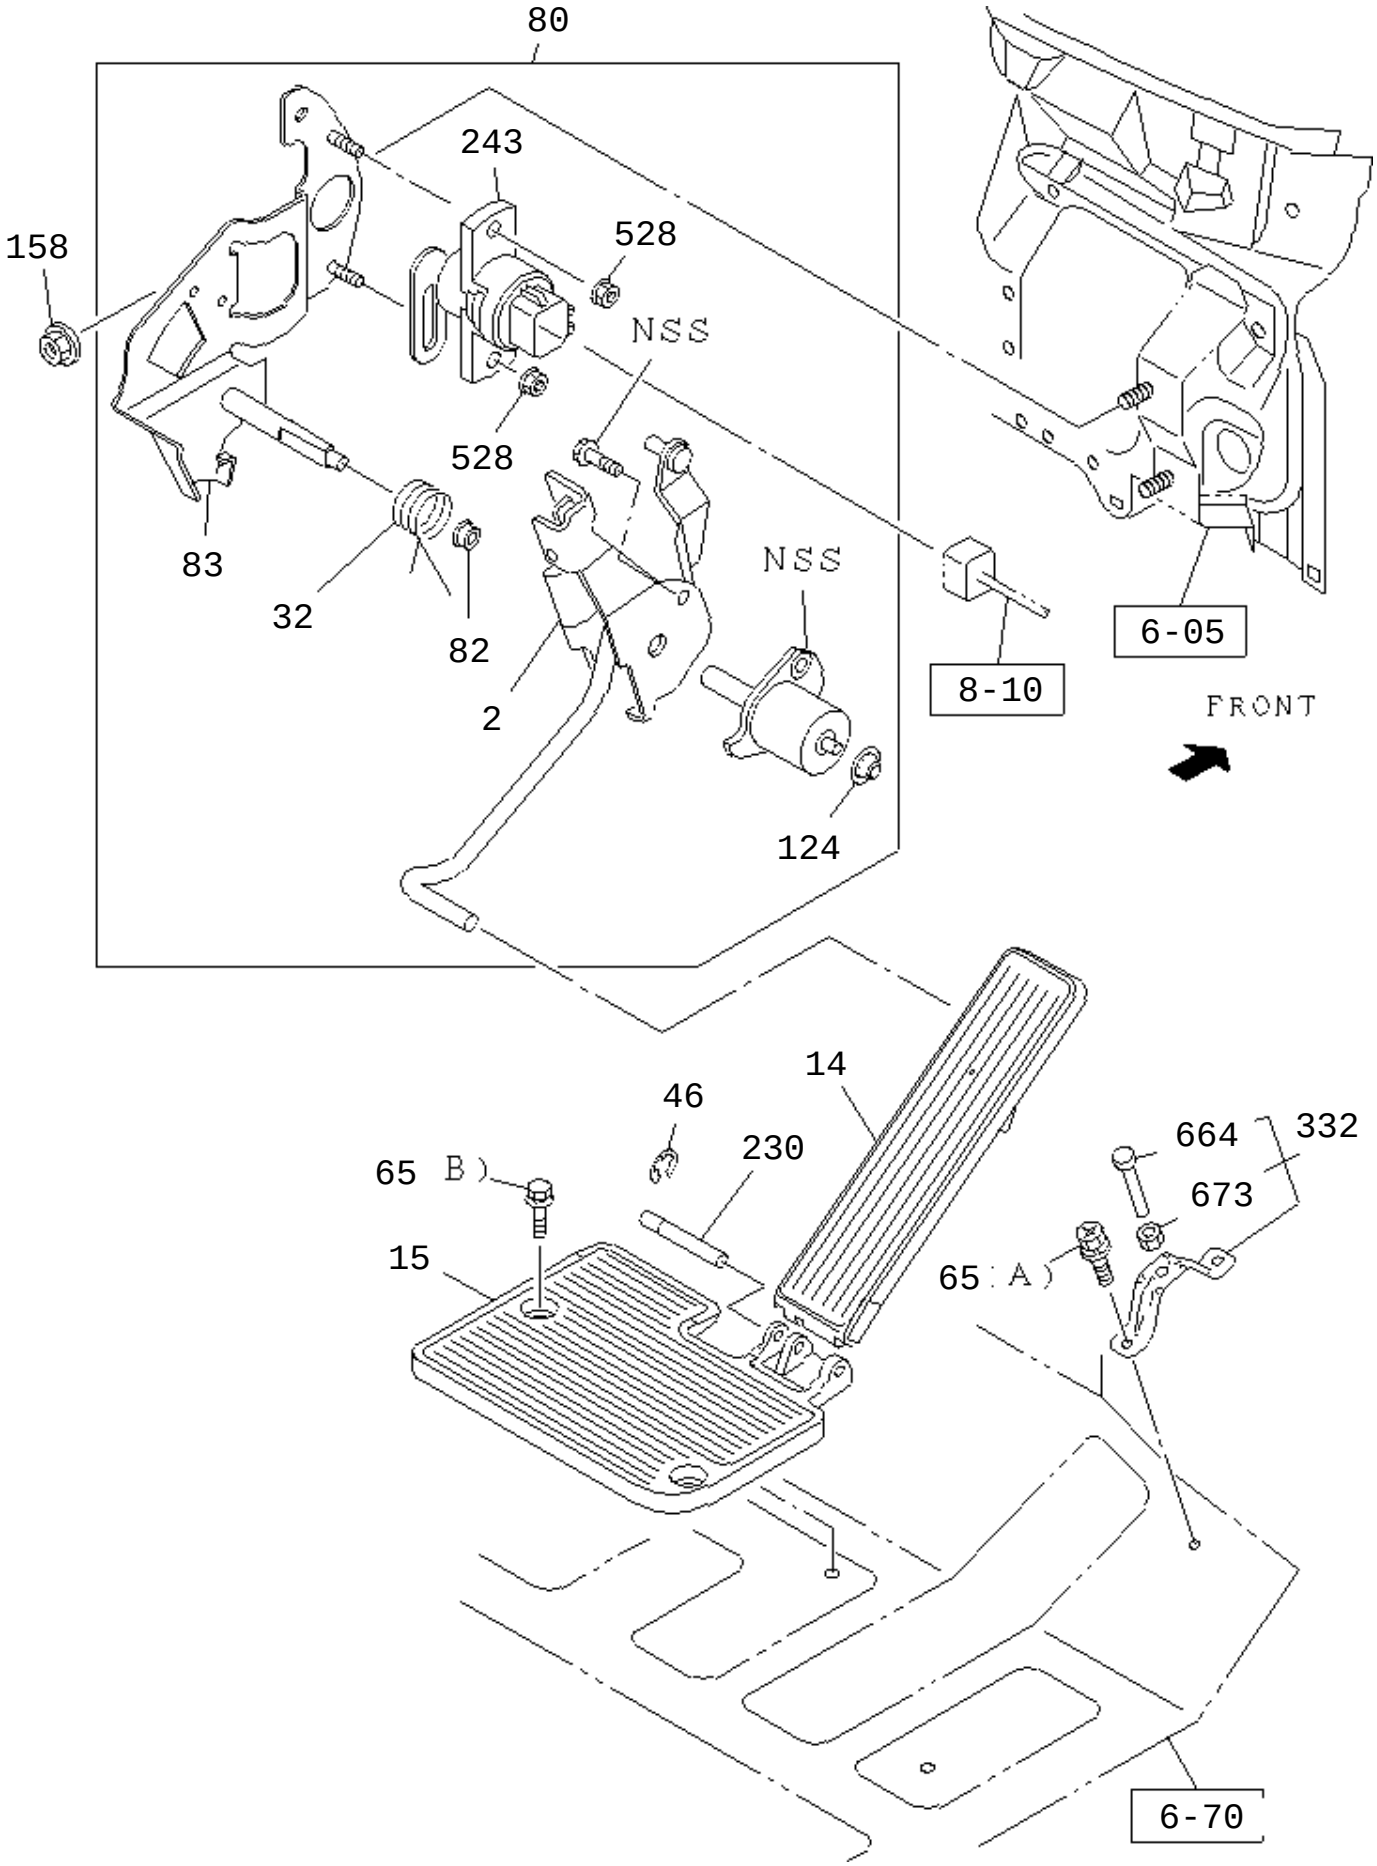

https://truckmanualshub.com/

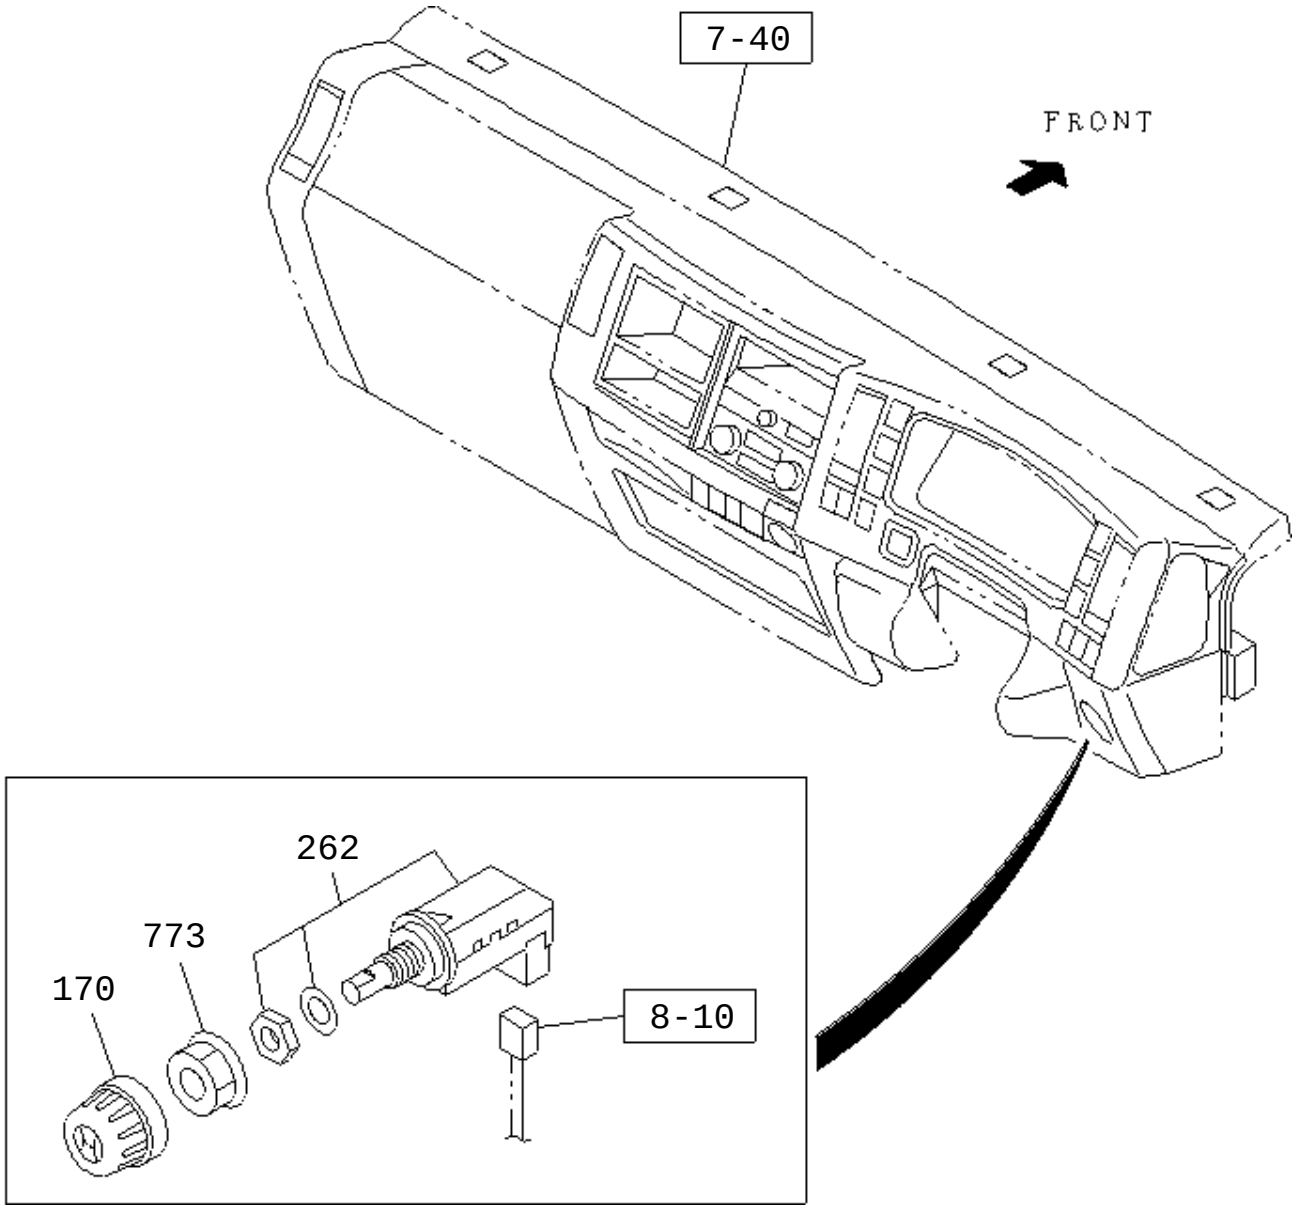

https://truckmanualshub.com/

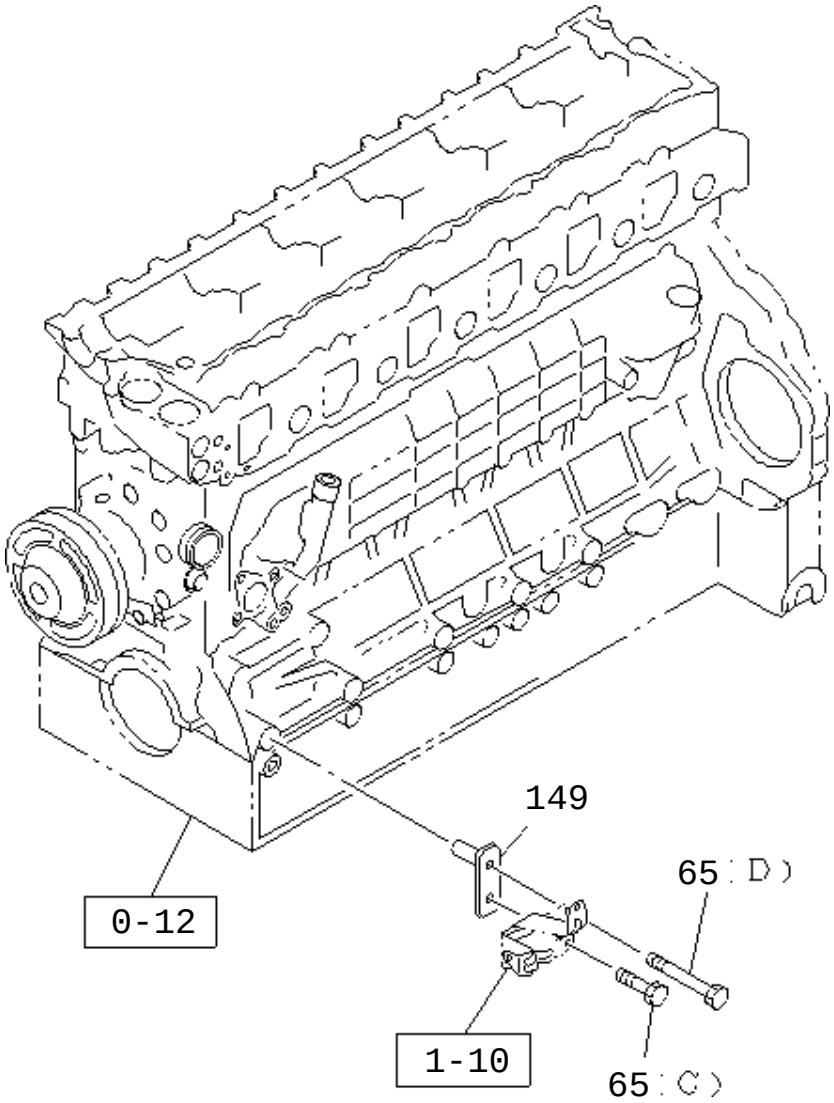


https://truckmanualshub.com/


1-01 ACCELERATOR PEDAL AND CONTROL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
2		LEVER; ENG CONT					
		8-98049-120-1		1312-	01	A	
14		PAD; PEDAL,ACCEL					
		8-97859-101-0		1312-	01	A	
15		STAND; HEEL,ACCEL PEDAL					
		8-98022-259-2		1312-	01	A	
32		SPRING; RETURN,ACCEL PEDAL					
		8-98031-665-0		1312-	01	A	
46		RING; SNAP,ACCEL CONT PEDAL					
		0-91805-504-0		1312-	01	A	ID=4
65		BOLT					
		0-16861-060-0		1312-	01	A	(D) M10X60
		0-28151-020-0		1312-	01	A	(C) M10X20 FLANGE
		1-09980-543-0		1312-	02	A	(B) M6X28 W/LK&PL WASHER
		8-94279-201-0		1312-	02	A	(A) M6X19.5 W/LK&PL WASHER
80		LINK ASM; ENG CONT					
		8-98038-418-4		1312-	01	A	
82		BUSHING; ENG CONT LVR					
		8-97581-053-0		1312-	01	A	
83		BRACKET; CONT LINK					
		8-98020-217-0		1312-	01	A	
124		NUT; LEVER					
		8-94368-617-0		1312-	01	A	ID=7.9 PUSH NUT
149		BRACKET; ENG CONT					
		8-98045-009-0		1312-	01	A	
158		NUT; BRKT					
		0-91180-108-0		1312-	02	A	M8 FLANGE
170		KNOB					
		8-98013-420-0		1312-	01	A	
230		PIN; JOINT,ACCEL PEDAL TO BRKT					
		8-98026-806-0		1312-	01	A	
243		SENSOR; ACCEL					
		8-98131-263-0		1312-	01	A	
262		SWITCH; ACCEL,IDLE					
		8-98013-418-0		1312-	01	A	
332		BRACKET; ACCEL PEDAL STOPPER					
		8-98011-468-2		1312-	01	A	
528		NUT; ACCEL SENSOR					
		8-94169-022-0		1312-	02	A	M5
664		BOLT; STOPPER					
		0-20850-840-0		1312-	01	A	M8X40
673		NUT; STOPPER					
		0-91110-508-0		1312-	01	A	M8 IDN
773		HOLDER; ACCEL PEDAL					
		8-97352-127-0		1312-	01	A	
6-05		Move to 6-05					
6-70		Move to 6-70					
8-10		Move to 8-10					
7-40		Move to 7-40					
0-12		Move to 0-12					
1-10		Move to 1-10					


https://truckmanualshub.com/

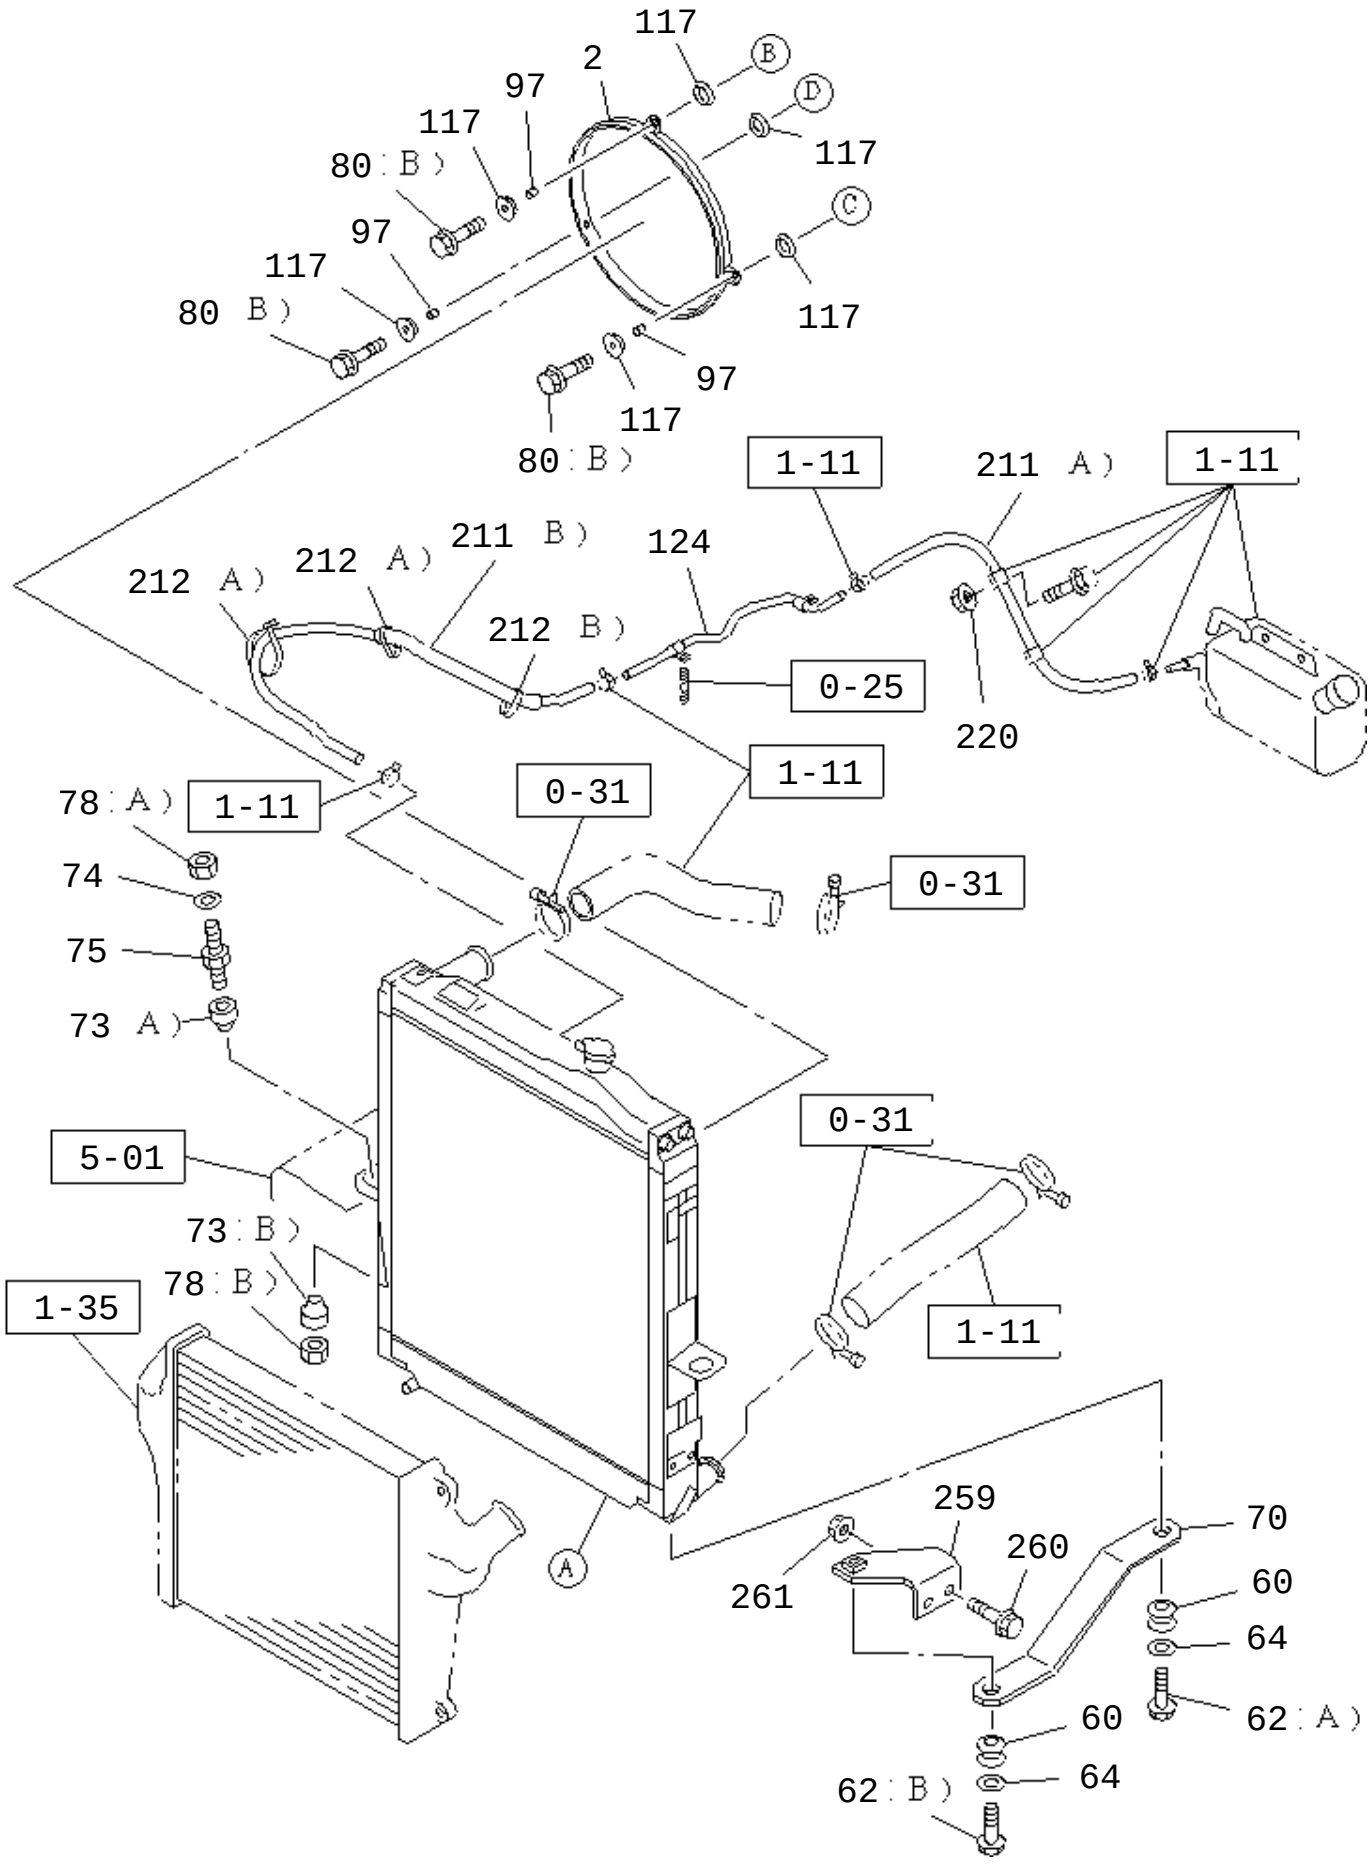

https://truckmanualshub.com/

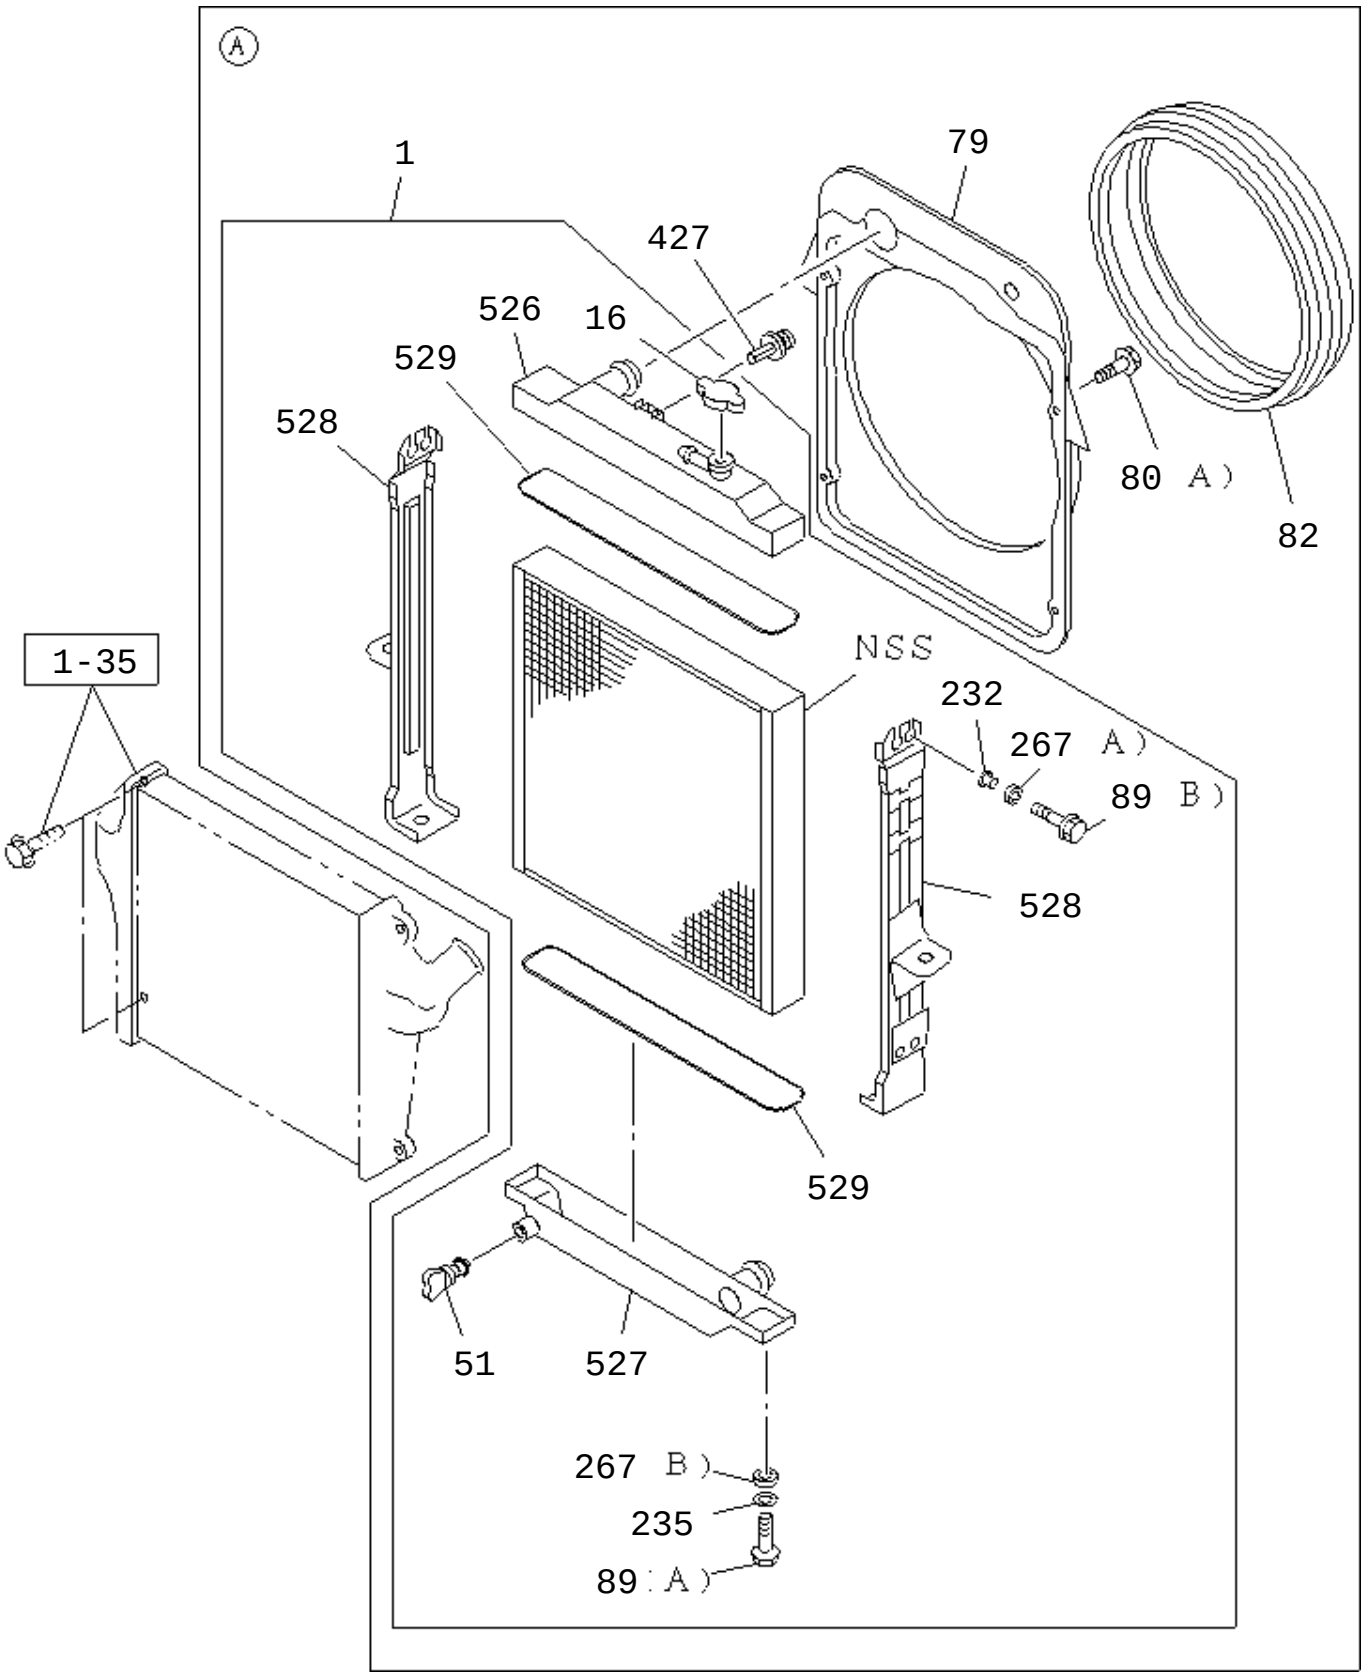

https://truckmanualshub.com/

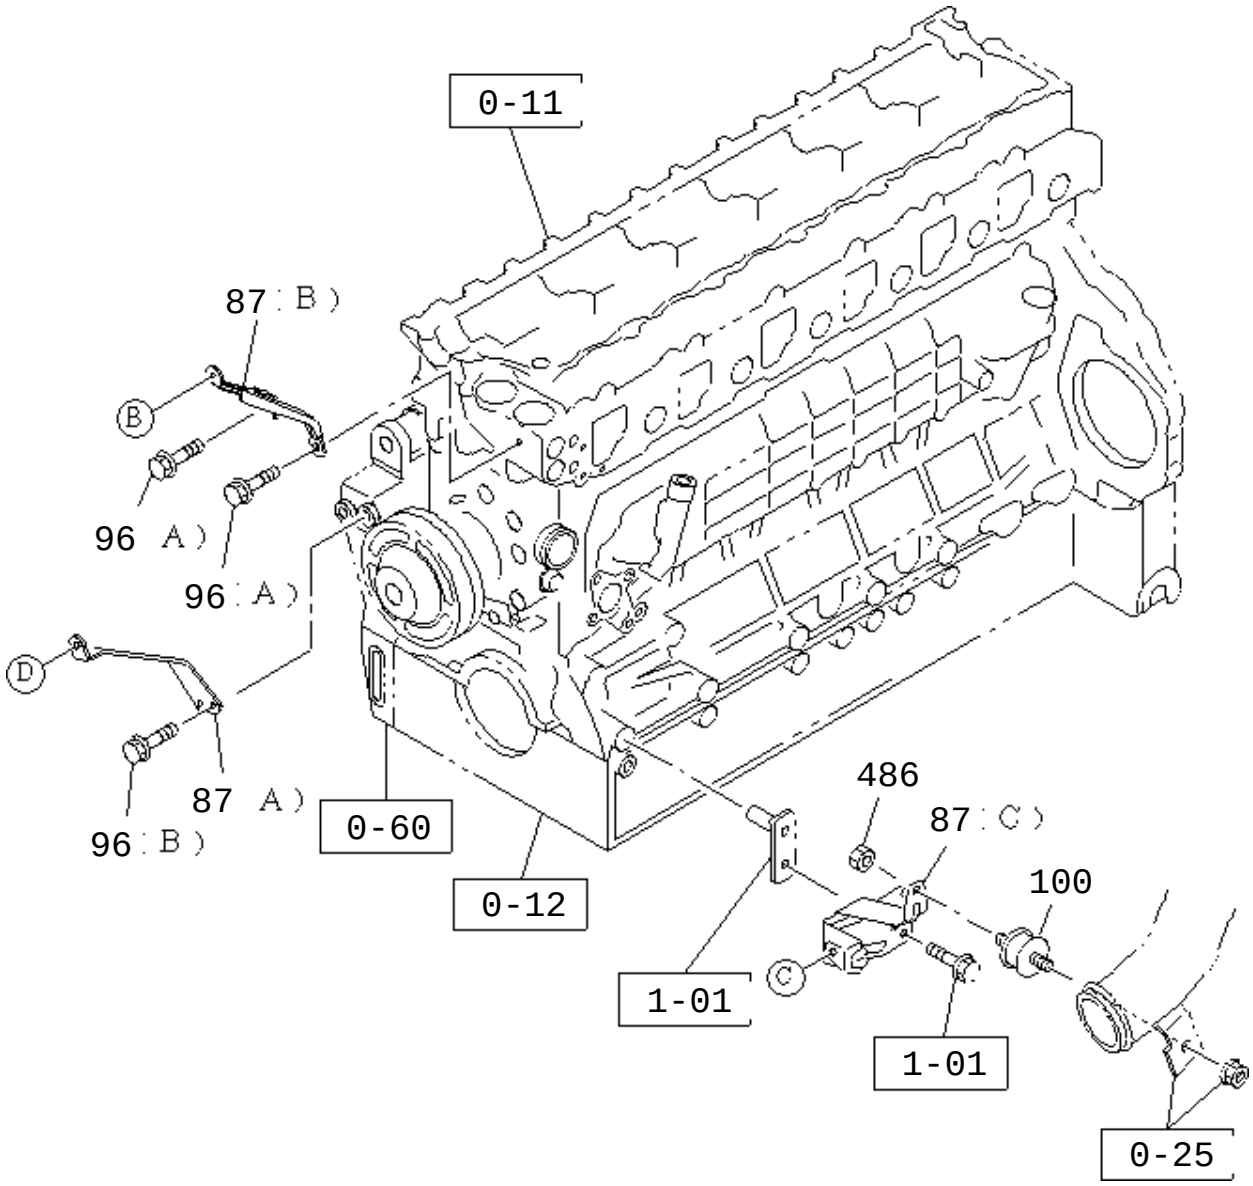

https://truckmanualshub.com/

1-10 RADIATOR

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		RADIATOR ASM 8-98248-324-0		1312-		01	A	IDN
2		GUIDE; FAN 8-94393-779-1		1312-		01	A	
16	B	CAP; RAD 8-98096-226-0		1312-		01	A	
51		PLUG; DRAIN 8-97171-437-0		1312-		01	A	W/GASKET
60		GROMMET 1-09332-117-0		1312-		04	A	
62		BOLT; STAY 1-09009-020-1		1312-		02	A	(A) M8X30
		1-09009-175-0		1312-		02	A	(B) M8X26
64		WASHER; STAY TO RAD 0-91610-612-0		1312-		04	A	ID=12.5 OD=26
70		STAY; RAD 8-98004-132-2		1312-		02	A	
73		RUBBER; CUSHION,RAD MTG 1-21467-004-0		1312-		02	A	(A) T=14
		1-21467-011-1		1312-		02	A	(B) T=24
74		WASHER; PL,CUSHION RUBBER 1-09503-154-2		1312-		02	A	ID=8.4 OD=22
75		BOLT; CUSHION RUBBER,RAD MTG 1-21466-007-3		1312-		02	A	M12X26.5,M10X19 L=86.5
78		NUT; CUSHION RUBBER 0-91180-210-0		1312-		02	A	(A) M10 FLANGE
		0-91180-212-0		1312-		02	A	(B) M12 FLANGE
79		GUIDE; FAN,RAD 8-98010-384-0		1312-		01	A	IDN
80		BOLT; FAN GUIDE 0-28650-830-0		1312-		03	A	(B) M8X30 FLANGE
		8-98046-222-0		1312-		04	A	(A) M8X14 IDN
82		COVER; FAN,RAD 8-98004-211-0		1312-		01	A	IDN
87		STAY; FAN GUIDE 8-94393-776-1		1312-		01	A	(B)
		8-94393-778-2		1312-		01	A	(C)
		8-97602-988-0		1312-		01	A	(A)
89		BOLT 0-28050-612-0		1312-		02	A	(A) M6X12 FLANGE
		1-21469-153-0		1312-		04	A	(B) M8X25
96		BOLT; STAY FIX						

https://truckmanualshub.com/

1-10 RADIATOR


KEY	R/C	PART NAME / PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS
								A 6HK1-TCS ENG(80L)
96		0-28050-816-0		1312-		02	A	(B) M8X16 FLANGE
		0-28151-016-0		1312-		02	A	(A) M10X16 FLANGE
97		TUBE; DIST,FAN GUIDE						
		9-09651-072-0		1312-		03	A	
100		RUBBER; MTG						
		8-98148-109-0		1312-		01	A	
117		RUBBER; MTG,FAN GUIDE						
		8-94395-766-0		1312-		06	A	
124		PIPE; WATER,TANK TO RAD						
		8-97611-022-1		1312-		01	A	
211		HOSE; RAD TO PIPE						
		8-98073-545-0		1312-		01	A	(B) L=970 IDN
		8-98119-375-0		1312-		01	A	(A) L=560 IDN
212		CLIP; HOSE						
		5-09707-030-1		1312-		02	A	(A) L=250 IDN
		5-09707-031-1		1312-		01	A	(B) L=140 IDN
220		NUT; CLIP						
		0-91180-108-0		1312-		01	A	M8 FLANGE
232		COLLAR; DIST,CUSHION RUBBER						
		8-98141-232-0		1312-		04	A	
235		WASHER; CUSHION RUBBER						
		1-21469-133-0		1312-		02	A	IDN
259		BRACKET; RAD STAY						
		8-98071-821-0		1312-	L	01	A	
		8-98071-822-0		1312-	R	01	A	
260		BOLT; BRKT						
		0-28650-820-0		1312-		04	A	M8X20 FLANGE IDN
261		NUT; BRKT						
		0-91180-108-0		1312-		04	A	M8 FLANGE
267		RUBBER; CUSHION						
		1-21469-130-0		1312-		04	A	(A) IDN
		1-21469-131-0		1312-		02	A	(B) IDN
427		CLIP; FAN GUIDE						
		1-09470-009-0		1312-		01	A	
486		NUT; MTG RUBBER						
		0-91180-108-0		1312-		01	A	M8 FLANGE
526		TANK; UPR,RADIATOR CORE						
		8-98004-202-2		1312-		01	A	IDN
527		TANK; LWR,RADIATOR CORE						
		8-98004-203-0		1312-		01	A	IDN
528		PLATE; SIDE,RADIATOR CORE						
		8-98010-372-4		1312-	L	01	A	IDN
		8-98185-754-0		1312-	R	01	A	IDN
529		GASKET; CORE,RADIATOR						

https://truckmanualshub.com/

1-10 RADIATOR

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
529		8-98004-206-0		1312-		02	A	IDN
0-25		Move to 0-25						
0-31		Move to 0-31						
1-11		Move to 1-11						
1-35		Move to 1-35						
5-01		Move to 5-01						
0-11		Move to 0-11						
0-12		Move to 0-12						
0-60		Move to 0-60						
1-01		Move to 1-01						

https://truckmanualshub.com/

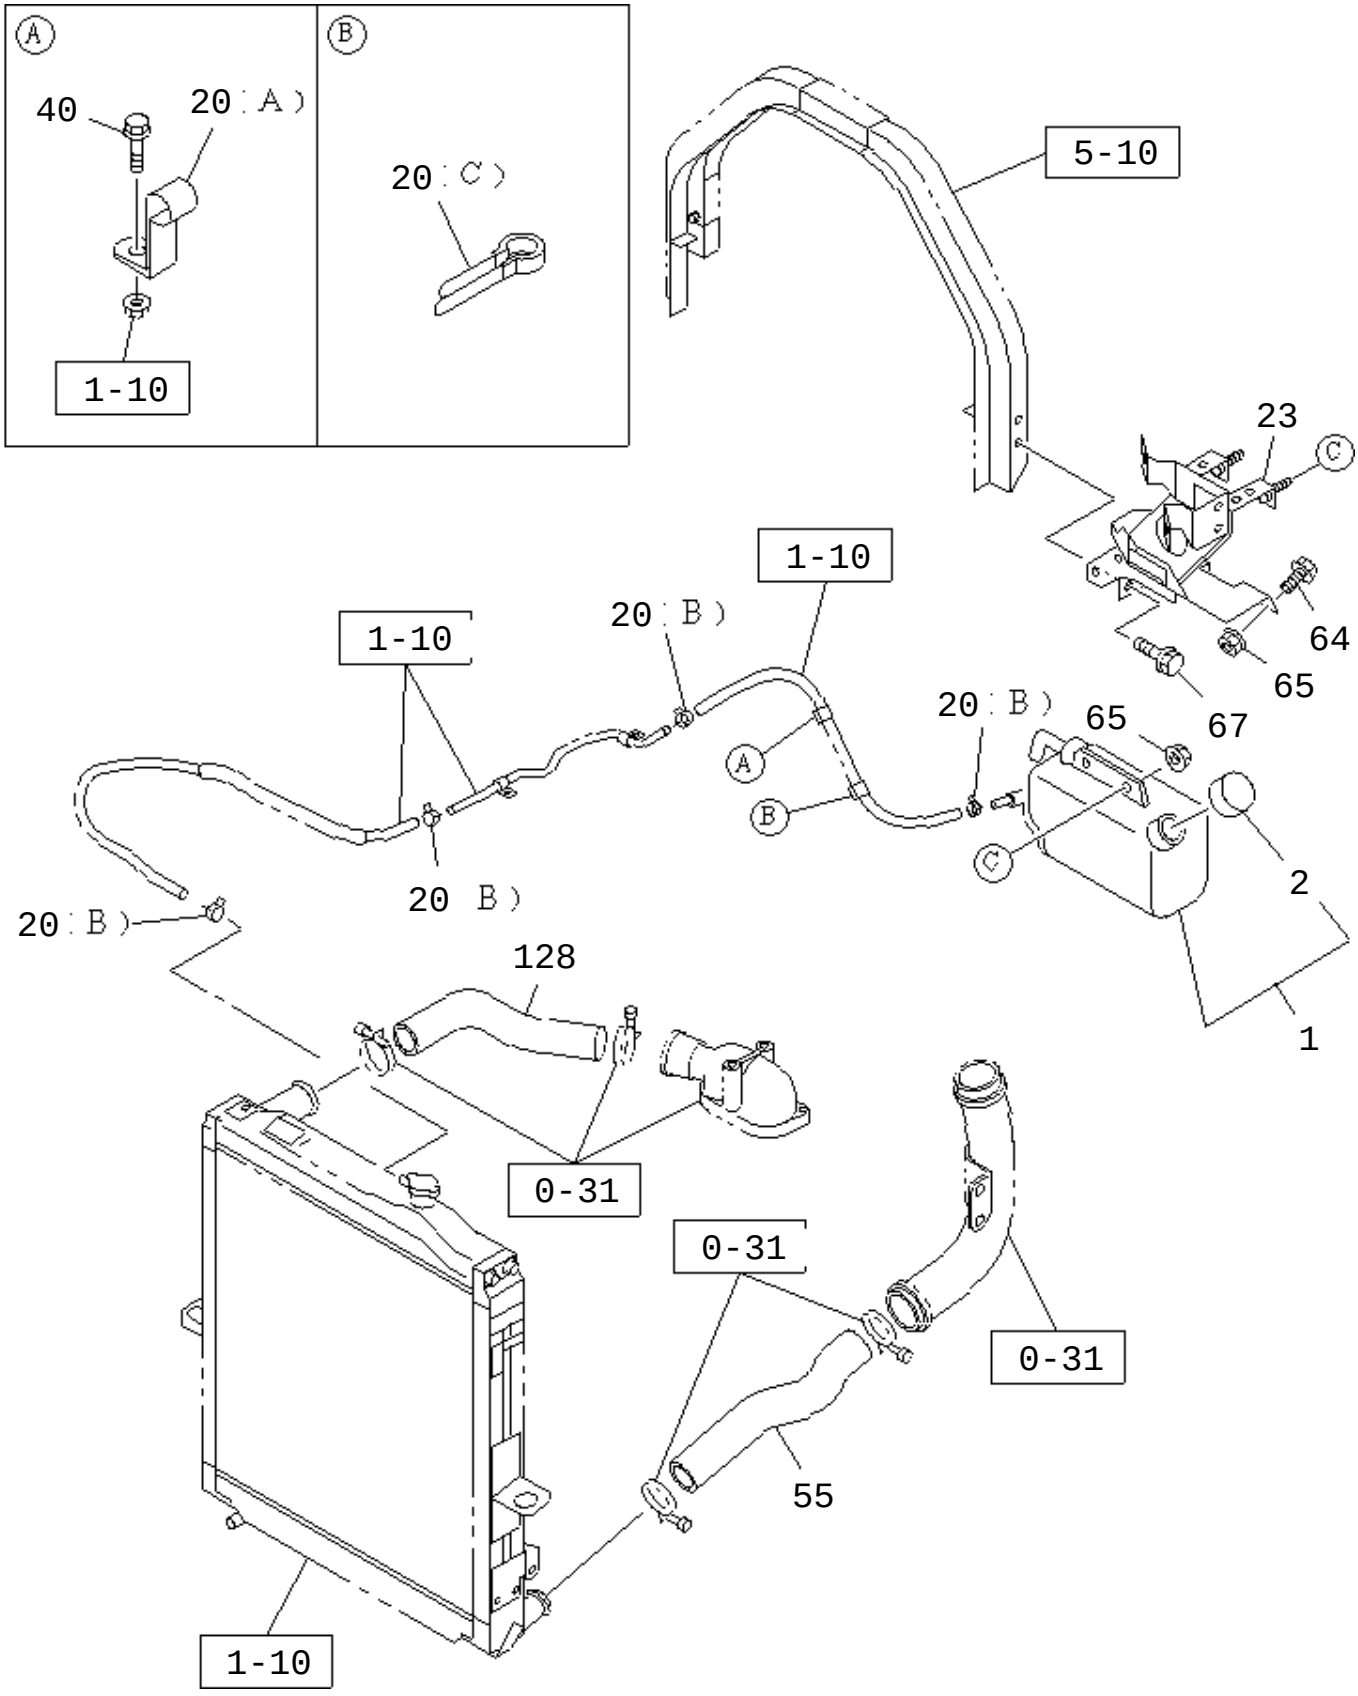


https://truckmanualshub.com/

1-11 RADIATOR HOSE AND SUB TANK

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		TANK; SURGE,RAD					
		8-98171-757-0		1312-	01	A	
2		CAP; SURGE TANK					
		8-98178-074-0		1312-	01	A	
20		CLIP; HOSE,RAD					
		1-09700-620-0		1312-	01	A	
							(A) ID=13 H=40 L=25
		8-97375-638-0		1312-	04	A	
							(B) ID=11.5
		9-09917-430-0		1312-	01	A	
							(C) ID=20 L=50
23		BRACKET; RESERVE TANK					
		8-98049-965-4		1312-	01	A	
40		BOLT; CLIP					
		0-28650-820-0		1312-	01	A	
							M8X20 FLANGE IDN
55	B	HOSE; WATER,RAD OUTLET					
		8-98079-430-1		1312-	01	A	
							IDN
64		BOLT; BRKT,SUB TANK					
		1-09030-093-0		1312-	01	A	
							M8X25 W/LK&PL WASHER
65		NUT; BRKT,SUB TANK					
		0-91180-108-0		1312-	03	A	
							M8 FLANGE
67		BOLT; BRKT					
		0-28650-820-0		1312-	03	A	
							M8X20 FLANGE IDN
128	B	HOSE; WATER,RAD INL					
		8-98010-578-1		1312-	01	A	
							IDN
0-31		Move to 0-31					
1-10		Move to 1-10					
5-10		Move to 5-10					

https://truckmanualshub.com/

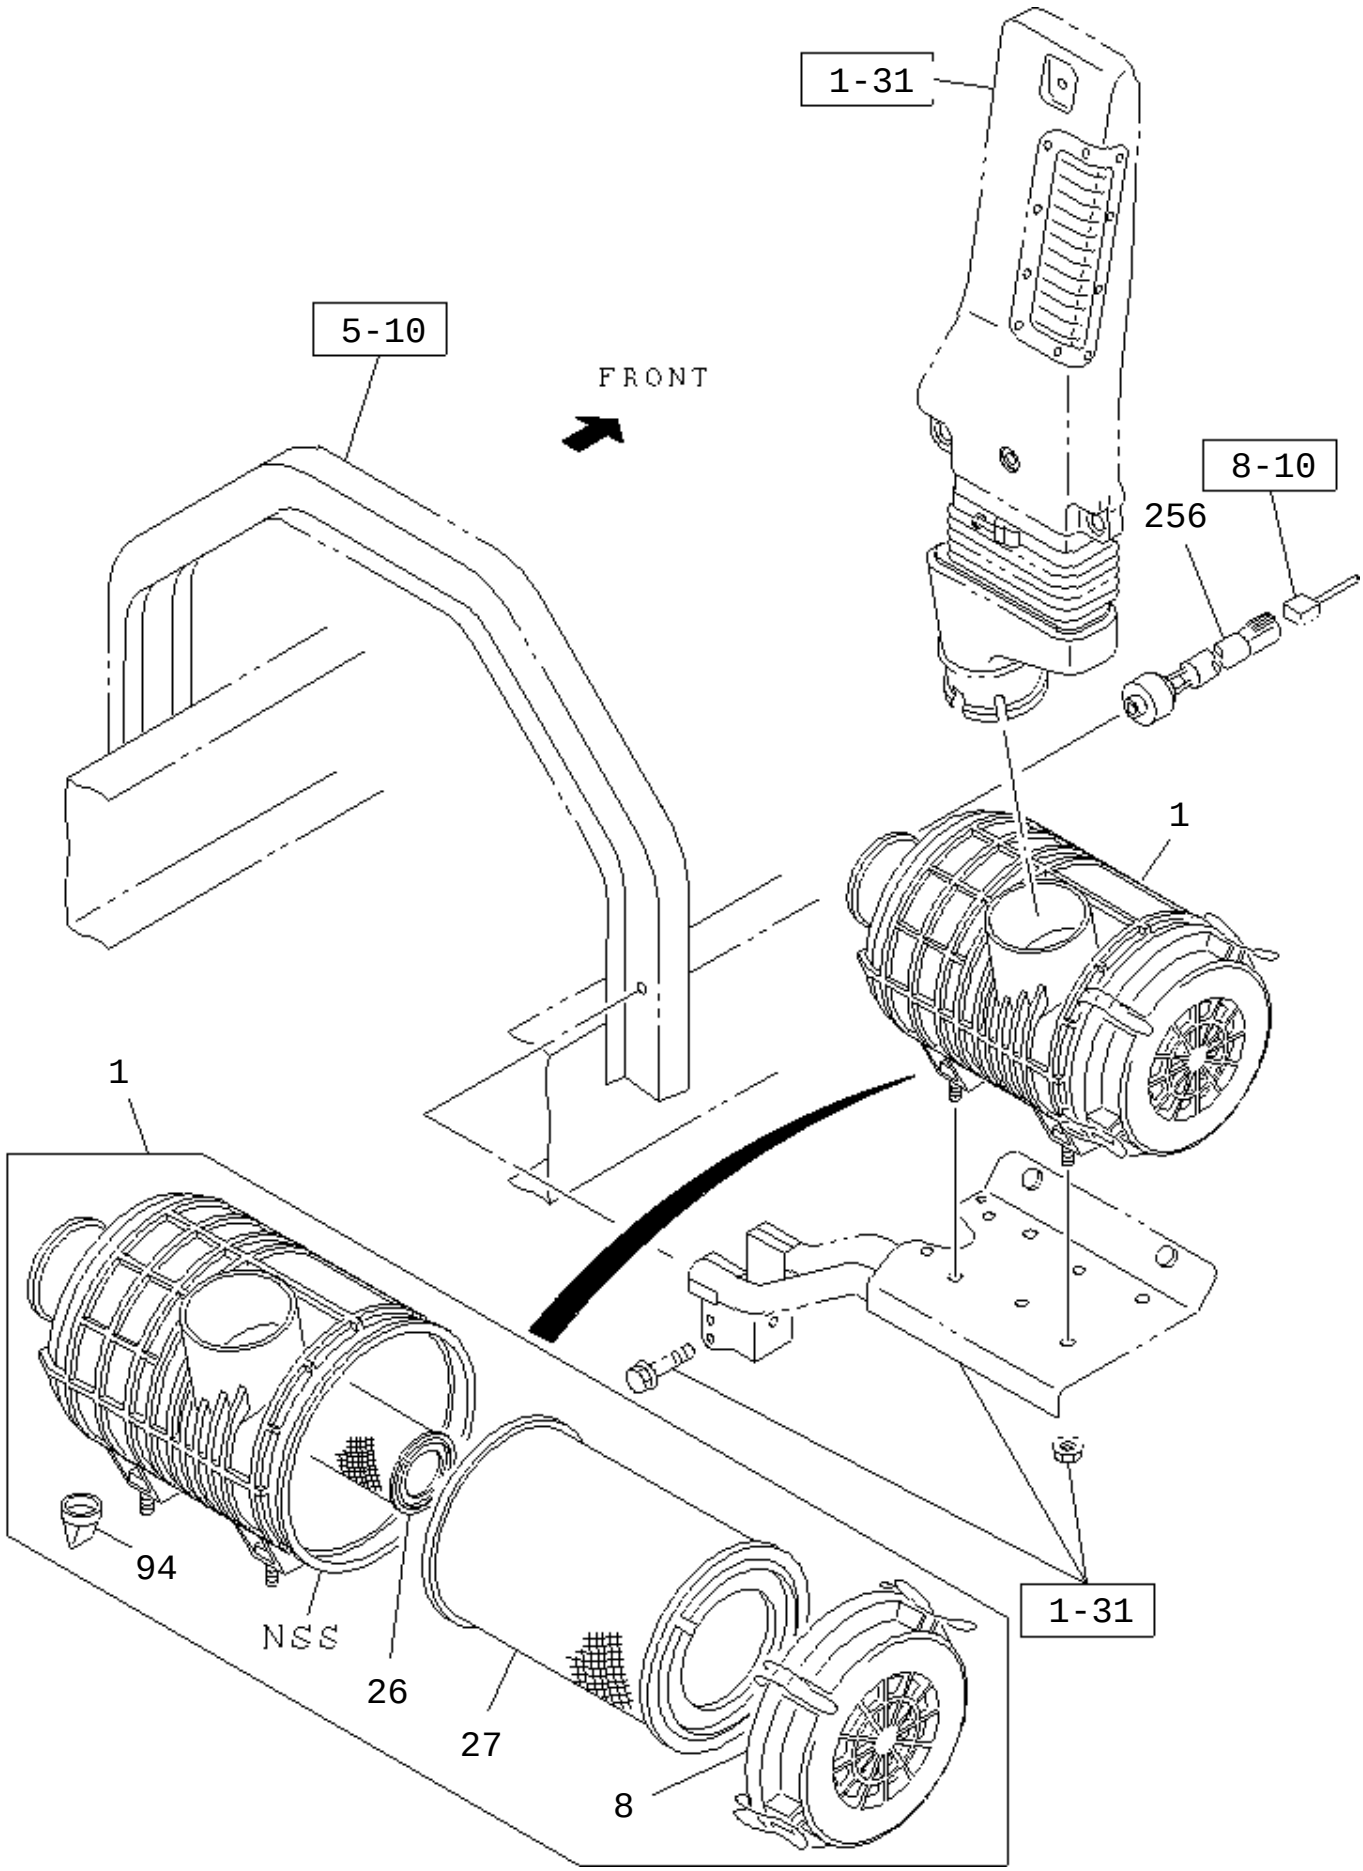

https://truckmanualshub.com/


1-30 AIR CLEANER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		CLEANER ASM; AIR					
		8-97948-127-0		1402-	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-98057-666-3		1312-1401	01	A	
		8-98057-666-3		1402-	01	A	EXC. VIN MODEL YEAR 2014<VZE>
8		COVER ASM; ACL					
		8-98066-739-0		1312-	01	A	 IDN
26	A	FILTER; ACL,INNER					
		8-97948-921-0		1402-	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-98071-424-0		1312-1401	01	A	
		8-98071-424-0		1402-	01	A	EXC. VIN MODEL YEAR 2014<VZE>
27	A	FILTER; ACL,OUTER					
		8-97948-920-0		1402-	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-98071-423-0		1312-1401	01	A	 DRY TYPE
		8-98071-423-0		1402-	01	A	EXC. VIN MODEL YEAR 2014<VZE> DRY TYPE
94		VALVE; VACUATOR					
		1-14219-279-0		1312-	01	A	 IDN
256		SENSOR; AIRFLOW					
		8-98152-742-1		1312-	01	A	
1-31		Move to 1-31					
5-10		Move to 5-10					
8-10		Move to 8-10					


https://truckmanualshub.com/

1-31 AIR DUCT

DUCT FIXING

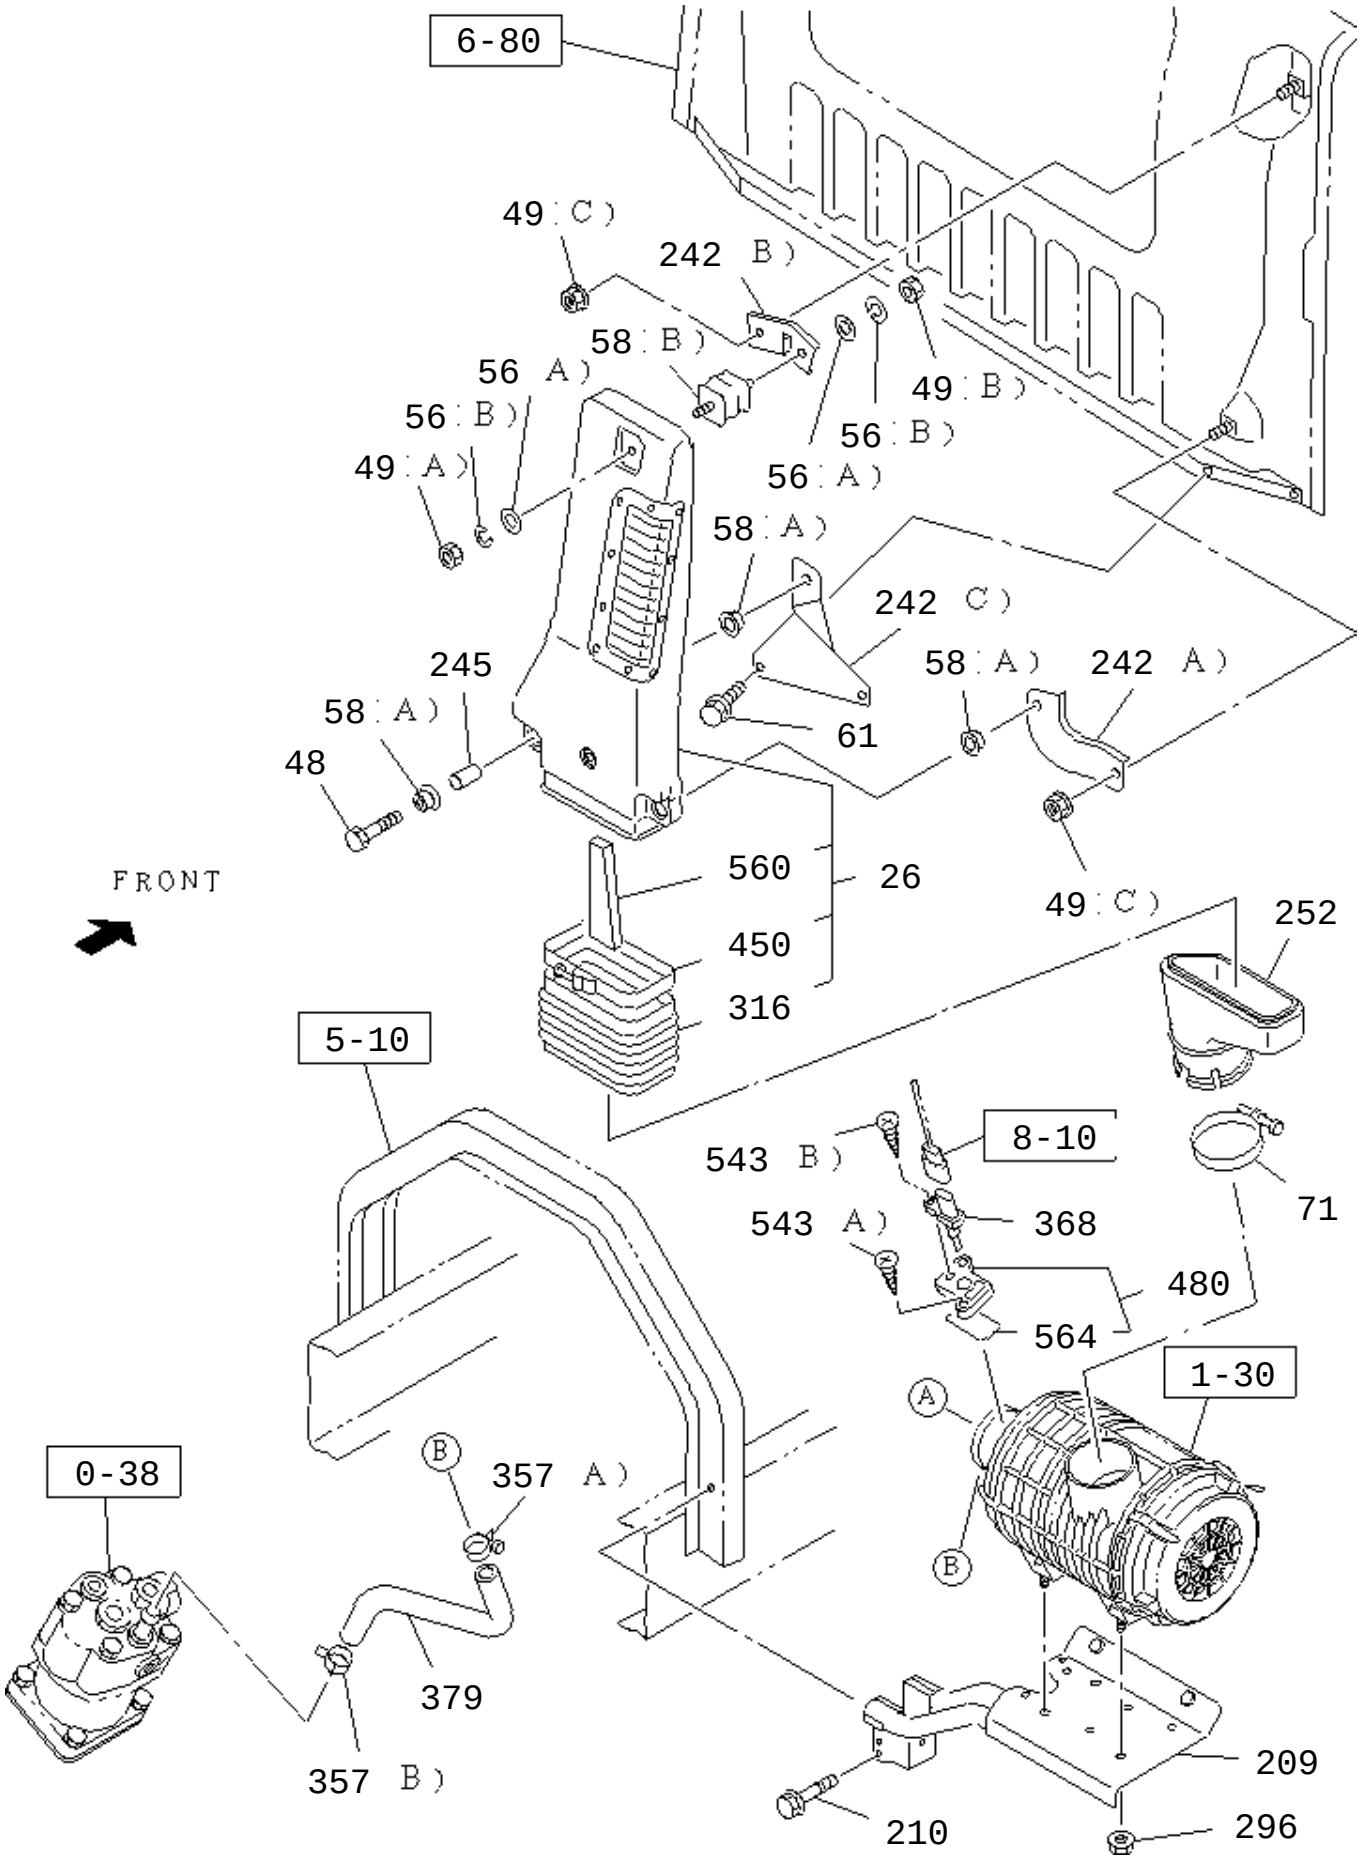

https://truckmanualshub.com/

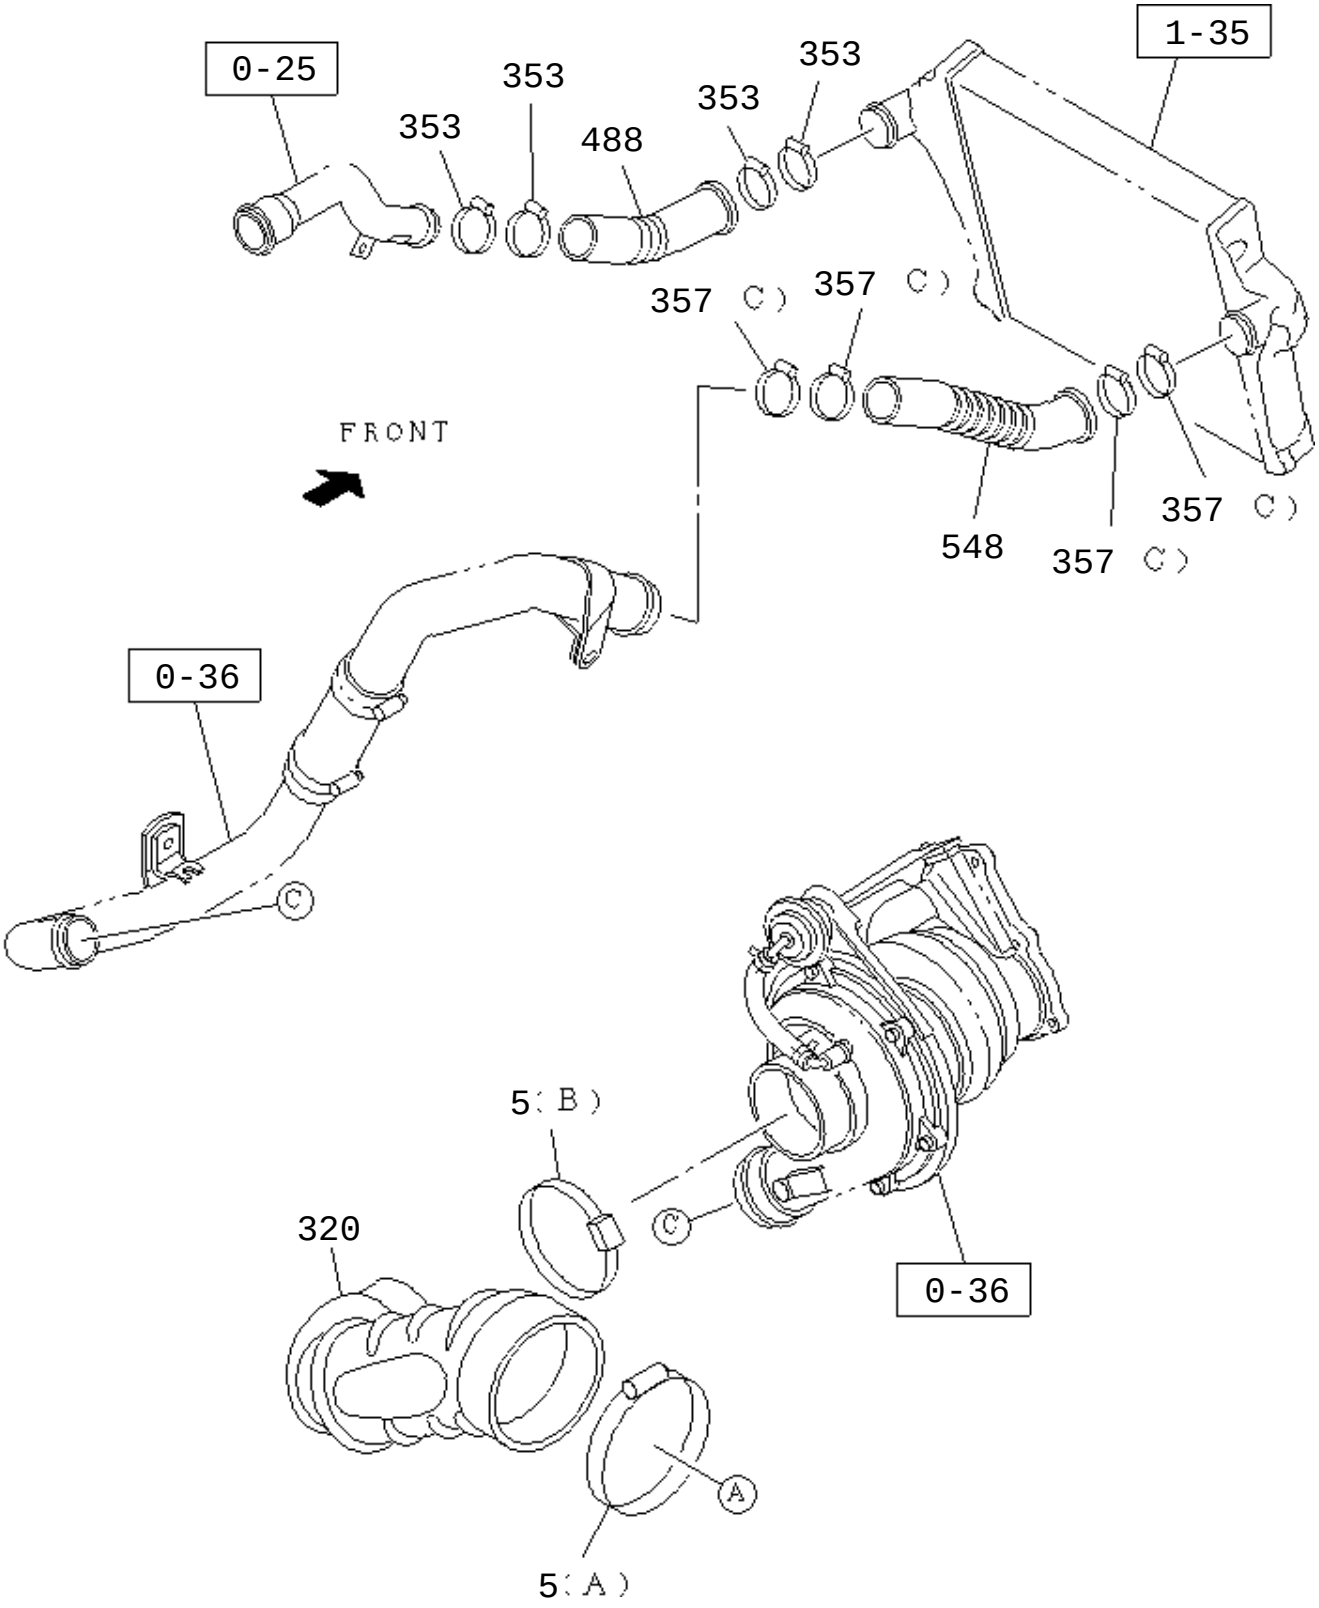

https://truckmanualshub.com/

1-31 AIR DUCT


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
5		CLIP; AIR DUCT					
		8-98133-360-0		1312-	01	A	(A) ID=130-150
		8-98133-365-0		1312-	01	A	(B) ID=90-110
26		DUCT; AIR INT					
		8-98010-361-2		1312-	01	A	
48		BOLT; AIR DUCT					
		1-09030-044-1		1312-	02	A	M10X26
49		NUT; AIR DUCT					
		1-09984-122-0		1312-	01	A	(B) M8 FLANGE
		1-09984-126-0		1312-	01	A	(A) M8 FLANGE
		8-94279-517-0		1312-	02	A	(C) M8 FLANGE IDN
56		WASHER; LK,AIR INT DUCT					
		1-09985-177-0		1312-	02	A	(A) ID=8.2
		1-09985-188-0		1312-	02	A	(B) ID=8.4 OD=22
58		SUPPORT; AIR INL DUCT					
		1-14119-267-0		1312-	04	A	(A) OD=40 T=18.5
		8-98125-944-1		1312-	01	A	(B)
61		BOLT; BRKT,AIR DUCT					
		8-98074-570-0		1312-	02	A	M8X25 FLANGE
71		CLIP; AIR DUCT					
		8-98133-368-0		1312-	01	A	ID=140-160
209		BRACKET; ACL					
		8-97948-148-0		1312-	01	A	IDN
210		BOLT; ACL BRKT					
		0-28651-025-0		1312-	04	A	M10X25 FLANGE IDN
242		BRACKET; AIR DUCT					
		8-98019-301-3		1312-	01	A	(B)
		8-98019-302-1		1312-	01	A	(C)
		8-98019-304-1		1312-	01	A	(A)
245		PIECE; DIST,AIR DUCT					
		1-79998-228-0		1312-	02	A	
252		DUCT; AIR INT					
		8-98021-989-1		1312-	01	A	
296		NUT; ACL					
		0-91180-108-0		1312-	04	A	M8 FLANGE
316		RUBBER; CUSHION,DUCT					
		8-98152-269-0		1312-	01	A	
320		HOSE; CONN,ACL					
		8-98073-259-0		1312-	01	A	IDN
353		CLIP; RUBBER HOSE					
		8-98133-349-0		1312-	04	A	ID=55-75
357		CLIP; RUBBER HOSE					
		1-09707-091-0		1312-	01	A	(A) ID=26

https://truckmanualshub.com/

1-31 AIR DUCT

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
357		8-97354-979-0		1312-	01	A	(B) ID=29.5
		8-98133-349-0		1312-	04	A	(C) ID=55-75
368		SENSOR; TEMP					
		8-98065-377-0		1312-	01	A	
379		HOSE; RUBBER					
		8-97639-463-0		1312-	01	A	IDN
450		CLAMP; HOSE					
		9-09915-504-1		1312-	01	A	
480		ADAPTER					
		8-98086-417-0		1312-	01	A	
488		HOSE; RUBBER,PIPE					
		8-98012-936-1		1312-	01	A	
543		SCREW; SENSOR					
		0-36220-514-0		1312-	01	A	(B) M5X14 W/LK WASHER
		0-36230-412-0		1312-	02	A	(A) M4X12 W/LK&PL WASHER
548		HOSE; RUBBER,TURBO TO INL PIPE					
		8-98181-974-1		1312-	01	A	IDN
560		FILTER; VERTICAL DUCT					
		8-98061-675-0		1312-	02	A	
564		GASKET; ADAPTER					
		8-98071-416-0		1312-	01	A	
0-38		Move to 0-38					
1-30		Move to 1-30					
5-10		Move to 5-10					
6-80		Move to 6-80					
8-10		Move to 8-10					
0-25		Move to 0-25					
0-36		Move to 0-36					
1-35		Move to 1-35					

https://truckmanualshub.com/

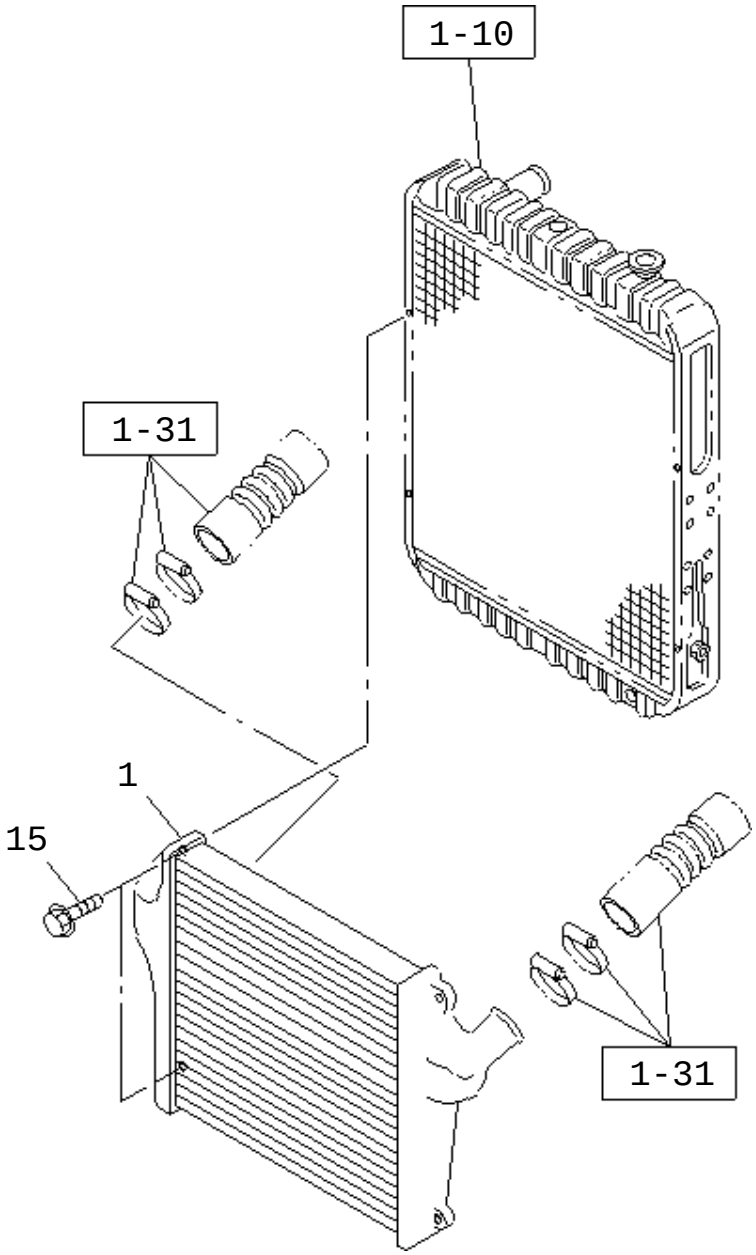


https://truckmanualshub.com/


1-35 CHARGE AIR COOLER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
1		COOLER; CHARGE AIR 8-98047-633-0		1312-	01	A	IDN
15		BOLT; CHARGE AIR COOLER 1-21469-151-0		1312-	04	A	IDN
1-10		Move to 1-10					
1-31		Move to 1-31					


https://truckmanualshub.com/

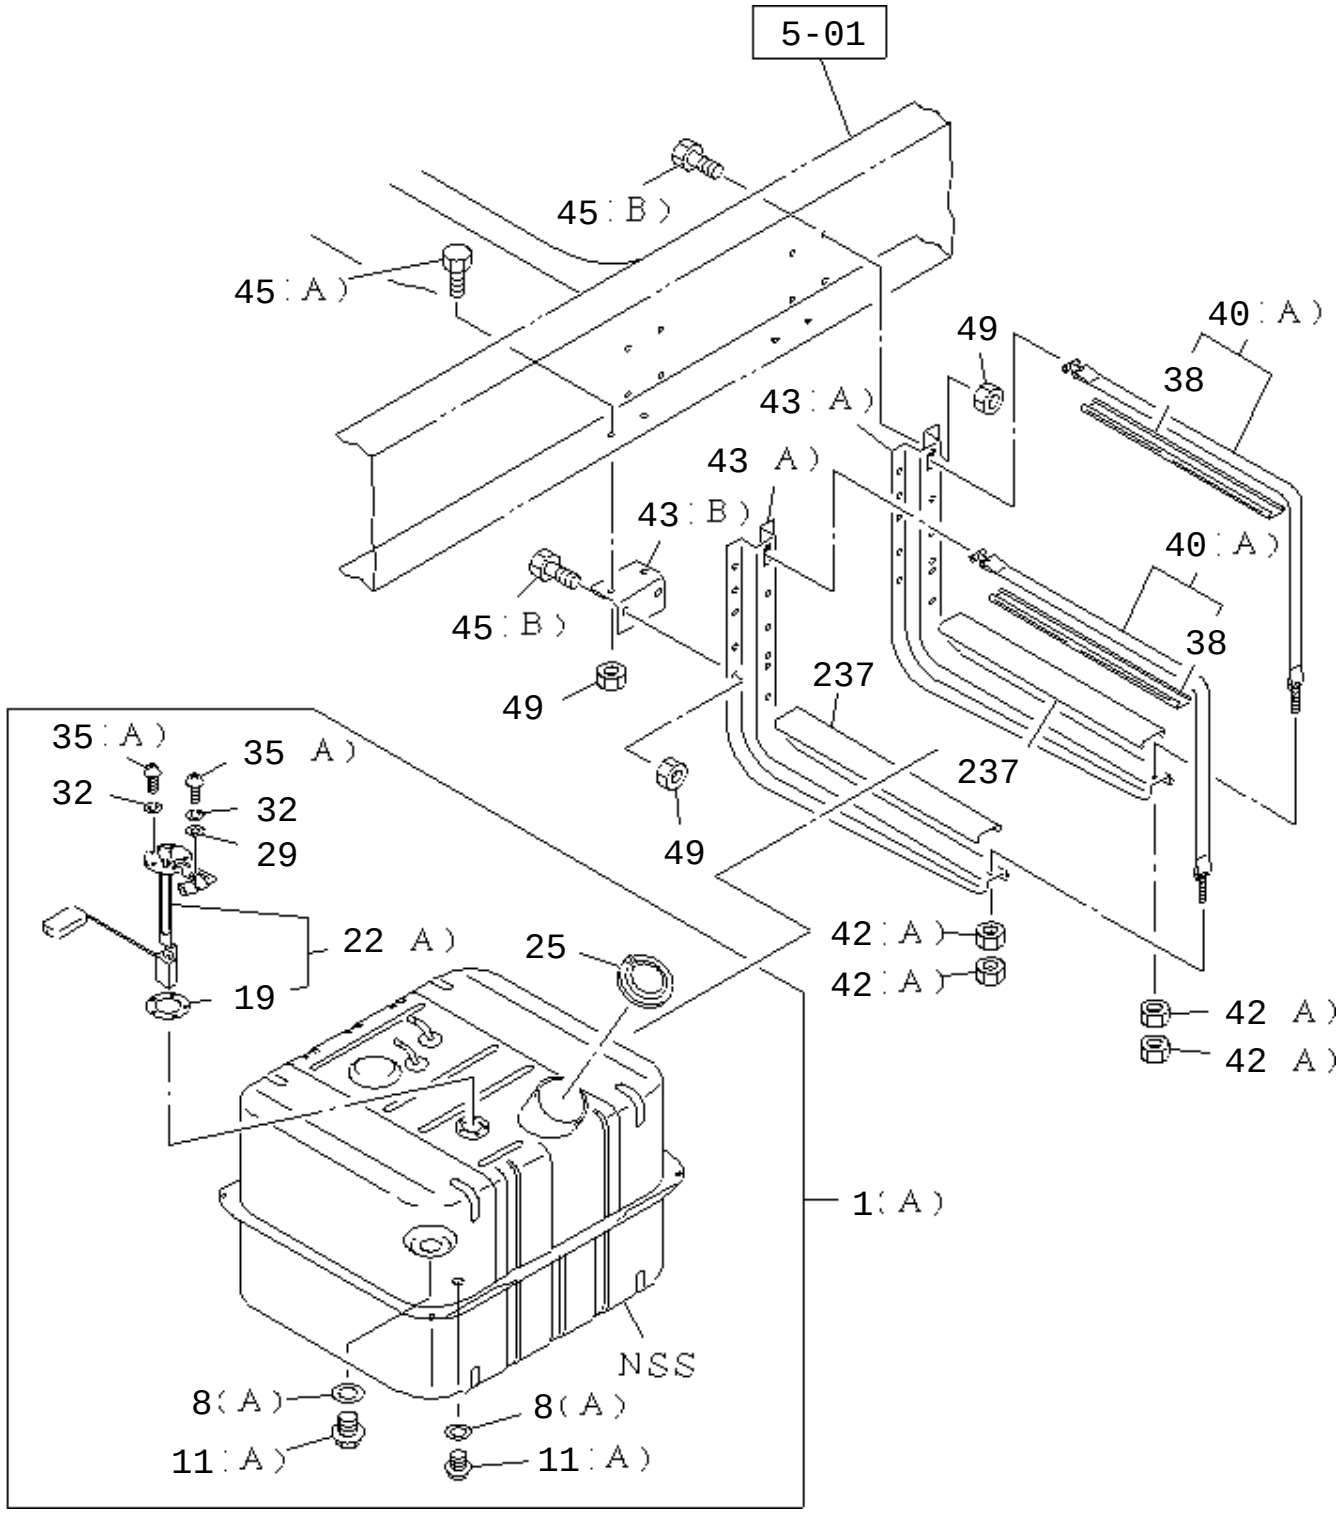

https://truckmanualshub.com/

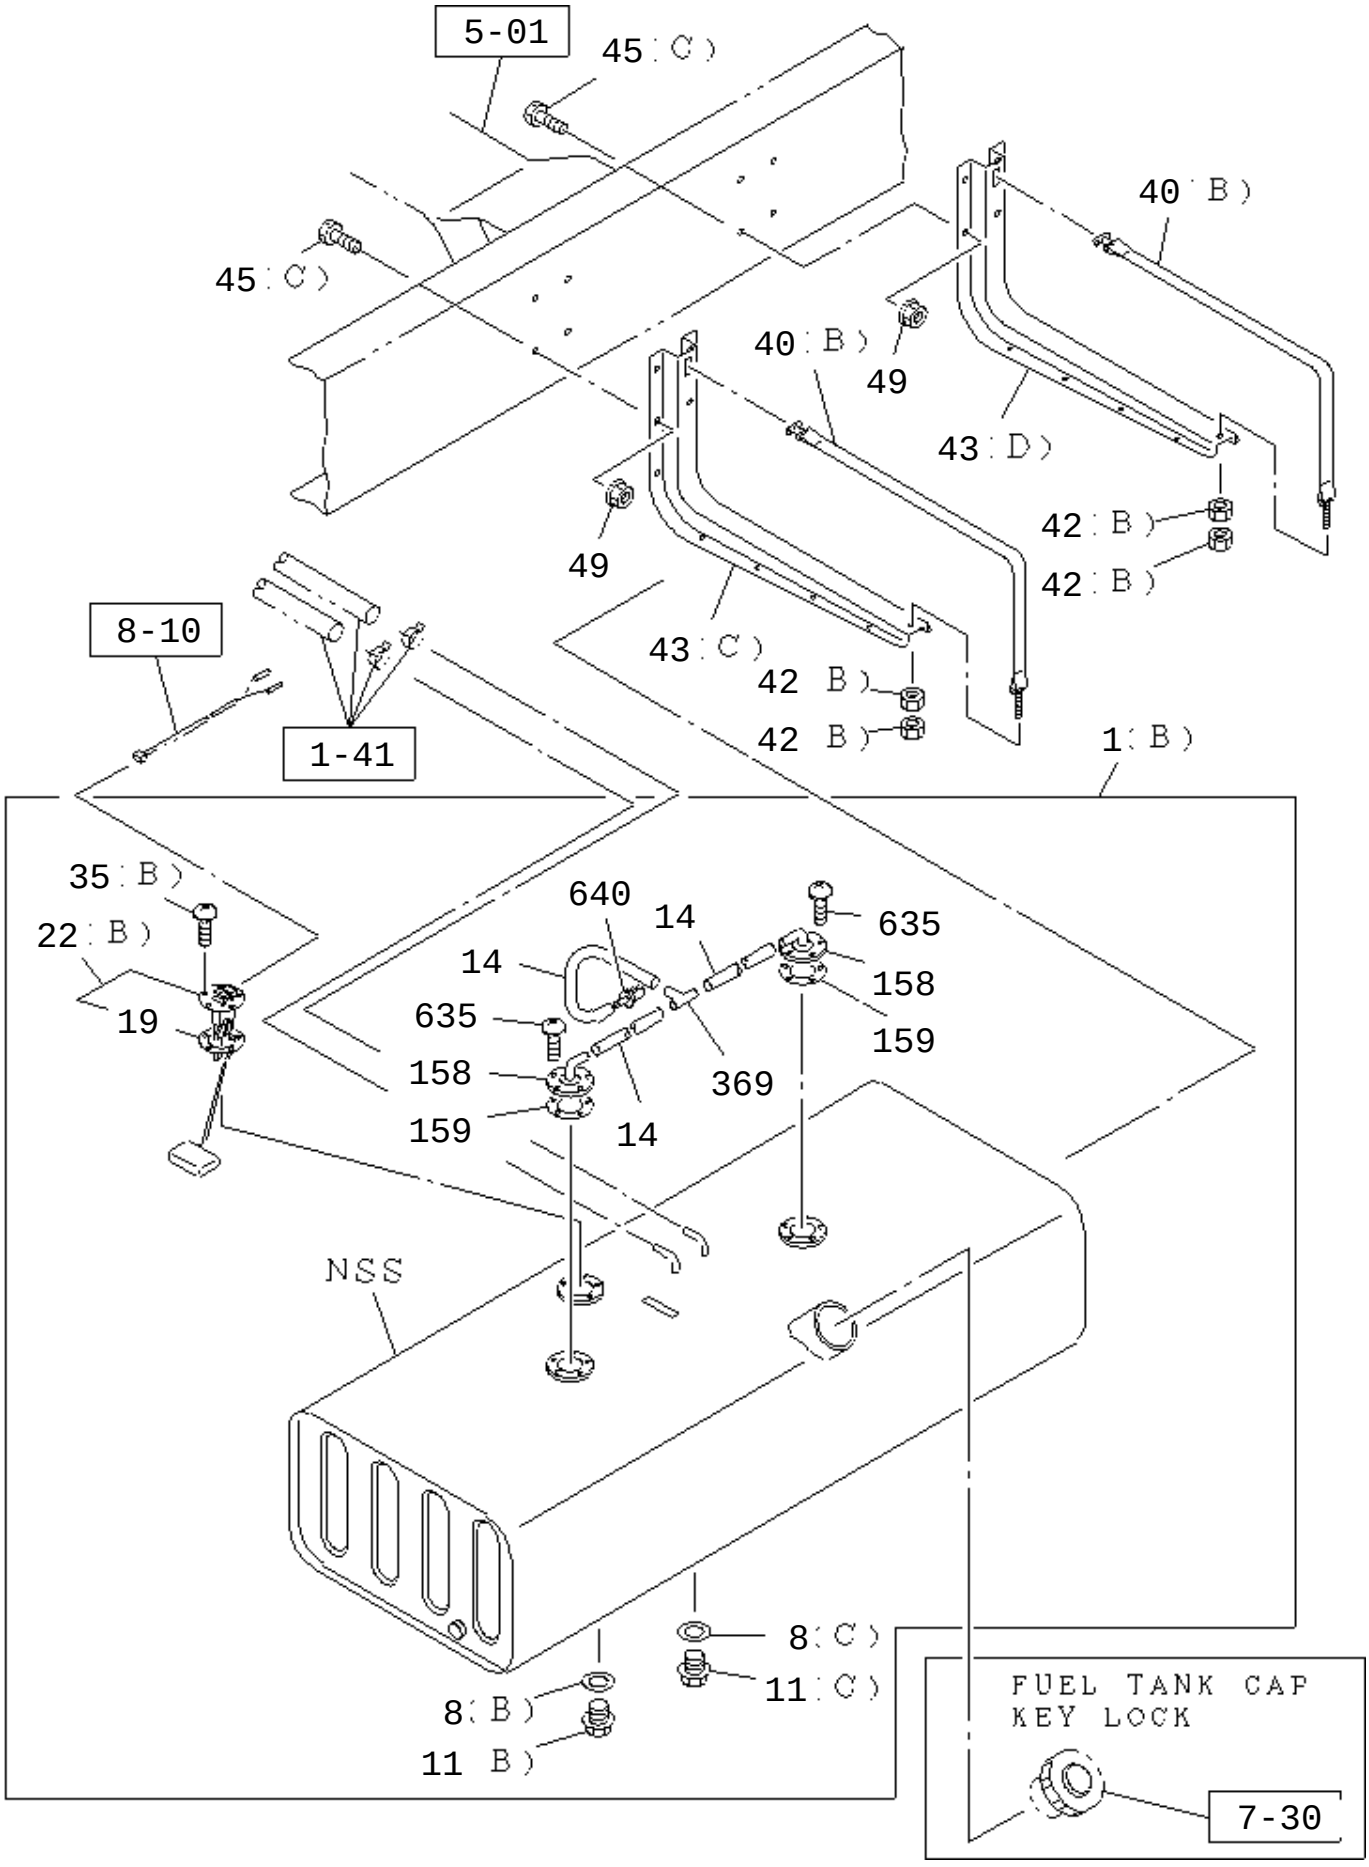

https://truckmanualshub.com/

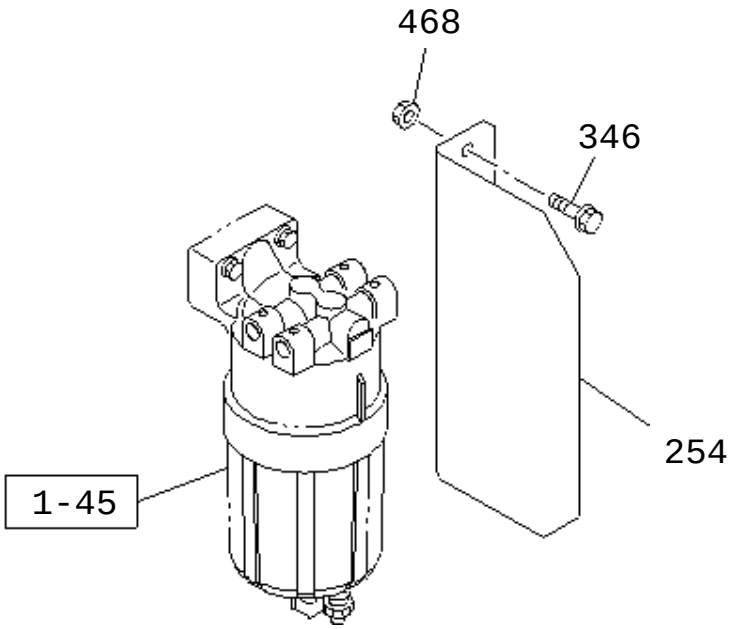

https://truckmanualshub.com/

1-40 FUEL TANK

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		TANK; FUEL						
		8-98122-992-3		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> (B) 1345X532X322 200L IDN
		8-98122-992-3		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> (B) 1345X532X322 200L IDN
		8-98182-507-0		1312-		01	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (A) 720X610X496 200L
8		GASKET; DRAIN PLUG,FUEL TANK						
		8-98067-041-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> (B) ID=30 IDN
		8-98067-041-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> (B) ID=30 IDN
		9-09571-418-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> (C) ID=18 IDN
		9-09571-418-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> (C) ID=18 IDN
		9-09572-014-0		1312-		02	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (A) ID=14.2 OD=23.0 IDN
11		PLUG; DRAIN,FUEL TANK						
		0-92002-418-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> (C) M18X12 IDN
		0-92002-418-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> (C) M18X12 IDN
		8-98067-038-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> (B) M30 IDN
		8-98067-038-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> (B) M30 IDN
		9-09862-156-0		1312-		02	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (A) M14X14 IDN
14		HOSE; BREATHER,OUTLET						
		0-01256-300-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> L=90 SERVICED BY L=3000
		0-01256-300-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> L=90 SERVICED BY L=3000
		0-01256-300-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> L=440 SERVICED BY L=3000
		0-01256-300-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> L=440 SERVICED BY L=3000
		0-01256-300-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> L=450 SERVICED BY L=3000
		0-01256-300-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> L=450 SERVICED BY L=3000
19		GASKET; FUEL TANK UNIT						

https://truckmanualshub.com/

1-40 FUEL TANK

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
19		5-83148-001-0		1312-1403		01	A	
		5-83148-001-0		1404-		01	A	
		5-83148-001-0		1404-		01	B	LOCALLY SUPPLIED PARTS<TKH>
22		UNIT; FUEL TANK						
		8-98099-320-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> (B) IDN
		8-98099-320-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> (B) IDN
		1-83141-124-0		1312-		01	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (A)
25	B	CAP; FILLER,FUEL TANK						
		1-22440-046-1		1312-		01	A	EXC. LOCALLY SUPPLIED PARTS<TKH>
29		WASHER; PL,FUEL TANK UNIT						
		0-91610-505-0		1312-		01	A	EXC. LOCALLY SUPPLIED PARTS<TKH> ID=5.3
32		WASHER; LK,FUEL TANK UNIT						
		0-91510-505-0		1312-		05	A	EXC. LOCALLY SUPPLIED PARTS<TKH> ID=5.1
35		SCREW; FUEL TANK UNIT						
		0-36220-512-0		1312-1403	L	05	A	LOCALLY SUPPLIED PARTS<TKH> (B) M5X12 W/LK WASHER
		0-36220-512-0		1404-	L	05	AB	LOCALLY SUPPLIED PARTS<TKH> (B) M5X12 W/LK WASHER
		0-34218-510-0		1312-		05	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (A) M5X10
38		INSULATION; SUPPORT BELT						
		1-22553-022-1		1312-		02	A	EXC. LOCALLY SUPPLIED PARTS<TKH> L=650
40		BELT; SUPPORT,FUEL TANK						
		8-98042-715-1		1312-1403		02	A	LOCALLY SUPPLIED PARTS<TKH> (B) L=880 IDN
		8-98042-715-1		1404-		02	AB	LOCALLY SUPPLIED PARTS<TKH> (B) L=880 IDN
		1-22550-204-2		1312-		02	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (A) L=1030
42		NUT; SUPPORT BELT						
		0-91110-512-0		1312-1403		04	A	LOCALLY SUPPLIED PARTS<TKH> (B) M12
		0-91110-512-0		1404-		04	AB	LOCALLY SUPPLIED PARTS<TKH> (B) M12
		0-91110-510-0		1312-		04	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (A) M10
43		BRACKET; FUEL TANK						
		8-98088-123-0		1312-1403		01	A	LOCALLY SUPPLIED PARTS<TKH> (C) IDN
		8-98088-123-0		1404-		01	AB	LOCALLY SUPPLIED PARTS<TKH> (C) IDN
		8-98122-883-0		1312-1403		01	A	LOCALLY SUPPLIED PARTS<TKH> (D) IDN
		8-98122-883-0		1404-		01	AB	LOCALLY SUPPLIED PARTS<TKH> (D) IDN
		8-98182-492-0		1312-		01	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (B) FRONT
		8-98182-493-0		1312-		01	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (B) REAR
		8-98202-542-0		1312-		02	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (A)

https://truckmanualshub.com/


1-40 FUEL TANK


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
45		BOLT; BRKT,FUEL TANK						
		0-28651-240-0		1312-1403		08	A	LOCALLY SUPPLIED PARTS<TKH> (C) M12X40 FLANGE
		0-28651-240-0		1404-		08	AB	LOCALLY SUPPLIED PARTS<TKH> (C) M12X40 FLANGE
		0-28051-250-0		1312-		04	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (A) M12X50 FLANGE
		0-28651-235-0		1312-		12	A	EXC. LOCALLY SUPPLIED PARTS<TKH> (B) M12X35 FLANGE
49		NUT; BRKT						
		0-91180-212-0		1312-1403		08	A	LOCALLY SUPPLIED PARTS<TKH> M12 FLANGE
		0-91180-212-0		1404-		08	AB	LOCALLY SUPPLIED PARTS<TKH> M12 FLANGE
		0-91180-212-0		1312-		16	A	EXC. LOCALLY SUPPLIED PARTS<TKH> M12 FLANGE
158		VALVE; ROLL OVER & FLOAT						
		8-98067-039-0		1312-1403	L	02	A	LOCALLY SUPPLIED PARTS<TKH> IDN
		8-98067-039-0		1404-	L	02	AB	LOCALLY SUPPLIED PARTS<TKH> IDN
159		SEAL; ROLL OVER & FLOAT VALVE						
		1-83149-003-0		1312-1403	L	02	A	LOCALLY SUPPLIED PARTS<TKH> IDN
		1-83149-003-0		1404-	L	02	AB	LOCALLY SUPPLIED PARTS<TKH> IDN
237		GASKET; BRKT TO FUEL TANK						
		1-22553-003-0		1312-		02	A	EXC. LOCALLY SUPPLIED PARTS<TKH> L=580
254		GUARD						
		8-98233-611-0		1312-		01	A	WHEEL BASE 5300MM(53W)
346		BOLT; GUARD						
		0-28651-035-0		1312-		02	A	WHEEL BASE 5300MM(53W) M10X35 FLANGE IDN
369		JOINT; HOSE						
		8-98067-080-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> IDN
		8-98067-080-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> IDN
468		NUT						
		0-91180-210-0		1312-		02	A	WHEEL BASE 5300MM(53W) M10 FLANGE
635		SCREW; ROLL OVER & FLOAT VALVE						
		0-36220-512-0		1312-1403	L	10	A	LOCALLY SUPPLIED PARTS<TKH> M5X12 W/LK WASHER
		0-36220-512-0		1404-	L	10	AB	LOCALLY SUPPLIED PARTS<TKH> M5X12 W/LK WASHER
640		VENTILATOR; HOSE,BREATHER						
		8-98092-398-0		1312-1403	L	01	A	LOCALLY SUPPLIED PARTS<TKH> IDN
		8-98092-398-0		1404-	L	01	AB	LOCALLY SUPPLIED PARTS<TKH> IDN
5-01		Move to 5-01						
1-41		Move to 1-41						
7-30		Move to 7-30						
8-10		Move to 8-10						
1-45		Move to 1-45						

https://truckmanualshub.com/


1-41 FUEL PIPING; CHASSIS

EXC.MIXER CHASSIS;PIPING

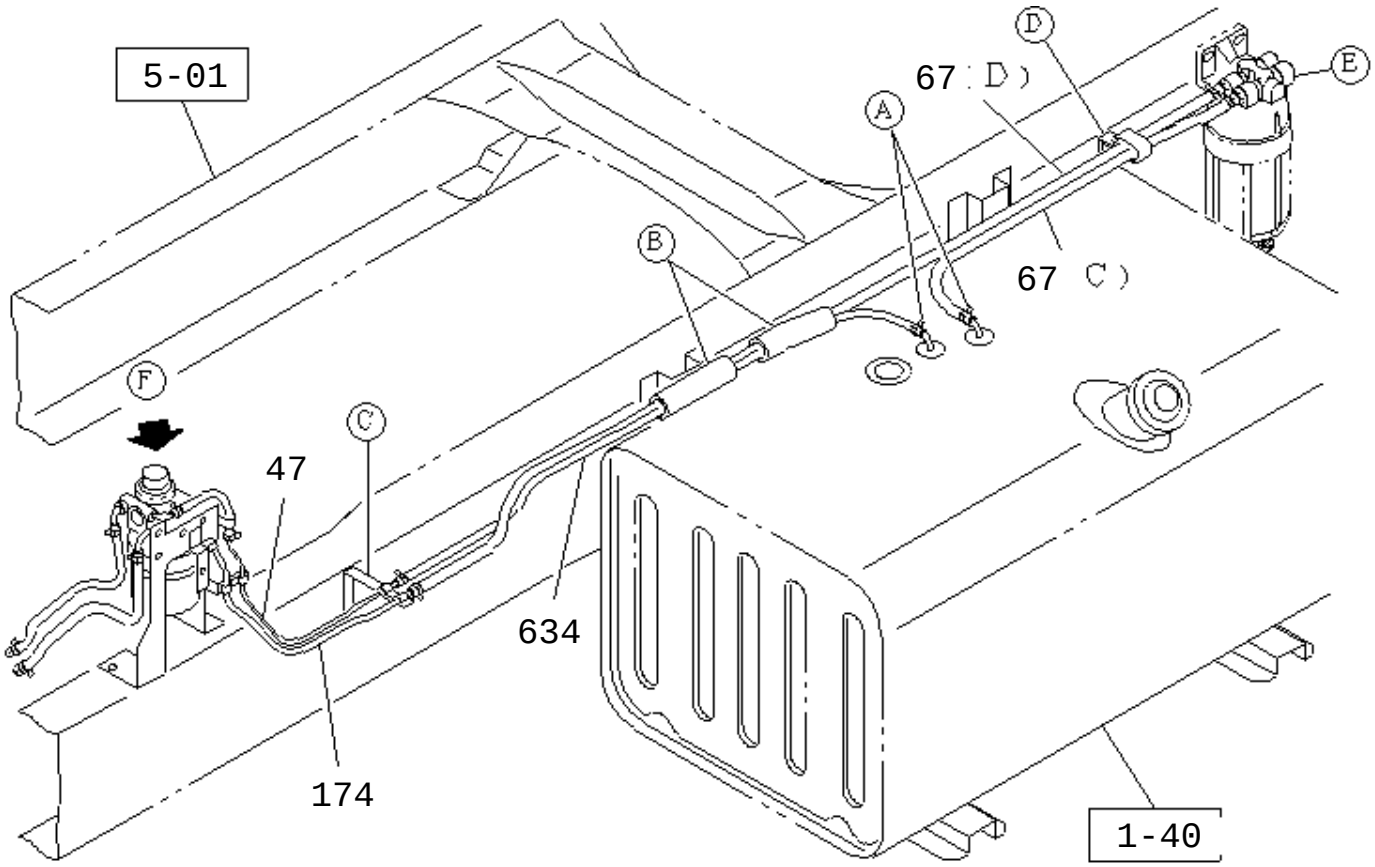

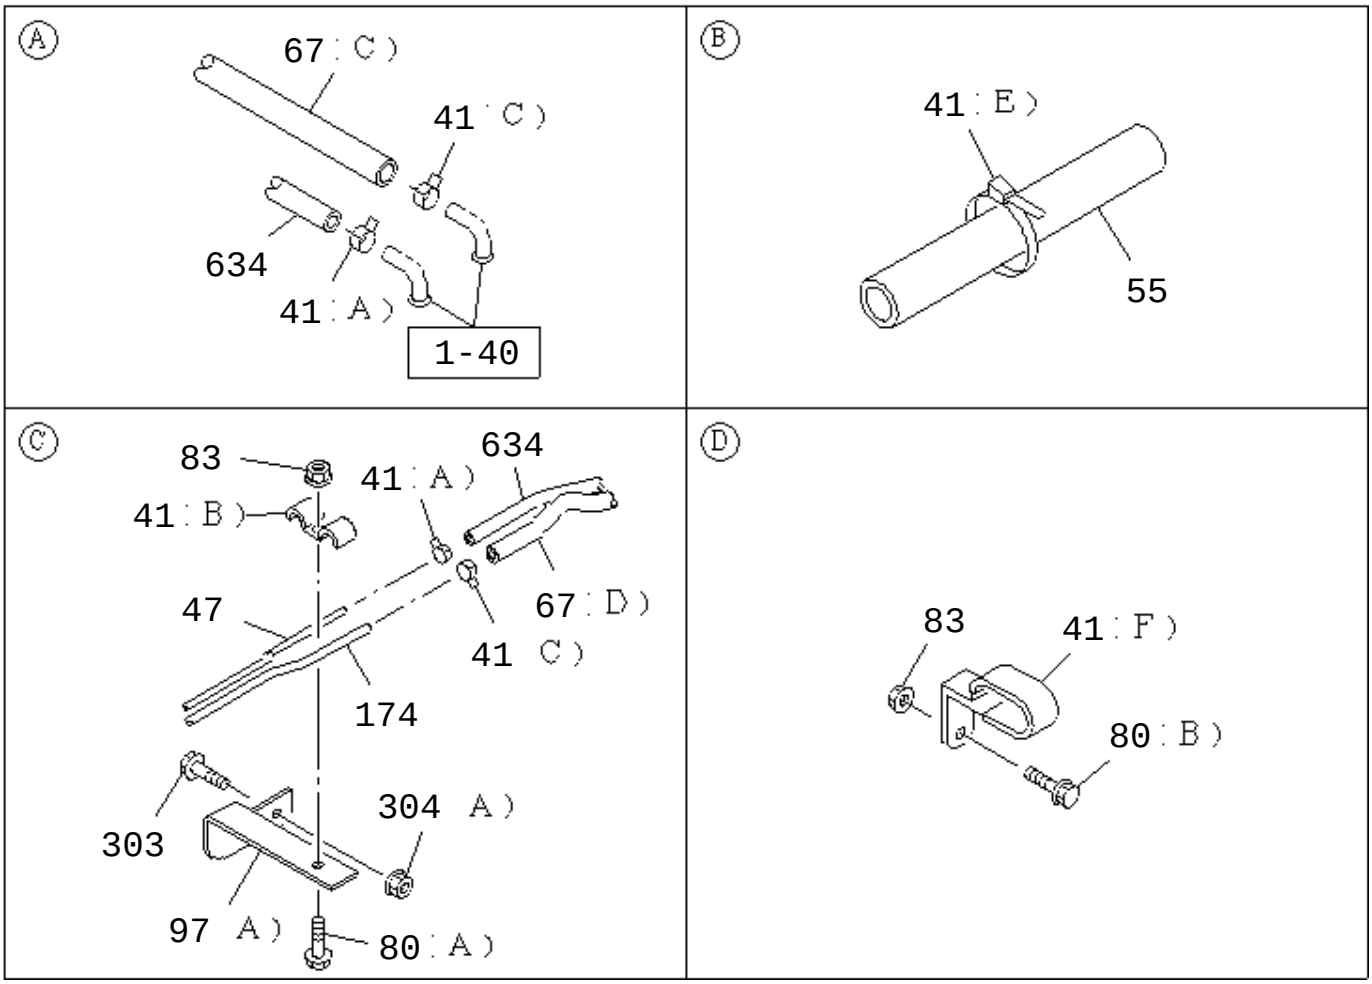



https://truckmanualshub.com/

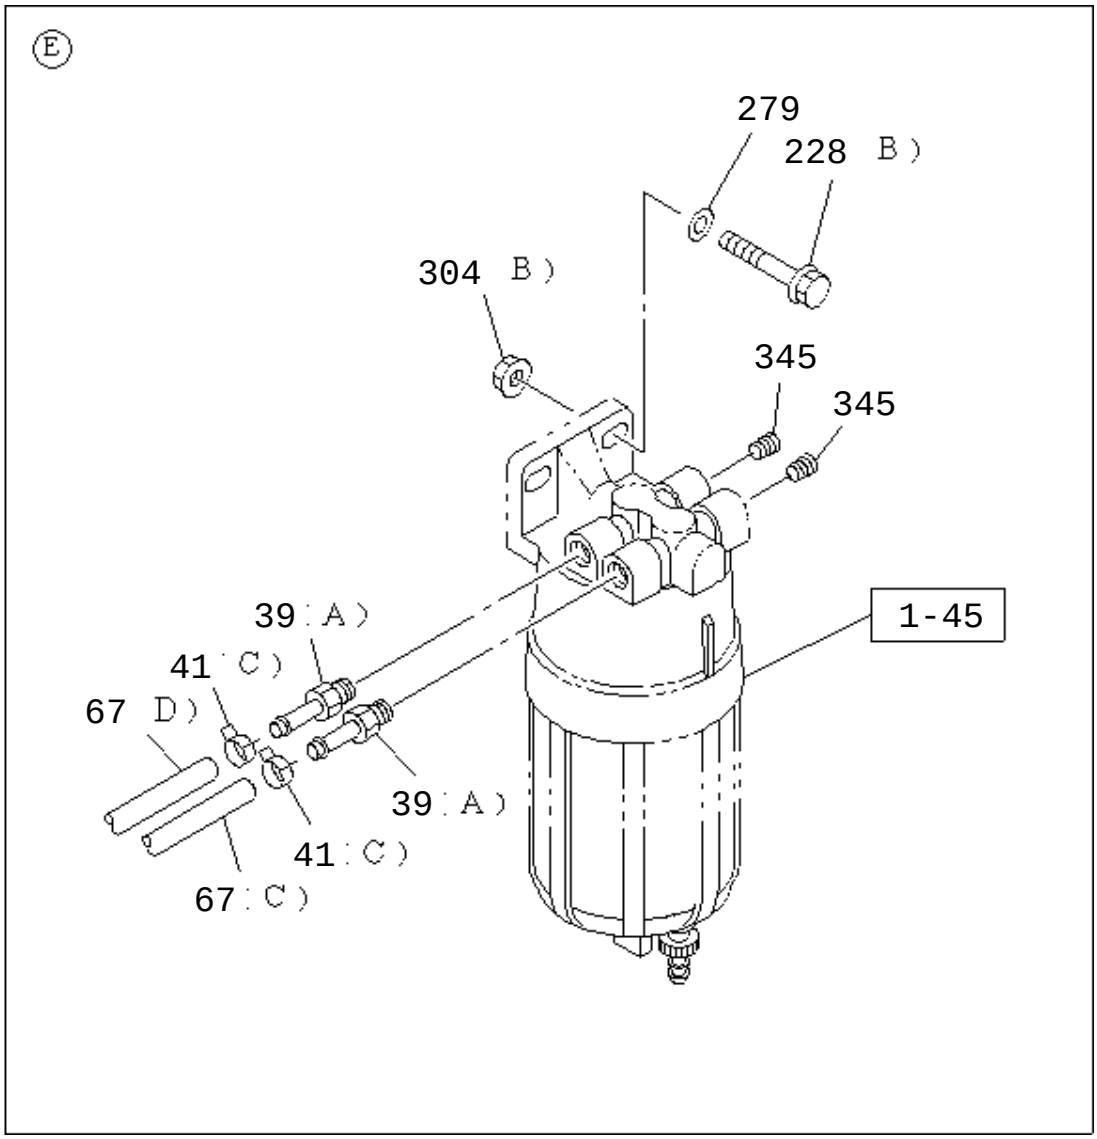


https://truckmanualshub.com/

MIXER CHASSIS;PIPING

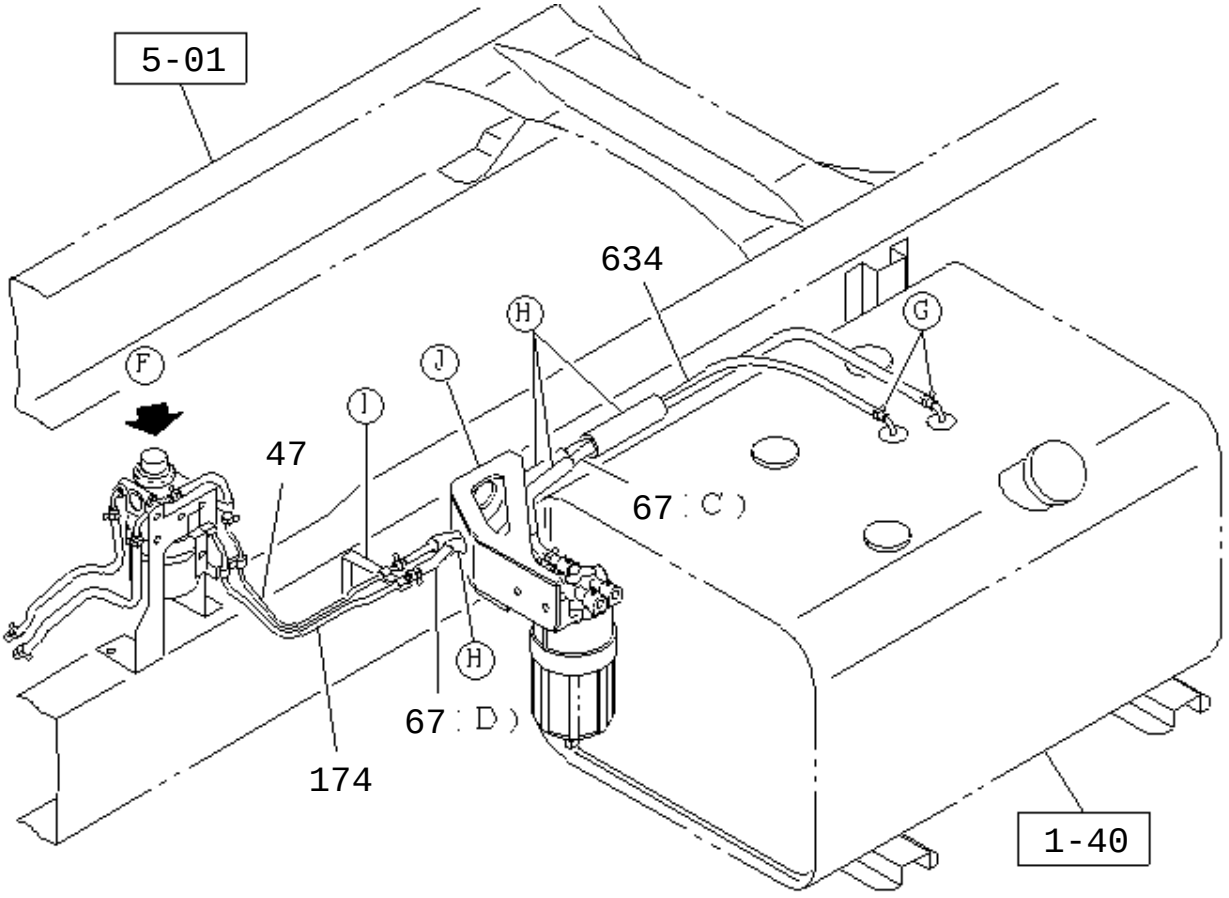

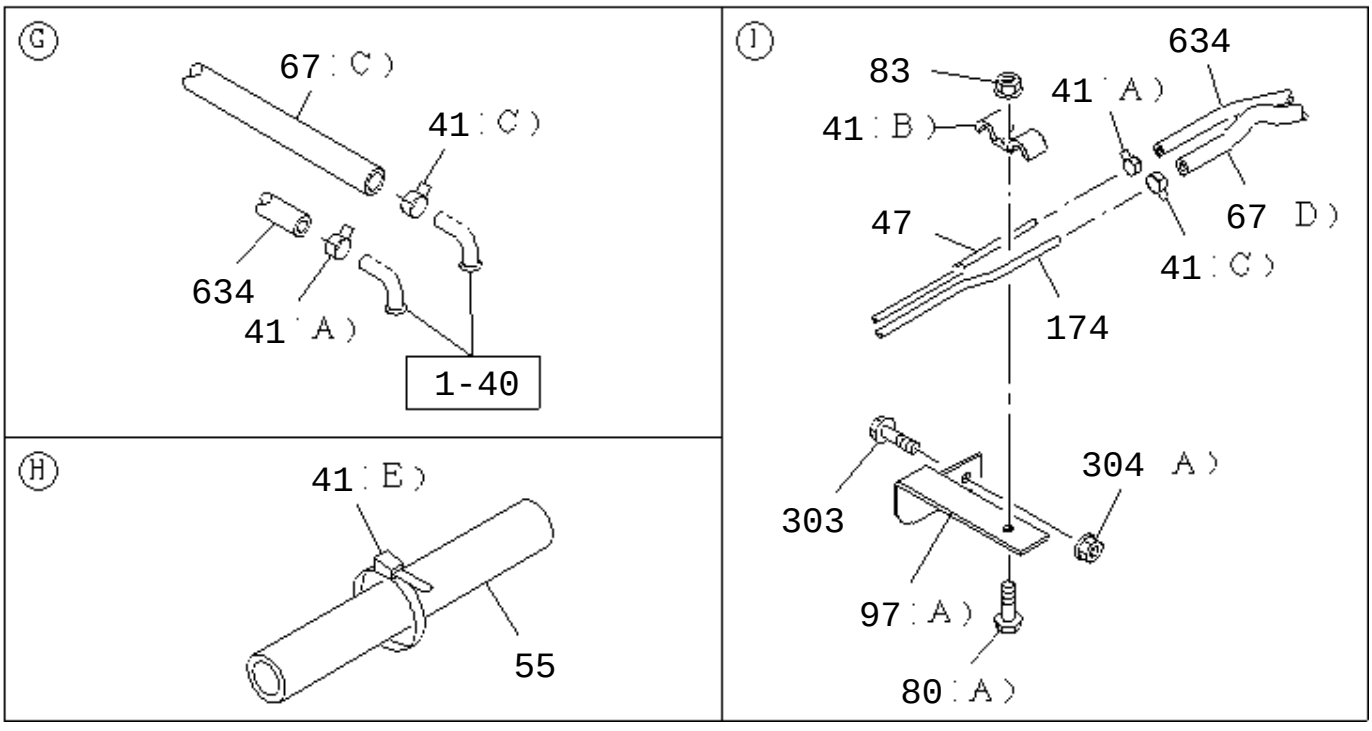


https://truckmanualshub.com/

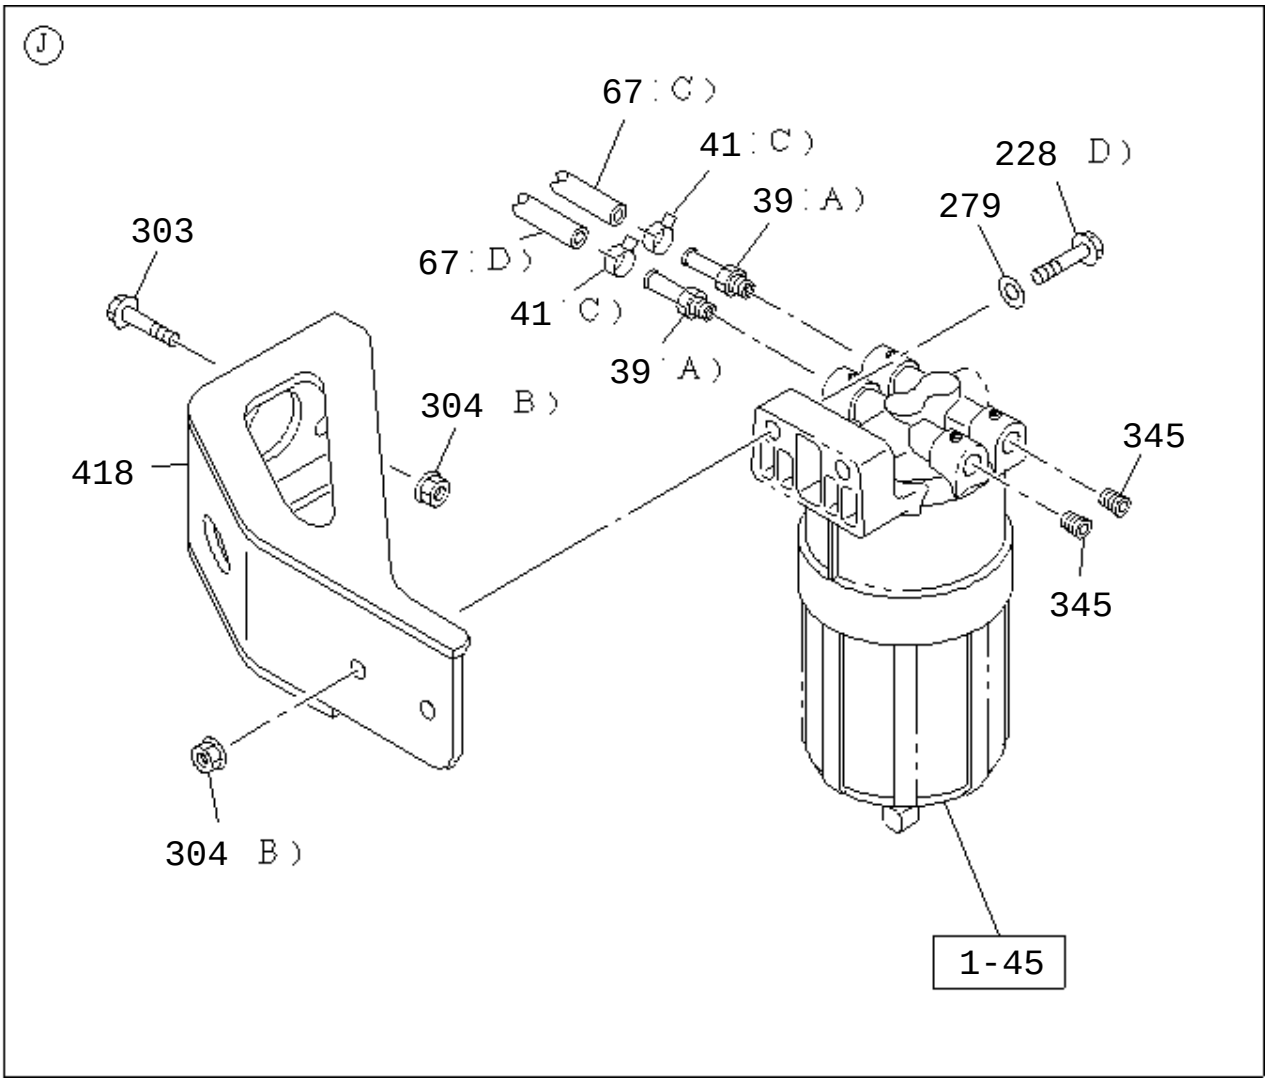


https://truckmanualshub.com/


1-41 FUEL PIPING; CHASSIS

GVZ;PIPING

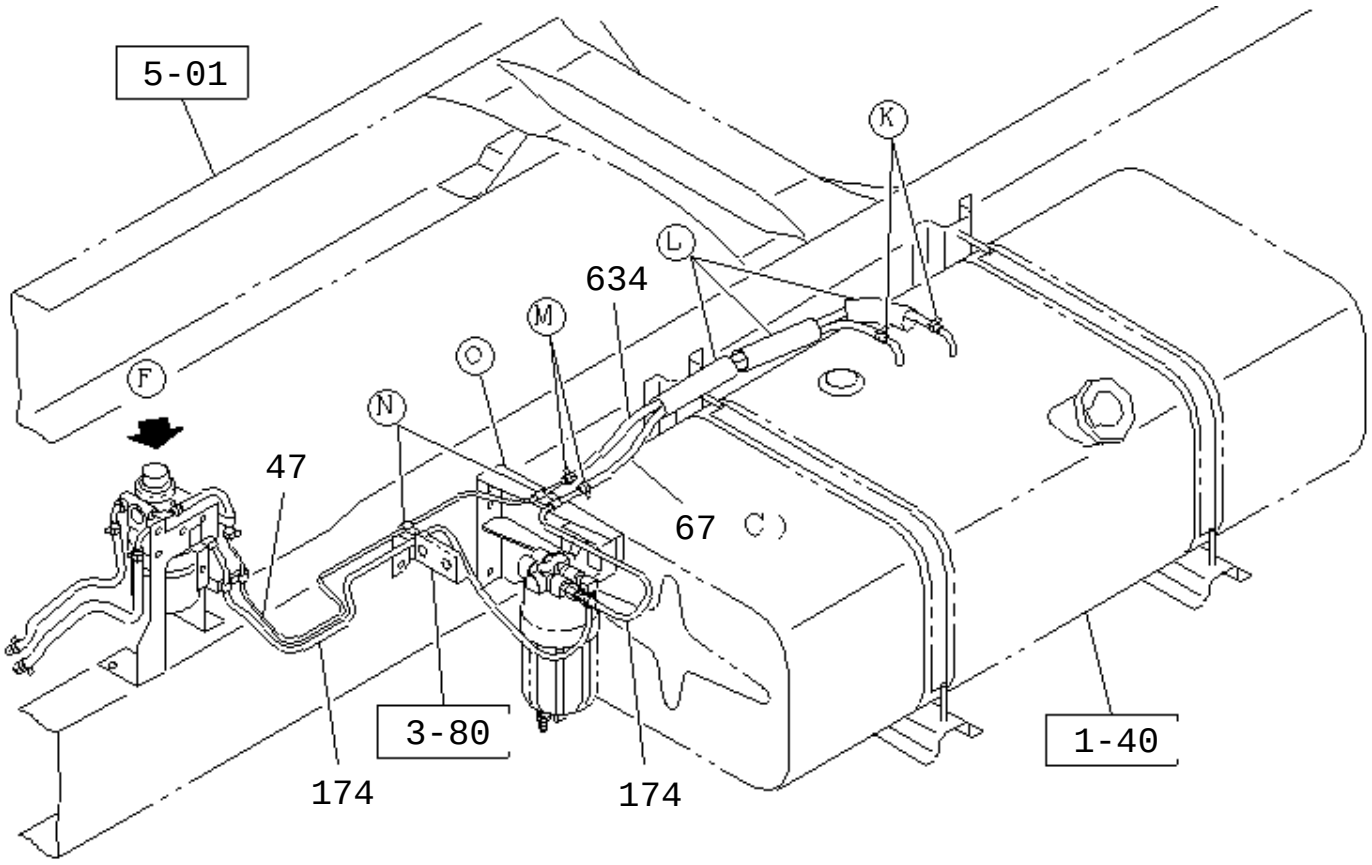

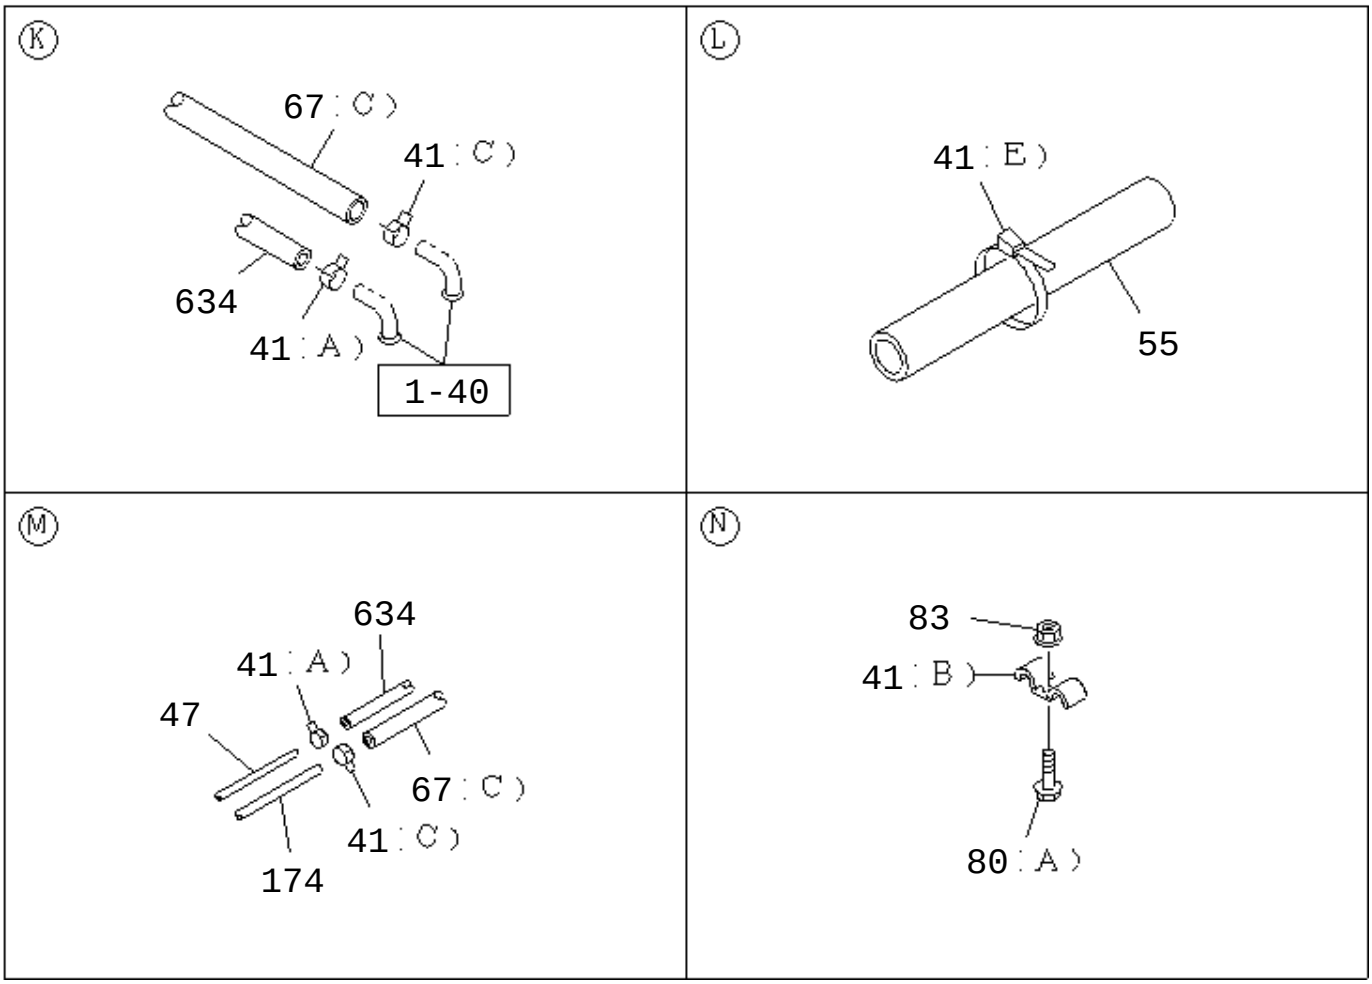


https://truckmanualshub.com/

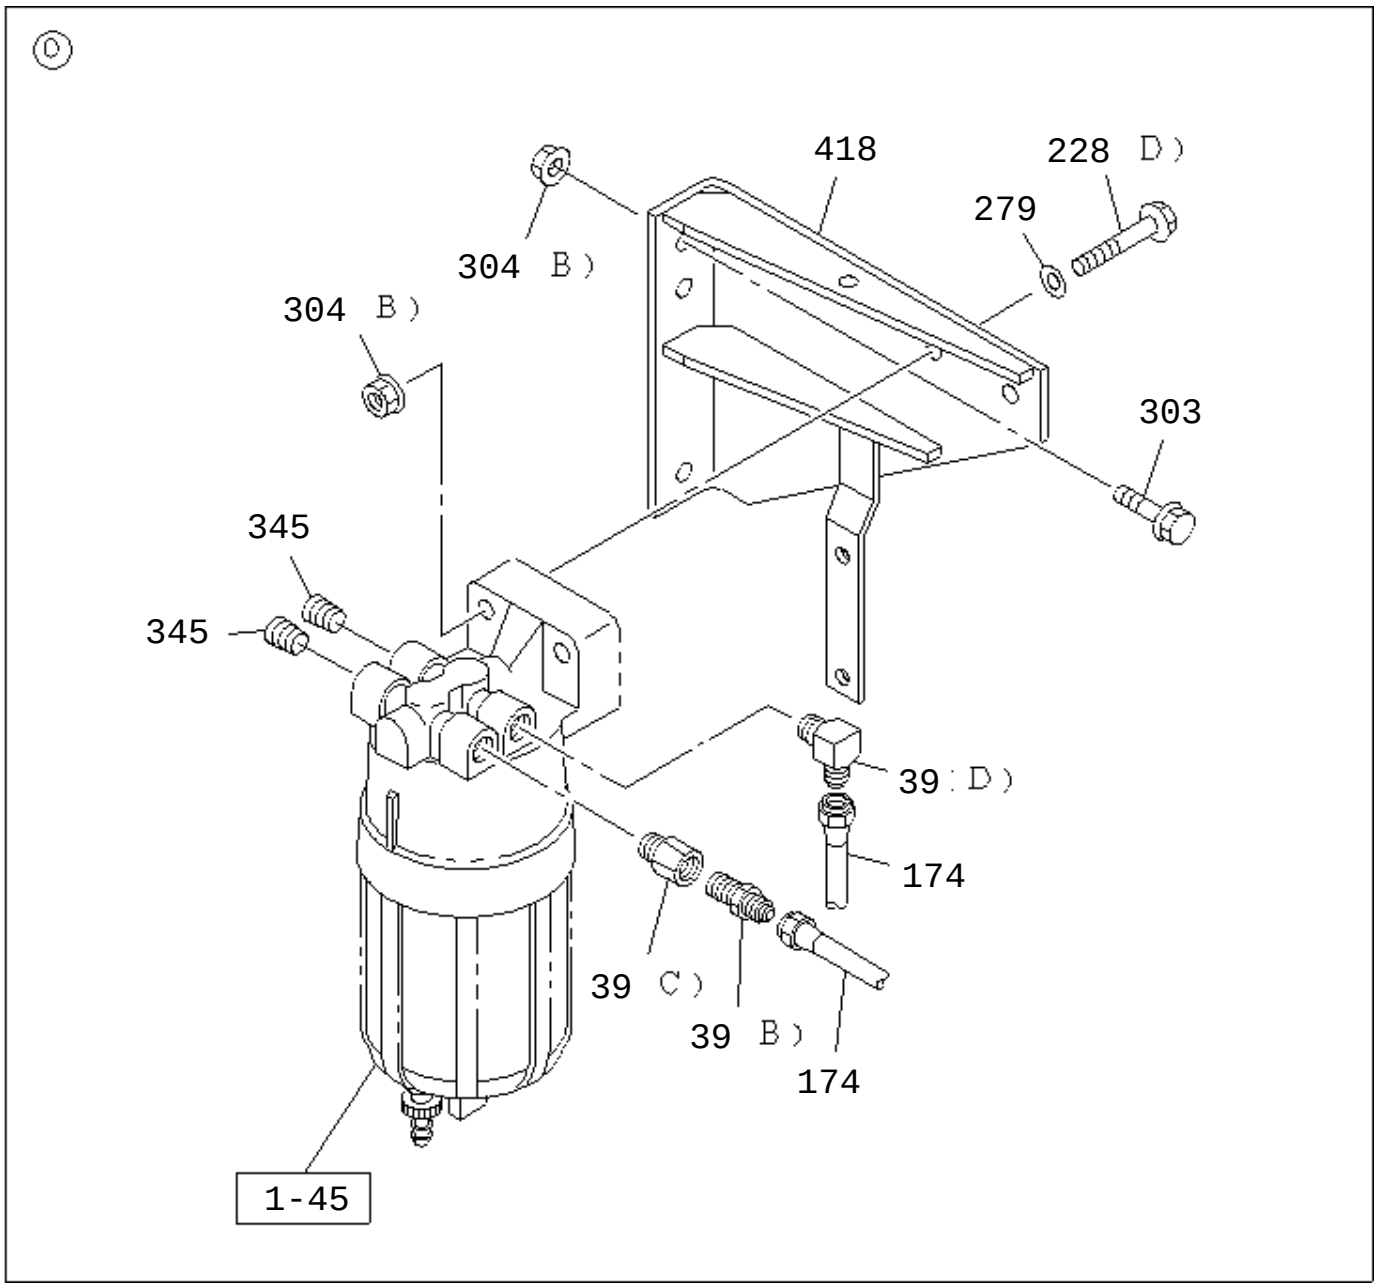

https://truckmanualshub.com/

PRE FUEL FILTER FIXING

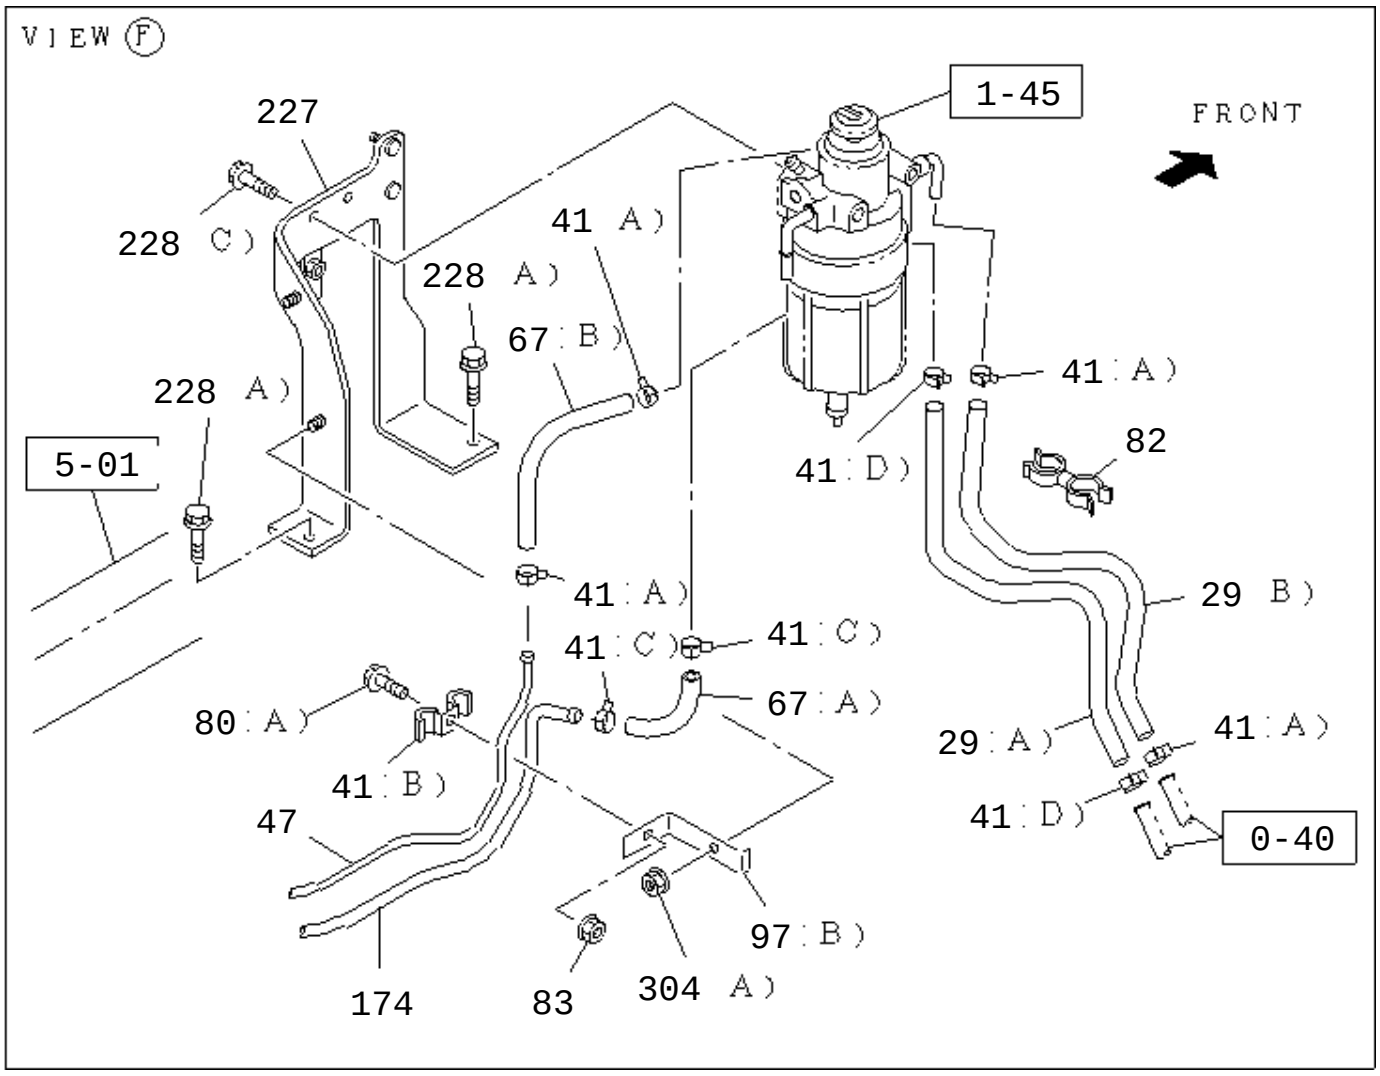

https://truckmanualshub.com/

1-41 FUEL PIPING; CHASSIS

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
29		HOSE; FUEL					
		8-98078-196-2		1312-1403	01	A	(A) IDN
		8-98078-196-2		1404-	01	AB	(A) IDN
		8-98078-197-1		1312-1403	01	A	(B) IDN
		8-98078-197-1		1404-	01	AB	(B) IDN
39		PIPE; FUEL					
		1-09650-233-1		1404-	01	B	(B) M16 & PT3/8 STRAIGHT
		1-09650-447-0		1404-	01	B	(D) M16 & NPTF3/8 ELBOW
		1-09660-548-0		1404-	01	B	(C) NPTF3/8 & RC3/8
		8-98122-953-0		1312-1403	02	A	(A) NPTF3/8-18 OD=10
		8-98122-953-0		1404-	02	AB	(A) NPTF3/8-18 OD=10
41		CLIP; FUEL PIPE,FUEL TANK					
		1-09701-101-0		1402-	01	A	MIXER CHASSIS<6NR> (F) ID=14X29 H=30 L=25
		1-09700-747-0		1404-	03	B	(B) ID=11 & 9 L=17.5 & 17.5
		1-09704-102-0		1404-	04	B	(C) ID=14 IDN
		5-09707-030-1		1404-	03	B	(E) L=250 IDN
		1-09700-747-0		1312-	02	A	(B) ID=11 & 9 L=17.5 & 17.5
		1-09701-101-0		1312-1401	03	A	(F) ID=14X29 H=30 L=25
		1-09701-101-0		1402-	03	A	EXC. MIXER CHASSIS<6NR> (F) ID=14X29 H=30 L=25
		1-09704-102-0		1312-	06	A	(C) ID=14 IDN
		5-09707-030-1		1312-	04	A	(E) L=250 IDN
		8-94238-568-0		1312-1403	02	A	(D) ID=16 IDN
		8-94238-568-0		1404-	02	AB	(D) ID=16 IDN
		8-94238-571-0		1312-1403	06	A	(A) ID=13 IDN

https://truckmanualshub.com/

1-41 FUEL PIPING; CHASSIS

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
41		8-94238-571-0		1404-	06	AB	(A) ID=13 IDN
47		PIPE; FUEL,RETURN					
		8-98248-097-0		1404-	01	B	L=987
		8-98117-709-0		1312-	01	A	L=539 IDN
55		COVER; PIPE,FUEL TANK					
		1-09360-677-1		1402-1403	03	A	MIXER CHASSIS<6NR> L=150 SERVICED BY L=1300
		1-09360-677-1		1404-	03	A	MIXER CHASSIS<6NR> L=150 SERVICED BY L=1300
		1-09360-677-1		1404-	03	B	L=150 SERVICED BY L=1300
		1-09360-677-1		1312-1401	04	A	L=150 SERVICED BY L=1300
		1-09360-677-1		1402-	04	A	EXC. MIXER CHASSIS<6NR> L=150 SERVICED BY L=1300
67		HOSE; FUEL,DELIVERY					
		0-01260-300-0		1312-1401	01	A	(A) L=960 SERVICED BY L=3000
		0-01260-300-0		1402-	01	A	EXC. MIXER CHASSIS<6NR> (A) L=960 SERVICED BY L=3000
		0-01260-300-0		1312-1401	01	A	(A) L=1900 SERVICED BY L=3000
		0-01260-300-0		1402-	01	A	EXC. MIXER CHASSIS<6NR> (A) L=1900 SERVICED BY L=3000
		8-98157-878-0		1402-	01	A	MIXER CHASSIS<6NR> (D) L=300
		8-98250-603-0		1402-	01	A	MIXER CHASSIS<6NR> (C) L=1000
		0-01260-300-0		1312-1403	01	A	(A) L=110 SERVICED BY L=3000
		0-01260-300-0		1404-	01	AB	(A) L=110 SERVICED BY L=3000
		0-01558-300-0		1312-1403	01	A	(B) L=210 SERVICED BY L=3000
		0-01558-300-0		1404-	01	AB	(B) L=210 SERVICED BY L=3000
		0-01260-300-0		1404-	01	B	(A) L=820 SERVICED BY L=3000
80		BOLT; CLIP,FUEL TANK					
		0-28650-830-0		1402-	01	A	MIXER CHASSIS<6NR> (B) M8X30 FLANGE

https://truckmanualshub.com/

1-41 FUEL PIPING; CHASSIS


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
80		0-28650-820-0		1404-	03	B	(A) M8X20 FLANGE IDN
		0-28650-820-0		1312-	02	A	(A) M8X20 FLANGE IDN
		0-28650-830-0		1312-1401	03	A	(B) M8X30 FLANGE
		0-28650-830-0		1402-	03	A	EXC. MIXER CHASSIS<6NR> (B) M8X30 FLANGE
82		CLIP; FUEL HOSE					
		8-94169-028-0		1312-1403	01	A	ID=13 & 16.5
		8-94169-028-0		1404-	01	AB	ID=13 & 16.5
83		NUT; CLIP,FUEL TANK					
		0-91180-108-0		1402-1403	03	A	MIXER CHASSIS<6NR> M8 FLANGE
		0-91180-108-0		1404-	03	A	MIXER CHASSIS<6NR> M8 FLANGE
		0-91180-108-0		1404-	03	B	M8 FLANGE
		0-91180-108-0		1312-1401	05	A	M8 FLANGE
		0-91180-108-0		1402-	05	A	EXC. MIXER CHASSIS<6NR> M8 FLANGE
97		BRACKET; CLIP					
		8-98053-654-0		1312-1403	01	A	(B)
		8-98053-654-0		1404-	01	AB	(B)
		8-98126-612-0		1312-	01	A	(A)
174		PIPE; FUEL,FEED,FRT					
		8-98248-096-0		1404-	01	B	L=1089
		8-98248-098-0		1404-	01	B	L=489
		8-98117-708-0		1312-	01	A	L=548 IDN
227		BRACKET; FUEL SEDIMENTER					
		8-98044-366-3		1312-1403	01	A	
		8-98044-366-3		1404-	01	AB	
228		BOLT; BRKT,SEDIMENTER					
		0-28051-050-0		1402-1403	02	A	WHEEL BASE 4700MM(47W) (D) M10X50 FLANGE
		0-28051-050-0		1404-	02	AB	WHEEL BASE 4700MM(47W) (D) M10X50 FLANGE
		0-28050-825-0		1312-1403	02	A	(A) M8X25 FLANGE
		0-28050-825-0		1404-	02	AB	(A) M8X25 FLANGE
		0-28051-060-0		1312-	02	A	WHEEL BASE 5300MM(53W),WHEEL BASE 7100MM(71 (B) M10X60 FLANGE
		0-28650-820-0		1312-1403	02	A	(C) M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	(C) M8X20 FLANGE IDN
279		WASHER					


https://truckmanualshub.com/


1-41 FUEL PIPING; CHASSIS

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
279		0-91614-710-0		1312-1403	02	A	ID=10.5 OD=26
		0-91614-710-0		1404-	02	AB	ID=10.5 OD=26
303		BOLT; BRKT					
		0-28651-035-0		1402-1403	02	A	WHEEL BASE 4700MM(47W) M10X35 FLANGE IDN
		0-28651-035-0		1404-	02	A	WHEEL BASE 4700MM(47W) M10X35 FLANGE IDN
		0-28651-035-0		1404-	02	B	M10X35 FLANGE IDN
		0-28650-835-0		1312-	02	A	M8X35 FLANGE
304		NUT; BRKT					
		0-91180-108-0		1404-	01	B	(A) M8 FLANGE
		0-91180-108-0		1312-	03	A	(A) M8 FLANGE
		0-91180-210-0		1312-1401	02	A	(B) M10 FLANGE
		0-91180-210-0		1402-1403	02	A	WHEEL BASE 4700MM(47W) (B) M10 FLANGE
		0-91180-210-0		1402-1403	02	A	(B) M10 FLANGE
		0-91180-210-0		1404-	02	AB	(B) M10 FLANGE
		0-91180-210-0		1404-	02	A	WHEEL BASE 4700MM(47W) (B) M10 FLANGE
		0-91180-210-0		1404-	02	B	(B) M10 FLANGE
345		PLUG					
		8-97329-623-0		1312-1403	02	A	NPTF3/8-18
		8-97329-623-0		1404-	02	AB	NPTF3/8-18
418		BRACKET; PRE FUEL FILTER					
		8-98128-254-0		1402-1407	01	A	WHEEL BASE 4700MM(47W)
		8-98128-254-0		1408-	01	A	WHEEL BASE 4700MM(47W) EXC. BIO DIESEL FUEL B10<8NV>
		8-98136-381-0		1404-1407	01	B	
		8-98136-381-0		1408-	01	A	WHEEL BASE 4700MM(47W) BIO DIESEL FUEL B10<8NV>
		8-98136-381-0		1408-	01	B	
634		HOSE; RUBBER RETURN					
		8-98250-604-0		1402-	01	A	MIXER CHASSIS<6NR> L=1080
		0-01558-300-0		1404-	01	B	L=730 SERVICED BY L=3000
		0-01558-300-0		1312-1401	01	A	L=1100 SERVICED BY L=3000
		0-01558-300-0		1402-	01	A	EXC. MIXER CHASSIS<6NR> L=1100 SERVICED BY L=3000
1-40		Move to 1-40					
5-01		Move to 5-01					
1-45		Move to 1-45					
3-80		Move to 3-80					
0-40		Move to 0-40					


https://truckmanualshub.com/

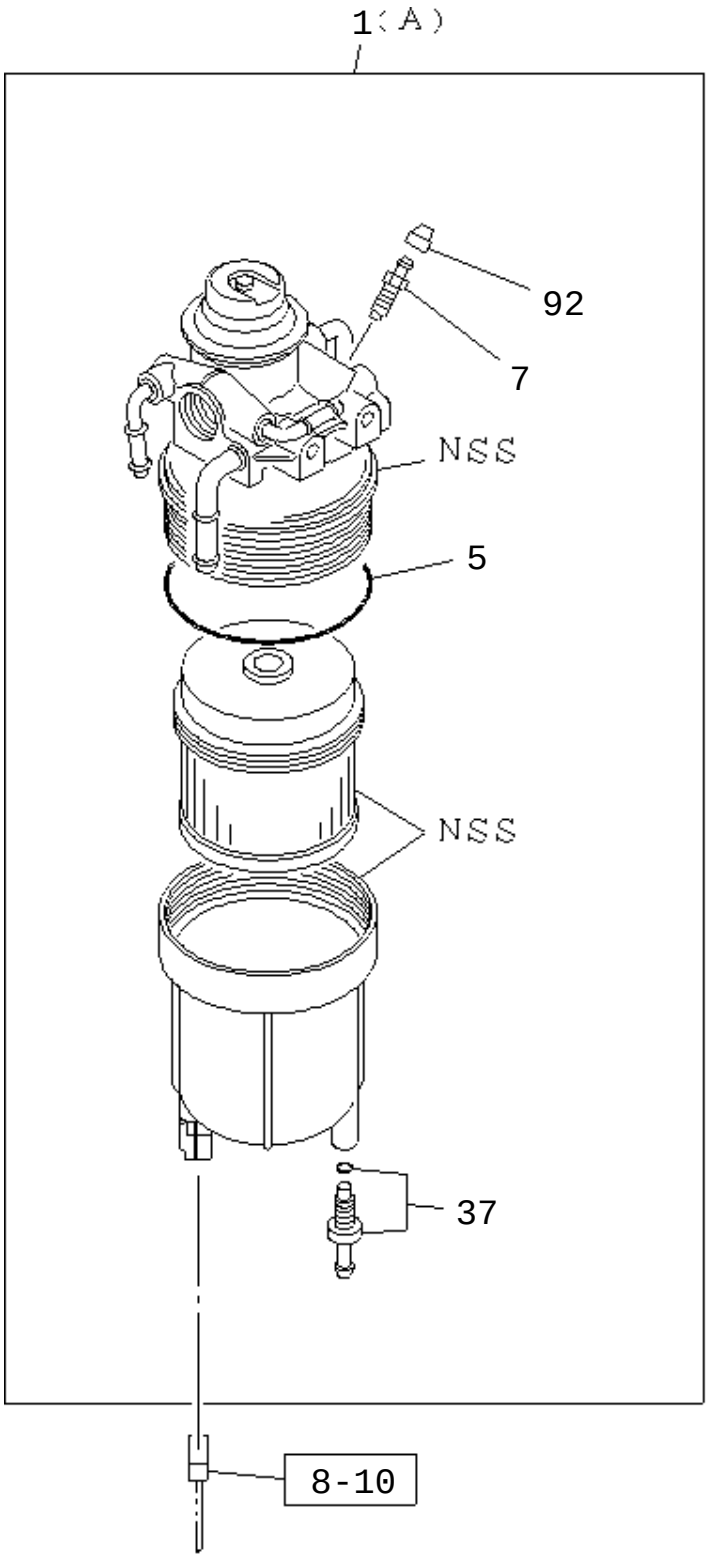

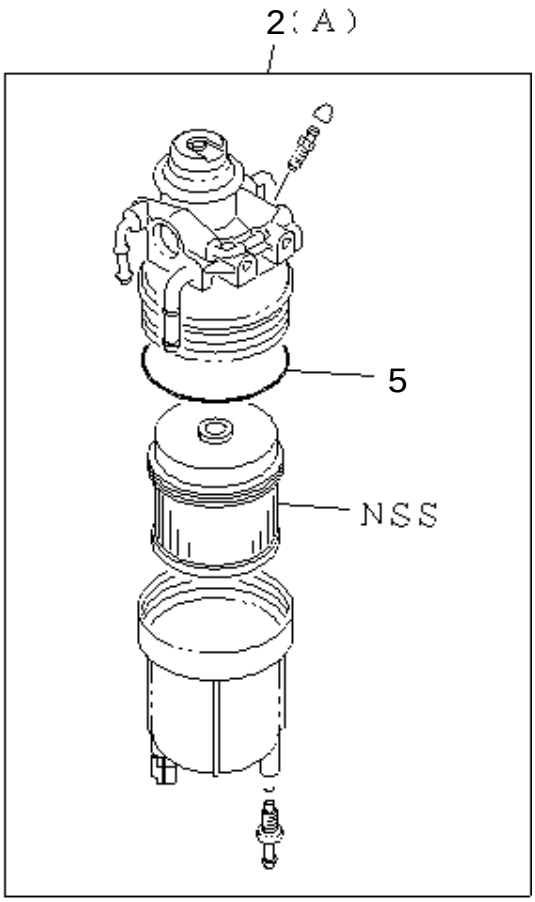

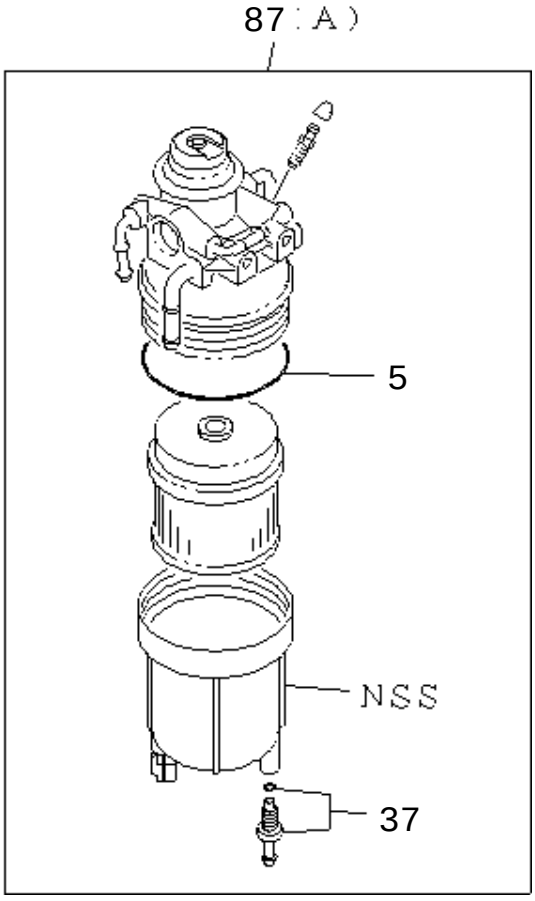

https://truckmanualshub.com/

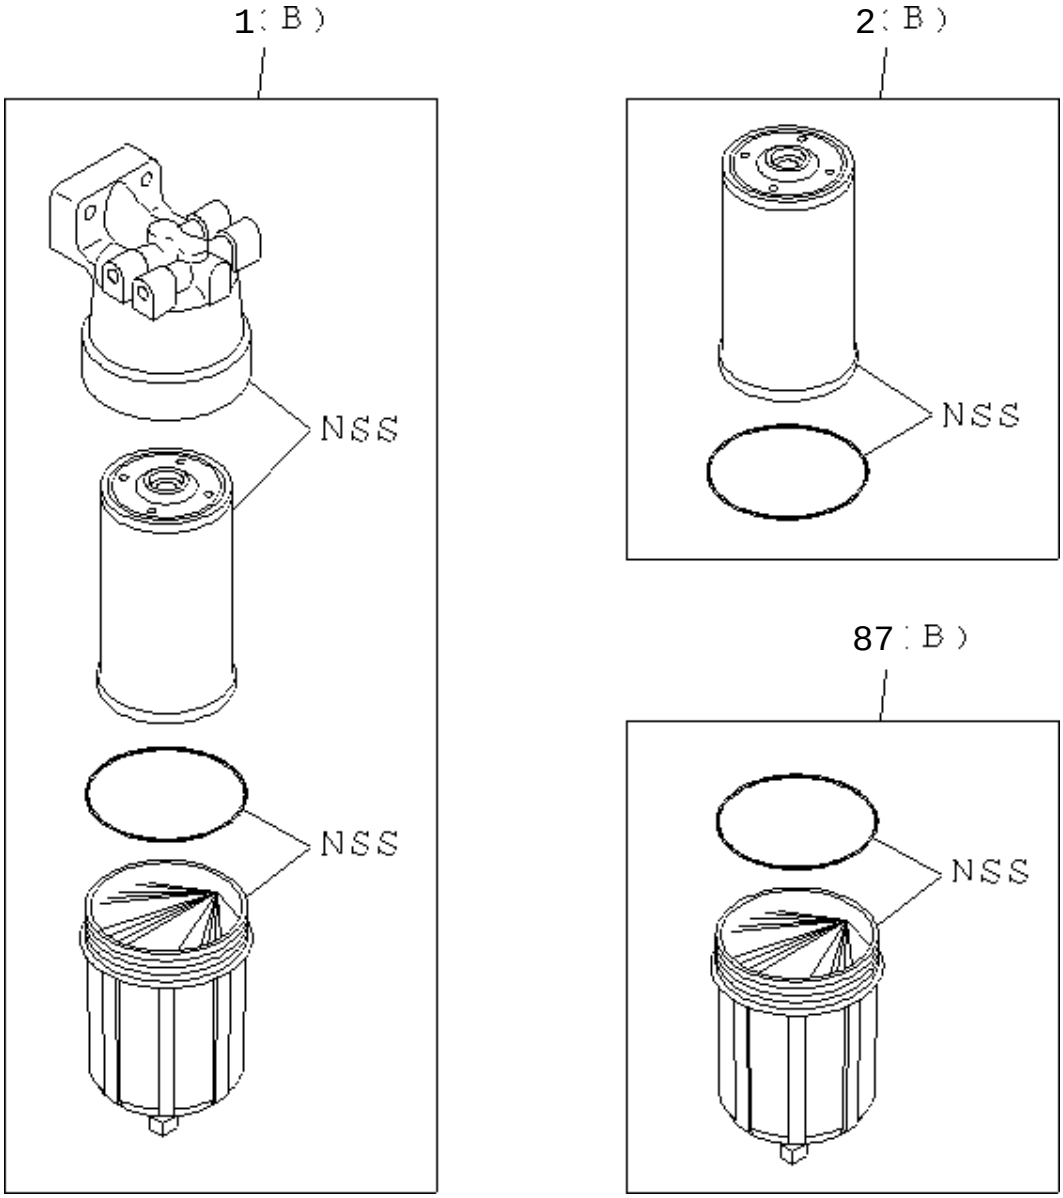



https://truckmanualshub.com/

1-45 WATER SEDIMENTER; FUEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		SEDIMENTER; FUEL					
		8-98086-193-1		1312-1403	01	A	
							(B)
		8-98086-193-1		1404-	01	AB	
							(B)
		8-98162-904-3		1312-1403	01	A	
							(A)
		8-98162-904-3		1404-	01	AB	
							(A)
2	A	ELEMENT; FUEL FILTER					
		8-98092-481-1		1312-1403	01	A	
							(B)
		8-98092-481-1		1404-	01	AB	
							(B)
		8-98203-599-0		1312-1403	01	A	
							(A)
		8-98203-599-0		1404-	01	AB	
							(A)
5		GASKET; UPR COVER,SEDIMENTER					
		8-98203-600-0		1312-1403	01	A	
		8-98203-600-0		1404-	01	AB	
7		PLUG; DRAIN,SEDIMENTER					
		8-98034-312-0		1312-1403	01	A	
							M8X10
		8-98034-312-0		1404-	01	AB	
							M8X10
37		PLUG; SENSOR					
		8-98037-095-0		1312-1403	01	A	
		8-98037-095-0		1404-	01	AB	
87	A	CASE ASM; SEDIMENTER					
		8-98039-987-1		1312-1403	01	A	
							(A)
		8-98039-987-1		1404-	01	AB	
							(A)
		8-98092-482-1		1312-1403	01	A	
							(B)
		8-98092-482-1		1404-	01	AB	
							(B)
92		CAP; DRAIN					
		8-98034-314-0		1312-1403	01	A	
		8-98034-314-0		1404-	01	AB	
8-10		Move to 8-10					

https://truckmanualshub.com/

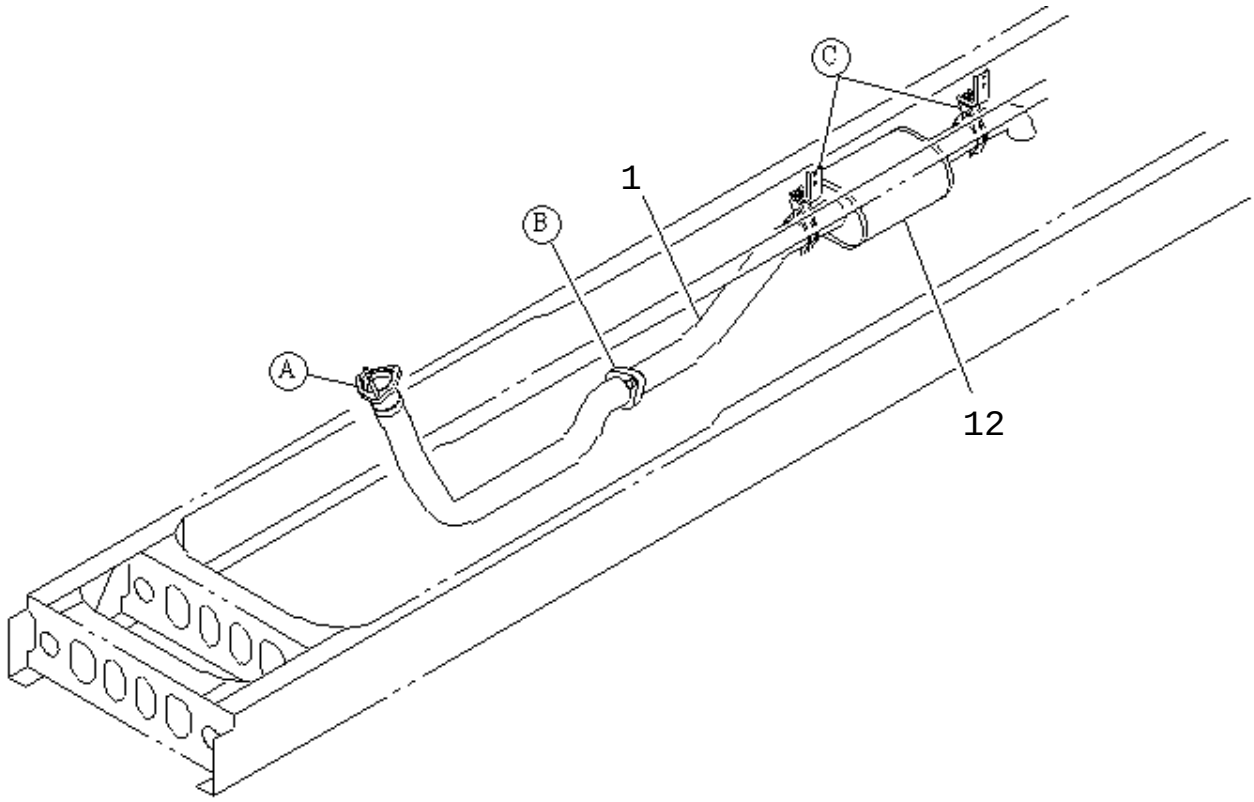

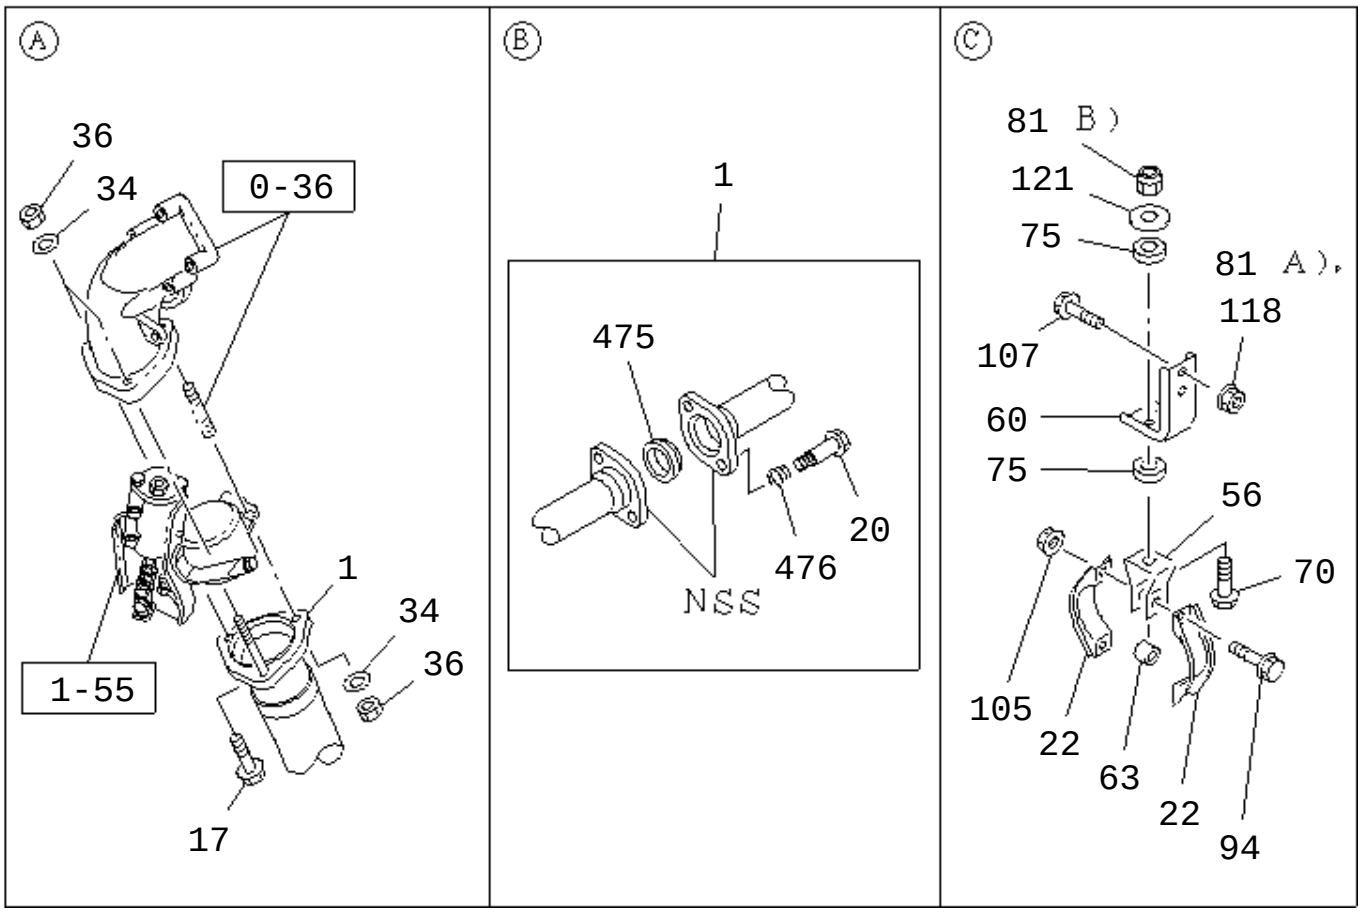

https://truckmanualshub.com/

1-50 EXHAUST PIPE AND SILENCER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		PIPE; EXH						
		8-98183-953-0		1312-1403	R	01	A	IDN
		8-98183-953-0		1404-	R	01	AB	IDN
12	D	SILENCER ASM; EXH						
		8-98182-451-0		1312-1403		01	A	IDN
		8-98182-451-0		1404-		01	AB	IDN
17		BOLT; EXH PIPE						
		1-09000-293-0		1312-1403		01	A	M12X120
		1-09000-293-0		1404-		01	AB	M12X120
20		BOLT; FLANGE,EXH PIPE						
		8-97039-586-0		1312-1403	R	02	A	M10X49.8
		8-97039-586-0		1404-	R	02	AB	M10X49.8
22		CLAMP; EXH PIPE						
		1-22133-233-0		1312-1403		04	A	ID=80-84 IDN
		1-22133-233-0		1404-		04	AB	ID=80-84 IDN
34		WASHER; EXH PIPE						
		1-09500-030-0		1312-1403		03	A	ID=13 OD=24 DISH
		1-09500-030-0		1404-		03	AB	ID=13 OD=24 DISH
36		NUT; EXH PIPE						
		1-09400-010-0		1312-1403		03	A	M12
		1-09400-010-0		1404-		03	AB	M12
56		BRACKET; CLAMP,EXH PIPE						
		1-22139-045-0		1312-1403		02	A	L=40 B=50 H=74 IDN
		1-22139-045-0		1404-		02	AB	L=40 B=50 H=74 IDN
60		BRACKET; FRAME TO BRKT						
		8-98183-955-0		1312-1403		02	A	IDN
		8-98183-955-0		1404-		02	AB	IDN
63		TUBE; DIST,BRKT						
		1-22139-026-0		1312-1403		02	A	L=11 IDN
		1-22139-026-0		1404-		02	AB	L=11 IDN
70		BOLT; BRKT						
		0-10856-050-0		1312-1403		02	A	M10X50
		0-10856-050-0		1404-		02	AB	M10X50
75		RUBBER; SUPPORT,BRKT						
		1-22159-106-1		1312-1403		04	A	OD=30
		1-22159-106-1		1404-		04	AB	OD=30
81		NUT; BRKT						
		0-91180-210-0		1312-1403		02	A	(A) M10 FLANGE
		0-91180-210-0		1404-		02	AB	(A) M10 FLANGE


https://truckmanualshub.com/

1-50 EXHAUST PIPE AND SILENCER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
81		0-91370-010-0		1312-1403		02	A	(B) M10 LOCK NUT IDN
		0-91370-010-0		1404-		02	AB	(B) M10 LOCK NUT IDN
94		BOLT; CLAMP						
		0-28651-040-0		1312-1403		04	A	M10X40 FLANGE
		0-28651-040-0		1404-		04	AB	M10X40 FLANGE
105		NUT; CLAMP						
		0-91180-210-0		1312-1403		04	A	M10 FLANGE
		0-91180-210-0		1404-		04	AB	M10 FLANGE
107		BOLT; BRKT						
		0-28651-035-0		1312-1403		04	A	M10X35 FLANGE IDN
		0-28651-035-0		1404-		04	AB	M10X35 FLANGE IDN
118		NUT; SILENCER MTG BRKT						
		0-91180-210-0		1312-1403		02	A	M10 FLANGE
		0-91180-210-0		1404-		02	AB	M10 FLANGE
121		WASHER; PL,BRKT						
		0-91614-810-0		1312-1403		02	A	ID=10.5 OD=32
		0-91614-810-0		1404-		02	AB	ID=10.5 OD=32
475		BEARING; SEAL,VIBNON,EXH PIPE						
		1-22119-294-1		1312-1403	R	01	A	OD=112
		1-22119-294-1		1404-	R	01	AB	OD=112
476		SPRING; VIBNON,EXH PIPE						
		8-94141-851-0		1312-1403	R	02	A	
		8-94141-851-0		1404-	R	02	AB	
0-36		Move to 0-36						
1-55		Move to 1-55						

https://truckmanualshub.com/

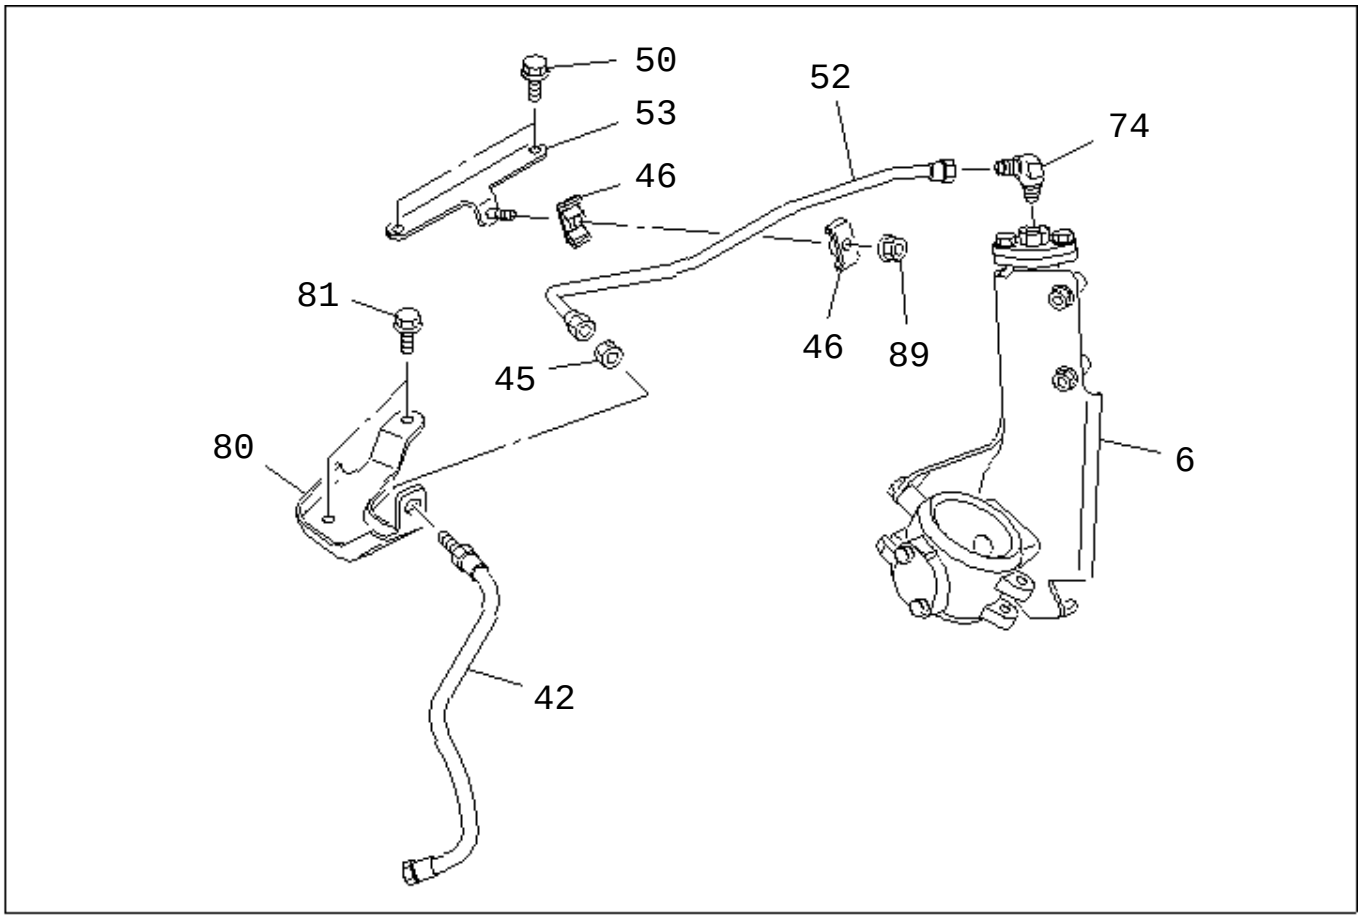

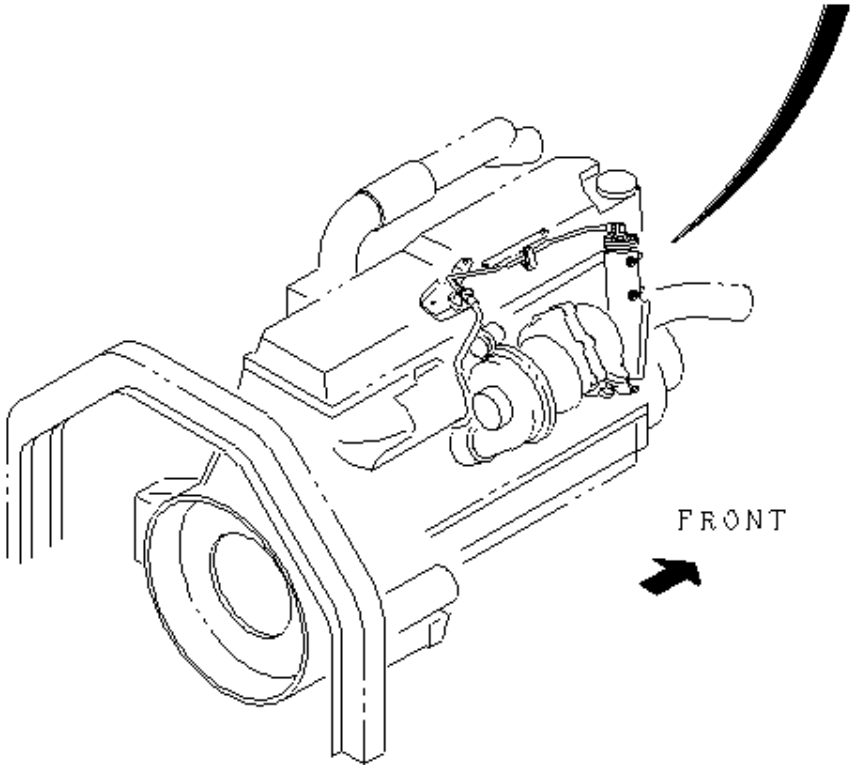


https://truckmanualshub.com/

1-55 EXHAUST BRAKE VALVE AND CONTROL CYLINDER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A 6HK1-TCS ENG(80L)
6		VALVE; EXH BRAKE 8-97602-527-1		1312-	01	A	
42		HOSE; FLEX,EXH BRK 1-09363-608-0		1312-	01	A	L=300
45		NUT; FLEX HOSE 9-09840-280-0		1312-	01	A	M12
46		CLIP; AIR PIPE 8-98148-996-2		1312-	02	A	
50		BOLT; BRKT 0-28050-812-0		1312-	02	A	M8X12 FLANGE
52		PIPE ASM; AIR FLEX HOSE 8-97603-547-0		1312-	01	A	
53		BRACKET; CLIP 8-98182-766-0		1312-	01	A	IDN
74		CONNECTOR; EXH BRK VLV 1-09650-430-0		1312-	01	A	M12 & PT1/4 ELBOW
80		BRACKET; FLEX HOSE 8-98182-767-0		1312-	01	A	IDN
81		BOLT; HOSE BRKT 0-28050-812-0		1312-	02	A	M8X12 FLANGE
89		NUT; BRKT 0-91180-106-0		1312-	01	A	M6 FLANGE

https://truckmanualshub.com/

DISC AND PLATE

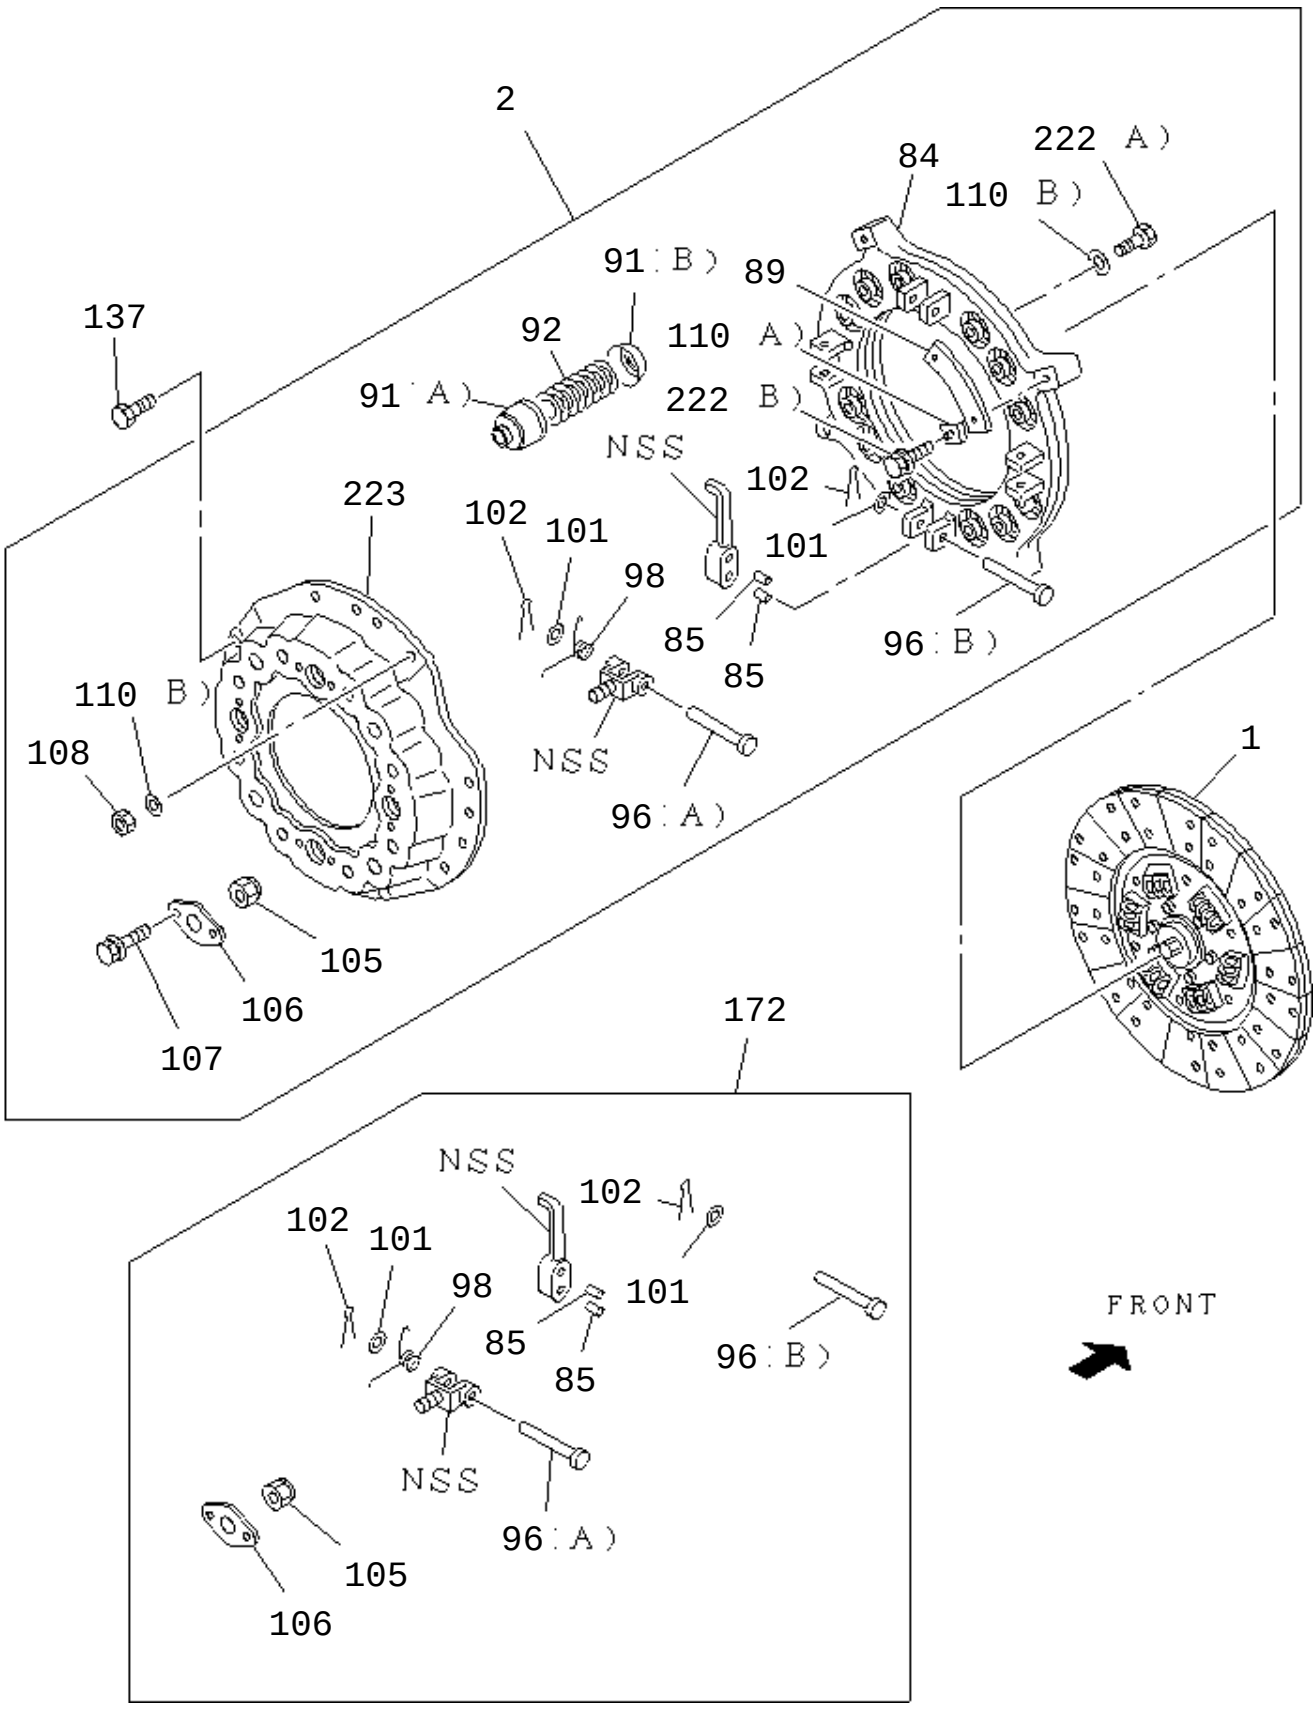

https://truckmanualshub.com/

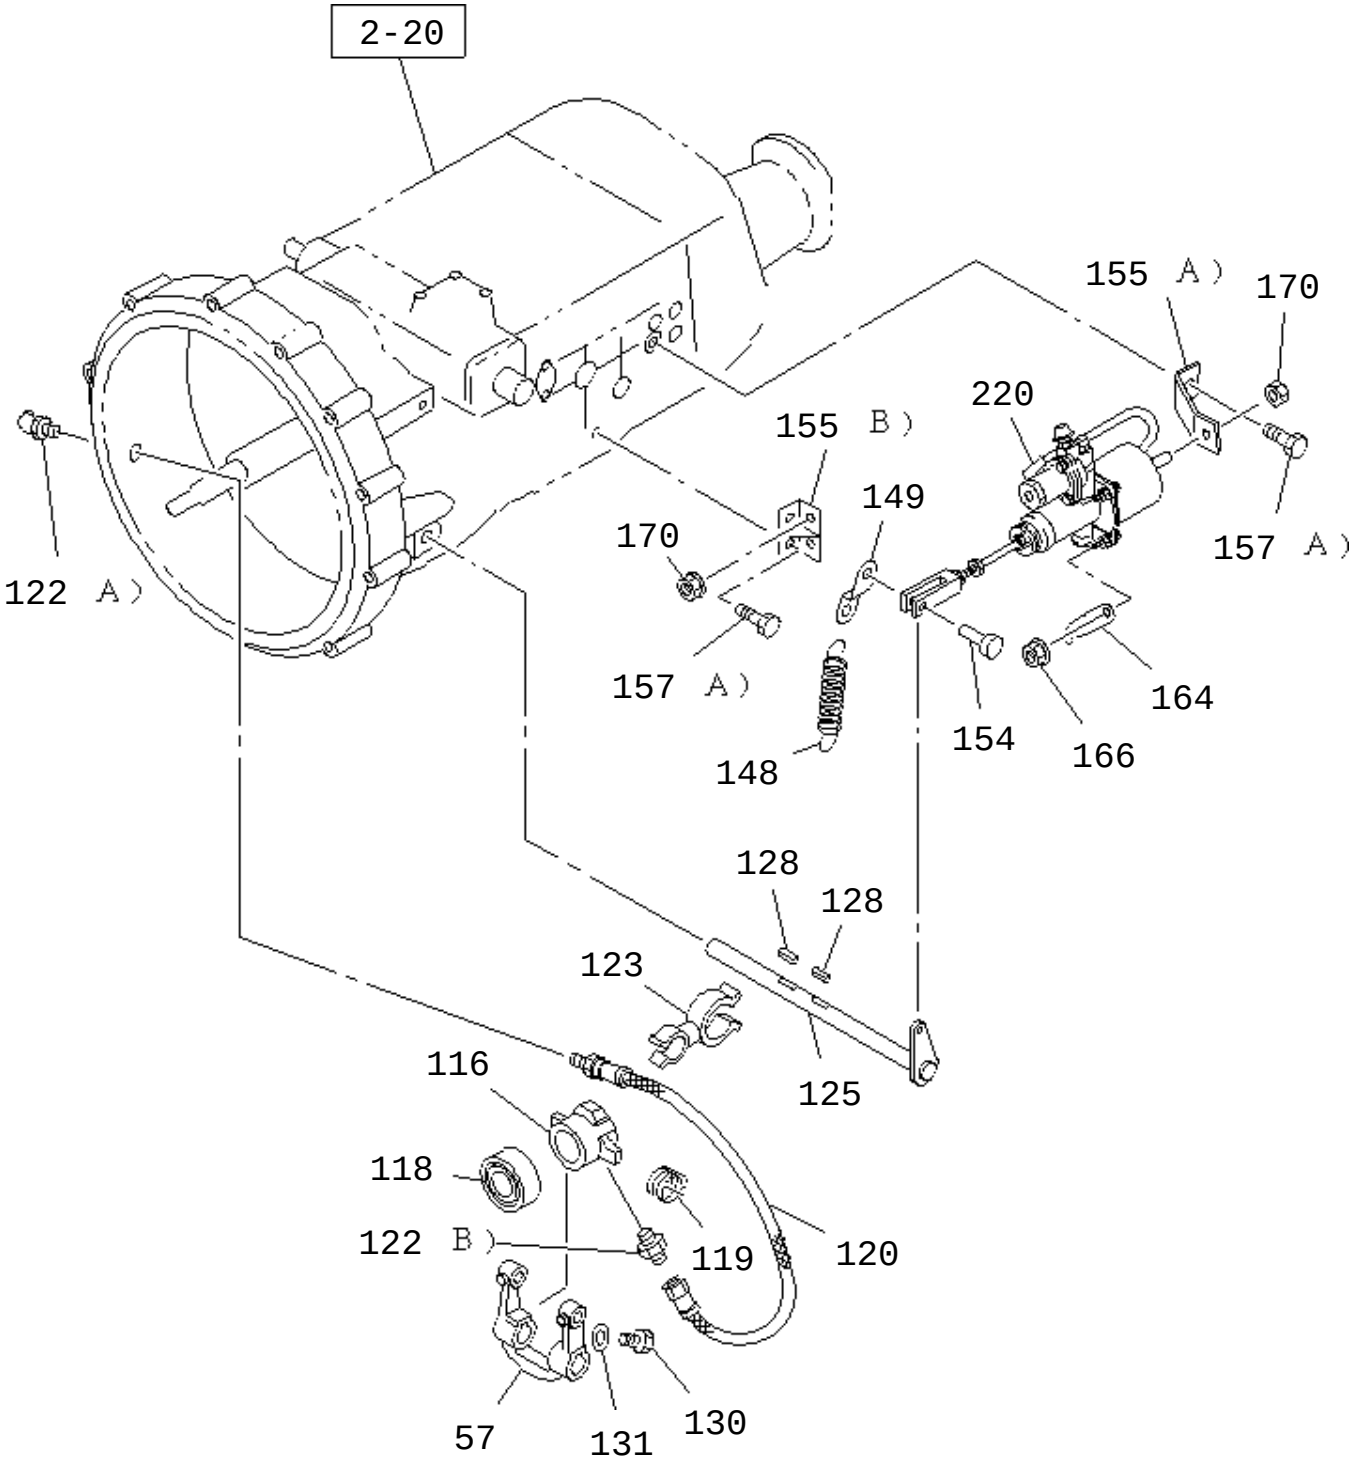

https://truckmanualshub.com/

2-01A CLUTCH -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
1	A	DISC; CLUTCH						
		1-31240-972-1		1312-		01	A	15"
2	B	PLATE ASM; PRESSURE,CLU						
		1-31220-416-0		1312-		01	A	
57		FORK; SHIFT,CLU						
		1-31341-036-0		1312-		01	A	
84		PLATE; PRESSURE						
		1-31221-100-0		1312-		01	A	15" IDN
85		BUSHING; RELEASE LEVER						
		9-31239-116-0		1312-		08	A	
89		PLATE; STRAP						
		1-31229-050-0		1312-		16	A	IDN
91		SEAT; SPR						
		1-31219-012-0		1312-		12	A	(A) ID=37 H=25
		1-31219-013-0		1312-		12	A	(B) ID=37 H=15
92		SPRING; CLU						
		1-31214-074-0		1312-		12	A	
96		PIN; RELEASE LEVER						
		1-31232-005-0		1312-		04	A	(A) L=49.0
		1-31232-014-0		1312-		04	A	(B) L=57.0
98		SPRING; RETURN						
		1-31233-003-0		1312-		04	A	
101		WASHER; RELEASE LEVER						
		1-31239-058-0		1312-		08	A	IDN
102		PIN; SPLIT,RELEASE LEVER						
		9-08103-022-0		1312-		08	A	OD=2.7 L=22
105		NUT; SUPPORT						
		1-31235-014-0		1312-		04	A	IDN
106		PLATE; LK,LEVER SUPPORT						
		1-31239-019-0		1312-		04	A	
107		BOLT; LK PLATE						
		1-31239-061-0		1312-		08	A	IDN
108		NUT; STRAP						
		1-09449-036-0		1312-		04	A	
110		WASHER; SPECIAL,STRAP						
		1-31229-009-0		1312-		04	A	(A) T=1.2
		8-97374-512-0		1312-		08	A	(B) T=3.2
116	B	BLOCK; SHIFT,CLU						
		1-31321-086-1		1312-		01	A	
118	B	BEARING; CLU RELEASE						
		1-09820-117-0		1312-		01	A	
119	B	SPRING; SHIFT FORK						
		1-31329-014-0		1312-	R	01	A	
		1-31329-015-0		1312-	L	01	A	
120		HOSE; FLEX,SHIFT BLOCK,CLU						
		1-09364-881-0		1312-		01	A	L=360
122		NIPPLE; GREASE,FLEX HOSE,SHIFT BLOCK						
		0-90301-610-0		1312-		01	A	(A) PT1/8 ELBOW
		1-09660-710-0		1312-		01	A	(B) PT1/8 & M10
123		CLIP; FLEX HOSE,SHIFT BLOCK						

https://truckmanualshub.com/


2-01A CLUTCH -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
123		8-97010-484-0		1312-		01	A	
125		SHAFT; CLU						
		1-31342-336-0		1312-		01	A	
128		KEY; FEATHER,CLU SHAFT						
		9-09867-008-0		1312-		02	A	
130		SCREW; SHIFT FORK						
		9-06120-816-0		1312-		01	A	
131		WASHER; LK,SHIFT FORK						
		0-91510-508-0		1312-		01	A	
								ID=8.2
137		BOLT; CLU COVER						
		0-28151-020-0		1312-		12	A	
								M10X20 FLANGE
148	B	SPRING; CLU RETURN						
		1-09583-305-0		1312-		01	A	
								L=135
149		EYE; SPRING,RETURN SPRING						
		1-31426-041-0		1312-		01	A	
154		PIN; JAW JOINT						
		1-31424-009-0		1312-		01	A	
155		BRACKET; MINIPACK						
		1-31429-472-1		1312-		01	A	
								(B)
		1-31429-473-0		1312-		01	A	
								(A)
157		BOLT; BRKT						
		0-28151-025-0		1312-		03	A	
								(A) M10X25 FLANGE
164		EYE; SPRING						
		1-31426-050-0		1312-		01	A	
166		NUT; SPRING EYE						
		0-91180-210-0		1312-		01	A	
								M10 FLANGE
170		NUT; BOOSTER FIX						
		0-91180-210-0		1312-		03	A	
								M10 FLANGE
172		LEVER KIT; RELEASE,CLU						
		1-87831-172-1		1312-		01	A	
220		BOOSTER ASM; CLU						SEE FIG-NO 2-07 FOR COMPONENT.
		1-31800-516-1		1312-		01	A	
222		BOLT; STRAP						
		1-09040-042-0		1312-		04	A	
								(B) M10X23.2
		1-09040-043-0		1312-		04	A	
								(A) M10X26 HEX SOCKET
223		COVER; CLU						
		1-31211-019-1		1312-		01	A	
								IDN
2-20		Move to 2-20						
		Move to 2-20						

https://truckmanualshub.com/

2-01B CLUTCH -B FULLER M/T


DISC AND PLATE

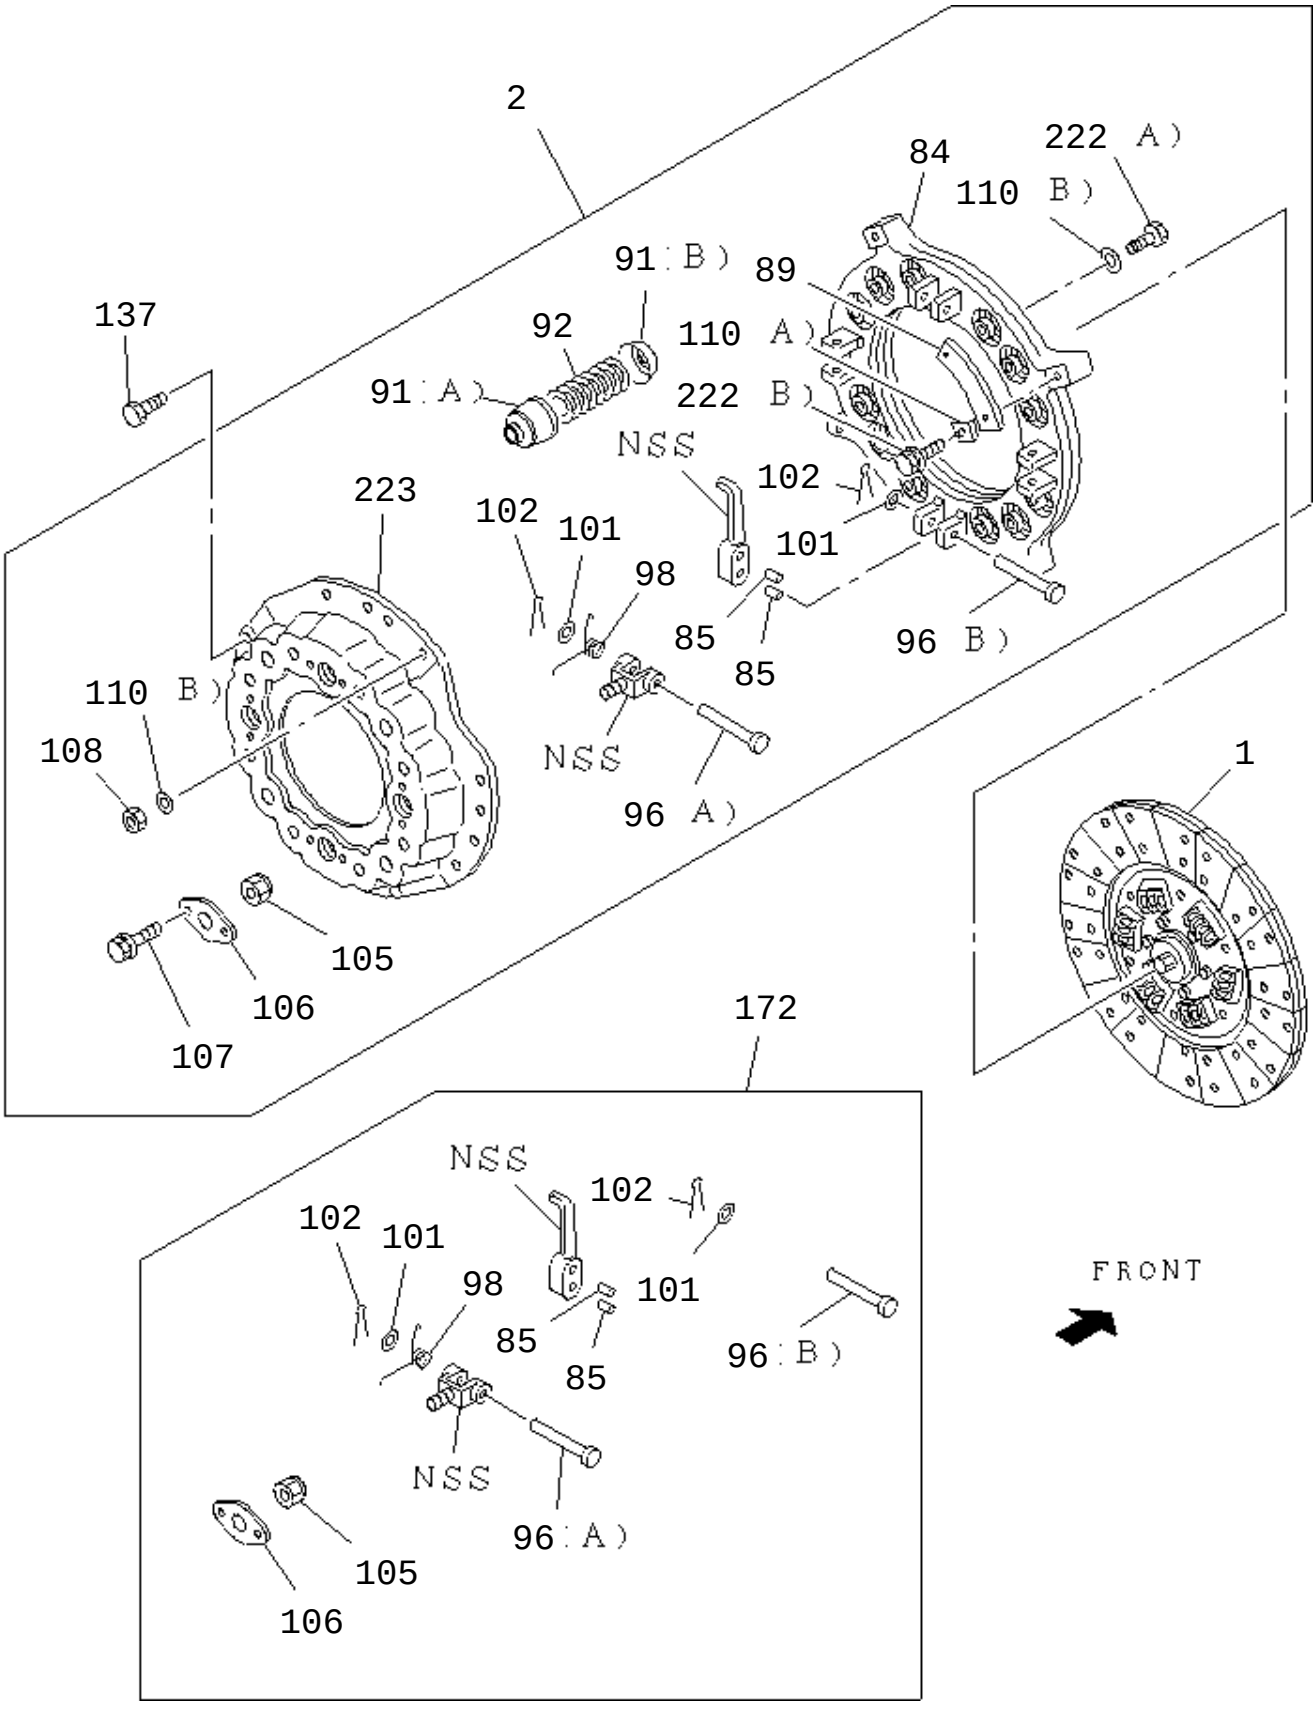

https://truckmanualshub.com/

2-01B CLUTCH -B FULLER M/T

CLUTCH BOOSTER AND BRACKET

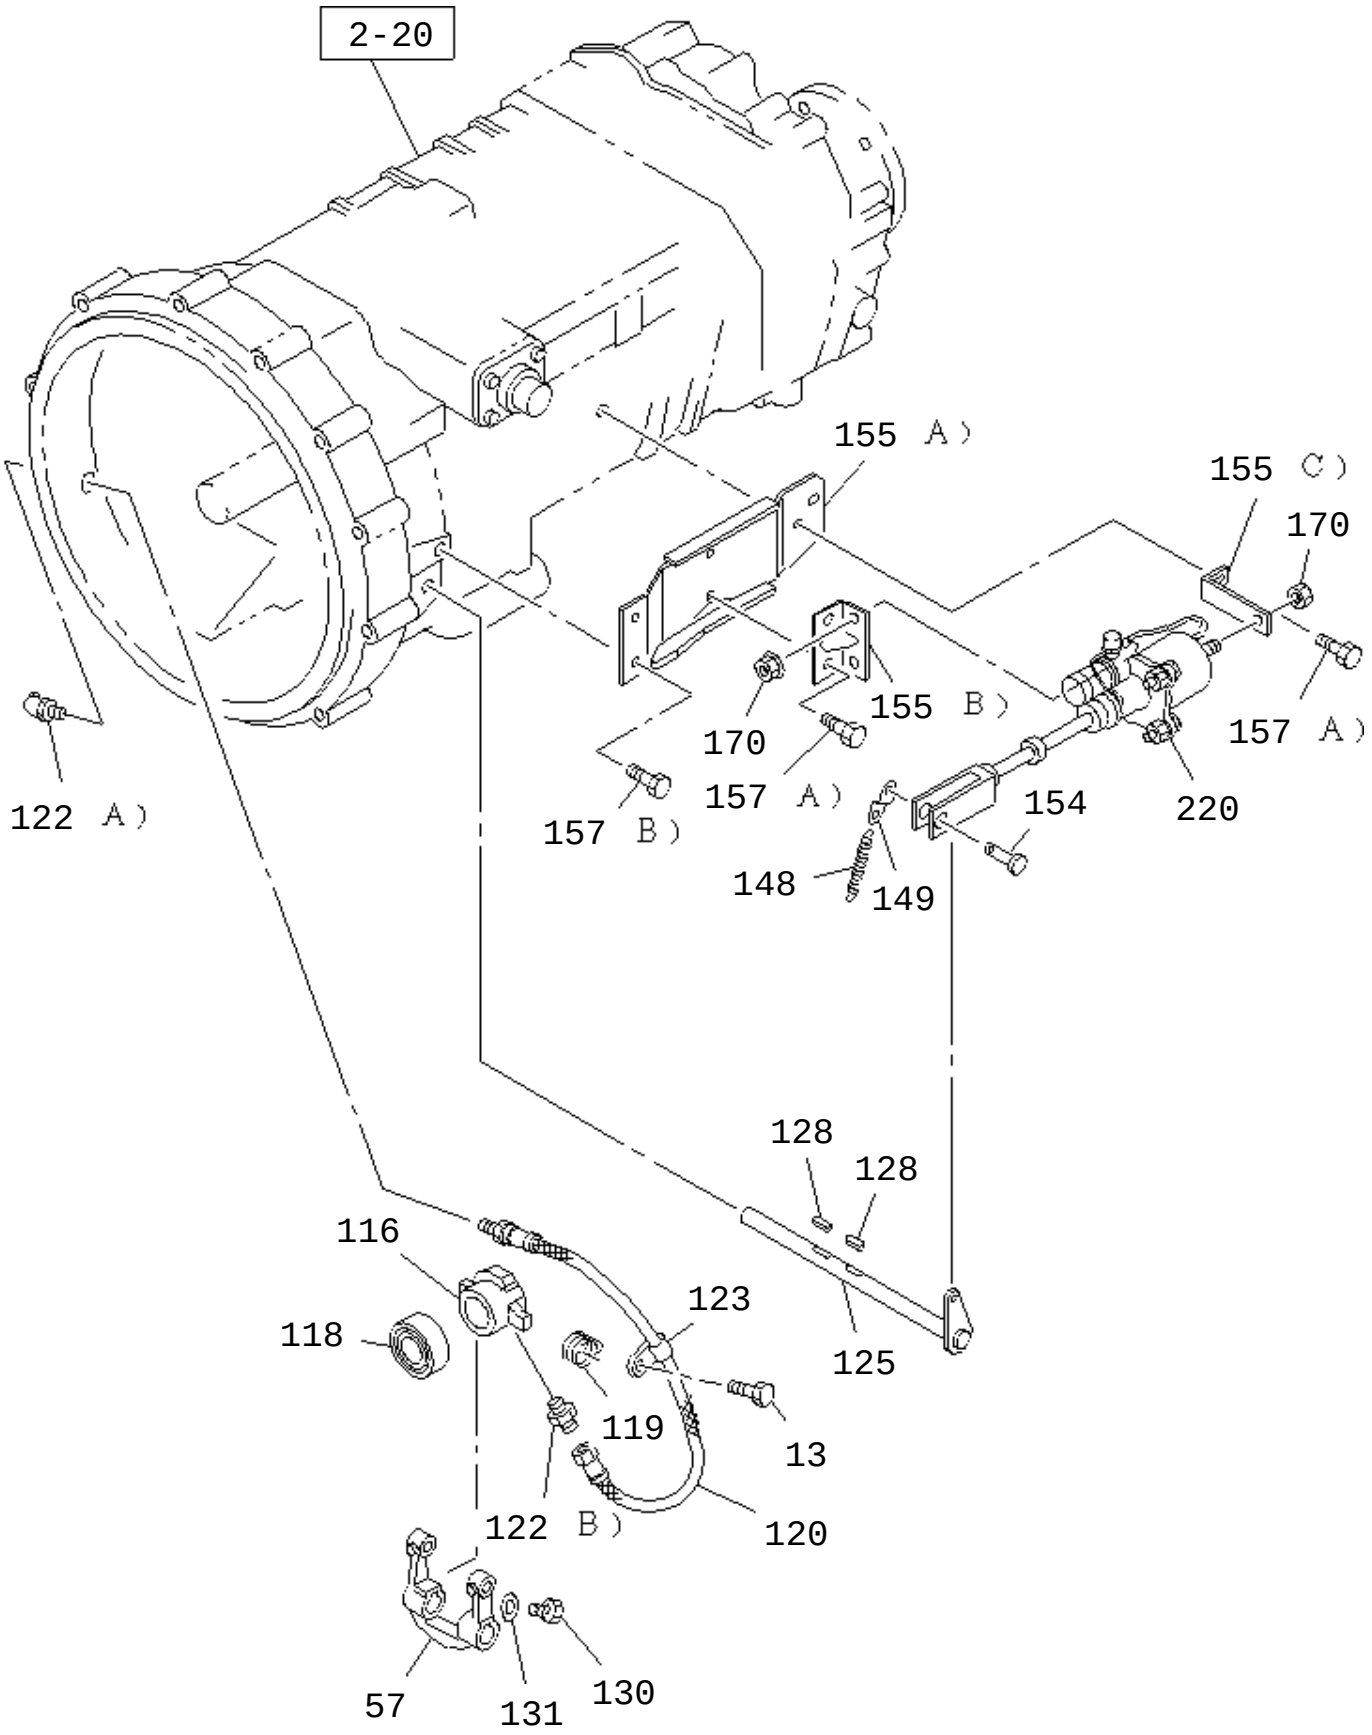

https://truckmanualshub.com/

2-01B CLUTCH -B FULLER M/T


KEY	R/C	PART NAME / PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
1	A	DISC; CLUTCH						
		1-31240-972-1		1312-		01	A	15"
2	B	PLATE ASM; PRESSURE,CLU						
		1-31220-416-0		1312-		01	A	
13		BOLT; CLIP						
		0-28050-816-0		1312-		01	A	M8X16 FLANGE
57		FORK; SHIFT,CLU						
		1-31341-036-0		1312-		01	A	
84		PLATE; PRESSURE						
		1-31221-100-0		1312-		01	A	15" IDN
85		BUSHING; RELEASE LEVER						
		9-31239-116-0		1312-		08	A	
89		PLATE; STRAP						
		1-31229-050-0		1312-		16	A	IDN
91		SEAT; SPR						
		1-31219-012-0		1312-		12	A	(A) ID=37 H=25
		1-31219-013-0		1312-		12	A	(B) ID=37 H=15
92		SPRING; CLU						
		1-31214-074-0		1312-		12	A	
96		PIN; RELEASE LEVER						
		1-31232-005-0		1312-		04	A	(A) L=49.0
		1-31232-014-0		1312-		04	A	(B) L=57.0
98		SPRING; RETURN						
		1-31233-003-0		1312-		04	A	
101		WASHER; RELEASE LEVER						
		1-31239-058-0		1312-		08	A	IDN
102		PIN; SPLIT,RELEASE LEVER						
		9-08103-022-0		1312-		08	A	OD=2.7 L=22
105		NUT; SUPPORT						
		1-31235-014-0		1312-		04	A	IDN
106		PLATE; LK,LEVER SUPPORT						
		1-31239-019-0		1312-		04	A	
107		BOLT; LK PLATE						
		1-31239-061-0		1312-		08	A	IDN
108		NUT; STRAP						
		1-09449-036-0		1312-		04	A	
110		WASHER; SPECIAL,STRAP						
		1-31229-009-0		1312-		04	A	(A) T=1.2
		8-97374-512-0		1312-		08	A	(B) T=3.2
116	B	BLOCK; SHIFT,CLU						
		1-31321-077-1		1312-		01	A	
118	B	BEARING; CLU RELEASE						
		1-09820-117-0		1312-		01	A	
119	B	SPRING; SHIFT FORK						
		1-31329-014-0		1312-	R	01	A	
		1-31329-015-0		1312-	L	01	A	
120		HOSE; FLEX,SHIFT BLOCK,CLU						
		1-09365-143-0		1312-		01	A	L=390
122		NIPPLE; GREASE,FLEX HOSE,SHIFT BLOCK						
		1-09660-710-0		1312-		01	A	(B) PT1/8 & M10


https://truckmanualshub.com/

2-01B CLUTCH -B FULLER M/T

KEY	R/C	PART NAME / PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS
								A FULLER ES11109 DD M/T(Y5N)
122		0-90301-410-0		1312-		01	A	(A) PT1/8 STRAIGHT
123		CLIP; FLEX HOSE,SHIFT BLOCK						
		0-95234-835-0		1312-		01	A	ID=9 L=20
125		SHAFT; CLU						
		1-31342-338-0		1312-		01	A	
128		KEY; FEATHER,CLU SHAFT						
		9-09867-008-0		1312-		02	A	
130		SCREW; SHIFT FORK						
		9-06120-816-0		1312-		01	A	
131		WASHER; LK,SHIFT FORK						
		0-91510-508-0		1312-		01	A	ID=8.2
137		BOLT; CLU COVER						
		0-28151-020-0		1312-		12	A	M10X20 FLANGE
148	B	SPRING; CLU RETURN						
		1-09583-305-0		1312-		01	A	L=135
149		EYE; SPRING,RETURN SPRING						
		1-31426-041-0		1312-		01	A	
154		PIN; JAW JOINT						
		1-31424-009-0		1312-		01	A	
155		BRACKET; MINIPACK						
		1-31429-479-1		1312-		01	A	(A)
		1-31429-480-1		1312-		01	A	(B)
		1-31429-481-0		1312-		01	A	(C)
157		BOLT; BRKT						
		0-28151-025-0		1312-		04	A	(A) M10X25 FLANGE
		0-28151-220-0		1312-		02	A	(B) M12X20 FLANGE
170		NUT; BOOSTER FIX						
		0-91180-210-0		1312-		03	A	M10 FLANGE
172		LEVER KIT; RELEASE,CLU						
		1-87831-172-1		1312-		01	A	
220		BOOSTER ASM; CLU						SEE FIG-NO 2-07 FOR COMPONENT.
		1-31800-516-1		1312-		01	A	
222		BOLT; STRAP						
		1-09040-042-0		1312-		04	A	(B) M10X23.2
		1-09040-043-0		1312-		04	A	(A) M10X26 HEX SOCKET
223		COVER; CLU						
		1-31211-019-1		1312-		01	A	IDN
2-20		Move to 2-20						
		Move to 2-20						

https://truckmanualshub.com/

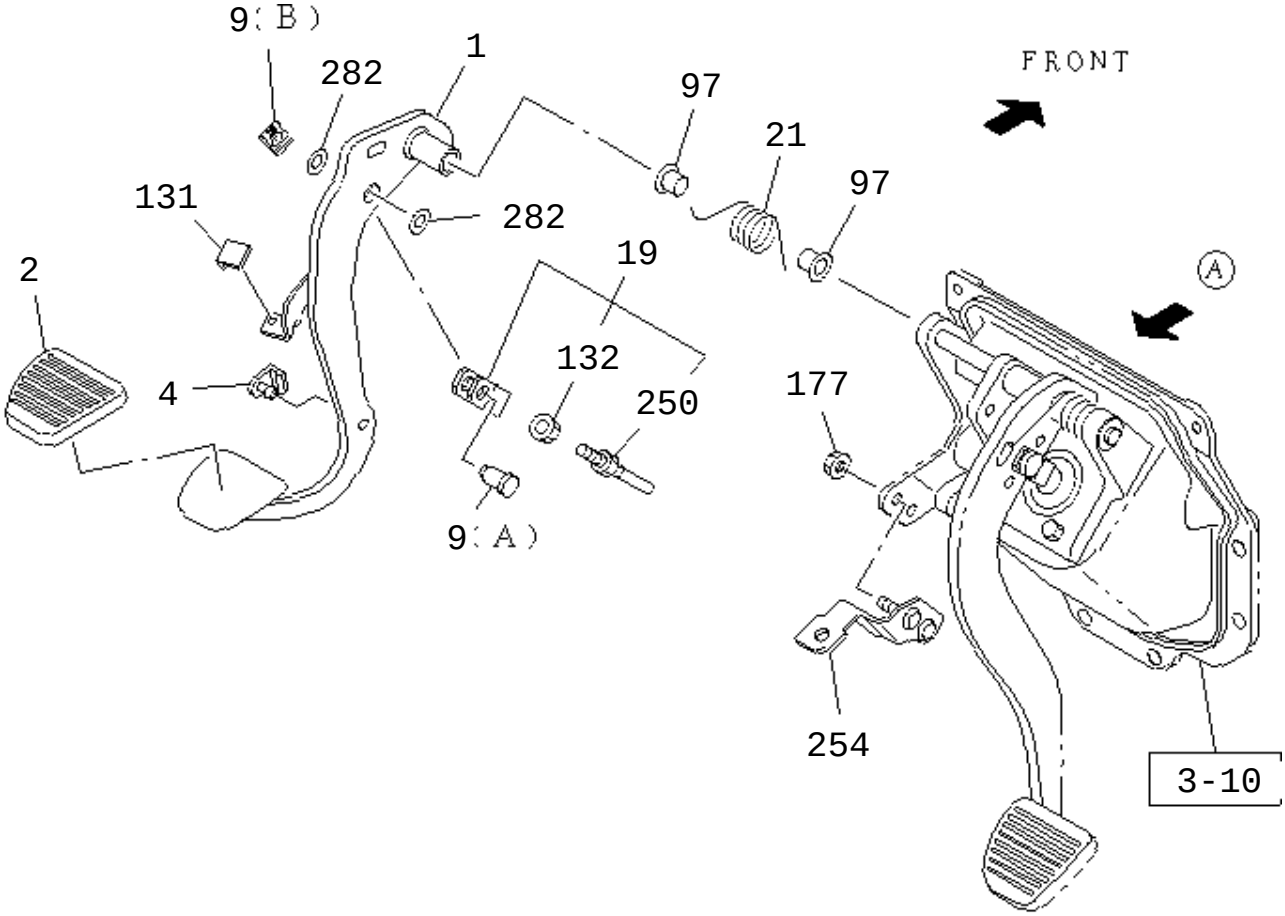

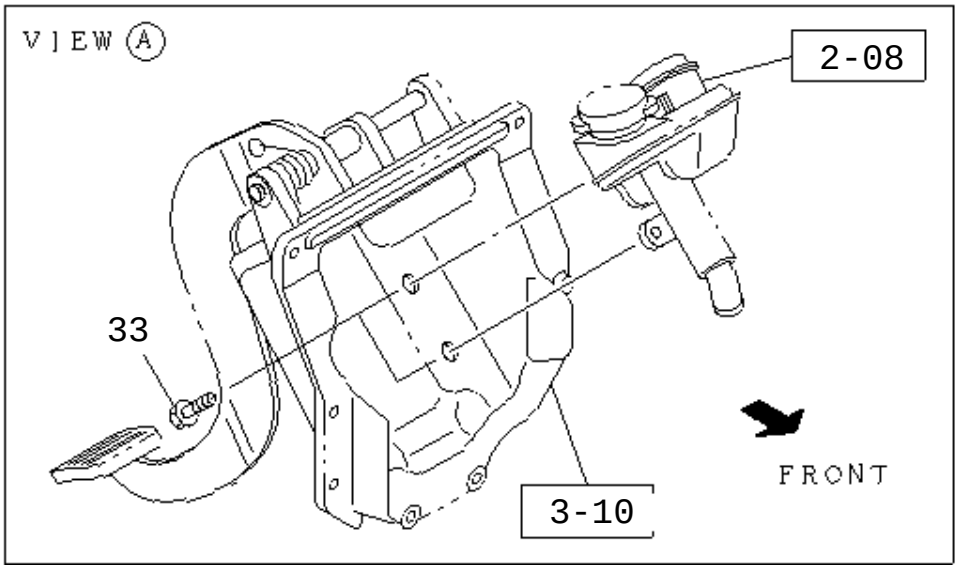


https://truckmanualshub.com/

2-03 CLUTCH PEDAL AND CONTROL

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		PEDAL; CLU					
		8-97613-941-1		1312-1403	01	A	
		8-97613-941-1		1404-	01	AB	
2		COVER; CLU PEDAL					
		8-98056-865-0		1312-1403	01	A	
		8-98056-865-0		1404-	01	AB	
4		STOPPER; CLU PEDAL					
		8-98079-251-0		1312-1403	01	A	
		8-98079-251-0		1404-	01	AB	
9		PIN; CLU PEDAL					
		8-98007-161-0		1312-1403	01	A	(B)
		8-98007-161-0		1404-	01	AB	(B)
		8-98147-657-0		1312-1403	01	A	(A)
		8-98147-657-0		1404-	01	AB	(A)
19		ROD ASM; PUSH,CLU					
		8-98021-406-1		1312-1403	01	A	
		8-98021-406-1		1404-	01	AB	
21		SPRING; RETURN,CLU PEDAL					
		8-98021-560-0		1312-1403	01	A	
		8-98021-560-0		1404-	01	AB	
33		BOLT; CLU M/CYL TO BRKT					
		0-28051-220-0		1312-1403	02	A	M12X20 FLANGE
		0-28051-220-0		1404-	02	AB	M12X20 FLANGE
97		BUSHING; CLU PEDAL SHAFT					
		8-94238-596-0		1312-1403	02	A	
		8-94238-596-0		1404-	02	AB	
131		STOPPER; CLU SW					
		8-97302-305-0		1312-1403	01	A	
		8-97302-305-0		1404-	01	AB	
132		NUT; LK,PUSH ROD					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
177		NUT; BRKT					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
250		ROD; PUSH,CLU					
		8-97615-589-0		1312-1403	01	A	
		8-97615-589-0		1404-	01	AB	
254		BRACKET; CLU SENSOR					
		8-98021-377-1		1312-1403	01	A	
		8-98021-377-1		1404-	01	AB	
282		SPACER; CLU PEDAL					
		8-98070-329-0		1312-1403	02	A	
		8-98070-329-0		1404-	02	AB	
2-08		Move to 2-08					
3-10		Move to 3-10					


https://truckmanualshub.com/

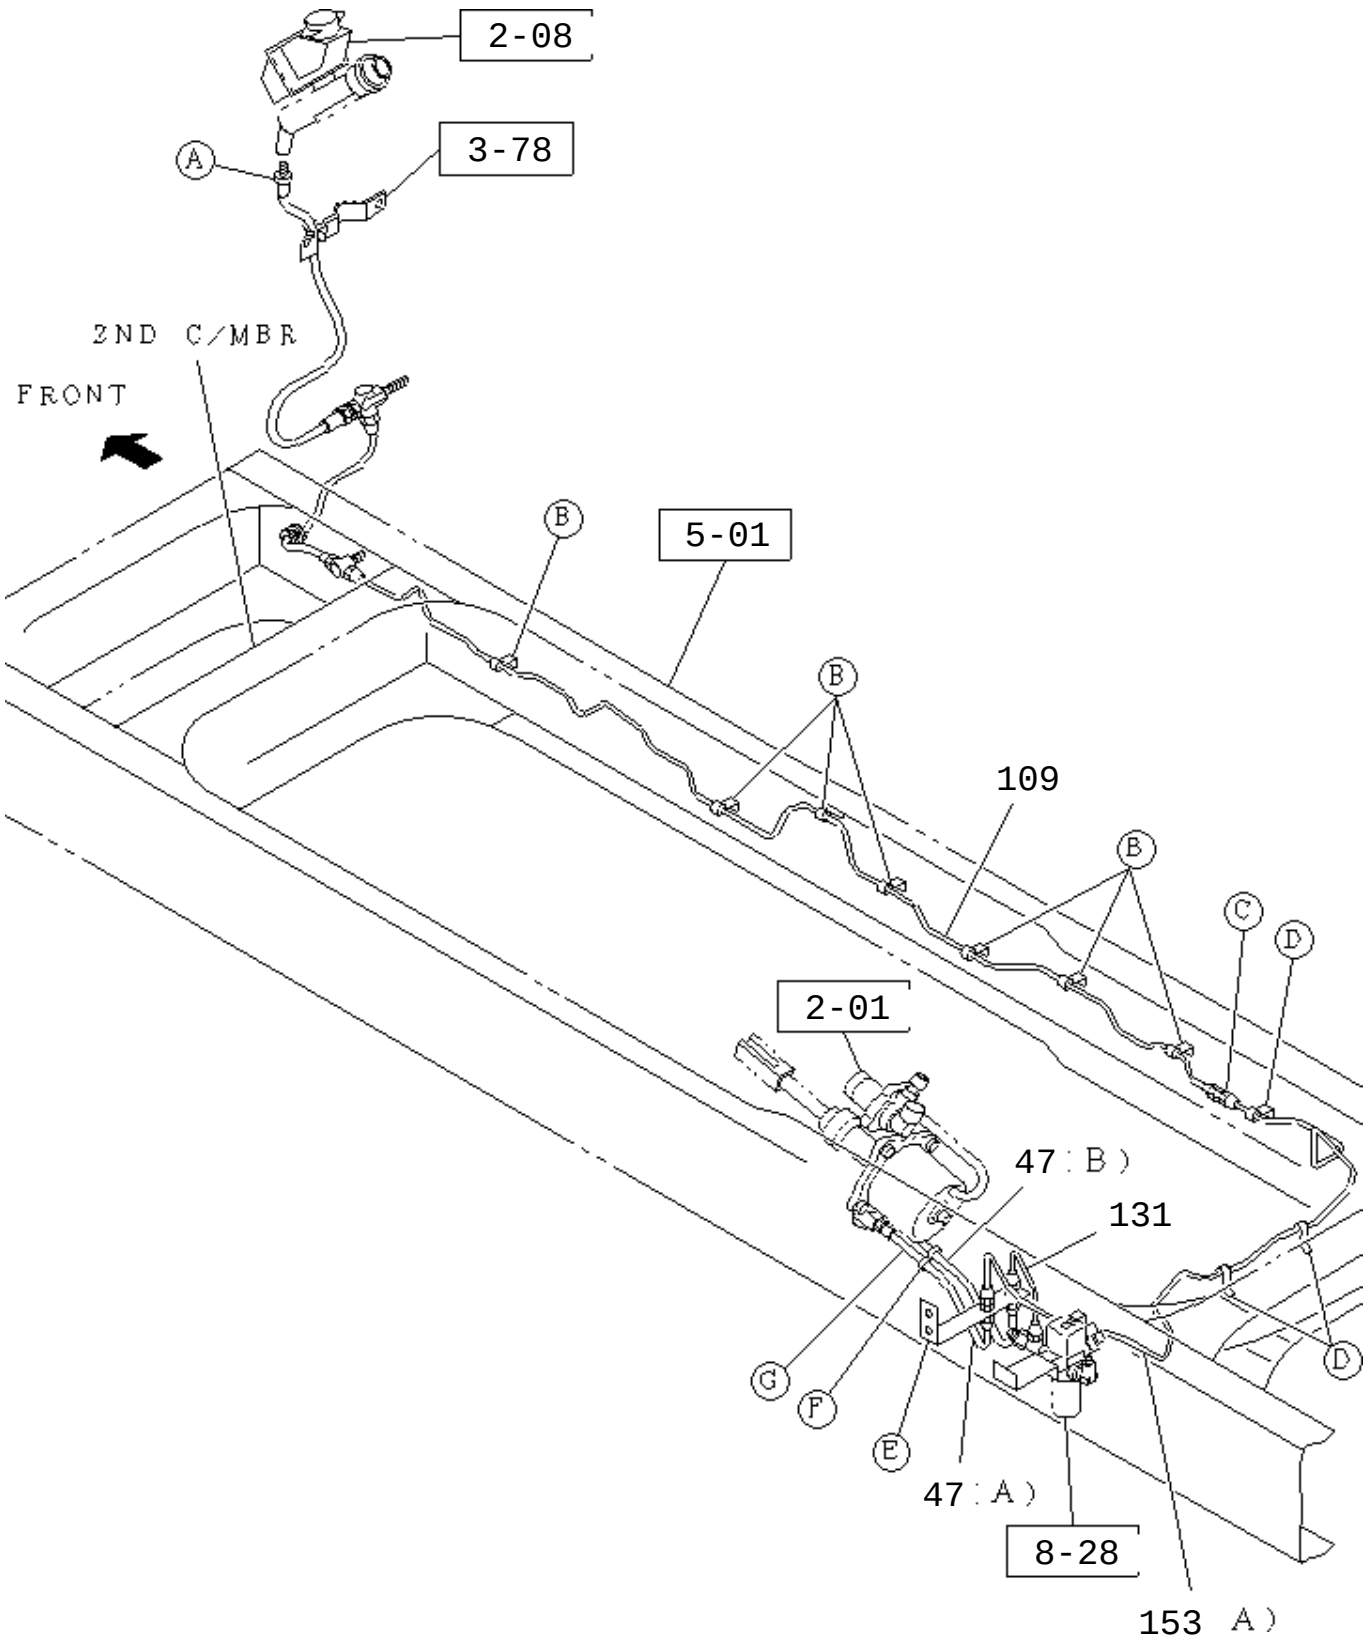

https://truckmanualshub.com/

2-05 CLUTCH PIPING


FULLER NO.1

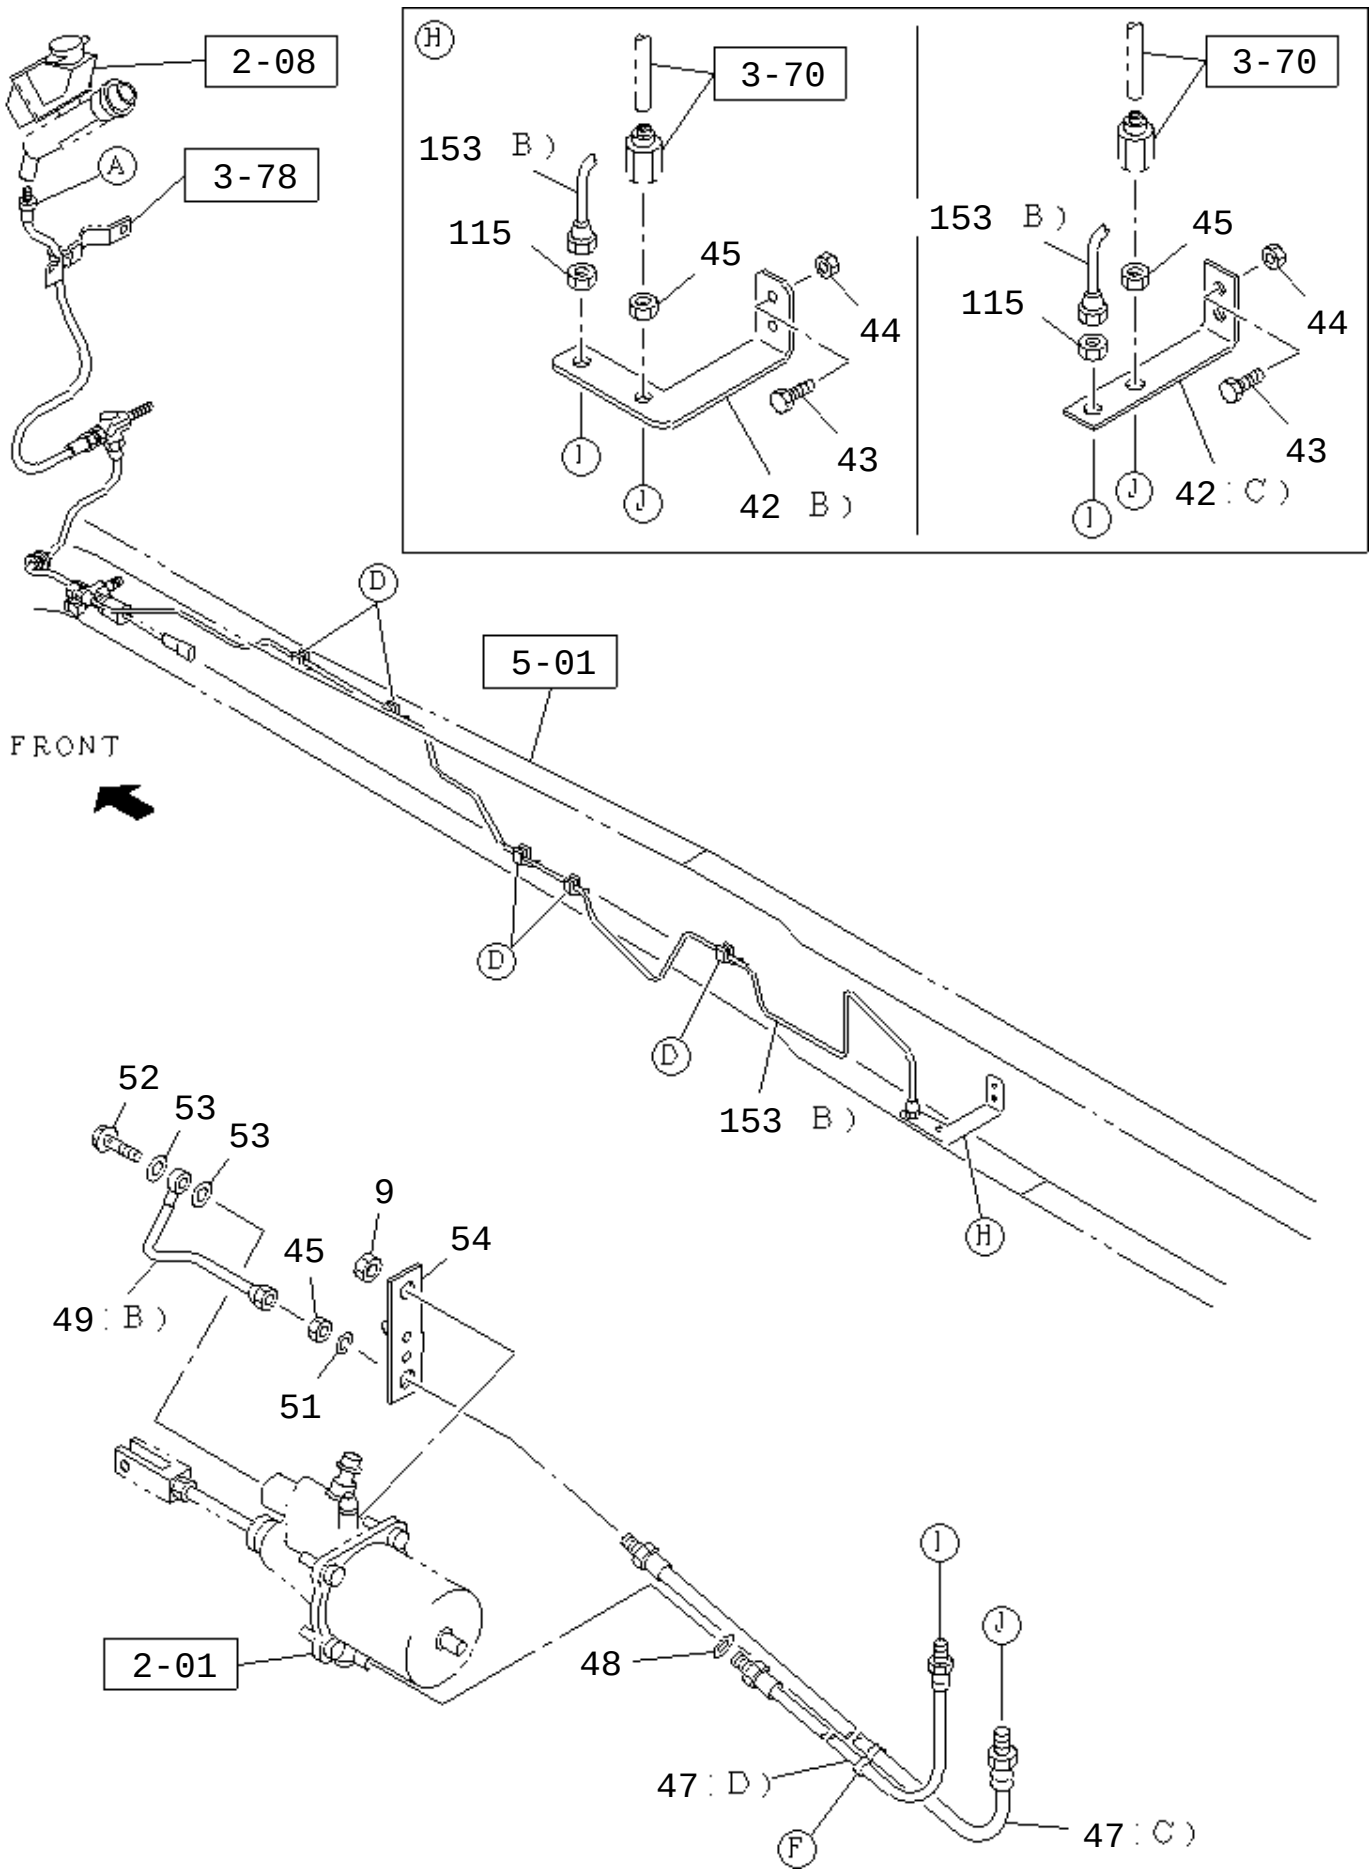

https://truckmanualshub.com/

2-05 CLUTCH PIPING

ZF,FULLER NO.2

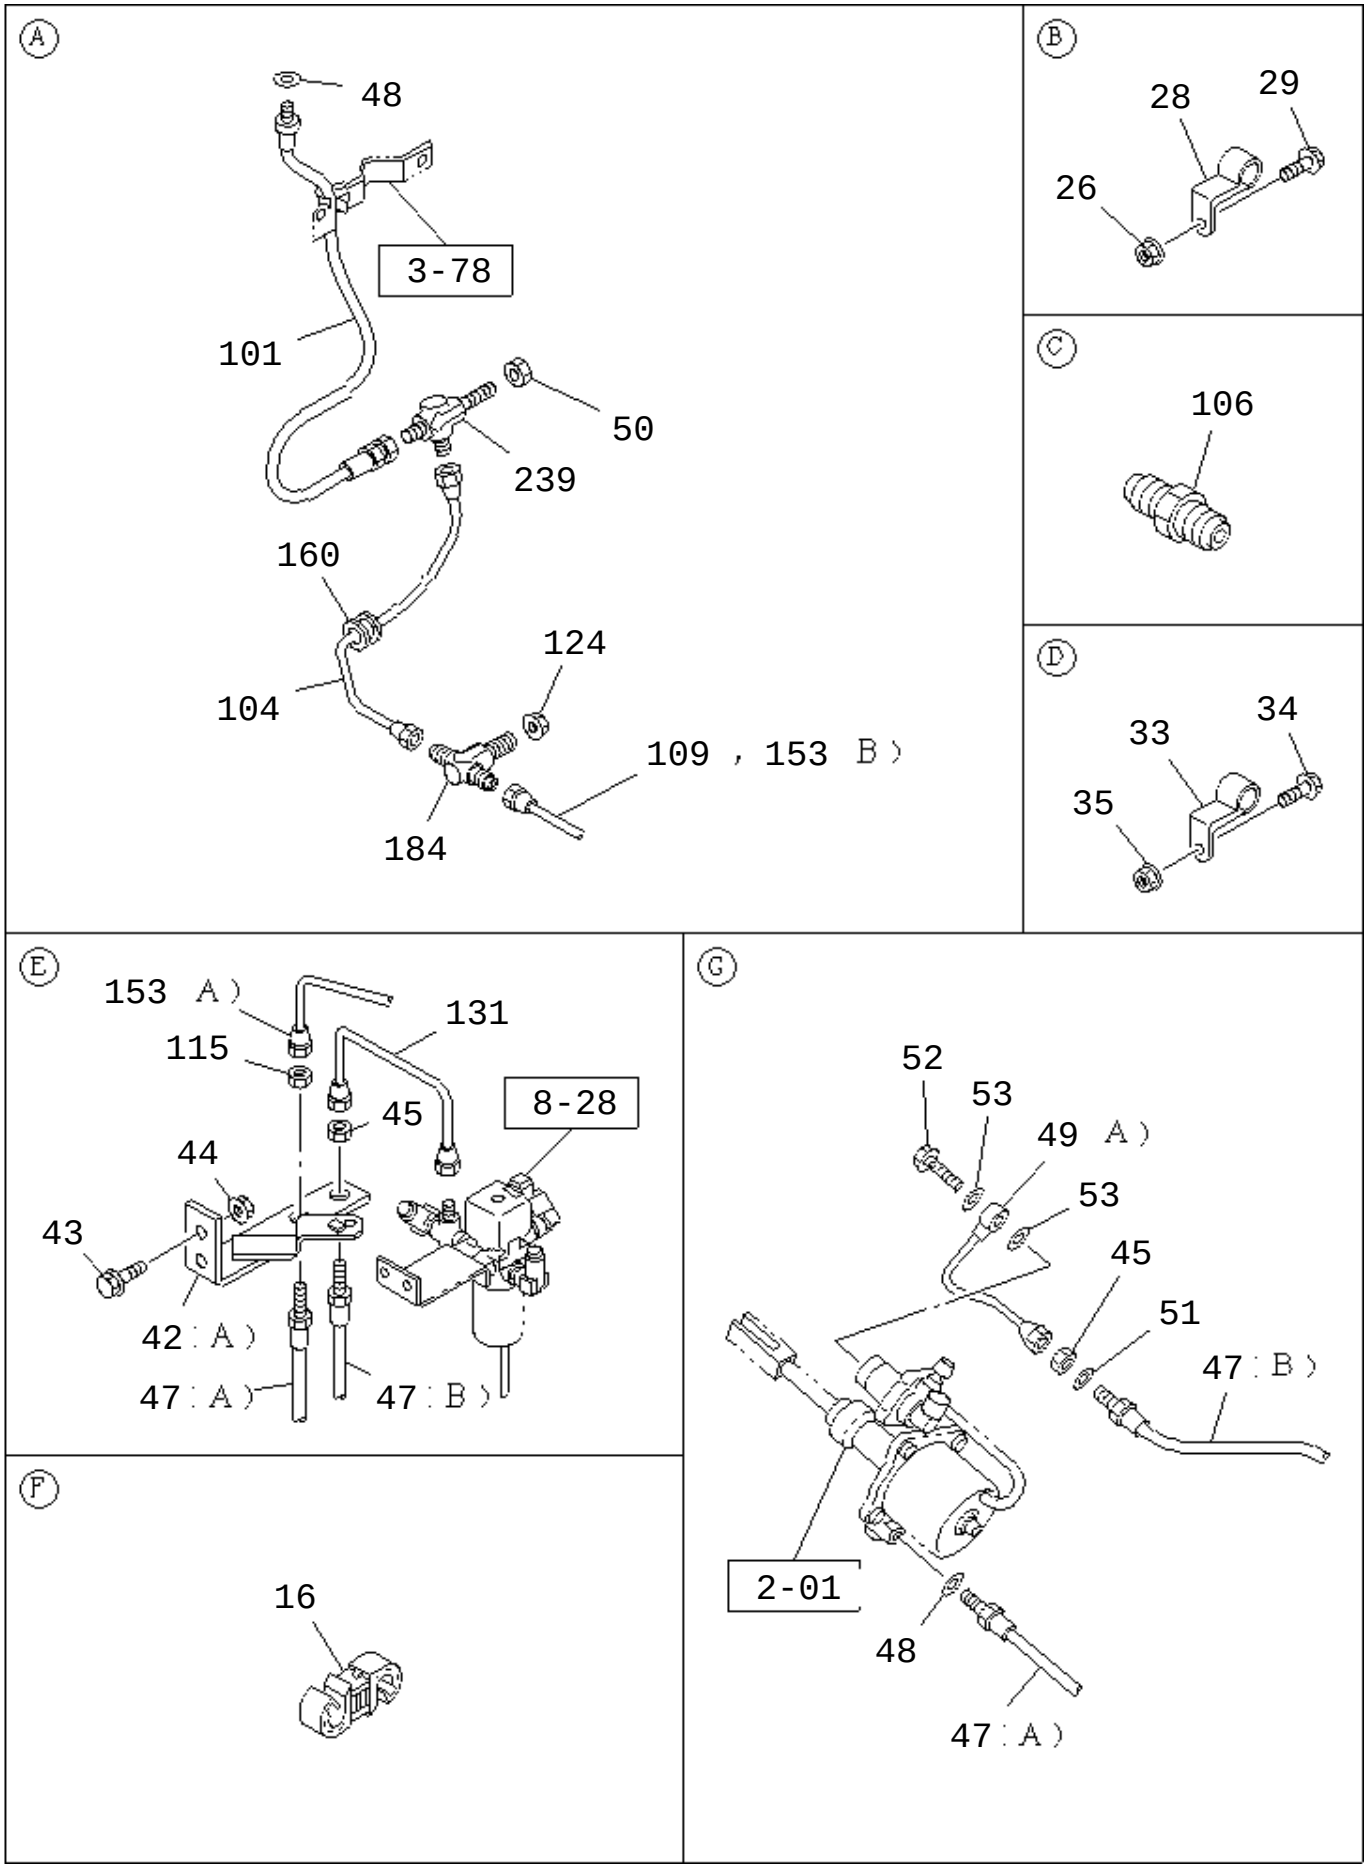

https://truckmanualshub.com/

2-05 CLUTCH PIPING

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
9		NUT; BRKT,FLEX HOSE					
		0-91180-210-0		1312-1403	02	A	FULLER ES11109 DD M/T(Y5N) M10 FLANGE
		0-91180-210-0		1404-	02	AB	FULLER ES11109 DD M/T(Y5N) M10 FLANGE
16		CLIP; FLEX HOSE					
		1-09709-278-1		1312-1403	01	A	ID=10 & 12
		1-09709-278-1		1404-	01	AB	ID=10 & 12
26		NUT; CLIP,OIL PIPE					
		0-91180-108-0		1312-	07	A	ZF9S1110 DD M/T(Y5P) M8 FLANGE
28		CLIP; OIL PIPE					
		1-09700-604-0		1312-	07	A	ZF9S1110 DD M/T(Y5P) ID=8 H=20 L=20
29		BOLT; CLIP,OIL PIPE					
		0-28650-830-0		1312-	07	A	ZF9S1110 DD M/T(Y5P) M8X30 FLANGE
33		CLIP; OIL PIPE					
		1-09700-604-0		1312-1403	06	A	FULLER ES11109 DD M/T(Y5N) ID=8 H=20 L=20
		1-09700-604-0		1404-	06	AB	FULLER ES11109 DD M/T(Y5N) ID=8 H=20 L=20
		1-09700-604-0		1312-	03	A	ZF9S1110 DD M/T(Y5P) ID=8 H=20 L=20
34		BOLT; PIPE CLIP					
		0-28650-830-0		1312-1403	06	A	FULLER ES11109 DD M/T(Y5N) M8X30 FLANGE
		0-28650-830-0		1404-	06	AB	FULLER ES11109 DD M/T(Y5N) M8X30 FLANGE
		0-28650-830-0		1312-	03	A	ZF9S1110 DD M/T(Y5P) M8X30 FLANGE
35		NUT; PIPE CLIP					
		0-91180-108-0		1312-1403	06	A	FULLER ES11109 DD M/T(Y5N) M8 FLANGE
		0-91180-108-0		1404-	06	AB	FULLER ES11109 DD M/T(Y5N) M8 FLANGE
		0-91180-108-0		1312-	03	A	ZF9S1110 DD M/T(Y5P) M8 FLANGE
42		BRACKET; FLEX HOSE,CLU CONT					
		8-98273-138-1		1404-	01	B	FULLER ES11109 DD M/T(Y5N) (C)
		8-98100-603-0		1312-	01	A	FULLER ES11109 DD M/T(Y5N) (B)
		8-98077-571-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) (A)
43		BOLT; BRKT,FLEX HOSE,CLU BOOSTER					
		0-28650-830-0		1312-1403	02	A	M8X30 FLANGE
		0-28650-830-0		1404-	02	AB	M8X30 FLANGE
44		NUT; BRKT,FLEX HOSE,CLU BOOSTER					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
45		NUT; FLEX HOSE,CLU CONT					
		9-09840-280-0		1312-1403	02	A	M12
		9-09840-280-0		1404-	02	AB	M12
47		HOSE; FLEX,CLU CONT					
		1-09363-720-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B) L=500
		1-09364-692-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) L=470
		1-09364-446-0		1404-	01	B	(D) L=350

https://truckmanualshub.com/

2-05 CLUTCH PIPING


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
47		1-09363-629-0		1312-1403	01	A	FULLER ES11109 DD M/T(Y5N) (C) L=390
		1-09363-629-0		1404-	01	AB	FULLER ES11109 DD M/T(Y5N) (C) L=390
		1-09364-646-0		1312-	01	A	FULLER ES11109 DD M/T(Y5N) (D) L=370
		1-09363-689-0		1312-1401	01	A	ZF9S1110 DD M/T(Y5P) (B) L=560
		1-09363-689-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) L=560
		1-09364-583-0		1312-1401	01	A	ZF9S1110 DD M/T(Y5P) (A) L=520
		1-09364-583-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) L=520
48		GASKET; FLEX HOSE,CLU CONT					
		9-09571-410-0		1312-1403	02	A	ID=10.2 OD=16.0
		9-09571-410-0		1404-	02	AB	ID=10.2 OD=16.0
49		PIPE; AIR,FLEX HOSE TO CLU BOOSTER					
		1-49124-974-0		1312-1403	01	A	FULLER ES11109 DD M/T(Y5N) (B)
		1-49124-974-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) (B)
		1-49124-974-0		1404-	01	B	(B)
		1-49124-795-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) (A) L=232 IDN
50		NUT; UNION					
		0-91111-512-0		1312-1403	01	A	M12
		0-91111-512-0		1404-	01	AB	M12
51		WASHER; LK					
		0-91510-812-0		1312-1403	01	A	ID=12.2
		0-91510-812-0		1404-	01	AB	ID=12.2
52		BOLT; EYE,AIR PIPE					
		1-09675-086-0		1312-1403	01	A	15" CLUTCH(RE9) M14X27 FLANGE
		1-09675-086-0		1404-	01	AB	M14X27 FLANGE
53		GASKET; JOINT BOLT					
		1-09630-085-0		1312-1312	02	A	15" CLUTCH(RE9) ID=14.2 OD=19.2
		8-98251-345-0		1401-1403	02	A	15" CLUTCH(RE9) ID=14.2 OD=19.2
		8-98251-345-0		1404-	02	AB	ID=14.2 OD=19.2
54		BRACKET; AIR,FLEX HOSE					
		8-98081-247-0		1312-1403	01	A	FULLER ES11109 DD M/T(Y5N)
		8-98081-247-0		1404-	01	AB	FULLER ES11109 DD M/T(Y5N)
101		HOSE; FLEX,OIL PIPE TO OIL PIPE					
		8-98072-346-0		1312-1403	01	A	L=440 IDN
		8-98072-346-0		1404-	01	AB	L=440 IDN
104		PIPE; OIL,FLEX HOSE TO CONNECTOR					

https://truckmanualshub.com/

2-05 CLUTCH PIPING

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
104		1-47428-753-0		1312-1403	01	A	L=544 SERVICED BY L=550
		1-47428-753-0		1404-	01	AB	L=544 SERVICED BY L=550
106		UNION; OIL PIPE					
		0-92113-008-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) M14 STRAIGHT
109		PIPE; AIR,UNION TO UNION					
		1-47428-773-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) L=2766 SERVICED BY L=3000
115		NUT; FLEX HOSE,CLU CONT					
		0-91111-514-0		1312-1403	01	A	M14
		0-91111-514-0		1404-	01	AB	M14
124		NUT; PIPE UNION					
		0-91111-512-0		1312-1403	01	A	M12
		0-91111-512-0		1404-	01	AB	M12
131		PIPE; AIR,UNION TO FLEX HOSE					
		8-98108-924-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) L=218 IDN
153		PIPE ASM; CLU,UNION TO FLEX					
		8-98250-585-0		1404-	01	B	(B) L=2921
		1-47428-773-0		1312-	01	A	FULLER ES11109 DD M/T(Y5N) (B) L=2749 SERVICED BY L=3000
		1-47428-767-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) (A) L=1691 SERVICED BY L=1700
160		GROMMET; OIL PIPE					
		9-09956-256-2		1312-1403	01	A	ID=28 OD=35 T=17
		9-09956-256-2		1404-	01	AB	ID=28 OD=35 T=17
184		UNION; FLEX HOSE					
		1-09654-176-2		1312-1403	01	A	M14 2WAY
		1-09654-176-2		1404-	01	AB	M14 2WAY
239		UNION; CLU HOSE					
		8-98107-850-0		1312-1403	01	A	
		8-98107-850-0		1404-	01	AB	
2-01		Move to 2-01					
		Move to 2-01					
2-08		Move to 2-08					
3-78		Move to 3-78					
5-01		Move to 5-01					
8-28		Move to 8-28					
3-70		Move to 3-70					

https://truckmanualshub.com/

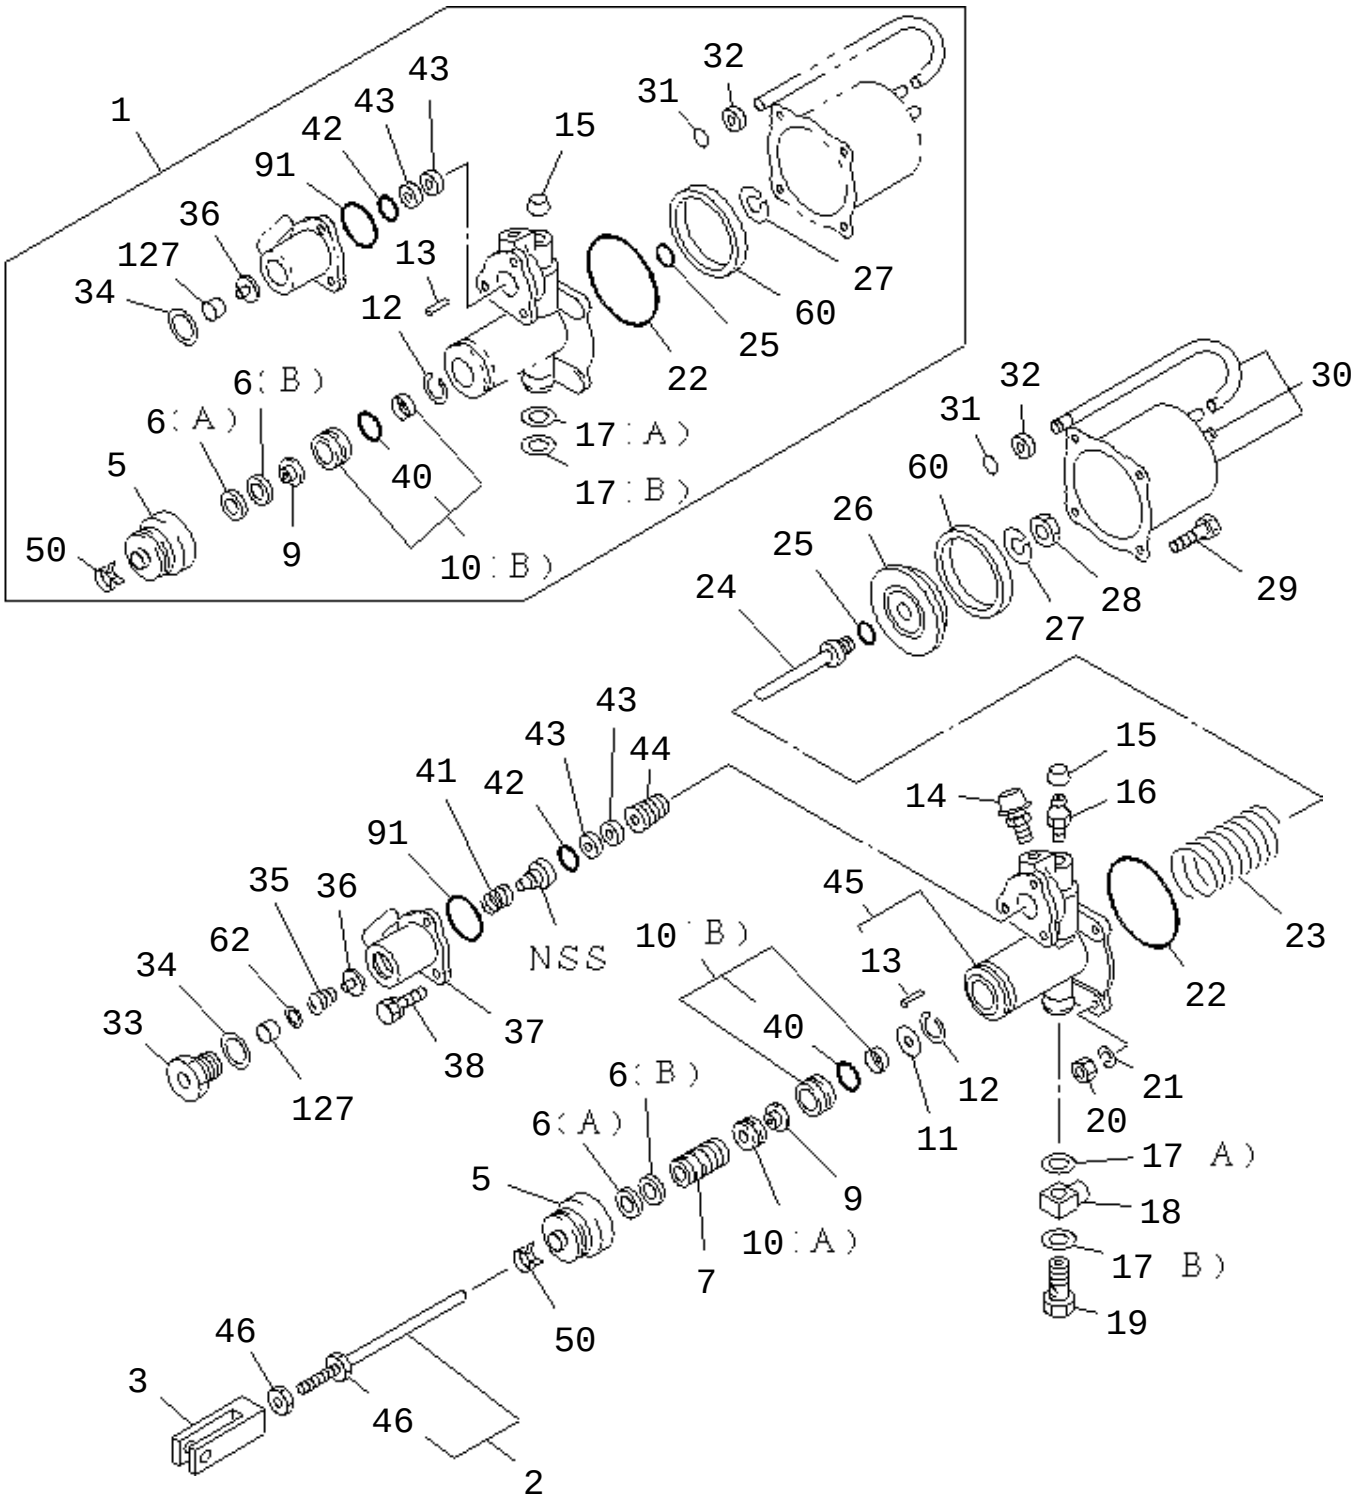

https://truckmanualshub.com/

2-07A CLUTCH BOOSTER; MINIPACK -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
1		REPAIR KIT; CLU BOOSTER					
		1-31829-611-0		1312-1412	01	A	
		1-31829-606-0		1501-	01	A	
2		ROD; PUSH,CLU BOOSTER					
		1-31824-248-0		1312-1412	01	A	
		1-31824-240-0		1501-	01	A	
3		CLEVIS; PUSH ROD,CLU BOOSTER					
		1-31829-186-1		1312-	01	A	
5		GUARD; PISTON,CLU BOOSTER					
		1-31829-503-0		1312-	01	A	
6		GASKET; PISTON CUP,CLU BOOSTER					
		1-31829-032-0		1312-	01	A	(A)
		1-31829-033-0		1312-	01	A	(B)
7		PISTON; CLU BOOSTER					
		1-31821-064-0		1312-	01	A	
9		GASKET; PISTON CUP,CLU BOOSTER					
		1-31829-003-0		1312-	01	A	
10		RETAINER; PISTON,CLU BOOSTER					
		1-31829-107-0		1312-	01	A	(B)
		1-31829-108-0		1312-	01	A	(A)
11		WASHER; PISTON,CLU BOOSTER					
		1-31829-105-0		1312-	01	A	
12		RING; RET,CLU BOOSTER					
		1-31829-142-0		1312-	01	A	
13		PIN; SPR					
		1-31829-109-0		1312-	01	A	
14		COVER; EXH,CLU BOOSTER					
		1-31829-564-0		1312-	01	A	
15		PROTECTOR; END PLATE,CLU BOOSTER					
		9-83335-044-0		1312-	01	A	
16		PLUG; END PLATE,CLU BOOSTER					
		9-83331-704-0		1312-	01	A	
17		GASKET; CONN,CLU BOOSTER					
		9-09920-267-0		1312-	01	A	(A)
		9-09920-268-0		1312-	01	A	(B)
18		CONNECTOR; END PLATE,CLU BOOSTER					
		1-31829-248-0		1312-	01	A	
19		BOLT; EYE,END PLATE,CLU BOOSTER					
		9-83315-047-0		1312-	01	A	
20		NUT; END PLATE TO SHELL,CLU BOOSTER					
		9-09111-410-0		1312-	04	A	M10
21		WASHER; END PLATE TO SHELL,CLU BOOSTER					
		9-09150-510-0		1312-	04	A	ID=10.2
22		GASKET; END PLATE TO SHELL,CLU BOOSTER					
		1-09623-322-0		1312-	01	A	
23		SPRING; SHELL,CLU BOOSTER					
		1-31829-358-0		1312-	01	A	
24		ROD; PUSH,CLU BOOSTER					
		1-31829-112-0		1312-	01	A	
25		GASKET; PUSH ROD,CLU BOOSTER					
		1-09623-321-0		1312-	01	A	
26		PISTON; SHELL,CLU BOOSTER					
		1-31821-084-0		1312-	01	A	
27		SPRING; CLU BOOSTER					
		1-31829-111-0		1312-	01	A	
28		NUT; PUSH ROD,CLU BOOSTER					
		9-88510-365-0		1312-	01	A	
29		BOLT; END PLATE TO SHELL,CLU BOOSTER					
		9-83315-099-0		1312-	04	A	
30		SHELL; CYL,CLU BOOSTER					
		1-31811-124-0		1312-	01	A	
31		GASKET; SHELL,CLU BOOSTER					
		1-31829-279-0		1312-	01	A	
32		BUSHING; SHELL,CLU BOOSTER					
		1-31829-280-0		1312-	01	A	
33		CONNECTOR; UPR,VLV,CLU BOOSTER					

https://truckmanualshub.com/


2-07A CLUTCH BOOSTER; MINIPACK -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
33		1-31829-214-0		1312-	01	A	
34		GASKET; CONN,CLU BOOSTER					
		1-31829-053-0		1312-	01	A	
35		SPRING; POPPET VLV,CLU BOOSTER					
		1-31829-537-0		1312-	01	A	
36		VALVE; POPPET,CLU BOOSTER					
		1-31829-536-0		1312-	01	A	
37		BODY; UPR,VLV,CLU BOOSTER					
		1-31811-085-0		1312-	01	A	
38		SCREW; UPR VLV TO END PLATE,CLU BOOSTE					
		9-83315-113-0		1312-	03	A	
40		GASKET; PISTON,CLU BOOSTER					
		1-31829-037-0		1312-1412	01	A	
41		SPRING; DIAPH,CLU BOOSTER					
		1-31829-545-0		1312-	01	A	
42		GASKET; FITTING,CLU BOOSTER					
		1-31829-143-0		1312-	01	A	
43		GASKET; UPR VLV,CLU BOOSTER					
		1-31829-060-0		1312-	02	A	
44		PISTON; UPR VLV,CLU BOOSTER					
		1-31821-087-0		1312-	01	A	
45		PLATE; END,CLU BOOSTER					
		1-31811-150-0		1312-1412	01	A	
		1-31811-149-0		1501-	01	A	
46		NUT; PUSH ROD,CLU BOOSTER					
		9-09111-410-0		1312-	02	A	M10
50		CLAMP; PISTON GUARD,CLU BOOSTER					
		1-31829-504-0		1312-	01	A	
60		GASKET; SHELL,CLU BOOSTER					
		1-31829-544-0		1312-	01	A	
62		RETAINER; POPPET					
		1-31829-489-0		1312-	01	A	
91		GASKET; CLU BOOSTER					
		1-31829-103-0		1312-	01	A	
127		FILTER; POPPET					
		1-31829-495-0		1312-	01	A	

https://truckmanualshub.com/

2-07B CLUTCH BOOSTER; MINIPACK -B FULLER M/T

FULLER M/T

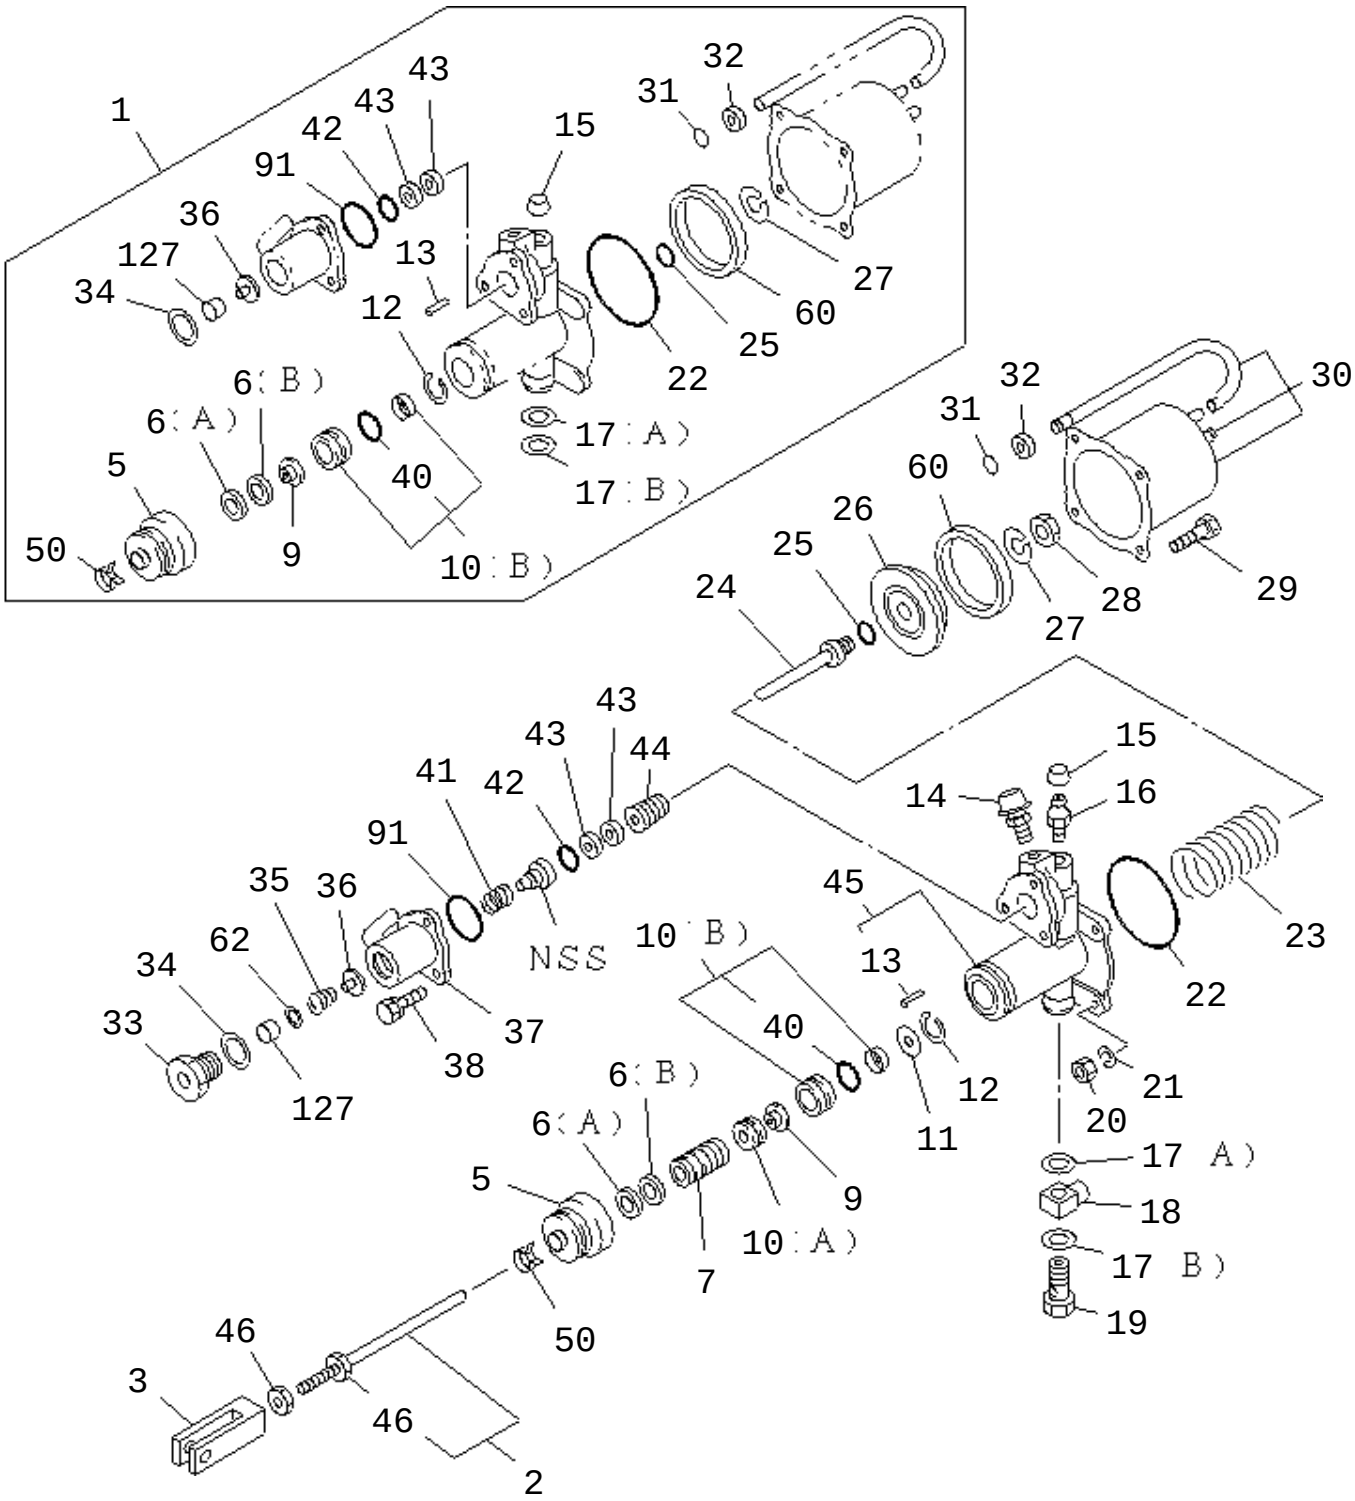

https://truckmanualshub.com/

2-07B CLUTCH BOOSTER; MINIPACK -B FULLER M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
1		REPAIR KIT; CLU BOOSTER					
		1-31829-611-0		1312-1412	01	A	
		1-31829-606-0		1501-	01	A	
2		ROD; PUSH,CLU BOOSTER					
		1-31824-248-0		1312-1412	01	A	
		1-31824-240-0		1501-	01	A	
3		CLEVIS; PUSH ROD,CLU BOOSTER					
		1-31829-186-1		1312-	01	A	
5		GUARD; PISTON,CLU BOOSTER					
		1-31829-503-0		1312-	01	A	
6		GASKET; PISTON CUP,CLU BOOSTER					
		1-31829-032-0		1312-	01	A	(A)
		1-31829-033-0		1312-	01	A	(B)
7		PISTON; CLU BOOSTER					
		1-31821-064-0		1312-	01	A	
9		GASKET; PISTON CUP,CLU BOOSTER					
		1-31829-003-0		1312-	01	A	
10		RETAINER; PISTON,CLU BOOSTER					
		1-31829-107-0		1312-	01	A	(B)
		1-31829-108-0		1312-	01	A	(A)
11		WASHER; PISTON,CLU BOOSTER					
		1-31829-105-0		1312-	01	A	
12		RING; RET,CLU BOOSTER					
		1-31829-142-0		1312-	01	A	
13		PIN; SPR					
		1-31829-109-0		1312-	01	A	
14		COVER; EXH,CLU BOOSTER					
		1-31829-564-0		1312-	01	A	
15		PROTECTOR; END PLATE,CLU BOOSTER					
		9-83335-044-0		1312-	01	A	
16		PLUG; END PLATE,CLU BOOSTER					
		9-83331-704-0		1312-	01	A	
17		GASKET; CONN,CLU BOOSTER					
		9-09920-267-0		1312-	01	A	(A)
		9-09920-268-0		1312-	01	A	(B)
18		CONNECTOR; END PLATE,CLU BOOSTER					
		1-31829-248-0		1312-	01	A	
19		BOLT; EYE,END PLATE,CLU BOOSTER					
		9-83315-047-0		1312-	01	A	
20		NUT; END PLATE TO SHELL,CLU BOOSTER					
		9-09111-410-0		1312-	04	A	M10
21		WASHER; END PLATE TO SHELL,CLU BOOSTER					
		9-09150-510-0		1312-	04	A	ID=10.2
22		GASKET; END PLATE TO SHELL,CLU BOOSTER					
		1-09623-322-0		1312-	01	A	
23		SPRING; SHELL,CLU BOOSTER					
		1-31829-358-0		1312-	01	A	
24		ROD; PUSH,CLU BOOSTER					
		1-31829-112-0		1312-	01	A	
25		GASKET; PUSH ROD,CLU BOOSTER					
		1-09623-321-0		1312-	01	A	
26		PISTON; SHELL,CLU BOOSTER					
		1-31821-084-0		1312-	01	A	
27		SPRING; CLU BOOSTER					
		1-31829-111-0		1312-	01	A	
28		NUT; PUSH ROD,CLU BOOSTER					
		9-88510-365-0		1312-	01	A	
29		BOLT; END PLATE TO SHELL,CLU BOOSTER					
		9-83315-099-0		1312-	04	A	
30		SHELL; CYL,CLU BOOSTER					
		1-31811-124-0		1312-	01	A	
31		GASKET; SHELL,CLU BOOSTER					
		1-31829-279-0		1312-	01	A	
32		BUSHING; SHELL,CLU BOOSTER					
		1-31829-280-0		1312-	01	A	
33		CONNECTOR; UPR,VLV,CLU BOOSTER					


https://truckmanualshub.com/

2-07B CLUTCH BOOSTER; MINIPACK -B FULLER M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
33		1-31829-214-0		1312-	01	A	
34		GASKET; CONN,CLU BOOSTER					
		1-31829-053-0		1312-	01	A	
35		SPRING; POPPET VLV,CLU BOOSTER					
		1-31829-537-0		1312-	01	A	
36		VALVE; POPPET,CLU BOOSTER					
		1-31829-536-0		1312-	01	A	
37		BODY; UPR,VLV,CLU BOOSTER					
		1-31811-085-0		1312-	01	A	
38		SCREW; UPR VLV TO END PLATE,CLU BOOSTE					
		9-83315-113-0		1312-	03	A	
40		GASKET; PISTON,CLU BOOSTER					
		1-31829-037-0		1312-1412	01	A	
41		SPRING; DIAPH,CLU BOOSTER					
		1-31829-545-0		1312-	01	A	
42		GASKET; FITTING,CLU BOOSTER					
		1-31829-143-0		1312-	01	A	
43		GASKET; UPR VLV,CLU BOOSTER					
		1-31829-060-0		1312-	02	A	
44		PISTON; UPR VLV,CLU BOOSTER					
		1-31821-087-0		1312-	01	A	
45		PLATE; END,CLU BOOSTER					
		1-31811-150-0		1312-1412	01	A	
		1-31811-149-0		1501-	01	A	
46		NUT; PUSH ROD,CLU BOOSTER					
		9-09111-410-0		1312-	02	A	M10
50		CLAMP; PISTON GUARD,CLU BOOSTER					
		1-31829-504-0		1312-	01	A	
60		GASKET; SHELL,CLU BOOSTER					
		1-31829-544-0		1312-	01	A	
62		RETAINER; POPPET					
		1-31829-489-0		1312-	01	A	
91		GASKET; CLU BOOSTER					
		1-31829-103-0		1312-	01	A	
127		FILTER; POPPET					
		1-31829-495-0		1312-	01	A	


https://truckmanualshub.com/

-' 14/1
' 14/2-
EXC. VIN MODEL YEAR 2014

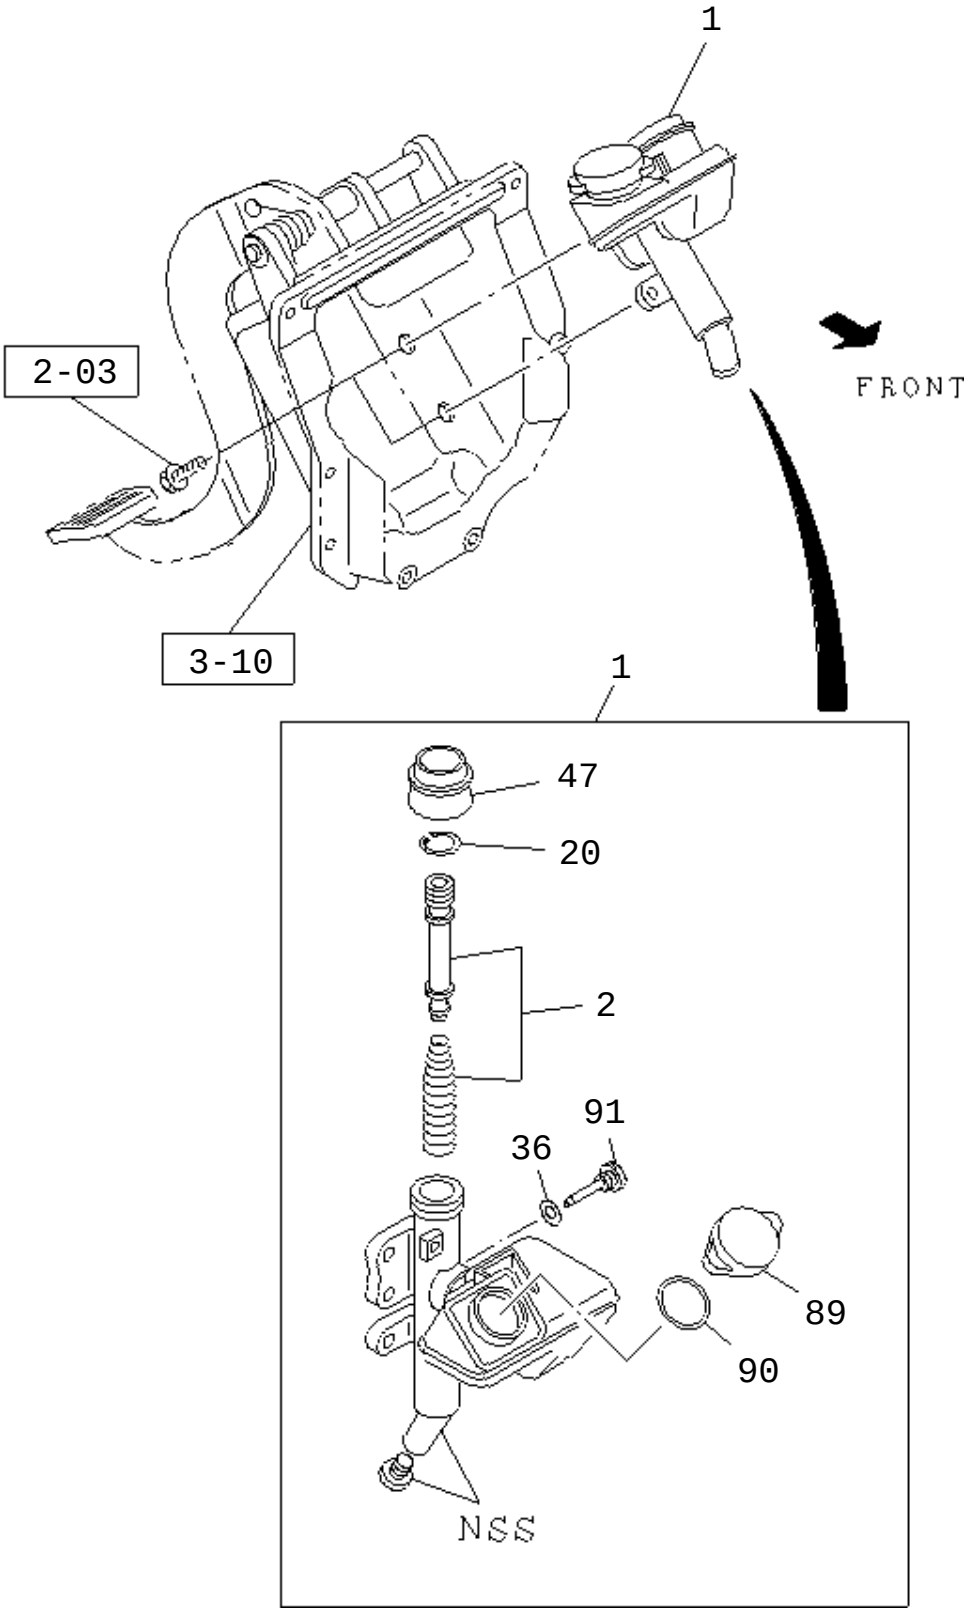

https://truckmanualshub.com/

'14/2- VIN MODEL YEAR 2014

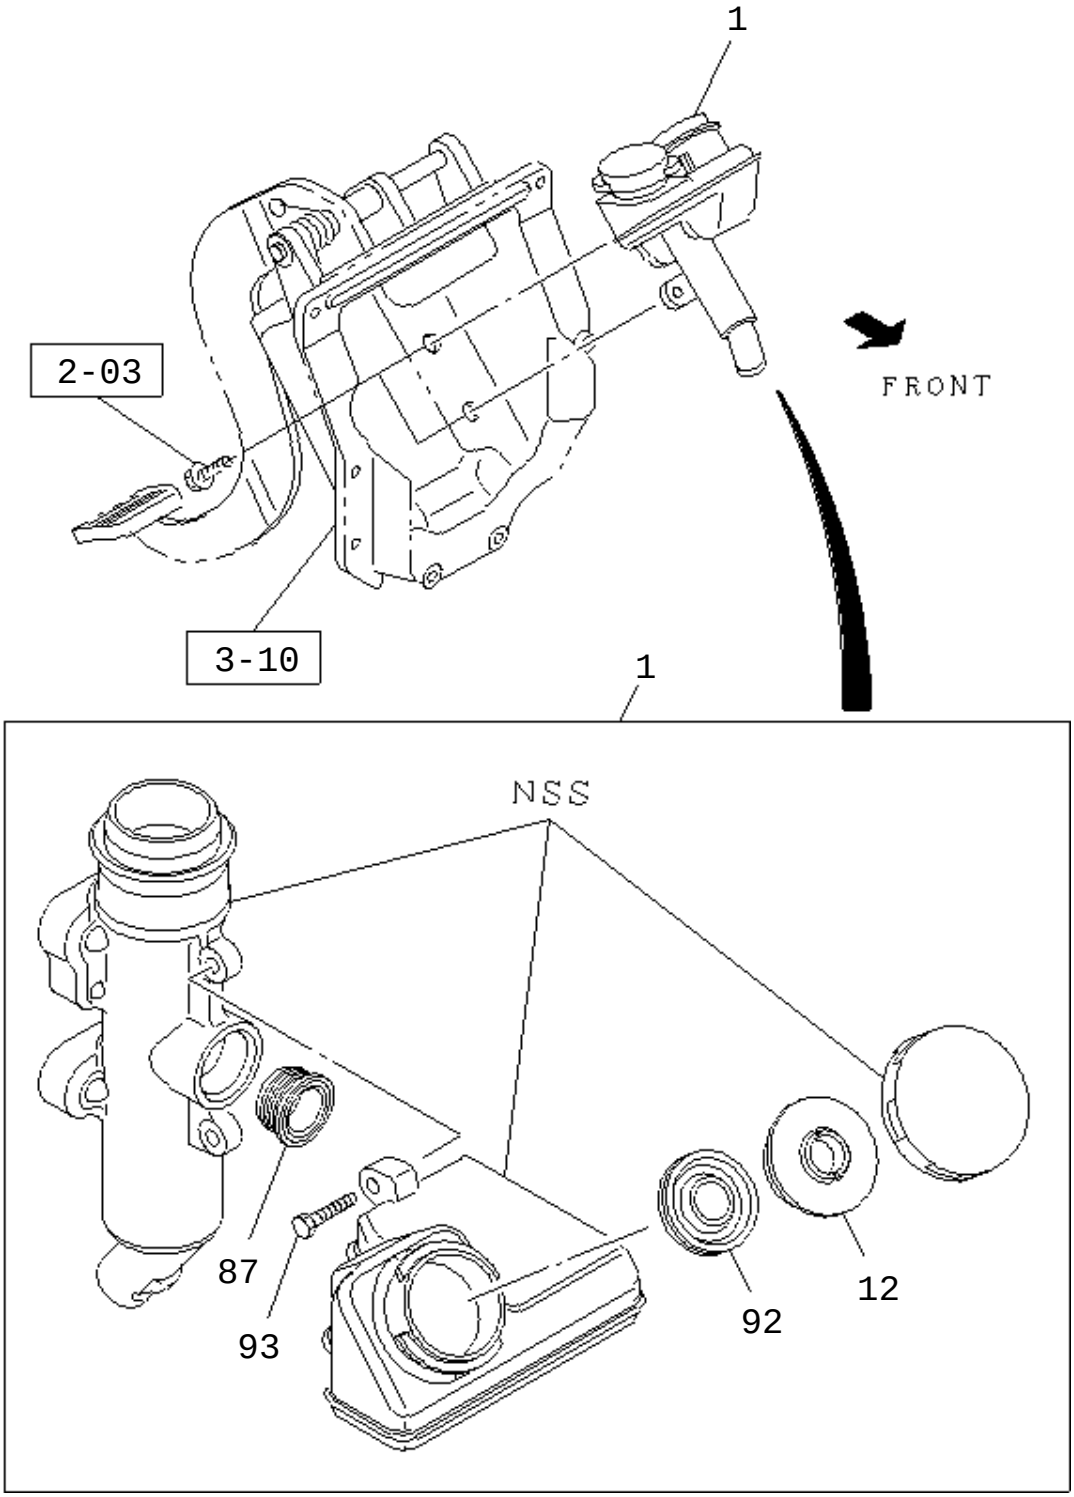


https://truckmanualshub.com/

2-08 CLUTCH MASTER CYLINDER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		CYLINDER ASM; CLUTCH MASTER					
		8-97948-360-1		1402-1403	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-97948-360-1		1404-1406	01	AB	VIN MODEL YEAR 2014<VZE> IDN
		1-47500-250-2		1312-1401	01	A	
		1-47500-250-2		1402-1403	01	A	EXC. VIN MODEL YEAR 2014<VZE>
		1-47500-250-2		1404-1406	01	AB	EXC. VIN MODEL YEAR 2014<VZE>
		1-47500-250-2		1407-	01	AB	
2	B	REPAIR KIT; CLU M/CYL					
		1-85576-461-0		1312-1401	01	A	
		1-85576-461-0		1402-1403	01	A	EXC. VIN MODEL YEAR 2014<VZE>
		1-85576-461-0		1404-1406	01	AB	EXC. VIN MODEL YEAR 2014<VZE>
		1-85576-461-0		1407-	01	AB	
12		CAP; INNER,OIL TANK,CLU M/CYL					
		8-94412-206-0		1402-1403	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-94412-206-0		1404-1406	01	AB	VIN MODEL YEAR 2014<VZE> IDN
20		RING; SNAP,BODY					
		1-47519-013-0		1312-1401	01	A	
		1-47519-013-0		1402-1403	01	A	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-013-0		1404-1406	01	AB	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-013-0		1407-	01	AB	
36		GASKET; CLU M/CYL					
		1-47519-014-0		1312-1401	01	A	
		1-47519-014-0		1402-1403	01	A	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-014-0		1404-1406	01	AB	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-014-0		1407-	01	AB	
47		COVER; DUST,PUSH ROD					
		1-47519-018-0		1312-1401	01	A	
		1-47519-018-0		1402-1403	01	A	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-018-0		1404-1406	01	AB	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-018-0		1407-	01	AB	
87		GROMMET; CLU M/CYL					
		8-97942-834-0		1402-1403	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-97942-834-0		1404-1406	01	AB	VIN MODEL YEAR 2014<VZE> IDN
89		CAP; OIL FILLER,CLU M/CYL					
		1-47519-017-0		1312-1401	01	A	
		1-47519-017-0		1402-1403	01	A	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-017-0		1404-1406	01	AB	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-017-0		1407-	01	AB	
90		GASKET; OIL FILLER,CLU M/CYL					
		1-47519-016-0		1312-1401	01	A	
		1-47519-016-0		1402-1403	01	A	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-016-0		1404-1406	01	AB	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-016-0		1407-	01	AB	
91		BOLT; STOPPER					
		1-47519-015-0		1312-1401	01	A	
		1-47519-015-0		1402-1403	01	A	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-015-0		1404-1406	01	AB	EXC. VIN MODEL YEAR 2014<VZE>
		1-47519-015-0		1407-	01	AB	
92		SEAL; CLU M/CYL					
		8-94412-205-0		1402-1403	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-94412-205-0		1404-1406	01	AB	VIN MODEL YEAR 2014<VZE> IDN
93		BOLT; CLU M/CYL					
		8-97945-452-0		1402-1403	02	A	VIN MODEL YEAR 2014<VZE> IDN
		8-97945-452-0		1404-1406	02	AB	VIN MODEL YEAR 2014<VZE> IDN
2-03		Move to 2-03					
3-10		Move to 3-10					

https://truckmanualshub.com/

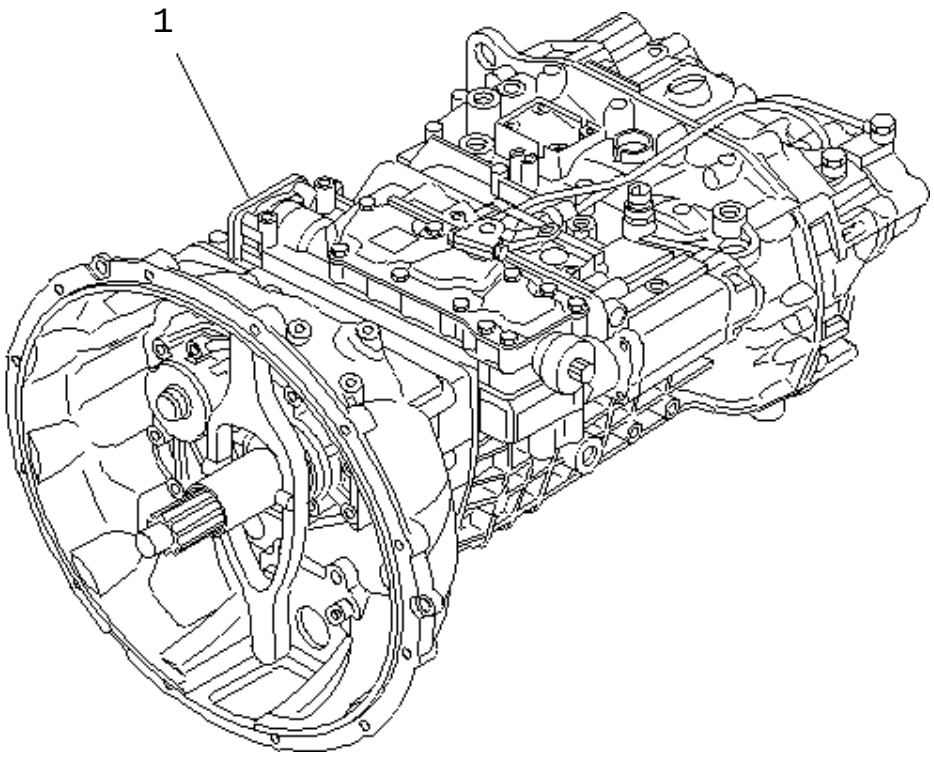


https://truckmanualshub.com/

ASM

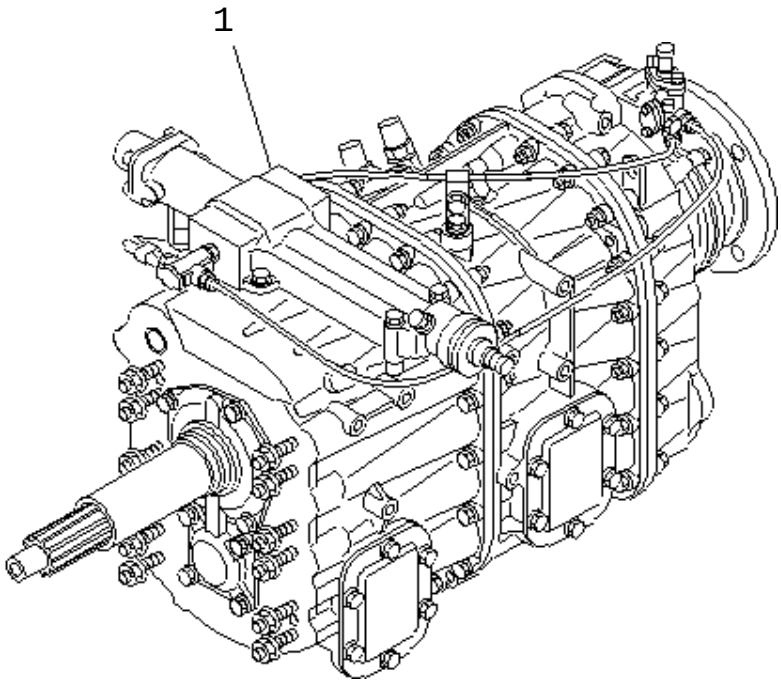



https://truckmanualshub.com/

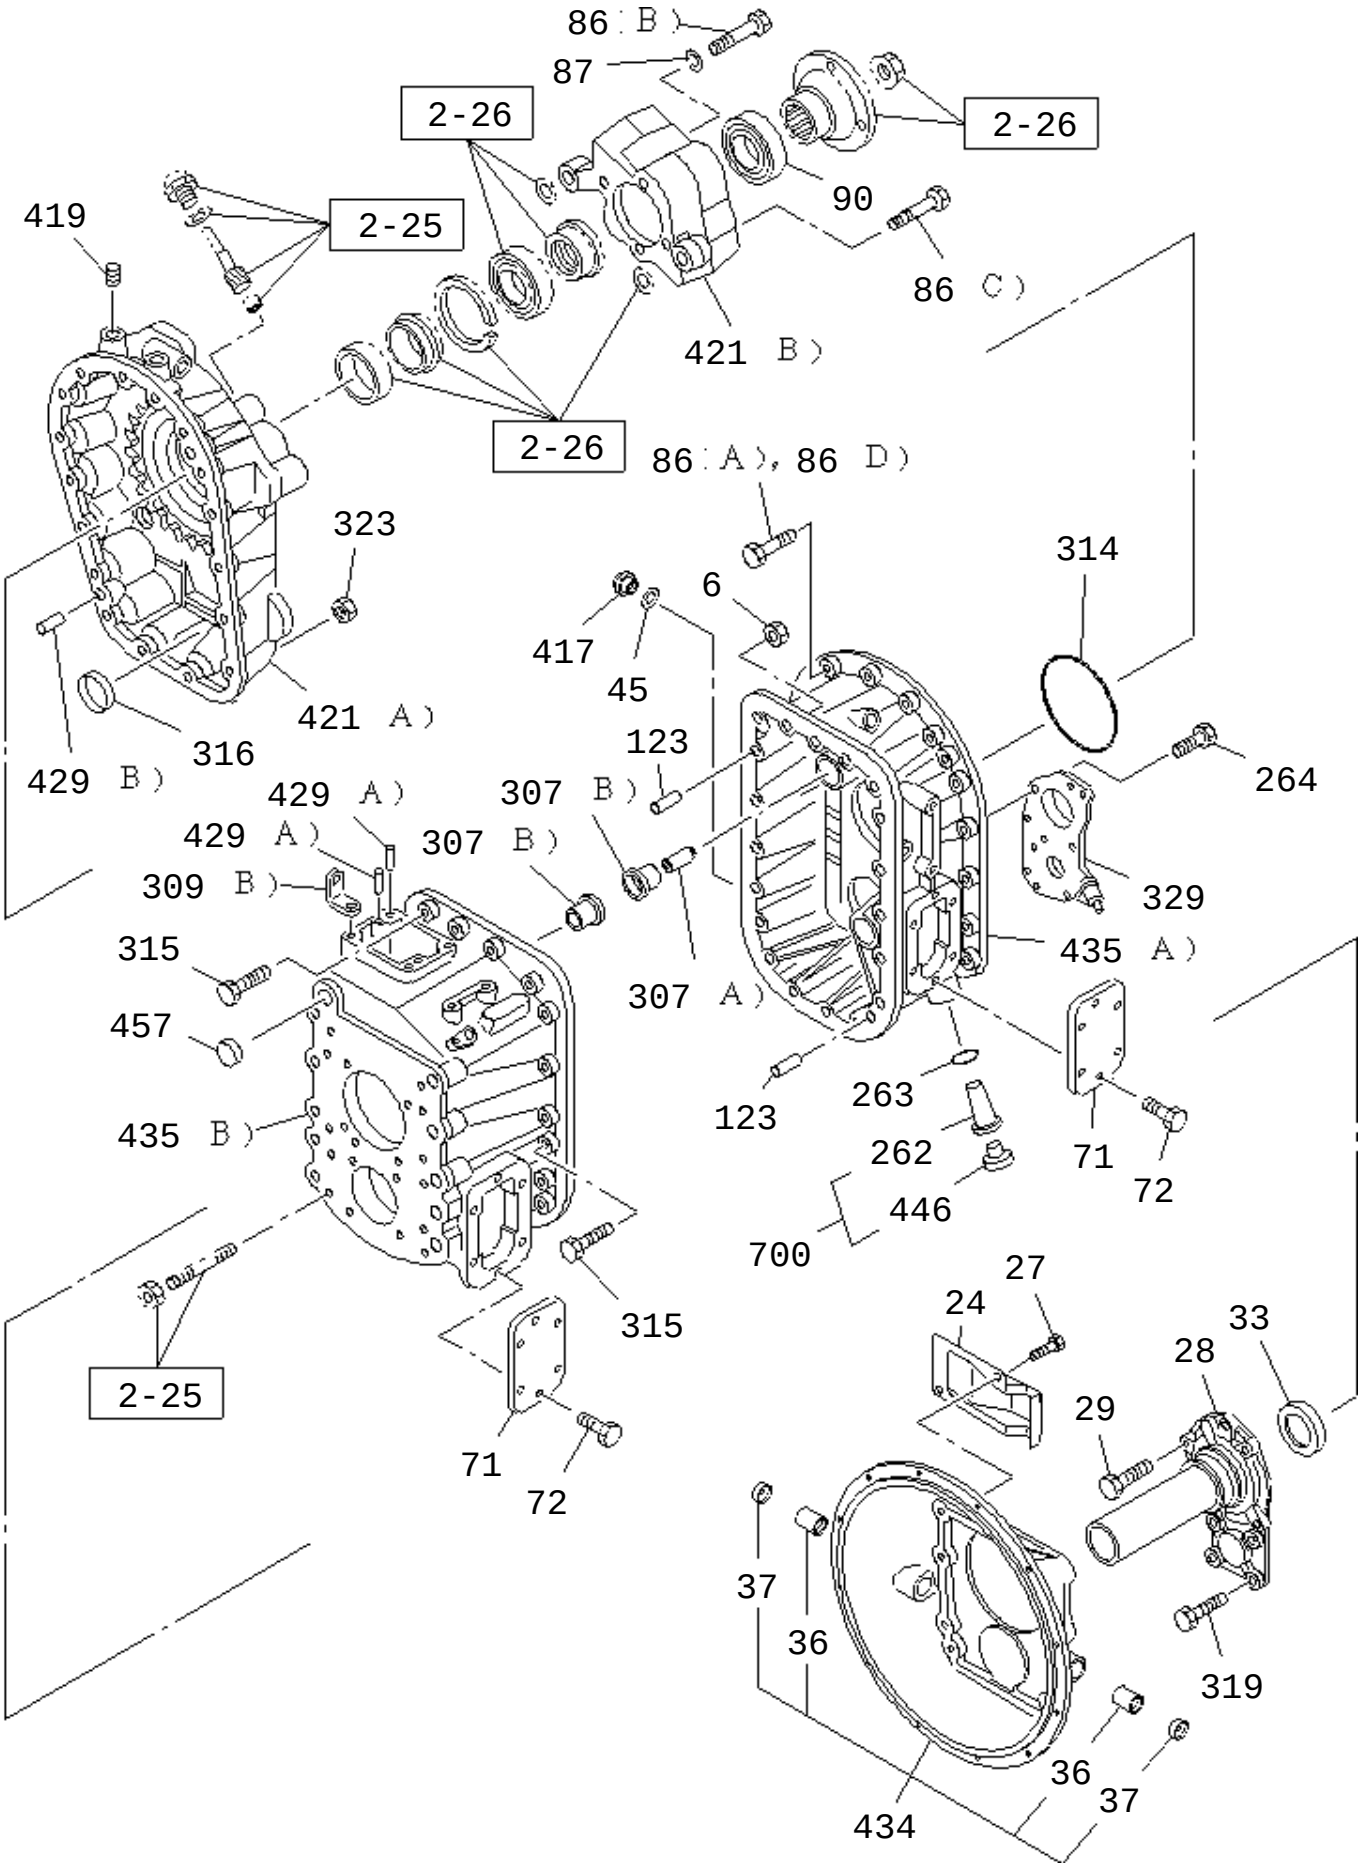

https://truckmanualshub.com/


NYLON TUBE AND CLIP

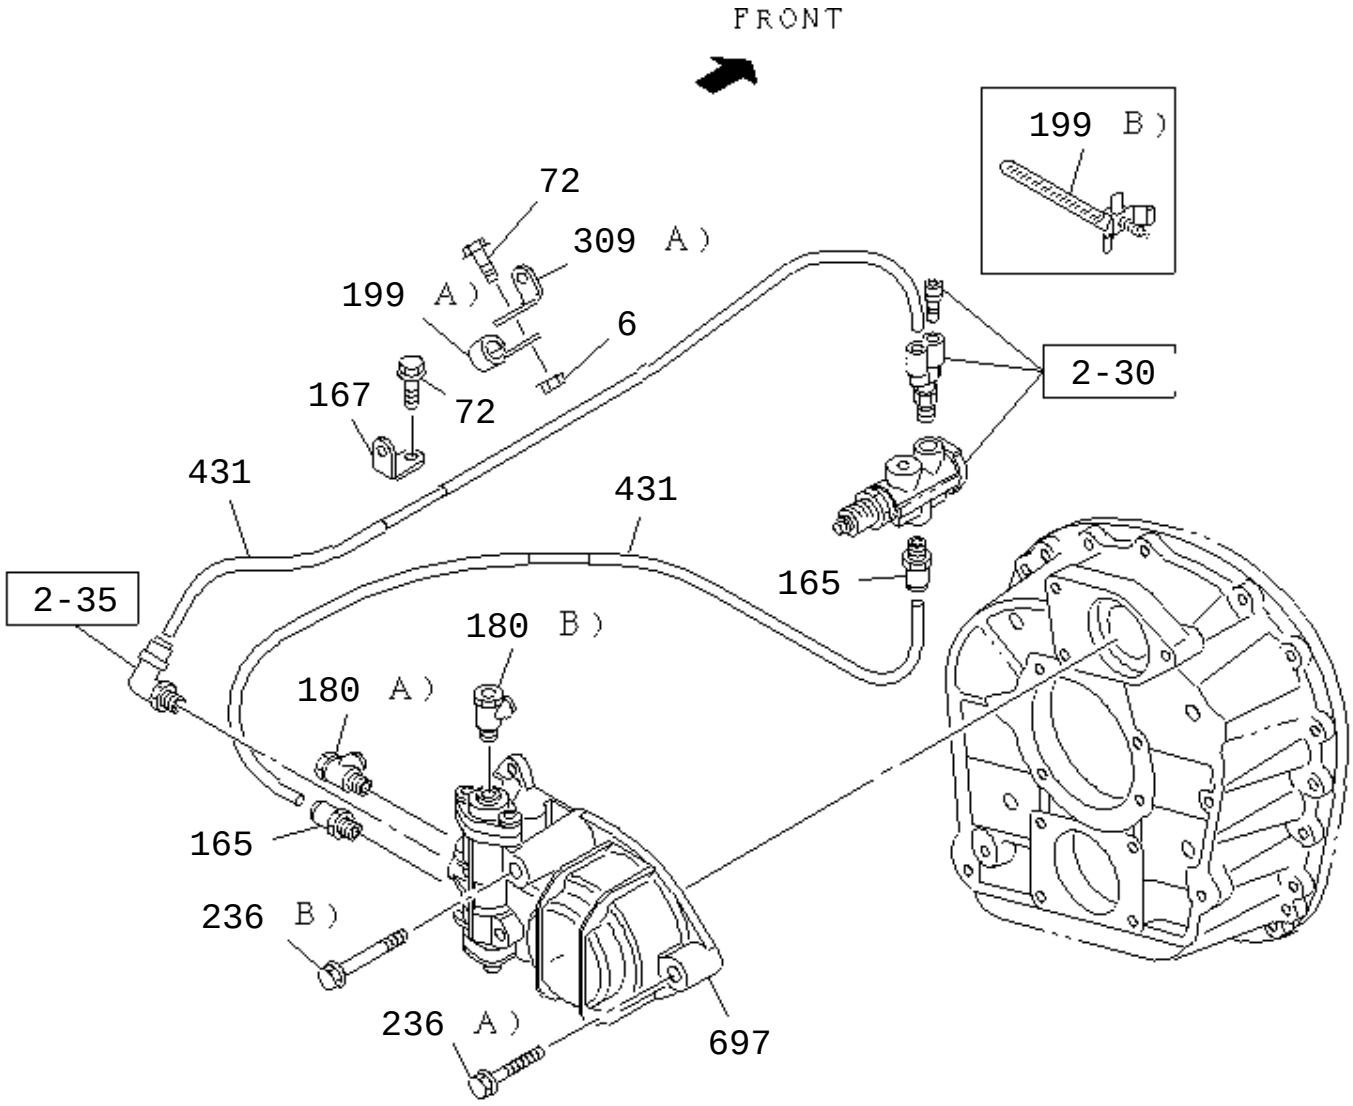


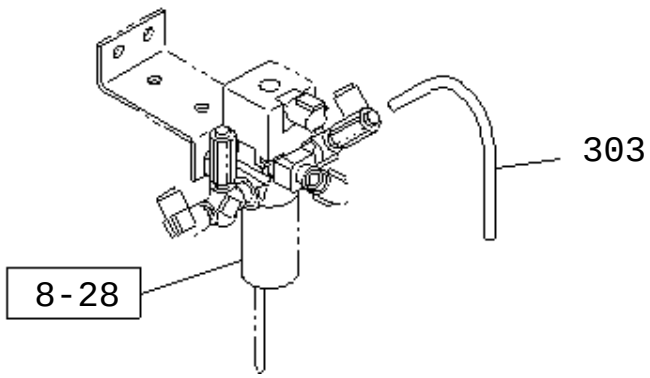



https://truckmanualshub.com/


BRACKET

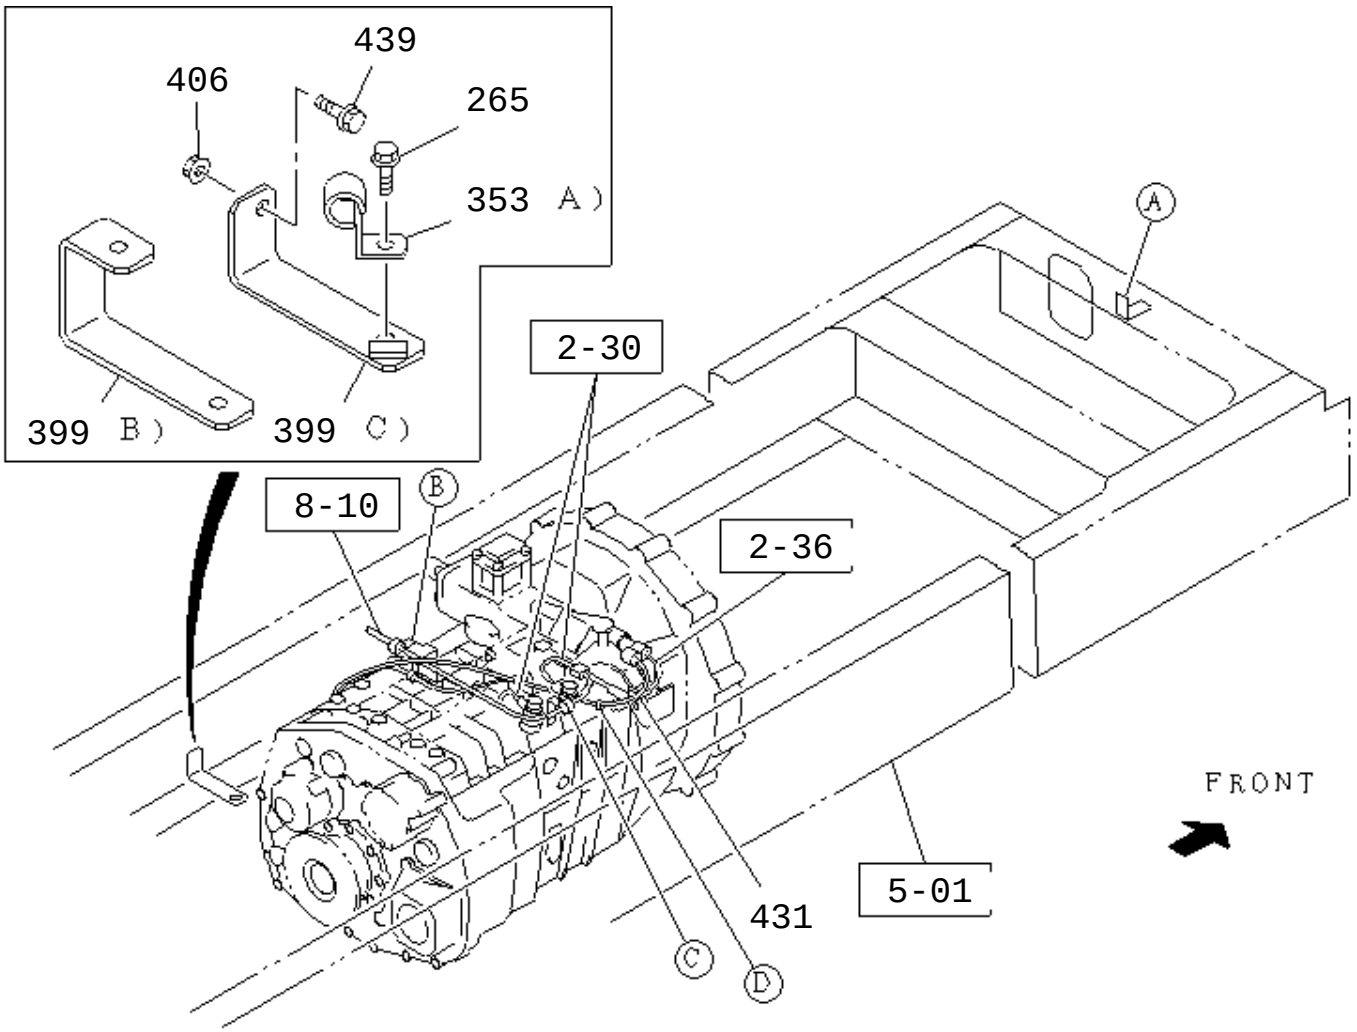

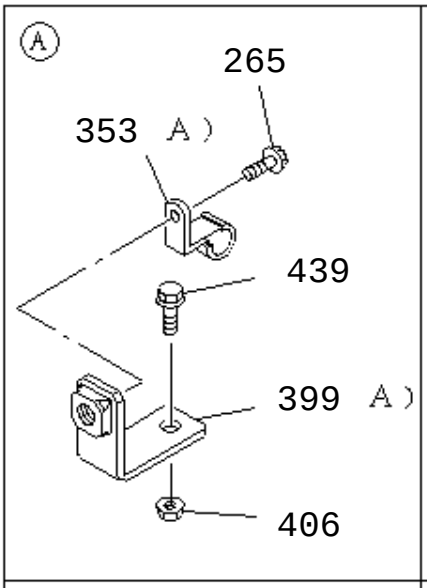

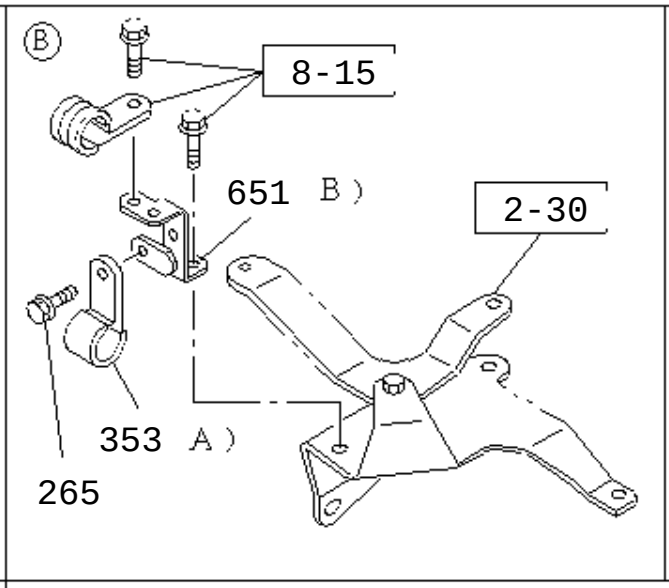

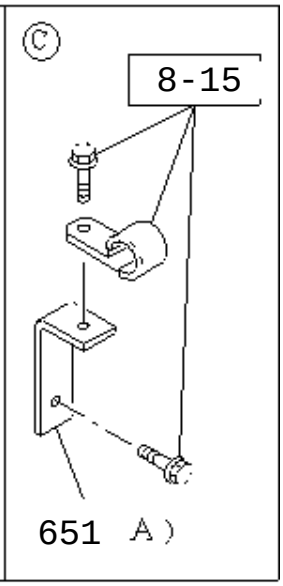

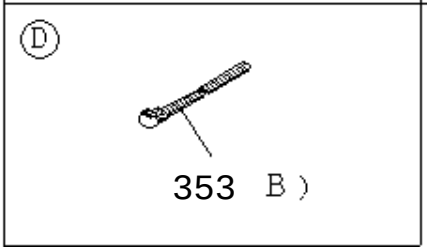

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
1	D	TRANSMISSION ASM; MANUAL 8-98257-471-0		1312-	01	A	
6		NUT; CASE,TRANS 1-33119-571-0		1312-	15	A	
24		COVER; CHECK HOLE,DUST 1-31131-041-0		1312-	01	A	
27		BOLT; COVER TO CLU HSG 0-28050-816-0		1312-	02	A	M8X16 FLANGE
28		COVER; FRT,TRANS CASE 1-33121-144-0		1312-	01	A	
29		BOLT; FRT COVER 1-33129-016-0		1312-	05	A	
33		SEAL; OIL,FRT COVER,T/M 1-33219-194-0		1312-	01	A	
36		BEARING; NEEDLE,CLU HSG 1-09811-002-1		1312-	02	A	NTN
37		SEAL; DUST,CLU HSG 1-09625-002-0		1312-	02	A	
45		GASKET; FILLER PLUG 1-33119-459-0		1312-	01	A	
71		COVER; SIDE,TRANS CASE 1-33141-073-0		1312-	02	A	
72		BOLT; SIDE COVER 1-33119-589-0		1312-	14	A	
86		BOLT; RR COVER 1-33119-573-0		1312-	16	A	(A) M10X58
		1-33119-611-0		1312-	04	A	(B)
		1-33119-613-0		1312-	02	A	(C)
		1-33119-614-0		1312-	01	A	(D)
87		WASHER; LK,RR COVER 1-33119-610-0		1312-	04	A	
90		SEAL; OIL,RR COVER 1-33159-046-0		1312-	01	A	
123		DOWEL; TRANS CASE 1-33119-305-0		1312-	02	A	
165		ADAPTER; STRAIGHT 1-33119-461-0		1312-	02	A	
167		BRACKET; CLIP,AIR TUBE 1-33119-599-0		1312-	01	A	
180		CONNECTOR; NYLON TUBE 1-33119-597-0		1312-	01	A	(A)
		1-33119-598-0		1312-	01	A	(B)
199		CLIP; NYLON TUBE 1-33119-600-0		1312-	01	A	(B)
		1-33119-475-0		1312-	01	A	(A)
236		BOLT; VALVE BRKT 1-33119-549-0		1312-	02	A	(A)
		1-33119-550-0		1312-	01	A	(B)
262		STRAINER; OIL PUMP 1-33119-608-0		1312-	01	A	
263		GASKET; STRAINER 1-33119-428-0		1312-	01	A	
264		BOLT; OIL PUMP 1-33129-016-0		1312-	08	A	
265		BOLT; CLIP 0-28650-820-0		1312-1401	03	A	M8X20 FLANGE IDN
		0-28650-820-0		1402-	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8X20 FLANGE IDN
303		TUBE; NYLON					

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
303		1-87411-001-0		1312-	01	A	SERVICED BY L=2000 OD=6
307		BUSHING; SHIFT FORK SHAFT					
		1-33119-303-0		1312-	01	A	(A)
		1-33119-562-0		1312-	02	A	(B)
309		EYE; LIFTING					
		1-33119-596-0		1312-	01	A	(A)
		1-33119-604-0		1312-	01	A	(B)
314		GASKET; CASE					
		1-33119-606-0		1312-	01	A	
315		BOLT; CASE					
		1-33119-572-0		1312-	04	A	M10X40
		1-33119-573-0		1312-	13	A	M10X58
		1-33119-595-0		1312-	01	A	M10X58 FLANGE
316		MAGNET; TRANS CASE					
		1-87060-696-0		1312-	01	A	
319		BOLT; COVER					
		1-33159-071-0		1312-	04	A	
323		NUT; RR COVER					
		1-33119-571-0		1312-	17	A	
329		PUMP ASM; OIL					
		1-34150-125-0		1312-	01	A	
353		CLIP; NYLON TUBE					
		0-95235-035-0		1312-1401	03	A	(A) ID=11 L=20
		0-95235-035-0		1402-	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=11 L=20
		5-09707-031-1		1312-1401	01	A	(B) L=140 IDN
		5-09707-031-1		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) L=140 IDN
399		BRACKET; CLIP					
		8-98205-634-0		1404-	01	A	GVZ WIDE CAB(GG****) (C)
		8-98085-674-0		1312-1401	01	A	(A)
		8-98085-674-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		8-98182-470-0		1312-1401	01	A	(B)
		8-98182-470-0		1402-	01	A	FVZ WIDE CAB(FG****) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
406		NUT; BRKT					
		0-91180-108-0		1312-1401	03	A	M8 FLANGE
		0-91180-108-0		1402-	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
417		PLUG; OIL FILLER,TRANS					
		1-33119-577-0		1312-	01	A	
419		PLUG; RR COVER					
		1-33119-615-0		1312-	01	A	
421		COVER; RR,TRANS					
		1-33131-271-0		1312-	01	A	(A)
		1-33159-048-0		1312-	01	A	(B)
429		PIN; STRAIGHT					
		1-33119-305-0		1312-	02	A	(B)
		1-33119-311-0		1312-	02	A	(A)

https://truckmanualshub.com/

2-20B MANUAL TRANSMISSION ASM AND CASE -B FULLER M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
431		TUBE; NYLON					
		1-33119-474-0		1312-	02	A	
434		HOUSING; CLU					
		1-31110-188-2		1312-	01	A	
435		CASE; TRANS					
		1-33111-363-0		1312-	01	A	(B)
		1-33111-320-0		1312-	01	A	(A)
439		BOLT; BRKT					
		0-28650-830-0		1312-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8X30 FLANGE
		0-28650-820-0		1312-1401	02	A	M8X20 FLANGE IDN
		0-28650-820-0		1402-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8X20 FLANGE IDN
446		PLUG; CASE,TRANS					
		1-33119-546-0		1312-	01	A	
457		CUP; SEALING,CASE					
		1-33119-578-0		1312-	01	A	
651		BRACKET; T/M HARNESS					
		1-82698-630-0		1312-	01	A	(A)
		8-98098-890-0		1312-	01	A	(B)
697		VALVE; AIR					
		1-33119-547-0		1312-	01	A	
700		STRAINER ASM					
		1-33119-324-0		1312-	01	A	
2-25		Move to 2-25					
		Move to 2-25					
2-26		Move to 2-26					
		Move to 2-26					
2-30		Move to 2-30					
		Move to 2-30					
2-35		Move to 2-35					
8-28		Move to 8-28					
2-36		Move to 2-36					
5-01		Move to 5-01					
8-10		Move to 8-10					
8-15		Move to 8-15					

https://truckmanualshub.com/

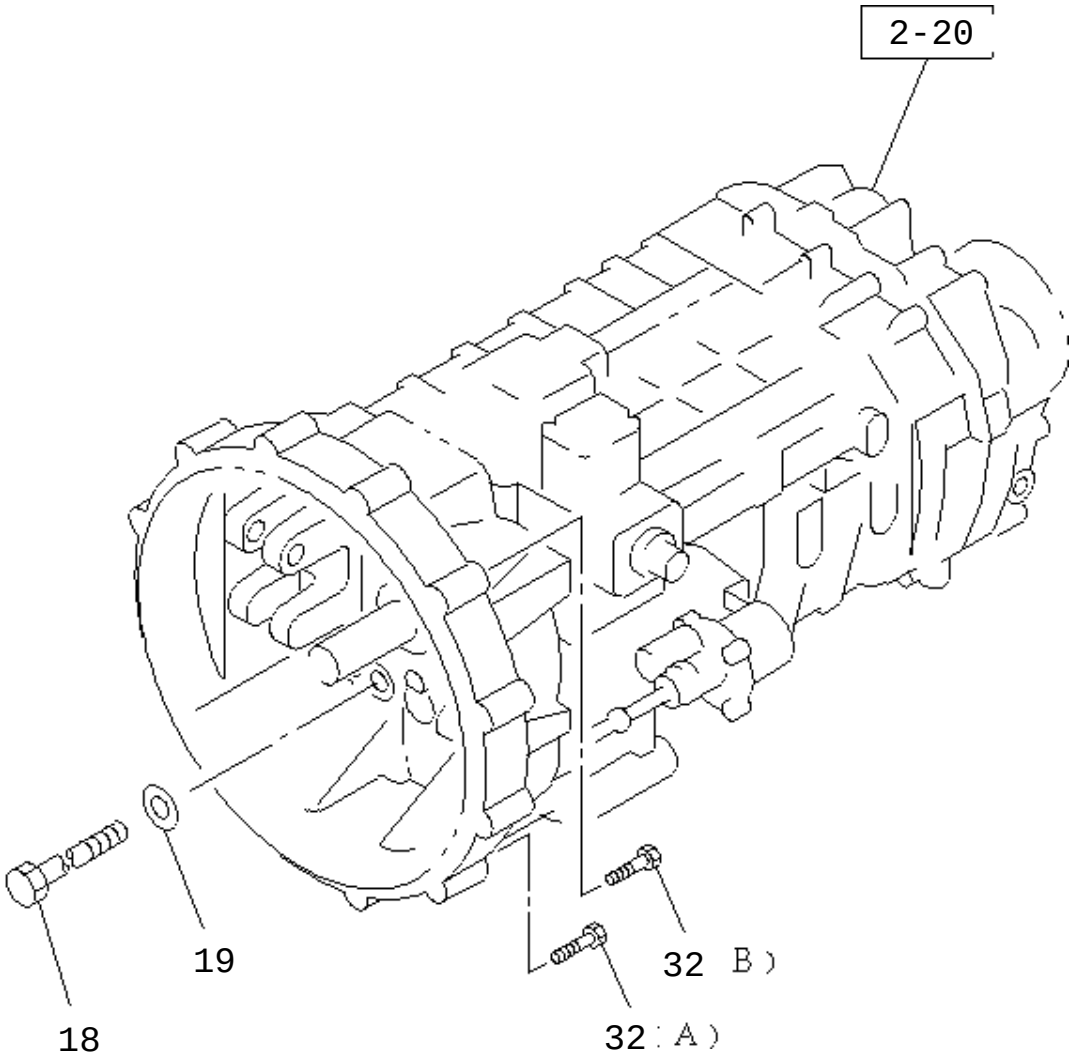


https://truckmanualshub.com/

2-25A SPEEDOMETER DRIVEN GEAR -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
18		BOLT; CLU HSG TO TRANS 1-31119-057-0		1312-	10	A	M18X85
19		WASHER; PL,CLU HSG TO TRANS 1-31119-012-0		1312-	10	A	
32		BOLT; CLU HSG TO FLYWHEEL HSG 0-28151-090-0		1312-	02	A	(B) M10X90 FLANGE
		8-94399-669-1		1312-	09	A	(A) M10X75 FLANGE
2-20		Move to 2-20 Move to 2-20					

https://truckmanualshub.com/

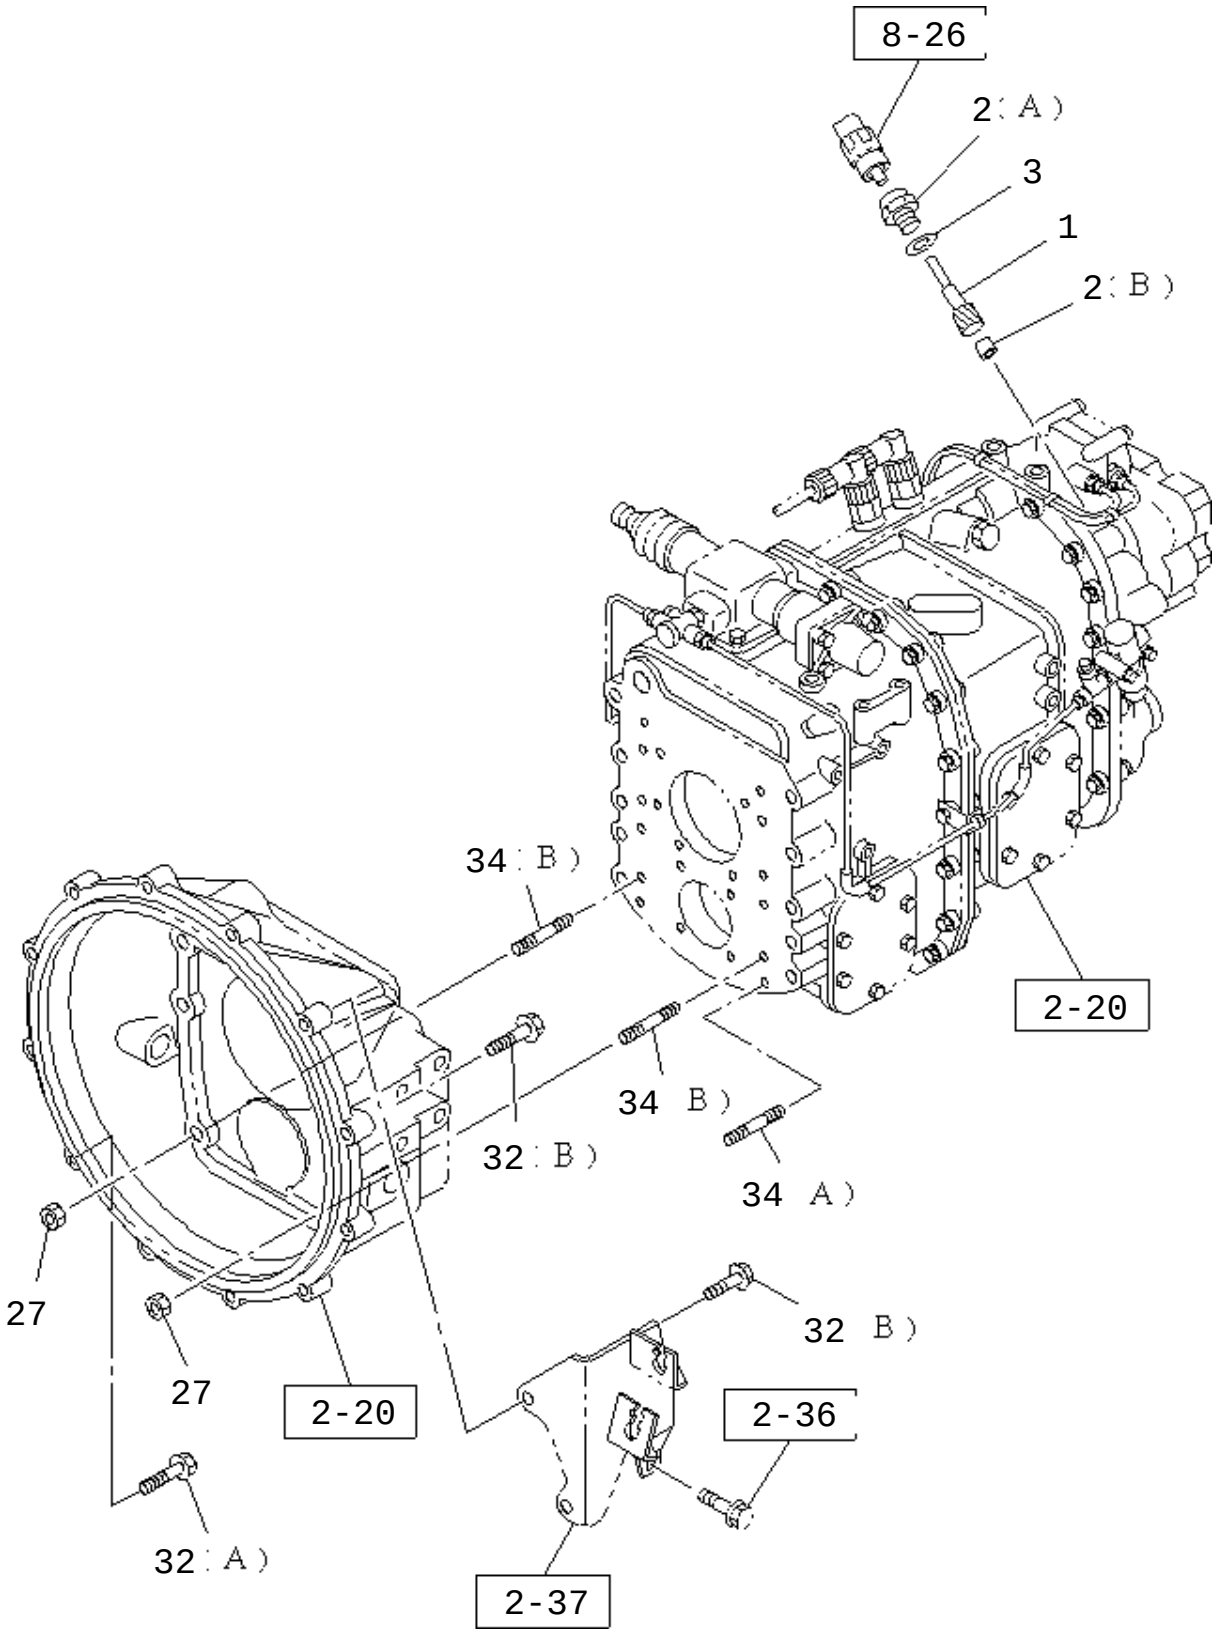


https://truckmanualshub.com/


2-25B SPEEDOMETER DRIVEN GEAR -B FULLER M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
1		GEAR; DRIVEN,SPD					
		1-33372-181-0		1312-	01	A	
							Z=14
2		BUSHING; DRIVEN GEAR,SPEEDOMETER					
		1-33379-017-0		1312-	01	A	
							(B)
		1-33379-020-0		1312-	01	A	
							(A)
3		GASKET; BUSHING					
		1-33379-014-0		1312-	01	A	
27		NUT; CLU HSG TO TRANS					
		1-33119-582-0		1312-	12	A	
32		BOLT; CLU HSG TO FLYWHEEL HSG					
		0-28151-045-0		1312-	02	A	
							(B)
							M10X45 FLANGE
		0-28751-035-0		1312-	10	A	
							(A)
							M10X35 FLANGE
34		STUD; CLU HSG					
		1-33119-580-0		1312-	02	A	
							(B)
		1-33119-581-0		1312-	10	A	
							(A)
2-20		Move to 2-20					
		Move to 2-20					
2-36		Move to 2-36					
2-37		Move to 2-37					
8-26		Move to 8-26					

https://truckmanualshub.com/

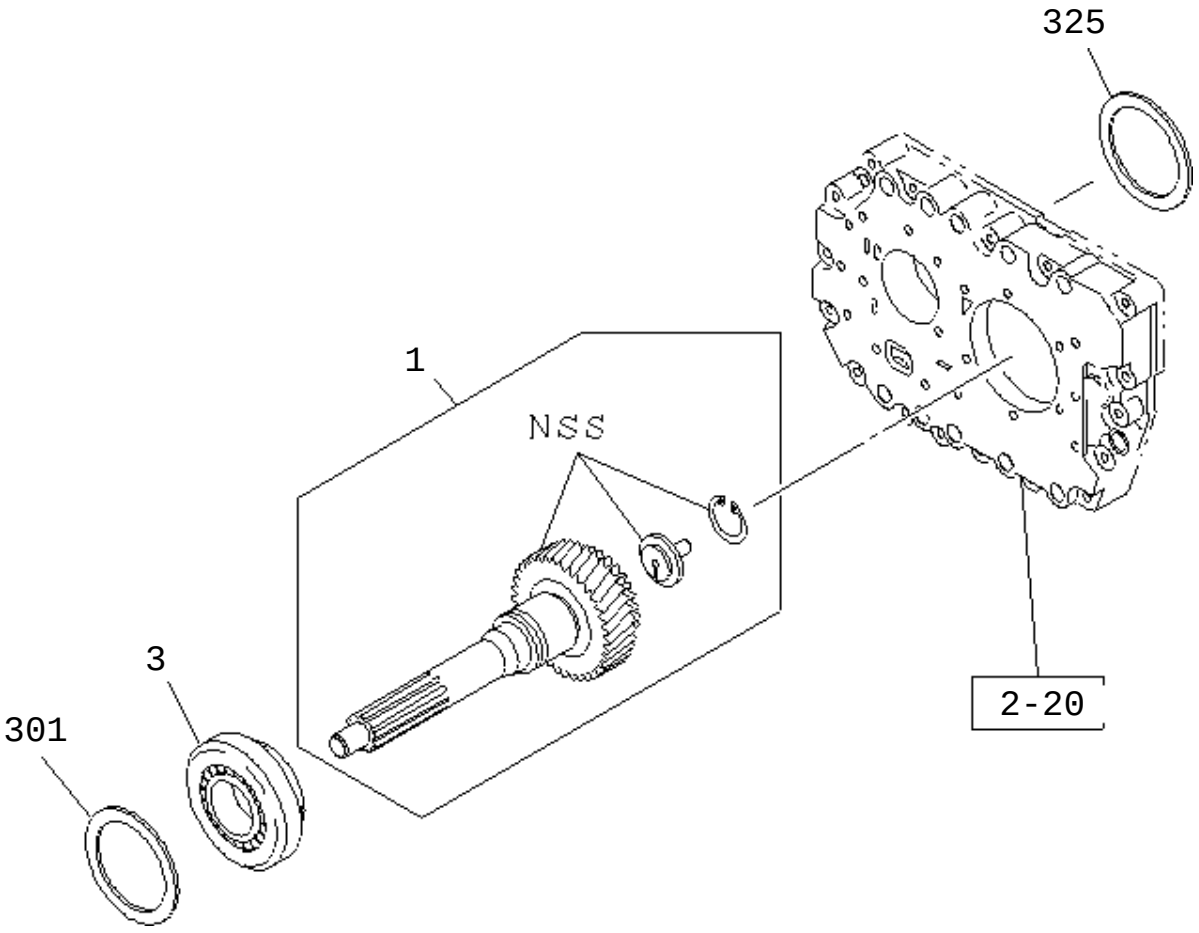


https://truckmanualshub.com/

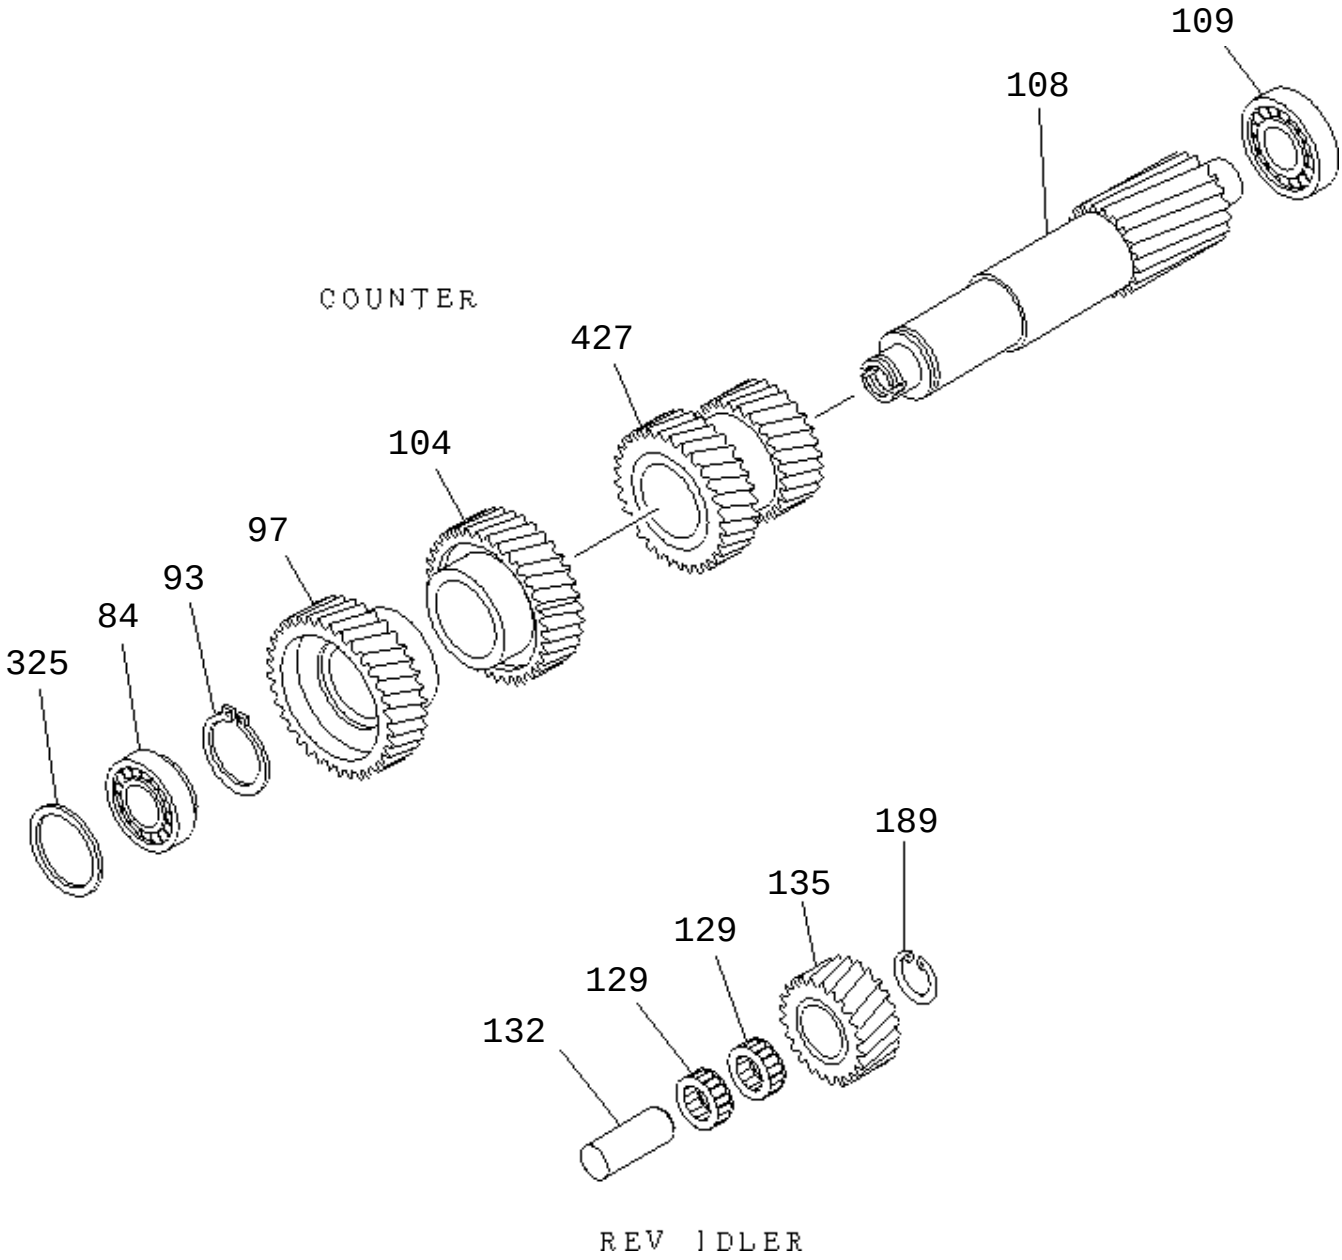


https://truckmanualshub.com/


MAIN SHAFT

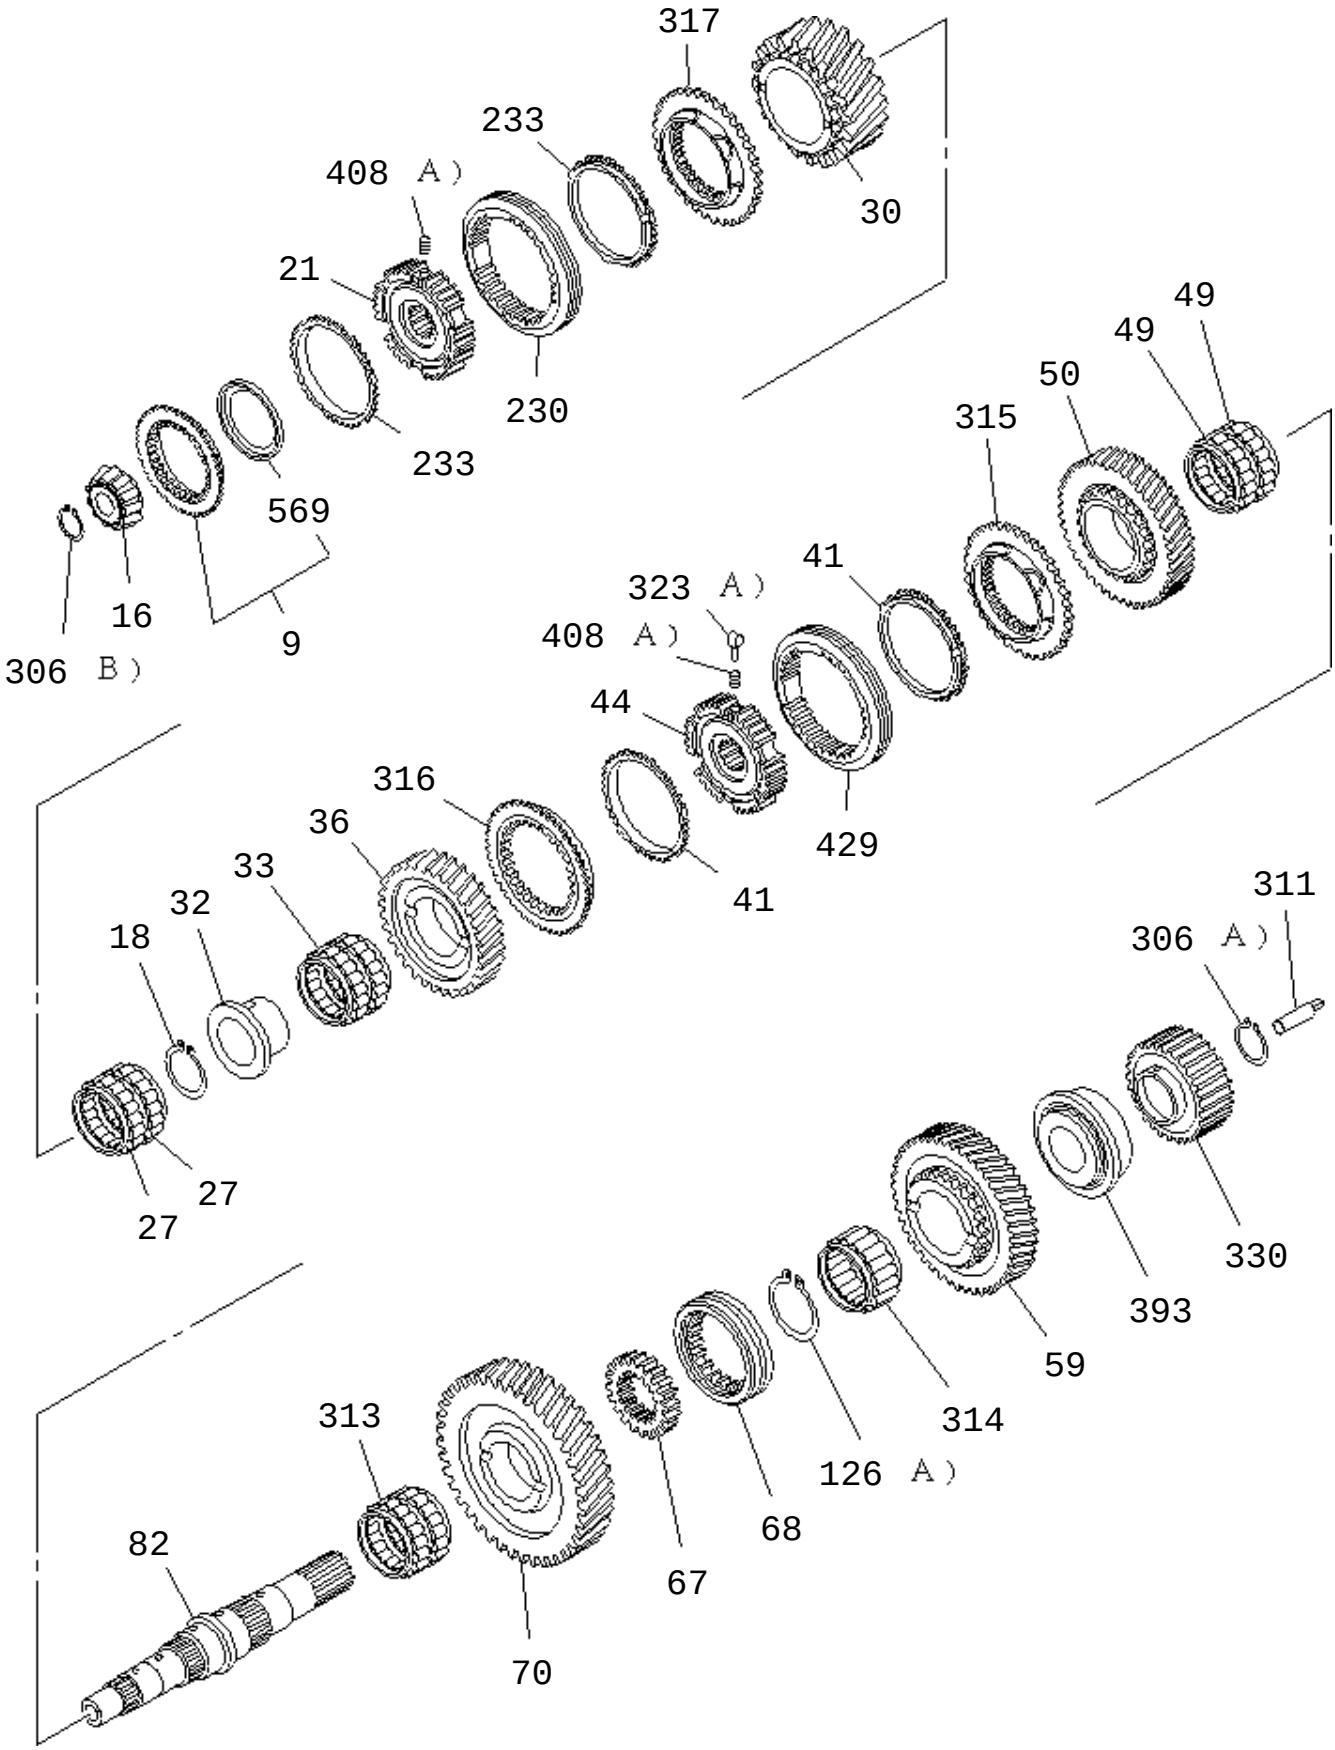

https://truckmanualshub.com/

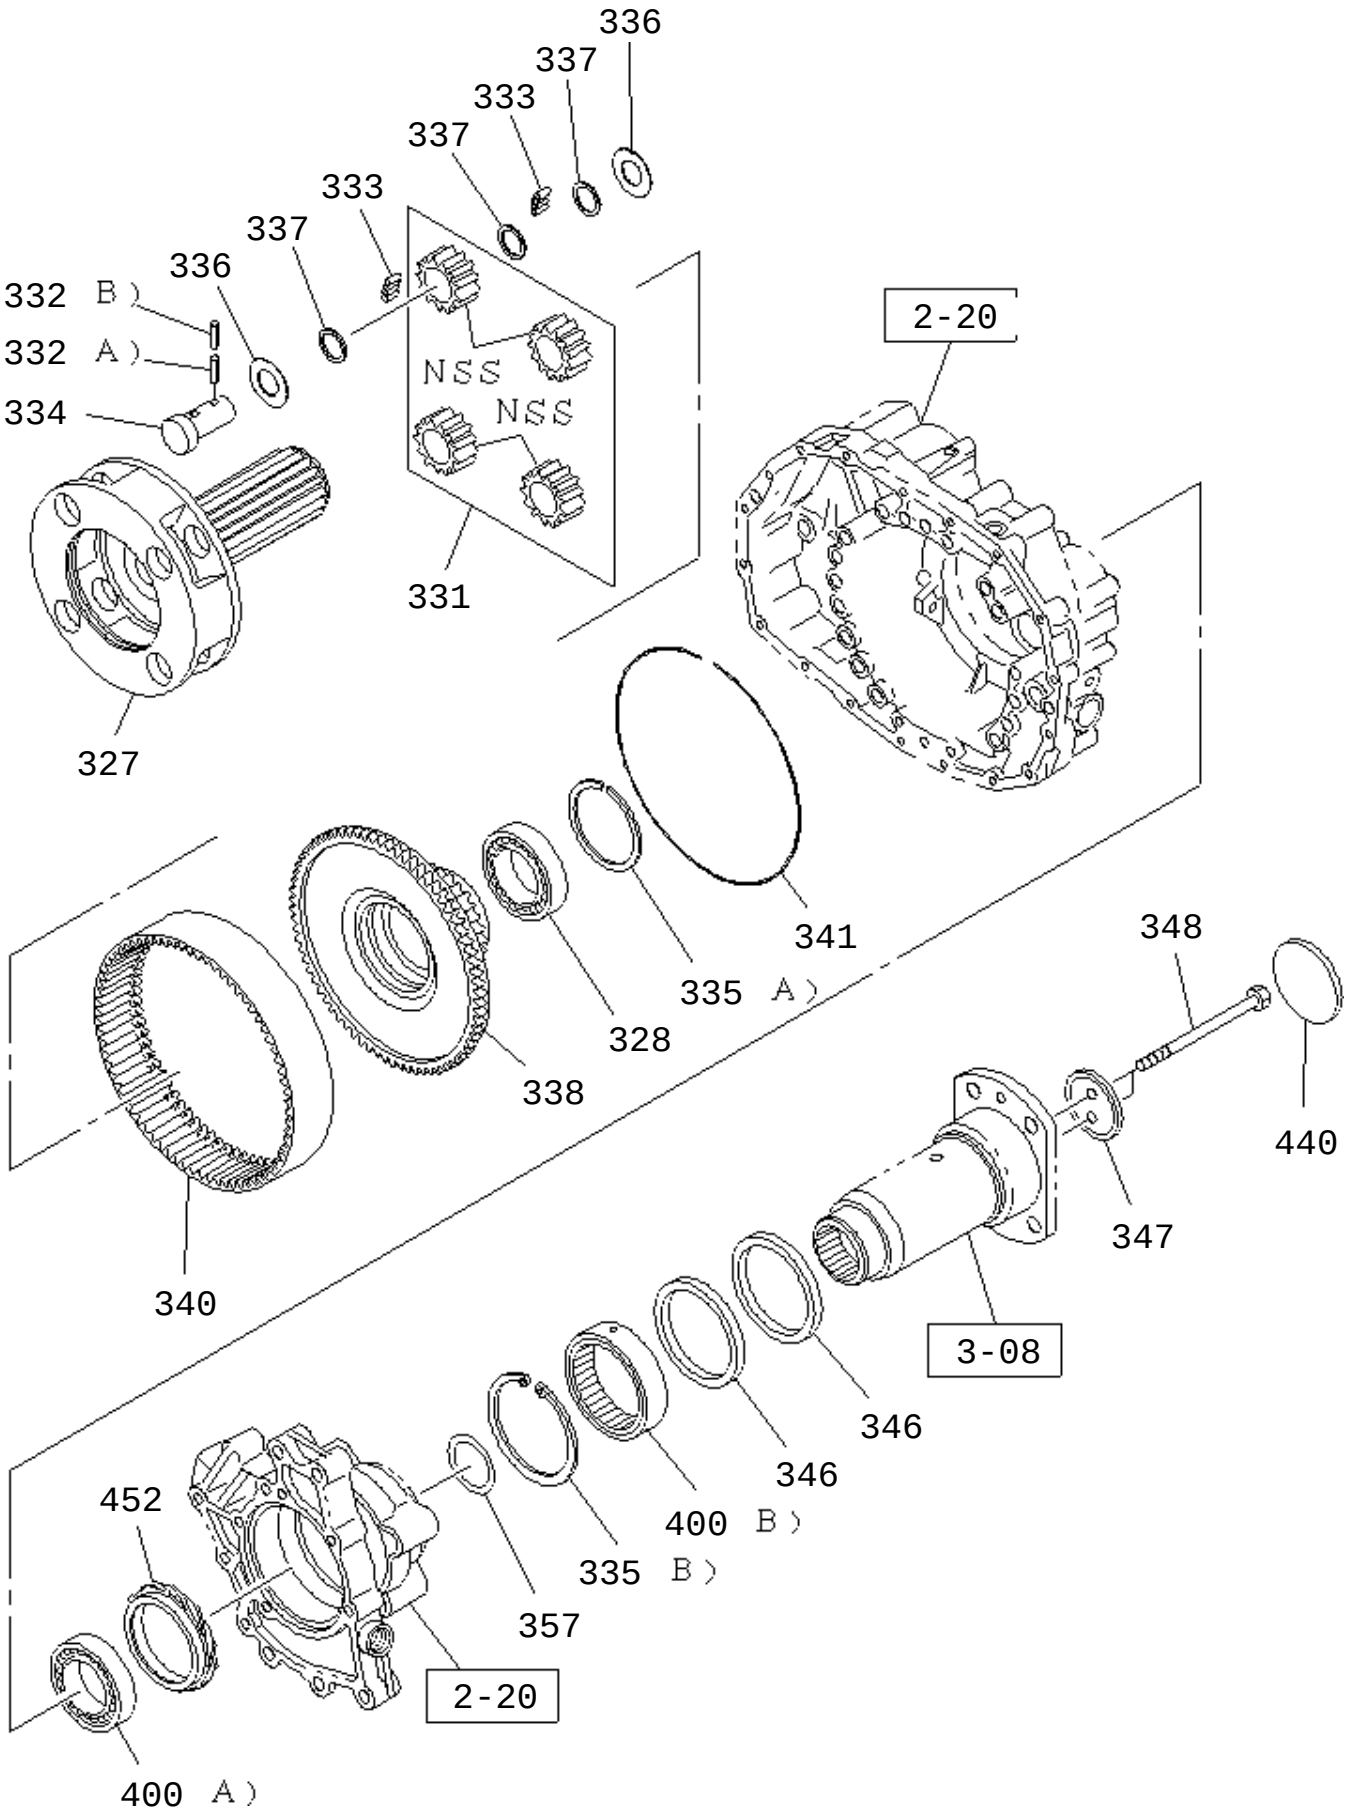

https://truckmanualshub.com/

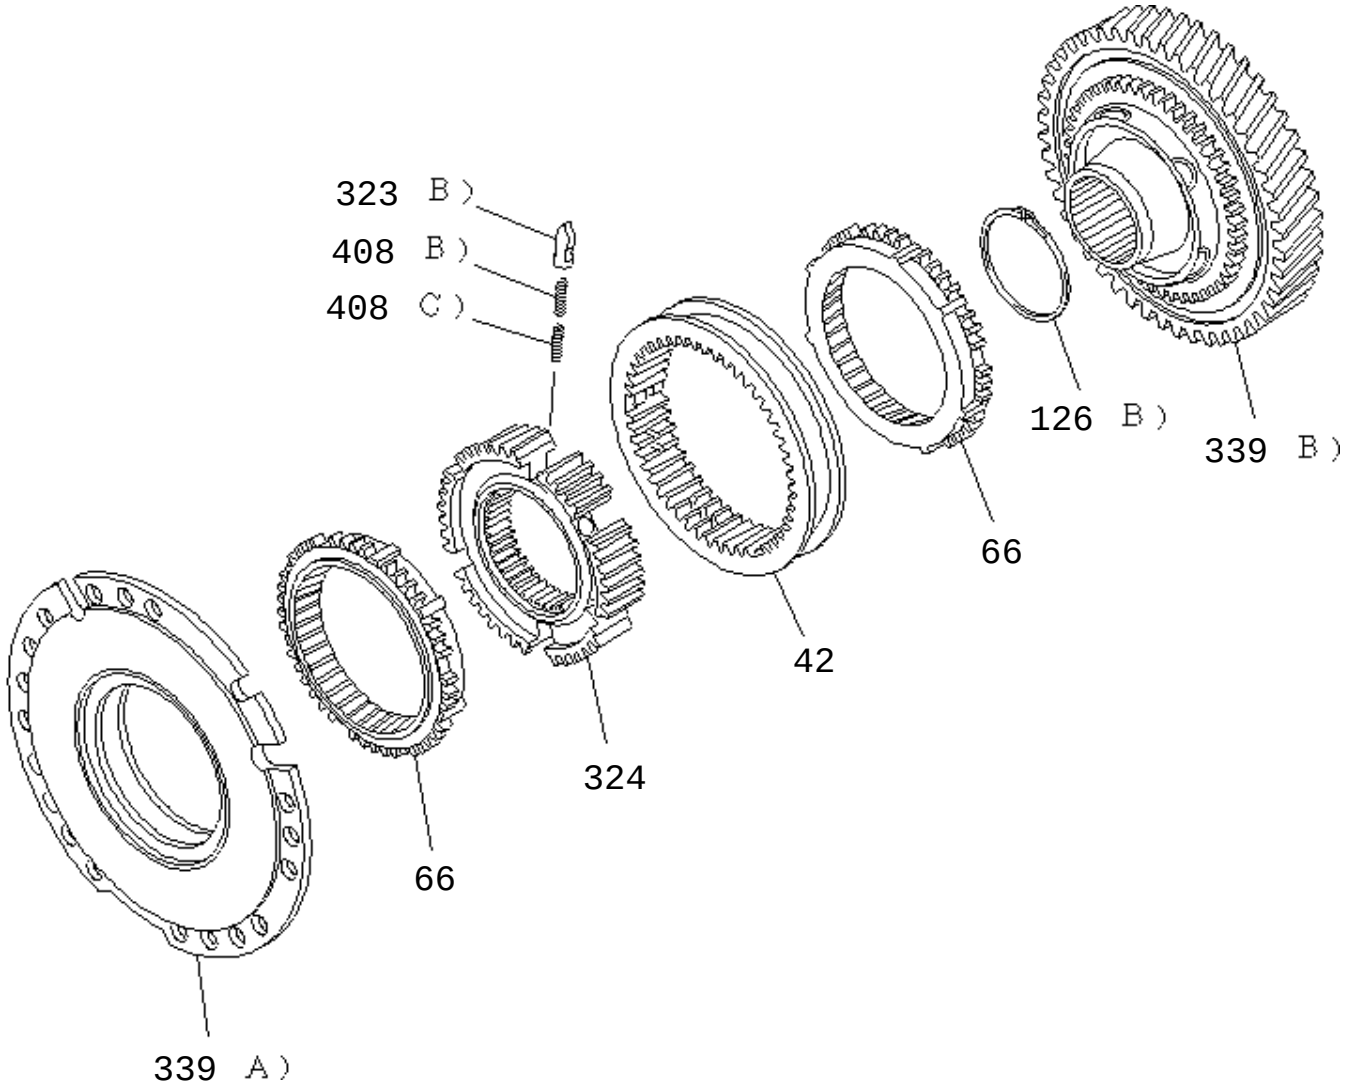

https://truckmanualshub.com/

2-26A MANUAL TRANSMISSION GEAR -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
1		SHAFT; TOP GEAR,TRANS 1-33215-040-0		1312-	01	A	
3		BEARING; TOP GEAR SHAFT 1-33219-340-0		1312-	01	A	
9		CLUTCH; DOG,TOP GEAR 1-33265-631-0		1312-	01	A	
16		BEARING; PILOT,MAINSHAFT 1-33239-212-0		1312-	01	A	
18		RING; SNAP,CLU HUB 1-33259-054-0		1312-	01	A	T=2.4
		1-33259-060-0		1312-	01	A	T=2.3
		1-33259-061-0		1312-	01	A	T=2.2
		1-33259-062-0		1312-	01	A	T=2.1
		1-33259-063-0		1312-	01	A	T=2.0
		1-33259-064-0		1312-	01	A	T=1.9
21		HUB; CLU,4TH & 5TH 1-33261-295-0		1312-	01	A	
27		BEARING; 4TH GEAR 1-33259-128-0		1312-	02	A	
30		GEAR; 4TH,MAINSHAFT 1-33251-449-0		1312-	01	A	
32		COLLAR; 3RD GEAR 1-33259-140-0		1312-	01	A	
33		BEARING; NEEDLE,3RD GEAR 1-33259-127-0		1312-	01	A	
36		GEAR; 3RD,MAINSHAFT 1-33252-478-0		1312-	01	A	
41		RING; BLOCK,2ND & 3RD 1-33265-498-0		1312-	02	A	
42		SLEEVE 1-33262-195-0		1312-	01	A	
44		HUB; CLU,2ND & 3RD,MAIN 1-33261-303-0		1312-	01	A	
49		BEARING; NEEDLE,2ND GEAR 1-33259-126-0		1312-	02	A	
50		GEAR; 2ND,MAINSHAFT 1-33251-448-0		1312-	01	A	
59		GEAR; REV MAINSHAFT 1-33257-101-0		1312-	01	A	
66		RING; BLOCK,SYN 1-33339-069-0		1312-	02	A	
67		HUB; CLU,1ST TO REV 1-33259-135-0		1312-	01	A	
68		SLEEVE; 1ST TO REV 1-33259-049-0		1312-	01	A	
70		GEAR; 1ST,MAINSHAFT 1-33251-434-0		1312-	01	A	
82		SHAFT; MAIN,TRANS 1-33231-337-0		1312-	01	A	
84		BEARING; COUNTER SHAFT,FRT 1-33312-016-0		1312-	01	A	
93		RING; SNAP,COUNTER FRT BRG 1-33319-251-0		1312-	01	A	T=2.0
		1-33319-252-0		1312-	01	A	T=2.5
		1-33319-253-0		1312-	01	A	T=2.4
		1-33319-254-0		1312-	01	A	T=2.3
		1-33319-255-0		1312-	01	A	T=2.2
		1-33319-256-0		1312-	01	A	T=2.1
		1-33319-264-0		1312-	01	A	T=2.6
97		GEAR; 5TH,COUNTER 1-33338-407-0		1312-	01	A	

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
104		GEAR; 4TH,COUNTER					
		1-33338-406-0		1312-	01	A	
108		SHAFT; COUNTER					
		1-33311-347-0		1312-	01	A	
109		BEARING; COUNTER SHAFT,RR					
		1-33312-019-0		1312-	01	A	
126		RING; SNAP,CLU HUB					
		1-33259-050-0		1312-	01	A	(A) T=2.8
		1-33259-051-0		1312-	01	A	(A) T=2.7
		1-33259-052-0		1312-	01	A	(A) T=2.6
		1-33259-053-0		1312-	01	A	(A) T=2.5
		1-33259-054-0		1312-	01	A	(A) T=2.4
		1-33269-047-0		1312-	01	A	(B) T=4.0
		1-33269-048-0		1312-	01	A	(B) T=3.9
		1-33269-049-0		1312-	01	A	(B) T=3.8
		1-33269-050-0		1312-	01	A	(B) T=3.7
129		BEARING; NEEDLE,IDLER					
		1-33369-026-0		1312-	02	A	
132		SHAFT; REV					
		1-33351-024-0		1312-	01	A	
135		GEAR; REV IDLER					
		1-33361-096-0		1312-	01	A	
189		RING; SNAP,REV,GEAR					
		1-44519-224-0		1312-	01	A	
230		SLEEVE; 4TH TO 5TH					
		1-33262-239-0		1312-	01	A	
233		RING; BLOCK 4TH TO 5TH					
		1-33269-096-0		1312-	02	A	
301		SHIM; TOP GEAR SHAFT					
		1-33139-039-0		1312-	01	A	T=1.80
		1-33139-041-0		1312-	01	A	T=1.70
		1-33139-042-0		1312-	01	A	T=1.60
		1-33139-043-0		1312-	01	A	T=1.50
		1-33139-045-0		1312-	01	A	T=1.40
		1-33139-046-0		1312-	01	A	T=1.30
		1-33139-047-0		1312-	01	A	T=1.20
		1-33139-050-0		1312-	01	A	T=1.10
		1-33139-201-0		1312-	01	A	T=1.45
		1-33139-202-0		1312-	01	A	T=1.55
		1-33139-204-0		1312-	01	A	T=1.15
		1-33139-205-0		1312-	01	A	T=1.25
		1-33139-206-0		1312-	01	A	T=1.35
		1-33139-223-0		1312-	01	A	T=2.30

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
301		1-33139-224-0		1312-	01	A	T=2.25
		1-33139-225-0		1312-	01	A	T=2.20
		1-33139-226-0		1312-	01	A	T=2.15
		1-33139-227-0		1312-	01	A	T=2.10
		1-33139-228-0		1312-	01	A	T=2.05
		1-33139-229-0		1312-	01	A	T=2.00
		1-33139-230-0		1312-	01	A	T=1.95
		1-33139-231-0		1312-	01	A	T=1.90
		1-33139-232-0		1312-	01	A	T=1.85
		1-33139-233-0		1312-	01	A	T=1.75
		1-33139-234-0		1312-	01	A	T=1.65
306		RING; SNAP,MAINSHAFT					
		1-33319-066-0		1312-	01	A	(A) T=2.95
		1-33319-067-0		1312-	01	A	(A) T=2.90
		1-33319-068-0		1312-	01	A	(A) T=2.85
		1-33319-069-0		1312-	01	A	(A) T=2.80
		1-33319-070-0		1312-	01	A	(A) T=2.75
		1-33319-071-0		1312-	01	A	(A) T=2.70
		1-33319-072-0		1312-	01	A	(A) T=2.65
		1-33319-073-0		1312-	01	A	(A) T=2.60
		1-33319-074-0		1312-	01	A	(A) T=2.55
		1-33319-075-0		1312-	01	A	(A) T=2.50
		1-33319-076-0		1312-	01	A	(A) T=2.45
		1-43319-021-0		1312-	01	A	(B) T=2.5
		1-43319-101-0		1312-	01	A	(B) T=2.4
		1-43319-102-0		1312-	01	A	(B) T=2.3
		1-43319-103-0		1312-	01	A	(B) T=2.0
		1-43319-104-0		1312-	01	A	(B) T=2.1
		1-43319-105-0		1312-	01	A	(B) T=2.2
311		PIPE; MAINSHAFT					

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
311		1-33239-349-0		1312-	01	A	
313		BEARING; NEEDLE,LOW GEAR 1-33259-124-0		1312-	01	A	
314		BEARING; NEEDLE,REV GEAR 1-33259-125-0		1312-	01	A	
315		CLUTCH; DOG,2ND GEAR 1-33265-629-0		1312-	01	A	
316		CLUTCH; DOG,3RD GEAR 1-33265-629-0		1312-	01	A	
317		CLUTCH; DOG,4TH GEAR 1-33265-630-0		1312-	01	A	
323		INSERT 1-33263-027-0		1312-	09	A	(B)
		1-33263-030-0		1312-	06	A	(A)
324		HUB; CLU 1-33261-230-0		1312-	01	A	
325		SHIM; COUNTER SHAFT BRG 1-33389-048-0		1312-	01	A	T=1.55
		1-33389-073-0		1312-	01	A	T=2.00
		1-33389-074-0		1312-	01	A	T=1.90
		1-33389-075-0		1312-	01	A	T=1.80
		1-33389-076-0		1312-	01	A	T=1.70
		1-33389-077-0		1312-	01	A	T=1.65
		1-33389-078-0		1312-	01	A	T=1.75
		1-33389-079-0		1312-	01	A	T=1.85
		1-33389-080-0		1312-	01	A	T=1.95
		1-33389-081-0		1312-	01	A	T=2.05
		1-33389-082-0		1312-	01	A	T=2.10
		1-33389-083-0		1312-	01	A	T=2.15
		1-33389-084-0		1312-	01	A	T=2.20
		1-33389-086-0		1312-	01	A	T=2.40
		1-33389-087-0		1312-	01	A	T=2.35
		1-33389-088-0		1312-	01	A	T=2.30
		1-33389-089-0		1312-	01	A	T=2.25
		8-98080-571-0		1312-	01	A	T=1.50
		8-98080-572-0		1312-	01	A	T=1.60
327		CARRIER; PLANETARY GEAR 1-33231-338-0		1312-	01	A	
328		BEARING; CARRIER 1-33339-094-0		1312-	01	A	
330		GEAR; SUN 1-33259-134-0		1312-	01	A	
331		GEAR SET; PLANETARY 1-33239-350-0		1312-	01	A	
332		PIN; LOCK,SHAFT 1-33239-178-0		1312-	04	A	(A)
		1-33239-179-0		1312-	04	A	(B)
333		ROLLER; PLANETARY GEAR 1-33239-232-0		1312-	AR	A	
334		SHAFT; PLANETARY GEAR 1-33239-359-0		1312-	04	A	
335		RING; SNAP,BEARING					

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
335		1-33339-050-0		1312-	01	A	
							(B)
		1-33339-075-0		1312-	01	A	
							(A) T=2.50
		1-33339-076-0		1312-	01	A	
							(A) T=2.40
		1-33339-077-0		1312-	01	A	
							(A) T=2.30
		1-33339-078-0		1312-	01	A	
							(A) T=2.20
		1-33339-079-0		1312-	01	A	
							(A) T=2.10
		1-33339-080-0		1312-	01	A	
							(A) T=2.00
336		WASHER; THRUST,PLANETARY GEAR					
		1-33239-174-0		1312-	08	A	
337		WASHER; PLANETARY GEAR,INNER					
		1-33239-176-0		1312-	12	A	
338		CARRIER; RING GEAR					
		1-33331-275-0		1312-	01	A	
339		CLUTCH; PLANETARY GEAR					
		1-33265-632-0		1312-	01	A	
							(B)
		1-33265-649-0		1312-	01	A	
							(A)
340		GEAR; RING					
		1-33339-099-0		1312-	01	A	
341		WIRE; LOCK,CARRIER					
		1-33339-096-0		1312-	01	A	
346		GASKET; FLANGE					
		1-33339-051-0		1312-	02	A	
347		WASHER; FLANGE					
		1-09509-060-0		1312-	01	A	
348		BOLT; SHAFT					
		1-09009-168-0		1312-	02	A	
357		RING					
		1-33139-218-0		1312-	01	A	
393		BEARING; MAINSHAFT END					
		1-33259-104-0		1312-	01	A	
400		BEARING; OUTPUT SHAFT RR					
		1-33139-212-0		1312-	01	A	
							(A)
		1-33339-098-0		1312-	01	A	
							(B)
408		SPRING					
		1-33269-038-0		1312-	09	A	
							(B)
		1-33269-039-0		1312-	09	A	
							(C)
		1-33269-042-0		1312-	06	A	
							(A)
427		GEAR; 2ND & 3RD,COUNTER					
		1-33332-132-0		1312-	01	A	
429		SLEEVE; 2ND & 3RD					
		1-33262-244-0		1312-	01	A	
440		COVER; FLANGE					
		1-37249-152-0		1312-	01	A	
452		DISC; COUNTING					
		1-33139-217-0		1312-	01	A	
569		DAM; OIL					
		1-33269-097-0		1312-	01	A	
2-20		Move to 2-20					
		Move to 2-20					
3-08		Move to 3-08					
		Move to 3-08					


https://truckmanualshub.com/

MAIN SHAFT

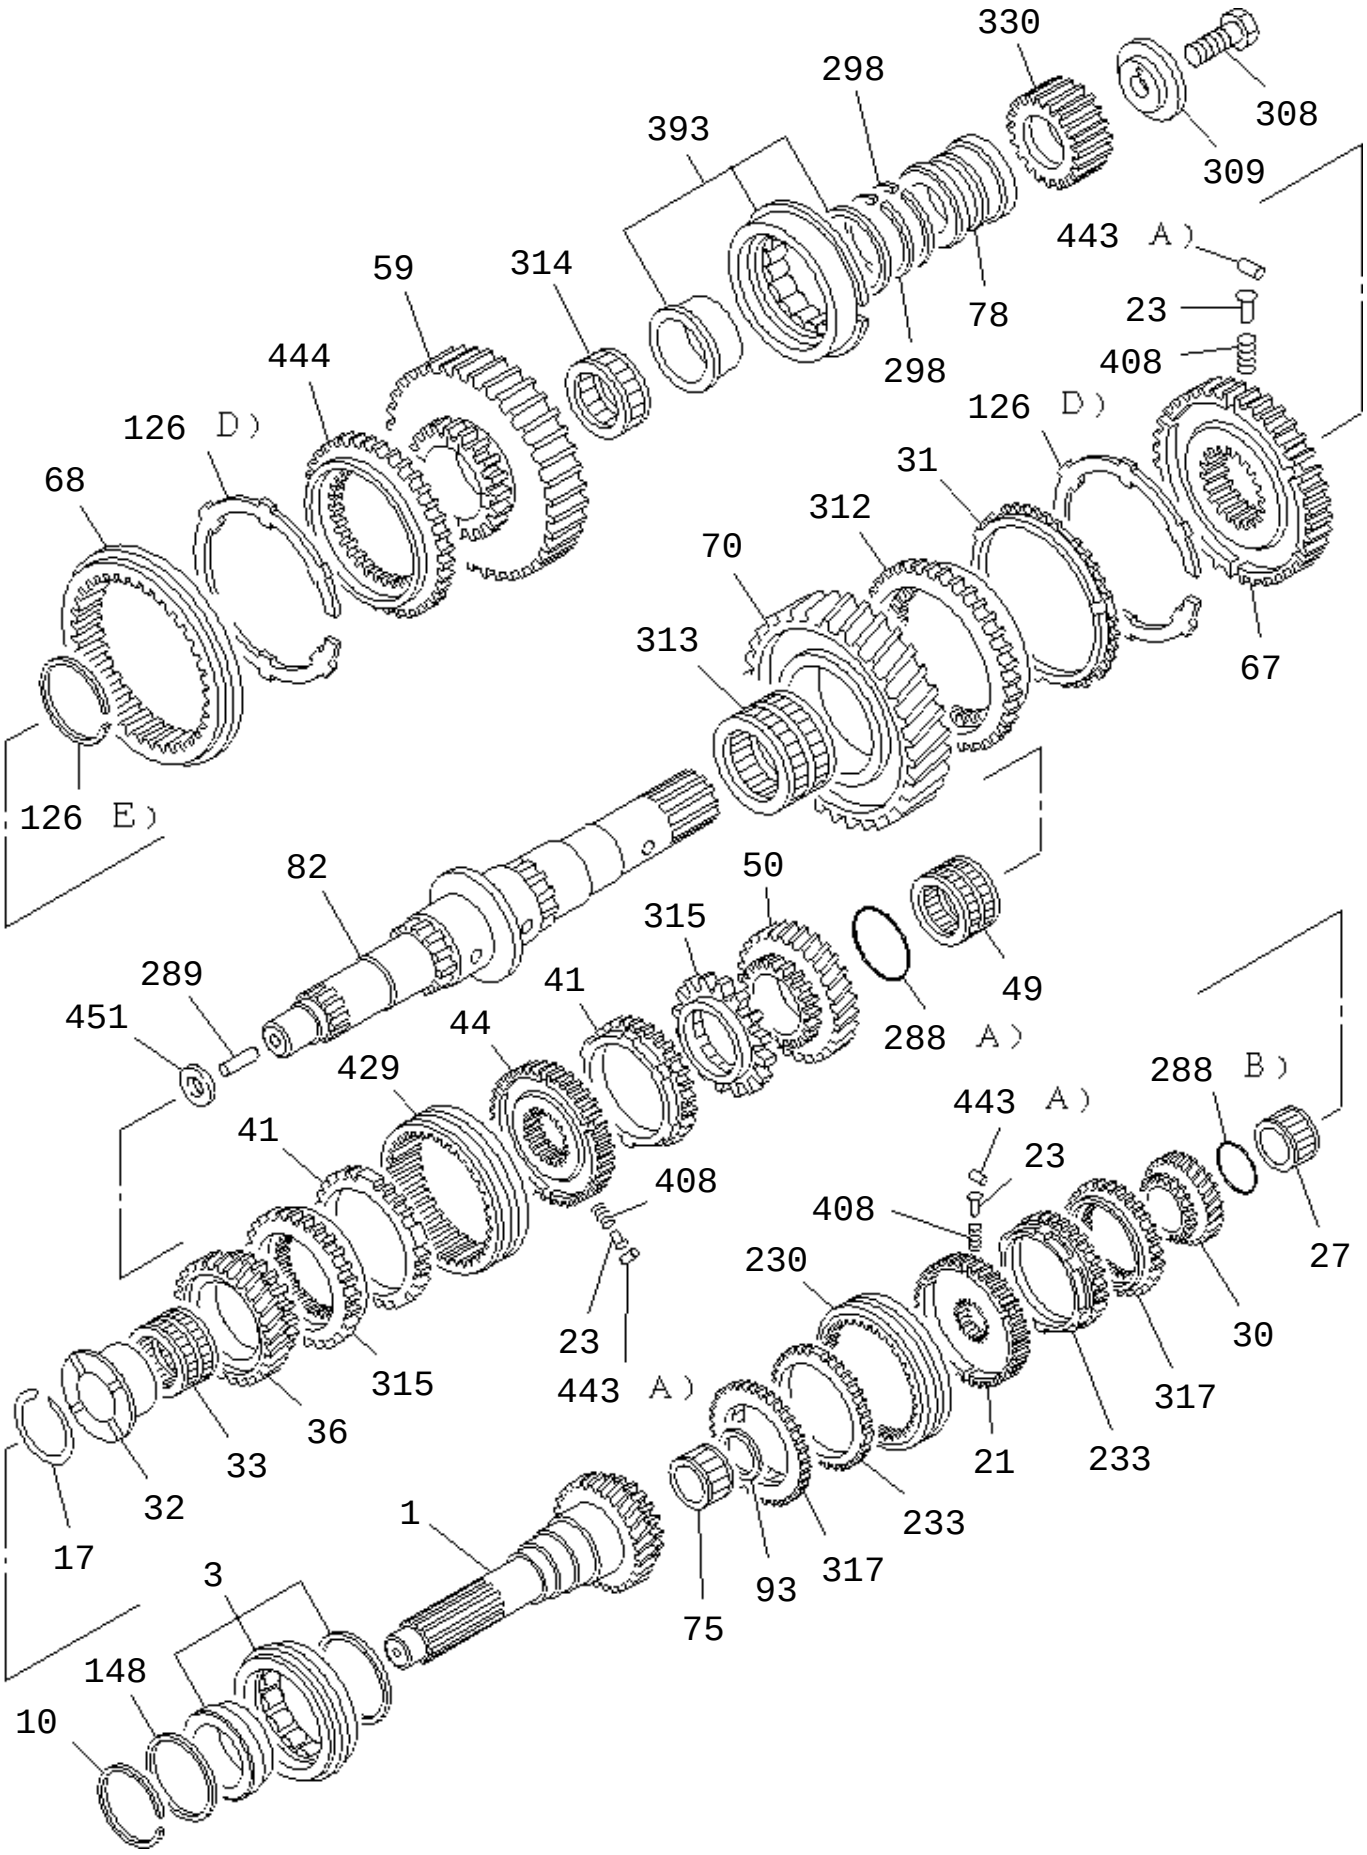


https://truckmanualshub.com/

COUNTER SHAFT AND REVERSE IDLER GEAR

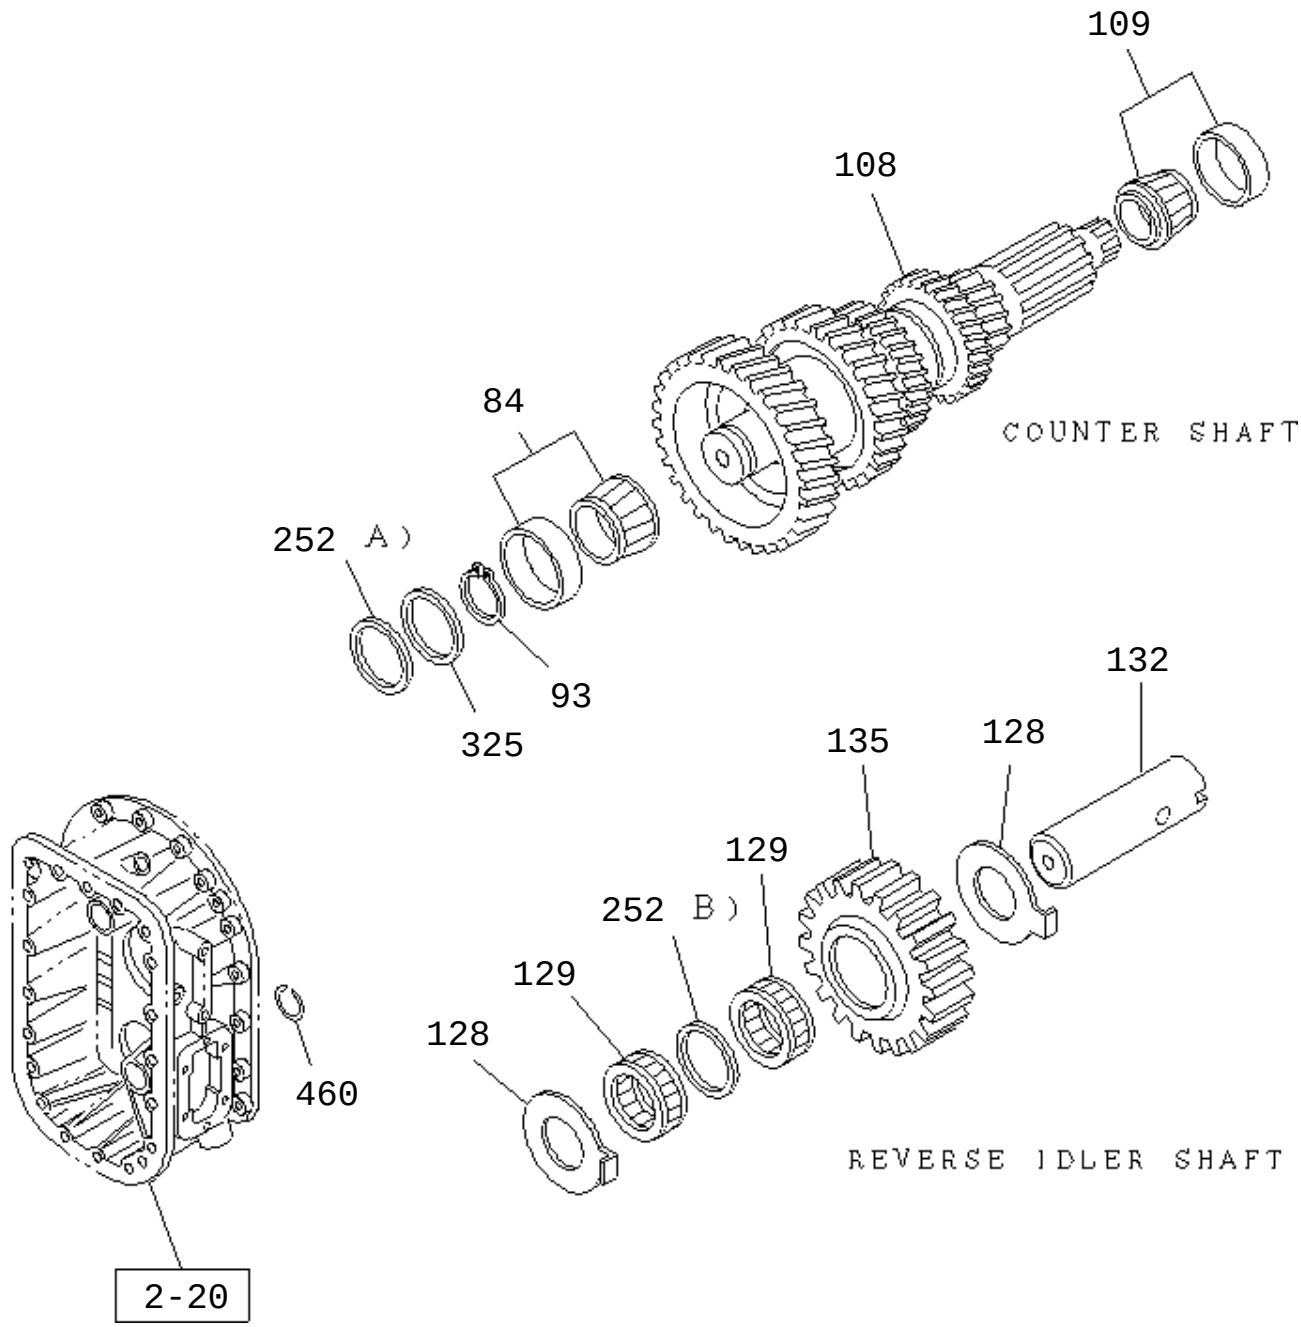

https://truckmanualshub.com/

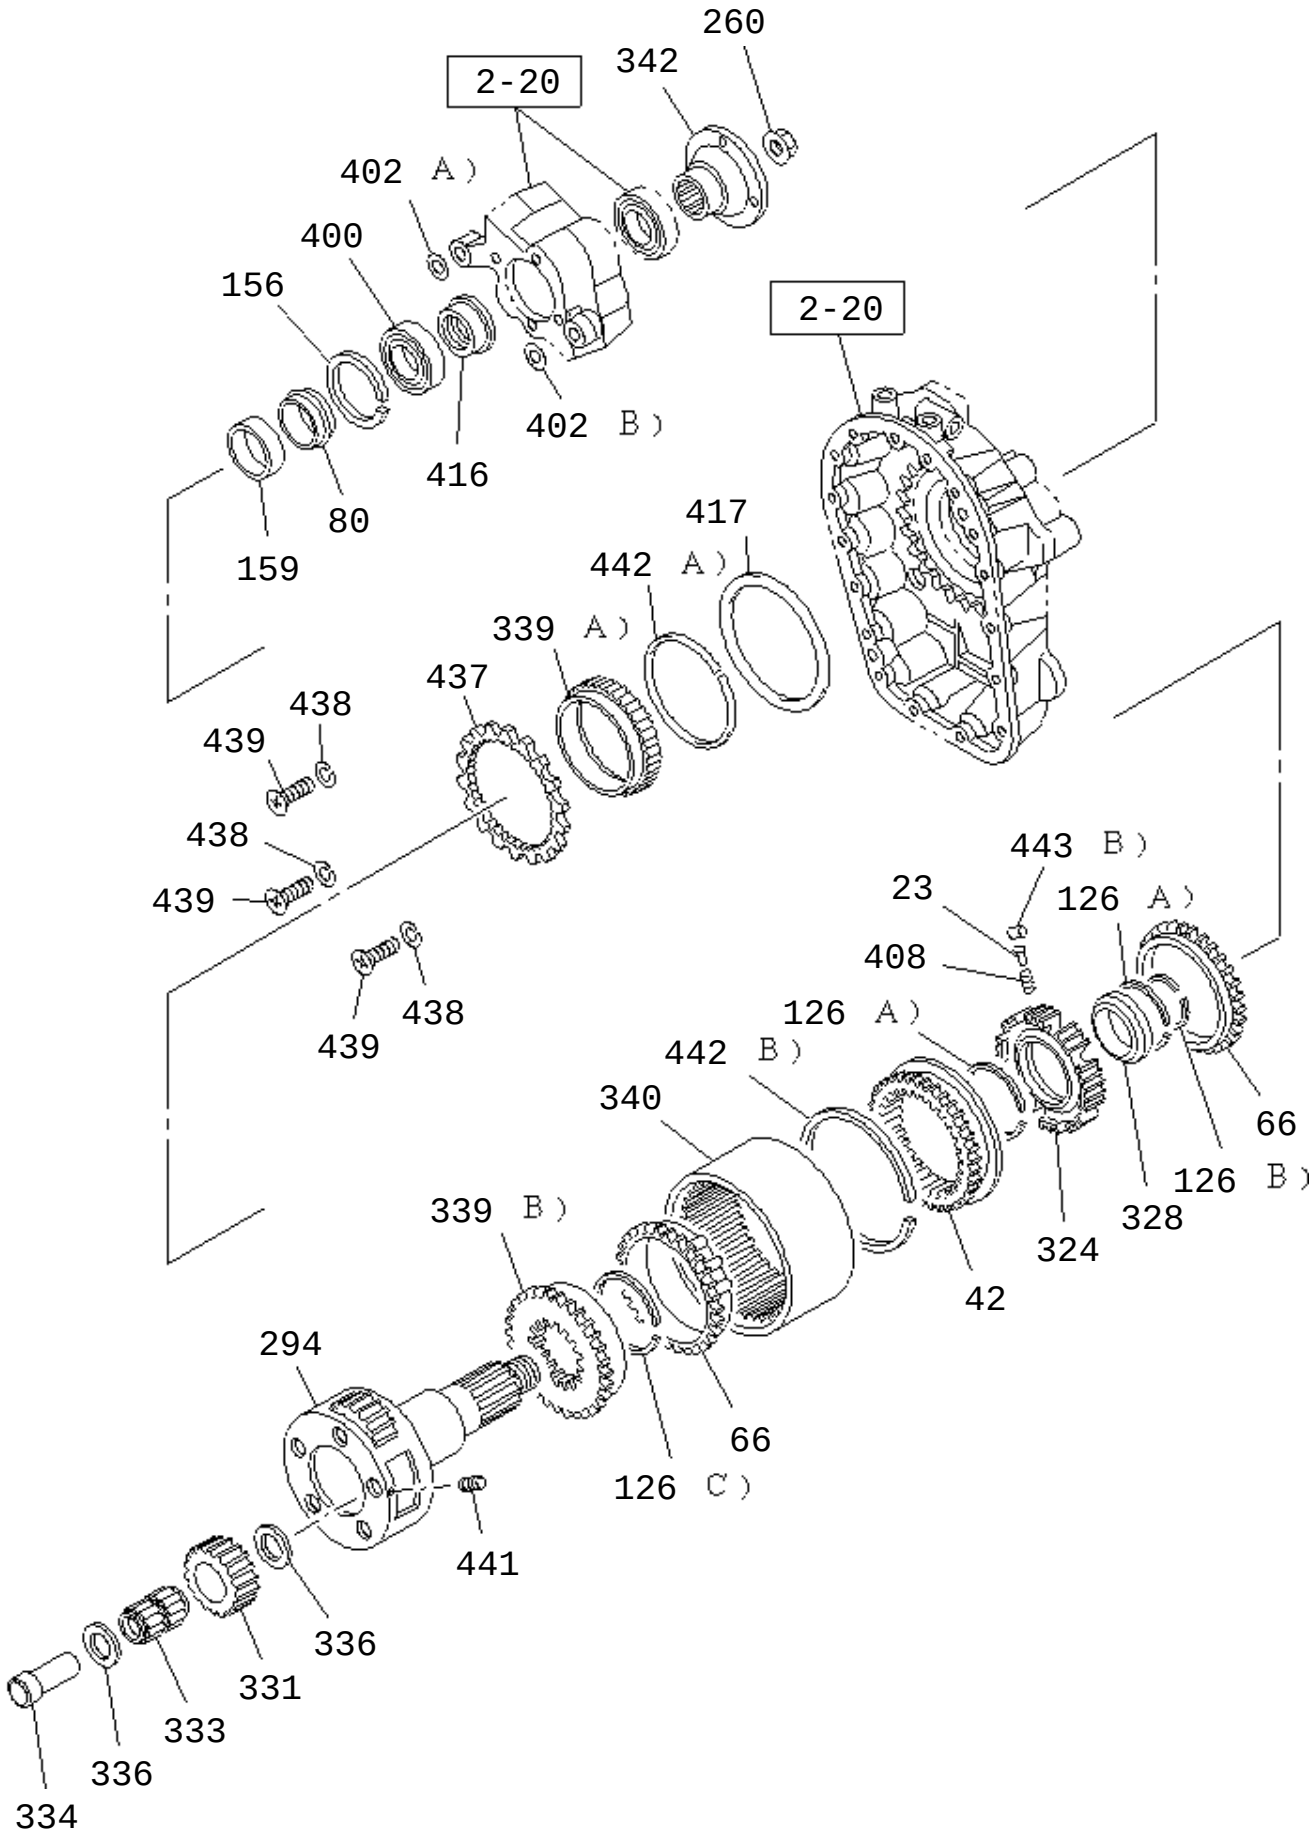

https://truckmanualshub.com/

2-26B MANUAL TRANSMISSION GEAR -B FULLER M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
1		SHAFT; TOP GEAR,TRANS					
		1-33215-039-0		1312-	01	A	
3		BEARING; TOP GEAR SHAFT					
		1-33219-186-0		1312-	01	A	
10		RING; SNAP,PILOT BRG					
		1-33219-268-0		1312-	01	A	
17		RING; SNAP,4TH GEAR					
		1-33269-111-0		1312-	01	A	T=2.15
		1-33269-112-0		1312-	01	A	T=2.20
		1-33269-064-0		1312-	01	A	T=2.00
		1-33269-100-0		1312-	01	A	T=2.10
		1-33269-101-0		1312-	01	A	T=2.05
21		HUB; CLU,4TH & 5TH					
		1-33261-236-0		1312-	01	A	
23		PLUNGER; DETENT,SYN					
		1-33265-600-0		1312-	18	A	
27		BEARING; 4TH GEAR					
		1-33259-079-0		1312-	01	A	
30		GEAR; 4TH,MAINSHAFT					
		1-33252-485-0		1312-	01	A	
31		RING; BLOCK,3RD & 4TH					
		1-33265-599-0		1312-	01	A	
32		COLLAR; 3RD GEAR					
		1-33259-123-0		1312-	01	A	
33		BEARING; NEEDLE,3RD GEAR					
		1-33259-078-0		1312-	01	A	
36		GEAR; 3RD,MAINSHAFT					
		1-33252-458-0		1312-	01	A	
41		RING; BLOCK,2ND & 3RD					
		1-33265-643-0		1312-	02	A	
42		SLEEVE					
		1-33262-246-0		1312-	01	A	
44		HUB; CLU,2ND & 3RD,MAIN					
		1-33261-235-0		1312-	01	A	
49		BEARING; NEEDLE,2ND GEAR					
		1-33259-078-0		1312-	01	A	
50		GEAR; 2ND,MAINSHAFT					
		1-33259-137-0		1312-	01	A	
59		GEAR; REV MAINSHAFT					
		1-33257-078-0		1312-	01	A	
66		RING; BLOCK,SYN					
		1-33265-557-0		1312-	02	A	
67		HUB; CLU,1ST TO REV					
		1-33261-237-0		1312-	01	A	
68		SLEEVE; 1ST TO REV					
		1-33265-645-0		1312-	01	A	
70		GEAR; 1ST,MAINSHAFT					
		1-33251-376-0		1312-	01	A	
75		BEARING; MAINSHAFT					
		1-33239-241-0		1312-	01	A	
78		COLLAR; DIST,MAINSHAFT BRG					
		1-33239-373-0		1312-	01	A	
80		GEAR; SPD DRIVE					
		1-33371-068-0		1312-	01	A	
82		SHAFT; MAIN,TRANS					
		1-33231-346-0		1312-	01	A	
84		BEARING; COUNTER SHAFT,FRT					
		1-33319-262-0		1312-	01	A	
93		RING; SNAP,COUNTER FRT BRG					
		1-33239-238-0		1312-	02	A	T=2.12
		1-33239-239-0		1312-	02	A	T=2.07
		1-33239-240-0		1312-	02	A	T=2.02
		1-33319-146-0		1312-	01	A	T=1.97
		1-33319-147-0		1312-	01	A	T=1.92

https://truckmanualshub.com/

KEY	R/C	PART NAME / PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS
							A FULLER ES11109 DD M/T(Y5N)
93		1-33319-148-0		1312-	01	A	T=1.87
		1-33319-149-0		1312-	01	A	T=1.82
		1-33319-150-0		1312-	01	A	T=1.77
108		SHAFT; COUNTER					
		1-33311-354-0		1312-	01	A	
109		BEARING; COUNTER SHAFT,RR					
		1-33319-262-0		1312-	01	A	
126		RING; SNAP,CLU HUB					
		1-33269-058-0		1312-	01	A	(A)
		1-33269-061-0		1312-	01	A	(B)
		1-33269-062-0		1312-	01	A	(C)
		1-33269-065-0		1312-	01	A	(D)
		1-33269-066-0		1312-	01	A	(E) T=2.10
		1-33269-067-0		1312-	01	A	(E) T=2.05
		1-33269-068-0		1312-	01	A	(E) T=2.00
128		WASHER; THRUST,REV SHAFT					
		1-33359-016-0		1312-	02	A	
129		BEARING; NEEDLE,IDLER					
		1-33359-005-0		1312-	02	A	
132		SHAFT; REV					
		1-33351-044-0		1312-	01	A	
135		GEAR; REV IDLER					
		1-33361-097-0		1312-	01	A	
148		SPACER; PILOT BRG,MAINSHAFT,RR					
		1-33219-298-0		1312-	01	A	T=3.10
		1-33219-299-0		1312-	01	A	T=3.15
		1-33219-300-0		1312-	01	A	T=3.20
		1-33219-301-0		1312-	01	A	T=3.25
		1-33219-302-0		1312-	01	A	T=3.30
		1-33219-303-0		1312-	01	A	T=3.35
		1-33219-304-0		1312-	01	A	T=3.40
		1-33219-305-0		1312-	01	A	T=3.45
		1-33219-306-0		1312-	01	A	T=3.50
156		RING; SNAP,OUTPUT SHAFT BRG					
		1-37249-193-0		1312-	01	A	T=3.70
		1-37249-194-0		1312-	01	A	T=3.77
		1-37249-195-0		1312-	01	A	T=3.83
		1-37249-196-0		1312-	01	A	T=3.89
		1-37249-197-0		1312-	01	A	T=3.95
159		SPACER; SPD DRIVE GEAR					
		1-33159-054-0		1312-	01	A	
230		SLEEVE; 4TH TO 5TH					
		1-33262-245-0		1312-	01	A	
233		RING; BLOCK 4TH TO 5TH					
		1-33265-643-0		1312-	02	A	
252		SPACER					
		1-33319-223-0		1312-	01	A	(A)

https://truckmanualshub.com/

2-26B MANUAL TRANSMISSION GEAR -B FULLER M/T


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
252		1-33359-017-0		1312-	01	A	(B)
260		NUT; MAINSHAFT END					
		1-33119-612-0		1312-	01	A	
288		SPACER; BRG,MAINSHAFT					
		1-33259-068-0		1312-	01	A	(A)
		1-33259-072-0		1312-	01	A	(B)
289		PIN; MAINSHAFT					
		1-33239-242-0		1312-	01	A	
294		SHAFT; OUTPUT					
		1-33231-345-0		1312-	01	A	
298		GASKET; MAINSHAFT					
		1-33239-245-0		1312-	02	A	
308		BOLT; MAINSHAFT					
		1-33239-366-0		1312-	01	A	
309		PLATE; MAINSHAFT					
		1-33239-317-0		1312-	01	A	
312		CLUTCH; DOG,1ST GEAR					
		1-33265-596-0		1312-	01	A	
313		BEARING; NEEDLE,LOW GEAR					
		1-33259-078-0		1312-	01	A	
314		BEARING; NEEDLE,REV GEAR					
		1-33259-073-0		1312-	01	A	
315		CLUTCH; DOG,2ND GEAR					
		1-33265-644-0		1312-	02	A	
317		CLUTCH; DOG,4TH GEAR					
		1-33265-644-0		1312-	02	A	
324		HUB; CLU					
		1-33261-234-0		1312-	01	A	
325		SHIM; COUNTER SHAFT BRG					
		1-33319-152-0		1312-	01	A	T=0.051
		1-33319-153-0		1312-	01	A	T=0.127
		1-33319-154-0		1312-	01	A	T=0.254
		1-33319-155-0		1312-	01	A	T=0.510
328		BEARING; CARRIER					
		1-33269-060-0		1312-	01	A	
330		GEAR; SUN					
		1-34311-011-0		1312-	01	A	
331		GEAR SET; PLANETARY					
		1-33239-375-0		1312-	05	A	
333		ROLLER; PLANETARY GEAR					
		1-33239-250-0		1312-	05	A	
334		SHAFT; PLANETARY GEAR					
		1-33239-374-0		1312-	05	A	
336		WASHER; THRUST,PLANETARY GEAR					
		1-33239-276-0		1312-	10	A	
339		CLUTCH; PLANETARY GEAR					
		1-33265-558-0		1312-	01	A	(A)
		1-33265-559-0		1312-	01	A	(B)
340		GEAR; RING					
		1-33339-052-0		1312-	01	A	
342		FLANGE; OUTPUT					
		1-37243-325-0		1312-	01	A	
393		BEARING; MAINSHAFT END					
		1-33239-316-0		1312-	01	A	
400		BEARING; OUTPUT SHAFT RR					
		1-33139-075-0		1312-	01	A	
402		SHIM					
		1-33159-050-0		1312-	01	A	(A) T=0.005"
		1-33159-051-0		1312-	01	A	(B) T=0.10"
408		SPRING					
		1-33264-039-0		1312-	18	A	

https://truckmanualshub.com/

2-26B MANUAL TRANSMISSION GEAR -B FULLER M/T


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
416		BUSHING; OUTPUT SHAFT					
		1-37249-168-0		1312-	01	A	
417		SPACER; OUTPUT SHAFT					
		1-33269-053-0		1312-	01	A	
429		SLEEVE; 2ND & 3RD					
		1-33262-245-0		1312-	01	A	
437		PLATE; LOCK					
		1-33269-054-0		1312-	01	A	
438		WASHER; LOCK PLATE					
		1-33269-056-0		1312-	03	A	
439		SCREW; LOCK PLATE					
		1-33269-098-0		1312-	03	A	
441		SCREW; STOPPER,PIN					
		1-33239-251-0		1312-	05	A	
442		RING; SNAP,CARRIER					
		1-33269-055-0		1312-	01	A	(A)
		1-33339-053-0		1312-	01	A	(B)
443		ROLLER; SYNCHRONIZER					
		1-33269-059-0		1312-	09	A	(B)
		1-33269-063-0		1312-	09	A	(A)
444		CLUTCH; DOG,REV GEAR					
		1-33265-462-0		1312-	01	A	
451		RESTRICTOR; MAIN SHAFT					
		1-33239-275-0		1312-	01	A	
460		RING; SNAP,REV SHAFT					
		1-33219-297-0		1312-	01	A	
2-20		Move to 2-20					
		Move to 2-20					

https://truckmanualshub.com/

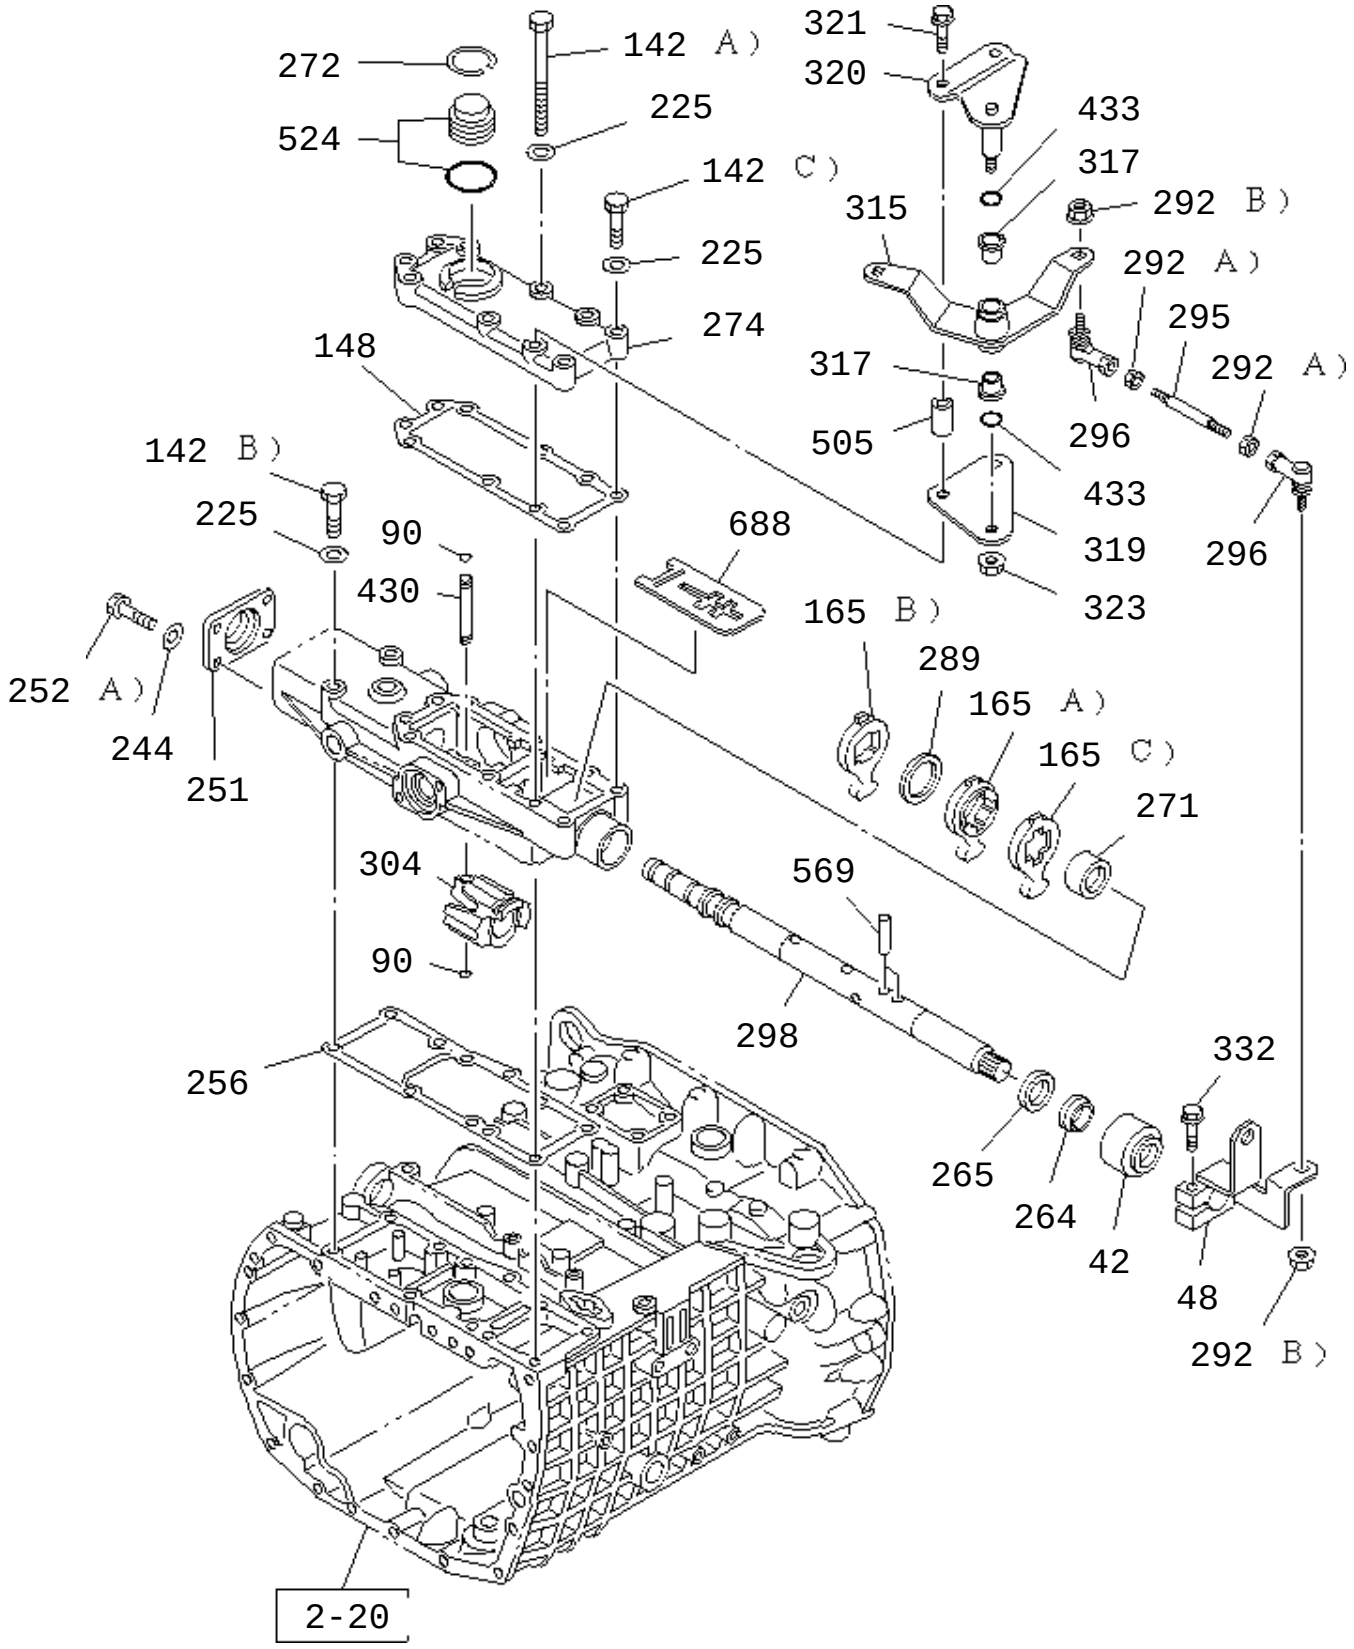


https://truckmanualshub.com/

COMPONENT;QUADRANT BOX

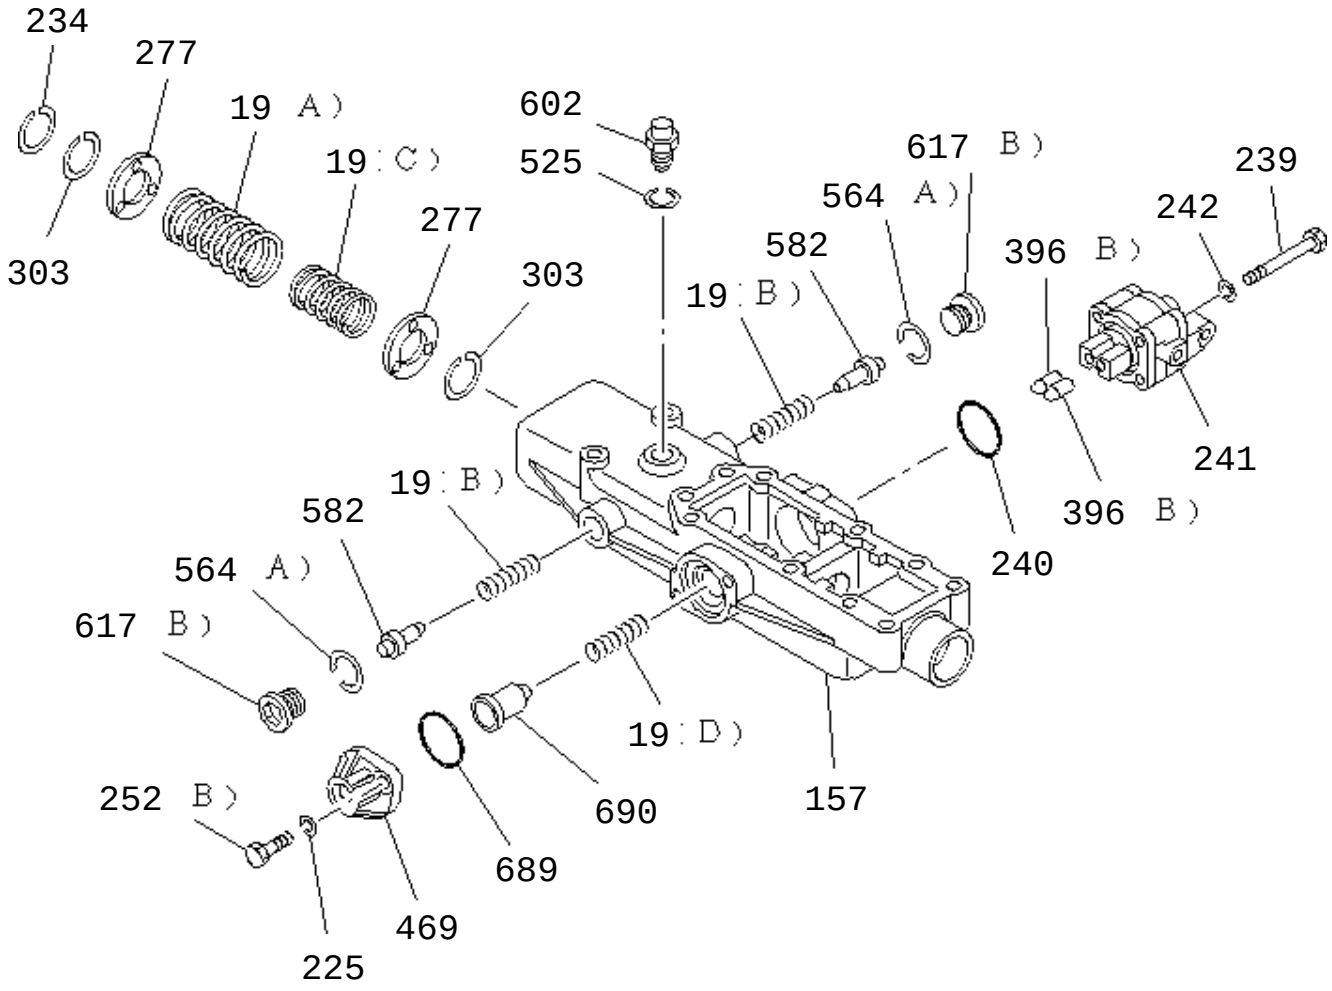


https://truckmanualshub.com/

SHIFT ARM AND ROD

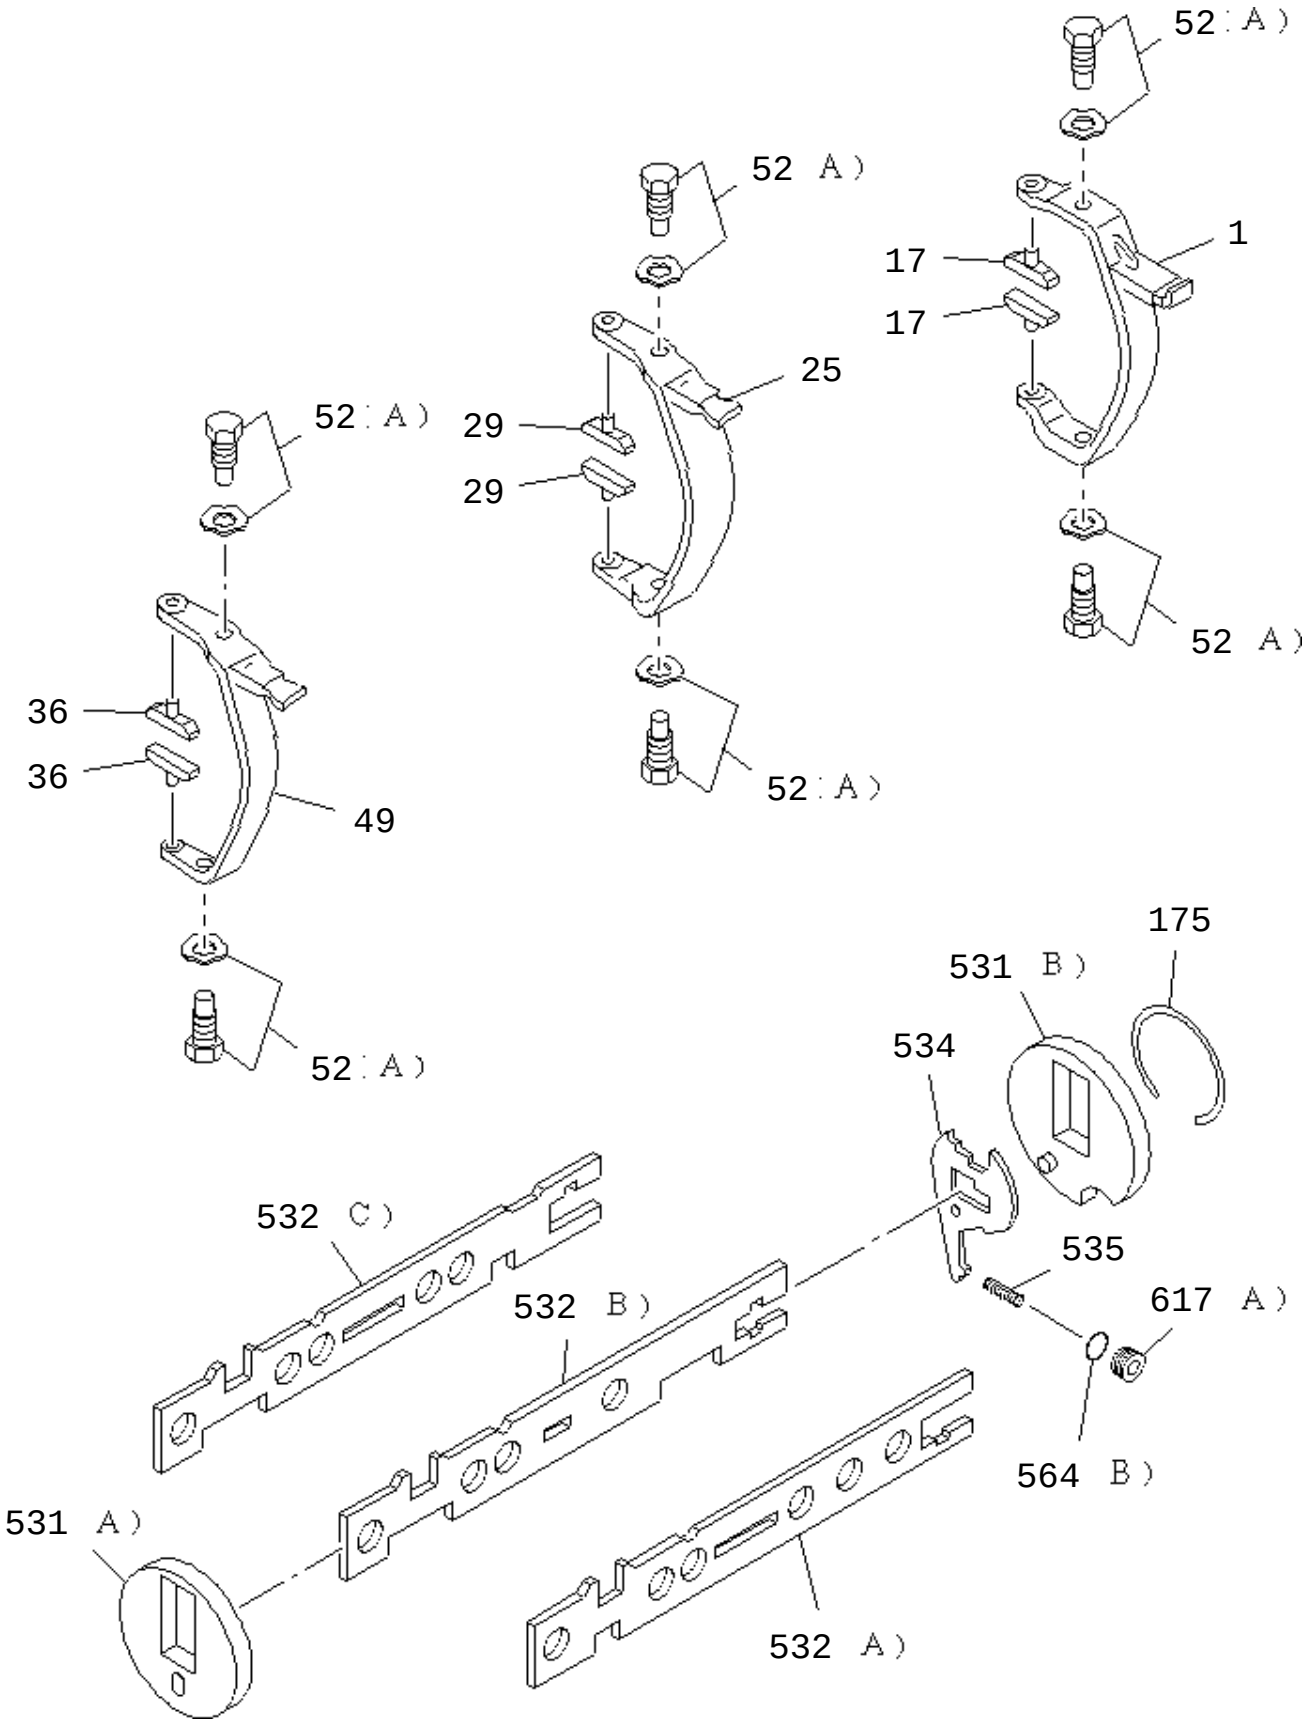


https://truckmanualshub.com/

AIR SHIFT CYLINDER

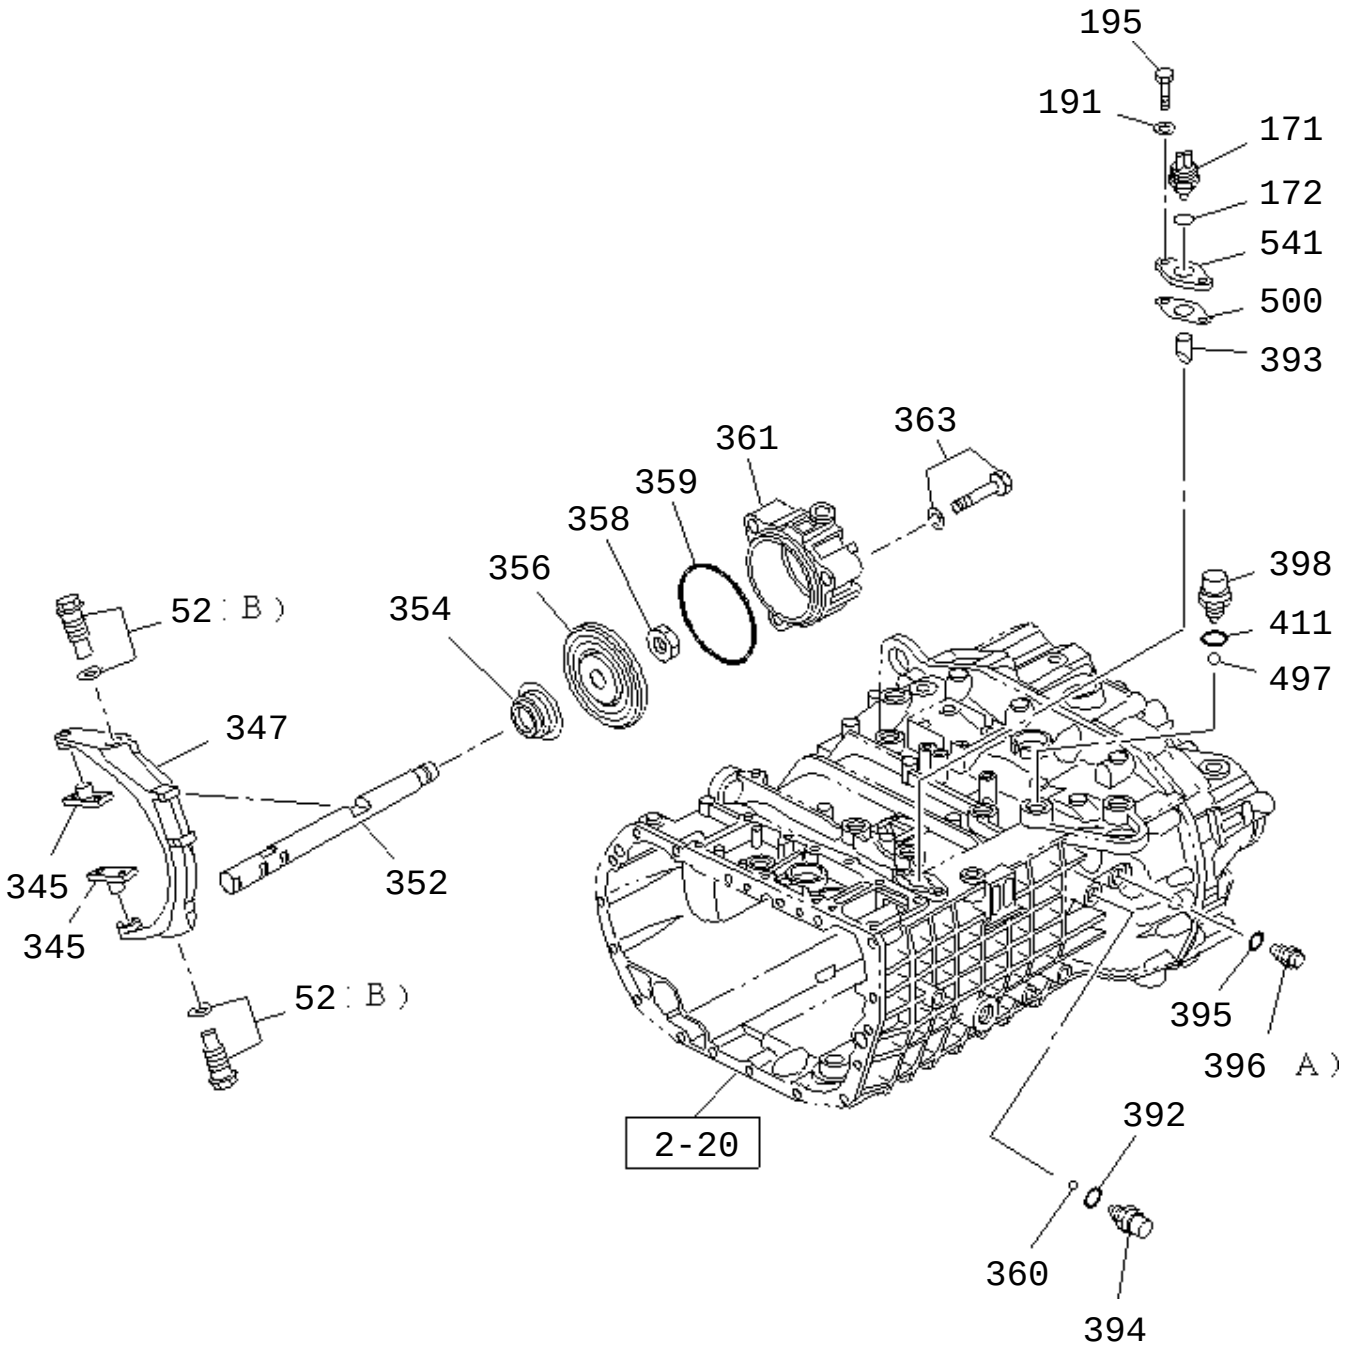


https://truckmanualshub.com/

AIR HOSE

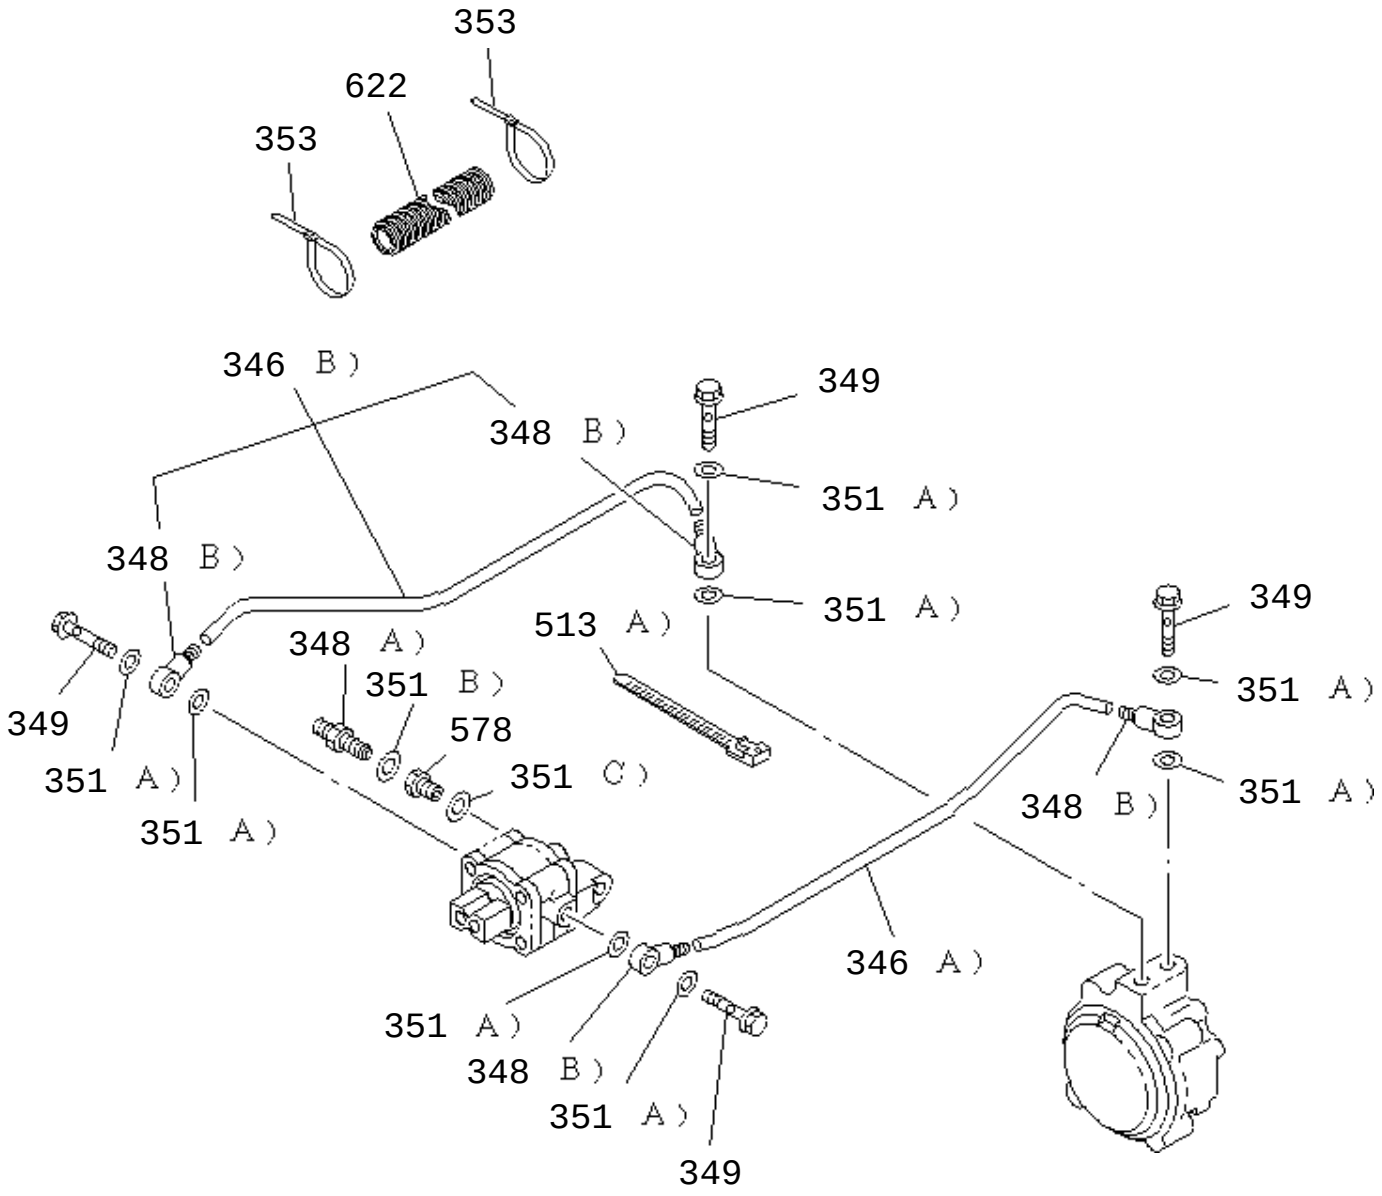

https://truckmanualshub.com/

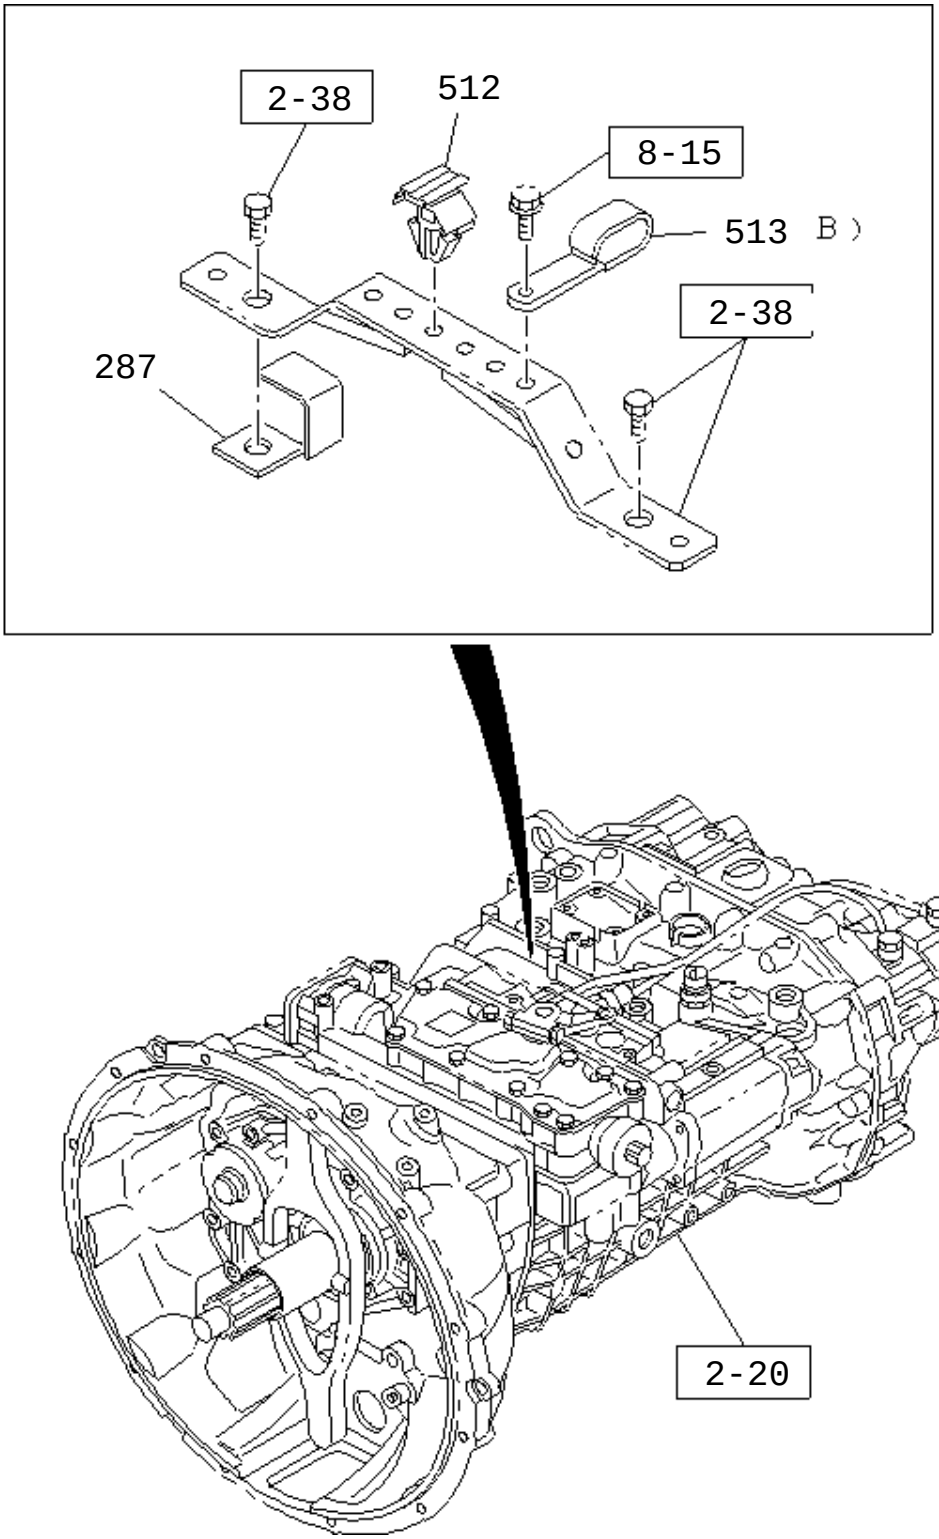

https://truckmanualshub.com/

2-30A GEAR SHIFTER AND QUADRANT BOX -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
1		ARM; SHIFT,1ST & REV					
		1-33511-657-0		1312-	01	A	
17		BLOCK; SHIFT,1ST & REV					
		1-33519-172-0		1312-	02	A	
19		SPRING; COIL COMP					
		1-33539-027-0		1312-	01	A	
							(A)
		1-33539-030-0		1312-	02	A	
							(B)
		1-33539-104-0		1312-	01	A	
							(C)
		1-33549-221-0		1312-	01	A	
							(D)
25		ARM; SHIFT,2ND & 3RD					
		1-33511-642-0		1312-	01	A	
29		BLOCK; SHIFT,2ND & 3RD					
		1-33519-081-0		1312-	02	A	
36		BLOCK; SHIFT,4TH & 5TH					
		1-33519-081-0		1312-	02	A	
42		CAP; QUAD BOX					
		1-33549-589-0		1312-	01	A	
48		LEVER; 4TH,SHIFT					
		8-98085-725-0		1312-	01	A	
49		ARM; SHIFT,4TH & 5TH					
		1-33511-664-0		1312-	01	A	
52		BOLT; SHIFT ARM					
		1-33519-190-0		1312-	06	A	
							(A)
		1-33519-196-0		1312-	02	A	
							(B)
90		RING; SNAP,SHIFT ROD					
		1-33549-494-0		1312-	02	A	
142		BOLT; QUAD BOX					
		1-33549-582-0		1312-	06	A	
							(A) M8X100
		1-33549-584-0		1312-	02	A	
							(B) M8X75
		1-33549-587-0		1312-	04	A	
							(C) M8X40
148		GASKET; QUAD BOX					
		1-33542-064-0		1312-	01	A	
157		BOX; QUAD,TRANS					
		1-33549-570-0		1312-	01	A	
165		LEVER; SHIFT					
		1-33549-488-0		1312-	01	A	
							(C)
		1-33549-489-0		1312-	01	A	
							(A)
		1-33549-603-0		1312-	01	A	
							(B)
171		SWITCH; NEUTRAL					
		1-33119-627-0		1312-	01	A	
172		GASKET; NEUTRAL SW					
		1-33119-249-0		1312-	01	A	
175		RING; STOPPER,SHIFT LEVER					
		1-33539-103-0		1312-	01	A	
191		WASHER; LK					
		1-33549-583-0		1312-	02	A	
195		BOLT					
		1-33119-593-0		1312-	02	A	
225		WASHER; LK,QUAD BOX					
		1-33549-583-0		1312-	14	A	
234		RING; SNAP					
		1-44519-224-0		1312-	01	A	
239		BOLT; CUT OFF VALVE					
		1-33549-585-0		1312-	04	A	
240		GASKET; CUT OFF VALVE					
		1-33549-198-0		1312-	01	A	
241		VALVE; CUT OFF					
		1-33549-495-0		1312-	01	A	
242		WASHER; CUT OFF VALVE					
		1-33549-583-0		1312-	04	A	

https://truckmanualshub.com/

2-30A GEAR SHIFTER AND QUADRANT BOX -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
244		WASHER; LK,COVER					
		1-33549-583-0		1312-	04	A	
251		COVER; SIDE					
		1-33549-590-0		1312-	01	A	
252		BOLT; SIDE COVER					
		1-33549-581-0		1312-	02	A	(B) M8X30
		1-33549-591-0		1312-	04	A	(A) M8X20
256		GASKET; QUAD BOX TO TRANS CASE					
		1-33542-065-0		1312-	01	A	
264		SEAL; DUST,SHAFT					
		1-33549-119-0		1312-	01	A	
265		SEAL; OIL,SHIFT					
		1-33549-118-0		1312-	01	A	
271		BUSHING; QUAD BOX					
		1-33549-124-0		1312-	01	A	
272		RING; SNAP,QUAD BOX					
		1-44519-217-0		1312-	01	A	
274		COVER; SHAFT,QUAD BOX					
		1-33549-579-0		1312-	01	A	
277		PLATE; SPRING SEAT					
		1-33539-107-0		1312-	02	A	
287		COVER; AIR BREATHER					
		1-34141-026-0		1312-	01	A	
289		SEAL; OIL,CONT SHAFT,QUAD BOX					
		1-33549-491-0		1312-	01	A	
292		NUT; LINK ROD					
		0-91111-508-0		1312-	02	A	(A) M8
		1-09440-062-1		1312-	02	A	(B) M8 FLANGE
295		ROD; LINK,RELAY LEVER					
		9-08400-805-0		1312-	01	A	M8 L=50
296		ROD END					
		1-09760-108-0		1312-	02	A	
298		SHAFT; SHIFT LEVER					
		1-33522-205-0		1312-	01	A	
303		RING; SNAP,SHAFT					
		1-33539-040-0		1312-	02	A	
304		BLOCK; SHIFT SHAFT					
		1-33549-492-0		1312-	01	A	
315		LEVER; SELECT					
		8-98085-738-0		1312-	01	A	
317		BUSHING; LEVER					
		1-09330-119-0		1312-	02	A	
319		BRACKET; SELECT LEVER					
		8-98085-740-0		1312-	01	A	
320		SHAFT; LEVER					
		8-98085-739-0		1312-	01	A	
321		BOLT; BRKT,RELAY LEVER					
		0-28065-813-0		1312-	02	A	M8X130 FLANGE
323		NUT; LK,SELECT LEVER					
		0-91180-110-0		1312-	01	A	M10 FLANGE
332		BOLT; 4TH,SHIFT LEVER					
		0-28650-840-0		1312-	01	A	M8X40 FLANGE
345		BLOCK; SHIFT,RANGE CHANGE					
		1-33519-095-0		1312-	02	A	
346		HOSE; AIR					
		1-33549-598-0		1312-	01	A	(B)
		1-33549-618-0		1312-	01	A	(A)
347		ARM; SHIFT,RANGE CHANGE					
		1-33511-529-0		1312-	01	A	
348		CONNECTOR; AIR HOSE					

https://truckmanualshub.com/

2-30A GEAR SHIFTER AND QUADRANT BOX -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
348		1-09654-246-0		1312-	01	A	(A) M12 STRAIGHT
		1-33549-593-0		1312-	04	A	(B)
349		BOLT; EYE,AIR HOSE					
		1-33549-592-0		1312-	04	A	M14
351		GASKET; CONNECTOR					
		1-09630-084-0		1312-1312	01	A	(B) ID=12.2
		8-98251-344-0		1401-	01	A	(B) ID=12.2
		1-33549-554-0		1312-	01	A	(C)
		1-33549-578-0		1312-	08	A	(A)
352		ROD; SHIFT,RANGE CHANGE					
		1-33531-497-0		1312-	01	A	
353		CLIP; AIR HOSE					
		1-33549-475-0		1312-	02	A	
354		SEAL; AIR CYL					
		1-33519-045-0		1312-	01	A	
356		PISTON; AIR CYL					
		1-33519-197-0		1312-	01	A	
358		NUT; SHIFT ROD					
		1-33519-188-0		1312-	01	A	
359		GASKET; AIR CYL					
		1-33519-093-0		1312-	01	A	
360		BALL; AIR CYL					
		1-33119-252-0		1312-	01	A	
361		CYLINDER; AIR,SHIFT					
		1-33519-092-0		1312-	01	A	
363		BOLT; AIR CYL					
		1-33119-616-0		1312-	03	A	M10X70
392		GASKET; PLUG & SW					
		1-33119-249-0		1312-	01	A	
393		PIN; SW					
		1-33119-298-0		1312-	01	A	
394		SWITCH; RANGE CHANGE					
		1-33119-627-0		1312-	01	A	
395		GASKET; PLUNGER					
		1-33549-497-0		1312-	01	A	
396		PLUNGER; SHIFT ROD					
		1-33519-189-0		1312-	01	A	(A)
		1-33529-085-0		1312-	02	A	(B)
398		SWITCH; REV LAMP					
		1-38119-062-0		1312-	01	A	
411		GASKET; REV LAMP SW					
		1-33119-249-0		1312-	01	A	
430		PIN; SPR,SHIFT ROD					
		1-33549-493-0		1312-	01	A	
433		GASKET; BUSHING					
		1-09623-594-0		1312-	02	A	
469		COVER; SPRING,QUAD BOX					
		1-33549-216-0		1312-	01	A	
497		BALL; SWITCH					
		1-33119-252-0		1312-	01	A	
500		GASKET; SW					
		1-33119-299-0		1312-	01	A	
505		SPACER; BRKT					
		1-33659-186-1		1312-	02	A	L=24.5
512		CLIP; PIPE					
		1-09709-178-0		1312-	04	A	OD=9 H=6
513		CLIP; BAND					
		0-95325-586-0		1402-	01	A	MIXER CHASSIS<6NR> (B) ID=16X2 L=50


https://truckmanualshub.com/


2-30A GEAR SHIFTER AND QUADRANT BOX -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
513		1-09707-162-1		1402-	01	A	MIXER CHASSIS<6NR> (A) L=180
		5-09707-030-1		1402-	02	A	MIXER CHASSIS<6NR> (A) L=250 IDN
		5-09707-030-1		1312-	06	A	(A) L=250 IDN
		5-09707-031-1		1312-	01	A	(A) L=140 IDN
524		DETENT; QUAD BOX					
		1-33549-501-0		1312-	01	A	
525		RING; DETENT					
		1-33119-286-0		1312-	01	A	
531		PLATE; BEARING					
		1-33539-044-0		1312-	01	A	(A)
		1-33539-047-0		1312-	01	A	(B)
532		PLATE; SHIFT FORK					
		1-33531-492-0		1312-	01	A	(A)
		1-33531-493-0		1312-	01	A	(B)
		1-33531-494-0		1312-	01	A	(C)
534		LEVER; LOCK,SHIFT PLATE					
		1-33539-087-0		1312-	01	A	
535		SPRING; LEVER					
		1-33539-049-0		1312-	01	A	
541		PLATE; SWITCH					
		1-33119-300-0		1312-	01	A	
564		SEAL; RING					
		1-33119-249-0		1312-	02	A	(A)
		1-33549-578-0		1312-	01	A	(B)
569		PIN; QUADRANT BOX					
		1-33529-128-0		1312-	02	A	
578		CONNECTOR					
		1-33549-553-0		1312-	01	A	
582		BOLT; SPRING GUIDE					
		1-33549-487-0		1312-	02	A	
602		PLUNGER; DETENT					
		1-33119-618-0		1312-	01	A	
617		PLUG					
		1-33119-619-0		1312-	02	A	(B)
		1-33539-109-0		1312-	01	A	(A)
622		TUBE; CORRUGATE					
		1-83129-017-0		1312-	01	A	L=100 ID=22 L=350
688		SHIFT; INTERLOCK					
		1-33549-572-0		1312-	01	A	
689		GASKET; COVER					
		1-33542-063-0		1312-	01	A	
690		PIN; STOP					
		1-33549-496-0		1312-	01	A	
2-20		Move to 2-20					
		Move to 2-20					
2-38		Move to 2-38					
8-15		Move to 8-15					


https://truckmanualshub.com/


SHIFT ARM AND ROD

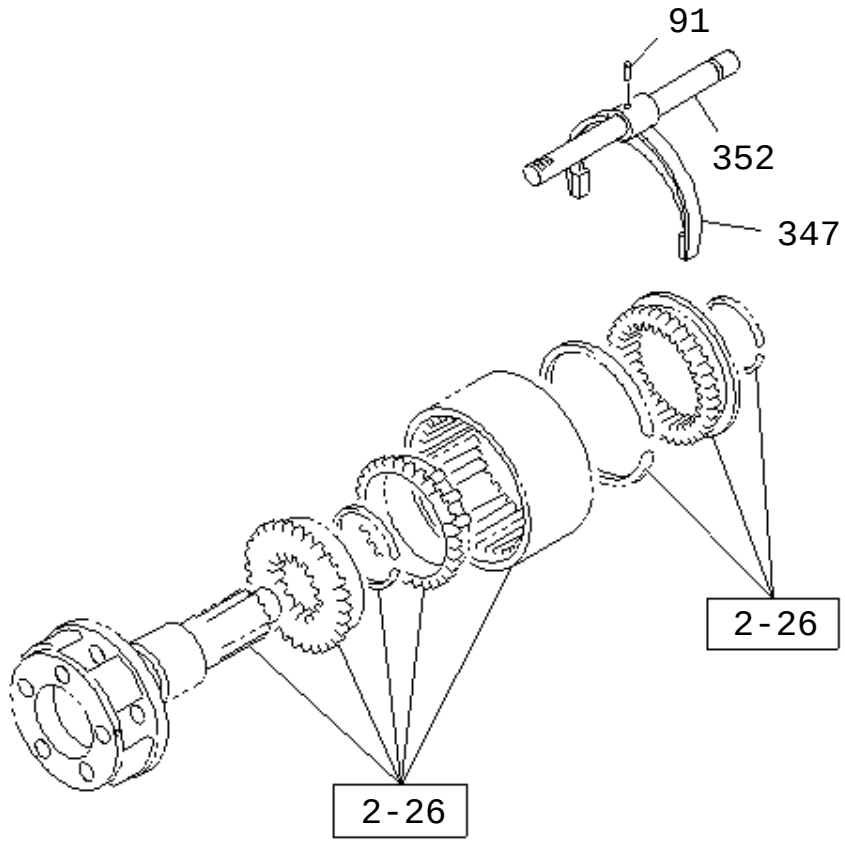

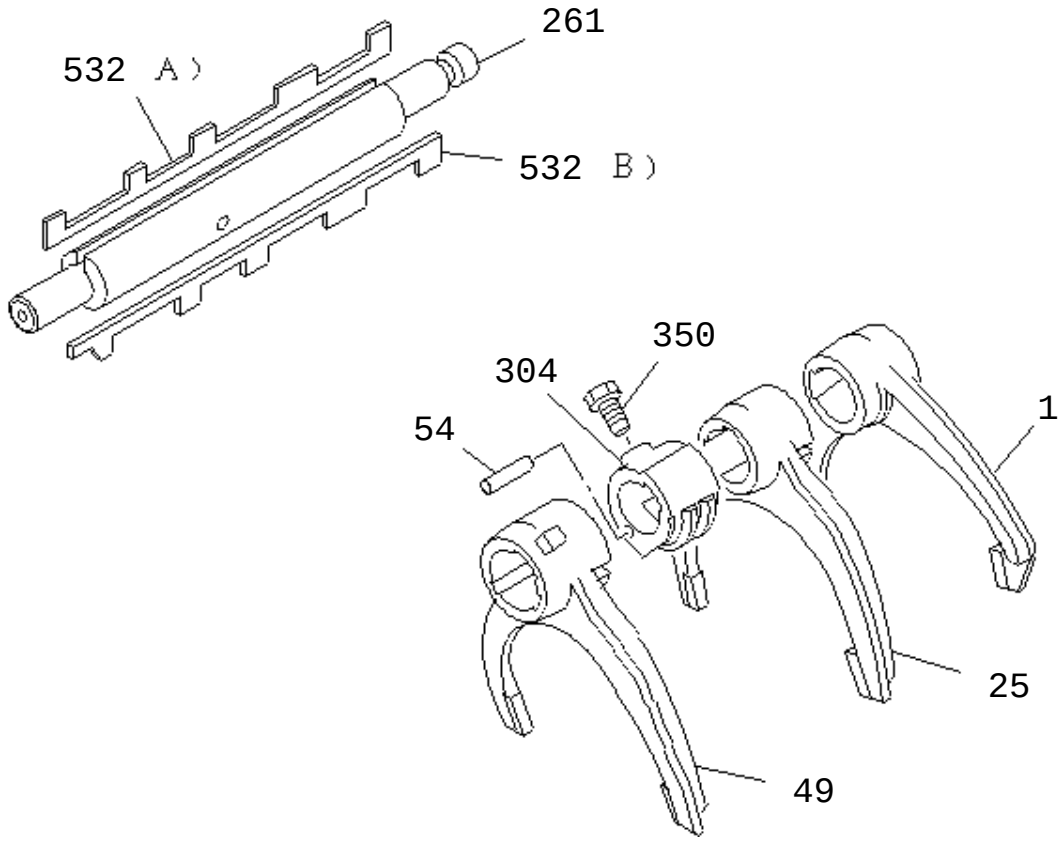


https://truckmanualshub.com/

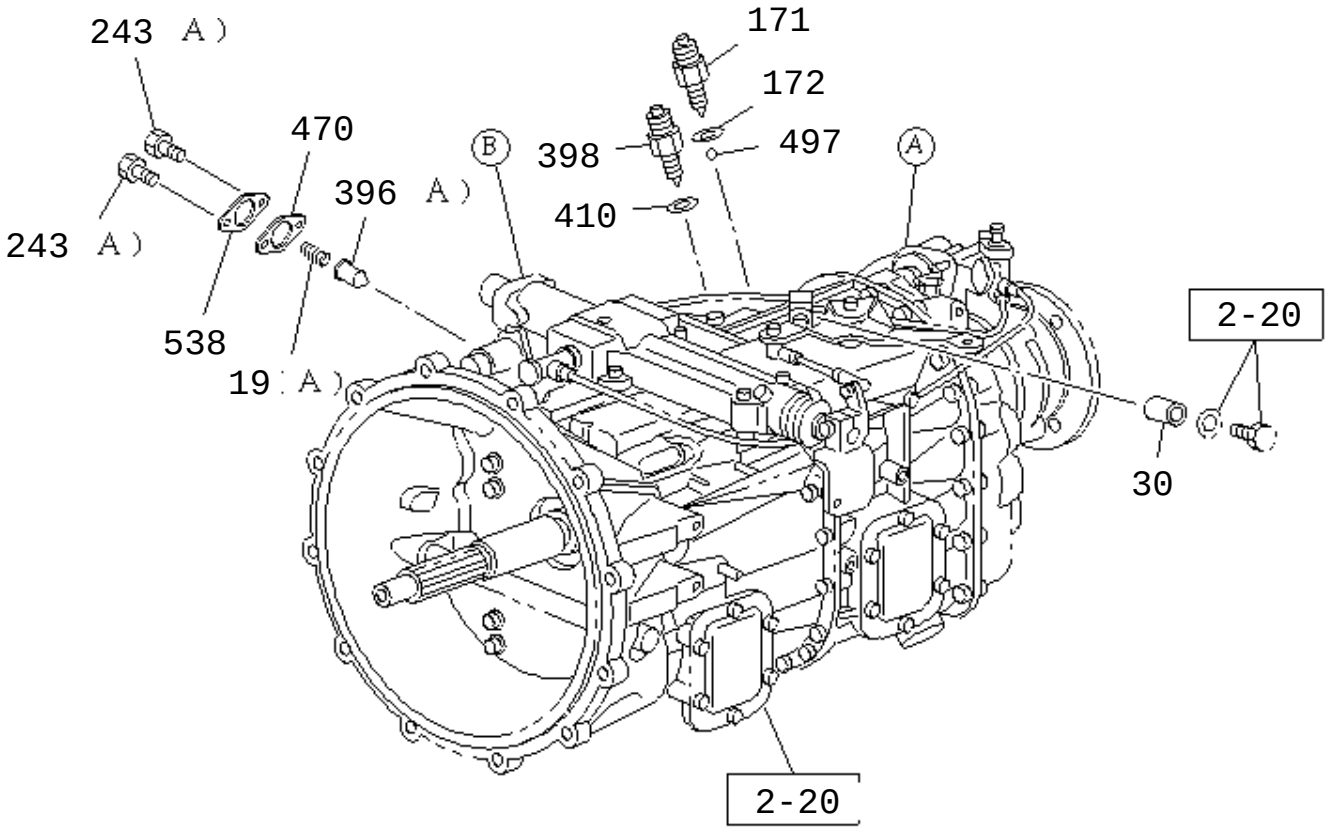

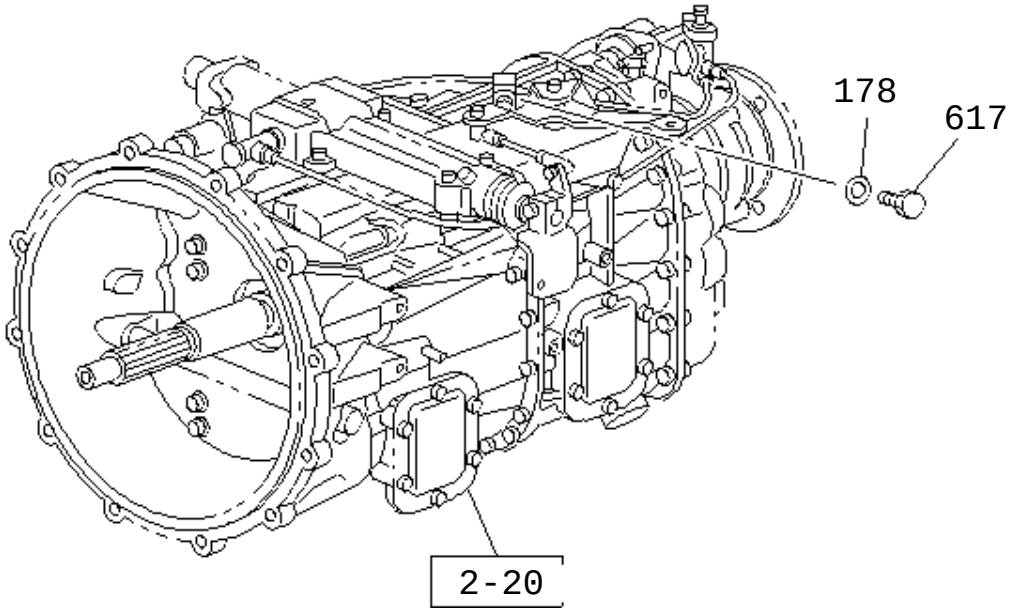


https://truckmanualshub.com/


QUADRANT BOX

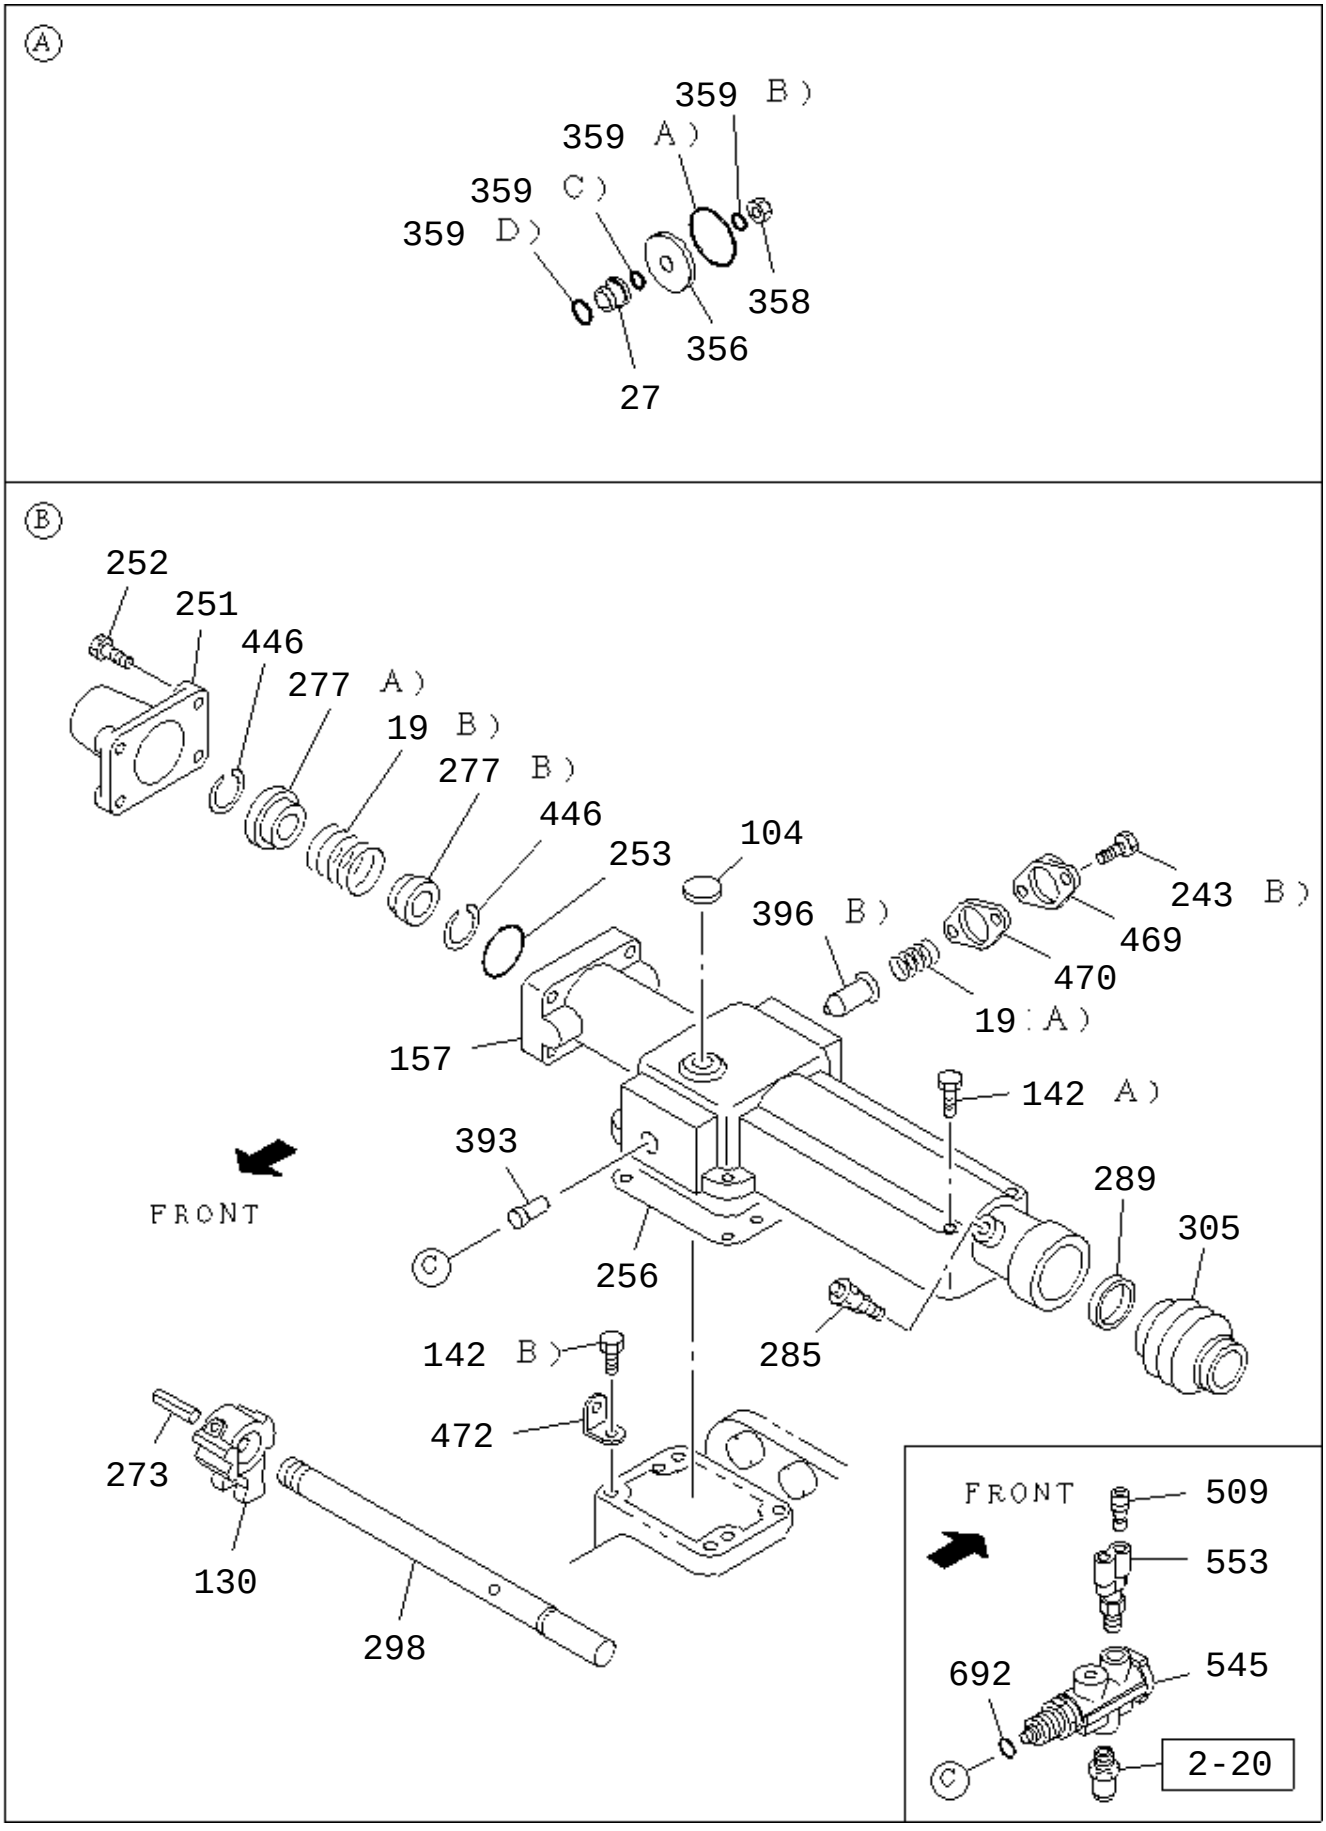

https://truckmanualshub.com/

SELECT LEVER

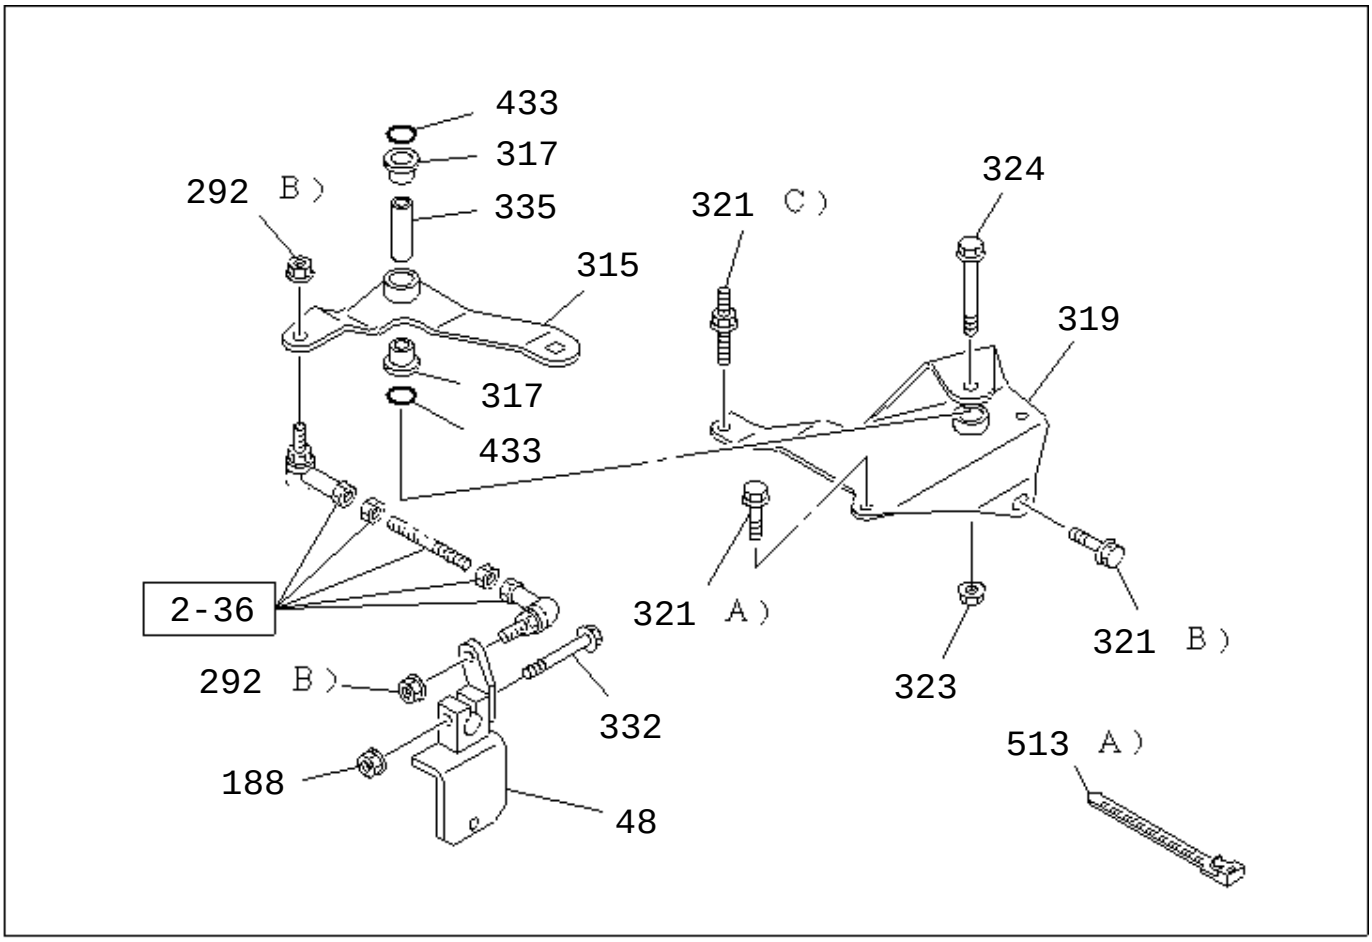

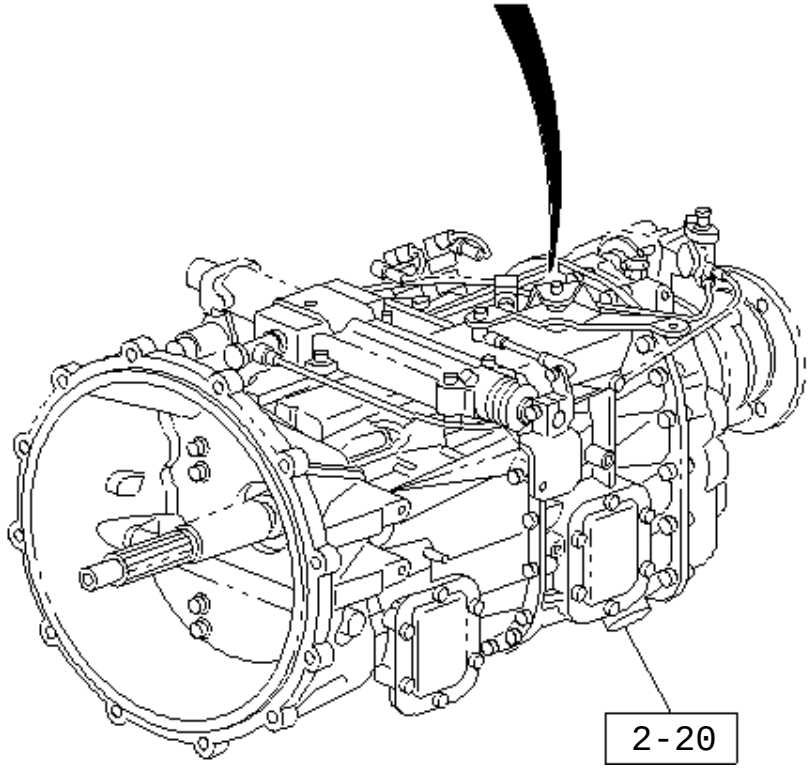

https://truckmanualshub.com/

2-30B GEAR SHIFTER AND QUADRANT BOX -B FULLER M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
1		ARM; SHIFT,1ST & REV					
		1-33511-629-0		1312-	01	A	
19		SPRING; COIL COMP					
		1-33539-052-0		1312-	02	A	
							(A)
		1-33549-226-0		1312-	01	A	
							(B)
25		ARM; SHIFT,2ND & 3RD					
		1-33511-630-0		1312-	01	A	
27		BUSHING; SHIFT ROD					
		1-33569-042-0		1312-	01	A	
30		PIN; INTER LK					
		1-33119-309-0		1312-	01	A	
48		LEVER; 4TH,SHIFT					
		8-98031-634-0		1312-	01	A	
49		ARM; SHIFT,4TH & 5TH					
		1-33511-537-0		1312-	01	A	
54		PIN; SPR,SHIFT BLOCK					
		1-33519-101-0		1312-	01	A	
91		PIN; SPR,SHIFT ARM					
		1-33519-192-0		1312-	01	A	
104		PLUG; PLATE					
		1-33549-353-0		1312-	01	A	
130		LEVER; SHIFT,INTERNAL					
		1-33521-181-0		1312-	01	A	
142		BOLT; QUAD BOX					
		1-33549-524-0		1312-	04	A	
							(B) M10X35
		1-33549-580-0		1312-	02	A	
							(A)
157		BOX; QUAD,TRANS					
		1-33541-537-0		1312-	01	A	
171		SWITCH; NEUTRAL					
		1-82440-123-0		1312-	01	A	
172		GASKET; NEUTRAL SW					
		1-33119-601-0		1312-	01	A	
178		GASKET; PLUG					
		1-33119-601-0		1312-	01	A	
188		NUT; SELECT LEVER					
		0-91180-110-0		1312-	01	A	
							M10 FLANGE
243		BOLT; COVER					
		1-33119-630-0		1312-	02	A	
							(A)
		1-33119-609-0		1312-	02	A	
							(B)
251		COVER; SIDE					
		1-33545-013-0		1312-	01	A	
252		BOLT; SIDE COVER					
		1-33549-552-0		1312-	04	A	
253		GASKET; SIDE COVER					
		1-33544-055-0		1312-	01	A	
256		GASKET; QUAD BOX TO TRANS CASE					
		1-33549-391-0		1312-	01	A	
261		ROD; GEAR CONT					
		1-33531-498-0		1312-	01	A	
273		PIN; SPR,STOPPER					
		1-33529-095-0		1312-	01	A	
277		PLATE; SPRING SEAT					
		1-33549-388-0		1312-	01	A	
							(B)
		1-33549-389-0		1312-	01	A	
							(A)
285		BREATHER; AIR,QUAD BOX					
		1-33549-354-0		1312-	01	A	
289		SEAL; OIL,CONT SHAFT,QUAD BOX					
		1-33542-061-0		1312-	01	A	
292		NUT; LINK ROD					
		1-09440-062-1		1312-	02	A	
							(B) M8 FLANGE
298		SHAFT; SHIFT LEVER					
		1-33522-209-0		1312-	01	A	

https://truckmanualshub.com/

2-30B GEAR SHIFTER AND QUADRANT BOX -B FULLER M/T


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
304		BLOCK; SHIFT SHAFT					
		1-33511-534-0		1312-	01	A	
305		BOOT; LEVER SHAFT					
		1-33549-233-0		1312-	01	A	
315		LEVER; SELECT					
		8-98032-139-0		1312-	01	A	
317		BUSHING; LEVER					
		1-09330-119-0		1312-	02	A	
319		BRACKET; SELECT LEVER					
		1-33657-816-0		1312-	01	A	
321		BOLT; BRKT,RELAY LEVER					
		0-28151-060-0		1312-	01	A	(A) M10X60 FLANGE
		0-28751-025-0		1312-	01	A	(B) M10X25 FLANGE
		8-97178-725-0		1312-	01	A	(C) M10X35 L=65
323		NUT; LK,SELECT LEVER					
		0-91180-110-0		1312-	01	A	M10 FLANGE
324		BOLT; SHAFT					
		0-28051-060-0		1312-	01	A	M10X60 FLANGE
332		BOLT; 4TH,SHIFT LEVER					
		0-29261-060-0		1312-	01	A	
335		COLLAR; DIST,RELAY LEVER ASM					
		1-33659-203-0		1312-	01	A	
347		ARM; SHIFT,RANGE CHANGE					
		1-33511-671-0		1312-	01	A	
350		SCREW; SHIFT ARM					
		1-33519-163-0		1312-	01	A	
352		ROD; SHIFT,RANGE CHANGE					
		1-33531-435-0		1312-	01	A	
356		PISTON; AIR CYL					
		1-33551-015-0		1312-	01	A	
358		NUT; SHIFT ROD					
		1-33539-091-0		1312-	01	A	
359		GASKET; AIR CYL					
		1-33569-043-0		1312-	01	A	(D)
		1-33569-044-0		1312-	01	A	(C)
		1-87061-122-0		1312-	01	A	(A)
		1-87061-123-0		1312-	01	A	(B)
393		PIN; SW					
		1-33549-394-0		1312-	01	A	
396		PLUNGER; SHIFT ROD					
		1-33539-084-0		1312-	01	A	(A)
		1-33549-390-0		1312-	01	A	(B)
398		SWITCH; REV LAMP					
		1-82440-128-0		1312-	01	A	
410		GASKET; REV SW					
		1-33119-601-0		1312-	01	A	
433		GASKET; BUSHING					
		1-09623-594-0		1312-	02	A	
446		RING; SNAP,SPR SEAT					
		1-33549-223-0		1312-	02	A	
469		COVER; SPRING,QUAD BOX					
		1-33119-425-0		1312-	01	A	
470		GASKET; SPRING COVER					
		1-33119-489-0		1312-	02	A	
472		EYE; LIFTING					
		1-33119-596-0		1312-	01	A	
497		BALL; SWITCH					
		1-33119-308-0		1312-	01	A	
509		ADAPTER					
		1-33119-603-0		1312-	01	A	
513		CLIP; BAND					

https://truckmanualshub.com/


2-30B GEAR SHIFTER AND QUADRANT BOX -B FULLER M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
513		1-09707-162-1		1312-	02	A	(A) L=180
		5-09707-030-1		1312-	01	A	(A) L=250 IDN
532		PLATE; SHIFT FORK					
		1-33539-080-0		1312-	01	A	(B)
		1-33539-054-0		1312-	01	A	(A)
538		COVER; DETENT					
		1-33119-574-0		1312-	01	A	
545		VALVE; POPPET					
		1-33549-383-0		1312-	01	A	
553		ADAPTER; AIR					
		1-33119-602-0		1312-	01	A	
617		PLUG					
		1-33119-605-0		1312-	01	A	
692		GASKET; VALVE					
		1-33119-601-0		1312-	01	A	
2-26		Move to 2-26					
		Move to 2-26					
2-20		Move to 2-20					
		Move to 2-20					
2-36		Move to 2-36					


https://truckmanualshub.com/

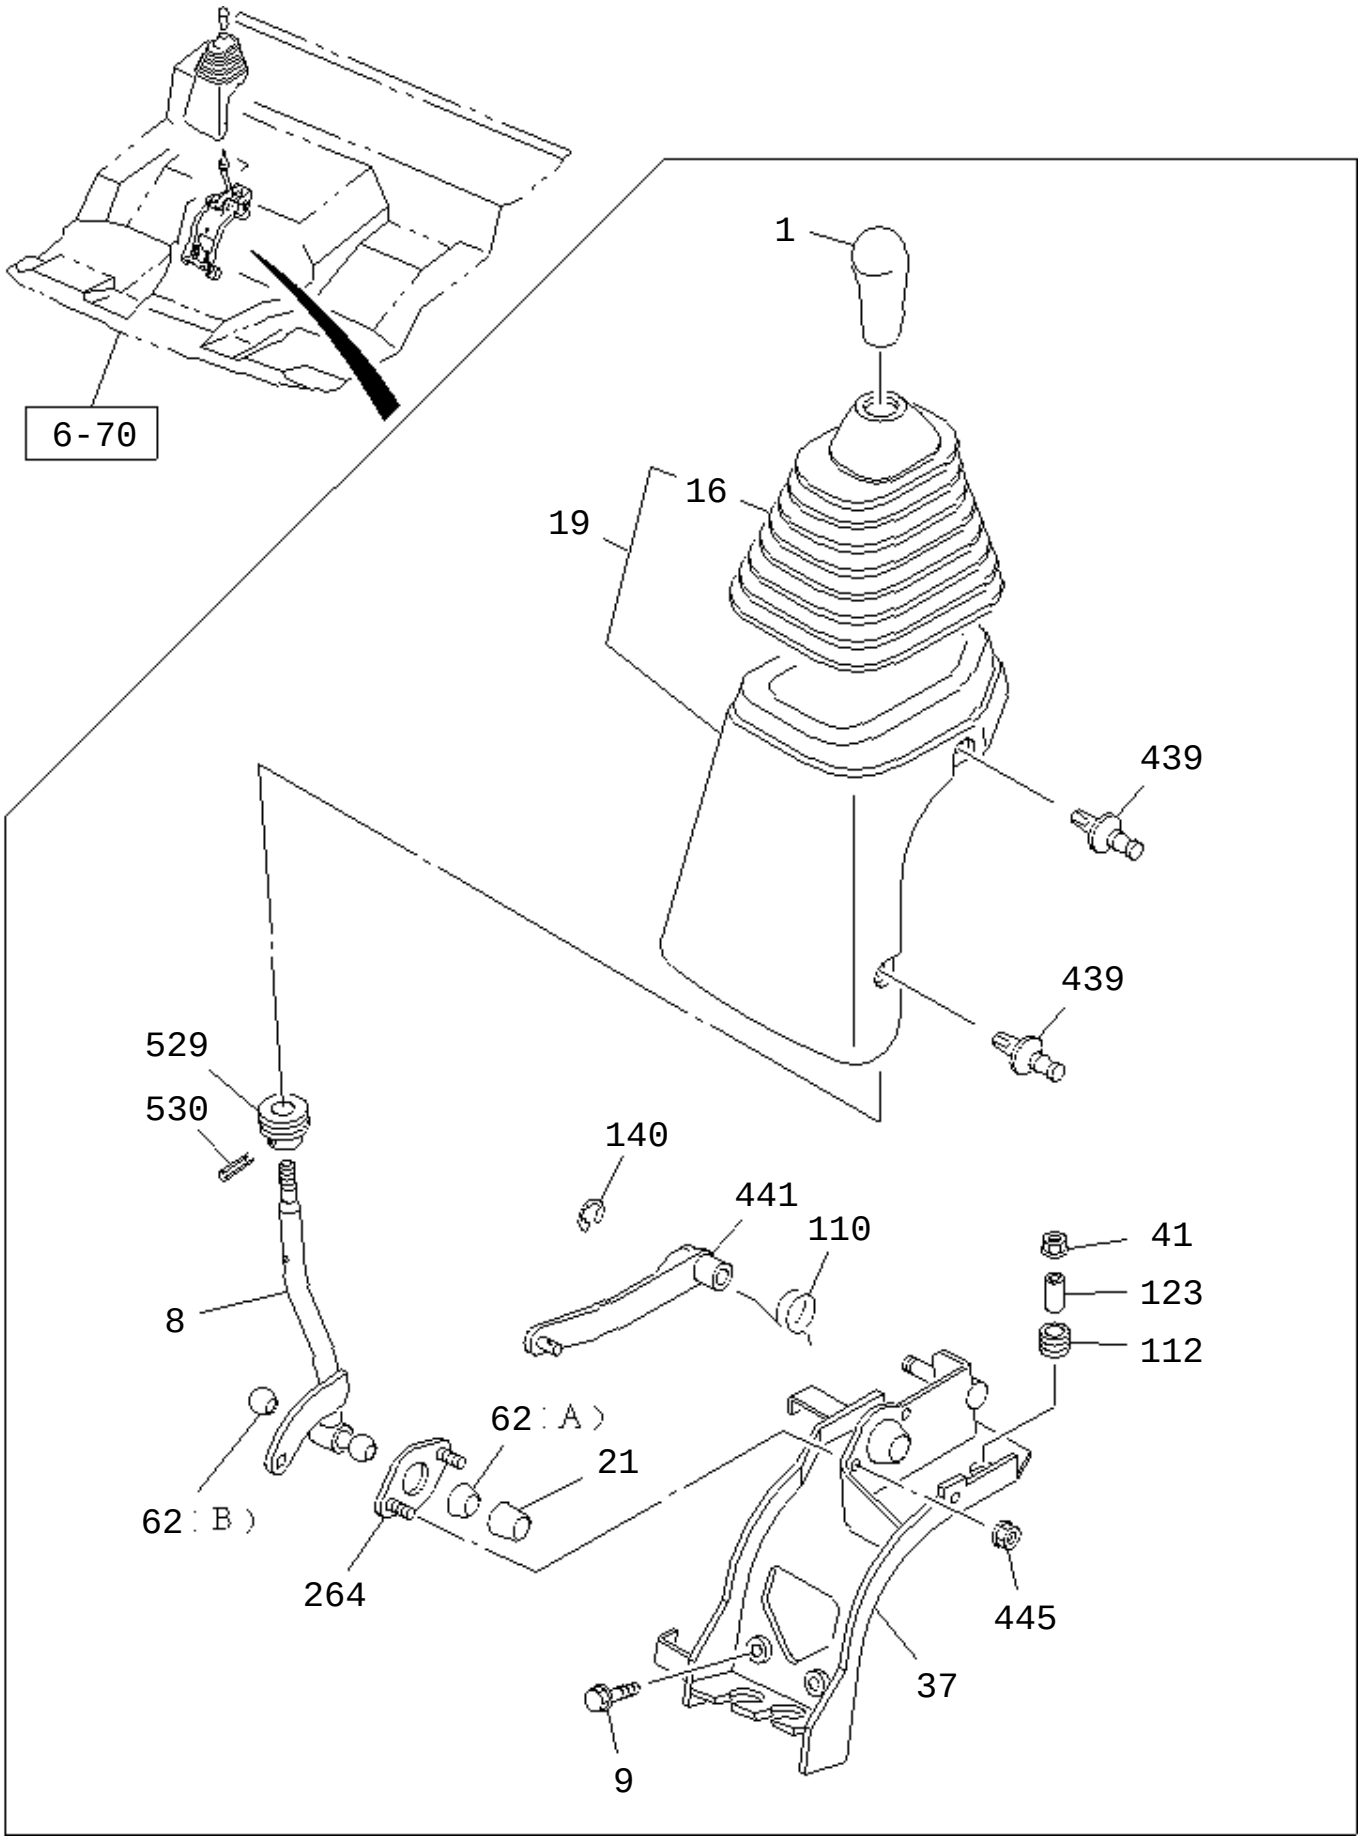


https://truckmanualshub.com/

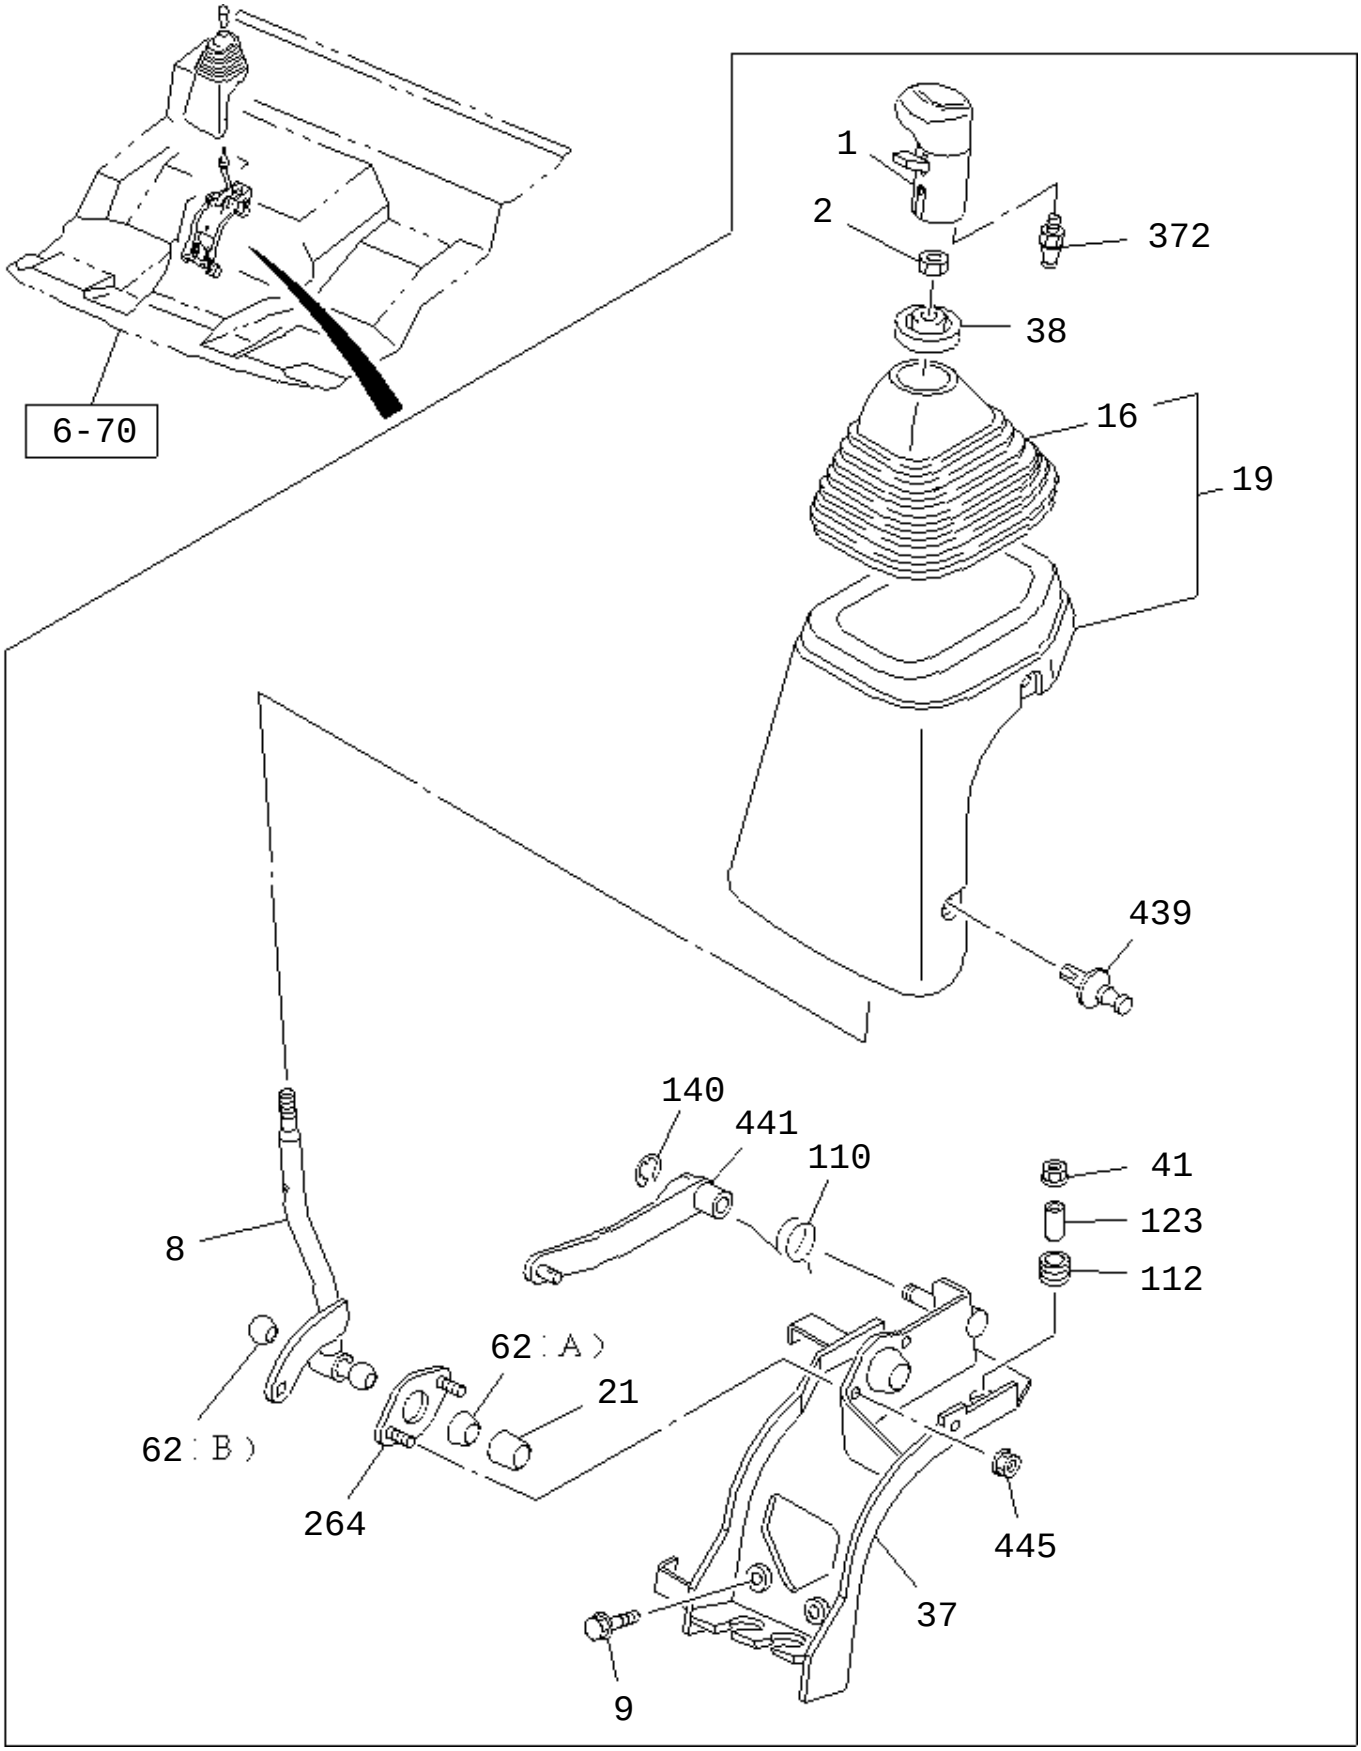

https://truckmanualshub.com/

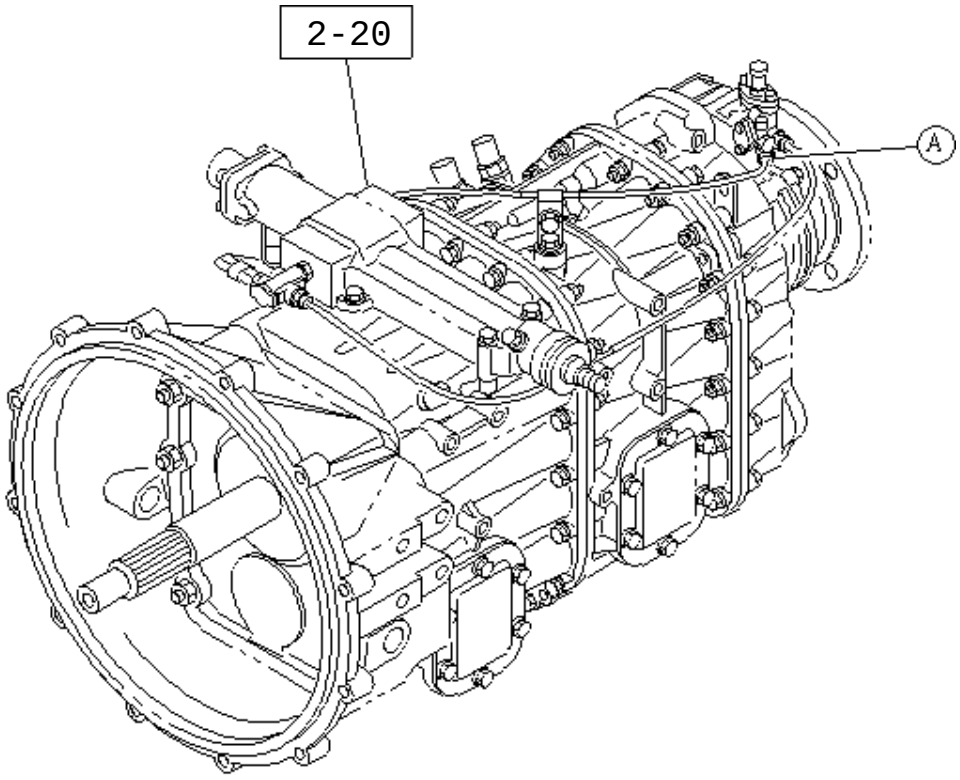

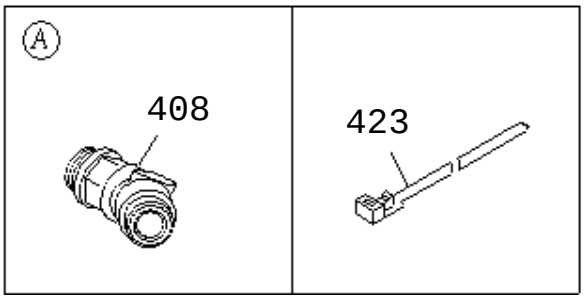

https://truckmanualshub.com/

MANUAL TRANSMISSION SHIFT CONTROL LEVER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		KNOB; CHANGE LEVER					
		1-33611-106-0	C	1312-1401	01	A	FULLER ES11109 DD M/T(Y5N)
		8-98224-288-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98224-288-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98224-288-0		1404-	01	B	
		1-33611-099-1		1312-	01	A	ZF9S1110 DD M/T(Y5P)
2		NUT; KNOB					
		1-33619-033-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) 1/2-13UNC
		1-33619-033-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) 1/2-13UNC
		1-33619-033-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) 1/2-13UNC
		1-33619-033-0		1404-	01	B	1/2-13UNC
8		LEVER; CHANGE					
		8-98093-458-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N)
		8-98093-458-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98093-458-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98093-458-0		1404-	01	B	
		8-98093-455-0		1312-	01	A	ZF9S1110 DD M/T(Y5P)
9		BOLT; CHANGE LEVER					
		8-94412-342-0		1312-1401	02	A	M8X25 W/WAVE&PL WASHER
		8-94412-342-0		1402-1403	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8X25 W/WAVE&PL WASHER
		8-94412-342-0		1402-1403	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8X25 W/WAVE&PL WASHER
		8-94412-342-0		1404-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8X25 W/WAVE&PL WASHER
		8-94412-342-0		1404-	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8X25 W/WAVE&PL WASHER
		8-94412-342-0		1404-	02	B	M8X25 W/WAVE&PL WASHER
16		BOOT; CHANGE LEVER					
		1-79998-751-4		1312-1403	01	A	
		1-79998-751-4		1404-	01	AB	
19		COVER; CHANGE LEVER					
		8-97407-954-0		1312-1403	01	A	GRAY
		8-97407-954-0		1404-	01	AB	GRAY
21		SEAT; CHANGE LEVER					
		1-33619-429-0		1312-1401	01	A	
		1-33619-429-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-429-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P)
		1-33619-429-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-429-0		1404-	01	A	ZF9S1110 DD M/T(Y5P)
		1-33619-429-0		1404-	01	B	
37		BRACKET; CHANGE LEVER SUPPORT					
		8-98093-450-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N)
		8-98093-450-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98093-450-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98093-450-0		1404-	01	B	
		8-98093-444-0		1312-	01	A	ZF9S1110 DD M/T(Y5P)
38		HOLDER; BOOT CHANGE LEVER					
		1-79996-383-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N)
		1-79996-383-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-79996-383-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-79996-383-0		1404-	01	B	

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
41		NUT; CHANGE LEVER					
		8-97329-625-0		1312-1401	02	A	M8 W/DISHED WASHER
		8-97329-625-0		1402-1403	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 W/DISHED WASHER
		8-97329-625-0		1402-1403	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8 W/DISHED WASHER
		8-97329-625-0		1404-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 W/DISHED WASHER
		8-97329-625-0		1404-	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8 W/DISHED WASHER
		8-97329-625-0		1404-	02	B	M8 W/DISHED WASHER
62		SEAT; BALL,CHANGE LEVER					
		1-33619-427-0		1312-1401	01	A	(A)
		1-33619-427-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		1-33619-427-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) (A)
		1-33619-427-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		1-33619-427-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) (A)
		1-33619-427-0		1404-	01	B	(A)
		8-97049-147-0		1312-1401	01	A	(B)
		8-97049-147-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-97049-147-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) (B)
		8-97049-147-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-97049-147-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) (B)
		8-97049-147-0		1404-	01	B	(B)
110		SPRING; RETURN,CHANGE LEVER					
		1-33619-435-0		1312-1401	01	A	
		1-33619-435-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-435-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P)
		1-33619-435-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-435-0		1404-	01	A	ZF9S1110 DD M/T(Y5P)
		1-33619-435-0		1404-	01	B	
112		RUBBER; CUSHION					
		1-33619-442-0		1312-1401	04	A	
		1-33619-442-0		1402-1403	04	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-442-0		1402-1403	04	A	ZF9S1110 DD M/T(Y5P)
		1-33619-442-0		1404-	04	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-442-0		1404-	04	A	ZF9S1110 DD M/T(Y5P)
		1-33619-442-0		1404-	04	B	
123		COLLAR; DIST,CHANGE LEVER					
		1-33619-443-0		1312-1401	04	A	
		1-33619-443-0		1402-1403	04	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-443-0		1402-1403	04	A	ZF9S1110 DD M/T(Y5P)
		1-33619-443-0		1404-	04	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-443-0		1404-	04	A	ZF9S1110 DD M/T(Y5P)
		1-33619-443-0		1404-	04	B	
140		RING; SNAP					

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
140		0-91805-510-0		1312-1401	01	A	ID=10 IDN
		0-91805-510-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) ID=10 IDN
		0-91805-510-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) ID=10 IDN
		0-91805-510-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) ID=10 IDN
		0-91805-510-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) ID=10 IDN
		0-91805-510-0		1404-	01	B	ID=10 IDN
264		PLATE; COVER					
		1-33619-430-0		1312-1401	01	A	
		1-33619-430-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-430-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P)
		1-33619-430-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-33619-430-0		1404-	01	A	ZF9S1110 DD M/T(Y5P)
		1-33619-430-0		1404-	01	B	
372		CONNECTOR; CHANGE LEVER					
		8-98114-396-0		1312-1401	02	A	FULLER ES11109 DD M/T(Y5N)
		8-98114-396-0		1402-1403	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98114-396-0		1404-	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98114-396-0		1404-	02	B	
408		CONNECTOR; AIR HOSE					
		1-33549-381-0		1312-1403	01	A	FULLER ES11109 DD M/T(Y5N)
		1-33549-381-0		1404-	01	AB	FULLER ES11109 DD M/T(Y5N)
423		CLIP; BAND					
		5-09707-031-1		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) L=140 IDN
		5-09707-031-1		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=140 IDN
		5-09707-031-1		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=140 IDN
		5-09707-031-1		1404-	01	B	L=140 IDN
439		FASTENER; COVER					
		8-97407-955-0		1312-1403	04	A	GRAY
		8-97407-955-0		1404-	04	AB	GRAY
441		LEVER; SELECT					
		8-98093-449-0		1312-1401	01	A	
		8-98093-449-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98093-449-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P)
		8-98093-449-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98093-449-0		1404-	01	A	ZF9S1110 DD M/T(Y5P)
		8-98093-449-0		1404-	01	B	
445		NUT; PLATE					
		0-91180-106-0		1312-1401	02	A	M6 FLANGE
		0-91180-106-0		1402-1403	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M6 FLANGE


https://truckmanualshub.com/

MANUAL TRANSMISSION SHIFT CONTROL LEVER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
445		0-91180-106-0		1402-1403	02	A	ZF9S1110 DD M/T(Y5P) M6 FLANGE
		0-91180-106-0		1404-	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M6 FLANGE
		0-91180-106-0		1404-	02	A	ZF9S1110 DD M/T(Y5P) M6 FLANGE
		0-91180-106-0		1404-	02	B	M6 FLANGE
529		RING; BOOT					
		1-33619-504-0		1312-	01	A	ZF9S1110 DD M/T(Y5P)
530		PIN; SPRING					
		1-33619-505-0		1312-	01	A	ZF9S1110 DD M/T(Y5P)
6-70		Move to 6-70					
2-20		Move to 2-20					
		Move to 2-20					


https://truckmanualshub.com/

ZF;TRANSMISSION CONTROL CABLE

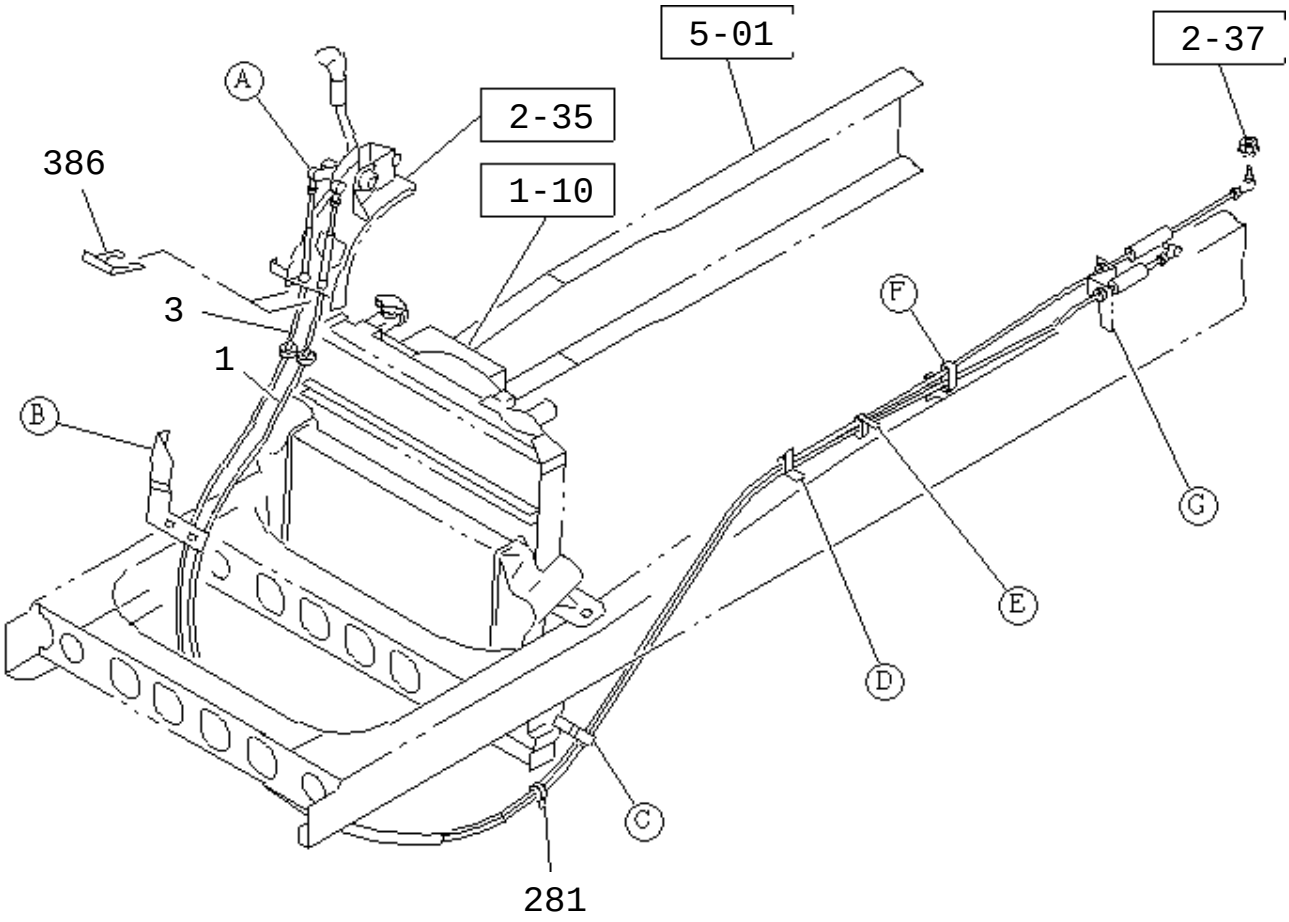


https://truckmanualshub.com/

ZF;BRACKET AND CLIP

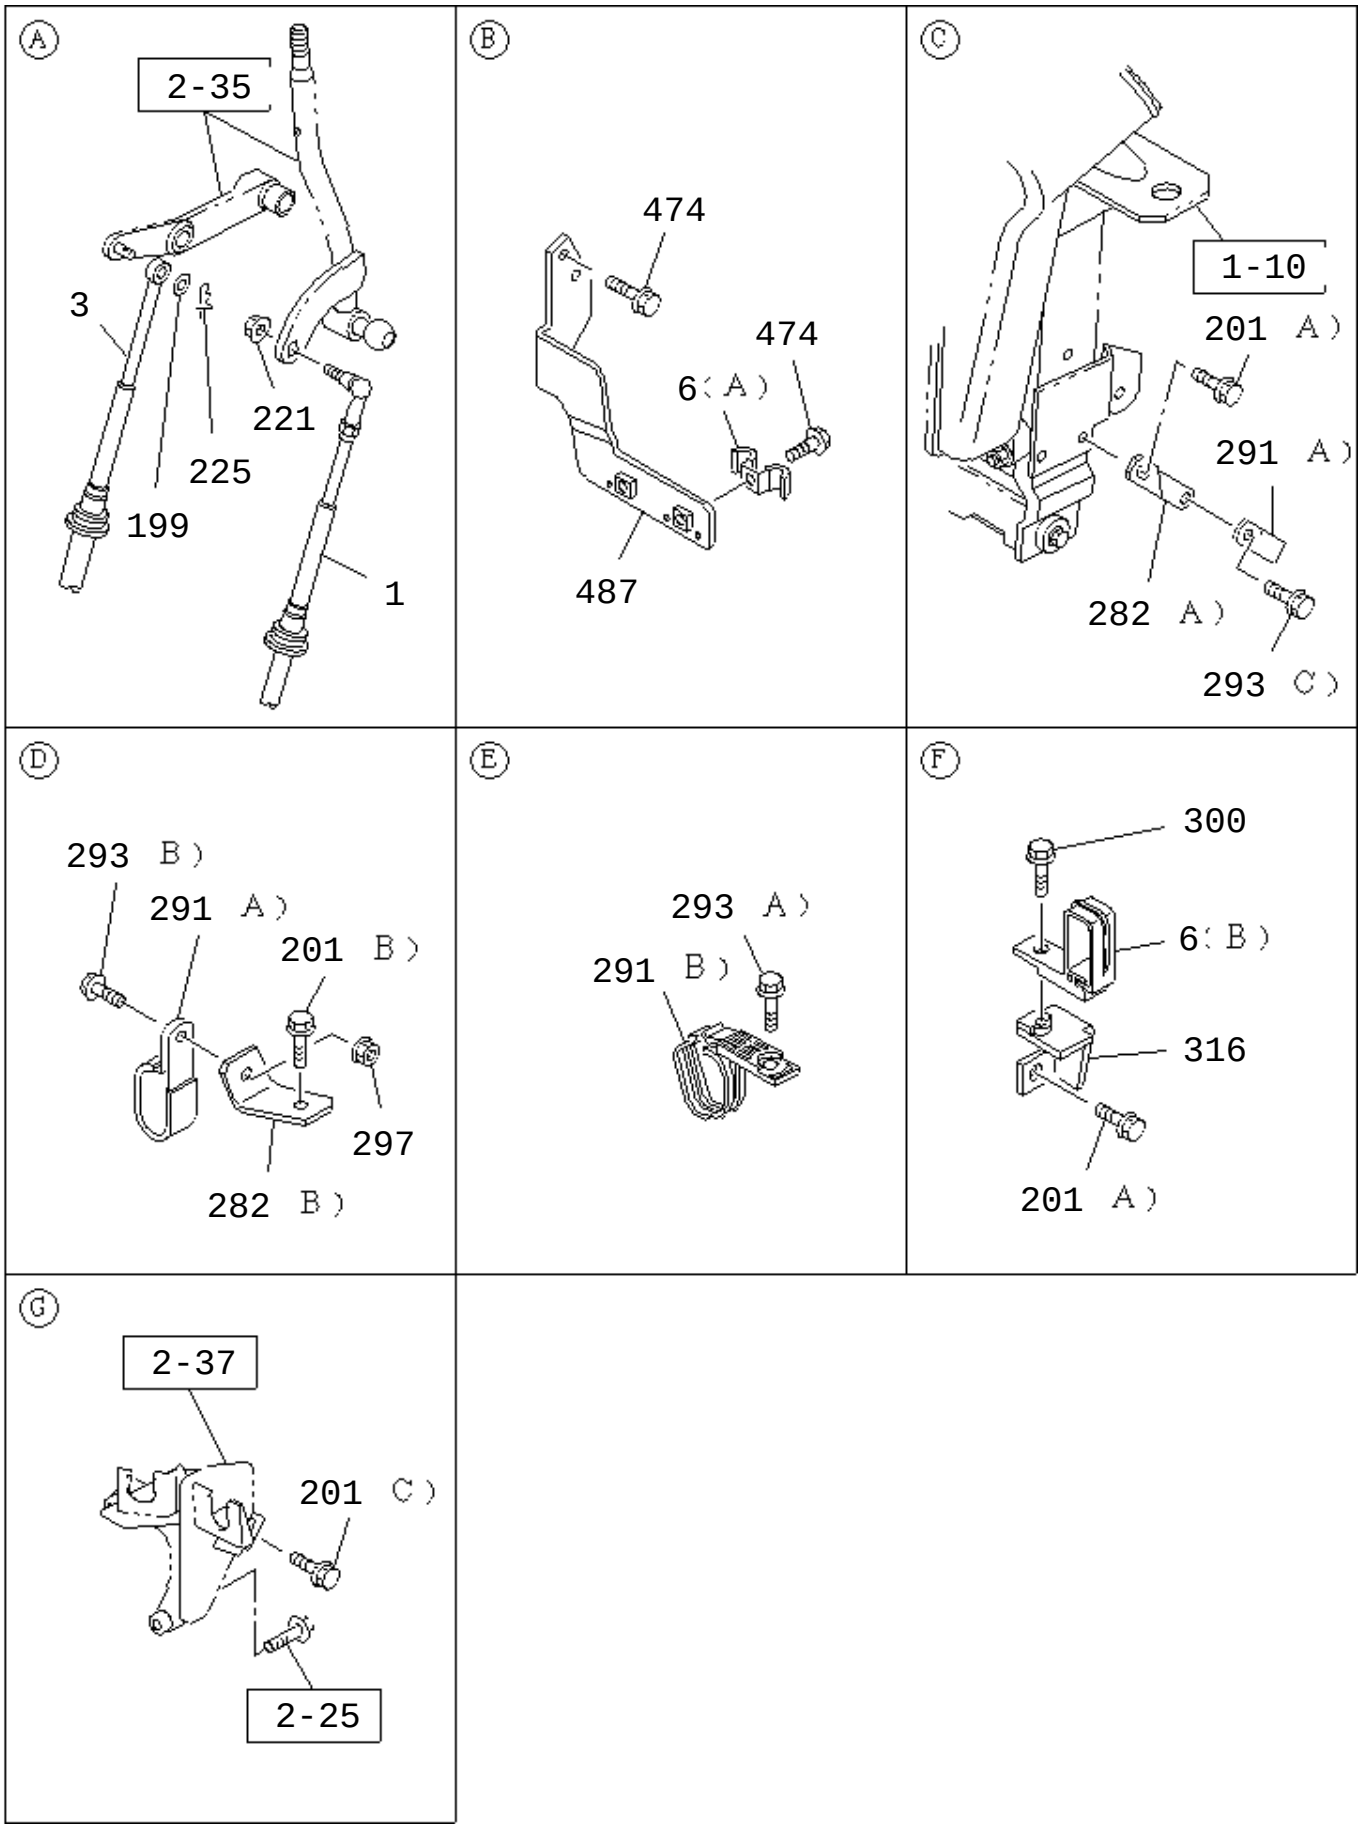


https://truckmanualshub.com/

FULLER;TRANSMISSION CONTROL CABLE

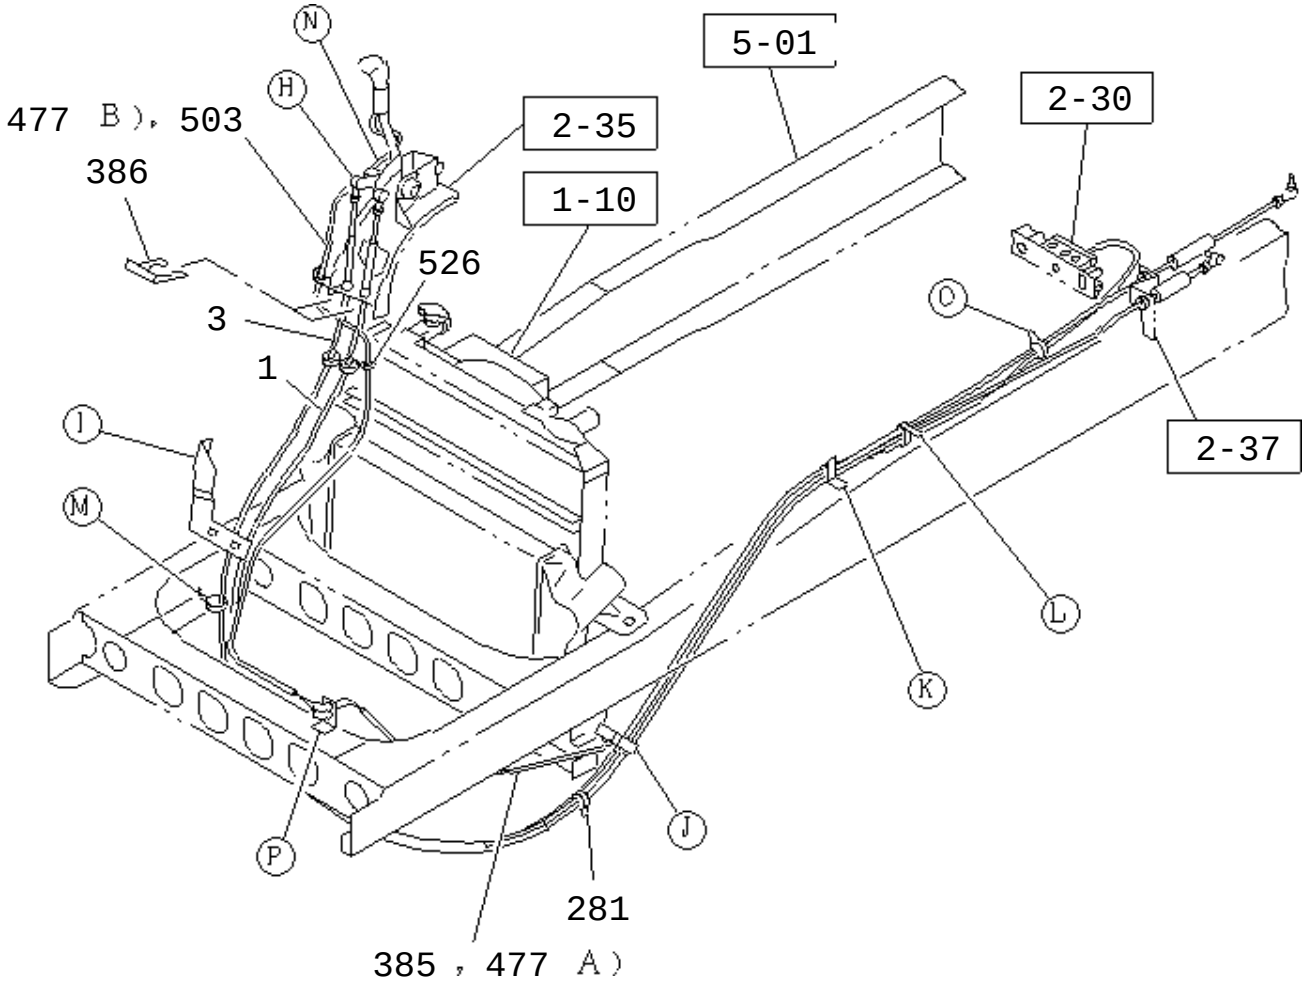


https://truckmanualshub.com/

FULLER;BRACKET AND CLIP

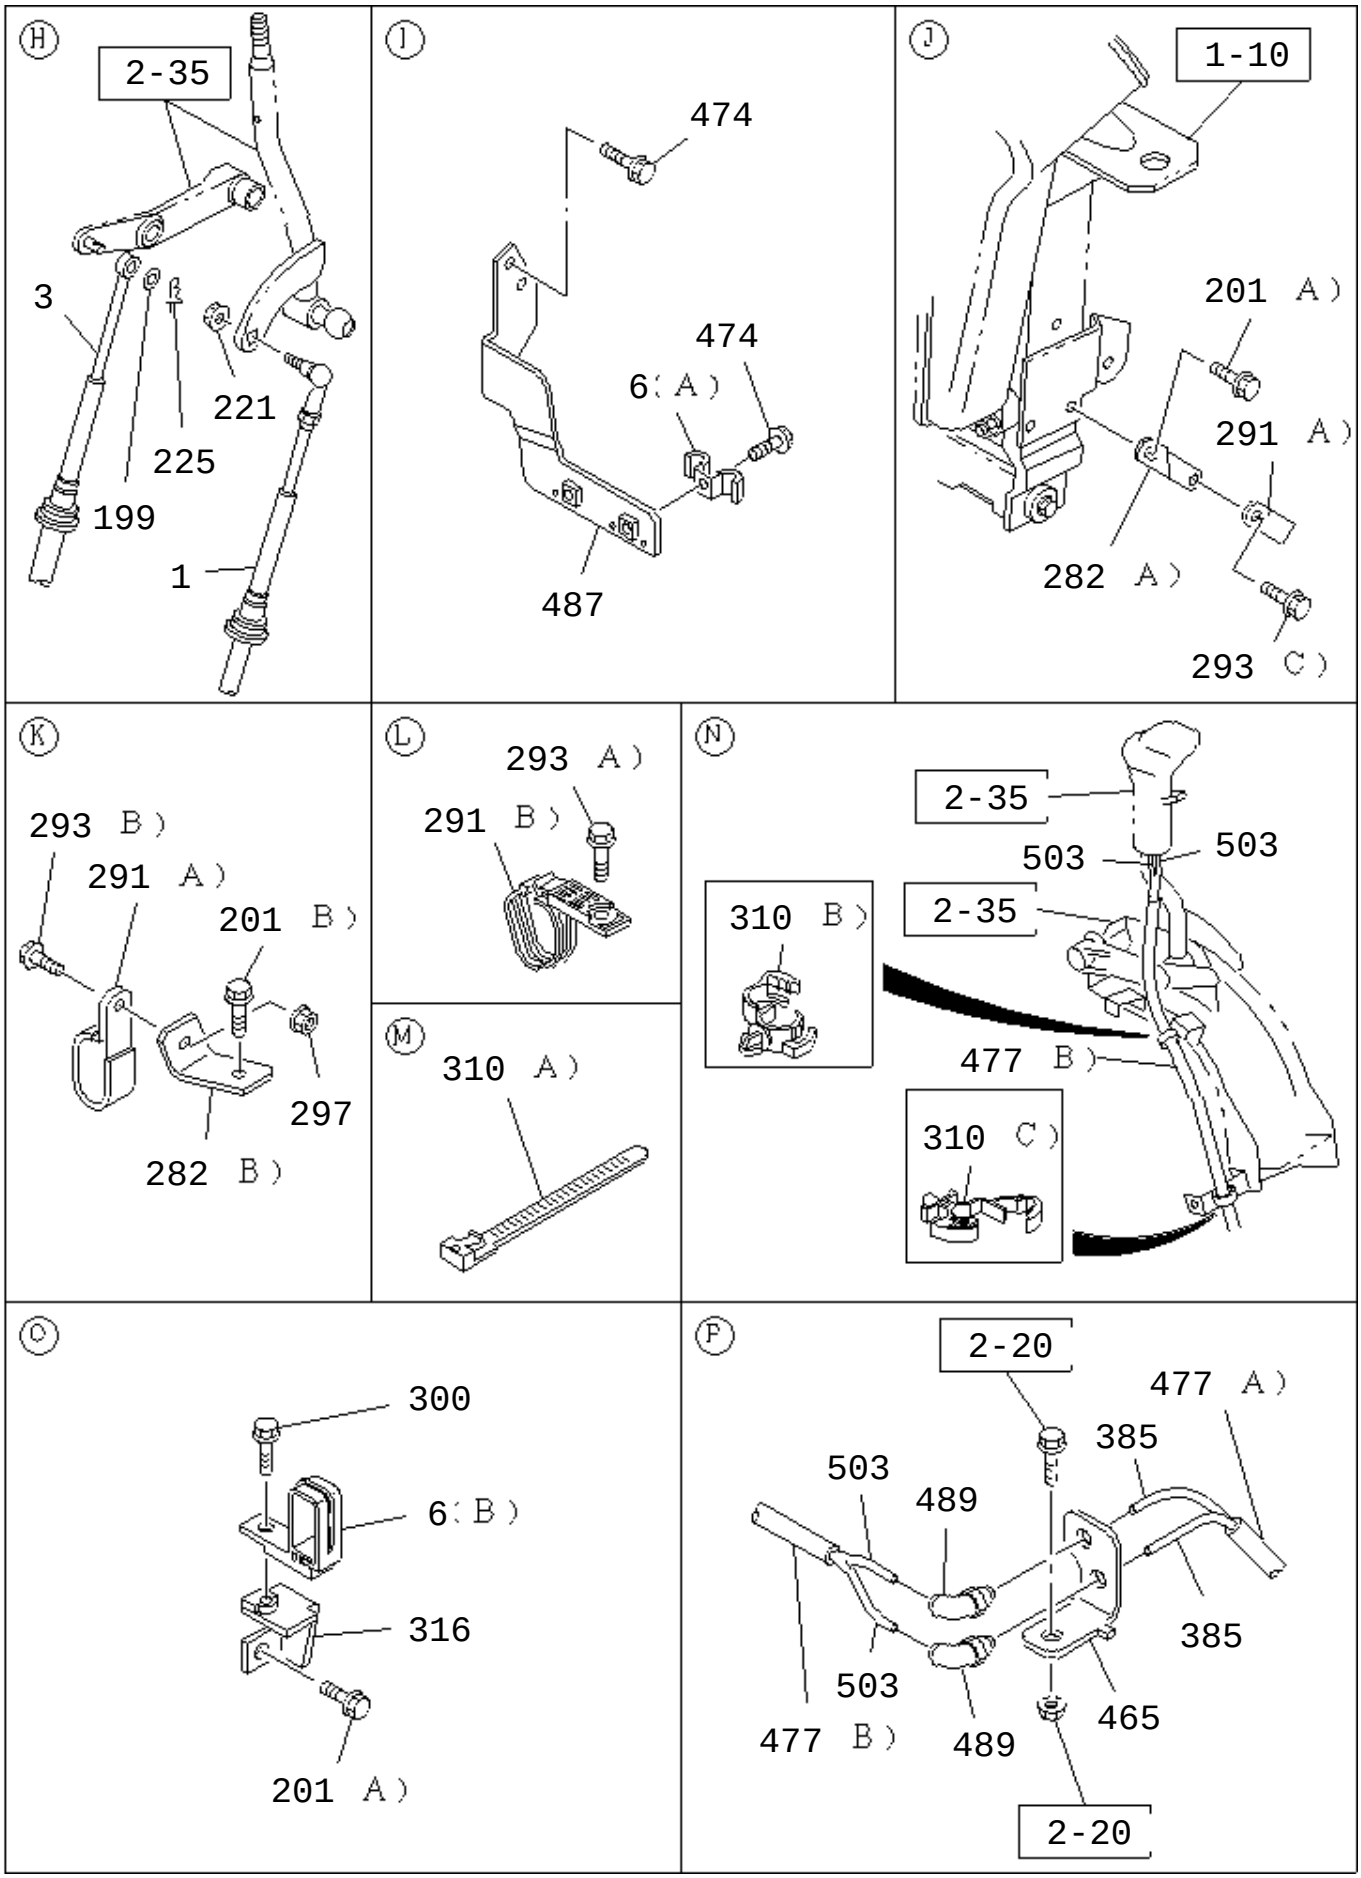

https://truckmanualshub.com/

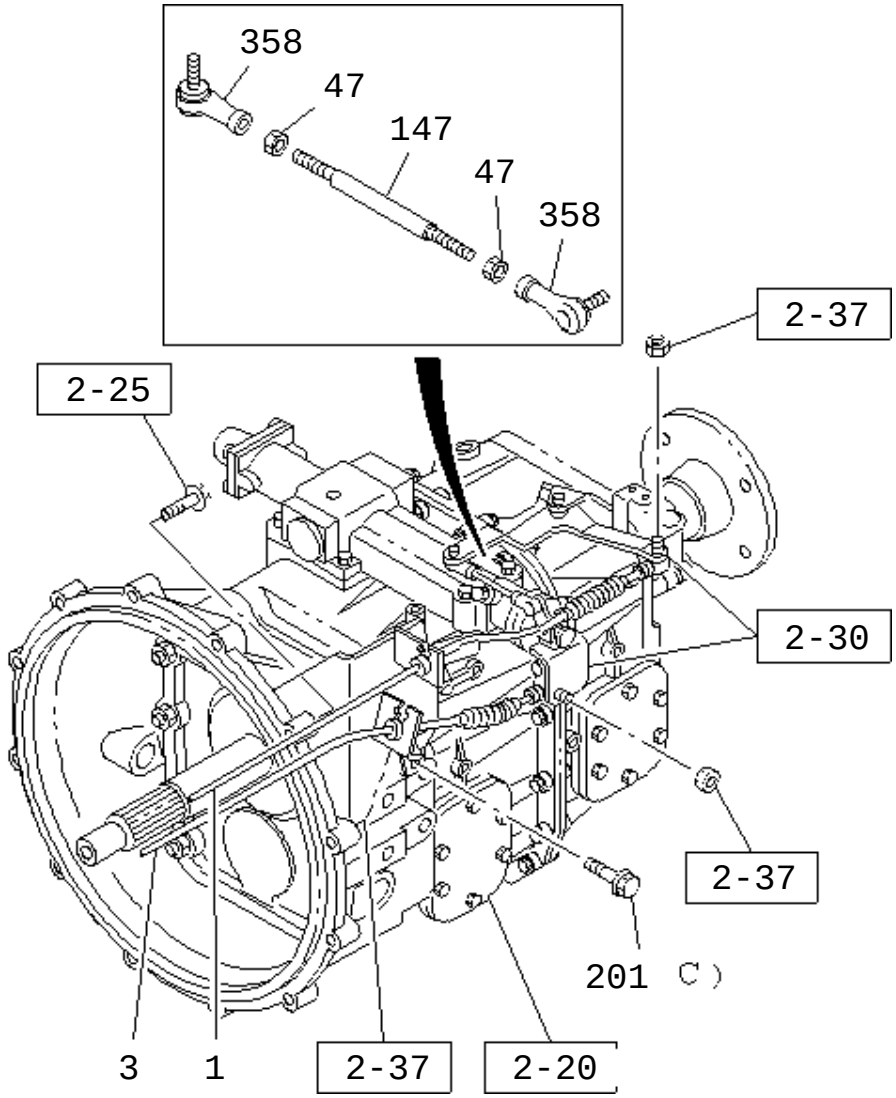

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		CABLE; SHIFT,TRANS CONT					
		8-98250-854-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) L=3695
		8-98182-402-2		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) L=3625
		8-98182-402-2		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=3625
		8-98182-402-2		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=3625
		8-98182-402-2		1404-	01	B	L=3625
		8-98184-317-2		1312-1401	01	A	ZF9S1110 DD M/T(Y5P) L=3630
		8-98184-317-2		1402-	01	A	ZF9S1110 DD M/T(Y5P) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=3630
3		CABLE; SELECT,TRANS CONT					
		8-98250-855-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) L=3615
		8-98182-403-1		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) L=3790
		8-98182-403-1		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=3790
		8-98182-403-1		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=3790
		8-98182-403-1		1404-	01	B	L=3790
		8-98017-495-3		1312-1401	01	A	ZF9S1110 DD M/T(Y5P) L=3560
		8-98017-495-3		1402-	01	A	ZF9S1110 DD M/T(Y5P) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=3560
6		CLIP; CABLE					
		1-09700-739-0		1312-1401	01	A	(A) ID=11 & 11 L=17.5 & 17.5
		1-09700-739-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=11 & 11 L=17.5 & 17.5
		1-09700-739-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=11 & 11 L=17.5 & 17.5
		1-09700-739-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=11 & 11 L=17.5 & 17.5
		1-09700-739-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=11 & 11 L=17.5 & 17.5
		1-09700-739-0		1404-	01	B	(A) ID=11 & 11 L=17.5 & 17.5
		8-98023-991-0		1312-1401	01	A	(B) ID=13 & 10 & 10 L=35.5
		8-98023-991-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=13 & 10 & 10 L=35.5
		8-98023-991-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=13 & 10 & 10 L=35.5
		8-98023-991-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=13 & 10 & 10 L=35.5

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
6		8-98023-991-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=13 & 10 & 10 L=35.5
		8-98023-991-0		1404-	01	B	(B) ID=13 & 10 & 10 L=35.5
47		NUT; LK,LINK ROD					
		0-91111-508-0		1312-1403	02	A	FULLER ES11109 DD M/T(Y5N) M8
		0-91111-508-0		1404-	02	AB	FULLER ES11109 DD M/T(Y5N) M8
147		ROD; LINK					
		0-84000-808-0		1312-1403	01	A	FULLER ES11109 DD M/T(Y5N)
		0-84000-808-0		1404-	01	AB	FULLER ES11109 DD M/T(Y5N)
199		WASHER; PL,SELECT					
		0-91614-508-0		1312-1401	01	A	ID=8.4 OD=16
		0-91614-508-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) ID=8.4 OD=16
		0-91614-508-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) ID=8.4 OD=16
		0-91614-508-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) ID=8.4 OD=16
		0-91614-508-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) ID=8.4 OD=16
		0-91614-508-0		1404-	01	B	ID=8.4 OD=16
201		BOLT; BRKT					
		0-28050-816-0		1312-1401	01	A	(A) M8X16 FLANGE
		0-28050-816-0		1312-1401	01	A	(A) M8X16 FLANGE
		0-28050-816-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X16 FLANGE
		0-28050-816-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X16 FLANGE
		0-28050-816-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X16 FLANGE
		0-28050-816-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X16 FLANGE
		0-28050-816-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X16 FLANGE
		0-28050-816-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X16 FLANGE
		0-28050-816-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X16 FLANGE
		0-28050-816-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X16 FLANGE
		0-28050-816-0		1404-	01	B	(A) M8X16 FLANGE
		0-28050-816-0		1404-	01	B	(A) M8X16 FLANGE
		0-28050-820-0		1312-1401	01	A	(B) M8X20 FLANGE

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
201		0-28050-820-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) M8X20 FLANGE
		0-28050-820-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B) M8X20 FLANGE
		0-28050-820-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) M8X20 FLANGE
		0-28050-820-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B) M8X20 FLANGE
		0-28050-820-0		1404-	01	B	(B) M8X20 FLANGE
		0-28151-235-0		1312-1401	01	A	(C) M12X35 FLANGE
		0-28151-235-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (C) M12X35 FLANGE
		0-28151-235-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (C) M12X35 FLANGE
		0-28151-235-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (C) M12X35 FLANGE
		0-28151-235-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (C) M12X35 FLANGE
		0-28151-235-0		1404-	01	B	(C) M12X35 FLANGE
221		NUT; SHIFT WIRE TO LEVER					
		1-09440-062-1		1312-1401	01	A	M8 FLANGE
		1-09440-062-1		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-062-1		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-062-1		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-062-1		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-062-1		1404-	01	B	M8 FLANGE
225		PIN; SELECT CABLE					
		8-94111-137-0		1312-1401	01	A	L=27.7
		8-94111-137-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=27.7
		8-94111-137-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) L=27.7
		8-94111-137-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=27.7
		8-94111-137-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) L=27.7
		8-94111-137-0		1404-	01	B	L=27.7
281		CLIP; BAND					
		1-09707-001-1		1312-1401	01	A	L=300
		1-09707-001-1		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=300

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
281		1-09707-001-1		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) L=300
		1-09707-001-1		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=300
		1-09707-001-1		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) L=300
		1-09707-001-1		1404-	01	B	L=300
282		BRACKET; TRANS SIDE					
		1-82699-199-0		1312-1401	01	A	(B)
		1-82699-199-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		1-82699-199-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		1-82699-199-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		1-82699-199-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		1-82699-199-0		1404-	01	B	(B)
		8-98098-265-2		1312-1401	01	A	(A)
		8-98098-265-2		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		8-98098-265-2		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		8-98098-265-2		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		8-98098-265-2		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		8-98098-265-2		1404-	01	B	(A)
291		CLIP; SHIFT TO SELECT,FRAME					
		0-95325-026-0		1312-1401	02	A	(A) ID=11X2 L=16
		0-95325-026-0		1402-1403	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=11X2 L=16
		0-95325-026-0		1402-1403	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=11X2 L=16
		0-95325-026-0		1404-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=11X2 L=16
		0-95325-026-0		1404-	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) ID=11X2 L=16
		0-95325-026-0		1404-	02	B	(A) ID=11X2 L=16
		8-98023-991-0		1312-1401	01	A	(B) ID=13 & 10 & 10 L=35.5
		8-98023-991-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=13 & 10 & 10 L=35.5
		8-98023-991-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=13 & 10 & 10 L=35.5
		8-98023-991-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=13 & 10 & 10 L=35.5

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
291		8-98023-991-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=13 & 10 & 10 L=35.5
		8-98023-991-0		1404-	01	B	(B) ID=13 & 10 & 10 L=35.5
293		BOLT; CLIP,SHIFT TO SELECT 0-28050-816-0		1312-1401	01	A	(C) M8X16 FLANGE
		0-28050-816-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (C) M8X16 FLANGE
		0-28050-816-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (C) M8X16 FLANGE
		0-28050-816-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (C) M8X16 FLANGE
		0-28050-816-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (C) M8X16 FLANGE
		0-28050-816-0		1404-	01	B	(C) M8X16 FLANGE
		0-28050-820-0		1312-1401	01	A	(A) M8X20 FLANGE
		0-28050-820-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X20 FLANGE
		0-28050-820-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X20 FLANGE
		0-28050-820-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X20 FLANGE
		0-28050-820-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X20 FLANGE
		0-28050-820-0		1404-	01	B	(A) M8X20 FLANGE
		0-28650-820-0		1312-1401	01	A	(B) M8X20 FLANGE IDN
		0-28650-820-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) M8X20 FLANGE IDN
		0-28650-820-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B) M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) (B) M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	B	(B) M8X20 FLANGE IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
297		NUT; CLIP					
		0-91180-108-0		1312-1401	01	A	M8 FLANGE
		0-91180-108-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		0-91180-108-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		0-91180-108-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		0-91180-108-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		0-91180-108-0		1404-	01	B	M8 FLANGE
300		BOLT; CLIP					
		0-28650-820-0		1312-1401	01	A	M8X20 FLANGE IDN
		0-28650-820-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8X20 FLANGE IDN
		0-28650-820-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	B	M8X20 FLANGE IDN
310		CLIP; TUBE					
		5-09707-036-1		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) (A) L=100
		5-09707-036-1		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) L=100
		5-09707-036-1		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) L=100
		5-09707-036-1		1404-	01	B	(A) L=100
		8-94218-436-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) (C) ID=12
		8-94218-436-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (C) ID=12
		8-94218-436-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (C) ID=12
		8-94218-436-0		1404-	01	B	(C) ID=12
		8-97069-515-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) (B) ID=6 & 10-13
		8-97069-515-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=6 & 10-13

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
310		8-97069-515-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=6 & 10-13
		8-97069-515-0		1404-	01	B	(B) ID=6 & 10-13
316		BRACKET; CLIP					
		8-98086-439-0		1312-1401	01	A	
		8-98086-439-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98086-439-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98086-439-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98086-439-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98086-439-0		1404-	01	B	
358		ROD END; SCREW					
		1-09760-118-1		1312-1403	02	A	FULLER ES11109 DD M/T(Y5N) L=45.5
		1-09760-118-1		1404-	02	AB	FULLER ES11109 DD M/T(Y5N) L=45.5
385		TUBE; NYLON					
		1-87410-078-0		1312-1401	02	A	FULLER ES11109 DD M/T(Y5N) SERVICED BY L=4000 OD=4
		1-87410-078-0		1402-1403	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) SERVICED BY L=4000 OD=4
		1-87410-078-0		1404-	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) SERVICED BY L=4000 OD=4
		1-87410-078-0		1404-	02	B	SERVICED BY L=4000 OD=4
386		CLIP; CONT CABLE & TUBE					
		1-09700-966-1		1312-1401	02	A	
		1-09700-966-1		1402-1403	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-09700-966-1		1402-1403	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ)
		1-09700-966-1		1404-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		1-09700-966-1		1404-	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ)
		1-09700-966-1		1404-	02	B	
465		BRACKET; CONNECTOR					
		8-98141-474-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N)
		8-98141-474-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98141-474-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98141-474-0		1404-	01	B	
474		BOLT; BRKT					
		0-51640-825-0		1312-1401	03	A	M8X25 W/WASHER
		0-51640-825-0		1402-1403	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8X25 W/WASHER
		0-51640-825-0		1402-1403	03	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8X25 W/WASHER
		0-51640-825-0		1404-	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8X25 W/WASHER
		0-51640-825-0		1404-	03	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8X25 W/WASHER
		0-51640-825-0		1404-	03	B	M8X25 W/WASHER
477		TUBE; CORRUGATE					
		1-87411-016-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) (B) SERVICED BY L=2000 ID=7
		1-87411-016-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) SERVICED BY L=2000 ID=7


https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
477		1-87411-016-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) SERVICED BY L=2000 ID=7
		1-87411-016-0		1404-	01	B	(B) SERVICED BY L=2000 ID=7
		1-87411-019-0		1312-1401	02	A	FULLER ES11109 DD M/T(Y5N) (A) SERVICED BY L=2000 ID=10
		1-87411-019-0		1402-1403	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) SERVICED BY L=2000 ID=10
		1-87411-019-0		1404-	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) SERVICED BY L=2000 ID=10
		1-87411-019-0		1404-	02	B	(A) SERVICED BY L=2000 ID=10
		1-87411-020-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) (A) SERVICED BY L=4000 ID=10
		1-87411-020-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) SERVICED BY L=4000 ID=10
		1-87411-020-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) SERVICED BY L=4000 ID=10
		1-87411-020-0		1404-	01	B	(A) SERVICED BY L=4000 ID=10
487		BRACKET; CONT CABLE					
		8-98184-319-0		1312-1401	01	A	IDN
		8-98184-319-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) IDN
		8-98184-319-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) IDN
		8-98184-319-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) IDN
		8-98184-319-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) IDN
		8-98184-319-0		1404-	01	B	IDN
489		CONNECTOR					
		8-98085-747-0		1312-1401	02	A	FULLER ES11109 DD M/T(Y5N)
		8-98085-747-0		1402-1403	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98085-747-0		1404-	02	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98085-747-0		1404-	02	B	
503		TUBE; NYLON					
		1-87410-077-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) SERVICED BY L=2000 OD=4
		1-87410-077-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) SERVICED BY L=2000 OD=4
		1-87410-077-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) SERVICED BY L=2000 OD=4
		1-87410-077-0		1404-	01	B	SERVICED BY L=2000 OD=4
526		GROMMET					
		5-09333-062-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N)
		5-09333-062-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		5-09333-062-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
526		5-09333-062-0		1404-	01	B	
1-10		Move to 1-10					
2-35		Move to 2-35					
2-37		Move to 2-37					
5-01		Move to 5-01					
2-25		Move to 2-25					
		Move to 2-25					
2-30		Move to 2-30					
		Move to 2-30					
2-20		Move to 2-20					
		Move to 2-20					

https://truckmanualshub.com/

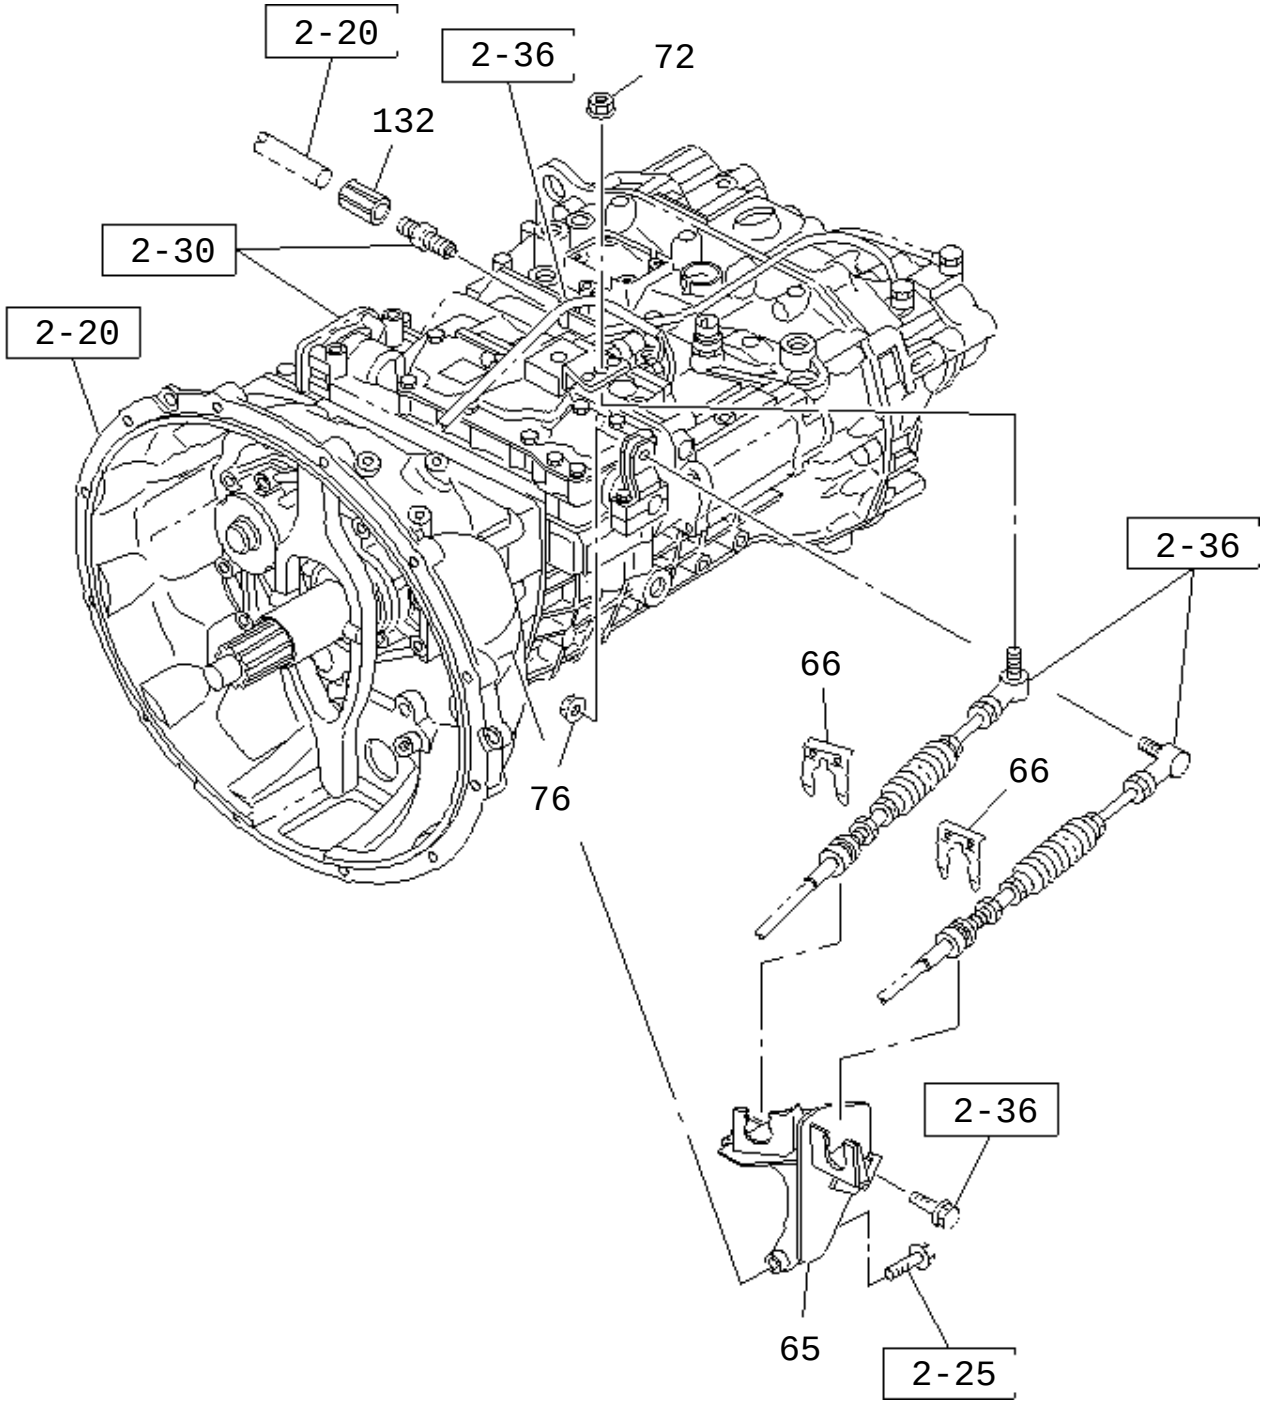


https://truckmanualshub.com/

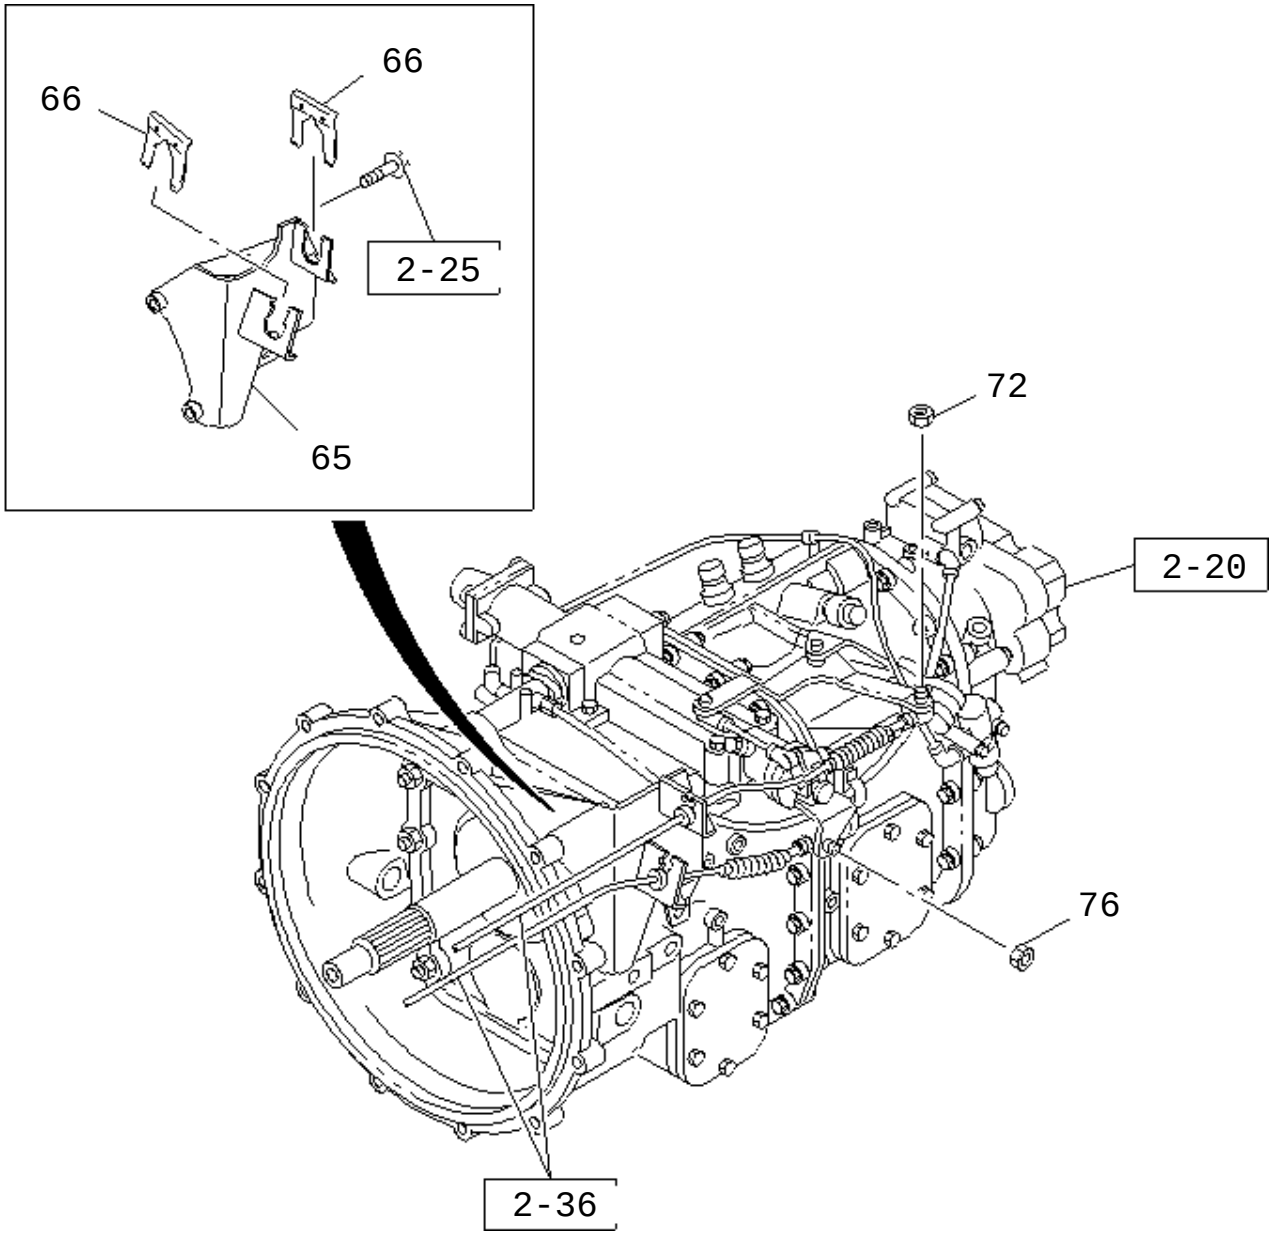

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
65		BRACKET; SHIFT TO SELECT,TRANS CONT					
		8-98250-856-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98131-609-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N)
		8-98131-609-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98131-609-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98131-609-0		1404-	01	B	
		8-98060-386-0		1312-1401	01	A	ZF9S1110 DD M/T(Y5P)
		8-98060-386-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
66		CLIP; SELECT BRKT					
		1-09701-209-1		1312-1401	02	A	ID=22.2
		1-09701-209-1		1402-1403	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) ID=22.2
		1-09701-209-1		1402-1403	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) ID=22.2
		1-09701-209-1		1404-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) ID=22.2
		1-09701-209-1		1404-	02	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) ID=22.2
		1-09701-209-1		1404-	02	B	ID=22.2
72		NUT; TRANS CONT,SELECT					
		1-09440-049-0		1312-1401	01	A	M8 FLANGE
		1-09440-049-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-049-0		1402-1403	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-049-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-049-0		1404-	01	A	ZF9S1110 DD M/T(Y5P) POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-049-0		1404-	01	B	M8 FLANGE
76		NUT; BALL JOINT,SELECT WIRE					
		1-09440-049-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) M8 FLANGE
		1-09440-049-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-049-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
		1-09440-049-0		1404-	01	B	M8 FLANGE
		1-09440-056-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) M10 FLANGE
132		CONNECTOR; FLEX HOSE					
		1-09660-873-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) DIN8 & M12 STRAIGHT
2-20		Move to 2-20					
		Move to 2-20					
2-25		Move to 2-25					
		Move to 2-25					
2-30		Move to 2-30					
		Move to 2-30					
2-36		Move to 2-36					

https://truckmanualshub.com/

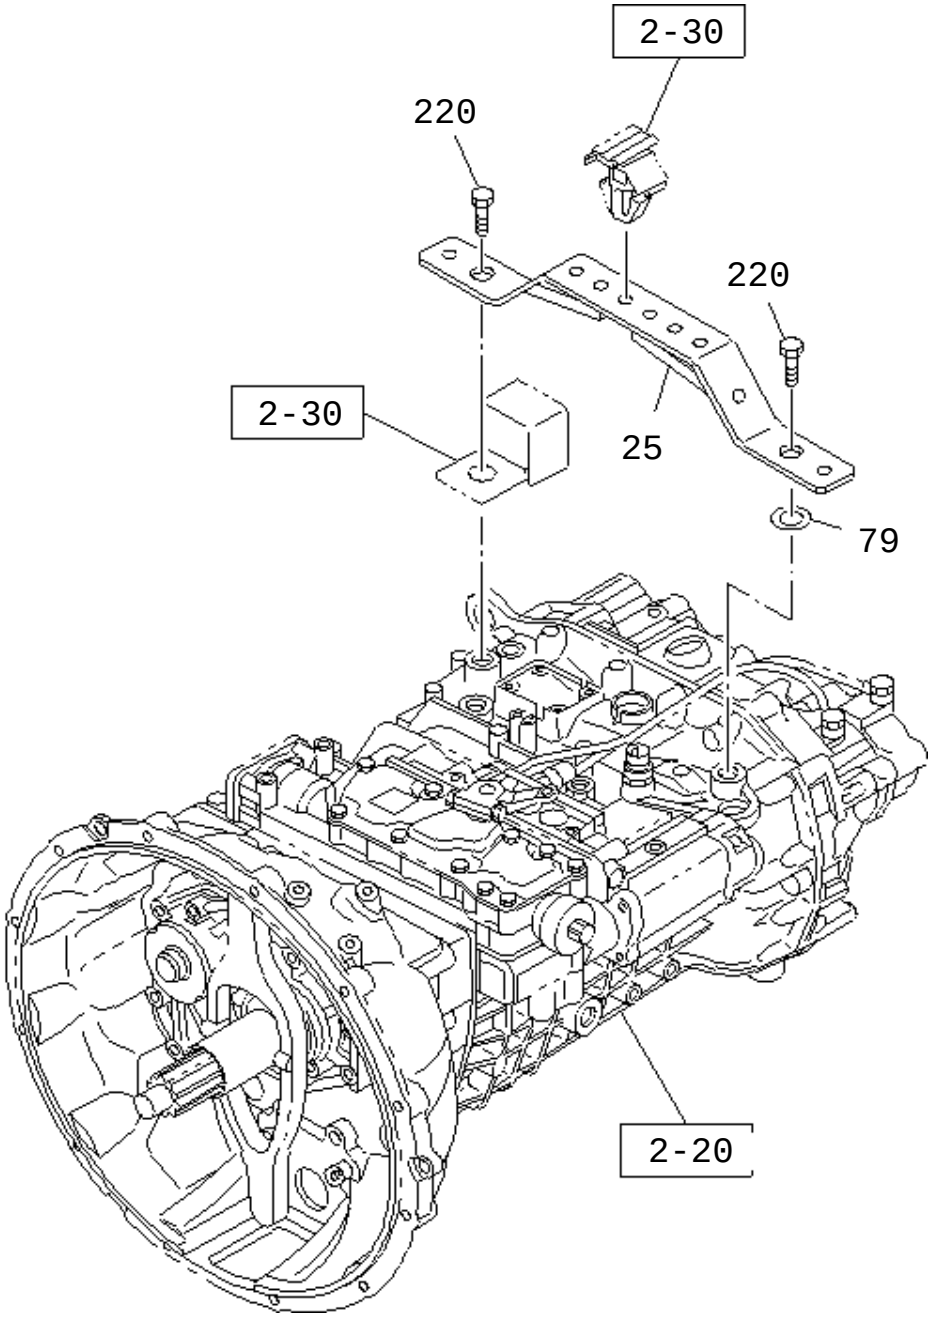


https://truckmanualshub.com/

2-38A SHIFT CONTROL -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
25		BRACKET; CLIP 8-98084-565-0		1312-	01	A	
79		WASHER; LK 9-09160-616-0		1312-	01	A	ID=17 OD=32
220		BOLT; BRKT 0-28851-625-0		1312-	02	A	M16X25 FLANGE
2-20		Move to 2-20					
		Move to 2-20					
2-30		Move to 2-30					
		Move to 2-30					

https://truckmanualshub.com/

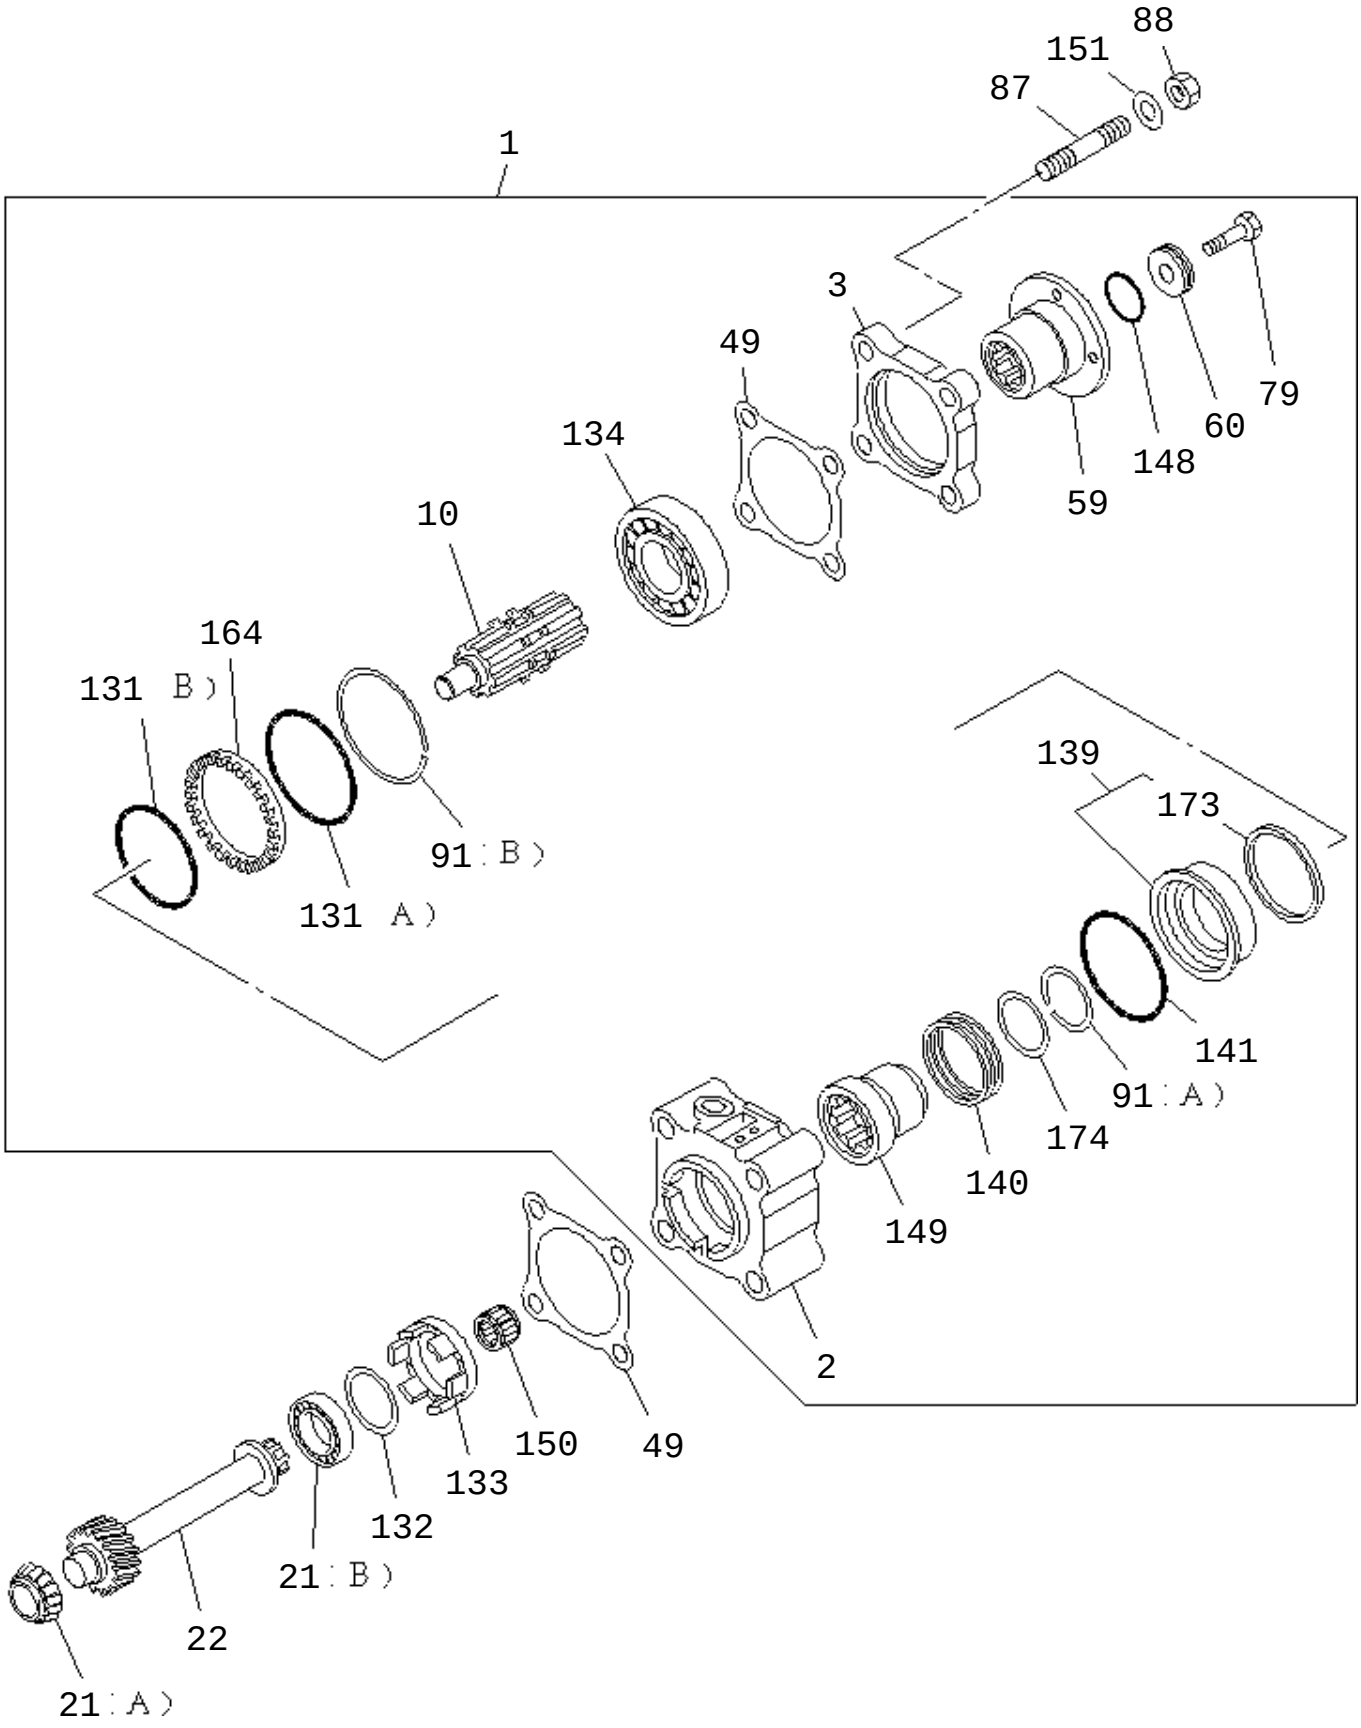

https://truckmanualshub.com/

2-82A POWER TAKE OFF; TRANSMISSION REAR -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
1		POWER TAKE OFF ASM; TRANS RR 1-38000-398-0		1312-	01	A	PTO ZF TRANS RR(BDM)
2		CASE; GEAR,TRANS RR PTO 1-38111-120-0		1312-	01	A	PTO ZF TRANS RR(BDM)
3		COVER; GEAR CASE,TRANS RR PTO 1-38159-009-0		1312-	01	A	PTO ZF TRANS RR(BDM)
10		SHAFT; PTO OUTPUT GEAR,TRANS RR PTO 1-38221-064-0		1312-	01	A	PTO ZF TRANS RR(BDM)
21		BEARING; MAIN DRIVE SHAFT,TRANS RR PTO 1-33389-068-0		1312-	01	A	PTO ZF TRANS RR(BDM) (B)
		1-33389-090-0		1312-	01	A	PTO ZF TRANS RR(BDM) (A)
22		SHAFT; MAIN DRIVE,TRANS RR PTO 1-33381-015-0		1312-	01	A	PTO ZF TRANS RR(BDM)
49		GASKET; PTO GEAR CASE TO TRANS 1-33132-084-0		1312-	02	A	PTO ZF TRANS RR(BDM)
59		YOKE; SPINDLE,PTO OUTPUT SHAFT,RR PTO 1-38229-020-0		1312-	01	A	PTO ZF TRANS RR(BDM)
60		WASHER; YOKE,OUTPUT SHAFT,RR PTO 1-38519-021-0		1312-	01	A	PTO ZF TRANS RR(BDM)
79		BOLT 1-37249-216-0		1312-	01	A	PTO ZF TRANS RR(BDM)
87		STUD; GEAR CASE 1-38119-103-0		1312-	04	A	PTO ZF TRANS RR(BDM) M12X80
88		NUT; COVER 1-38119-104-0		1312-	04	A	PTO ZF TRANS RR(BDM)
91		RING; SNAP 1-38219-037-0		1312-	01	A	PTO ZF TRANS RR(BDM) (A)
		1-38219-038-0		1312-	01	A	PTO ZF TRANS RR(BDM) (B)
131		GASKET; OUTPUT SHAFT 1-38129-035-0		1312-	01	A	PTO ZF TRANS RR(BDM) (A)
		1-38129-036-0		1312-	01	A	PTO ZF TRANS RR(BDM) (B)
132		SHIM; BRG 1-33389-048-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.55
		1-33389-050-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.45
		1-33389-052-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.35
		1-33389-053-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.30
		1-33389-056-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.20
		1-33389-057-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.15
		1-33389-059-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.05
		1-33389-060-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.00
		1-33389-062-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=0.90
		1-33389-063-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=0.85
		1-33389-065-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=0.75
		1-33389-066-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=0.70
		1-33389-067-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=0.65
		8-98080-566-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=0.80
		8-98080-567-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=0.95
		8-98080-568-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.10
		8-98080-569-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.25
		8-98080-570-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.40


https://truckmanualshub.com/


2-82A POWER TAKE OFF; TRANSMISSION REAR -A ZF M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
132		8-98080-571-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.50
		8-98080-572-0		1312-	01	A	PTO ZF TRANS RR(BDM) T=1.60
133		BUSHING; SHAFT					
		1-33389-046-0		1312-	01	A	PTO ZF TRANS RR(BDM)
134		BEARING; OUTPUT SHAFT					
		1-38219-015-0		1312-	01	A	PTO ZF TRANS RR(BDM)
139		PISTON; RR PTO					
		1-38129-039-0		1312-	01	A	PTO ZF TRANS RR(BDM)
140		SPRING; PISTON,RR PTO					
		1-38129-042-0		1312-	01	A	PTO ZF TRANS RR(BDM)
141		GASKET; PISTON,RR PTO					
		1-38129-035-0		1312-	01	A	PTO ZF TRANS RR(BDM)
148		GASKET; YOKE					
		1-38519-014-0		1312-	01	A	PTO ZF TRANS RR(BDM)
149		SLEEVE; SLIDING					
		1-38229-060-0		1312-	01	A	PTO ZF TRANS RR(BDM)
150		BEARING; OUTPUT SHAFT					
		8-98080-565-0		1312-	01	A	PTO ZF TRANS RR(BDM)
151		WASHER; PL,COVER					
		8-98080-563-0		1312-	04	A	PTO ZF TRANS RR(BDM)
164		RING; CENTERING,PTO					
		1-38129-038-0		1312-	01	A	PTO ZF TRANS RR(BDM)
173		RING; MAGNET					
		1-38129-034-0		1312-	01	A	PTO ZF TRANS RR(BDM)
174		DISK; PRESSURE					
		1-38129-040-0		1312-	01	A	PTO ZF TRANS RR(BDM)

https://truckmanualshub.com/


CONTROL LEVER

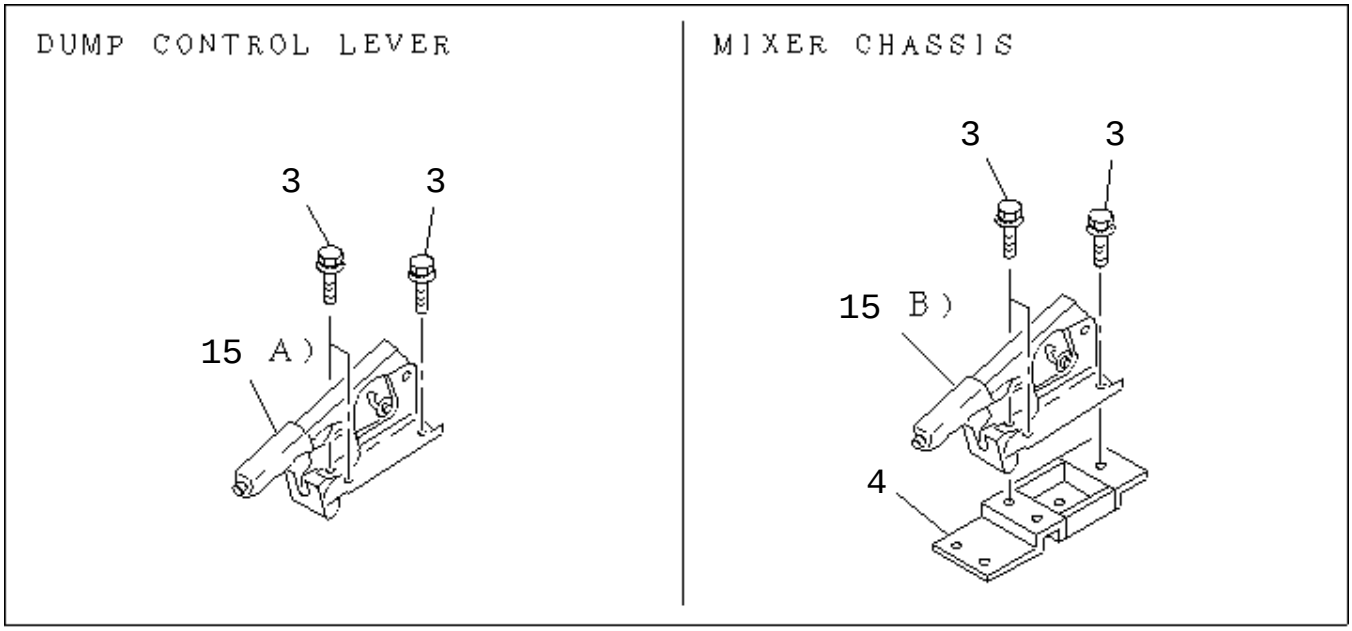


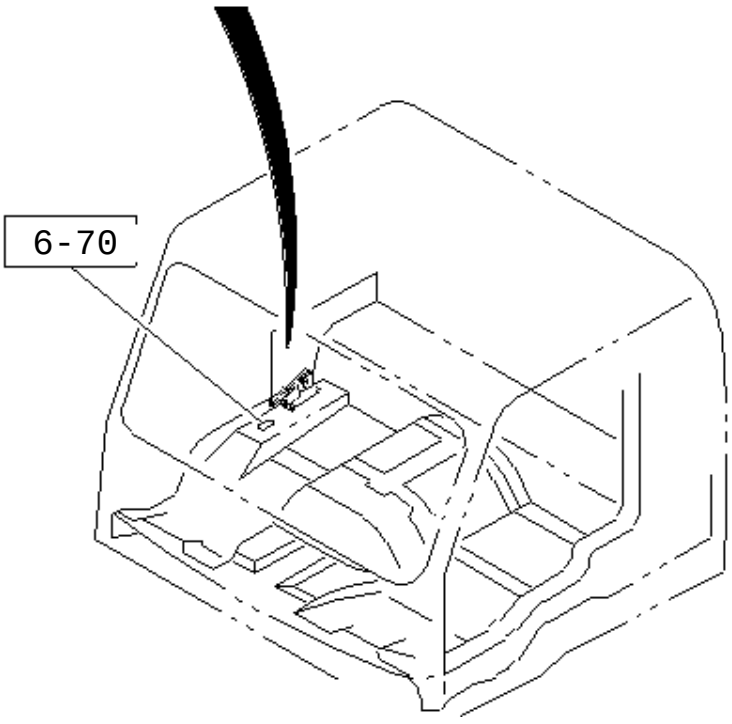

https://truckmanualshub.com/

PTO PIPING

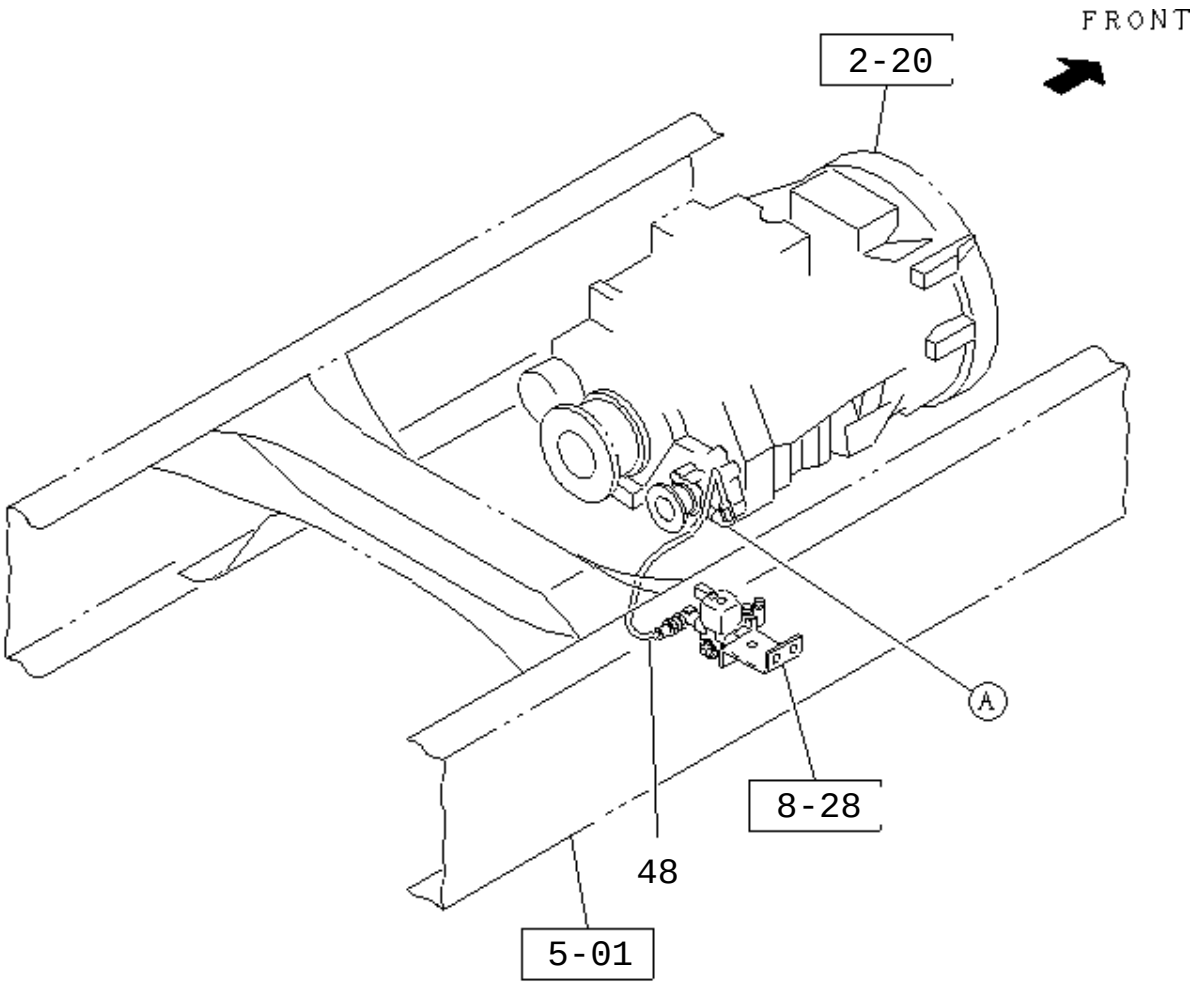


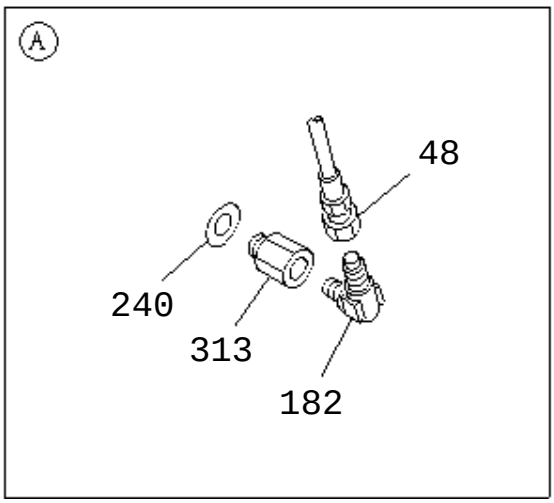

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
3		BOLT; BRKT,DUMP CONT LEVER					
		8-94279-207-0		1402-	06	A	MIXER CHASSIS<6NR> M8X20.5 W/LK&PL WASHER
		8-94279-207-0		1312-	03	A	DUMP CONTROL LEVER<RC4> M8X20.5 W/LK&PL WASHER
4		BRACKET; PTO CONT					
		8-98060-621-0		1402-	01	A	MIXER CHASSIS<6NR>
15		LEVER ASM; PTO CONT					
		1-79907-048-1		1402-	01	A	MIXER CHASSIS<6NR> (B)
		1-79996-092-0		1312-	01	A	DUMP CONTROL LEVER<RC4> (A)
48		HOSE; FLEX,PTO					
		1-09363-625-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> L=320
182		CONNECTOR; FLARE					
		1-09650-430-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) PTO ZF TRANS RR(BDM) M12 & PT1/4 ELBOW
240		GASKET; CONNECTOR,PTO					
		1-09630-084-0		1312-1312	01	A	ZF9S1110 DD M/T(Y5P) PTO ZF TRANS RR(BDM) ID=12.2
		8-98251-344-0		1401-	01	A	ZF9S1110 DD M/T(Y5P) PTO ZF TRANS RR(BDM) ID=12.2
313		ADAPTER					
		1-09654-396-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) PTO ZF TRANS RR(BDM)
6-70		Move to 6-70					
2-20		Move to 2-20					
		Move to 2-20					
5-01		Move to 5-01					
8-28		Move to 8-28					

https://truckmanualshub.com/

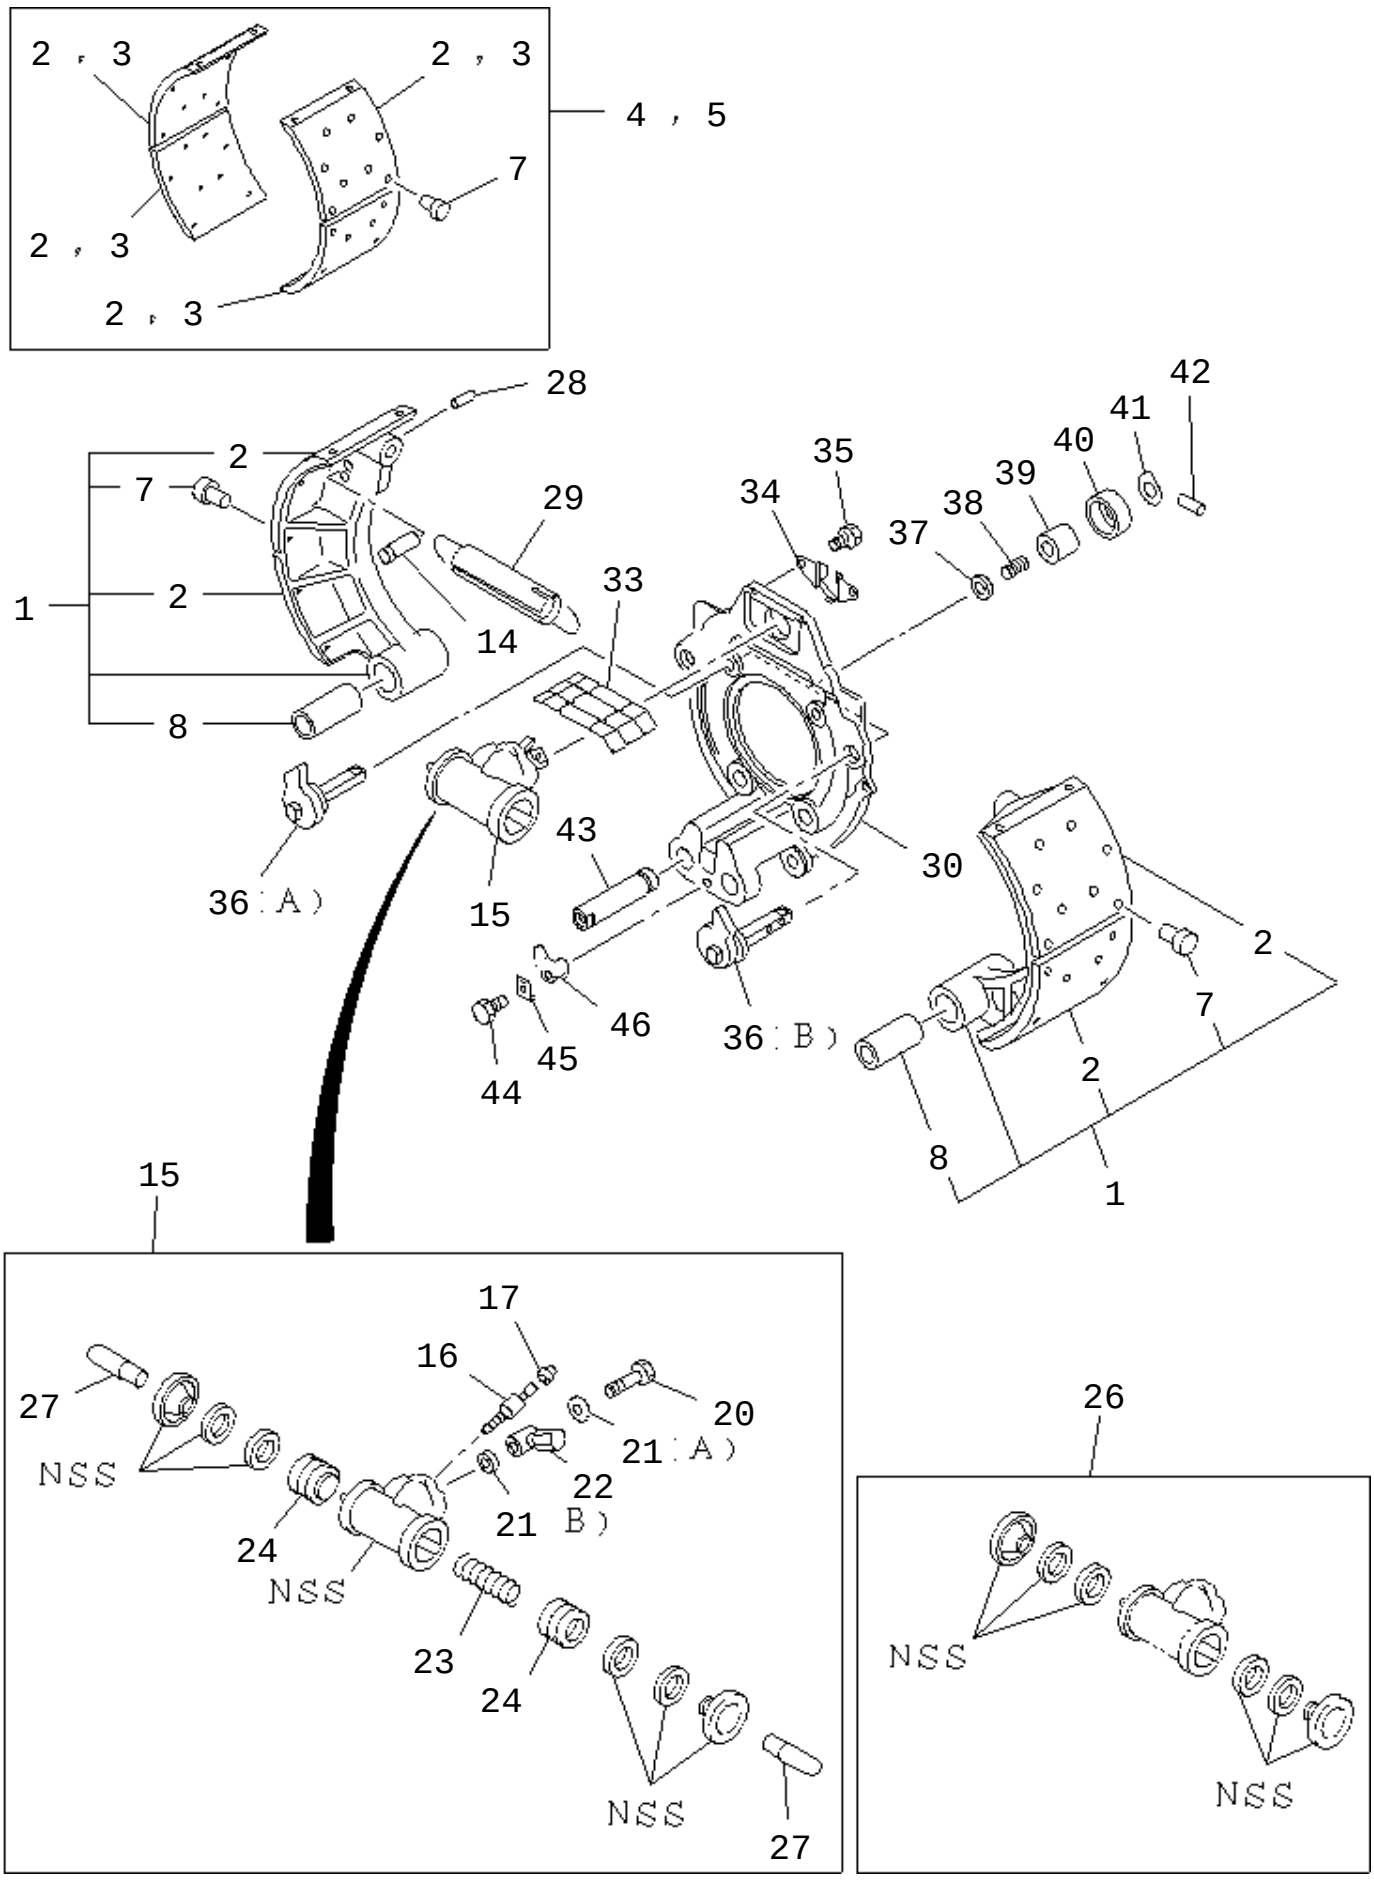

https://truckmanualshub.com/

3-01 FRONT WHEEL BRAKE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	A	SHOE; BRK,FRT						
		1-47120-706-0		1312-1403		04	A	
		1-47120-706-0		1404-		04	AB	
2		LINING; FRT BRK SHOE,STANDARD						
		1-47125-811-0		1312-1403		08	A	
		1-47125-811-0		1404-		08	AB	
3		LINING; FRT BRK SHOE,OVER SIZE						
		1-47125-812-0		1312-1403		08	A	
		1-47125-812-0		1404-		08	AB	
4	A	LINING SET; FRT BRK,STANDARD						
		1-88310-495-1		1312-1403		02	A	
		1-88310-495-1		1404-		02	AB	
5		LINING SET; FRT BRK,OVER SIZE						
		1-88310-496-1		1312-1403		02	A	
		1-88310-496-1		1404-		02	AB	
7		RIVET; LINING,FRT BRK						
		1-09732-034-0		1312-1403		80	A	L=18.5
		1-09732-034-0		1404-		80	AB	L=18.5
8		BUSHING; BRK SHOE						
		1-47112-011-0		1312-1403		04	A	
		1-47112-011-0		1404-		04	AB	
14		PIN; SHOE RETURN SPR						
		1-47119-017-1		1312-1403		04	A	L=73.5
		1-47119-017-1		1404-		04	AB	L=73.5
15	B	CYLINDER; WHEEL,FRT BRK						
		1-47600-674-0		1312-1403	R	01	A	
		1-47600-674-0		1404-	R	01	AB	
		1-47600-675-0		1312-1403	L	01	A	
		1-47600-675-0		1404-	L	01	AB	
16		SCREW; BLEEDER,FRT BRK						
		1-47615-005-0		1312-1403		02	A	L=66.5
		1-47615-005-0		1404-		02	AB	L=66.5
17		CAP; BLEEDER,FRT WHEEL CYL						
		1-47619-011-0		1312-1403		02	A	OD=12
		1-47619-011-0		1404-		02	AB	OD=12
20		BOLT; JOINT						
		1-47634-006-0		1312-1403		02	A	M12X40.5 EYE BOLT
		1-47634-006-0		1404-		02	AB	M12X40.5 EYE BOLT
21		GASKET; UNION BOLT						
		1-09630-019-0		1312-1403		02	A	(A) ID=15.2
		1-09630-019-0		1404-		02	AB	(A) ID=15.2
		1-09630-020-0		1312-1403		02	A	(B) ID=12.2
		1-09630-020-0		1404-		02	AB	(B) ID=12.2
22		JOINT; PIPE						
		1-47631-057-1		1312-1403		02	A	
		1-47631-057-1		1404-		02	AB	
23		SPRING; COIL						
		9-09940-435-0		1312-1403		02	A	
		9-09940-435-0		1404-		02	AB	
24		PISTON; FRT WHEEL CYL						
		9-47624-210-0		1312-1403		04	A	
		9-47624-210-0		1404-		04	AB	
26	A	CUP SET; FRT WHEEL CYL						
		1-87830-521-0		1312-1403		02	A	ID=47.5

https://truckmanualshub.com/

3-01 FRONT WHEEL BRAKE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
26		1-87830-521-0		1404-		02	AB	ID=47.5
27		ROD; PUSH						
		1-47621-009-0		1312-1403		04	A	
		1-47621-009-0		1404-		04	AB	
28		PIN; SHOE ADJ CAM GUIDE						
		1-47116-002-0		1312-1403		04	A	
		1-47116-002-0		1404-		04	AB	
29		SPRING; RETURN,FRT BRK SHOE						
		1-09583-269-1		1312-1403		02	A	
		1-09583-269-1		1404-		02	AB	
30		BRACKET; ANCHOR,FRT						
		1-47137-435-0		1312-1403		02	A	
		1-47137-435-0		1404-		02	AB	
33		COVER; WHEEL CYL						
		1-47159-080-0		1312-1403		02	A	
		1-47159-080-0		1404-		02	AB	
34		PLATE; DIRECTION,FRT						
		1-47159-094-0		1312-1403		02	A	
		1-47159-094-0		1404-		02	AB	
35		BOLT; FRT WHEEL CYL						
		0-50551-235-0		1312-1403		04	A	M12X35 W/LK WASHER
		0-50551-235-0		1404-		04	AB	M12X35 W/LK WASHER
36		CAM ASM; ADJ						
		1-47165-058-1		1312-1403		02	A	(A)
		1-47165-058-1		1404-		02	AB	(A)
		1-47165-059-1		1312-1403		02	A	(B)
		1-47165-059-1		1404-		02	AB	(B)
37		WASHER; ADJ CAM						
		1-47169-033-0		1312-1403		04	A	
		1-47169-033-0		1404-		04	AB	
38		SPRING; ADJ CAM						
		1-47169-046-0		1312-1403		04	A	
		1-47169-046-0		1404-		04	AB	
39		BOOT; ADJ CAM						
		1-47169-034-0		1312-1403		04	A	
		1-47169-034-0		1404-		04	AB	
40		COVER; BOOT,ADJ CAM						
		1-47169-031-0		1312-1403		04	A	
		1-47169-031-0		1404-		04	AB	
41		INDICATOR						
		1-47169-032-1		1312-1403		04	A	
		1-47169-032-1		1404-		04	AB	
42		PIN; SPINDLE						
		1-47169-030-0		1312-1403		04	A	
		1-47169-030-0		1404-		04	AB	
43		PIN; ANCHOR						
		1-47131-038-0		1312-1403		04	A	L=106.5
		1-47131-038-0		1404-		04	AB	L=106.5
44		BOLT; LOCK,ANCHOR PIN						
		0-20851-016-0		1312-1403		02	A	M10X16
		0-20851-016-0		1404-		02	AB	M10X16
45		WASHER; LK						
		1-47133-011-0		1312-1403		02	A	
		1-47133-011-0		1404-		02	AB	
46		PLATE; LOCK						
		1-47133-005-0		1312-1403		02	A	
		1-47133-005-0		1404-		02	AB	

https://truckmanualshub.com/

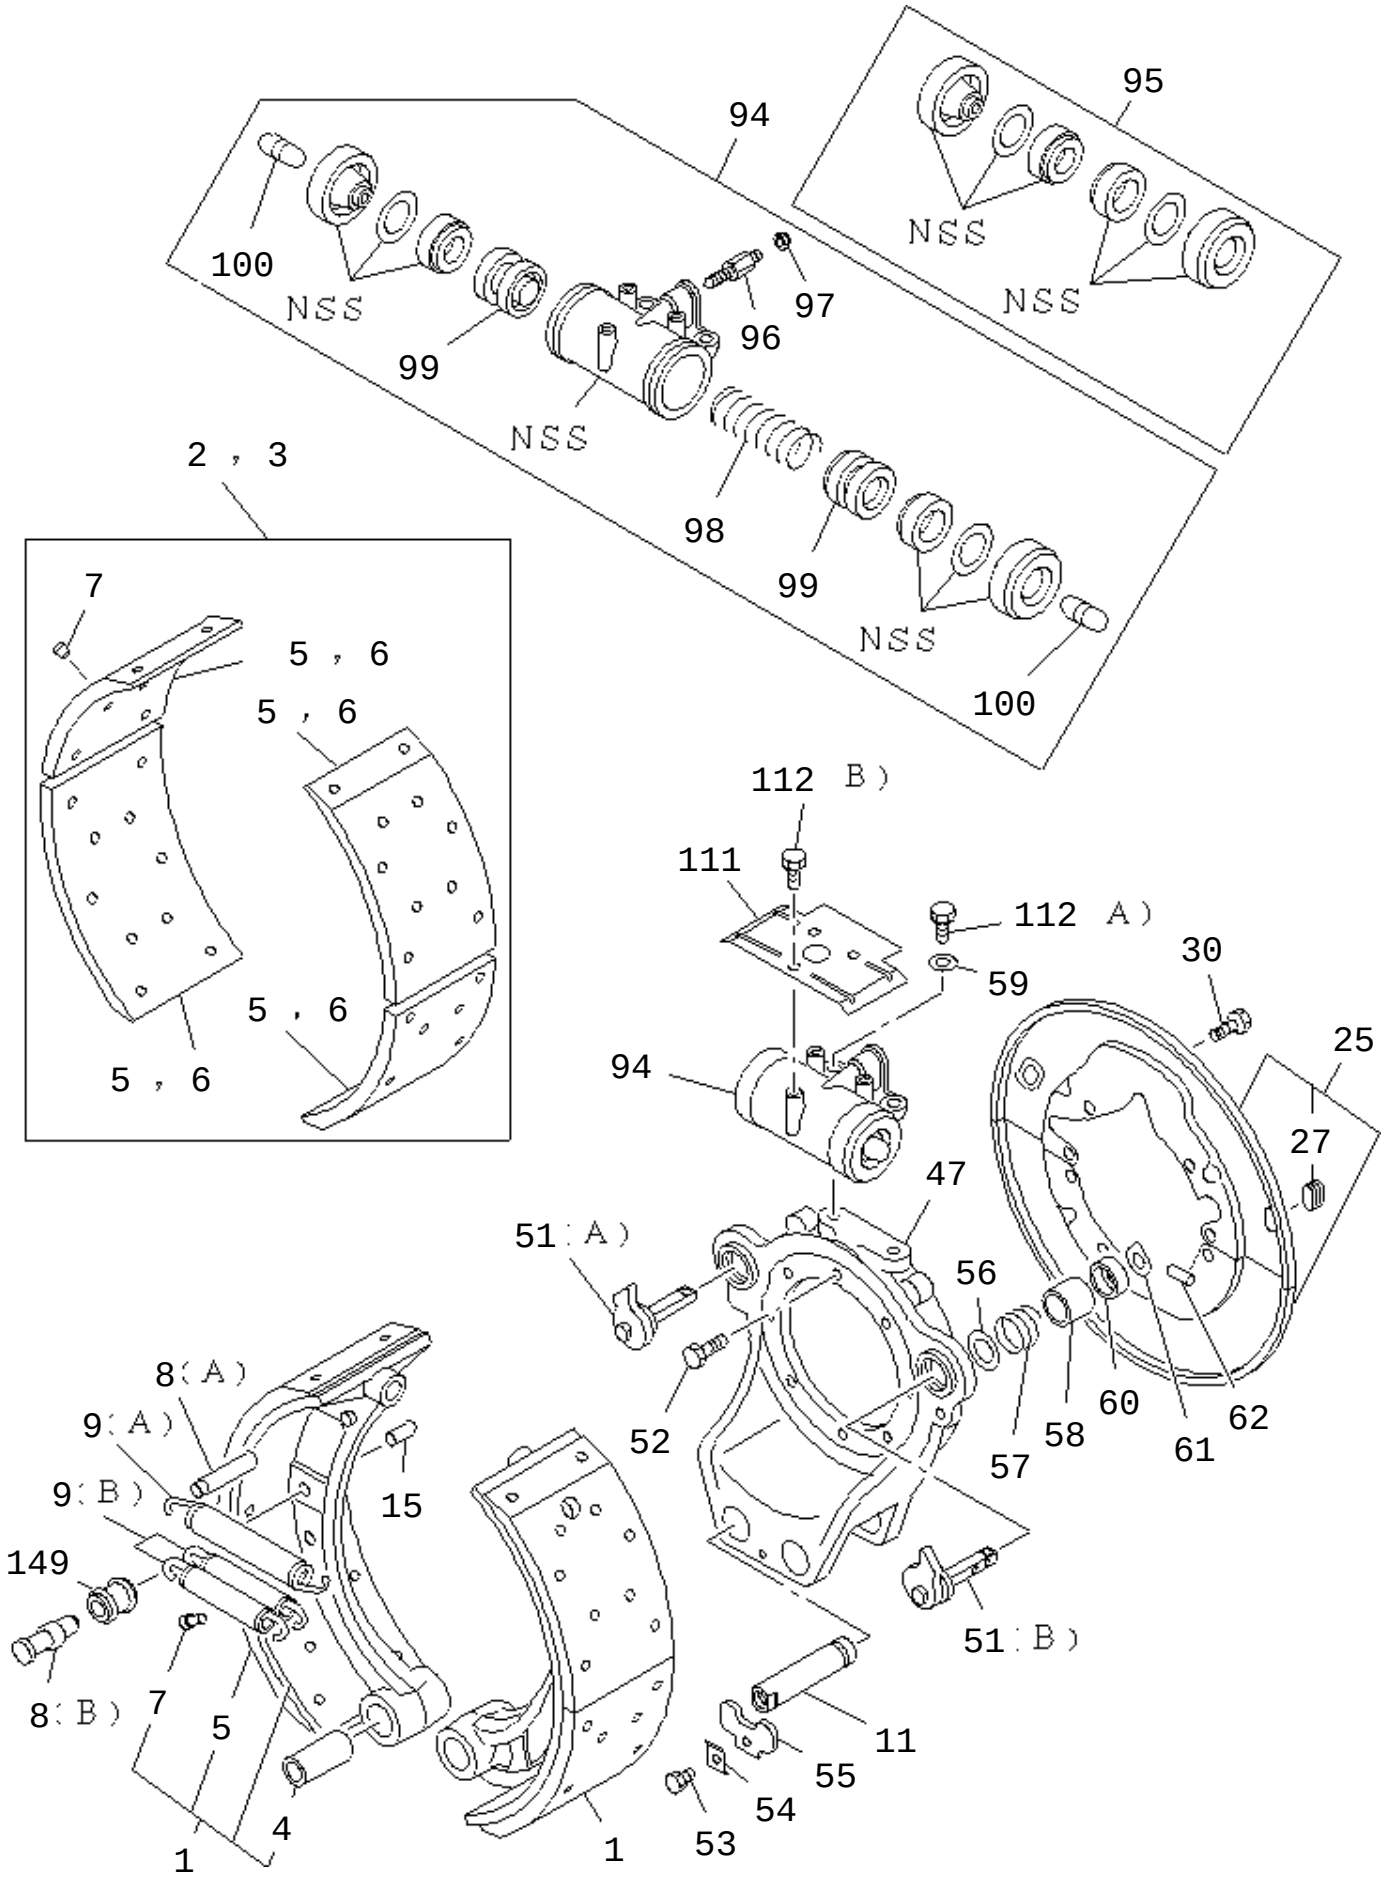

https://truckmanualshub.com/

3-05 REAR WHEEL BRAKE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	A	SHOE; BRK,RR					
		1-47120-434-0		1312-1403	04	A	
		1-47120-434-0		1312-1403	04	A	
		1-47120-434-0		1404-	04	AB	
		1-47120-434-0		1404-	04	AB	
2	A	LINING SET; RR BRK,STANDARD					
		1-88310-385-1		1312-1403	02	A	
		1-88310-385-1		1312-1403	02	A	
		1-88310-385-1		1404-	02	AB	
		1-88310-385-1		1404-	02	AB	
3		LINING SET; RR BRK,OVER SIZE					
		1-88310-386-1		1312-1403	02	A	
		1-88310-386-1		1312-1403	02	A	
		1-88310-386-1		1404-	02	AB	
		1-88310-386-1		1404-	02	AB	
4		BUSHING; BRK SHOE,RR WHEEL					
		1-47112-012-0		1312-1403	04	A	
		1-47112-012-0		1312-1403	04	A	
		1-47112-012-0		1404-	04	AB	
		1-47112-012-0		1404-	04	AB	
5		LINING; RR BRK SHOE,STANDARD					
		1-47125-537-0		1312-1403	08	A	
		1-47125-537-0		1312-1403	08	A	
		1-47125-537-0		1404-	08	AB	
		1-47125-537-0		1404-	08	AB	
6		LINING; RR BRK SHOE,OVER SIZE					
		1-47125-538-0		1312-1403	08	A	
		1-47125-538-0		1312-1403	08	A	
		1-47125-538-0		1404-	08	AB	
		1-47125-538-0		1404-	08	AB	
7		RIVET; LINING,RR BRK					
		1-09732-035-0		1312-1403	AR	A	L=19.5
		1-09732-035-0		1312-1403	AR	A	L=19.5
		1-09732-035-0		1404-	AR	AB	L=19.5
		1-09732-035-0		1404-	AR	AB	L=19.5
8		PIN; RETURN SPRING,RR BRK SHOE					
		1-09744-051-0		1312-1403	04	A	(B)
		1-09744-051-0		1312-1403	04	A	(B)
		1-09744-051-0		1404-	04	AB	(B)
		1-09744-051-0		1404-	04	AB	(B)
		1-47119-025-0		1312-1403	04	A	(A)
		1-47119-025-0		1312-1403	04	A	(A)
		1-47119-025-0		1404-	04	AB	(A)
		1-47119-025-0		1404-	04	AB	(A)
9		SPRING; RETURN,BRK SHOE					
		1-09583-210-0		1312-1403	02	A	(B)
		1-09583-210-0		1312-1403	02	A	(B)
		1-09583-210-0		1404-	02	AB	(B)
		1-09583-210-0		1404-	02	AB	(B)
		1-09583-277-2		1312-1403	02	A	(A)
		1-09583-277-2		1312-1403	02	A	(A)
		1-09583-277-2		1404-	02	AB	(A)
		1-09583-277-2		1404-	02	AB	(A)
11		PIN; ANCHOR,RR WHEEL BRK					

https://truckmanualshub.com/

3-05 REAR WHEEL BRAKE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
11		1-47131-039-0		1312-1403	04	A	L=121.5
		1-47131-039-0		1312-1403	04	A	L=121.5
		1-47131-039-0		1404-	04	AB	L=121.5
		1-47131-039-0		1404-	04	AB	L=121.5
15		PIN; GUIDE,ADJ CAM,RR WHEEL BRK					
		1-47116-005-0		1312-1403	04	A	
		1-47116-005-0		1312-1403	04	A	
		1-47116-005-0		1404-	04	AB	
		1-47116-005-0		1404-	04	AB	
25		COVER SET; RR BRK DRUM					
		1-47151-664-0		1312-1403	02	A	
		1-47151-664-0		1312-1403	02	A	
		1-47151-664-0		1404-	02	AB	
		1-47151-664-0		1404-	02	AB	
27		COVER; CHECK HOLE,DRUM COVER					
		1-09333-151-0		1312-1403	04	A	
		1-09333-151-0		1312-1403	04	A	
		1-09333-151-0		1404-	04	AB	
		1-09333-151-0		1404-	04	AB	
30		BOLT; DRUM COVER					
		1-47159-187-0		1312-1403	12	A	M10X12
		1-47159-187-0		1312-1403	12	A	M10X12
		1-47159-187-0		1404-	12	AB	M10X12
		1-47159-187-0		1404-	12	AB	M10X12
47		BRACKET; ANCHOR PIN,RR WHEEL BRK					
		1-47137-151-0		1312-1403	02	A	
		1-47137-151-0		1312-1403	02	A	
		1-47137-151-0		1404-	02	AB	
		1-47137-151-0		1404-	02	AB	
51		CAM ASM; SHOE ADJ,RR WHEEL BRK					
		1-47165-076-0		1312-1403	02	A	(A)
		1-47165-076-0		1312-1403	02	A	(A)
		1-47165-076-0		1404-	02	AB	(A)
		1-47165-076-0		1404-	02	AB	(A)
		1-47165-077-0		1312-1403	02	A	(B)
		1-47165-077-0		1312-1403	02	A	(B)
		1-47165-077-0		1404-	02	AB	(B)
		1-47165-077-0		1404-	02	AB	(B)
52		BOLT; ANCHOR BRKT					
		1-09040-066-0		1312-1403	02	A	M14X50
		1-09040-066-0		1312-1403	02	A	M14X50
		1-09040-066-0		1404-	02	AB	M14X50
		1-09040-066-0		1404-	02	AB	M14X50
53		BOLT; LOCK PLATE					
		0-20851-016-0		1312-1403	02	A	M10X16
		0-20851-016-0		1312-1403	02	A	M10X16
		0-20851-016-0		1404-	02	AB	M10X16
		0-20851-016-0		1404-	02	AB	M10X16
54		WASHER; LK,ANCHOR PIN,RR BRK					
		1-47133-011-0		1312-1403	02	A	

https://truckmanualshub.com/


3-05 REAR WHEEL BRAKE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
54		1-47133-011-0		1312-1403	02	A	
		1-47133-011-0		1404-	02	AB	
		1-47133-011-0		1404-	02	AB	
55		PLATE; LK,RR WHEEL CYL					
		1-47133-005-0		1312-1403	02	A	
		1-47133-005-0		1312-1403	02	A	
		1-47133-005-0		1404-	02	AB	
		1-47133-005-0		1404-	02	AB	
56		WASHER; ADJ CAM,RR WHEEL BRK					
		1-47169-033-0		1312-1403	04	A	
		1-47169-033-0		1312-1403	04	A	
		1-47169-033-0		1404-	04	AB	
		1-47169-033-0		1404-	04	AB	
57		SPRING; ADJ CAM,RR WHEEL BRK					
		1-09580-508-0		1312-1403	04	A	
		1-09580-508-0		1312-1403	04	A	
		1-09580-508-0		1404-	04	AB	
		1-09580-508-0		1404-	04	AB	
58		BOOT; ADJ CAM,RR WHEEL BRK					
		1-47169-039-0		1312-1403	04	A	
		1-47169-039-0		1312-1403	04	A	
		1-47169-039-0		1404-	04	AB	
		1-47169-039-0		1404-	04	AB	
59		WASHER; LK,RR WHEEL CYL					
		0-91510-514-0		1312-1403	04	A	ID=14.2
		0-91510-514-0		1312-1403	04	A	ID=14.2
		0-91510-514-0		1404-	04	AB	ID=14.2
		0-91510-514-0		1404-	04	AB	ID=14.2
60		COVER; ADJ CAM BOOT,RR WHEEL BRK					
		1-47169-031-0		1312-1403	04	A	
		1-47169-031-0		1312-1403	04	A	
		1-47169-031-0		1404-	04	AB	
		1-47169-031-0		1404-	04	AB	
61		INDICATOR; WEAR,RR BRK SHOE					
		1-47169-032-1		1312-1403	04	A	
		1-47169-032-1		1312-1403	04	A	
		1-47169-032-1		1404-	04	AB	
		1-47169-032-1		1404-	04	AB	
62		PIN; ADJ CAM SPINDLE,RR WHEEL BRK					
		1-47169-030-0		1312-1403	04	A	
		1-47169-030-0		1312-1403	04	A	
		1-47169-030-0		1404-	04	AB	
		1-47169-030-0		1404-	04	AB	
94	B	CYLINDER; WHEEL,RR BRK					
		1-47601-126-0		1312-1403	02	A	
		1-47601-126-0		1312-1403	02	A	
		1-47601-126-0		1404-	02	AB	
		1-47601-126-0		1404-	02	AB	
95	A	CUP SET; RR WHEEL CYL					
		1-87830-720-0		1312-1403	02	A	
		1-87830-720-0		1312-1403	02	A	
		1-87830-720-0		1404-	02	AB	
		1-87830-720-0		1404-	02	AB	
96		SCREW; BLEEDER,RR BRK					
		1-47615-005-0		1312-1403	02	A	L=66.5
		1-47615-005-0		1312-1403	02	A	L=66.5
		1-47615-005-0		1404-	02	AB	L=66.5
		1-47615-005-0		1404-	02	AB	L=66.5
97		CAP; BLEEDER,RR WHEEL CYL					
		1-47619-011-0		1312-1403	02	A	OD=12
		1-47619-011-0		1312-1403	02	A	OD=12
		1-47619-011-0		1404-	02	AB	OD=12

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
97		1-47619-011-0		1404-	02	AB	OD=12
98		SPRING; RR WHEEL CYL					
		1-09580-019-0		1312-1403	02	A	
		1-09580-019-0		1312-1403	02	A	
		1-09580-019-0		1404-	02	AB	
		1-09580-019-0		1404-	02	AB	
99		PISTON; RR WHEEL CYL					
		1-47624-391-0		1312-1403	04	A	
		1-47624-391-0		1312-1403	04	A	
		1-47624-391-0		1404-	04	AB	
		1-47624-391-0		1404-	04	AB	
100		ROD; PUSH,RR WHEEL CYL					
		1-47621-009-0		1312-1403	04	A	
		1-47621-009-0		1312-1403	04	A	
		1-47621-009-0		1404-	04	AB	
		1-47621-009-0		1404-	04	AB	
111		COVER; WHEEL CYL					
		1-47159-081-0		1312-1403	02	A	
		1-47159-081-0		1312-1403	02	A	
		1-47159-081-0		1404-	02	AB	
		1-47159-081-0		1404-	02	AB	
112		BOLT; WHEEL CYL SETTING					
		0-20851-435-0		1312-1403	04	A	(A) M14X35
		0-20851-435-0		1312-1403	04	A	(A) M14X35
		0-20851-435-0		1404-	04	AB	(A) M14X35
		0-20851-435-0		1404-	04	AB	(A) M14X35
		0-50540-816-0		1312-1403	06	A	(B) M8X16 W/LK WASHER
		0-50540-816-0		1312-1403	06	A	(B) M8X16 W/LK WASHER
		0-50540-816-0		1404-	06	AB	(B) M8X16 W/LK WASHER
		0-50540-816-0		1404-	06	AB	(B) M8X16 W/LK WASHER
149		PIN; GUIDE RETURN					
		1-47119-024-0		1312-1403	04	A	
		1-47119-024-0		1312-1403	04	A	
		1-47119-024-0		1404-	04	AB	
		1-47119-024-0		1404-	04	AB	

https://truckmanualshub.com/

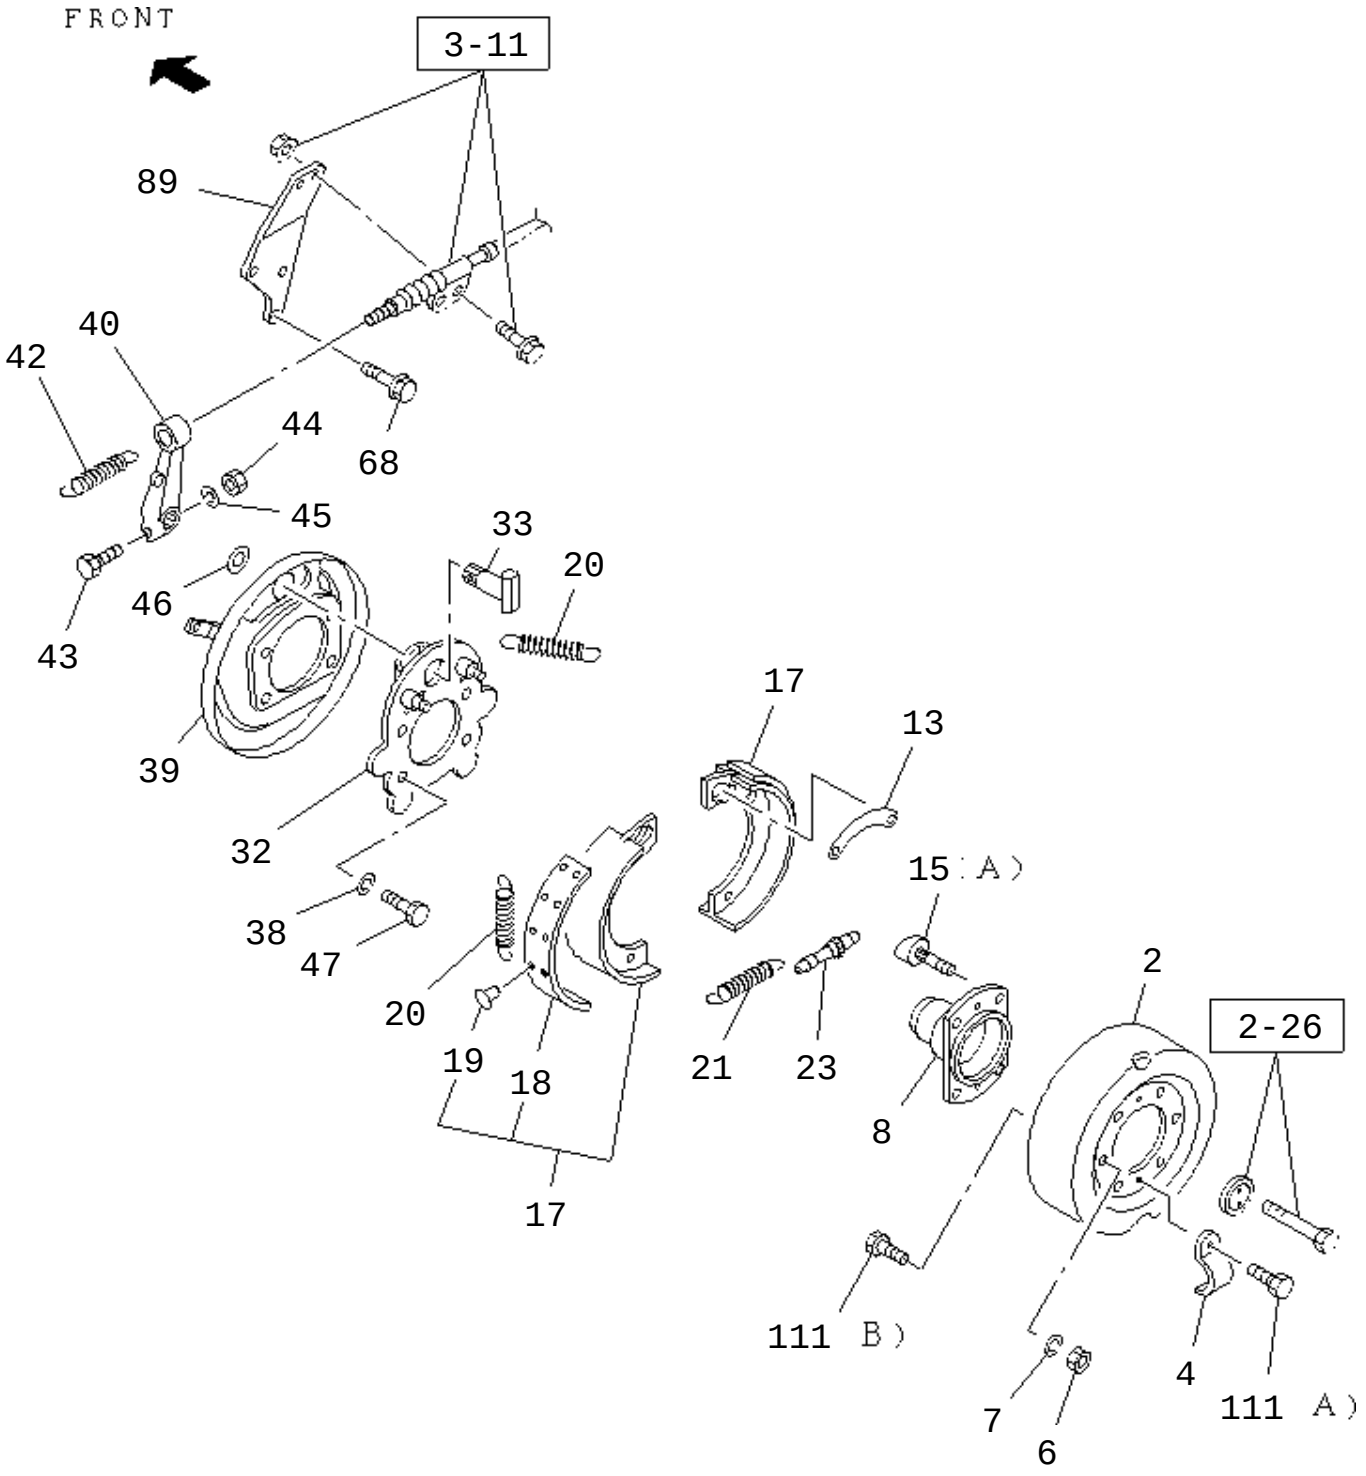


https://truckmanualshub.com/

3-08A PARKING BRAKE -A ZF M/T

KEY	R/C	PART NAME / PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A ZF9S1110 DD M/T(Y5P)
2		DRUM; PARKING BRK 1-46211-026-1		1312-	01	A	
4		COVER; ADJ HOLE 8-98031-861-0		1312-	02	A	
6		NUT; FLANGE 0-91110-516-0		1312-	02	A	M16
7		WASHER; LK,FLANGE 0-91510-516-0		1312-	02	A	ID=16.2
8		FLANGE; PARKING BRK 8-98184-079-0		1312-	01	A	
13		BRACE; PARKING BRK 9-46239-002-0		1312-	01	A	
15		BOLT; FLANGE 8-98023-172-0		1312-	04	A	(A) M16X55
17	B	SHOE; PARKING BRK 1-46220-022-1		1312-	02	A	
18		LINING; BRK,PARKING 1-46225-023-0		1312-	02	A	
19		RIVET; LINING,PARKING BRK 1-09732-058-0		1312-	32	A	
20		SPRING; RETURN,SECONDARY,PARKING BRK 9-09942-434-0		1312-	02	A	
21		SPRING; RETURN,PARKING BRK SHOE 9-09942-516-0		1312-	01	A	
23		SCREW; ADJ,PARKING BRK SHOE 1-46240-003-0		1312-	01	A	
32		PLATE; SUPPORT,PARKING BRK 1-46213-096-0		1312-	01	A	
33		SHAFT; CAM,PARKING BRK 1-46251-010-0		1312-	01	A	
38		WASHER; LK,SUPPORT PLATE 0-91510-516-0		1312-	04	A	ID=16.2
39		COVER; DUST,PARKING BRK 1-46213-093-0		1312-	01	A	
40		LEVER; CM/SHF,PARKING BRK 1-46252-046-0		1312-	01	A	
42		SPRING; RETURN,LEVER 1-09583-104-0		1312-	01	A	
43		BOLT; LEVER TO CM/SHF 8-98061-595-0		1312-	01	A	
44		NUT; LEVER TO CM/SHF 0-91111-510-0		1312-	01	A	M10
45		WASHER; LK,LEVER TO CM/SHF 0-91510-510-0		1312-	01	A	ID=10.2
46		WASHER; LEVER 9-09855-362-0		1312-	01	A	
47		BOLT; SUPPORT PLATE 0-20851-640-0		1312-	04	A	M16X40
68		BOLT; BRKT,PARKING BRK CONT 0-28151-025-0		1312-	03	A	M10X25 FLANGE
89		BRACKET; PARKING BRK CONT 1-46147-305-0		1312-	01	A	
111		BOLT; COVER,CHECK HOLE 0-20801-630-0		1312-	02	A	(B) M16X30
		0-50540-820-0		1312-	02	A	(A) M8X20 W/LK WASHER
2-26		Move to 2-26					
		Move to 2-26					
3-11		Move to 3-11					

https://truckmanualshub.com/

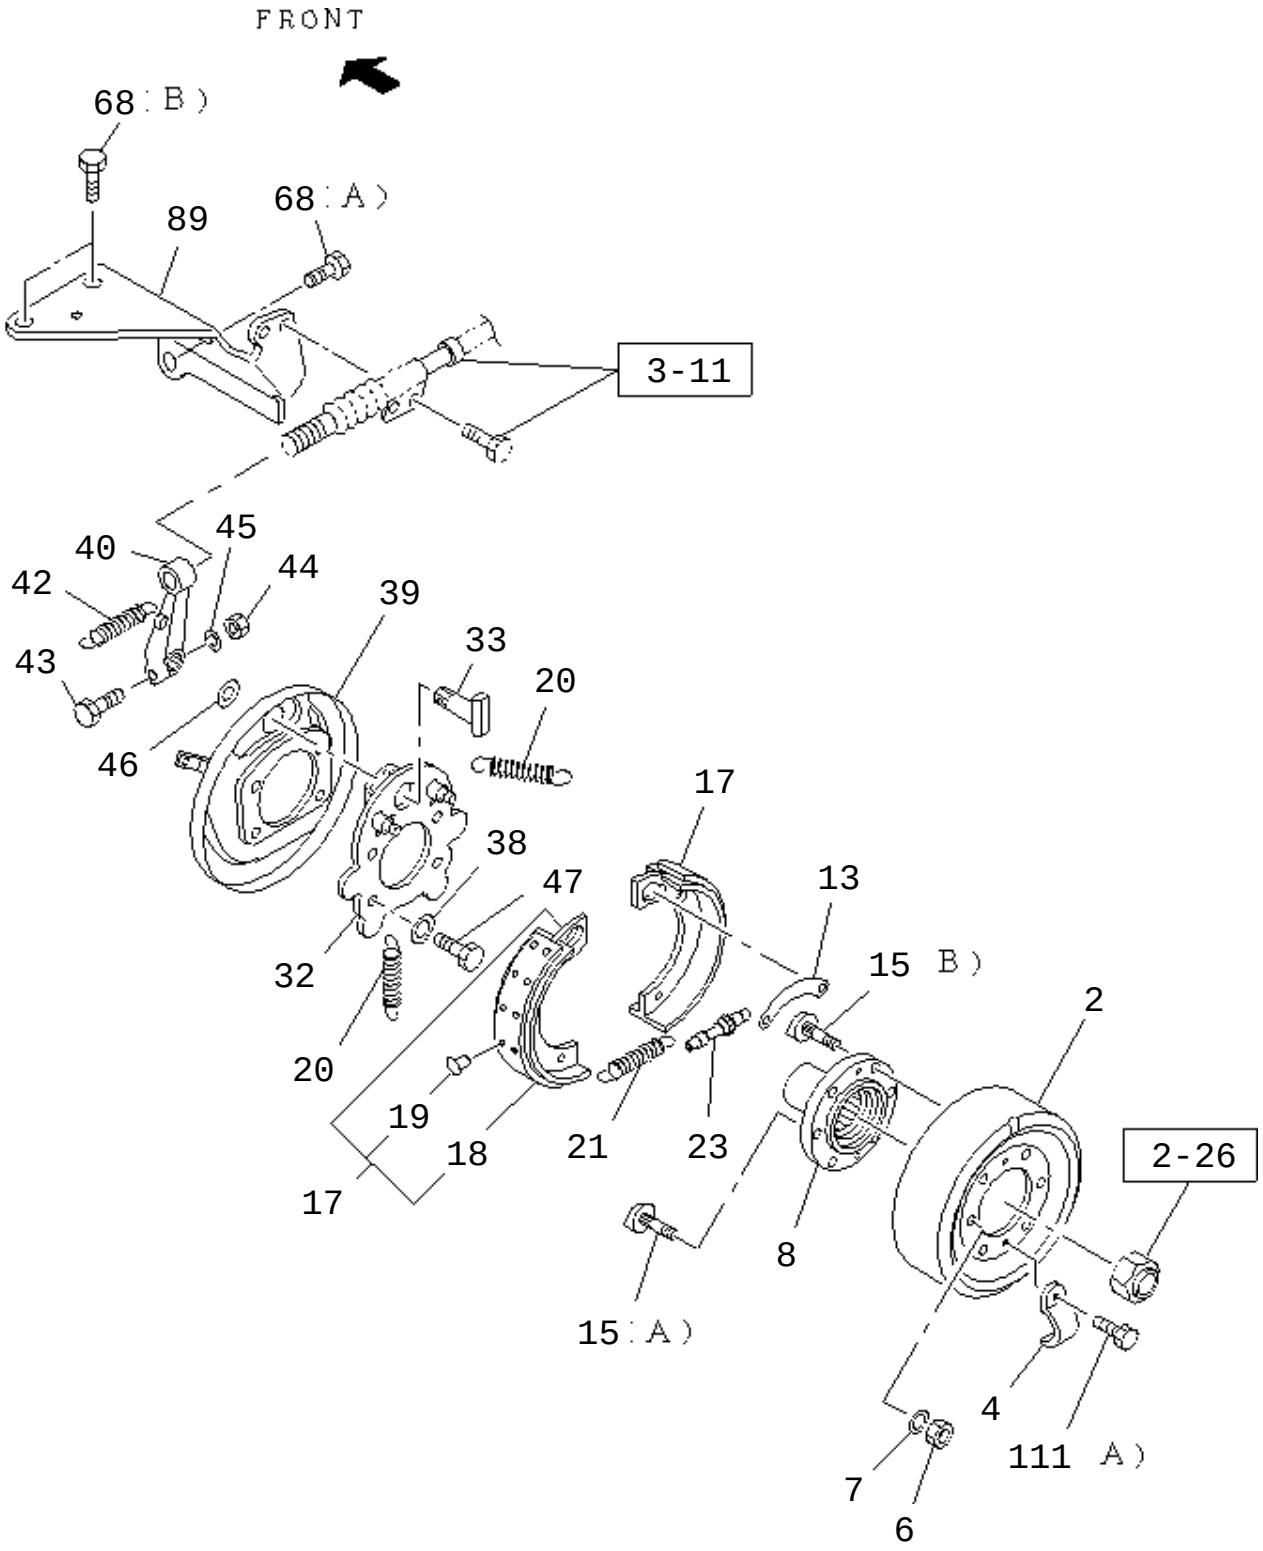


https://truckmanualshub.com/


3-08B PARKING BRAKE -B FULLER M/T

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FULLER ES11109 DD M/T(Y5N)
2		DRUM; PARKING BRK					
		1-46211-026-1		1312-	01	A	
4		COVER; ADJ HOLE					
		8-98031-861-0		1312-	02	A	
6		NUT; FLANGE					
		0-91110-516-0		1312-	02	A	
							M16
7		WASHER; LK,FLANGE					
		0-91510-516-0		1312-	02	A	
							ID=16.2
8		FLANGE; PARKING BRK					
		1-37243-311-0		1312-	01	A	
13		BRACE; PARKING BRK					
		9-46239-002-0		1312-	01	A	
15		BOLT; FLANGE					
		8-98023-172-0		1312-	04	A	
							(A) M16X55
		1-46219-010-0		1312-	02	A	
							(B) M16X38
17	B	SHOE; PARKING BRK					
		1-46220-022-1		1312-	02	A	
18		LINING; BRK,PARKING					
		1-46225-023-0		1312-	02	A	
19		RIVET; LINING,PARKING BRK					
		1-09732-058-0		1312-	32	A	
20		SPRING; RETURN,SECONDARY,PARKING BRK					
		9-09942-434-0		1312-	02	A	
21		SPRING; RETURN,PARKING BRK SHOE					
		9-09942-516-0		1312-	01	A	
23		SCREW; ADJ,PARKING BRK SHOE					
		1-46240-003-0		1312-	01	A	
32		PLATE; SUPPORT,PARKING BRK					
		1-46213-096-0		1312-	01	A	
33		SHAFT; CAM,PARKING BRK					
		1-46251-010-0		1312-	01	A	
38		WASHER; LK,SUPPORT PLATE					
		0-91510-516-0		1312-	04	A	
							ID=16.2
39		COVER; DUST,PARKING BRK					
		1-46213-093-0		1312-	01	A	
40		LEVER; CM/SHF,PARKING BRK					
		1-46252-046-0		1312-	01	A	
42		SPRING; RETURN,LEVER					
		1-09583-104-0		1312-	01	A	
43		BOLT; LEVER TO CM/SHF					
		8-98061-595-0		1312-	01	A	
44		NUT; LEVER TO CM/SHF					
		0-91111-510-0		1312-	01	A	
							M10
45		WASHER; LK,LEVER TO CM/SHF					
		0-91510-510-0		1312-	01	A	
							ID=10.2
46		WASHER; LEVER					
		9-09855-362-0		1312-	01	A	
47		BOLT; SUPPORT PLATE					
		0-23851-640-0		1312-	04	A	
68		BOLT; BRKT,PARKING BRK CONT					
		0-28751-225-0		1312-	01	A	
							(A) M12X25 FLANGE
		0-28951-425-0		1312-	02	A	
							(B) M14X25 FLANGE
89		BRACKET; PARKING BRK CONT					
		1-46147-273-2		1312-	01	A	
111		BOLT; COVER,CHECK HOLE					
		0-50740-820-0		1312-	02	A	
							(A) M8X20 W/LK WASHER
2-26		Move to 2-26					
		Move to 2-26					
3-11		Move to 3-11					

https://truckmanualshub.com/

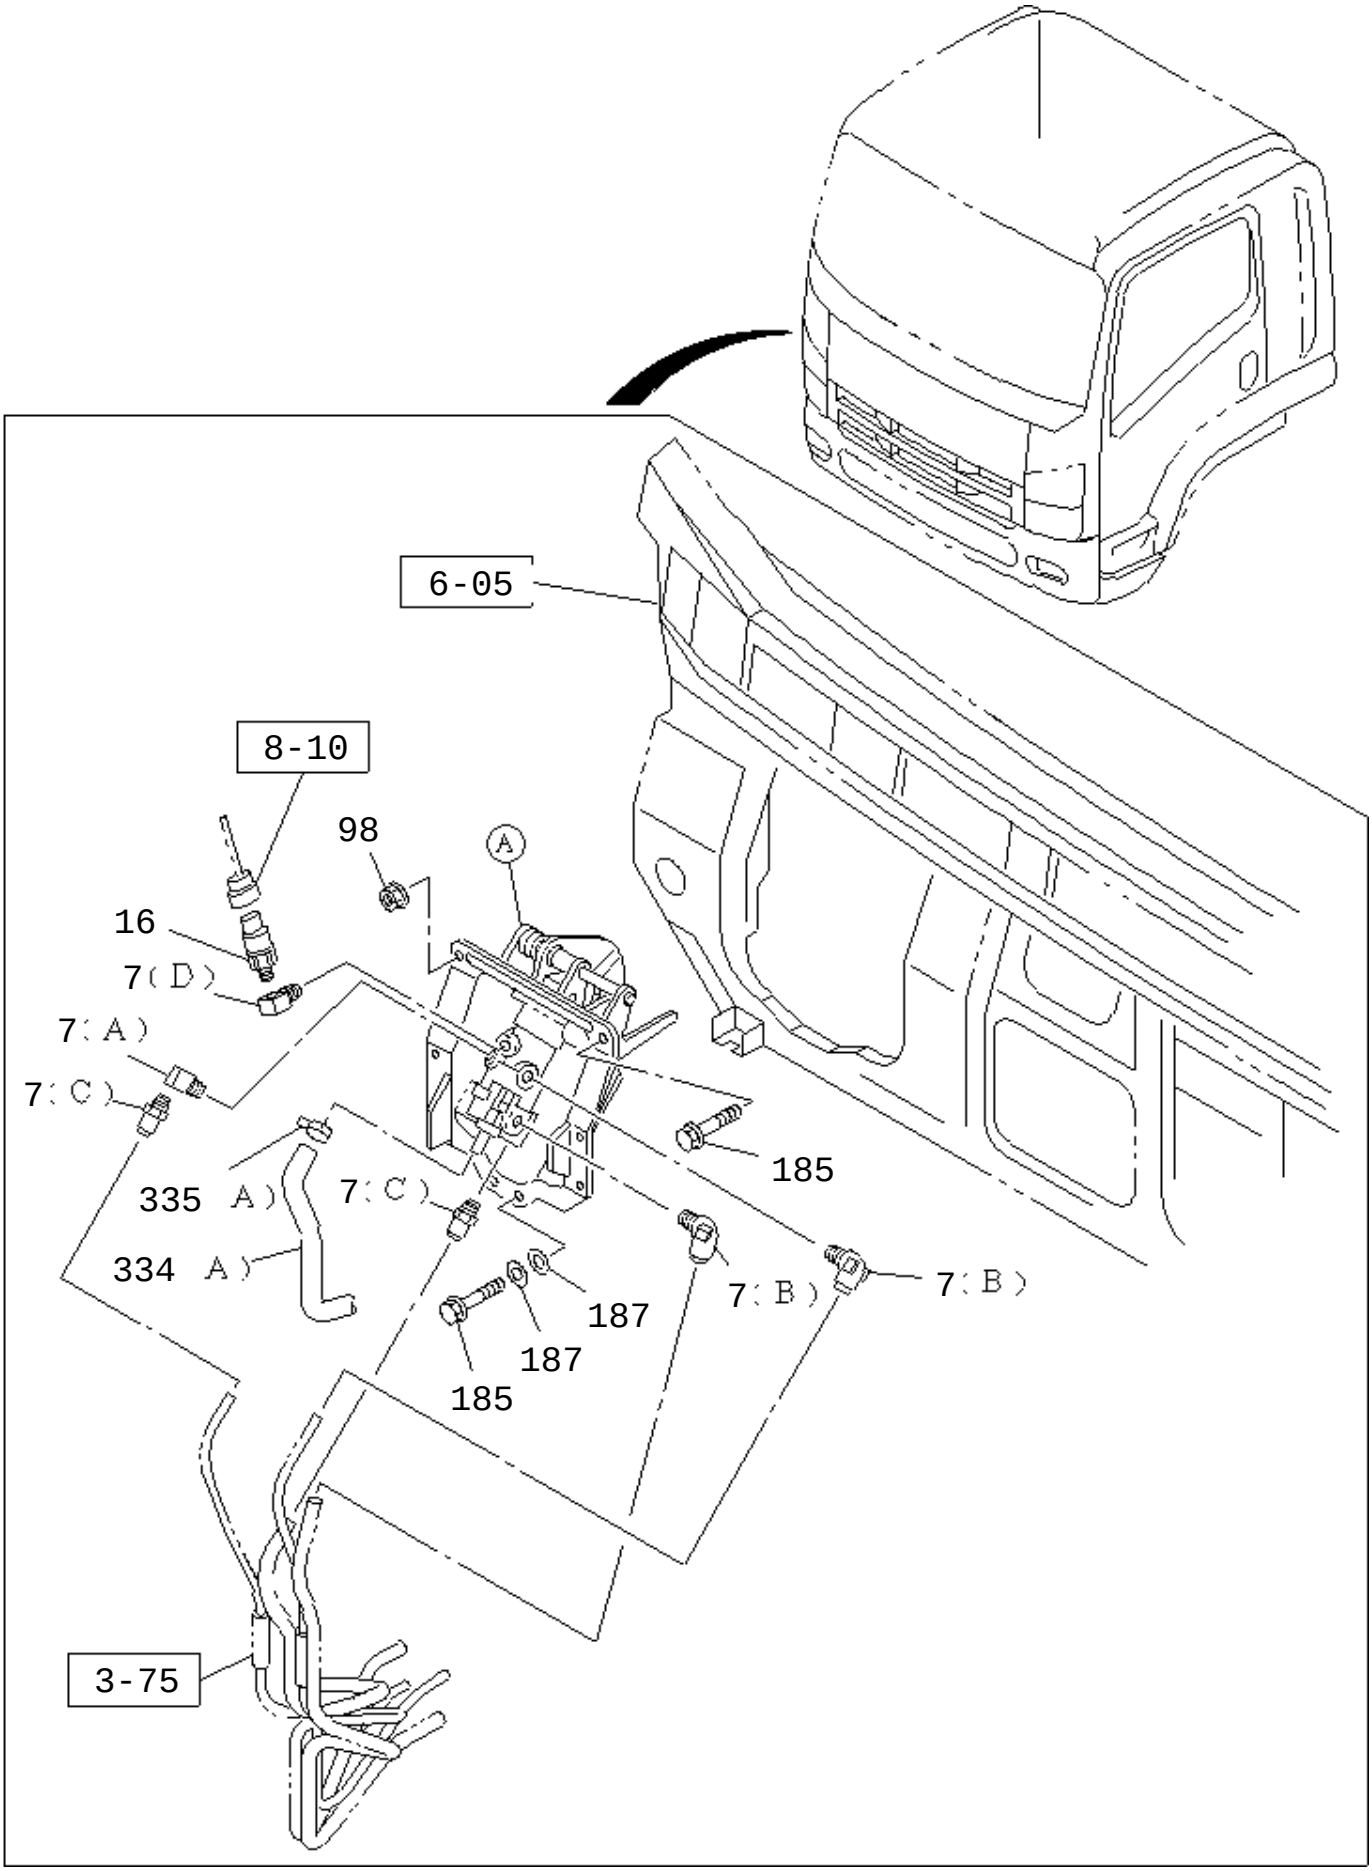


https://truckmanualshub.com/

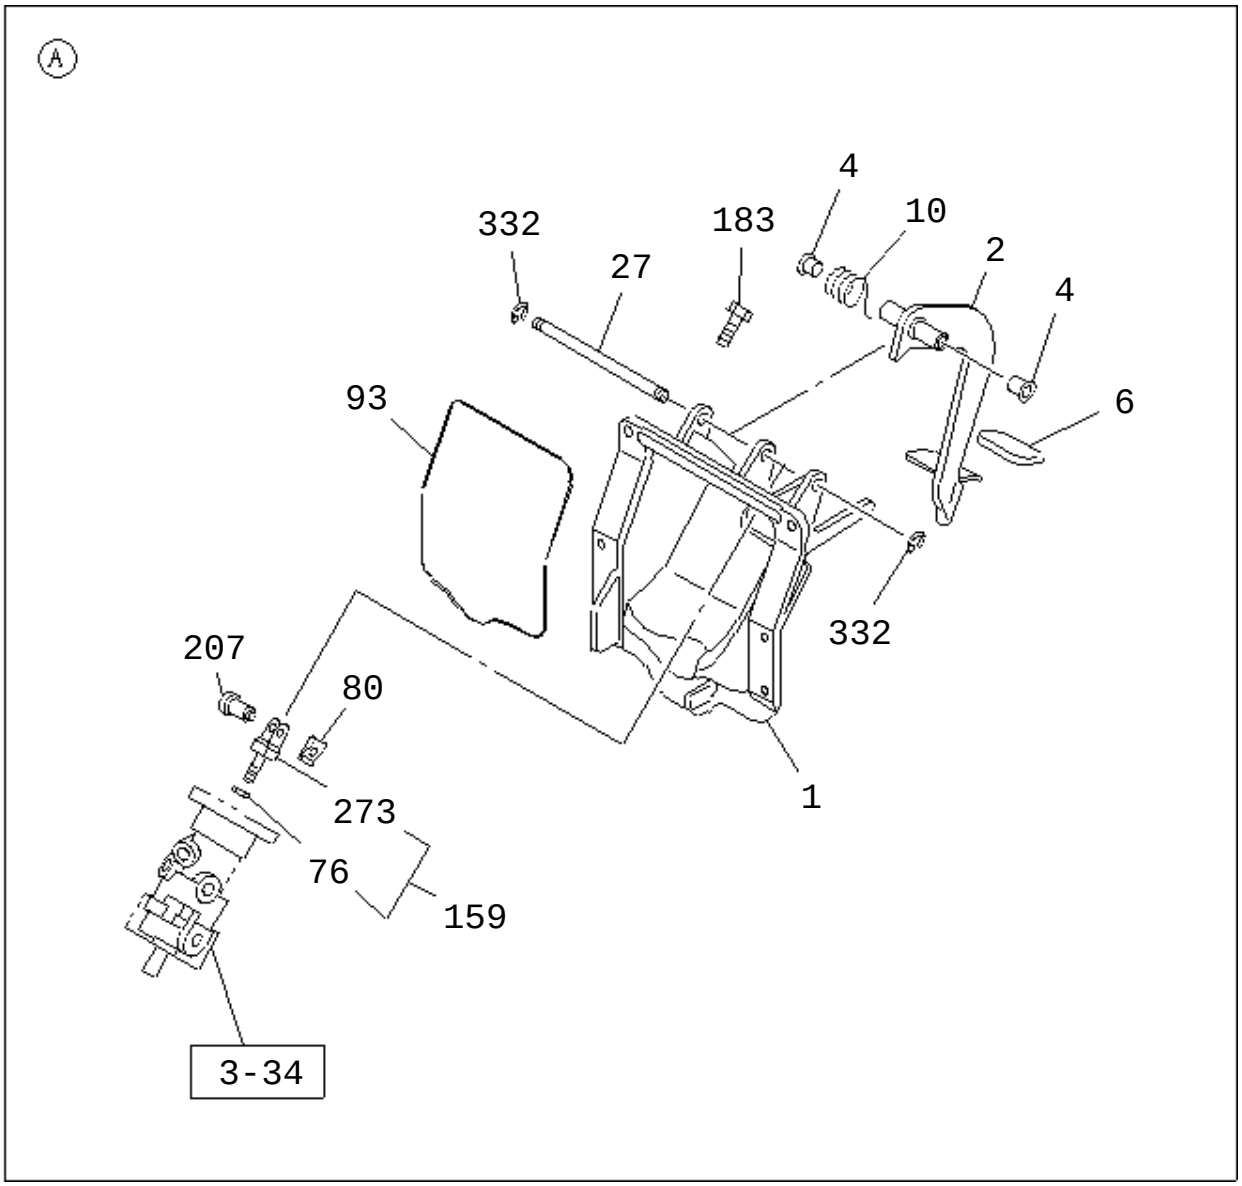

https://truckmanualshub.com/

HAND BRAKE VALVE SIDE

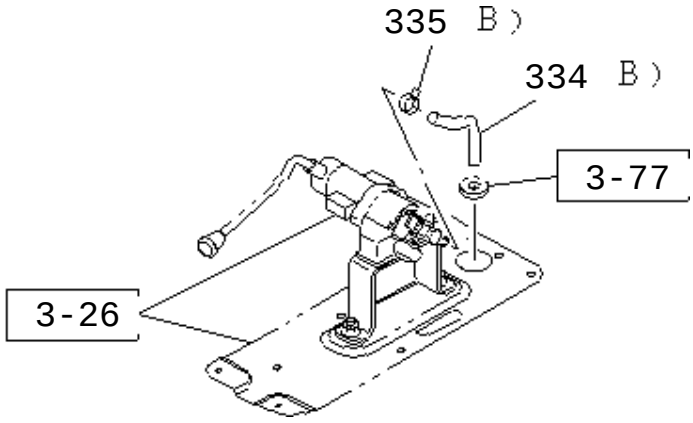

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		BRACKET ASM; PEDAL					
		8-98071-972-1		1312-1403	01	A	
		8-98071-972-1		1404-	01	AB	
2		PEDAL; BRK					
		8-98057-226-0		1312-1403	01	A	
		8-98057-226-0		1404-	01	AB	
4		BUSHING; BRK PEDAL					
		8-94238-596-0		1312-1403	02	A	
		8-94238-596-0		1404-	02	AB	
6		COVER; BRK PEDAL					
		8-98056-865-0		1312-1403	01	A	
		8-98056-865-0		1404-	01	AB	
7		CONNECTOR; BRK VALVE					
		1-09660-693-0		1312-1403	01	A	(D) PT1/4 2WAY
		1-09660-693-0		1404-	01	AB	(D) PT1/4 2WAY
		1-09660-696-0		1312-1403	01	A	(A) PT3/8 ELBOW
		1-09660-696-0		1404-	01	AB	(A) PT3/8 ELBOW
		1-09660-959-0		1312-1403	02	A	(B) DIN12 & R3/8 ELBOW
		1-09660-959-0		1404-	02	AB	(B) DIN12 & R3/8 ELBOW
		1-09660-965-0		1312-1403	02	A	(C) DIN12 & R3/8 STRAIGHT
		1-09660-965-0		1404-	02	AB	(C) DIN12 & R3/8 STRAIGHT
10		SPRING; RETURN,BRK PEDAL					
		8-98057-232-1		1312-1403	01	A	
		8-98057-232-1		1404-	01	AB	
16		SWITCH; STOP LAMP					
		8-98010-857-0		1312-1403	01	A	
		8-98010-857-0		1404-	01	AB	
27		SHAFT; BRK PEDAL					
		8-98057-231-0		1312-1403	01	A	
		8-98057-231-0		1404-	01	AB	
76		NUT; PUSH ROD					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
80		PIN; SNAP,BRK PEDAL					
		8-98007-161-0		1312-1403	01	A	
		8-98007-161-0		1404-	01	AB	
93		SEAL; BRK PEDAL					
		1-48199-534-0		1312-1403	01	A	
		1-48199-534-0		1404-	01	AB	
98		NUT; BRKT					
		0-91180-208-0		1312-1403	01	A	M8 FLANGE IDN
		0-91180-208-0		1404-	01	AB	M8 FLANGE IDN
159		ROD ASM; PUSH,BRK					
		8-98057-234-0		1312-1403	01	A	
		8-98057-234-0		1404-	01	AB	
183		BOLT; BRK VLV					
		0-28660-830-0		1312-1403	04	A	M8X30 FLANGE
		0-28660-830-0		1404-	04	AB	M8X30 FLANGE
185		BOLT; BRKT					

https://truckmanualshub.com/

3-10 BRAKE PEDAL AND CONTROL


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
185		8-98057-109-0		1312-1403	07	A	M8X25 FLANGE
		8-98057-109-0		1404-	07	AB	M8X25 FLANGE
187		WASHER; PL,BRKT					
		0-91614-808-0		1312-1403	04	A	ID=8.4 OD=26 IDN
		0-91614-808-0		1404-	04	AB	ID=8.4 OD=26 IDN
207		PIN; JOINT,BRK PEDAL LINK					
		8-98147-657-0		1312-1403	01	A	
		8-98147-657-0		1404-	01	AB	
273		ROD; PULL					
		8-98057-233-0		1312-1403	01	A	
		8-98057-233-0		1404-	01	AB	
332		RING; SNAP					
		0-91805-512-0		1312-1403	02	A	ID=12
		0-91805-512-0		1404-	02	AB	ID=12
334		HOSE; AIR,BRK					
		8-98251-374-0		1404-	01	B	(B)
		8-97611-145-3		1312-1403	01	A	(A) IDN
		8-97611-145-3		1404-	01	AB	(A) IDN
335		CLAMP; HOSE					
		8-94238-572-0		1404-	01	B	(B) ID=14
		8-98025-921-0		1312-1403	01	A	(A) ID=24
		8-98025-921-0		1404-	01	AB	(A) ID=24
3-75		Move to 3-75					
6-05		Move to 6-05					
8-10		Move to 8-10					
3-34		Move to 3-34					
3-26		Move to 3-26					
3-77		Move to 3-77					

https://truckmanualshub.com/

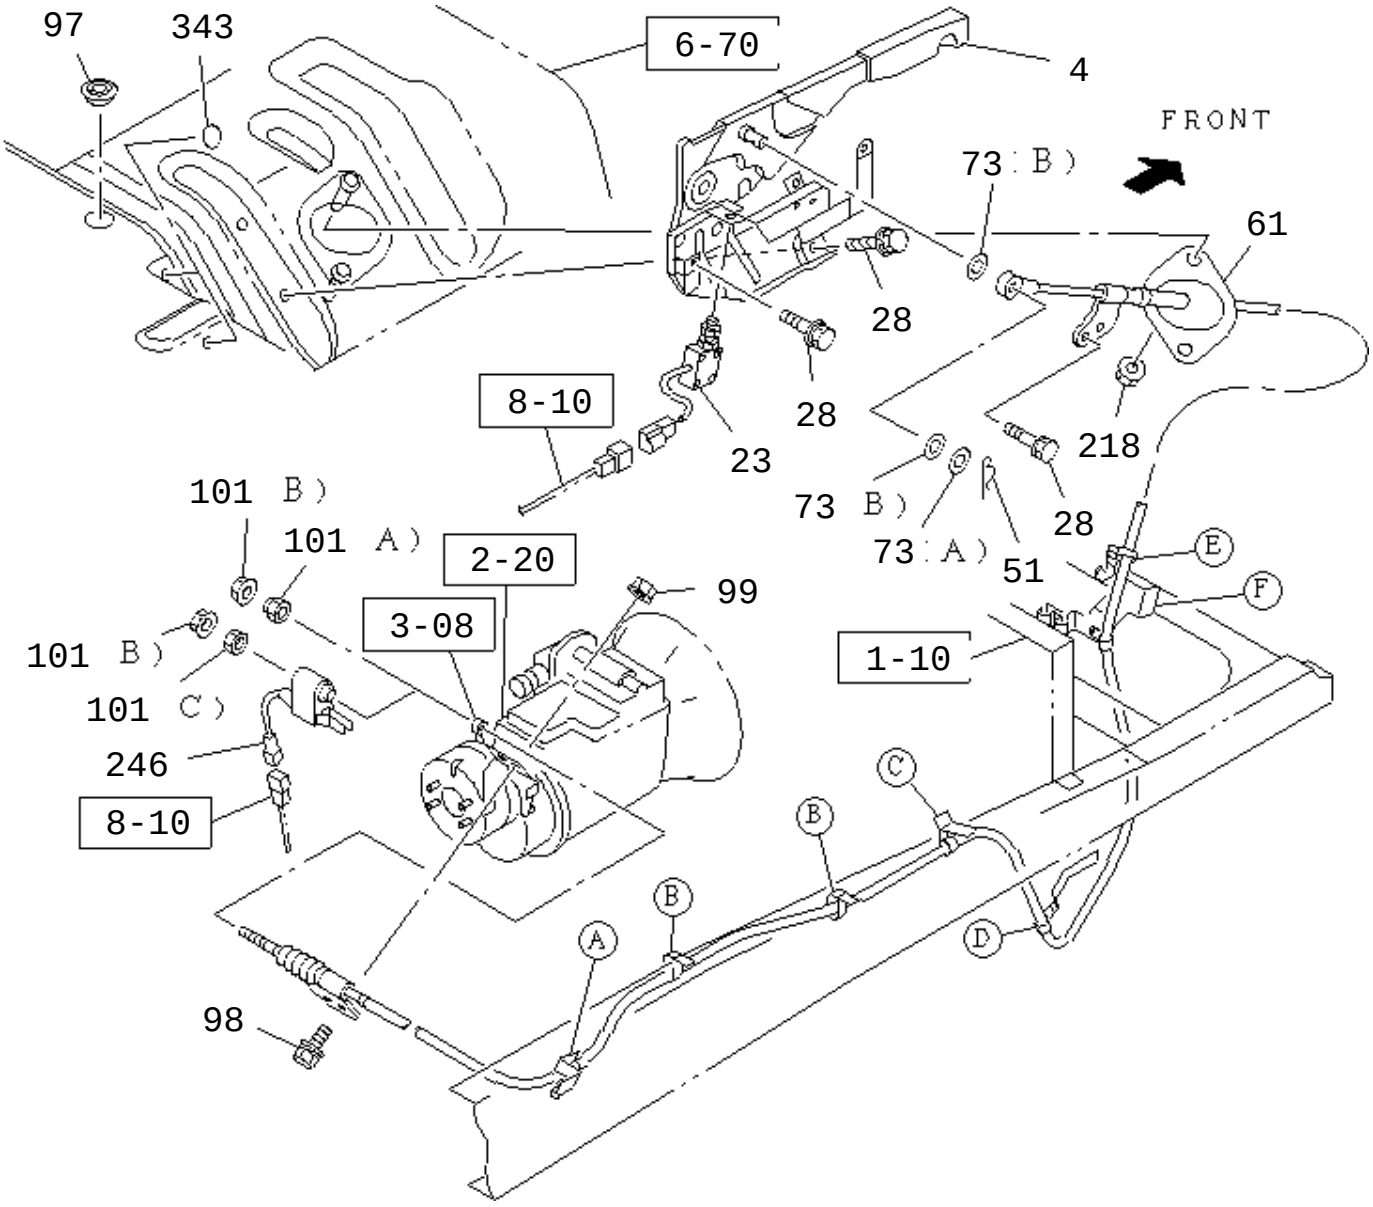


https://truckmanualshub.com/


Ⓐ

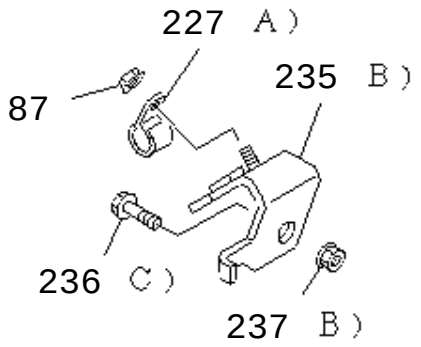


Ⓑ

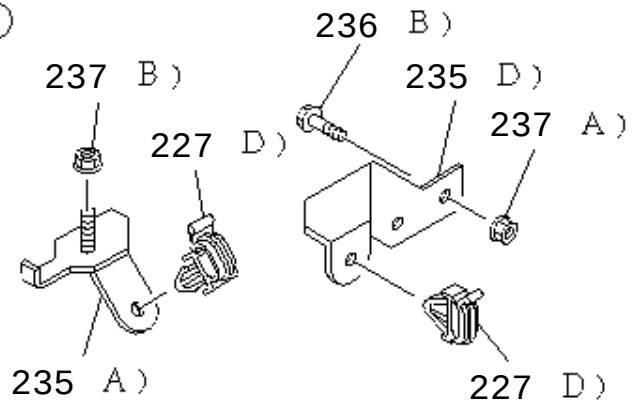


Ⓒ

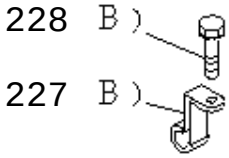


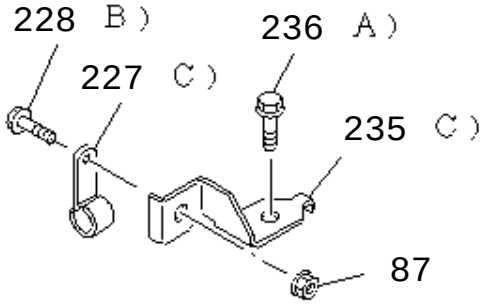


Ⓓ

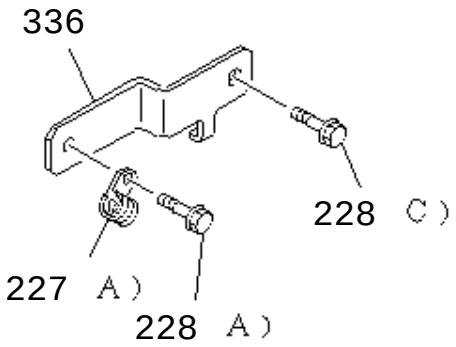

Ⓔ

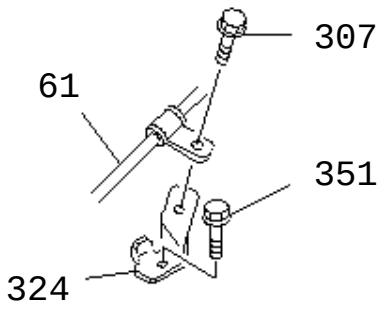

Ⓕ

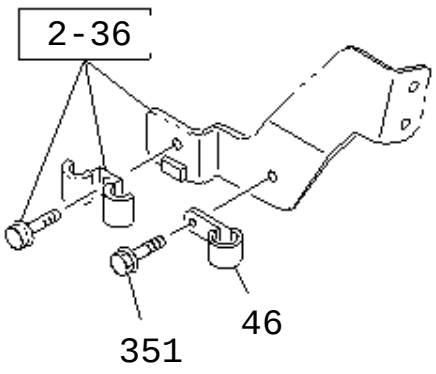

https://truckmanualshub.com/

3-11 PARKING BRAKE CONTROL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
4		STEM; PARKING BRK					
		8-98173-353-0		1312-1403	01	A	
		8-98173-353-0		1404-	01	AB	
23		SWITCH; PARKING BRK					
		1-82440-100-0		1312-1403	01	A	
		1-82440-100-0		1404-	01	AB	
28		BOLT; HAND BRK LEVER					
		8-98059-720-0		1312-1403	04	A	M8X24.5 W/LK&PL WASHER
		8-98059-720-0		1404-	04	AB	M8X24.5 W/LK&PL WASHER
46		CLIP; FRT CABLE TO FLOOR					
		0-95235-535-0		1312-1401	01	A	ID=16 L=20
		0-95235-235-0		1402-1403	01	A	ID=13 L=20
		0-95235-235-0		1404-	01	AB	ID=13 L=20
51		PIN; JOINT,RELAY LEVER					
		1-09987-243-1		1312-1403	01	A	
		1-09987-243-1		1404-	01	AB	
61		CABLE; PARKING BRK					
		8-98257-641-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) PARKING BRAKE - BRAKE LOCK(6LL) L=5189
		8-98182-151-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) L=4946
		8-98257-638-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) L=4946
		8-98257-638-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) L=4946
		8-98257-638-0		1404-	01	B	L=4946
		8-98184-206-0		1312-1401	01	A	ZF9S1110 DD M/T(Y5P) L=5046
		8-98257-639-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) EXC. PARKING BRAKE - BRAKE LOCK(6LL) L=5046
73		WASHER; PL,CABLE					
		0-91610-516-0		1312-1403	01	A	(A) ID=17 OD=30
		0-91610-516-0		1404-	01	AB	(A) ID=17 OD=30
		8-94206-429-1		1312-1403	02	A	(B) ID=19
		8-94206-429-1		1404-	02	AB	(B) ID=19
87		NUT					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
97		GROMMET; PARKING BRK CABLE					
		8-94122-971-0		1312-	01	A	OD=35 IDN
98		BOLT; RR COVER					
		0-28651-030-0		1312-1403	02	A	M10X30 FLANGE
		0-28651-030-0		1404-	02	AB	M10X30 FLANGE
99		NUT; CONT CABLE					
		0-91180-210-0		1312-1403	02	A	M10 FLANGE
		0-91180-210-0		1404-	02	AB	M10 FLANGE
101		NUT; CABLE TO LEVER					

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
101		0-91110-508-0		1402-	01	A	ZF9S1110 DD M/T(Y5P) PARKING BRAKE - BRAKE LOCK(6LL) (C) M8 IDN
		0-91180-108-0		1312-1403	01	A	(B) M8 FLANGE
		0-91180-108-0		1404-	01	AB	(B) M8 FLANGE
		1-46259-007-0		1312-1401	01	A	(A)
		1-46259-007-0		1402-1403	01	A	EXC. PARKING BRAKE - BRAKE LOCK(6LL),POW F-FLYWHEEL(6SZ) (A)
		1-46259-007-0		1404-	01	A	EXC. PARKING BRAKE - BRAKE LOCK(6LL),POW F-FLYWHEEL(6SZ) (A)
		1-46259-007-0		1404-	01	B	FULLER ES11109 DD M/T(Y5N) (A)
218		NUT; BRKT,PARKING BRK CABLE					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
227		CLIP; RAD					
		0-95235-235-0		1312-1403	02	A	(A) ID=13 L=20
		0-95235-235-0		1404-	02	AB	(A) ID=13 L=20
		1-09700-875-0		1312-1403	01	A	(B) ID=25 H=30 L=35
		1-09700-875-0		1404-	01	AB	(B) ID=25 H=30 L=35
		1-09701-014-0		1312-1403	01	A	(C) ID=14.5 L=40
		1-09701-014-0		1404-	01	AB	(C) ID=14.5 L=40
		5-09709-020-0		1312-1403	02	A	(D) ID=9.5
		5-09709-020-0		1404-	02	AB	(D) ID=9.5
228		BOLT; CLIP RAD MTG					
		0-28050-816-0		1312-1403	01	A	(A) M8X16 FLANGE
		0-28050-816-0		1404-	01	AB	(A) M8X16 FLANGE
		0-28650-825-0		1312-1403	02	A	(B) M8X25 FLANGE IDN
		0-28650-825-0		1404-	02	AB	(B) M8X25 FLANGE IDN
		1-09980-498-0		1312-1403	01	A	(C) M8X16 W/LK&PL WASHER
		1-09980-498-0		1404-	01	AB	(C) M8X16 W/LK&PL WASHER
235		BRACKET; CONT CABLE TO FRAME					

https://truckmanualshub.com/


KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
235		8-98100-152-0		1312-1403	01	A	(D)
		8-98100-152-0		1404-	01	AB	(D)
		8-98111-492-0		1312-1403	01	A	(B)
		8-98111-492-0		1404-	01	AB	(B)
		8-98126-426-0		1312-1403	01	A	(C)
		8-98126-426-0		1404-	01	AB	(C)
		8-98126-934-0		1312-1403	01	A	(A)
		8-98126-934-0		1404-	01	AB	(A)
236		BOLT; BRKT TO FRAME					
		0-28650-825-0		1312-1403	01	A	(A) M8X25 FLANGE IDN
		0-28650-825-0		1404-	01	AB	(A) M8X25 FLANGE IDN
		0-28650-830-0		1312-1403	02	A	(B) M8X30 FLANGE
		0-28650-830-0		1404-	02	AB	(B) M8X30 FLANGE
		0-28651-035-0		1312-1403	01	A	(C) M10X35 FLANGE IDN
		0-28651-035-0		1404-	01	AB	(C) M10X35 FLANGE IDN
237		NUT; BRKT TO FRAME					
		0-91180-108-0		1312-1403	02	A	(A) M8 FLANGE
		0-91180-108-0		1404-	02	AB	(A) M8 FLANGE
		0-91180-210-0		1312-1403	02	A	(B) M10 FLANGE
		0-91180-210-0		1404-	02	AB	(B) M10 FLANGE
246		SENSOR; BRK LOCK					
		8-98261-285-0		1402-	01	A	PARKING BRAKE - BRAKE LOCK(6LL)
307		BOLT; BRKT,PARKING BRK CABLE					
		0-51640-825-0		1312-1403	01	A	M8X25 W/WASHER
		0-51640-825-0		1404-	01	AB	M8X25 W/WASHER
324		BRACKET					
		8-98067-482-1		1312-1403	01	A	
		8-98067-482-1		1404-	01	AB	
336		BRACKET; RADIATOR					
		8-98182-153-1		1312-1403	01	A	IDN
		8-98182-153-1		1404-	01	AB	IDN
343		SEAL					
		1-76798-019-0		1404-	02	B	OD=25 BLACK
		1-76798-019-0		1312-	04	A	OD=25 BLACK
351		BOLT; CLIP					

https://truckmanualshub.com/

3-11 PARKING BRAKE CONTROL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
351		0-51640-825-0		1312-1403	03	A	M8X25 W/WASHER
		0-51640-825-0		1404-	03	AB	M8X25 W/WASHER
1-10		Move to 1-10					
2-20		Move to 2-20					
		Move to 2-20					
3-08		Move to 3-08					
		Move to 3-08					
6-70		Move to 6-70					
8-10		Move to 8-10					
2-36		Move to 2-36					


https://truckmanualshub.com/

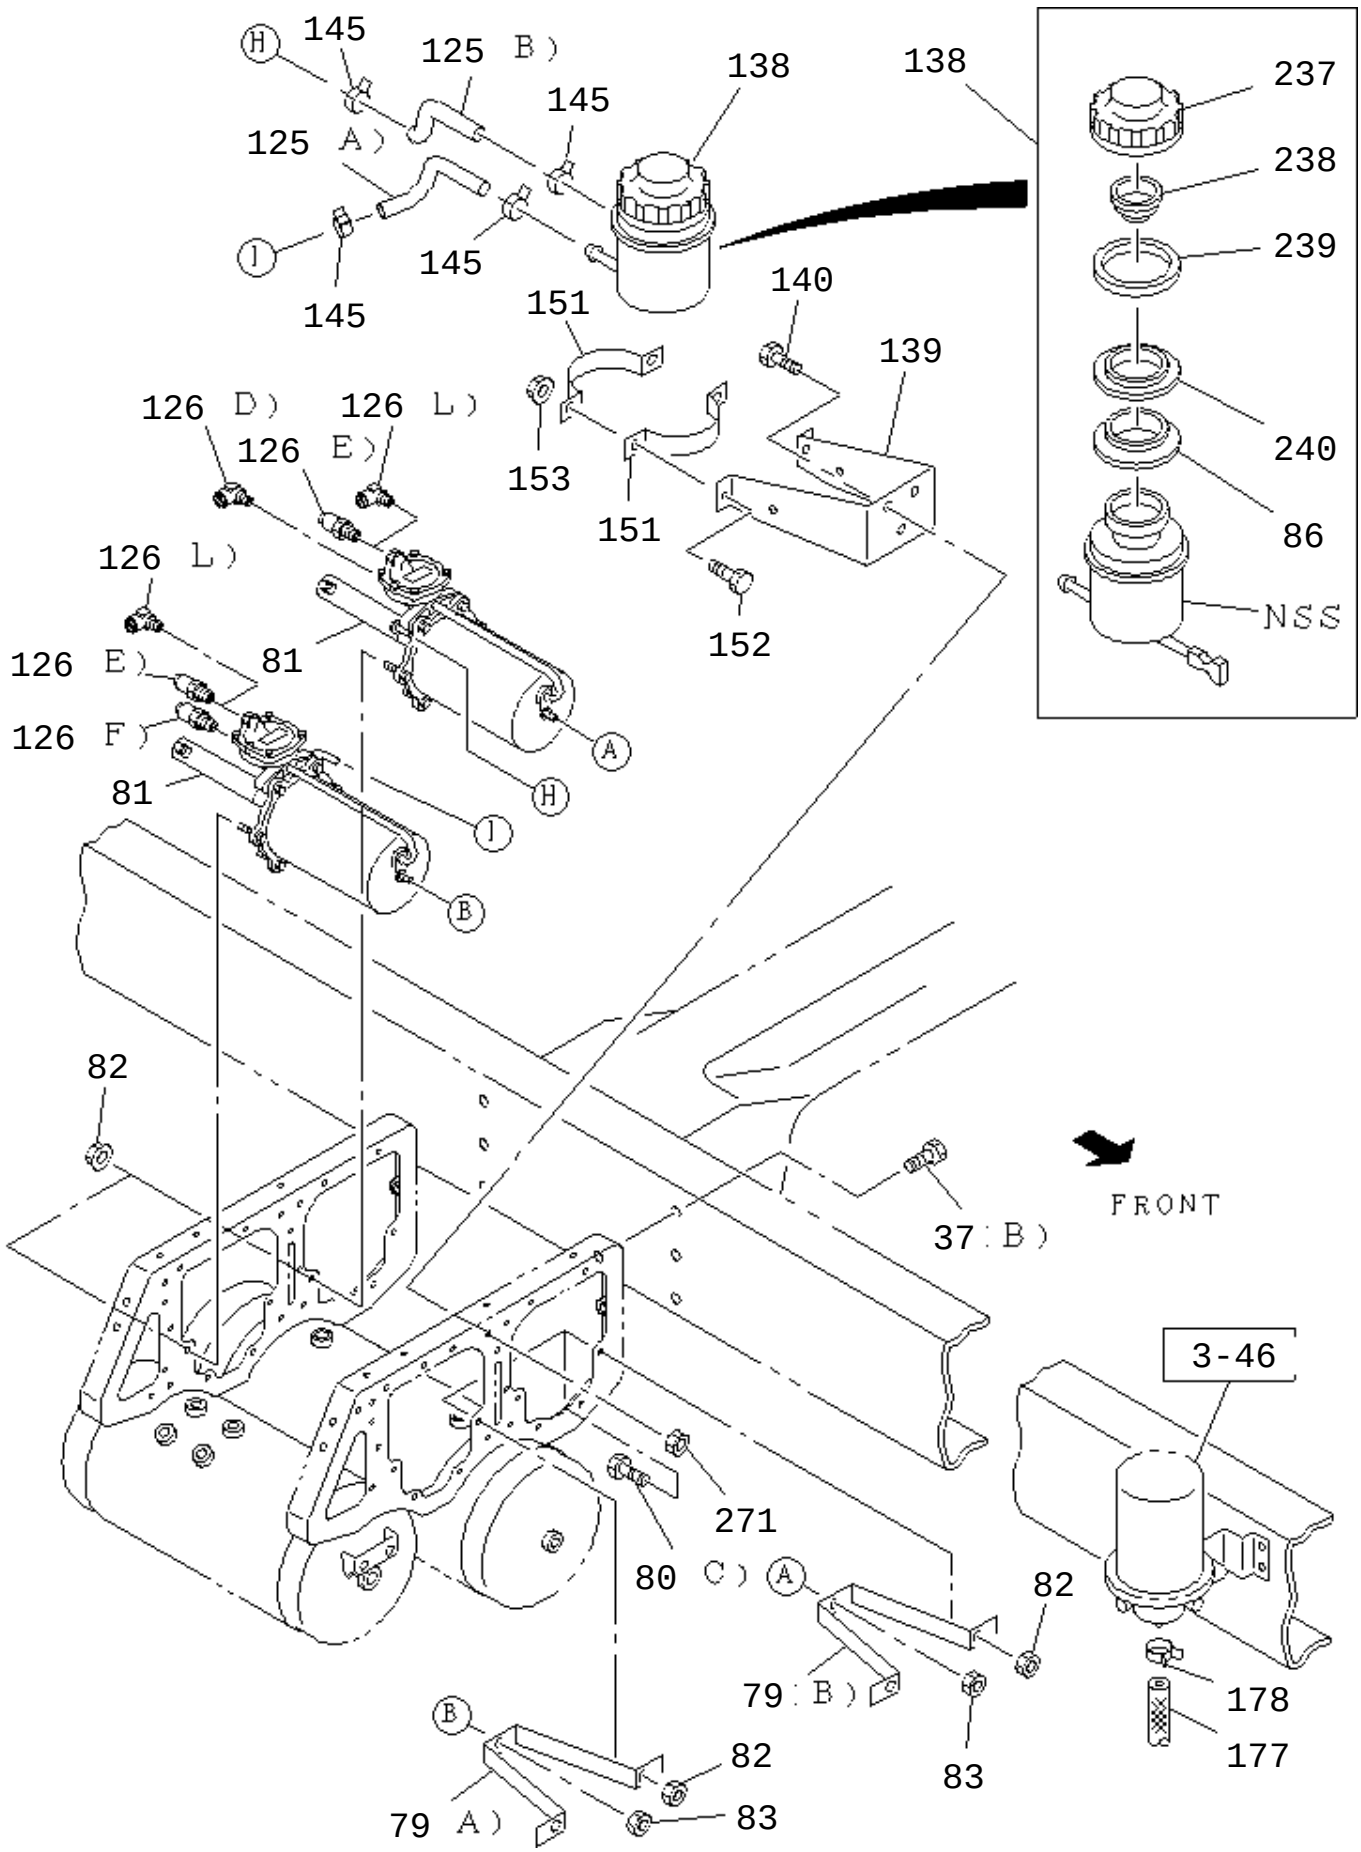


https://truckmanualshub.com/


3-20 AIR TANK

AIR TANK;MAIN

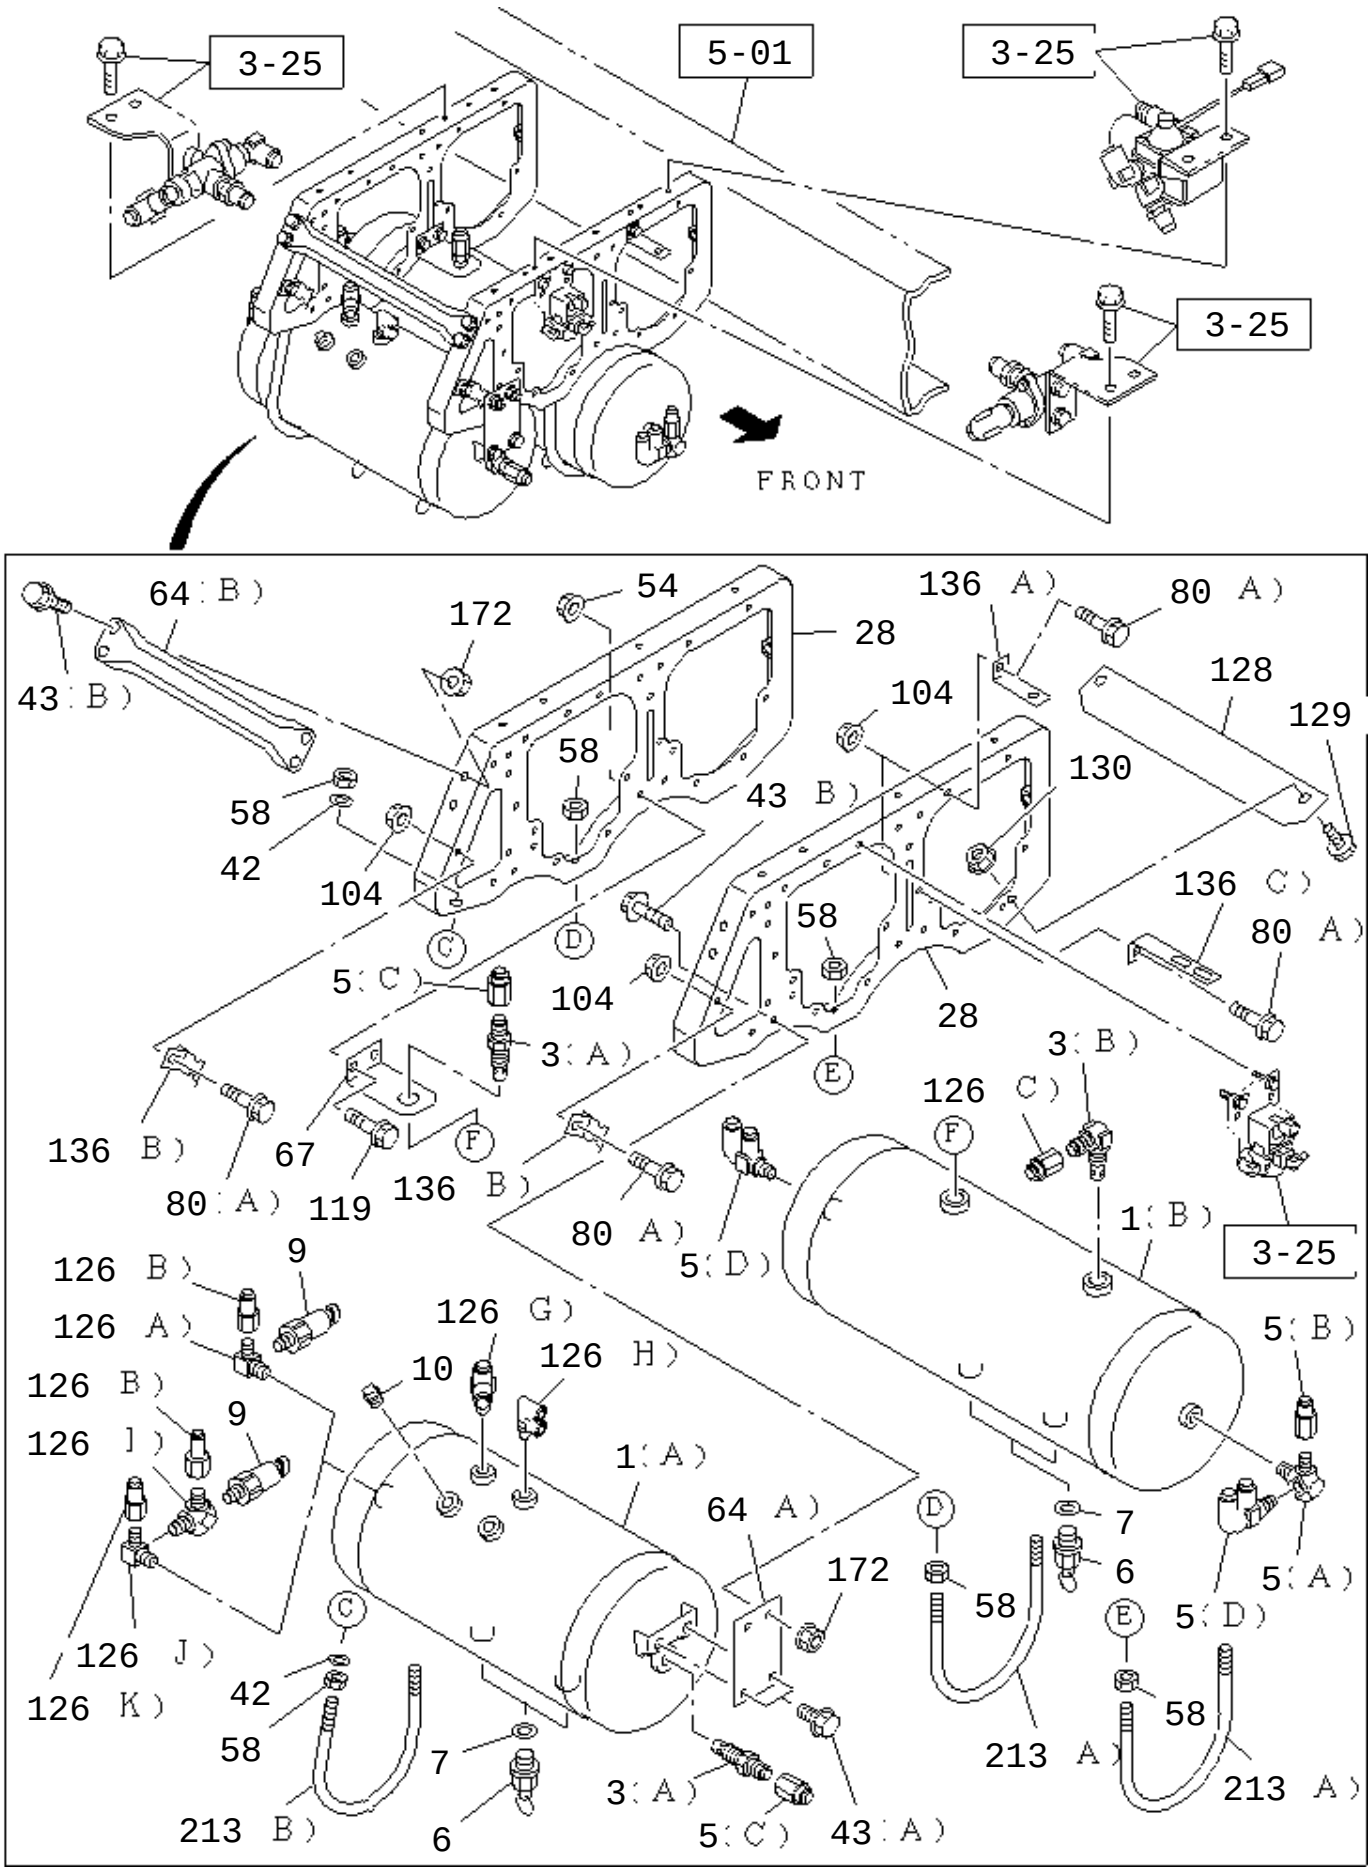



https://truckmanualshub.com/

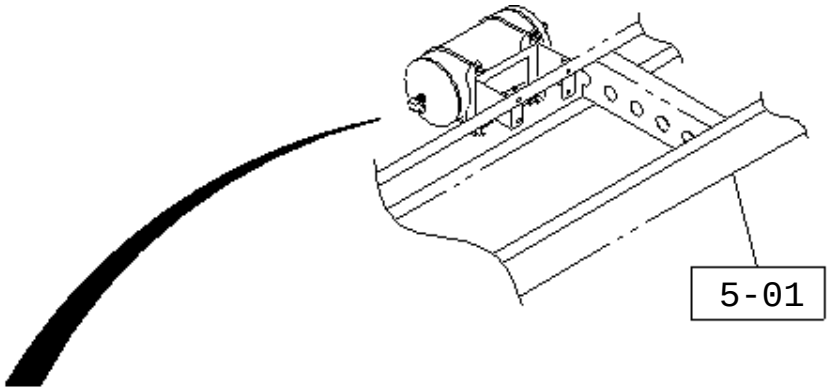

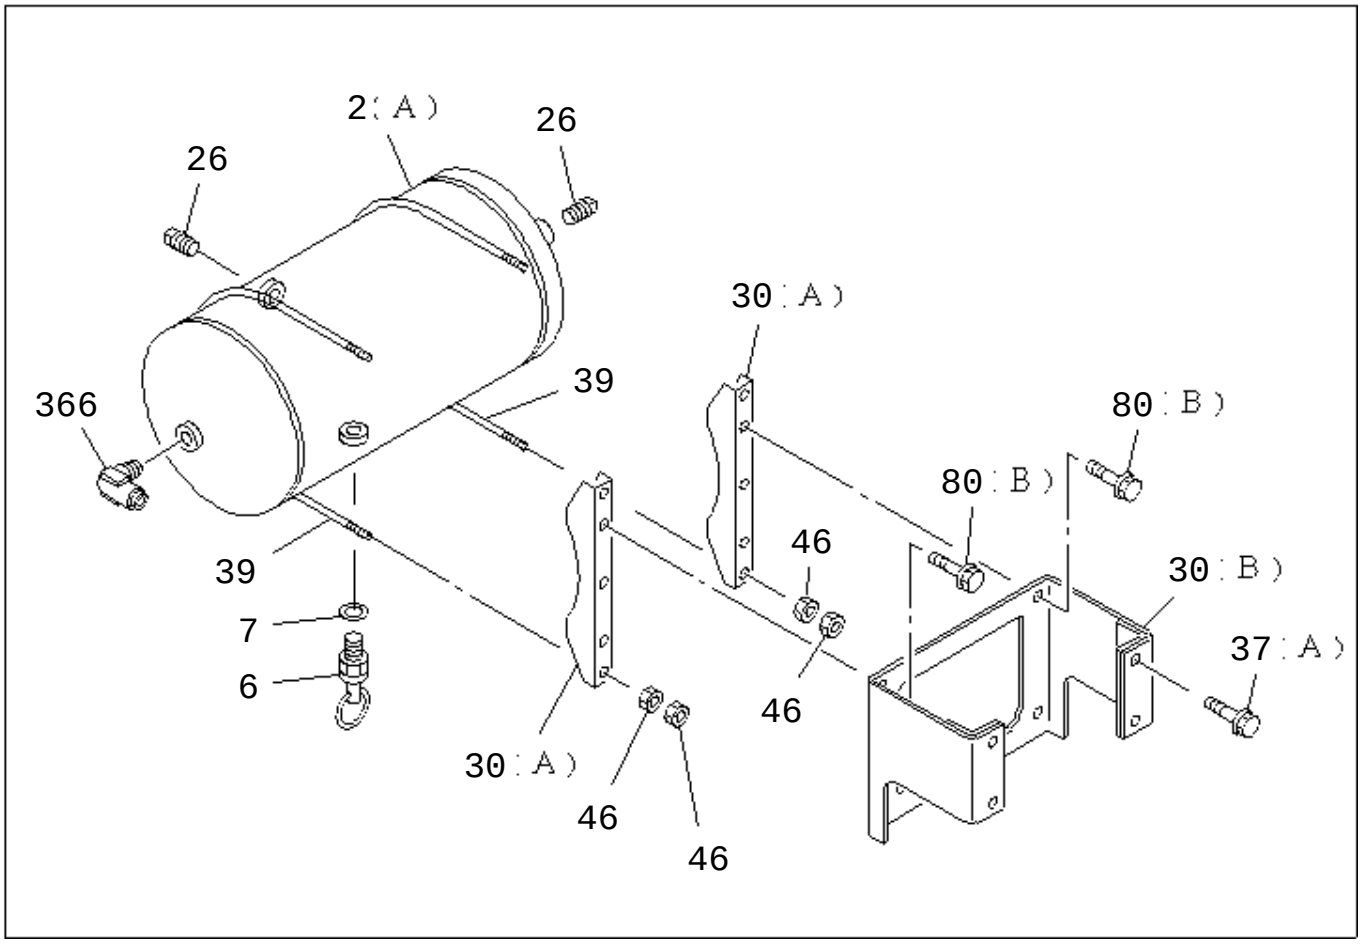


https://truckmanualshub.com/

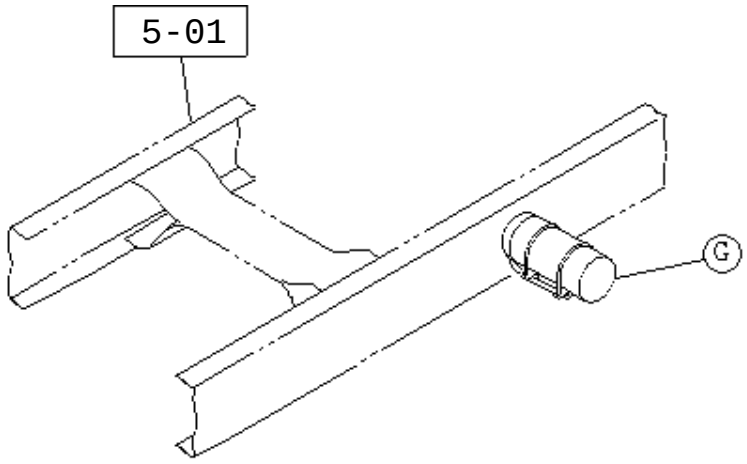

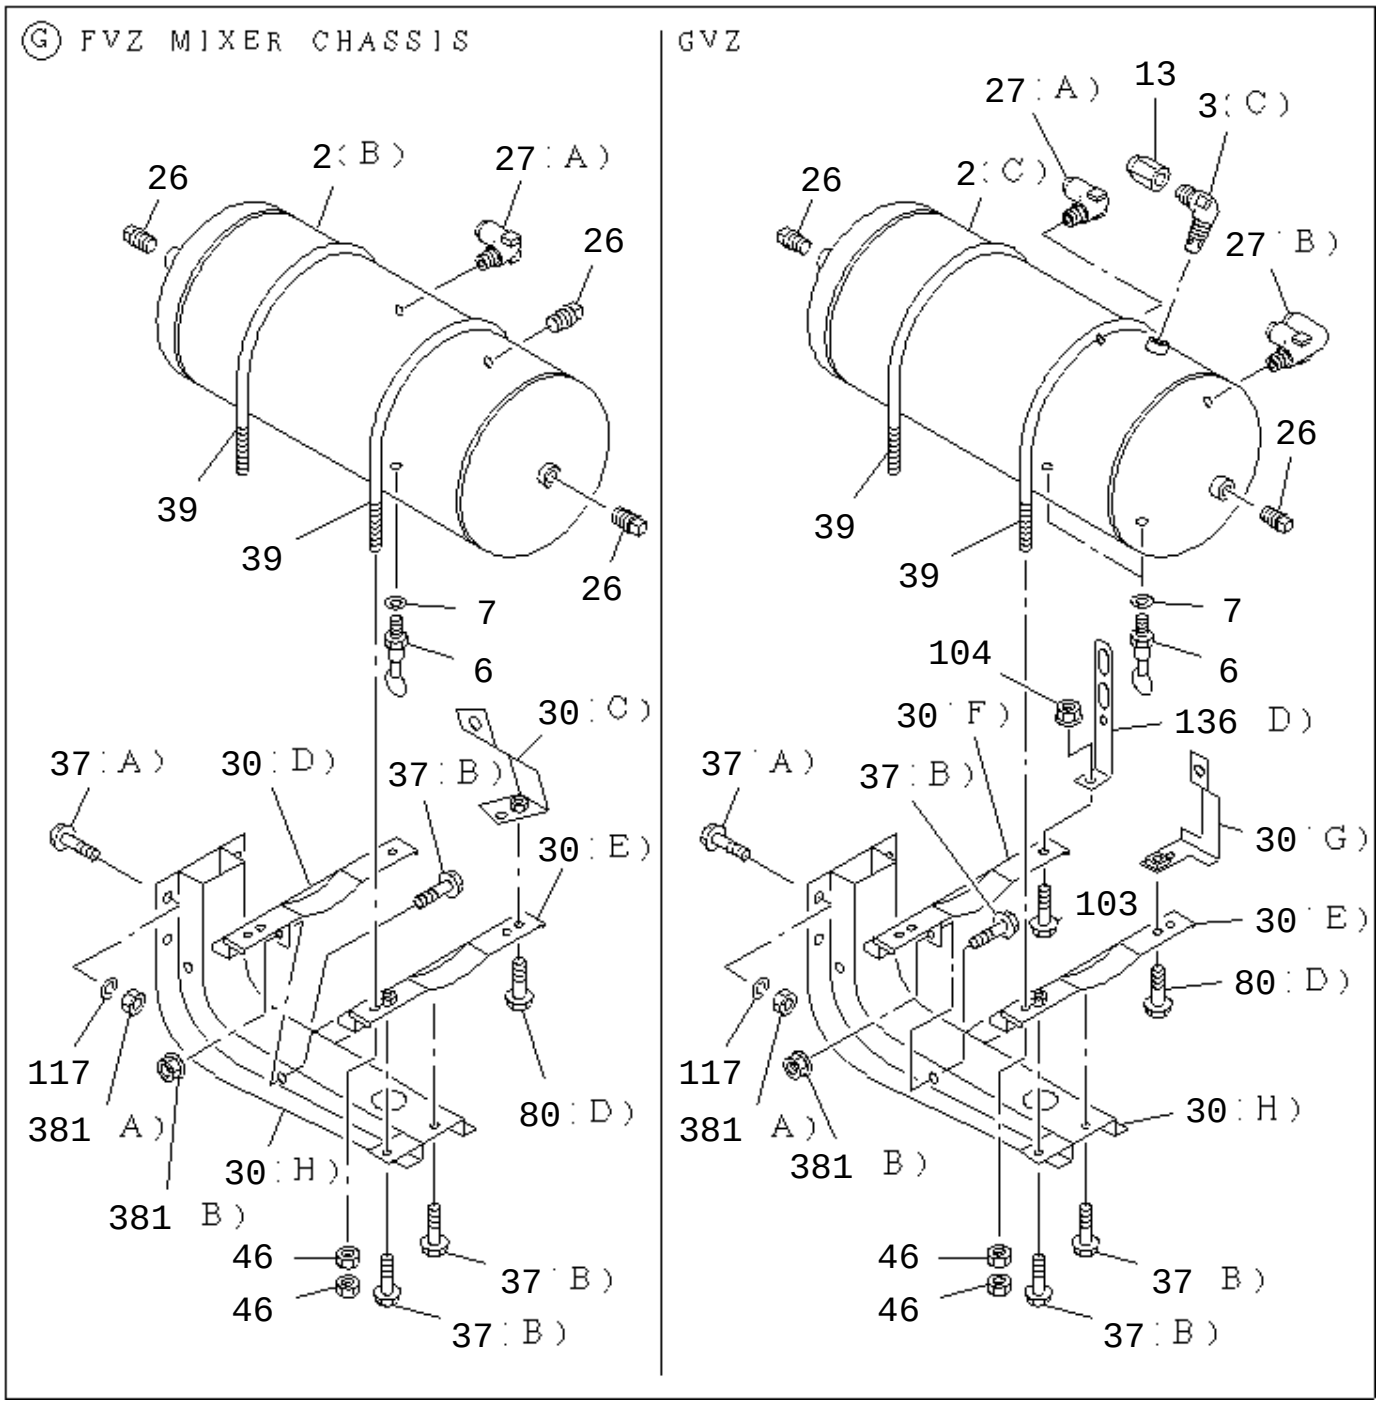

https://truckmanualshub.com/

FIXING;AIR BRK PARKING CONT VALVE

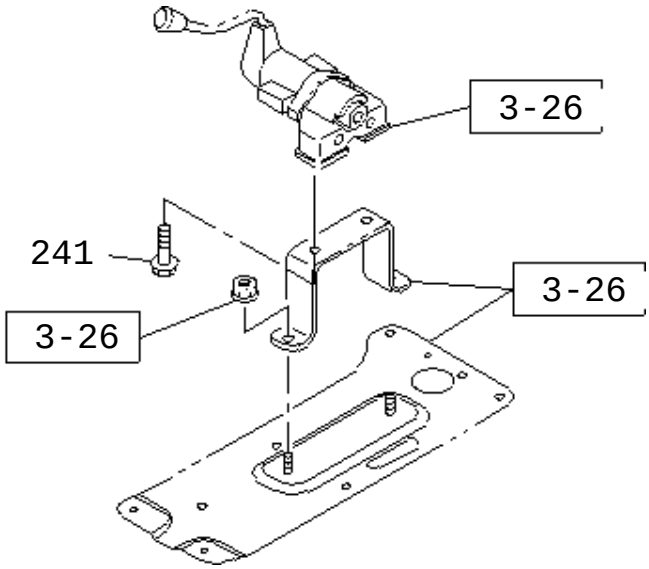

https://truckmanualshub.com/

3-20 AIR TANK

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		TANK ASM; AIR					
		1-48370-493-0		1312-1403	01	A	
							(A)
		1-48370-493-0		1404-	01	AB	
							(A)
		8-98179-212-0		1312-1403	01	A	
							(B)
		8-98179-212-0		1404-	01	AB	
							(B)
2		TANK; AIR					
		8-98179-213-0		1402-	01	A	MIXER CHASSIS<6NR>
							(B)
							IDN
		8-98257-340-0		1404-	01	B	
							(C)
							IDN
		8-98195-655-0		1312-1401	01	A	
							(A)
							IDN
		8-98195-655-0		1402-	01	A	EXC. MIXER CHASSIS<6NR>
							(A)
							IDN
3		VALVE; CHECK,AIR TANK					
		1-48410-134-3		1404-	01	B	
							(C)
							M22 & PT3/4 ELBOW
		1-48410-182-3		1312-1403	02	A	
							(A)
		1-48410-182-3		1404-	02	AB	
							(A)
		1-48410-412-0		1312-1403	01	A	
							(B)
							M20 & PT3/4 ELBOW
		1-48410-412-0		1404-	01	AB	
							(B)
							M20 & PT3/4 ELBOW
5		UNION; AIR TANK					
		1-09660-876-0		1312-1403	01	A	
							(B)
							DIN12 & M16 STRAIGHT
		1-09660-876-0		1404-	01	AB	
							(B)
							DIN12 & M16 STRAIGHT
		1-09660-877-0		1312-1403	02	A	
							(C)
							DIN12 & M20 STRAIGHT
		1-09660-877-0		1404-	02	AB	
							(C)
							DIN12 & M20 STRAIGHT
		1-09661-026-0		1312-1403	02	A	
							(D)
							DIN12X2 & PT3/8 DOUBLE ELBOW
		1-09661-026-0		1404-	02	AB	
							(D)
							DIN12X2 & PT3/8 DOUBLE ELBOW
		8-98204-239-0		1312-1403	01	A	
							(A)
							M16 & R3/8
		8-98204-239-0		1404-	01	AB	
							(A)
							M16 & R3/8
6		COCK; DRAIN,AIR TANK					
		1-48312-015-0		1402-	05	A	MIXER CHASSIS<6NR>
		1-48312-015-0		1404-	06	B	
		1-48312-015-0		1312-1401	01	A	
		1-48312-015-0		1402-	01	A	EXC. MIXER CHASSIS<6NR>
		1-48312-015-0		1312-1401	04	A	
		1-48312-015-0		1402-	04	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
7		GASKET; DRAIN COCK					
		1-09630-145-0		1402-	05	A	MIXER CHASSIS<6NR>
							ID=14
		1-09630-145-0		1404-	06	B	
							ID=14

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
7		1-09630-145-0		1312-1401	01	A	ID=14
		1-09630-145-0		1402-	01	A	EXC. MIXER CHASSIS<6NR> ID=14
		1-09630-145-0		1312-1401	04	A	ID=14
		1-09630-145-0		1402-	04	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) ID=14
9		SWITCH; LOW PRESSURE GAGE,AIR TANK					
		8-97609-249-0		1312-1403	01	A	STAMP 5.5
		8-97609-249-0		1404-	01	AB	STAMP 5.5
10		PLUG; AIR TANK					
		9-99204-513-0		1312-1403	01	A	PT1/4
		9-99204-513-0		1404-	01	AB	PT1/4
13		ADAPTER; NYLON TUBE					
		1-09660-878-0		1404-	01	B	DIN12 & M12 STRAIGHT
26		PLUG; SUB AIR TANK					
		9-09204-517-0		1402-	03	A	MIXER CHASSIS<6NR> PT3/8
		9-09204-517-0		1312-1401	02	A	PT3/8
		9-09204-517-0		1402-1403	02	A	EXC. MIXER CHASSIS<6NR> PT3/8
		9-09204-517-0		1404-	02	A	EXC. MIXER CHASSIS<6NR> PT3/8
		9-09204-517-0		1404-	02	B	PT3/8
27		UNION; ELBOW,AIR TANK					
		1-09660-959-0		1402-1403	01	A	MIXER CHASSIS<6NR> (A) DIN12 & R3/8 ELBOW
		1-09660-959-0		1404-	01	A	MIXER CHASSIS<6NR> (A) DIN12 & R3/8 ELBOW
		1-09660-959-0		1404-	01	B	(A) DIN12 & R3/8 ELBOW
		1-09661-026-0		1404-	01	B	(B) DIN12X2 & PT3/8 DOUBLE ELBOW
28		BRACKET; AIR TANK					
		8-98250-640-1		1402-	02	A	MIXER CHASSIS<6NR>
		8-98174-720-0		1312-1401	02	A	
		8-98174-720-0		1402-1403	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98174-720-0		1404-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98174-720-0		1404-	02	B	
30		BRACKET; AIR TANK,SUB					
		8-98182-085-0		1402-	01	A	MIXER CHASSIS<6NR> (D) IDN
		8-98182-821-0		1402-	01	A	MIXER CHASSIS<6NR> (C) IDN
		1-48316-024-3		1402-1403	01	A	MIXER CHASSIS<6NR> (H)
		1-48316-024-3		1404-	01	A	MIXER CHASSIS<6NR> (H)
		1-48316-024-3		1404-	01	B	(H)
		1-48317-994-2		1402-1403	01	A	MIXER CHASSIS<6NR> (E)
		1-48317-994-2		1404-	01	A	MIXER CHASSIS<6NR> (E)
		1-48317-994-2		1404-	01	B	(E)
		1-48316-026-0		1404-	01	B	(F)
		8-98136-697-0		1404-	01	B	(G)

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
30		8-97948-143-0		1312-1401	02	A	(A) IDN
		8-97948-143-0		1402-	02	A	EXC. MIXER CHASSIS<6NR> (A) IDN
		8-98245-717-0		1312-1401	01	A	(B) IDN
		8-98245-717-0		1402-	01	A	EXC. MIXER CHASSIS<6NR> (B) IDN
37		BOLT; AIR TANK					
		0-20851-450-0		1402-1403	04	A	MIXER CHASSIS<6NR> (A) M14X50
		0-20851-450-0		1404-	04	A	MIXER CHASSIS<6NR> (A) M14X50
		0-20851-450-0		1404-	04	B	(A) M14X50
		0-28651-230-0		1402-1403	04	A	MIXER CHASSIS<6NR> (B) M12X30 FLANGE
		0-28651-230-0		1404-	04	A	MIXER CHASSIS<6NR> (B) M12X30 FLANGE
		0-28651-230-0		1404-	04	B	(B) M12X30 FLANGE
		0-28651-040-0		1312-1401	04	A	(A) M10X40 FLANGE
		0-28651-040-0		1402-	04	A	EXC. MIXER CHASSIS<6NR> (A) M10X40 FLANGE
		0-28651-240-0		1312-1403	06	A	(B) M12X40 FLANGE
		0-28651-240-0		1404-	06	AB	(B) M12X40 FLANGE
39		U-BOLT; AIR TANK					
		1-48317-248-1		1402-	02	A	MIXER CHASSIS<6NR> L=253 IDN
		1-48317-087-2		1404-	02	B	L=303
		1-48317-289-0		1312-1401	02	A	
		1-48317-289-0		1402-	02	A	EXC. MIXER CHASSIS<6NR>
42		WASHER; PL					
		0-91610-608-0		1312-1403	04	A	ID=8.4 OD=18
		0-91610-608-0		1404-	04	AB	ID=8.4 OD=18
43		BOLT; STAY,AIR TANK,MAIN					
		0-28651-025-0		1312-1403	02	A	(A) M10X25 FLANGE IDN
		0-28651-025-0		1404-	02	AB	(A) M10X25 FLANGE IDN
		0-28651-030-0		1312-1403	06	A	(B) M10X30 FLANGE
		0-28651-030-0		1404-	06	AB	(B) M10X30 FLANGE
46		NUT; U-BOLT					

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
46		0-91110-508-0		1312-1403	08	A	M8 IDN
		0-91110-508-0		1404-	08	AB	M8 IDN
54		NUT; STAY					
		0-91180-210-0		1312-1403	02	A	M10 FLANGE
		0-91180-210-0		1404-	02	AB	M10 FLANGE
58		NUT; BAND,AIR TANK					
		0-91110-508-0		1312-1403	12	A	M8 IDN
		0-91110-508-0		1404-	12	AB	M8 IDN
64		STAY; AIR TANK,MAIN					
		1-48317-760-0		1312-1403	01	A	(A)
		1-48317-760-0		1404-	01	AB	(A)
		1-53318-293-1		1312-1403	01	A	(B)
		1-53318-293-1		1404-	01	AB	(B)
67		STAY; SUB TANK					
		1-48317-321-2		1312-1403	01	A	
		1-48317-321-2		1404-	01	AB	
79		STAY; AIR MASTER TO BRKT					
		1-53318-348-0		1312-1403	01	A	(A)
		1-53318-348-0		1404-	01	AB	(A)
		8-98120-254-0		1312-1403	01	A	(B)
		8-98120-254-0		1404-	01	AB	(B)
80		BOLT; BRKT					
		0-28650-820-0		1402-	04	A	MIXER CHASSIS<6NR> (A) M8X20 FLANGE IDN
		0-28650-825-0		1402-1403	01	A	MIXER CHASSIS<6NR> (D) M8X25 FLANGE IDN
		0-28650-825-0		1404-	01	A	MIXER CHASSIS<6NR> (D) M8X25 FLANGE IDN
		0-28650-825-0		1404-	01	B	(D) M8X25 FLANGE IDN
		0-28650-820-0		1312-1401	03	A	(A) M8X20 FLANGE IDN
		0-28650-820-0		1402-1403	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X20 FLANGE IDN
		0-28650-820-0		1404-	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) M8X20 FLANGE IDN
		0-28650-820-0		1404-	03	B	(A) M8X20 FLANGE IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
80		0-28651-025-0		1312-1401	04	A	(B) M10X25 FLANGE IDN
		0-28651-025-0		1402-	04	A	EXC. MIXER CHASSIS<6NR> (B) M10X25 FLANGE IDN
		0-28651-030-0		1312-1403	04	A	(C) M10X30 FLANGE
		0-28651-030-0		1404-	04	AB	(C) M10X30 FLANGE
81	D	AIR MASTER ASM; BRK					SEE FIG-NO 3-33 FOR COMPONENT.
		1-47800-794-0		1312-1403	01	A	SECONDARY
		1-47800-794-0		1404-	01	AB	SECONDARY
		1-47800-795-0		1312-1403	01	A	PRIMARY
		1-47800-795-0		1404-	01	AB	PRIMARY
82		NUT; STAY,AIR MASTER BRKT					
		0-91180-210-0		1312-1403	04	A	M10 FLANGE
		0-91180-210-0		1404-	04	AB	M10 FLANGE
83		NUT; AIR MASTER					
		0-91180-210-0		1312-1403	10	A	M10 FLANGE
		0-91180-210-0		1404-	10	AB	M10 FLANGE
86		SEAL; DUST					
		1-47529-019-0		1312-1403	01	A	
		1-47529-019-0		1404-	01	AB	
103		BOLT; BRKT					
		0-28650-820-0		1404-	01	B	M8X20 FLANGE IDN
104		NUT; BRKT					
		0-91180-108-0		1402-1403	04	A	MIXER CHASSIS<6NR> M8 FLANGE
		0-91180-108-0		1404-	04	A	MIXER CHASSIS<6NR> M8 FLANGE
		0-91180-108-0		1404-	04	B	M8 FLANGE
		0-91180-108-0		1312-1401	03	A	M8 FLANGE
		0-91180-108-0		1402-	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) M8 FLANGE
117		WASHER; LK,BRKT					
		0-91510-514-0		1402-1403	04	A	MIXER CHASSIS<6NR> ID=14.2
		0-91510-514-0		1404-	04	A	MIXER CHASSIS<6NR> ID=14.2
		0-91510-514-0		1404-	04	B	ID=14.2
119		BOLT; STAY					
		0-28651-025-0		1312-1403	02	A	M10X25 FLANGE IDN
		0-28651-025-0		1404-	02	AB	M10X25 FLANGE IDN
125		HOSE; OIL TANK TO AIR MASTER					
		1-47469-118-0		1312-1403	01	A	(A) IDN
		1-47469-118-0		1404-	01	AB	(A) IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
125		1-47469-119-0		1312-1403	01	A	(B) IDN
		1-47469-119-0		1404-	01	AB	(B) IDN
126		CONNECTOR; ELBOW					
		1-09660-959-0		1402-	02	A	MIXER CHASSIS<6NR> (L) DIN12 & R3/8 ELBOW
		1-09656-586-1		1402-1403	01	A	MIXER CHASSIS<6NR> (I) M12 & PT1/4 3WAY
		1-09656-586-1		1404-	01	A	MIXER CHASSIS<6NR> (I) M12 & PT1/4 3WAY
		1-09656-586-1		1404-	01	B	(I) M12 & PT1/4 3WAY
		1-09656-677-0		1402-1403	01	A	MIXER CHASSIS<6NR> (J) M16 & PT1/4 & PT3/8 3WAY
		1-09656-677-0		1404-	01	A	MIXER CHASSIS<6NR> (J) M16 & PT1/4 & PT3/8 3WAY
		1-09656-677-0		1404-	01	B	(J) M16 & PT1/4 & PT3/8 3WAY
		1-09660-876-0		1402-1403	01	A	MIXER CHASSIS<6NR> (K) DIN12 & M16 STRAIGHT
		1-09660-876-0		1404-	01	A	MIXER CHASSIS<6NR> (K) DIN12 & M16 STRAIGHT
		1-09660-876-0		1404-	01	B	(K) DIN12 & M16 STRAIGHT
		1-09656-698-0		1312-1401	01	A	(A)
		1-09656-698-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		1-09660-873-0		1312-1403	01	A	(B) DIN8 & M12 STRAIGHT
		1-09660-873-0		1404-	01	AB	(B) DIN8 & M12 STRAIGHT
		1-09660-877-0		1312-1403	01	A	(C) DIN12 & M20 STRAIGHT
		1-09660-877-0		1404-	01	AB	(C) DIN12 & M20 STRAIGHT
		1-09660-960-0		1312-1403	01	A	(D) DIN12 & R1/2 ELBOW
		1-09660-960-0		1404-	01	AB	(D) DIN12 & R1/2 ELBOW
		1-09660-965-0		1312-1401	02	A	(E) DIN12 & R3/8 STRAIGHT
		1-09660-965-0		1402-1403	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (E) DIN12 & R3/8 STRAIGHT
		1-09660-965-0		1404-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (E) DIN12 & R3/8 STRAIGHT
		1-09660-965-0		1404-	02	B	(E) DIN12 & R3/8 STRAIGHT
		1-09660-966-0		1312-1403	01	A	(F) DIN12 & R1/2 STRAIGHT

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
126		1-09660-966-0		1404-	01	AB	(F) DIN12 & R1/2 STRAIGHT
		1-09661-007-0		1312-1403	01	A	(G) DIN12X2 & R3/8 3WAY
		1-09661-007-0		1404-	01	AB	(G) DIN12X2 & R3/8 3WAY
		1-09661-025-0		1312-1403	01	A	(H) DIN8X2 & PT3/8 DOUBLE ELBOW
		1-09661-025-0		1404-	01	AB	(H) DIN8X2 & PT3/8 DOUBLE ELBOW
128		PROTECTOR					
		1-53319-018-0		1312-1403	01	A	
		1-53319-018-0		1404-	01	AB	
129		BOLT; PROTECTOR FIX					
		0-28650-830-0		1312-1403	02	A	M8X30 FLANGE
		0-28650-830-0		1404-	02	AB	M8X30 FLANGE
130		NUT; PROTECTOR FIX					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
136		BRACKET; CLIP					
		1-47477-629-2		1402-	01	A	MIXER CHASSIS<6NR> (C) L=150 H=30
		8-98260-760-0		1402-	02	A	MIXER CHASSIS<6NR> (B)
		1-47477-646-3		1404-	01	B	(D) L=225
		1-47475-530-0		1312-1403	01	A	(A) L=90 B=25
		1-47475-530-0		1404-	01	AB	(A) L=90 B=25
		8-98119-184-1		1312-1401	02	A	(B)
		8-98119-184-1		1402-1403	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98119-184-1		1404-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98119-184-1		1404-	02	B	(B)
138		TANK ASM; OIL,AIR MASTER					
		1-47530-185-1		1312-1403	01	A	
		1-47530-185-1		1404-	01	AB	
139		BRACKET; OIL TANK					
		8-98174-721-0		1312-1403	01	A	IDN
		8-98174-721-0		1404-	01	AB	IDN
140		BOLT; OIL TANK TO BRKT					
		0-28651-025-0		1312-1403	03	A	M10X25 FLANGE IDN
		0-28651-025-0		1404-	03	AB	M10X25 FLANGE IDN
145		CLIP; OIL TANK TO AIR MASTER HOSE					
		1-09704-102-0		1312-1403	04	A	ID=14 IDN
		1-09704-102-0		1404-	04	AB	ID=14 IDN
151		BAND; OIL TANK,AIR MASTER					


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
151		1-47537-056-2		1312-1403	02	A	
		1-47537-056-2		1404-	02	AB	
152		BOLT; OIL TANK TO BAND					
		0-28650-820-0		1312-1403	02	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	M8X20 FLANGE IDN
153		NUT; OIL TANK TO BAND					
		0-91110-508-0		1312-1403	02	A	M8 IDN
		0-91110-508-0		1404-	02	AB	M8 IDN
172		NUT; STAY,AIR TANK,MAIN					
		0-91180-210-0		1312-1403	06	A	M10 FLANGE
		0-91180-210-0		1404-	06	AB	M10 FLANGE
177		HOSE; RUBBER,DRAIN					
		0-03566-300-0		1312-1403	01	A	L=60 SERVICED BY L=3000
		0-03566-300-0		1404-	01	AB	L=60 SERVICED BY L=3000
178		CLIP; HOSE					
		8-94242-034-0		1312-1403	01	A	ID=21
		8-94242-034-0		1404-	01	AB	ID=21
213		BOLT; U AIR TANK					
		1-48317-301-0		1312-1403	02	A	(A) IDN
		1-48317-301-0		1404-	02	AB	(A) IDN
		1-48317-302-0		1312-1403	01	A	(B) IDN
		1-48317-302-0		1404-	01	AB	(B) IDN
237		CAP; OIL TANK					
		1-47525-030-0		1312-1403	01	A	
		1-47525-030-0		1404-	01	AB	
238		PLATE; BAFFLE					
		1-47529-022-0		1312-1403	01	A	
		1-47529-022-0		1404-	01	AB	
239		FILTER; DUST					
		1-47529-017-0		1312-1403	01	A	
		1-47529-017-0		1404-	01	AB	
240		HOLDER; FILTER					
		1-47529-018-0		1312-1403	01	A	
		1-47529-018-0		1404-	01	AB	
241		BOLT; SET,CONT VLV					
		0-28051-020-0		1404-	02	B	M10X20 FLANGE
271		NUT; BRKT,HOSE					
		0-91180-210-0		1312-1403	03	A	M10 FLANGE
		0-91180-210-0		1404-	03	AB	M10 FLANGE
366		CONNECTOR; NYLON TUBE					
		1-09660-959-0		1312-1401	01	A	DIN12 & R3/8 ELBOW
		1-09660-959-0		1402-	01	A	EXC. MIXER CHASSIS<6NR> DIN12 & R3/8 ELBOW
381		NUT; SUB TANK					

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
381		0-91110-514-0		1402-1403	04	A	MIXER CHASSIS<6NR> (A) M14
		0-91110-514-0		1404-	04	A	MIXER CHASSIS<6NR> (A) M14
		0-91110-514-0		1404-	04	B	(A) M14
		0-91180-212-0		1402-1403	01	A	MIXER CHASSIS<6NR> (B) M12 FLANGE
		0-91180-212-0		1404-	01	A	MIXER CHASSIS<6NR> (B) M12 FLANGE
		0-91180-212-0		1404-	01	B	(B) M12 FLANGE
3-46		Move to 3-46					
3-25		Move to 3-25					
5-01		Move to 5-01					
3-26		Move to 3-26					

https://truckmanualshub.com/

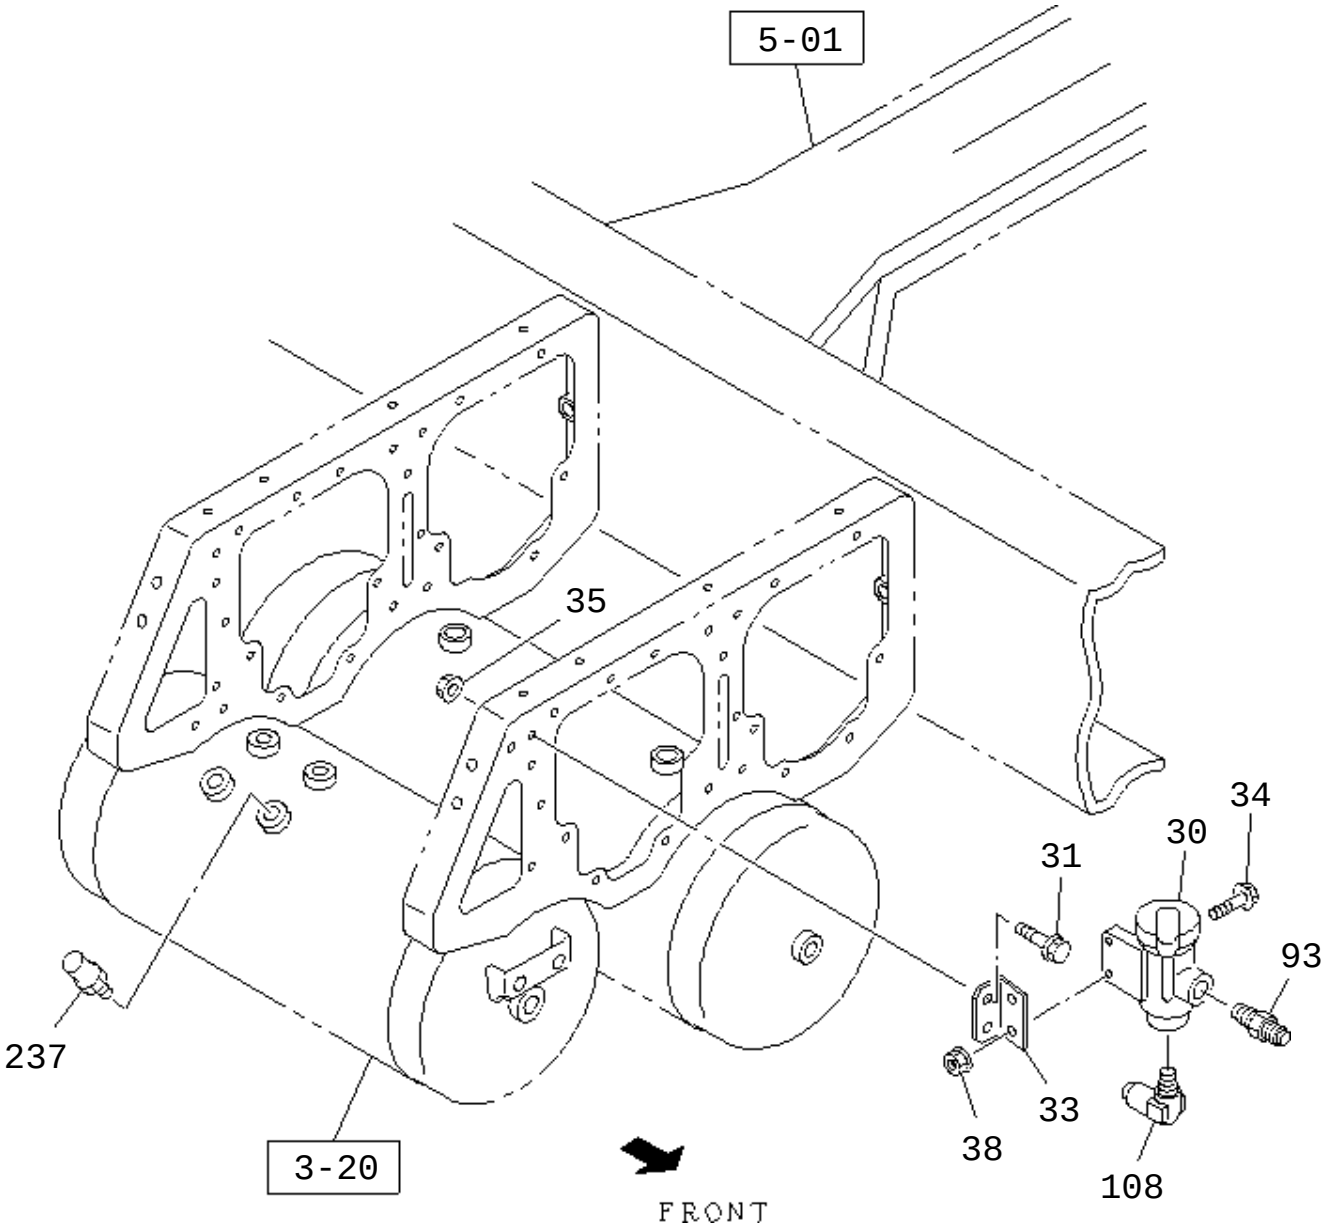

https://truckmanualshub.com/


REPAIR KIT;GOVERNOR

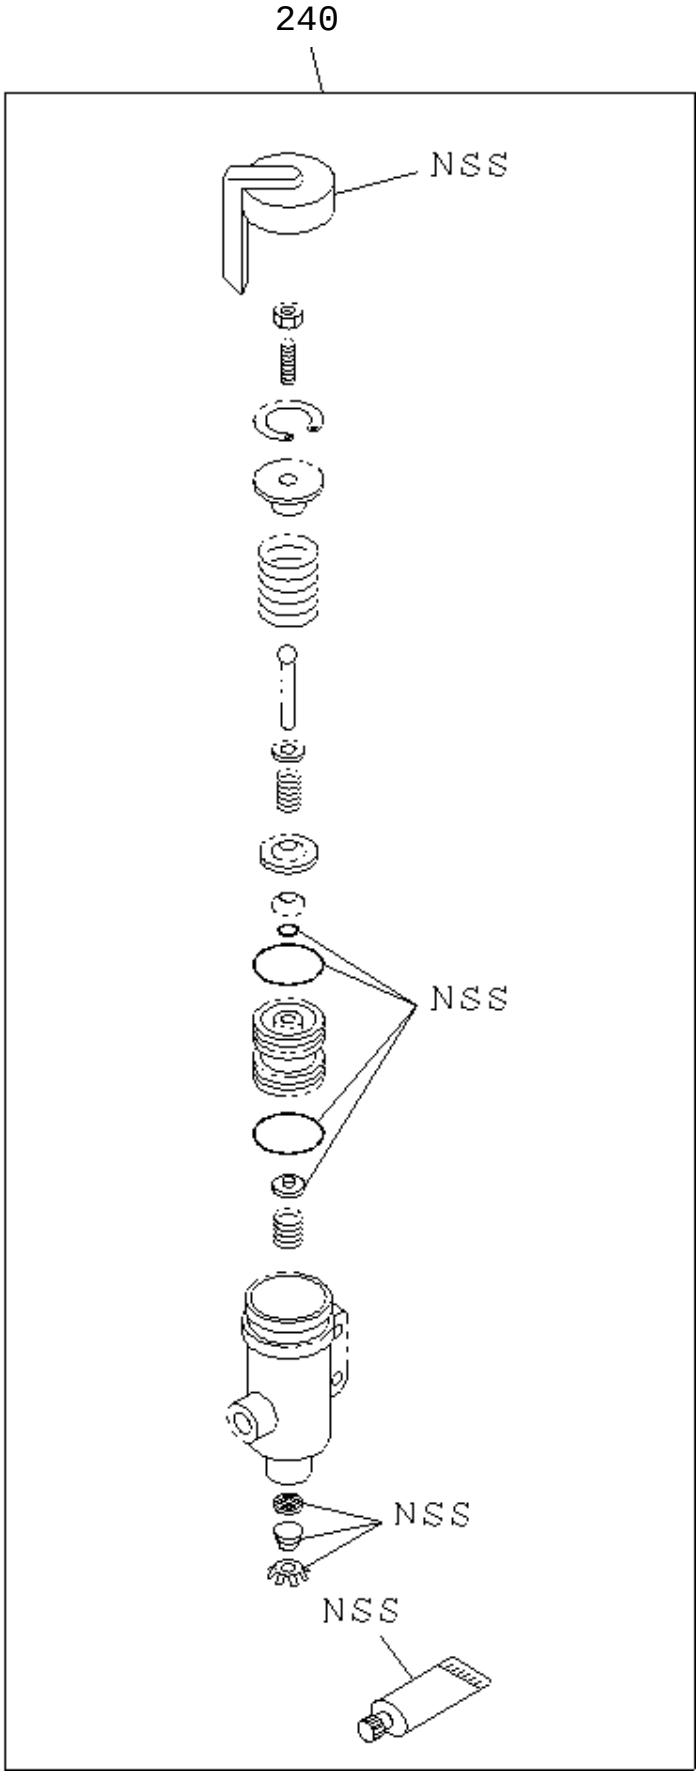


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
30		GOVERNOR; AIR CONT					
		1-48350-093-2		1312-1403	01	A	
		1-48350-093-2		1404-	01	AB	
31		BOLT; GOV TO FRAME					
		0-28650-825-0		1312-1403	02	A	M8X25 FLANGE IDN
		0-28650-825-0		1404-	02	AB	M8X25 FLANGE IDN
33		BRACKET; GOV,AIR CONT					
		8-98120-459-1		1312-1403	01	A	
		8-98120-459-1		1404-	01	AB	
34		BOLT; BRKT,GOV					
		0-28650-830-0		1312-1403	02	A	M8X30 FLANGE
		0-28650-830-0		1404-	02	AB	M8X30 FLANGE
35		NUT; GOV TO FRAME					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
38		NUT; BRKT,GOV					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
93		CONNECTOR; GOV					
		1-09650-074-1		1312-1403	01	A	M12 & PT1/4 STRAIGHT
		1-09650-074-1		1404-	01	AB	M12 & PT1/4 STRAIGHT
108		CONNECTOR; ELBOW					
		1-09660-956-0		1312-1403	01	A	DIN8 & R1/4 ELBOW
		1-09660-956-0		1404-	01	AB	DIN8 & R1/4 ELBOW
237		VALVE; SAFETY					
		1-48320-012-2		1312-1403	01	A	
		1-48320-012-2		1404-	01	AB	
240		REPAIR KIT; AIR CONT GOV					
		1-85576-467-0		1312-1403	01	A	
		1-85576-467-0		1404-	01	AB	
3-20		Move to 3-20					
5-01		Move to 5-01					

https://truckmanualshub.com/

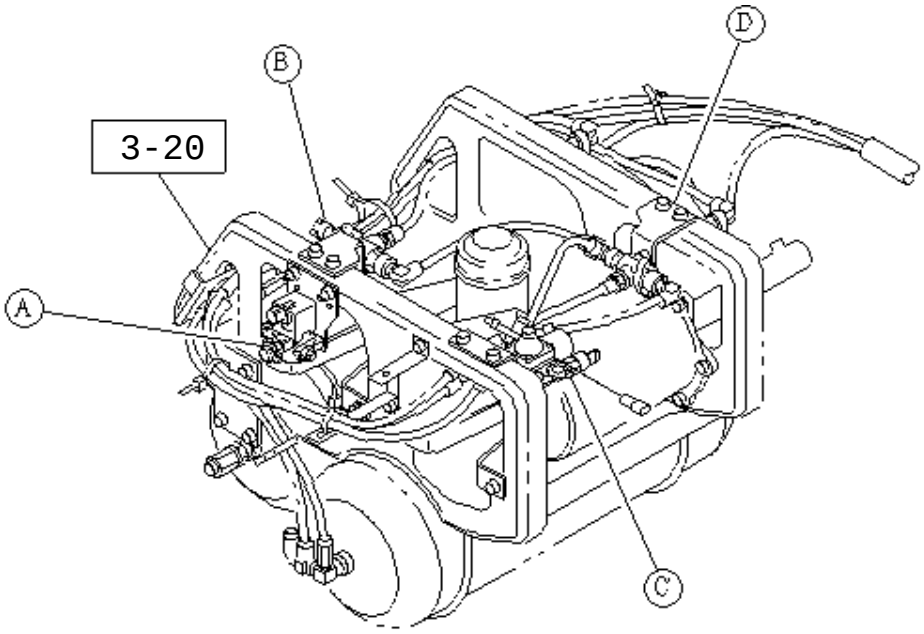

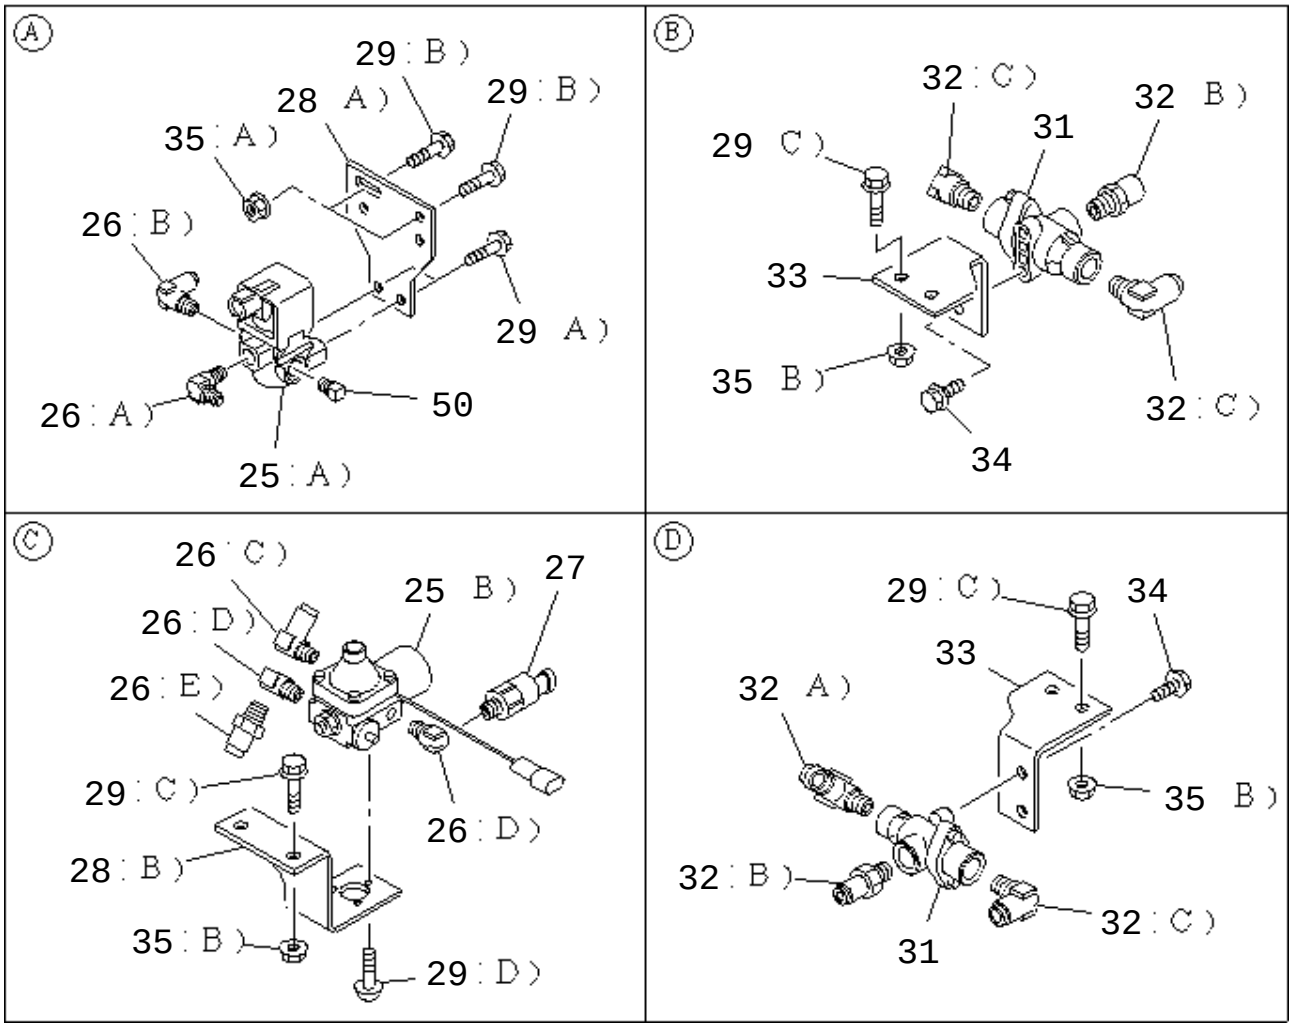

https://truckmanualshub.com/

3-25 BRAKE LOCK CONTROL


KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
25		VALVE; CONT,BRK LOCK					
		1-46362-112-0		1402-	01	A	MIXER CHASSIS<6NR> (B)
		1-82563-871-2		1402-1403	01	A	MIXER CHASSIS<6NR> (A)
		1-82563-871-2		1404-	01	A	MIXER CHASSIS<6NR> (A)
		1-82563-871-2		1404-	01	B	(A)
		8-97948-152-0		1312-1401	01	A	(A) IDN
		8-97948-152-0		1402-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) IDN
26		UNION; CONT VLV					
		1-09660-693-0		1402-	02	A	MIXER CHASSIS<6NR> (D) PT1/4 2WAY
		1-09660-958-0		1402-	01	A	MIXER CHASSIS<6NR> (C) DIN12 & R1/4 ELBOW
		1-09660-967-0		1402-	01	A	MIXER CHASSIS<6NR> (E) DIN12 & R1/4 STRAIGHT
		1-09650-430-0		1312-1403	01	A	(A) M12 & PT1/4 ELBOW
		1-09650-430-0		1404-	01	AB	(A) M12 & PT1/4 ELBOW
		1-09660-956-0		1312-1403	01	A	(B) DIN8 & R1/4 ELBOW
		1-09660-956-0		1404-	01	AB	(B) DIN8 & R1/4 ELBOW
27		SWITCH; PRESS					
		8-97609-251-0		1402-	01	A	MIXER CHASSIS<6NR>
28		BRACKET; CONT VLV					
		8-98250-617-0		1402-	01	A	MIXER CHASSIS<6NR> (B)
		8-98179-100-0		1312-1403	01	A	(A)
		8-98179-100-0	A	1404-1405	01	AB	(A)
		8-98273-570-0		1406-	01	AB	(A)
29		BOLT; BRKT,CONT VLV					
		0-28651-030-0		1402-	06	A	MIXER CHASSIS<6NR> (C) M10X30 FLANGE
		0-36220-514-0		1402-	03	A	MIXER CHASSIS<6NR> (D) M5X14 W/LK WASHER
		0-28650-820-0		1312-1403	02	A	(A) M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	(A) M8X20 FLANGE IDN
		0-28650-825-0		1312-1403	02	A	(B) M8X25 FLANGE IDN
		0-28650-825-0		1404-	02	AB	(B) M8X25 FLANGE IDN
31		VALVE; DOUBLE CHECK					
		1-48410-531-1		1402-	02	A	MIXER CHASSIS<6NR>
32		UNION; DOUBLE CHECK VLV					

https://truckmanualshub.com/

3-25 BRAKE LOCK CONTROL


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
32		1-09660-959-0		1402-	03	A	MIXER CHASSIS<6NR> (C) DIN12 & R3/8 ELBOW
		1-09660-965-0		1402-	02	A	MIXER CHASSIS<6NR> (B) DIN12 & R3/8 STRAIGHT
		1-09661-007-0		1402-	01	A	MIXER CHASSIS<6NR> (A) DIN12X2 & R3/8 3WAY
33		BRACKET; DBL CHECK VLV 8-98250-622-0		1402-	02	A	MIXER CHASSIS<6NR>
34		BOLT; BRKT 0-28050-812-0		1402-	04	A	MIXER CHASSIS<6NR> M8X12 FLANGE
35		NUT; BRKT 0-91180-210-0		1402-	06	A	MIXER CHASSIS<6NR> (B) M10 FLANGE
		0-91180-108-0		1312-1403	02	A	(A) M8 FLANGE
		0-91180-108-0		1404-	02	AB	(A) M8 FLANGE
50		PLUG 9-99204-513-0		1312-1403	01	A	PT1/4
		9-99204-513-0		1404-	01	AB	PT1/4
3-20		Move to 3-20					

https://truckmanualshub.com/

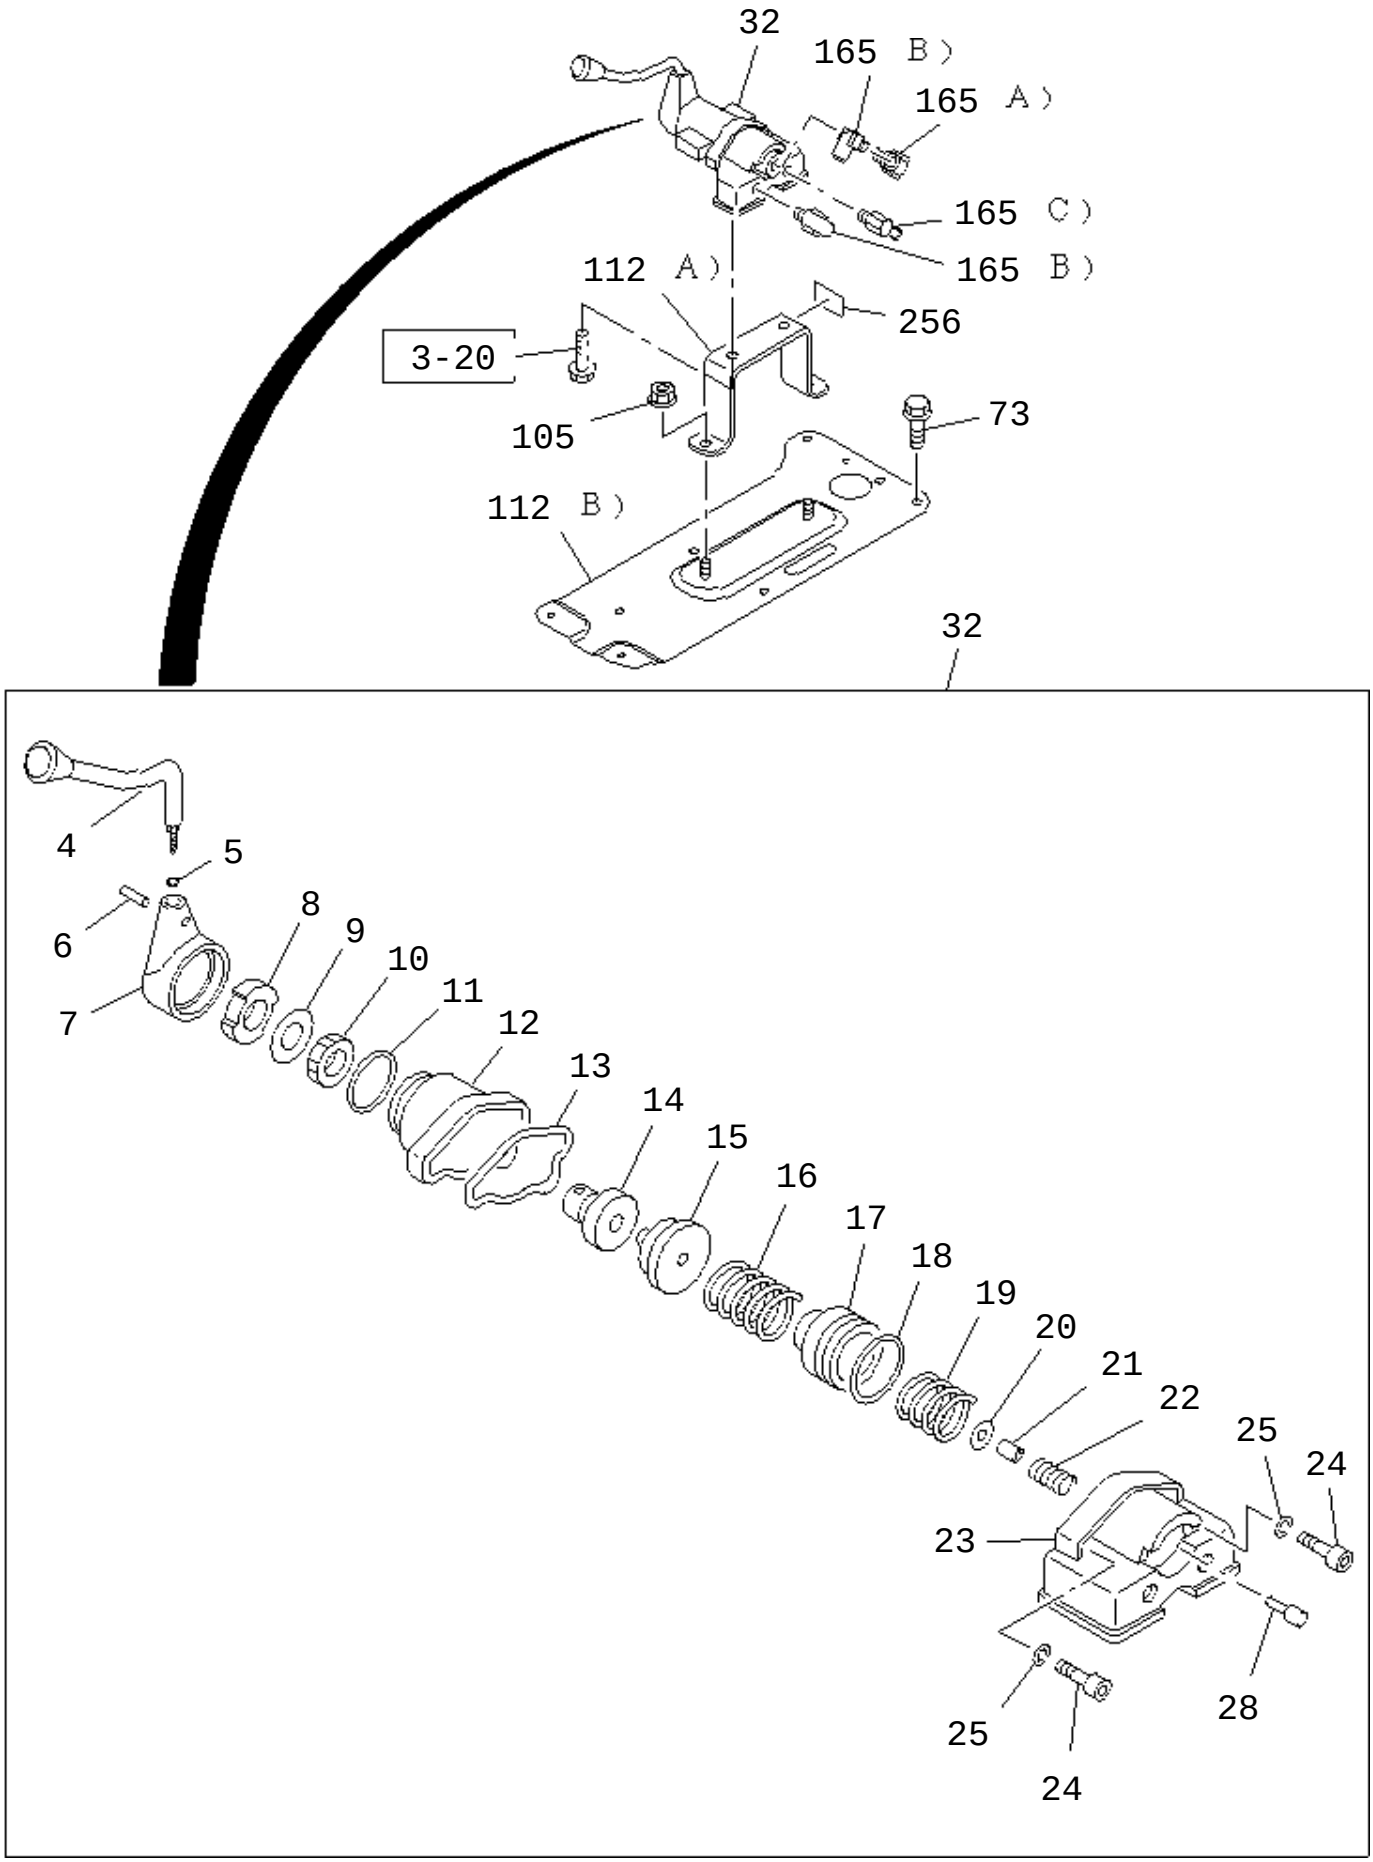


https://truckmanualshub.com/


REPAIR KIT;HAND CONTROL BRAKE VALVE

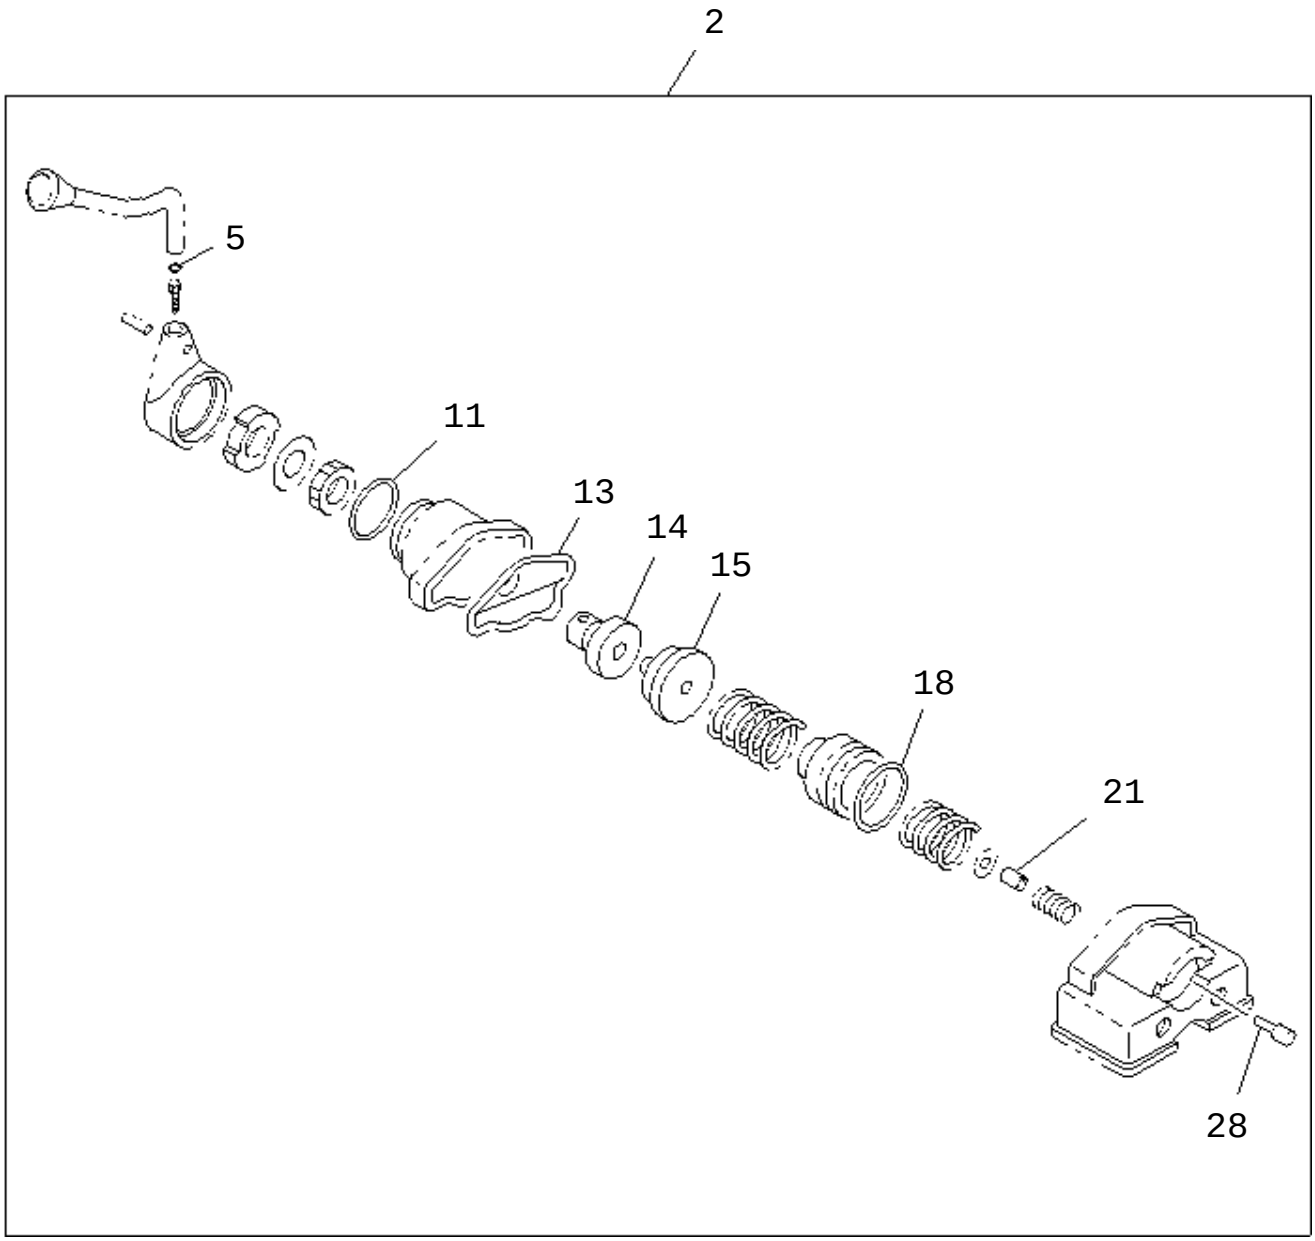

https://truckmanualshub.com/


VALVE;TRAILER BRAKE CONTROL

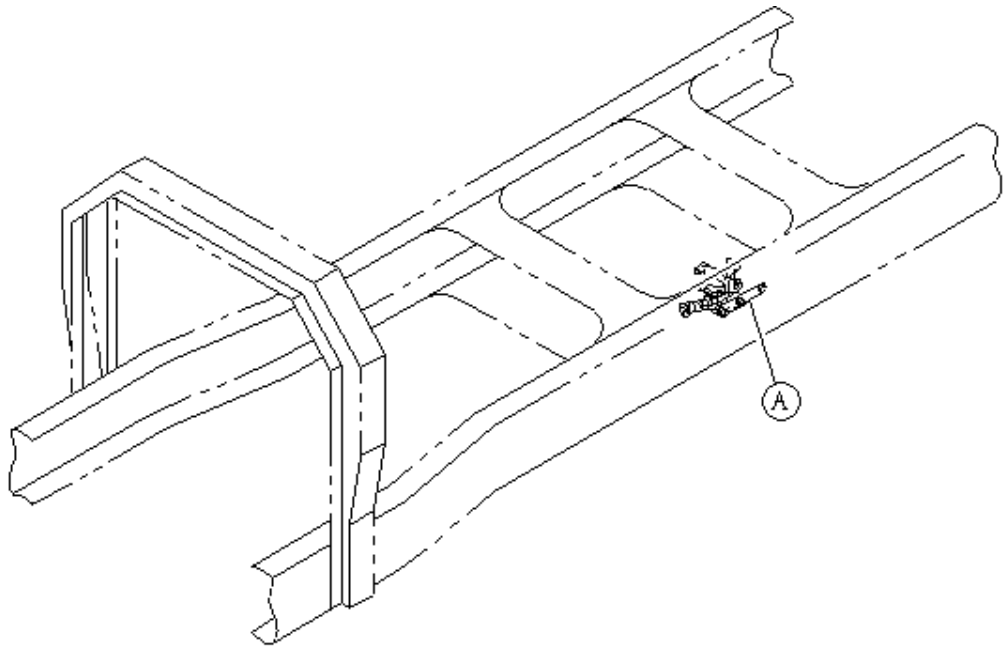

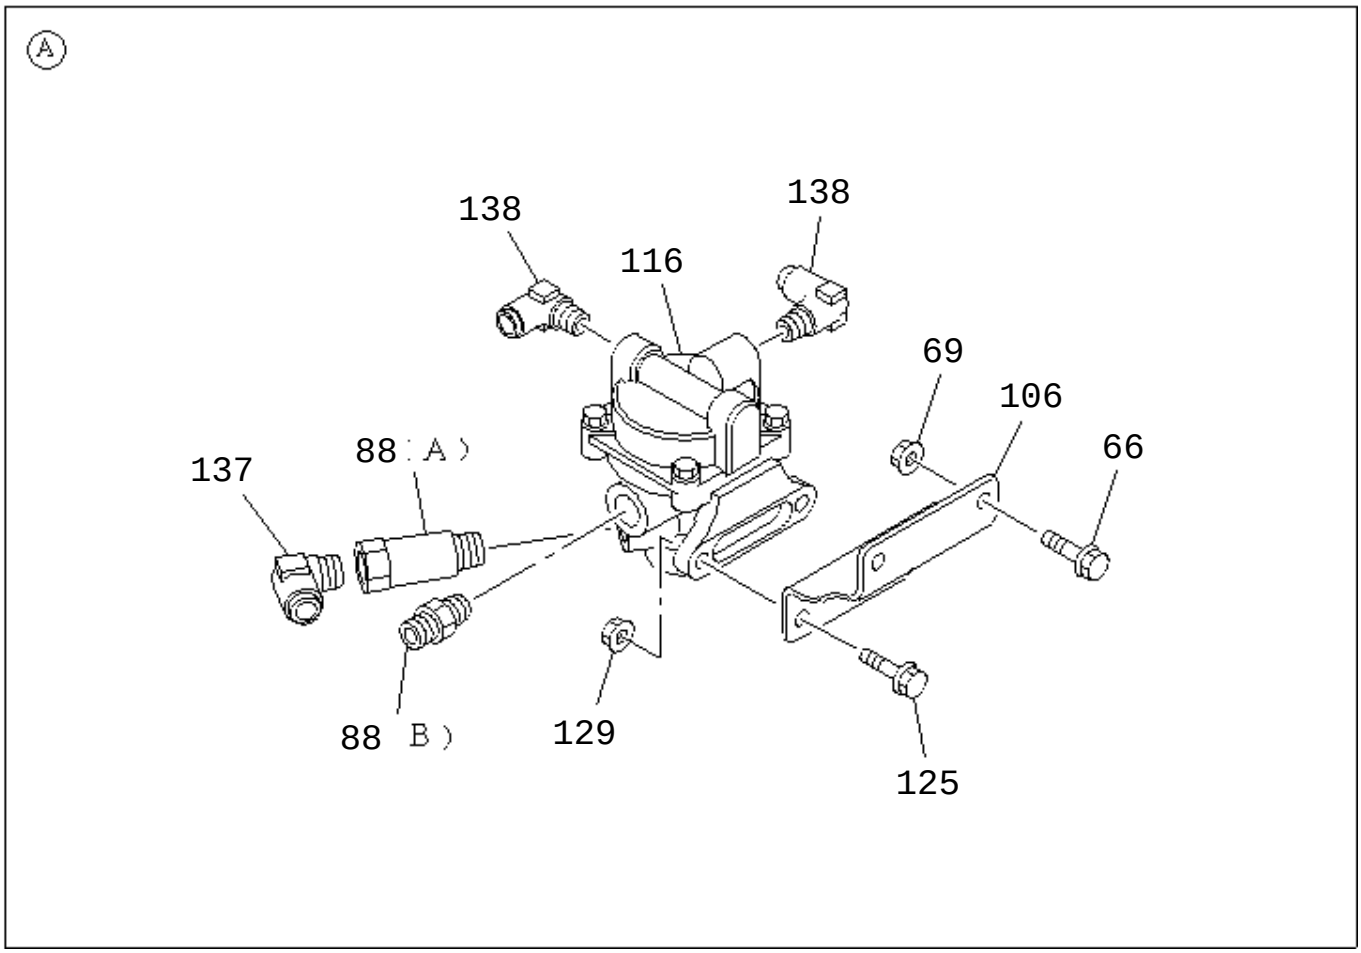


https://truckmanualshub.com/

COMPONENT,REPAIR KIT;TRLR BRK CONT VLV

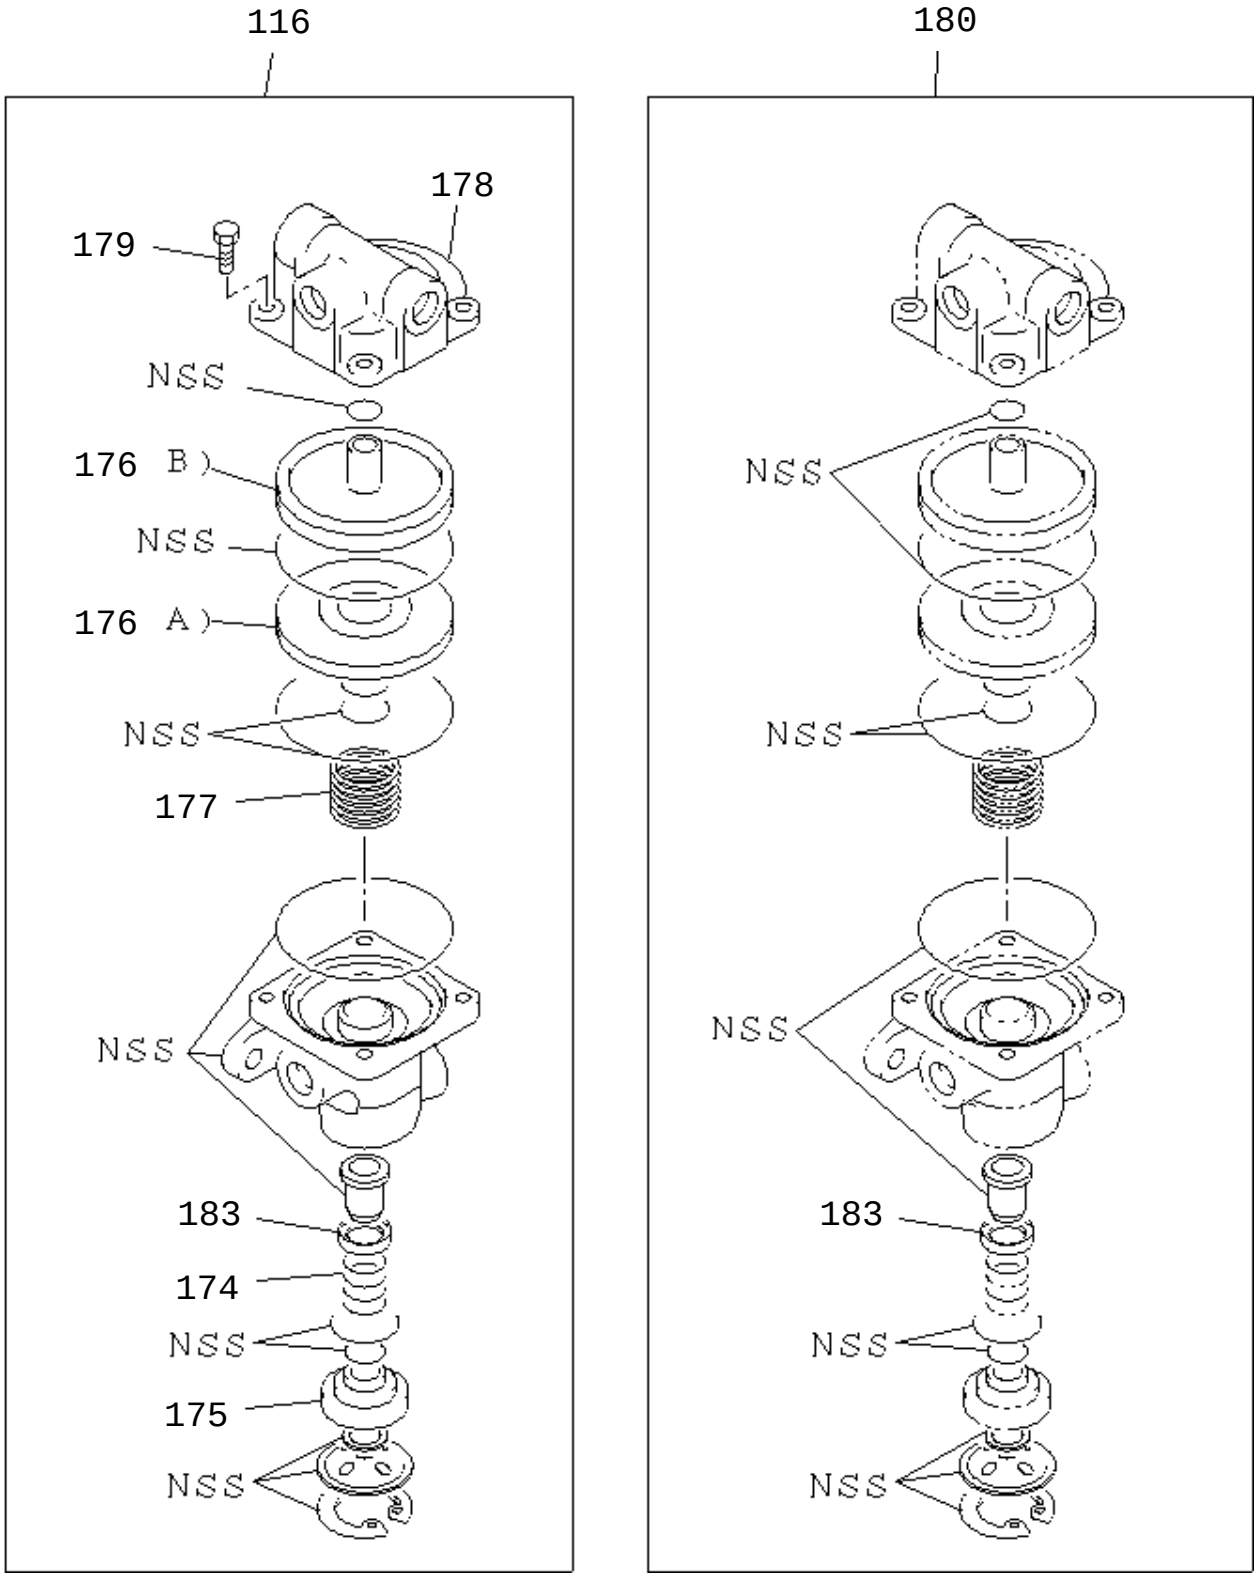

https://truckmanualshub.com/

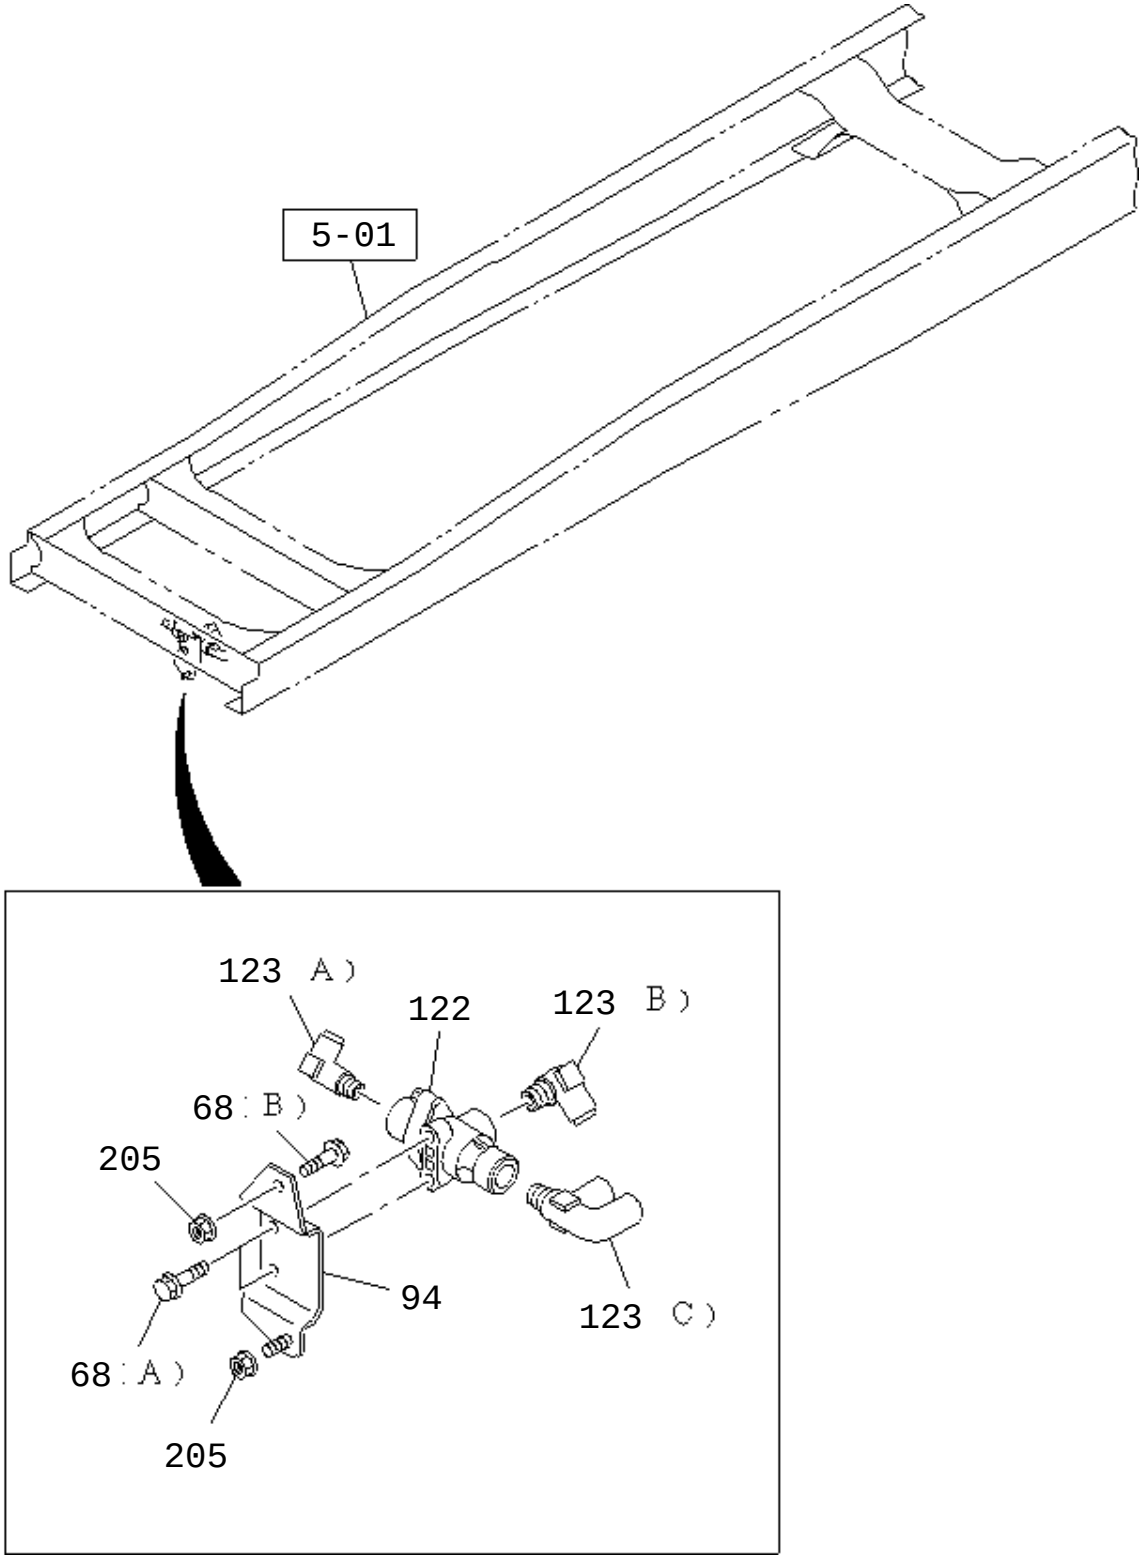

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
2		REPAIR KIT; HAND BRK VLV 1-85576-181-0		1404-	01	B	
4		HANDLE ASM; BRK VLV 1-48119-144-0		1404-	01	B	
5		GASKET; HANDLE 1-48119-128-0		1404-	01	B	
6		PIN; SPR 1-48119-143-0		1404-	01	B	
7		HEAD; BRK VLV 1-48119-131-1		1404-	01	B	
8		STOPPER; BRK VLV 1-48119-239-0		1404-	01	B	
9		WASHER; LK,ADJ 1-48119-123-0		1404-	01	B	
10		RING; ADJ 1-48119-122-0		1404-	01	B	
11		GASKET; HD TO COVER 1-48119-130-0		1404-	01	B	
12		COVER; BRK VLV 1-48129-097-1		1404-	01	B	
13		GASKET; BODY TO COVER 1-48119-120-0		1404-	01	B	
14		FOLLOWER; CAM 1-48129-135-0		1404-	01	B	
15		CAM; FOLLOWER 1-48129-134-0		1404-	01	B	
16		SPRING; GRUDUATING 1-48129-101-0		1404-	01	B	
17		PISTON; SPR 1-48129-095-0		1404-	01	B	
18		GASKET; BODY 1-48129-096-0		1404-	01	B	
19		SPRING; PISTON 1-48129-094-0		1404-	01	B	
20		GUIDE; VLV 1-48129-090-0		1404-	01	B	
21		VALVE; IN & EXH 1-48121-017-0		1404-	01	B	
22		SPRING; VLV 1-48123-024-0		1404-	01	B	
23		BODY; BRK VLV 1-48111-060-1		1404-	01	B	
24		BOLT; EXH VLV 1-48129-092-0		1404-	02	B	
25		WASHER; LK,EXH VLV 1-48129-093-0		1404-	02	B	
28		STEM ASM; BRK VLV 1-48129-089-0		1404-	01	B	
32		VALVE; BRK,HAND CONT 1-48100-651-0		1404-	01	B	
66		BOLT; VLV BRKT 0-28651-035-0		1404-	02	B	M10X35 FLANGE IDN
68		BOLT; DOUBLE CHECK VLV 0-28050-812-0		1404-	02	B	(A) M8X12 FLANGE
		0-28650-825-0		1404-	01	B	(B) M8X25 FLANGE IDN
69		NUT; VLV BRKT 0-91180-210-0		1404-	02	B	M10 FLANGE
73		BOLT; BRKT 0-52000-616-0		1404-	05	B	M6X16
88		CONNECTOR; ELBOW 1-09660-966-0		1404-	01	B	(B) DIN12 & R1/2 STRAIGHT


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
88		8-97622-084-0		1404-	01	B	(A)
94		BRACKET; CHECK VLV 8-98177-521-1		1404-	01	B	
105		NUT; BRKT 0-91180-108-0		1404-	02	B	M8 FLANGE
106		BRACKET; VLV 8-98126-366-0		1404-	01	B	
112		BRACKET; CONT VLV 1-73908-268-0		1404-	01	B	(A)
		8-98251-373-0		1404-	01	B	(B)
116		VALVE; DUAL RELAY 1-48210-157-1		1404-	01	B	
122		VALVE ASM; DOUBLE CHECK 1-48410-531-1		1404-	01	B	
123		CONNECTOR; DBL CHECK VLV 1-09660-957-0		1404-	01	B	(A) DIN8 & R3/8 ELBOW
		1-09660-959-0		1404-	01	B	(B) DIN12 & R3/8 ELBOW
		1-09661-026-0		1404-	01	B	(C) DIN12X2 & PT3/8 DOUBLE ELBOW
125		BOLT; RELAY VLV 0-28651-035-0		1404-	02	B	M10X35 FLANGE IDN
129		NUT; VLV 0-91180-210-0		1404-	02	B	M10 FLANGE
137		CONNECTOR; SUPPLY 1-09660-960-0		1404-	01	B	DIN12 & R1/2 ELBOW
138		CONNECTOR; DELIVERY 1-09660-959-0		1404-	02	B	DIN12 & R3/8 ELBOW
165		CONNECTOR; HAND BRK VLV 1-09660-693-0		1404-	01	B	(A) PT1/4 2WAY
		1-09660-956-0		1404-	02	B	(B) DIN8 & R1/4 ELBOW
		8-97062-077-1		1404-	01	B	(C)
174		SPRING; INL VLV 1-47819-040-0		1404-	01	B	
175		GUIDE; VLV,RELAY VLV 1-48129-078-0		1404-	01	B	
176		PISTON; RELAY VLV 1-48219-032-0		1404-	01	B	(A)
		1-48219-047-0		1404-	01	B	(B)
177		SPRING; RELAY VLV 1-48219-048-0		1404-	01	B	
178		COVER; RELAY VLV 1-48219-050-1		1404-	01	B	
179		BOLT; COVER,RELAY VLV 1-48219-041-0		1404-	04	B	
180		REPAIR KIT; RELAY VLV 1-85576-035-0		1404-	01	B	
183		RETAINER; VALVE 1-48213-002-0		1404-	01	B	
205		NUT; DOUBLE CHECK VLV 0-91180-108-0		1404-	02	B	M8 FLANGE
256		SEAL 1-72497-062-1		1404-	01	B	


https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
3-20 5-01		Move to 3-20 Move to 5-01					

https://truckmanualshub.com/

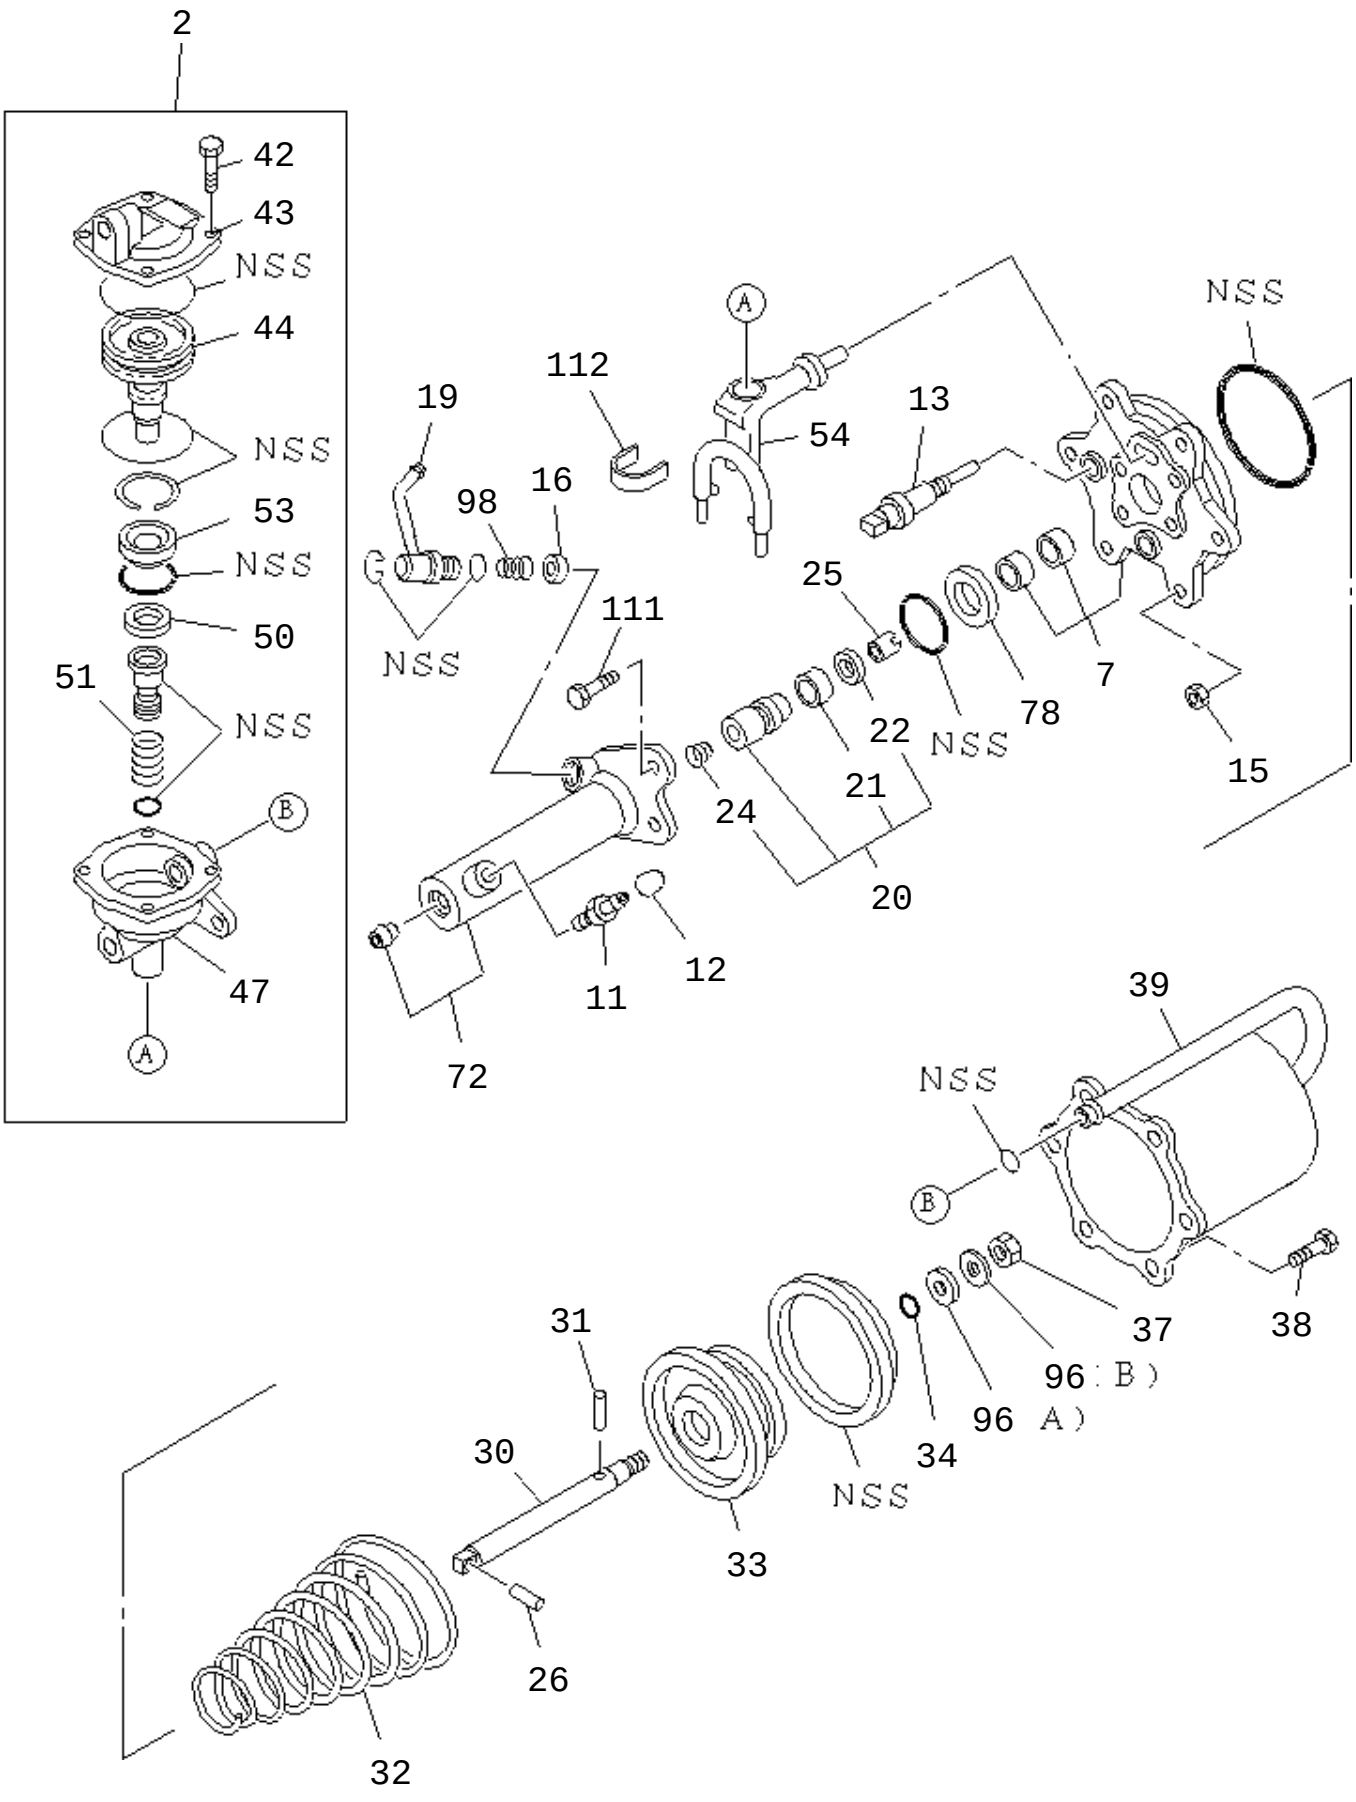

https://truckmanualshub.com/

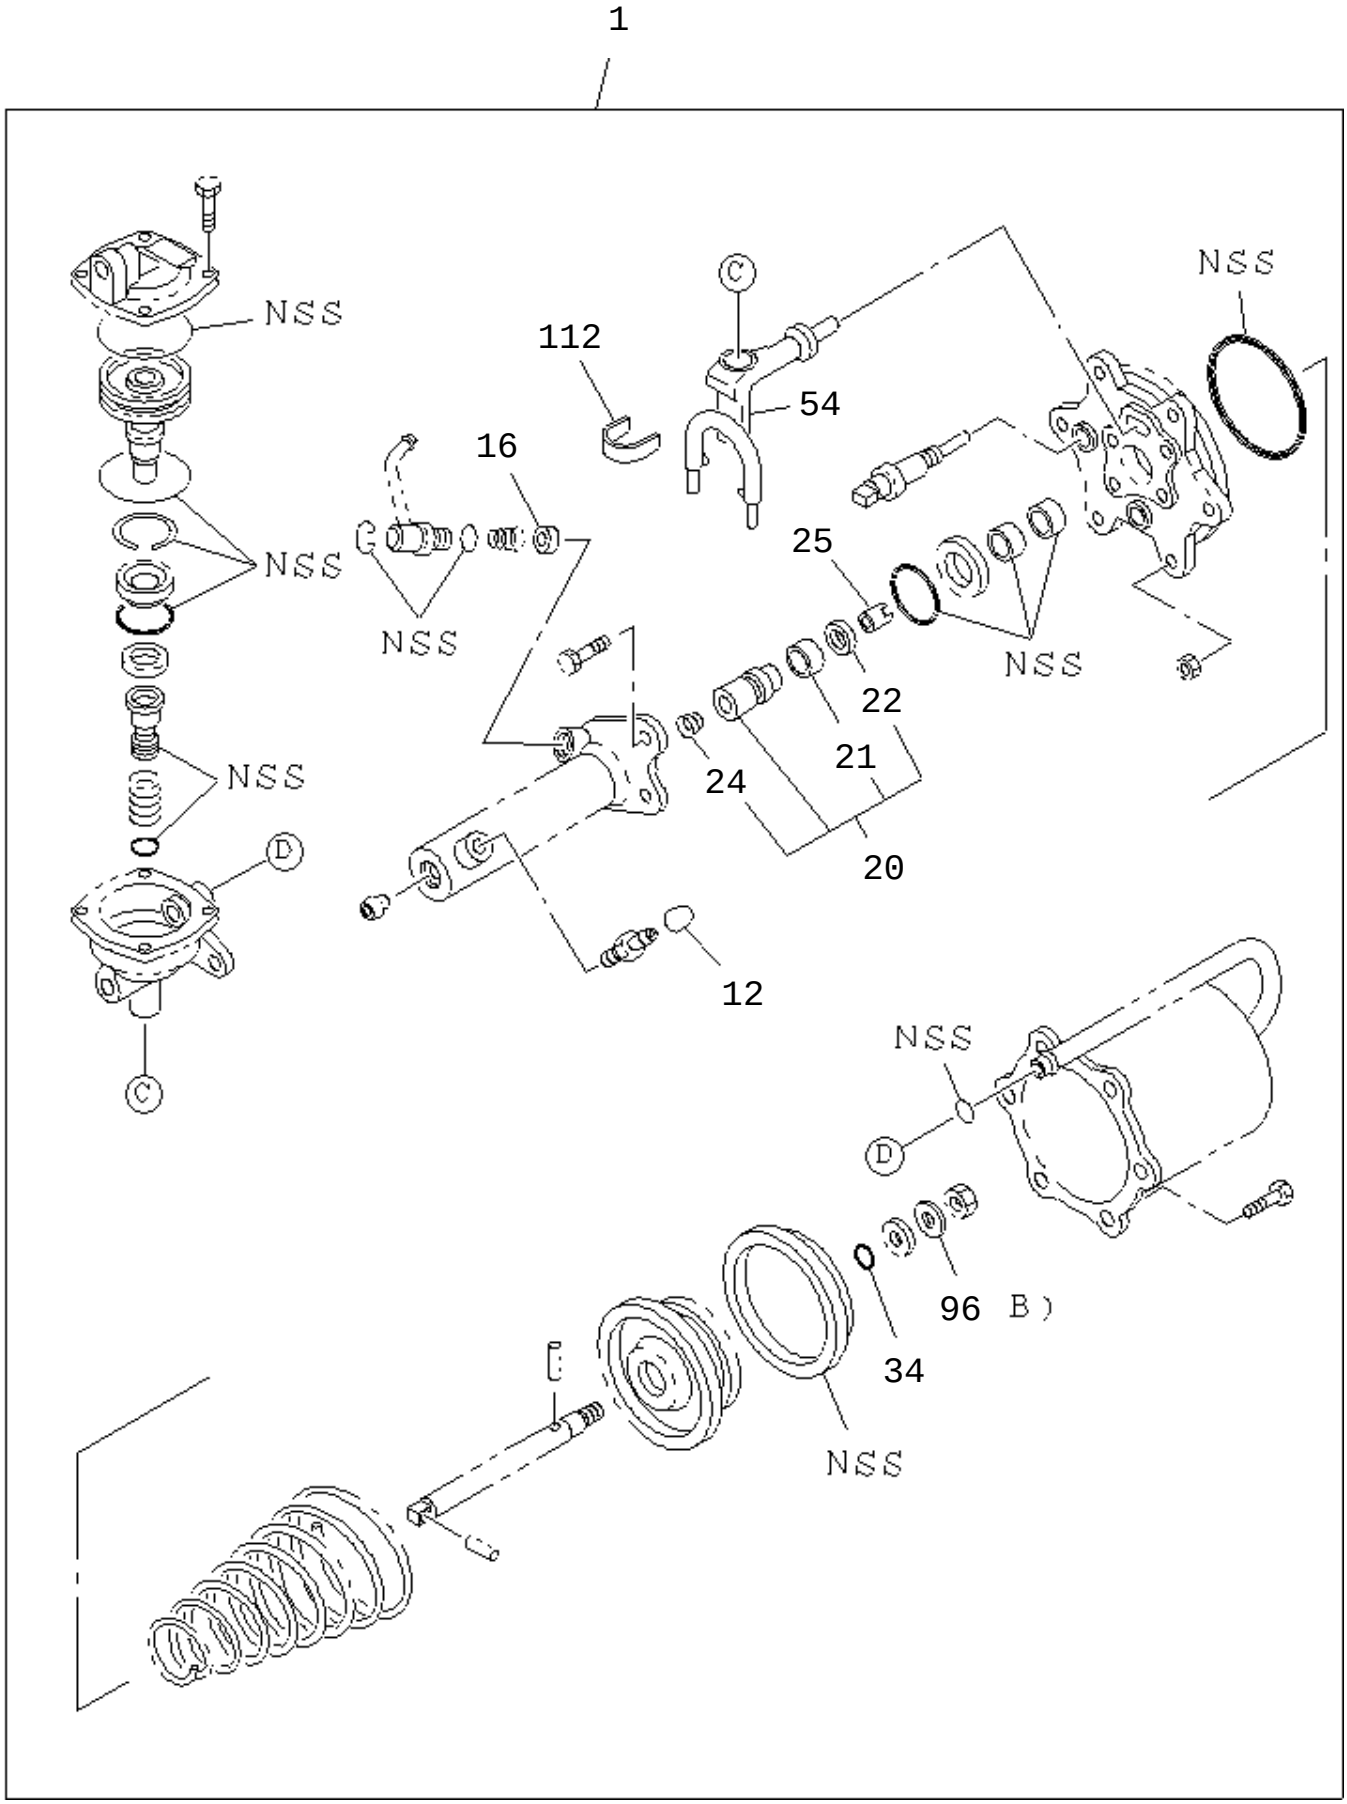

https://truckmanualshub.com/

3-33 AIR MASTER

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty for ASM A	Qty for ASM B	RESTRICTION/REMARKS A 1478007940 B 1478007950
1	B	REPAIR KIT; AIR MASTER					
		1-85576-209-0			01		
		1-85576-209-0			01		
		1-85576-209-0				01	
		1-85576-209-0				01	
2		VALVE; RELAY,AIR MASTER					
		1-47841-098-0			01		
		1-47841-098-0			01		
		1-47841-098-0				01	
		1-47841-098-0				01	
7		PLATE; END,AIR MASTER					
		1-47841-093-0			01		
		1-47841-093-0			01		
		1-47841-084-0				01	
		1-47841-084-0				01	
11		PLUG; CAP,AIR MASTER					
		9-83331-704-0			01		
		9-83331-704-0			01		
		9-83331-704-0				01	
		9-83331-704-0				01	
12		PROTECTOR; CAP,AIR MASTER					
		9-83335-044-0			01		
		9-83335-044-0			01		
		9-83335-044-0				01	
		9-83335-044-0				01	
13		SWITCH; WARNING,AIR MASTER					
		1-47819-206-0			01		
		1-47819-206-0			01		
		1-47819-206-0				01	
		1-47819-206-0				01	
15		NUT; END PLATE TO SHELL,AIR MASTER					
		8-97096-430-0			07		M10 FLANGE
		8-97096-430-0			07		M10 FLANGE
		8-97096-430-0				07	M10 FLANGE
		8-97096-430-0				07	M10 FLANGE
16		VALVE ASM					
		1-47812-024-0			01		
		1-47812-024-0			01		
		1-47812-024-0				01	
		1-47812-024-0				01	
19		CONNECTOR; END PLATE,AIR MASTER					
		1-47819-204-0			01		
		1-47819-204-0			01		
		1-47819-204-0				01	
		1-47819-204-0				01	
20		PISTON ASM; HYDRAULIC					
		1-47812-022-0			01		
		1-47812-022-0			01		
		1-47812-022-0				01	
		1-47812-022-0				01	
21		GASKET; CUP					
		1-47821-041-0			01		
		1-47821-041-0			01		
		1-47821-041-0				01	
		1-47821-041-0				01	
22		RING; PISTON,HYDRAULIC					
		9-83325-077-0			01		
		9-83325-077-0			01		
		9-83325-077-0				01	
		9-83325-077-0				01	
24		SPRING; HYD PISTON,AIR MASTER					
		1-47829-111-0			01		
		1-47829-111-0			01		
		1-47829-111-0				01	
		1-47829-111-0				01	
25		SEAL; VALVE					
		1-47812-023-0			01		
		1-47812-023-0			01		
		1-47812-023-0				01	
		1-47812-023-0				01	
26		PIN; HYD PISTON,AIR MASTER					
		1-47829-039-0			01		
		1-47829-039-0			01		

https://truckmanualshub.com/

3-33 AIR MASTER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	Qty for ASM B	RESTRICTION/REMARKS A 1478007940 B 1478007950
26		1-47829-039-0				01	
		1-47829-039-0				01	
30		ROD; PUSH,AIR MASTER					
		1-47829-107-0			01		
		1-47829-107-0			01		
		1-47829-112-0				01	
		1-47829-112-0				01	
31		PIN; STRAIGHT					
		1-47829-108-0			01		
		1-47829-108-0			01		
		1-47829-108-0				01	
		1-47829-108-0				01	
32		SPRING; CYL SHELL,AIR MASTER					
		1-47829-109-0			01		
		1-47829-109-0			01		
		1-47829-113-0				01	
		1-47829-113-0				01	
33		PLATE; PISTON,SHELL,AIR MASTER					
		1-47829-106-0			01		
		1-47829-106-0			01		
		1-47829-106-0				01	
		1-47829-106-0				01	
34		GASKET					
		9-09561-111-0			01		ID=11.0
		9-09561-111-0			01		ID=11.0
		9-09561-111-0				01	ID=11.0
		9-09561-111-0				01	ID=11.0
37		NUT; PUSH ROD,SHELL,AIR MASTER					
		9-99111-412-0			01		M12
		9-99111-412-0			01		M12
		9-99111-412-0				01	M12
		9-99111-412-0				01	M12
38		BOLT; END PLATE TO SHELL,AIR MASTER					
		9-83315-078-0			06		
		9-83315-078-0			06		
		9-83315-078-0				06	
		9-83315-078-0				06	
39		SHELL; CYL,AIR MASTER					
		1-47811-141-0			01		
		1-47811-141-0			01		
		1-47811-143-0				01	
		1-47811-143-0				01	
42		SCREW; RELAY VLV COVER,AIR MASTER					
		1-33739-779-0			04		
		1-33739-779-0			04		
		1-33739-779-0				04	
		1-33739-779-0				04	
43		COVER; RELAY VLV,AIR MASTER					
		1-48219-132-0			01		
		1-48219-132-0			01		
		1-48219-132-0				01	
		1-48219-132-0				01	
44		PISTON; RELAY VLV,AIR MASTER					
		1-47821-054-0			01		
		1-47821-054-0			01		
		1-47821-054-0				01	
		1-47821-054-0				01	
47		BODY; RELAY VLV,AIR MASTER					
		1-47841-087-0			01		
		1-47841-087-0			01		
		1-47841-087-0				01	
		1-47841-087-0				01	
50		RETAINER; VALVE,INL,AIR MASTER					
		1-47819-210-0			01		
		1-47819-210-0			01		
		1-47819-210-0				01	
		1-47819-210-0				01	
51		SPRING; INL VLV,AIR MASTER					
		1-47819-208-0			01		
		1-47819-208-0			01		
		1-47819-208-0				01	
		1-47819-208-0				01	
53		SEAT; GUIDE VALVE,AIR MASTER					

https://truckmanualshub.com/


3-33 AIR MASTER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	Qty for ASM B	RESTRICTION/REMARKS A 1478007940 B 1478007950
53		1-47819-239-0			01		
		1-47819-239-0			01		
		1-47819-239-0				01	
		1-47819-239-0				01	
54		COVER; EXH,END PLATE,AIR MASTER					
		1-47819-187-0			01		
		1-47819-187-0			01		
		1-47819-187-0				01	
		1-47819-187-0				01	
72		CYLINDER; AIR MASTER					
		1-47811-142-0			01		
		1-47811-142-0			01		
		1-47811-144-0				01	
		1-47811-144-0				01	
78		COLLAR; AIR MASTER					
		1-47829-110-0			01		
		1-47829-110-0			01		
		1-47829-110-0				01	
		1-47829-110-0				01	
96		WASHER					
		1-47829-032-0			01		(B)
		1-47829-032-0			01		(B)
		1-47829-032-0				01	(B)
		1-47829-032-0				01	(B)
		1-47829-053-0			01		(A)
		1-47829-053-0			01		(A)
		1-47829-053-0				01	(A)
		1-47829-053-0				01	(A)
98		SPRING; VALVE					
		1-47819-205-0			01		
		1-47819-205-0			01		
		1-47819-205-0				01	
		1-47819-205-0				01	
111		BOLT; CYL,AIR MASTER					
		1-47819-203-0			03		
		1-47819-203-0			03		
		1-47819-203-0				03	
		1-47819-203-0				03	
112		CLAMP; EXH COVER,AIR MASTER					
		1-47819-188-0			01		
		1-47819-188-0			01		
		1-47819-188-0				01	
		1-47819-188-0				01	

https://truckmanualshub.com/

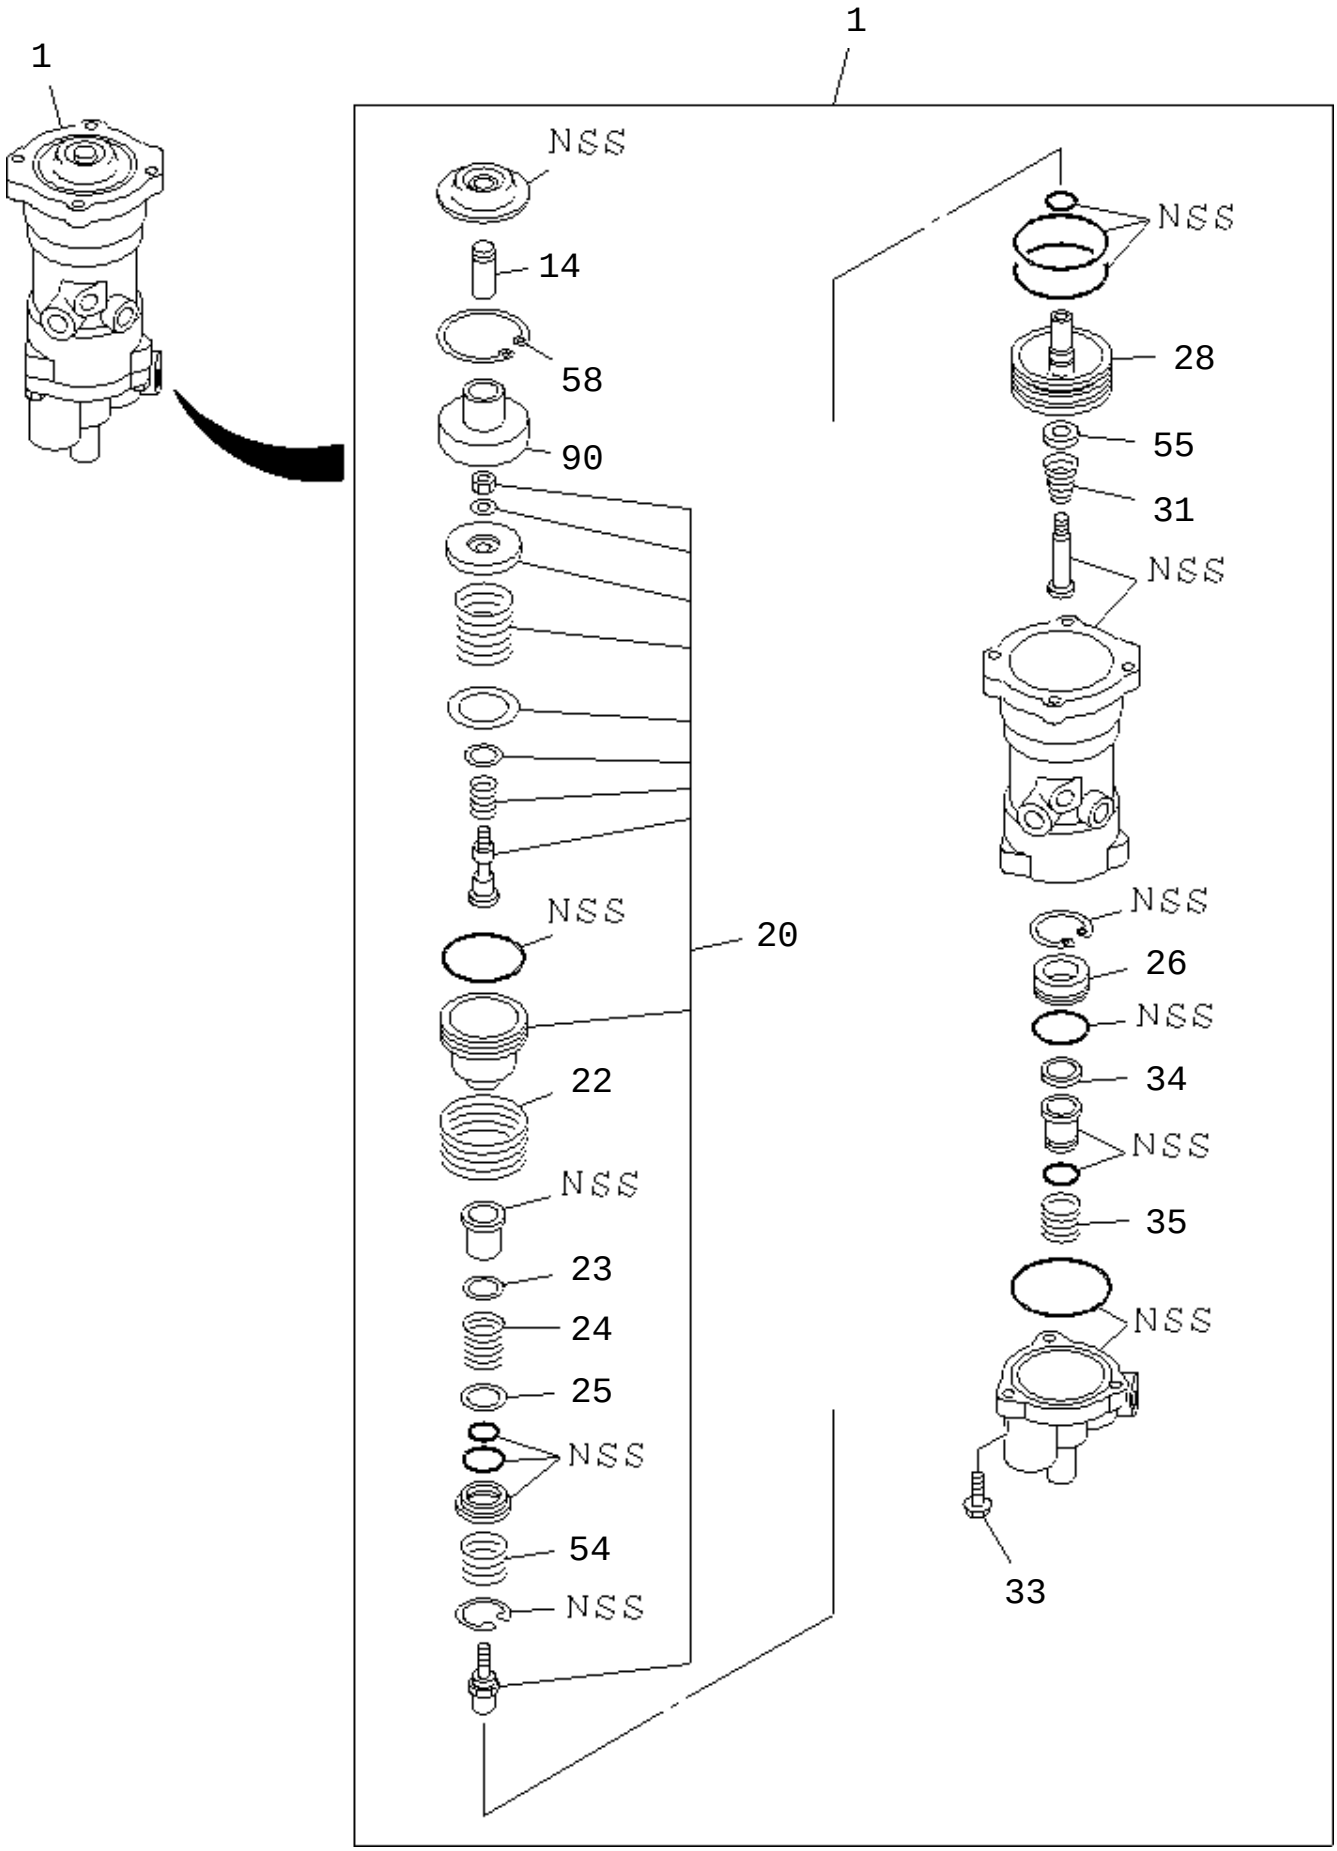

https://truckmanualshub.com/

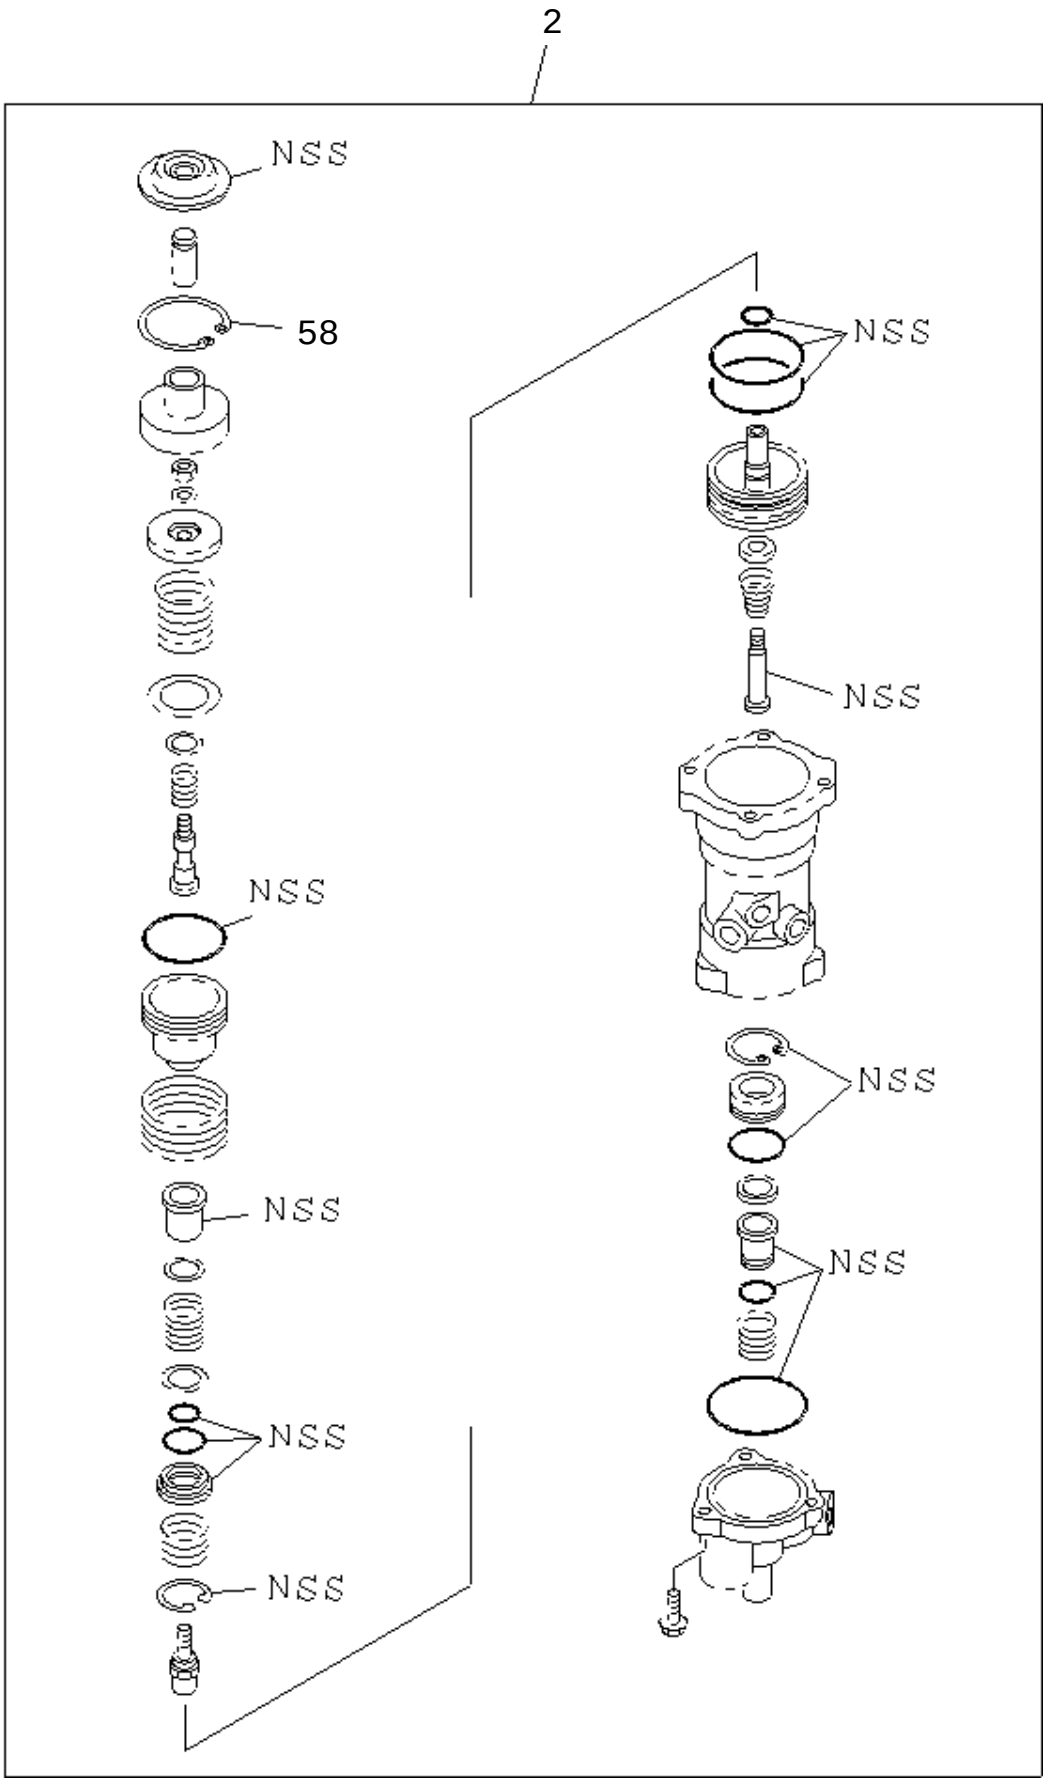


https://truckmanualshub.com/


3-34 BRAKE VALVE; AIR

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		VALVE; BRK					
		8-98222-789-0		1312-1403	01	A	
		8-98222-789-0		1404-	01	AB	
2	B	REPAIR KIT; BRK VLV					
		8-98222-820-0		1312-1403	01	A	
		8-98222-820-0		1404-	01	AB	
14		PLUNGER; BRK VLV					
		1-48119-641-0		1312-1403	01	A	
		1-48119-641-0		1404-	01	AB	
20		PISTON; UPR,BRK VLV					
		1-48119-644-0		1312-1403	01	A	
		1-48119-644-0		1404-	01	AB	
22		SPRING; PISTON,LWR,BRK VLV					
		1-48123-076-0		1312-1403	01	A	
		1-48123-076-0		1404-	01	AB	
23		WASHER; UPR,BRK VLV					
		1-48129-299-0		1312-1403	01	A	
		1-48129-299-0		1404-	01	AB	
24		SPRING; UPR,BRK VLV					
		1-48123-077-0		1312-1403	01	A	
		1-48123-077-0		1404-	01	AB	
25		WASHER; PISTON,BRK VLV					
		1-48129-300-0		1312-1403	01	A	
		1-48129-300-0		1404-	01	AB	
26		RETAINER; VLV,BRK VLV					
		1-48129-308-0		1312-1403	01	A	
		1-48129-308-0		1404-	01	AB	
28		PISTON; LWR,BRK VLV					
		1-48129-302-0		1312-1403	01	A	
		1-48129-302-0		1404-	01	AB	
31		SPRING; VLV,BRK VLV					
		1-48123-079-0		1312-1403	01	A	
		1-48123-079-0		1404-	01	AB	
33		BOLT; BODY,BRK VLV					
		1-48119-213-0		1312-1403	03	A	
		1-48119-213-0		1404-	03	AB	
34		RETAINER; VLV,BRK VLV					
		1-48129-307-0		1312-1403	01	A	
		1-48129-307-0		1404-	01	AB	
35		SPRING; VLV,BRK VLV					
		1-48123-078-0		1312-1403	01	A	
		1-48123-078-0		1404-	01	AB	
54		SPRING; PISTON,UPR,BRK VLV					
		1-48123-075-0		1312-1403	01	A	
		1-48123-075-0		1404-	01	AB	
55		RETAINER; PLATE,BRK VLV					
		1-48129-305-0		1312-1403	01	A	
		1-48129-305-0		1404-	01	AB	
58		RING; RET,EXH,BRK VLV					
		1-48219-198-0		1312-1403	01	A	
		1-48219-198-0		1404-	01	AB	
90		GUIDE; PLUNGER					
		1-48119-642-0		1312-1403	01	A	
		1-48119-642-0		1404-	01	AB	

https://truckmanualshub.com/

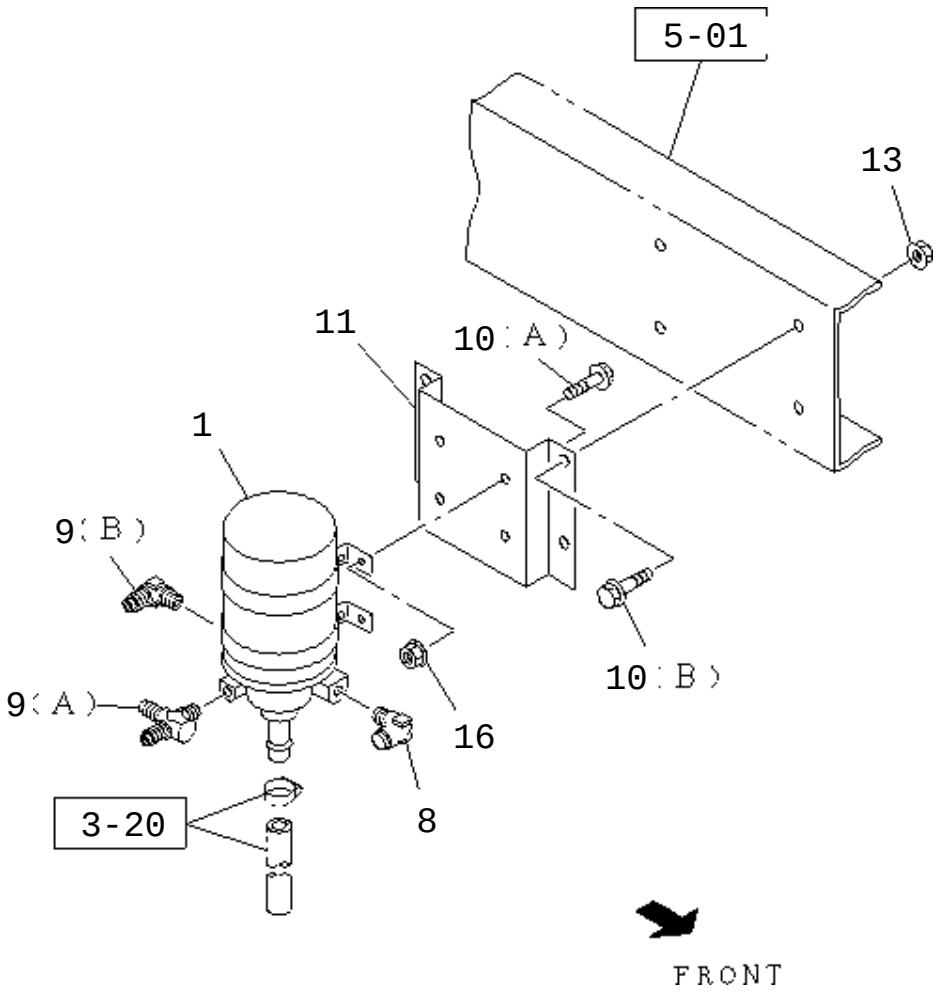



https://truckmanualshub.com/

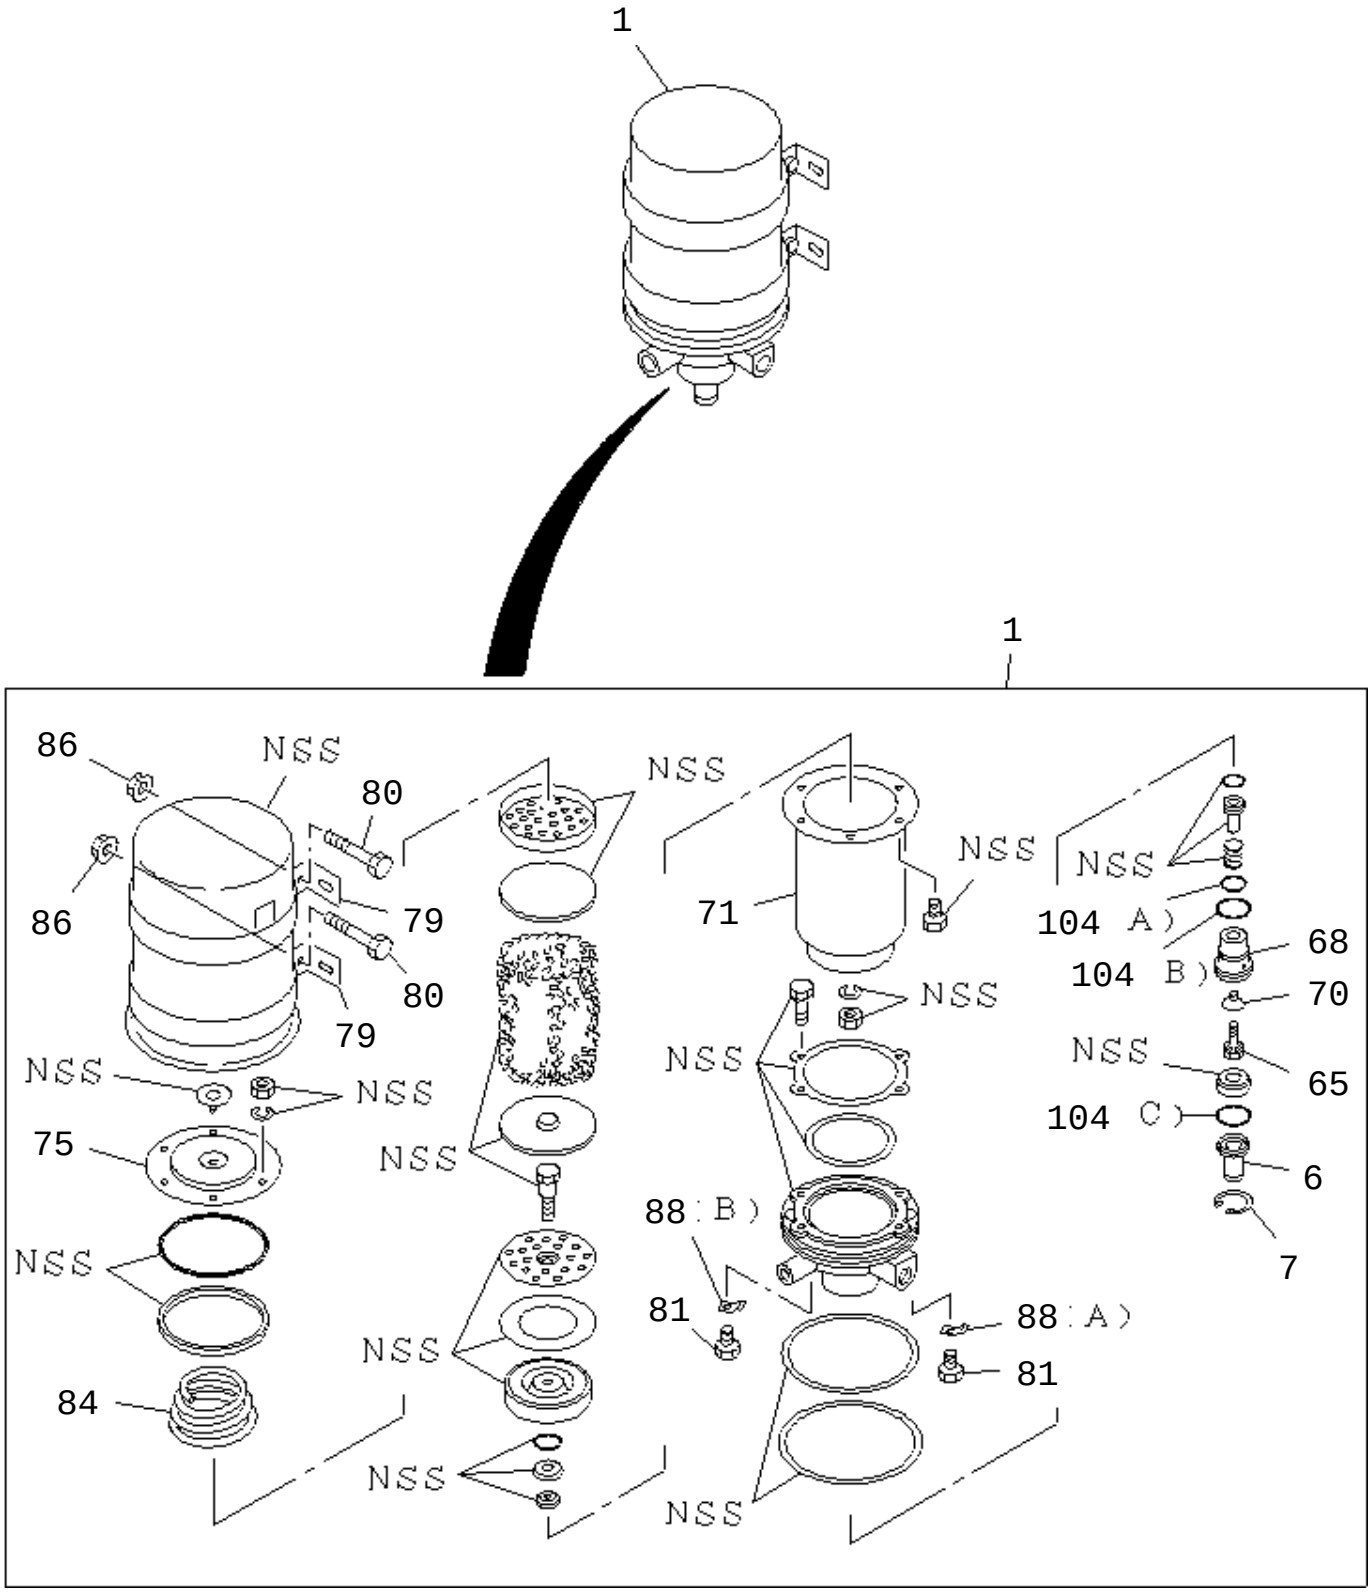

https://truckmanualshub.com/

REPAIR KIT AND PISTON KIT

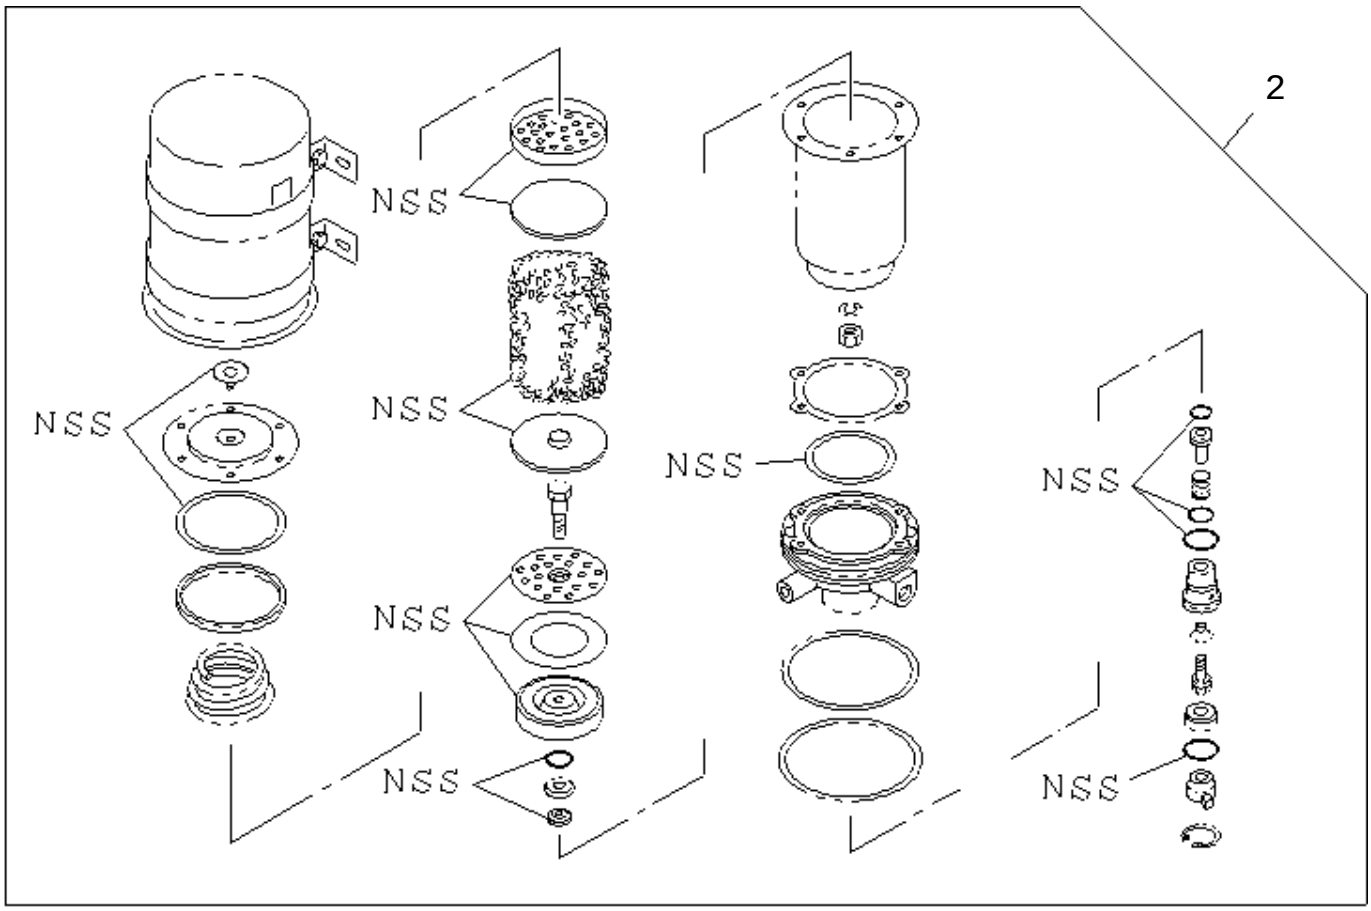

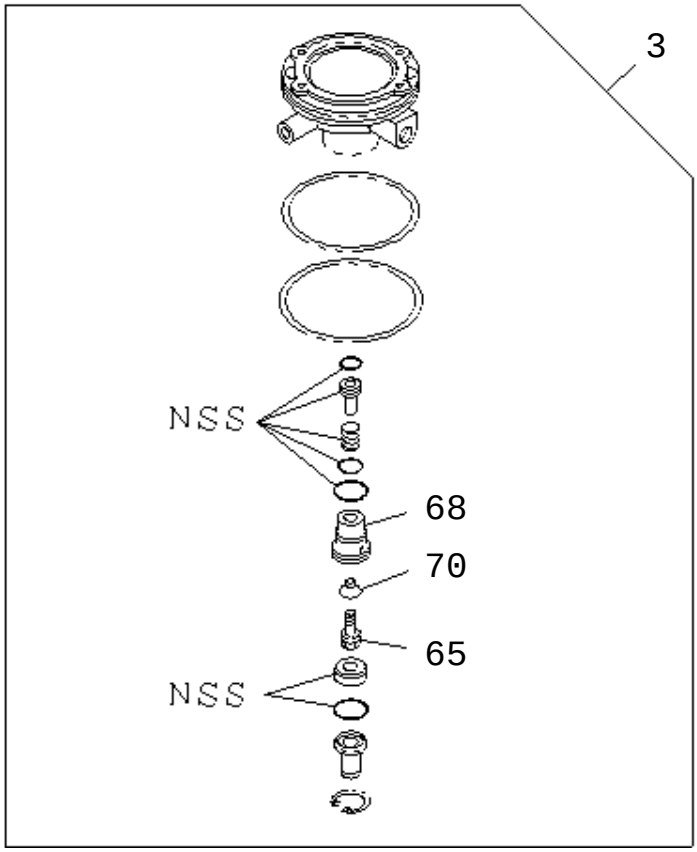

https://truckmanualshub.com/


3-46 AIR DRYER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		DRYER; AIR					
		8-98182-324-0		1312-1403	01	A	
		8-98182-324-0		1404-	01	AB	
2		REPAIR KIT; AIR DRYER					
		1-85576-463-0		1312-1403	01	A	
		1-85576-463-0		1404-	01	AB	
3		PISTON KIT; AIR DRYER					
		1-85576-057-1		1312-1403	01	A	
		1-85576-057-1		1404-	01	AB	
6		COVER; EXH,AIR DRYER					
		1-48199-101-0		1312-1403	01	A	
		1-48199-101-0		1404-	01	AB	
7		RING; SNAP,AIR DRYER					
		1-48199-154-0		1312-1403	01	A	
		1-48199-154-0		1404-	01	AB	
8		CONNECTOR; OUT,AIR DRYER					
		1-09660-960-0		1312-1403	01	A	DIN12 & R1/2 ELBOW
		1-09660-960-0		1404-	01	AB	DIN12 & R1/2 ELBOW
9		CONNECTOR; PIPE,AIR DRYER					
		1-09656-230-1		1312-1403	01	A	(A) M12X2 & PT1/4 3WAY
		1-09656-230-1		1404-	01	AB	(A) M12X2 & PT1/4 3WAY
		1-48320-026-2		1312-1403	01	A	(B) M22 & R1/2 W/VALVE
		1-48320-026-2		1404-	01	AB	(B) M22 & R1/2 W/VALVE
10		BOLT; AIR DRYER					
		0-28651-025-0		1312-1403	04	A	(A) M10X25 FLANGE IDN
		0-28651-025-0		1404-	04	AB	(A) M10X25 FLANGE IDN
		0-28651-035-0		1312-1403	04	A	(B) M10X35 FLANGE IDN
		0-28651-035-0		1404-	04	AB	(B) M10X35 FLANGE IDN
11		BRACKET; AIR DRYER					
		1-48317-876-0		1312-1403	01	A	
		1-48317-876-0		1404-	01	AB	
13		NUT; AIR DRYER					
		0-91180-210-0		1312-1403	04	A	M10 FLANGE
		0-91180-210-0		1404-	04	AB	M10 FLANGE
16		NUT; BRKT					
		0-91180-210-0		1312-1403	04	A	M10 FLANGE
		0-91180-210-0		1404-	04	AB	M10 FLANGE
65		BOLT; PURGE VLV					
		1-48199-393-0		1312-1403	01	A	
		1-48199-393-0		1404-	01	AB	
68		BODY; VALVE					
		1-48199-216-0		1312-1403	01	A	
		1-48199-216-0		1404-	01	AB	
70		VALVE; AIR DRYER					
		1-48199-105-0		1312-1403	01	A	
		1-48199-105-0		1404-	01	AB	
71		CASE; INNER,AIR DRYER					
		1-48199-156-1		1312-1403	01	A	

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
71		1-48199-156-1		1404-	01	AB	
75		COVER; CASE,AIR DRYER					
		1-48199-167-0		1312-1403	01	A	
		1-48199-167-0		1404-	01	AB	
79		BRACKET; AIR DRYER					
		1-48199-189-0		1312-1403	02	A	
		1-48199-189-0		1404-	02	AB	
80		BOLT; BRKT					
		1-48199-190-0		1312-1403	02	A	
		1-48199-190-0		1404-	02	AB	
81		BOLT; CASE,AIR DRYER					
		1-48199-177-0		1312-1403	02	A	
		1-48199-177-0		1404-	02	AB	
84		SPRING; AIR DRYER					
		1-48199-166-0		1312-1403	01	A	
		1-48199-166-0		1404-	01	AB	
86		NUT; BRKT					
		1-48199-320-0		1312-1403	02	A	
		1-48199-320-0		1404-	02	AB	
88		PLATE; STOPPER					
		1-48199-178-0		1312-1403	01	A	(A)
		1-48199-178-0		1404-	01	AB	(A)
		1-48199-179-0		1312-1403	01	A	(B)
		1-48199-179-0		1404-	01	AB	(B)
104		GASKET					
		1-48199-108-0		1312-1403	01	A	(A)
		1-48199-108-0		1404-	01	AB	(A)
		1-48199-109-0		1312-1403	01	A	(B)
		1-48199-109-0		1404-	01	AB	(B)
		1-48199-153-0		1312-1403	01	A	(C)
		1-48199-153-0		1404-	01	AB	(C)
3-20		Move to 3-20					
5-01		Move to 5-01					


https://truckmanualshub.com/

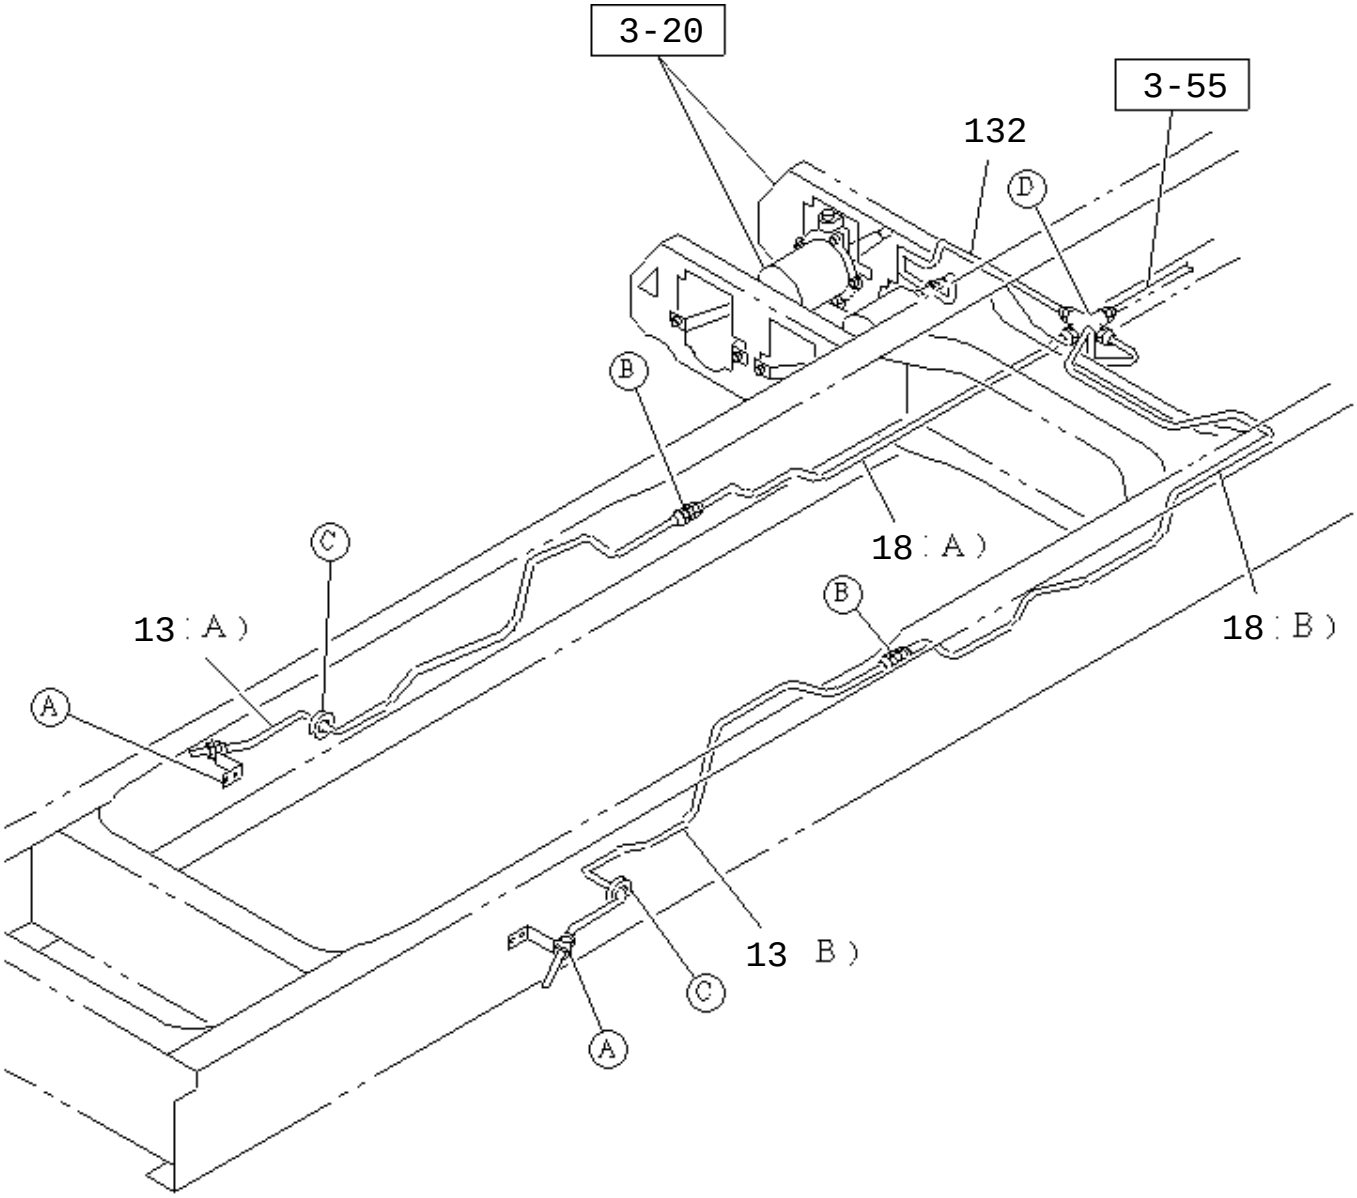

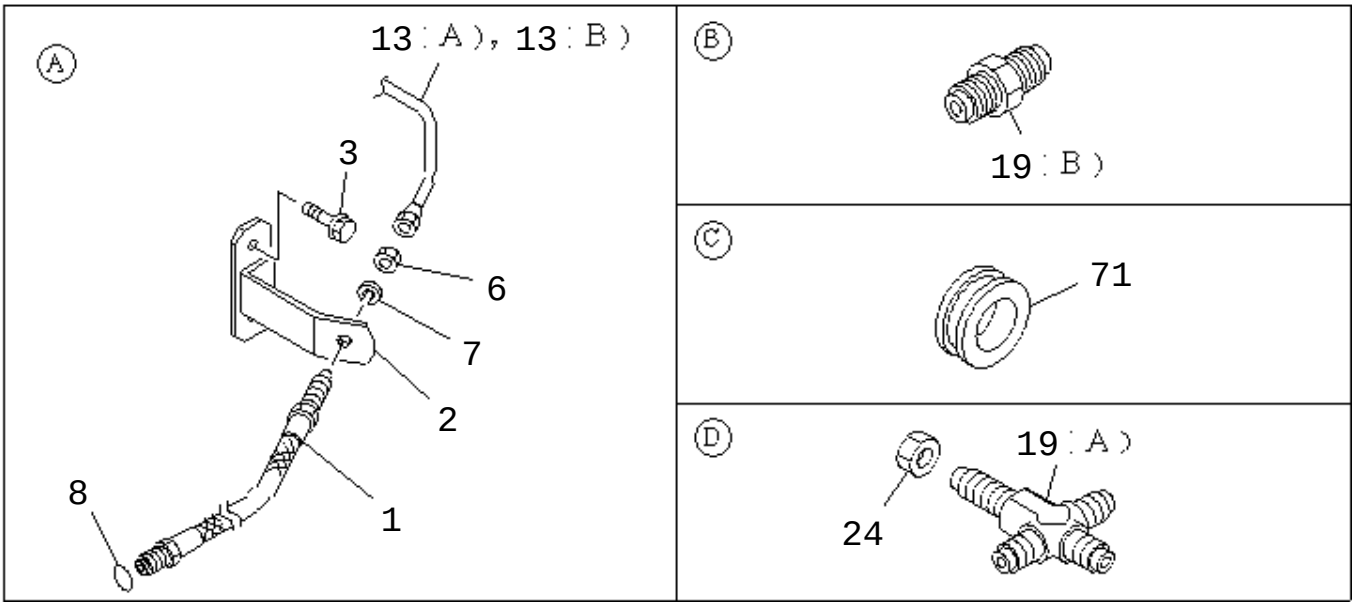

https://truckmanualshub.com/

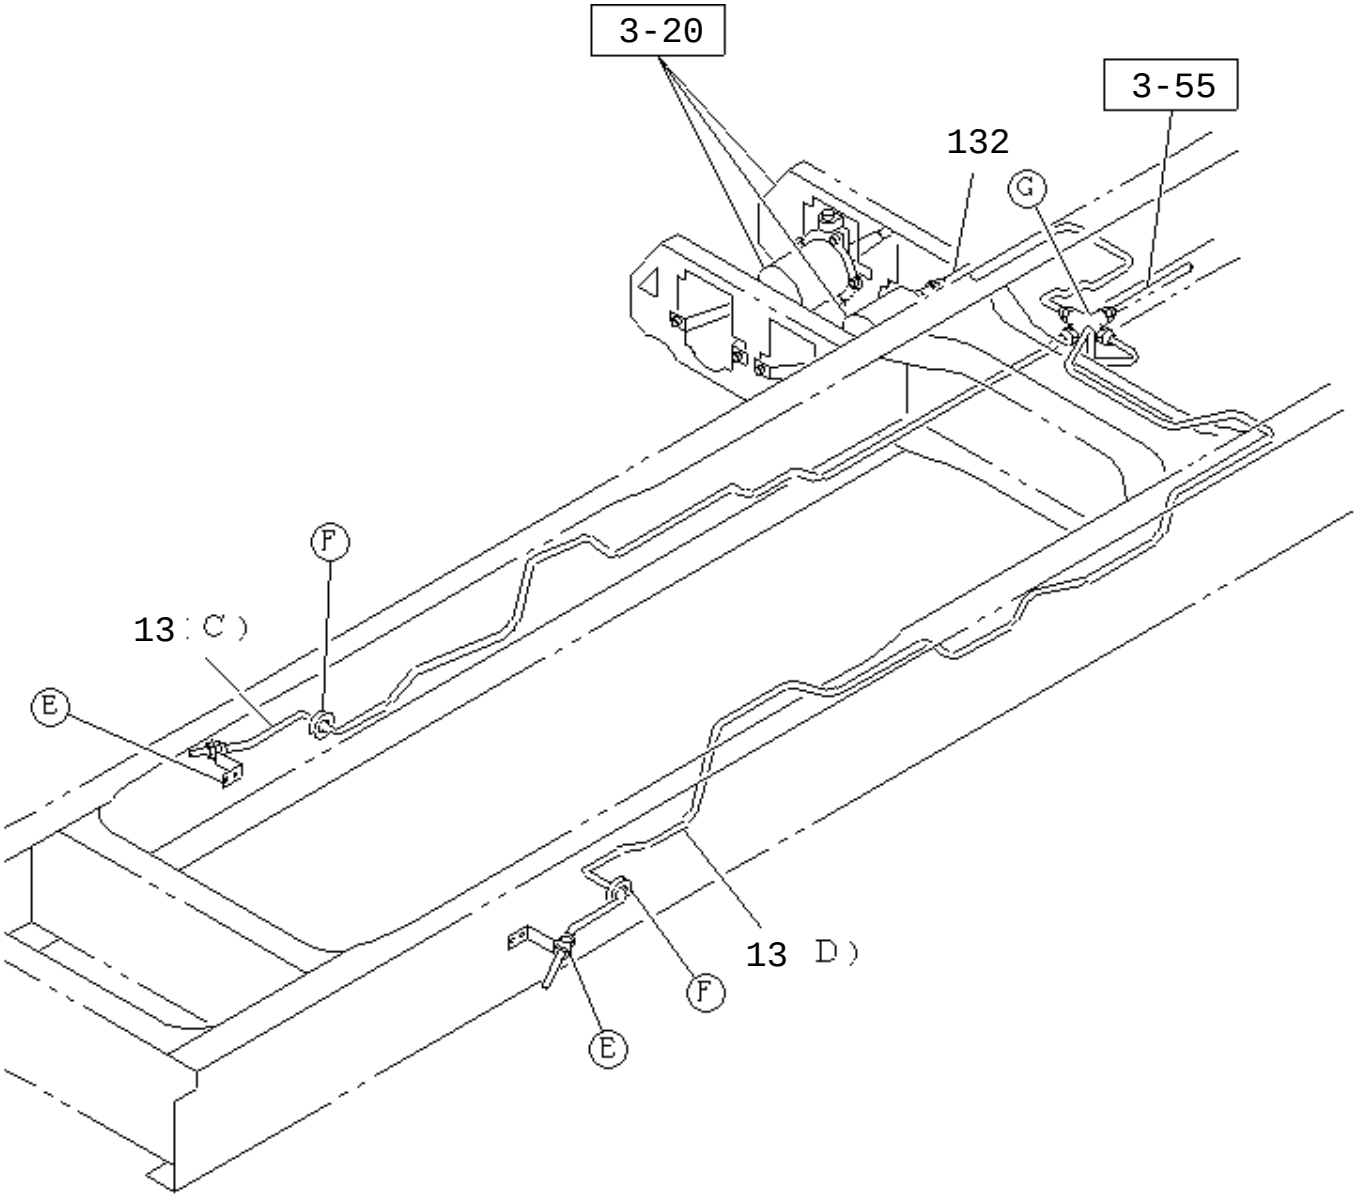

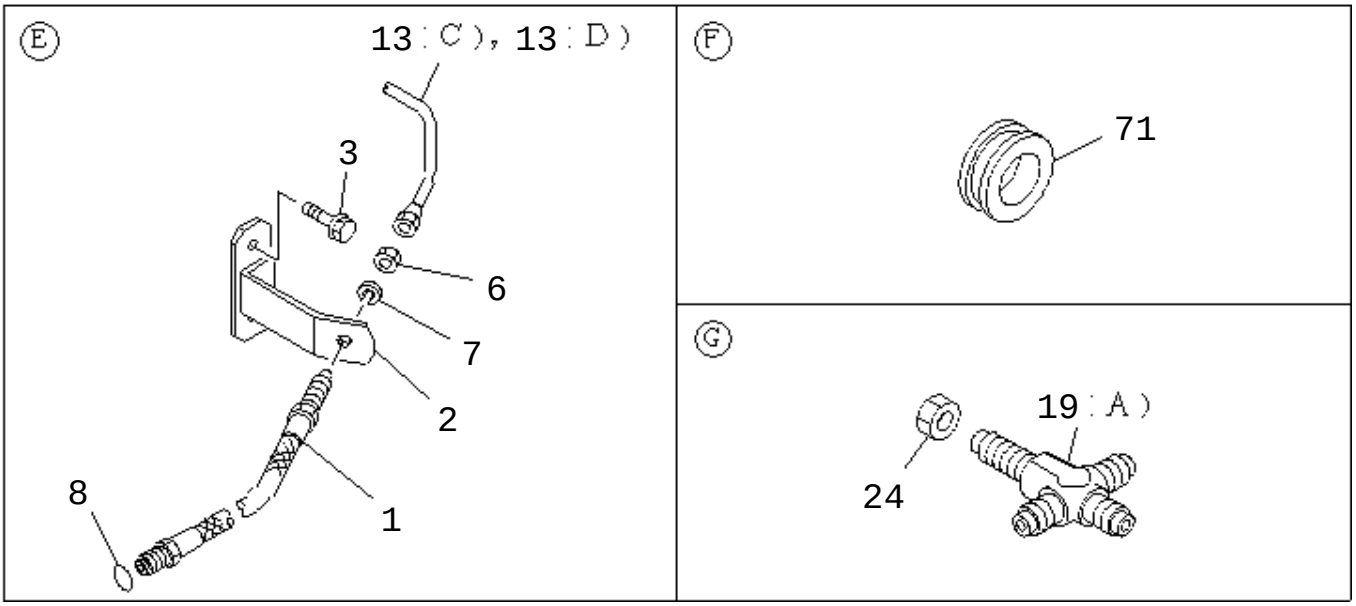

https://truckmanualshub.com/

3-52 BRAKE PIPING; OIL,FRONT

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	A	HOSE; FLEX,FRT BRK						
		0-05212-610-0		1312-1403		02	A	L=610
		0-05212-610-0		1404-		02	AB	L=610
2		BRACKET; FLEX HOSE,FRT BRK						
		8-98177-524-0		1312-1403		02	A	
		8-98177-524-0		1404-		02	AB	
3		BOLT; BRKT,FLEX HOSE,FRT BRK						
		0-28650-825-0		1312-1403		04	A	M8X25 FLANGE IDN
		0-28650-825-0		1404-		04	AB	M8X25 FLANGE IDN
6		NUT; FLEX HOSE,FRT BRK						
		9-09840-280-0		1312-1403		02	A	M12
		9-09840-280-0		1404-		02	AB	M12
7		WASHER; LK,FLEX HOSE,FRT BRK						
		0-91510-512-0		1312-1403		02	A	ID=12.2
		0-91510-512-0		1404-		02	AB	ID=12.2
8		GASKET; FLEX HOSE,FRT BRK						
		9-09920-472-0		1312-1403		02	A	ID=9 OD=17
		9-09920-472-0		1404-		02	AB	ID=9 OD=17
13		PIPE; OIL,UNION TO UNION						
		1-47428-737-0		1404-	R	01	B	(C) L=1699 SERVICED BY L=1700
		1-47428-745-0		1404-	L	01	B	(D) L=2916 SERVICED BY L=3200
		1-47428-734-0		1312-	L	01	A	(B) L=1320 SERVICED BY L=1370
		1-47428-734-0		1312-	R	01	A	(A) L=1331 SERVICED BY L=1370
18		PIPE; OIL,UNION TO FRT FLEX HOSE						
		1-47428-739-0		1312-	L	01	A	(B) L=1924 SERVICED BY L=2000
		1-47428-727-0		1312-	R	01	A	(A) L=689 SERVICED BY L=700
19		UNION; OIL PIPE						
		0-92113-006-0		1312-		02	A	(B) M12 L=40
		1-09656-019-1		1312-1403		01	A	(A)
		1-09656-019-1		1404-		01	AB	(A)
24		NUT; UNION,OIL PIPE						
		0-91110-514-0		1312-1403		01	A	M14
		0-91110-514-0		1404-		01	AB	M14
71		GROMMET; OIL PIPE						
		9-09956-092-1		1312-1403		02	A	ID=24 OD=30 T=17
		9-09956-092-1		1404-		02	AB	ID=24 OD=30 T=17

https://truckmanualshub.com/


3-52 BRAKE PIPING; OIL,FRONT


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
132		PIPE; OIL,BRK,HYD UNIT 8-98247-352-0		1404-		01	B	L=667
		8-98184-180-0		1312-		01	A	L=381 IDN
3-20		Move to 3-20						
3-55		Move to 3-55						

https://truckmanualshub.com/

3-55 BRAKE PIPING; OIL,REAR

FRAME SIDE;WHEEL BASE 5300MM,7100MM

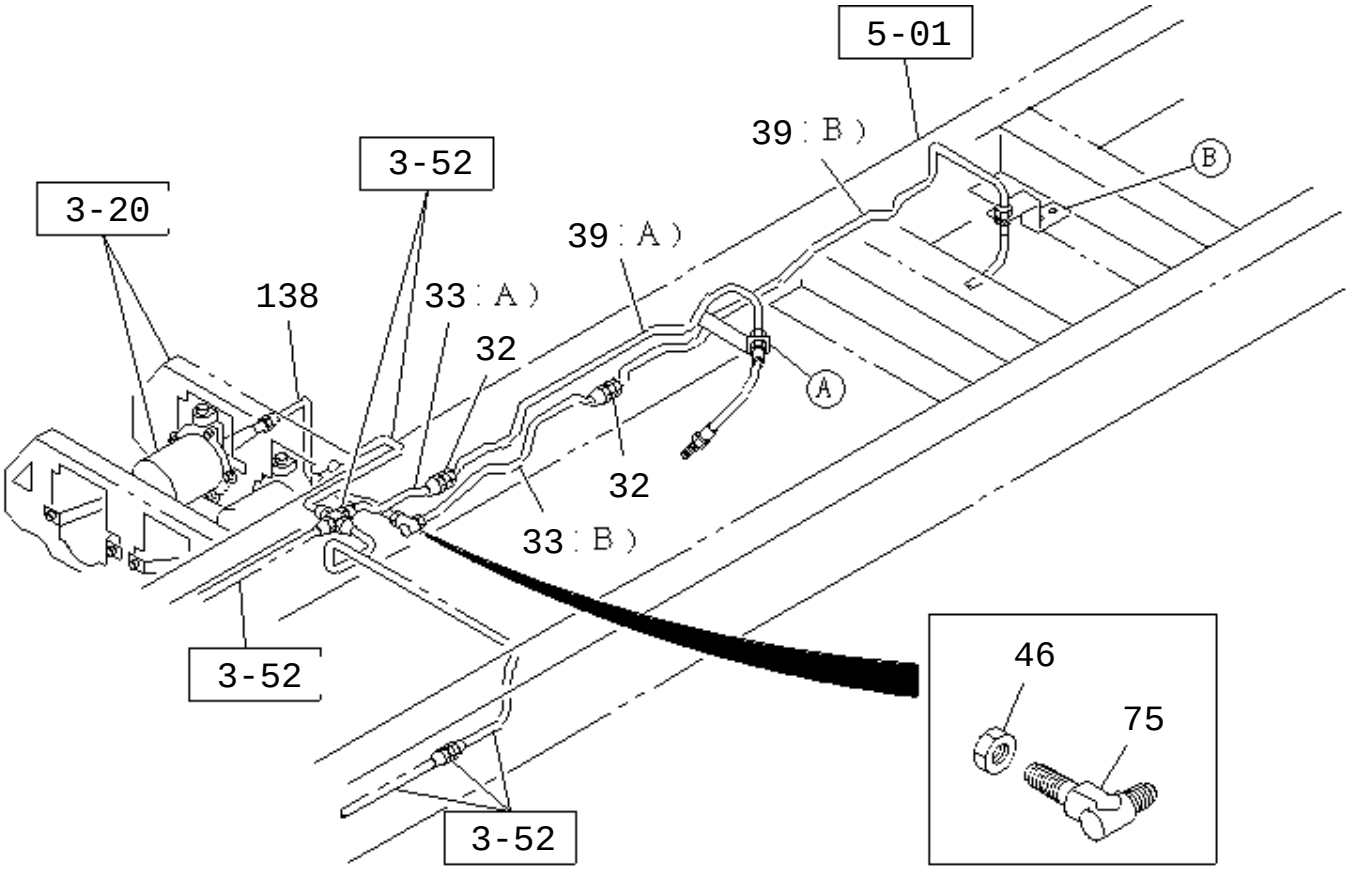


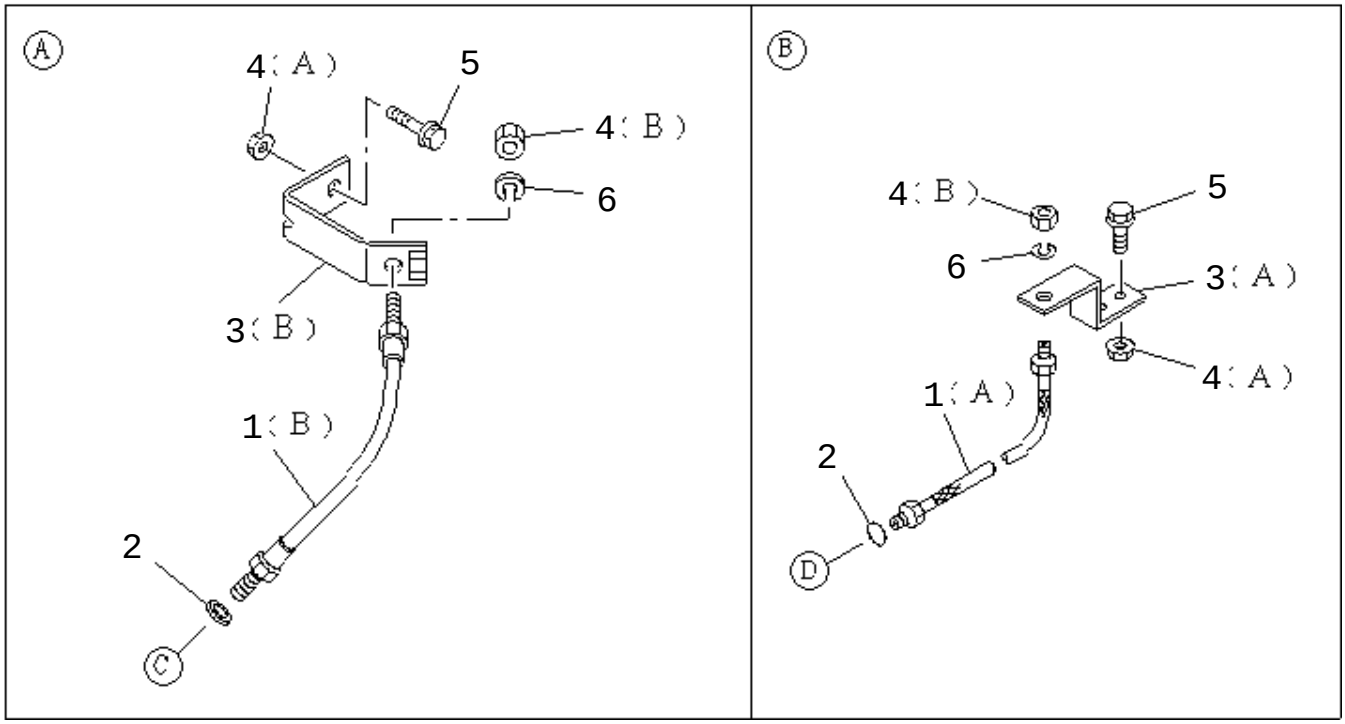


https://truckmanualshub.com/


3-55 BRAKE PIPING; OIL,REAR


FRAME SIDE;WHEEL BASE 4700MM

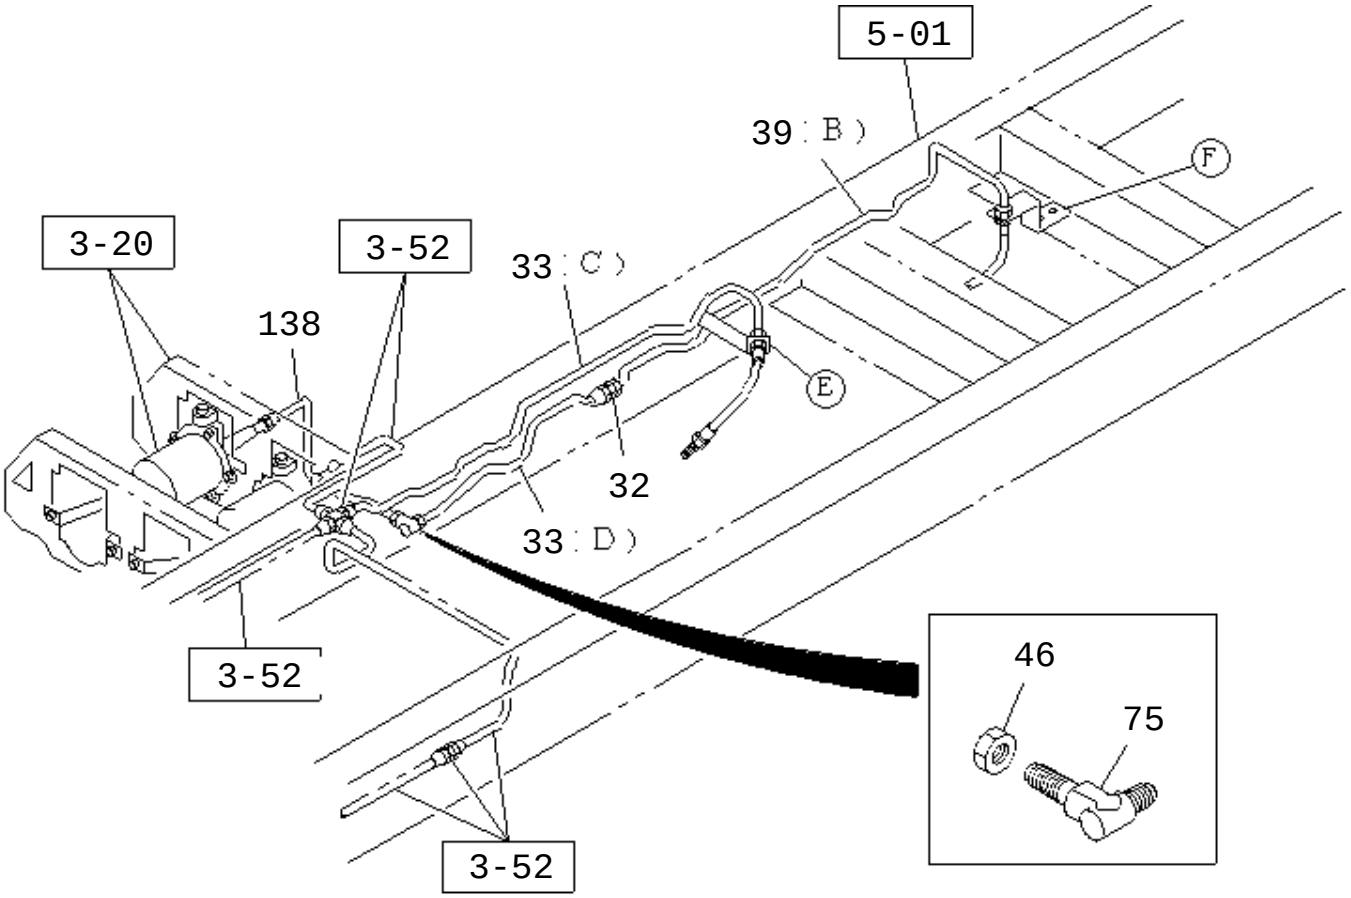

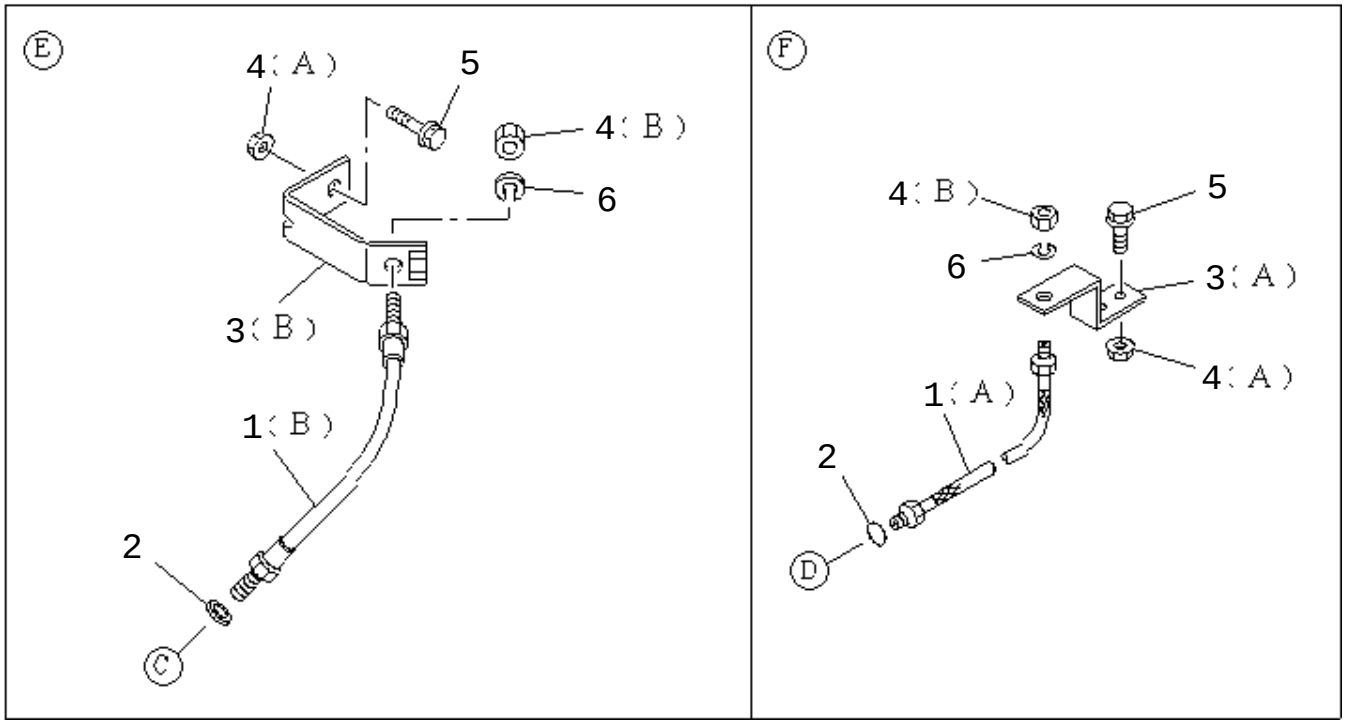

https://truckmanualshub.com/

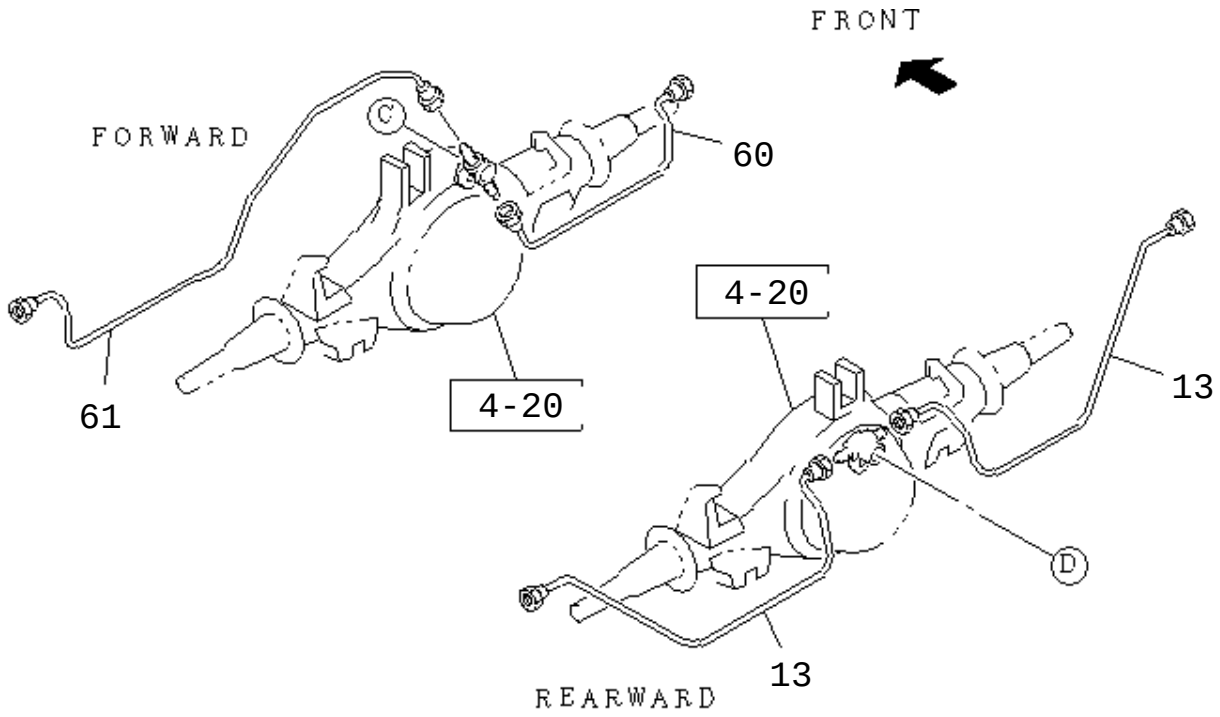

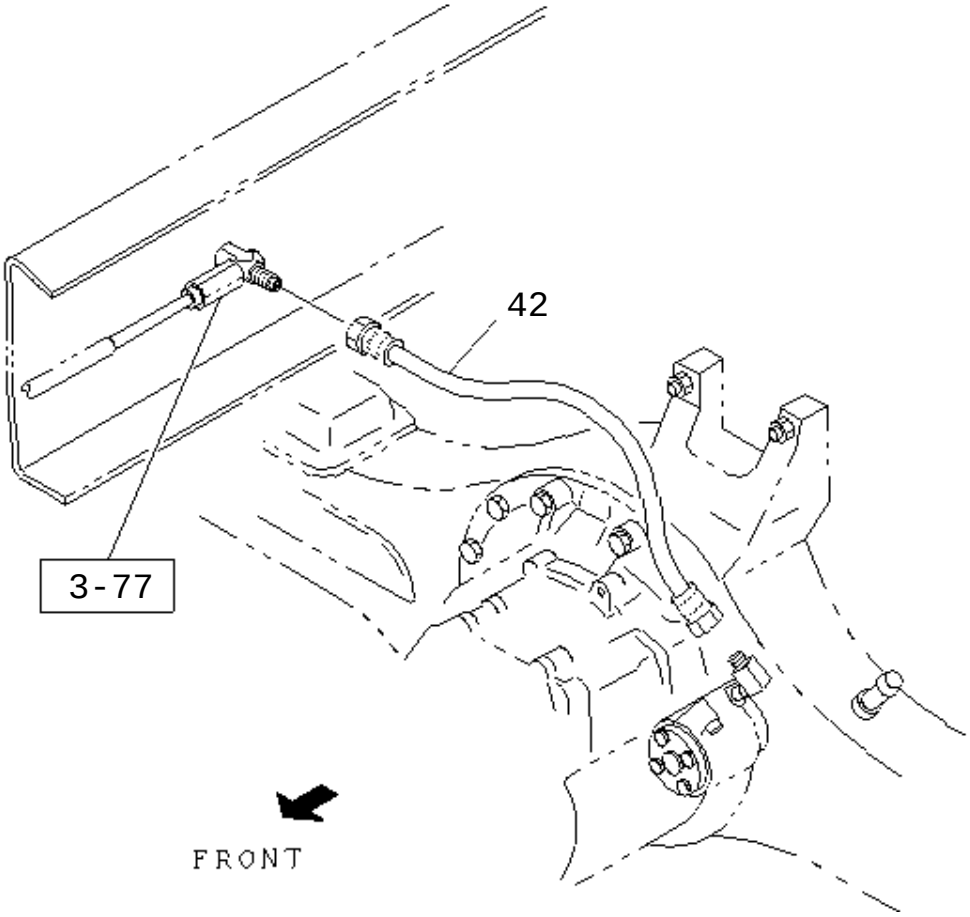

https://truckmanualshub.com/

3-55 BRAKE PIPING; OIL,REAR

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	A	HOSE; FLEX,RR BRK						
		1-09364-188-0		1312-1403		01	A	(B) L=450
		1-09364-188-0		1404-		01	AB	(B) L=450
		1-09364-197-0		1312-1403		01	A	(A) L=600
		1-09364-197-0		1404-		01	AB	(A) L=600
2		GASKET; FLEX HOSE,RR BRK						
		9-09920-472-0		1312-1403		02	A	ID=9 OD=17
		9-09920-472-0		1404-		02	AB	ID=9 OD=17
3		BRACKET; FLEX HOSE,RR BRK						
		1-47465-608-0		1312-1403		01	A	(A)
		1-47465-608-0		1404-		01	AB	(A)
		1-47475-357-2		1312-1403		01	A	(B)
		1-47475-357-2		1404-		01	AB	(B)
4		NUT; BRKT,FLEX HOSE,RR BRK						
		0-91180-108-0		1312-1403		04	A	(A) M8 FLANGE
		0-91180-108-0		1404-		04	AB	(A) M8 FLANGE
		9-09840-280-0		1312-1403		02	A	(B) M12
		9-09840-280-0		1404-		02	AB	(B) M12
5		BOLT; BRKT,FLEX HOSE,RR BRK						
		0-28650-830-0		1312-1403		04	A	M8X30 FLANGE
		0-28650-830-0		1404-		04	AB	M8X30 FLANGE
6		WASHER; LK,FLEX HOSE						
		0-91510-512-0		1312-1403		02	A	ID=12.2
		0-91510-512-0		1404-		02	AB	ID=12.2
13		PIPE; BRK,RR AXLE						
		1-47426-901-0		1312-1312	R	01	A	L=988
		1-47426-901-0		1402-1403	R	01	A	L=988
		1-47426-901-0		1404-	R	01	AB	L=988
		1-47426-902-0		1312-1312	L	01	A	L=857
		1-47426-902-0		1402-1403	L	01	A	L=857
		1-47426-902-0		1404-	L	01	AB	L=857
32		UNION; OIL PIPE						
		0-92113-006-0		1402-1403		01	A	MIXER CHASSIS<6NR> M12 L=40
		0-92113-006-0		1404-		01	A	MIXER CHASSIS<6NR> M12 L=40
		0-92113-006-0		1404-		01	B	M12 L=40
		0-92113-006-0		1312-1401		02	A	M12 L=40
		0-92113-006-0		1402-		02	A	EXC. MIXER CHASSIS<6NR> M12 L=40

https://truckmanualshub.com/

BRAKE PIPING; OIL,REAR


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
33		PIPE; OIL,UNION TO UNION						
		1-47428-738-0		1402-		01	A	WHEEL BASE 4700MM(47W) (C) L=1716 SERVICED BY L=1820
		1-47428-730-0		1402-1403		01	A	WHEEL BASE 4700MM(47W) (D) L=966 SERVICED BY L=1000
		1-47428-730-0		1404-		01	A	WHEEL BASE 4700MM(47W) (D) L=966 SERVICED BY L=1000
		1-47428-730-0		1404-		01	B	(D) L=966 SERVICED BY L=1000
		1-47428-740-0		1404-		01	B	(C) L=2092 SERVICED BY L=2200
		1-47428-735-0		1312-		01	A	WHEEL BASE 5300MM(53W) (A) L=1393 SERVICED BY L=1500
		1-47428-736-0		1312-		01	A	WHEEL BASE 5300MM(53W) (B) L=1556 SERVICED BY L=1620
		1-47428-745-0		1312-		01	A	WHEEL BASE 7100MM(71W) (A) L=3196 SERVICED BY L=3200
		1-47428-746-0		1312-		01	A	WHEEL BASE 7100MM(71W) (B) L=3363 SERVICED BY L=3400
39		PIPE; OIL,UNION TO RR FLEX HOSE						
		1-47428-729-0		1312-		01	A	WHEEL BASE 5300MM(53W),WHEEL BASE (A) L=856 SERVICED BY L=900
		1-47428-742-0		1312-1403		01	A	(B) L=2409 SERVICED BY L=2500
		1-47428-742-0		1404-		01	AB	(B) L=2409 SERVICED BY L=2500
42		HOSE; FLEX,DIFF LOCK						
		1-09363-680-0		1312-1403		01	A	
		1-09363-680-0		1404-		01	AB	
46		NUT; UNION,OIL PIPE						
		9-09840-280-0		1312-1403		01	A	M12
		9-09840-280-0		1404-		01	AB	M12
60		PIPE ASM; BRK						
		1-47427-915-0		1312-1403		01	A	L=779
		1-47427-915-0		1404-		01	AB	L=779
61		PIPE ASM; BRK						
		1-47426-899-0		1312-1403		01	A	L=1193
		1-47426-899-0		1404-		01	AB	L=1193
75		UNION; OIL PIPE						
		0-92125-206-0		1312-1403		01	A	M12 ELBOW
		0-92125-206-0		1404-		01	AB	M12 ELBOW
138		PIPE; HYDRAULIC UNIT						

https://truckmanualshub.com/

3-55 BRAKE PIPING; OIL,REAR


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
138		1-47428-726-0		1312-1403		01	A	L=646 SERVICED BY L=650
		1-47428-726-0		1404-		01	AB	L=646 SERVICED BY L=650
3-20		Move to 3-20						
3-52		Move to 3-52						
5-01		Move to 5-01						
3-77		Move to 3-77						
4-20		Move to 4-20						


https://truckmanualshub.com/

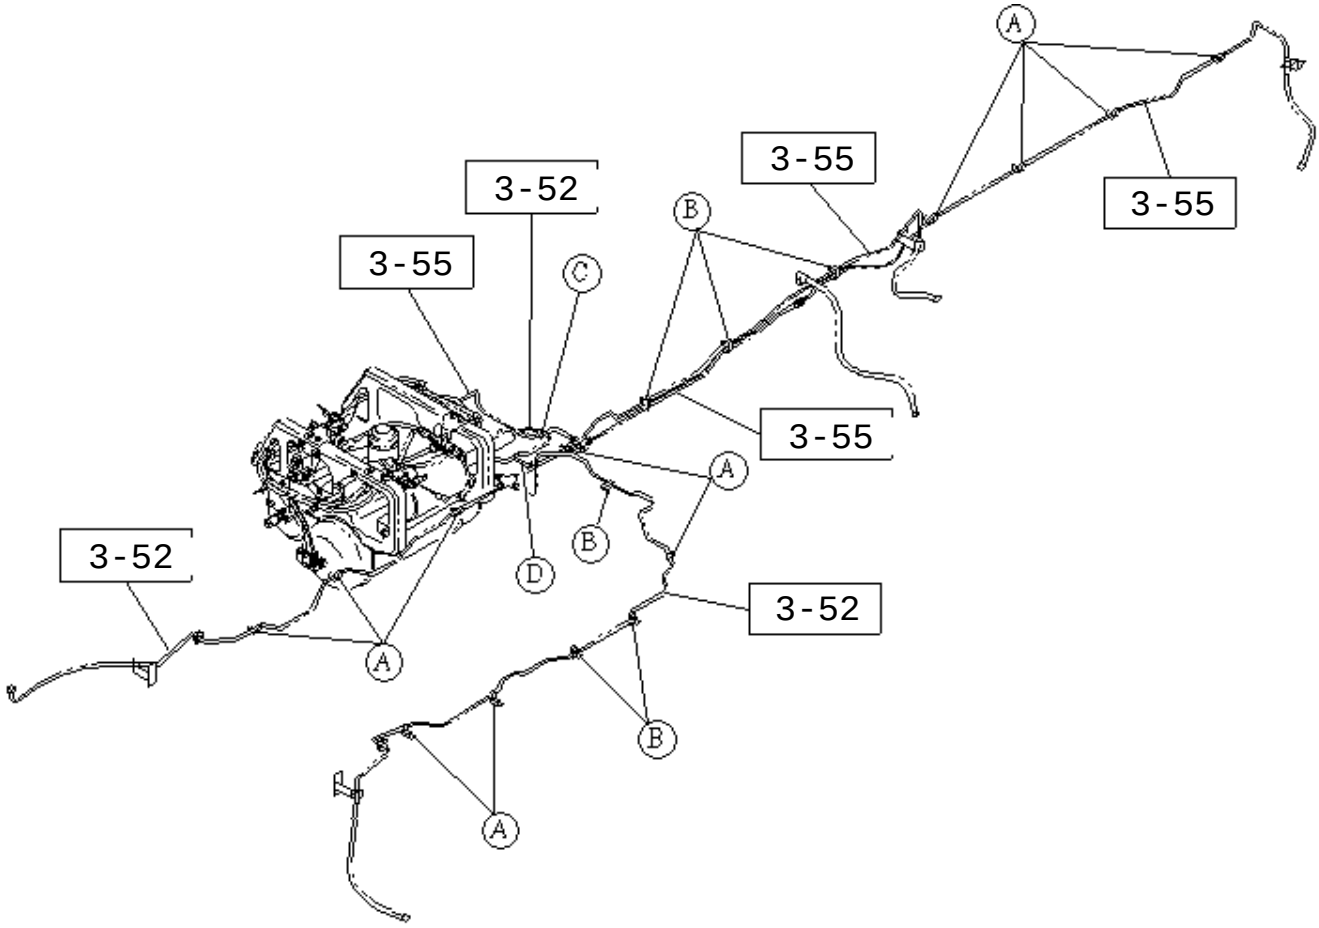

A	B	C	D
1(A), 58(A), 112 A)	1(B), 58(B), 112 B)	82 A)	82 B) 56 9 68

https://truckmanualshub.com/

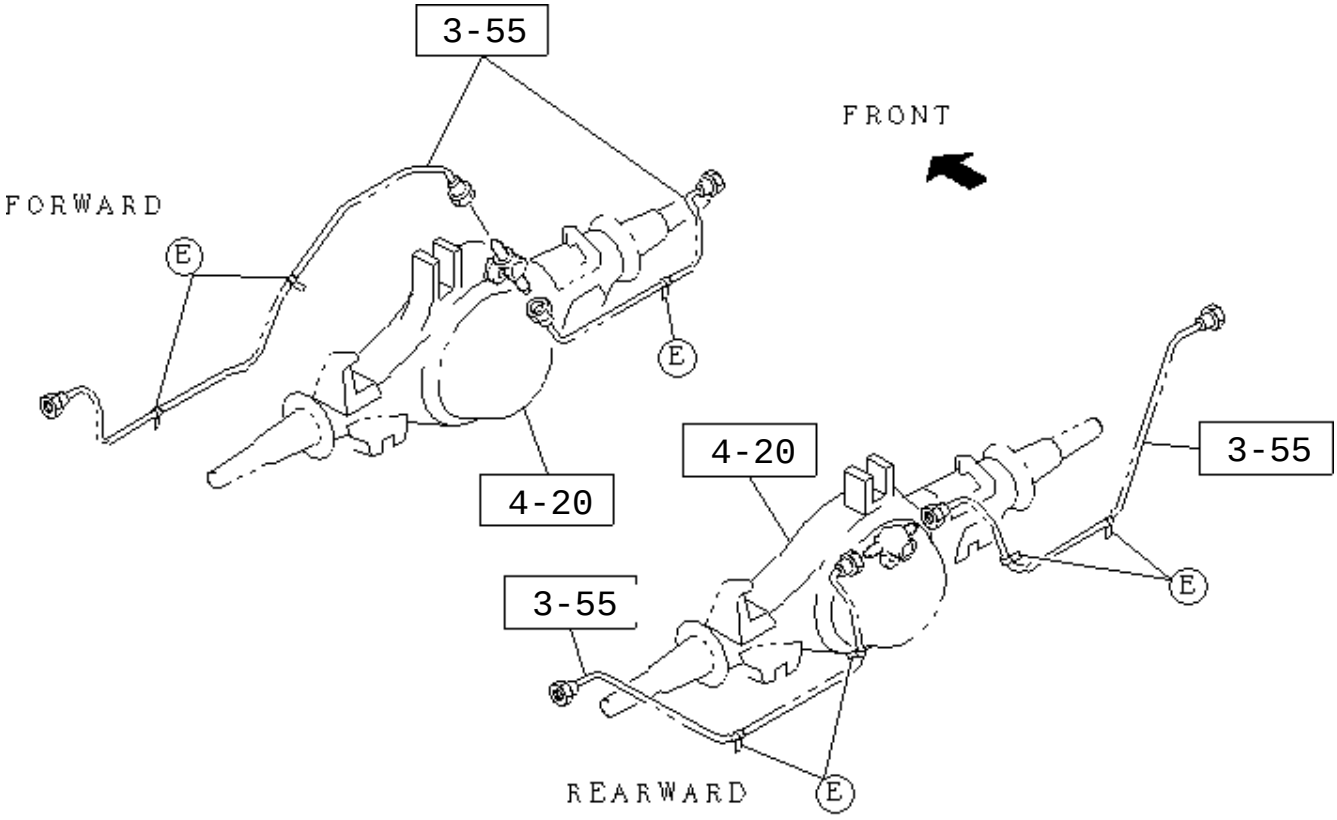

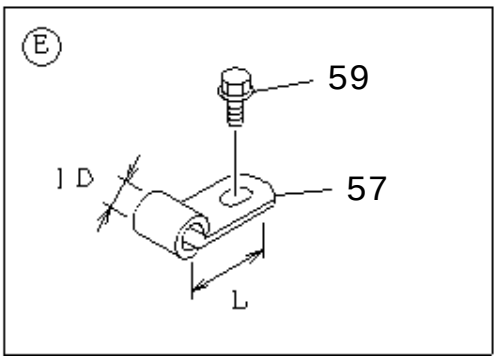


https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		CLIP; OIL PIPE TO BODY					
		1-09701-247-1		1404-	06	B	(A) ID=6.35
		8-98012-254-1		1404-	03	B	(B)
		1-09701-247-1		1312-	10	A	(A) ID=6.35
		8-98012-254-1		1312-	01	A	(B)
9		BOLT; BRKT					
		0-28650-830-0		1404-	01	B	M8X30 FLANGE
56		BOLT; CLIP					
		0-28650-820-0		1404-	01	B	M8X20 FLANGE IDN
57		CLIP; BRK PIPE,RR AXLE					
		0-95234-635-0		1312-1403	03	A	ID=7 L=20
		0-95234-635-0		1404-	03	AB	ID=7 L=20
		0-95234-635-0		1312-1312	04	A	ID=7 L=20
		0-95234-635-0		1402-1403	04	A	ID=7 L=20
		0-95234-635-0		1404-	04	AB	ID=7 L=20
58		CLIP; OIL PIPE					
		1-09701-247-1		1312-1403	04	A	(A) ID=6.35
		1-09701-247-1		1404-	04	AB	(A) ID=6.35
		8-98012-254-1		1312-1403	01	A	(B)
		8-98012-254-1		1404-	01	AB	(B)
59		BOLT; BRK PIPE,RR AXLE					
		0-28050-810-0		1312-1403	03	A	M8X10 FLANGE
		0-28050-810-0		1404-	03	AB	M8X10 FLANGE
		0-28050-810-0		1312-1312	04	A	M8X10 FLANGE
		0-28050-810-0		1402-1403	04	A	M8X10 FLANGE
		0-28050-810-0		1404-	04	AB	M8X10 FLANGE
68		BRACKET; CLIP					
		1-47475-519-0		1404-	01	B	
82		CLIP; OIL PIPE					
		0-95234-825-0		1404-	01	B	(B) ID=9 L=16
		8-94167-742-0		1312-1403	01	A	(A) ID=6 & 8.3
		8-94167-742-0		1404-	01	AB	(A) ID=6 & 8.3
112		CLIP; OIL PIPE					
		8-98012-254-1		1402-1403	02	A	WHEEL BASE 4700MM(47W) (B)
		8-98012-254-1		1404-	02	A	WHEEL BASE 4700MM(47W) (B)
		8-98012-254-1		1404-	02	B	(B)
		1-09701-247-1		1404-	01	B	(A) ID=6.35

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
112		8-98012-254-1		1312-	03	A	WHEEL BASE 5300MM(53W) (B)
		8-98012-254-1		1312-	08	A	WHEEL BASE 7100MM(71W) (B)
3-52		Move to 3-52					
3-55		Move to 3-55					
4-20		Move to 4-20					

https://truckmanualshub.com/

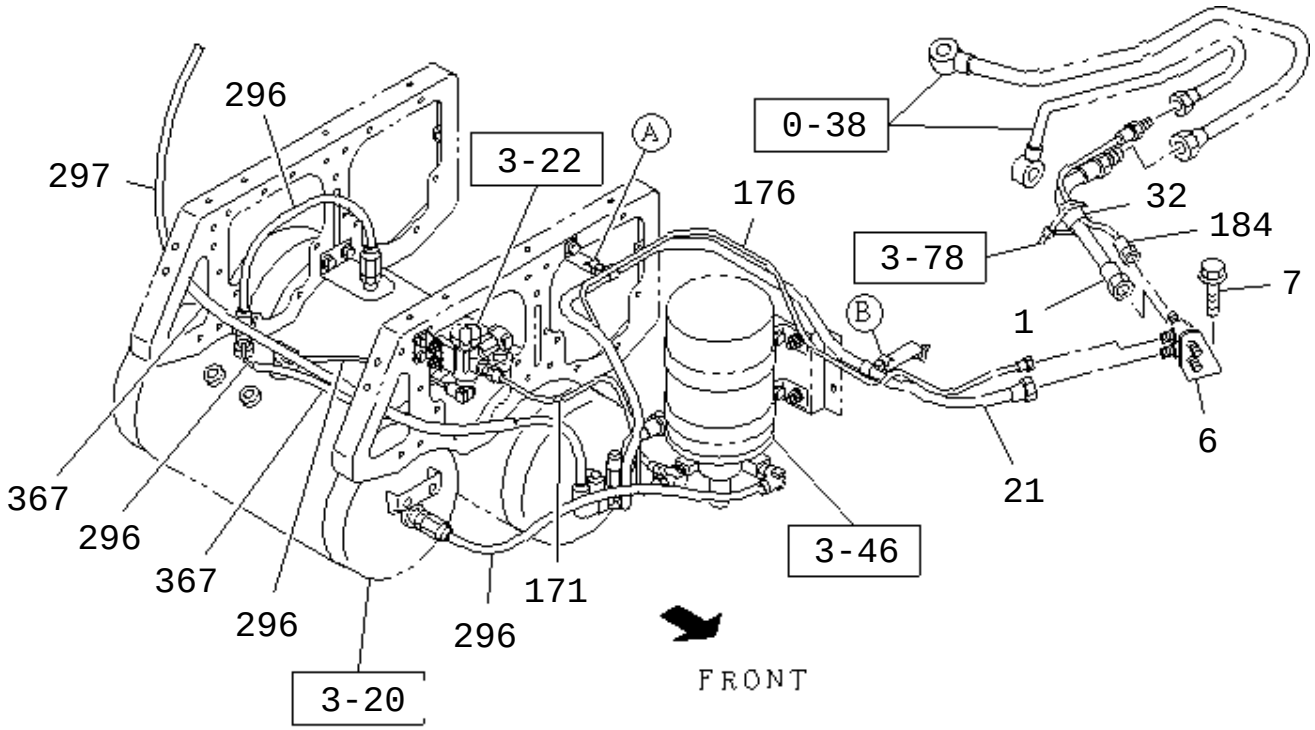

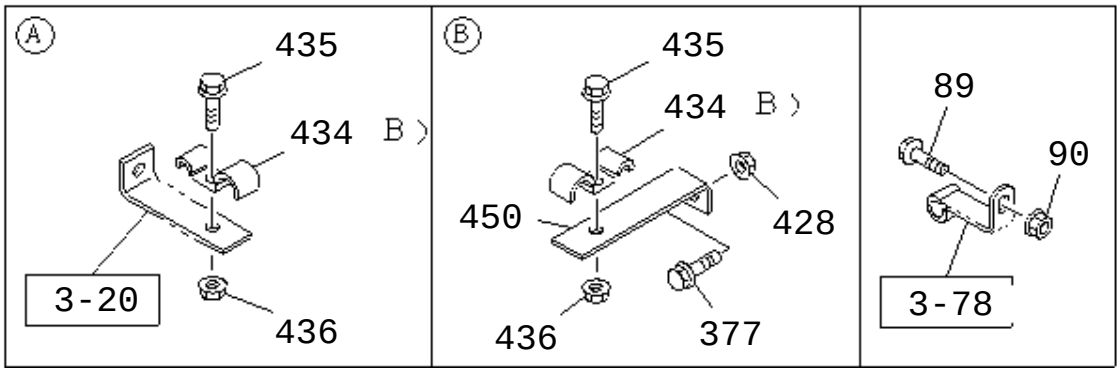


https://truckmanualshub.com/

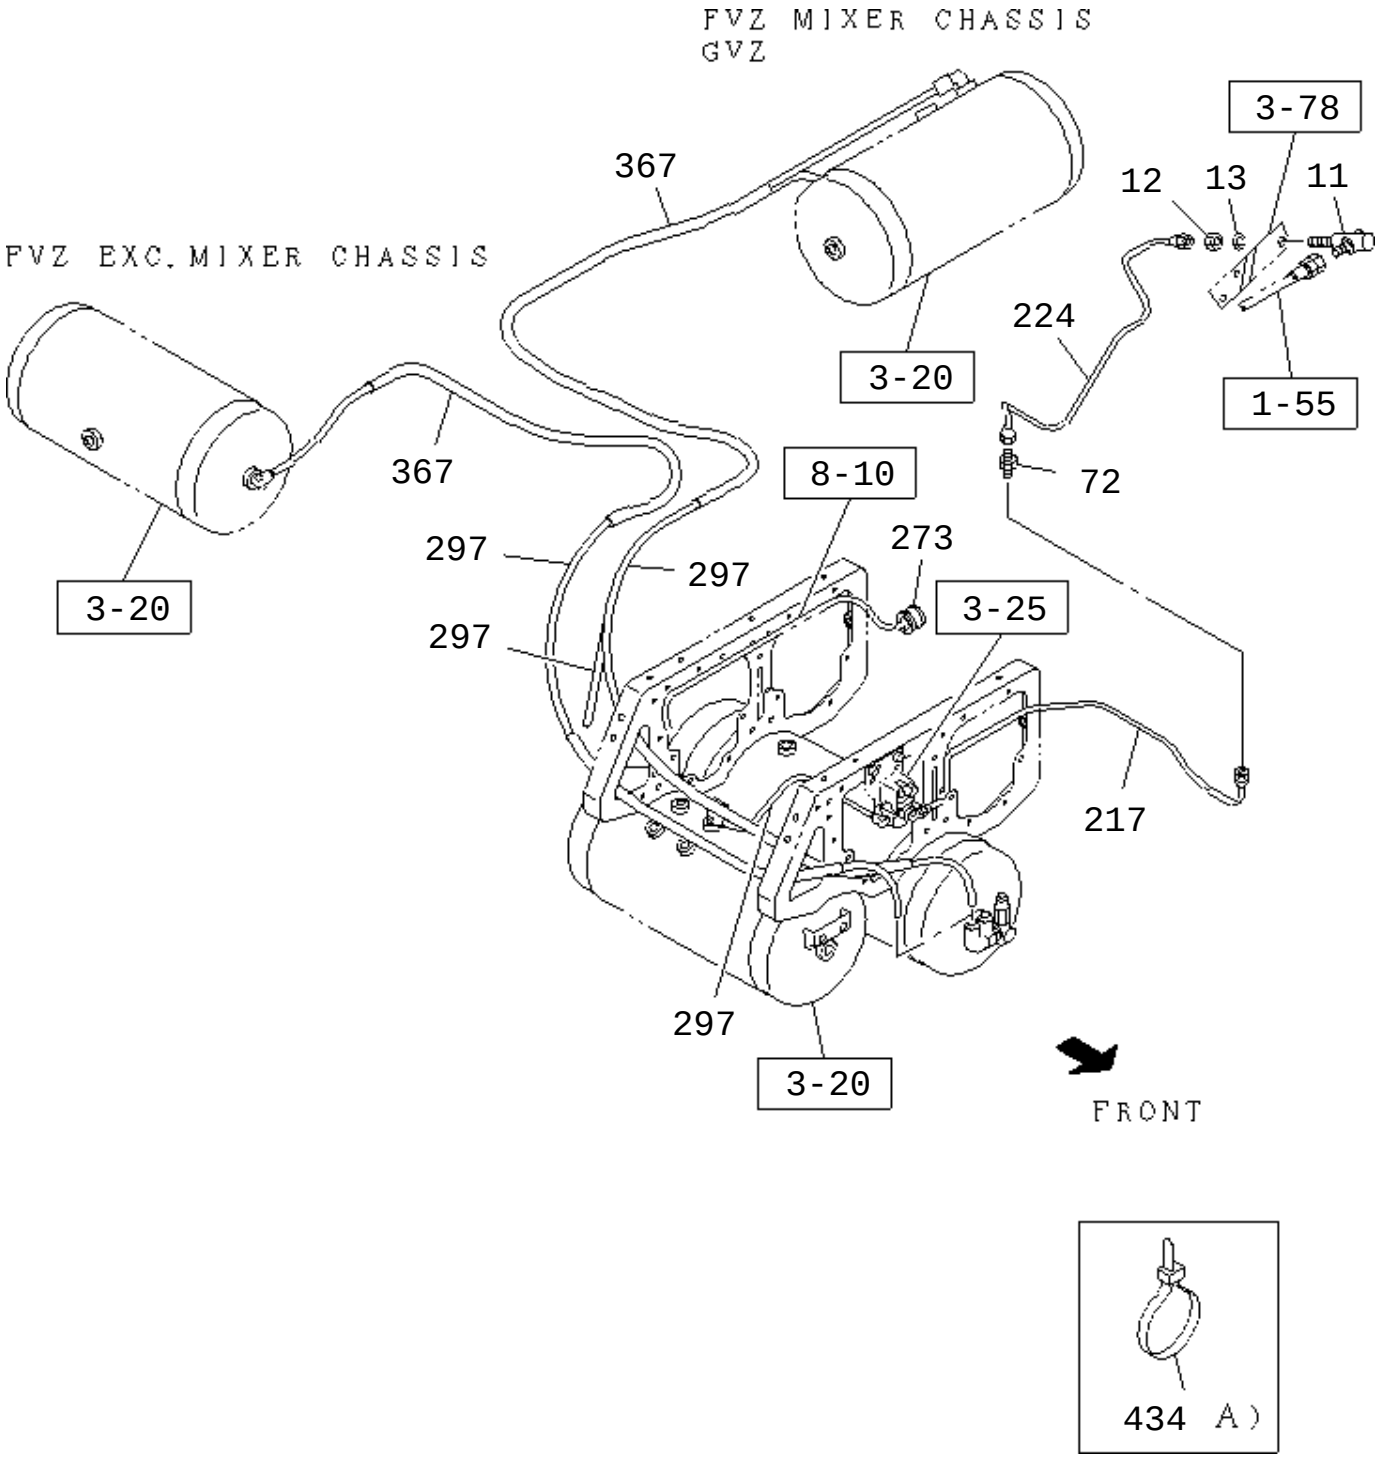


https://truckmanualshub.com/

FVZ

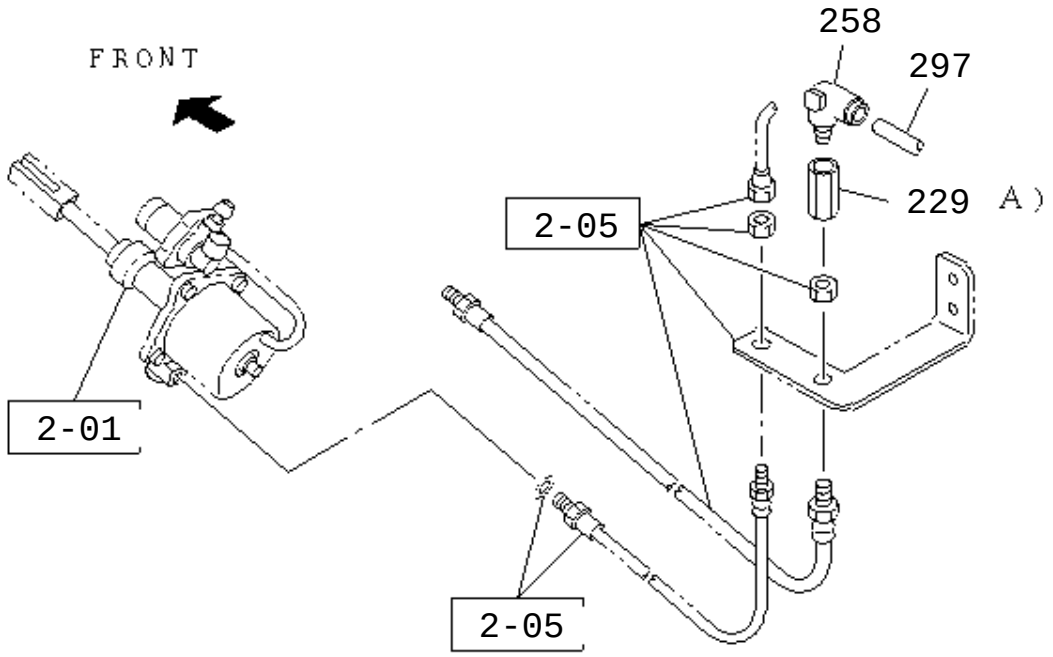

GVZ

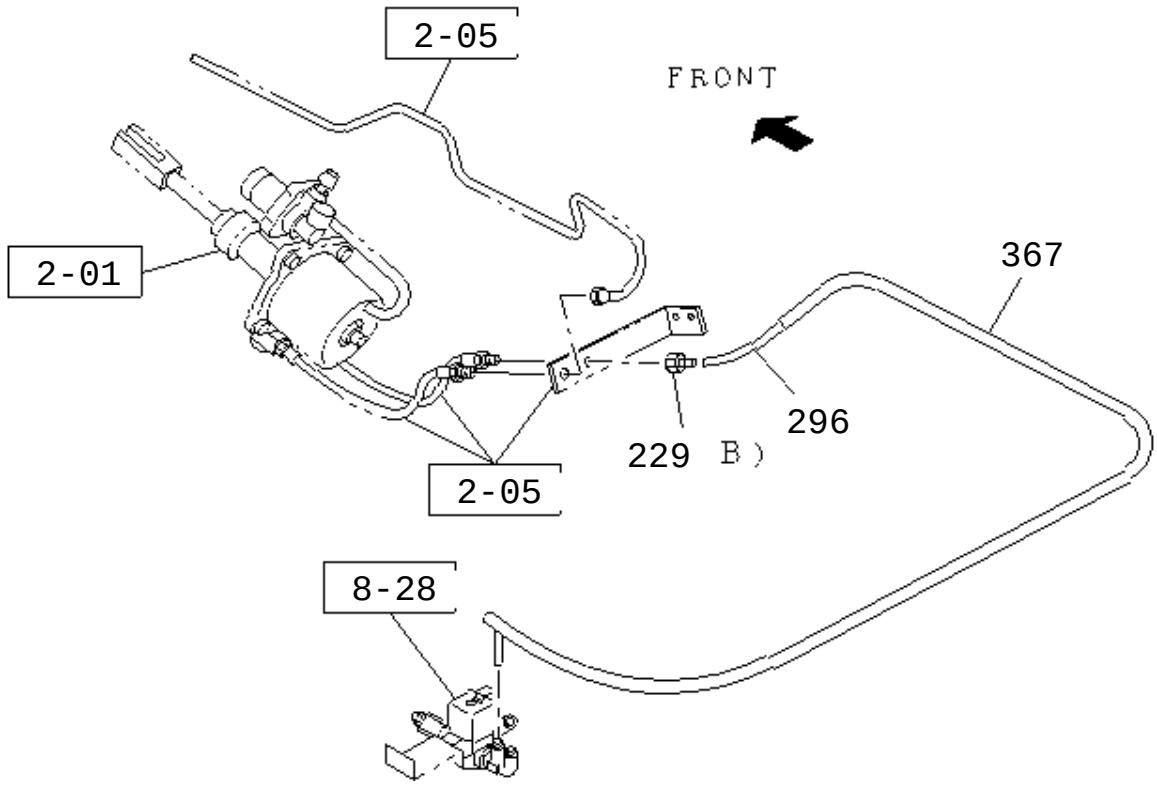

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		HOSE; FLEX,AIR TANK					
		8-98067-411-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) L=320
		8-97607-730-0		1312-1401	01	A	L=310
		8-97607-730-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=310
		8-97607-730-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=310
		8-97607-730-0		1404-	01	B	L=310
6		BRACKET; FLEX HOSE,AIR TANK					
		8-98117-117-0		1312-1403	01	A	
		8-98117-117-0		1404-	01	AB	
7		BOLT; BRKT,FLEX HOSE,AIR TANK					
		0-28650-830-0		1312-1403	02	A	M8X30 FLANGE
		0-28650-830-0		1404-	02	AB	M8X30 FLANGE
11		UNION; AIR PIPE					
		0-92125-206-0		1312-1403	01	A	M12 ELBOW
		0-92125-206-0		1404-	01	AB	M12 ELBOW
12		NUT; UNION					
		9-09840-280-0		1312-1403	01	A	M12
		9-09840-280-0		1404-	01	AB	M12
13		WASHER; LK,UNION					
		0-91510-812-0		1312-1403	01	A	ID=12.2
		0-91510-812-0		1404-	01	AB	ID=12.2
21		PIPE; AIR,UNION TO AIR DRYER					
		8-98189-194-0		1312-1403	01	A	L=1713 IDN
		8-98189-194-0		1404-	01	AB	L=1713 IDN
32		SLEEVE; RUBBER,AIR PIPE					
		1-09337-023-0		1312-1403	01	A	ID=32 OD=36 L=50
		1-09337-023-0		1404-	01	AB	ID=32 OD=36 L=50
72		UNION; AIR PIPE					
		0-92113-006-0		1312-1403	01	A	M12 L=40
		0-92113-006-0		1404-	01	AB	M12 L=40
89		BOLT; TUBE CLIP					
		0-28650-820-0		1312-1403	01	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	AB	M8X20 FLANGE IDN
90		NUT; TUBE CLIP					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
171		PIPE; AIR,GOV TO AIR DRYER					
		1-47428-808-0		1312-1403	01	A	L=515 SERVICED BY L=550
		1-47428-808-0		1404-	01	AB	L=515 SERVICED BY L=550
176		PIPE; AIR,AIR DRYER TO UNION					
		1-47428-819-0		1312-1403	01	A	L=1427 SERVICED BY L=1500

https://truckmanualshub.com/

BRAKE PIPING; AIR,AIR MASTER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
176		1-47428-819-0		1404-	01	AB	L=1427 SERVICED BY L=1500
184		HOSE; FLEX,AIR GOV					
		1-09363-656-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) L=320
		1-09363-624-0		1312-1401	01	A	L=350
		1-09363-624-0		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=350
		1-09363-624-0		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) L=350
		1-09363-624-0		1404-	01	B	L=350
217		PIPE; VAC,UNION TO MAG VLV					
		1-47428-814-0		1312-1403	01	A	L=954 SERVICED BY L=1000
		1-47428-814-0		1404-	01	AB	L=954 SERVICED BY L=1000
224		PIPE; AIR,UNION TO FLEX HOSE					
		1-47428-812-0		1312-1403	01	A	L=720 SERVICED BY L=800
		1-47428-812-0		1404-	01	AB	L=720 SERVICED BY L=800
229		ADAPTER; NYLON TUBE					
		1-09660-873-0		1404-	01	B	(B) DIN8 & M12 STRAIGHT
		1-09660-885-0		1312-	01	A	FULLER ES11109 DD M/T(Y5N) (A) M12 & RC1/4 STRAIGHT
258		CONNECTOR; NYLON TUBE					
		1-09660-956-0		1312-	01	A	FULLER ES11109 DD M/T(Y5N) DIN8 & R1/4 ELBOW
273		GROMMET					
		1-09332-011-1		1312-1403	01	A	ID=28 OD=35 T=25
		1-09332-011-1		1404-	01	AB	ID=28 OD=35 T=25
296		TUBE; NYLON					
		1-87411-006-0		1312-	AR	AB	SERVICED BY L=2000 OD=8
		1-87411-011-0		1312-	AR	AB	SERVICED BY L=2000 OD=12
297		TUBE; NYLON					
		1-87411-006-0		1312-	AR	AB	SERVICED BY L=2000 OD=8
		1-87411-012-0		1312-	AR	AB	SERVICED BY L=4000 OD=12
367		TUBE; CORRUGATE					
		1-87411-019-0		1312-	AR	AB	SERVICED BY L=2000 ID=10
		1-87411-022-0		1312-	AR	AB	SERVICED BY L=2000 ID=13
		1-87411-031-0		1312-	AR	AB	SERVICED BY L=2000 ID=25
377		BOLT; BRKT FIX					
		0-28650-830-0		1312-1403	01	A	M8X30 FLANGE
		0-28650-830-0		1404-	01	AB	M8X30 FLANGE
428		NUT; BRKT					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
434		CLIP					
		1-09700-675-0		1312-1403	02	A	(B) ID=16 & 7 L=21 & 17

https://truckmanualshub.com/


BRAKE PIPING; AIR,AIR MASTER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
434		1-09700-675-0		1404-	02	AB	(B) ID=16 & 7 L=21 & 17
		1-09707-183-0		1312-	03	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> (A) L=350
435		BOLT; CLIP					
		0-28650-820-0		1312-1403	02	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	M8X20 FLANGE IDN
436		NUT; CLIP					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
450		BRACKET; CLIP					
		1-47476-758-0		1312-1403	01	A	L=115 B=25
		1-47476-758-0		1404-	01	AB	L=115 B=25
0-38		Move to 0-38					
3-20		Move to 3-20					
3-22		Move to 3-22					
3-46		Move to 3-46					
3-78		Move to 3-78					
1-55		Move to 1-55					
3-25		Move to 3-25					
8-10		Move to 8-10					
2-01		Move to 2-01					
		Move to 2-01					
2-05		Move to 2-05					
8-28		Move to 8-28					


https://truckmanualshub.com/

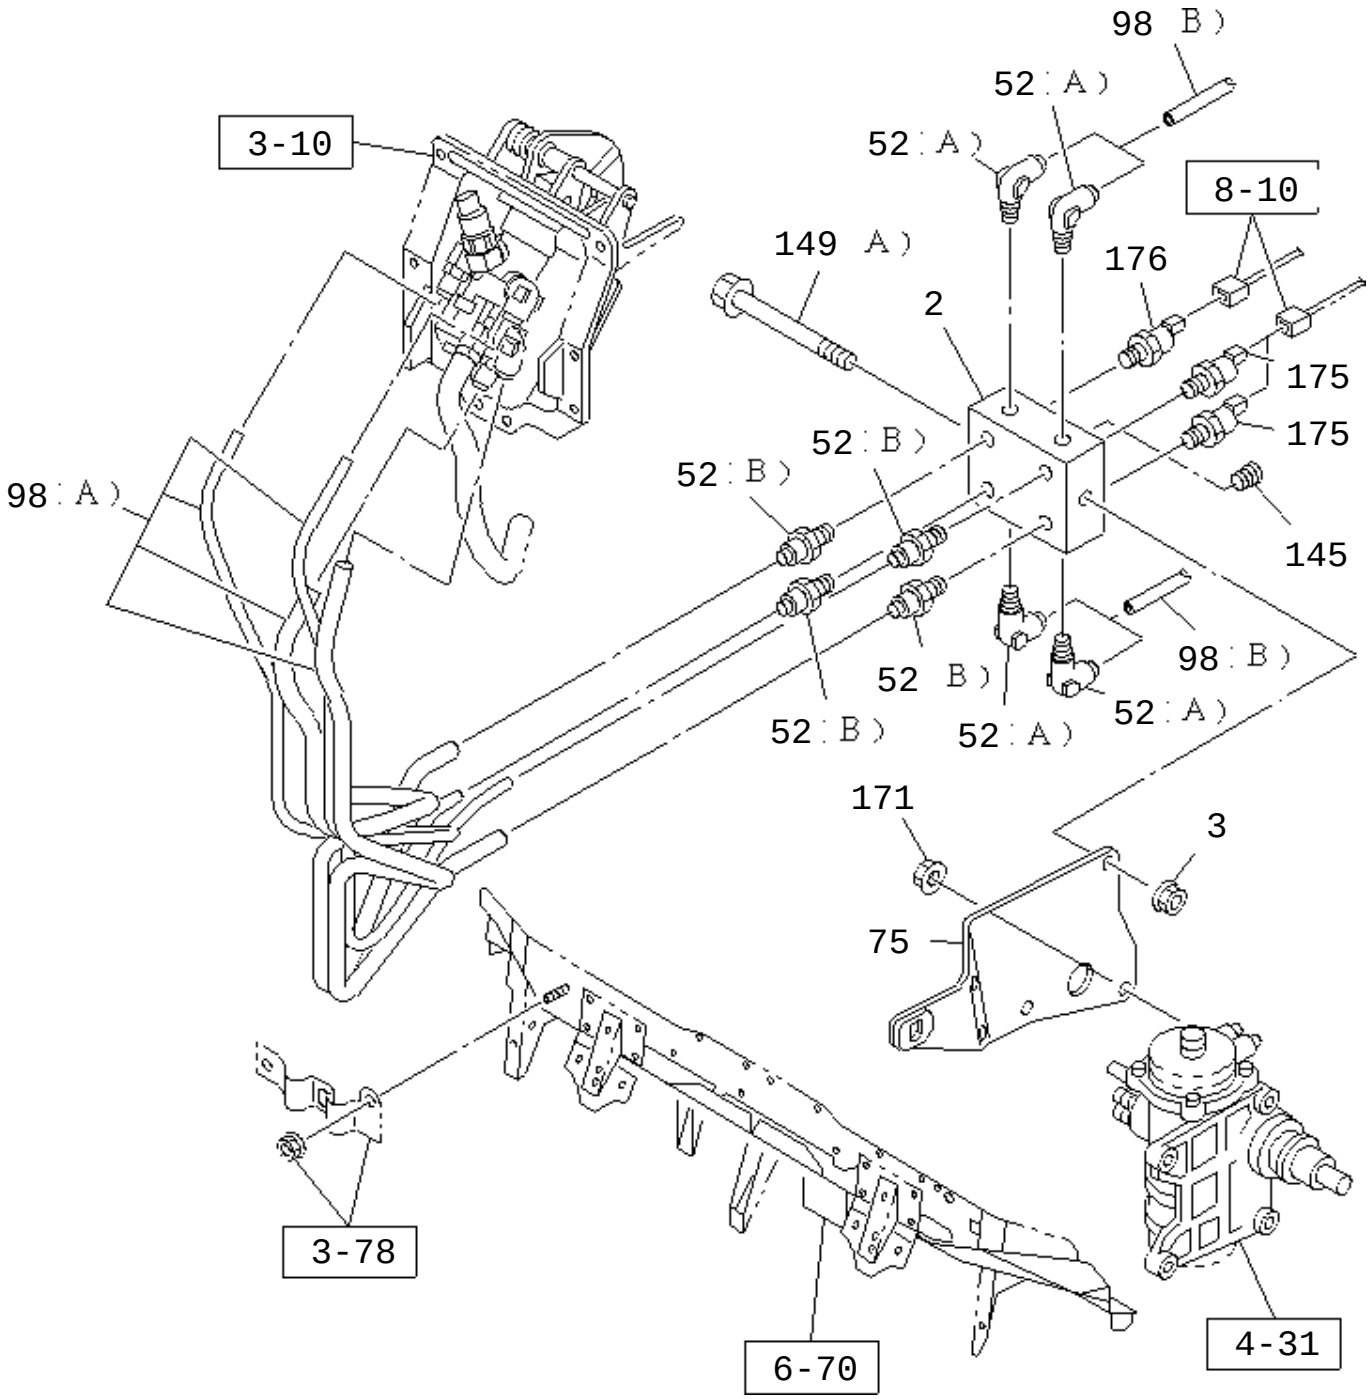

https://truckmanualshub.com/

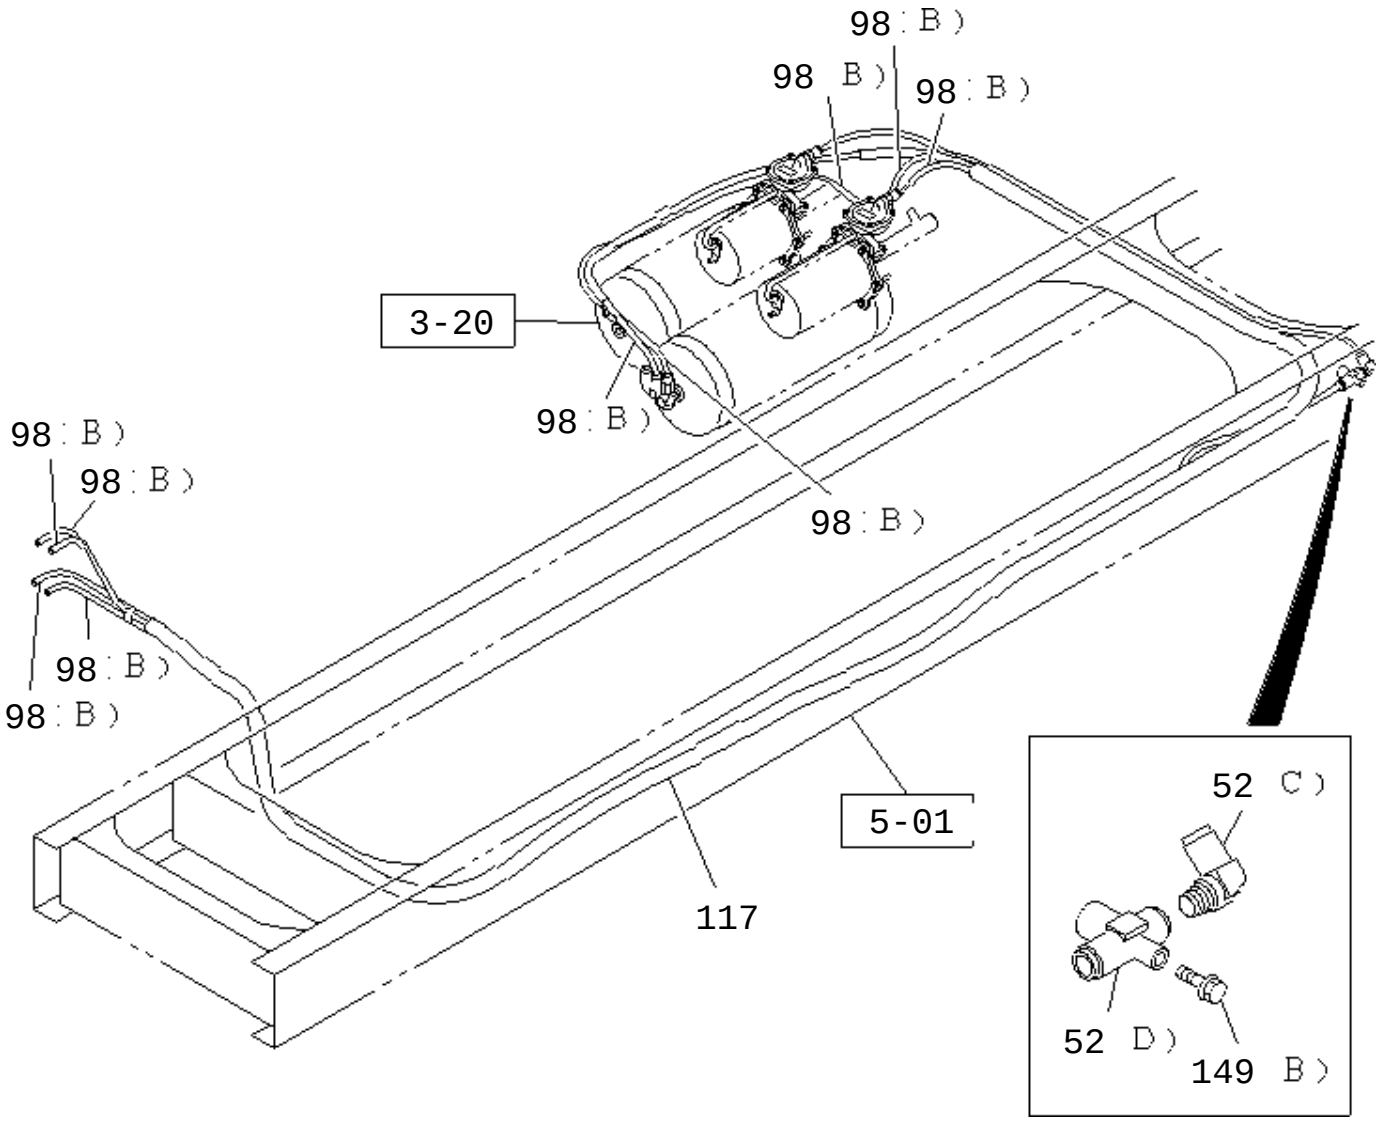

https://truckmanualshub.com/

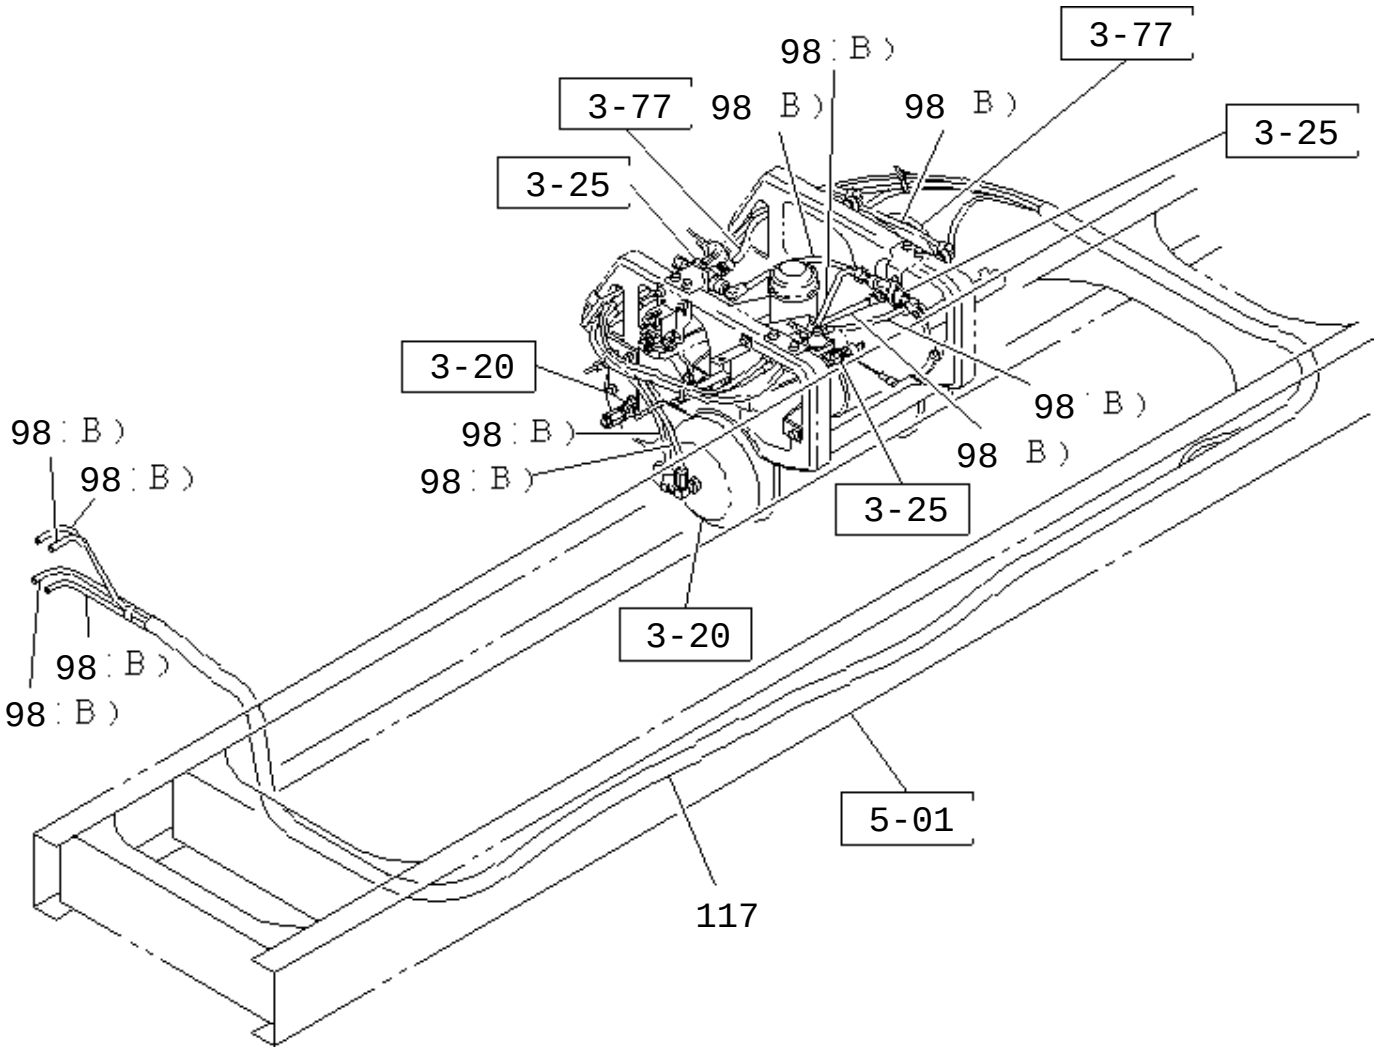

https://truckmanualshub.com/

3-75 BRAKE PIPING; AIR,FRONT


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
2		UNION; AIR PIPE					
		8-98057-394-1		1312-1403	01	A	
		8-98057-394-1		1404-	01	AB	
3		NUT; PIPE UNION					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
52		CONNECTOR; NYLON TUBE					
		1-09660-959-0		1404-	01	B	(C) DIN12 & R3/8 ELBOW
		8-98142-232-0		1404-	01	B	(D)
		1-09660-958-0		1312-1403	04	A	(A) DIN12 & R1/4 ELBOW
		1-09660-958-0		1404-	04	AB	(A) DIN12 & R1/4 ELBOW
		1-09660-967-0		1312-1403	04	A	(B) DIN12 & R1/4 STRAIGHT
		1-09660-967-0		1404-	04	AB	(B) DIN12 & R1/4 STRAIGHT
75		BRACKET; UNION					
		8-98099-485-1		1312-1403	01	A	
		8-98099-485-1		1404-	01	AB	
98		TUBE; NYLON					
		8-98139-141-0		1312-1403	01	A	(A) IDN
		8-98139-141-0		1404-	01	AB	(A) IDN
		1-87411-006-0		1312-	AR	AB	(B) SERVICED BY L=2000 OD=8
		1-87411-007-0		1312-	AR	AB	(B) SERVICED BY L=4000 OD=8
		1-87411-011-0		1312-	AR	AB	(B) SERVICED BY L=2000 OD=12
		1-87411-012-0		1312-	AR	AB	(B) SERVICED BY L=4000 OD=12
		1-87411-013-0		1312-	AR	AB	(B) SERVICED BY L=6000 OD=12
		1-87411-014-0		1312-	AR	AB	(B) SERVICED BY L=8000 OD=12
117		TUBE; CORRUGATE					
		1-87411-019-0		1312-	AR	AB	SERVICED BY L=2000 ID=10
		1-87411-022-0		1312-	AR	AB	SERVICED BY L=2000 ID=13
		1-87411-031-0		1312-	AR	AB	SERVICED BY L=2000 ID=25
		1-87411-033-0		1312-	AR	AB	SERVICED BY L=2000 ID=28
		1-87411-034-0		1312-	AR	AB	SERVICED BY L=4000 ID=28
		1-87411-035-0		1312-	AR	AB	SERVICED BY L=2000 ID=32
		1-87411-036-0		1312-	AR	AB	SERVICED BY L=4000 ID=32
145		PLUG					
		9-99204-513-0		1312-1403	01	A	PT1/4
		9-99204-513-0		1404-	01	AB	PT1/4

https://truckmanualshub.com/

3-75 BRAKE PIPING; AIR,FRONT


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
149		BOLT; UNION					
		0-28050-825-0		1404-	01	B	(B) M8X25 FLANGE
		0-28050-800-0		1312-1403	01	A	(A) M8X100 FLANGE
		0-28050-800-0		1404-	01	AB	(A) M8X100 FLANGE
171		NUT; BRACKET					
		0-91180-210-0		1312-1403	02	A	M10 FLANGE
		0-91180-210-0		1404-	02	AB	M10 FLANGE
175		SENSOR; AIR PRESS					
		1-80220-023-1		1312-1403	02	A	THREAD R1/4
		1-80220-023-1		1404-	02	AB	THREAD R1/4
176		SWITCH; AIR PRESS					
		8-98010-857-0		1312-1403	01	A	
		8-98010-857-0		1404-	01	AB	
3-10		Move to 3-10					
3-78		Move to 3-78					
4-31		Move to 4-31					
6-70		Move to 6-70					
8-10		Move to 8-10					
3-20		Move to 3-20					
5-01		Move to 5-01					
3-25		Move to 3-25					
3-77		Move to 3-77					

https://truckmanualshub.com/

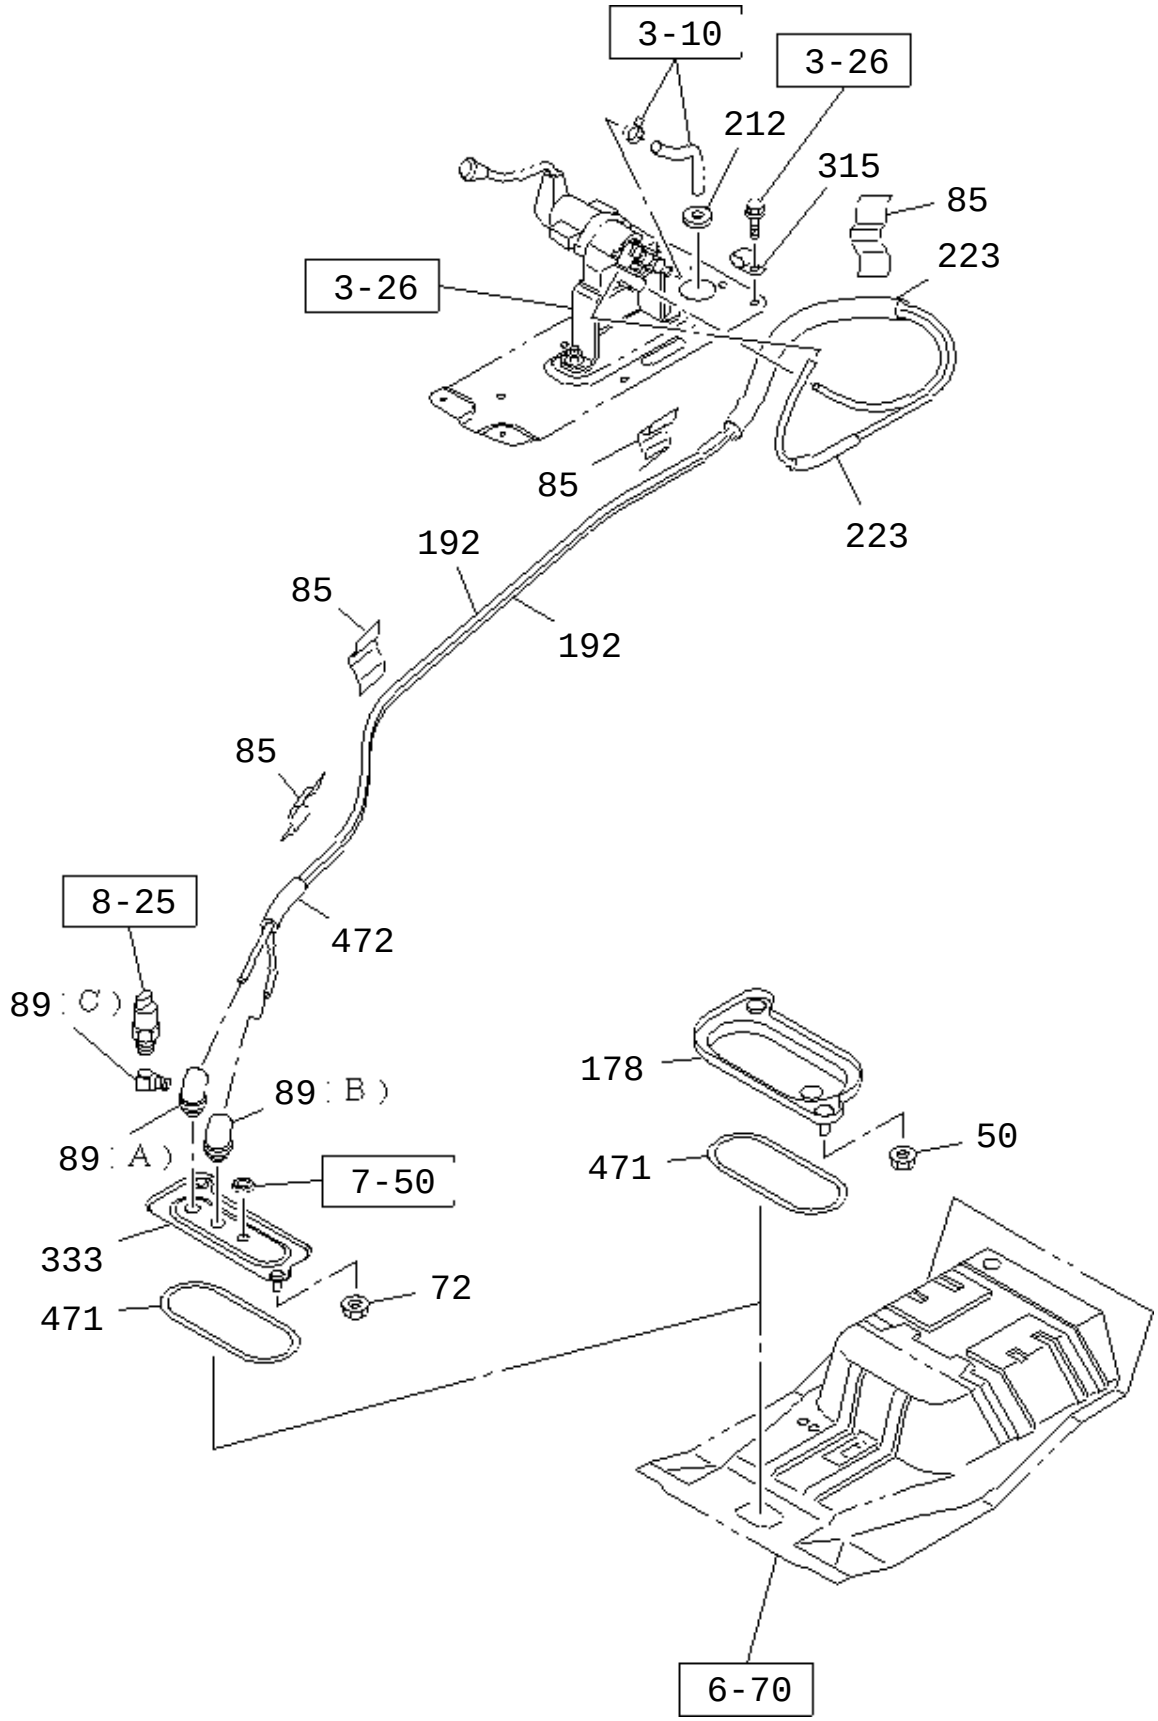



https://truckmanualshub.com/

FVZ EXC. MIXER CHASSIS
GVZ

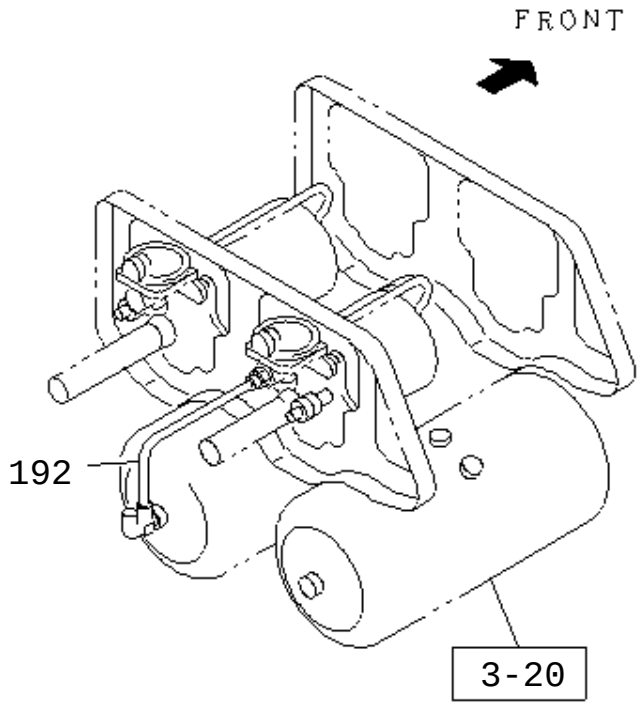

FVZ MIXER CHASSIS

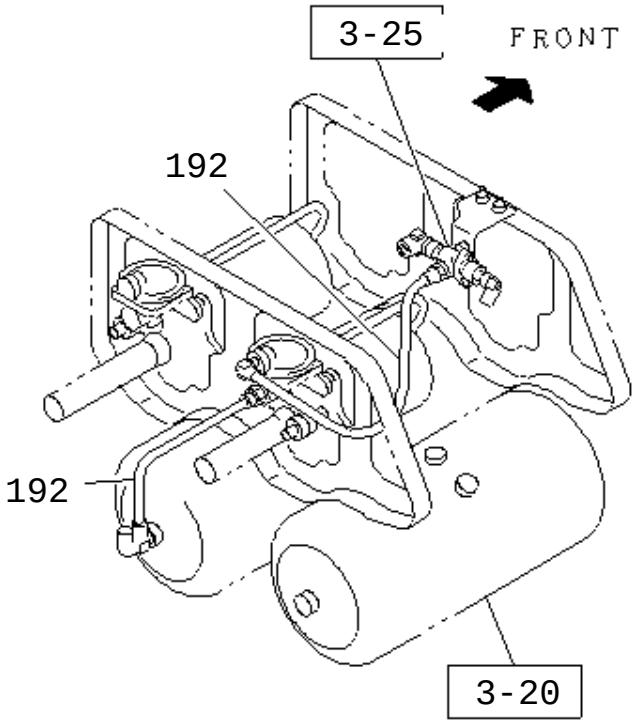

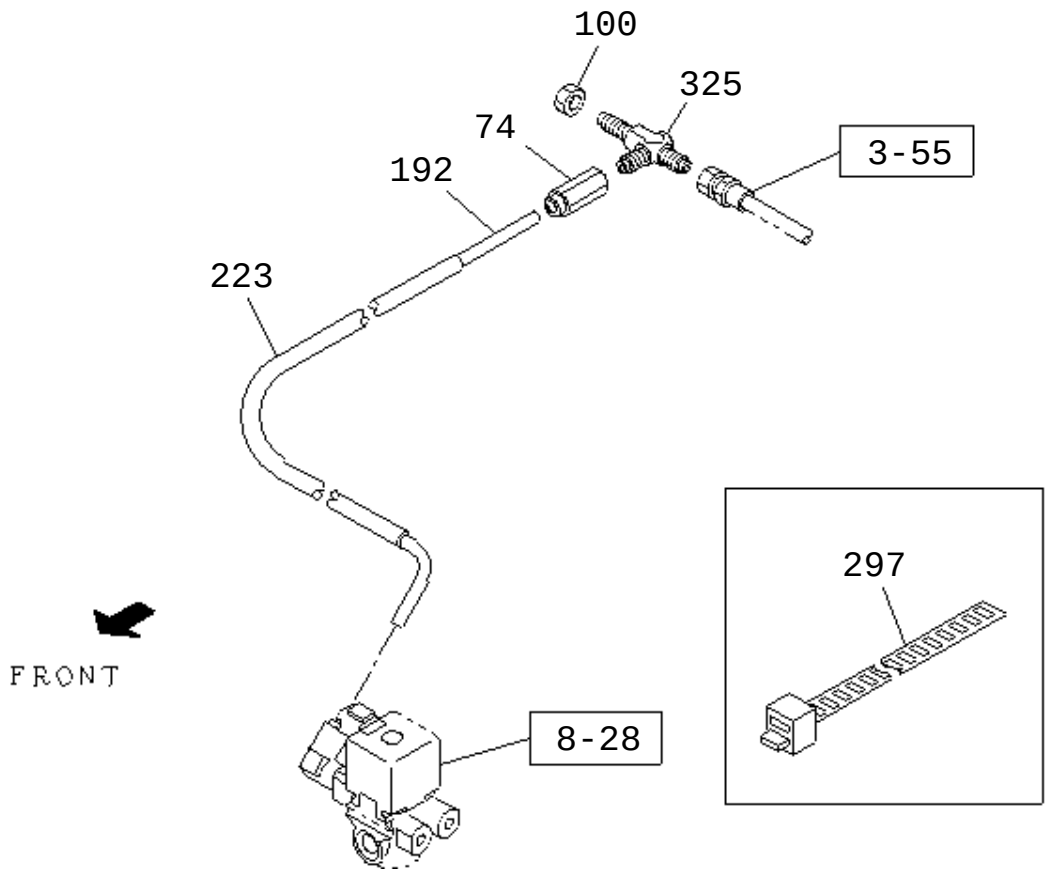

https://truckmanualshub.com/

3-77 BRAKE PIPING; AIR,REAR


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
50		NUT; UNION BRKT					
		0-91180-108-0		1312-	02	A	M8 FLANGE
72		NUT; BRKT					
		0-91180-108-0		1404-	02	B	M8 FLANGE
74		ADAPTER; UNION TO NYLON TUBE					
		1-09660-873-0		1312-1403	01	A	DIN8 & M12 STRAIGHT
		1-09660-873-0		1404-	01	AB	DIN8 & M12 STRAIGHT
85		GASKET; NYLON TUBE					
		1-72498-019-1		1404-	03	B	180X40
		1-72498-022-1		1404-	02	B	100X40
89		CONNECTOR; NYLON TUBE					
		1-09660-693-0		1404-	01	B	(C) PT1/4 2WAY
		8-97611-963-1		1404-	01	B	(B)
		8-97611-979-1		1404-	01	B	(A)
100		NUT; UNION					
		0-91180-112-0		1312-1403	01	A	M12 FLANGE IDN
		0-91180-112-0		1404-	01	AB	M12 FLANGE IDN
178		BRACKET; UNION					
		8-98017-052-1		1312-	01	A	
192		TUBE; NYLON					
		1-87411-006-0		1312-	AR	AB	SERVICED BY L=2000 OD=8
		1-87411-007-0		1312-	AR	AB	SERVICED BY L=4000 OD=8
		1-87411-008-0		1312-	AR	AB	SERVICED BY L=6000 OD=8
		1-87411-011-0		1312-	AR	AB	SERVICED BY L=2000 OD=12
212		GROMMET; AIR PIPE					
		9-61166-007-0		1404-	01	B	OD=24
223		TUBE; CORRUGATE					
		1-87411-019-0		1312-	AR	AB	SERVICED BY L=2000 ID=10
		1-87411-020-0		1312-	AR	AB	SERVICED BY L=4000 ID=10
		1-87411-021-0		1312-	AR	AB	SERVICED BY L=6000 ID=10
		1-87411-022-0		1312-	AR	AB	SERVICED BY L=2000 ID=13
		1-87411-027-0		1312-	AR	AB	SERVICED BY L=2000 ID=19
297		CLIP; BAND					
		1-09707-183-0		1312-1403	03	A	FULLER ES11109 DD M/T(Y5N) L=350
		1-09707-183-0		1404-	03	AB	FULLER ES11109 DD M/T(Y5N) L=350
315		CLIP					
		0-95324-825-0		1404-	01	B	ID=9X2 L=16
325		UNION; 2WAY					
		1-09654-059-2		1312-1403	01	A	M12 2WAY
		1-09654-059-2		1404-	01	AB	M12 2WAY
333		BRACKET; CONNECTOR					
		8-98017-054-1		1404-	01	B	
471		SEAL; BRKT					
		1-79738-832-0		1312-1403	01	A	
		1-79738-832-0		1404-	01	AB	


https://truckmanualshub.com/

3-77 BRAKE PIPING; AIR,REAR


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
472		TUBE; SPUTTER 8-98067-708-0		1404-	01	B	
3-10		Move to 3-10					
3-26		Move to 3-26					
6-70		Move to 6-70					
7-50		Move to 7-50					
8-25		Move to 8-25					
3-20		Move to 3-20					
3-25		Move to 3-25					
3-55		Move to 3-55					
8-28		Move to 8-28					


https://truckmanualshub.com/

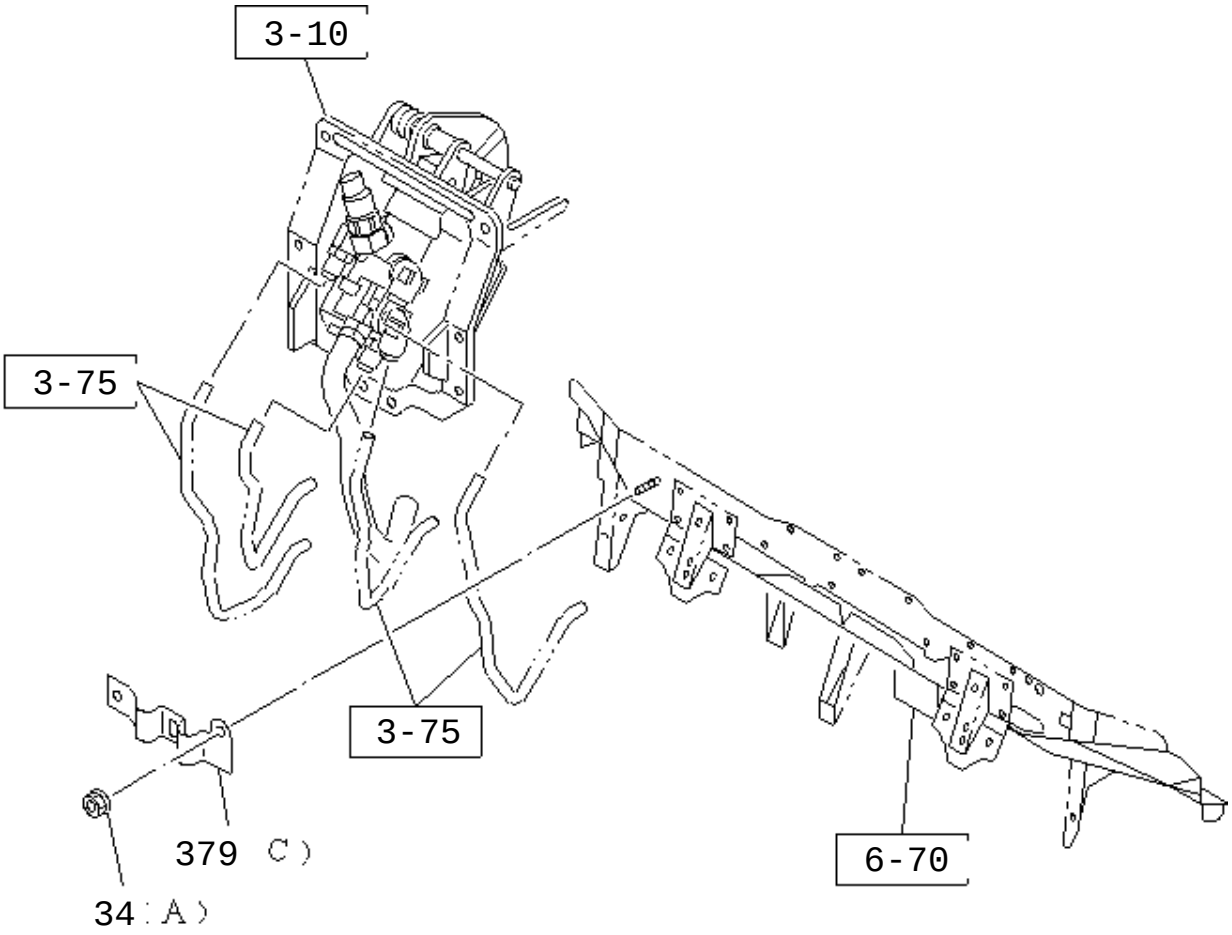

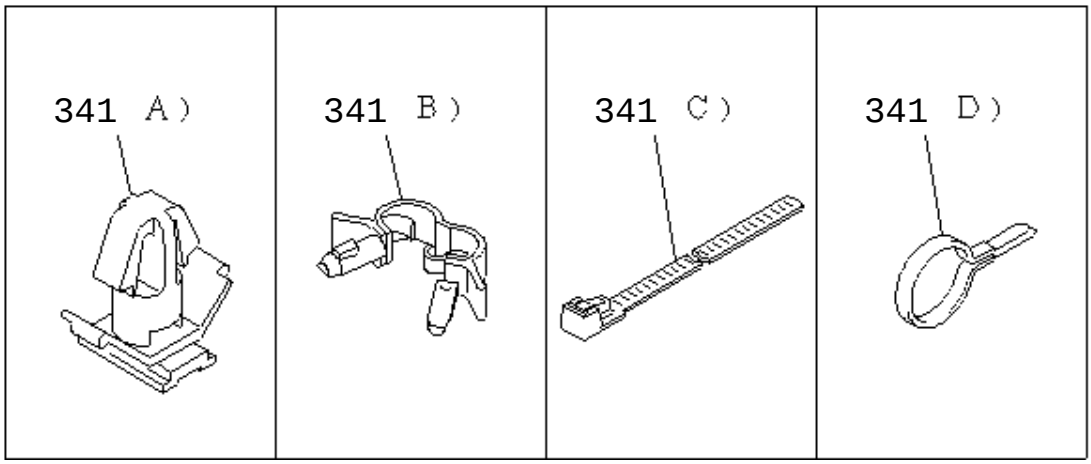



https://truckmanualshub.com/

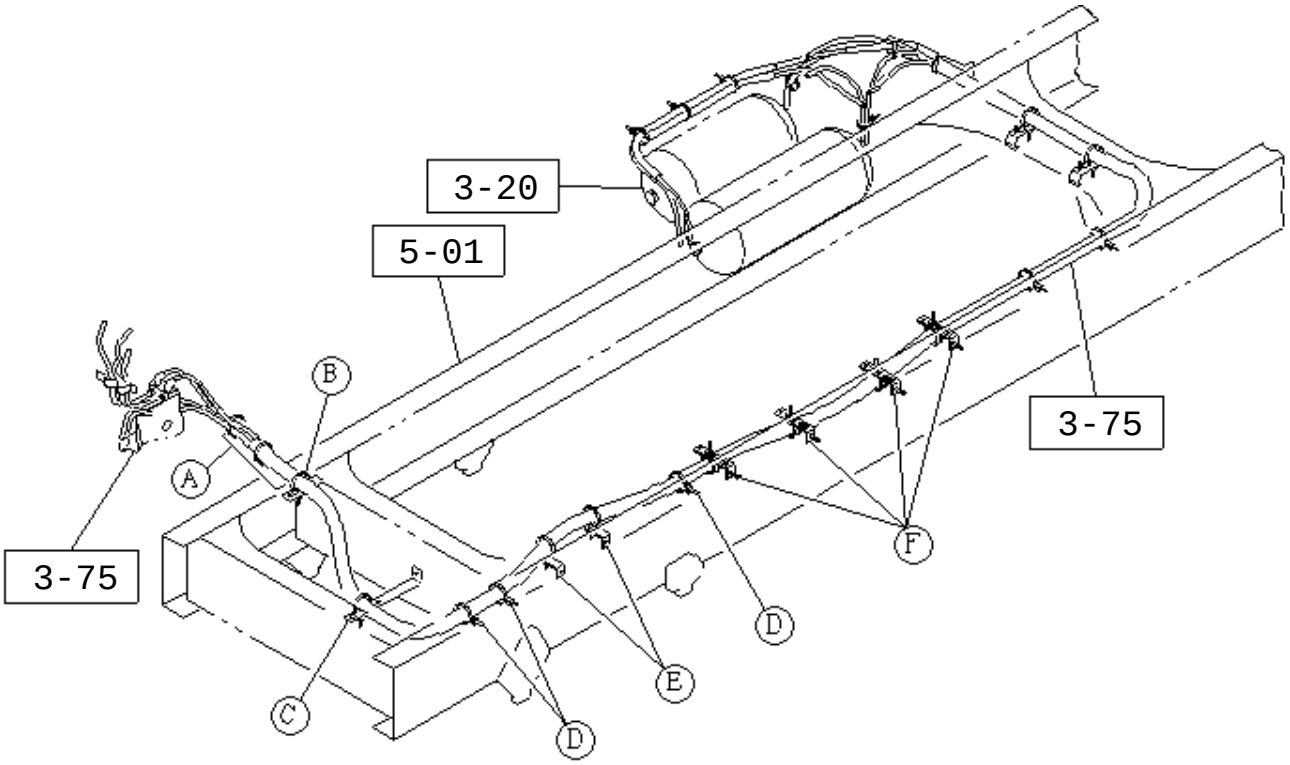


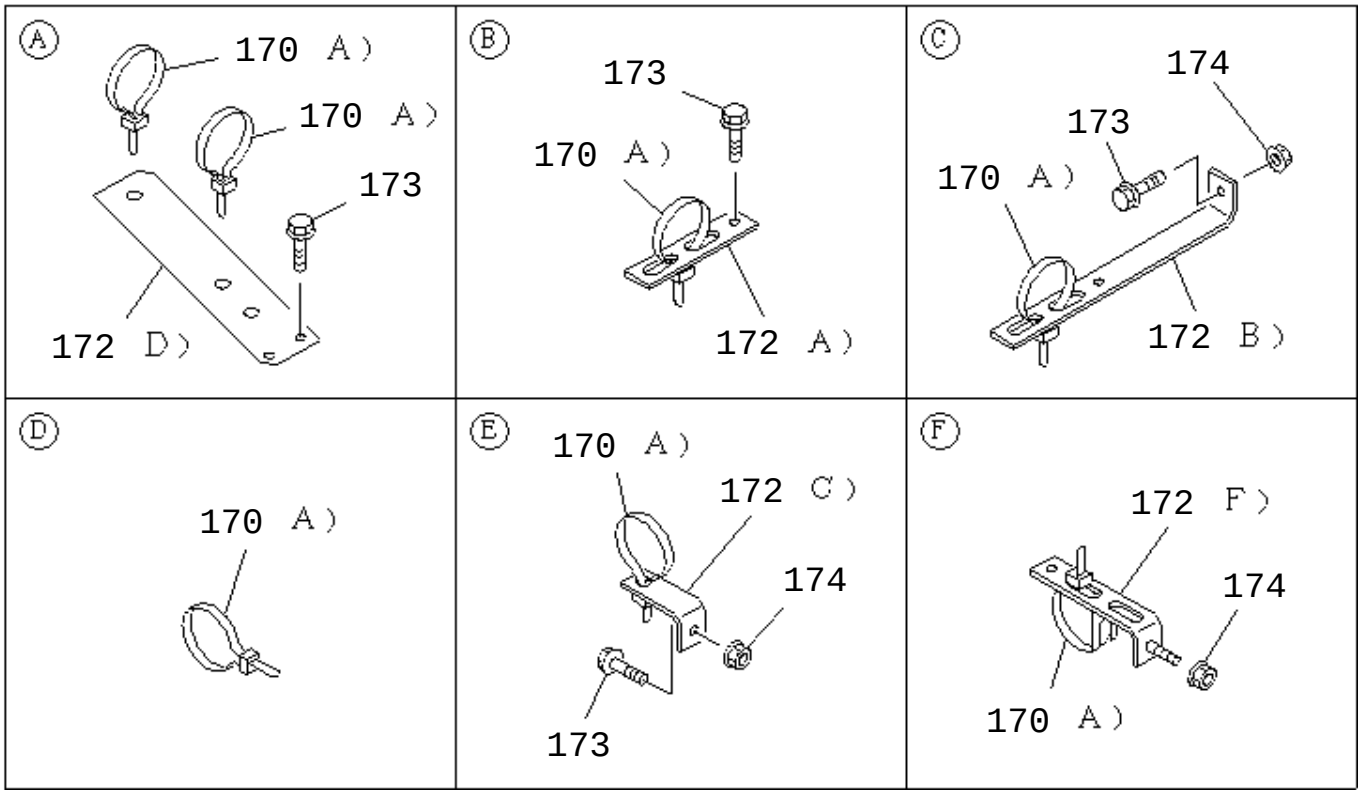


https://truckmanualshub.com/

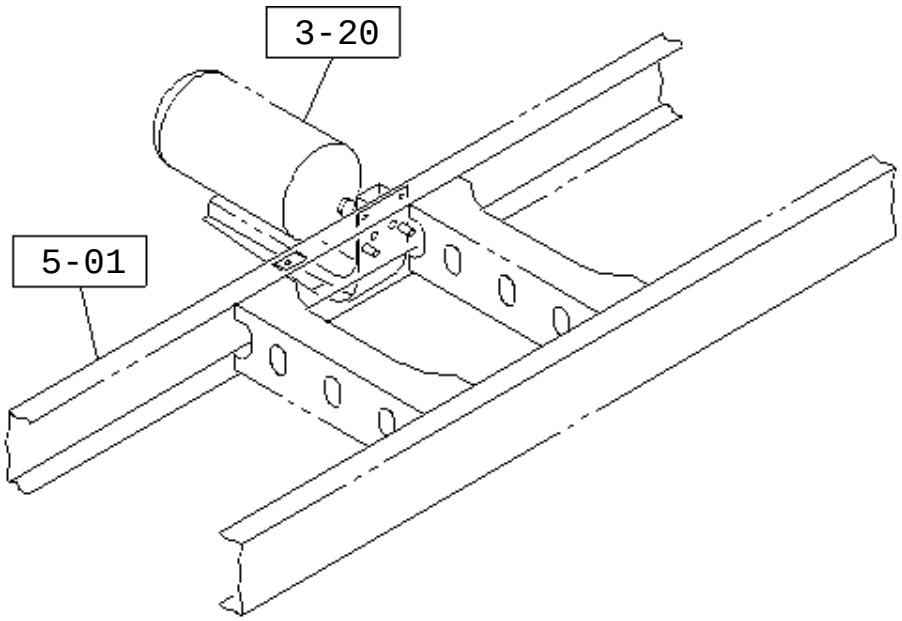


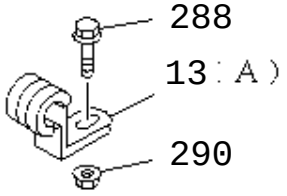


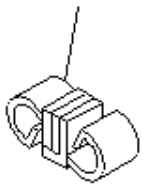


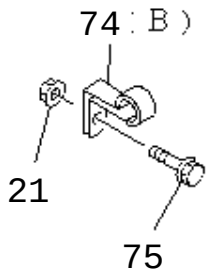





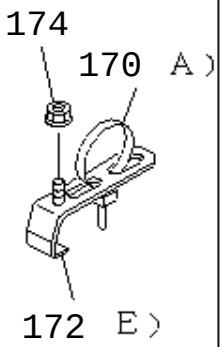


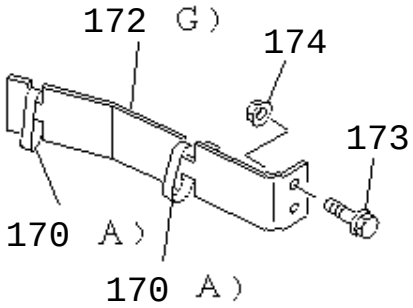


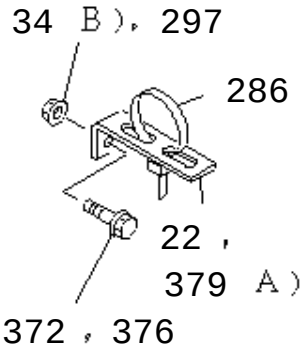


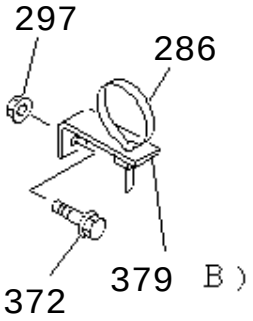

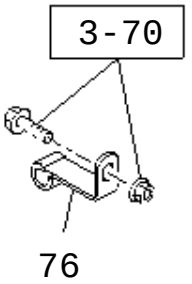

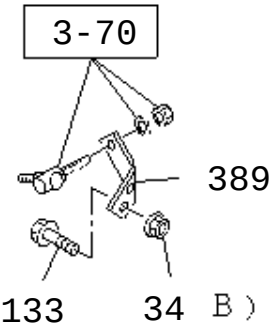

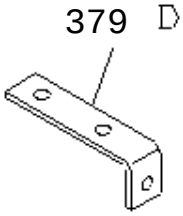

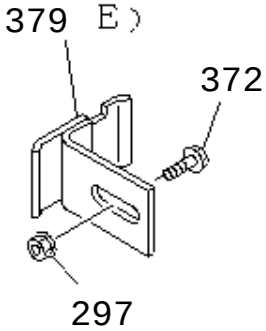

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
13		CLIP; AIR PIPE					
		1-09709-274-1		1404-	01	B	(B) ID=6.35 & 10.0
		1-09700-603-0		1312-1403	01	A	(A) ID=6 H=20 L=20
		1-09700-603-0		1404-	01	AB	(A) ID=6 H=20 L=20
		1-09709-276-1		1312-1403	01	A	(B) ID=6.35 & 15
		1-09709-276-1		1404-	01	AB	(B) ID=6.35 & 15
21		NUT; CLIP					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
22		BRACKET; CLIP					
		1-47477-645-2		1404-	01	B	L=100 H=30
34		NUT; BRKT					
		0-91180-108-0		1404-	01	B	(B) M8 FLANGE
		0-91180-106-0		1312-1403	02	A	(A) M6 FLANGE
		0-91180-106-0		1404-	02	AB	(A) M6 FLANGE
		0-91180-108-0		1312-1403	02	A	(B) M8 FLANGE
		0-91180-108-0		1404-	02	AB	(B) M8 FLANGE
74		CLIP; NYLON TUBE					
		1-09707-183-0		1402-1403	02	A	WHEEL BASE 4700MM(47W) (C) L=350
		1-09707-183-0		1404-	02	A	WHEEL BASE 4700MM(47W) (C) L=350
		1-09707-183-0		1404-	02	B	(C) L=350
		1-09700-529-0		1312-1403	01	A	(B) ID=13 H=50 L=25
		1-09700-529-0		1404-	01	AB	(B) ID=13 H=50 L=25
		1-09709-281-1		1312-1403	01	A	(A) ID=12 & 15
		1-09709-281-1		1404-	01	AB	(A) ID=12 & 15
		1-09707-183-0		1312-	05	A	WHEEL BASE 5300MM(53W) (C) L=350
		1-09707-183-0		1312-	09	A	WHEEL BASE 7100MM(71W) (C) L=350
75		BOLT; CLIP					
		0-28650-820-0		1312-1403	01	A	M8X20 FLANGE IDN

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
75		0-28650-820-0		1404-	01	AB	M8X20 FLANGE IDN
76		CLIP; NYLON TUBE					
		1-09700-529-0		1312-1403	01	A	ID=13 H=50 L=25
		1-09700-529-0		1404-	01	AB	ID=13 H=50 L=25
128		CLIP; NYLON TUBE					
		1-09707-183-0		1402-	02	A	MIXER CHASSIS<6NR> L=350
		1-09707-183-0		1312-1401	01	A	L=350
		1-09707-183-0		1402-1403	01	A	EXC. MIXER CHASSIS<6NR> L=350
		1-09707-183-0		1404-	01	A	EXC. MIXER CHASSIS<6NR> L=350
		1-09707-183-0		1404-	01	B	L=350
133		BOLT; BRKT					
		0-28650-820-0		1312-1403	02	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	M8X20 FLANGE IDN
134		CLIP; AIR PIPE					
		1-09707-183-0		1312-1403	01	A	L=350
		1-09707-183-0		1404-	01	AB	L=350
170		CLIP; NYLON TUBE					
		1-09707-183-0		1402-	34	A	MIXER CHASSIS<6NR> (A) L=350
		1-09709-280-1		1402-	01	A	MIXER CHASSIS<6NR> (B) ID=12 & 12
		1-09707-183-0		1404-	29	B	(A) L=350
		1-09707-183-0		1312-1401	27	A	(A) L=350
		1-09707-183-0		1402-	27	A	EXC. MIXER CHASSIS<6NR> (A) L=350
172		BRACKET; TUBE CLIP					
		1-47477-514-3		1312-1403	01	A	(A)
		1-47477-514-3		1404-	01	AB	(A)
		1-47477-646-3		1312-1403	01	A	(B) L=225
		1-47477-646-3		1404-	01	AB	(B) L=225
		1-47477-716-1		1312-1403	02	A	(C) L=60 H=30
		1-47477-716-1		1404-	02	AB	(C) L=60 H=30
		8-98031-420-2		1312-1403	01	A	(D)
		8-98031-420-2		1404-	01	AB	(D)
		8-98047-730-0		1312-1403	02	A	(E)
		8-98047-730-0		1404-	02	AB	(E)
		8-98177-873-0		1312-1403	04	A	(F)

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
172		8-98177-873-0		1404-	04	AB	(F)
		8-98184-177-0		1312-1403	01	A	(G) IDN
		8-98184-177-0		1404-	01	AB	(G) IDN
173		BOLT; CLIP BRKT					
		0-28650-820-0		1312-1403	02	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	M8X20 FLANGE IDN
		0-28650-825-0		1312-1403	02	A	M8X25 FLANGE IDN
		0-28650-825-0		1404-	02	AB	M8X25 FLANGE IDN
		0-28650-830-0		1312-1403	04	A	M8X30 FLANGE
		0-28650-830-0		1404-	04	AB	M8X30 FLANGE
174		NUT; CLIP BRKT					
		0-91180-108-0		1312-1403	11	A	M8 FLANGE
		0-91180-108-0		1404-	11	AB	M8 FLANGE
286		CLIP; NYLON TUBE					
		1-09707-183-0		1402-	05	A	MIXER CHASSIS<6NR> L=350
		1-09707-183-0		1404-	06	B	L=350
		1-09707-183-0		1312-1401	04	A	L=350
		1-09707-183-0		1402-	04	A	EXC. MIXER CHASSIS<6NR> L=350
288		BOLT; CLIP,AIR PIPE					
		0-28650-820-0		1312-1403	01	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	AB	M8X20 FLANGE IDN
290		NUT; CLIP,AIR PIPE					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
297		NUT; BRKT					
		0-91180-108-0		1312-1401	04	A	WHEEL BASE 5300MM(53W) M8 FLANGE
		0-91180-108-0		1402-1403	04	A	WHEEL BASE 4700MM(47W),WHEEL BASE 5300MM(53W) M8 FLANGE
		0-91180-108-0		1404-	04	A	WHEEL BASE 4700MM(47W),WHEEL BASE 5300MM(53W) M8 FLANGE
		0-91180-108-0		1404-	04	B	M8 FLANGE
		0-91180-108-0		1312-	03	A	WHEEL BASE 7100MM(71W) M8 FLANGE
318		CLIP; AIR PIPE					
		1-09709-276-1		1312-1403	05	A	ID=6.35 & 15
		1-09709-276-1		1404-	05	AB	ID=6.35 & 15
320		CLIP; BAND,FLEX FIX					
		5-09707-030-1		1312-1403	01	A	L=250 IDN
		5-09707-030-1		1404-	01	AB	L=250 IDN


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
331		CLIP; NYLON TUBE					
		1-09707-183-0		1312-1403	01	A	L=350
		1-09707-183-0		1404-	01	AB	L=350
341		CLIP; HARNESS					
		5-09707-030-1		1402-	01	A	MIXER CHASSIS<6NR> (C) L=250 IDN
		1-09709-178-0		1312-1403	01	A	(A) OD=9 H=6
		1-09709-178-0		1404-	01	AB	(A) OD=9 H=6
		1-09709-289-0		1312-1401	03	A	(B) ID=5-12 L=26
		1-09709-289-0		1402-	03	A	EXC. MIXER CHASSIS<6NR> (B) ID=5-12 L=26
		5-09707-030-1		1312-1403	04	A	(C) L=250 IDN
		5-09707-030-1		1404-	04	AB	(C) L=250 IDN
		9-09917-427-0		1312-1401	04	A	(D) ID=14 L=44
		9-09917-427-0		1402-	04	A	EXC. MIXER CHASSIS<6NR> (D) ID=14 L=44
372		BOLT; CLIP BRKT					
		0-28650-830-0		1402-	04	A	WHEEL BASE 4700MM(47W) M8X30 FLANGE
		0-28650-830-0		1312-1403	03	A	WHEEL BASE 5300MM(53W),WHEEL BASE 7100MM(71W) M8X30 FLANGE
		0-28650-830-0		1404-	03	A	WHEEL BASE 5300MM(53W),WHEEL BASE 7100MM(71W) M8X30 FLANGE
		0-28650-830-0		1404-	03	B	M8X30 FLANGE
		0-28650-825-0		1312-1403	01	A	WHEEL BASE 5300MM(53W) M8X25 FLANGE IDN
		0-28650-825-0		1404-	01	A	WHEEL BASE 5300MM(53W) M8X25 FLANGE IDN
		0-28650-825-0		1404-	01	B	M8X25 FLANGE IDN
376		BOLT; BRKT					
		0-28650-830-0		1404-	01	B	M8X30 FLANGE
379		BRACKET; NYLON TUBE					
		1-47477-629-2		1402-	01	A	WHEEL BASE 4700MM(47W) (A) L=150 H=30
		1-47477-716-1		1404-	03	B	(B) L=60 H=30
		1-47477-716-1		1312-	02	A	(B) L=60 H=30
		8-98044-013-0		1312-1403	01	A	(C)
		8-98044-013-0		1404-	01	AB	(C)
		1-47477-645-2		1312-1401	01	A	WHEEL BASE 5300MM(53W) (A) L=100 H=30


https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
379		1-47477-645-2		1402-1403	01	A	WHEEL BASE 4700MM(47W),WHEEL BASE 5300MM(53W) (A) L=100 H=30
		1-47477-645-2		1404-	01	A	WHEEL BASE 4700MM(47W),WHEEL BASE 5300MM(53W) (A) L=100 H=30
		1-47477-645-2		1404-	01	B	 (A) L=100 H=30
		8-98119-184-1		1312-	01	A	WHEEL BASE 5300MM(53W) (E)
		1-47477-755-1		1312-	01	A	WHEEL BASE 7100MM(71W) (D) L=90
389		BRACKET; UNION					
		1-47471-363-0		1312-1403	01	A	
		1-47471-363-0		1404-	01	AB	
3-10		Move to 3-10					
3-75		Move to 3-75					
6-70		Move to 6-70					
3-20		Move to 3-20					
5-01		Move to 5-01					
3-70		Move to 3-70					

https://truckmanualshub.com/

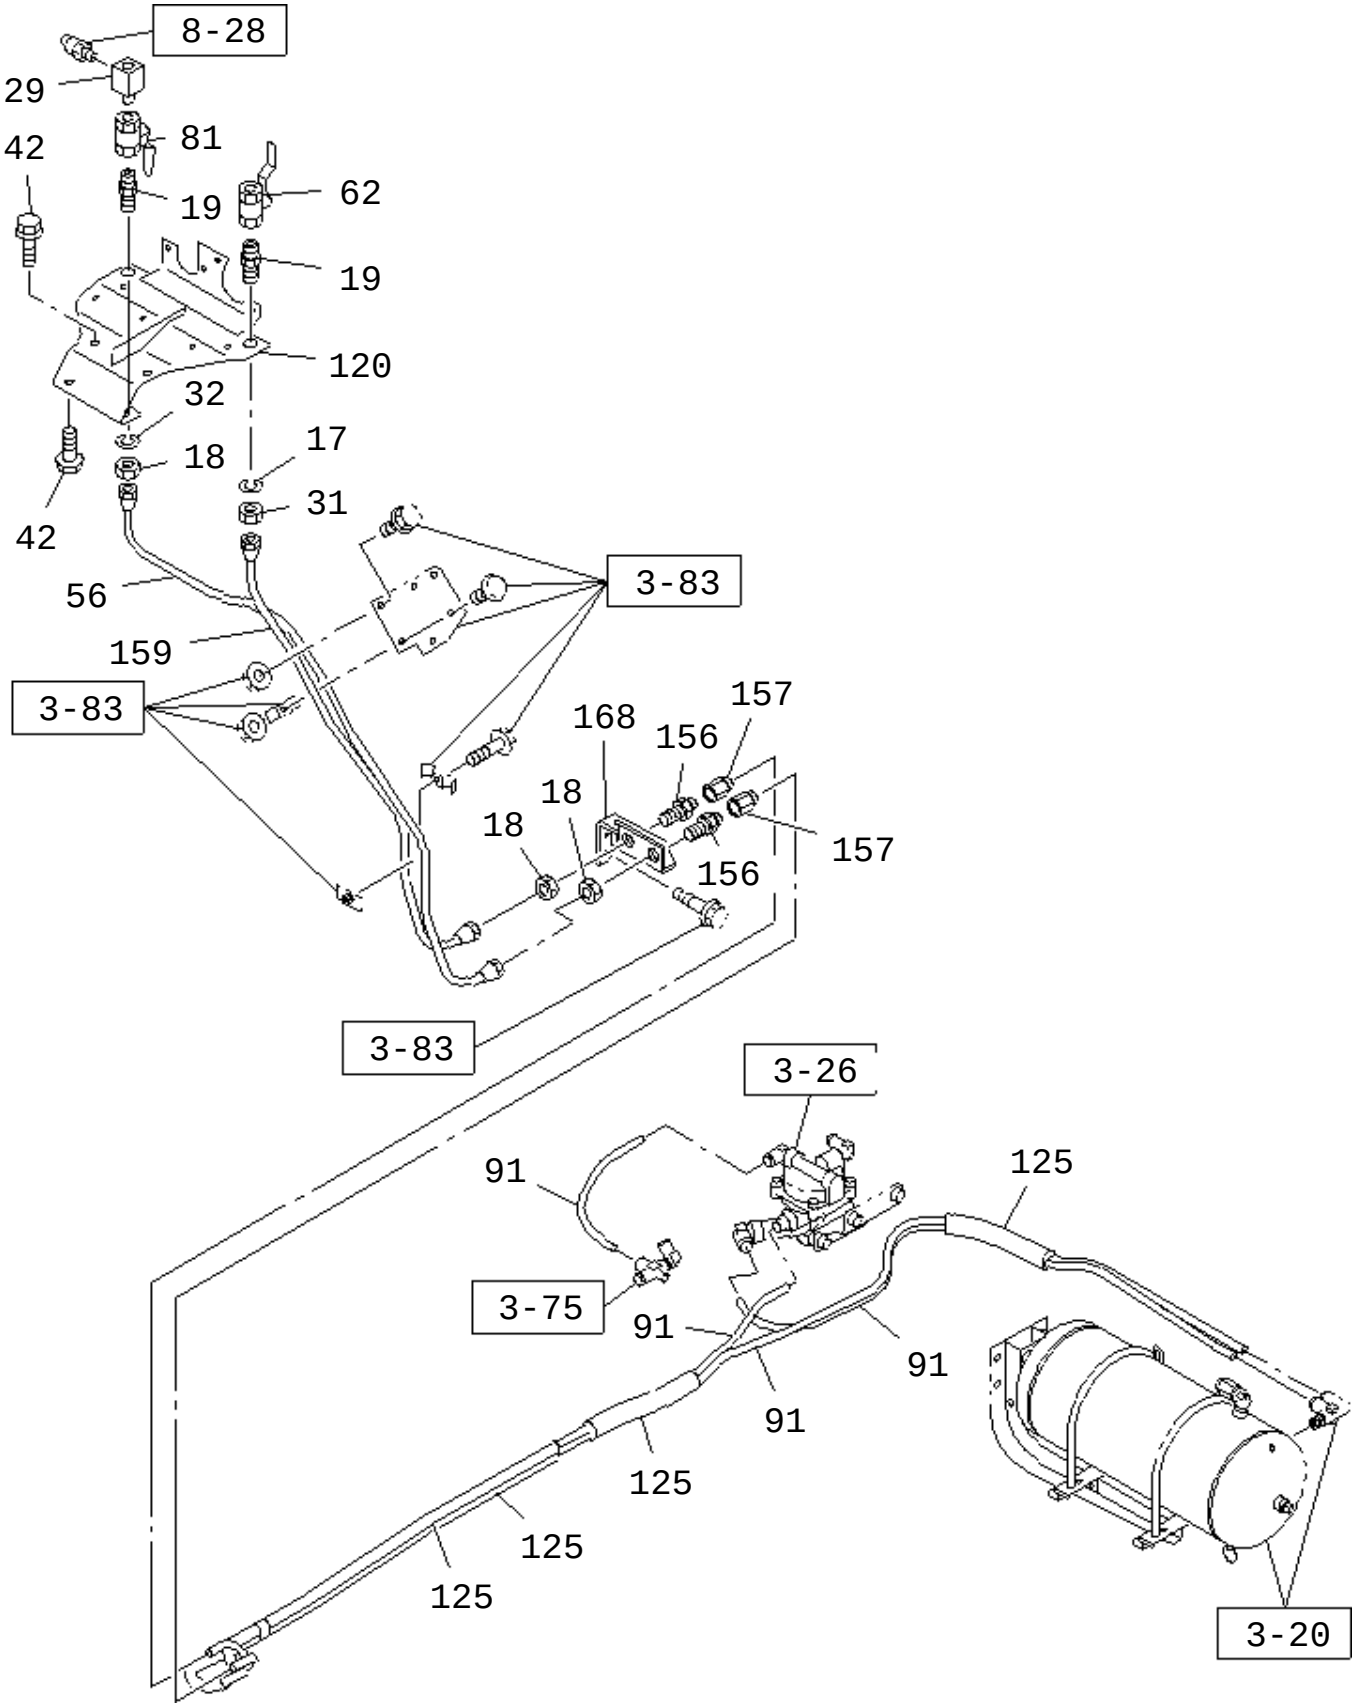

https://truckmanualshub.com/

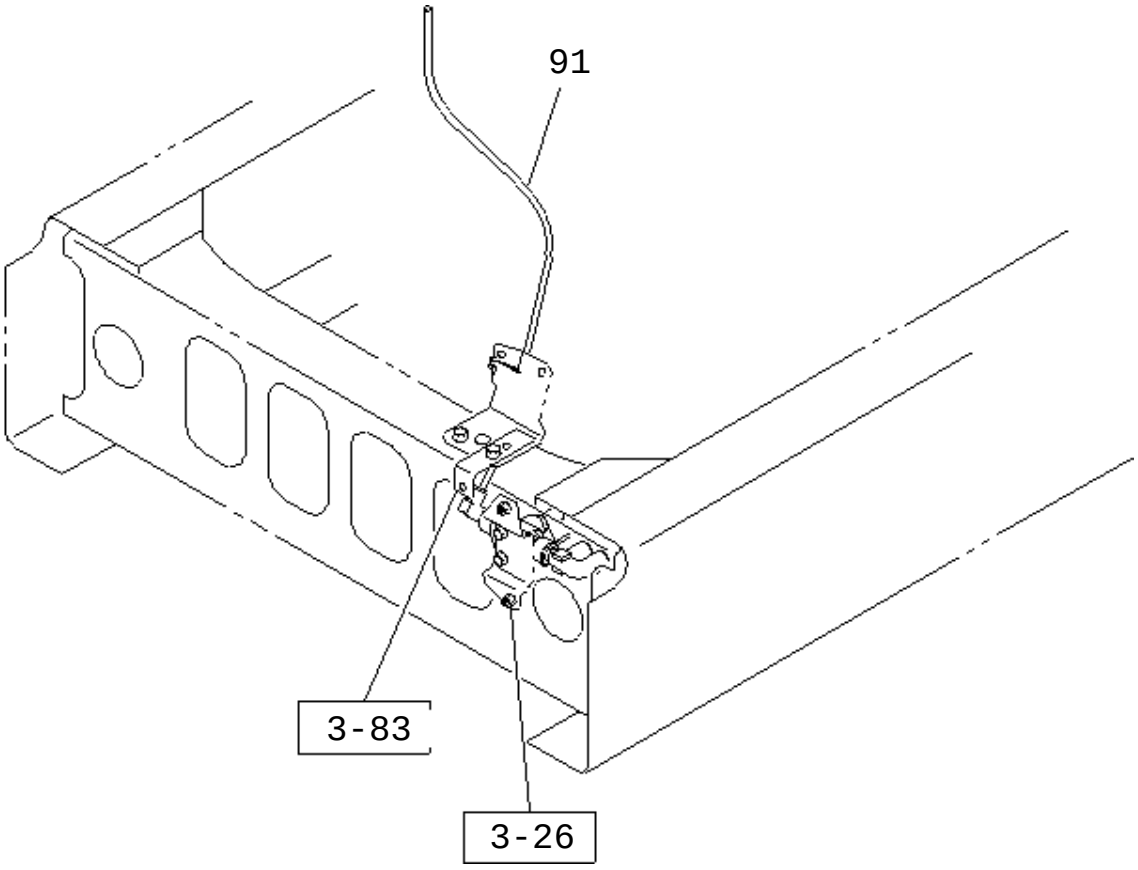


https://truckmanualshub.com/


3-80 BRAKE PIPING; TRAILER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
17		WASHER; LK,UNION 0-91510-520-0		1404-	01	B	ID=20.2
18		NUT; UNION 0-91111-520-0		1404-	03	B	M20
19		UNION; AIR PIPE 1-09650-236-1		1404-	02	B	
29		CONNECTOR; COCK 1-09664-041-1		1404-	01	B	PT1/2
31		NUT; UNION 0-91111-520-0		1404-	01	B	M20
32		WASHER; LK,UNION 0-91510-520-0		1404-	01	B	ID=20.2
42		BOLT; BRKT 0-28651-025-0		1404-	04	B	M10X25 FLANGE IDN
56		PIPE; AIR,UNION TO COCK 1-49115-484-0		1404-	01	B	L=817 SERVICED BY L=900
62		COCK; AIR PIPE 1-09680-093-0		1404-	01	B	YELLOW
81		COCK; AIR COUPLING 1-09680-091-0		1404-	01	B	RED
91		TUBE; NYLON 1-87411-006-0		1404-	01	B	SERVICED BY L=2000 OD=8
		1-87411-011-0		1404-	01	B	SERVICED BY L=2000 OD=12
		1-87411-011-0		1404-	02	B	SERVICED BY L=2000 OD=12
		1-87411-012-0		1404-	01	B	SERVICED BY L=4000 OD=12
120		BRACKET; COCK 8-98250-440-1		1404-	01	B	
125		TUBE; CORRUGATE 1-87411-022-0		1404-	02	B	SERVICED BY L=2000 ID=13
		1-87411-031-0		1404-	02	B	SERVICED BY L=2000 ID=25
156		UNION 0-92123-312-0		1404-	02	B	M20 & M20
157		ADAPTER 1-09660-877-0		1404-	02	B	DIN12 & M20 STRAIGHT
159		PIPE; AIR,UNION TO CONNECTOR 1-49115-487-0		1404-	01	B	L=1105 SERVICED BY L=1200
168		BRACKET; UNION 8-98250-432-1		1404-	01	B	
3-20		Move to 3-20					
3-26		Move to 3-26					
3-75		Move to 3-75					
3-83		Move to 3-83					
8-28		Move to 8-28					

https://truckmanualshub.com/

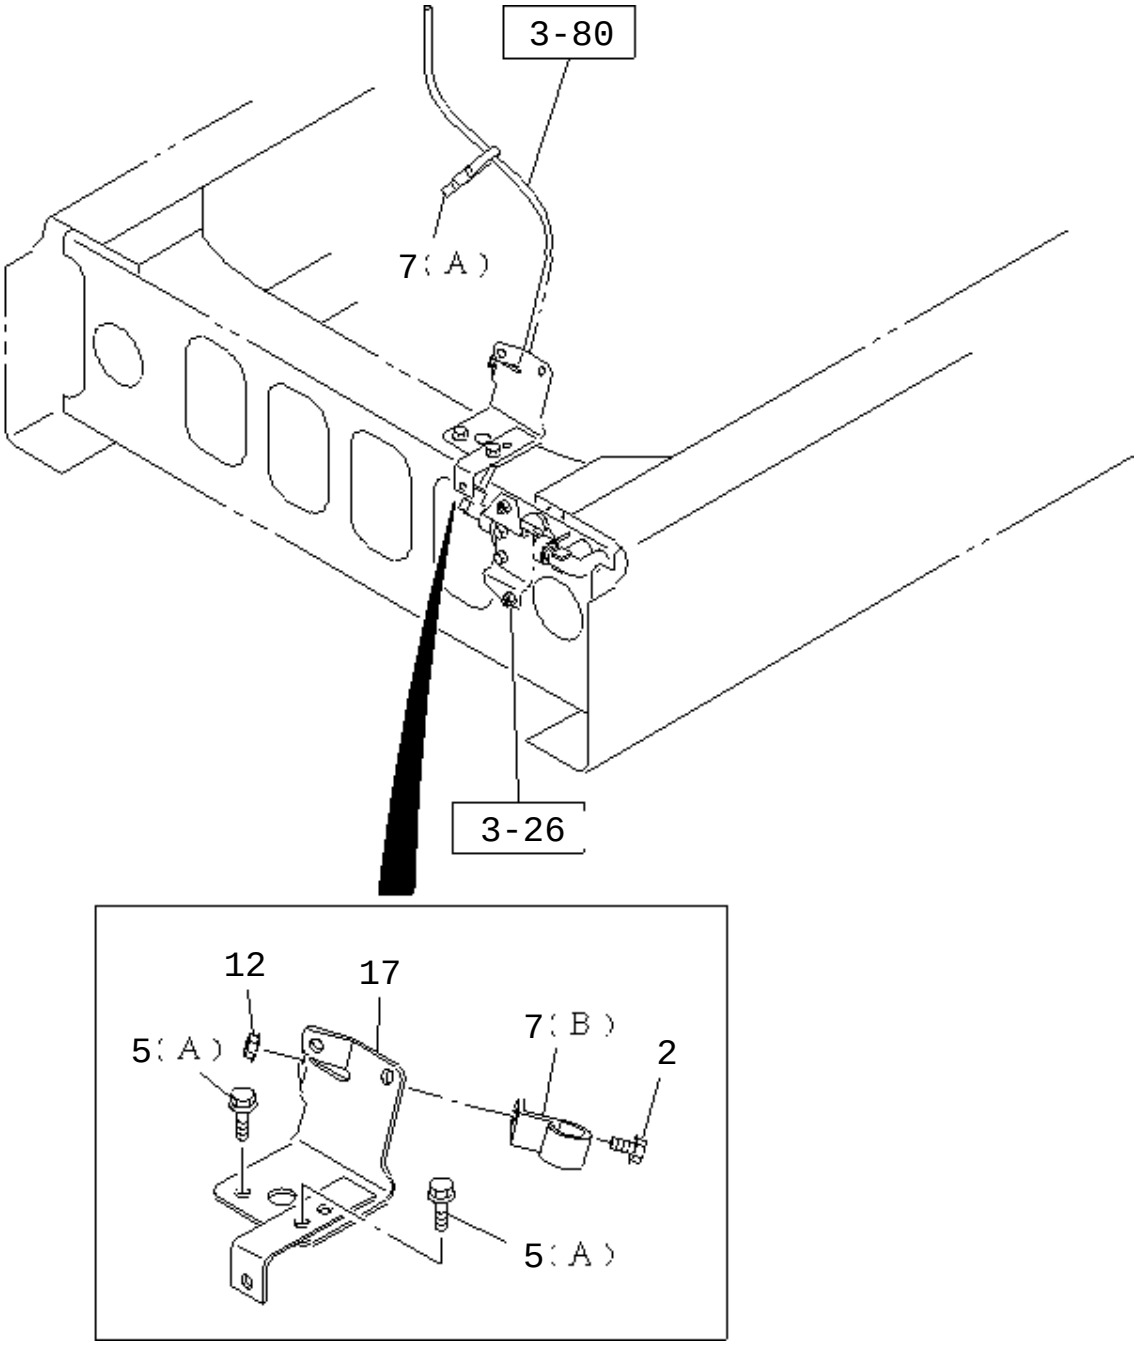

https://truckmanualshub.com/

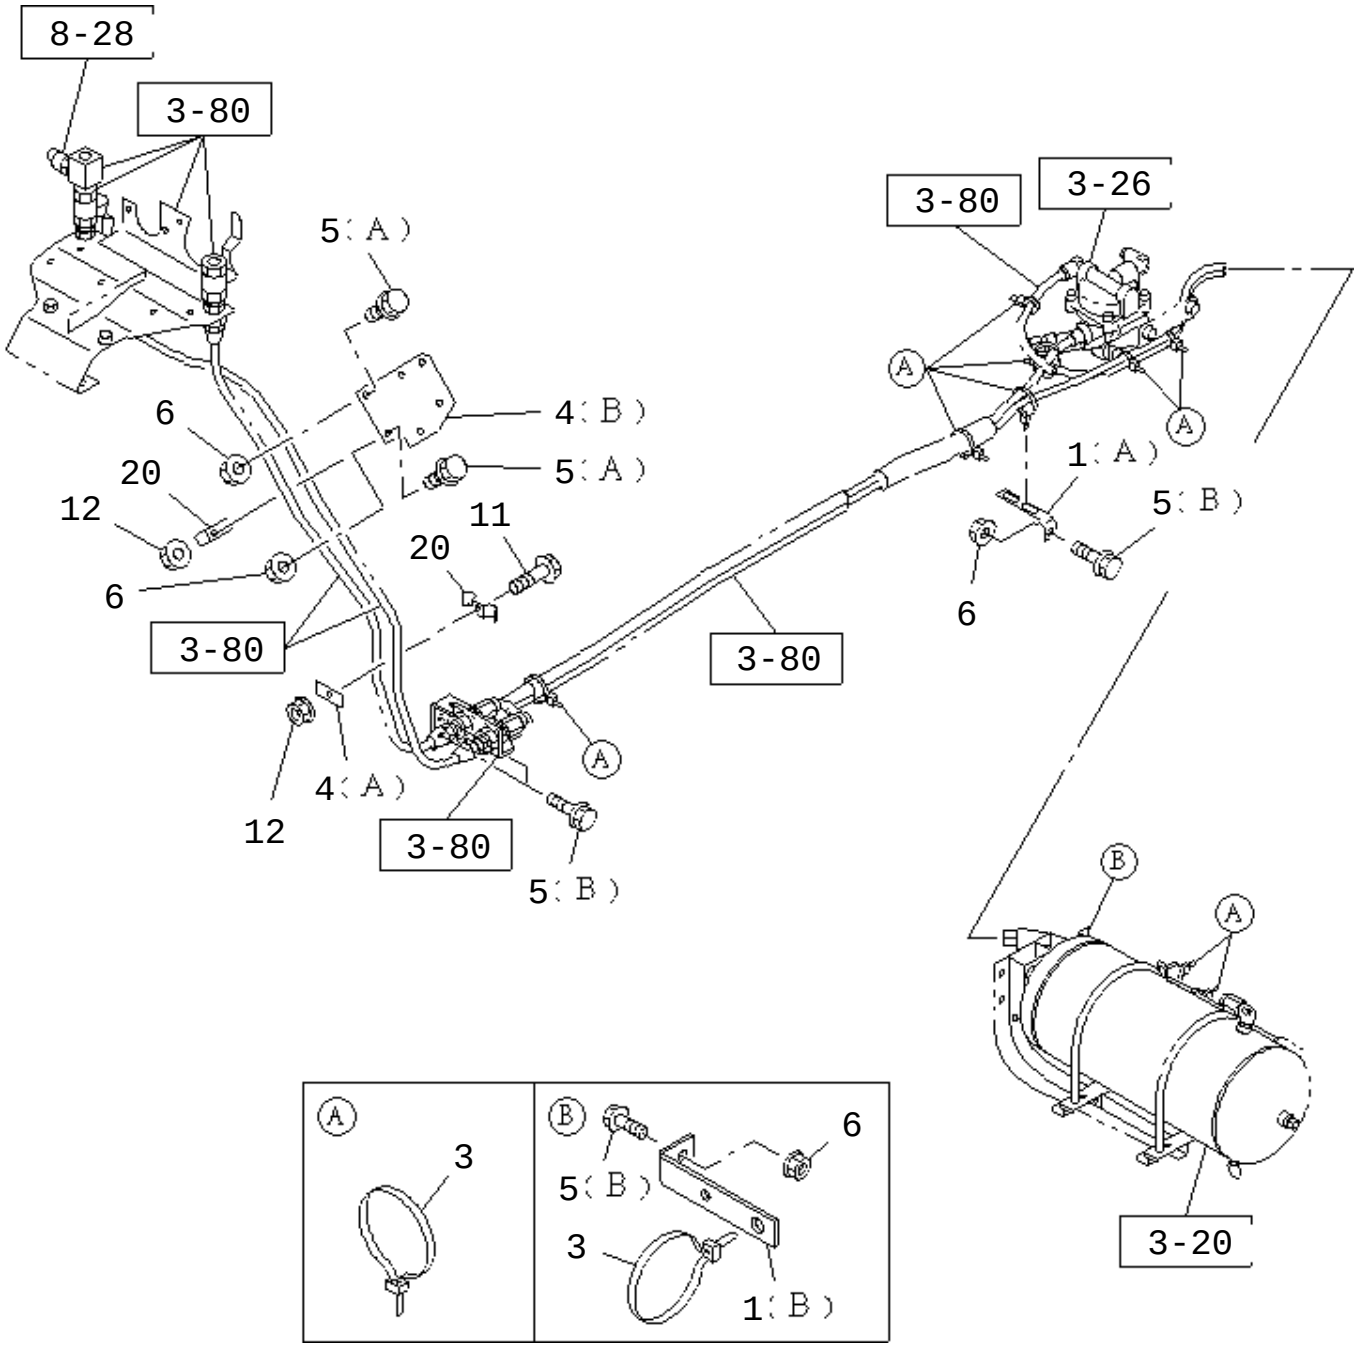


https://truckmanualshub.com/

3-83 FIXING PARTS; TRAILER PIPING

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		BRACKET; CLIP					
		1-47477-645-2		1404-	01	B	(A) L=100 H=30
		1-47477-755-1		1404-	01	B	(B) L=90
2		BOLT; CLIP					
		0-28650-820-0		1404-	01	B	M8X20 FLANGE IDN
3		CLIP; AIR PIPE					
		1-09707-183-0		1404-	11	B	L=350
4		BRACKET; AIR PIPE					
		1-47475-299-2		1404-	01	B	(A) L=50
		8-98141-100-0		1404-	01	B	(B)
5		BOLT; BRKT					
		0-28650-825-0		1404-	04	B	(A) M8X25 FLANGE IDN
		0-28650-830-0		1404-	02	B	(B) M8X30 FLANGE
		0-28650-830-0		1404-	02	B	(B) M8X30 FLANGE
6		NUT; BRKT					
		0-91180-108-0		1404-	02	B	M8 FLANGE
		0-91180-108-0		1404-	02	B	M8 FLANGE
7		CLIP; NYLON TUBE					
		1-09707-183-0		1404-	01	B	(A) L=350
		8-94176-806-0		1404-	01	B	(B) ID=21 H=25.5 L=26
11		BOLT; CLIP					
		0-28050-820-0		1404-	01	B	M8X20 FLANGE
12		NUT; CLIP					
		0-91180-108-0		1404-	03	B	M8 FLANGE
17		BRACKET; CLIP					
		8-98106-046-0		1404-	01	B	
20		CLIP; AIR PIPE					
		1-09700-689-0		1404-	02	B	ID=13 & 13 L=21.5 & 21.5
3-26		Move to 3-26					
3-80		Move to 3-80					
3-20		Move to 3-20					
8-28		Move to 8-28					


https://truckmanualshub.com/

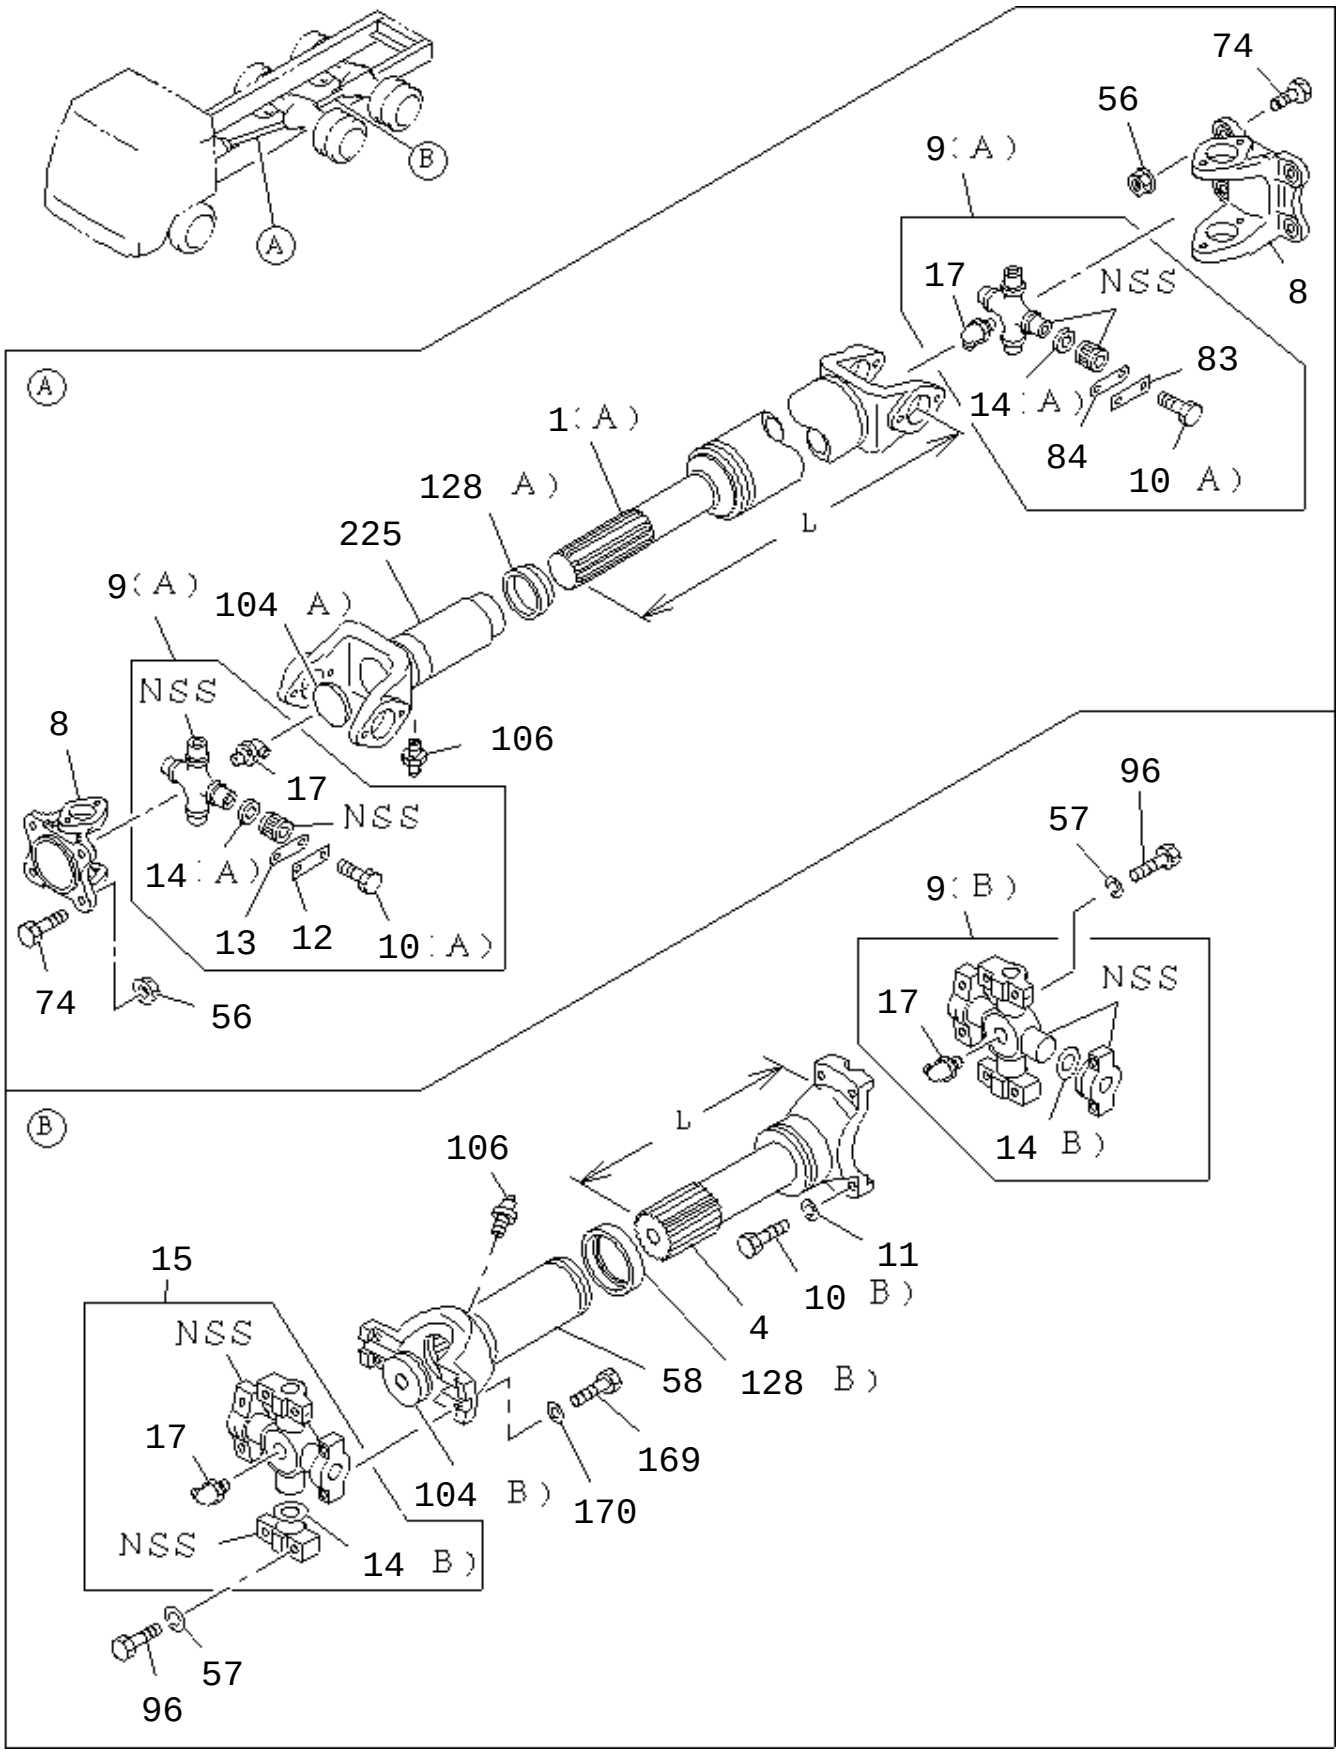



https://truckmanualshub.com/

4-01 PROPELLER SHAFT


WHEEL BASE 7100MM 1ST AND 2ND SHAFT

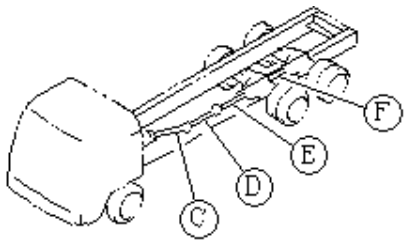

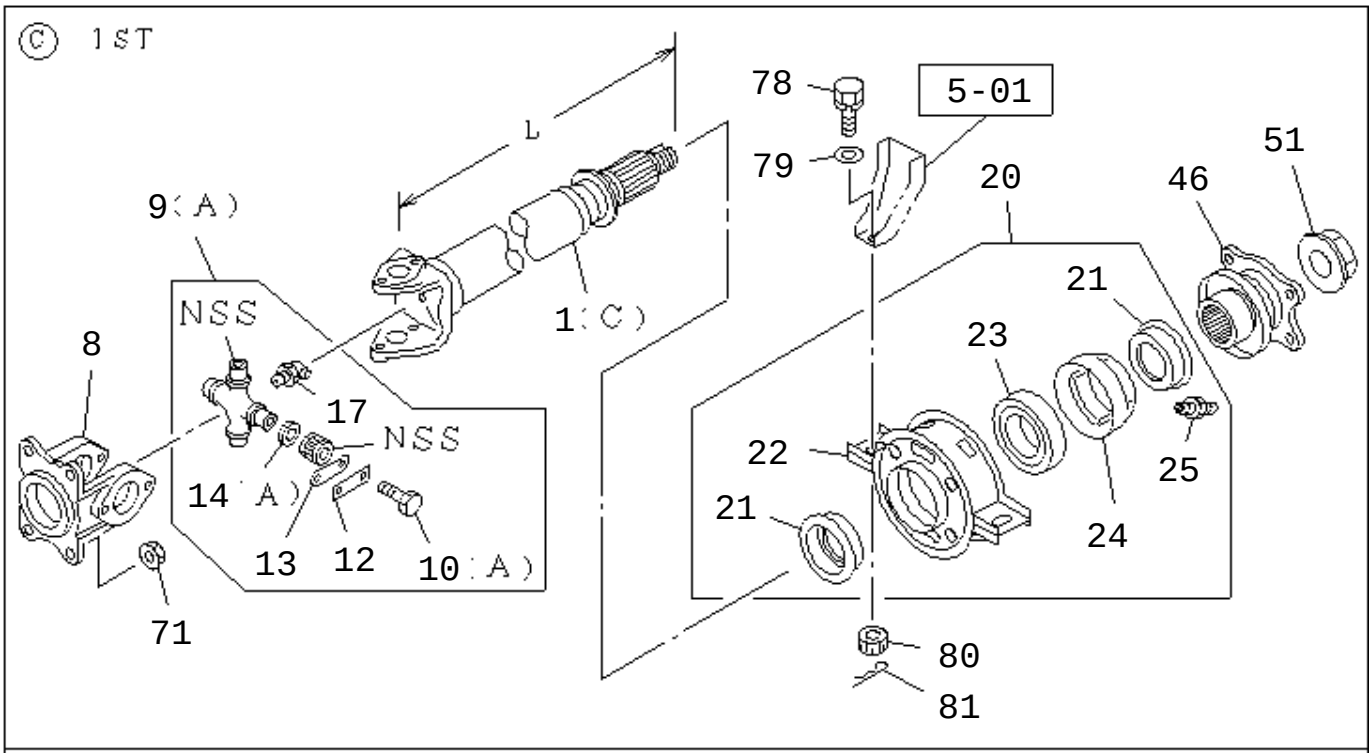

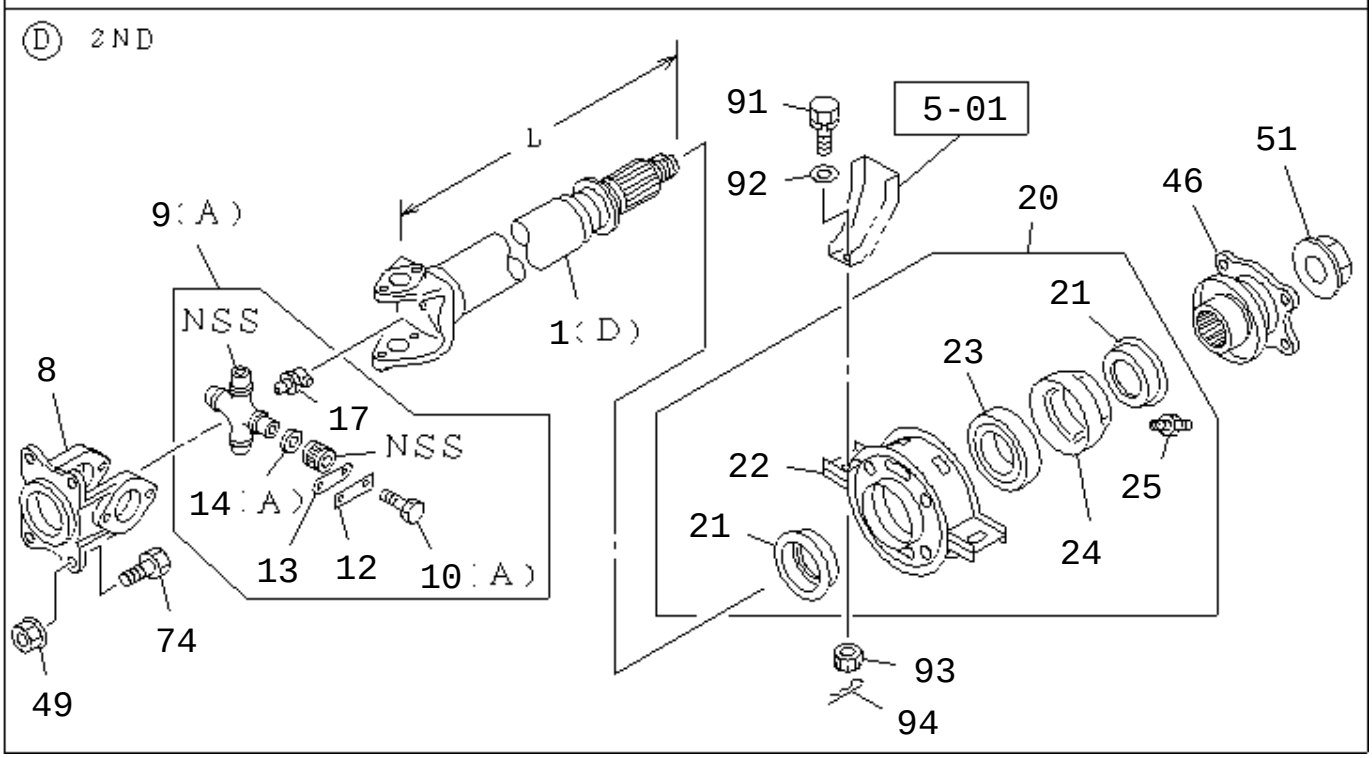

https://truckmanualshub.com/

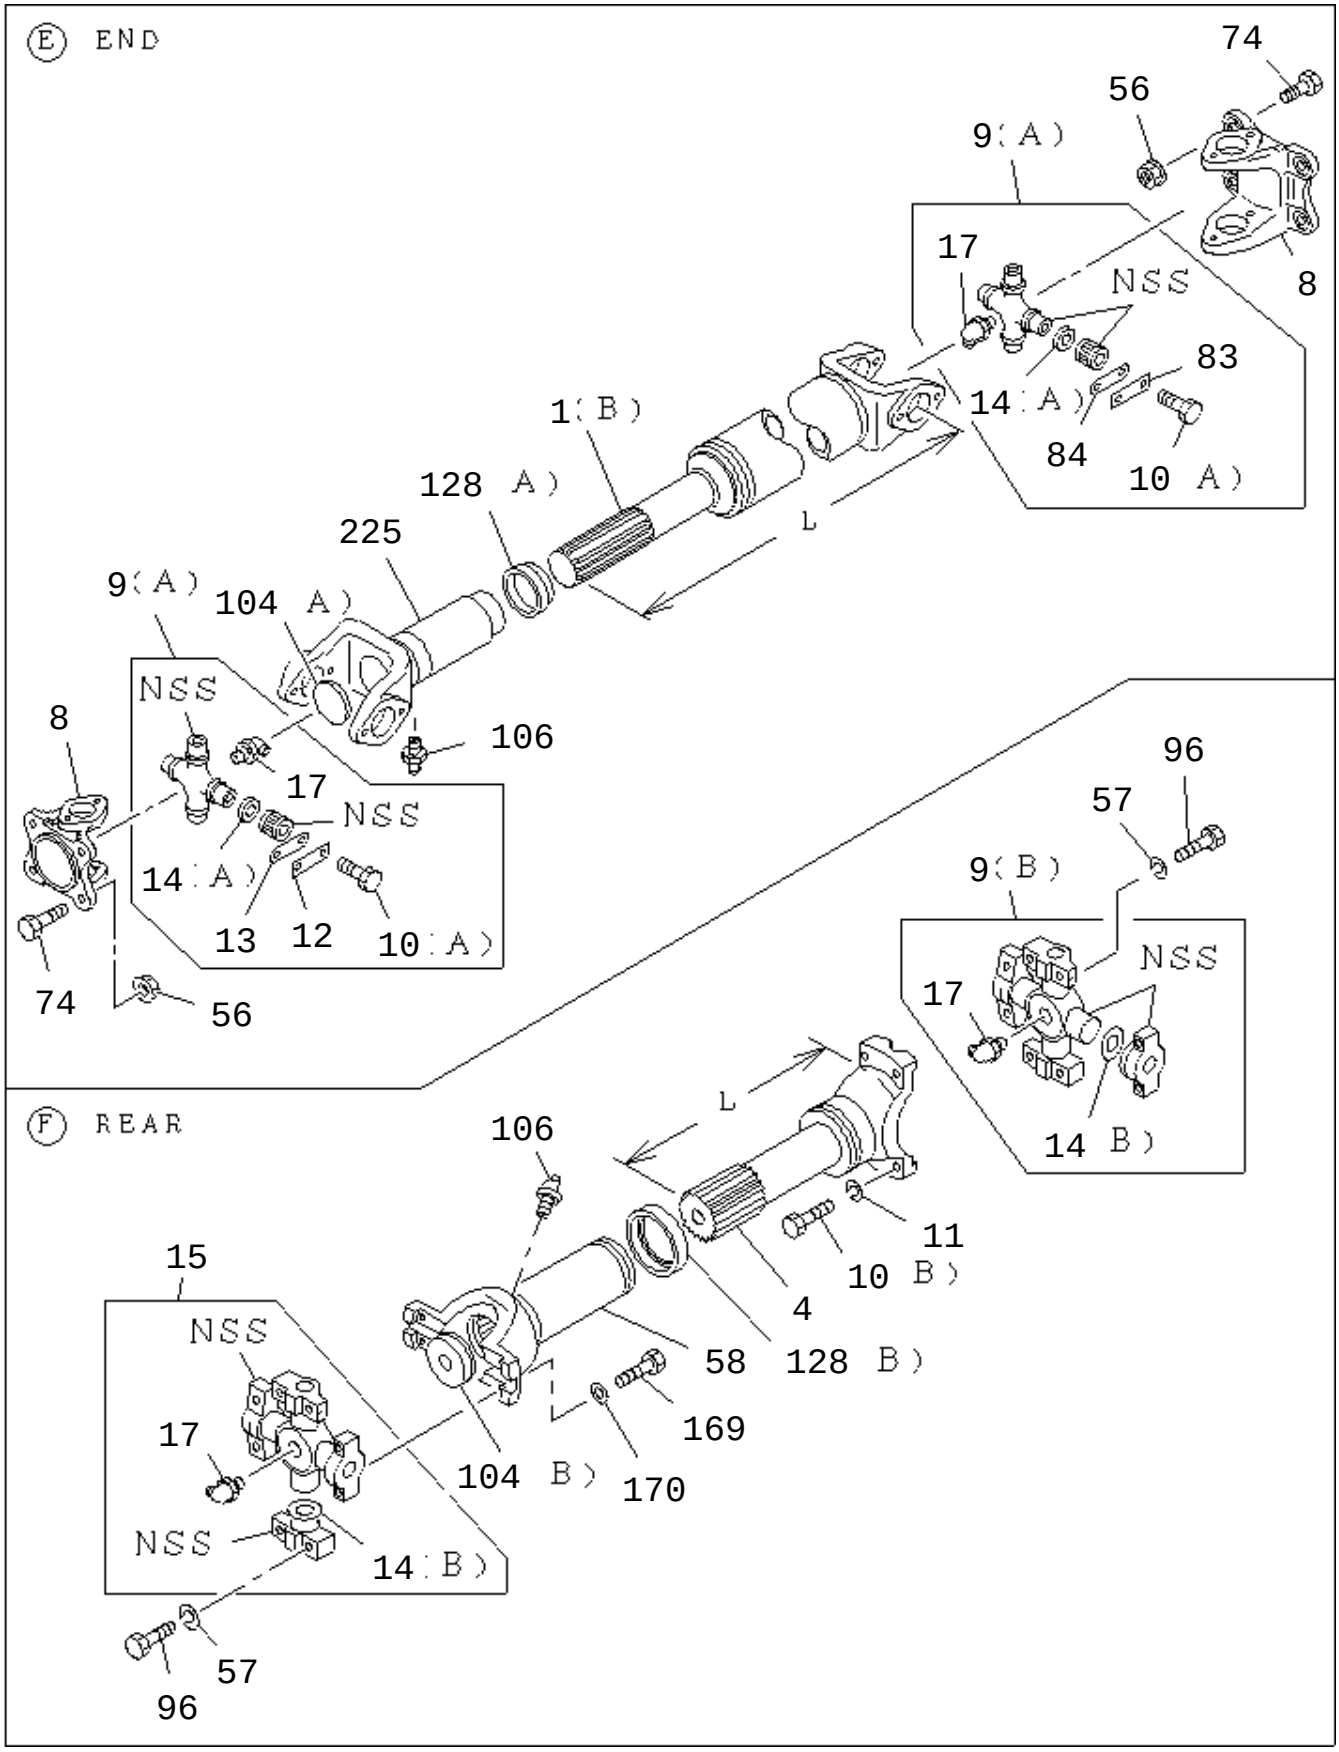

https://truckmanualshub.com/

4-01 PROPELLER SHAFT

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A WHEEL BASE 5300MM(53W) B WHEEL BASE 7100MM(71W) C WHEEL BASE 4700MM(47W)
1		SHAFT; PROP					
		1-37124-496-0		1402-	01	C	FVZ WIDE CAB(FG****) POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		1-37124-184-0		1404-	01	C	GVZ WIDE CAB(GG****) (A) L=927
		1-37124-132-0		1312-	01	A	FULLER ES11109 DD M/T(Y5N) (A) L=1482
		1-37124-233-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) (A) L=1407
		1-37124-182-0		1312-	01	B	(B) L=1172
		8-98239-156-0		1312-	01	B	(C) L=1002
		8-98239-158-0		1312-	01	B	(D) L=902
4		SHAFT; PROP					
		1-37171-127-2		1312-1401	01	AB	L=348
		1-37171-127-2		1402-	01	ABC	L=348
8		YOKE; FLANGE,PROP SHAFT					
		1-37211-066-1		1312-1401	02	A	
		1-37211-066-1		1402-	02	A C	
		1-37211-066-1		1312-	01	B	
		1-37211-066-1		1312-	03	B	
9	D	JOURNAL ASM; PROP SHAFT					
		1-37300-091-1		1312-1401	AR	AB	(A)
		1-37300-091-1		1312-1401	AR	B	(A)
		1-37300-091-1		1312-1401	AR	B	(A)
		1-37300-091-1		1402-	AR	ABC	(A)
		1-37300-091-1		1402-	AR	B	(A)
		1-37300-091-1		1402-	AR	B	(A)
		1-37300-100-1		1312-1401	01	AB	(B)
		1-37300-100-1		1402-	01	ABC	(B)
10		BOLT; UJT					
		0-20951-020-0		1312-1401	16	A	(A) M10X20
		0-20951-020-0		1402-	16	A C	(A) M10X20
		8-98036-382-0		1312-1401	04	AB	(B) M12X45
		8-98036-382-0		1402-	04	ABC	(B) M12X45
		0-20951-020-0		1312-	08	B	(A) M10X20
		0-20951-020-0		1312-	24	B	(A) M10X20
11		WASHER; LK,UNIVERSAL,PROP SHAFT					
		0-91510-612-0		1312-1401	04	AB	ID=12.2
		0-91510-612-0		1402-	04	ABC	ID=12.2

https://truckmanualshub.com/

4-01 PROPELLER SHAFT

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A WHEEL BASE 5300MM(53W) B WHEEL BASE 7100MM(71W) C WHEEL BASE 4700MM(47W)
12		PLATE; LK,FRT UJT,PROP SHAFT					
		1-37356-008-0		1312-1401	04	AB	
		1-37356-008-0		1402-	04	ABC	
		1-37356-008-0		1312-	08	B	
13		COVER; FRT UJT,PROP SHAFT					
		1-37355-020-0		1312-1401	04	AB	
		1-37355-020-0		1402-	04	ABC	
		1-37355-020-0		1312-	08	B	
14		COVER; DUST,SPIDER					
		1-37249-131-0		1312-1401	08	A	(A)
		1-37249-131-0		1402-	08	A C	(A)
		1-37319-004-0		1312-1401	08	AB	(B)
		1-37319-004-0		1402-	08	ABC	(B)
		1-37249-131-0		1312-	04	B	(A)
		1-37249-131-0		1312-	12	B	(A)
15		UNIVERSAL CENTER					
		1-37300-100-1		1312-1401	01	AB	
		1-37300-100-1		1402-	01	ABC	
17		NIPPLE; GREASE,PROP SHAFT					
		0-90301-510-0		1312-1401	02	AB	PT1/8 ELBOW 67.5 DEGREES
		0-90301-510-0		1312-1401	02	A	PT1/8 ELBOW 67.5 DEGREES
		0-90301-510-0		1402-	02	ABC	PT1/8 ELBOW 67.5 DEGREES
		0-90301-510-0		1402-	02	A C	PT1/8 ELBOW 67.5 DEGREES
		0-90301-510-0		1312-	01	B	PT1/8 ELBOW 67.5 DEGREES
		0-90301-510-0		1312-	03	B	PT1/8 ELBOW 67.5 DEGREES
20		BEARING ASM; CTR,PROP SHAFT					
		1-37510-094-3		1312-	01	B	
		1-37510-094-3		1312-	01	B	
		1-37510-094-3		1312-	01	B	
21		SEAL; OIL,CENTER BRG					
		1-09625-127-0		1312-	02	B	D=120
		1-09625-127-0		1312-	02	B	D=120
		1-09625-127-0		1312-	02	B	D=120
22		RUBBER; CUSHION,CENTER BRG,1ST					
		1-37516-048-2		1312-	01	B	
		1-37516-048-2		1312-	01	B	
		1-37516-048-2		1312-	01	B	
23		BEARING; CENTER,PROP SHAFT					
		9-00090-256-0		1312-	01	B	
		9-00090-256-0		1312-	01	B	
		9-00090-256-0		1312-	01	B	
24		RETAINER; CENTER BRG,1ST					
		1-37529-041-0		1312-	01	B	
		1-37529-041-0		1312-	01	B	
		1-37529-041-0		1312-	01	B	
25		NIPPLE; GREASE,CENTER BRG					
		1-09380-006-0		1312-	01	B	MT6 STRAIGHT IDN
		1-09380-006-0		1312-	01	B	MT6 STRAIGHT IDN
		1-09380-006-0		1312-	01	B	MT6 STRAIGHT IDN
46		FLANGE; SPLINED,PROP SHAFT,1ST					
		1-37245-271-1		1312-	01	B	
		1-37245-271-1		1312-	01	B	

https://truckmanualshub.com/

4-01 PROPELLER SHAFT


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A WHEEL BASE 5300MM(53W) B WHEEL BASE 7100MM(71W) C WHEEL BASE 4700MM(47W)
46		1-37245-271-1		1312-	01	B	
49		NUT; YOKE					
		1-09449-065-0		1312-	04	B	M16 FLANGE
51		NUT; FLANGE,SPLINED					
		1-09440-046-0		1312-	01	B	M39 FLANGE
		1-09440-046-0		1312-	01	B	M39 FLANGE
		1-09440-046-0		1312-	01	B	M39 FLANGE
56		NUT; YOKE					
		1-09449-065-0		1312-1401	04	AB	M16 FLANGE
		1-09449-065-0		1312-1401	04	AB	M16 FLANGE
		1-09449-065-0		1402-	04	ABC	M16 FLANGE
		1-09449-065-0		1402-	04	ABC	M16 FLANGE
57		WASHER; LK,YOKE					
		0-91510-612-0		1312-1401	08	AB	ID=12.2
		0-91510-612-0		1402-	08	ABC	ID=12.2
58		FLANGE; SPLINED					
		1-37245-317-0		1312-1401	01	AB	L=265
		1-37245-317-0		1402-	01	ABC	L=265
71		NUT; YOKE					
		1-09449-065-0		1312-	04	B	M16 FLANGE
74		BOLT; YOKE,TRANS					
		1-09000-383-0		1312-1401	04	AB	M16X48
		1-09000-383-0		1312-1401	04	AB	M16X48
		1-09000-383-0		1312-1401	04	A	FULLER ES11109 DD M/T(Y5N) M16X48
		1-09000-383-0		1312-1401	04	B	M16X48
		1-09000-383-0		1402-	04	ABC	M16X48
		1-09000-383-0		1402-	04	ABC	M16X48
		1-09000-383-0		1402-	04	A	FULLER ES11109 DD M/T(Y5N) M16X48
		1-09000-383-0		1402-	04	B	M16X48
78		BOLT; HOLDER SET,CENTER BRG,1ST PROP					
		1-09042-030-0		1312-	02	B	M16X45
79		WASHER; PL,HOLDER SET,CENTER BRG					
		1-09503-241-1		1312-	02	B	ID=17
80		NUT; HOLDER SET,CENTER BRG,1ST PROP					
		8-98049-689-0		1312-	02	B	M16 SLOTTED
81		PIN; SPLIT,HOLDER SET,CENTER BRG					
		0-81124-025-0		1312-	02	B	OD=3.7 L=25
83		PLATE; LK,UJT,PROP SHAFT					
		1-37356-008-0		1312-1401	04	AB	
		1-37356-008-0		1402-	04	ABC	
84		COVER; UJT,PROP SHAFT					
		1-37355-020-0		1312-1401	04	AB	
		1-37355-020-0		1402-	04	ABC	
91		BOLT; HOLDER SET,CTR BRG					
		1-09042-030-0		1312-	02	B	M16X45
92		WASHER; LK,HOLDER SET,CTR BRG					

https://truckmanualshub.com/

4-01 PROPELLER SHAFT

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A WHEEL BASE 5300MM(53W) B WHEEL BASE 7100MM(71W) C WHEEL BASE 4700MM(47W)
92		1-09503-241-1		1312-	02	B	ID=17
93		NUT; HOLDER SET,CTR BRG 8-98049-689-0		1312-	02	B	M16 SLOTTED
94		PIN; SPLIT,HOLDER SET CTR BRG 0-81124-025-0		1312-	02	B	OD=3.7 L=25
96		BOLT; PROP SHAFT 8-98036-382-0		1312-1401	08	AB	M12X45
		8-98036-382-0		1402-	08	ABC	M12X45
104		PLUG; SLEEVE YOKE 1-09600-049-0		1312-1401	01	AB	(B)
		1-09600-049-0		1402-	01	ABC	(B)
		1-09600-067-0		1312-1401	01	AB	(A)
		1-09600-067-0		1402-	01	ABC	(A)
106		NIPPLE; GREASE,YOKE,PROP SHAFT 0-90301-410-0		1312-1401	01	AB	PT1/8 STRAIGHT
		0-90301-410-0		1312-1401	01	AB	PT1/8 STRAIGHT
		0-90301-410-0		1402-	01	ABC	PT1/8 STRAIGHT
		0-90301-410-0		1402-	01	ABC	PT1/8 STRAIGHT
128		SEAL; SLEEVE 1-37247-019-0		1312-1401	01	AB	(A)
		1-37247-019-0		1402-	01	ABC	(A)
		8-97603-618-0		1312-1401	01	AB	(B)
		8-97603-618-0		1402-	01	ABC	(B)
169		BOLT; YOKE,SLEEVE 8-98036-382-0		1312-1401	04	AB	M12X45
		8-98036-382-0		1402-	04	ABC	M12X45
170		WASHER; LK,YOKE,SLEEVE 0-91510-612-0		1312-1401	04	AB	ID=12.2
		0-91510-612-0		1402-	04	ABC	ID=12.2
225		YOKE; SLEEVE,PROP SHAFT 1-37241-103-1		1312-1401	01	AB	L=332
		1-37241-103-1		1402-	01	ABC	L=332
5-01		Move to 5-01					

https://truckmanualshub.com/

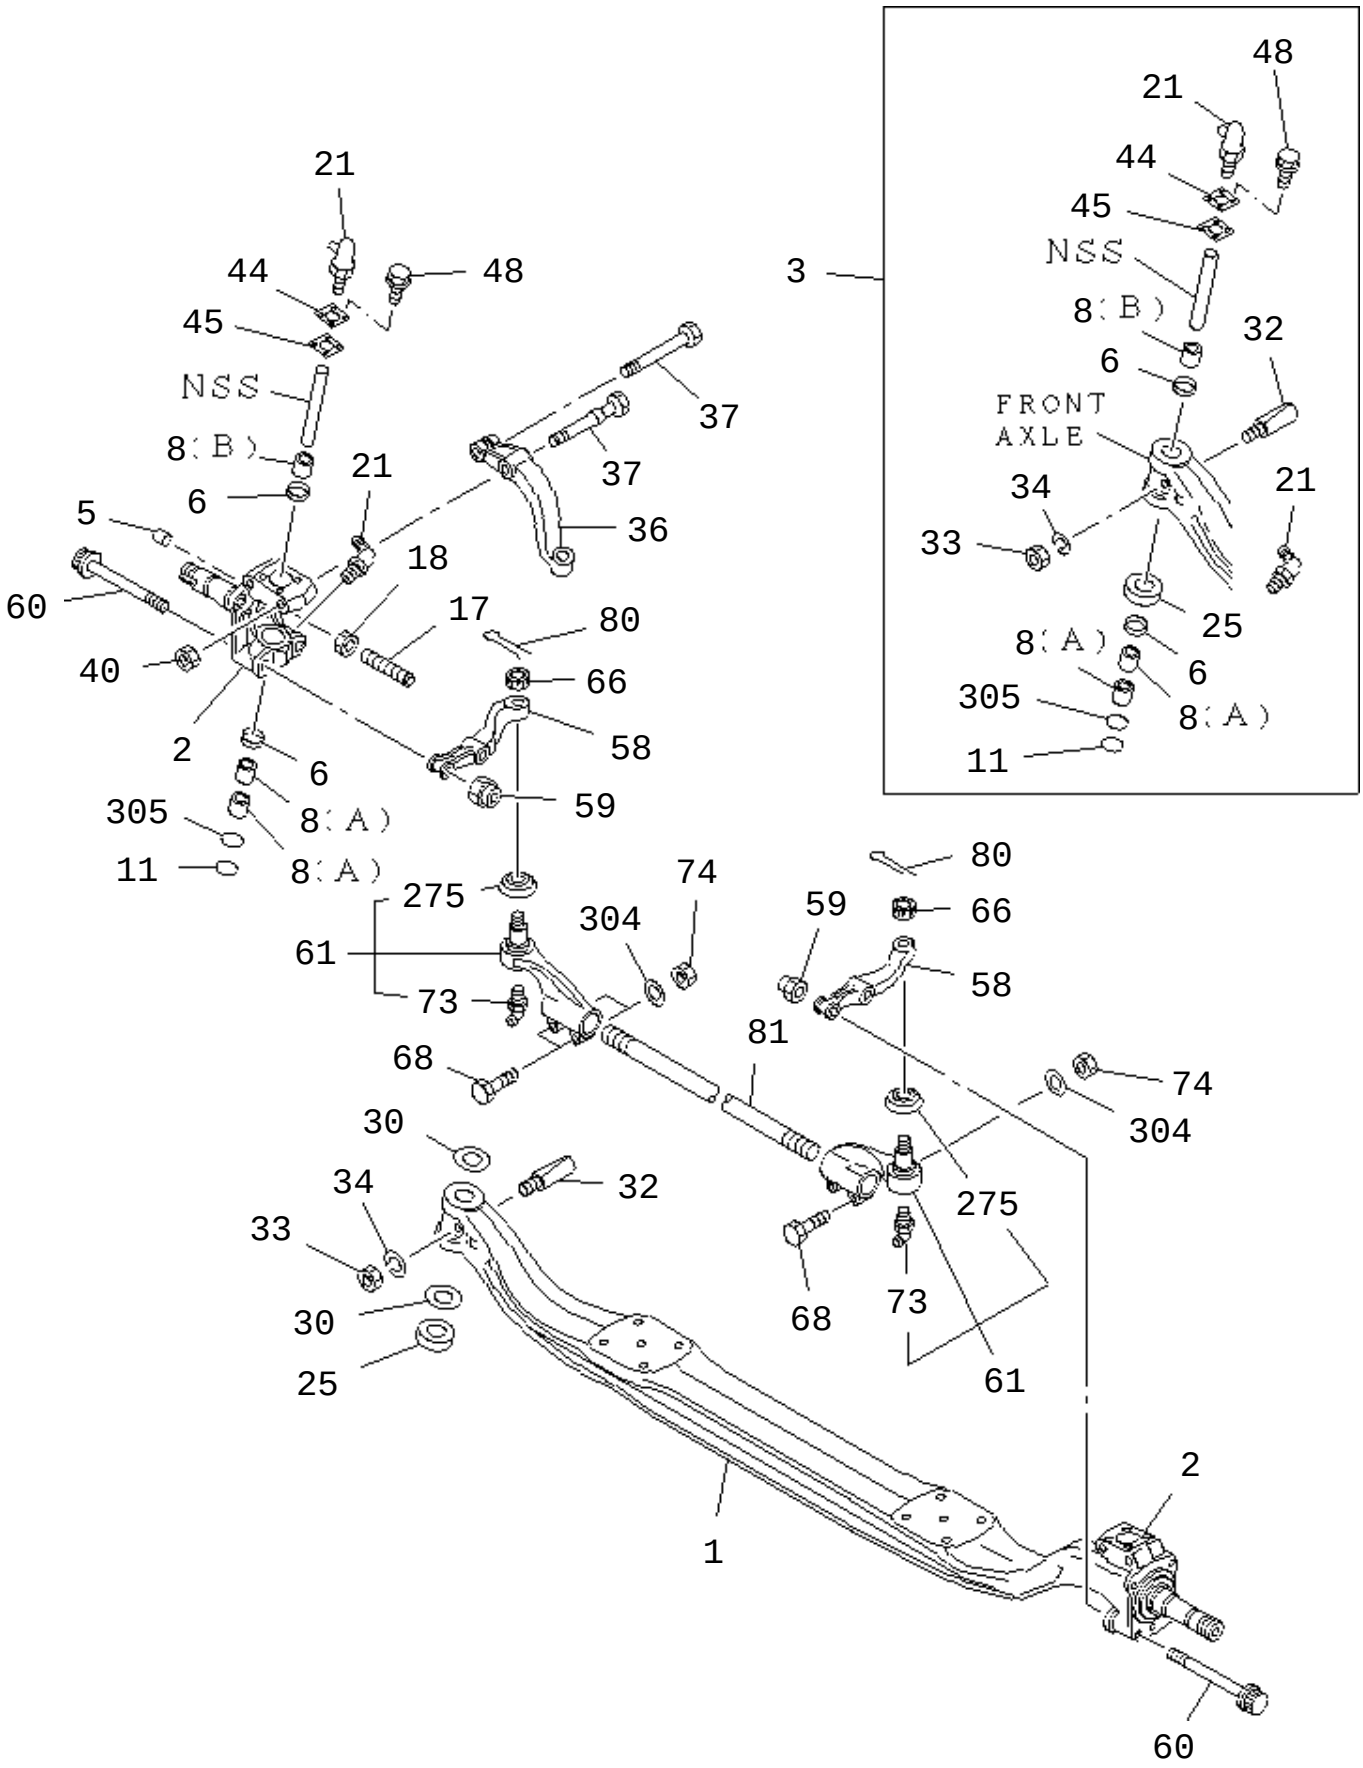

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		AXLE; FRT						
		1-43111-113-6		1312-1403		01	A	
		1-43111-113-6		1404-		01	AB	
2		KNUCKLE; FRT AXLE						
		1-43131-079-1		1312-1403	R	01	A	
		1-43131-079-1		1404-	R	01	AB	
		1-43132-079-1		1312-1403	L	01	A	
		1-43132-079-1		1404-	L	01	AB	
3	B	KING PIN SET						
		1-87831-302-2		1312-1403		02	A	
		1-87831-302-2		1404-		02	AB	
5		PIN; KNUCKLE TO DRUM COVER						
		1-09740-072-0		1312-1403		02	A	
		1-09740-072-0		1404-		02	AB	
6		SEAL; KING PIN						
		9-09926-024-0		1312-1403		04	A	
		9-09926-024-0		1404-		04	AB	
8		BEARING; NEEDLE,KING PIN						
		9-00096-242-0		1312-1403		04	A	(A) NTN
		9-00096-242-0		1404-		04	AB	(A) NTN
		9-00096-243-0		1312-1403		02	A	(B) NTN
		9-00096-243-0		1404-		02	AB	(B) NTN
11		RING; SNAP,KNUCKLE PLUG						
		9-09950-204-0		1312-1403		02	A	
		9-09950-204-0		1404-		02	AB	
17		BOLT; STOPPER KNUCKLE						
		1-09009-190-0		1312-1403		02	A	M18X43
		1-09009-190-0		1404-		02	AB	M18X43
18		NUT; STOPPER BOLT,KNUCKLE						
		0-91110-518-0		1312-1403		02	A	M18
		0-91110-518-0		1404-		02	AB	M18
21		NIPPLE; GREASE,KING PIN						
		0-90301-510-0		1312-1403		04	A	PT1/8 ELBOW 67.5 DEGREES
		0-90301-510-0		1404-		04	AB	PT1/8 ELBOW 67.5 DEGREES
25		BEARING; THRUST,KING PIN						
		1-09829-043-2		1312-1403		02	A	NSK
		1-09829-043-2		1404-		02	AB	NSK
30		WASHER; THRUST,KING PIN						
		1-43171-185-0		1312-1403		AR	A	T=4.875 -4.900
		1-43171-185-0		1404-		AR	AB	T=4.875 -4.900
		1-43171-186-0		1312-1403		AR	A	T=4.900 -4.925
		1-43171-186-0		1404-		AR	AB	T=4.900 -4.925
		1-43171-187-0		1312-1403		AR	A	T=4.925 -4.950
		1-43171-187-0		1404-		AR	AB	T=4.925 -4.950
		1-43171-188-0		1312-1403		AR	A	T=4.950 -4.975
		1-43171-188-0		1404-		AR	AB	T=4.950 -4.975
		1-43171-189-0		1312-1403		AR	A	T=4.975 -5.000
		1-43171-189-0		1404-		AR	AB	T=4.975 -5.000


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
30		1-43171-190-0		1312-1403		AR	A	T=5.000 -5.025
		1-43171-190-0		1404-		AR	AB	T=5.000 -5.025
		1-43171-191-0		1312-1403		AR	A	T=5.025 -5.050
		1-43171-191-0		1404-		AR	AB	T=5.025 -5.050
		1-43171-192-0		1312-1403		AR	A	T=5.050 -5.075
		1-43171-192-0		1404-		AR	AB	T=5.050 -5.075
		1-43171-193-0		1312-1403		AR	A	T=5.075 -5.100
		1-43171-193-0		1404-		AR	AB	T=5.075 -5.100
		1-43171-194-0		1312-1403		AR	A	T=5.100 -5.125
		1-43171-194-0		1404-		AR	AB	T=5.100 -5.125
		1-43171-195-0		1312-1403		AR	A	T=5.125 -5.150
		1-43171-195-0		1404-		AR	AB	T=5.125 -5.150
		1-43171-196-0		1312-1403		AR	A	T=5.150 -5.175
		1-43171-196-0		1404-		AR	AB	T=5.150 -5.175
		1-43171-197-0		1312-1403		AR	A	T=5.175 -5.200
		1-43171-197-0		1404-		AR	AB	T=5.175 -5.200
		1-43171-198-0		1312-1403		AR	A	T=5.200 -5.225
		1-43171-198-0		1404-		AR	AB	T=5.200 -5.225
		1-43171-199-0		1312-1403		AR	A	T=5.225 -5.250
		1-43171-199-0		1404-		AR	AB	T=5.225 -5.250
32		BOLT; KEY,KING PIN						
		1-43116-002-1		1312-1403		02	A	
		1-43116-002-1		1404-		02	AB	
33		NUT; KEY BOLT						
		0-91110-510-0		1312-1403		02	A	M10
		0-91110-510-0		1404-		02	AB	M10
34		WASHER; LK,KEY BOLT						
		0-91510-510-0		1312-1403		02	A	ID=10.2
		0-91510-510-0		1404-		02	AB	ID=10.2
36		ARM; KNUCKLE						
		1-43133-063-3		1312-1403		01	A	
		1-43133-063-3		1404-		01	AB	
37		BOLT; KNUCKLE ARM						
		8-98052-380-1		1312-1403		01	A	M22X179
		8-98052-380-1		1404-		01	AB	M22X179
		8-98052-381-1		1312-1403		01	A	M22X167
		8-98052-381-1		1404-		01	AB	M22X167
40		NUT; KNUCKLE ARM						
		1-09449-084-0		1312-1403		02	A	M22
		1-09449-084-0		1404-		02	AB	M22
44		COVER; KING PIN						
		1-43175-014-1		1312-1403		02	A	
		1-43175-014-1		1404-		02	AB	
45		GASKET; KING PIN COVER						

https://truckmanualshub.com/

KEY	R/C	PART NAME / PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS
								A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
45		1-42319-044-0		1312-1403		02	A	
		1-42319-044-0		1404-		02	AB	
48		BOLT; COVER						
		0-28051-216-0		1312-1403		08	A	
								M12X16 FLANGE
		0-28051-216-0		1404-		08	AB	
								M12X16 FLANGE
58		ARM; TIE ROD						
		1-43134-042-3		1312-1403	R	01	A	
		1-43134-042-3		1404-	R	01	AB	
		1-43135-042-3		1312-1403	L	01	A	
		1-43135-042-3		1404-	L	01	AB	
59		NUT; TIE ROD ARM						
		1-09449-084-0		1312-1403		04	A	
								M22
		1-09449-084-0		1404-		04	AB	
								M22
60		BOLT; TIE ROD ARM						
		8-98052-379-1		1312-1403		04	A	
								M22X193
		8-98052-379-1		1404-		04	AB	
								M22X193
61	B	ROD END; TIE ROD						
		8-98236-800-0		1312-1403	R	01	A	
		8-98236-800-0		1404-	R	01	AB	
		8-98236-801-0		1312-1403	L	01	A	
		8-98236-801-0		1404-	L	01	AB	
66		NUT; TIE ROD END						
		1-09442-032-0		1312-1403		02	A	
								M24
		1-09442-032-0		1404-		02	AB	
								M24
68		BOLT; TIE ROD END						
		8-98053-922-0		1312-1403		04	A	
								M12X65
		8-98053-922-0		1404-		04	AB	
								M12X65
73		NIPPLE; GREASE,TIE ROD END						
		1-43159-133-0		1312-1403		02	A	
		1-43159-133-0		1404-		02	AB	
74		NUT; TIE ROD END						
		0-91110-512-0		1312-1403		04	A	
								M12
		0-91110-512-0		1404-		04	AB	
								M12
80		PIN; SPLIT,ROD END						
		0-81125-035-0		1312-1403		02	A	
								OD=4.6 L=35
		0-81125-035-0		1404-		02	AB	
								OD=4.6 L=35
81		ROD; TIE						
		8-98193-965-0		1312-1403		01	A	
		8-98193-965-0		1404-		01	AB	
275		BOOT; ROD END,TIE						
		8-98229-116-0		1312-1403		02	A	
		8-98229-116-0		1404-		02	AB	
304		WASHER; PL						
		0-91614-512-0		1312-1403		04	A	
								ID=12.5
		0-91614-512-0		1404-		04	AB	
								ID=12.5
305		COVER; KNUCKLE						
		8-98052-291-0		1312-1403		02	A	
		8-98052-291-0		1404-		02	AB	

https://truckmanualshub.com/

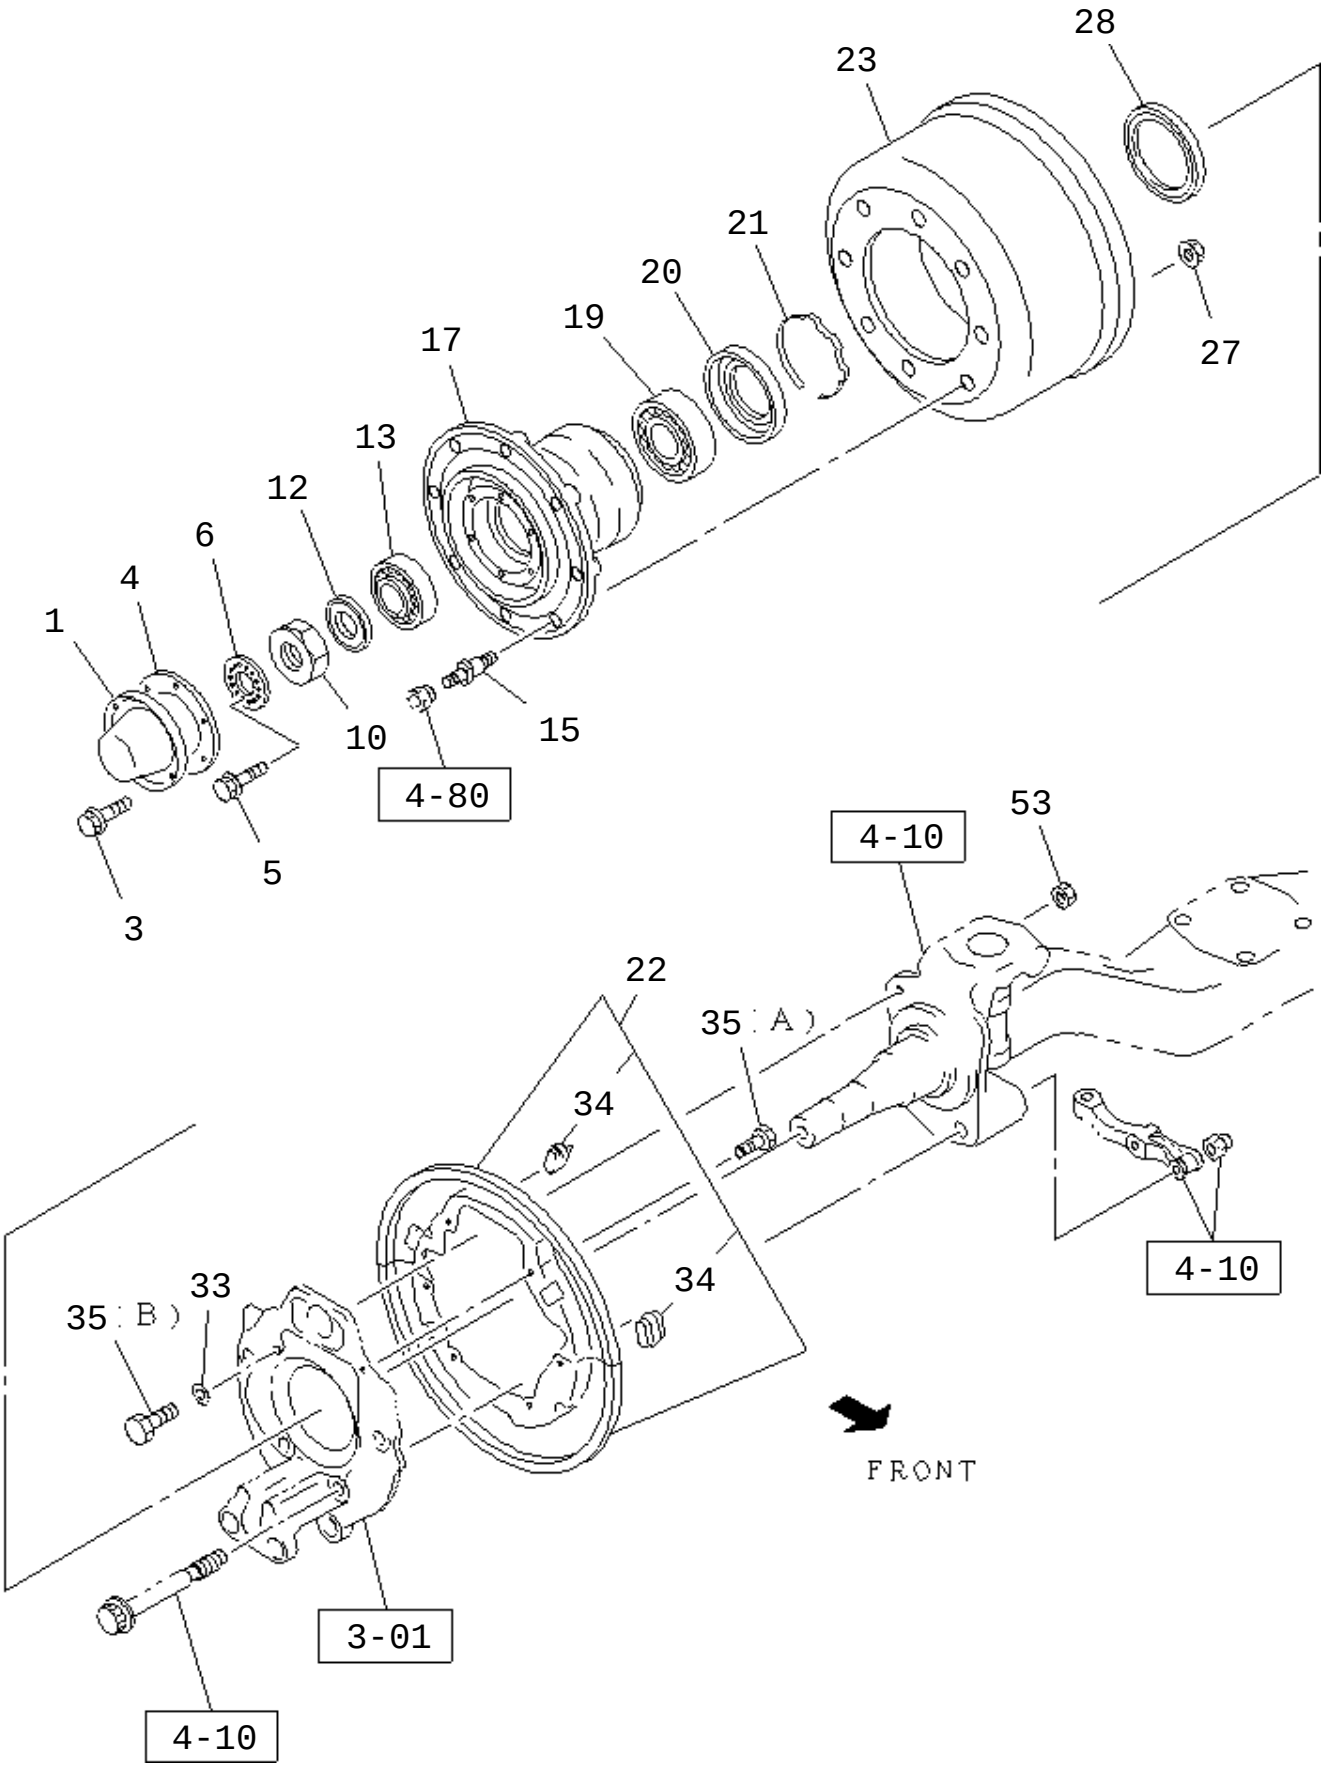

https://truckmanualshub.com/

4-11 FRONT HUB AND DRUM OR ROTOR


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		CAP; HUB,FRT AXLE						
		9-42313-123-2		1312-1403		02	A	
								OD=156
		9-42313-123-2		1404-		02	AB	
								OD=156
3		BOLT; HUB CAP,FRT WHEEL						
		0-28050-812-0		1312-1403		12	A	
								M8X12 FLANGE
		0-28050-812-0		1404-		12	AB	
								M8X12 FLANGE
4	B	GASKET; HUB CAP,FRT WHEEL						
		1-42319-185-2		1312-1403		02	A	
		1-42319-185-2		1404-		02	AB	
5		BOLT; LK WASHER						
		8-98200-943-0		1312-1403		04	A	
								M6X16 FLANGE
		8-98200-943-0		1404-		04	AB	
								M6X16 FLANGE
6	B	WASHER; LK,FRT HUB						
		8-98084-561-0		1312-1403		02	A	
								ID=48
		8-98084-561-0		1404-		02	AB	
								ID=48
10	B	NUT; FRT HUB BRG						
		1-09840-012-5		1312-1403		02	A	
								M48
		1-09840-012-5		1404-		02	AB	
								M48
12	B	WASHER; LK,FRT HUB BRG						
		8-98156-755-0		1312-1403		02	A	
								ID=48
		8-98156-755-0		1404-		02	AB	
								ID=48
13	B	BEARING; HUB OUTER,FRT AXLE						
		1-09812-234-0		1312-1403		02	A	
								KOYO
		1-09812-234-0		1404-		02	AB	
								KOYO
15	B	PIN; WHEEL,FRT AXLE						
		1-42331-109-1		1312-1403	R	08	A	
								M24X37.5,M22X57.5 RH THREAD
		1-42331-109-1		1404-	R	08	AB	
								M24X37.5,M22X57.5 RH THREAD
		1-42332-109-1		1312-1403	L	08	A	
								M24X37.5 LH THREAD,M22X57.5 RH THREAD
		1-42332-109-1		1404-	L	08	AB	
								M24X37.5 LH THREAD,M22X57.5 RH THREAD
17		HUB; FRT AXLE						
		1-42312-128-2		1312-1403		02	A	
		1-42312-128-2		1404-		02	AB	
19	B	BEARING; HUB INNER,FRT AXLE						
		1-09812-231-0		1312-1403		02	A	
								KOYO
		1-09812-231-0		1404-		02	AB	
								KOYO
20		COVER; HUB BRG INNER						
		1-42319-039-0		1312-1403		02	A	
		1-42319-039-0		1404-		02	AB	
21		RING; SNAP,HUB						
		1-09587-017-0		1312-1403		02	A	
		1-09587-017-0		1404-		02	AB	
22		COVER SET; FRT BRK DRUM						
		1-47151-458-1		1312-1403		02	A	
		1-47151-458-1		1404-		02	AB	
23		DRUM; BRK,FRT						
		1-42315-355-0		1312-1403		02	A	
		1-42315-355-0		1404-		02	AB	
27	B	NUT; WHEEL PIN,FRT AXLE						
		1-09440-065-0		1312-1403		16	A	
								M22 FLANGE
		1-09440-065-0		1404-		16	AB	
								M22 FLANGE
28	B	SEAL; OIL,FRT HUB						

https://truckmanualshub.com/

FRONT HUB AND DRUM OR ROTOR

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
28		1-09625-041-0		1312-1403		02	A	OD=140
		1-09625-041-0		1404-		02	AB	OD=140
33		WASHER; LK,DRUM COVER						
		0-91510-816-0		1312-1403		04	A	ID=16.2
		0-91510-816-0		1404-		04	AB	ID=16.2
34		COVER; CHECK HOLE,DRUM COVER						
		1-09333-151-0		1312-1403		04	A	
		1-09333-151-0		1404-		04	AB	
35		BOLT; DRUM COVER						
		0-50541-016-0		1312-1403		12	A	(A) M10X16 W/LK WASHER
		0-50541-016-0		1404-		12	AB	(A) M10X16 W/LK WASHER
		1-09044-120-0		1312-1403		04	A	(B) M16X52
		1-09044-120-0		1404-		04	AB	(B) M16X52
53		NUT; DRUM COVER						
		0-91110-516-0		1312-1403		04	A	M16
		0-91110-516-0		1404-		04	AB	M16
3-01		Move to 3-01						
4-10		Move to 4-10						
4-80		Move to 4-80						

https://truckmanualshub.com/

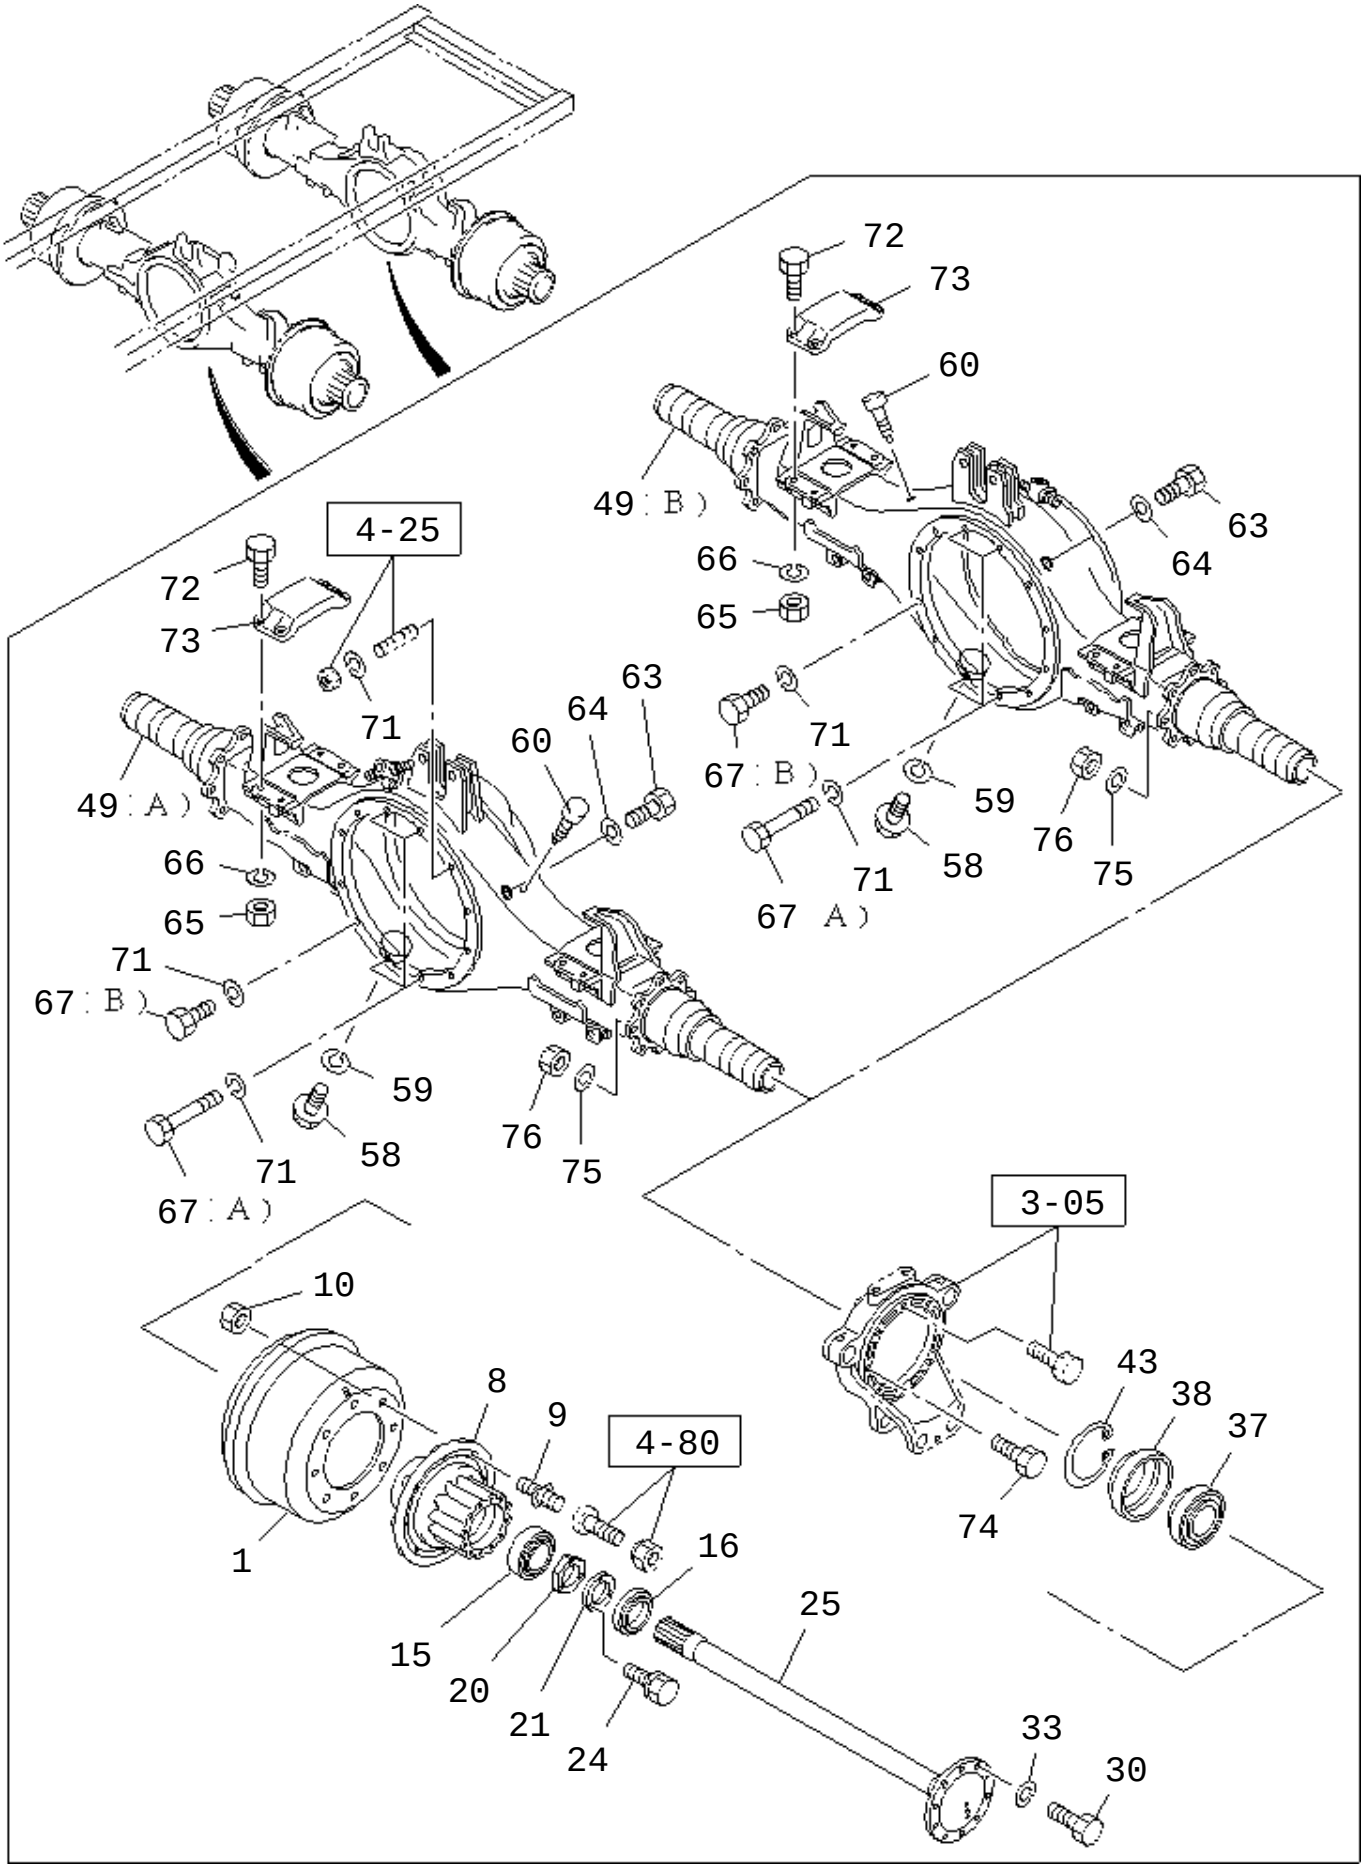

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		DRUM; BRK,RR						
		1-42315-314-2		1312-1403		02	A	
		1-42315-314-2		1312-1403		02	A	
		1-42315-314-2		1404-		02	AB	
		1-42315-314-2		1404-		02	AB	
8		HUB; RR AXLE						
		1-42311-104-0		1312-1403		02	A	
		1-42311-104-0		1312-1403		02	A	
		1-42311-104-0		1404-		02	AB	
		1-42311-104-0		1404-		02	AB	
9	B	PIN; WHEEL,RR AXLE						
		1-42331-110-2		1312-1403	R	08	A	M20X34.5,M22X51.5 RH THREAD
		1-42331-110-2		1312-1403	R	08	A	M20X34.5,M22X51.5 RH THREAD
		1-42331-110-2		1404-	R	08	AB	M20X34.5,M22X51.5 RH THREAD
		1-42331-110-2		1404-	R	08	AB	M20X34.5,M22X51.5 RH THREAD
		1-42332-110-2		1312-1403	L	08	A	M20X34.5 LH THREAD,M22X51.5 RH THRE
		1-42332-110-2		1312-1403	L	08	A	M20X34.5 LH THREAD,M22X51.5 RH THRE
		1-42332-110-2		1404-	L	08	AB	M20X34.5 LH THREAD,M22X51.5 RH THRE
		1-42332-110-2		1404-	L	08	AB	M20X34.5 LH THREAD,M22X51.5 RH THRE
10	B	NUT; WHEEL PIN,RR AXLE						
		1-09440-065-0		1312-1403		16	A	M22 FLANGE
		1-09440-065-0		1312-1403		16	A	M22 FLANGE
		1-09440-065-0		1404-		16	AB	M22 FLANGE
		1-09440-065-0		1404-		16	AB	M22 FLANGE
15	B	BEARING; HUB OUTER,RR AXLE						
		1-09812-232-0		1312-1403		02	A	KOYO
		1-09812-232-0		1312-1403		02	A	KOYO
		1-09812-232-0		1404-		02	AB	KOYO
		1-09812-232-0		1404-		02	AB	KOYO
		1-09812-256-0		1312-1403		02	A	SKF
		1-09812-256-0		1312-1403		02	A	SKF
		1-09812-256-0		1404-		02	AB	SKF
		1-09812-256-0		1404-		02	AB	SKF
16	B	SEAL; OIL,RR HUB,OUTER						
		1-09625-444-0		1312-1403		02	A	TKK
		1-09625-444-0		1312-1403		02	A	TKK
		1-09625-444-0		1404-		02	AB	TKK
		1-09625-444-0		1404-		02	AB	TKK
20	B	NUT; BRG,RR HUB						
		9-09843-062-2		1312-1403		02	A	M88
		9-09843-062-2		1312-1403		02	A	M88
		9-09843-062-2		1404-		02	AB	M88
		9-09843-062-2		1404-		02	AB	M88
21	B	WASHER; LK,BRG NUT						
		9-09854-112-0		1312-1403		02	A	ID=88

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
21		9-09854-112-0		1312-1403		02	A	ID=88
		9-09854-112-0		1404-		02	AB	ID=88
		9-09854-112-0		1404-		02	AB	ID=88
24		BOLT; LK WASHER						
		0-28650-616-0		1312-1403		06	A	M6X16 FLANGE
		0-28650-616-0		1312-1403		06	A	M6X16 FLANGE
		0-28650-616-0		1404-		06	AB	M6X16 FLANGE
		0-28650-616-0		1404-		06	AB	M6X16 FLANGE
25		SHAFT; AXLE,RR						
		8-98185-997-0		1312-1403		01	A	FORWARD RH,REARWARD LH L=990
		8-98185-997-0		1312-1403		01	A	FORWARD RH,REARWARD LH L=990
		8-98185-997-0		1404-		01	AB	FORWARD RH,REARWARD LH L=990
		8-98185-997-0		1404-		01	AB	FORWARD RH,REARWARD LH L=990
		8-98185-998-0		1312-1403		01	A	FORWARD RH,REARWARD LH L=1110
		8-98185-998-0		1312-1403		01	A	FORWARD RH,REARWARD LH L=1110
		8-98185-998-0		1404-		01	AB	FORWARD RH,REARWARD LH L=1110
		8-98185-998-0		1404-		01	AB	FORWARD RH,REARWARD LH L=1110
30		BOLT; HUB TO AXLE SHAFT						
		1-09000-582-0		1312-1403		20	A	M14X58
		1-09000-582-0		1312-1403		20	A	M14X58
		1-09000-582-0		1404-		20	AB	M14X58
		1-09000-582-0		1404-		20	AB	M14X58
33		WASHER; AXLE SHAFT						
		0-91510-814-0		1312-1403		20	A	ID=14.2
		0-91510-814-0		1312-1403		20	A	ID=14.2
		0-91510-814-0		1404-		20	AB	ID=14.2
		0-91510-814-0		1404-		20	AB	ID=14.2
37	B	BEARING; HUB INNER,RR AXLE						
		1-09812-233-0		1312-1403		02	A	KOYO
		1-09812-233-0		1312-1403		02	A	KOYO
		1-09812-233-0		1404-		02	AB	KOYO
		1-09812-233-0		1404-		02	AB	KOYO
		1-09812-257-0		1312-1403		02	A	SKF
		1-09812-257-0		1312-1403		02	A	SKF
		1-09812-257-0		1404-		02	AB	SKF

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
37		1-09812-257-0		1404-		02	AB	SKF
38	B	SEAL; OIL,RR HUB,INNER						
		1-09625-265-0		1312-1403		02	A	NOK
		1-09625-265-0		1312-1403		02	A	NOK
		1-09625-265-0		1404-		02	AB	NOK
		1-09625-265-0		1404-		02	AB	NOK
		1-09625-350-0		1312-1403		02	A	TKK
		1-09625-350-0		1312-1403		02	A	TKK
		1-09625-350-0		1404-		02	AB	TKK
		1-09625-350-0		1404-		02	AB	TKK
43		RING; SNAP,HUB SEAL,RR AXLE						
		1-09587-057-0		1312-1403		02	A	OD=179
		1-09587-057-0		1312-1403		02	A	OD=179
		1-09587-057-0		1404-		02	AB	OD=179
		1-09587-057-0		1404-		02	AB	OD=179
49		CASE; RR AXLE						
		8-98260-439-0		1402-1403		01	A	HEAVY DUTY PACKAGE TRUCK VAR3<Y48> (B)
		8-98260-439-0		1404-		01	AB	HEAVY DUTY PACKAGE TRUCK VAR3<Y48> (B)
		8-98203-042-0		1312-1312		01	A	HEAVY DUTY PACKAGE TRUCK VAR3<Y48> (A)
		8-98203-043-0		1312-1312		01	A	HEAVY DUTY PACKAGE TRUCK VAR3<Y48> (B)
		8-98210-823-0		1312-1312		01	A	EXC. HEAVY DUTY PACKAGE TRUCK VAR3< (A)
		8-98210-823-0		1312-1403		01	A	(A)
		8-98210-823-0		1404-		01	AB	(A)
		8-98210-825-0		1312-1403		01	A	EXC. HEAVY DUTY PACKAGE TRUCK VAR3< (B)
		8-98210-825-0		1404-		01	AB	EXC. HEAVY DUTY PACKAGE TRUCK VAR3< (B)
58		PLUG; DRAIN,AXLE CASE						
		1-09604-023-0		1312-1403		01	A	M24X17 FLANGE
		1-09604-023-0		1312-1403		01	A	M24X17 FLANGE
		1-09604-023-0		1404-		01	AB	M24X17 FLANGE
		1-09604-023-0		1404-		01	AB	M24X17 FLANGE
59		GASKET; DRAIN PLUG						
		9-09920-605-0		1312-1403		01	A	ID=26.8
		9-09920-605-0		1312-1403		01	A	ID=26.8
		9-09920-605-0		1404-		01	AB	ID=26.8
		9-09920-605-0		1404-		01	AB	ID=26.8
60		BREATHER; RR AXLE CASE						
		1-09893-003-0		1312-1403		02	A	
		1-09893-003-0		1404-		02	AB	
63		PLUG; OIL FILLER,AXLE CASE						
		1-09604-022-0		1312-1403		01	A	M24X17 FLANGE
		1-09604-022-0		1312-1403		01	A	M24X17 FLANGE


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
63		1-09604-022-0		1404-		01	AB	M24X17 FLANGE
		1-09604-022-0		1404-		01	AB	M24X17 FLANGE
64		GASKET; OIL FILLER,AXLE CASE						
		9-09920-605-0		1312-1403		01	A	ID=26.8
		9-09920-605-0		1312-1403		01	A	ID=26.8
		9-09920-605-0		1404-		01	AB	ID=26.8
		9-09920-605-0		1404-		01	AB	ID=26.8
65		NUT						
		0-91110-514-0		1312-1403		08	A	M14
		0-91110-514-0		1312-1403		08	A	M14
		0-91110-514-0		1404-		08	AB	M14
		0-91110-514-0		1404-		08	AB	M14
66		WASHER; LK						
		0-91510-814-0		1312-1403		08	A	ID=14.2
		0-91510-814-0		1312-1403		08	A	ID=14.2
		0-91510-814-0		1404-		08	AB	ID=14.2
		0-91510-814-0		1404-		08	AB	ID=14.2
67		BOLT; FINAL DRIVE SETTING						
		0-10956-670-0		1312-1403		04	A	(A) M16X70
		0-10956-670-0		1312-1403		04	A	(A) M16X70
		0-10956-670-0		1404-		04	AB	(A) M16X70
		0-10956-670-0		1404-		04	AB	(A) M16X70
		0-20951-640-0		1312-1403		07	A	(B) FORWARD M16X40
		0-20951-640-0		1404-		07	AB	(B) FORWARD M16X40
		0-20951-640-0		1312-1312		08	A	(B) REARWARD M16X40
		0-20951-640-0		1402-1403		08	A	(B) REARWARD M16X40
		0-20951-640-0		1404-		08	AB	(B) REARWARD M16X40
71		WASHER; LK,FINAL DRIVE SETTING						
		0-91510-816-0		1312-1403		12	A	ID=16.2
		0-91510-816-0		1312-1403		12	A	ID=16.2
		0-91510-816-0		1404-		12	AB	ID=16.2
		0-91510-816-0		1404-		12	AB	ID=16.2
72		BOLT; PAD FIX						
		0-20951-440-0		1312-1403		08	A	M14X40
		0-20951-440-0		1312-1403		08	A	M14X40


https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
72		0-20951-440-0		1404-		08	AB	M14X40
		0-20951-440-0		1404-		08	AB	M14X40
73		PAD; RR SPR CONTACT						
		1-42124-101-0		1312-1403		02	A	
		1-42124-101-0		1312-1403		02	A	
		1-42124-101-0		1404-		02	AB	
		1-42124-101-0		1404-		02	AB	
74		BOLT; RR BRK ASM SETTING						
		1-09040-066-0		1312-1403		14	A	M14X50
		1-09040-066-0		1312-1403		14	A	M14X50
		1-09040-066-0		1404-		14	AB	M14X50
		1-09040-066-0		1404-		14	AB	M14X50
75		WASHER; LK,RR BRK ASM SETTING						
		0-91510-814-0		1312-1403		16	A	ID=14.2
		0-91510-814-0		1312-1403		16	A	ID=14.2
		0-91510-814-0		1404-		16	AB	ID=14.2
		0-91510-814-0		1404-		16	AB	ID=14.2
76		NUT; RR BRK ASM SETTING						
		0-91110-514-0		1312-1403		16	A	M14
		0-91110-514-0		1312-1403		16	A	M14
		0-91110-514-0		1404-		16	AB	M14
		0-91110-514-0		1404-		16	AB	M14
3-05		Move to 3-05						
4-25		Move to 4-25						
4-80		Move to 4-80						


https://truckmanualshub.com/

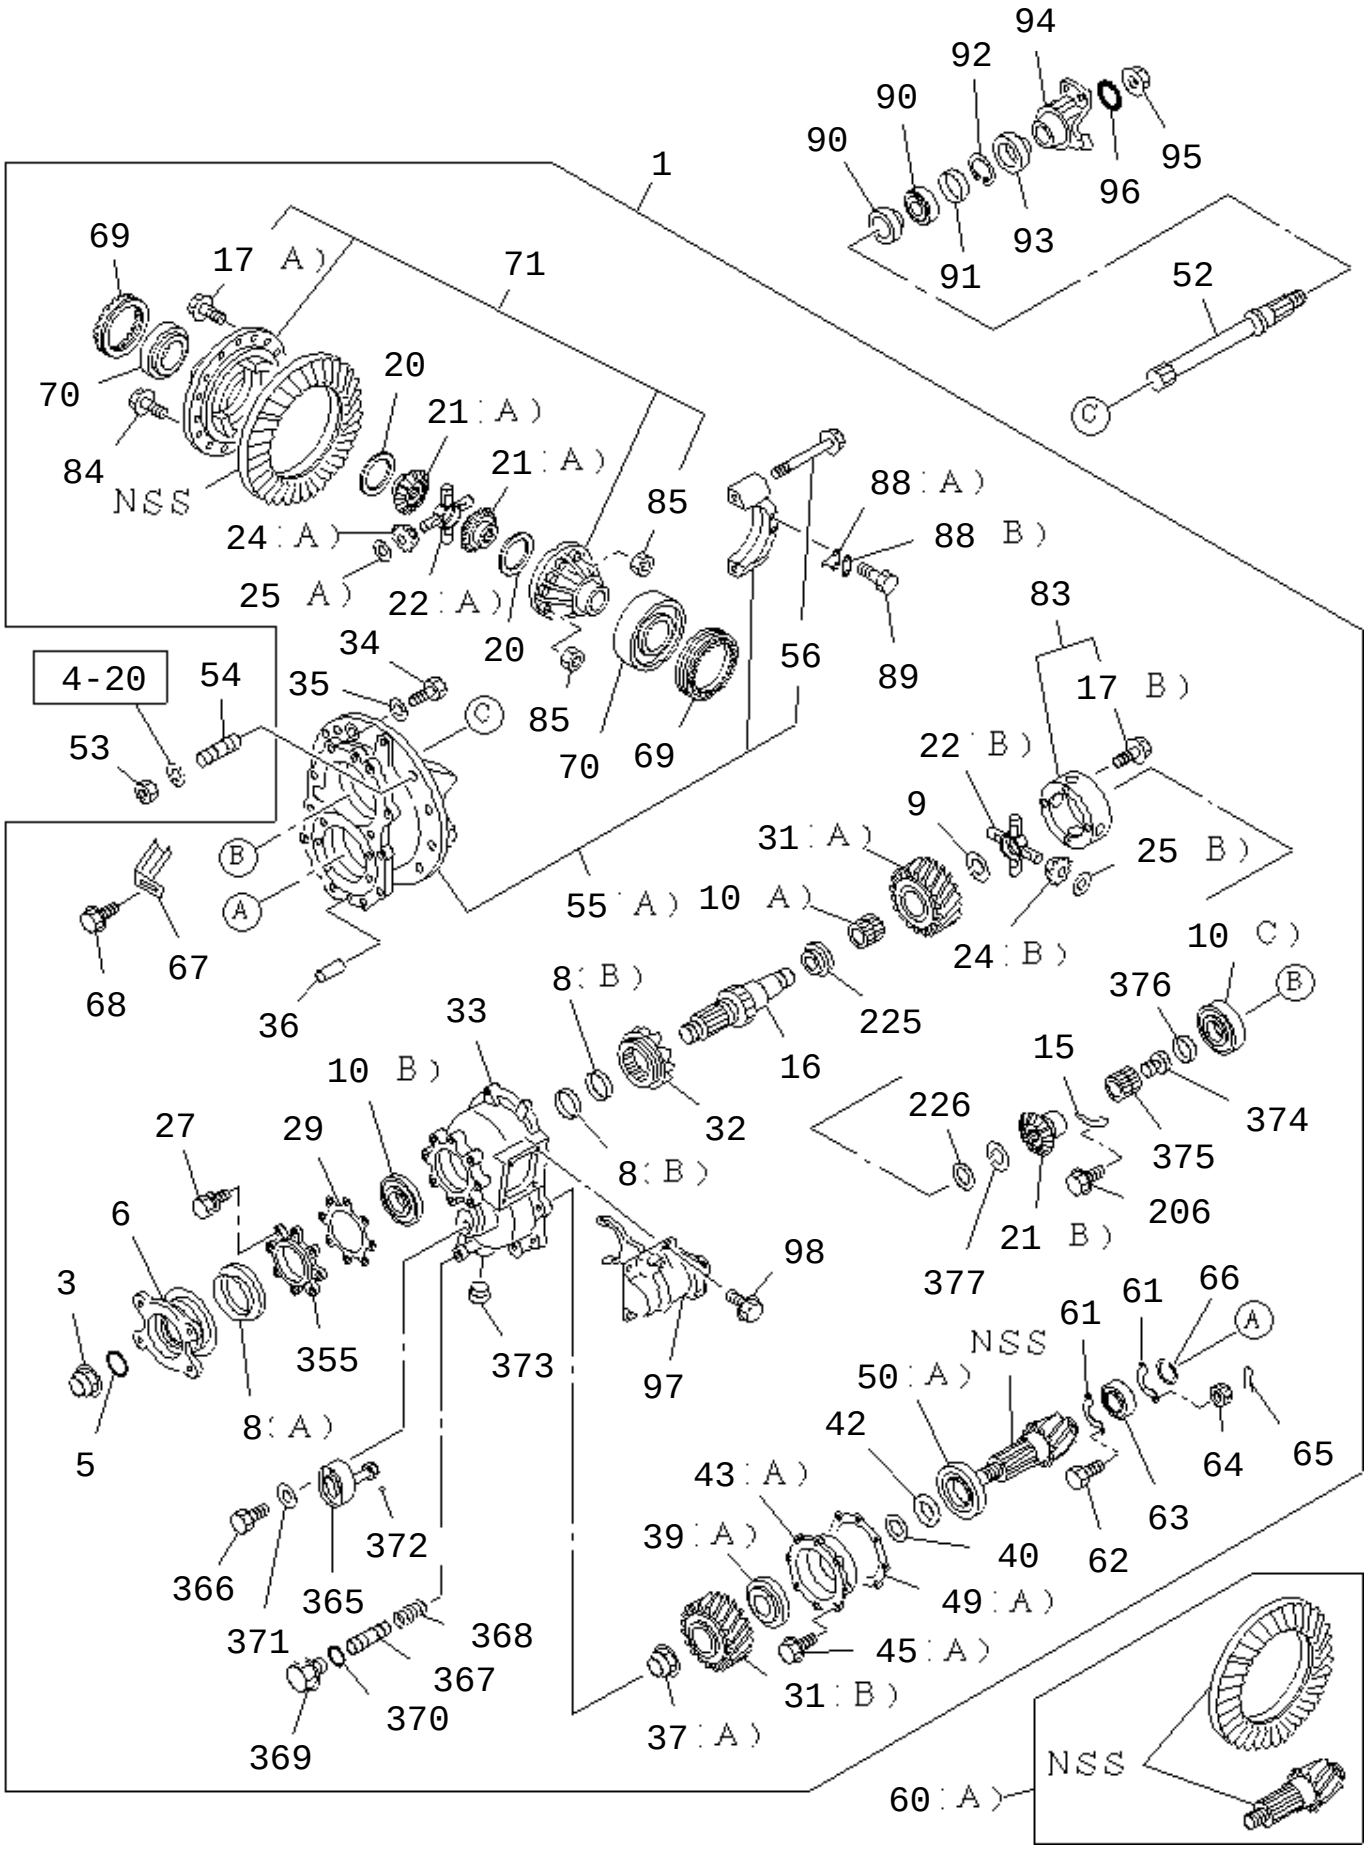

https://truckmanualshub.com/

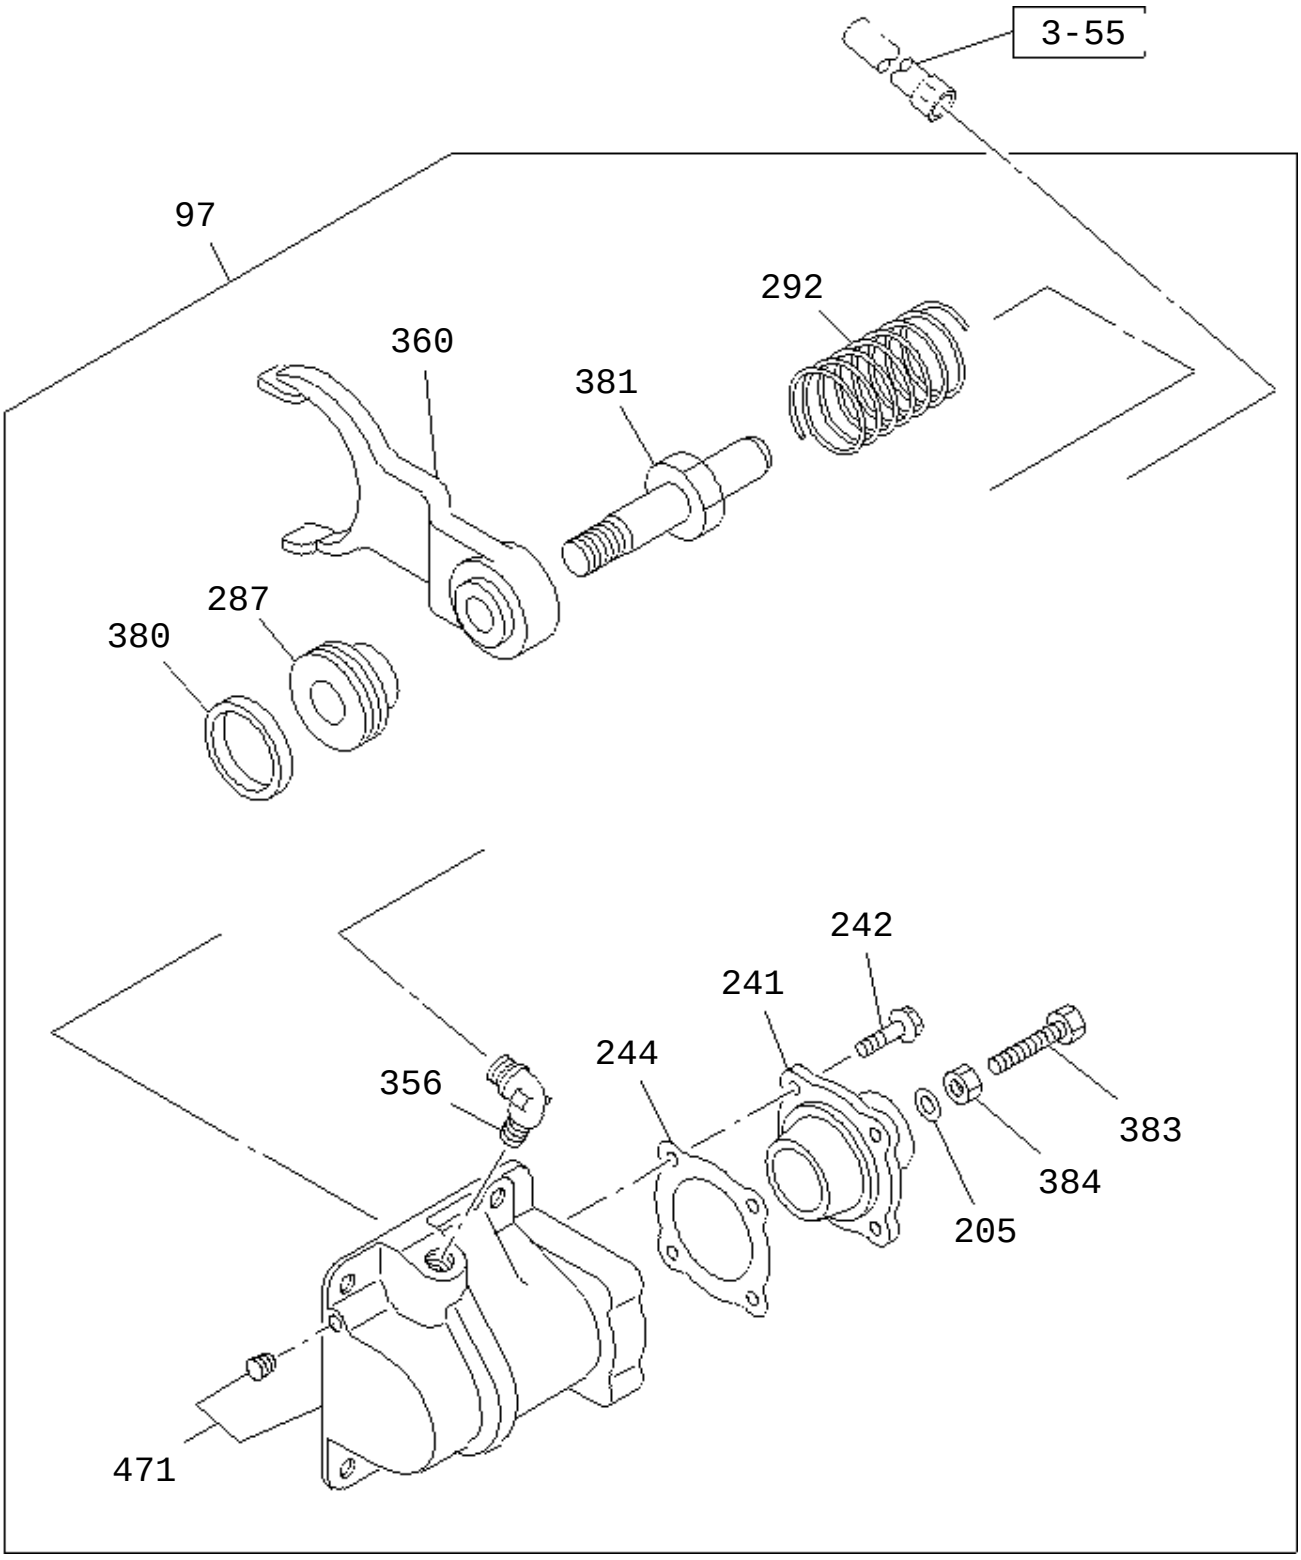

https://truckmanualshub.com/

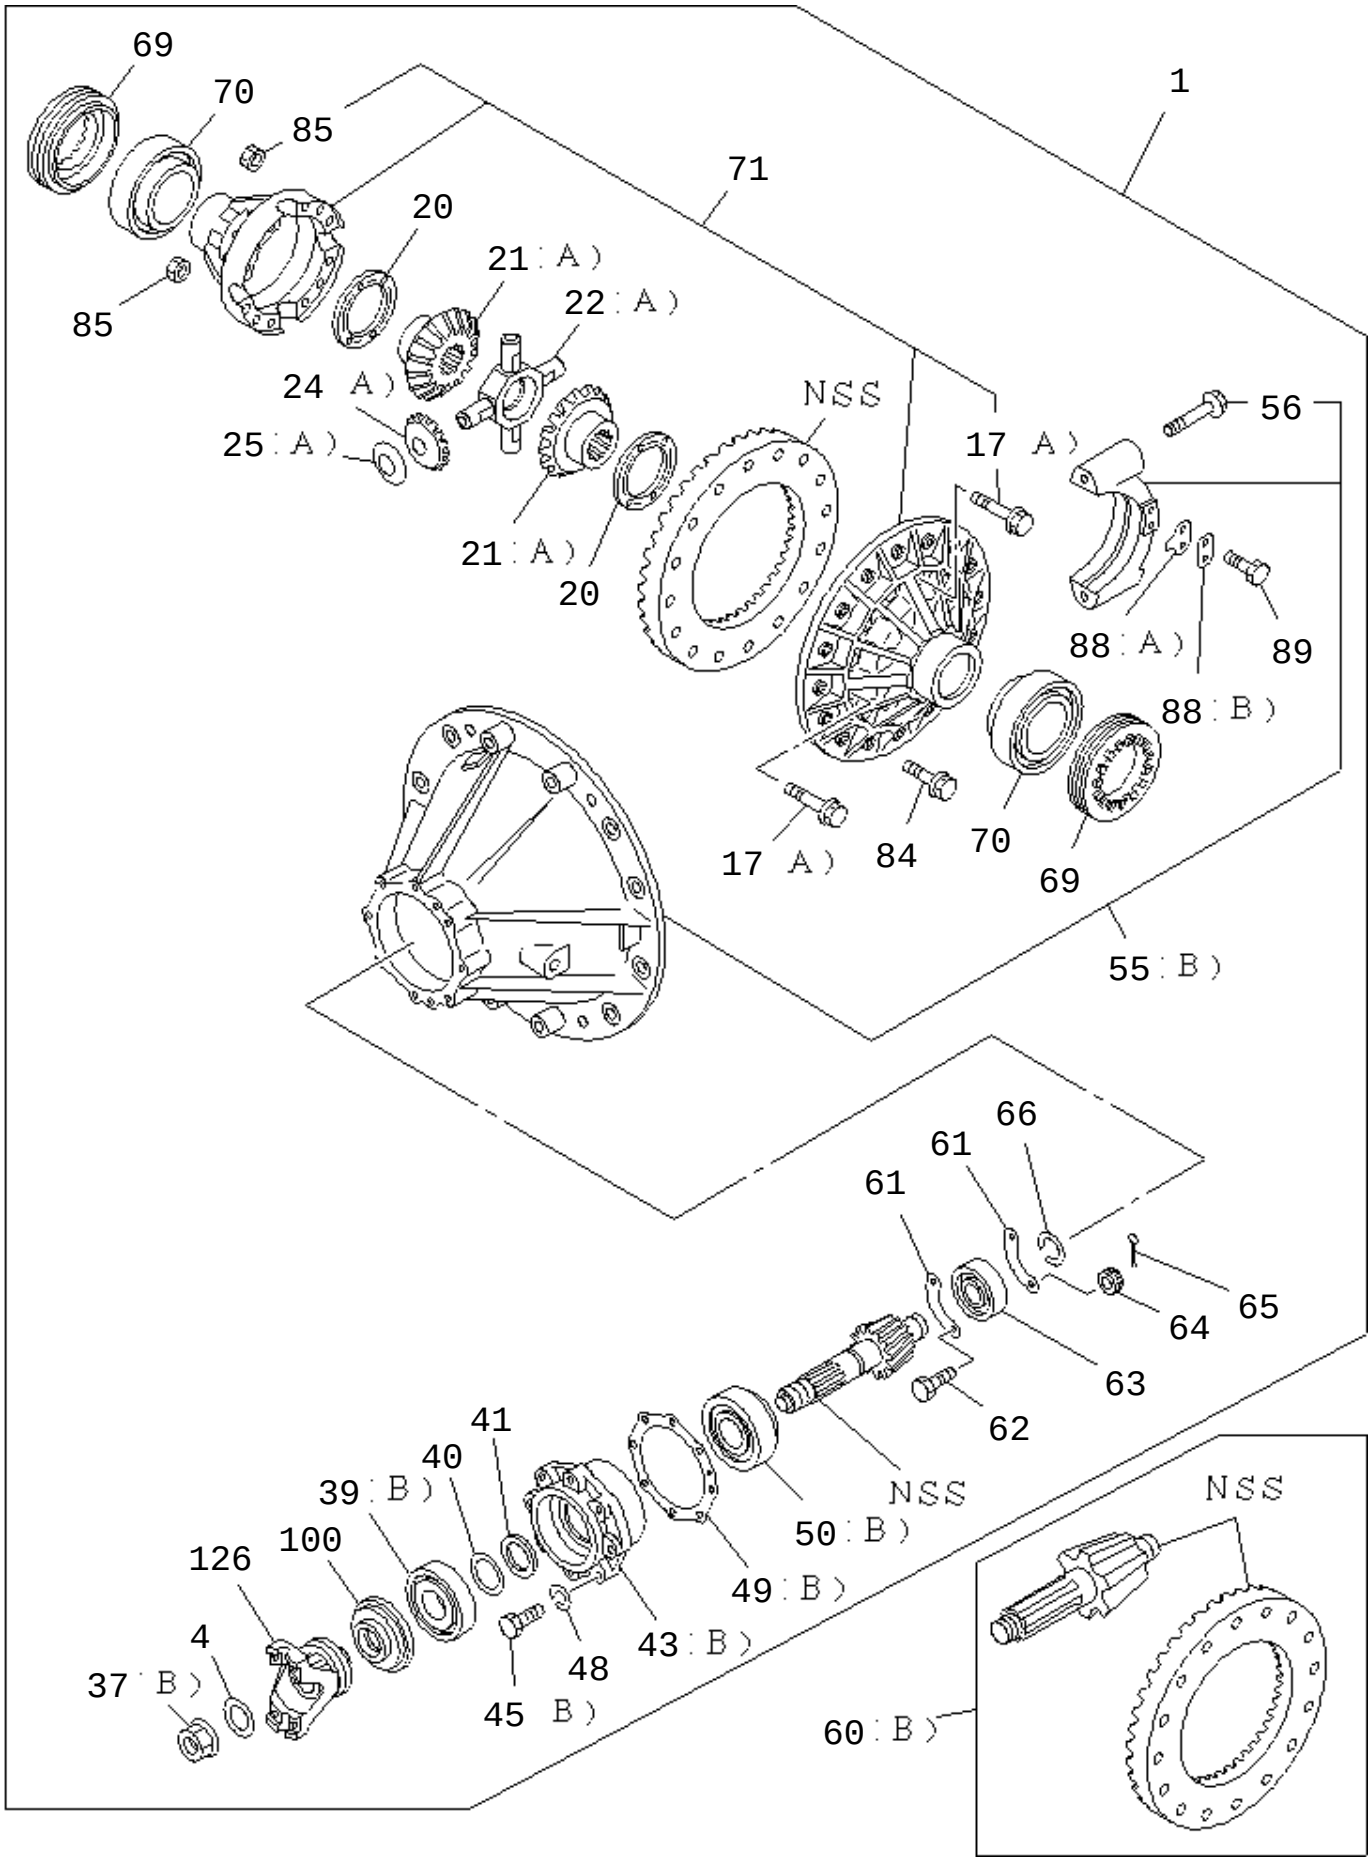

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FINAL GEAR 45/7 17.5"(W3X) B FINAL GEAR 43/7 17.5"(W3Y) C FINAL GEAR 39/7 17.5"(W3Z) D FINAL GEAR 41/8 17.5"(W4A)
1	D	DRIVE ASM; FINAL,RR						
		1-41001-391-0		1312-		01	A	REARWARD 45/7
		1-41002-036-0		1312-		01	A	FORWARD 45/7
		1-41001-392-0		1312-		01	B	REARWARD 43/7
		1-41002-038-0		1312-		01	B	FORWARD 43/7
		1-41001-393-0		1312-		01	C	REARWARD 39/7
		1-41002-040-0		1312-		01	C	FORWARD 39/7
		1-41001-394-0		1312-		01	D	REARWARD 41/8
		1-41002-042-0		1312-		01	D	FORWARD 41/8
3		NUT; INPUT SHAFT						
		1-09449-071-0		1312-		01	ABCD	M46 FLANGE
4		GASKET; FLANGE,FINAL PINION						
		1-09623-386-0		1312-		01	ABCD	ID=57
5		GASKET; INPUT SHAFT						
		1-09623-386-0		1312-		01	ABCD	ID=57
6		FLANGE ASM; INPUT SHAFT						
		1-37245-265-2		1312-		01	ABCD	
8		SEAL; OIL,INPUT SHAFT						
		1-09625-323-0		1312-		01	ABCD	(A)
		1-41349-145-0		1312-		02	ABCD	(B)
9		RING; SNAP,BRG,INPUT						
		1-09588-192-0		1312-		01	ABCD	
10		BEARING; INPUT SHAFT						
		1-09811-346-0		1312-		01	ABCD	(A) KOYO
		1-09811-347-0		1312-		01	ABCD	(A) NSK
		1-09812-094-0		1312-		01	ABCD	(B) NSK
		1-09812-182-0		1312-		01	ABCD	(C) KOYO
		1-09812-183-0		1312-		01	ABCD	(C) NSK
		1-09812-198-0		1312-		01	ABCD	(B) KOYO
15		CATCHER; OIL						
		1-41129-007-0		1312-		01	ABCD	
16		SHAFT ASM; INPUT						
		1-41341-025-0		1312-		01	ABCD	
17		BOLT; DIFF CAGE SETTING						
		1-09070-007-0		1312-		04	ABCD	(A) M16X125

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FINAL GEAR 45/7 17.5"(W3X) B FINAL GEAR 43/7 17.5"(W3Y) C FINAL GEAR 39/7 17.5"(W3Z) D FINAL GEAR 41/8 17.5"(W4A)
17		1-09070-007-0		1312-		04	ABCD	(A) M16X125
		1-09070-018-0		1312-		08	ABCD	(A) M16X113
		1-09070-018-0		1312-		08	ABCD	(A) M16X113
		1-09070-108-0		1312-		08	ABCD	(B) M10X55
20		WASHER; THRUST,SIDE GEAR						
		1-41562-112-0		1312-		AR	ABCD	T=2.8
		1-41562-112-0		1312-		AR	ABCD	T=2.8
		1-41562-113-0		1312-		AR	ABCD	T=2.9
		1-41562-113-0		1312-		AR	ABCD	T=2.9
		1-41562-114-0		1312-		AR	ABCD	T=3.0
		1-41562-114-0		1312-		AR	ABCD	T=3.0
		1-41562-115-0		1312-		AR	ABCD	T=3.1
		1-41562-115-0		1312-		AR	ABCD	T=3.1
		1-41562-116-0		1312-		AR	ABCD	T=3.2
		1-41562-116-0		1312-		AR	ABCD	T=3.2
		1-41562-117-0		1312-		AR	ABCD	T=3.3
		1-41562-117-0		1312-		AR	ABCD	T=3.3
		1-41562-118-0		1312-		AR	ABCD	T=3.4
		1-41562-118-0		1312-		AR	ABCD	T=3.4
21		GEAR; SIDE,DIFF						
		1-41561-151-0		1312-		02	ABCD	(A) Z=16
		1-41561-151-0		1312-		02	ABCD	(A) Z=16
		1-41561-169-0		1312-		01	ABCD	(B) Z=16
22		SPIDER; DIFF PINION						
		1-41521-037-2		1312-		01	ABCD	(A) OD=35
		1-41521-037-2		1312-		01	ABCD	(A) OD=35
		1-41521-049-2		1312-		01	ABCD	(B)
24		GEAR; PINION,DIFF						
		1-41551-053-0		1312-		04	ABCD	(A) Z=10
		1-41551-053-0		1312-		04	ABCD	(A) Z=10
		1-41551-055-0		1312-		04	ABCD	(B) Z=10
25		WASHER; THRUST,PINION						

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FINAL GEAR 45/7 17.5"(W3X) B FINAL GEAR 43/7 17.5"(W3Y) C FINAL GEAR 39/7 17.5"(W3Z) D FINAL GEAR 41/8 17.5"(W4A)
25		1-41552-017-0		1312-		04	ABCD	(A) T=1.6
		1-41552-017-0		1312-		04	ABCD	(A) T=1.6
		1-41552-023-0		1312-		04	ABCD	(B) T=1.6
27		BOLT; BRG RET 0-50551-235-0		1312-		08	ABCD	M12X35 W/LK WASHER
29		SHIM; BRG RET 1-41349-146-0		1312-		AR	ABCD	T=0.30
		1-41349-147-0		1312-		AR	ABCD	T=0.40
		1-41349-148-0		1312-		AR	ABCD	T=0.50
		1-41349-149-0		1312-		AR	ABCD	T=1.000
31		GEAR; DRIVEN,HELICAL 1-41351-044-0		1312-		01	ABCD	(A) Z=16
		1-41352-029-0		1312-		01	ABCD	(B) Z=31
32		SLEEVE; CLU,DIFF LK 1-41355-038-0		1312-		01	ABCD	
33		CASE; POWER DIVIDER 1-41321-024-1		1312-		01	ABCD	
34		BOLT; CASE TO CARRIER 0-23851-440-0		1312-		10	ABCD	M14X40
35		WASHER; CASE TO CARRIER 0-91510-814-0		1312-		10	ABCD	ID=14.2
36		PIN; STRAIGHT 9-08161-428-0		1312-		02	ABCD	OD=14 L=28
37		NUT; DRIVING PINION 1-09449-061-0		1312-		01	ABCD	(A) M42
		1-09449-071-0		1312-		01	ABCD	(B) M46 FLANGE
39		BEARING; FINAL PINION 1-09812-073-1		1312-		01	ABCD	(A) NSK
		1-09812-074-3		1312-		01	ABCD	(A) KOYO
		1-09812-075-0		1312-		01	ABCD	(B) NSK
		1-09812-076-1		1312-		01	ABCD	(B) KOYO
40		SHIM; FINAL PINION 1-41229-245-0		1312-		AR	ABCD	T=3.25
		1-41229-245-0		1312-		AR	ABCD	T=3.25
		1-41229-246-0		1312-		AR	ABCD	T=3.26
		1-41229-246-0		1312-		AR	ABCD	T=3.26
		1-41229-247-0		1312-		AR	ABCD	T=3.27

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FINAL GEAR 45/7 17.5"(W3X) B FINAL GEAR 43/7 17.5"(W3Y) C FINAL GEAR 39/7 17.5"(W3Z) D FINAL GEAR 41/8 17.5"(W4A)
40		1-41229-247-0		1312-		AR	ABCD	T=3.27
		1-41229-248-0		1312-		AR	ABCD	T=3.28
		1-41229-248-0		1312-		AR	ABCD	T=3.28
		1-41229-249-0		1312-		AR	ABCD	T=3.29
		1-41229-249-0		1312-		AR	ABCD	T=3.29
		1-41229-250-0		1312-		AR	ABCD	T=3.30
		1-41229-250-0		1312-		AR	ABCD	T=3.30
		1-41229-251-0		1312-		AR	ABCD	T=3.31
		1-41229-251-0		1312-		AR	ABCD	T=3.31
		1-41229-252-0		1312-		AR	ABCD	T=3.32
		1-41229-252-0		1312-		AR	ABCD	T=3.32
		1-41229-253-0		1312-		AR	ABCD	T=3.33
		1-41229-253-0		1312-		AR	ABCD	T=3.33
		1-41229-254-0		1312-		AR	ABCD	T=3.34
		1-41229-254-0		1312-		AR	ABCD	T=3.34
		1-41229-255-0		1312-		AR	ABCD	T=3.35
		1-41229-255-0		1312-		AR	ABCD	T=3.35
41		SPACER; FINAL DRIVE PINION BRG						
		1-41229-237-0		1312-		AR	ABCD	T=7.60
		1-41229-238-0		1312-		AR	ABCD	T=7.80
		1-41229-239-0		1312-		AR	ABCD	T=8.00
		1-41229-240-0		1312-		AR	ABCD	T=8.20
		1-41229-241-0		1312-		AR	ABCD	T=8.40
		1-41229-242-0		1312-		AR	ABCD	T=8.60
		1-41229-243-0		1312-		AR	ABCD	T=8.80
		1-41229-244-0		1312-		AR	ABCD	T=9.00
42		COLLAR; DIST,COLLAPSIBLE						
		1-41229-237-0		1312-		AR	ABCD	T=7.60
		1-41229-238-0		1312-		AR	ABCD	T=7.80
		1-41229-239-0		1312-		AR	ABCD	T=8.00
		1-41229-240-0		1312-		AR	ABCD	T=8.20
		1-41229-241-0		1312-		AR	ABCD	T=8.40
		1-41229-242-0		1312-		AR	ABCD	T=8.60
		1-41229-243-0		1312-		AR	ABCD	T=8.80
		1-41229-244-0		1312-		AR	ABCD	T=9.00
43		CAGE; FINAL PINION						
		1-41151-030-0		1312-		01	ABCD	(B) T=81

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FINAL GEAR 45/7 17.5"(W3X) B FINAL GEAR 43/7 17.5"(W3Y) C FINAL GEAR 39/7 17.5"(W3Z) D FINAL GEAR 41/8 17.5"(W4A)
43		1-41151-053-0		1312-		01	ABCD	(A) T=53
45		BOLT; FINAL PINION CAGE						
		0-16806-655-0		1312-		08	ABCD	(B) M16X55
		1-09070-107-0		1312-		08	ABCD	(A) M16X40
48		WASHER; LK,FINAL PINION						
		0-91510-516-0		1312-		08	ABCD	ID=16.2
49		SHIM; FINAL PINION CAGE						
		1-41154-024-0		1312-		AR	ABCD	(B) T=0.50
		1-41154-025-0		1312-		AR	ABCD	(B) T=1.00
		1-41154-057-0		1312-		AR	ABCD	(B) T=0.30
		1-41154-058-0		1312-		AR	ABCD	(B) T=0.40
		1-41154-071-0		1312-		AR	ABCD	(A) T=0.50
		1-41154-072-0		1312-		AR	ABCD	(A) T=1.000
		1-41154-073-0		1312-		AR	ABCD	(A) T=0.30
		1-41154-074-0		1312-		AR	ABCD	(A) T=0.40
50		BEARING; FINAL PINION						
		1-09812-073-1		1312-		01	ABCD	(B) NSK
		1-09812-074-3		1312-		01	ABCD	(B) KOYO
		1-09812-075-0		1312-		01	ABCD	(A) NSK
		1-09812-076-1		1312-		01	ABCD	(A) KOYO
52		SHAFT; OUTPUT						
		1-41343-020-0		1312-		01	ABCD	
53		NUT; FINAL DRIVE SET						
		0-91110-516-0		1312-		01	ABCD	M16
54		STUD; FINAL DRIVE SET						
		9-09830-243-0		1312-		01	ABCD	M16X32 L=56
55		CARRIER; DIFF						
		1-41110-109-0		1312-		01	ABCD	(B)
		1-41310-050-0		1312-		01	ABCD	(A)
56		BOLT; BRG CAP						
		1-09070-042-0		1312-		04	ABCD	M20X112
		1-09070-042-0		1312-		04	ABCD	M20X112
60		GEAR SET; FINAL DRIVE,RR						

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FINAL GEAR 45/7 17.5"(W3X) B FINAL GEAR 43/7 17.5"(W3Y) C FINAL GEAR 39/7 17.5"(W3Z) D FINAL GEAR 41/8 17.5"(W4A)
60		1-41210-474-0		1312-		01	A	(A) 45/7
		1-41210-602-0		1312-		01	A	(B) 45/7
		1-41210-475-0		1312-		01	B	(A) 43/7
		1-41210-603-0		1312-		01	B	(B) 43/7
		1-41210-476-0		1312-		01	C	(A) 39/7
		1-41210-604-0		1312-		01	C	(B) 39/7
		1-41210-477-0		1312-		01	D	(A) 41/8
		1-41210-605-0		1312-		01	D	(B) 41/8
61		RETAINER; PILOT BRG,PINION						
		1-41227-012-0		1312-		02	ABCD	T=3.2
		1-41227-012-0		1312-		02	ABCD	T=3.2
62		BOLT; RET						
		1-09042-038-1		1312-		02	ABCD	M8X40 W/PIN HOLE
		1-09042-038-1		1312-		02	ABCD	M8X40 W/PIN HOLE
63		BEARING; PINION PILOT						
		1-09810-182-0		1312-		01	ABCD	KOYO
		1-09810-182-0		1312-		01	ABCD	KOYO
		1-09810-183-0		1312-		01	ABCD	NSK
		1-09810-183-0		1312-		01	ABCD	NSK
64		NUT; RET						
		0-91117-508-0		1312-		02	ABCD	M8 SLOTTED
		0-91117-508-0		1312-		02	ABCD	M8 SLOTTED
65		PIN; SPLIT,RET						
		0-81122-012-0		1312-		02	ABCD	
		0-81122-012-0		1312-		02	ABCD	
66		RING; SNAP,PILOT BRG						
		1-09588-086-2		1312-		01	ABCD	OD=37.2
		1-09588-086-2		1312-		01	ABCD	OD=37.2
67		PICKUP; OIL,CARRIER						
		1-41129-008-0		1312-		01	ABCD	
68		BOLT; OIL PICKUP FIX						
		8-94479-696-1		1312-		02	ABCD	M8X12 FLANGE
69		NUT; ADJ,DIFF CAGE						
		1-41121-001-0		1312-	R	01	ABCD	M155 H=26
		1-41121-001-0		1312-	R	01	ABCD	M155 H=26
		1-41121-002-0		1312-	L	01	ABCD	M155 H=30
		1-41121-002-0		1312-	L	01	ABCD	M155 H=30
70		BEARING; DIFF CAGE						

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FINAL GEAR 45/7 17.5"(W3X) B FINAL GEAR 43/7 17.5"(W3Y) C FINAL GEAR 39/7 17.5"(W3Z) D FINAL GEAR 41/8 17.5"(W4A)
70		1-09812-225-0		1312-		02	ABCD	KOYO ID=92 OD=152 T=40
		1-09812-225-0		1312-		02	ABCD	KOYO ID=92 OD=152 T=40
71		CAGE ASM; DIFF,FINAL DRIVE						
		1-41510-141-0		1312-		01	ABCD	
		1-41510-141-0		1312-		01	ABCD	
83		CAGE ASM; DIFF						
		1-41510-224-0		1312-		01	ABCD	
84		BOLT; FINAL DRIVE GEAR						
		1-09009-049-1		1312-		16	ABCD	M18X38 FLANGE
		1-09009-049-1		1312-		16	ABCD	M18X38 FLANGE
85		NUT; DIFF CAGE SETTING						
		0-91110-516-0		1312-		12	ABCD	M16
		0-91110-516-0		1312-		12	ABCD	M16
88		PLATE; LK,ADJ NUT						
		1-41124-006-0		1312-		02	ABCD	(A) T=3.2
		1-41124-006-0		1312-		02	ABCD	(A) T=3.2
		9-41124-005-0		1312-		02	ABCD	(B) T=1.0
		9-41124-005-0		1312-		02	ABCD	(B) T=1.0
89		BOLT; LK PLATE						
		0-20850-816-0		1312-		04	ABCD	M8X16
		0-20850-816-0		1312-		04	ABCD	M8X16
90		BEARING; OUTPUT SHAFT						
		1-09812-068-0		1312-		02	ABCD	NSK
		1-09812-069-0		1312-		02	ABCD	KOYO
91		SHIM; BRG,OUTPUT SHAFT						
		1-41349-020-0		1312-		AR	ABCD	T=4.60
		1-41349-021-0		1312-		AR	ABCD	T=4.70
		1-41349-022-0		1312-		AR	ABCD	T=4.80
		1-41349-023-0		1312-		AR	ABCD	T=4.90
		1-41349-024-0		1312-		AR	ABCD	T=5.00
		1-41349-025-0		1312-		AR	ABCD	T=5.10
		1-41349-026-0		1312-		AR	ABCD	T=5.20
		1-41349-027-0		1312-		AR	ABCD	T=5.30
		1-41349-091-0		1312-		AR	ABCD	T=4.50
		1-41349-092-0		1312-		AR	ABCD	T=5.40
92		RING; SNAP,BRG,OUTPUT SHAFT						
		9-09180-185-0		1312-		01	ABCD	OD=90.5
93		SEAL; OIL,OUTPUT SHAFT						
		1-09625-217-0		1312-		01	ABCD	
94		FLANGE ASM; OUTPUT SHAFT						
		1-37245-130-1		1312-		01	ABCD	
95		NUT; OUTPUT SHAFT						


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FINAL GEAR 45/7 17.5"(W3X) B FINAL GEAR 43/7 17.5"(W3Y) C FINAL GEAR 39/7 17.5"(W3Z) D FINAL GEAR 41/8 17.5"(W4A)
95		1-09449-067-0		1312-		01	ABCD	M36 FLANGE
96		GASKET; SHAFT,OUTPUT						
		1-09623-387-0		1312-		01	ABCD	ID=42
97		SHIFT UNIT; DIFF LOCK						
		1-48260-060-1		1312-		01	ABCD	
98		BOLT; SHIFT UNIT TO CARRIER						
		0-28151-050-0		1312-		01	ABCD	M10X50 FLANGE
		0-28751-025-0		1312-		03	ABCD	M10X25 FLANGE
100		SEAL; OIL,FINAL PINION						
		1-09625-322-0		1312-		01	ABCD	NOK
126		COUPLING; DRIVING PINION						
		1-37245-336-0		1312-		01	ABCD	
205		WASHER; PL						
		9-09160-510-0		1312-		01	ABCD	ID=10.5 OD=18
206		BOLT; OIL CATCHER						
		8-94479-696-1		1312-		02	ABCD	M8X12 FLANGE
225		WASHER; THRUST						
		1-41552-024-2		1312-		AR	ABCD	T=5.9
		1-41552-025-2		1312-		AR	ABCD	T=6.0
		1-41552-026-2		1312-		AR	ABCD	T=6.1
		1-41552-027-2		1312-		AR	ABCD	T=6.2
		1-41552-028-2		1312-		AR	ABCD	T=6.3
		1-41552-029-2		1312-		AR	ABCD	T=6.4
		1-41552-030-2		1312-		AR	ABCD	T=6.5
		1-41552-031-2		1312-		AR	ABCD	T=6.6
		1-41552-032-2		1312-		AR	ABCD	T=6.7
		1-41552-033-2		1312-		AR	ABCD	T=6.8
		1-41552-034-2		1312-		AR	ABCD	T=6.9
		1-41552-035-2		1312-		AR	ABCD	T=7.0
		1-41552-036-2		1312-		AR	ABCD	T=7.1
226		WASHER; THRUST						
		1-41562-267-0		1312-		01	ABCD	
241		COVER; SHIFT HSG						
		1-48266-012-1		1312-		01	ABCD	
242		BOLT; COVER						
		0-20800-820-0		1312-		04	ABCD	M8X20
244		GASKET; COVER						
		1-48269-062-0		1312-		01	ABCD	
287		PISTON; SHIFT UNIT						
		1-48262-012-0		1312-		01	ABCD	
292		SPRING; PISTON						
		1-48265-007-0		1312-		01	ABCD	
355		RETAINER; BRG						
		1-41227-016-0		1312-		01	ABCD	
356		NIPPLE; SHIFT UNIT						
		1-09650-430-0		1312-		01	ABCD	M12 & PT1/4 ELBOW
360		FORK; SHIFT						
		1-48269-066-0		1312-		01	ABCD	
365		PUMP ASM; OIL						
		1-41381-008-1		1312-		01	ABCD	

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FINAL GEAR 45/7 17.5"(W3X) B FINAL GEAR 43/7 17.5"(W3Y) C FINAL GEAR 39/7 17.5"(W3Z) D FINAL GEAR 41/8 17.5"(W4A)
366		BOLT; PUMP 0-10805-840-0		1312-		04	ABCD	M8X40
367		STRAINER; OIL PUMP 1-41383-003-0		1312-		01	ABCD	
368		SPRING; STRAINER 1-09580-504-0		1312-		01	ABCD	
369		PLUG; STRAINER 1-09604-023-0		1312-		01	ABCD	M24X17 FLANGE
370		GASKET; STRAINER 1-09623-058-0		1312-		01	ABCD	ID=26.8
371		WASHER; LK,PUMP 0-91510-808-0		1312-		04	ABCD	ID=8.2
372		BALL; CASE 9-00097-517-0		1312-		01	ABCD	IDN
373		PLUG; CASE 1-09605-019-0		1312-		01	ABCD	PT1/4
374		PLUG; INPUT SHAFT 1-09609-020-1		1312-		01	ABCD	
375		BEARING; SIDE GEAR 1-09811-348-0		1312-		01	ABCD	KOYO
		1-09811-362-0		1312-		01	ABCD	NSK
376		SPACER; BRG,SIDE GEAR 1-41349-150-0		1312-		01	ABCD	
377		RING; SNAP,BRG,SIDE GEAR 1-09587-091-0		1312-		01	ABCD	
380		GASKET; PISTON 1-48269-064-0		1312-		01	ABCD	
381		ROD; SHIFT 1-48263-005-0		1312-		01	ABCD	
383		BOLT; SET,SHIFT UNIT 0-20801-045-0		1312-		01	ABCD	M10X45
384		NUT; LK,SHIFT UNIT 9-09111-410-0		1312-		01	ABCD	M10
471		CYLINDER ASM; SHIFT UNIT 1-48269-261-0		1312-		01	ABCD	
4-20		Move to 4-20						
3-55		Move to 3-55						

https://truckmanualshub.com/

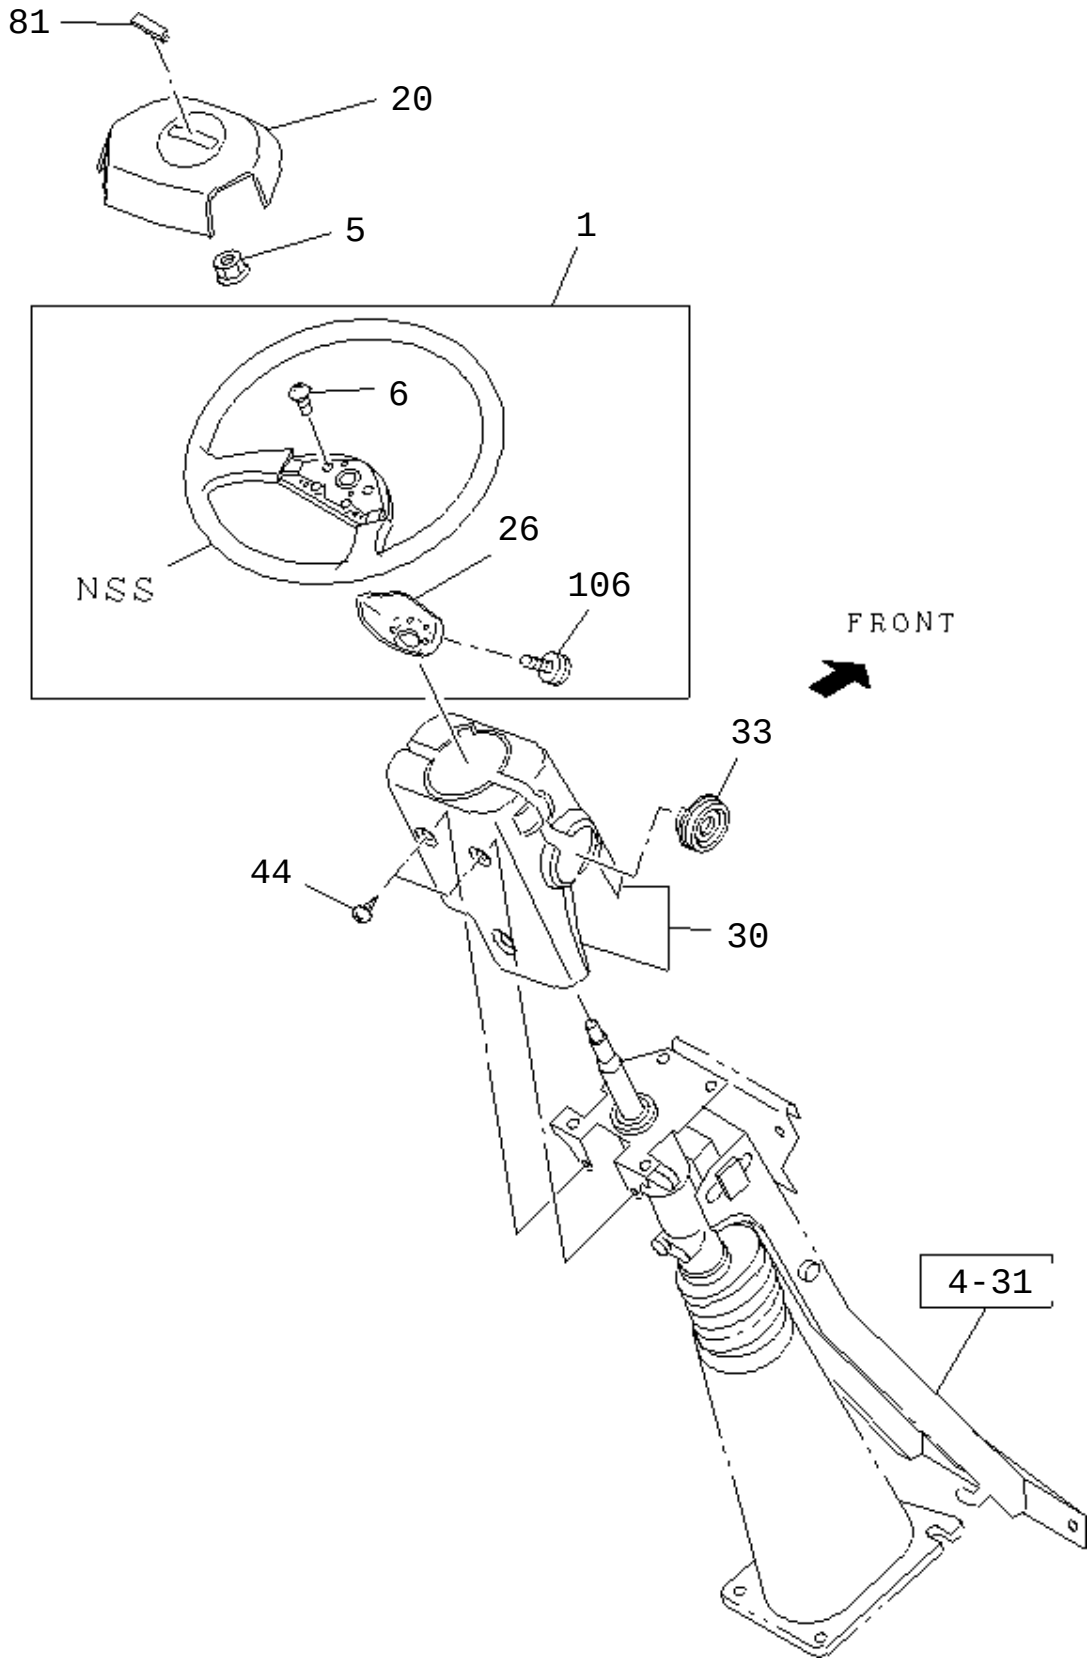


https://truckmanualshub.com/

STEERING WHEEL AND COWL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		WHEEL; STRG					
		8-97412-555-1		1312-1403	01	A	DARK GRAY
		8-97412-555-1		1404-	01	AB	DARK GRAY
5		NUT; STRG WHEEL TO SHAFT					
		0-91111-514-0		1312-1403	01	A	M14
		0-91111-514-0		1404-	01	AB	M14
6		SCREW; HORN SPR CONTACT					
		8-97167-588-0		1312-1403	04	A	M4X12
		8-97167-588-0		1404-	04	AB	M4X12
20		SHROUD; PAD,STRG WHEEL					
		8-97405-985-1		1312-1403	01	A	DARK GRAY
		8-97405-985-1		1404-	01	AB	DARK GRAY
26		COVER; STRG WHEEL,LWR					
		8-97409-275-2		1312-1403	01	A	DARK GRAY
		8-97409-275-2		1404-	01	AB	DARK GRAY
30		COWL; STEERING					
		8-97925-101-0		1312-1403	01	A	IDN
		8-97925-101-0		1404-	01	AB	IDN
33		COVER; STRG COWL					
		8-97409-495-0		1312-1403	01	A	DARK GRAY
		8-97409-495-0		1404-	01	AB	DARK GRAY
44		SCREW; STRG COWL					
		0-38050-512-0		1312-1403	03	A	M5X12
		0-38050-512-0		1404-	03	AB	M5X12
81		EMBLEM; STRG WHEEL					
		8-97405-986-0		1312-1403	01	A	DARK GRAY
		8-97405-986-0		1404-	01	AB	DARK GRAY
106		BOLT; TORX					
		8-98231-397-0		1312-1403	02	A	
		8-98231-397-0		1404-	02	AB	
4-31		Move to 4-31					

https://truckmanualshub.com/

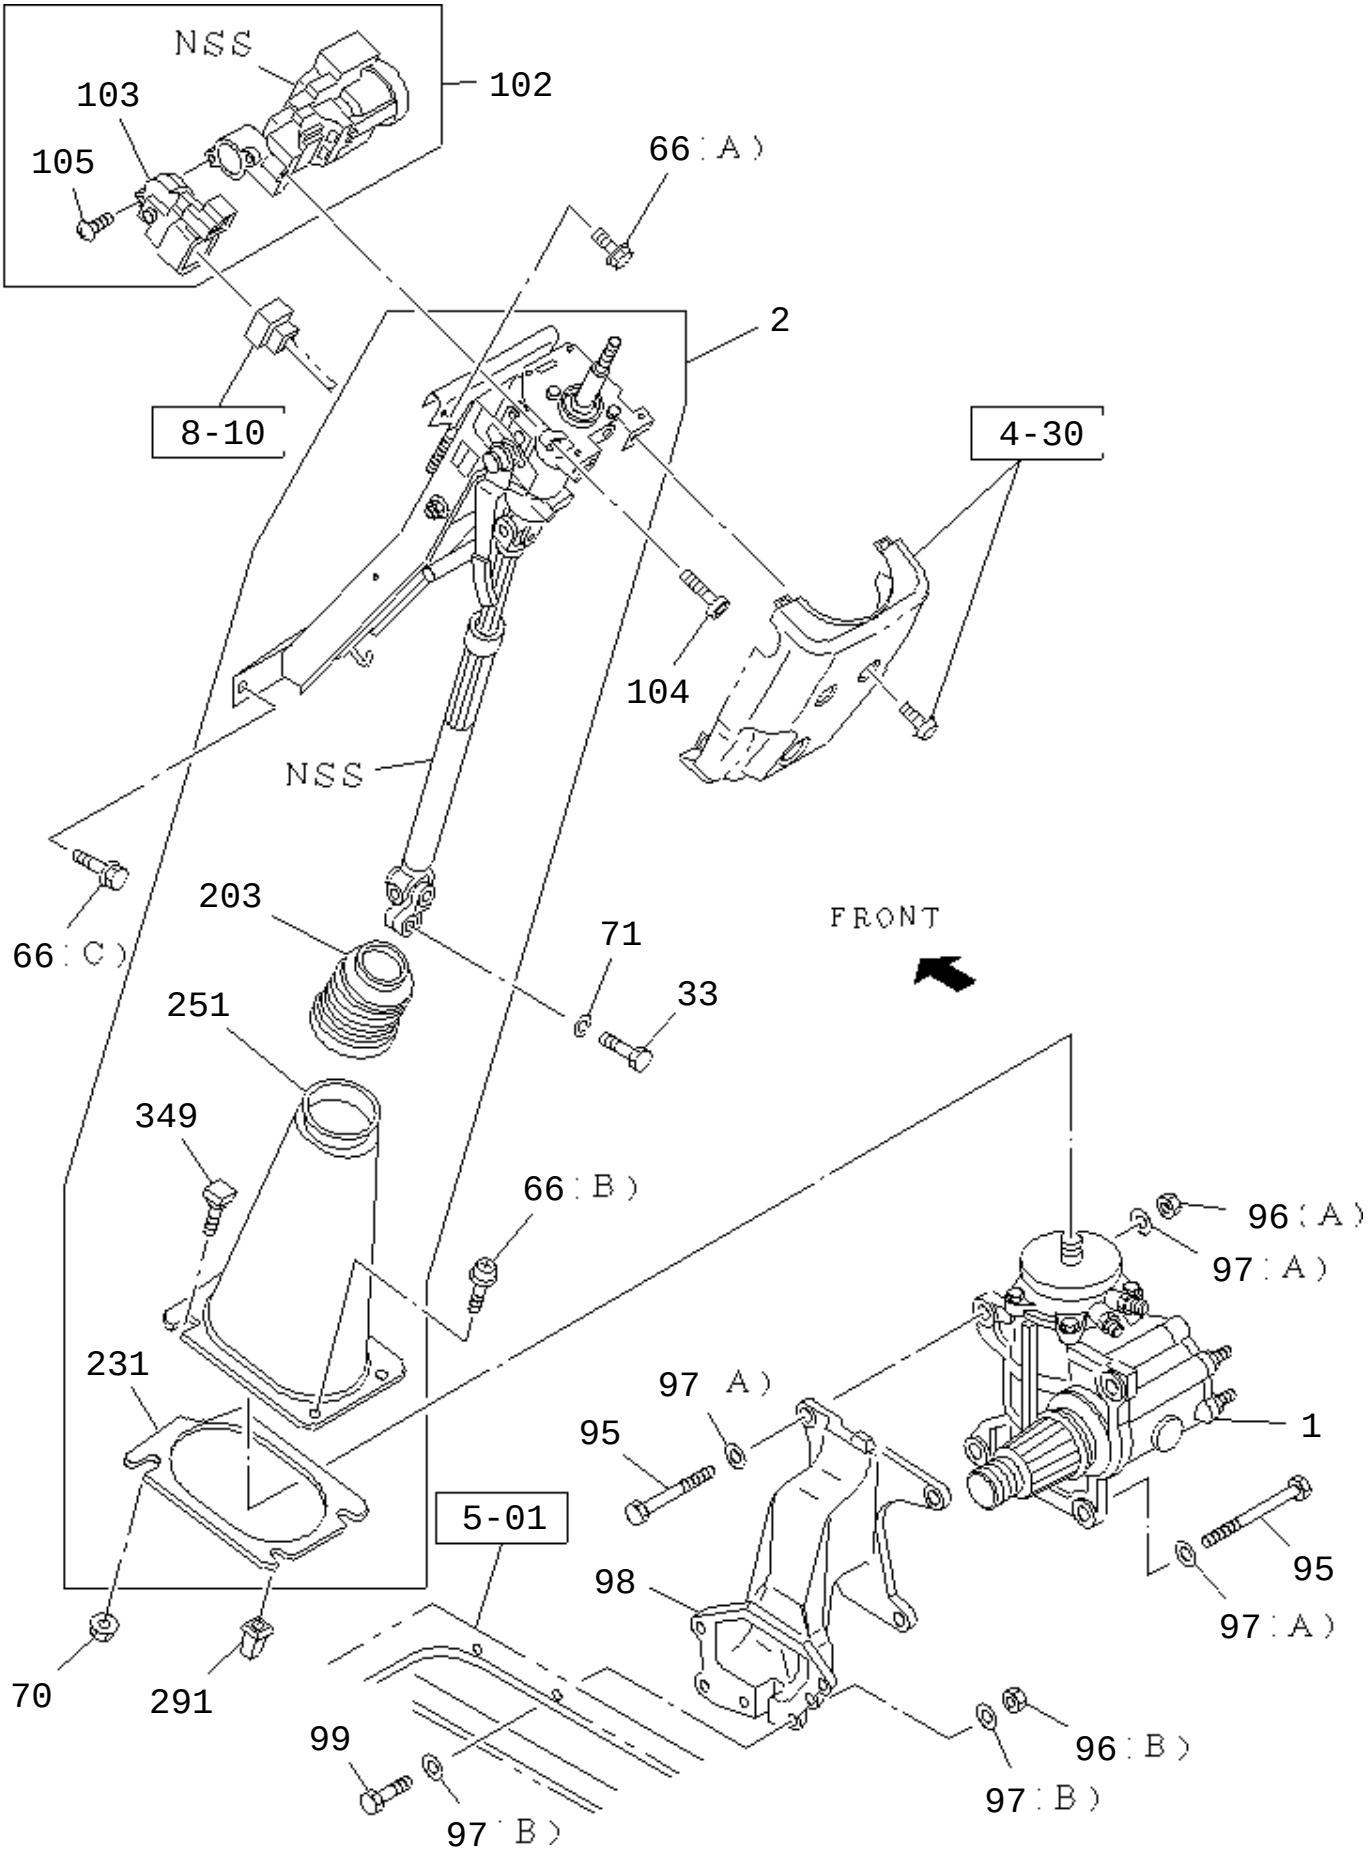

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	D	STEERING UNIT					SEE FIG-NO 4-40 FOR COMPONENT.
		1-44000-953-1		1312-1403	01	A	IDN
		1-44000-953-1		1404-	01	AB	IDN
2		SHAFT ASM; STRG					
		8-97415-618-2		1312-1403	01	A	BLACK IDN
		8-97415-618-2		1404-	01	AB	BLACK IDN
33		BOLT; STRG SHAFT TO UNIT					
		1-09009-126-1		1312-1403	01	A	M10X35
		1-09009-126-1		1404-	01	AB	M10X35
66		BOLT; STRG COLUMN					
		0-28650-820-0		1312-1403	02	A	(A) M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	(A) M8X20 FLANGE IDN
		0-72180-518-0		1312-1403	02	A	(B) M5X18 TAPPING
		0-72180-518-0		1404-	02	AB	(B) M5X18 TAPPING
		8-98018-439-0		1312-1403	02	A	(C) M8X25 W/LK&PL WASHER
		8-98018-439-0		1404-	02	AB	(C) M8X25 W/LK&PL WASHER
70		NUT; STRG COLUMN					
		1-09984-180-0		1312-1403	02	A	M6 FLANGE W/RUBBER
		1-09984-180-0		1404-	02	AB	M6 FLANGE W/RUBBER
71		WASHER; LK,SHAFT TO UNIT					
		0-91510-810-0		1312-1403	01	A	ID=10.2 IDN
		0-91510-810-0		1404-	01	AB	ID=10.2 IDN
95		BOLT; STRG UNIT					
		1-09000-305-0		1312-1403	04	A	M16X66
		1-09000-305-0		1404-	04	AB	M16X66
96		NUT; STRG UNIT					
		0-91110-516-0		1312-1403	02	A	(A) M16
		0-91110-516-0		1404-	02	AB	(A) M16
		1-09440-097-0		1312-1403	06	A	(B) M14
		1-09440-097-0		1404-	06	AB	(B) M14
97		WASHER; PL,STRG UNIT					
		1-09503-316-0		1312-1403	06	A	(A) ID=16.2

https://truckmanualshub.com/

STEERING COLUMN AND SHAFT

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
97		1-09503-316-0		1404-	06	AB	(A) ID=16.2
		8-98010-627-1		1312-1403	12	A	(B) ID=15
		8-98010-627-1		1404-	12	AB	(B) ID=15
98		BRACKET; STRG GEAR BOX					
		1-44226-136-1		1312-1403	01	A	
		1-44226-136-1		1404-	01	AB	
99		BOLT; BRKT TO FRAME					
		1-09000-787-0		1312-1403	06	A	M14X50
		1-09000-787-0		1404-	06	AB	M14X50
102		LOCK ASM; STRG					
		8-97948-271-0		1312-1403	01	A	IDN
		8-97948-271-0		1404-	01	AB	IDN
103		SWITCH; IGNITION					
		8-98045-349-0		1312-1403	01	A	
		8-98045-349-0		1404-	01	AB	
104		BOLT; STRG LOCK TO COLUMN					
		8-97321-385-0		1312-1403	02	A	M8X20 TORQUE SHEAR BOLT
		8-97321-385-0		1404-	02	AB	M8X20 TORQUE SHEAR BOLT
105		SCREW; IGN SW					
		8-98045-346-0		1312-1403	02	A	
		8-98045-346-0		1404-	02	AB	
203		BOOT; STRG COLUMN LWR					
		8-98137-333-0		1312-1403	01	A	IDN
		8-98137-333-0		1404-	01	AB	IDN
231		SEAL; RUBBER,STRG COLUMN					
		8-98137-330-0		1312-1403	01	A	IDN
		8-98137-330-0		1404-	01	AB	IDN
251		COVER; LWR					
		8-97417-050-0		1312-1403	01	A	BLACK IDN
		8-97417-050-0		1404-	01	AB	BLACK IDN
291		GROMMET; STRG SHAFT COVER					
		8-94279-043-0		1312-1403	02	A	D=7.8X7.8 L=18 NATURAL IDN
		8-94279-043-0		1404-	02	AB	D=7.8X7.8 L=18 NATURAL IDN
349		BOLT; COVER					
		8-98137-334-0		1312-1403	02	A	IDN
		8-98137-334-0		1404-	02	AB	IDN
4-30		Move to 4-30					
5-01		Move to 5-01					
8-10		Move to 8-10					

https://truckmanualshub.com/

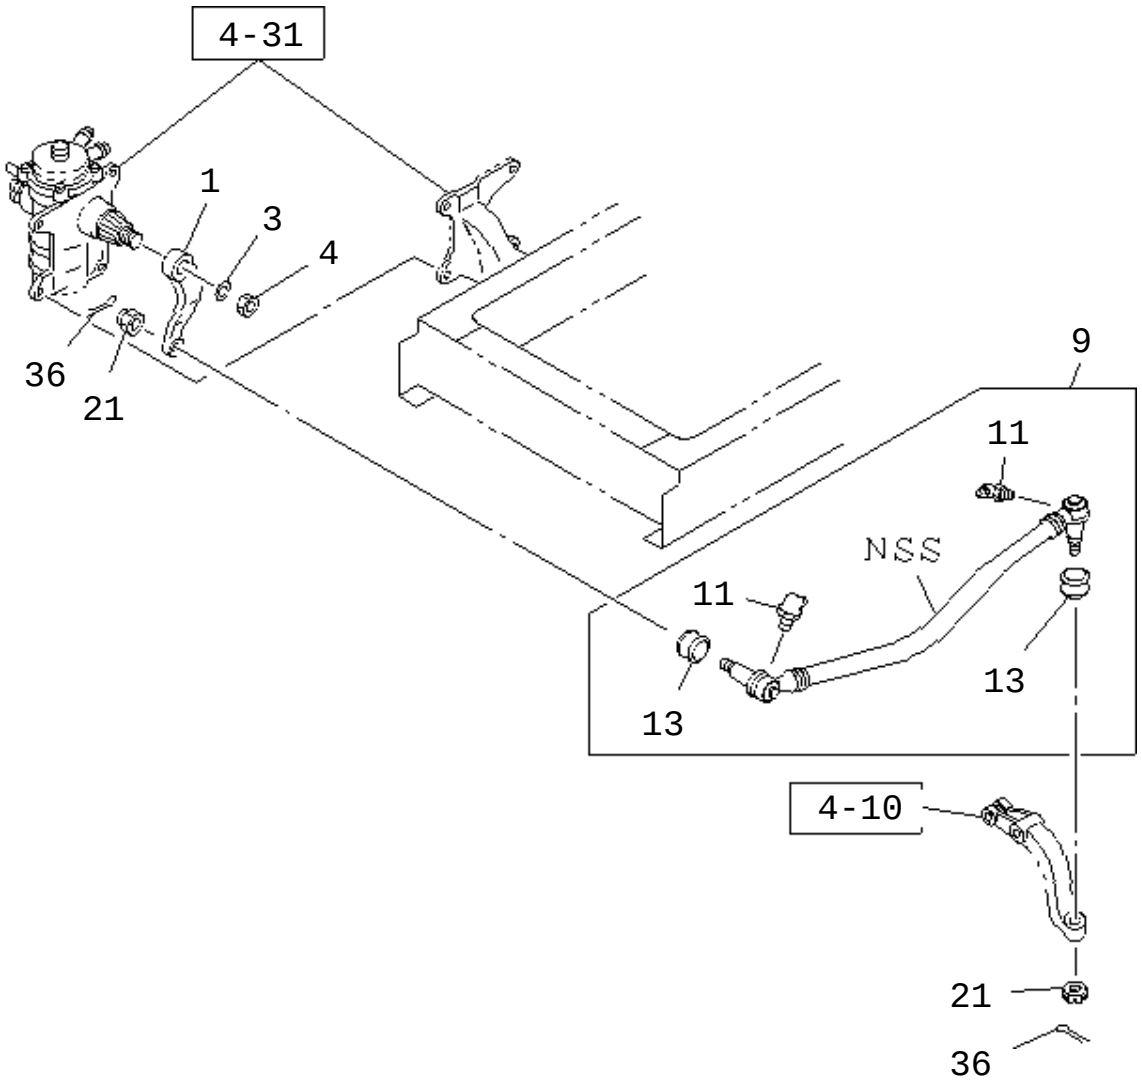



https://truckmanualshub.com/

4-33 STEERING LINKAGE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		ARM; PITMAN,STRG					
		1-44341-423-1		1312-1403	01	A	
		1-44341-423-1		1404-	01	AB	
3		WASHER; LK,PITMAN ARM					
		1-09500-056-0		1312-1403	01	A	
		1-09500-056-0		1404-	01	AB	
4		NUT; PITMAN ARM					
		1-09440-098-0		1312-1403	01	A	M36 FLANGE
		1-09440-098-0		1404-	01	AB	M36 FLANGE
9		LINK; DRAG					
		8-98181-399-0		1312-1403	01	A	
		8-98181-399-0		1404-	01	AB	
11		NIPPLE; GREASE,DRAG LINK					
		8-98160-122-0		1312-1403	02	A	
		8-98160-122-0		1404-	02	AB	
13		BOOT; DRAG LINK					
		1-43159-131-0		1312-1403	02	A	
		1-43159-131-0		1404-	02	AB	
21		NUT; LK,JOINT BALL					
		1-09442-032-0		1312-1403	02	A	M24
		1-09442-032-0		1404-	02	AB	M24
36		PIN; SPLIT,DRAG LINK					
		0-81125-035-0		1312-1403	02	A	OD=4.6 L=35
		0-81125-035-0		1404-	02	AB	OD=4.6 L=35
4-10		Move to 4-10					
4-31		Move to 4-31					

https://truckmanualshub.com/

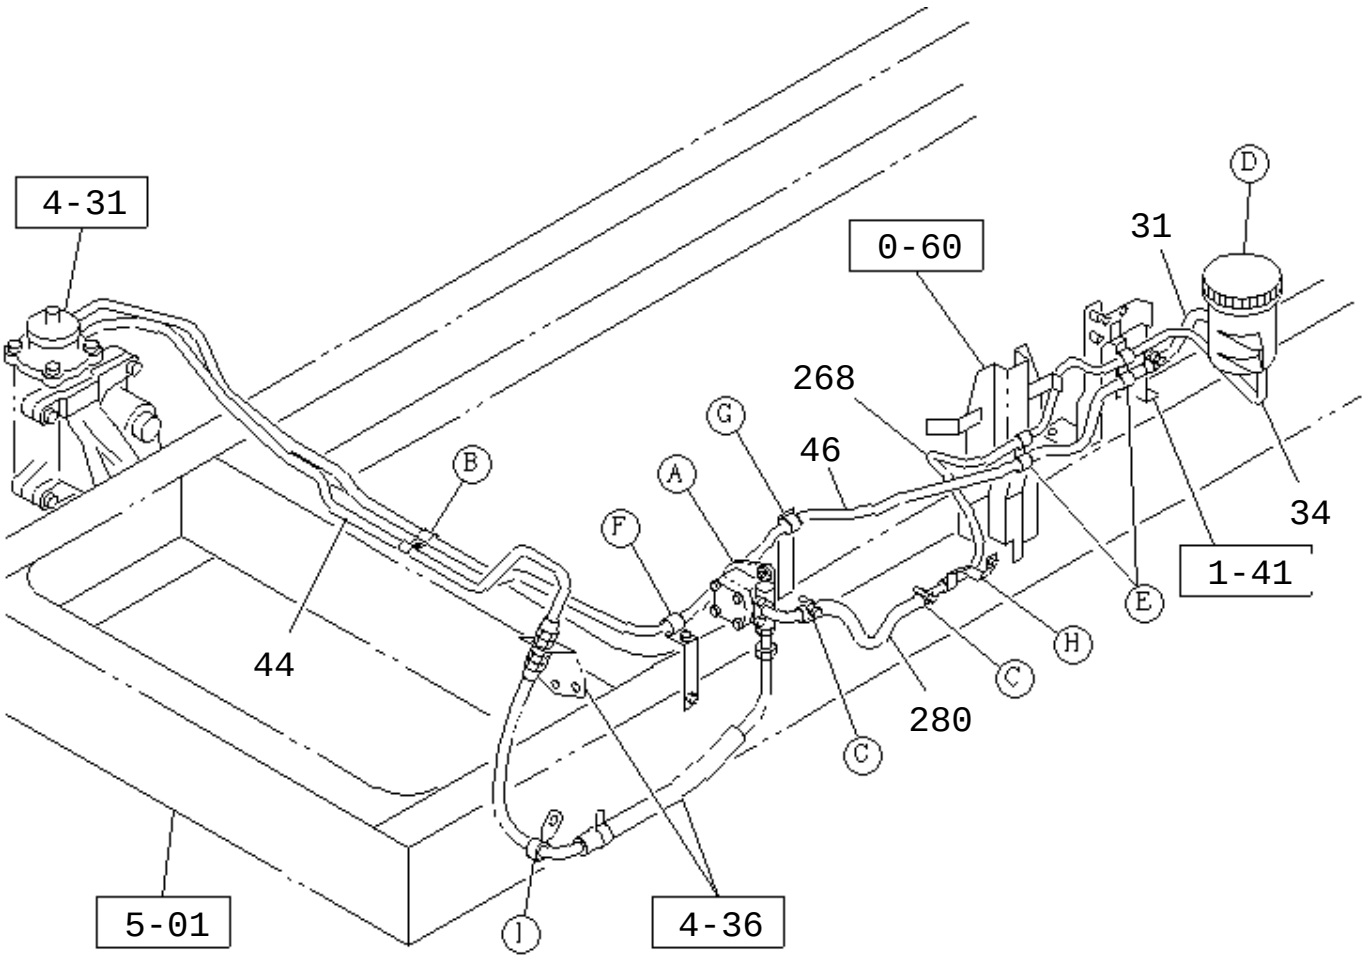

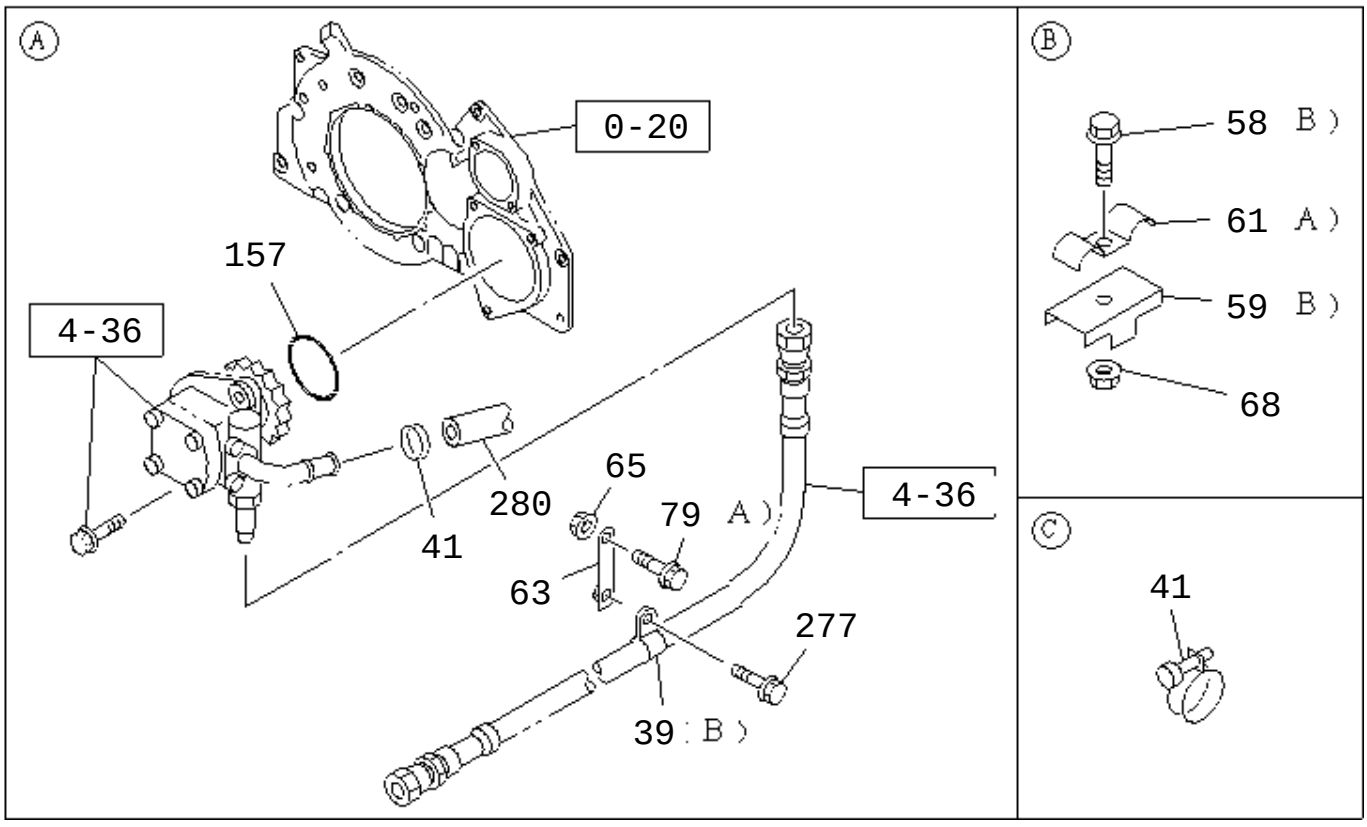

https://truckmanualshub.com/

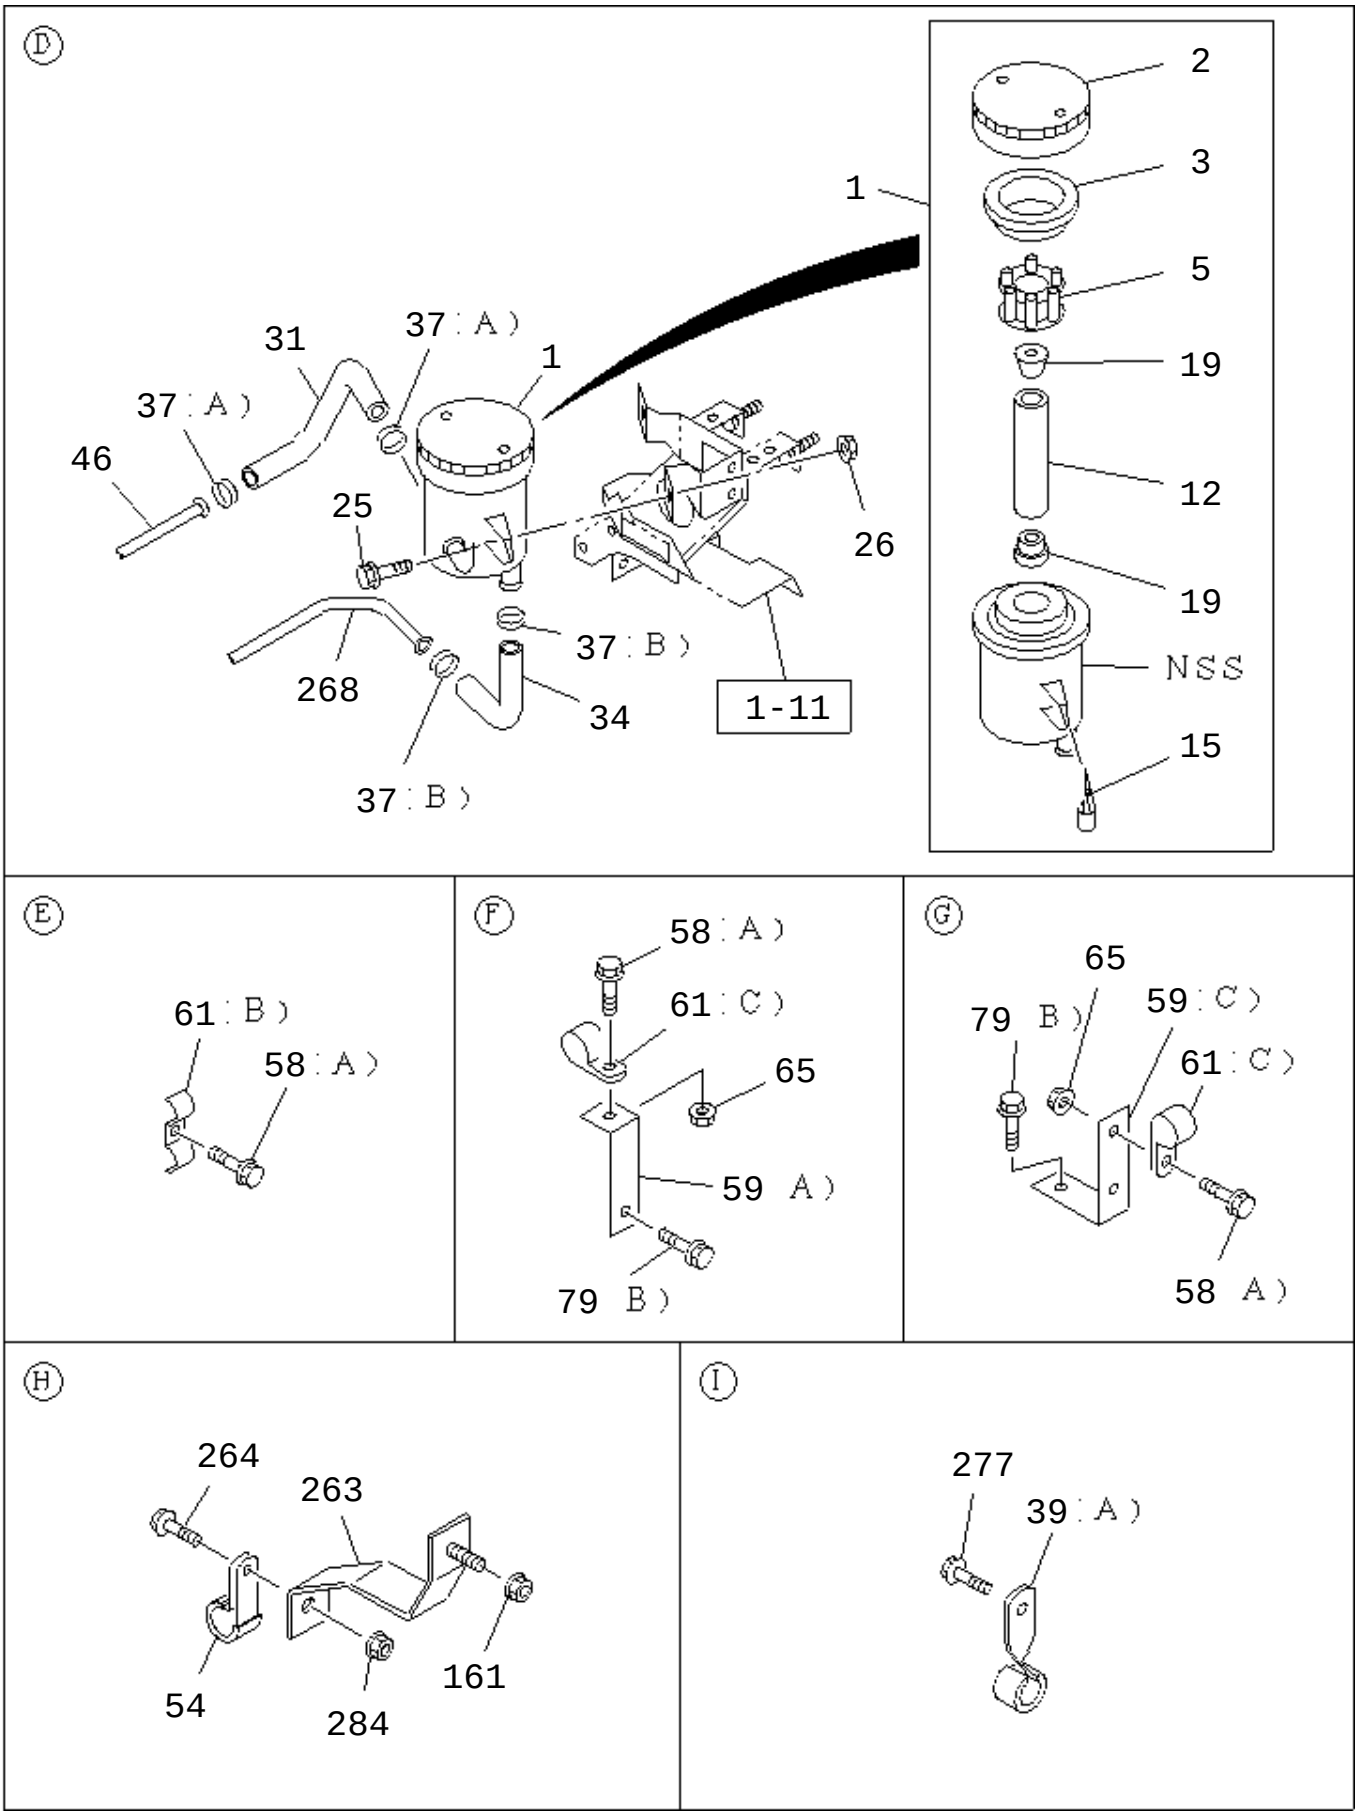

https://truckmanualshub.com/

POWER STEERING CONTROL; CHASSIS SIDE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		TANK ASM; OIL,P/S					
		8-98166-928-0		1312-1403	01	A	IDN
		8-98166-928-0		1404-	01	AB	IDN
2		CAP; OIL TANK,P/S					
		8-98166-876-0		1312-1403	01	A	IDN
		8-98166-876-0		1404-	01	AB	IDN
3		GASKET; OIL TANK,P/S					
		1-21249-003-1		1312-1403	01	A	IDN
		1-21249-003-1		1404-	01	AB	IDN
5		STRAINER; OIL TANK,P/S					
		1-21235-007-1		1312-1403	01	A	IDN
		1-21235-007-1		1404-	01	AB	IDN
12		FILTER; MICROBON,OIL TANK,P/S					
		1-21235-011-0		1312-1403	01	A	IDN
		1-21235-011-0		1404-	01	AB	IDN
15		PLATE; FILTER,OIL TANK					
		1-21249-016-0		1312-1403	02	A	IDN
		1-21249-016-0		1404-	02	AB	IDN
19		SEAT; OIL TANK					
		1-21249-004-0		1312-1403	02	A	IDN
		1-21249-004-0		1404-	02	AB	IDN
25		BOLT; OIL TANK BRKT					
		0-28650-825-0		1312-1403	02	A	M8X25 FLANGE IDN
		0-28650-825-0		1404-	02	AB	M8X25 FLANGE IDN
26		NUT; OIL TANK TO BRKT					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
31		HOSE; P/S OIL TANK,INL					
		8-98092-730-0		1312-1403	01	A	IDN
		8-98092-730-0		1404-	01	AB	IDN
34		HOSE; P/S OIL TANK,OUTLET					
		8-98021-827-0		1312-1403	01	A	IDN
		8-98021-827-0		1404-	01	AB	IDN
37		CLIP; HOSE,P/S					
		1-09704-082-0		1312-1403	02	A	(A) ID=26
		1-09704-082-0		1404-	02	AB	(A) ID=26
		1-09704-085-0		1312-1403	02	A	(B) ID=32
		1-09704-085-0		1404-	02	AB	(B) ID=32
39		CLIP; FLEX HOSE					
		1-09700-733-1		1312-1403	01	A	(A) ID=19 L=58

https://truckmanualshub.com/

POWER STEERING CONTROL; CHASSIS SIDE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
39		1-09700-733-1		1404-	01	AB	(A) ID=19 L=58
		8-94226-553-0		1312-1403	01	A	(B) ID=40
		8-94226-553-0		1404-	01	AB	(B) ID=40
41		CLIP; HOSE,P/S					
		1-09704-085-0		1312-1403	02	A	ID=32
		1-09704-085-0		1404-	02	AB	ID=32
44		PIPE; OIL,P/S UNIT TO NIPPLE					
		8-98075-632-1		1312-1403	01	A	IDN
		8-98075-632-1		1404-	01	AB	IDN
46		PIPE; OIL,P/S UNIT TO OIL TANK					
		8-98092-721-0		1312-1403	01	A	L=2775
		8-98092-721-0		1404-	01	AB	L=2775
54		CLIP; OIL PIPE					
		0-95235-836-0		1312-1403	01	A	ID=19 L=20
		0-95235-836-0		1404-	01	AB	ID=19 L=20
58		BOLT; CLIP					
		0-28050-816-0		1312-1403	02	A	(A) M8X16 FLANGE
		0-28050-816-0		1404-	02	AB	(A) M8X16 FLANGE
		0-28650-820-0		1312-1403	02	A	(A) M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	(A) M8X20 FLANGE IDN
		0-28650-840-0		1312-1403	01	A	(B) M8X40 FLANGE
		0-28650-840-0		1404-	01	AB	(B) M8X40 FLANGE
59		BRACKET; CLIP,OIL PIPE					
		1-47475-427-1		1312-1403	01	A	(B)
		1-47475-427-1		1404-	01	AB	(B)
		1-82699-085-0		1312-1403	01	A	(A) L=95
		1-82699-085-0		1404-	01	AB	(A) L=95
		8-98083-607-0		1312-1403	01	A	(C)
		8-98083-607-0		1404-	01	AB	(C)
61		CLIP; OIL PIPE					
		0-95235-536-0		1312-1403	02	A	(C) ID=16 L=20
		0-95235-536-0		1404-	02	AB	(C) ID=16 L=20

https://truckmanualshub.com/

POWER STEERING CONTROL; CHASSIS SIDE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
61		1-09700-668-0		1312-1403	01	A	(A) ID=16 & 13 L=21.5 & 21.5
		1-09700-668-0		1404-	01	AB	(A) ID=16 & 13 L=21.5 & 21.5
		1-09700-806-1		1312-1403	02	A	(B) ID=19 & 16 L=25 & 20
		1-09700-806-1		1404-	02	AB	(B) ID=19 & 16 L=25 & 20
63		BRACKET; CLIP,P/S					
		1-47476-396-1		1312-1403	01	A	
		1-47476-396-1		1404-	01	AB	
65		NUT; BRKT					
		0-91180-108-0		1312-1403	03	A	M8 FLANGE
		0-91180-108-0		1404-	03	AB	M8 FLANGE
68		NUT; CLIP,OIL PIPE					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
79		BOLT; BRKT					
		0-28650-820-0		1312-1403	01	A	(A) M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	AB	(A) M8X20 FLANGE IDN
		0-28650-825-0		1312-1403	01	A	(B) M8X25 FLANGE IDN
		0-28650-825-0		1404-	01	AB	(B) M8X25 FLANGE IDN
		0-28650-830-0		1312-1403	01	A	(B) M8X30 FLANGE
		0-28650-830-0		1404-	01	AB	(B) M8X30 FLANGE
157		GASKET; P/S PUMP					ALSO INCLUDED IN GASKET SET(ENGINE).
		1-09623-467-0		1312-1403	01	A	ID=96.4
		1-09623-467-0		1404-	01	AB	ID=96.4
161		NUT; P/S PIPE					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
263		BRACKET; P/S PIPE					
		8-98096-820-1		1312-1403	01	A	
		8-98096-820-1		1404-	01	AB	
264		BOLT; PIPE BRKT					
		0-28650-820-0		1312-1403	01	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	01	AB	M8X20 FLANGE IDN
268		PIPE; OIL,FLEX HOSE TO FLEX HOSE					
		8-98154-047-0		1312-1403	01	A	
		8-98154-047-0		1404-	01	AB	
277		BOLT; HOSE CLIP					
		0-28050-816-0		1312-1403	02	A	M8X16 FLANGE


https://truckmanualshub.com/

POWER STEERING CONTROL; CHASSIS SIDE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
277		0-28050-816-0		1404-	02	AB	M8X16 FLANGE
280		HOSE; P/S OIL PUMP,INL					
		8-98090-818-0		1312-1403	01	A	IDN
		8-98090-818-0		1404-	01	AB	IDN
284		NUT; PIPE					
		0-91180-108-0		1312-1403	01	A	M8 FLANGE
		0-91180-108-0		1404-	01	AB	M8 FLANGE
0-20		Move to 0-20					
0-60		Move to 0-60					
1-41		Move to 1-41					
4-31		Move to 4-31					
4-36		Move to 4-36					
5-01		Move to 5-01					
1-11		Move to 1-11					

https://truckmanualshub.com/

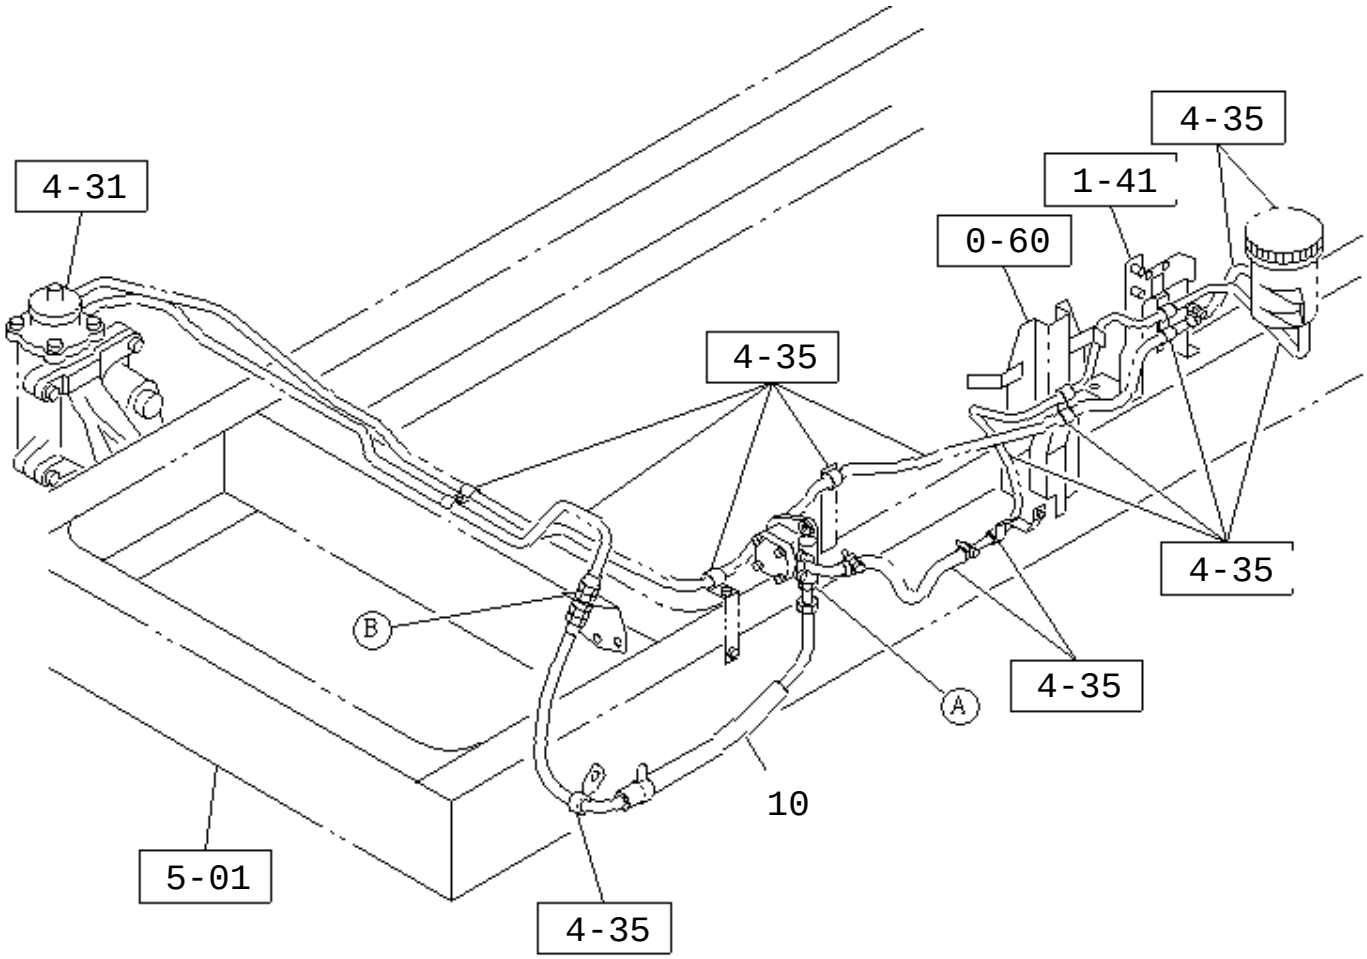

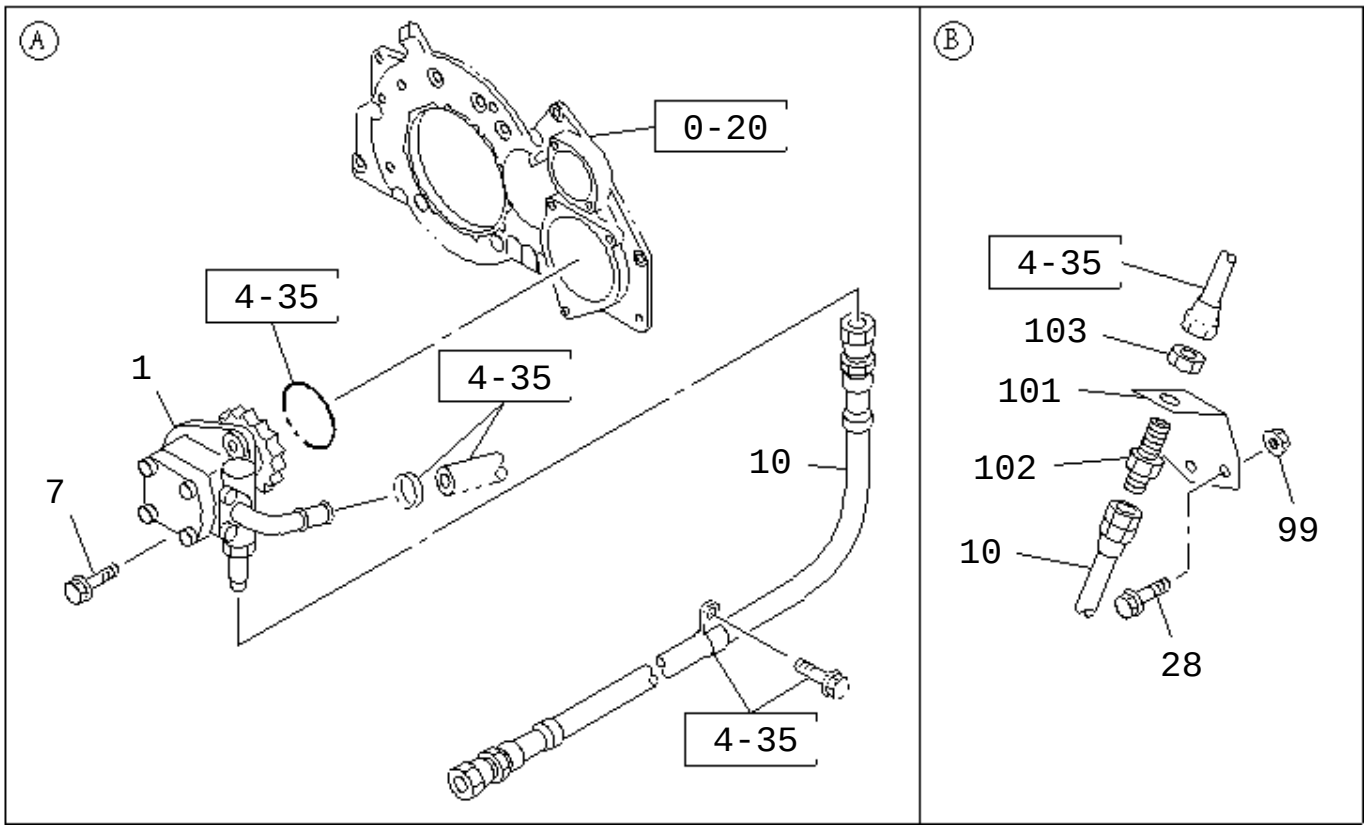


https://truckmanualshub.com/


POWER STEERING CONTROL; ENGINE SIDE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	D	PUMP ASM; OIL,P/S					SEE FIG-NO 4-42 FOR COMPONENT.
		1-19500-629-1		1312-1403	01	A	
		1-19500-629-1		1404-	01	AB	
7		BOLT; OIL PUMP,P/S					
		8-97365-449-0		1312-1403	02	A	M10X55 FLANGE
		8-97365-449-0		1404-	02	AB	M10X55 FLANGE
10		HOSE; FLEX,P/S OIL PUMP,INL					
		8-98060-231-2		1312-1403	01	A	
		8-98060-231-2		1404-	01	AB	
28		BOLT; BRKT,FLEX HOSE,P/S					
		0-28650-820-0		1312-1403	02	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	M8X20 FLANGE IDN
99		NUT; BRKT,FLEX HOSE,P/S					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
101		BRACKET; UNION					
		8-98052-888-1		1312-1403	01	A	
		8-98052-888-1		1404-	01	AB	
102		UNION					
		1-09654-167-1		1312-1403	01	A	M20 & M22 STRAIGHT
		1-09654-167-1		1404-	01	AB	M20 & M22 STRAIGHT
103		NUT; UNION					
		0-91111-522-0		1312-1403	01	A	M22
		0-91111-522-0		1404-	01	AB	M22
0-20		Move to 0-20					
0-60		Move to 0-60					
1-41		Move to 1-41					
4-31		Move to 4-31					
4-35		Move to 4-35					
5-01		Move to 5-01					

https://truckmanualshub.com/

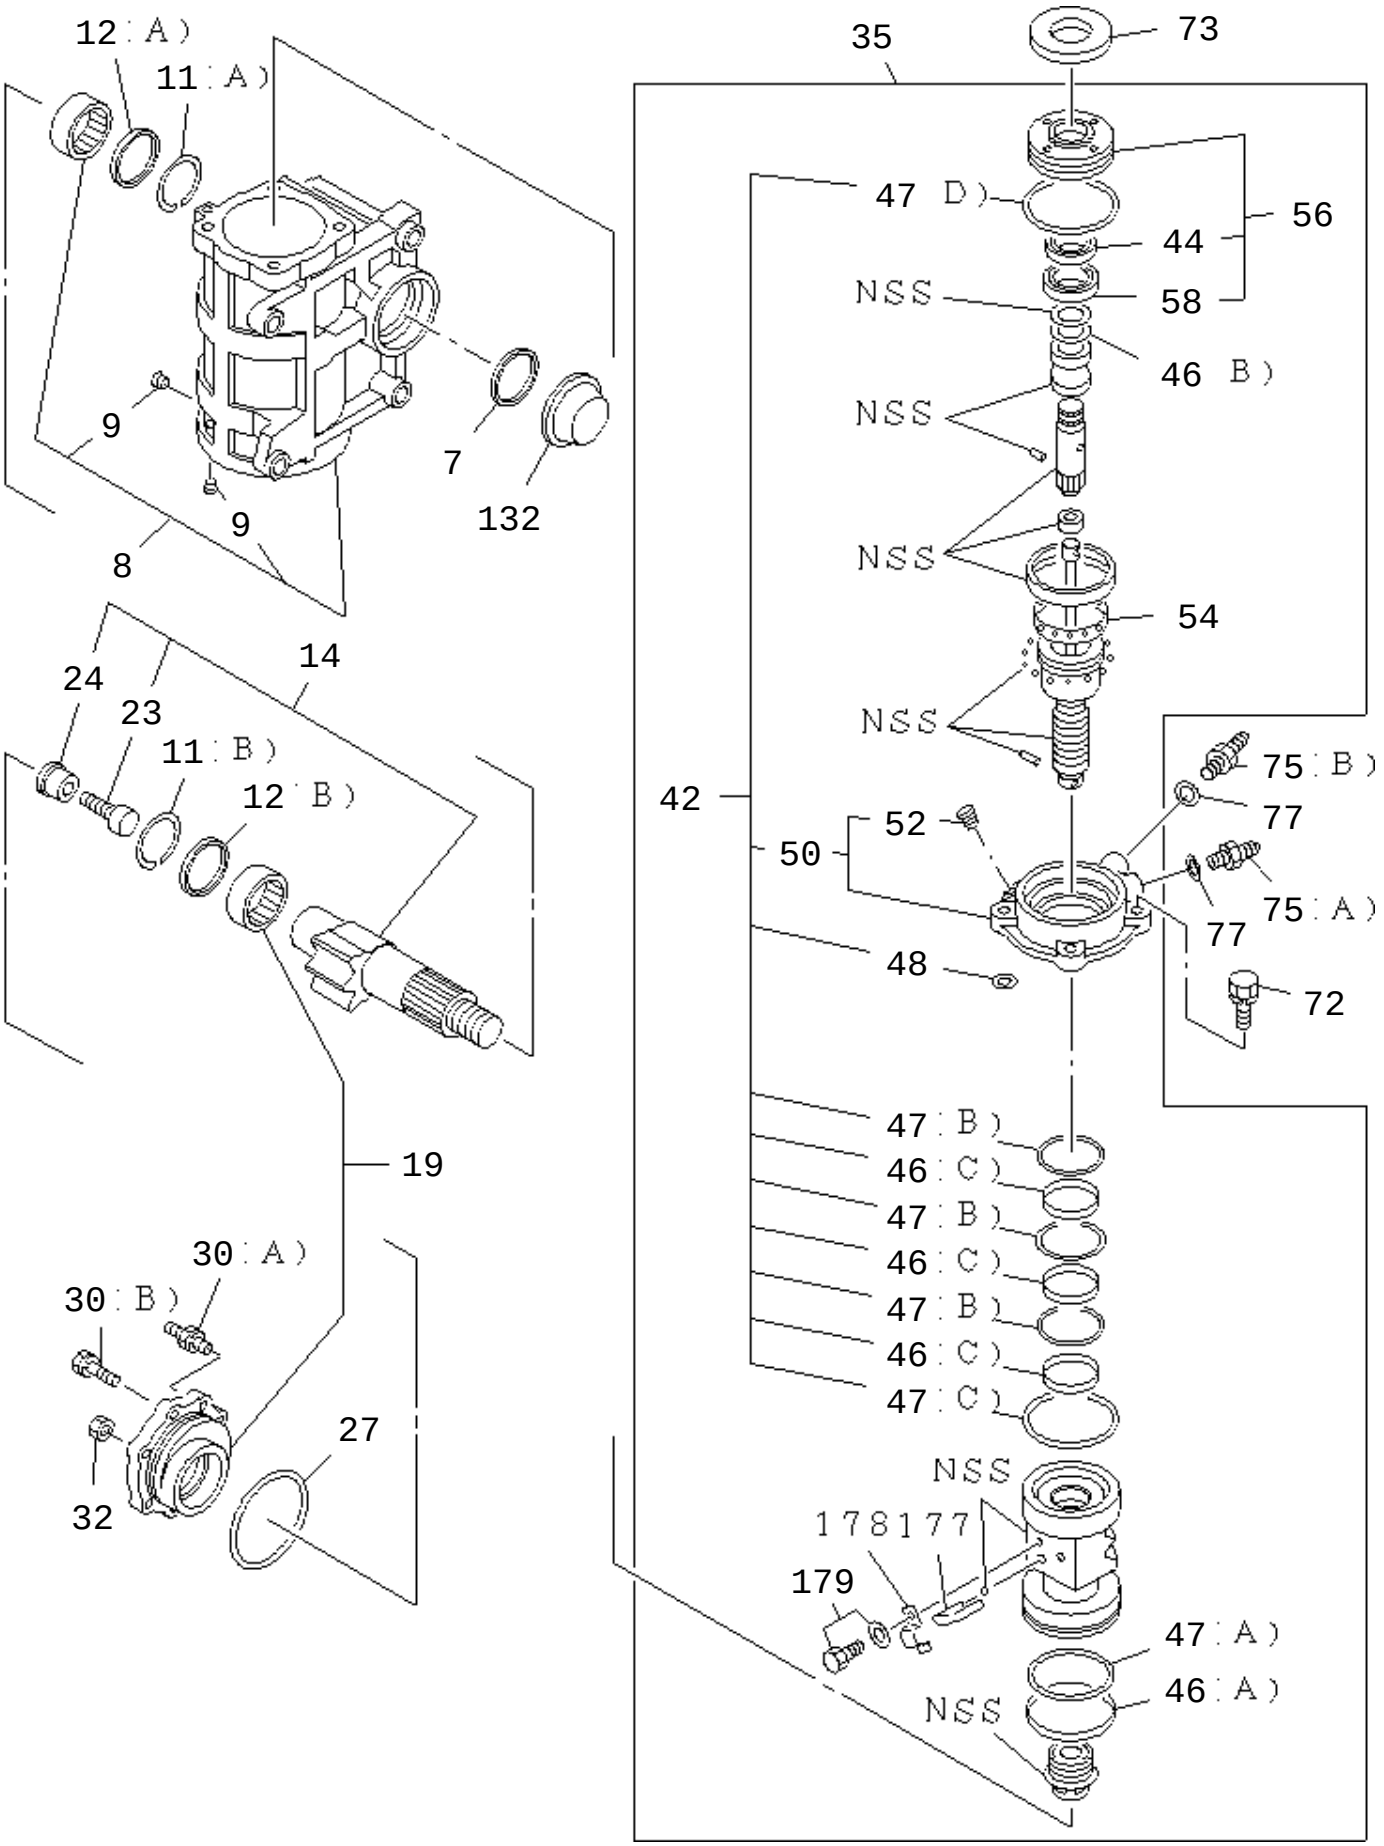

https://truckmanualshub.com/

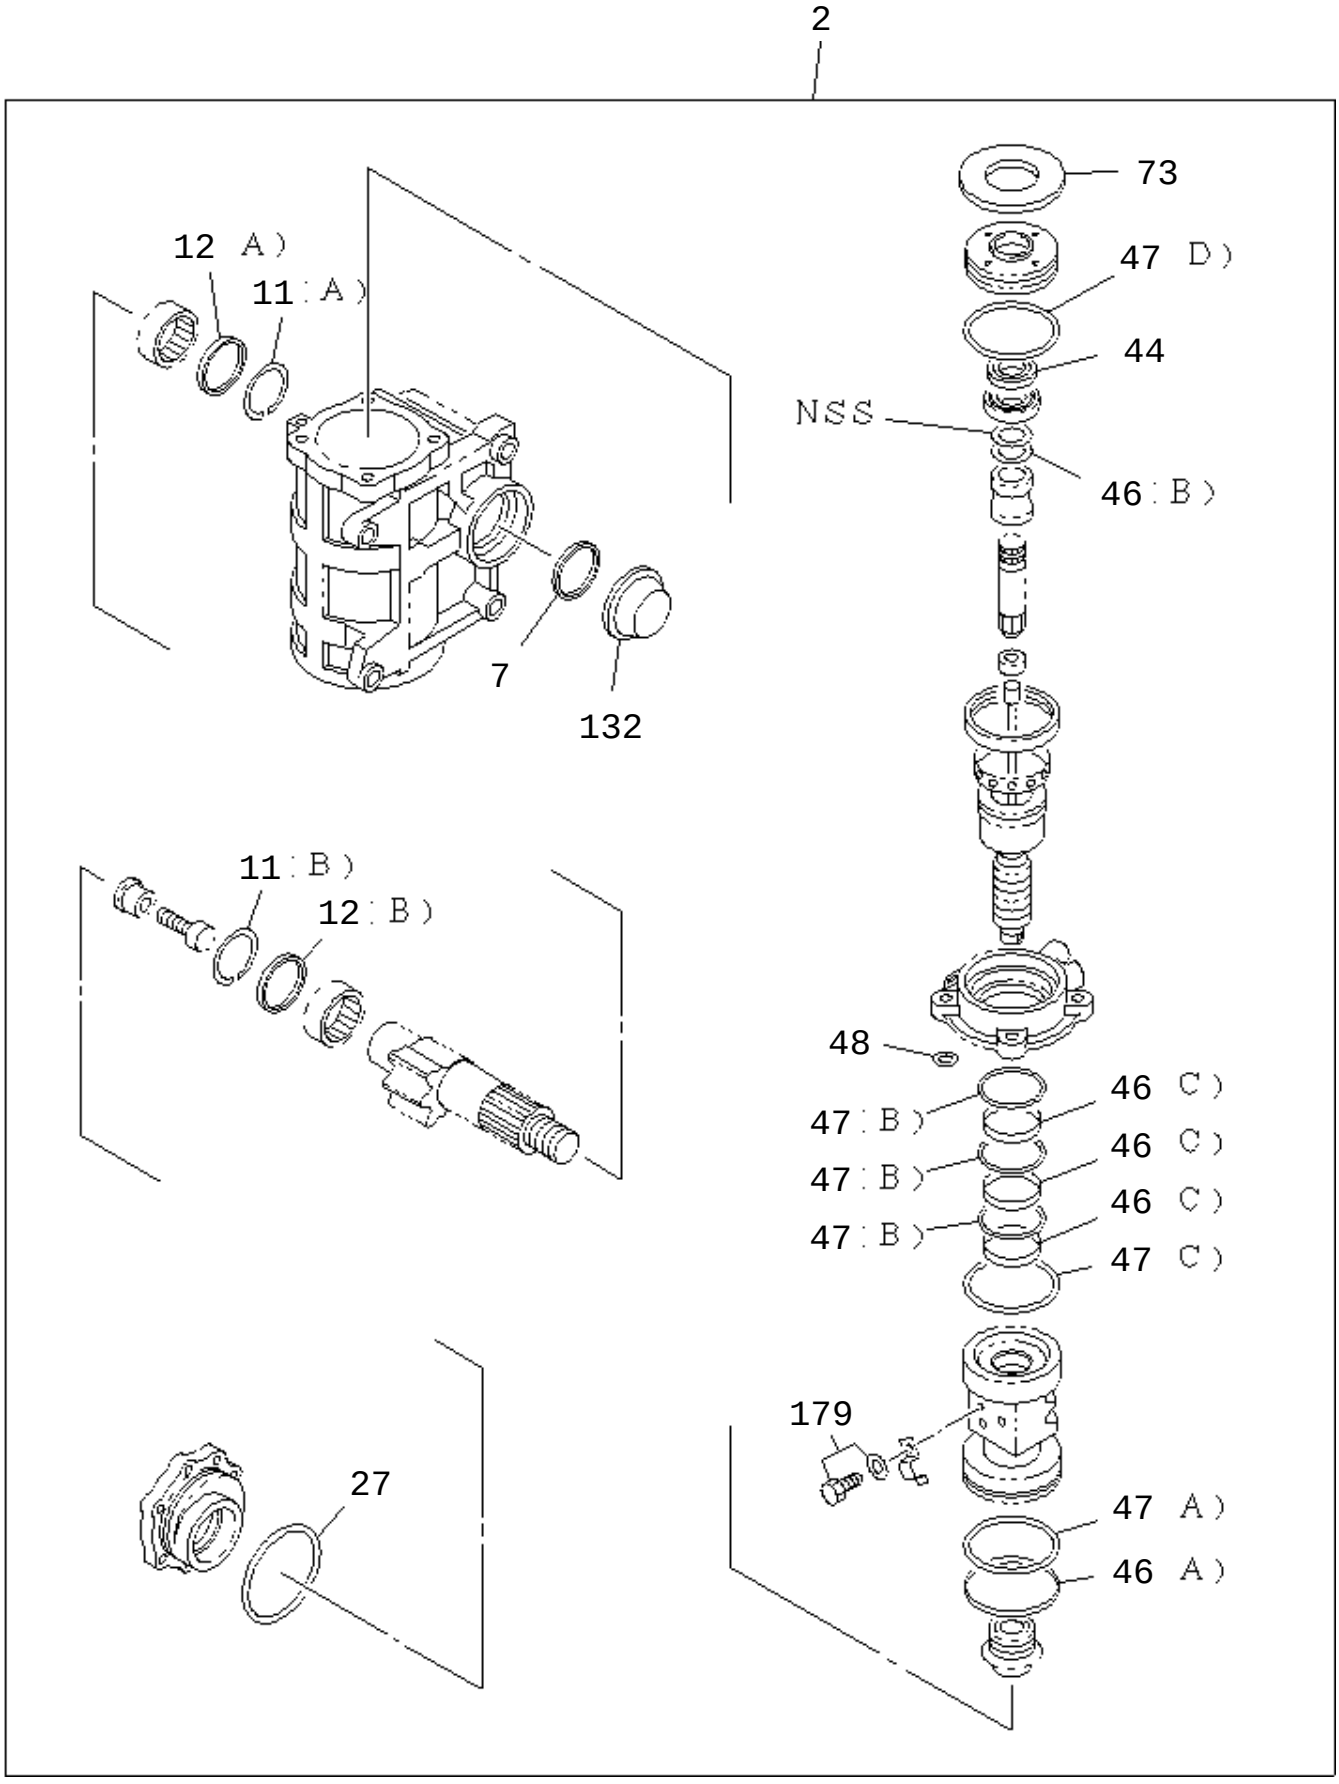

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	RESTRICTION/REMARKS A 1440009531
2	B	REPAIR KIT; STRG UNIT,2 YEAR				
		8-98095-830-0			01	2 YEAR IDN
		8-98095-830-0			01	2 YEAR IDN
7		SEAL; SECTOR SHAFT,STRG UNIT				
		8-98159-116-0			01	IDN
		8-98159-116-0			01	IDN
8		BOX ASM; STRG UNIT				
		8-98159-752-0			01	IDN
		8-98159-752-0			01	IDN
9		PLUG; FILLER,STRG UNIT				
		1-44519-071-0			02	IDN
		1-44519-071-0			02	IDN
11		RING; BACKUP,STRG UNIT				
		1-44249-075-0			01	(A) IDN
		1-44249-075-0			01	(A) IDN
		1-44519-103-0			01	(B) IDN
		1-44519-103-0			01	(B) IDN
12		GASKET; SHAFT,STRG UNIT				
		1-44249-076-0			01	(A) IDN
		1-44249-076-0			01	(A) IDN
		1-44519-226-0			01	(B) IDN
		1-44519-226-0			01	(B) IDN
14		SHAFT; SECTOR,STRG UNIT				
		1-44320-003-0			01	IDN
		1-44320-003-0			01	IDN
19		COVER; SIDE STRG UNIT				
		8-98159-763-0			01	IDN
		8-98159-763-0			01	IDN
23		SCREW; ADJ,SECTOR SHAFT,STRG UNIT				
		1-44277-003-1			01	IDN
		1-44277-003-1			01	IDN
24		RETAINER; STRG UNIT				
		1-44279-011-0			01	IDN
		1-44279-011-0			01	IDN
27		GASKET; SIDE COVER,STRG UNIT				
		1-44269-035-0			01	IDN
		1-44269-035-0			01	IDN
30		BOLT; COVER STRG UNIT				
		1-19519-121-0			03	(A) IDN
		1-19519-121-0			03	(A) IDN
		1-44279-012-0			05	(B) IDN
		1-44279-012-0			05	(B) IDN
32		NUT; ADJ SCREW,STRG UNIT				
		1-44269-037-0			01	IDN
		1-44269-037-0			01	IDN
35		HOUSING & SCREW ASM; STRG UNIT				
		8-98095-563-0			01	IDN
		8-98095-563-0			01	IDN
42		HOUSING & SEAL ASM; STRG UNIT				
		1-44560-073-0			01	IDN
		1-44560-073-0			01	IDN
44		SEAL; OIL,SHAFT STRG UNIT				
		1-44259-036-1			01	IDN
		1-44259-036-1			01	IDN
46		SEAL; RING,HSG STRG UNIT				
		1-44159-037-0			01	(A) IDN
		1-44159-037-0			01	(A) IDN


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	RESTRICTION/REMARKS A 1440009531
46		1-44519-096-0			01	(B) IDN
		1-44519-096-0			01	(B) IDN
		1-44519-255-0			03	(C) IDN
		1-44519-255-0			03	(C) IDN
47		GASKET; HSG,STRG UNIT				
		1-44159-036-0			01	(A) IDN
		1-44159-036-0			01	(A) IDN
		1-44519-101-0			03	(B) IDN
		1-44519-101-0			03	(B) IDN
		1-44519-116-0			01	(C) IDN
		1-44519-116-0			01	(C) IDN
		1-44519-260-0			01	(D) IDN
		1-44519-260-0			01	(D) IDN
48		GASKET; HSG,STRG UNIT				
		1-44519-262-0			01	IDN
		1-44519-262-0			01	IDN
50		HOUSING ASM; VALVE STRG UNIT				
		1-44560-072-0			01	IDN
		1-44560-072-0			01	IDN
52		PLUG; HSG STRG UNIT				
		1-44519-071-0			01	IDN
		1-44519-071-0			01	IDN
54		CASE; BEARING STRG UNIT				
		1-44241-088-0			01	IDN
		1-44241-088-0			01	IDN
56		PLUG & SEAL ASM; STRG UNIT				
		1-44250-006-1			01	IDN
		1-44250-006-1			01	IDN
58		BEARING; HSG STRG UNIT				
		1-44259-029-0			01	IDN
		1-44259-029-0			01	IDN
72		BOLT; HSG FIX STRG UNIT				
		1-44259-017-0			04	IDN
		1-44259-017-0			04	IDN
73		COVER; DUST,STRG UNIT				
		8-98074-089-0			01	IDN
		8-98074-089-0			01	IDN
75		CONNECTOR; HSG STRG UNIT				
		1-44259-034-1			01	(A) M20X1.5 IDN
		1-44259-034-1			01	(A) M20X1.5 IDN
		1-44259-035-1			01	(B) M22X1.5 IDN
		1-44259-035-1			01	(B) M22X1.5 IDN
77		GASKET; CONNECTOR,STRG UNIT				
		9-89970-787-0			02	IDN
		9-89970-787-0			02	IDN
132		COVER; DUST,STRG UNIT				
		1-44519-227-0			01	IDN
		1-44519-227-0			01	IDN
177		TUBE; BALL BRG STRG UNIT				
		1-44159-032-0			02	IDN
		1-44159-032-0			02	IDN
178		CLIP; BALL TUBE STRG UNIT				
		1-44159-034-0			01	IDN
		1-44159-034-0			01	IDN

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty for ASM A	RESTRICTION/REMARKS A 1440009531
179		SCREW; CLIP STRG UNIT 1-09000-610-0 1-09000-610-0			 02 02	 IDN IDN

https://truckmanualshub.com/

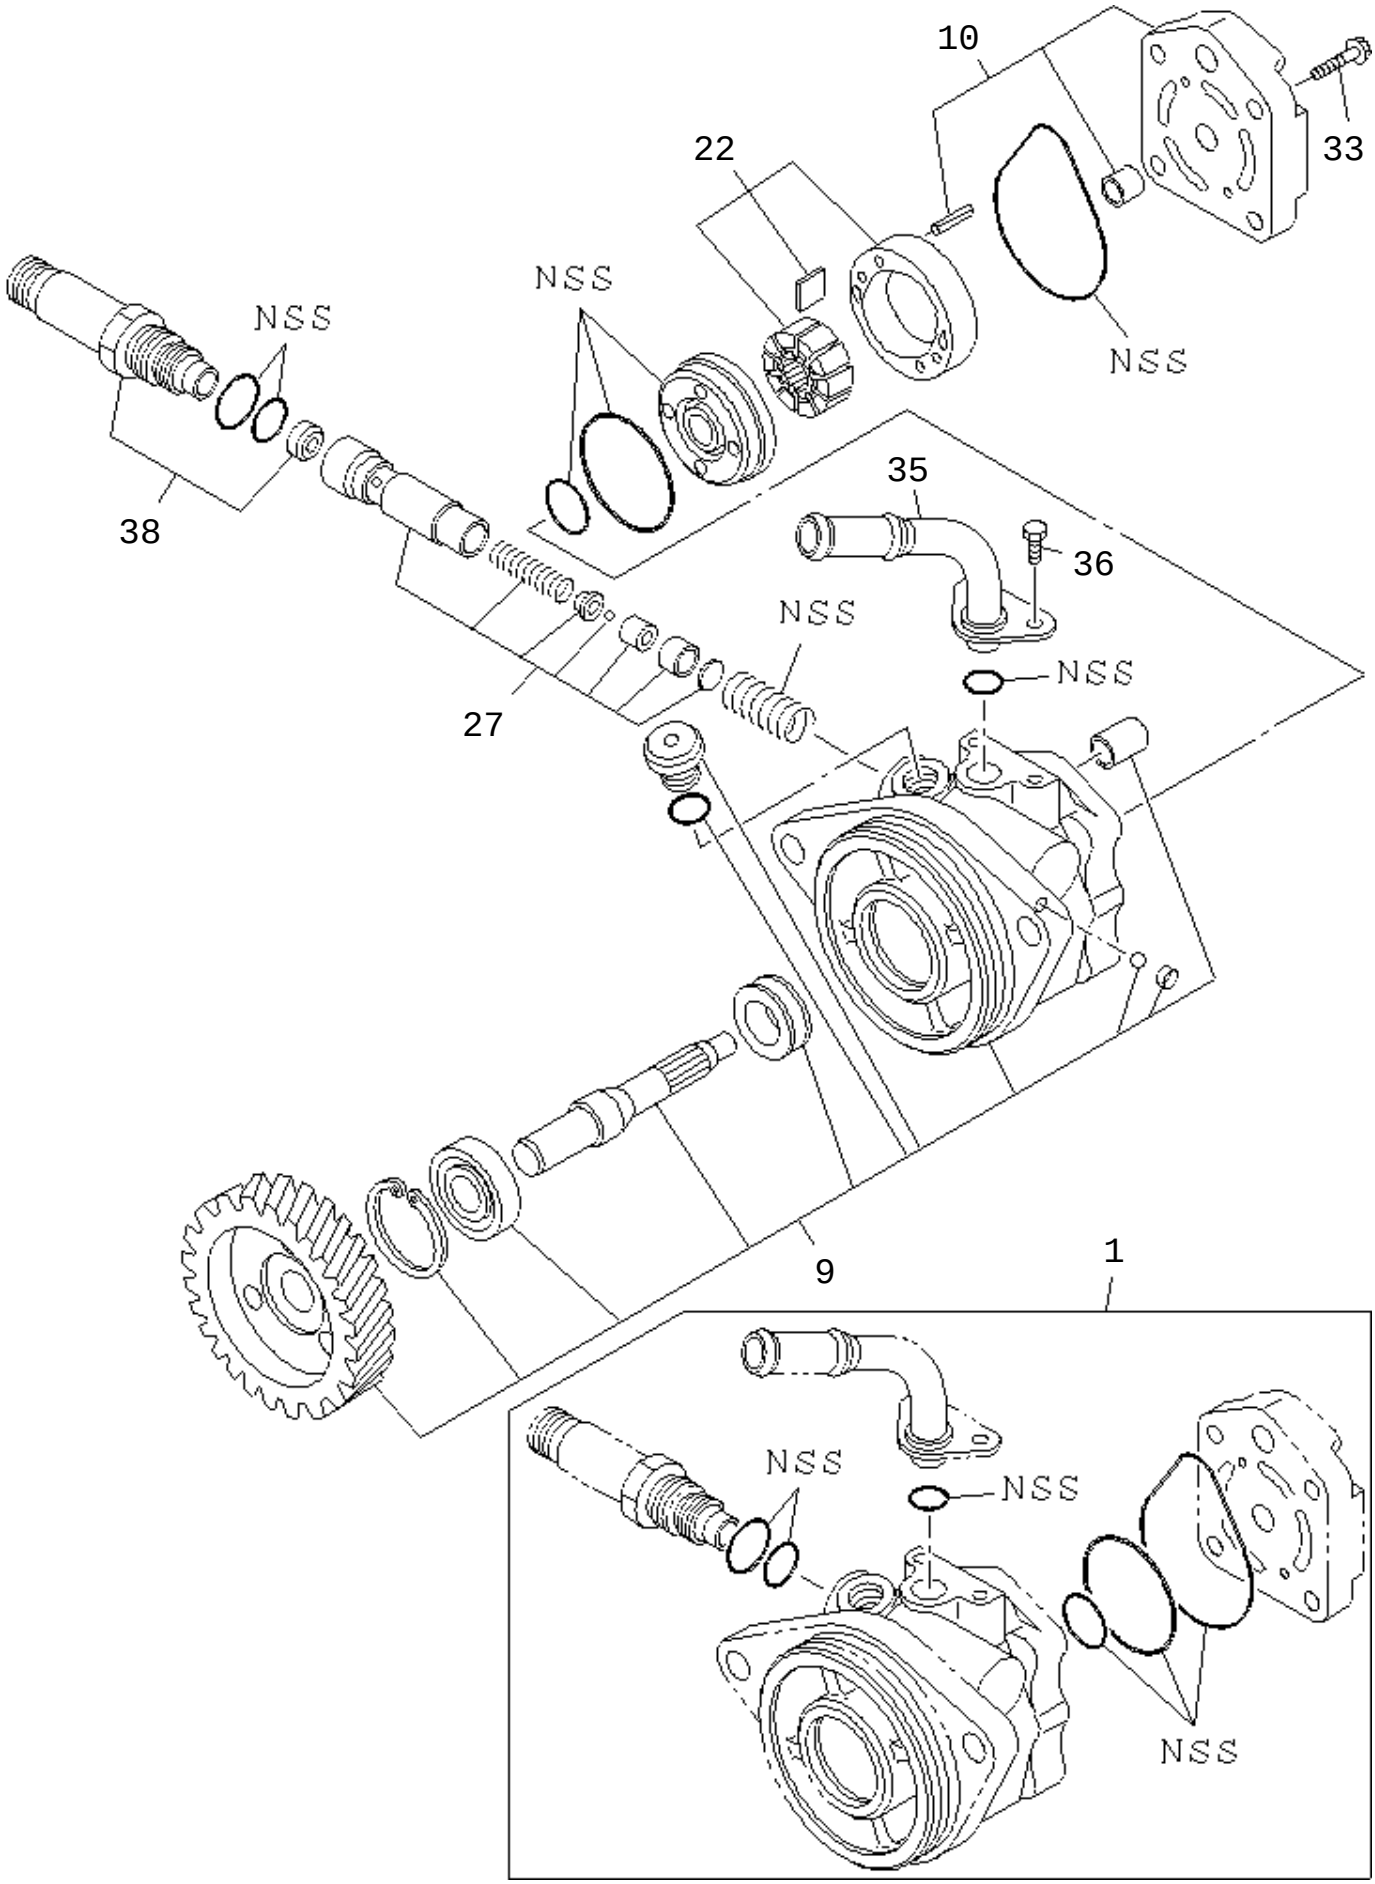


https://truckmanualshub.com/

POWER STEERING OIL PUMP

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	RESTRICTION/REMARKS A 1195006291
1	B	REPAIR KIT; OIL PUMP				
		8-98077-484-0			01	
		8-98077-484-0			01	
9		BODY ASM; FRT,OIL PUMP				
		8-98077-485-0			01	
		8-98077-485-0			01	
10		BODY ASM; RR,OIL PUMP				
		8-98077-477-0			01	
		8-98077-477-0			01	
22		CARTRIDGE ASM; OIL PUMP				
		8-98077-476-0			01	
		8-98077-476-0			01	
27		VALVE ASM; OIL PUMP				
		8-98077-479-0			01	
		8-98077-479-0			01	
33		BOLT; COVER				
		8-98077-478-0			04	
		8-98077-478-0			04	
35		PIPE; HOSE CONN,OIL PUMP				
		8-98077-482-0			01	
		8-98077-482-0			01	
36		BOLT; CONN,PIPE				
		8-97184-763-0			02	
		8-97184-763-0			02	
38		CONNECTOR; OIL PUMP				
		8-98077-481-0			01	
		8-98077-481-0			01	

https://truckmanualshub.com/

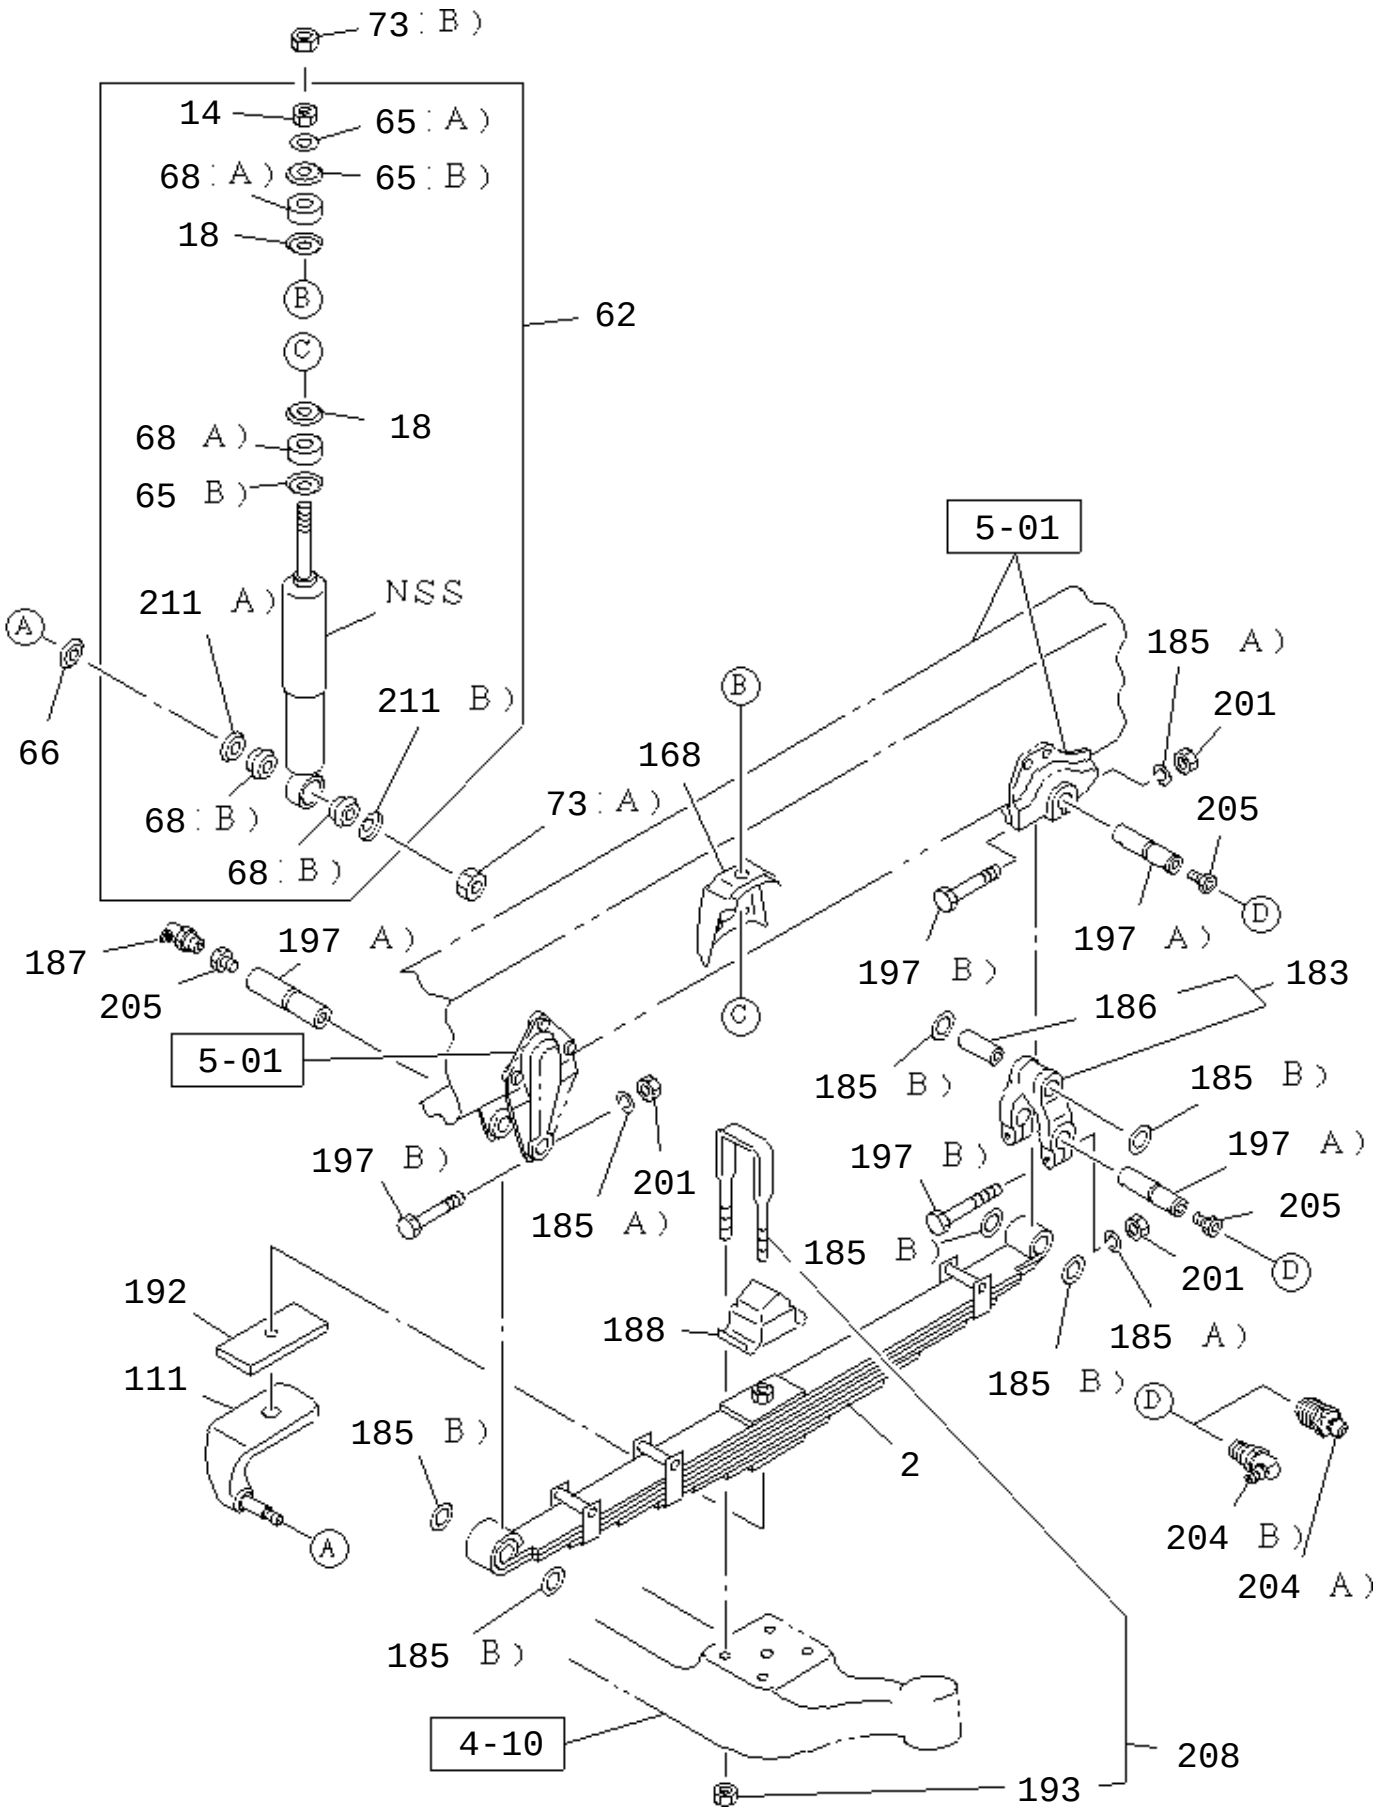

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
2		SPRING ASM; LEAF,FRT						SEE FIG-NO 4-55 FOR COMPONENT.
		8-98029-096-0		1405-		02	A	MIXER CHASSIS<6NR> 7-LEAF IDN
		8-98029-096-0		1405-		02	B	7-LEAF IDN
		8-98167-308-0		1312-1403		02	A	IDN
		8-98167-308-0		1404-1404		02	AB	IDN
		8-98167-308-0		1405-		02	A	EXC. MIXER CHASSIS<6NR> 7-LEAF IDN
14		NUT; S/ABS,UPR						
		9-99111-414-0		1312-1403		02	A	M14
		9-99111-414-0		1404-		02	AB	M14
18		WASHER; CENTERING,S/ABS						
		9-51631-041-0		1405-		04	A	MIXER CHASSIS<6NR> ID=20.8 IDN
		9-51631-041-0		1405-		04	B	ID=20.8 IDN
		1-51631-067-0		1312-1403		04	A	ID=24
		1-51631-067-0		1404-1404		04	AB	ID=24
		1-51631-067-0		1405-		04	A	EXC. MIXER CHASSIS<6NR> ID=24
62	B	ABSORBER ASM; SHOCK,FRT						
		1-51630-579-0		1405-		02	A	MIXER CHASSIS<6NR> IDN
		1-51630-579-0		1405-		02	B	IDN
		1-51630-512-0		1312-1403		02	A	IDN
		1-51630-512-0		1404-1404		02	AB	IDN
		1-51630-512-0		1405-		02	A	EXC. MIXER CHASSIS<6NR> IDN
65		WASHER; S/ABS						
		9-51631-040-0		1405-		04	A	MIXER CHASSIS<6NR> (A) ID=16.5 IDN
		9-51631-040-0		1405-		04	B	(A) ID=16.5 IDN
		1-09503-266-0		1312-1403		02	A	(A) ID=16.5
		1-09503-266-0		1404-1404		02	AB	(A) ID=16.5
		1-09503-266-0		1405-		02	A	EXC. MIXER CHASSIS<6NR> (A) ID=16.5
		1-51631-068-0		1312-1403		04	A	(B) ID=16.5
		1-51631-068-0		1404-1404		04	AB	(B) ID=16.5
		1-51631-068-0		1405-		04	A	EXC. MIXER CHASSIS<6NR> (B) ID=16.5
66		WASHER; LK,S/ABS SETTING						
		0-91610-520-0		1312-1403		02	A	ID=21


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
66		0-91610-520-0		1404-		02	AB	ID=21
68		BUSHING; S/ABS						
		9-51631-039-0		1405-		04	A	MIXER CHASSIS<6NR> (A) IDN
		9-51631-039-0		1405-		04	B	(A) IDN
		1-51631-069-0		1312-1403		04	A	(A) ID=16 T=25
		1-51631-069-0		1404-1404		04	AB	(A) ID=16 T=25
		1-51631-069-0		1405-		04	A	EXC. MIXER CHASSIS<6NR> (A) ID=16 T=25
		9-51631-026-0		1312-1403		04	A	(B)
		9-51631-026-0		1404-		04	AB	(B)
73		NUT; BRKT,SHOCK						
		0-91110-520-0		1312-1403		02	A	(A) M20
		0-91110-520-0		1404-		02	AB	(A) M20
		0-91111-514-0		1312-1403		02	A	(B) M14
		0-91111-514-0		1404-		02	AB	(B) M14
111		SUPPORTER; S/ABS,FRT SUSP						
		8-98121-195-0		1312-1403	L	01	A	
		8-98121-195-0		1404-	L	01	AB	
		8-98121-193-0		1312-1403	R	01	A	
		8-98121-193-0		1404-	R	01	AB	
168		BRACKET; S/ABS,FRT SUSP						
		8-97695-128-0		1312-		02	A	WHEEL BASE 5300MM(53W) IDN
		1-51681-616-0		1312-1401		02	A	WHEEL BASE 7100MM(71W)
		1-51681-616-0		1402-1403		02	A	WHEEL BASE 4700MM(47W),WHEEL BASE 710
		1-51681-616-0		1404-		02	A	WHEEL BASE 4700MM(47W),WHEEL BASE 710
		1-51681-616-0		1404-		02	B	
183		SHACKLE; FRT SUSP						
		1-51162-029-5		1312-1403		02	A	
		1-51162-029-5		1404-		02	AB	
185		WASHER; LK,PIN						
		1-51169-018-0		1312-1403		12	A	(B) ID=32.4
		1-51169-018-0		1404-		12	AB	(B) ID=32.4
		8-98179-315-0		1312-1403		12	A	(A) ID=12.2
		8-98179-315-0		1404-		12	AB	(A) ID=12.2
186	B	BUSHING; SHACKLE						
		8-98081-829-0		1312-1403		02	A	OD=38
		8-98081-829-0		1404-		02	AB	OD=38
187		NIPPLE; GREASE,FRT						
		0-90301-610-0		1312-1403		02	A	PT1/8 ELBOW
		0-90301-610-0		1404-		02	AB	PT1/8 ELBOW
188		RUBBER; CLAMP,U-BOLT,FRT SPR						


https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
188		1-51172-125-1		1312-1403		02	A	IDN
		1-51172-125-1		1404-		02	AB	IDN
192		PIECE; DIST						
		1-51177-284-1		1312-1403		AR	A	80X144 ID=17.5
		1-51177-284-1		1404-		AR	AB	80X144 ID=17.5
193		NUT; U BOLT						
		8-98179-318-0		1312-1403		08	A	M22
		8-98179-318-0		1404-		08	AB	M22
197		PIN; FRT SPR,FRT						
		0-10856-280-0		1312-1403		12	A	(B) M12X80
		0-10856-280-0		1404-		12	AB	(B) M12X80
		8-97948-141-0		1312-1403		06	A	(A) IDN
		8-97948-141-0		1404-		06	AB	(A) IDN
201		NUT; PIN LK						
		0-91110-512-0		1312-1403		12	A	M12
		0-91110-512-0		1404-		12	AB	M12
204		NIPPLE; GREASE,RR						
		0-90301-410-0		1312-1403		02	A	(A) PT1/8 STRAIGHT
		0-90301-410-0		1404-		02	AB	(A) PT1/8 STRAIGHT
		0-90301-510-0		1312-1403		02	A	(B) PT1/8 ELBOW 67.5 DEGREES
		0-90301-510-0		1404-		02	AB	(B) PT1/8 ELBOW 67.5 DEGREES
205		ATTACHMENT; GREASE NIPPLE						
		9-43165-001-0		1312-1403		06	A	
		9-43165-001-0		1404-		06	AB	
208		U-BOLT SET; FRT SPRING						
		1-87870-498-0		1312-1401		04	A	L=210
		1-87870-493-0		1402-1403		04	A	L=230
		1-87870-493-0		1404-		04	AB	L=230
211		WASHER; BRKT,SHOCK						
		9-51631-027-0		1312-1403		02	A	(A) ID=27
		9-51631-027-0		1404-		02	AB	(A) ID=27
		9-51631-028-0		1312-1403		02	A	(B) ID=21
		9-51631-028-0		1404-		02	AB	(B) ID=21
4-10		Move to 4-10						
5-01		Move to 5-01						

https://truckmanualshub.com/

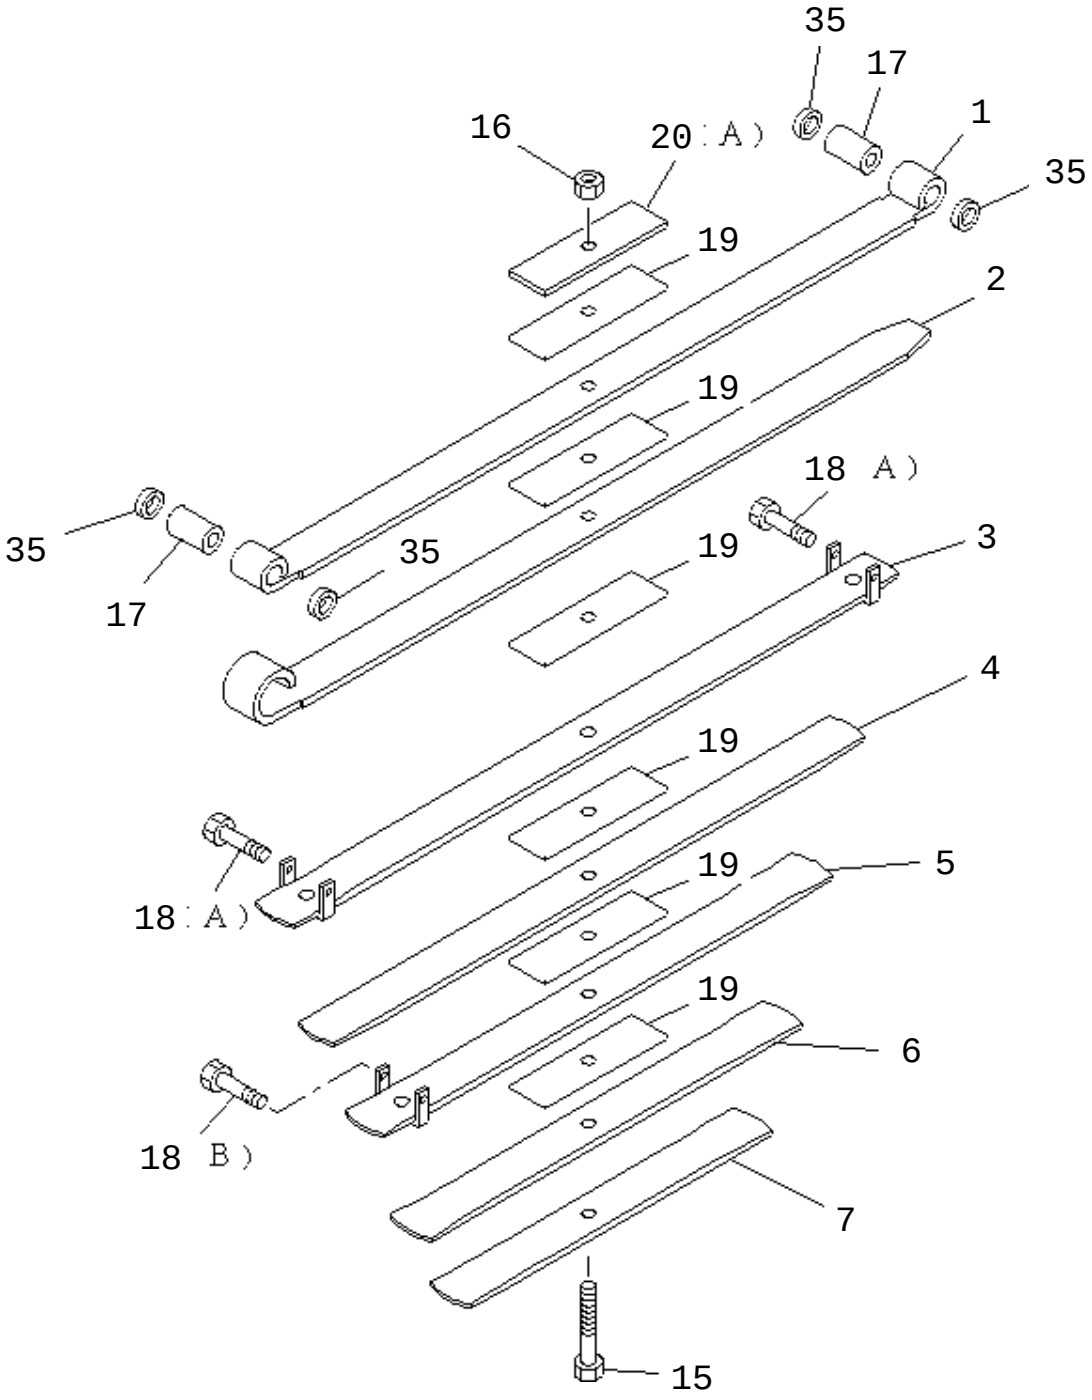

https://truckmanualshub.com/

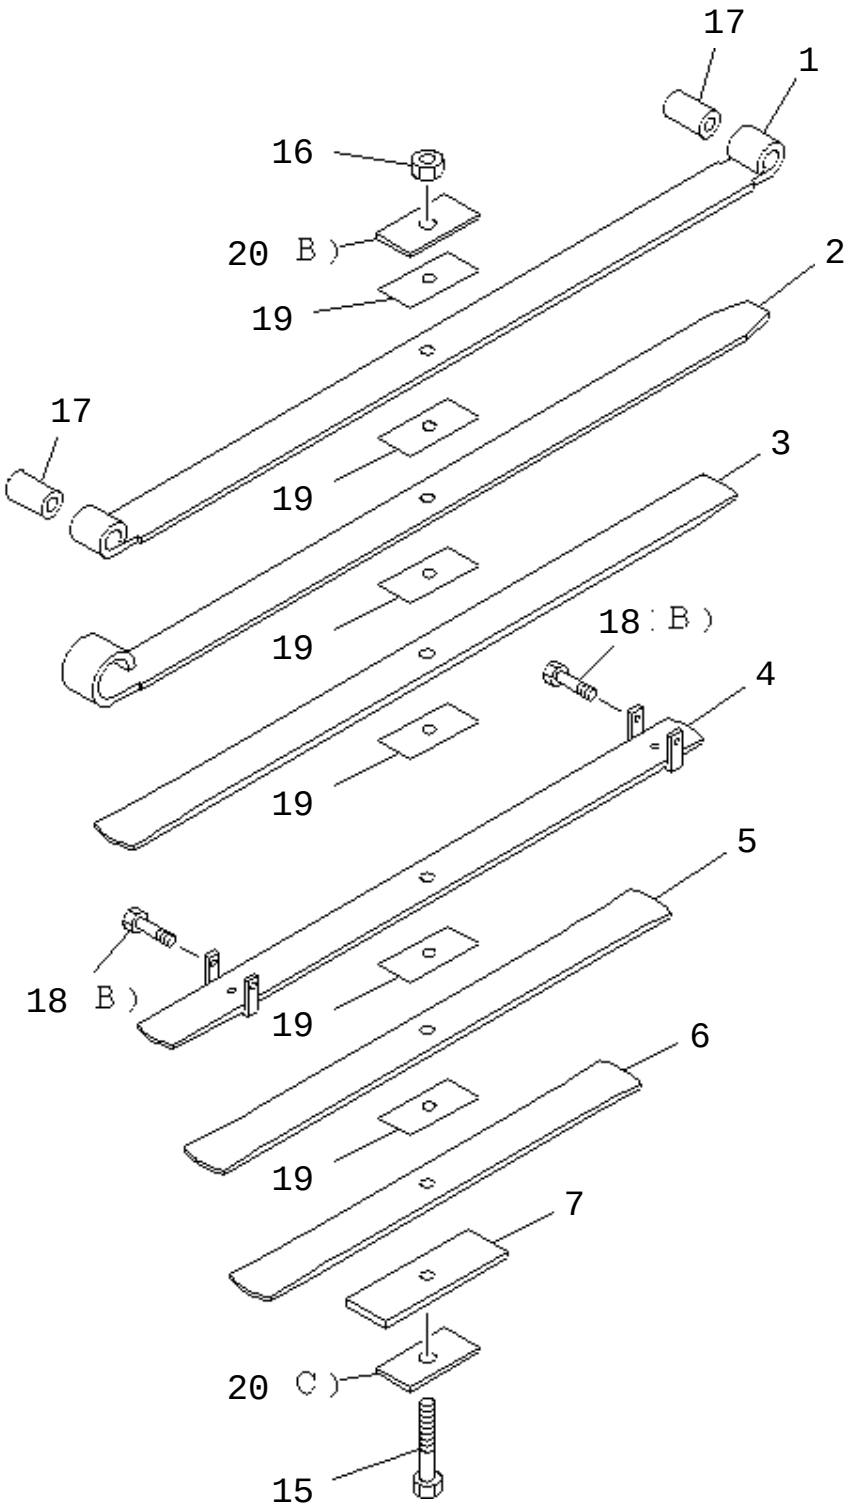

https://truckmanualshub.com/

4-55 FRONT LEAF SPRING


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	Qty for ASM B	RESTRICTION/REMARKS A 8980290960 B 8981673080
1		SPRING; LEAF,NO 1,FRT					
		8-98031-827-0			01		IDN
		8-98031-827-0			01		IDN
		8-98167-548-0				01	IDN
		8-98167-548-0				01	IDN
		8-98167-548-0				01	IDN
2		SPRING; LEAF,NO 2,FRT					
		8-98031-828-0			01		IDN
		8-98031-828-0			01		IDN
		8-98167-549-0				01	IDN
		8-98167-549-0				01	IDN
		8-98167-549-0				01	IDN
3		SPRING; LEAF,NO 3,FRT					
		8-98031-829-0			01		IDN
		8-98031-829-0			01		IDN
		8-98167-550-0				01	IDN
		8-98167-550-0				01	IDN
		8-98167-550-0				01	IDN
4		SPRING; LEAF,NO 4,FRT					
		8-98031-830-0			01		IDN
		8-98031-830-0			01		IDN
		8-98167-551-0				01	IDN
		8-98167-551-0				01	IDN
		8-98167-551-0				01	IDN
5		SPRING; LEAF,NO 5,FRT					
		8-98031-831-0			01		IDN
		8-98031-831-0			01		IDN
		8-98167-552-0				01	IDN
		8-98167-552-0				01	IDN
		8-98167-552-0				01	IDN
6		SPRING; LEAF,NO 6,FRT					
		8-98031-832-0			01		IDN
		8-98031-832-0			01		IDN
		8-98167-553-0				01	IDN
		8-98167-553-0				01	IDN
		8-98167-553-0				01	IDN
7		SPRING; LEAF,NO 7,FRT					
		8-98031-833-0			01		IDN
		8-98031-833-0			01		IDN
		8-98167-554-0				01	IDN
		8-98167-554-0				01	IDN
		8-98167-554-0				01	IDN
15		BOLT; CENTER,LEAF SPR,FRT					
		1-51156-298-0			01		L=145 IDN
		1-51156-298-0			01		L=145 IDN
		1-51156-328-0				01	L=150 IDN
		1-51156-328-0				01	L=150 IDN
		1-51156-328-0				01	L=150 IDN
16		NUT; CENTER BOLT,LEAF SPR,FRT					
		1-09400-054-0			01		M16 IDN
		1-09400-054-0			01		M16 IDN
		1-09400-054-0				01	M16 IDN
		1-09400-054-0				01	M16 IDN
		1-09400-054-0				01	M16 IDN
17		BUSHING; LEAF SPR,FRT					
		1-51351-009-0			02		OD=38 IDN
		1-51351-009-0			02		OD=38 IDN
		1-51351-044-0				02	OD=42 IDN
		1-51351-044-0				02	OD=42 IDN

https://truckmanualshub.com/

4-55 FRONT LEAF SPRING

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	Qty for ASM B	RESTRICTION/REMARKS A 8980290960 B 8981673080
17		1-51351-044-0				02	OD=42 IDN
18		BOLT; CLIP,LEAF SPR,FRT					
		1-09000-328-0			02		(B) M10X99 IDN
		1-09000-328-0			02		(B) M10X99 IDN
		1-09000-328-0				01	(B) M10X99 IDN
		1-09000-328-0				01	(B) M10X99 IDN
		1-09000-328-0				01	(B) M10X99 IDN
		1-09000-536-0				02	(A) M10X103 IDN
		1-09000-536-0				02	(A) M10X103 IDN
		1-09000-536-0				02	(A) M10X103 IDN
19		SPACER; LEAF SPRING,FRT					
		1-51177-071-0			06		T=1 IDN
		1-51177-071-0			06		T=1 IDN
		1-51177-071-0				06	T=1 IDN
		1-51177-071-0				06	T=1 IDN
		1-51177-071-0				06	T=1 IDN
20		SEAT; LEAF SPR,FRT					
		1-51177-161-0			01		(C) T=10 IDN
		1-51177-161-0			01		(C) T=10 IDN
		1-51177-178-0			01		(B) T=8 IDN
		1-51177-178-0			01		(B) T=8 IDN
		1-51177-097-0				01	(A) T=14 IDN
		1-51177-097-0				01	(A) T=14 IDN
		1-51177-097-0				01	(A) T=14 IDN
35		SEAL; DUST					
		1-51177-321-0				04	IDN
		1-51177-321-0				04	IDN
		1-51177-321-0				04	IDN

https://truckmanualshub.com/

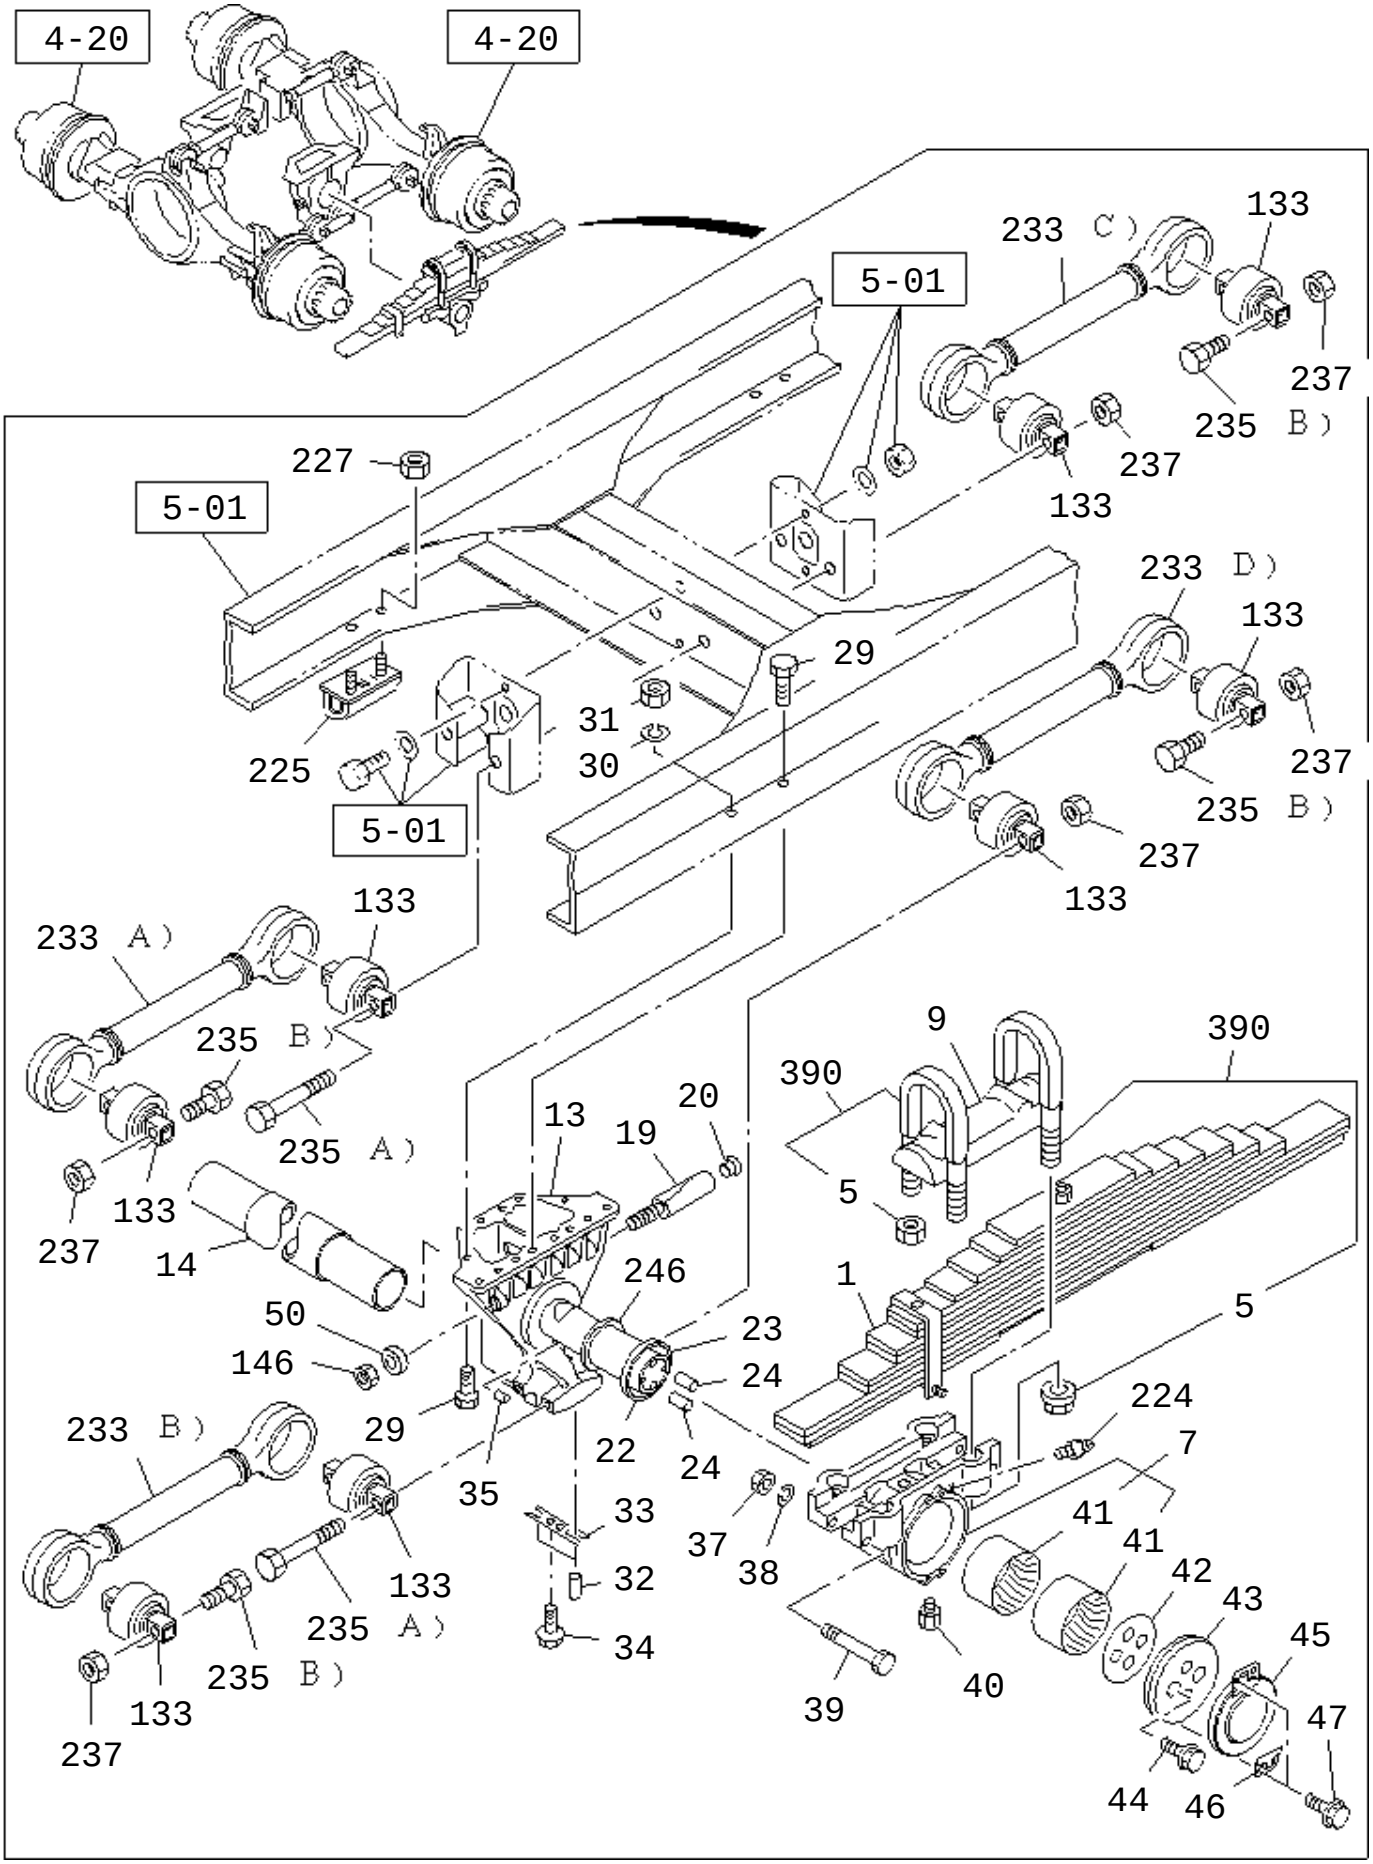

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		SPRING ASM; LEAF,RR						SEE FIG-NO 4-65 FOR COMPONENT.
		8-98185-692-0		1312-1403		02	A	
								IDN
		8-98185-692-0		1404-		02	AB	
								IDN
5		NUT; U-BOLT,RR SPR						
		8-97948-151-0		1312-1403		08	A	
								IDN
		8-97948-151-0		1404-		08	AB	
								IDN
7		SEAT; SPR,LWR						
		8-97614-049-2		1312-1403		02	A	
								IDN
		8-97614-049-2		1404-		02	AB	
								IDN
9		PAD; U BOLT,RR SPR						
		8-98177-265-0		1312-1403		02	A	
		8-98177-265-0		1404-		02	AB	
13		BRACKET; TRUNNION SHAFT						
		8-97915-942-3		1312-1403		02	A	
								IDN
		8-97915-942-3		1404-		02	AB	
								IDN
14		PIPE; TRUNNION BRKT						
		1-51389-032-1		1312-1403		01	A	
		1-51389-032-1		1404-		01	AB	
19		BOLT; KEY,SHAFT						
		1-51389-066-0		1312-1403		02	A	
								IDN
		1-51389-066-0		1404-		02	AB	
								IDN
20		GROMMET; KEY BOLT						
		1-09333-057-0		1312-1403		02	A	
								IDN
		1-09333-057-0		1404-		02	AB	
								IDN
22		SHAFT; TRUNNION,RR SUSP						
		1-51381-022-3		1312-1403		02	A	
		1-51381-022-3		1404-		02	AB	
23		SEAL; OIL,TRUNNION SHAFT						
		1-51389-005-0		1312-1403		02	A	
		1-51389-005-0		1404-		02	AB	
24		PIN; SIDE PLATE TO SHAFT						
		1-09740-009-0		1312-1403		04	A	
		1-09740-009-0		1404-		04	AB	
29		BOLT; BRKT TO FRAME						
		8-98012-872-0		1312-1403		24	A	
								M18X75
		8-98012-872-0		1404-		24	AB	
								M18X75
		9-92061-855-0		1312-1403		04	A	
								M18X55
		9-92061-855-0		1404-		04	AB	
								M18X55
30		WASHER; PL,TRUNNION BRKT						
		1-09503-162-0		1312-1403		28	A	
								ID=19
		1-09503-162-0		1404-		28	AB	
								ID=19
31		NUT; TRUNNION BRKT						
		0-91110-518-0		1312-1403		28	A	
								M18
		0-91110-518-0		1404-		28	AB	
								M18
32		PIN; STRAIGHT						
		1-09740-027-0		1312-1403		04	A	
		1-09740-027-0		1404-		04	AB	
33		PLATE; LK KNOCK PIN						
		1-53369-032-1		1312-1403		02	A	
		1-53369-032-1		1404-		02	AB	
34		BOLT; LOCK PLATE						
		0-28051-016-0		1312-1403		02	A	
								M10X16 FLANGE

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
34		0-28051-016-0		1404-		02	AB	M10X16 FLANGE
35		PIN; TRUNNION SHAFT						
		1-09749-030-1		1312-1403		04	A	
		1-09749-030-1		1404-		04	AB	
37		NUT; SPR SETTING						
		0-91110-522-0		1312-1403		04	A	M22
		0-91110-522-0		1404-		04	AB	M22
38		WASHER; LK,SPR SETTING						
		0-91510-622-0		1312-1403		04	A	ID=22.5
		0-91510-622-0		1404-		04	AB	ID=22.5
39		BOLT; SPR SETTING						
		9-09801-290-1		1312-1403		04	A	M22X155
		9-09801-290-1		1404-		04	AB	M22X155
40		VALVE; GREASE ESCAPE						
		9-51389-010-0		1312-1403		02	A	
		9-51389-010-0		1404-		02	AB	
41		BUSHING; TRUNNION SHAFT						
		8-98081-832-0		1312-1403		04	A	
		8-98081-832-0		1404-		04	AB	
42		SHIM; SIDE PLATE TO SHAFT						
		1-51389-033-1		1312-1403		12	A	
		1-51389-033-1		1404-		12	AB	
43		PLATE; SIDE,TRUNNION SHAFT						
		8-97948-142-0		1312-1403		02	A	IDN
		8-97948-142-0		1404-		02	AB	IDN
44		BOLT; SIDE PLATE TO SHAFT						
		1-09044-038-2		1312-1403		04	A	M18X48.5 FLANGE
		1-09044-038-2		1404-		04	AB	M18X48.5 FLANGE
45		COVER; SPR SEAT						
		1-51387-013-2		1312-1403		02	A	
		1-51387-013-2		1404-		02	AB	
46		BRACKET; COVER						
		1-51387-015-2		1312-1403		02	A	
		1-51387-015-2		1404-		02	AB	
47		BOLT; COVER TO SEAT						
		0-28050-812-0		1312-1403		08	A	M8X12 FLANGE
		0-28050-812-0		1404-		08	AB	M8X12 FLANGE
50		WASHER; PL,TRUNNION SHAFT						
		8-98012-871-0		1312-1403		02	A	ID=25
		8-98012-871-0		1404-		02	AB	ID=25
133		BUSHING; RUBBER,TORQUE ROD						
		1-51519-113-1		1312-		04	A	OD=105
		1-51519-113-1		1312-1403		08	A	OD=105
		1-51519-113-1		1404-		08	AB	OD=105
146		NUT; KEY BOLT						
		0-91110-524-0		1312-1403		02	A	M24
		0-91110-524-0		1404-		02	AB	M24
224		NIPPLE; GREASE,SPR SEAT						
		0-90301-410-0		1312-1403		02	A	PT1/8 STRAIGHT
		0-90301-410-0		1404-		02	AB	PT1/8 STRAIGHT
225		RUBBER; CUSHION,RR SPR						


https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
225		1-53366-143-1		1312-1403	L	01	A	FORWARD,REARWARD
		1-53366-143-1		1312-1403	L	01	A	FORWARD,REARWARD
		1-53366-143-1		1404-	L	01	AB	FORWARD,REARWARD
		1-53366-143-1		1404-	L	01	AB	FORWARD,REARWARD
		1-53366-072-2		1312-1403	R	01	A	REARWARD
		1-53366-072-2		1404-	R	01	AB	REARWARD
		1-53366-142-1		1312-1403	R	01	A	FORWARD
		1-53366-142-1		1404-	R	01	AB	FORWARD
227		NUT; CUSHION RUBBER						
		0-91180-212-0		1312-1403		08	A	M12 FLANGE
		0-91180-212-0		1404-		08	AB	M12 FLANGE
233		ROD ASM; TORQUE,RR SUSP						
		1-51511-659-0		1312-1403		01	A	(C) L=550
		1-51511-659-0		1404-		01	AB	(C) L=550
		1-51511-674-0		1312-1403		01	A	(A) L=540
		1-51511-674-0		1404-		01	AB	(A) L=540
		1-51511-678-0		1312-1403		02	A	(B) L=530
		1-51511-678-0		1404-		02	AB	(B) L=530
		1-51511-658-0		1312-1404		02	A	WHEEL BASE 5300MM(53W) (D) L=545
		1-51511-658-0		1405-		02	A	WHEEL BASE 4700MM(47W),WHEEL BASE 5300M (D) L=545
		1-51511-658-0		1405-		02	B	WHEEL BASE 4700MM(47W) (D) L=545
		1-51511-659-0		1312-1401		02	A	WHEEL BASE 7100MM(71W) (D) L=550
		1-51511-659-0		1402-1403		02	A	WHEEL BASE 4700MM(47W),WHEEL BASE 7100M (D) L=550
		1-51511-659-0		1404-1404		02	A	WHEEL BASE 4700MM(47W),WHEEL BASE 7100M (D) L=550
		1-51511-659-0		1404-1404		02	B	(D) L=550
		1-51511-659-0		1405-		02	A	WHEEL BASE 7100MM(71W) (D) L=550
235		BOLT; TORQUE ROD						
		8-98012-875-0		1312-1403		06	A	(A) M18X265
		8-98012-875-0		1404-		06	AB	(A) M18X265
		8-98012-877-0		1312-1403		12	A	(B) M18X102

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
235		8-98012-877-0		1404-		12	AB	(B) M18X102
237		NUT; TORQUE ROD						
		1-09464-011-0		1312-1403		18	A	M18
		1-09464-011-0		1404-		18	AB	M18
246		WASHER; TORQUE ROD						
		1-51389-058-0		1312-1403		02	A	
		1-51389-058-0		1404-		02	AB	
390		U-BOLT SET; RR SPRING						
		1-87870-495-0		1312-1403		04	A	L=400
		1-87870-495-0		1404-		04	AB	L=400
4-20		Move to 4-20						
5-01		Move to 5-01						

https://truckmanualshub.com/

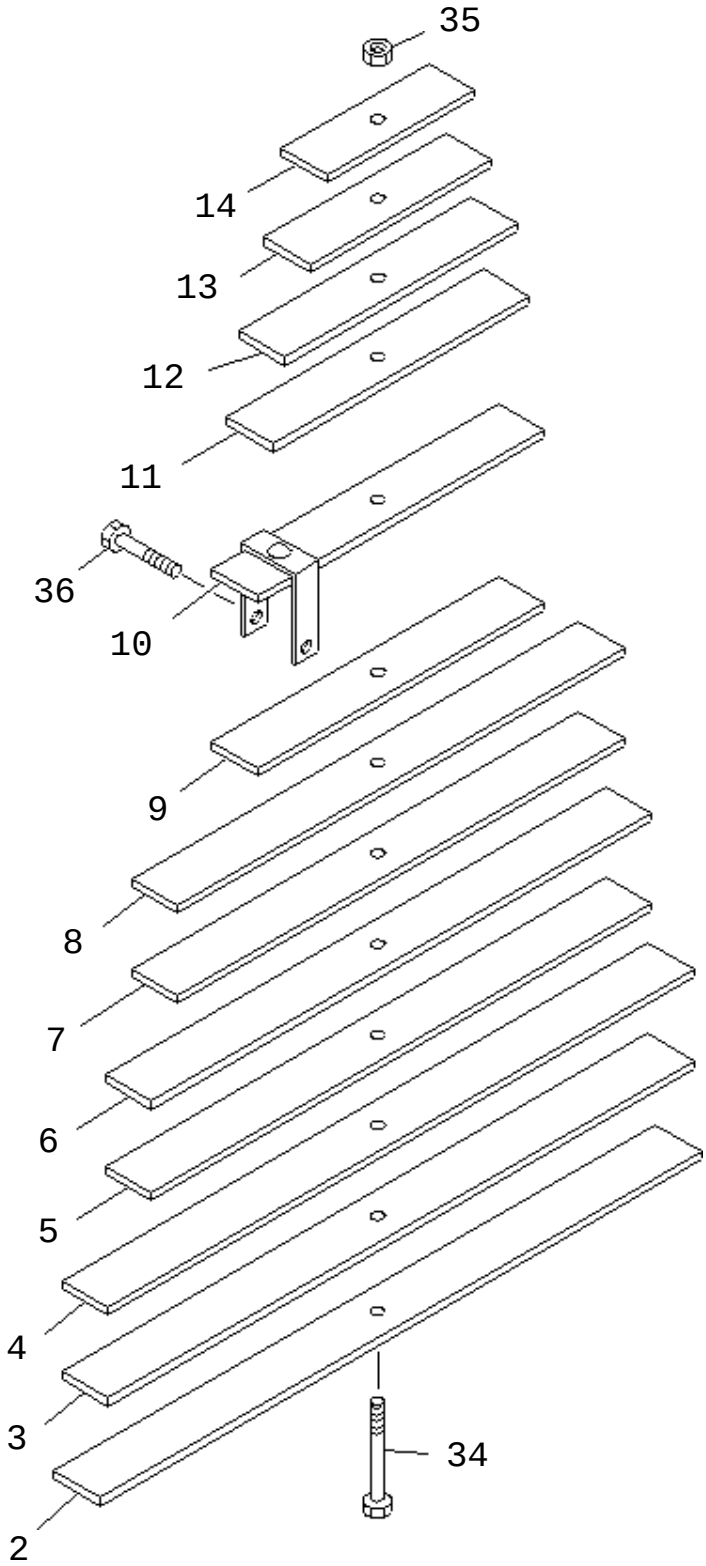


https://truckmanualshub.com/

4-65 REAR LEAF SPRING


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty for ASM A	RESTRICTION/REMARKS A 8981856920
2		SPRING; LEAF,NO 1,RR MAIN				
		8-98243-851-0			01	IDN
		8-98243-851-0			01	IDN
3		SPRING; LEAF,NO 2,RR MAIN				
		8-98243-852-0			01	IDN
		8-98243-852-0			01	IDN
4		SPRING; LEAF,NO 3,RR MAIN				
		8-98243-852-0			01	IDN
		8-98243-852-0			01	IDN
5		SPRING; LEAF,NO 4,RR MAIN				
		8-98243-853-0			01	IDN
		8-98243-853-0			01	IDN
6		SPRING; LEAF,NO 5,RR MAIN				
		8-98243-853-0			01	IDN
		8-98243-853-0			01	IDN
7		SPRING; LEAF,NO 6,RR MAIN				
		8-98243-854-0			01	IDN
		8-98243-854-0			01	IDN
8		SPRING; LEAF,NO 7,RR MAIN				
		8-98243-854-0			01	IDN
		8-98243-854-0			01	IDN
9		SPRING; LEAF,NO 8,RR MAIN				
		8-98243-855-0			01	IDN
		8-98243-855-0			01	IDN
10		SPRING; LEAF,NO 9,RR MAIN				
		8-98244-033-0			01	IDN
		8-98244-033-0			01	IDN
11		SPRING; LEAF,NO 10,RR MAIN				
		8-98243-856-0			01	IDN
		8-98243-856-0			01	IDN
12		SPRING; LEAF,NO 11,RR MAIN				
		8-98243-857-0			01	IDN
		8-98243-857-0			01	IDN
13		SPRING; LEAF,NO 12,RR MAIN				
		8-98243-858-0			01	IDN
		8-98243-858-0			01	IDN
14		SPRING; LEAF,NO 13,RR MAIN				
		8-98243-859-0			01	IDN
		8-98243-859-0			01	IDN
34		BOLT; CENTER,LEAF SPR,RR MAIN				
		1-51356-340-0			01	L=250
		1-51356-340-0			01	L=250
35		NUT; CENTER BOLT,LEAF SPR,RR				
		1-09400-054-0			01	M16 IDN
		1-09400-054-0			01	M16 IDN
36		BOLT; CLIP,LEAF SPR,RR				
		1-09000-326-0			01	
		1-09000-326-0			01	

https://truckmanualshub.com/

FRONT

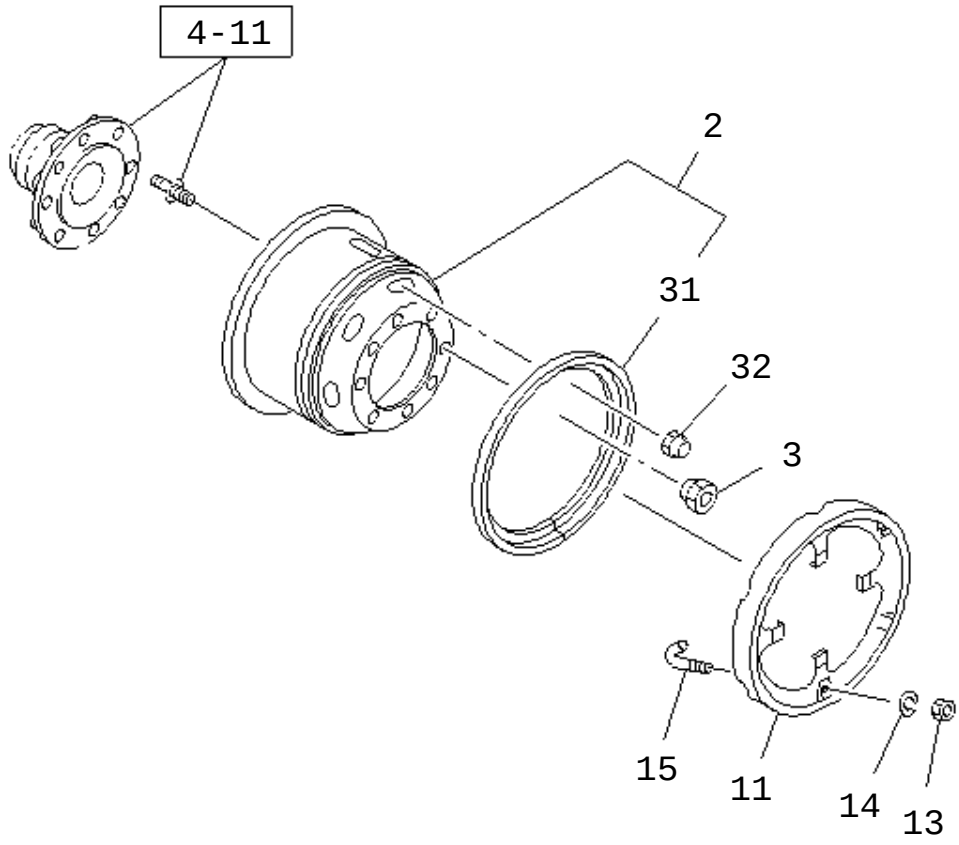

REAR

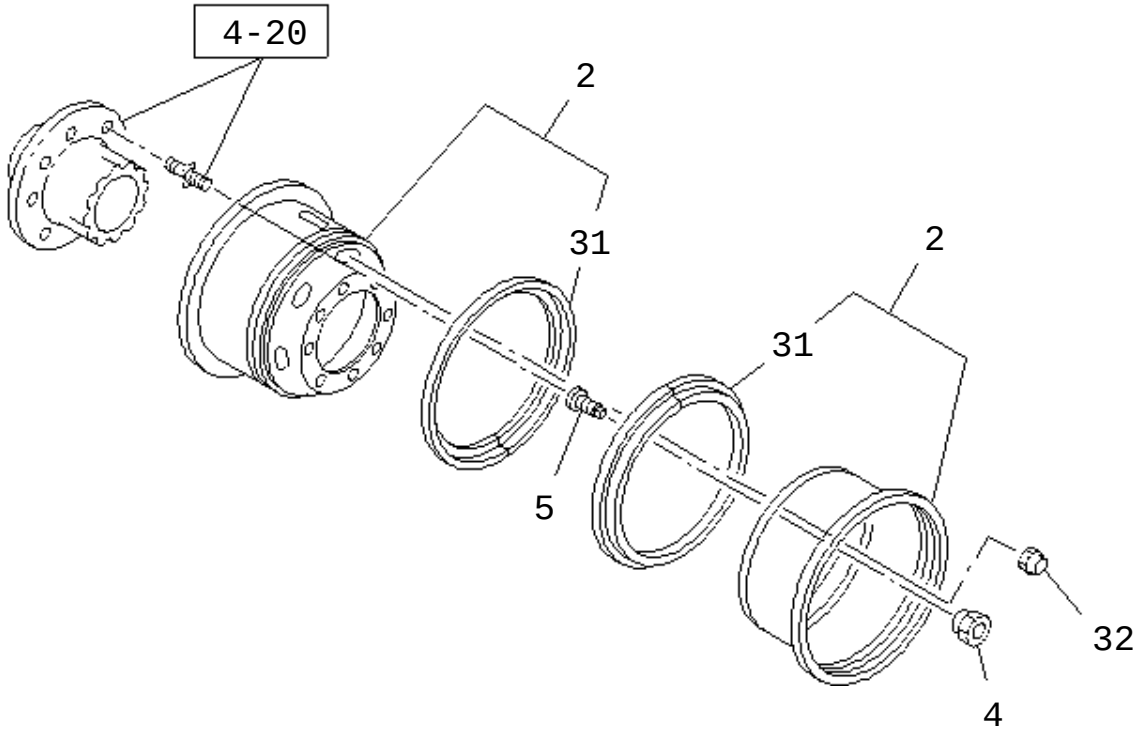


https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
2		WHEEL; DISC						
		1-42350-478-0		1312-1403		02	A	FRONT IDN
		1-42350-478-0		1404-		02	AB	FRONT IDN
		1-42350-478-0		1312-1403		08	A	REAR IDN
		1-42350-478-0		1404-		08	AB	REAR IDN
		1-42350-478-0		1312-1403		01	A	SPARE TIRE & DISC WHEEL RR TIRE ONE(R46) SPARE IDN
		1-42350-478-0		1404-		01	AB	SPARE TIRE & DISC WHEEL RR TIRE ONE(R46) SPARE IDN
3	B	NUT; WHEEL,FRT AXLE						
		1-42334-022-3		1312-1403	L	08	A	M24 LH THREAD
		1-42334-022-3		1404-	L	08	AB	M24 LH THREAD
		1-42333-022-3		1312-1403	R	08	A	M24
		1-42333-022-3		1404-	R	08	AB	M24
4	B	NUT; WHEEL,RR AXLE						
		8-97359-810-0		1312-1403	L	16	A	M30 LH THREAD
		8-97359-810-0		1404-	L	16	AB	M30 LH THREAD
		8-97359-809-0		1312-1403	R	16	A	M30 RH THREAD
		8-97359-809-0		1404-	R	16	AB	M30 RH THREAD
5	B	NUT; WHEEL,INNER,RR AXLE						
		8-97359-806-0		1312-1403	L	16	A	OUTER M30,INNER M20 LH THREAD IDN
		8-97359-806-0		1404-	L	16	AB	OUTER M30,INNER M20 LH THREAD IDN
		8-97359-805-0		1312-1403	R	16	A	OUTER M30,INNER M20 RH THREAD IDN
		8-97359-805-0		1404-	R	16	AB	OUTER M30,INNER M20 RH THREAD IDN
11		STEP; DISC WHEEL SIDE						
		1-43139-002-2		1312-1403		02	A	IDN
		1-43139-002-2		1404-		02	AB	IDN
13		NUT; STEP DISC						
		0-91110-510-0		1312-1403		06	A	M10
		0-91110-510-0		1404-		06	AB	M10
14		WASHER; LK,STEP DISC						
		0-91510-810-0		1312-1403		06	A	ID=10.2 IDN
		0-91510-810-0		1404-		06	AB	ID=10.2 IDN
15		BOLT; STEP DISC						
		9-43139-023-1		1312-1403		06	A	L=44
		9-43139-023-1		1404-		06	AB	L=44
31		RING; SIDE,DISC WHEEL						


https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
31		1-42355-003-1		1312-1403		02	A	FRONT IDN
		1-42355-003-1		1404-		02	AB	FRONT IDN
		1-42355-003-1		1312-1403		08	A	REAR IDN
		1-42355-003-1		1404-		08	AB	REAR IDN
		1-42355-003-1		1312-1403		01	A	SPARE TIRE & DISC WHEEL RR TIRE ONE(R46) SPARE IDN
		1-42355-003-1		1404-		01	AB	SPARE TIRE & DISC WHEEL RR TIRE ONE(R46) SPARE IDN
32		CAP; VALVE						
		1-42374-001-0		1312-1403		11	A	SPARE TIRE & DISC WHEEL RR TIRE ONE(R46)
		1-42374-001-0		1404-		11	AB	SPARE TIRE & DISC WHEEL RR TIRE ONE(R46)
4-11		Move to 4-11						
4-20		Move to 4-20						

https://truckmanualshub.com/

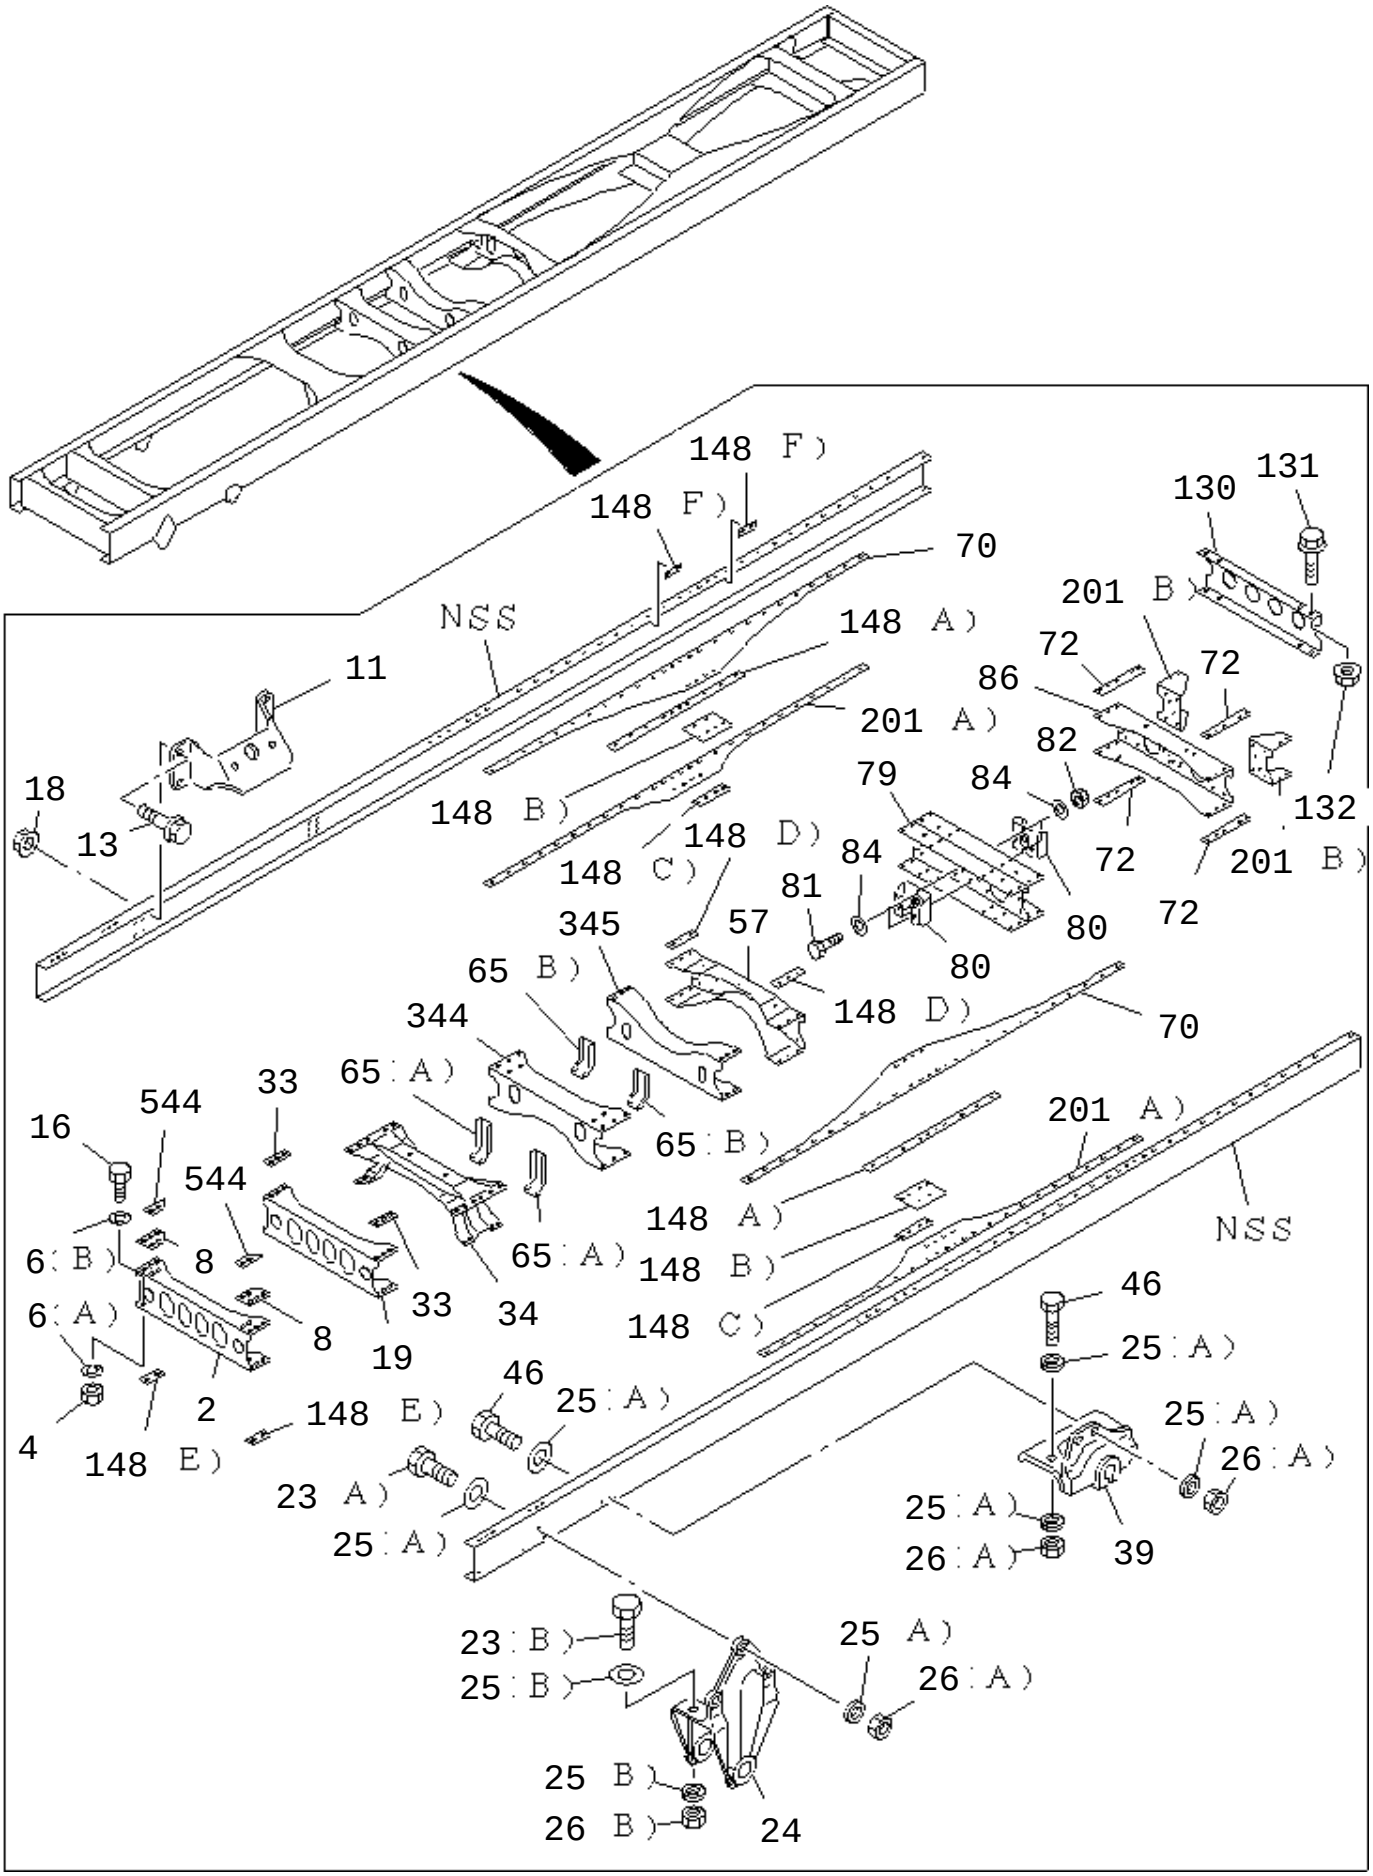

https://truckmanualshub.com/

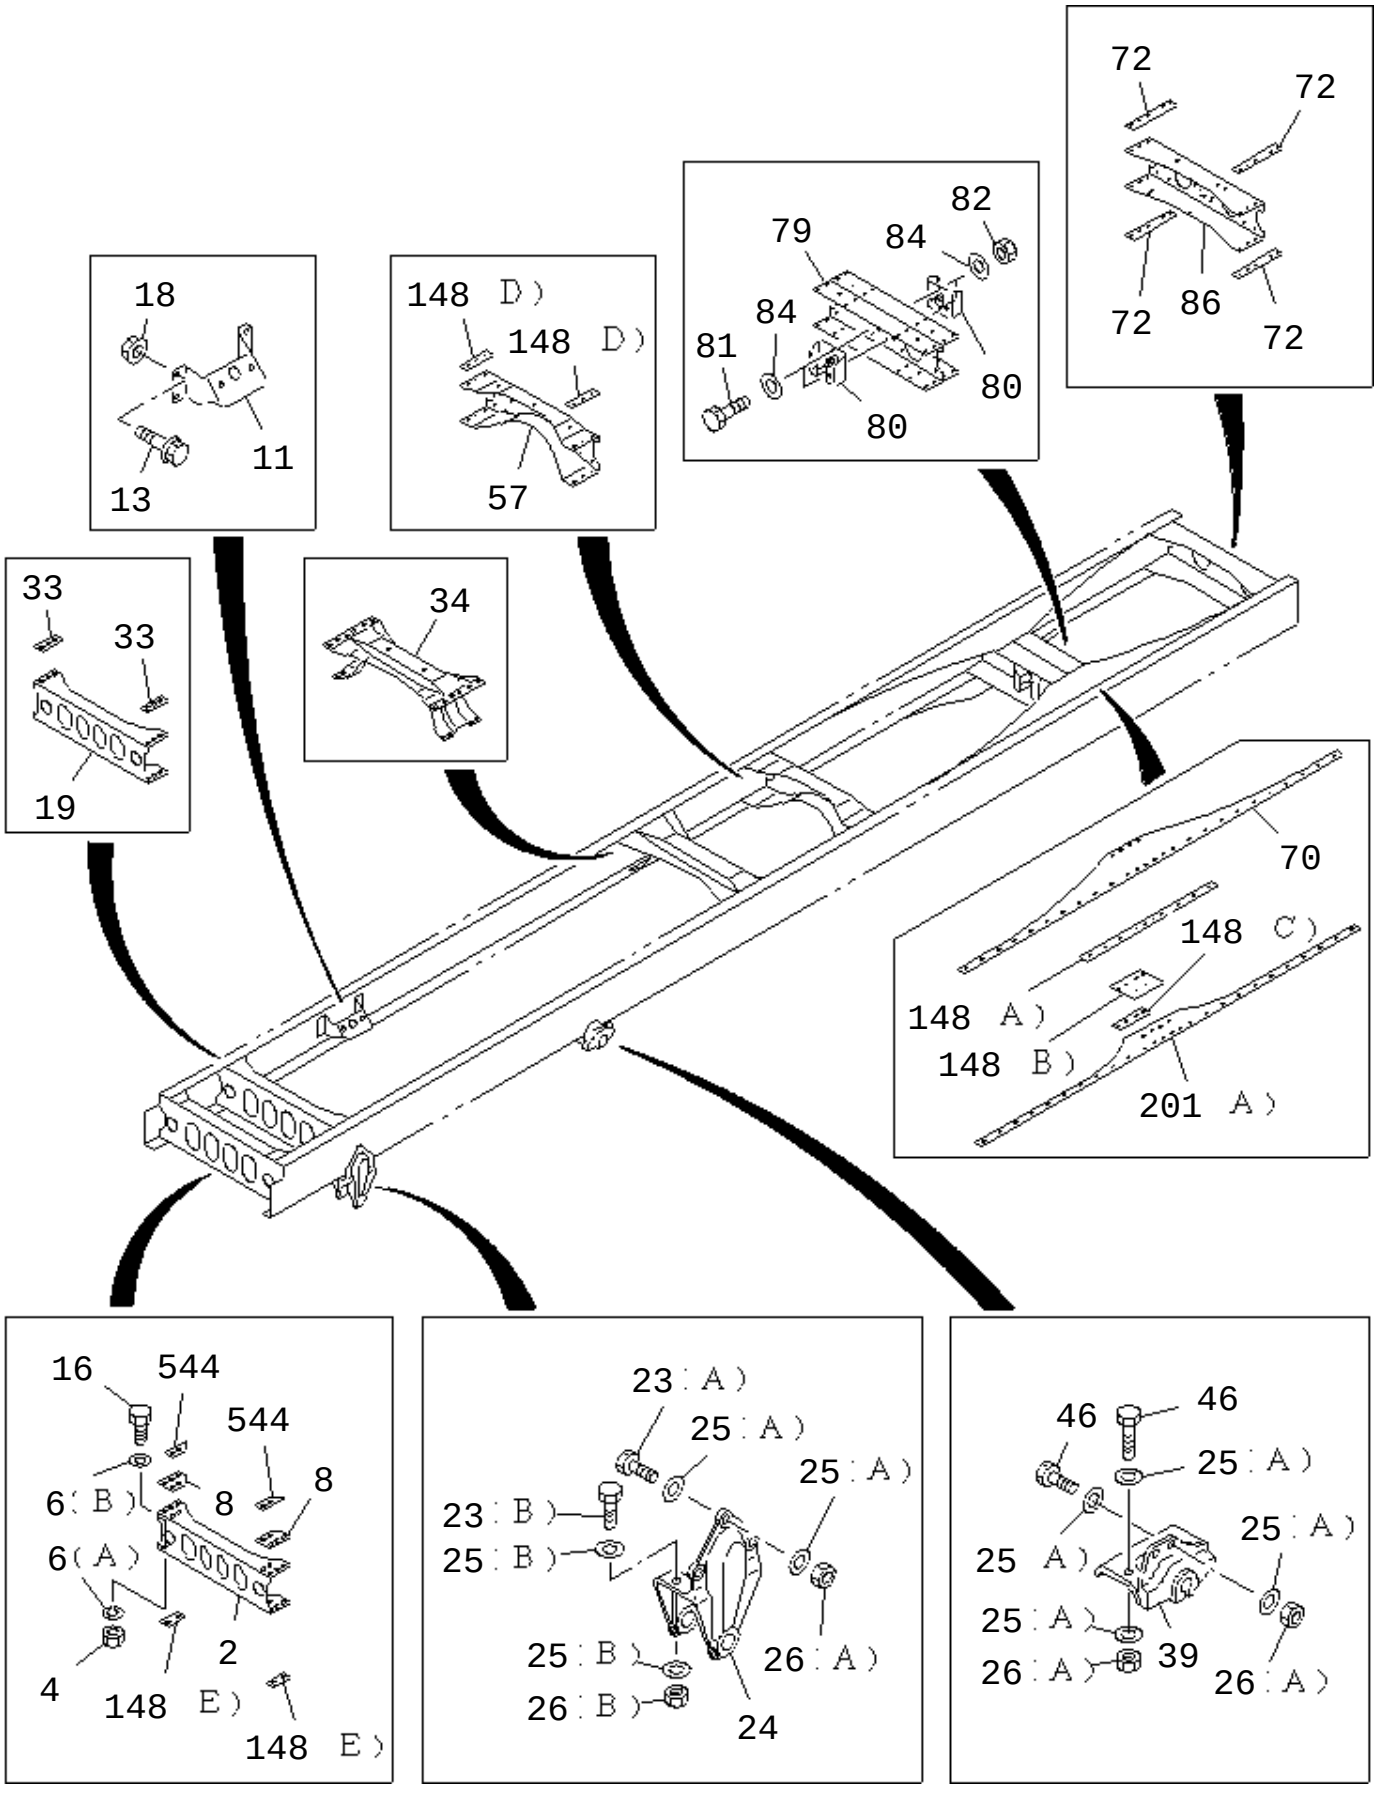

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A WHEEL BASE 5300MM(53W) B WHEEL BASE 7100MM(71W) C WHEEL BASE 4700MM(47W)
2		MEMBER; CROSS,1ST						
		8-97695-001-0		1312-		01	A	IDN
		8-97610-852-6		1312-1401		01	B	IDN
		8-97610-852-6		1402-		01	BC	IDN
4		NUT; 1ST C/MBR TO S/MBR						
		0-91110-514-0		1312-1403		02	AB	M14
		0-91110-514-0		1404-		02	ABC	M14
6		WASHER; LK,1ST C/MBR						
		0-91510-814-0		1312-1403		02	AB	(A) ID=14.2
		0-91510-814-0		1404-		02	ABC	(A) ID=14.2
		8-98010-627-1		1312-1403		02	AB	(B) ID=15
		8-98010-627-1		1404-		02	ABC	(B) ID=15
8		GUSSET; 1ST C/MBR						
		8-97611-027-0		1312-1401		02	AB	
		8-97611-027-0		1402-		02	ABC	
11		BRACKET; ENG MTG						
		8-97695-131-0		1312-		02	A	IDN
		8-97619-550-0		1312-1401		02	B	
		8-97619-550-0		1402-		02	BC	
13		BOLT; BRKT,ENG MTG						
		0-28661-240-0		1312-1401		08	AB	M12X40 FLANGE
		0-28661-240-0		1402-		08	ABC	M12X40 FLANGE
16		BOLT; 1ST C/MBR TO S/MBR						
		0-20851-440-0		1312-1403		02	AB	M14X40
		0-20851-440-0		1404-		02	ABC	M14X40
18		NUT; BRKT,ENG MTG						
		0-91180-212-0		1312-1401		08	AB	M12 FLANGE
		0-91180-212-0		1402-		08	ABC	M12 FLANGE
19		MEMBER; CROSS,2ND						
		8-97695-002-0		1312-		01	A	IDN
		8-97610-853-4		1312-1401		01	B	IDN
		8-97610-853-4		1402-		01	BC	IDN
23		BOLT; BRKT,SPR						
		0-20951-450-0		1312-1401		06	AB	(A) M14X50
		0-20951-450-0		1402-		06	ABC	(A) M14X50
		0-20951-660-0		1312-1401		04	AB	(B) M16X60
		0-20951-660-0		1402-		04	ABC	(B) M16X60
24		BRACKET; FRT SPR,FRT						
		8-97695-046-0		1312-	L	01	A	IDN
		8-97695-047-0		1312-	R	01	A	IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A WHEEL BASE 5300MM(53W) B WHEEL BASE 7100MM(71W) C WHEEL BASE 4700MM(47W)
24		8-98018-840-0		1312-1401	L	01	B	
		8-98018-840-0		1402-	L	01	BC	
		8-98018-841-0		1312-1401	R	01	B	
		8-98018-841-0		1402-	R	01	BC	
25		WASHER; PL,BRKT						
		1-09503-316-0		1312-1401		08	AB	(B) ID=16.2
		1-09503-316-0		1402-		08	ABC	(B) ID=16.2
		8-98010-627-1		1312-1401		28	AB	(A) ID=15
		8-98010-627-1		1402-		28	ABC	(A) ID=15
26		NUT; BRKT,SPR						
		0-91110-514-0		1312-1401		14	AB	(A) M14
		0-91110-514-0		1402-		14	ABC	(A) M14
		0-91110-516-0		1312-1401		04	AB	(B) M16
		0-91110-516-0		1402-		04	ABC	(B) M16
33		SPACER; 2ND C/MBR,UPR						
		8-97948-140-0		1312-		02	A	IDN
		8-97611-040-0		1312-1401		02	B	
		8-97611-040-0		1402-		02	BC	
34		MEMBER; CROSS,3RD						
		8-97695-208-0		1312-		01	A	IDN
		8-97610-854-2		1312-1401		01	B	
		8-97610-854-2		1402-		01	BC	
39		BRACKET; FRT SPR,RR						
		8-97924-625-0		1312-	L	01	A	IDN
		8-97924-626-0		1312-	R	01	A	IDN
		8-98043-648-0		1312-1401	L	01	B	
		8-98043-648-0		1402-	L	01	BC	
		8-98043-649-0		1312-1401	R	01	B	
		8-98043-649-0		1402-	R	01	BC	
46		BOLT; BRKT FIX						
		0-20951-450-0		1312-1401		08	AB	M14X50
		0-20951-450-0		1402-		08	ABC	M14X50
57		MEMBER; CROSS,RR SUSP FRT						
		8-97647-264-0		1404-		01	C	GVZ WIDE CAB(GG****) IDN
		8-97695-021-0		1312-		01	A	IDN
		8-97612-103-1		1312-1401		01	B	IDN
		8-97612-103-1		1402-		01	B	IDN
		8-97612-103-1		1402-		01	C	FVZ WIDE CAB(FG****) IDN
65		BRACKET; CENTER BRG						
		8-97614-132-0		1312-		02	B	(B)
		8-97614-150-0		1312-		02	B	(A)
70		GUSSET; TRUNNION,UPR						
		8-97647-951-0		1404-		02	C	GVZ WIDE CAB(GG****)

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS
								A WHEEL BASE 5300MM(53W) B WHEEL BASE 7100MM(71W) C WHEEL BASE 4700MM(47W)
70		8-97695-027-0		1312-		02	A	
								IDN
		8-97612-106-0		1312-1401		02	B	
								IDN
		8-97612-106-0		1402-		02	B	
								IDN
		8-97612-106-0		1402-		02	C	FVZ WIDE CAB(FG****)
								IDN
72		SPACER; TRUNNION						
		8-97647-953-0		1404-		04	C	GVZ WIDE CAB(GG****)
								IDN
		8-97612-110-0		1312-1401		04	AB	
		8-97612-110-0		1402-		04	AB	
		8-97612-110-0		1402-		04	C	FVZ WIDE CAB(FG****)
79		MEMBER; CROSS,TRUNNION ASM						
		8-97695-005-0		1312-		01	A	
								IDN
		8-97612-104-0		1312-1401		01	B	
								IDN
		8-97612-104-0		1402-		01	BC	
								IDN
80		BRACKET; C/MBR						
		8-97948-138-0		1312-		02	A	
								IDN
		1-53363-068-0		1312-1401		02	B	
		1-53363-068-0		1402-		02	BC	
81		BOLT; BRKT						
		0-10956-450-0		1312-1401		02	AB	
								M14X50
		0-10956-450-0		1402-		02	ABC	
								M14X50
82		NUT; BRKT						
		0-91110-514-0		1312-1401		02	AB	
								M14
		0-91110-514-0		1402-		02	ABC	
								M14
84		WASHER; PL,BRKT						
		8-98010-627-1		1312-1401		04	AB	
								ID=15
		8-98010-627-1		1402-		04	ABC	
								ID=15
86		MEMBER; CROSS,RR SUSP RR						
		8-97695-006-0		1312-		01	A	
								IDN
		8-97612-105-4		1312-1401		01	B	
								IDN
		8-97612-105-4		1402-		01	BC	
								IDN
130		MEMBER; CROSS,END						
		8-97695-020-0		1312-		01	A	
								IDN
		8-97610-869-1		1312-1401		01	B	
								IDN
		8-97610-869-1		1402-		01	B	
								IDN
		8-97610-869-1		1402-		01	C	FVZ WIDE CAB(FG****)
								IDN
131		BOLT; END C/MBR						
		0-50541-230-0		1312-1401		04	AB	
								M12X30 W/LK WASHER
		0-50541-230-0		1402-		04	AB	
								M12X30 W/LK WASHER
		0-50541-230-0		1402-		04	C	FVZ WIDE CAB(FG****)
								M12X30 W/LK WASHER
132		NUT; END C/MBR						
		0-91110-512-0		1312-1401		04	AB	
								M12
		0-91110-512-0		1402-		04	AB	
								M12
		0-91110-512-0		1402-		04	C	FVZ WIDE CAB(FG****)
								M12
148		SPACER; C/MBR						

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A WHEEL BASE 5300MM(53W) B WHEEL BASE 7100MM(71W) C WHEEL BASE 4700MM(47W)
148		8-97695-165-0		1312-		04	A	(F) IDN
		8-97612-112-0		1402-		02	C	(A)
		8-97695-162-0		1312-		02	A	(A) IDN
		8-97695-163-0		1312-		02	A	(C) IDN
		8-97695-164-0		1312-		02	A	(B) IDN
		8-97611-039-0		1312-1401		02	AB	(E)
		8-97611-039-0		1402-		02	ABC	(E)
		8-97612-109-0		1312-1401		02	AB	(D)
		8-97612-109-0		1402-		02	ABC	(D)
		8-97612-111-0		1312-1401		04	B	(F)
		8-97612-111-0		1402-		04	BC	(F)
		8-97612-113-0		1312-1401		02	B	(B)
		8-97612-113-0		1402-		02	BC	(B)
		8-97612-115-0		1312-1401		02	B	(C)
		8-97612-115-0		1402-		02	BC	(C)
		8-97646-445-0		1312-		02	B	(A)
201		GUSSET; C/MBR						
		8-97695-028-0		1312-		02	A	(B) IDN
		8-97646-544-0		1402-		02	C	FVZ WIDE CAB(FG****) (A)
		8-97647-952-0		1404-		02	C	GVZ WIDE CAB(GG****) (A)
		8-97695-031-0		1312-	L	01	A	(A) IDN
		8-97695-034-0		1312-	R	01	A	(A) IDN
		8-97612-108-2		1312-1401		02	B	(B) IDN
		8-97612-108-2		1402-		02	B	(B) IDN
		8-97612-108-2		1402-		02	C	FVZ WIDE CAB(FG****) (B) IDN
		8-97646-267-0		1312-		02	B	(A)
344		MEMBER; CROSS,4TH						
		8-97695-004-0		1312-		01	A	IDN
		8-97611-238-1		1312-		01	B	IDN
345		MEMBER; CROSS,5TH						
		8-97611-238-1		1312-		01	B	IDN
544		PLATE; CAB FRT MTG						
		8-97695-134-0		1312-		02	A	IDN
		8-97615-598-0		1312-1401		02	B	

https://truckmanualshub.com/

5-01 FRAME AND OTHER PARTS

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A WHEEL BASE 5300MM(53W) B WHEEL BASE 7100MM(71W) C WHEEL BASE 4700MM(47W)
544		8-97615-598-0		1402-		02	BC	

https://truckmanualshub.com/

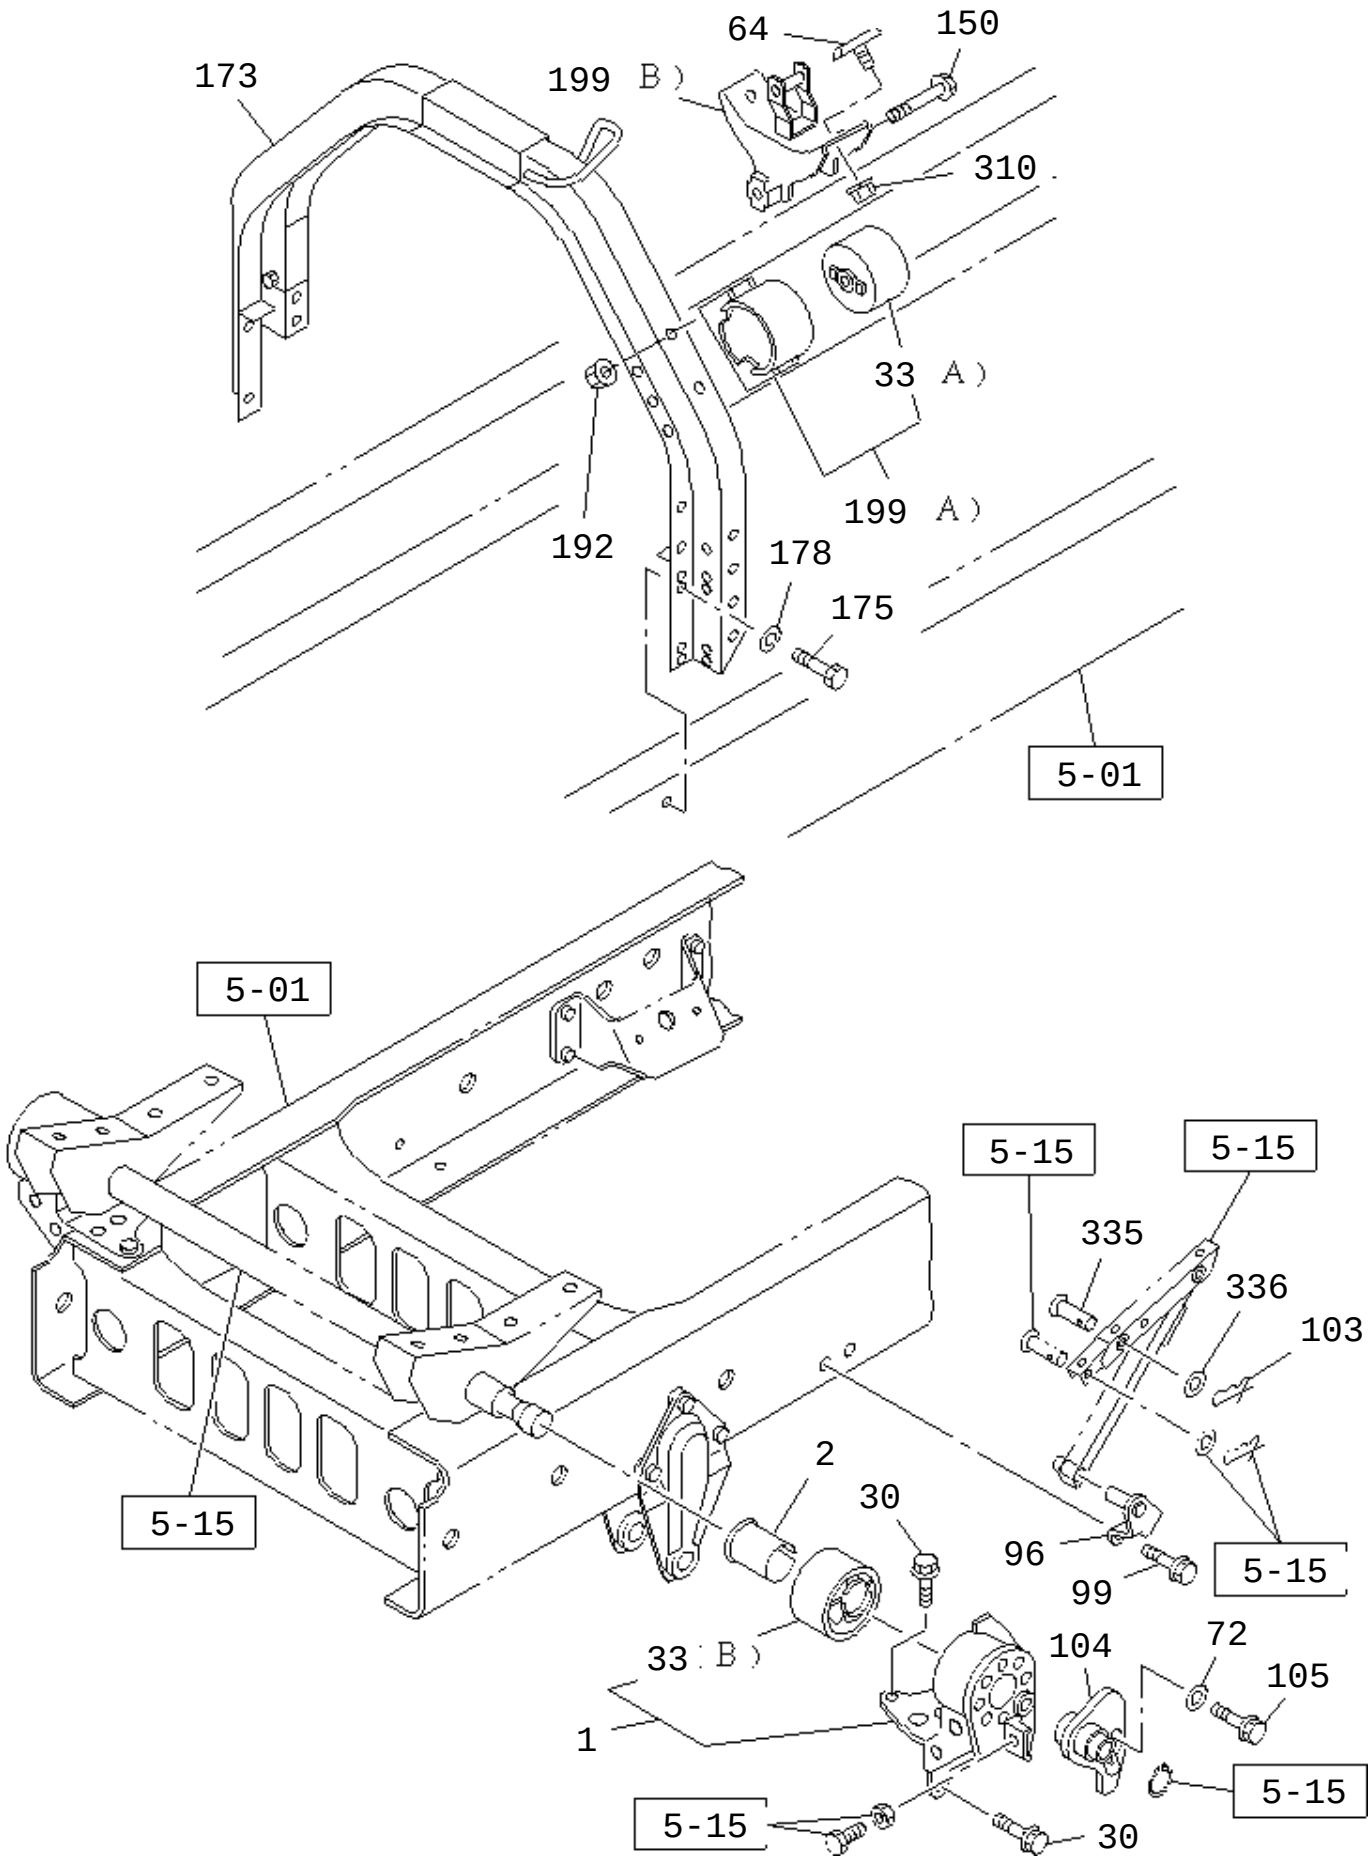

https://truckmanualshub.com/

5-10 CAB MOUNTING; FRAME SIDE

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		BRACKET; CAB MTG						
		8-98013-038-2		1312-1403	L	01	A	CAB SUSPENSION RIGID<W71>
		8-98013-038-2		1404-	L	01	AB	CAB SUSPENSION RIGID<W71>
		8-98017-660-2		1312-1403	R	01	A	CAB SUSPENSION RIGID<W71>
		8-98017-660-2		1404-	R	01	AB	CAB SUSPENSION RIGID<W71>
		8-98017-659-1		1312-1403	L	01	A	CAB SUSPENSION SEMI FLOATING<SDK>
		8-98017-659-1		1404-	L	01	AB	CAB SUSPENSION SEMI FLOATING<SDK>
		8-98017-658-1		1312-1403	R	01	A	CAB SUSPENSION SEMI FLOATING<SDK>
		8-98017-658-1		1404-	R	01	AB	CAB SUSPENSION SEMI FLOATING<SDK>
2		BUSHING; TORSION BAR						
		8-98010-767-0		1312-1403		02	A	CAB SUSPENSION RIGID<W71>
		8-98010-767-0		1404-		02	AB	CAB SUSPENSION RIGID<W71>
30		BOLT; CAB FRT FOOT						
		0-28861-445-0		1312-1403		10	A	M14X45 FLANGE
		0-28861-445-0		1404-		10	AB	M14X45 FLANGE
33		BUSHING; RUBBER,CAB MTG BRKT,FRT						
		8-98013-933-1		1312-1403		02	A	CAB SUSPENSION RIGID<W71> (B)
		8-98013-933-1		1404-		02	AB	CAB SUSPENSION RIGID<W71> (B)
		8-98013-934-1		1312-1403		02	A	CAB SUSPENSION RIGID<W71> (A)
		8-98013-934-1		1404-		02	AB	CAB SUSPENSION RIGID<W71> (A)
		8-98010-759-2		1312-1403		02	A	CAB SUSPENSION SEMI FLOATING<SDK> (A)
		8-98010-759-2		1404-		02	AB	CAB SUSPENSION SEMI FLOATING<SDK> (A)
		8-98065-943-0		1312-1403		02	A	CAB SUSPENSION SEMI FLOATING<SDK> (B)
		8-98065-943-0		1404-		02	AB	CAB SUSPENSION SEMI FLOATING<SDK> (B)
64		RUBBER; CUSHION						
		8-97113-340-0		1312-1403		04	A	
		8-97113-340-0		1404-		04	AB	
72		WASHER; PL,BRKT TO FRAME						
		0-91614-714-0		1312-1403		01	A	ID=15 OD=36
		0-91614-714-0		1404-		01	AB	ID=15 OD=36
96		BRACKET; CAB STAY						
		1-62500-628-0		1312-1403		01	A	
		1-62500-628-0		1404-		01	AB	
99		BOLT; BRKT						
		0-28661-030-0		1312-1403		02	A	M10X30 FLANGE
		0-28661-030-0		1404-		02	AB	M10X30 FLANGE
103		PIN; SPLIT,CAB STAY						
		8-98062-280-0		1312-1403		01	A	L=32.6
		8-98062-280-0		1404-		01	AB	L=32.6
104		BRACKET; CAB FRAME,CAB FRT MTG						
		8-98010-753-3		1312-1403		01	A	
		8-98010-753-3		1404-		01	AB	
105		BOLT; BRKT TO CAB FRAME						
		0-28661-435-0		1312-1403		01	A	M14X35 FLANGE
		0-28661-435-0		1404-		01	AB	M14X35 FLANGE
150		BOLT; CAB MTG RR						
		0-10956-400-0		1312-1403		02	A	M14X100
		0-10956-400-0		1404-		02	AB	M14X100
173		MEMBER; CAB MTG RR						
		8-98242-006-1		1312-1403		01	A	IDN
		8-98242-006-1		1404-		01	AB	IDN
175		BOLT; MEMBER TO FRAME						

https://truckmanualshub.com/


5-10 CAB MOUNTING; FRAME SIDE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
175		0-20951-235-0		1312-1403		08	A	M12X35
		0-20951-235-0		1404-		08	AB	M12X35
178		WASHER; LK,MEMBER						
		0-91510-612-0		1312-1403		08	A	ID=12.2
		0-91510-612-0		1404-		08	AB	ID=12.2
192		NUT; BRKT FIX						
		0-91180-212-0		1312-1403		04	A	M12 FLANGE
		0-91180-212-0		1404-		04	AB	M12 FLANGE
199		BRACKET; CAB RR MTG						
		8-98023-692-0		1312-1403		02	A	(B)
		8-98023-692-0		1404-		02	AB	(B)
		8-98010-770-0		1312-1403		02	A	CAB SUSPENSION RIGID<W71> (A)
		8-98010-770-0		1404-		02	AB	CAB SUSPENSION RIGID<W71> (A)
		8-98060-901-1		1312-1403		02	A	CAB SUSPENSION SEMI FLOATING<SDK> (A)
		8-98060-901-1		1404-		02	AB	CAB SUSPENSION SEMI FLOATING<SDK> (A)
310		NUT; CUSHION						
		0-91180-108-0		1312-1403		04	A	M8 FLANGE
		0-91180-108-0		1404-		04	AB	M8 FLANGE
335		PIN; ADJ,STAY LOCK						
		1-09744-107-0		1312-1403		01	A	OD=10 L=48
		1-09744-107-0		1404-		01	AB	OD=10 L=48
336		WASHER; PL,STAY LOCK						
		1-09985-183-0		1312-1403		01	A	ID=10.5 T=2.0
		1-09985-183-0		1404-		01	AB	ID=10.5 T=2.0
5-01		Move to 5-01						
5-15		Move to 5-15						

https://truckmanualshub.com/


5-15 CAB MOUNTING; CAB SIDE

TORSION BAR AND CAB TILT STAY

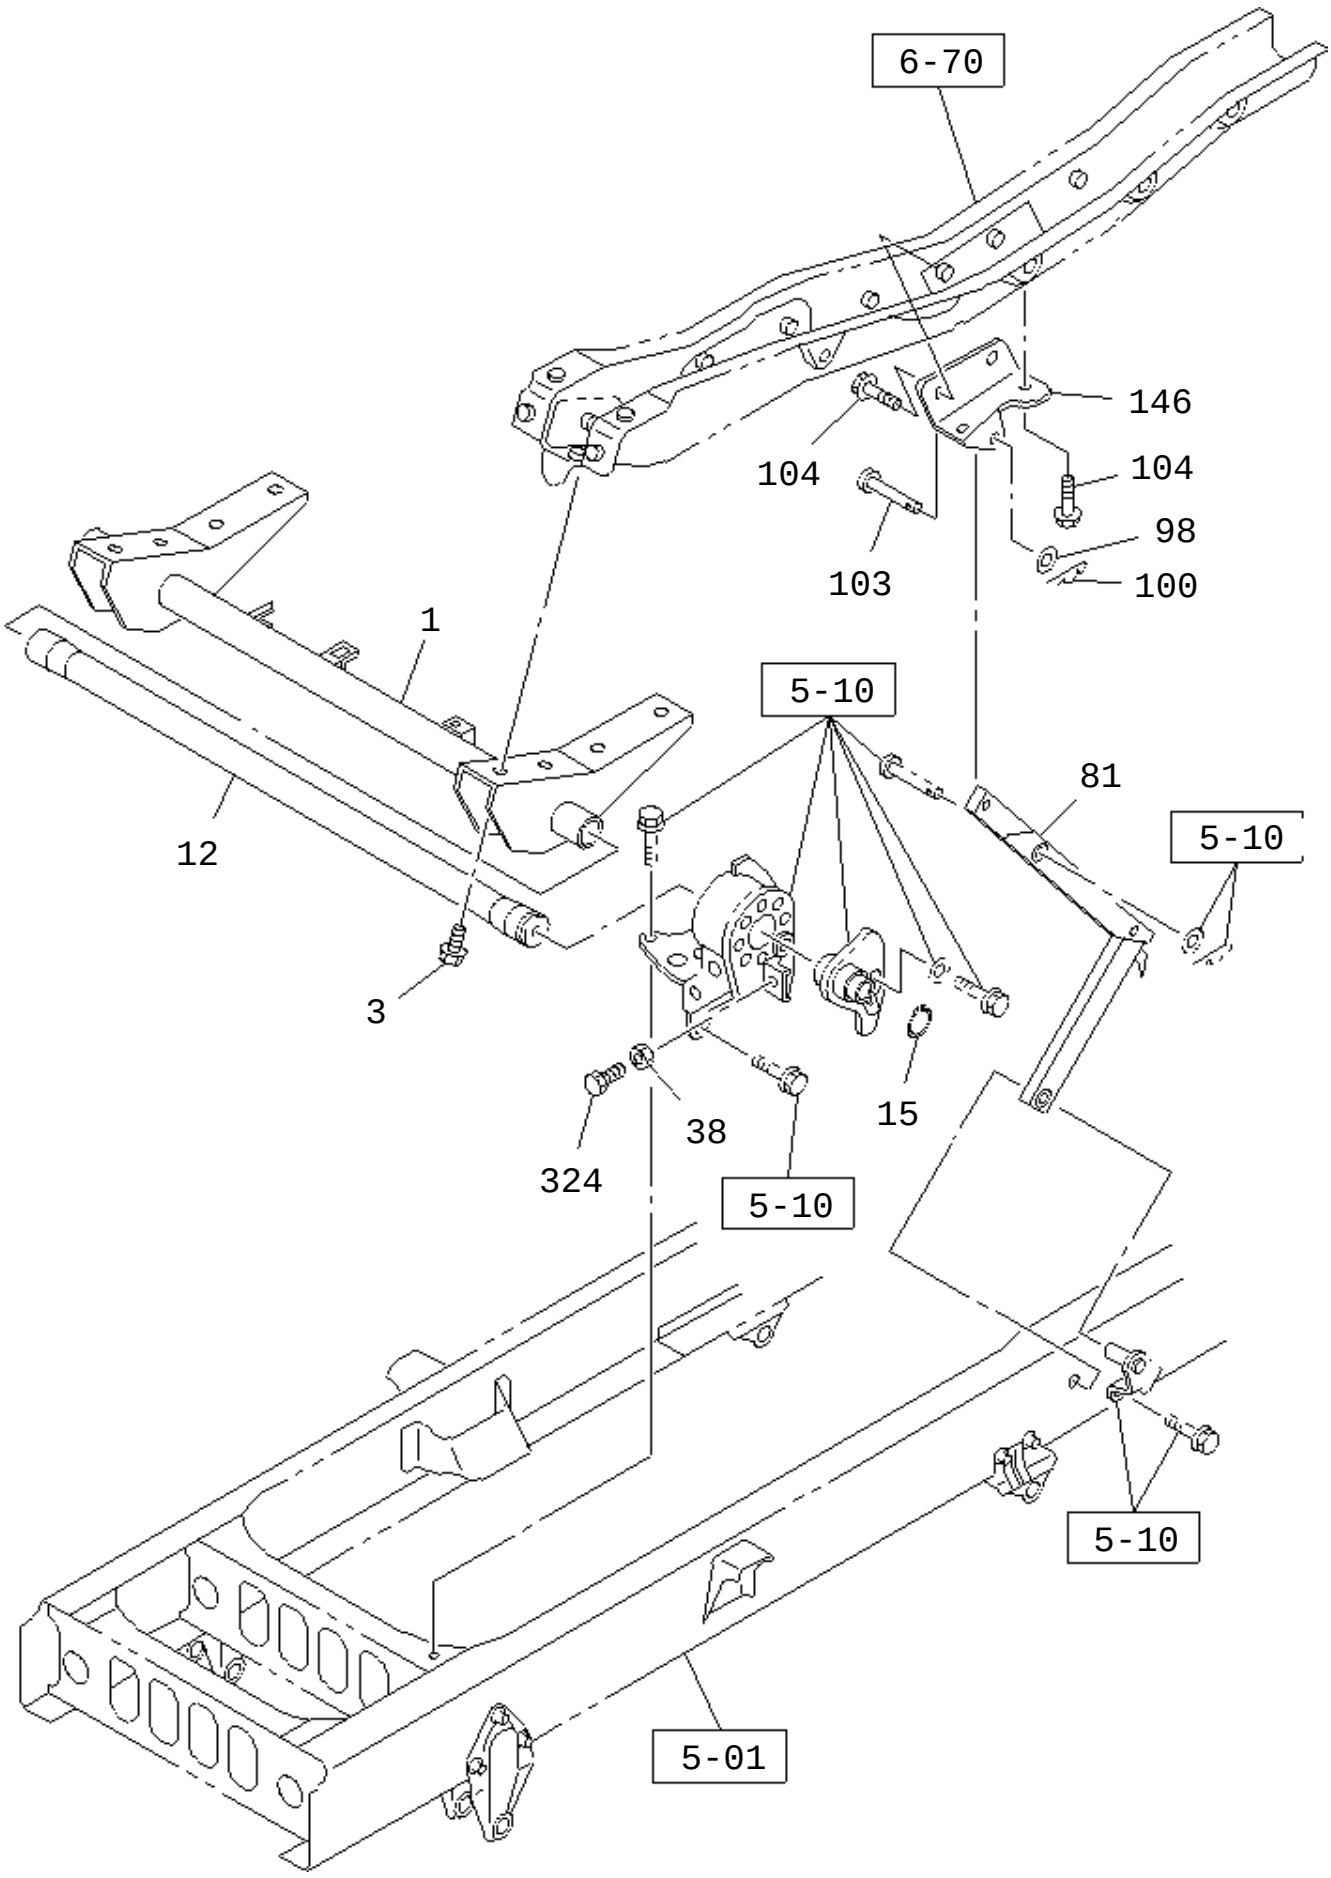


https://truckmanualshub.com/

COMPONENT;CAB TILT STAY

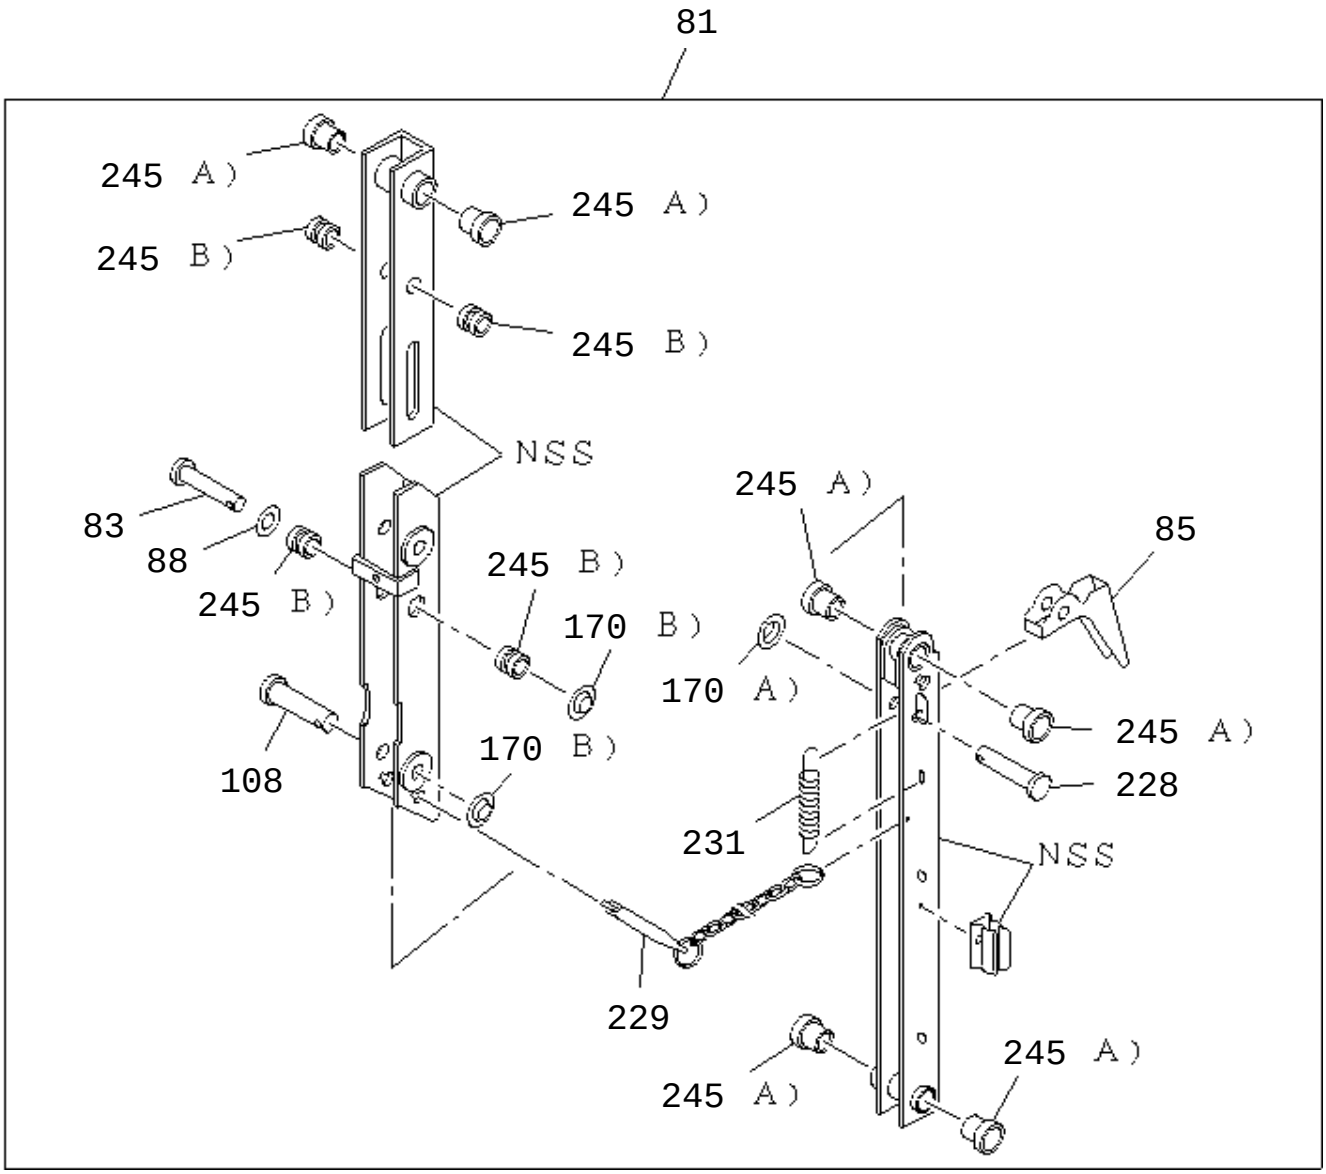

https://truckmanualshub.com/

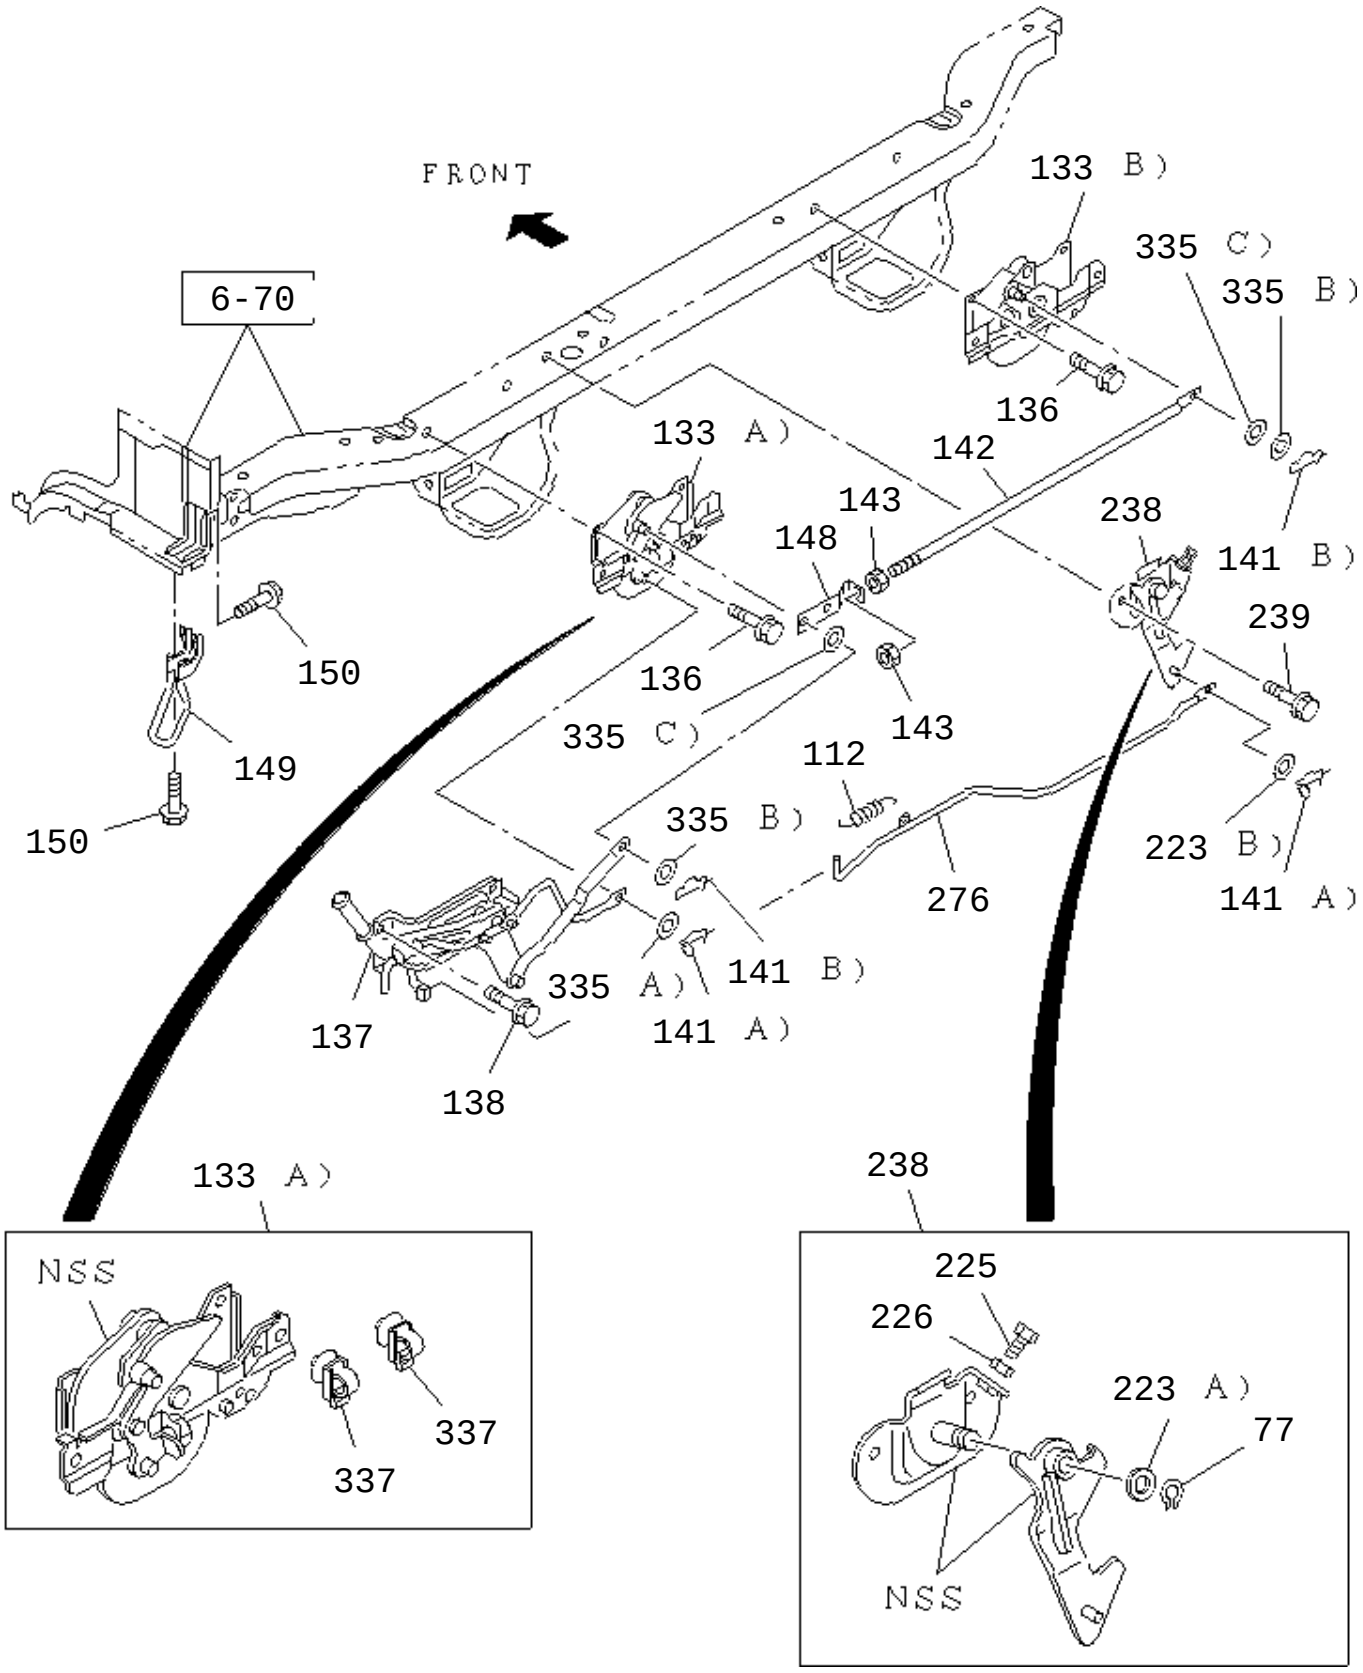

https://truckmanualshub.com/

5-15 CAB MOUNTING; CAB SIDE

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		LEVER; TORSION BAR						
		8-98010-752-7		1312-1403		01	A	
		8-98010-752-7		1404-		01	AB	
3		BOLT; LEVER						
		8-98090-287-1		1312-1403		08	A	M12X42 FLANGE
		8-98090-287-1		1404-		08	AB	M12X42 FLANGE
12		BAR; TORSION,UPR						
		8-98010-947-1		1312-1403		01	A	
		8-98010-947-1		1404-		01	AB	
15		RING; SNAP,TORSION BAR						
		8-97129-615-0		1312-1403		01	A	T=1.90 BLUE
		8-97129-615-0		1404-		01	AB	T=1.90 BLUE
38		NUT; LK						
		0-91110-514-0		1312-1403		01	A	M14
		0-91110-514-0		1404-		01	AB	M14
77		RING; SNAP						
		0-91800-616-0		1312-1403		01	A	ID=14.7
		0-91800-616-0		1404-		01	AB	ID=14.7
81		STAY ASM; CAB TILT						
		1-62500-761-0		1312-1403		01	A	
		1-62500-761-0	C	1404-1406		01	AB	
		8-98278-116-0		1407-		01	AB	
83		PIN; JOINT,CAB STAY						
		1-09744-106-0		1312-1403		01	A	OD=10 L=42
		1-09744-106-0		1404-		01	AB	OD=10 L=42
85		LEVER; LOCK,CAB STAY						
		1-62500-503-0		1312-1403		01	A	
		1-62500-503-0		1404-		01	AB	
88		WASHER; PL,CAB STAY PIN						
		1-09985-183-0		1312-1403		01	A	ID=10.5 T=2.0
		1-09985-183-0		1404-		01	AB	ID=10.5 T=2.0
98		WASHER; CAB STAY						
		1-09985-183-0		1312-1403		01	A	ID=10.5 T=2.0
		1-09985-183-0		1404-		01	AB	ID=10.5 T=2.0
100		PIN; SNAP,CAB STAY TO CAB						
		8-98039-426-1		1312-1403		01	A	L=34
		8-98039-426-1		1404-		01	AB	L=34
103		PIN; JOINT,CAB STAY						
		1-09744-108-1		1312-1403		01	A	
		1-09744-108-1		1404-		01	AB	
104		BOLT; CAB STAY BRKT						
		0-28661-030-0		1312-1403		04	A	M10X30 FLANGE
		0-28661-030-0		1404-		04	AB	M10X30 FLANGE
108		PIN; ADJ,CAB STAY						
		1-09744-106-0		1312-1403		01	A	OD=10 L=42
		1-09744-106-0		1404-		01	AB	OD=10 L=42
112		SPRING; RETURN,SAFETY ROD						
		1-79718-655-0		1312-1403		01	A	
		1-79718-655-0		1404-		01	AB	
133		LOCK ASM; CAB						
		8-98101-514-1		1312-1403	L	01	A	(A)
		8-98101-514-1		1404-	L	01	AB	(A)

https://truckmanualshub.com/

5-15 CAB MOUNTING; CAB SIDE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
133		8-98061-489-1		1312-1403	R	01	A	(B)
		8-98061-489-1		1404-	R	01	AB	(B)
136		BOLT; CAB LK						
		0-28650-820-0		1312-1403		08	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-		08	AB	M8X20 FLANGE IDN
137		CONTROL UNIT; CAB LOCK						
		8-97587-592-5		1312-1403		01	A	
		8-97587-592-5		1404-		01	AB	
138		BOLT; CAB LOCK CONT UNIT						
		0-28650-820-0		1312-1403		04	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-		04	AB	M8X20 FLANGE IDN
141		PIN; SNAP,CAB LOCK ROD						
		8-98039-045-1		1312-1403		02	A	(A) L=25.3
		8-98039-045-1		1404-		02	AB	(A) L=25.3
		8-98062-280-0		1312-1403		02	A	(B) L=32.6
		8-98062-280-0		1404-		02	AB	(B) L=32.6
142		ROD; HOOK TO HOOK						
		8-97587-990-0		1312-1403		01	A	
		8-97587-990-0		1404-		01	AB	
143		NUT; JAW JOINT,HOOK TO HOOK						
		0-91110-510-0		1312-1403		02	A	M10
		0-91110-510-0		1404-		02	AB	M10
146		BRACKET ASM; CAB STAY UPR						
		8-98019-506-0		1312-1403		01	A	
		8-98019-506-0		1404-		01	AB	
148		JOINT; JAW,HOOK TO HOOK						
		8-97410-736-0		1312-1403		01	A	
		8-97410-736-0		1404-		01	AB	
149		HANDLE; TILT						
		8-98025-707-3		1312-1403		01	A	IDN
		8-98025-707-3		1404-		01	AB	IDN
150		BOLT; TILT HANDLE						
		0-28650-820-0		1312-1403		04	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-		04	AB	M8X20 FLANGE IDN
170		NUT						
		8-97022-565-0		1312-1403		01	A	(A) ID=7.9 PUSH NUT
		8-97022-565-0		1404-		01	AB	(A) ID=7.9 PUSH NUT
		8-97022-566-0		1312-1403		02	A	(B) ID=9.9 PUSH NUT
		8-97022-566-0		1404-		02	AB	(B) ID=9.9 PUSH NUT
223		WASHER; PL,SAFETY LK						

https://truckmanualshub.com/

5-15 CAB MOUNTING; CAB SIDE


KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
223		0-91610-508-0		1312-1403		01	A	(B) ID=8.4 OD=16
		0-91610-508-0		1404-		01	AB	(B) ID=8.4 OD=16
		0-91610-516-0		1312-1403		01	A	(A) ID=17 OD=30
		0-91610-516-0		1404-		01	AB	(A) ID=17 OD=30
225		BOLT; SAFETY LK						
		0-28050-830-0		1312-1403		01	A	M8X30 FLANGE
		0-28050-830-0		1404-		01	AB	M8X30 FLANGE
226		NUT; SAFETY LK						
		0-91110-508-0		1312-1403		01	A	M8 IDN
		0-91110-508-0		1404-		01	AB	M8 IDN
228		PIN; SAFETY LOCK SPRING,CAB STAY						
		1-09744-086-2		1312-1403		01	A	
		1-09744-086-2		1404-		01	AB	
229		PIN ASM; SAFETY						
		1-62500-517-1		1312-1403		01	A	
		1-62500-517-1		1404-		01	AB	
231		SPRING; RETURN,LOCK LEVER,CAB STAY						
		1-09583-244-0		1312-1403		01	A	
		1-09583-244-0		1404-		01	AB	
238		LOCK ASM; SAFETY,CAB TILT						
		8-98048-899-1		1312-1403		01	A	
		8-98048-899-1		1404-		01	AB	
239		BOLT; SAFETY LK						
		0-28650-820-0		1312-1403		02	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-		02	AB	M8X20 FLANGE IDN
245		BUSHING; CAB STAY						
		1-62500-587-0		1312-1403		06	A	(A)
		1-62500-587-0		1404-		06	AB	(A)
		1-62500-588-0		1312-1403		04	A	(B)
		1-62500-588-0		1404-		04	AB	(B)
276		ROD ASM; CAB LOCK,HOOK TO HOOK						
		8-98048-831-1		1312-1403		01	A	
		8-98048-831-1		1404-		01	AB	
324		BOLT; ADJUST						
		8-98004-319-1		1312-1403		01	A	M14X55
		8-98004-319-1		1404-		01	AB	M14X55
335		WASHER; CAB LOCK ROD						
		0-91610-508-0		1312-1403		01	A	(A) ID=8.4 OD=16
		0-91610-508-0		1404-		01	AB	(A) ID=8.4 OD=16
		0-91610-612-0		1312-1403		02	A	(B) ID=12.5 OD=26
		0-91610-612-0		1404-		02	AB	(B) ID=12.5 OD=26

https://truckmanualshub.com/

5-15 CAB MOUNTING; CAB SIDE

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
335		8-98060-839-0		1312-1403		02	A	(C) ID=13 OD=22 IDN
		8-98060-839-0		1404-		02	AB	(C) ID=13 OD=22 IDN
337		CLIP; CAB LOCK 8-97173-307-0		1312-1403	L	02	A	L=155 IDN
		8-97173-307-0		1404-	L	02	AB	L=155 IDN
5-01		Move to 5-01						
5-10		Move to 5-10						
6-70		Move to 6-70						

https://truckmanualshub.com/

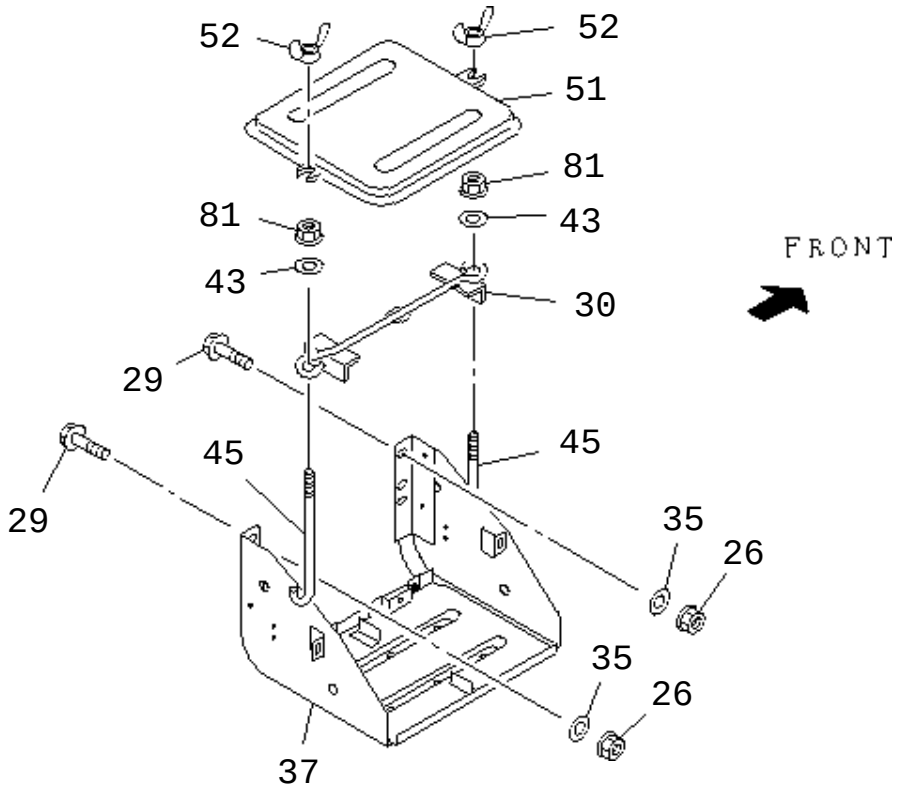


https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
26		NUT; BRKT					
		0-91180-210-0		1312-1403	04	A	M10 FLANGE
		0-91180-210-0		1404-	04	AB	M10 FLANGE
29		BOLT; BRKT TO FRAME					
		0-28651-035-0		1312-1403	04	A	M10X35 FLANGE IDN
		0-28651-035-0		1404-	04	AB	M10X35 FLANGE IDN
30		PLATE; BATTERY					
		5-53615-004-1		1312-1403	01	A	IDN
		5-53615-004-1		1404-	01	AB	IDN
35		WASHER; PL,BATTERY CARRIER					
		0-91614-610-0		1312-1403	04	A	ID=10.5 OD=22
		0-91614-610-0		1404-	04	AB	ID=10.5 OD=22
37		BRACKET; BATTERY					
		8-97384-068-2		1312-1403	01	A	BATTERY 65D23L<8EJ> IDN
		8-97384-068-2		1404-	01	AB	BATTERY 65D23L<8EJ> IDN
		8-97384-067-2		1312-1403	01	A	BATTERY 80D26L<TM1> IDN
		8-97384-067-2		1404-	01	AB	BATTERY 80D26L<TM1> IDN
43		WASHER; PL,CLAMP					
		0-91614-708-0		1312-1403	02	A	ID=8.4 OD=22 IDN
		0-91614-708-0		1404-	02	AB	ID=8.4 OD=22 IDN
45		ROD; TENSION,BATTERY					
		9-53616-615-0		1312-1403	02	A	IDN
		9-53616-615-0		1404-	02	AB	IDN
51		COVER; BATTERY					
		8-97120-747-0		1312-1403	01	A	IDN
		8-97120-747-0		1404-	01	AB	IDN
52		NUT; WING,COVER FIX					
		0-91118-408-0		1312-1403	02	A	M8 WING NUT IDN
		0-91118-408-0		1404-	02	AB	M8 WING NUT IDN
81		NUT; BATTERY					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE

https://truckmanualshub.com/

SPARE WHEEL CARRIER FRAME REAR

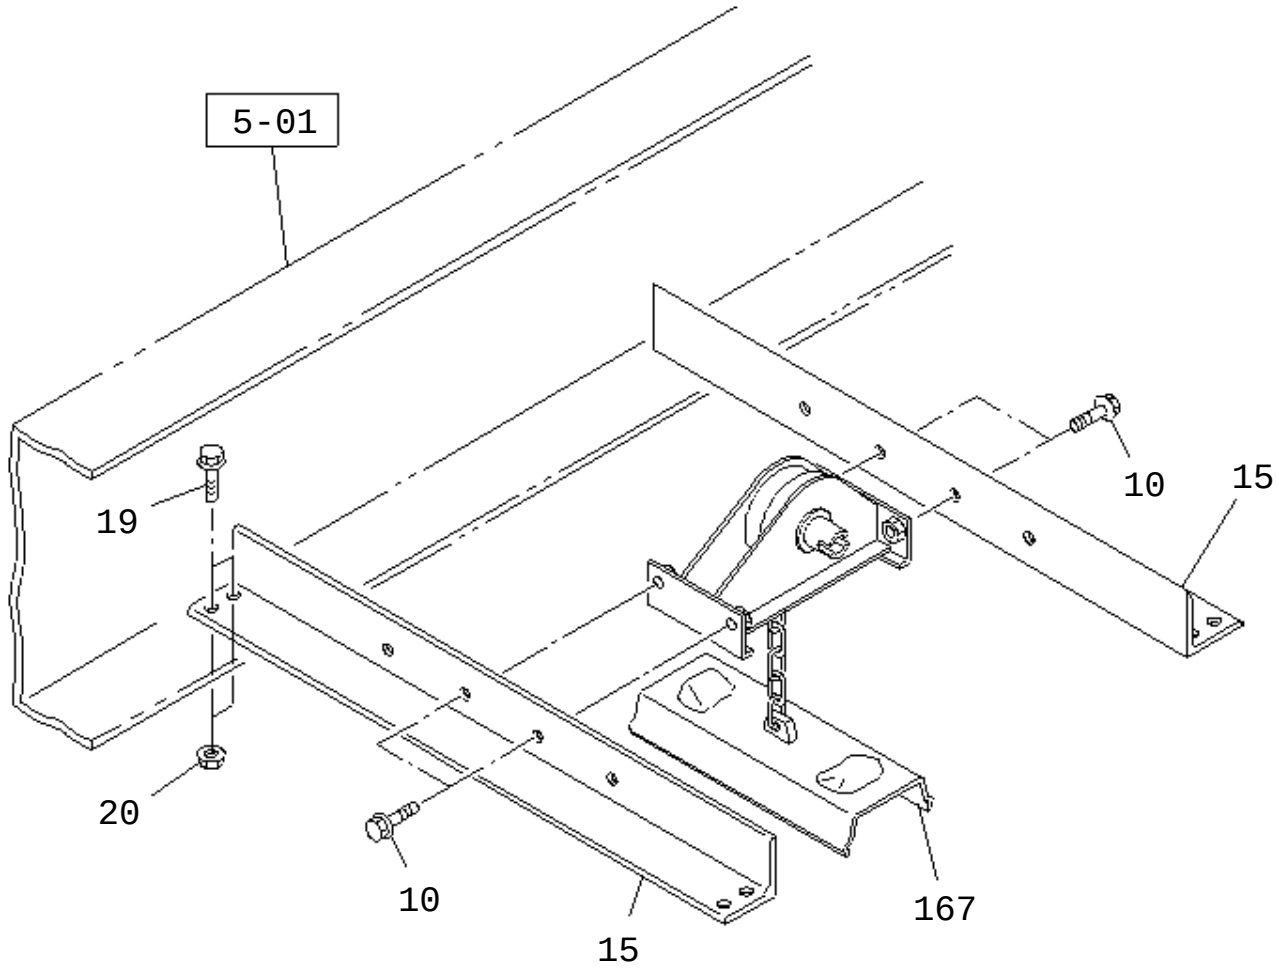

SPARE TIRE CARRIER LIFTING TYPE VAR1

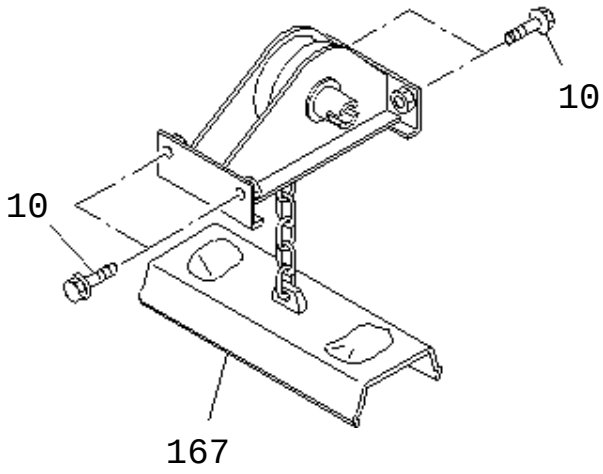


https://truckmanualshub.com/

SPARE TIRE CARRIER AND COVER

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
10		BOLT; TIRE HANGER					
		0-28651-230-0		1312-1403	04	A	SPARE WHEEL CARRIER FRAME REAR(P10) M12X30 FLANGE
		0-28651-230-0		1404-	04	A	SPARE WHEEL CARRIER FRAME REAR(P10) M12X30 FLANGE
		0-28651-230-0		1404-	04	B	SPARE TIRE CARRIER LIFTING TYPE VAR1(SY8) M12X30 FLANGE
15		MEMBER; CROSS,SPARE TIRE					
		1-53631-395-1		1312-	02	A	SPARE WHEEL CARRIER FRAME REAR(P10)
19		BOLT; C/MBR					
		0-28051-040-0		1312-	08	A	SPARE WHEEL CARRIER FRAME REAR(P10) M10X40 FLANGE
20		NUT; C/MBR					
		0-91180-210-0		1312-	08	A	SPARE WHEEL CARRIER FRAME REAR(P10) M10 FLANGE
167		HANGER; TIRE					
		8-97948-022-0		1312-1403	01	A	SPARE WHEEL CARRIER FRAME REAR(P10) IDN
		8-97948-022-0		1404-	01	A	SPARE WHEEL CARRIER FRAME REAR(P10) IDN
		8-97948-022-0		1404-	01	B	SPARE TIRE CARRIER LIFTING TYPE VAR1(SY8) IDN
5-01		Move to 5-01					

https://truckmanualshub.com/

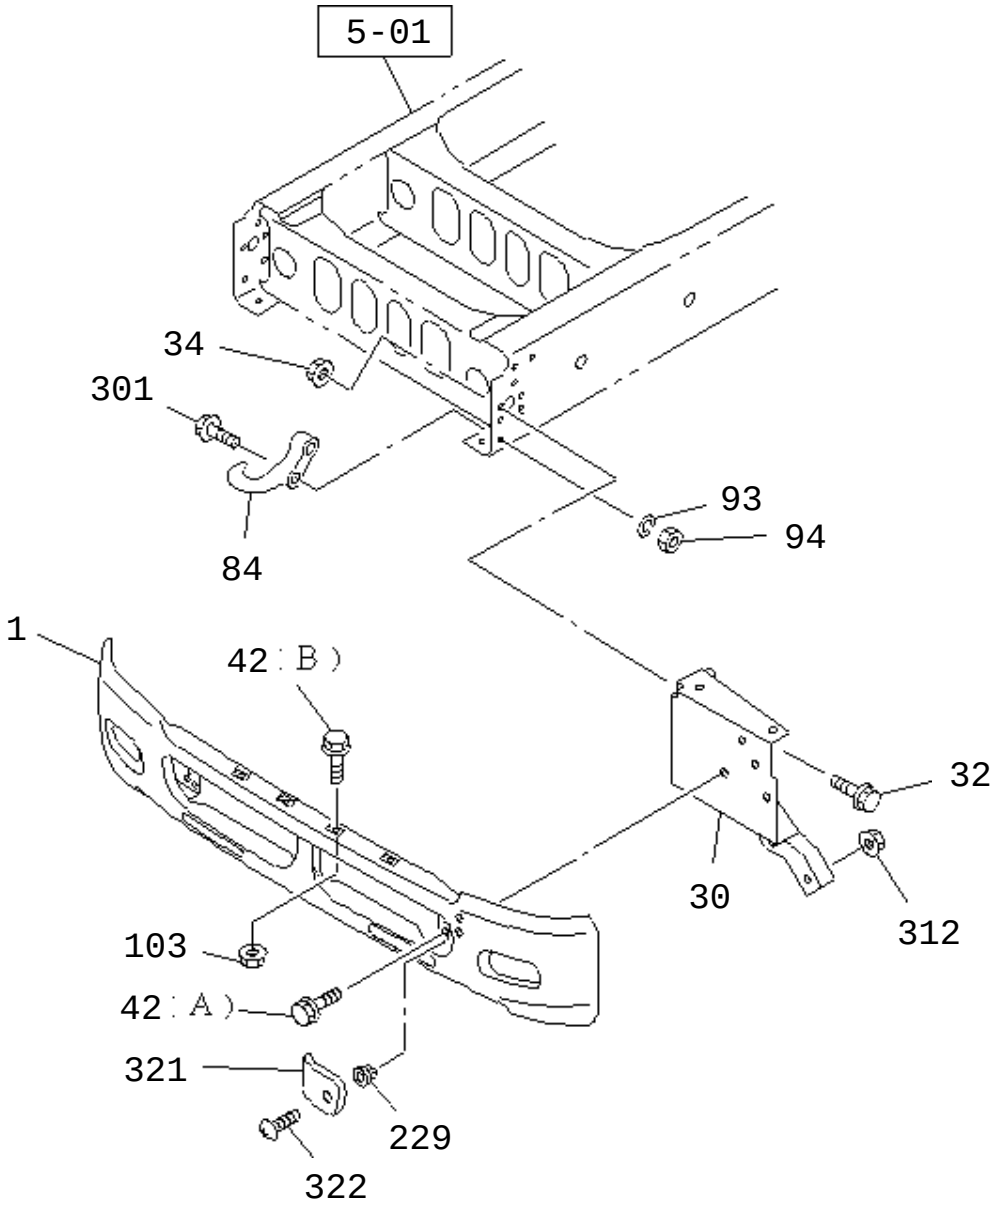

https://truckmanualshub.com/

6-01 FRONT BUMPER


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	C	BUMPER ASM; FRT						
		8-97425-754-0		1312-1403		01	A	
								WHITE
		8-97425-754-0		1404-		01	AB	
								WHITE
30		BRACKET; FRT BUMPER						
		8-98205-745-0		1312-1403	L	01	A	
		8-98205-745-0		1404-	L	01	AB	
		8-98205-744-0		1312-1403	R	01	A	
		8-98205-744-0		1404-	R	01	AB	
32		BOLT; BRKT,BUMPER						
		0-28651-035-0		1312-1403		08	A	
								M10X35 FLANGE
								IDN
		0-28651-035-0		1404-		08	AB	
								M10X35 FLANGE
								IDN
34		NUT; BRKT,BUMPER						
		0-91180-210-0		1312-1403		08	A	
								M10 FLANGE
		0-91180-210-0		1404-		08	AB	
								M10 FLANGE
42		BOLT; BUMPER						
		8-94324-205-0		1312-1403		06	A	
								(A)
								M10X30
		8-94324-205-0		1404-		06	AB	
								(A)
								M10X30
		8-98098-459-0		1312-1403		04	A	
								(B)
								M6X16 FLANGE
		8-98098-459-0		1404-		04	AB	
								(B)
								M6X16 FLANGE
84		HOOK						
		1-57181-027-1		1312-1403	L	01	A	
		1-57181-027-1		1404-	L	01	AB	
93		WASHER; LK,HOOK						
		0-91510-816-0		1312-1403		02	A	
								ID=16.2
		0-91510-816-0		1404-		02	AB	
								ID=16.2
94		NUT; HOOK						
		0-91110-516-0		1312-1403		02	A	
								M16
		0-91110-516-0		1404-		02	AB	
								M16
103		NUT; BUMPER STEP						
		0-91180-106-0		1312-1403		04	A	
								M6 FLANGE
		0-91180-106-0		1404-		04	AB	
								M6 FLANGE
229		GROMMET						
		5-09983-007-0		1312-1403		02	A	
								D=7X7 L=7.5
		5-09983-007-0		1404-		02	AB	
								D=7X7 L=7.5
301		BOLT; HOOK TO FRAME						
		0-10961-670-0		1312-1403		02	A	
								M16X70
		0-10961-670-0		1404-		02	AB	
								M16X70
312		NUT; BRKT						
		0-91180-210-0		1312-1403		02	A	
								M10 FLANGE
		0-91180-210-0		1404-		02	AB	
								M10 FLANGE
321		COVER; BUMPER FRT SIDE						
		8-97616-291-1		1312-1403	L	01	A	
		8-97616-291-1		1404-	L	01	AB	
		8-97616-290-1		1312-1403	R	01	A	
		8-97616-290-1		1404-	R	01	AB	
322		SCREW; COVER FIX						

https://truckmanualshub.com/

6-01 FRONT BUMPER

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
322		0-72180-516-0		1312-1403		02	A	M5X16 TAPPING
		0-72180-516-0		1404-		02	AB	M5X16 TAPPING
5-01		Move to 5-01						

https://truckmanualshub.com/

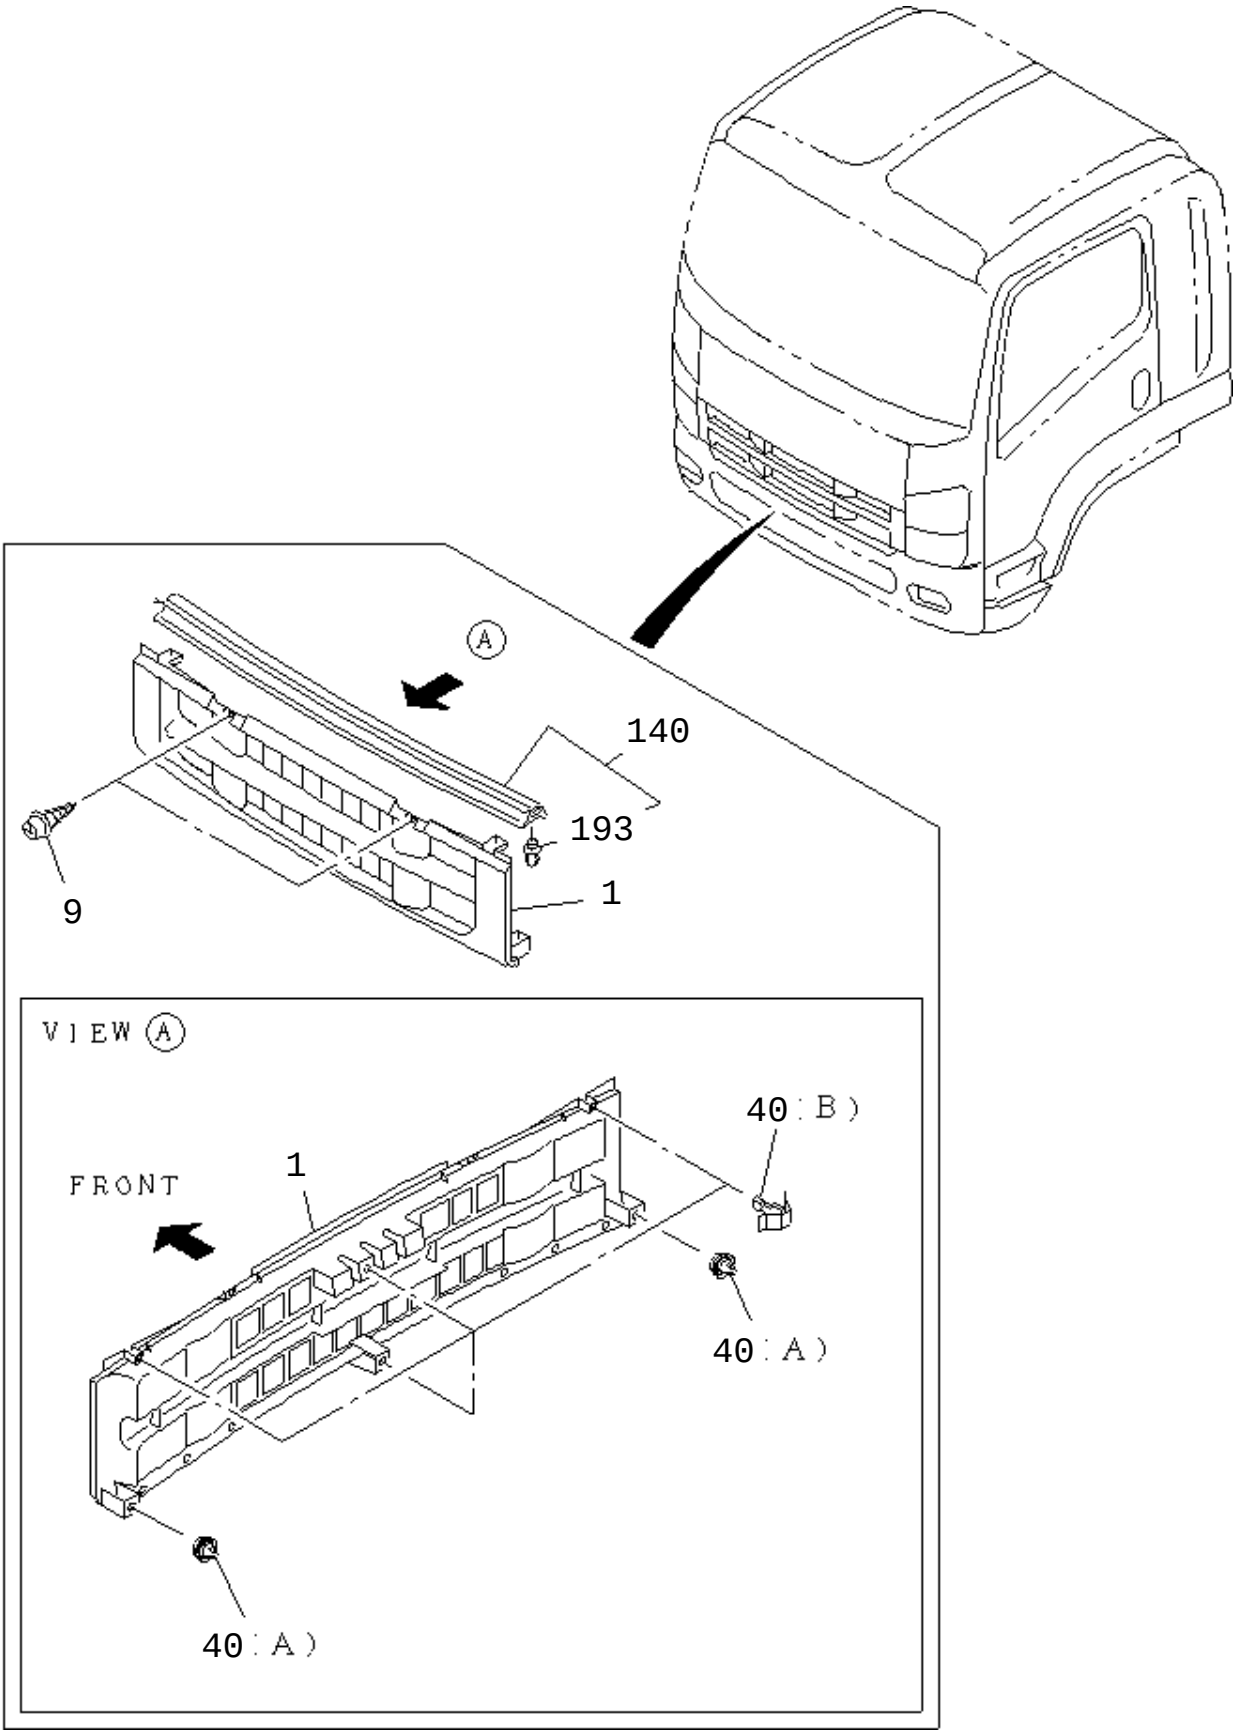


https://truckmanualshub.com/


6-03 RADIATOR GRILLE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	C	GRILLE; RAD					
		8-98040-997-6		1312-1403	01	A	DARK GRAY
		8-98040-997-6		1404-	01	AB	DARK GRAY
9		SCREW; RAD GRILLE					
		0-74160-516-0		1312-1403	02	A	M5X16 TAPPING W/PL WASHER IDN
		0-74160-516-0		1404-	02	AB	M5X16 TAPPING W/PL WASHER IDN
40		CLIP; RAD GRILLE					
		8-97581-651-2		1312-1403	02	A	(A)
		8-97581-651-2		1404-	02	AB	(A)
		8-98025-698-0		1312-1403	04	A	(B)
		8-98025-698-0		1404-	04	AB	(B)
140		SEAL; RAD GRILLE					
		8-98060-340-0		1312-1403	01	A	
		8-98060-340-0		1404-	01	AB	
193		CLIP; SEAL					
		8-98027-457-0		1312-1403	13	A	NATURAL IDN
		8-98027-457-0		1404-	13	AB	NATURAL IDN

https://truckmanualshub.com/

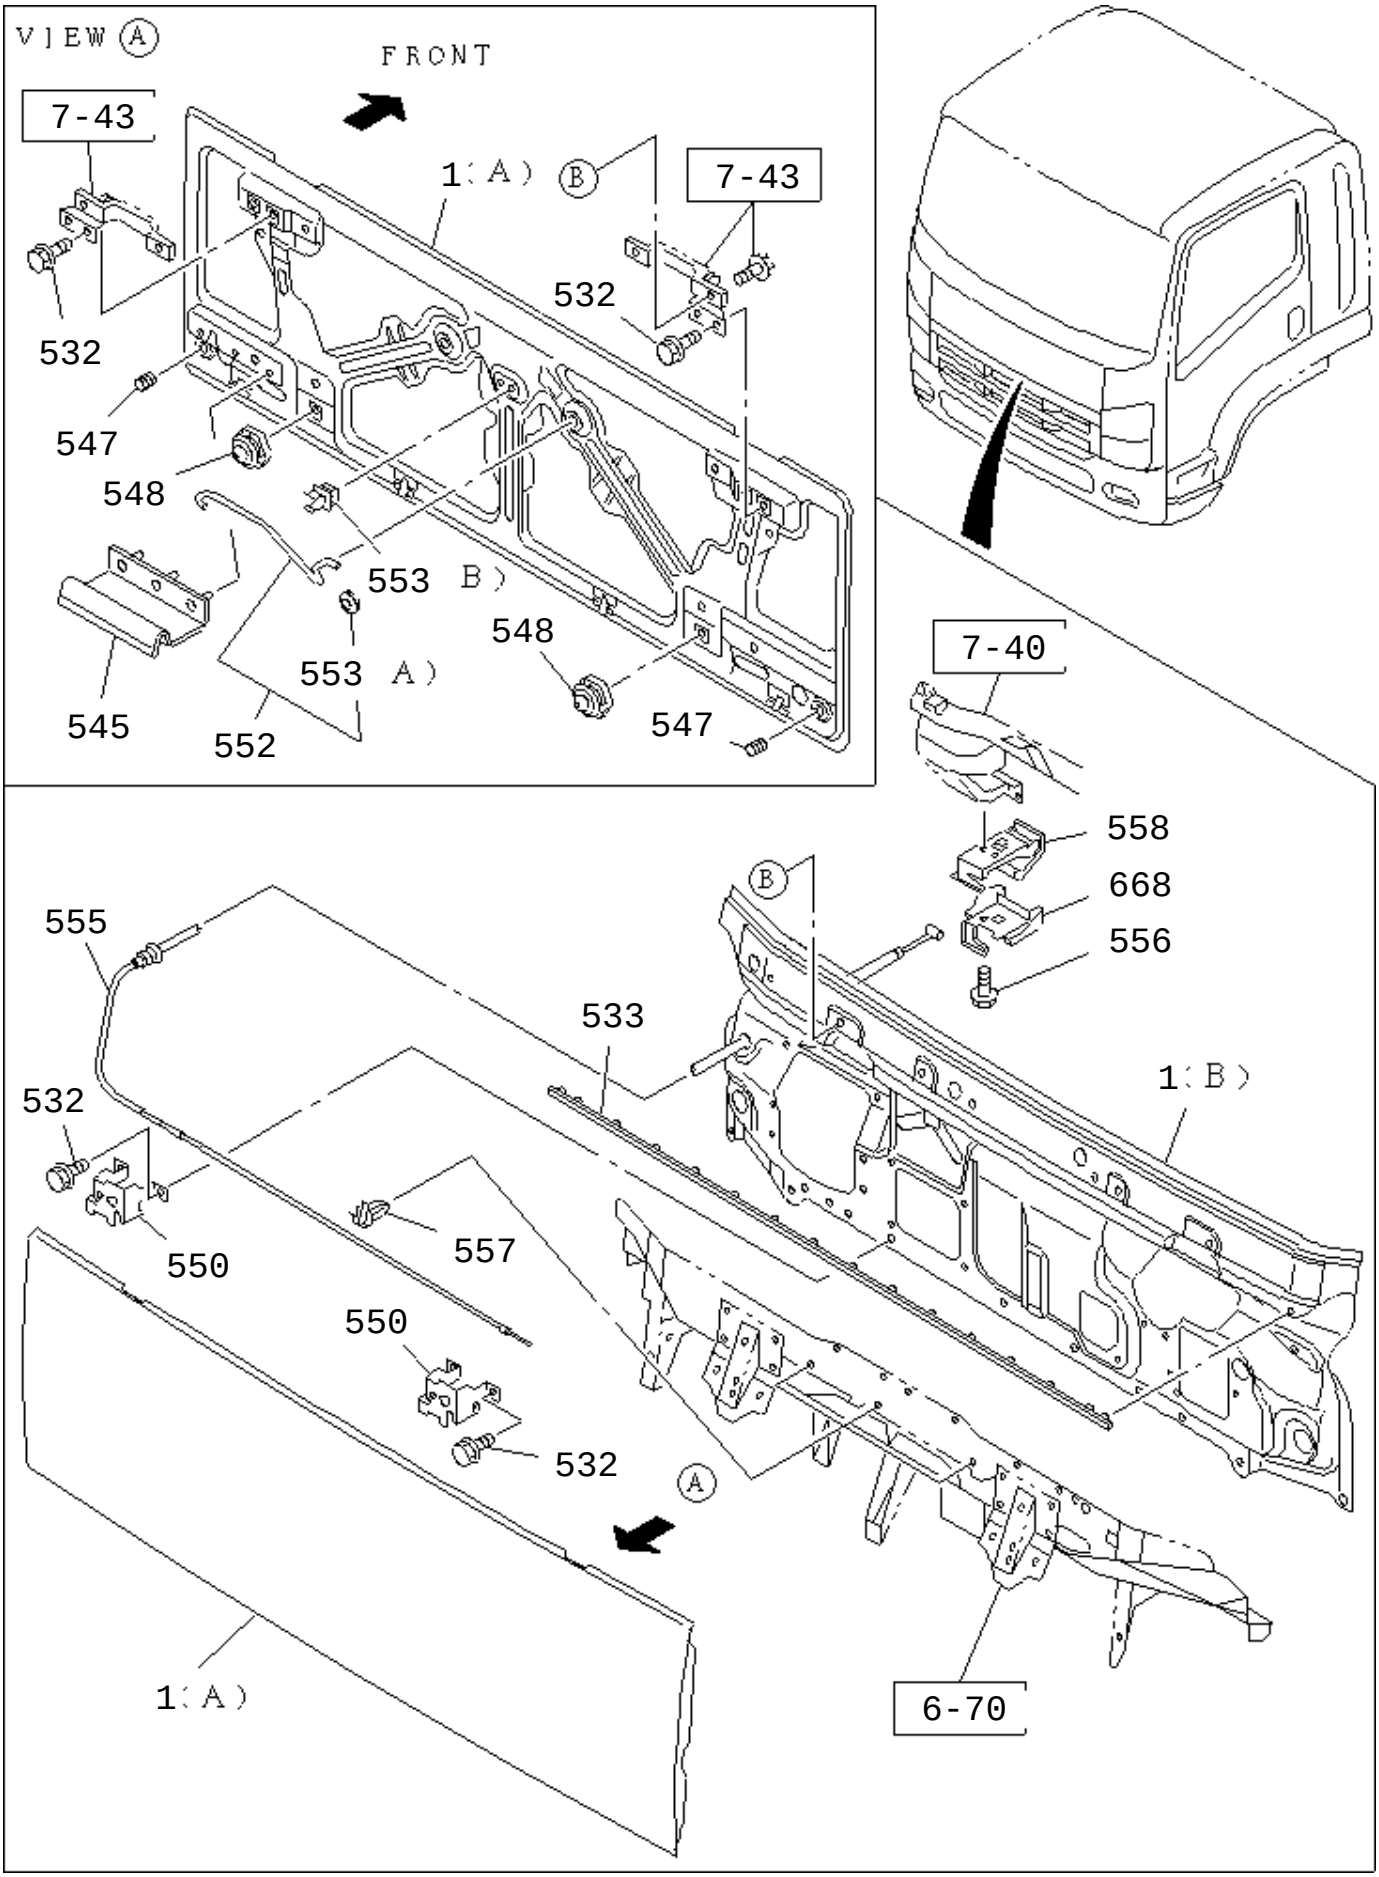


https://truckmanualshub.com/

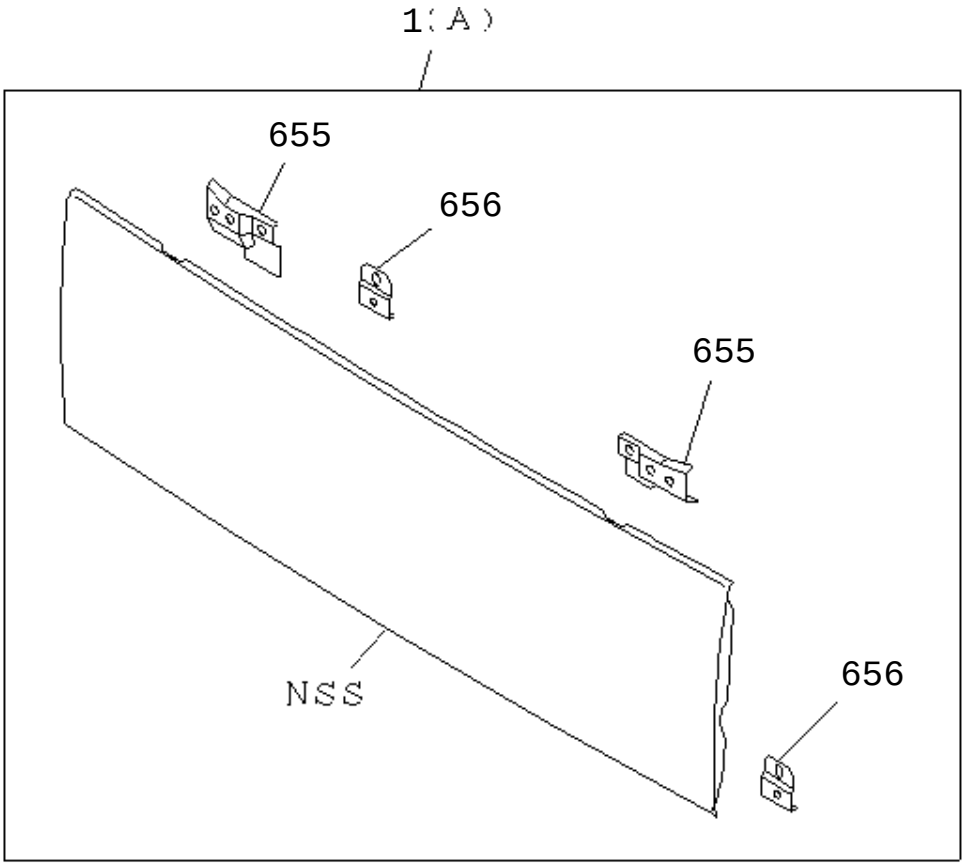


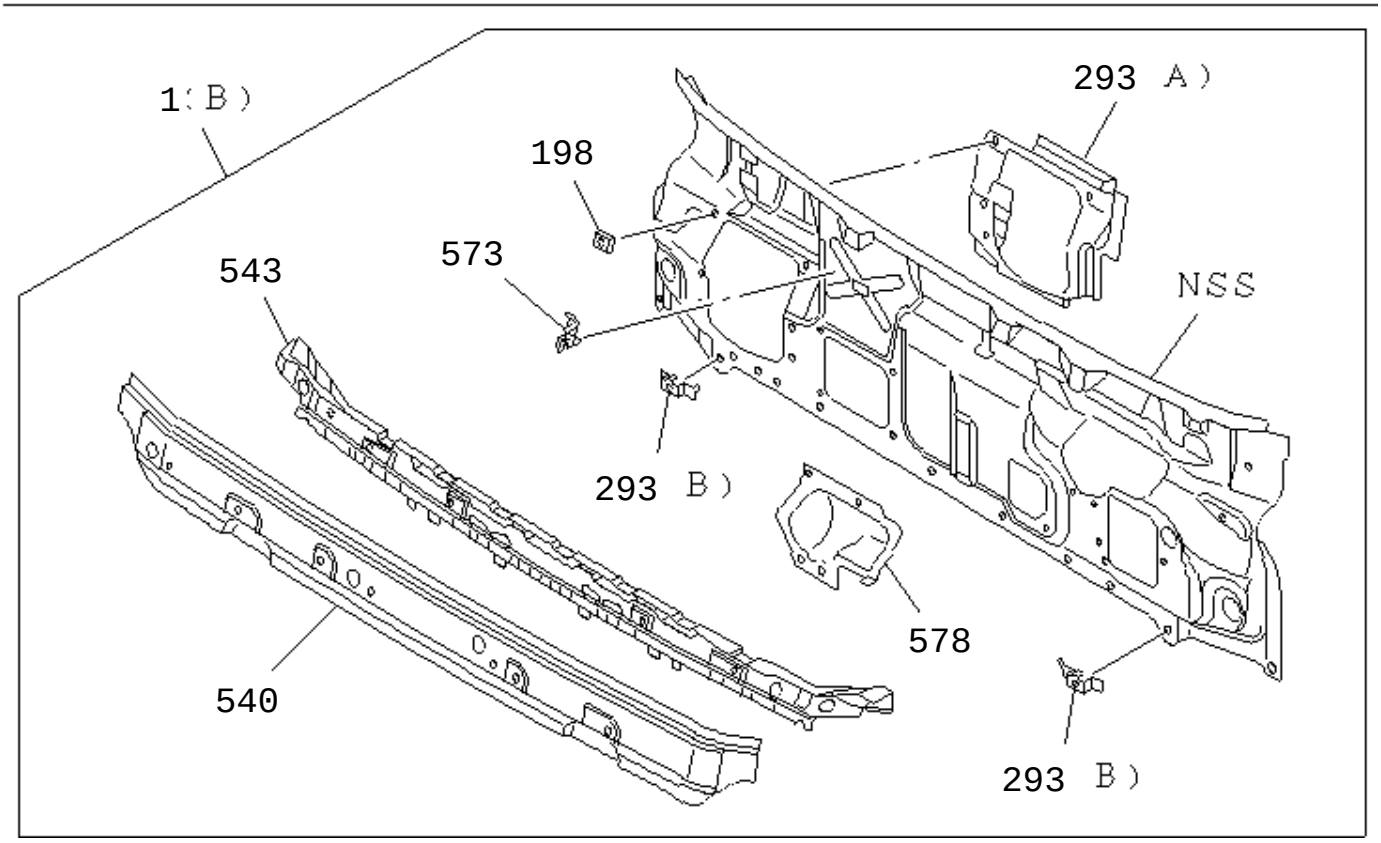


https://truckmanualshub.com/

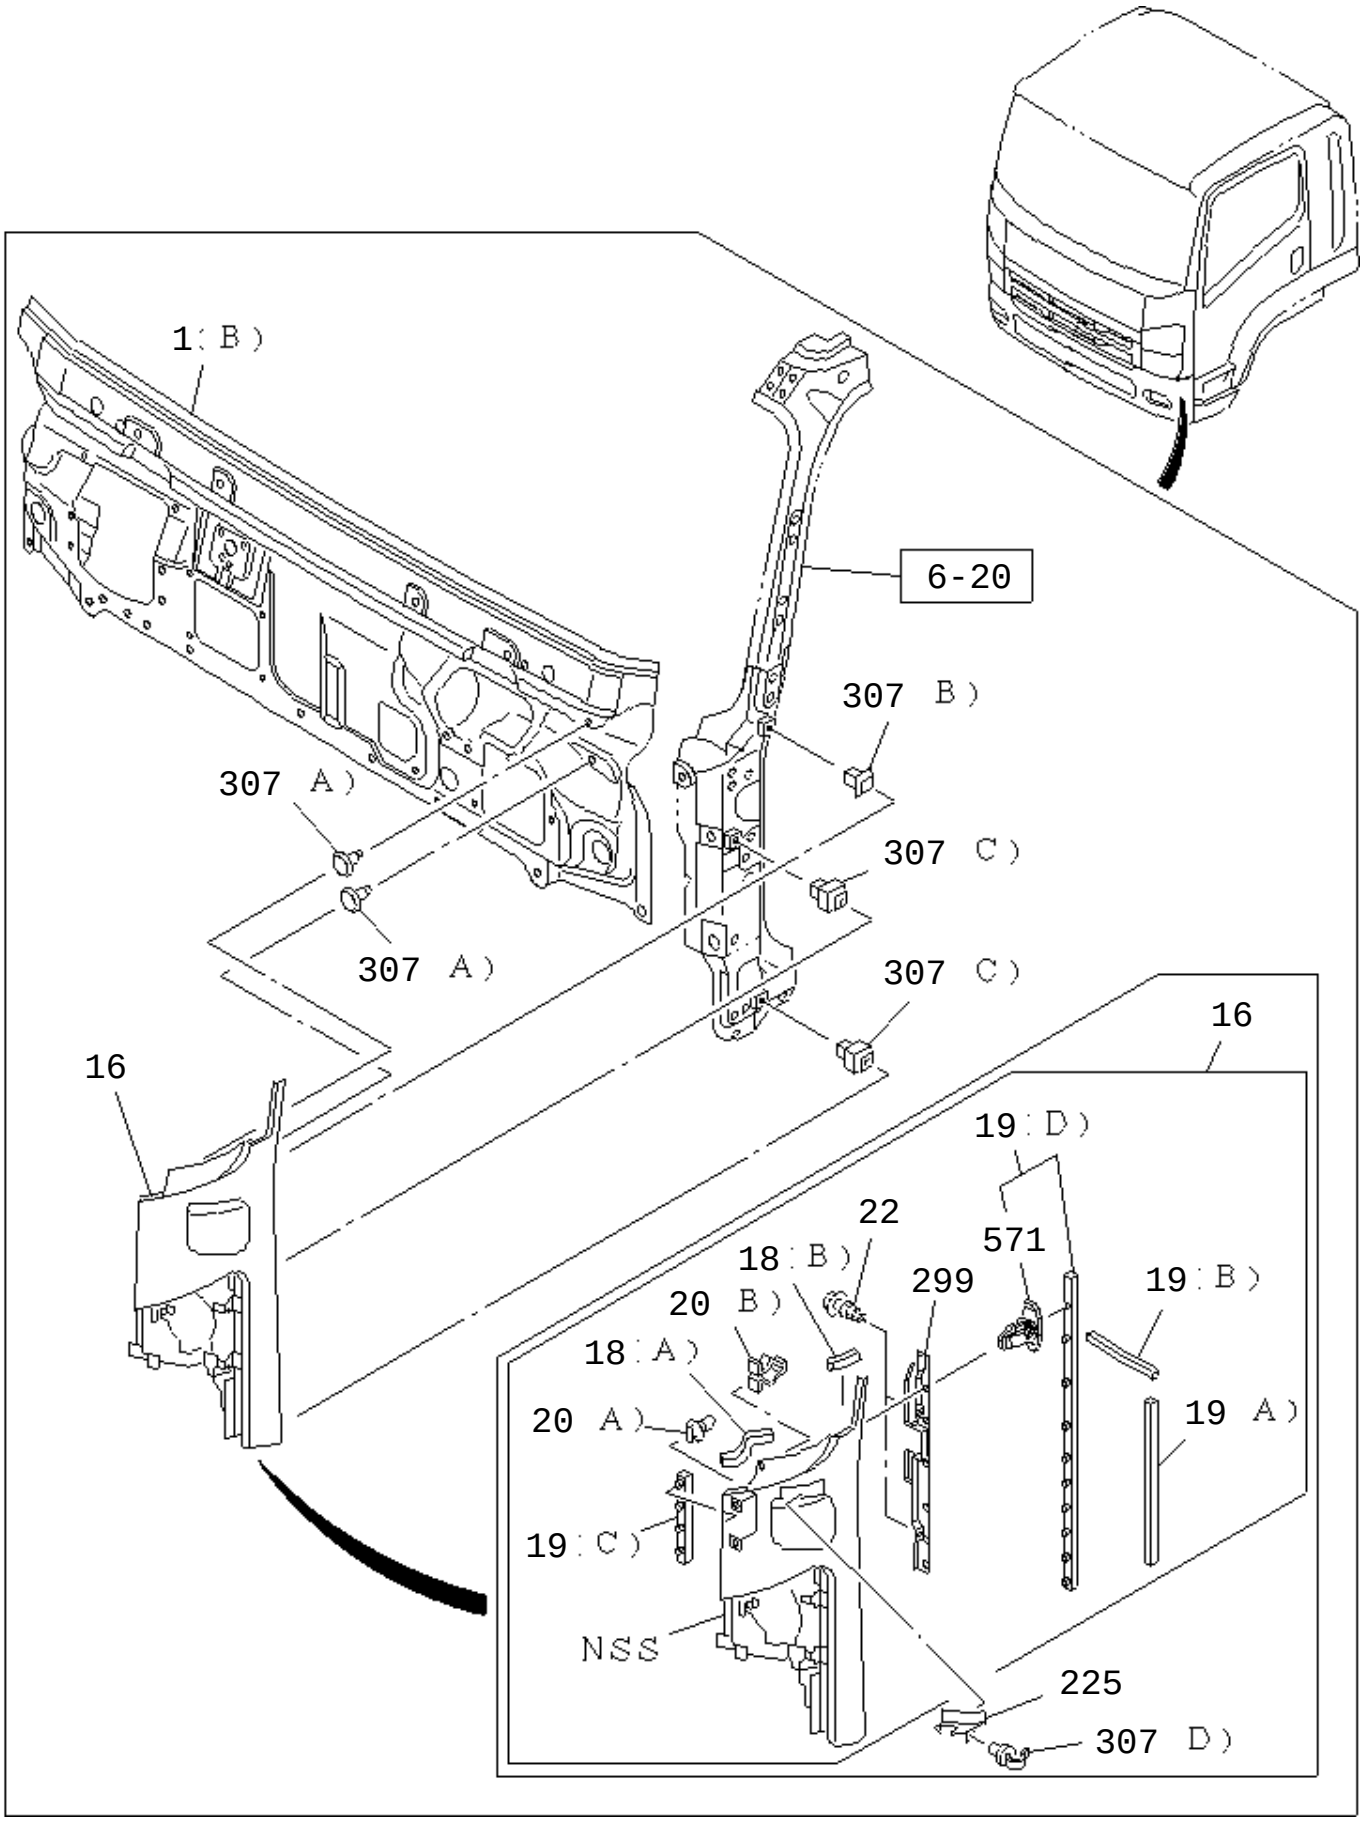

https://truckmanualshub.com/

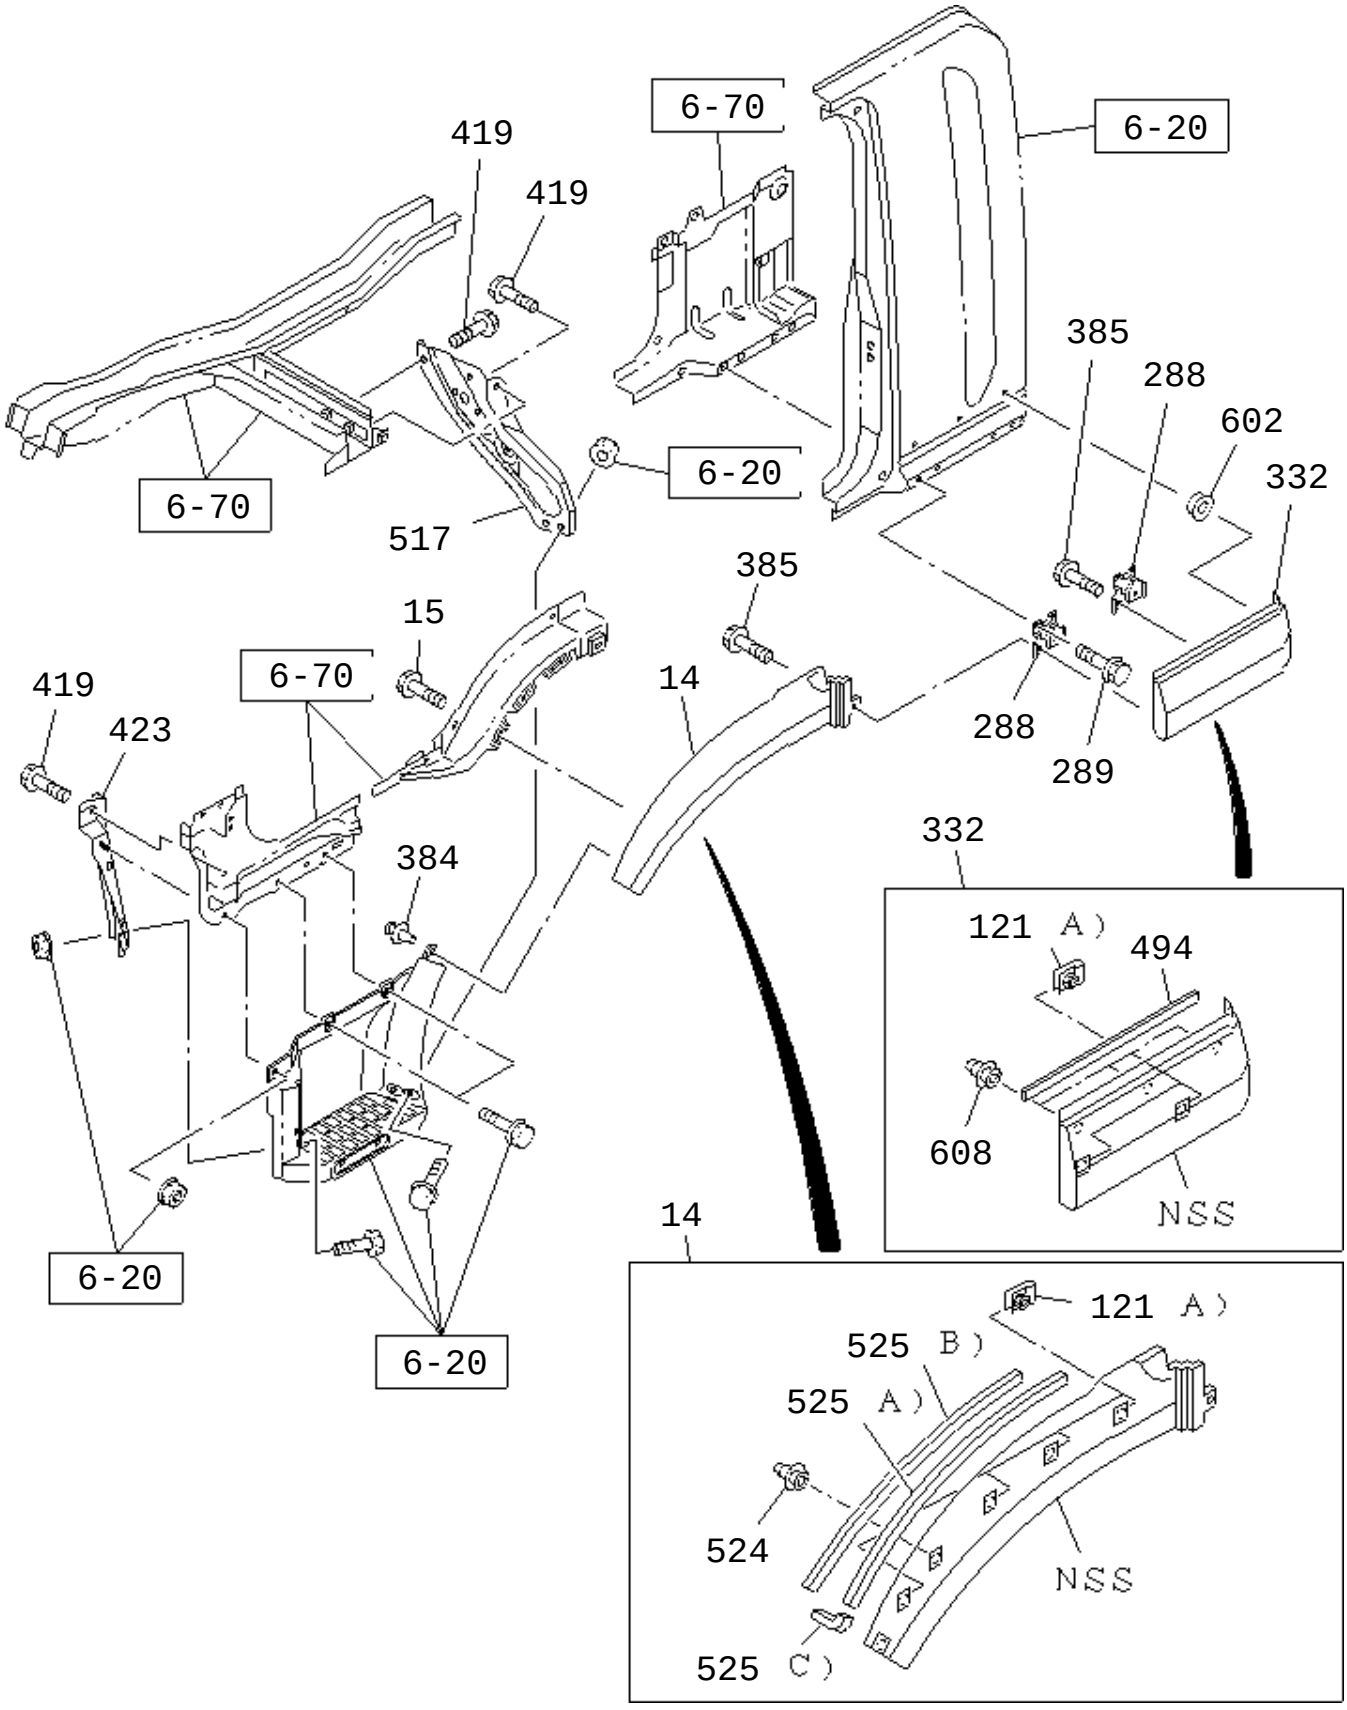

https://truckmanualshub.com/

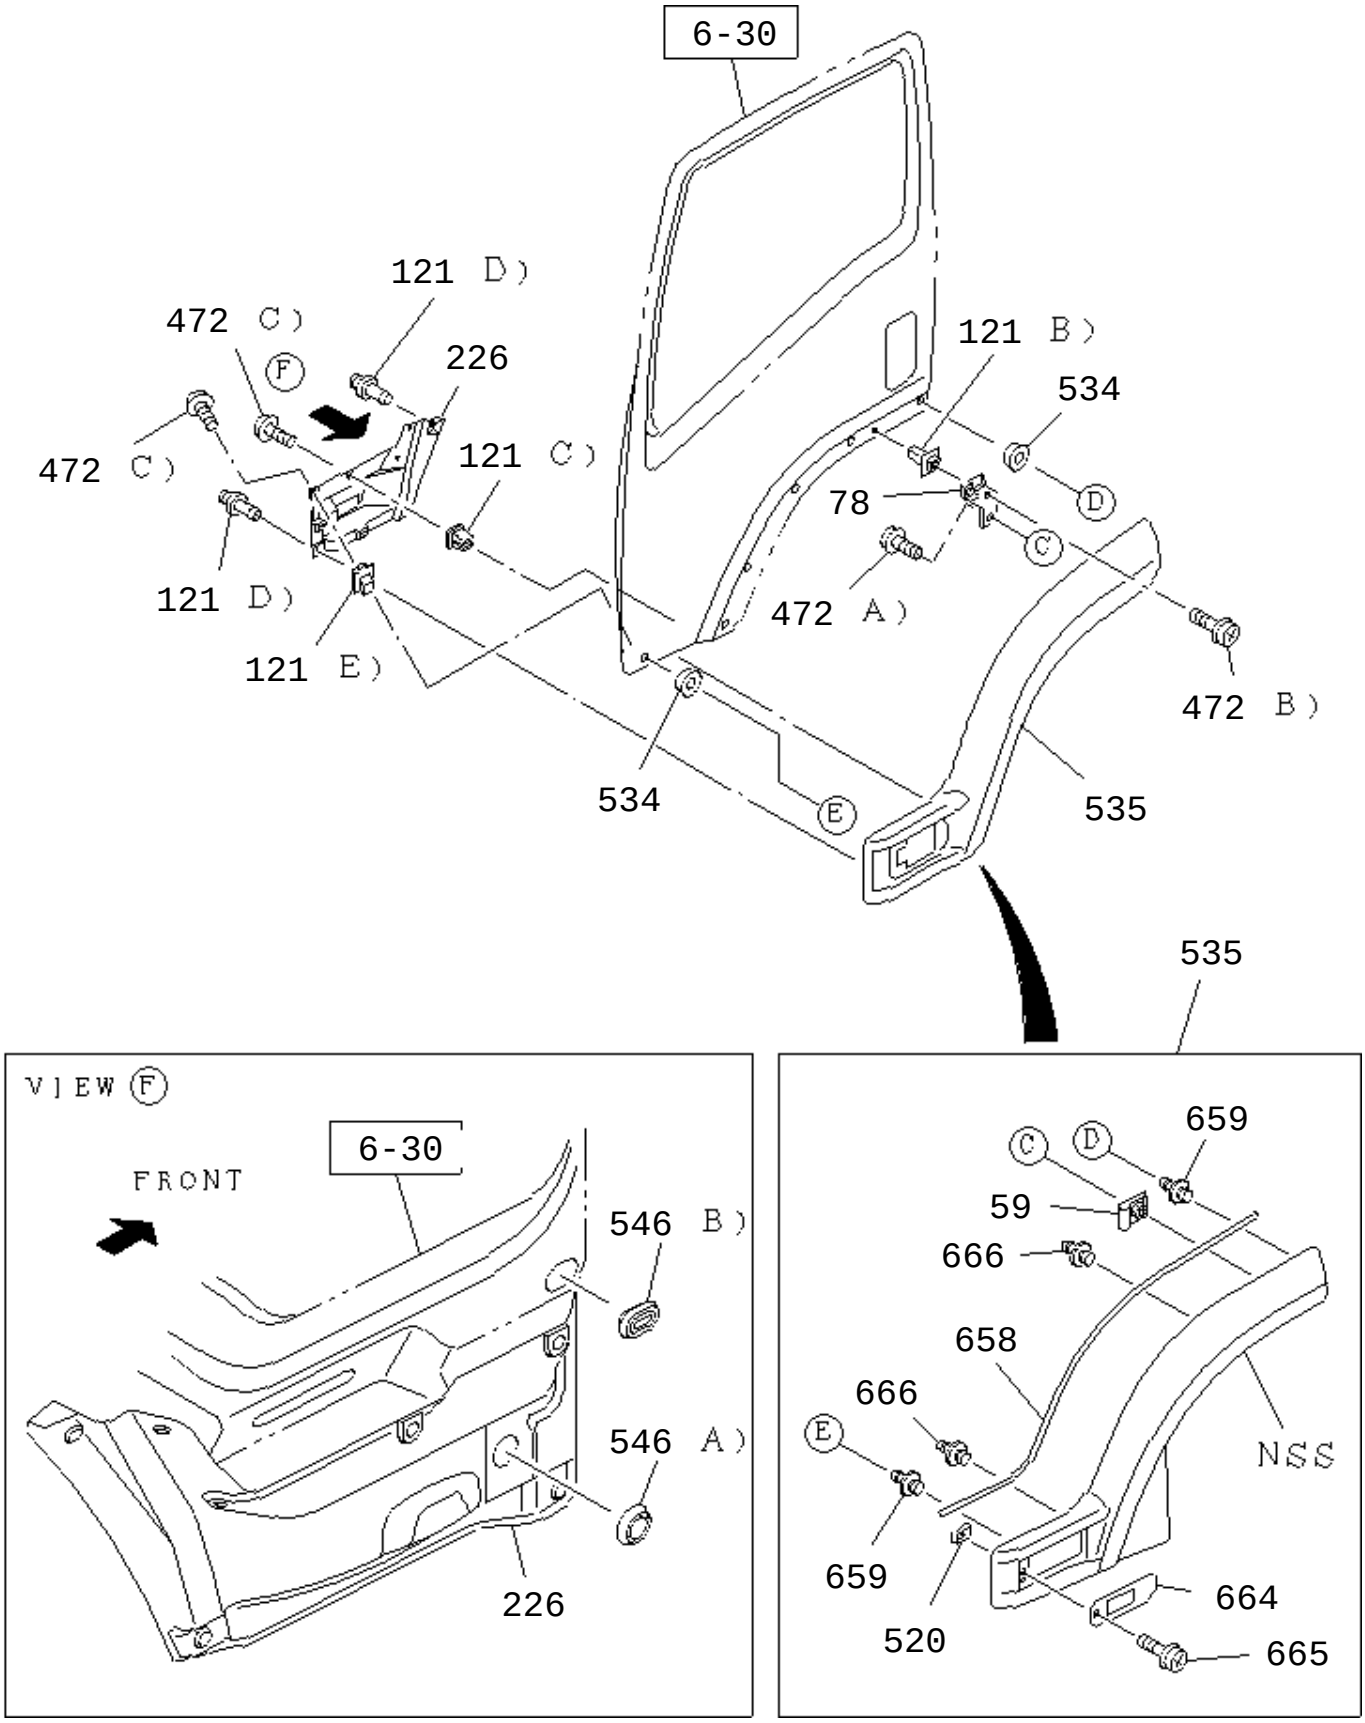

https://truckmanualshub.com/

6-05 FRONT PANEL

KEY	R/C	PART NAME / PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	C	PANEL ASM; FRT						
		8-97585-960-9		1312-1403		01	A	(B)
		8-97585-960-9		1404-		01	AB	(B)
		8-98030-234-4		1312-1403		01	A	(A)
		8-98030-234-4		1404-		01	AB	(A)
14	C	FENDER; FRT						
		8-98182-321-0		1312-1403	L	01	A	
		8-98182-321-0		1404-	L	01	AB	
		8-98182-320-0		1312-1403	R	01	A	
		8-98182-320-0		1404-	R	01	AB	
15		BOLT; FENDER						
		8-98059-504-0		1312-1403		06	A	M6X20 W/PL WASHER
		8-98059-504-0		1404-		06	AB	M6X20 W/PL WASHER
16	C	PANEL; FRONT,SIDE						
		8-97407-511-5		1312-1403	L	01	A	WHITE IDN
		8-97407-511-5		1404-	L	01	AB	WHITE IDN
		8-97407-509-4		1312-1403	R	01	A	WHITE IDN
		8-97407-509-4		1404-	R	01	AB	WHITE IDN
18		SEAL; A-POST UPR,FRT SIDE PANEL						
		8-98038-608-0		1312-1403		02	A	(B) IDN
		8-98038-608-0		1404-		02	AB	(B) IDN
		8-98043-511-1		1312-1403		02	A	(A) IDN
		8-98043-511-1		1404-		02	AB	(A) IDN
19		SEAL; FRT SIDE PANEL						
		8-98035-268-0		1312-1403		02	A	(B) IDN
		8-98035-268-0		1404-		02	AB	(B) IDN
		8-98062-215-0		1312-1403		02	A	(A) IDN
		8-98062-215-0		1404-		02	AB	(A) IDN
		8-98036-581-0		1312-1403	L	01	A	(C)
		8-98036-581-0		1404-	L	01	AB	(C)
		8-98041-359-2		1312-1403	L	01	A	(D)
		8-98041-359-2		1404-	L	01	AB	(D)
		8-98036-580-0		1312-1403	R	01	A	(C)
		8-98036-580-0		1404-	R	01	AB	(C)
		8-98041-358-2		1312-1403	R	01	A	(D)
		8-98041-358-2		1404-	R	01	AB	(D)

https://truckmanualshub.com/

6-05 FRONT PANEL

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
20		CLIP; FRT PANEL SIDE						
		8-97410-739-0		1312-1403		04	A	(A) IDN
		8-97410-739-0		1404-		04	AB	(A) IDN
		8-97410-740-2		1312-1403		02	A	(B)
		8-97410-740-2		1404-		02	AB	(B)
22		SCREW; FRT PANEL SIDE						
		0-74360-410-0		1312-1403		06	A	M4X10 TAPPING W/PL WASHER IDN
		0-74360-410-0		1404-		06	AB	M4X10 TAPPING W/PL WASHER IDN
59		GROMMET; SCREW						
		8-94279-723-0		1312-1403		02	A	
		8-94279-723-0		1404-		02	AB	
78		BRACKET; FENDER						
		8-98041-166-1		1312-1403	L	01	A	
		8-98041-166-1		1404-	L	01	AB	
		8-98041-165-1		1312-1403	R	01	A	
		8-98041-165-1		1404-	R	01	AB	
121		GROMMET; FENDER						
		8-94279-078-0		1312-1403		06	A	(C) D=8.6X7.7 L=7.5 IDN
		8-94279-078-0		1404-		06	AB	(C) D=8.6X7.7 L=7.5 IDN
		8-94279-723-0		1312-1403		04	A	(A)
		8-94279-723-0		1404-		04	AB	(A)
		8-94279-723-0		1312-1403		06	A	(A)
		8-94279-723-0		1404-		06	AB	(A)
		8-94279-989-0		1312-1403		12	A	(D) OD=8.3 IDN
		8-94279-989-0		1404-		12	AB	(D) OD=8.3 IDN
		8-94463-268-1		1312-1403		04	A	(B) H=15 IDN
		8-94463-268-1		1404-		04	AB	(B) H=15 IDN
		8-98073-421-0		1312-1403	L	01	A	(E)
		8-98073-421-0		1404-	L	01	AB	(E)
		8-98073-420-0		1312-1403	R	01	A	(E)
		8-98073-420-0		1404-	R	01	AB	(E)
198		NUT; PANEL						
		9-09114-086-0		1312-1403		02	A	M6
		9-09114-086-0		1404-		02	AB	M6
225		COVER; SIDE,FRT						
		8-98041-431-1		1312-1403	L	01	A	

https://truckmanualshub.com/

6-05 FRONT PANEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
225		8-98041-431-1		1404-	L	01	AB	
226		PROTECTOR; FRT						
		8-98037-715-2		1312-1403	L	01	A	
		8-98037-715-2		1404-	L	01	AB	
		8-98037-714-2		1312-1403	R	01	A	
		8-98037-714-2		1404-	R	01	AB	
288		BRACKET; FENDER SKIRT						
		8-98041-162-1		1312-1403		04	A	
		8-98041-162-1		1404-		04	AB	
289		BOLT; FENDER SKIRT BRKT						
		0-28650-616-0		1312-1403		08	A	M6X16 FLANGE
		0-28650-616-0		1404-		08	AB	M6X16 FLANGE
293		BRACKET; PANEL						
		8-97586-007-3		1312-1403		01	A	(A)
		8-97586-007-3		1404-		01	AB	(A)
		8-98008-124-1		1312-1403	L	01	A	(B)
		8-98008-124-1		1404-	L	01	AB	(B)
		8-98008-126-1		1312-1403	R	01	A	(B)
		8-98008-126-1		1404-	R	01	AB	(B)
299		COVER; FRT PANEL SIDE						
		8-98034-814-1		1312-1403	L	01	A	
		8-98034-814-1		1404-	L	01	AB	
		8-98034-813-1		1312-1403	R	01	A	
		8-98034-813-1		1404-	R	01	AB	
307		GROMMET; FRT PANEL						
		8-97410-738-0		1312-1403		02	A	(B) IDN
		8-97410-738-0		1404-		02	AB	(B) IDN
		8-98021-300-1		1312-1403		04	A	(C) IDN
		8-98021-300-1		1404-		04	AB	(C) IDN
		8-98034-363-1		1312-1403		04	A	(A) IDN
		8-98034-363-1		1404-		04	AB	(A) IDN
		8-98028-743-0		1312-1403	L	01	A	(D) IDN
		8-98028-743-0		1404-	L	01	AB	(D) IDN
332		FENDER; RR						
		8-98038-435-2		1312-1403	L	01	A	
		8-98038-435-2		1404-	L	01	AB	
		8-98038-434-2		1312-1403	R	01	A	
		8-98038-434-2		1404-	R	01	AB	
384		CLIP; FENDER LWR						
		1-09987-248-1		1312-1403		02	A	D8X13.5
		1-09987-248-1		1404-		02	AB	D8X13.5
385		SCREW; FENDER LWR						
		8-98059-504-0		1312-1403		04	A	M6X20 W/PL WASHER
		8-98059-504-0		1404-		04	AB	M6X20 W/PL WASHER
419		BOLT; STEP						

https://truckmanualshub.com/

6-05 FRONT PANEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
419		0-28650-820-0		1312-1403		08	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-		08	AB	M8X20 FLANGE IDN
423		SUPPORT ASM; STEP						
		8-98037-336-1		1312-1403	L	01	A	
		8-98037-336-1		1404-	L	01	AB	
		8-98037-335-1		1312-1403	R	01	A	
		8-98037-335-1		1404-	R	01	AB	
472		SCREW; FENDER TO CAB						
		8-98059-505-0		1312-1403		02	A	(A) M6X18 TAPPING
		8-98059-505-0		1404-		02	AB	(A) M6X18 TAPPING
		8-98090-737-0		1312-1403		08	A	(C) M5X16
		8-98090-737-0		1404-		08	AB	(C) M5X16
		8-98093-669-0		1312-1403		04	A	(B) M5X12
		8-98093-669-0		1404-		04	AB	(B) M5X12
494		FINISHER; FENDER						
		8-98072-723-0		1312-1403	L	01	A	
		8-98072-723-0		1404-	L	01	AB	
		8-98041-172-1		1312-1403	R	01	A	
		8-98041-172-1		1404-	R	01	AB	
517		SUPPORT; STEP PANEL						
		8-98037-351-2		1312-1403	L	01	A	
		8-98037-351-2		1404-	L	01	AB	
		8-98037-350-2		1312-1403	R	01	A	
		8-98037-350-2		1404-	R	01	AB	
520		NUT; FENDER						
		8-94279-501-0		1312-1403		02	A	
		8-94279-501-0		1404-		02	AB	
524		CLIP; FENDER COVER						
		8-94279-974-1		1312-1403		02	A	OD=7.9 BLACK
		8-94279-974-1		1404-		02	AB	OD=7.9 BLACK
525		SEAL; FENDER						
		8-98061-760-0		1312-1403		02	A	(A) UPPER
		8-98061-760-0		1404-		02	AB	(A) UPPER
		8-98061-761-0		1312-1403		02	A	(B) LOWER
		8-98061-761-0		1404-		02	AB	(B) LOWER
		8-98061-762-0		1312-1403		02	A	(C)
		8-98061-762-0		1404-		02	AB	(C)
532		BOLT; FRT PANEL						
		0-28650-820-0		1312-1403		08	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-		08	AB	M8X20 FLANGE IDN
533		SEAL; FRT PANEL						
		8-98096-289-0		1312-1403		01	A	IDN
		8-98096-289-0		1404-		01	AB	IDN
534		FASTENER						

https://truckmanualshub.com/

6-05 FRONT PANEL


KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
534		8-98241-984-0		1312-1403		12	A	ID=5.4 OD=6.8
		8-98241-984-0		1404-		12	AB	ID=5.4 OD=6.8
535		FENDER; BLISTER						
		8-98106-503-0		1312-1403	L	01	A	
		8-98106-503-0		1404-	L	01	AB	
		8-98106-502-0		1312-1403	R	01	A	
		8-98106-502-0		1404-	R	01	AB	
540		PANEL; FRONT,OUTER						
		8-97585-966-2		1312-1403		01	A	
		8-97585-966-2		1404-		01	AB	
543		CLOSING; FRT MTG RAIL						
		8-97585-990-4		1312-1403		01	A	
		8-97585-990-4		1404-		01	AB	
545		SEAL; FRT LID						
		8-98123-265-0		1312-1403		01	A	IDN
		8-98123-265-0		1404-		01	AB	IDN
546		PLUG; DUMMY HOLE						
		8-94159-507-0		1312-1403		02	A	(A) OD=38
		8-94159-507-0		1404-		02	AB	(A) OD=38
		8-94430-184-1		1312-1403		02	A	(B) IDN
		8-94430-184-1		1404-		02	AB	(B) IDN
547		RUBBER; CUSHION						
		8-94324-556-2		1312-1403		02	A	OD=22 L=29
		8-94324-556-2		1404-		02	AB	OD=22 L=29
548		STRIKER; FRT LID PANEL						
		8-98068-145-1		1312-1403		02	A	
		8-98068-145-1		1404-		02	AB	
550		LOCK ASM; FRT LID						
		8-98036-569-2		1312-1403		02	A	
		8-98036-569-2		1404-		02	AB	
552		STAY; FRT LID						
		8-98089-838-0		1312-1403		01	A	
		8-98089-838-0		1404-		01	AB	
553		CLIP; STAY						
		8-97031-428-0		1312-1403		01	A	(B)
		8-97031-428-0		1404-		01	AB	(B)
		8-98071-399-0		1312-1403		01	A	(A)
		8-98071-399-0		1404-		01	AB	(A)
555		CABLE; FRT LID						
		8-98036-574-1		1312-1403		01	A	
		8-98036-574-1		1404-		01	AB	
556		BOLT; CABLE						
		0-28650-616-0		1312-1403		01	A	M6X16 FLANGE
		0-28650-616-0		1404-		01	AB	M6X16 FLANGE
557		CLIP; CABLE						
		8-94128-483-0		1312-1403		03	A	ID=4.8
		8-94128-483-0		1404-		03	AB	ID=4.8
558		LEVER; FRT LID						
		1-79338-007-0		1312-1403		01	A	
		1-79338-007-0		1404-		01	AB	
571		CLIP; SEAL						

https://truckmanualshub.com/

6-05 FRONT PANEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
571		8-98027-457-0		1312-1403		20	A	NATURAL IDN
		8-98027-457-0		1404-		20	AB	NATURAL IDN
573		BRACKET; SUPPORT						
		8-98017-700-2		1312-1403		01	A	
		8-98017-700-2		1404-		01	AB	
578		COVER; WIPER MOTOR						
		8-97586-018-3		1312-1403		01	A	
		8-97586-018-3		1404-		01	AB	
602		RETAINER; COVER						
		8-98241-984-0		1312-1403		06	A	ID=5.4 OD=6.8
		8-98241-984-0		1404-		06	AB	ID=5.4 OD=6.8
608		CLIP						
		1-09983-154-0		1312-1403		06	A	D5.4X8
		1-09983-154-0		1404-		06	AB	D5.4X8
655		PATCH; HINGE						
		8-98031-263-0		1312-1403	L	01	A	
		8-98031-263-0		1404-	L	01	AB	
		8-98031-264-0		1312-1403	R	01	A	
		8-98031-264-0		1404-	R	01	AB	
656		PATCH; STRIKER						
		8-98031-265-0		1312-1403		02	A	
		8-98031-265-0		1404-		02	AB	
658		FINISHER; BLISTER FENDER						
		8-98041-169-3		1312-1403	L	01	A	
		8-98041-169-3		1404-	L	01	AB	
		8-98041-168-3		1312-1403	R	01	A	
		8-98041-168-3		1404-	R	01	AB	
659		CLIP; FENDER						
		1-09983-154-0		1312-1403		08	A	D5.4X8
		1-09983-154-0		1404-		08	AB	D5.4X8
664		BASE; DOOR,SIDE TURN						
		8-98053-146-1		1312-1403	L	01	A	
		8-98053-146-1		1404-	L	01	AB	
		8-98053-145-1		1312-1403	R	01	A	
		8-98053-145-1		1404-	R	01	AB	
665		SCREW; FENDER						
		0-36210-620-0		1312-1403		02	A	M6X20 W/PL WASHER
		0-36210-620-0		1404-		02	AB	M6X20 W/PL WASHER
666		CLIP; BLISTER FENDER						
		8-98071-178-0		1312-1403		04	A	
		8-98071-178-0		1404-		04	AB	
668		COVER; LEVER,FRT LID						
		8-98076-339-0		1312-1403		01	A	
		8-98076-339-0		1404-		01	AB	
6-70		Move to 6-70						
7-40		Move to 7-40						
7-43		Move to 7-43						
6-20		Move to 6-20						
6-30		Move to 6-30						

https://truckmanualshub.com/

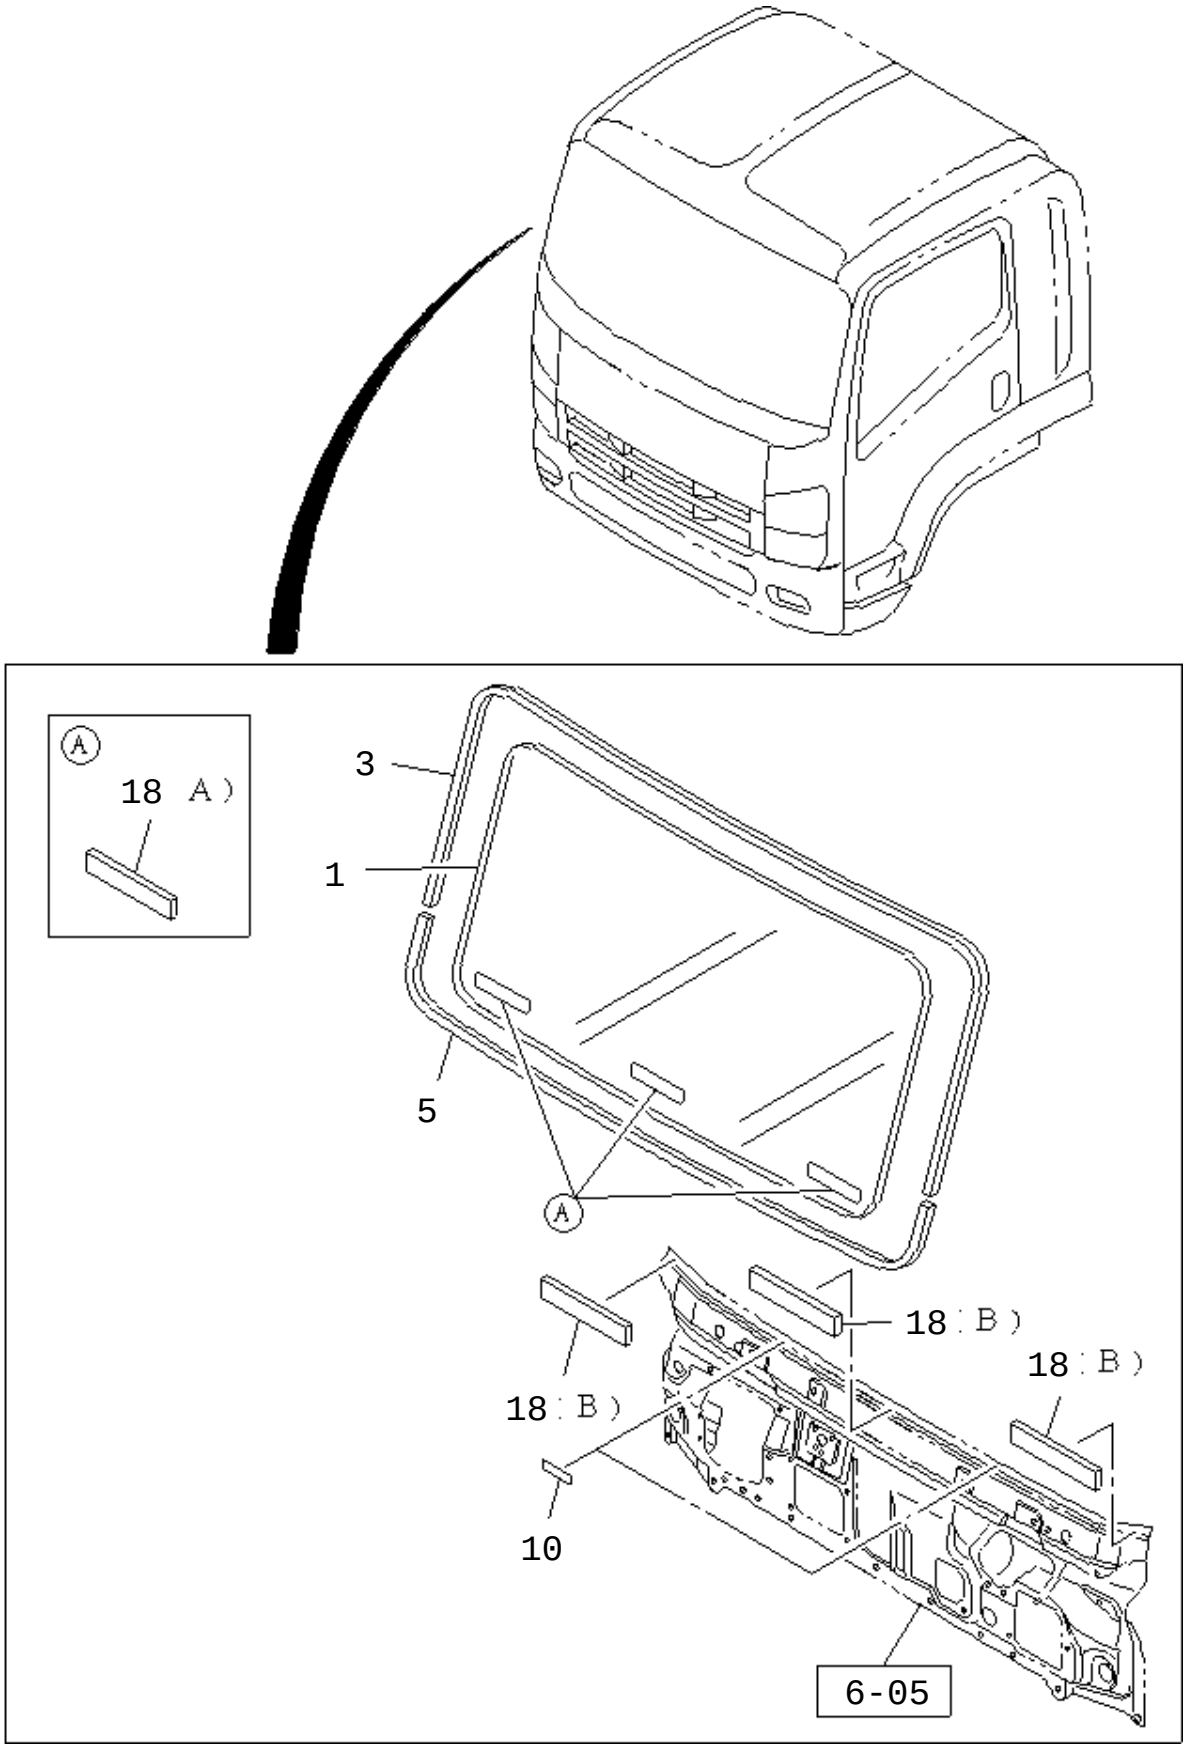


https://truckmanualshub.com/

6-07 FRONT WINDOW GLASS AND WEATHERSTRIP


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	C	GLASS; WINDSHIELD					
		8-98041-647-3		1312-1403	01	A	
							IDN
		8-98041-647-3		1404-	01	AB	
							IDN
3	C	MOLDING; WINDSHIELD					
		8-98041-651-3		1312-1403	01	A	
		8-98041-651-3		1404-	01	AB	
5	C	MOLDING; WINDSHIELD,LWR					
		8-98222-159-0		1312-1403	01	A	
		8-98222-159-0		1404-	01	AB	
10		SPACER; WINDSHIELD GLASS					
		8-98095-044-0		1312-1403	02	A	
		8-98095-044-0		1404-	02	AB	
18		SEAL; WINDSHIELD					
		8-98029-086-1		1312-1403	10	A	
							(A)
							L=100 B=8
		8-98029-086-1		1404-	10	AB	
							(A)
							L=100 B=8
		8-98083-198-1		1312-1403	10	A	
							(B)
							L=100 B=10
		8-98083-198-1		1404-	10	AB	
							(B)
							L=100 B=10
6-05		Move to 6-05					

https://truckmanualshub.com/

SIDE PANEL

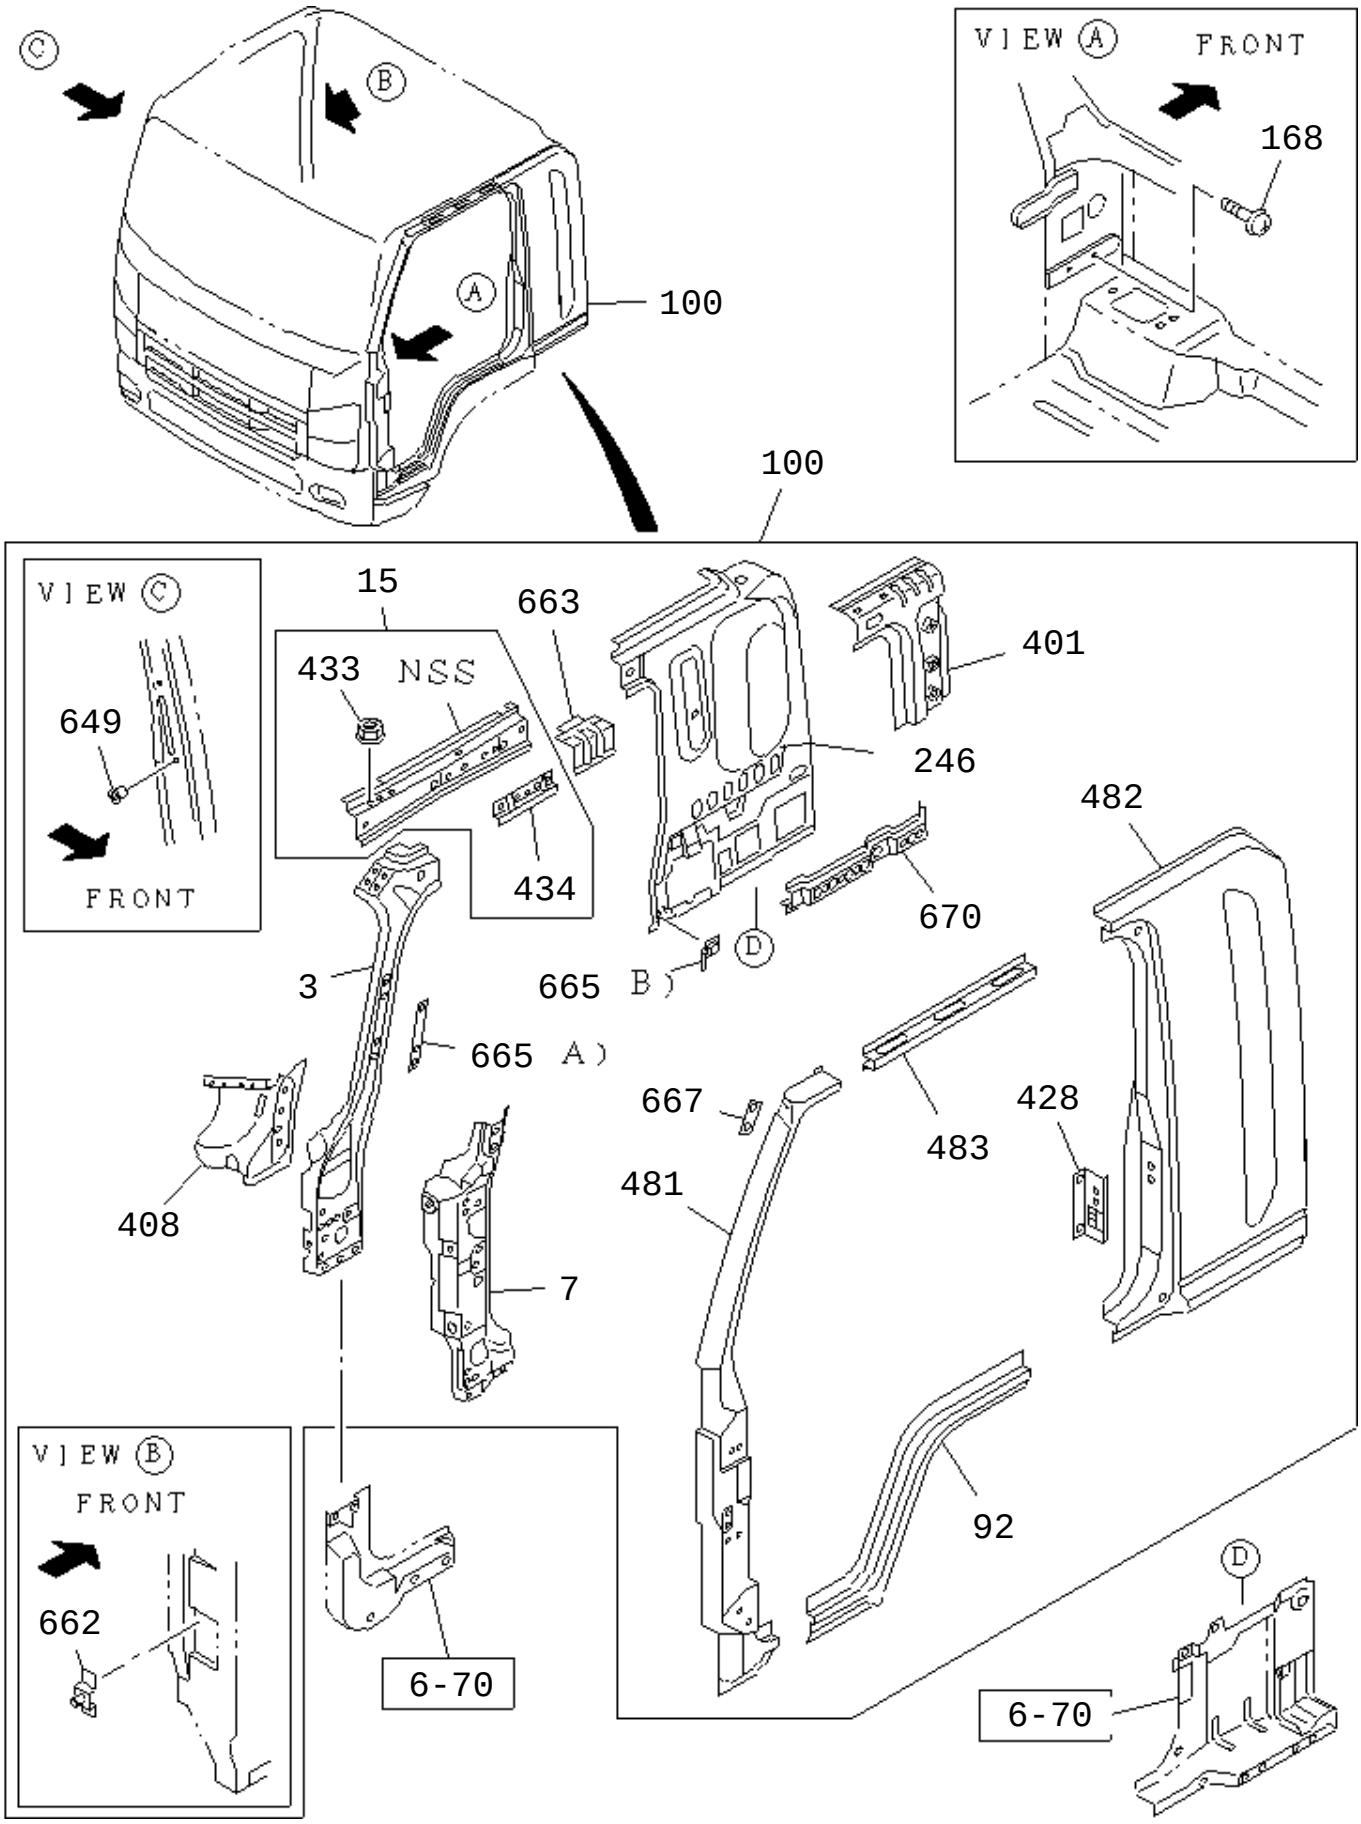

https://truckmanualshub.com/

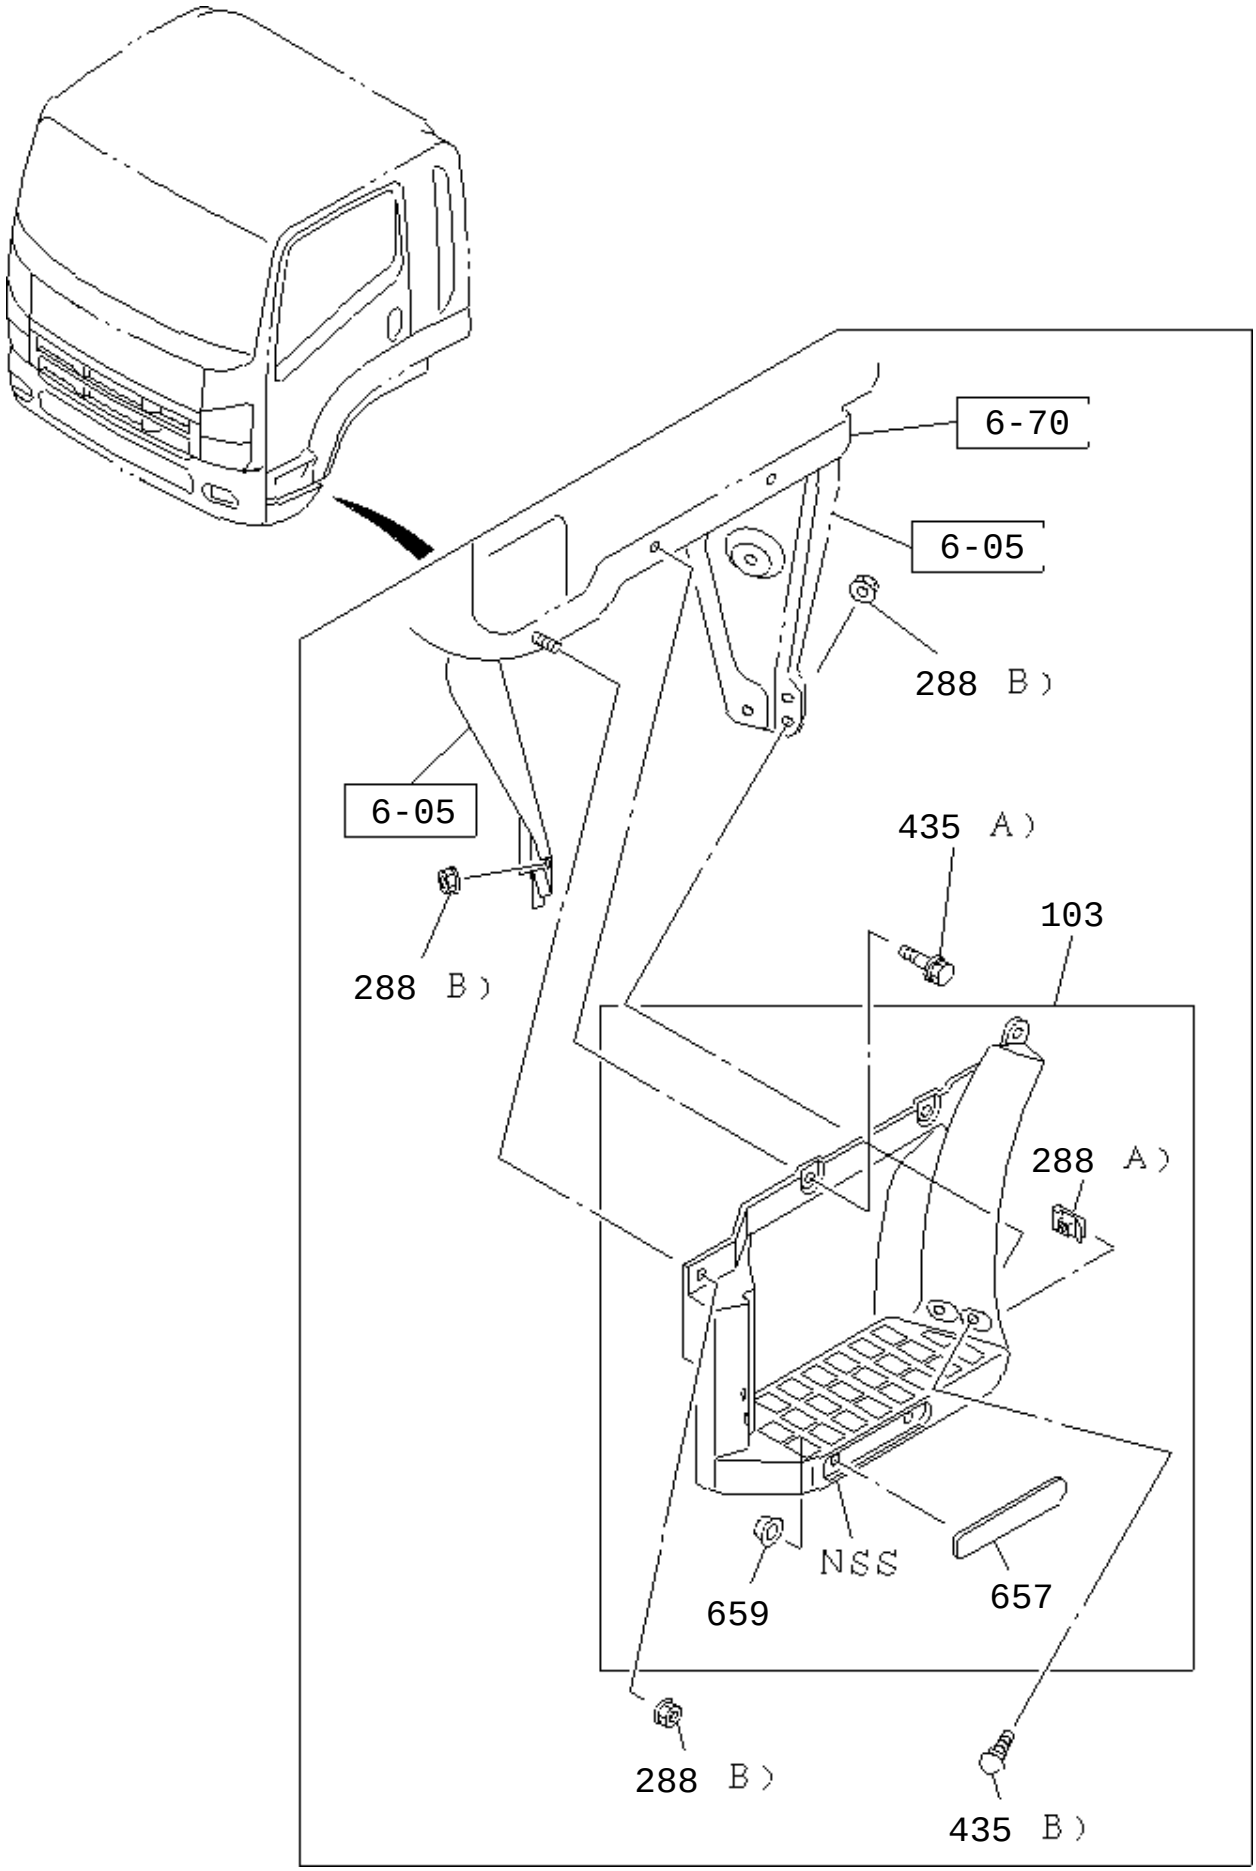

https://truckmanualshub.com/

6-20 SIDE PANEL AND STEP

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
3		PANEL; CLOSING,FRT PILLAR						
		8-98058-237-1		1312-1403	L	01	A	
								IDN
		8-98058-237-1		1404-	L	01	AB	
								IDN
		8-98058-236-1		1312-1403	R	01	A	
		8-98058-236-1		1404-	R	01	AB	
7		REINFORCEMENT; HINGE						
		8-97585-244-4		1312-1403	L	01	A	
								IDN
		8-97585-244-4		1404-	L	01	AB	
								IDN
		8-97585-240-3		1312-1403	R	01	A	
								IDN
		8-97585-240-3		1404-	R	01	AB	
								IDN
15		PANEL; CANT RAIL SIDE						
		8-97585-293-2		1312-1403	L	01	A	
		8-97585-293-2		1404-	L	01	AB	
		8-97585-292-2		1312-1403	R	01	A	
		8-97585-292-2		1404-	R	01	AB	
92		PANEL; SIDE SILL,CAB						
		8-98055-462-1		1312-1403	L	01	A	
		8-98055-462-1		1404-	L	01	AB	
		8-98055-461-1		1312-1403	R	01	A	
		8-98055-461-1		1404-	R	01	AB	
100		PANEL ASM; BODY SIDE						
		8-98103-333-1		1312-1403	L	01	A	
		8-98103-333-1		1404-	L	01	AB	
		8-97586-065-6		1312-1403	R	01	A	
		8-97586-065-6		1404-	R	01	AB	
103		PLATE; STEP						
		8-98037-346-2		1312-1403	L	01	A	
		8-98037-346-2		1404-	L	01	AB	
		8-98037-345-2		1312-1403	R	01	A	
		8-98037-345-2		1404-	R	01	AB	
168		BOLT; BODY SIDE PANEL						
		0-38050-612-0		1312-1403		08	A	
								M6X12 HEXALOBULAR SOCKET
		0-38050-612-0		1404-		08	AB	
								M6X12 HEXALOBULAR SOCKET
246		PANEL; RR PILLAR,INNER						
		8-97586-158-5		1312-1403	L	01	A	
		8-97586-158-5		1404-	L	01	AB	
		8-97586-156-5		1312-1403	R	01	A	
		8-97586-156-5		1404-	R	01	AB	
288		NUT; STEP						
		0-91180-108-0		1312-1403		10	A	
								(B)
								M8 FLANGE
		0-91180-108-0		1404-		10	AB	
								(B)
								M8 FLANGE
		8-98040-792-0		1312-1403		02	A	
								(A)
								M8
		8-98040-792-0		1404-		02	AB	
								(A)
								M8
401		PATCH; CLOSING,FRT PILLAR						
		8-97586-161-2		1312-1403	L	01	A	
		8-97586-161-2		1404-	L	01	AB	
		8-97586-160-2		1312-1403	R	01	A	
		8-97586-160-2		1404-	R	01	AB	
408		GUSSET; PILLAR						
		8-97586-194-2		1312-1403	L	01	A	
		8-97586-194-2		1404-	L	01	AB	
		8-97586-193-3		1312-1403	R	01	A	
		8-97586-193-3		1404-	R	01	AB	
428		REINFORCEMENT; DOOR STRIKER						
		8-97585-261-4		1312-1403	L	01	A	
								IDN
		8-97585-261-4		1404-	L	01	AB	
								IDN

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
428		8-97585-260-4		1312-1403	R	01	A	
		8-97585-260-4		1404-	R	01	AB	
433		NUT; HEADER SHELF						
		9-09114-086-0		1312-1403		04	A	M6
		9-09114-086-0		1404-		04	AB	M6
434		PATCH; ASSIST GRIP						
		8-98039-020-0		1312-1403	L	01	A	IDN
		8-98039-020-0		1404-	L	01	AB	IDN
		8-98039-019-0		1312-1403	R	01	A	
		8-98039-019-0		1404-	R	01	AB	
435		BOLT; RR STEP						
		8-98059-720-0		1312-1403		04	A	(A) M8X24.5 W/LK&PL WASHER
		8-98059-720-0		1404-		04	AB	(A) M8X24.5 W/LK&PL WASHER
		8-98146-670-0		1312-1403		08	A	(B) M8X18
		8-98146-670-0		1404-		08	AB	(B) M8X18
481		PANEL; SIDE FRT PILLAR						
		8-98055-453-0		1312-1403	L	01	A	
		8-98055-453-0		1404-	L	01	AB	
		8-98055-471-0		1312-1403	R	01	A	
		8-98055-471-0		1404-	R	01	AB	
482		PANEL; SIDE RR PILLAR						
		8-98055-469-0		1312-1403	L	01	A	
		8-98055-469-0		1404-	L	01	AB	
		8-98055-468-0		1312-1403	R	01	A	
		8-98055-468-0		1404-	R	01	AB	
483		PANEL; SIDE CANTRAIL						
		8-98055-460-0		1312-1403	L	01	A	
		8-98055-460-0		1404-	L	01	AB	
		8-98055-458-0		1312-1403	R	01	A	
		8-98055-458-0		1404-	R	01	AB	
649		NUT; POP						
		8-97249-574-0		1312-1403	R	02	A	M5 POP NUT IDN
		8-97249-574-0		1404-	R	02	AB	M5 POP NUT IDN
657		REFLECTOR; REFLEX						
		8-97378-910-0		1312-1403		02	A	IDN
		8-97378-910-0		1404-		02	AB	IDN
659		CLIP; SPRING NUT						
		8-97811-510-0		1312-1403		04	A	IDN
		8-97811-510-0		1404-		04	AB	IDN
662		BRACKET; DUCT						
		8-97584-611-1		1312-1403	R	01	A	IDN
		8-97584-611-1		1404-	R	01	AB	IDN
663		BRACKET; AIR						
		8-97585-208-2		1312-1403	L	01	A	IDN
		8-97585-208-2		1404-	L	01	AB	IDN
		8-97585-207-2		1312-1403	R	01	A	
		8-97585-207-2		1404-	R	01	AB	
665		REINFORCEMENT; GRIP,ASSIST						
		8-97585-314-0		1312-1403		02	A	(A)

https://truckmanualshub.com/

6-20 SIDE PANEL AND STEP

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
665		8-97585-314-0		1404-		02	AB	(A)
		8-98012-287-1		1312-1403		02	A	(B)
		8-98012-287-1		1404-		02	AB	(B)
667		BRACKET; MIRROR						
		8-98109-948-0		1312-1403		03	A	
		8-98109-948-0		1404-		03	AB	
670		STIFFENER; PANEL,SIDE						
		8-98015-044-1		1312-1403		02	A	
		8-98015-044-1		1404-		02	AB	
6-70		Move to 6-70						
6-05		Move to 6-05						

https://truckmanualshub.com/

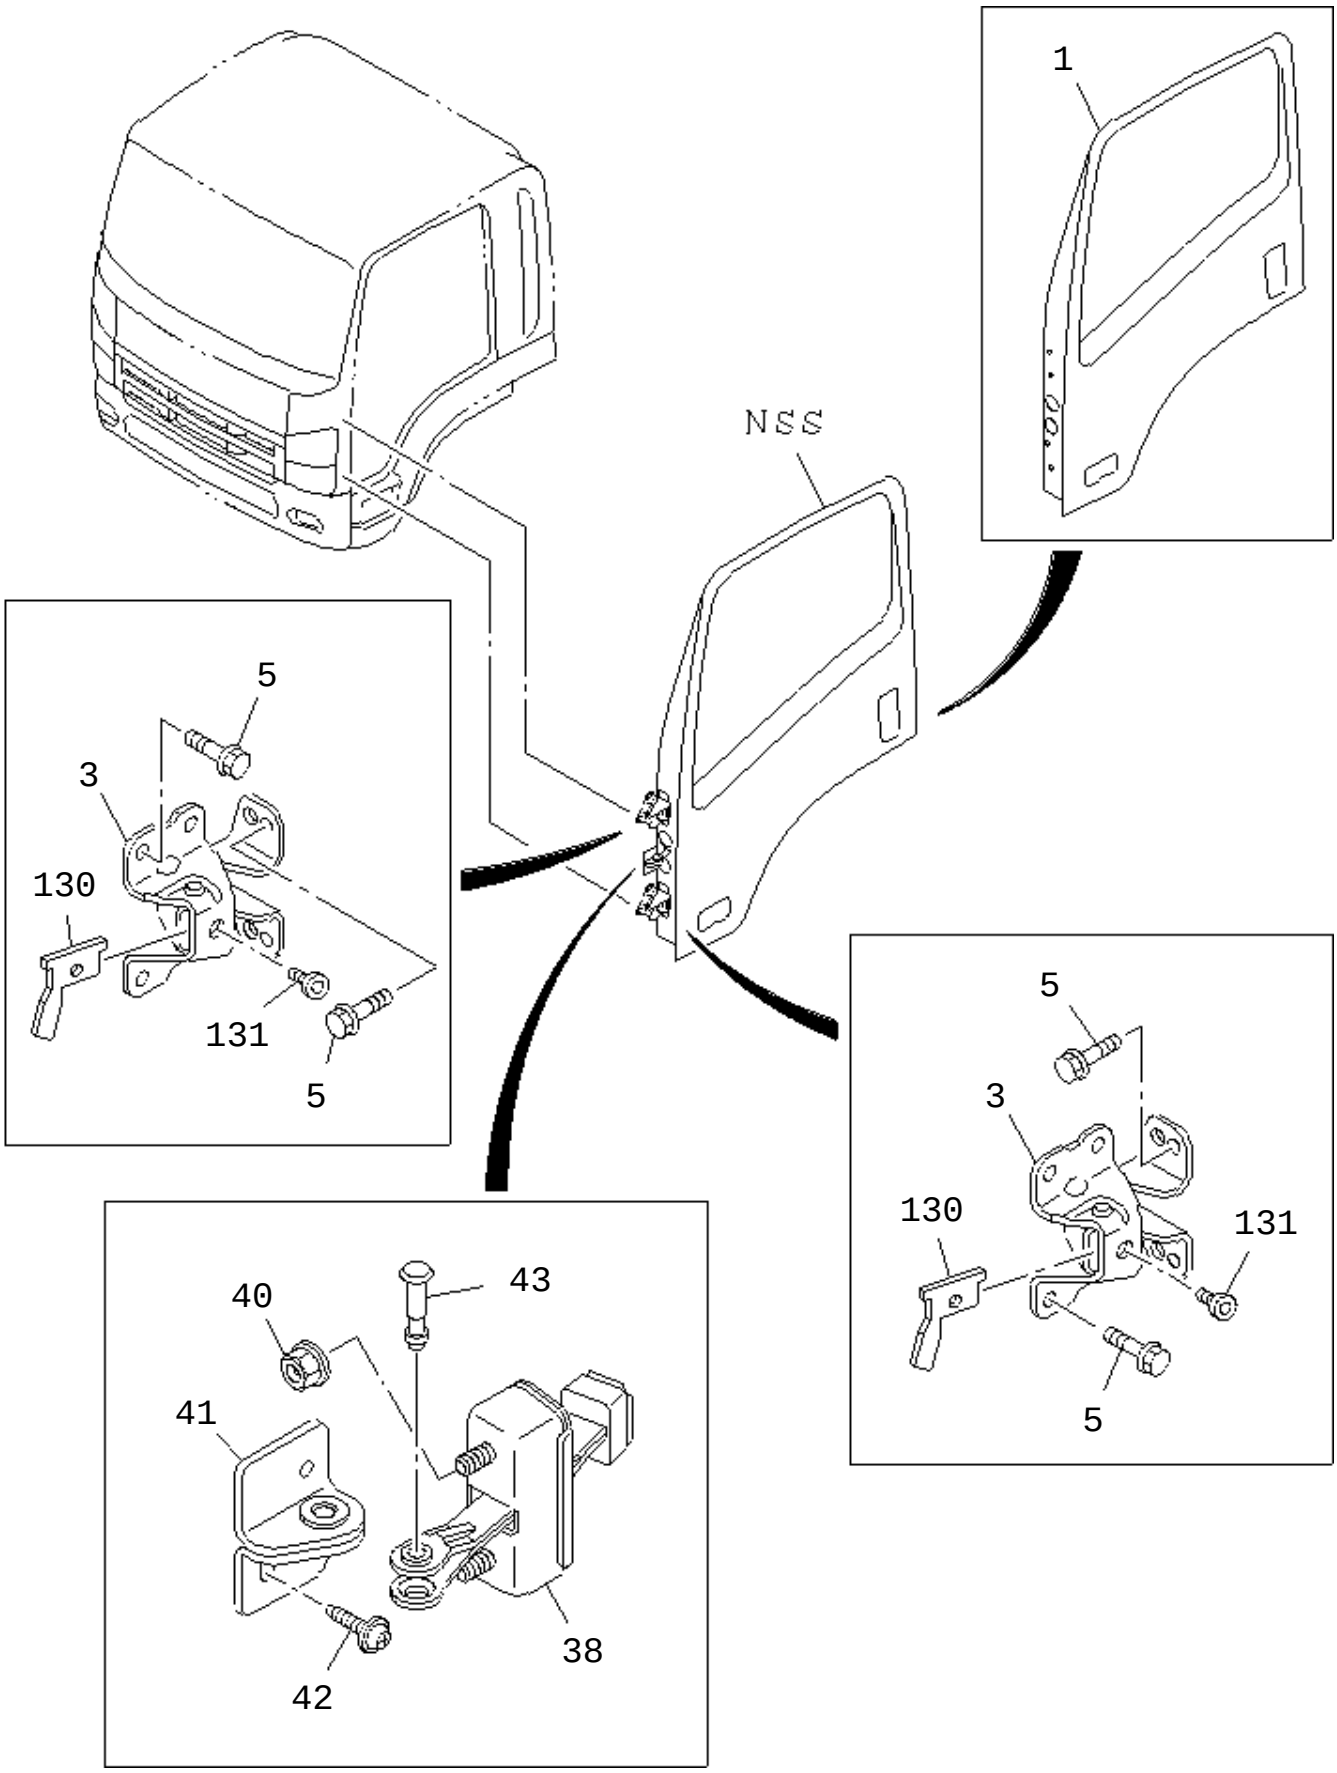


https://truckmanualshub.com/

6-30 FRONT DOOR AND HINGE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	C	DOOR ASM; FRT,WO/TRIM						
		8-98171-232-0		1312-1403	L	01	A	
		8-98171-232-0		1404-1409	L	01	AB	
		8-98260-600-0		1410-	L	01	AB	
		8-98171-224-0		1312-1403	R	01	A	
		8-98171-224-0		1404-1409	R	01	AB	
		8-98260-599-0		1410-	R	01	AB	
3	C	HINGE; DOOR FRT						
		8-98191-302-0		1312-1403		04	A	IDN
		8-98191-302-0		1404-		04	AB	IDN
5		BOLT; HINGE						
		8-98049-756-0		1312-1403		20	A	M8X20 FLANGE
		8-98049-756-0		1404-		20	AB	M8X20 FLANGE
38		CHECKER ASM; DOOR						
		8-98208-189-1		1312-1403		02	A	IDN
		8-98208-189-1		1404-		02	AB	IDN
40		NUT; CHECKER						
		8-97329-625-0		1312-1403		04	A	M8 W/DISHED WASHER
		8-97329-625-0		1404-		04	AB	M8 W/DISHED WASHER
41		BRACKET; CHECKER						
		8-98029-290-3		1312-1403		02	A	IDN
		8-98029-290-3		1404-		02	AB	IDN
42		BOLT; BRKT						
		8-98032-159-2		1312-1403		04	A	M6X20 W/PL WASHER IDN
		8-98032-159-2		1404-		04	AB	M6X20 W/PL WASHER IDN
43		PIN						
		8-98037-152-2		1312-1403		02	A	IDN
		8-98037-152-2		1404-		02	AB	IDN
130		STOPPER; HINGE						
		8-98038-299-1		1312-1403		04	A	IDN
		8-98038-299-1		1404-		04	AB	IDN
131		BOLT; DOOR STOPPER						
		8-98039-593-1		1312-1403		04	A	M10X11 IDN
		8-98039-593-1		1404-		04	AB	M10X11 IDN


https://truckmanualshub.com/

RH

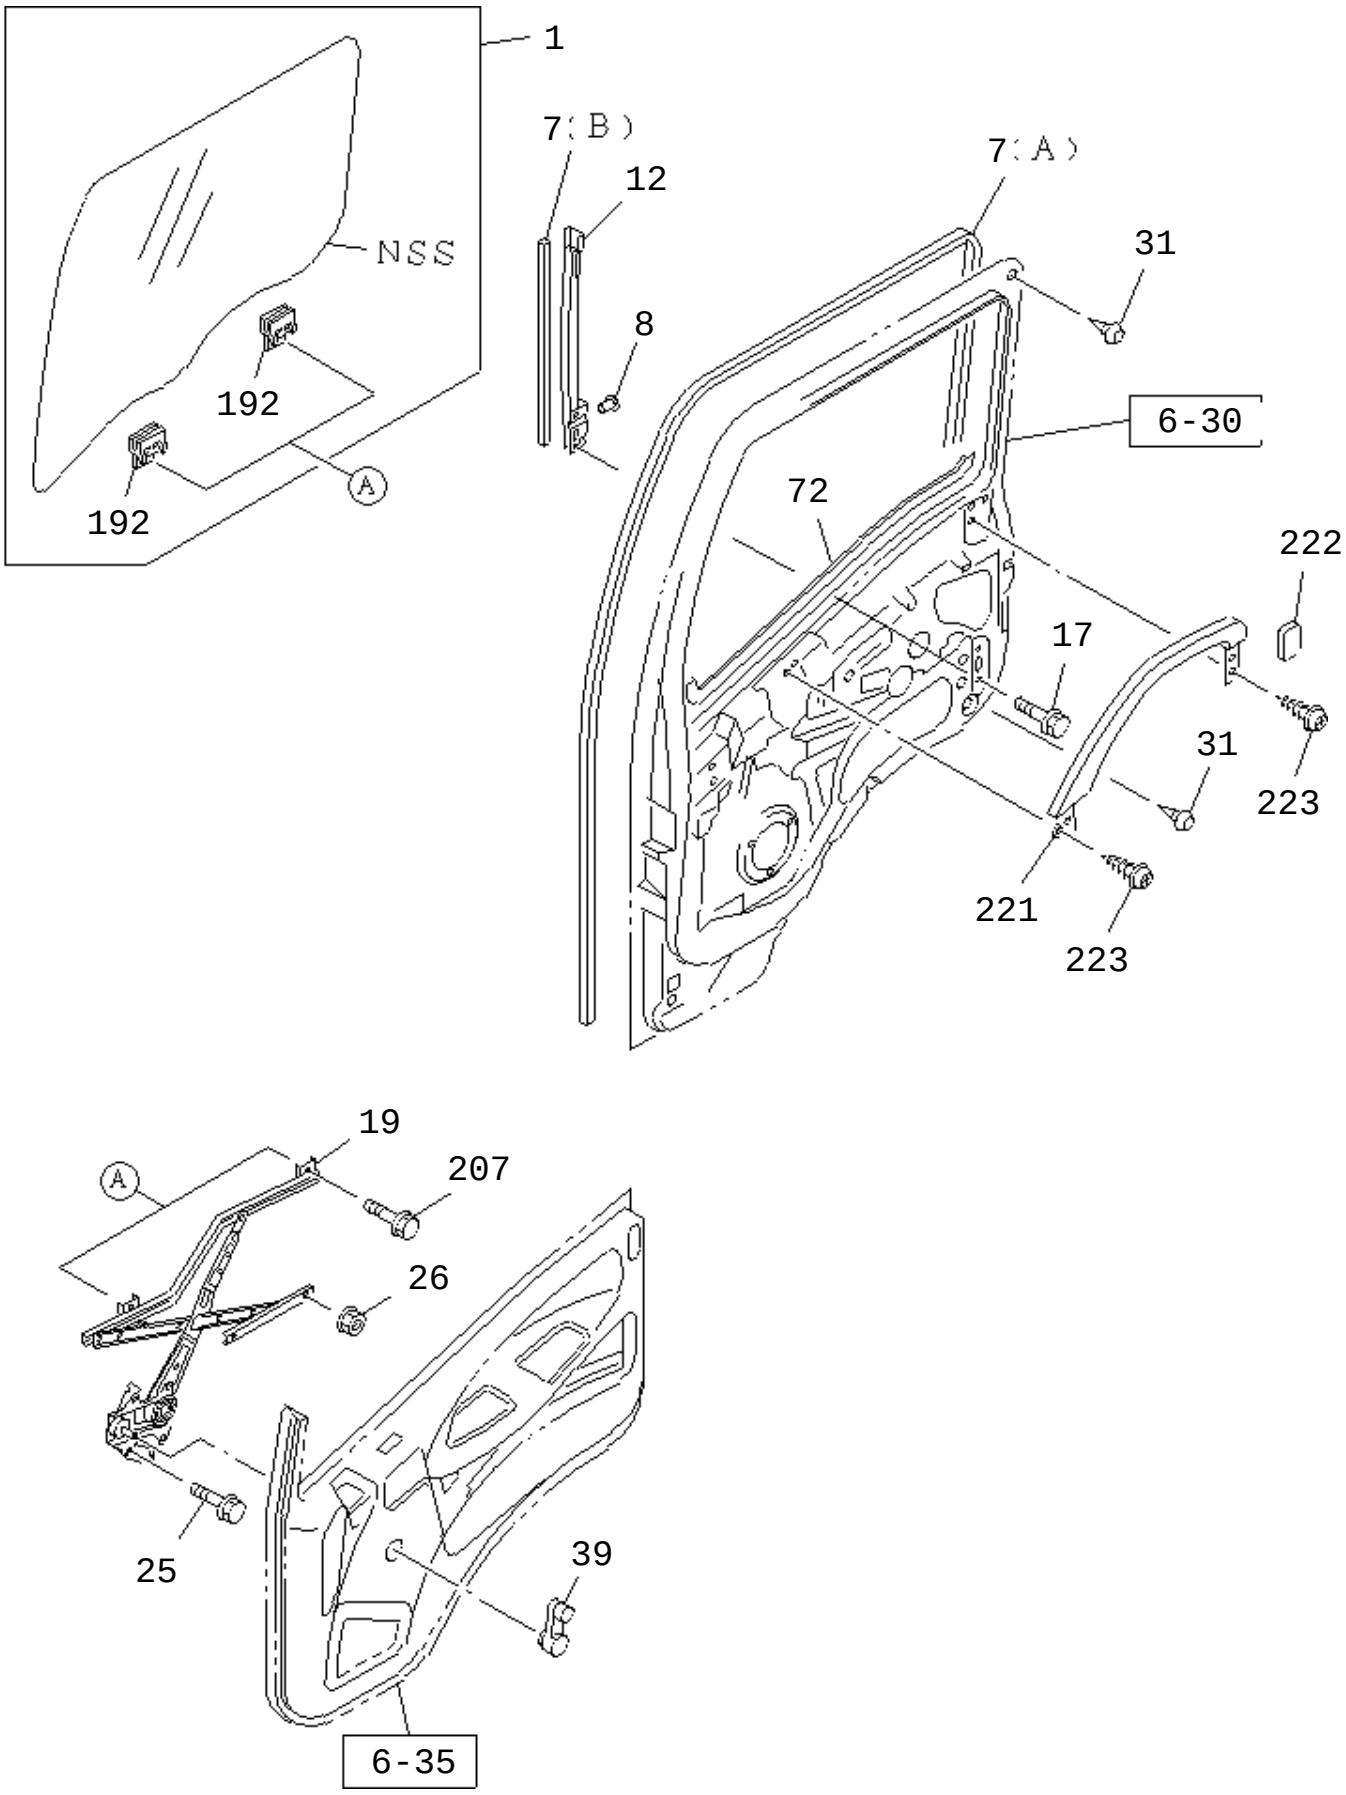

https://truckmanualshub.com/

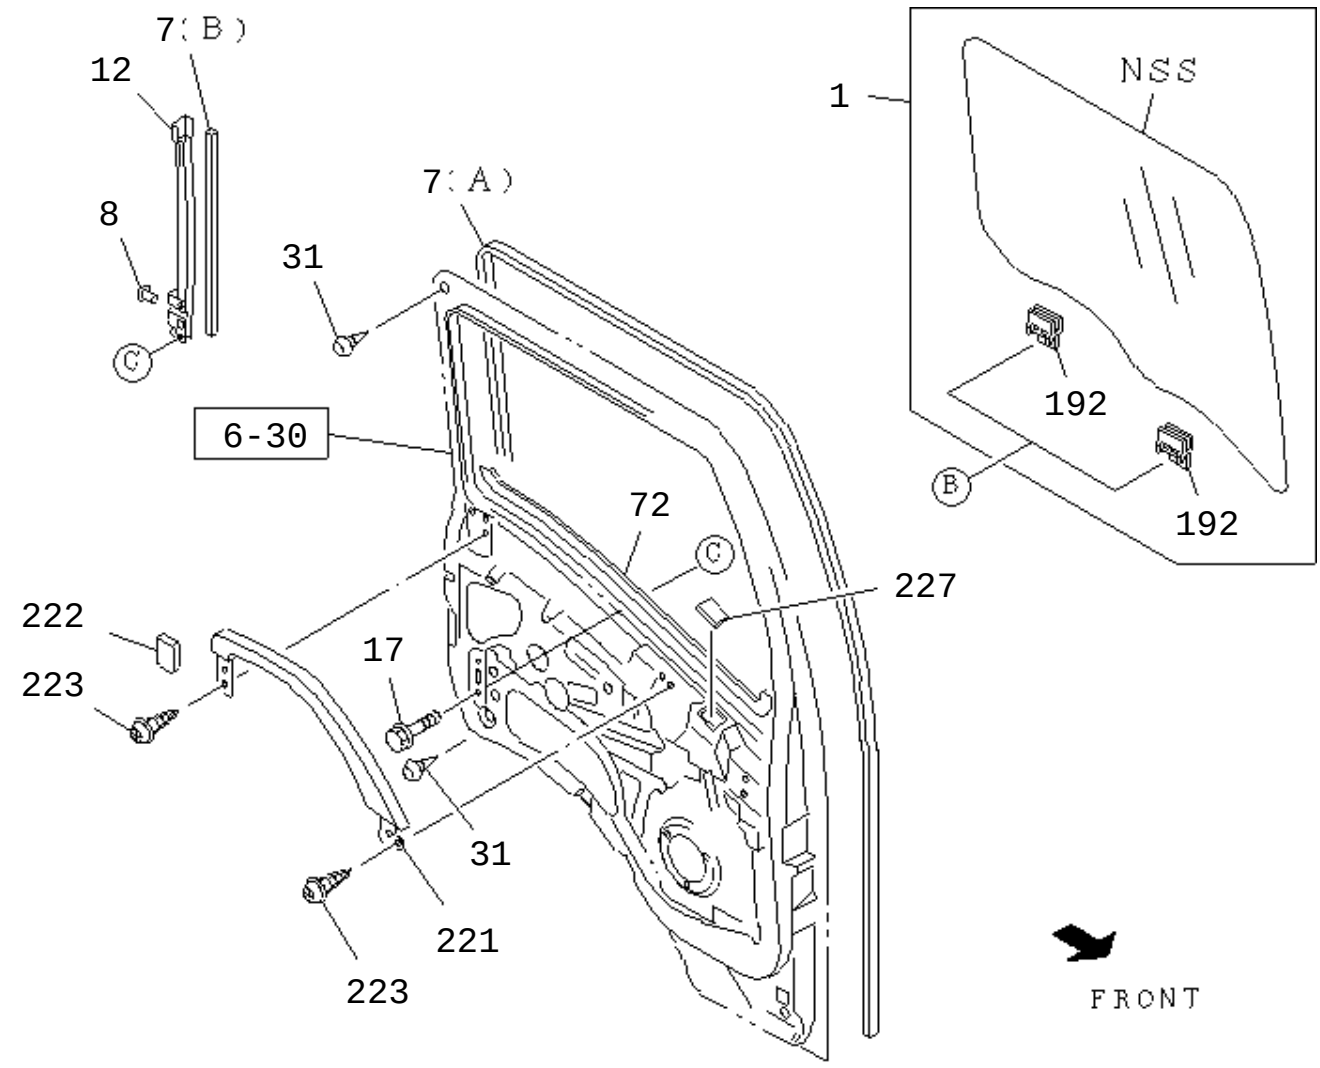

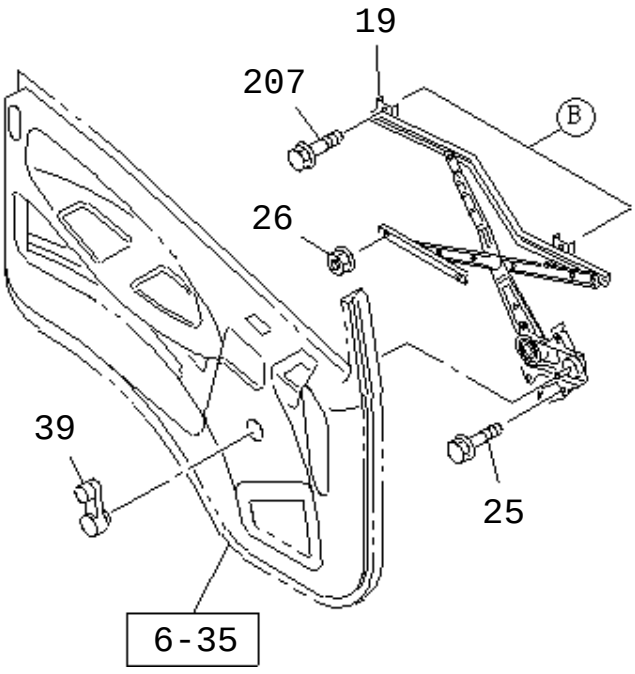

https://truckmanualshub.com/

FRONT DOOR GLASS AND REGULATOR


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		GLASS; FRT DOOR						
		8-98211-765-0		1312-1403	L	01	A	IDN
		8-98211-765-0		1404-	L	01	AB	IDN
		8-98211-764-0		1312-1403	R	01	A	IDN
		8-98211-764-0		1404-	R	01	AB	IDN
7		GLASS RUN; FRT DOOR						
		8-98031-742-2		1312-1403		02	A	(B) IDN
		8-98031-742-2		1404-1409		02	AB	(B) IDN
		8-98260-310-0		1410-		02	AB	(B)
		8-98029-196-3		1312-1403	L	01	A	(A) IDN
		8-98029-196-3		1404-1409	L	01	AB	(A) IDN
		8-98260-309-0		1410-	L	01	AB	(A)
		8-98029-195-3		1312-1403	R	01	A	(A) IDN
		8-98029-195-3		1404-1409	R	01	AB	(A) IDN
		8-98260-308-0		1410-	R	01	AB	(A)
8		CLIP; GLASS GUIDE						
		8-98048-796-0		1312-1403		02	A	IDN
		8-98048-796-0		1404-		02	AB	IDN
12		CHANNEL; GLASS RUN,FRT						
		8-98188-419-0		1312-1403	L	01	A	IDN
		8-98188-419-0		1404-1409	L	01	AB	IDN
		8-98260-319-0		1410-	L	01	AB	
		8-98188-418-0		1312-1403	R	01	A	IDN
		8-98188-418-0		1404-1409	R	01	AB	IDN
		8-98260-318-0		1410-	R	01	AB	
17		SCREW; RR CHANNEL						
		0-28050-610-0		1312-1403		04	A	M6X10 FLANGE IDN
		0-28050-610-0		1404-		04	AB	M6X10 FLANGE IDN
19		REGULATOR; WINDOW,FRT DOOR						
		8-98029-234-3		1312-1403	L	01	A	IDN
		8-98029-234-3		1404-	L	01	AB	IDN
		8-98029-233-3		1312-1403	R	01	A	IDN
		8-98029-233-3		1404-	R	01	AB	IDN
25		BOLT; WINDOW REG						
		0-28050-610-0		1312-1403		08	A	M6X10 FLANGE IDN
		0-28050-610-0		1404-		08	AB	M6X10 FLANGE IDN
26		NUT; FLANGE,WINDOW REG						


https://truckmanualshub.com/

FRONT DOOR GLASS AND REGULATOR


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
26		0-91180-106-0		1312-1403		04	A	M6 FLANGE
		0-91180-106-0		1404-		04	AB	M6 FLANGE
31		STOPPER; RUBBER,DOOR INNER						
		8-94358-581-0		1312-1403		04	A	
		8-94358-581-0		1404-		04	AB	
39		HANDLE; WINDOW REG,FRT DOOR						
		8-97948-267-0		1312-1403		02	A	IDN
		8-97948-267-0		1404-		02	AB	IDN
72		SEAL; WAIST,FRT DOOR						
		8-98029-193-1		1312-1403	L	01	A	IDN
		8-98029-193-1		1404-	L	01	AB	IDN
		8-98029-192-1		1312-1403	R	01	A	IDN
		8-98029-192-1		1404-	R	01	AB	IDN
192		HOLDER; DOOR GLASS						
		8-98211-762-0		1312-1403		04	A	IDN
		8-98211-762-0		1404-		04	AB	IDN
207		SCREW; DOOR GLASS						
		0-28050-610-0		1312-1403		04	A	M6X10 FLANGE IDN
		0-28050-610-0		1404-		04	AB	M6X10 FLANGE IDN
221		BAR ASM; DOOR GLASS GUARD						
		8-97925-104-0		1312-1403	L	01	A	IDN
		8-97925-104-0		1404-	L	01	AB	IDN
		8-97925-103-0		1312-1403	R	01	A	IDN
		8-97925-103-0		1404-	R	01	AB	IDN
222		CAP; GUARD BAR						
		8-97405-319-0		1312-1403	L	01	A	GRAY IDN
		8-97405-319-0		1404-	L	01	AB	GRAY IDN
		8-97405-318-0		1312-1403	R	01	A	GRAY IDN
		8-97405-318-0		1404-	R	01	AB	GRAY IDN
223		SCREW; GUARD BAR						
		0-38050-625-0		1312-1403		08	A	M6X25 IDN
		0-38050-625-0		1404-		08	AB	M6X25 IDN
227		RUBBER; SHUTTER						
		8-97405-321-0		1312-1403	L	01	A	GRAY IDN
		8-97405-321-0		1404-	L	01	AB	GRAY IDN
6-30		Move to 6-30						
6-35		Move to 6-35						


https://truckmanualshub.com/

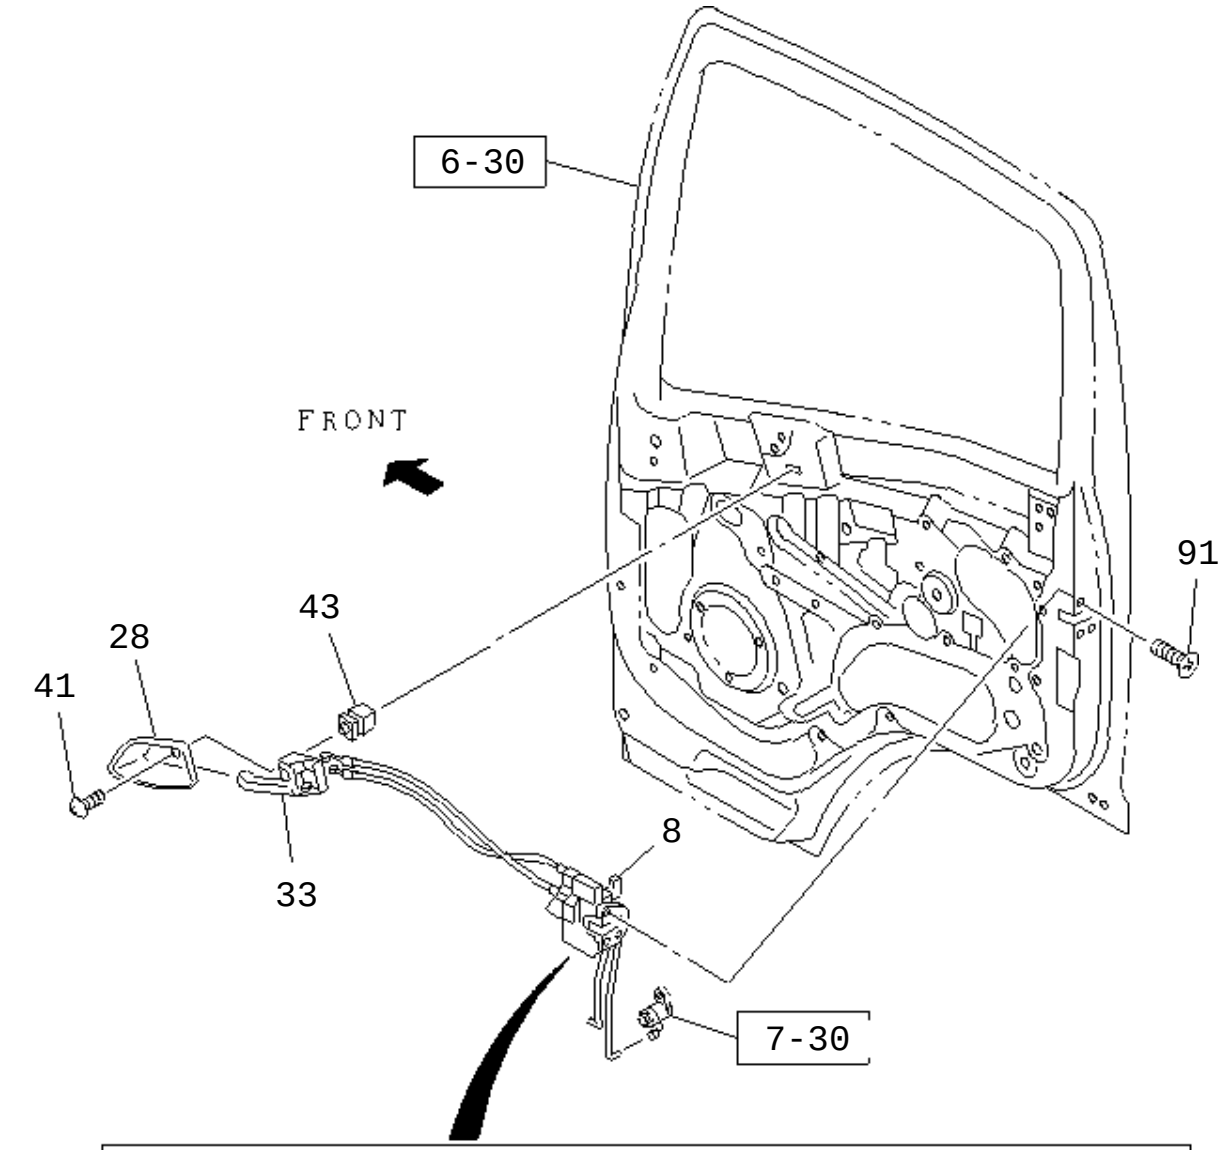


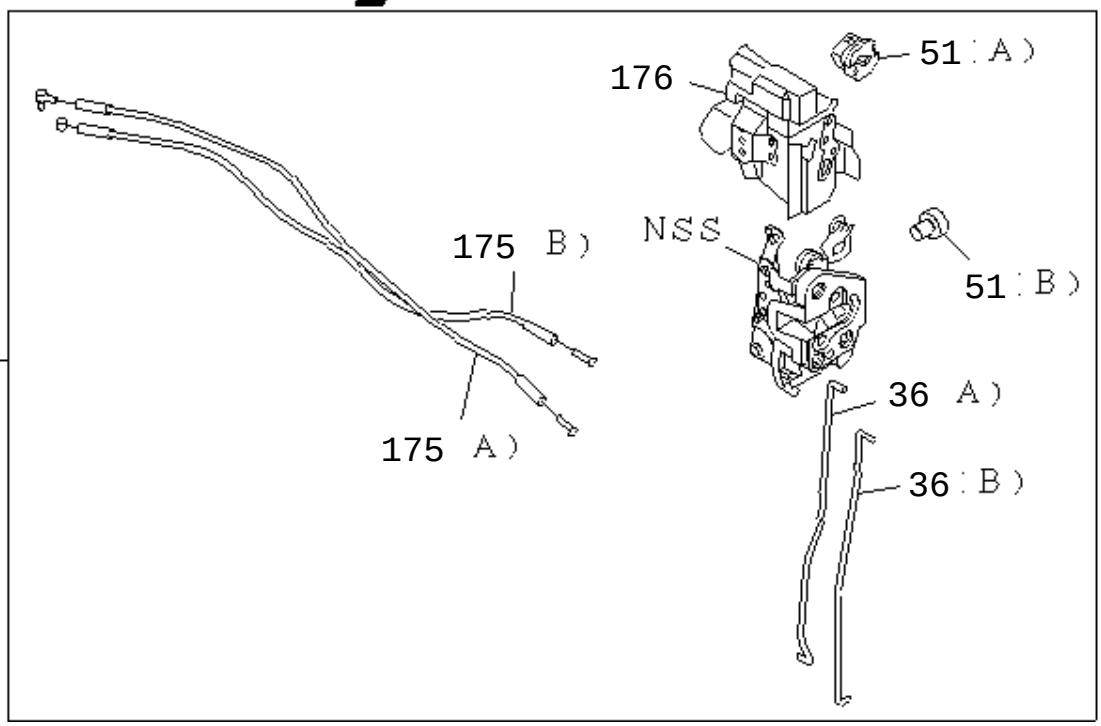


https://truckmanualshub.com/

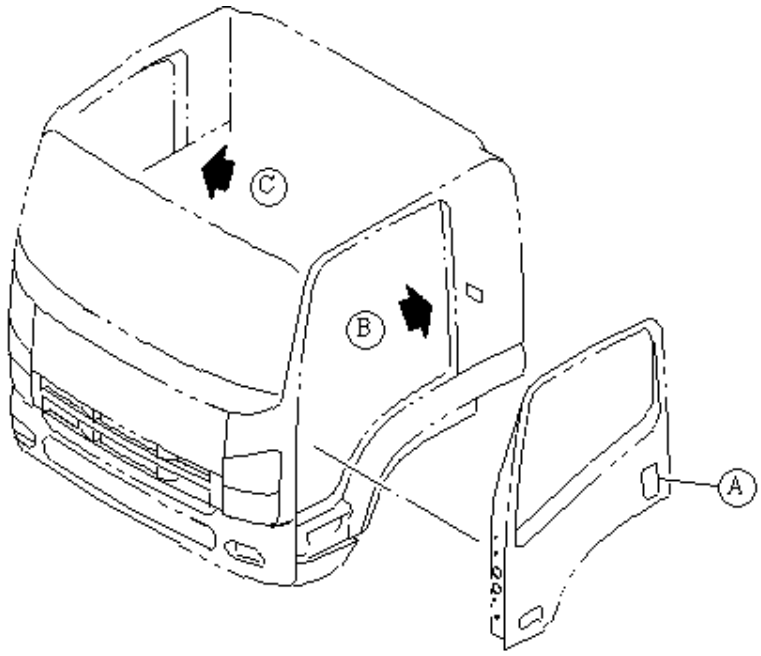

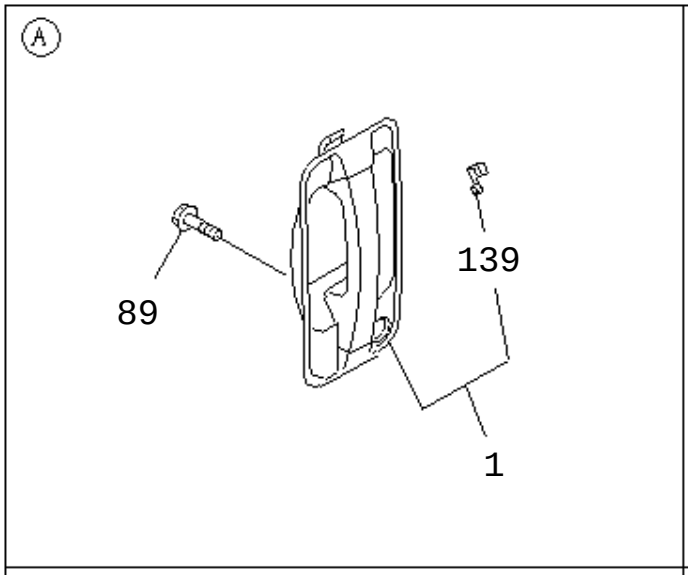

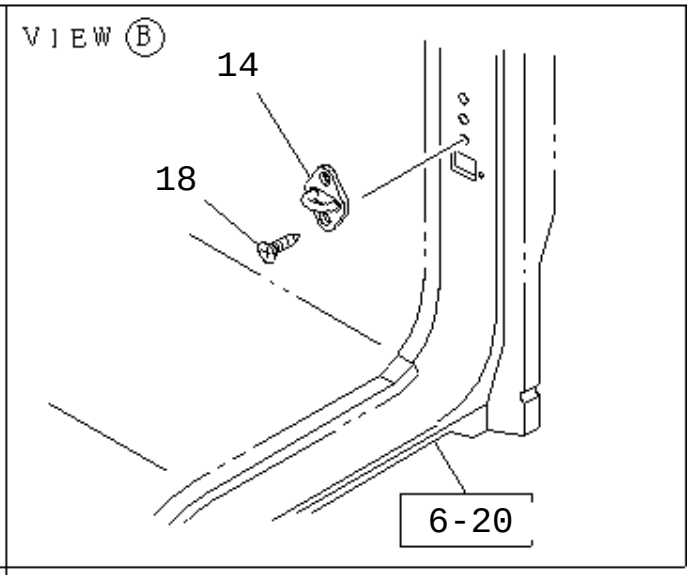

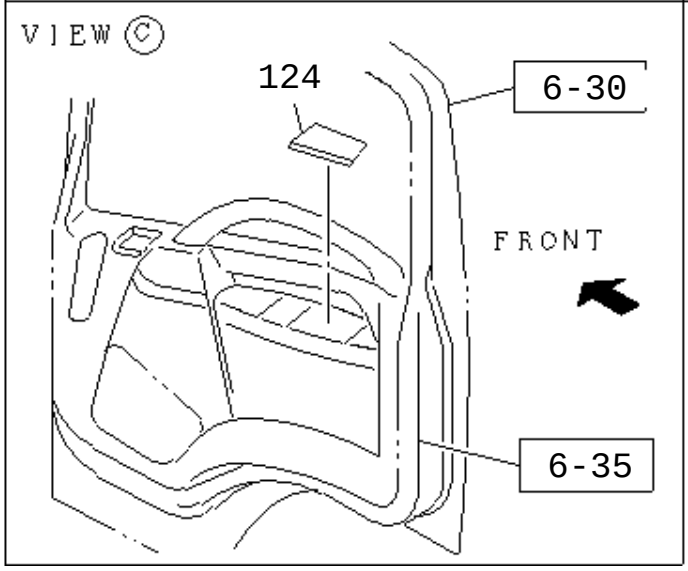

https://truckmanualshub.com/

FRONT DOOR LOCK AND HANDLE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		HANDLE; OUTSIDE,FRT DOOR						
		8-98037-100-2		1312-1403	L	01	A	IDN
		8-98037-100-2		1404-	L	01	AB	IDN
		8-98037-101-2		1312-1403	R	01	A	IDN
		8-98037-101-2		1404-	R	01	AB	IDN
8		LOCK; DOOR,FRT DOOR						
		8-98029-053-2		1312-1403	L	01	A	IDN
		8-98029-053-2		1404-	L	01	AB	IDN
		8-98029-052-2		1312-1403	R	01	A	IDN
		8-98029-052-2		1404-	R	01	AB	IDN
14		STRIKER; FRT DOOR						
		8-98029-173-2		1312-1403		02	A	
		8-98029-173-2		1404-		02	AB	
18		SCREW; DOOR STRIKER						
		8-98004-343-2		1312-1403		04	A	M8X20 CK-HEAD
		8-98004-343-2		1404-		04	AB	M8X20 CK-HEAD
28		BEZEL; INSIDE LEVER,FRT DOOR						
		8-97405-312-0		1312-1403	L	01	A	DARK GRAY
		8-97405-312-0		1404-	L	01	AB	DARK GRAY
		8-97405-311-0		1312-1403	R	01	A	DARK GRAY
		8-97405-311-0		1404-	R	01	AB	DARK GRAY
33		LEVER ASM; INSIDE,FRT DOOR						
		8-97405-310-1		1312-1403	L	01	A	DARK GRAY IDN
		8-97405-310-1		1404-	L	01	AB	DARK GRAY IDN
		8-97405-309-1		1312-1403	R	01	A	DARK GRAY IDN
		8-97405-309-1		1404-	R	01	AB	DARK GRAY IDN
36		LINK; DOOR LOCK,OUTSIDE						
		8-98058-532-0		1312-1403	L	01	A	(A) IDN
		8-98058-532-0		1404-	L	01	AB	(A) IDN
		8-98058-536-0		1312-1403	L	01	A	(B) IDN
		8-98058-536-0		1404-	L	01	AB	(B) IDN
		8-98058-531-0		1312-1403	R	01	A	(A) IDN
		8-98058-531-0		1404-	R	01	AB	(A) IDN
		8-98058-535-0		1312-1403	R	01	A	(B) IDN
		8-98058-535-0		1404-	R	01	AB	(B) IDN
41		SCREW; INSIDE HANDLE						

https://truckmanualshub.com/

FRONT DOOR LOCK AND HANDLE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
41		0-72380-516-0		1312-1403		02	A	M5X16 HEX SOCKET IDN
		0-72380-516-0		1404-		02	AB	M5X16 HEX SOCKET IDN
43		GROMMET; SCREW,INSIDE LEVER,DOOR						
		8-94279-078-0		1312-1403		02	A	D=8.6X7.7 L=7.5 IDN
		8-94279-078-0		1404-		02	AB	D=8.6X7.7 L=7.5 IDN
51		SNAP; FRT DOOR LOCK CONT ROD						
		8-98058-227-0		1312-1403	L	02	A	(A)
		8-98058-227-0		1404-	L	02	AB	(A)
		8-98058-229-0		1312-1403	L	01	A	(B) IDN
		8-98058-229-0		1404-	L	01	AB	(B) IDN
		8-98058-226-0		1312-1403	R	02	A	(A)
		8-98058-226-0		1404-	R	02	AB	(A)
		8-98058-228-0		1312-1403	R	01	A	(B) IDN
		8-98058-228-0		1404-	R	01	AB	(B) IDN
89		BOLT; DOOR OUTSIDE HANDLE						
		0-28050-610-0		1312-1403		04	A	M6X10 FLANGE IDN
		0-28050-610-0		1404-		04	AB	M6X10 FLANGE IDN
91		BOLT; DOOR LOCK						
		8-98004-342-0		1312-1403		06	A	M6X14.5
		8-98004-342-0		1404-		06	AB	M6X14.5
124		COVER; DOOR PULL						
		8-97422-056-1		1312-1403	L	01	A	IDN
		8-97422-056-1		1404-	L	01	AB	IDN
		8-97422-055-1		1312-1403	R	01	A	IDN
		8-97422-055-1		1404-	R	01	AB	IDN
139		HOLDER; ROD,DOOR HANDLE						
		8-97333-303-0		1312-1403	L	01	A	WHITE IDN
		8-97333-303-0		1404-	L	01	AB	WHITE IDN
		8-98095-813-0		1312-1403	R	01	A	BLACK IDN
		8-98095-813-0		1404-	R	01	AB	BLACK IDN
175		CABLE ASM; LOCK CONTROL						
		8-98058-539-0		1312-1403		02	A	(B) IDN

https://truckmanualshub.com/

FRONT DOOR LOCK AND HANDLE

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
175		8-98058-539-0		1404-		02	AB	(B) IDN
		8-98058-538-0		1312-1403	L	01	A	(A) IDN
		8-98058-538-0		1404-	L	01	AB	(A) IDN
		8-98058-537-0		1312-1403	R	01	A	(A) IDN
		8-98058-537-0		1404-	R	01	AB	(A) IDN
176		COVER; DOOR LOCK						
		8-98058-239-0		1312-1403	L	01	A	
		8-98058-239-0		1404-	L	01	AB	
		8-98058-238-0		1312-1403	R	01	A	
		8-98058-238-0		1404-	R	01	AB	
6-30		Move to 6-30						
7-30		Move to 7-30						
6-20		Move to 6-20						
6-35		Move to 6-35						

https://truckmanualshub.com/

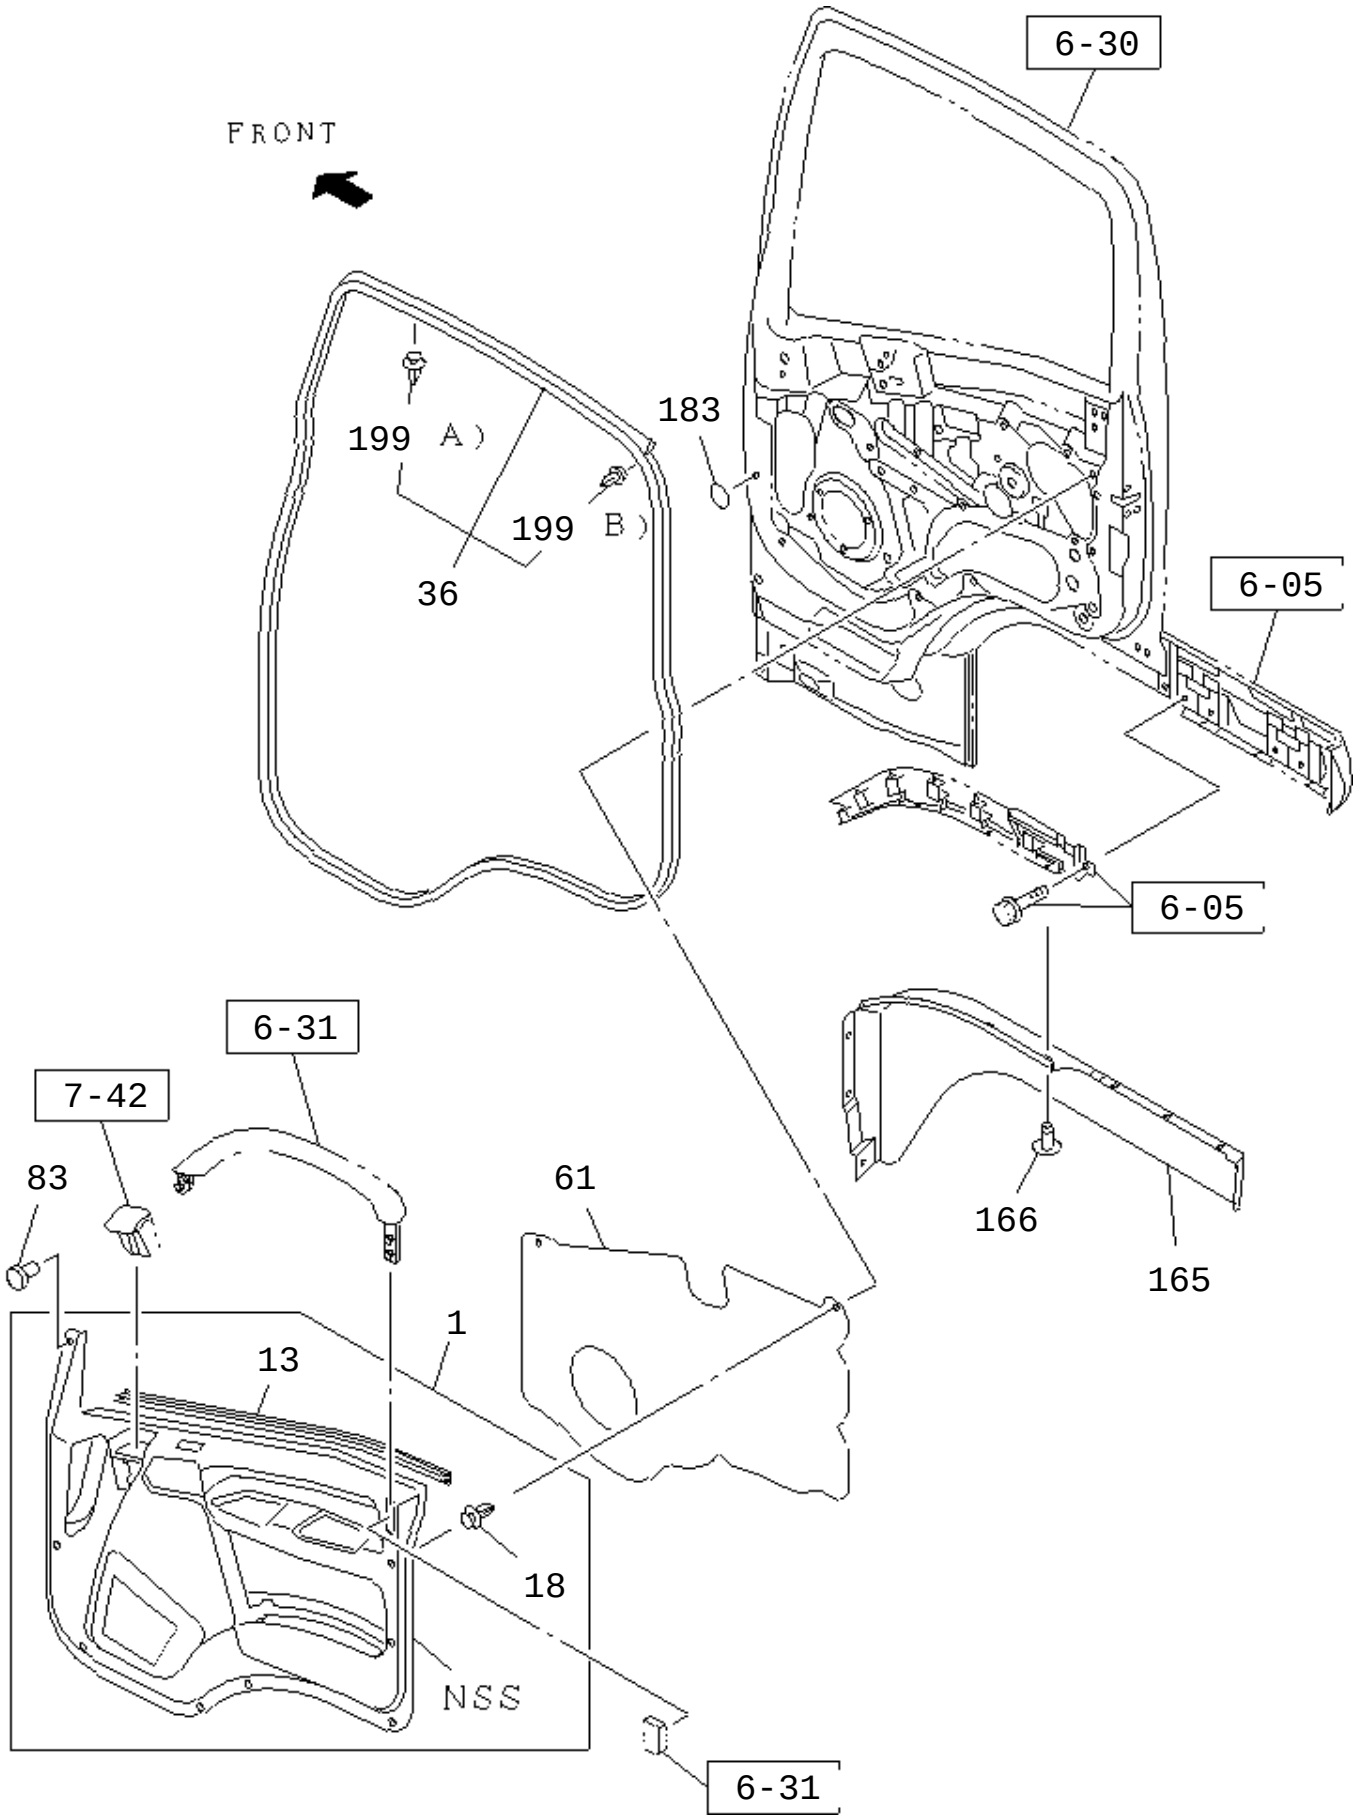

https://truckmanualshub.com/

6-35 FRONT DOOR TRIM


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		PAD; TRIM,FRT DOOR						
		8-97405-307-6		1312-1403	L	01	A	GRAY IDN
		8-97405-307-6		1404-	L	01	AB	GRAY IDN
		8-97405-305-6		1312-1403	R	01	A	GRAY IDN
		8-97405-305-6		1404-	R	01	AB	GRAY IDN
13		SEAL; DOOR TRIM						
		8-98029-202-1		1312-1403	L	01	A	IDN
		8-98029-202-1		1404-	L	01	AB	IDN
		8-98029-201-1		1312-1403	R	01	A	IDN
		8-98029-201-1		1404-	R	01	AB	IDN
18		CLIP; DOOR PAD						
		8-98004-025-0		1312-1403		14	A	IDN
		8-98004-025-0		1404-		14	AB	IDN
36		SEAL; DOOR,MAIN,CAB SIDE						
		8-98029-199-3		1312-1403	L	01	A	IDN
		8-98029-199-3		1404-	L	01	AB	IDN
		8-98077-429-0		1312-1403	R	01	A	IDN
		8-98077-429-0		1404-	R	01	AB	IDN
61		SEAL; WATER,DOOR PAD						
		8-98029-395-2		1312-1403	L	01	A	2-SPEAKER SYSTEM BASE<U95> IDN
		8-98029-395-2		1404-	L	01	AB	2-SPEAKER SYSTEM BASE<U95> IDN
		8-98029-394-2		1312-1403	R	01	A	2-SPEAKER SYSTEM BASE<U95> IDN
		8-98029-394-2		1404-	R	01	AB	2-SPEAKER SYSTEM BASE<U95> IDN
		8-98029-396-0		1312-1403		02	A	EXC. 2-SPEAKER SYSTEM BASE<U95>
		8-98029-396-0		1404-		02	AB	EXC. 2-SPEAKER SYSTEM BASE<U95>
83		CLIP; DOOR TRIM						
		8-97405-308-0		1312-1403		02	A	GRAY IDN
		8-97405-308-0		1404-		02	AB	GRAY IDN
165		LINER; DOOR LWR						
		8-98038-289-1		1312-1403	L	01	A	
		8-98038-289-1		1404-	L	01	AB	
		8-98038-288-1		1312-1403	R	01	A	
		8-98038-288-1		1404-	R	01	AB	
166		PLUG; HOLE						
		1-09987-248-1		1312-1403		09	A	D8X13.5
		1-09987-248-1		1404-		09	AB	D8X13.5
183		SEAL; LOCATION HOLE						
		1-76798-019-0		1312-1403		02	A	OD=25 BLACK
		1-76798-019-0		1404-		02	AB	OD=25 BLACK
199		CLIP; SEAL						
		8-98062-270-0		1312-1403		80	A	(A) NATURAL

https://truckmanualshub.com/

6-35 FRONT DOOR TRIM

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
199		8-98062-270-0		1404-		80	AB	(A) NATURAL
		8-98062-271-0		1312-1403		02	A	(B) RED IDN
		8-98062-271-0		1404-		02	AB	(B) RED IDN
6-05		Move to 6-05						
6-30		Move to 6-30						
6-31		Move to 6-31						
7-42		Move to 7-42						

https://truckmanualshub.com/

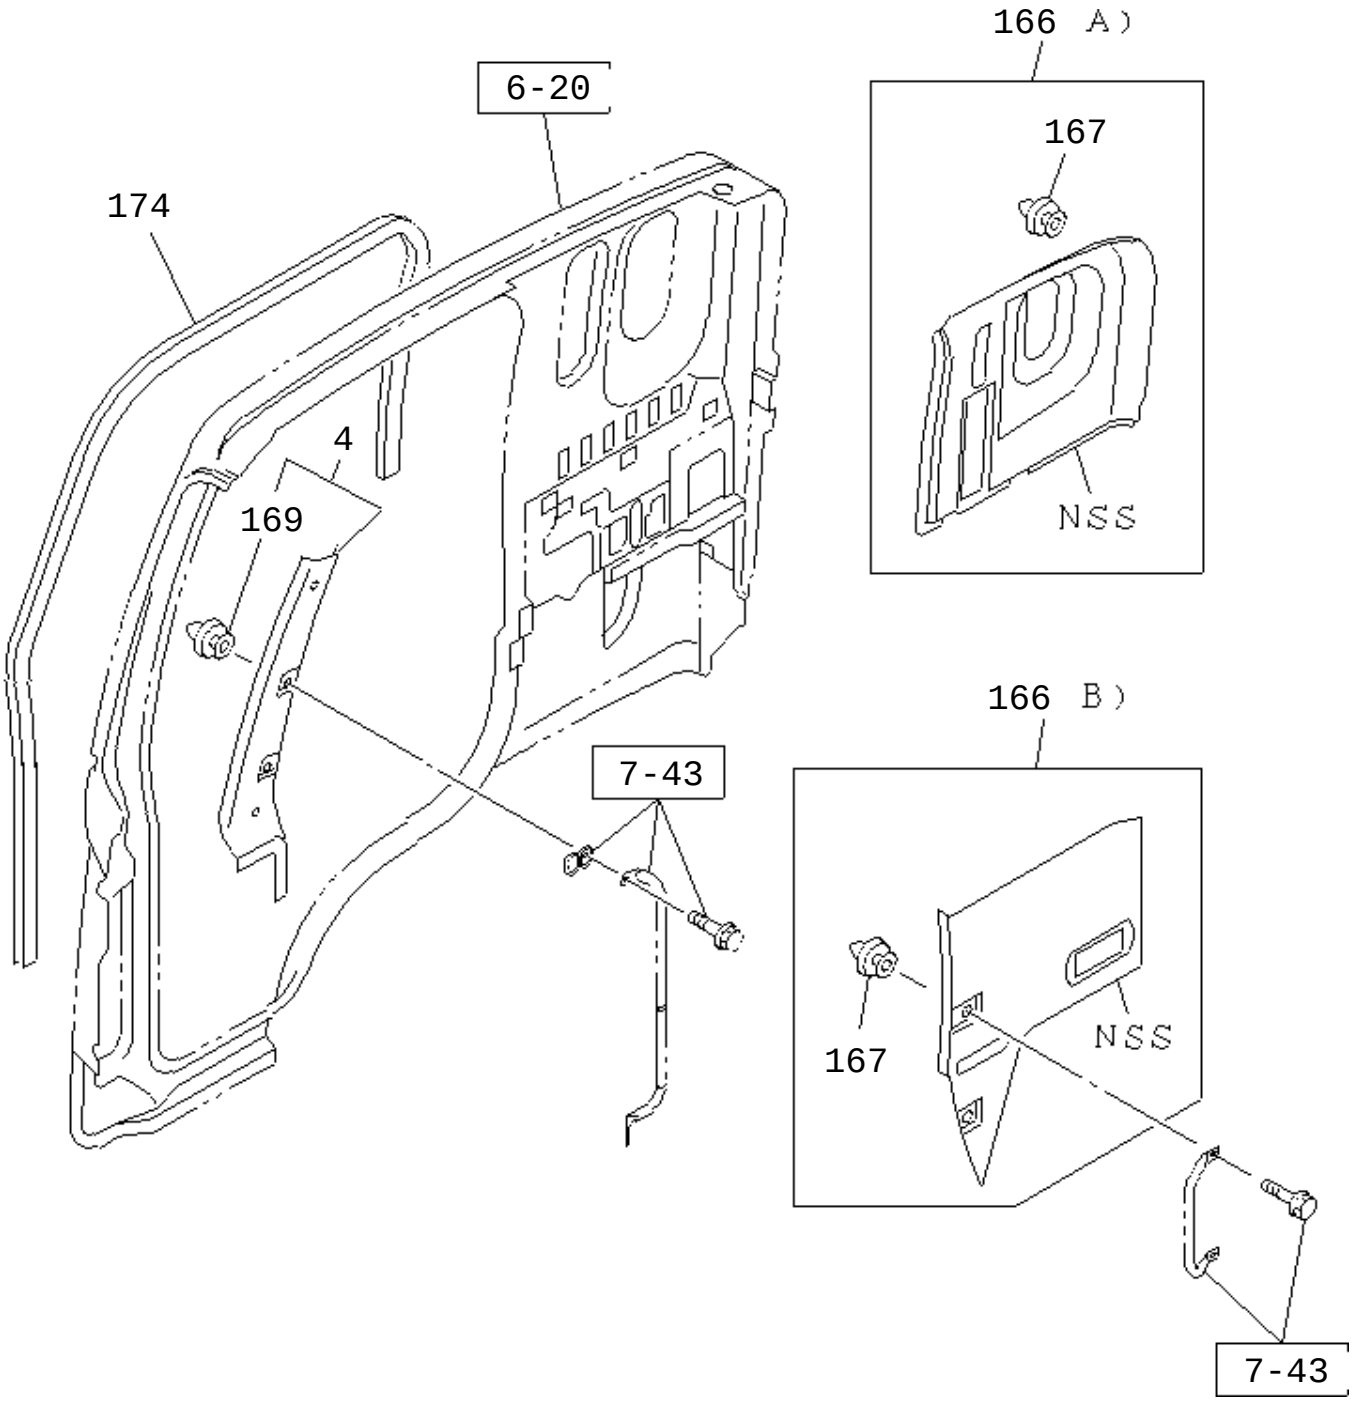


https://truckmanualshub.com/

6-43 SIDE TRIM

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
4		COVER; TRIM,FRT SIDE						
		8-97405-255-2		1312-1403	L	01	A	DARK GRAY IDN
		8-97405-255-2		1404-	L	01	AB	DARK GRAY IDN
		8-97407-415-1		1312-1403	R	01	A	DARK GRAY
		8-97407-415-1		1404-	R	01	AB	DARK GRAY
166		TRIM; RR PILLAR						
		8-97415-651-0		1312-1403	L	01	A	(A) DARK GRAY
		8-97415-651-0		1404-	L	01	AB	(A) DARK GRAY
		8-97425-039-0		1312-1403	L	01	A	(B) GRAY
		8-97425-039-0		1404-	L	01	AB	(B) GRAY
		8-97415-652-0		1312-1403	R	01	A	(A) DARK GRAY
		8-97415-652-0		1404-	R	01	AB	(A) DARK GRAY
		8-97425-038-0		1312-1403	R	01	A	(B) GRAY
		8-97425-038-0		1404-	R	01	AB	(B) GRAY
167		CLIP; TRIM,RR PILLAR						
		8-98059-610-0		1312-1403		16	A	IDN
		8-98059-610-0		1404-		16	AB	IDN
169		CLIP; TRIM COVER,FRT PILLAR						
		8-94279-974-1		1312-1403		04	A	OD=7.9 BLACK
		8-94279-974-1		1404-		04	AB	OD=7.9 BLACK
174		FINISHER; BODY SIDE						
		8-98155-184-0		1312-1403	L	01	A	IDN
		8-98155-184-0		1404-	L	01	AB	IDN
		8-98155-183-0		1312-1403	R	01	A	IDN
		8-98155-183-0		1404-	R	01	AB	IDN
6-20		Move to 6-20						
7-43		Move to 7-43						


https://truckmanualshub.com/

MUD GUARD;FRONT

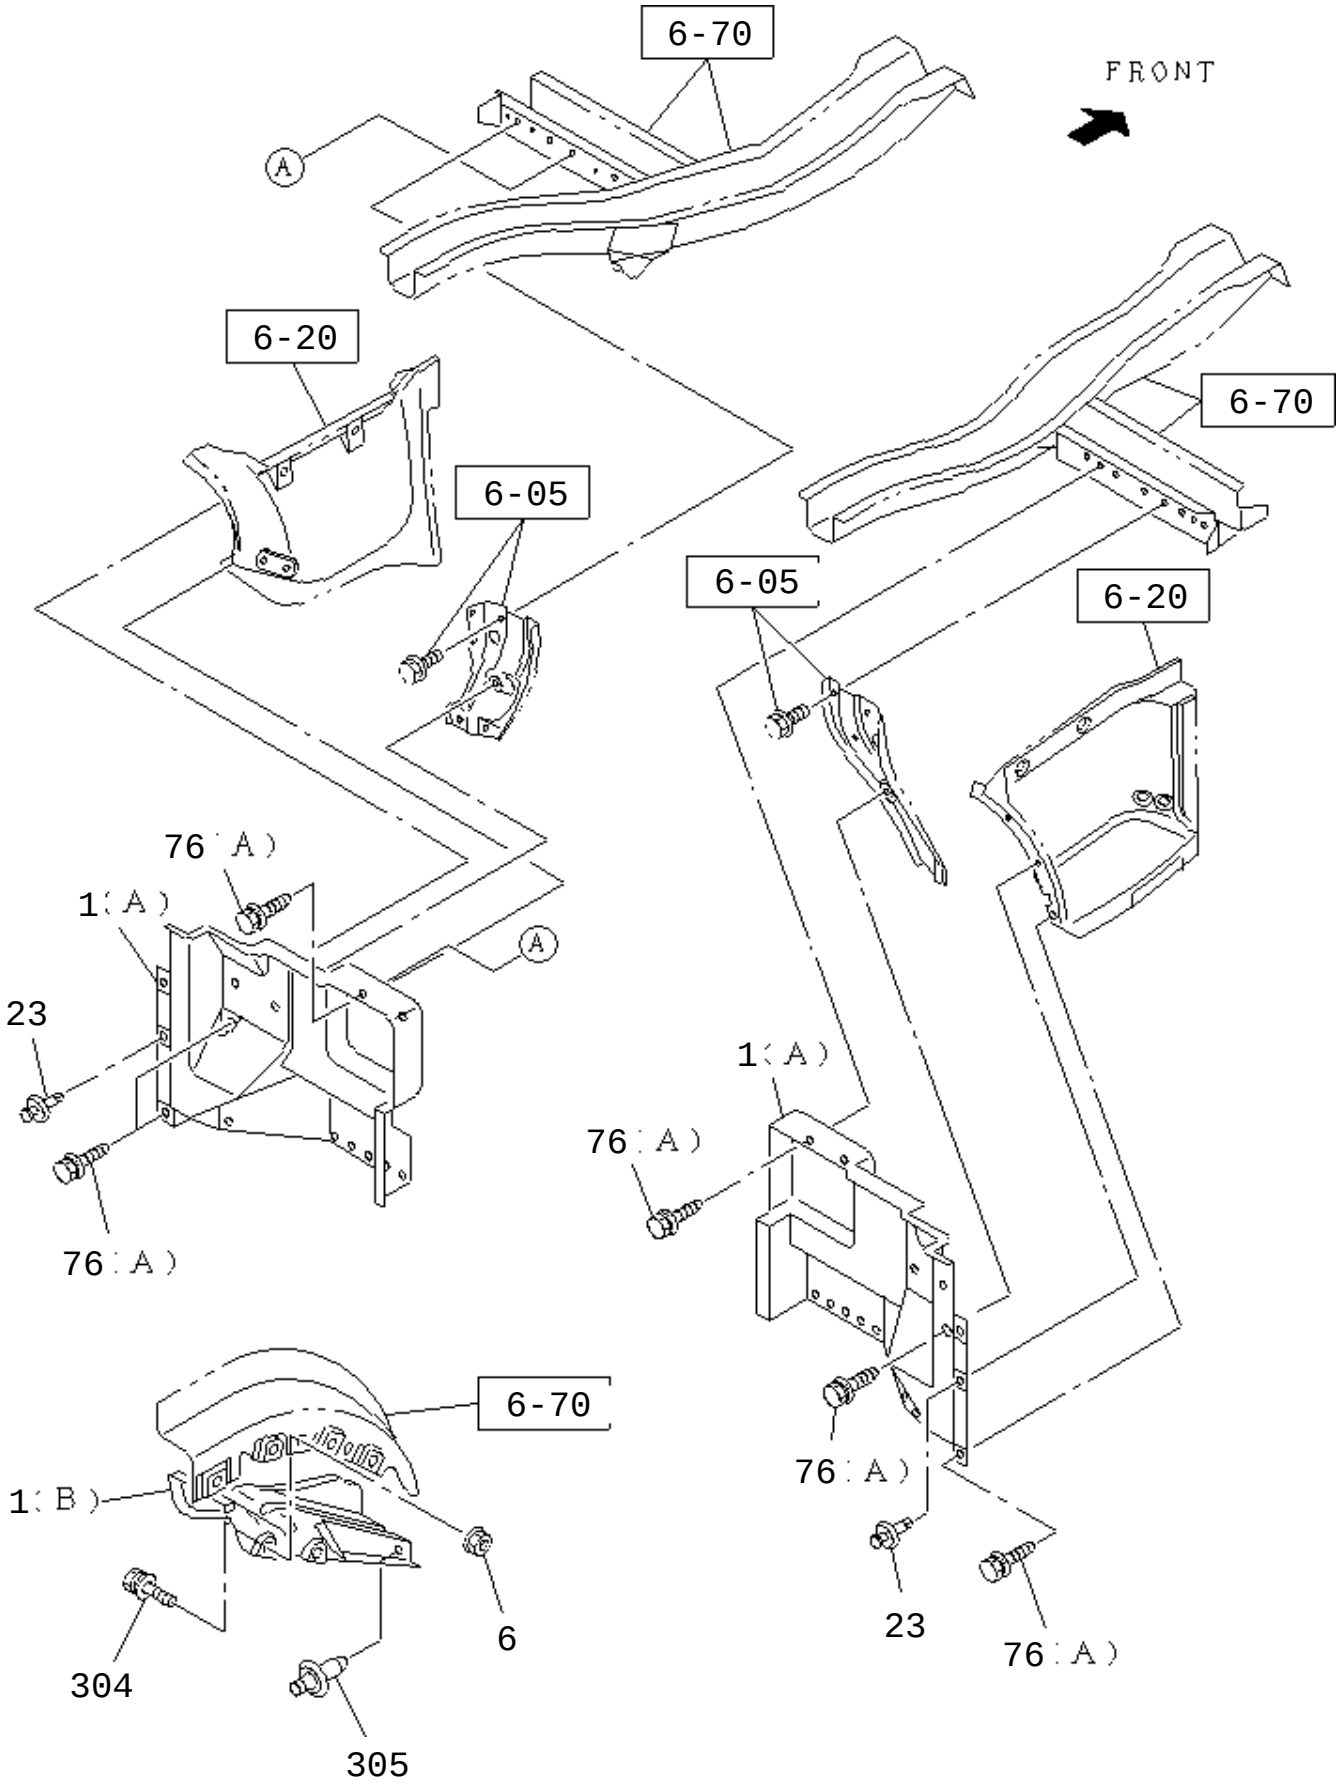


https://truckmanualshub.com/

MUD GUARD;REAR AND SIDE PANEL

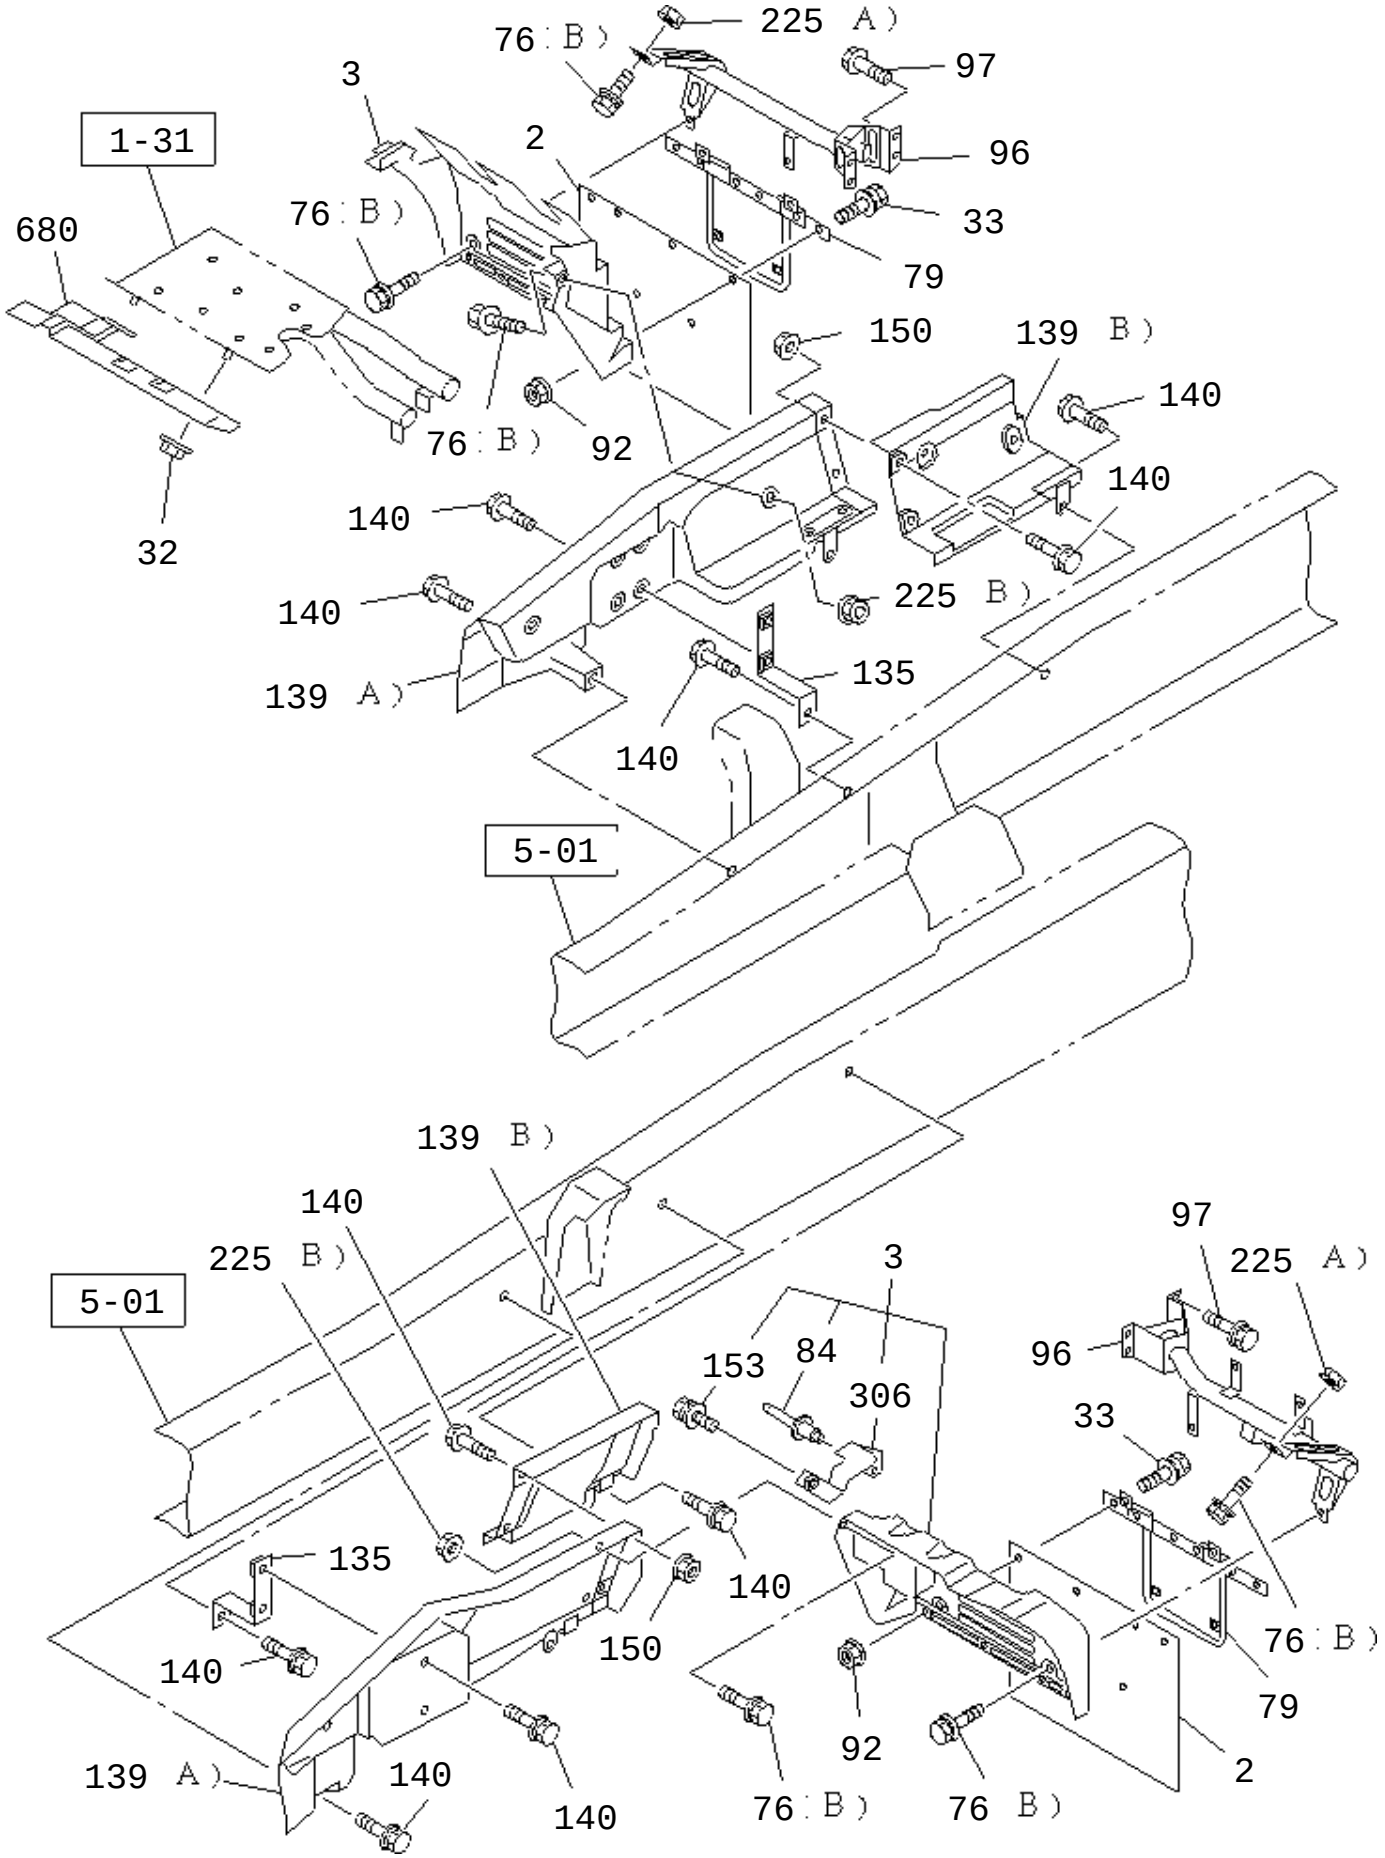

https://truckmanualshub.com/

MUD COVER AND SEAL

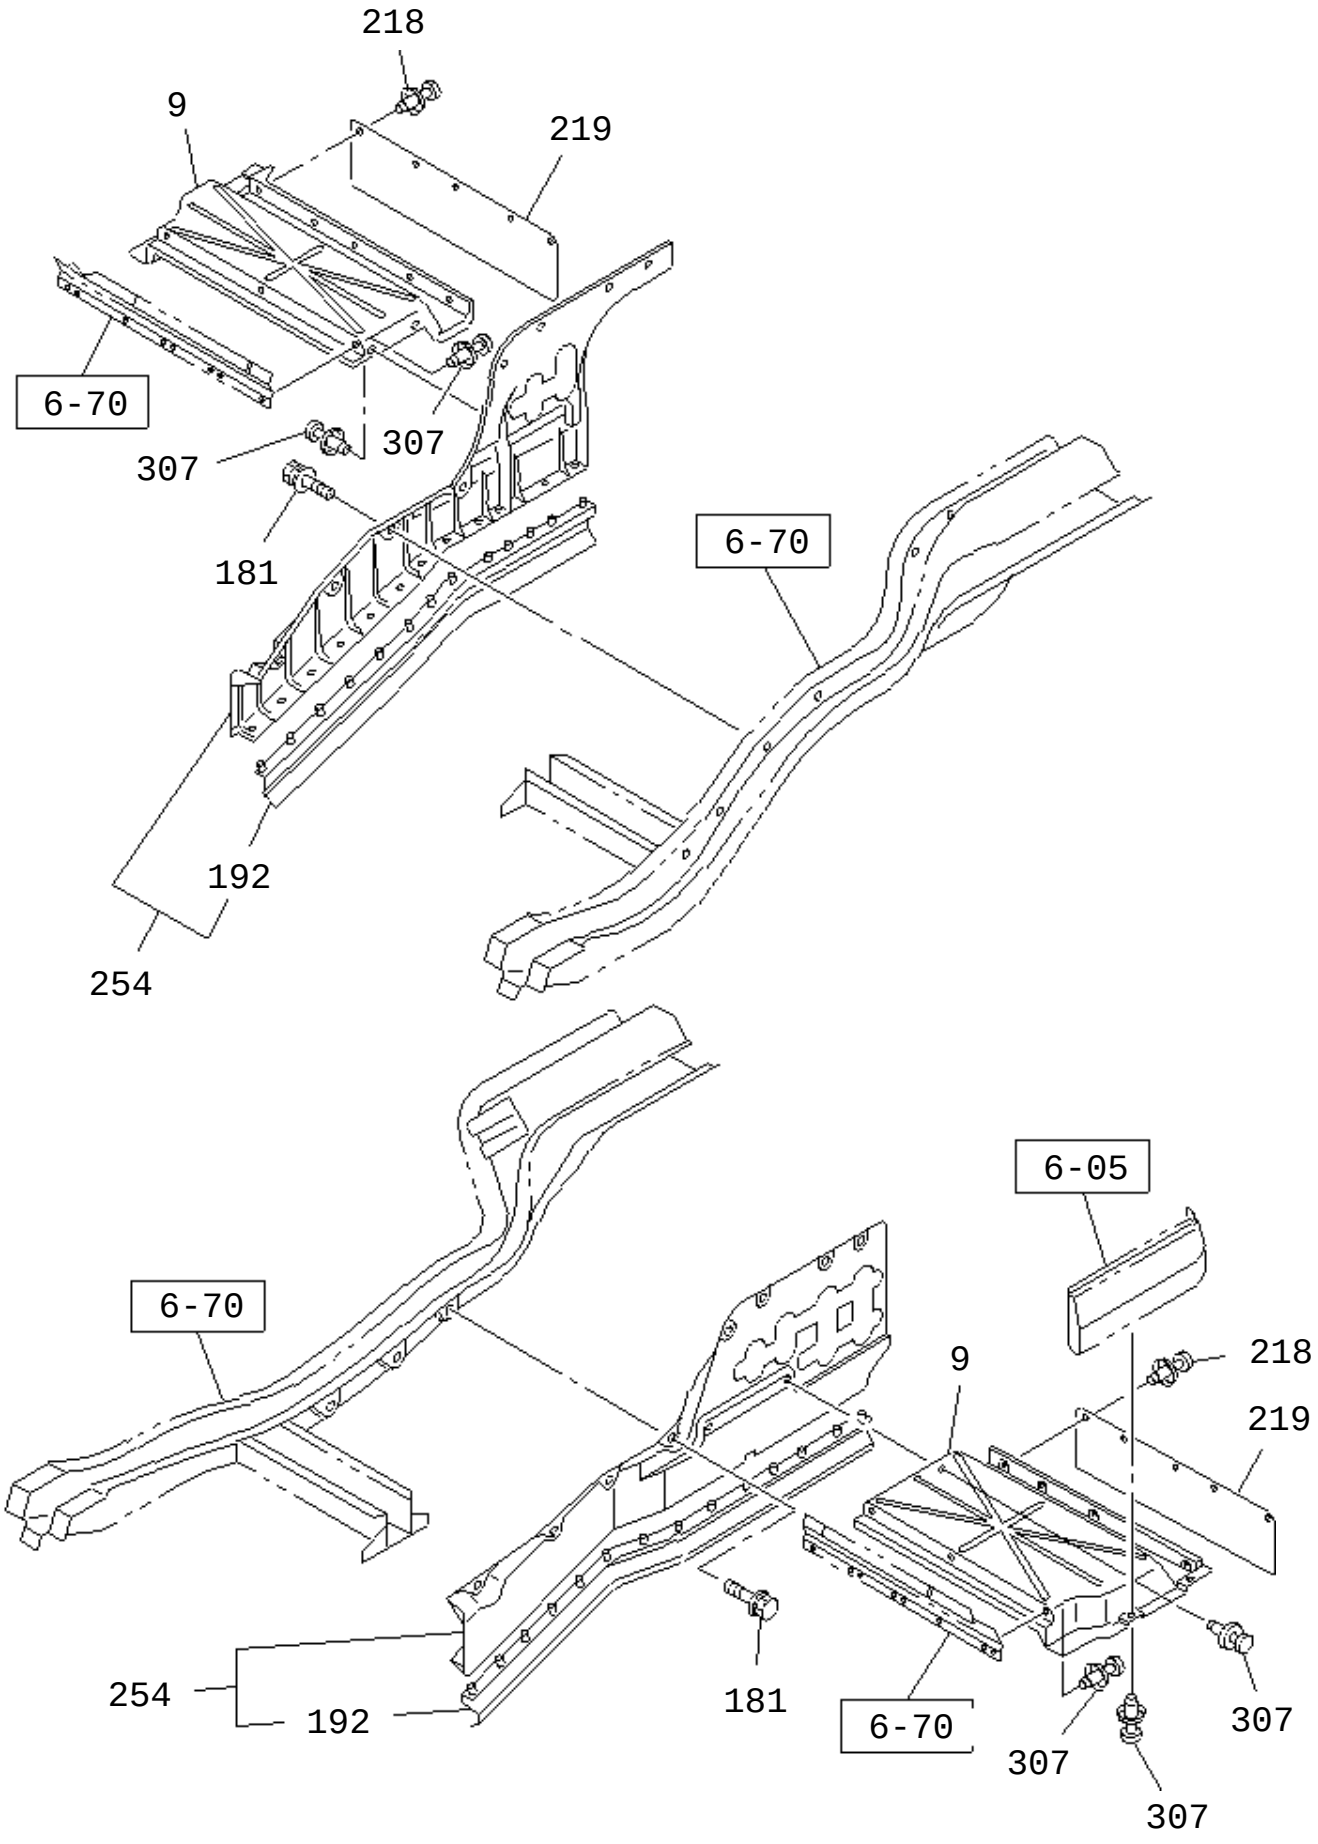

https://truckmanualshub.com/

6-47 MUD GUARD AND INSULATOR

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		GUARD; MUD,FRT						
		8-98076-271-0		1402-	R	01	A	MIXER CHASSIS<6NR>
								(B)
		8-98039-851-1		1312-1403	L	01	A	
								(A)
		8-98039-851-1		1404-	L	01	AB	
								(A)
		8-98039-850-1		1312-1403	R	01	A	
								(A)
		8-98039-850-1		1404-	R	01	AB	
								(A)
2		COVER; MUD,TIRE RR						
		1-79931-512-1		1312-1403		02	A	
								IDN
		1-79931-512-1		1404-		02	AB	
								IDN
3		GUARD; MUD,RR						
		8-98196-109-0		1312-1403	L	01	A	
		8-98196-109-0		1404-	L	01	AB	
		8-98219-767-0		1312-1403	R	01	A	
		8-98219-767-0		1404-	R	01	AB	
6		NUT; SPLASH GUARD						
		8-94197-199-0		1402-	R	02	A	MIXER CHASSIS<6NR>
								M6 FLANGE
9		GUARD; SPLASH,WHEEL HOUSE						
		8-98040-120-2		1312-1403	L	01	A	
		8-98040-120-2		1404-	L	01	AB	
		8-98040-119-2		1312-1403	R	01	A	
		8-98040-119-2		1404-	R	01	AB	
23		FASTENER; MUD COVER						
		1-09987-248-1		1312-1403		04	A	
								D8X13.5
		1-09987-248-1		1404-		04	AB	
								D8X13.5
32		NUT; MUD GUARD						
		8-97329-625-0		1312-1403		02	A	
								M8 W/DISHED WASHER
		8-97329-625-0		1404-		02	AB	
								M8 W/DISHED WASHER
33		BOLT; MUD COVER						
		1-09980-495-0		1312-1403		12	A	
								M6X20 W/LK&PL WASHER
		1-09980-495-0		1404-		12	AB	
								M6X20 W/LK&PL WASHER
76		BOLT; MUD GUARD						
		1-09030-095-0		1312-1403		08	A	
								(B)
								M8X30 W/LK&PL WASHER
		1-09030-095-0		1404-		08	AB	
								(B)
								M8X30 W/LK&PL WASHER
		8-94331-747-1		1312-1403		08	A	
								(A)
								M8X25 W/LK&PL WASHER
		8-94331-747-1		1404-		08	AB	
								(A)
								M8X25 W/LK&PL WASHER
79		RETAINER; MUD COVER						
		8-98102-106-0		1312-1403	L	01	A	
		8-98102-106-0		1404-	L	01	AB	
		8-98102-105-0		1312-1403	R	01	A	
		8-98102-105-0		1404-	R	01	AB	
84		RIVET; MUD GUARD						
		5-09734-006-1		1312-1403	L	02	A	
		5-09734-006-1		1404-	L	02	AB	
92		NUT; MUD COVER						
		0-91180-106-0		1312-1403		08	A	
								M6 FLANGE
		0-91180-106-0		1404-		08	AB	
								M6 FLANGE
96		STAY; MUD GUARD						
		1-79931-519-4		1312-1403	L	01	A	
		1-79931-519-4		1404-	L	01	AB	
		1-79931-540-3		1312-1403	R	01	A	

https://truckmanualshub.com/

MUD GUARD AND INSULATOR


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
96		1-79931-540-3		1404-	R	01	AB	
97		BOLT; STAY TO FRAME						
		0-28651-030-0		1312-1403		08	A	M10X30 FLANGE
		0-28651-030-0		1404-		08	AB	M10X30 FLANGE
		0-28651-035-0		1312-1403		02	A	M10X35 FLANGE IDN
		0-28651-035-0		1404-		02	AB	M10X35 FLANGE IDN
135		BRACKET; SIDE PANEL						
		1-53457-191-0		1312-1403		02	A	
		1-53457-191-0		1404-		02	AB	
139		PANEL; SIDE						
		1-53194-591-0		1312-1403	L	01	A	(B)
		1-53194-591-0		1404-	L	01	AB	(B)
		1-53194-620-5		1312-1403	L	01	A	(A)
		1-53194-620-5		1404-	L	01	AB	(A)
		1-53194-590-0		1312-1403	R	01	A	(B)
		1-53194-590-0		1404-	R	01	AB	(B)
		1-53194-619-4		1312-1403	R	01	A	(A)
		1-53194-619-4		1404-	R	01	AB	(A)
140		BOLT; SIDE PANEL						
		1-09030-095-0		1312-1403		06	A	M8X30 W/LK&PL WASHER
		1-09030-095-0		1404-		06	AB	M8X30 W/LK&PL WASHER
		1-09030-095-0		1312-1403		10	A	M8X30 W/LK&PL WASHER
		1-09030-095-0		1404-		10	AB	M8X30 W/LK&PL WASHER
150		NUT; SIDE PANEL						
		8-97329-625-0		1312-1403		04	A	M8 W/DISHED WASHER
		8-97329-625-0		1404-		04	AB	M8 W/DISHED WASHER
153		BOLT; BRKT						
		1-09030-093-0		1312-1403	L	01	A	M8X25 W/LK&PL WASHER
		1-09030-093-0		1404-	L	01	AB	M8X25 W/LK&PL WASHER
181		BOLT; COVER,SIDE						
		8-98059-720-0		1312-1403		16	A	M8X24.5 W/LK&PL WASHER
		8-98059-720-0		1404-		16	AB	M8X24.5 W/LK&PL WASHER
192		SEAL; MUD COVER						
		8-98041-159-2		1312-1403	L	01	A	
		8-98041-159-2		1404-	L	01	AB	
		8-98041-158-1		1312-1403	R	01	A	
		8-98041-158-1		1404-	R	01	AB	
218		FASTENER; RUBBER						
		1-09987-248-1		1312-1403		10	A	D8X13.5
		1-09987-248-1		1404-		10	AB	D8X13.5
219		FLAP; MUD GUARD						
		8-98041-149-1		1312-1403		02	A	
		8-98041-149-1		1404-		02	AB	
225		NUT; MUD GUARD						
		0-91180-108-0		1312-1403		02	A	(A) M8 FLANGE


https://truckmanualshub.com/

6-47 MUD GUARD AND INSULATOR

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
225		0-91180-108-0		1404-		02	AB	(A) M8 FLANGE
		8-97329-625-0		1312-1403		02	A	(B) M8 W/DISHED WASHER
		8-97329-625-0		1404-		02	AB	(B) M8 W/DISHED WASHER
254		COVER; MUD,VALANCE						
		8-98039-926-1		1312-1403	L	01	A	
		8-98039-926-1		1404-	L	01	AB	
		8-98039-925-2		1312-1403	R	01	A	
		8-98039-925-2		1404-	R	01	AB	
304		BOLT; SPLASH GUARD						
		1-09980-495-0		1402-	R	02	A	MIXER CHASSIS<6NR> M6X20 W/LK&PL WASHER
305		FASTENER; SPLASH GUARD						
		1-09987-248-1		1402-	R	02	A	MIXER CHASSIS<6NR> D8X13.5
306		BRACKET; MUD GUARD						
		8-98196-125-0		1312-1403	L	01	A	
		8-98196-125-0		1404-	L	01	AB	
307		RETAINER						
		1-09987-248-1		1312-1403		14	A	D8X13.5
		1-09987-248-1		1404-		14	AB	D8X13.5
680		GUARD; MUD,UPPER						
		8-98123-402-0		1312-1403	R	01	A	
		8-98123-402-0		1404-	R	01	AB	
6-05		Move to 6-05						
6-20		Move to 6-20						
6-70		Move to 6-70						
1-31		Move to 1-31						
5-01		Move to 5-01						

https://truckmanualshub.com/

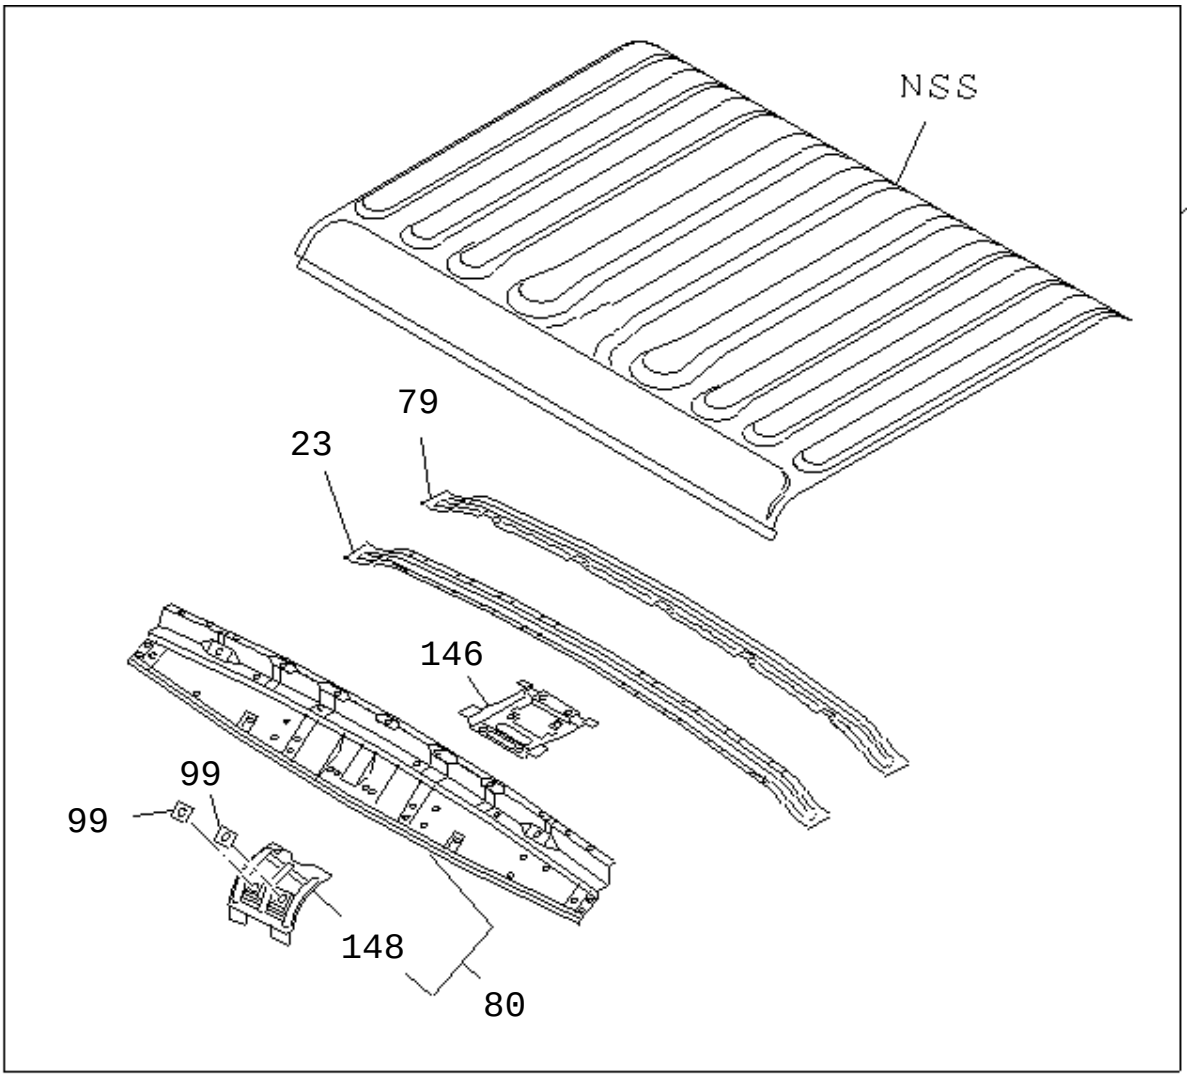

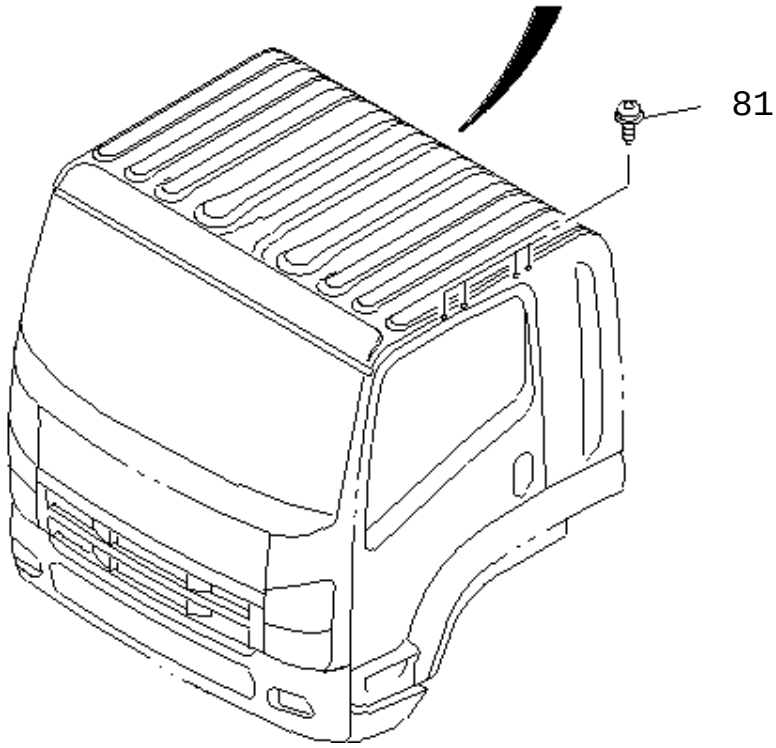



https://truckmanualshub.com/

6-60 ROOF PANEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		PANEL; ROOF					
		8-98246-477-0		1312-1403	01	A	
		8-98246-477-0		1404-	01	AB	
23		REINFORCEMENT; ROOF PANEL,FRT					
		8-98019-316-0		1312-1403	01	A	
		8-98019-316-0		1404-	01	AB	
79		REINFORCEMENT; ROOF PANEL,RR					
		8-97584-200-1		1312-1403	01	A	
		8-97584-200-1		1404-	01	AB	
80		PANEL; HEADER,ROOF					
		8-98196-921-0		1312-1403	01	A	
		8-98196-921-0		1404-	01	AB	
81		BOLT; ROOF					
		8-98141-874-0		1312-1403	08	A	M8X15.5 HEX SOCKET IDN
		8-98141-874-0		1404-	08	AB	M8X15.5 HEX SOCKET IDN
99		SEAL; BODY,METAL					
		1-61281-380-2		1312-1403	02	A	30X30 ID=20 T=0.7
		1-61281-380-2		1404-	02	AB	30X30 ID=20 T=0.7
146		REINFORCEMENT; ROOM LAMP					
		8-98075-827-0		1312-1403	01	A	IDN
		8-98075-827-0		1404-	01	AB	IDN
148		REINFORCEMENT; MIRROR					
		8-97411-015-1		1312-1403	01	A	
		8-97411-015-1		1404-	01	AB	

https://truckmanualshub.com/

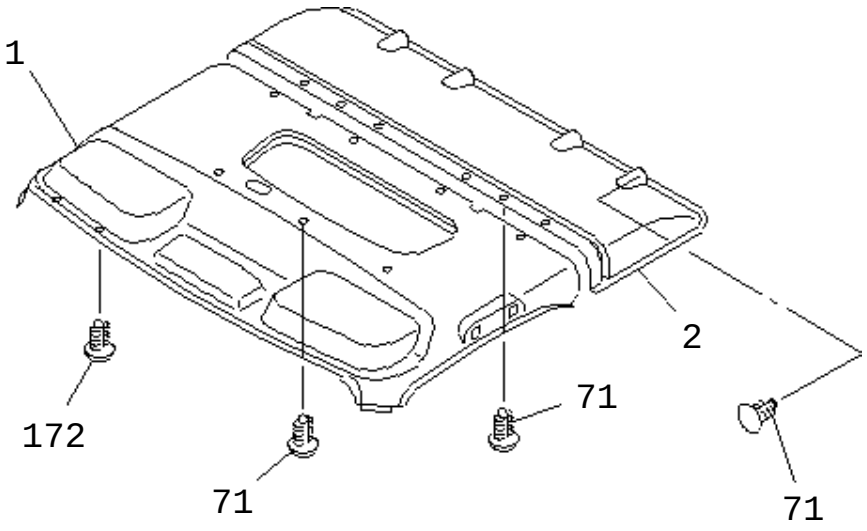


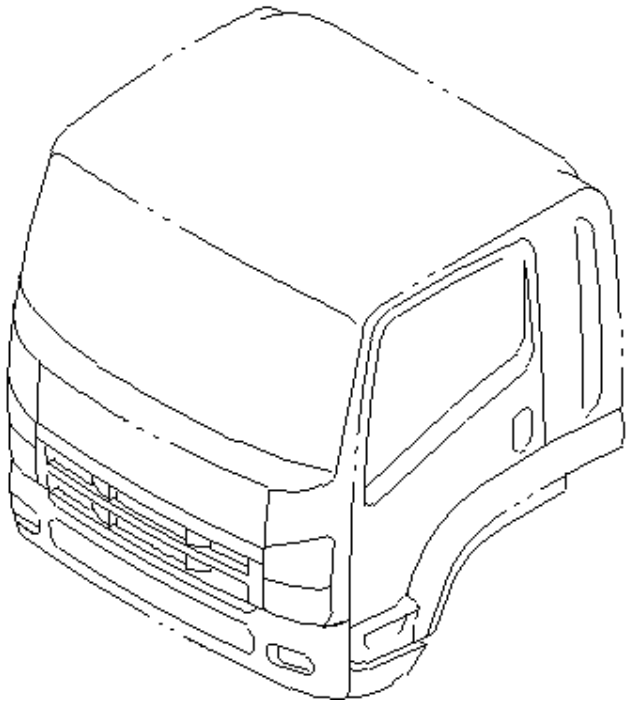

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		LINING; HD					
		8-97426-727-0		1312-1403	01	A	DARK GRAY
		8-97426-727-0		1404-	01	AB	DARK GRAY
2		LINING; HD,ROOF RR					
		8-97407-455-5		1312-1403	01	A	DARK GRAY
		8-97407-455-5		1404-	01	AB	DARK GRAY
71		FASTENER; HD LINING					
		8-97405-282-0		1312-1403	07	A	DARK GRAY
		8-97405-282-0		1404-	07	AB	DARK GRAY
172		RETAINER; HEAD LINING					
		8-97411-875-0		1312-1403	14	A	DARK GRAY
		8-97411-875-0		1404-	14	AB	DARK GRAY

https://truckmanualshub.com/

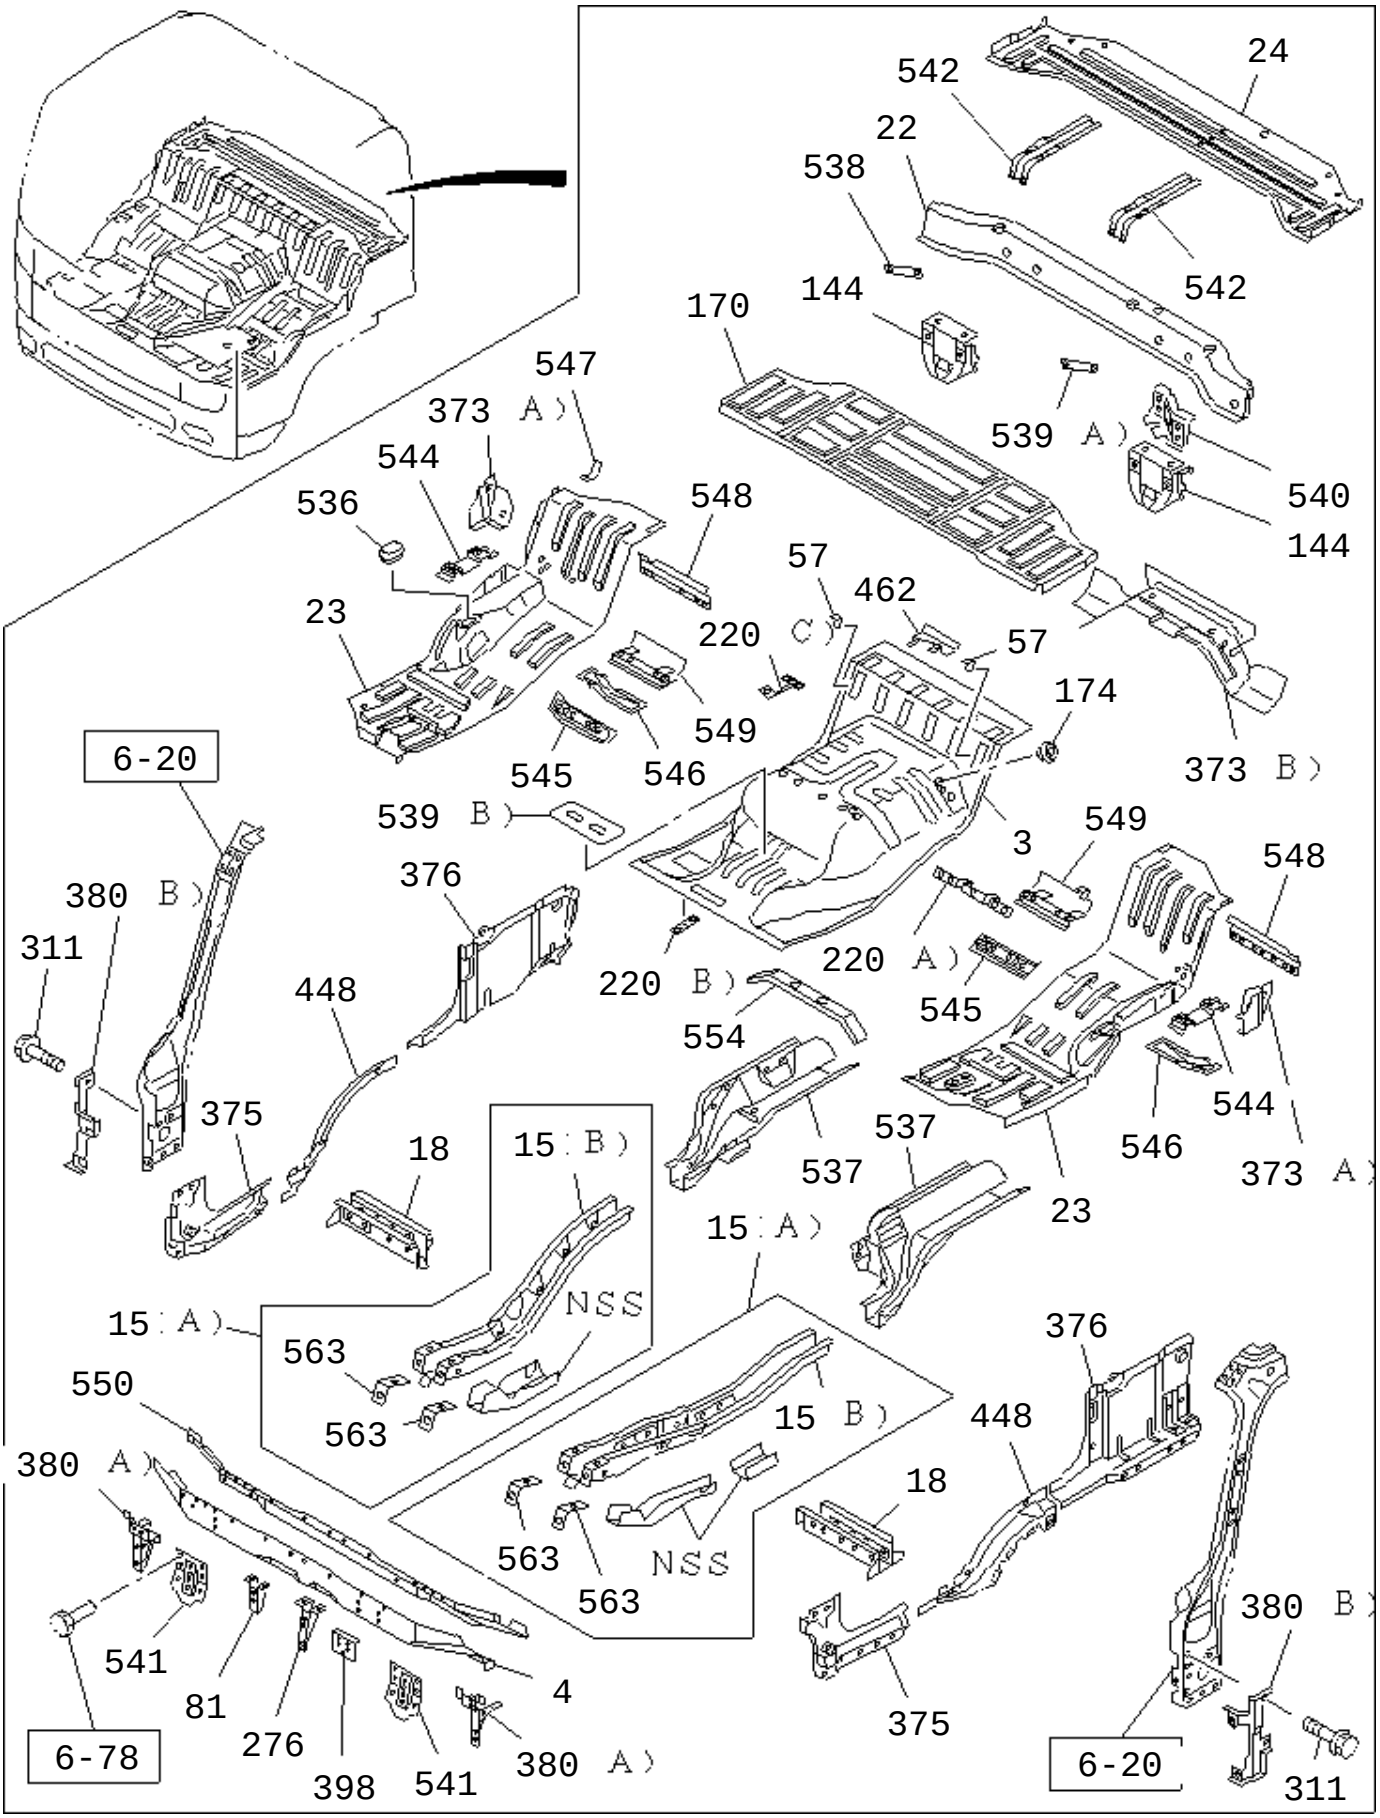

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
3		HOOD ASM; ENG						
		8-98053-677-9		1312-1403		01	A	FULLER ES11109 DD M/T(Y5N)
		8-98053-677-9		1404-		01	AB	FULLER ES11109 DD M/T(Y5N)
		8-98167-036-0		1312-		01	A	ZF9S1110 DD M/T(Y5P)
4		FRAME; FLOOR,FRT						
		8-98073-693-1		1312-1403		01	A	
		8-98073-693-1		1404-		01	AB	
15		FRAME; UNDER						
		8-97584-387-9		1312-1403	R	01	A	(A)
		8-97584-387-9		1404-	R	01	AB	(A)
		8-97584-388-9		1312-1403	R	01	A	(B)
		8-97584-388-9		1404-	R	01	AB	(B)
		8-97584-411-9		1312-1403	L	01	A	(A)
		8-97584-411-9		1404-	L	01	AB	(A)
		8-97584-412-7		1312-1403	L	01	A	(B)
		8-97584-412-7		1404-	L	01	AB	(B)
18		FRAME; FLOOR,CENTER SIDE						
		8-97584-398-4		1312-1403	R	01	A	
		8-97584-398-4		1404-	R	01	AB	
		8-97584-421-4		1312-1403	L	01	A	
		8-97584-421-4		1404-	L	01	AB	
22		FRAME; FLOOR REAR						
		8-97584-431-5		1312-1403		01	A	
		8-97584-431-5		1404-		01	AB	
23		PANEL; FLOOR,SIDE						
		8-97584-372-7		1312-1403	L	01	A	
		8-97584-372-7		1404-	L	01	AB	
		8-98073-691-1		1312-1403	R	01	A	
		8-98073-691-1		1404-	R	01	AB	
24		PANEL; BED PAN						
		8-97584-378-6		1312-1403		01	A	
		8-97584-378-6		1404-		01	AB	
57		BRACKET; SPARE TIRE						
		8-98038-970-1		1312-1403		02	A	
		8-98038-970-1		1404-		02	AB	
81		BRACKET; HARNESS SUPPORT						
		8-98041-333-3		1312-1403		01	A	
		8-98041-333-3		1404-		01	AB	
144		BRACKET; MTG,RR						
		8-97584-432-6		1312-1403	L	01	A	
		8-97584-432-6		1404-	L	01	AB	
		8-97589-666-6		1312-1403	R	01	A	
		8-97589-666-6		1404-	R	01	AB	
170		EXTENSION; RR FLOOR						
		8-97589-207-4		1312-1403		01	A	
		8-97589-207-4		1404-		01	AB	
174		GROMMET; AIR PIPE						
		8-94122-971-0		1312-1403		01	A	OD=35 IDN
		8-94122-971-0		1404-		01	AB	OD=35 IDN
220		PATCH						
		8-97588-840-4		1312-1403		01	A	(A)
		8-97588-840-4		1404-		01	AB	(A)
		8-97589-603-3		1312-1403	R	01	A	(B)
		8-97589-603-3		1404-	R	01	AB	(B)
		8-97589-627-2		1312-1403	L	01	A	(C)
		8-97589-627-2		1404-	L	01	AB	(C)

https://truckmanualshub.com/


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
276		BRACKET; RAD GRILLE						
		8-97589-596-3		1312-1403		01	A	
		8-97589-596-3		1404-		01	AB	
311		BOLT; BRKT						
		0-28650-616-0		1312-1403		04	A	M6X16 FLANGE
		0-28650-616-0		1404-		04	AB	M6X16 FLANGE
373		REINFORCEMENT; SEAT BELT						
		8-97584-345-9		1312-1403		01	A	(B)
		8-97584-345-9		1404-		01	AB	(B)
		8-97584-367-2		1312-1403	R	01	A	(A)
		8-97584-367-2		1404-	R	01	AB	(A)
		8-97584-375-2		1312-1403	L	01	A	(A)
		8-97584-375-2		1404-	L	01	AB	(A)
375		CLOSING; PILLAR						
		8-98044-897-3		1312-1403	R	01	A	
		8-98044-897-3		1404-	R	01	AB	
		8-98044-898-3		1312-1403	L	01	A	
		8-98044-898-3		1404-	L	01	AB	
376		CLOSING; PILLAR,LWR						
		8-97589-554-4		1312-1403	R	01	A	
		8-97589-554-4		1404-1404	R	01	AB	
		8-98199-228-0		1404-	R	01	AB	
		8-97589-556-5		1312-1403	L	01	A	
		8-97589-556-5		1404-	L	01	AB	
380		BRACKET; HEAD LAMP						
		8-97584-460-2		1312-1403	L	01	A	(A)
		8-97584-460-2		1404-	L	01	AB	(A)
		8-97589-506-2		1312-1403	R	01	A	(A)
		8-97589-506-2		1404-	R	01	AB	(A)
		8-98032-615-1		1312-1403	L	01	A	(B)
		8-98032-615-1		1404-	L	01	AB	(B)
		8-98032-614-1		1312-1403	R	01	A	(B)
		8-98032-614-1		1404-	R	01	AB	(B)
398		BRACKET; PIPE SUPPORT						
		8-97589-681-3		1312-1403		01	A	
		8-97589-681-3		1404-		01	AB	
448		CLOSING; ROCKER						
		8-97589-551-2		1312-1403	R	01	A	
		8-97589-551-2		1404-	R	01	AB	
		8-97589-552-2		1312-1403	L	01	A	
		8-97589-552-2		1404-	L	01	AB	
462		BRACKET; EXTINGUISHER						
		8-97585-688-1		1312-1403		01	A	
		8-97585-688-1		1404-		01	AB	
536		PLUG; CABLE,PTO						
		8-97612-074-1		1312-1403		01	A	
		8-97612-074-1		1404-		01	AB	
537		SUPPORT ASM; MTG RR						
		8-97584-391-4		1312-1403	R	01	A	
		8-97584-391-4		1404-	R	01	AB	
		8-97584-417-4		1312-1403	L	01	A	
		8-97584-417-4		1404-	L	01	AB	
538		REINFORCEMENT ASM; AIR INT DUCT						
		8-97610-207-2		1312-1403		01	A	
		8-97610-207-2		1404-		01	AB	
539		PATCH ASM; SAFTY HOOK						
		8-97584-440-2		1312-1403		01	A	(A)

https://truckmanualshub.com/

6-70 FLOOR PANEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
539		8-97584-440-2		1404-		01	AB	
								(A)
		8-98131-661-0		1312-1403		01	A	
								(B) IDN
		8-98131-661-0		1404-		01	AB	
								(B) IDN
540		BRACKET ASM; CAB LOCK LEVER						
		8-97584-438-1		1312-1403		01	A	
		8-97584-438-1		1404-		01	AB	
541		REINFORCEMENT; MTG,FRT						
		8-98067-903-0		1312-1403		02	A	
		8-98067-903-0		1404-		02	AB	
542		BOLSTER; BED PAN						
		8-97589-685-1		1312-1403		02	A	
		8-97589-685-1		1404-		02	AB	
544		BRACKET; DUMP CONT						
		8-97584-363-1		1312-1403	R	01	A	
		8-97584-363-1		1404-	R	01	AB	
		8-98049-529-0		1312-1403	L	01	A	
		8-98049-529-0		1404-	L	01	AB	
545		BRACKET; SEAT FRT						
		8-97584-361-1		1312-1403	R	01	A	
		8-97584-361-1		1404-	R	01	AB	
		8-97584-373-1		1312-1403	L	01	A	
		8-97584-373-1		1404-	L	01	AB	
546		REINFORCEMENT; FLOOR SIDE						
		8-97584-427-0		1312-1403		02	A	
		8-97584-427-0		1404-		02	AB	
547		BRACKET; JACK HANDLE						
		8-97588-843-1		1312-1403		01	A	
		8-97588-843-1		1404-		01	AB	
548		BRACKET; MUD GUARD						
		8-97588-961-1		1312-1403	R	01	A	
		8-97588-961-1		1404-	R	01	AB	
		8-97588-962-1		1312-1403	L	01	A	
		8-97588-962-1		1404-	L	01	AB	
549		BRACKET; SEAT RR						
		8-97588-958-4		1312-1403	L	01	A	
		8-97588-958-4		1404-	L	01	AB	
		8-97589-557-4		1312-1403	R	01	A	
		8-97589-557-4		1404-	R	01	AB	
550		CLOSING ASM; MTG,FRT						
		8-97584-615-4		1312-1403		01	A	
		8-97584-615-4		1404-		01	AB	
554		REINFORCEMENT; FLOOR CENTER						
		8-97584-351-2		1312-1403		01	A	
		8-97584-351-2		1404-		01	AB	
563		REINFORCEMENT; MTG FRT,RR						
		8-97589-579-2		1312-1403		04	A	
		8-97589-579-2		1404-		04	AB	
6-20		Move to 6-20						
6-78		Move to 6-78						

https://truckmanualshub.com/

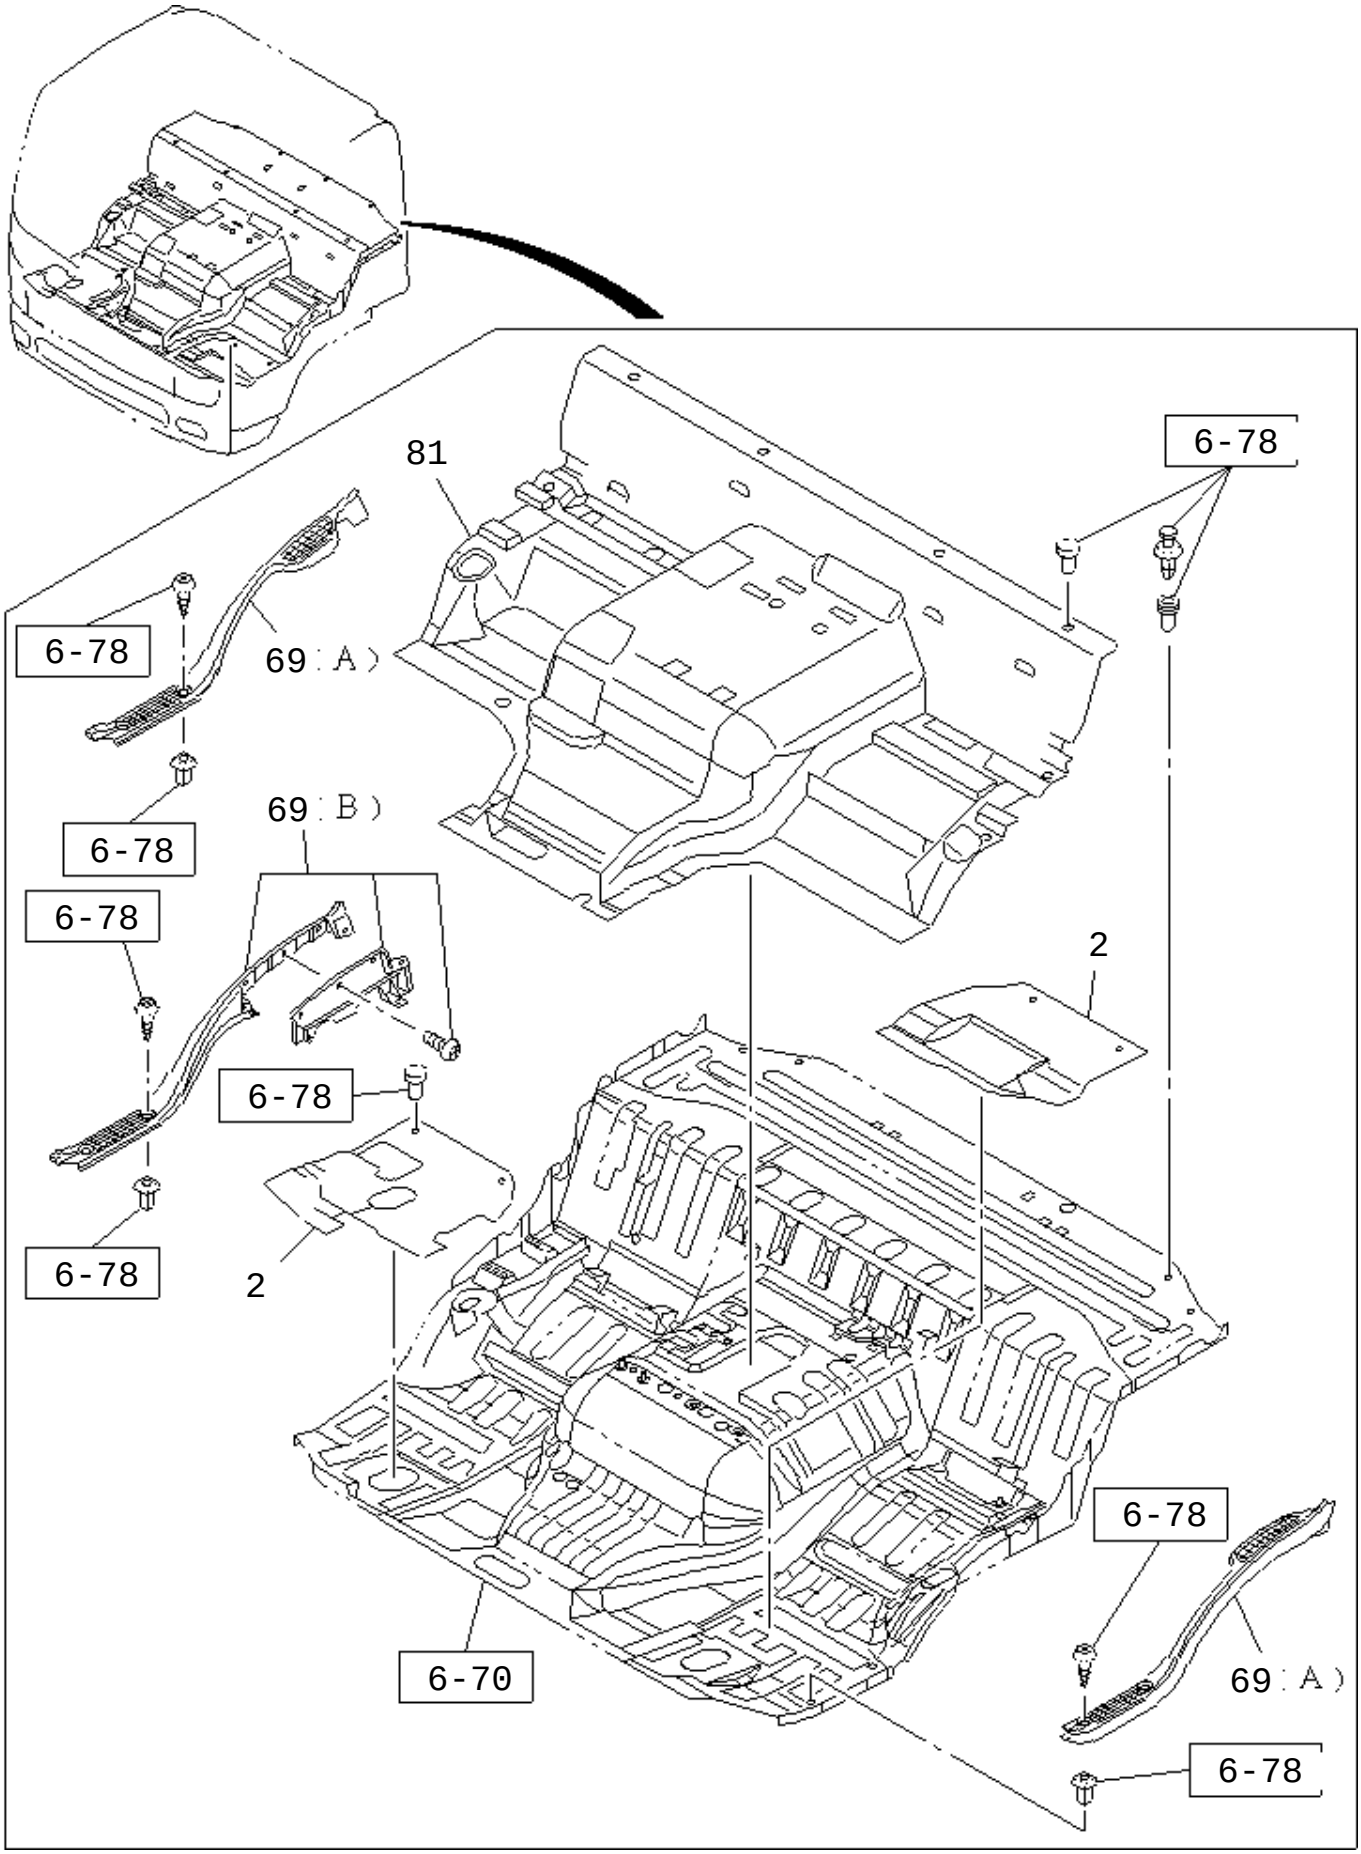



https://truckmanualshub.com/

6-75 MAT AND CARPET

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
2		MAT; FLOOR						
		8-97407-746-5		1312-1403	R	01	A	GRAY
		8-97407-746-5		1404-	R	01	AB	GRAY
		8-97407-747-2		1312-1403	L	01	A	GRAY
		8-97407-747-2		1404-	L	01	AB	GRAY
69		COVER; TRIM,FLOOR MAT,DOOR SIDE						
		8-97407-413-1		1312-1403	L	01	A	(A) GRAY
		8-97407-413-1		1404-	L	01	AB	(A) GRAY
		8-97407-414-2		1312-1401	R	01	A	DUMP CONTROL LEVER<RC4> (B) GRAY
		8-97407-414-2		1402-	R	01	A	DUMP CONTROL LEVER<RC4> (B) GRAY
		8-97407-414-2		1402-	R	01	A	MIXER CHASSIS<6NR> EXC. DUMP CONTROL LEVER<RC4> (B) GRAY
		8-97407-412-1		1312-1401	R	01	A	EXC. DUMP CONTROL LEVER<RC4> (A) GRAY
		8-97407-412-1		1402-1403	R	01	A	EXC. DUMP CONTROL LEVER<RC4>,MIXER (A) GRAY
		8-97407-412-1		1404-	R	01	A	EXC. DUMP CONTROL LEVER<RC4>,MIXER (A) GRAY
		8-97407-412-1		1404-	R	01	B	(A) GRAY
81		MAT; FLOOR,CENTER						
		8-97427-856-0		1404-		01	B	GRAY
		8-97407-406-3		1312-		01	A	GRAY IDN
6-70		Move to 6-70						
6-78		Move to 6-78						

https://truckmanualshub.com/

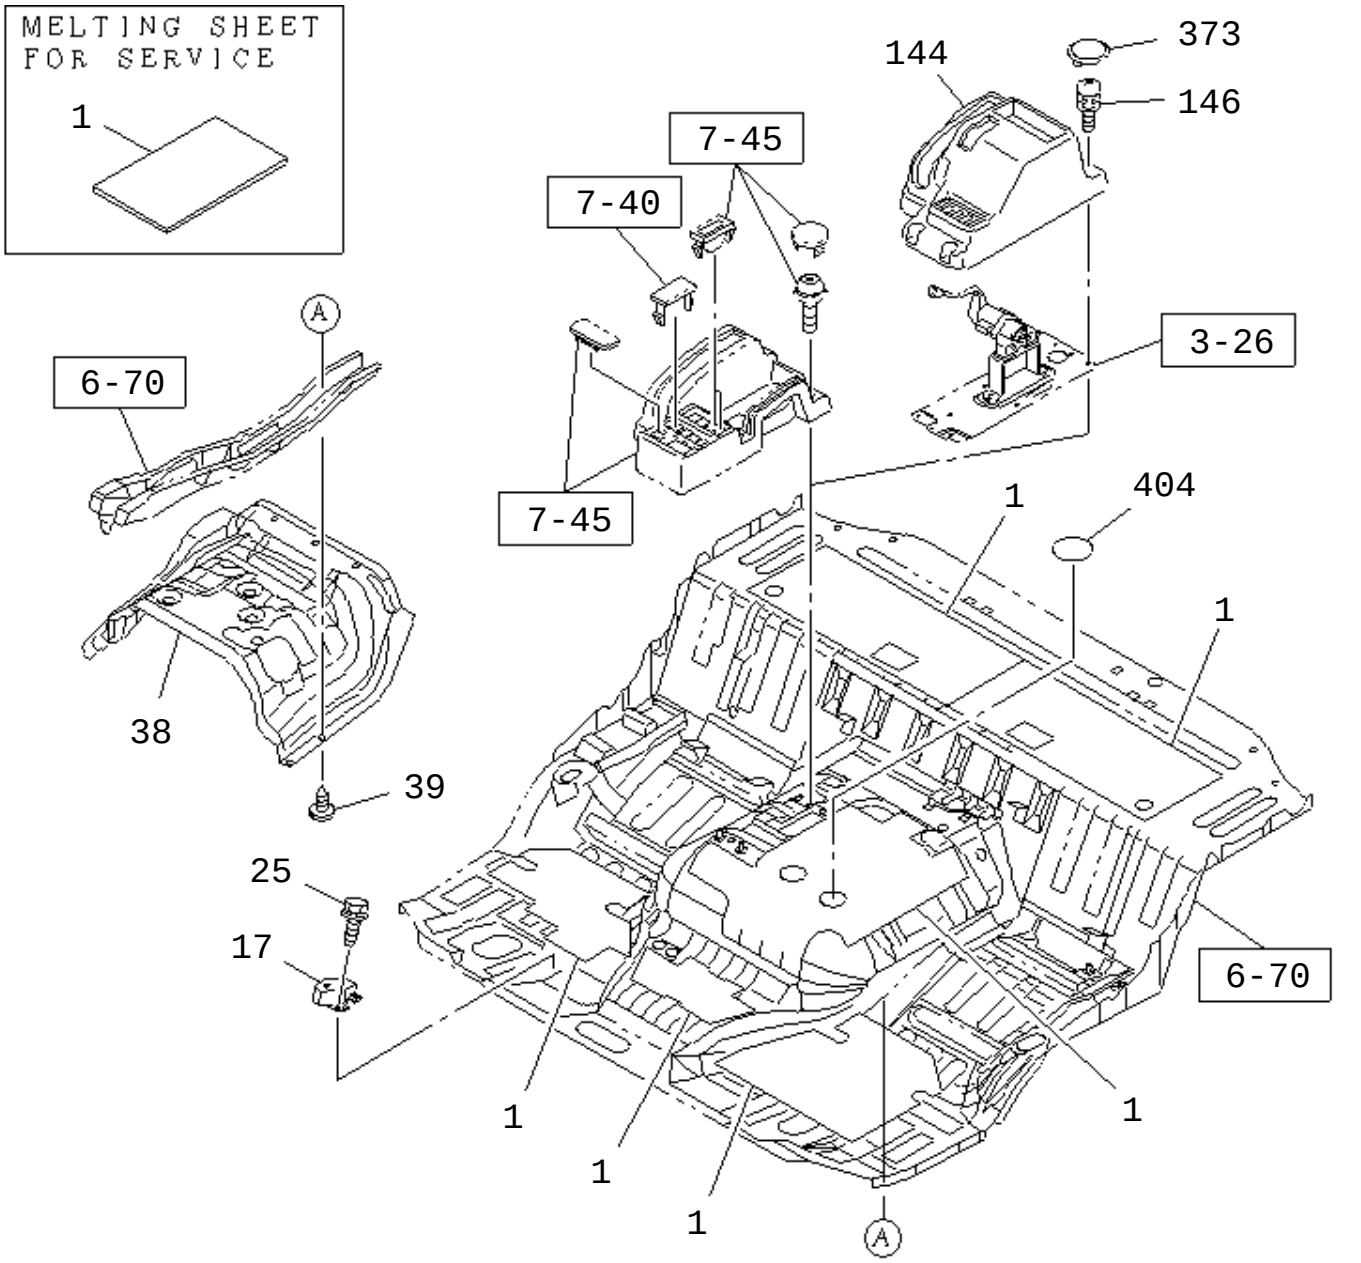


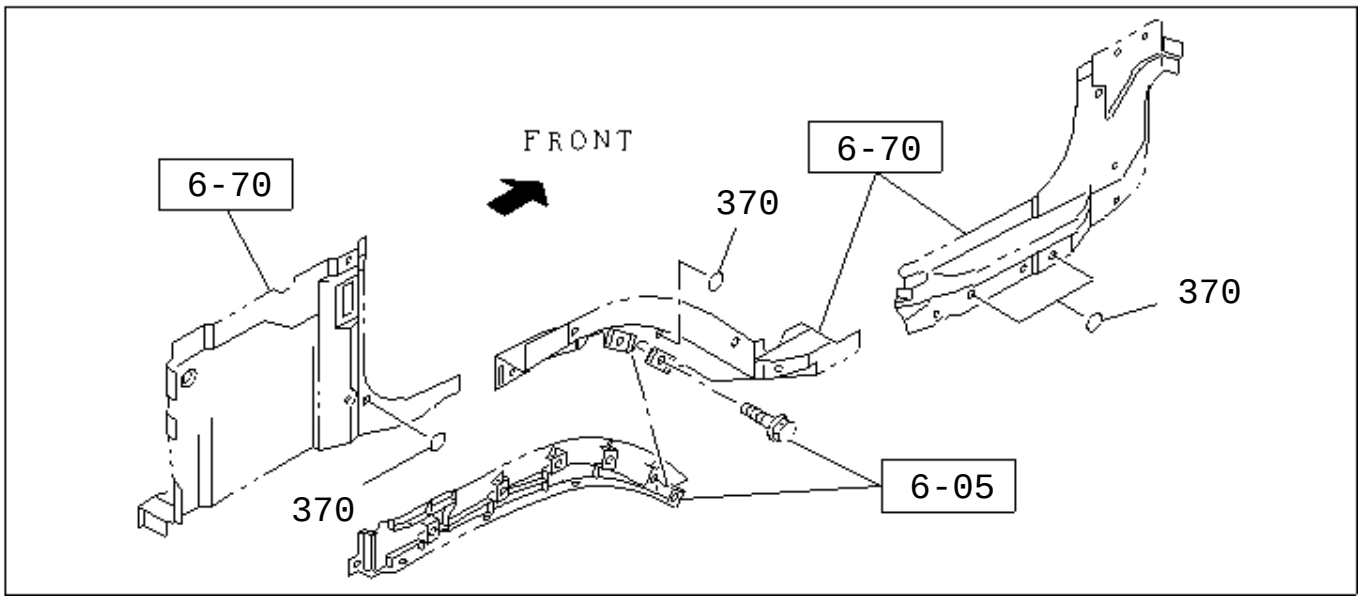

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		SHEET; MELTING,FLOOR					
		8-94262-093-0		1312-1403	AR	A	NON ASBESTOS 1000X600 T=1.5; PARTS ONLY
		8-94262-093-0		1404-	AR	AB	NON ASBESTOS 1000X600 T=1.5; PARTS ONLY
17		REST; FOOT,DRIVER					
		8-98076-322-1		1312-1403	01	A	
		8-98076-322-1		1404-	01	AB	
25		SCREW; FOOT REST					
		8-94279-201-0		1312-1403	03	A	M6X19.5 W/LK&PL WASHER
		8-94279-201-0		1404-	03	AB	M6X19.5 W/LK&PL WASHER
38		INSULATOR; ENG COVER					
		8-98248-305-0		1312-1403	01	A	
		8-98248-305-0		1404-	01	AB	
39		CLIP; INSULATOR,COVER					
		8-97808-623-0		1312-1403	17	A	ID=6.2 L=11.4
		8-97808-623-0		1404-	17	AB	ID=6.2 L=11.4
144		COVER; HAND BRK VLV					
		8-97427-857-1		1404-	01	B	
146		BOLT; COVER BRKT					
		0-38050-616-0		1404-	04	B	M6X16 IDN
370		SEAL; LOCATION HOLE					
		8-98230-420-0		1312-1403	08	A	OD=30 T=0.8
		8-98230-420-0		1404-	08	AB	OD=30 T=0.8
373		COVER; HOLE					
		8-97407-951-0		1404-	02	B	GRAY
404		SEAL; FLOOR,HOLE					
		1-76798-019-0		1312-1403	02	A	OD=25 BLACK
		1-76798-019-0		1404-	02	AB	OD=25 BLACK
		1-76798-019-0		1312-1403	12	A	OD=25 BLACK
		1-76798-019-0		1404-	12	AB	OD=25 BLACK
3-26		Move to 3-26					
6-05		Move to 6-05					
6-70		Move to 6-70					
7-40		Move to 7-40					
7-45		Move to 7-45					

https://truckmanualshub.com/

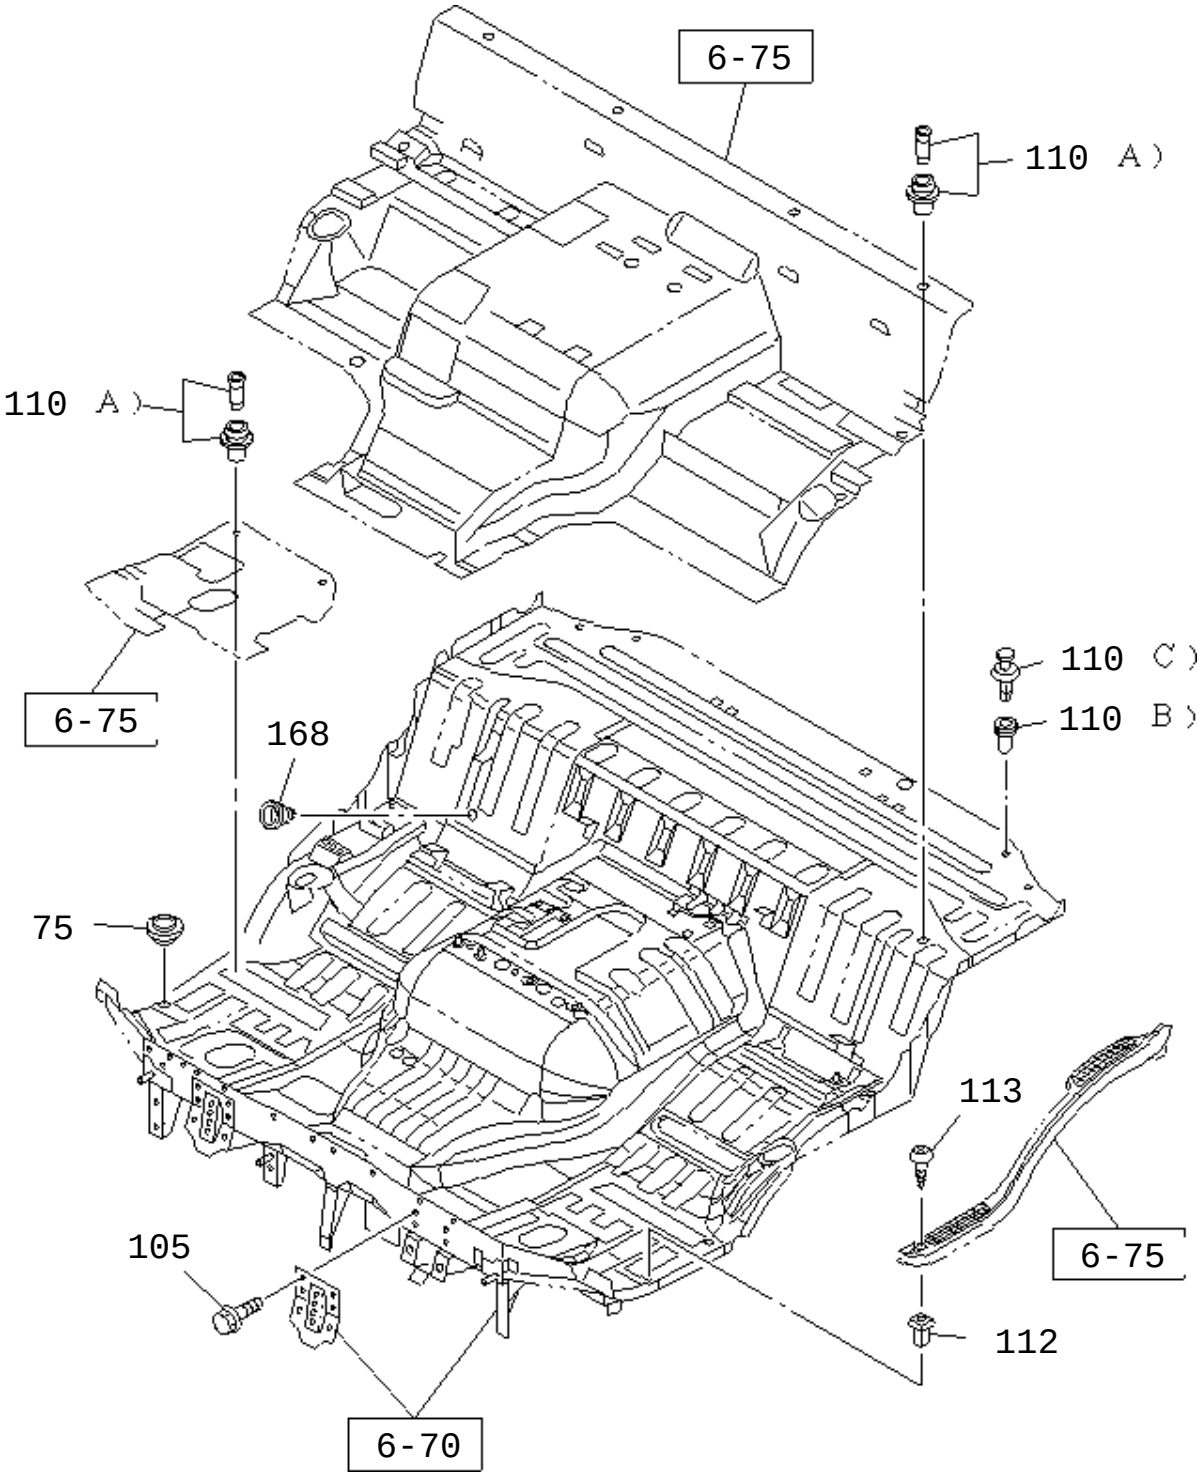



https://truckmanualshub.com/

6-78 FLOOR HOLE PLUG

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
75		PLUG; RUBBER,FLOOR					
		1-09983-101-0		1312-1403	04	A	OD=23.5
		1-09983-101-0		1404-	04	AB	OD=23.5
105		BOLT; FLOOR					
		0-28661-030-0		1312-1403	16	A	M10X30 FLANGE
		0-28661-030-0		1404-	16	AB	M10X30 FLANGE
110		FASTENER; FLOOR MAT					
		8-94279-089-0		1312-1403	08	A	(A) BLACK IDN
		8-94279-089-0		1404-	08	AB	(A) BLACK IDN
		8-97319-495-0		1312-1403	04	A	(B)
		8-97319-495-0		1404-	04	AB	(B)
		8-97405-247-0		1312-1403	04	A	(C) GRAY
		8-97405-247-0		1404-	04	AB	(C) GRAY
112		GROMMET; SCREW,TRIM COVER					
		8-94279-043-0		1312-1403	08	A	D=7.8X7.8 L=18 NATURAL IDN
		8-94279-043-0		1404-	08	AB	D=7.8X7.8 L=18 NATURAL IDN
113		SCREW; TRIM COVER					
		0-72180-516-0		1312-1403	08	A	M5X16 TAPPING
		0-72180-516-0		1404-	08	AB	M5X16 TAPPING
168		COVER; HOLE,ANNTENA CABLE					
		1-79998-891-1		1312-1403	01	A	
		1-79998-891-1		1404-	01	AB	
6-70		Move to 6-70					
6-75		Move to 6-75					

https://truckmanualshub.com/

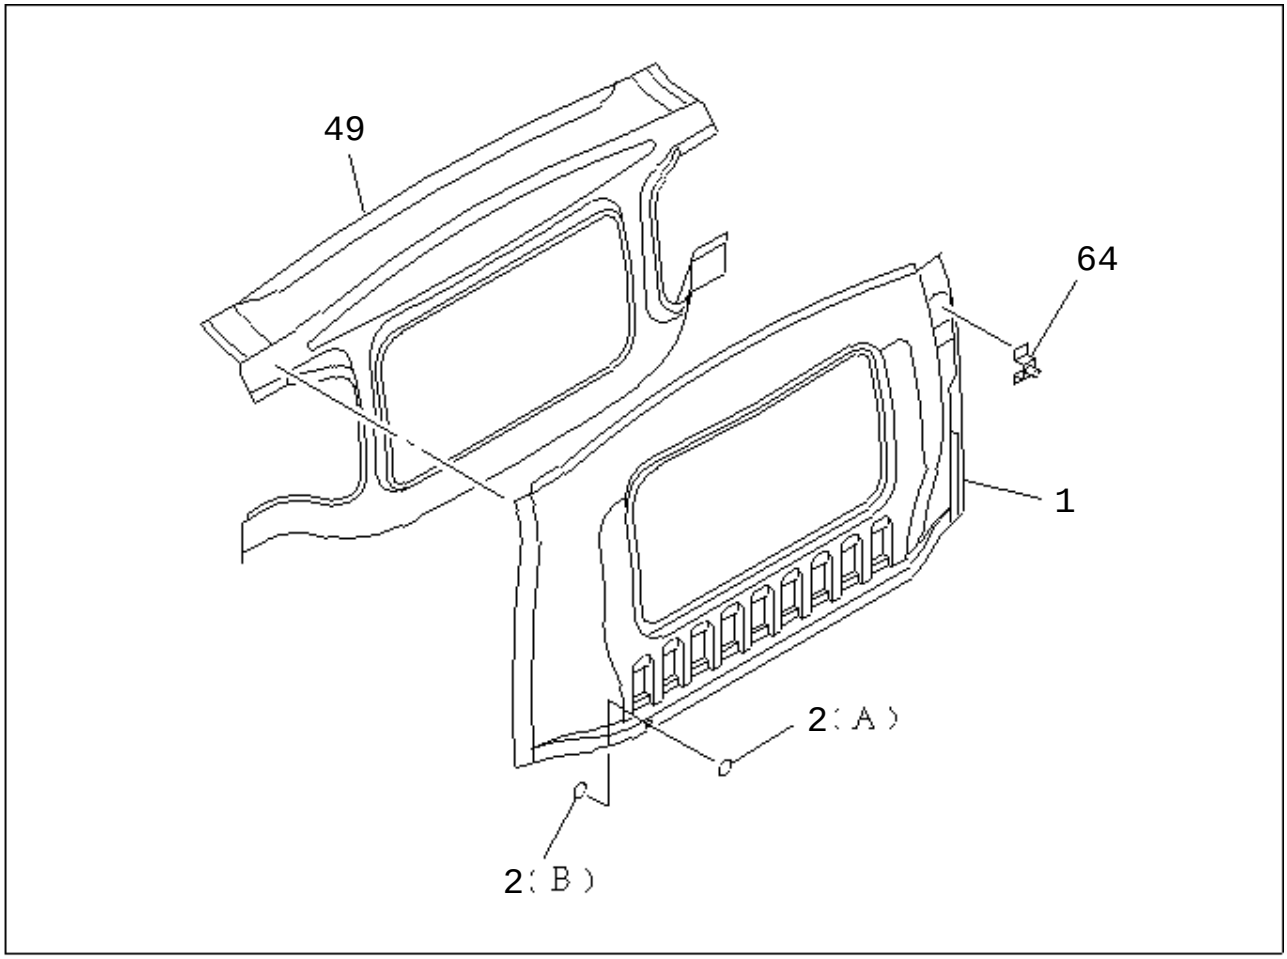

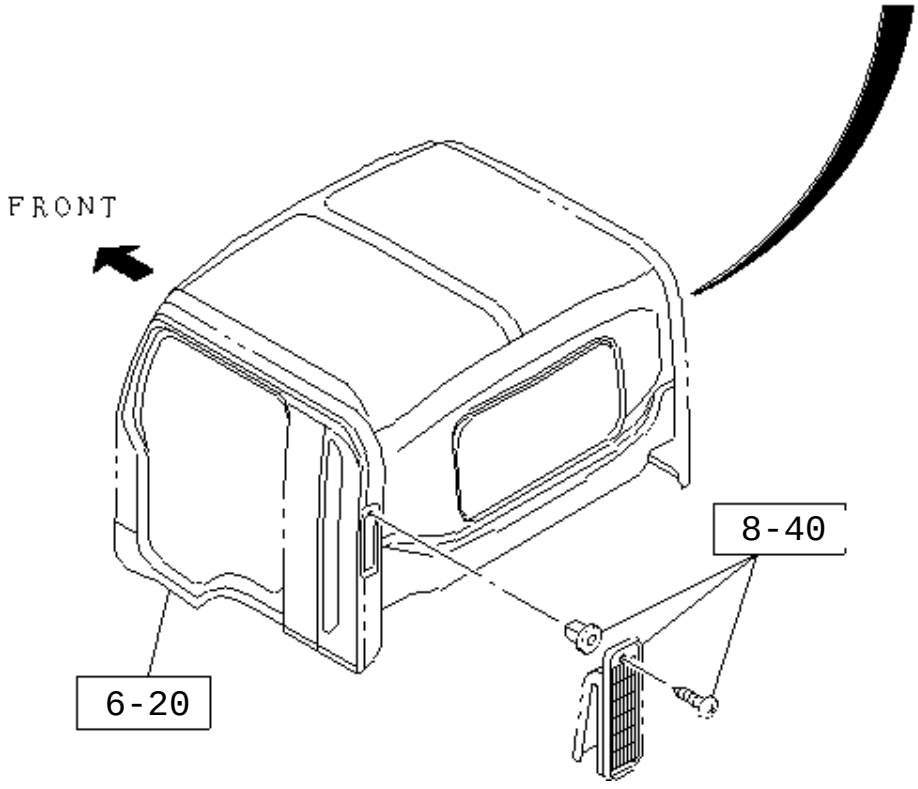


https://truckmanualshub.com/

6-80 BACK PANEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		PANEL; BACK OUTER					
		8-97584-602-3		1312-1403	01	A	
		8-97584-602-3		1404-	01	AB	
2		GROMMET; LOCATION HOLE,BACK PANEL					
		1-76798-019-0		1312-1403	02	A	(A) OD=25 BLACK
		1-76798-019-0		1404-	02	AB	(A) OD=25 BLACK
		5-76777-035-0		1312-1403	02	A	(B) OD=36 T=0.05 BLACK IDN
		5-76777-035-0		1404-	02	AB	(B) OD=36 T=0.05 BLACK IDN
49		PANEL; BACK INNER					
		8-97584-610-3		1312-1403	01	A	
		8-97584-610-3		1404-	01	AB	
64		BRACKET; AIR INTAKE DUCT					
		8-97584-611-1		1312-1403	01	A	IDN
		8-97584-611-1		1404-	01	AB	IDN
6-20		Move to 6-20					
8-40		Move to 8-40					

https://truckmanualshub.com/

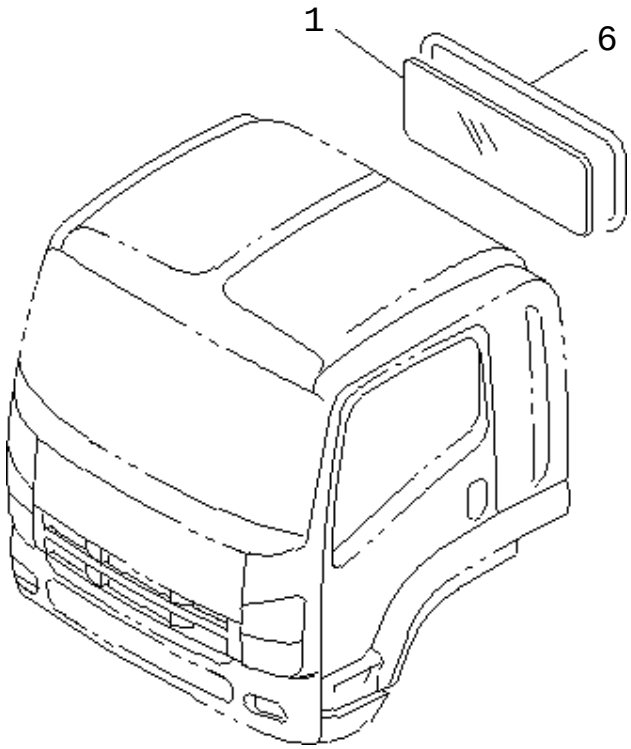


https://truckmanualshub.com/

6-82 BACK GLASS AND WEATHERSTRIP

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		GLASS; BACKLIGHT					
		8-98041-665-0		1312-1403	01	A	IDN
		8-98041-665-0		1404-	01	AB	IDN
6		WEATHERSTRIP; BACKLIGHT					
		8-98096-217-1		1312-1403	01	A	IDN
		8-98096-217-1		1404-	01	AB	IDN

https://truckmanualshub.com/

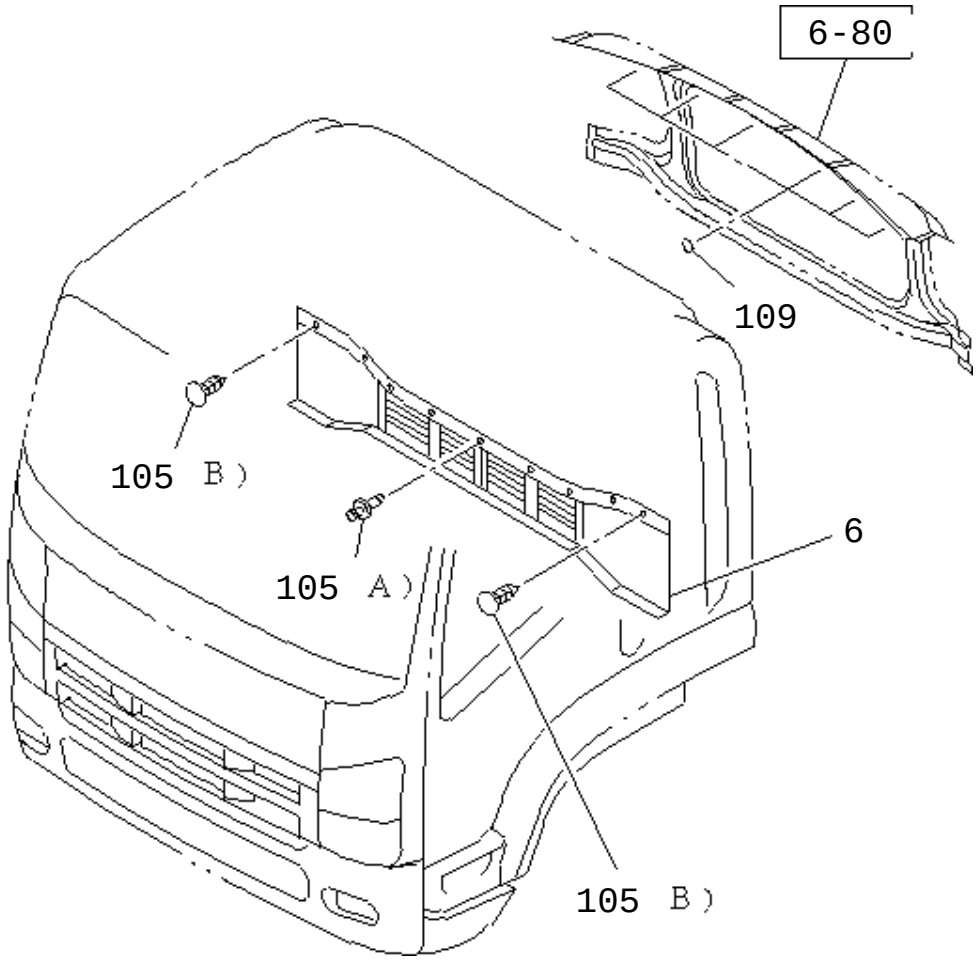


https://truckmanualshub.com/

6-84 BACK TRIM

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
6		MAT; SILENCER,CAB BACK					
		8-97925-565-0		1312-1403	01	A	IDN
		8-97925-565-0		1404-	01	AB	IDN
105		CLIP; BACK TRIM					
		8-97407-467-0		1312-1403	02	A	(B) GRAY
		8-97407-467-0		1404-	02	AB	(B) GRAY
		8-97408-022-0		1312-1403	07	A	(A) GRAY
		8-97408-022-0		1404-	07	AB	(A) GRAY
109		SEAL; HOLE					
		8-98059-421-0		1312-1403	06	A	OD=20 T=0.05 WHITE IDN
		8-98059-421-0		1404-	06	AB	OD=20 T=0.05 WHITE IDN
6-80		Move to 6-80					

https://truckmanualshub.com/

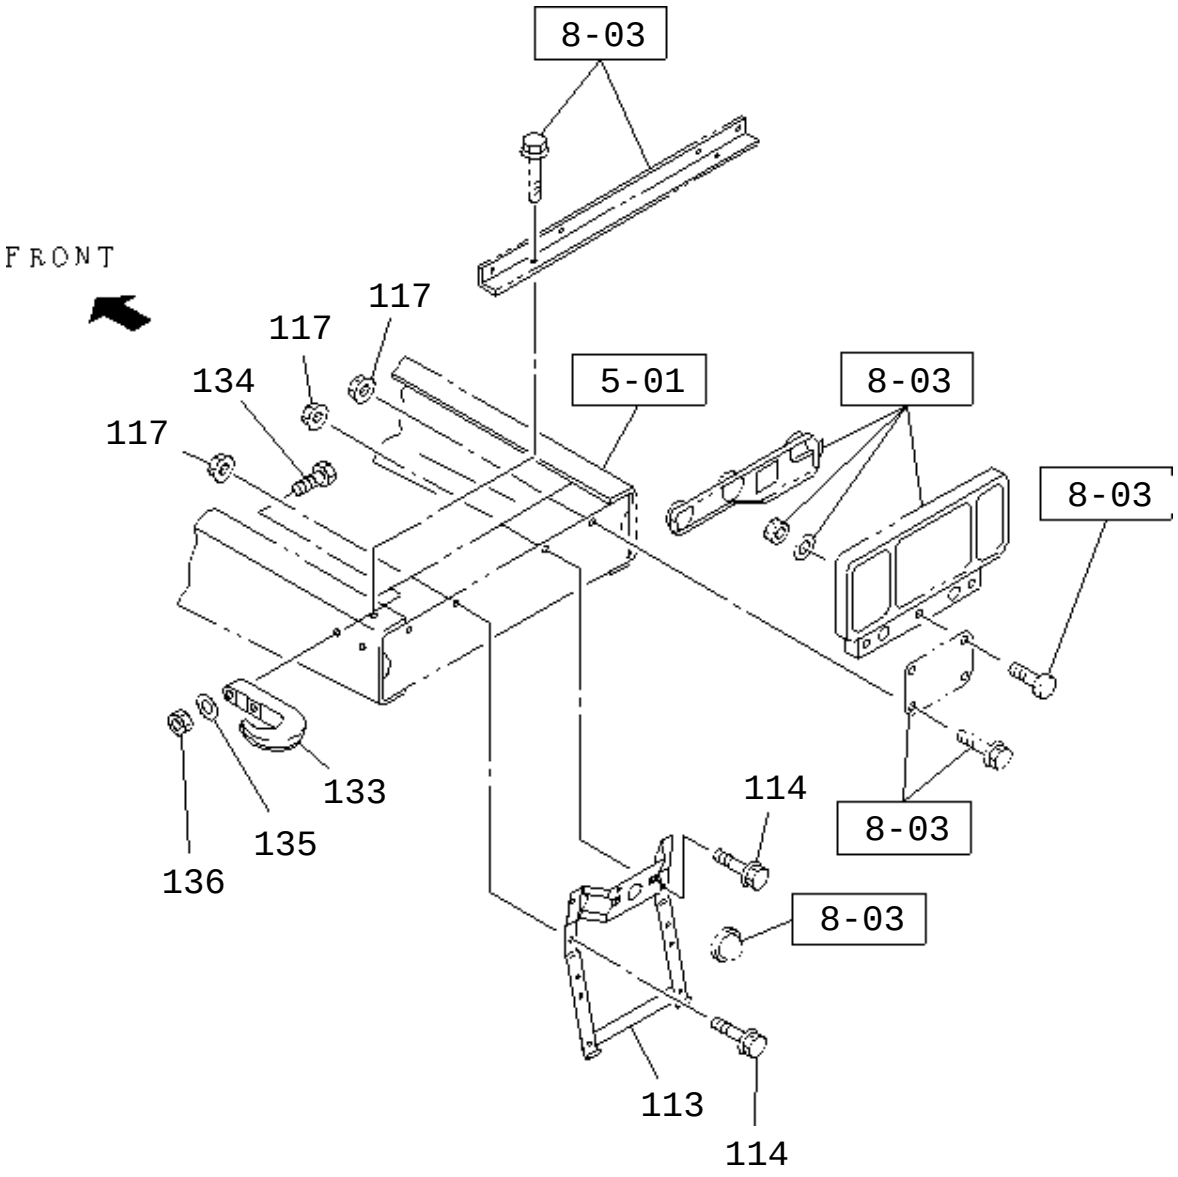



https://truckmanualshub.com/

6-90 REAR BUMPER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
113		BRACKET; LICENSE PLATE						
		1-53485-074-0		1312-1403		01	A	
		1-53485-074-0		1404-		01	AB	
114		BOLT; BRKT,LICENSE PLATE						
		0-28650-825-0		1312-1403		02	A	M8X25 FLANGE IDN
		0-28650-825-0		1404-		02	AB	M8X25 FLANGE IDN
117		NUT; BRKT						
		0-91180-210-0		1404-		02	B	M10 FLANGE
		0-91180-108-0		1312-1403		02	A	M8 FLANGE
		0-91180-108-0		1312-1403		02	A	M8 FLANGE
		0-91180-108-0		1404-		02	AB	M8 FLANGE
		0-91180-108-0		1404-		02	A	M8 FLANGE
133		HOOK						
		1-57181-027-1		1312-1403	L	01	A	TOW HOOK<V76>
		1-57181-027-1		1404-	L	01	AB	TOW HOOK<V76>
134		BOLT; HOOK						
		0-20851-650-0		1312-1403		01	A	TOW HOOK<V76> M16X50
		0-20851-650-0		1404-		01	AB	TOW HOOK<V76> M16X50
		0-20851-660-0		1312-1403		01	A	TOW HOOK<V76> M16X60
		0-20851-660-0		1404-		01	AB	TOW HOOK<V76> M16X60
135		WASHER; LK,HOOK						
		0-91510-816-0		1312-1403		02	A	TOW HOOK<V76> ID=16.2
		0-91510-816-0		1404-		02	AB	TOW HOOK<V76> ID=16.2
136		NUT; HOOK						
		0-91110-516-0		1312-1403		02	A	TOW HOOK<V76> M16
		0-91110-516-0		1404-		02	AB	TOW HOOK<V76> M16
5-01		Move to 5-01						
8-03		Move to 8-03						

https://truckmanualshub.com/

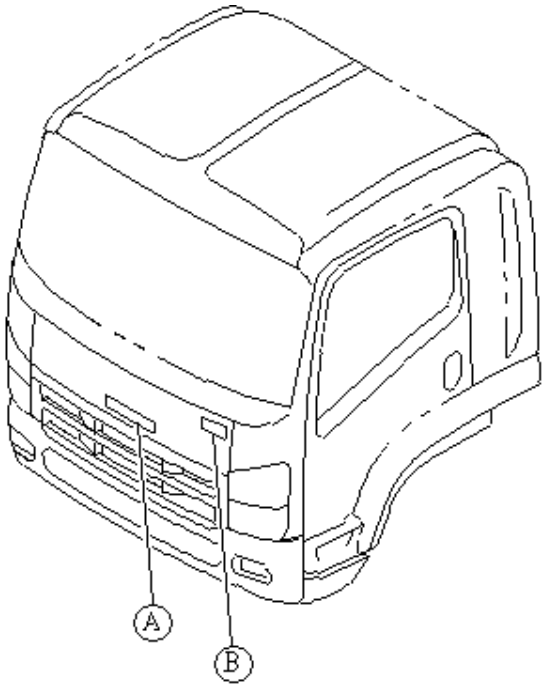

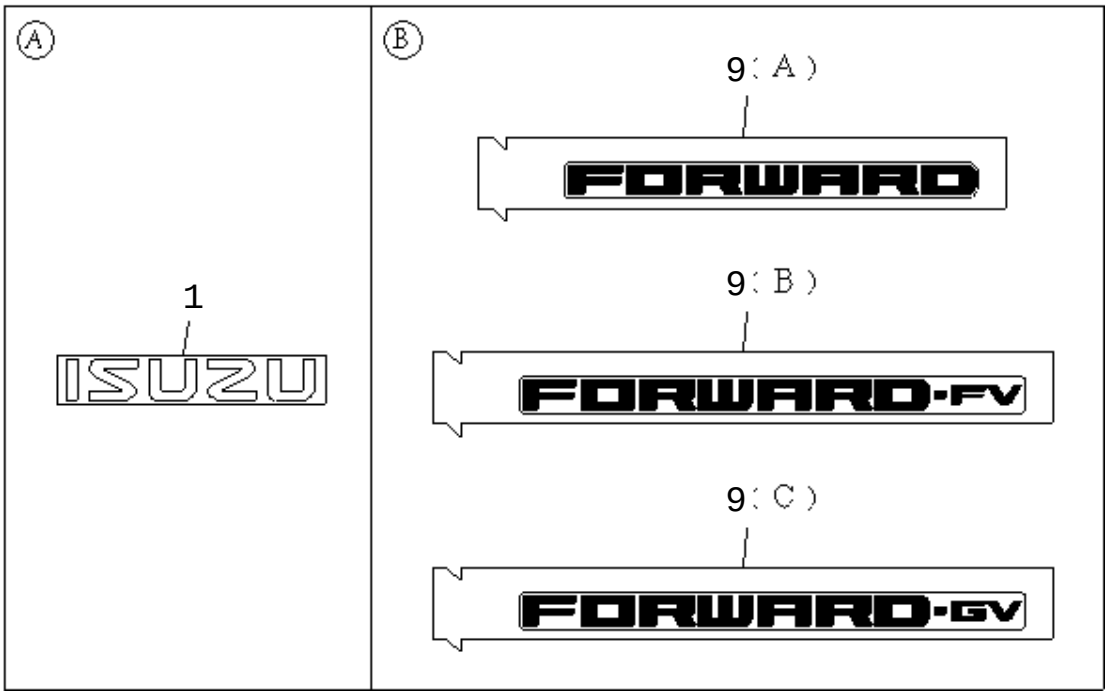


https://truckmanualshub.com/

7-01 EMBLEM AND NAME PLATE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		MARK; ISUZU					
		8-98041-913-0		1312-1403	01	A	
		8-98041-913-0		1404-	01	AB	
9		DECAL					
		8-98137-316-0		1404-	01	B	HEAVY DUTY PACKAGE TRUCK VAR3<Y48> DECAL VEHICLE NAME/PET NAME<8NG> (C)
		8-98041-579-0		1312-1403	01	A	DECAL PET NAME<8NH> (A)
		8-98041-579-0		1404-	01	AB	DECAL PET NAME<8NH> (A)
		8-98137-315-0		1312-	01	A	HEAVY DUTY PACKAGE TRUCK VAR3<Y48> DECAL VEHICLE NAME/PET NAME<8NG> (B)

https://truckmanualshub.com/

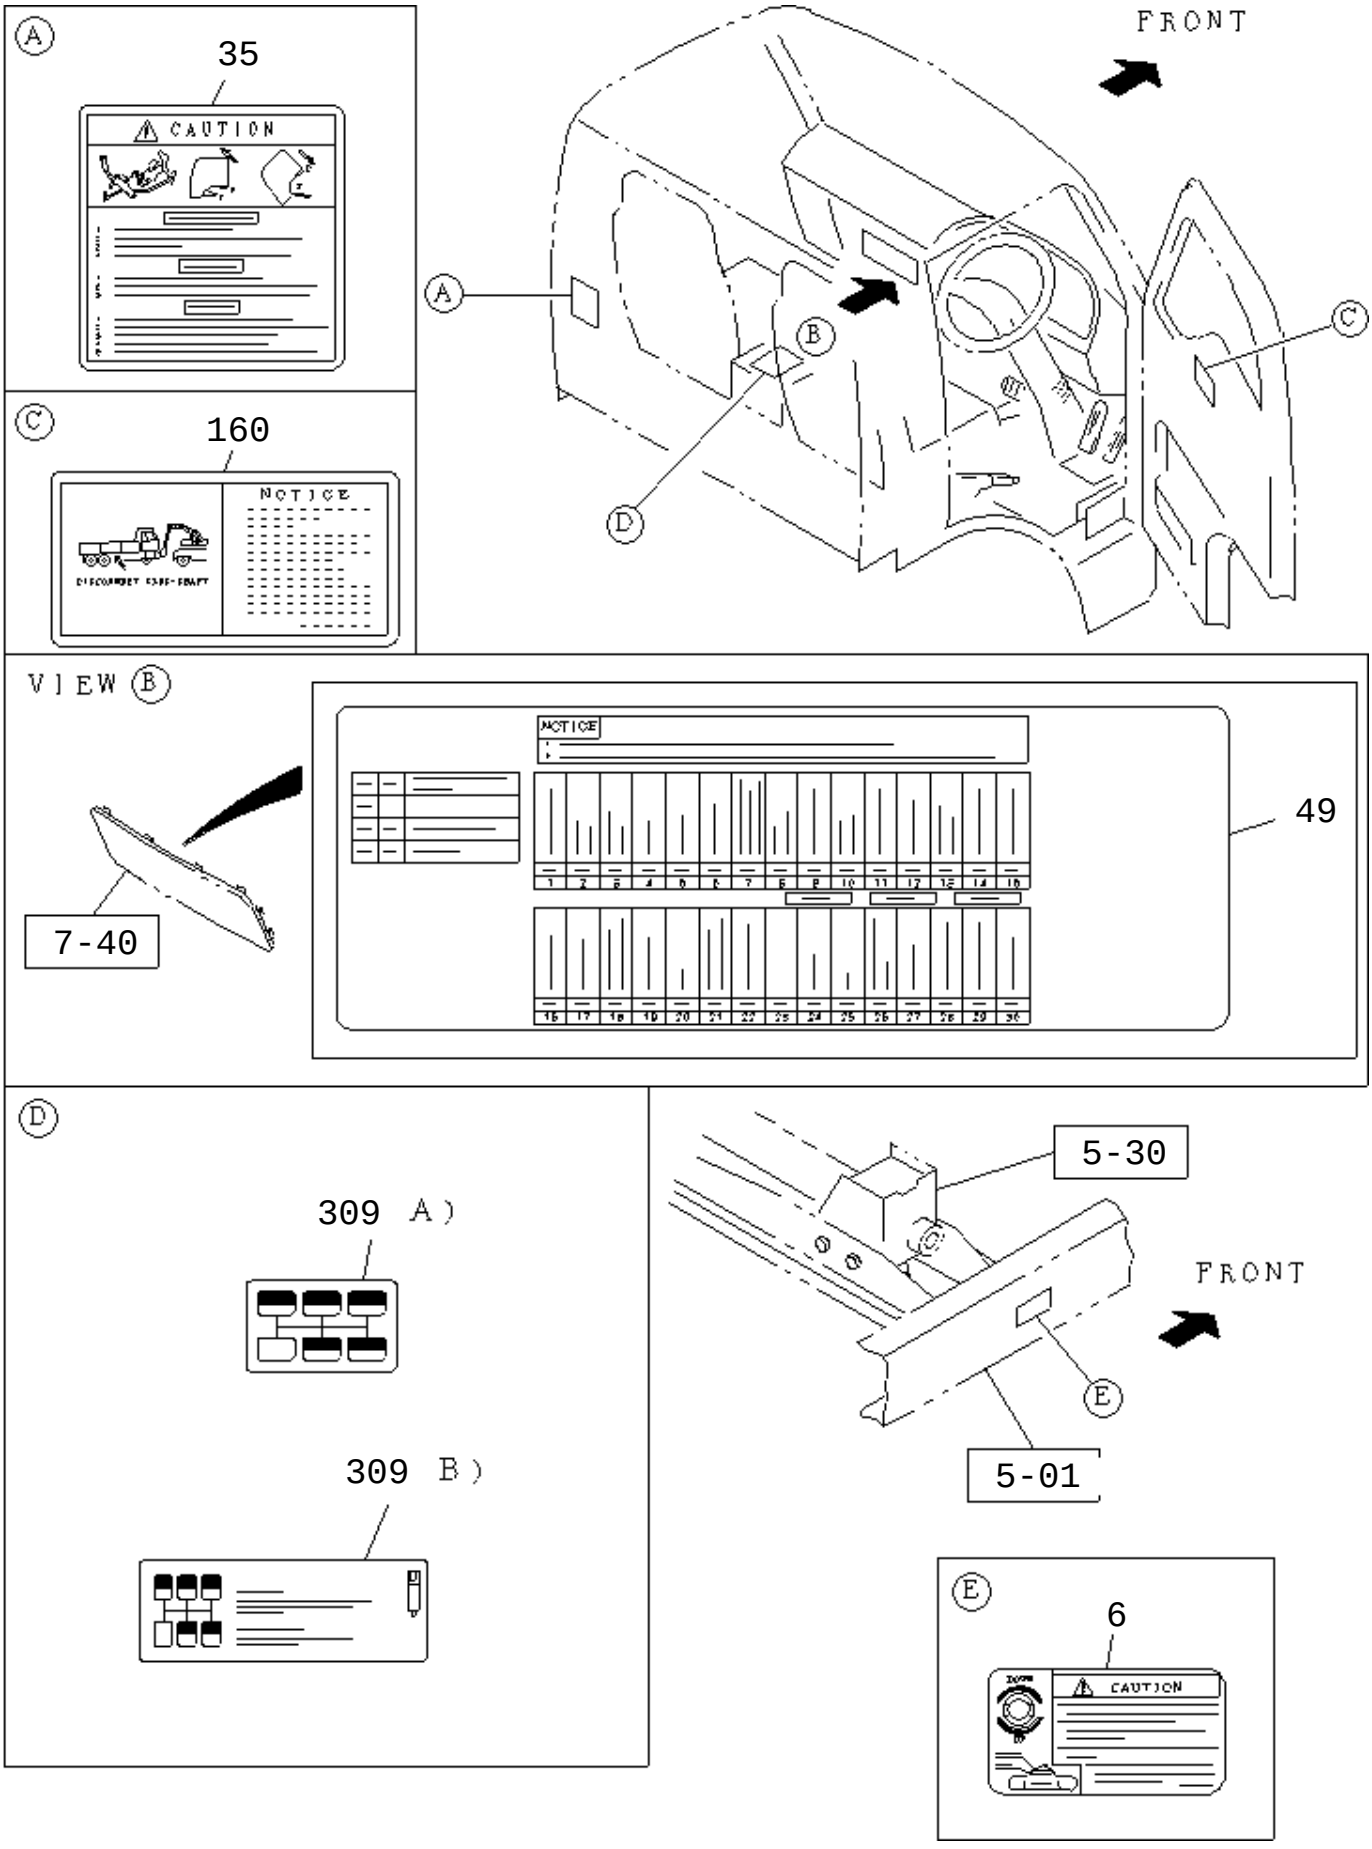


https://truckmanualshub.com/

7-10 CAUTION PLATE AND LABEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
6		PLATE; CAUTION,SPARE TIRE					
		8-98082-437-0		1312-1403	01	A	SPARE WHEEL CARRIER FRAME REAR(P10) IDN
		8-98082-437-0		1404-	01	A	SPARE WHEEL CARRIER FRAME REAR(P10) IDN
		8-98082-437-0		1404-	01	B	SPARE TIRE CARRIER LIFTING TYPE VAR1(SY8) IDN
35		PLATE; CAUTION,CAB					
		8-98065-363-0		1312-1403	01	A	IDN
		8-98065-363-0		1404-	01	AB	IDN
49		PLATE; CAUTION,FUSE BOX					
		8-98122-353-0		1312-1403	01	A	IDN
		8-98122-353-0		1404-	01	AB	IDN
160		PLATE; CAUTION,TOWING					
		1-85888-737-1		1312-1403	01	A	IDN
		1-85888-737-1		1404-	01	AB	IDN
309		LABEL; M/T SHIFT					
		1-85881-598-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) (A)
		1-85881-598-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		1-85881-598-0		1404-	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A)
		1-85881-598-0		1404-	01	B	(A)
		8-98098-606-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) (B)
		8-98098-606-0		1312-1401	01	A	FULLER ES11109 DD M/T(Y5N) (B)
		8-98098-606-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) (B)
		8-98098-606-0		1402-1403	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98098-606-0		1404-1404	01	A	FULLER ES11109 DD M/T(Y5N) (B)
		8-98098-606-0		1404-1404	01	A	FULLER ES11109 DD M/T(Y5N) EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98098-606-0		1404-1404	01	B	(B)
		8-98098-606-0		1404-1404	01	B	(B)
5-01		Move to 5-01					
5-30		Move to 5-30					
7-40		Move to 7-40					


https://truckmanualshub.com/


RH

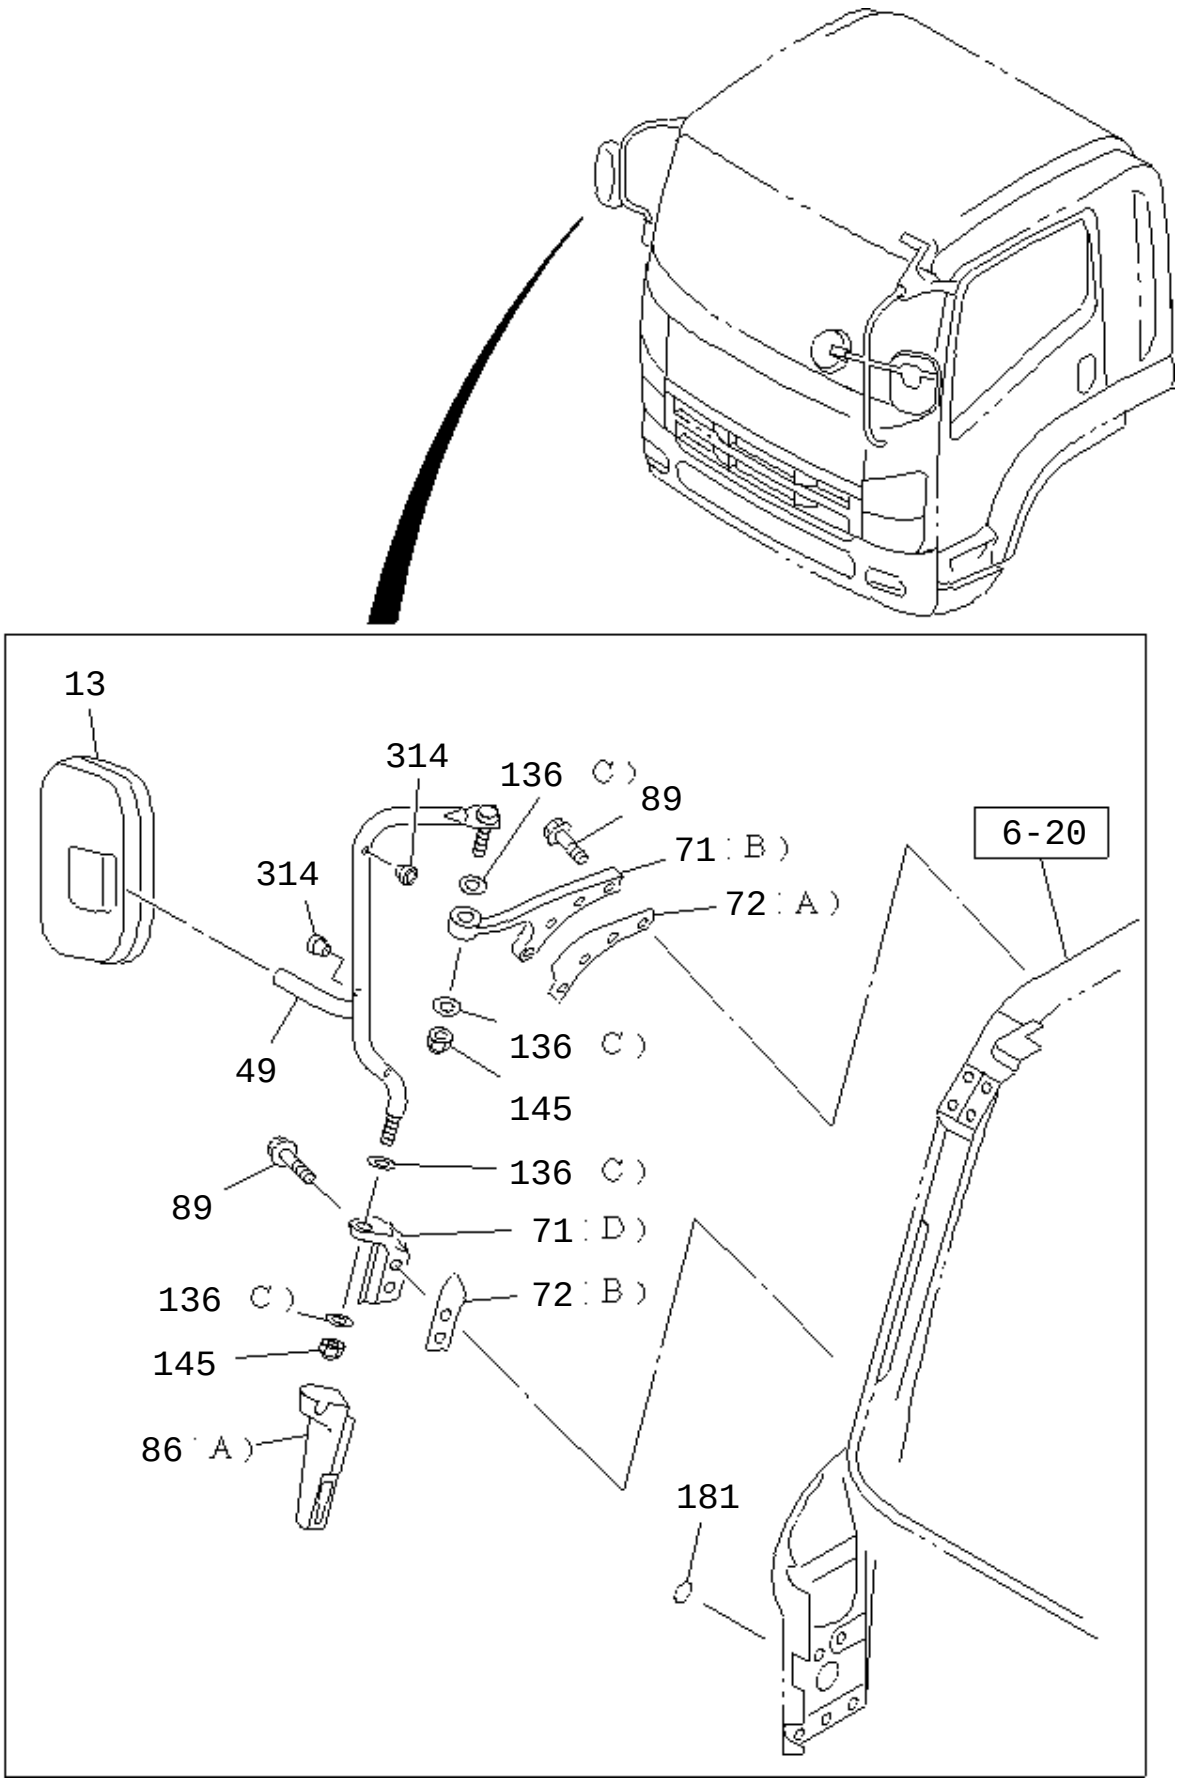

https://truckmanualshub.com/


LH

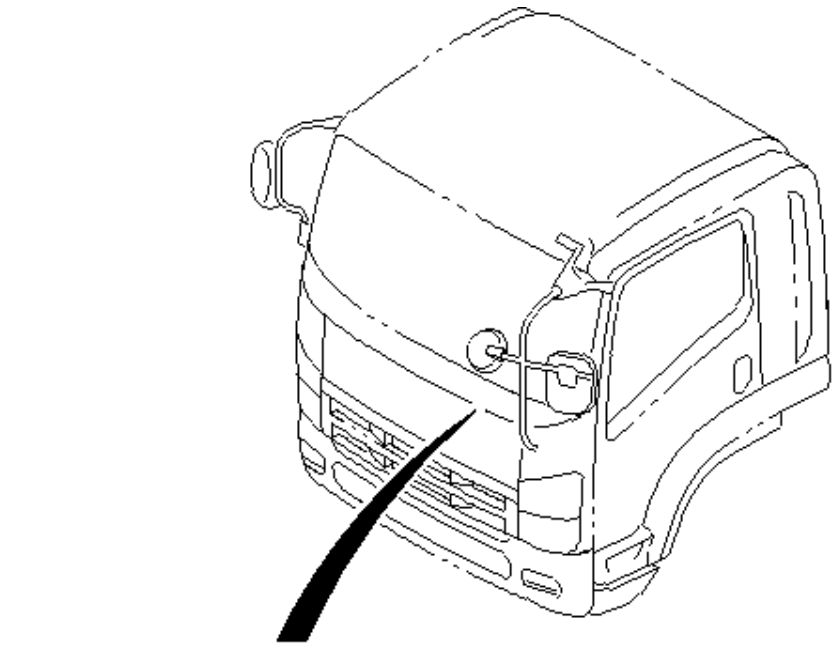

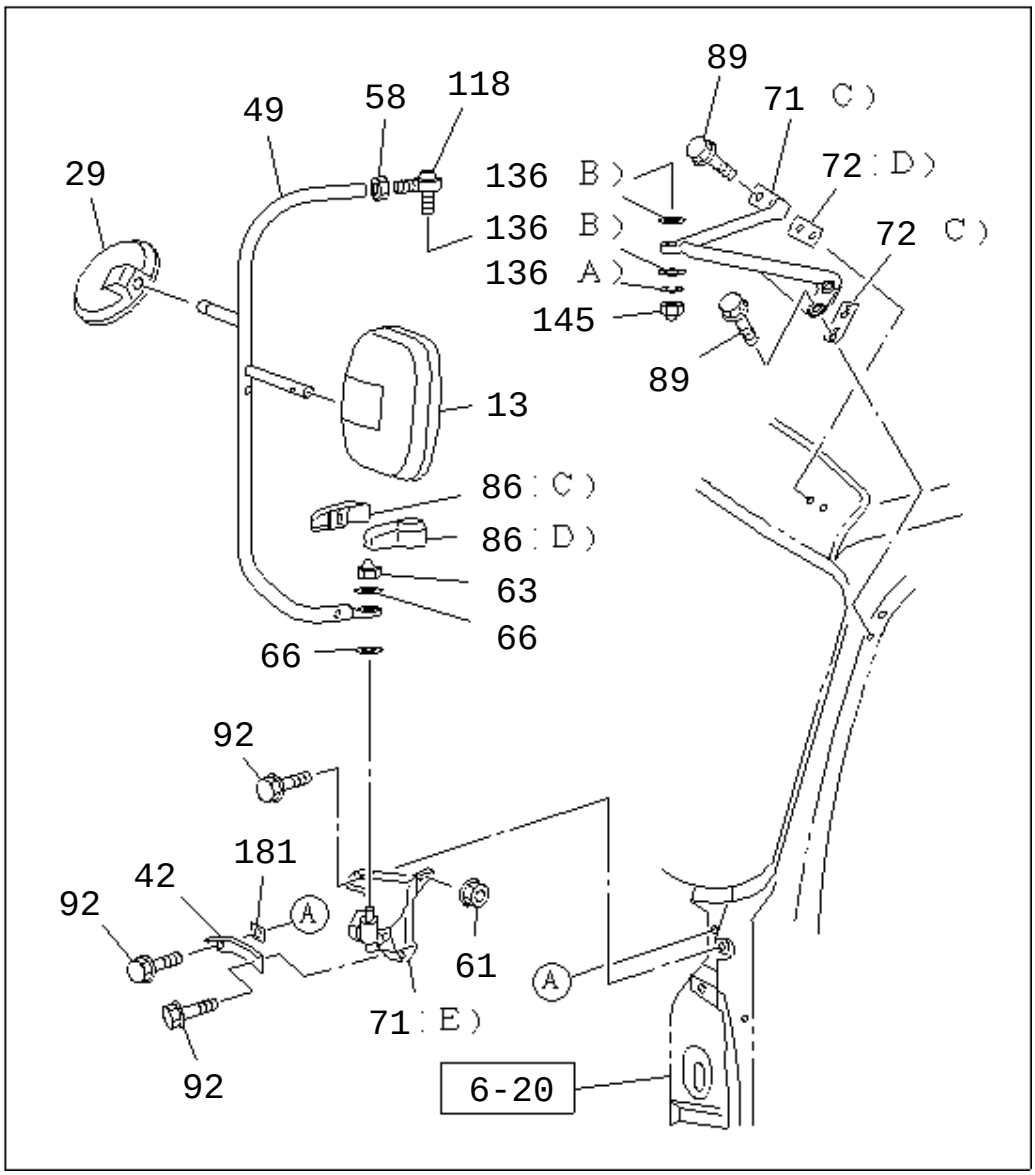


https://truckmanualshub.com/

COMPONENT;O/S RR VIEW MIRROR

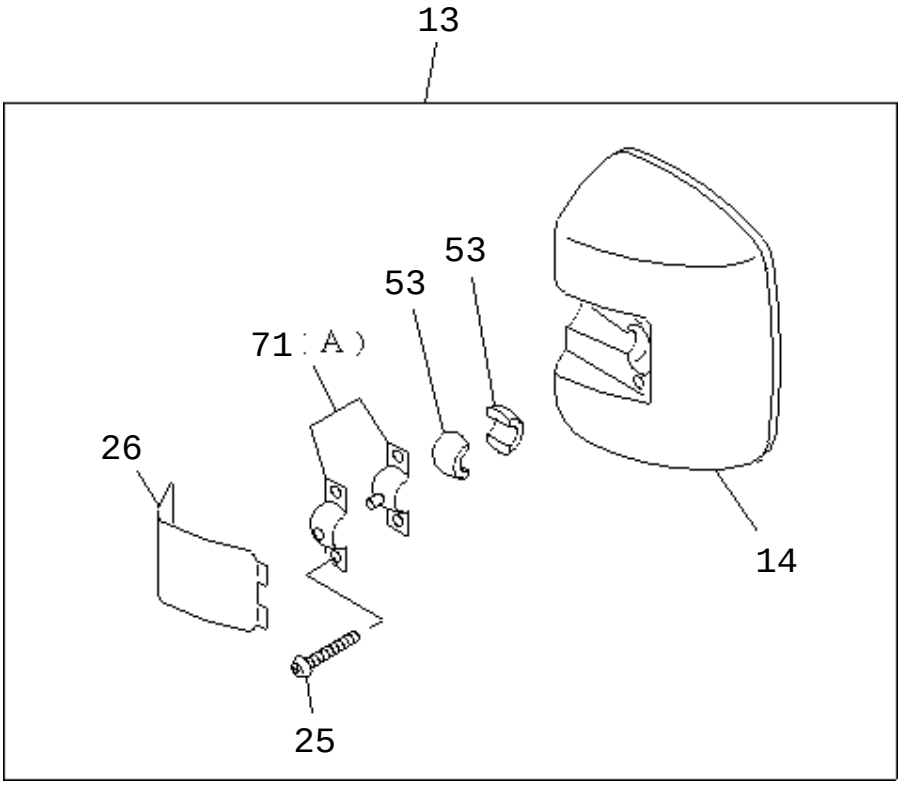

https://truckmanualshub.com/

UNDER AND ROOM MIRROR

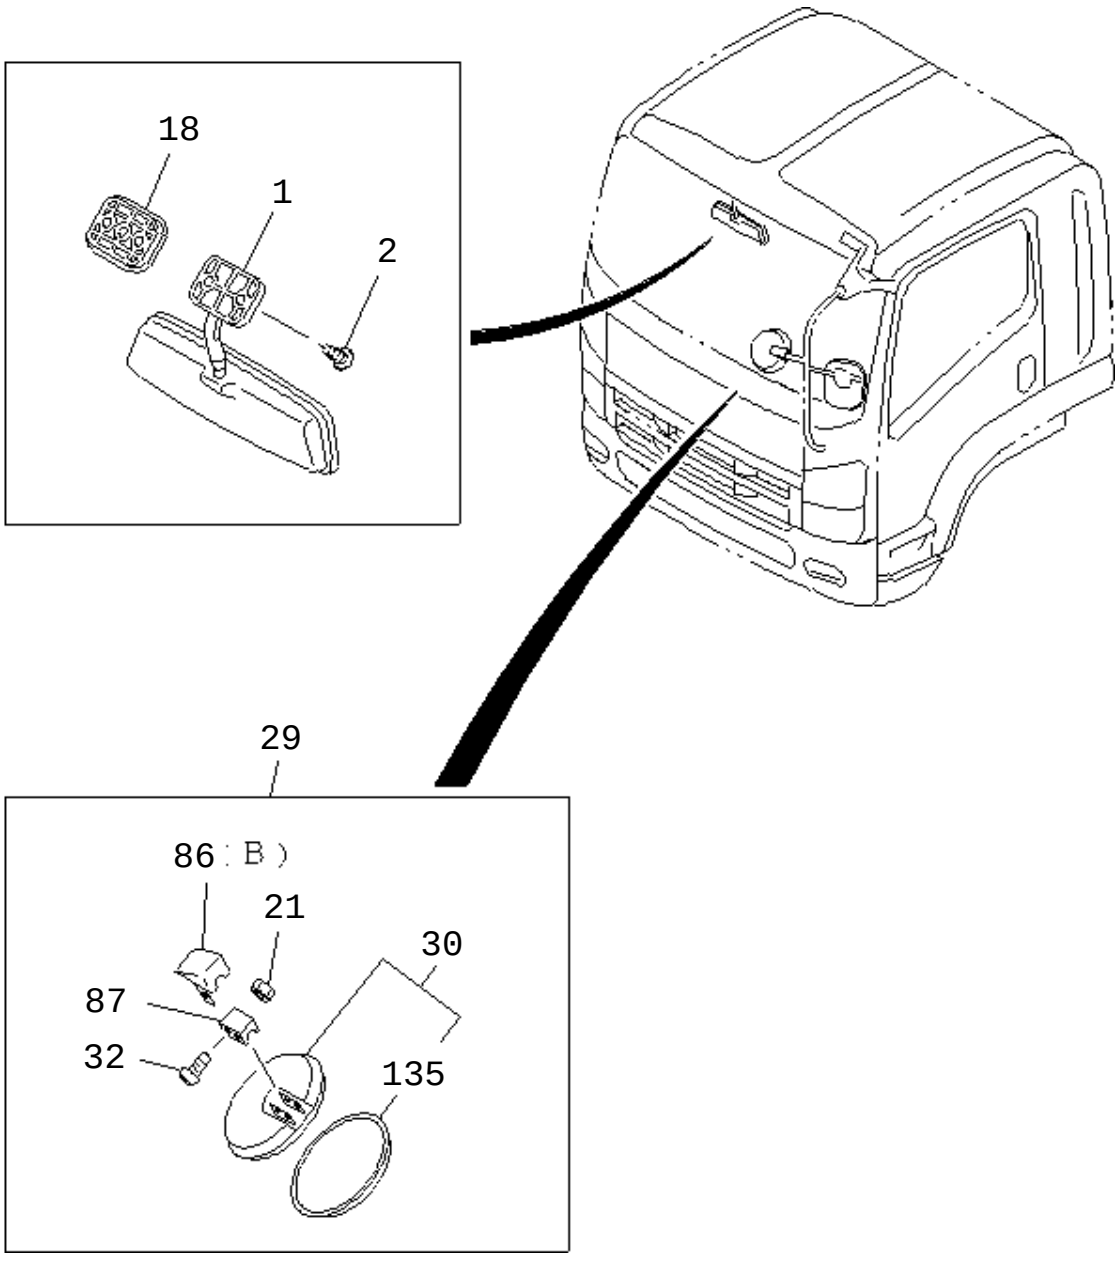

https://truckmanualshub.com/

7-20 MIRROR AND MIRROR STAY

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		MIRROR; ROOM						
		8-97924-058-2		1312-1403		01	A	
								IDN
		8-97924-058-2		1404-		01	AB	
								IDN
2		SCREW; MIRROR TO BODY						
		8-98033-674-0		1312-1403		02	A	
								M6X26
		8-98033-674-0		1404-		02	AB	
								M6X26
13	B	MIRROR ASM; OUTSIDE RR VIEW						
		8-98028-332-0		1312-1403	L	01	A	
		8-98028-332-0		1404-	L	01	AB	
		8-98104-068-0		1312-1403	R	01	A	
		8-98104-068-0		1404-	R	01	AB	
14	B	MIRROR ASM; OUTSIDE						
		8-98045-690-0		1312-1403	L	01	A	
		8-98045-690-0		1404-	L	01	AB	
		8-98108-511-0		1312-1403	R	01	A	
		8-98108-511-0		1404-	R	01	AB	
18		CLIP; MIRROR						
		8-97408-241-0		1312-1403		01	A	
								DARK GRAY
		8-97408-241-0		1404-		01	AB	
								DARK GRAY
21		NUT; MIRROR						
		1-09984-124-0		1312-1403	L	02	A	
								M5
		1-09984-124-0		1404-	L	02	AB	
								M5
25		SCREW; OUTSIDE MIRROR						
		1-71707-223-0		1312-1403		04	A	
								M6X40
		1-71707-223-0		1404-		04	AB	
								M6X40
26		COVER; OUTSIDE MIRROR						
		1-71707-222-0		1312-1403	L	01	A	
		1-71707-222-0		1404-	L	01	AB	
		1-71707-221-0		1312-1403	R	01	A	
		1-71707-221-0		1404-	R	01	AB	
29		MIRROR ASM; UNDER						
		1-71798-422-0		1312-1403	L	01	A	
		1-71798-422-0		1404-	L	01	AB	
30	B	MIRROR; UNDER						
		1-71798-591-1		1312-1403	L	01	A	
		1-71798-591-1		1404-	L	01	AB	
32		SCREW; UNDER MIRROR						
		1-71737-797-0		1312-1403	L	02	A	
								M5X40 W/PL WASHER
		1-71737-797-0		1404-	L	02	AB	
								M5X40 W/PL WASHER
42		ATTACHMENT; OUTSIDE MIRROR						
		8-98070-643-0		1312-1403	L	01	A	
		8-98070-643-0		1404-	L	01	AB	
49		STAY; MIRROR SIDE						
		8-98085-112-1		1312-1403	L	01	A	
		8-98085-112-1		1404-	L	01	AB	
		8-98091-477-0		1312-1403	R	01	A	
		8-98091-477-0		1404-	R	01	AB	
53		PIVOT; SIDE MIRROR						
		1-71736-489-2		1312-1403		04	A	
								ID=22.2
		1-71736-489-2		1404-		04	AB	
								ID=22.2
58		NUT; MIRROR STAY						
		8-98061-883-0		1312-1403	L	01	A	
		8-98061-883-0		1404-	L	01	AB	
61		NUT; STAY,OUTSIDE MIRROR						
		0-91180-108-0		1312-1403	L	01	A	
								M8 FLANGE
		0-91180-108-0		1404-	L	01	AB	
								M8 FLANGE
63		NUT; STAY						

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
63		8-98174-339-0		1312-1403	L	01	A	M14 TOUGH LOCK NUT W/FLANGE
		8-98174-339-0		1404-	L	01	AB	M14 TOUGH LOCK NUT W/FLANGE
66		WASHER; PL						
		0-91610-614-0		1312-1403	L	01	A	LOWER
		0-91610-614-0		1404-	L	01	AB	LOWER
		8-98201-756-0		1312-1403	L	01	A	UPPER
		8-98201-756-0		1404-	L	01	AB	UPPER
71		BRACKET; OUTSIDE MIRROR						
		1-71707-224-0		1312-1403		04	A	(A)
		1-71707-224-0		1404-		04	AB	(A)
		8-98040-022-1		1312-1403	L	01	A	(C)
		8-98040-022-1		1404-	L	01	AB	(C)
		8-98201-957-0		1312-1403	L	01	A	(E)
		8-98201-957-0		1404-	L	01	AB	(E)
		8-98040-021-0		1312-1403	R	01	A	(B)
		8-98040-021-0		1404-	R	01	AB	(B)
		8-98040-543-1		1312-1403	R	01	A	(D)
		8-98040-543-1		1404-	R	01	AB	(D)
72		SHEET						
		8-98040-535-0		1312-1403	L	01	A	(C)
		8-98040-535-0		1404-	L	01	AB	(C)
		8-98040-537-1		1312-1403	L	01	A	(D)
		8-98040-537-1		1404-	L	01	AB	(D)
		8-98040-351-0		1312-1403	R	01	A	(A)
		8-98040-351-0		1404-	R	01	AB	(A)
		8-98040-353-1		1312-1403	R	01	A	(B)
		8-98040-353-1		1404-	R	01	AB	(B)
86		COVER; STAY,OUTSIDE MIRROR						
		1-71737-649-1		1312-1403	L	01	A	(B) BLACK
		1-71737-649-1		1404-	L	01	AB	(B) BLACK
		8-98040-545-1		1312-1403	L	01	A	(C)
		8-98040-545-1		1404-	L	01	AB	(C)
		8-98040-546-1		1312-1403	L	01	A	(D)
		8-98040-546-1		1404-	L	01	AB	(D)
		8-98040-541-1		1312-1403	R	01	A	(A)
		8-98040-541-1		1404-	R	01	AB	(A)
87		SPACER						
		1-71737-646-2		1312-1403	L	01	A	
		1-71737-646-2		1404-	L	01	AB	
89		SCREW; BRKT,OUTSIDE MIRROR						


https://truckmanualshub.com/

7-20 MIRROR AND MIRROR STAY


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
89		8-98067-249-2		1312-1403		10	A	M8X26 W/PL WASHER
		8-98067-249-2		1404-		10	AB	M8X26 W/PL WASHER
92		BOLT; STAY BRKT,MIRROR						
		8-98076-109-0		1312-1403	L	04	A	M8X16 FLANGE
		8-98076-109-0		1404-	L	04	AB	M8X16 FLANGE
118		JOINT ASM; BALL						
		1-71798-356-2		1312-1403	L	01	A	
		1-71798-356-2		1404-	L	01	AB	
135		LENS; MIRROR,SIDE UNDER						
		1-71798-838-0		1312-1403	L	01	A	
		1-71798-838-0		1404-	L	01	AB	
136		WASHER; LK,BRKT,MIRROR STAY						
		1-09985-180-0		1312-1403	L	01	A	(A) ID=10
		1-09985-180-0		1404-	L	01	AB	(A) ID=10
		1-09985-184-0		1312-1403	L	02	A	(B) ID=10.5 OD=26 T=2.6
		1-09985-184-0		1404-	L	02	AB	(B) ID=10.5 OD=26 T=2.6
		1-09985-204-0		1312-1403	R	04	A	(C) ID=10.5 OD=26 T=2.6
		1-09985-204-0		1404-	R	04	AB	(C) ID=10.5 OD=26 T=2.6
145		NUT; CAP,SUB STAY						
		1-09984-134-0		1312-1403		03	A	M10 CAP NUT
		1-09984-134-0		1404-		03	AB	M10 CAP NUT
181		SEAL; BRKT						
		8-94272-533-0		1312-1403	L	01	A	25X25
		8-94272-533-0		1404-	L	01	AB	25X25
		1-76798-019-0		1312-1403	R	01	A	OD=25 BLACK
		1-76798-019-0		1404-	R	01	AB	OD=25 BLACK
314		BUFFER; STOPPER						
		8-94314-317-0		1312-1403	R	02	A	
		8-94314-317-0		1404-	R	02	AB	
6-20		Move to 6-20						

https://truckmanualshub.com/


1(A)

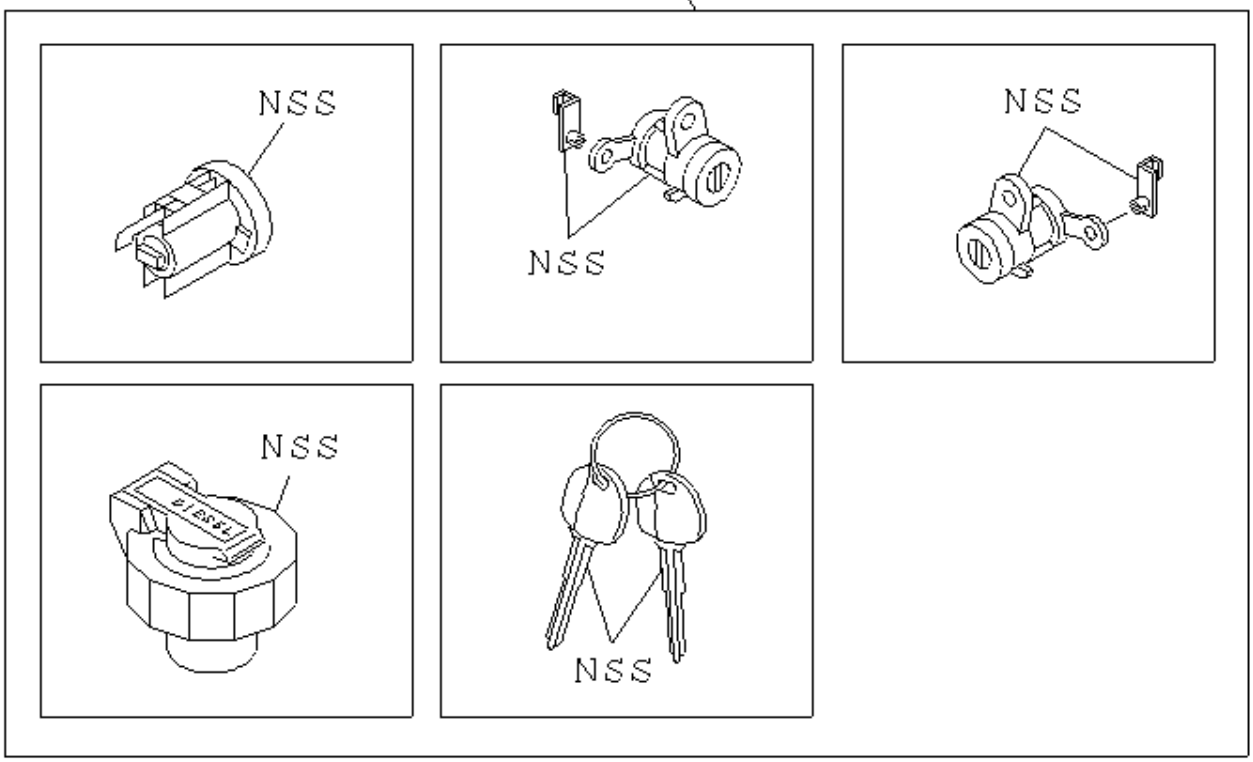


1(B)

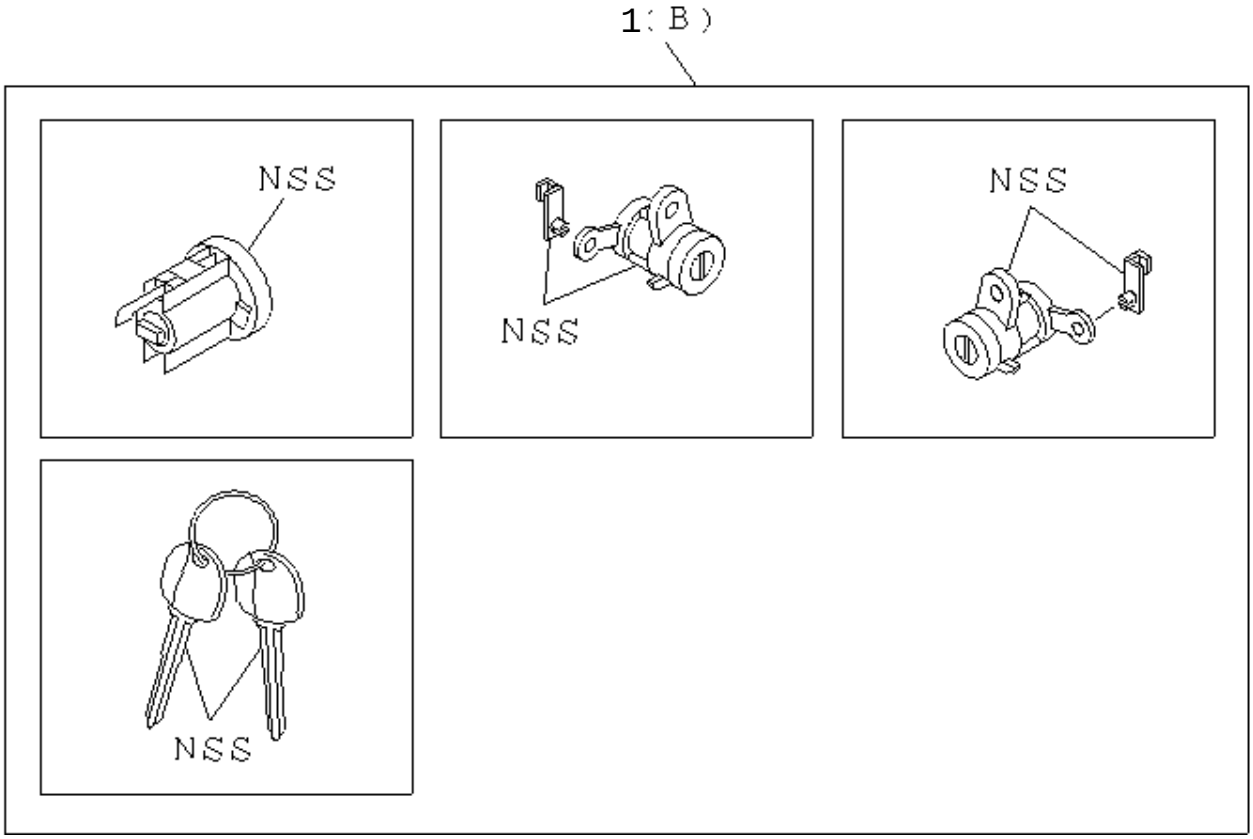

https://truckmanualshub.com/

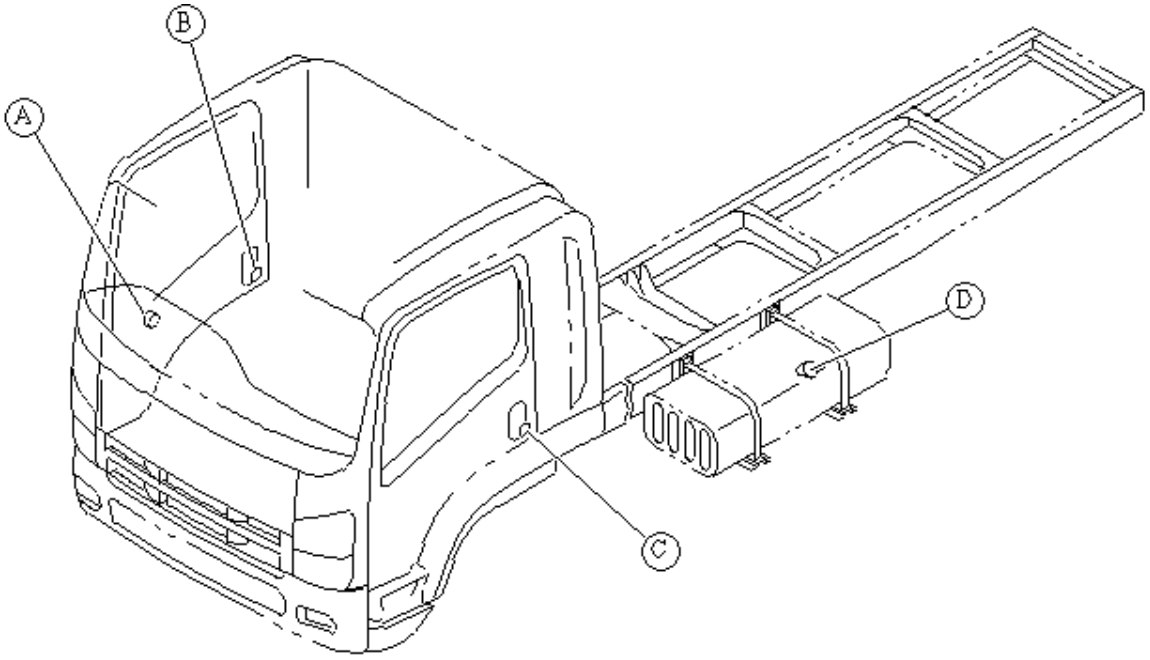

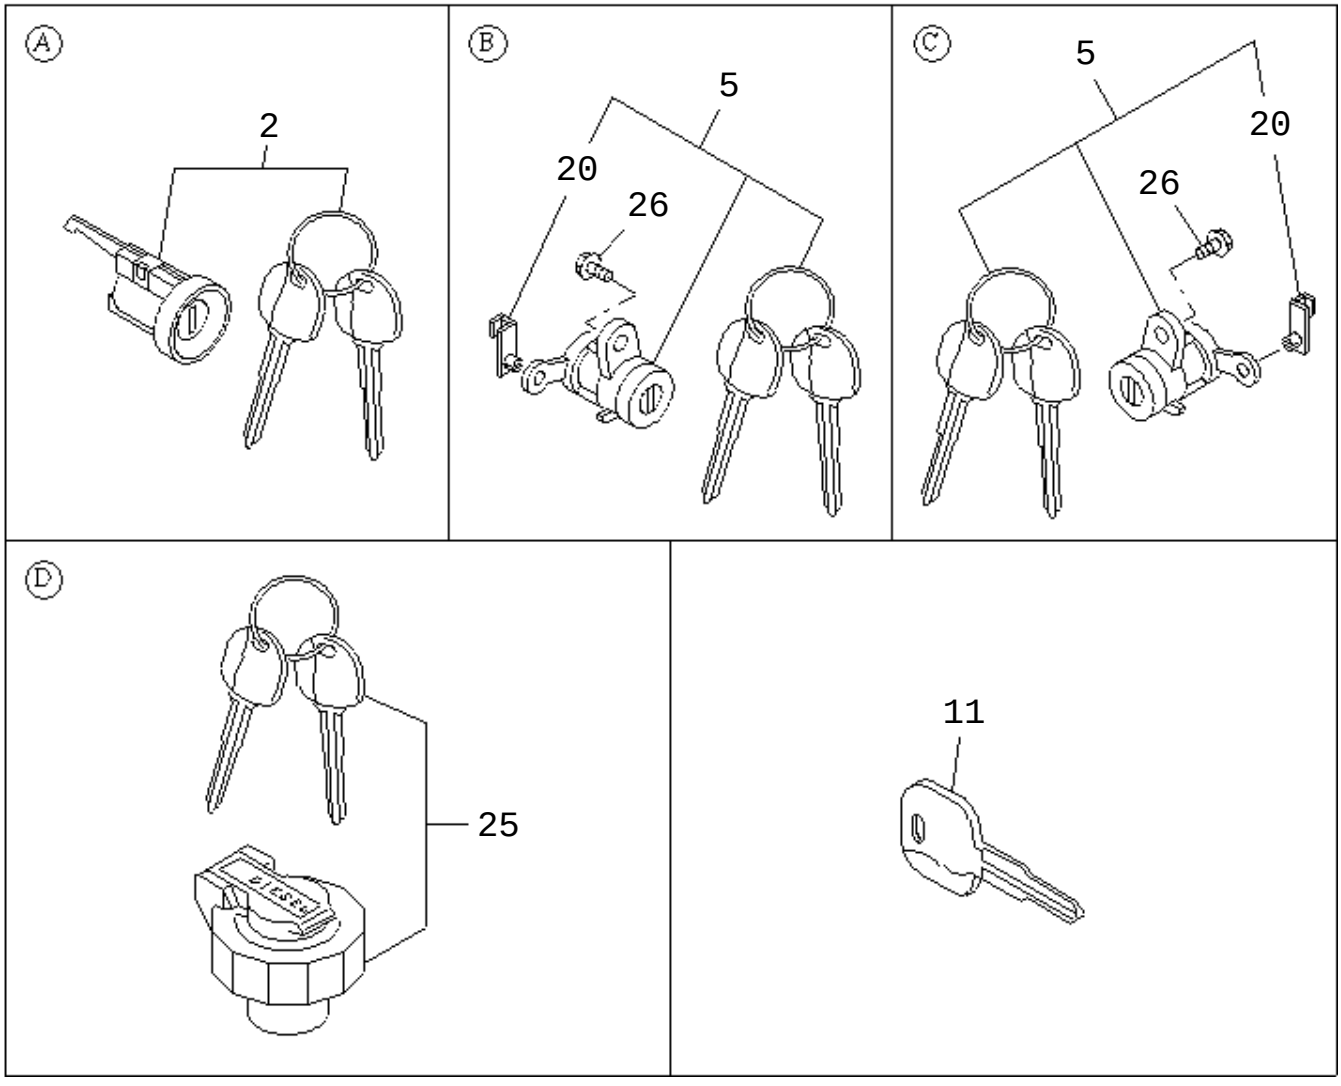


https://truckmanualshub.com/

7-30 LOCK CYLINDER SET

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		CYLINDER SET; CAR LOCK						
		8-97948-145-0		1312-1403		01	A	FUEL TANK CAP KEY LOCK<N05> (A) IDN
		8-97948-145-0		1404-		01	AB	FUEL TANK CAP KEY LOCK<N05> (A) IDN
		8-98201-161-0		1312-1403		01	A	EXC. FUEL TANK CAP KEY LOCK<N05> (B)
		8-98201-161-0		1404-		01	AB	EXC. FUEL TANK CAP KEY LOCK<N05> (B)
2		BARREL ASM; W/KEY,STRG LOCK						
		8-98201-342-0		1312-1403		01	A	
		8-98201-342-0		1404-		01	AB	
5		CYLINDER ASM; DOOR LOCK						
		8-98055-149-0		1312-1403	R	01	A	
		8-98055-149-0		1404-		01	AB	
		8-98055-150-0		1312-1403	L	01	A	
		8-98055-150-0		1404-		01	AB	
11		KEY; BLANK						
		8-98055-170-0		1312-1403		AR	A	
		8-98055-170-0		1404-		AR	AB	
20		SNAP; DOOR LOCK CYL						
		8-98055-181-0		1312-1403	L	01	A	
		8-98055-181-0		1404-		01	AB	
		8-98055-182-0		1312-1403	R	01	A	
		8-98055-182-0		1404-		01	AB	
25	B	CAP; FUEL TANK,W/KEY						
		8-98146-010-0		1312-1403		01	A	FUEL TANK CAP KEY LOCK<N05>
		8-98146-010-0		1404-		01	AB	FUEL TANK CAP KEY LOCK<N05>
26		BOLT; KEY CYL,DOOR						
		8-98031-839-0		1312-1403		02	A	M6X8 FLANGE IDN
		8-98031-839-0		1404-		02	AB	M6X8 FLANGE IDN


https://truckmanualshub.com/

INST PANEL AND OTHER PARTS

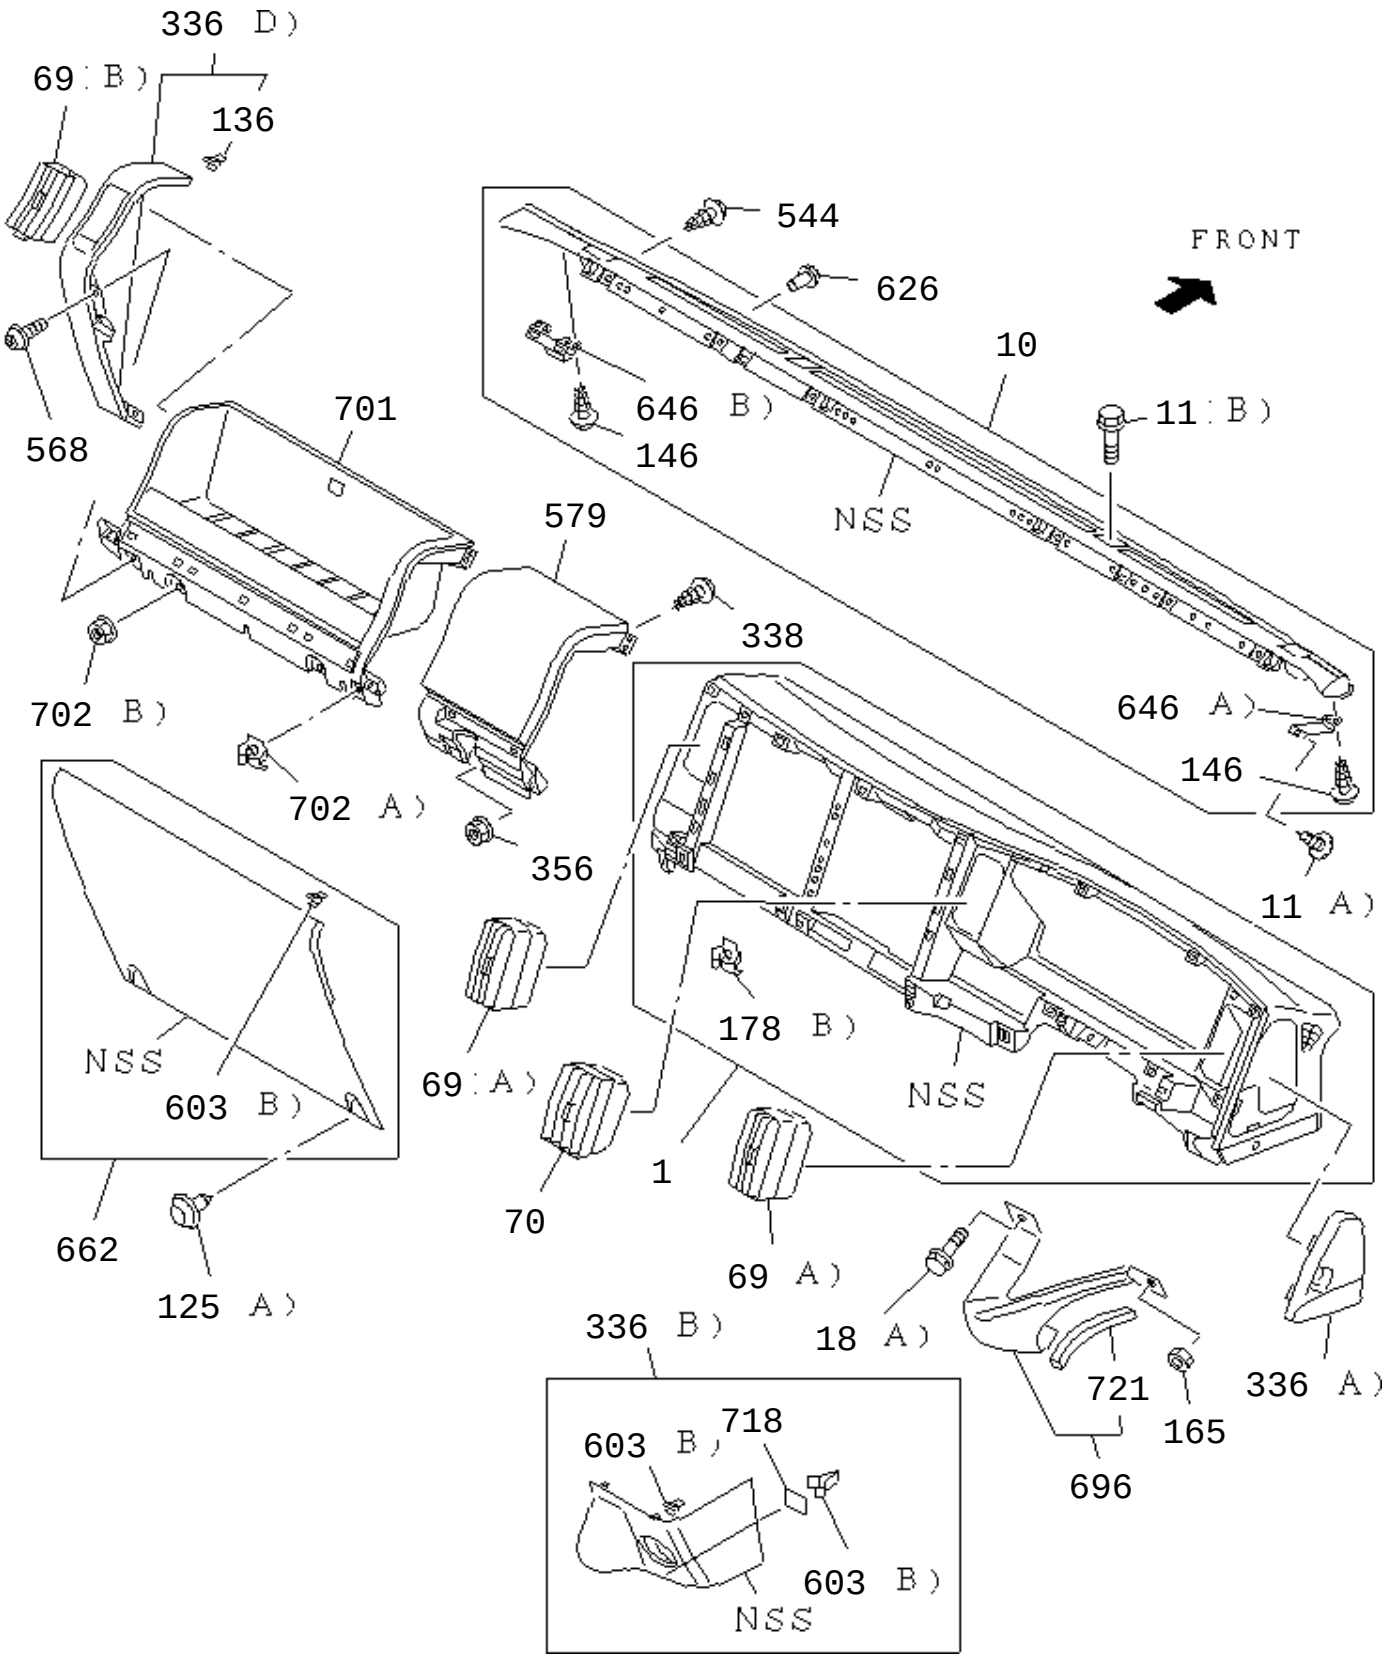



https://truckmanualshub.com/


REINFORCEMENT AND OTHER PARTS

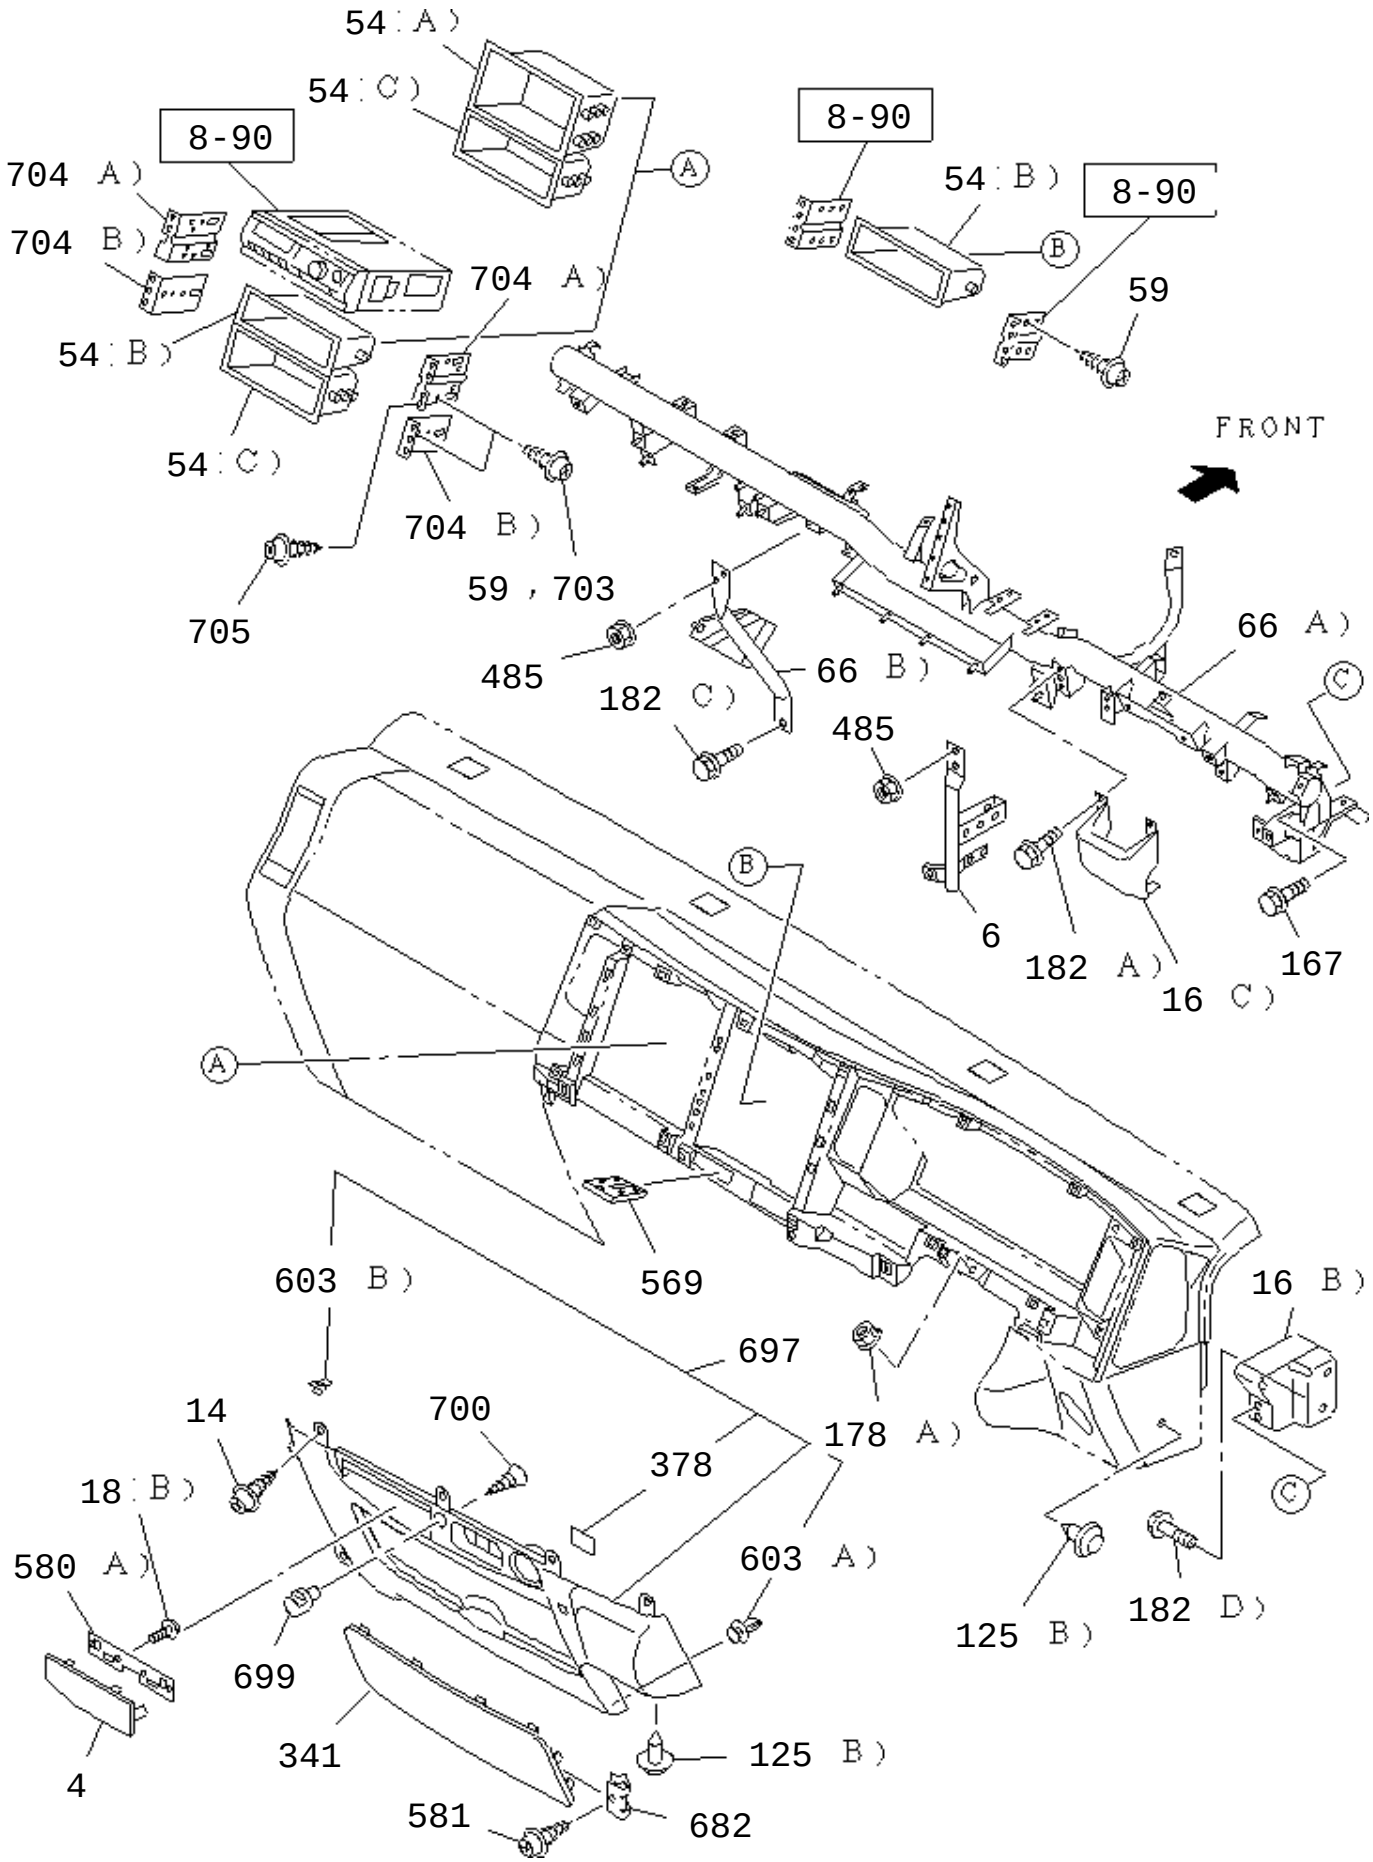

https://truckmanualshub.com/

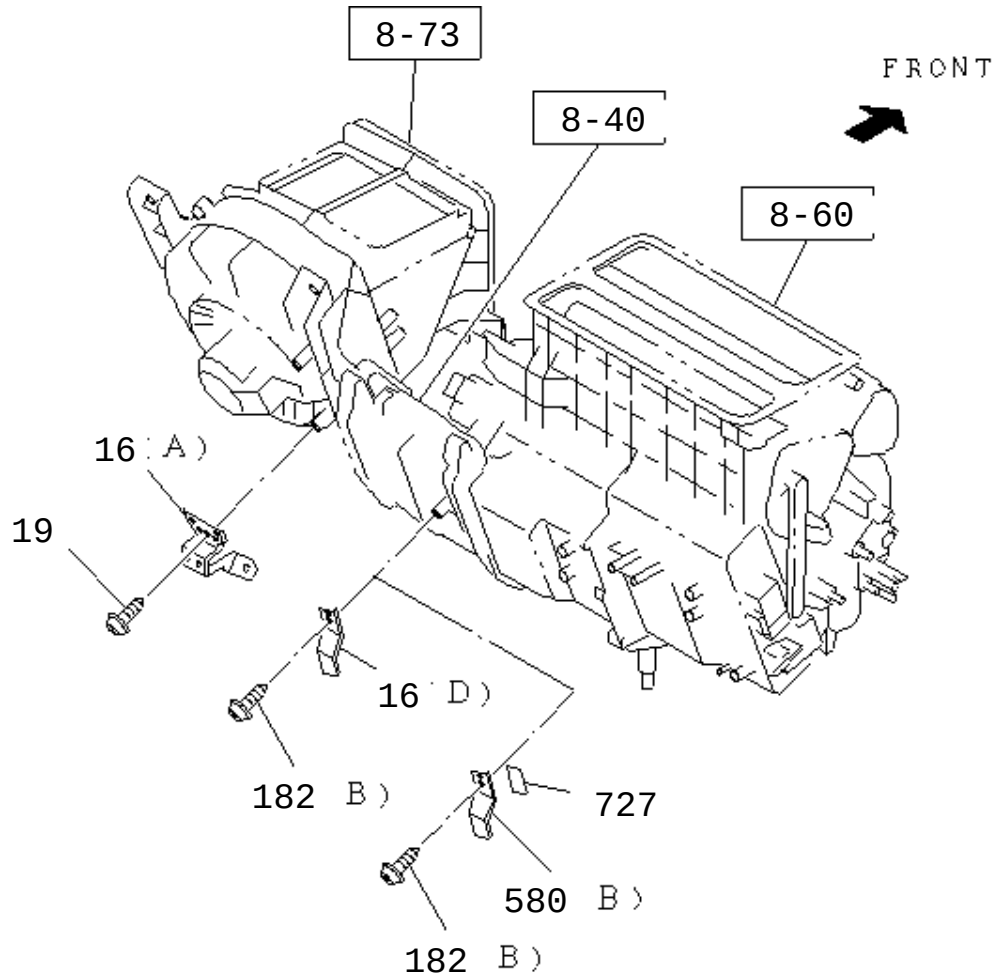

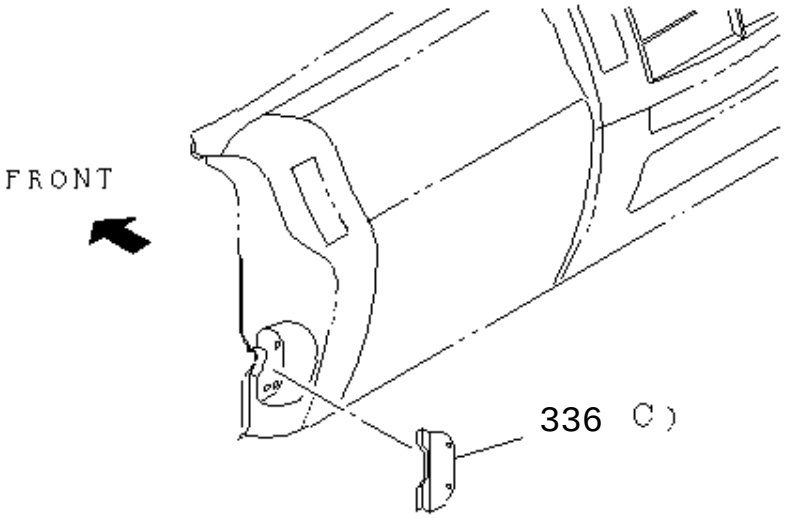

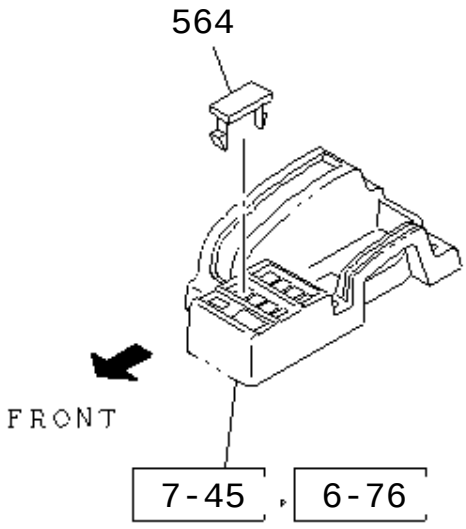

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		PANEL; INST						
		8-97423-015-0		1312-1403		01	A	GRAY
		8-97423-015-0		1404-		01	AB	GRAY
4		COVER; INST PNL						
		8-97407-898-1		1312-1403		01	A	GRAY IDN
		8-97407-898-1		1404-		01	AB	GRAY IDN
6		SUPPORT; INST PANEL						
		8-98196-255-0		1312-1403		01	A	
		8-98196-255-0		1404-		01	AB	
10		PANEL ASM; GARNISH						
		8-97422-097-0		1312-1403		01	A	GRAY
		8-97422-097-0		1404-		01	AB	GRAY
11		BOLT; INST PNL						
		0-72180-516-0		1312-1403		08	A	(A) M5X16 TAPPING
		0-72180-516-0		1404-		08	AB	(A) M5X16 TAPPING
		8-98018-440-0		1312-1403		04	A	(B) M6X25 W/LK&PL WASHER
		8-98018-440-0		1404-		04	AB	(B) M6X25 W/LK&PL WASHER
14		SCREW; INST PNL						
		0-72180-516-0		1312-1403		04	A	M5X16 TAPPING
		0-72180-516-0		1404-		04	AB	M5X16 TAPPING
16		BRACKET; INST PNL						
		8-98053-711-0		1312-1403		01	A	(C) IDN
		8-98053-711-0		1404-		01	AB	(C) IDN
		8-98017-204-1		1312-1403	L	01	A	(B)
		8-98017-204-1		1404-	L	01	AB	(B)
		8-98017-202-1		1312-1403	R	01	A	(B)
		8-98017-202-1		1404-	R	01	AB	(B)
		8-97585-612-2		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A)
		8-97585-612-2		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A)
		8-98180-277-1		1312-1401		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (D)
		8-98180-277-1		1402-		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (D)
18		BOLT; BRKT						
		0-52000-612-0		1312-1403		01	A	(A) M6X12 W/LK&PL WASHER
		0-52000-612-0		1404-		01	AB	(A) M6X12 W/LK&PL WASHER
		8-98058-632-0		1312-1403		03	A	(B) M5X10 TAPPING W/TORQUES

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
18		8-98058-632-0		1404-		03	AB	(B) M5X10 TAPPING W/TORQUES
19		SCREW; BRKT						
		0-72180-516-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M5X16 TAPPING
		0-72180-516-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M5X16 TAPPING
54		POCKET; CENTER CLUSTER						
		8-97926-874-0		1402-1403		01	A	VIN MODEL YEAR 2014<VZE> (A) IDN
		8-97926-874-0		1404-		01	AB	VIN MODEL YEAR 2014<VZE> (A) IDN
		8-97407-129-2		1312-1401		01	A	(A) H=108.4 BLACK IDN
		8-97407-129-2		1402-1403		01	A	EXC. VIN MODEL YEAR 2014<VZE> (A) H=108.4 BLACK IDN
		8-97407-129-2		1404-		01	AB	EXC. VIN MODEL YEAR 2014<VZE> (A) H=108.4 BLACK IDN
		8-97408-864-2		1312-1403		01	A	(B) H=58.4 BLACK IDN
		8-97408-864-2		1404-		01	AB	(B) H=58.4 BLACK IDN
		8-97408-865-2		1312-1403		01	A	(C) H=69.8 BLACK IDN
		8-97408-865-2		1404-		01	AB	(C) H=69.8 BLACK IDN
59		SCREW; CLUSTER POCKET						
		8-98058-632-0		1312-1403		04	A	M5X10 TAPPING W/TORQUES
		8-98058-632-0		1404-		04	AB	M5X10 TAPPING W/TORQUES
66		REINFORCEMENT; INST PANEL						
		8-98151-167-0		1312-1403		01	A	(B)
		8-98151-167-0		1404-		01	AB	(B)
		8-98174-904-1		1312-1403		01	A	(A)
		8-98174-904-1	A	1404-1406		01	AB	(A)
		8-98240-609-0		1407-		01	AB	(A)
69		GRILLE; SIDE,AIR OUTLET						
		8-98028-561-2		1312-1403		02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A) IDN
		8-98028-561-2		1404-		02	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A) IDN
		8-98028-562-2		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B) IDN
		8-98028-562-2		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B) IDN
70		GRILLE; CENTER,AIR OUTLET						

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
70		8-98028-563-2		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
		8-98028-563-2		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
125		CLIP; INST PANEL						
		8-97419-968-1		1404-		02	B	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (A) GRAY IDN
		8-97408-817-0		1312-1403		04	A	(B) GRAY
		8-97408-817-0		1404-		04	AB	(B) GRAY
136		CLIP; INST COVER						
		8-98076-254-0		1312-1403		02	A	
		8-98076-254-0		1404-		02	AB	
146		SCREW; TAP						
		0-72180-516-0		1312-1403		03	A	M5X16 TAPPING
		0-72180-516-0		1404-		03	AB	M5X16 TAPPING
165		NUT; BRKT KNEE PAD						
		0-91180-106-0		1312-1403		01	A	M6 FLANGE
		0-91180-106-0		1404-		01	AB	M6 FLANGE
167		BOLT; REINF TO INST						
		8-97264-766-0		1312-1403		04	A	M8X23 FLANGE
		8-97264-766-0		1404-		04	AB	M8X23 FLANGE
178		NUT; INST PANEL						
		0-91180-106-0		1312-1403		01	A	(A) M6 FLANGE
		0-91180-106-0		1404-		01	AB	(A) M6 FLANGE
		8-98037-629-0		1312-1403		15	A	(B) IDN
		8-98037-629-0		1404-		15	AB	(B) IDN
182		BOLT; BRKT,INST PANEL						
		0-28050-816-0		1312-1403		04	A	(D) M8X16 FLANGE
		0-28050-816-0		1404-		04	AB	(D) M8X16 FLANGE
		0-52000-612-0		1312-1403		02	A	(A) M6X12 W/LK&PL WASHER
		0-52000-612-0		1404-		02	AB	(A) M6X12 W/LK&PL WASHER
		8-98018-439-0		1312-1403		01	A	(C) M8X25 W/LK&PL WASHER
		8-98018-439-0		1404-		01	AB	(C) M8X25 W/LK&PL WASHER
		0-72180-516-0		1312-1401		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B) M5X16 TAPPING
		0-72180-516-0		1402-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B) M5X16 TAPPING

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
182		0-72180-516-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B) M5X16 TAPPING
336		COVER; INST PANEL SIDE						
		8-97407-420-1		1312-1403		01	A	(A) GRAY
		8-97407-420-1		1404-		01	AB	(A) GRAY
		8-97407-427-4		1312-1403		01	A	(D) GRAY
		8-97407-427-4		1404-		01	AB	(D) GRAY
		8-97409-491-1		1312-1403		01	A	(C) GRAY
		8-97409-491-1		1404-		01	AB	(C) GRAY
		8-97422-653-0		1312-1403		01	A	(B) GRAY
		8-97422-653-0		1404-		01	AB	(B) GRAY
338		SCREW; COVER						
		0-72180-516-0		1312-1403		04	A	M5X16 TAPPING
		0-72180-516-0		1404-		04	AB	M5X16 TAPPING
341		LID; FUSE BOX						
		8-97422-209-0		1404-		01	B	GRAY
		8-97424-725-1		1312-		01	A	
356		NUT; COVER						
		0-91180-106-0		1312-1403		01	A	M6 FLANGE
		0-91180-106-0		1404-		01	AB	M6 FLANGE
378		SEAL; INST PANEL						
		8-98176-199-0		1312-1403		01	A	5X30 IDN
		8-98176-199-0		1404-		01	AB	5X30 IDN
485		NUT; SUPPORT CLIP,HARNESS						
		0-91180-106-0		1312-1403		04	A	M6 FLANGE
		0-91180-106-0		1404-		04	AB	M6 FLANGE
544		SCREW; TRAY						
		0-72180-516-0		1312-1403		03	A	M5X16 TAPPING
		0-72180-516-0		1404-		03	AB	M5X16 TAPPING
564		COVER; SW						
		8-97043-732-1		1404-		04	B	
		8-97043-732-1		1312-		06	A	
568		BOLT; COVER						
		0-72180-516-0		1312-1401		01	A	M5X16 TAPPING
		0-72180-516-0		1402-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M5X16 TAPPING
		0-72180-516-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M5X16 TAPPING
		8-98031-842-0		1312-1403		02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M6X20 W/LK&PL WASHER
		8-98031-842-0		1404-		02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M6X20 W/LK&PL WASHER

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS
								A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
568		8-98031-842-0		1404-		02	B	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> M6X20 W/LK&PL WASHER
569		HOLDER; CARD						
		8-97410-276-0		1312-1403		01	A	IDN
		8-97410-276-0		1404-		01	AB	IDN
579		COVER; INST PNL						
		8-97409-853-2		1312-1403		01	A	GRAY
		8-97409-853-2		1404-		01	AB	GRAY
580		BRACKET; COVER						
		8-98017-528-1		1404-		01	B	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B)
		8-98091-546-0		1312-1403		01	A	(A) IDN
		8-98091-546-0		1404-		01	AB	(A) IDN
581		SCREW						
		8-98219-290-0		1312-		02	A	M2.5X4
603		CLIP; COVER						
		8-98004-025-0		1312-1403		01	A	(A) IDN
		8-98004-025-0		1404-		01	AB	(A) IDN
		8-98021-271-0		1312-1403		04	A	(B) IDN
		8-98021-271-0		1404-		04	AB	(B) IDN
		8-98021-271-0		1312-1401		05	A	(B) IDN
		8-98021-271-0		1402-1403		05	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B) IDN
		8-98021-271-0		1404-		05	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B) IDN
626		RETAINER						
		8-94279-804-0		1312-1403		02	A	OD=15 BLACK
		8-94279-804-0		1404-		02	AB	OD=15 BLACK
646		BRACKET; GARNISH PANEL						
		8-98051-490-2		1312-1403		01	A	(A)
		8-98051-490-2		1404-		01	AB	(A)
		8-98051-492-2		1312-1403		01	A	(B)
		8-98051-492-2		1404-		01	AB	(B)
662		COVER; LWR,INST PANEL						
		8-97407-429-3		1312-1401		01	A	GRAY
		8-97407-429-3		1402-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> GRAY
		8-97407-429-3		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> GRAY
682		CLIP						
		8-98218-600-0		1312-		02	A	IDN
696		BRACKET; KNEE						
		8-98066-085-1		1312-1403		01	A	


https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
696		8-98066-085-1		1404-		01	AB	
697		PANEL; INST CENTER						
		8-97422-207-1		1312-1403		01	A	GRAY
		8-97422-207-1		1404-		01	AB	GRAY
699		HOOK; INST PANEL						
		8-97408-927-0		1312-1403		01	A	GRAY IDN
		8-97408-927-0		1404-		01	AB	GRAY IDN
700		BOLT; HOOK						
		0-72180-516-0		1312-1403		01	A	M5X16 TAPPING
		0-72180-516-0		1404-		01	AB	M5X16 TAPPING
701		TRAY; INST						
		8-97421-976-1		1312-1403		01	A	GRAY
		8-97421-976-1		1404-		01	AB	GRAY
702		NUT; TRAY						
		0-91180-106-0		1312-1403		02	A	(B) M6 FLANGE
		0-91180-106-0		1404-		02	AB	(B) M6 FLANGE
		8-98037-629-0		1312-1403		01	A	(A) IDN
		8-98037-629-0		1404-		01	AB	(A) IDN
703		SCREW; CENTER POCKET						
		8-98058-632-0		1312-1403		04	A	M5X10 TAPPING W/TORQUES
		8-98058-632-0		1404-		04	AB	M5X10 TAPPING W/TORQUES
704		BRACKET; CENTER POCKET						
		8-97585-616-2		1312-1403		02	A	(B) IDN
		8-97585-616-2		1404-		02	AB	(B) IDN
		8-97585-618-2		1312-1403		02	A	(A) IDN
		8-97585-618-2		1404-		02	AB	(A) IDN
705		SCREW; BRACKET CENTER POCKET						
		0-72180-520-0		1312-1403		08	A	M5X20 HEXALOBULAR SOCKET
		0-72180-520-0		1404-		08	AB	M5X20 HEXALOBULAR SOCKET
718		SEAL; COVER						
		8-98061-777-0		1312-1403		01	A	7X31 IDN
		8-98061-777-0		1404-		01	AB	7X31 IDN
721		FINISHER; BRKT,KNEE						
		8-97892-742-0		1312-1403		01	A	L=140 IDN
		8-97892-742-0		1404-		01	AB	L=140 IDN
727		SEAL; BRACKET						

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
727		8-98186-934-0		1404-		01	B	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
8-90		Move to 8-90						
6-76		Move to 6-76						
7-45		Move to 7-45						
8-40		Move to 8-40						
8-60		Move to 8-60						
8-73		Move to 8-73						

https://truckmanualshub.com/

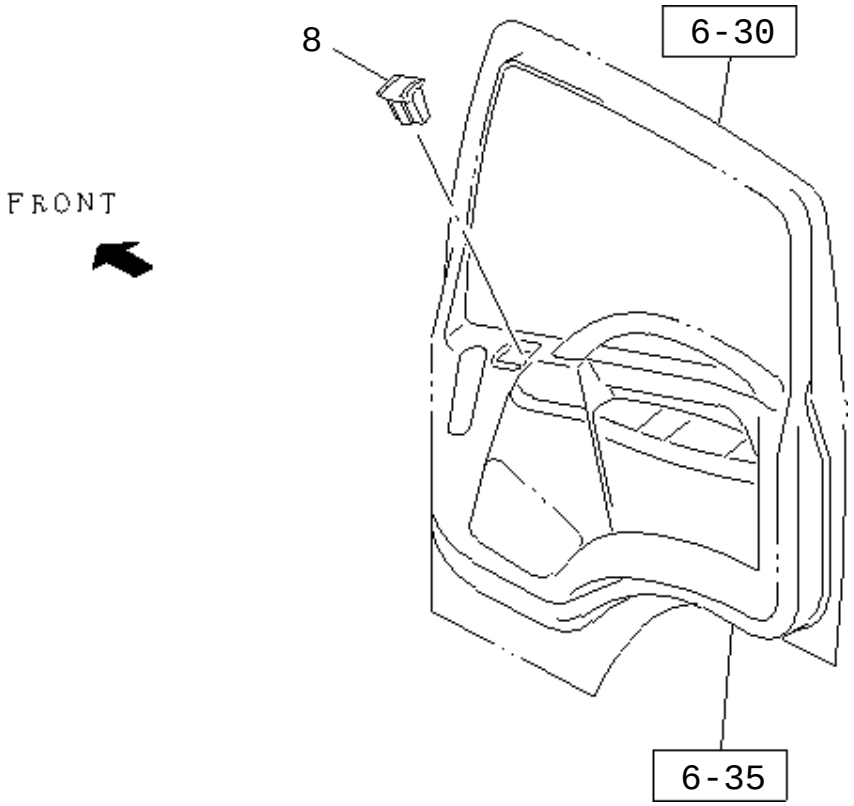


https://truckmanualshub.com/

7-42 ASH TRAY

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
8		TRAY ASM; ASH 8-97405-320-1		1312-1403	R	01	A	GRAY IDN
		8-97405-320-1		1404-	R	01	AB	GRAY IDN
6-30		Move to 6-30						
6-35		Move to 6-35						


https://truckmanualshub.com/

TRAY;HEADER ROOF

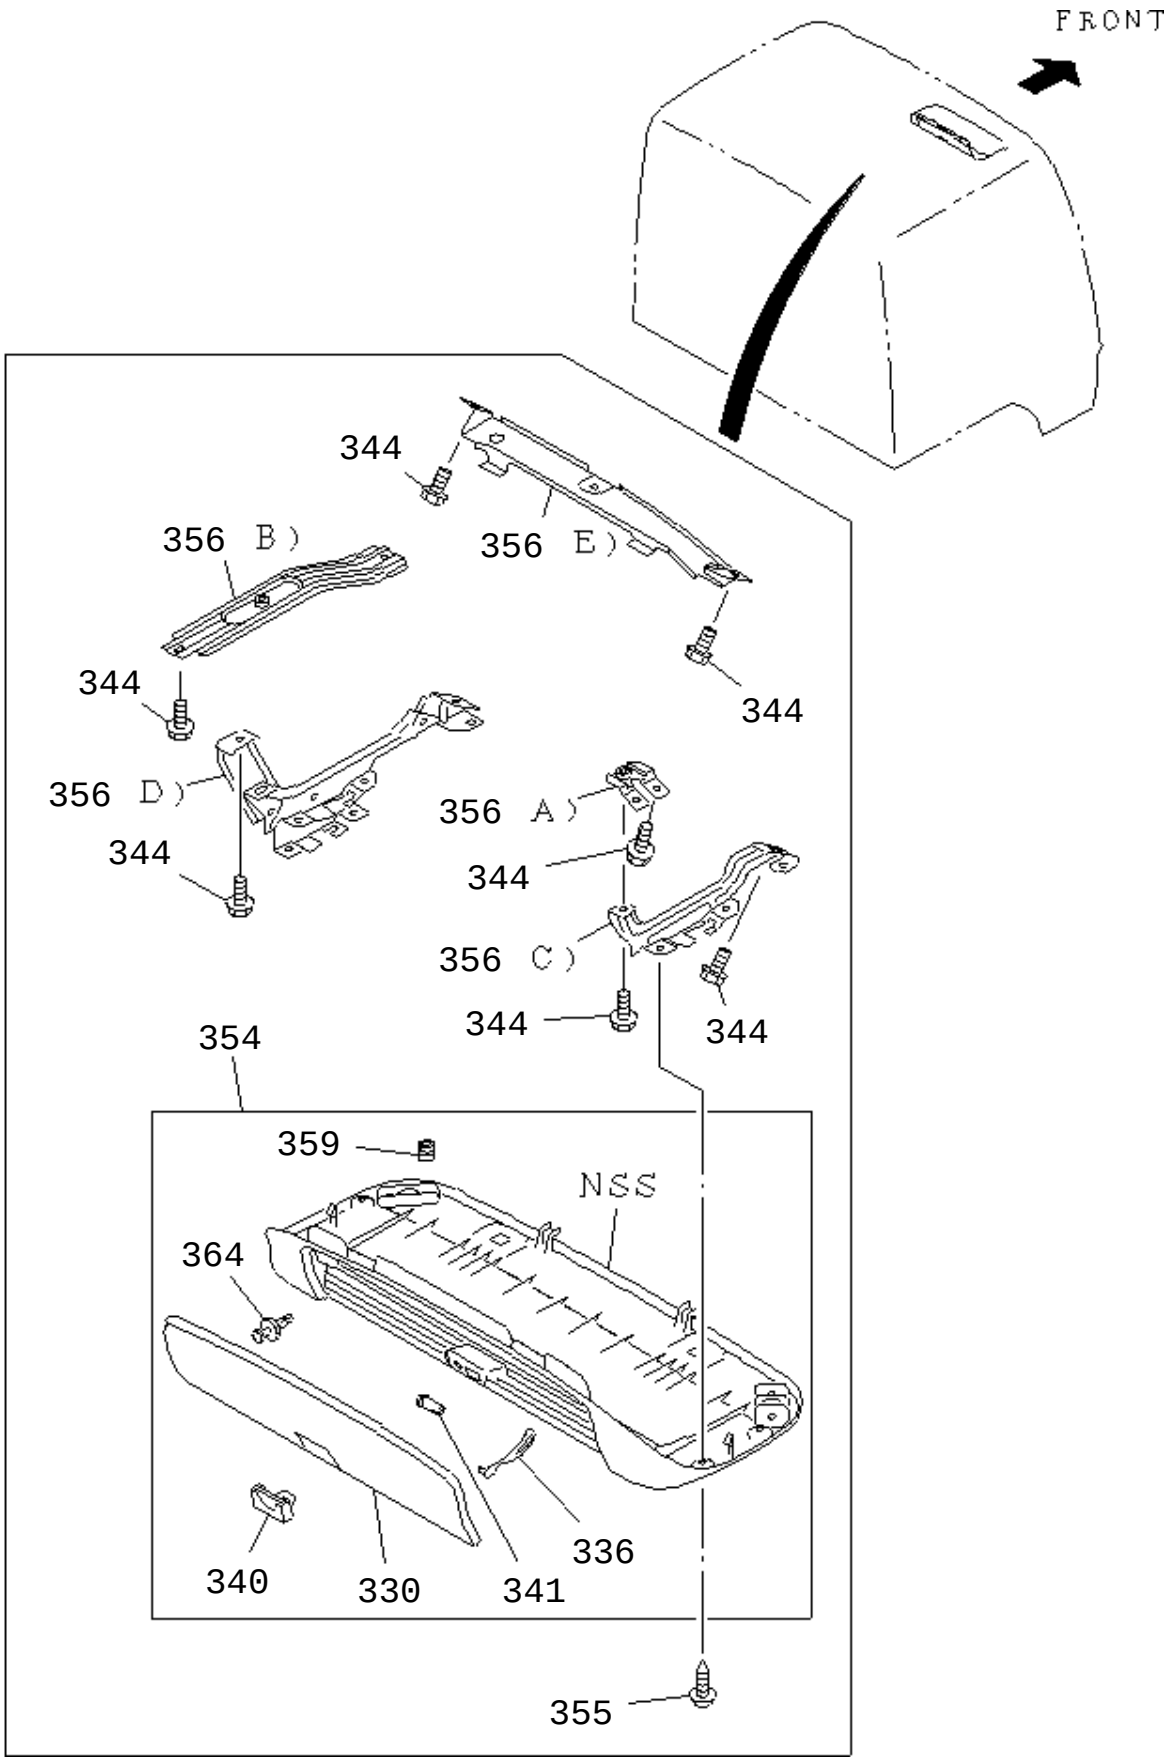


https://truckmanualshub.com/

SUN VISOR AND OTHER PARTS

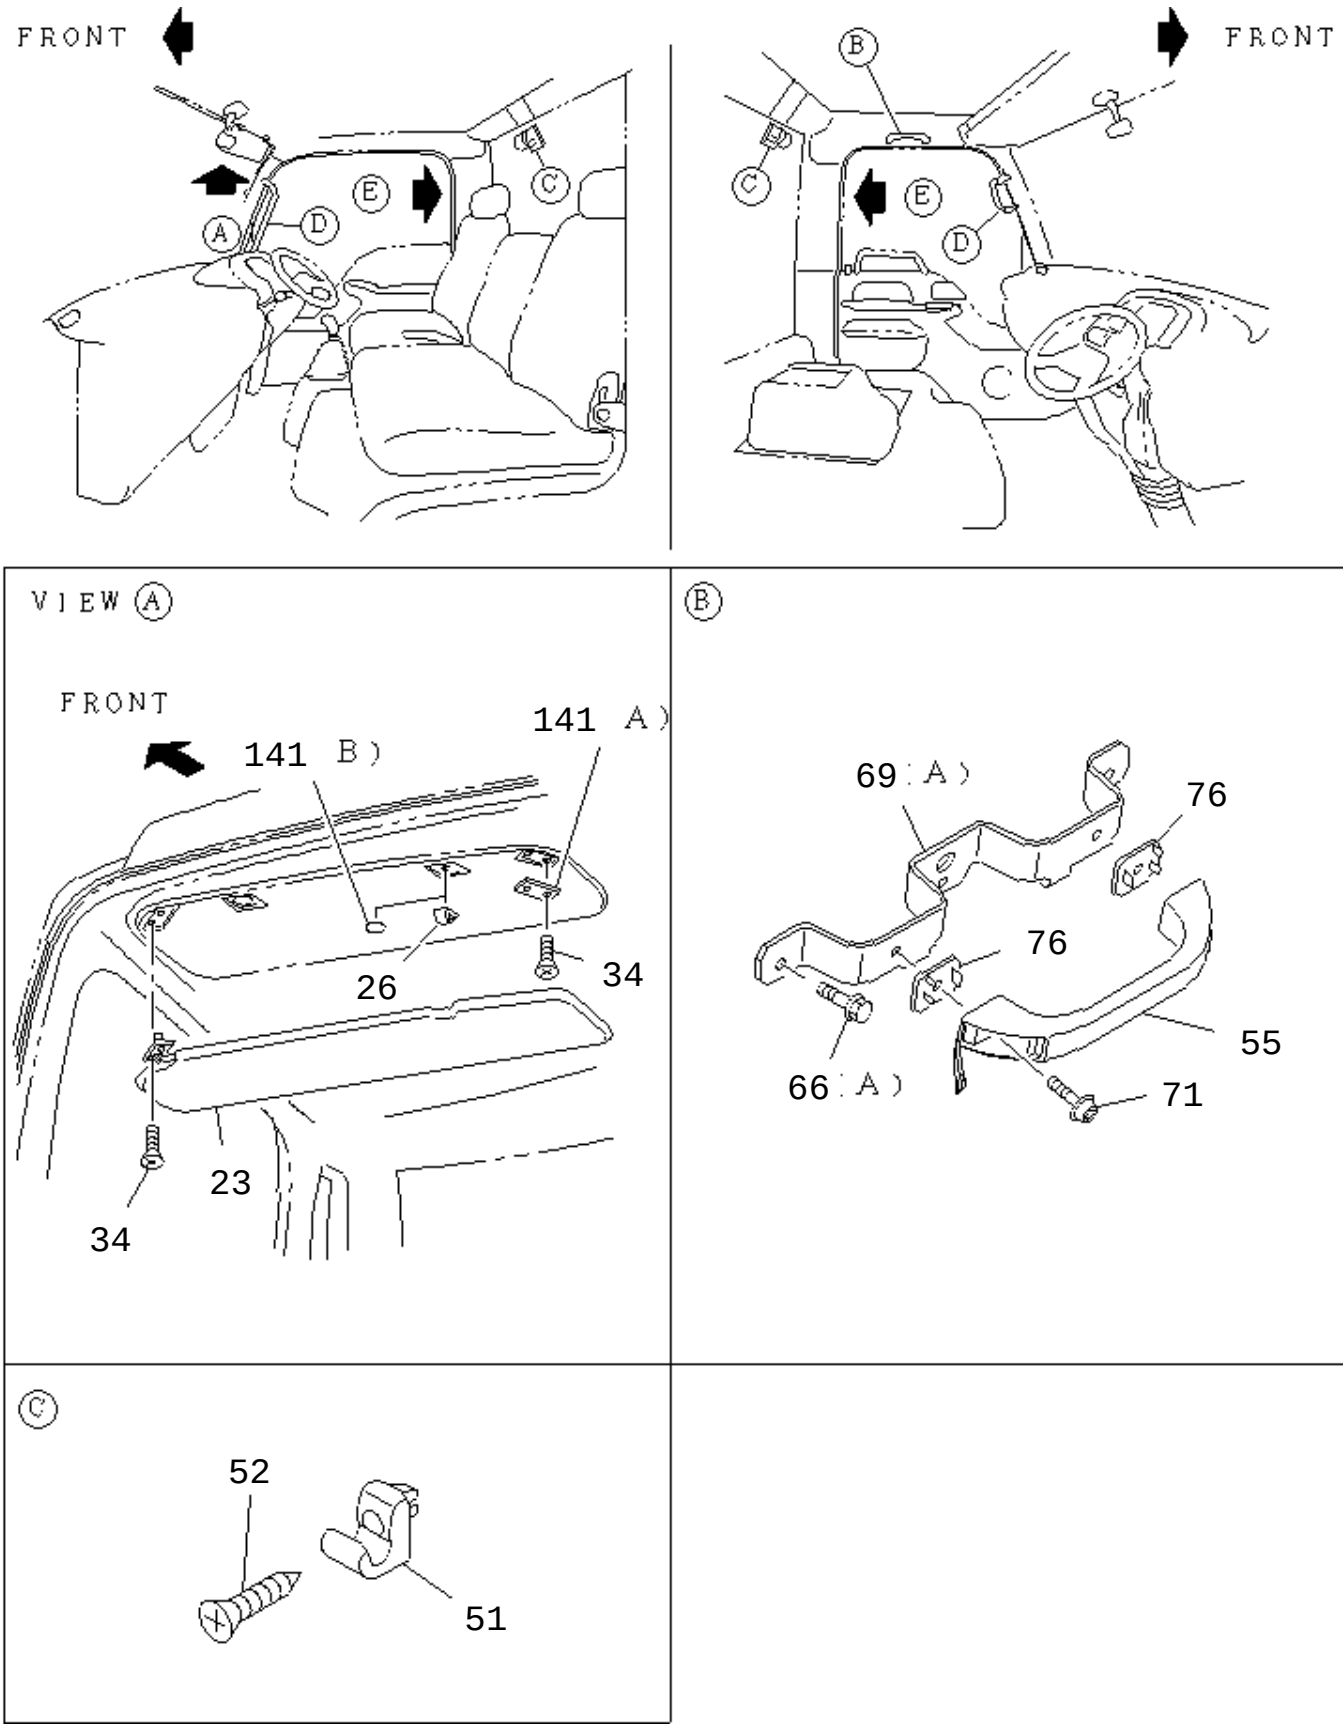


https://truckmanualshub.com/

ASSIST GRIP NO.1

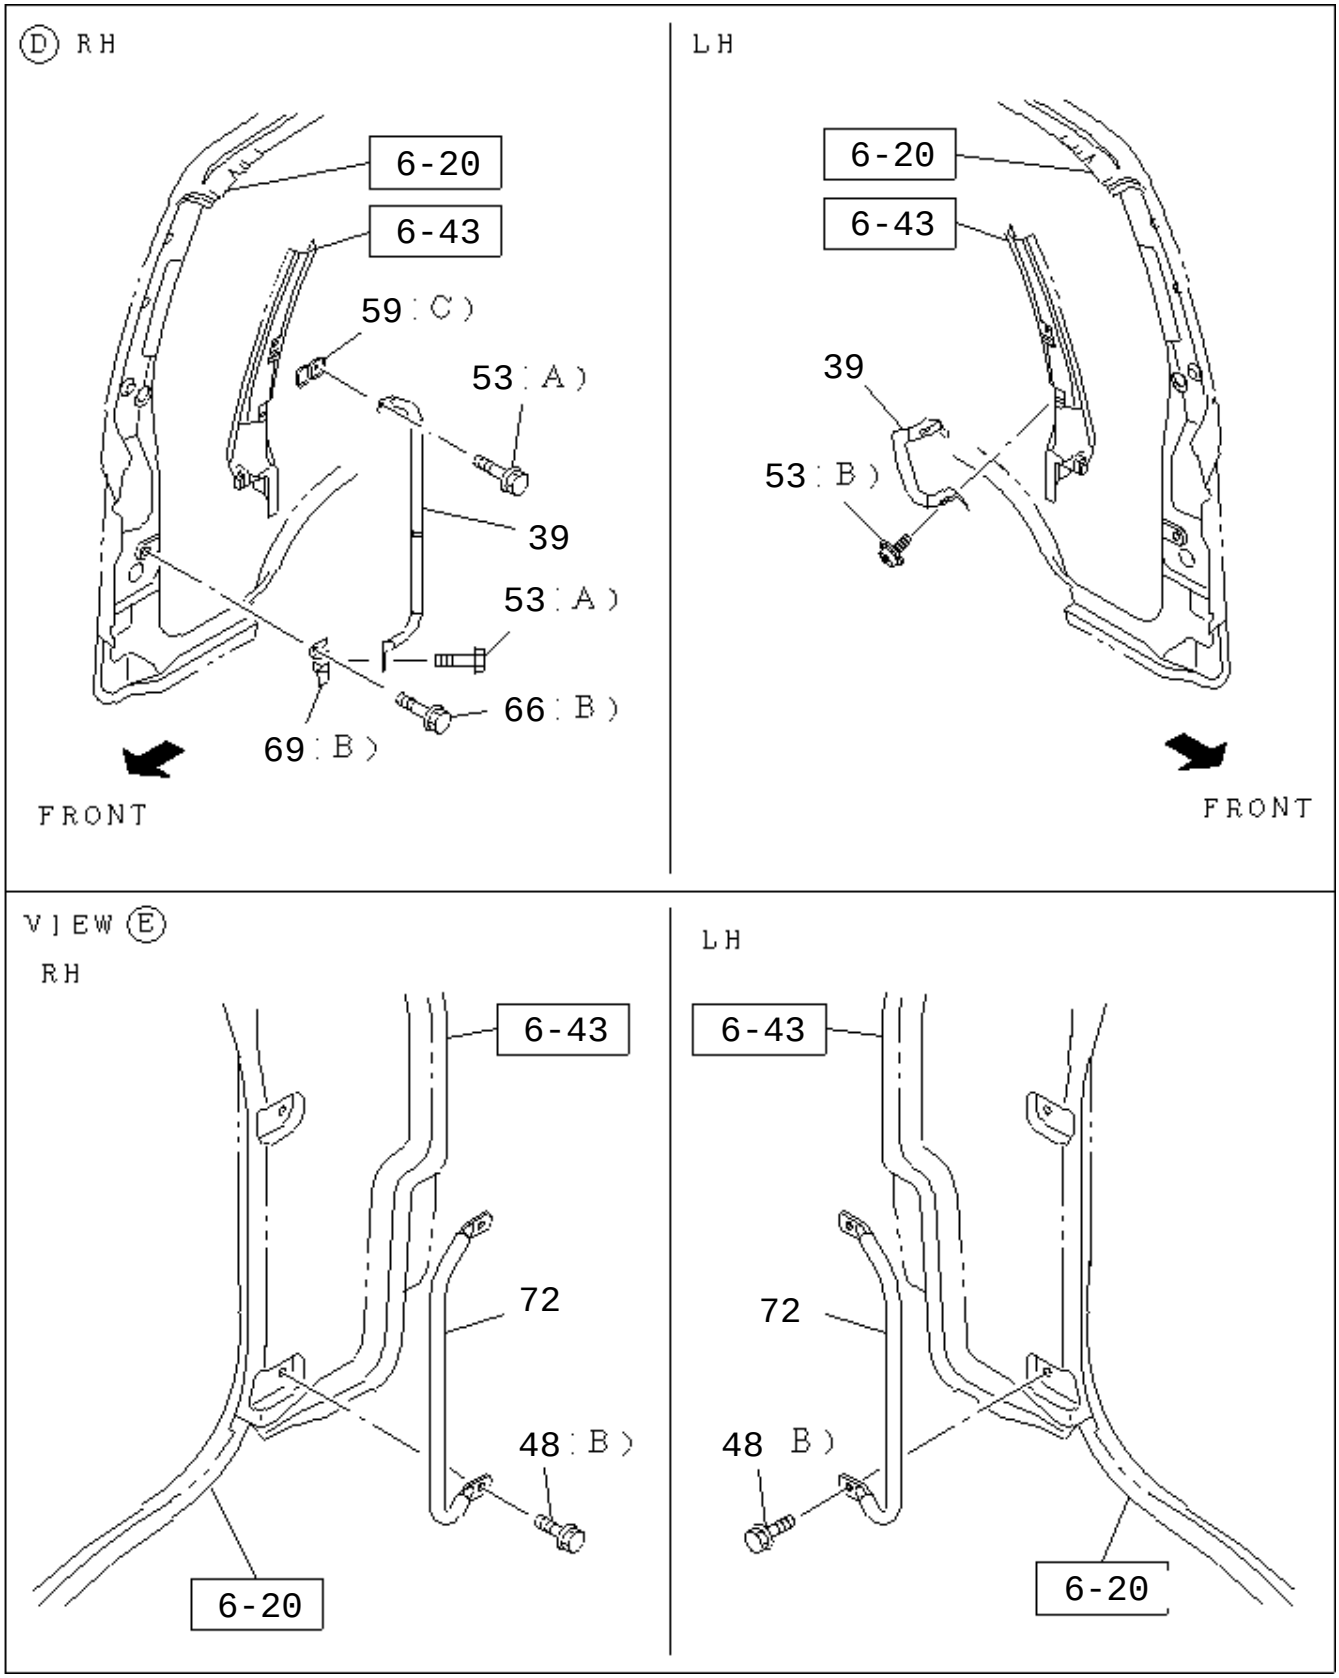

https://truckmanualshub.com/

ASSIST GRIP NO.2

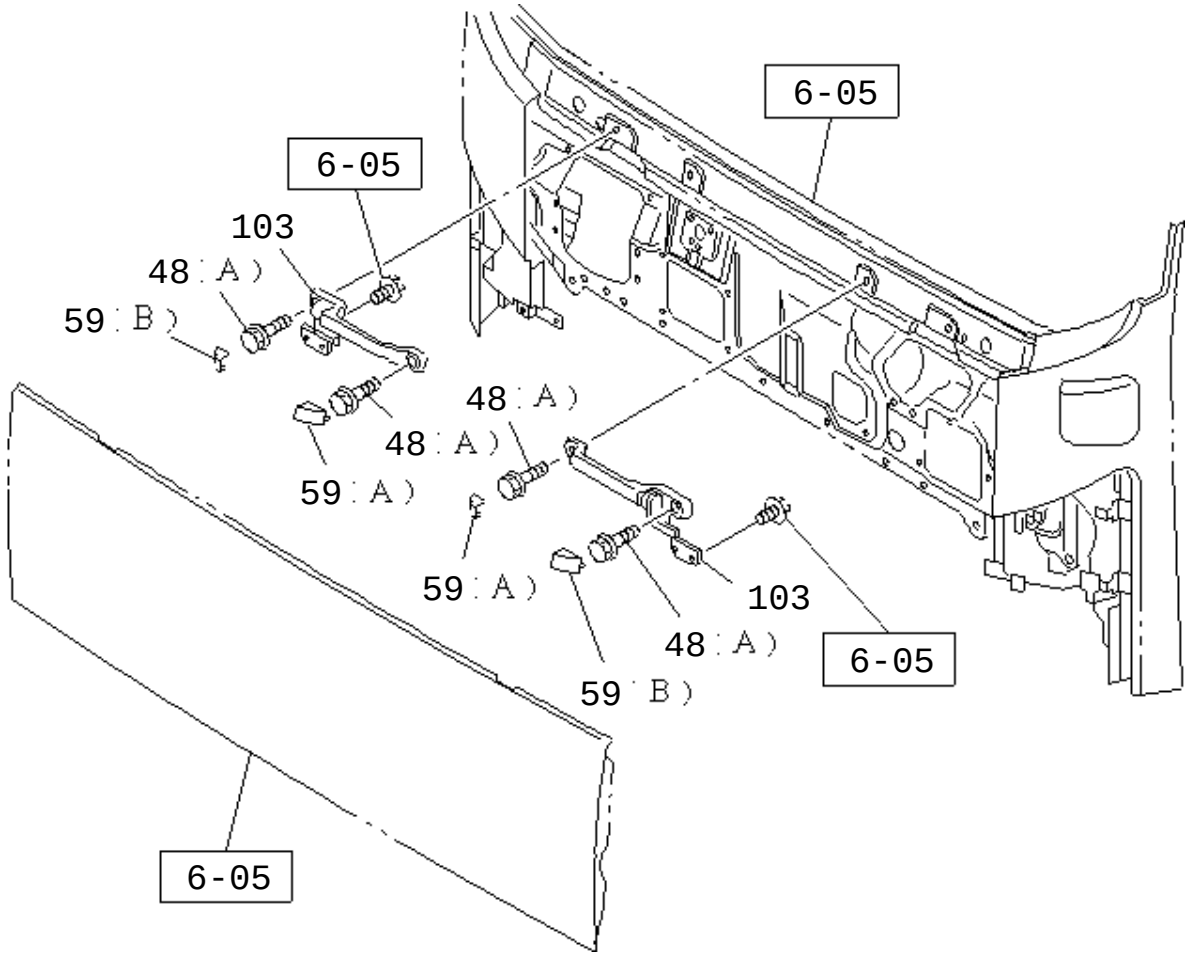

https://truckmanualshub.com/

7-43 SUN VISOR AND ASSIST GRIP

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
23		SUN VISOR						
		8-97407-373-2		1312-1403	R	01	A	DARK GRAY IDN
		8-97407-373-2		1404-	R	01	AB	DARK GRAY IDN
26		HOLDER; SUN VISOR						
		8-97405-171-0		1312-1403		01	A	DARK GRAY
		8-97405-171-0		1404-		01	AB	DARK GRAY
34		SCREW; SUN VISOR						
		8-98033-674-0		1312-1403		04	A	M6X26
		8-98033-674-0		1404-		04	AB	M6X26
39		HANDLE; ASSIST,A-POST						
		8-97405-249-2		1312-1403	L	01	A	DARK GRAY
		8-97405-249-2		1404-	L	01	AB	DARK GRAY
		8-97407-942-2		1312-1403	R	01	A	DARK GRAY IDN
		8-97407-942-2		1404-	R	01	AB	DARK GRAY IDN
48		BOLT; ASSIST GRIP						
		0-28060-816-0		1312-1403		04	A	(B) M8X16 FLANGE
		0-28060-816-0		1404-		04	AB	(B) M8X16 FLANGE
		0-28660-830-0		1312-1403		04	A	(A) M8X30 FLANGE
		0-28660-830-0		1404-		04	AB	(A) M8X30 FLANGE
51		HOOK; COAT HANGER						
		8-97409-845-0		1312-1403		02	A	DARK GRAY
		8-97409-845-0		1404-		02	AB	DARK GRAY
52		SCREW; HOOK						
		0-70540-420-0		1312-1403		02	A	M4X20 TAPPING OVAL-HEAD IDN
		0-70540-420-0		1404-		02	AB	M4X20 TAPPING OVAL-HEAD IDN
53		SCREW; ASSIST HANDLE						
		8-98004-344-0		1312-1403	L	02	A	(B) M6X28
		8-98004-344-0		1404-	L	02	AB	(B) M6X28
		0-28650-820-0		1312-1403	R	02	A	(A) M8X20 FLANGE IDN
		0-28650-820-0		1404-	R	02	AB	(A) M8X20 FLANGE IDN
55		GRIP; ASSIST,CAB SIDE UPR						
		8-97405-285-2		1312-1403		01	A	DARK GRAY
		8-97405-285-2		1404-		01	AB	DARK GRAY
59		COVER; ASSIST GRIP						

https://truckmanualshub.com/

SUN VISOR AND ASSIST GRIP

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
59		1-71998-789-2		1312-1403		02	A	
								(B)
		1-71998-789-2		1404-		02	AB	
								(B)
		1-71998-790-2		1312-1403		02	A	
								(A)
		1-71998-790-2		1404-		02	AB	
								(A)
		8-97407-417-1		1312-1403	R	01	A	
								(C)
								DARK GRAY
		8-97407-417-1		1404-	R	01	AB	
								(C)
								DARK GRAY
66		BOLT; ASSIST GRIP BRKT						
		0-28050-816-0		1312-1403		04	A	
								(B)
								M8X16 FLANGE
		0-28050-816-0		1404-		04	AB	
								(B)
								M8X16 FLANGE
		8-97108-669-0		1312-1403		03	A	
								(A)
								M6X12 FLANGE
		8-97108-669-0		1404-		03	AB	
								(A)
								M6X12 FLANGE
69		BRACKET; ASSIST GRIP						
		8-98014-094-0		1312-1403		01	A	
								(A)
		8-98014-094-0		1404-		01	AB	
								(A)
		8-98057-972-2		1312-1403	L	01	A	
								(B)
		8-98057-972-2		1404-	L	01	AB	
								(B)
		8-98057-971-2		1312-1403	R	01	A	
								(B)
		8-98057-971-2		1404-	R	01	AB	
								(B)
71		SCREW						
		8-98004-344-0		1312-1403		02	A	
								M6X28
		8-98004-344-0		1404-		02	AB	
								M6X28
72		GRIP; ASSIST,CAB ENTRY,BACK						
		8-98084-136-1		1402-	R	01	A	MIXER CHASSIS<6NR>
		8-98084-137-1		1402-	L	01	A	MIXER CHASSIS<6NR>
								IDN
		8-97386-939-0		1312-1401		02	A	
								IDN
		8-97386-939-0		1402-1403		02	A	EXC. MIXER CHASSIS<6NR>
								IDN
		8-97386-939-0		1404-		02	A	EXC. MIXER CHASSIS<6NR>
								IDN
		8-97386-939-0		1404-		02	B	
								IDN
76		SPACER; ASSIST GRIP						
		8-97405-286-0		1312-1403		02	A	
								DARK GRAY
		8-97405-286-0		1404-		02	AB	
								DARK GRAY
103		GRIP; ASSIST,FRT PNL						
		8-98036-565-1		1312-1403	L	01	A	
		8-98036-565-1		1404-	L	01	AB	
		8-98036-566-1		1312-1403	R	01	A	
		8-98036-566-1		1404-	R	01	AB	
141		COVER; SUN VISOR						
		8-97408-029-0		1312-1403		01	A	
								(A)
								L=66 B=30 DARK GRAY
		8-97408-029-0		1404-		01	AB	
								(A)
								L=66 B=30 DARK GRAY

https://truckmanualshub.com/

7-43 SUN VISOR AND ASSIST GRIP


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
141		8-97408-030-0		1312-1401		01	A	(B) OD=30 T=0.05 DARK GRAY
		8-97408-030-0		1402-1403		02	A	(B) OD=30 T=0.05 DARK GRAY
		8-97408-030-0		1404-		02	AB	(B) OD=30 T=0.05 DARK GRAY
330		LID; HEADER SHELF						
		8-97407-834-1		1312-1403	R	01	A	DARK GRAY
		8-97407-834-1		1404-	R	02	AB	DARK GRAY
336		STAY; LID						
		1-72448-379-3		1312-1403	R	02	A	
		1-72448-379-3		1404-	R	02	AB	
340		LOCK; HEADER SHELF						
		1-72448-376-0		1312-1403	R	01	A	
		1-72448-376-0		1404-	R	01	AB	
341		HINGE; LID,HEADER SHELF						
		8-98025-428-2		1312-1403	R	02	A	
		8-98025-428-2		1404-	R	02	AB	
344		BOLT; BRKT,FRT						
		8-97108-669-0		1404-		02	AB	M6X12 FLANGE
		8-97108-669-0		1312-1403		10	A	M6X12 FLANGE
		8-97108-669-0		1404-	R	08	AB	M6X12 FLANGE
354		TRAY; HEADER ROOF						
		8-97407-386-5	C	1312-1401	R	01	A	DARK GRAY
		8-97428-821-0		1402-1403	R	01	A	DARK GRAY
		8-97428-821-0		1404-	R	01	AB	DARK GRAY
355		SCREW; TRAY						
		0-72380-516-0		1312-1403	R	04	A	M5X16 HEX SOCKET IDN
		0-72380-516-0		1404-	R	04	AB	M5X16 HEX SOCKET IDN
356		BRACKET; ROOF OUTER						
		8-97386-874-1		1312-1403	R	01	A	(A)
		8-97386-874-1		1404-	R	01	AB	(A)
		8-98010-059-0		1312-1403	R	01	A	(B)
		8-98010-059-0		1404-	R	01	AB	(B)
		8-98014-088-3		1312-1403	R	01	A	(C)
		8-98014-088-3		1404-	R	01	AB	(C)
		8-98023-257-2		1312-1403	R	01	A	(D)
		8-98023-257-2		1404-	R	01	AB	(D)
		8-98042-015-3		1312-1403	R	01	A	(E)
		8-98042-015-3		1404-	R	01	AB	(E)
359		HOLDER; HEADER TRAY						
		8-98041-754-0		1312-1403	R	04	A	
		8-98041-754-0		1404-	R	04	AB	
364		STOPPER; LID						
		8-98010-867-1		1312-1403	R	03	A	IDN
		8-98010-867-1		1404-	R	03	AB	IDN
6-20		Move to 6-20						

https://truckmanualshub.com/

7-43 SUN VISOR AND ASSIST GRIP

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
6-43 6-05		Move to 6-43 Move to 6-05						

https://truckmanualshub.com/

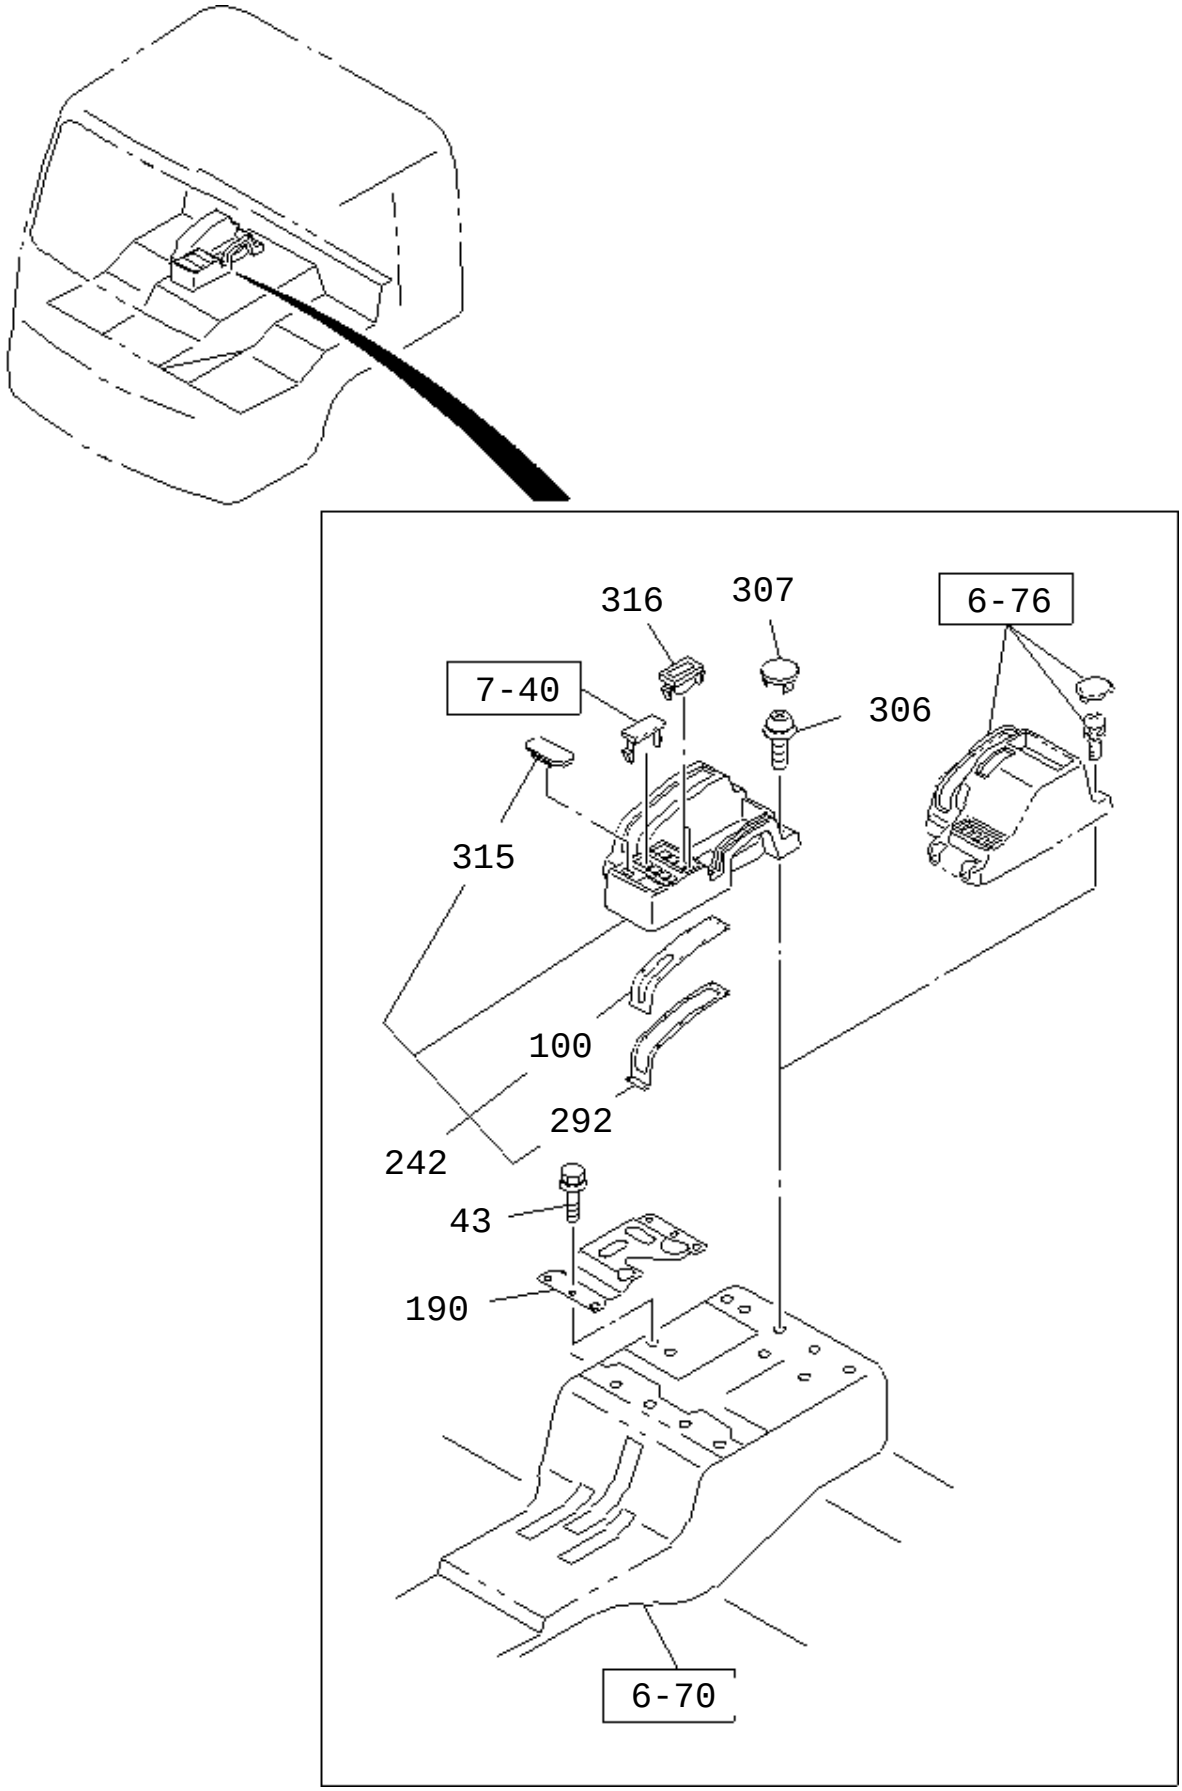


https://truckmanualshub.com/


7-45 CONSOLE BOX

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
43		SCREW; BRKT,PARCEL BOX					
		8-94279-201-0		1312-	02	A	
							M6X19.5 W/LK&PL WASHER
100		RUBBER; CONSOLE,FRT					
		1-72538-161-3		1312-1403	01	A	
		1-72538-161-3		1404-	01	AB	
190		BRACKET; PARCEL BOX,SEAT SIDE					
		8-98059-836-0		1312-	01	A	
242		TRAY ASM; CTR CONSOLE					
		8-97407-950-1		1312-	01	A	
							GRAY
292		RETAINER; COVER					
		1-72538-162-1		1312-1403	01	A	
		1-72538-162-1		1404-	01	AB	
306		SCREW; TRAY					
		0-38050-616-0		1312-	04	A	
							M6X16 IDN
307		COVER; HOLE,CTR CONSOLE					
		8-97407-951-0		1312-	04	A	
							GRAY
315		COVER; HOLE,SW					
		8-97409-339-0		1312-	01	A	
							GRAY
316		BOX; COIN					
		8-94482-280-2		1312-	02	A	
6-70		Move to 6-70					
6-76		Move to 6-76					
7-40		Move to 7-40					


https://truckmanualshub.com/

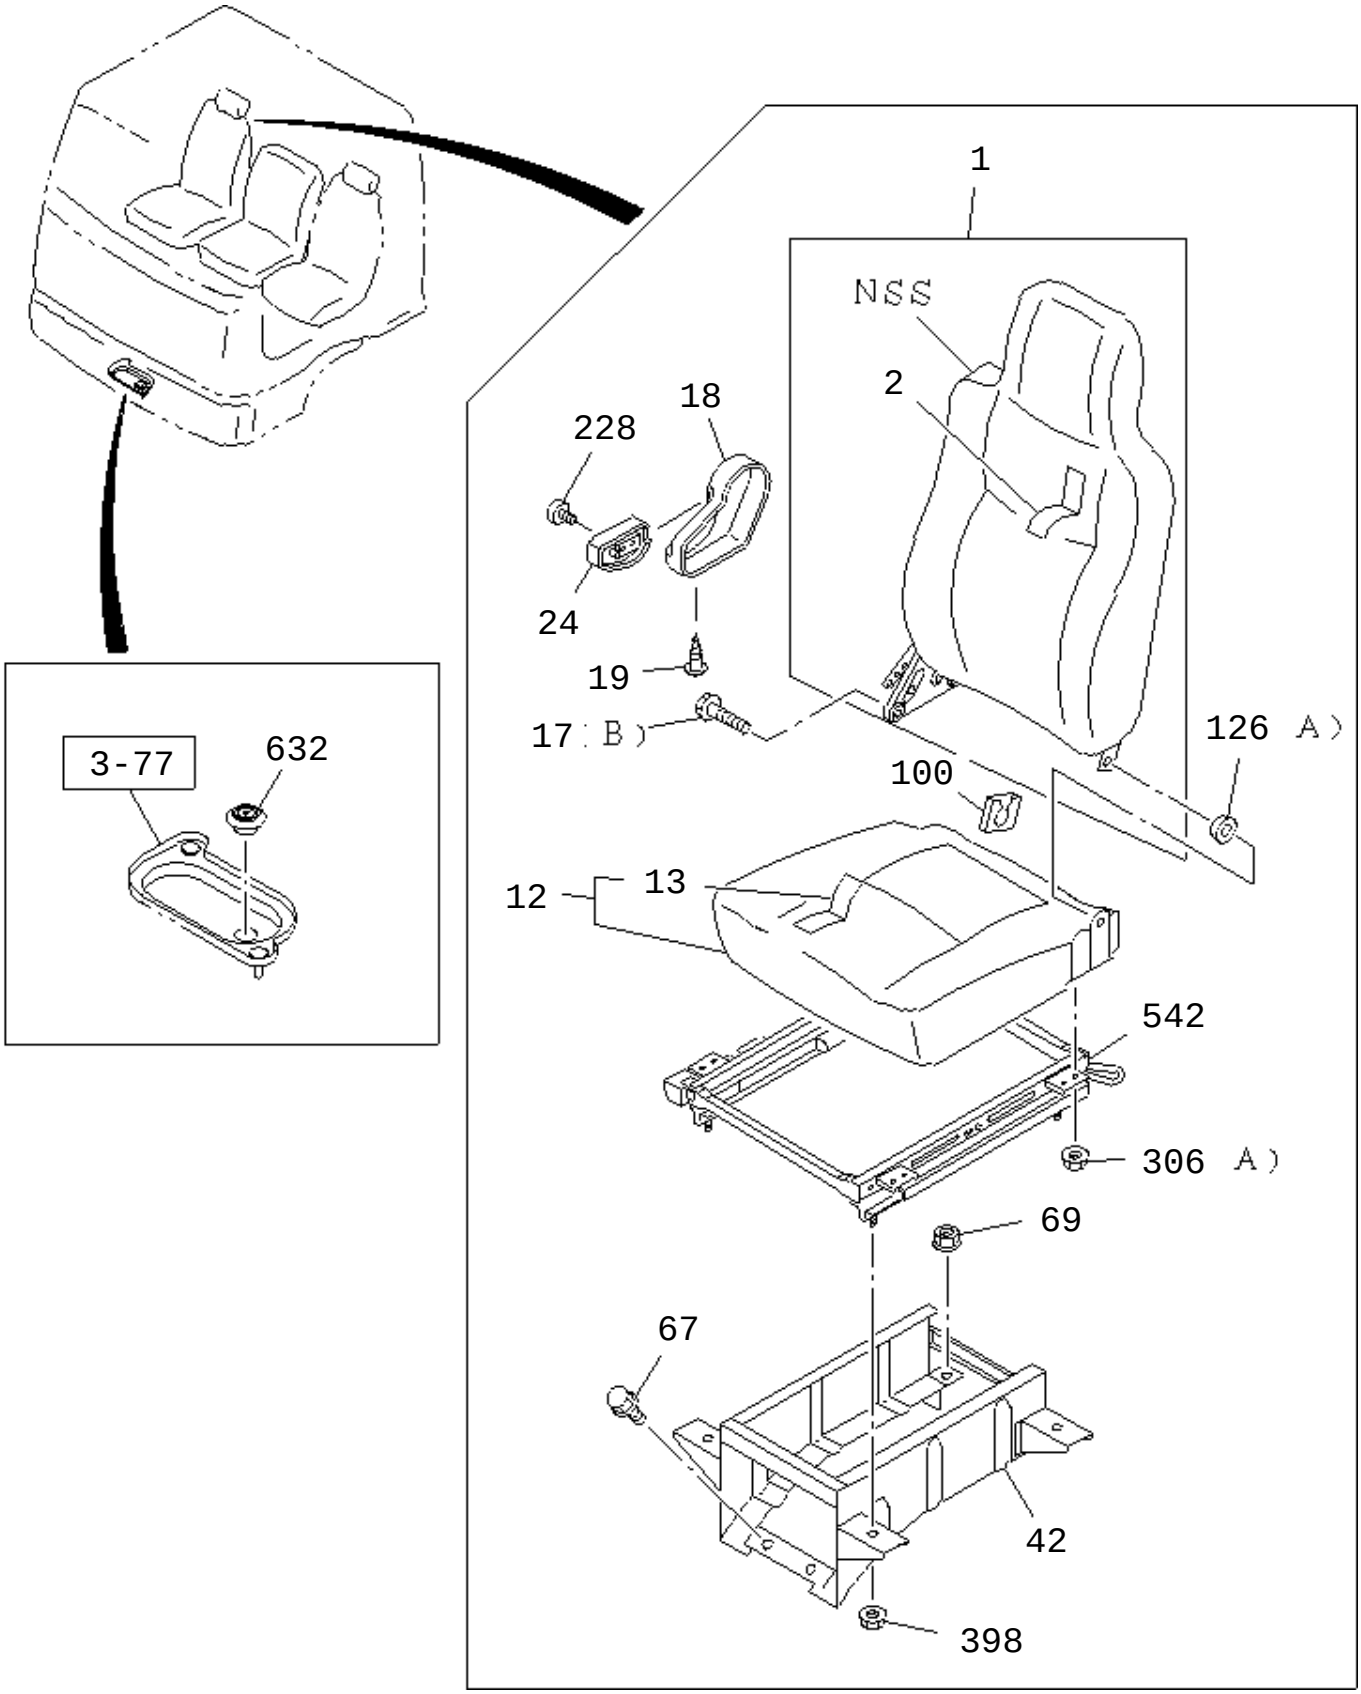


https://truckmanualshub.com/

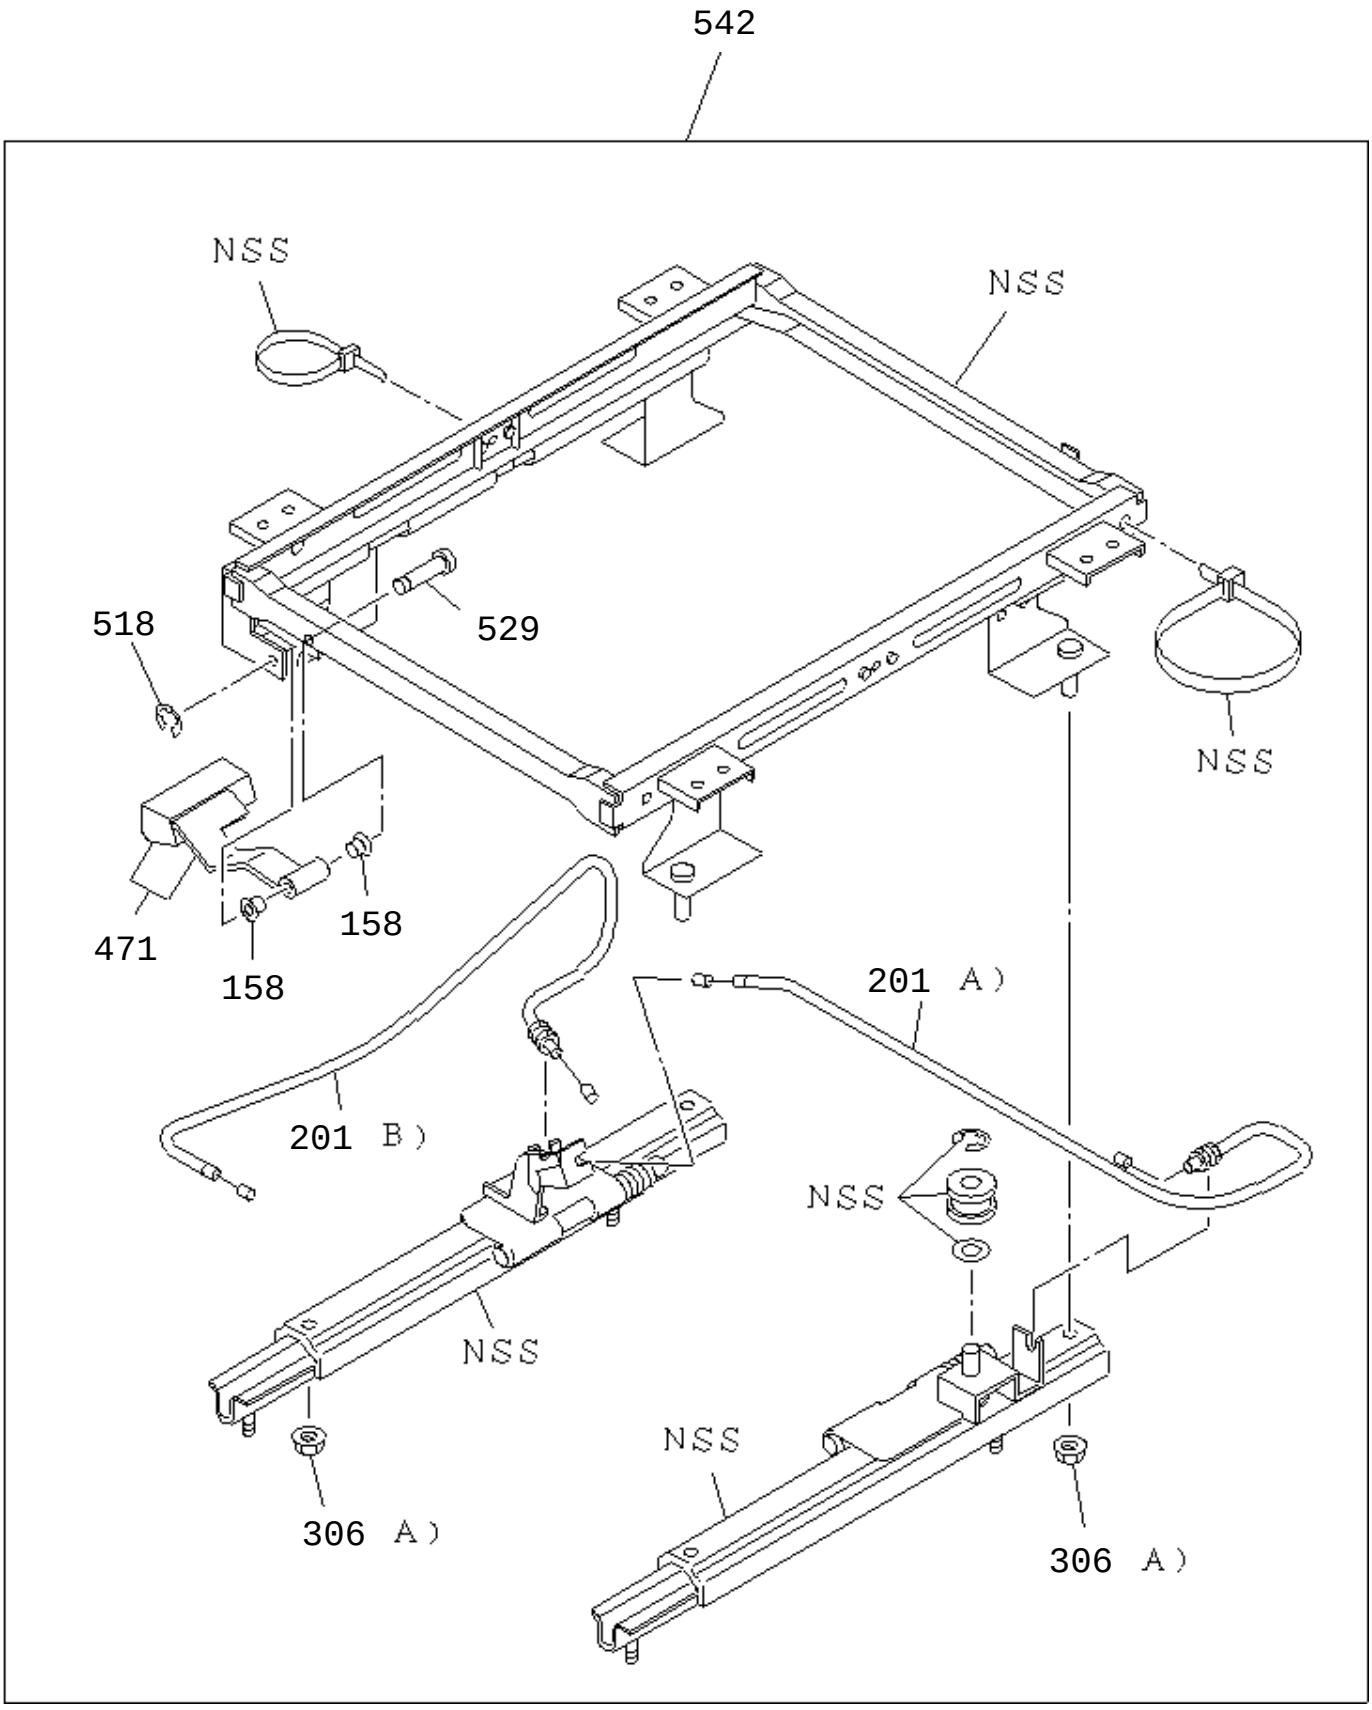


https://truckmanualshub.com/

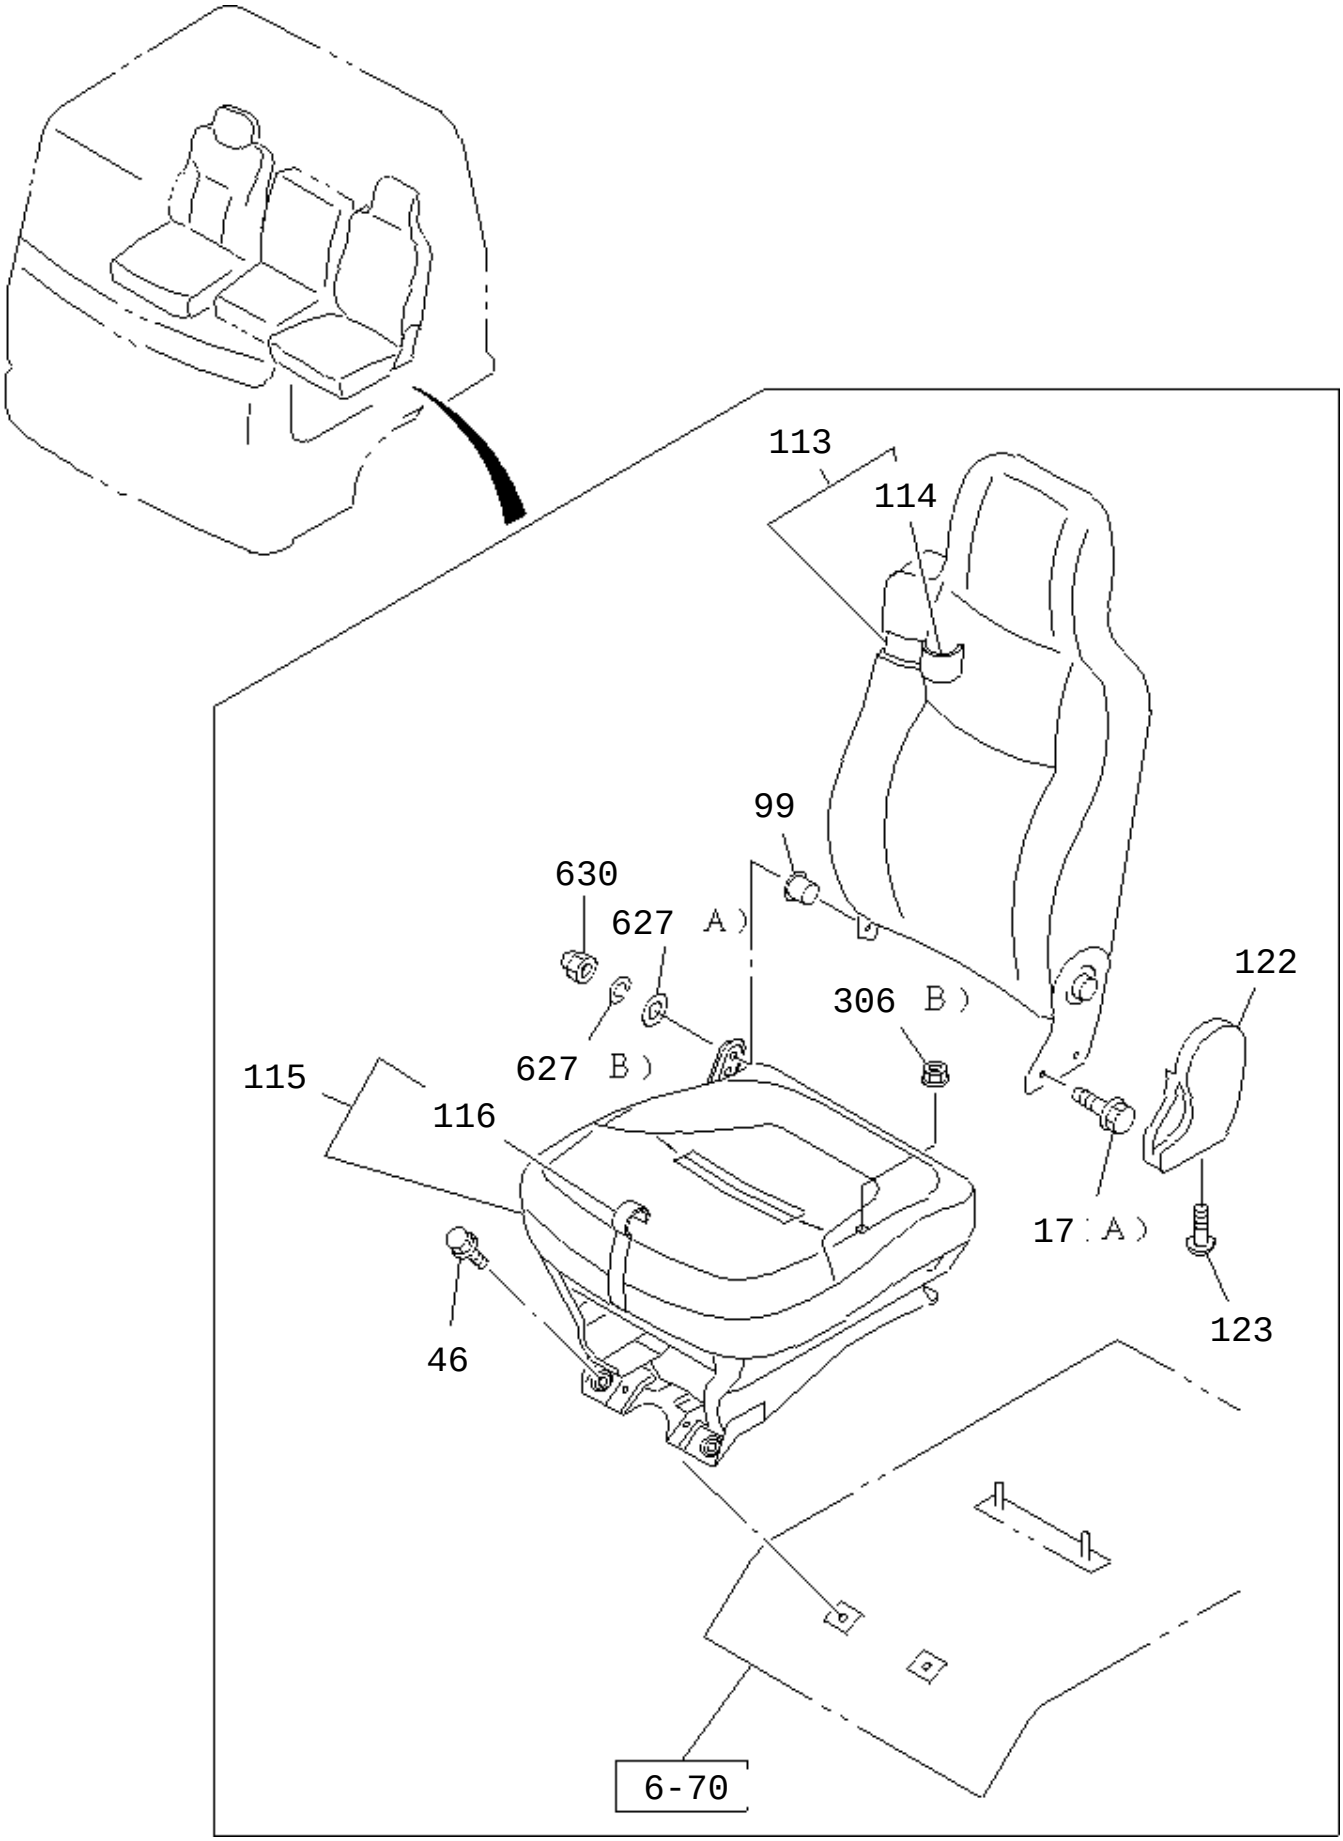


https://truckmanualshub.com/

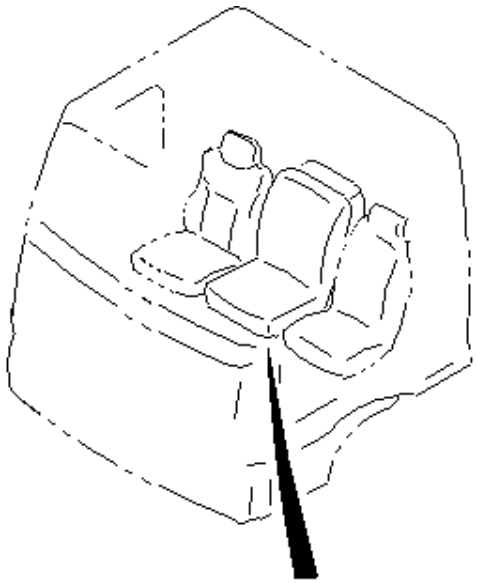

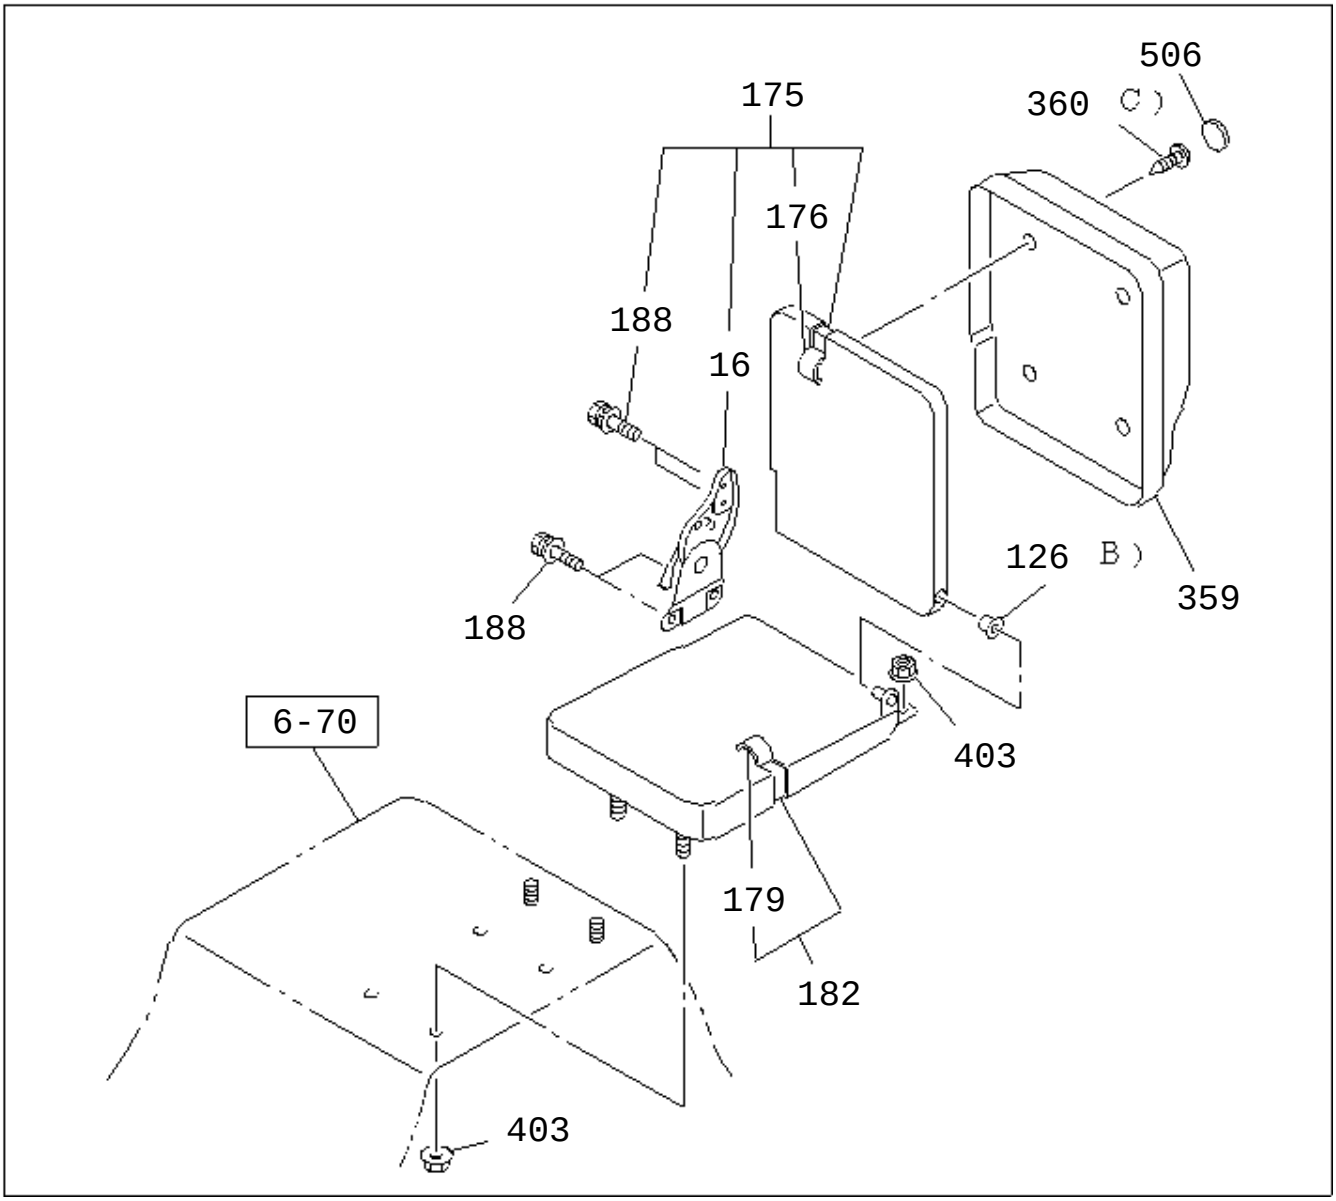

https://truckmanualshub.com/

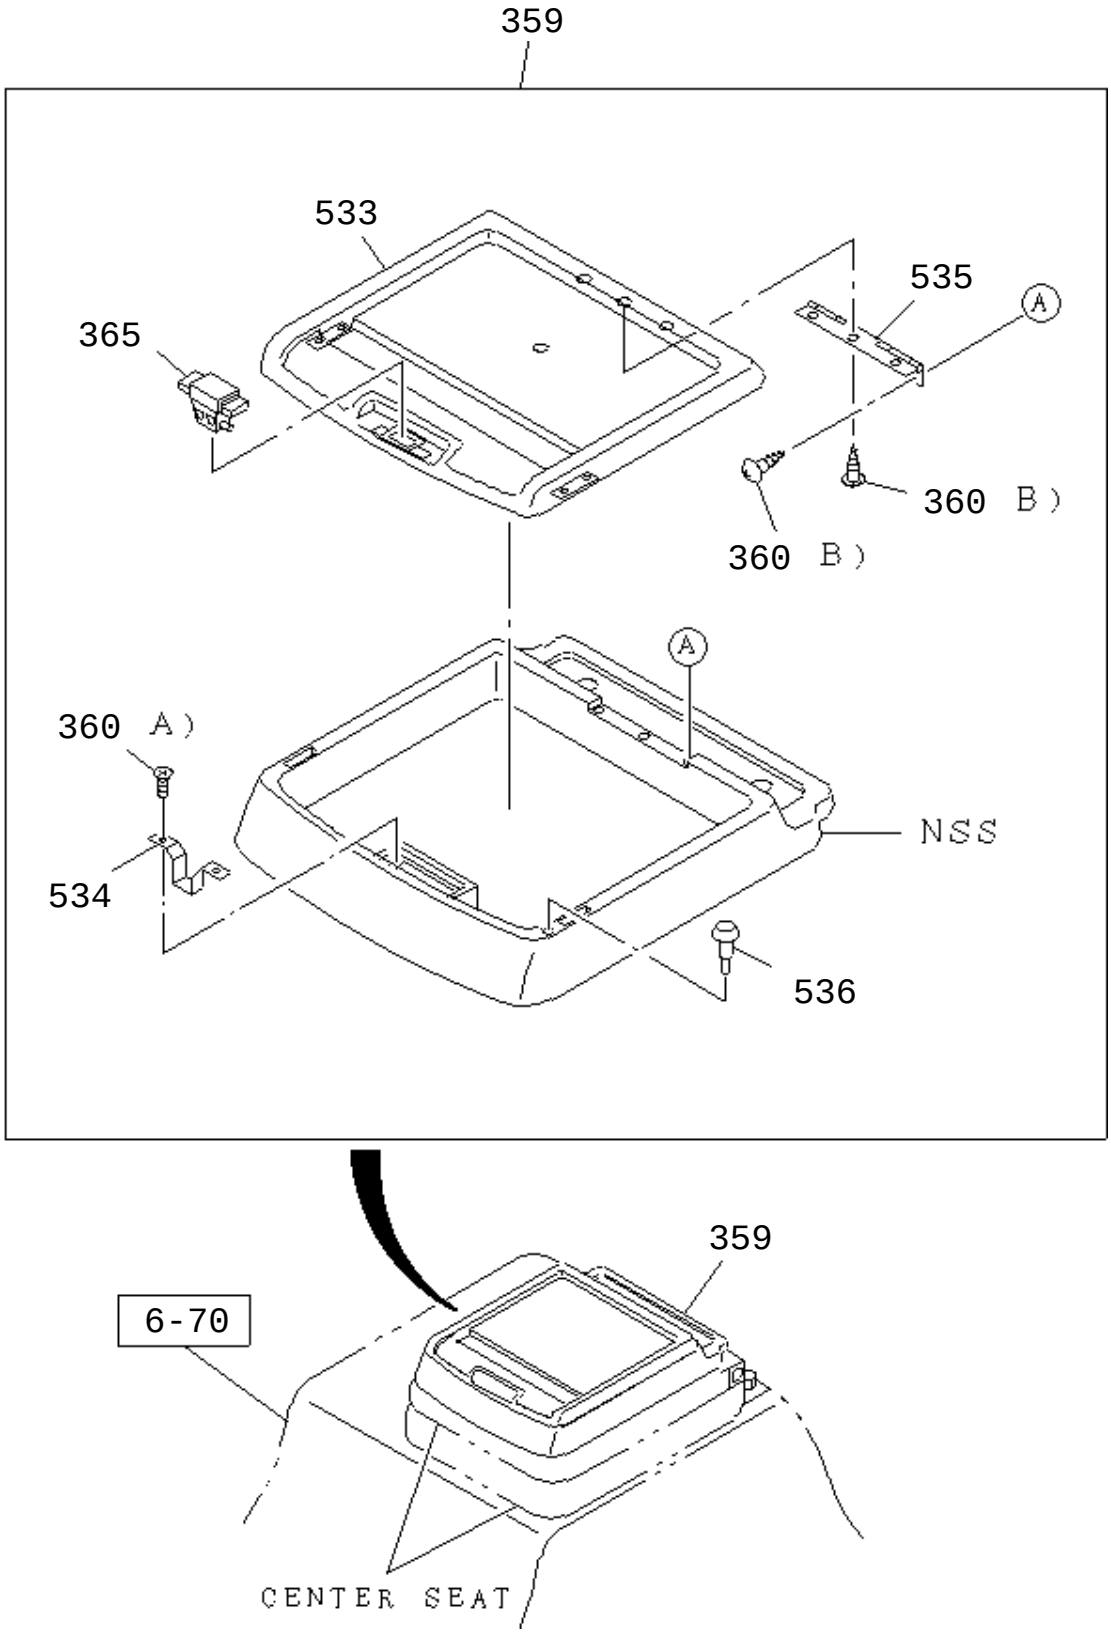

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		BACK ASM; SEAT					
		8-97409-955-5		1312-1403	01	A	DARK GRAY IDN
		8-97409-955-5		1404-	01	AB	DARK GRAY IDN
2		COVER; TRIM,FRT SEAT,BACK					
		8-97411-910-2		1312-1403	01	A	DARK GRAY
		8-97411-910-2		1404-	01	AB	DARK GRAY
12		CUSHION; SEAT,FRT					
		8-97409-954-1		1312-1403	01	A	DARK GRAY
		8-97409-954-2		1404-	01	AB	DARK GRAY
13		COVER; TRIM,FRT SEAT,CUSHION					
		8-97411-909-0		1312-1403	01	A	DARK GRAY
		8-97411-909-1		1404-	01	AB	DARK GRAY
16		ADJUSTER ASM; RECLINING					
		1-75418-062-1		1312-1403	01	A	
		1-75418-062-1		1404-	01	AB	
17		BOLT; RECLINING					
		8-98062-661-0		1312-1403	02	A	(B) M10X20
		8-98062-661-0		1404-	02	AB	(B) M10X20
		8-98092-334-0		1312-1403	02	A	(A)
		8-98092-334-0		1404-	02	AB	(A)
18		COVER; RECLINING					
		8-97409-332-0		1312-1403	01	A	GRAY
		8-97409-332-0		1404-	01	AB	GRAY
19		SCREW; COVER					
		8-98062-663-0		1312-1403	01	A	M5
		8-98062-663-0		1404-	01	AB	M5
24		KNOB; RECLINING,FRT,SEAT					
		8-97409-333-0		1312-1403	01	A	GRAY
		8-97409-333-0		1404-	01	AB	GRAY
42		STAND; DRIVER SEAT					
		1-75558-604-1		1312-1403	01	A	
		1-75558-604-2		1404-	01	AB	IDN
46		BOLT; STAND TO FLOOR					
		0-28451-020-0		1312-1403	02	A	M10X20 FLANGE
		0-28451-020-0		1404-	02	AB	M10X20 FLANGE
67		BOLT; FRT SEAT TO BODY					
		0-28451-020-0		1312-1403	02	A	M10X20 FLANGE
		0-28451-020-0		1404-	02	AB	M10X20 FLANGE
69		NUT; FRT SEAT					
		0-91180-110-0		1312-1403	02	A	M10 FLANGE
		0-91180-110-0		1404-	02	AB	M10 FLANGE
99		BUSHING; SEAT BACK					
		8-98112-751-0		1312-1403	01	A	
		8-98112-751-0		1404-	01	AB	
100		COVER; HINGE					

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
100		8-98203-070-0		1312-1403	01	A	
		8-98203-070-0		1404-	01	AB	
113		BACK ASM; SEAT					
		8-97409-966-1		1312-1403	01	A	DARK GRAY
		8-97409-966-1		1404-	01	AB	DARK GRAY
114		COVER; TRIM,PASSENGER SEAT,BACK					
		8-97411-916-0		1312-1403	01	A	DARK GRAY
		8-97411-916-0		1404-	01	AB	DARK GRAY
115		CUSHION ASM; PASSENGER SEAT					
		8-97409-965-0		1312-1403	01	A	DARK GRAY
		8-97409-965-0		1404-	01	AB	DARK GRAY
116		COVER; TRIM,PASSENGER SEAT,CUSHION					
		8-97411-915-0		1312-1403	01	A	DARK GRAY
		8-97411-915-0		1404-	01	AB	DARK GRAY
122		COVER; ADJ,RECLINING					
		8-97409-967-0		1312-1403	01	A	GRAY
		8-97409-967-0		1404-	01	AB	GRAY
123		SCREW; COVER,RECLINING					
		8-98070-026-0		1312-1403	01	A	
		8-98070-026-0		1404-	01	AB	
126		BUSHING; HINGE,RECLINING					
		8-97854-900-0		1312-1403	01	A	(B)
		8-97854-900-0		1404-	01	AB	(B)
		8-98063-218-0		1312-1403	01	A	(A)
		8-98063-218-0		1404-	01	AB	(A)
158		BUSHING; LINK ARM					
		1-75518-209-0		1312-1403	02	A	IDN
		1-75518-209-0		1404-	02	AB	IDN
175		BACK ASM; PASSENGER CENTER SEAT					
		8-97409-975-1		1312-1403	01	A	DARK GRAY
		8-97409-975-1		1404-	01	AB	DARK GRAY
176		COVER; TRIM,PASSENGER SEAT CENTER,BACK					
		8-97409-976-1		1312-1403	01	A	DARK GRAY
		8-97409-976-1		1404-	01	AB	DARK GRAY
179		COVER; TRIM,PASSENGER SEAT CENTER,CUSH					
		8-97409-974-0		1312-1403	01	A	DARK GRAY
		8-97409-974-1		1404-	01	AB	DARK GRAY
182		CUSHION ASM; CENTER SEAT					
		8-97409-973-2		1312-1403	01	A	DARK GRAY
		8-97409-973-3		1404-	01	AB	DARK GRAY
188		BOLT; BACK TO CUSHION					
		1-75198-053-0		1312-1403	04	A	M10X16 FLANGE
		1-75198-053-0		1404-	04	AB	M10X16 FLANGE
201		CABLE; ADJ					
		1-75518-288-0		1312-1403	01	A	(A) L=667 IDN

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
201		1-75518-288-0		1404-	01	AB	(A) L=667 IDN
		1-75518-289-1		1312-1403	01	A	(B) L=605 IDN
		1-75518-289-1		1404-	01	AB	(B) L=605 IDN
228		SCREW; KNOB					
		8-98062-662-0		1312-1403	01	A	M4
		8-98062-662-0		1404-	01	AB	M4
306		NUT; SEAT ADJ					
		0-91180-110-0		1312-1403	02	A	(B) M10 FLANGE
		0-91180-110-0		1404-	02	AB	(B) M10 FLANGE
		1-75538-207-0		1312-1403	08	A	(A) M8 FLANGE
		1-75538-207-0		1404-	08	AB	(A) M8 FLANGE
359		BOX; PARCEL					
		8-97417-261-0		1312-1403	01	A	GRAY
		8-97417-261-0		1404-	01	AB	GRAY
360		SCREW; PARCEL					
		0-70040-416-0		1312-1403	06	A	(B) M4X16
		0-70040-416-0		1404-	06	AB	(B) M4X16
		0-70040-514-0		1312-1403	02	A	(A) M5X14 TAPPING CK-HEAD
		0-70040-514-0		1404-	02	AB	(A) M5X14 TAPPING CK-HEAD
		8-98062-663-0		1312-1403	04	A	(C) M5
		8-98062-663-0		1404-	04	AB	(C) M5
365		LOCK ASM; SEAT					
		1-72538-312-0		1312-1403	01	A	
		1-72538-312-0		1404-	01	AB	
398		NUT; STAND					
		1-75538-207-0		1312-1403	04	A	M8 FLANGE
		1-75538-207-0		1404-	04	AB	M8 FLANGE
403		NUT; CENTER SEAT					
		0-91180-108-0		1312-1403	04	A	M8 FLANGE
		0-91180-108-0		1404-	04	AB	M8 FLANGE
471		LEVER; SEAT ADJ					
		8-98107-869-0		1312-1403	01	A	
		8-98107-869-0		1404-	01	AB	
506		CAP; PARCEL BOX					
		8-97409-980-1		1312-1403	02	A	GRAY

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
506		8-97409-980-1		1404-	02	AB	GRAY
518		NUT; TILT ADJ					
		1-75518-263-0		1312-1403	01	A	IDN
		1-75518-263-0		1404-	01	AB	IDN
529		PIN; LINK					
		1-75518-262-0		1312-1403	01	A	IDN
		1-75518-262-0		1404-	01	AB	IDN
533		LID; PARCEL BOX					
		8-97417-263-0		1312-1403	01	A	GRAY
		8-97417-263-0		1404-	01	AB	GRAY
534		STRIKER; PARCEL BOX					
		1-72538-190-0		1312-1403	01	A	
		1-72538-190-0		1404-	01	AB	
535		HINGE; PARCEL BOX					
		1-72447-391-1		1312-1403	01	A	
		1-72447-391-1		1404-	01	AB	
536		RUBBER; CUSHION					
		1-72538-187-0		1312-1403	02	A	
		1-72538-187-0		1404-	02	AB	
542		ADJUSTER ASM; SEAT SLIDE					
		8-98093-310-0		1312-1403	01	A	
		8-98093-310-0		1404-	01	AB	
627		WASHER; FRT SEAT					
		8-98063-223-0		1312-1403	01	A	(A)
		8-98063-223-0		1404-	01	AB	(A)
		8-98063-224-0		1312-1403	01	A	(B)
		8-98063-224-0		1404-	01	AB	(B)
630		NUT; CAP					
		8-98063-225-0		1312-1403	01	A	M8
		8-98063-225-0		1404-	01	AB	M8
632		GROMMET					
		8-94119-796-0		1312-1403	01	A	OD=24
		8-94119-796-0		1404-	01	AB	OD=24
3-77		Move to 3-77					
6-70		Move to 6-70					

https://truckmanualshub.com/

DRIVER

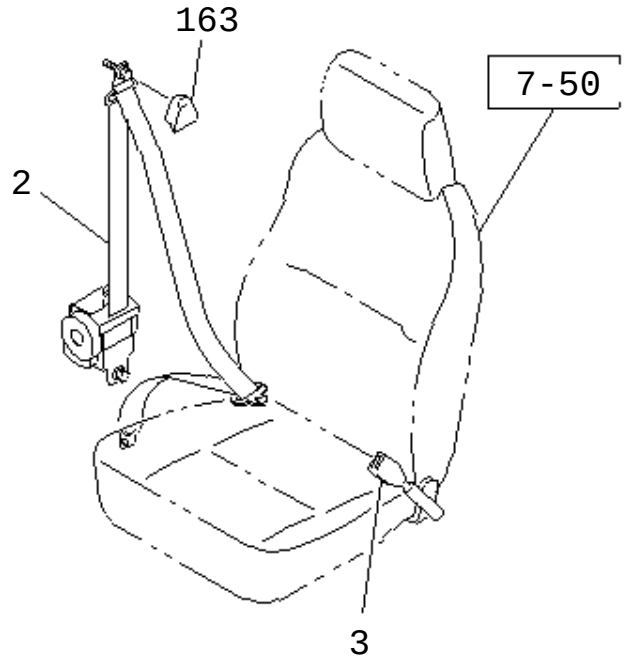

PASSENGER AND CENTER

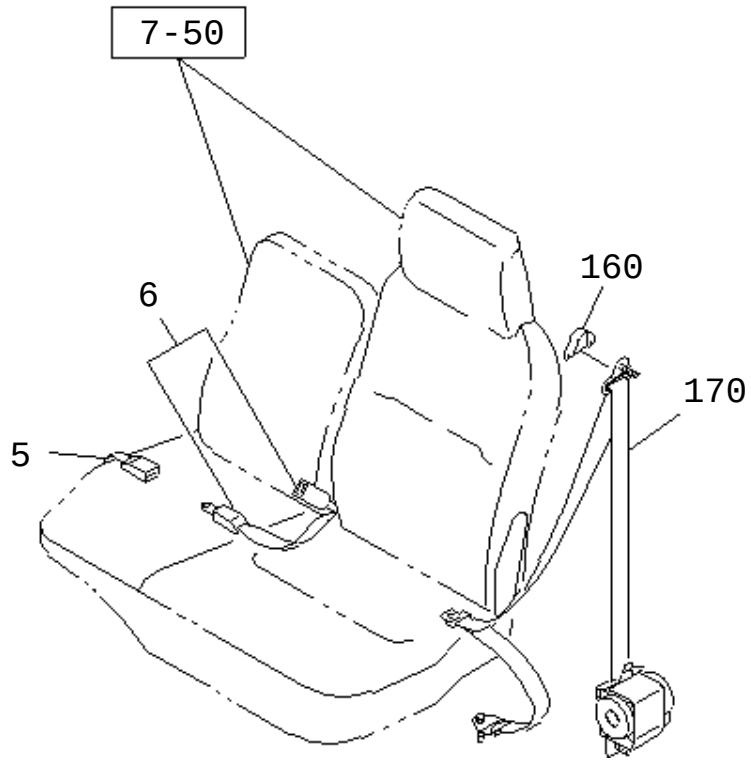



https://truckmanualshub.com/


7-60 SEAT BELT

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
2		BELT; SEAT,TONGUE SIDE					
		8-97423-516-1		1312-1403	01	A	GRAY
		8-97423-516-1		1404-1407	01	AB	GRAY
		8-97428-435-0		1408-	01	AB	GRAY IDN
3		BELT; SEAT,BUCKLE SIDE					
		8-97407-375-4		1312-1403	01	A	GRAY IDN
		8-97407-375-4		1404-	01	AB	GRAY IDN
5		BELT; CENTER SEAT,BUCKLE SIDE					
		8-97407-377-1		1312-1403	01	A	GRAY IDN
		8-97407-377-1		1404-	01	AB	GRAY IDN
6		BELT; CENTER SEAT,TONGUE SIDE					
		8-97423-515-1		1312-1403	01	A	GRAY
		8-97423-515-1		1404-	01	AB	GRAY
160		COVER; THROUGH ANCHOR					
		8-97405-991-0		1312-1403	01	A	GRAY IDN
		8-97405-991-0		1404-	01	AB	GRAY IDN
163		COVER; ADJUSTER					
		8-97405-991-0		1312-1403	01	A	GRAY IDN
		8-97405-991-0		1404-	01	AB	GRAY IDN
170		BELT; PASSENGER SEAT,TONGUE SIDE					
		8-97423-516-1		1312-1403	01	A	GRAY
		8-97423-516-1		1404-1407	01	AB	GRAY
		8-97428-435-0		1408-	01	AB	GRAY IDN
7-50		Move to 7-50					

https://truckmanualshub.com/

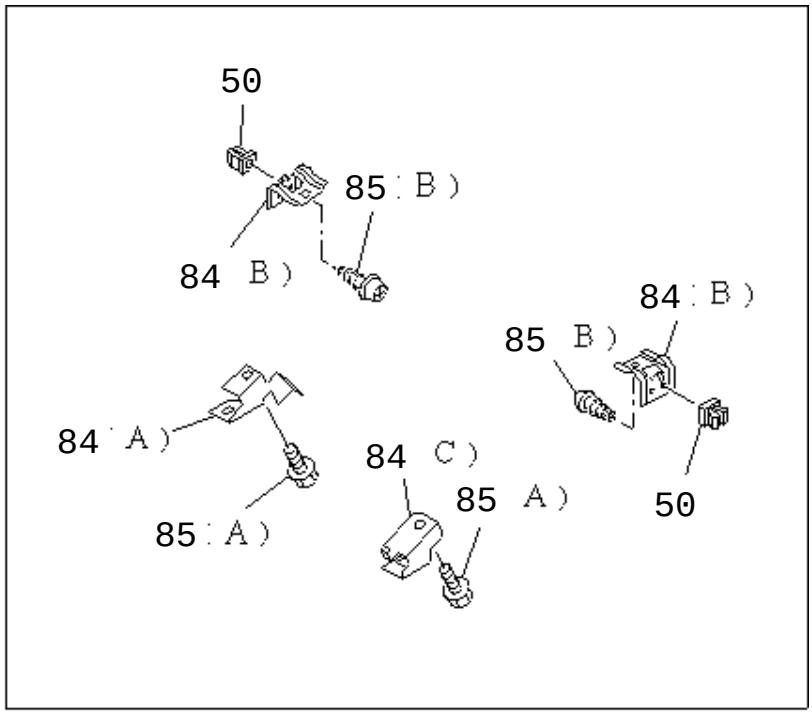

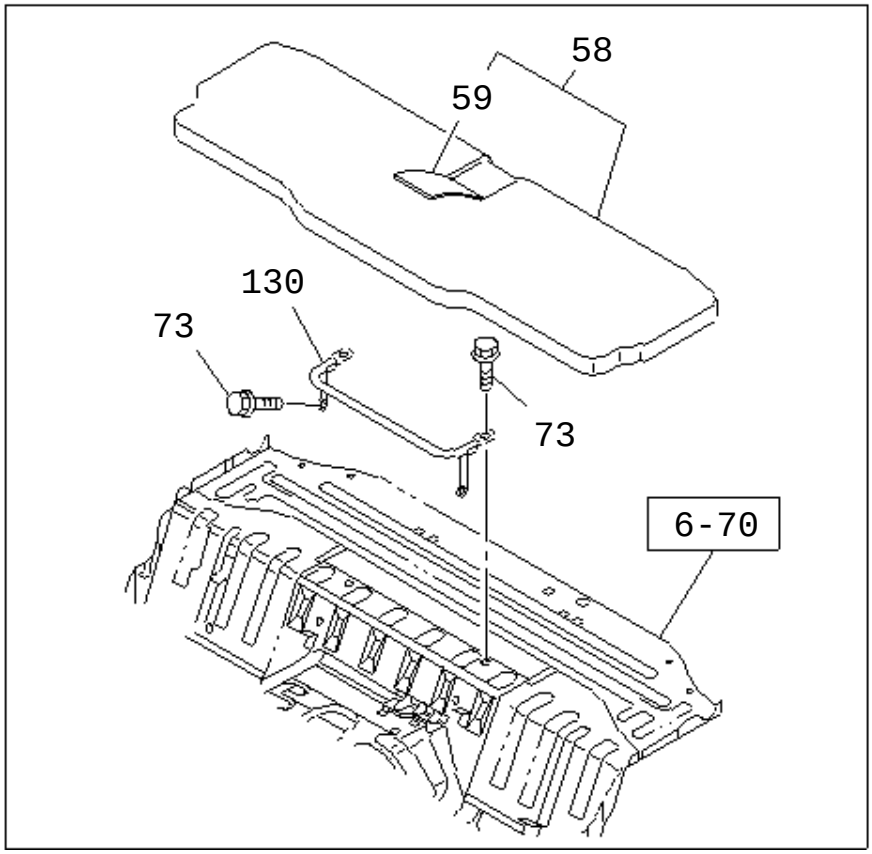

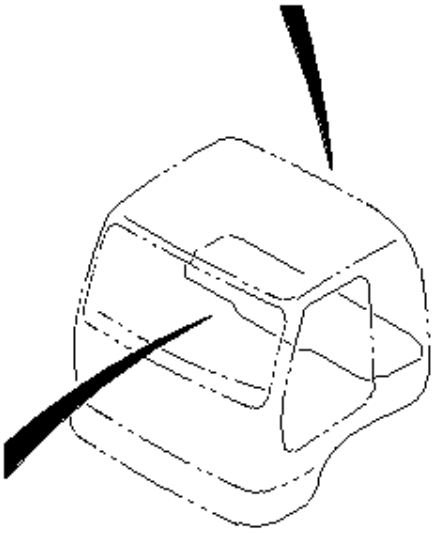

https://truckmanualshub.com/


7-70 SEPARATER AND BED

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
50		GROMMET; SCREW,CURTAIN RAIL					
		8-94279-078-0		1312-1403	02	A	D=8.6X7.7 L=7.5 IDN
		8-94279-078-0		1404-	02	AB	D=8.6X7.7 L=7.5 IDN
58		BED; MAT					
		8-97409-894-1		1312-1403	01	A	DARK GRAY IDN
		8-97409-894-1		1404-	01	AB	DARK GRAY IDN
59		COVER ASM; TRIM,BED MAT					
		8-97414-135-0		1312-1403	01	A	DARK GRAY
		8-97414-135-0		1404-	01	AB	DARK GRAY
73		BOLT; GUARD PIPE					
		0-28450-820-0		1312-1403	04	A	M8X20 FLANGE
		0-28450-820-0		1404-	04	AB	M8X20 FLANGE
84		BRACKET; CURTAIN RAIL					
		8-98042-152-0		1312-1403	02	A	(B)
		8-98042-152-0		1404-	02	AB	(B)
		8-98049-290-1		1312-1403	01	A	(A)
		8-98049-290-1		1404-	01	AB	(A)
		8-98074-740-0		1312-1403	01	A	(C)
		8-98074-740-0		1404-	01	AB	(C)
85		SCREW; BRKT					
		5-09981-059-0		1312-1403	02	A	(B) M5X20
		5-09981-059-0		1404-	02	AB	(B) M5X20
		8-97108-669-0		1312-1403	02	A	(A) M6X12 FLANGE
		8-97108-669-0		1404-	02	AB	(A) M6X12 FLANGE
130		PIPE; GUARD,BED					
		8-98014-968-0		1312-1403	01	A	
		8-98014-968-0		1404-	01	AB	
6-70		Move to 6-70					

https://truckmanualshub.com/


8-01 LAMP; FRONT AND FRONT SIDE

FIXING;FRONT LAMP

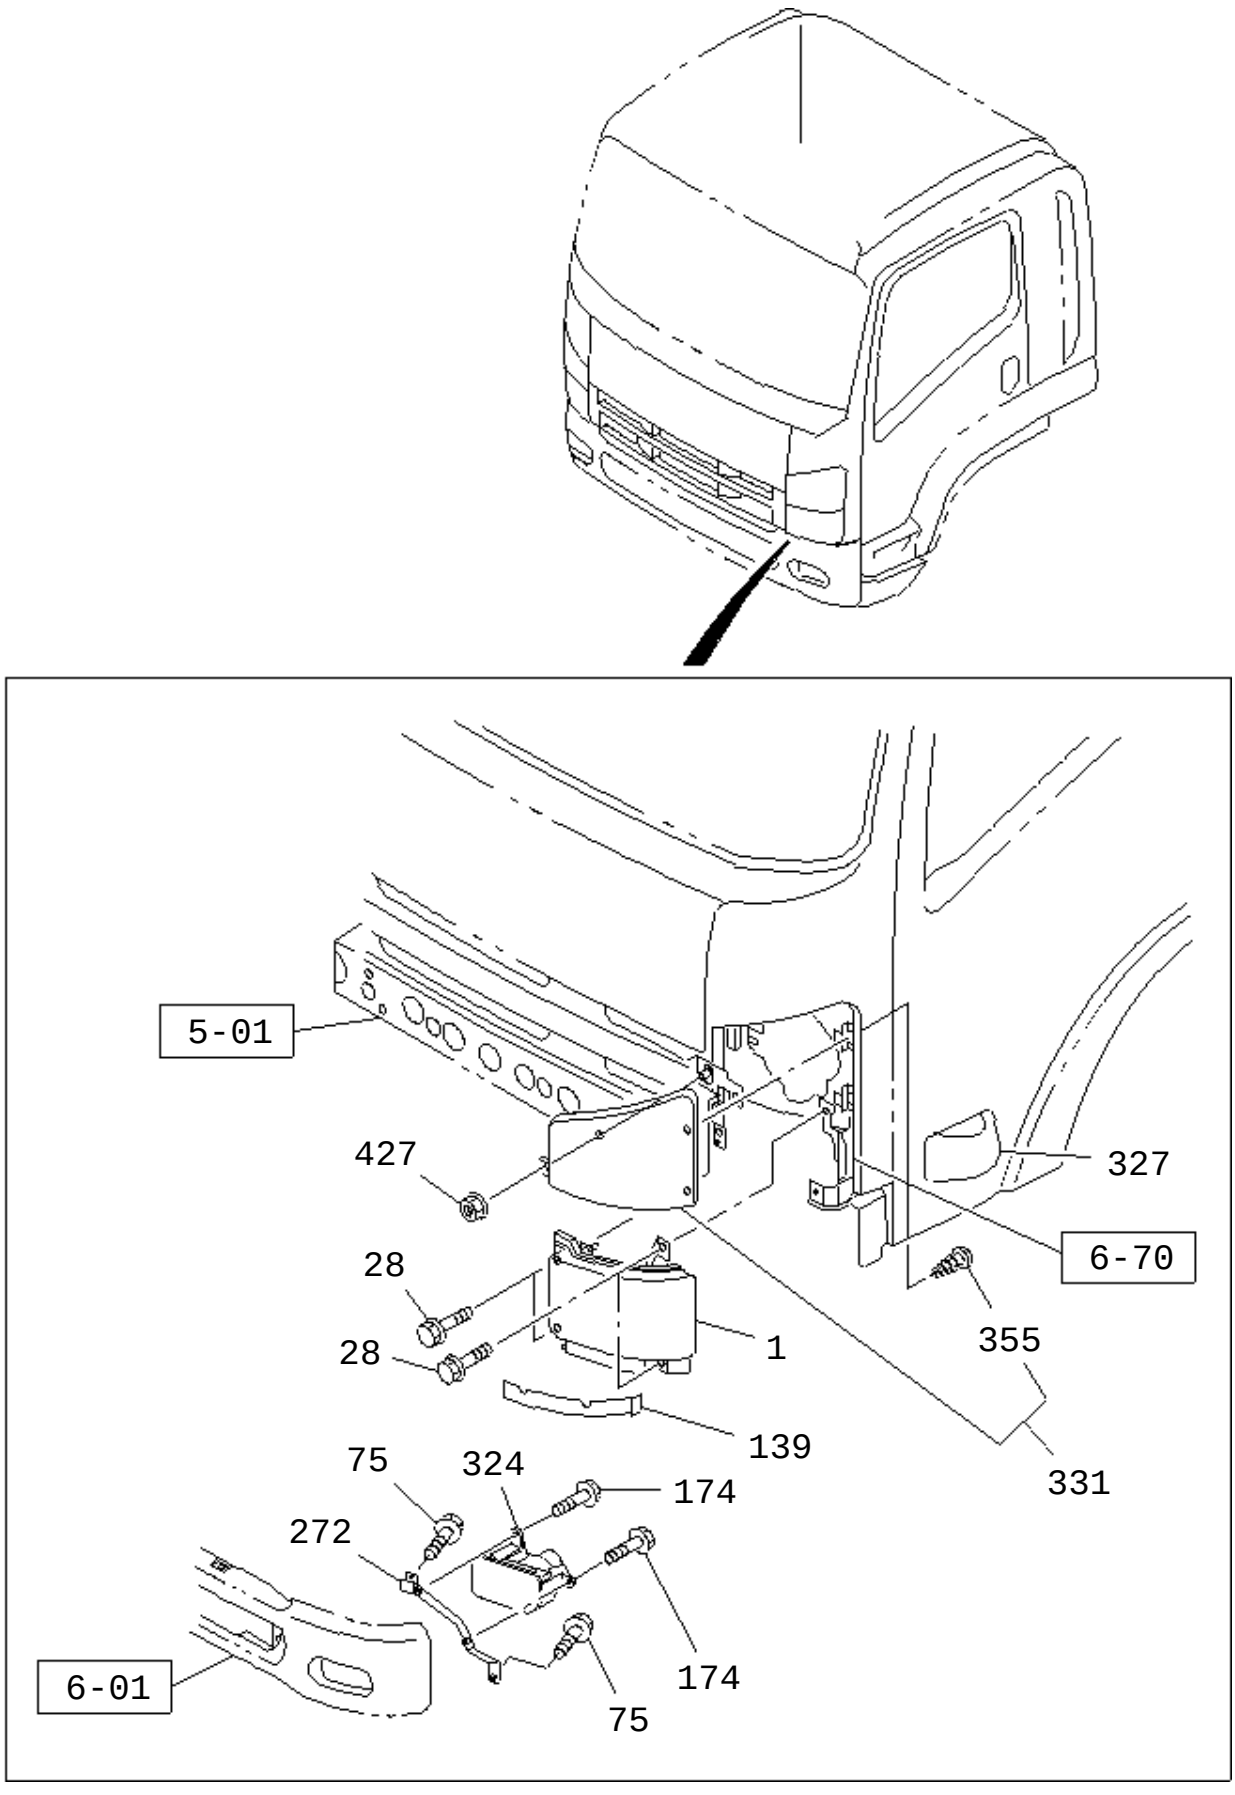


https://truckmanualshub.com/

HEADLAMPS

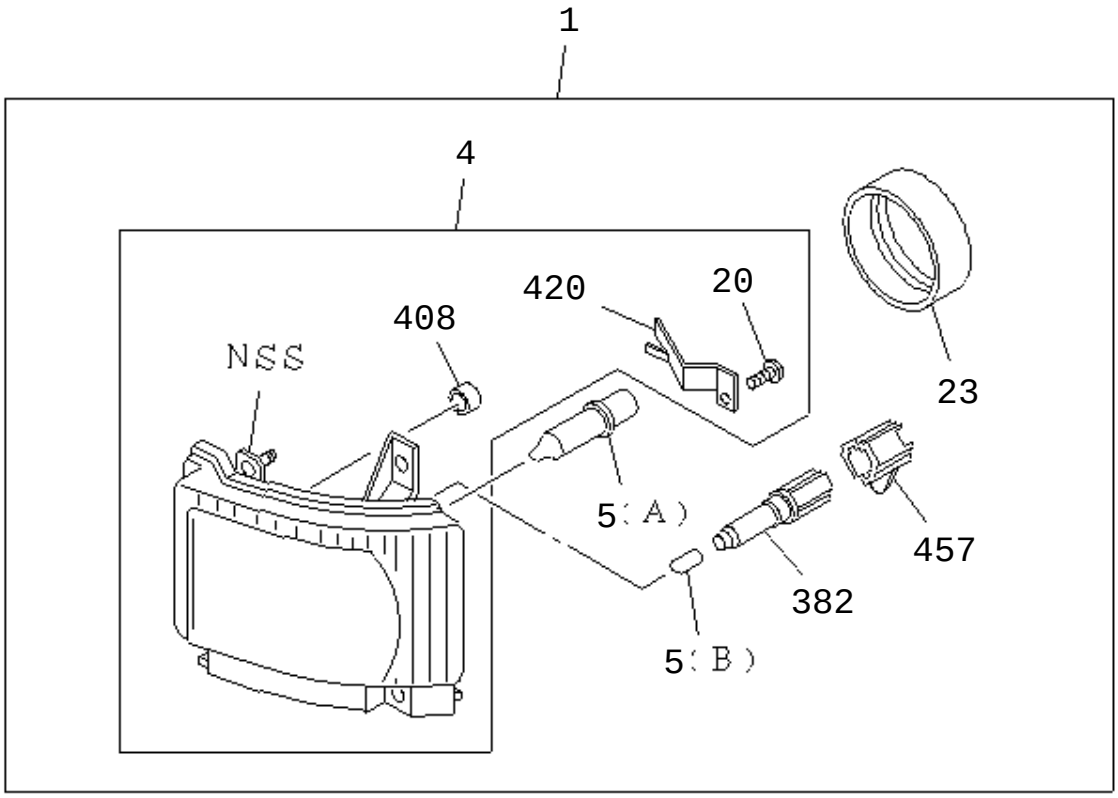


TURN SIGNAL LAMP

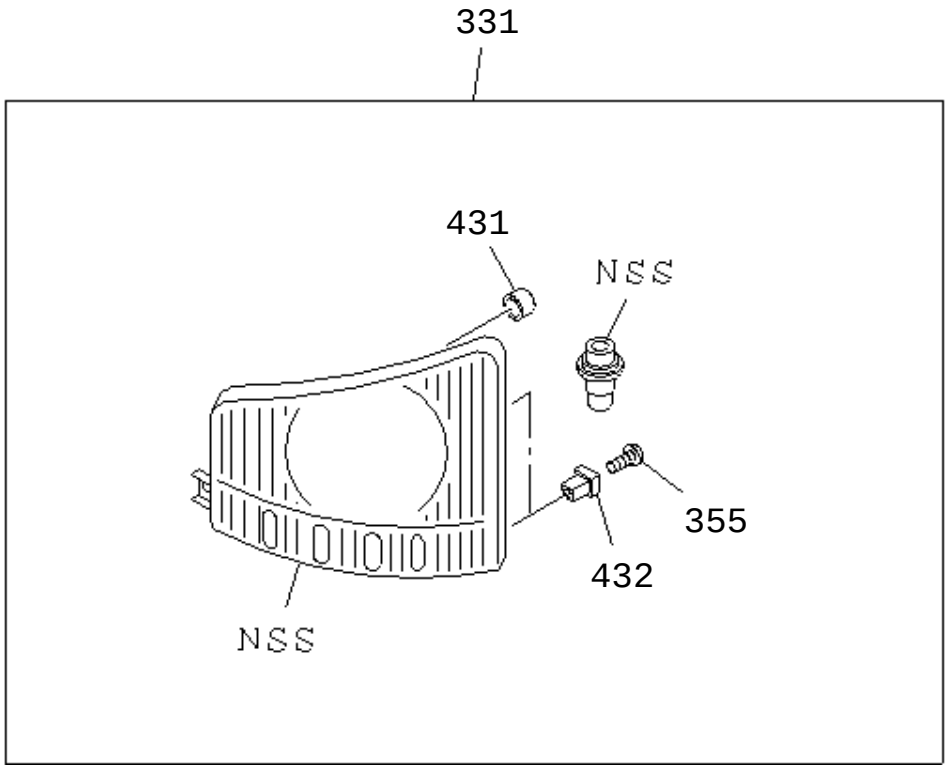

https://truckmanualshub.com/

8-01 LAMP; FRONT AND FRONT SIDE

FLASHER AND SIDE LAMP

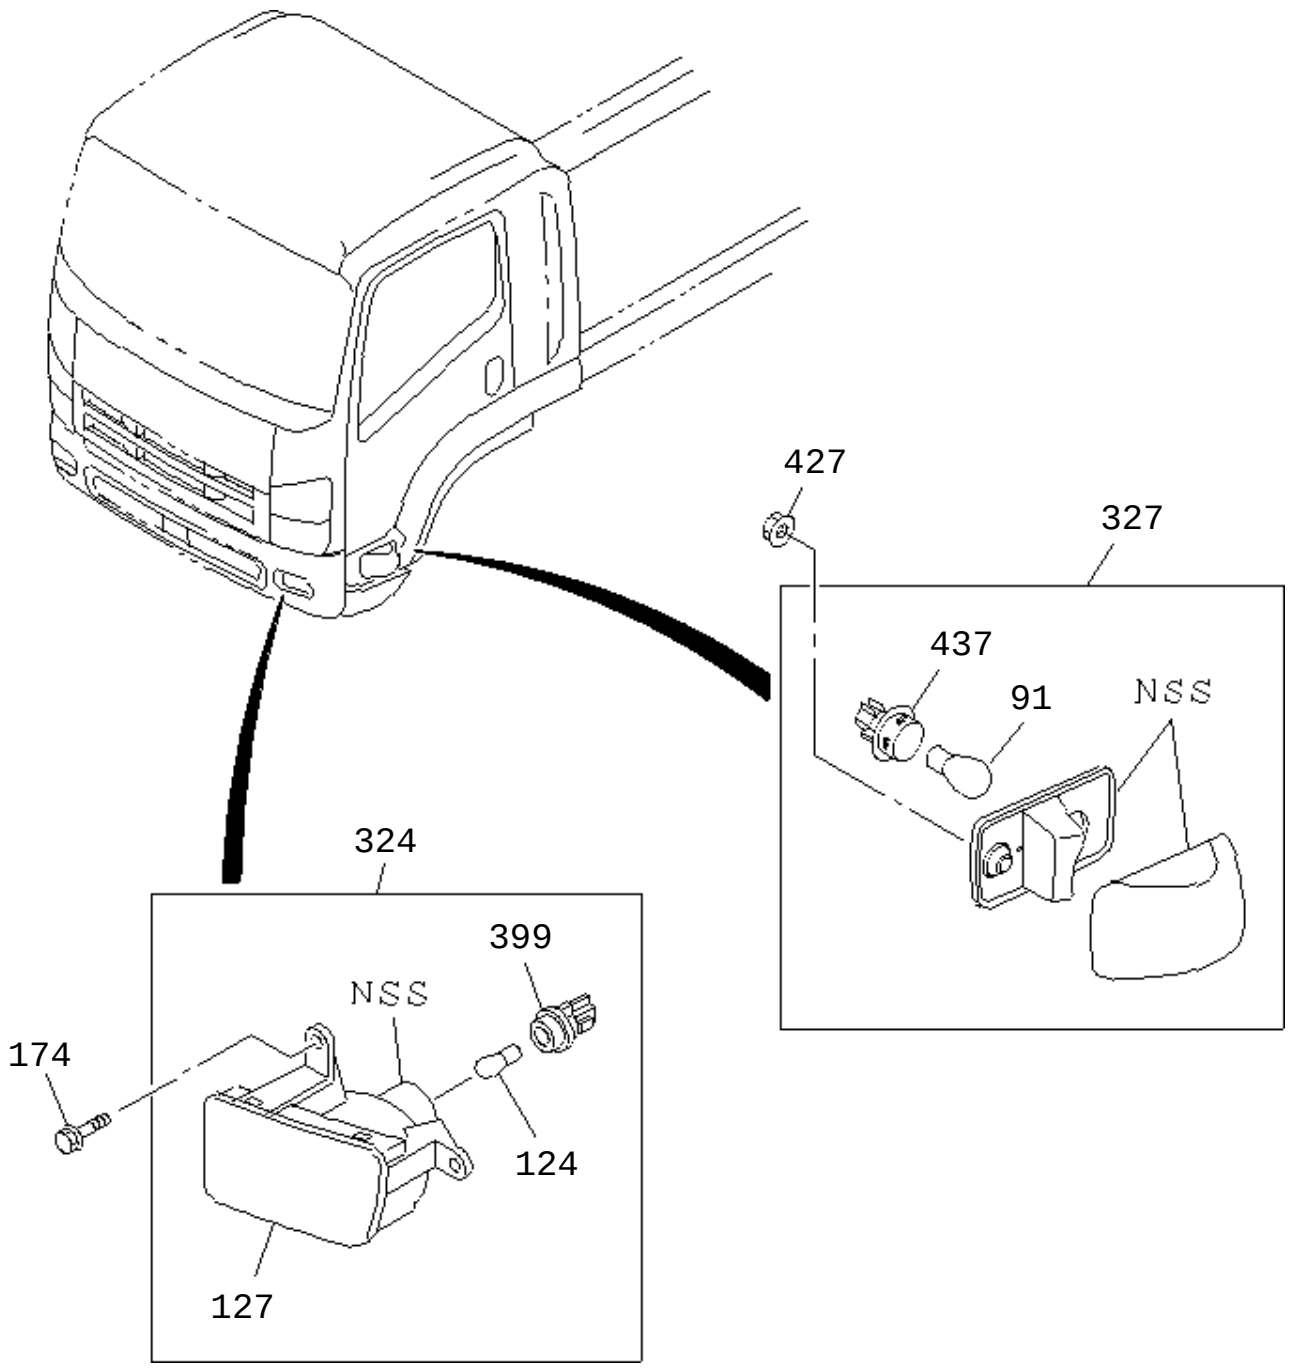

https://truckmanualshub.com/

8-01 LAMP; FRONT AND FRONT SIDE

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	B	LAMP ASM; HEAD						
		8-97948-524-0		1402-1403	R	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-97948-524-0		1404-	R	01	AB	VIN MODEL YEAR 2014<VZE> IDN
		8-97948-525-0		1402-1403	L	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-97948-525-0		1404-	L	01	AB	VIN MODEL YEAR 2014<VZE> IDN
		8-98241-326-0		1312-1401	L	01	A	 IDN
		8-98241-326-0		1402-1403	L	01	A	EXC. VIN MODEL YEAR 2014<VZE> IDN
		8-98241-326-0		1404-	L	01	AB	EXC. VIN MODEL YEAR 2014<VZE> IDN
		8-98241-325-0		1312-1401	R	01	A	 IDN
		8-98241-325-0		1402-1403	R	01	A	EXC. VIN MODEL YEAR 2014<VZE> IDN
		8-98241-325-0		1404-	R	01	AB	EXC. VIN MODEL YEAR 2014<VZE> IDN
4		HEADLAMP UNIT						
		8-97948-942-0		1402-1403	R	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-97948-942-0		1404-	R	01	AB	VIN MODEL YEAR 2014<VZE> IDN
		8-97948-943-0		1402-1403	L	01	A	VIN MODEL YEAR 2014<VZE> IDN
		8-97948-943-0		1404-	L	01	AB	VIN MODEL YEAR 2014<VZE> IDN
		8-98226-183-0		1312-1401	L	01	A	 IDN
		8-98226-183-0		1402-1403	L	01	A	EXC. VIN MODEL YEAR 2014<VZE> IDN
		8-98226-183-0		1404-	L	01	AB	EXC. VIN MODEL YEAR 2014<VZE> IDN
		8-98226-182-0		1312-1401	R	01	A	 IDN
		8-98226-182-0		1402-1403	R	01	A	EXC. VIN MODEL YEAR 2014<VZE> IDN
		8-98226-182-0		1404-	R	01	AB	EXC. VIN MODEL YEAR 2014<VZE> IDN
5	A	BULB; HEADLAMP						
		1-82194-042-0		1312-1403		02	A	 (B) 24V 5W
		1-82194-042-0		1404-		02	AB	 (B) 24V 5W
		1-82194-063-0		1312-1403		02	A	 (A) 24V 75/70W IDN
		1-82194-063-0		1404-		02	AB	 (A) 24V 75/70W IDN
20		SCREW; HEADLAMP						
		8-97378-871-0		1312-1403		06	A	 IDN
		8-97378-871-0		1404-		06	AB	 IDN
23		COVER; BULB,HEADLAMP						
		8-97232-491-0		1312-1403		02	A	 IDN
		8-97232-491-0		1404-		02	AB	 IDN
28		BOLT; HEADLAMP						
		8-98164-723-0		1312-1403		08	A	 M6X23.5 W/LK&PL WASHER
		8-98164-723-0		1404-		08	AB	 M6X23.5 W/LK&PL WASHER
75		SCREW; FRT COMB LAMP						

https://truckmanualshub.com/

8-01 LAMP; FRONT AND FRONT SIDE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
75		0-28050-612-0		1312-1403		04	A	BOLT M6X12 FLANGE
		0-28050-612-0		1404-		04	AB	BOLT M6X12 FLANGE
91		BULB; SIDE TURN SIGNAL						
		8-98051-495-0		1312-1403		02	A	24V 21W IDN
		8-98051-495-0		1404-		02	AB	24V 21W IDN
124		BULB; FRT TURN SIGNAL						
		1-82194-105-0		1312-1403		02	A	24V 21W
		1-82194-105-0		1404-		02	AB	24V 21W
127	B	LENS; FRT TURN SIGNAL						
		1-82215-074-0		1312-1403	L	01	A	ORANGE
		1-82215-074-0		1404-	L	01	AB	ORANGE
		1-82215-073-0		1312-1403	R	01	A	ORANGE
		1-82215-073-0		1404-	R	01	AB	ORANGE
139		COVER; HEADLAMP						
		8-98054-342-0		1312-1403		02	A	
		8-98054-342-0		1404-		02	AB	
174		BOLT						
		8-97360-226-0		1312-1403		04	A	M6X19.5 W/LK&PL WASHER IDN
		8-97360-226-0		1404-		04	AB	M6X19.5 W/LK&PL WASHER IDN
272		BRACKET; FRT COMB LAMP						
		8-98178-034-1		1312-1403	L	01	A	IDN
		8-98178-034-1		1404-	L	01	AB	IDN
		8-98178-033-1		1312-1403	R	01	A	IDN
		8-98178-033-1		1404-	R	01	AB	IDN
324	B	LAMP; FRT FLASHER						
		1-82210-260-1		1312-1403	L	01	A	
		1-82210-260-1		1404-	L	01	AB	
		1-82210-259-1		1312-1403	R	01	A	
		1-82210-259-1		1404-	R	01	AB	
327	B	LAMP ASM; SIDE TURN SIGNAL						
		8-97410-181-3		1312-1403	L	01	A	IDN
		8-97410-181-3		1404-	L	01	AB	IDN
		8-97410-180-4		1312-1403	R	01	A	IDN
		8-97410-180-4		1404-	R	01	AB	IDN
331		LAMP; TURN SIGNAL						
		8-98181-879-0		1312-1403	L	01	A	
		8-98181-879-0		1404-	L	01	AB	
		8-98181-878-0		1312-1403	R	01	A	
		8-98181-878-0		1404-	R	01	AB	
355		SCREW; TURN SIGNAL						
		8-98051-428-0		1312-1403		04	A	IDN
		8-98051-428-0		1404-		04	AB	IDN
382		PLUG; SOCKET,HEADLAMP						
		8-98225-685-0		1312-1403		02	A	IDN

https://truckmanualshub.com/

8-01 LAMP; FRONT AND FRONT SIDE

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
382		8-98225-685-0		1404-		02	AB	IDN
399		SOCKET; TURN SIGNAL						
		1-82219-038-0		1312-1403		02	A	
		1-82219-038-0		1404-		02	AB	
408		CAP; BREATHER,HEADLAMP						
		8-97378-874-0		1312-1403		02	A	IDN
		8-97378-874-0		1404-		02	AB	IDN
420		SPRING; BULB,HEADLAMP						
		8-98218-601-0		1312-1403		02	A	IDN
		8-98218-601-0		1404-		02	AB	IDN
427		NUT; TURN SIGNAL LAMP						
		0-91180-106-0		1312-1403		04	A	M6 FLANGE
		0-91180-106-0		1404-		04	AB	M6 FLANGE
431		CAP; TURN SIGNAL,LAMP						
		8-97378-874-0		1312-1403		02	A	IDN
		8-97378-874-0		1404-		02	AB	IDN
432		FASTENER; TURN SIGNAL,LAMP						
		8-98051-431-0		1312-1403		04	A	IDN
		8-98051-431-0		1404-		04	AB	IDN
437		SOCKET; SIDE,TURN						
		8-98051-390-0		1312-1403		02	A	IDN
		8-98051-390-0		1404-		02	AB	IDN
457		GRIP; HEADLAMP						
		8-98241-354-0		1312-1403		02	A	IDN
		8-98241-354-0		1404-		02	AB	IDN
5-01		Move to 5-01						
6-01		Move to 6-01						
6-70		Move to 6-70						

https://truckmanualshub.com/

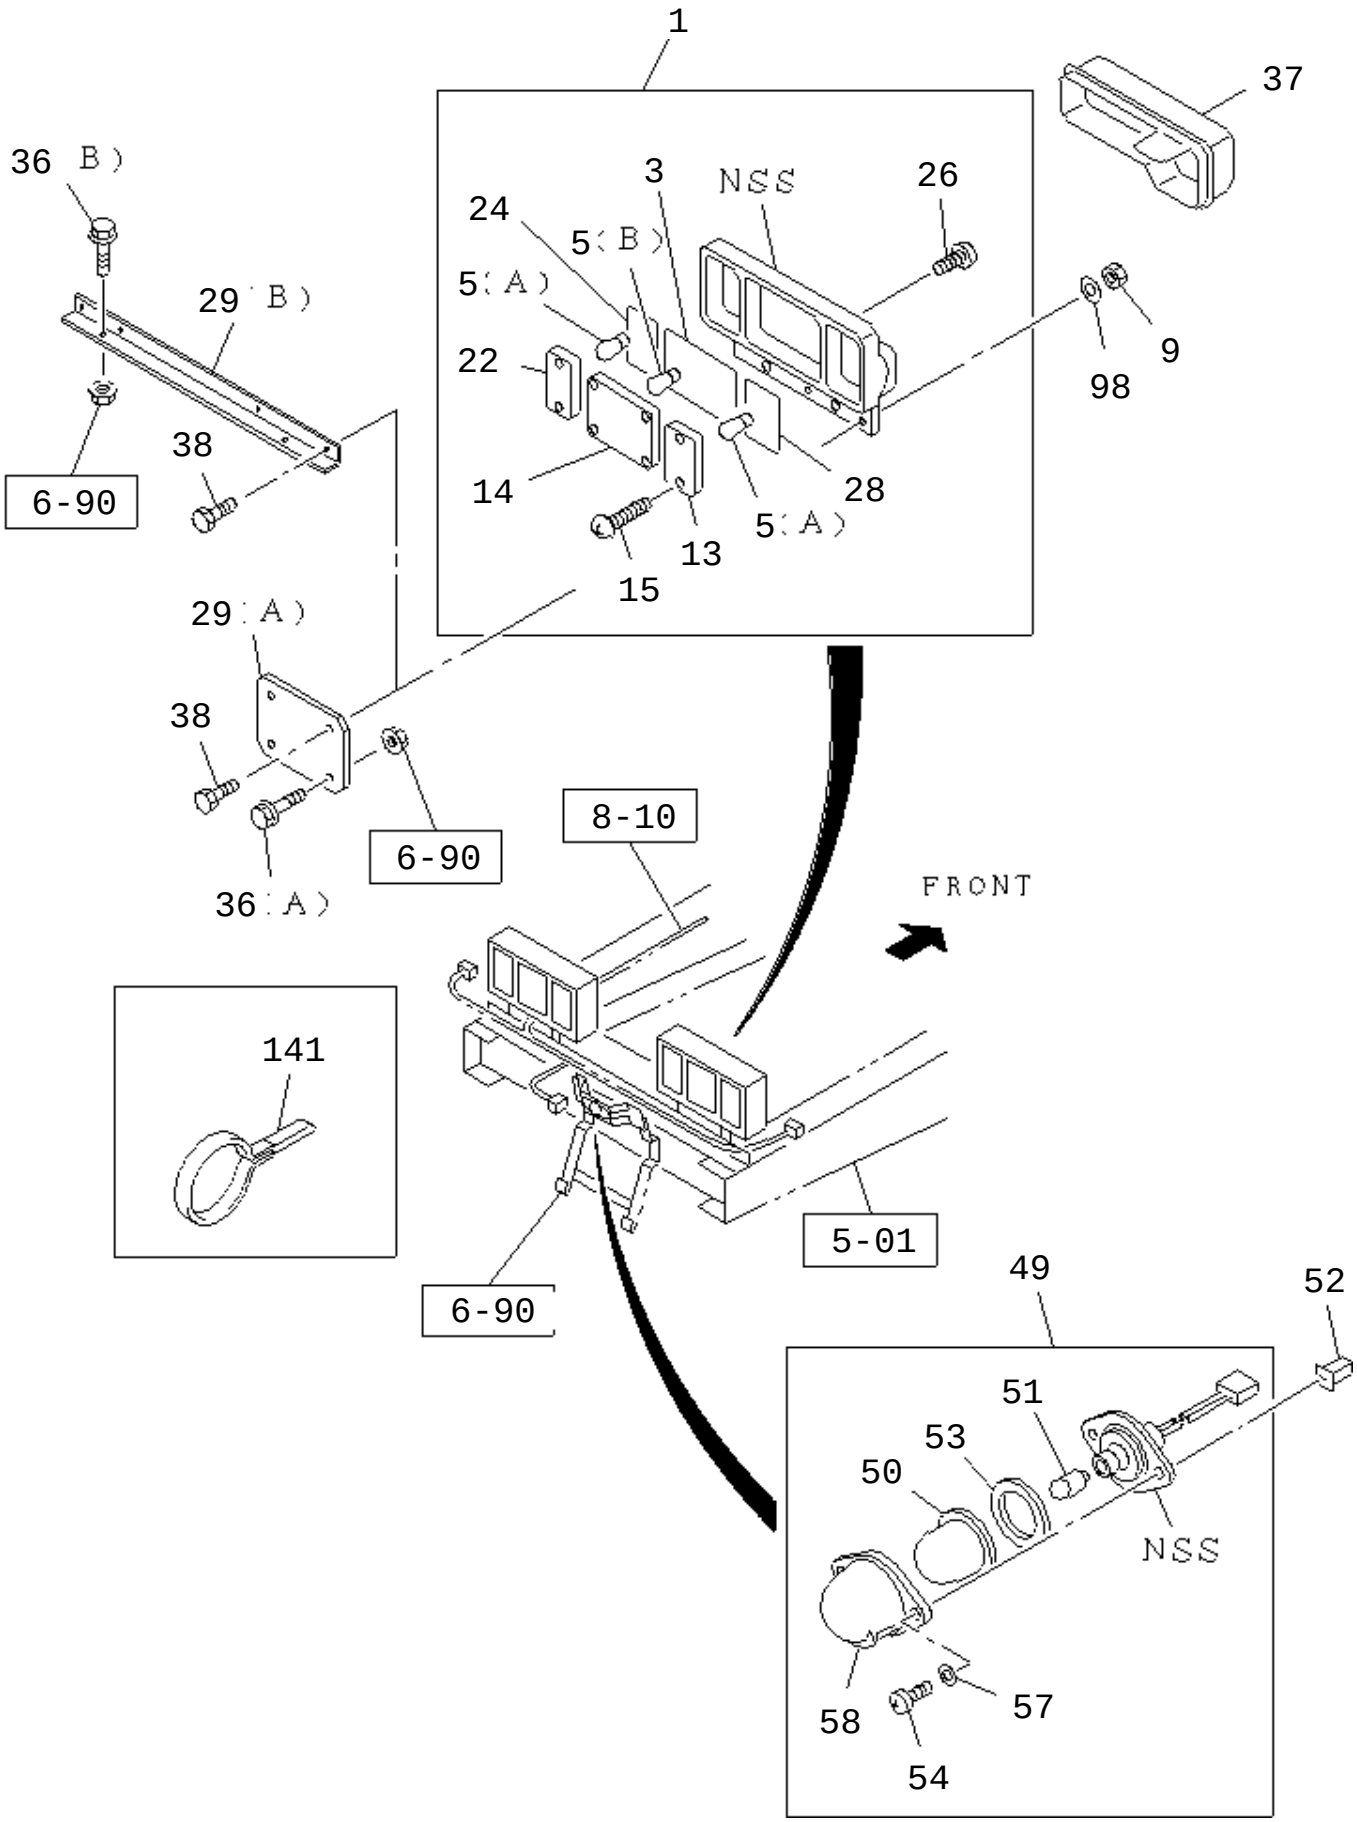

https://truckmanualshub.com/

8-03 LAMP; REAR AND REAR SIDE

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	B	LAMP ASM; RR COMB						
		8-98034-325-0		1312-1403	L	01	A	IDN
		8-98034-325-0		1404-	L	01	AB	IDN
		8-98034-324-0		1312-1403	R	01	A	IDN
		8-98034-324-0		1404-	R	01	AB	IDN
3		GASKET; RR COMB LAMP						
		8-94257-505-0		1312-1403		01	A	IDN
		8-94257-505-0		1312-1403		01	A	IDN
		8-94257-505-0		1404-		01	AB	IDN
		8-94257-505-0		1404-		01	AB	IDN
5		BULB; RR COMB LAMP						
		1-82194-108-0		1312-1403		02	A	(A) 24V 21W IDN
		1-82194-108-0		1312-1403		02	A	(A) 24V 21W IDN
		1-82194-108-0		1404-		02	AB	(A) 24V 21W IDN
		1-82194-108-0		1404-		02	AB	(A) 24V 21W IDN
		1-82194-109-0		1312-1403		01	A	(B) 24V 21/5W IDN
		1-82194-109-0		1312-1403		01	A	(B) 24V 21/5W IDN
		1-82194-109-0		1404-		01	AB	(B) 24V 21/5W IDN
		1-82194-109-0		1404-		01	AB	(B) 24V 21/5W IDN
9		NUT; LAMP,RR COMB						
		0-91110-506-0		1312-1403		04	A	M6
		0-91110-506-0		1404-		04	AB	M6
13	B	LENS; TURN SIGNAL						
		8-94174-639-0		1312-1403	L	01	A	IDN
		8-94174-639-0		1404-	L	01	AB	IDN
		8-94174-638-0		1312-1403	R	01	A	IDN
		8-94174-638-0		1404-	R	01	AB	IDN
14	B	LENS; TAIL & STOP,RR COMB LAMP						
		8-94178-625-0		1312-1403	L	01	A	IDN
		8-94178-625-0		1404-	L	01	AB	IDN
		8-94178-624-0		1312-1403	R	01	A	IDN
		8-94178-624-0		1404-	R	01	AB	IDN

https://truckmanualshub.com/

8-03 LAMP; REAR AND REAR SIDE


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
15		SCREW; RR COMB LAMP						
		0-71190-420-0		1312-1403		08	A	M4X20 TAPPING STAINLESS IDN
		0-71190-420-0		1312-1403		08	A	M4X20 TAPPING STAINLESS IDN
		0-71190-420-0		1404-		08	AB	M4X20 TAPPING STAINLESS IDN
		0-71190-420-0		1404-		08	AB	M4X20 TAPPING STAINLESS IDN
22	B	LENS; BACKUP,RR COMB LAMP						
		8-94257-512-1		1312-1403		01	A	IDN
		8-94257-512-1		1312-1403		01	A	IDN
		8-94257-512-1		1404-		01	AB	IDN
		8-94257-512-1		1404-		01	AB	IDN
24		GASKET; BACK,LAMP						
		8-94257-506-0		1312-1403		01	A	IDN
		8-94257-506-0		1312-1403		01	A	IDN
		8-94257-506-0		1404-		01	AB	IDN
		8-94257-506-0		1404-		01	AB	IDN
26		SCREW; BACK HORN						
		9-07076-414-0		1312-1403	L	01	A	M4X14 TAPPING IDN
		9-07076-414-0		1404-	L	01	AB	M4X14 TAPPING IDN
		9-07076-412-0		1312-1403	R	01	A	M4X12 TAPPING IDN
		9-07076-412-0		1404-	R	01	AB	M4X12 TAPPING IDN
28		GASKET; TURN,LAMP						
		8-94257-507-0		1312-1403		01	A	IDN
		8-94257-507-0		1312-1403		01	A	IDN
		8-94257-507-0		1404-		01	AB	IDN
		8-94257-507-0		1404-		01	AB	IDN
29		BRACKET; LAMP,RR COMB						
		1-53178-016-1		1404-		01	B	(B) IDN
		1-82237-050-1		1312-		02	A	(A)
36		BOLT; BRKT,RR COMB						
		0-28651-030-0		1404-		02	B	(B) M10X30 FLANGE
		0-28650-825-0		1312-		02	A	(A) M8X25 FLANGE IDN
37		COVER; RR COMB LAMP						
		8-94129-274-4		1312-1403	L	01	A	IDN
		8-94129-274-4		1404-	L	01	AB	IDN
		8-94128-858-4		1312-1403	R	01	A	IDN


https://truckmanualshub.com/

8-03 LAMP; REAR AND REAR SIDE

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
37		8-94128-858-4		1404-	R	01	AB	IDN
38		BOLT; LAMP,RR COMB						
		0-50640-630-0		1312-1403		04	A	M6X30 W/LK&PL WASHER
		0-50640-630-0		1404-		04	AB	M6X30 W/LK&PL WASHER
49		LAMP; LICENSE PLATE						
		1-82120-024-1		1312-1403		01	A	24V 10W
		1-82120-024-1		1404-		01	AB	24V 10W
50		LENS; LICENSE PLATE LAMP						
		1-82235-006-0		1312-1403		01	A	
		1-82235-006-0		1404-		01	AB	
51		BULB; LICENSE PLATE LAMP						
		1-82194-037-0		1312-1403		01	A	24V 10W IDN
		1-82194-037-0		1404-		01	AB	24V 10W IDN
52		GROMMET; SCREW,LICENSE PLATE LAMP						
		8-94275-946-0		1312-1403		02	A	D=7.8X7.8 L=18 M5 BLACK
		8-94275-946-0		1404-		02	AB	D=7.8X7.8 L=18 M5 BLACK
53		GASKET; LICENSE LAMP						
		1-82126-005-0		1312-1403		01	A	
		1-82126-005-0		1404-		01	AB	
54		SCREW; LICENSE PLATE LAMP						
		1-82129-007-0		1312-1403		02	A	M5X20
		1-82129-007-0		1404-		02	AB	M5X20
57		WASHER; PL,LICENSE PLATE LAMP						
		1-82129-008-0		1312-1403		02	A	
		1-82129-008-0		1404-		02	AB	
58		COVER; LICENSE PLATE LAMP						
		1-82129-005-0		1312-1403		01	A	
		1-82129-005-0		1404-		01	AB	
98		WASHER						
		0-91610-706-0		1312-1403		04	A	ID=6.4 OD=18
		0-91610-706-0		1404-		04	AB	ID=6.4 OD=18
141		CLIP; LICENSE & BODY HARNESS						
		9-09917-427-0		1312-1403		03	A	ID=14 L=44
		9-09917-427-0		1404-		03	AB	ID=14 L=44
5-01		Move to 5-01						
6-90		Move to 6-90						
8-10		Move to 8-10						

https://truckmanualshub.com/

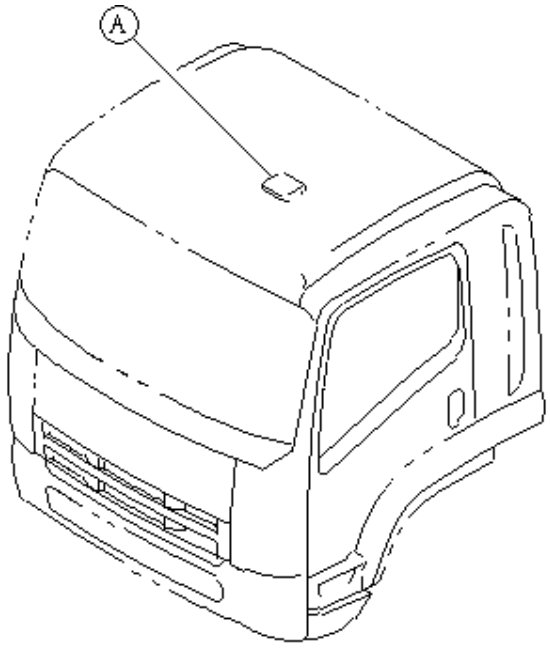

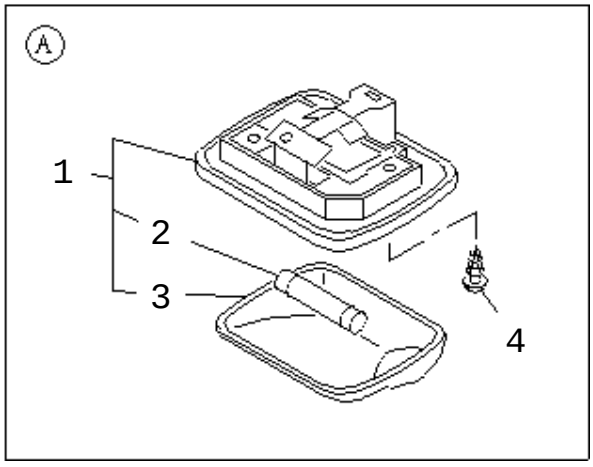


https://truckmanualshub.com/

8-05 INTERIOR LAMP


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		LAMP ASM; ROOM					
		8-97925-149-0		1312-1403	01	A	IDN
		8-97925-149-0		1404-	01	AB	IDN
2		BULB; ROOM LAMP					
		8-97925-613-0		1312-1403	01	A	24V 10W IDN
		8-97925-613-0		1404-	01	AB	24V 10W IDN
3		LENS; ROOM LAMP					
		8-97925-612-0		1312-1403	01	A	IDN
		8-97925-612-0		1404-	01	AB	IDN
4		SCREW; ROOM LAMP					
		8-98075-766-0		1312-1403	02	A	M5X14 W/WASHER IDN
		8-98075-766-0		1404-	02	AB	M5X14 W/WASHER IDN

https://truckmanualshub.com/

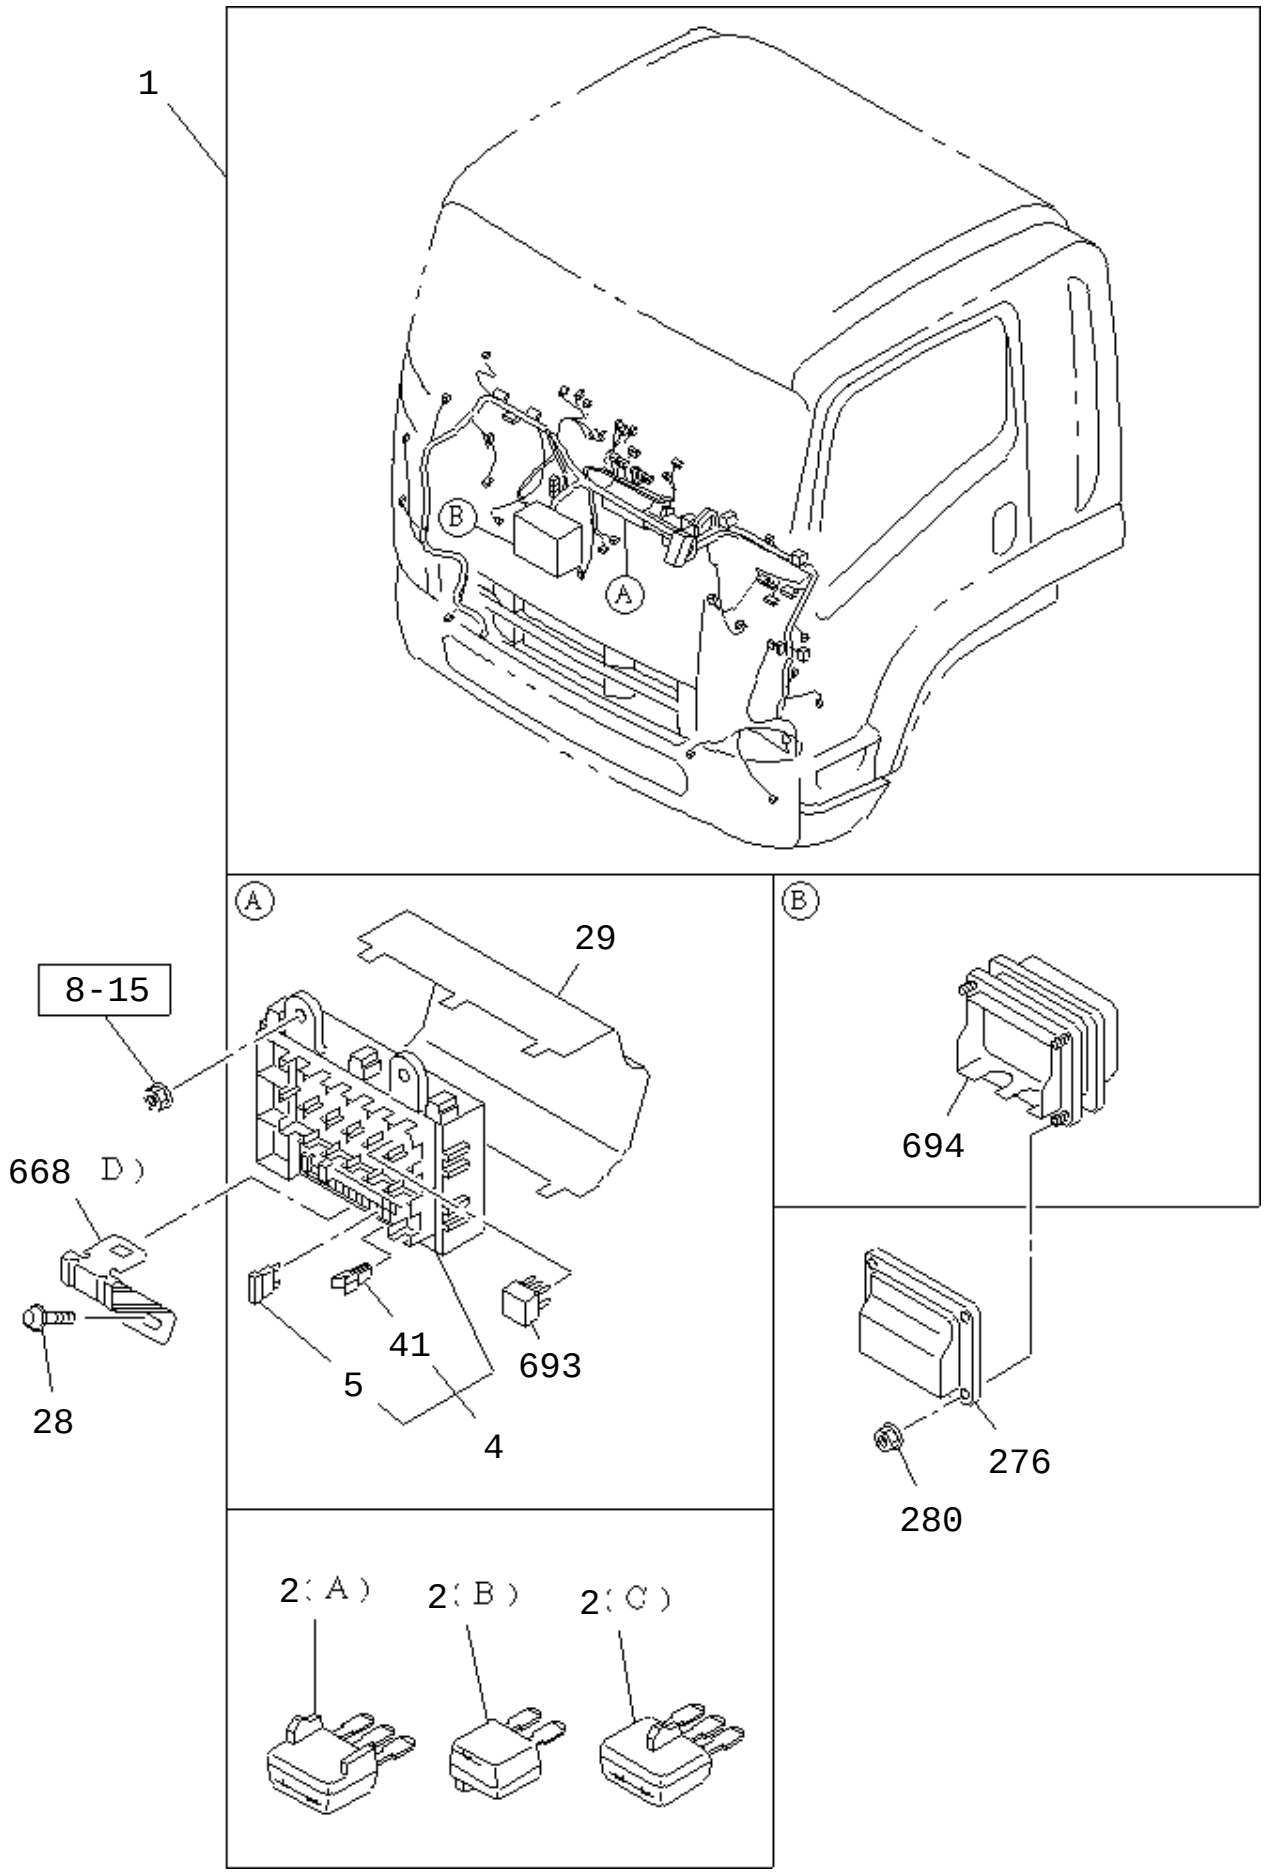


https://truckmanualshub.com/

FRAME HARNESS NO.1

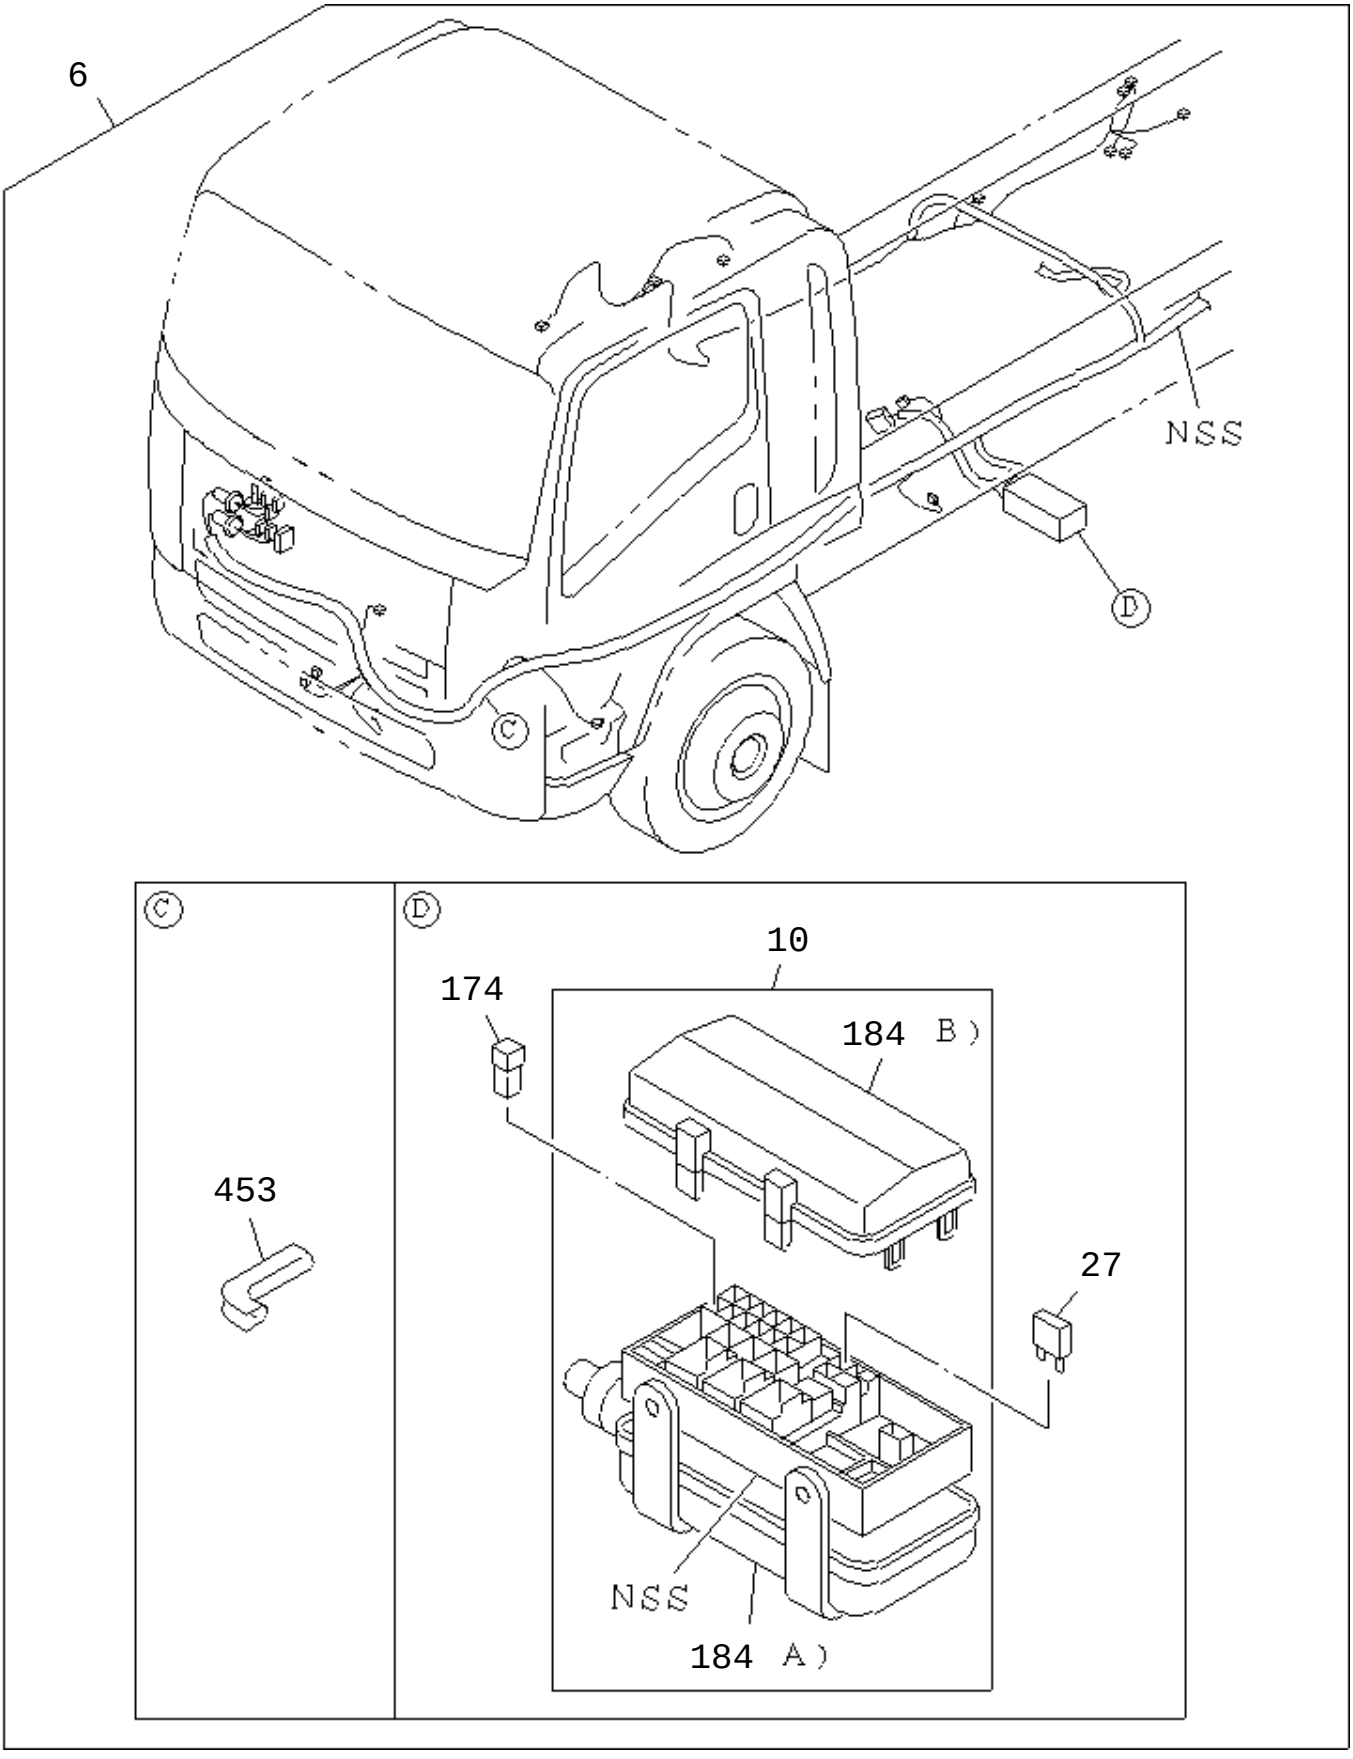


https://truckmanualshub.com/


FRAME HARNESS NO.2

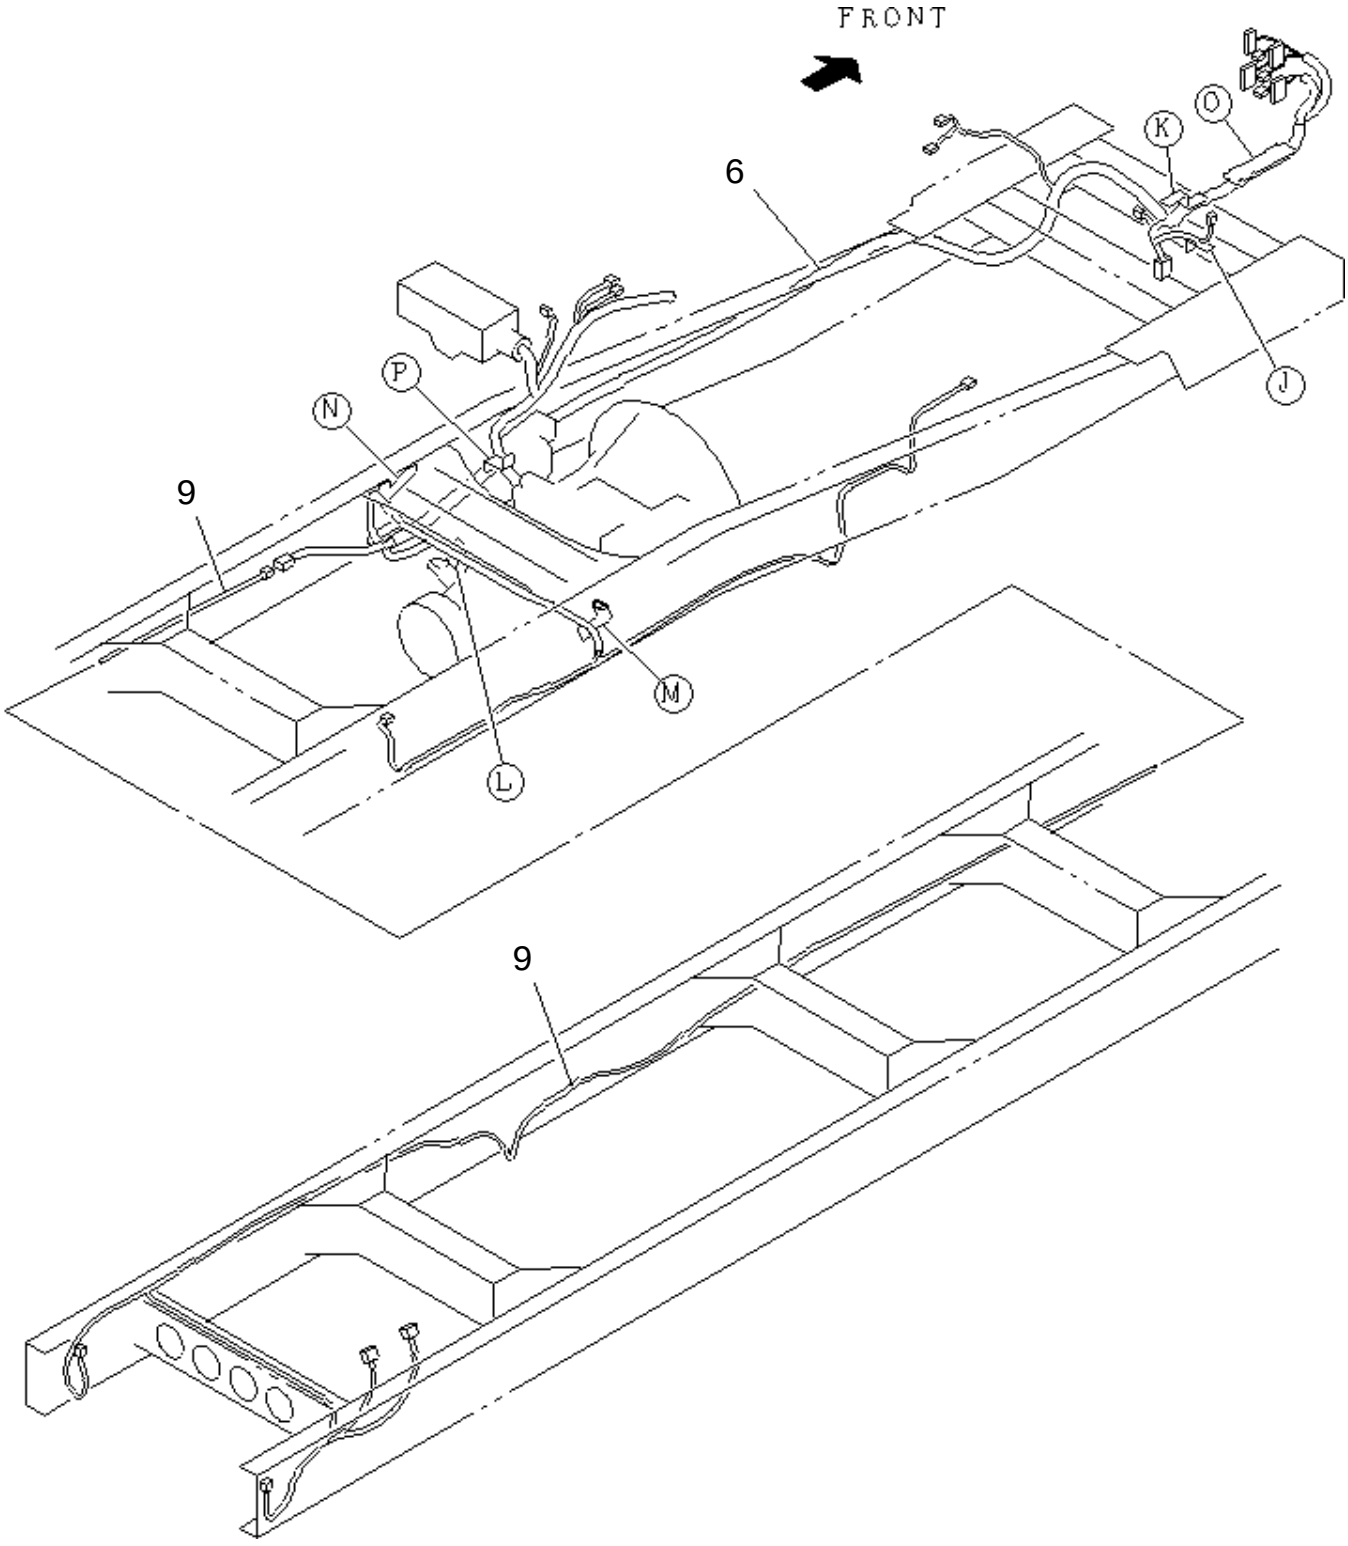

https://truckmanualshub.com/


OTHER HARNESS NO.1

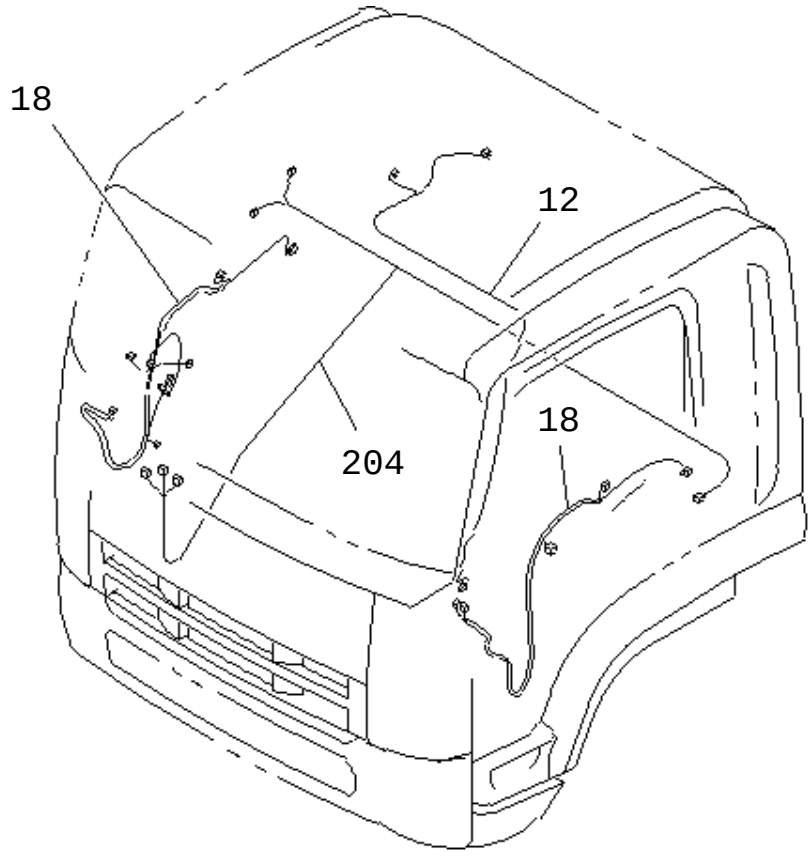


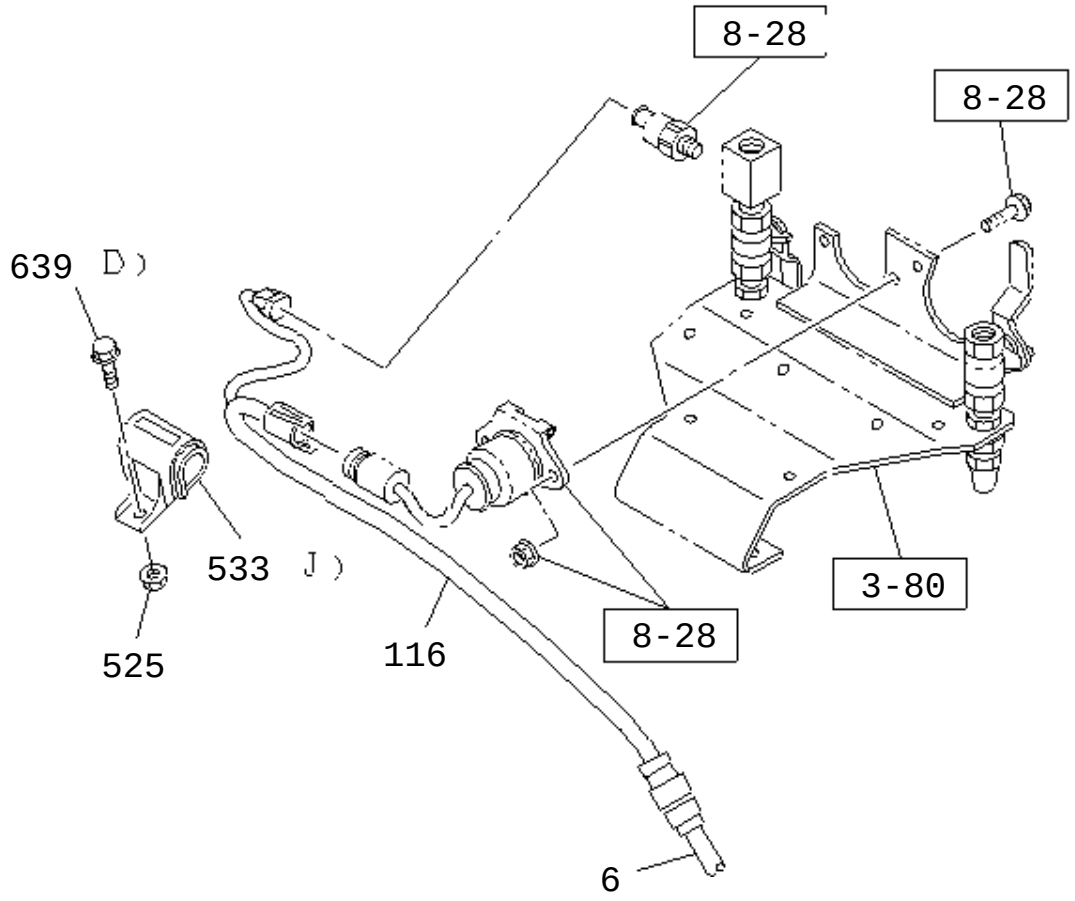



https://truckmanualshub.com/

OTHER HARNESS NO.2

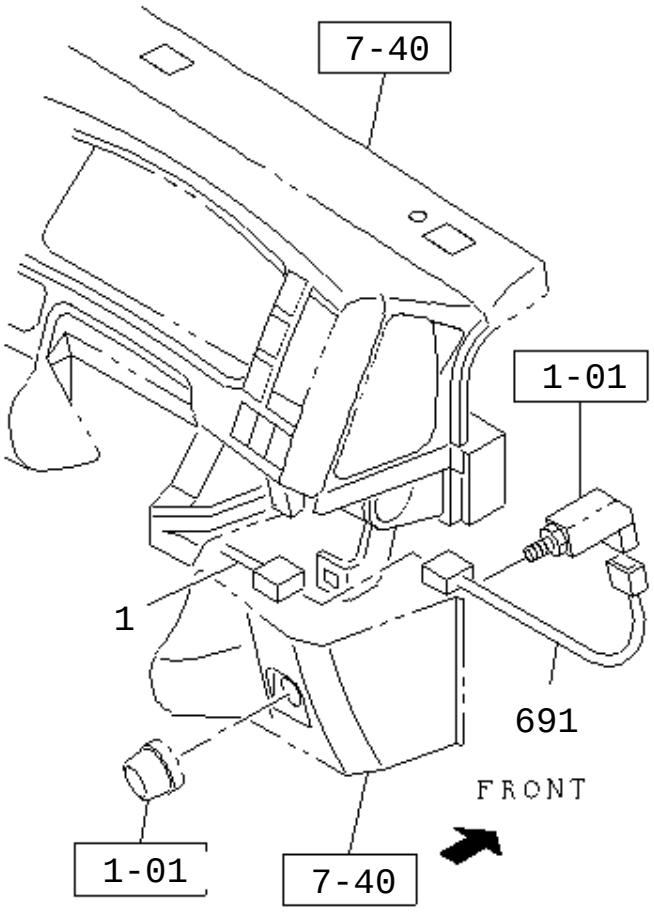


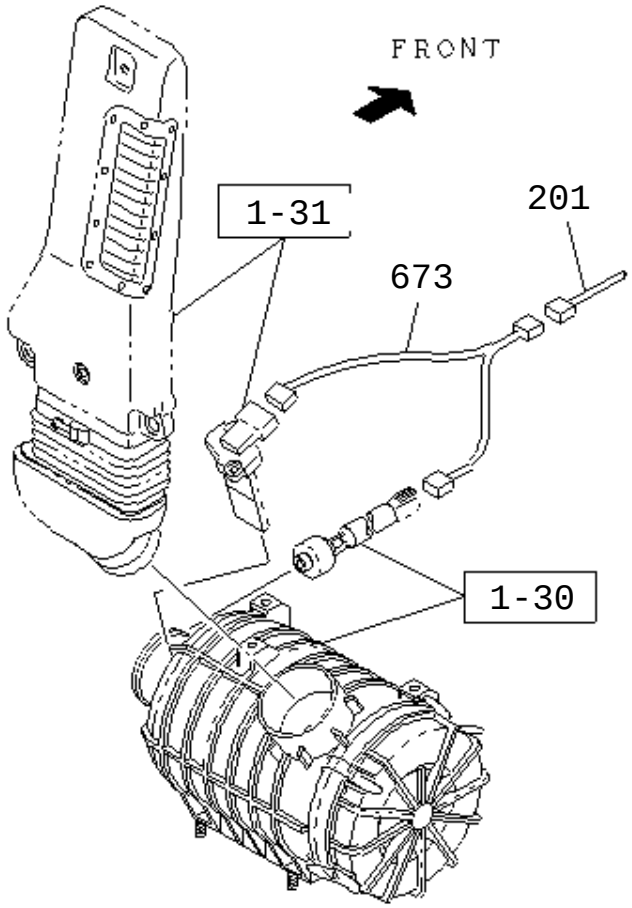


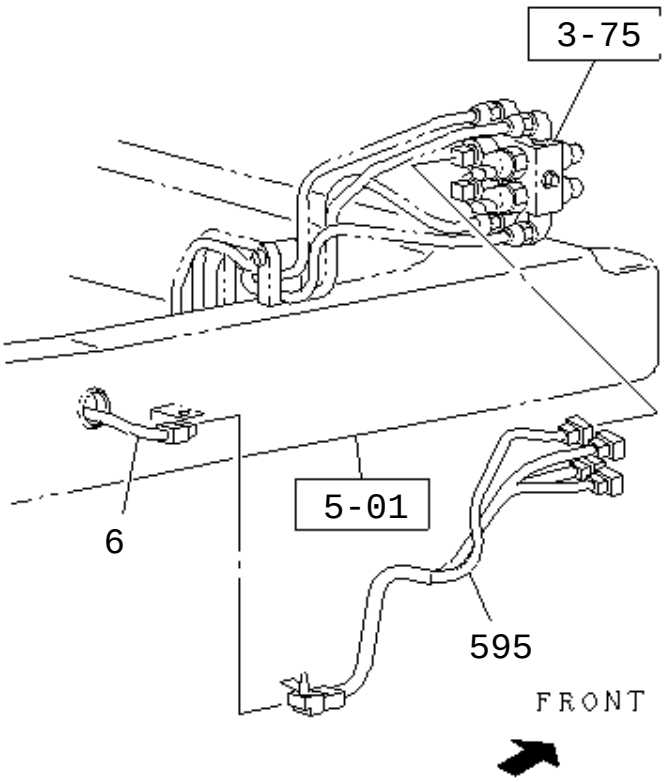

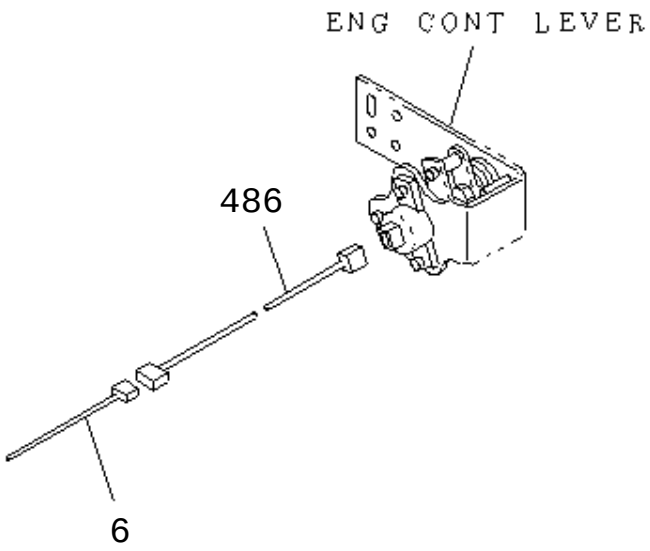


https://truckmanualshub.com/

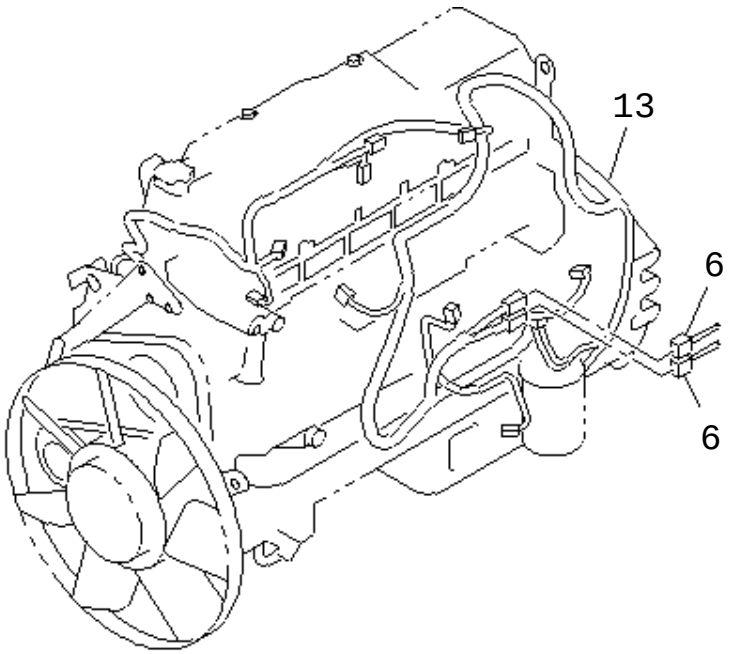


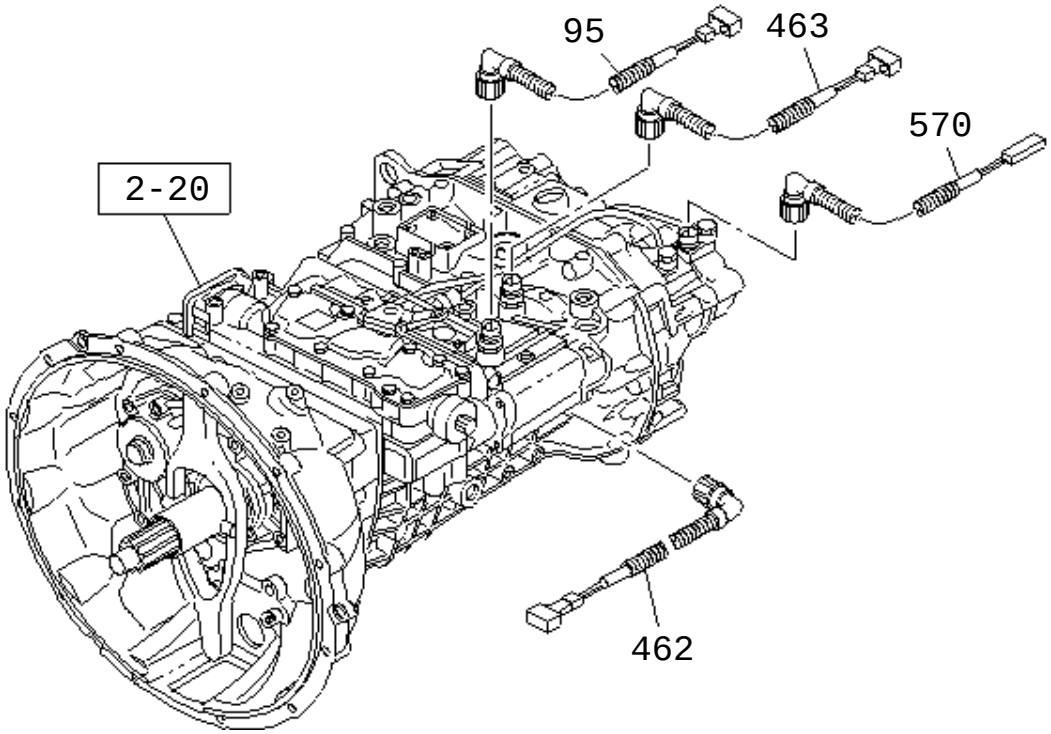

https://truckmanualshub.com/


AIR TANK SIDE

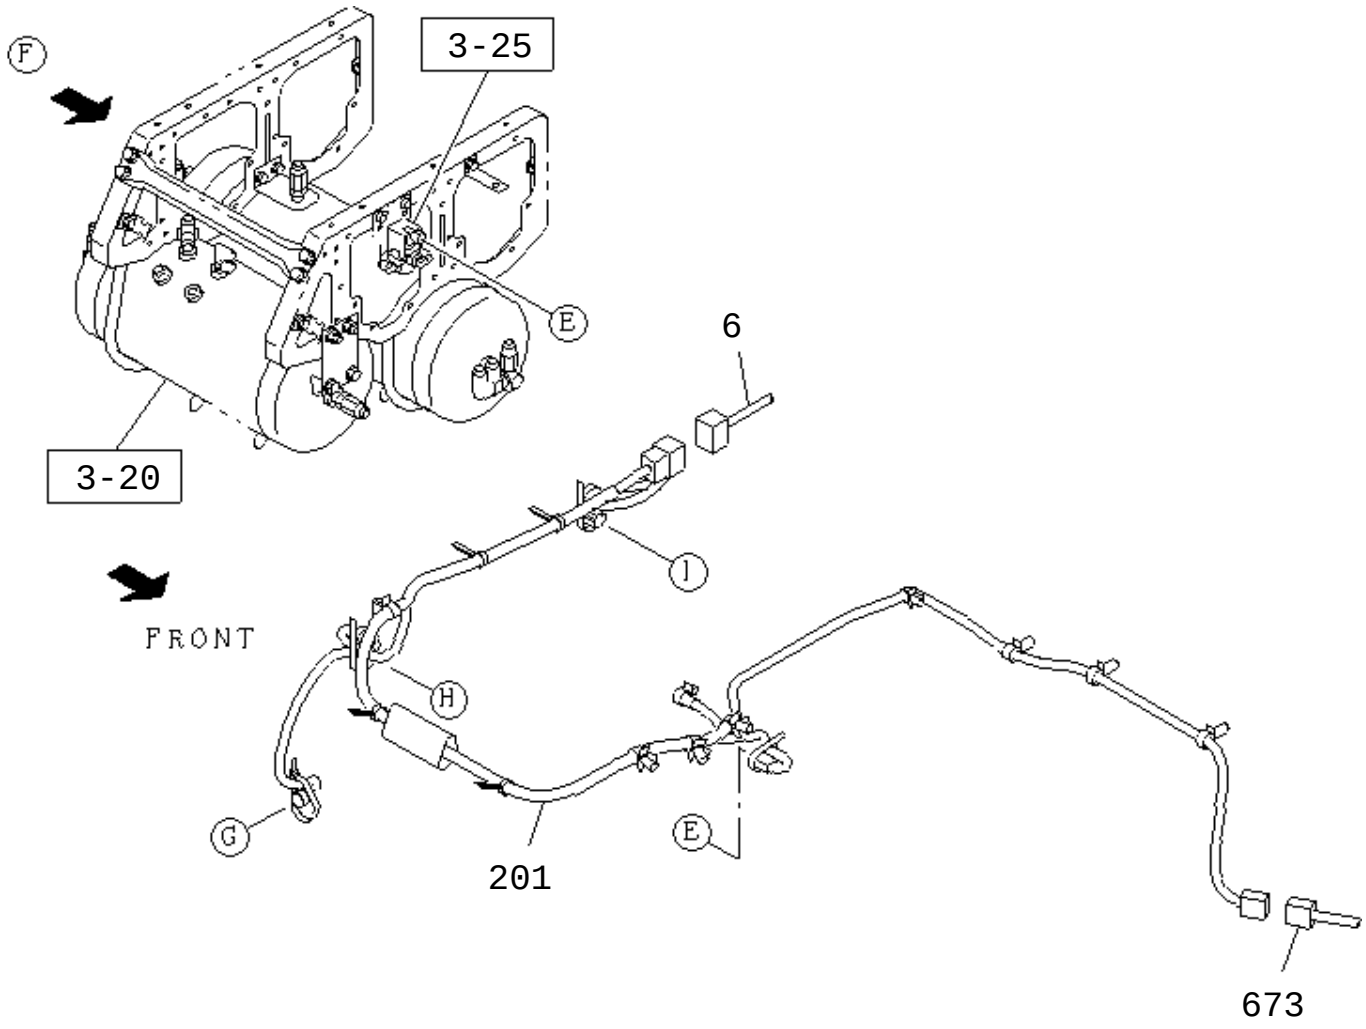

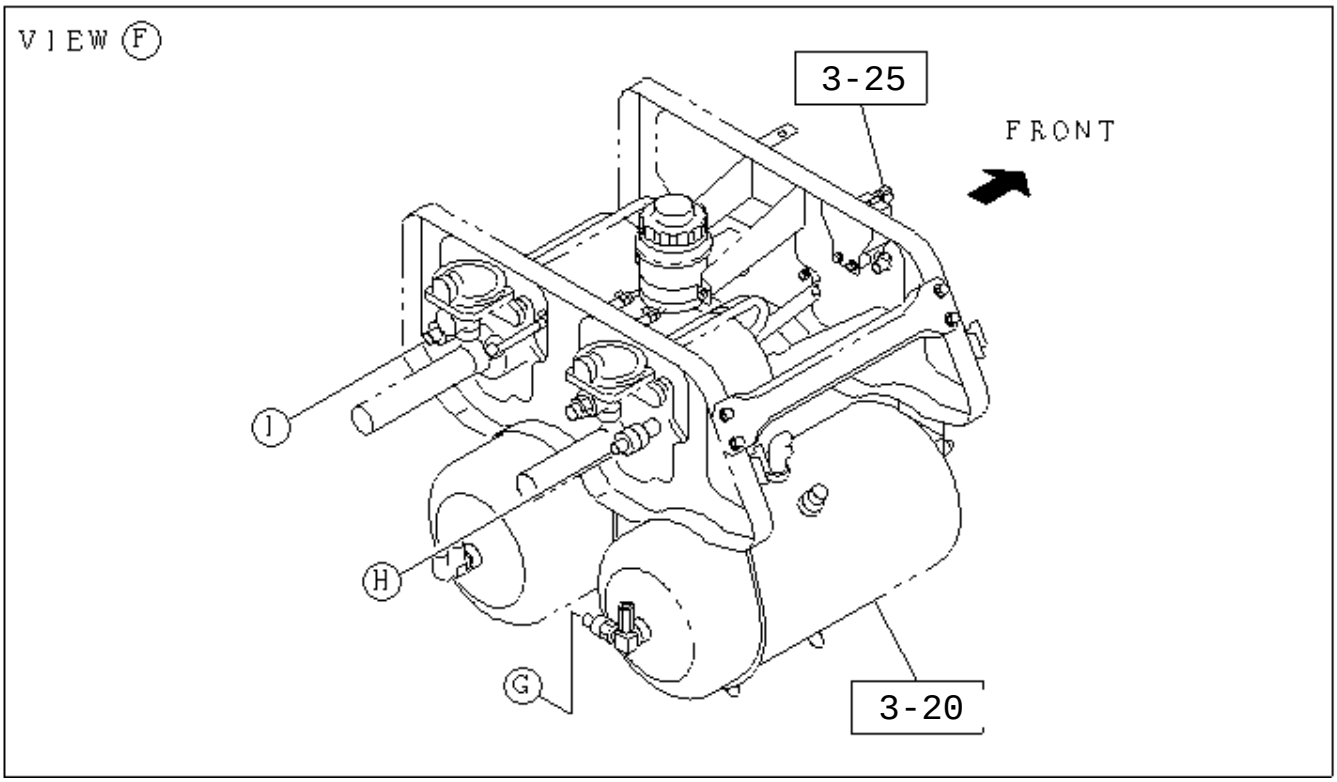

https://truckmanualshub.com/


RELAY;CAB HARNESS

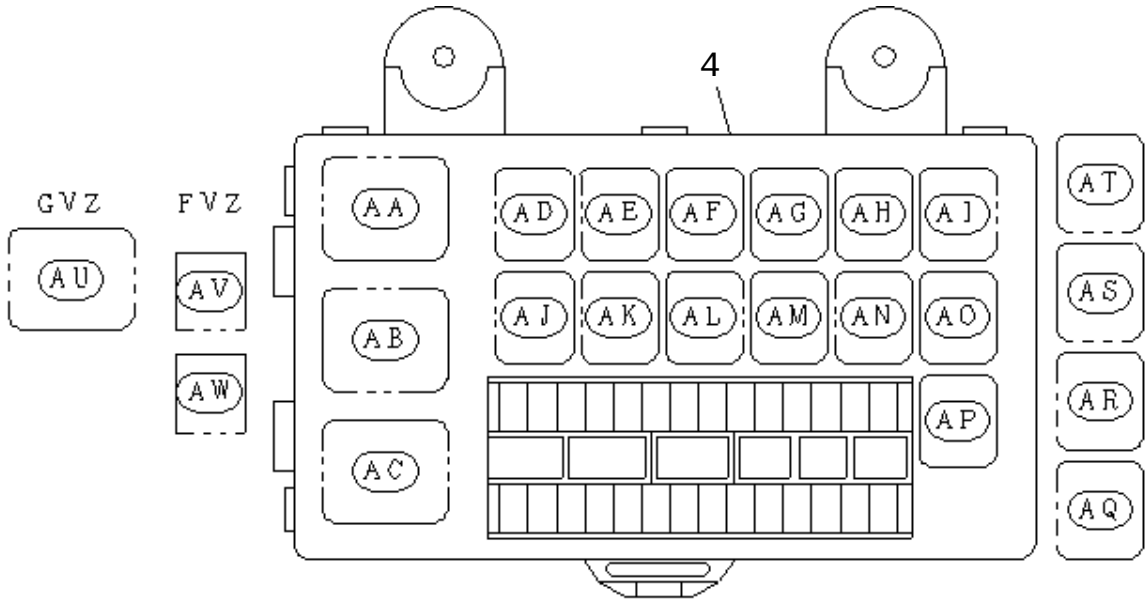

	KEY NO.	RELAY NAME		KEY NO.	RELAY NAME
AA	8-28	STOP LAMP	AM	693	HEAD LAMP(LOW)
AB	8-25	BLOWER MOTOR, HEATER	AN	——	——
AC	8-25	KEY ON	AO	693	HEAD LAMP(HI)
AD	——	——	AP	693	TAIL
AE	——	——	AQ	8-25	PTO MAIN
AF	693	WIPER MAIN	AR	8-25	PTO CUT
AG	693	HORN	AS	8-25	ACC MAIN
AH	693	WIPER(HI/LOW)	AT	8-25	IGNITION
AI	——	——	AU	8-28	TRAILER STOP
AJ	——	——	AV	8-28	BRAKE LOCK
AK	——	——	AW	8-28	BRAKE LOCK
AL	——	——			

https://truckmanualshub.com/


BRACKET

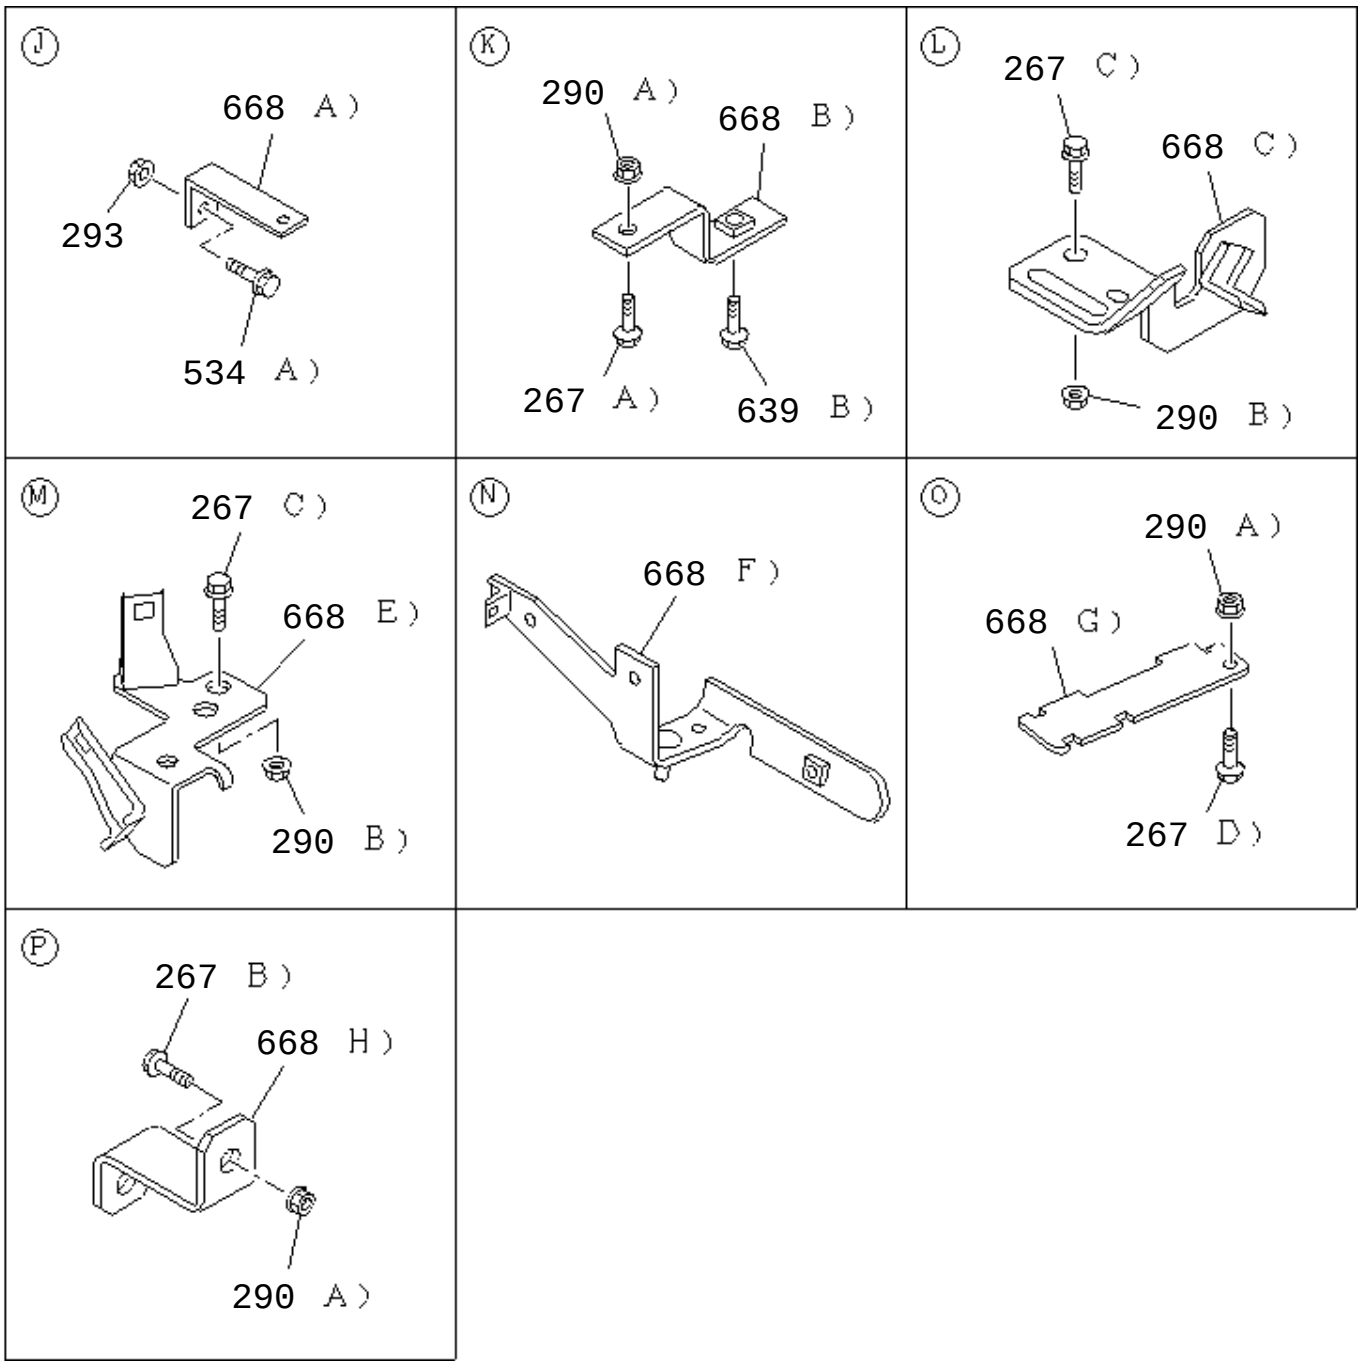

https://truckmanualshub.com/


BOLT AND NUT

BOLT: LK&PL W/WASHER

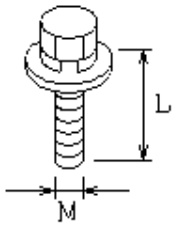


SIZE		KEY NO.
M	L	
8	35	534 B)

BOLT: W/FLANGE

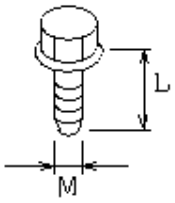

SIZE		KEY NO.
M	L	
8	20	267 D)
		639 A)
	25	267 A)
		639 B)
	30	534 A)
		639 C)
	35	267 B)
10	25	267 C)


NUT: W/FLANGE

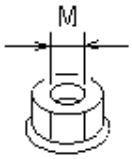


SIZE	KEY NO.
M	
8	290 A)
	293
	525
	640
10	290 B)

https://truckmanualshub.com/


CLIP AND GROMMET

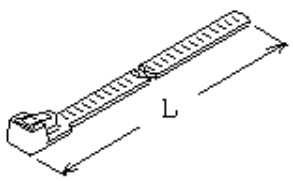


SIZE	KEY NO.
L=250	533 F)

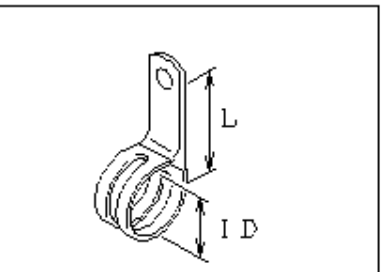


ID	L	
32	50	533 K)
35	50	533 C)

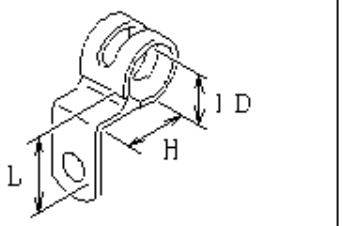


ID	H	L	
27.5	23	24	533 A)
31.5	23	25	533 L)
34.5	23	27.5	533 B)

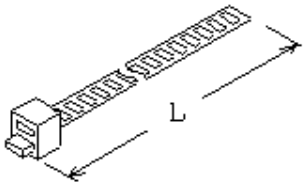


SIZE	KEY NO.
L=350	533 D)
L=600	533 E)

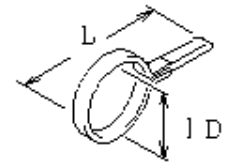


ID	L	
11	41	533 M)
15	65	533 H)

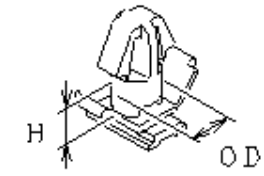

OD	H	
9	17.5	533 I)

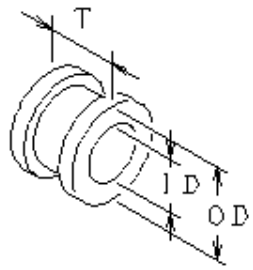

ID	OD	T	
28	35	17	542 A)
		25	542 B)
			548

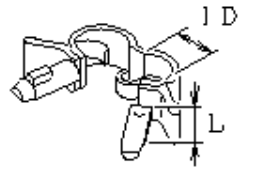

ID	L	
5-12	26	533 G)

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		HARNESS; CAB						
		8-98268-555-0		1402-		01	A	FULLER ES11109 DD M/T(Y5N) VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> EXC. PARKING BRAKE - BRAKE LOCK(6LL) IDN
		8-98268-556-0		1402-		01	A	ZF9S1110 DD M/T(Y5P) VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> EXC. PARKING BRAKE - BRAKE LOCK(6LL) IDN
		8-98268-557-1		1402-		01	A	ZF9S1110 DD M/T(Y5P) PARKING BRAKE - BRAKE LOCK(6LL) VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> IDN
		8-98250-443-1		1402-		01	A	ZF9S1110 DD M/T(Y5P) PARKING BRAKE - BRAKE LOCK(6LL) VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> IDN
		8-98268-558-0		1404-		01	B	FULLER ES11109 DD M/T(Y5N) VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> IDN
		8-98250-444-0		1404-		01	B	FULLER ES11109 DD M/T(Y5N) VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> IDN
		8-98246-463-0		1312-1401		01	A	FULLER ES11109 DD M/T(Y5N) VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
		8-98246-463-0		1402-		01	A	FULLER ES11109 DD M/T(Y5N) VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>,PARKING BRA E LOCK(6LL) IDN
		8-98246-464-1		1312-1401		01	A	ZF9S1110 DD M/T(Y5P) VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
		8-98246-464-1		1402-		01	A	ZF9S1110 DD M/T(Y5P) VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>,PARKING BRA E LOCK(6LL) IDN
2		DIODE; CABLE HARNESS						
		8-94416-438-1		1312-1403		AR	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A) BLACK 3P-1.5A IDN
		8-94416-438-1		1404-		AR	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A) BLACK 3P-1.5A IDN
		8-94422-639-1		1312-1403		AR	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B) BLACK 2P-1.5A IDN
		8-94422-639-1		1404-		AR	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B) BLACK 2P-1.5A IDN
		8-94422-640-1		1312-1403		AR	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (C) BLACK 3P-1.5A IDN
		8-94422-640-1		1404-		AR	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (C) BLACK 3P-1.5A IDN
4		BOX ASM; FUSE,HARNESS						
		8-98065-666-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
4		8-98065-666-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
5	A	FUSE; FACIA HARNESS						
		8-98054-257-0		1312-1403		AR	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 10A RED IDN
		8-98054-257-0		1404-		AR	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 10A RED IDN
		8-98054-258-0		1312-1403		AR	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 15A BLUE IDN
		8-98054-258-0		1404-		AR	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 15A BLUE IDN
		8-98054-259-0		1312-1403		AR	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 20A YELLOW IDN
		8-98054-259-0		1404-		AR	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 20A YELLOW IDN
		8-98062-982-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 25A WHITE IDN
		8-98062-982-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 25A WHITE IDN
6		HARNESS; FRAME						
		8-98246-390-4		1402-		01	A	MIXER CHASSIS<6NR> IDN
		8-98246-391-2		1404-		01	B	IDN
		8-98246-383-3		1312-		01	A	FULLER ES11109 DD M/T(Y5N)
		8-98246-384-3		1312-1401		01	A	ZF9S1110 DD M/T(Y5P) IDN
		8-98246-384-3		1402-		01	A	ZF9S1110 DD M/T(Y5P) EXC. MIXER CHASSIS<6NR> IDN
9		HARNESS; FRAME,RR						
		8-98246-389-1		1402-		01	A	WHEEL BASE 4700MM(47W) IDN
		8-98250-279-1		1404-		01	B	IDN
		8-98221-999-1		1312-		01	A	WHEEL BASE 5300MM(53W) IDN
		8-98222-001-1		1312-		01	A	WHEEL BASE 7100MM(71W) IDN
10		BOX; FUSE,HARNESS						
		8-98030-762-0		1312-1403		01	A	IDN
		8-98030-762-0		1404-		01	AB	IDN
12		HARNESS; ROOF						
		8-98041-949-2		1312-1403		01	A	IDN
		8-98041-949-2		1404-		01	AB	IDN
13		HARNESS; ENG						
		8-98250-434-0		1402-		01	A	POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98075-774-5		1312-1401		01	A	
		8-98075-774-5		1402-1403		01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98075-774-5		1404-		01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ)
		8-98075-774-5		1404-		01	B	
18		HARNESS; DOOR						
		8-98076-305-3		1312-1403	L	01	A	PASSENGER IDN
		8-98076-305-3		1404-	L	01	AB	PASSENGER IDN
		8-98076-304-3		1312-1403	R	01	A	DRIVER IDN

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
18		8-98076-304-3		1404-	R	01	AB	DRIVER IDN
27	A	FUSE UNIT						
		8-98054-258-0		1312-1403		01	A	15A BLUE IDN
		8-98054-258-0		1404-		01	AB	15A BLUE IDN
28		SCREW; FUSE BOX						
		0-28650-616-0		1312-1403		01	A	BOLT M6X16 FLANGE
		0-28650-616-0		1404-		01	AB	BOLT M6X16 FLANGE
29		COVER; FUSE BOX						
		8-98056-968-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
		8-98056-968-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
41		PULLER; FUSE						
		8-98054-260-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
		8-98054-260-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
95		HARNESS; NEUTRAL SW						
		8-98145-855-0		1312-		01	A	ZF9S1110 DD M/T(Y5P) RED
116		HARNESS; TRACTOR						
		8-98251-501-0		1404-		01	B	
174		FUSE; SLOW BLOW						
		8-97219-407-0		1312-1403		01	A	60A YELLOW IDN
		8-97219-407-0		1404-		01	AB	60A YELLOW 60A YELLOW IDN
		8-97219-407-0		1312-1403		01	A	60A YELLOW IDN
		8-97219-407-0		1404-		01	AB	60A YELLOW IDN
		8-98079-191-0		1312-1403		01	A	30A PINK IDN
		8-98079-191-0		1404-		01	AB	30A PINK IDN
		8-98079-192-0		1312-1403		01	A	40A GREEN IDN
		8-98079-192-0		1404-		01	AB	40A GREEN IDN
		8-98079-193-0		1312-1403		03	A	50A RED IDN
		8-98079-193-0		1404-		03	AB	50A RED IDN
184		COVER; RELAY & FUSE BOX						
		8-98030-766-0		1312-1403		01	A	(A) IDN
		8-98030-766-0		1404-		01	AB	(A) IDN
		8-98030-767-1		1312-1403		01	A	(B) IDN

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
184		8-98030-767-1		1404-		01	AB	(B) IDN
201		HARNESS; AIR TANK						
		8-98222-013-0		1402-		01	A	MIXER CHASSIS<6NR> IDN
		8-98250-277-0		1404-		01	B	IDN
		8-98182-517-0		1312-1401		01	A	IDN
		8-98182-517-0		1402-		01	A	EXC. MIXER CHASSIS<6NR> IDN
204		HARNESS; CABLE,FLOOR						
		8-98250-442-0		1404-		01	B	FULLER ES11109 DD M/T(Y5N) IDN
		8-98182-447-0		1312-		01	A	IDN
267		BOLT; BRKT						
		0-28650-820-0		1404-		01	B	(D) M8X20 FLANGE IDN
		0-28650-835-0		1404-		01	B	(B) M8X35 FLANGE
		0-28650-825-0		1312-1403		01	A	(A) M8X25 FLANGE IDN
		0-28650-825-0		1404-		01	AB	(A) M8X25 FLANGE IDN
		0-28650-835-0		1312-1403		02	A	(B) M8X35 FLANGE
		0-28650-835-0		1404-		02	AB	(B) M8X35 FLANGE
		0-28651-025-0		1312-1403		02	A	(C) M10X25 FLANGE IDN
		0-28651-025-0		1404-		02	AB	(C) M10X25 FLANGE IDN
276		COVER; BOX,FRAME HARNESS						
		8-98034-039-1		1312-1403		01	A	
		8-98034-039-1		1404-		01	AB	
280		NUT; BOX ASM FIX						
		0-91180-106-0		1312-1403		04	A	M6 FLANGE
		0-91180-106-0		1404-		04	AB	M6 FLANGE
290		NUT; BRKT						
		0-91180-108-0		1404-		04	B	(A) M8 FLANGE
		0-91180-108-0		1312-1403		01	A	(A) M8 FLANGE
		0-91180-108-0		1404-		01	AB	(A) M8 FLANGE
		0-91180-108-0		1312-1403		02	A	(A) M8 FLANGE
		0-91180-108-0		1312-1403		02	A	(A) M8 FLANGE
		0-91180-108-0		1404-		02	AB	(A) M8 FLANGE

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
290		0-91180-108-0		1404-		02	A	(A) M8 FLANGE
		0-91180-210-0		1312-1403		02	A	(B) M10 FLANGE
		0-91180-210-0		1404-		02	AB	(B) M10 FLANGE
293		NUT						
		0-91180-108-0		1312-1403		01	A	M8 FLANGE
		0-91180-108-0		1404-		01	AB	M8 FLANGE
453		PROTECTOR; HARNESS						
		1-82699-709-0		1312-1403		01	A	IDN
		1-82699-709-0		1404-		01	AB	IDN
462		HARNESS; SW,RANGE						
		8-98145-857-0		1312-		01	A	ZF9S1110 DD M/T(Y5P) BLUE
463		HARNESS; SW,BACK UP						
		8-98145-856-0		1312-		01	A	ZF9S1110 DD M/T(Y5P) BLACK
486		HARNESS; ALL SPEED ACCEL						
		1-82675-898-0		1402-		01	A	MIXER CHASSIS<6NR>
525		NUT; CLIP						
		0-91180-108-0		1312-1403		01	A	M8 FLANGE
		0-91180-108-0		1312-1403		01	A	M8 FLANGE
		0-91180-108-0		1404-		01	AB	M8 FLANGE
		0-91180-108-0		1404-		01	AB	M8 FLANGE
		0-91180-108-0		1404-		01	B	M8 FLANGE
533		CLIP						
		1-09700-466-0		1402-		16	A	WHEEL BASE 4700MM(47W) (H) ID=15 L=65
		1-09700-403-0		1404-		01	B	(M) ID=11 L=41
		1-09700-466-0		1404-		10	B	(H) ID=15 L=65
		1-09701-055-1		1404-		01	B	(K) ID=32 L=50
		1-09707-183-0		1404-		02	B	(D) L=350
		1-09709-150-0		1404-		01	B	(J) W/SPONGE RUBBER
		1-09701-017-0		1404-		01	B	(L) ID=31.5 H=23 L=25
		1-09701-017-0		1404-		01	B	(L) ID=31.5 H=23 L=25
		1-09700-863-0		1312-		02	A	(A) ID=27.5 H=23 L=24
		1-09700-905-0		1312-		02	A	(B) ID=34.5 H=23 L=27.5
		1-09701-214-0		1312-		01	A	(C) ID=35 L=50

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
533		1-09707-107-1		1312-1401		01	A	(E) L=600
		1-09707-107-1		1312-1401		01	A	(E) L=600
		1-09707-107-1		1402-1403		01	A	EXC. MIXER CHASSIS<6NR> (E) L=600
		1-09707-107-1		1402-1403		01	A	(E) L=600
		1-09707-107-1		1404-		01	AB	(E) L=600
		1-09707-107-1		1404-		01	A	EXC. MIXER CHASSIS<6NR> (E) L=600
		1-09707-183-0		1312-1403		01	A	(D) L=350
		1-09707-183-0		1404-		01	AB	(D) L=350
		1-09709-181-0		1312-1401		01	A	(I) OD=9 H=17.5
		1-09709-181-0		1402-1403		01	A	MIXER CHASSIS<6NR> (I) OD=9 H=17.5
		1-09709-181-0		1402-1403		01	A	(I) OD=9 H=17.5
		1-09709-181-0		1404-		01	AB	(I) OD=9 H=17.5
		1-09709-181-0		1404-		01	A	MIXER CHASSIS<6NR> (I) OD=9 H=17.5
		1-09709-289-0		1312-1401		01	A	(G) ID=5-12 L=26
		1-09709-289-0		1402-		01	A	EXC. MIXER CHASSIS<6NR> (G) ID=5-12 L=26
		5-09707-030-1		1312-1403		05	A	(F) L=250 IDN
		5-09707-030-1		1404-		05	AB	(F) L=250 IDN
		1-09700-466-0		1312-		20	A	WHEEL BASE 5300MM(53W) (H) ID=15 L=65
		1-09700-466-0		1312-		30	A	WHEEL BASE 7100MM(71W) (H) ID=15 L=65
		5-09707-030-1		1312-1403		01	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> (F) L=250 IDN
		5-09707-030-1		1312-1403		01	A	(F) L=250 IDN
		5-09707-030-1		1404-		01	AB	(F) L=250 IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
533		5-09707-030-1		1404-		01	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> (F) L=250 IDN
		5-09707-030-1		1404-		01	B	(F) L=250 IDN
534		BOLT 0-28650-830-0		1312-1403		01	A	(A) M8X30 FLANGE
		0-28650-830-0		1404-		01	AB	(A) M8X30 FLANGE
		1-09030-073-0		1312-1403		03	A	(B) M8X35 W/LK&PL WASHER
		1-09030-073-0		1404-		03	AB	(B) M8X35 W/LK&PL WASHER
542		GROMMET; HARNESS 1-09332-011-1		1402-1403		01	A	MIXER CHASSIS<6NR> (B) ID=28 OD=35 T=25
		1-09332-011-1		1404-		01	A	MIXER CHASSIS<6NR> (B) ID=28 OD=35 T=25
		1-09332-011-1		1404-		01	B	(B) ID=28 OD=35 T=25
		9-09956-256-2		1312-1403		01	A	(A) ID=28 OD=35 T=17
		9-09956-256-2		1404-		01	AB	(A) ID=28 OD=35 T=17
548		GROMMET 1-09332-011-1		1312-1403		01	A	ID=28 OD=35 T=25
		1-09332-011-1		1404-		01	AB	ID=28 OD=35 T=25
570		HARNESS; SPEED SENSOR 8-98148-602-0		1312-		01	A	ZF9S1110 DD M/T(Y5P)
595		HARNESS; WARNING,BRK 8-97620-487-1		1312-1403		01	A	IDN
		8-97620-487-1		1404-		01	AB	IDN
639		BOLT; CLIP 0-50640-830-0		1404-		01	B	(D) M8X30 W/LK&PL WASHER
		0-28650-820-0		1312-1403		01	A	(A) M8X20 FLANGE IDN
		0-28650-820-0		1404-		01	AB	(A) M8X20 FLANGE IDN
		0-28650-825-0		1312-1403		01	A	(B) M8X25 FLANGE IDN
		0-28650-825-0		1404-		01	AB	(B) M8X25 FLANGE IDN
		0-28650-830-0		1312-1403		01	A	(C) M8X30 FLANGE

https://truckmanualshub.com/




KEY	R/C	PART NAME / PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
639		0-28650-830-0		1404-		01	AB	(C) M8X30 FLANGE
640		NUT; CLIP						
		0-91180-108-0		1312-1403		01	A	M8 FLANGE
		0-91180-108-0		1404-		01	AB	M8 FLANGE
668		BRACKET; HARNESS						
		8-98237-815-0		1402-		01	A	MIXER CHASSIS<6NR> (F)
		1-47476-658-0		1404-		01	B	(H)
		8-98127-093-0		1404-		01	B	(G)
		1-47475-304-0		1312-1403		01	A	(A) L=55
		1-47475-304-0		1404-		01	AB	(A) L=55
		8-97609-110-1		1312-1403		01	A	(B)
		8-97609-110-1		1404-		01	AB	(B)
		8-97616-305-0		1312-1403		01	A	(C)
		8-97616-305-0		1404-		01	AB	(C)
		8-98095-653-2		1312-1403		01	A	(D)
		8-98095-653-2		1404-		01	AB	(D)
		8-98168-184-0		1312-1403		01	A	(E)
		8-98168-184-0		1404-		01	AB	(E)
		8-98212-082-1		1312-1401		01	A	(F)
		8-98212-082-1		1402-1403		01	A	EXC. MIXER CHASSIS<6NR> (F)
		8-98212-082-1		1404-		01	A	EXC. MIXER CHASSIS<6NR> (F)
		8-98212-082-1		1404-		01	B	(F)
673		HARNESS; EXT,SENSOR						
		8-98069-172-0		1312-1403		01	A	IDN
		8-98069-172-0		1404-		01	AB	IDN
691		HARNESS; IDLE CONT						
		8-98049-014-2		1312-1403		01	A	IDN
		8-98049-014-2		1404-		01	AB	IDN
693		RELAY; FUSE BOX						
		8-97173-035-1		1312-1403		AR	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 24V 10A MATSUSHITA IDN
		8-97173-035-1		1404-		AR	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 24V 10A MATSUSHITA IDN
694		BOX ASM; CONNECTOR						
		8-98057-771-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98057-771-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
8-15		Move to 8-15						
3-80		Move to 3-80						
8-28		Move to 8-28						
1-01		Move to 1-01						
1-30		Move to 1-30						
1-31		Move to 1-31						
3-75		Move to 3-75						
5-01		Move to 5-01						
7-40		Move to 7-40						



https://truckmanualshub.com/



KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
2-20		Move to 2-20						
		Move to 2-20						
3-20		Move to 3-20						
3-25		Move to 3-25						
8-25		Move to 8-25						

https://truckmanualshub.com/

CLIP NO.1 AND OTHER PARTS

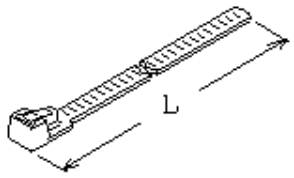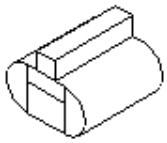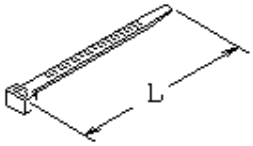SIZE	KEY NO.
	
L=140	48 (A)
L=250	217
	
—	503
	
L=250	14 (A)

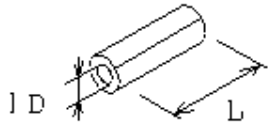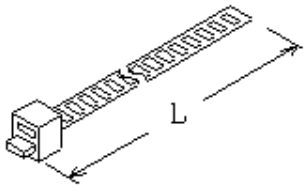
SIZE		KEY NO.
		
ID	L	
10	30	1 (B)
14	60	1 (A)
		
L=350		14 (B)

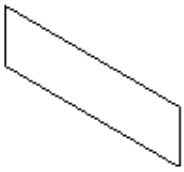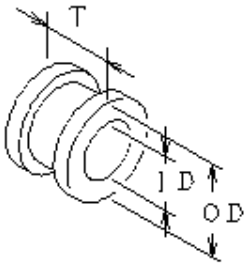SIZE	KEY NO.
	
—	530
	
—	538
	


ID	OD	T	
28	35	25	178

https://truckmanualshub.com/


SIZE	KEY NO.

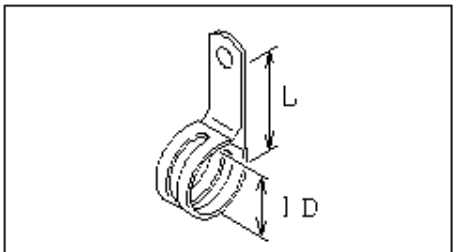

ID	L	
14.5	20	16 : I)
	40	16 : E)
24	32	305 D)
25	60	305 H)
28	32	306 A)

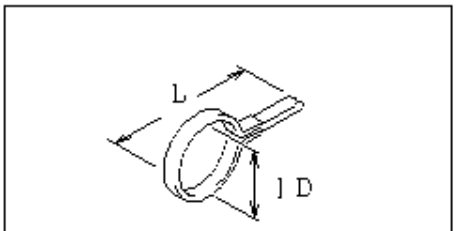


ID	L	
28	78	48 : B)

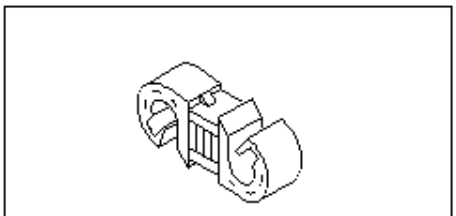


ID	
12&15	16 : J)


SIZE	KEY NO.

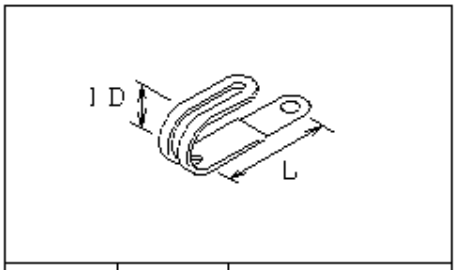

ID	L	
21	47.5	305 C)

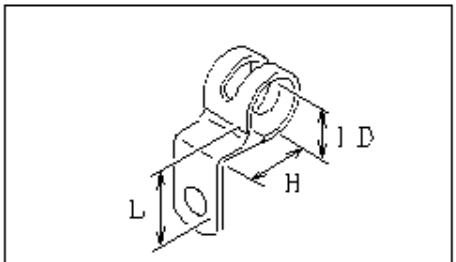


ID	H	L	
19	21	39	305 G)
20	23	27	305 F)
24.5	23	25	305 K)

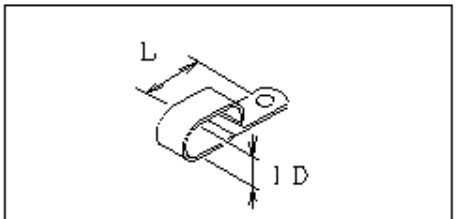


ID	L	
16X2	50	16 : G)


SIZE	KEY NO.

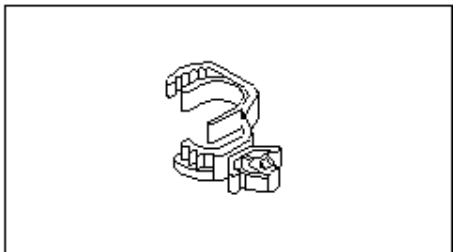

——	16 : A)

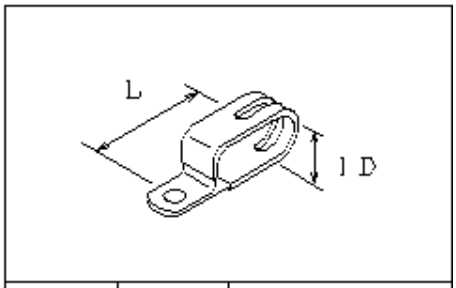

ID	L	
28X2	28	306 B)

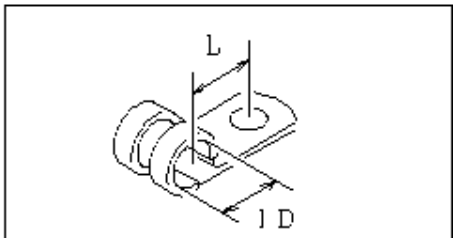

ID	L	
18	28	305 L)
24	27	305 E)

https://truckmanualshub.com/

CLIP NO.3

SIZE		KEY NO.
ID	L	
11	20	16 : H)
16	28	16 : F)
		305 B)
	40	305 A)

SIZE		KEY NO.
OD	H	
9	6	305 I)
		470

SIZE		KEY NO.
L		
20		116

SIZE		KEY NO.
L		
155		16 : B)

SIZE		KEY NO.
L		
100		305 J)

SIZE		KEY NO.
—		16 : C)


SIZE		KEY NO.
L		
40. 6		16 : D)

https://truckmanualshub.com/

BOLT,NUT,SCREW AND WASHER


SIZE	KEY NO.

BOLT: W/FLANGE

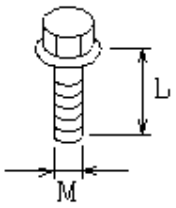


M	L	
6	12	139 A)
		304 B)
	16	38 : A)
		304 C)
	20	304 A)

HEXALOBULAR SOCKET

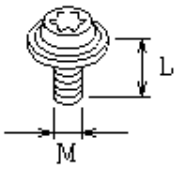

M	L	
5	7	127


BOLT; W/PL WASHER

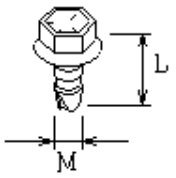

M	L	
8	18.5	38 : C)
		386


SIZE	KEY NO.

BOLT; W/FLANGE

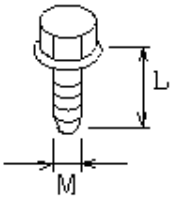

M	L	
6	25	38 : B)
		139 D)
	30	139 B)
10	16	38 : D)
	20	38 : E)
	35	139 C)


WASHER; PL

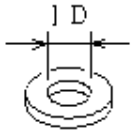

ID	
10.5	184


SIZE	KEY NO.

NUT: W/FLANGE

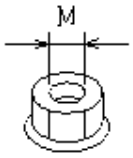

M	
6	524
8	219
	525


BOLT; W/LK&PL WASHER

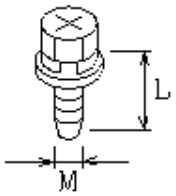

M	L	
4	10	516
6	16	377

https://truckmanualshub.com/

BRACKET

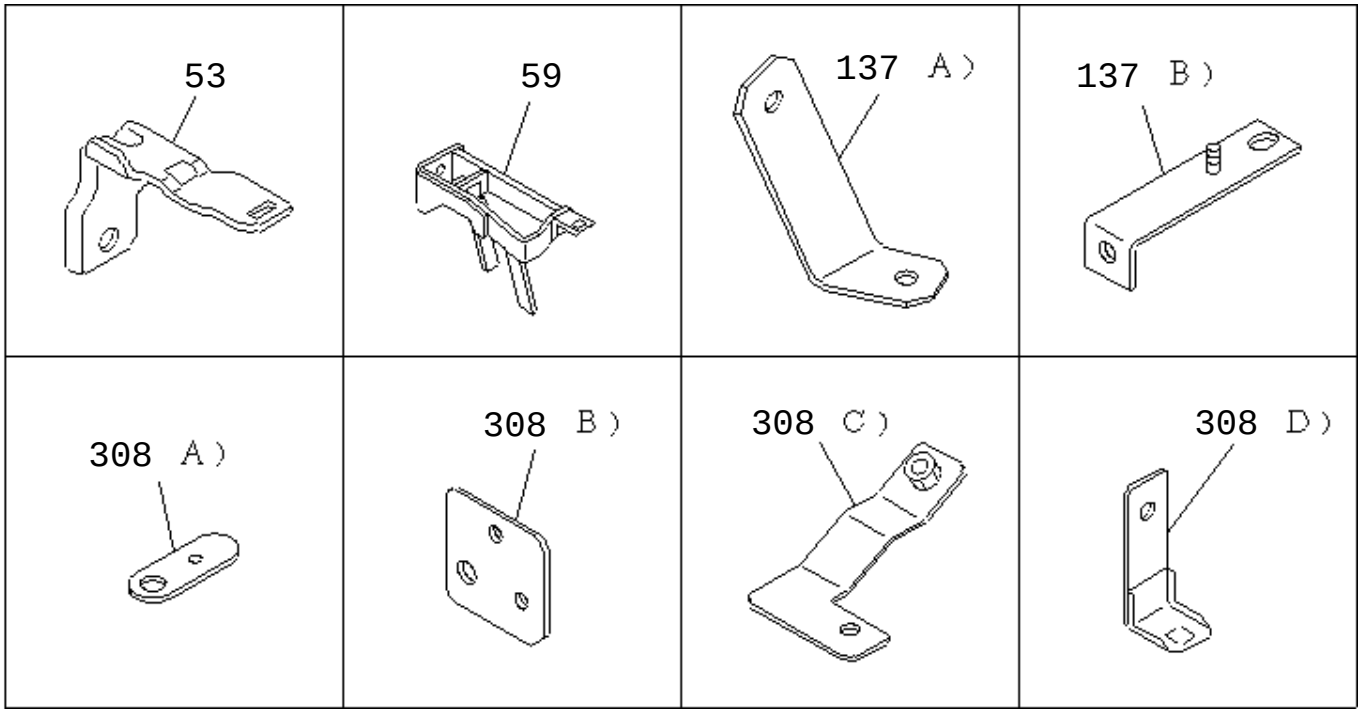

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		SLEEVE; RUBBER					
		9-09956-682-0		1402-1403	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=10 OD=14 L=30
		9-09956-682-0		1404-	03	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=10 OD=14 L=30
		9-09956-682-0		1404-	03	B	(B) ID=10 OD=14 L=30
		1-09337-030-0		1312-1403	01	A	(A) ID=14 OD=18 L=60
		1-09337-030-0		1404-	01	AB	(A) ID=14 OD=18 L=60
		9-09956-682-0		1312-1401	03	A	(B) ID=10 OD=14 L=30
		9-09956-682-0		1402-	02	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=10 OD=14 L=30
14		CLIP; BAND,HARNESS					
		8-98216-430-0		1402-	10	A	POWER TAKE OFF-FLYWHEEL(6SZ) (A) L=250
		8-98216-430-0		1402-1403	08	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) L=250
		8-98216-430-0		1404-	08	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (A) L=250
		8-98216-430-0		1404-	08	B	(A) L=250
		1-09707-183-0		1312-1403	01	A	(B) L=350
		1-09707-183-0		1404-	01	AB	(B) L=350
		8-98216-430-0		1312-1401	09	A	(A) L=250
		8-98216-430-0		1402-1403	01	A	(A) L=250
		8-98216-430-0		1404-	01	AB	(A) L=250
16		CLIP; HARNESS					
		1-09709-281-1		1404-	01	B	(J) ID=12 & 15
		0-95235-556-0		1312-1403	02	A	(F) ID=16 L=28
		0-95235-556-0		1404-	02	AB	(F) ID=16 L=28
		8-94413-325-0		1312-1403	01	A	(A) ID=10 & 16 IDN
		8-94413-325-0		1404-	01	AB	(A) ID=10 & 16 IDN
		8-97173-307-0		1312-1403	18	A	(B) L=155 IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
16		8-97173-307-0		1404-	18	AB	(B) L=155 IDN
		8-97229-357-0		1312-1403	02	A	(D) L=40.6
		8-97229-357-0		1404-	02	AB	(D) L=40.6
		8-98052-679-0		1312-1403	02	A	(C)
		8-98052-679-0		1404-	02	AB	(C)
		0-95235-035-0		1312-1403	01	A	FULLER ES11109 DD M/T(Y5N) (H) ID=11 L=20
		0-95235-035-0		1404-	01	AB	FULLER ES11109 DD M/T(Y5N) (H) ID=11 L=20
		1-09701-012-0		1312-1403	01	A	FULLER ES11109 DD M/T(Y5N) (I) ID=14.5 L=20
		1-09701-012-0		1404-	01	AB	FULLER ES11109 DD M/T(Y5N) (I) ID=14.5 L=20
		0-95325-586-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) (G) ID=16X2 L=50
		1-09701-014-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) (E) ID=14.5 L=40
38		BOLT; CLIP,HARNESS 0-28050-816-0		1312-1403	02	A	(A) M8X16 FLANGE
		0-28050-816-0		1404-	02	AB	(A) M8X16 FLANGE
		0-28650-825-0		1312-1403	02	A	(B) M8X25 FLANGE IDN
		0-28650-825-0		1404-	02	AB	(B) M8X25 FLANGE IDN
		0-28650-825-0		1312-1403	03	A	(B) M8X25 FLANGE IDN
		0-28650-825-0		1404-	03	AB	(B) M8X25 FLANGE IDN
		8-98141-255-0		1312-1403	03	A	(C) M8X18.5 W/PL WASHER IDN
		8-98141-255-0		1404-	03	AB	(C) M8X18.5 W/PL WASHER IDN
		0-28151-016-0		1312-1403	01	A	FULLER ES11109 DD M/T(Y5N) (D) M10X16 FLANGE
		0-28151-016-0		1404-	01	AB	FULLER ES11109 DD M/T(Y5N) (D) M10X16 FLANGE
		0-28651-020-0		1312-1403	01	A	FULLER ES11109 DD M/T(Y5N) (E) M10X20 FLANGE IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
38		0-28651-020-0		1404-	01	AB	FULLER ES11109 DD M/T(Y5N) (E) M10X20 FLANGE IDN
48		CLIP; FRAME HARNESS					
		1-09700-858-0		1312-	01	A	(B) ID=28 L=78
		5-09707-031-1		1312-1403	02	A	(A) L=140 IDN
		5-09707-031-1		1404-	02	AB	(A) L=140 IDN
53		BRACKET; HARNESS					
		8-98052-458-0		1312-1403	01	A	IDN
		8-98052-458-0		1404-	01	AB	IDN
59		BRACKET; FRAME HARNESS					
		8-98099-963-0		1402-	01	A	MIXER CHASSIS<6NR>
		8-97609-264-2		1312-1401	01	A	
		8-97609-264-2		1402-1403	01	A	EXC. MIXER CHASSIS<6NR>
		8-97609-264-2		1404-	01	A	EXC. MIXER CHASSIS<6NR>
		8-97609-264-2		1404-	01	B	
116		CLIP; ROOF HARNESS					
		1-09987-246-2		1312-1403	03	A	L=20
		1-09987-246-2		1404-	03	AB	L=20
127		SCREW; FACIA HARNESS CLIP					
		8-98063-767-0		1312-1403	01	A	M5X7 HEXALOBULAR SOCKET IDN
		8-98063-767-0		1404-	01	AB	M5X7 HEXALOBULAR SOCKET IDN
137		BRACKET; HARNESS CLAMP					
		8-97614-728-1		1312-1403	01	A	(A)
		8-97614-728-1		1404-	01	AB	(A)
		8-97624-013-0		1312-1403	01	A	(B)
		8-97624-013-0		1404-	01	AB	(B)
139		BOLT; BRKT					
		0-28050-812-0		1312-1403	01	A	(A) M8X12 FLANGE
		0-28050-812-0		1404-	01	AB	(A) M8X12 FLANGE
		0-28650-825-0		1312-1403	01	A	(D) M8X25 FLANGE IDN
		0-28650-825-0		1404-	01	AB	(D) M8X25 FLANGE IDN
		0-28650-830-0		1312-1403	01	A	(B) M8X30 FLANGE
		0-28650-830-0		1404-	01	AB	(B) M8X30 FLANGE
		0-28651-035-0		1312-1403	01	A	(C) M10X35 FLANGE IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
139		0-28651-035-0		1404-	01	AB	(C) M10X35 FLANGE IDN
178		GROMMET; HARNESS					
		1-09332-011-1		1312-1401	01	A	ID=28 OD=35 T=25
		1-09332-011-1		1312-1401	01	A	ID=28 OD=35 T=25
		1-09332-011-1		1402-1403	01	A	EXC. MIXER CHASSIS<6NR> ID=28 OD=35 T=25
		1-09332-011-1		1402-1403	01	A	ID=28 OD=35 T=25
		1-09332-011-1		1404-	01	AB	ID=28 OD=35 T=25
		1-09332-011-1		1404-	01	A	EXC. MIXER CHASSIS<6NR> ID=28 OD=35 T=25
184		WASHER; PL,STARTER EARTH					
		1-09503-265-0		1402-	01	A	MIXER CHASSIS<6NR> ID=10.5 OD=22 T=2.0
		1-09503-265-0		1312-1401	02	A	ID=10.5 OD=22 T=2.0
		1-09503-265-0		1402-1403	02	A	EXC. MIXER CHASSIS<6NR> ID=10.5 OD=22 T=2.0
		1-09503-265-0		1404-	02	A	EXC. MIXER CHASSIS<6NR> ID=10.5 OD=22 T=2.0
		1-09503-265-0		1404-	02	B	ID=10.5 OD=22 T=2.0
217		CLIP; RR BODY HARNESS					
		5-09707-030-1		1312-1403	02	A	L=250 IDN
		5-09707-030-1		1404-	02	AB	L=250 IDN
219		NUT					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
304		BOLT; ENG HARNESS CLIP					
		0-28050-816-0		1402-1403	05	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (C) M8X16 FLANGE
		0-28050-816-0		1404-	05	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (C) M8X16 FLANGE
		0-28050-816-0		1404-	05	B	(C) M8X16 FLANGE
		0-28050-812-0		1312-1403	06	A	(B) M8X12 FLANGE
		0-28050-812-0		1404-	06	AB	(B) M8X12 FLANGE
		0-28050-816-0		1312-1401	05	A	(C) M8X16 FLANGE
		0-28050-816-0		1402-	03	A	POWER TAKE OFF-FLYWHEEL(6SZ) (C) M8X16 FLANGE
		0-28050-820-0		1312-1403	04	A	(A) M8X20 FLANGE
		0-28050-820-0		1404-	04	AB	(A) M8X20 FLANGE
305		CLIP; ENG HARNESS					
		1-09700-862-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (K) ID=24.5 H=23 L=25

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
305		1-09701-067-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (L) ID=18 L=28
		0-95235-556-0		1402-1403	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=16 L=28
		0-95235-556-0		1404-	02	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=16 L=28
		0-95235-556-0		1404-	02	B	(B) ID=16 L=28
		8-94443-021-1		1312-1403	02	A	(J) L=100
		8-94443-021-1		1404-	02	AB	(J) L=100
		0-95235-556-0		1312-1401	02	A	(B) ID=16 L=28
		0-95235-556-0		1402-	01	A	POWER TAKE OFF-FLYWHEEL(6SZ) (B) ID=16 L=28
		0-95235-576-0		1312-1403	01	A	(A) ID=16 L=40
		0-95235-576-0		1404-	01	AB	(A) ID=16 L=40
		1-09700-766-1		1312-1401	01	A	(D) ID=24 L=32
		1-09700-766-1		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (D) ID=24 L=32
		1-09700-766-1		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (D) ID=24 L=32
		1-09700-766-1		1404-	01	B	(D) ID=24 L=32
		1-09700-809-0		1312-1403	03	A	(E) ID=24 L=27
		1-09700-809-0		1404-	03	AB	(E) ID=24 L=27
		1-09700-861-0		1312-1403	01	A	(F) ID=20 H=23 L=27
		1-09700-861-0		1404-	01	AB	(F) ID=20 H=23 L=27
		1-09700-972-1		1312-1403	01	A	(G) ID=19 L=39 H=21
		1-09700-972-1		1404-	01	AB	(G) ID=19 L=39 H=21
		1-09701-041-1		1312-1403	01	A	(H) ID=25 L=60
		1-09701-041-1		1404-	01	AB	(H) ID=25 L=60
		1-09709-178-0		1312-1403	01	A	(I) OD=9 H=6
		1-09709-178-0		1404-	01	AB	(I) OD=9 H=6

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
305		8-94178-108-0		1312-1403	01	A	(C) ID=21 L=47.5
		8-94178-108-0		1404-	01	AB	(C) ID=21 L=47.5
306		CLIP; HARNESS,ELEC GOV					
		1-09701-107-1		1312-1403	01	A	(A) ID=28 L=32
		1-09701-107-1		1404-	01	AB	(A) ID=28 L=32
		1-09701-302-0		1312-1403	02	A	(B) ID=28X2 L=28
		1-09701-302-0		1404-	02	AB	(B) ID=28X2 L=28
308		BRACKET; CLIP,ENG HARNESS					
		8-97601-310-0		1312-1403	02	A	(A)
		8-97601-310-0		1404-	02	AB	(A)
		8-98021-692-1		1312-1401	01	A	(B)
		8-98021-692-1		1402-1403	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98021-692-1		1404-	01	A	EXC. POWER TAKE OFF-FLYWHEEL(6SZ) (B)
		8-98021-692-1		1404-	01	B	(B)
		8-98032-178-0		1312-1403	01	A	(C)
		8-98032-178-0		1404-	01	AB	(C)
		8-98075-824-0		1312-1403	01	A	(D)
		8-98075-824-0		1404-	01	AB	(D)
377		BOLT; CAB EARTH					
		8-97086-823-0		1312-1403	02	A	M6X16 W/LK&PL WASHER
		8-97086-823-0		1404-	02	AB	M6X16 W/LK&PL WASHER
386		BOLT; GRAND HARNESS					
		8-98141-255-0		1312-1403	02	A	M8X18.5 W/PL WASHER IDN
		8-98141-255-0		1404-	02	AB	M8X18.5 W/PL WASHER IDN
470		CLIP; HARNESS,LICENSE LAMP					
		1-09709-178-0		1312-1403	01	A	OD=9 H=6
		1-09709-178-0		1404-	01	AB	OD=9 H=6
503		CONNECTOR					
		1-82690-668-0		1312-1403	01	A	
		1-82690-668-0		1404-	01	AB	
516		BOLT; HARNESS					
		0-36230-410-0		1312-1403	01	A	M4X10 W/LK&PL WASHER
		0-36230-410-0		1404-	01	AB	M4X10 W/LK&PL WASHER
524		NUT; HARNESS					
		0-91180-106-0		1312-1403	02	A	M6 FLANGE
		0-91180-106-0		1404-	02	AB	M6 FLANGE
525		NUT; CLIP					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE

https://truckmanualshub.com/

FIXING PARTS; WIRING HARNESS

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
525		0-91180-108-0		1404-	02	AB	M8 FLANGE
530		SEAL; HARNESS 1-72498-019-1		1312-1402	11	A	180X40
538		SEAL; HOLE 1-76798-019-0		1312-1403	01	A	OD=25 BLACK
		1-76798-019-0		1404-	01	AB	OD=25 BLACK

https://truckmanualshub.com/

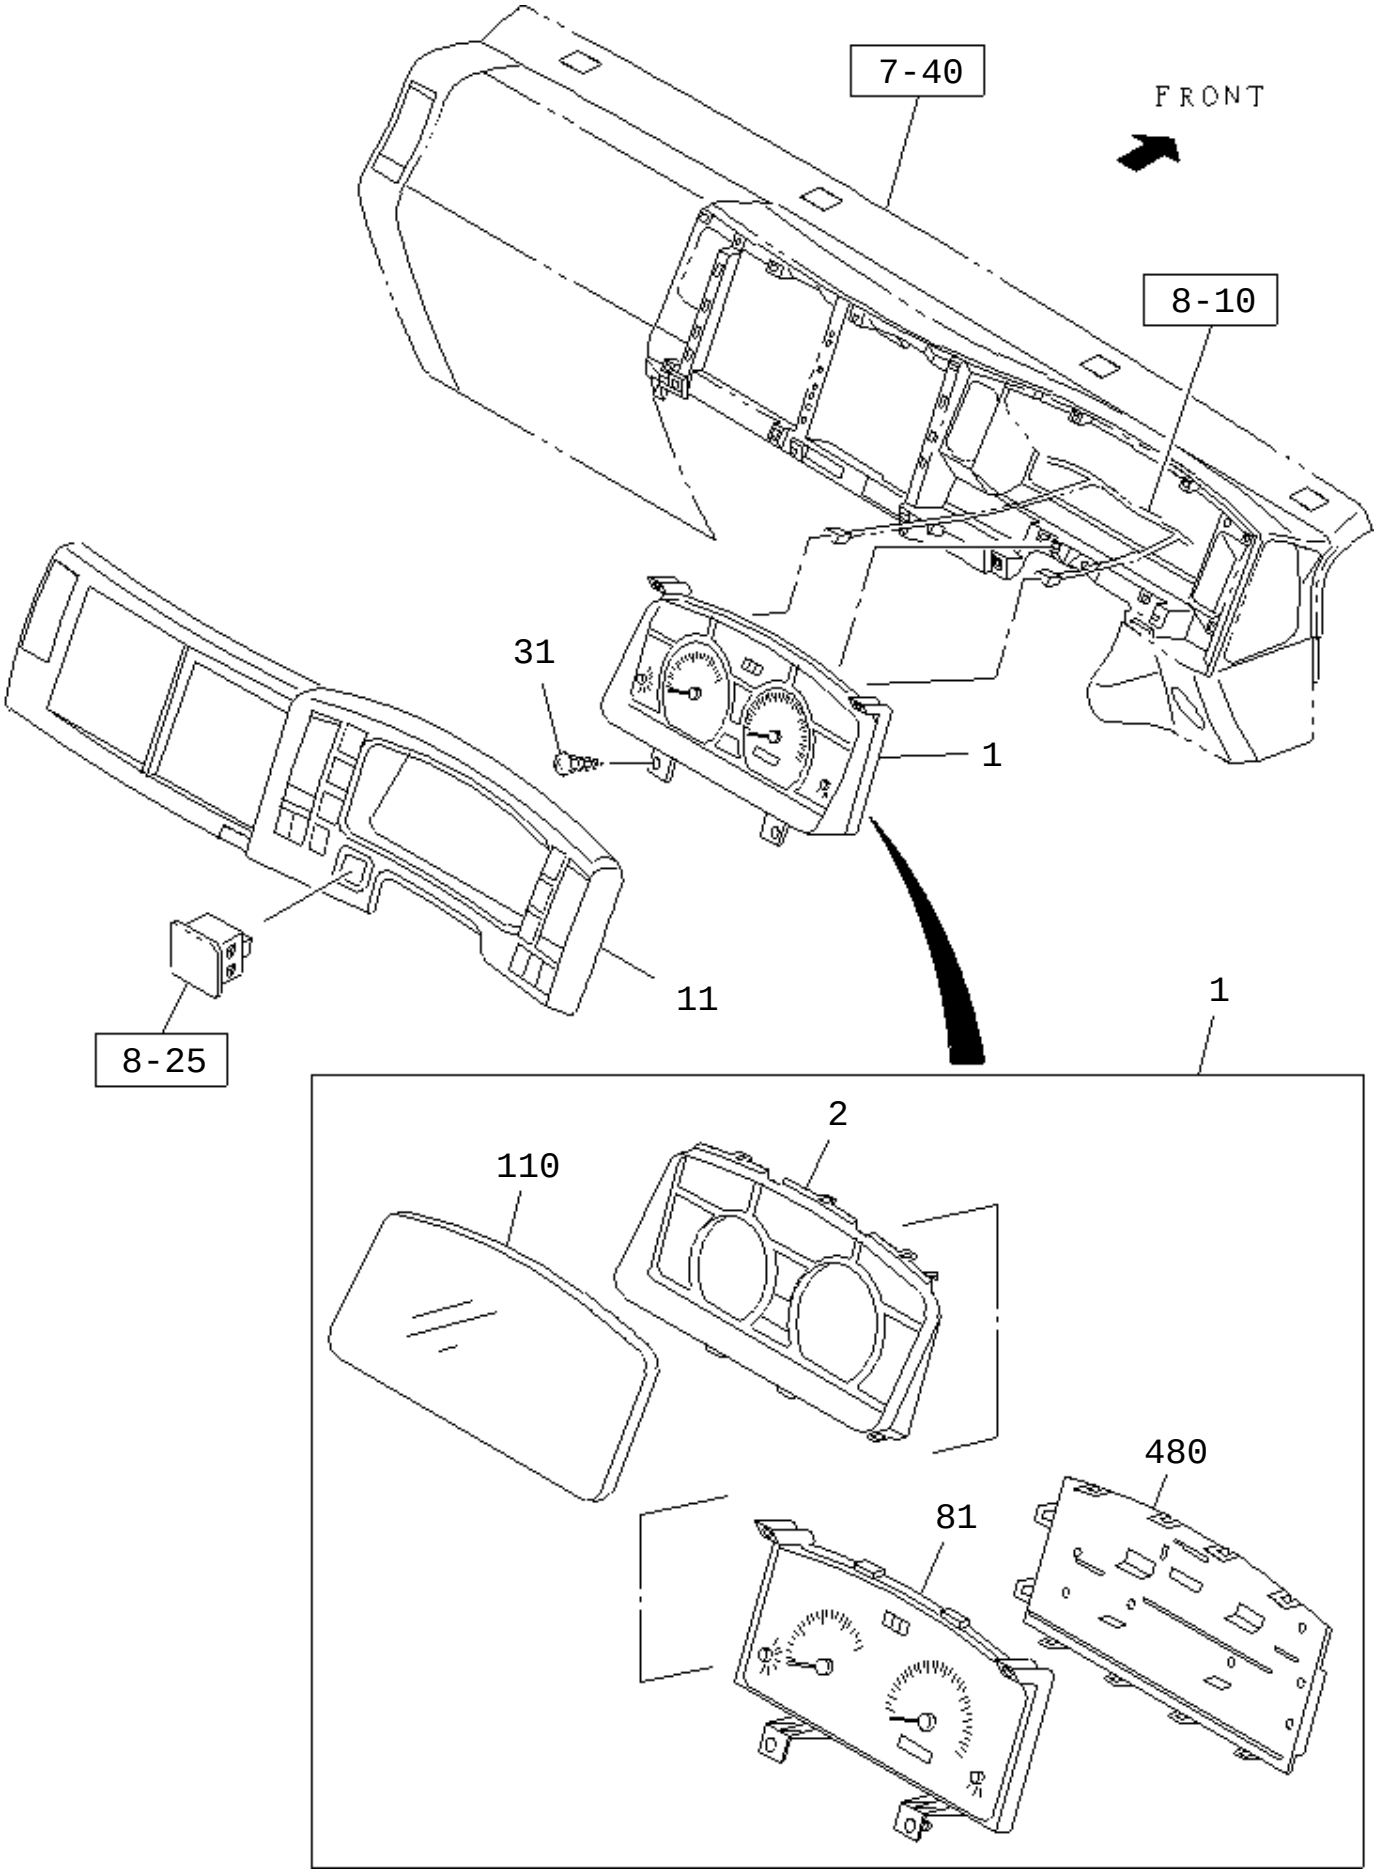


https://truckmanualshub.com/


8-21 METER ASM

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		METER COMPL; CLUSTER					
		8-98270-280-0		1402-1403	01	A	PARKING BRAKE - BRAKE LOCK(6LL)
		8-98270-280-0		1404-	01	A	PARKING BRAKE - BRAKE LOCK(6LL)
		8-98270-280-0		1404-	01	B	
		8-98226-874-0		1312-1401	01	A	
		8-98226-874-0		1402-	01	A	EXC. PARKING BRAKE - BRAKE LOCK(6LL)
2		PANEL; CLUSTER					
		8-98054-432-0		1312-1403	01	A	
		8-98054-432-0		1404-	01	AB	
11		CLUSTER ASM; METER					
		8-97405-350-6		1312-1403	01	A	
							DARK GRAY
							IDN
		8-97405-350-6		1404-	01	AB	
							DARK GRAY
							IDN
31		SCREW; METER,INST PANEL					
		0-72180-516-0		1312-1403	04	A	
							M5X16 TAPPING
		0-72180-516-0		1404-	04	AB	
							M5X16 TAPPING
81		METER SUB ASM					
		8-98270-281-0		1402-1403	01	A	PARKING BRAKE - BRAKE LOCK(6LL)
		8-98270-281-0		1404-	01	A	PARKING BRAKE - BRAKE LOCK(6LL)
		8-98270-281-0		1404-	01	B	
		8-98226-905-0		1312-1401	01	A	
		8-98226-905-0		1402-	01	A	EXC. PARKING BRAKE - BRAKE LOCK(6LL)
110		GLASS; CLUSTER METER					
		8-98054-431-0		1312-1403	01	A	
		8-98054-431-0		1404-	01	AB	
480		COVER; METER					
		8-98054-433-0		1312-1403	01	A	
							BLACK
		8-98054-433-0		1404-	01	AB	
							BLACK
7-40		Move to 7-40					
8-10		Move to 8-10					
8-25		Move to 8-25					

https://truckmanualshub.com/


SWITCH NO.1

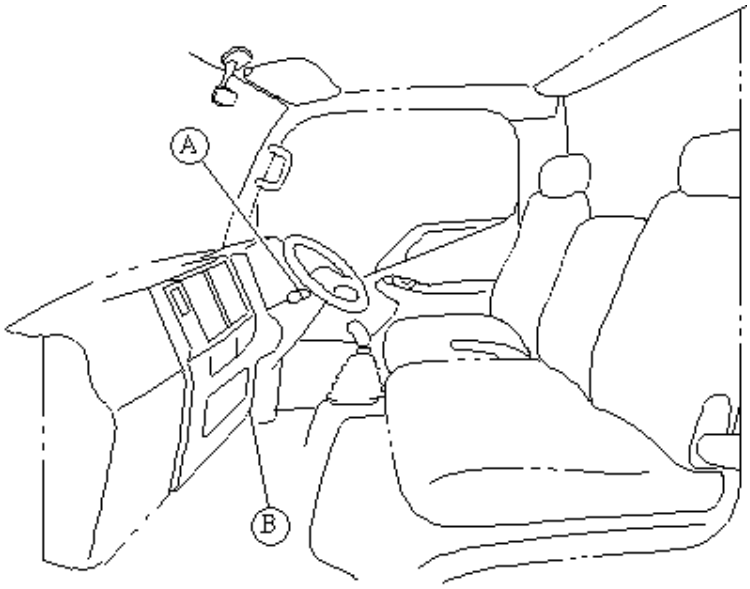


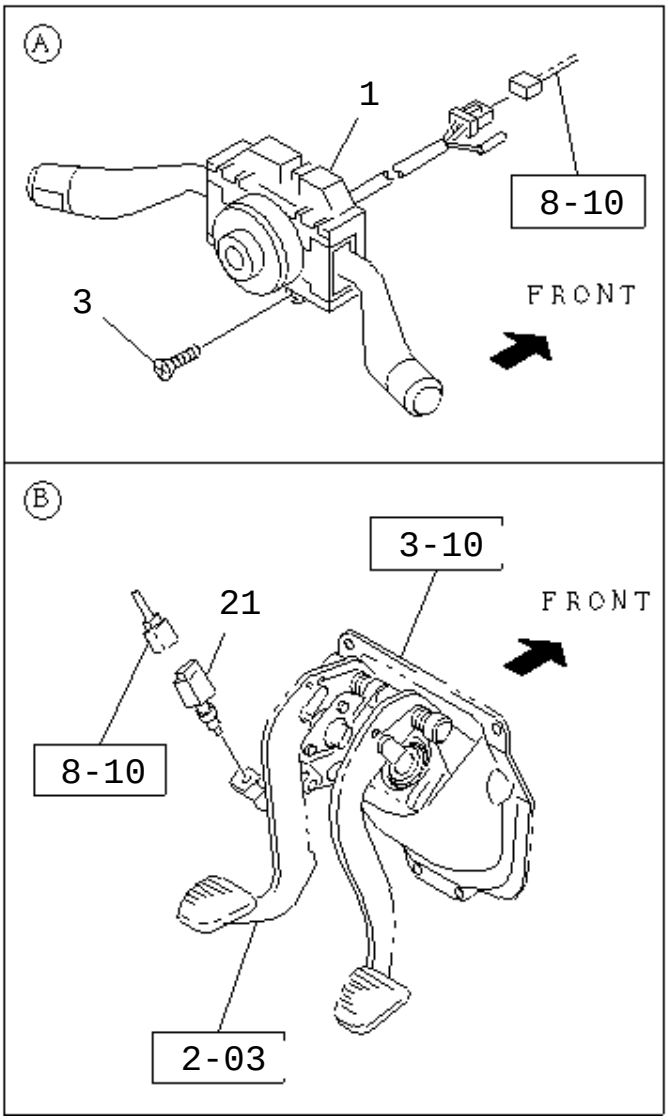


https://truckmanualshub.com/

SWITCH NO.2

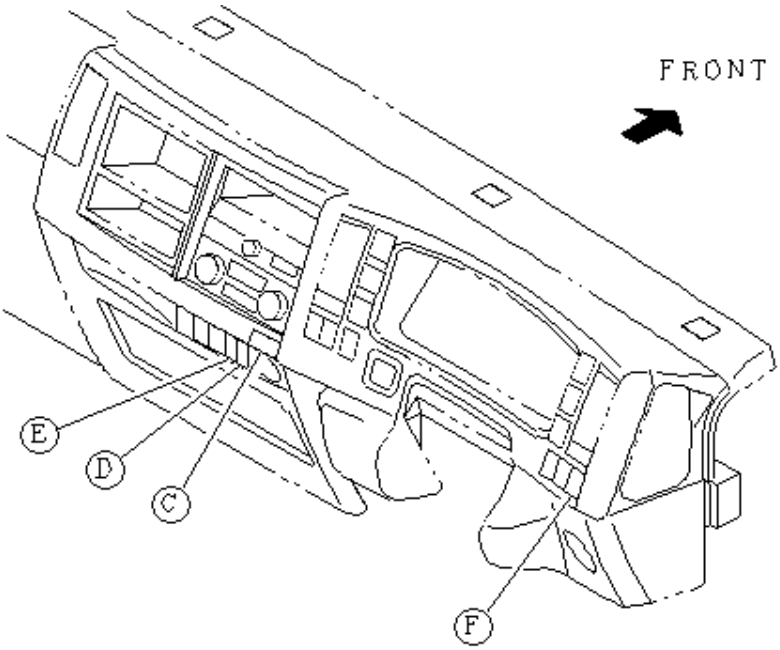


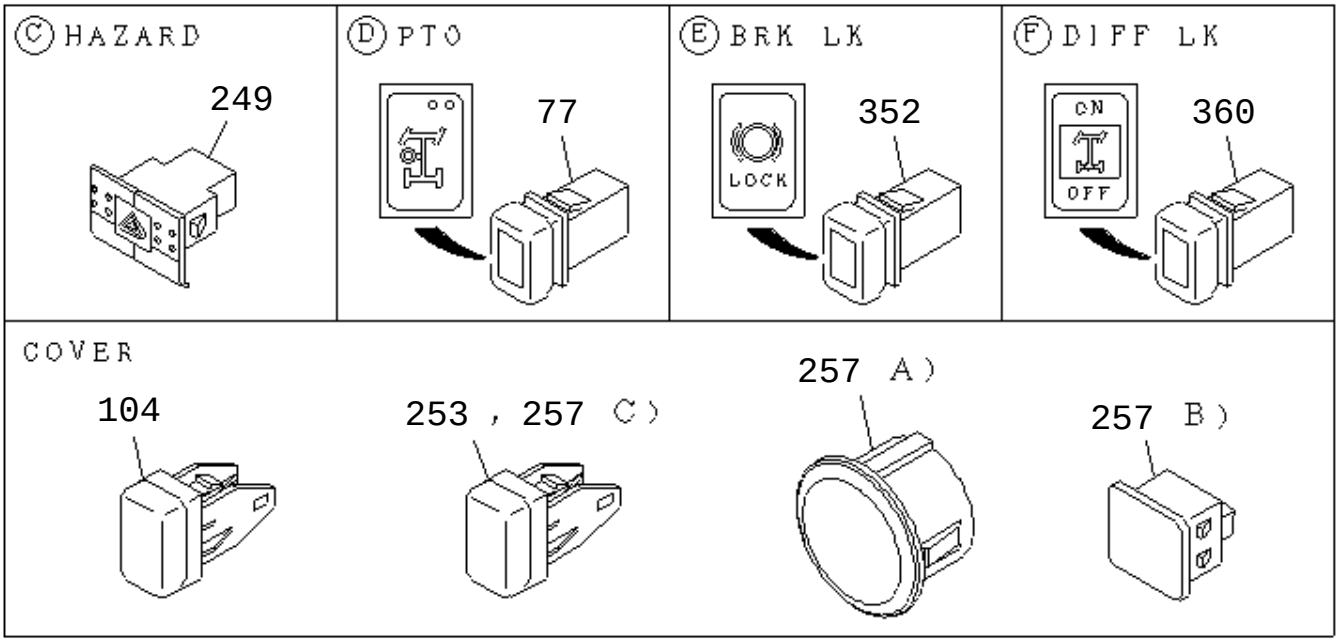

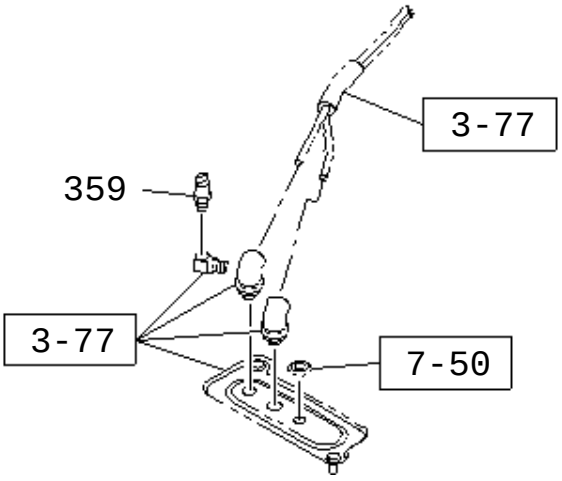


https://truckmanualshub.com/

SWITCH NO.3

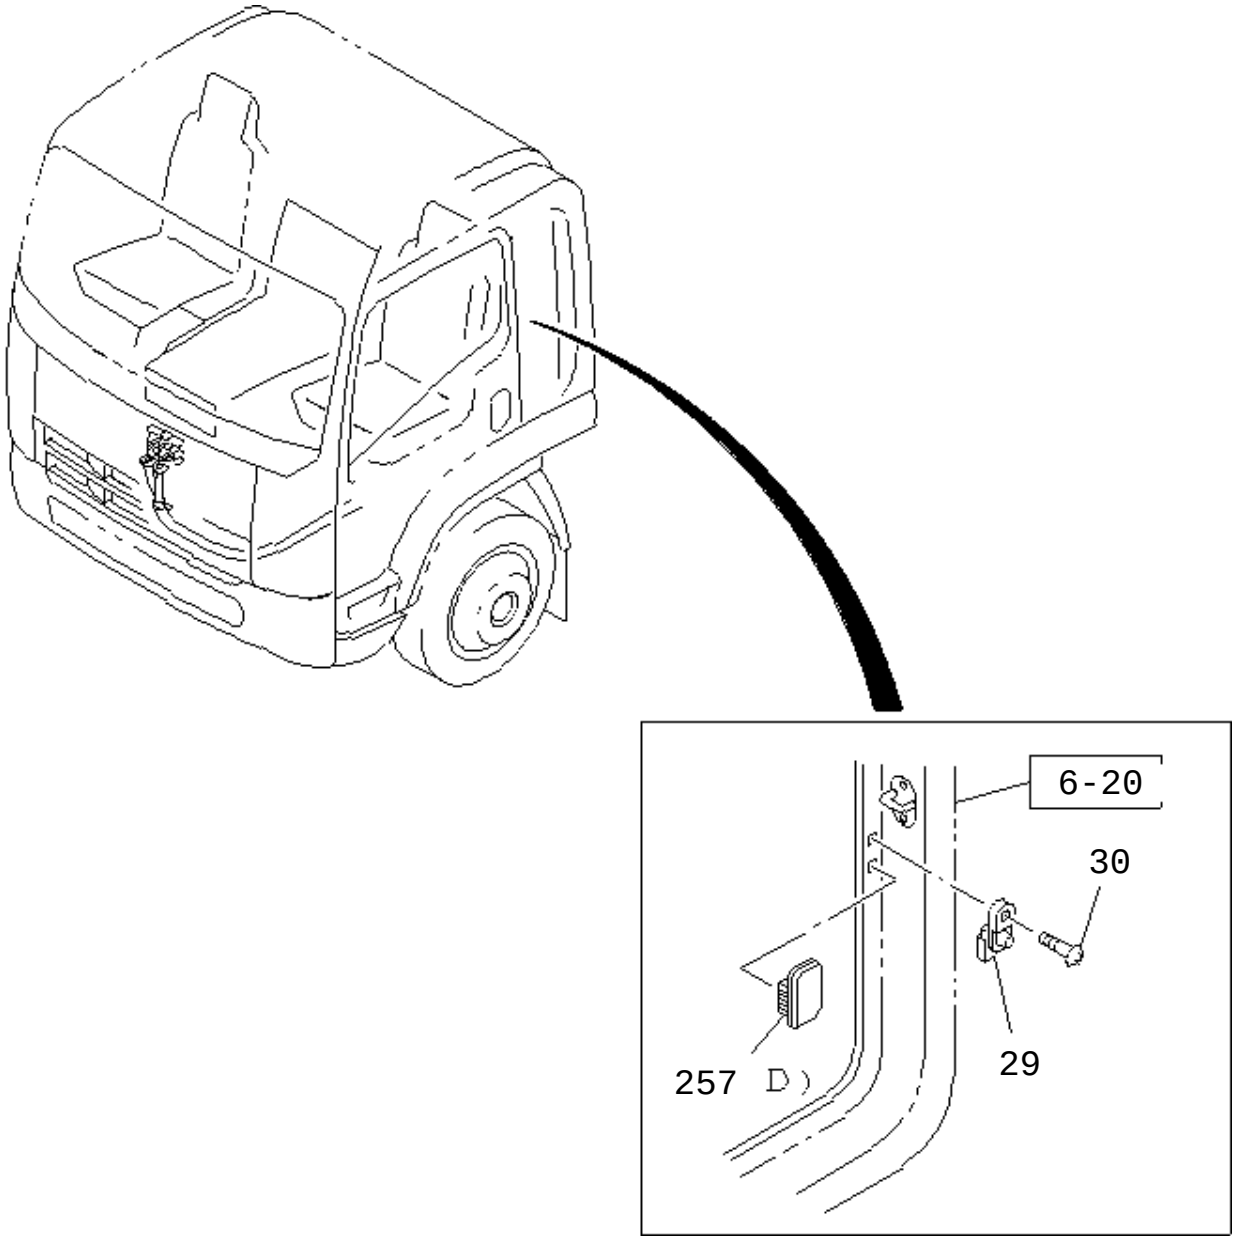

https://truckmanualshub.com/

RELAY;CAB HARNESS

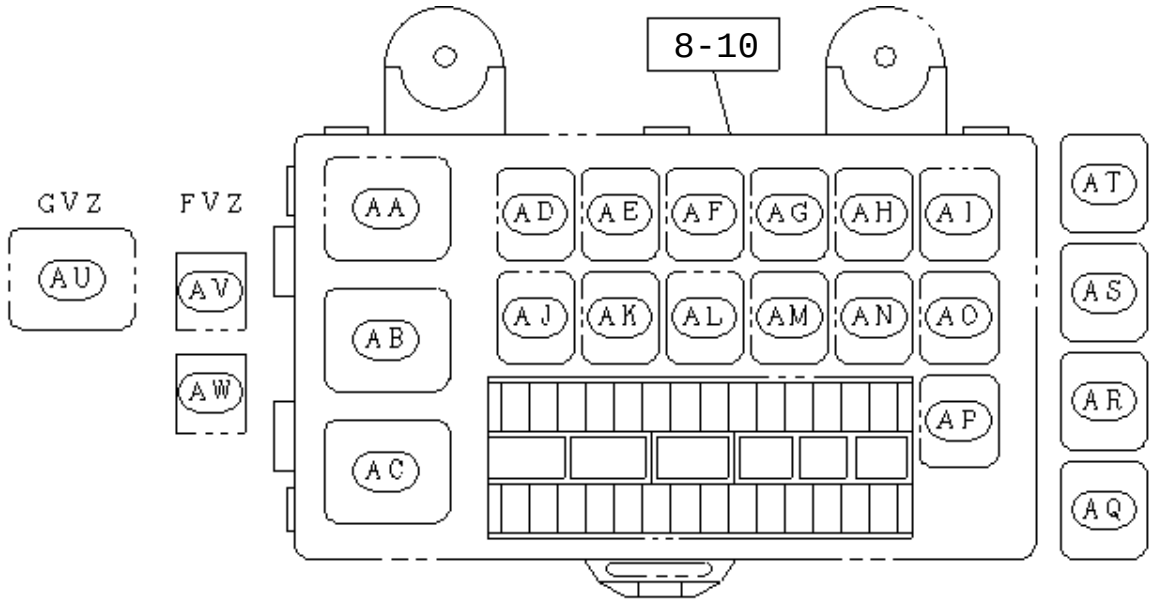

	KEY NO.	RELAY NAME		KEY NO.	RELAY NAME
AA	8-28	STOP LAMP	AM	8-10	HEAD LAMP(LOW)
AB	317	BLOWER MOTOR, HEATER	AN	——	——
AC	610 A)	KEY ON	AO	8-10	HEAD LAMP(HI)
AD	——	——	AP	8-10	TAIL
AE	——	——	AQ	606	PTO MAIN
AF	8-10	WIPER MAIN	AR	606	PTO CUT
AG	8-10	HORN	AS	610 B)	ACC MAIN
AH	8-10	WIPER(HI/LOW)	AT	595	IGNITION
AI	——	——	AU	8-28	TRAILER STOP
AJ	——	——	AV	8-28	BRAKE LOCK
AK	——	——	AW	8-28	BRAKE LOCK
AL	——	——			

https://truckmanualshub.com/

SWITCH AND RELAY; INSTRUMENT PANEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		SWITCH; COMB					
		8-98243-704-0		1312-1403	01	A	
		8-98243-704-0		1404-	01	AB	
3		SCREW; COMB SW					
		8-98061-743-0		1312-1403	02	A	
							M5X20 W/PL WASHER&TORQUES
		8-98061-743-0		1404-	02	AB	
							M5X20 W/PL WASHER&TORQUES
21		SWITCH; CLU					
		8-94337-761-0		1312-	01	A	PTO ZF TRANS RR(BDM)
		8-97358-248-0		1312-1403	01	A	EXC. PTO ZF TRANS RR(BDM)
		8-97358-248-0		1404-	01	A	EXC. PTO ZF TRANS RR(BDM)
		8-97358-248-0		1404-	01	B	
29		SWITCH; DOOR					
		8-98022-211-0		1312-1403	01	A	
							BLACK
							IDN
		8-98022-211-0		1404-	01	AB	
							BLACK
							IDN
30		SCREW; DOOR SW					
		8-98047-201-0		1312-1403	01	A	
							M5X18
							IDN
		8-98047-201-0		1404-	01	AB	
							M5X18
							IDN
77		SWITCH; PTO					
		8-97615-488-2		1312-	01	A	PTO ZF TRANS RR(BDM)
104		COVER; SW HOLE,FOG LAMP					
		8-98025-954-1		1312-1403	01	A	
		8-98025-954-1		1404-	01	AB	
249		SWITCH; HAZARD					
		8-97948-258-0		1312-1403	01	A	
							IDN
		8-97948-258-0		1404-	01	AB	
							IDN
253		COVER; SW HOLE					
		8-98025-954-1		1312-1401	01	A	
		8-98025-954-1		1402-1403	01	A	EXC. PARKING BRAKE - BRAKE LOCK(6LL)
		8-98025-954-1		1404-	01	A	EXC. PARKING BRAKE - BRAKE LOCK(6LL)
		8-98025-954-1		1404-	01	B	
		8-98025-954-1		1312-1403	02	A	
		8-98025-954-1		1404-	02	AB	
257		COVER; HOLE,SW					
		8-98025-954-1		1312-1403	02	A	
							(C)
		8-98025-954-1		1404-	02	AB	
							(C)
		8-98025-954-1		1312-1403	07	A	
							(C)
		8-98025-954-1		1404-	07	AB	
							(C)
		8-98029-914-1		1312-1403	01	A	
							(B)
							IDN
		8-98029-914-1		1404-	01	AB	
							(B)
							IDN
		8-98029-917-0		1312-1403	01	A	
							(D)
							IDN
		8-98029-917-0		1404-	01	AB	
							(D)
							IDN
		8-98070-401-2		1312-1403	01	A	
							(A)
		8-98070-401-2		1404-	01	AB	
							(A)
		8-98025-954-1		1312-1403	01	A	EXC. PTO ZF TRANS RR(BDM)
							(C)
		8-98025-954-1		1404-	01	A	EXC. PTO ZF TRANS RR(BDM)
							(C)


https://truckmanualshub.com/

SWITCH AND RELAY; INSTRUMENT PANEL

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
257		8-98025-954-1		1404-	01	B	(C)
317		RELAY; BLOWER MOTOR,HTR					
		8-97262-933-0		1312-1403	01	A	24V 12.5A MATSUSHITA
		8-97262-933-0		1404-	01	AB	24V 12.5A MATSUSHITA
352		SWITCH ASM; BRK LK					
		8-98011-341-1		1402-	01	A	PARKING BRAKE - BRAKE LOCK(6LL)
359		SWITCH; TRAILER BRAKE					
		8-98010-857-0		1404-	01	B	
360		SWITCH ASM; DIFF LK					
		8-97613-964-1		1312-1403	01	A	
		8-97613-964-1		1404-	01	AB	
595		RELAY; IGNITION					
		8-97173-035-1		1312-1403	01	A	24V 10A MATSUSHITA IDN
		8-97173-035-1		1404-	01	AB	24V 10A MATSUSHITA IDN
606		RELAY; PTO MAIN					
		8-97173-035-1		1312-	01	A	PTO ZF TRANS RR(BDM) 24V 10A MATSUSHITA IDN
		8-97173-035-1		1312-	01	A	PTO ZF TRANS RR(BDM) 24V 10A MATSUSHITA IDN
610		RELAY; KEY ON					
		8-97173-035-1		1312-1403	01	A	(B) 24V 10A MATSUSHITA IDN
		8-97173-035-1		1404-	01	AB	(B) 24V 10A MATSUSHITA IDN
		8-97262-933-0		1312-1403	01	A	(A) 24V 12.5A MATSUSHITA
		8-97262-933-0		1404-	01	AB	(A) 24V 12.5A MATSUSHITA
2-03		Move to 2-03					
3-10		Move to 3-10					
8-10		Move to 8-10					
3-77		Move to 3-77					
7-50		Move to 7-50					
6-20		Move to 6-20					
8-28		Move to 8-28					


https://truckmanualshub.com/


CONTROL UNIT;SPEED SENSOR

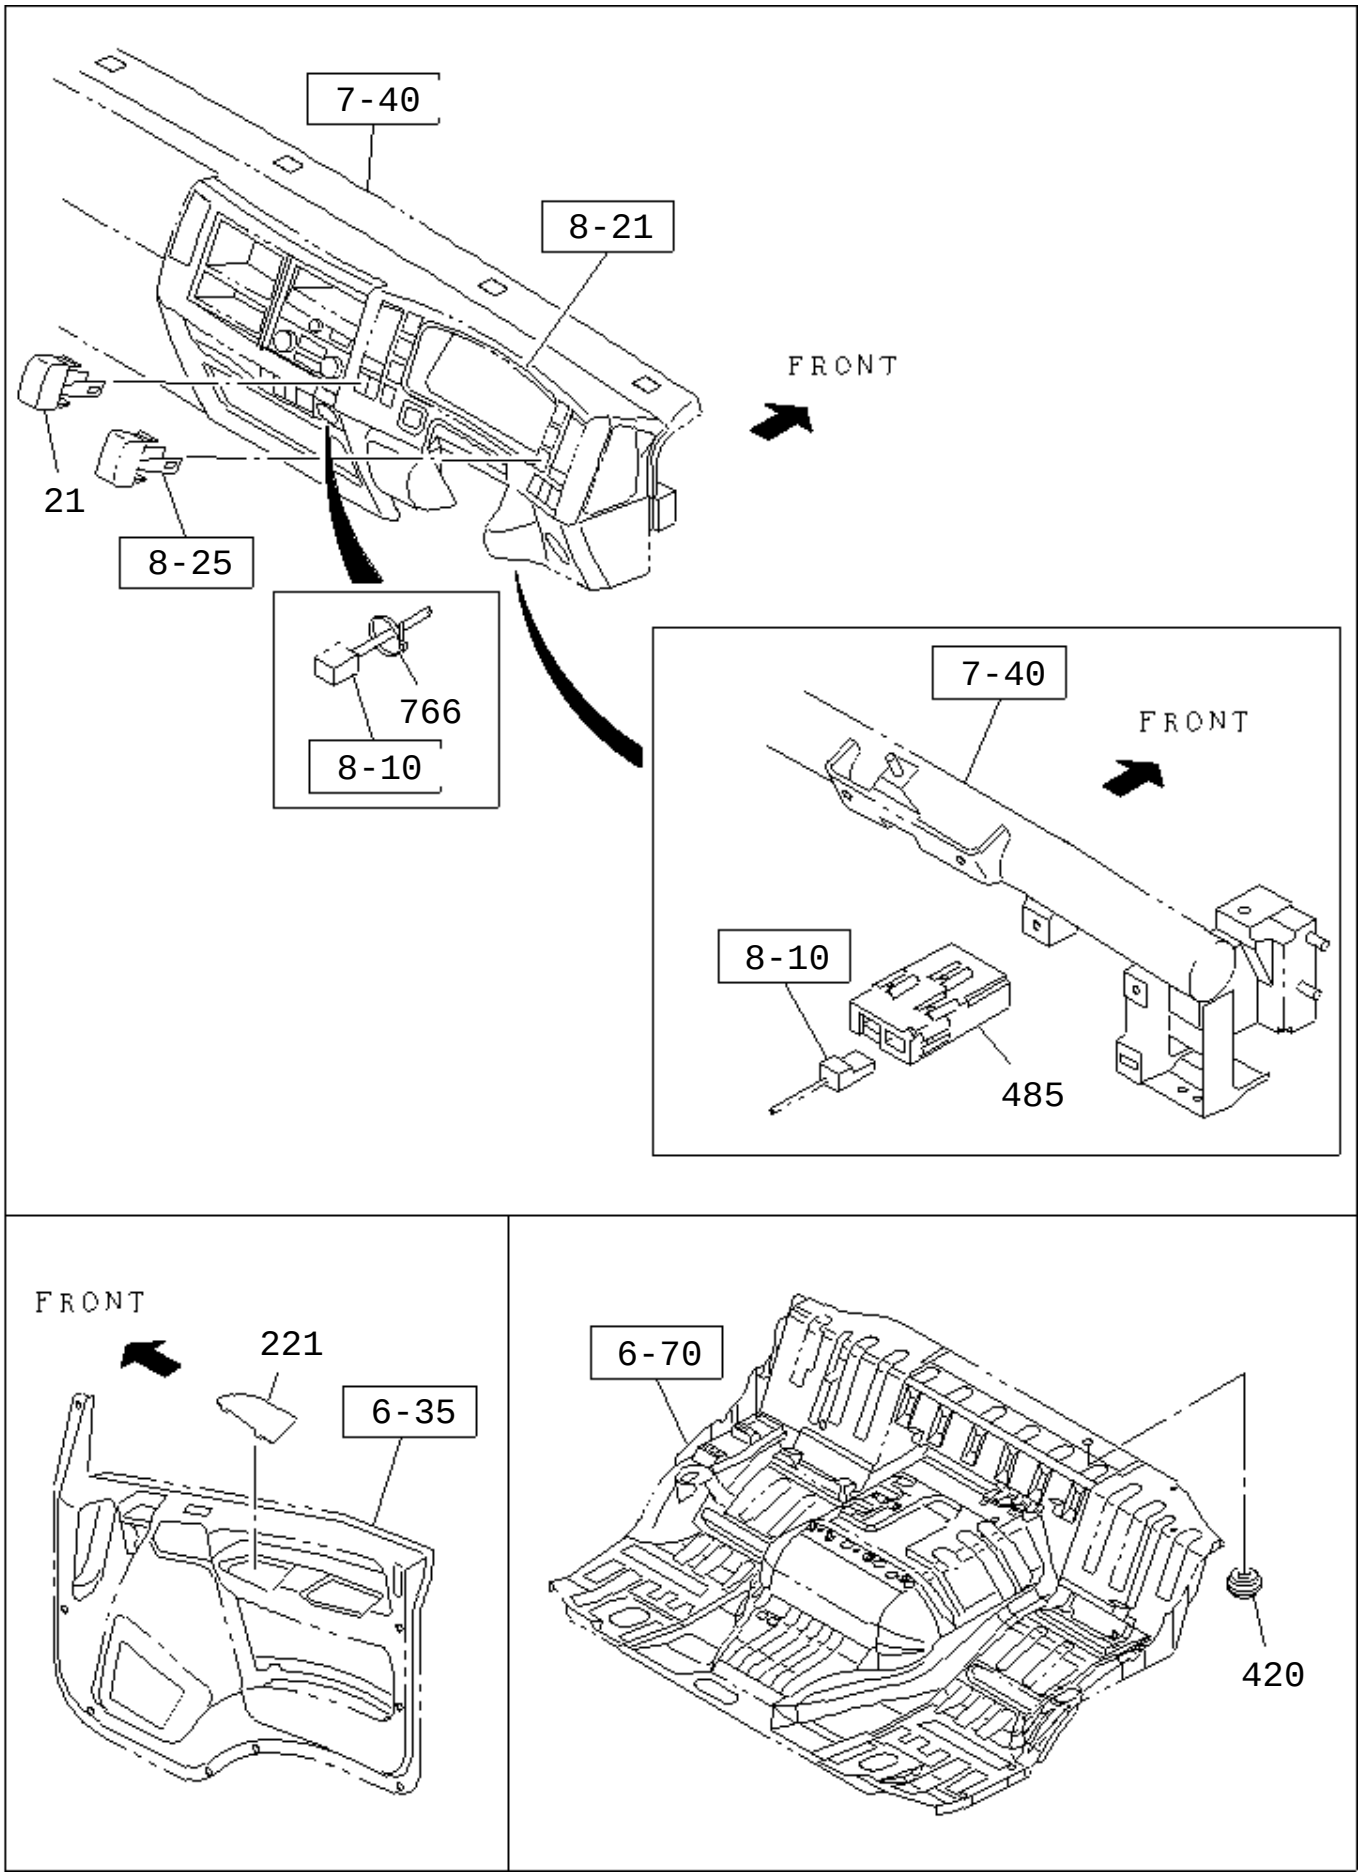

https://truckmanualshub.com/


BRACKET AND OTHER PARTS

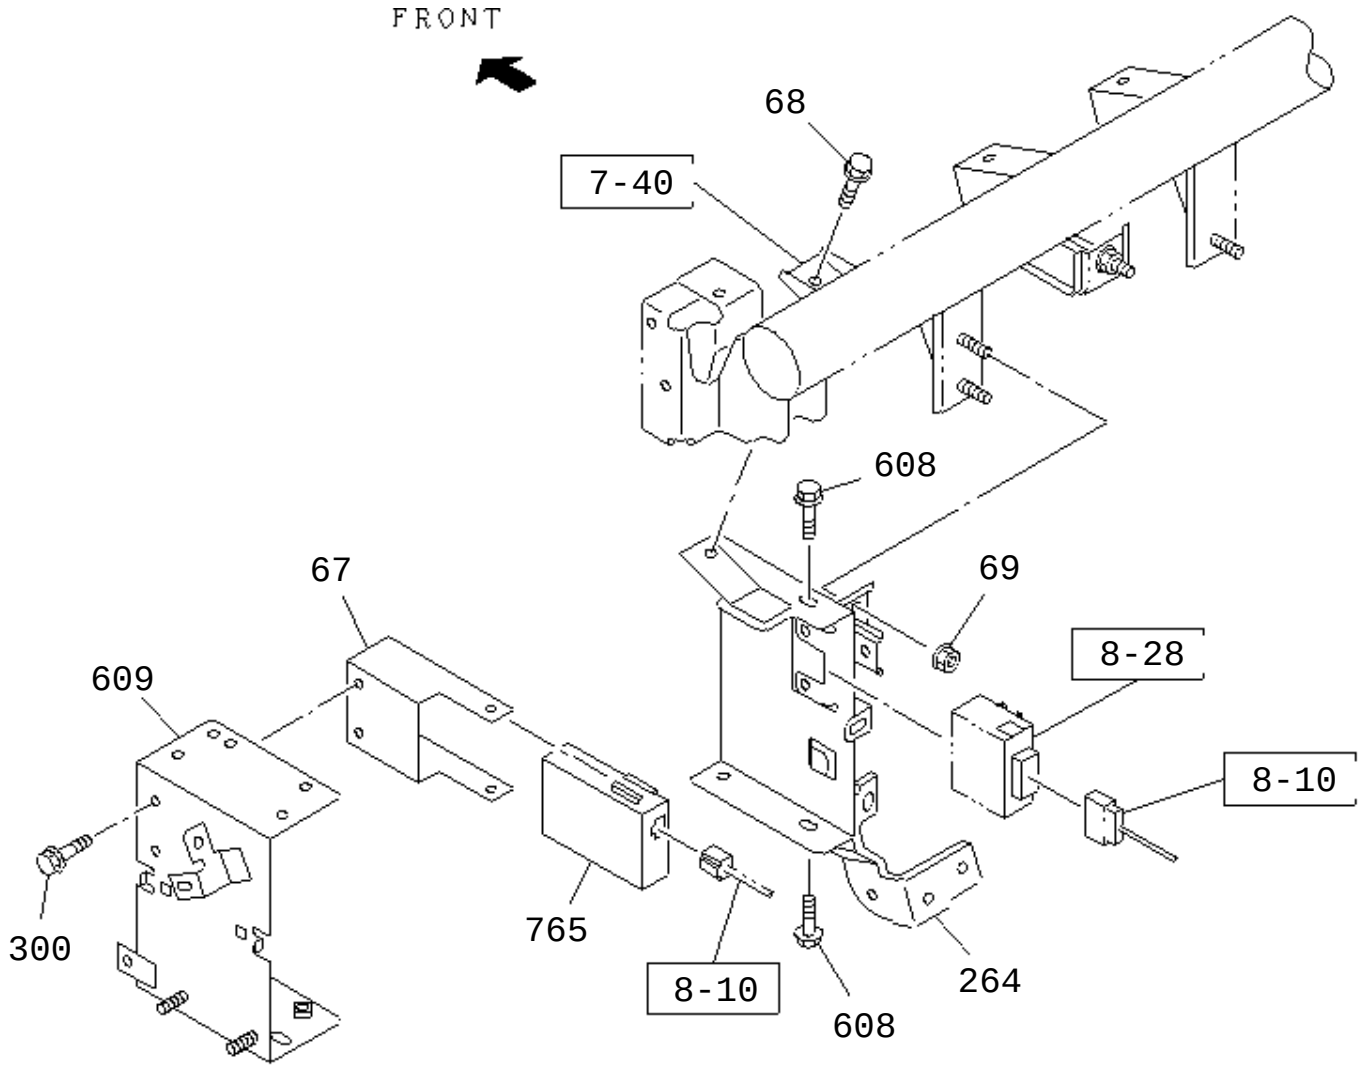


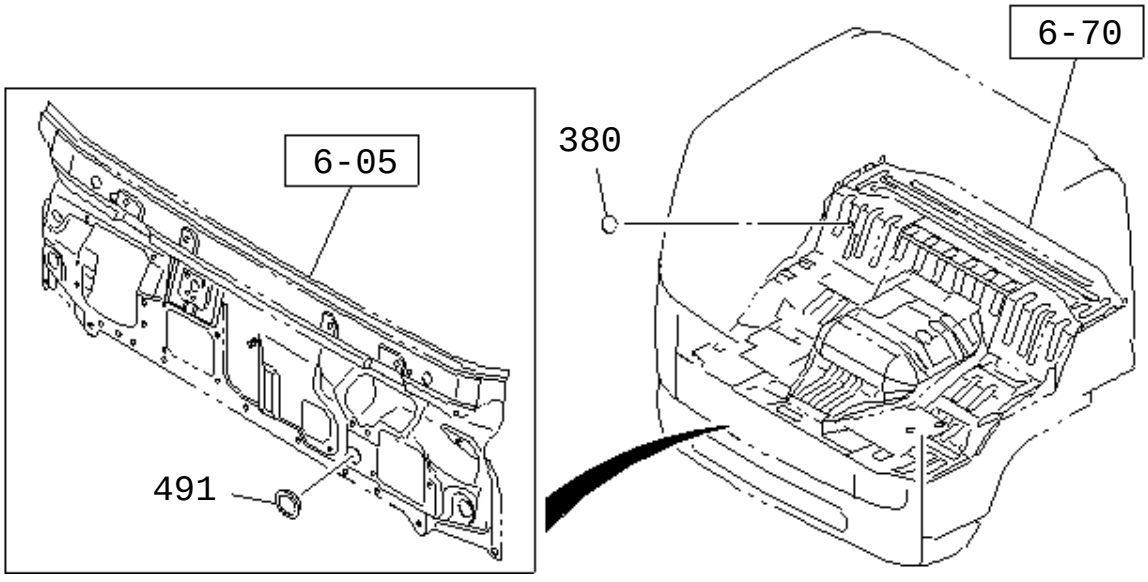

https://truckmanualshub.com/

FRAME SIDE AND SENSOR;VEHICLE SPD

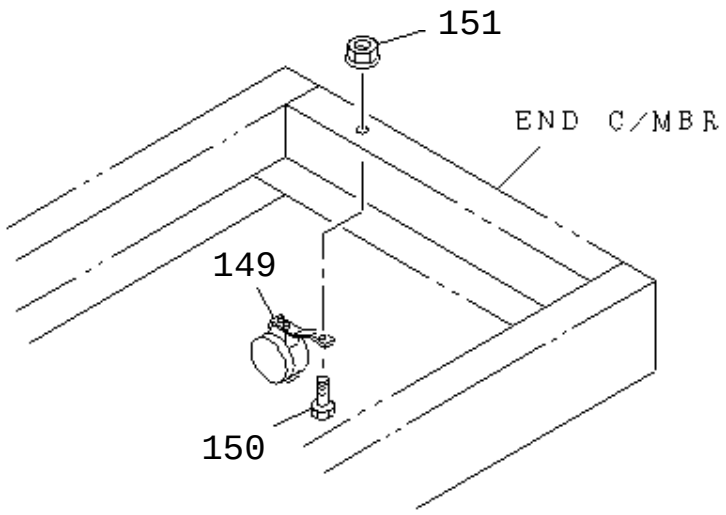

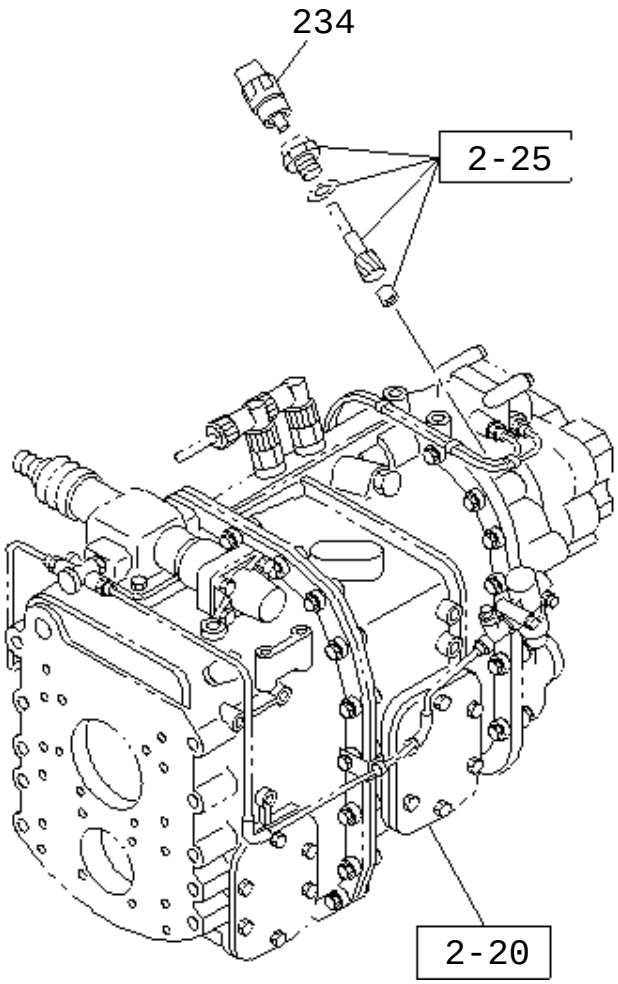

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
21		COVER; HOLE						
		8-98025-954-1		1312-1403		01	A	
		8-98025-954-1		1404-		01	AB	
67		BRACKET; CONT UNIT						
		8-98048-743-1		1402-		01	A	PARKING BRAKE - BRAKE LOCK(6LL)
68		BOLT; BRKT						
		0-28650-616-0		1312-1403		01	A	M6X16 FLANGE
		0-28650-616-0		1404-		01	AB	M6X16 FLANGE
69		NUT; BRKT						
		0-91180-106-0		1312-1403		01	A	M6 FLANGE
		0-91180-106-0		1404-		01	AB	M6 FLANGE
149		BUZZER; BRK LK						
		1-83460-104-0		1402-		01	A	PARKING BRAKE - BRAKE LOCK(6LL)
150		BOLT; BUZZER BRK LK						
		0-28651-030-0		1402-		01	A	PARKING BRAKE - BRAKE LOCK(6LL) M10X30 FLANGE
151		NUT; BUZZER BRK LK						
		0-91180-210-0		1402-		01	A	PARKING BRAKE - BRAKE LOCK(6LL) M10 FLANGE
221		COVER; HOLE,DOOR LOCK SW						
		8-98029-915-2		1312-1403	R	01	A	IDN
		8-98029-915-2		1404-	R	01	AB	IDN
		8-98029-916-2		1312-1403	L	01	A	IDN
		8-98029-916-2		1404-	L	01	AB	IDN
234		SENSOR; VEHICLE SPD						
		8-97328-058-1		1312-1403		01	A	FULLER ES11109 DD M/T(Y5N) 25 PULSE ALUMINUM
		8-97328-058-1		1404-		01	AB	FULLER ES11109 DD M/T(Y5N) 25 PULSE ALUMINUM
264		BRACKET; CONT UNIT						
		8-98249-082-1		1404-		01	B	EXC. VIN MODEL YEAR 2014<VZE>
		8-98246-453-0		1312-1403		01	A	
		8-98246-453-0		1404-		01	A	
		8-98246-453-0		1404-		01	B	VIN MODEL YEAR 2014<VZE>
300		BOLT; CONT UNIT BRKT						
		0-28650-616-0		1402-		02	A	PARKING BRAKE - BRAKE LOCK(6LL) M6X16 FLANGE
380		SEAL						
		1-76798-019-0		1312-1403		01	A	OD=25 BLACK
		1-76798-019-0		1404-		01	AB	OD=25 BLACK
420		PLUG; SWITCH						
		8-94122-971-0		1312-1403		01	A	OD=35 IDN
		8-94122-971-0		1404-		01	AB	OD=35 IDN
485		CONTROL UNIT; SPEED SENSOR						
		1-80190-063-0		1312-		01	A	ZF9S1110 DD M/T(Y5P)
491		PLUG; HOLE,CONT UNIT						
		8-98054-651-0		1312-1403		01	A	IDN
		8-98054-651-0		1404-		01	AB	IDN
608		BOLT; CONT UNIT,AIR SUS						
		0-28650-616-0		1402-1403		05	A	PARKING BRAKE - BRAKE LOCK(6LL) M6X16 FLANGE
		0-28650-616-0		1404-		05	A	PARKING BRAKE - BRAKE LOCK(6LL) M6X16 FLANGE
		0-28650-616-0		1404-		05	B	M6X16 FLANGE
609		BRACKET ASM; ELEC UNIT,AIR SUS						
		8-98250-445-0		1402-1403		01	A	PARKING BRAKE - BRAKE LOCK(6LL)
		8-98250-445-0		1404-		01	A	PARKING BRAKE - BRAKE LOCK(6LL)


https://truckmanualshub.com/


KEY	R / C	PART NAME PART NUMBER	I T C	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
609		8-98250-445-0		1404-		01	B	
765		CONTROL UNIT; BRAKE LOCK						
		1-82550-315-0		1402-		01	A	PARKING BRAKE - BRAKE LOCK(6LL)
766		BAND; CLIP						
		5-09707-031-1		1312-1403		01	A	L=140 IDN
		5-09707-031-1		1404-		01	AB	L=140 IDN
6-35		Move to 6-35						
6-70		Move to 6-70						
7-40		Move to 7-40						
8-10		Move to 8-10						
8-21		Move to 8-21						
8-25		Move to 8-25						
6-05		Move to 6-05						
8-28		Move to 8-28						
2-20		Move to 2-20						
		Move to 2-20						
2-25		Move to 2-25						
		Move to 2-25						

https://truckmanualshub.com/

FRONT SIDE

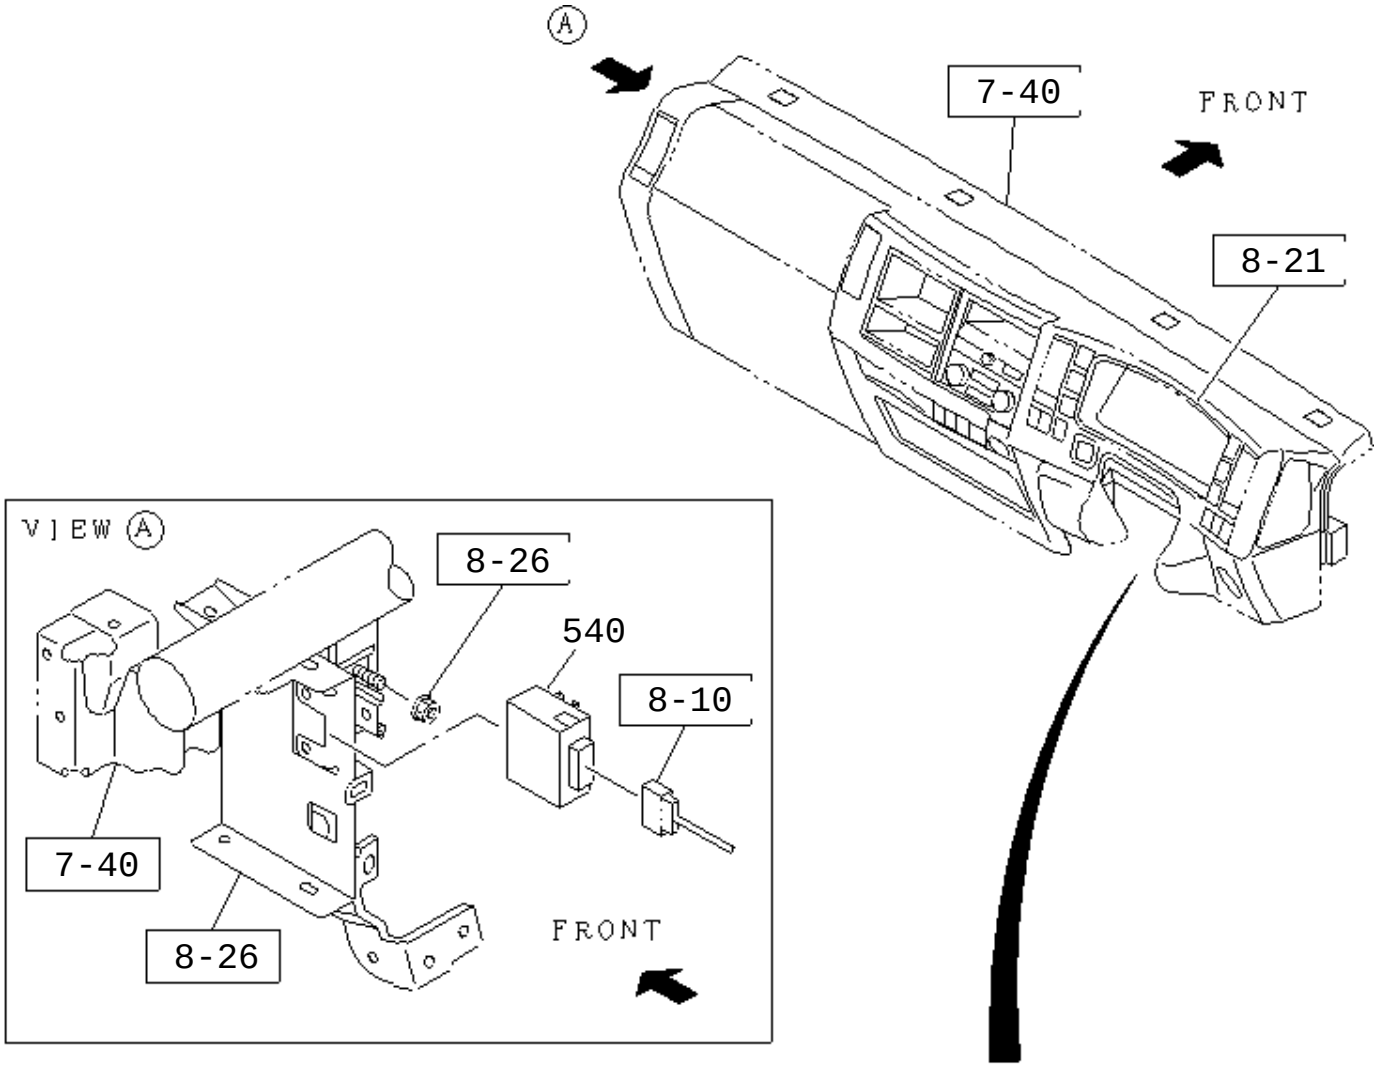


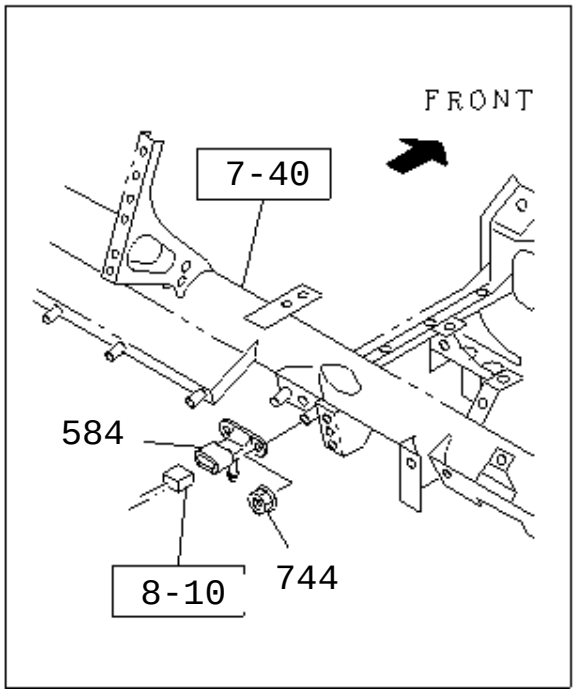


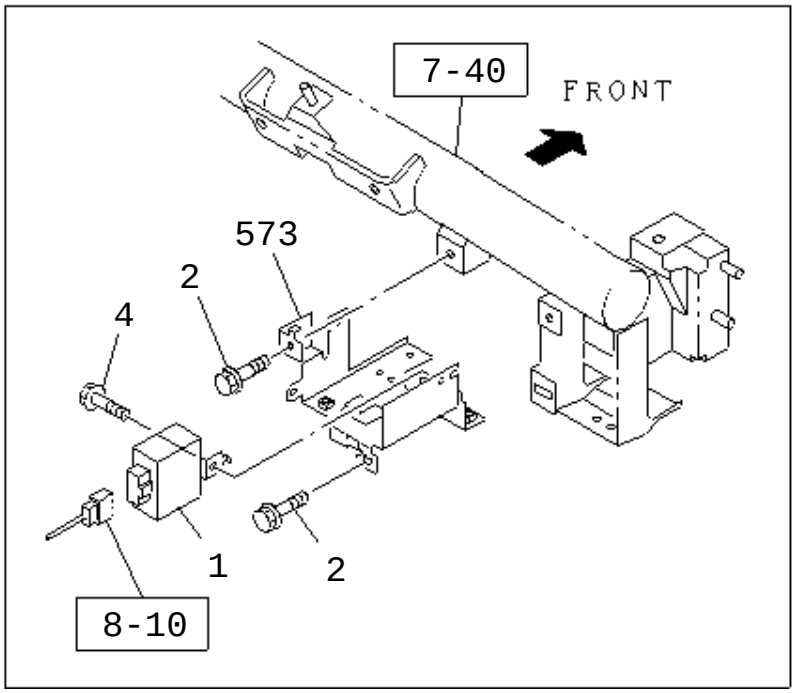

https://truckmanualshub.com/

CAB SIDE AND CAB RR MTG MEMBER SIDE

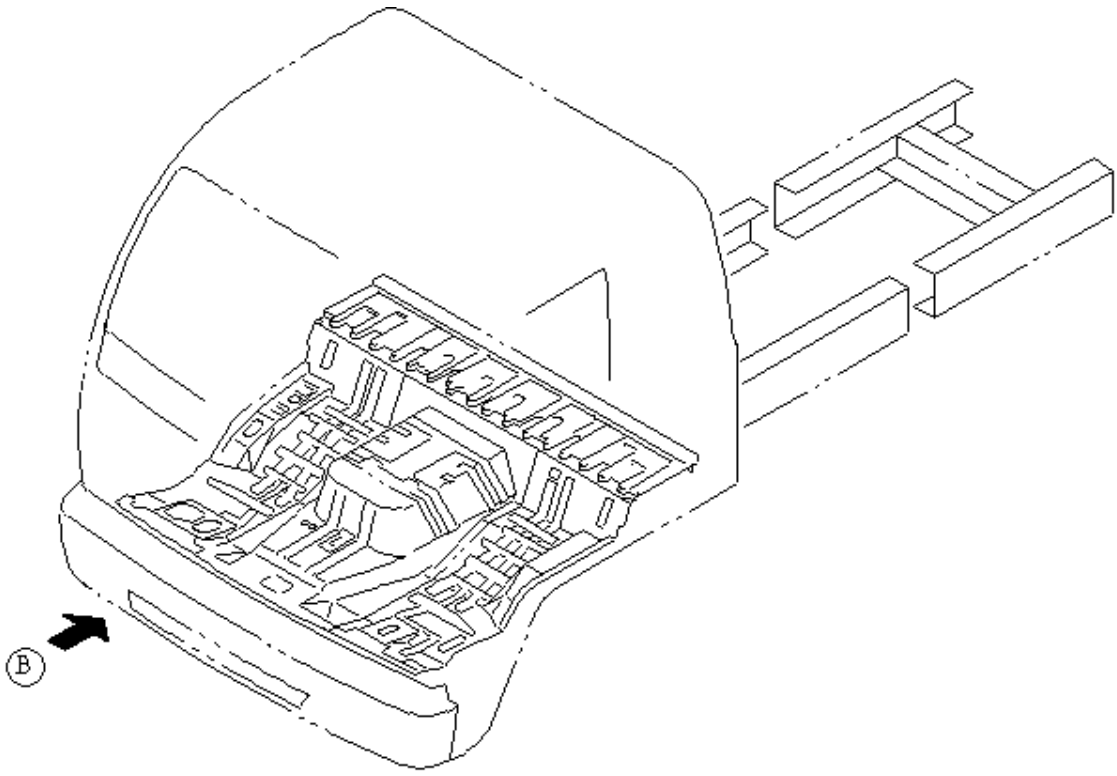

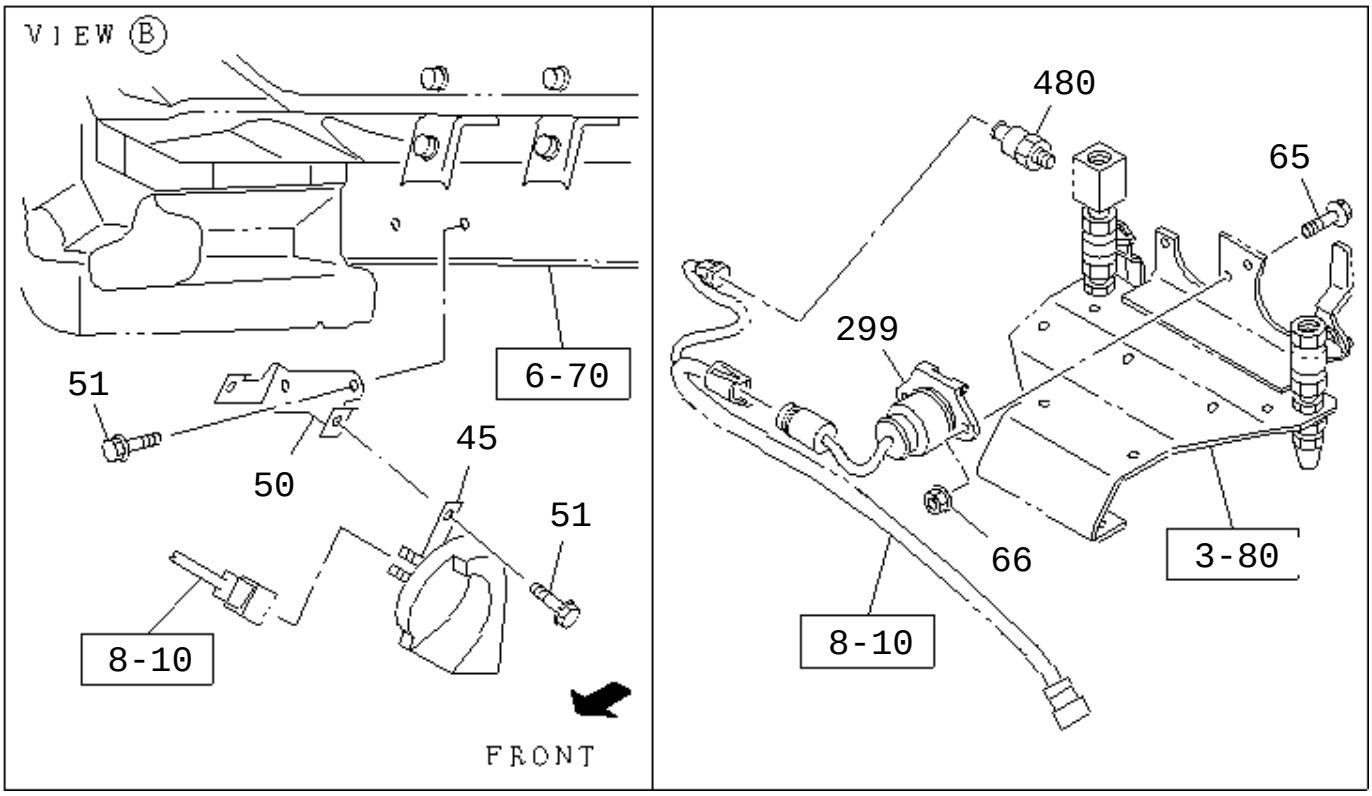


https://truckmanualshub.com/


VALVE;DEFF LK,PTO

DIFF LK


FVZ

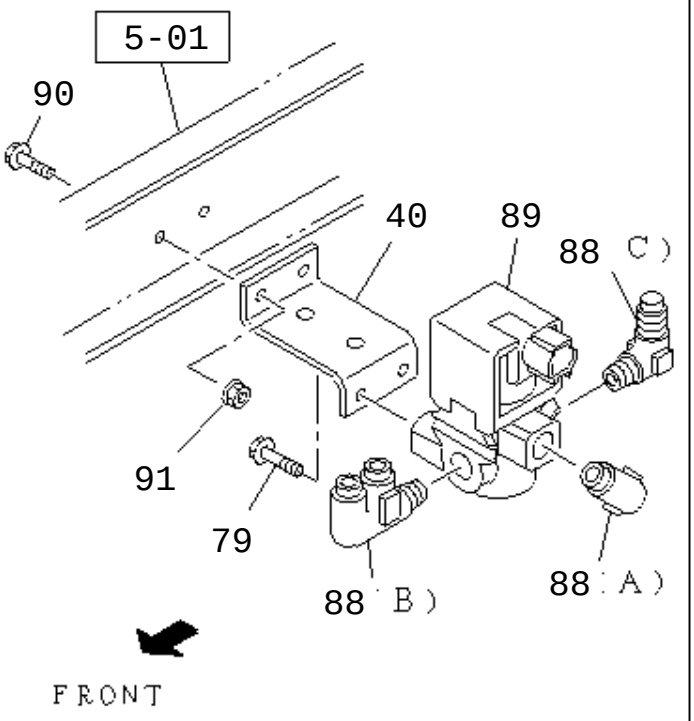

GVZ

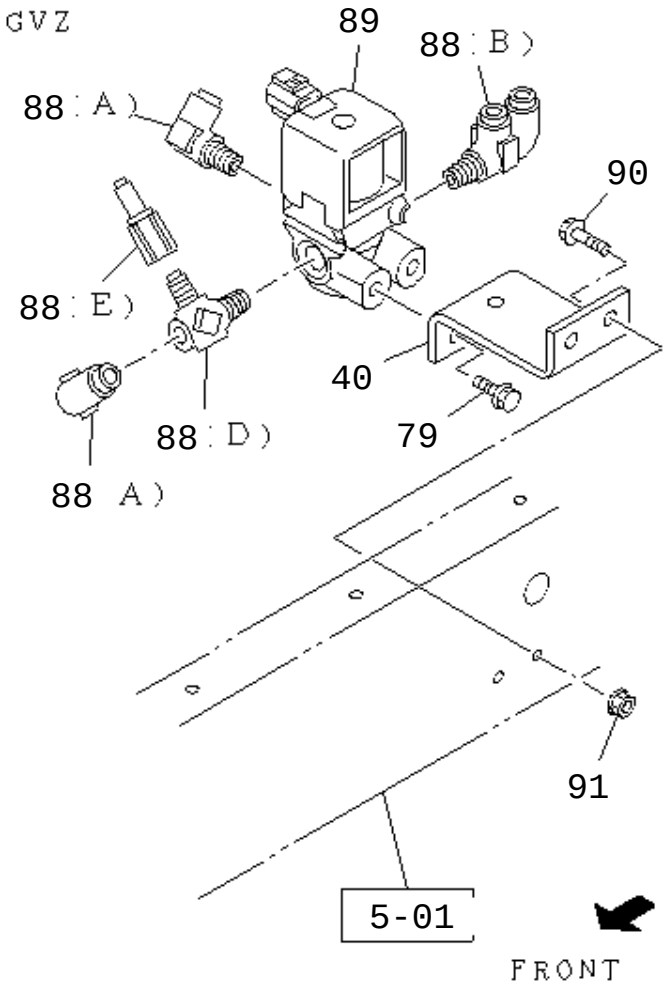


PTO

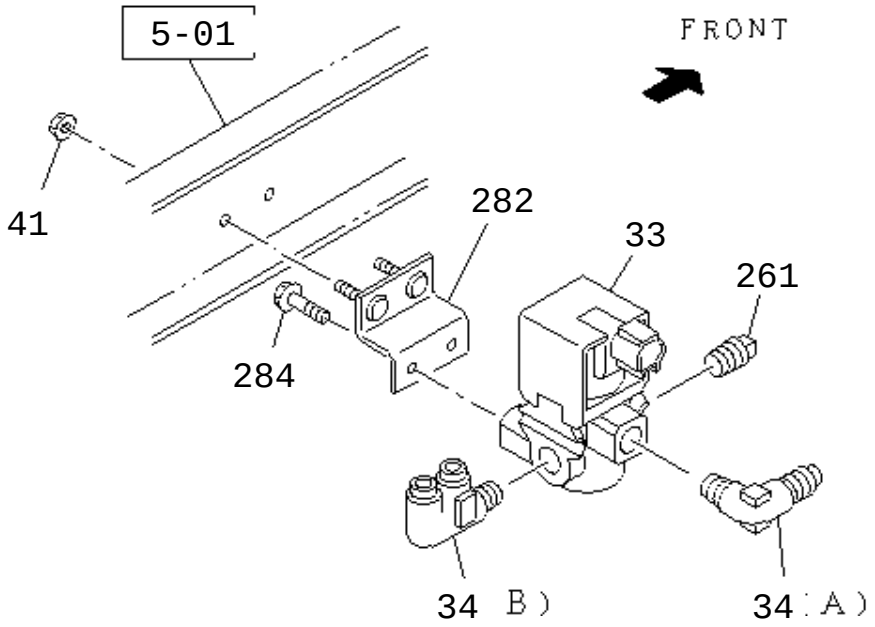


https://truckmanualshub.com/

RELAY;CAB HARNESS

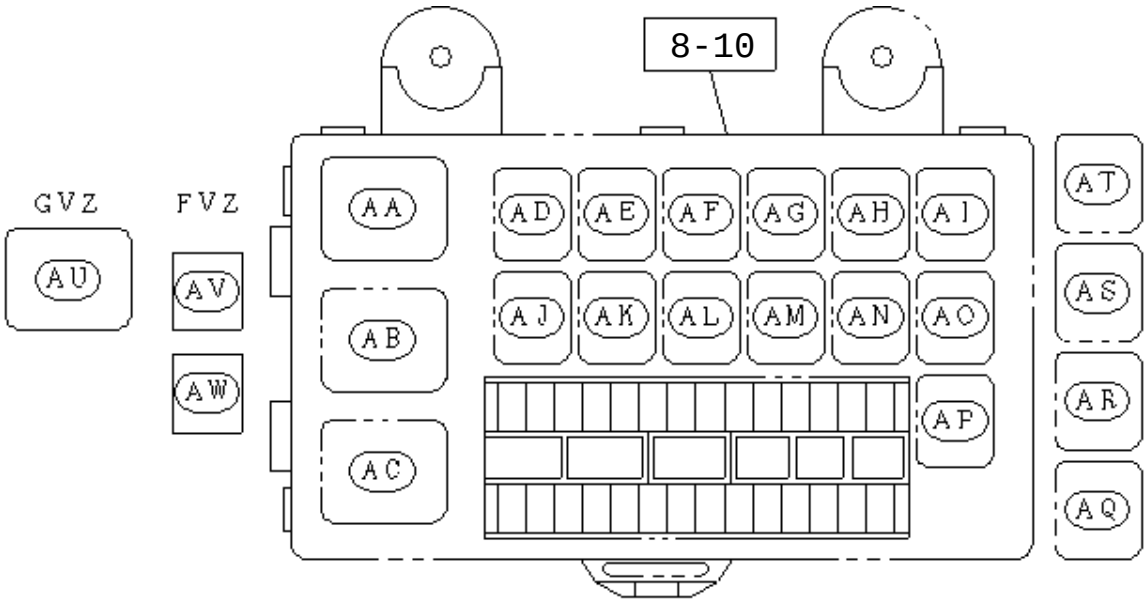

	KEY NO.	RELAY NAME		KEY NO.	RELAY NAME
AA	22	STOP LAMP	AM	8-10	HEAD LAMP(LOW)
AB	8-25	BLOWER MOTOR, HEATER	AN	——	——
AC	8-25	KEY ON	AO	8-10	HEAD LAMP(HI)
AD	——	——	AP	8-10	TAIL
AE	——	——	AQ	8-25	PTO MAIN
AF	8-10	WIPER MAIN	AR	8-25	PTO CUT
AG	8-10	HORN	AS	8-25	ACC MAIN
AH	8-10	WIPER(HI/LOW)	AT	8-25	IGNITION
AI	——	——	AU	754	TRAILER STOP
AJ	——	——	AV	349	BRAKE LOCK
AK	——	——	AW	349	BRAKE LOCK
AL	——	——			

https://truckmanualshub.com/

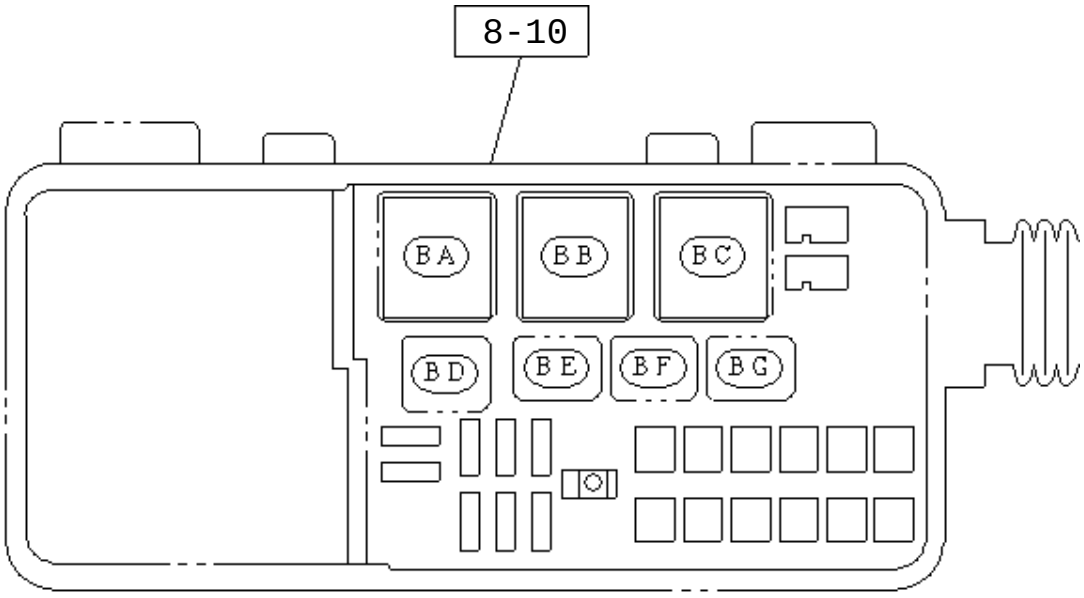

	KEY NO.	RELAY NAME
BA	—	—
BB	531	MAIN
BC	—	—
BD	—	—
BE	—	—
BF	0-60	STARTER
BG	—	—

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1	B	UNIT; FLASHER					
		8-98025-533-1		1312-	01	A	
		8-97613-970-1		1404-	01	B	
2		BOLT; FLASHER UNIT					
		0-28650-616-0		1312-1403	02	A	M6X16 FLANGE
		0-28650-616-0		1404-	02	AB	M6X16 FLANGE
4		SCREW; FLASHER UNIT					
		0-28650-616-0		1312-1403	01	A	BOLT M6X16 FLANGE
		0-28650-616-0		1404-	01	AB	BOLT M6X16 FLANGE
22		RELAY; STOP LAMP					
		8-97262-933-0		1312-1403	01	A	24V 12.5A MATSUSHITA
		8-97262-933-0		1404-	01	AB	24V 12.5A MATSUSHITA
33		VALVE; MAG,PTO CONT					
		8-97948-152-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> IDN
34		CONNECTOR; MAG VLV,INL PORT					
		1-09650-430-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> (A) M12 & PT1/4 ELBOW
		8-98179-708-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> (B)
40		BRACKET; MAG VLV					
		8-98154-633-0		1312-1403	01	A	
		8-98154-633-0		1404-	01	AB	
41		NUT; BRKT,MAG VLV					
		0-91180-108-0		1312-	02	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> M8 FLANGE
45		HORN; LOW NOTE					
		8-98022-023-0		1312-1403	01	A	IDN
		8-98022-023-0		1404-	01	AB	IDN
50		BRACKET; HORN					
		8-97613-300-2		1312-1403	01	A	
		8-97613-300-2		1404-	01	AB	
51		BOLT; HORN TO BRKT					
		8-97086-825-0		1312-1403	03	A	M8X20 W/LK&PL WASHER IDN
		8-97086-825-0		1404-	03	AB	M8X20 W/LK&PL WASHER IDN
65		BOLT; SOCKET FIX					
		0-28650-825-0		1404-	02	B	M8X25 FLANGE IDN
66		NUT; SOCKET FIX					
		0-91180-108-0		1404-	02	B	M8 FLANGE
79		BOLT; MAG VLV					
		0-28650-820-0		1312-1403	02	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	02	AB	M8X20 FLANGE IDN
88		CONNECTOR; MAG VLV					
		1-09656-586-1		1404-	01	B	(D) M12 & PT1/4 3WAY

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
88		1-09660-956-0		1404-	02	B	(A) DIN8 & R1/4 ELBOW
		1-09661-379-0		1404-	01	B	(E) DIN6 & M12 STRAIGHT
		1-09660-956-0		1312-	01	A	(A) DIN8 & R1/4 ELBOW
		8-98179-708-0		1312-1403	01	A	(B)
		8-98179-708-0		1404-	01	AB	(B)
		1-09661-067-0		1312-	01	A	FULLER ES11109 DD M/T(Y5N) (C) DIN6 & R1/4 ELBOW
		1-09650-430-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) (C) M12 & PT1/4 ELBOW
89		VALVE; MAG,DIFF LOCK					
		8-97641-594-0		1312-1403	01	A	
		8-97641-594-0		1404-	01	AB	
90		BOLT; MAG VLV					
		0-28650-835-0		1312-1403	02	A	M8X35 FLANGE
		0-28650-835-0		1404-	02	AB	M8X35 FLANGE
91		NUT; MAG VLV					
		0-91180-108-0		1312-1403	02	A	M8 FLANGE
		0-91180-108-0		1404-	02	AB	M8 FLANGE
261		PLUG; MAG VLV					
		9-99204-513-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> PT1/4
282		BRACKET; MAG VLV					
		8-98184-201-0		1312-	01	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> IDN
284		BOLT; MAG VLV					
		0-28650-820-0		1312-	02	A	ZF9S1110 DD M/T(Y5P) PTO CONTROL<SV6> M8X20 FLANGE IDN
299		SOCKET; PARKING					
		1-82523-014-0		1404-	01	B	7P
349		RELAY; BRK LK					
		8-97173-035-1		1402-	02	A	PARKING BRAKE - BRAKE LOCK(6LL) 24V 10A MATSUSHITA IDN
480		SWITCH; TRAILER COCK					
		8-98010-858-0		1404-	01	B	STAMP 2.2
531		RELAY; MAIN					
		8-97238-540-0	C	1312-1402	01	A	24V 30A JIDECO
		8-98259-779-0		1403-1403	01	A	24V 30A MITSUBA
		8-98259-779-0		1404-	01	AB	24V 30A MITSUBA
540		RELAY; WIPER INTERVAL					
		8-98233-976-0		1312-1403	01	A	
		8-98233-976-0		1404-	01	AB	
573		BRACKET; FLASHER UNIT					
		8-98246-458-0		1312-1403	01	A	
		8-98246-458-0		1404-	01	AB	
584		SENSOR; PRESSURE					
		8-98020-514-0		1312-1403	01	A	
		8-98020-514-0		1404-	01	AB	
744		NUT; SENSOR					
		0-91180-106-0		1312-1403	02	A	M6 FLANGE

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
744		0-91180-106-0		1404-	02	AB	M6 FLANGE
754		RELAY; TRAILER STOP 8-97262-933-0		1404-	01	B	24V 12.5A MATSUSHITA
7-40		Move to 7-40					
8-10		Move to 8-10					
8-21		Move to 8-21					
8-26		Move to 8-26					
3-80		Move to 3-80					
6-70		Move to 6-70					
5-01		Move to 5-01					
8-25		Move to 8-25					
0-60		Move to 0-60					

https://truckmanualshub.com/


DUCT;EXC.VIN MODEL YEAR 2014

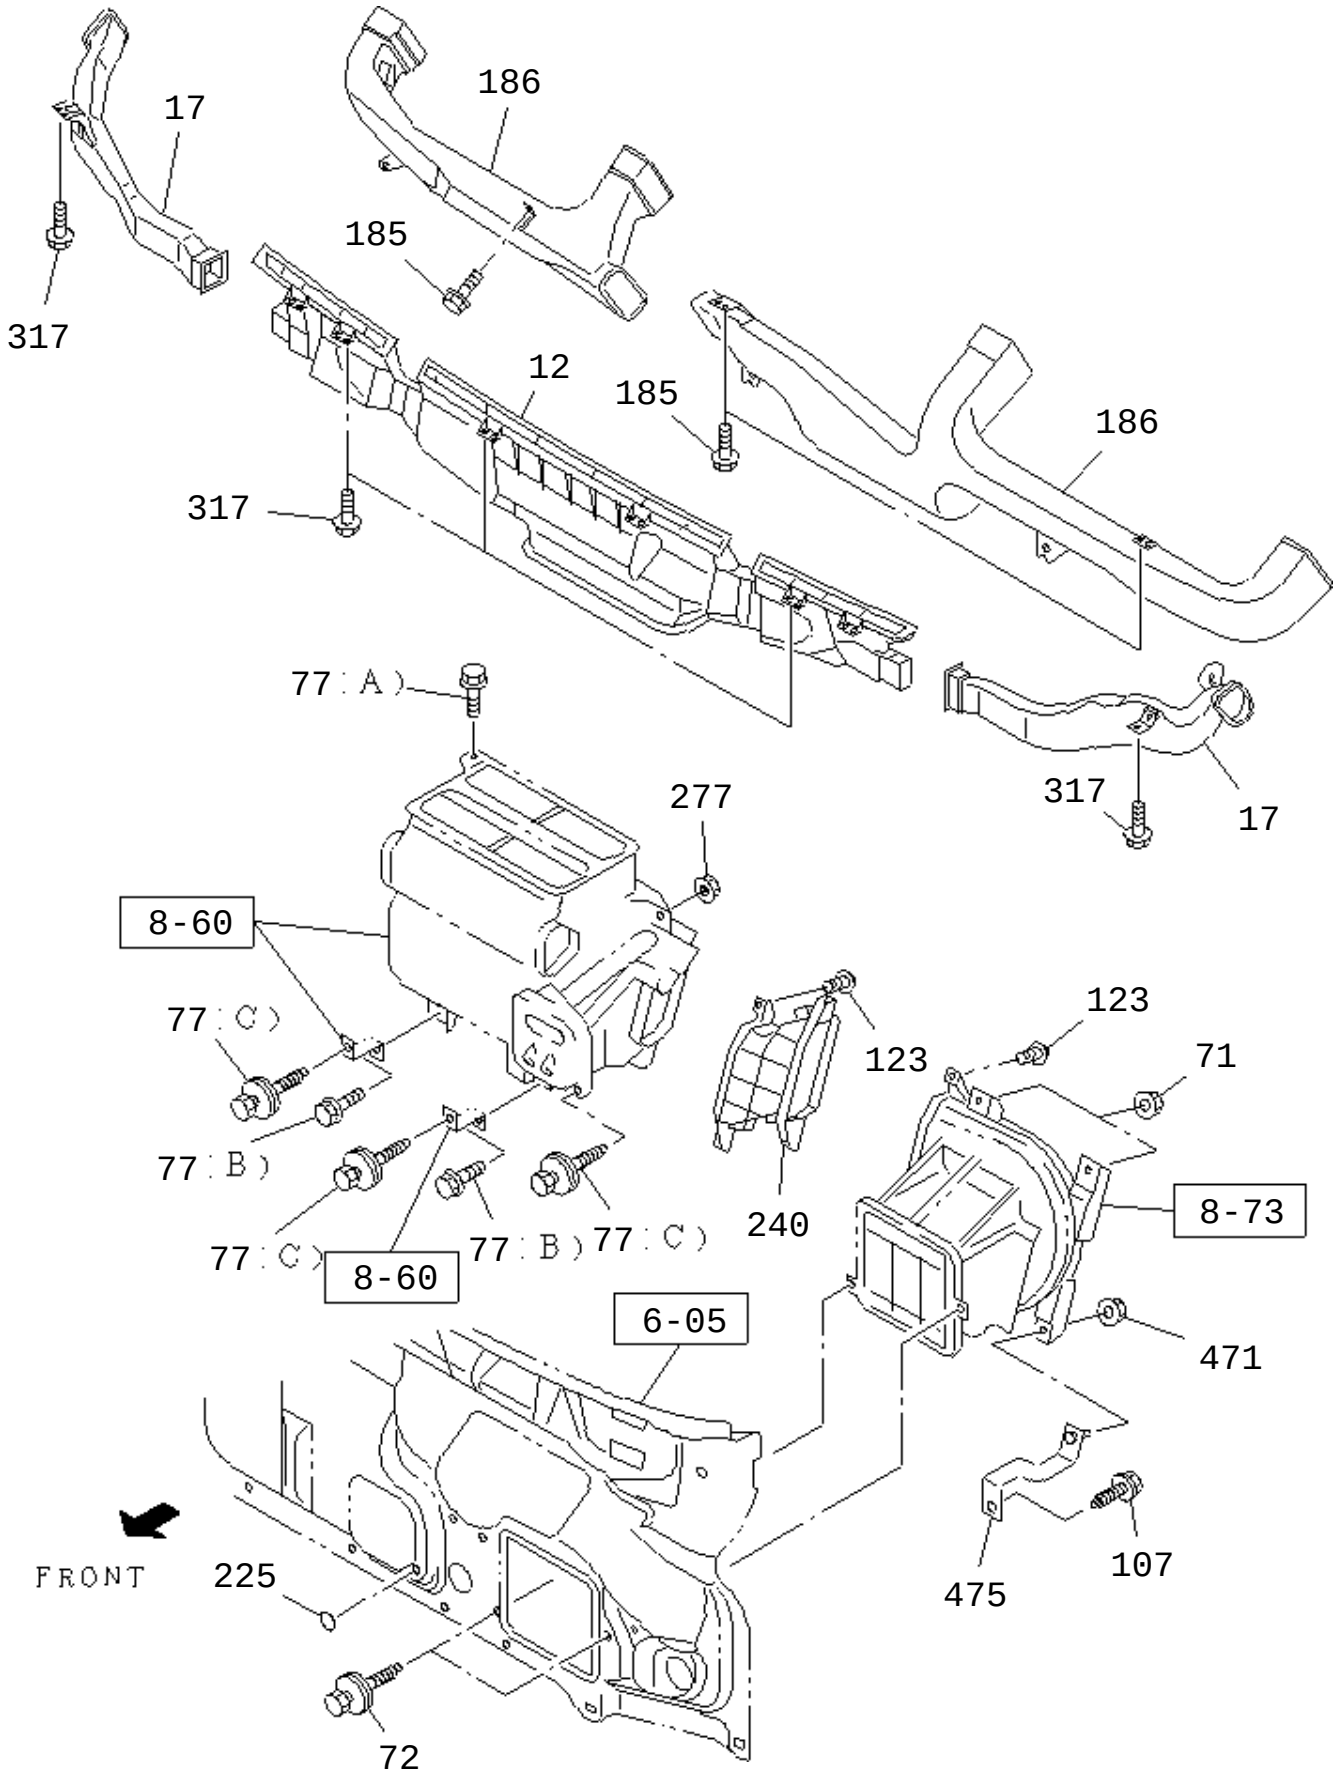

https://truckmanualshub.com/

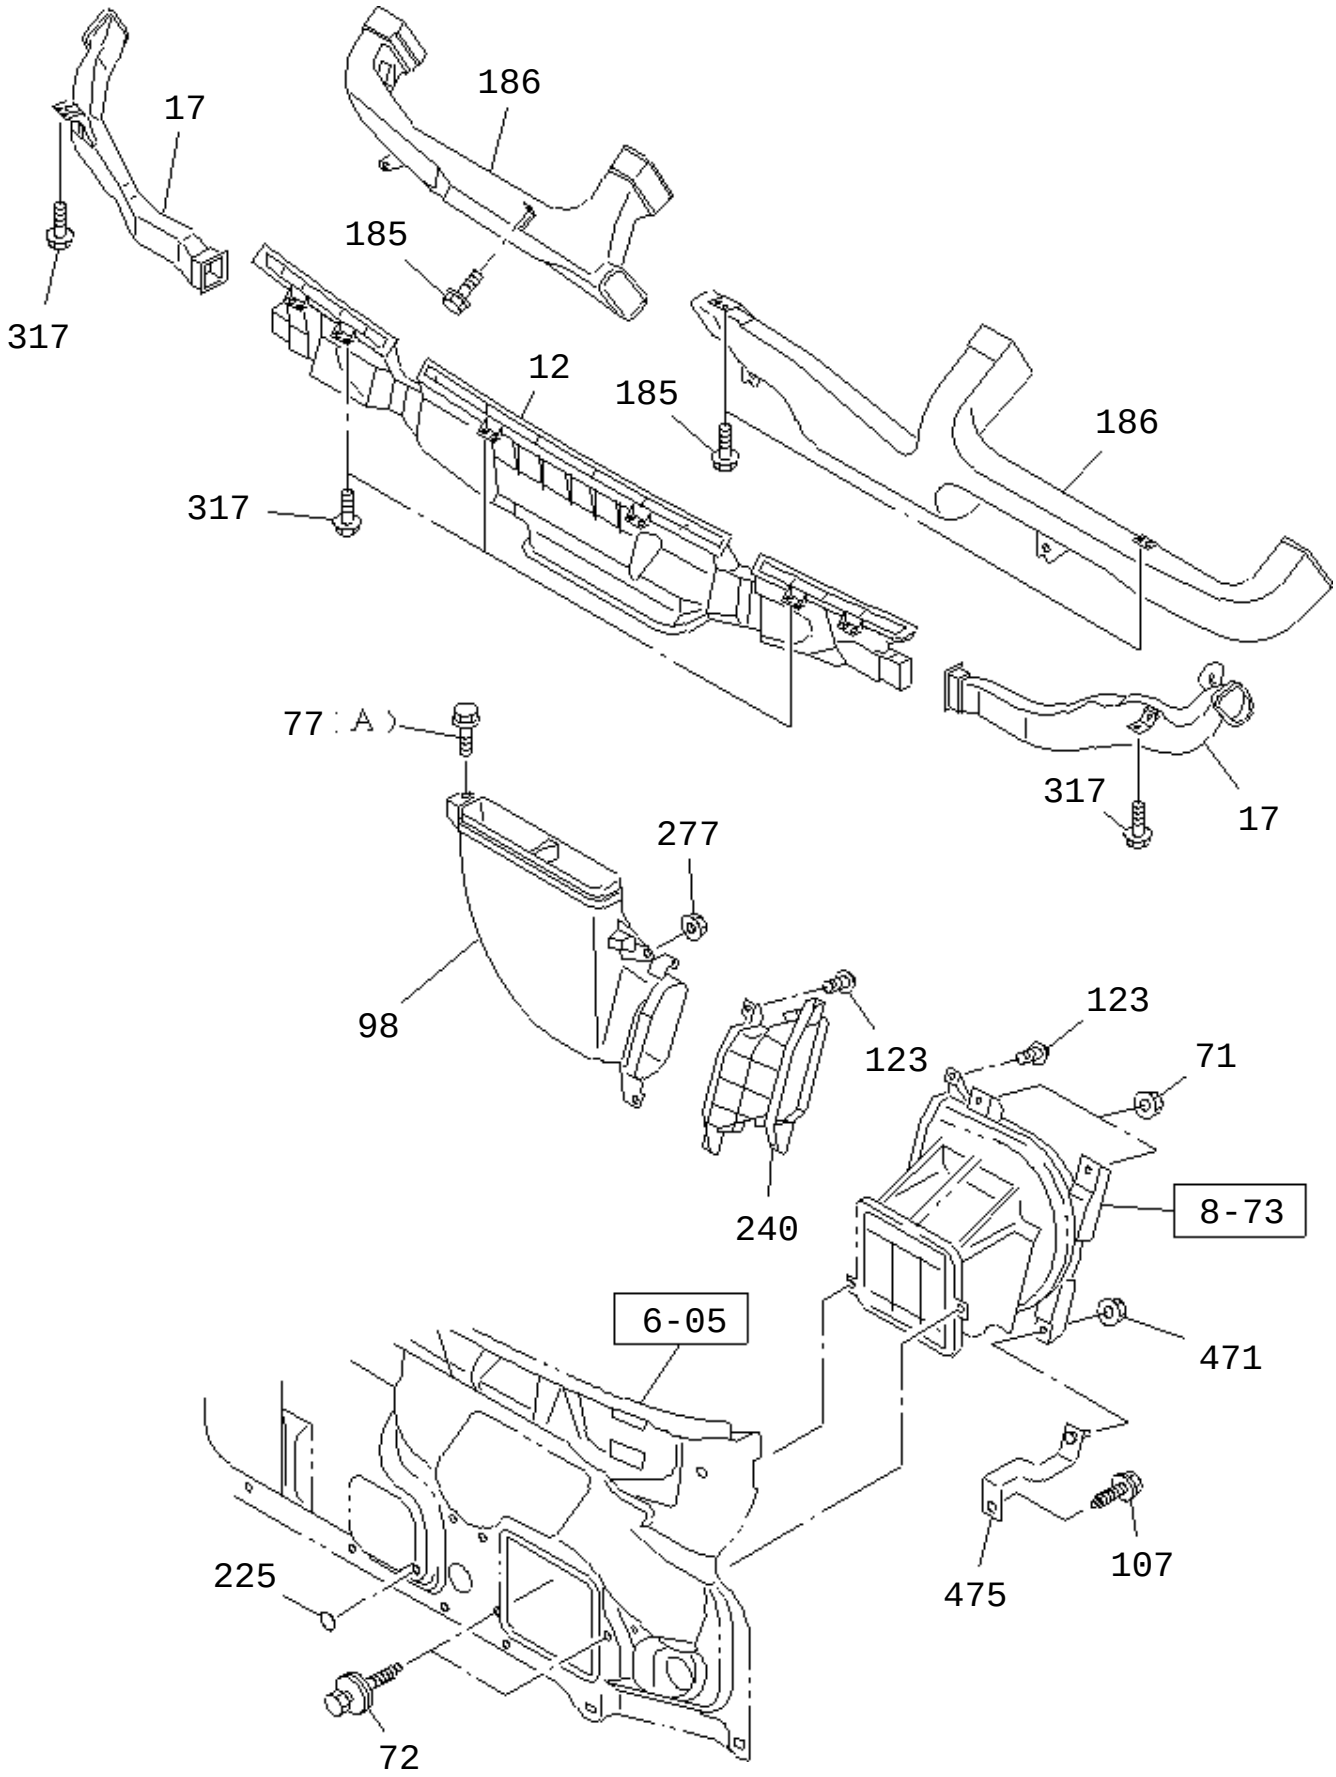

https://truckmanualshub.com/

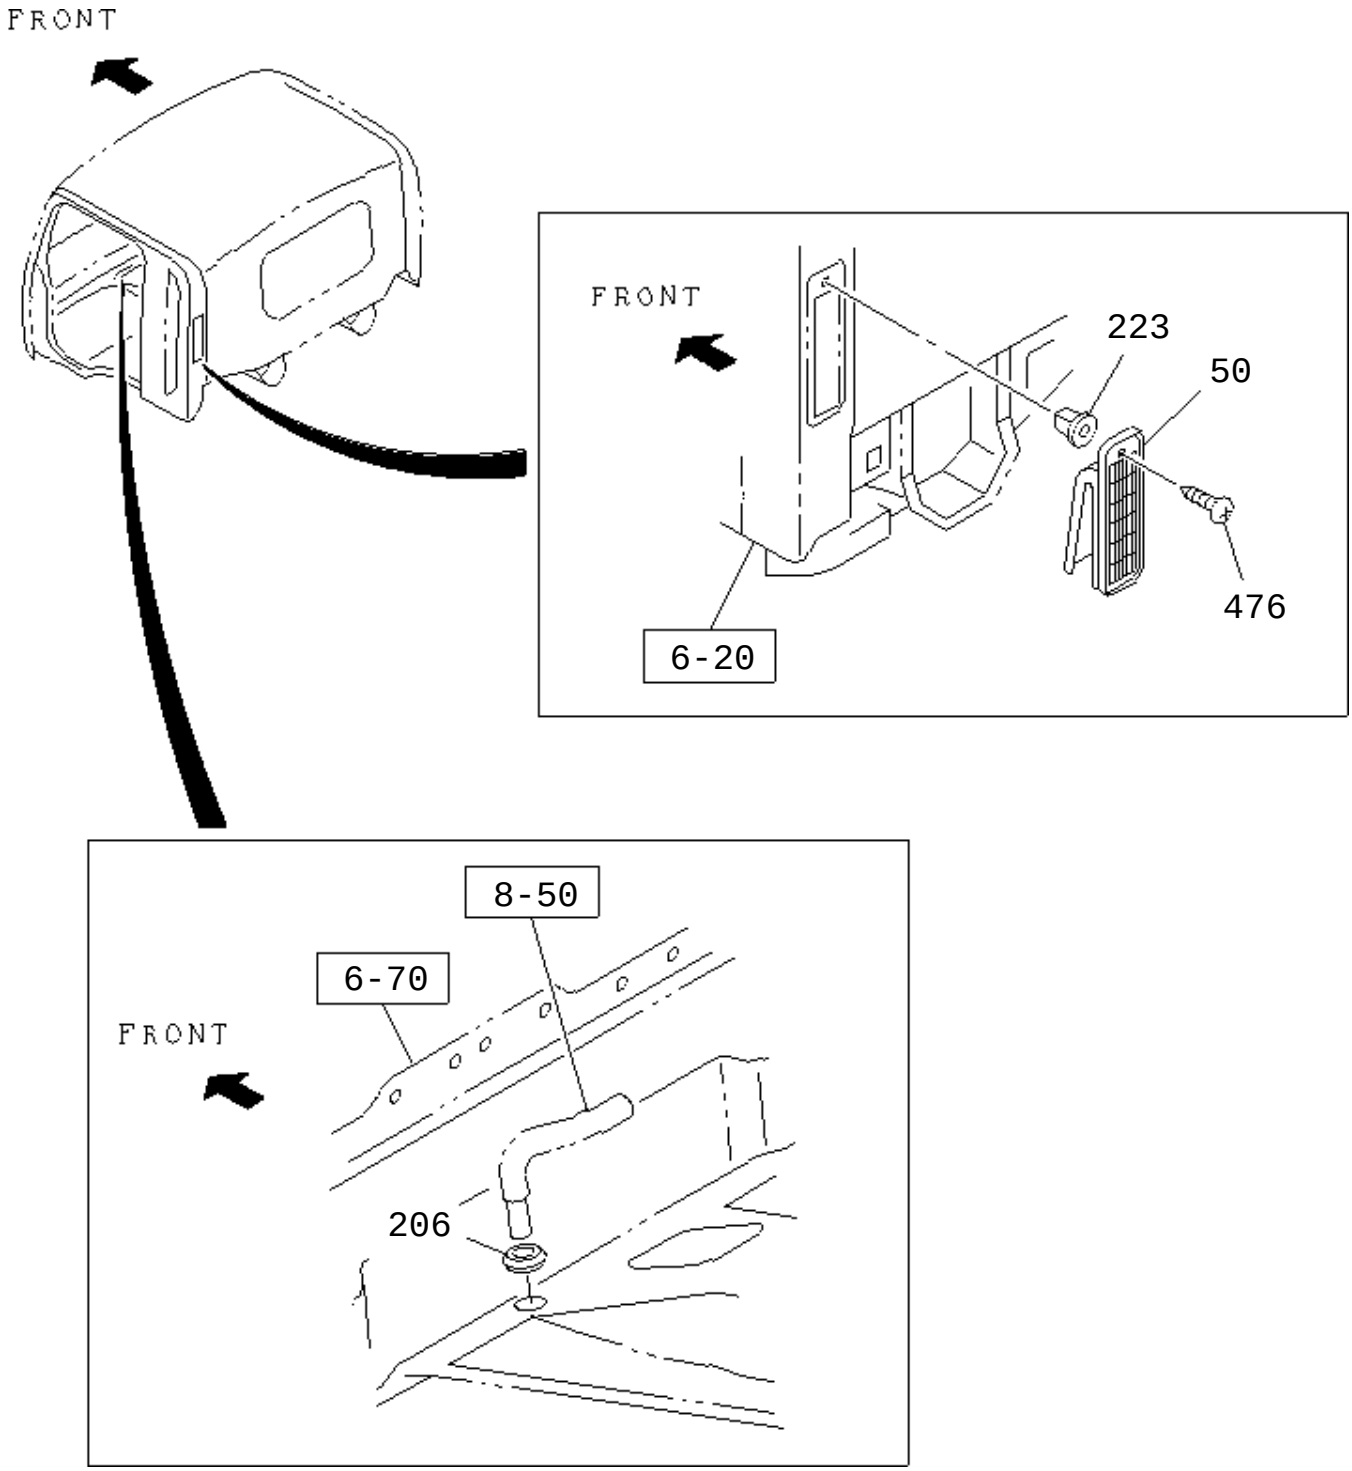

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	L / R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
12		NOZZLE; DEFROSTER						
		8-98040-009-3		1312-1401		01	A	VENTILATOR & DEFROSTER WO/HEATER<
		8-98040-009-3		1402-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE>
		8-98040-009-3		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE>
17		NOZZLE; DEFROSTER,SIDE						
		8-98040-018-1		1312-1401	L	01	A	VENTILATOR & DEFROSTER WO/HEATER<
		8-98040-018-1		1402-1403	L	01	A	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE>
		8-98040-018-1		1404-	L	01	AB	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE>
		8-98040-013-1		1312-1401	R	01	A	VENTILATOR & DEFROSTER WO/HEATER<
		8-98040-013-1		1402-1403	R	01	A	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE>
		8-98040-013-1		1404-	R	01	AB	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE>
50		VALVE ASM; HTR						
		8-97925-112-0		1312-1403		01	A	IDN
		8-97925-112-0		1404-		01	AB	IDN
71		NUT; BLOWER UNIT TO DASH						
		0-91180-106-0		1312-1403		02	A	VENTILATOR & DEFROSTER WO/HEATER M6 FLANGE
		0-91180-106-0		1404-		02	AB	VENTILATOR & DEFROSTER WO/HEATER M6 FLANGE
72		BOLT; BLOWER UNIT						
		8-98081-175-0		1312-1403		02	A	VENTILATOR & DEFROSTER WO/HEATER M6X20 W/LK&PL WASHER
		8-98081-175-0		1404-		02	AB	VENTILATOR & DEFROSTER WO/HEATER M6X20 W/LK&PL WASHER
77		BOLT; HTR UNIT						
		0-28650-616-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER (A) M6X16 FLANGE
		0-28650-616-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER (A) M6X16 FLANGE
		0-28650-620-0		1312-1401		02	A	VENTILATOR & DEFROSTER WO/HEATER (B) M6X20 FLANGE IDN
		0-28650-620-0		1402-1403		02	A	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> (B) M6X20 FLANGE IDN
		0-28650-620-0		1404-		02	AB	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> (B) M6X20 FLANGE IDN
		8-98081-175-0		1312-1401		02	A	VENTILATOR & DEFROSTER WO/HEATER (C) M6X20 W/LK&PL WASHER
		8-98081-175-0		1402-1403		02	A	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> (C) M6X20 W/LK&PL WASHER
		8-98081-175-0		1404-		02	AB	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> (C) M6X20 W/LK&PL WASHER
98		DUCT; BLOWER UNIT TO HTR UNIT						
		8-97520-909-0		1402-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER VIN MODEL YEAR 2014<VZE> IDN
		8-97520-909-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER VIN MODEL YEAR 2014<VZE> IDN
107		BOLT; STAY,HTR UNIT						
		8-98018-439-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER M8X25 W/LK&PL WASHER


https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
107		8-98018-439-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER M8X25 W/LK&PL WASHER
123		SCREW; DUCT						
		0-72180-516-0		1312-1403		04	A	VENTILATOR & DEFROSTER WO/HEATER M5X16 TAPPING
		0-72180-516-0		1404-		04	AB	VENTILATOR & DEFROSTER WO/HEATER M5X16 TAPPING
185		SCREW; VENT DUCT						
		0-72180-516-0		1312-1403		04	A	VENTILATOR & DEFROSTER WO/HEATER M5X16 TAPPING
		0-72180-516-0		1404-		04	AB	VENTILATOR & DEFROSTER WO/HEATER M5X16 TAPPING
186		DUCT; VENTILATOR						
		8-97585-489-4		1312-1403	L	01	A	VENTILATOR & DEFROSTER WO/HEATER<
		8-97585-489-4		1404-	L	01	AB	VENTILATOR & DEFROSTER WO/HEATER<
		8-98174-737-0		1312-1403	R	01	A	VENTILATOR & DEFROSTER WO/HEATER<
		8-98174-737-0		1404-	R	01	AB	VENTILATOR & DEFROSTER WO/HEATER<
206		GROMMET; A/C PIPE TO BLOWER UNIT						
		8-98019-649-0		1312-1401		01	A	VENTILATOR & DEFROSTER WO/HEATER IDN
		8-98019-649-0		1402-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> IDN
		8-98019-649-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> IDN
223		GROMMET; SCREW						
		8-94441-539-0		1312-1403		01	A	D=7.9X7.9 L=20 M5 IDN
		8-94441-539-0		1404-		01	AB	D=7.9X7.9 L=20 M5 IDN
225		SEAL; WATER						
		1-76798-019-0		1402-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> OD=25 BLACK
		1-76798-019-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> OD=25 BLACK
		1-76798-019-0		1312-1401		01	A	VENTILATOR & DEFROSTER WO/HEATER OD=25 BLACK
		1-76798-019-0		1402-1403		03	A	VENTILATOR & DEFROSTER WO/HEATER VIN MODEL YEAR 2014<VZE> OD=25 BLACK
		1-76798-019-0		1404-		03	AB	VENTILATOR & DEFROSTER WO/HEATER VIN MODEL YEAR 2014<VZE> OD=25 BLACK
240		DUCT; AIR,HTR						
		8-98041-402-1		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<
		8-98041-402-1		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<
277		NUT; HTR						
		0-91180-106-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER M6 FLANGE
		0-91180-106-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER M6 FLANGE
317		SCREW; DEFROSTER NOZZLE						
		0-72180-516-0		1312-1401		08	A	VENTILATOR & DEFROSTER WO/HEATER M5X16 TAPPING
		0-72180-516-0		1402-1403		08	A	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> M5X16 TAPPING
		0-72180-516-0		1404-		08	AB	VENTILATOR & DEFROSTER WO/HEATER EXC. VIN MODEL YEAR 2014<VZE> M5X16 TAPPING
471		NUT; BLOWER						
		0-91180-106-0		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER M6 FLANGE
		0-91180-106-0		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER M6 FLANGE
475		BRACKET; BLOWER						
		8-98043-500-1		1312-1403		01	A	VENTILATOR & DEFROSTER WO/HEATER<
		8-98043-500-1		1404-		01	AB	VENTILATOR & DEFROSTER WO/HEATER<
476		SCREW; VALVE						


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	L/R	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
476		8-98062-675-0		1312-1403		01	A	M5X16 HEX SOCKET IDN
		8-98062-675-0		1404-		01	AB	M5X16 HEX SOCKET IDN
6-05		Move to 6-05						
8-60		Move to 8-60						
8-73		Move to 8-73						
6-20		Move to 6-20						
6-70		Move to 6-70						
8-50		Move to 8-50						

https://truckmanualshub.com/

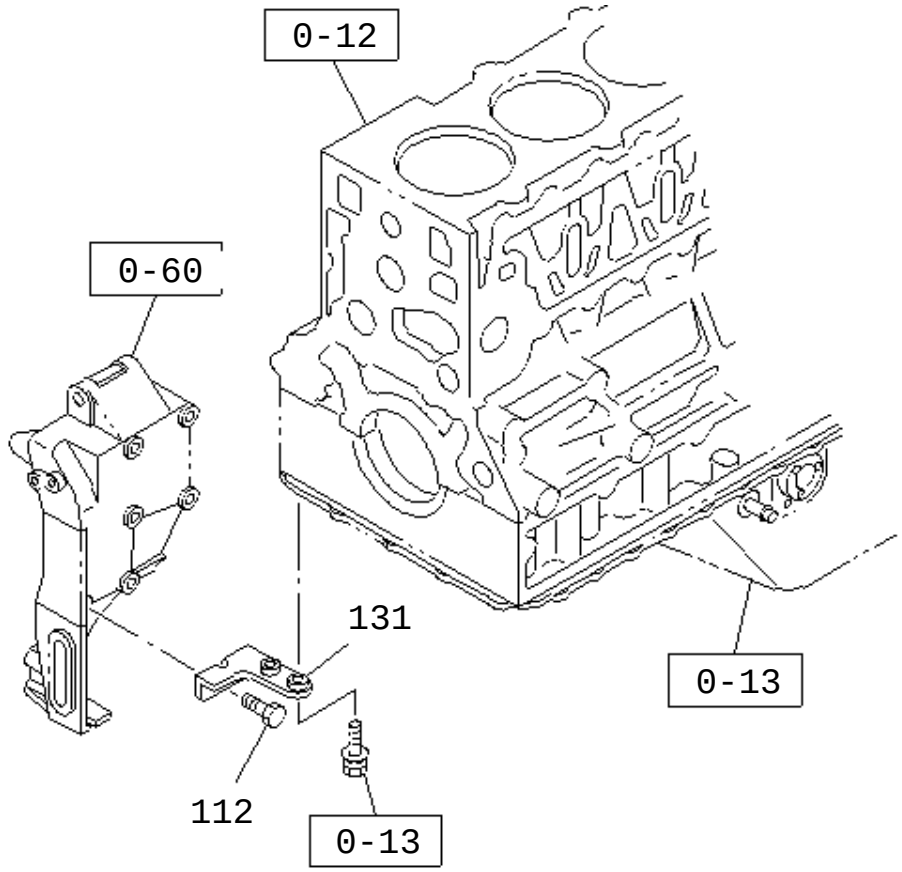

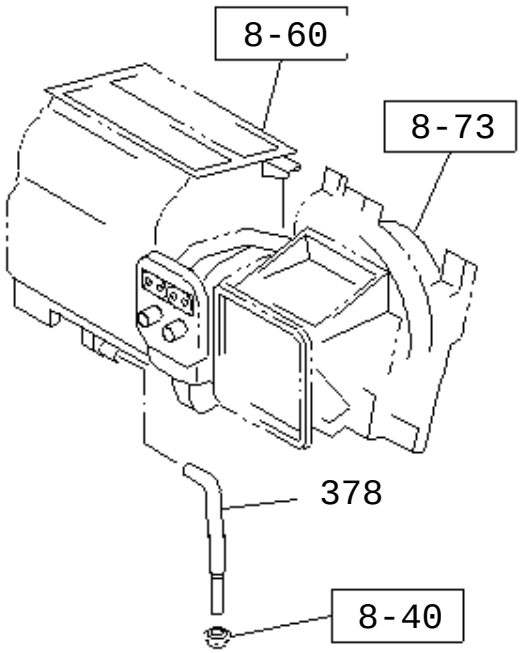


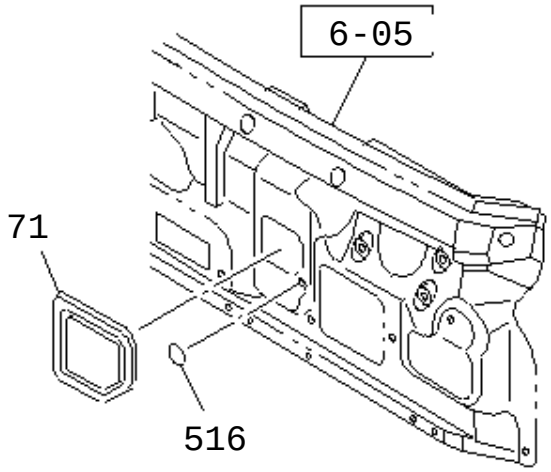

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
71		COVER; EVAP,A/C					
		8-98017-234-1		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
		8-98017-234-1		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> IDN
112		BOLT; STAY					
		0-28050-816-0		1312-1403	02	A	M8X16 FLANGE
		0-28050-816-0		1404-	02	AB	M8X16 FLANGE
131		STAY; CMPR BRKT					
		8-94393-451-0		1312-1403	01	A	
		8-94393-451-0		1404-	01	AB	
378		HOSE; DRAIN,EVAPORATOR					
		8-98041-428-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98041-428-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98041-428-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
516		SEAL; A/C					
		1-76798-019-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> OD=25 BLACK
		1-76798-019-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> OD=25 BLACK
0-12		Move to 0-12					
0-13		Move to 0-13					
0-60		Move to 0-60					
6-05		Move to 6-05					
8-40		Move to 8-40					
8-60		Move to 8-60					
8-73		Move to 8-73					

https://truckmanualshub.com/

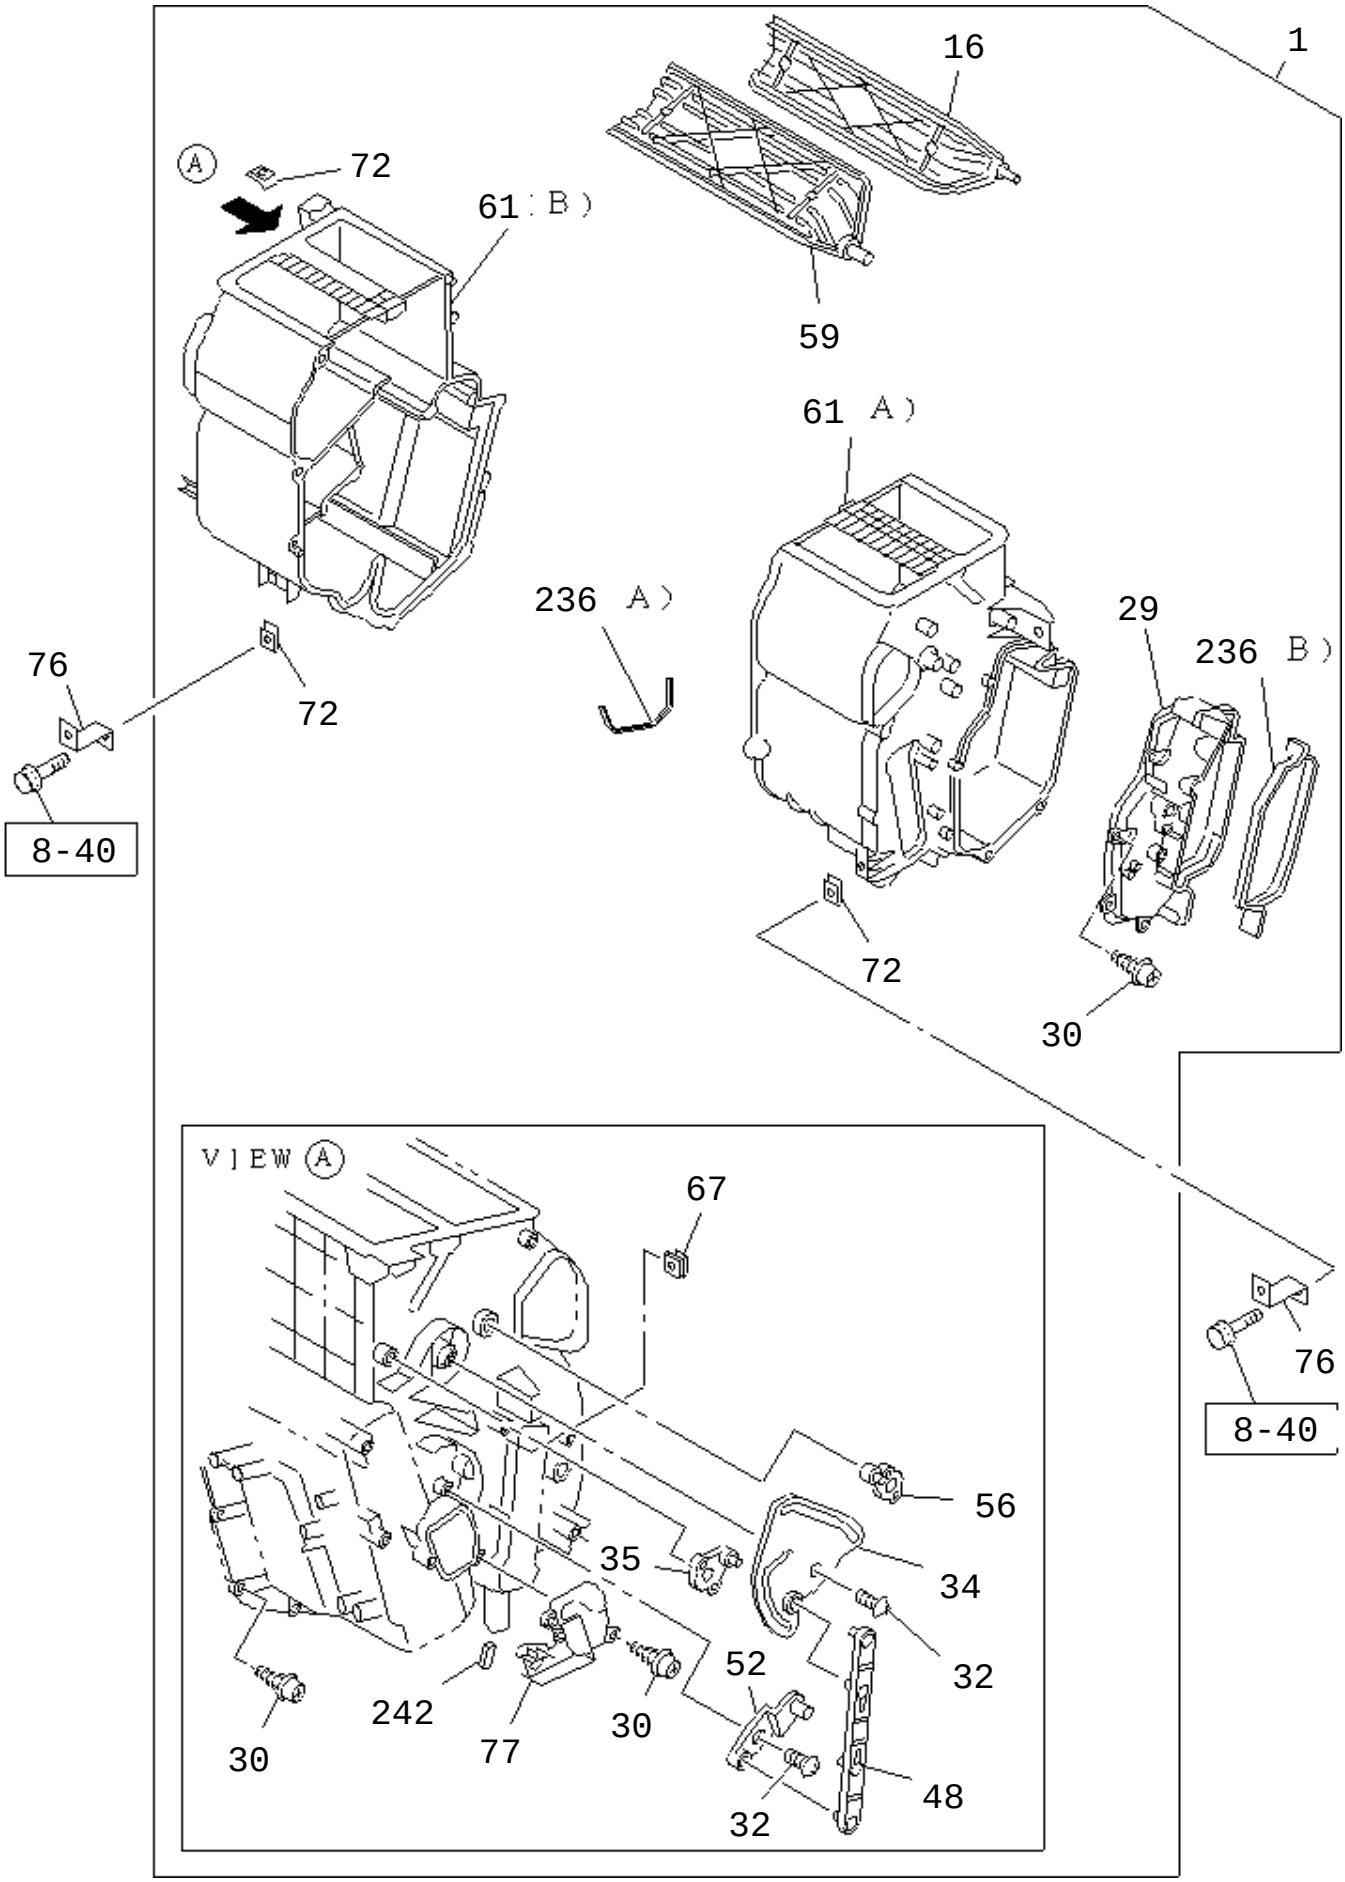

https://truckmanualshub.com/

8-60 HEATER UNIT; FRONT

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		HEATER UNIT					
		8-98214-400-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98214-400-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98214-400-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
16		SHUTTER; HTR UNIT,CENTER UPR					
		8-98047-387-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-387-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98047-387-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
29		COVER; HTR UNIT					
		8-98231-367-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98231-367-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98231-367-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
30		SCREW; HTR UNIT					
		8-97957-708-0		1312-1401	20	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M4X16 TAPPING IDN
		8-97957-708-0		1402-1403	20	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> M4X16 TAPPING IDN
		8-97957-708-0		1404-	20	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> M4X16 TAPPING IDN
32		SCREW; HTR UNIT					
		8-98047-416-0		1312-1401	02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M4X16
		8-98047-416-0		1402-1403	02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> M4X16
		8-98047-416-0		1404-	02	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> M4X16
34		LEVER; SHUTTER,HTR UNIT					
		8-98047-389-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-389-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98047-389-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
35		LEVER; SHUTTER,HTR UNIT					
		8-98047-392-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-392-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98047-392-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
48		LEVER; HTR UNIT					
		8-98047-391-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-391-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98047-391-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
52		LEVER; SHUTTER,HTR UNIT					
		8-98047-390-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-390-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98047-390-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
56		LEVER; SHUTTER,HTR UNIT					
		8-98047-393-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-393-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98047-393-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
59		SHUTTER; HTR UNIT,SIDE					
		8-98047-386-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-386-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>


https://truckmanualshub.com/

8-60 HEATER UNIT; FRONT


KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
59		8-98047-386-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
61		CASE; HTR UNIT					
		8-98077-422-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A)
		8-98077-422-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (A)
		8-98077-422-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (A)
		8-98077-423-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B)
		8-98077-423-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B)
		8-98077-423-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B)
67		CLIP; HTR UNIT					
		8-98047-417-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-417-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98047-417-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
72		NUT; CASE,HTR UNIT					
		8-98047-428-0		1312-1401	03	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M6
		8-98047-428-0		1402-1403	03	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> M6
		8-98047-428-0		1404-	03	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> M6
76		BRACKET; HTR UNIT					
		8-98009-742-1		1312-1401	02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98009-742-1		1402-1403	02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98009-742-1		1404-	02	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
77		COVER; HTR CASE					
		8-98047-414-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-414-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98047-414-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
236		GASKET; HEATER					
		8-98047-420-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A)
		8-98047-420-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (A)
		8-98047-420-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (A)
		8-98047-421-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B)
		8-98047-421-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B)
		8-98047-421-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B)
242		GASKET; CASE					
		8-98048-816-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98048-816-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98048-816-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
8-40		Move to 8-40					

https://truckmanualshub.com/

EXC. VIN MODEL YEAR 2014

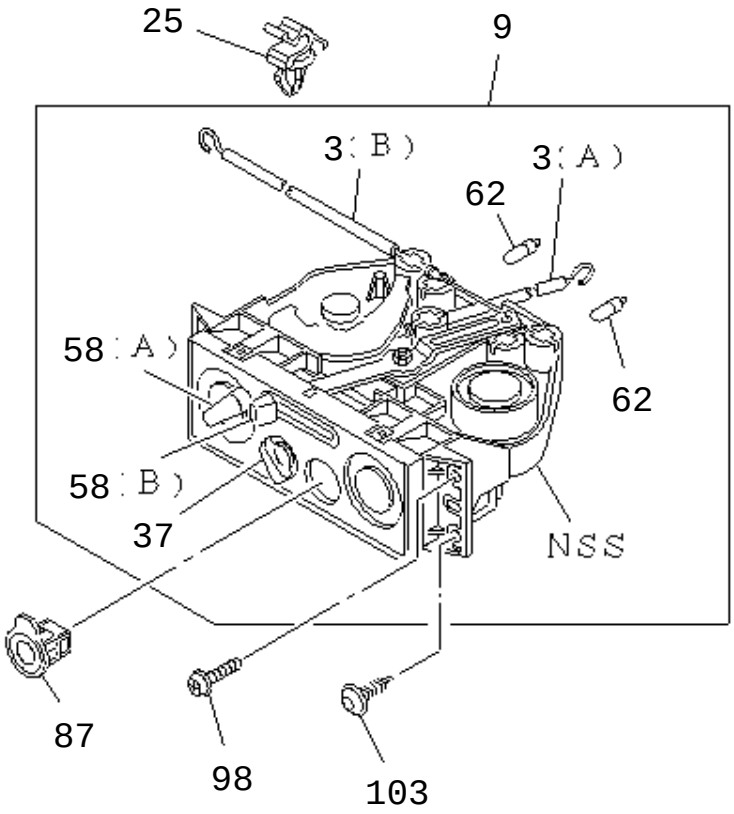

VIN MODEL YEAR 2014

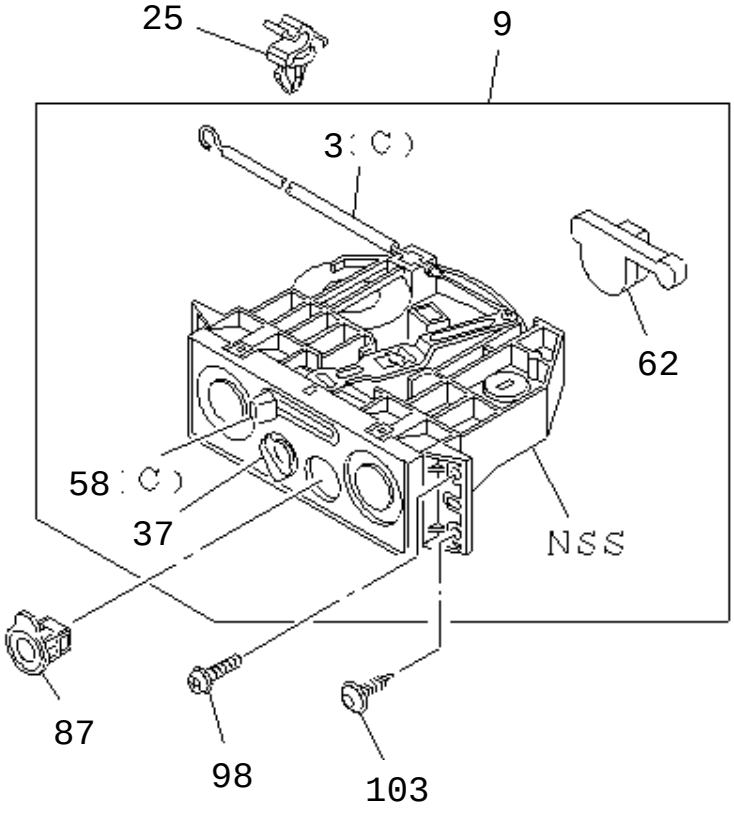

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
3		CABLE; HTR CONT LVR					
		8-97927-125-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> (C) RECIRC/FRESH
		8-97927-125-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> (C) RECIRC/FRESH
		8-98041-503-1		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A) MODE
		8-98041-503-1		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (A) MODE
		8-98041-503-1		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (A) MODE
		8-98041-505-2		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B) RECIRC/FRESH
		8-98041-505-2		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B) RECIRC/FRESH
		8-98041-505-2		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B) RECIRC/FRESH
9		LEVER ASM; HTR & A/C CONT					
		8-98255-068-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE>
		8-98255-068-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE>
		8-98062-807-1		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98062-807-1		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98062-807-1		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
25		CLIP; CABLE,CONT LEVER					
		8-94128-483-0		1312-1403	03	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> ID=4.8
		8-94128-483-0		1404-	03	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> ID=4.8
37		KNOB; SW,HTR CONT LVR					
		8-97926-674-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE>
		8-97926-674-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE>
		8-98037-368-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98037-368-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
		8-98037-368-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE>
58		KNOB; LVR,HTR CONT LVR					
		8-97926-675-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> (C)
		8-97926-675-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE> (C)
		8-98037-369-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A)
		8-98037-369-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (A)
		8-98037-369-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (A)
		8-98037-370-0		1312-1401	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B)
		8-98037-370-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B)
		8-98037-370-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> (B)
62		BULB; HTR CONT LVR					
		8-97926-676-0		1402-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE>


https://truckmanualshub.com/

8-65 CONTROL LEVER; HEATER AND AIR CON

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
62		8-97926-676-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> VIN MODEL YEAR 2014<VZE>
		8-98037-371-0		1312-1401	02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> 24V 1.1W
		8-98037-371-0		1402-1403	02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> 24V 1.1W
		8-98037-371-0		1404-	02	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> EXC. VIN MODEL YEAR 2014<VZE> 24V 1.1W
87		CAP; A/C SWITCH					
		8-98006-089-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98006-089-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
98		SCREW; CONT PANEL					
		0-72180-520-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M5X20 HEXALOBULAR SOCKET
		0-72180-520-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M5X20 HEXALOBULAR SOCKET
103		CLIP					
		8-97098-326-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> DARK GRAY
		8-97098-326-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> DARK GRAY

https://truckmanualshub.com/

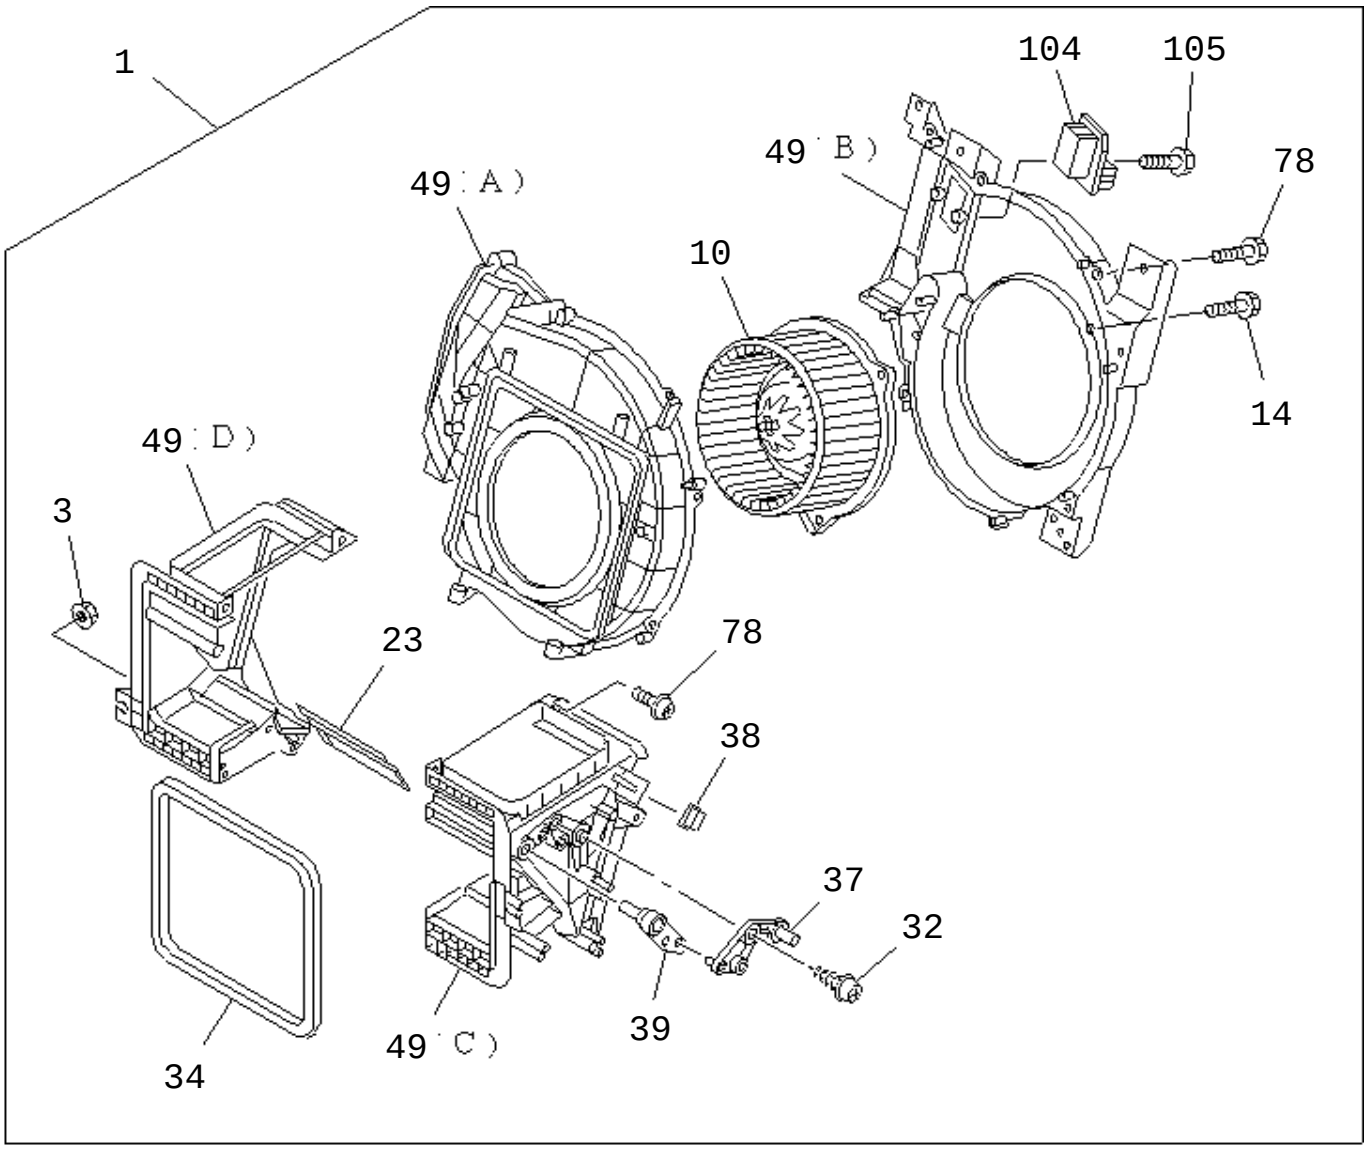

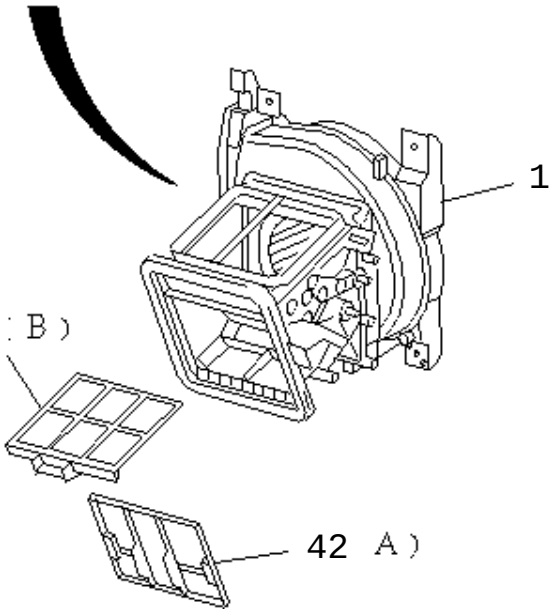

https://truckmanualshub.com/

8-73 BLOWER UNIT


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		BLOWER ASM					
		8-98171-720-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98171-720-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
3		NUT; CASE					
		1-83539-354-0		1312-1403	02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M6
		1-83539-354-0		1404-	02	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M6
10		MOTOR ASM; FAN,BLOWER UNIT					
		8-98183-924-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98183-924-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
14		SCREW; COVER TO CASE					
		8-98047-448-0		1312-1403	03	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M5X16
		8-98047-448-0		1404-	03	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M5X16
23		SHUTTER; BLOWER UNIT					
		8-98171-863-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98171-863-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
32		SCREW; LEVER					
		8-98047-416-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M4X16
		8-98047-416-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M4X16
34		LINING; BLOWER UNIT					
		8-98096-453-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98096-453-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
37		LEVER; MODE LEVER					
		8-98047-436-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-436-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
38		CLIP; BLOWER UNIT					
		8-98047-417-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-417-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
39		LEVER; SHUTTER,BLOWER UNIT					
		8-98047-435-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98047-435-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
42		FILTER; BLOWER UNIT					
		8-98025-006-1		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B)
		8-98025-006-1		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B)
		8-98041-327-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A)
		8-98041-327-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A)
49		CASE; BLOWER UNIT					
		8-98047-440-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B)
		8-98047-440-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (B)
		8-98047-441-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A)
		8-98047-441-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (A)
		8-98077-413-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (D)
		8-98077-413-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (D)
		8-98077-414-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (C)
		8-98077-414-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> (C)
78		SCREW; CASE TO CASE					
		8-97957-708-0		1312-1403	15	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M4X16 TAPPING IDN
		8-97957-708-0		1404-	15	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M4X16 TAPPING IDN
104		RESISTOR; BLOWER UNIT					
		8-98074-113-0		1312-1403	01	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
		8-98074-113-0		1404-	01	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ>
105		SCREW; RESISTOR					

https://truckmanualshub.com/

8-73 BLOWER UNIT


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
105		8-97957-708-0		1312-1403	02	A	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M4X16 TAPPING IDN
		8-97957-708-0		1404-	02	AB	VENTILATOR & DEFROSTER WO/HEATER<SAZ> M4X16 TAPPING IDN


https://truckmanualshub.com/

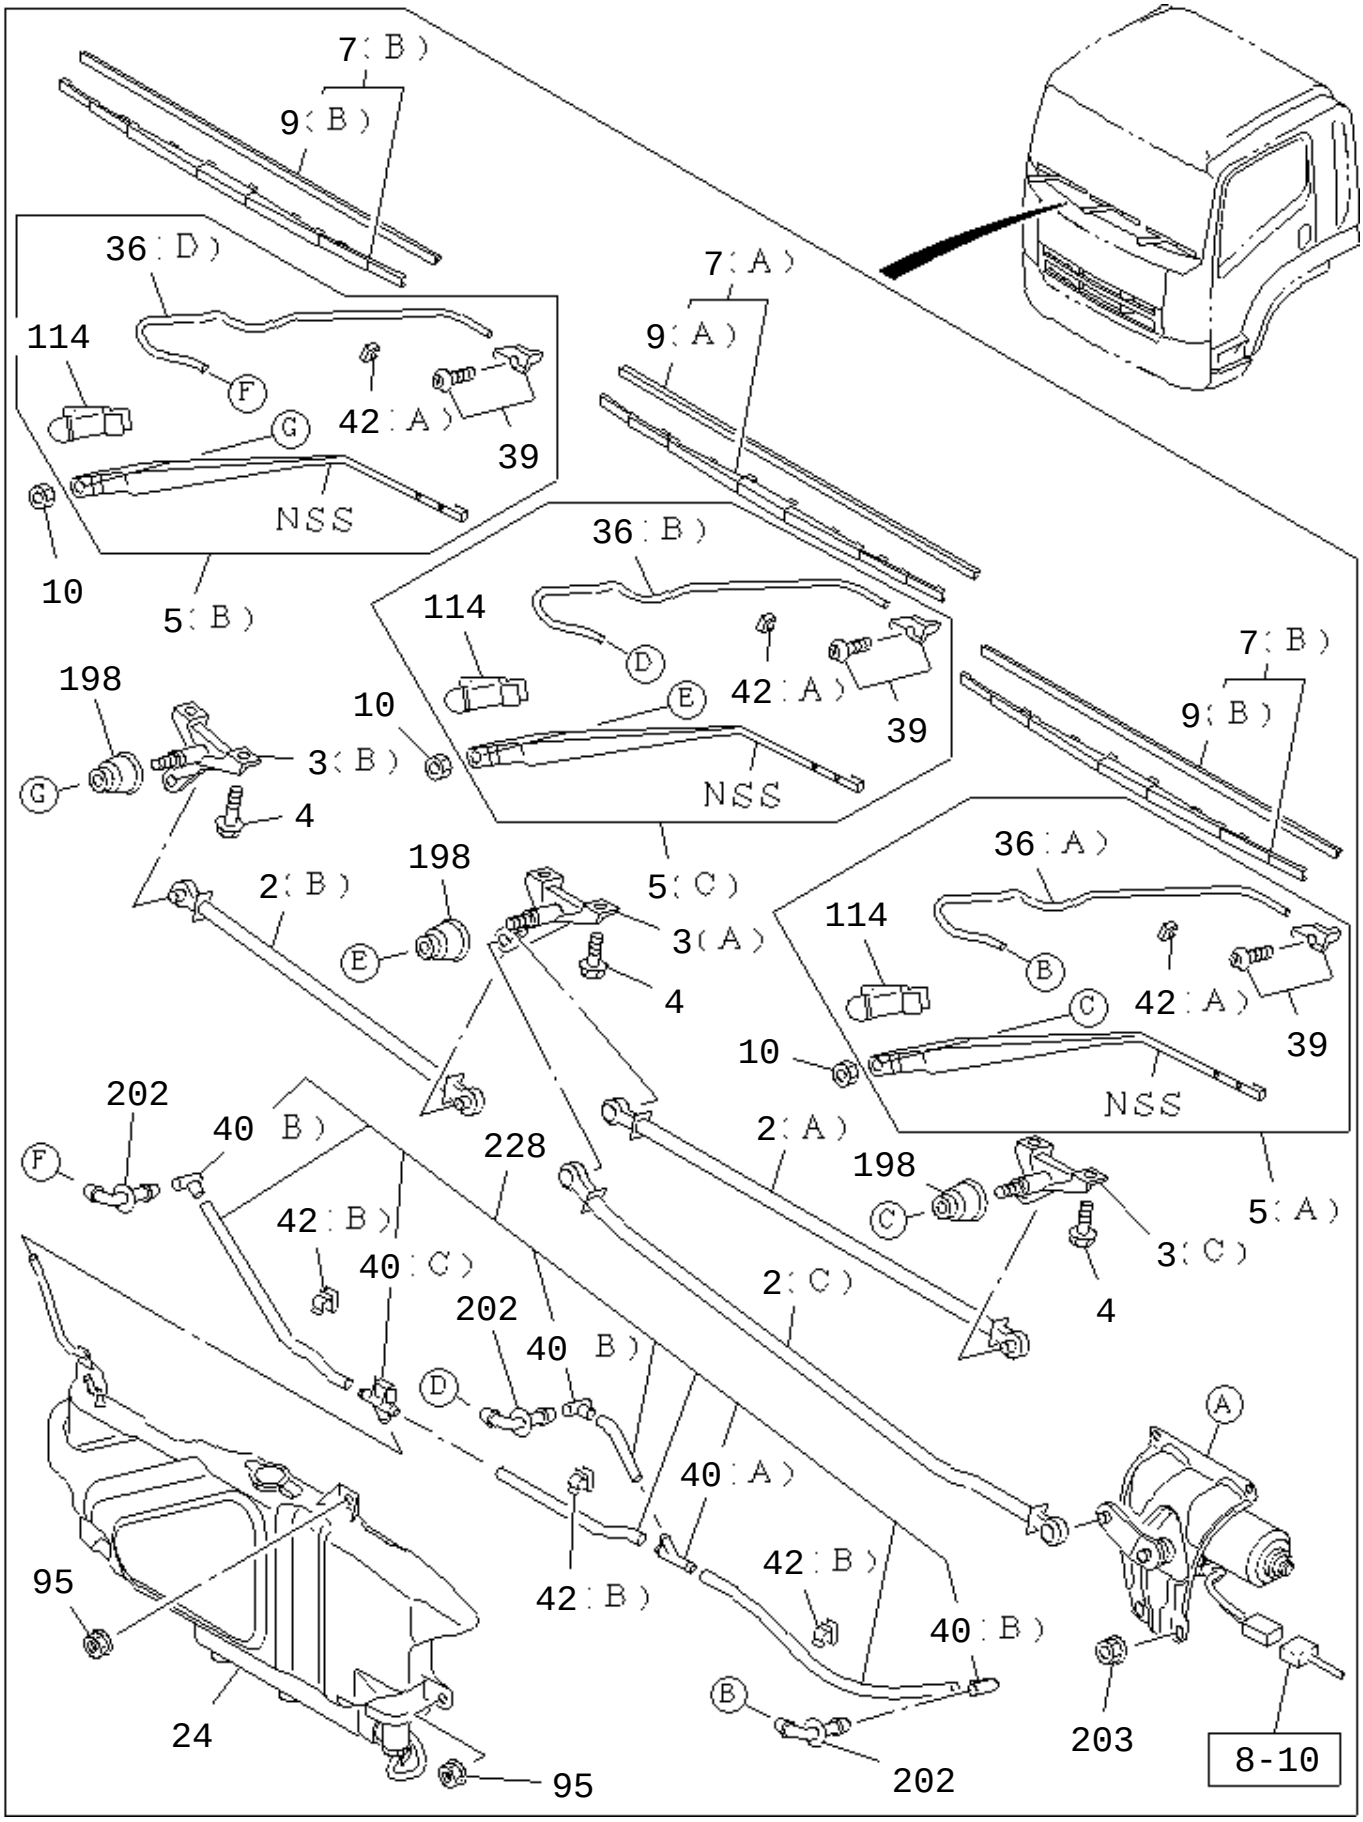

https://truckmanualshub.com/

COMPONENT

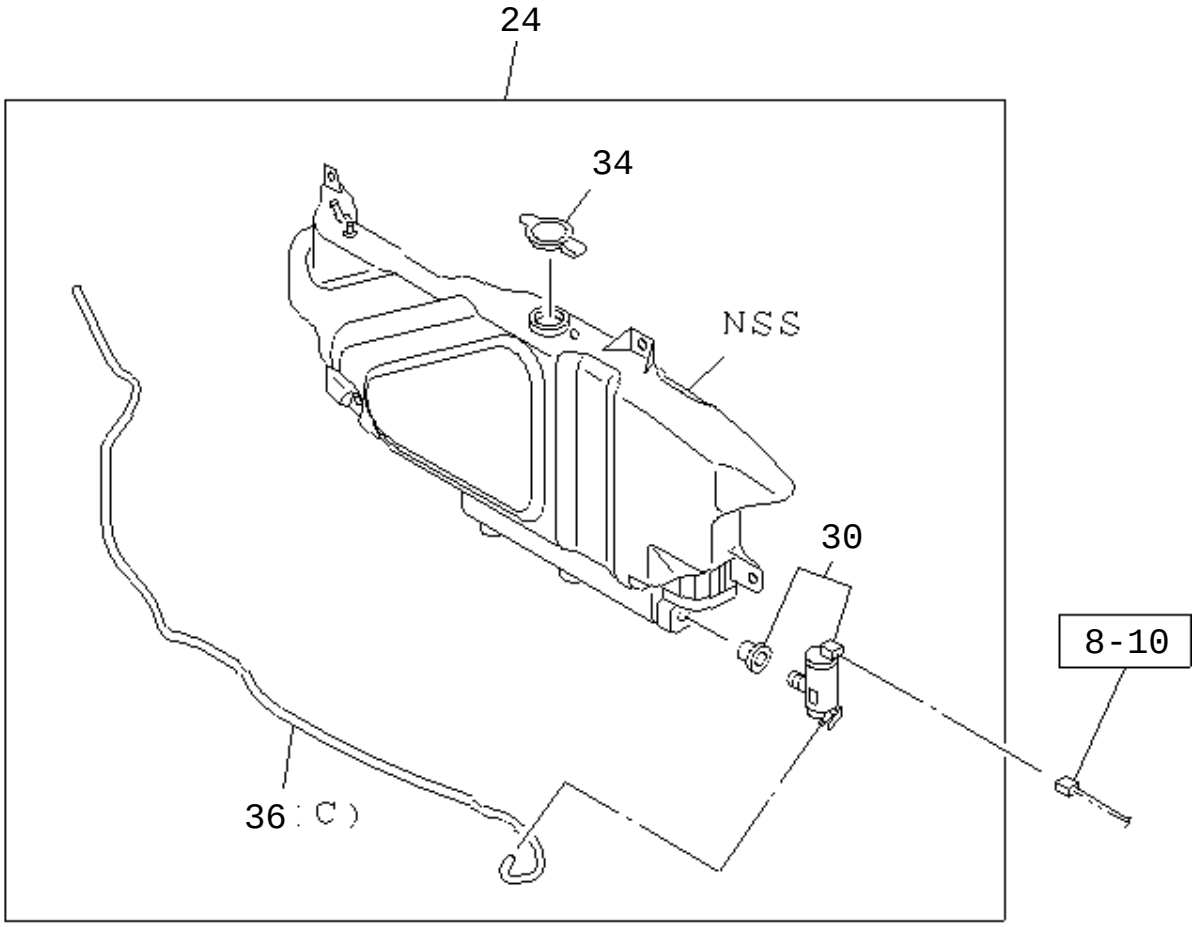

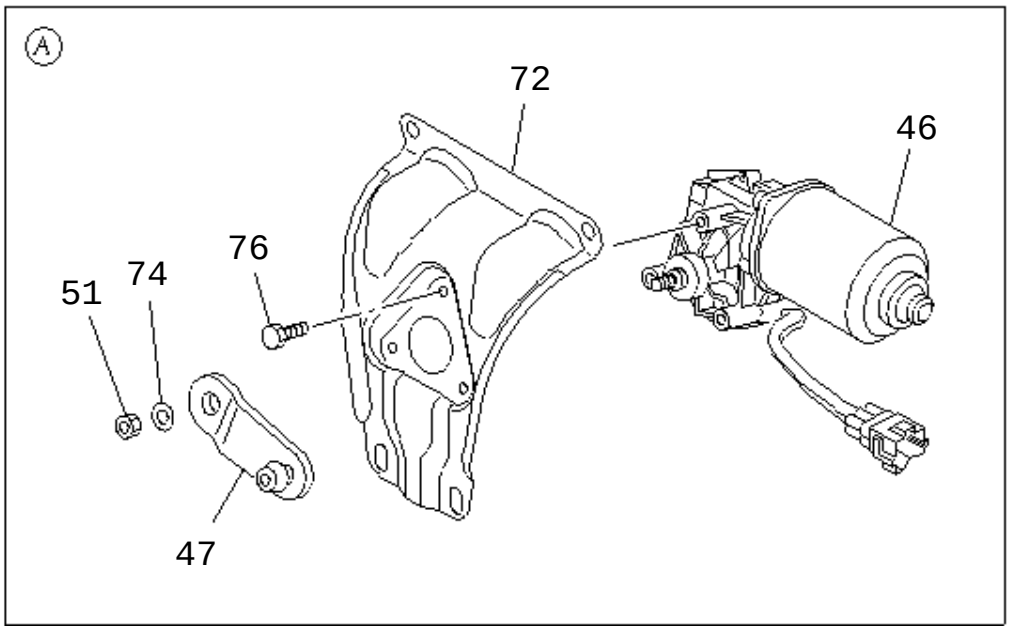

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
2		LINK; FRT WIPER					
		8-98078-812-0		1312-1403	01	A	(A)
		8-98078-812-0		1404-	01	AB	(A)
		8-98078-813-0		1312-1403	01	A	(B)
		8-98078-813-0		1404-	01	AB	(B)
		8-98078-814-0		1312-1403	01	A	(C)
		8-98078-814-0		1404-	01	AB	(C)
3		PIVOT ASM; FRT WIPER					
		8-98068-140-0		1312-1403	01	A	(C)
		8-98068-140-0		1404-	01	AB	(C)
		8-98078-817-0		1312-1403	01	A	(A)
		8-98078-817-0		1404-	01	AB	(A)
		8-98078-818-0		1312-1403	01	A	(B)
		8-98078-818-0		1404-	01	AB	(B)
4		BOLT; WIPER LINK TO BODY					
		0-28650-820-0		1312-1403	06	A	M8X20 FLANGE IDN
		0-28650-820-0		1404-	06	AB	M8X20 FLANGE IDN
5	B	ARM; WIPER					
		8-98078-821-1		1312-1403	01	A	(B)
		8-98078-821-1		1404-	01	AB	(B)
		8-98078-822-1		1312-1403	01	A	(C)
		8-98078-822-1		1404-	01	AB	(C)
		8-98078-823-1		1312-1403	01	A	(A)
		8-98078-823-1		1404-	01	AB	(A)
7	A	BLADE; WIPER					
		1-83315-047-2		1312-1403	02	A	(B)
		1-83315-047-2		1404-	02	AB	(B)
		1-83315-048-2		1312-1403	01	A	(A)
		1-83315-048-2		1404-	01	AB	(A)
9	A	RUBBER; FRT WIPER BLADE					
		1-83355-015-0		1312-1403	02	A	(B)
		1-83355-015-0		1404-	02	AB	(B)
		1-83355-016-0		1312-1403	01	A	(A)
		1-83355-016-0		1404-	01	AB	(A)
10		NUT; WIPER ARM TO WIPER PIVOT					
		1-09984-120-0		1312-1403	03	A	M10
		1-09984-120-0		1404-	03	AB	M10
24		TANK ASM; WASHER					
		8-98039-661-4		1312-1403	01	A	
		8-98039-661-4		1404-	01	AB	
30		MOTOR ASM; FRT WASHER TANK					
		8-98070-170-0		1312-1403	01	A	

https://truckmanualshub.com/


KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
30		8-98070-170-0		1404-	01	AB	
34		CAP; WASHER TANK					
		8-97855-140-0		1312-1403	01	A	
							IDN
		8-97855-140-0		1404-	01	AB	
							IDN
36		HOSE; WASHER					
		1-86810-098-0		1312-1403	01	A	
							(B)
		1-86810-098-0		1404-	01	AB	
							(B)
		8-98070-173-0		1312-1403	01	A	
							(C)
		8-98070-173-0		1404-	01	AB	
							(C)
		8-98078-825-0		1312-1403	01	A	
							(D)
		8-98078-825-0		1404-	01	AB	
							(D)
		8-98078-826-0		1312-1403	01	A	
							(A)
		8-98078-826-0		1404-	01	AB	
							(A)
39		NOZZLE; WINDSHIELD WASHER					
		1-83315-085-0		1312-1403	03	A	
		1-83315-085-0		1404-	03	AB	
40		JOINT; WASHER HOSE					
		8-97167-258-0		1312-1403	01	A	
							(C)
		8-97167-258-0		1404-	01	AB	
							(C)
		8-97307-026-0		1312-1403	03	A	
							(B)
		8-97307-026-0		1404-	03	AB	
							(B)
		8-97855-163-0		1312-1403	01	A	
							(A)
		8-97855-163-0		1404-	01	AB	
							(A)
42		CLIP; WASHER HOSE					
		1-86810-044-0		1312-1403	03	A	
							(A)
		1-86810-044-0		1404-	03	AB	
							(A)
		8-98039-708-0		1312-1403	03	A	
							(B)
		8-98039-708-0		1404-	03	AB	
							(B)
46		MOTOR ASM; FRT WINDSHIELD WIPER					
		8-98078-808-1		1312-1403	01	A	
		8-98078-808-1		1404-	01	AB	
47		ARM; CRANK,WIPER MOTOR					
		8-98078-805-0		1312-1403	01	A	
		8-98078-805-0		1404-	01	AB	
51		NUT; WIPER MOTOR LINK					
		1-83319-012-0		1312-1403	01	A	
		1-83319-012-0		1404-	01	AB	
72		BRACKET; WIPER MOTOR					
		8-98078-807-0		1312-1403	01	A	
		8-98078-807-0		1404-	01	AB	
74		WASHER; ARM TO MOTOR					
		1-83319-011-0		1312-1403	01	A	
		1-83319-011-0		1404-	01	AB	
76		SCREW; BRKT TO WIPER MOTOR					
		1-86810-062-0		1312-1403	03	A	
		1-86810-062-0		1404-	03	AB	
95		NUT; WASHER TANK					
		0-91180-106-0		1312-1403	04	A	
							M6 FLANGE
		0-91180-106-0		1404-	04	AB	
							M6 FLANGE
114		COVER; FRT WIPER ARM					
		1-83318-126-0		1312-1403	03	A	
		1-83318-126-0		1404-	03	AB	


https://truckmanualshub.com/


WINDSHIELD WIPER AND WASHER

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
198		COVER; PIVOT,WIPER					
		8-98038-892-0		1312-1403	03	A	
		8-98038-892-0		1404-	03	AB	
202		GROMMET; WIPER					
		1-86815-003-2		1312-1403	03	A	
		1-86815-003-2		1404-	03	AB	
203		NUT; WIPER MOTOR					
		0-91180-208-0		1312-1403	04	A	M8 FLANGE IDN
		0-91180-208-0		1404-	04	AB	M8 FLANGE IDN
228		HOSE ASM; WASHER					
		8-98039-703-1		1312-1403	01	A	
		8-98039-703-1		1404-	01	AB	
8-10		Move to 8-10					


https://truckmanualshub.com/

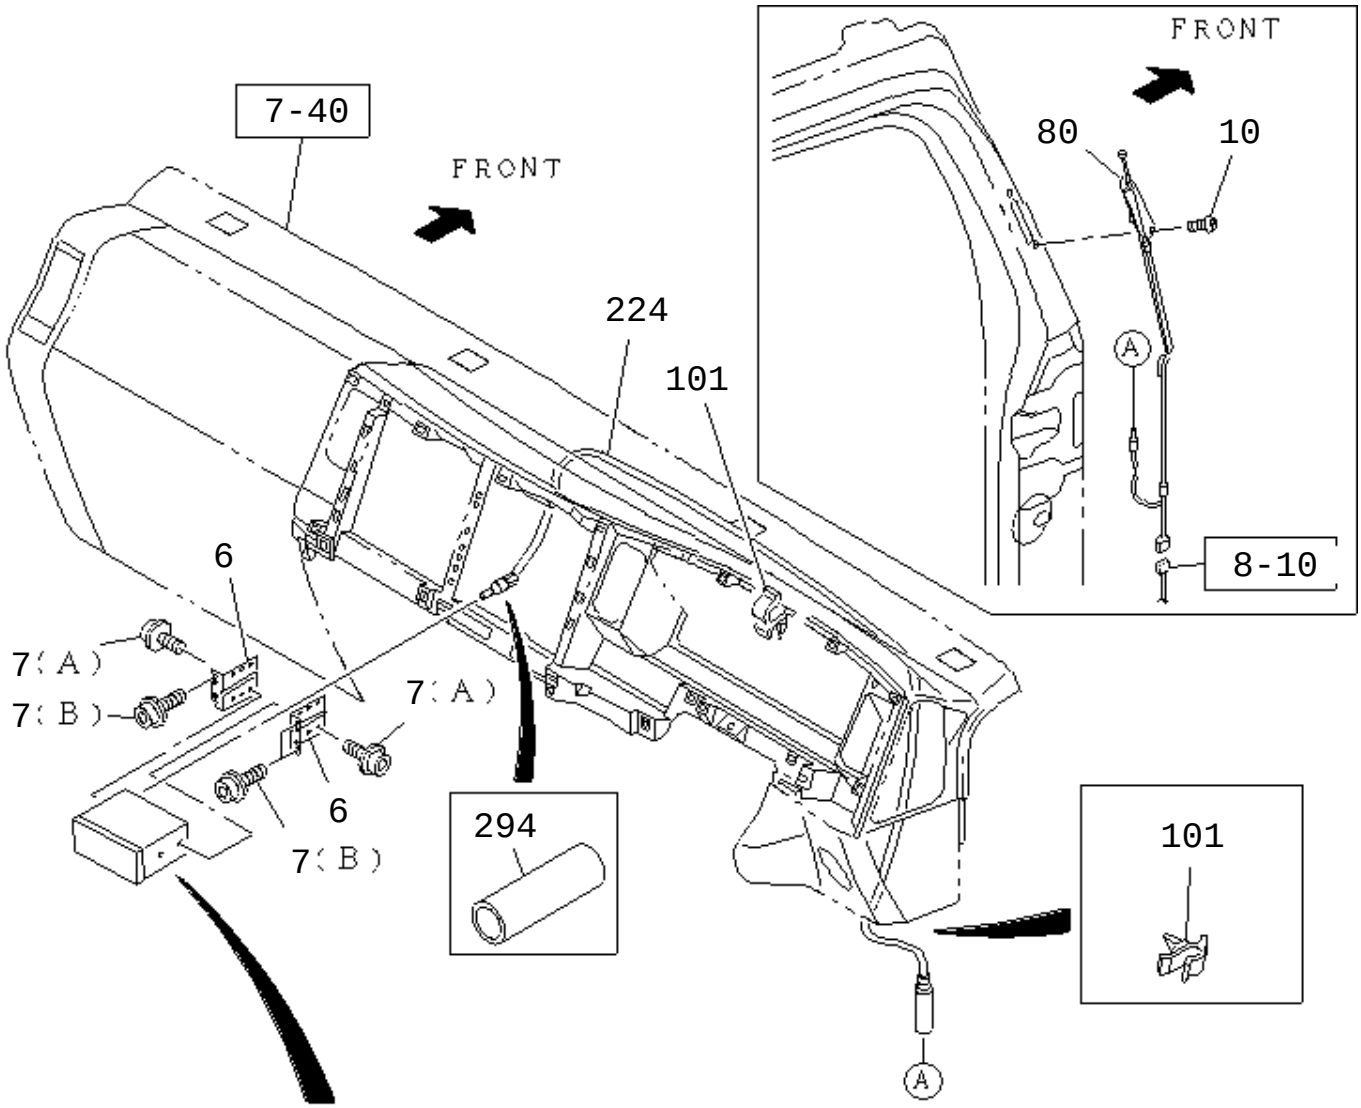

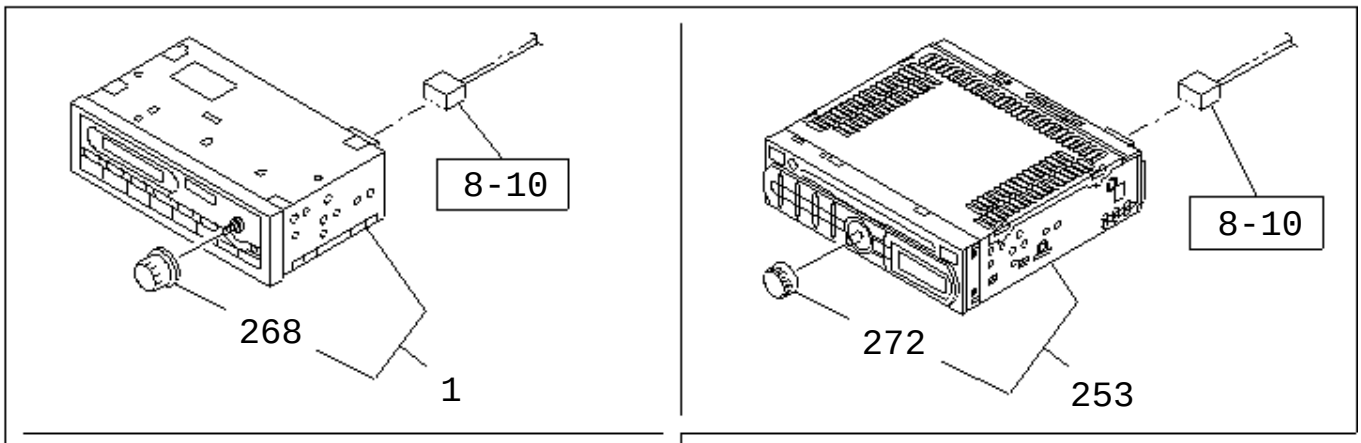

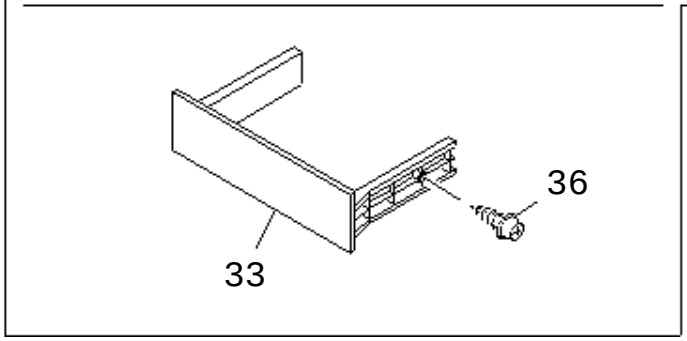

https://truckmanualshub.com/

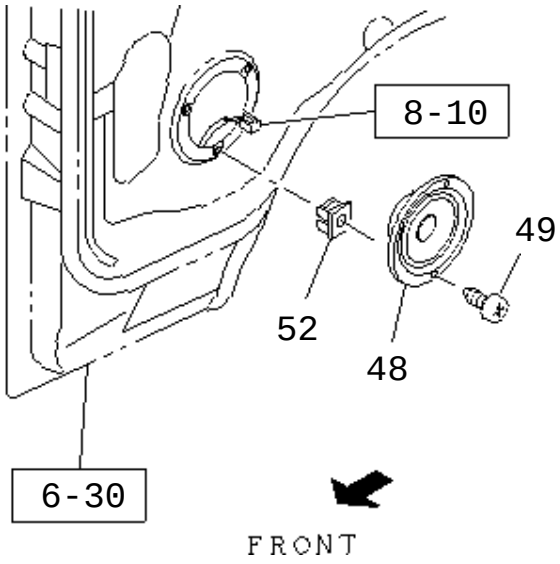

https://truckmanualshub.com/

KEY	R / C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		RADIO					
		8-98032-643-0		1312-1403	01	A	RADIO AM/FM<U69>
		8-98032-643-0		1404-	01	AB	RADIO AM/FM<U69>
6		BRACKET; RADIO TO PANEL					
		8-97585-617-0		1312-1403	02	A	IDN
		8-97585-617-0		1404-	02	AB	IDN
7		SCREW; RADIO					
		0-72180-520-0		1312-1403	02	A	(B) M5X20 HEXALOBULAR SOCKET
		0-72180-520-0		1404-	02	AB	(B) M5X20 HEXALOBULAR SOCKET
		8-98063-767-0		1312-1403	04	A	RADIO AM/FM STEREO CD<UT3>,RADIO AM/FM<U69> (A) M5X7 HEXALOBULAR SOCKET IDN
		8-98063-767-0		1404-	04	AB	RADIO AM/FM STEREO CD<UT3>,RADIO AM/FM<U69> (A) M5X7 HEXALOBULAR SOCKET IDN
10		SCREW; ANTENNA CABLE					
		1-09981-536-1		1312-1403	02	A	M5X11
		1-09981-536-1		1404-	02	AB	M5X11
33		COVER; RADIO					
		8-97407-896-1		1312-1403	01	A	EXC. RADIO AM/FM STEREO CD<UT3>,RADIO AM/FM<U BLACK
		8-97407-896-1		1404-	01	AB	EXC. RADIO AM/FM STEREO CD<UT3>,RADIO AM/FM<U BLACK
36		SCREW; COVER					
		8-98058-632-0		1312-1403	02	A	EXC. RADIO AM/FM STEREO CD<UT3>,RADIO AM/FM<U M5X10 TAPPING W/TORQUES
		8-98058-632-0		1404-	02	AB	EXC. RADIO AM/FM STEREO CD<UT3>,RADIO AM/FM<U M5X10 TAPPING W/TORQUES
48		SPEAKER; AUDIO					
		8-97317-001-1		1312-1403	02	A	2-SPEAKER SYSTEM BASE<U95> IDN
		8-97317-001-1		1404-	02	AB	2-SPEAKER SYSTEM BASE<U95> IDN
49		SCREW; SPEAKER					
		8-98061-856-0		1312-1403	06	A	2-SPEAKER SYSTEM BASE<U95> M5X14 TAPPING W/TORQUES
		8-98061-856-0		1404-	06	AB	2-SPEAKER SYSTEM BASE<U95> M5X14 TAPPING W/TORQUES
52		GROMMET; SCREW,SPEAKER					
		8-94279-078-0		1312-1403	06	A	2-SPEAKER SYSTEM BASE<U95> D=8.6X7.7 L=7.5 IDN
		8-94279-078-0		1404-	06	AB	2-SPEAKER SYSTEM BASE<U95> D=8.6X7.7 L=7.5 IDN
80		ANTENNA					
		8-98139-014-0		1312-1403	01	A	
		8-98139-014-0		1404-	01	AB	
101		CLIP; FEEDER TO BRKT					
		8-94128-483-0		1312-1403	03	A	ID=4.8
		8-94128-483-0		1404-	03	AB	ID=4.8
224		CABLE; EXT,FEEDER					
		8-98063-002-1		1312-1403	01	A	
		8-98063-002-1		1404-	01	AB	
253		DECK ASM; RADIO & CD					
		8-98017-752-0		1312-1403	01	A	RADIO AM/FM STEREO CD<UT3> IDN
		8-98017-752-0		1404-	01	AB	RADIO AM/FM STEREO CD<UT3> IDN
268		KNOB; VOL					
		8-97375-820-0		1312-1403	01	A	RADIO AM/FM<U69> CLARION


https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
268		8-97375-820-0		1404-	01	AB	RADIO AM/FM<U69> CLARION
272		KNOB; AUDIO CONTROL					
		8-98048-329-0		1312-1403	01	A	RADIO AM/FM STEREO CD<UT3> CLARION IDN
		8-98048-329-0		1404-	01	AB	RADIO AM/FM STEREO CD<UT3> CLARION IDN
294		CAP; ANTENNA CABLE					
		8-98095-617-1		1312-1403	01	A	EXC. RADIO AM/FM STEREO CD<UT3>,RADIO AM/FM<U IDN
		8-98095-617-1		1404-	01	AB	EXC. RADIO AM/FM STEREO CD<UT3>,RADIO AM/FM<U IDN
7-40		Move to 7-40					
8-10		Move to 8-10					
6-30		Move to 6-30					


https://truckmanualshub.com/

9-01 TOOLS


NO.1

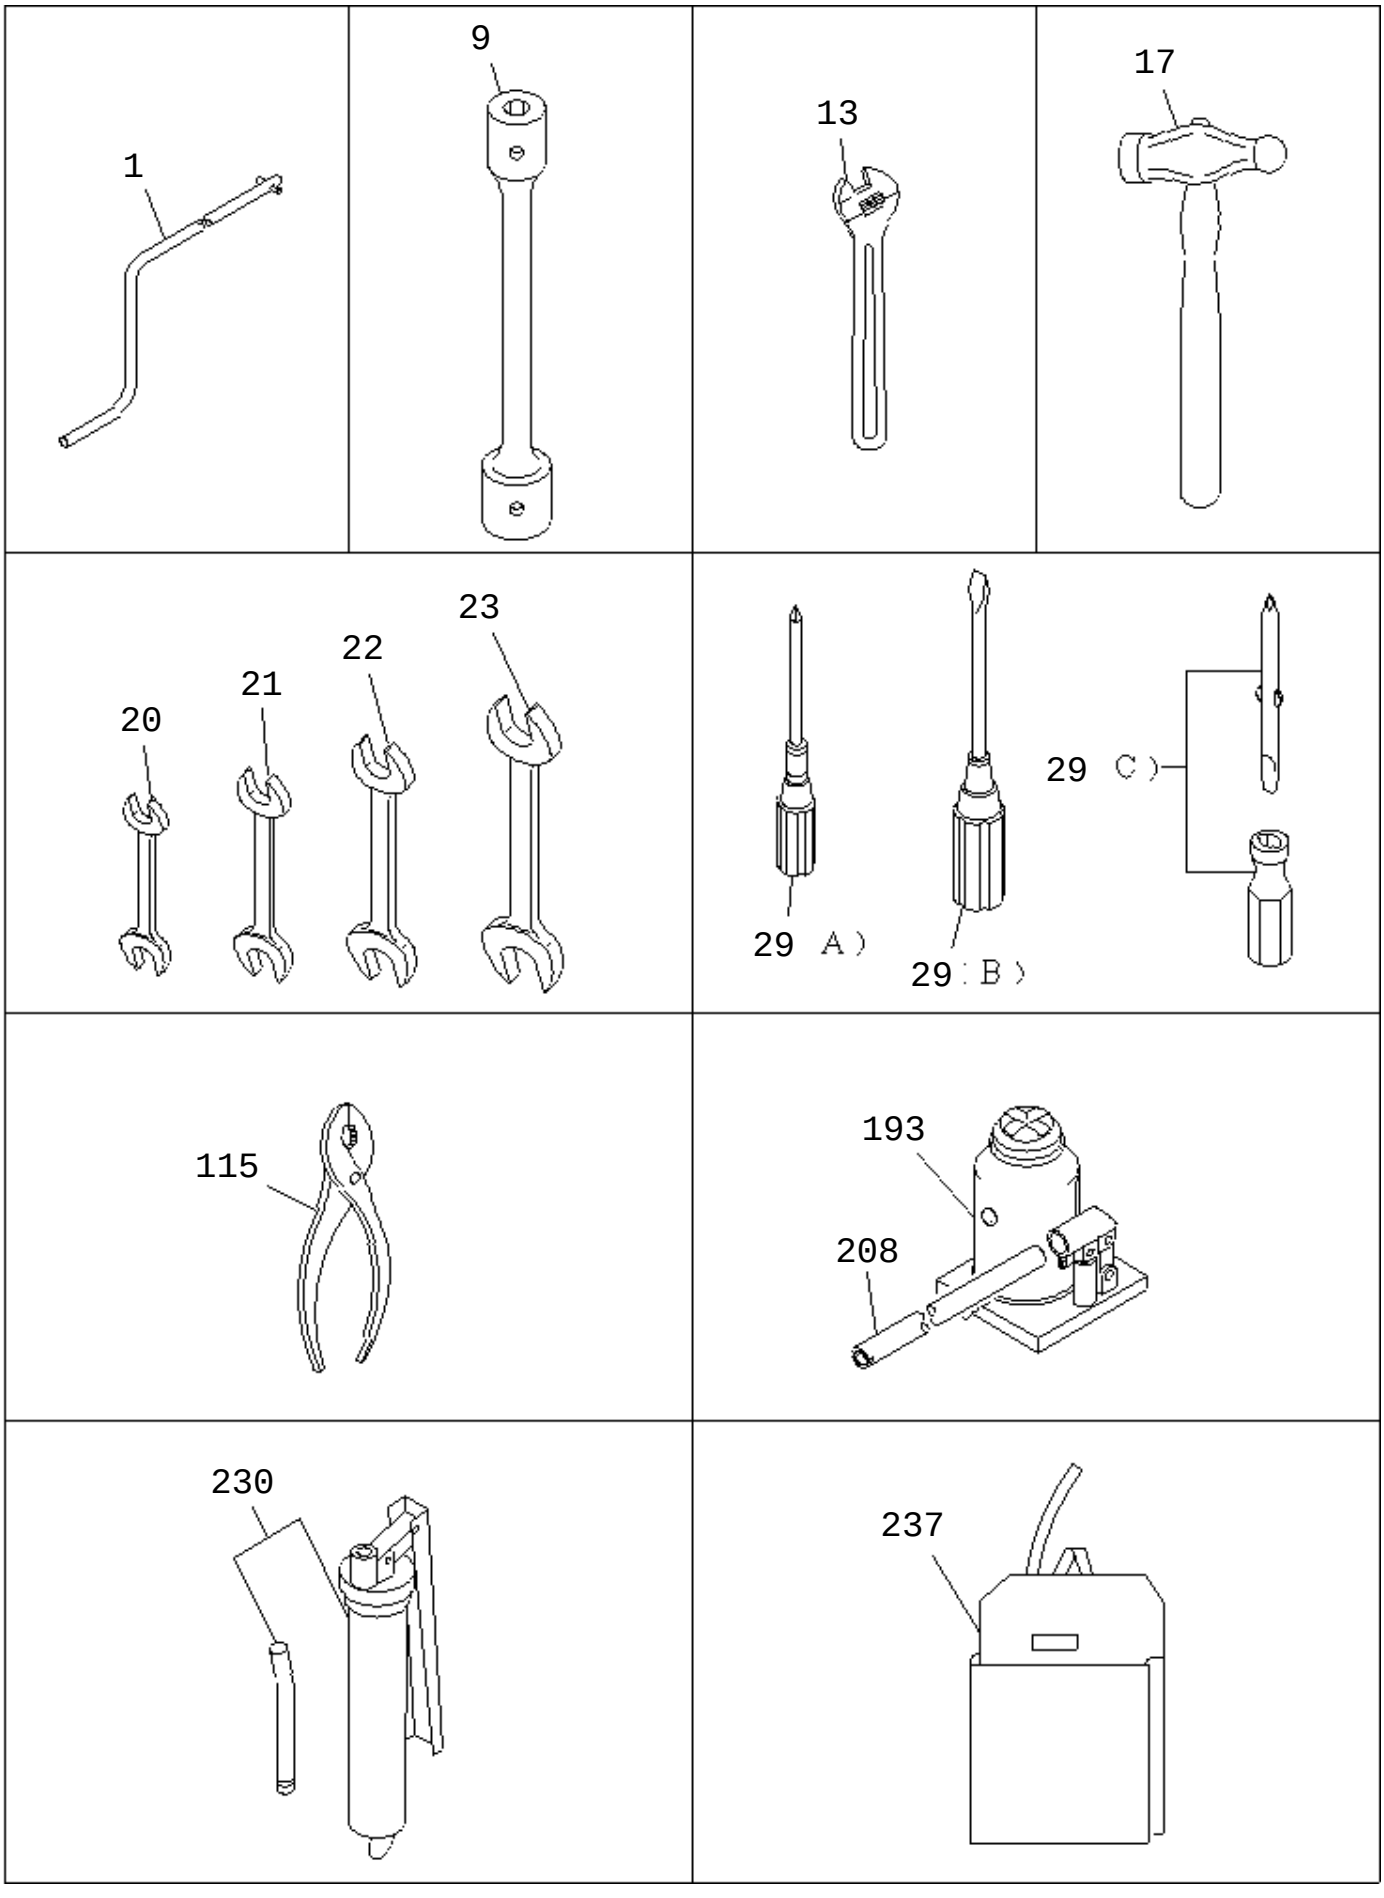


https://truckmanualshub.com/

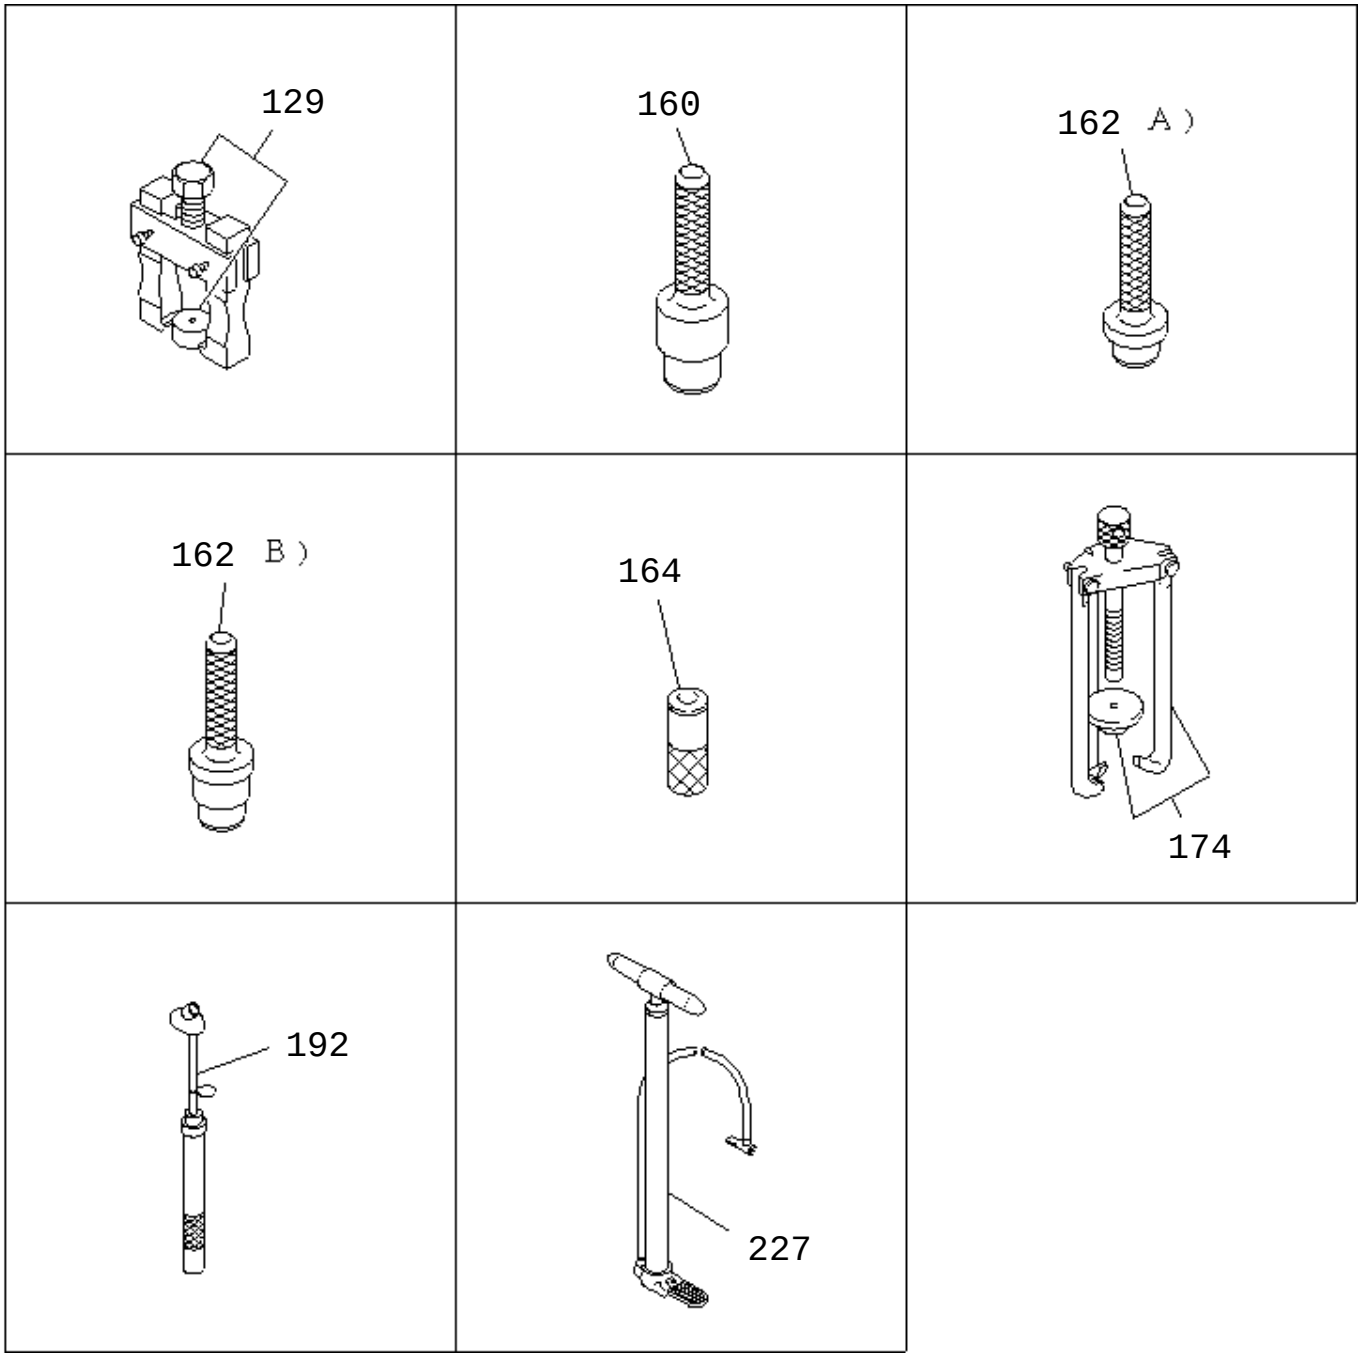

https://truckmanualshub.com/

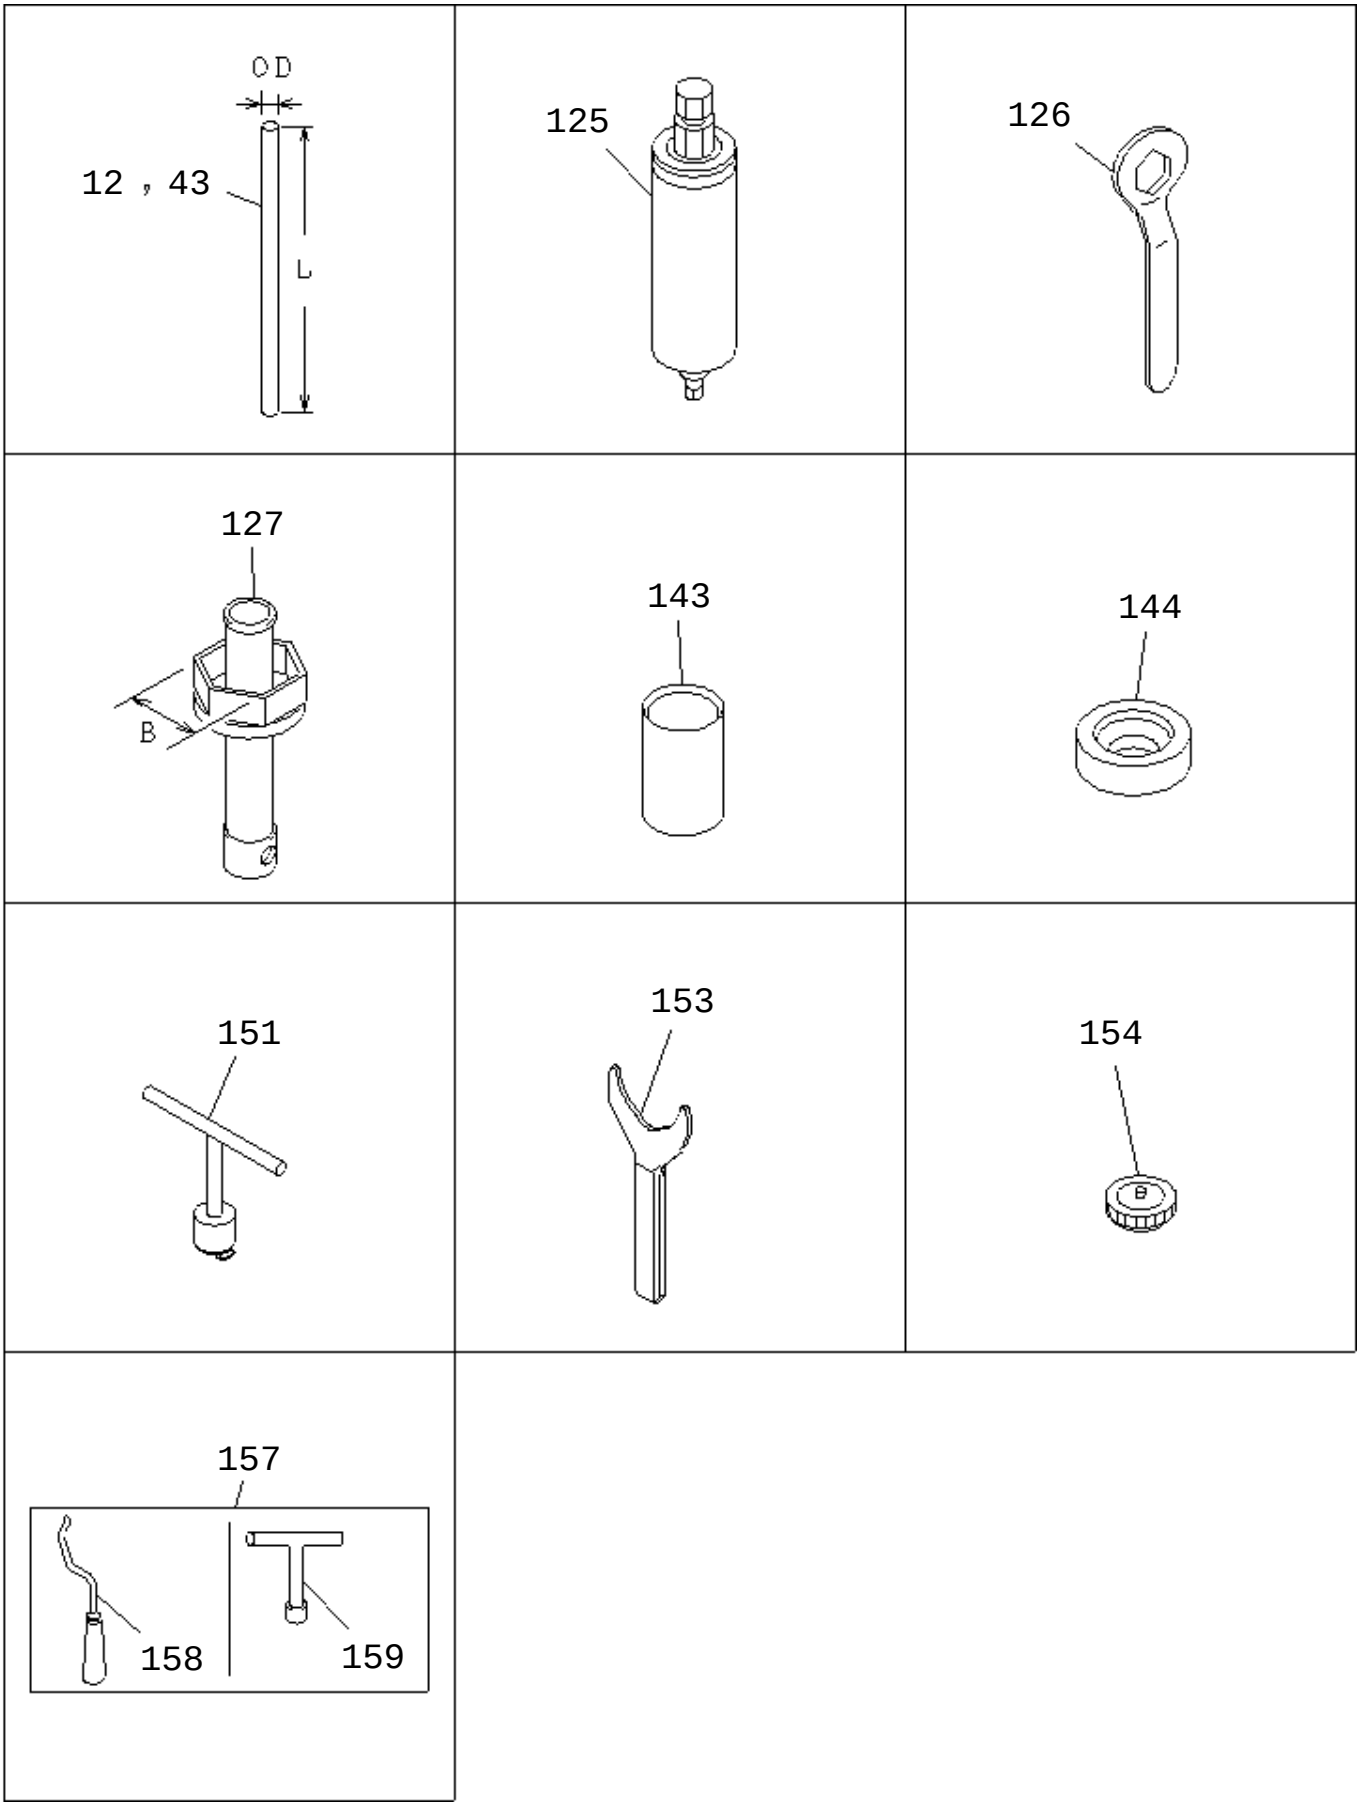

https://truckmanualshub.com/

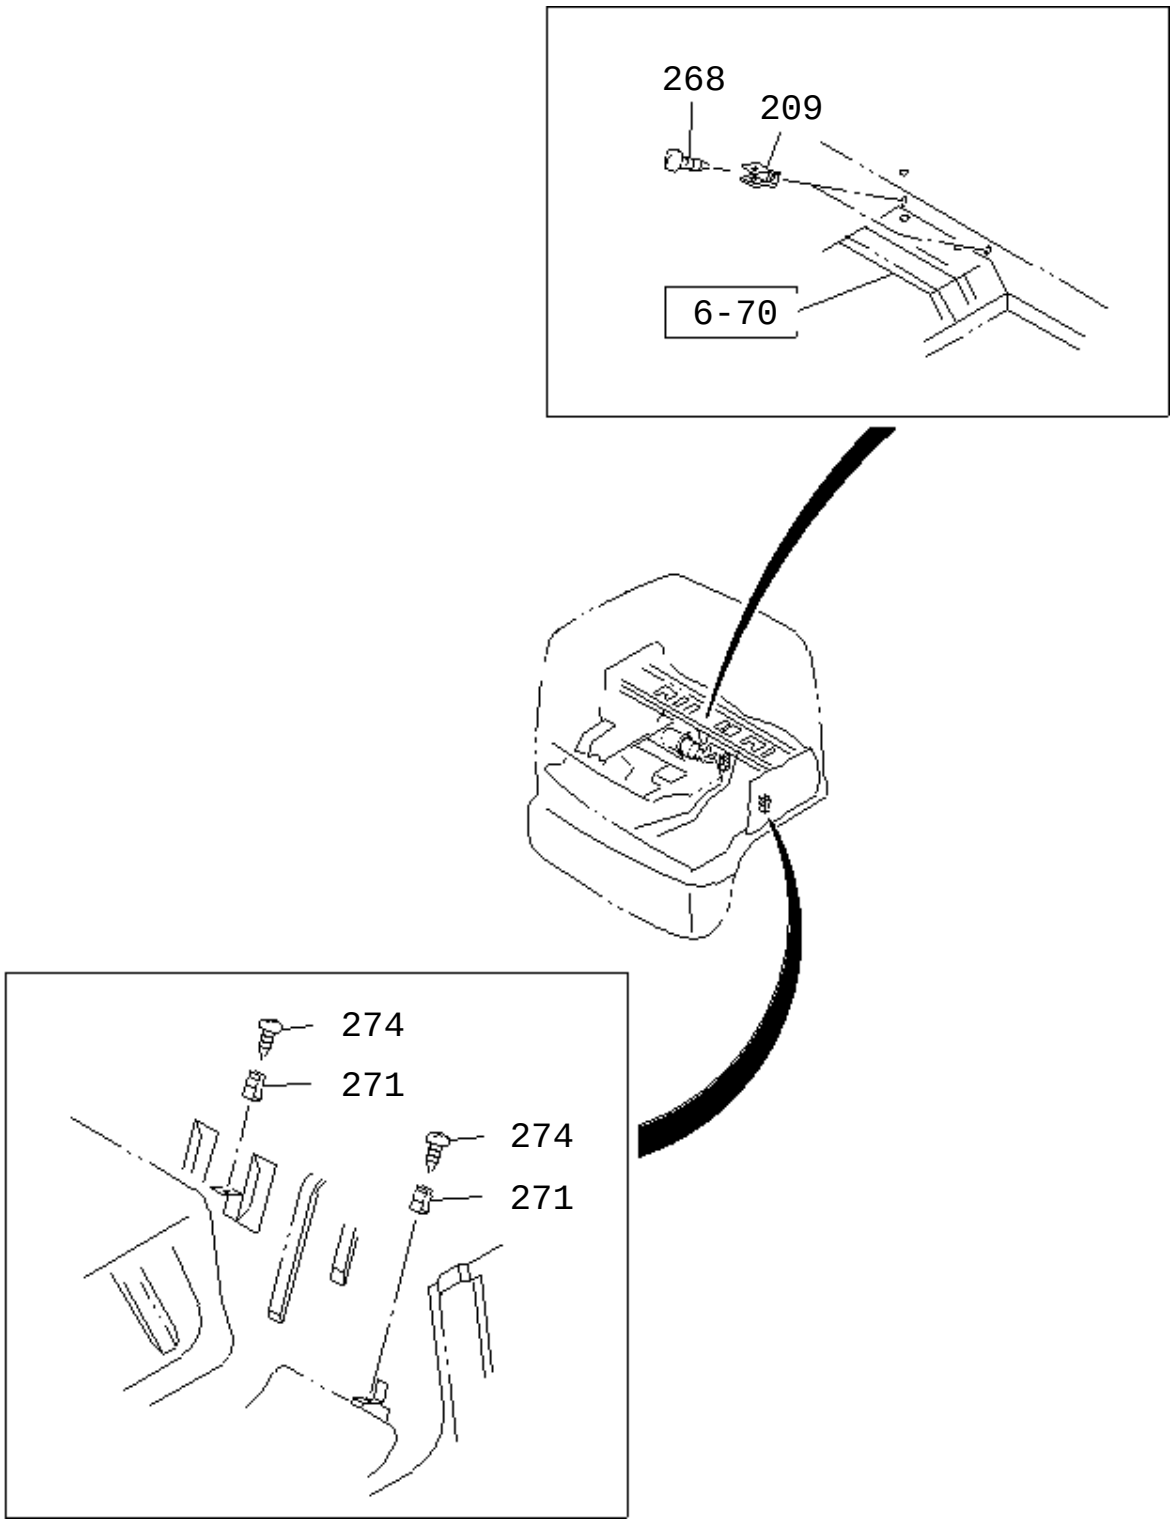

https://truckmanualshub.com/

9-01 TOOLS

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
1		HANDLE; SPARE TIRE CARRIER					
		9-23110-018-0		1312-1403	01	A	SPARE WHEEL CARRIER FRAME REAR(P10) IDN
		9-23110-018-0		1404-	01	A	SPARE WHEEL CARRIER FRAME REAR(P10) IDN
		9-23110-018-0		1404-	01	B	SPARE TIRE CARRIER LIFTING TYPE VAR1(IDN
9		WRENCH; WHEEL PIN					
		1-85113-015-1		1312-1403	01	A	B=41X21 L=440 IDN
		1-85113-015-1		1404-	01	AB	B=41X21 L=440 IDN
12		HANDLE; WRENCH,WHEEL PIN					
		1-85116-011-0		1312-1403	01	A	OD=25 L=480 IDN
		1-85116-011-0	A	1404-1409	01	AB	OD=25 L=480 IDN
		8-98257-407-0		1410-	01	AB	OD=25 L=480 IDN
13		WRENCH; MONKEY					
		1-85117-006-0		1312-1403	01	A	L=247 IDN
		1-85117-006-0		1404-1407	01	AB	L=247 IDN
		8-98270-303-0		1408-	01	AB	L=255 IDN
17		HAMMER					
		9-85121-406-0		1312-1403	01	A	IDN
		9-85121-406-0		1404-	01	AB	IDN
20		WRENCH; 10X12					
		0-95902-510-0		1312-1403	01	A	10X12 IDN
		0-95902-510-0		1404-	01	AB	10X12 IDN
21		WRENCH; 14X17					
		0-95902-514-0		1312-1403	01	A	14X17 IDN
		0-95902-514-0		1404-	01	AB	14X17 IDN
22		WRENCH; 19X22					
		0-95902-519-0		1312-1403	01	A	19X22 IDN
		0-95902-519-0		1404-	01	AB	19X22 IDN
23		WRENCH; 24X27					
		0-95902-524-0		1312-1403	01	A	24X27 IDN
		0-95902-524-0		1404-	01	AB	24X27 IDN
29		DRIVER; SCREW					
		8-94242-798-1		1312-1403	01	A	(C) <+>,<-> L=160 IDN

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
29		8-94242-798-1		1404-	01	AB	(C) <+>,<-> L=160 IDN
		8-98061-105-0		1312-1403	01	A	(B) <-> L=275 IDN
		8-98061-105-0		1404-	01	AB	(B) <-> L=275 IDN
		9-09595-522-0		1312-1403	01	A	(A) <+> L=190 IDN
		9-09595-522-0		1404-	01	AB	(A) <+> L=190 IDN
43		BAR; EXTENSION,SOCKET WRENCH					
		1-85116-011-0		1312-1403	01	A	OD=25 L=480 IDN
		1-85116-011-0	A	1404-1409	01	AB	OD=25 L=480 IDN
		8-98257-407-0		1410-	01	AB	OD=25 L=480 IDN
115		PLIER					
		5-85171-002-0		1312-1403	01	A	IDN
		5-85171-002-0		1404-	01	AB	IDN
125		PULLER ASM; KING PIN					
		1-85210-009-0		1312-1403	01	A	L=450
		1-85210-009-0		1404-	01	AB	L=450
126		WRENCH; FRT HUB BRG NUT					
		1-85110-002-1		1312-1403	01	A	L=350 B=75
		1-85110-002-1		1404-	01	AB	L=350 B=75
127		WRENCH ASM; HUB BRG NUT					
		8-98119-000-1		1312-	01	A	L=400 B=116
129		PULLER ASM; PITMAN ARM					
		1-85210-011-0		1312-1403	01	A	
		1-85210-011-0		1404-	01	AB	
143		GUIDE; BOOT,TIE ROD END					
		1-85229-013-0		1312-1403	01	A	
		1-85229-013-0		1404-	01	AB	
144		BASE; BOOT GUIDE,TIE ROD END					
		1-85229-009-0		1312-1403	01	A	
		1-85229-009-0		1404-	01	AB	
151		REMOVER; OIL BRK,FRT RETURN SPR					
		1-85237-002-0		1312-1403	01	A	ID=16
		1-85237-002-0		1404-	01	AB	ID=16
153		DRIVER; WASHER,THRUST WASHER					
		1-85238-002-0		1312-1403	01	A	
		1-85238-002-0		1404-	01	AB	
154		SLEEPER; KING PIN					
		1-85238-003-0		1312-1403	01	A	
		1-85238-003-0		1404-	01	AB	
157		REPLACER KIT; RETURN SPR					
		9-85231-554-0		1312-1403	01	A	
		9-85231-554-0		1404-	01	AB	
158		SETTING TOOL; RETURN SPR					
		9-85221-231-0		1312-1403	01	A	
		9-85221-231-0		1404-	01	AB	

https://truckmanualshub.com/

KEY	R/C	PART NAME PART NUMBER	ITC	APPLIED DATE	Qty	APPLIED MODEL	RESTRICTION/REMARKS A FVZ WIDE CAB(FGZ5MV) B GVZ WIDE CAB(GGZ5MV)
159		REMOVER; RETURN SPR					
		9-85231-555-0		1312-1403	01	A	ID=12.5
		9-85231-555-0		1404-	01	AB	ID=12.5
160		REMOVER; NEEDLE BRG					
		1-85238-001-0		1312-1403	01	A	L=220
		1-85238-001-0		1404-	01	AB	L=220
162		SETTING TOOL; NEEDLE BRG					
		1-85238-008-0		1312-1403	01	A	(A) L=181
		1-85238-008-0		1404-	01	AB	(A) L=181
		1-85238-009-0		1312-1403	01	A	(B) L=213
		1-85238-009-0		1404-	01	AB	(B) L=213
164		GUIDE; SNAP RING PILOT BRG					
		1-85176-001-0		1312-1403	01	A	
		1-85176-001-0		1404-	01	AB	
174		PULLER ASM; MAIN CLU SHAFT					
		9-85210-148-0		1312-1403	01	A	
		9-85210-148-0		1404-	01	AB	
192		GAUGE; TIRE PRESSURE					
		1-85315-002-0		1312-1403	01	A	
		1-85315-002-0		1404-	01	AB	
193		JACK ASM					
		1-85510-019-2		1312-1403	01	A	15TON
		1-85510-019-2		1404-	01	AB	15TON
208		HANDLE; JACK					
		8-98181-437-0		1312-1403	01	A	L=600 IDN
		8-98181-437-0		1404-	01	AB	L=600 IDN
209		CLIP; JACK HANDLE					
		8-98053-799-0		1312-1403	02	A	
		8-98053-799-0		1404-	02	AB	
227		PUMP ASM; TIRE					
		9-85521-132-0		1312-1403	01	A	
		9-85521-132-0		1404-	01	AB	
230		PUMP; GREASE					
		1-85556-007-5		1312-1403	01	A	IDN
		1-85556-007-5		1404-	01	AB	IDN
237		BAG; TOOL					
		8-97130-902-1		1312-1403	01	A	IDN
		8-97130-902-1		1404-	01	AB	IDN
268		SCREW; CLIP					
		0-38050-612-0		1312-1403	02	A	M6X12 HEXALOBULAR SOCKET
		0-38050-612-0		1404-	02	AB	M6X12 HEXALOBULAR SOCKET
271		CLIP; TIRE HANGER					
		8-98053-800-0		1312-1403	02	A	
		8-98053-800-0		1404-	02	AB	
274		SCREW; CLIP					
		0-38050-612-0		1312-1403	02	A	M6X12 HEXALOBULAR SOCKET
		0-38050-612-0		1404-	02	AB	M6X12 HEXALOBULAR SOCKET
6-70		Move to 6-70					