https://truckmanualshub.com/

MASTER MANUAL

Machine X-Ergo

Master Manual 119003

TABLE OF CONTENTS

Chapter 6

Mast/Stödben X/XML-Ergo 160 T Mast/Straddle legs X/XML-Ergo 160 T Mast/radarme X/XML-Ergo 160 T Mât/longerons X/XML-Ergo 160 T	6.1
Mast/Stödben X-Ergo 160 TV Mast/Straddle legs X-Ergo 160 TV Mast/radarme X-Ergo 160 TV Mât/longerons X-Ergo 160 TV	6.2
Mast/Stödben X-Ergo 160 TFV Mast/Straddle legs X-Ergo 160 TFV Mast/radarme X-Ergo 160 TFV Mât/longerons X-Ergo 160 TFV	6.3
Mast/Stödben X-Ergo 160 DTFV Mast/Straddle legs X-Ergo 160 DTFV Mast/radarme X-Ergo 160 DTFV Mât/longerons X-Ergo 160 DTFV	6.4
Mast/Stödben X-Ergo 200 TFV Mast/Straddle legs X-Ergo 200 TFV Mast/radarme X-Ergo 200 TFV Mât/longerons X-Ergo 200 TFV	6.5
Mast/Stödben X-Ergo 200 DTFV Mast/Straddle legs X-Ergo 200 DTFV Mast/radarme X-Ergo 200 DTFV Mât/longerons X-Ergo 200 DTFV	6.6
Mast/Stödben XTF-Ergo 100 TFV Mast/Straddle legs XTF-Ergo 100 TFV Mast/radarme XTF-Ergo 100 TFV Mât/longerons XTF-Ergo 100 TFV	6.7

Mast/Stödben XTF-Ergo 100 DTFV Mast/Straddle legs XTF-Ergo 100 DTFV Mast/radarme XTF-Ergo 100 DTFV Mât/longerons XTF-Ergo 100 DTFV	6.8
Mast/Höjbara stödben X-Ergo 160 STH/STVH/STFVH/SDTFVH Mast/Adjustable straddle legs X-Ergo 160 STH/STVH/STFVH/SDTFVH Mast/radarme X-Ergo 160 STH/STVH/STFVH/SDTFVH Mât/longerons X-Ergo 160 STH/STVH/STFVH/SDTFVH	6.9
Stabilisatorer X-Ergo Stabilizors X-Ergo Stabilisatoren X-Ergo Stabilisateurs X-Ergo	6.10
Gaffelvagn X-Ergo 160 TV Fork carriage X-Ergo 160 TV Gabelschlitten X-Ergo 160 TV Chariot de levage X-Ergo 160 TV	6.11
Gaffelvagn X/XML-Ergo 160 ST/STFV/SDTFV Fork carriage X-Ergo 160 ST/STFV/SDTFV Gabelschlitten X-Ergo 160 ST/STFV/SDTFV Chariot de levage X-Ergo 160 ST/STFV/SDTFV	6.12
Gaffelvagn X-Ergo 160 BT/BTFV/BDTFV Fork carriage X-Ergo 160 BT/BTFV/BDTFV Gabelschlitten X-Ergo 160 BT/BTFV/BDTFV Chariot de levage X-Ergo 160 BT/BTFV/BDTFV	6.13
Gaffelvagn X-Ergo 200 STFV Fork carriage X-Ergo 200 STFV Gabelschlitten X-Ergo 200 STFV Chariot de levage X-Ergo 200 STFV	6.14
Gaffelvagn X-Ergo 200 BTFV Fork carriage X-Ergo 200 BTFV Gabelschlitten X-Ergo 200 BTFV Chariot de levage X-Ergo 200 BTFV	6.15
Gaffelvagn X-Ergo 200 SDTFV Fork carriage X-Ergo 200 SDTFV Gabelschlitten X-Ergo 200 SDTFV Chariot de levage X-Ergo 200 SDTFV	6.16
Gaffelvagn X-Ergo 200 BDTFV Fork carriage X-Ergo 200 BDTFV Gabelschlitten X-Ergo 200 BDTFV Chariot de levage X-Ergo 200 BDTFV	6.17
Gaffelvagn XLL-Ergo Fork carriage XLL-Ergo Gabelschlitten XLL-Ergo Chariot de levage XLL-Ergo	6.18

Gaffelvagn XTF-Ergo 100 TFV/DTFV Fork carriage XTF-Ergo 100 TFV/DTFV Gabelschlitten XTF-Ergo 100 TFV/DTFV Chariot de levage XTF-Ergo 100 TFV/DTFV	6.19
Gaffelvagn, rygg XTF-Ergo 100 TFV/DTFV Fork carriage, back XTF-Ergo 100 TFV/DTFV Gabelschlitten, rücken XTF-Ergo 100 TFV/DTFV Chariot de levage, dos XTF-Ergo 100 TFV/DTFV	6.20
Lastskydd/Gaffelförlängning X/XTF/XML-Ergo Load guard/Fork extension X/XTF/XML-Ergo Lastschutz/Gabelverlängung X/XTF/XML-Ergo Prot. de charge/Ext. des fourches X/XTF/XML-Ergo	6.21

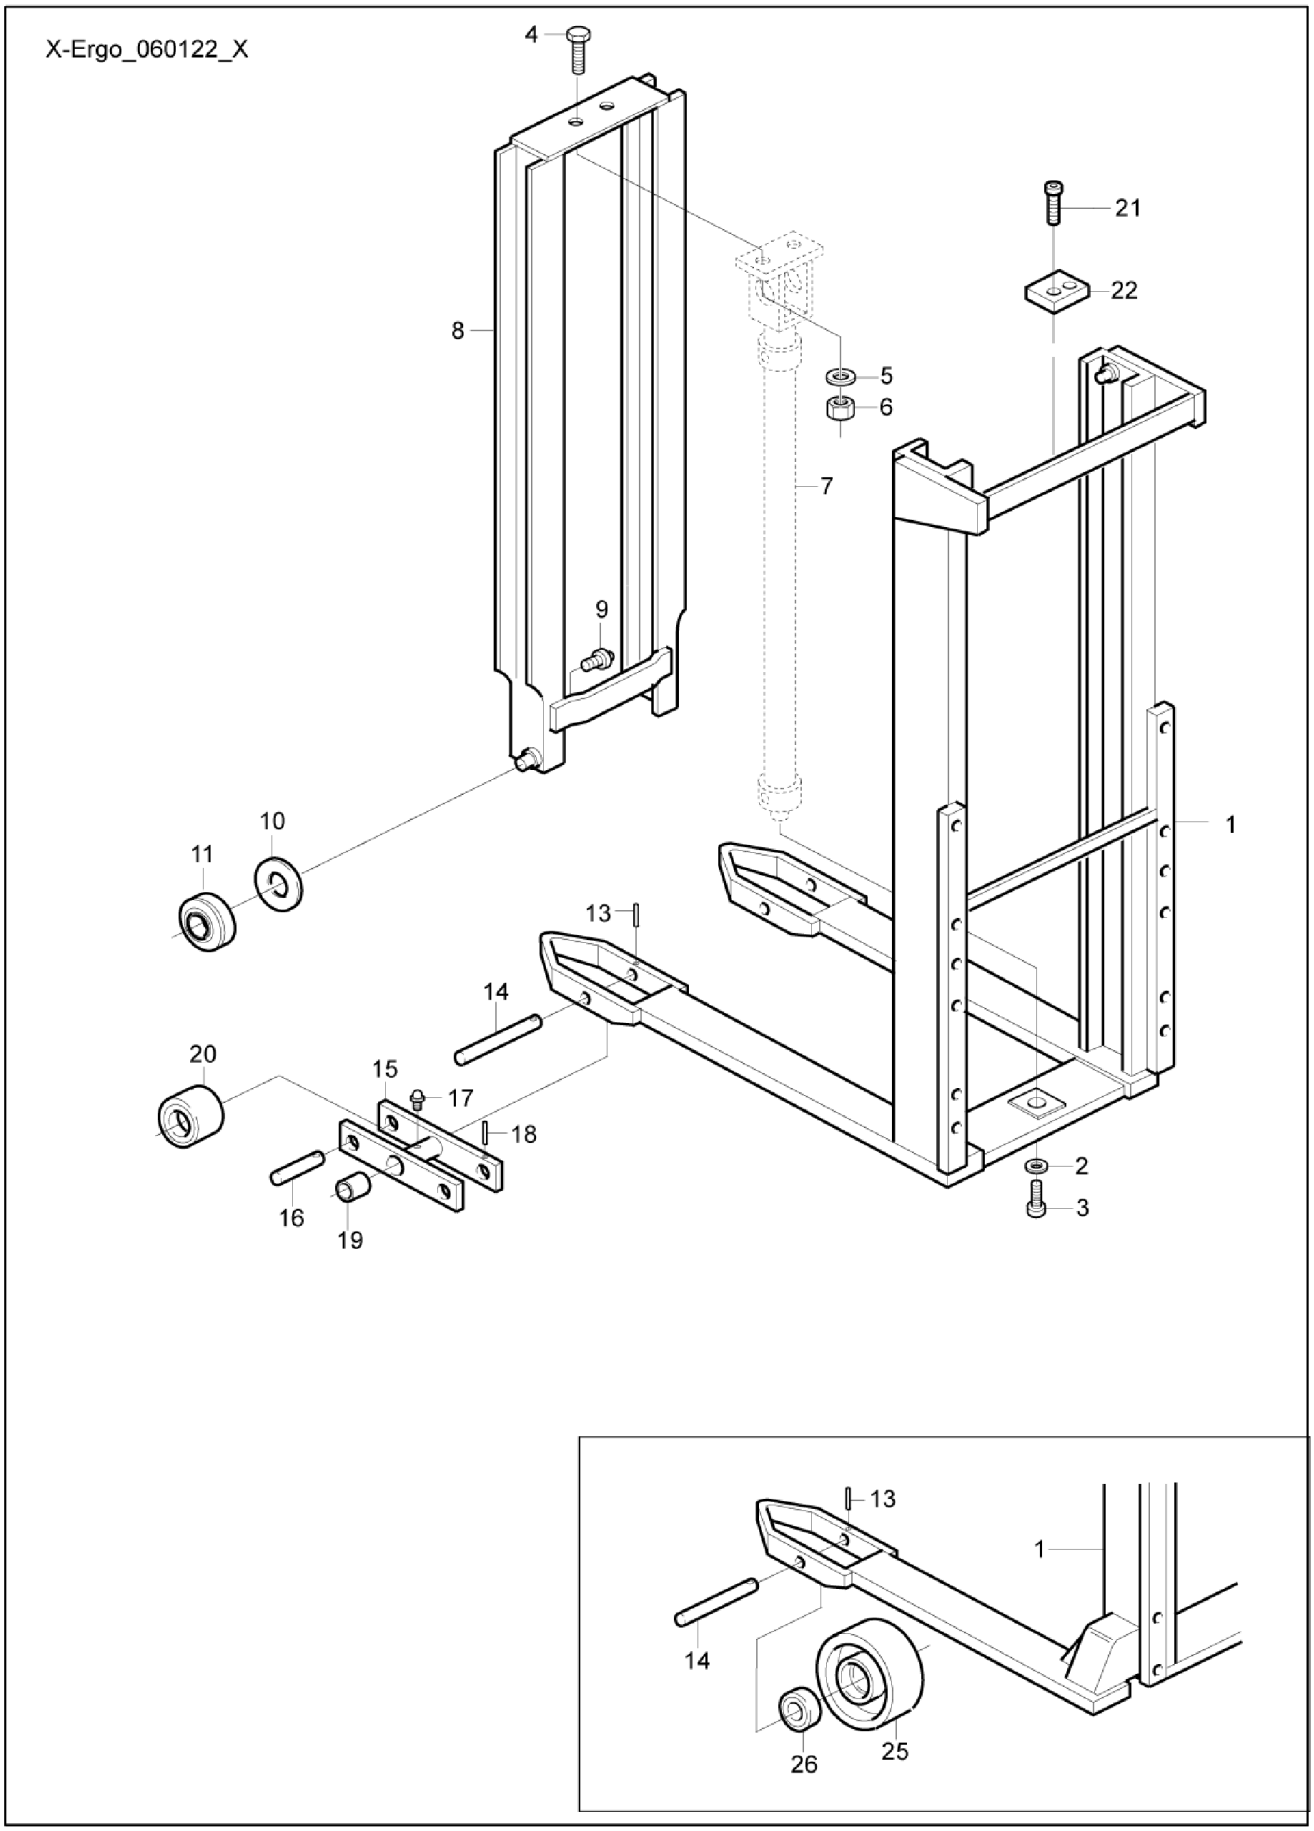
X-Ergo_060122_X
4
21
22
8
5
6
7
9
1
10
11
13
14
20
15
17
18
2
3
16
19
13
1
14
26
25

Mast/Stödben X/XML-Ergo 160 T - Mast/Straddle legs X/XML-Ergo 160 T
Mast/radarme X/XML-Ergo 160 T - Mât/longerons X/XML-Ergo 160 T

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Yttermast + stödben *160 ST*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105121
	Yttermast + stödben *160 BT*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105533
	Yttermast + stödben *XML*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105542
2	Bricka	Washer	Scheibe	Rondelle	1	056236
3	Skruv MC6S 8x12	Screw MC6S 8x12	Schraube	Vis	1	010625
4	Skruv	Screw	Schraube	Vis	2	010299
5	Bricka BRB 12x22	Flat washer	Scheibe	Rondelle	2	012381
6	Mutter	Nut	Mutter	Ecrou	2	012125
7	*See section 9*				1	
8	Innermast *When order please state liftheight*	Inner mast	Innenmast	Mât intérieur	1	105346
	Innermast *XML*	Inner mast	Innenmast	Mât intérieur	1	106204
9	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	008953
10	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	8	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	4	105280
11	Lastrulle Ø78.2	Load roller	Lastrolle	Poulie de charge	8	105036
	Lastrulle Ø78.6	Load roller	Lastrolle	Poulie de charge	4	105037
	Lastrulle Ø79.0	Load roller	Lastrolle	Poulie de charge	4	106086
13	Spännstift FRP 6x50	Roll pin	Spannstift	Goupille	2	012945
14	Axel	Axle	Achse	Axe	2	055343
15	Boggiehjul, kompl. *Including 15-20*	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	075145
	Boggiegaffel	Bogie frame	Boggierahmen	Cadre de bogie	2	075146
16	Axel	Axle	Achse	Axe	4	075839
17	Smörjnippel	Lubricator	Schmiernippel	Graisseur	2	008953
18	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	4	012923
19	Glidlager	Slide bearing	Gleitlager	Coussinet lisse	4	008516
20	Hjul	Wheel	Rad	Roue	4	060734
21	Skruv MC6S 8x35	Screw MC6S 8x35	Schraube	Vis	2	010641
22	Dämpare	Damper	Dämpfer	Modérateur	1	060215
25	Lasthjul *Including 26*	Rail wheel	Lastrad	Roue portante	2	056821
26	Kullager	Roller bearing	Kugellager	Roulement à billes	4	008034

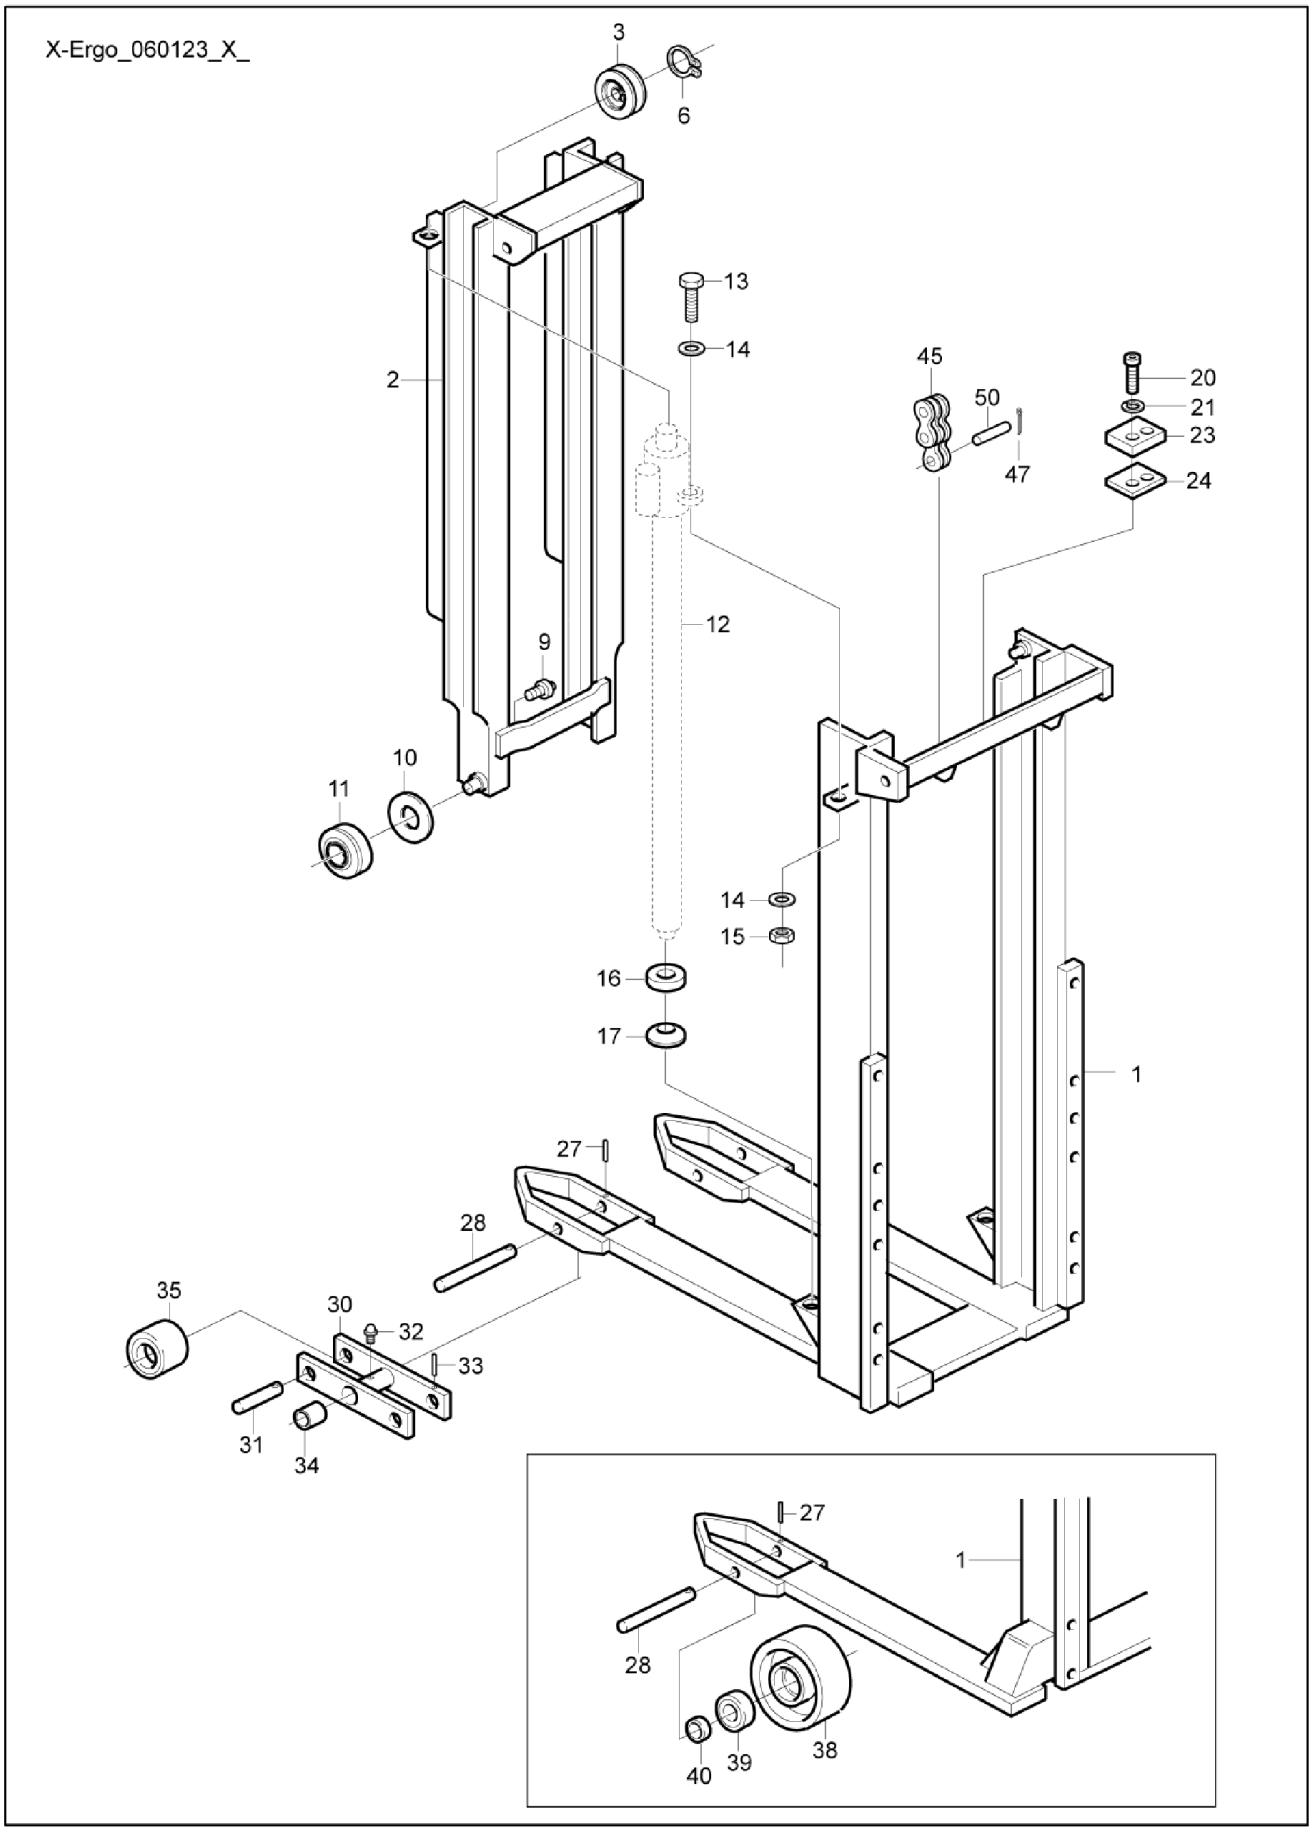
X-Ergo_060123_X_
3
6
13
14
2
45
50
47
20
21
23
24
12
9
10
11
14
15
16
17
1
27
28
35
30
32
33
31
34
27
1
28
38
39
40

Mast/Stödben X-Ergo 160 TV - Mast/Straddle legs X-Ergo 160 TV
Mast/radarme X-Ergo 160 TV - Mât/longerons X-Ergo 160 TV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Yttermast + stödben *160 STV*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105141
	Yttermast + stödben *160 BTV*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105494
2	Innermast *When order please state liftheight*	Inner mast	Innenmast	Mât intérieur	1	105514
3	Brytrulle, kpl.	Chain pulley, assy.	Umlenkrolle, kpl.	Poulie de renvoi, cmpl.	2	105193
6	Spårring SGA 30	Circlip SGA 30	Nutring	Circlip	4	012652
9	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	008953
10	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	8	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	4	105280
11	Lastrulle Ø78.2	Load roller	Lastrolle	Poulie de charge	4	105036
	Lastrulle Ø78.6	Load roller	Lastrolle	Poulie de charge	4	105037
12	*See section 9*				1	
13	Skruv MC6S M12x70	Screw MC6S M12x70	Schraube	Vis	2	010777
14	Fjäderbricka	Spring washer	Federring	Rondelle grower	4	012283
15	Låsmutter M6M12	Locking nut	Mutter	Ecrou de blocage	2	012167
16	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001452
17	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001453
20	Skruv MC6S 8x35	Screw MC6S 8x35	Schraube	Vis	2	010641
21	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012275
23	Dämpare	Damper	Dampfer	Modérateur	1	060197
24	Shim	Shim	Einstellscheibe	Cale de réglage	3	060198
27	Spännstift FRP 6x50	Roll pin	Spannstift	Goupille	2	012945
28	Axel	Axle	Achse	Axe	2	055343
30	Boggiehjul, kompl. *Including pos. 30-35*	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	075145
	Boggiegaffel	Bogie frame	Boggierahmen	Cadre de bogie	2	075146
31	Axel	Axle	Achse	Axe	4	075839
32	Smörjnippel	Lubricator	Schmiernippel	Graisseur	2	008953
33	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	4	012923
34	Glidlager	Slide bearing	Gleitlager	Coussinet lisse	4	008516
35	Hjul	Wheel	Rad	Roue	4	060734
38	Hjul, kompl.	Wheel, assy.	Rad, kompl.	Roue, compl.	4	060477
	Hjul	Wheel	Rad	Roue	2	075133
39	Kullager	Roller bearing	Kugellager	Roulement à billes	4	008010
40	Distanselement	Spacer	Distanzring	Douille d'écartement	4	053958
45	Lyftkedja	Lift chain	Hubkette	Chaîne de levage	2	105215
	Lyftkedja, kpl *Including pos. 47, 50*	Lift chain, assy	Hubkette, kpl	Chaîne de levage, cpl	2	105517
47	Saxpinne	Split pin	Splint	Goupille fendue	4	013103
50	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tète	2	066077

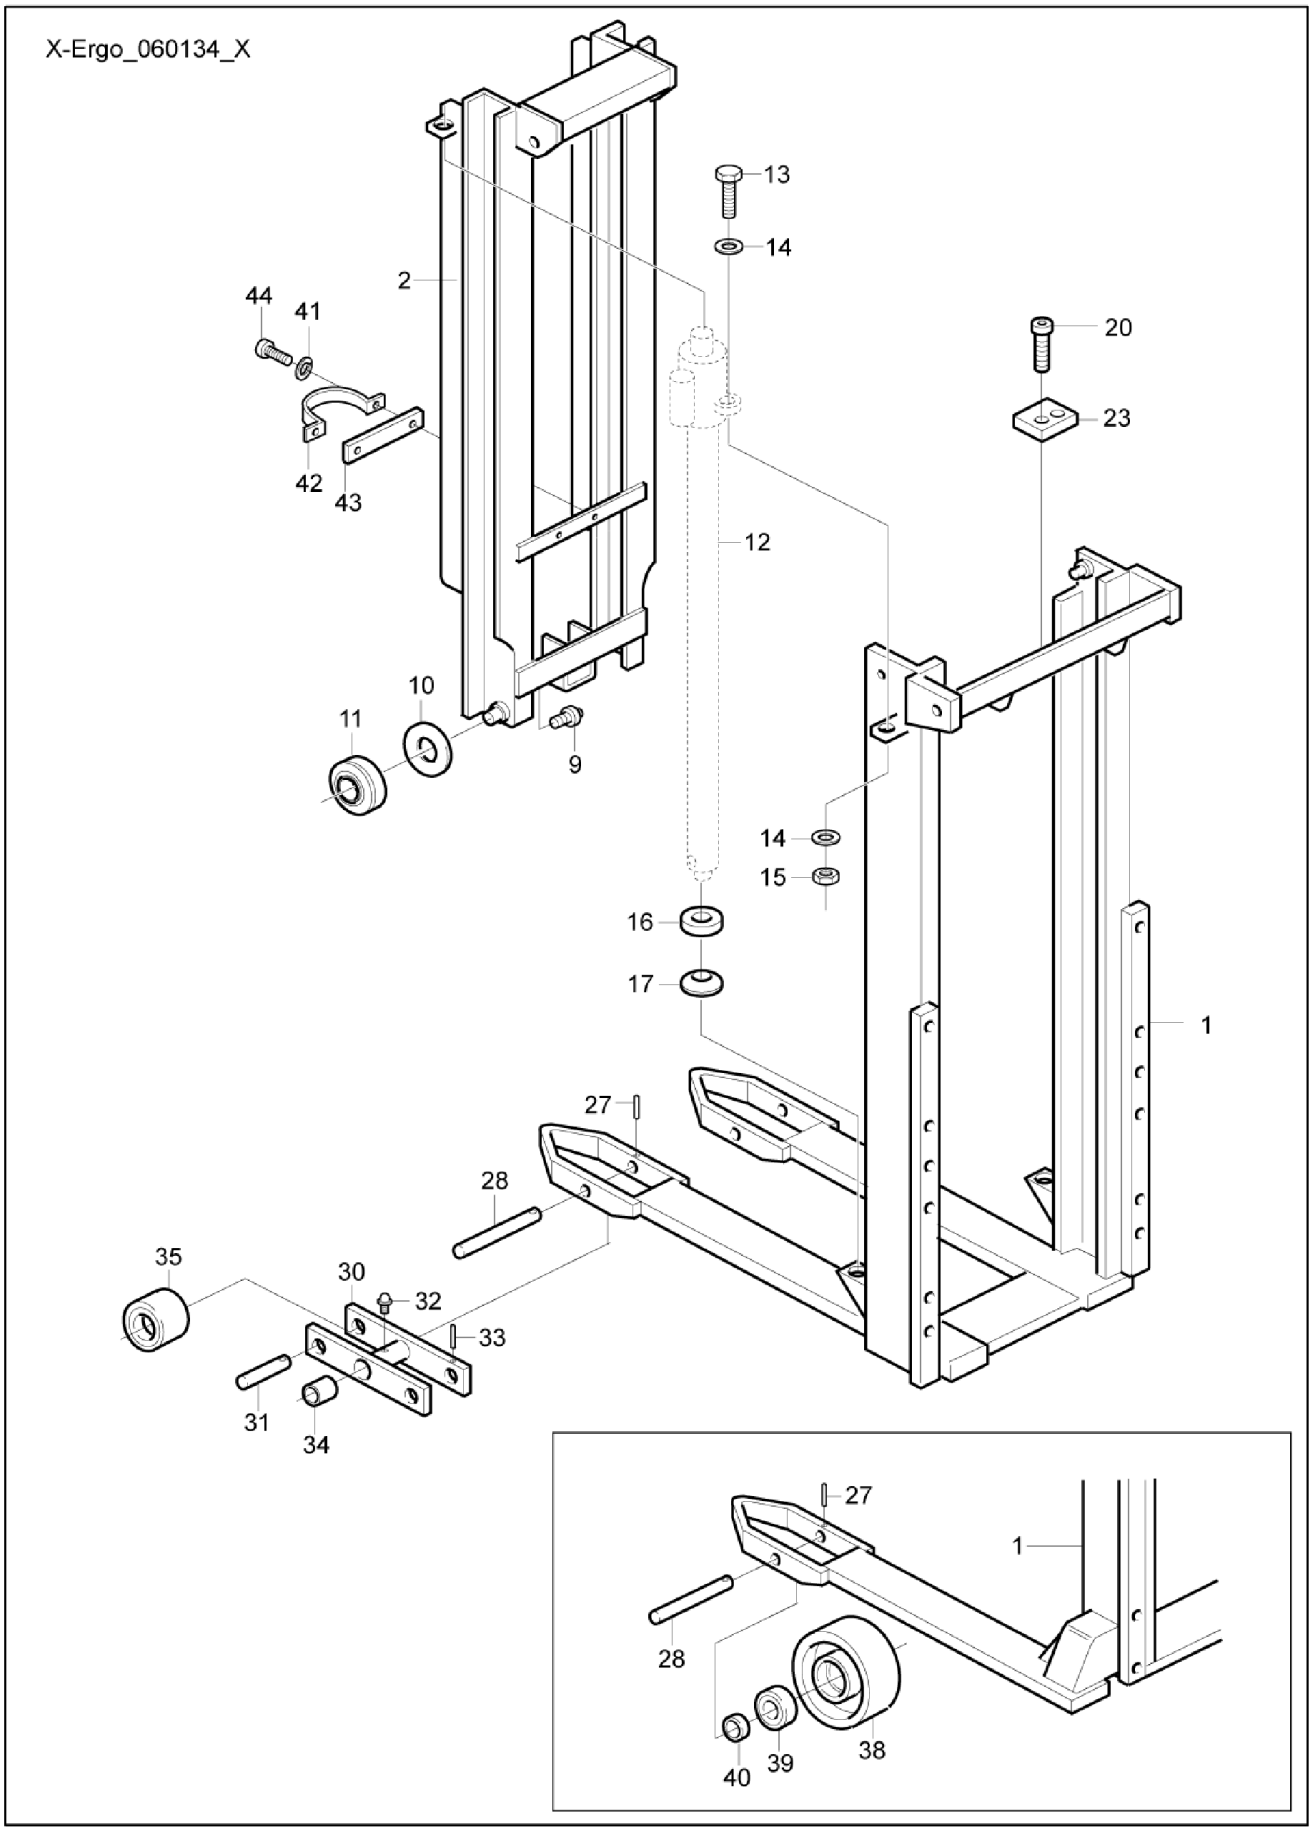
X-Ergo_060134_X
13
14
2
44
41
20
23
42
43
12
10
11
9
14
15
16
17
1
27
28
35
30
32
33
31
34
27
1
28
38
39
40

Mast/Stödben X-Ergo 160 TFV - Mast/Straddle legs X-Ergo 160 TFV
Mast/radarme X-Ergo 160 TFV - Mât/longerons X-Ergo 160 TFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Yttermast + stödben *160 STFV*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105141
	Yttermast + stödben *160 BTFV*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105494
2	Innermast	Inner mast	Innenmast	Mât intérieur	1	105224
9	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	008953
10	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	8	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	4	105280
11	Lastrulle Ø78.2	Load roller	Lastrolle	Poulie de charge	4	105036
	Lastrulle Ø78.6	Load roller	Lastrolle	Poulie de charge	4	105037
	Lastrulle Ø79.0	Load roller	Lastrolle	Poulie de charge	4	106086
12	*See section 9*				1	
13	Skruv MC6S M12x70	Screw MC6S M12x70	Schraube	Vis	2	010777
14	Fjäderbricka	Spring washer	Federring	Rondelle grower	4	012283
15	Låsmutter M6M12	Locking nut	Mutter	Ecrou de blocage	2	012167
16	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001452
17	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001453
20	Skruv MC6S 8x35	Screw MC6S 8x35	Schraube	Vis	2	010641
23	Dämpare	Damper	Dämpfer	Modérateur	1	060215
27	Spännstift FRP 6x50	Roll pin	Spannstift	Goupille	2	012945
28	Axel	Axle	Achse	Axe	2	055343
30	Boggiehjul, kompl. *Including pos. 30-35*	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	075145
	Boggiegaffel	Bogie frame	Boggierahmen	Cadre de bogie	2	075146
31	Axel	Axle	Achse	Axe	4	075839
32	Smörjnippel	Lubricator	Schmiernippel	Graisseur	2	008953
33	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	4	012923
34	Glidlager	Slide bearing	Gleitlager	Coussinet lisse	4	008516
35	Hjul	Wheel	Rad	Roue	4	060734
38	Lasthjul *Including pos. 39*	Rail wheel	Lastrad	Roue portante	2	056821
	Hjul, kompl.	Wheel, assy.	Rad, kompl.	Roue, compl.	4	060477
	Hjul	Wheel	Rad	Roue	2	075133
39	Kullager	Roller bearing	Kugellager	Roulement à billes	4	008010
41	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012279
42	Klämma	Clamp	Klammer	Bride	1	059286
43	Distans *(-06w22)*	Spacer	Abstandhalter	Entretoise	1	105501
	Distans *(06w23-)*	Spacer	Abstandhalter	Entretoise	1	106726
44	Skruv MC6S 10x50	Screw MC6S 10x50	Schraube	Vis	2	010705

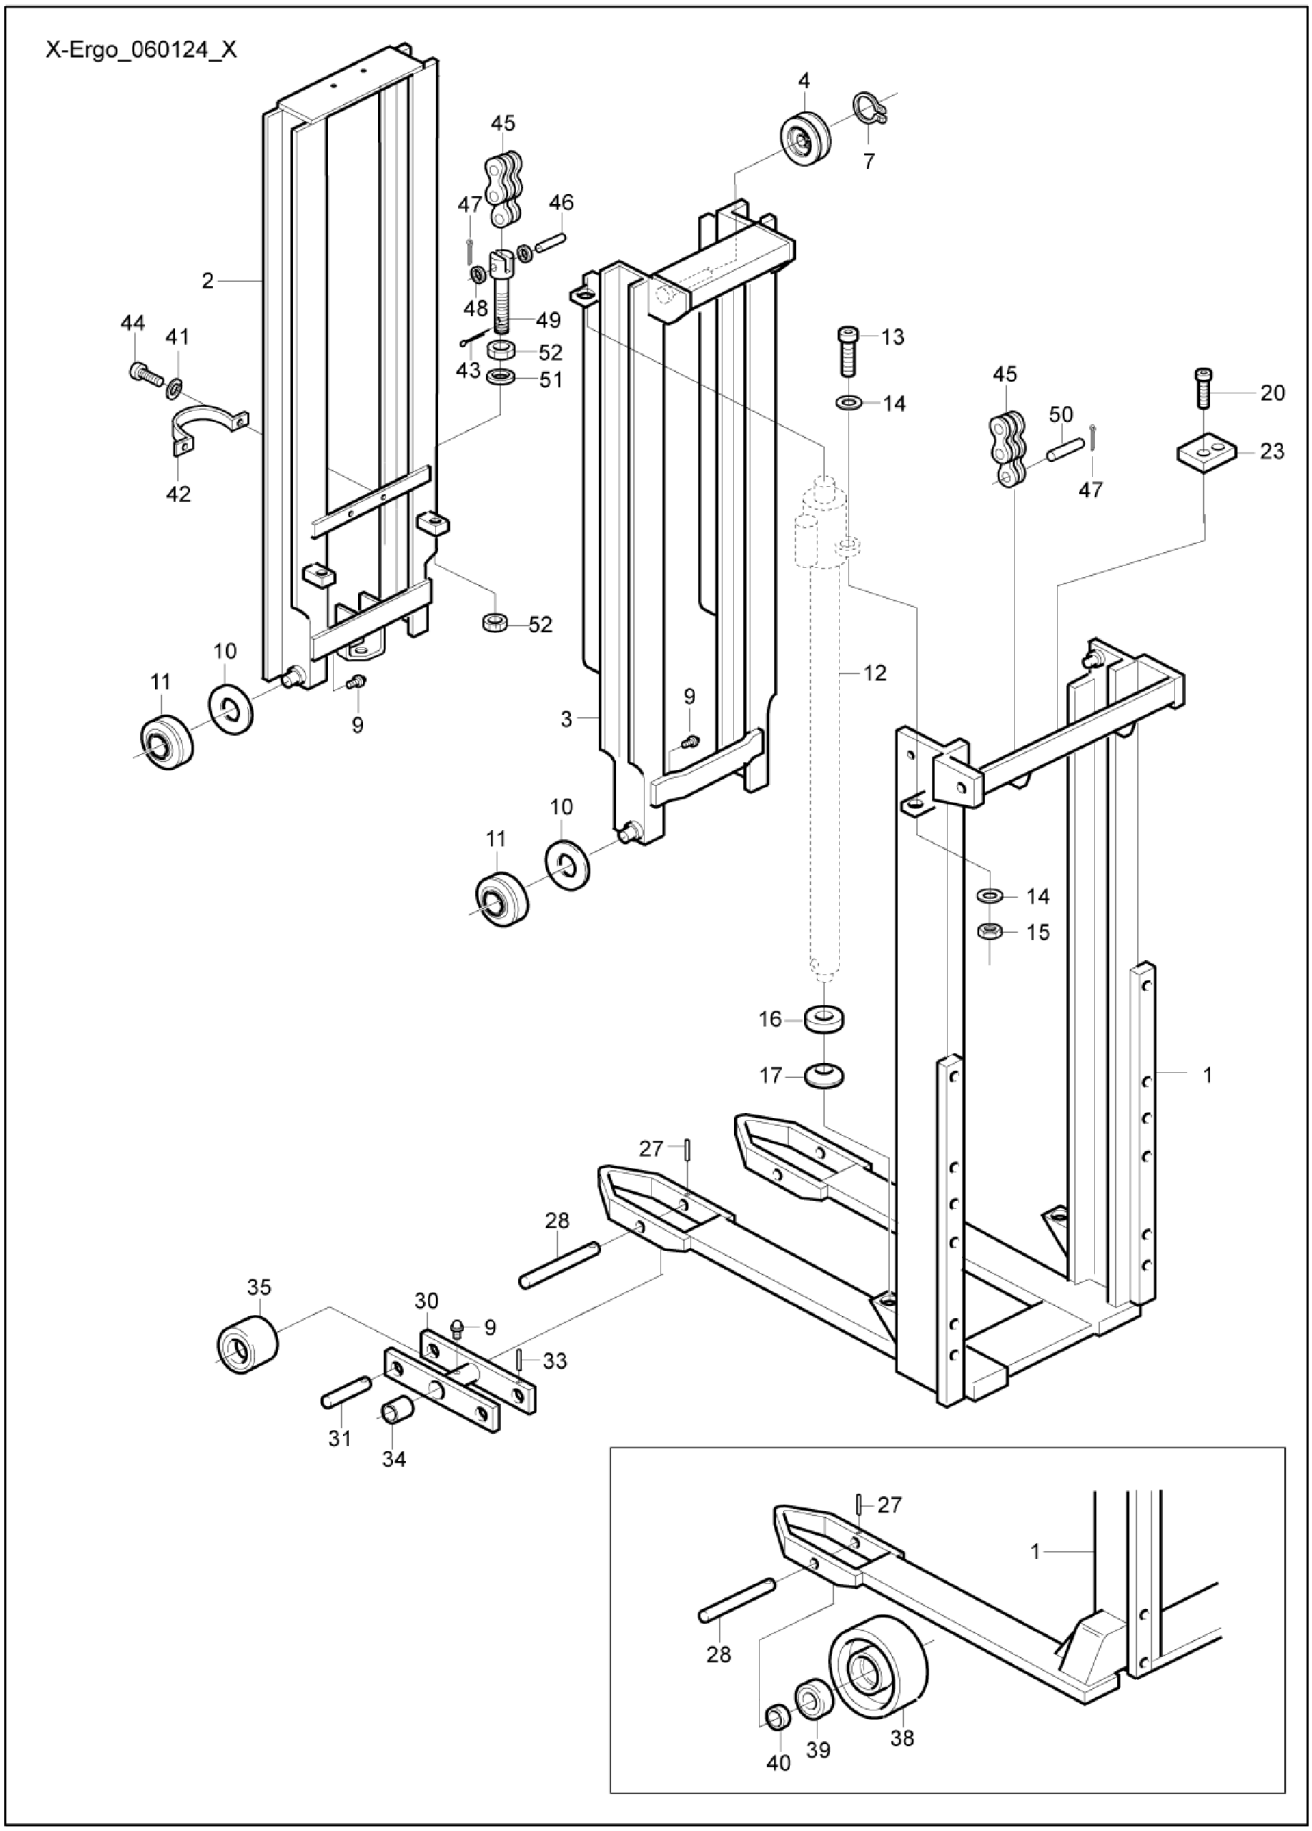
X-Ergo_060124_X
4
7
45
47
46
2
48
49
44
41
43
52
51
42
13
14
45
50
47
20
23
52
10
11
9
12
3
9
10
11
14
15
16
17
1
27
28
35
30
9
33
31
34
27
1
28
38
39
40

Mast/Stödben X-Ergo 160 DTFV - Mast/Straddle legs X-Ergo 160 DTFV
Mast/radarme X-Ergo 160 DTFV - Mât/longerons X-Ergo 160 DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Yttermast + stödben *160SDTFV*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105141
	Yttermast + stödben *160BDTFV*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105494
2	Innermast, smal	Inner mast	Innenmast	Mât intérieur	1	105065
3	Mellanmast	Intermediate mast	Mittlerer mast	Mât intermédiare	1	105325
4	Brytrulle, kpl.	Chain pulley, assy.	Umlenkrolle, kpl.	Poulie de renvoi, cmpl.	2	105193
7	Spårring SGA 30	Circlip SGA 30	Nutring	Circlip	4	012652
9	Smörjnippel	Lubricator	Schmiernippel	Graisseur	8	008953
10	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	1	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	1	105280
11	Lastrulle Ø78.2	Load roller	Lastrolle	Poulie de charge	6	105036
	Lastrulle Ø78.6	Load roller	Lastrolle	Poulie de charge	6	105037
	Lastrulle Ø79.0	Load roller	Lastrolle	Poulie de charge	6	106086
12	*See section 9*				2	
13	Skruv MC6S M12x70	Screw MC6S M12x70	Schraube	Vis	2	010777
14	Fjäderbricka	Spring washer	Federring	Rondelle grower	4	012283
15	Låsmutter M6M12	Locking nut	Mutter	Ecrou de blocage	2	012167
16	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001452
17	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001453
20	Skruv MC6S 8x35	Screw MC6S 8x35	Schraube	Vis	2	010641
23	Dämpare	Damper	Dämpfer	Modérateur	1	060215
27	Spännstift FRP 6x50	Roll pin	Spannstift	Goupille	2	012945
28	Axel	Axle	Achse	Axe	2	055343
30	Boggiehjul, kompl. *Including pos. 31-35*	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	075145
	Boggiegaffel	Bogie frame	Boggierahmen	Cadre de bogie	2	075146
31	Axel	Axle	Achse	Axe	4	075839
33	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	4	012923
34	Glidlager	Slide bearing	Gleitlager	Coussinet lisse	4	008516
35	Hjul	Wheel	Rad	Roue	4	060734
38	Lasthjul *Including pos. 39*	Rail wheel	Lastrad	Roue portante	2	056821
	Hjul, kompl.	Wheel, assy.	Rad, kompl.	Roue, compl.	4	060477
	Hjul	Wheel	Rad	Roue	2	075133
39	Kullager	Roller bearing	Kugellager	Roulement à billes	4	008010
40	Distanselement	Spacer	Distanzring	Douille d'écartement	4	053958
41	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012279
42	Klämma	Clamp	Klammer	Bride	1	069216
43	Saxpinne SP	Split pin	Splint	Goupille fendue	2	013121
44	Skruv MC6S 10x22	Screw MC6S 10x22	Schraube	Vis	2	010692
45	Lyftkedja	Lift chain	Hubkette	Chaîne de levage	2	105215
	Lyftkedja *Including pos. 46-50. When ordering please state lift height.*	Lift chain	Hubkette	Chaîne de levage	2	105548
	Lyftkedja *Including pos. 46-50. H4 = 4800*	Lift chain	Hubkette	Chaîne de levage	2	106341

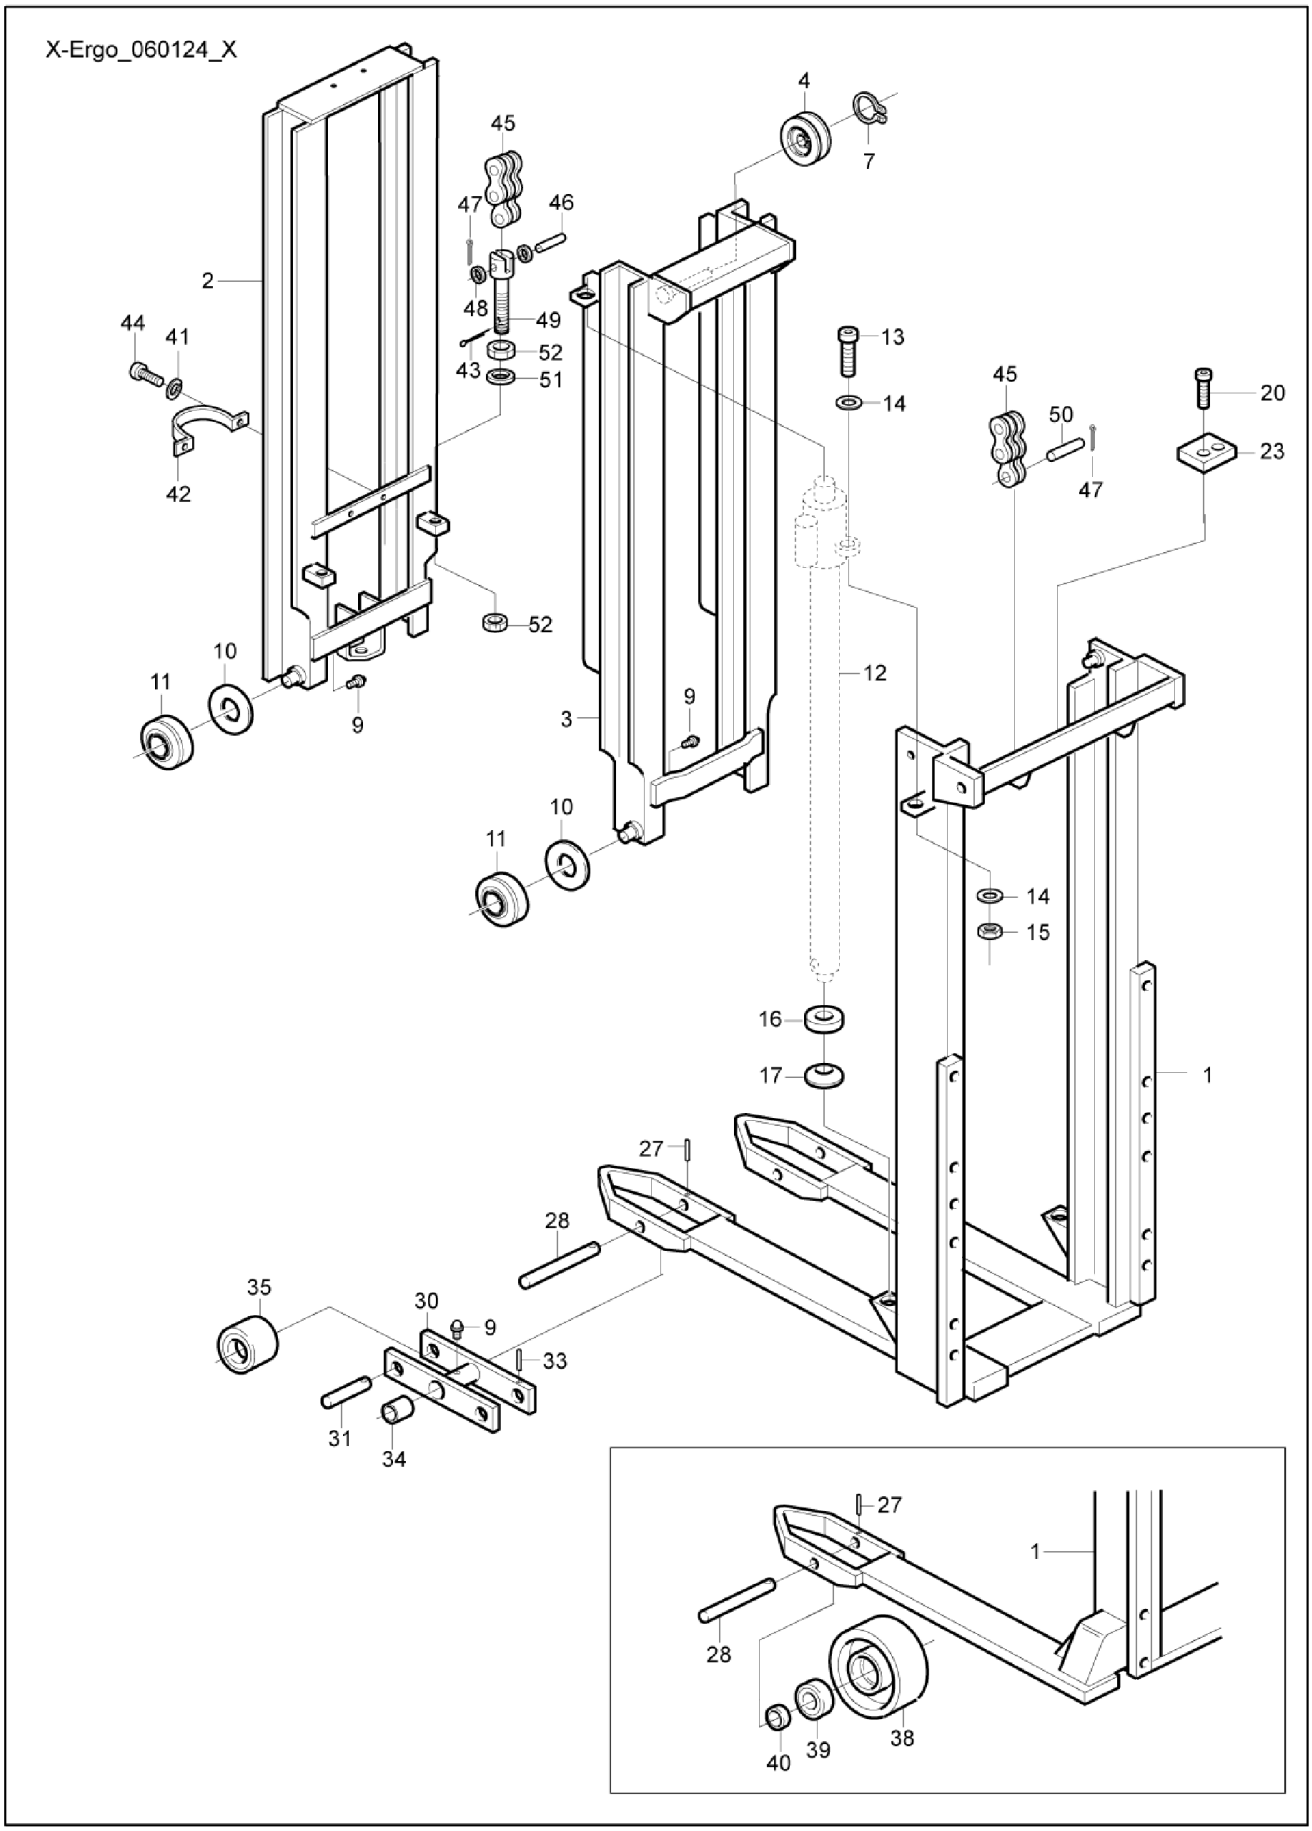
X-Ergo_060124_X
4
7
45
47
46
48
49
43
52
51
2
44
41
42
52
10
11
9
3
9
10
11
13
14
45
50
47
20
23
12
14
15
16
17
1
27
28
35
30
9
33
31
34
27
1
28
38
39
40

Mast/Stödben X-Ergo 160 DTFV - Mast/Straddle legs X-Ergo 160 DTFV
Mast/radarme X-Ergo 160 DTFV - Mât/longerons X-Ergo 160 DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
45	Lyftkedja *Including pos. 46-50. H4 = 5400*	Lift chain	Hubkette	Chaîne de levage	2	106342
	Lyftkedja *Including pos. 46-50. H4 = 6300*	Lift chain	Hubkette	Chaîne de levage	2	106343
46	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tête	2	105216
47	Saxpinne	Split pin	Splint	Goupille fendue	8	013103
48	Bricka	Washer	Scheibe	Rondelle	4	012371
49	Kedjebult	Chain bolt	Kettenbolzen	Chape de chaîne	2	105214
50	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tête	2	105213
51	Fjäderbricka	Spring washer	Federring	Rondelle grower	2	012289
52	Mutter M6M16	Nut	Mutter	Ecrou	4	012128

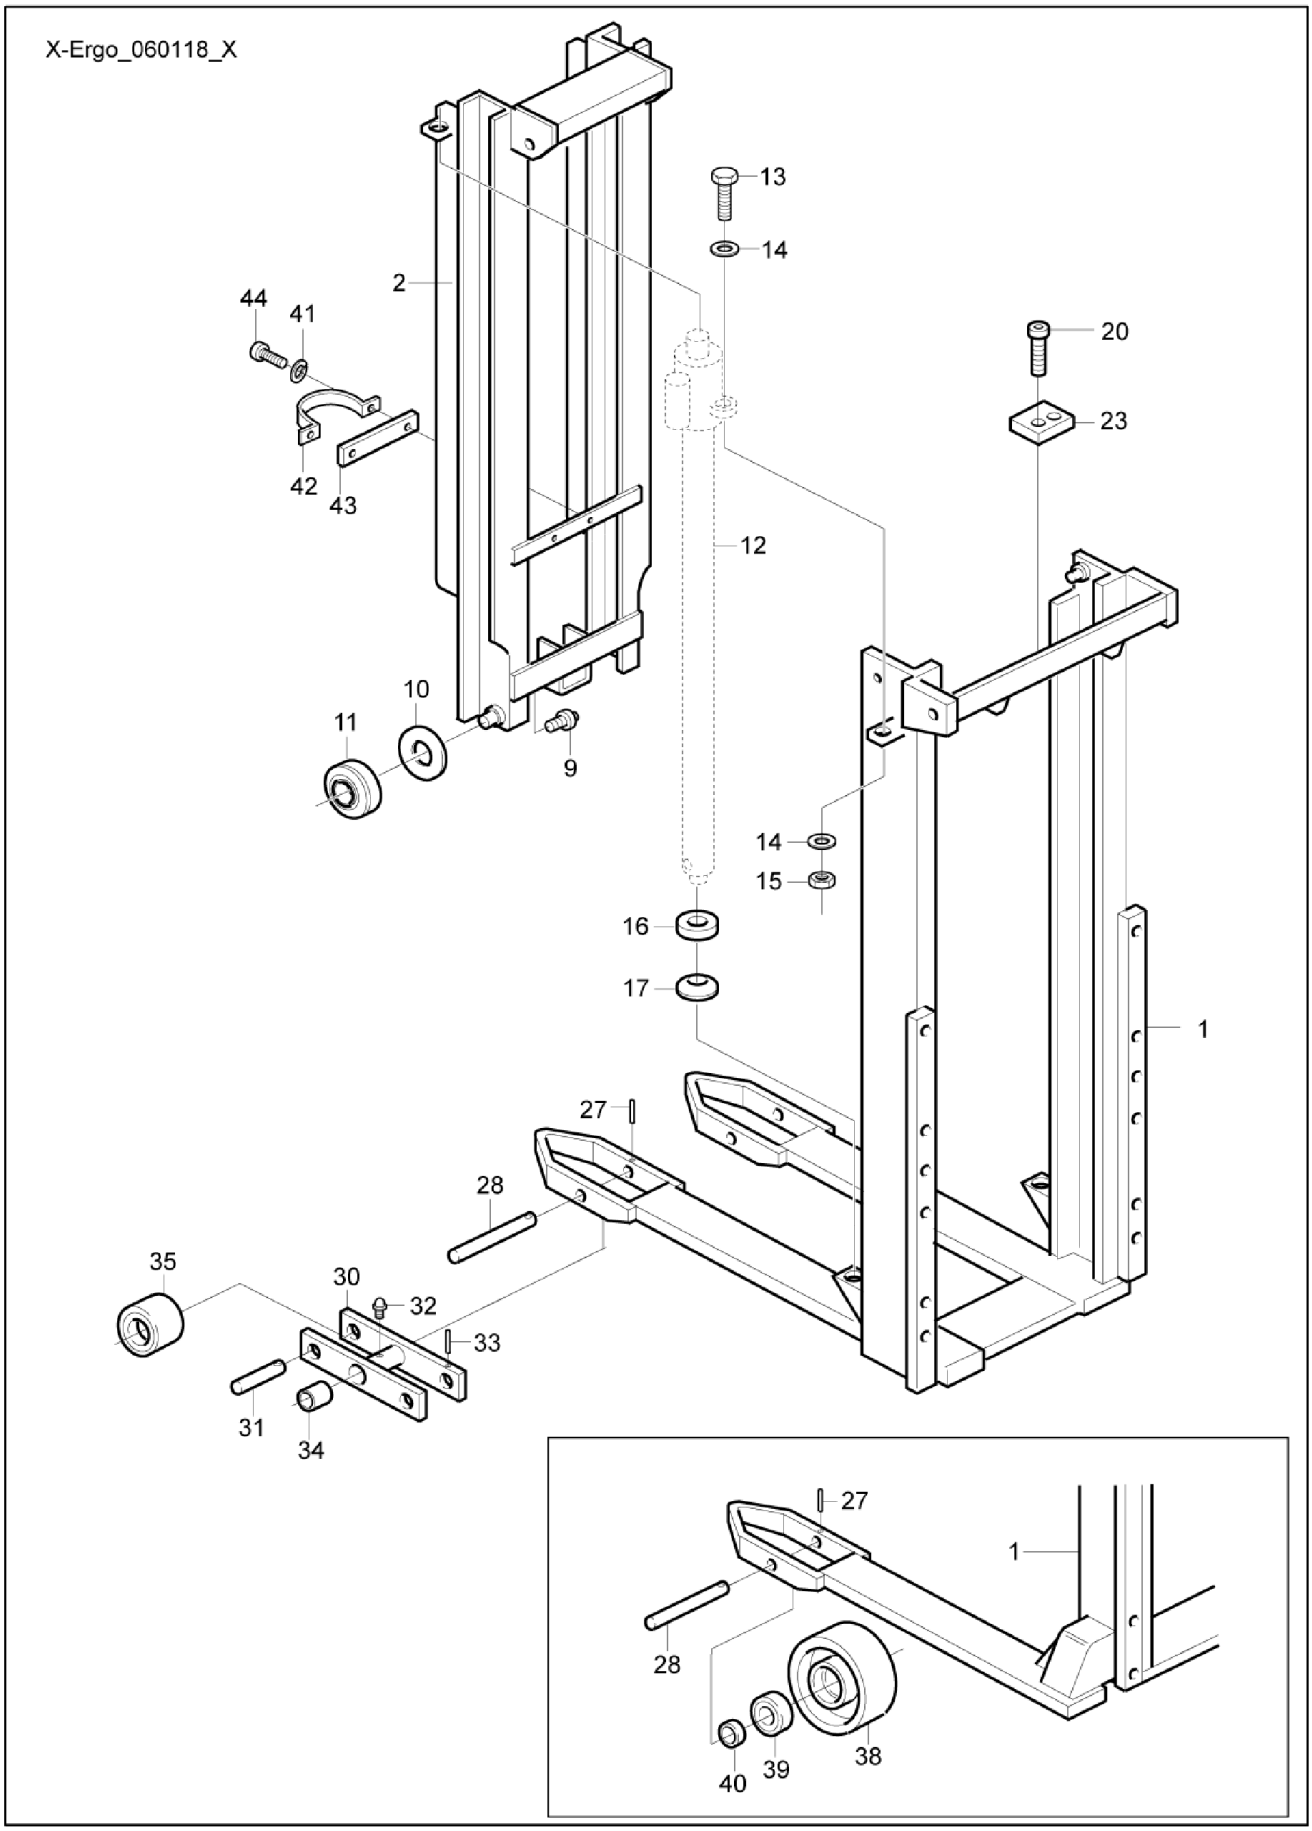
X-Ergo_060118_X
13
14
2
44
41
20
23
42
43
12
10
11
9
14
15
16
17
1
27
28
35
30
32
33
31
34
27
1
28
38
39
40

Mast/Stödben X-Ergo 200 TFV - Mast/Straddle legs X-Ergo 200 TFV
Mast/radarme X-Ergo 200 TFV - Mât/longerons X-Ergo 200 TFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Yttermast + stödben *200 STFV*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105864
	Yttermast + stödben *200 BTFV*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105866
2	Innermast	Inner mast	Innenmast	Mât intérieur	1	105868
9	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	008953
10	Distansbr. 1mm	Spacer ring	Distanzring	Rondel.décartement	14	105469
	Distansbr. 0.5mm	Spacer ring	Distanzring	Rondel.décartement	4	105470
11	Lastrulle Ø108	Load roller	Lastrolle	Poulie de charge	4	105318
	Lastrulle Ø108.5	Load roller	Lastrolle	Poulie de charge	4	105319
	Lastrulle Ø107	Load roller	Lastrolle	Poulie de charge	4	105328
	Lastrulle Ø107.5	Load roller	Lastrolle	Poulie de charge	4	105329
12	*See section 9*				1	
13	Skruv MC6S M12x70	Screw MC6S M12x70	Schraube	Vis	2	010777
14	Fjäderbricka	Spring washer	Federring	Rondelle grower	4	012283
15	Låsmutter M6M12	Locking nut	Mutter	Ecrou de blocage	2	012167
16	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001452
17	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001453
20	Skruv MC6S M8x25	Screw MC6S M8x25	Schraube	Vis	2	010636
23	Dämpare	Damper	Dämpfer	Modérateur	1	060215
27	Spännstift FRP 6x50	Roll pin	Spannstift	Goupille	2	012945
28	Axel	Axle	Achse	Axe	2	055343
30	Boggiehjul, kompl. *Including pos. 30-35*	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	075145
	Boggiegaffel	Bogie frame	Boggierahmen	Cadre de bogie	2	075146
31	Axel	Axle	Achse	Axe	4	075839
32	Smörjnippel	Lubricator	Schmiernippel	Graisseur	2	008953
33	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	4	012923
34	Glidlager	Slide bearing	Gleitlager	Coussinet lisse	4	008516
35	Hjul	Wheel	Rad	Roue	4	060734
38	Lasthjul *Including pos. 39*	Rail wheel	Lastrad	Roue portante	2	056821
	Hjul, kompl.	Wheel, assy.	Rad, kompl.	Roue, compl.	4	060477
	Hjul	Wheel	Rad	Roue	2	075133
39	Kullager	Roller bearing	Kugellager	Roulement à billes	4	008010
40	Distanselement	Spacer	Distanzring	Douille d'écartement	4	053958
41	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012279
42	Klämma	Clamp	Klammer	Bride	1	059286
43	Distans *(-06w22)*	Spacer	Abstandhalter	Entretoise	1	105501
	Distans *(06w23-)*	Spacer	Abstandhalter	Entretoise	1	106726
44	Skruv MC6S 10x50	Screw MC6S 10x50	Schraube	Vis	2	010705

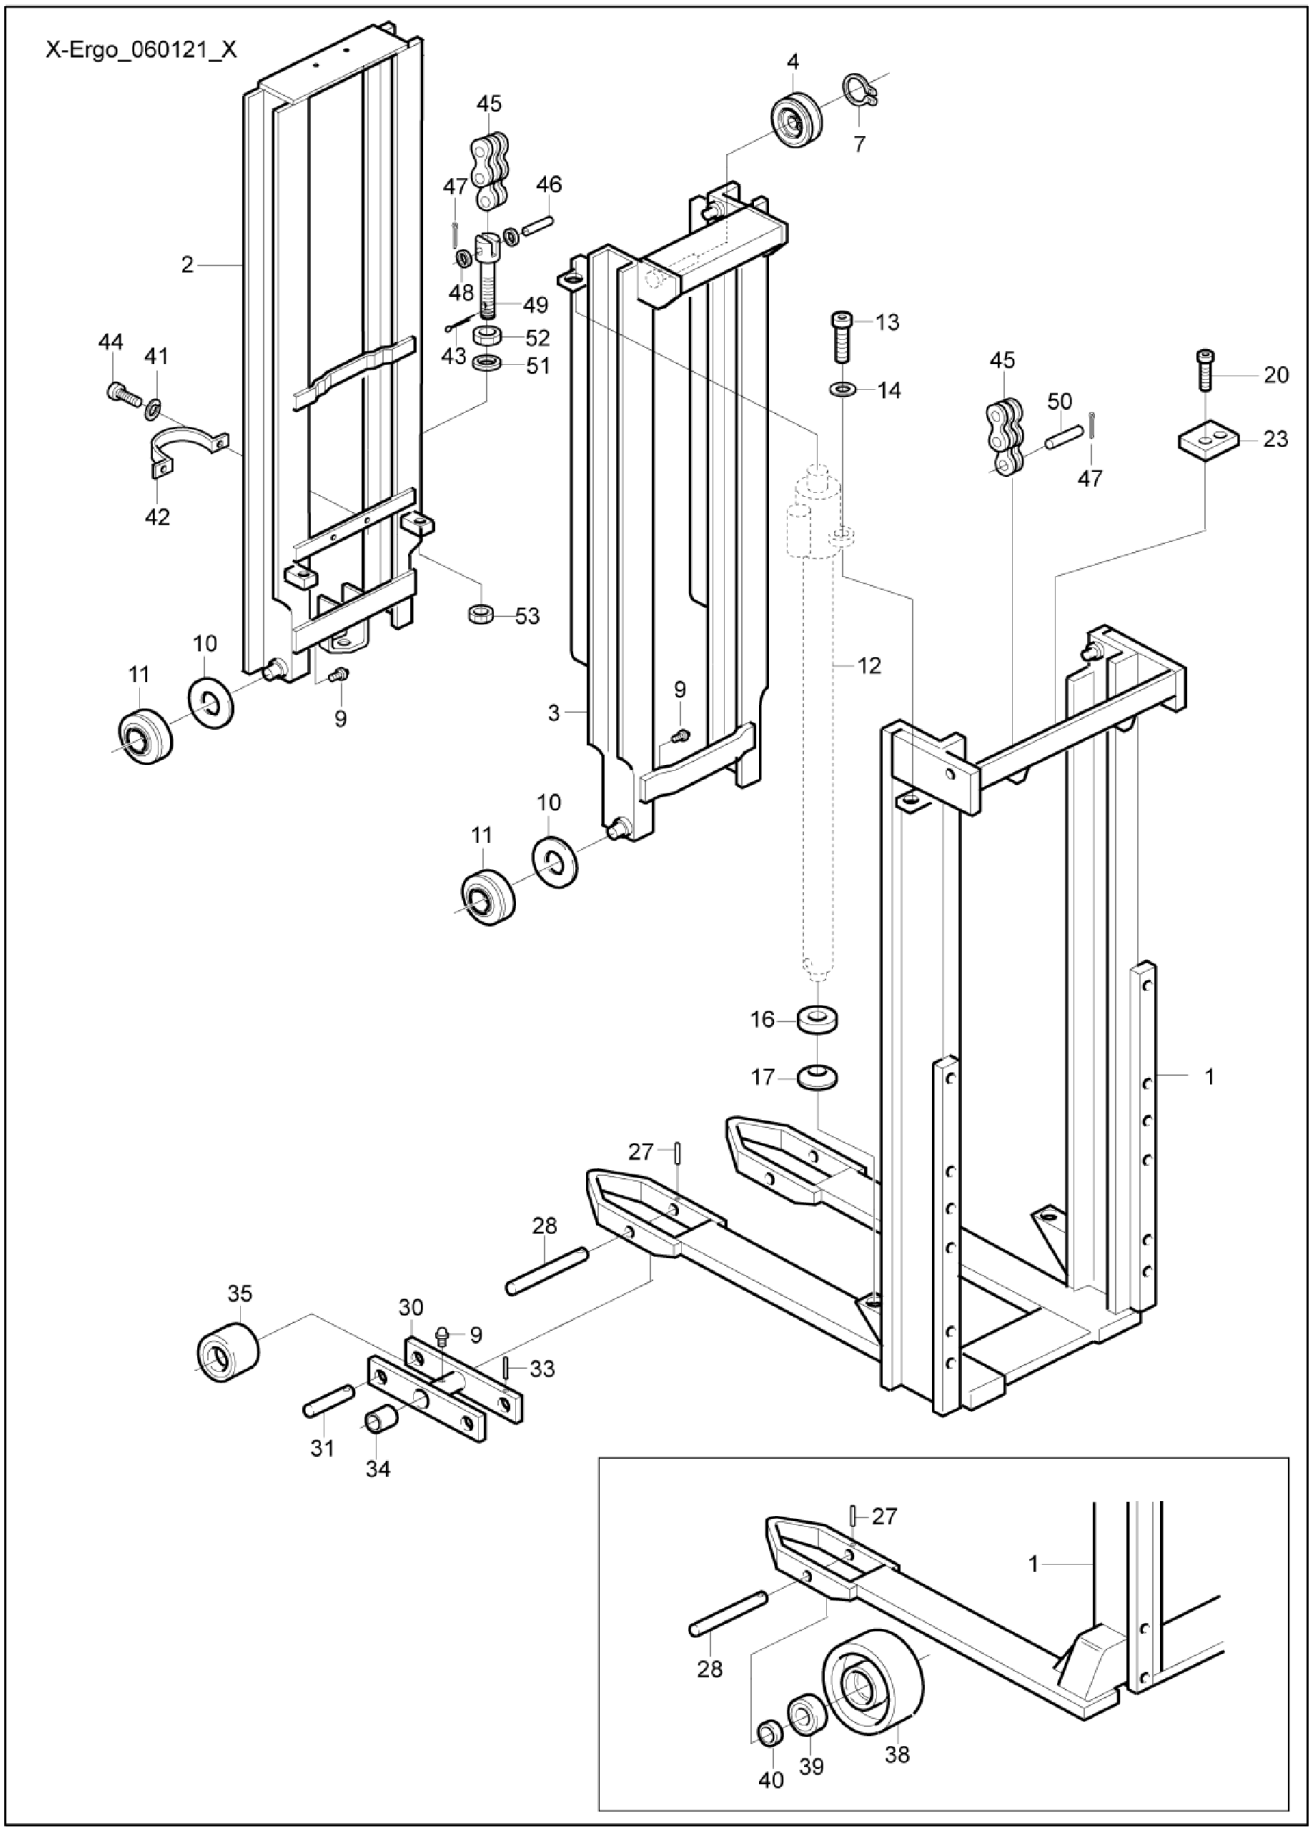
X-Ergo_060121_X
4
7
45
47
46
48
49
52
43
51
2
44
41
42
53
10
11
9
3
13
14
45
50
47
20
23
12
16
17
1
27
28
35
30
9
33
31
34
27
1
28
38
39
40

Mast/Stödben X-Ergo 200 DTFV - Mast/Straddle legs X-Ergo 200 DTFV
Mast/radarme X-Ergo 200 DTFV - Mât/longerons X-Ergo 200 DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Innermast, smal	Inner mast	Innenmast	Mât intérieur	1	105665
	Yttermast + stödben	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105864
2	Innermast, smal	Inner mast	Innenmast	Mât intérieur	1	105665
3	Mellanmast, smal	Intermediate mast	Mittlerer mast	Mât intermédiare	1	105663
4	Brytrulle	Chain pulley	Umlenkrolle	Poulie de renvoi	2	059299
7	Spårring SGA35	Circlip	Nutring	Circlip	4	012657
9	Smörjnippel	Lubricator	Schmiernippel	Graisseur	8	008953
10	Distansbr. 1mm	Spacer ring	Distanzring	Rondel.décartement	1	105469
	Distansbr. 0.5mm	Spacer ring	Distanzring	Rondel.décartement	1	105470
11	Lastrulle Ø108	Load roller	Lastrolle	Poulie de charge	8	105318
	Lastrulle Ø108.5	Load roller	Lastrolle	Poulie de charge	8	105319
	Lastrulle Ø107	Load roller	Lastrolle	Poulie de charge	8	105328
	Lastrulle Ø107.5	Load roller	Lastrolle	Poulie de charge	8	105329
12	*See section 9*				1	
13	Skruv MC6S 12x60	Screw MC6S 12x60	Schraube	Vis	2	010773
14	Bricka	Washer	Scheibe	Rondelle	2	071541
16	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001452
17	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001453
20	Skruv MC6S M8x25	Screw MC6S M8x25	Schraube	Vis	2	010636
23	Dämpare	Damper	Dämpfer	Modérateur	1	060215
27	Spännstift FRP 6x50	Roll pin	Spannstift	Goupille	2	012945
28	Axel	Axle	Achse	Axe	2	055343
30	Boggiehjul, kompl. *Including pos. 31-35*	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	075145
	Boggiegaffel	Bogie frame	Boggierahmen	Cadre de bogie	2	075146
31	Axel	Axle	Achse	Axe	4	075839
33	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	4	012923
34	Glidlager	Slide bearing	Gleitlager	Coussinet lisse	4	008516
35	Hjul	Wheel	Rad	Roue	4	060734
38	Lasthjul *Including pos. 39*	Rail wheel	Lastrad	Roue portante	2	056821
39	Kullager	Roller bearing	Kugellager	Roulement à billes	4	008034
40	Distanselement	Spacer	Distanzring	Douille d'écartement	4	053958
41	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012279
42	Klamma	Clamp	Klammer	Bride	1	105990
43	Saxpinne SP	Split pin	Splint	Goupille fendue	2	013121
44	Skruv MC6S 10x16	Screw MC6S 10x16	Schraube	Vis	2	010687
45	Lyftkedja	Lift chain	Hubkette	Chaîne de levage	2	105215
	Lyftkedja *Including pos. 46-49*	Lift chain	Hubkette	Chaîne de levage	2	106194
46	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tête	4	105216
47	Saxpinne	Split pin	Splint	Goupille fendue	8	013103
48	Bricka	Washer	Scheibe	Rondelle	4	012371
49	Kedjebult	Chain bolt	Kettenbolzen	Chape de chaîne	2	105214
51	Fjäderbricka	Spring washer	Federring	Rondelle grower	2	012289
52	Mutter Ml6m 16	Nut Ml6m 16	Mutter	Ecrou	2	012150

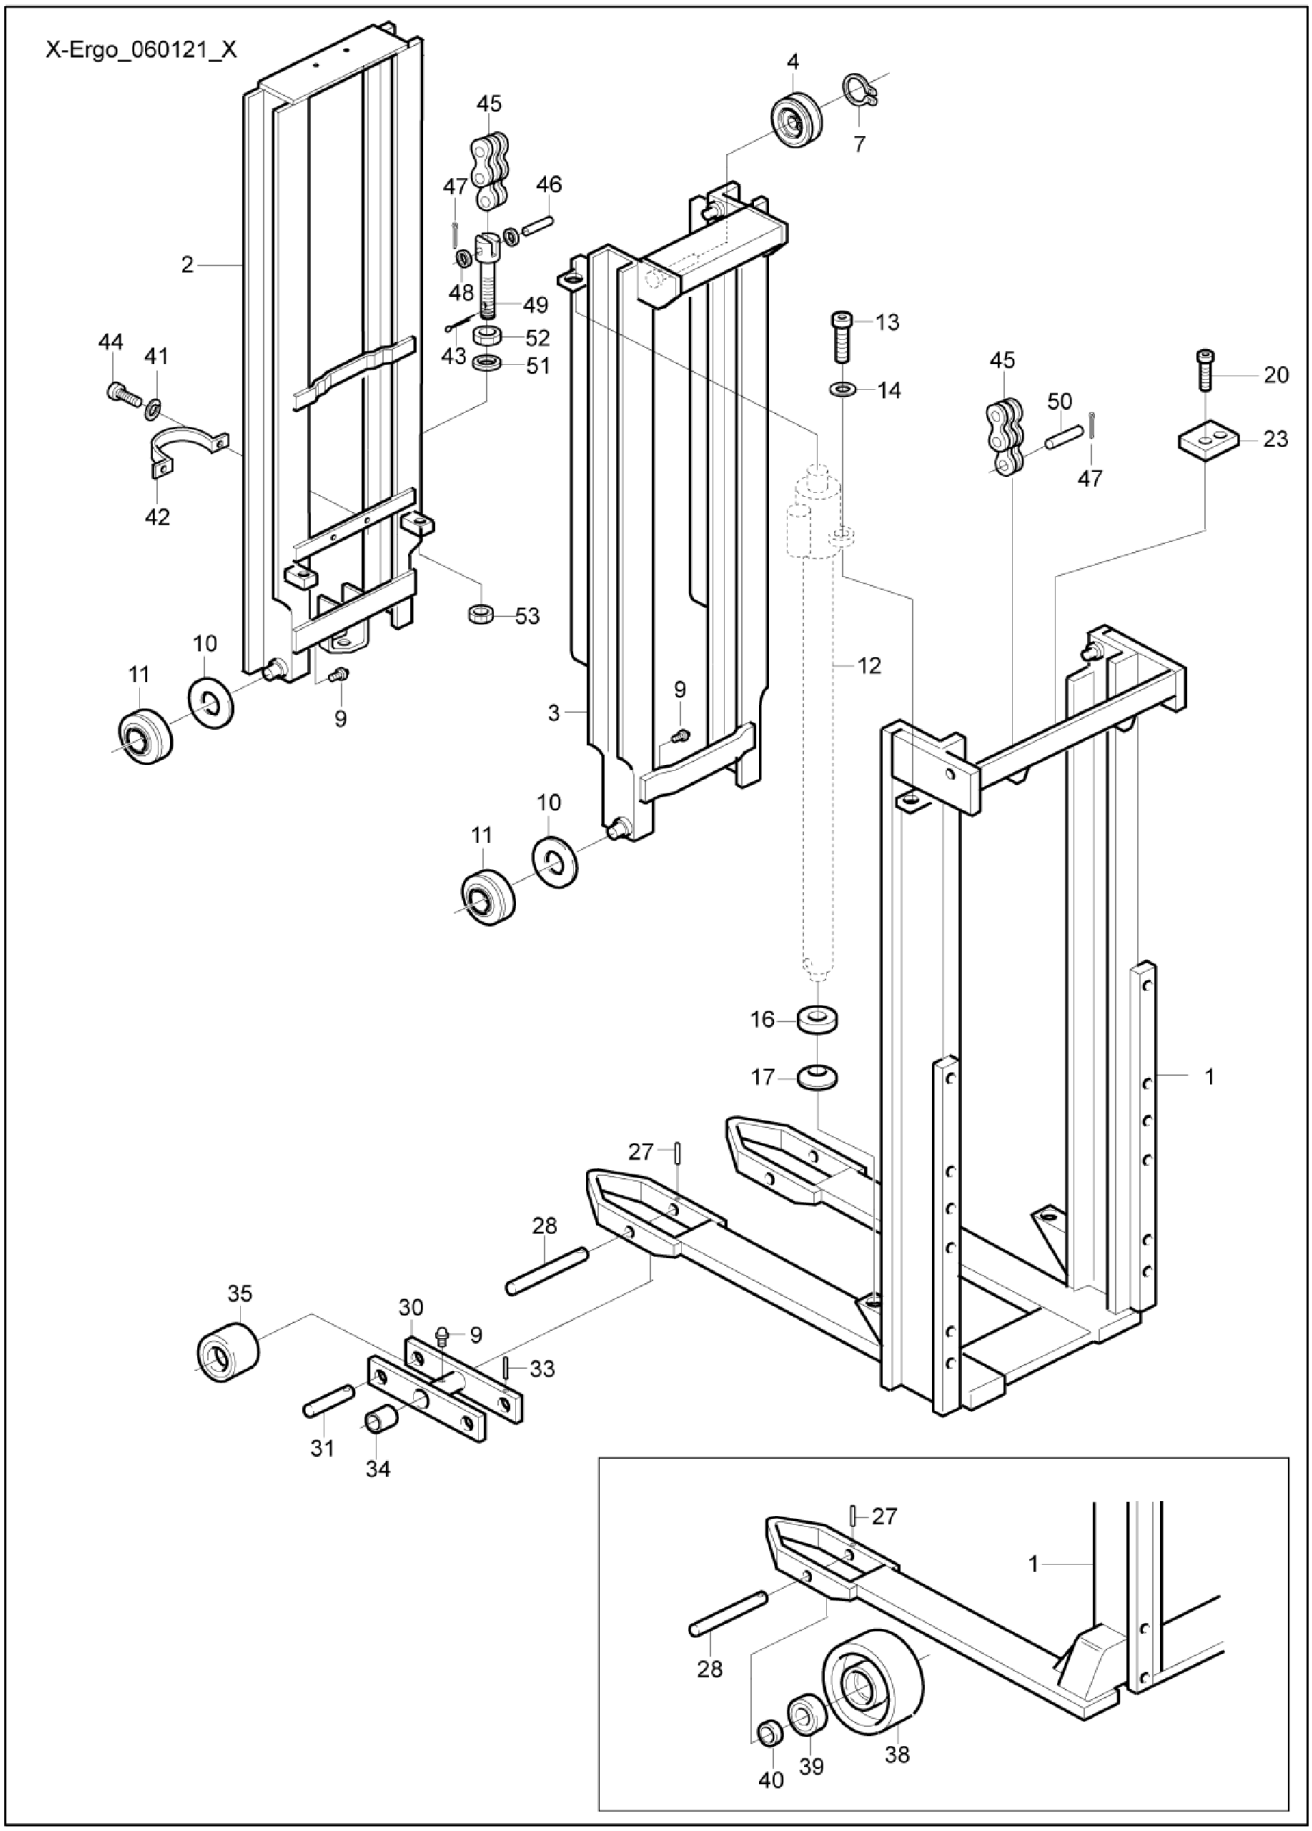
X-Ergo_060121_X
4
7
45
47
46
48
49
52
43
51
2
44
41
42
53
10
11
9
3
13
14
45
50
47
20
23
12
16
17
1
27
28
35
30
9
33
31
34
27
1
28
38
39
40

Mast/Stödben X-Ergo 200 DTFV - Mast/Straddle legs X-Ergo 200 DTFV
Mast/radarme X-Ergo 200 DTFV - Mât/longerons X-Ergo 200 DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
53	Mutter M6M16	Nut	Mutter	Ecrou	2	012128

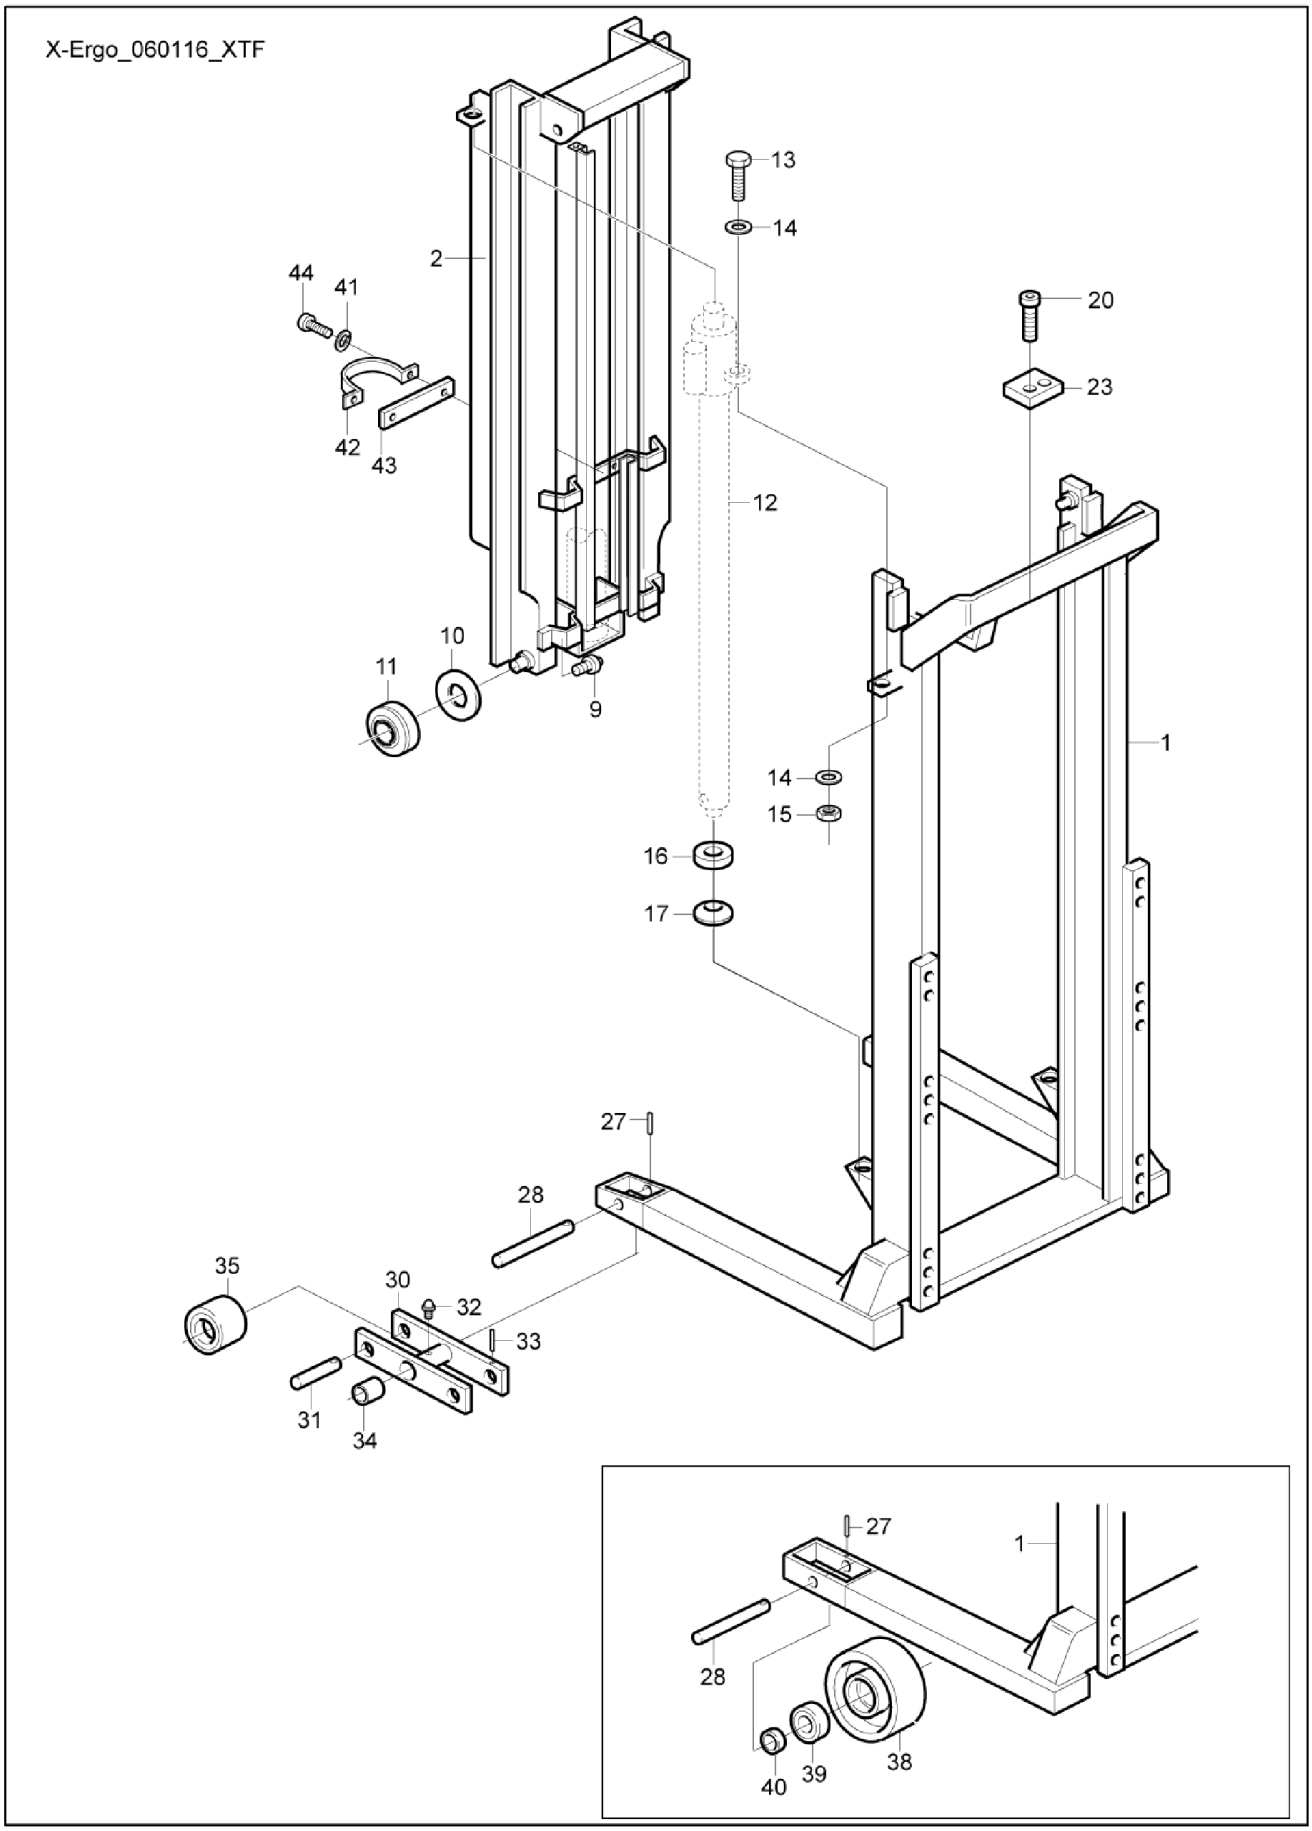
X-Ergo_060116_XTF
13
14
2
44
41
20
23
42
43
12
10
11
9
1
14
15
16
17
27
28
35
30
32
33
31
34
27
1
28
38
39
40

Mast/Stödben XTF-Ergo 100 TFV - Mast/Straddle legs XTF-Ergo 100 TFV
Mast/radarme XTF-Ergo 100 TFV - Mât/longerons XTF-Ergo 100 TFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Yttermast + stödben	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105863
	Yttermast + stödben *Low profile straddle legs*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105865
2	Innermast	Inner mast	Innenmast	Mât intérieur	1	105868
9	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	008953
10	Distansbr. 1mm	Spacer ring	Distanzring	Rondel.décartement	14	105469
	Distansbr. 0.5mm	Spacer ring	Distanzring	Rondel.décartement	4	105470
11	Lastrulle Ø108	Load roller	Lastrolle	Poulie de charge	4	105318
	Lastrulle Ø108.5	Load roller	Lastrolle	Poulie de charge	4	105319
	Lastrulle Ø107	Load roller	Lastrolle	Poulie de charge	4	105328
	Lastrulle Ø107.5	Load roller	Lastrolle	Poulie de charge	4	105329
12	 *See section 9*				1	
13	Skruv MC6S M12x70	Screw MC6S M12x70	Schraube	Vis	2	010777
14	Fjäderbricka	Spring washer	Federring	Rondelle grower	4	012283
15	Låsmutter M6M12	Locking nut	Mutter	Ecrou de blocage	2	012167
16	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001452
17	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001453
20	Skruv MC6S M8x25	Screw MC6S M8x25	Schraube	Vis	2	010636
23	Dämpare	Damper	Dämpfer	Modérateur	1	060215
27	Spännstift FRP 6x50	Roll pin	Spannstift	Goupille	2	012945
28	Axel	Axle	Achse	Axe	2	055343
30	Boggiehjul, kompl. *Including pos. 30-35*	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	075145
	Boggiegaffel	Bogie frame	Boggierahmen	Cadre de bogie	2	075146
31	Axel	Axle	Achse	Axe	4	075839
32	Smörjnippel	Lubricator	Schmiernippel	Graisseur	2	008953
33	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	4	012923
34	Glidlager	Slide bearing	Gleitlager	Coussinet lisse	4	008516
35	Hjul	Wheel	Rad	Roue	4	060734
38	Lasthjul *Including pos. 39*	Rail wheel	Lastrad	Roue portante	2	056821
	Hjul, kompl.	Wheel, assy.	Rad, kompl.	Roue, compl.	4	060477
	Hjul	Wheel	Rad	Roue	2	075133
39	Kullager	Roller bearing	Kugellager	Roulement à billes	4	008010
40	Distanselement	Spacer	Distanzring	Douille d'écartement	4	053958
41	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012279
42	Klämma	Clamp	Klammer	Bride	1	059286
43	Distans *(-06w22)*	Spacer	Abstandhalter	Entretoise	1	105501
	Distans *(06w23-)*	Spacer	Abstandhalter	Entretoise	1	106726
44	Skruv MC6S 10x50	Screw MC6S 10x50	Schraube	Vis	2	010705

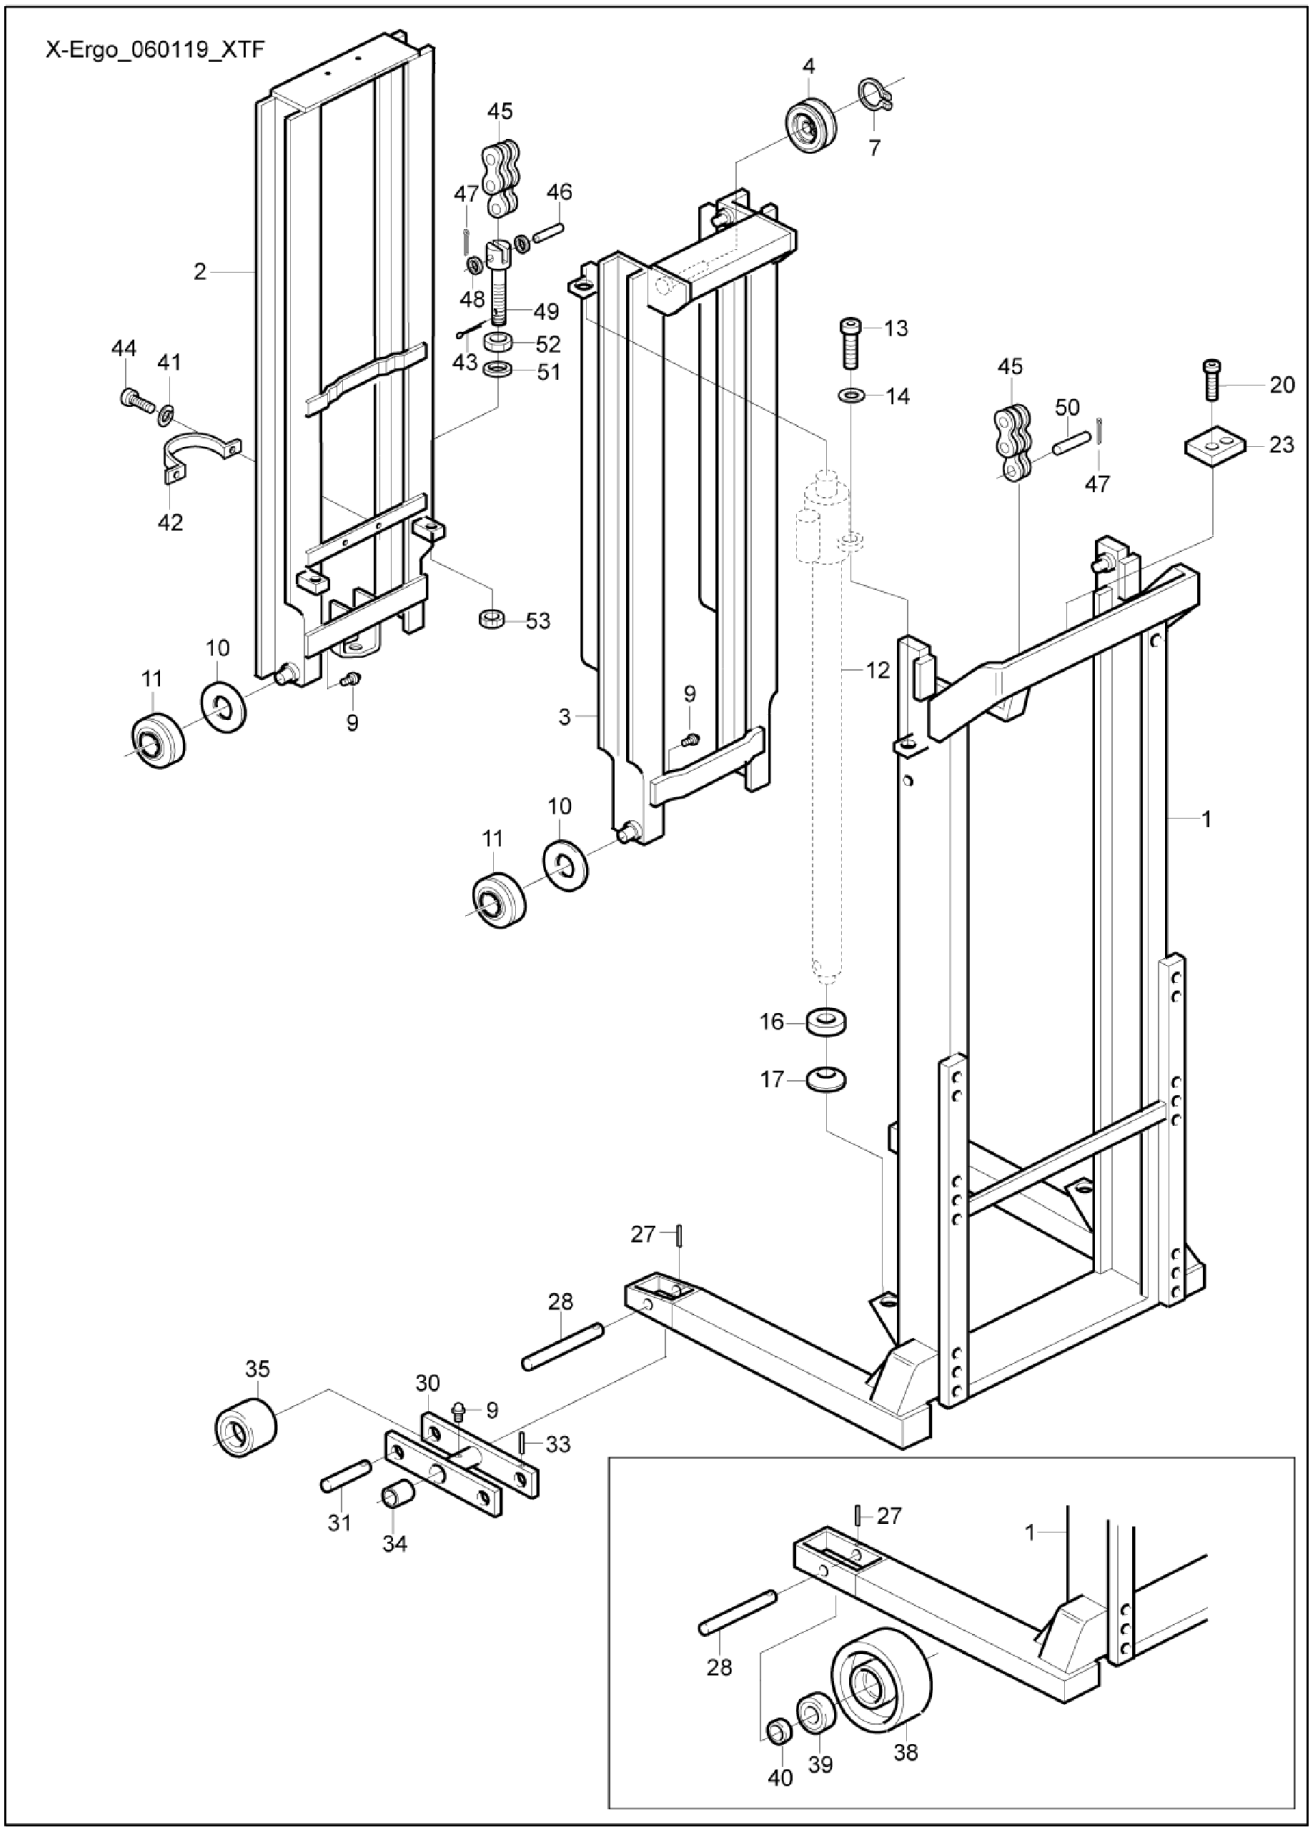
X-Ergo_060119_XTF
4
7
45
47
46
2
48
49
52
43
51
44
41
42
53
10
11
9
3
13
14
45
50
47
20
23
12
1
16
17
27
28
35
30
9
33
31
34
27
1
28
38
39
40

Mast/Stödben XTF-Ergo 100 DTFV - Mast/Straddle legs XTF-Ergo 100 DTFV
Mast/radarme XTF-Ergo 100 DTFV - Mât/longerons XTF-Ergo 100 DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Yttermast + stödben	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105863
	Yttermast + stödben *Low profile straddle legs*	Outer mast + str. legs	Auss. mast + radarme	Mât ext. + longerons	1	105865
2	Innermast, smal	Inner mast	Innenmast	Mât intérieur	1	105665
3	Mellanmast, smal	Intermediate mast	Mittlerer mast	Mât intermédiare	1	105663
4	Brytrulle	Chain pulley	Umlenkrolle	Poulie de renvoi	2	059299
7	Spårring SGA35	Circlip	Nutring	Circlip	4	012657
9	Smörjnippel	Lubricator	Schmiernippel	Graisseur	8	008953
10	Distansbr. 1mm	Spacer ring	Distanzring	Rondel.décartement	1	105469
	Distansbr. 0.5mm	Spacer ring	Distanzring	Rondel.décartement	1	105470
11	Lastrulle Ø108	Load roller	Lastrolle	Poulie de charge	8	105318
	Lastrulle Ø108.5	Load roller	Lastrolle	Poulie de charge	8	105319
	Lastrulle Ø107	Load roller	Lastrolle	Poulie de charge	8	105328
	Lastrulle Ø107.5	Load roller	Lastrolle	Poulie de charge	8	105329
12	*See section 9*				1	
13	Skruv MC6S 12x60	Screw MC6S 12x60	Schraube	Vis	2	010773
14	Bricka	Washer	Scheibe	Rondelle	2	071541
16	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001452
17	Bricka, sfärisk	Washer, spherical	Scheibe	Rondelle	2	001453
20	Skruv MC6S M8x25	Screw MC6S M8x25	Schraube	Vis	2	010636
23	Dämpare	Damper	Dämpfer	Modérateur	1	060215
27	Spännstift FRP 6x50	Roll pin	Spannstift	Goupille	2	012945
28	Axel	Axle	Achse	Axe	2	055343
30	Boggiehjul, kompl. *Including pos. 31-35*	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	075145
	Boggiegaffel	Bogie frame	Boggierahmen	Cadre de bogie	2	075146
31	Axel	Axle	Achse	Axe	4	075839
33	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	4	012923
34	Glidlager	Slide bearing	Gleitlager	Coussinet lisse	4	008516
35	Hjul	Wheel	Rad	Roue	4	060734
38	Lasthjul *Including pos. 39*	Rail wheel	Lastrad	Roue portante	2	056821
39	Kullager	Roller bearing	Kugellager	Roulement à billes	4	008034
40	Distanselement	Spacer	Distanzring	Douille d'écartement	4	053958
41	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012279
42	Klämma	Clamp	Klammer	Bride	1	069216
43	Saxpinne SP	Split pin	Splint	Goupille fendue	2	013121
44	Skruv MC6S 10x16	Screw MC6S 10x16	Schraube	Vis	2	010687
45	Lyftkedja	Lift chain	Hubkette	Chaîne de levage	2	105215
	Lyftkedja *Including pos. 46-49*	Lift chain	Hubkette	Chaîne de levage	2	106194
46	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tête	4	105216
47	Saxpinne	Split pin	Splint	Goupille fendue	8	013103
48	Bricka	Washer	Scheibe	Rondelle	4	012371
49	Kedjebult	Chain bolt	Kettenbolzen	Chape de chaîne	2	105214
51	Fjäderbricka	Spring washer	Federring	Rondelle grower	2	012289

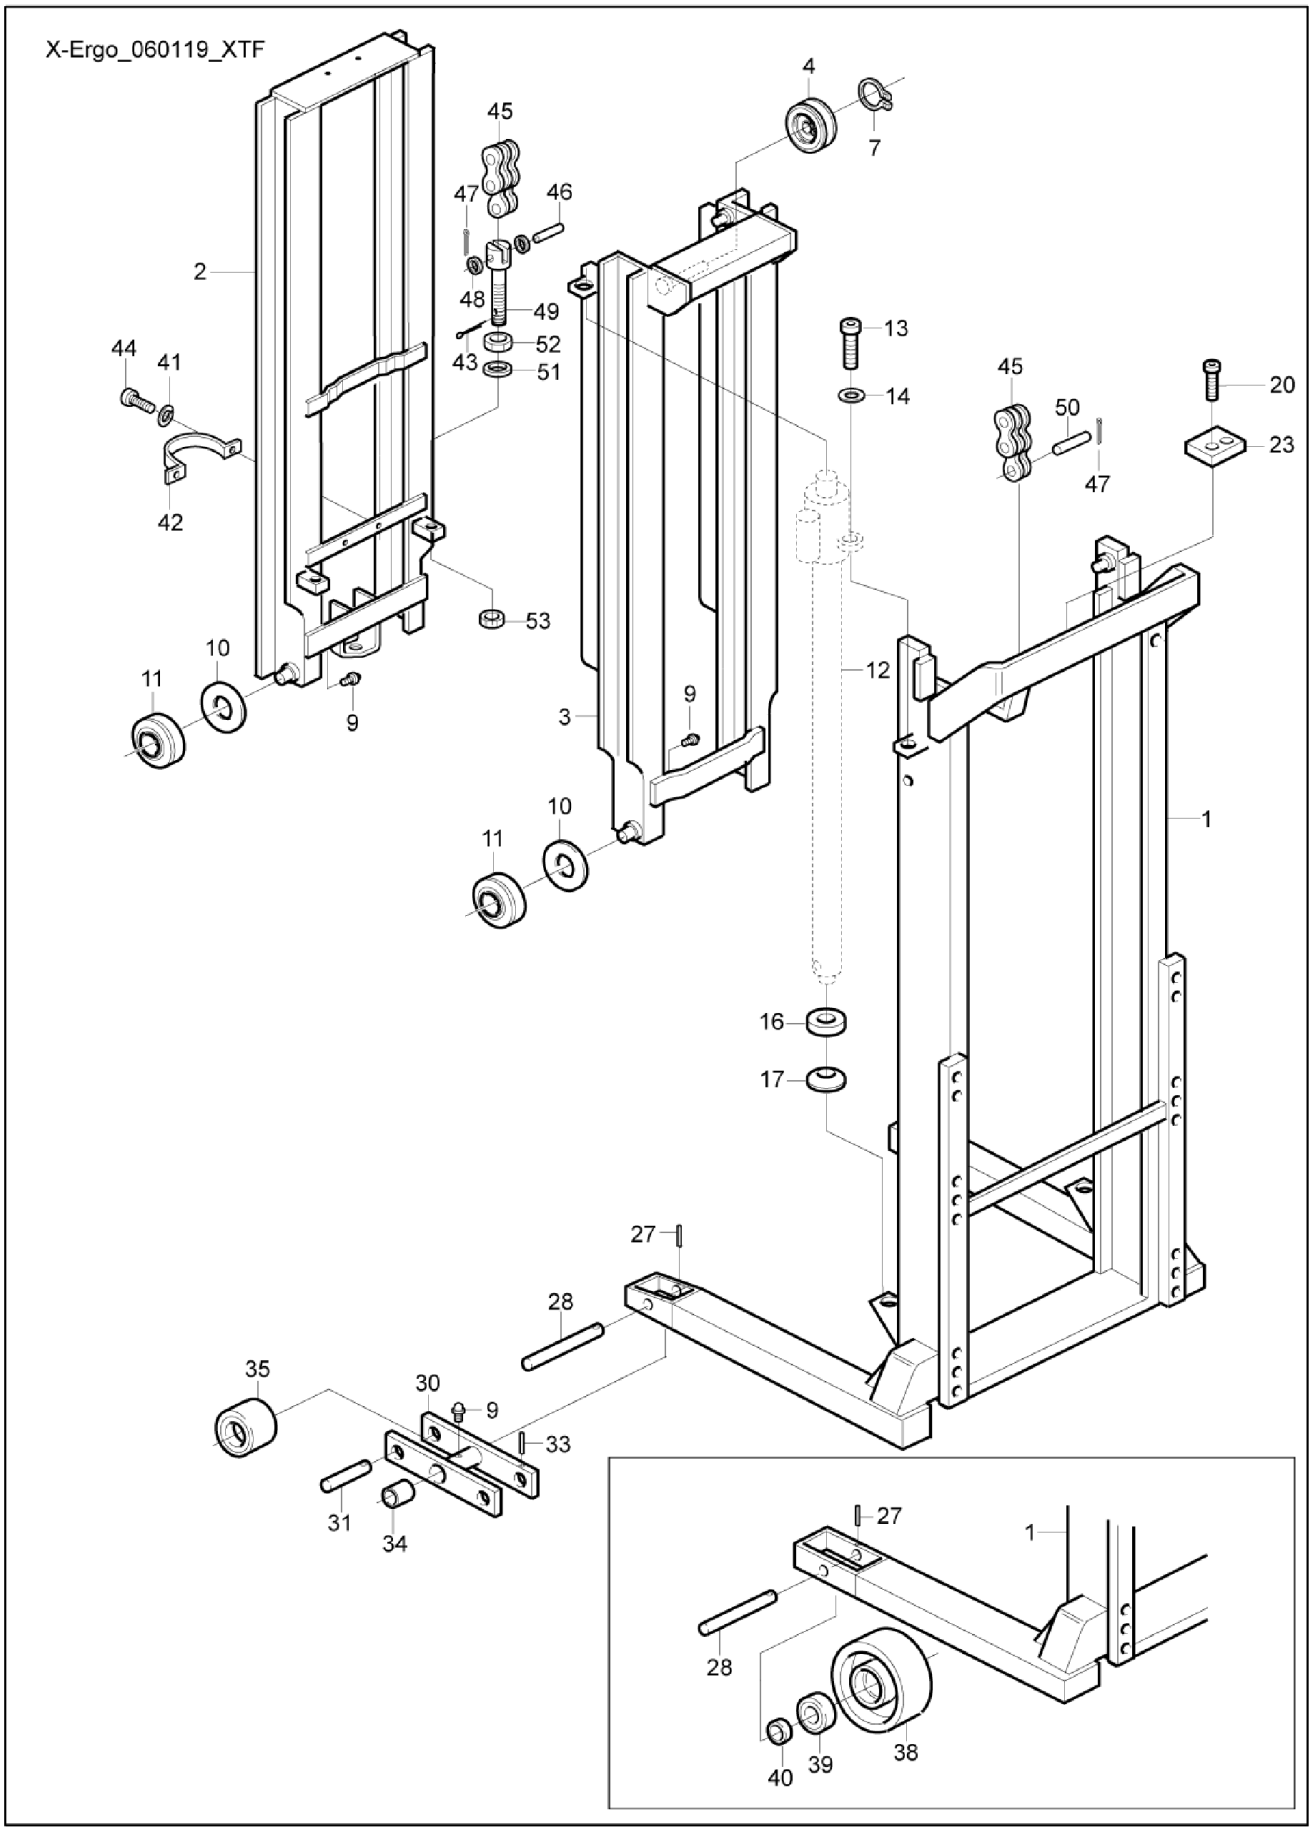
X-Ergo_060119_XTF
4
7
45
47
46
2
48
49
52
43
51
44
41
42
53
10
11
9
3
13
14
45
50
47
20
23
12
1
16
17
27
28
35
30
9
33
31
34
27
1
28
38
39
40

Mast/Stödben XTF-Ergo 100 DTFV - Mast/Straddle legs XTF-Ergo 100 DTFV
Mast/radarme XTF-Ergo 100 DTFV - Mât/longerons XTF-Ergo 100 DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
52	Mutter Ml6m 16	Nut Ml6m 16	Mutter	Ecrou	2	012150
53	Mutter M6M16	Nut	Mutter	Ecrou	2	012128

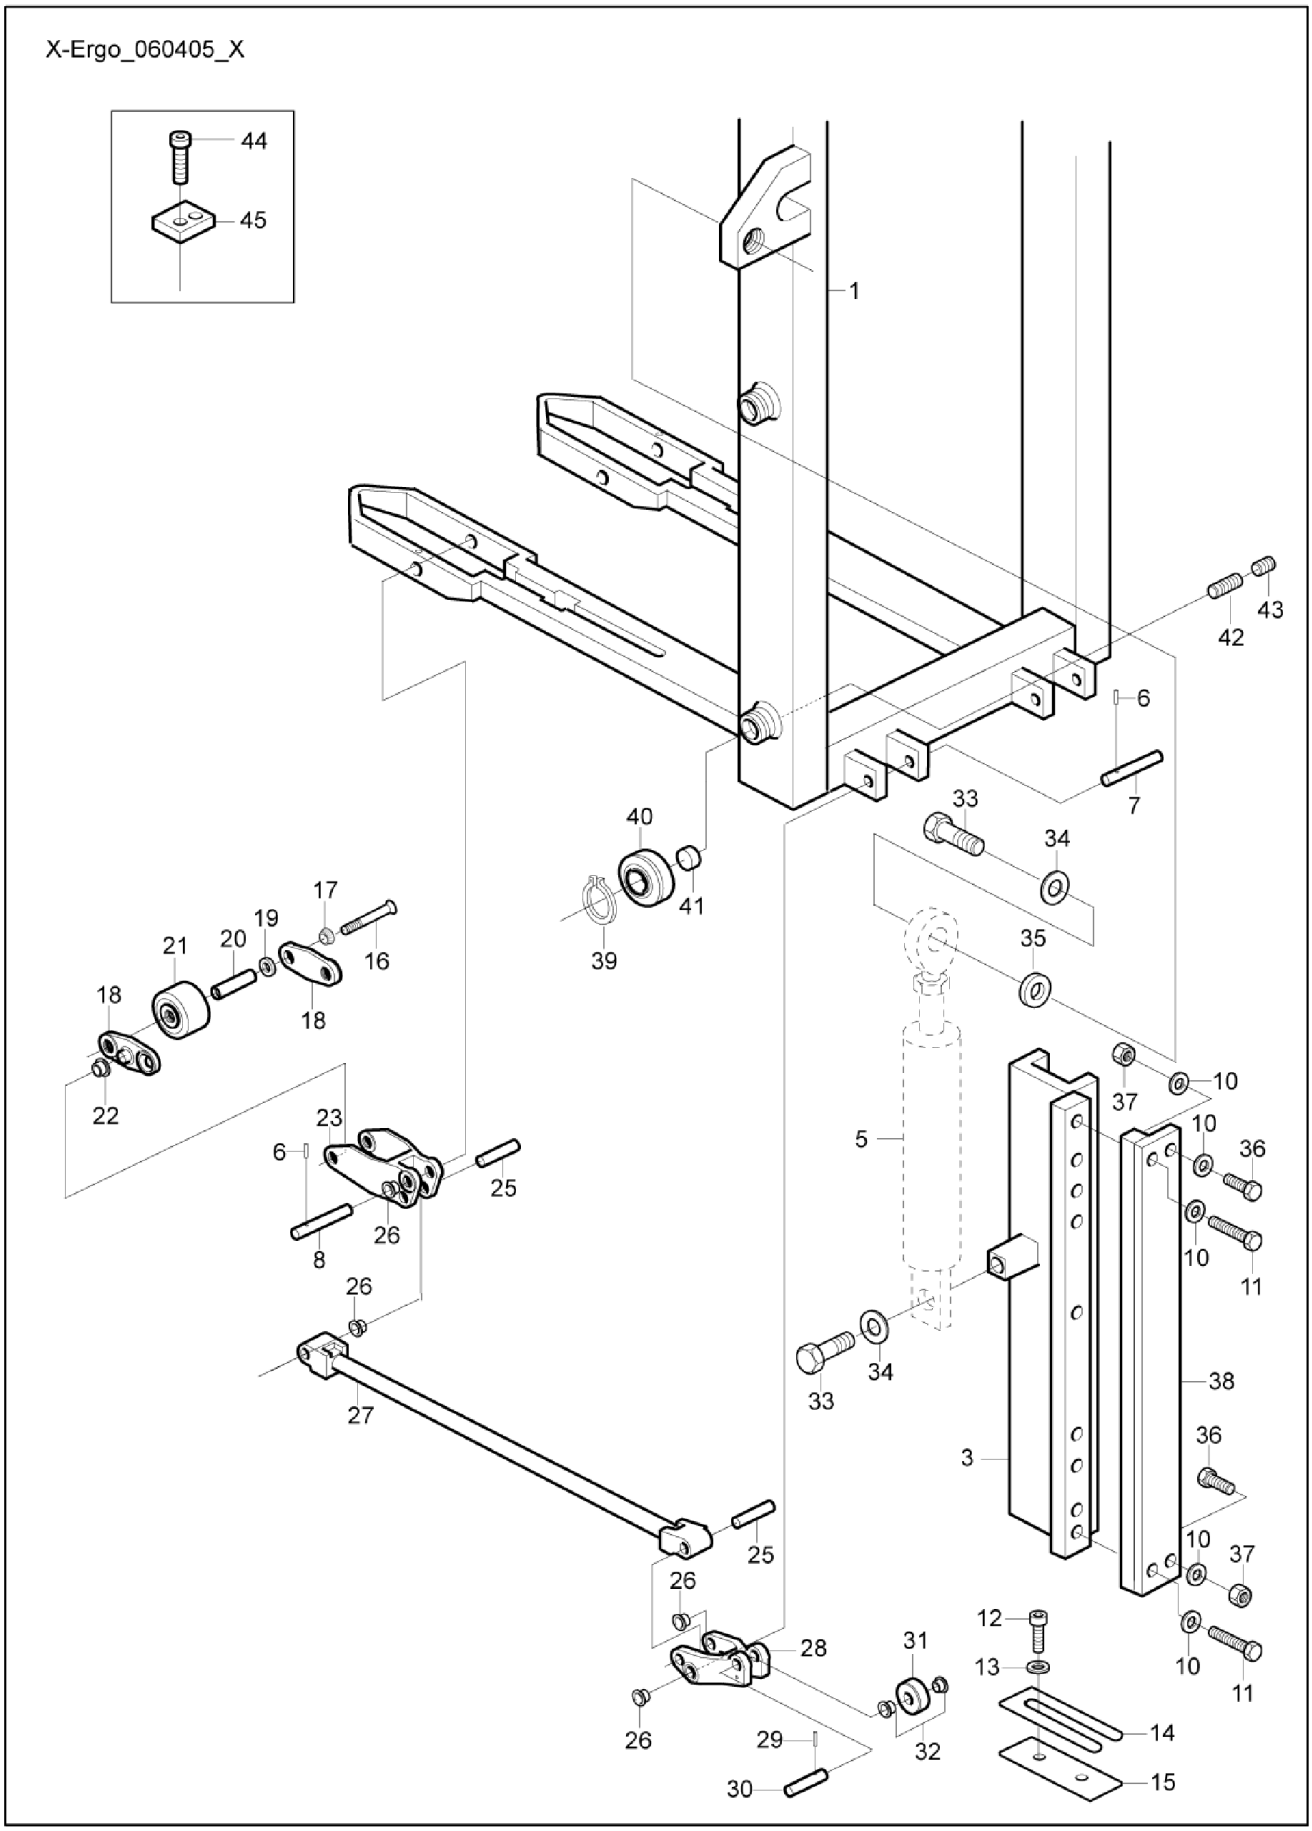
X-Ergo_060405_X
44
45
1
42
43
6
7
33
34
40
41
39
35
17
19
21
20
16
18
18
22
37
10
5
23
6
25
26
8
10
36
10
11
26
27
33
34
38
3
36
25
10
37
26
12
13
28
31
10
11
26
29
32
14
30
15

Mast/Höjbara stödben X-Ergo 160 STH/STVH/STFVH/SDTFVH - Mast/Adjustable straddle legs X-Ergo 160 STH/STVH/STFVH/SDTFVH
Mast/radarme X-Ergo 160 STH/STVH/STFVH/SDTFVH - Mât/longerons X-Ergo 160 STH/STVH/STFVH/SDTFVH

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Mast - stödben *STV, STFV, SDTFV*	Mast - straddl. legs	Mast - radarme	Mât - longerons	1	106455
	Mast - stödben *ST*	Mast - straddl. legs	Mast - radarme	Mât - longerons	1	106468
3	Gejd, vänster	Guide, left	Mastprofil, links	Guide, de gauche	1	106364
	Gejd, höger	Guide, right	Mastprofil, rechts	Guide, de droite	1	106365
4	Distans	Spacer	Abstandhalter	Entretoise	2	106376
5	*See section 9*				1	
6	Spännstift	Roll pin	Spannstift	Goupille	4	012942
7	Axel	Axle	Achse	Axe	2	078257
8	Axel	Axle	Achse	Axe	2	059630
9	Spårring SGA 20	Circlip	Nutring	Circlip	4	012642
10	Låsbricka	Locking washer	Sicherungsscheibe	Rondelle de blocage	4	008550
11	Skruv M6S 16x90	Screw M6S 16x90	Schraube	Vis	4	010350
12	Skruv M6S M6x30	Screw M6S M6x30	Schraube	Vis	4	010103
13	Bricka BRB	Flat washer	Scheibe	Rondelle	4	012373
14	Shim	Shim	Einstellscheibe	Cale de réglage	6	104320
	Shim *Senior*	Shim	Einstellscheibe	Cale de réglage	6	104701
15	Förslitningsplåt	Wear plate	Abstandhalter	Entretoise	2	104319
	Förslitningsplåt *Senior*	Wear plate	Abstandhalter	Entretoise	2	104700
16	Skruv MF6S 12x100	Screw MF6S 12x100	Schraube	Vis	4	011159
17	Bricka AZV	Washer	Scheibe	Rondelle	4	012319
18	Hjulgavel	Wheel end	Stirnwand	Paroi de roue	4	100861
19	Shim *Use as many as necessary*	Shim	Einstellscheibe	Cale de réglage	2	014774
20	Distans	Spacer	Abstandhalter	Entretoise	4	100863
21	Hjul komplett	Wheel, assy.	Rad, kompl.	Roue, compl.	4	100860
22	Bussning	Bushing	Buchse	Douille	4	100862
23	Hjulgaffel	Wheel fork	Radgabel	Fourche de roue	2	106357
25	Axel	Axle	Achse	Axe	4	106488
26	Bussning	Bushing	Buchse	Douille	16	100043
27	Dragstång	Connecting rod	Zugstange	Tringle	2	106355
28	Länkarm	Link arm	Gelenkarm	Bras d'articulation	2	106356
29	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	2	012923
30	Axel	Axle	Achse	Axe	2	106358
31	Rulle	Roller	Rolle	Poulie	2	100527
32	Bussning	Bushing	Buchse	Douille	4	100042
33	Skruv M6S 20x55	Screw M6S 20x55	Schraube	Vis	4	010365
34	Bricka	Washer	Scheibe	Rondelle	4	012392
35	Distans	Spacer	Abstandhalter	Entretoise	2	100077
36	Skruv M6S 16x55	Screw M6S 16x55	Schraube	Vis	4	010345
37	Mutter M6M16	Nut	Mutter	Ecrou	4	012128
38	Gejdfäste	Holder	Halter	Attache	2	106495
39	Spårring	Circlip	Nutring	Circlip	4	012667

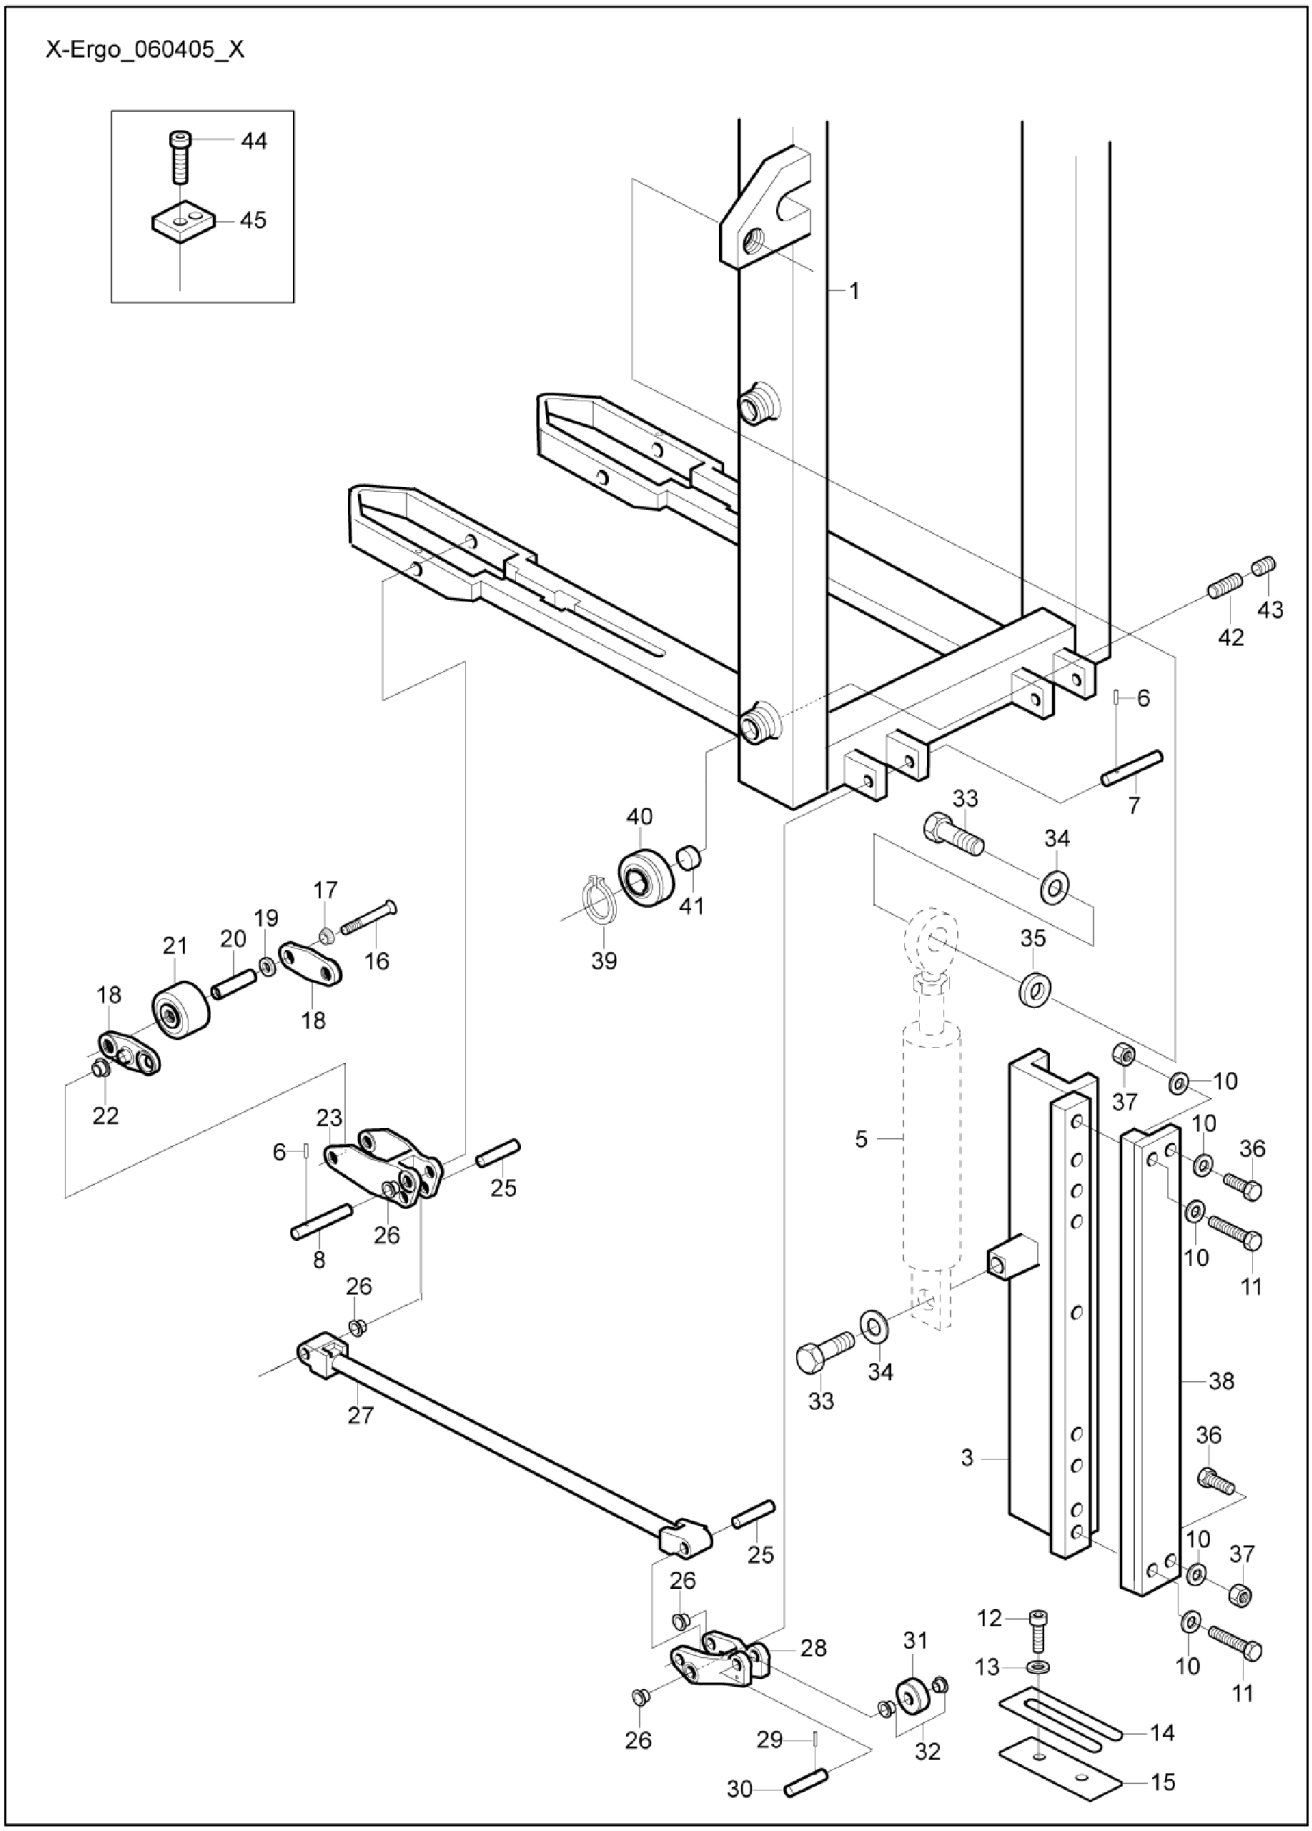
X-Ergo_060405_X
44
45
1
42
43
6
7
33
34
40
41
39
35
17
19
21
20
16
18
18
22
37
10
5
23
6
25
26
8
10
36
10
11
26
27
34
33
38
3
36
25
10
37
26
12
13
28
31
10
11
26
29
32
14
30
15

Mast/Höjbara stödben X-Ergo 160 STH/STVH/STFVH/SDTFVH - Mast/Adjustable straddle legs X-Ergo 160 STH/STVH/STFVH/SDTFVH
Mast/radarme X-Ergo 160 STH/STVH/STFVH/SDTFVH - Mât/longerons X-Ergo 160 STH/STVH/STFVH/SDTFVH

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
40	Stödrulle Ø78.2	Thrust roller	Stützrolle	Galet	4	105307
41	Bussning	Bushing	Buchse	Douille	4	105306
42	Stoppskruv	Locking screw	Stoppschraube	Vis d'arrêt	4	011846
43	Stoppskruv	Locking screw	Stoppschraube	Vis d'arrêt	4	011845
44	Skruv MC6S 8x35	Screw MC6S 8x35	Schraube	Vis	2	010641
45	Dämpare	Damper	Dämpfer	Modérateur	1	060215

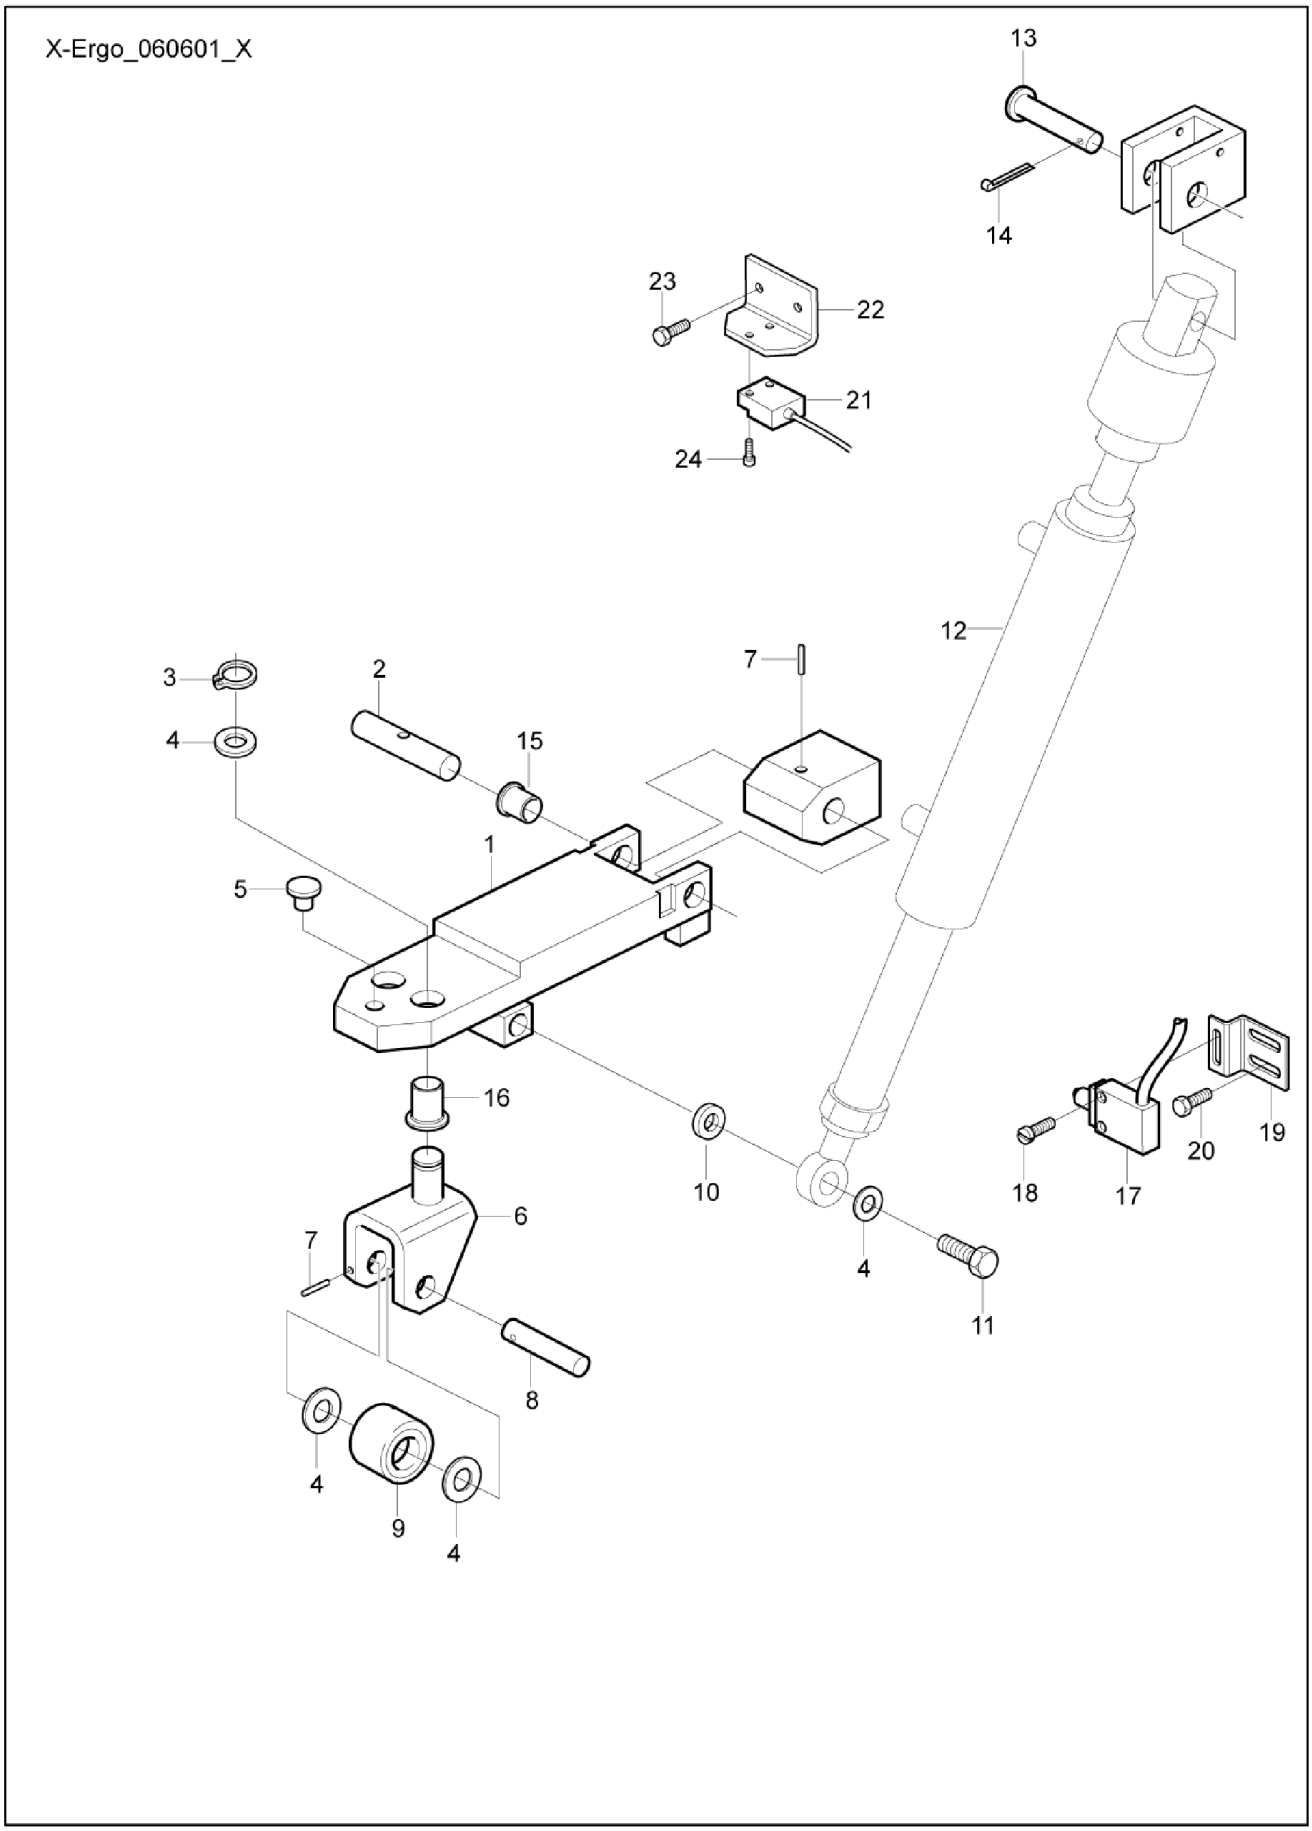
X-Ergo_060601_X
13
14
23
22
21
24
12
7
3
2
4
15
1
5
16
10
4
11
18
17
20
19
7
6
8
4
9
4

Stabilisatorer X-Ergo - Stabilizors X-Ergo
Stabilisatoren X-Ergo - Stabilisateurs X-Ergo

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Stabilisatorarm	Stabilisator arm	Stabilisatorarm	Bras de stabilisateur	2	106388
2	Axel	Axle	Achse	Axe	2	106392
3	Spårring SGA 20	Circlip	Nutring	Circlip	2	012642
4	Bricka	Washer	Scheibe	Rondelle	8	012416
5	Dämpare	Damper	Dämpfer	Modérateur	2	001385
6	Länkhjulsbygel	Castor fork	Radträger	Sup. roue directrice	2	106383
7	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	4	012923
8	Axel	Axle	Achse	Axe	2	057710
9	Hjul, nylon	Wheel, nylon	Rad, nylon	Roue, nylon	2	106391
10	Distans	Spacer	Abstandhalter	Entretoise	2	100077
11	Skruv M6S 20x55	Screw M6S 20x55	Schraube	Vis	2	010365
12	Stabilisatorcylinder	Stabilizer cylinder	Zylinder	Vérin	2	106395
13	Bult HCB 12x55	Bolt	Bolzen	Boulon	2	013490
14	Saxpinne	Split pin	Splint	Goupille fendue	2	013136
15	Bussning	Bushing	Buchse	Douille	4	100042
16	Bussning	Bushing	Buchse	Douille	4	100043
17	Gränslägesbr. m kabl.	Limit switch incl. cabel	Endshalter inkl. kabel	Interrupteur, voir câble	2	104739
18	Skruv MCS M4x16 -4.8	Screw MCS M4x16 -4.8	Schraube	Vis	4	011296
19	Fäste, mikrobrytare	Holder, micro switch	Halter	Attache	2	100799
20	Skruv MF6S 6x8	Screw MF6S 6x8	Schraube	Vis	4	010980
21	Induktiv givare	Inductive sensor	Induktivgeber	Capteur par induction	2	104793
22	Hållare	Bracket	Konsole	Support	2	104847
23	Skruv M6S 6x10	Screw M6S 6x10	Schraube	Vis	4	010087
24	Skruv MCS 4x12	Screw Mc6s 4x12	Schraube	Vis	4	011292

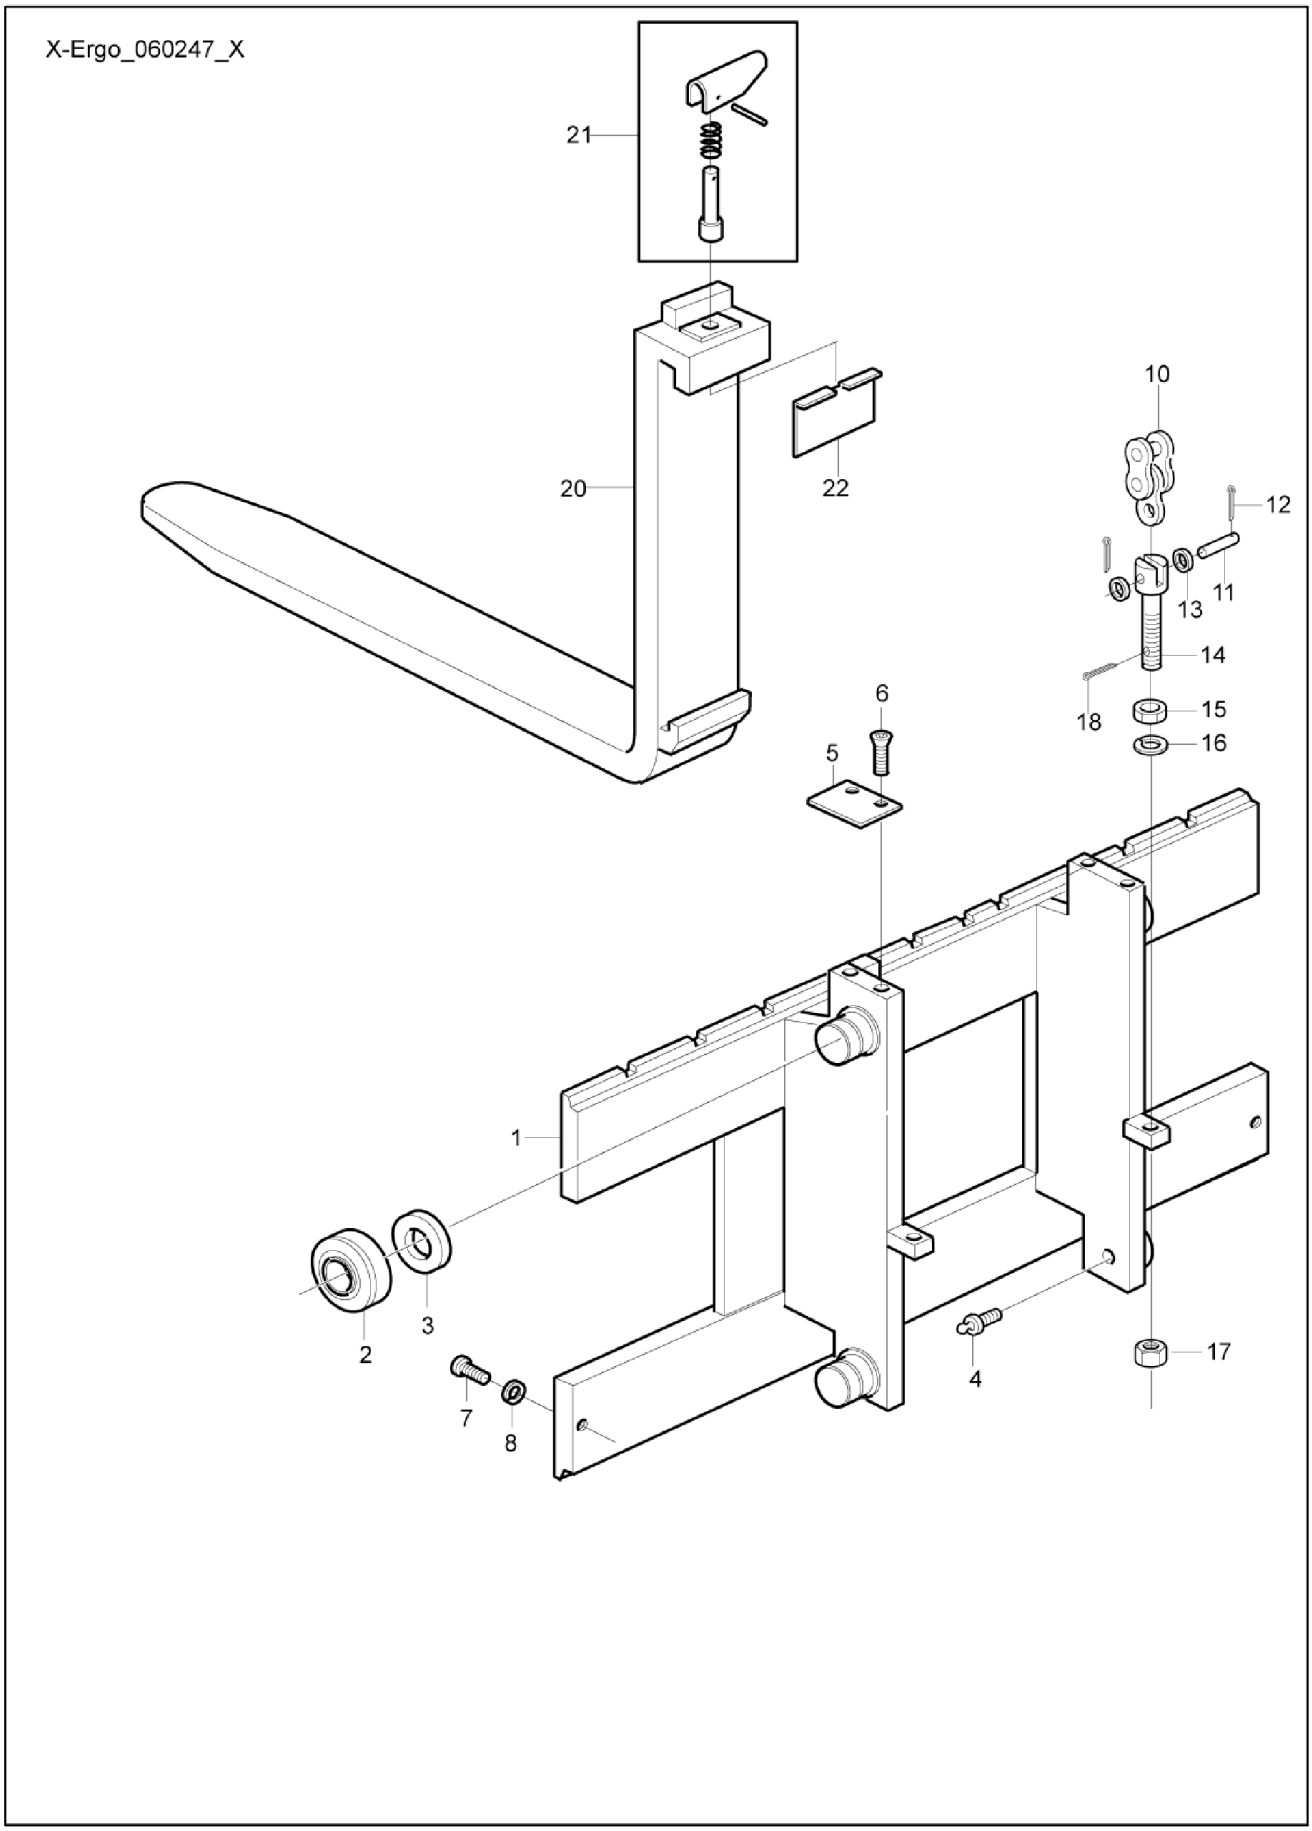
X-Ergo_060247_X
21
20
22
10
12
11
13
14
18
15
16
6
5
1
2
3
7
8
4
17

Gaffelvagn X-Ergo 160 TV - Fork carriage X-Ergo 160 TV
Gabelschlitten X-Ergo 160 TV - Chariot de levage X-Ergo 160 TV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Gaffelvagn *BTV*	Fork carriage	Schlitten	Tablier de fourches	1	105520
2	Lastrulle Ø78.2	Load roller	Lastrolle	Poulie de charge	4	105036
	Lastrulle Ø78.6	Load roller	Lastrolle	Poulie de charge	4	105037
	Lastrulle Ø79.0	Load roller	Lastrolle	Poulie de charge	4	106086
3	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	4	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	4	105280
4	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	105287
5	Klämskydd	Protective plate	Schutzblech	Protection	2	105147
6	Skruv MFX-TT 6x16	Screw MFX-TT 6x16	Schraube	Vis	4	014785
7	Skruv MC6S 10x20	Screw MC6S 10x20	Schraube	Vis	2	010691
8	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012279
10	Lyftkedja	Lift chain	Hubkette	Chaîne de levage	2	105215
	Lyftkedja, kpl *Including pos. 10-14*	Lift chain, assy	Hubkette, kpl	Chaîne de levage, cpl	2	105517
11	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tête	2	105216
12	Saxpinne	Split pin	Splint	Goupille fendue	4	013103
13	Bricka	Washer	Scheibe	Rondelle	4	012371
14	Kedjebult	Chain bolt	Kettenbolzen	Chape de chaîne	2	105214
15	Mutter Ml6m 16	Nut Ml6m 16	Mutter	Ecrou	2	012150
16	Fjäderbricka	Spring washer	Federring	Rondelle grower	2	012289
17	Mutter M6M16	Nut	Mutter	Ecrou	2	012128
18	Saxpinne SP	Split pin	Splint	Goupille fendue	1	013121
20	Gaffel	Fork	Gabel	Fourche	2	066038
21	Låsanordning, kpl	Locking dev. assy.	Verschluss kompl.	Verrouillage, cpl.	2	071955
22	Shim, 1mm	Shim	Einstellscheibe	Cale de réglage	2	068486
	Shim, 1.5mm	Shim	Einstellscheibe	Cale de réglage	2	068487

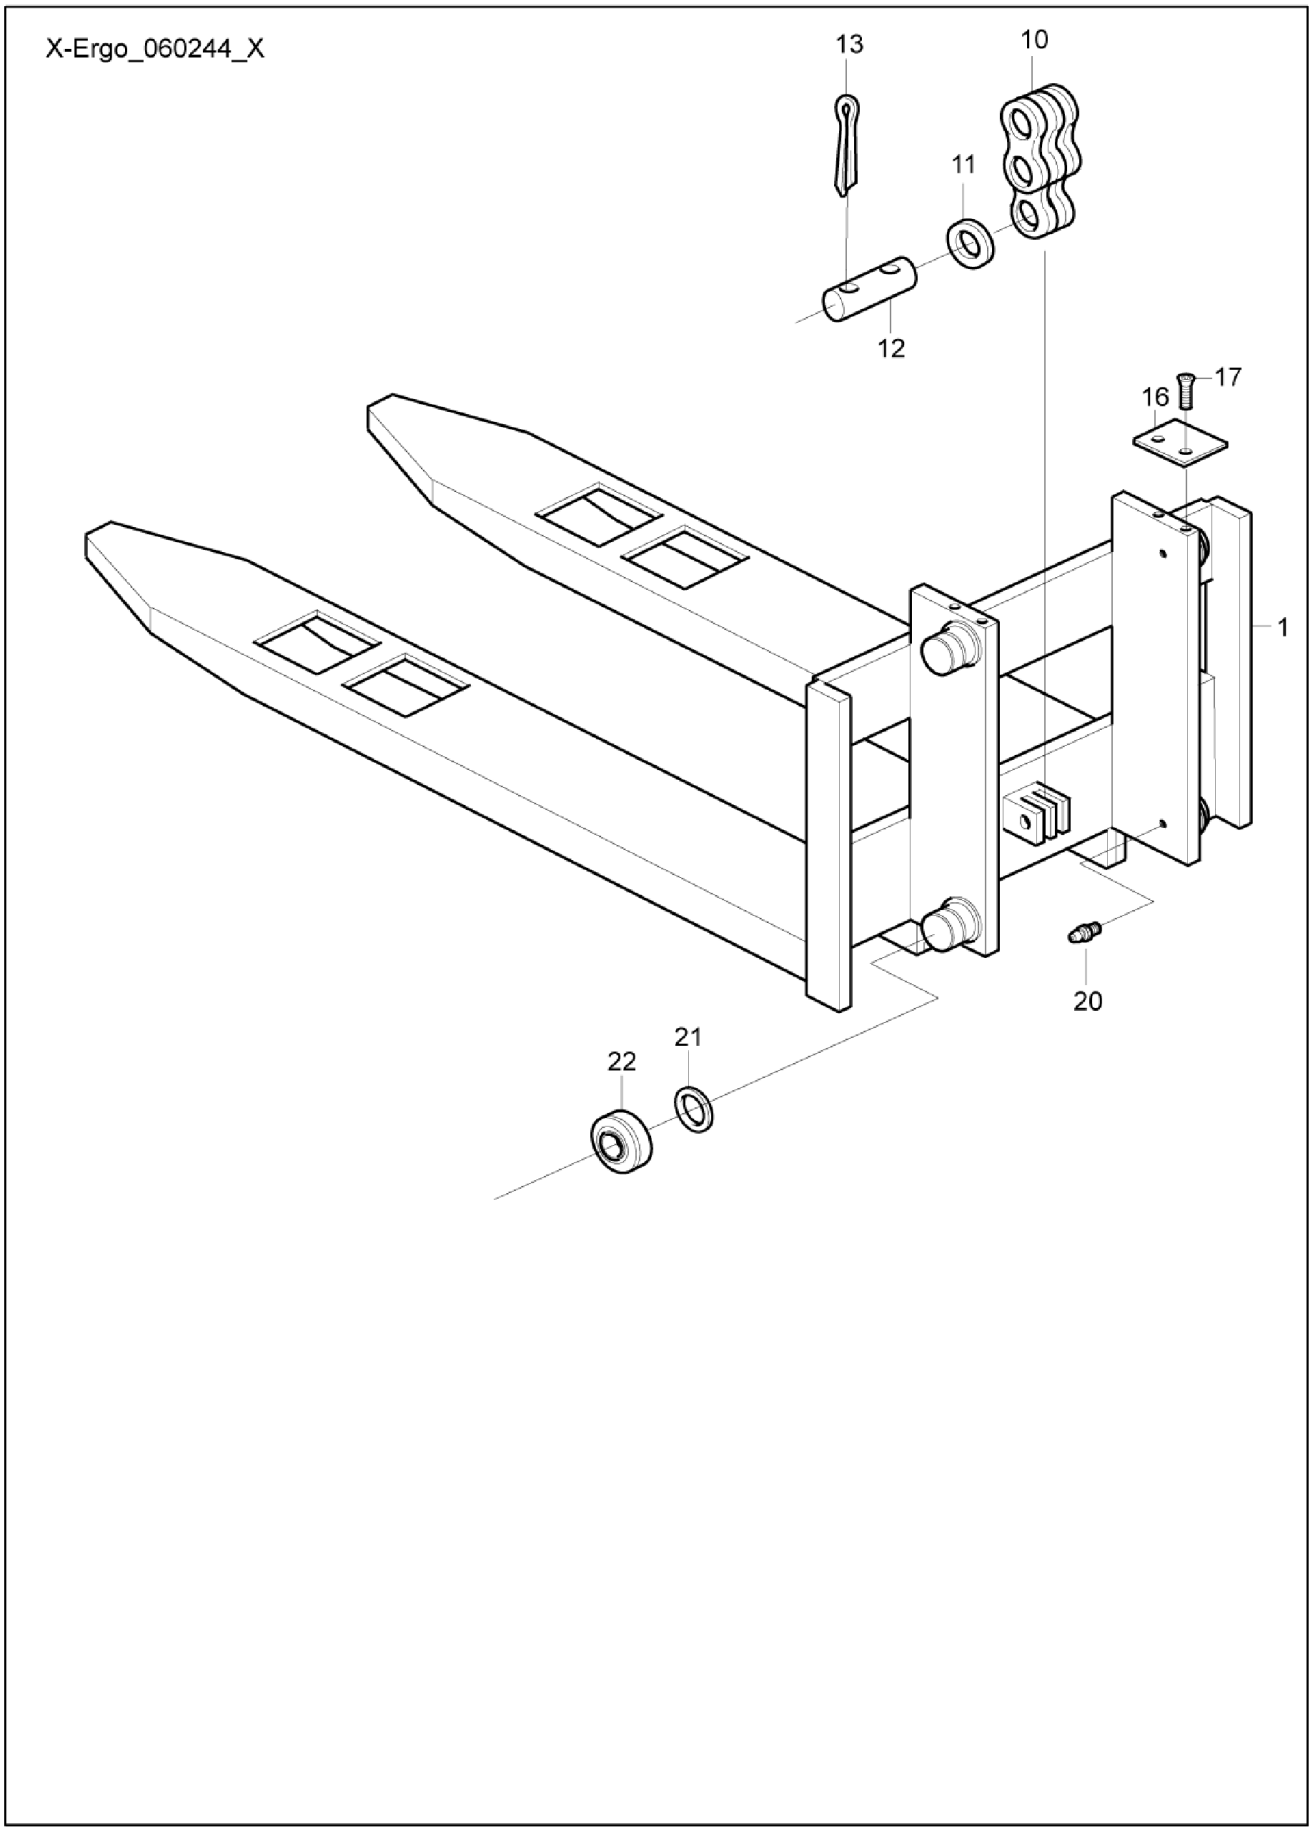
X-Ergo_060244_X
13
10
11
12
16
17
1
20
21
22

Gaffelvagn X/XML-Ergo 160 ST/STFV/SDTFV - Fork carriage X-Ergo 160 ST/STFV/SDTFV
Gabelschlitten X-Ergo 160 ST/STFV/SDTFV - Chariot de levage X-Ergo 160 ST/STFV/SDTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Gaffelvagn *SDTFV*	Forkcarriage	Schlitten	Tablier de fourches	1	105139
	Gaffelvagn *STFV*	Fork carriage	Schlitten	Tablier de fourches	1	105200
	Gaffelvagn *SDTFV-H*	Fork carriage	Schlitten	Tablier de fourches	1	105443
	Gaffelvagn *ST*	Fork carriage	Schlitten	Tablier de fourches	1	105458
	Gaffelvagn *STFV-H*	Fork carriage	Schlitten	Tablier de fourches	1	105502
	Gaffelvagn *ST-H*	Fork carriage	Schlitten	Tablier de fourches	1	105526
10	*See section 9*				1	
11	Bricka BRB	Washer	Scheibe	Rondelle	2	012375
12	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tète	2	066077
13	Saxpinne SP	Split pin	Splint	Goupille fendue	2	013117
16	Klämskydd	Protective plate	Schutzblech	Protection	2	105147
17	Skruv MFX-TT 6x16	Screw MFX-TT 6x16	Schraube	Vis	4	014785
20	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	105287
21	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	8	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	4	105280
22	Lastrulle Ø78.2	Load roller	Lastrolle	Poulie de charge	4	105036
	Lastrulle Ø78.6	Load roller	Lastrolle	Poulie de charge	4	105037
	Lastrulle Ø79.0	Load roller	Lastrolle	Poulie de charge	4	106086

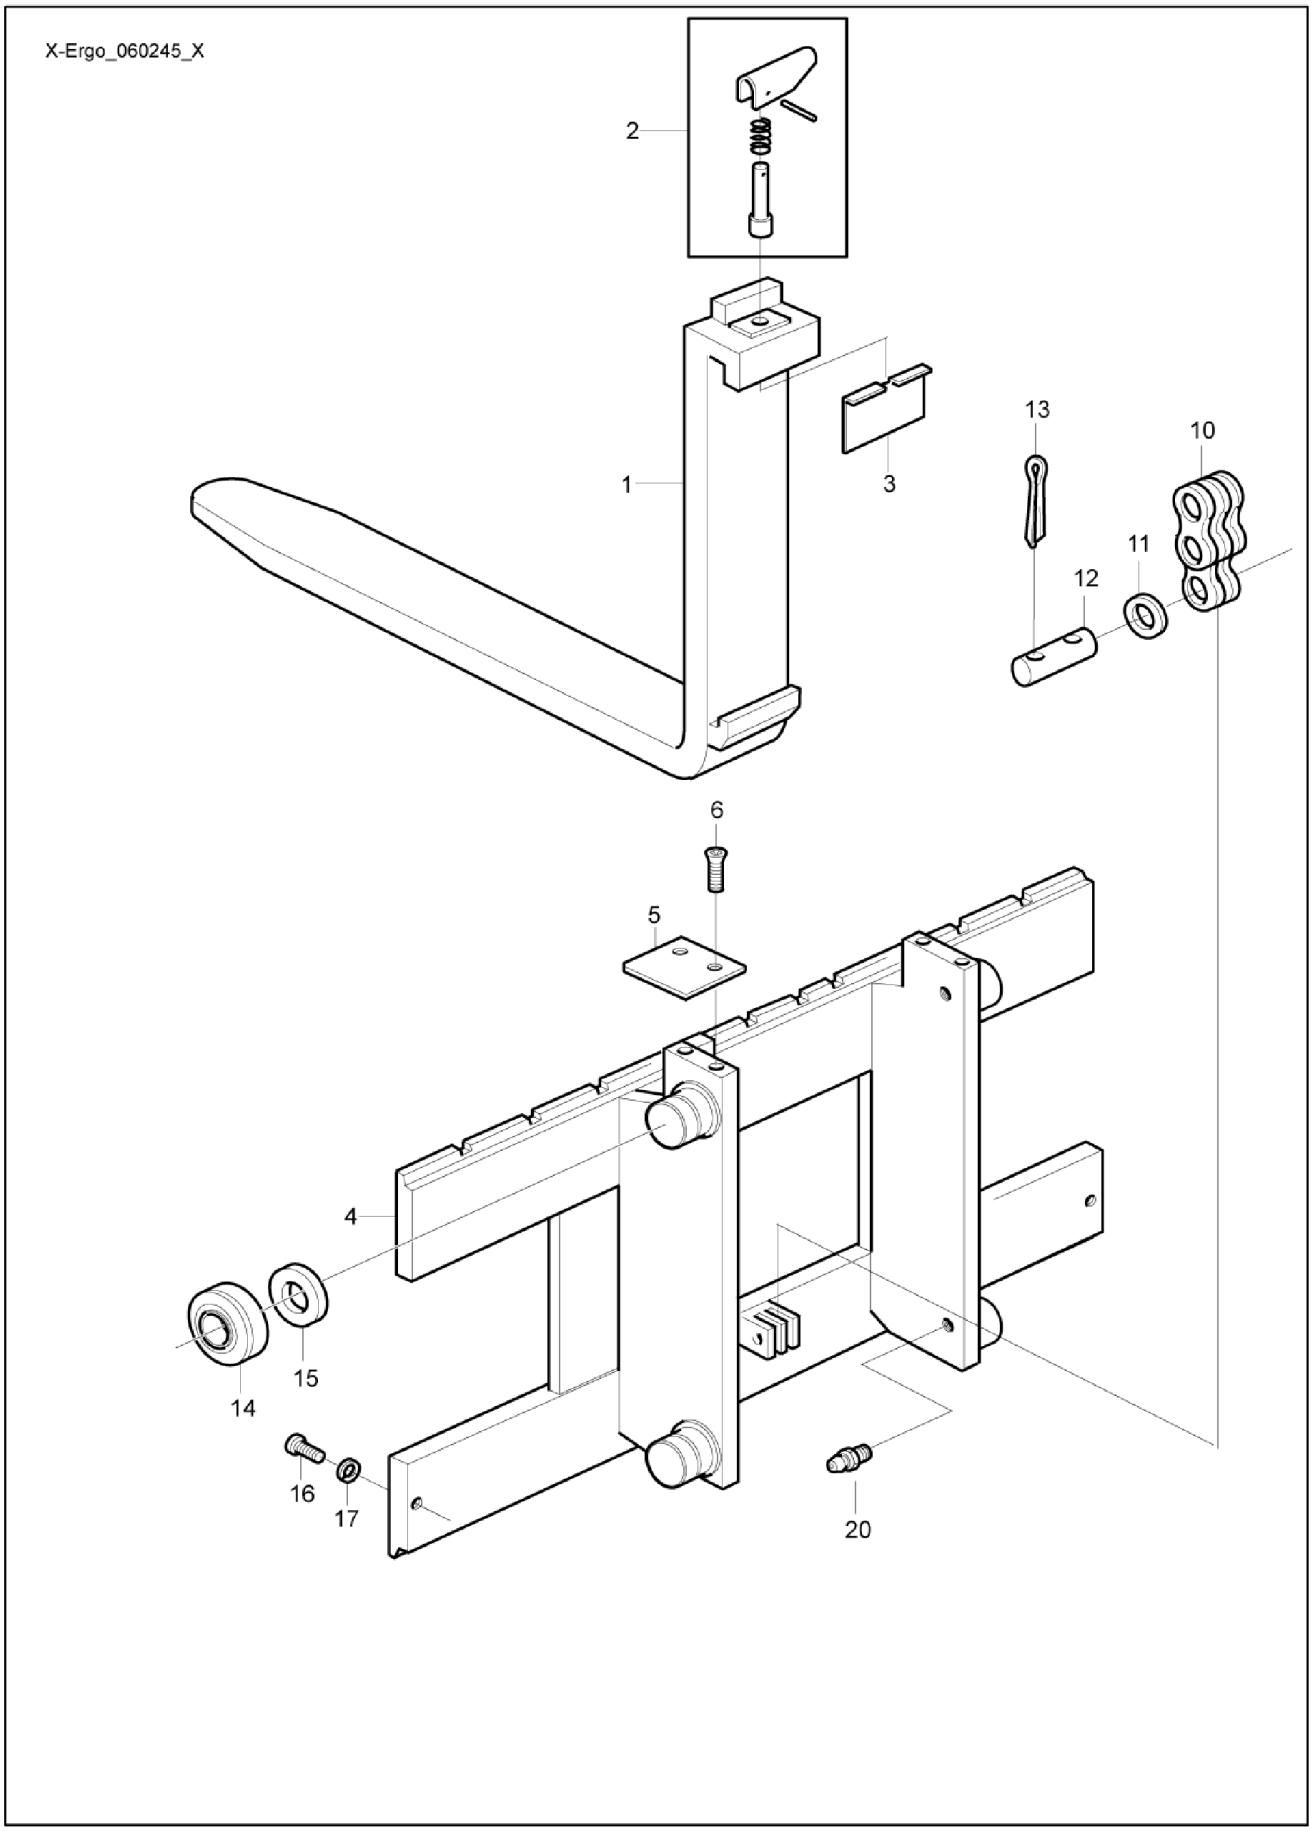
X-Ergo_060245_X
2
1
3
13
10
11
12
6
5
4
15
14
16
17
20

Gaffelvagn X-Ergo 160 BT/BTFV/BDTFV - Fork carriage X-Ergo 160 BT/BTFV/BDTFV
Gabelschlitten X-Ergo 160 BT/BTFV/BDTFV - Chariot de levage X-Ergo 160 BT/BTFV/BDTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Gaffel	Fork	Gabel	Fourche	2	066038
2	Låsanordning, kpl	Locking dev. assy.	Verschluss kompl.	Verrouillage, cpl.	2	071955
3	Shim, 1mm	Shim	Einstellscheibe	Cale de réglage	2	068486
	Shim, 1.5mm	Shim	Einstellscheibe	Cale de réglage	2	068487
4	Gaffelvagn, smal *BDTFV*	Fork carriage	Schlitten	Tablier de fourches	1	105081
	Gaffelvagn *BTFV*	Fork carriage	Schlitten	Tablier de fourches	1	105506
	Gaffelvagn *BT*	Fork carriage	Schlitten	Tablier de fourches	1	105527
5	Klämskydd	Protective plate	Schutzblech	Protection	2	105147
6	Skruv MFX-TT 6x16	Screw MFX-TT 6x16	Schraube	Vis	4	014785
10	*See section 9*				2	
11	Bricka BRB	Washer	Scheibe	Rondelle	2	012375
12	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tète	1	066077
13	Saxpinne SP	Split pin	Splint	Goupille fendue	2	013117
14	Lastrulle Ø78.2	Load roller	Lastrolle	Poulie de charge	4	105036
	Lastrulle Ø78.6	Load roller	Lastrolle	Poulie de charge	4	105037
	Lastrulle Ø79.0	Load roller	Lastrolle	Poulie de charge	4	106086
15	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	8	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	4	105280
16	Skruv MC6S 10x20	Screw MC6S 10x20	Schraube	Vis	2	010691
17	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012279
20	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	105287

https://truckmanualshub.com/

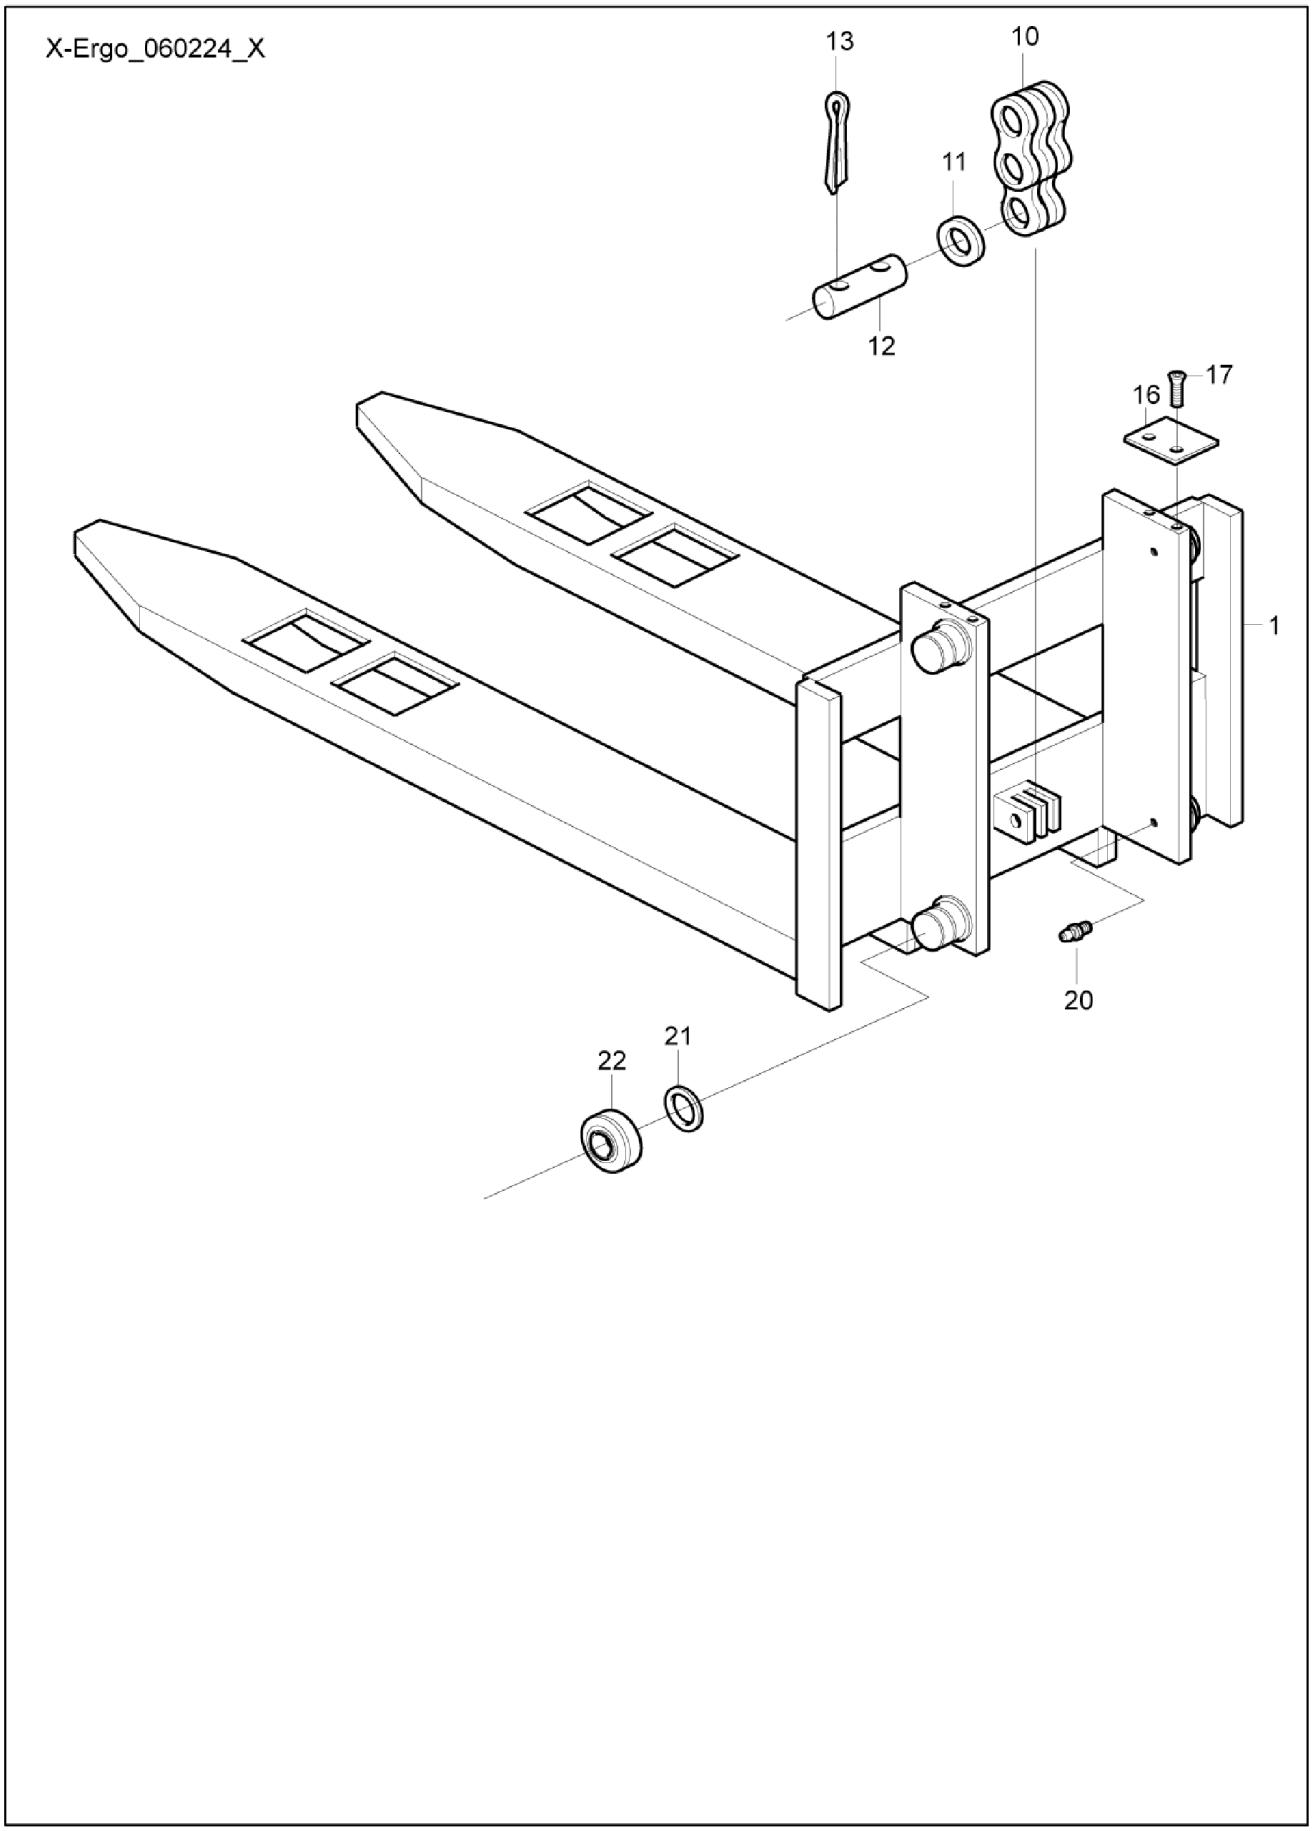

Gaffelvagn X-Ergo 200 STFV - Fork carriage X-Ergo 200 STFV
Gabelschlitten X-Ergo 200 STFV - Chariot de levage X-Ergo 200 STFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Gaffelvagn *STFV*	Fork carriage	Schlitten	Tablier de fourches	1	105962
10	*See section 9*				1	
11	Bricka BRB	Washer	Scheibe	Rondelle	2	012375
12	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tète	2	066077
13	Saxpinne SP	Split pin	Splint	Goupille fendue	2	013117
16	Klämskydd	Protective plate	Schutzblech	Protection	2	105147
17	Skruv MFX-TT 6x16	Screw MFX-TT 6x16	Schraube	Vis	4	014785
20	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	105287
21	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	8	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	4	105280
22	Lastrulle Ø78.2	Load roller	Lastrolle	Poulie de charge	4	105036
	Lastrulle Ø78.6	Load roller	Lastrolle	Poulie de charge	4	105037
	Lastrulle Ø79.0	Load roller	Lastrolle	Poulie de charge	4	106086
	Lastrulle Ø79.4	Load roller	Lastrolle	Poulie de charge	4	106088

https://truckmanualshub.com/

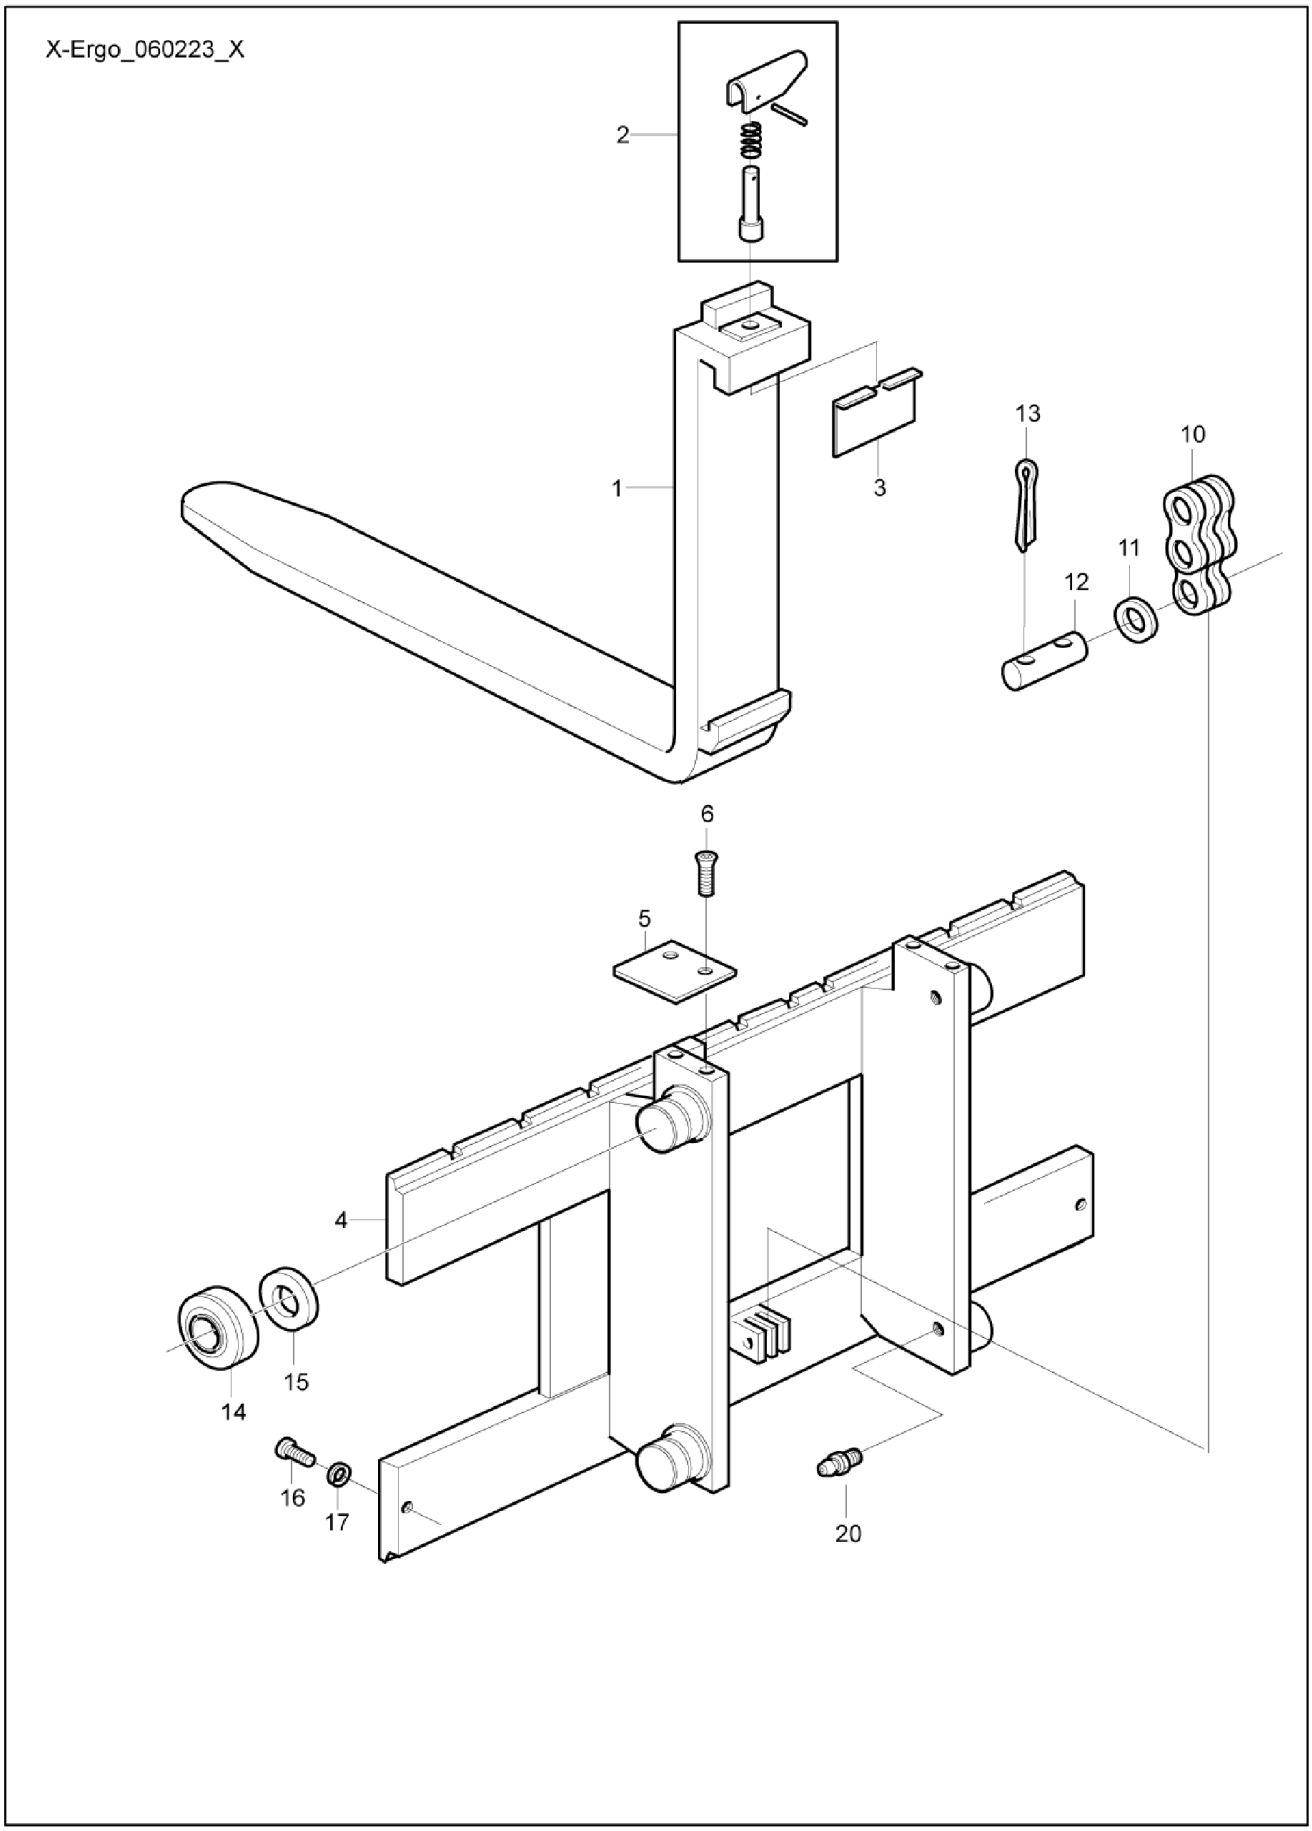

Gaffelvagn X-Ergo 200 BTFV - Fork carriage X-Ergo 200 BTFV
Gabelschlitten X-Ergo 200 BTFV - Chariot de levage X-Ergo 200 BTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Gaffel	Fork	Gabel	Fourche	2	066038
2	Låsanordning, kpl	Locking dev. assy.	Verschluss kompl.	Verrouillage, cpl.	2	071955
3	Shim, 1mm	Shim	Einstellscheibe	Cale de réglage	2	068486
	Shim, 1.5mm	Shim	Einstellscheibe	Cale de réglage	2	068487
4	Gaffelvagn *BTFV*	Fork carriage	Schlitten	Tablier de fourches	1	105964
5	Klämskydd	Protection	Gehäuse	Carter	2	105976
6	Skruv MFX-TT 6x16	Screw MFX-TT 6x16	Schraube	Vis	4	014785
10	*See section 9*				2	
11	Bricka BRB	Washer	Scheibe	Rondelle	2	012375
12	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tète	1	066077
13	Saxpinne SP	Split pin	Splint	Goupille fendue	2	013117
14	Lastrulle Ø78.2	Load roller	Lastrolle	Poulie de charge	4	105036
	Lastrulle Ø78.6	Load roller	Lastrolle	Poulie de charge	4	105037
	Lastrulle Ø79.0	Load roller	Lastrolle	Poulie de charge	4	106086
	Lastrulle Ø79.4	Load roller	Lastrolle	Poulie de charge	4	106088
15	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	8	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	4	105280
16	Skruv MC6S 10x20	Screw MC6S 10x20	Schraube	Vis	2	010691
17	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012279
20	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	105287

https://truckmanualshub.com/

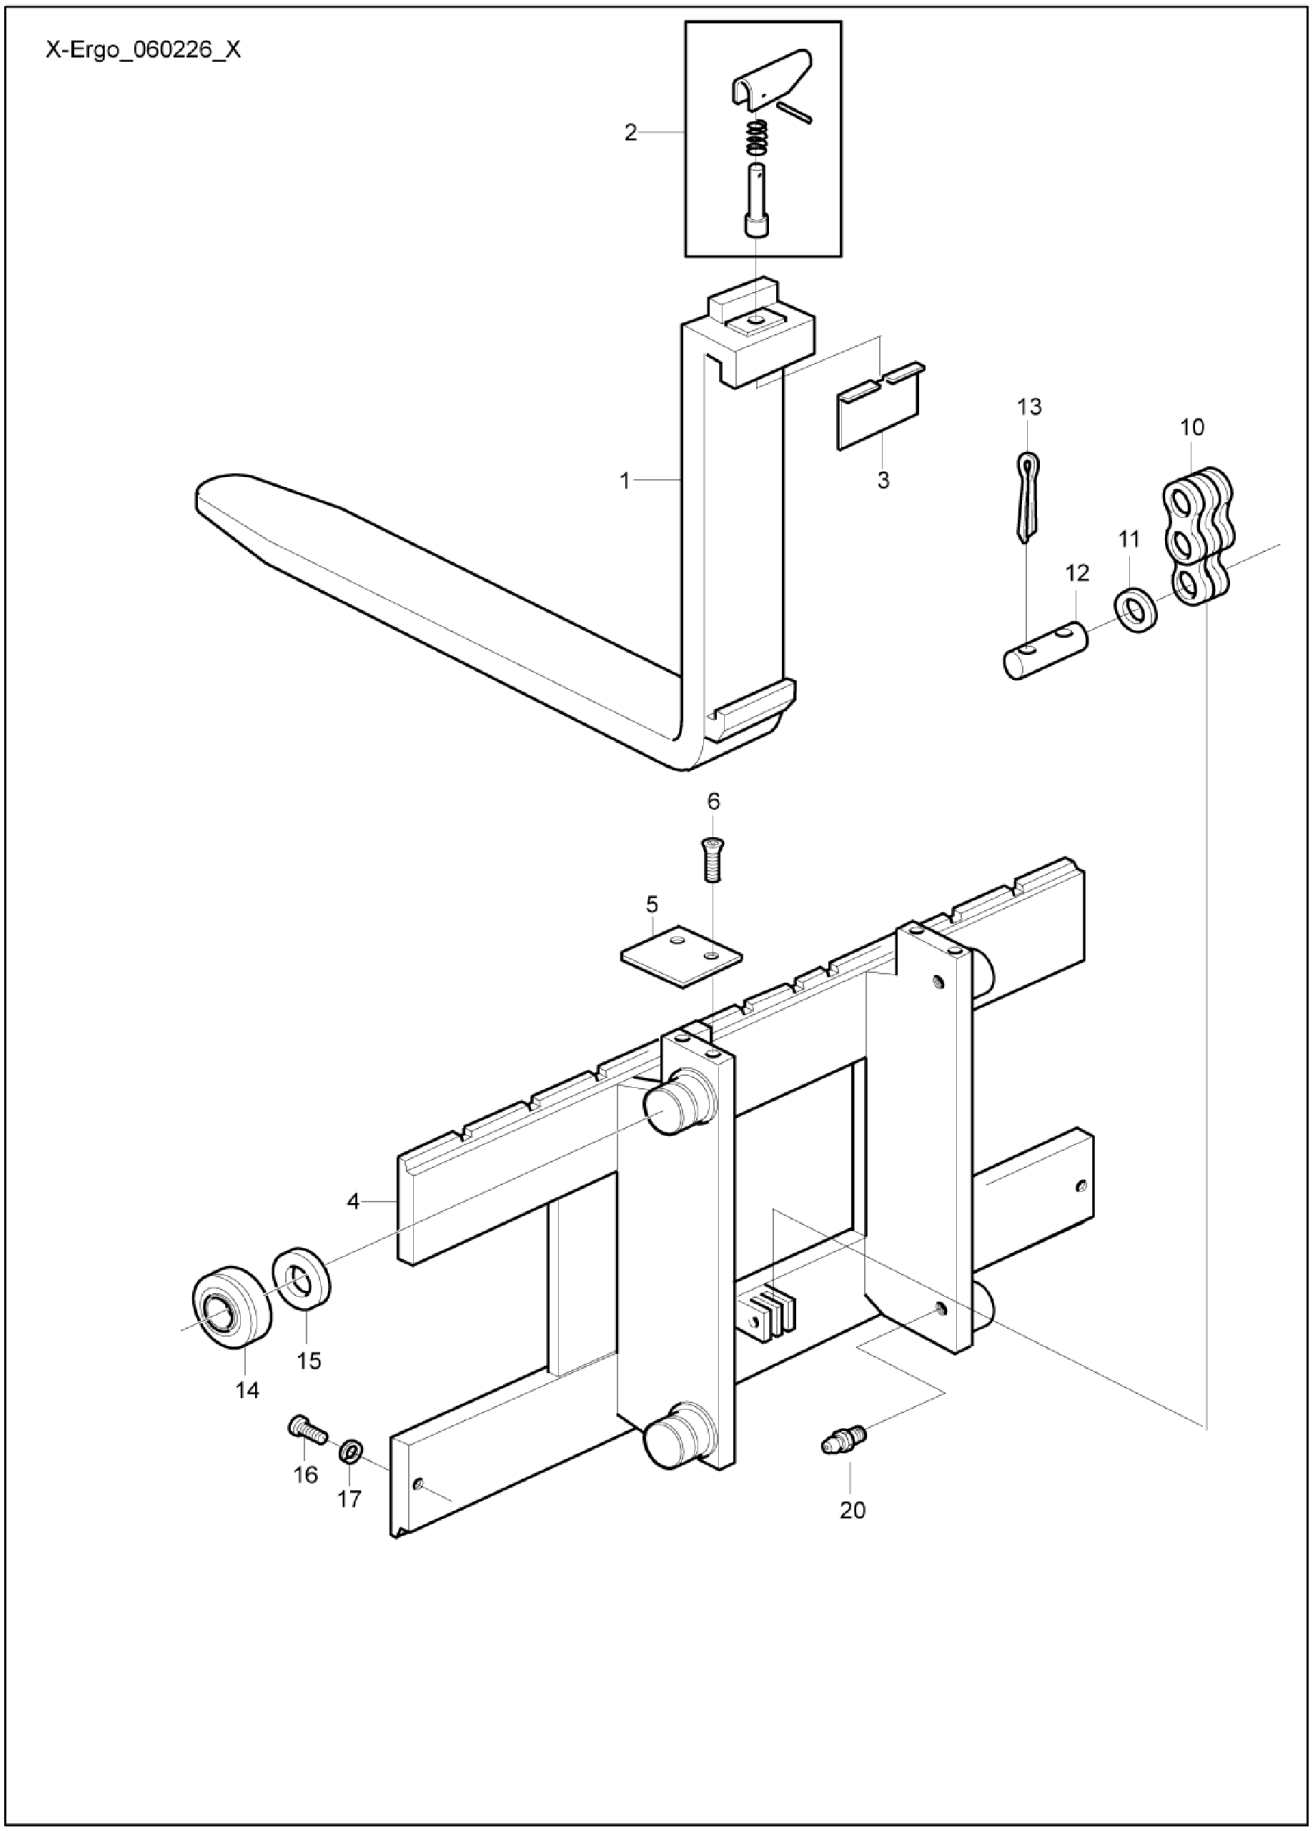

Gaffelvagn X-Ergo 200 SDTFV - Fork carriage X-Ergo 200 SDTFV
Gabelschlitten X-Ergo 200 SDTFV - Chariot de levage X-Ergo 200 SDTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Gaffel	Fork	Gabel	Fourche	2	066038
2	Låsanordning, kpl	Locking dev. assy.	Verschluss kompl.	Verrouillage, cpl.	2	071955
3	Shim, 1mm	Shim	Einstellscheibe	Cale de réglage	2	068486
	Shim, 1.5mm	Shim	Einstellscheibe	Cale de réglage	2	068487
4	Gaffelvagn, smal *SDTFV*	Fork carriage	Schlitten	Tablier de fourches	1	105831
5	Klämskydd	Protection	Gehäuse	Carter	2	105976
6	Skruv MFX-TT 6x16	Screw MFX-TT 6x16	Schraube	Vis	4	014785
10	*See section 9*				2	
11	Bricka BRB	Washer	Scheibe	Rondelle	2	012375
12	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tête	1	066076
13	Saxpinne SP	Split pin	Splint	Goupille fendue	2	013117
14	Lastrulle Ø108	Load roller	Lastrolle	Poulie de charge	4	105318
	Lastrulle Ø108.5	Load roller	Lastrolle	Poulie de charge	4	105319
	Lastrulle Ø107	Load roller	Lastrolle	Poulie de charge	4	105328
	Lastrulle Ø107.5	Load roller	Lastrolle	Poulie de charge	4	105329
15	Distansbr. 1mm	Spacer ring	Distanzring	Rondel.décartement	4	105469
	Distansbr. 0.5mm	Spacer ring	Distanzring	Rondel.décartement	4	105470
16	Skruv MC6S 8x12	Screw MC6S 8x12	Schraube	Vis	2	010625
17	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	2	012275
20	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	105287

X-Ergo_060227_X

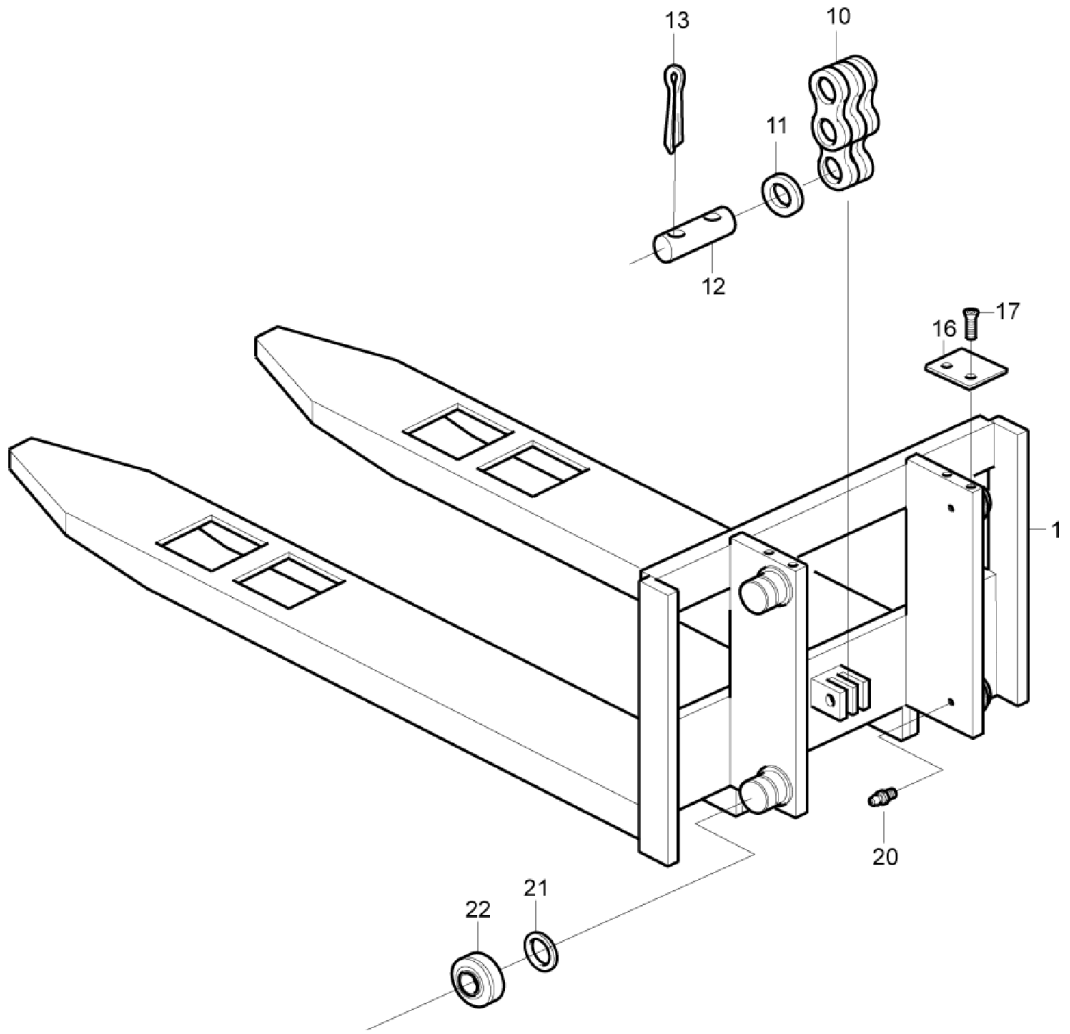

Gaffelvagn X-Ergo 200 BDTFV - Fork carriage X-Ergo 200 BDTFV
Gabelschlitten X-Ergo 200 BDTFV - Chariot de levage X-Ergo 200 BDTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Gaffelvagn	Fork carriage	Schlitten	Tablier de fourches	1	105960
10	*See section 9*				1	
11	Bricka BRB	Washer	Scheibe	Rondelle	2	012375
12	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tète	2	066077
13	Saxpinne SP	Split pin	Splint	Goupille fendue	2	013117
16	Klämskydd	Protective plate	Schutzblech	Protection	2	105147
17	Skruv MFX-TT 6x16	Screw MFX-TT 6x16	Schraube	Vis	4	014785
20	Smörjnippel	Lubricator	Schmiernippel	Graisseur	4	105287
21	Distansbricka 1mm	Spacer ring	Distanzring	Rondel. décartement	8	105032
	Distansbricka 0.5mm	Spacer ring	Distanzring	Rondel. décartement	4	105280
22	Lastrulle Ø108	Load roller	Lastrolle	Poulie de charge	4	105318
	Lastrulle Ø108.5	Load roller	Lastrolle	Poulie de charge	4	105319
	Lastrulle Ø107	Load roller	Lastrolle	Poulie de charge	4	105328
	Lastrulle Ø107.5	Load roller	Lastrolle	Poulie de charge	4	105329

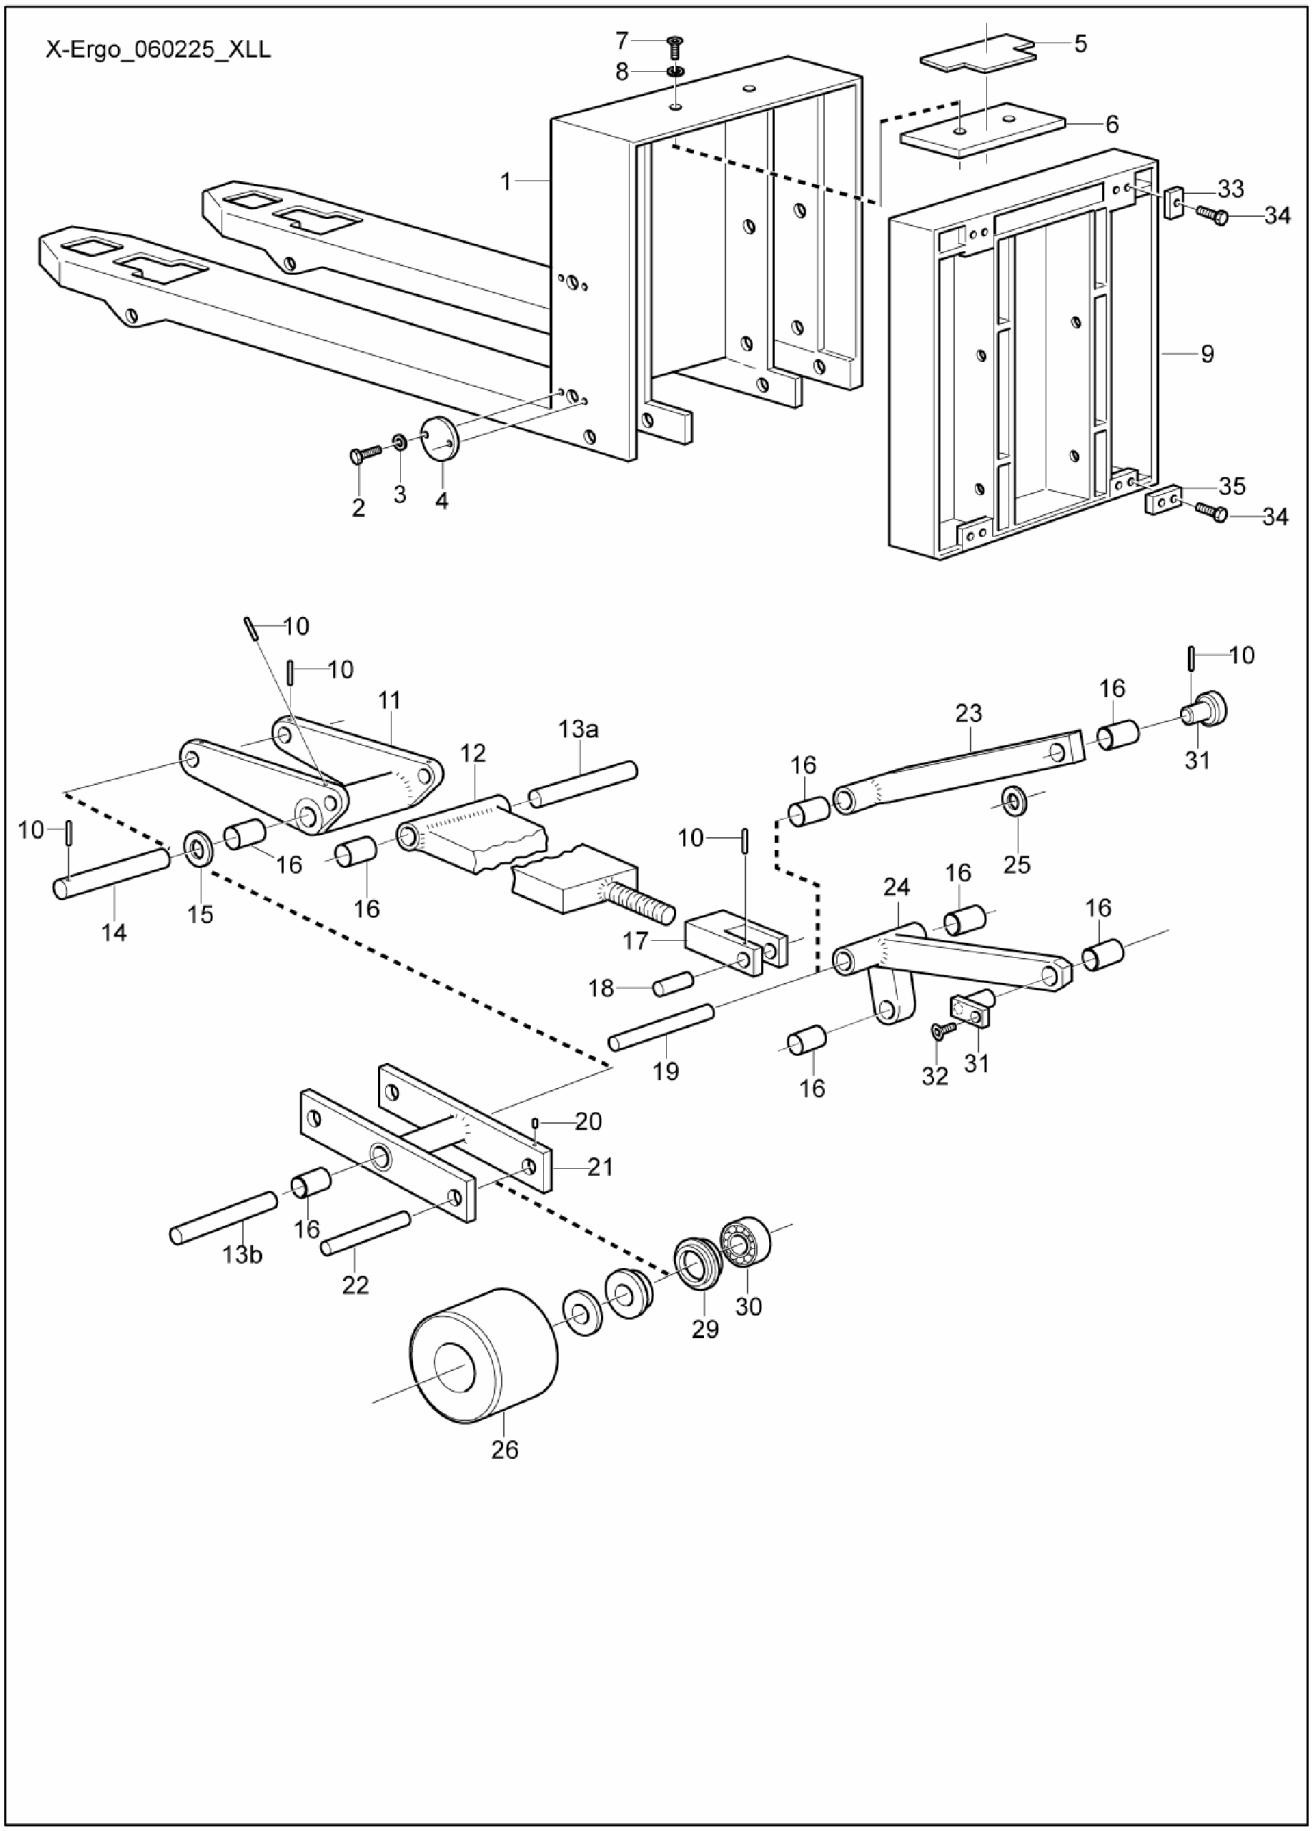
X-Ergo_060225_XLL
7
8
5
6
1
33
34
9
35
34
2
3
4
10
10
11
12
13a
10
16
16
14
15
10
16
23
16
31
25
24
16
16
17
18
19
16
32
31
20
21
16
13b
22
29
30
26

Gaffelvagn XLL-Ergo - Fork carriage XLL-Ergo
Gabelschlitten XLL-Ergo - Chariot de levage XLL-Ergo

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Gaffelvagn *V=480-640. When order please state machine No.*	Fork carriage	Schlitten	Tablier de fourches	1	075596
	Gaffelvagn *V=641-685. When order please state machine No.*	Fork carriage	Schlitten	Tablier de fourches	1	075597
	Gaffelvagn *V=686-730. When order please state machine No.*	Fork carriage	Schlitten	Tablier de fourches	1	075598
2	Skruv M6S 6x10	Screw M6S 6x10	Schraube	Vis	8	010087
3	Fjäderbricka FBB 6.1	Spring washer	Federring	Rondelle grower	8	012271
4	Lock	Cover	Deckel	Couvercle	4	075086
5	Justerplåt	Shim	Einstellscheibe	Cale de réglage	13	075015
6	Tryckplåt	Pressure plate	Druckblech	Plaque de pression	1	075016
7	Skruv MF6S 8x35	Screw MF6S 8x35	Schraube	Vis	2	011035
8	Bricka AZV 8.4	Washer	Scheibe	Rondelle	2	012316
9	Täckplåt	Cover plate	Deckblech	Protecteur de tôle	1	104346
10	Spännstift FRP 5x40	Roll pin	Spannstift	Goupille	12	012923
11	Hjulgaffel	Load wheel fork	Radgabel	Fourche de roue	2	075604
12	Tryckstång	Pressure bar	Druckstange	Tige-poussoir	2	076572
13	Axel	Axle	Achse	Axe	2	053363
	Axel	Axle	Achse	Axe	2	075606
	Axel *Cold store design*	Axle	Achse	Axe	2	076028
	Axel *Cold store design*	Axle	Achse	Axe	2	076030
14	Axel *Cold store design*	Axle	Achse	Axe	2	076029
	Man.arm, vinkel	Tiller arm, angle	Steuerarm, winkel	Timon angle	2	076507
15	Klätterrulle	Climbing roller	Kletterrolle	Galet	4	053360
16	Glidlager	Slide bearing	Gleitlager	Coussinet lisse	22	008516
17	Tryckstångsände	Pressure block	Druckstangenende	Extr. de tige-poussoir	2	075025
18	Axel	Axle	Achse	Axe	2	075065
	Axel *Cold store design*	Axle	Achse	Axe	2	075417
19	Axel *V=480-640. When order please state machine No.*	Axle	Achse	Axe	4	075064
	Axel *V=686-730. When order please state machine No.*	Axle	Achse	Axe	4	075232
	Axel *V=641-685. When order please state machine No.*	Axle	Achse	Axe	4	075289
	Axel *V=480-640. When order please state machine No. Cold store design.*	Axle	Achse	Axe	4	075418
	Axel *V=641-685. When order please state machine No. Cold store design.*	Axle	Achse	Axe	4	075630
	Axel *V=686-730. When order please state machine No. Cold store design.*	Axle	Achse	Axe	4	075631
20	Skruv MS6SS 6x8	Screw MS6SS 6x8	Schraube	Vis	4	011457
21	Smörjnippel	Lubricator	Schmiernippel	Graisseur	2	008953
	Boggiehjul, kompl.	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	075145

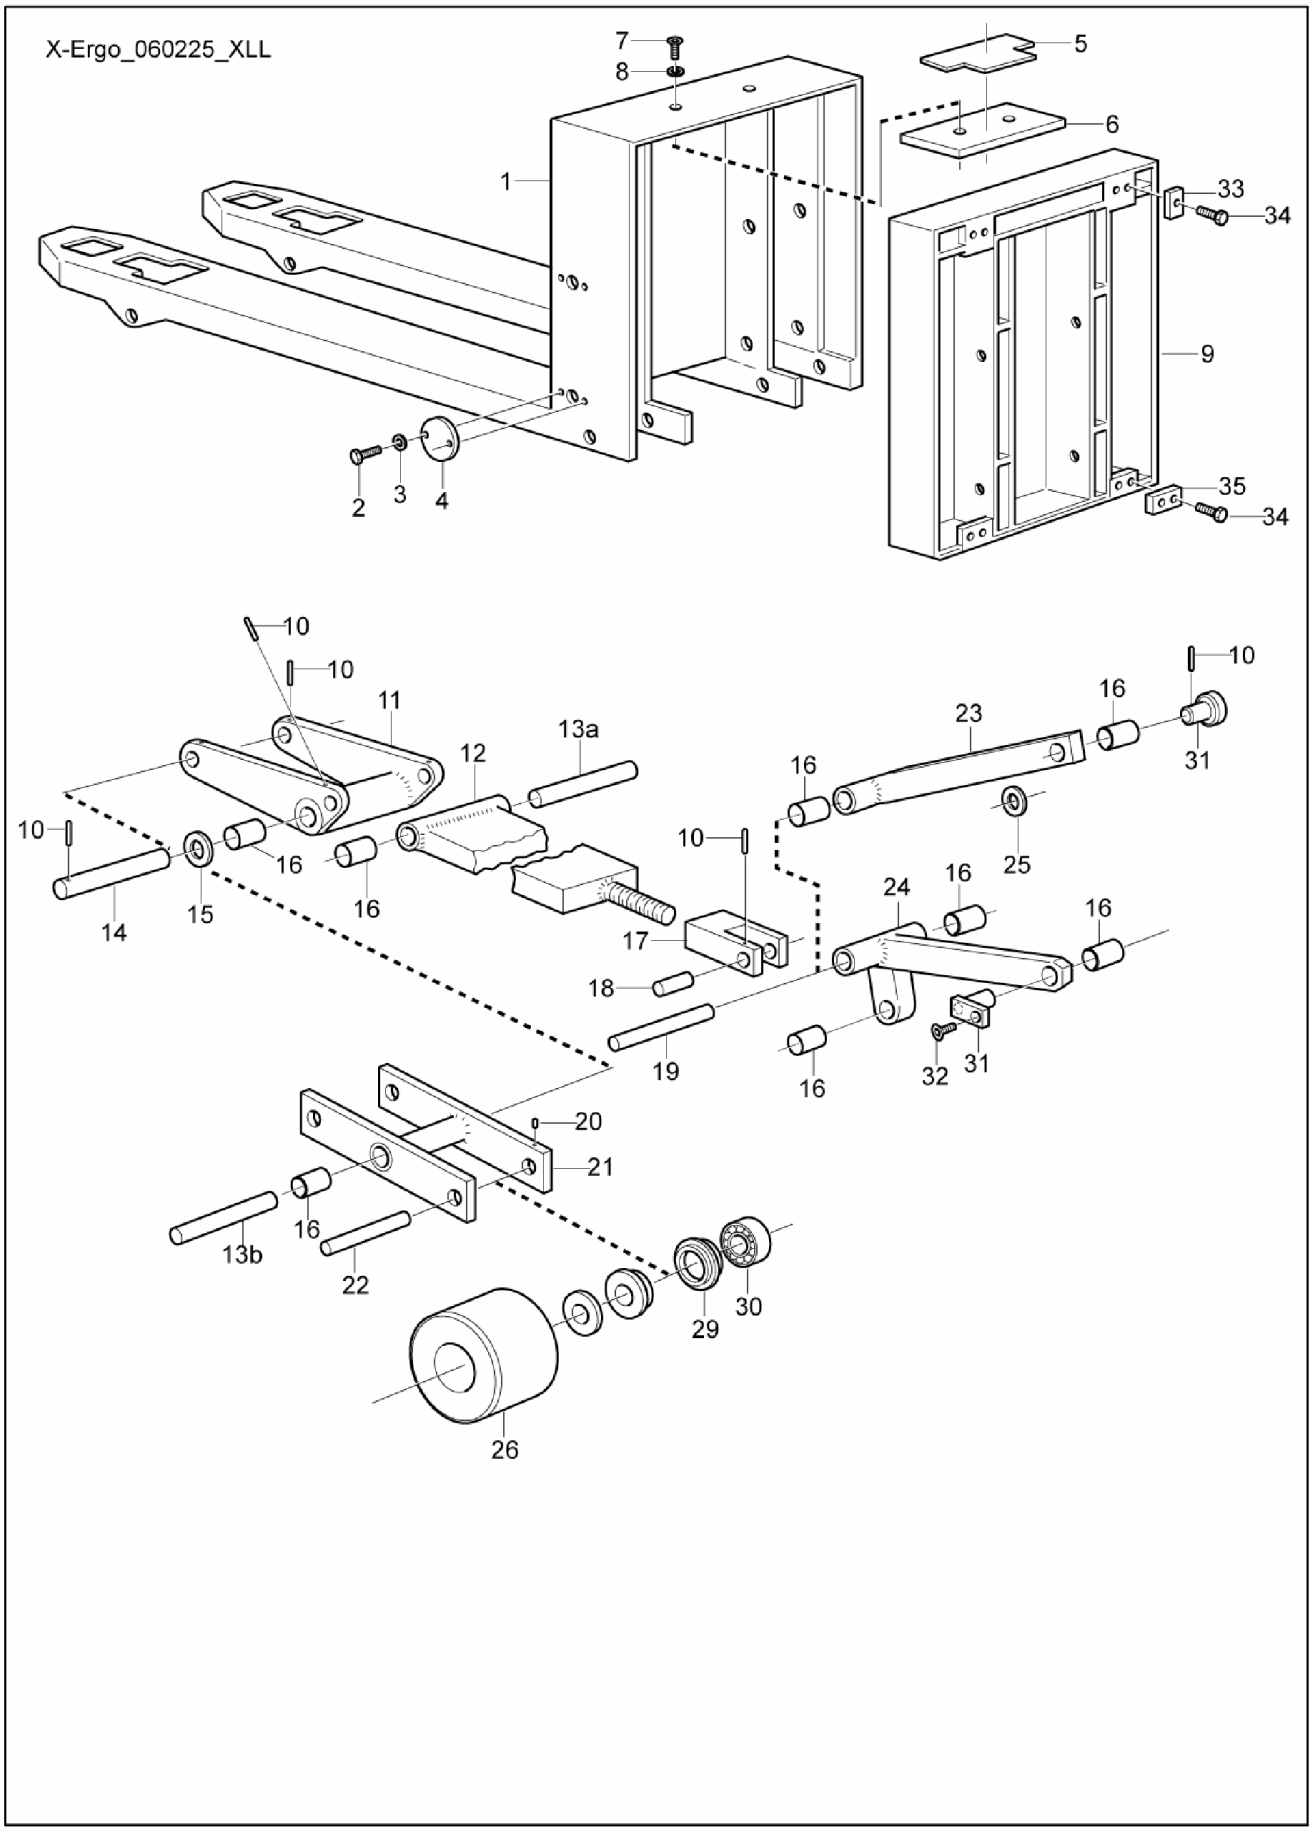
X-Ergo_060225_XLL
7
8
5
6
1
33
34
9
35
34
2
3
4
10
10
11
12
13a
10
16
16
14
15
10
16
23
16
31
25
24
16
16
17
18
19
16
32
31
20
21
16
13b
22
29
30
26

Gaffelvagn XLL-Ergo - Fork carriage XLL-Ergo
Gabelschlitten XLL-Ergo - Chariot de levage XLL-Ergo

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
21	Boggiegaffel	Bogie frame	Boggierahmen	Cadre de bogie	2	075146
	Boggiehjul, kompl. *Cold store design*	Bogie wh. assmby.	Boggierad kompl.	Roue de bogg. compl.	2	076255
22	Axel	Axle	Achse	Axe	4	075839
	Axel *Cold store design*	Axle	Achse	Axe	4	076031
23	Övre länk *V=560. When order please state machine No.*	Upper link	Oberes gelenk	Articulation supérieure	2	075165
	Övre länk *V=686-730. When order please state machine No.*	Upper link	Oberes gelenk	Articulation supérieure	2	075229
	Övre länk *V=641-685. When order please state machine No.*	Upper link	Oberes gelenk	Articulation supérieure	2	075286
	Övre länk *V=480-640. When order please state machine No.*	Upper link	Oberes gelenk	Articulation supérieure	2	076569
24	Undre länk, vänster *V=560*	Lower link. left	Unt. gelenk, links	Articulation inf, gauche	1	075611
	Undre länk, höger *V=560*	Lower link, right	Unt. gelenk, rechts	Articulation inf, droite	1	075612
	Undre länk, vänster *V=641-685. When order please state machine No.*	Lower link. left	Unt. gelenk, links	Articulation inf, gauche	1	075613
	Undre länk, höger *V=641-685. When order please state machine No.*	Lower link, right	Unt. gelenk, rechts	Articulation inf, droite	1	075614
	Undre länk, vänster *V=686-730. When order please state machine No.*	Lower link. left	Unt. gelenk, links	Articulation inf, gauche	1	075615
	Undre länk, höger *V=686-730. When order please state machine No.*	Lower link, right	Unt. gelenk, rechts	Articulation inf, droite	1	075616
	Undre länk, vänster *V=480-640. When order please state machine No.*	Lower link. left	Unt. gelenk, links	Articulation inf, gauche	1	076570
	Undre länk, höger *V=480-640. When order please state machine No.*	Lower link, right	Unt. gelenk, rechts	Articulation inf, droite	1	076571
25	Bricka SRB 20x34	Washer	Scheibe	Rondelle	4	012415
26	Hjul, kmpl *Pos. 26, 30*	Wheel, cmpl	Rad, kmpl	Roue, cmpl	4	053045
	Hjul, kmpl *Pos. 26, 30*	Wheel, cmpl	Rad, kmpl	Roue, cmpl	4	060484
29	Distans	Spacer	Abstandhalter	Entretoise	8	100050
30	Kullager	Roller bearing	Kugellager	Roulement à billes	8	008016
31	Axel	Axle	Achse	Axe	4	085013
33	Mothåll, mast	Holder-on, mast	Nietkloben	Contre- bouterolle	4	085381
34	Skruv M6S 16x40	Screw M6S 16x40	Schraube	Vis	4	014996
35	Mothåll, mast	Holder-on, mast	Nietkloben	Contre- bouterolle	4	085576

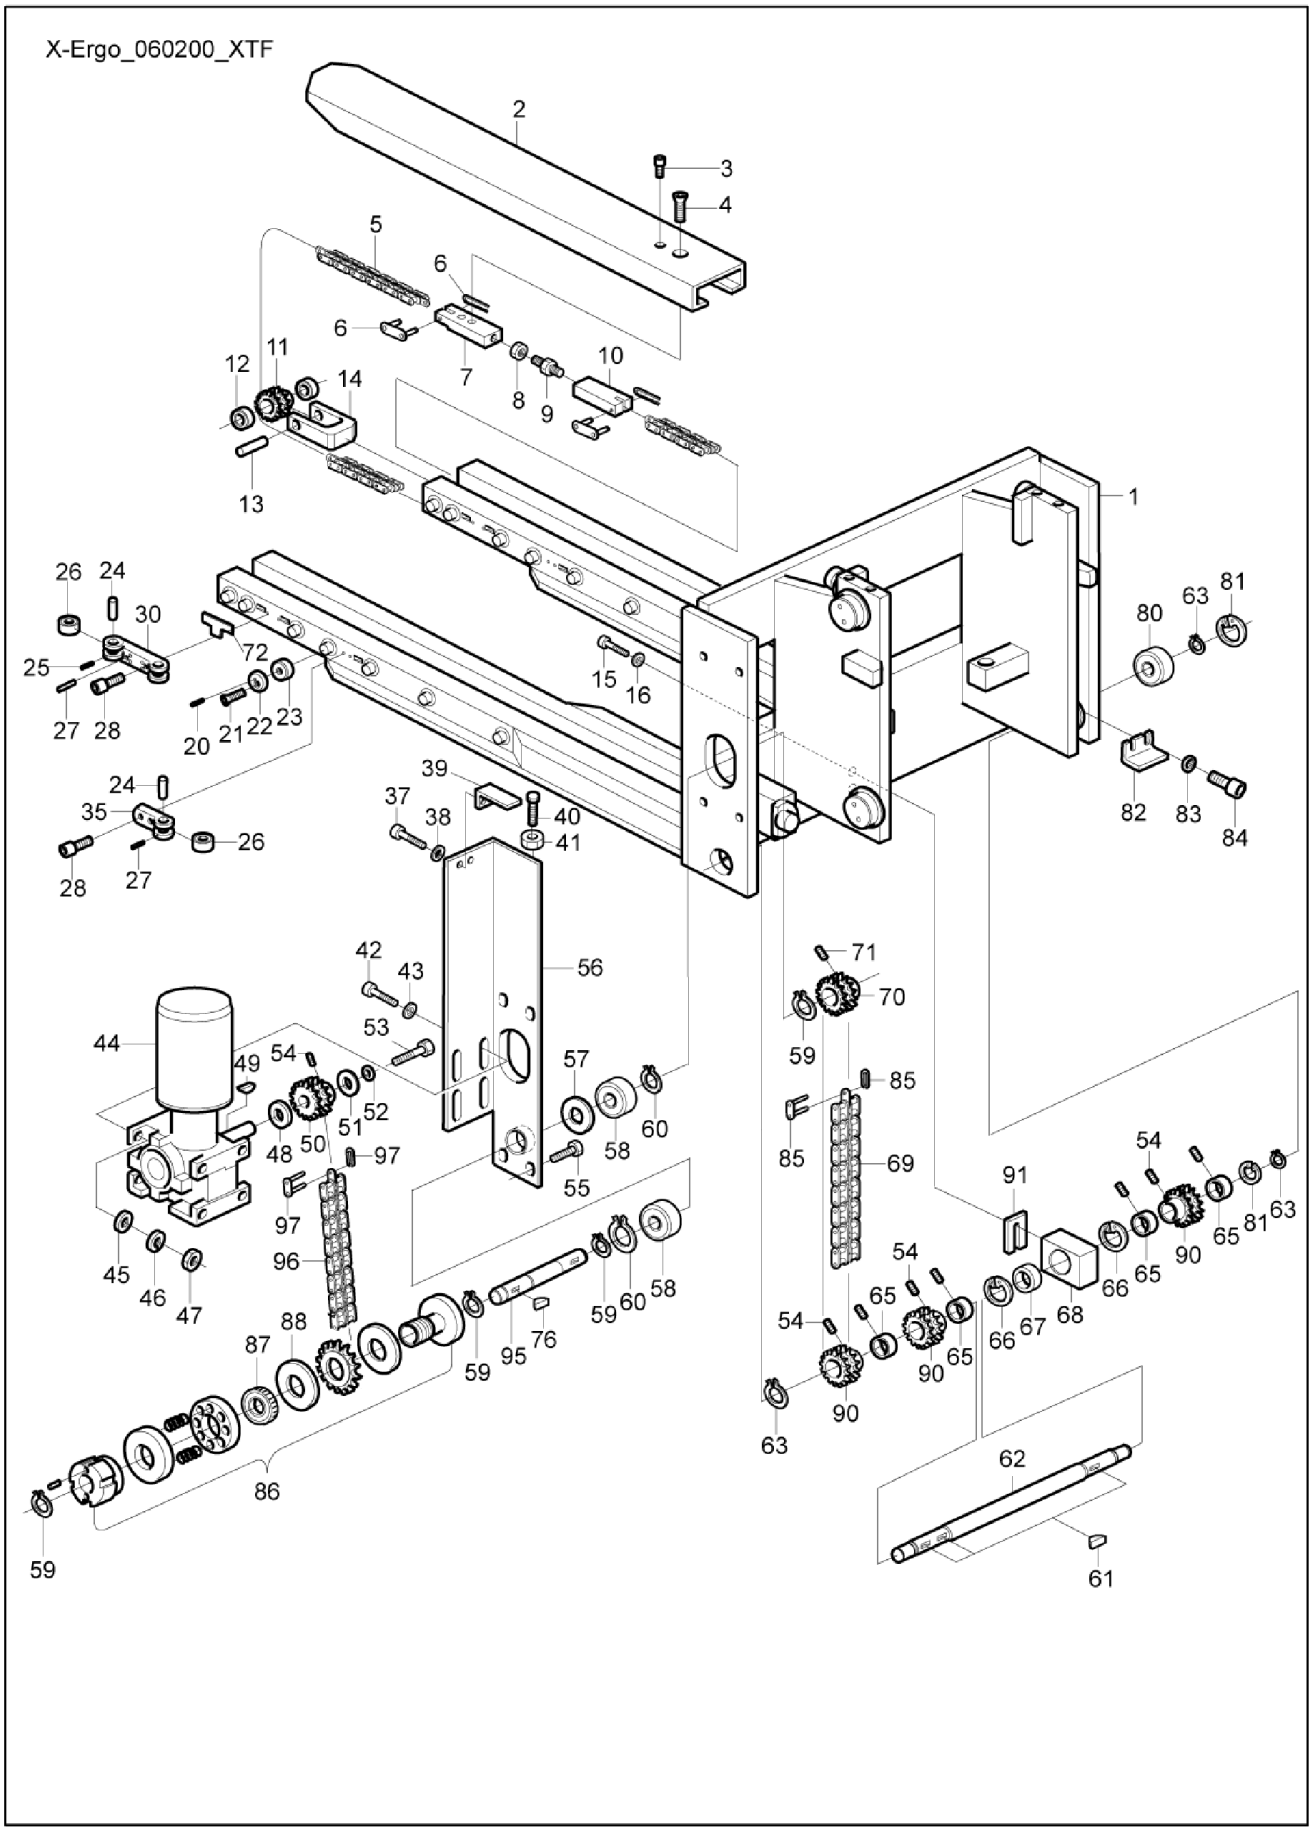
X-Ergo_060200_XTF
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
20
21
22
23
24
25
26
27
28
30
35
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
62
63
65
66
67
68
69
70
71
72
76
80
81
82
83
84
85
86
87
88
90
91
95
96
97

Gaffelvagn XTF-Ergo 100 TFV/DTFV - Fork carriage XTF-Ergo 100 TFV/DTFV
Gabelschlitten XTF-Ergo 100 TFV/DTFV - Chariot de levage XTF-Ergo 100 TFV/DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	*See section 6, "fork carriage back"*				1	
2	Gaffel *L1=1000*	Fork	Gabel	Fourche	2	060125
	Gaffel *L1=1100*	Fork	Gabel	Fourche	2	060126
	Gaffel *L1=1200*	Fork	Gabel	Fourche	2	060127
	Gaffel *L1=800*	Fork	Gabel	Fourche	2	060128
	Gaffel *L1=Alt. When order please state length*	Fork	Gabel	Fourche	2	060129
3	Passkruv	Screw	Schraube	Vis	2	084957
4	Skruv MF6S 10x20	Screw MF6S 10x20	Schraube	Vis	2	011072
5	Rullkedja *Including pos. 6, L1=800*	Chain	Rollenkette	Chaîne	2	060213
	Rullkedja *Including pos. 6, L1=1000*	Chain	Rollenkette	Chaîne	2	060383
	Rullkedja *Including pos. 6, L1=1200*	Chain	Rollenkette	Chaîne	2	060384
	Rullkedja *Including pos. 6, L1=Alt. When order please state length*	Chain	Rollenkette	Chaîne	2	060385
	Rullkedja *Including pos. 6, L1=1100*	Chain	Rollenkette	Chaîne	2	084737
6	Kedjelås	Chain Lock	Kettenschloss	Verouillage de chaîne	4	008850
7	Kedjefäste	Chain bracket	Kettenbefestigung	Fixation de chaîne	2	060080
8	Mutter	Nut	Mutter	Ecrou	2	012148
9	Justerskruv	Adjuster screw	Nachstellschraube	Vis de réglage	2	060192
10	Kedjefäste	Chain bracket	Kettenbefestigung	Fixation de chaîne	2	060077
11	Kedjehjul	Chain wheel	Kettenzahnrad	Roue dentée de chaîne	2	060074
12	Nållager	Needle bearing	Lagernadel	Roulement aiguille	4	008122
13	Axel	Axle	Achse	Axe	2	060131
14	Bygel	Loop	Radträger	Etrier	2	060079
15	Skruv MC6S 6x32	Screw MC6S 6x32	Schraube	Vis	2	010590
16	Bricka BRB	Flat washer	Scheibe	Rondelle	2	012373
20	Fj. rörpinne FRP	Spiral pin	Federstift	Goupille élastique	28	012861
21	Skruv MF6S 5x10	Screw MF6S 5x10	Schraube	Vis	28	010951
22	Axeltappsbricka	Washer	Scheibe	Rondelle	28	054947
23	Stödrulle	Thrust roller	Stützrolle	Galet	28	008109
24	Axel	Axle	Achse	Axe	12	081149
25	Skruv MP6SS 6x20	Screw MP6SS 6x20	Schraube	Vis	16	011699
26	Stödrulle	Thrust roller	Stützrolle	Galet	12	008114
27	Fj. rörpinne FRP	Spiral pin	Federstift	Goupille élastique	12	012897
28	Skruv MC6S M6x25	Screw MC6S M6x25	Schraube	Vis	16	010586
30	Rullfäste, dubbel	Roller bracket, double	Rollenbef., doppel	Fix. de galet, double	4	084640
35	Rullfäste, enkel	Roller bracket, single	Rollenbef., einfach	Fix. de galet, simple	4	081148
37	Skruv M6S 6x18	Screw M6S 6x18	Schraube	Vis	2	010095

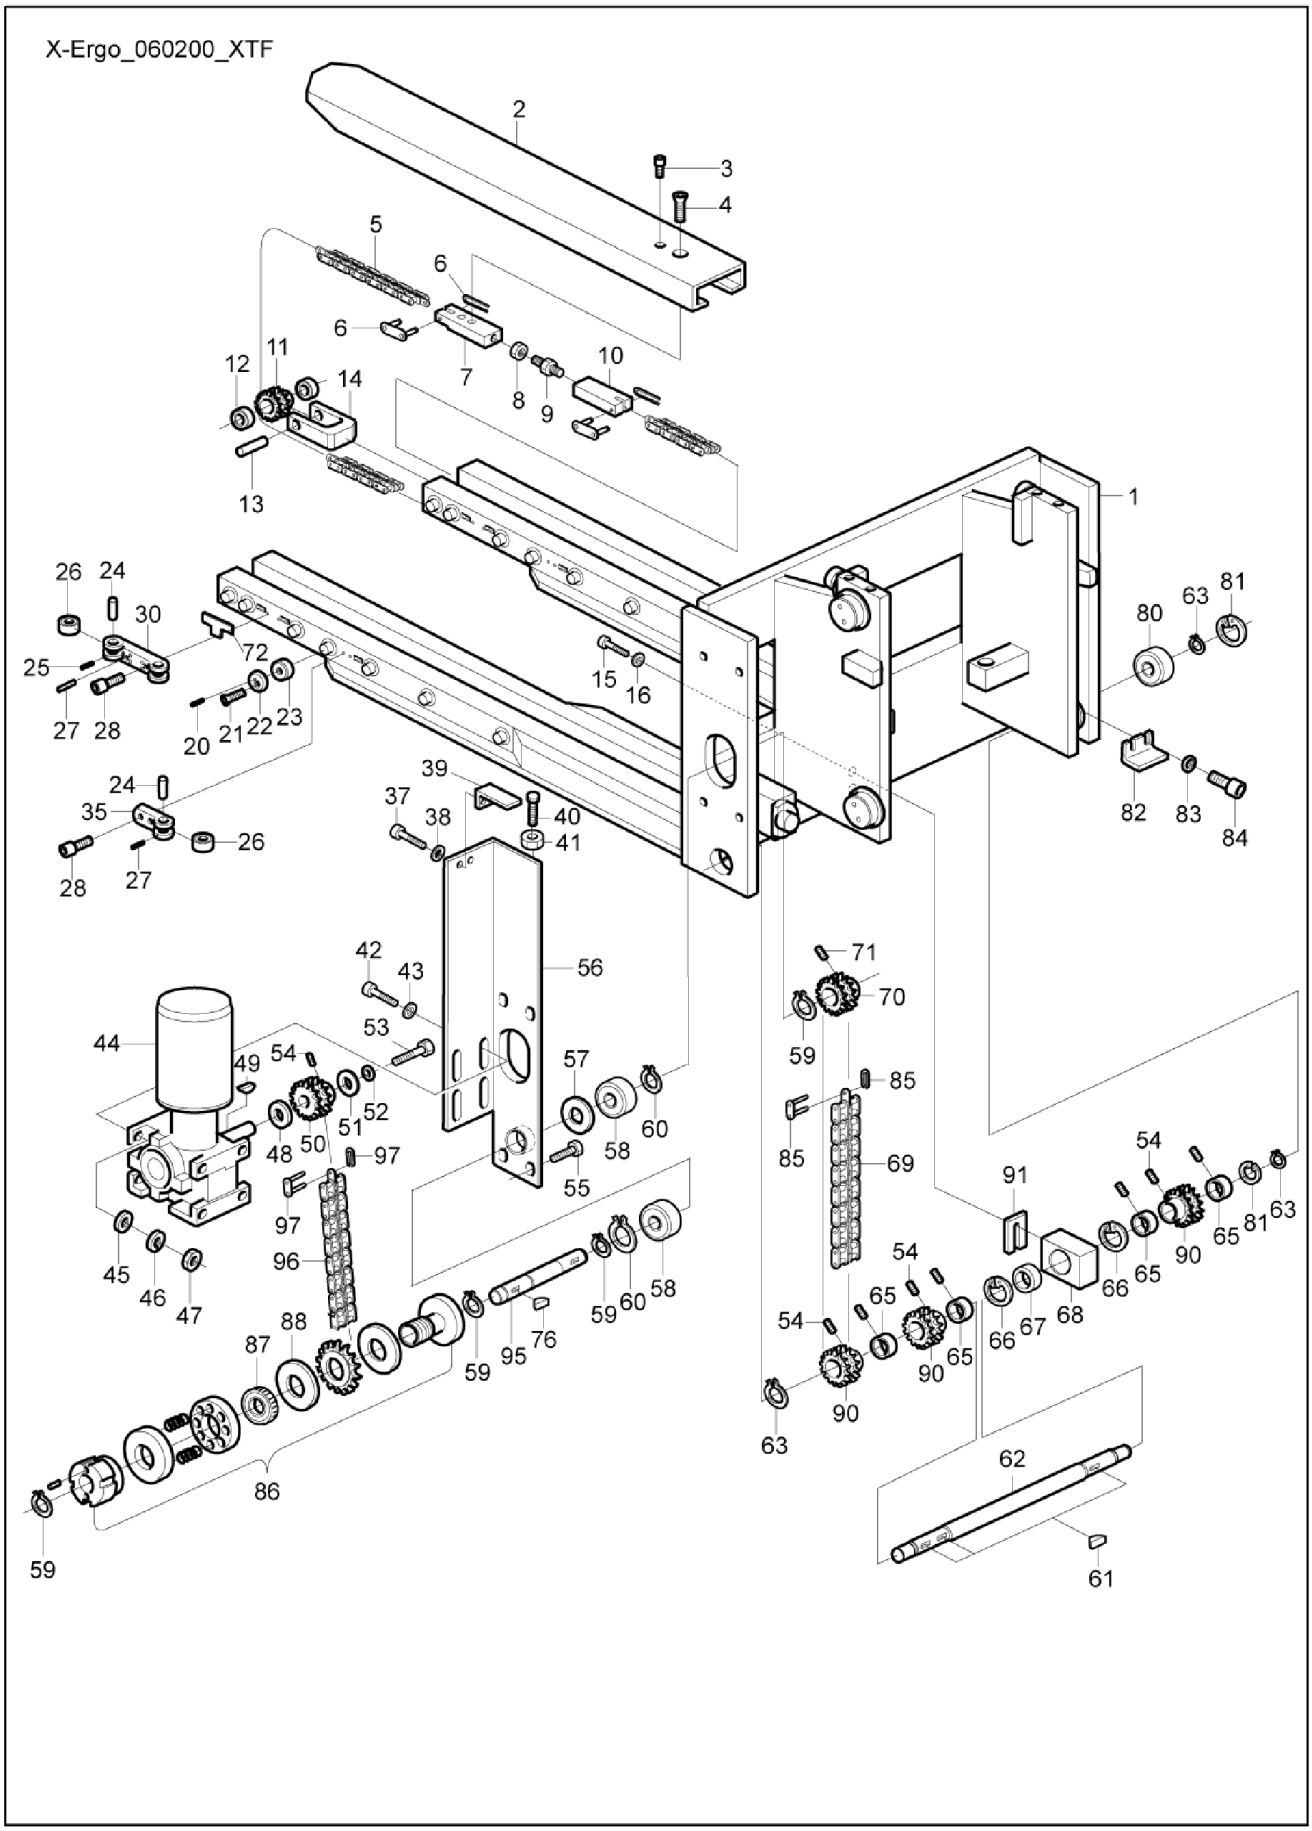
X-Ergo_060200_XTF
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
20
21
22
23
24
25
26
27
28
30
35
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
62
63
65
66
67
68
69
70
71
72
76
80
81
82
83
84
85
86
87
88
90
91
95
96
97

Gaffelvagn XTF-Ergo 100 TFV/DTFV - Fork carriage XTF-Ergo 100 TFV/DTFV
Gabelschlitten XTF-Ergo 100 TFV/DTFV - Chariot de levage XTF-Ergo 100 TFV/DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
38	Fjäderbricka FBB 6.1	Spring washer	Federring	Rondelle grower	2	012271
39	Konsol	Bracket	Konsole	Support	1	085104
40	Skruv M6S 8x50	Screw M6S 8x50	Schraube	Vis	2	010156
41	Mutter	Nut	Mutter	Ecrou	2	012120
42	Skruv M6S M6x30	Screw M6S M6x30	Schraube	Vis	4	010103
43	Bricka BRB	Washer	Scheibe	Rondelle	4	012375
44	Motor, kompl.	Motor, assy.	Motor, kompl.	Moteur, compl.	1	085038
46	Fjäderbricka FBB	Spring washer	Federring	Rondelle grower	8	012275
47	Mutter	Nut	Mutter	Ecrou	4	012120
48	Bricka	Washer	Scheibe	Rondelle	1	060116
49	Kil 5x5x18	Key	Keil	Clavette	1	013592
50	Kedjehjul	Chain wheel	Kettenzahnrad	Roue dentée de chaîne	1	060101
51	Bricka	Washer	Scheibe	Rondelle	1	012503
52	Bricka, SRB	Washer	Scheibe	Rondelle	3	012404
53	Skruv M6S 6x12	Screw M6S 6x12	Schraube	Vis	1	010089
54	Stoppskruv	Stop screw	Stoppskruv	Stoppskruv	8	011685
55	Skruv M6S M8x30	Screw M6S M8x30	Schraube	Vis	4	010148
56	Konsol	Bracket	Konsole	Support	1	084852
57	Distans	Spacer	Abstandhalter	Entretoise	1	084703
58	Kullager	Roller bearing	Kugellager	Roulement à billes	2	008008
59	Spårring SGA 17	Circlip	Nutring	Circlip	4	012639
60	Spårring SGH 35	Circlip	Nutring	Circlip	2	012739
61	Woodruffkil *WK 6x22*	Woodruff key	Scheibenkeil	Clavette woodruff	3	013510
62	Axel *V=570*	Axle	Achse	Axe	1	060071
	Axel *V=670*	Axle	Achse	Axe	1	060113
	Axel *V=Alt.*	Axle	Achse	Axe	1	060114
	Axel *V=570, Cold store design*	Axle	Achse	Axe	1	060117
	Axel *V=670, Cold store design*	Axle	Achse	Axe	1	060118
	Axel *V=Alt., Cold store design*	Axle	Achse	Axe	1	060119
63	Spårring SGA 17	Circlip	Nutring	Circlip	4	012639
65	Stoppring *Including pos. 54*	Adjuster ring	Halterring	Bague d'arrêt	35	008302
66	Spårring SGH 35	Circlip	Nutring	Circlip	2	012739
67	Plastring	Plastic bearing	Kunststofflager	Roulement plastique	1	084679
68	Lagerhus	Bearing housing	Lagergehäuse	Palier	1	085068
69	Rullkedja *When order please state length*	Chain	Rollenkette	Chaîne	1	008852
	Rullkedja, kpl *Including pos. 85*	Chain, cpl	Rollenkette, kpl	Chaîne, cpl	1	060110
70	Kedjehjul	Chain wheel	Kettenzahnrad	Roue dentée de chaîne	1	060100

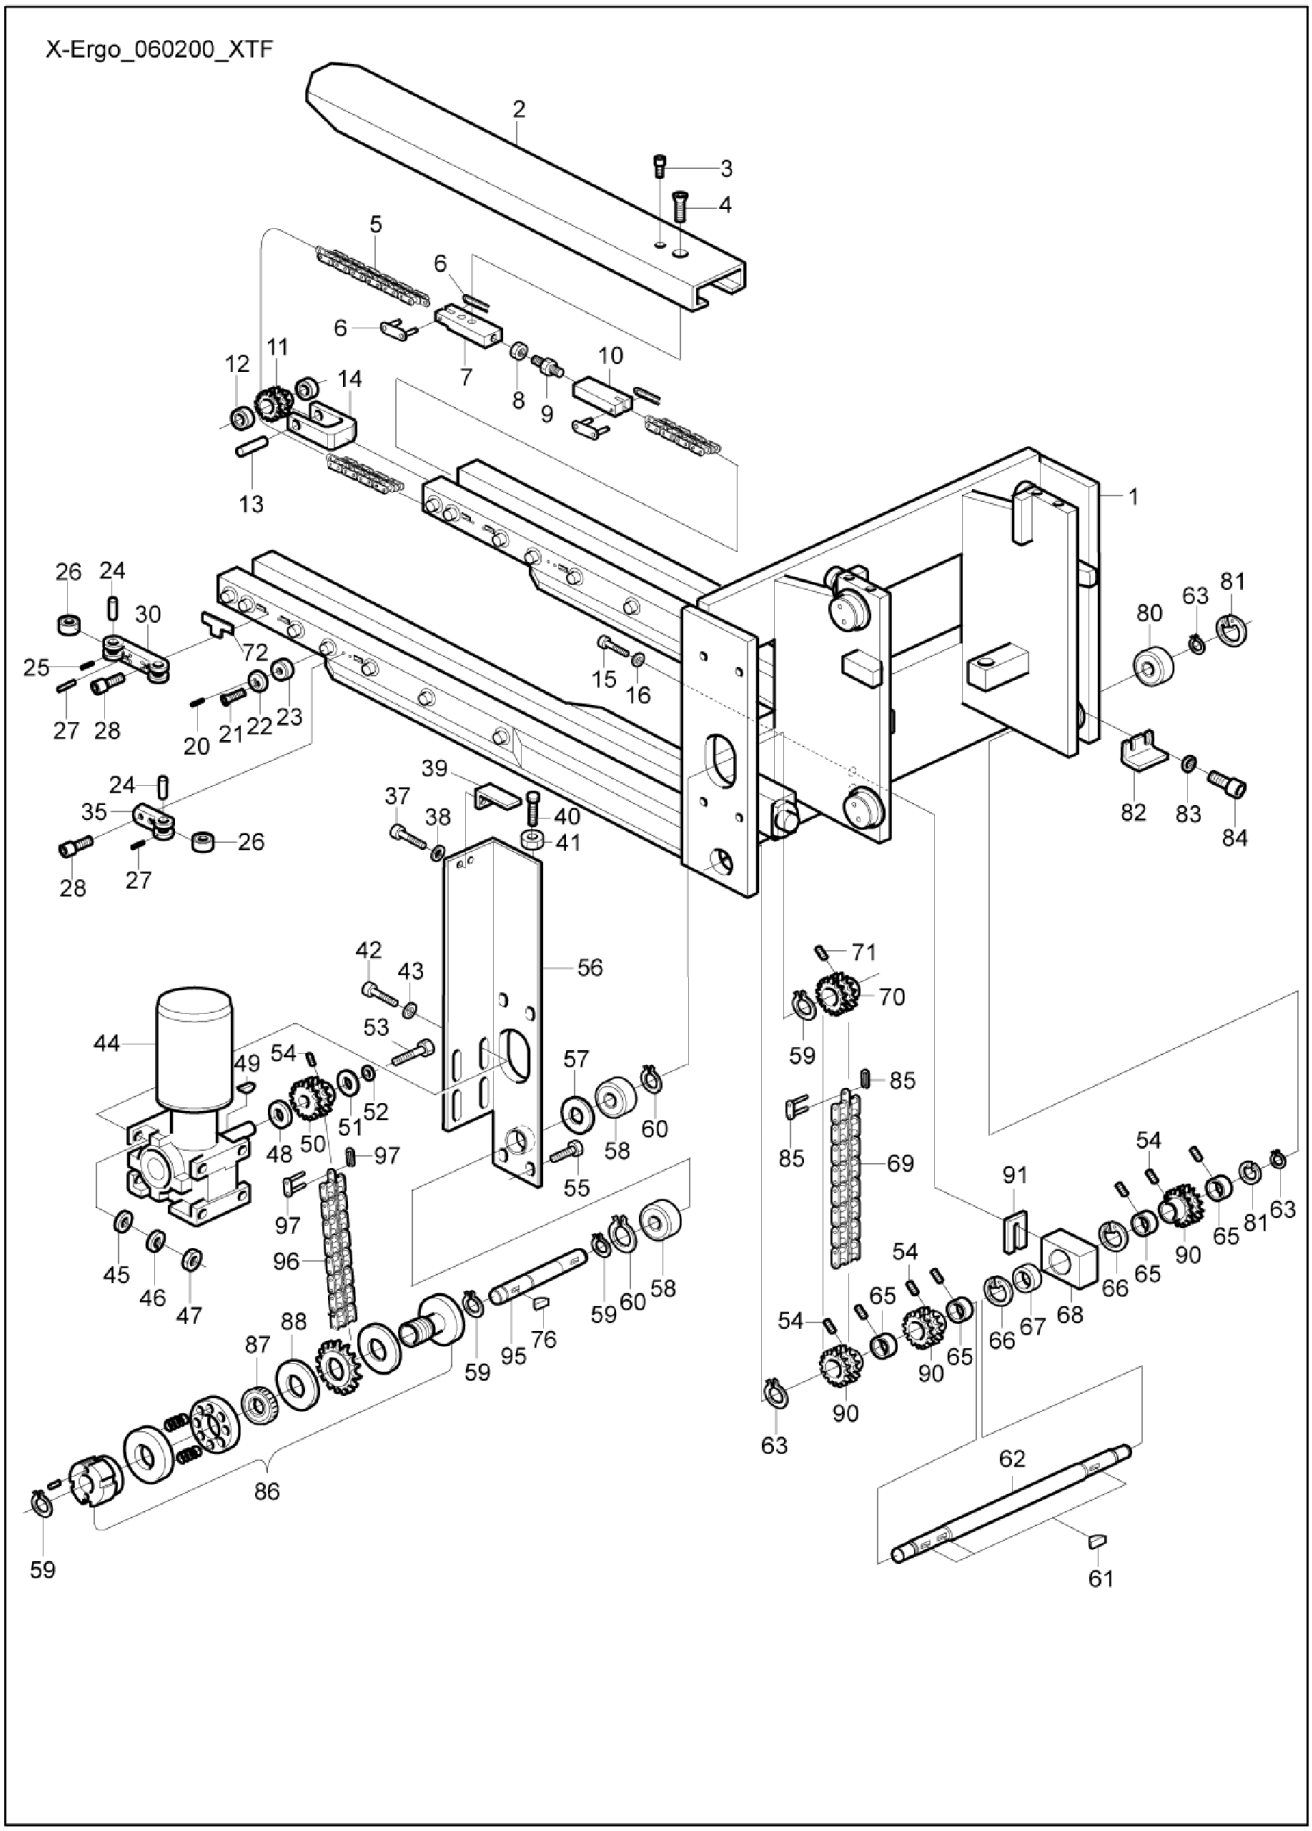
X-Ergo_060200_XTF
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
20
21
22
23
24
25
26
27
28
30
35
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
62
63
65
66
67
68
69
70
71
72
76
80
81
82
83
84
85
86
87
88
90
91
95
96
97

Gaffelvagn XTF-Ergo 100 TFV/DTFV - Fork carriage XTF-Ergo 100 TFV/DTFV
Gabelschlitten XTF-Ergo 100 TFV/DTFV - Chariot de levage XTF-Ergo 100 TFV/DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
71	Stoppskruv MP6SS 6x8	Locking screw	Stoppschraube	Vis d'arrêt	3	011687
72	Shim	Shim	Einstellscheibe	Cale de réglage	8	085790
76	Plattkil 5x5x28	Flat key	Flachkeil	Clavette plastique	2	013596
80	Kullager	Roller bearing	Kugellager	Roulement à billes	2	008008
81	Spårring SGH 35	Circlip	Nutring	Circlip	2	012739
82	Skydd	Protection	Gehäuse	Carter	2	085141
83	Bricka BRB	Washer	Scheibe	Rondelle	2	012375
84	Skruv M6S 8x16	Screw M6S 8x16	Schraube	Vis	4	010138
85	Kedjelås	Chain Lock	Kettenschloss	Verouillage de chaîne	1	008850
86	Skyddskoppling *Including pos. 87-88*	Safety device	Schützer	Appareil de prot.	1	060092
87	Nållager	Needle bearing	Lagernadel	Roulement aiguille	1	001477
88	Bromsbelägg	Brake lining	Bremsbelag	Garniture de frein	2	001233
90	Kedjehjul	Chain wheel	Kettenzahnrad	Roue dentée de chaîne	3	084731
91	Shim	Shim	Einstellscheibe	Cale de réglage	1	085612
95	Axel	Axle	Achse	Axe	1	060102
	Axel *Cold store design*	Axle	Achse	Axe	1	060103
96	Rullkedja *When order please state length*	Chain	Rollenkette	Chaîne	1	008852
	Rullkedja, kmpl *Including pos. 97*	Chain, cmpl	Rollenkette, kmpl	Chaîne, cmpl	1	060109
97	Kedjelås	Chain Lock	Kettenschloss	Verouillage de chaîne	1	008850

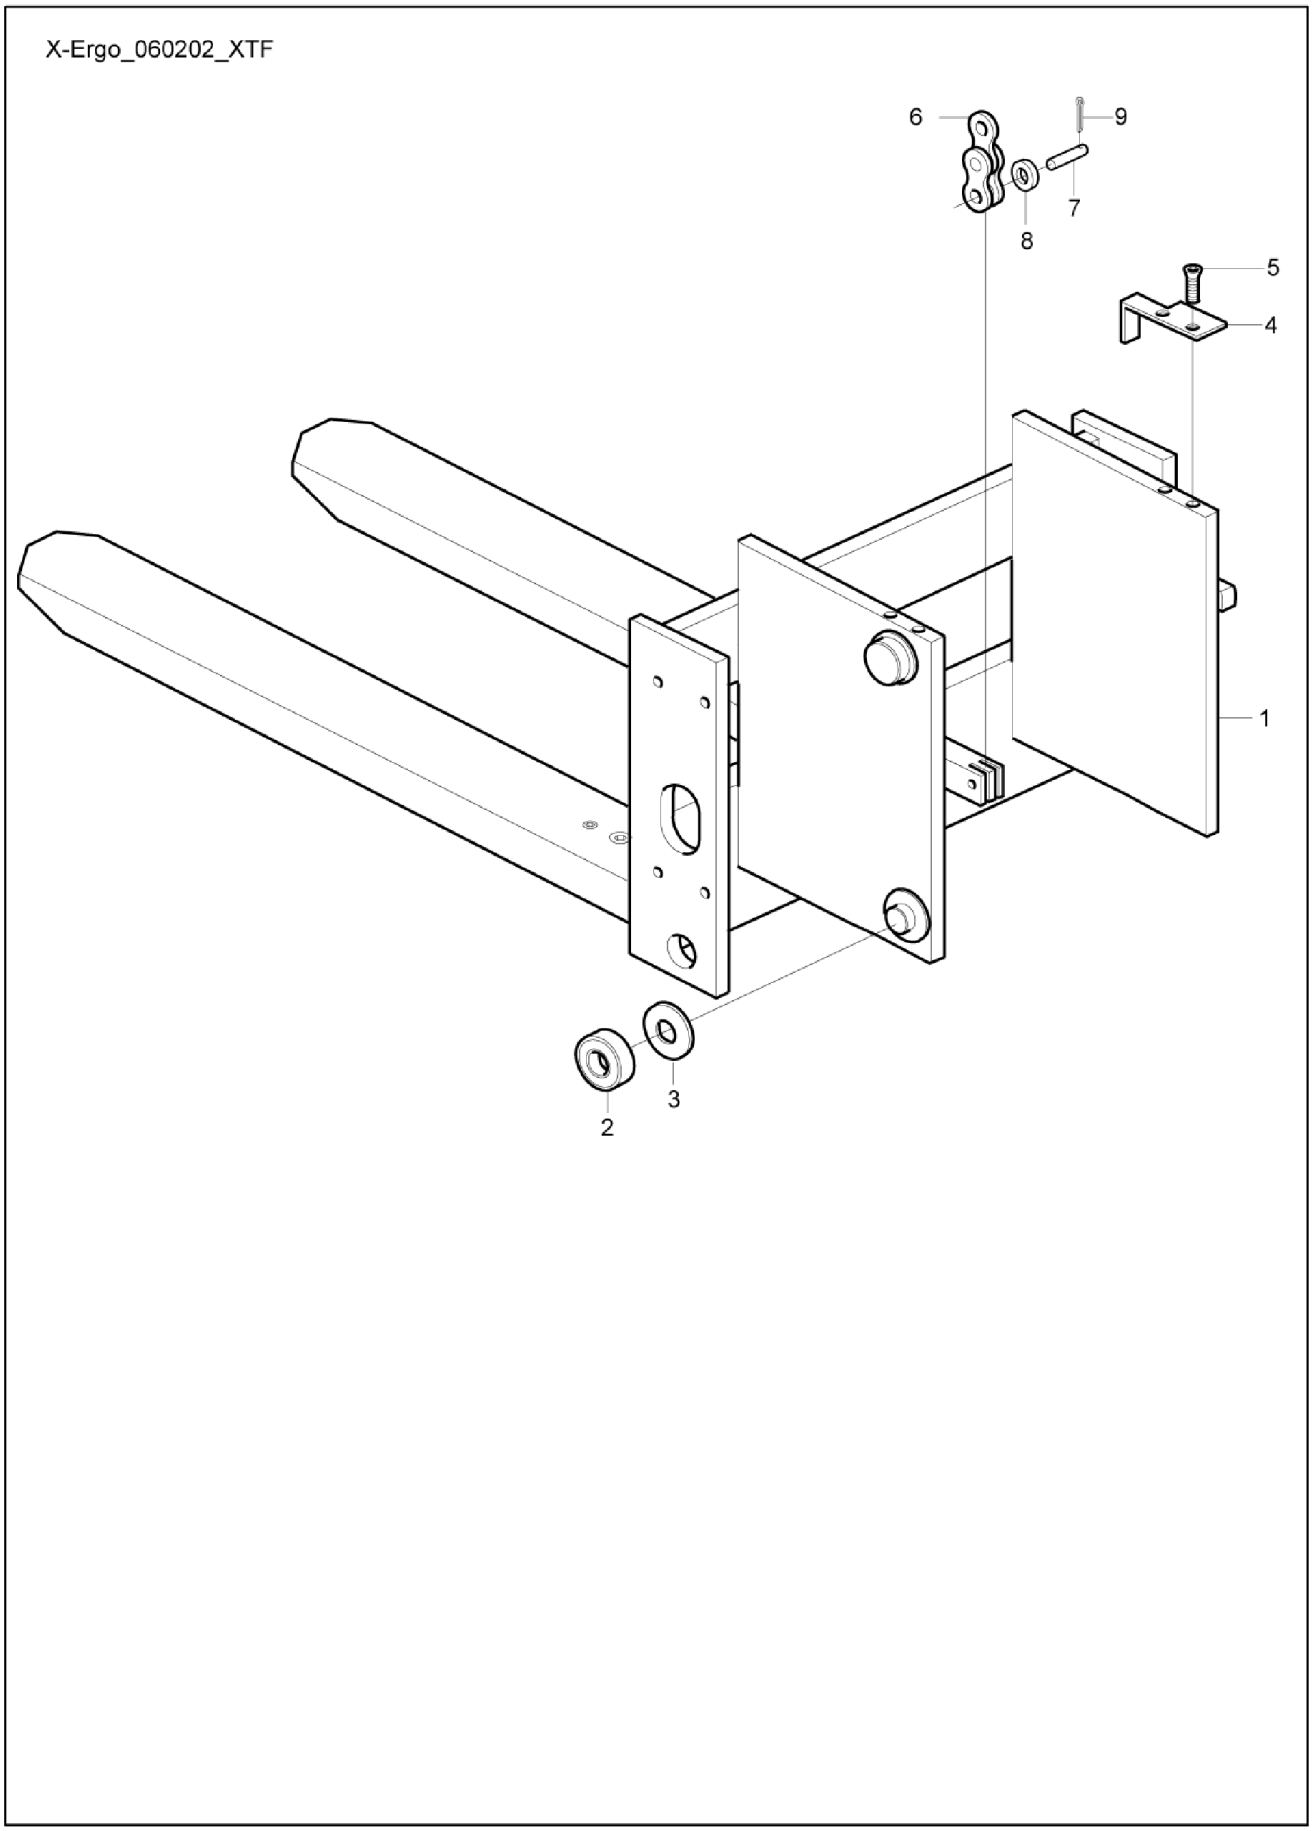
X-Ergo_060202_XTF
6
9
7
8
5
4
1
2
3

Gaffelvagn, rygg XTF-Ergo 100 TFV/DTFV - Fork carriage, back XTF-Ergo 100 TFV/DTFV Gabelschlitten, rücken XTF-Ergo 100 TFV/DTFV - Chariot de levage, dos XTF-Ergo 100 TFV/DTFV

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Gaffelvagn *TFV*	Fork carriage	Schlitten	Tablier de fourches	1	105912
	Gaffelvagn *DTFV*	Fork carriage	Schlitten	Tablier de fourches	1	105913
2	Lastrulle Ø108	Load roller	Lastrolle	Poulie de charge	4	105318
	Lastrulle Ø108.5	Load roller	Lastrolle	Poulie de charge	4	105319
	Lastrulle Ø107	Load roller	Lastrolle	Poulie de charge	4	105328
	Lastrulle Ø107.5	Load roller	Lastrolle	Poulie de charge	4	105329
3	Distansbr. 1mm	Spacer ring	Distanzring	Rondel.décartement	4	105469
	Distansbr. 0.5mm	Spacer ring	Distanzring	Rondel.décartement	4	105470
4	Klämskydd	Protection	Gehäuse	Carter	2	105976
5	Skruv MFX-TT 6x16	Screw MFX-TT 6x16	Schraube	Vis	4	014785
6	*See section 9*				1	
7	Saxpinnebult	Split pin bolt	Splintbolzen	Axe à tête	1	066076
8	Bricka BRB	Washer	Scheibe	Rondelle	2	012375
9	Saxpinne 3x20	Split pin	Splint	Goupille fendue	2	013134

X-Ergo_060500_XXTF_.eps

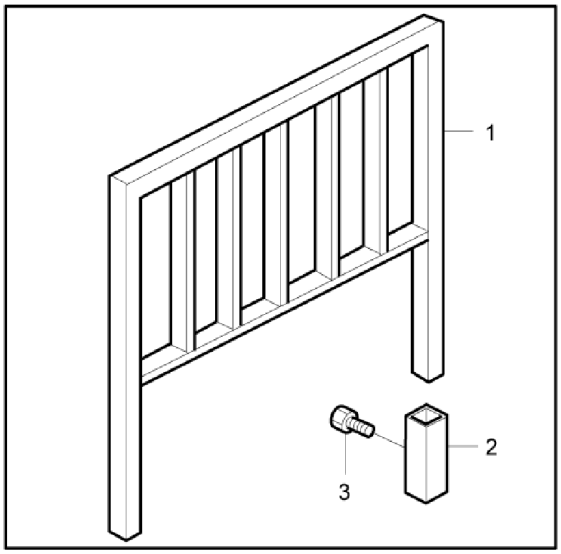

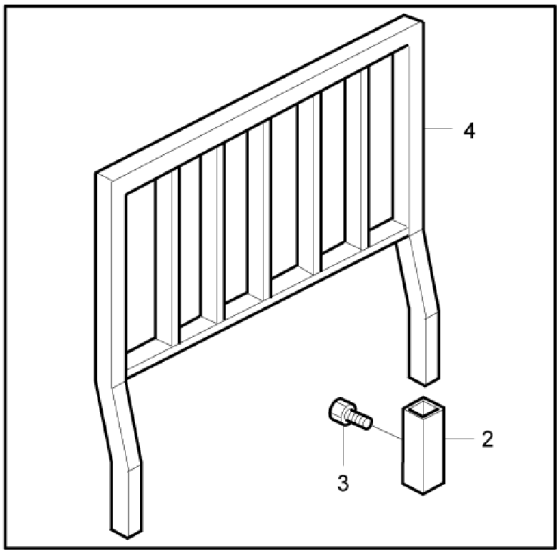

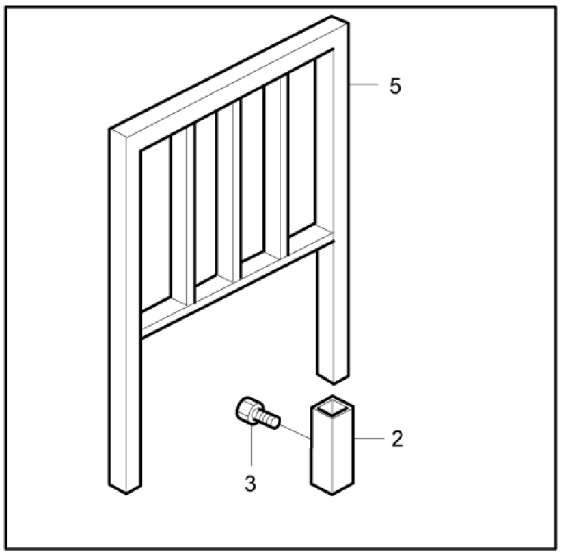

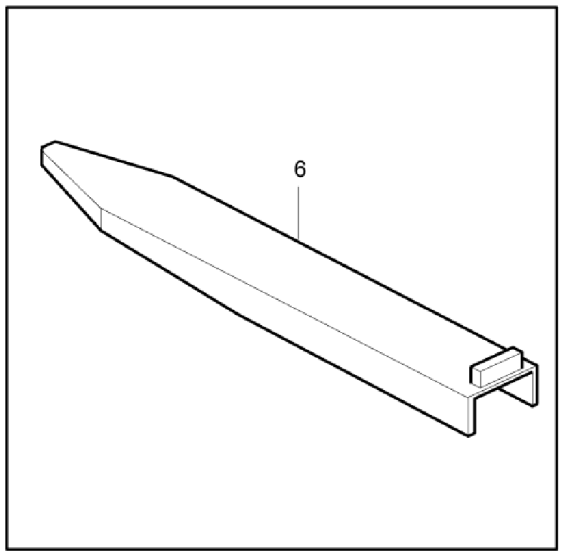

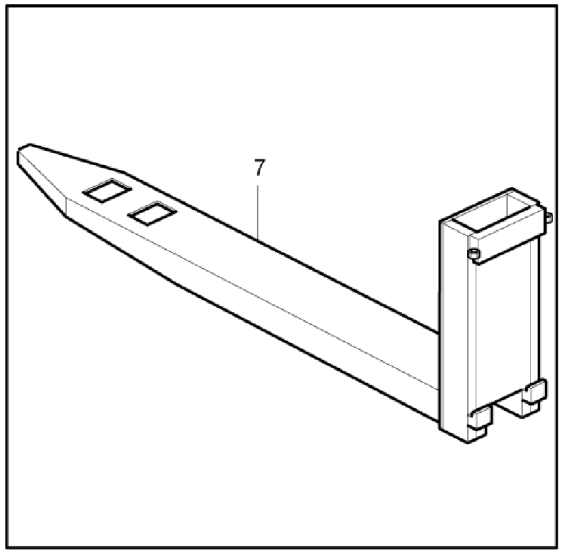

Lastskydd/Gaffelförlängning X/XTF/XML-Ergo - Load guard/Fork extension X/XTF/XML-Ergo Lastschutz/Gabelverlängung X/XTF/XML-Ergo - Prot. de charge/Ext. des fourches X/XTF/XML-Ergo

Pos.	Beskrivning	Designation	Bezeichnung	Dénomination	Qty	Part No.
1	Lastskydd *V>690, Narrow type, Clear view mast*	Load guard	Lastschutz	Protecteur de charge	1	059698
	Lastskydd *V<740, Narrow type, Clear view mast*	Load guard	Lastschutz	Protecteur de charge	1	059703
	Lastskydd *V<690, Narrow type, Clear view mast*	Load guard	Lastschutz	Protecteur de charge	1	059820
	Lastskydd *V>741, Narrow type, Clear view mast*	Load guard	Lastschutz	Protecteur de charge	1	059821
	Lastskydd	Load guard	Lastschutz	Protecteur de charge	1	084876
2	Hållare	Bracket	Konsole	Support	2	057310
3	Skruv M6S 10x25	Screw M6S 10x25	Schraube	Vis	2	010205
4	Lastskydd *Wide type, Clear view mast*	Load guard	Lastschutz	Protecteur de charge	1	059697
5	Lastskydd *Narrow type*	Load guard	Lastschutz	Protecteur de charge	1	057308
6	Gaffelförl. *Narrow type*	Extension fork	Gabelverläng.	Ext. des fourches	2	056610
	Gaffelförl. *Narrow type*	Extension fork	Gabelverläng.	Ext. des fourches	2	056611
	Gaffelförl. *Wide type*	Extension fork	Gabelverläng.	Ext. des fourches	2	066073
7	Ställbar gaffel	Adjust. fork	Ställb. gabeln	Fourches réglables	2	056601
	Ställbar gaffel *Clear view mast*	Adjust. fork	Ställb. gabeln	Fourches réglables	2	059716
	Ställbar gaffel *Clear view mast*	Adjust. fork	Ställb. gabeln	Fourches réglables	2	059717