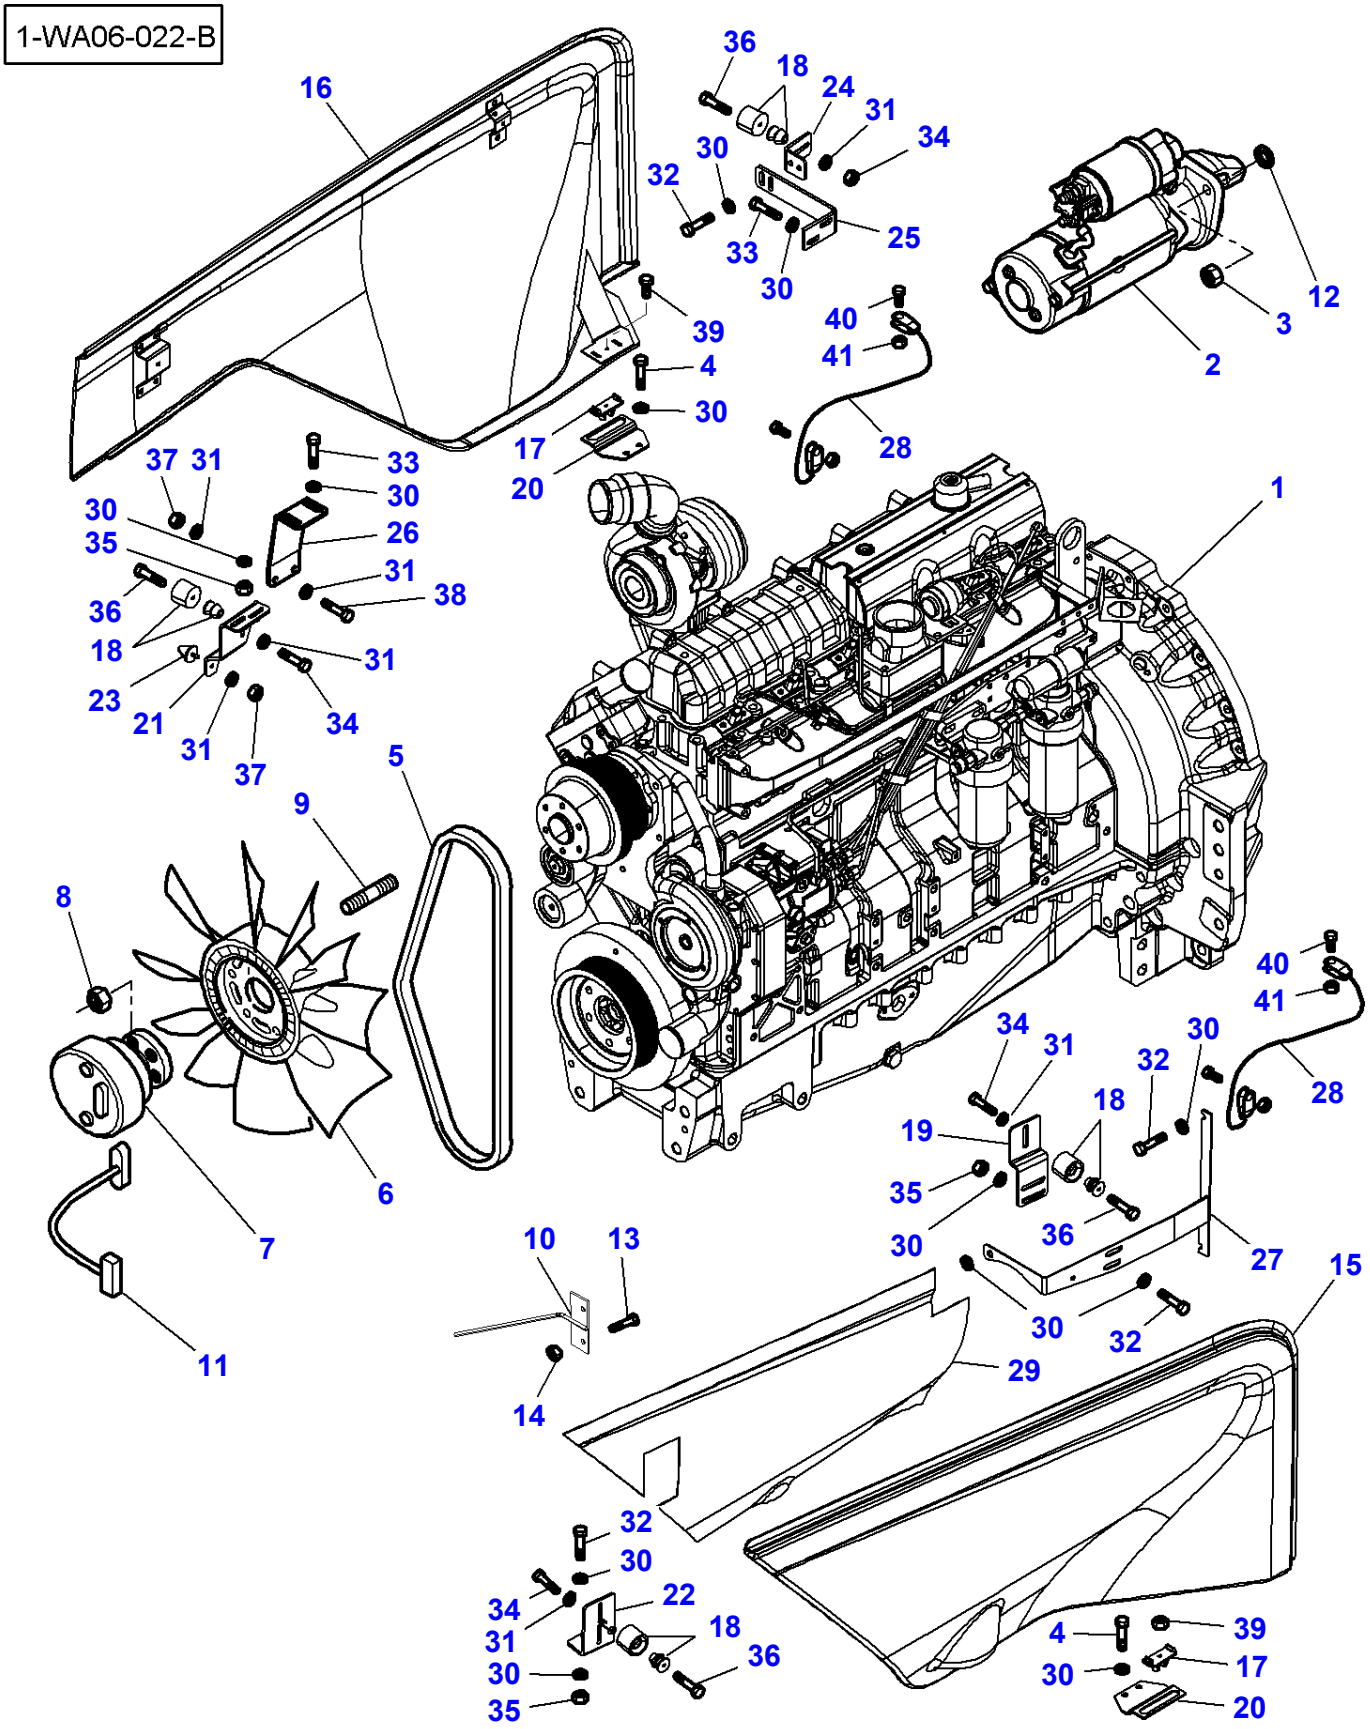

posted to FarmPhoto.com
MASSEY FERGUSON
8480


posted to FarmPhoto.com
MASSEY FERGUSON


1-WA06-022-B
16
36
18
24
31
34
30
32
25
33
30
39
4
30
17
20
40
41
28
12
3
2
1
37
31
33
30
30
35
26
31
38
36
18
31
23
21
31
37
34
5
9
8
7
6
11
40
41
28
34
31
30
32
18
19
35
30
36
27
15
10
13
14
29
32
30
34
31
30
35
22
18
36
4
39
30
17
20


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Engine And Equipment Page 010-0005

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V832961162 | 1 | Engine | MF 8470<br>84 ETA |
| | V832961163 | 1 | Engine | MF 8480<br>84 ETA |
| 2 | 3823621M91 | 1 | Startermotor | See Page - Reference Number 010-0020/1 |
| 3 | 339402X1 | 3 | Nut | M10 |
| 4 | 339009X1 | 4 | Hex. Sock. Screw | M8 X 35 |
| 5 | **4275545M3** | 1 | Belt | Length 1950 MM |
| 6 | 4274233M1 | 1 | Fan | Diameter 715 MM |
| 7 | 3789258M1 | 1 | Clutch | |
| 8 | 1441932X1 | 6 | Nut Metric | M10 |
| 9 | 3011339X1 | 6 | Stud | M10 X 22 |
| 10 | 4276881M3 | 1 | Support | |
| 11 | 4272811M2 | 1 | Harness | |
| 12 | 3778469M1 | 1 | Spacer | Thickness 15 MM |
| 13 | 339560X1 | 2 | Hex. Sock. Screw | M6 X 16 |
| 14 | 339030X1 | 2 | Nut Metric | M6 |
| 15 | 4276108P91 | 1 | Panel | Right Hand |
| 16 | 4275844P91 | 1 | Panel | Left Hand |
| 17 | 3800376M1 | 2 | Buffer | |
| 18 | 72502409 | 4 | Rubber | |
| 19 | 4270244M5 | 1 | Support | |
| 20 | 3783047M5 | 2 | Support | |
| 21 | 4270660M3 | 1 | Support | |
| 22 | 4270260M1 | 1 | Support | |
| 23 | 3780947M1 | 1 | Stop | |
| 24 | 4270673M2 | 1 | Support | |
| 25 | 4273770M1 | 1 | Support | |
| 26 | 4274073M2 | 1 | Support | |
| 27 | 4274076M2 | 1 | Support | |
| 28 | 3783347M2 | 2 | Cable | |
| 29 | 4275845M1 | 1 | Protector | |
| 30 | 390972X1 | 21 | Washer | Diameter 8-17 X 1,7 |
| 31 | 390971X1 | 9 | Washer | Diameter 6-12 X 1,5 |
| 32 | 339124X1 | 7 | Hex. Sock. Screw | M8 X 16 |
| 33 | 339761X1 | 4 | Hex. Sock. Screw | M8 X 25 |
| 34 | 391074X1 | 4 | Hex. Sock. Screw | M6 X 12 |
| 35 | 339169X1 | 5 | Nut | M8 |
| 36 | 339804X1 | 4 | Hex. Sock. Screw | M6 X 25 |
| 37 | 339030X1 | 3 | Nut Metric | M6 |
| 38 | 339666X1 | 2 | Hex. Sock. Screw | M6 X 20 |
| 39 | 3010934X1 | 2 | Rivet | |
| 40 | 339560X1 | 3 | Hex. Sock. Screw | M6 X 16 |
| 41 | 1441500X1 | 3 | Locknut | M6 |

1-WA10-010-A

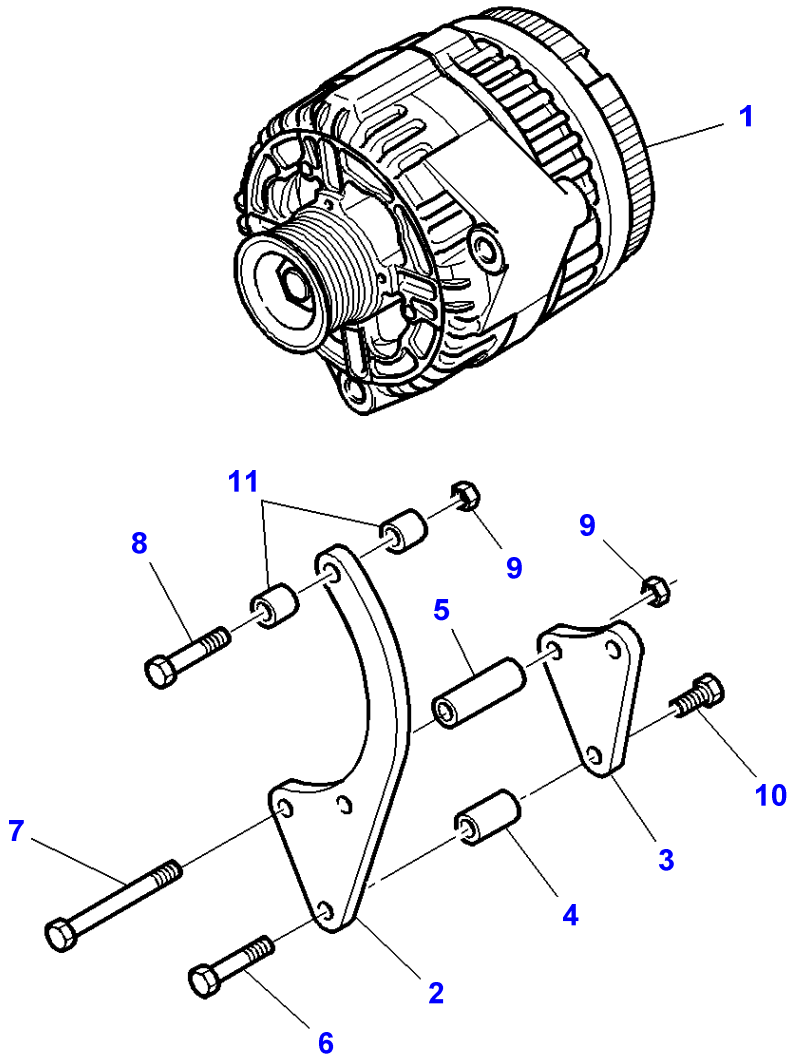


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | **3789983M91** | 1 | Alternator | See Page - Reference Number 010-0015/0<br>150 AMP |
| 2 | 3789862M1 | 1 | Support | |
| 3 | 3789861M1 | 1 | Support | |
| 4 | 3789876M1 | 2 | Spacer | Diameter 8,5-16 X 25,5 |
| 5 | 4271651M1 | 1 | Spacer | Diameter 10,5-20 X 55 |
| 6 | 339168X1 | 2 | Hex. Sock. Screw | M8 X 50 |
| 7 | 3002813X1 | 1 | Hex. Sock. Screw | M10 X 145 |
| 8 | 3009502X1 | 1 | Hex. Sock. Screw | M10 X 80 |
| 9 | 339402X1 | 2 | Nut | M10 |
| 10 | 339009X1 | 2 | Hex. Sock. Screw | M8 X 35 |
| 11 | 3011180X1 | 2 | Spacer | Diameter 8,5-16 X 9,5 |


1-WC35-005-B

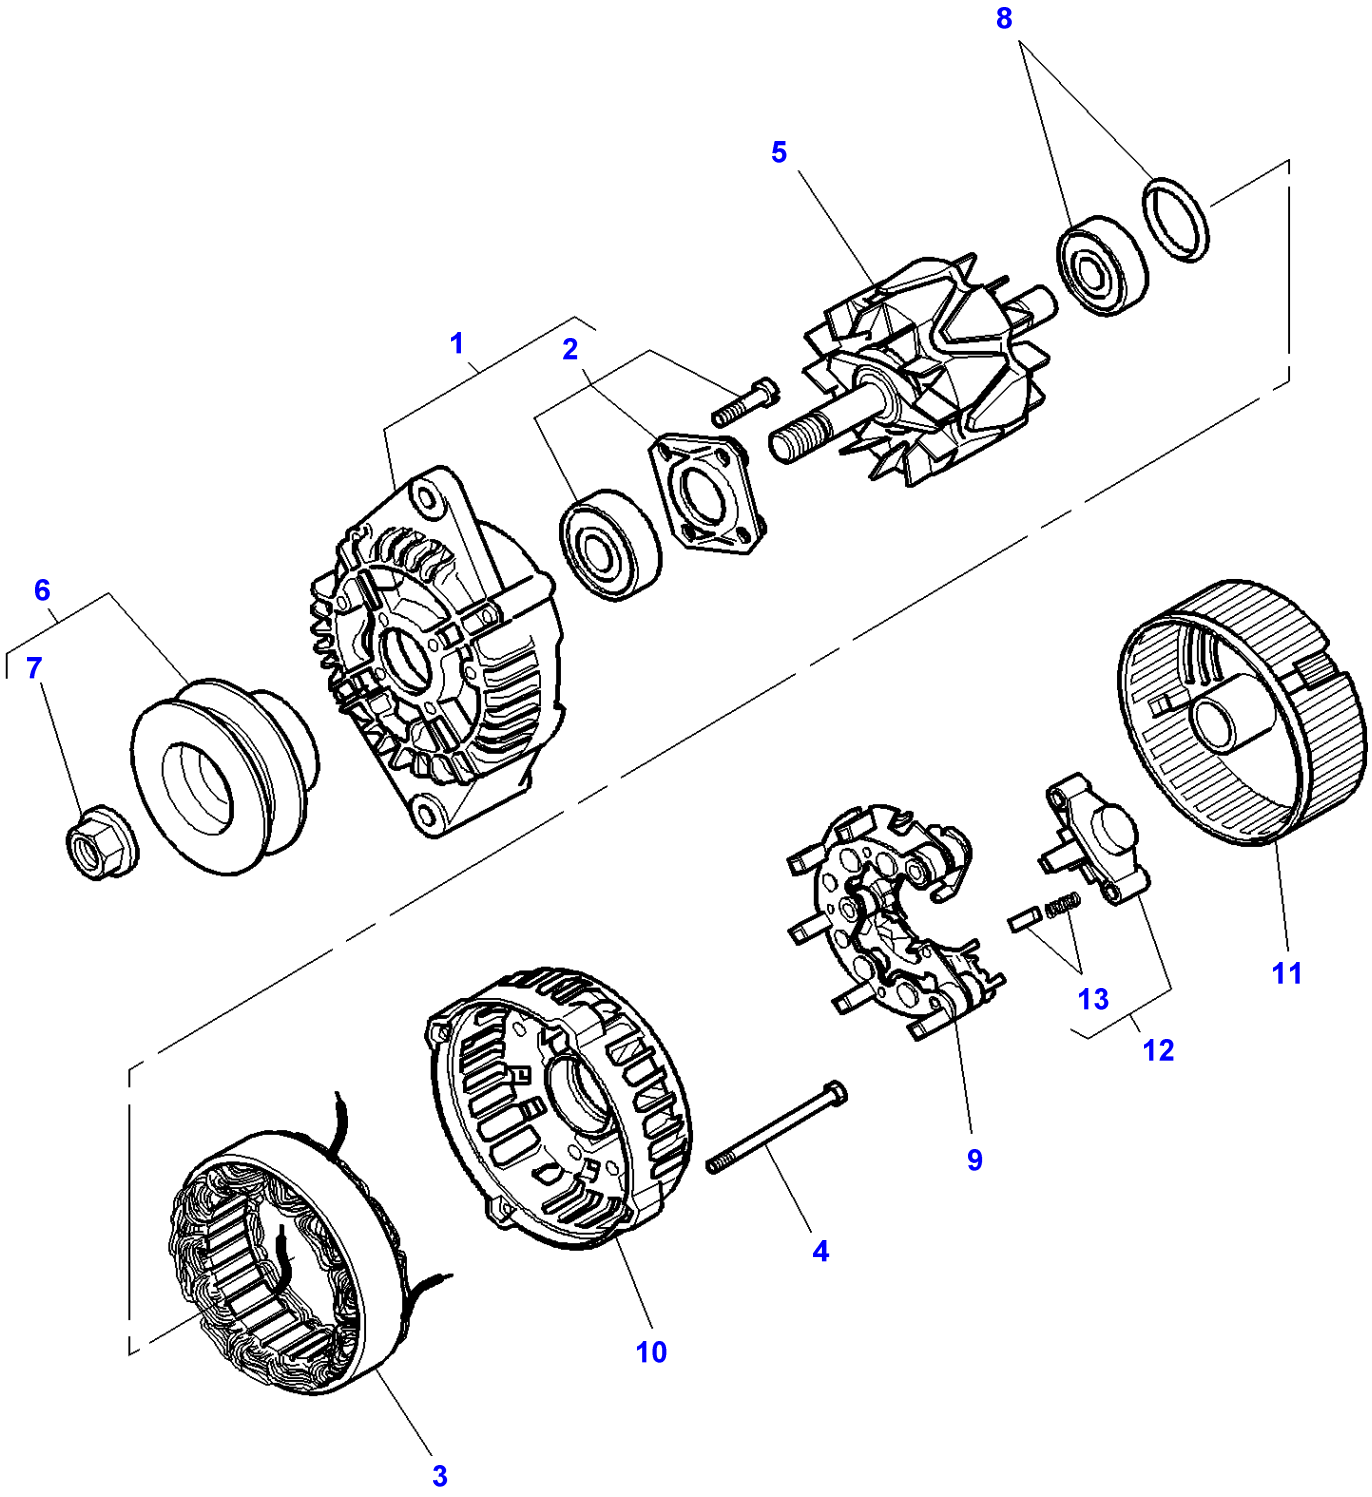

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| | **3789983M91** | 1 | Alternator | 150 A |
| 1 | | 1 | Kit, Drive | Not serviced,order REF. 0 |
| 2 | 3907186M91 | 1 | Kit, Bearing | (1) |
| 3 | | 1 | Stator | Not serviced,order REF. 0 |
| 4 | 3907187M1 | 1 | Bolt | |
| 5 | | 1 | Rotor | Not serviced,order REF. 0 |
| 6 | 3907188M91 | 1 | Pulley | |
| 7 | | 1 | Parts Pack | (6)<br>Not serviced,order REF. 6 |
| 8 | 3907193M91 | 1 | Kit, Bearing | |
| 9 | 3907190M91 | 1 | Rectifier | |
| 10 | | 1 | Housing | Not serviced,order REF. 0 |
| 11 | 3907191M1 | 1 | Cover | |
| 12 | 3907192M91 | 1 | Regulator | |
| 13 | | 1 | Brush | (12)<br>Not serviced,order REF. 12 |

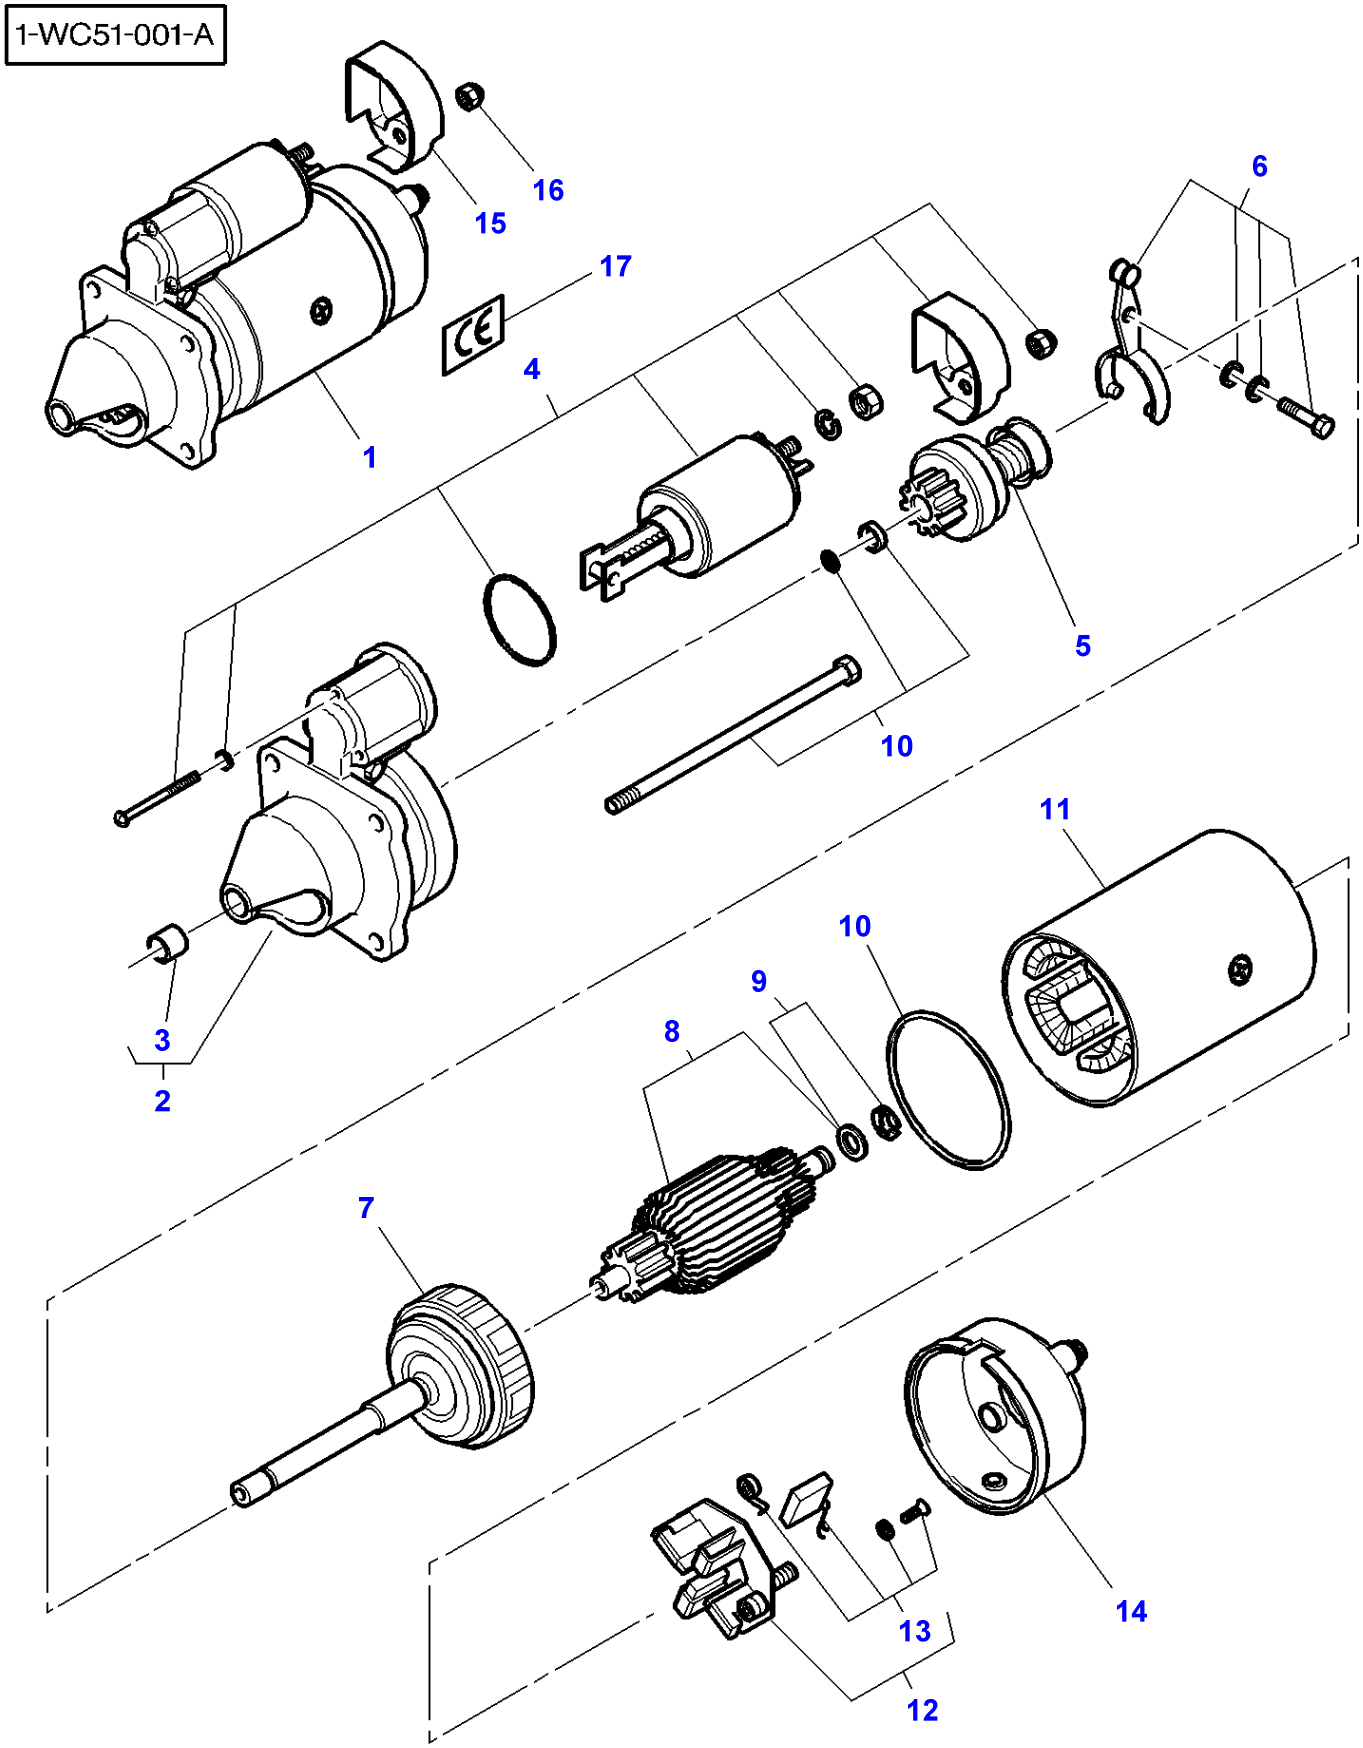
1-WC51-001-A
16
15
17
CE
4
1
6
5
10
11
10
9
8
3
2
7
13
14
12


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Starter Page 010-0020

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3823621M91 | 1 | Startermotor | [A] |
| 2 | | 1 | Housing | (1) |
| | | | | Not serviced,order REF. 1 |
| 3 | 3903761M1 | 1 | Bearing | (2) |
| 4 | 3904366M91 | 1 | Kit, Solenoid | (1) |
| 5 | 3904360M1 | 1 | Drive Gear | (1) |
| 6 | 3904361M91 | 1 | Kit, Lever | (1) |
| 7 | | 1 | Reducer | (1) |
| | | | | Not serviced,order REF. 1 |
| 8 | | 1 | Rotor | (1) |
| | | | | Not serviced,order REF. 1 |
| 9 | 3904362M91 | 1 | Kit, Bearing | (1) |
| 10 | 3904363M91 | 1 | Parts Pack | (1) |
| 11 | | 1 | Stator | (1) |
| | | | | Not serviced,order REF. 1 |
| 12 | 3904364M91 | 1 | Holder | (1) |
| 13 | 3904365M91 | 1 | Kit, Brush | (12) |
| 14 | | 1 | Cover | (1) |
| | | | | Not serviced,order REF. 1 |
| 15 | 3786093M1 | 1 | Protector | |
| 16 | 3786092M1 | 1 | Nut | M10 |
| 17 | 3788193M1 | 1 | Label | |

**FOOTNOTE [A]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

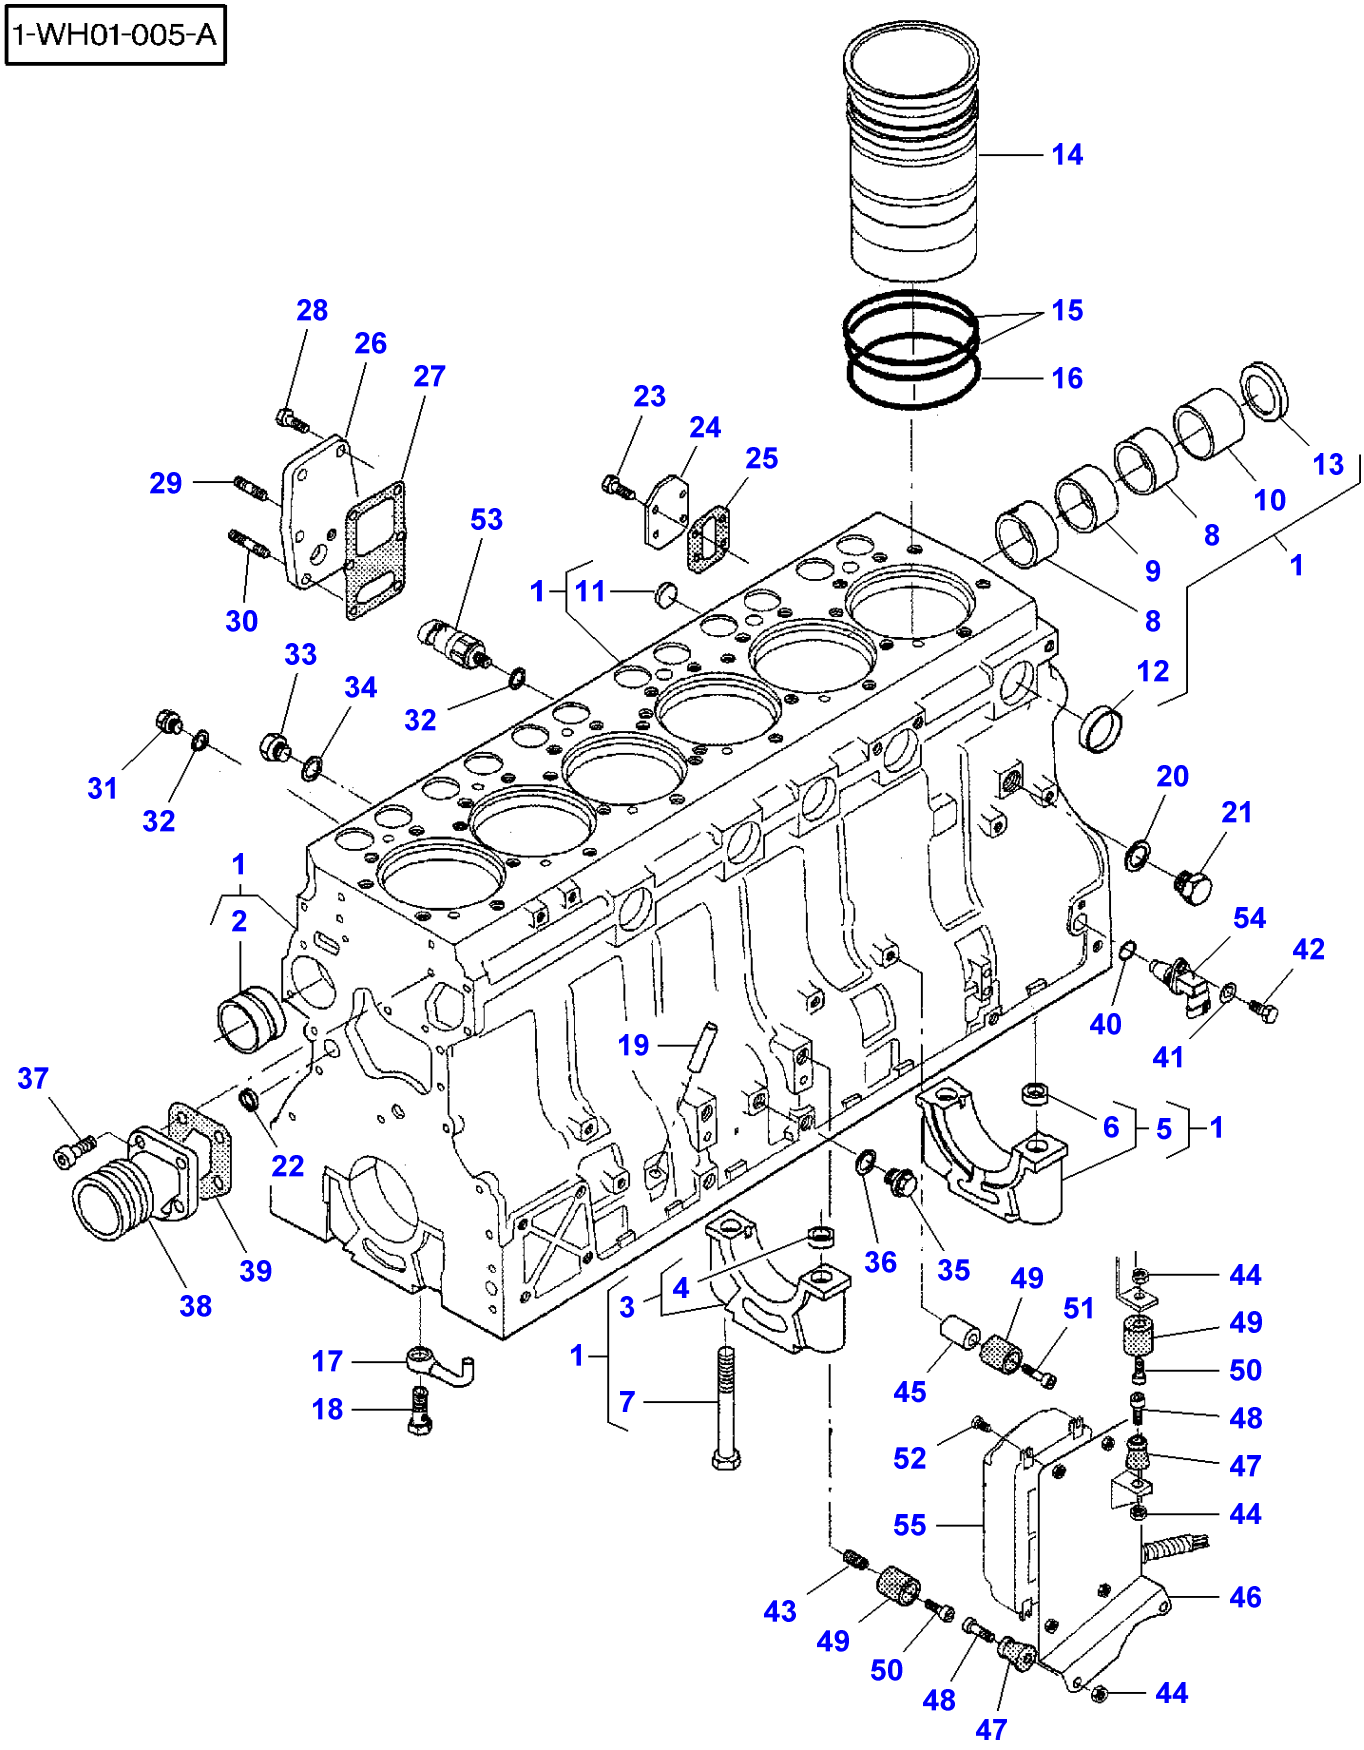
1-WH01-005-A
14
15
16
28
26
27
23
24
25
29
53
13
10
8
9
1
30
1
11
8
33
34
12
32
31
32
20
21
1
2
54
42
40
41
19
37
6
5
1
22
36
35
39
38
4
49
44
3
51
49
1
50
17
45
48
7
18
52
47
55
44
43
46
49
50
48
47
44


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Cylinder Block Page 010-0025

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836867046 | 1 | Cylinder Block | |
| 2 | V836866069 | 1 | Bush | (1) |
| | V836866036 | 1 | Bush | (1) Thickness +0,4 MM |
| 3 | | 6 | Bearing Carrier | (1) Not serviced,order REF. 1 |
| 4 | V836214478 | 12 | Bush | (3) |
| 5 | | 1 | Bearing Carrier | (1) Not serviced,order REF. 1 |
| 6 | V836214478 | 2 | Bush | (5) |
| 7 | V529903180 | 14 | Screw | (1) |
| 8 | V836852460 | 2 | Bush | (1) |
| 9 | V836852459 | 1 | Bush | (1) |
| 10 | V836852461 | 1 | Bush | (1) |
| 11 | V640016018 | 1 | Plug | (1) |
| 12 | V640016040 | 5 | Plug | (1) |
| 13 | V836852744 | 1 | Plug | |
| 14 | V836867048 | 6 | Liner | |
| | V836867050 | X | Liner | Thickness 9,08 MM |
| | V836867051 | X | Liner | Thickness 9,13 MM |
| | V836867052 | X | Liner | Thickness 9,23 MM |
| 15 | V836855446 | 12 | O Ring | |
| 16 | V836855447 | 6 | O Ring | |
| 17 | V836846231 | 6 | Pipe | |
| 18 | V836338601 | 6 | Valve. | |
| 19 | V836014334 | 1 | Pipe | |
| 20 | V615881824 | 1 | Seal | |
| 21 | V836019756 | 1 | Plug | |
| 22 | V640016016 | 4 | Plug | |
| 23 | V528801362 | 4 | Screw | M8 X 16 |
| 24 | V836866957 | 1 | Cover | |
| 25 | V836866958 | 1 | Gasket | |
| 26 | V836855678 | 1 | Cover | |
| 27 | V836322852 | 1 | Gasket | |
| 28 | V528801380 | 5 | Screw | M8 X 20 |
| 29 | V546801360 | 1 | Bolt | M8 X 16 |
| 30 | V546801400 | 1 | Bolt | M8 X 25 |
| 31 | V640325110 | 5 | Plug | |
| 32 | V615571014 | 6 | Seal | |
| 33 | V836119079 | 1 | Plug | |
| 34 | V615881620 | 1 | Seal | |
| 35 | V640325014 | 1 | Plug | |
| 36 | V615881420 | 1 | Gasket | |
| 37 | VHC9326 | 4 | Screw | M8 X 20 |
| 38 | V836855629 | 1 | Sleeve | |
| 39 | V836855554 | 1 | Gasket | |
| 40 | VKH7070 | 1 | O Ring | |
| 41 | V500050842 | 1 | Washer | |
| 42 | V528801362 | 1 | Screw | M8 X 16 |
| 43 | V836859153 | 1 | Nipple | |
| 44 | V510600802 | 4 | Nut | M8 |
| 45 | V836652323 | 1 | Sleeve | |
| 46 | V836867134 | 1 | Bracket | |
| 47 | V836666095 | 3 | Knob | |
| 48 | V581804630 | 3 | Screw | M8 X 30 |
| 49 | V836666094 | 3 | Bush | |
| 50 | V581804580 | 2 | Screw | M8 X 16 |
| 51 | V581804680 | 1 | Screw | M8 X 55 |
| 52 | V572504172 | 4 | Screw | M6 X 12 |
| 53 | **V836866613** | 1 | Sensor | |
| 54 | **V836866392** | 1 | Eng.Speed Sensor | |
| 55 | V836864745 | 1 | Control Unit | MF 8470 |
| | V836869165 | 1 | Control Unit | MF 8480 |


1-WH20-004-A

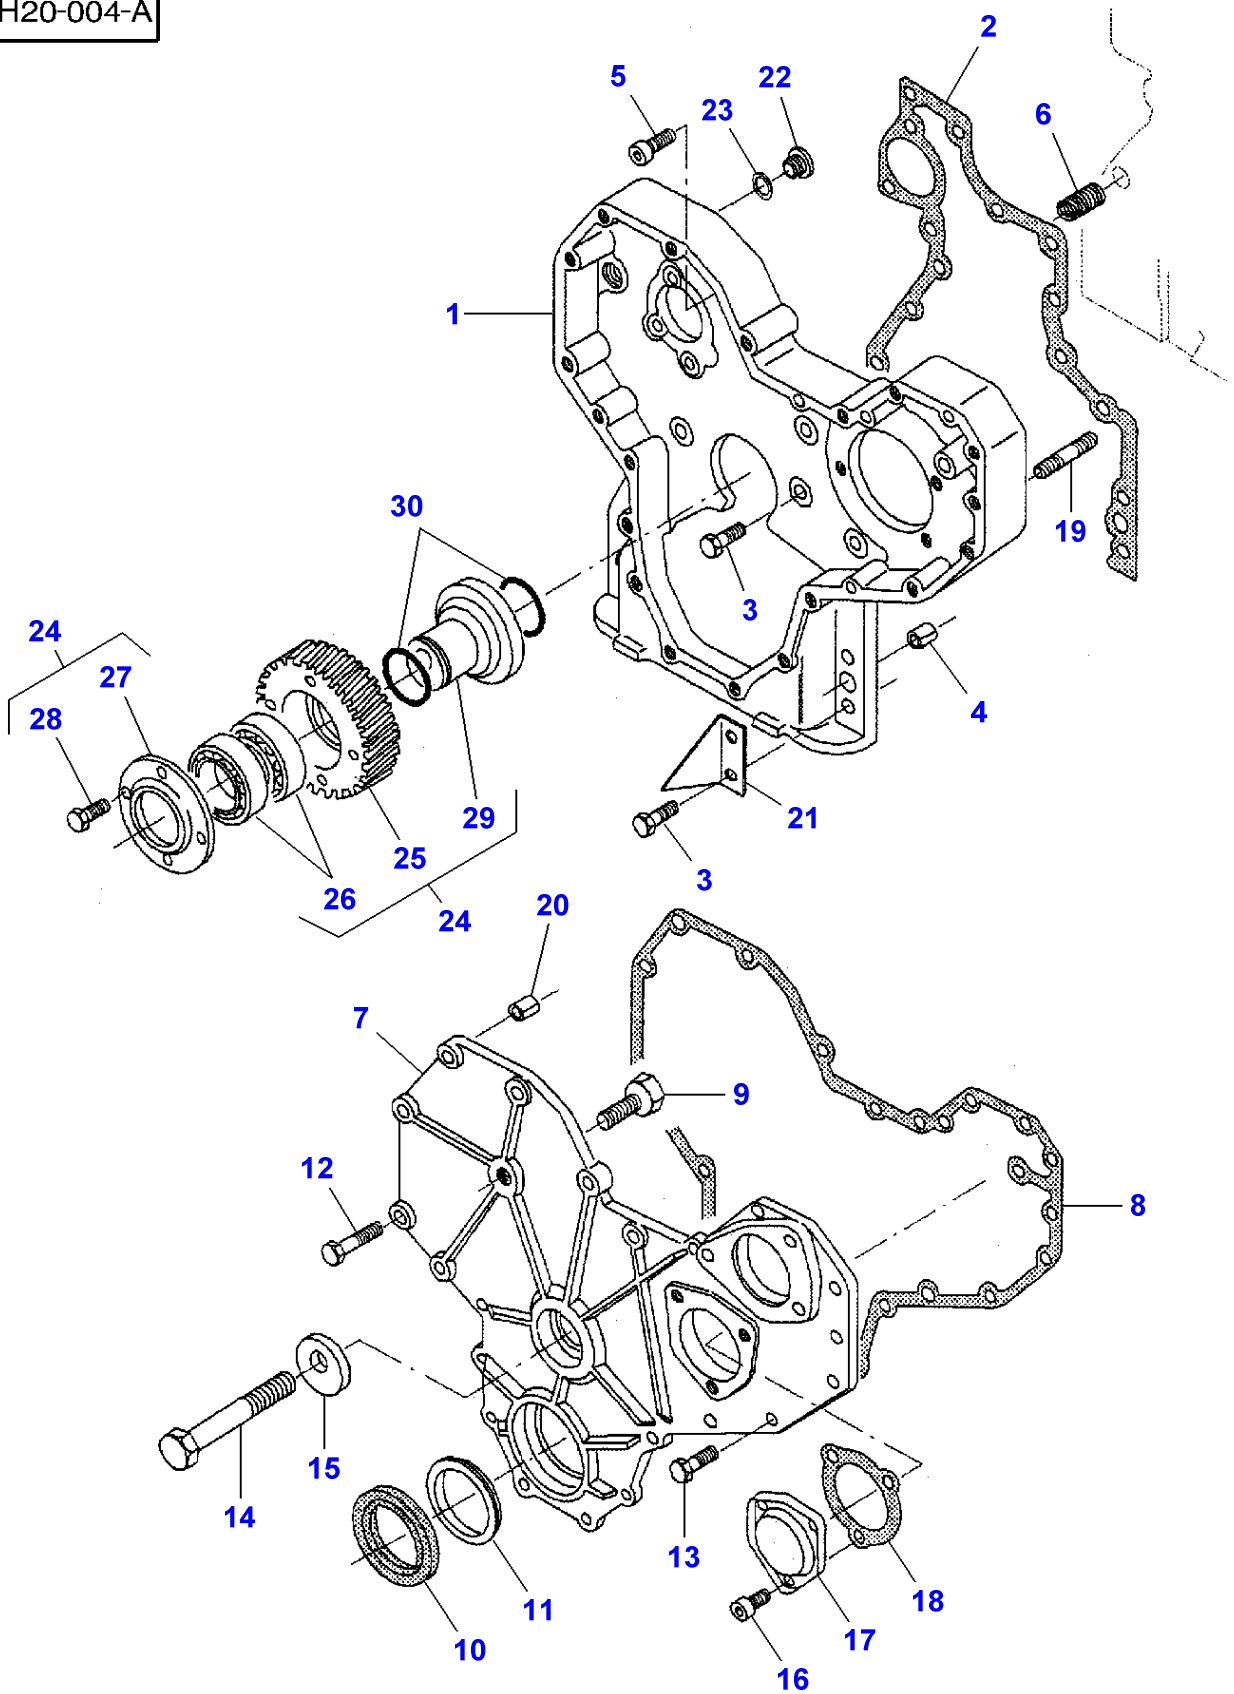
2
5
22
23
6
1
19
30
3
24
27
28
4
29
21
25
3
26
24
20
7
9
12
8
15
14
13
18
11
17
10
16

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836866420 | 1 | Housing | |
| 2 | V836647419 | 1 | Gasket | |
| 3 | V528801400 | 15 | Screw | M8 X 25 |
| 4 | V598359850 | 2 | Pin | |
| 5 | V581804620 | 1 | Screw | M8 X 25 |
| 6 | V836859153 | 1 | Nipple | |
| 7 | V836859151 | 1 | Cover | |
| 8 | V836859152 | 1 | Gasket | |
| 9 | V836859160 | 1 | Restrictor | |
| 10 | V836840883 | 1 | Oil Seal | |
| 11 | V836855636 | 1 | Gasket | |
| 12 | V529801430 | 4 | Screw | M8 X 40 |
| 13 | V528801410 | 13 | Adjusting Screw | M8 X 30 |
| 14 | V529902730 | 1 | Screw | M14 X 90 |
| 15 | V836859161 | 1 | Bridle | |
| 16 | V581804570 | 3 | Screw | M8 X 12 |
| 17 | V836136717 | 1 | Cover | |
| 18 | V836129946 | 1 | Gasket | |
| 19 | V546801840 | 4 | Bolt | M10 X 45 |
| 20 | V598359860 | 2 | Pin | |
| 21 | V836859588 | 1 | Angle. | |
| 22 | V640325018 | 1 | Plug | |
| 23 | V615881822 | 1 | Seal | |
| 24 | V836859165 | 1 | Gear | |
| 25 | V836859163 | 1 | Gear | (24) |
| 26 | V610071079 | 2 | Ball Bearing | (24) |
| 27 | V836859164 | 1 | Flange | (24) |
| 28 | V528801380 | 4 | Screw | (24) M8 X 20 |
| 29 | V836859162 | 1 | Shaft | (24) |
| 30 | V614603024 | 2 | O Ring | |

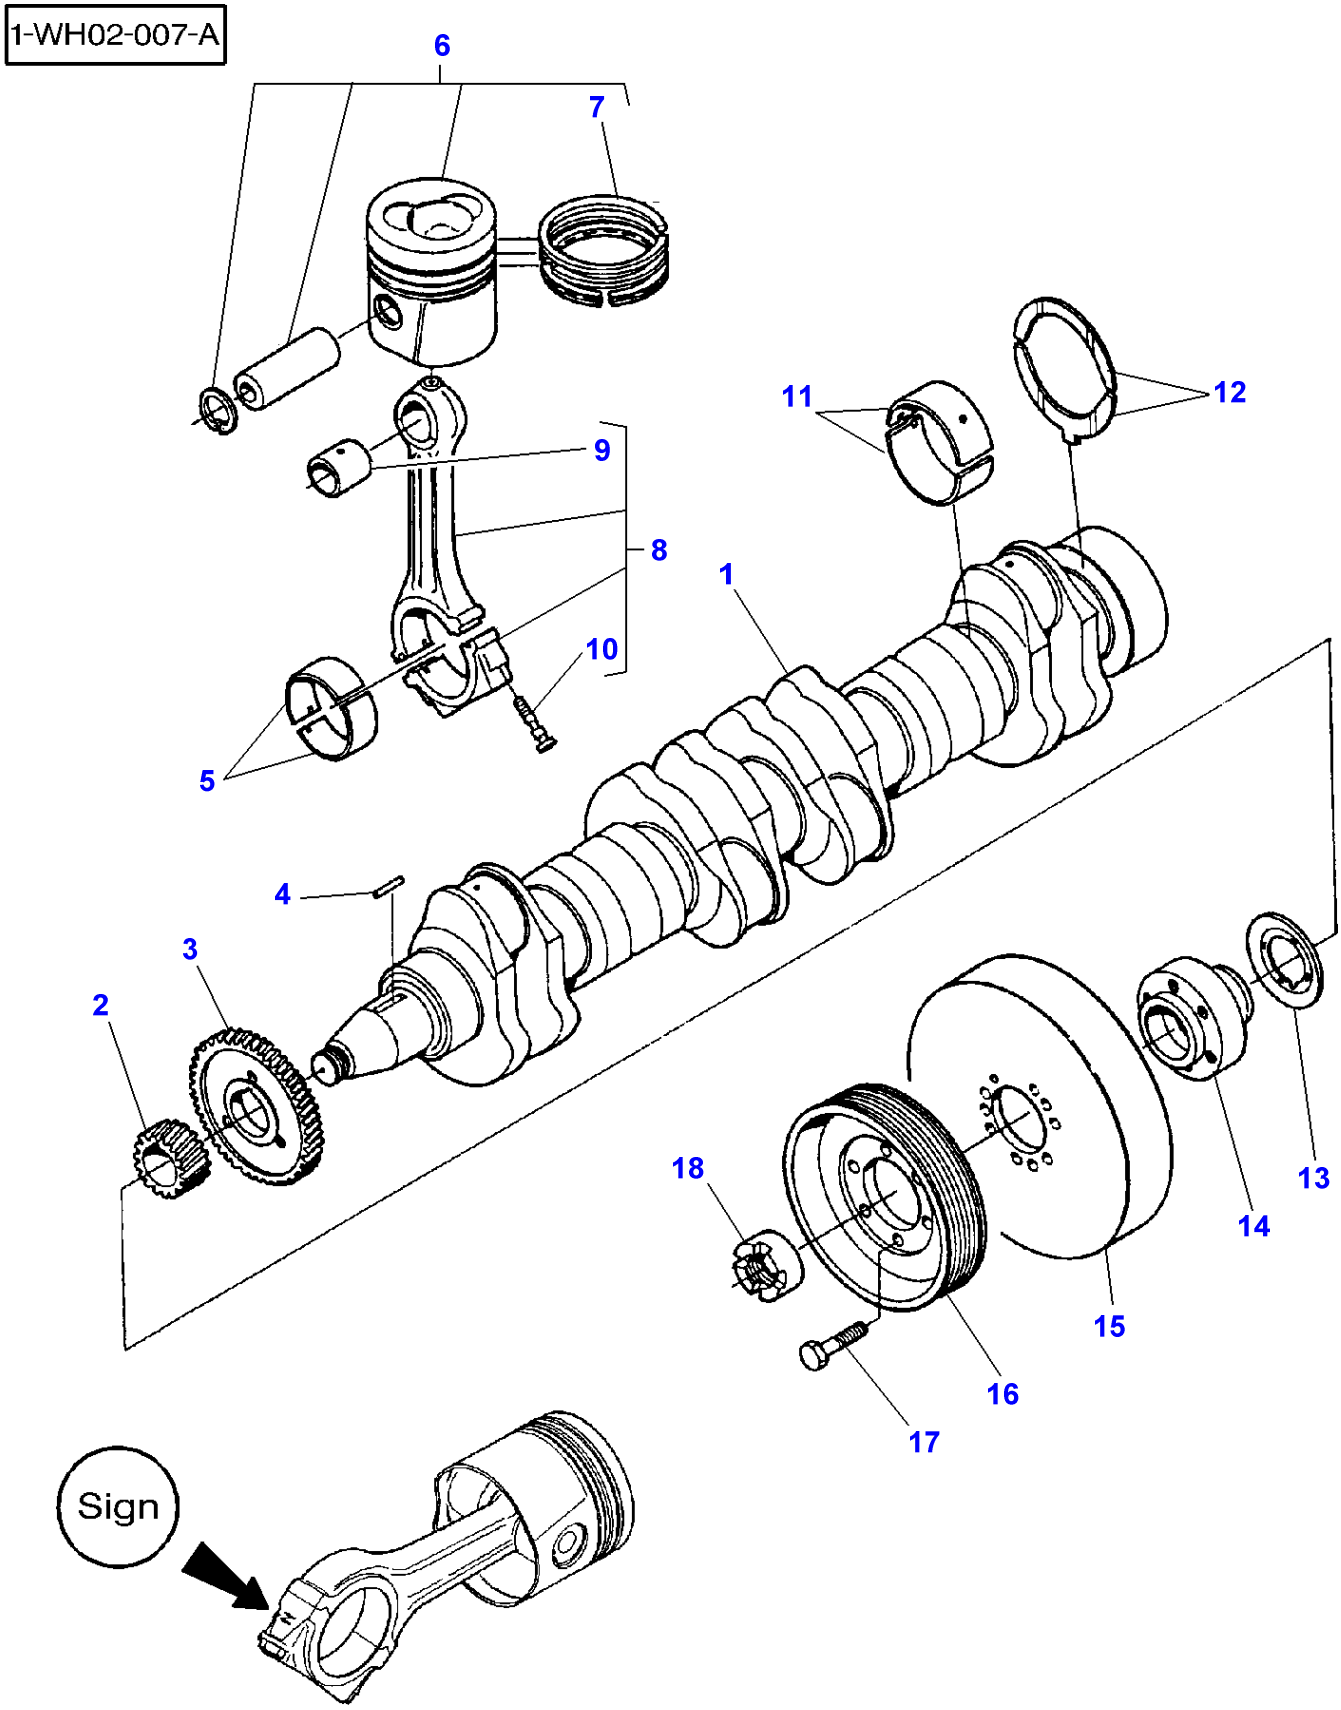
1-WH02-007-A
6
7
9
8
10
5
11
12
1
4
3
2
18
13
14
15
16
17
Sign


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Crankshaft, Pistons And Connecting Rods Page 010-0035

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836866477 | 1 | Crankshaft | |
| 2 | V836855559 | 1 | Gear | |
| 3 | V836855558 | 1 | Gear | |
| 4 | V836855525 | 1 | Key | |
| 5 | V836336302 | 6 | Bearing | STANDARD |
| | V836338650 | X | Bearing | Diameter 72,731 MM<br>72,750 MM |
| | V836338651 | X | Bearing | Diameter 72,481 MM<br>72,500 MM |
| | V836338652 | X | Bearing | Diameter 71,981 MM<br>72,000 MM |
| | V836338653 | X | Bearing | Diameter 71,481 MM<br>71,500 MM |
| 6 | V836866182 | 6 | Piston | |
| 7 | V836840887 | 1 | Kit, Piston Ring | (6) |
| 8 | V836340948 | X | Conrod | Replace and repair. Old not interchangeable with new V836864104 |
| | V836864101 | X | Conrod | 2230-2249g E |
| | V836864102 | X | Conrod | 2250-2269g F |
| | V836864103 | X | Conrod | 2270-2289g G |
| | V836340948 | X | Conrod | 2290-2309g H<br>Replace and repair. Old not interchangeable with new V836864104 |
| | V836864105 | X | Conrod | 2310-2329g I |
| | V836864106 | X | Conrod | 2330-2349g J |
| | V836864107 | X | Conrod | 2350-2369g K |
| 9 | V836864288 | 1 | Bush | (8) |
| | V836338606 | X | Bush | (8)<br>Diameter + 0,5 MM |
| 10 | V836864141 | 2 | Screw | (8) |
| 11 | V836840944 | 7 | Main Bearing | STANDARD |
| | V836840978 | X | Main Bearing | Diameter 89,735 MM<br>89,770 MM |
| | V836840979 | X | Main Bearing | Diameter 89,485 MM<br>89,520 MM |
| | V836840980 | X | Main Bearing | Diameter 88,985 MM<br>89,020 MM |
| | V836840981 | X | Main Bearing | Diameter 88,485 MM<br>88,520 MM |
| 12 | V836840945 | 2 | Thrust Washer | STANDARD |
| | V836840982 | X | Thrust Washer | 0,10 MM |
| | V836840983 | X | Thrust Washer | 0,20 MM |
| 13 | V836855637 | 1 | Ring | |
| 14 | V836855641 | 1 | Hub | |
| 15 | V836840882 | 1 | Shock Absorber | |
| 16 | V836855690 | 1 | Pulley | |
| 17 | V528902230 | 6 | Screw | M12 X 40 |
| 18 | V836322221 | 1 | Nut | |

1-WH22-001-A

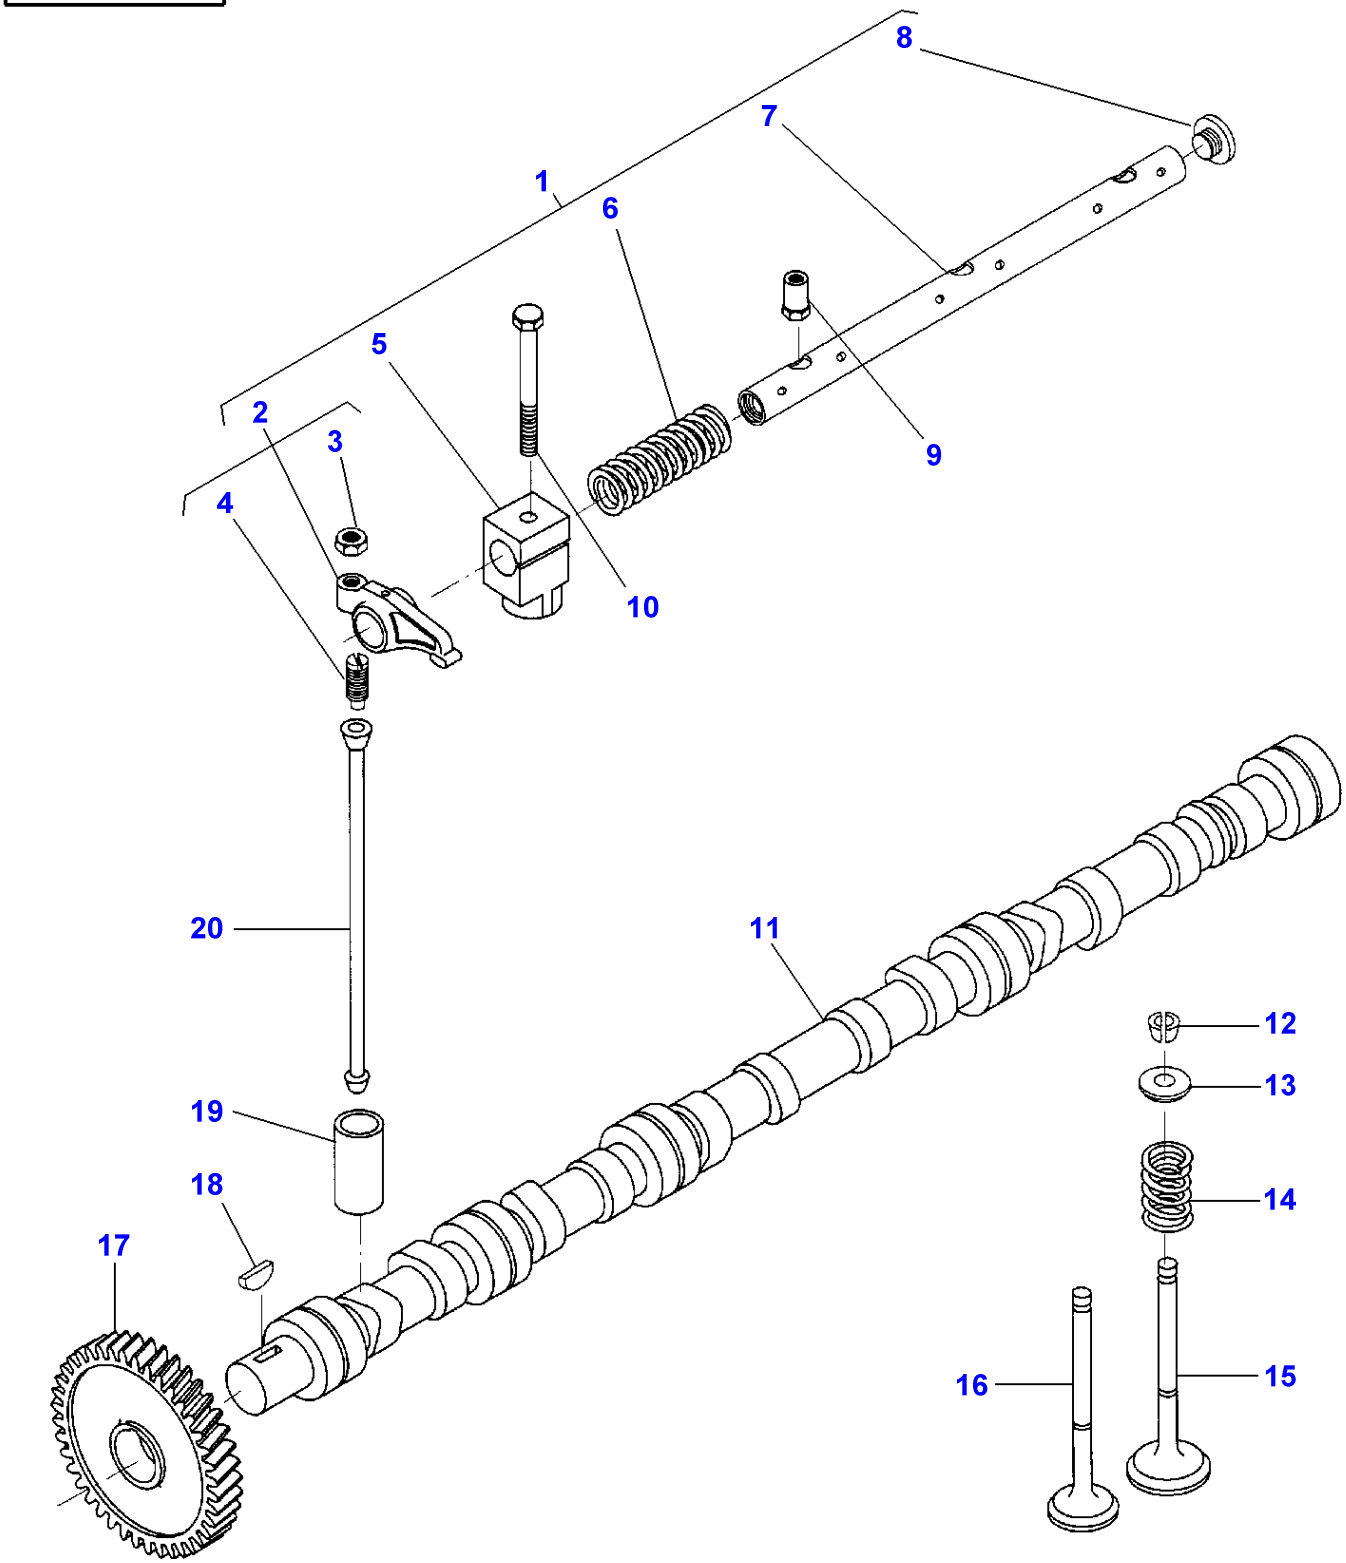


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836666610 | 2 | Rocker Shaft | Replace and repair. Old not interchangeable with new V836655911 |
| 2 | V836666608 | 12 | Rocker | (1)<br>Replace and repair. Old not interchangeable with new V836655873 |
| 3 | V512861000 | 12 | Nut | (2) |
| 4 | V836655866 | 12 | Adjusting Screw | (2) |
| 5 | V836666609 | 6 | Bracket | (1) |
| 6 | V836655884 | 4 | Spring | (1) |
| 7 | V836655870 | 2 | Shaft | (1) |
| 8 | V836655899 | 4 | Plug | (1) |
| 9 | V836655406 | 4 | Nut | |
| 10 | V529801910 | 2 | Screw | M10 X 80 |
| 11 | V836862528 | 1 | Camshaft | Replace and repair. Old not interchangeable with new V836866054 |
| 12 | V836646382 | 24 | Cotter | |
| 13 | V836646381 | 12 | Cup | |
| | V836855347 | X | Ring | [A]<br>Diameter +0,2 MM |
| | V836652269 | X | Ring | [B]<br>Diameter +0,2 MM |
| 14 | V836646380 | 12 | Spring | |
| 15 | V836646356 | 6 | Valve Inlet | |
| 16 | V836646357 | 6 | Valve Exhaust | |
| 17 | V836855568 | 1 | Gear | |
| 18 | V603305760 | 1 | Key | |
| 19 | V836014264 | 12 | Tappet | |
| 20 | V836355872 | 12 | Rod | |

**FOOTNOTE [A]** FOR VALVE INLET
**FOOTNOTE [B]** FOR VALVE EXHAUST

1-WH03-005-B

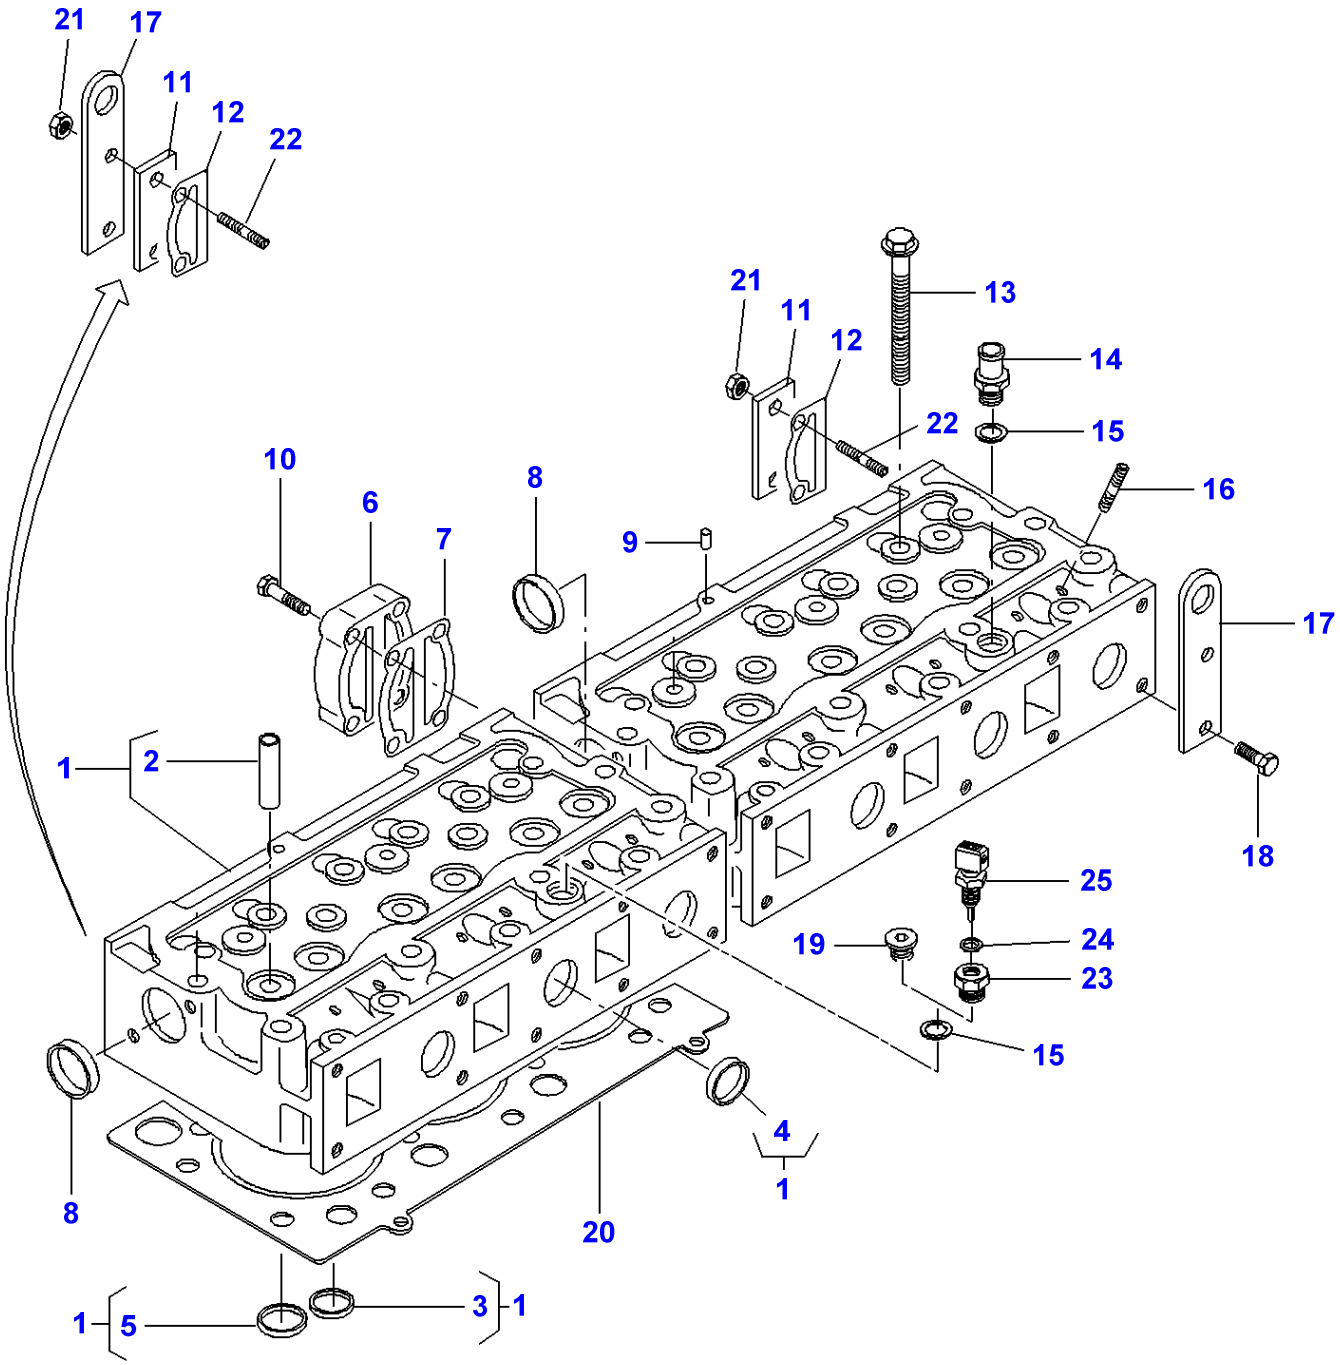
21
17
11
12
22
21
11
12
13
14
15
22
16
10
6
8
7
9
17
1
2
18
25
19
24
23
15
4
1
8
20
1
5
3
1


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Cylinder Head Page 010-0045

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836855381 | 2 | Cylinder Head | |
| 2 | V836647601 | 12 | Guide | (1) |
| 3 | V836647600 | 6 | Pressure Valve | (1) |
| 4 | V836647942 | 10 | Plug | (1) |
| 5 | V836647936 | 6 | Valve Seat | (1) |
| 6 | V836855348 | 1 | Connector | |
| 7 | V836867390 | 1 | Gasket | Replace and repair. Old not interchangeable with new V836866214 |
| 8 | V640016045 | 2 | Plug | |
| 9 | V595959140 | 2 | Pin | |
| 10 | V528801830 | 4 | Screw | M10 X 40 |
| 11 | V836855350 | 2 | Plate | |
| 12 | V836867391 | 1 | Gasket | |
| 13 | V836859104 | 32 | Screw | |
| 14 | V836119837 | 1 | Union | |
| 15 | V615881822 | 2 | Seal | |
| 16 | V546901435 | 12 | Stud | M8 X 40 |
| 17 | V836859722 | 2 | Plate | |
| 18 | V528801800 | 2 | Screw | M10 X 25 |
| 19 | | | Not Used | |
| 20 | **V836666302** | 2 | Head Gasket | |
| 21 | V504801000 | 4 | Nut | M10 |
| 22 | V836659785 | 4 | Stud | |
| 23 | V636359676 | 1 | Adaptor | |
| 24 | V615871014 | 1 | O Ring | |
| 25 | **V836864360** | 1 | Temp. Sensor | |

1-WH23-003-B

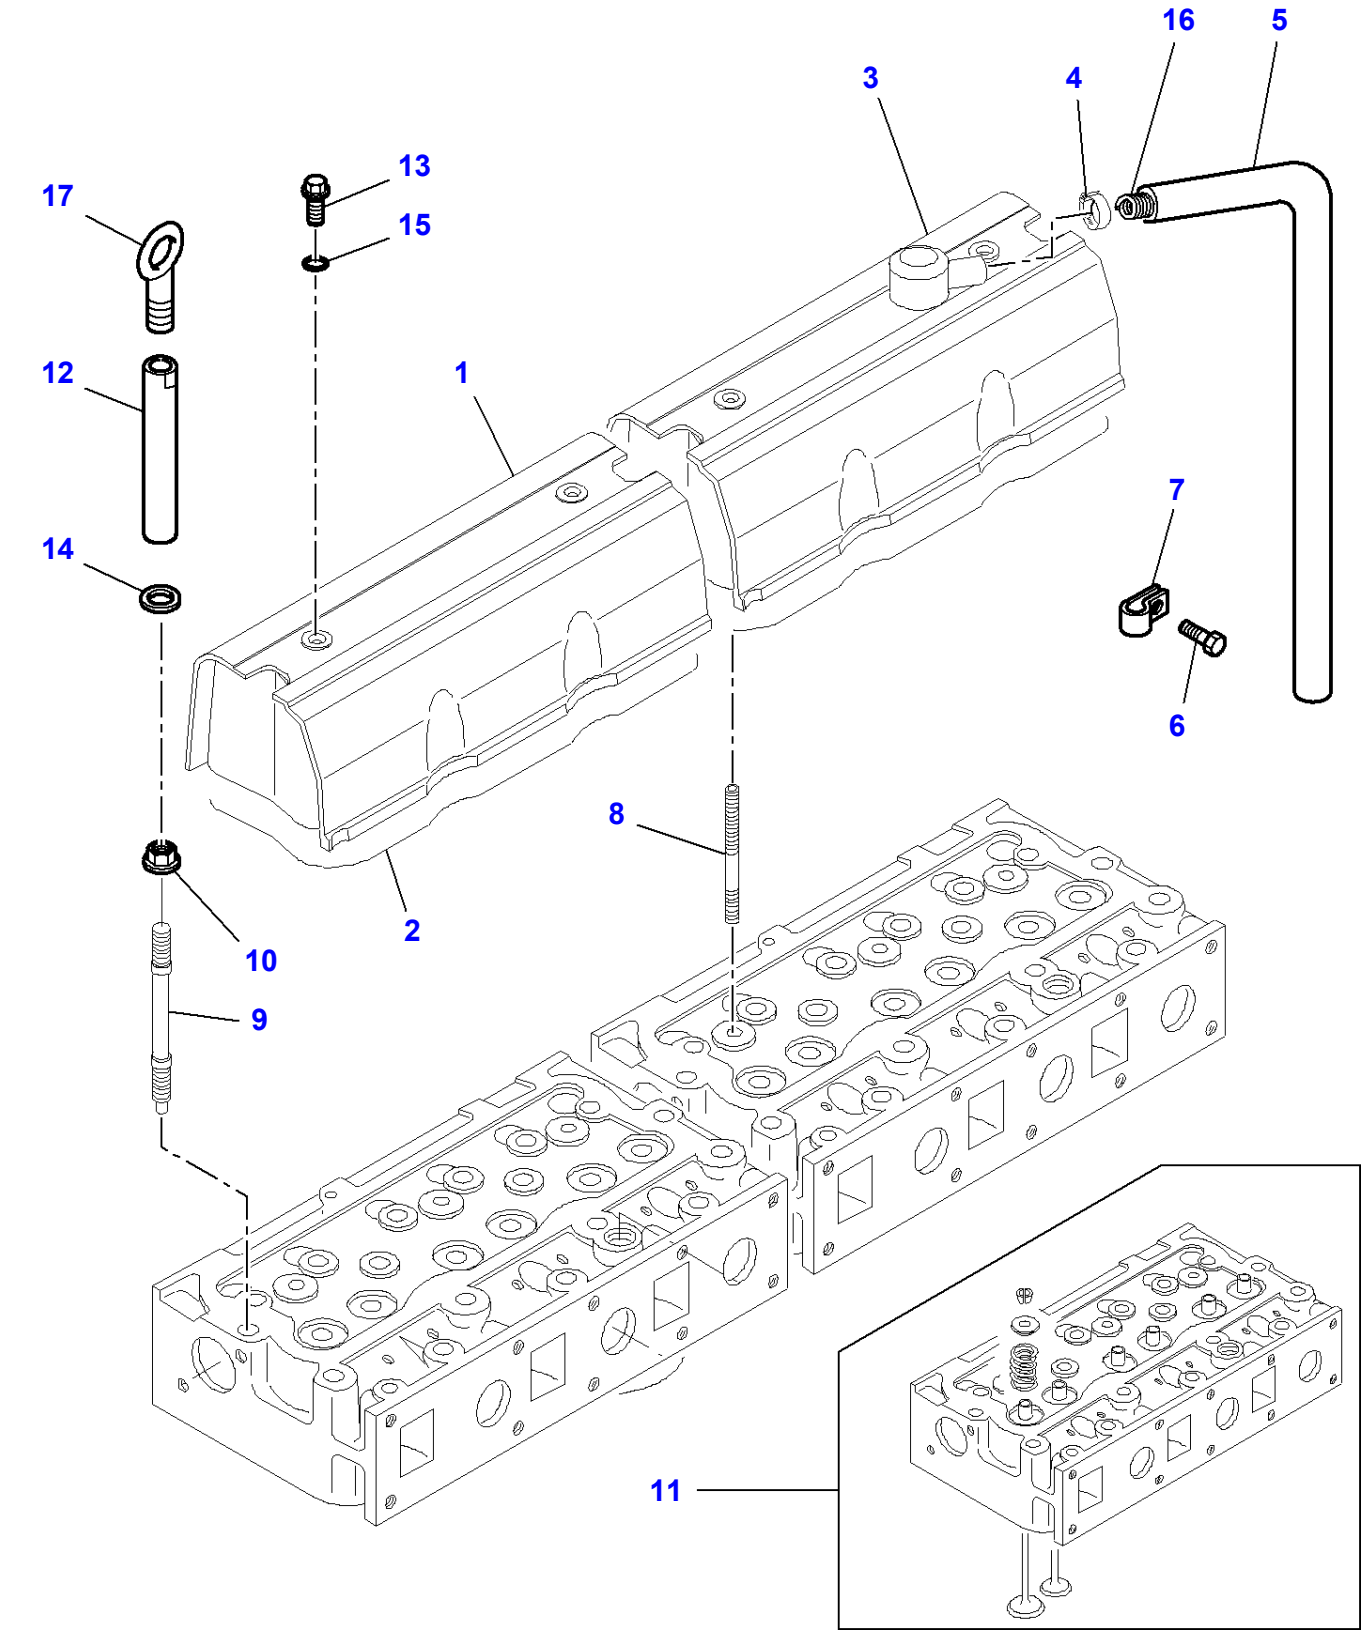


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836666801 | 1 | Valve Cover | |
| 2 | **V836667243** | 2 | Cover Gasket | |
| 3 | V836667206 | 1 | Valve Cover | |
| 4 | V602088532 | 1 | Band | |
| 5 | V836755007 | 1 | Hose Flexible | |
| 6 | V528801760 | 1 | Screw | M10 X 16 |
| 7 | V836659539 | 1 | Band | |
| 8 | V546801900 | 4 | Stud | M10 X 75 |
| 9 | V836859109 | 2 | Stud | |
| 10 | V836859110 | 2 | Nut | |
| 11 | V836640897 | 2 | Cylinder Head | |
| 12 | V836647835 | 1 | Nut Special | |
| 13 | V528801780 | 4 | Screw | M10 X 20 |
| 14 | V500151302 | 2 | Washer | |
| 15 | V614901030 | 4 | O Ring | |
| 16 | V836659103 | 1 | Spring | |
| 17 | | X | Not Used | |

1-WH11-006-A

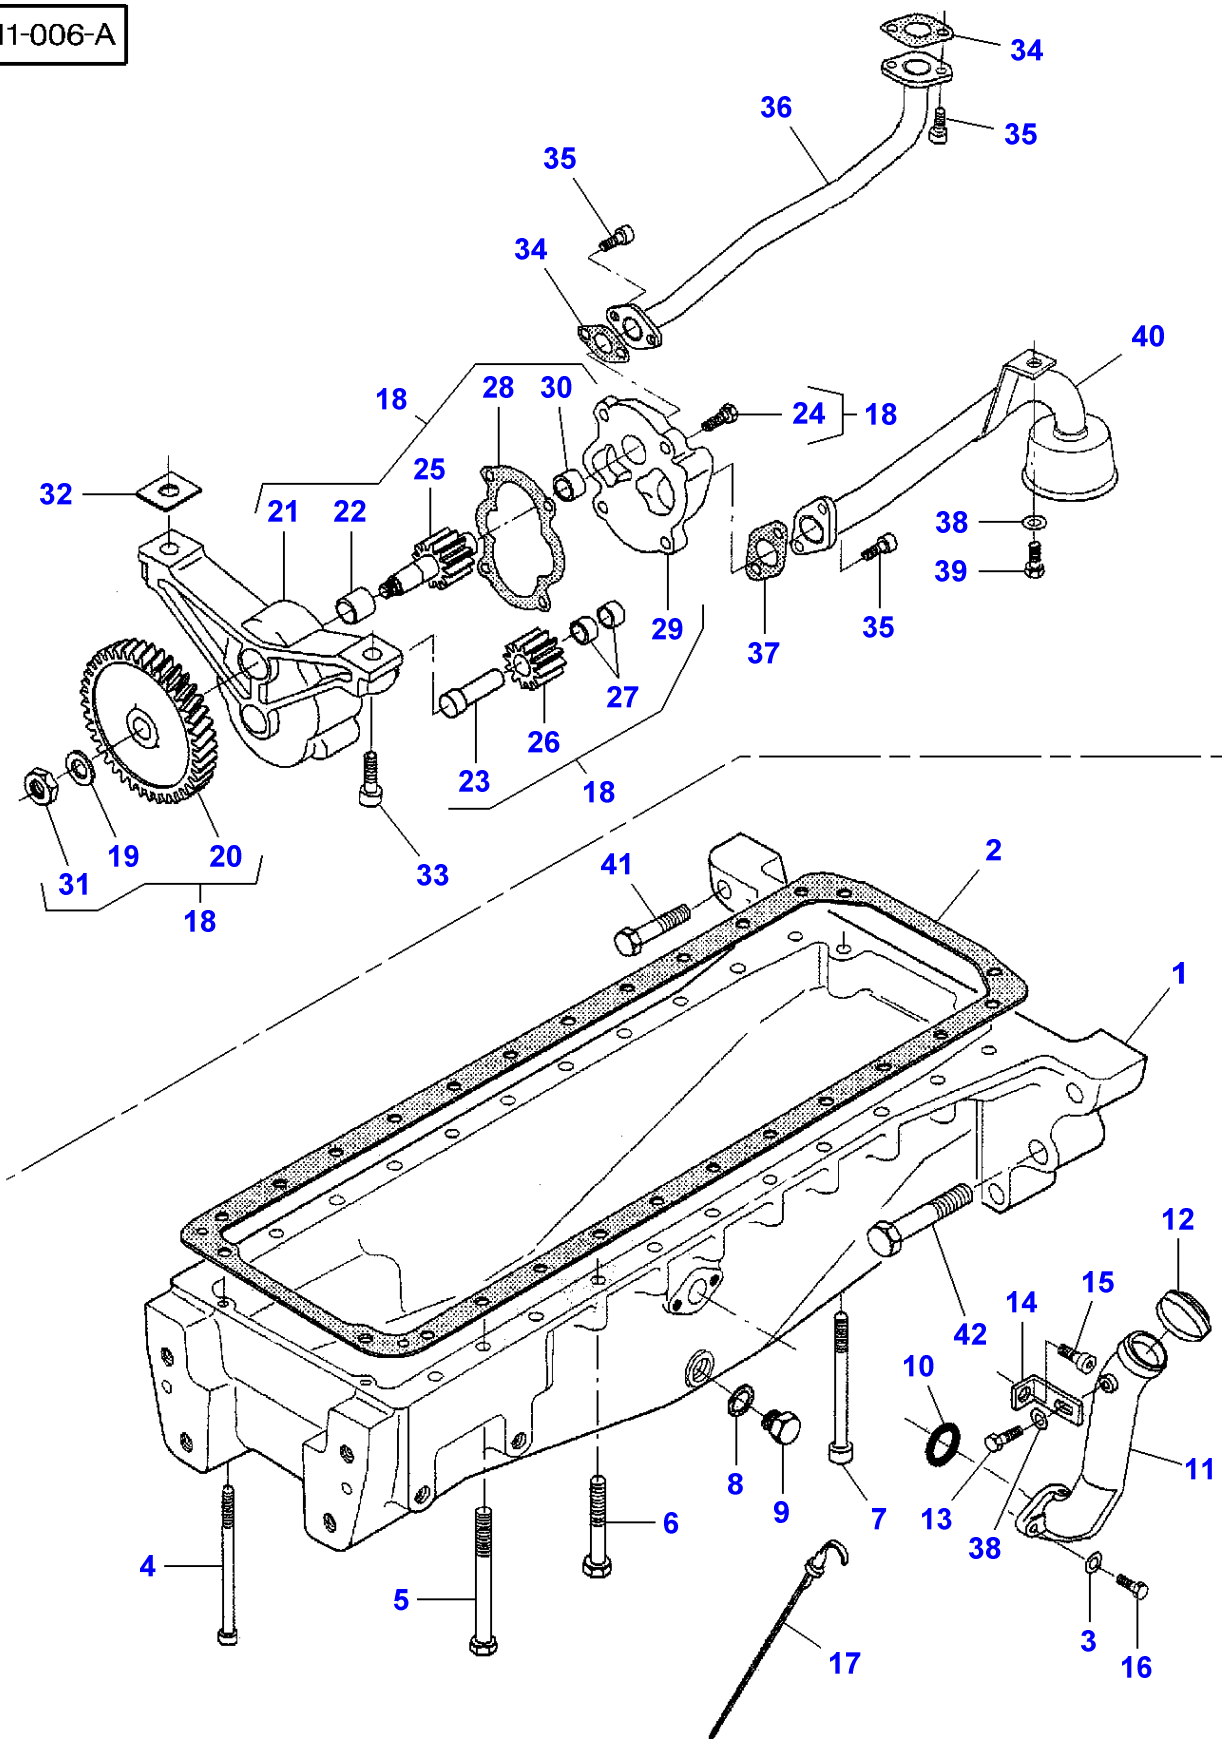

34
36
35
35
34
40
18
28
30
24
18
32
25
21
22
38
39
29
37
35
27
26
23
18
19
20
31
33
18
41
2
1
12
15
14
42
10
11
8
9
7
13
38
6
4
5
3
16
17

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836866840 | 1 | Sump | |
| 2 | V836322183 | 1 | Gasket | |
| 3 | V500950800 | 2 | Washer | |
| 4 | V581704840 | 2 | Screw | M8 X 170 |
| 5 | V529701950 | 6 | Screw | M10 X 100 |
| 6 | V529701880 | 16 | Screw | M10 X 65 |
| 7 | V581705200 | 2 | Screw | M10 X 130 |
| 8 | V615881827 | 1 | Seal | |
| 9 | V836655493 | 1 | Plug | M18 |
| 10 | V614603230 | 1 | O Ring | |
| 11 | V836855400 | 1 | Breather | |
| 12 | V836659697 | 1 | Cap | |
| 13 | V528801362 | 1 | Screw | M8 X 16 |
| 14 | V836655401 | 1 | Support | |
| 15 | V581805800 | 1 | Screw | M14 X 20 |
| 16 | V528801380 | 2 | Screw | M8 X 20 |
| 17 | V836338637 | 1 | Dipstick | |
| 18 | V836855300 | 1 | Oil Pump | |
| 19 | V836122910 | 1 | Washer | (18) |
| 20 | V836338667 | 1 | Gear | (18) |
| 21 | V836338186 | 1 | Frame | (18) |
| 22 | V836322909 | 1 | Bush | (18) |
| 23 | V836322906 | 1 | Shaft | (18) |
| 24 | V528801380 | 4 | Screw | (18) M8 X 20 |
| 25 | V836338182 | 1 | Gear | (18) |
| 26 | V836338180 | 1 | Gear | (18) |
| 27 | V836322909 | 2 | Bush | (18) |
| 28 | V836338188 | 1 | Gasket | (18) |
| 29 | V836855297 | 1 | Cover | (18) |
| 30 | V836322909 | 1 | Bush | (18) |
| 31 | V504861000 | 1 | Nut | (18) M10 |
| 32 | V836007871 | X | Shim | |
| 33 | V581805050 | 2 | Screw | M10 X 40 |
| 34 | V836008449 | 2 | Gasket | |
| 35 | VHC9326 | 6 | Screw | M8 X 20 |
| 36 | V836855673 | 1 | Pipe | |
| 37 | V836338201 | 1 | Gasket | |
| 38 | V500150840 | 2 | Washer | |
| 39 | V528801362 | 1 | Screw | M8 X 16 |
| 40 | V836867346 | 1 | Pipe | |
| 41 | V529903090 | 6 | Screw | M16 X 70 |
| 42 | V529904330 | 2 | Screw | M22 X 90 |


1-WH26-003-A

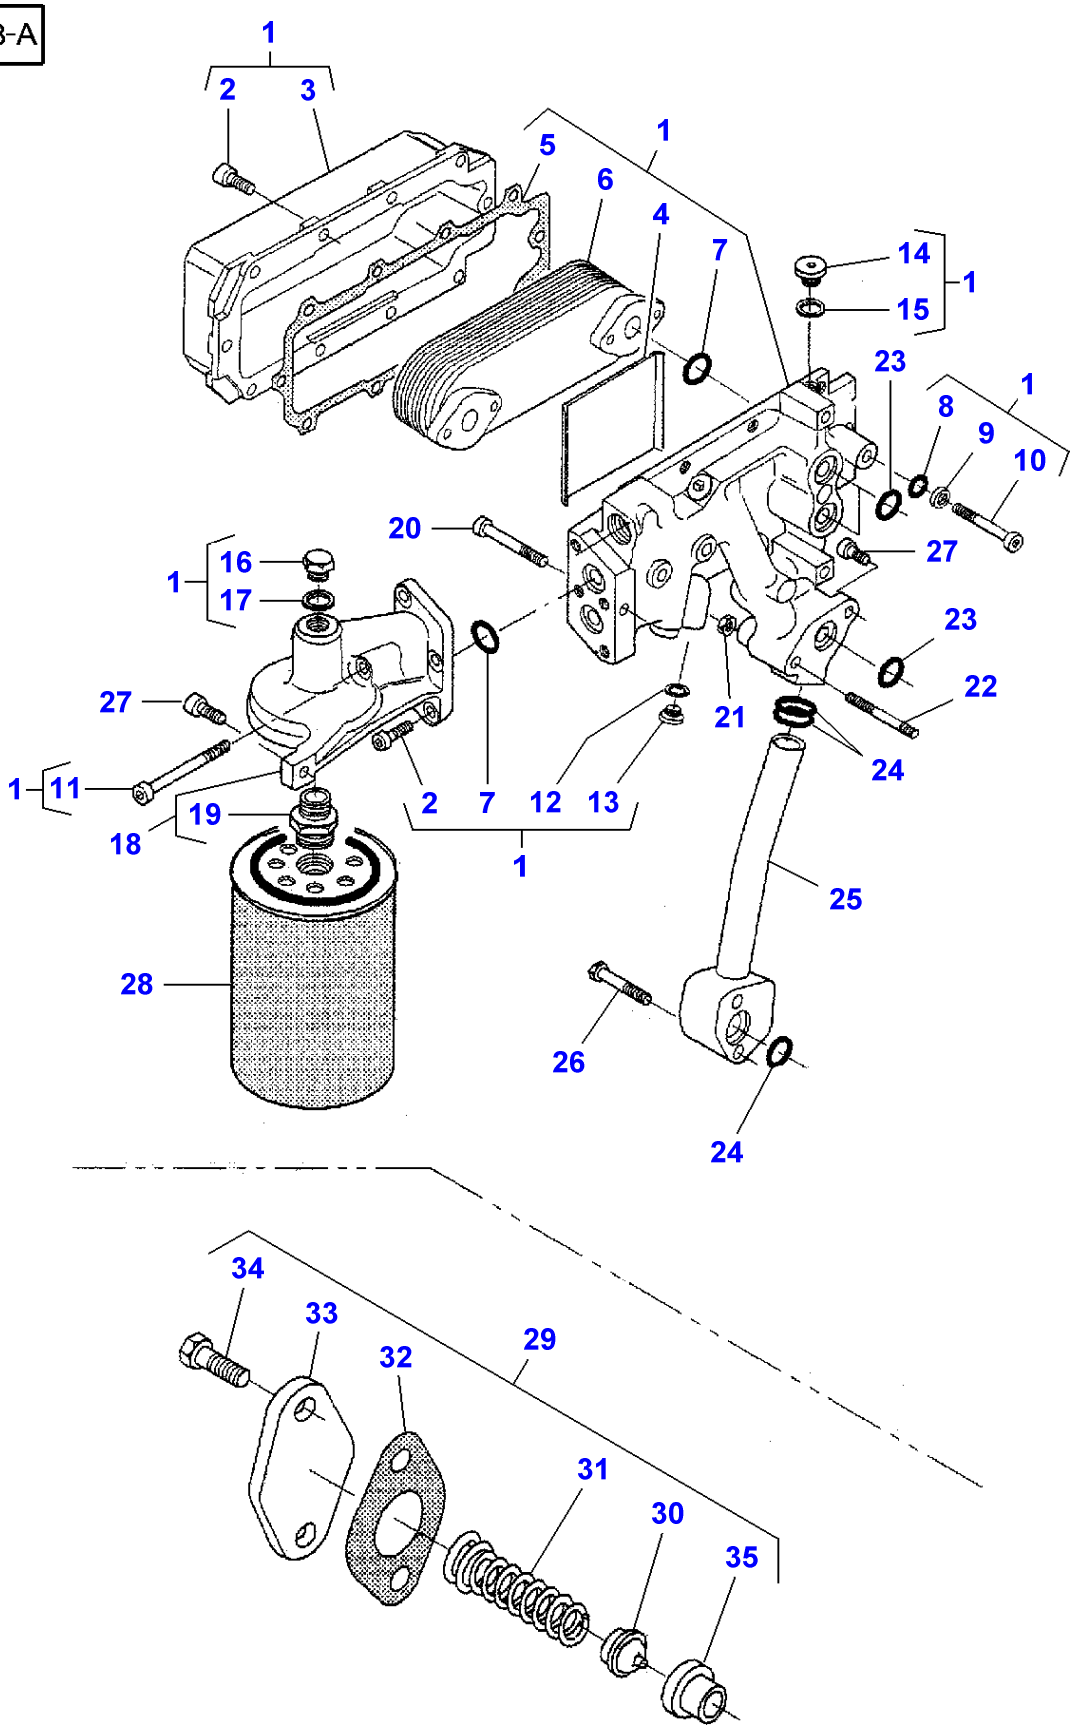
1
2
3
5
1
6
4
7
14
15
1
23
1
8
9
10
20
27
1
16
17
23
27
22
21
24
1
11
19
18
2
7
12
13
1
25
28
26
24
34
33
32
29
31
30
35

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836859182 | 1 | Oil Cooler | |
| 2 | V581804620 | 13 | Screw | (1) M8 X 25 |
| 3 | V836855519 | 1 | Housing | (1) |
| 4 | V836855521 | 1 | Guide | (1) |
| 5 | V836855520 | 1 | Gasket | (1) |
| 6 | **V836855484** | 1 | Element | (1) |
| 7 | V614602030 | 4 | O Ring | (1) |
| 8 | V614600724 | 4 | O Ring | (1) |
| 9 | V836855517 | 4 | Washer | (1) |
| 10 | V581804690 | 4 | Screw | (1) M8 X 60 |
| 11 | V581804730 | 1 | Screw | (1) M8 X 80 |
| 12 | V615881216 | 1 | Gasket | (1) |
| 13 | V640305012 | 1 | Plug | (1) |
| 14 | V640325018 | 3 | Plug | (1) |
| 15 | V615881822 | 3 | Seal | (1) |
| 16 | V836119079 | 1 | Plug | (1) |
| 17 | V615881620 | 1 | Seal | (1) |
| 18 | V836859187 | 1 | Filter Head | (1) |
| 19 | V836859105 | 1 | Nipple | (18) |
| 20 | V581804690 | 2 | Screw | M8 X 60 |
| 21 | V504800800 | 2 | Nut | M8 |
| 22 | V546801490 | 2 | Bolt | M8 X 70 |
| 23 | V614602030 | 3 | O Ring | |
| 24 | V614602430 | 3 | O Ring | |
| 25 | V836859134 | 1 | Pipe | |
| 26 | V529801460 | 2 | Screw | M8 X 55 |
| 27 | V581804620 | 2 | Screw | M8 X 25 |
| 28 | **V836859108** | 1 | Oil Filter | |
| 29 | V836662130 | 1 | Control Valve | |
| 30 | V836659522 | 1 | Plate | (29) |
| 31 | V836864056 | 1 | Spring | (29) |
| 32 | V836322190 | 1 | Gasket | (29) |
| 33 | V836659524 | 1 | Cover | (29) |
| 34 | V528801380 | 2 | Screw | (29) M8 X 20 |
| 35 | V836659521 | 1 | Valve Seat | (29) |

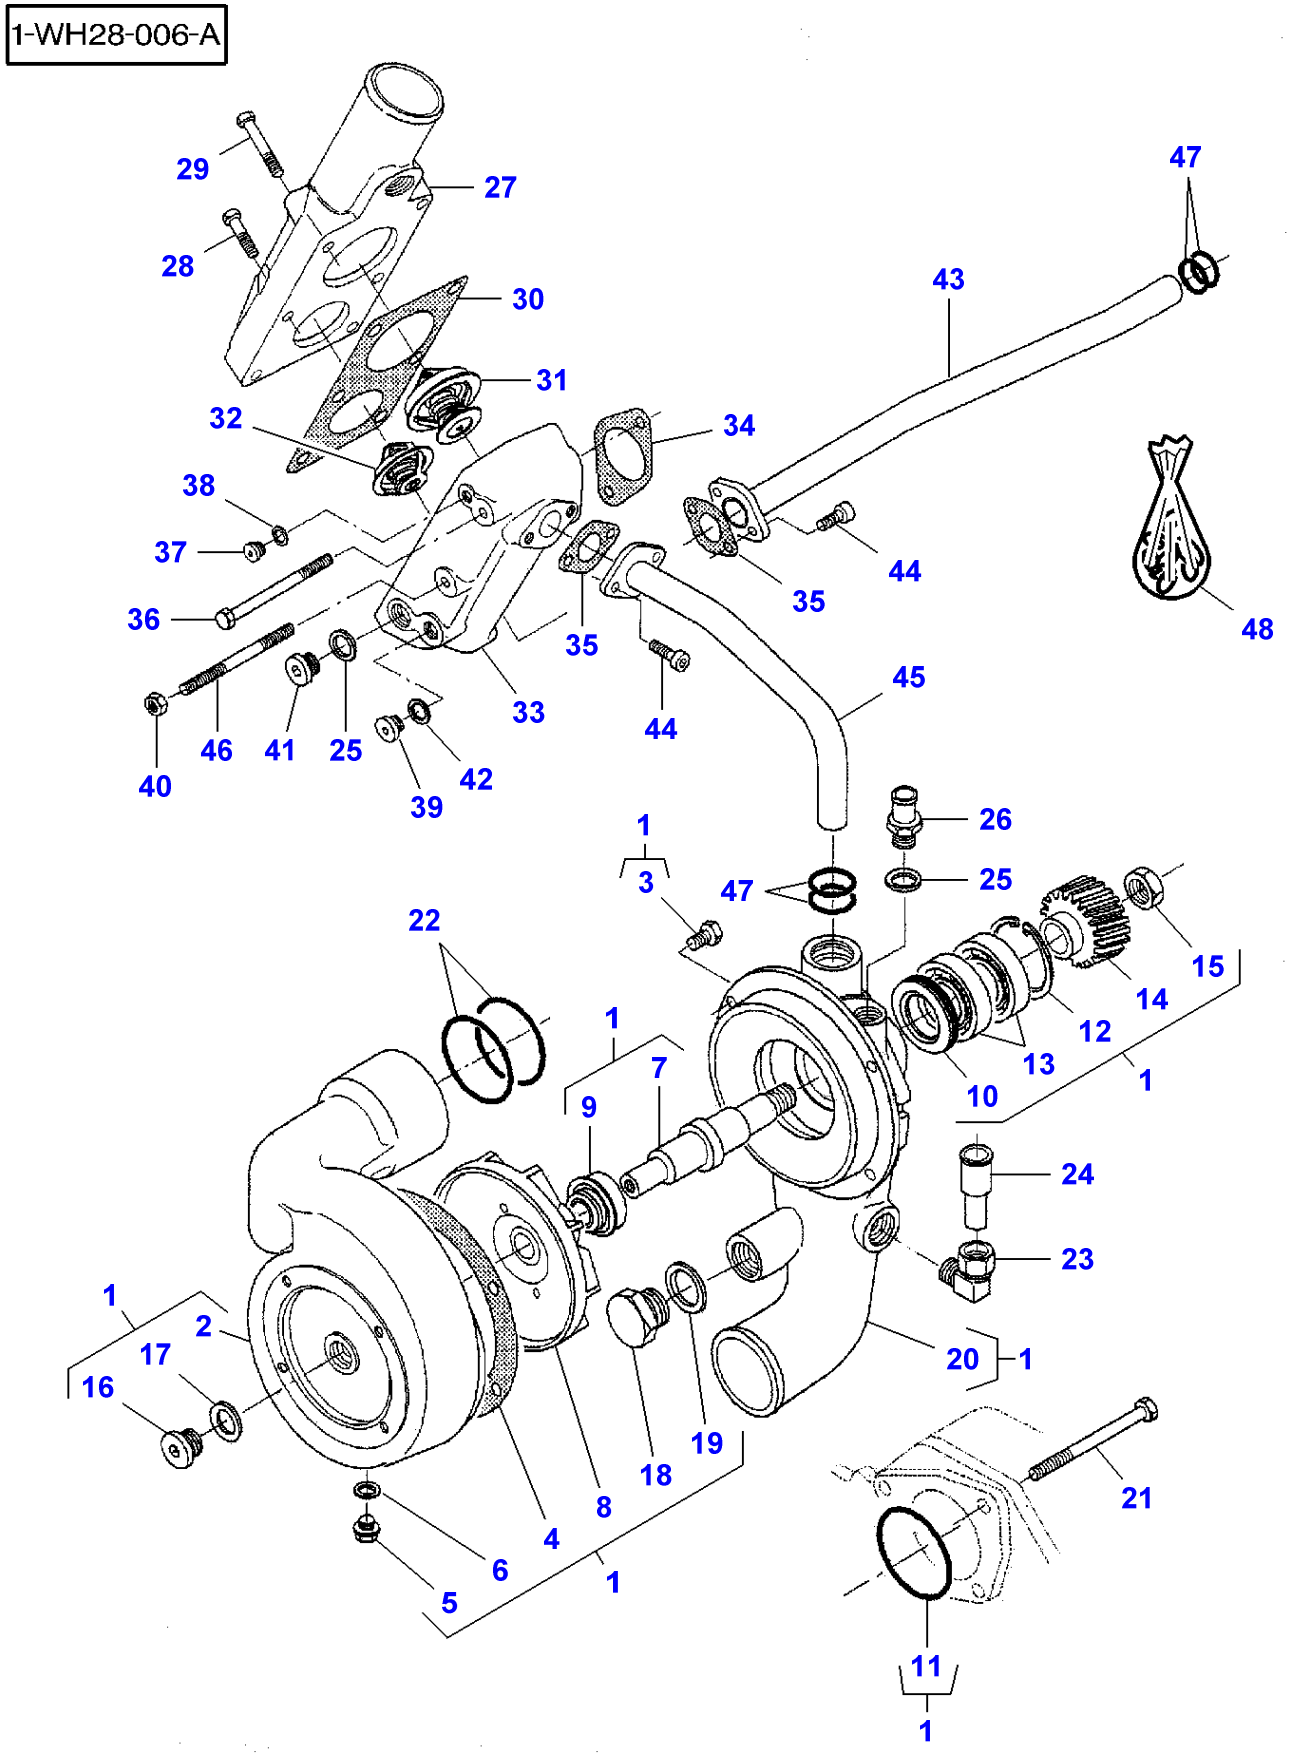

1-WH28-006-A
29
27
28
30
31
32
34
38
37
36
35
33
44
46
41
25
42
40
39
43
47
44
35
48
45
1
3
47
26
25
22
1
7
9
15
14
12
13
10
1
24
23
1
2
17
16
20
1
18
19
8
4
6
5
1
21
11
1

Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Water Pump Page 010-0065

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836866229 | 1 | Water Pump | |
| 2 | V836859170 | 1 | Housing | (1) |
| 3 | V528801362 | 4 | Screw | (1) M8 X 16 |
| 4 | V836855625 | 1 | Gasket | (1) |
| 5 | V640305012 | 1 | Plug | (1) |
| 6 | V615881216 | 1 | Gasket | (1) |
| 7 | V836859456 | 1 | Shaft | (1) |
| 8 | V836866735 | 1 | Impeller | (1) |
| 9 | V836859452 | 1 | Gasket | (1) |
| 10 | V614703247 | 1 | Oil Seal | (1) |
| 11 | V614606230 | 1 | O Ring | (1) |
| 12 | V617330052 | 1 | Circlip | (1) |
| 13 | V610072050 | 2 | Bearing Assy | (1) |
| 14 | V836855569 | 1 | Gear | (1) |
| 15 | V504601600 | 1 | Nut | (1) |
| 16 | V640325018 | 1 | Plug | (1) |
| 17 | V615881822 | 1 | Seal | (1) |
| 18 | V640045126 | 1 | Plug | (1) |
| 19 | V615892631 | 1 | Seal | (1) |
| 20 | V836859458 | 1 | Body | (1) |
| 21 | V529801530 | 3 | Screw | M8 X 90 |
| 22 | V614604958 | 2 | O Ring | |
| 23 | V641176018 | 1 | Union | |
| 24 | V836867415 | 1 | Union | |
| 25 | V615881822 | 2 | Seal | |
| 26 | V836119837 | 1 | Union | |
| 27 | V836855777 | 1 | Pipe | |
| 28 | V529801430 | 4 | Screw | M8 X 40 |
| 29 | V529801470 | 2 | Screw | M8 X 60 |
| 30 | V836855603 | 1 | Gasket | |
| 31 | V836331590 | 1 | Thermostat | |
| 32 | V836015156 | 1 | Thermostat | |
| 33 | V836855601 | 1 | Housing | |
| 34 | V836646393 | 1 | Gasket | |
| 35 | V836322190 | 2 | Gasket | |
| 36 | V529801550 | 2 | Screw | M8 X 100 |
| 37 | V640325110 | 1 | Plug | |
| 38 | V615871014 | 1 | O Ring | |
| 39 | V640325014 | 1 | Plug | |
| 40 | V504800800 | 1 | Nut | M8 |
| 41 | V640325018 | 1 | Plug | |
| 42 | V615881418 | 1 | Seal | |
| 43 | V836855639 | 1 | Pipe | |
| 44 | VHC9326 | 4 | Screw | M8 X 20 |
| 45 | V836855672 | 1 | Pipe | |
| 46 | V546801580 | 1 | Stud | M8 X 130 |
| 47 | V614602430 | 4 | O Ring | |
| 48 | V836862271 | 1 | Kit, Repair | |

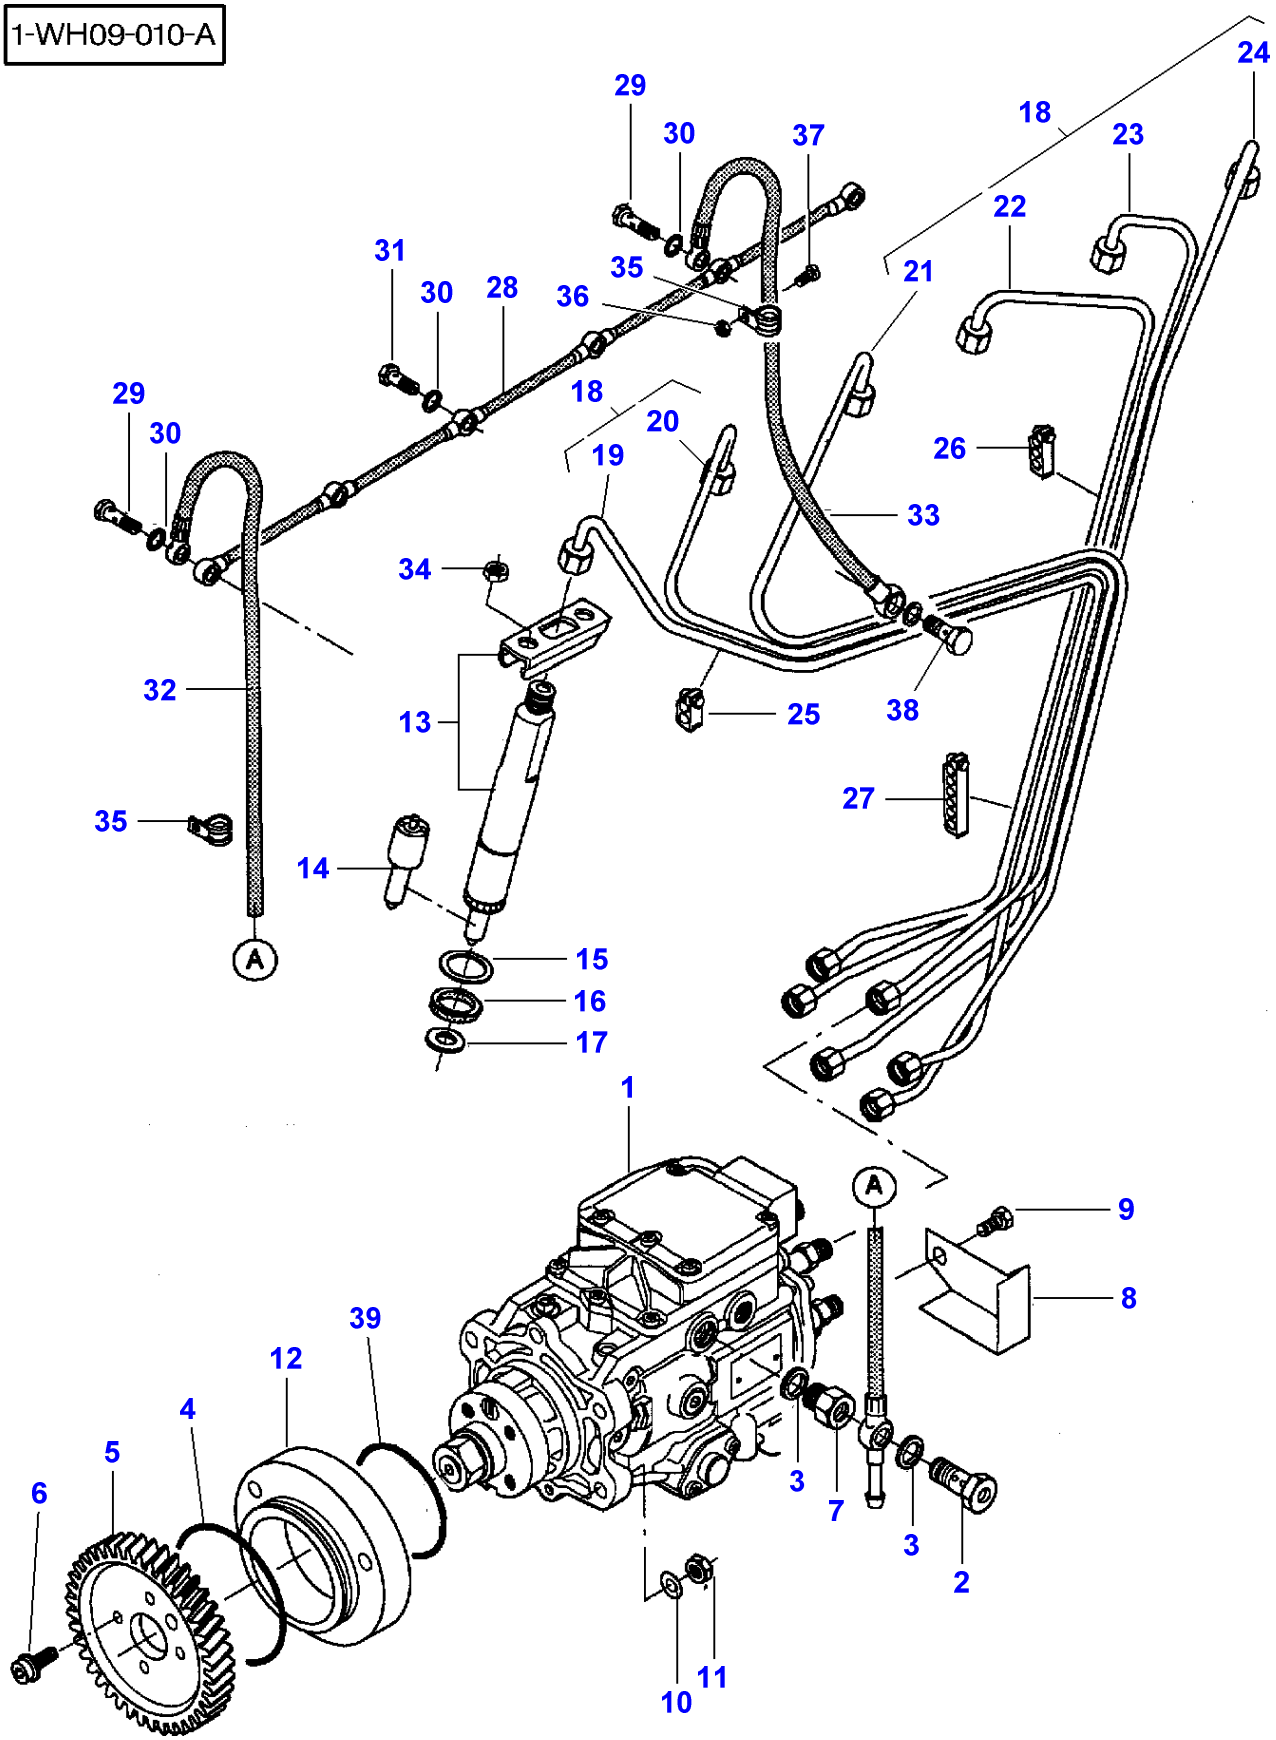
1-WH09-010-A
29
30
37
18
24
23
22
31
30
28
35
36
21
29
30
18
20
19
26
33
34
32
13
25
38
27
35
14
A
15
16
17
1
A
9
8
39
12
4
5
6
3
7
3
2
10
11


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Fuel Injection Equipment Page 010-0070

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836864609 | 1 | Injection Pump | |
| 2 | V836864679 | 1 | Pressure Valve | |
| 3 | V615881418 | 3 | Seal | |
| 4 | V614707230 | 1 | O Ring | |
| 5 | V836866423 | 1 | Gear | |
| 6 | V588704620 | 4 | Screw | M8 X 25 |
| 7 | V836336934 | 1 | Union | |
| 8 | V836866428 | 1 | Cover | |
| 9 | V528801342 | 2 | Screw | M8 X 10 |
| 10 | V500151050 | 4 | Washer | |
| 11 | V504601000 | 4 | Nut | M10 |
| 12 | V836866424 | 1 | Spacer | |
| 13 | V836854791 | 6 | Atomiser | |
| 14 | V836854792 | 6 | Nozzle | (13)<br>270 Bars |
| 15 | **V836652170** | 6 | Washer | |
| 16 | **V835336276** | 6 | Seal | |
| 17 | **V899901495** | 6 | Washer | |
| 18 | V836866426 | 1 | Kit, Pipe | |
| 19 | | 1 | Injection Pipe | (18)<br>CYL. 1 |
| 20 | | 1 | Injection Pipe | (18)<br>CYL. 2 |
| 21 | | 1 | Injection Pipe | (18)<br>CYL. 3 |
| 22 | | 1 | Injection Pipe | (18)<br>CYL. 4 |
| 23 | | 1 | Injection Pipe | (18)<br>CYL. 5 |
| 24 | | 1 | Injection Pipe | (18)<br>CYL. 6 |
| 25 | V836664517 | 1 | Clamp | (18) |
| 26 | V836664518 | 2 | Clamp | (18) |
| 27 | V836664521 | 2 | Clamp | (18) |
| 28 | V836847522 | 1 | Pipe | (18) |
| 29 | V835336943 | 2 | Screw | |
| 30 | **V615870610** | 14 | Seal | |
| 31 | V835331289 | 4 | Screw | |
| 32 | V836666647 | 1 | Pipe | |
| 33 | V836666512 | 1 | Pipe | |
| 34 | V504800800 | 12 | Nut | M8 |
| 35 | V602069813 | 2 | Clamp | |
| 36 | V504600502 | 1 | Nut | M5 |
| 37 | V572503372 | 1 | Screw | M5 X 12 |
| 38 | V640435006 | 1 | Screw | See Page - Reference Number 010-0080/16 |
| 39 | V614606825 | 1 | O Ring | |

1-WH09-002-A

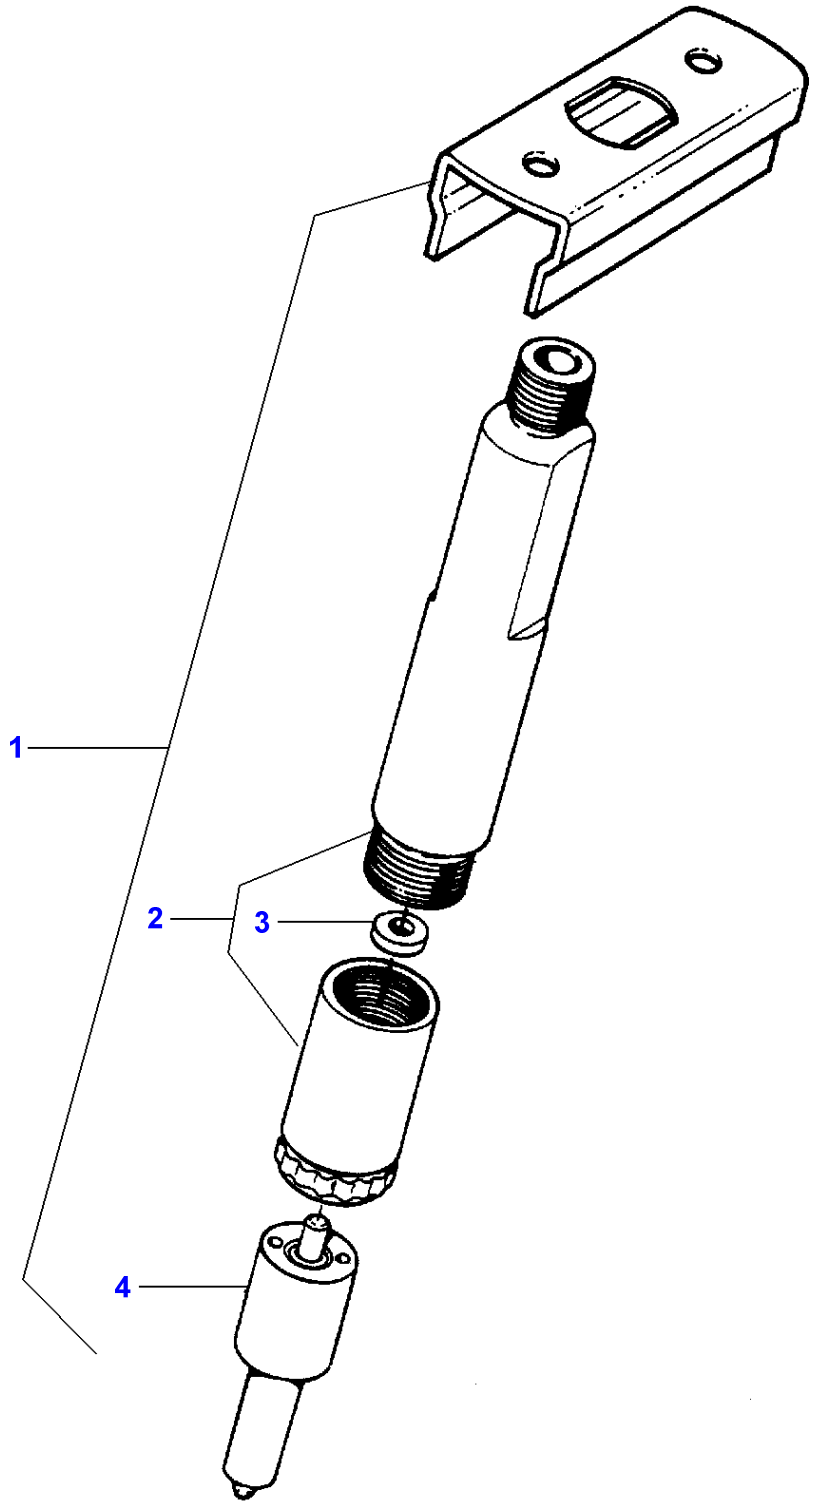


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836854791 | 1 | Atomiser | |
| 2 | | 1 | Body | (1)<br>Not serviced,order REF. 1 |
| 3 | V836862000 | X | Chock | (2)<br>Thickness 1,00 MM |
| | V836862001 | X | Chock | (2)<br>Thickness 1,05 MM |
| | V836862002 | X | Chock | (2)<br>Thickness 1,10 MM |
| | V836862003 | X | Chock | (2)<br>Thickness 1,15 MM |
| | V836862004 | X | Chock | (2)<br>Thickness 1,20 MM |
| | V836862005 | X | Chock | (2)<br>Thickness 1,25 MM |
| | V836862006 | X | Chock | (2)<br>Thickness 1,30 MM |
| | V836862007 | X | Chock | (2)<br>Thickness 1,35 MM |
| | V836862008 | X | Chock | (2)<br>Thickness 1,40 MM |
| | V836862009 | X | Chock | (2)<br>Thickness 1,45 MM |
| | V836862010 | X | Chock | (2)<br>Thickness 1,50 MM |
| | V836862011 | X | Chock | (2)<br>Thickness 1,55 MM |
| | V836862012 | X | Chock | (2)<br>Thickness 1,60 MM |
| | V836862013 | X | Chock | (2)<br>Thickness 1,65 MM |
| | V836862014 | X | Chock | (2)<br>Thickness 1,70 MM |
| | V836862015 | X | Chock | (2)<br>Thickness 1,75 MM |
| | V836862016 | X | Chock | (2)<br>Thickness 1,80 MM |
| | V836862017 | X | Chock | (2)<br>Thickness 1,85 MM |
| | V836862018 | X | Chock | (2)<br>Thickness 1,90 MM |
| | V836862019 | X | Chock | (2)<br>Thickness 1,95 MM |
| 4 | V836854792 | 1 | Nozzle | (1) |

1-WH14-007-B

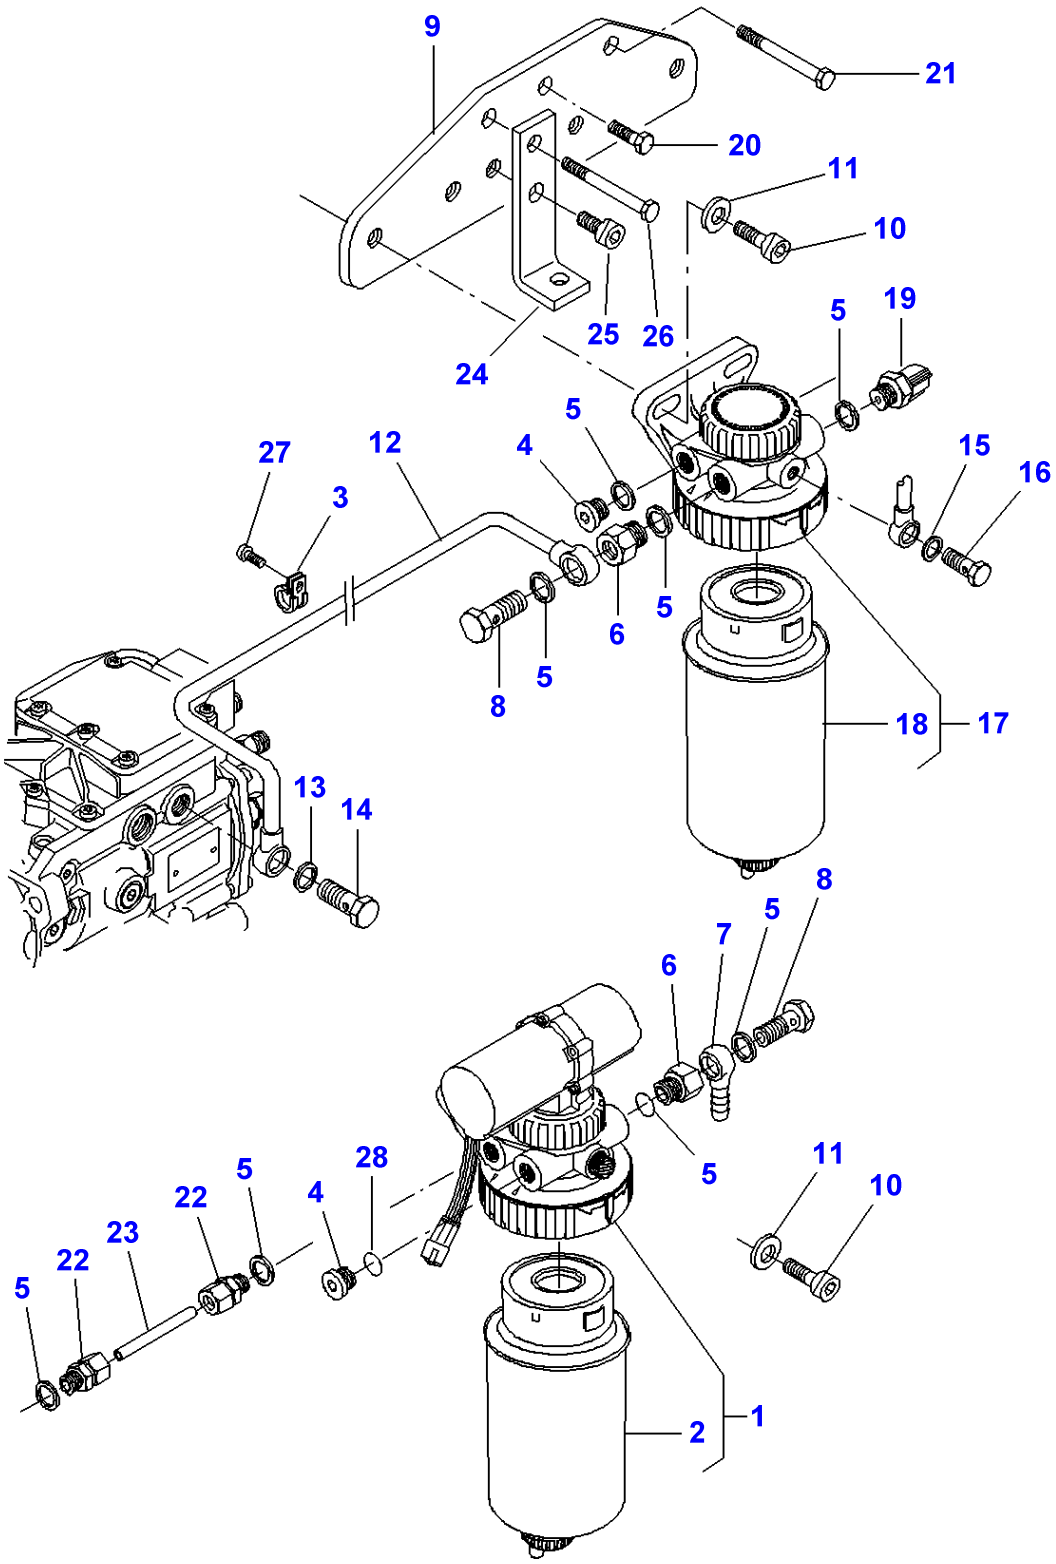

9
21
20
11
10
25
26
24
5
19
5
4
12
27
3
15
16
6
5
8
5
18
17
13
14
8
5
7
6
5
11
10
28
5
4
22
23
22
5
2
1

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836866517 | 1 | Pump | |
| 2 | **V836862600** | 1 | Fuel Filter | (1) |
| 3 | V602074608 | 1 | Clamp | |
| 4 | V640325014 | 3 | Plug | |
| 5 | V615881420 | 10 | Gasket | |
| 6 | V836336934 | 2 | Union | |
| 7 | V640255210 | 1 | Pipe | |
| 8 | V640435010 | 2 | Screw | |
| 9 | V836866481 | 1 | Bracket | |
| 10 | V581705030 | 4 | Screw | M10 X 30 |
| 11 | V836122910 | 4 | Washer | |
| 12 | V836866791 | 1 | Fuel Pipe | |
| 13 | V615881216 | 2 | Gasket | |
| 14 | V640435008 | 1 | Screw | |
| 15 | V615571014 | 2 | Seal | |
| 16 | V640435006 | 1 | Screw | |
| 17 | V836866306 | 1 | Fuel Filter | |
| 18 | **V836862602** | 1 | Fuel Filter | (17) |
| 19 | **V836666797** | 1 | Sensor | 0,05-0,2 Bars |
| 20 | V528801380 | 1 | Screw | M8 X 20 |
| 21 | V529801530 | 1 | Screw | M8 X 90 |
| 22 | V641086010 | 2 | Union | |
| 23 | V836866644 | 1 | Pipe | |
| 24 | V836866418 | 1 | Support | |
| 25 | V528801760 | 1 | Screw | M10 X 16 |
| 26 | V529801550 | 1 | Screw | M8 X 95 |
| 27 | V581804182 | 1 | Screw | M6 X 16 |
| 28 | V614601125 | 2 | O Ring | |

1-WH18-007-B

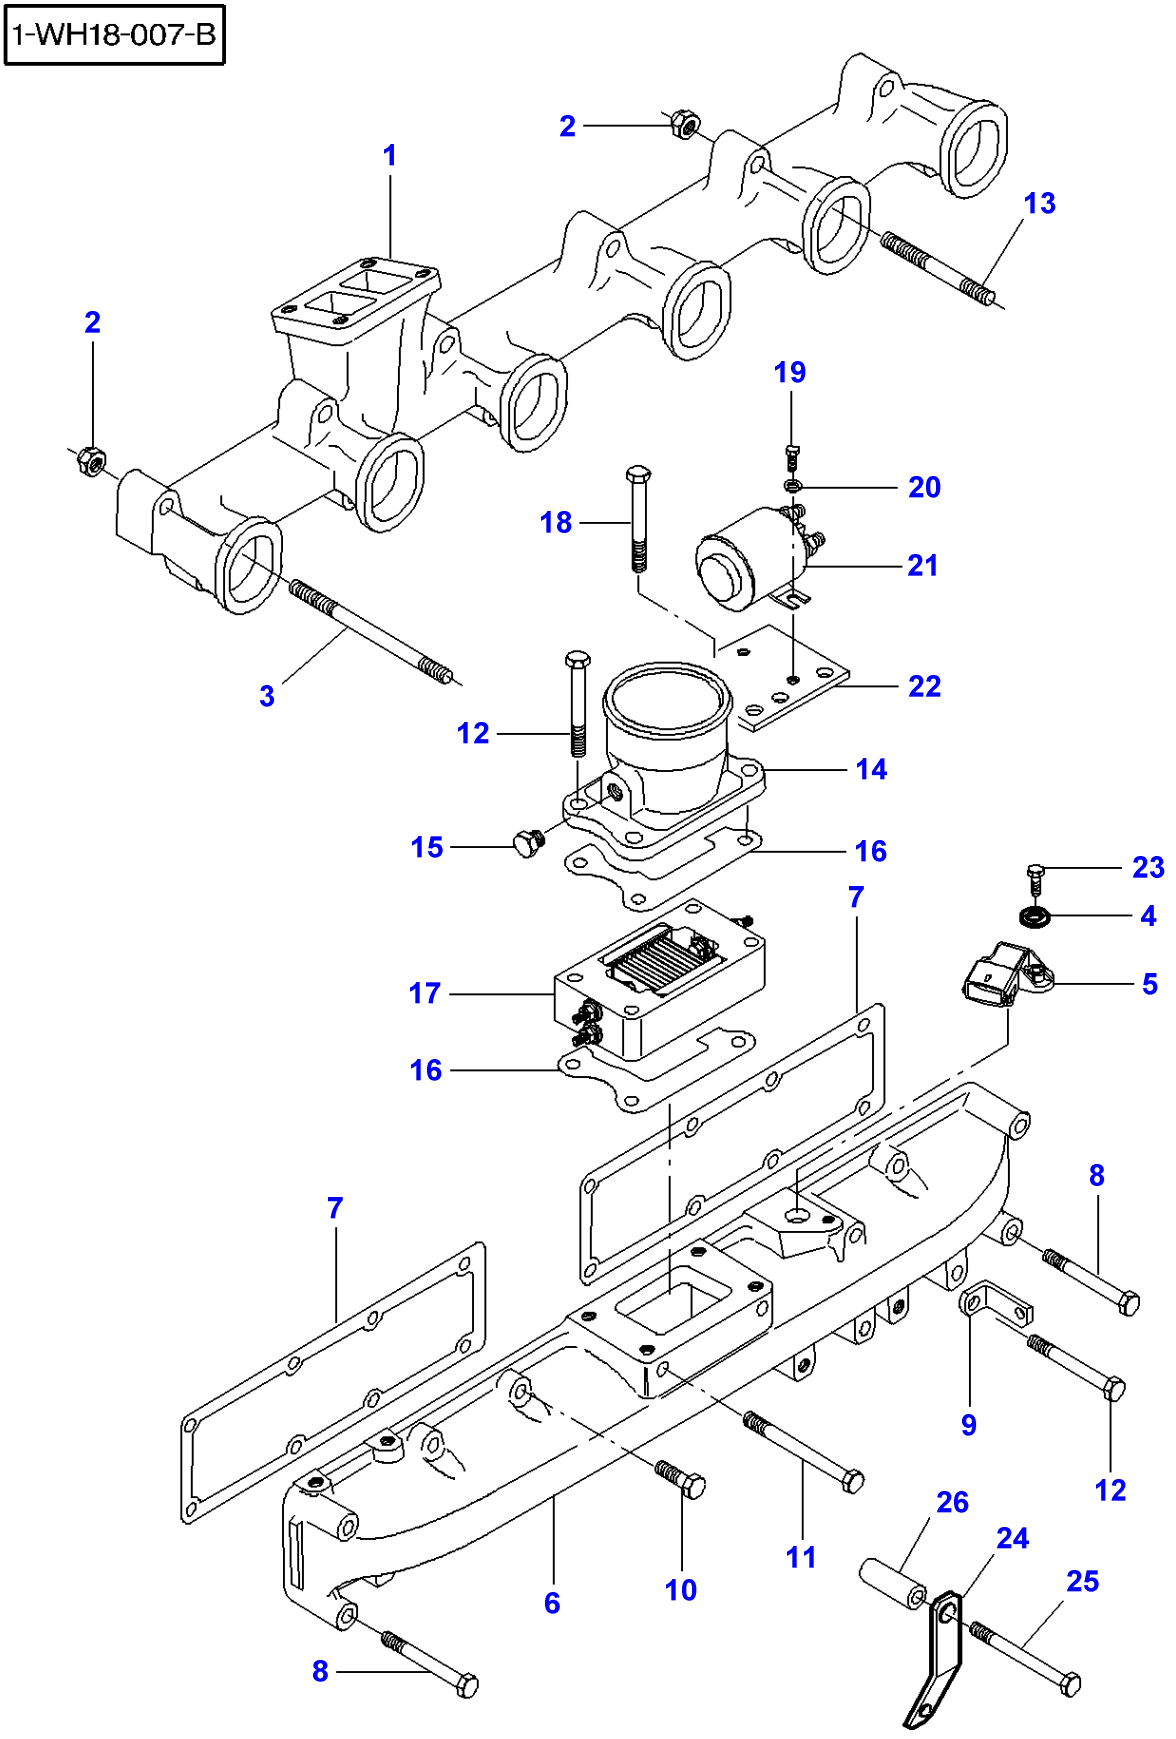

2
1
13
2
19
20
18
21
3
22
12
14
15
16
23
7
4
17
5
16
8
7
9
12
6
10
11
26
24
25
8

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836859378 | 1 | Exhaust Manifold | |
| 2 | V513601002 | 12 | Nut | |
| 3 | V836859034 | 3 | Stud | M10 X 130 |
| 4 | V500050642 | 1 | Washer | |
| 5 | **V836666980** | 1 | Sensor | See Page - Reference Number 010-0100/4 |
| 6 | V836866827 | 1 | Ind.Manifold | |
| 7 | V836847496 | 2 | Gasket | |
| 8 | V529801470 | 3 | Screw | M8 X 60 |
| 9 | V836338662 | 1 | Support | |
| 10 | V528801410 | 4 | Adjusting Screw | M8 X 30 |
| 11 | V529801530 | 2 | Screw | M8 X 90 |
| 12 | V529801480 | 3 | Screw | M8 X 65 |
| 13 | V836855995 | 9 | Stud | M10 X 113 |
| 14 | V836866152 | 1 | Pipe | |
| 15 | V640305012 | 1 | Plug | |
| 16 | V836847532 | 2 | Gasket | |
| 17 | **V836864398** | 1 | Heater | |
| 18 | V529801490 | 2 | Screw | M8 X 70 |
| 19 | V528800762 | 2 | Screw | M5 X 16 |
| 20 | V500150532 | 2 | Washer | |
| 21 | V836666759 | 1 | Solenoid | 12V |
| 22 | V836866699 | 1 | Bracket | |
| 23 | V528801080 | 1 | Screw | M6 X 20 |
| 24 | V836659276 | 1 | Support | |
| 25 | V529801520 | 1 | Screw | M8 X 85 |
| 26 | V836866960 | 1 | Distance Piece | |

1-WH24-003-A

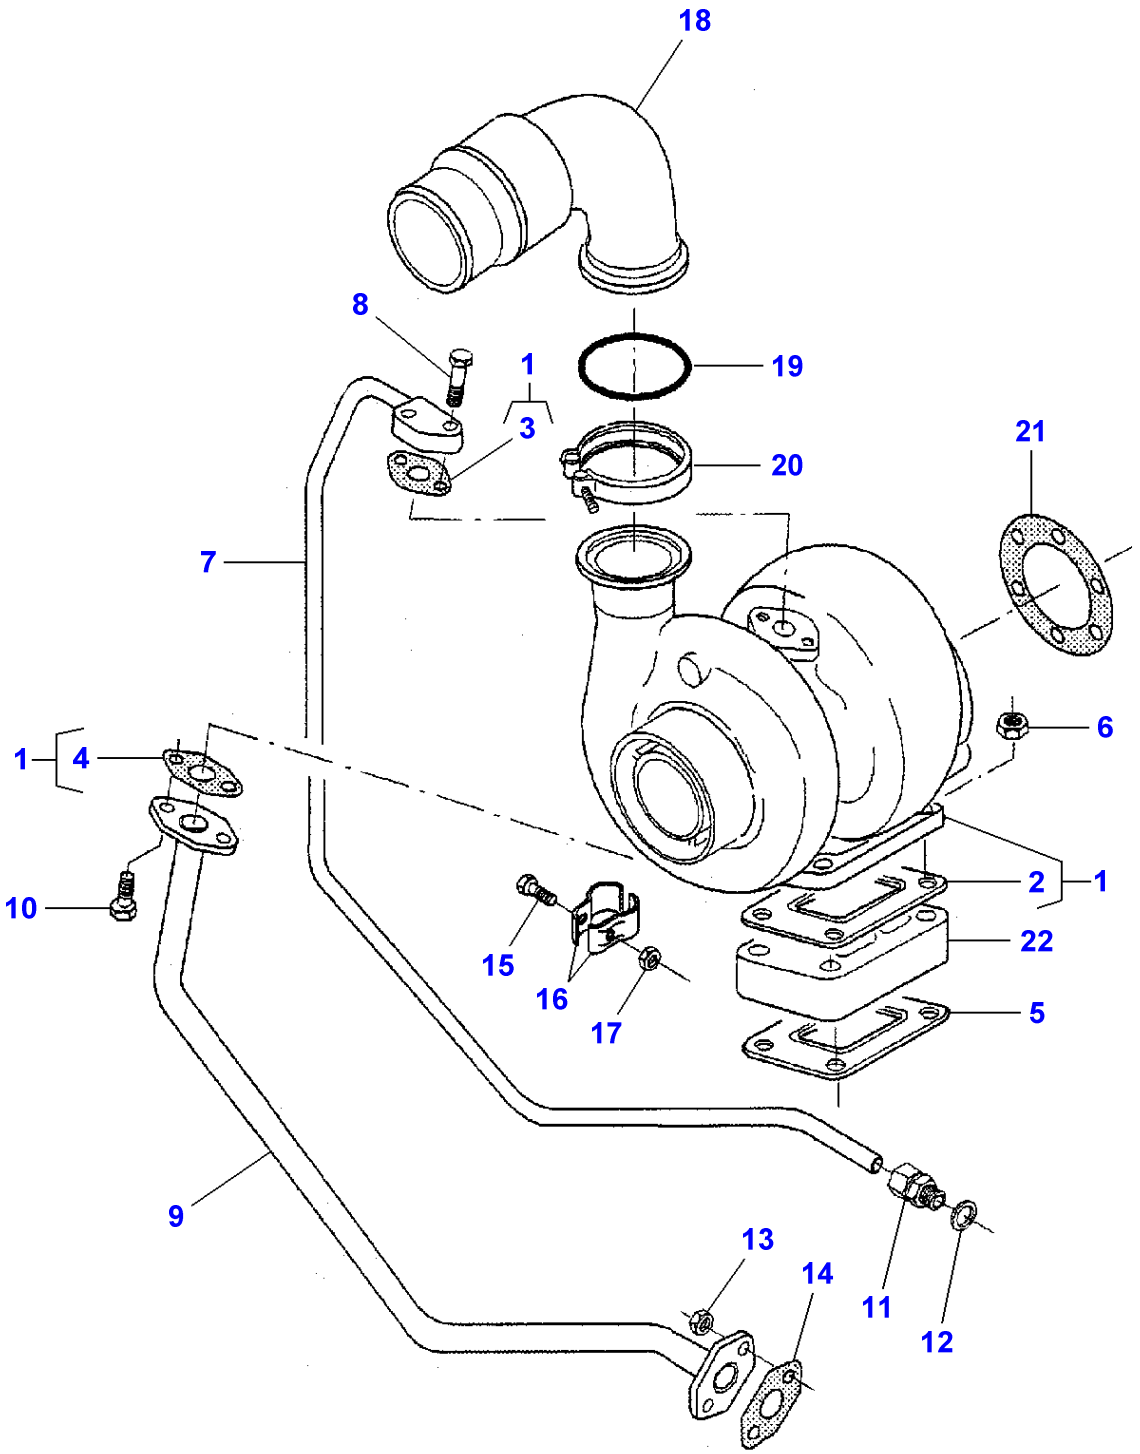


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836866221 | 1 | Turbocharger | |
| 2 | V836316726 | 1 | Gasket | (1) |
| 3 | V836308344 | 1 | Joint. | (1) |
| 4 | V836324580 | 1 | Joint. | (1) |
| 5 | V836316726 | 1 | Gasket | |
| 6 | V521601000 | 4 | Nut | M10 |
| 7 | V836859493 | 1 | Exhaust Pipe | |
| 8 | V528801410 | 2 | Adjusting Screw | M8 X 30 |
| 9 | V836859117 | 1 | Tube | |
| 10 | V528801380 | 2 | Screw | M8 X 20 |
| 11 | V641086012 | 1 | Union | |
| 12 | V615881620 | 1 | Seal | |
| 13 | V504800800 | 2 | Nut | |
| 14 | V836324580 | 1 | Joint. | |
| 15 | V529801112 | 2 | Screw | M6 X 30 |
| 16 | V835324324 | 4 | Bracket | |
| 17 | V504600602 | 2 | Nut | M6 |
| 18 | V836866381 | 1 | Pipe | |
| 19 | V614606225 | 1 | O Ring | |
| 20 | V836866454 | 1 | Clamp | |
| 21 | V836338985 | 1 | Gasket | |
| 22 | V836855630 | 1 | Bridle | |

1-WH29-001-A

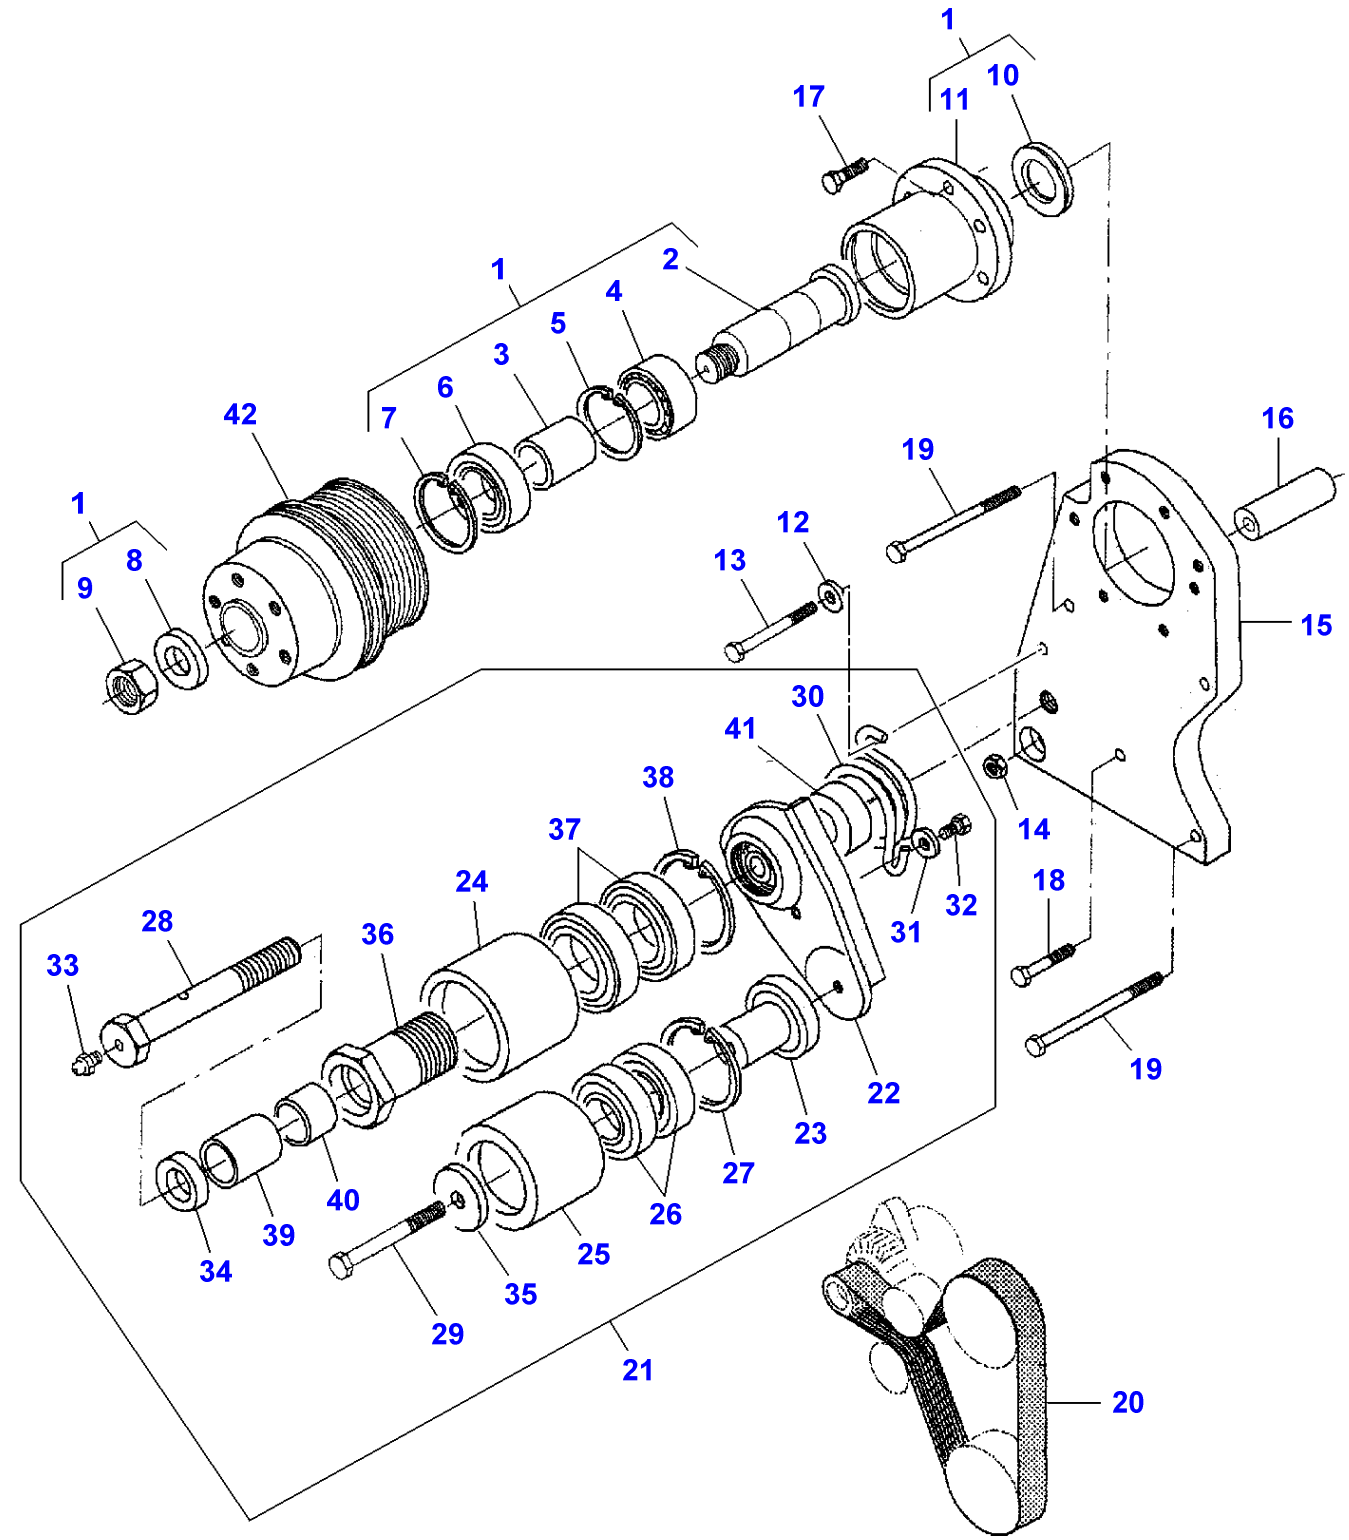
1
17
11
10
1
2
4
5
3
6
7
42
1
8
9
19
16
12
13
15
30
41
38
37
24
28
36
33
14
18
32
31
22
23
27
26
40
39
34
25
35
29
21
19
20


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Belt Tensioner Page 010-0095

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836859119 | 1 | Kit, Shaft | |
| 2 | V836859121 | 1 | Shaft | (1) |
| 3 | V836859122 | 1 | Sleeve | (1) |
| 4 | V610032060 | 1 | Bearing Assy | (1) |
| 5 | V617350062 | 1 | Circlip | (1) |
| 6 | V610063064 | 1 | Bearing Assy | (1) |
| 7 | V617330072 | 1 | Circlip | (1) |
| 8 | V836855756 | 1 | Washer | (1) |
| 9 | V504602002 | 1 | Nut | (1) |
| 10 | V836529872 | 1 | Plug | (1) |
| 11 | V836859120 | 1 | Hub | (1) |
| 12 | V836120989 | 1 | Washer | |
| 13 | V529801490 | 1 | Screw | M8 X 70 |
| 14 | V504801000 | 1 | Nut | M10 |
| 15 | V836859992 | 1 | Tensioner | |
| 16 | V836855934 | 2 | Sleeve | |
| 17 | V528801810 | 6 | Screw | M10 X 30 |
| 18 | V529801470 | 1 | Screw | M8 X 60 |
| 19 | V529801562 | 3 | Screw | M8 X 110 |
| 20 | **4275545M3** | 1 | Belt | Length 1950 MM |
| 21 | V836864296 | 1 | Tensioner | |
| 22 | V836859347 | 1 | Support | (21) |
| 23 | V836855789 | 1 | Shaft | (21) |
| 24 | V836859683 | 1 | Roll | (21) |
| 25 | V836855666 | 1 | Roll | (21) |
| 26 | V610062055 | 2 | Bearing Assy | (21) |
| 27 | V617330052 | 1 | Circlip | (21) |
| 28 | V836859357 | 1 | Screw | (21) |
| 29 | V529701880 | 1 | Screw | (21) M10 X 65 |
| 30 | V836855689 | 1 | Spring | (21) |
| 31 | V836120989 | 1 | Washer | (21) |
| 32 | V528801360 | 1 | Screw | (21) M8 X 16 |
| 33 | V644611006 | 1 | Greaser | (21) |
| 34 | V836859356 | 1 | Plate | (21) |
| 35 | V836855941 | 1 | Plate | (21) |
| 36 | V836859684 | 1 | Shaft | (21) |
| 37 | V610060085 | 2 | Bearing Assy | (21) |
| 38 | V617330068 | 1 | Circlip | (21) |
| 39 | V836859364 | 1 | Bush | (21) |
| 40 | V836859363 | 1 | Bush | (21) |
| 41 | V836859348 | 1 | Shaft | (21) |
| 42 | V836867179 | 1 | Pulley | |

1-WH40-001-B

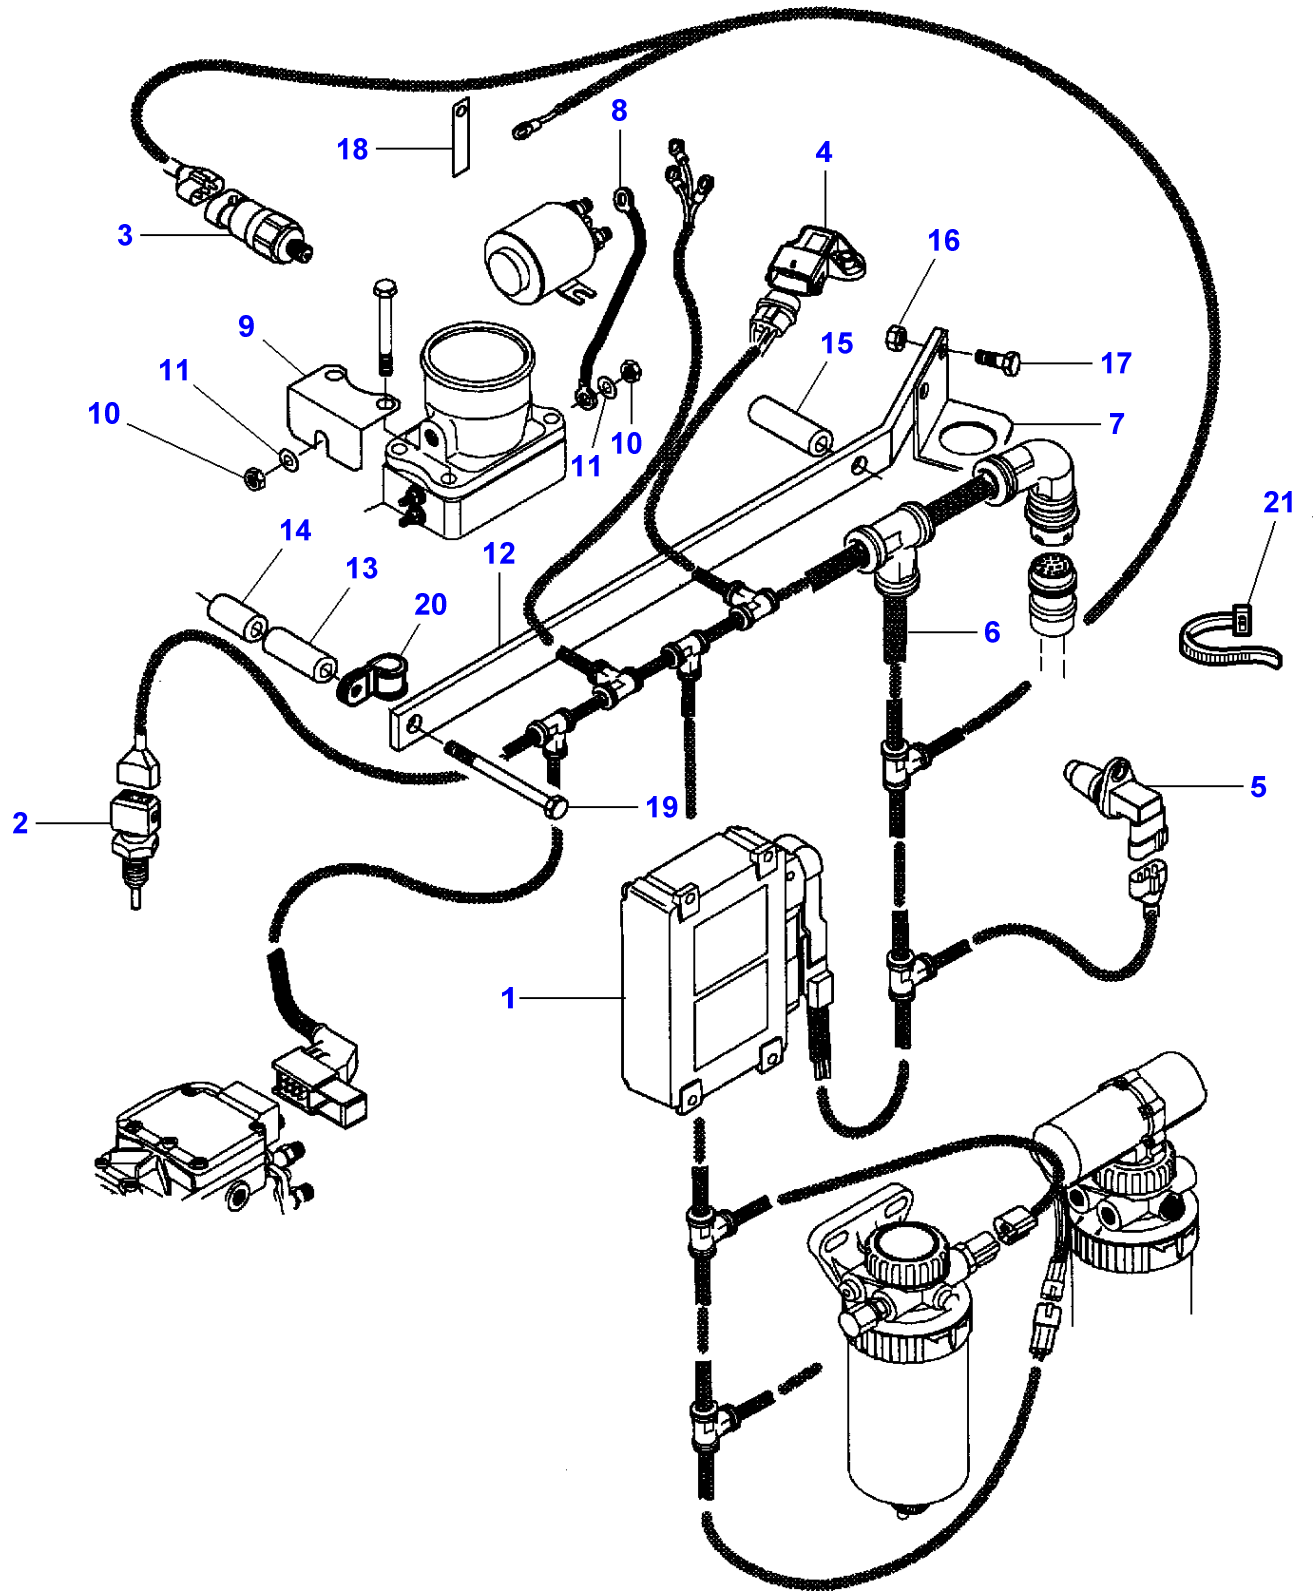



https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836864745 | 1 | Control Unit | MF 8470 |
| | V836869165 | 1 | Control Unit | MF 8480 |
| 2 | **V836864360** | 1 | Temp. Sensor | |
| 3 | **V836866613** | 1 | Sensor | |
| 4 | **V836666980** | 1 | Sensor | |
| 5 | **V836866392** | 1 | Eng.Speed Sensor | |
| 6 | V836866955 | 1 | Kit, Harness | |
| 7 | V836866831 | 1 | Support | |
| 8 | V836866713 | 1 | Wire | |
| 9 | V836866714 | 1 | Support | |
| 10 | V504600602 | 2 | Nut | M6 |
| 11 | V500050642 | 2 | Washer | |
| 12 | V836867061 | 1 | Support | |
| 13 | V836659144 | 1 | Spacer | Length 59 MM |
| 14 | V835338121 | 1 | Sleeve | Length 41,5 MM |
| 15 | V836759434 | 1 | Sleeve | Length 73 MM |
| 16 | V504800800 | 2 | Nut | M8 |
| 17 | V528801360 | 2 | Screw | M8 X 16 |
| 18 | V836083428 | 4 | Band | |
| 19 | V529801595 | 2 | Screw | M8 X 140 |
| 20 | V602060612 | 1 | Fastener | |
| 21 | V835329746 | 11 | Cable Tie | |

1-WH30-001-A

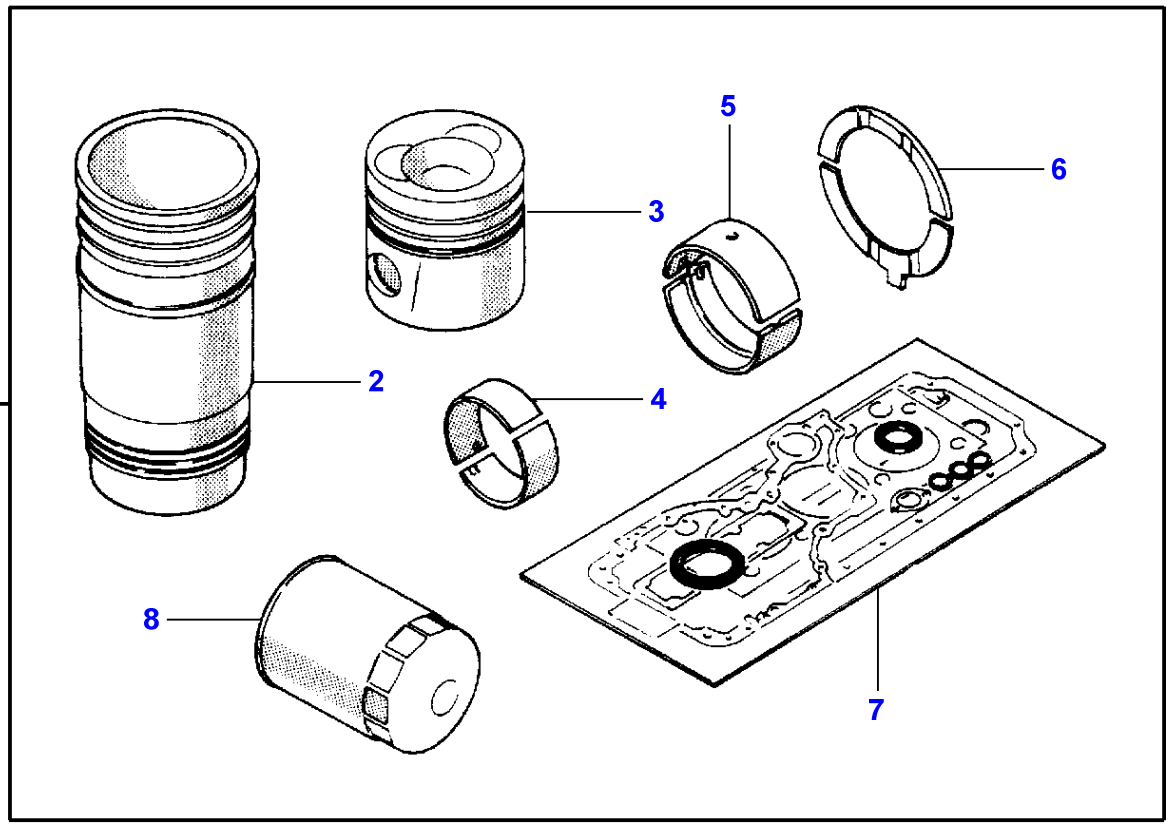

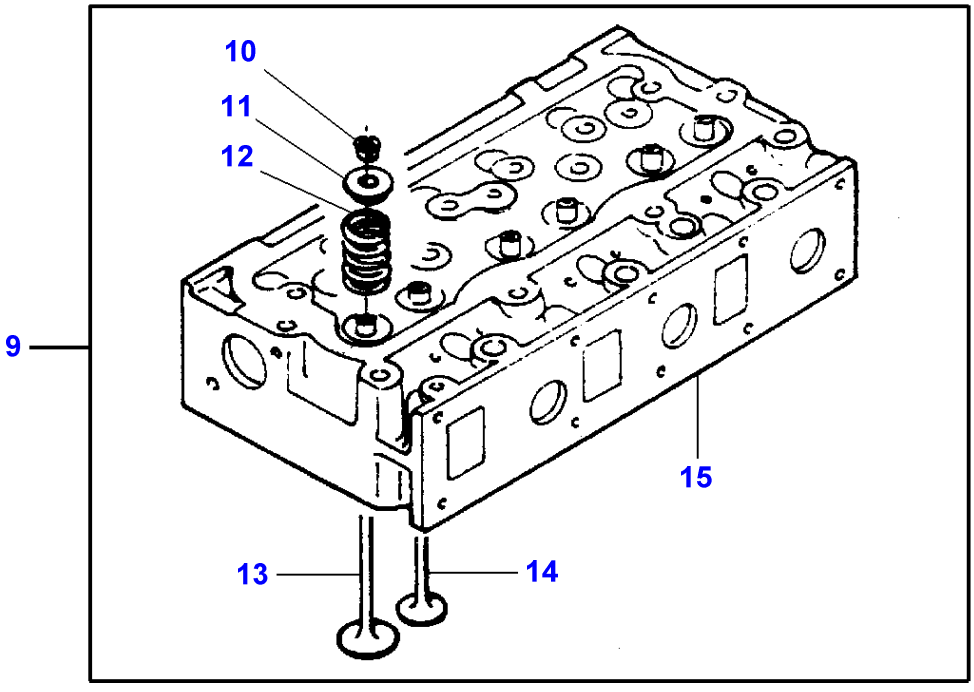



https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836862440 | 1 | Kit, Repair | |
| 2 | V836867048 | 6 | Liner | (1) |
| 3 | V836866182 | 6 | Piston | (1) |
| 4 | V836336302 | 6 | Bearing | (1) |
| 5 | V836840944 | 7 | Main Bearing | (1) |
| 6 | V836840945 | 2 | Thrust Washer | (1) |
| 7 | V836840985 | 1 | Kit, Joint | (1) |
| 8 | **V836859108** | 1 | Oil Filter | (1) |
| 9 | V836640897 | 2 | Cylinder Head | |
| 10 | V836646382 | 12 | Cotter | (9) |
| 11 | V836646381 | 6 | Cup | (9) |
| 12 | V836646380 | 6 | Spring | (9) |
| 13 | V836646357 | 3 | Valve Exhaust | (9) |
| 14 | V836646356 | 3 | Valve Inlet | (9) |
| 15 | V836855381 | 1 | Cylinder Head | (9) |

1-WH15-001-A

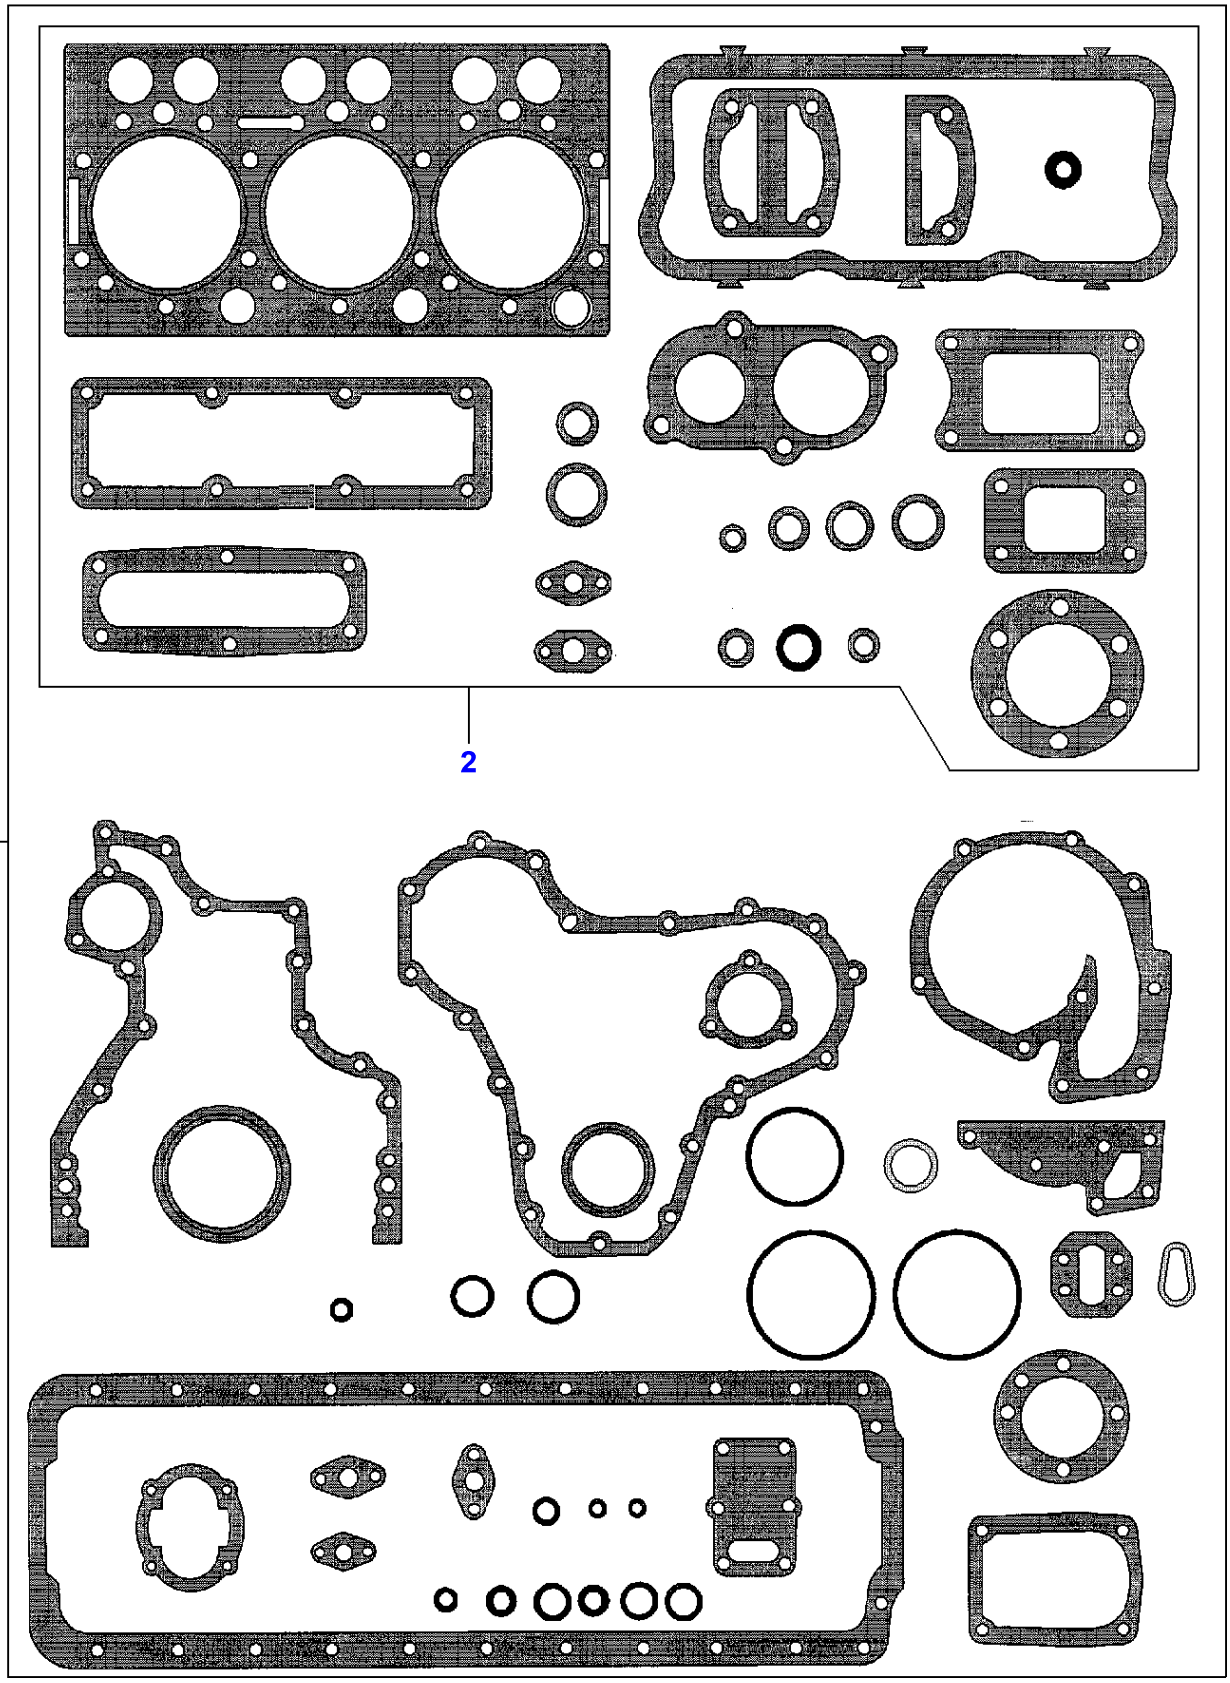


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836840985 | 1 | Kit, Joint | |
| 2 | **V836840993** | 1 | Kit, Joint | (1) |

1-WC38-004-A

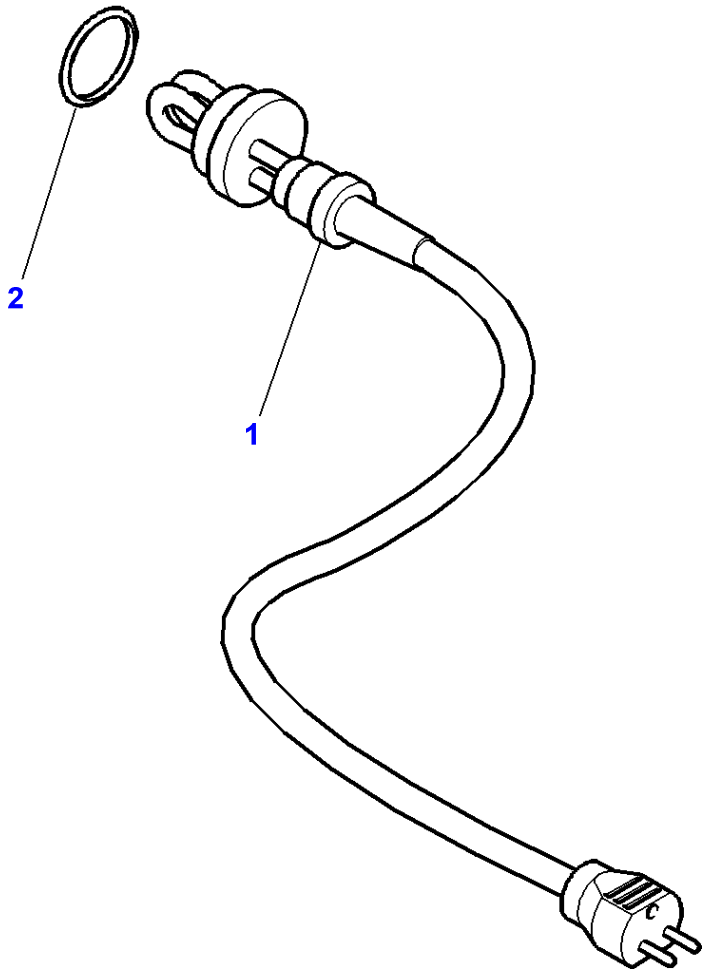


https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3780214M1 | 1 | Heater |
| 2 | V836840998 | 1 | O Ring |

1-WC38-003-A

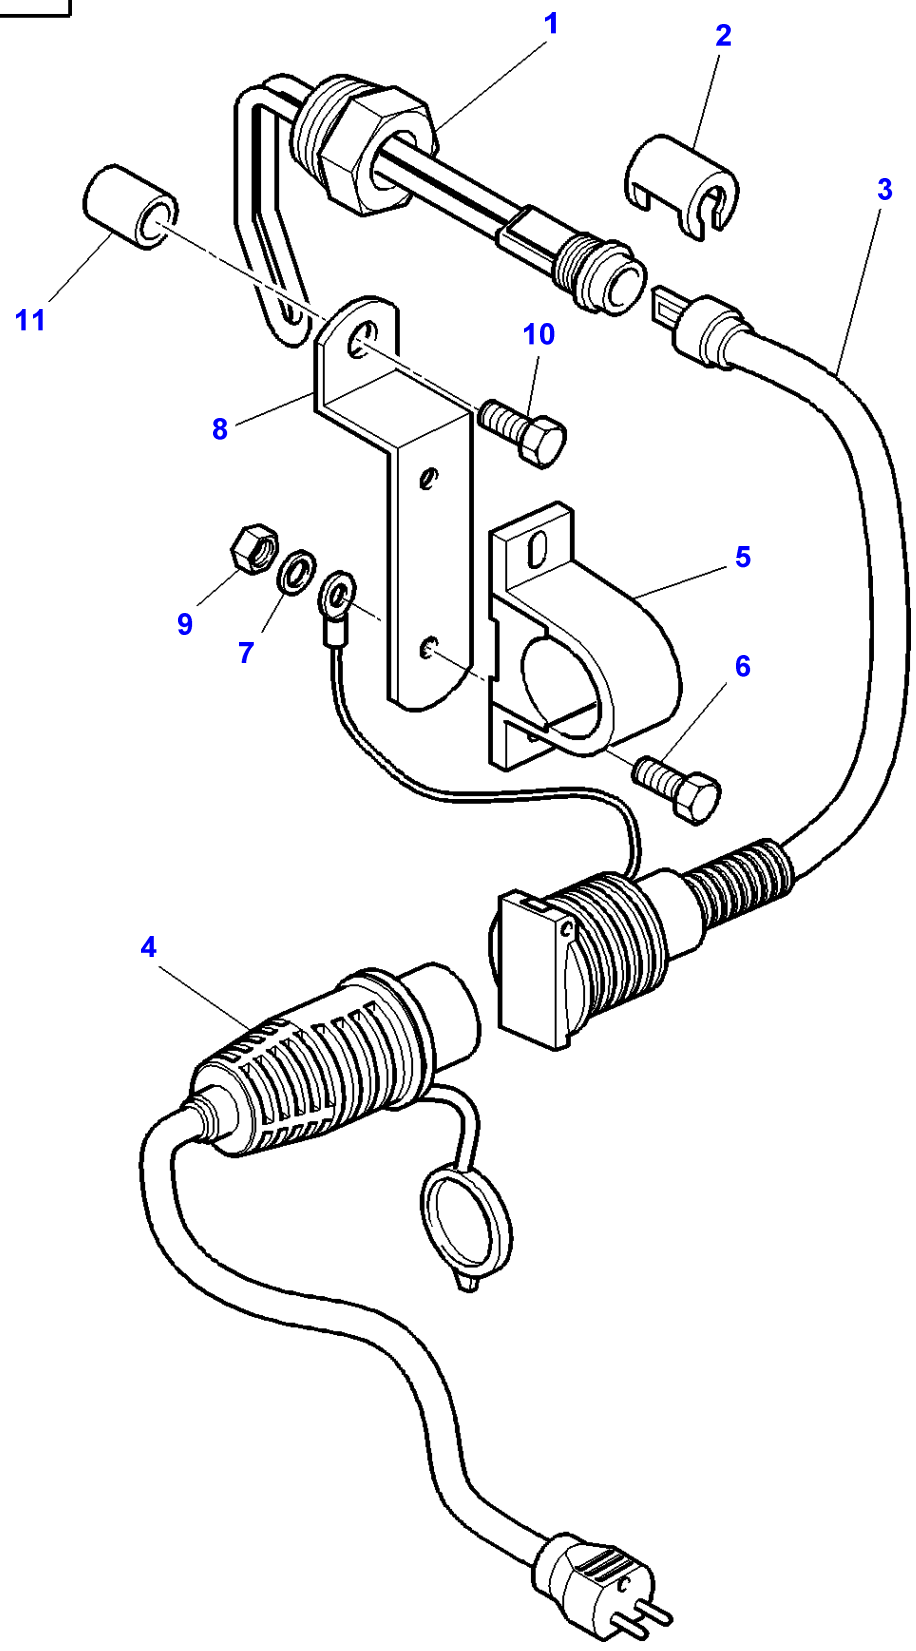


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3615752M2 | 1 | Element | |
| 2 | 3611974M1 | 1 | Clip | |
| 3 | 4270172M1 | 1 | Harness | |
| 4 | 4270169M1 | 1 | Lead | |
| 5 | 4270098M1 | 1 | Clamp | |
| 6 | 3010567X1 | 2 | Plough Bolt | M5 X 16 |
| 7 | 339381X1 | 1 | Lock Washer | |
| 8 | 4270462M1 | 1 | Support | |
| 9 | 3010477X1 | 2 | Nut Metric | M5 |
| 10 | 339123X1 | 1 | Hex. Sock. Screw | M8 X 20 |
| 11 | 3778809M1 | 1 | Spacer | Diameter 9-12 X 7 |


1-WC28-004-A

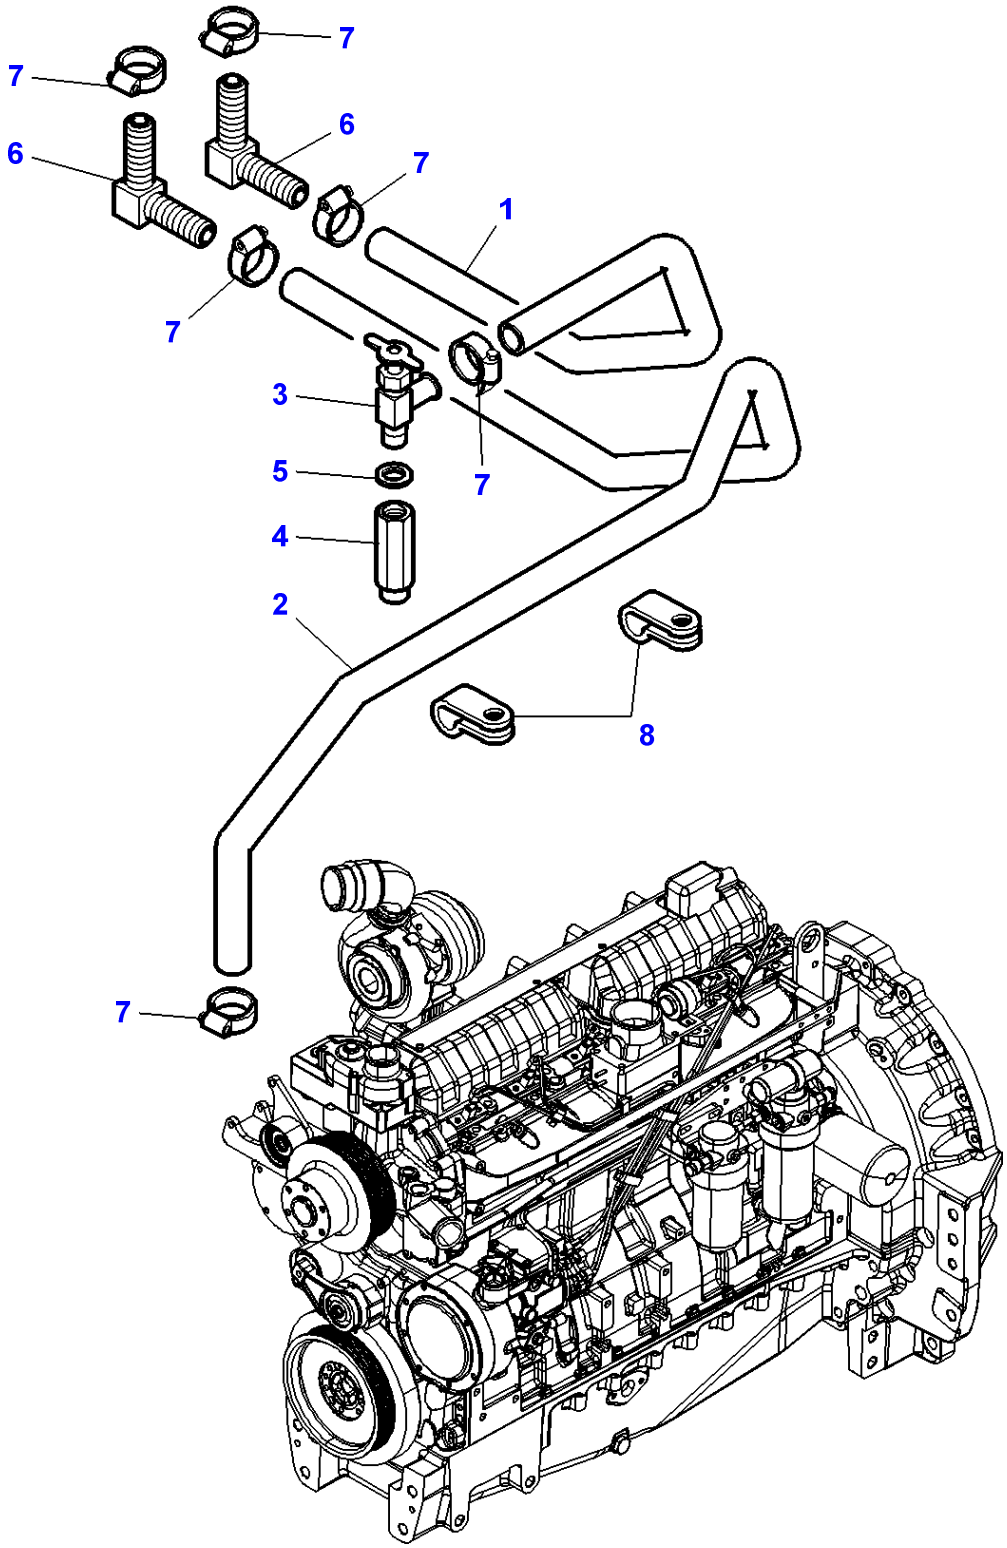

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277373M1 | 1 | Hose | Length 950 MM |
| 2 | 4277823M1 | 1 | Hose | Length 1800 MM |
| 3 | 30-3076830 | 1 | Valve. | |
| 4 | 5015331M1 | 1 | Adaptor | |
| 5 | 339526X1 | 1 | Seal | Diameter 18-24 X 1,5 |
| 6 | 3788222M1 | 2 | Elbow | |
| 7 | 3820729M1 | 6 | Hose Clip | |
| 8 | 3581424M1 | 2 | Clip | Diameter 30 - M8 |
| | 4273333M1 | 2 | Clamp | Diameter 45 - M8 |

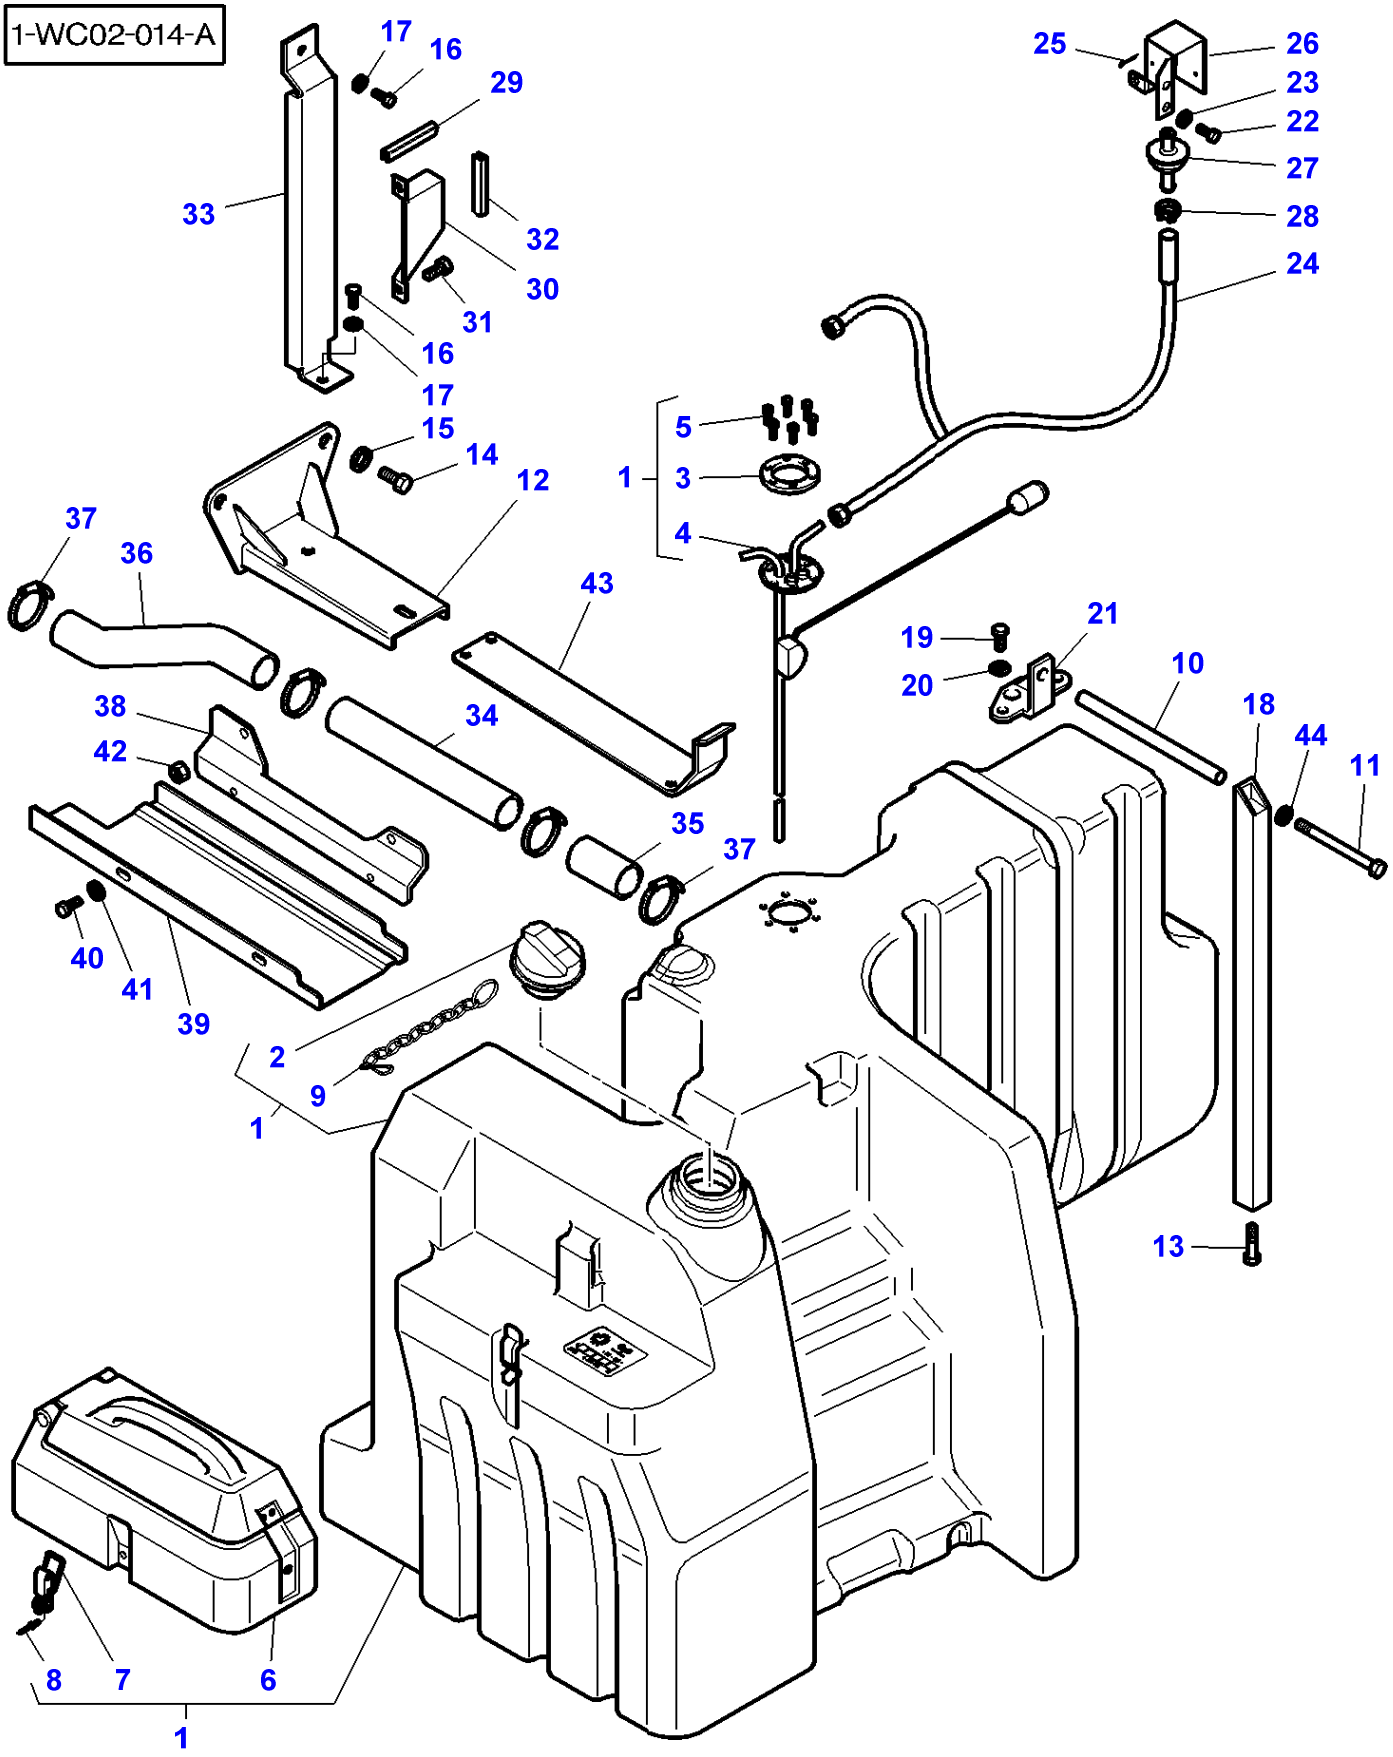
1-WC02-014-A
17
16
29
33
32
30
31
16
17
15
14
12
37
36
43
38
42
34
35
37
40
41
39
2
9
1
1
5
3
4
25
26
23
22
27
28
24
19
20
21
10
18
44
11
13
8
7
6
1


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Fuel Tank & Attachments Page 010-0130

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275493M92 | 1 | Tank | |
| 2 | 3786050M1 | 1 | Plug | (1) |
| 3 | 4279002M1 | 1 | Gasket | (1) |
| 4 | 4279578M2 | 1 | Fuel Gauge | (1) |
| 5 | 3005728X1 | 6 | Screw | (1)<br>No 10 X 16 |
| 6 | 3786754M91 | 1 | Tool Box | (1) |
| 7 | 3786764M1 | 1 | Latch | (1) |
| 8 | 3005728X1 | 2 | Screw | (1)<br>No 10 X 16 |
| 9 | 4275605M1 | 1 | Chain | (1) |
| 10 | 4279591M1 | 1 | Tube | Length 148 MM |
| 11 | 3011649X1 | 1 | Screw | M10 X 180 |
| 12 | 4275582M2 | 1 | Support | |
| 13 | 390122X1 | 1 | Hex. Sock. Screw | M10 X 80 |
| 14 | 391269X1 | 2 | Hex. Sock. Screw | M16 X 30 |
| 15 | 1441664X1 | 2 | Washer | Diameter 16-30 X 3 |
| 16 | 3009491X1 | 2 | Hex. Sock. Screw | M10 X 20 |
| 17 | 390734X1 | 2 | Washer | Diameter 10-21 X 2 |
| 18 | 4279582M1 | 1 | Reinforcement | |
| 19 | 3009491X1 | 3 | Hex. Sock. Screw | M10 X 20 |
| 20 | 390734X1 | 3 | Washer | Diameter 10-21 X 2 |
| 21 | 4275583M2 | 1 | Bridle | |
| 22 | 339123X1 | 1 | Hex. Sock. Screw | M8 X 20 |
| 23 | 390972X1 | 1 | Washer | Diameter 8-17 X 1,7 |
| 24 | 4278965M1 | 1 | Hydr. Hose | |
| 25 | 1442970X1 | 2 | Pin | Diameter 4 X 63 |
| 26 | 3808024M2 | 1 | Housing | |
| 27 | 3808023M91 | 1 | Non Return Valve | |
| 28 | 3712465M1 | 1 | Hose Clip | Diameter 15 MM |
| 29 | 4277715M1 | 1 | Protector | Length 60 MM |
| 30 | 916101170010 | 1 | Protector | |
| 31 | 339560X1 | 2 | Hex. Sock. Screw | M6 X 16 |
| 32 | 4277714M1 | 1 | Protector | [A]<br>Length 45 MM |
| 33 | 4277720M1 | 1 | Stop | |
| 34 | 4275653M2 | 1 | Tube | |
| 35 | 4274265M1 | 1 | Hose | |
| 36 | 4277471M1 | 1 | Hose | Length 300 MM |
| 37 | 338618X1 | 4 | Hose Clip | Diameter 50-70 |
| 38 | 4276942M3 | 1 | Angle. | |
| 39 | 4276949M1 | 1 | Cowl | |
| 40 | 3009491X1 | 2 | Hex. Sock. Screw | M10 X 20 |
| 41 | 390734X1 | 2 | Washer | Diameter 10-21 X 2 |
| 42 | 339034X1 | 2 | Nut | M16 |
| 43 | 4279012M2 | 1 | Stop | |
| 44 | 390734X1 | 1 | Washer | |

**FOOTNOTE [A]** CUT TO REQUIRED LENGTH

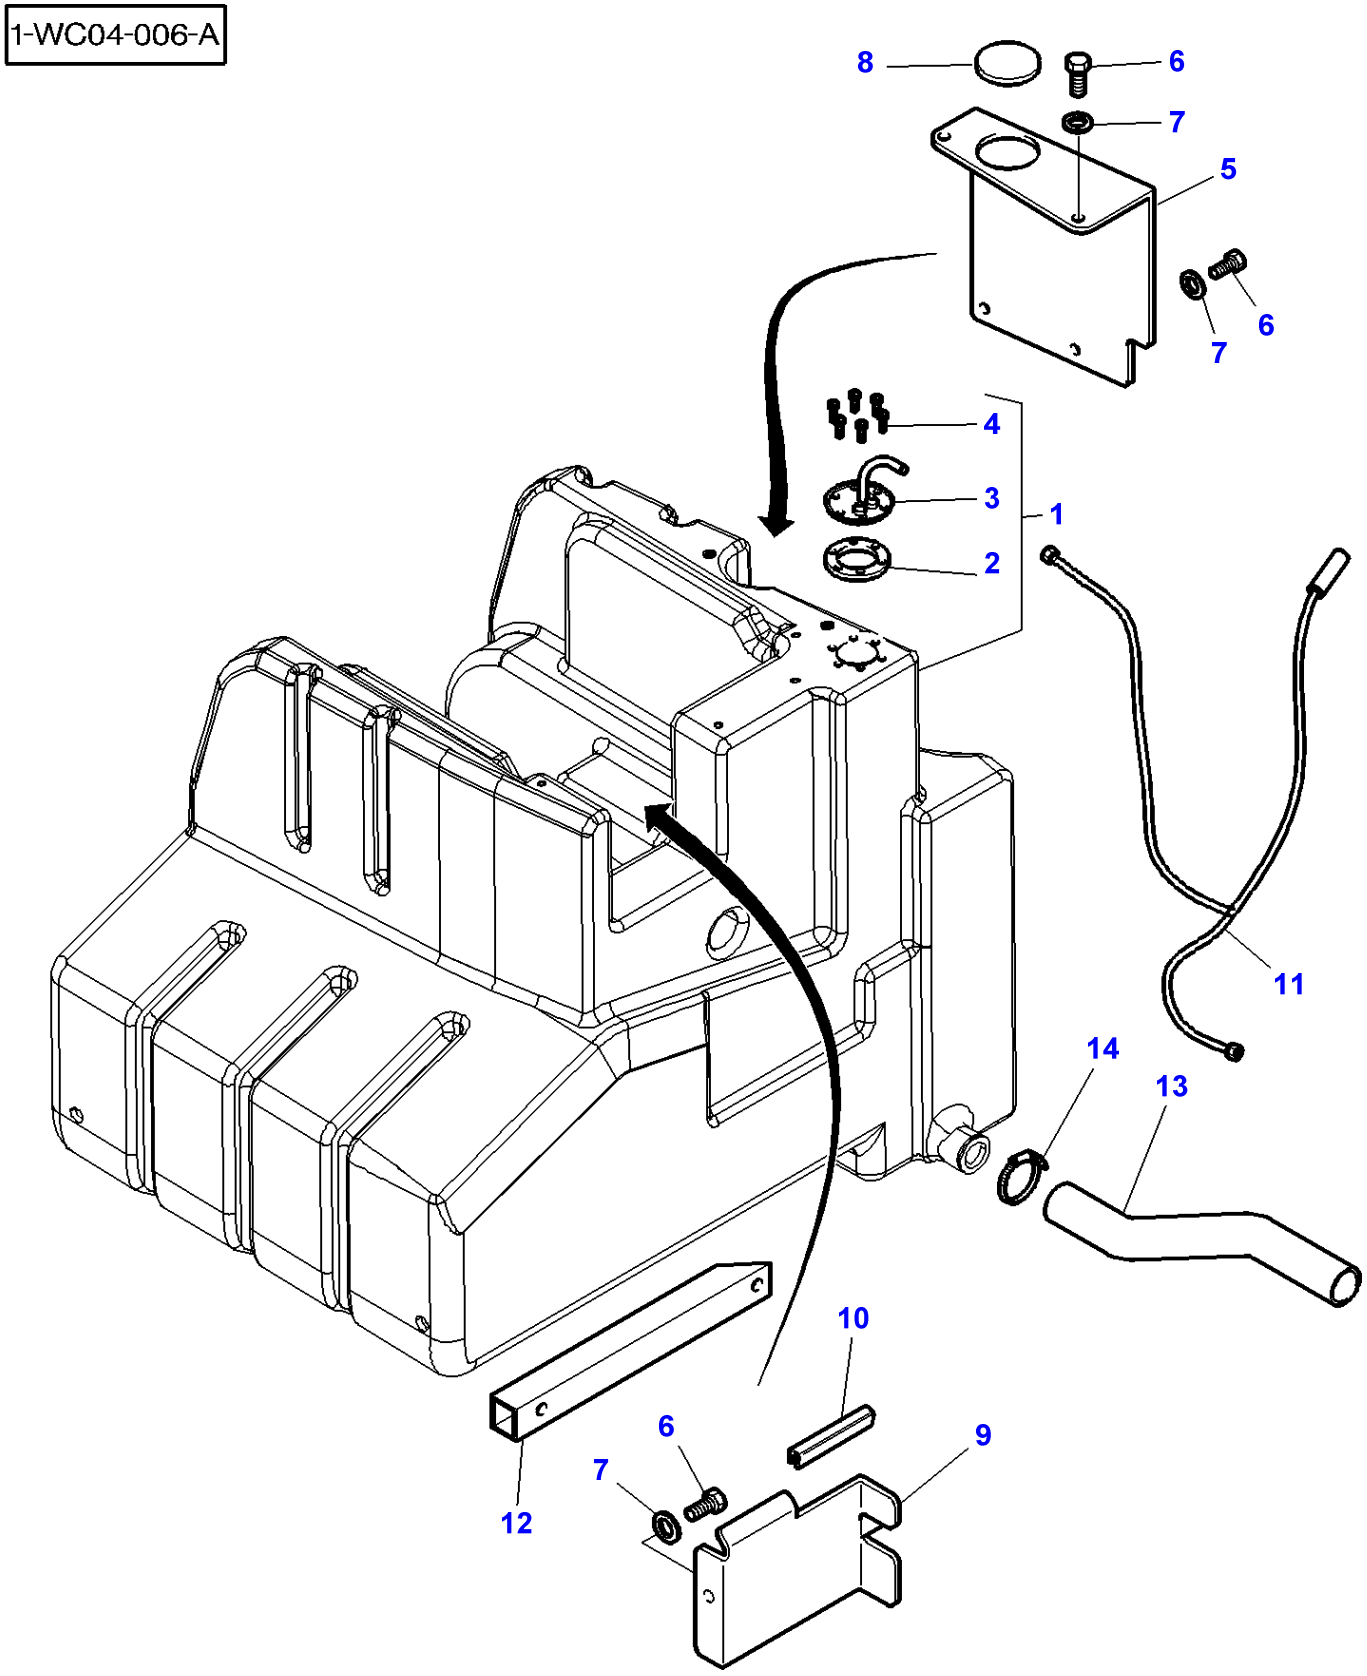

1-WC04-006-A
8
6
7
5
6
7
4
3
2
1
11
14
13
10
6
7
9
12

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275495M91 | 1 | Tank | |
| 2 | 1617869M2 | 1 | Gasket | (1) |
| 3 | 4275229M2 | 1 | Tube | (1) |
| 4 | 3005728X1 | 6 | Screw | (1) No 10 X 16 |
| 5 | 4277512M2 | 1 | Cowl | |
| 6 | 3007934X1 | 6 | Screw | CBZ M6 X 16 |
| 7 | 391038X1 | 6 | Washer | Diameter 6-18 X 1,5 |
| 8 | 4277511M1 | 1 | Plug | Diameter 62 MM |
| 9 | 4278335M1 | 1 | Shield | |
| 10 | 4271654M1 | 1 | Gasket | Length 75 MM |
| 11 | 4278965M1 | 1 | Hydr. Hose | |
| 12 | 4279592M1 | 1 | Stop | |
| 13 | 4277471M1 | 1 | Hose | Length 300 MM |
| 14 | 338618X1 | 1 | Hose Clip | Diameter 50-70 |


1-WH16-005-A

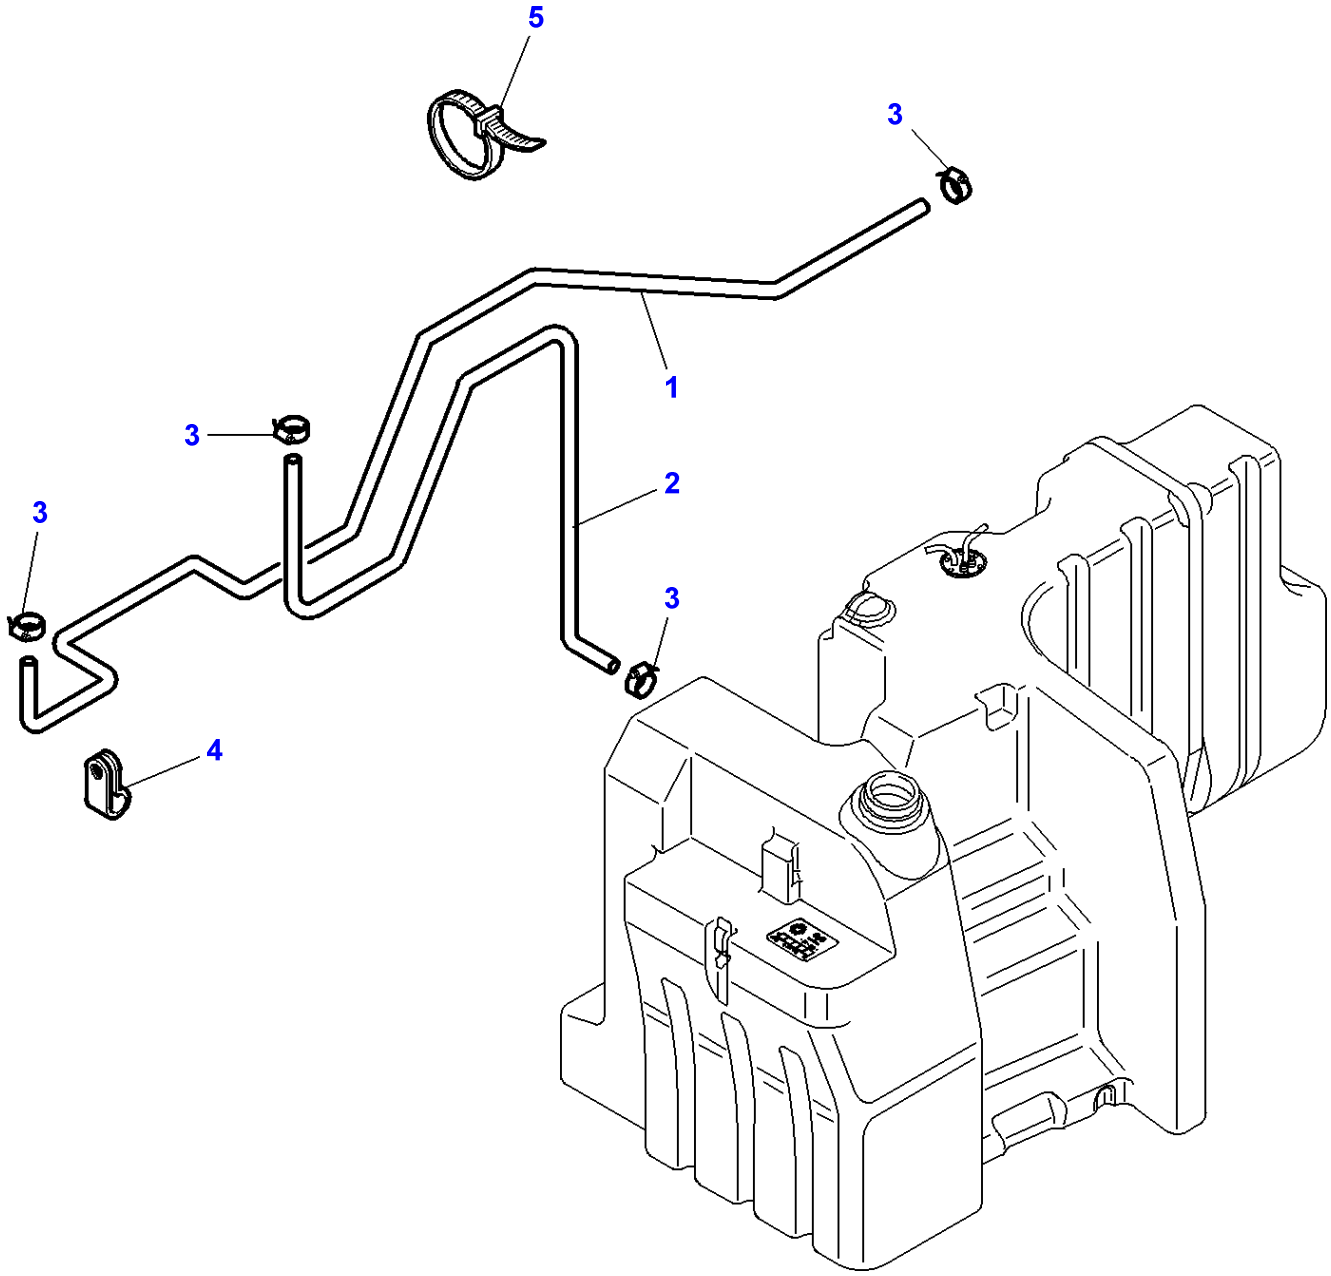

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3785624M1 | 1 | Hydr. Hose | Length 1850 MM<br>Up to Serial or Engine Number N309086 |
| | 4280428M2 | 1 | Hydr. Hose | Length 2100 MM<br>From Serial or Engine Number N309087 |
| 2 | 3580971M1 | 1 | Hydr. Hose | Length 2100 MM<br>Up to Serial or Engine Number N309086 |
| | 4280429M2 | 1 | Hydr. Hose | Length 1850 MM<br>From Serial or Engine Number N309087 |
| 3 | 3777425M1 | 4 | Clamp | Diameter 14 MM<br>Up to Serial or Engine Number 07-NOV-2004 |
| 4 | 3387756M1 | 1 | Clip | Diameter 16 - M8 |
| 5 | 3619622M1 | 3 | Cable Tie | |

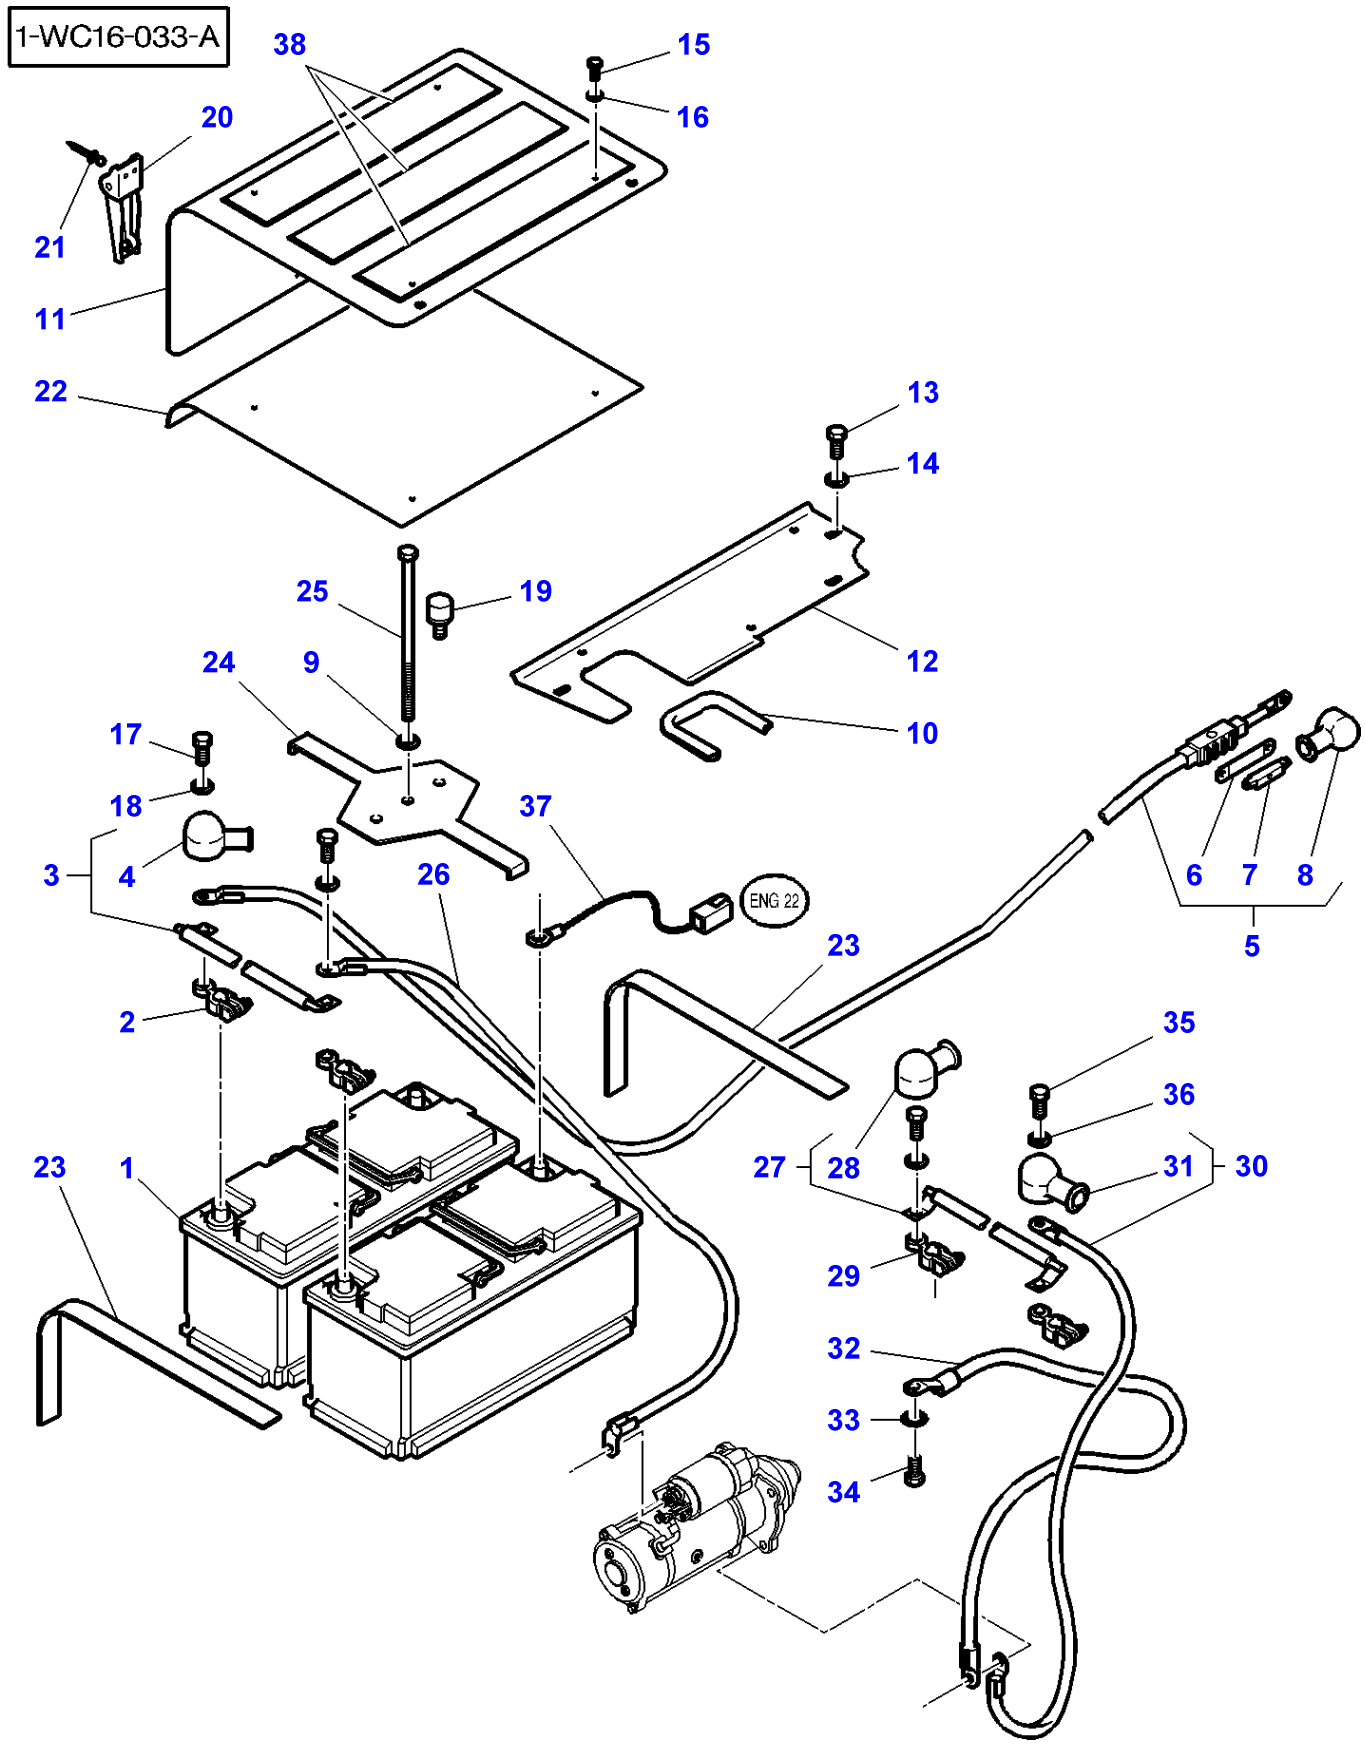
1-WC16-033-A
38
15
16
20
21
11
22
13
14
25
19
12
24
9
10
17
18
37
3
4
26
ENG 22
6
7
8
5
23
2
35
36
27
28
31
30
23
1
29
32
33
34


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Batteries And Cables - Without Battery Cut-Off W/O Positive Connection Page 010-0145

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 2 | Battery | [A,B] |
| 2 | 4276408M1 | 2 | Connector | + |
| 3 | 4274946M1 | 1 | Cable | Length 190 MM |
| | | | | + |
| 4 | 3784666M1 | 2 | Helmet | (3) |
| 5 | 4274519M2 | 1 | Cable | Length 1870 MM |
| | | | | + |
| 6 | **4276186M1** | 1 | Fuse | (5) |
| | | | | 150 AMP |
| 7 | 3789733M1 | 1 | Case Assy | (5) |
| 8 | 3784666M1 | 1 | Helmet | (5) |
| 9 | 390597X1 | 1 | Washer | Diameter 10-30 X 2,5 |
| 10 | 3784893M1 | 1 | Gasket | Length 204 MM |
| 11 | 4278304M2 | 1 | Cover | |
| 12 | 4278305M2 | 1 | Bridle | |
| 13 | 339124X1 | 4 | Hex. Sock. Screw | M8 X 16 |
| 14 | 390972X1 | 4 | Washer | Diameter 8-17 X 1,7 |
| 15 | 338828X1 | 4 | Rivet | |
| 16 | 3001856X1 | 4 | Washer | Diameter 4-12 X 1,1 |
| 17 | 1440433X1 | 2 | Hex. Sock. Screw | M10 X 16 |
| 18 | 390734X1 | 2 | Washer | Diameter 10-21 X 2 |
| 19 | 4278306M1 | 2 | Shock Absorber | |
| 20 | 4278351M1 | 1 | Tie | |
| 21 | 3010021X1 | 2 | Rivet | |
| 22 | 4278782M1 | 1 | Sound Reduction | |
| 23 | 4278758M1 | 1 | Gasket | |
| 24 | 4275106M2 | 1 | Bridle | |
| 25 | 392882X1 | 1 | Hex. Sock. Screw | M10 X 240 |
| 26 | 4274520M1 | 1 | Cable | Length 1220 MM |
| | | | | + |
| 27 | 4274518M1 | 1 | Cable | Length 190 MM |
| | | | | - |
| 28 | 3784666M1 | 2 | Helmet | (27) |
| 29 | 4276409M1 | 2 | Connector | - |
| 30 | 4275488M2 | 1 | Cable | |
| 31 | 3784666M1 | 1 | Helmet | (30) |
| 32 | 3788045M1 | 1 | Cable | Length 750 MM |
| | | | | - |
| 33 | 3010604X1 | 1 | Washer | |
| 34 | 3009491X1 | 1 | Hex. Sock. Screw | M10 X 20 |
| 35 | 339124X1 | 2 | Hex. Sock. Screw | M8 X 16 |
| 36 | 390972X1 | 2 | Washer | Diameter 8-17 X 1,7 |
| 37 | 4276513M1 | 1 | Harness | Length 1800 MM |
| 38 | 4280036M1 | 3 | Rubber Strap | 370 X 70 |

**FOOTNOTE [A]** PLEASE REFER TO MARKETING CATALOG
**FOOTNOTE [B]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

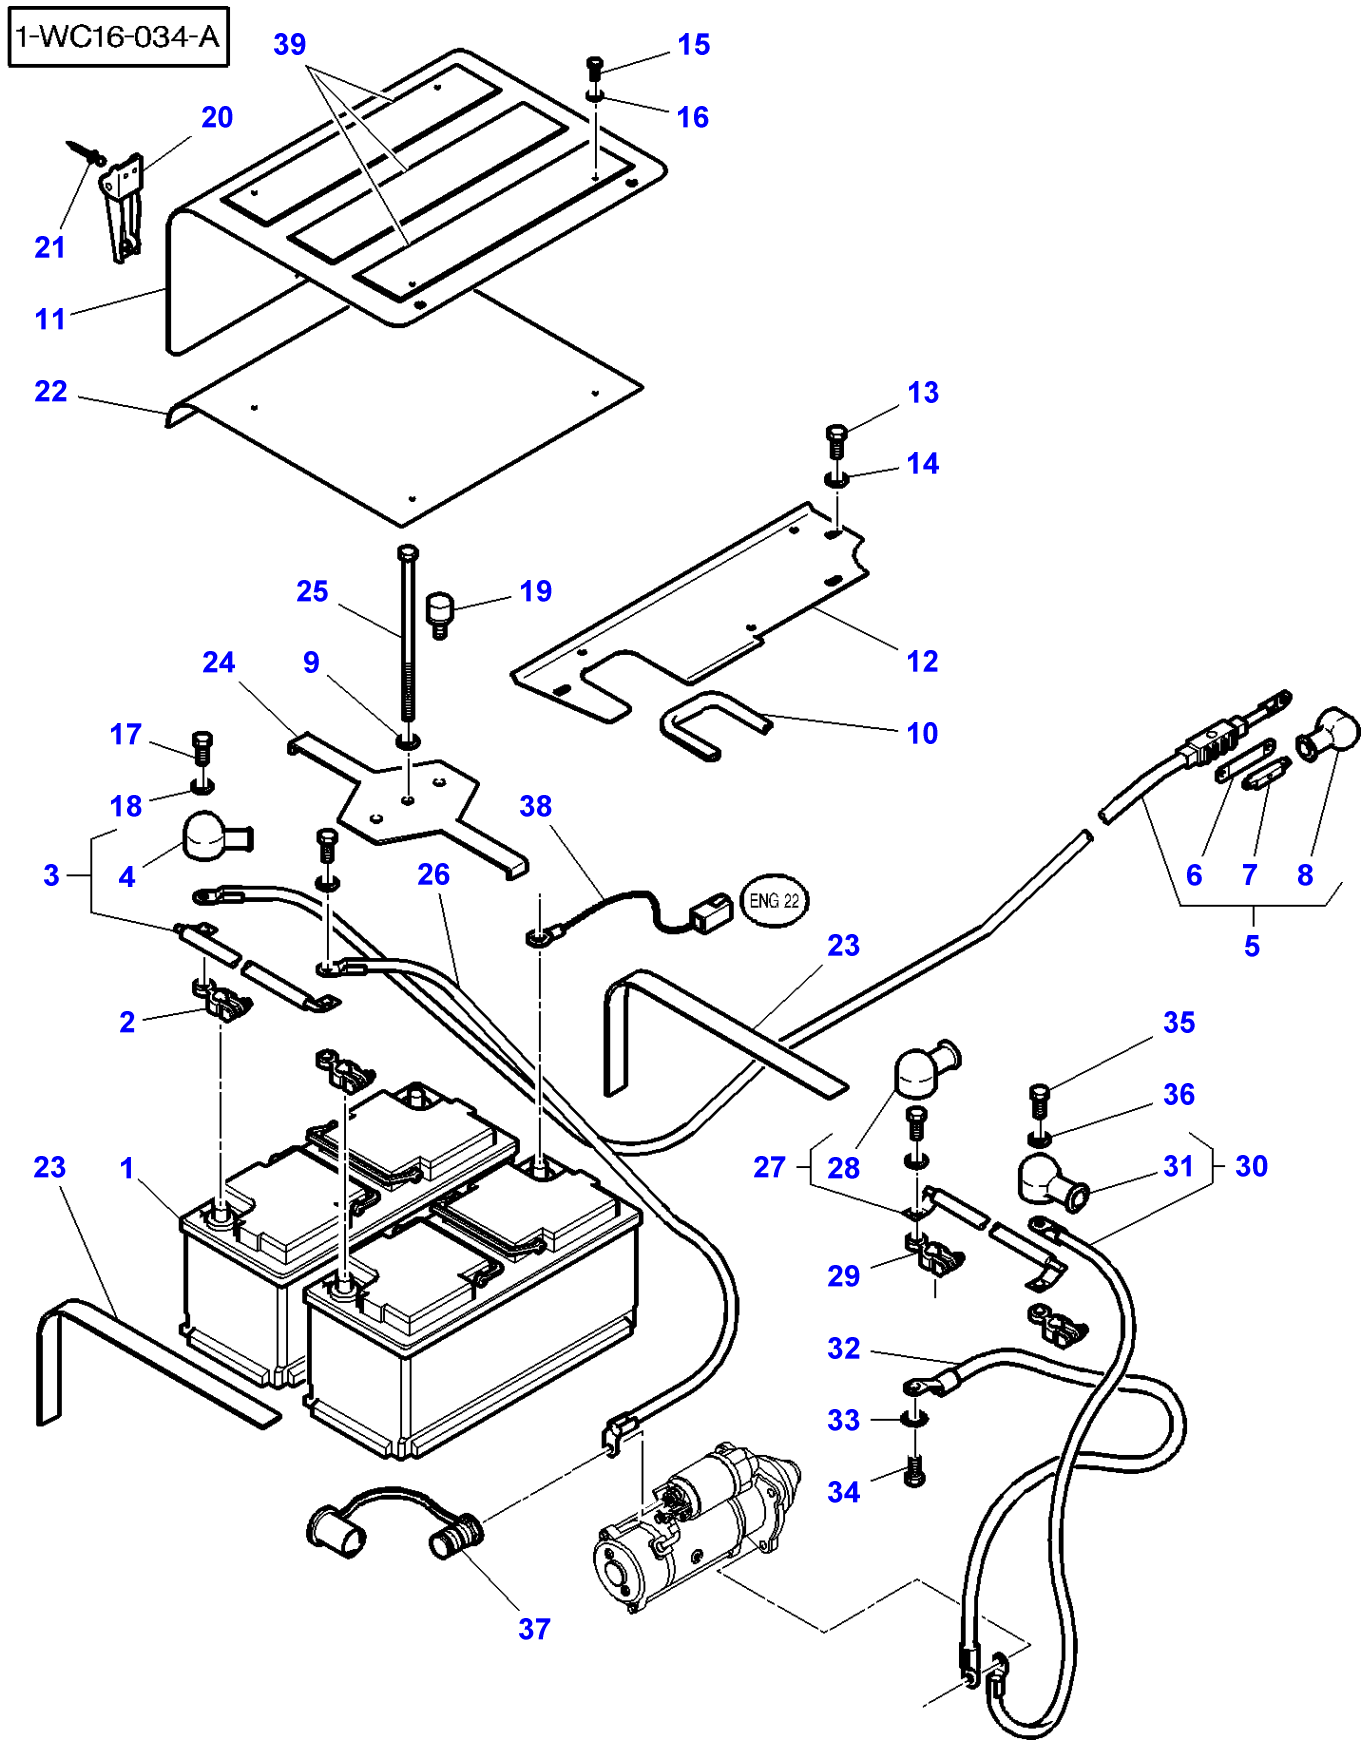
1-WC16-034-A
39
15
16
20
21
11
22
13
14
25
19
12
24
9
10
17
18
38
3
4
26
ENG 22
6
7
8
5
23
2
35
36
23
1
27
28
31
30
29
32
33
34
37


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Batteries And Cables - Without Battery Cut-Off With Positive Connection Page 010-0150

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 2 | Battery | [A,B] |
| 2 | 4276408M1 | 2 | Connector | + |
| 3 | 4274946M1 | 1 | Cable | Length 190 MM<br>+ |
| 4 | 3784666M1 | 2 | Helmet | (3) |
| 5 | 4274519M2 | 1 | Cable | Length 1870 MM<br>+ |
| 6 | **4276186M1** | 1 | Fuse | (5)<br>150 AMP |
| 7 | 3789733M1 | 1 | Case Assy | (5) |
| 8 | 3784666M1 | 1 | Helmet | (5) |
| 9 | 390597X1 | 1 | Washer | Diameter 10-30 X 2,5 |
| 10 | 3784893M1 | 1 | Gasket | Length 204 MM |
| 11 | 4278304M2 | 1 | Cover | |
| 12 | 4278305M2 | 1 | Bridle | |
| 13 | 339124X1 | 4 | Hex. Sock. Screw | M8 X 16 |
| 14 | 390972X1 | 4 | Washer | Diameter 8-17 X 1,7 |
| 15 | 338828X1 | 4 | Rivet | |
| 16 | 3001856X1 | 4 | Washer | Diameter 4-12 X 1,1 |
| 17 | 1440433X1 | 2 | Hex. Sock. Screw | M10 X 16 |
| 18 | 390734X1 | 2 | Washer | Diameter 10-21 X 2 |
| 19 | 4278306M1 | 2 | Shock Absorber | |
| 20 | 4278351M1 | 1 | Tie | |
| 21 | 3010021X1 | 2 | Rivet | |
| 22 | 4278782M1 | 1 | Sound Reduction | |
| 23 | 4278758M1 | 1 | Gasket | |
| 24 | 4275106M2 | 1 | Bridle | |
| 25 | 392882X1 | 1 | Hex. Sock. Screw | M10 X 240 |
| 26 | 4274520M1 | 1 | Cable | Length 1220 MM<br>+ |
| 27 | 4274518M1 | 1 | Cable | Length 190 MM<br>- |
| 28 | 3784666M1 | 2 | Helmet | (27) |
| 29 | 4276409M1 | 2 | Connector | - |
| 30 | 4275488M2 | 1 | Cable | |
| 31 | 3784666M1 | 1 | Helmet | (30) |
| 32 | 3788045M1 | 1 | Cable | Length 750 MM<br>- |
| 33 | 3010604X1 | 1 | Washer | |
| 34 | 3009491X1 | 1 | Hex. Sock. Screw | M10 X 20 |
| 35 | 339124X1 | 2 | Hex. Sock. Screw | M8 X 16 |
| 36 | 390972X1 | 2 | Washer | Diameter 8-17 X 1,7 |
| 37 | 5015252M1 | 1 | Connector | |
| 38 | 4276513M1 | 1 | Harness | Length 1800 MM |
| 39 | 4280036M1 | 3 | Rubber Strap | 370 X 70 |

**FOOTNOTE [A]** PLEASE REFER TO MARKETING CATALOG
**FOOTNOTE [B]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

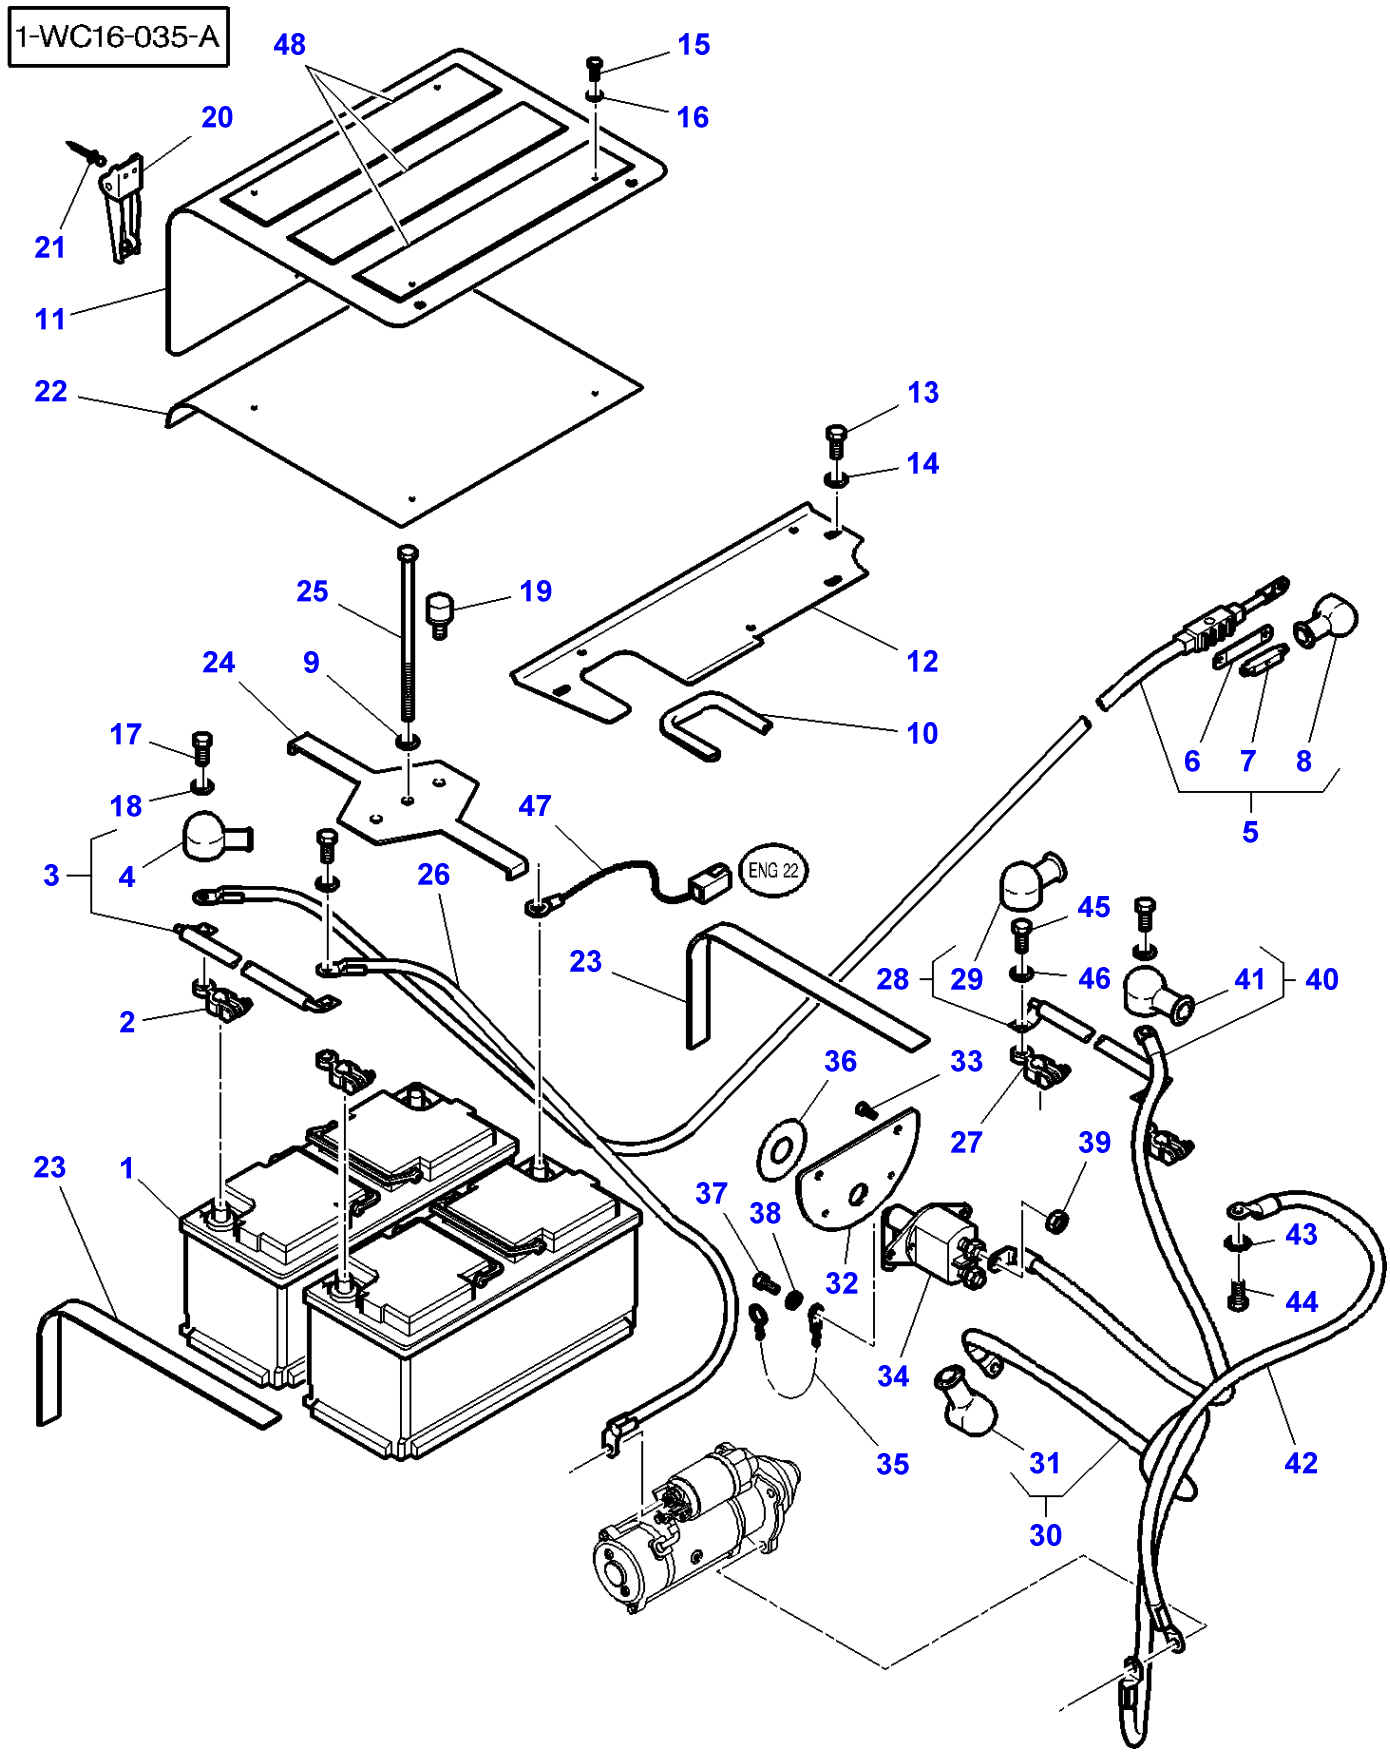
1-WC16-035-A
48
15
16
20
21
11
22
13
14
25
19
12
24
9
10
17
18
47
6
7
8
5
3
4
26
ENG 22
45
28
29
46
41
40
23
2
36
33
27
39
23
1
37
38
32
43
44
34
35
31
42
30

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Batteries And Cables - With Battery Cut-Off W/O Positive Connection Page 010-0155

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 2 | Battery | [A,B] |
| 2 | 4276408M1 | 2 | Connector | + |
| 3 | 4274946M1 | 1 | Cable | Length 190 MM<br>+ |
| 4 | 3784666M1 | 2 | Helmet | (3) |
| 5 | 4274519M2 | 1 | Cable | Length 1870 MM<br>+ |
| 6 | **4276186M1** | 1 | Fuse | (5)<br>150 AMP |
| 7 | 3789733M1 | 1 | Case Assy | (5) |
| 8 | 3784666M1 | 1 | Helmet | (5) |
| 9 | 390597X1 | 1 | Washer | Diameter 10-30 X 2,5 |
| 10 | 3784893M1 | 1 | Gasket | Length 204 MM |
| 11 | 4278304M2 | 1 | Cover | |
| 12 | 4278305M2 | 1 | Bridle | |
| 13 | 339124X1 | 4 | Hex. Sock. Screw | M8 X 16 |
| 14 | 390972X1 | 4 | Washer | Diameter 8-17 X 1,7 |
| 15 | 338828X1 | 4 | Rivet | |
| 16 | 3001856X1 | 4 | Washer | Diameter 4-12 X 1,1 |
| 17 | 1440433X1 | 2 | Hex. Sock. Screw | M10 X 16 |
| 18 | 390734X1 | 2 | Washer | Diameter 10-21 X 2 |
| 19 | 4278306M1 | 2 | Shock Absorber | |
| 20 | 4278351M1 | 1 | Tie | |
| 21 | 3010021X1 | 2 | Rivet | |
| 22 | 4278782M1 | 1 | Sound Reduction | |
| 23 | 4278758M1 | 1 | Gasket | |
| 24 | 4275106M2 | 1 | Bridle | |
| 25 | 392882X1 | 1 | Hex. Sock. Screw | M10 X 240 |
| 26 | 4274520M1 | 1 | Cable | Length 1220 MM<br>+ |
| 27 | 4276409M1 | 2 | Connector | - |
| 28 | 4274518M1 | 1 | Cable | Length 190 MM<br>- |
| 29 | 3784666M1 | 2 | Helmet | (28) |
| 30 | 4275544M1 | 1 | Cable | Length 1400 MM<br>- |
| 31 | 3784666M1 | 1 | Helmet | (30) |
| 32 | 4275007M1 | 1 | Support | |
| 33 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 34 | 3613598M91 | 1 | Switch | |
| 35 | 3613599M91 | 1 | Chain | |
| 36 | 3613600M1 | 1 | Decal | |
| 37 | 339666X1 | 2 | Hex. Sock. Screw | M6 X 20 |
| 38 | 390971X1 | 2 | Washer | Diameter 6-12 X 1,5 |
| 39 | 339030X1 | 2 | Nut Metric | M6 |
| 40 | 4275771M1 | 1 | Battery Cable | Length 1400 MM<br>- |
| 41 | 3784666M1 | 1 | Helmet | (40) |
| 42 | 3788045M1 | 1 | Cable | Length 750 MM<br>- |
| 43 | 3010604X1 | 1 | Washer | |
| 44 | 3009491X1 | 1 | Hex. Sock. Screw | M10 X 20 |
| 45 | 339124X1 | 2 | Hex. Sock. Screw | M8 X 16 |
| 46 | 390972X1 | 2 | Washer | Diameter 8-17 X 1,7 |
| 47 | 4276513M1 | 1 | Harness | Length 1800 MM |
| 48 | 4280036M1 | 3 | Rubber Strap | 370 X 70 |

**FOOTNOTE [A]** PLEASE REFER TO MARKETING CATALOG
**FOOTNOTE [B]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

1-WC08-015-A

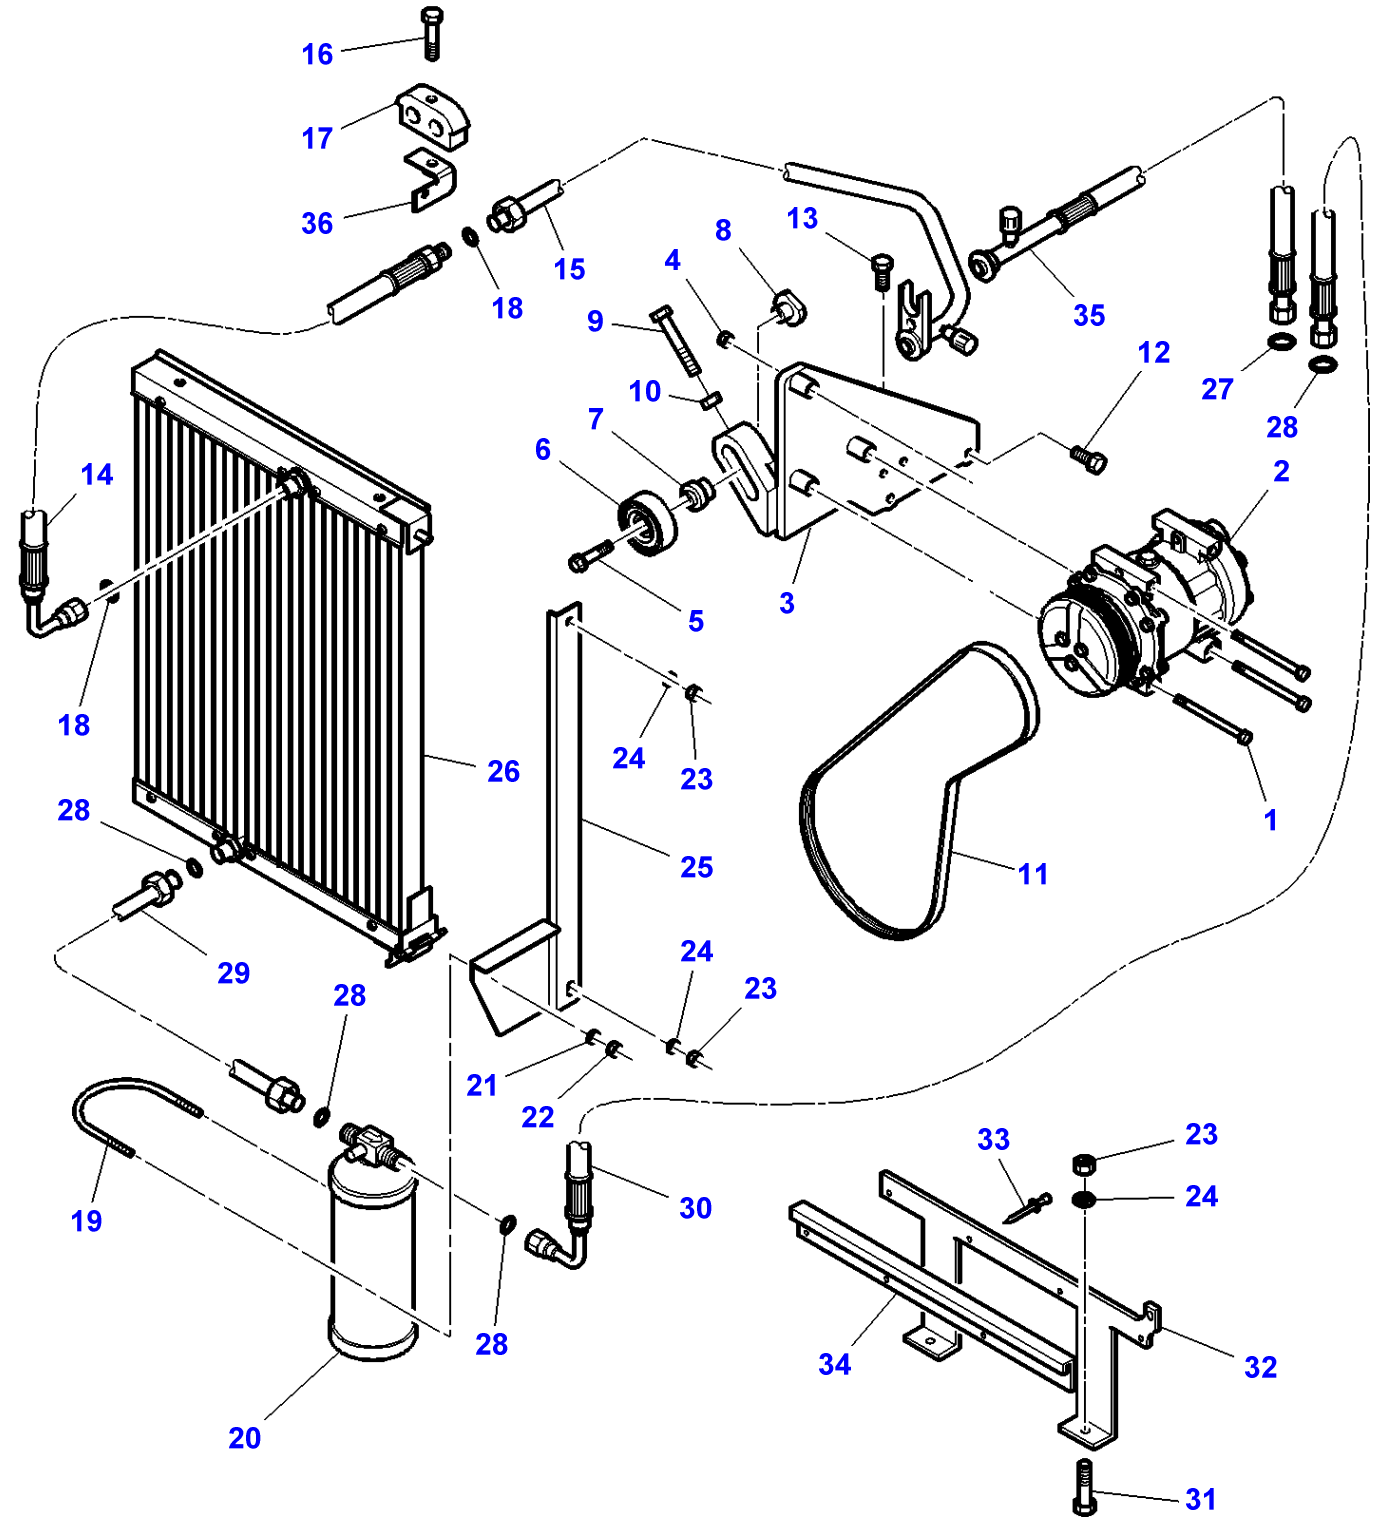

16
17
36
15
18
8
13
4
9
10
7
6
5
35
12
27
28
2
3
14
18
26
24
23
1
11
28
25
29
24
23
28
21
22
19
30
28
20
33
23
24
34
32
31

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 391245X1 | 3 | Hex. Sock. Screw | M8 X 130 |
| 2 | 3789035M1 | 1 | Compressor | See Page - Reference Number 010-0165/1 |
| 3 | 4271882M3 | 1 | Support | |
| 4 | 394367X1 | 3 | Locknut | M8 |
| 5 | 3010239X1 | 1 | Plough Bolt | M10 X 45 |
| 6 | 4270319M1 | 1 | Roller Assy | |
| 7 | 4270055M2 | 1 | Bush | |
| 8 | 4270054M1 | 1 | Nut Special | M10 |
| 9 | 390122X1 | 1 | Hex. Sock. Screw | M10 X 80 |
| 10 | 339402X1 | 1 | Nut | M10 |
| 11 | **4276375M1** | 1 | Belt | Length 1145 MM |
| 12 | 390246X1 | 2 | Hex. Sock. Screw | M8 X 70 |
| 13 | 3009491X1 | 1 | Hex. Sock. Screw | M10 X 20 |
| 14 | 4278051M1 | 1 | Hydr. Hose | Length 1200 MM |
| 15 | 4278053M1 | 1 | Tube | |
| 16 | 339011X1 | 1 | Hex. Sock. Screw | M8 X 45 |
| 17 | 3789722M1 | 2 | Bridle | Diameter 15 / 15 |
| 18 | 3010472X1 | 2 | O Ring | Diameter 10,82 MM |
| 19 | 3383977M1 | 1 | Stirrup | |
| 20 | **3712495M1** | 1 | Filter | |
| 21 | 390971X1 | 2 | Washer | Diameter 6-12 X 1,5 MM |
| 22 | 339030X1 | 2 | Nut Metric | M6 |
| 23 | 339169X1 | 5 | Nut | M8 |
| 24 | 390972X1 | 4 | Washer | Diameter 8-17 X 1,7 |
| 25 | 3785878M3 | 1 | Support | |
| 26 | 3785702M1 | 1 | Condenser | |
| 27 | 3010473X1 | 1 | O Ring | Diameter 14 MM |
| 28 | **3010471X1** | 5 | O Ring | Diameter 7,65 MM |
| 29 | 3787886M1 | 1 | Tube | |
| 30 | 4272202M1 | 1 | Hydr. Hose | Length 3000 MM |
| 31 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 32 | 4276222M3 | 1 | Plate | |
| 33 | 3010021X1 | 4 | Rivet | |
| 34 | 3787634M1 | 1 | Support | |
| 35 | 4272092M1 | 1 | Hydr. Hose | Length 1140 MM |
| 36 | 4280067M1 | 1 | Support | |

1-WC49-001-A

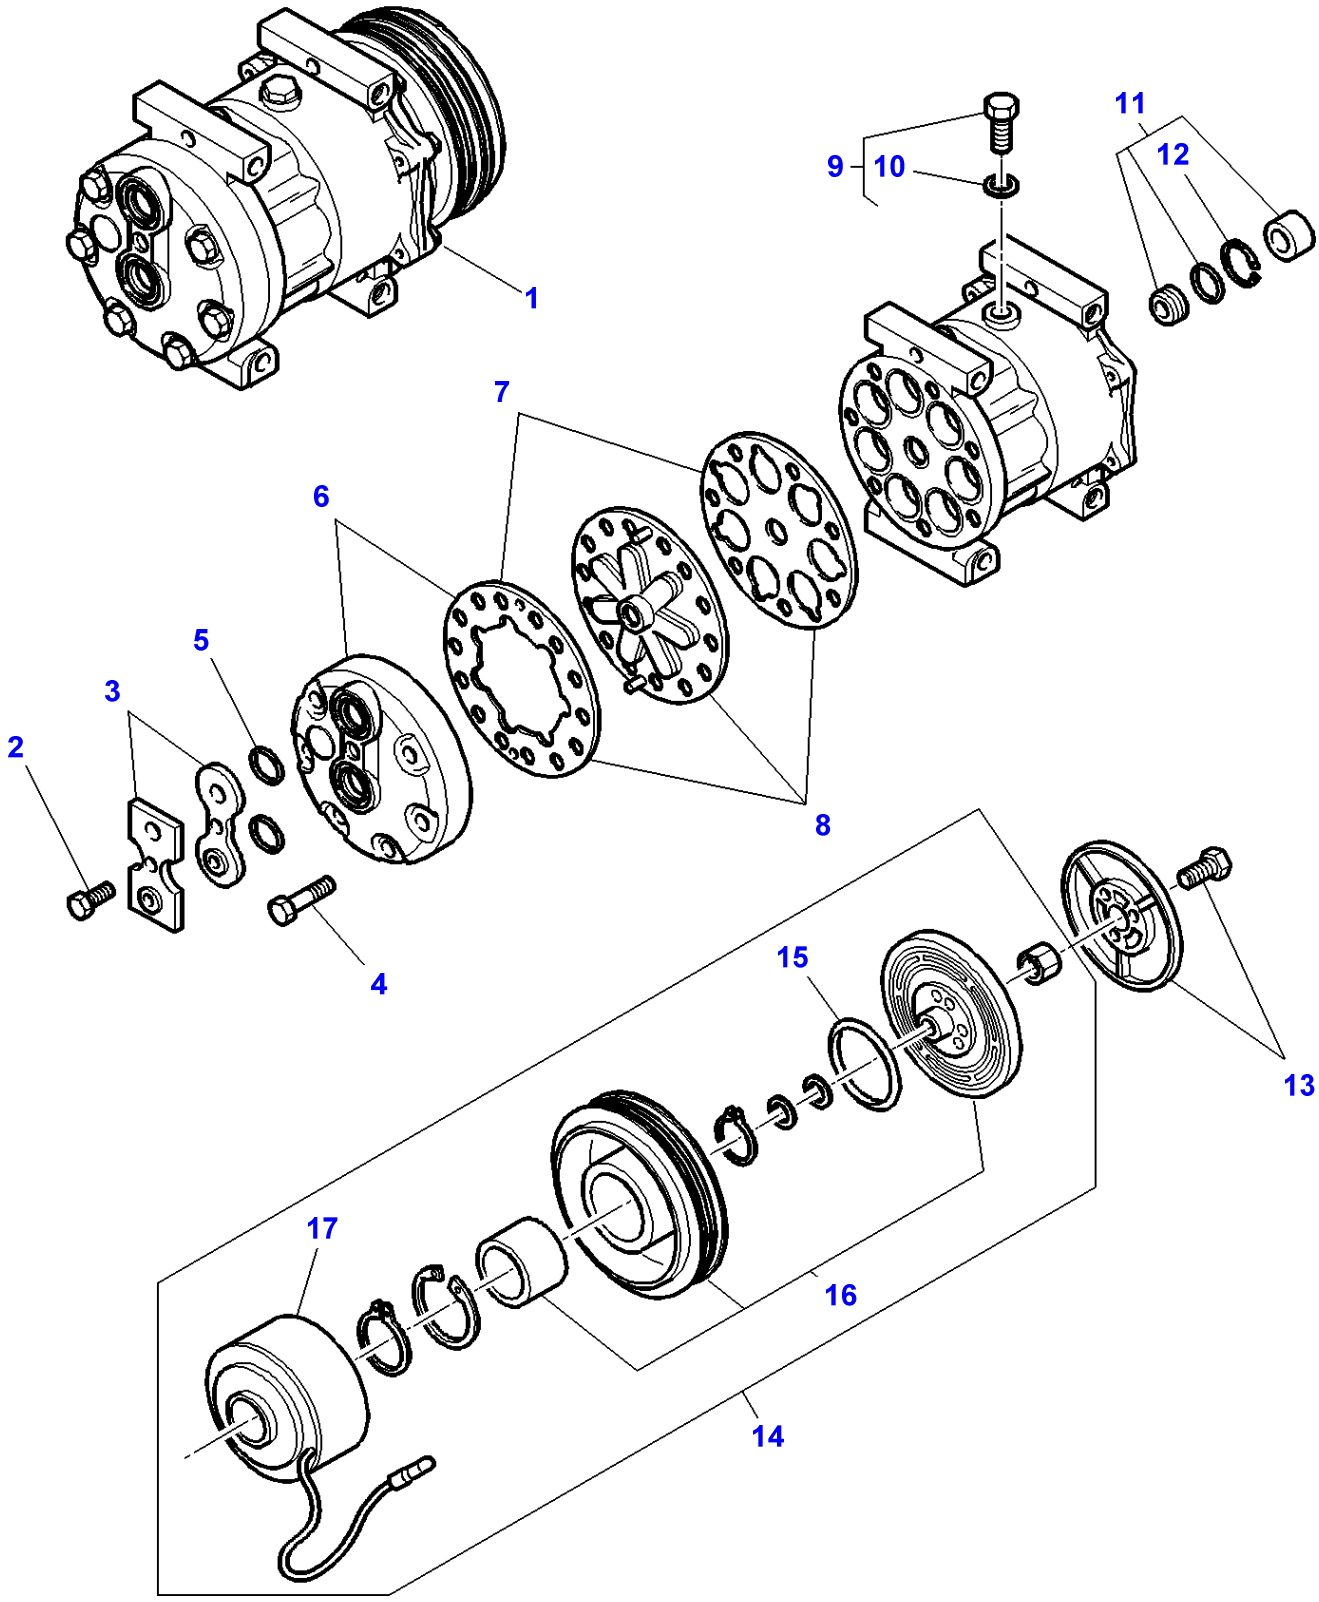


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3789035M1 | 1 | Compressor | |
| 2 | 3901157M1 | 1 | Screw | (1) |
| 3 | 3903258M91 | 1 | Kit | (1) |
| 4 | 3901154M1 | 1 | Screw | (1) |
| 5 | 3901155M1 | 1 | O Ring | (1) |
| 6 | 3901147M91 | 1 | Head | (1) |
| 7 | 3903256M91 | 1 | Kit, Gasket | (1) |
| 8 | 3903255M91 | 1 | Kit | (1) |
| 9 | 3901152M91 | 1 | Plug | (1) |
| 10 | 3901153M1 | 1 | O Ring | (9) |
| 11 | 3907059M91 | 1 | Kit, Joint | (1) |
| 12 | 3907060M1 | 1 | Snapring | (11) |
| 13 | 3903259M91 | 1 | Kit | (1) |
| 14 | 3907061M91 | 1 | Clutch | (1) |
| 15 | 3901162M1 | 1 | Cover | (14) |
| 16 | 3907062M91 | 1 | Rotor | (14) |
| 17 | 3907063M91 | 1 | Coil | (14) |

1-WC23-021-C

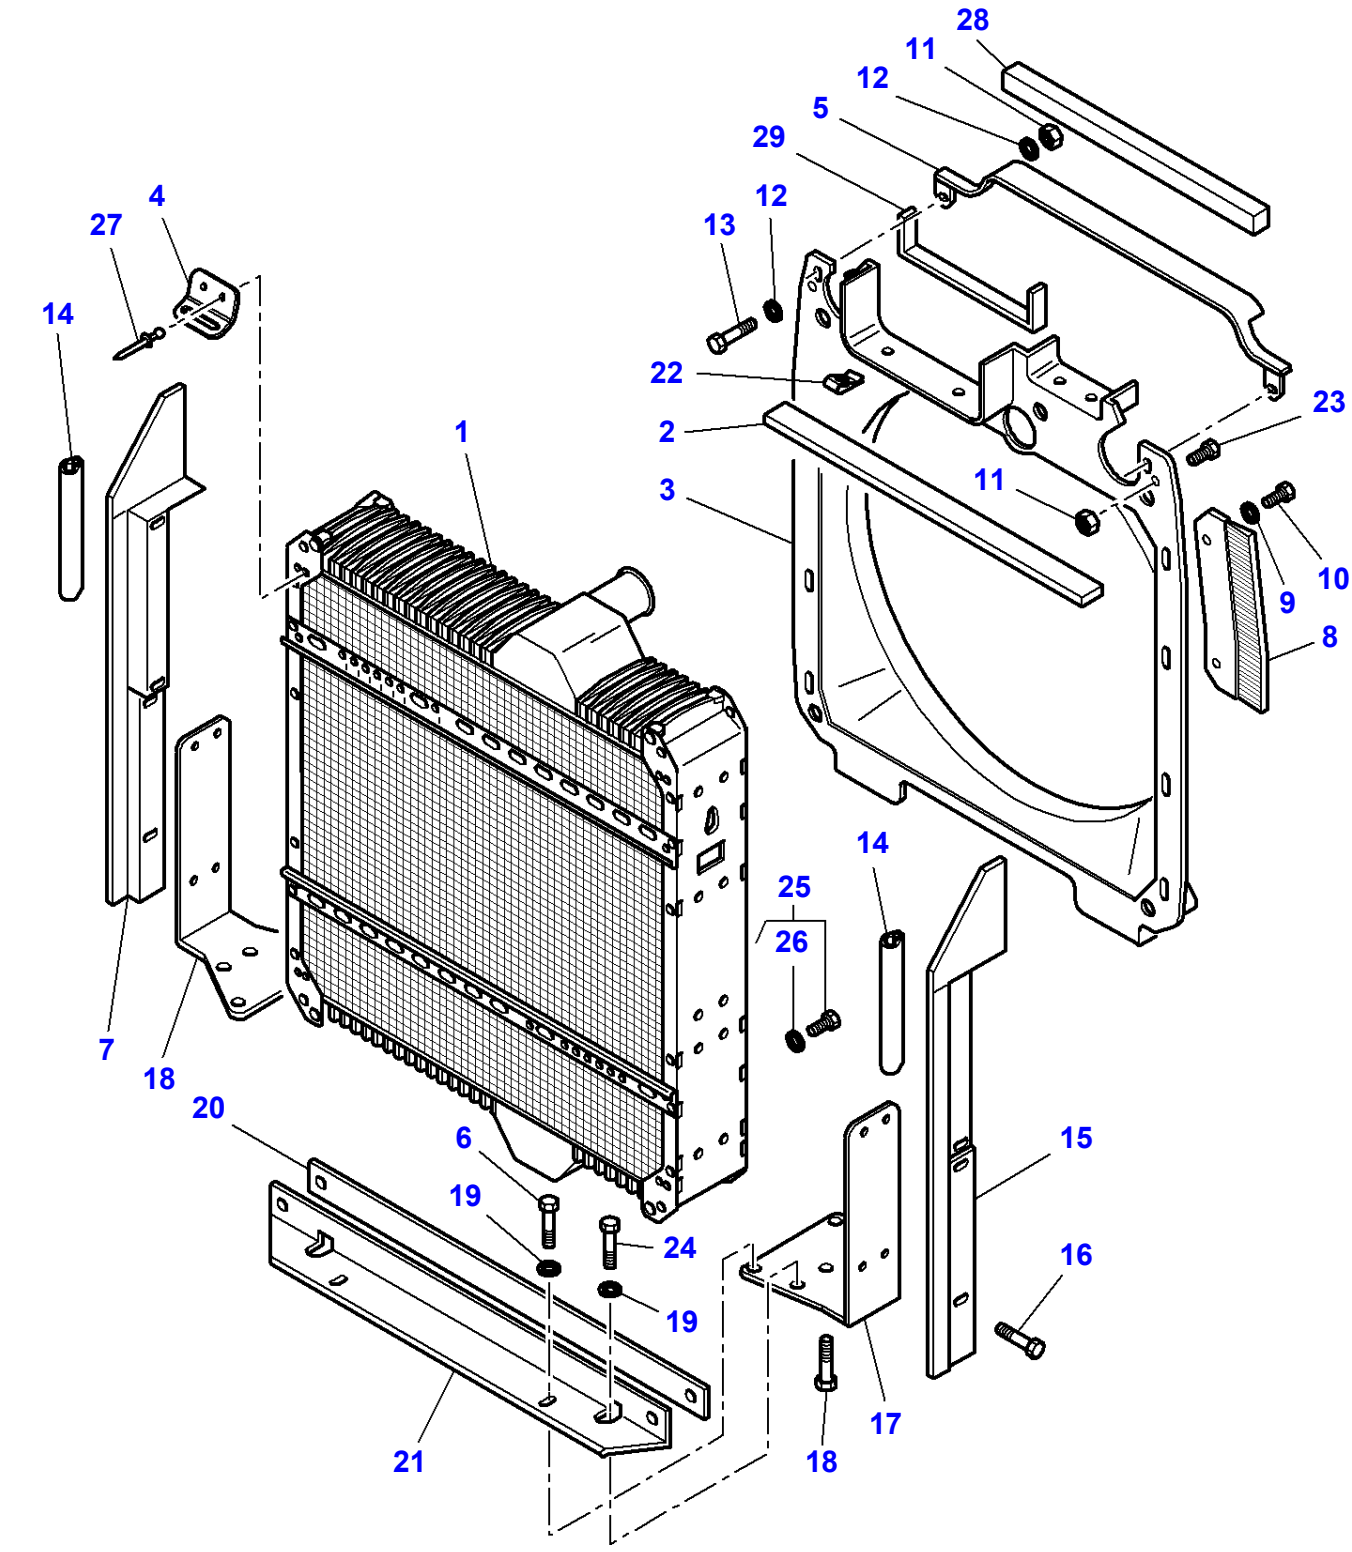

28
11
12
5
29
12
13
4
27
14
22
2
3
1
23
11
10
9
8
14
25
26
7
18
20
6
19
24
19
15
16
17
18
21

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3788381M1 | 1 | Water Cooler | [A] |
| 2 | 72504363 | 2 | Foam | 12 X 25 X 610 |
| 3 | 4274243M4 | 1 | Shroud | |
| 4 | 3789249M1 | 2 | Angle. | |
| 5 | 3785976M2 | 1 | Support | |
| 6 | 3009506X1 | 4 | Hex. Sock. Screw | M12 X 30 |
| 7 | 3781630M1 | 1 | Support | Right Hand |
| 8 | 3783099M4 | 1 | Gasket | Right Hand |
| | 3783100M4 | 1 | Gasket | Left Hand |
| 9 | 390972X1 | 8 | Washer | Diameter 8-17 X 1,7 |
| 10 | 339124X1 | 8 | Hex. Sock. Screw | M8 X 16 |
| 11 | 339169X1 | 4 | Nut | M8 |
| 12 | 390972X1 | 4 | Washer | Diameter 8-17 X 1,7 |
| 13 | 339761X1 | 2 | Hex. Sock. Screw | M8 X 25 |
| 14 | 3011018X1 | 2 | Seal | Length 700 MM |
| 15 | 3781629M1 | 1 | Support | Left Hand |
| 16 | 339123X1 | 8 | Hex. Sock. Screw | M8 X 20 |
| 17 | 3781911M1 | 1 | Support | Left Hand |
| 18 | 3781621M1 | 1 | Support | Right Hand |
| 19 | 390735X1 | 6 | Washer | Diameter 12-24 X 2,5 |
| 20 | 3783101M1 | 1 | Gasket | Length 745 MM |
| 21 | 3783046M1 | 1 | Support | |
| 22 | 3010070X1 | 2 | Nut | M6 |
| 23 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 24 | 3009505X1 | 2 | Hex. Sock. Screw | M12 X 25 |
| 25 | 358724X91 | 1 | Plug | 3/4-16 |
| 26 | 831497M1 | 1 | O Ring | (25) |
| 27 | 3010021X1 | 4 | Rivet | Diameter 4.8 x 9 |
| 28 | 3783670M2 | 1 | Gasket | 16 X 50 X 750 MM |
| 29 | 5016145M2 | 2 | Gasket | |

**FOOTNOTE [A]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

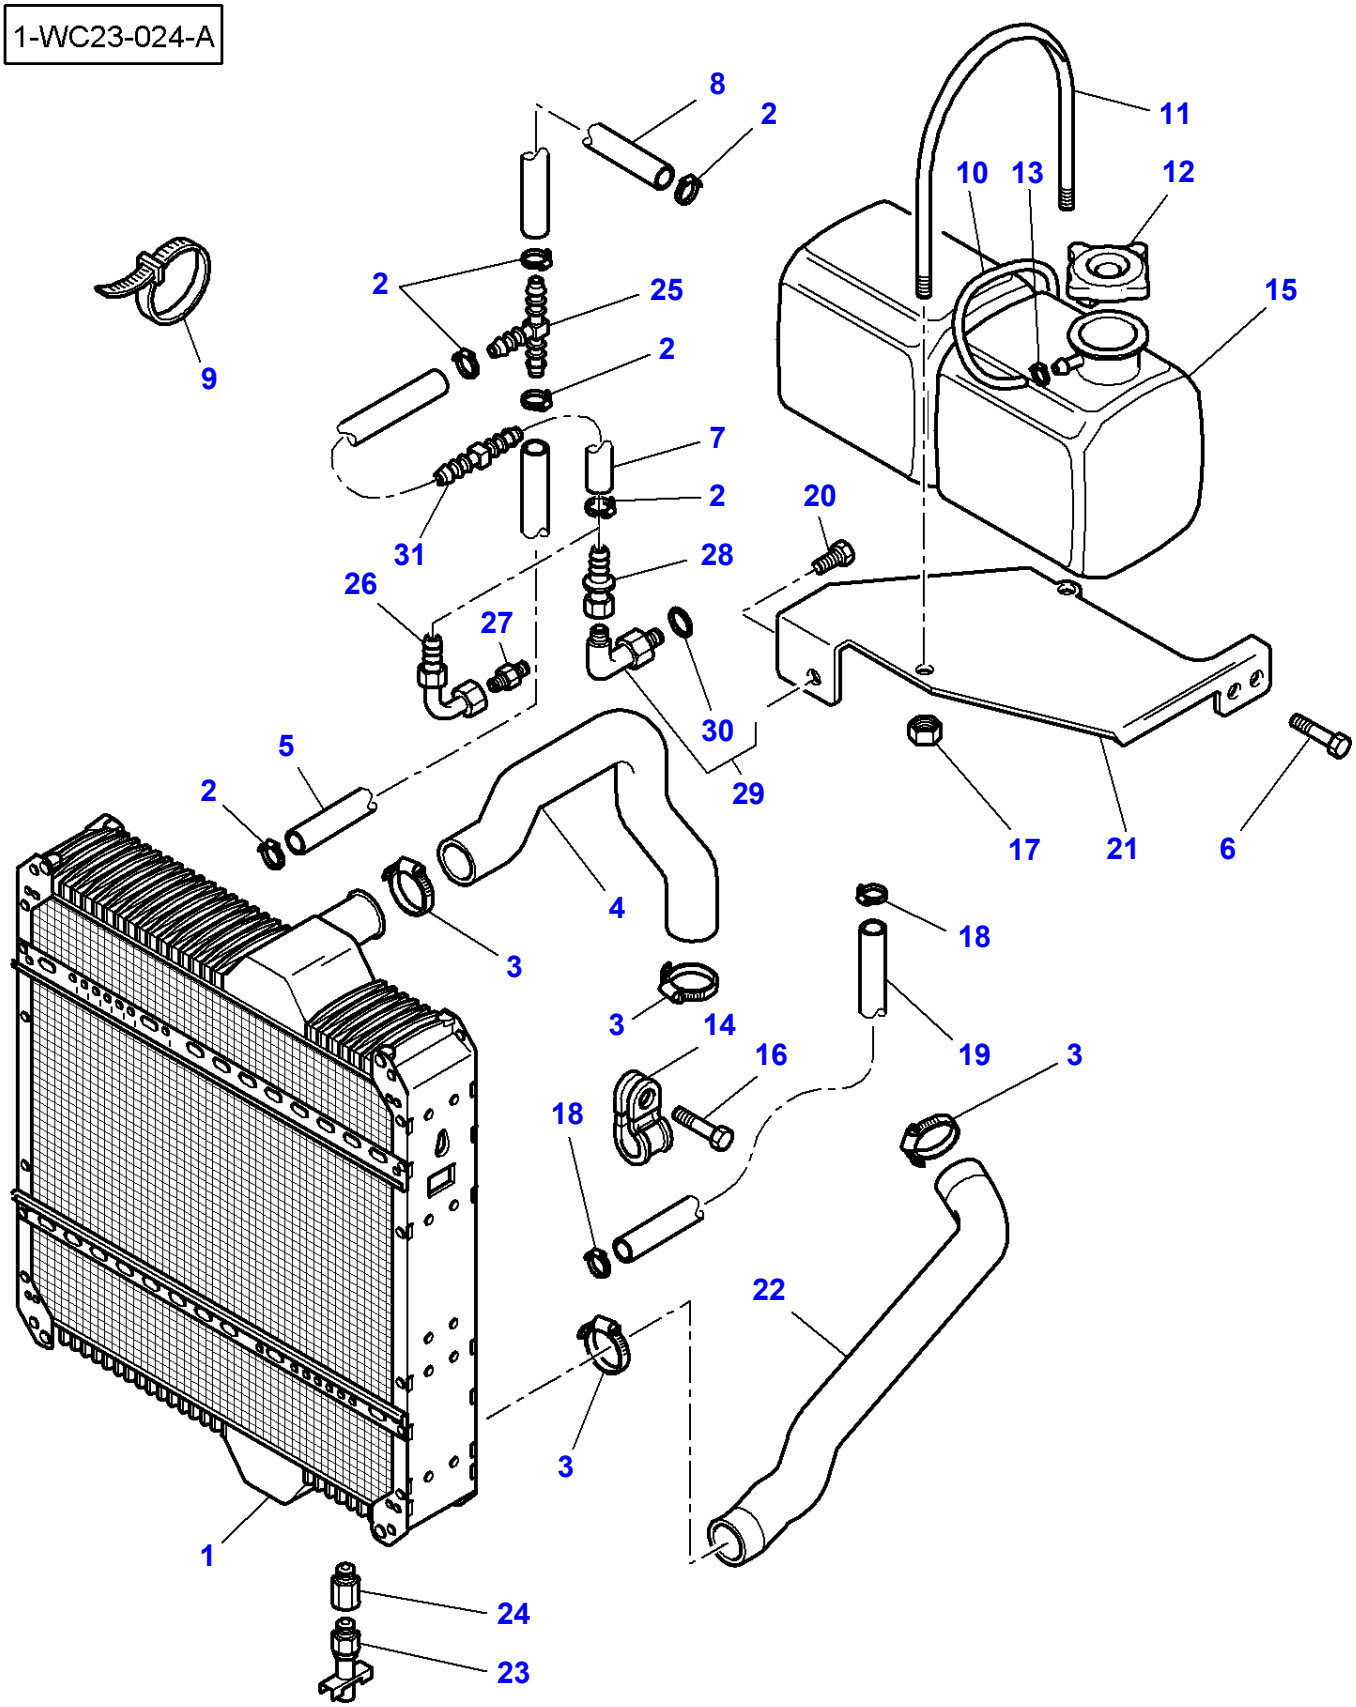
1-WC23-024-A
8
2
11
10
13
12
2
25
15
9
2
7
2
20
31
28
26
27
30
5
2
29
17
21
6
4
18
3
3
14
19
16
3
18
22
3
1
24
23

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Cooling System - Engine Page 010-0175

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3788381M1 | 1 | Water Cooler | [A] |
| 2 | 3000483X1 | 6 | Hose Clip | Diameter 12-22 |
| 3 | 338618X1 | 4 | Hose Clip | Diameter 50-70 |
| 4 | 4278281M1 | 1 | Hose | |
| 5 | 4278566M1 | 1 | Hose | Length 900 MM |
| 6 | 339124X1 | 2 | Hex. Sock. Screw | M8 X 16 |
| 7 | 3783573M1 | 1 | Hydr. Hose | [B]<br>Length 650 MM |
| 8 | **3777798M1** | 1 | Hose | Length 750 MM |
| 9 | 3619622M1 | 2 | Cable Tie | |
| 10 | 3583427M1 | 1 | Tube | |
| 11 | 4275245M1 | 1 | Bridle | M8 |
| 12 | 3787612M1 | 1 | Plug | |
| 13 | 338612X1 | 1 | Hose Clip | Diameter 10-16 |
| 14 | 3581424M1 | 3 | Clip | Diameter 25 MM |
| 15 | 4275025M2 | 1 | Tank | [A]<br>Up to Serial or Engine Number N345026 |
| | 4280681M1 | 1 | Tank | [A]<br>From Serial or Engine Number N345027 |
| 16 | 339123X1 | 1 | Hex. Sock. Screw | M8 X 20 |
| 17 | 339169X1 | 2 | Nut | M8 |
| 18 | 338614X1 | 2 | Hose Clip | Diameter 20-32 |
| 19 | 3786408M1 | 1 | Hose | Length 1700 MM |
| 20 | 3009491X1 | 1 | Hex. Sock. Screw | M10 X 20 |
| 21 | 4274910M3 | 1 | Support | |
| 22 | 5015117M1 | 1 | Hose | |
| 23 | 70229210 | 1 | Cock | |
| 24 | 5016190M1 | 1 | Adaptor | |
| 25 | 3779038M1 | 1 | Union | |
| 26 | 5017300M1 | 1 | Union | Up to Serial or Engine Number MAY-2005 |
| 27 | 5017417M91 | 1 | Union | Up to Serial or Engine Number MAY-2005 |
| 28 | 4279936M1 | 1 | Union | From Serial or Engine Number MAY-2005 |
| 29 | 3019302X91 | 1 | Union | From Serial or Engine Number MAY-2005 |
| 30 | 3019393X1 | 1 | O Ring | (29) |
| 31 | 3010671X1 | 1 | Union | Up to Serial or Engine Number MAY-2005 |

**FOOTNOTE [A]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART
**FOOTNOTE [B]** CUT TO REQUIRED LENGTH

1-WC65-002-A

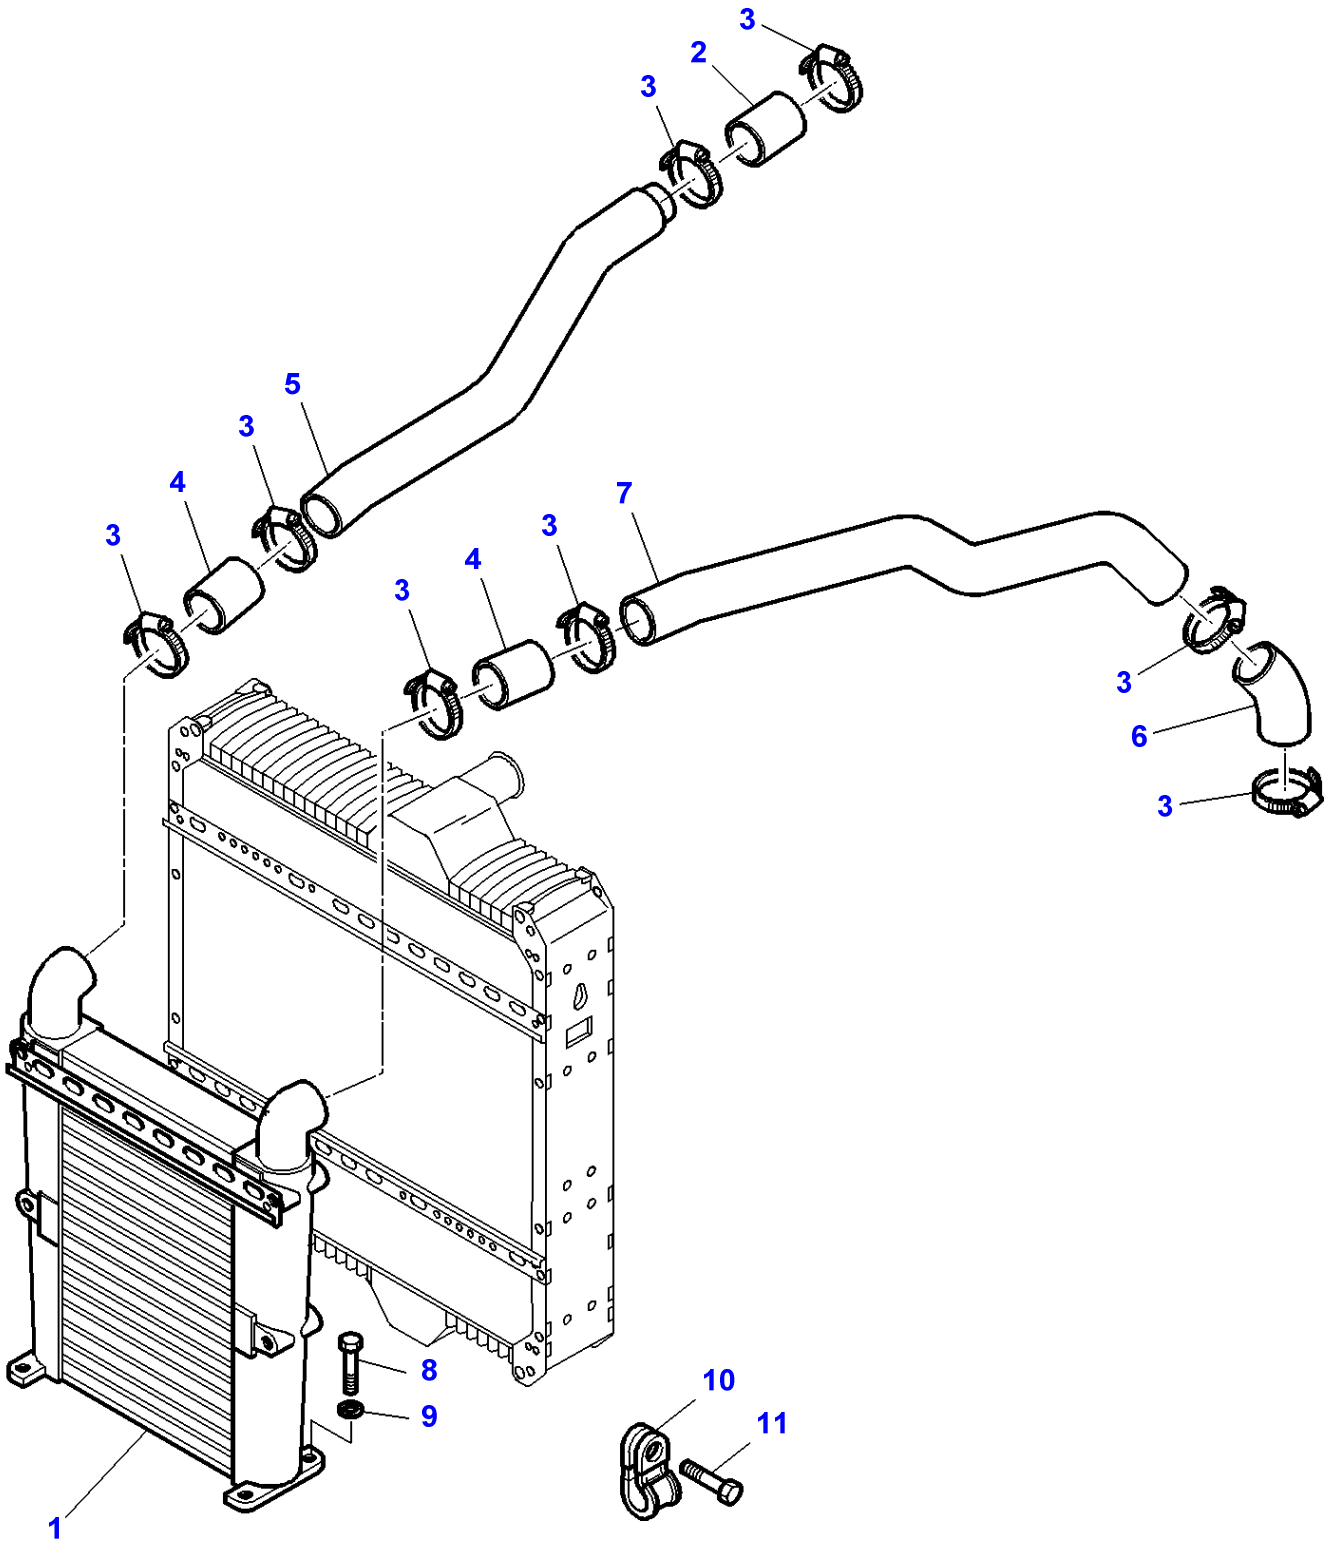


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276485M1 | 1 | Cooler | |
| 2 | 3788617M1 | 1 | Hose | Left Hand |
| 3 | 3010156X1 | 8 | Clamp | Diameter 70-90 |
| 4 | 3784918M1 | 2 | Hose | Length 100MM |
| 5 | 4276118M1 | 1 | Tube | |
| 6 | 3780247M1 | 1 | Hose | |
| 7 | 4276119M2 | 1 | Tube | |
| 8 | 339010X1 | 4 | Hex. Sock. Screw | M8X40 |
| 9 | 390972X1 | 4 | Washer | |
| 10 | 3581507M1 | 2 | Clip | Diameter 18MM |
| 11 | 339761X1 | 2 | Hex. Sock. Screw | M8 X 25 |

1-WC20-014-B

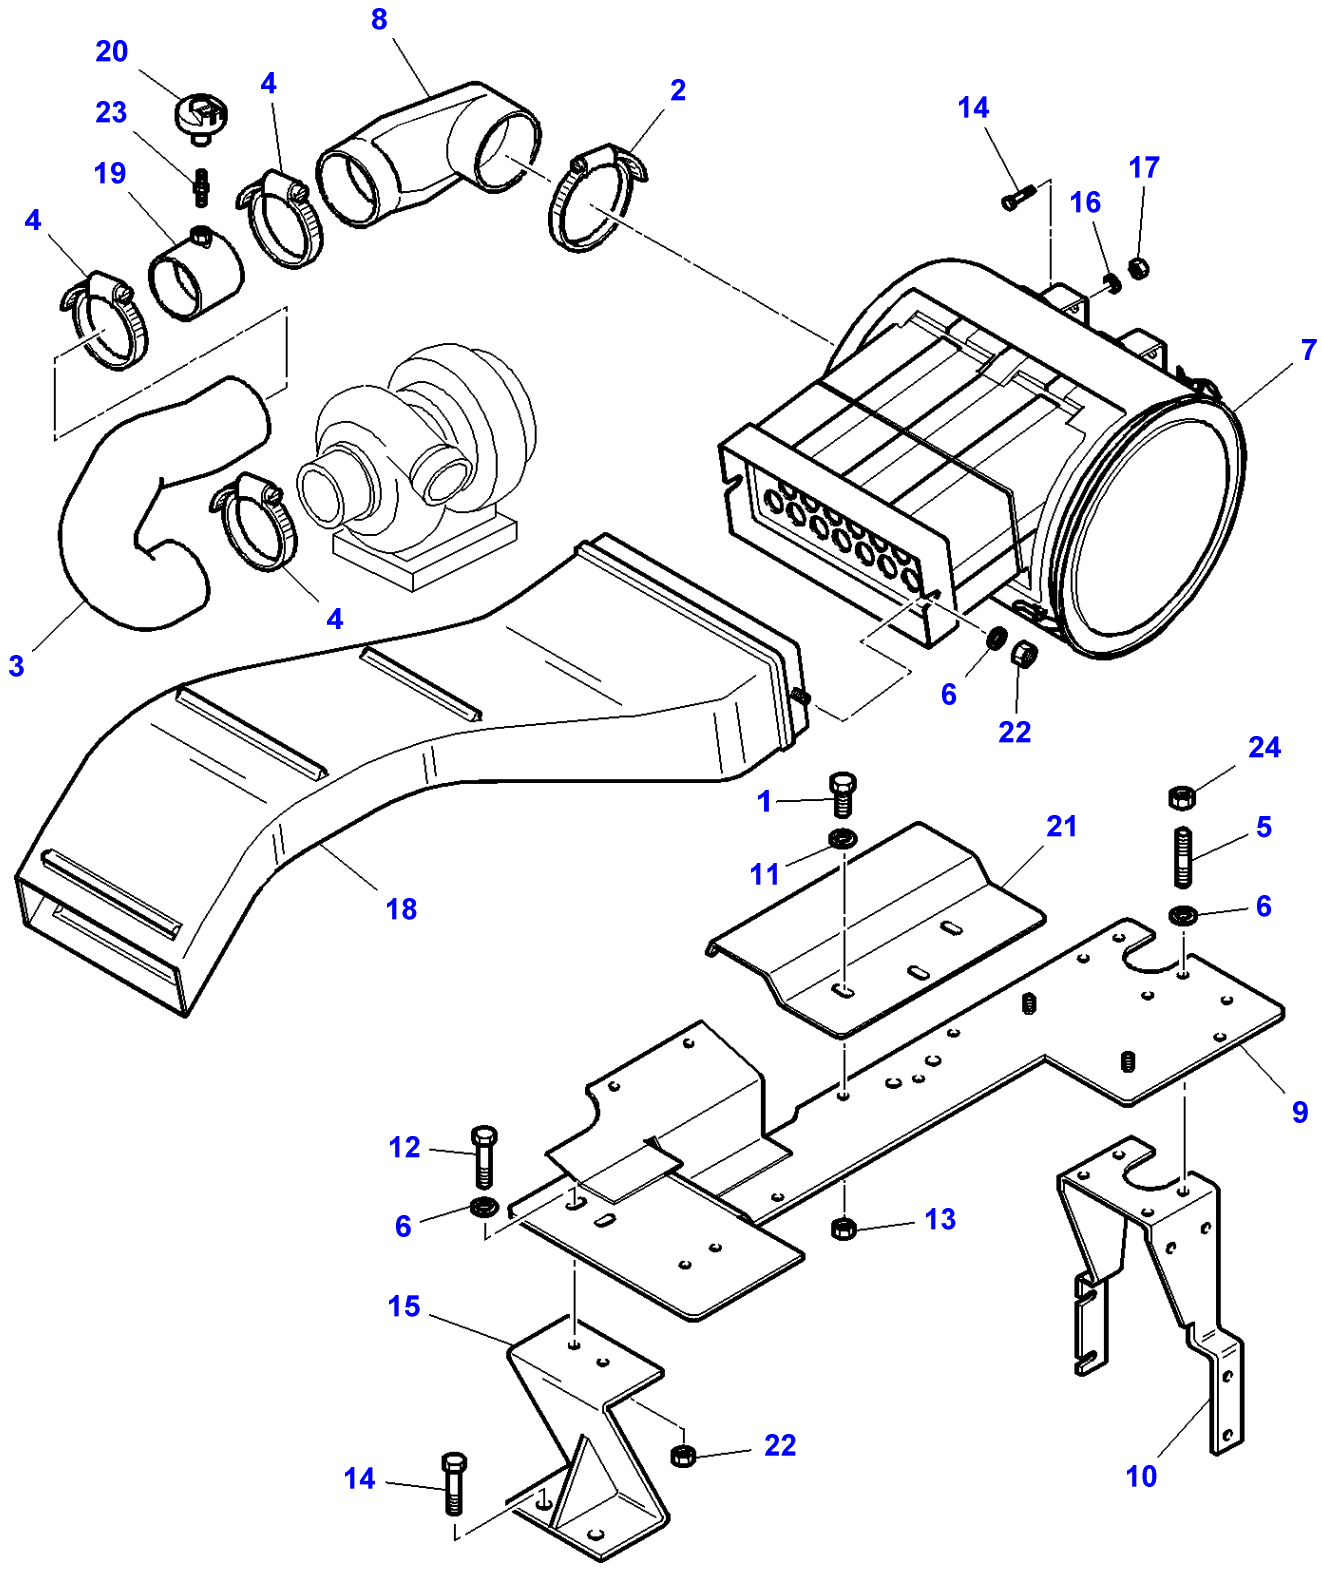


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Air Filter - Dry - Dual Element Page 010-0185

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 339123X1 | 3 | Hex. Sock. Screw | M8 X 20 |
| 2 | 3010162X1 | 1 | Clamp | Diameter 130-155 |
| 3 | 4273355M1 | 1 | Hose | |
| 4 | 3010160X1 | 3 | Clamp | Diameter 110-135 |
| 5 | 391005X1 | 4 | Stud | M10 X 25 |
| 6 | 390734X1 | 8 | Washer | |
| 7 | 4278222M91 | 1 | Air Filter | See Page - Reference Number 010-0190/1 |
| 8 | 3788163M1 | 1 | Tube | |
| 9 | 4277707M92 | 1 | Support | |
| 10 | 5016166M91 | 1 | Support | |
| 11 | 390972X1 | 3 | Washer | |
| 12 | 3009492X1 | 2 | Hex. Sock. Screw | M10 X 25 |
| 13 | 339169X1 | 3 | Nut | M8 |
| 14 | 1440716X1 | 6 | Hex. Sock. Screw | M12 X 30 |
| 15 | 5016168M92 | 1 | Support | |
| 16 | 390735X1 | 4 | Washer | |
| 17 | 3009695X1 | 4 | Nut | M12 |
| 18 | 4278207M2 | 1 | Hose | |
| 19 | 4273730M1 | 1 | Tube | |
| 20 | **3808462M1** | 1 | Pressure Switch | |
| 21 | 3789482M2 | 1 | Cowl | |
| 22 | 339402X1 | 4 | Nut | M10 |
| 23 | 1028097M1 | 1 | Filter | |
| 24 | 339402X1 | 4 | Nut | M10 |


1-WC20-015-A

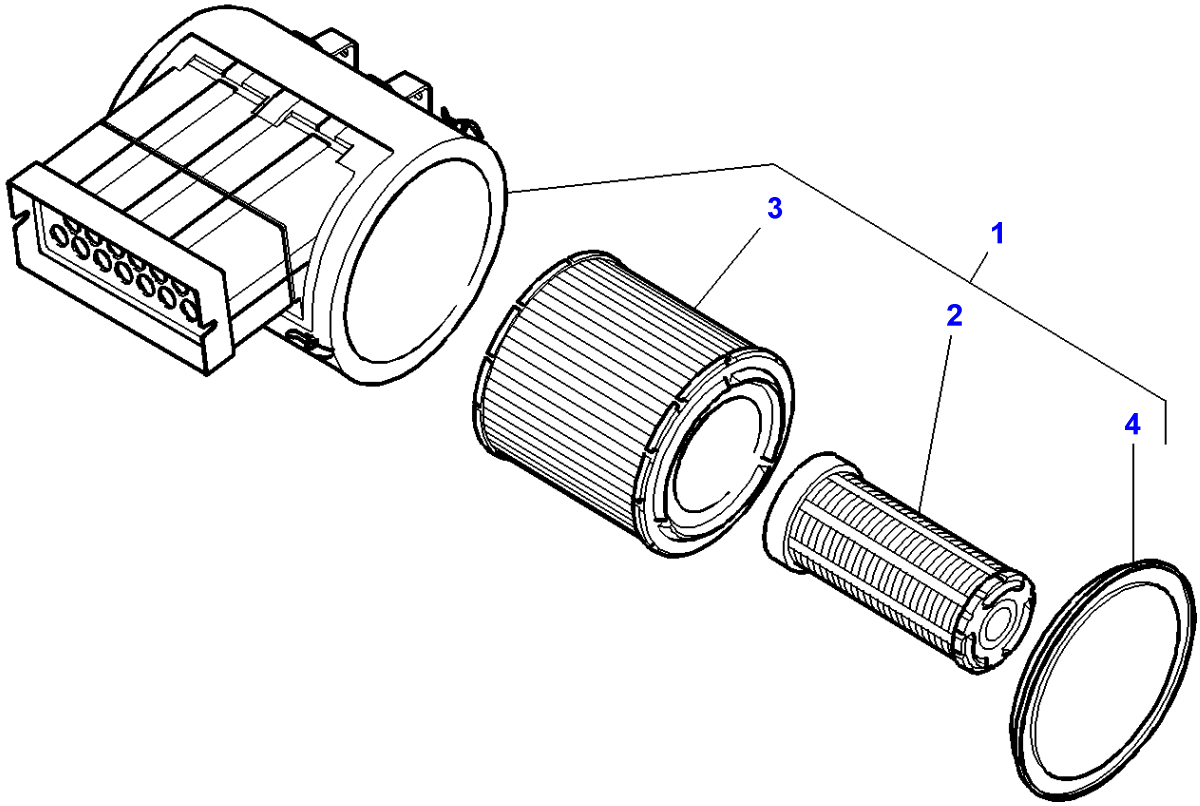

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4278222M91 | 1 | Air Filter | |
| 2 | **4270018M1** | 1 | Air Fitr.Element | (1) |
| 3 | **4278631M1** | 1 | Air Fitr.Element | (1) |
| 4 | 4278565M1 | 1 | Cover | (1) |

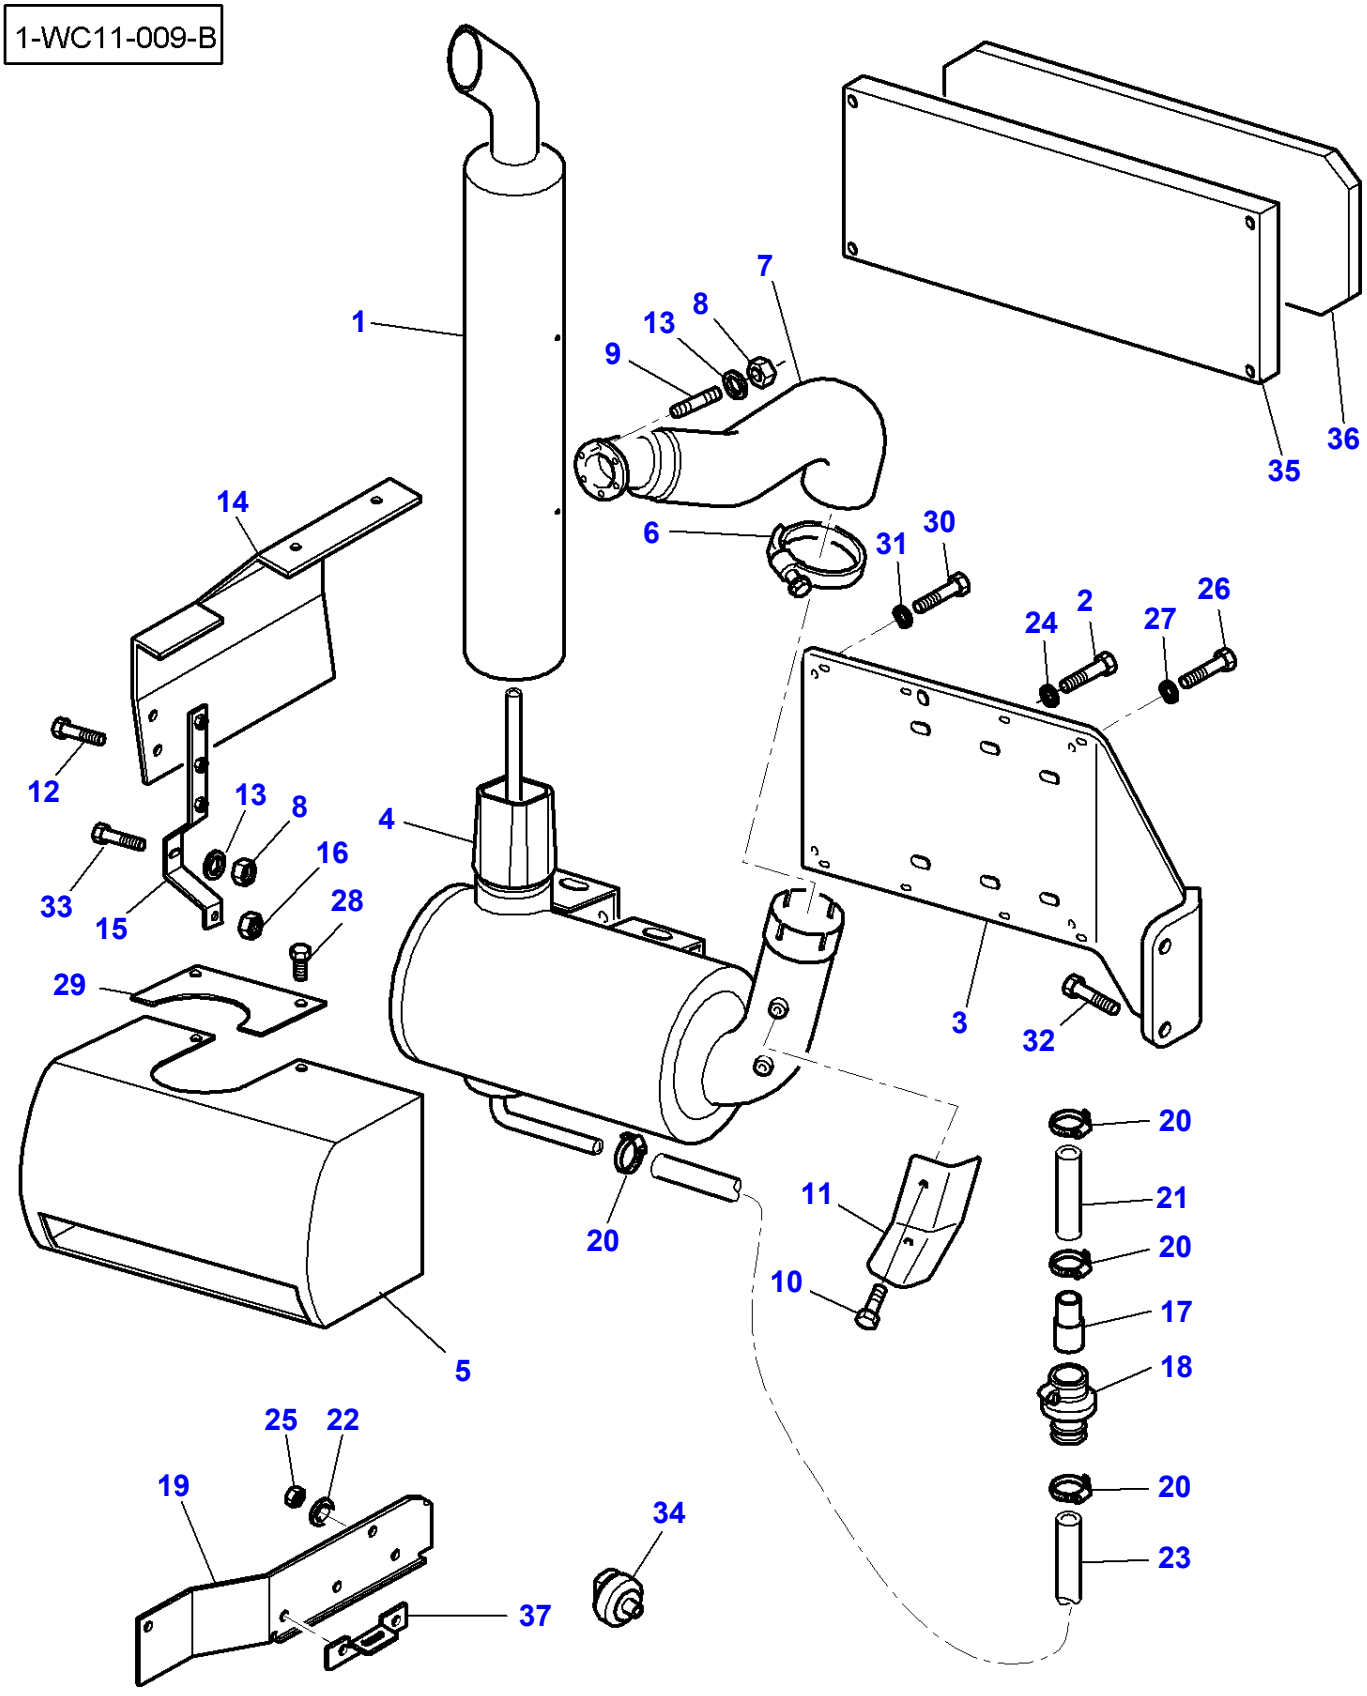

1-WC11-009-B
1
7
8
13
9
6
31
30
2
24
27
26
35
36
14
12
13
8
16
33
15
28
29
4
3
32
20
11
10
21
17
18
5
25
22
19
34
37
23

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272777M2 | 1 | Tube | AGCO 0037 |
| 2 | 3009509X1 | 6 | Hex. Sock. Screw | M12 X 45 |
| 3 | 4275001M2 | 1 | Support | |
| 4 | 4278589M1 | 1 | Silencer | AGCO 0058 |
| 5 | 4278886M2 | 1 | Cowl | |
| 6 | 3782608M1 | 1 | Clamp | Diameter 119 MM |
| 7 | 3786844M2 | 1 | Adaptor | |
| 8 | 3010572X1 | 7 | Nut | M8 |
| 9 | 391001X1 | 6 | Stud | M8 X 25 |
| 10 | 339228X1 | 3 | Hex. Sock. Screw | M8 X 12 |
| 11 | 3789287M1 | 1 | Cowl | |
| 12 | 391074X1 | 2 | Hex. Sock. Screw | M6 X 12 |
| 13 | 390972X1 | 7 | Washer | Diameter 8-17 X 1,7 |
| 14 | 4277489M2 | 1 | Cowl | |
| 15 | 4277490M1 | 1 | Reinforcement | |
| 16 | 339402X1 | 1 | Nut | M10 |
| 17 | 3782356M1 | 1 | Adaptor | Diameter 32-40 MM<br>Length 60 MM |
| 18 | 3780483M1 | 1 | Non Return Valve | |
| 19 | 4270257M3 | 1 | Cowl | Up to Serial or Engine Number N356012 |
| | 4280575M2 | 1 | Cowl | From Serial or Engine Number N356013 |
| 20 | 338615X1 | 4 | Clamp | Diameter 25-40 MM |
| 21 | 3386626M1 | 1 | Suction Hose | [A]<br>Length 740 MM |
| 22 | 390735X1 | 3 | Washer | Diameter 12-24 X 2,5 |
| 23 | 3038134M1 | 1 | Tube | Length 1270 MM |
| 24 | 390735X1 | 6 | Washer | Diameter 12-24 X 2,5 |
| 25 | 3009695X1 | 3 | Nut | M12 |
| 26 | 339009X1 | 8 | Hex. Sock. Screw | M8 X 35 |
| 27 | 390972X1 | 8 | Washer | Diameter 8-17 X 1,7 |
| 28 | 339124X1 | 2 | Hex. Sock. Screw | M8 X 16 |
| 29 | 4270726M1 | 1 | Plate | |
| 30 | 339010X1 | 4 | Hex. Sock. Screw | M8 X 40 |
| 31 | 390972X1 | 8 | Washer | Diameter 8-17 X 1,7 |
| 32 | 339881X1 | 2 | Hex. Sock. Screw | M16 X 60 |
| 33 | 339228X1 | 2 | Hex. Sock. Screw | M8 X 12 |
| 34 | **3808462M1** | 1 | Pressure Switch | |
| 35 | 4278885M1 | 1 | Cowl | |
| 36 | 4278897M1 | 1 | Sound Reduction | |
| 37 | 4279547M1 | 1 | Support | From Serial or Engine Number N356013 |

**FOOTNOTE [A]** CUT TO REQUIRED LENGTH

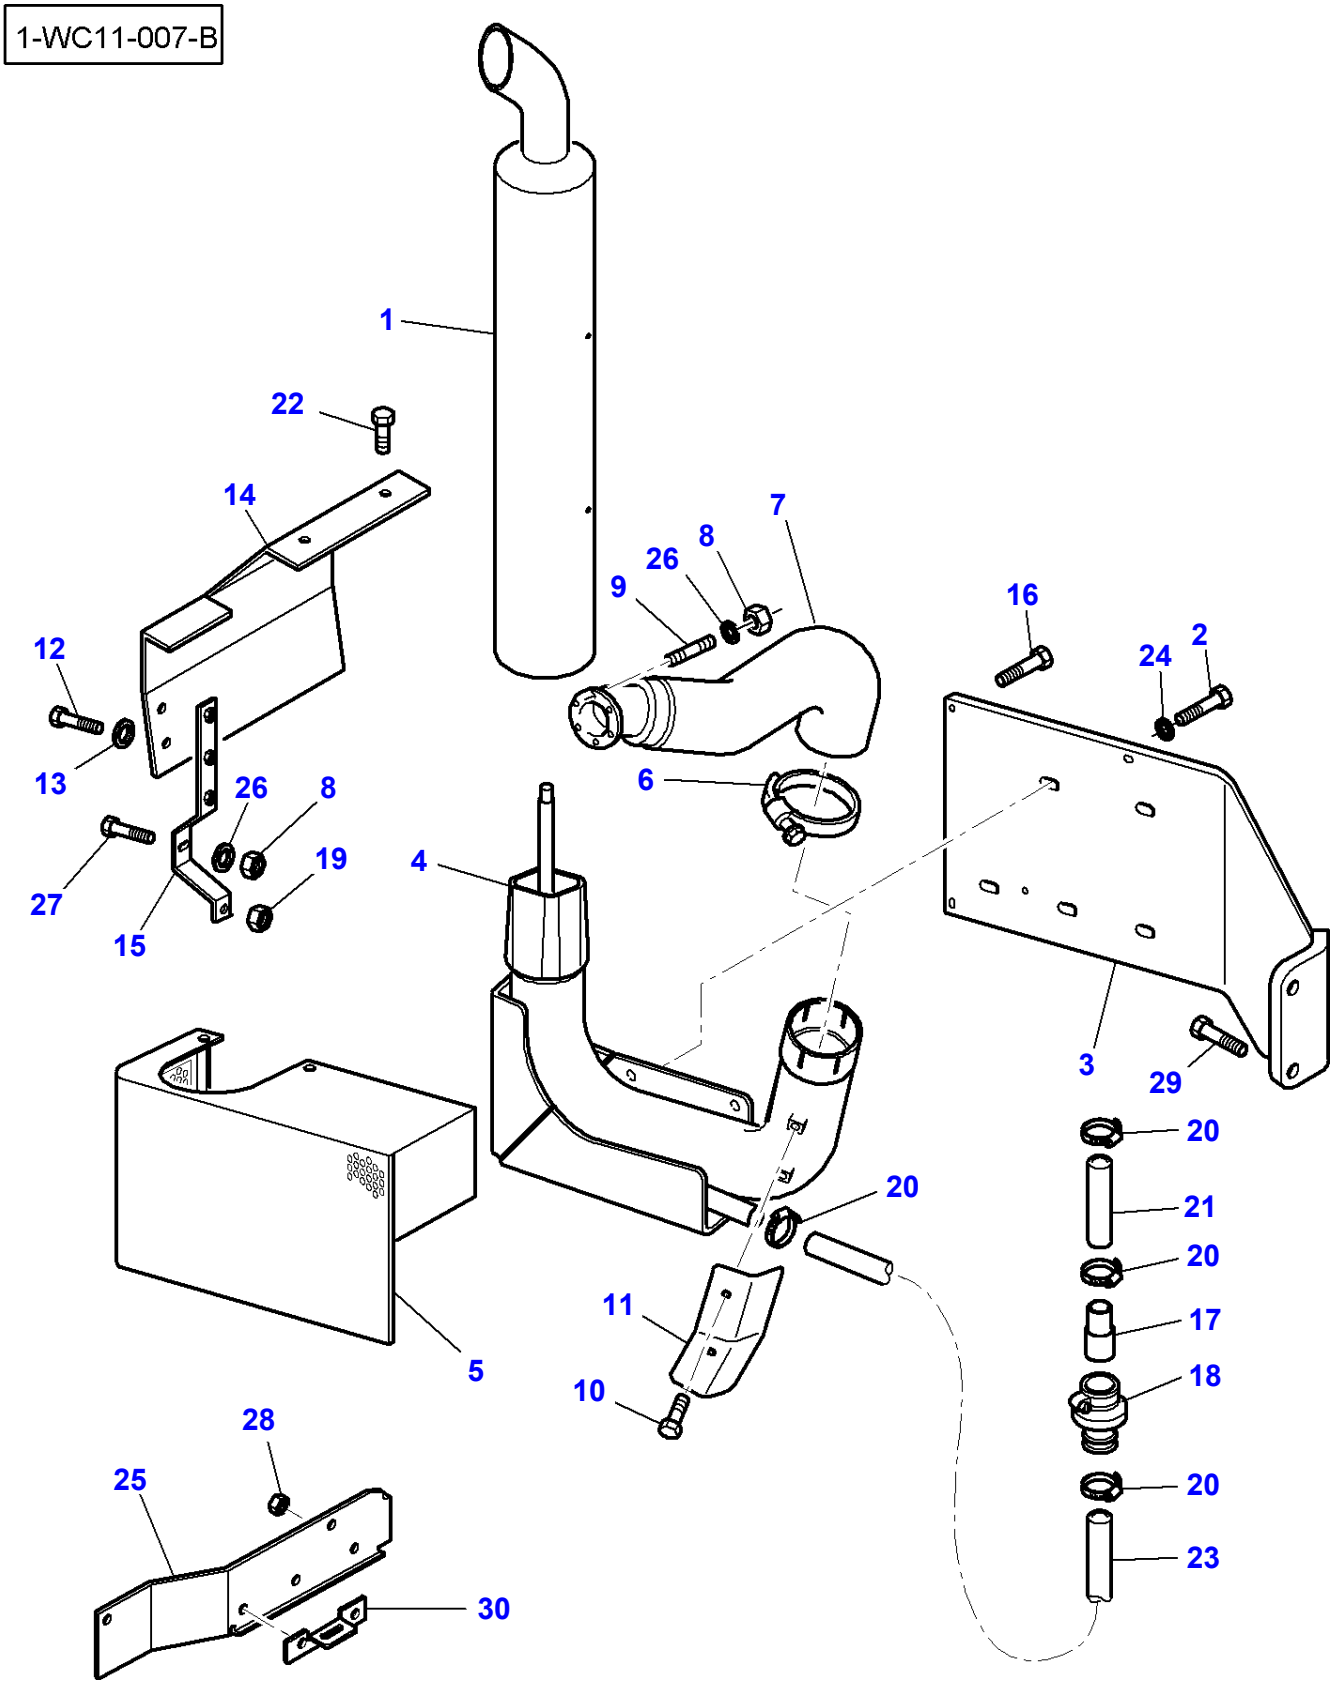
1-WC11-007-B
1
22
14
12
13
26
8
27
19
15
4
5
7
8
26
9
6
16
2
24
3
29
20
21
20
17
18
20
23
11
10
20
28
25
30


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272777M2 | 1 | Tube | AGCO 0037 |
| 2 | 3009510X1 | 5 | Hex. Sock. Screw | M12 X 50 |
| 3 | 4277149M4 | 1 | Support | |
| 4 | 4271731M1 | 1 | Tube | |
| 5 | 4273141M2 | 1 | Cowl | |
| 6 | 3782608M1 | 1 | Clamp | Diameter 119 MM |
| 7 | 3786844M2 | 1 | Adaptor | |
| 8 | 3010572X1 | 7 | Nut | M8 |
| 9 | 391001X1 | 6 | Stud | M8 X 25 |
| 10 | 339228X1 | 2 | Hex. Sock. Screw | M8 X 12 |
| 11 | 3789287M1 | 1 | Cowl | |
| 12 | 339560X1 | 2 | Hex. Sock. Screw | M6 X 16 |
| 13 | 390971X1 | 2 | Washer | Diameter 6-12 X 1,5 |
| 14 | 4277489M2 | 1 | Cowl | |
| 15 | 4277490M1 | 1 | Reinforcement | |
| 16 | 339010X1 | 4 | Hex. Sock. Screw | M8 X 40 |
| 17 | 3782356M1 | 1 | Adaptor | Diameter 32-40 MM<br>Length 60 MM |
| 18 | 3780483M1 | 1 | Non Return Valve | |
| 19 | 339402X1 | 1 | Nut | M10 |
| 20 | 338615X1 | 4 | Clamp | Diameter 25-40 MM |
| 21 | 3386626M1 | 1 | Suction Hose | [A]<br>Length 740 MM |
| 22 | 339124X1 | 2 | Hex. Sock. Screw | M8 X 16 |
| 23 | 3038134M1 | 1 | Tube | Length 1270 MM |
| 24 | 390735X1 | 5 | Washer | Diameter 12-24 X 2,5 |
| 25 | 4270257M3 | 1 | Cowl | Up to Serial or Engine Number N356012 |
| | 4280575M2 | 1 | Cowl | From Serial or Engine Number N356013 |
| 26 | 390972X1 | 7 | Washer | Diameter 8-17 X 1,7 |
| 27 | 339124X1 | 1 | Hex. Sock. Screw | M8 X 16 |
| 28 | 3009695X1 | 3 | Nut | M12 |
| 29 | 339881X1 | 2 | Hex. Sock. Screw | M16 X 60 |
| 30 | 4279547M1 | 1 | Support | From Serial or Engine Number N356013 |

**FOOTNOTE [A]** CUT TO REQUIRED LENGTH


1-WC14-002-C

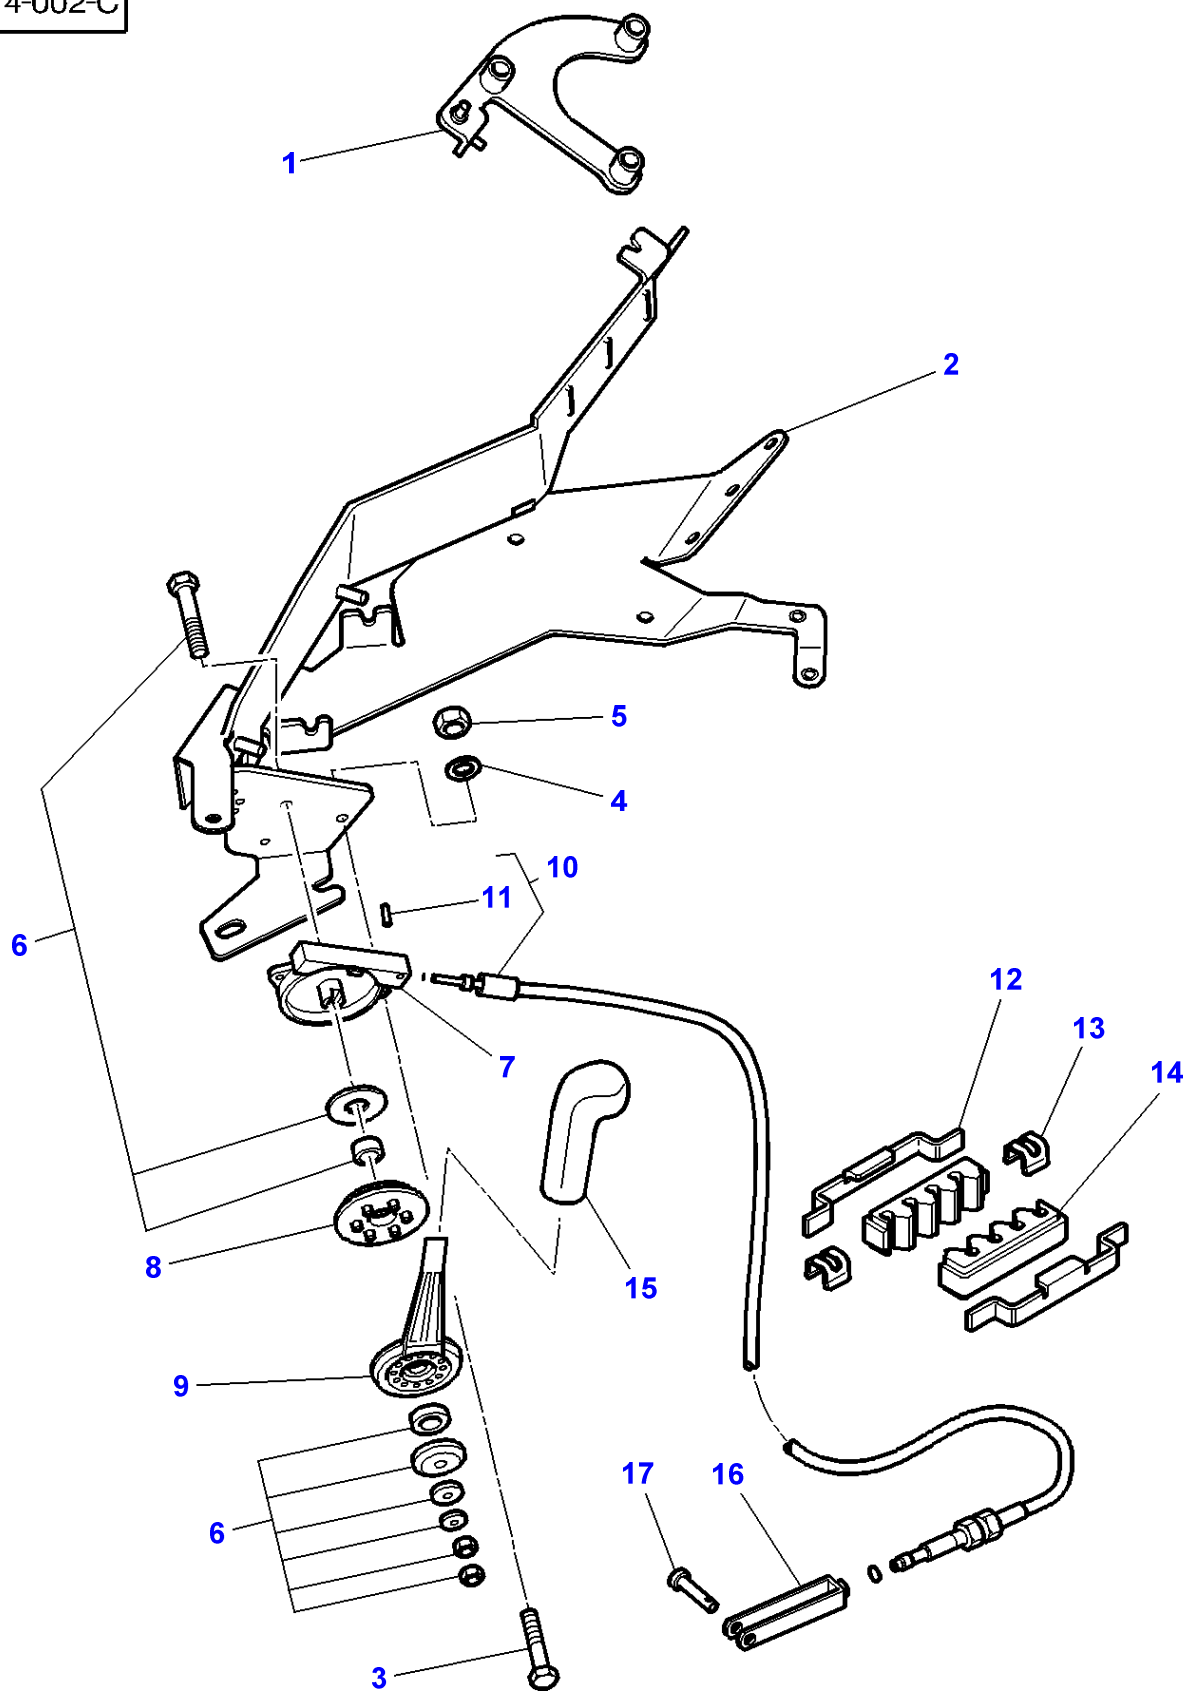

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4270719M3 | 1 | Support | |
| 2 | 3787580M93 | 1 | Support | |
| 3 | 339563X1 | 3 | Hex. Sock. Screw | M5 X 20 |
| 4 | 3019560X1 | 3 | Washer | Diameter 5-15 X 1,5 |
| 5 | 1441494X1 | 3 | Nut Metric | M5 |
| 6 | 3785336M3 | 1 | Parts Pack | |
| 7 | 3786152M2 | 1 | Case Assy | |
| 8 | 3789513M1 | 1 | Flange | |
| 9 | 3785335M3 | 1 | Lever | |
| 10 | 4271798M3 | 1 | Cable | |
| 11 | 339303X1 | 1 | Dowel | (10) |
| 12 | 4270509M2 | 2 | Support | |
| 13 | 4270510M1 | 2 | Clip | |
| 14 | 4270508M1 | 2 | Bridle | |
| 15 | 3785000M1 | 1 | Handle | |
| 16 | 3616399M1 | 1 | Stirrup | |
| 17 | 832297M1 | 1 | Clevis Pin | |

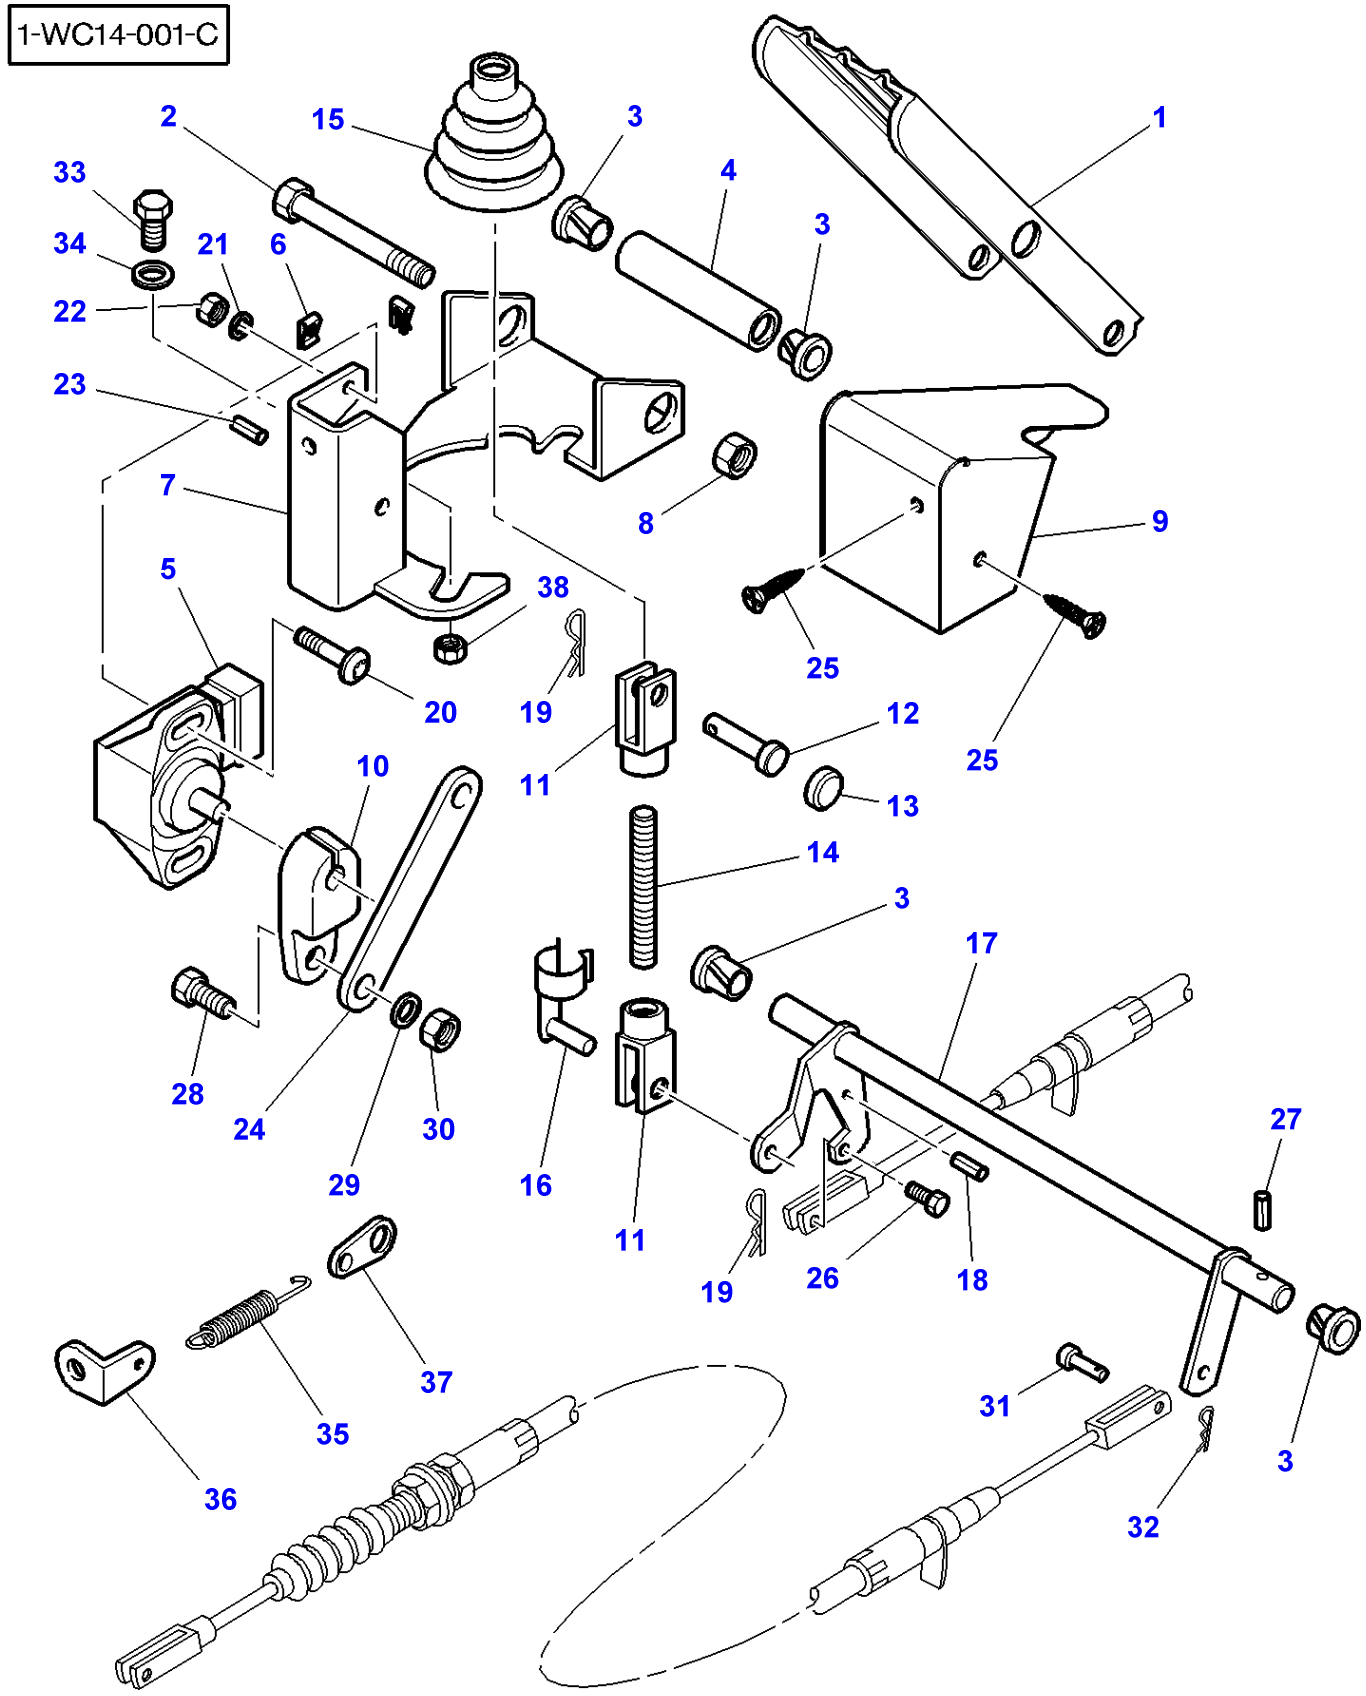
1-WC14-001-C
2
15
3
1
33
4
34
21
6
3
22
23
7
8
9
5
38
25
20
19
12
25
10
11
13
14
3
17
28
24
30
29
16
11
27
19
26
18
37
35
31
36
3
32


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Throttle Controls Page 010-0210

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3712851M91 | 1 | Pedal | |
| 2 | 391286X1 | 1 | Hex. Sock. Screw | M8 X 85 |
| 3 | 3385913M2 | 4 | Bush | |
| 4 | 3712867M1 | 1 | Spacer | Diameter 9-12 X 74 |
| 5 | **3784361M1** | 1 | Transducer | |
| 6 | 3715142M1 | 2 | Nut | M5 |
| 7 | 4270814M1 | 1 | Support | |
| 8 | 394367X1 | 1 | Locknut | M8 |
| 9 | 3784343M2 | 1 | Cowl | |
| 10 | 4271320M1 | 1 | Rod Link | |
| 11 | 392463X1 | 2 | Yoke | Diameter 6 X 36 |
| 12 | 392235X1 | 1 | Clevis Pin | Diameter 6 X 20 |
| 13 | 1699748M1 | 1 | Plug | Diameter 9,5 MM |
| 14 | 3712866M2 | 1 | Stem | M6 X 70 |
| 15 | 3712886M1 | 1 | Bellows | |
| 16 | 3713042M1 | 1 | Clevis Pin | |
| 17 | 4278950M91 | 1 | Rod | |
| 18 | 339548X1 | 1 | Pin | Diameter 4 X 20 |
| 19 | 357145X1 | 2 | Pin | |
| 20 | 3010804X1 | 2 | Screw | M4 X 16 |
| 21 | 339761X1 | 2 | Hex. Sock. Screw | M8 X 25 |
| 22 | 3019139X1 | 1 | Nut | M4 |
| 23 | 1441728X1 | 1 | Pin | Diameter 4 X 16 |
| 24 | 3784341M2 | 1 | Rod | |
| 25 | 3010578X1 | 2 | Screw | M5 X 10 |
| 26 | 391883X1 | 1 | Hex. Sock. Screw | M5 X 25 |
| 27 | 1442994X1 | 2 | Pin | Diameter 3 X 25 |
| 28 | 339560X1 | 1 | Hex. Sock. Screw | M6 X 16 |
| 29 | 390971X1 | 1 | Washer | Diameter 6-12 X 1,5 |
| 30 | 1441500X1 | 2 | Locknut | M6 |
| 31 | 3007850X1 | 2 | Clevis Pin | Diameter 6 X 12 |
| 32 | 357145X1 | 1 | Pin | |
| 33 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 34 | 390972X1 | 2 | Washer | Diameter 8-17 X 1,7 |
| 35 | 3618683M1 | 1 | Spring | Length 113 MM |
| 36 | 4274354M1 | 1 | Strap | |
| 37 | 3785031M1 | 1 | Strap | |
| 38 | 394367X1 | 2 | Locknut | M8 |

1-WD02-013-A

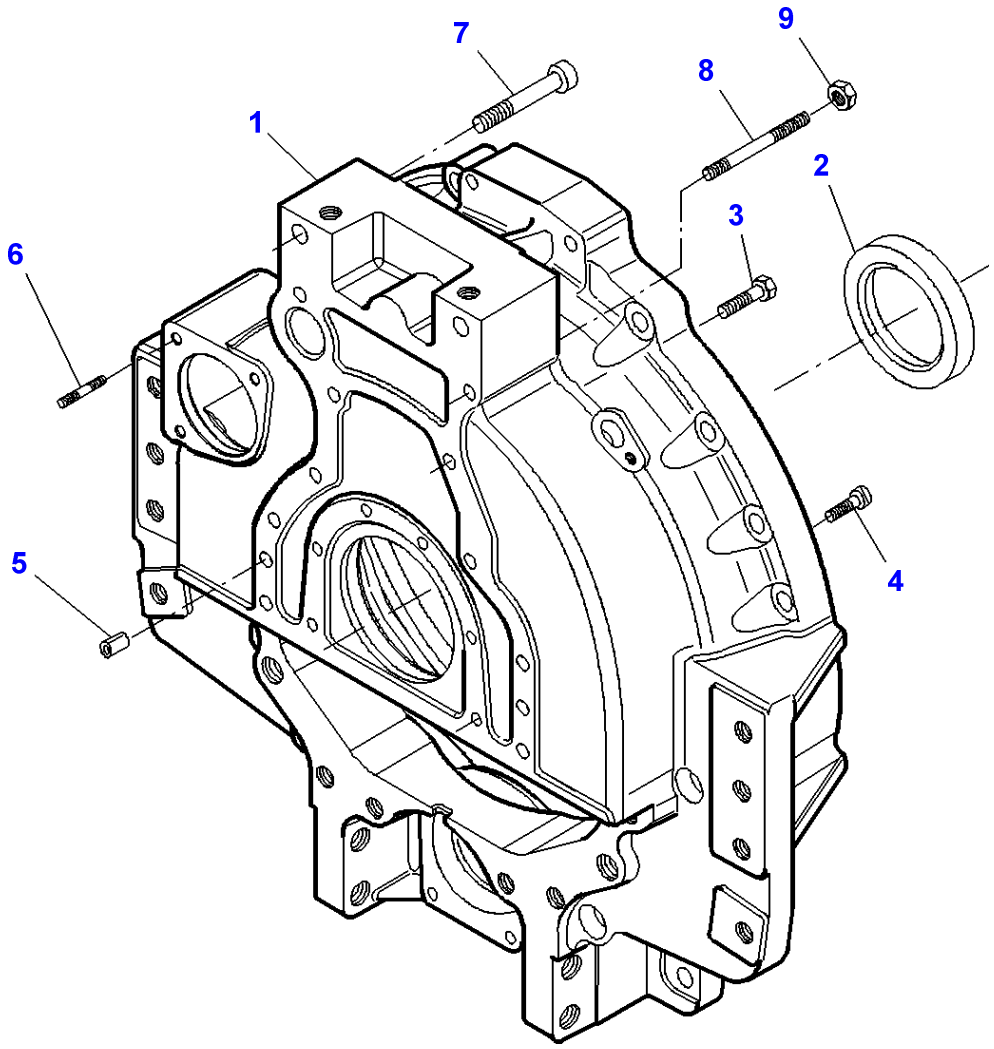


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | V836866842 | 1 | Housing | |
| 2 | V836840884 | 1 | Oil Seal | |
| | V836020054 | 1 | Spacer | Thickness 2 MM |
| 3 | V528702230 | 8 | Screw | M12 X 40 |
| 4 | V581705030 | 6 | Screw | M10 X 30 |
| 5 | V598359850 | 2 | Pin | |
| 6 | V546801815 | 3 | Stud | M10 X 30 |
| 7 | V581706370 | 2 | Screw | M16 X 100 |
| 8 | V546802330 | 2 | Stud | M12 X 90 |
| 9 | V504601200 | 2 | Nut | M12 |

1-WD02-014-A

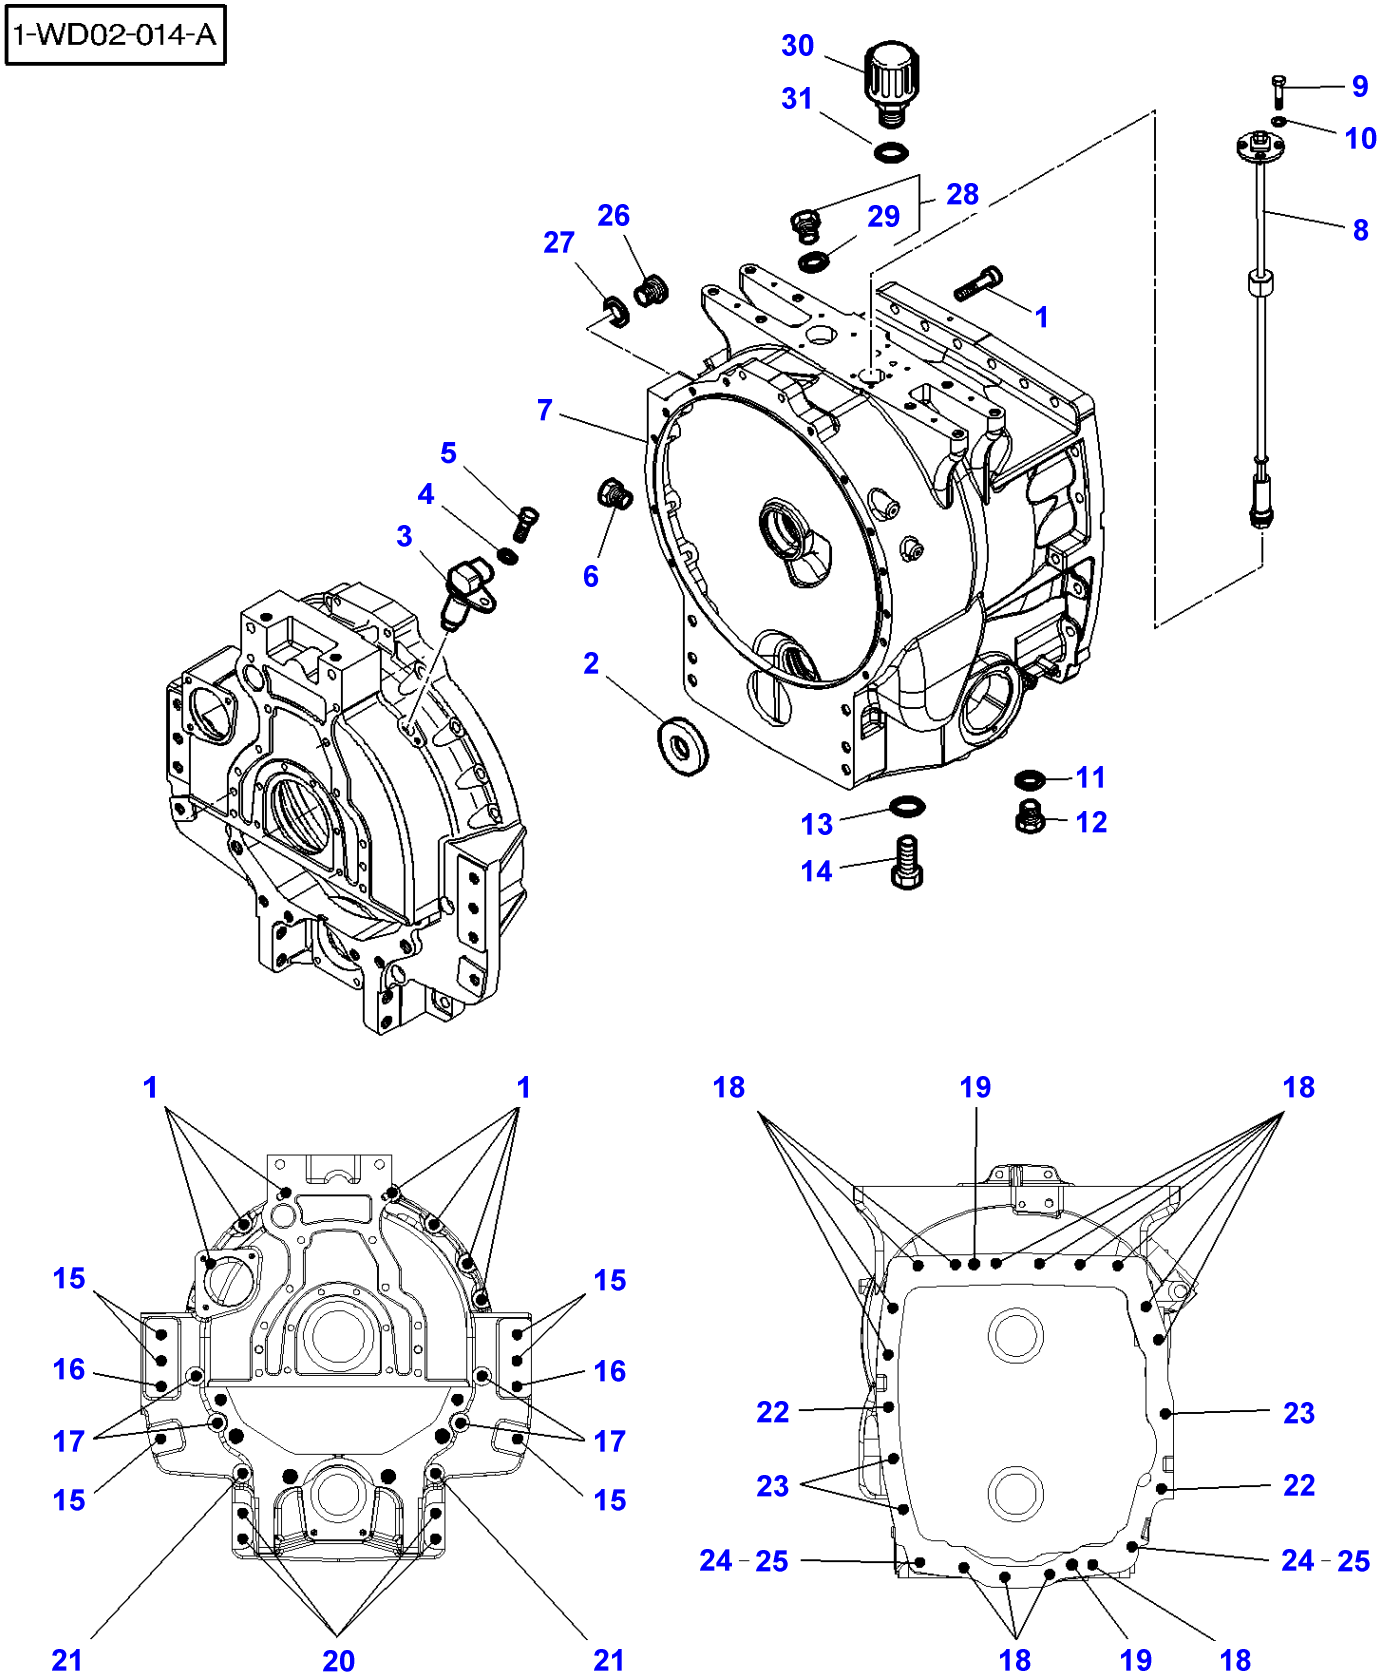
30
31
9
10
28
29
26
27
8
1
7
5
4
3
6
2
11
12
13
14
1
1
15
15
16
16
17
17
15
15
21
20
21
18
19
18
22
23
23
22
24 - 25
24 - 25
18
19
18


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Front Spacer 

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3011279X1 | 9 | Screw | M12 X 60 |
| 2 | 816.920.011.031 | 1 | Disc | |
| 3 | **G816.970.020.040** | 1 | Hall Sensor | |
| 4 | 339374X1 | 1 | Lock Washer | |
| 5 | 3009285X1 | 1 | Screw | M8 X 16 |
| 6 | 4278268M1 | 1 | Plug | |
| 7 | 903.100.050.031 | 1 | Spacer | |
| 8 | G916.970.020.021 | 1 | Fuel Transmitter | |
| 9 | 339721X1 | 4 | Hex. Sock. Screw | M5 X 16 |
| 10 | 3019560X1 | 4 | Washer | |
| 11 | X540.008.278.000 | 1 | Ring | 26 X 31 |
| 12 | X483.803.200.000 | 1 | Plug | M26 X 1,5 |
| 13 | **X540.009.478.000** | 1 | Ring | 30 X 36 X 2 |
| 14 | 916.101.050.100 | 1 | Screw | M30 X 1,5 |
| 15 | 3010556X1 | 6 | Screw Metric | M20 X 70 |
| 16 | 3714795M1 | 2 | Centraliser | |
| 17 | 3011281X1 | 4 | Screw | M12 X 150 |
| 18 | 3009930X1 | 14 | Bolt | M16 X 70 |
| 19 | X505.578.900.000 | 2 | Dowel | |
| 20 | 3011023X1 | 4 | Screw | M18 X 65 |
| 21 | 3011282X1 | 2 | Screw | M18 X 150 |
| 22 | 3019874X1 | 2 | Screw Metric | M16 X 115 |
| 23 | 3010007X1 | 3 | Screw Metric | M16 X 60 |
| 24 | 3011610X1 | 2 | Stud | M16 X 70,24 |
| 25 | 3019871X1 | 2 | Nut Metric | M16 |
| 26 | X483.803.201.000 | 1 | Screw | M26X1,5 |
| 27 | X540.008.278.000 | 1 | Ring | 26X31 |
| 28 | 3011105X91 | 4 | Plug | M22X1,5 |
| 29 | 3011036X1 | 1 | Seal | (28) |
| 30 | 3716934M1 | 1 | Breather | |
| 31 | 3011495X1 | 1 | Bush | |


1-WA07-016-A

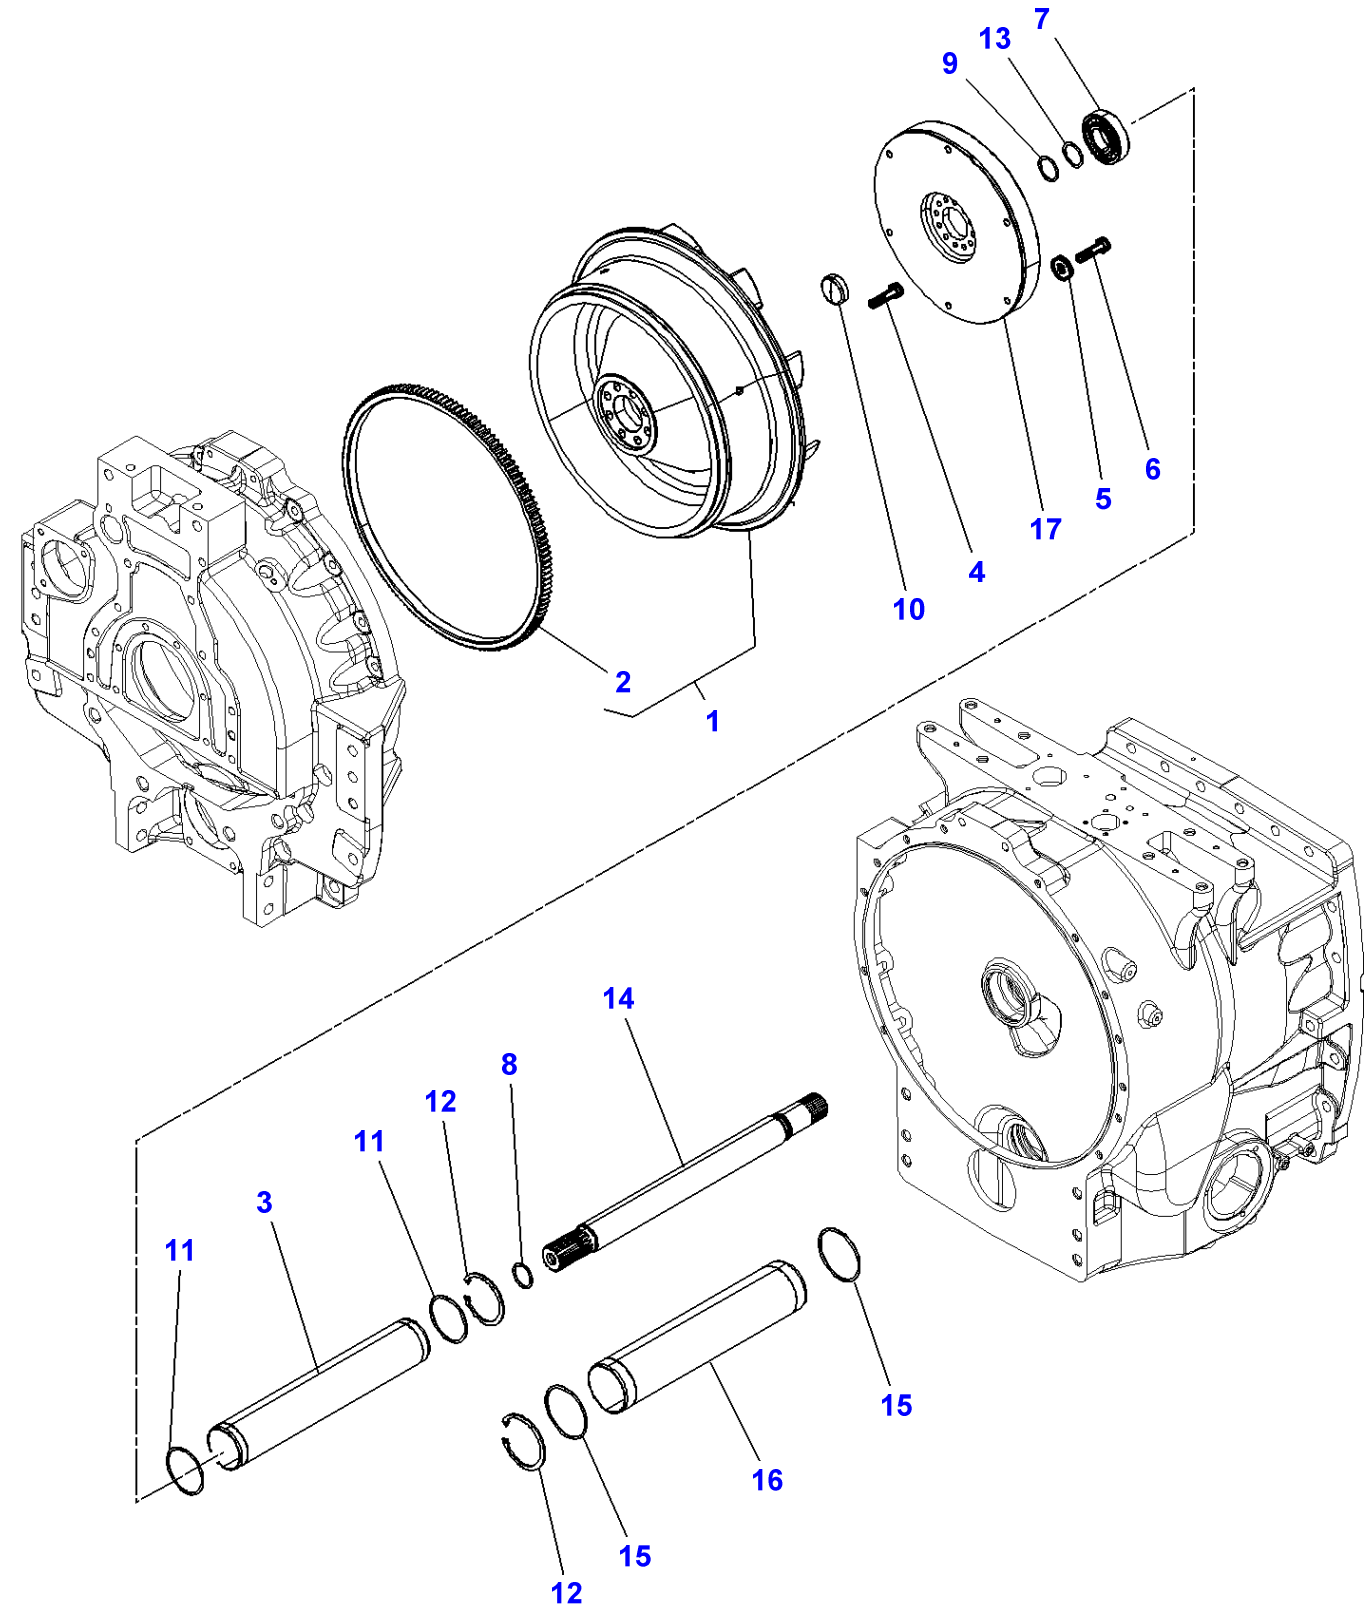

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3789339M91 | 1 | Flywheel | |
| 2 | 1619032M1 | 1 | Crownwheel | (1)<br>Number of teeth/spines 132 |
| 3 | 916.100.050.060 | 1 | Pipe | Diameter 70 X 3 |
| 4 | 3010025X1 | 8 | Hex. Sock. Screw | M14 X 45 |
| 5 | 390734X1 | 6 | Washer | |
| 6 | 3010842X1 | 6 | Hex. Sock. Screw | M10 X 60 |
| 7 | 833059M1 | 1 | Bearing | |
| 8 | X548.892.900.000 | 1 | O Ring | |
| 9 | X548.901.801.000 | 1 | O Ring | Diameter 36,2 X 3 |
| 10 | 4271289M1 | 1 | Plug | |
| 11 | X548.953.366.000 | 2 | O Ring | Diameter 69,44 X 3,53 |
| 12 | 339437X1 | 2 | Circlip | Diameter 80MM |
| 13 | 339820X1 | 1 | Circlip | Diameter 40 X 1,5 |
| 14 | 916.100.421.100 | 1 | Drive Shaft | |
| 15 | X548.963.400.000 | 2 | O Ring | Diameter 78,97 X 3,53 |
| 16 | 916.100.050.070 | 1 | Pipe | Diameter 80 X 2,5 |
| 17 | 916.100.421.052 | 1 | Hydrau Damper | |

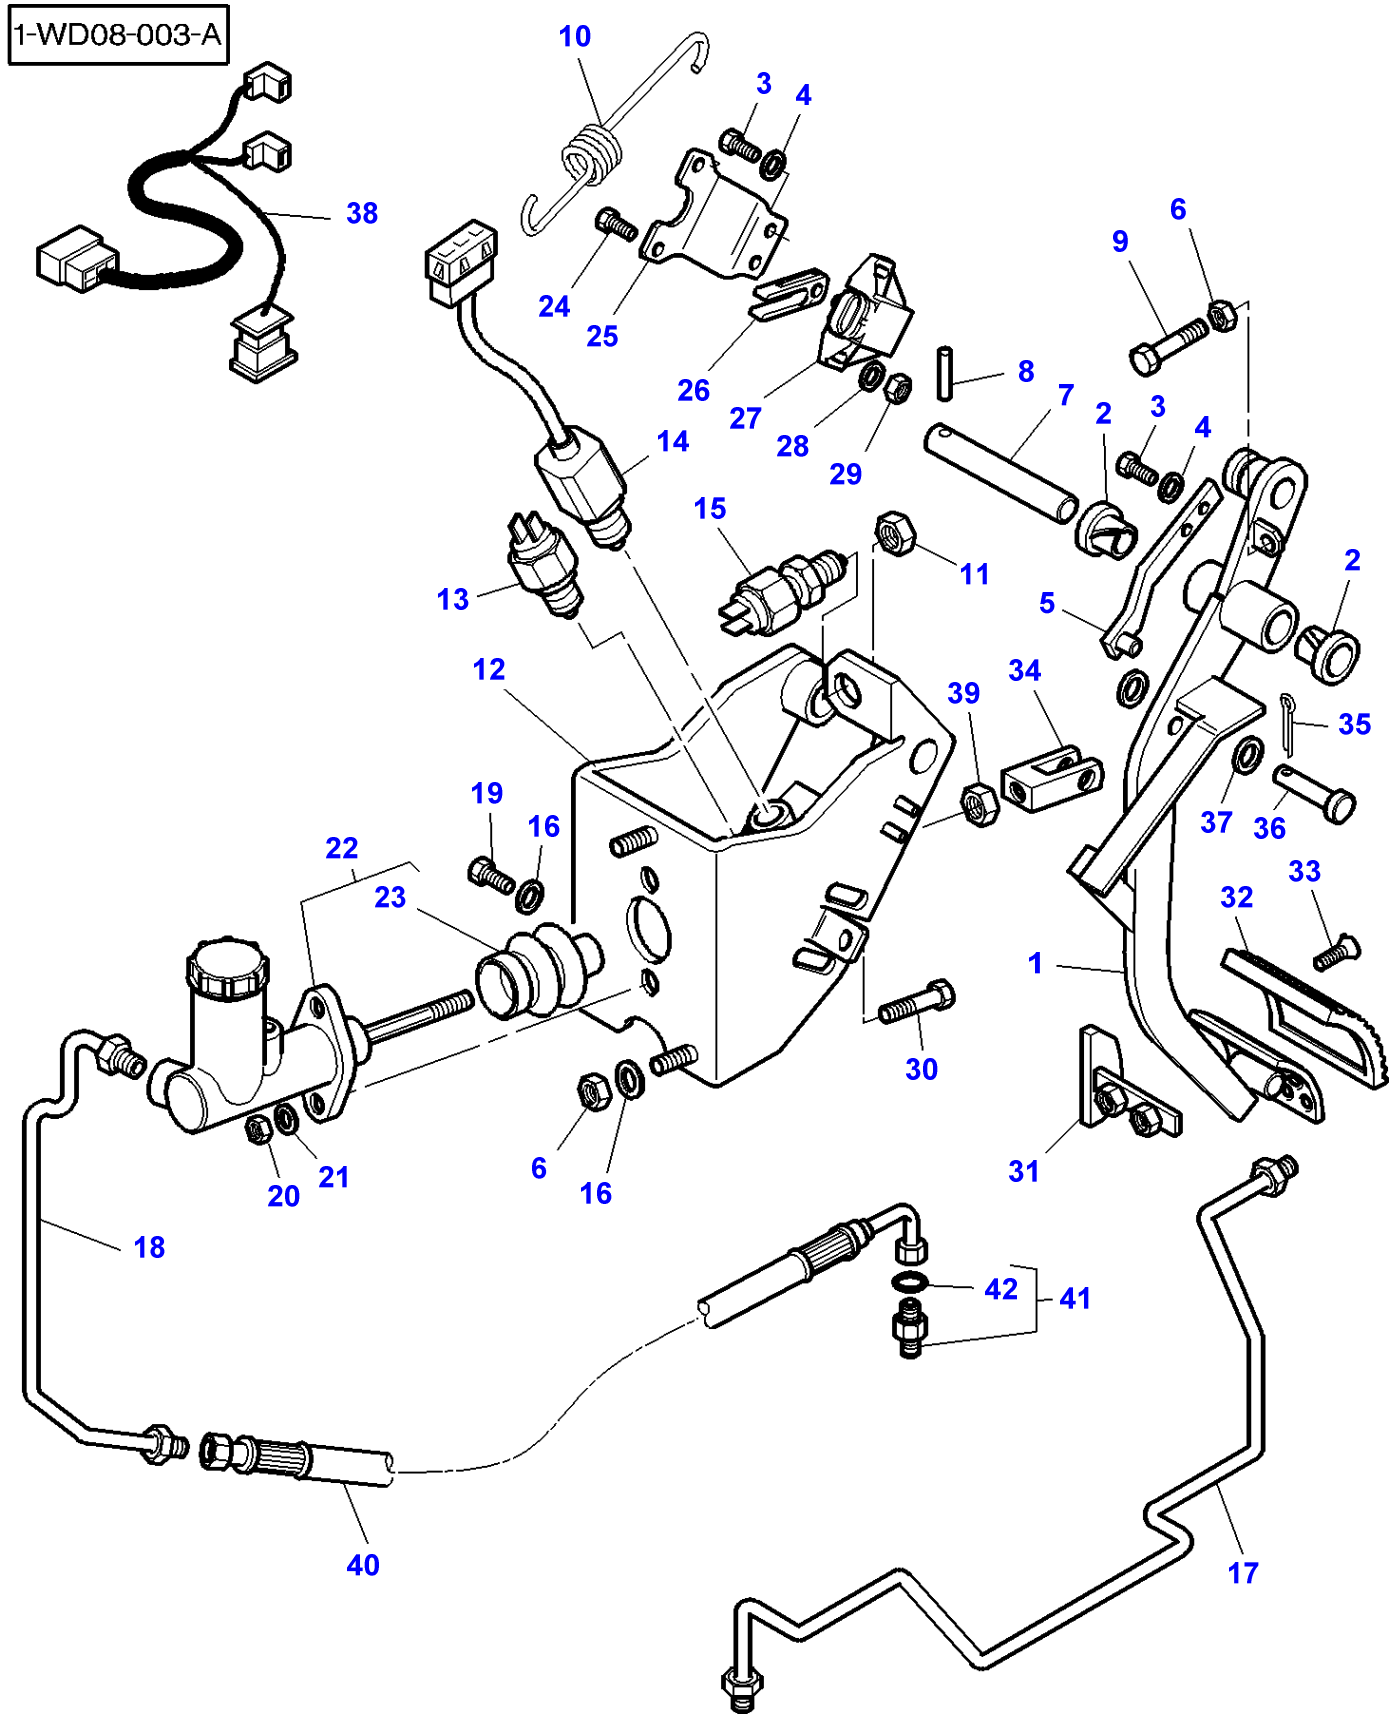
1-WD08-003-A
10
3
4
38
24
25
26
27
28
29
8
7
6
9
2
3
4
14
15
11
13
5
2
12
39
34
35
19
16
22
23
37
36
33
32
1
30
6
16
20
21
31
18
42
41
40
17


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Clutch Control Page 020-0020

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3785645M5 | 1 | Pedal | |
| 2 | 3385604M1 | 2 | Bearing | |
| 3 | 3009281X1 | 4 | Screw | M6 X 16 |
| 4 | 390971X1 | 4 | Washer | Diameter 6-12 X 1,5 |
| 5 | 4270193M1 | 1 | Strap | |
| 6 | 339169X1 | 3 | Nut | M8 |
| 7 | 3780939M1 | 1 | Clevis Pin | Diameter 15 X 100 |
| 8 | 391290X1 | 1 | Pin | Diameter 5 X 30 |
| 9 | 4271907M1 | 1 | Screw | M8 X 25 |
| 10 | 3788068M1 | 1 | Spring | |
| 11 | 339070X1 | 1 | Nut | M14 |
| 12 | 4271987M1 | 1 | Support | |
| 13 | **4272778M1** | 1 | Switch,Indirect | |
| 14 | **3783832M2** | 1 | Switch,Indirect | |
| 15 | **4271809M1** | 1 | Switch,Indirect | |
| 16 | 390972X1 | 3 | Washer | Diameter 8-17 X 1,7 |
| 17 | 4275085M2 | 1 | Tube | |
| 18 | 4275099M1 | 1 | Tube | |
| 19 | 339123X1 | 1 | Hex. Sock. Screw | M8 X 20 |
| 20 | 339402X1 | 2 | Nut | M10 |
| 21 | 390734X1 | 2 | Washer | Diameter 10-21 X 2 |
| 22 | 4278077M1 | 1 | Main Cylinder | |
| 23 | 3903845M1 | 1 | Bellows | (22) |
| 24 | 3010818X1 | 2 | Screw Metric | M4 X 20 |
| 25 | 4270192M1 | 1 | Strap | |
| 26 | 411301050040 | 1 | Fork | |
| 27 | **3784361M1** | 1 | Transducer | |
| 28 | 390468X1 | 4 | Washer | Diameter 4-9 X 1 |
| 29 | 3019139X1 | 2 | Nut | M4 |
| 30 | 3009493X1 | 2 | Hex. Sock. Screw | M10 X 30 |
| 31 | 3714488M3 | 1 | Stop | |
| 32 | 1626321M2 | 1 | Skate | |
| 33 | 392404X1 | 2 | Screw | M5 X 16 |
| 34 | 4278844M1 | 1 | Clevis | |
| 35 | 1442994X1 | 1 | Pin | Diameter 3 X 25 |
| 36 | 3019214X1 | 1 | Clevis Pin | Diameter 12 X 40 |
| 37 | 1444351X1 | 2 | Washer | |
| 38 | 3783857M1 | 1 | Harness | |
| 39 | 392310X1 | 1 | Nut | |
| 40 | 4276159M1 | 1 | Hydr. Hose | Length 1100 MM |
| 41 | 338716X91 | 1 | Union | M12X1,5 |
| 42 | 338761X1 | 1 | Gasket | (41) |

1-WE97-006-A

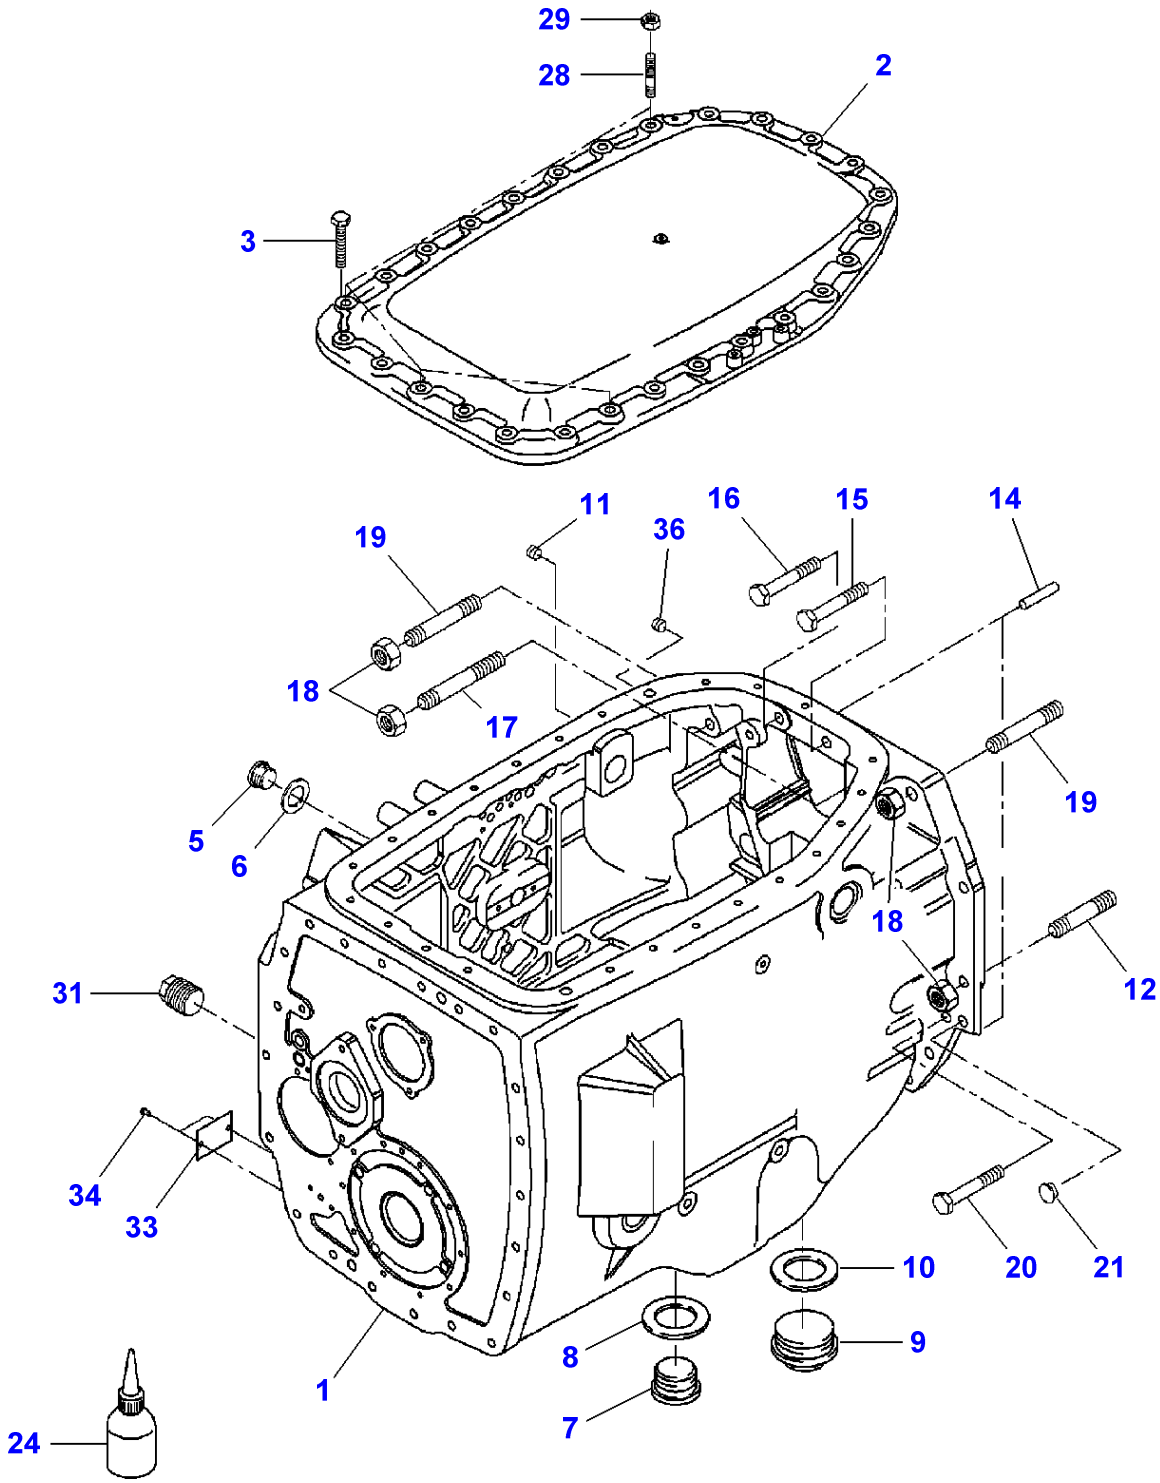


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 903.100.050.021 | 1 | Transm.Housing | |
| 2 | 916.101.050.060 | 1 | Cover | |
| 3 | X487.536.041.000 | 23 | Hex. Sock. Screw | M12 X 50 |
| 5 | X483.801.200.000 | 1 | Screw | M16 X 1,5 |
| 6 | X540.004.878.000 | 1 | Ring | |
| 7 | X483.804.801.000 | 3 | Plug | M33 X 2 |
| 8 | X540.010.278.000 | 3 | Ring | |
| 9 | X483.807.201.000 | 2 | Capscrew | M42 X 2 |
| 10 | X540.012.278.000 | 2 | Ring | |
| 11 | X483.500.200.000 | 1 | Screw | M10 |
| 12 | X489.145.701.000 | 2 | Stud | M16 X 55 |
| 14 | X505.578.900.000 | 2 | Dowel | M6 X 32 |
| 15 | X486.546.301.000 | 1 | Hex. Sock. Screw | M16 X 80 |
| 16 | X486.546.506.000 | 1 | Hex. Sock. Screw | M16 X 90 |
| 17 | X489.148.906.000 | 2 | Stud | M16 X 110 |
| 18 | X428.204.005.000 | 7 | Nut | M16 |
| 19 | X489.146.201.000 | 3 | Stud | M16 X 75 |
| 20 | X487.545.606.000 | 8 | Hex. Sock. Screw | M16 X 60 |
| 21 | X499.502.495.000 | 3 | Plug | |
| 24 | X903.050.074.000 | X | Loctite | |
| 28 | 205.100.150.130 | 4 | Stud | |
| 29 | X428.203.241.000 | 4 | Nut | M12 |
| 31 | 926.110.050.010 | 1 | Screw | |
| 33 | 903.100.050.110 | 1 | Identity Plate | |
| 34 | X419.432.887.000 | 2 | Nail, Notched | |
| 36 | X483.500.200.000 | 2 | Screw | M10 X 1 |

1-WG89-001-A

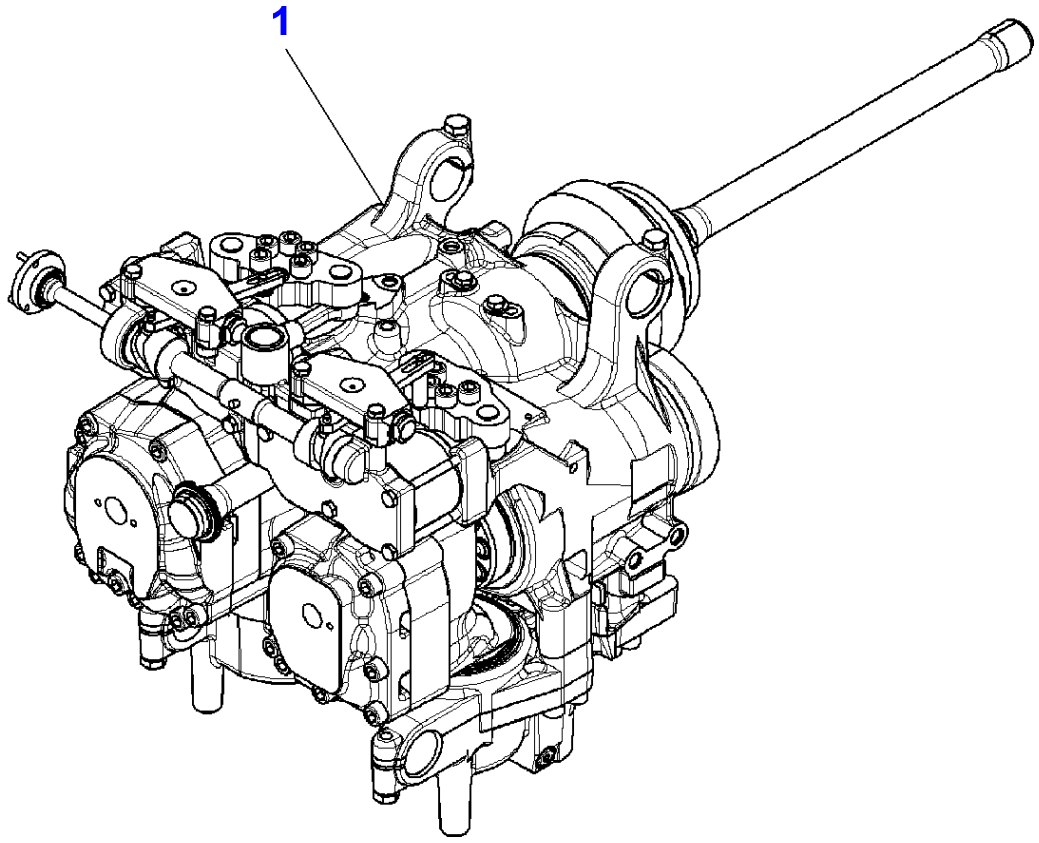


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 0099.047.000.000 | 1 | Gearbox | |
| | Z099.047.000.000 | 1 | Gearbox MI 200 | [A] |

**FOOTNOTE [A]** STANDARD EXCHANGE

1-WG67-002-A

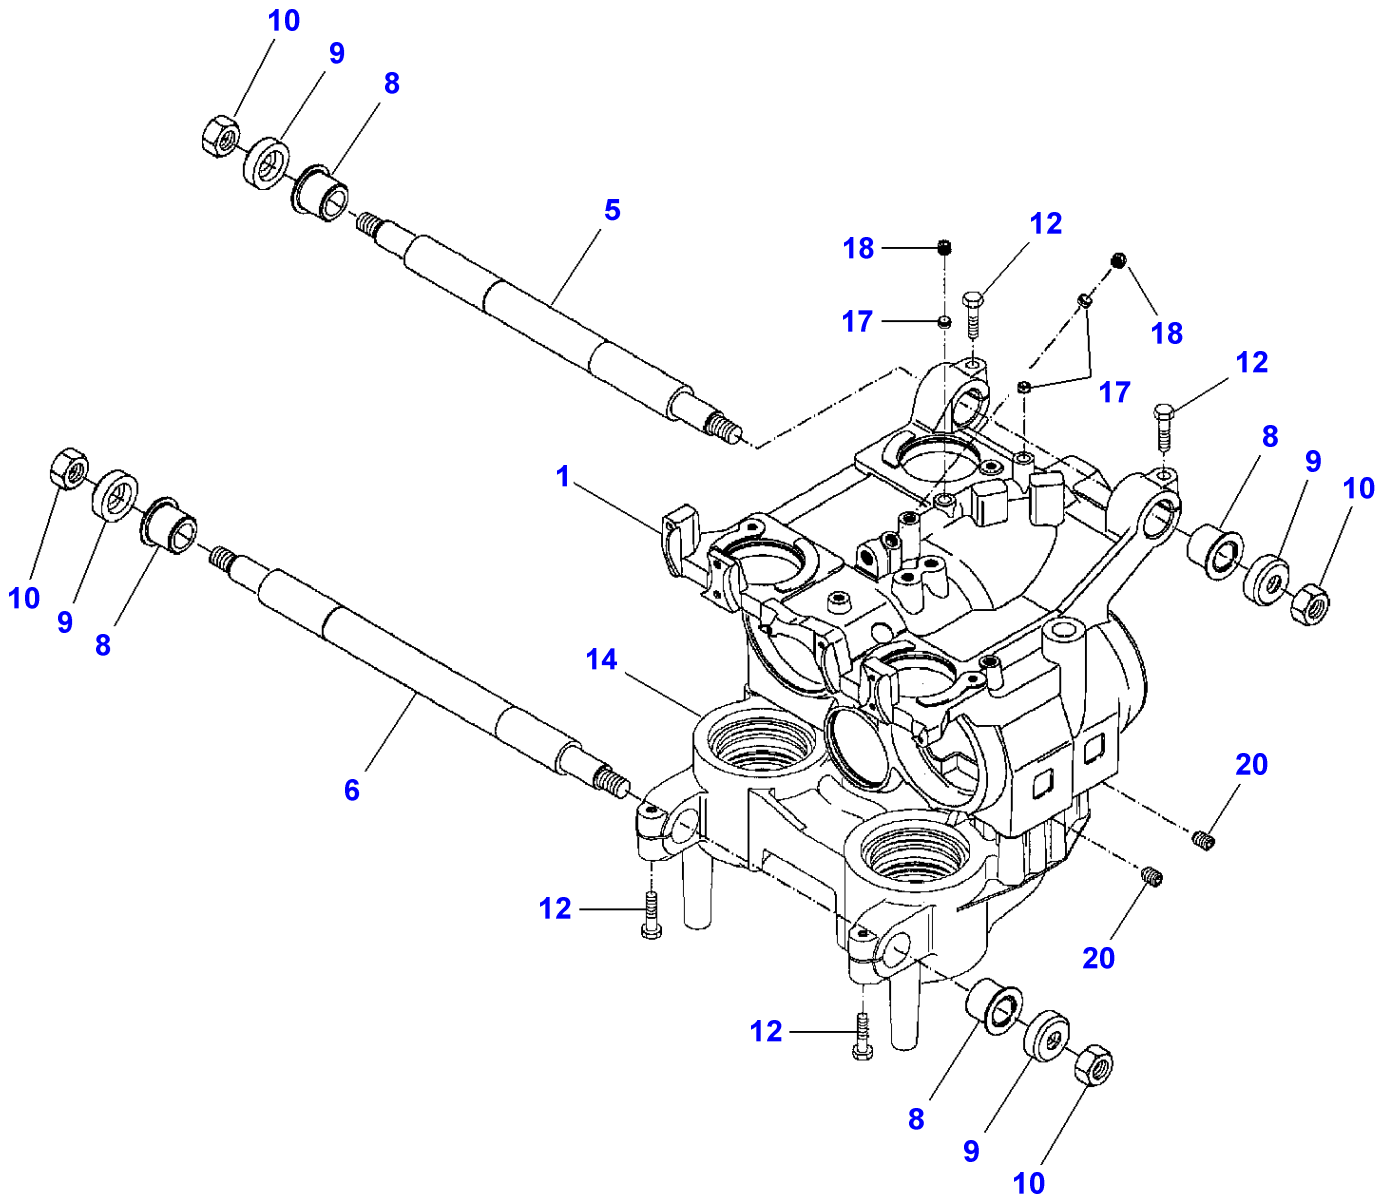


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 1 | Housing | [A]<br>See Page - Reference Number 025-0010/1 |
| 5 | 916.100.630.011 | 1 | Shaft | |
| 6 | 916.100.630.020 | 1 | Shaft | |
| 8 | H916.100.630.010 | 4 | Bush | |
| 9 | 916.100.630.030 | 4 | Ring | |
| 10 | X434.105.040.000 | 4 | Nut | M20 |
| 12 | | 4 | Hex. Sock. Screw | [A] |
| 14 | | 1 | Plate | See Page - Reference Number 025-0045/1 |
| 17 | | 3 | Nozzle | [A] |
| 18 | | 3 | Plug | [A]<br>M12 X 1,5 |
| 20 | | 2 | Screw | [A] |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY

1-WG68-002-A

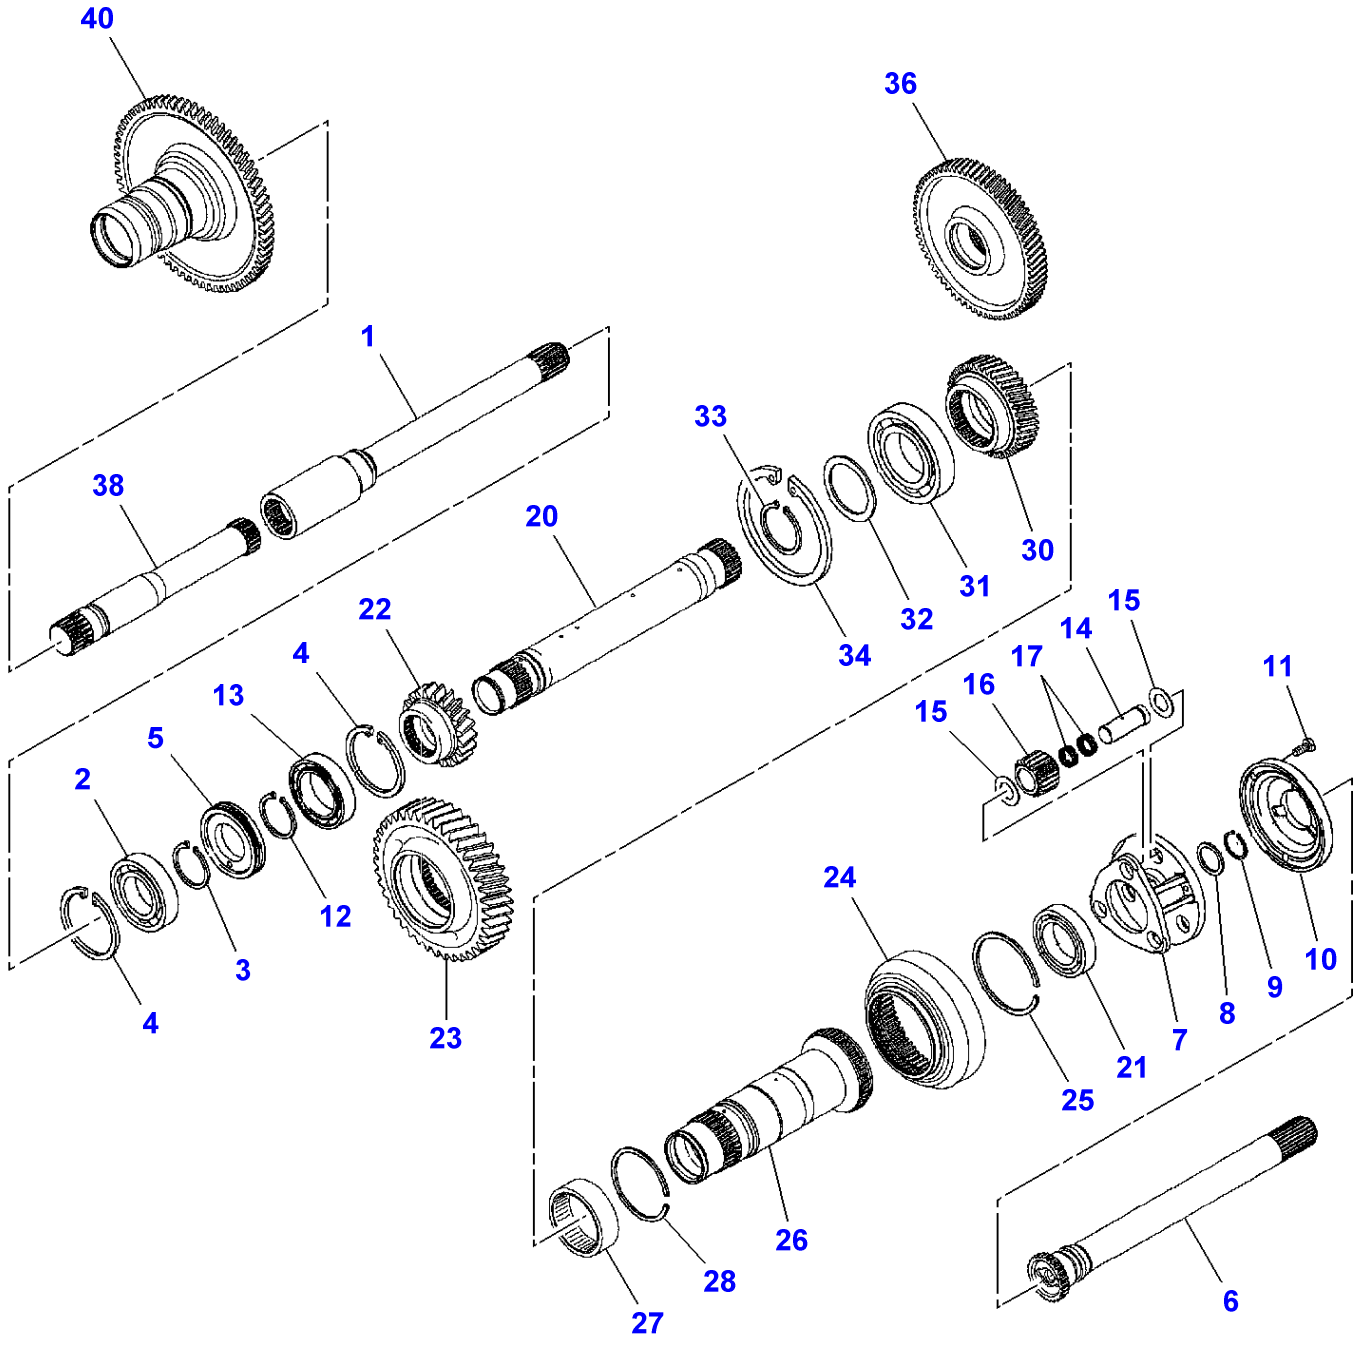
40
36
1
38
20
33
30
31
32
34
22
4
13
5
2
12
3
4
23
15
14
17
16
15
11
24
25
21
7
8
9
10
26
28
27
6

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Planetary Drive Page 025-0020

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 1 | Shaft | [A] |
| 2 | | 1 | Bearing Assy | [A] |
| 3 | | 1 | Circlip | [A] |
| 4 | | 2 | Circlip | [A] |
| 5 | | 1 | Tube | [A] |
| 6 | 926102080130 | 1 | Shaft | See Page - Reference Number 050-0005/42 |
| 7 | | 1 | Carrier | [A] |
| 8 | | 1 | Chock | [A] |
| 9 | | 1 | Circlip | [A] |
| 10 | 916100080181 | 1 | Cover | |
| 11 | | 3 | Hex. Sock. Screw | [A]<br>M8 X 25 |
| 12 | | 1 | Kit, Circlip | [A] |
| 13 | | 1 | Bearing Assy | [A] |
| 14 | | 3 | Clevis Pin | [A] |
| 15 | | 6 | Washer | [A] |
| 16 | | 3 | Diff Pinion | [A]<br>Number of teeth/spines 20 |
| 17 | | 6 | Needle Cage | [A] |
| 20 | | 1 | Shaft | [A]<br>Number of teeth/spines 27 |
| 21 | | 1 | Bearing Assy | [A] |
| 22 | | 1 | Pinion | [A]<br>Number of teeth/spines 22 |
| 23 | | 1 | Shaft | See Page - Reference Number 025-0030/1 |
| 24 | | 1 | Annular Gear | [A] |
| 25 | | 1 | Ring | [A]<br>Diameter 95 X 2,5 |
| 26 | | 1 | Shaft | [A] |
| 27 | | 1 | Bearing Assy | [A]<br>Diameter 68 X 25 |
| 28 | | 1 | Ring | [A]<br>Diameter 82 X 2 |
| 30 | | 1 | Pinion | [A]<br>Number of teeth/spines 30 |
| 31 | | 1 | Bearing Assy | [A] |
| 32 | | 1 | Kit, Washer | [A] |
| 33 | | 1 | Circlip | [A]<br>Diameter 60 X 2 |
| 34 | | 1 | Circlip | [A]<br>Diameter 110 X 4 |
| 36 | | 1 | Pinion | See Page - Reference Number 025-0025/1 |
| 38 | 916101080070 | 1 | Shaft | |
| 40 | | 1 | Pinion | See Page - Reference Number 070-0055/1 |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY

1-WG69-002-A

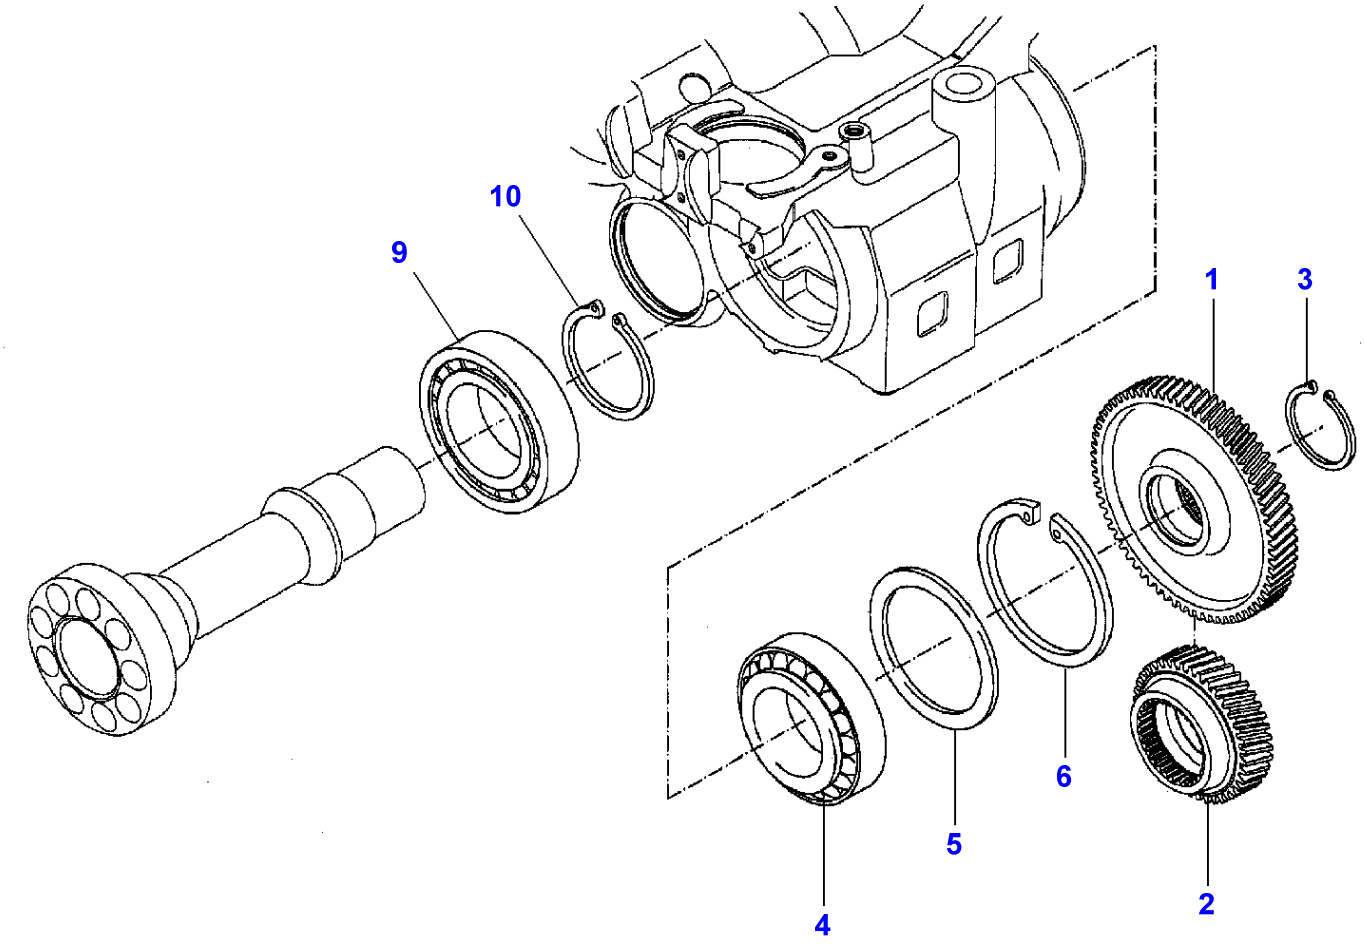


https://truckmanualshub.com/



| Item | Qty | Description | Comments |
|---|---|---|---|
| 1 | 1 | Pinion | [A] |
| | | | Number of teeth/spines 48 |
| 2 | 1 | Pinion | [A] |
| | | | See Page - Reference Number 025-0020/30 |
| 3 | 1 | Circlip | [A] |
| | | | Diameter 55 X 3 |
| 4 | 1 | Ball Bearing | [A] |
| 5 | 1 | Chock | [A] |
| 6 | 1 | Circlip | [A] |
| | | | Diameter 125 X 4 |
| 9 | 1 | Bearing Assy | [A] |
| 10 | 1 | Circlip | [A] |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY

1-WG70-002-A

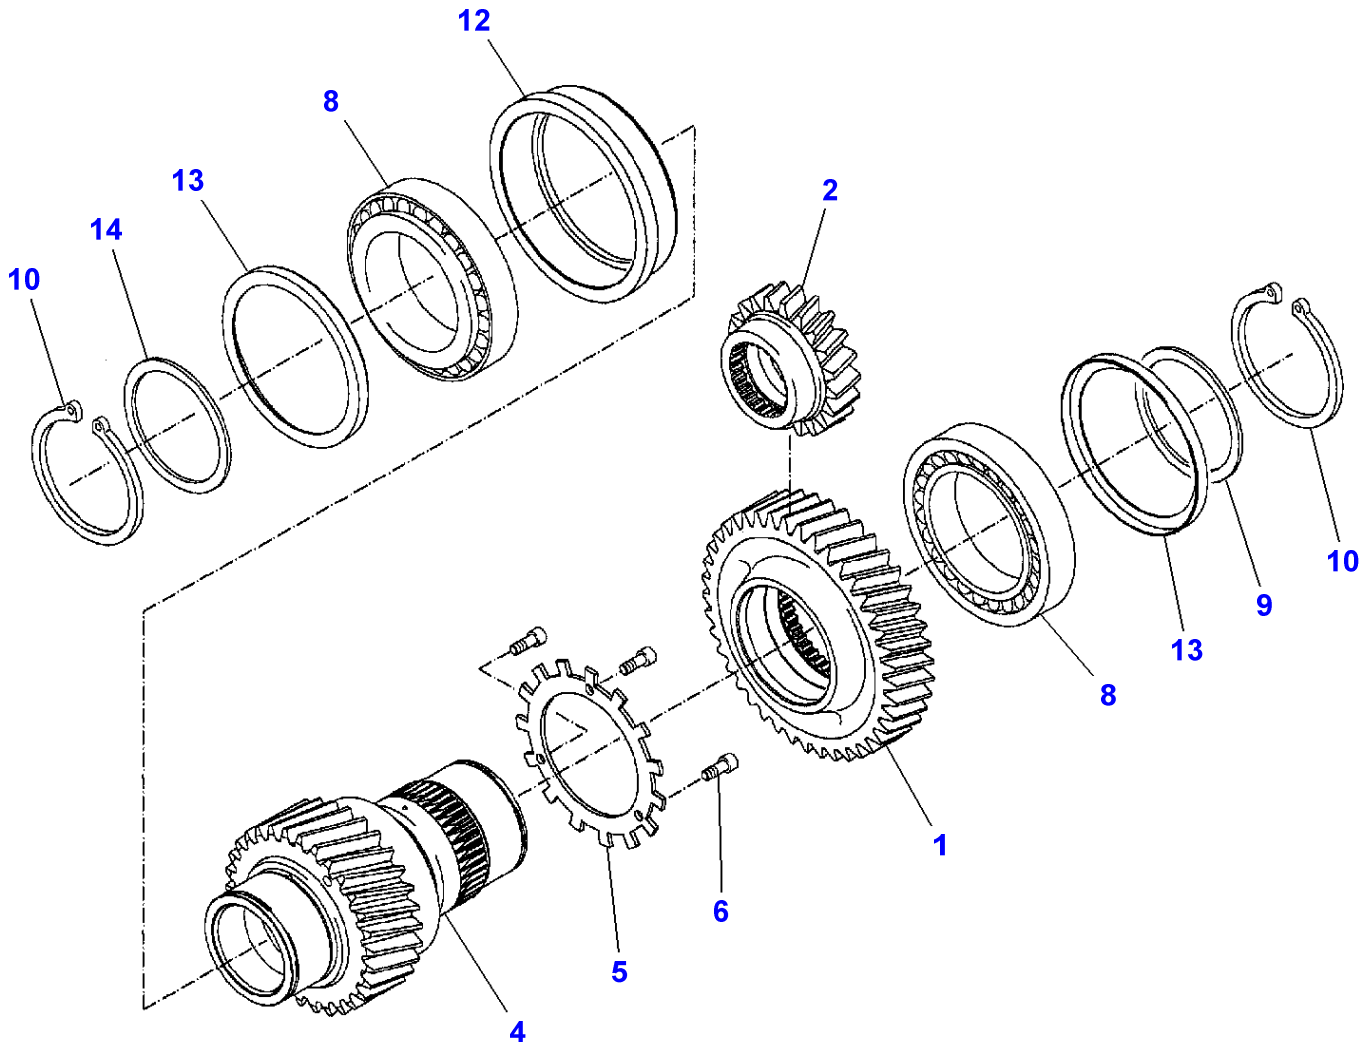


https://truckmanualshub.com/



| Item | Qty | Description | Comments |
|---|---|---|---|
| 1 | 1 | Pinion | [A] |
| | | | Number of teeth/spines 45 |
| 2 | 1 | Pinion | See Page - Reference Number 025-0020/22 |
| 4 | 1 | Shaft | [A] |
| | | | Number of teeth/spines 29 |
| 5 | 1 | Pinion | [A] |
| 6 | 3 | Hex. Sock. Screw | [A] |
| | | | M6 X 12 |
| 8 | 2 | Ball Bearing | [A] |
| 9 | 1 | Shim | [A] |
| 10 | 2 | Circlip | [A] |
| 12 | 1 | Ring | [A] |
| 13 | 2 | Shield | [A] |
| 14 | 1 | Kit, Washer | [A] |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY

1-WP32-003-A

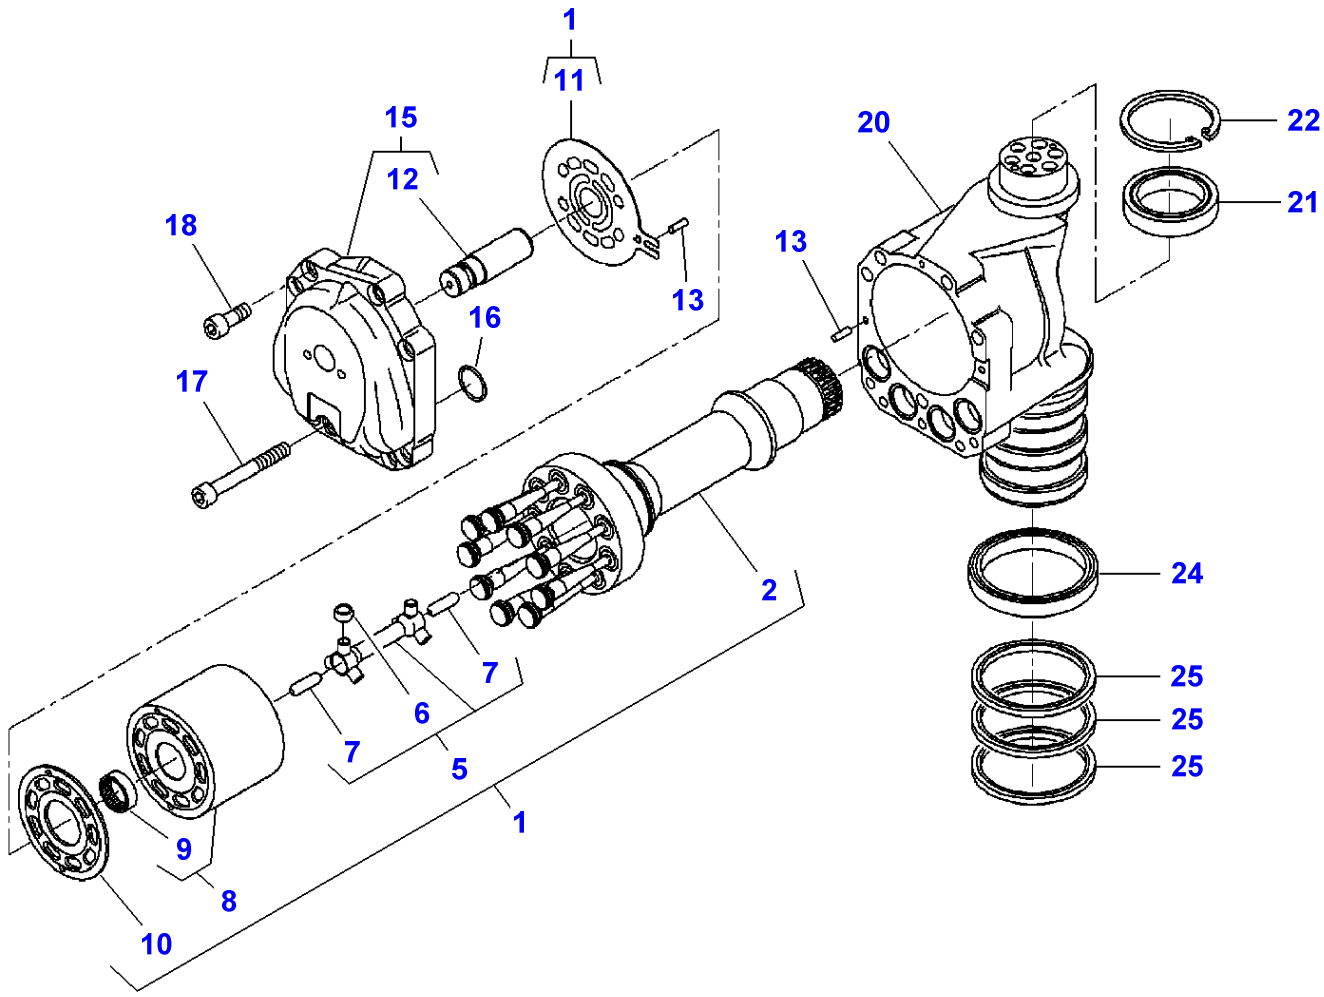

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Hydraulic Pump 

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 1 | Assembly Set | [A] |
| 2 | | 1 | Shaft | [A] (1) |
| 5 | | 1 | Clevis Pin | [A] (1) |
| 6 | | 1 | Bush | [A] (5) |
| 7 | | 1 | Clevis Pin | [A] (5) |
| 8 | | 1 | Cylinder | [A] (1) |
| 9 | | 1 | Bearing Assy | [A] (8) |
| 10 | | 1 | Plate | [A] (1) |
| 11 | 916.100.430.311 | 1 | Plate | (1) |
| 12 | | 1 | Clevis Pin | (15) Not serviced,order REF. 15 |
| 13 | X506.239.300.000 | 2 | Dowel | Diameter 6 X 20 |
| 15 | H916.100.430.012 | 1 | Cover | |
| 16 | X548.885.102.000 | 4 | O Ring | Diameter 29,1 X 2,55 |
| 17 | X485.019.801.000 | 1 | Hex. Sock. Screw | M12 X 80 |
| 18 | X485.019.206.000 | 9 | Hex. Sock. Screw | M12 X 50 |
| 20 | 916.101.430.101 | 1 | Housing | |
| 21 | X620.430.501.000 | 1 | Bearing | 60 X 85 X 16 |
| 22 | X530.107.946.000 | 1 | Circlip | |
| 24 | X622.348.000.000 | 1 | Bearing Roller | 95 X 115 X 15 |
| 25 | G916.101.430.050 | 3 | Gasket | |

FOOTNOTE [A] NOT SUPPLIED SEPARATELY

1-WP26-002-A

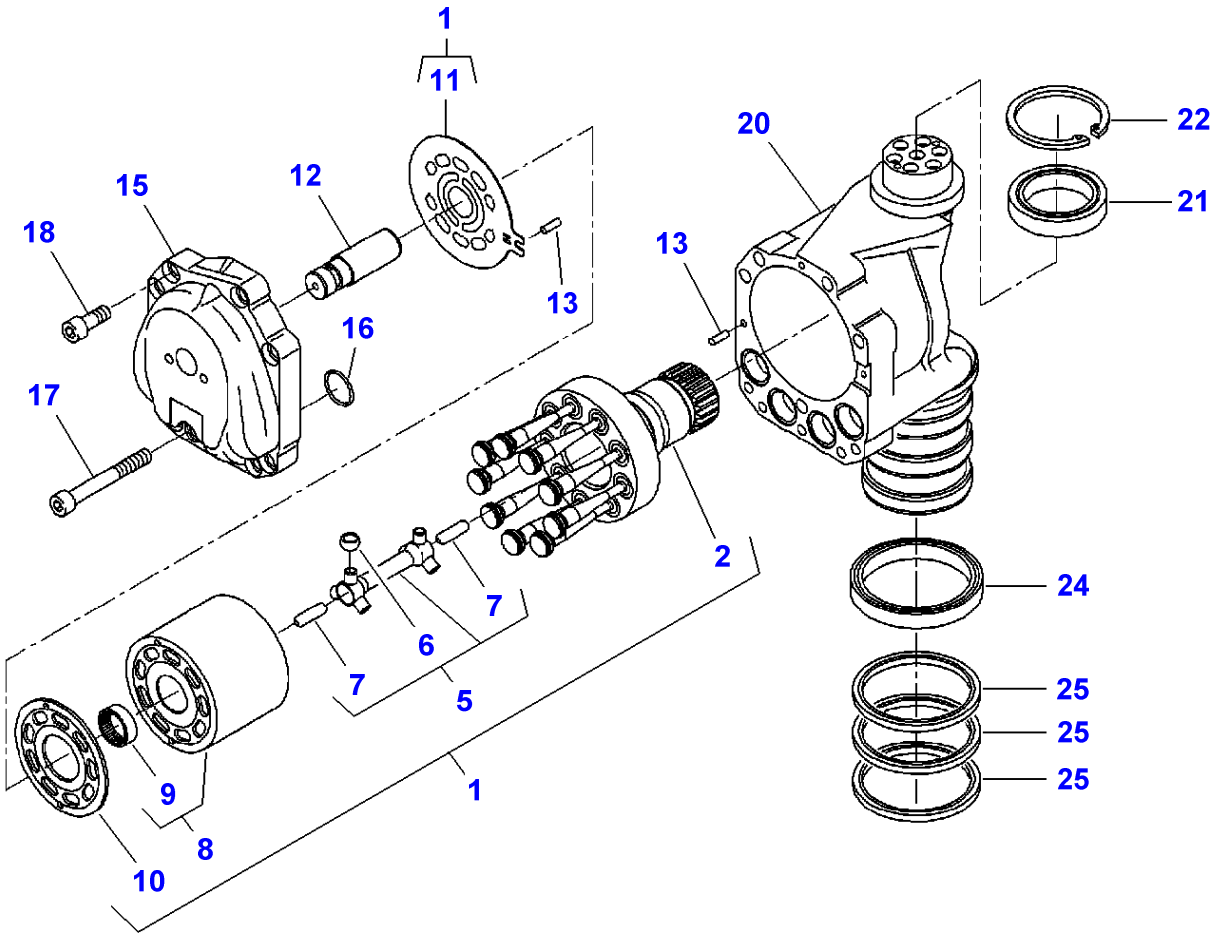


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 1 | Assembly Set | [A] |
| 2 | | 1 | Shaft | [A] (1) |
| 5 | | 1 | Gasket | [A] (1) |
| 6 | | 1 | Bush | [A] (5) |
| 7 | | 2 | Clevis Pin | [A] (5) |
| 8 | | 1 | Cylinder | [A] (1) |
| 9 | | 1 | Bearing Assy | [A] (8) |
| 10 | | 1 | Plate | [A] (1) |
| 11 | | 1 | Plate | [A] (1) |
| 12 | | 1 | Clevis Pin | [A] |
| 13 | | 2 | Pin | [A] |
| 15 | | 1 | Cover | [A] |
| 16 | X548.885.102.000 | 4 | O Ring | 29,1 X 2,55 |
| 17 | | 1 | Screw | [A] M12 X 80 |
| 18 | | 9 | Screw | [A] M12 X 50 |
| 20 | | 1 | Housing | [A] |
| 21 | | 1 | Bearing | [A] 60 X 85 X 16 |
| 22 | | 1 | Circlip | [A] |
| 24 | | 1 | Bearing Roller | [A] 95 X 115 X 15 |
| 25 | | 3 | Gasket | [A] |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY

1-WG72-002-A

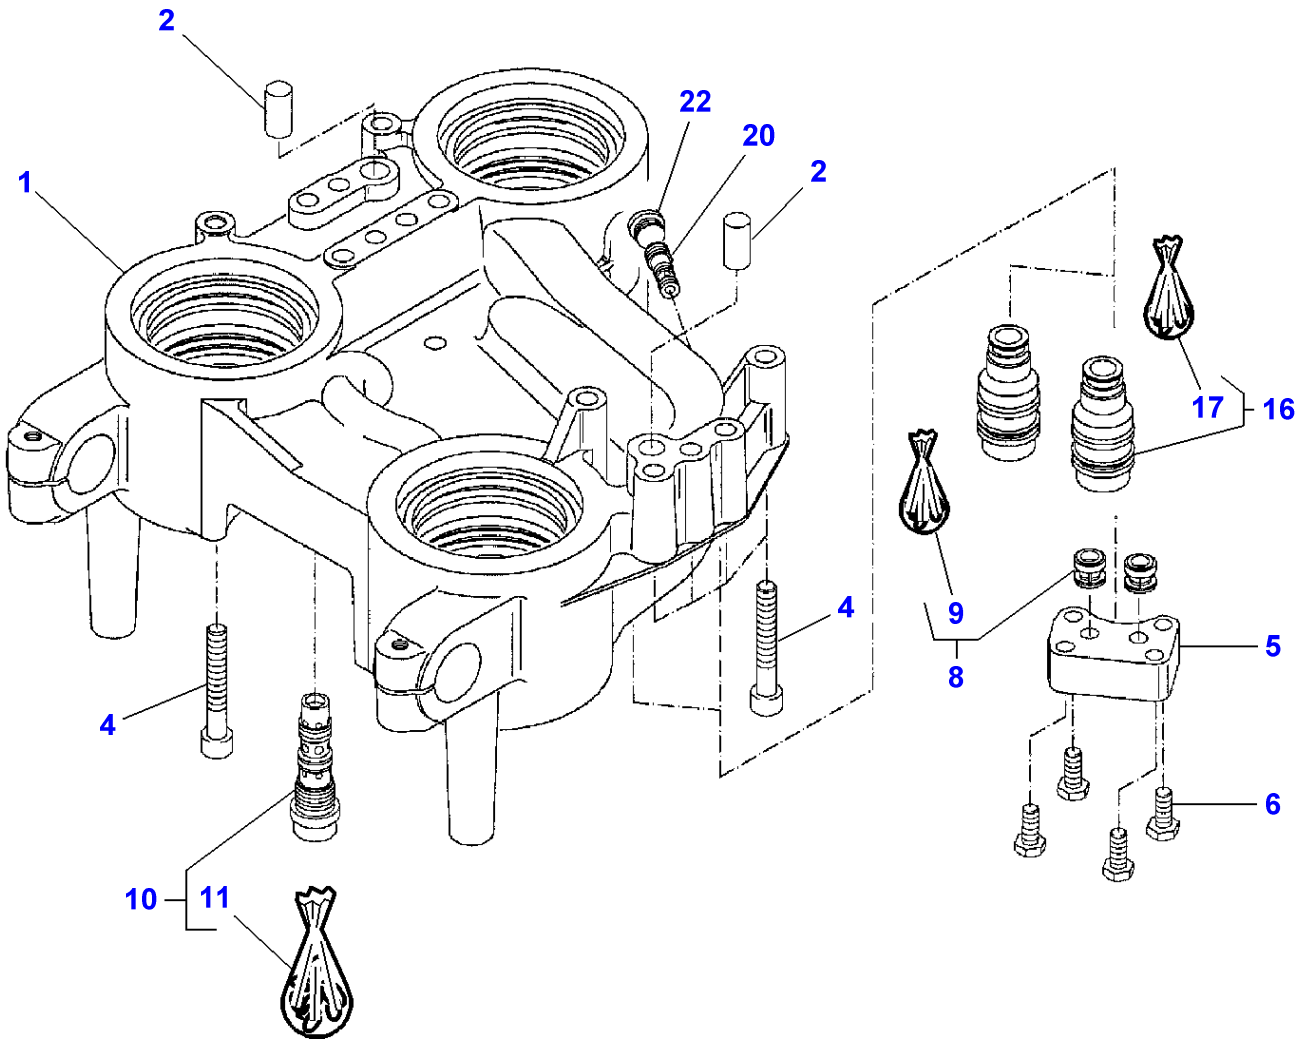


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 1 | Plate | [A]<br>See Page - Reference Number 025-0010/1 |
| 2 | | 2 | Pin | [A] |
| 4 | | 13 | Screw | [A]<br>M12 X 80 |
| 5 | 916.100.430.020 | 1 | Flange | |
| 6 | | 4 | Screw | [A]<br>M10 X 40 |
| 8 | X600.585.202.000 | 2 | Non Return Valve | |
| 9 | X600.585.202.010 | 1 | Kit, Joint | (8) |
| 10 | G916.101.430.020 | 1 | Flushing Valve | |
| 11 | F916.100.430.010 | 1 | Kit, Joint | (10) |
| 16 | G716.100.430.011 | 2 | Discharge Valve | Repairs and replaces G716100430010 |
| 17 | F716.100.430.010 | 1 | Kit, Joint | (16) |
| 20 | G916.101.430.030 | 1 | Valve. | |
| 22 | X483.900.400.000 | 1 | Screw | M12 X 1,5 |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY

1-WG73-003-A

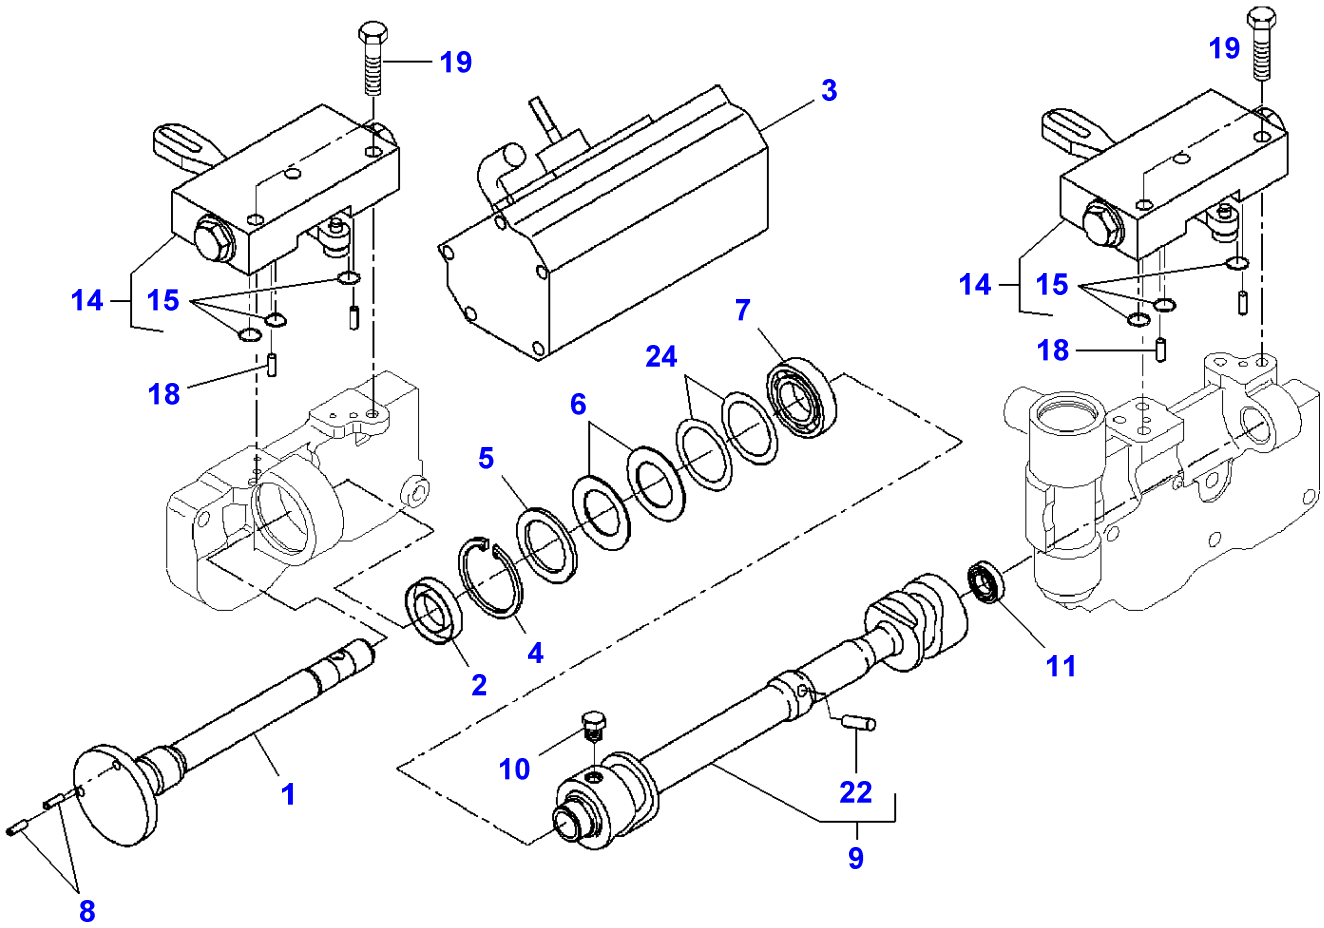


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 916.101.530.010 | 1 | Shaft | |
| 2 | X550.035.200.000 | 1 | Oil Seal | 22 X 35 X 8/7 |
| 3 | | 1 | Control | See Page - Reference Number 025-0055/1 |
| 4 | X530.105.346.000 | 1 | Circlip | Diameter 42 X 1,75 |
| 5 | X534.538.146.000 | 2 | Backup Ring | |
| 6 | X699.239.900.000 | 2 | Cup Spring | |
| 7 | X607.305.302.000 | 1 | Ball Bearing | |
| 8 | 916.970.160.400 | 2 | Peg | |
| 9 | H926.103.530.020 | 1 | Shaft | |
| 10 | 916.100.530.170 | 1 | Hex. Sock. Screw | |
| 11 | X606.722.501.000 | 1 | Ball Bearing | |
| 14 | G916.100.530.013 | 2 | Regulator | |
| 15 | X548.823.200.000 | 3 | O Ring | (14)<br>Diameter 9,25 X 1,78 |
| 18 | | 4 | Pin | [A] |
| 19 | | 4 | Hex. Sock. Screw | [A] |
| 22 | X506.239.300.000 | 1 | Dowel | M6 X 20 |
| 24 | G001.990.200.140 | 1 | Kit, Washer | |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY

1-WG88-001-A

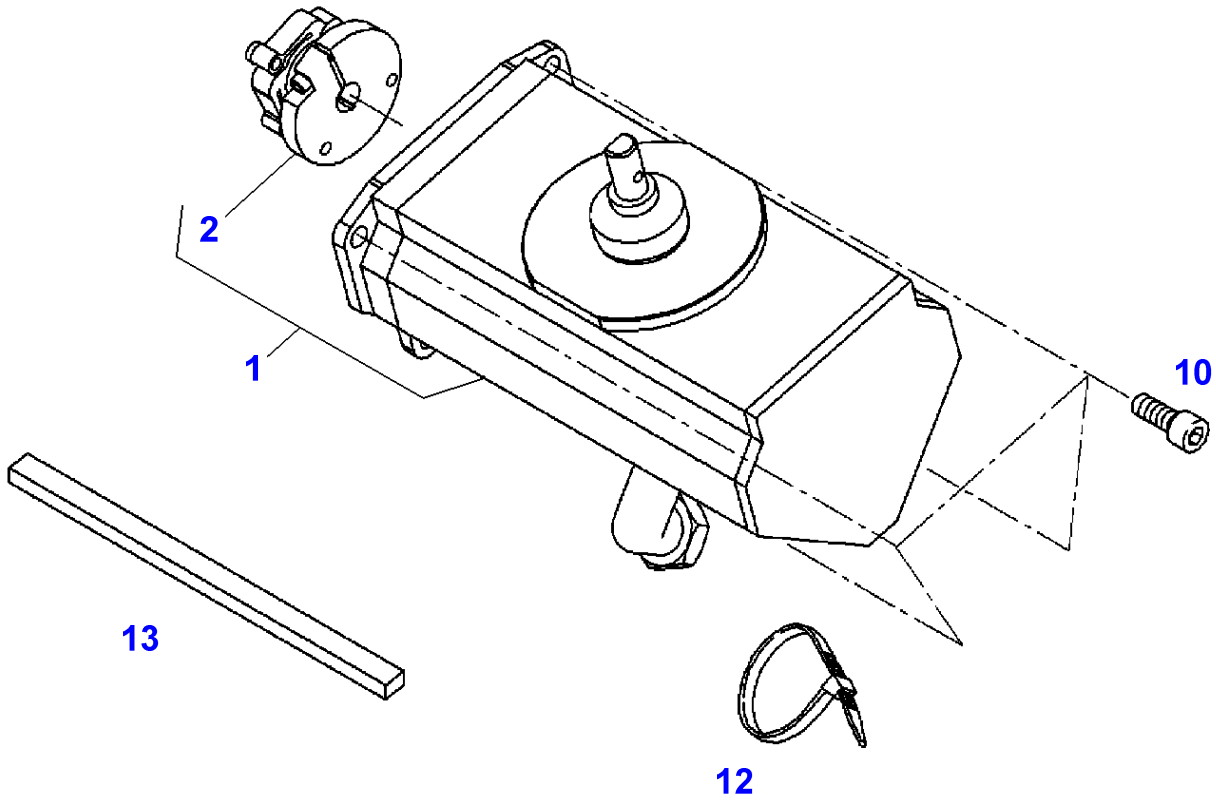


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G701.970.160.012 | 1 | Control | |
| 2 | F916.970.160.011 | 1 | Coupling | (1) |
| 10 | X485.007.301.000 | 4 | Hex. Sock. Screw | M8 X 20 |
| 12 | X668.980.522.000 | 2 | Cable Tie | |
| 13 | X903.005.286.000 | X | Sealing Strip | Length 100 MM |

1-WG73-004-A

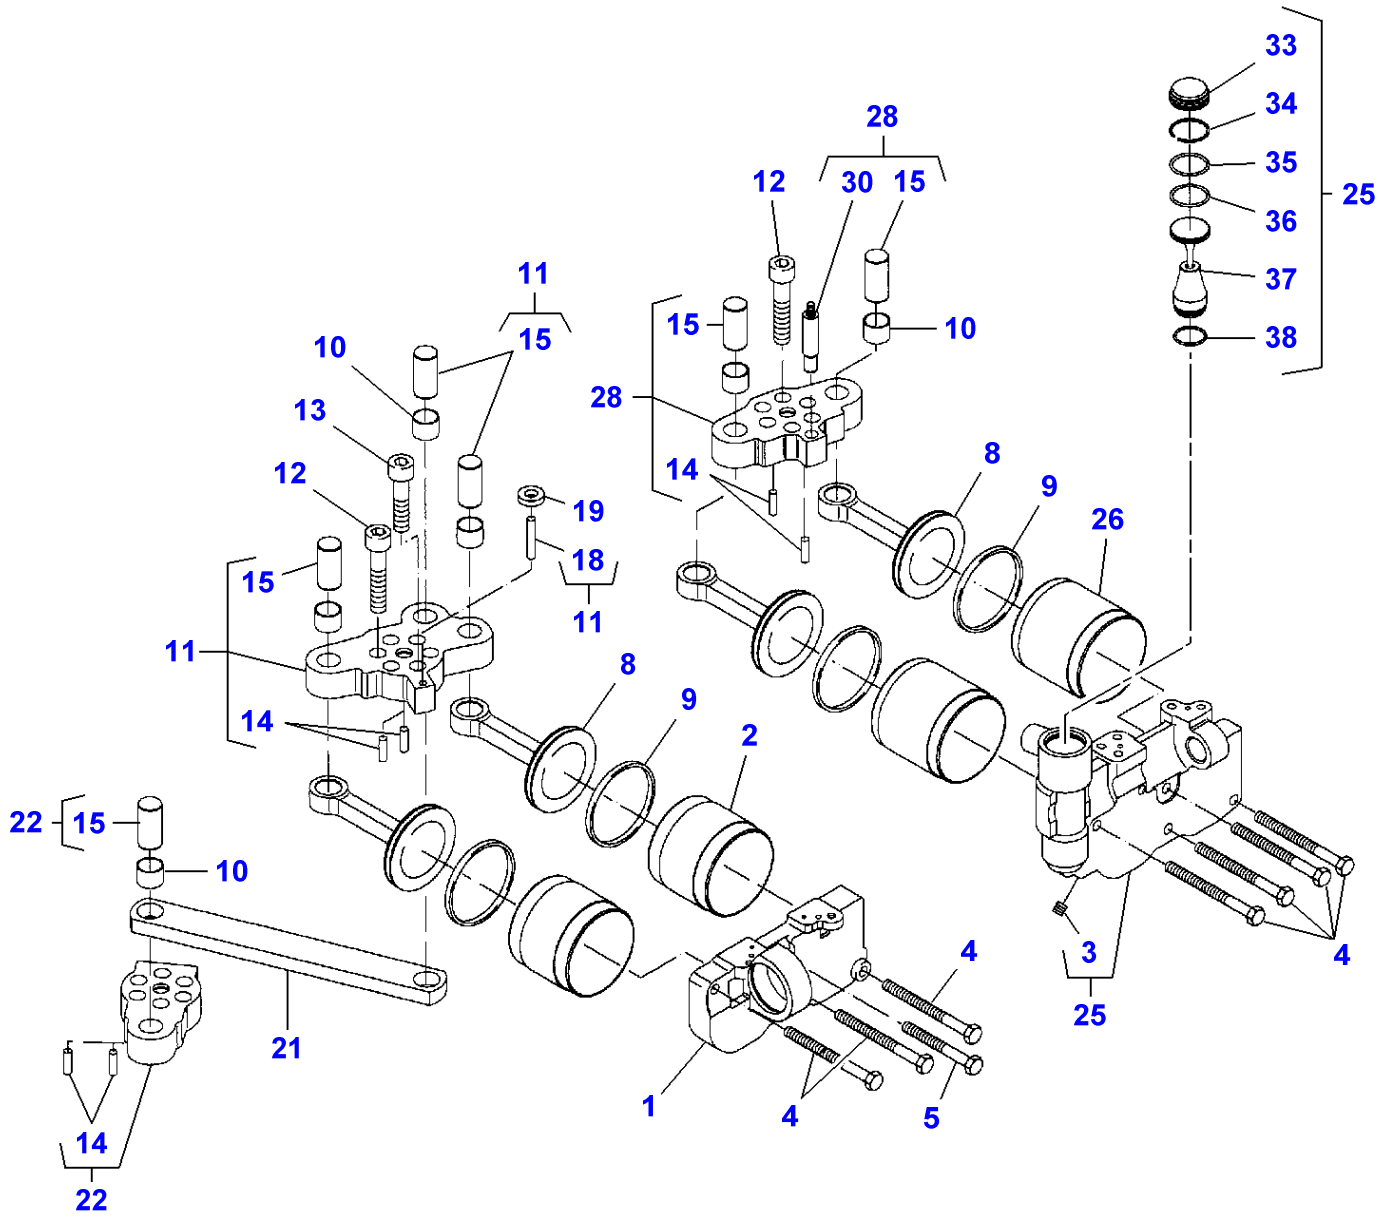
33
34
35
36
37
38
25
28
12
30
15
10
11
15
10
13
12
19
18
11
15
11
14
28
15
10
14
8
9
26
8
9
2
22
15
10
21
14
22
1
4
5
4
3
25
4

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Adjusting Device Page 025-0060

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 718.100.531.020 | 1 | Housing | |
| 2 | 916.100.530.041 | 2 | Pipe | |
| 3 | | 1 | Hex. Sock. Screw | (25)<br>M8 X 8<br>Not serviced,order REF. 25 |
| 4 | | 7 | Hex. Sock. Screw | [A]<br>M8 X 90 |
| 5 | | 1 | Hex. Sock. Screw | [A]<br>M8 X 70 |
| 8 | 916.100.530.051 | 4 | Piston | |
| 9 | X547.502.700.000 | 4 | Sump Gasket | Diameter 70 X 4,2 |
| 10 | | 6 | Bearing | [A] |
| 11 | | 1 | Lever | [A,B] |
| 12 | | 17 | Screw | [A]<br>M12 X 50 |
| 13 | | 1 | Screw | [A]<br>M12 X 40 |
| 14 | | 6 | Pin | [A] |
| 15 | | 6 | Clevis Pin | [A] |
| 18 | | 1 | Pin | [A] |
| 19 | | 3 | Washer | [A] |
| 21 | | 1 | Shackle | [A] |
| 22 | | 1 | Lever | [A,D] |
| 25 | H718.100.531.010 | 1 | Housing | |
| 26 | 916.100.530.060 | 2 | Pipe | |
| 28 | | 1 | Lever | [A,C] |
| 30 | | 1 | Clevis Pin | [A] |
| 33 | | 1 | Cover | (25)<br>Not serviced,order REF. 25 |
| 34 | | 1 | Ring | (25)<br>Not serviced,order REF. 25 |
| 35 | | 1 | Gasket | (25)<br>Not serviced,order REF. 25 |
| 36 | | 1 | Gasket | (25)<br>Not serviced,order REF. 25 |
| 37 | | 1 | Clevis Pin | (25)<br>Not serviced,order REF. 25 |
| 38 | | 1 | Gasket | (25)<br>Not serviced,order REF. 25 |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY
**FOOTNOTE [B]** INCLUDES REF. 14,15,18
**FOOTNOTE [C]** INCLUDES REF. 14,15,30
**FOOTNOTE [D]** INCLUDES REF. 14,15

1-WG75-002-A

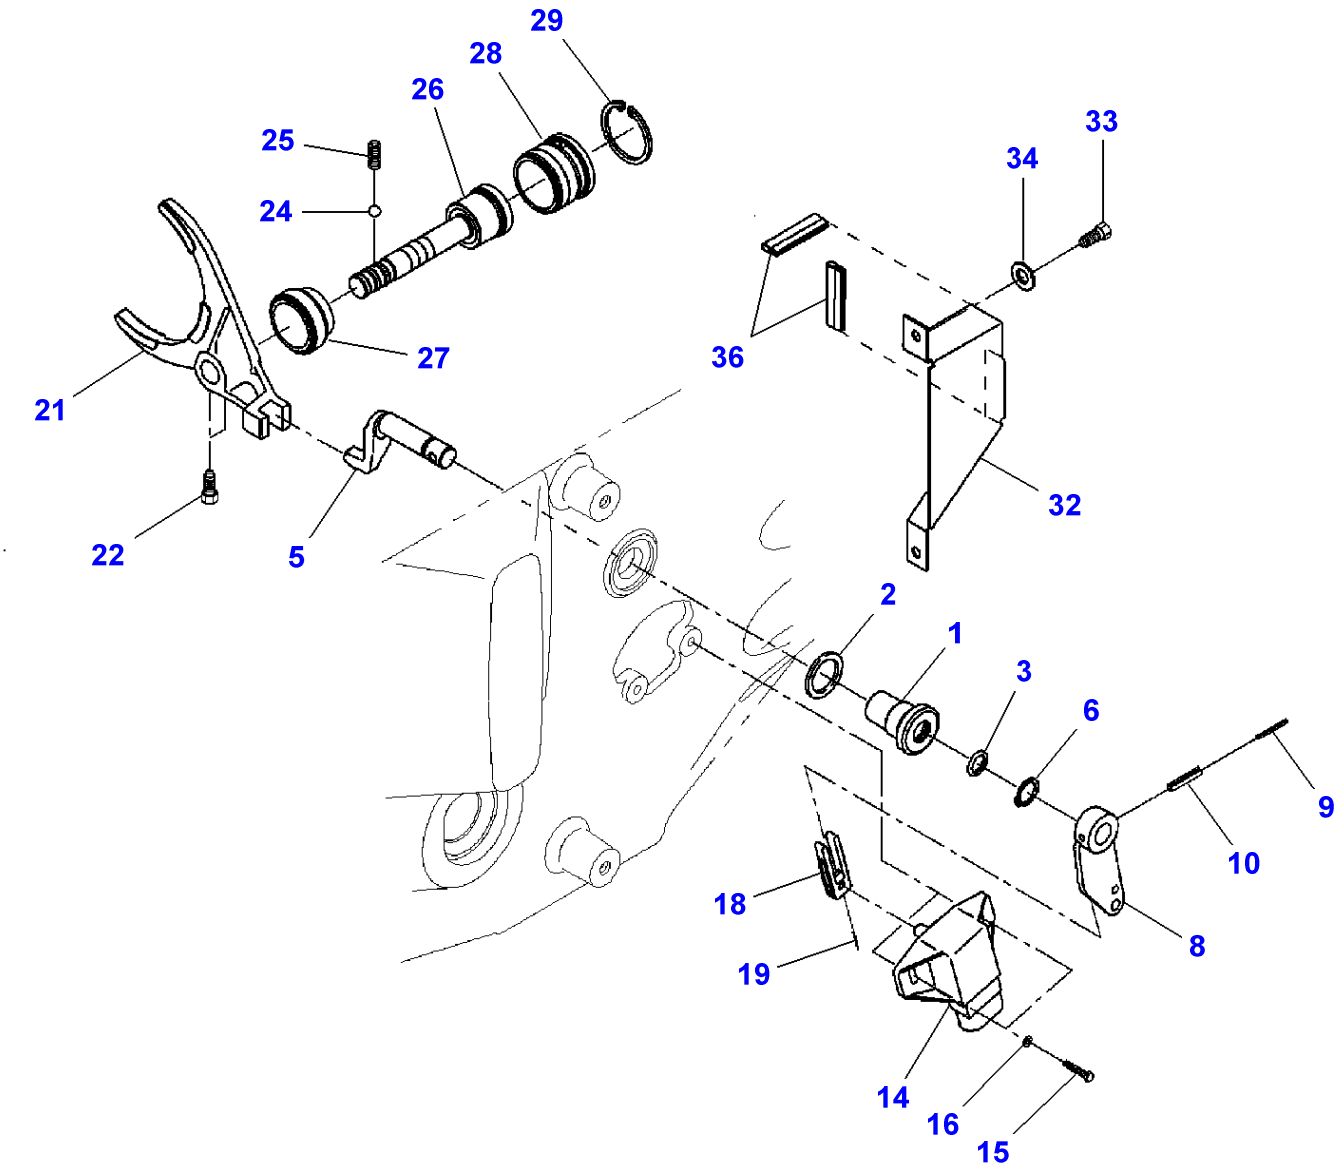


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 1 | Guide Bush | [A] |
| 2 | X540.008.278.000 | 1 | Ring | |
| 3 | X548.848.066.000 | 1 | O Ring | |
| 5 | 205.116.300.081 | 1 | Finger | |
| 6 | X530.014.446.000 | 1 | Circlip | |
| 8 | H916.101.170.010 | 1 | Lever | |
| 9 | X500.613.146.000 | 1 | Roll Pin | |
| 10 | X500.624.946.000 | 1 | Roll Pin | |
| 14 | G916.971.020.033 | 1 | Sensor | |
| 15 | X487.513.841.000 | 2 | Hex. Sock. Screw | M4 X 16 |
| 16 | X450.003.308.000 | 2 | Disc | |
| 18 | 916.101.170.020 | 1 | Driving | |
| 19 | X500.604.900.000 | 1 | Roll Pin | |
| 21 | 926.103.080.020 | 1 | Shift Fork | |
| 22 | X477.027.705.000 | 2 | Hex. Sock. Screw | M8 X 20 |
| 24 | X624.206.000.000 | 1 | Ball | |
| 25 | 012.100.090.080 | 1 | Spring | |
| 26 | 926.103.080.010 | 1 | Cylinder Rod | |
| 27 | 716.101.081.020 | 1 | Piston | |
| 28 | 716.101.081.030 | 1 | Cover | |
| 29 | X530.105.946.000 | 1 | Circlip | |
| 32 | 916.101.170.010 | 1 | Protector | |
| 33 | X490.522.300.000 | 2 | Hex. Sock. Screw | |
| 34 | X450.005.108.000 | 2 | Washer | |
| 36 | X304.285.000.000 | 1 | Protective Strip | Length 100 MM<br>1X 30 MM<br>1X 60 MM |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY

1-WG77-002-A

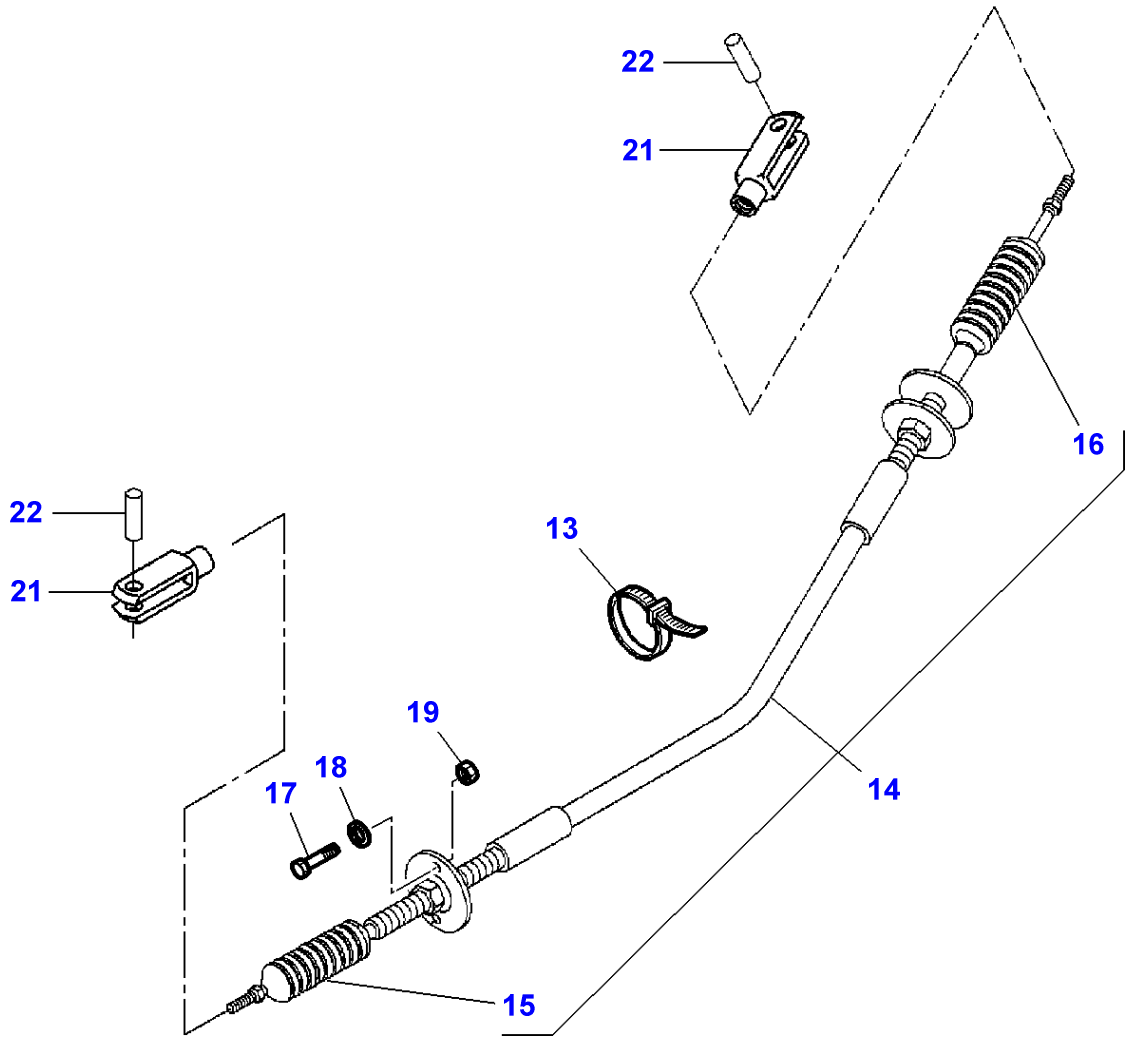


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 13 | X668.980.522.000 | 2 | Cable Tie | |
| 14 | G716.100.090.971 | 1 | Control Cable | |
| 15 | F716.100.090.010 | 1 | Bellows | (14) |
| 16 | F716.100.090.020 | 1 | Bellows | (14) |
| 17 | X487.520.441.000 | 2 | Hex. Sock. Screw | M6 X 12 |
| 18 | X521.403.047.000 | 2 | Spring Plate | |
| 19 | X428.202.239.000 | 2 | Nut | M6 |
| 21 | X410.115.601.000 | 2 | Fork Head | |
| 22 | X407.201.401.000 | 2 | Pin | |


1-WG76-002-A

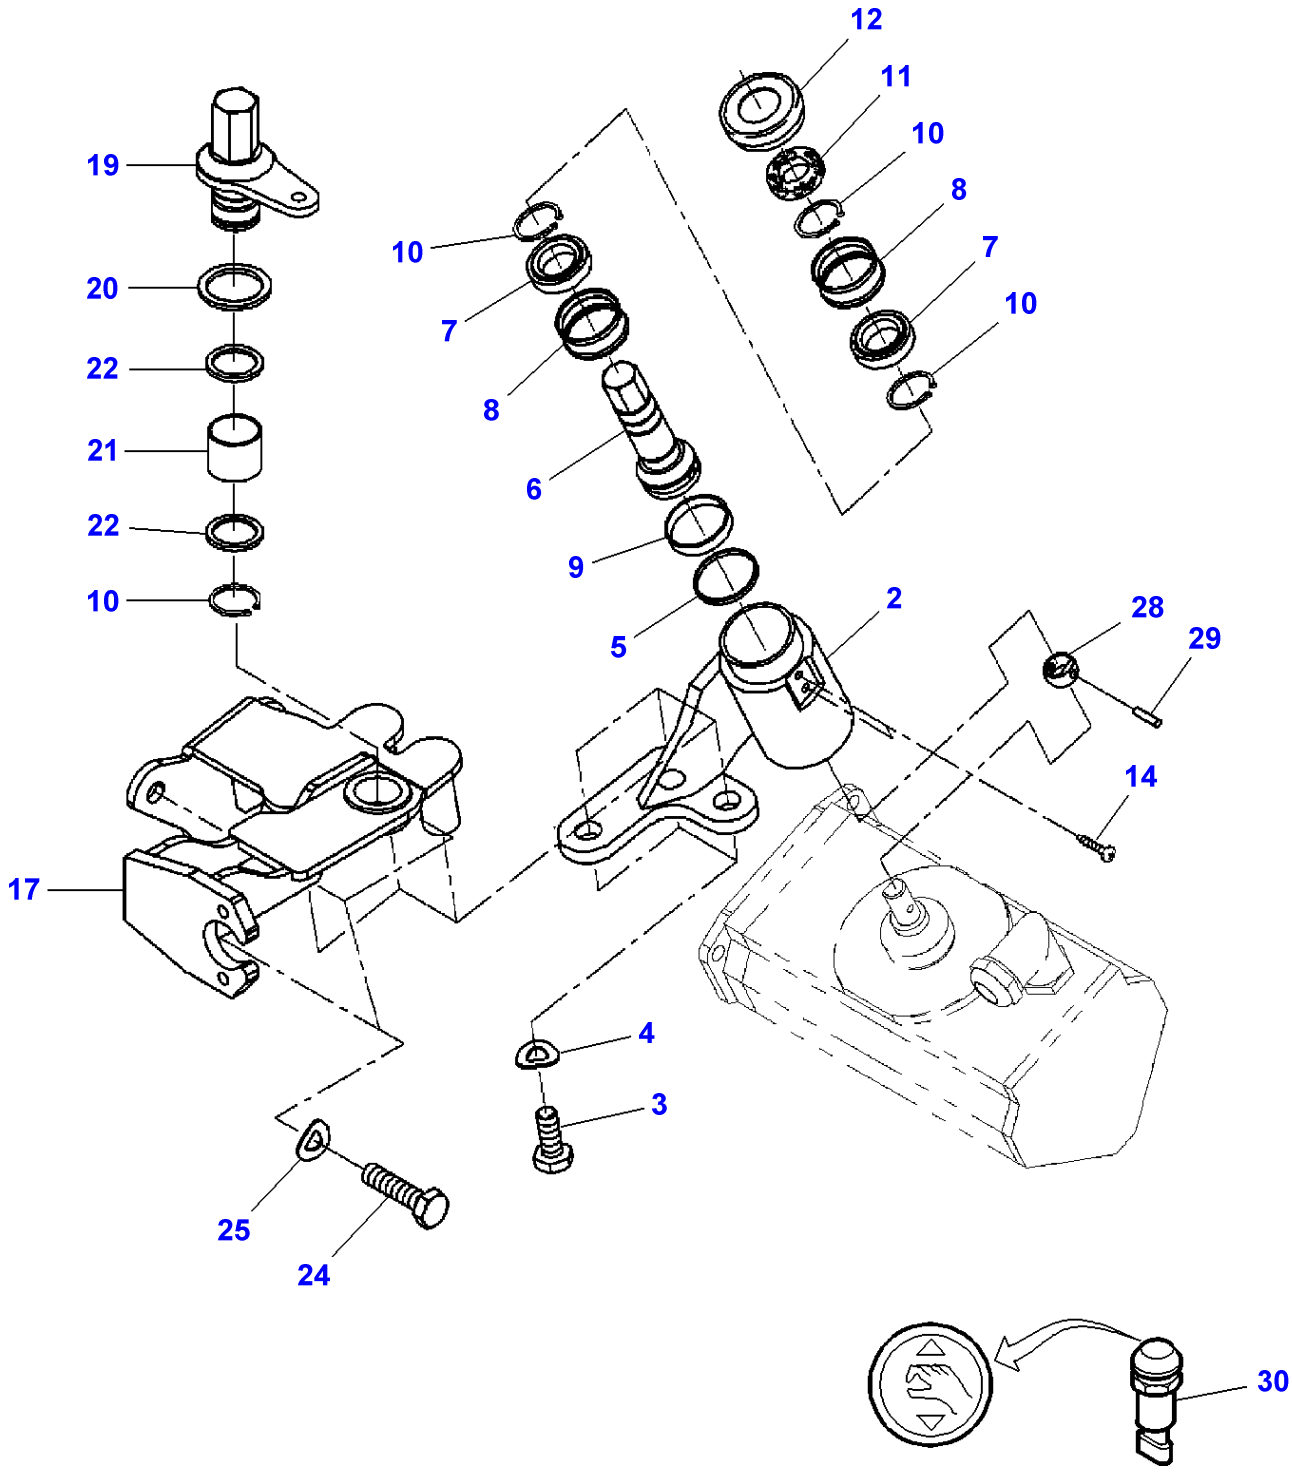

https://truckmanualshub.com/




| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 2 | 716.100.090.710 | 1 | Console | |
| 3 | X487.531.541.000 | 3 | Hex. Sock. Screw | M10 X 25 |
| 4 | X521.404.447.000 | 3 | Spring Plate | |
| 5 | X534.310.246.000 | 1 | Snapring | |
| 6 | 411.101.090.201 | 1 | Shaft | |
| 7 | X607.395.200.000 | 2 | Ball Bearing | |
| 8 | 916.100.090.250 | 2 | Ring | |
| 9 | 916.101.090.221 | 1 | Ring | |
| 10 | X530.002.746.000 | 4 | Circlip | |
| 11 | 178.100.360.050 | 1 | Ring | |
| 12 | F150.403.090.340 | 1 | Ring | |
| 14 | X490.617.400.000 | 4 | Screw | M4 X 8 |
| 17 | H903.100.090.310 | 1 | Console | |
| 19 | 716.100.090.270 | 1 | Lever | |
| 20 | 246.860.030.130 | 1 | Gasket | |
| 21 | X605.009.000.000 | 1 | Bearing Bush | |
| 22 | X534.537.246.000 | 2 | Backup Ring | |
| 24 | X487.531.741.000 | 3 | Hex. Sock. Screw | M10 X 30 |
| 25 | X521.404.447.000 | 3 | Spring Plate | |
| 28 | 716.100.090.211 | 1 | Ring | |
| 29 | X505.529.200.000 | 1 | Dowel | |
| 30 | **G716.970.160.030** | 1 | Pressure Switch | |

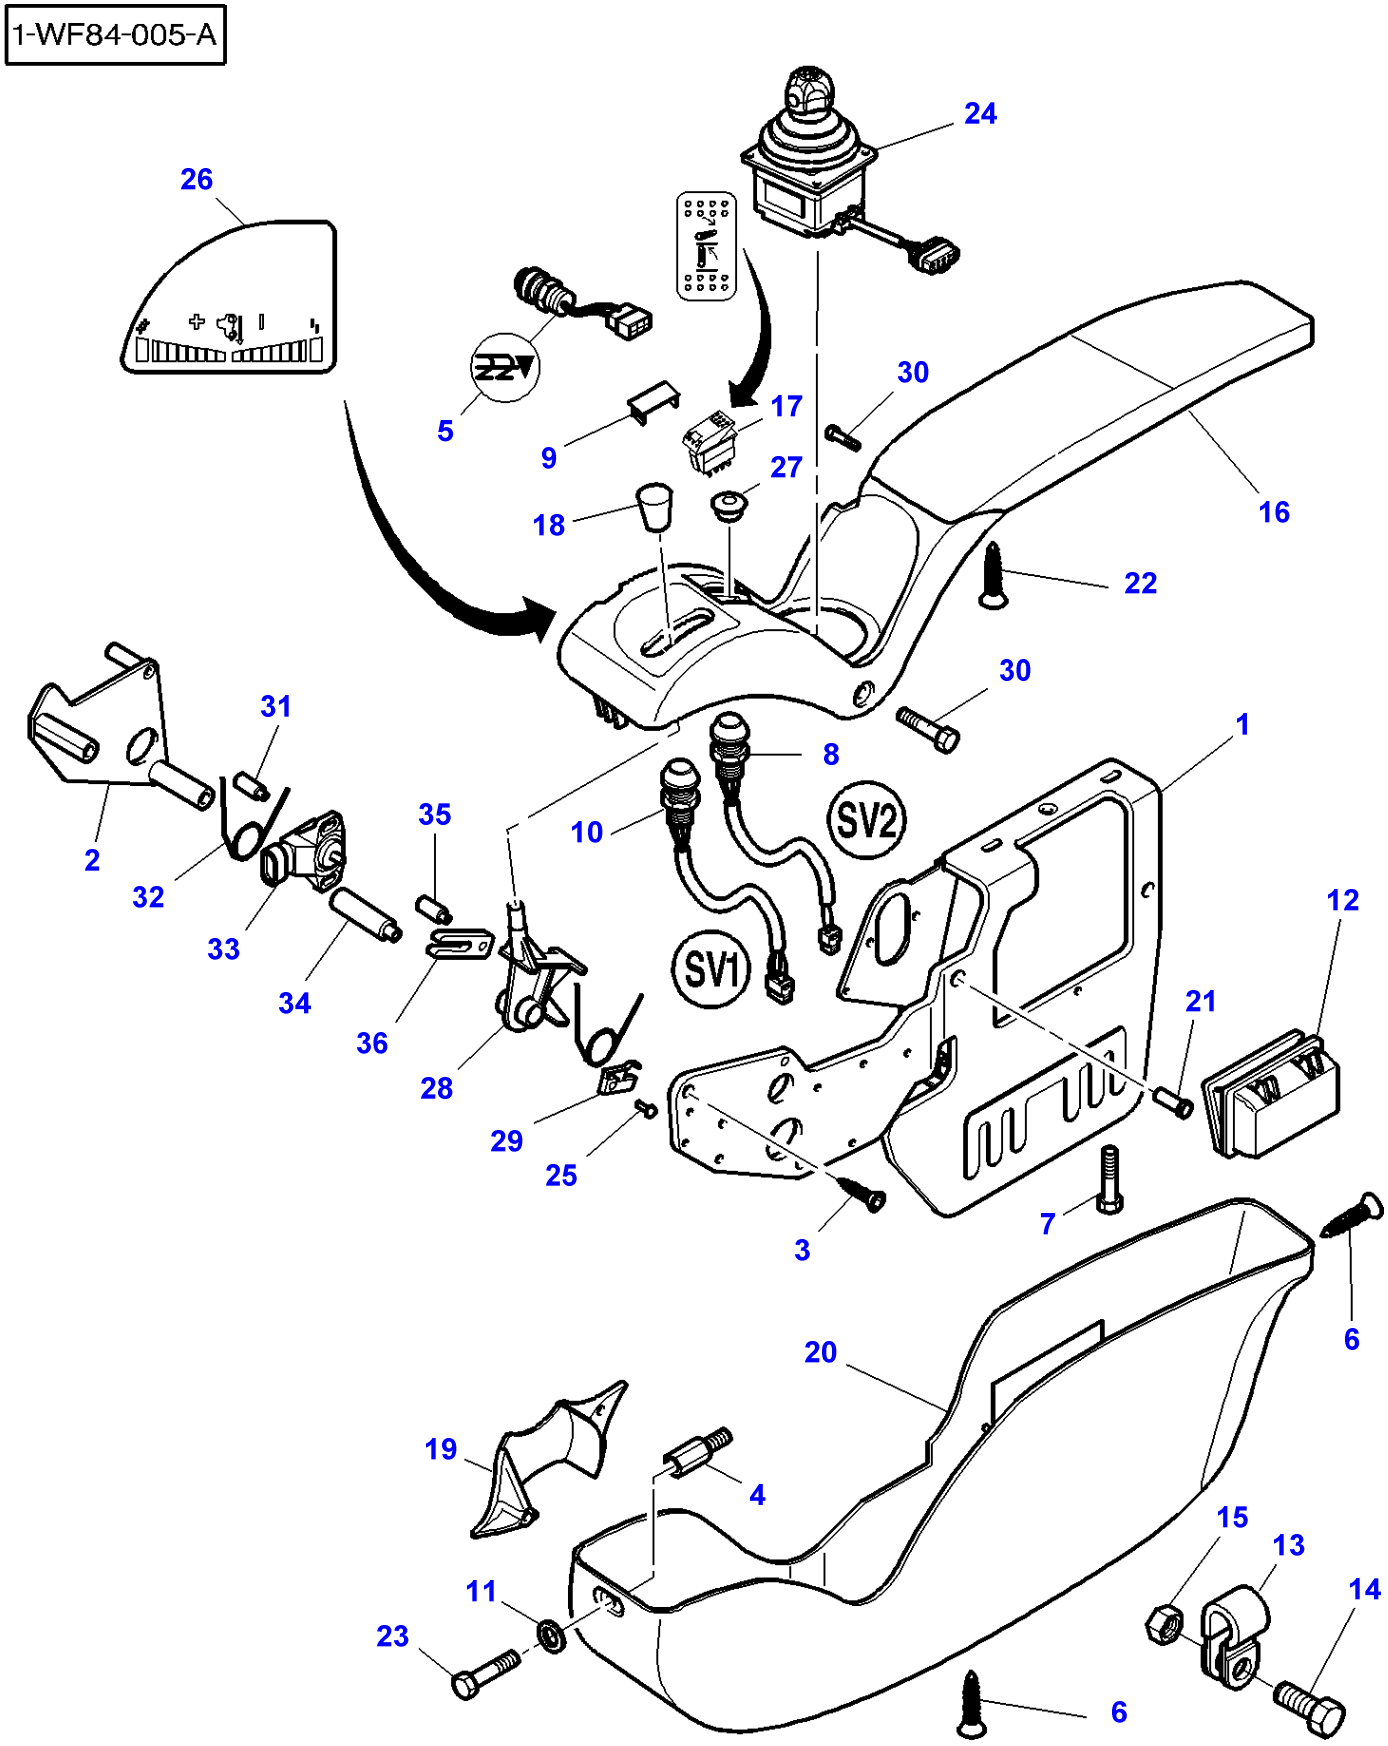
1-WF84-005-A
24
26
22V
5
9
17
30
27
18
16
22
30
31
1
8
2
10
SV2
35
32
12
33
SV1
21
34
36
28
29
25
3
7
6
20
19
4
15
13
11
14
23
6

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4270586M1 | 1 | Support | |
| 2 | 3789804M2 | 1 | Counterplate | |
| 3 | 3009439X1 | 2 | Screw | M8 X 16 |
| 4 | 3786164M1 | 1 | Spacer | |
| 5 | **4270756M2** | 1 | Switch,Indirect | |
| 6 | 3010506X1 | 2 | Screw | M5 X 16 |
| 7 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 8 | 3789802M1 | 1 | Switch,Indirect | SV 2 |
| 9 | 3713151M1 | X | Tap | |
| 10 | 3787494M1 | 1 | Switch,Indirect | SV 1 |
| 11 | 3001856X1 | 2 | Washer | Diameter 4-12 X 1,1 |
| 12 | 3781512M1 | 1 | Ashtray | |
| 13 | 3779547M1 | 1 | Clamp | Diameter 22 - M10 |
| 14 | 3009494X1 | 1 | Hex. Sock. Screw | M10 X 35 |
| 15 | 339402X1 | 1 | Nut | M10 |
| 16 | 3787499M1 | 1 | Envelope | |
| 17 | **4270970M3** | 1 | Switch,Indirect | |
| 18 | 3787495M1 | 1 | Knob | |
| 19 | 3784381M1 | 1 | Muff | |
| 20 | 4279786M92 | 1 | Cladding | |
| 21 | 3580776M1 | 1 | Nut | M5 |
| 22 | 4270255M1 | 1 | Screw | No 5 X 22 |
| 23 | 3011175X1 | 1 | Screw | M5 X 8 |
| 24 | 3785028M93 | 1 | Joystick | See Page - Reference Number 025-0100/1 |
| 25 | 3787143M1 | 2 | Screw | M3 X 8 |
| 26 | 3789803M1 | 1 | Decal | |
| 27 | 3784237M1 | 1 | Plug | |
| 28 | 4272403M2 | 1 | Support | |
| 29 | 4273509M2 | 1 | Plate | |
| 30 | 3010578X1 | 5 | Screw | M5 X 10 |
| 31 | 3789807M1 | 2 | Stop | |
| 32 | 3788452M1 | 2 | Spring | |
| 33 | **4274087M1** | 1 | Potentiometer | |
| 34 | 3784446M1 | 1 | Clevis Pin | Diameter 12 X 50 |
| 35 | 4274734M1 | 2 | Stop | |
| 36 | 411301050040 | 1 | Fork | |

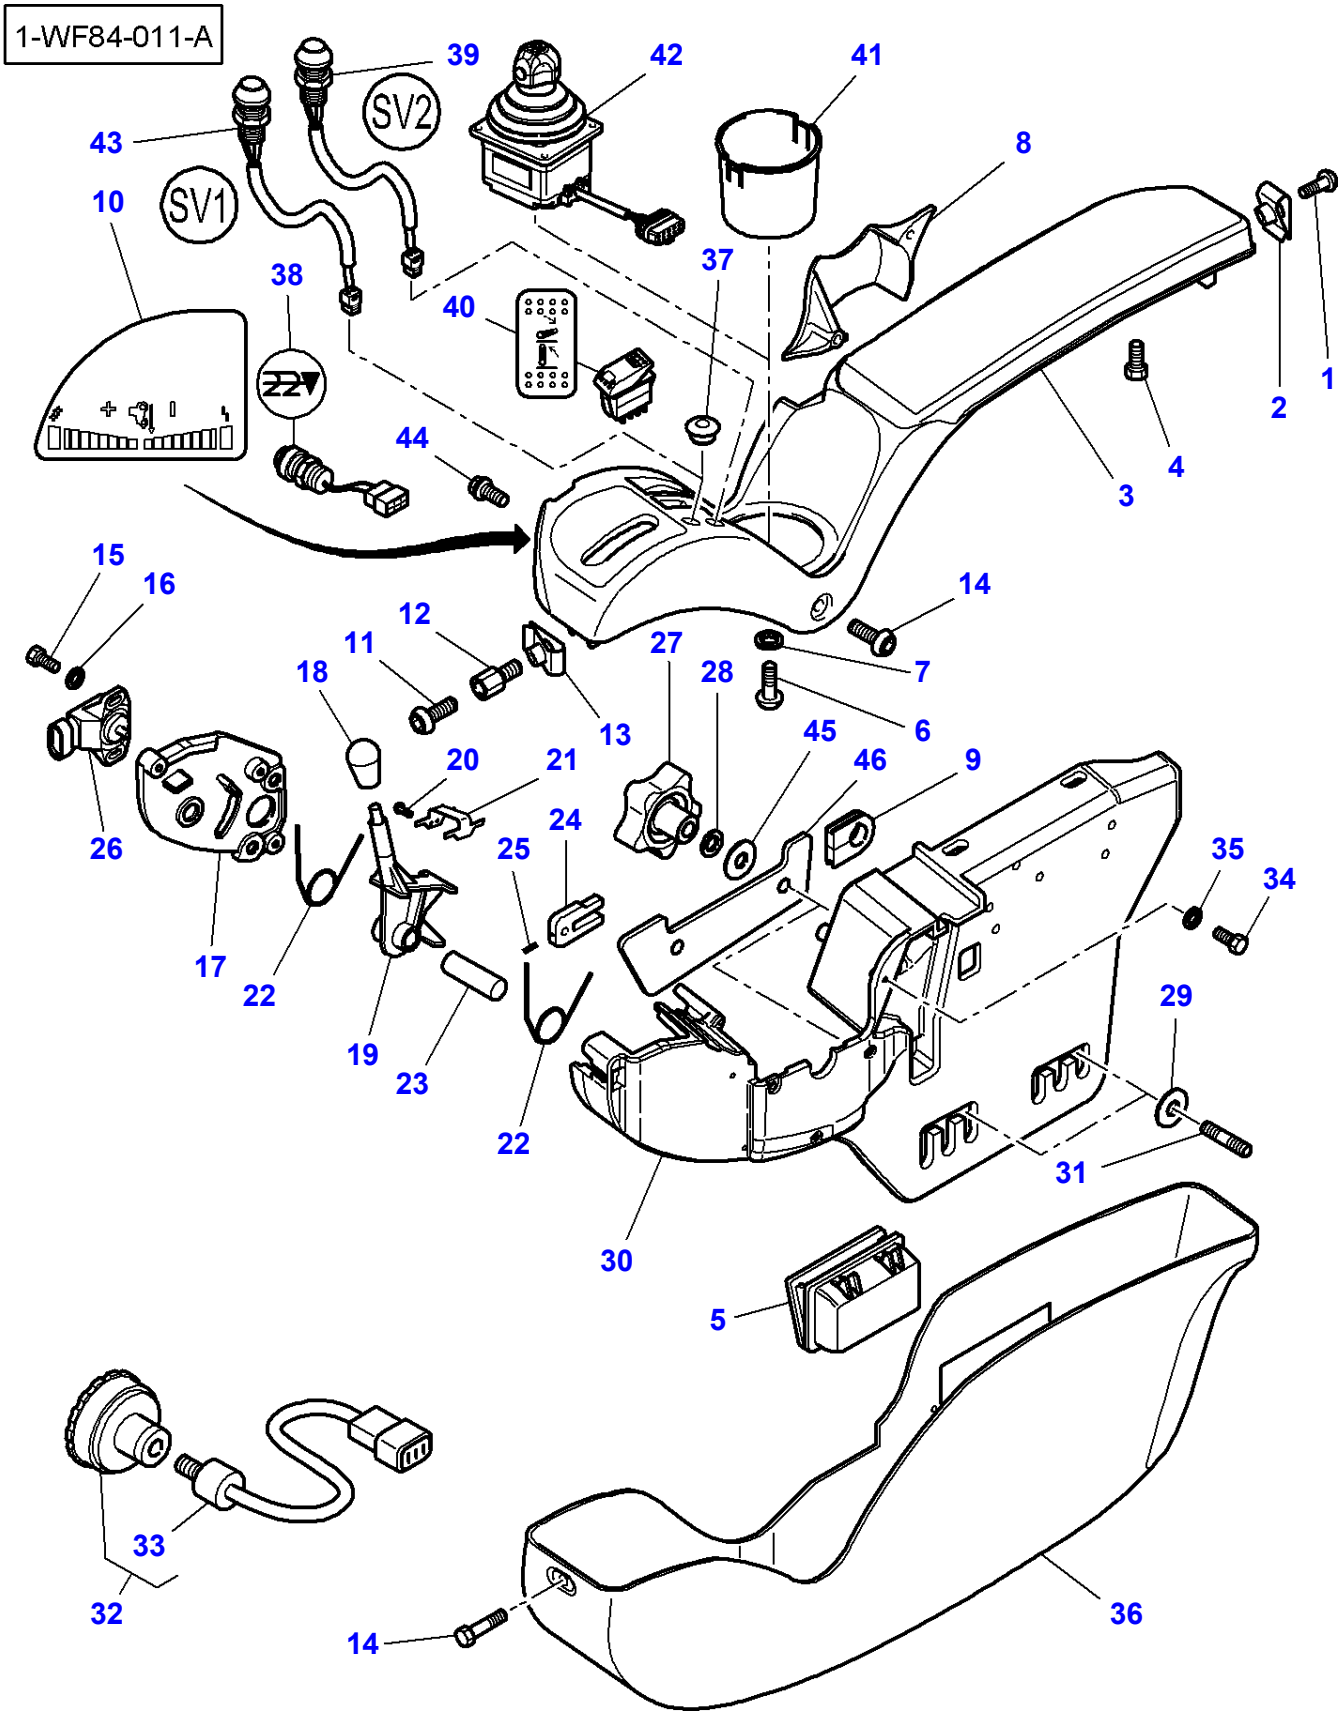
1-WF84-011-A
39
42
41
43
SV2
SV1
8
10
38
37
40
1
2
3
4
44
15
16
14
12
11
27
28
7
18
13
6
45
46
9
20
21
24
25
26
35
34
17
22
19
23
22
29
31
30
5
33
32
14
36


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Control Armrest - From P005006 Page 025-0085

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3010506X1 | 1 | Screw | M5 X 16 |
| 2 | 3715143M1 | 1 | Nut | |
| 3 | 4279032M1 | 1 | Envelope | |
| 4 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 5 | 3781512M1 | 1 | Ashtray | |
| 6 | 4270255M1 | 2 | Screw | No 5x22 |
| 7 | 3001856X1 | 2 | Washer | |
| 8 | 3784381M1 | 1 | Muff | |
| 9 | 4271408M2 | 1 | Grommet | |
| 10 | 4280225M1 | 1 | Decal | |
| 11 | 3011175X1 | 1 | Screw | M5 X 8 |
| 12 | 3786164M1 | 1 | Spacer | |
| 13 | 3715143M1 | 1 | Nut | |
| 14 | 4271132M1 | X | Screw | 3.5 x 14 |
| 15 | 3010351X1 | 2 | Screw | M4 X 12 |
| 16 | 339102X1 | 2 | Washer | |
| 17 | 4279927M1 | 1 | Plate | |
| 18 | 3787495M1 | 1 | Knob | |
| 19 | 4279874M1 | 1 | Support | |
| 20 | 3787143M1 | 2 | Screw | |
| 21 | 4273509M2 | 1 | Plate | |
| 22 | 3788452M1 | 2 | Spring | |
| 23 | 4280199M1 | 1 | Clevis Pin | |
| 24 | 4279929M1 | 1 | Fork | |
| 25 | 1442958X1 | 1 | Split Pin | Diameter 6 x 20 |
| 26 | **4274087M1** | 1 | Potentiometer | |
| 27 | 3786216M1 | 2 | Button | |
| 28 | 3778519M1 | 2 | Washer | Diameter 10-27 x 1.8 |
| 29 | 1440264X1 | 2 | Washer Metric | Diameter 10.5 x 4 |
| 30 | 4277372M1 | 1 | Support | |
| 31 | 3008483X1 | 2 | Stud | M10 X 35 |
| 32 | 4278663M2 | 1 | Potentiometer | [A] |
| 33 | 3907530M1 | 1 | Potentiometer | [A] (32) |
| 34 | 3010351X1 | 2 | Screw | M4 X 12 |
| 35 | 339102X1 | 2 | Washer | |
| 36 | 4279786M92 | 1 | Cladding | |
| 37 | 3784237M1 | 2 | Plug | |
| 38 | **4270756M2** | 1 | Switch,Indirect | |
| 39 | 3789802M1 | 1 | Switch,Indirect | SV1 |
| 40 | **4270970M3** | 1 | Switch,Indirect | |
| 41 | 3784376M1 | 1 | Support | |
| 42 | 3785028M93 | 1 | Joystick | See Page - Reference Number 025-0100/1 |
| 43 | 3787494M1 | 1 | Switch,Indirect | SV2 |
| 44 | 3010578X1 | 1 | Screw | M5 X 10 |
| 45 | | X | Not Used | |
| 46 | 4281343M1 | 1 | Reinforcement | |

**FOOTNOTE [A]** WITH AUTOTRONIC 5

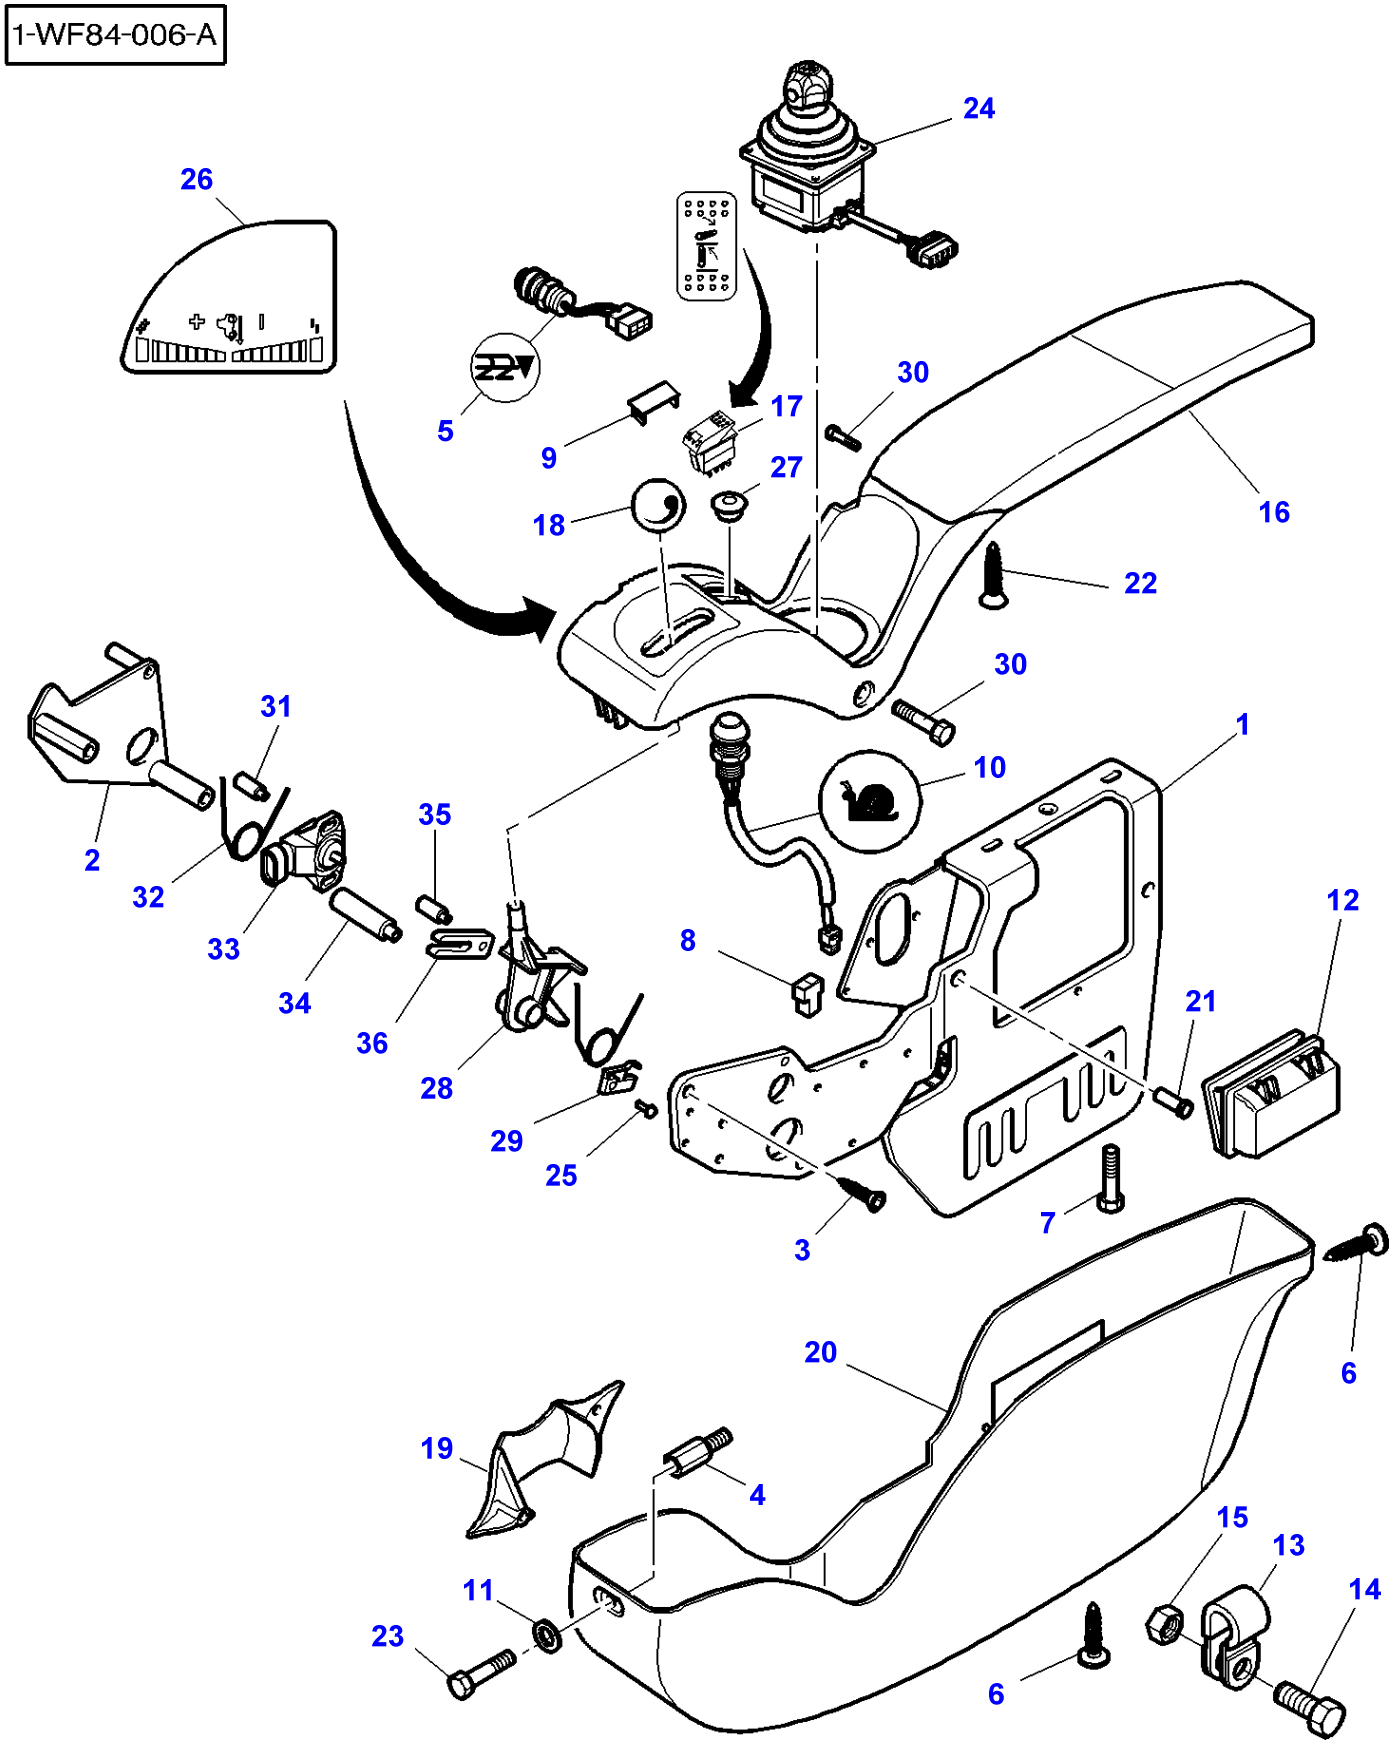
1-WF84-006-A
24
26
5
9
17
30
27
18
16
22
30
31
1
10
2
35
32
33
34
36
28
29
25
8
12
21
7
3
6
20
19
4
15
13
14
11
23
6


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Control Armrest - For Dyna-Step Tractors - United States Only Up To P005005 Page 025-0090

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4270586M1 | 1 | Support | |
| 2 | 3789804M2 | 1 | Counterplate | |
| 3 | 3009439X1 | 2 | Screw | M8 X 16 |
| 4 | 3786164M1 | 1 | Spacer | |
| 5 | **4270756M2** | 1 | Switch,Indirect | |
| 6 | 3010506X1 | 2 | Screw | M5 X 16 |
| 7 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 8 | 4275664M1 | 1 | Connectors | |
| 9 | 3713151M1 | X | Tap | |
| 10 | 4275697M1 | 1 | Switch,Indirect | |
| 11 | 3001856X1 | 2 | Washer | Diameter 4-12 X 1,1 |
| 12 | 3781512M1 | 1 | Ashtray | |
| 13 | 3779547M1 | 1 | Clamp | Diameter 22 - M10 |
| 14 | 3009494X1 | 1 | Hex. Sock. Screw | M10 X 35 |
| 15 | 339402X1 | 1 | Nut | M10 |
| 16 | 3787499M1 | 1 | Envelope | |
| 17 | **4270970M3** | 1 | Switch,Indirect | |
| 18 | 4275656M1 | 1 | Knob | |
| 19 | 3784381M1 | 1 | Muff | |
| 20 | 4279786M92 | 1 | Cladding | |
| 21 | 3580776M1 | 1 | Nut | M5 |
| 22 | 4270255M1 | 1 | Screw | No 5 X 22 |
| 23 | 3011175X1 | 1 | Screw | M5 X 8 |
| 24 | 3785028M93 | 1 | Joystick | See Page - Reference Number 025-0100/1 |
| 25 | 3787143M1 | 2 | Screw | M3 X 8 |
| 26 | 3789803M1 | 1 | Decal | |
| 27 | 3784237M1 | 1 | Plug | [E,G] |
| 28 | 4272403M2 | 1 | Support | |
| 29 | 4273509M2 | 1 | Plate | |
| 30 | 3010578X1 | 5 | Screw | M5 X 10 |
| 31 | 3789807M1 | 2 | Stop | |
| 32 | 3788452M1 | 2 | Spring | |
| 33 | **4274087M1** | 1 | Potentiometer | |
| 34 | 3784446M1 | 1 | Clevis Pin | Diameter 12 X 50 |
| 35 | 4274734M1 | 2 | Stop | |
| 36 | 411301050040 | 1 | Fork | |

**FOOTNOTE [A]** WITHOUT HYDRAULIC LIFT
**FOOTNOTE [E]** WITHOUT JOYSTICK
**FOOTNOTE [G]** BLACK

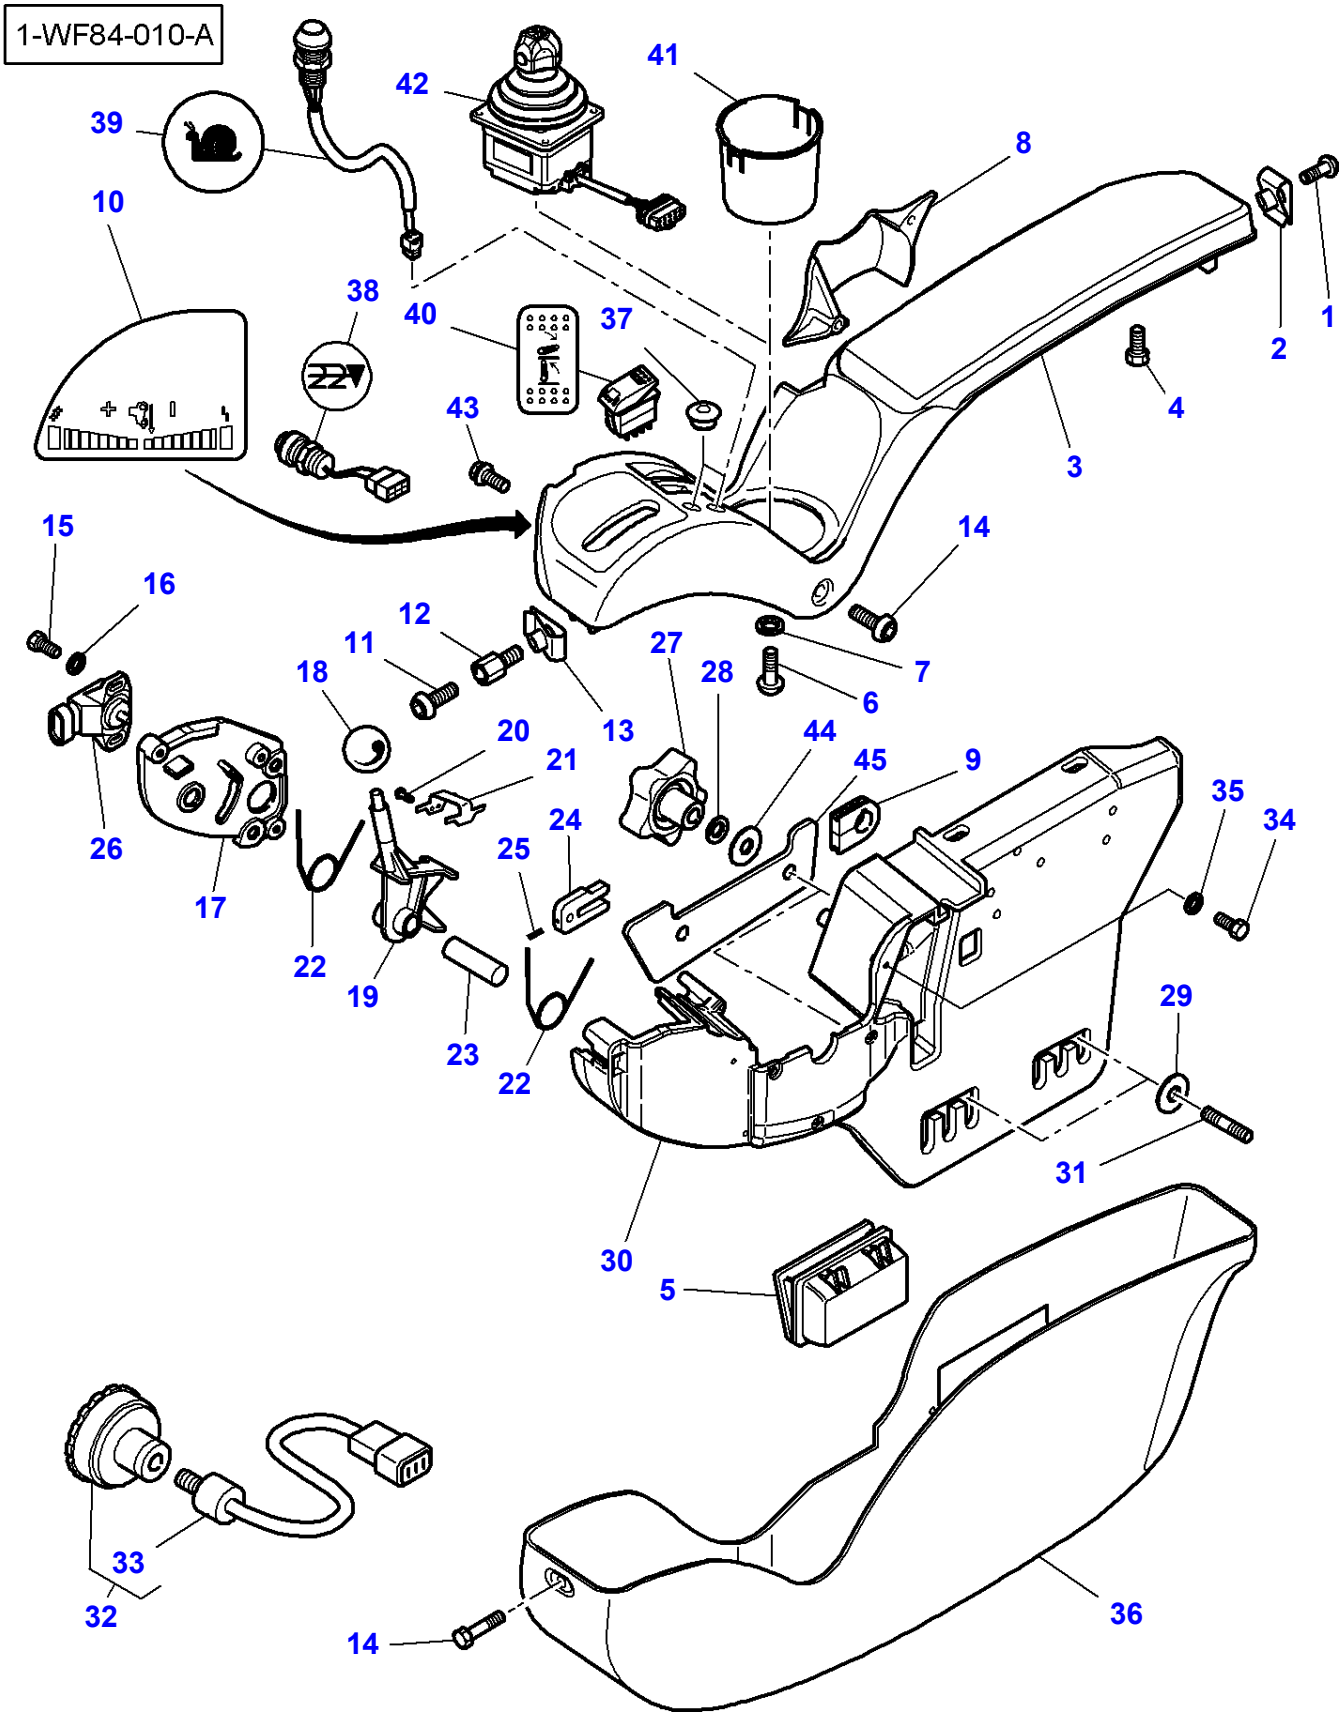
1-WF84-010-A
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Control Armrest - For Dyna-Step Tractors - United States Only Fr om P005006 Page 025-0095

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3010506X1 | 1 | Screw | M5 X 16 |
| 2 | 3715143M1 | 1 | Nut | |
| 3 | 4279032M1 | 1 | Envelope | |
| 4 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 5 | 3781512M1 | 1 | Ashtray | |
| 6 | 4270255M1 | 2 | Screw | No 5x22 |
| 7 | 3001856X1 | 2 | Washer | |
| 8 | 3784381M1 | 1 | Muff | |
| 9 | 4271408M2 | 1 | Grommet | |
| 10 | 4280225M1 | 1 | Decal | |
| 11 | 3011175X1 | 1 | Screw | M5 X 8 |
| 12 | 3786164M1 | 1 | Spacer | |
| 13 | 3715143M1 | 1 | Nut | |
| 14 | 4271132M1 | X | Screw | 3.5 x 14 |
| 15 | 3010351X1 | 2 | Screw | M4 X 12 |
| 16 | 339102X1 | 2 | Washer | |
| 17 | 4279927M1 | 1 | Plate | |
| 18 | 4275656M1 | 1 | Knob | |
| 19 | 4279874M1 | 1 | Support | |
| 20 | 3787143M1 | 2 | Screw | |
| 21 | 4273509M2 | 1 | Plate | |
| 22 | 3788452M1 | 2 | Spring | |
| 23 | 4280199M1 | 1 | Clevis Pin | |
| 24 | 4279929M1 | 1 | Fork | |
| 25 | 1442958X1 | 1 | Split Pin | Diameter 6 x 20 |
| 26 | **4274087M1** | 1 | Potentiometer | |
| 27 | 3786216M1 | 2 | Button | |
| 28 | 3778519M1 | 2 | Washer | Diameter 10-27 x 1.8 |
| 29 | 1440264X1 | 2 | Washer Metric | Diameter 10.5 x 4 |
| 30 | 4277372M1 | 1 | Support | |
| 31 | 3008483X1 | 2 | Stud | M10 X 35 |
| 32 | 4278663M2 | 1 | Potentiometer | [A] |
| 33 | 3907530M1 | 1 | Potentiometer | [A] (32) |
| 34 | 3010351X1 | 2 | Screw | M4 X 12 |
| 35 | 339102X1 | 2 | Washer | |
| 36 | 4279786M92 | 1 | Cladding | |
| 37 | 3784237M1 | 2 | Plug | |
| 38 | **4270756M2** | 1 | Switch,Indirect | |
| 39 | 4275697M1 | 1 | Switch,Indirect | |
| 40 | **4270970M3** | 1 | Switch,Indirect | |
| 41 | 3784376M1 | 1 | Support | |
| 42 | 3785028M93 | 1 | Joystick | See Page - Reference Number 025-0100/1 |
| 43 | 3010578X1 | 1 | Screw | M5 X 10 |
| 44 | | X | Not Used | |
| 45 | 4281343M1 | 1 | Reinforcement | |

**FOOTNOTE [A]** WITH AUTOTRONIC 5

1-WP20-003-B

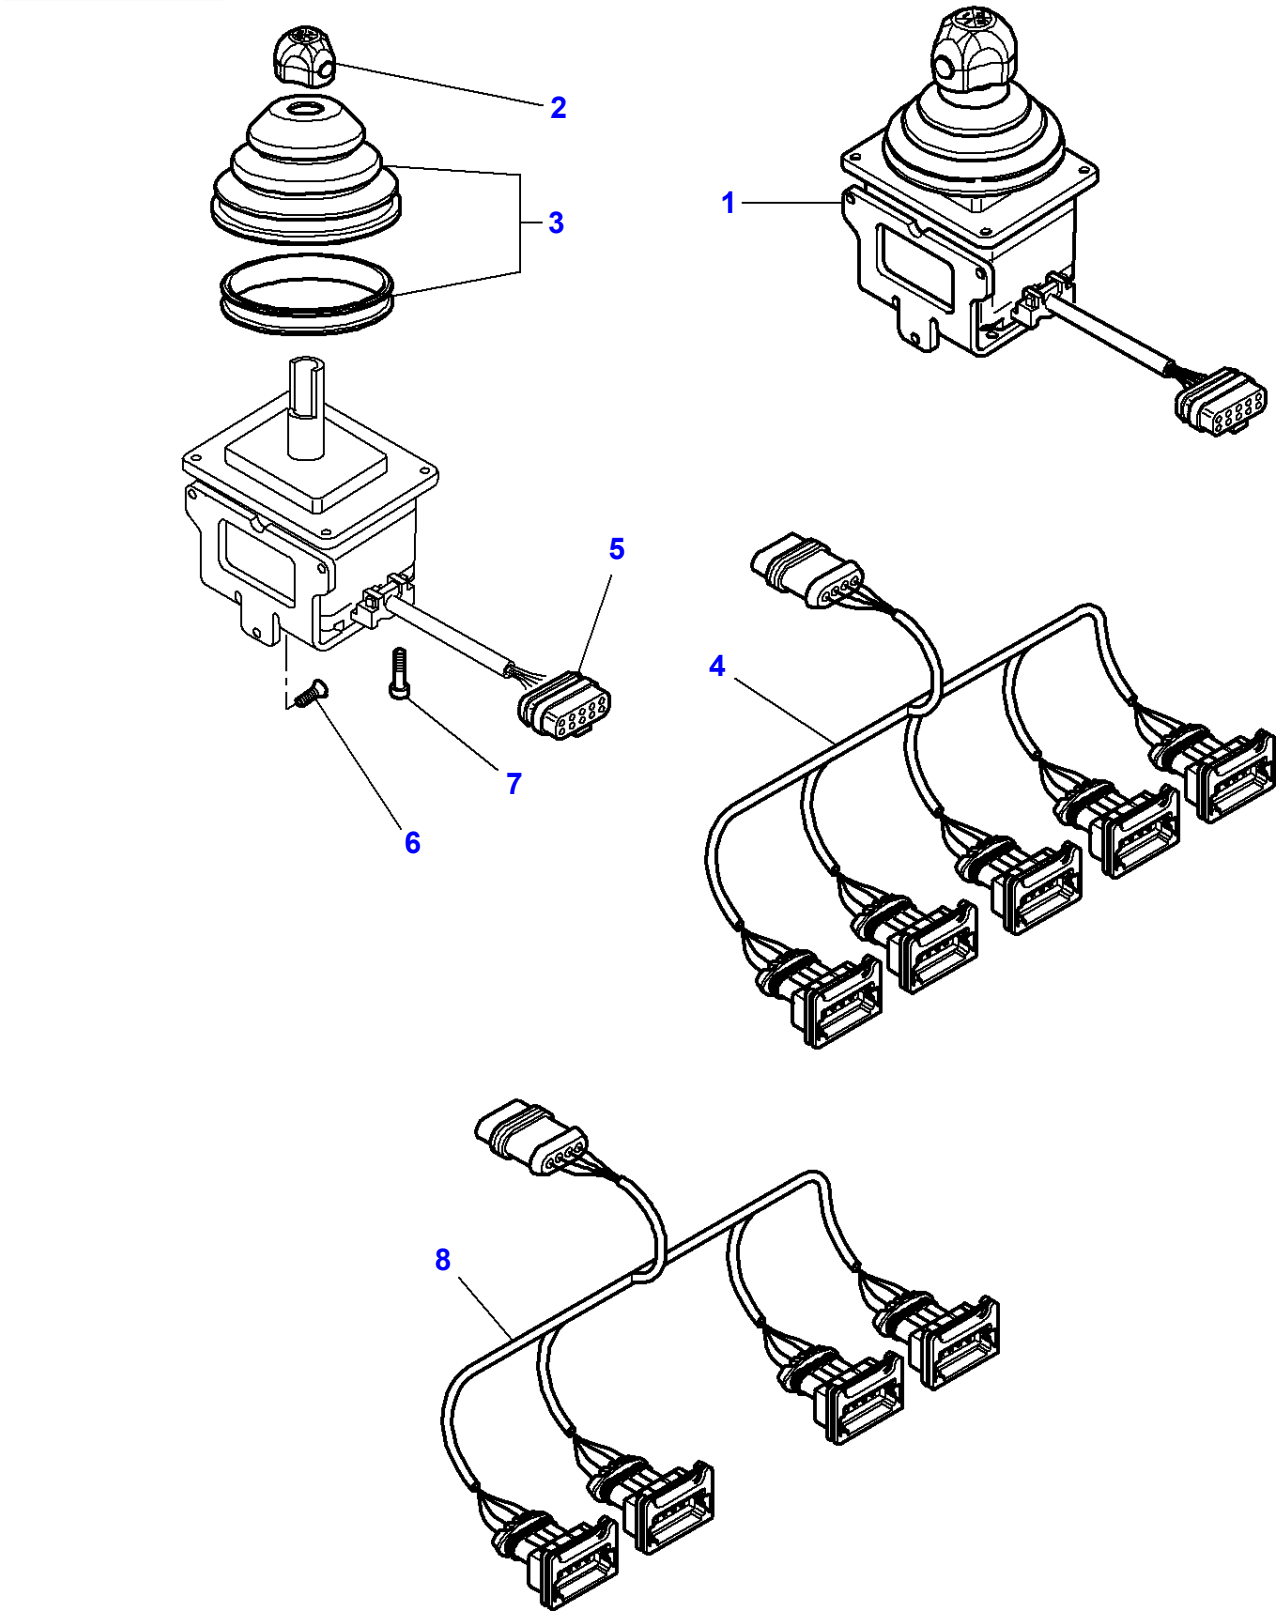


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3785028M93 | 1 | Joystick | |
| 2 | 3903673M91 | 1 | Shell | (1) |
| 3 | 3903672M91 | 1 | Bellows | (1) |
| 4 | 4277733M91 | 1 | Harness | [B] |
| 5 | 3902473M1 | 1 | Connectors | (1) |
| 6 | 3011000X1 | 3 | Screw | M5 X 12 |
| 7 | 3010354X1 | 4 | Screw | M4 X 25 |
| 8 | 4271167M2 | 1 | Harness | [A] |

**FOOTNOTE [A]** 4 DISTRIBUTORS WITH ELECTRIC CONTROL
**FOOTNOTE [B]** 5 DISTRIBUTORS WITH ELECTRIC CONTROL

1-WG28-012-C

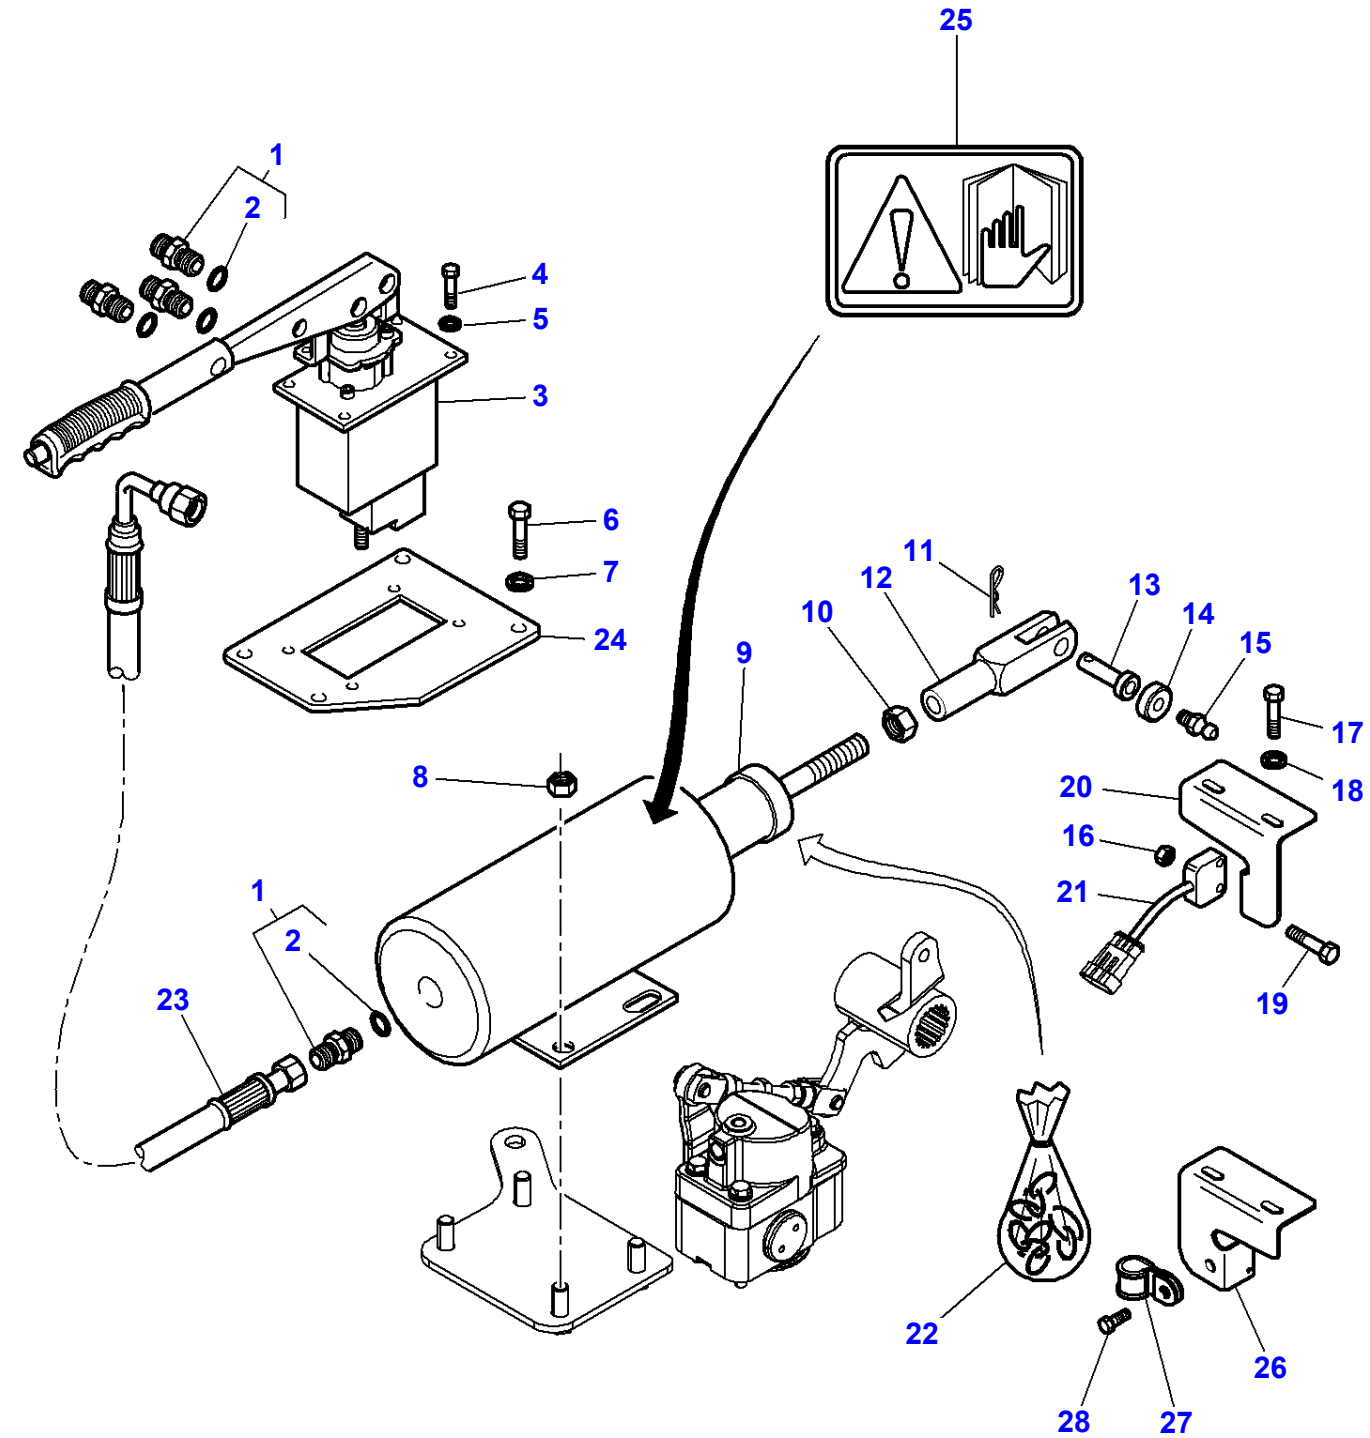


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3011038X91 | 4 | Union | |
| 2 | 338762X1 | 1 | Seal | (1) |
| 3 | 4274587M91 | 1 | Lever | |
| 4 | 339560X1 | 4 | Hex. Sock. Screw | M6 X 16 |
| 5 | 3019571X1 | 4 | Washer | |
| 6 | 339761X1 | 4 | Hex. Sock. Screw | M8 X 25 |
| 7 | 390972X1 | 4 | Washer | |
| 8 | 339054X1 | 4 | Nut | |
| 9 | 3788718M1 | 1 | Ram | [A] |
| 10 | 1440231X1 | 1 | Nut Metric | |
| 11 | 1442034X1 | 1 | Split Pin | |
| 12 | 4274903M2 | 1 | Clevis | |
| 13 | 916.100.030.010 | 1 | Pin | |
| 14 | X830.120.050.000 | 1 | Magnet | |
| 15 | 3019880X1 | 1 | Screw Metric | M4 X 12 |
| 16 | 1443615X1 | 2 | Nut Metric | |
| 17 | 3011539X1 | 2 | Screw | M6 X 3-13 |
| 18 | 390971X1 | 2 | Washer | |
| 19 | 1442172X1 | 2 | Hex. Sock. Screw | M4 X 16 |
| 20 | 916.100.030.020 | 1 | Holder | Up to Serial or Engine Number 30-JAN-2005 |
| 21 | H312.900.150.010 | 1 | Solenoid Switch | |
| 22 | 3907421M91 | 1 | Kit,Joint/Gasket | |
| 23 | 4276153M1 | 1 | Hydr. Hose | Length 550MM |
| 24 | 4276681M1 | 1 | Support | |
| 25 | 4278652M1 | 1 | Decal | |
| 26 | 4280936M1 | 1 | Support | From Serial or Engine Number 31-JAN-2005 |
| 27 | 3581424M1 | 1 | Clip | From Serial or Engine Number 31-JAN-2005 |
| 28 | 339228X1 | 1 | Hex. Sock. Screw | M8 X 12<br>From Serial or Engine Number 31-JAN-2005 |

**FOOTNOTE [A]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

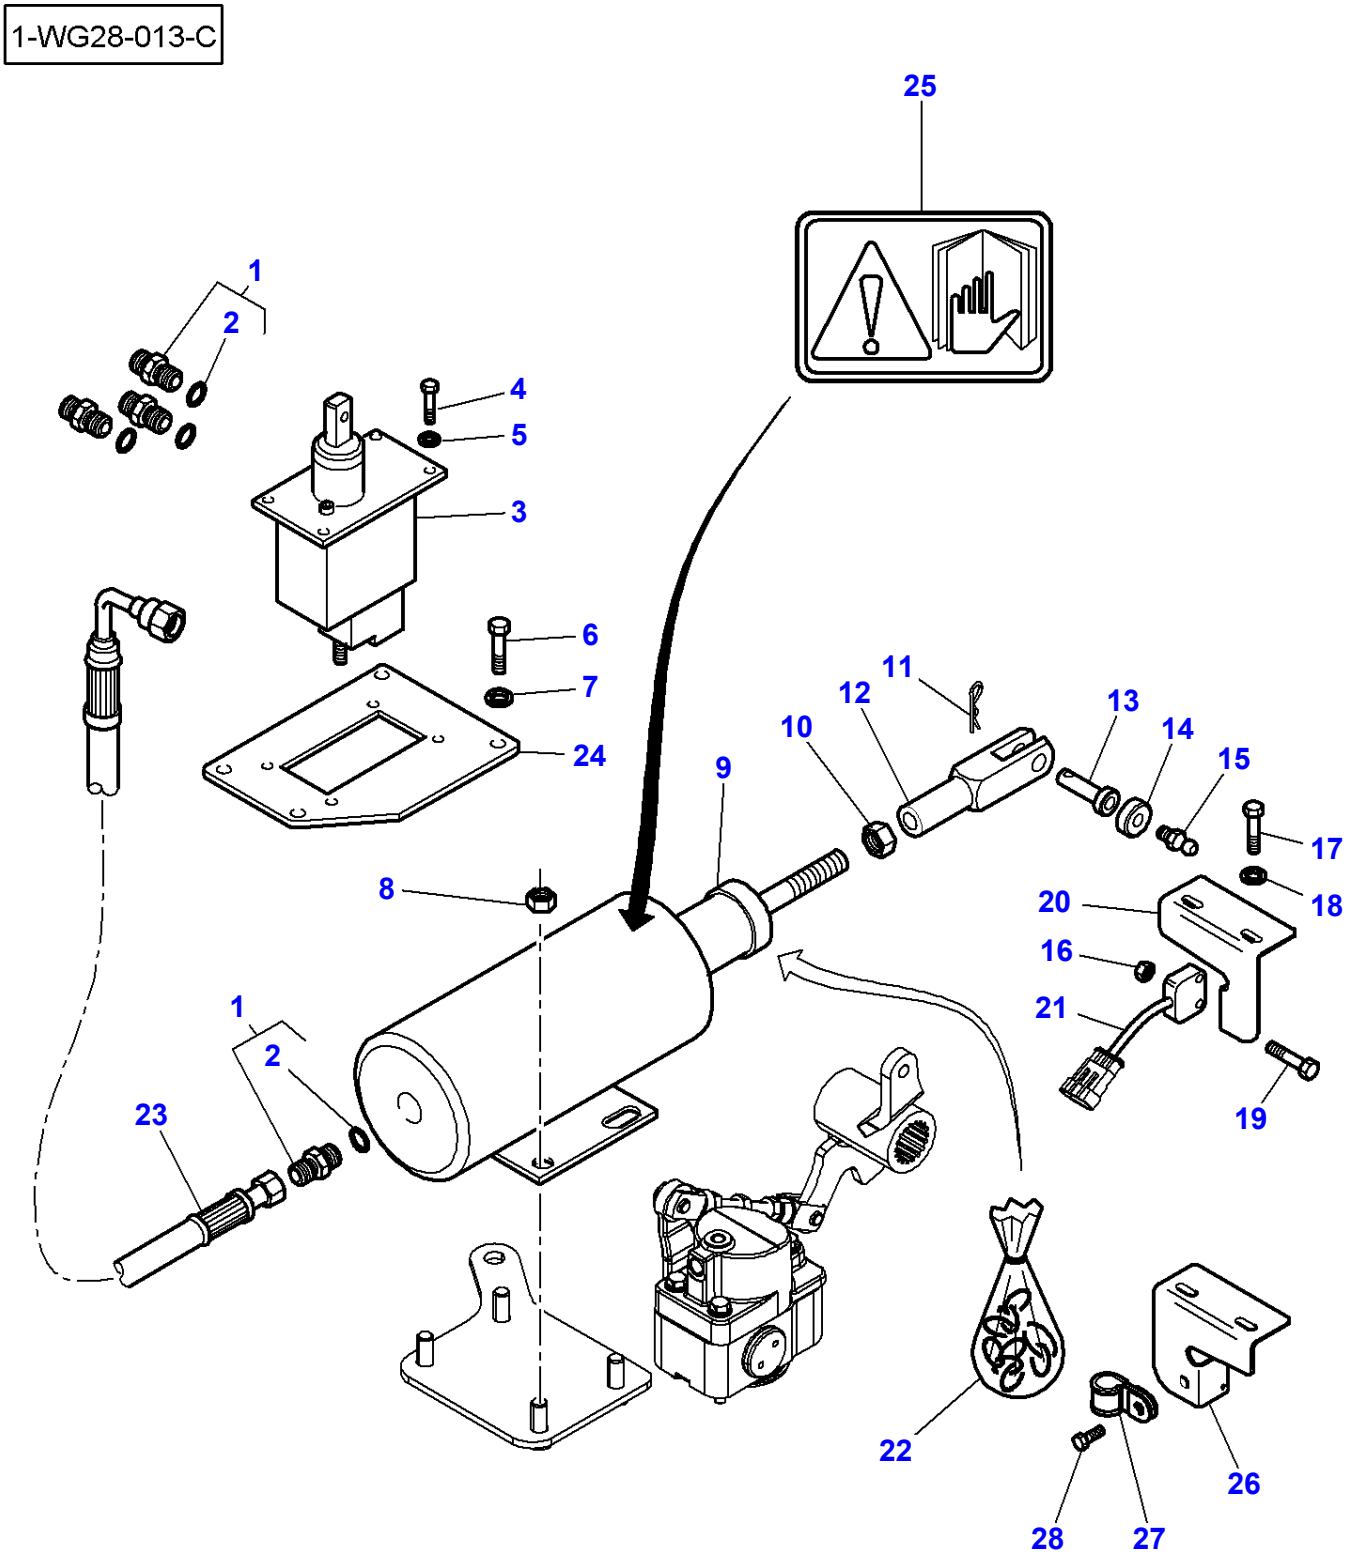
1-WG28-013-C
25
1
2
4
5
3
6
7
24
11
12
10
13
14
15
9
17
18
8
20
16
21
1
2
23
19
22
26
28
27


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3011038X91 | 4 | Union | |
| 2 | 338762X1 | 1 | Seal | (1) |
| 3 | 4276982M91 | 1 | Block | |
| 4 | 339560X1 | 4 | Hex. Sock. Screw | M6 X 16 |
| 5 | 3019571X1 | 4 | Washer | |
| 6 | 339761X1 | 4 | Hex. Sock. Screw | M8 X 25 |
| 7 | 390972X1 | 4 | Washer | |
| 8 | 339054X1 | 4 | Nut | |
| 9 | 3788718M1 | 1 | Ram | [A] |
| 10 | 1440231X1 | 1 | Nut Metric | |
| 11 | 1442034X1 | 1 | Split Pin | |
| 12 | 4274903M2 | 1 | Clevis | |
| 13 | 916.100.030.010 | 1 | Pin | |
| 14 | X830.120.050.000 | 1 | Magnet | |
| 15 | 3019880X1 | 1 | Screw Metric | M4 X 12 |
| 16 | 1443615X1 | 2 | Nut Metric | |
| 17 | 3011539X1 | 2 | Screw | M6 X 3-13 |
| 18 | 390971X1 | 2 | Washer | |
| 19 | 1442172X1 | 2 | Hex. Sock. Screw | M4 X 16 |
| 20 | 916.100.030.020 | 1 | Holder | Up to Serial or Engine Number 30-AVR-2005 |
| 21 | H312.900.150.010 | 1 | Solenoid Switch | |
| 22 | 3907421M91 | 1 | Kit,Joint/Gasket | |
| 23 | 4276153M1 | 1 | Hydr. Hose | Length 550MM |
| 24 | 4276681M1 | 1 | Support | |
| 25 | 4278652M1 | 1 | Decal | |
| 26 | 4280936M1 | 1 | Support | From Serial or Engine Number 31-JAN-2005 |
| 27 | 3581424M1 | 1 | Clip | From Serial or Engine Number 31-JAN-2005 |
| 28 | 339228X1 | 1 | Hex. Sock. Screw | M8 X 12<br>From Serial or Engine Number 31-JAN-2005 |

**FOOTNOTE [A]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

1-WG28-011-A

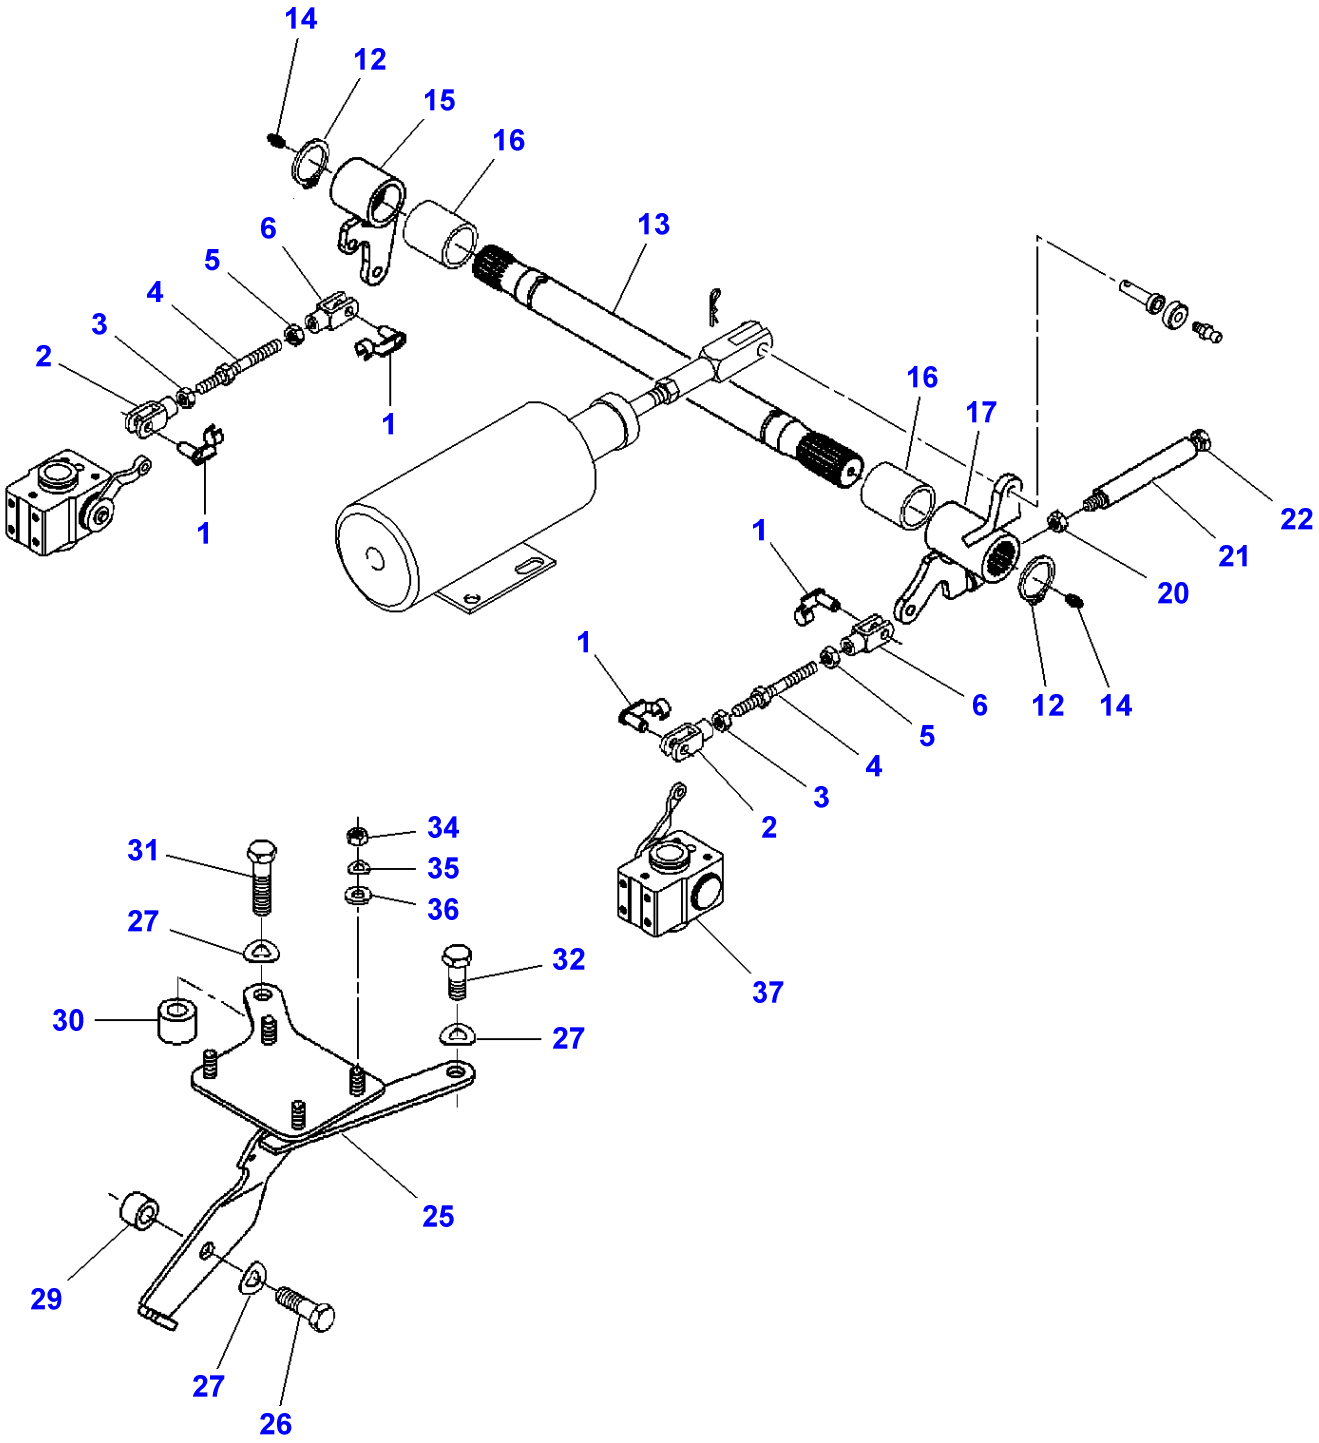
14
12
15
16
13
6
5
4
3
2
1
1
16
17
22
21
20
1
1
6
12
14
5
4
3
2
37
34
35
36
31
27
32
30
27
25
29
27
26


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X407.202.001.000 | 4 | Pin | |
| 2 | X410.124.605.000 | 2 | Fork Head | |
| 3 | X428.202.839.000 | 2 | Nut | |
| 4 | H926.150.030.020 | 2 | Threaded Part | |
| 5 | X428.202.739.000 | 2 | Nut | M10 |
| 6 | X410.125.801.000 | 2 | Fork Head | |
| 12 | X530.004.246.000 | 2 | Circlip | Diameter 34 X 1,5 |
| 13 | 822.100.030.040 | 1 | Shaft | [A] |
| 14 | X662.516.200.000 | 2 | Grease Nipple | |
| 15 | H822.100.030.030 | 1 | Lever | |
| 16 | 155.302.010.110 | 2 | Bush | |
| 17 | H822.100.030.020 | 1 | Lever | |
| 20 | X434.103.240.000 | 1 | Nut | M12 |
| 21 | X591.202.101.000 | 1 | Hose | Length 0,10 M |
| 22 | X487.537.500.000 | 1 | Hex. Sock. Screw | M12 X 150 |
| 25 | H926.150.030.060 | 1 | Bearing Plate | |
| 26 | X487.545.441.000 | 1 | Hex. Sock. Screw | M16 X 50 |
| 27 | X521.406.647.000 | 3 | Spring Plate | |
| 29 | 138.715.140.010 | 1 | Distance Piece | |
| 30 | 205.800.580.030 | 1 | Bush | |
| 31 | X487.545.902.000 | 1 | Hex. Sock. Screw | M16 X 65 |
| 32 | X487.545.241.000 | 1 | Hex. Sock. Screw | M6 X 40 |
| 34 | X428.203.239.000 | 4 | Nut | M12 |
| 35 | X521.405.047.000 | 4 | Spring Plate | |
| 36 | X453.608.408.000 | 2 | Disc | |
| 37 | | 1 | Wheel Cylinder | See Page - Reference Number 070-0050/36 |

**FOOTNOTE [A]** ORDER + X662 516 200 000 (X2)

1-WE70-005-A

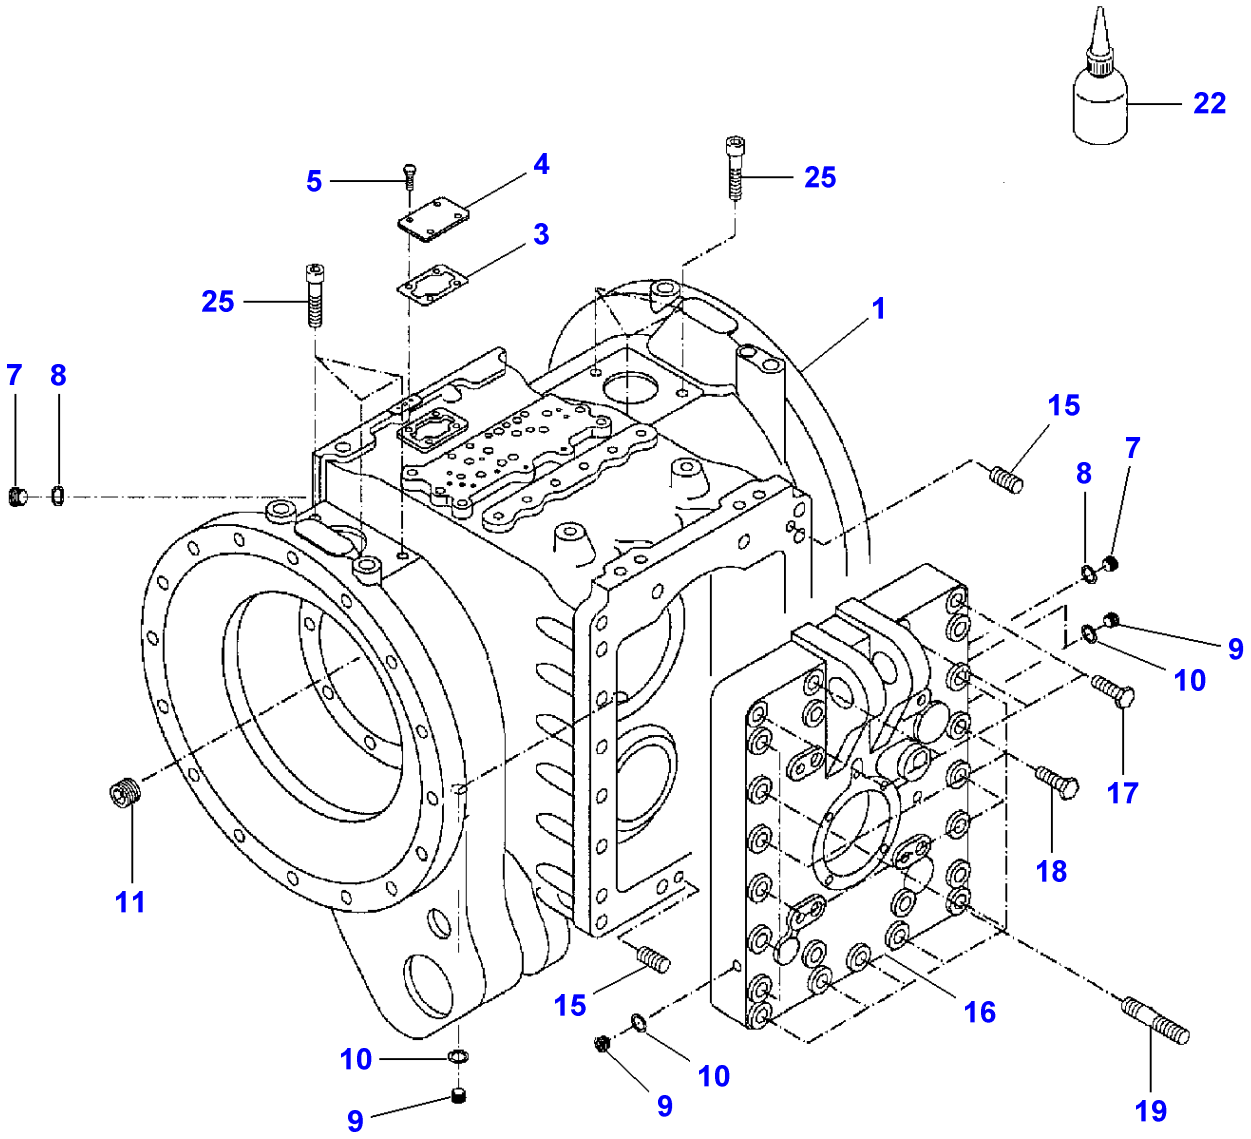


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 926.150.050.013 | 1 | Axle Housing | |
| 3 | 822.100.050.140 | 1 | Gasket | |
| 4 | 822.100.050.130 | 1 | Cover | |
| 5 | X487.526.841.000 | 4 | Hex. Sock. Screw | M8 X 16 |
| 7 | X483.800.401.000 | 2 | Screw | M12 X 1,5 |
| 8 | X540.003.678.000 | 2 | Ring | |
| 9 | X483.800.000.000 | 5 | Screw | M10 X 1 |
| 10 | X540.003.078.000 | 5 | Ring | |
| 11 | X483.500.800.000 | 2 | Screw | M14 X 1,5 |
| 15 | X505.578.900.000 | 2 | Dowel | M6 X 32 |
| 16 | 926.150.050.020 | 1 | Cover | [A] |
| 17 | X487.551.400.000 | 4 | Hex. Sock. Screw | M18 X 90 |
| 18 | X486.551.706.000 | 9 | Hex. Sock. Screw | M18 X 110 |
| 19 | X482.953.200.000 | 8 | Stud | M18 X 130 |
| 22 | X903.050.074.000 | X | Loctite | |
| 25 | X485.013.605.000 | 6 | Hex. Sock. Screw | |

**FOOTNOTE [A]** ORDER + X505 578 900 (X2)

1-WE71-002-A

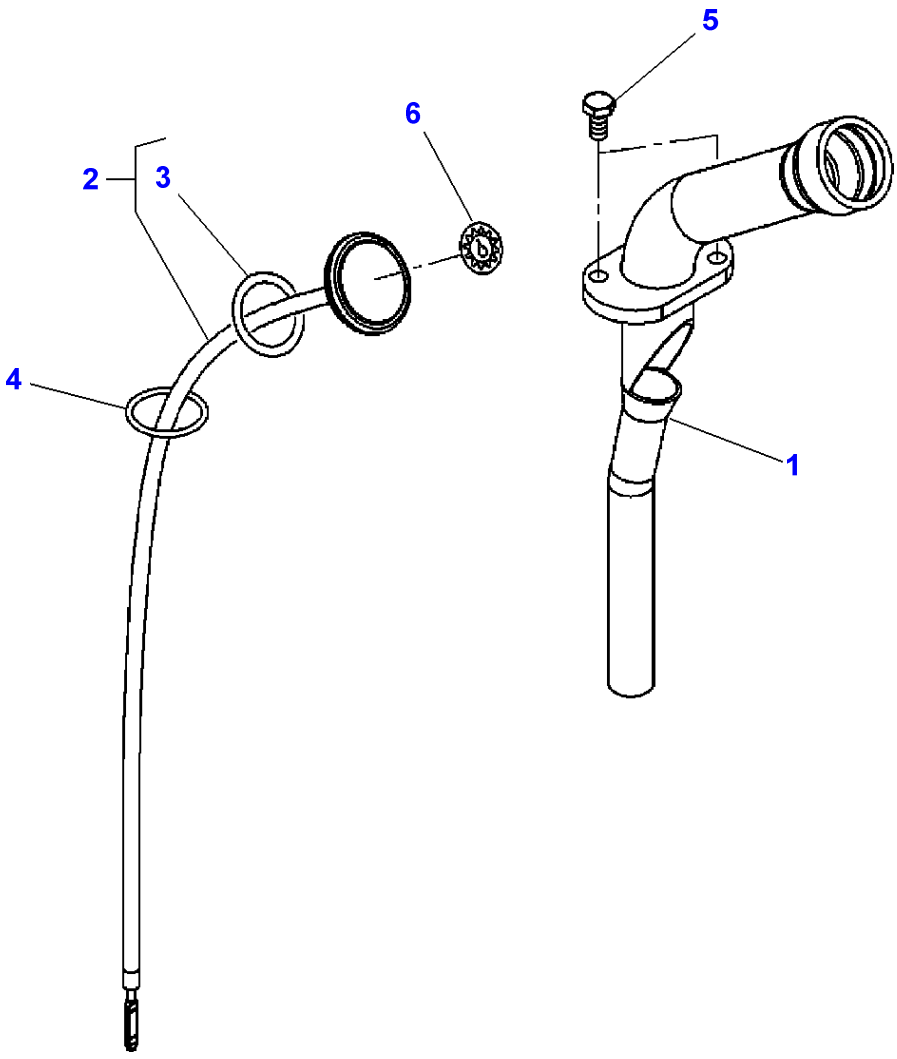


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | H926.150.480.010 | 1 | Filler | |
| 2 | H916.100.480.020 | 1 | Oil Dipstick | |
| 3 | F822.100.480.010 | 1 | Joint. | (2) |
| 4 | X548.895.001.000 | 1 | O Ring | 34 X 3 |
| 5 | X487.527.741.000 | 2 | Hex. Sock. Screw | M8 X 20 |
| 6 | 205.100.480.010 | 1 | Decal | |

1-WG60-002-A

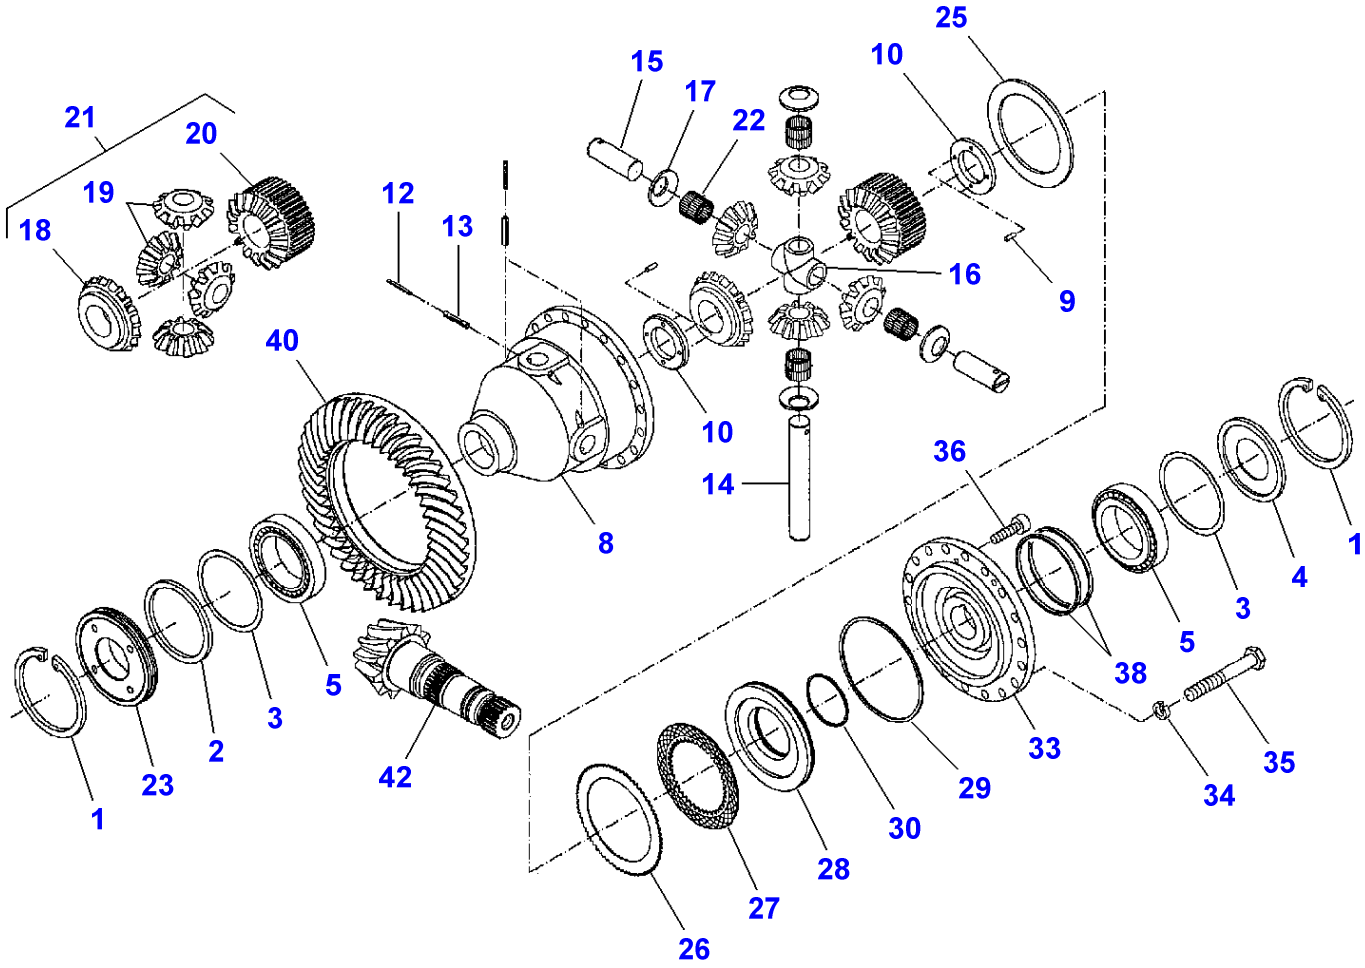

25
10
15
17
22
21
20
19
18
12
13
16
9
40
10
14
36
8
1
4
3
5
38
2
3
5
23
1
42
33
35
34
29
30
28
27
26

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X530.109.946.000 | 2 | Circlip | |
| 2 | | | Not Used | |
| 3 | X534.683.000.000 | X | Shim | Thickness 0,15 MM |
| | X534.683.100.000 | X | Shim | Thickness 0,20 MM |
| | X534.683.300.000 | X | Shim | Thickness 0,30 MM |
| | X534.683.700.000 | X | Shim | Thickness 0,50 MM |
| 4 | 822.100.010.060 | 1 | Disc | |
| 5 | G822.100.150.020 | 2 | Cup And Cone | |
| 8 | 926.150.010.030 | 1 | Diff Housing | |
| 9 | X506.239.300.000 | 4 | Dowel | Diameter 6 X 20 |
| 10 | 822.100.010.210 | 2 | Ring | |
| 12 | X500.622.300.000 | 3 | Roll Pin | Diameter 5 X 50 |
| 13 | X500.629.146.000 | 3 | Roll Pin | Diameter 8 X 50 |
| 14 | 926.150.010.050 | 1 | Clevis Pin | |
| 15 | 926.150.010.060 | 2 | Clevis Pin | |
| 16 | 926.150.010.070 | 1 | Support | |
| 17 | 926.150.010.080 | 4 | Thrust Washer | |
| 18 | | 1 | Planet | (21)<br>Not serviced,order REF. 21 |
| 19 | | 4 | Diff Pinion | (21)<br>Not serviced,order REF. 21 |
| 20 | | 1 | Planet | (21)<br>Not serviced,order REF. 21 |
| 21 | G926.150.010.010 | 1 | Kit, Bevel Gear | |
| 22 | X622.048.500.000 | 4 | Roller Cage | |
| 23 | 926.150.010.040 | 1 | Spacer | |
| 25 | 822.100.010.140 | 1 | Ring | |
| 26 | 822.100.010.130 | 10 | External Disc | |
| 27 | 822.100.010.120 | 9 | Internal Disc | |
| 28 | 822.100.010.160 | 1 | Piston | |
| 29 | 822.100.010.200 | 1 | Support Cover | |
| 30 | 822.100.010.190 | 1 | Support Cover | |
| 33 | 822.100.010.040 | 1 | Flange | |
| 34 | 345.300.100.110 | 18 | Disc | |
| 35 | X486.536.200.000 | 18 | Hex. Sock. Screw | M8 X 30 |
| 36 | X485.007.605.000 | 2 | Hex. Sock. Screw | M8 X 30 |
| 38 | X560.718.800.000 | 2 | Plain Compr.Ring | Diameter 140 X 5,5 |
| 40 | | 1 | Annular Gear | See Page - Reference Number 030-0040/19 |
| 42 | | 1 | Pinion Shaft | See Page - Reference Number 030-0040/18 |

1-WG71-004-A

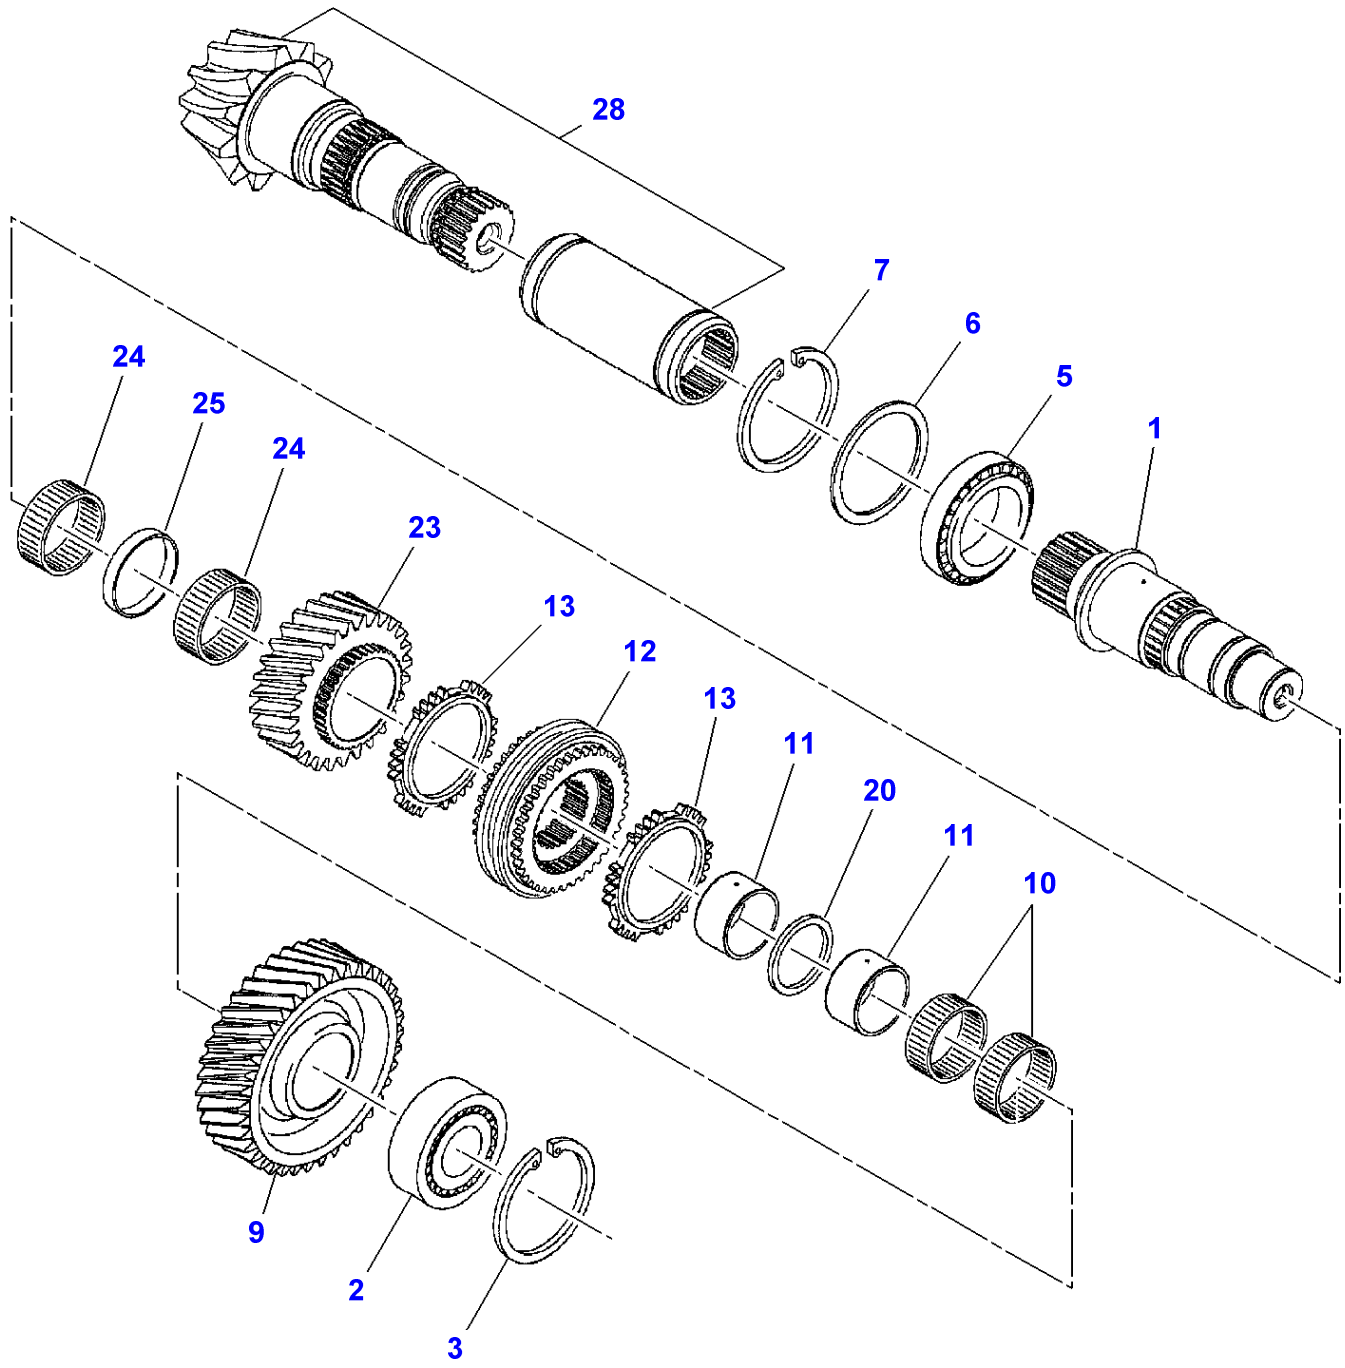


https://truckmanualshub.com/



| Item | Qty | Description | Comments |
|---|---|---|---|
| 1 | 1 | Shaft | [A] |
| 2 | 1 | Ball Bearing | [A] |
| 3 | 1 | Circlip | [A] |
| 5 | 1 | Ball Bearing | [A] |
| 6 | 1 | Kit, Washer | [A] |
| 7 | 1 | Circlip | [A] |
| 9 | 1 | Pinion | [A]<br>Number of teeth/spines 40 |
| 10 | 2 | Needle Cage | [A]<br>55 X 60 X 30 |
| 11 | 2 | Bush | [A] |
| 12 | 1 | Synchro Unit | [A] |
| 13 | 2 | Bush | [A] |
| 20 | 1 | Washer | [A] |
| 23 | 1 | Pinion | [A]<br>Number of teeth/spines 30 |
| 24 | 2 | Needle Cage | [A]<br>60 X 65 X 20 |
| 25 | 1 | Insert | [A] |
| 28 | 1 | Kit, Bevel Gear | See Page - Reference Number 030-0040/17 |

**FOOTNOTE [A]** NOT SUPPLIED SEPARATELY

1-WG71-003-A

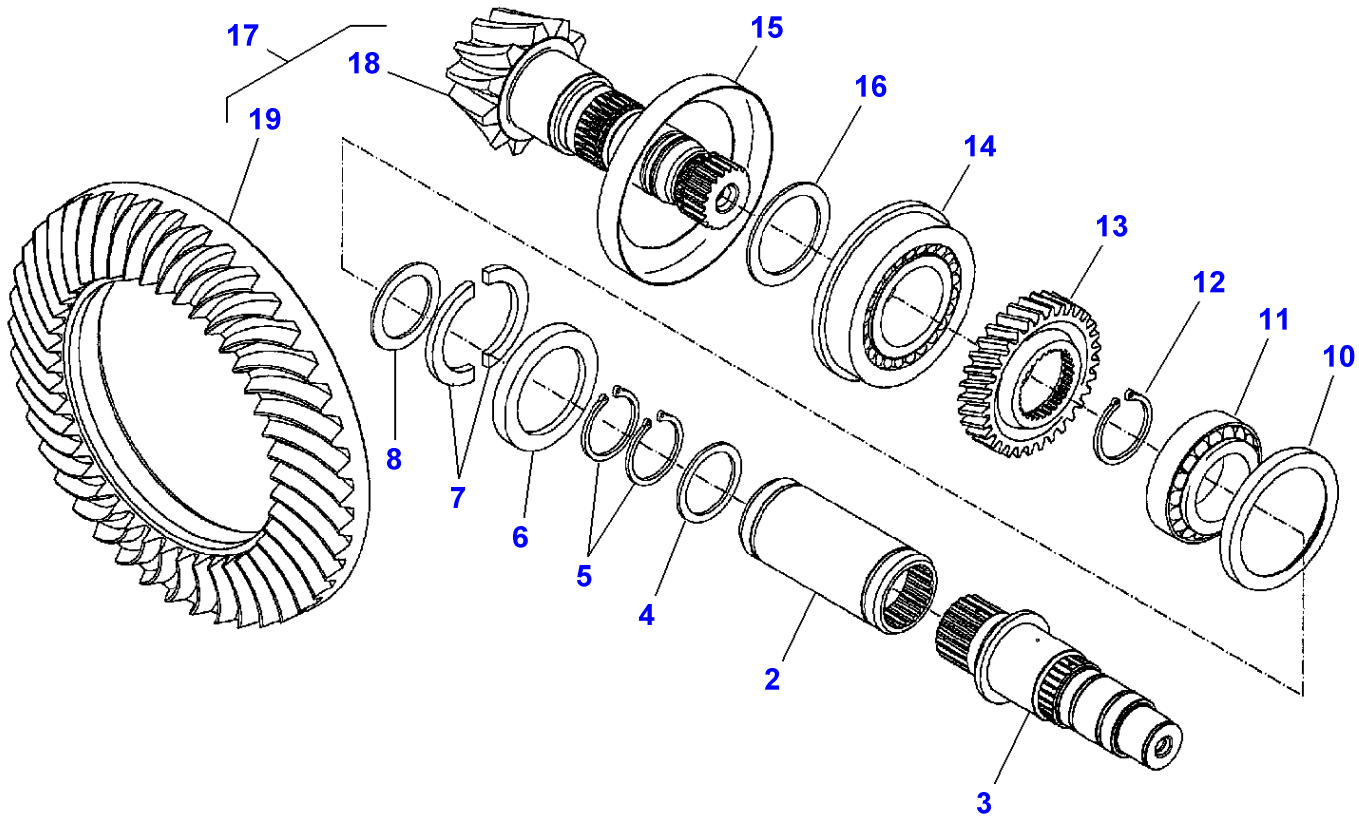


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Bevel Drive Page 030-0040

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 2 | 916.101.410.010 | 1 | Thimble | |
| 3 | | 1 | Shaft | See Page - Reference Number 030-0035/1 |
| 4 | X534.538.900.000 | 1 | Backup Ring | |
| 5 | X530.017.746.000 | 2 | Circlip | Diameter 55 X 3 |
| 6 | 916.100.410.030 | 1 | Ring | |
| 7 | 916.100.410.040 | 2 | Ring | |
| 8 | G001.990.200.630 | 1 | Kit, Washer | |
| 10 | 916.100.410.060 | 1 | Sheet Metal | |
| 11 | X619.072.600.007 | 1 | Cup And Cone | |
| 12 | X530.017.846.000 | 1 | Circlip | Diameter 58 X 3 |
| 13 | | 1 | Pinion | See Page - Reference Number 060-0050/3 |
| 14 | X619.057.201.003 | 1 | Cup And Cone | 68 X 140 X 20 |
| 15 | 926.102.410.030 | 1 | Sheet Metal | |
| 16 | G001.990.200.640 | 1 | Kit, Washer | |
| 17 | | 1 | Kit, Bevel Gear | 12 X 43<br>Not serviced,order REF. 18 , 19 |
| 18 | 926.102.410.040 | 1 | Pinion Shaft | (17)<br>Number of teeth/spines 12 |
| 19 | 926.102.410.020 | 1 | Crownwheel | (17)<br>Number of teeth/spines 43 |

1-WG18-005-A

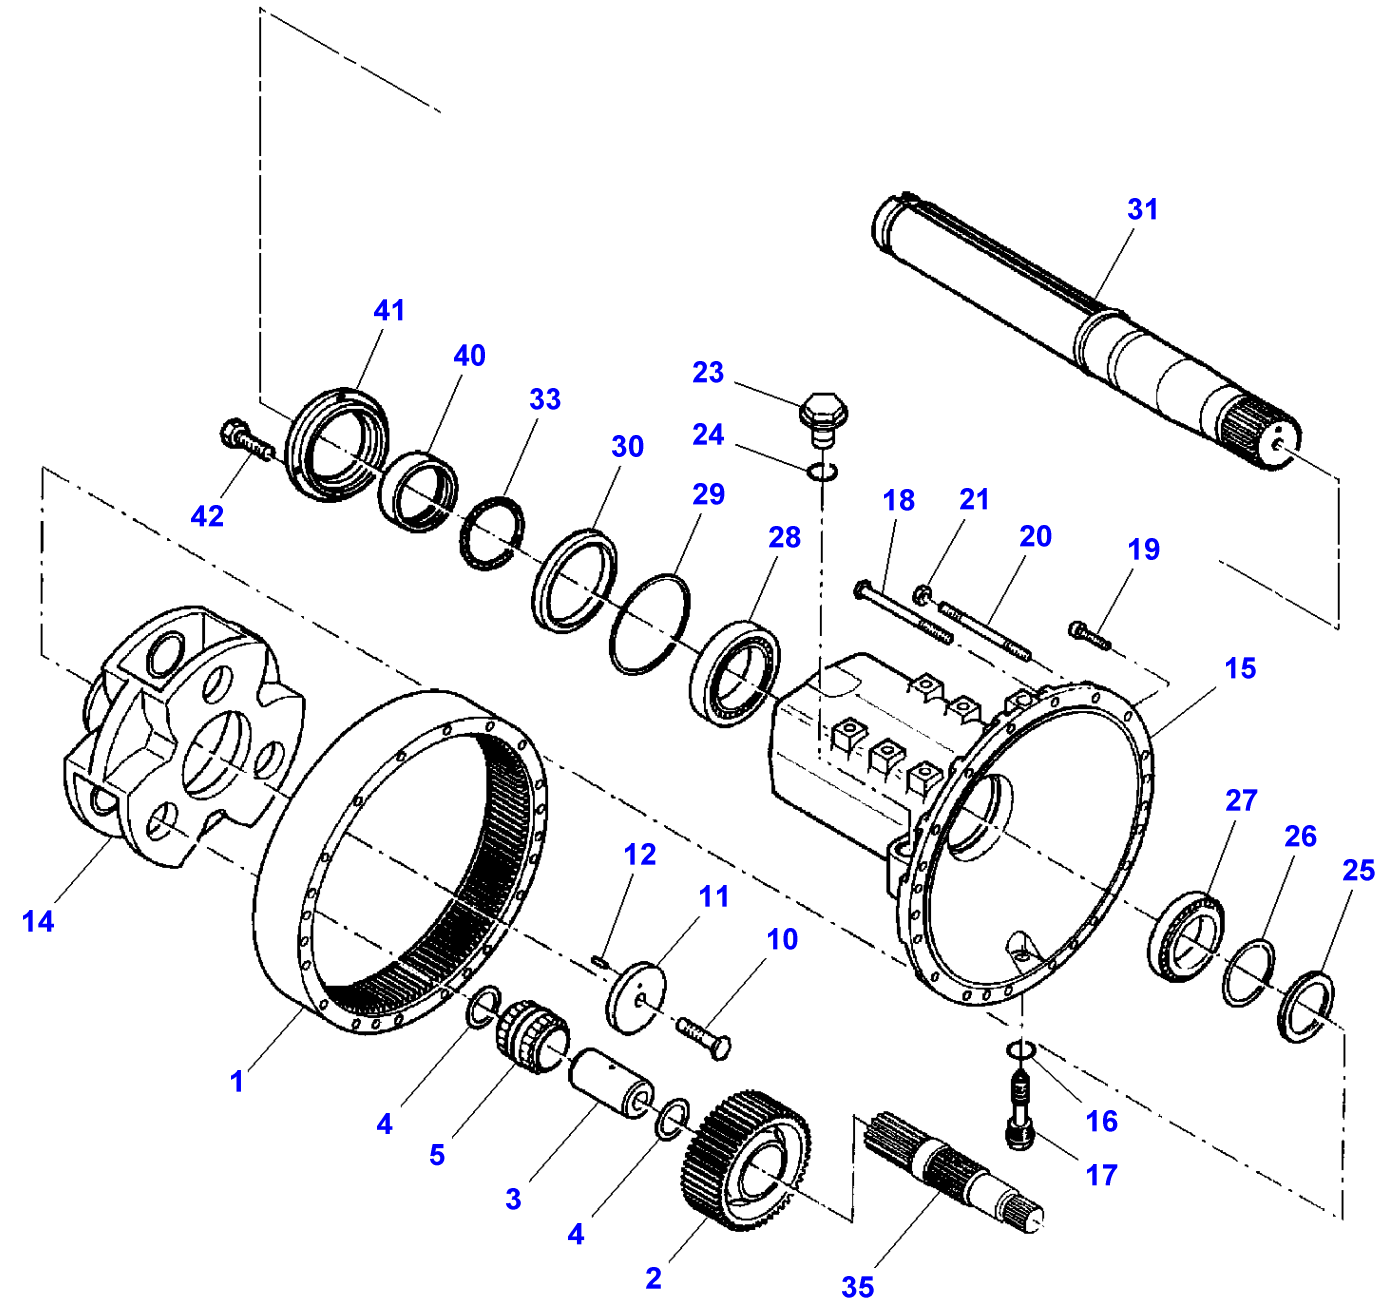
31
41
40
33
30
23
24
29
28
18
21
20
19
15
27
26
25
42
14
12
11
10
1
4
5
3
4
2
16
17
35


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 926.150.150.032 | 2 | Pressure Pipe | |
| 2 | 926.150.150.040 | 6 | Spur Gear | [B] |
| 3 | 926.150.150.061 | 6 | Clevis Pin | |
| 4 | X530.106.546.000 | 12 | Circlip | Diameter 62 X 2 |
| 5 | G926.150.150.050 | 6 | Roller Cage | |
| 10 | 822.100.150.120 | 2 | Hex. Sock. Screw | |
| 11 | 822.100.150.080 | 2 | Plate | |
| 12 | X500.628.246.000 | 2 | Roll Pin | Diameter 8 X 22 |
| 14 | 926.150.150.021 | 2 | Planet Carrier | |
| 15 | 926.160.150.200 | 2 | Axle Housing | |
| 16 | X540.007.478.000 | 2 | Ring | |
| 17 | H822.100.150.020 | 2 | Magnet | |
| 18 | X486.537.601.000 | 40 | Hex. Sock. Screw | M12 X 160 |
| 19 | X493.619.205.000 | 4 | Hex. Sock. Screw | M12 X 50 |
| 20 | X489.138.400.000 | 8 | Stud | M12 X 165 |
| 21 | X428.203.205.000 | 8 | Nut | |
| 23 | X484.404.001.000 | 4 | Plug | M30 |
| 24 | **X540.009.478.000** | 4 | Ring | |
| 25 | 926.101.150.240 | 4 | Ring | |
| 26 | X534.781.500.000 | X | Shim | Thickness 0,50 MM |
| | X534.781.600.000 | X | Shim | Thickness 0,60 MM |
| | X534.781.700.000 | X | Shim | Thickness 0,70 MM |
| 27 | G926.101.150.040 | 2 | Cup And Cone | |
| 28 | G926.160.150.200 | 2 | Cup And Cone | |
| 29 | X549.030.900.000 | 2 | O Ring | Diameter 190,17 X 2,62 |
| 30 | H822.100.150.040 | 2 | Oil Seal | |
| 31 | 926.101.150.070 | 2 | Shaft | 29" |
| | 926.101.150.060 | 2 | Shaft | 40" |
| 33 | X548.999.066.000 | 2 | O Ring | Diameter 118 X 4 |
| 35 | H926.150.150.200 | 2 | Shaft | |
| 40 | 926.101.150.260 | 2 | Spacer | |
| 41 | 926.160.150.220 | 2 | Cover | |
| 42 | X487.527.741.000 | 8 | Hex. Sock. Screw | M8 X 20 |

**FOOTNOTE [A]** ORDER + 822 100 150 140 + G822 100 0150 050
**FOOTNOTE [B]** ORDER + 926 150 150 061 + G926 150 150 050
**FOOTNOTE [C]** ORDER + 718 150 151 300
**FOOTNOTE [D]** ORDER + 926 150 150 040

1-WG14-003-A

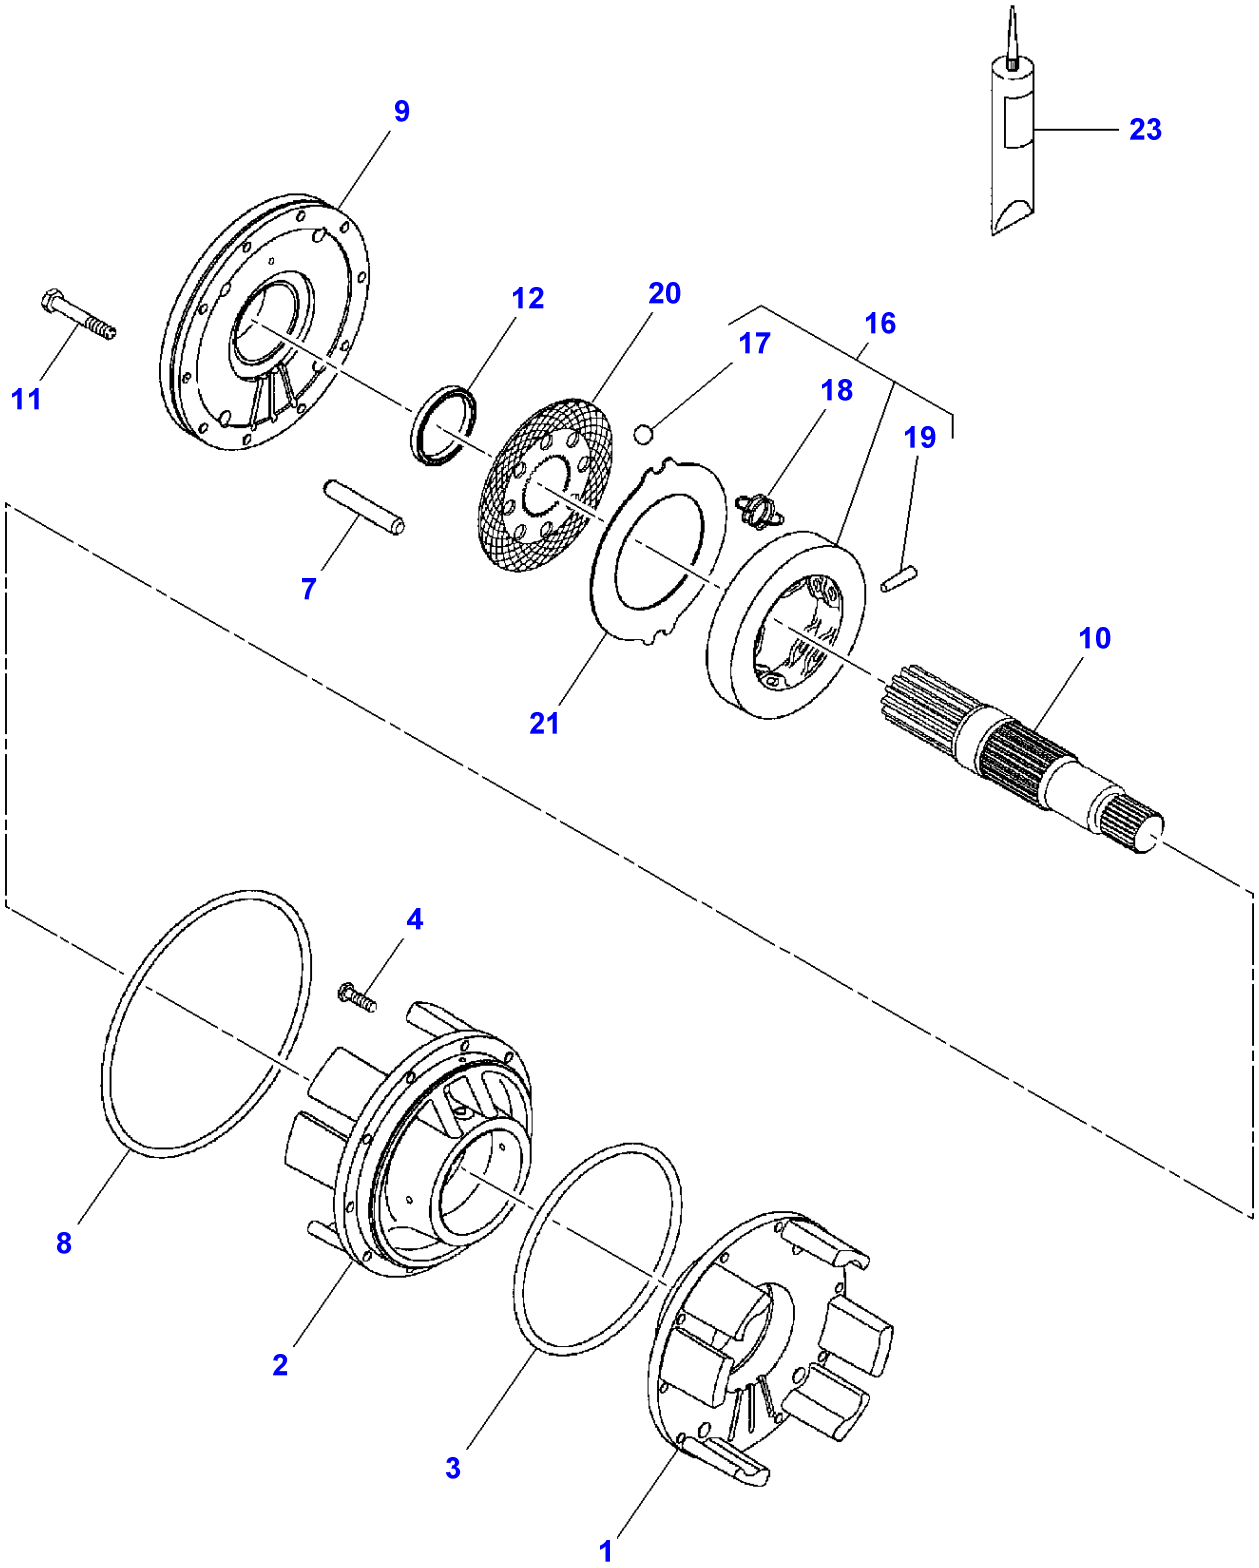


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Disc Brakes Page 030-0050

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 926.150.010.020 | 1 | Bearing Flange | Right Hand |
| 2 | 926.150.010.010 | 1 | Bearing Flange | Left Hand |
| 3 | X549.041.100.000 | 1 | O Ring | Diameter 267 X 3 |
| 4 | X487.535.806.000 | 4 | Hex. Sock. Screw | M12 X 40 |
| 7 | 926.150.150.080 | 8 | Pin | |
| 8 | X549.044.100.000 | 2 | O Ring | Diameter 310 X 3 |
| 9 | 926.150.150.070 | 2 | Brake Plate | |
| 10 | | 2 | Shaft | See Page - Reference Number 030-0045/35 |
| 11 | X486.537.601.000 | 20 | Hex. Sock. Screw | M12 X 160 |
| 12 | X550.150.200.000 | 2 | Oil Seal | |
| 16 | F822.100.150.010 | 2 | Disc | |
| 17 | F822.100.150.020 | 5 | Ball | (16) |
| 18 | F822.100.150.030 | 5 | Tension Spring | (16) |
| 19 | X505.558.539.000 | 2 | Dowel | (16) |
| 20 | F822.100.150.040 | 12 | Brake Disc | |
| 21 | 716.150.150.500 | 12 | External Disc | |
| 23 | X903.050.074.000 | X | Loctite | |

1-WG15-002-A

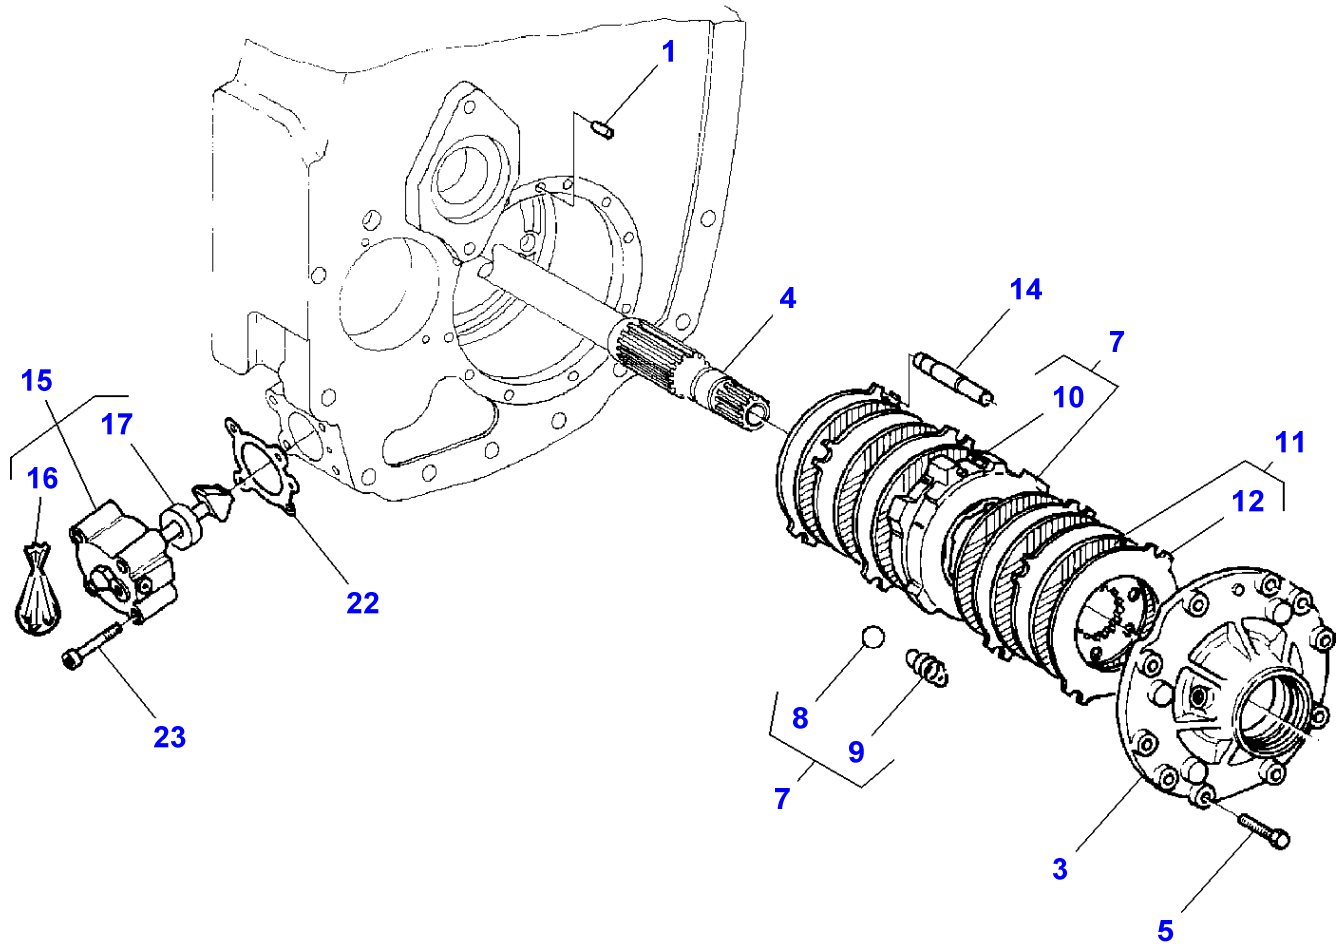

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Cardan Brake 

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X505.544.539.000 | 1 | Dowel | Diameter 6 X 16 |
| 3 | 916.100.320.061 | 1 | Cover | |
| 4 | | 1 | Shaft | See Page - Reference Number 060-0045/5 |
| 5 | X487.531.941.000 | 10 | Hex. Sock. Screw | M10 X 40 |
| 7 | G916.100.320.030 | 1 | Disc | |
| 8 | F822.100.150.020 | 4 | Ball | (7) |
| 9 | F822.100.150.030 | 4 | Tension Spring | (7) |
| 10 | X505.558.539.000 | 2 | Dowel | (7) |
| 11 | G001.990.200.330 | 1 | Parts Pack | |
| 12 | | 1 | Plate | (11)<br>Not serviced,order REF. 11 |
| 14 | 916.100.320.190 | 4 | Pin | |
| 15 | G916.100.070.030 | 1 | Cylinder | [A] |
| 16 | F916.100.070.010 | 1 | Kit, Joint | (16) |
| 17 | F524.101.070.170 | 1 | Seal | (16) |
| 22 | 916.100.070.010 | 1 | Gasket | |
| 23 | X485.008.606.000 | 4 | Hex. Sock. Screw | M8 X 80 |

**FOOTNOTE [A]** ORDER + 916 100 070 010

1-WP74-003-A

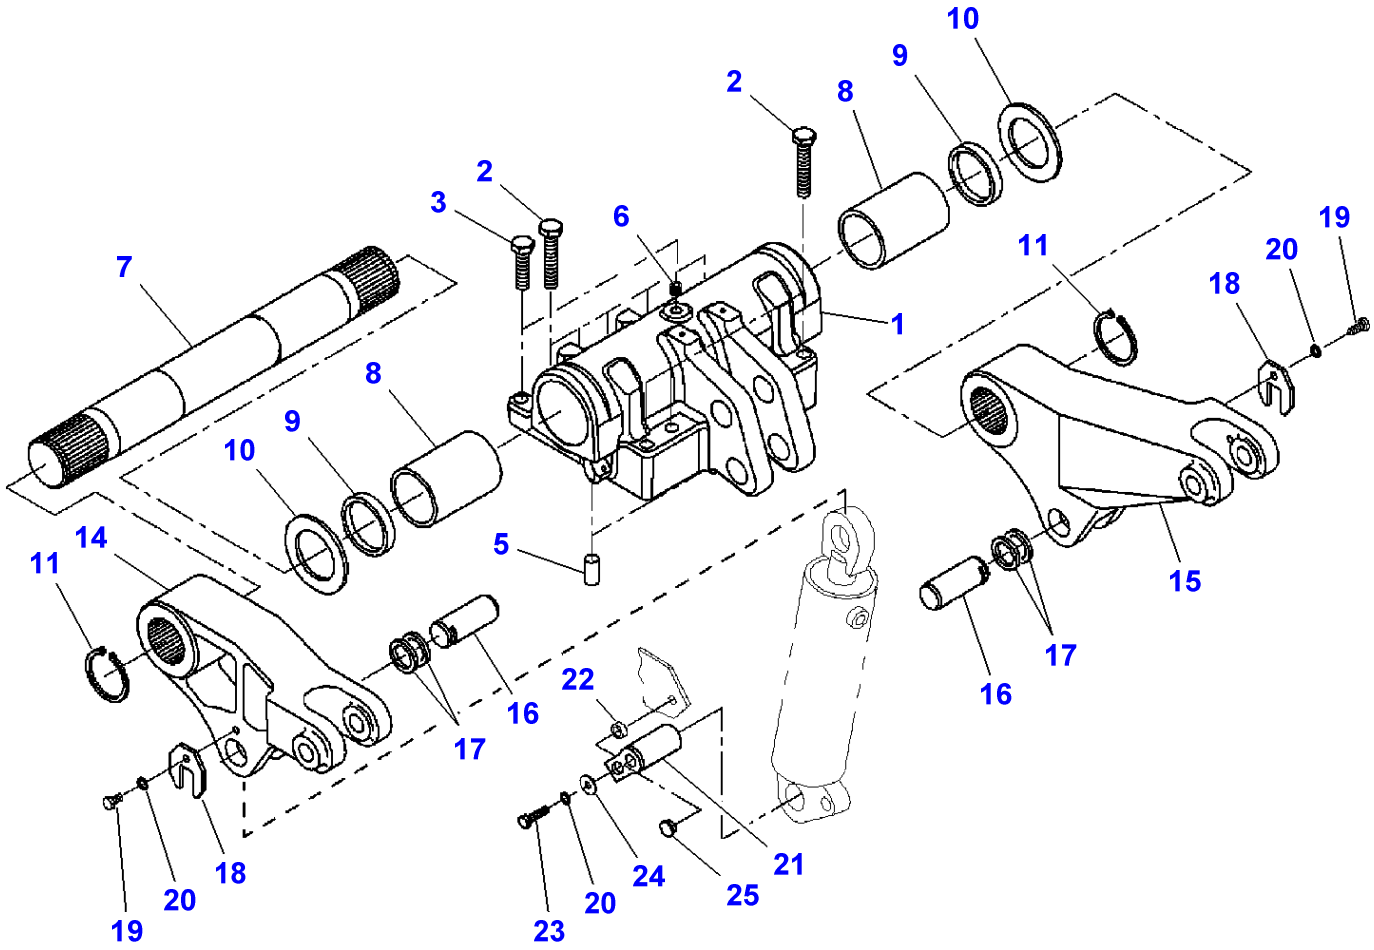

10
9
2
8
2
3
6
19
20
18
11
7
1
8
9
10
14
11
5
15
17
16
22
16
17
18
20
19
23
20
24
25
21

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G930.860.030.010 | 1 | Support | |
| 2 | X486.551.800.000 | 10 | Hex. Sock. Screw | M18 X 120 |
| 3 | X486.551.000.000 | 2 | Hex. Sock. Screw | M18 X 70 |
| 5 | X505.585.617.000 | 2 | Dowel | Diameter 6 X 36 |
| 6 | X483.501.600.000 | 1 | Screw | M18 |
| 7 | 816.860.030.110 | 1 | Shaft | |
| 8 | 816.860.030.040 | 2 | Bush | |
| 9 | X550.150.400.000 | 2 | Oil Seal | 80 X 100 X 10 |
| 10 | 816.860.030.050 | 2 | Disc | |
| 11 | X530.007.246.000 | 2 | Circlip | |
| 14 | 903.860.030.010 | 1 | Arm | |
| 15 | 903.860.030.020 | 1 | Arm | |
| 16 | 716.860.030.080 | 2 | Pin | |
| 17 | 816.860.030.070 | 4 | Ring | |
| 18 | 716.920.010.100 | 2 | Locking Plate | |
| 19 | X487.531.301.000 | 2 | Hex. Sock. Screw | M10 X 20 |
| 20 | X520.804.401.000 | 4 | Lock Washer | |
| 21 | H816.860.030.042 | 2 | Pin | |
| 22 | 816.870.030.060 | 2 | Bush | |
| 23 | X487.531.541.000 | 2 | Hex. Sock. Screw | M10 X 25 |
| 24 | X454.407.508.000 | 2 | Disc | |
| 25 | X499.501.100.000 | 2 | Plug | |

1-WQ20-002-A

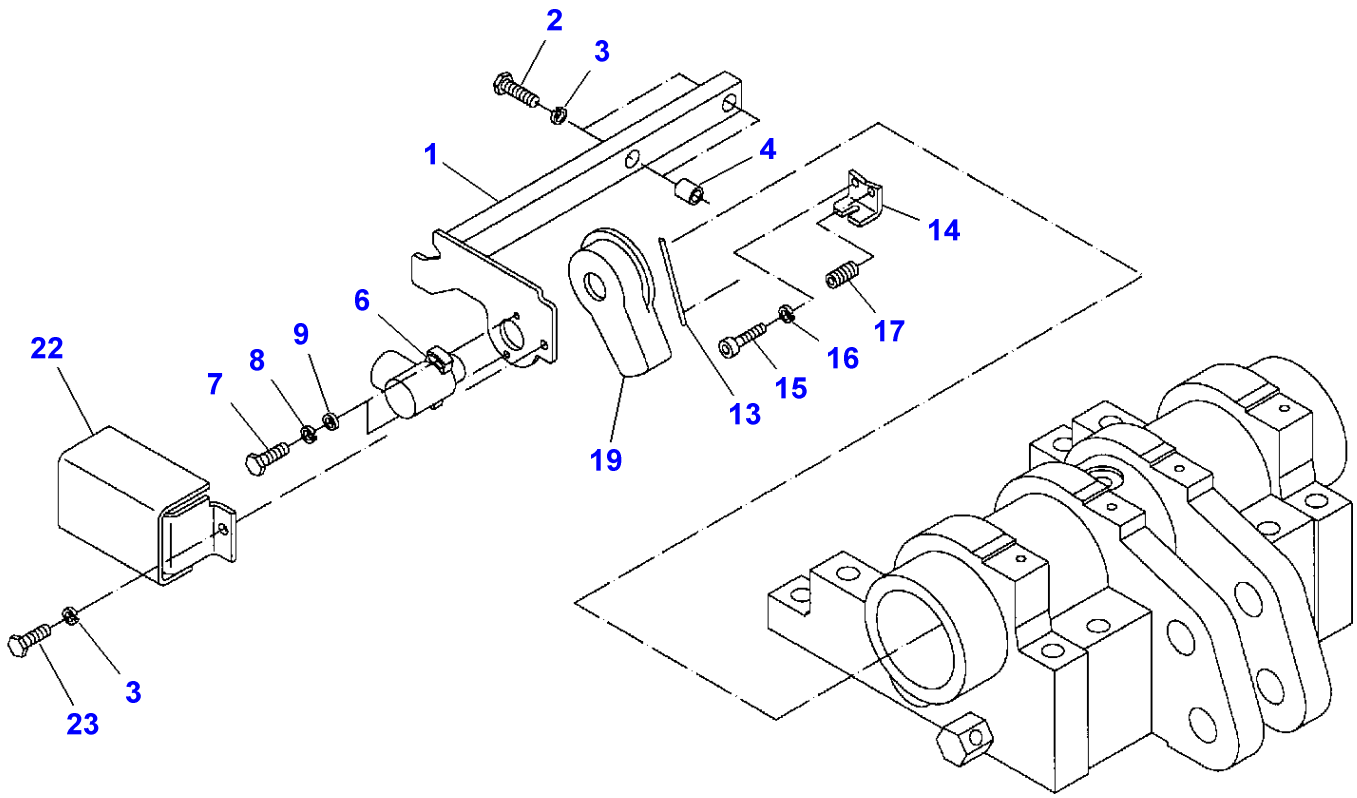



https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | H816.860.100.022 | 1 | Holder | |
| 2 | X487.528.141.000 | 2 | Hex. Sock. Screw | M8 X 30 |
| 3 | X520.803.901.000 | 3 | Lock Washer | |
| 4 | 816.860.100.120 | 2 | Bush | |
| 6 | G716.860.100.040 | 1 | Transducer | |
| 7 | X485.002.501.000 | 2 | Hex. Sock. Screw | M5 X 12 |
| 8 | X520.802.601.000 | 2 | Lock Washer | |
| 9 | X450.003.908.000 | 2 | Disc | |
| 13 | 816.860.100.080 | 1 | Spring Wire | |
| 14 | 816.860.100.032 | 1 | Angle. | |
| 15 | X485.009.405.000 | 1 | Hex. Sock. Screw | M8 X 16 |
| 16 | X523.703.900.000 | 1 | Lock Washer | |
| 17 | X500.628.246.000 | 1 | Roll Pin | Diameter 8 X 22 |
| 19 | 816.860.100.020 | 1 | Cover | |
| 22 | 524.860.100.100 | 1 | Protector | |
| 23 | X487.527.441.000 | 1 | Hex. Sock. Screw | M8 X 12 |

1-WQ17-011-A

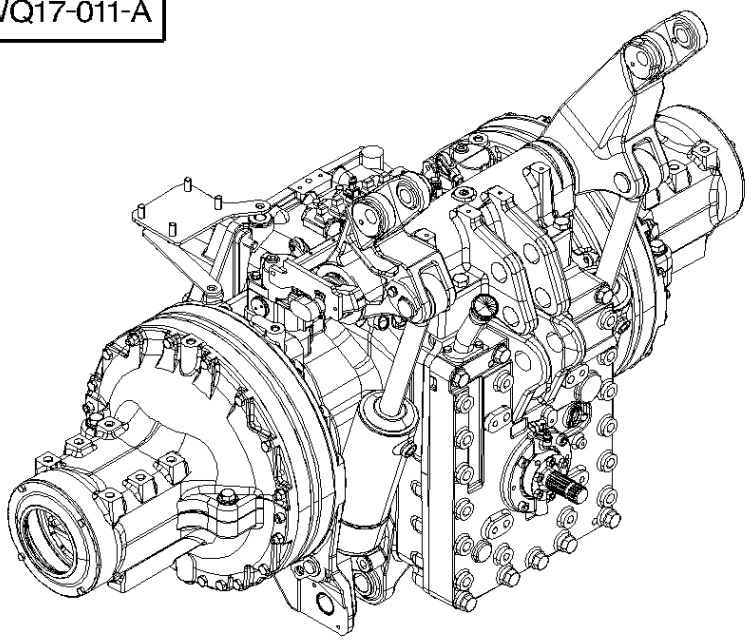

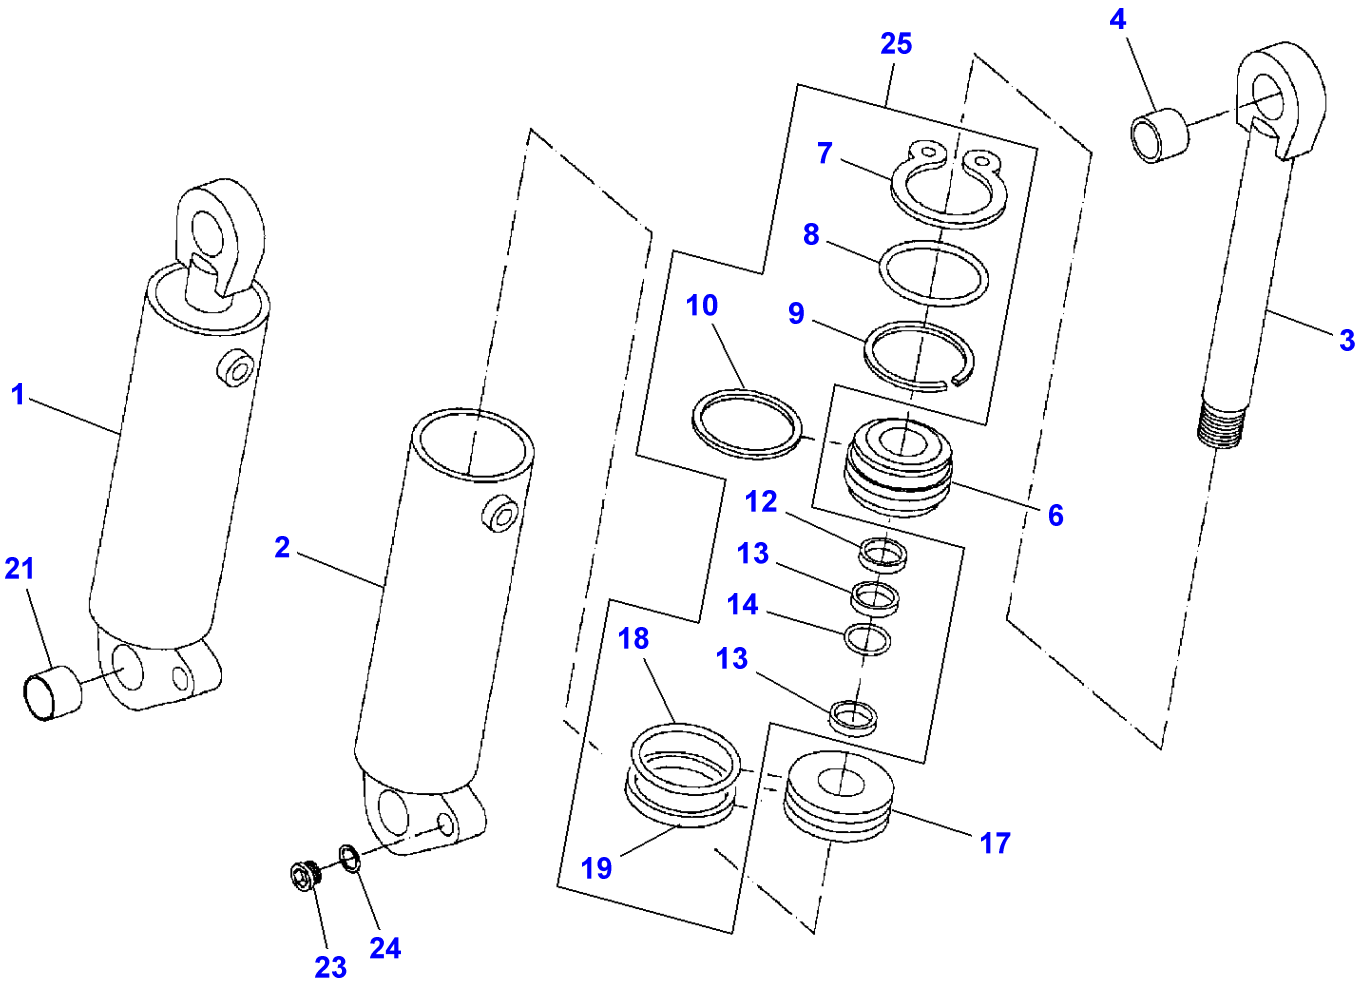

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Lift Cylinders Page 040-0005

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G924.860.030.011 | 2 | Hydraulic, Cylin | [A] |
| | | | | 40/100;247/452 |
| 2 | | 1 | Body | (1) |
| | | | | Not serviced,order REF. 1 |
| 3 | F924.860.030.030 | 1 | Rod | (1) |
| 4 | X605.028.000.000 | 1 | Bearing Bush | (1) |
| 6 | F924.860.030.010 | 1 | Guide Bush | (1) |
| 7 | X530.008.300.000 | 1 | Circlip | (1) |
| | | | | Diameter 95 X 3 |
| 8 | X548.972.066.000 | 1 | O Ring | (1) |
| | | | | Diameter 88 X 3 |
| 9 | F924.860.030.020 | 1 | Snapring | (1) |
| 10 | X547.583.600.000 | 1 | Sump Gasket | (1) |
| | | | | 93,8 X 6,9 |
| 12 | X540.410.601.000 | 1 | Stripper | (1) |
| 13 | X560.240.001.000 | 2 | Ring | (1) |
| 14 | X548.317.400.000 | 1 | V-Seal | (1) |
| | | | | 40 X 48 X 7 |
| 17 | F924.860.030.050 | 1 | Piston | (1) |
| 18 | X560.242.800.000 | 1 | Ring | (1) |
| 19 | X547.587.200.000 | 1 | Sump Gasket | (1) |
| 21 | X605.018.000.000 | 1 | Bearing Bush | (1) |
| 23 | X483.801.600.000 | 1 | Screw | (1) |
| | | | | M18 |
| 24 | X540.005.478.000 | 1 | Ring | (1) |
| 25 | G001.990.011.310 | 1 | Kit, Seal | [B] |

**FOOTNOTE [A]** INCLUDE ITEMS 2 TO 24
**FOOTNOTE [B]** INCLUDE ITEMS 7 TO 10-12 TO 14-18-19

1-WP08-007-A

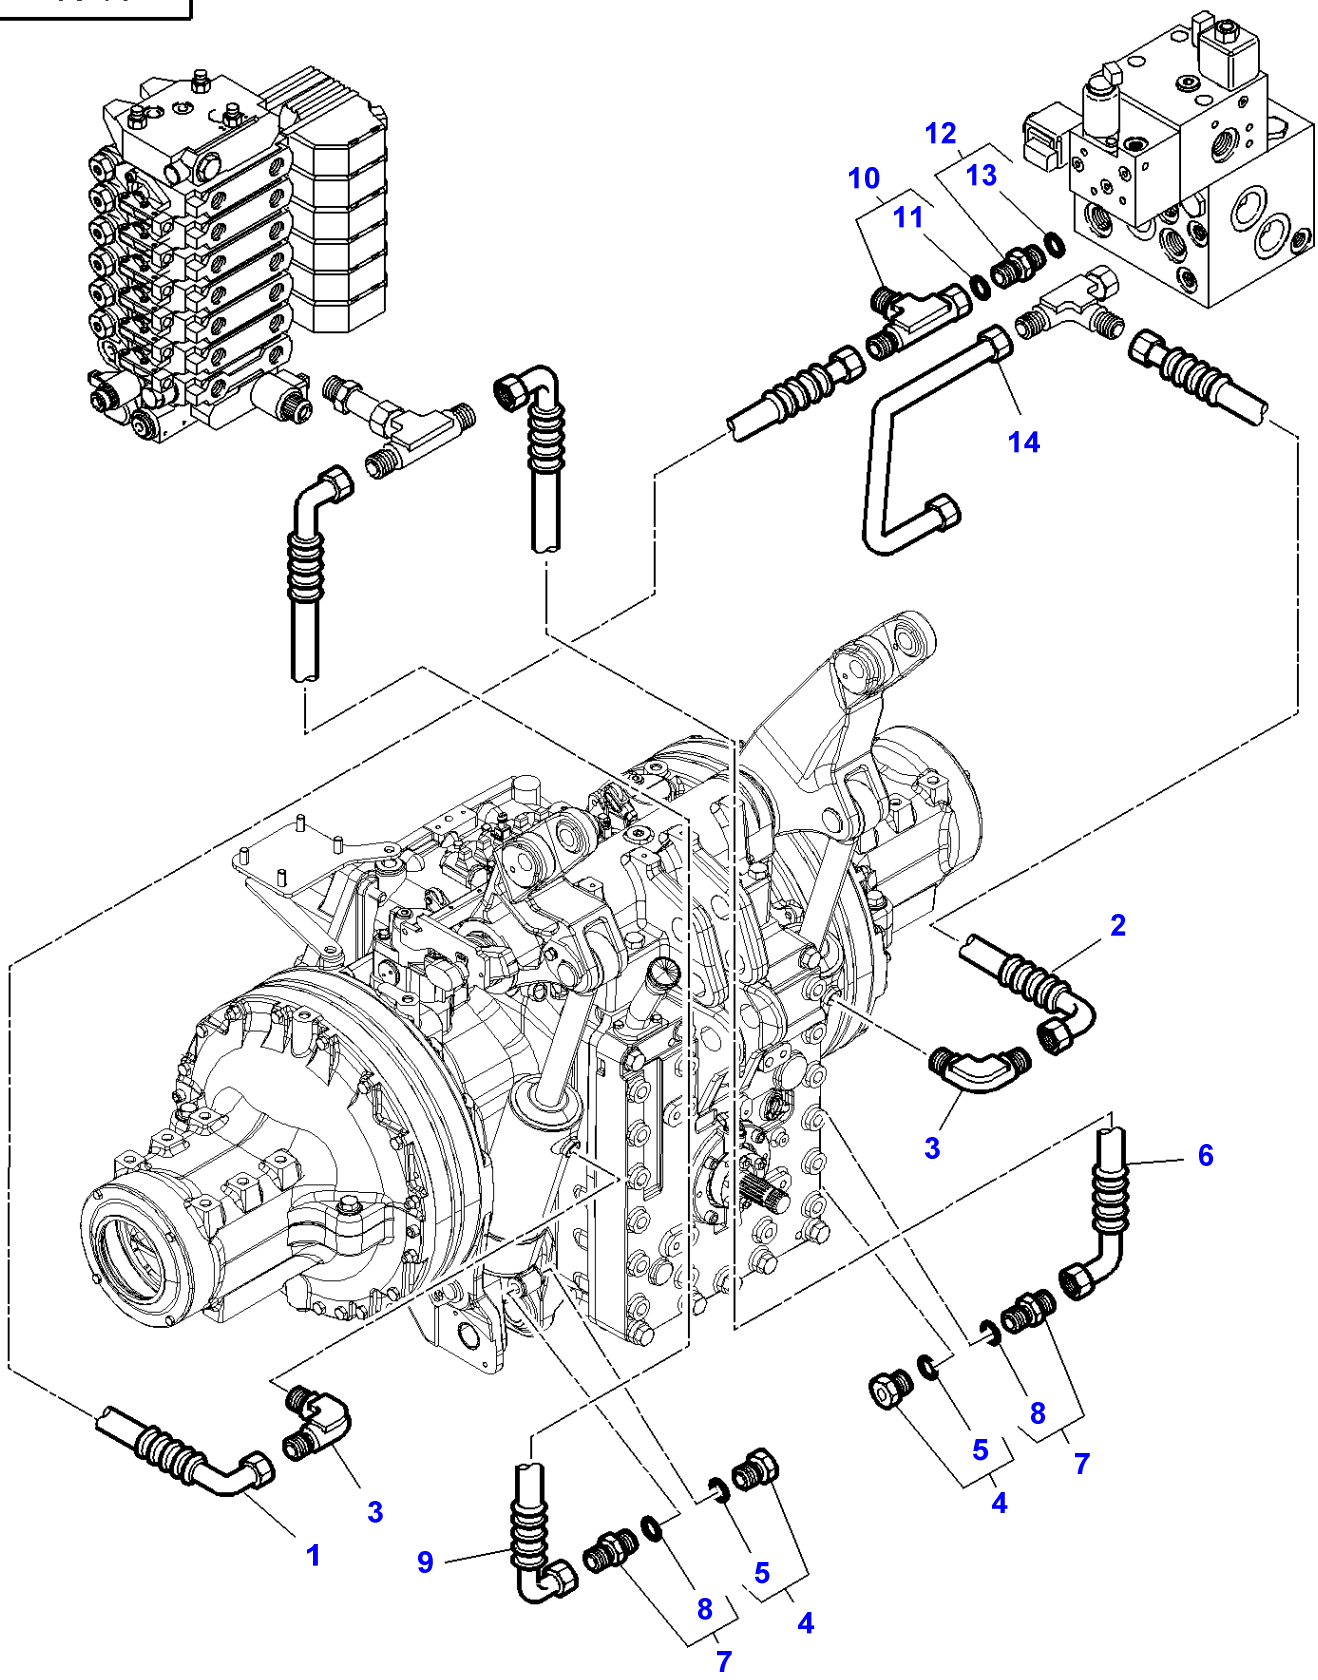


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276134M1 | 1 | Hydr. Hose | Length 1100MM |
| 2 | 4276135M1 | 1 | Hydr. Hose | Length 1050MM |
| 3 | 4276131M1 | 2 | Union | |
| 4 | 3011103X91 | 2 | Plug | M18 |
| 5 | 338764X1 | 1 | Seal | (4) |
| 6 | 4276136M1 | 1 | Hydr. Hose | Length 1400MM |
| 7 | 338717X91 | 2 | Union | M18 |
| 8 | 338764X1 | 1 | Seal | (7) |
| 9 | 4276137M2 | 1 | Hydr. Hose | Length 1000MM |
| 10 | 3011089X91 | 2 | Union | |
| 11 | 3011147X1 | 1 | O Ring | (10) |
| 12 | 3011040X91 | 2 | Union | M22X1.5 |
| 13 | 3011036X1 | 1 | Seal | (12) |
| 14 | 4276170M1 | 1 | Tube | |

1-WQ32-007-A

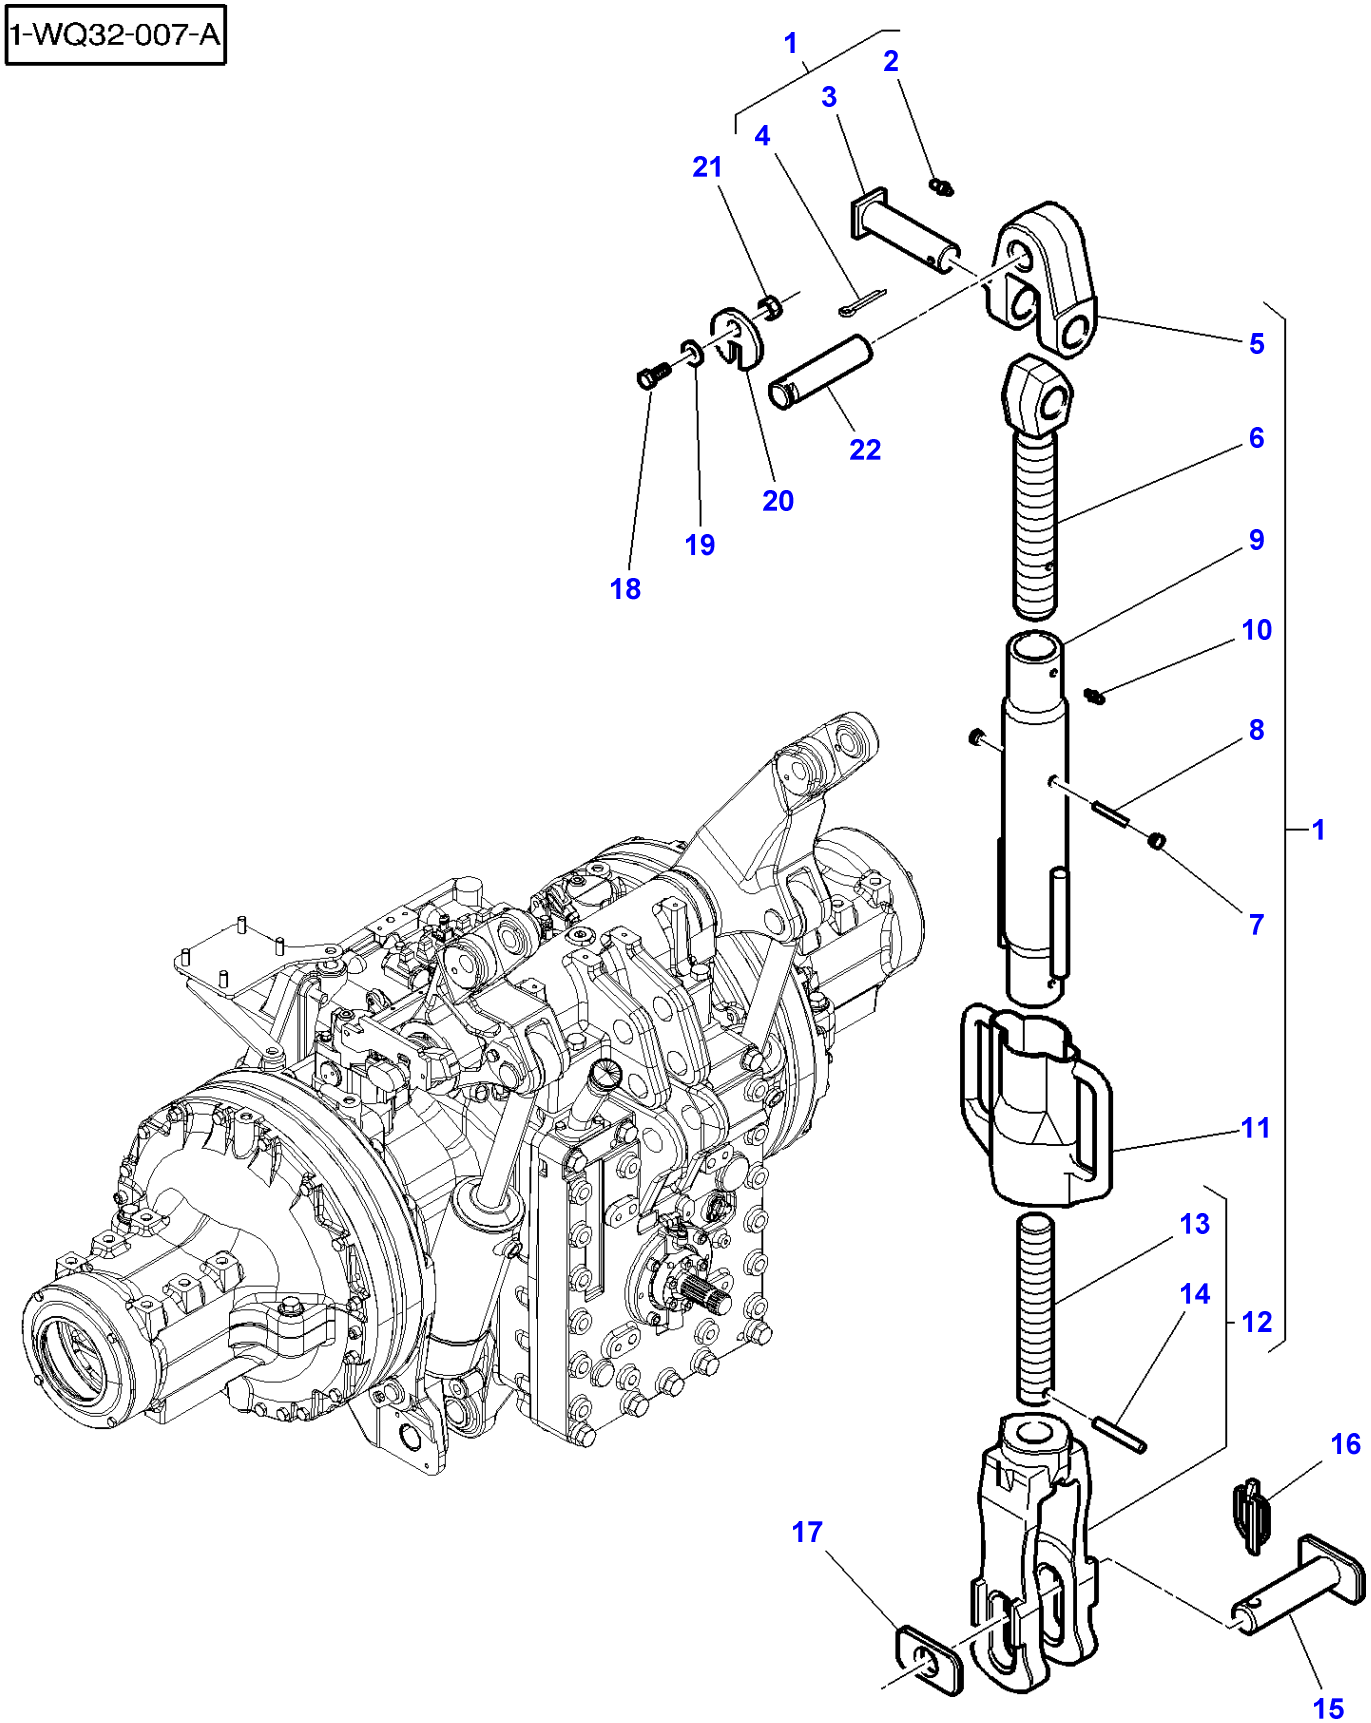


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Levelling box Page 040-0015

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271564M91 | 2 | Draglink | |
| 2 | 339608X1 | 1 | Grease Nipple | (1)<br>M10 |
| 3 | 3715690M1 | 1 | Clevis Pin | (1) |
| 4 | 354092X1 | 1 | Pin | (1) |
| 5 | 4271819M1 | 1 | Clevis | (1) |
| 6 | 3788407M1 | 1 | Draglink | (1) |
| 7 | 3789540M1 | 2 | Plug | (1) |
| 8 | 339135X1 | 1 | Pin | (1) |
| 9 | | 1 | Tube | (1)<br>Not serviced,order REF No 1 |
| 10 | 3715689M1 | 2 | Greaser | (1)<br>M6 |
| 11 | 4270811M1 | 1 | Handle | (1) |
| 12 | 3788403M91 | 1 | Clevis | (1) |
| 13 | 3788405M1 | 1 | Clevis Pin | (12) |
| 14 | 339307X1 | 1 | Pin | (12)<br>Diameter 6 X 50 |
| 15 | 3788414M1 | 2 | Clevis Pin | |
| 16 | 3792034M1 | 2 | Pin | |
| 17 | 3788415M1 | 2 | Plate | |
| 18 | 339451X1 | 2 | Hex. Sock. Screw | M10 X 30 |
| 19 | 390597X1 | 2 | Washer | Diameter 10-30 X 2,5 |
| 20 | 926870030020 | 2 | Locking Plate | |
| 21 | 926870030030 | 2 | Bush | |
| 22 | 926870030010 | 2 | Pin | |

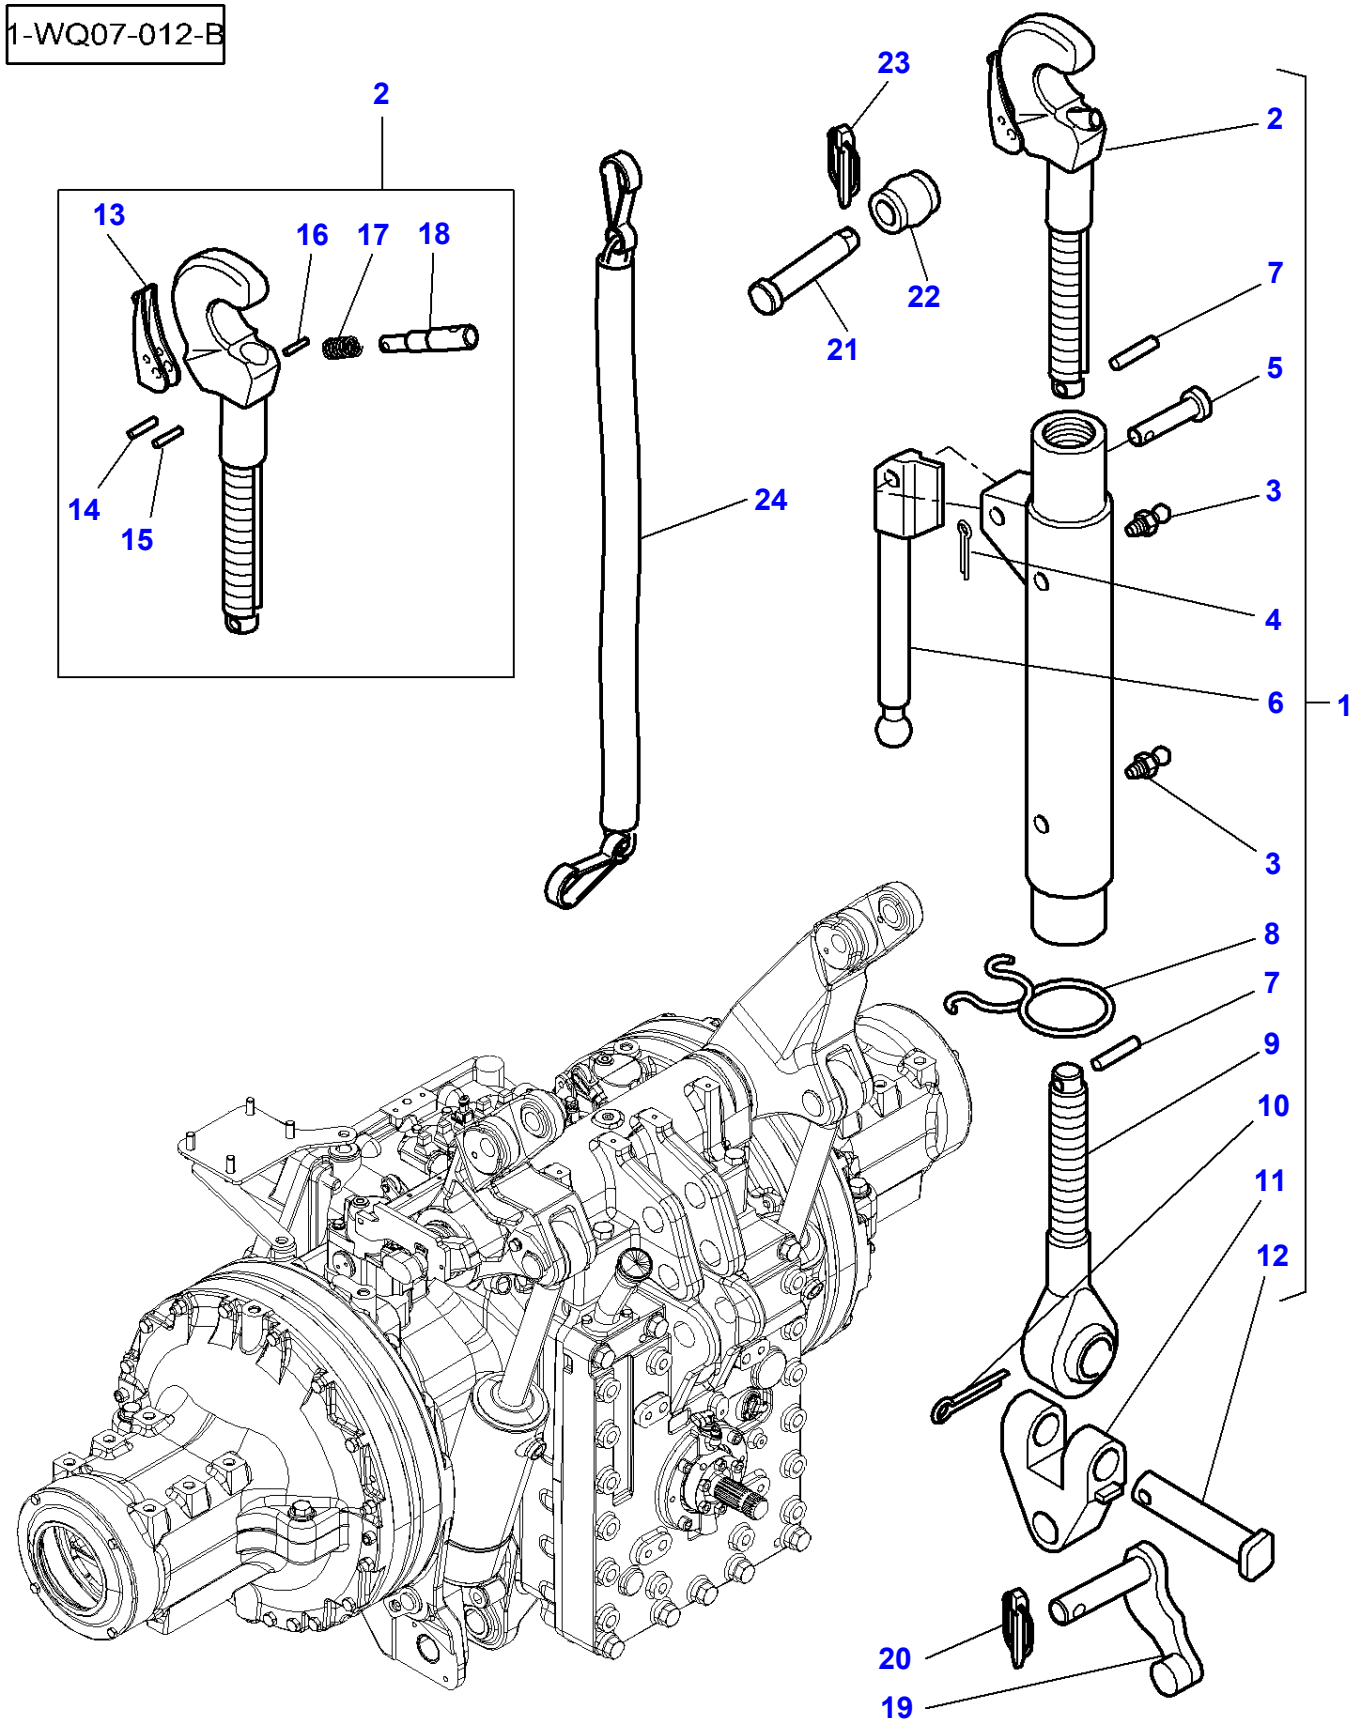

1-WQ07-012-B
2
13
16
17
18
14
15
23
22
21
24
2
7
5
3
4
6
1
3
8
7
9
10
11
12
20
19

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271217M91 | 1 | Top Link | CAT 3<br>Length 754/974MM |
| 2 | 4271219M91 | 1 | Hook | (1)<br>CAT 3 |
| 3 | 339608X1 | 2 | Grease Nipple | (1) |
| 4 | 1442967X1 | 1 | Pin | (1) |
| 5 | 4271225M1 | 1 | Pin | (1) |
| 6 | 4271224M1 | 1 | Handle | (1) |
| 7 | 339192X1 | 2 | Pin | (1) |
| 8 | 4271557M1 | 1 | Spring | (1) |
| 9 | 4271221M1 | 1 | Draglink | (1) |
| 10 | 354092X1 | 1 | Pin | (1) |
| 11 | 4271222M1 | 1 | Clevis | (1) |
| 12 | 4271223M1 | 1 | Plate | (1) |
| 13 | 3796211M91 | 1 | Lever | (2) |
| 14 | 339080X1 | 1 | Roll Pin | (2)<br>Diameter 6 X 24MM |
| 15 | 390538X1 | 1 | Pin | (2)<br>Diameter 5 X 24MM |
| 16 | 339806X1 | 1 | Pin | (2) |
| 17 | 3788537M1 | 1 | Spring | (2) |
| 18 | 3715849M2 | 1 | Clevis Pin | (2) |
| 19 | H926.870.050.021 | 1 | Pin | |
| 20 | 3387161M2 | 1 | Pin | Diameter 12 X 45MM |
| 21 | 3582043M2 | 1 | Clevis Pin | CAT 2/3 |
| | 367073X1 | 1 | Clevis Pin | CAT 3 |
| 22 | **3042433M1** | 1 | Toggle | CAT 2/3 |
| | 3042434M1 | 1 | Toggle | CAT 3 |
| 23 | 3387161M2 | 1 | Pin | |
| 24 | 3619219M1 | 1 | Chain | Length 3700 MM |
| | 3903995M1 | 1 | Chain | Length 1500 MM |

1-WQ08-011-B

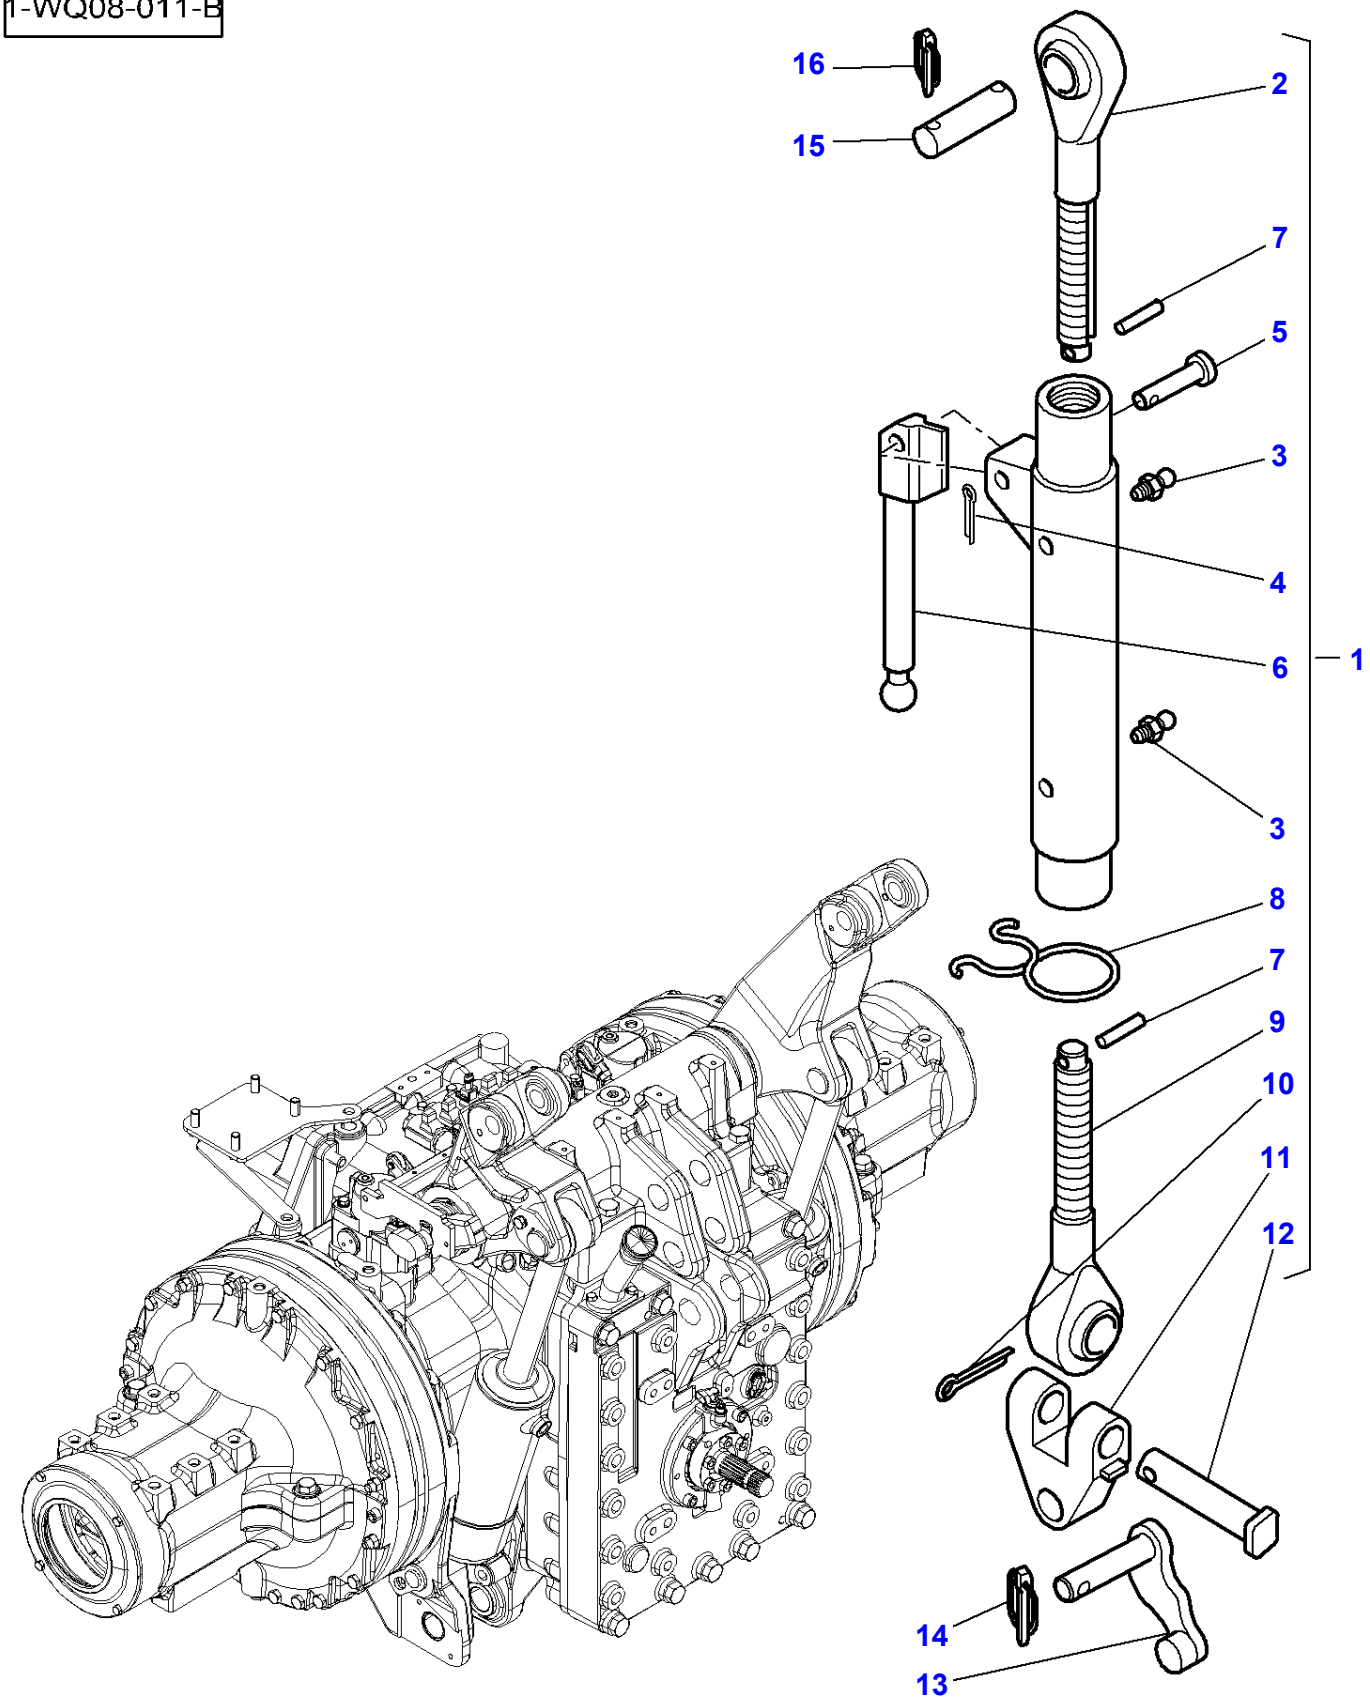


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275811M91 | 1 | Top Link | CAT 3<br>Length 754/974MM |
| 2 | 4275809M91 | 1 | Draglink | (1)<br>CAT 3 |
| 3 | 339608X1 | 2 | Grease Nipple | (1) |
| 4 | 1442967X1 | 1 | Pin | (1) |
| 5 | 4271225M1 | 1 | Pin | (1) |
| 6 | 4271224M1 | 1 | Handle | (1) |
| 7 | 339192X1 | 2 | Pin | (1) |
| 8 | 4271557M1 | 1 | Spring | (1) |
| 9 | 4275810M1 | 1 | Draglink | (1) |
| 10 | 354092X1 | 1 | Pin | (1) |
| 11 | 4271222M1 | 1 | Clevis | (1) |
| 12 | 4271223M1 | 1 | Plate | (1) |
| 13 | H926.870.050.021 | 1 | Pin | |
| 14 | 3387161M2 | 1 | Pin | Diameter 12 X 45MM |
| 15 | 184.870.050.020 | 1 | Bush | |
| 16 | 3387161M2 | 1 | Pin | |

1-WQ34-011-A

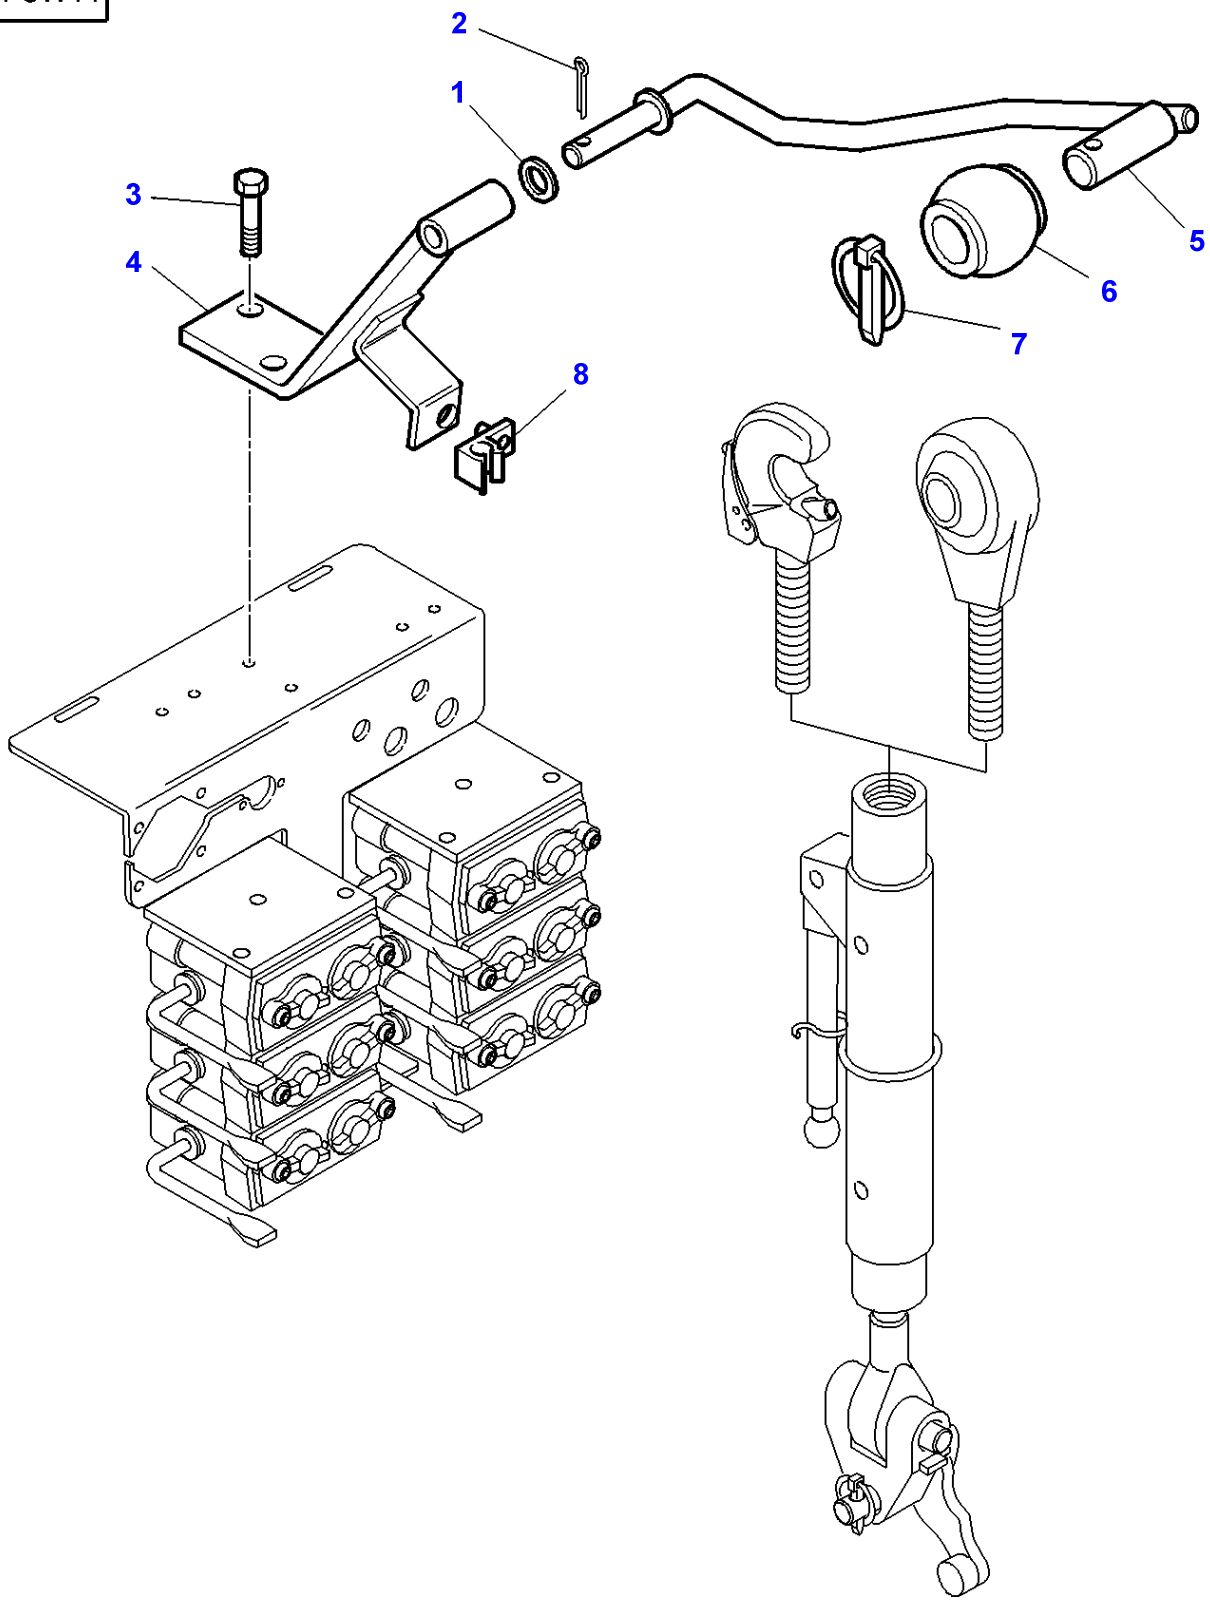


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 339615X1 | 1 | Washer | |
| 2 | 354080X1 | 1 | Split Pin | |
| 3 | 339761X1 | 2 | Hex. Sock. Screw | M8 X 25 |
| 4 | 3789956M1 | 1 | Support | |
| 5 | 3789957M2 | 1 | Support | |
| 6 | **3042433M1** | 1 | Toggle | |
| 7 | **3011024X1** | 1 | Pin | |
| 8 | 3798993M1 | 1 | Clip | |

1-WQ11-007-B

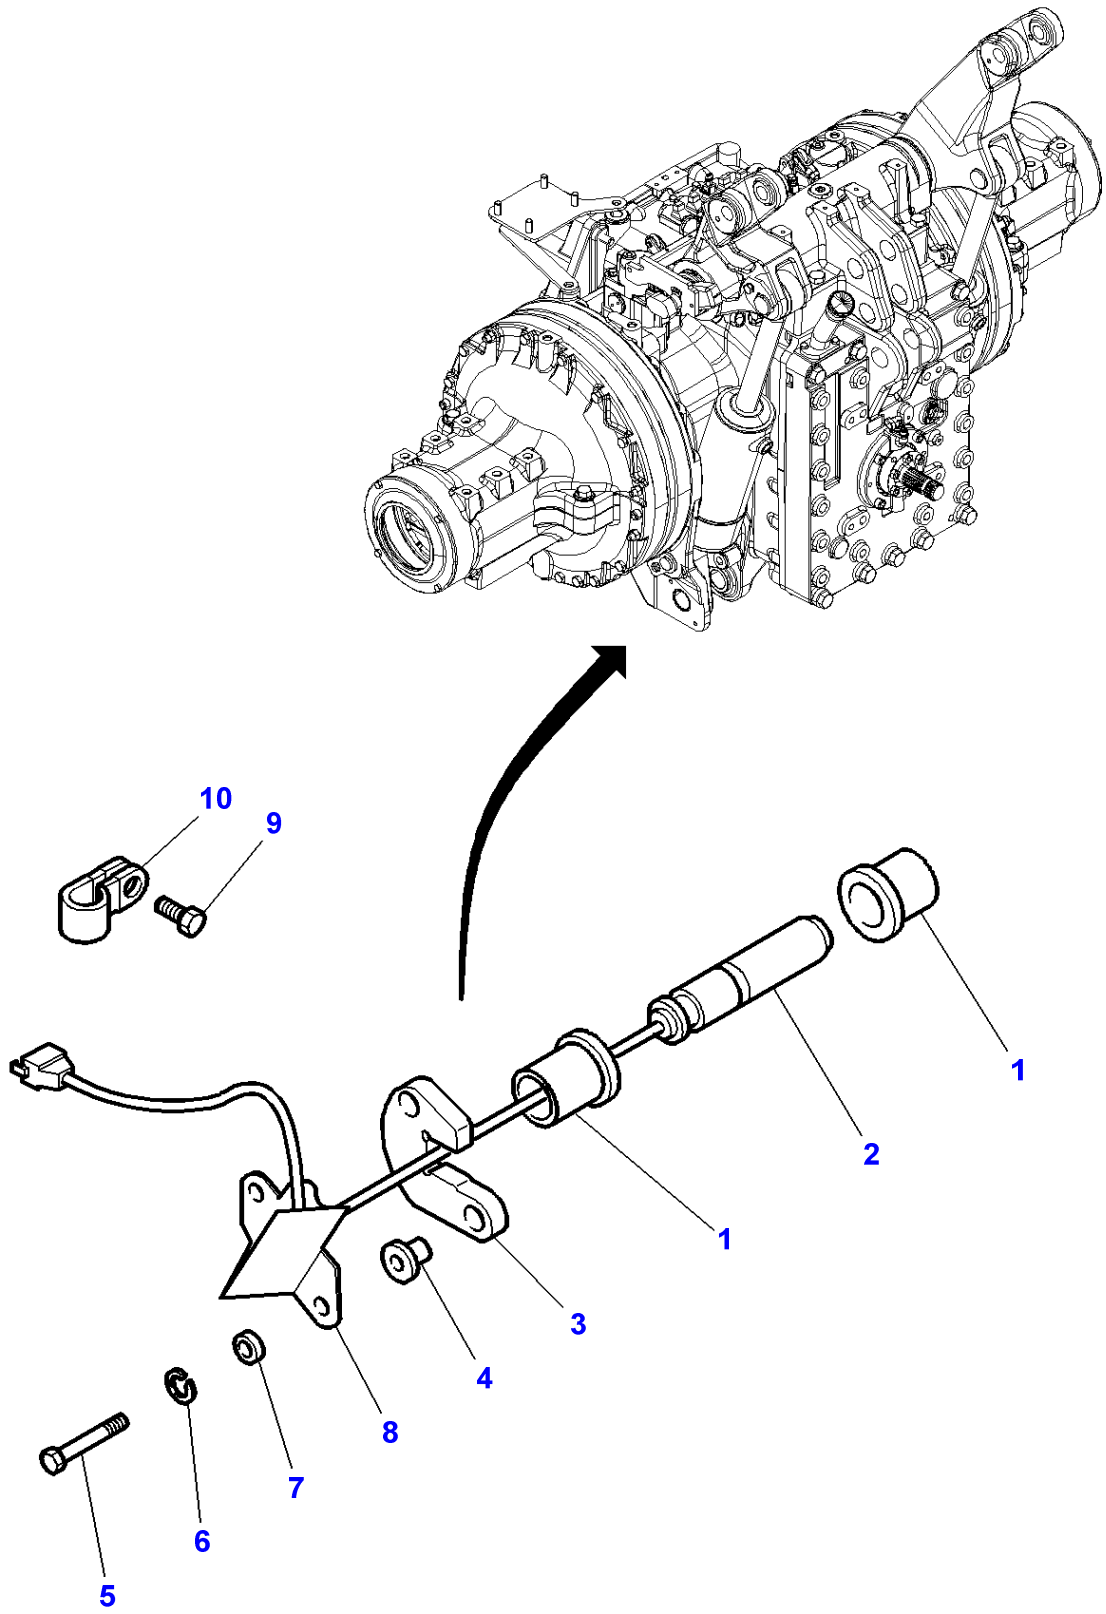


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 903860070010 | 4 | Bush | |
| 2 | **3716981M1** | 2 | Inductive Sensor | |
| 3 | 816860070011 | 2 | Locking Plate | |
| 4 | 199860070010 | 4 | Bush | |
| 5 | 339019X1 | 4 | Hex. Sock. Screw | M10 X 50 |
| 6 | 339376X1 | 4 | Lock Washer | |
| 7 | 281880010070 | 4 | Ring | |
| 8 | 816860070030 | 1 | Protector | Left Hand |
| | 816860070040 | 1 | Protector | Right Hand |
| 9 | 391074X1 | 2 | Hex. Sock. Screw | |
| 10 | 3389841M1 | 2 | Clip | |

1-WQ09-007-A

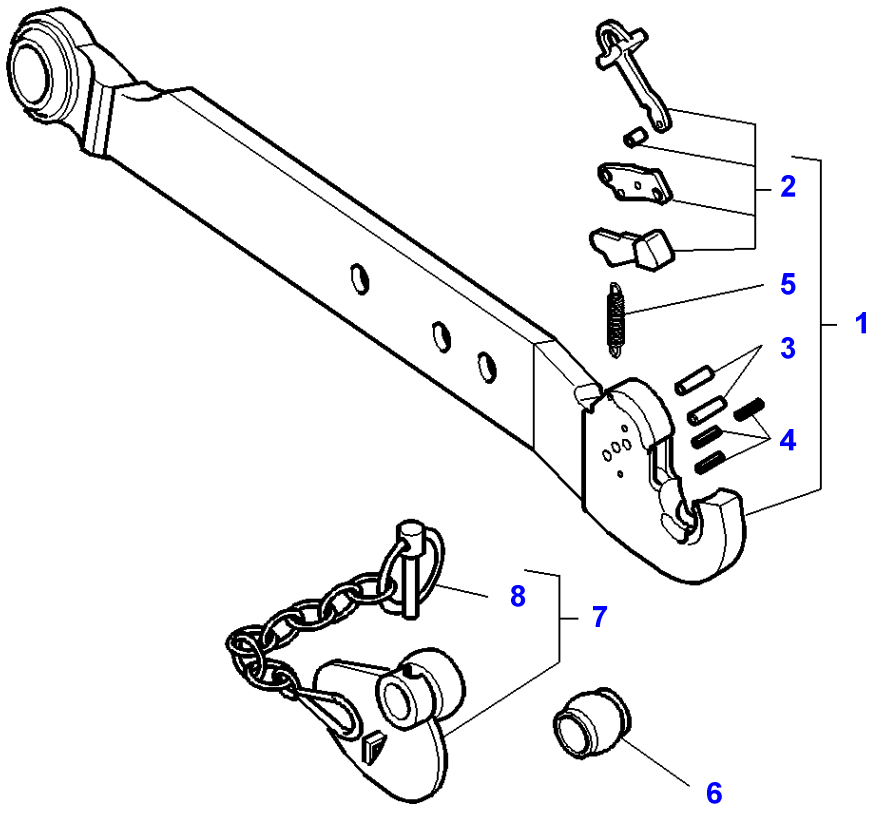


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3789398M91 | 1 | Bar | Right Hand<br>CAT 3 |
| | 3789399M91 | 1 | Bar | Left Hand<br>CAT 3 |
| 2 | 3903954M91 | 1 | Kit, Lever | (1) |
| 3 | 3903948M91 | 1 | Kit, Roll Pins | (1) |
| 4 | 3903947M91 | 1 | Kit, Roll Pins | (1) |
| 5 | 3903949M1 | 1 | Spring | (1) |
| 6 | **3042430M1** | 2 | Toggle | CAT 2/3 |
| | **3042431M1** | 2 | Toggle | CAT 3 |
| 7 | **3042427M1** | 2 | Toggle | CAT 2/3 |
| | **3042428M1** | 2 | Toggle | CAT 3 |
| 8 | 3102086M91 | 1 | Linch Pin | (7) |

1-WQ06-005-A

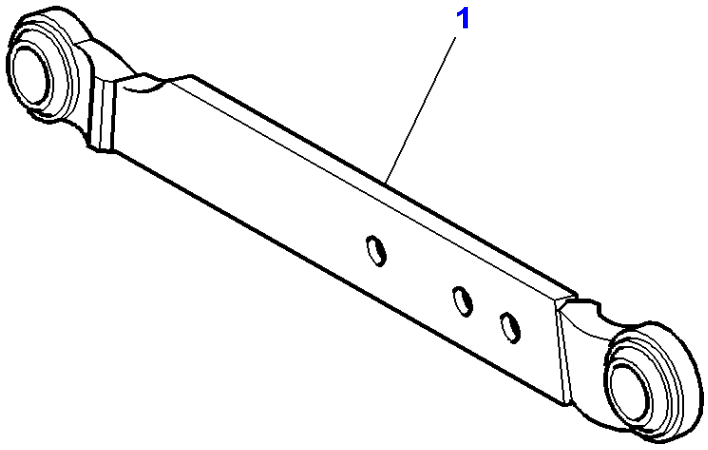


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275847M91 | 1 | Bar | Right Hand CAT 3 |
| | 4275848M91 | 1 | Bar | Left Hand CAT 3 |

1-WQ16-010-A

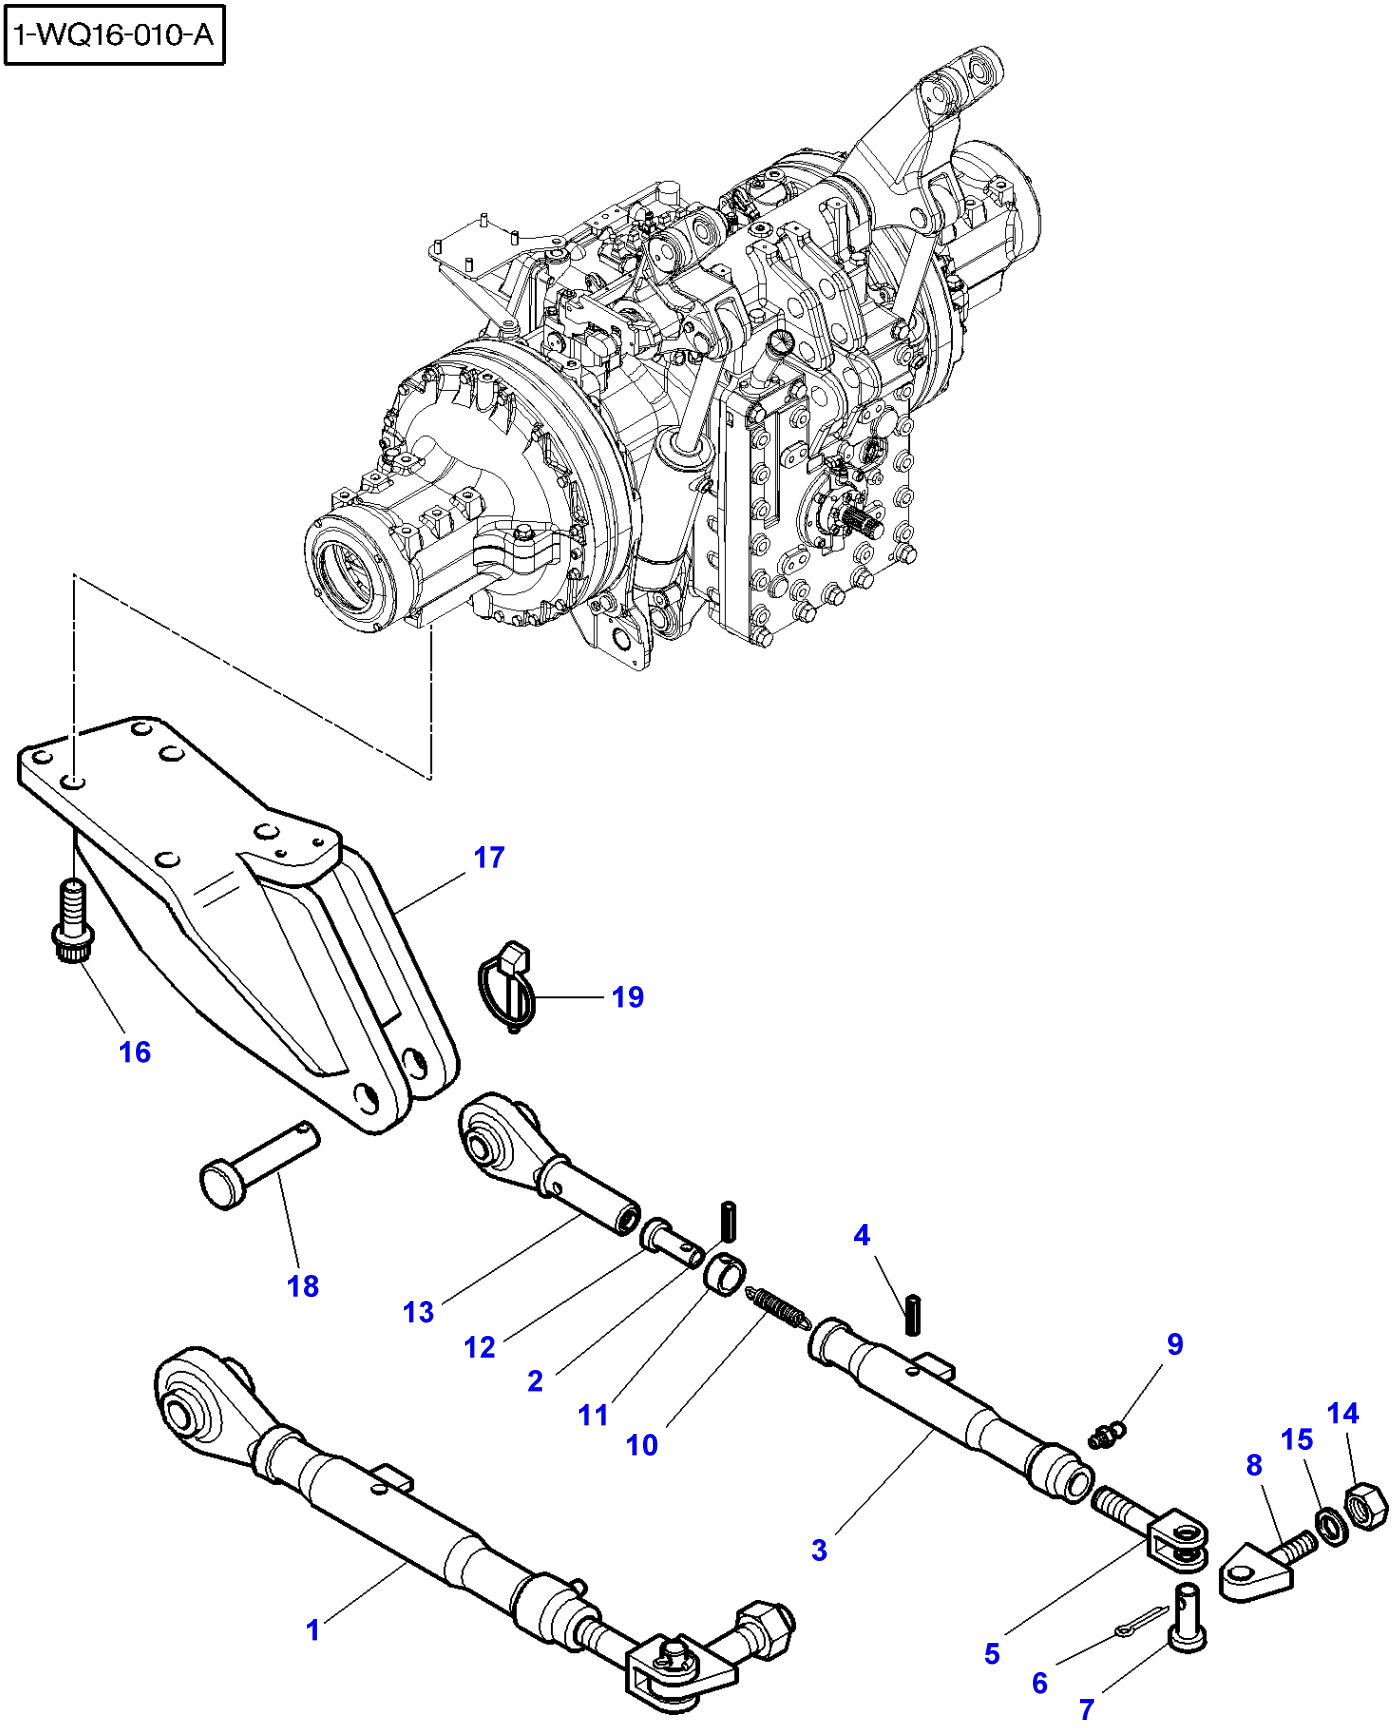


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271572M91 | 2 | Stabiliser | Length 407/502 |
| 2 | 391290X1 | 1 | Pin | (1) Diameter 5 X 30 |
| 3 | 3794472M91 | 1 | Tube | (1) |
| 4 | 3819644M1 | 1 | Spirol Pin | (1) Diameter 8 X 50 |
| 5 | 3790004M1 | 1 | Clevis | (1) |
| 6 | 391371X1 | 1 | Split Pin | (1) Diameter 5 X 40 |
| 7 | 3019228X1 | 1 | Clevis Pin | (1) |
| 8 | 4271109M1 | 1 | Journal | (1) |
| 9 | 339608X1 | 1 | Grease Nipple | (1) |
| 10 | 3615711M1 | 1 | Spring | (1) |
| 11 | 3615709M1 | 1 | Sleeve | (1) |
| 12 | 3615710M1 | 1 | Clevis Pin | (1) |
| 13 | 3794411M91 | 1 | Toggle | (1) |
| 14 | 3010067X1 | 1 | Locknut | (1) |
| 15 | 4271602M1 | 1 | Washer | (1) |
| 16 | 3011608X1 | 8 | Screw | M20 X 75 |
| 17 | 3789400M1 | 1 | Support | Left Hand |
| | 3789401M1 | 1 | Support | Right Hand |
| 18 | 3582043M2 | 2 | Clevis Pin | |
| 19 | 3792034M1 | 2 | Pin | |

1-WQ19-006-A

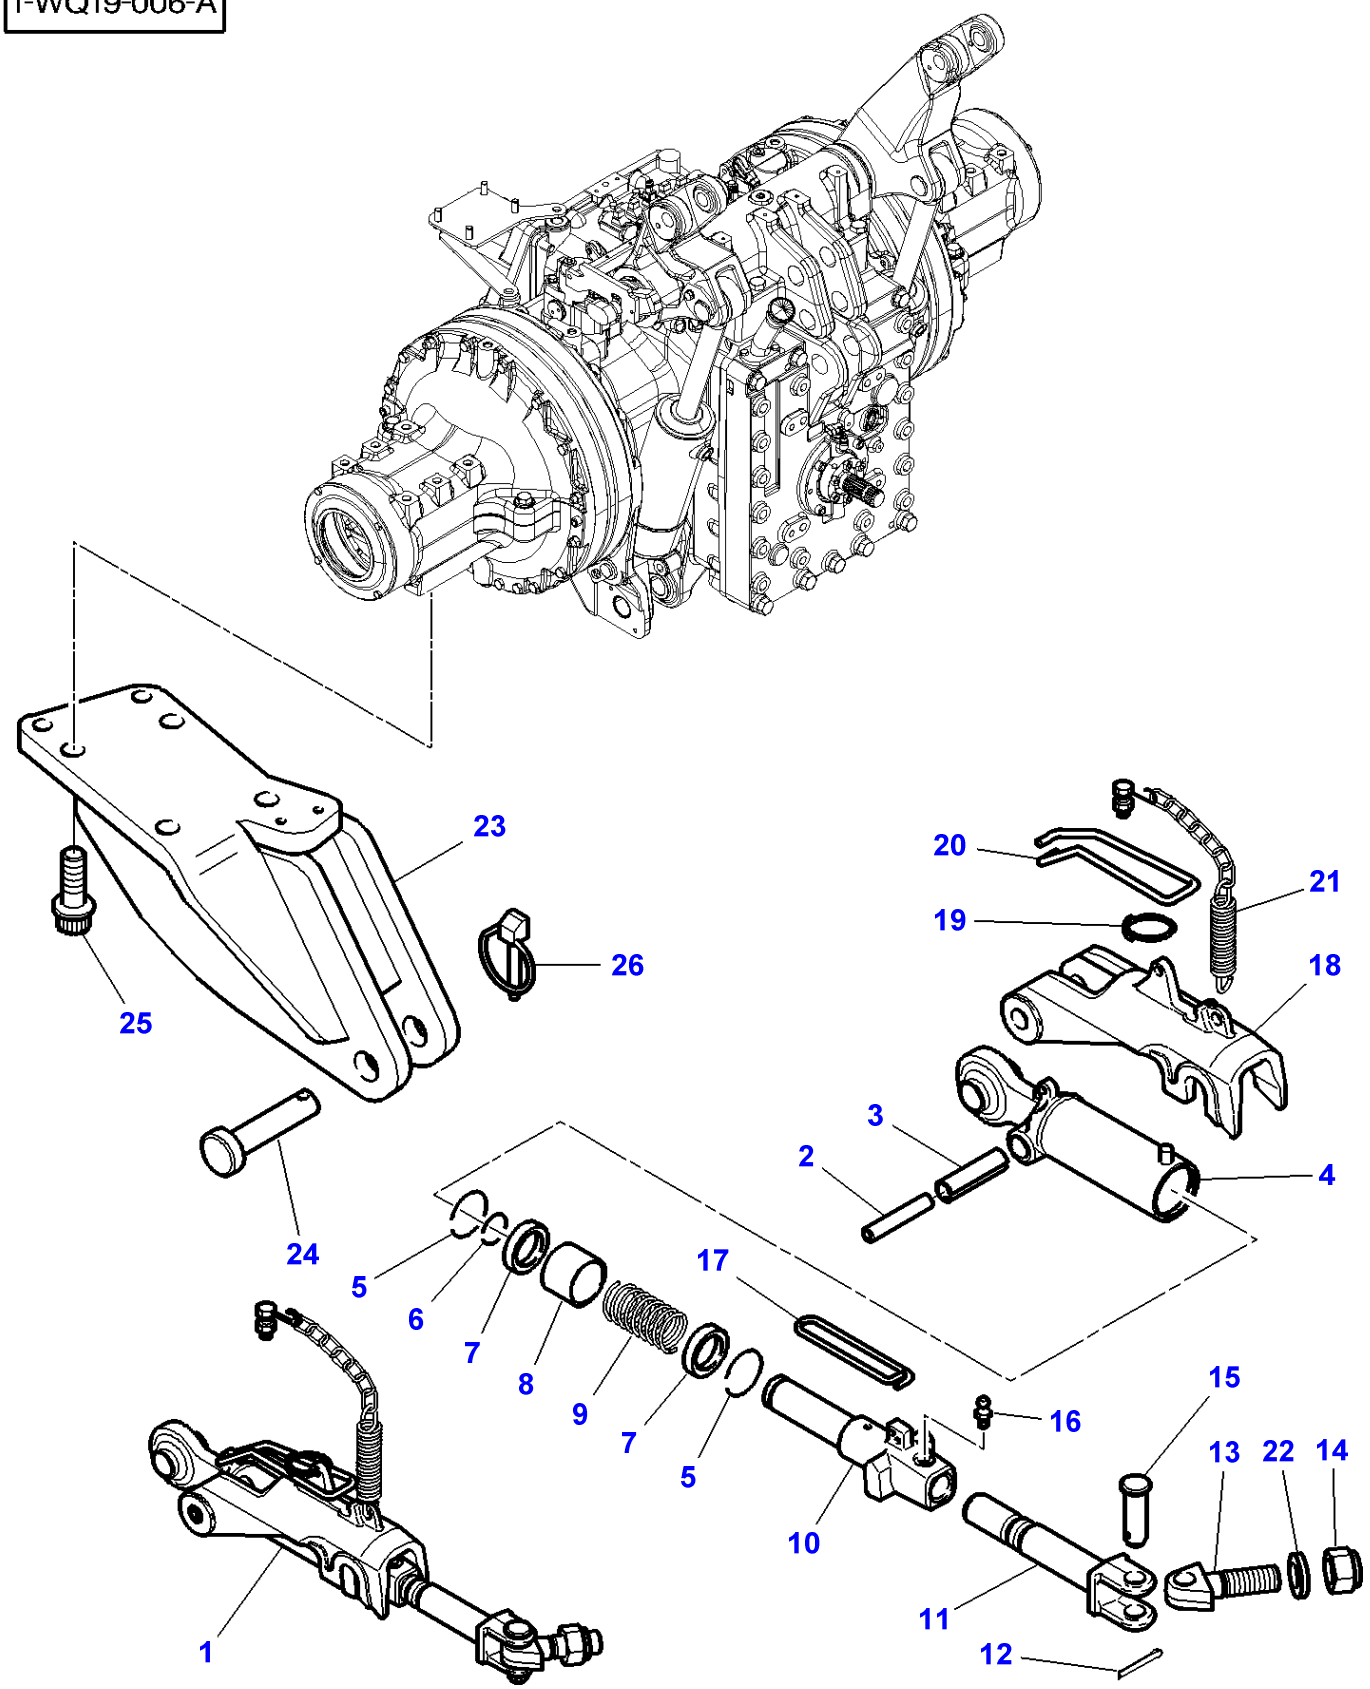


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271707M93 | 2 | Stabiliser | |
| 2 | 4271699M1 | 1 | Pin | (1) |
| 3 | 4271698M1 | 1 | Pin | (1) |
| 4 | 4271696M1 | 1 | Toggle | (1) |
| 5 | 4271690M1 | 2 | Bush | (1) |
| 6 | 4271694M1 | 1 | Bush | (1) |
| 7 | 4271691M1 | 2 | Spacer | (1) |
| 8 | 4271693M1 | 1 | Spacer | (1) |
| 9 | 4271692M1 | 1 | Spring | (1) |
| 10 | 4271688M1 | 1 | Tube | (1) |
| 11 | 4271708M1 | 1 | Clevis | (1) |
| 12 | 391371X1 | 1 | Split Pin | (1) |
| 13 | 4271109M1 | 1 | Journal | (1) |
| 14 | 3010067X1 | 1 | Locknut | (1) |
| 15 | 3019228X1 | 1 | Clevis Pin | (1) |
| 16 | 339608X1 | 1 | Grease Nipple | (1) |
| 17 | 4271689M1 | 1 | Spring | (1) |
| 18 | 4271697M1 | 1 | Latch | (1) |
| 19 | 4271700M1 | 1 | Ring | (1) |
| 20 | 4271695M1 | 1 | Handle | (1) |
| 21 | 4271703M91 | 1 | Chain | (1) |
| 22 | 4271602M1 | 1 | Washer | (1) |
| 23 | 3789400M1 | 1 | Support | Left Hand |
| | 3789401M1 | 1 | Support | Right Hand |
| 24 | 3582043M2 | 2 | Clevis Pin | |
| 25 | 3011608X1 | 8 | Screw | M20 X 75 |
| 26 | 3792034M1 | 2 | Pin | |

1-WQ15-004-B

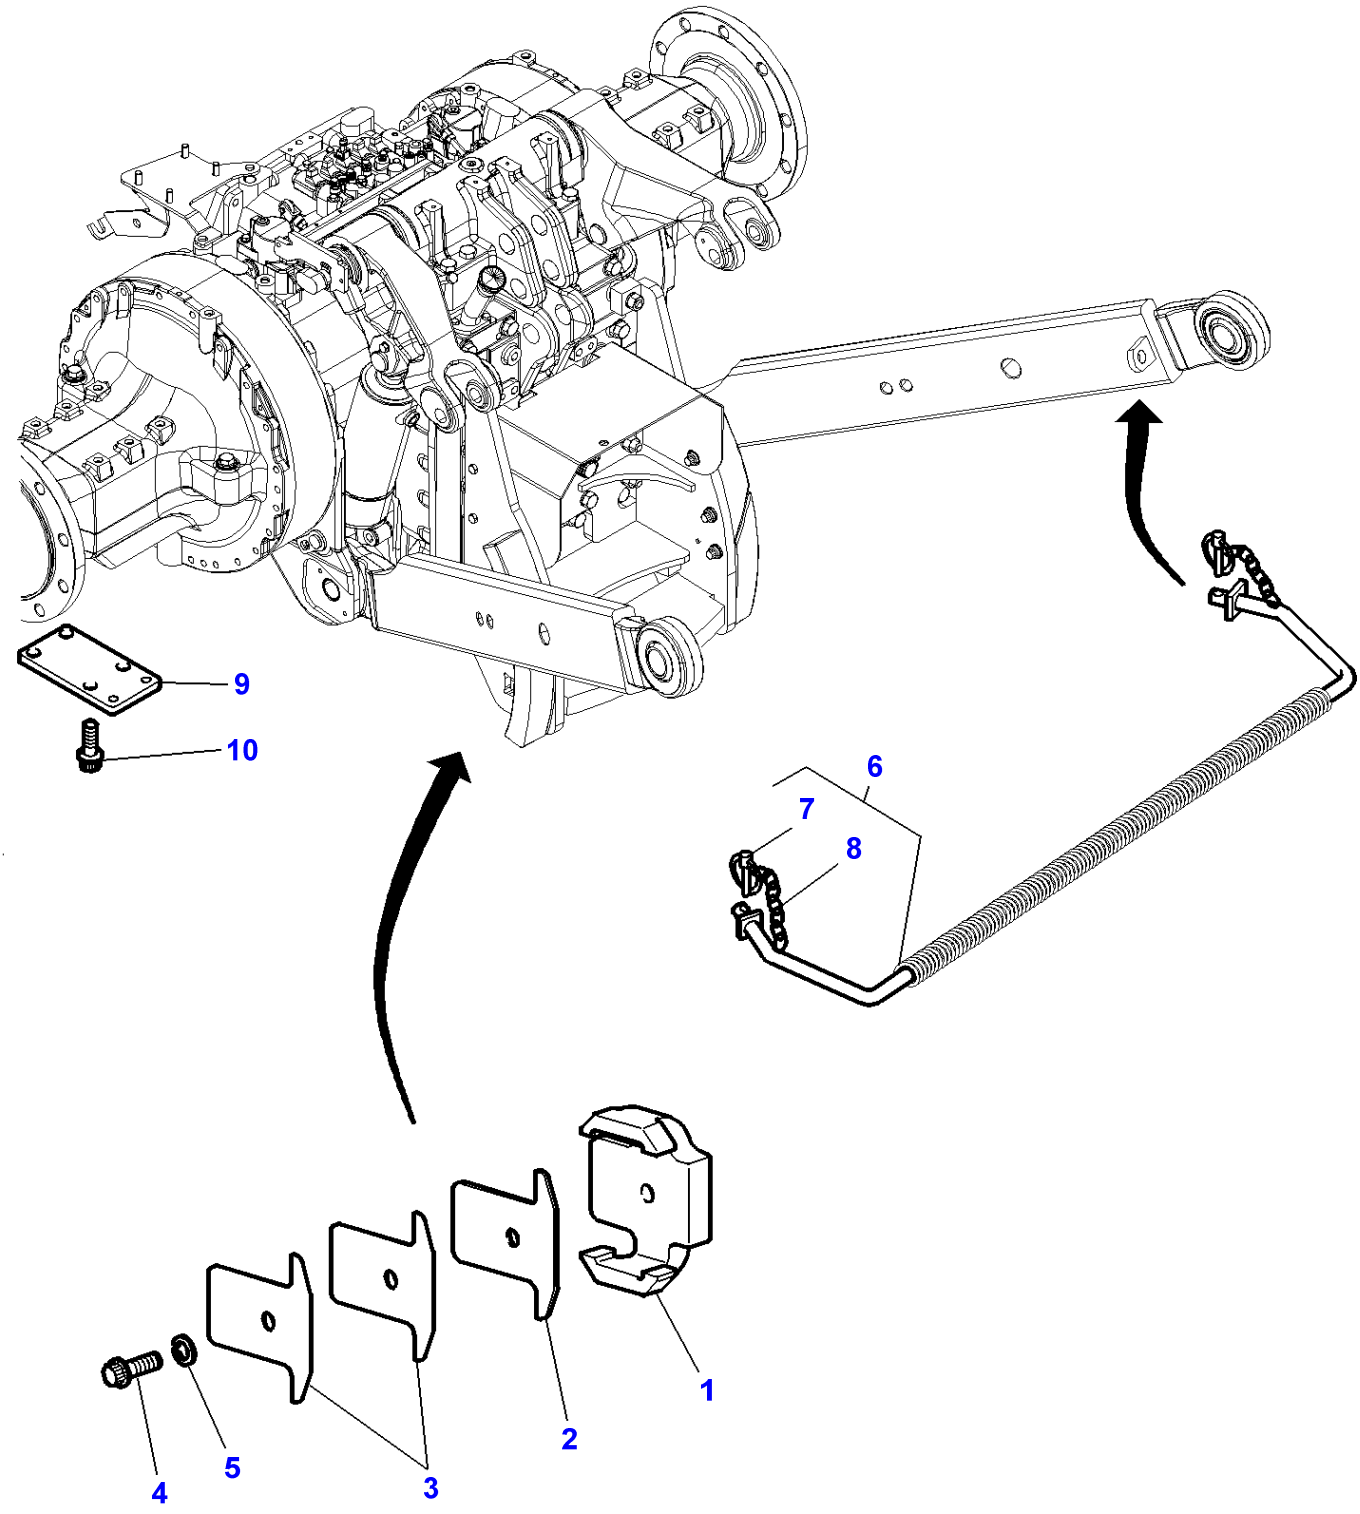


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 926871040050 | 2 | Stop | |
| 2 | 926871040070 | 2 | Base Plate | |
| 3 | 926871040080 | 4 | Base Plate | |
| 4 | 3009805X1 | 2 | Screw Metric | M16 X 60 |
| 5 | 339377X1 | 2 | Lock Washer | |
| 6 | 3792237M1 | 1 | Spring | |
| 7 | 3105774M1 | 2 | Pin | (6) |
| 8 | 3105772M1 | 2 | Ring | (6) |
| 9 | 4279957M1 | 2 | Support | |
| 10 | 3011608X1 | 8 | Screw | M20 X 75 |

1-WQ14-002-A

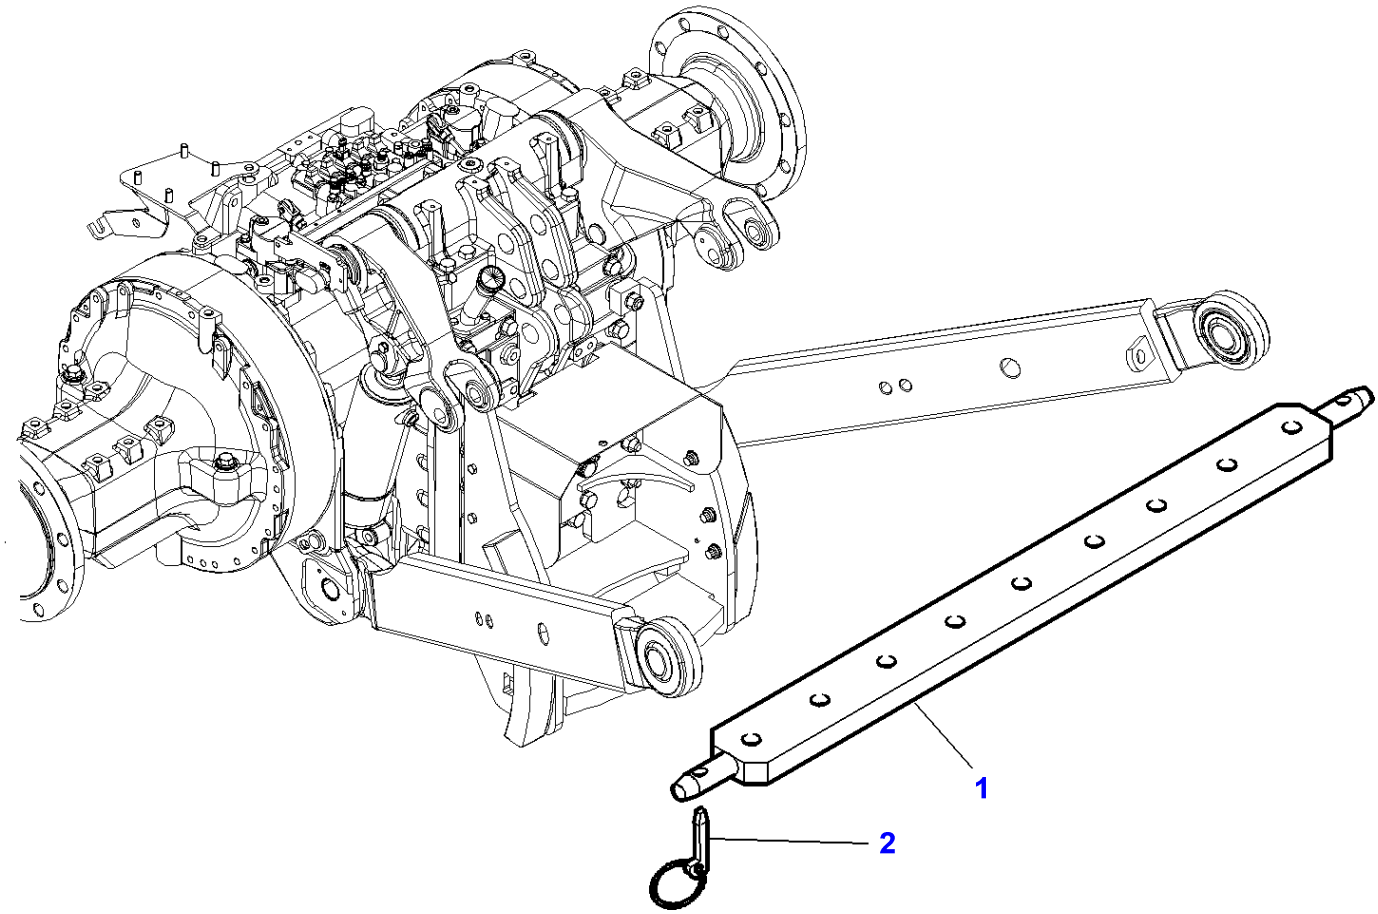


https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3387153M1 | 1 | Bar |
| 2 | 3581687M1 | 2 | Pin |

1-WQ12-022-A

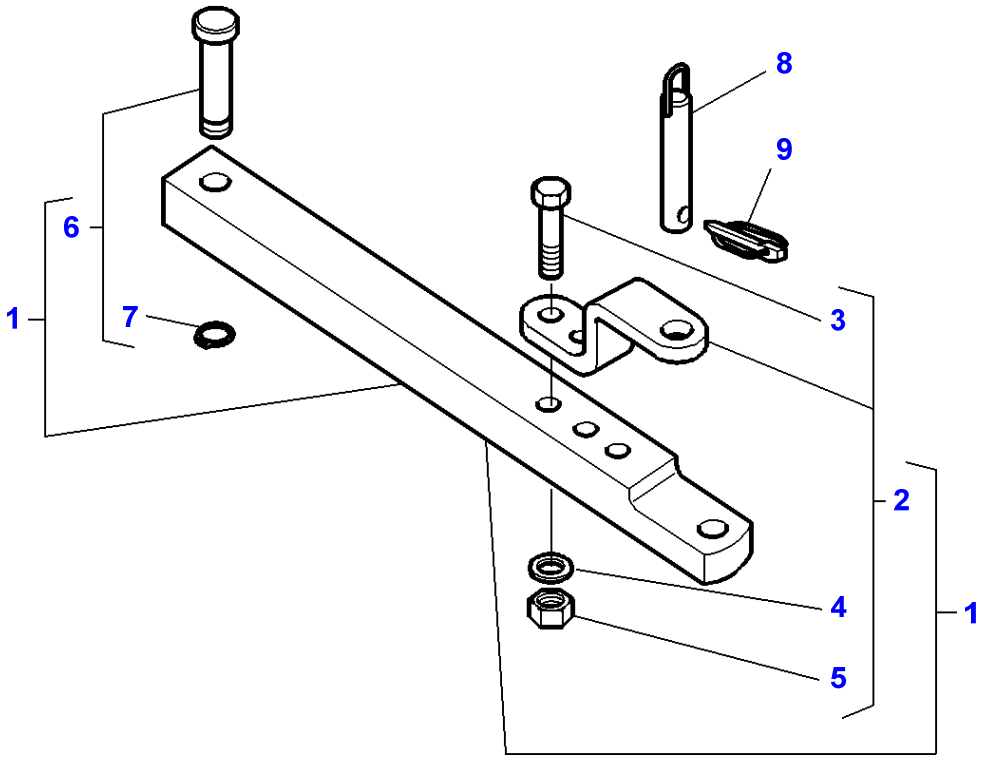


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3792662M91 | 1 | Bar | ISO |
| 2 | 3907058M91 | 1 | Clevis | (1) |
| 3 | 339616X1 | 2 | Hex. Sock. Screw | (2)<br>M16 X 120 MM |
| 4 | 1441664X1 | 2 | Washer | (2) |
| 5 | 339034X1 | 2 | Nut | (2) |
| 6 | 3907049M91 | 1 | Clevis Pin | (1) |
| 7 | 1440447X1 | 1 | Circlip | (6) |
| 8 | **3790349M92** | 1 | Pin Hitch | Diameter 30 X 191 MM |
| 9 | 3382826M1 | 1 | Pin | Diameter 10 X 45 MM |

1-WQ12-026-A

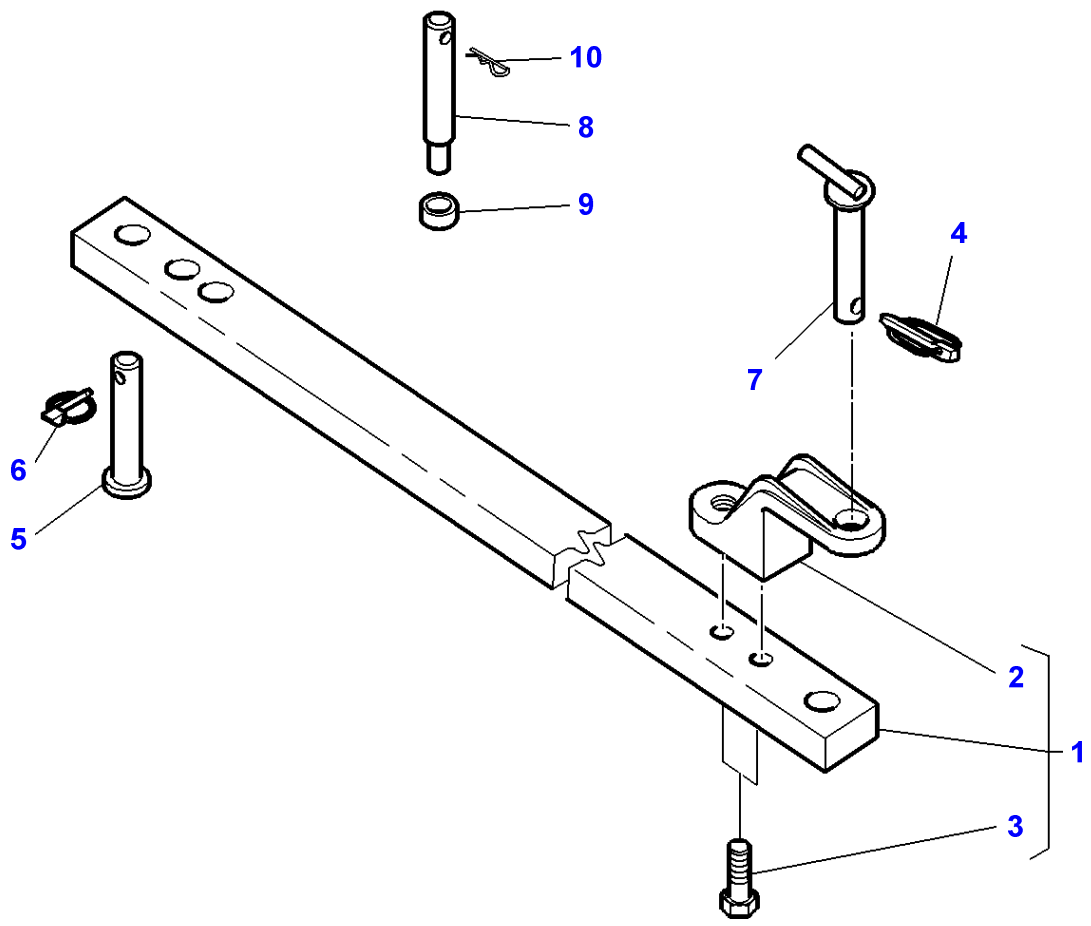


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4270650M91 | 1 | Bar | 50X80X720MM |
| 2 | 3793414M1 | 1 | Clevis | (1) |
| 3 | 3011383X1 | 2 | Hex. Sock. Screw | (1)<br>M20 X 80 |
| 4 | 3792034M1 | 1 | Pin | |
| 5 | 3011338X1 | 1 | Clevis Pin | Diameter 30MM |
| 6 | 3382826M1 | 1 | Pin | |
| 7 | **4272346M2** | 1 | Pin Hitch | Diameter 30X179MM |
| 8 | 4270649M1 | 2 | Clevis Pin | |
| 9 | 4270652M1 | 2 | Spacer | |
| 10 | 3010334X1 | 2 | Hair Pin | |

1-WQ12-027-A

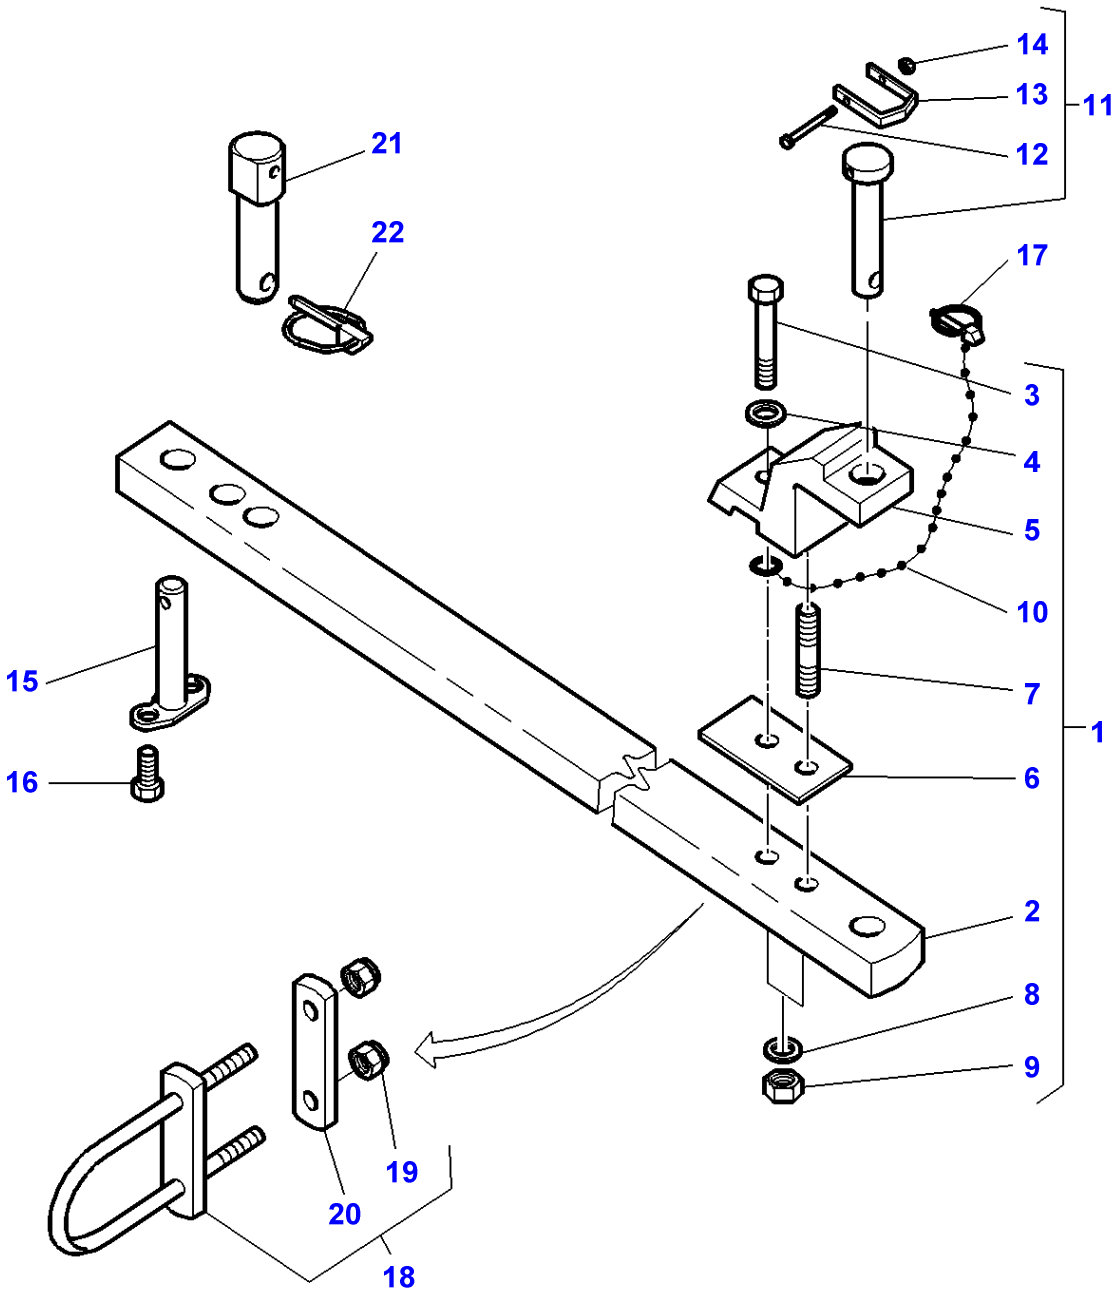


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G716.501.120.062 | 1 | Tie Rod | |
| 2 | 716.501.120.630 | 1 | Tie Rod | (1) |
| 3 | 3581985M1 | 1 | Hex. Sock. Screw | (1)<br>M16X90 |
| 4 | 339377X1 | 1 | Lock Washer | (1) |
| 5 | | 1 | Yoke | (1)<br>Not serviced,order REF NO 1 |
| 6 | 716.501.120.620 | 1 | Chock | (1) |
| 7 | 920.501.120.100 | 1 | Stud | (1) |
| 8 | 1440319X1 | 1 | Washer Blister | (1) |
| 9 | 3009746X1 | 1 | Nut | (1)<br>M20 |
| 10 | H716.921.050.030 | 1 | String | (1) |
| 11 | G916.501.120.050 | 1 | Clevis Pin | Diameter 30MM |
| 12 | 339132X1 | 1 | Hex. Sock. Screw | (11)<br>M8X75 |
| 13 | 920.500.120.520 | 1 | Stirrup | (11) |
| 14 | 394367X1 | 1 | Locknut | (11) |
| 15 | H816.500.120.020 | 1 | Plug. | |
| 16 | 3009492X1 | 2 | Hex. Sock. Screw | M10X25 |
| 17 | 3382826M1 | 1 | Pin | |
| 18 | G920.501.120.020 | 1 | Stirrup | |
| 19 | 391237X1 | 2 | Nut Metric | (18)<br>M16 |
| 20 | 920.501.120.040 | 1 | Strap | (18) |
| 21 | 716.501.120.030 | 2 | Pin | |
| 22 | 3792034M1 | 2 | Pin | |

1-WQ12-028-A

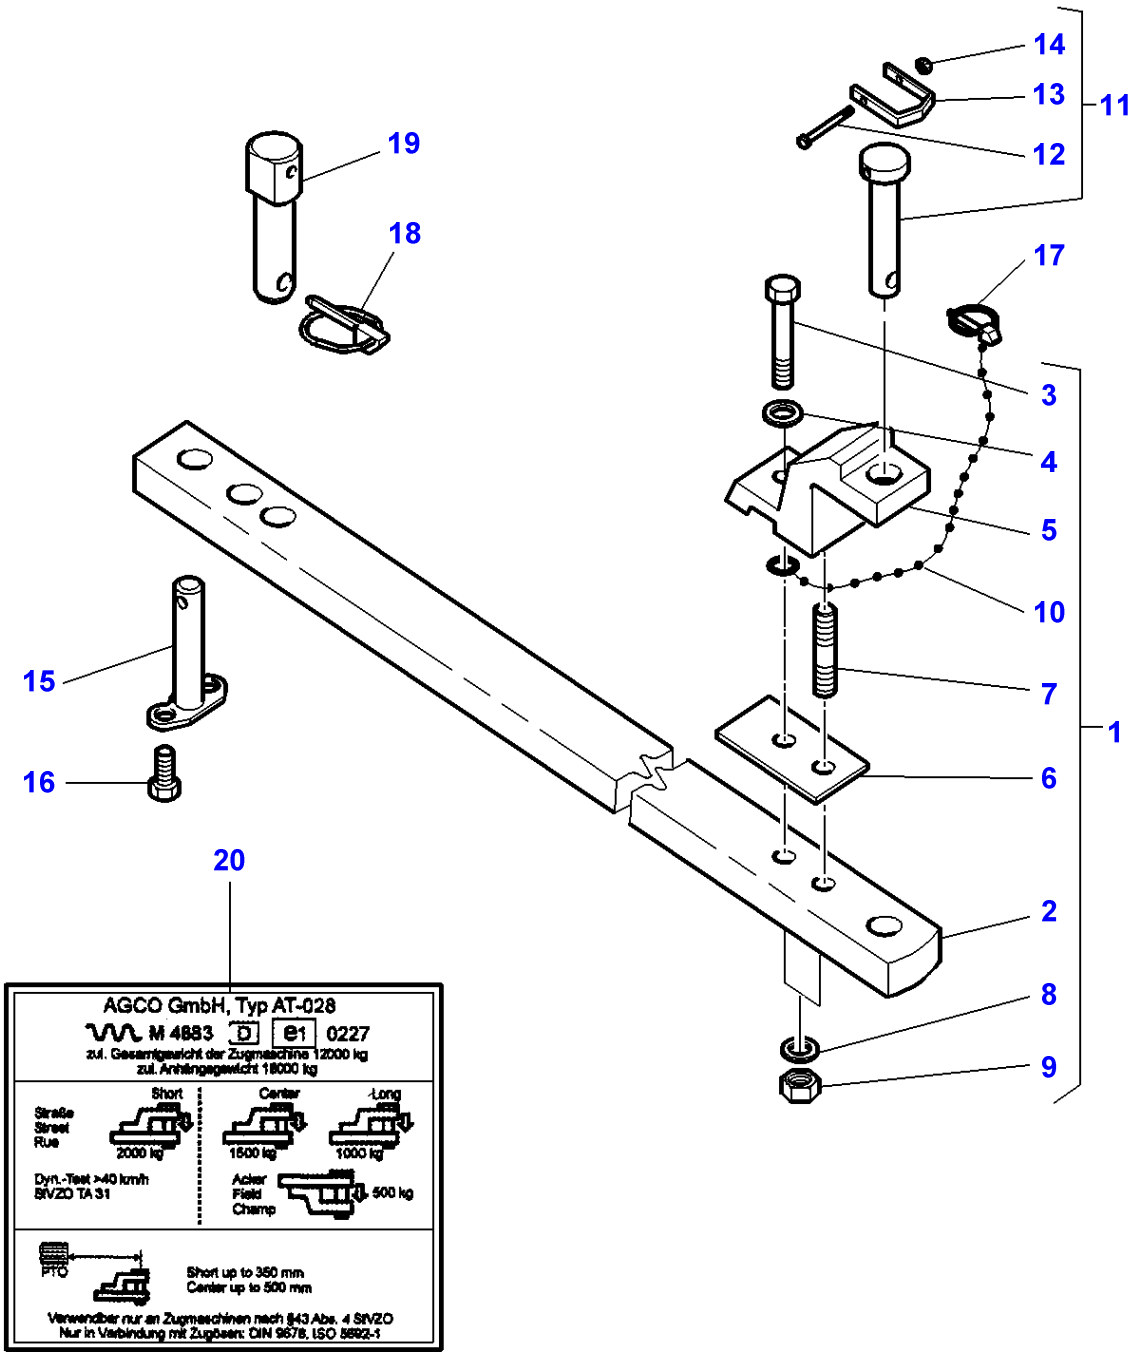

14
13
11
12
19
18
17
3
4
5
10
15
7
1
16
6
20
2
8
9
AGCO GmbH, Typ AT-028
M 4883 D e1 0227
zul. Gesamtgewicht der Zugmaschine 12000 kg
zul. Anhängegewicht 18000 kg
Short
Center
Long
Straße
Street
Rue
2000 kg
1500 kg
1000 kg
Dyn.-Test >40 km/h
StVZO TA 31
Acker
Field
Champ
500 kg
PTO
Short up to 350 mm
Center up to 500 mm
Verwendbar nur an Zugmaschinen nach §43 Abs. 4 StVZO
Nur in Verbindung mit Zugösen: DIN 9678, ISO 5692-1

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G716.501.120.062 | 1 | Tie Rod | |
| 2 | 716.501.120.630 | 1 | Tie Rod | (1) |
| 3 | 3581985M1 | 1 | Hex. Sock. Screw | (1)<br>M16X90 |
| 4 | 339377X1 | 1 | Lock Washer | (1) |
| 5 | | 1 | Yoke | (1)<br>Not serviced,order REF NO 1 |
| 6 | 716.501.120.620 | 1 | Chock | (1) |
| 7 | 920.501.120.100 | 1 | Stud | (1) |
| 8 | 1440319X1 | 1 | Washer Blister | (1) |
| 9 | 3009746X1 | 1 | Nut | (1)<br>M20 |
| 10 | H716.921.050.030 | 1 | String | (1) |
| 11 | **G916.501.120.050** | 1 | Clevis Pin | Diameter 30MM |
| 12 | 339132X1 | 1 | Hex. Sock. Screw | (11)<br>M8X75 |
| 13 | 920.500.120.520 | 1 | Stirrup | (11) |
| 14 | 394367X1 | 1 | Locknut | (11) |
| 15 | H816.500.120.020 | 1 | Plug. | |
| 16 | 3009492X1 | 2 | Hex. Sock. Screw | M10X25 |
| 17 | 3382826M1 | 1 | Pin | |
| 18 | 3792034M1 | 2 | Pin | |
| 19 | 916.501.120.050 | 2 | Pin | |
| 20 | 916.501.120.060 | 1 | Decal | |

1-WQ12-029-A

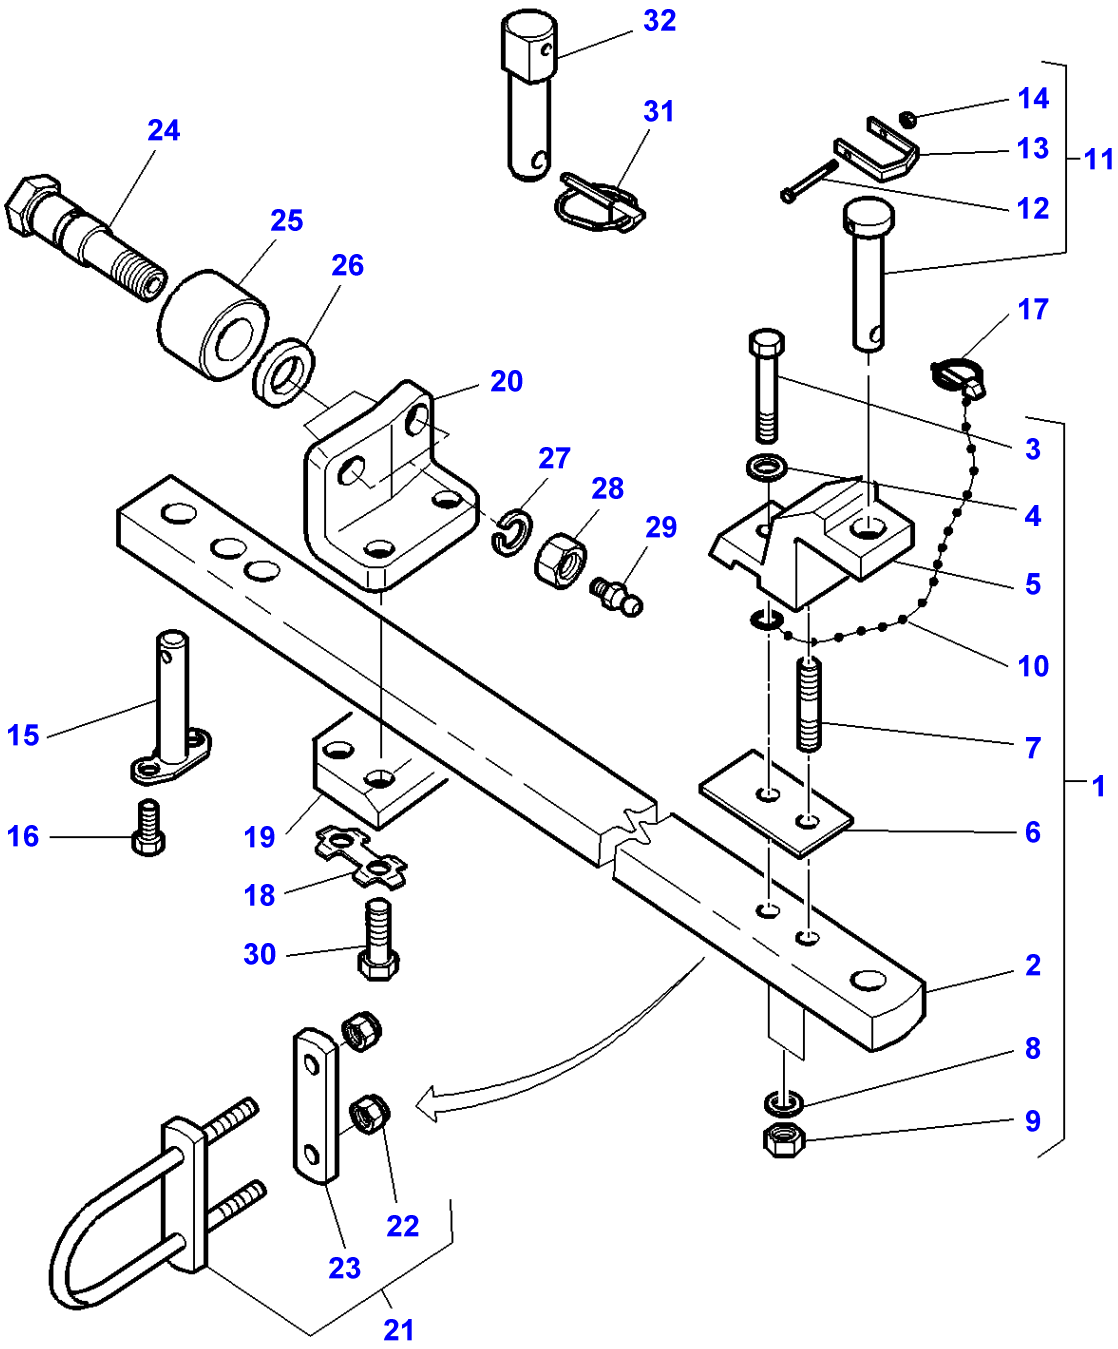

32
31
24
25
26
20
27
28
29
14
13
12
11
17
3
4
5
10
7
1
15
16
19
18
30
6
2
8
9
22
23
21

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G716.501.120.062 | 1 | Tie Rod | |
| 2 | 716.501.120.630 | 1 | Tie Rod | (1) |
| 3 | 3581985M1 | 1 | Hex. Sock. Screw | (1)<br>M16X90 |
| 4 | 339377X1 | 1 | Lock Washer | (1) |
| 5 | | 1 | Yoke | (1)<br>Not serviced,order REF NO 1 |
| 6 | 716.501.120.620 | 1 | Chock | (1) |
| 7 | 920.501.120.100 | 1 | Stud | (1) |
| 8 | 1440319X1 | 1 | Washer Blister | (1) |
| 9 | 3009746X1 | 1 | Nut | (1)<br>M20 |
| 10 | H716.921.050.030 | 1 | String | (1) |
| 11 | G916.501.120.050 | 1 | Clevis Pin | Diameter 30MM |
| 12 | 339132X1 | 1 | Hex. Sock. Screw | (11)<br>M8X75 |
| 13 | 920.500.120.520 | 1 | Stirrup | (11) |
| 14 | 394367X1 | 1 | Locknut | (11) |
| 15 | H816.500.120.020 | 1 | Plug. | |
| 16 | 3009492X1 | 2 | Hex. Sock. Screw | M10X25 |
| 17 | 3382826M1 | 1 | Pin | |
| 18 | 3790457M1 | 2 | Tongue | |
| 19 | 3791470M1 | 1 | Counterplate | |
| 20 | 3791467M2 | 1 | Angle. | M20X80 |
| 21 | G920.501.120.020 | 1 | Stirrup | |
| 22 | 391237X1 | 2 | Nut Metric | (21)<br>M16 |
| 23 | 920.501.120.040 | 1 | Strap | (21) |
| 24 | 3791469M1 | 2 | Clevis Pin | |
| 25 | 3581980M1 | 2 | Roll | |
| 26 | 3791823M1 | 2 | Washer | |
| 27 | 353443X1 | 2 | Lock Washer | |
| 28 | 375102X1 | 2 | Nut Unc | |
| 29 | 364461X1 | 2 | Grease Nipple | |
| 30 | 391332X1 | 4 | Hex. Sock. Screw | M10 X 100 MM |
| 31 | 3011352X1 | 2 | Pin | |
| 32 | 3010560X1 | 2 | Clevis Pin | |


1-WQ12-030-A

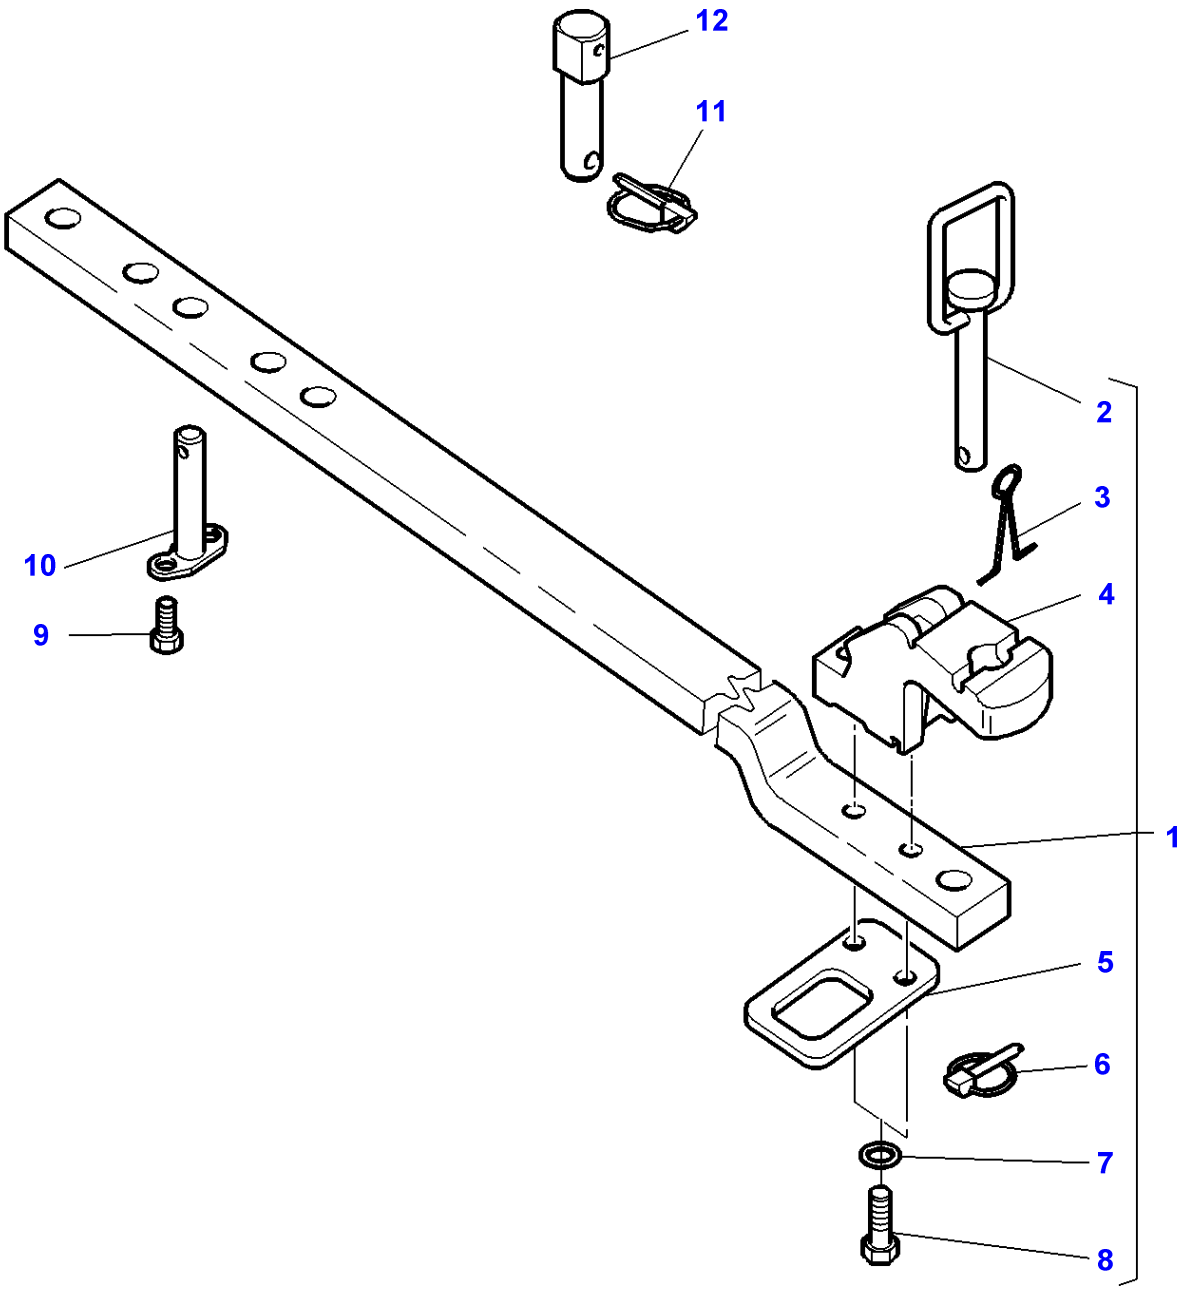

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277061M91 | 1 | Drawbar | |
| 2 | 3795142M1 | 1 | Pin Hitch | (1) |
| 3 | 3795143M1 | 1 | Spring | (1) |
| 4 | 3795141M1 | 1 | Clevis | (1) |
| 5 | 3795530M1 | 1 | Shackle | (1) |
| 6 | 3581687M1 | 1 | Pin | (1) |
| 7 | 385365X1 | 2 | Washer | (1) |
| 8 | 3010945X1 | 2 | Hex. Sock. Screw | (1) M20 X 105 |
| 9 | 3009492X1 | 2 | Hex. Sock. Screw | M10 X 25 |
| 10 | H816.500.120.020 | 1 | Plug. | |
| 11 | 3792034M1 | 2 | Pin | |
| 12 | 716.501.120.030 | 2 | Pin | |

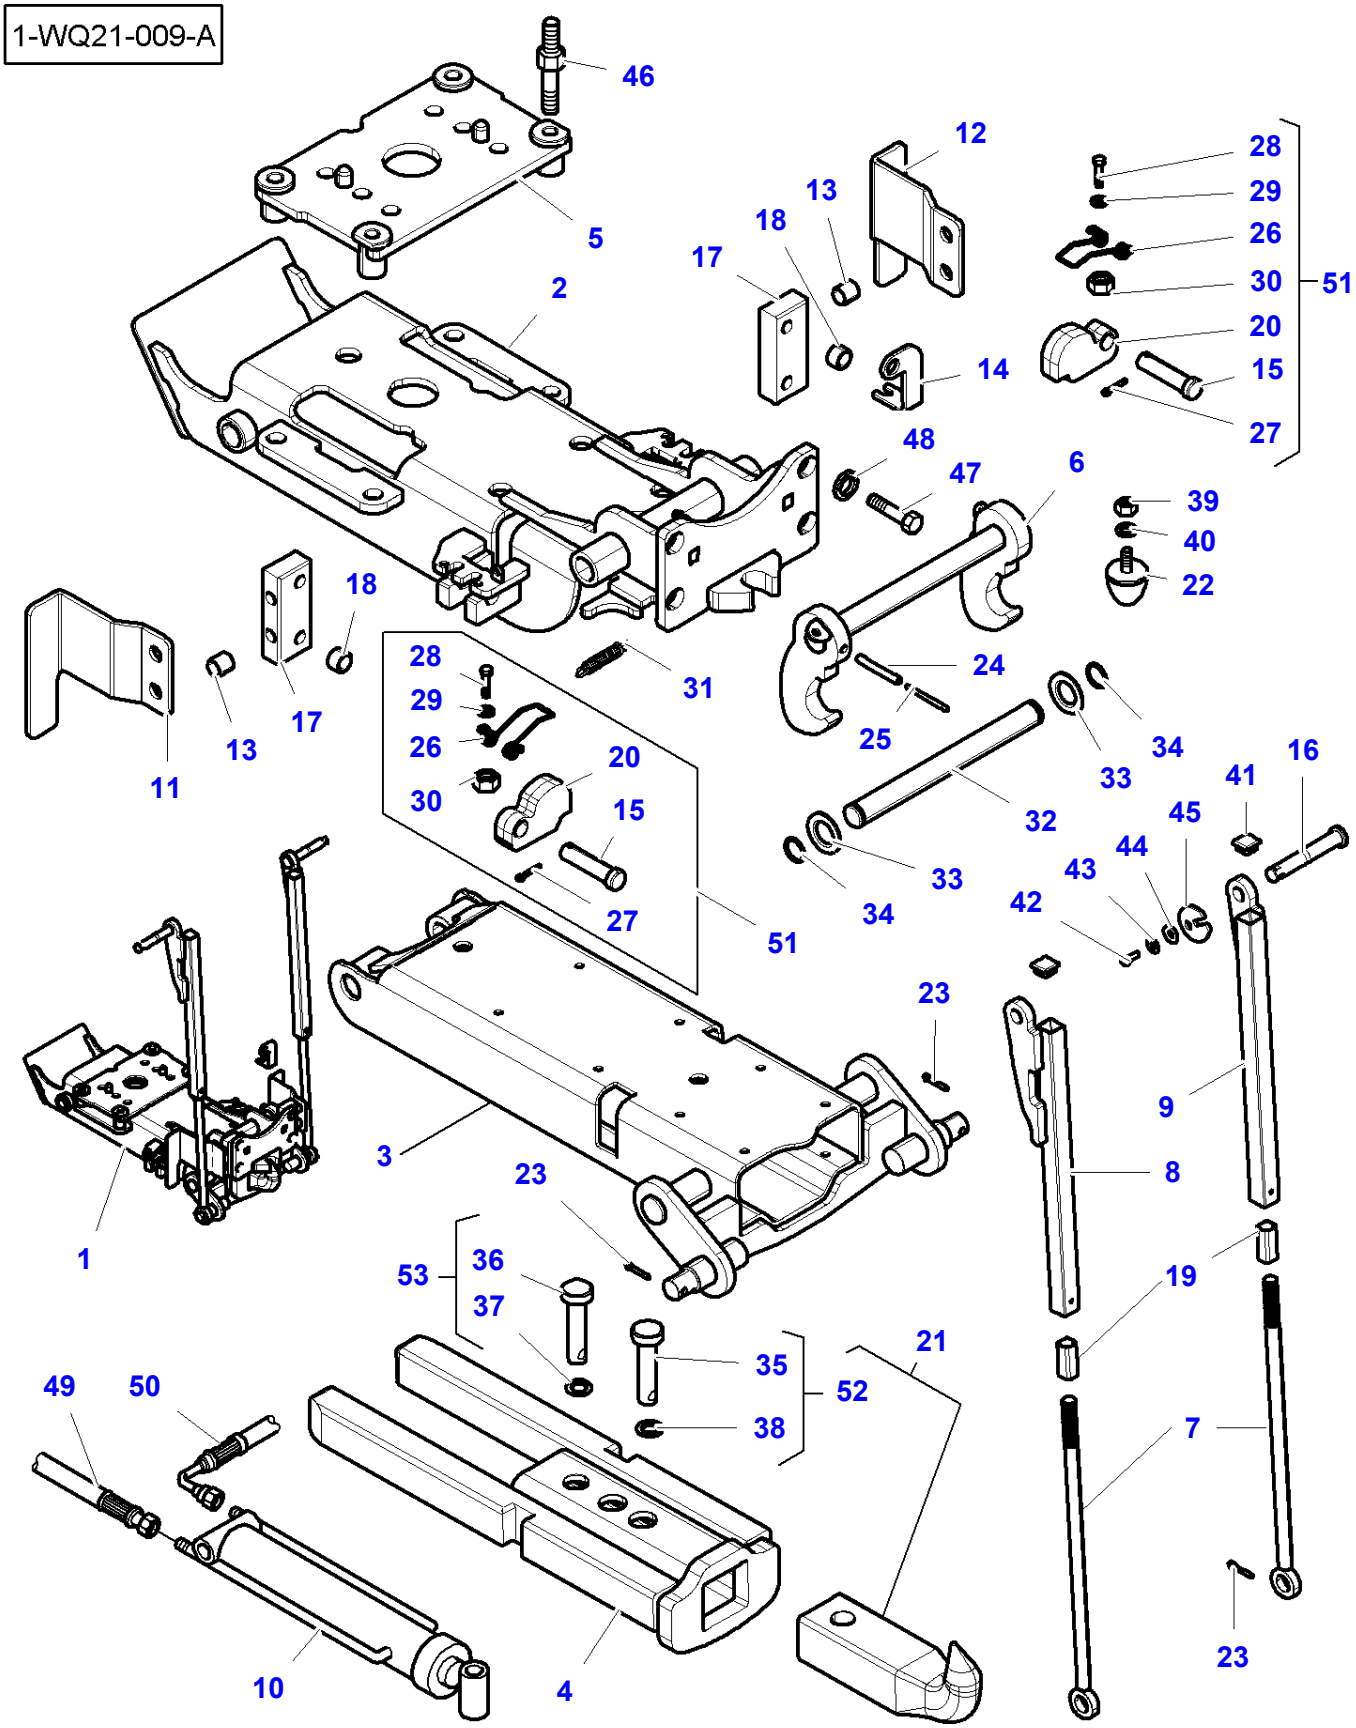
1-WQ21-009-A
46
5
2
12
13
18
17
14
28
29
26
30
20
15
27
51
48
47
6
39
40
22
18
17
13
11
31
24
25
34
33
32
16
41
45
44
43
42
28
29
26
30
20
15
27
51
34
33
23
3
1
23
9
8
53
36
37
35
38
52
21
19
49
50
7
10
4
23


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Automatic Hitch - With Remote Control Page 040-0100

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277063M91 | 1 | Hook | Not serviced,order REF.No1 |
| 2 | | 1 | Frame | |
| 3 | 4277076M91 | 1 | Housing | |
| 4 | 4277079M91 | 1 | Pedestal | |
| 5 | 4277872M91 | 1 | Support | |
| 6 | 4277072M91 | 1 | Hook | |
| 7 | 4277085M91 | 2 | Stem | |
| 8 | 4277083M91 | 1 | Slider Bearing | Left Hand |
| 9 | 4277089M91 | 1 | Slider Bearing | Right Hand |
| 10 | 4273101M1 | 1 | Ram | |
| 11 | 4279943M1 | 1 | Stop | Left Hand |
| 12 | 4279319M1 | 1 | Stop | Right Hand |
| 13 | 4279937M1 | 4 | Spacer | |
| 14 | 4279938M1 | 1 | Thruster | |
| 15 | 3788498M1 | 2 | Pin | (51) |
| 16 | 4277087M1 | 2 | Clevis Pin | |
| 17 | 4279941M1 | 2 | Bracket | |
| 18 | 3907098M91 | 4 | Kit, Spacer | |
| 19 | 3792081M1 | 2 | Nut | |
| 20 | 3795809M1 | 2 | Latch | (51) |
| 21 | 3907048M91 | 1 | Hook | |
| 22 | 3907051M91 | 1 | Buffer | |
| 23 | 390721X1 | 2 | Pin | Diameter 8 X 40 |
| 24 | 1442857X1 | 1 | Roll Pin | Diameter 10 X 80 |
| 25 | 1444437X1 | 1 | Pin | Diameter 6 X 80 |
| 26 | 3788499M1 | 2 | Spring | (51) |
| 27 | 391018X1 | 2 | Pin | (51)<br>Diameter 5 X 36 |
| 28 | 339337X1 | 4 | Hex. Sock. Screw | (51)<br>M8 X 30 |
| 29 | 390972X1 | 8 | Washer | (51)<br>Diameter 8-17 X 1,7 |
| 30 | 394367X1 | 4 | Locknut | (51)<br>M8 |
| 31 | 3795807M1 | 1 | Spring | |
| 32 | 3907093M91 | 1 | Clevis Pin | |
| 33 | 3788518M1 | 2 | Washer | |
| 34 | 3788519M1 | 2 | Ring | |
| 35 | 3792650M1 | 1 | Clevis Pin | (52) |
| 36 | 3907047M91 | 1 | Clevis Pin | (53) |
| 37 | 352438X1 | 1 | Circlip | (53) |
| 38 | 1440477X1 | 1 | Circlip | (52) |
| 39 | 1440329X1 | 1 | Locknut | M10 |
| 40 | 390734X1 | 1 | Washer | Diameter 10-21 X 2 |
| 41 | 3789881M1 | 2 | Plug | |
| 42 | 3009493X1 | 2 | Hex. Sock. Screw | M10 X 30 |
| 43 | 926870030030 | 2 | Bush | |
| 44 | 390597X1 | 2 | Washer | Diameter 10-30 X 2,5 |
| 45 | 926870030020 | 2 | Locking Plate | |
| 46 | 3011551X1 | 10 | Screw | M20 X 50 |
| 47 | 3010894X1 | 4 | Hex. Sock. Screw | M20 X 50 |
| 48 | 385365X1 | 4 | Washer | Diameter 20-37 X 5 |
| 49 | 4271961M1 | 1 | Hydr. Hose | Length 1450 MM |
| 50 | 4279674M1 | 1 | Hydr. Hose | Length 1550 MM |
| 51 | 3907044M91 | 2 | Latch | |
| 52 | 3907049M91 | 1 | Clevis Pin | (21) |
| 53 | 3907047M91 | 1 | Clevis Pin | |

1-WQ22-007-A

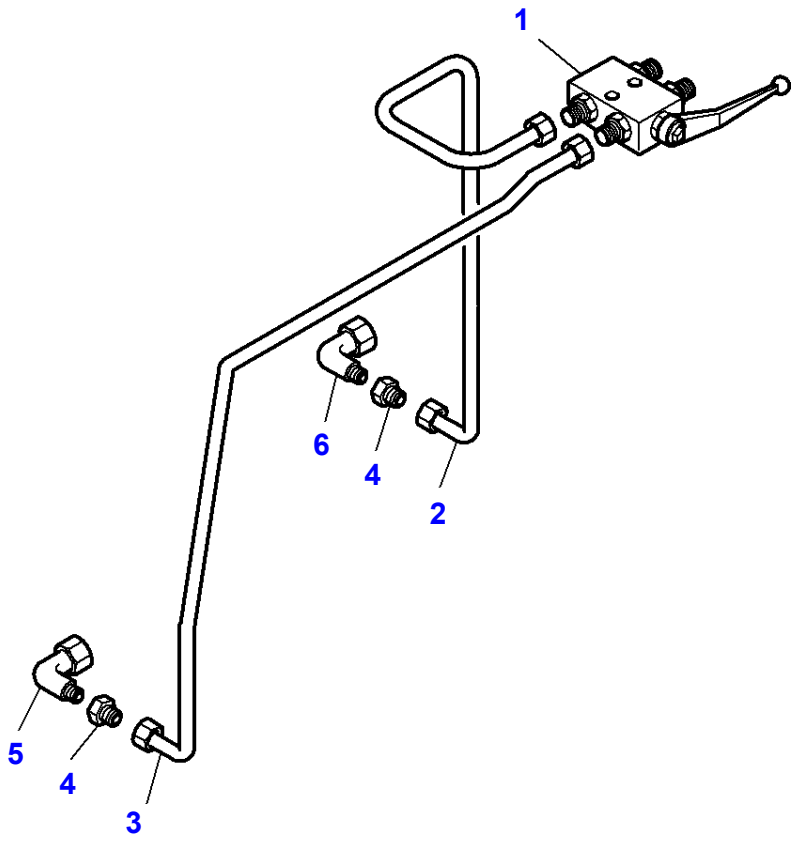


https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3792875M92 | 1 | Vane |
| 2 | 4278480M1 | 1 | Tube |
| 3 | 4278479M1 | 1 | Tube |
| 4 | 3011071X91 | 2 | Union |
| 5 | 3011085X91 | 1 | Union |
| 6 | 3011084X91 | 1 | Union |

1-WQ21-005-B

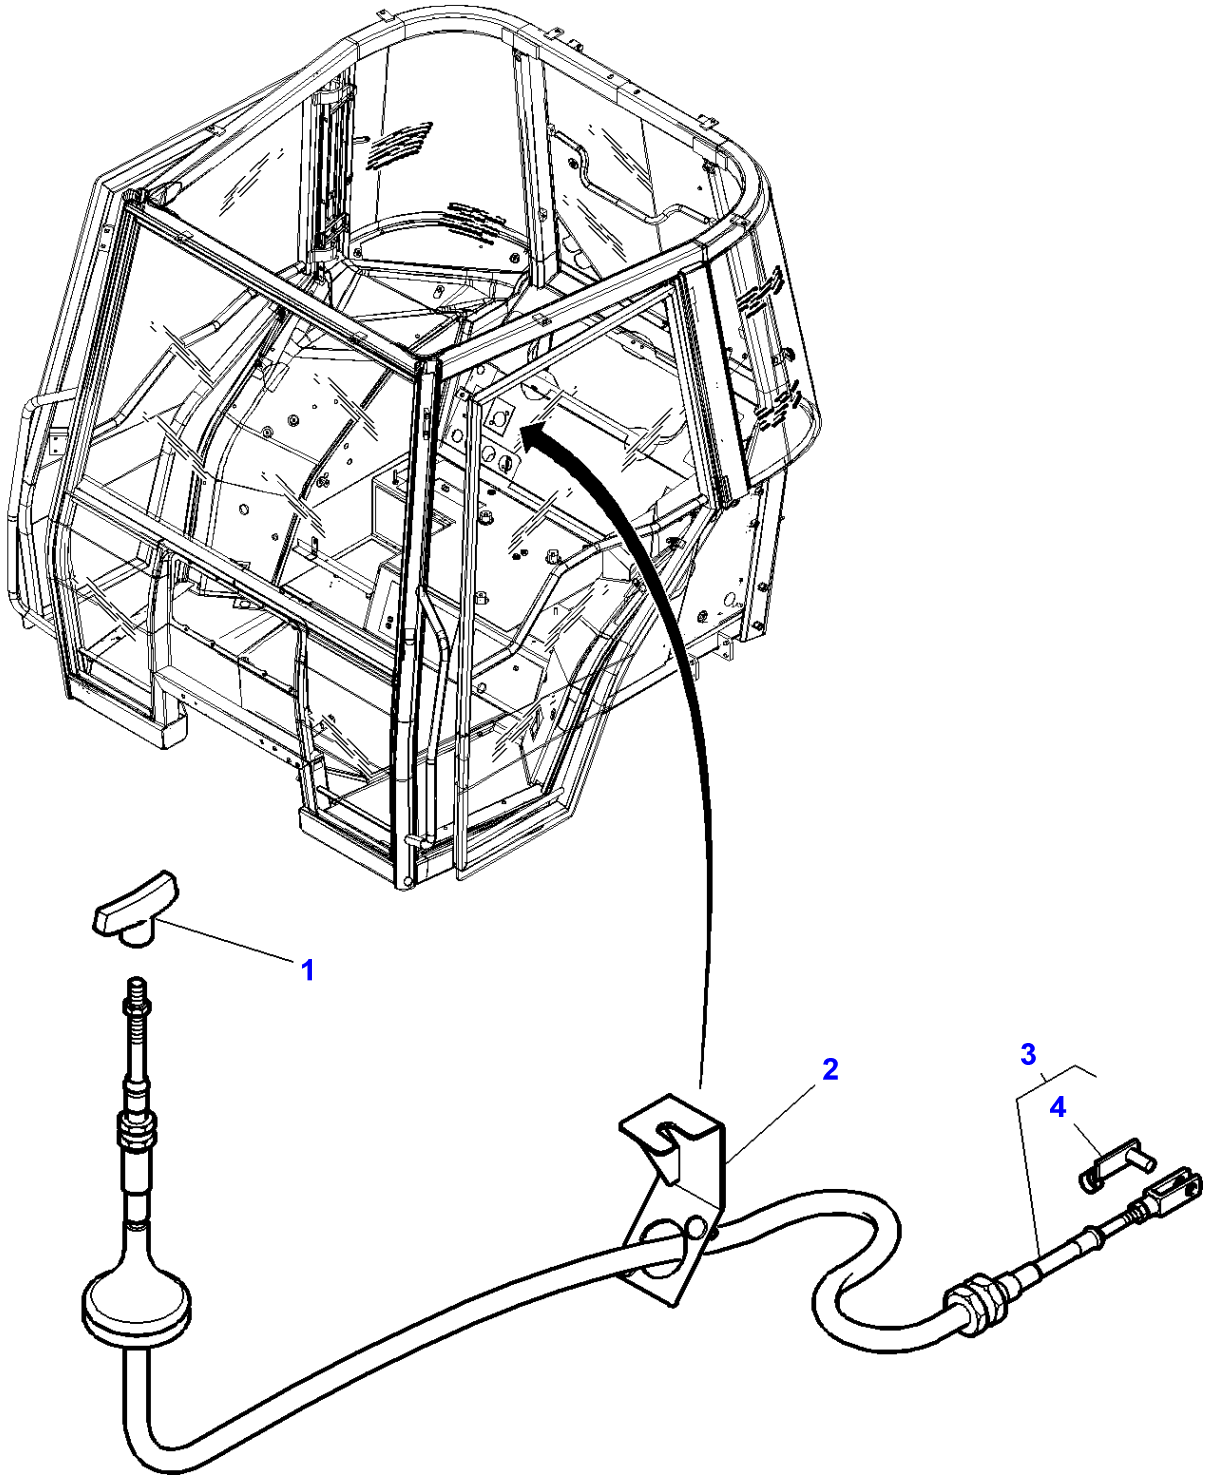


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271479M1 | 1 | Handle | |
| 2 | 4270512M1 | 1 | Support | |
| 3 | 4271478M2 | 1 | Cable | Length 1800 MM |
| 4 | 3600191M1 | 1 | Clevis Pin | (3) |

1-WQ25-001-A

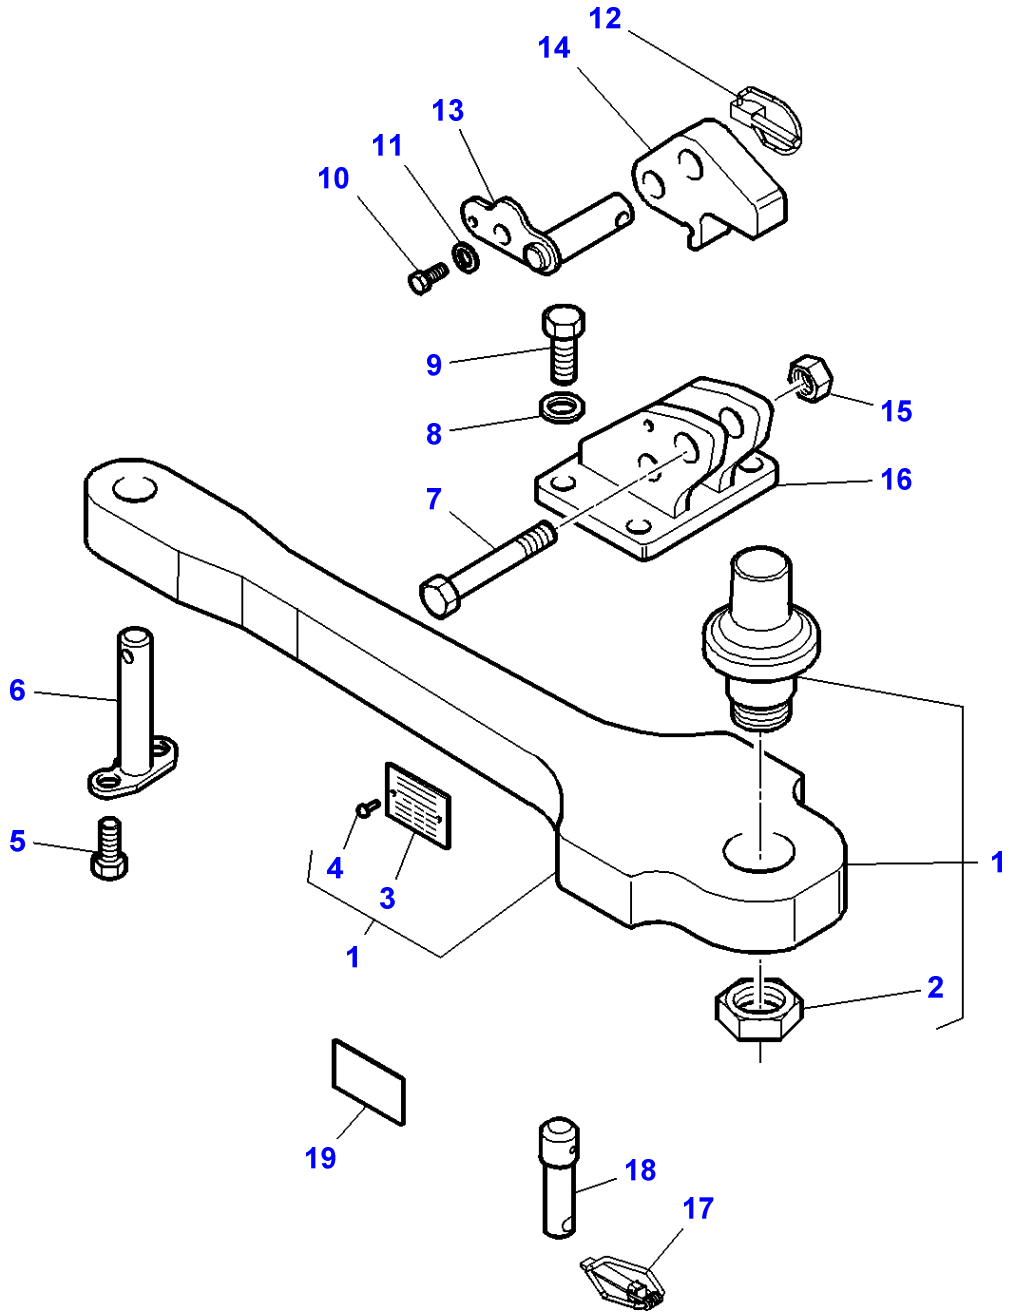


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | H716.501.900.101 | 1 | Piton | |
| 2 | 199.870.030.160 | 1 | Nut | (1) |
| 3 | 716.501.900.140 | 1 | Identity Plate | (1) |
| 4 | X419.432.887.000 | 2 | Nail, Notched | (1) |
| 5 | 3009492X1 | 2 | Hex. Sock. Screw | M10 X 25 |
| 6 | H816.500.120.020 | 1 | Plug. | |
| 7 | 391332X1 | 1 | Hex. Sock. Screw | M20 X 100 |
| 8 | 339377X1 | 4 | Lock Washer | |
| 9 | 339275X1 | 4 | Hex. Sock. Screw | M16 X 35 |
| 10 | 3009285X1 | 1 | Screw | M8 X 16 |
| 11 | 281.100.350.040 | 1 | Bush | |
| 12 | 3382826M1 | 1 | Pin | |
| 13 | H916.501.120.061 | 1 | Pin | |
| 14 | 916.501.120.220 | 1 | Latch | |
| 15 | 3009747X1 | 1 | Nut | |
| 16 | H916.501.120.070 | 1 | Support | |
| 17 | 3792034M1 | 2 | Pin | |
| 18 | 916.501.120.050 | 2 | Pin | |
| 19 | 916.501.120.070 | 2 | Decal | |

1-WQ26-001-A

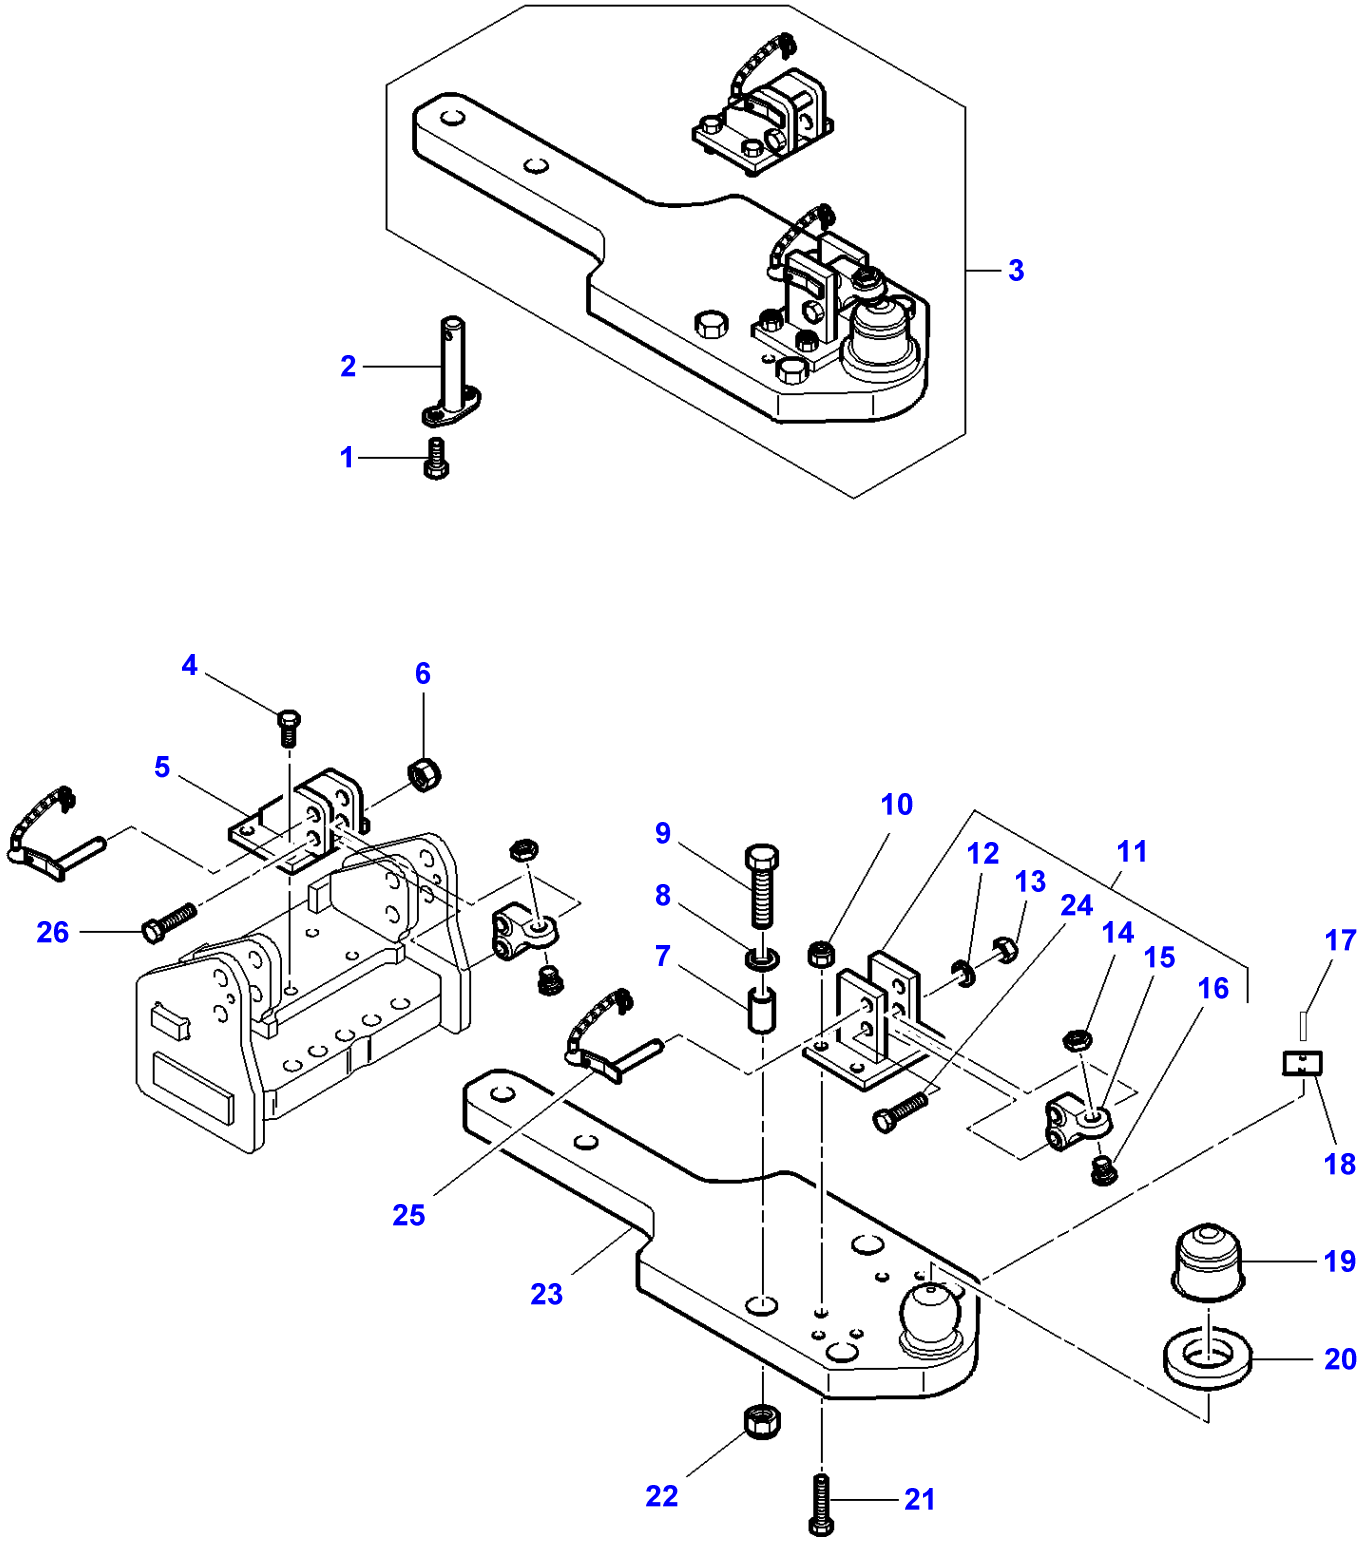


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3009492X1 | 2 | Hex. Sock. Screw | M10 X 25 |
| 2 | H816.500.120.020 | 1 | Plug. | |
| 3 | G916.501.120.200 | 1 | Support | |
| 4 | X487.545.141.000 | 4 | Hex. Sock. Screw | (3) |
| 5 | F916.501.120.020 | 1 | Console | (3) |
| 6 | X434.105.040.000 | 2 | Nut | (3) |
| 7 | F718.501.900.020 | 2 | Bush Assy | (3) |
| 8 | F117.501.901.040 | 2 | Disc | (3) |
| 9 | F718.501.900.030 | 2 | Screw | (3) |
| 10 | X430.004.000.000 | 4 | Nut | (3) |
| 11 | F117.501.901.020 | 1 | Control Lock | (3) |
| 12 | X520.807.801.000 | 1 | Lock Washer | (11) |
| 13 | F916.501.120.080 | 1 | Nut | (11) |
| 14 | F916.501.120.060 | 1 | Nut | (11) |
| 15 | F916.501.120.050 | 1 | Trigger | (11) |
| 16 | F916.501.120.070 | 1 | Adjusting Screw | (11) |
| 17 | X419.432.987.000 | 2 | Nail, Notched | (3) |
| 18 | F916.501.120.040 | 1 | Identity Plate | (3) |
| 19 | F117.501.901.050 | 1 | Cap | (3) |
| 20 | F117.501.901.060 | 1 | Seal | (3) |
| 21 | X486.546.505.000 | 4 | Hex. Sock. Screw | (3) |
| 22 | X430.005.803.000 | 2 | Nut | (3) |
| 23 | F916.501.120.010 | 1 | Frame | (3) |
| 24 | X486.556.000.000 | 1 | Hex. Sock. Screw | (3) |
| 25 | F916.501.120.030 | 1 | Bolt | (3) |
| 26 | X486.555.905.000 | 1 | Hex. Sock. Screw | (3) |

1-WQ36-024-A

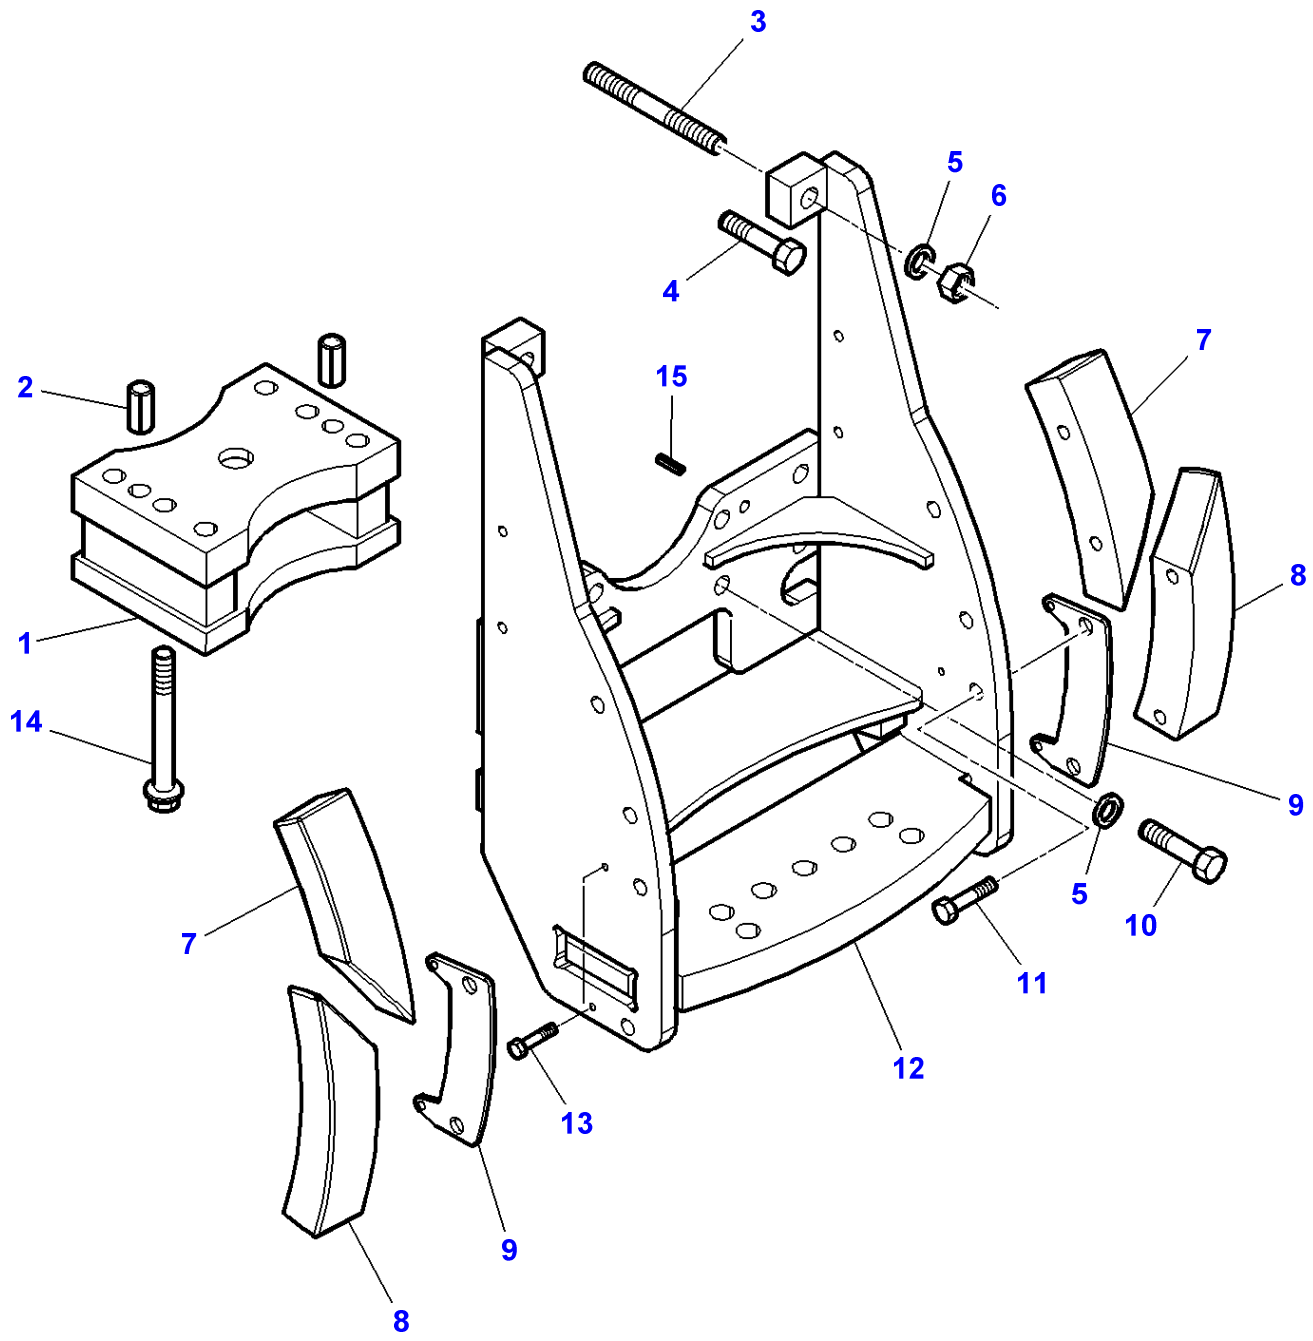


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | H920.500.120.100 | 1 | Fulcrum | |
| 2 | X505.585.617.000 | 2 | Dowel | |
| 3 | 3011546X1 | 6 | Stud | M18 X 135 |
| 4 | 3011545X1 | 2 | Hex. Sock. Screw | M18 X 110 |
| 5 | 339648X1 | 10 | Lock Washer | Up to Serial or Engine Number 05-DEC-2004 |
| 6 | 3011390X1 | 6 | Nut | |
| 7 | 926.871.040.020 | 1 | Skid | Right Hand Top |
| | 926.871.040.010 | 1 | Skid | Left Hand Top |
| 8 | 926.871.040.040 | 1 | Skid | Right Hand Bottom |
| | 926.871.040.030 | 1 | Skid | Left Hand Bottom |
| 9 | 926.871.040.060 | 2 | Plate | |
| 10 | 3011538X1 | 4 | Hex. Sock. Screw | M18 X 50 |
| 11 | 3384131M1 | 4 | Hex. Sock. Screw | M16 X 55 |
| | 3010885X1 | 4 | Hex. Sock. Screw | M16 X 45 |
| 12 | H920.501.120.110 | 1 | Frame | |
| 13 | 339337X1 | 4 | Hex. Sock. Screw | M8 X 30 |
| 14 | 3011194X1 | 6 | Screw | M20 X 150 |
| 15 | X505.559.459.000 | 2 | Dowel | |


1-WQ36-026-A

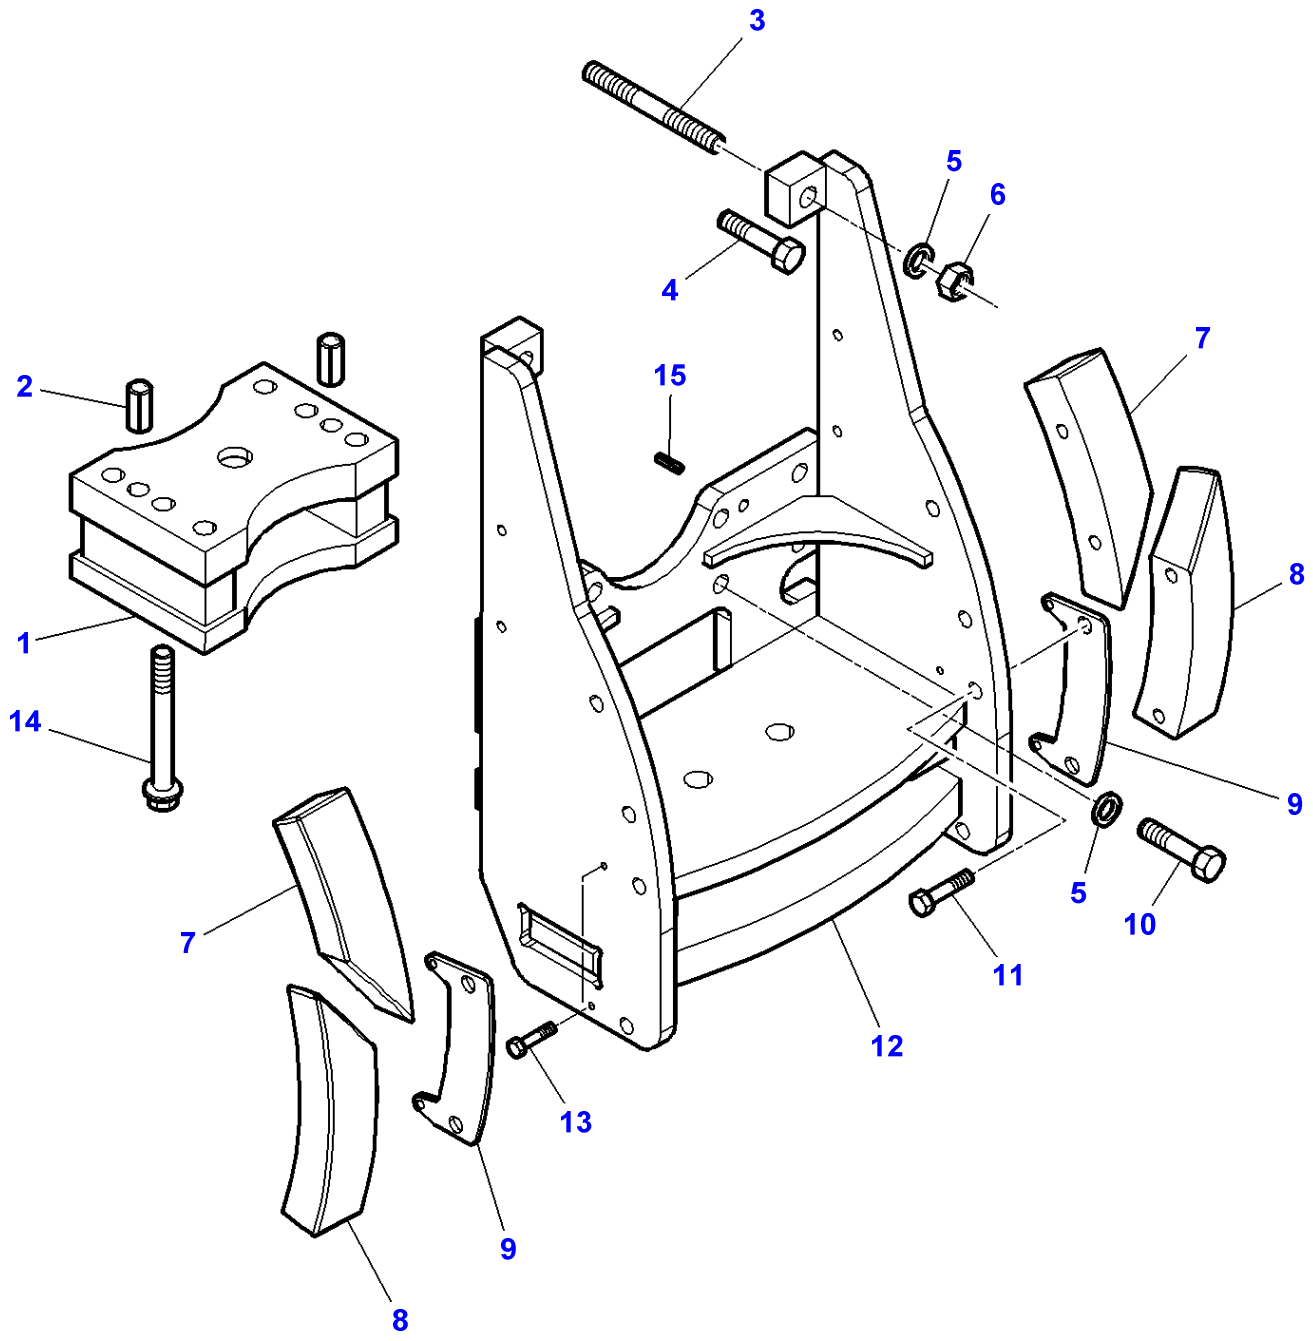

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | H920.500.120.100 | 1 | Fulcrum | |
| 2 | X505.585.617.000 | 2 | Dowel | |
| 3 | 3011546X1 | 6 | Stud | M18 X 135 |
| 4 | 3011545X1 | 2 | Hex. Sock. Screw | M18 X 110 |
| 5 | 339648X1 | 10 | Lock Washer | Up to Serial or Engine Number 05-DEC-2004 |
| 6 | 3011390X1 | 6 | Nut | |
| 7 | 926.871.040.020 | 1 | Skid | Right Hand Top |
| | 926.871.040.010 | 1 | Skid | Left Hand Top |
| 8 | 926.871.040.040 | 1 | Skid | Right Hand Bottom |
| | 926.871.040.030 | 1 | Skid | Left Hand Bottom |
| 9 | 926.871.040.060 | 2 | Plate | |
| 10 | 3011538X1 | 4 | Hex. Sock. Screw | M18 X 50 |
| 11 | 3384131M1 | 4 | Hex. Sock. Screw | M16 X 55 |
| | 3010885X1 | 4 | Hex. Sock. Screw | M16 X 45 |
| 12 | 4276505M91 | 1 | Support | |
| 13 | 339337X1 | 4 | Hex. Sock. Screw | M8 X 30 |
| 14 | 3011194X1 | 6 | Screw | M20 X 150 |
| 15 | X505.559.459.000 | 2 | Dowel | |

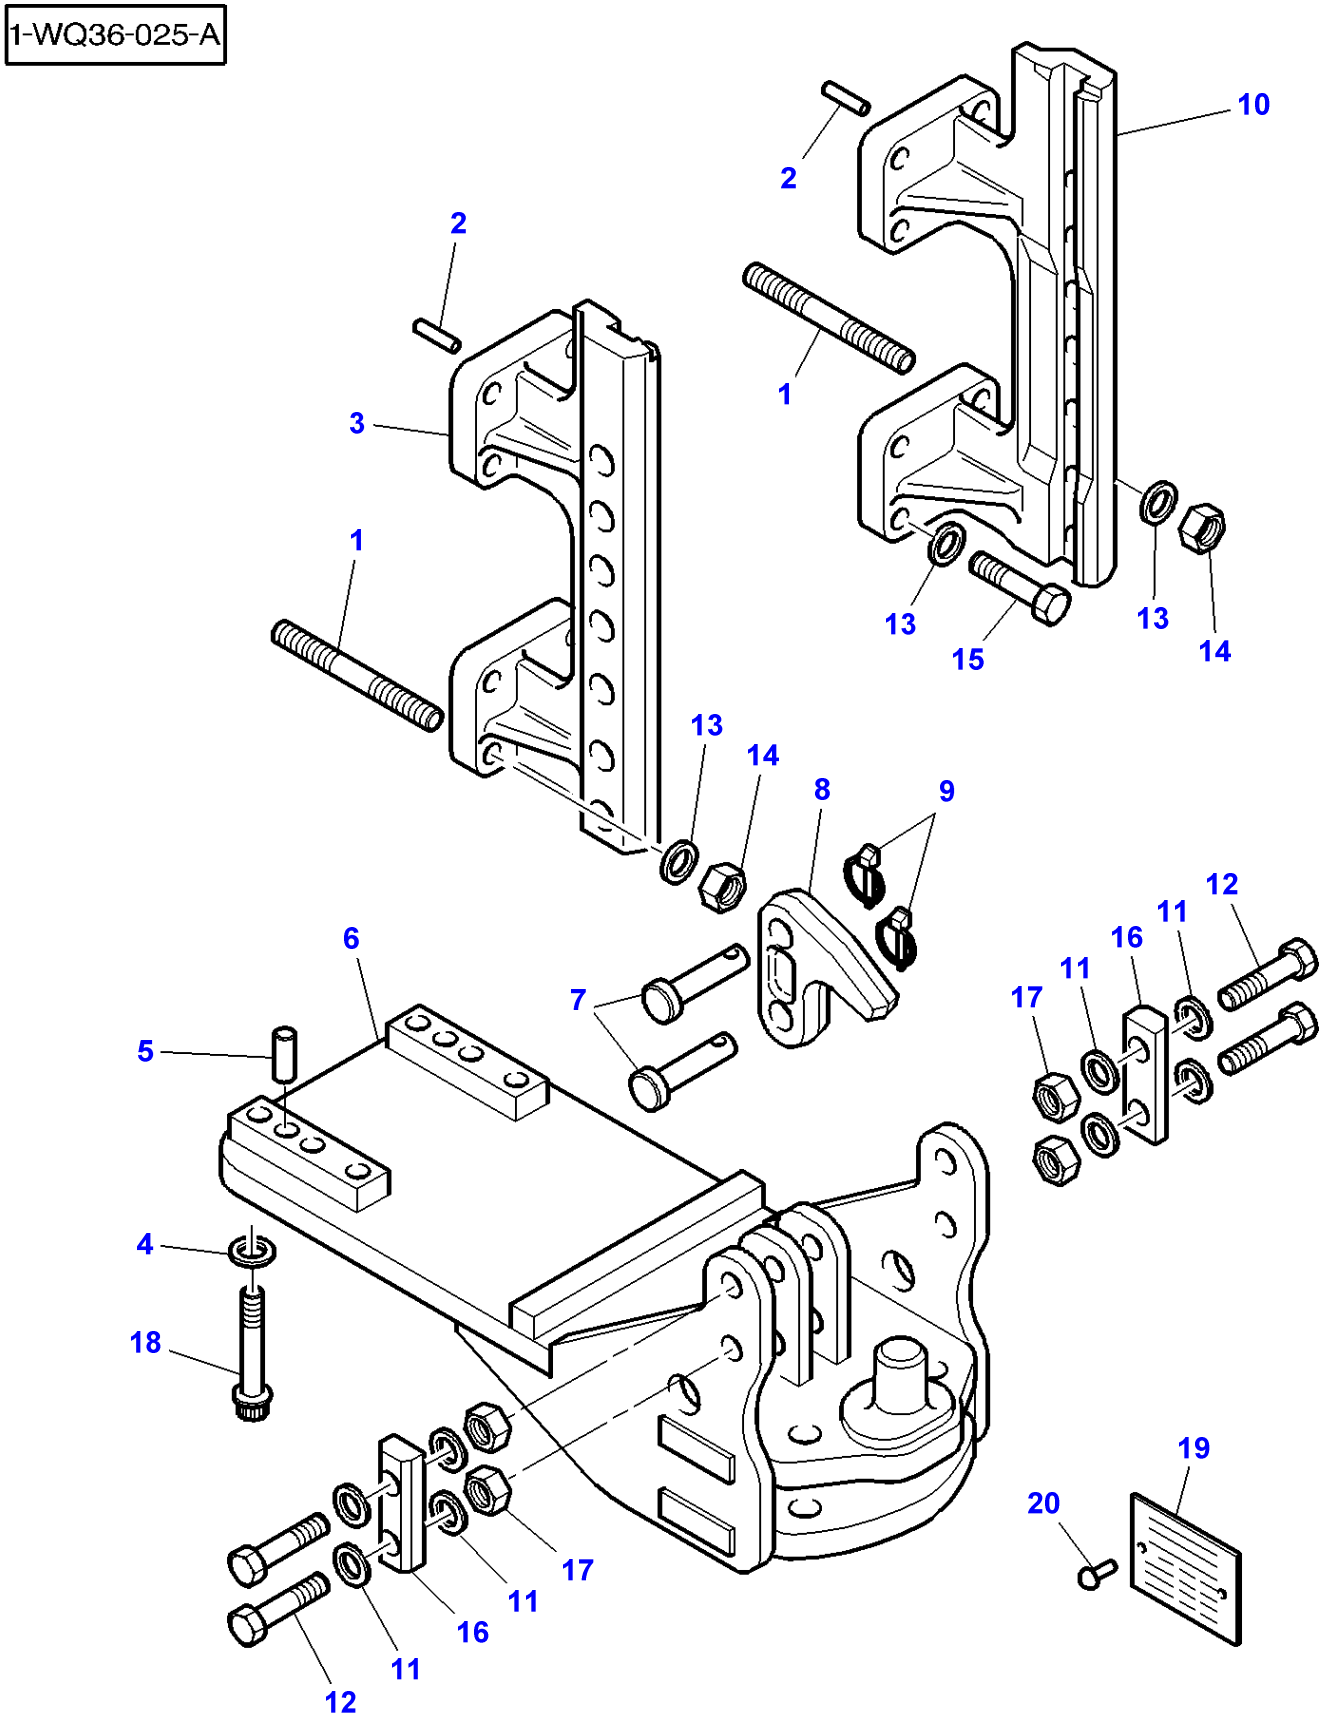

1-WQ36-025-A
10
2
2
1
3
1
13
15
13
14
13
14
8
9
12
11
16
11
17
6
7
5
4
18
17
11
16
11
12
19
20

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3011546X1 | 8 | Stud | M18 X 135 |
| 2 | X505.559.459.000 | 4 | Dowel | |
| 3 | 816.500.060.041 | 1 | Slide Rail | Left Hand |
| 4 | 385365X1 | 6 | Washer | |
| 5 | X505.585.617.000 | 2 | Dowel | |
| 6 | 4271570M92 | 1 | Support | |
| 7 | 3797361M1 | 2 | Clevis Pin | |
| 8 | 3797125M1 | 1 | Hook | |
| 9 | 3382824M1 | 2 | Pin | |
| 10 | 816.500.060.051 | 1 | Slide Rail | Right Hand |
| 11 | 3010505X1 | 8 | Washer | |
| 12 | 3580796M1 | 4 | Hex. Sock. Screw | M22 X 100 |
| 13 | 339648X1 | 16 | Lock Washer | |
| 14 | 3011390X1 | 8 | Nut | |
| 15 | 3011517X1 | 8 | Hex. Sock. Screw | M18 X 55 |
| 16 | 4271601M1 | 2 | Thruster | |
| 17 | 3581642M1 | 4 | Nut | |
| 18 | 3010563X1 | 6 | Screw | M20 X 90 |
| 19 | 816.500.060.090 | 1 | Identity Plate | |
| 20 | X419.432.887.000 | 2 | Nail, Notched | |

1-WQ36-027-A

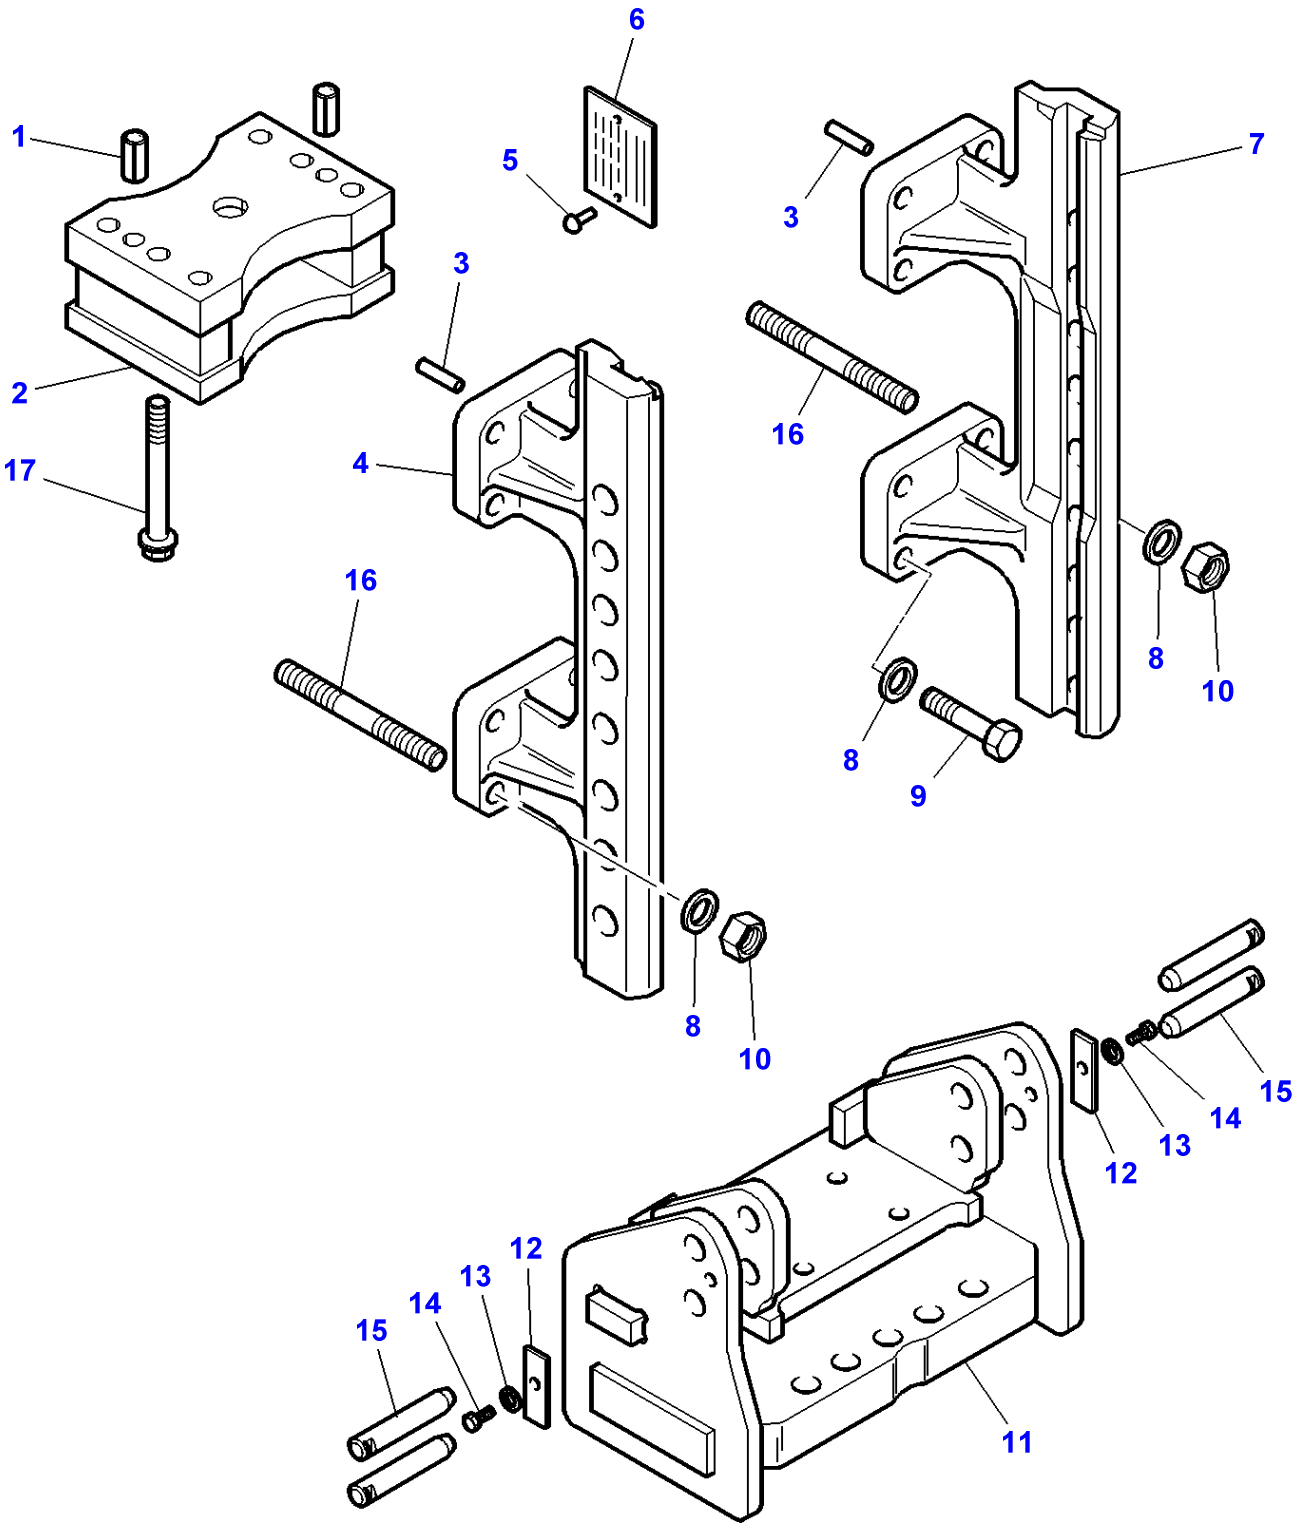


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X505.585.617.000 | 2 | Dowel | |
| 2 | H920.500.120.100 | 1 | Fulcrum | |
| 3 | X505.559.459.000 | 4 | Dowel | |
| 4 | 816.500.060.012 | 1 | Slide Rail | Left Hand |
| 5 | X419.432.887.000 | 2 | Nail, Notched | |
| 6 | 816.500.060.090 | 1 | Identity Plate | |
| 7 | 816.500.060.022 | 1 | Slide Rail | Right Hand |
| 8 | 339648X1 | 16 | Lock Washer | Up to Serial or Engine Number 05-DEC-2004 |
| 9 | 3011517X1 | 8 | Hex. Sock. Screw | M18 X 55 |
| 10 | 3011390X1 | 8 | Nut | |
| 11 | H916.501.120.102 | 1 | Frame | |
| 12 | 716.501.120.200 | 2 | Locking Plate | |
| 13 | 339374X1 | 2 | Lock Washer | |
| 14 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 15 | 916.501.120.030 | 2 | Pin | |
| 16 | 3011546X1 | 8 | Stud | M18 X 135 |
| 17 | 3011194X1 | 6 | Screw | M20 X 150 |


1-WQ30-001-B

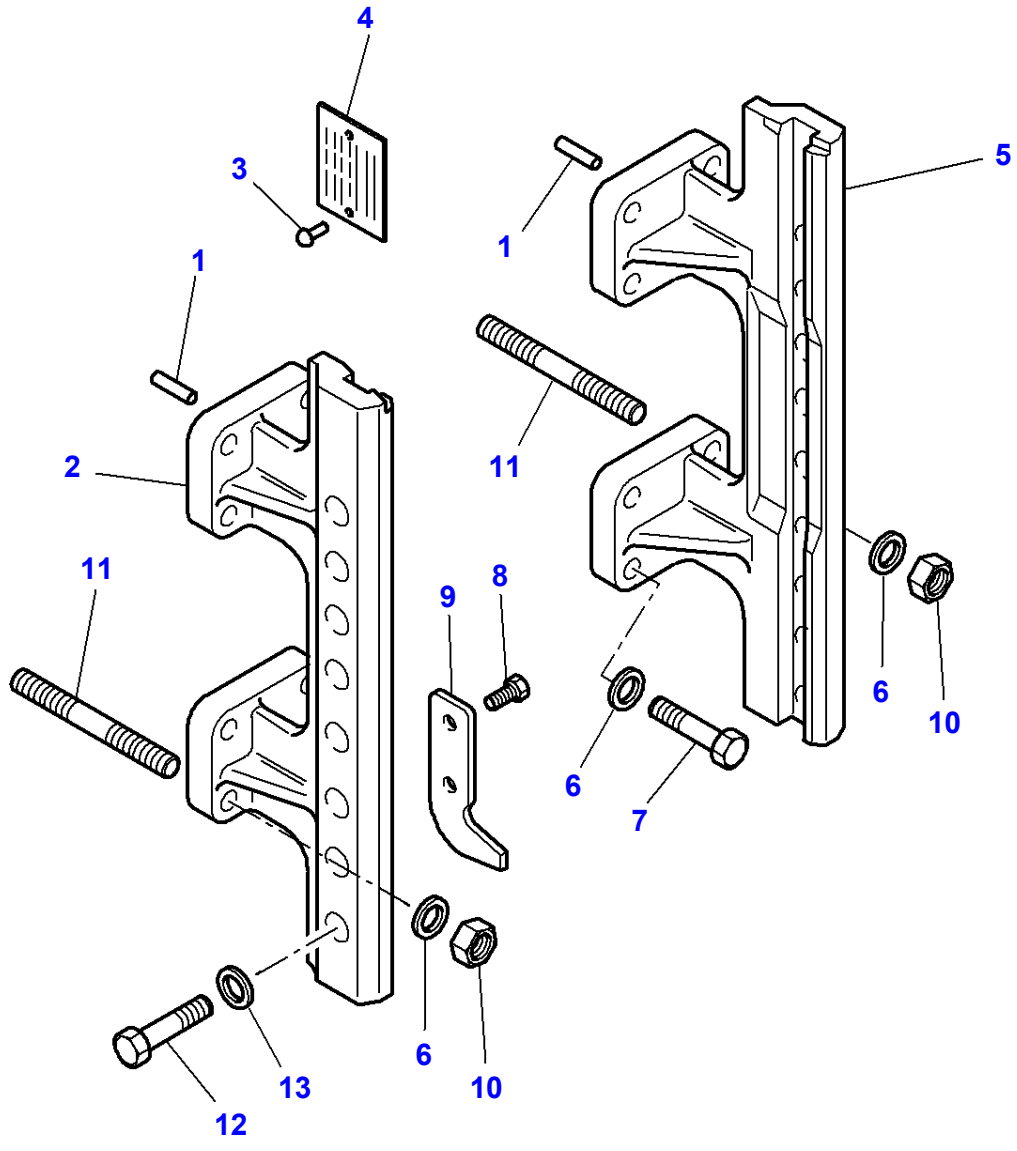

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X505.559.459.000 | 2 | Dowel | |
| 2 | 816.500.060.012 | 1 | Slide Rail | Left Hand |
| 3 | X419.432.887.000 | 2 | Nail, Notched | |
| 4 | 816.500.060.090 | 1 | Identity Plate | |
| 5 | 816.500.060.022 | 1 | Slide Rail | Right Hand |
| 6 | 339648X1 | 10 | Lock Washer | Up to Serial or Engine Number 05-DEC-2004 |
| 7 | 3011517X1 | 8 | Hex. Sock. Screw | M18 X 55 |
| 8 | 3009491X1 | 2 | Hex. Sock. Screw | M10 X 20 |
| 9 | 816.500.060.070 | 1 | Stop | |
| 10 | 3011390X1 | 8 | Nut | |
| 11 | 3011546X1 | 8 | Stud | M18 X 135 |
| 12 | 3010757X1 | 4 | Hex. Sock. Screw | M22 X 70 |
| 13 | 392913X1 | 4 | Washer | Diameter 23-39 X 3 |

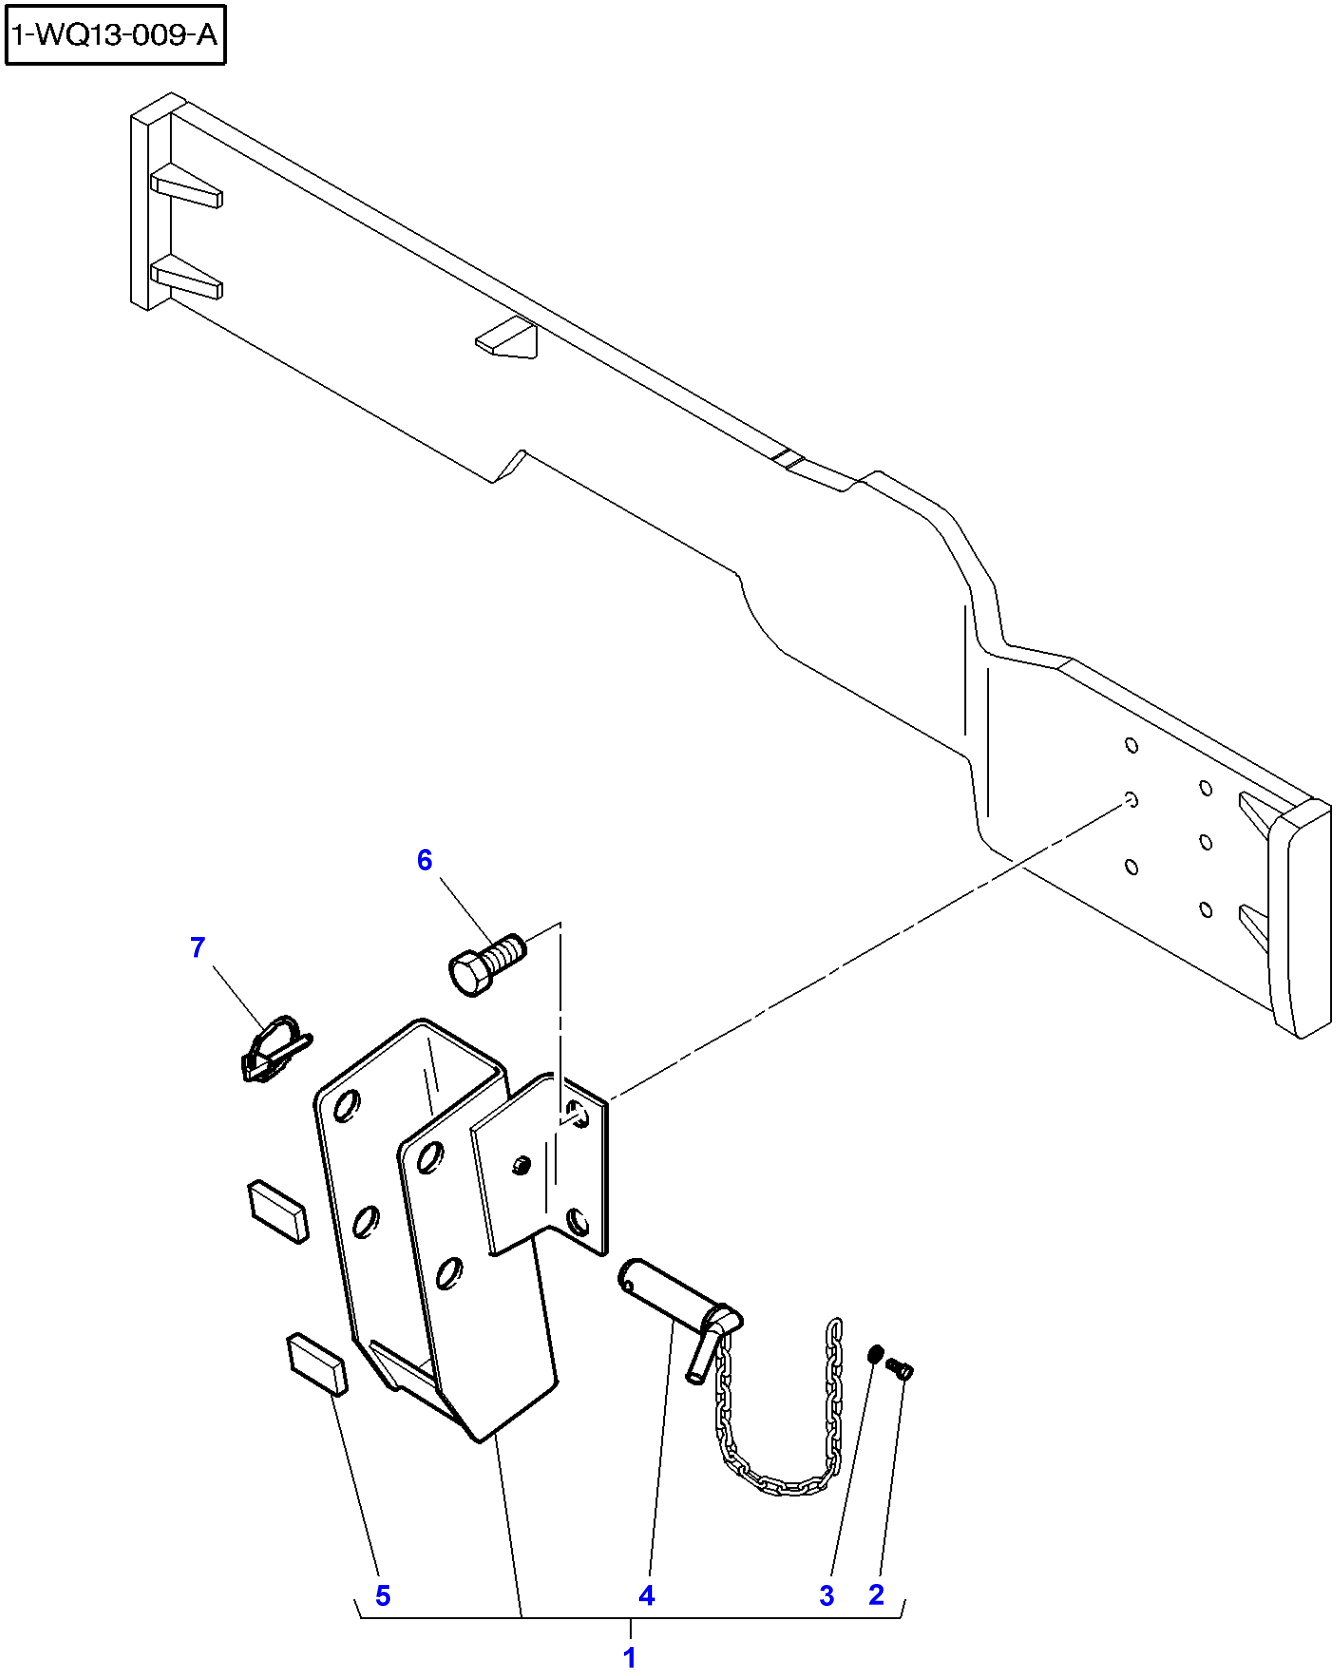

1-WQ13-009-A
6
7
5
4
3
2
1

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4273764M91 | 1 | Stuffing Box | |
| 2 | 339560X1 | 1 | Hex. Sock. Screw | (1) M6 X 16 |
| 3 | 390971X1 | 1 | Washer | (1) |
| 4 | 3788588M91 | 1 | Clevis Pin | (1) |
| 5 | 3782881M1 | 2 | Gasket | (1) |
| 6 | 1441704X1 | 2 | Hex. Sock. Screw | M20 X 40 |
| 7 | 3382824M1 | 1 | Pin | |

1-WQ18-021-B

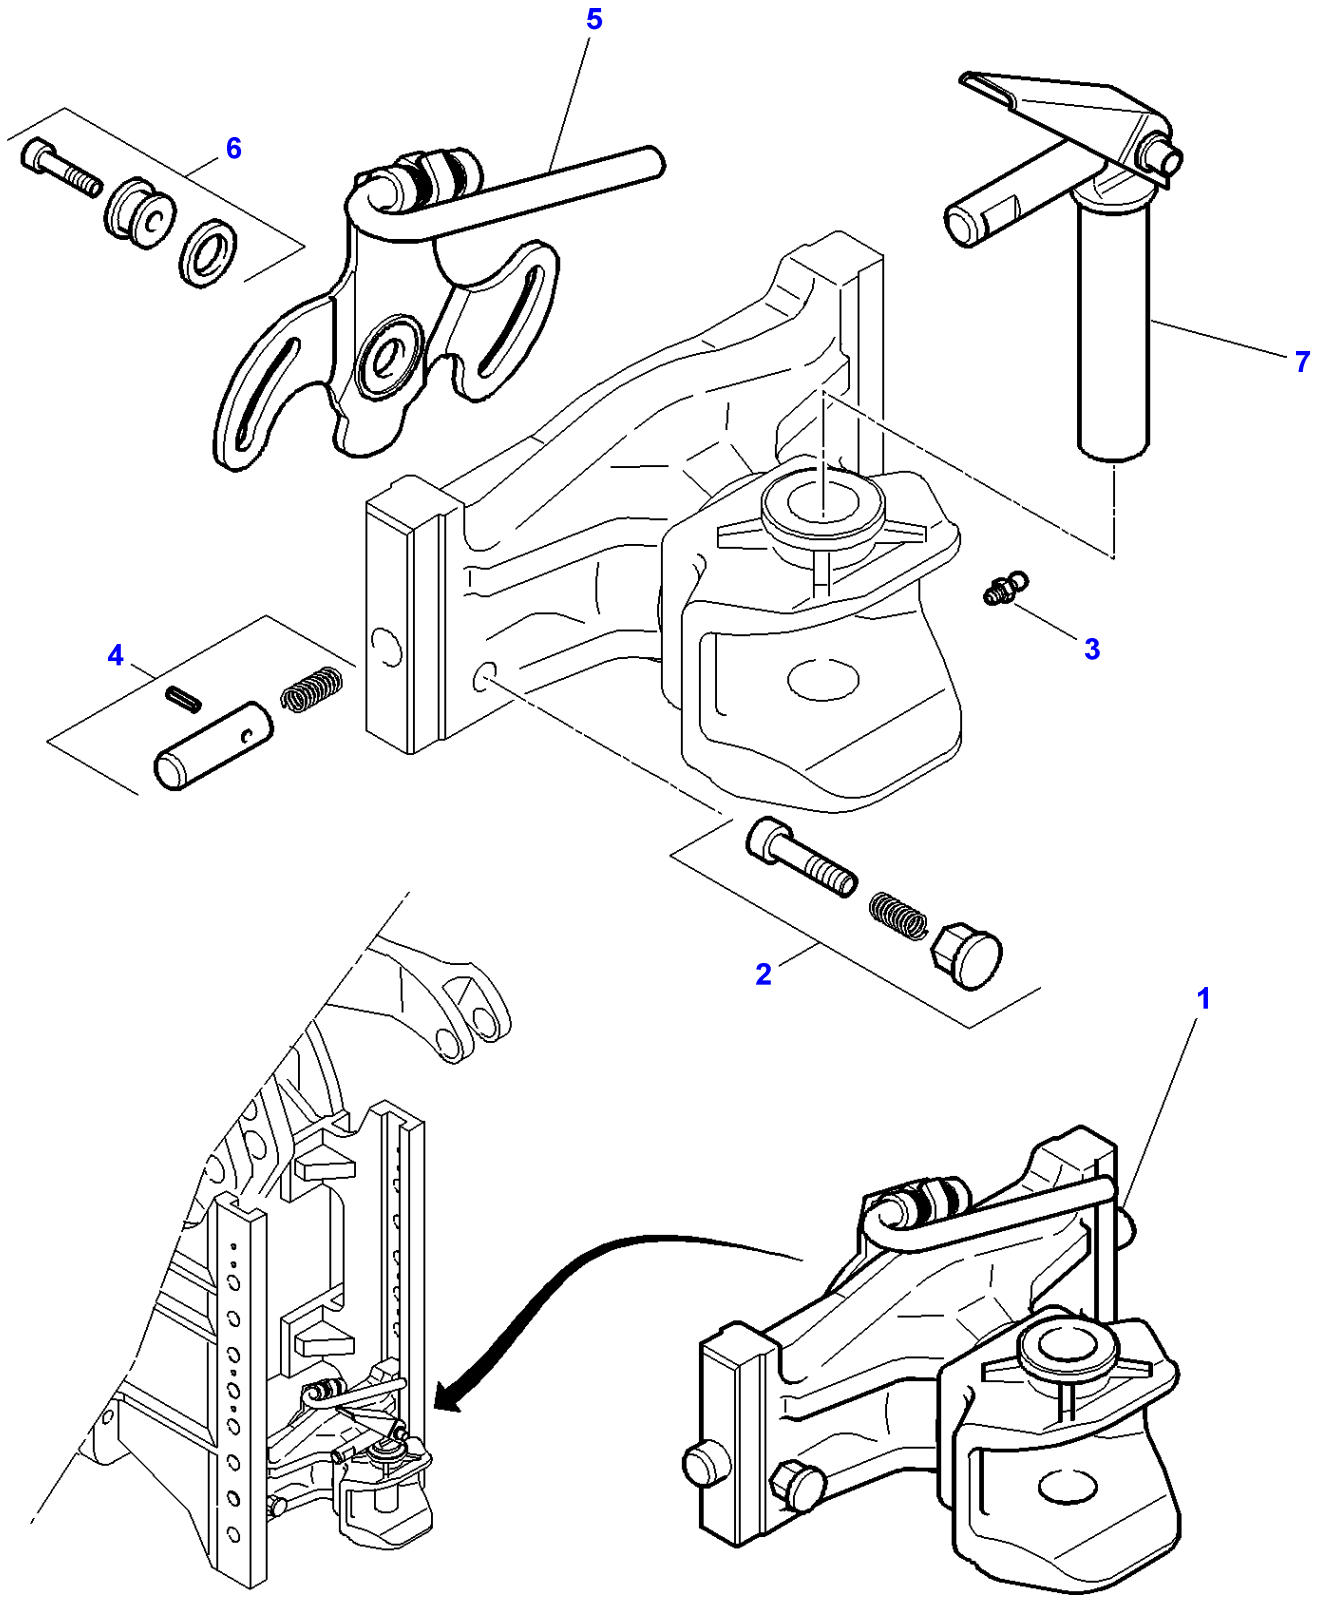


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G816.500.071.012 | 1 | Hitch | |
| 2 | F816.500.070.120 | 1 | Securing Piece | (1) |
| 3 | X662.516.102.000 | 1 | Grease Nipple | (1) |
| 4 | F816.500.070.140 | 1 | Pin | (1) |
| 5 | F816.500.070.130 | 1 | Disc | (1) |
| 6 | F816.500.070.150 | 1 | Kit, Attaching. | (1) |
| 7 | 4271199M1 | 1 | Clevis Pin | |

1-WQ18-022-A

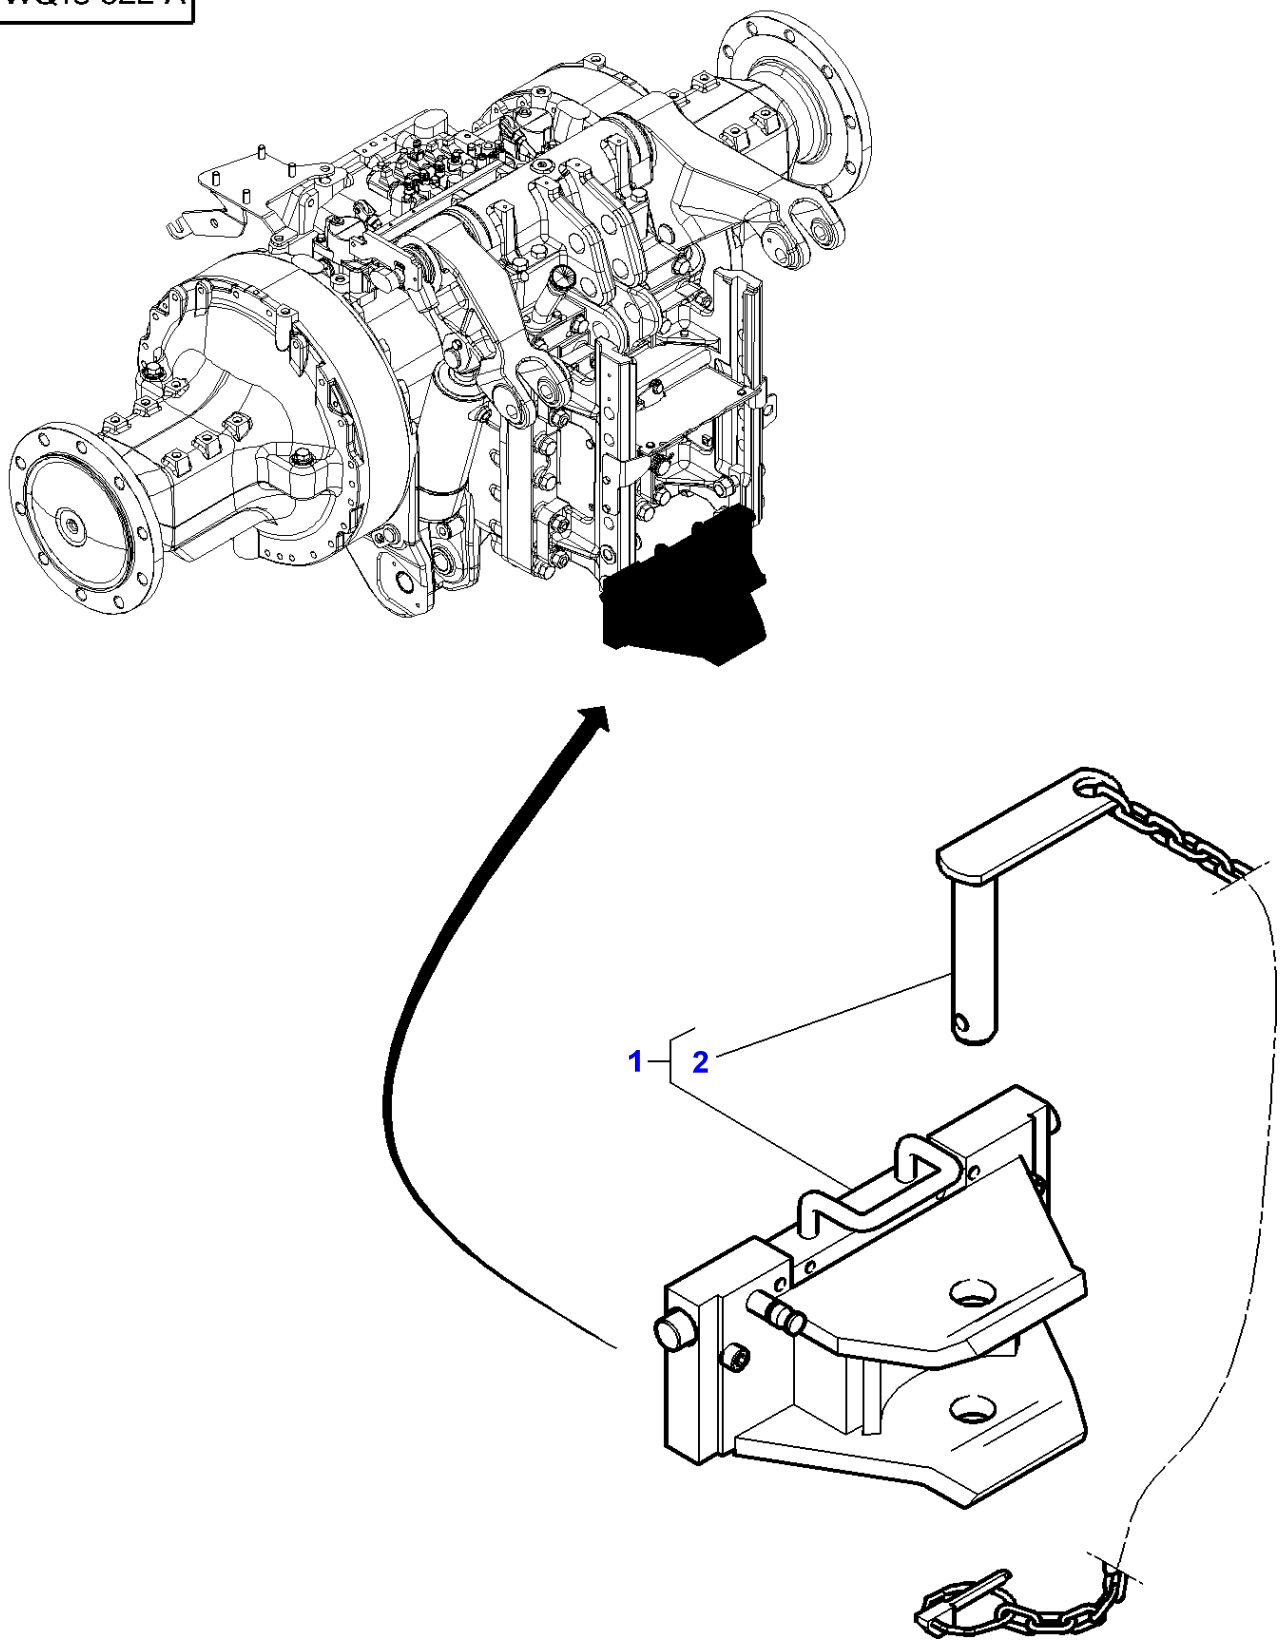


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276935M91 | 1 | Clevis | [A] 6T |
| 2 | 4276937M1 | 1 | Pin Hitch | (1) |

**FOOTNOTE [A]** DETAILS TO BE ADVISED

1-WQ18-023-A

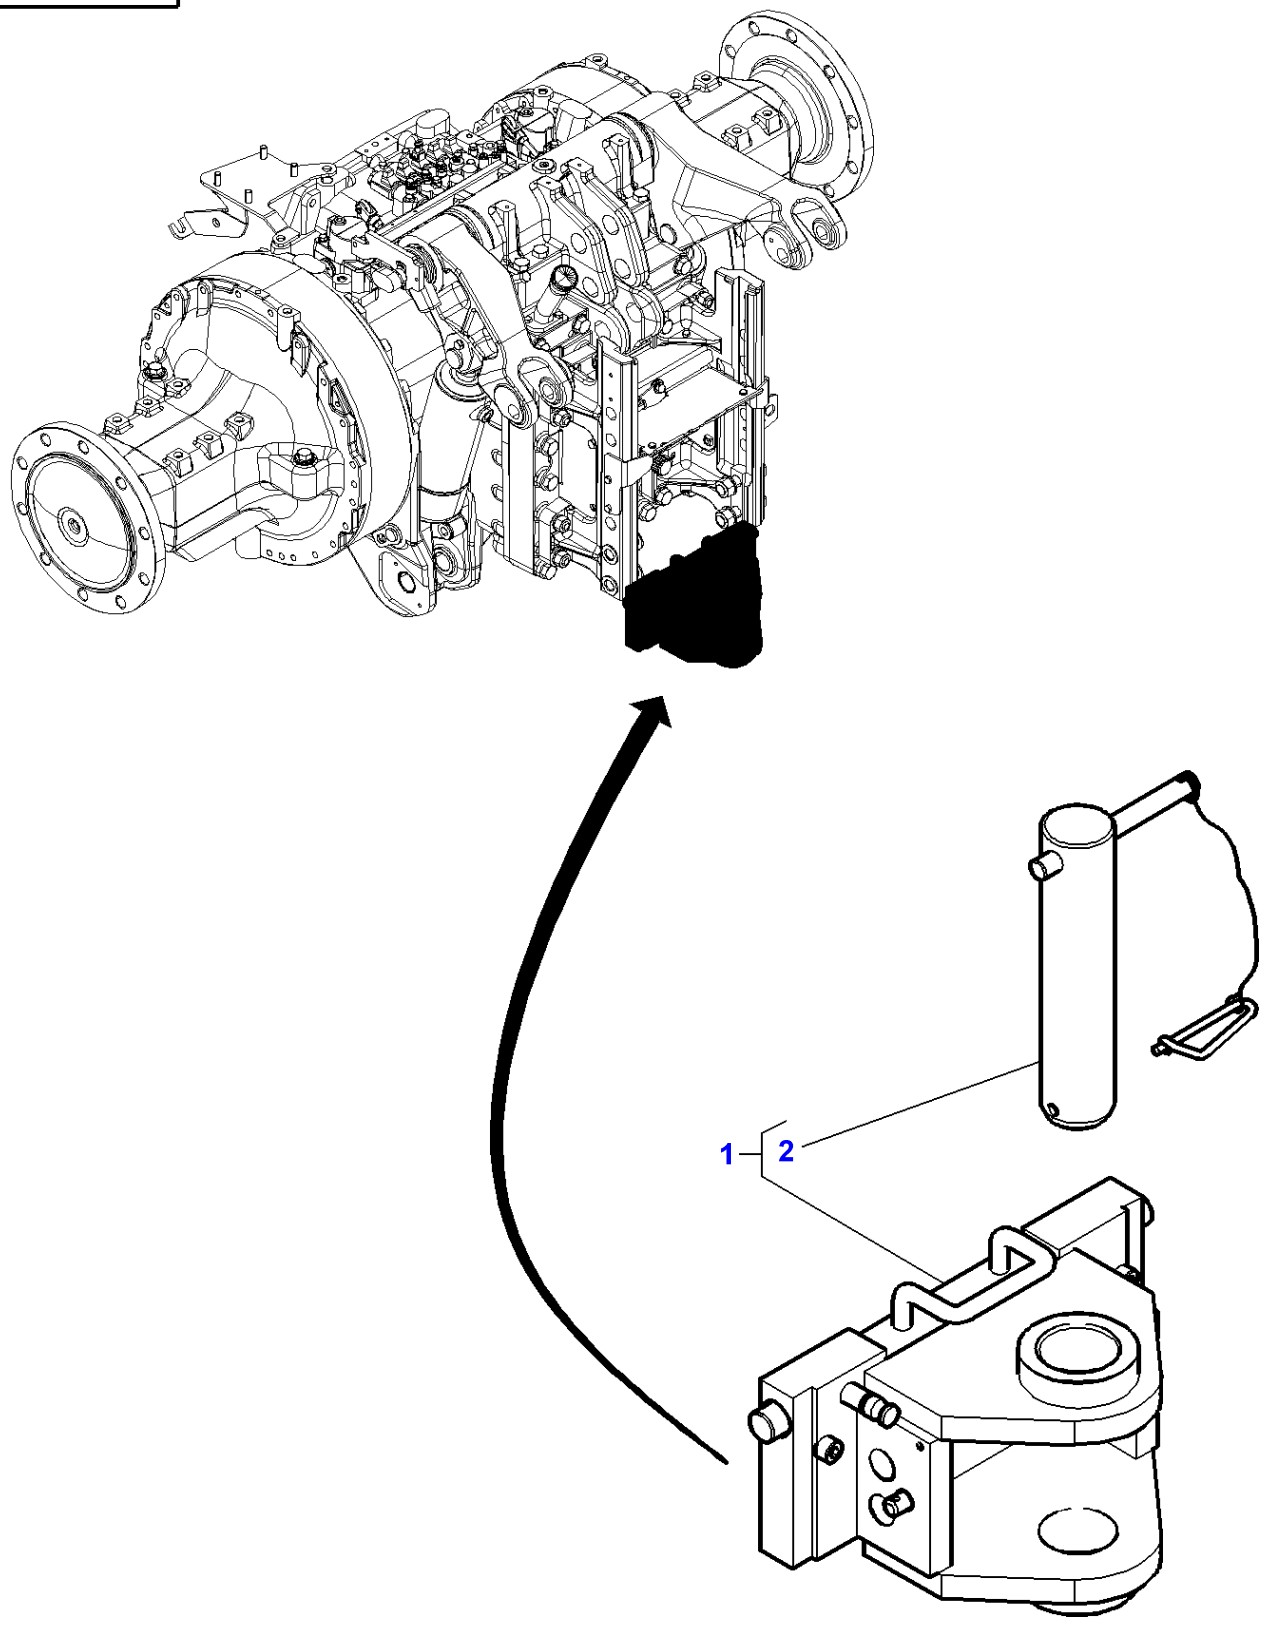


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276938M91 | 1 | Clevis | [A] 20T |
| 2 | 4276940M1 | 1 | Pin Hitch | (1) |

**FOOTNOTE [A]** DETAILS TO BE ADVISED

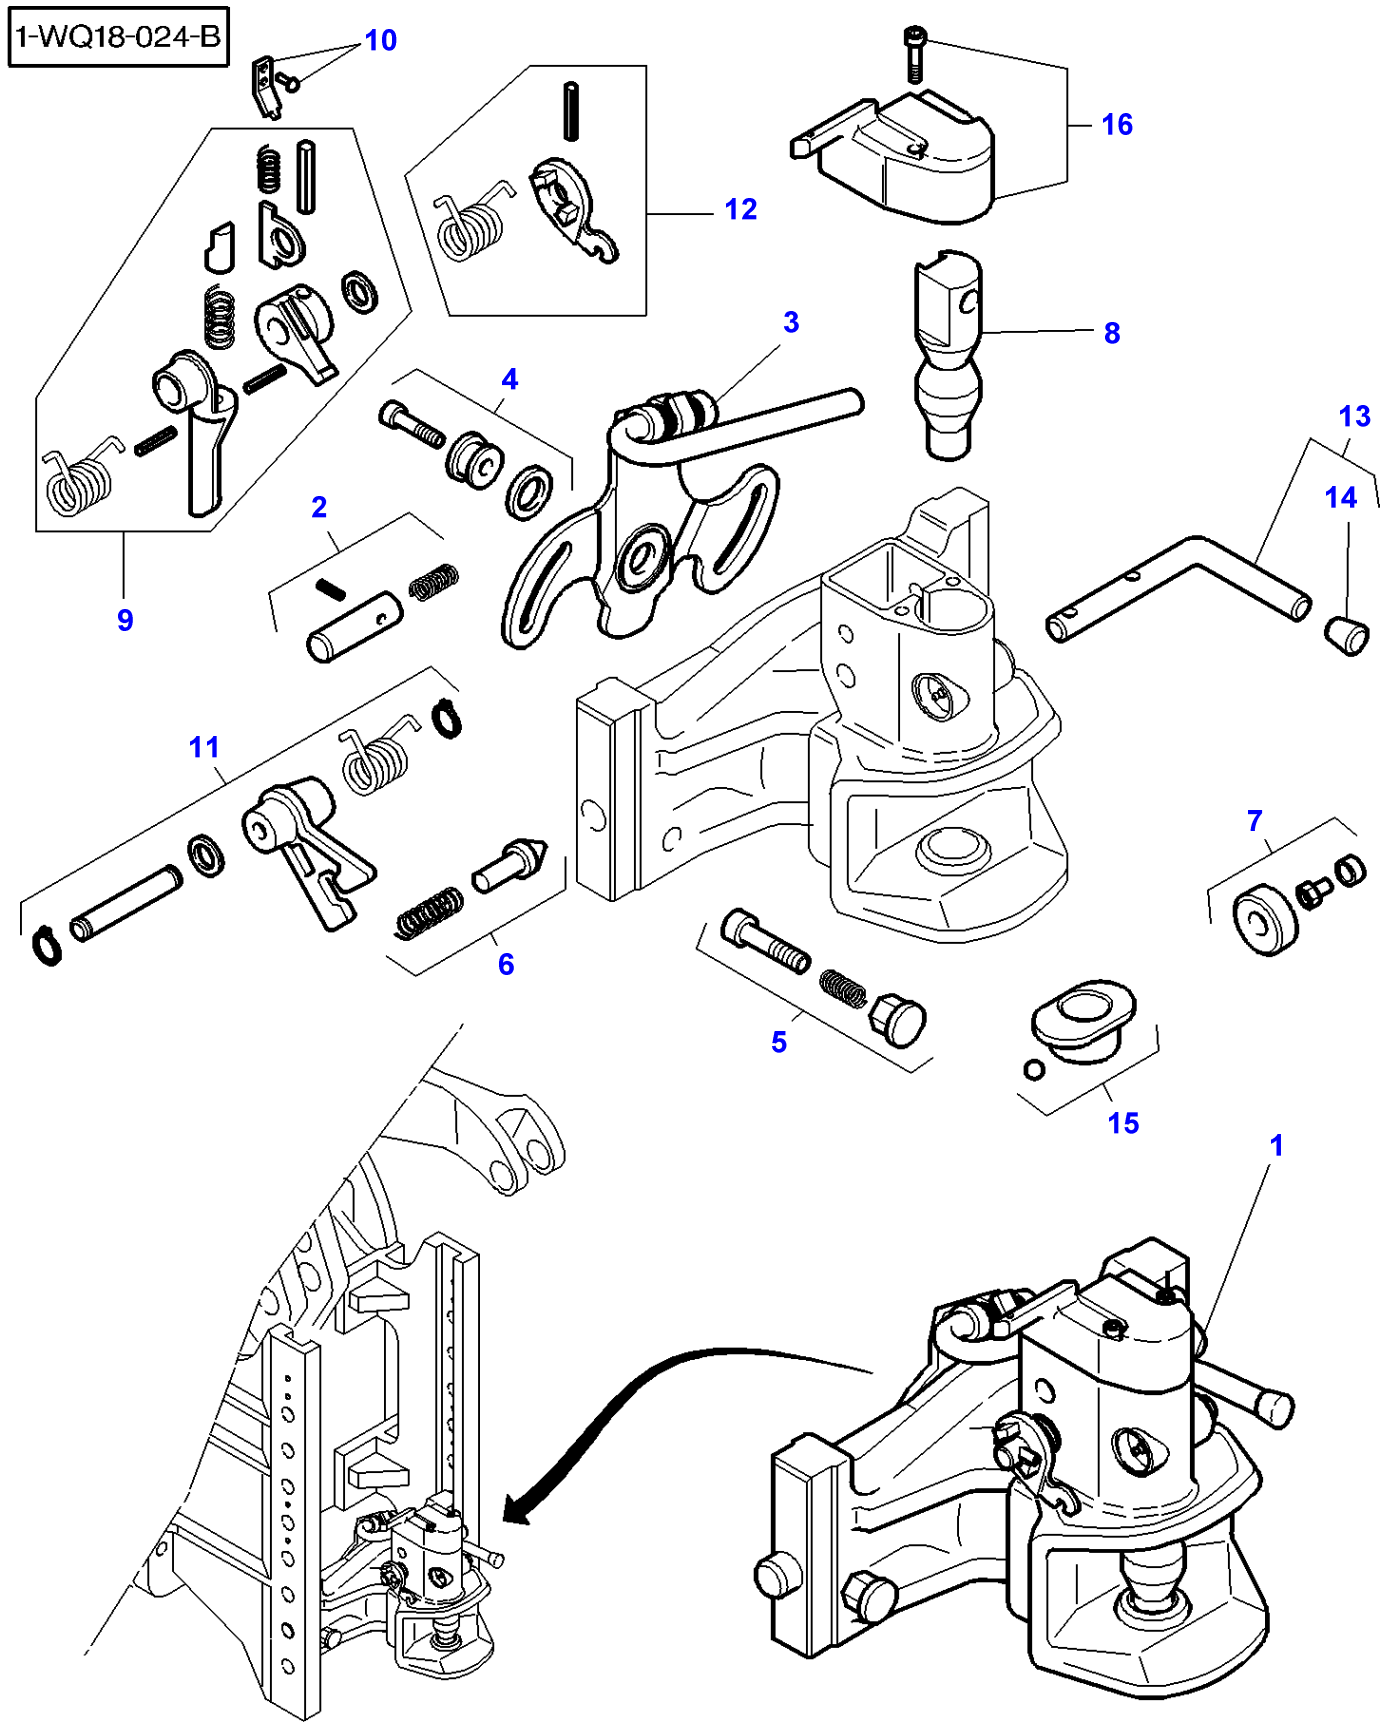

1-WQ18-024-B
10
16
12
8
3
4
13
14
2
9
11
7
6
5
15
1


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G816.500.072.040 | 1 | Hitch | |
| 2 | F816.500.070.140 | 1 | Pin | (1) |
| 3 | F816.500.070.130 | 1 | Disc | (1) |
| 4 | F816.500.070.150 | 1 | Kit, Attaching. | (1) |
| 5 | F816.500.070.120 | 1 | Securing Piece | (1) |
| 6 | F816.500.070.180 | 1 | Peg | (1) |
| 7 | F816.500.070.020 | 1 | Cover | (1) |
| 8 | F816.500.070.160 | 1 | Pin Hitch | (1) |
| 9 | F816.500.070.030 | 1 | Lever | (1) |
| 10 | F816.500.070.100 | 1 | Spring Carrier | (1) |
| 11 | F816.500.070.170 | 1 | Lever | (1) |
| 12 | F816.500.070.040 | 1 | Lever | (1) |
| 13 | F816.500.070.070 | 1 | Hand Lever | (1) |
| 14 | F284.501.061.110 | 1 | Grip | (13) |
| 15 | F816.500.070.190 | 1 | Bush | (1) |
| 16 | F816.500.070.060 | 1 | Cover | (1) |

1-WQ39-018-B

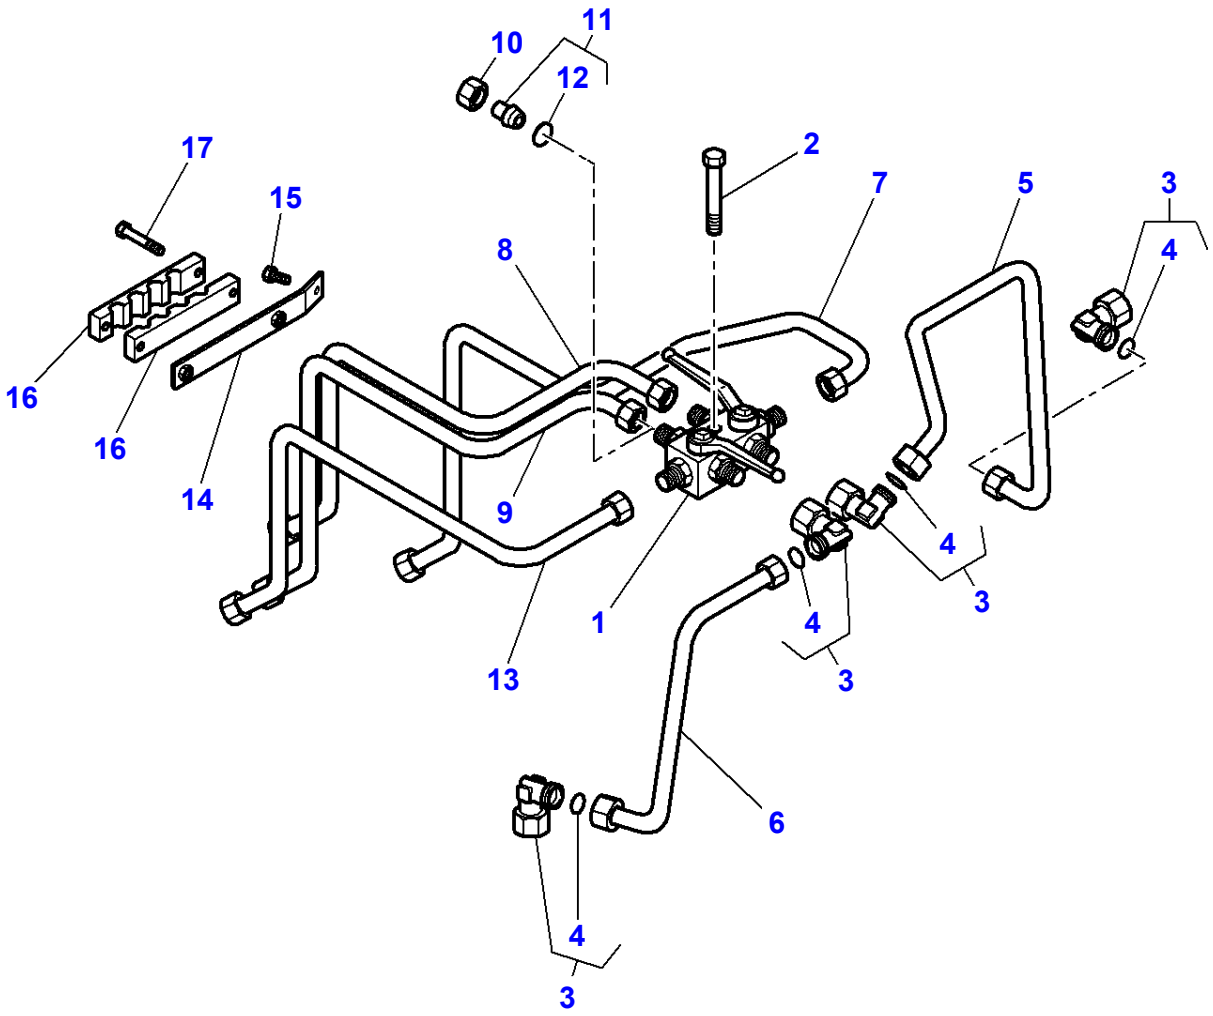

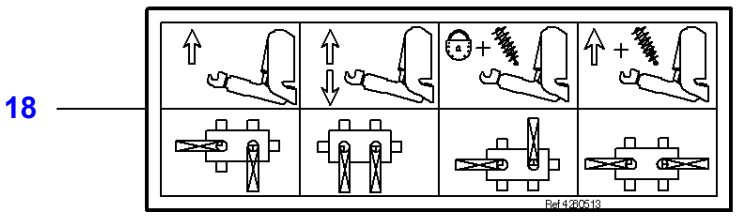
https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275566M1 | 1 | Vane | |
| 2 | 1441967X1 | 2 | Screw Metric | M6 X 45 |
| 3 | 3011085X91 | 3 | Union | M22 |
| 4 | 3011147X1 | 1 | O Ring | (3) |
| 5 | 4278478M1 | 1 | Tube | |
| 6 | 4276168M1 | 1 | Tube | |
| 7 | 4277427M1 | 1 | Tube | |
| 8 | 4278477M1 | 1 | Tube | |
| 9 | 4278476M1 | 1 | Tube | [A] |
| 10 | 3011119X1 | 1 | Nut | [B] |
| 11 | 3011136X91 | 1 | Tap | [B] |
| 12 | 3011147X1 | 1 | O Ring | [B] (11) |
| 13 | 4277426M1 | 1 | Tube | |
| 14 | 4278481M1 | 1 | Support | |
| 15 | 339228X1 | 1 | Hex. Sock. Screw | M8 X 12 |
| 16 | 4275693M2 | 2 | Bridle | |
| 17 | 339229X1 | 2 | Hex. Sock. Screw | M6 X 40 |
| 18 | 4280513M1 | 1 | Decal | |

**FOOTNOTE [A]** WITH ACCUMULATOR
**FOOTNOTE [B]** WITHOUT ACCUMULATOR

1-WQ39-019-A

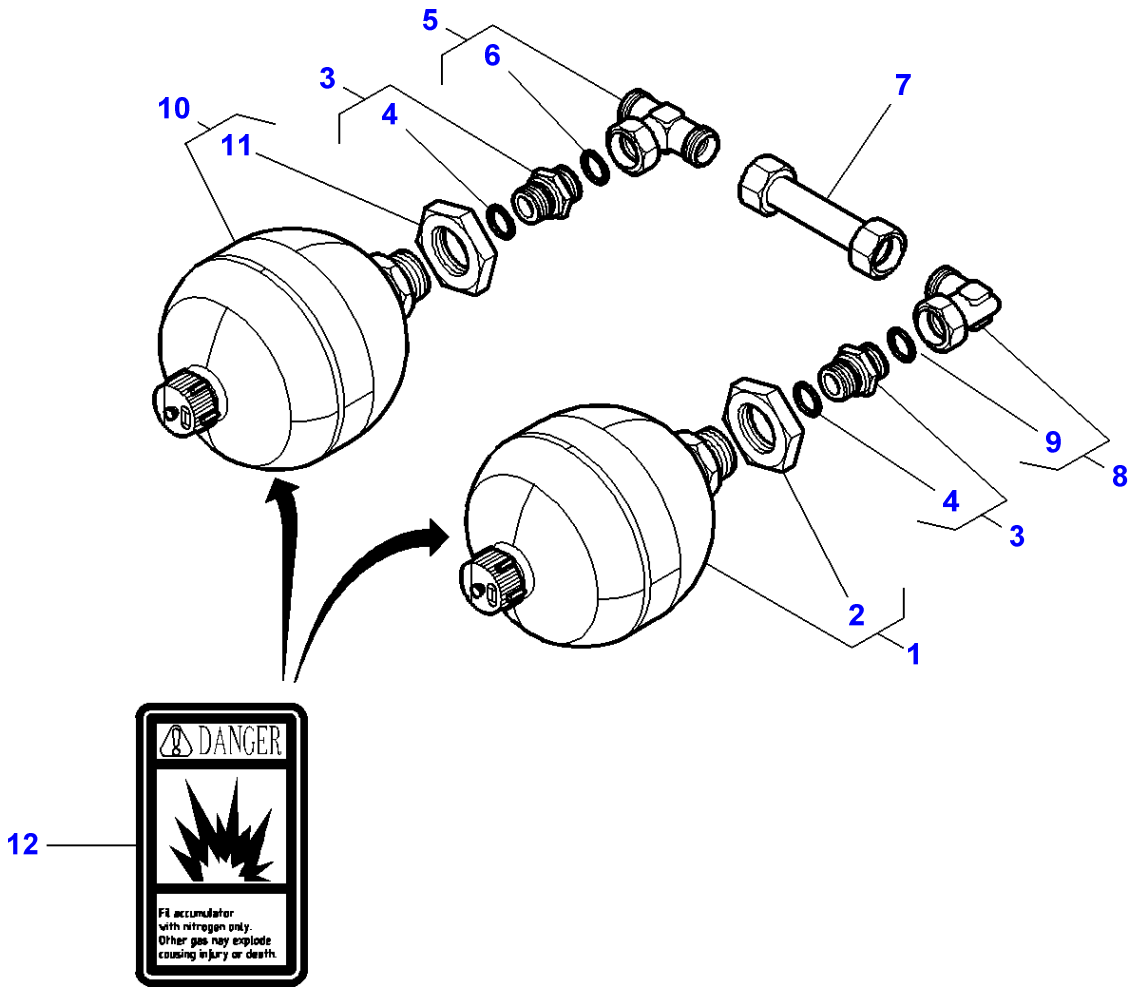

5
6
3
4
10
11
7
9
8
4
3
2
1
12
DANGER
Fit accumulator with nitrogen only. Other gas may explode causing injury or death.

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276645M1 | 1 | Accumulator | [A]<br>44 Bars |
| 2 | 3907430M1 | 1 | Nut | (1) |
| 3 | 3011548X91 | 2 | Union | |
| 4 | 3011154X1 | 1 | Gasket | (3) |
| 5 | 3011093X91 | 1 | Union | M22 |
| 6 | 3011147X1 | 1 | O Ring | (5) |
| 7 | 4277428M2 | 1 | Tube | |
| 8 | 3011085X91 | 1 | Union | |
| 9 | 3011147X1 | 1 | O Ring | (8) |
| 10 | 4278484M1 | 1 | Accumulator | [A]<br>17 Bars |
| 11 | 3907430M1 | 1 | Nut | (10) |
| 12 | 3777021M3 | 1 | Decal | |

**FOOTNOTE [A]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

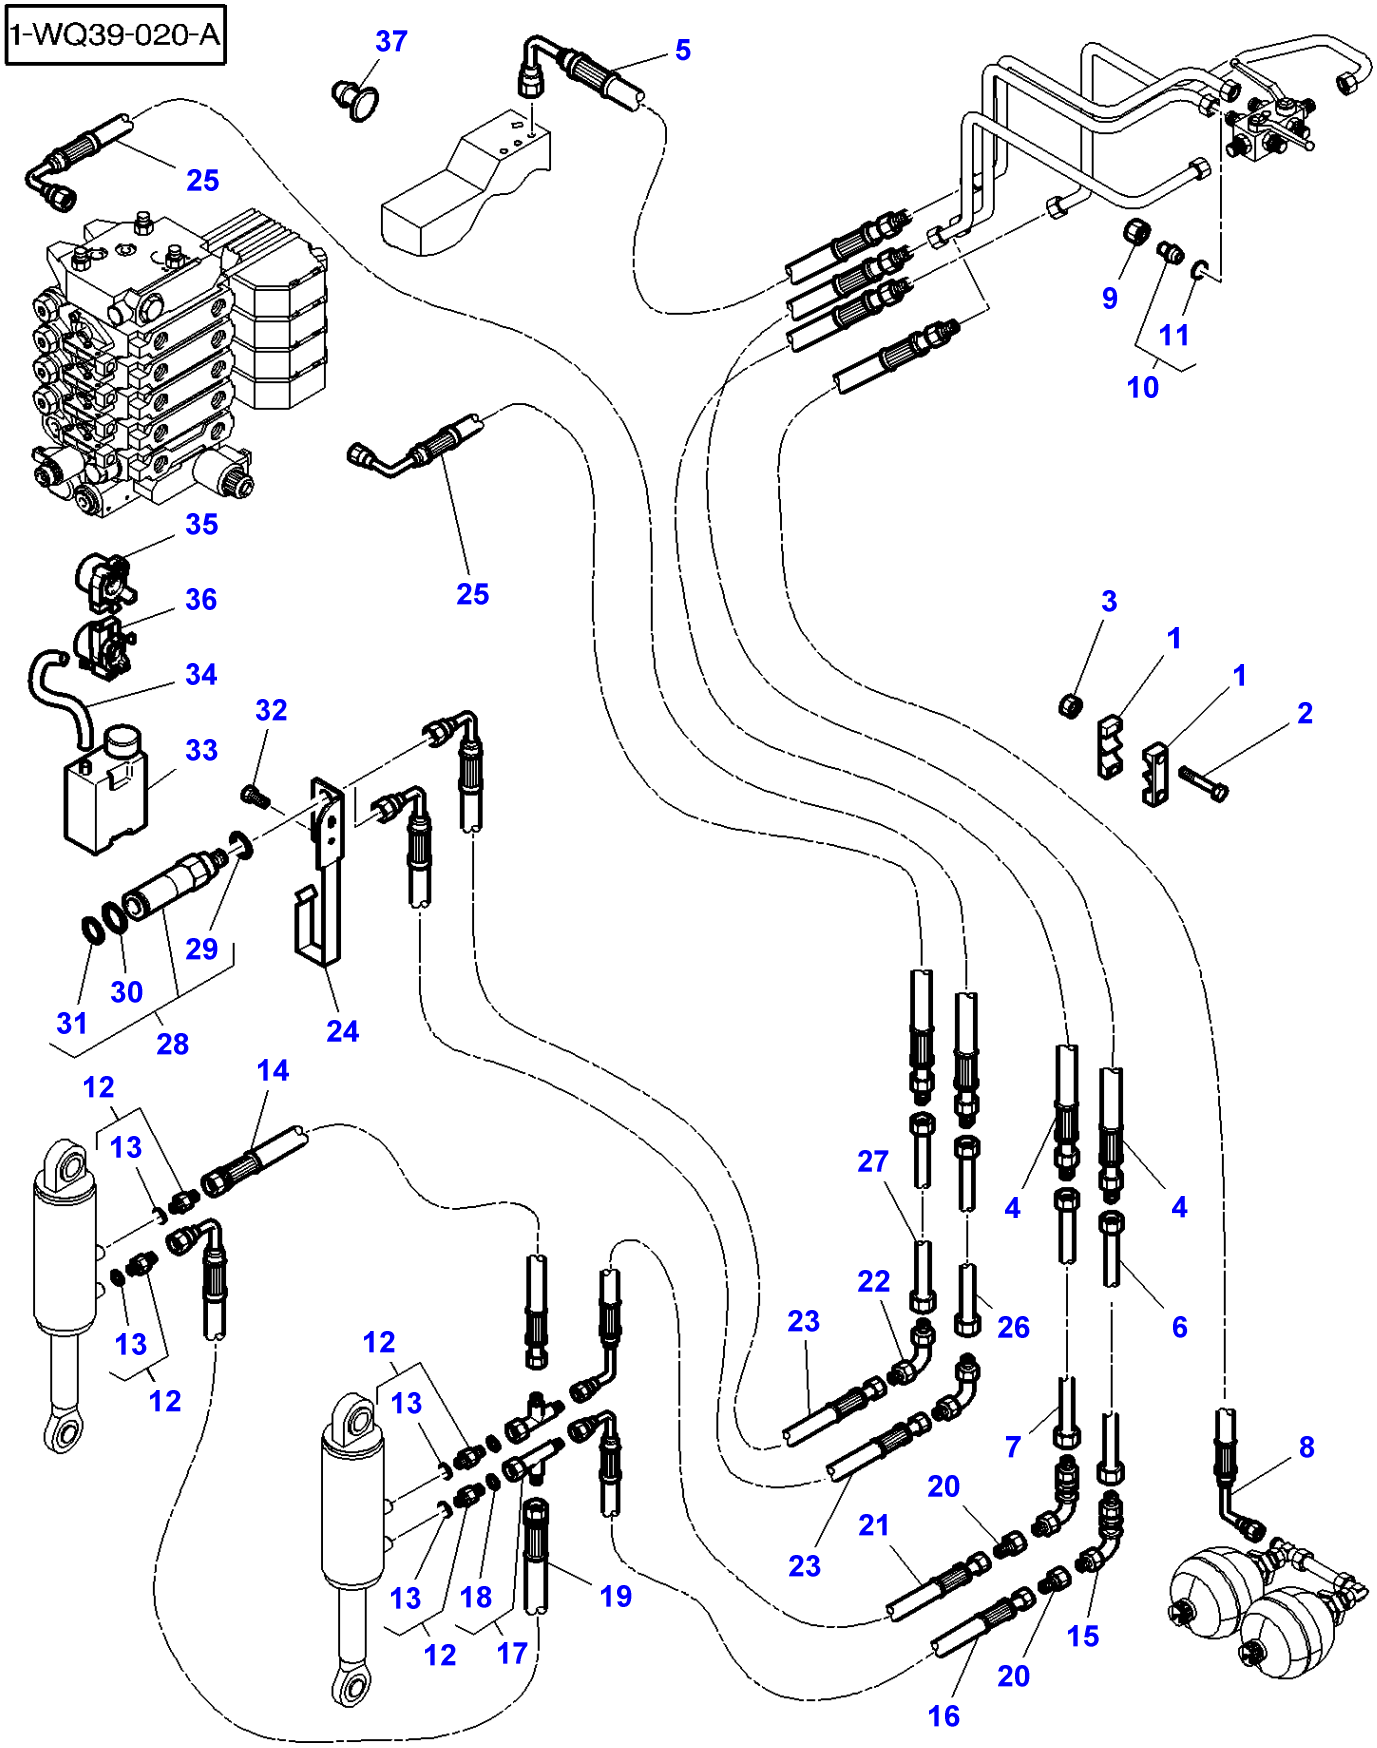

1-WQ39-020-A
37
5
25
9
11
10
25
35
36
34
33
32
3
1
1
2
29
30
31
28
24
14
12
13
27
4
4
22
23
26
6
12
13
13
12
7
8
20
21
23
12
13
13
18
19
12
17
15
20
16

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786069M1 | 2 | Bridle | |
| 2 | 339229X1 | 2 | Hex. Sock. Screw | M6 X 40 |
| 3 | 1441500X1 | 2 | Locknut | M6 |
| 4 | 4276161M2 | 2 | Hydr. Hose | Length 1450 MM |
| 5 | 4278482M1 | 1 | Hydr. Hose | Length 1370 MM |
| 6 | 4276747M3 | 1 | Tube | |
| 7 | 4276746M3 | 1 | Tube | |
| 8 | 4278475M1 | 1 | Hydr. Hose | [A] Length 900 MM |
| 9 | 3011119X1 | 1 | Nut | [B] |
| 10 | 3011136X91 | 1 | Tap | [B] |
| 11 | 3011147X1 | 1 | O Ring | [B] (10) |
| 12 | 3011223X91 | 4 | Union | |
| 13 | 338923X1 | 1 | Gasket | (23) |
| 14 | 4278098M1 | 1 | Hydr. Hose | Length 640 MM |
| 15 | 3011065X1 | 2 | Union | |
| 16 | 4278100M1 | 1 | Hydr. Hose | Length 480 MM |
| 17 | 3011289X91 | 2 | Teepiece | |
| 18 | 3011146X1 | 1 | O Ring | (17) |
| 19 | 4278099M1 | 1 | Hydr. Hose | Length 400 MM |
| 20 | 3011071X91 | 2 | Union | |
| 21 | 4278101M1 | 1 | Hydr. Hose | Length 520 MM |
| 22 | 3011065X1 | 2 | Union | [C] |
| 23 | 4278096M1 | 2 | Hydr. Hose | [C] Length 580 MM |
| 24 | 4278318M2 | 1 | Strap | [C] |
| 25 | 4276160M2 | 2 | Hydr. Hose | [C] Length 1700 MM |
| 26 | 4276749M3 | 1 | Tube | [C] |
| 27 | 4276748M3 | 1 | Tube | [C] |
| 28 | **3785907M2** | 2 | Female Coupler | [C] |
| 29 | 3903520M1 | 1 | Gasket | [C] (28) |
| 30 | 3903512M2 | 1 | Snapring | [C] (28) |
| 31 | 368374X1 | 1 | O Ring | [C] (28) |
| 32 | 339761X1 | 2 | Hex. Sock. Screw | [C] M8 X 25 |
| 33 | 3794303M1 | 1 | Can | [C] |
| 34 | 4279254M1 | 1 | Hydr. Hose | [C] Length 100 MM |
| 35 | 4278347M1 | 1 | Breather | [C] |
| 36 | 4278348M1 | 1 | Breather | [C] |
| 37 | 3389680M1 | 2 | Plug | [D] Diameter 25,5 MM |
| | 3713404M1 | 2 | Plug | [D] Diameter 15 MM |

**FOOTNOTE [A]** WITH ACCUMULATOR
**FOOTNOTE [B]** WITHOUT ACCUMULATOR
**FOOTNOTE [C]** WITH HYDRAULIC COUPLING
**FOOTNOTE [D]** WITHOUT HYDRAULIC COUPLING

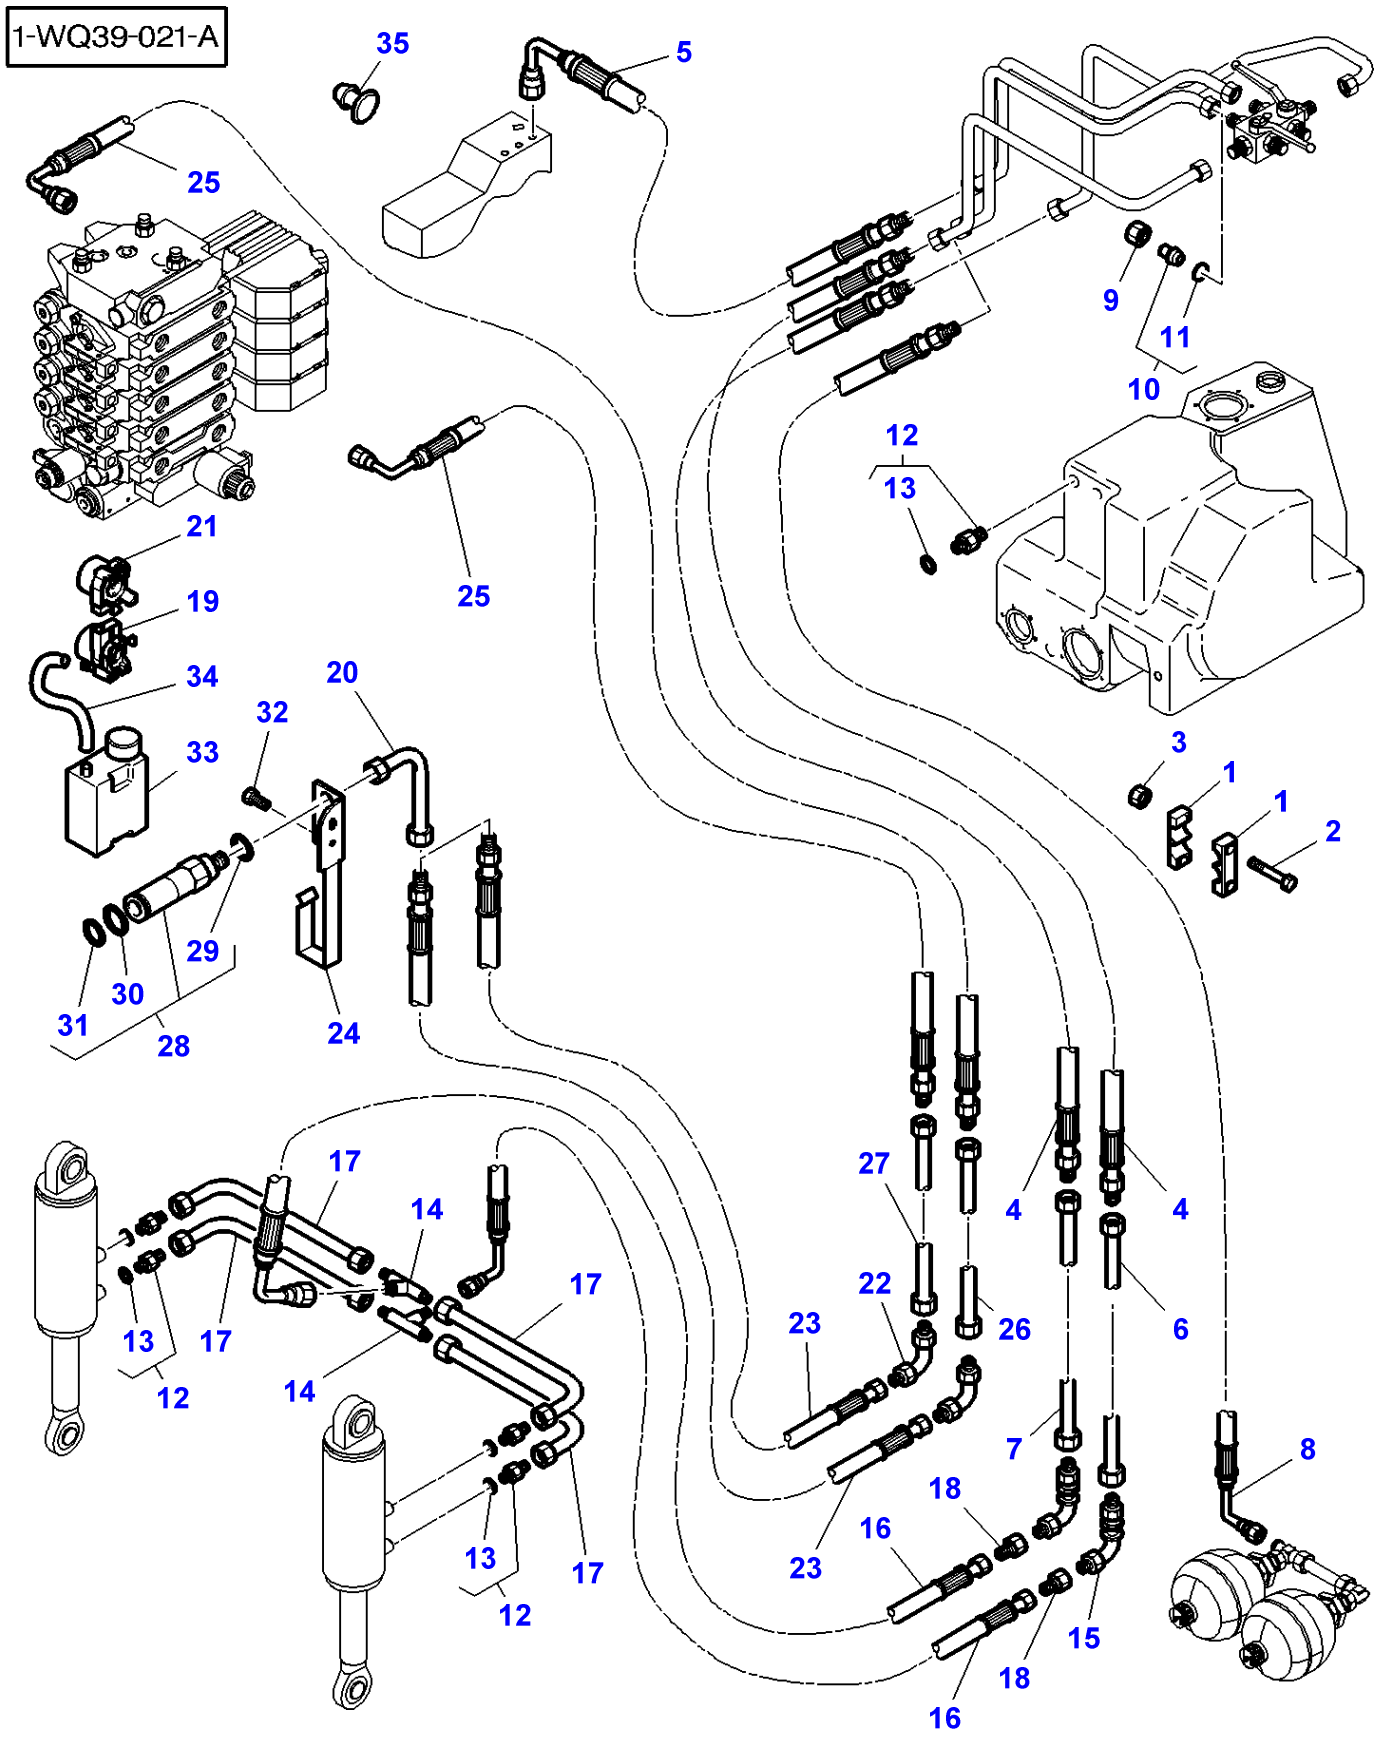
1-WQ39-021-A
35
5
25
9
11
10
12
13
25
21
19
34
20
32
33
3
1
1
2
29
30
31
28
24
17
14
27
4
4
17
22
23
26
6
13
17
12
14
7
8
18
16
23
13
17
12
15
18
16


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Front Linkage - Hydraulic - With Front Linkage 50000N 

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786069M1 | 2 | Bridle | |
| 2 | 339229X1 | 2 | Hex. Sock. Screw | M6 X 40 |
| 3 | 1441500X1 | 2 | Locknut | M6 |
| 4 | 4276161M2 | 2 | Hydr. Hose | Length 1450 MM |
| 5 | 4278482M1 | 1 | Hydr. Hose | Length 1370 MM |
| 6 | 4276747M3 | 1 | Tube | |
| 7 | 4276746M3 | 1 | Tube | |
| 8 | 4278475M1 | 1 | Hydr. Hose | [A] Length 900 MM |
| 9 | 3011119X1 | 1 | Nut | [B] |
| 10 | 3011136X91 | 1 | Tap | [B] |
| 11 | 3011147X1 | 1 | O Ring | [B] (10) |
| 12 | 3011223X91 | 4 | Union | |
| 13 | 338923X1 | 1 | Gasket | (12) |
| 14 | 338737X1 | 2 | Union | |
| 15 | 3011065X1 | 2 | Union | |
| 16 | 4278100M1 | 2 | Hydr. Hose | Length 480 MM |
| 17 | 4279253M1 | 4 | Tube | |
| 18 | 3011071X91 | 2 | Union | |
| 19 | 4278348M1 | 1 | Breather | [C] |
| 20 | 4279248M1 | 2 | Tube | [C] |
| 21 | 4278347M1 | 1 | Breather | [C] |
| 22 | 3011065X1 | 2 | Union | [C] |
| 23 | 4279250M1 | 2 | Hydr. Hose | [C] Length 580 MM |
| 24 | 4278318M2 | 1 | Strap | [C] |
| 25 | 4276160M2 | 2 | Hydr. Hose | [C] Length 1700 MM |
| 26 | 4276749M3 | 1 | Tube | [C] |
| 27 | 4276748M3 | 1 | Tube | [C] |
| 28 | **3785907M2** | 2 | Female Coupler | [C] |
| 29 | 3903520M1 | 1 | Gasket | [C] (28) |
| 30 | 3903512M2 | 1 | Snapring | [C] (28) |
| 31 | 368374X1 | 1 | O Ring | [C] (28) |
| 32 | 339761X1 | 2 | Hex. Sock. Screw | [C] M8 X 25 |
| 33 | 3794303M1 | 1 | Can | [C] |
| 34 | 4279254M1 | 1 | Hydr. Hose | [C] Length 100 MM |
| 35 | 3389680M1 | 2 | Plug | [D] Diameter 25,5 MM |
| | 3713404M1 | 2 | Plug | [D] Diameter 15 MM |

**FOOTNOTE [A]** WITH ACCUMULATOR
**FOOTNOTE [B]** WITHOUT ACCUMULATOR
**FOOTNOTE [C]** WITH HYDRAULIC COUPLING
**FOOTNOTE [D]** WITHOUT HYDRAULIC COUPLING

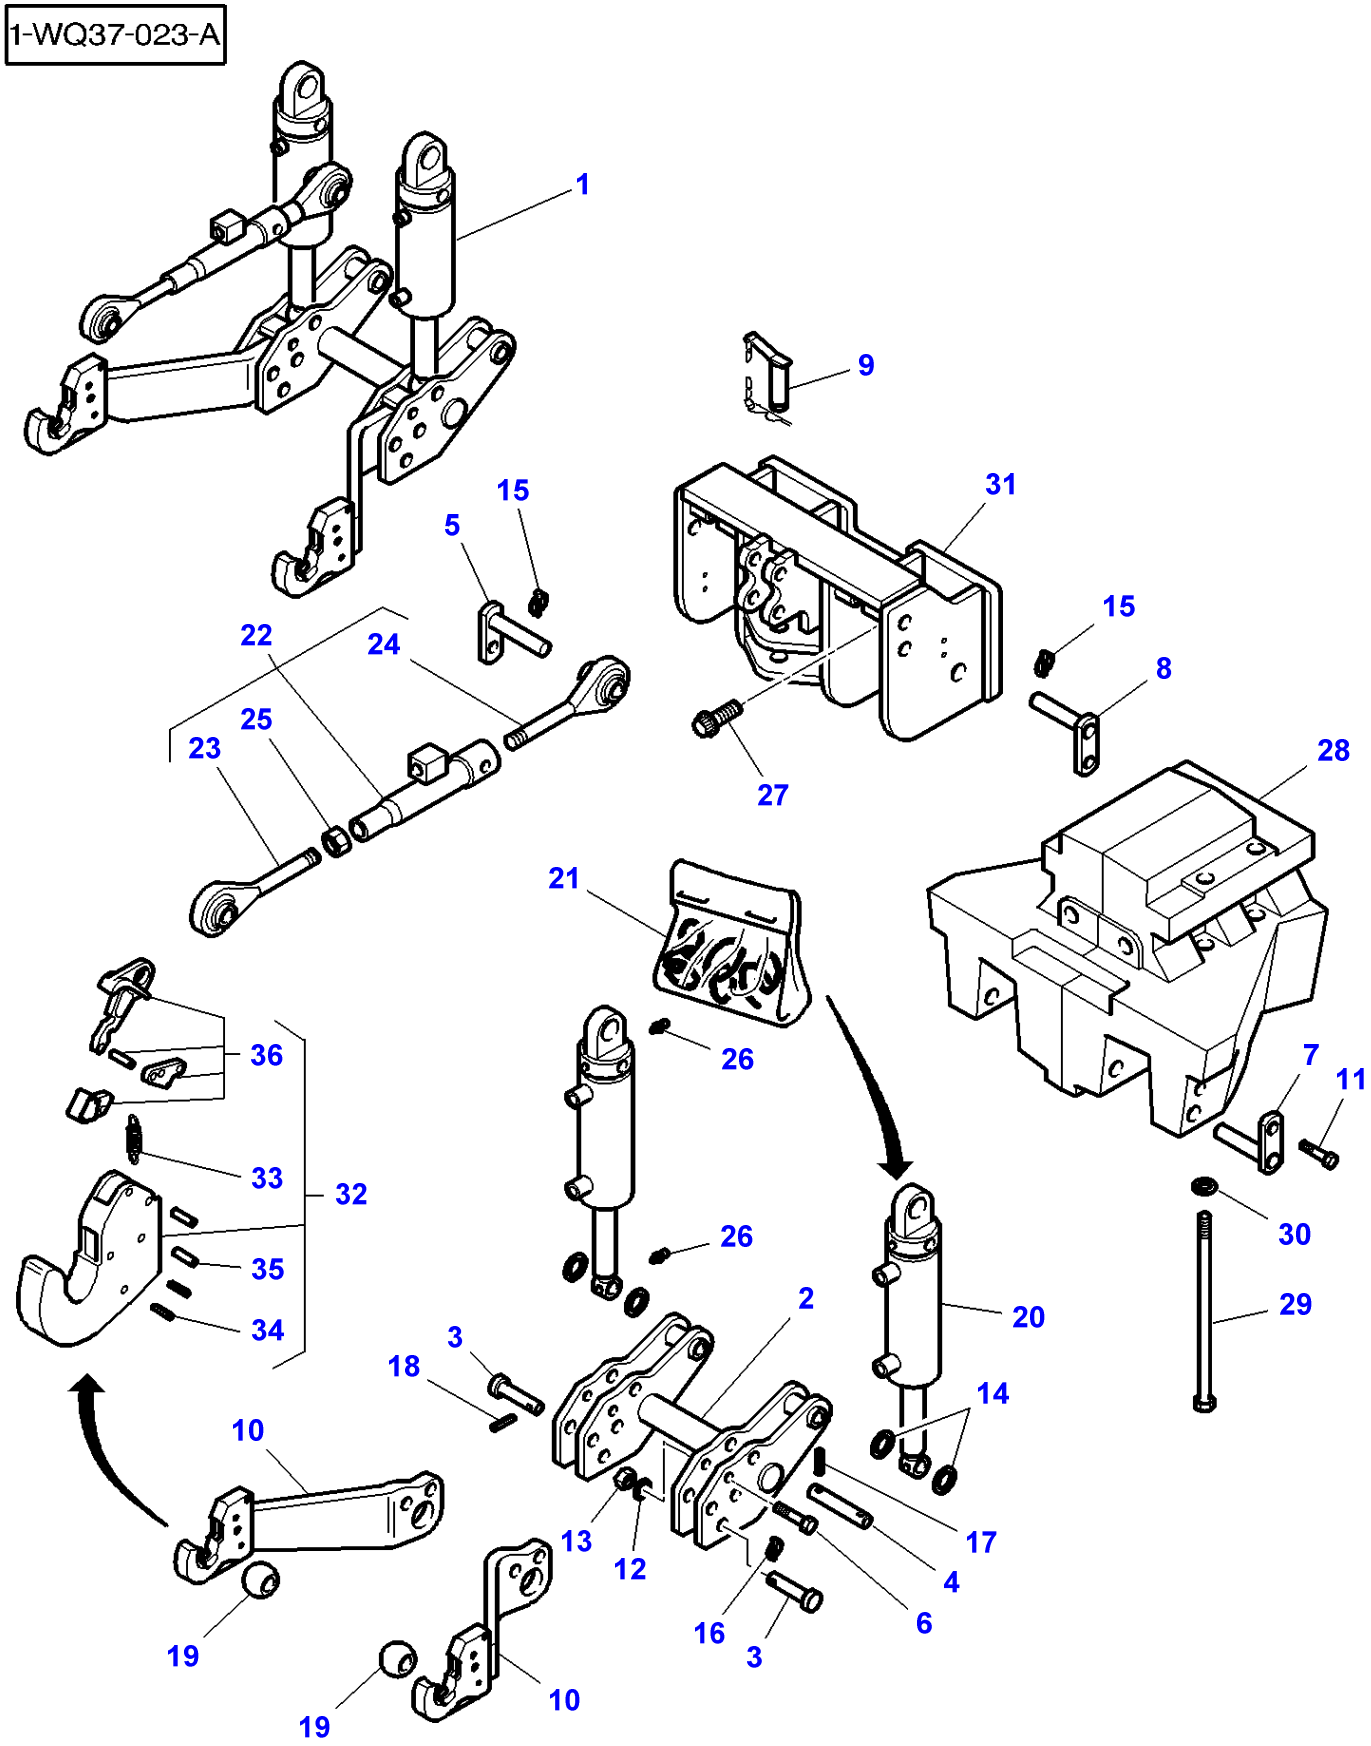
1-WQ37-023-A
1
9
31
15
5
15
8
22
24
25
23
27
28
21
36
26
7
11
33
32
26
30
35
20
2
29
34
3
18
14
10
13
12
17
4
6
16
3
19
10
19


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Front Linkage 35000N Page 040-0195

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276569M91 | 1 | Hitch | |
| 2 | 4276572M1 | 1 | Support | (1) |
| 3 | 3788596M1 | 4 | Clevis Pin | (1) |
| 4 | 3788597M1 | 2 | Clevis Pin | (1) |
| 5 | 3782680M1 | 1 | Clevis Pin | (1) |
| 6 | 3788599M1 | 2 | Clevis Pin | (1) |
| 7 | 4271645M1 | 2 | Clevis Pin | (1) |
| 8 | 4271646M1 | 2 | Clevis Pin | (1) |
| 9 | 3712122M1 | 1 | Clevis Pin | (1) |
| 10 | 3788600M1 | 1 | Arm | (1) Right Hand |
| | 3788601M1 | 1 | Arm | (1) Left Hand |
| 11 | 3382952M1 | 2 | Hex. Sock. Screw | (1) M16 X 50 |
| 12 | 1443512X1 | 2 | Washer | (1) |
| 13 | 3788603M1 | 2 | Locknut | (1) M24 |
| 14 | 3788604M1 | 4 | Washer | (1) Diameter 36-50 X 4 |
| 15 | 3782684M1 | 3 | Clip | (1) Diameter 8 MM |
| 16 | 3788605M1 | 2 | Clip | (1) Diameter 10,5 MM |
| 17 | 3788607M1 | 2 | Pin | (1) Diameter 8 X 50 |
| 18 | 3788608M1 | 2 | Pin | (1) Diameter 12 X 50 |
| 19 | **3782685M1** | 2 | Toggle | (1) CAT 3 |
| | **3782686M1** | 2 | Toggle | (1) CAT 2-3 |
| 20 | 4276570M1 | 1 | Ram | (1) Right Hand 3504846069RO |
| | 4278050M1 | 1 | Ram | (1) Left Hand 3504846068RO |
| 21 | **3903317M91** | 1 | Kit, Joint | (20) |
| 22 | 3788609M1 | 1 | Bar | (1) |
| 23 | **3900885M1** | 1 | Toggle | (22) |
| 24 | 3903895M1 | 1 | Toggle | (22) |
| 25 | 3900887M1 | 1 | Nut | (22) M30 |
| 26 | 3900862M1 | 4 | Greaser | (1) M6 |
| 27 | 3010563X1 | 8 | Screw | M20 X 90 |
| 28 | 4271642M2 | 1 | Weight | |
| 29 | 3010965X1 | 4 | Hex. Sock. Screw | M20 X 420 |
| 30 | 385365X1 | 4 | Washer | Diameter 20-37 X 5 |
| 31 | 4276571M1 | 1 | Support | |
| 32 | | 1 | Hook | CAT 3/2 Not serviced,order REF. 10 |
| 33 | 3903949M1 | 1 | Spring | (32) |
| 34 | 3903947M91 | 1 | Kit, Roll Pins | (32) |
| 35 | 3903948M91 | 1 | Kit, Roll Pins | (32) |
| 36 | 3903946M91 | 1 | Kit, Lever | (32) |

1-WQ37-024-A

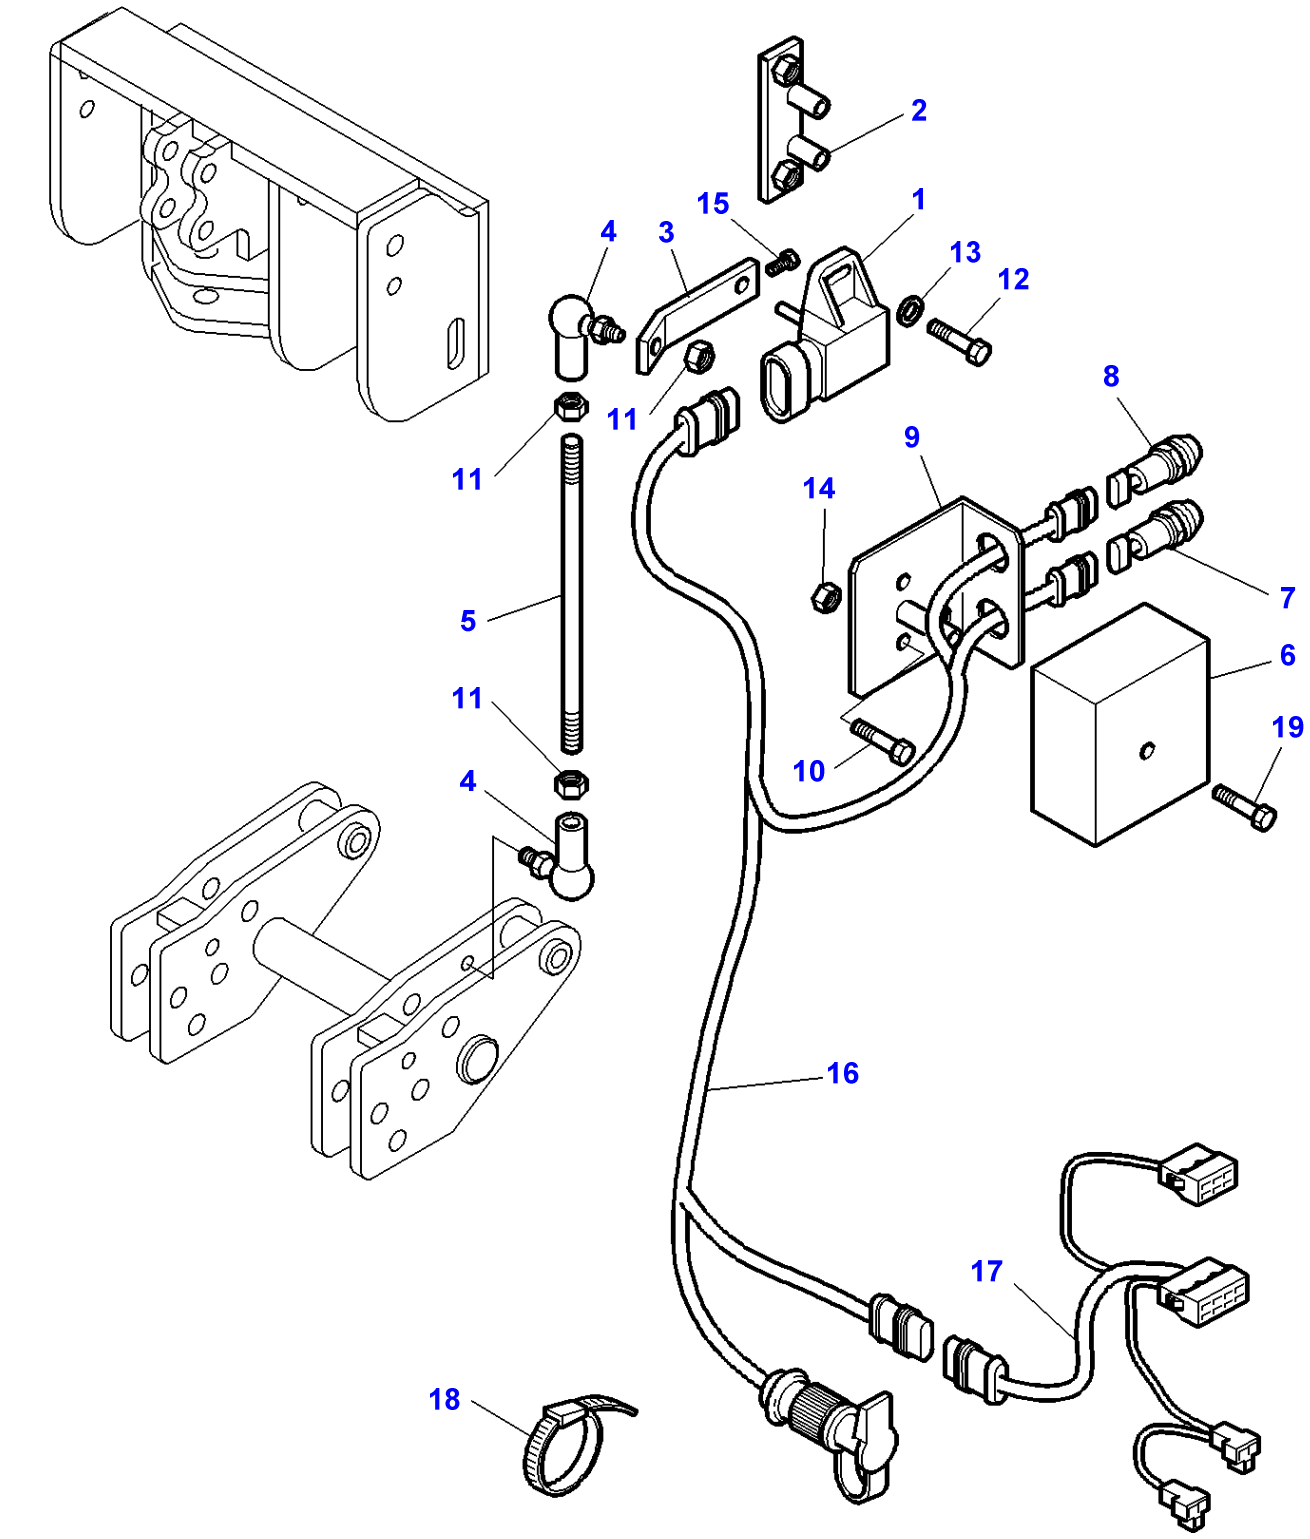


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | **3784361M1** | 1 | Transducer | |
| 2 | 3786146M2 | 1 | Support | |
| 3 | 3786147M2 | 1 | Rod Link | Length 100 MM |
| 4 | **3778648M1** | 2 | Stub | M8 |
| 5 | 3786158M2 | 1 | Stem | M8<br>Length 385 MM |
| 6 | 3786187M1 | 1 | Cover | |
| 7 | **3714137M1** | 1 | Switch,Indirect | [A] |
| 8 | **3714138M1** | 1 | Switch,Indirect | [B] |
| 9 | 3786188M1 | 1 | Support | |
| 10 | 339009X1 | 2 | Hex. Sock. Screw | M8 X 35 |
| 11 | 3011202X1 | 3 | Nut | M8 |
| 12 | 1442171X1 | 2 | Hex. Sock. Screw | M4 X 10 |
| 13 | 339102X1 | 2 | Washer | Diameter 4-9 X 1 |
| 14 | 339169X1 | 2 | Nut | M8 |
| 15 | 3011203X1 | 1 | Screw | M4 X 10 |
| 16 | 3786263M1 | 1 | Harness | Up to Serial or Engine Number 26-OCT-2004 |
| | 4280288M1 | 1 | Harness | From Serial or Engine Number 27-OCT-2004 |
| 17 | 3786264M2 | 1 | Harness | Up to Serial or Engine Number 26-OCT-2004<br>Length 2150 MM |
| 18 | 3619622M1 | X | Cable Tie | |
| 19 | 391074X1 | 1 | Hex. Sock. Screw | M6 X 12 |

**FOOTNOTE [A]** UP
**FOOTNOTE [B]** DOWN

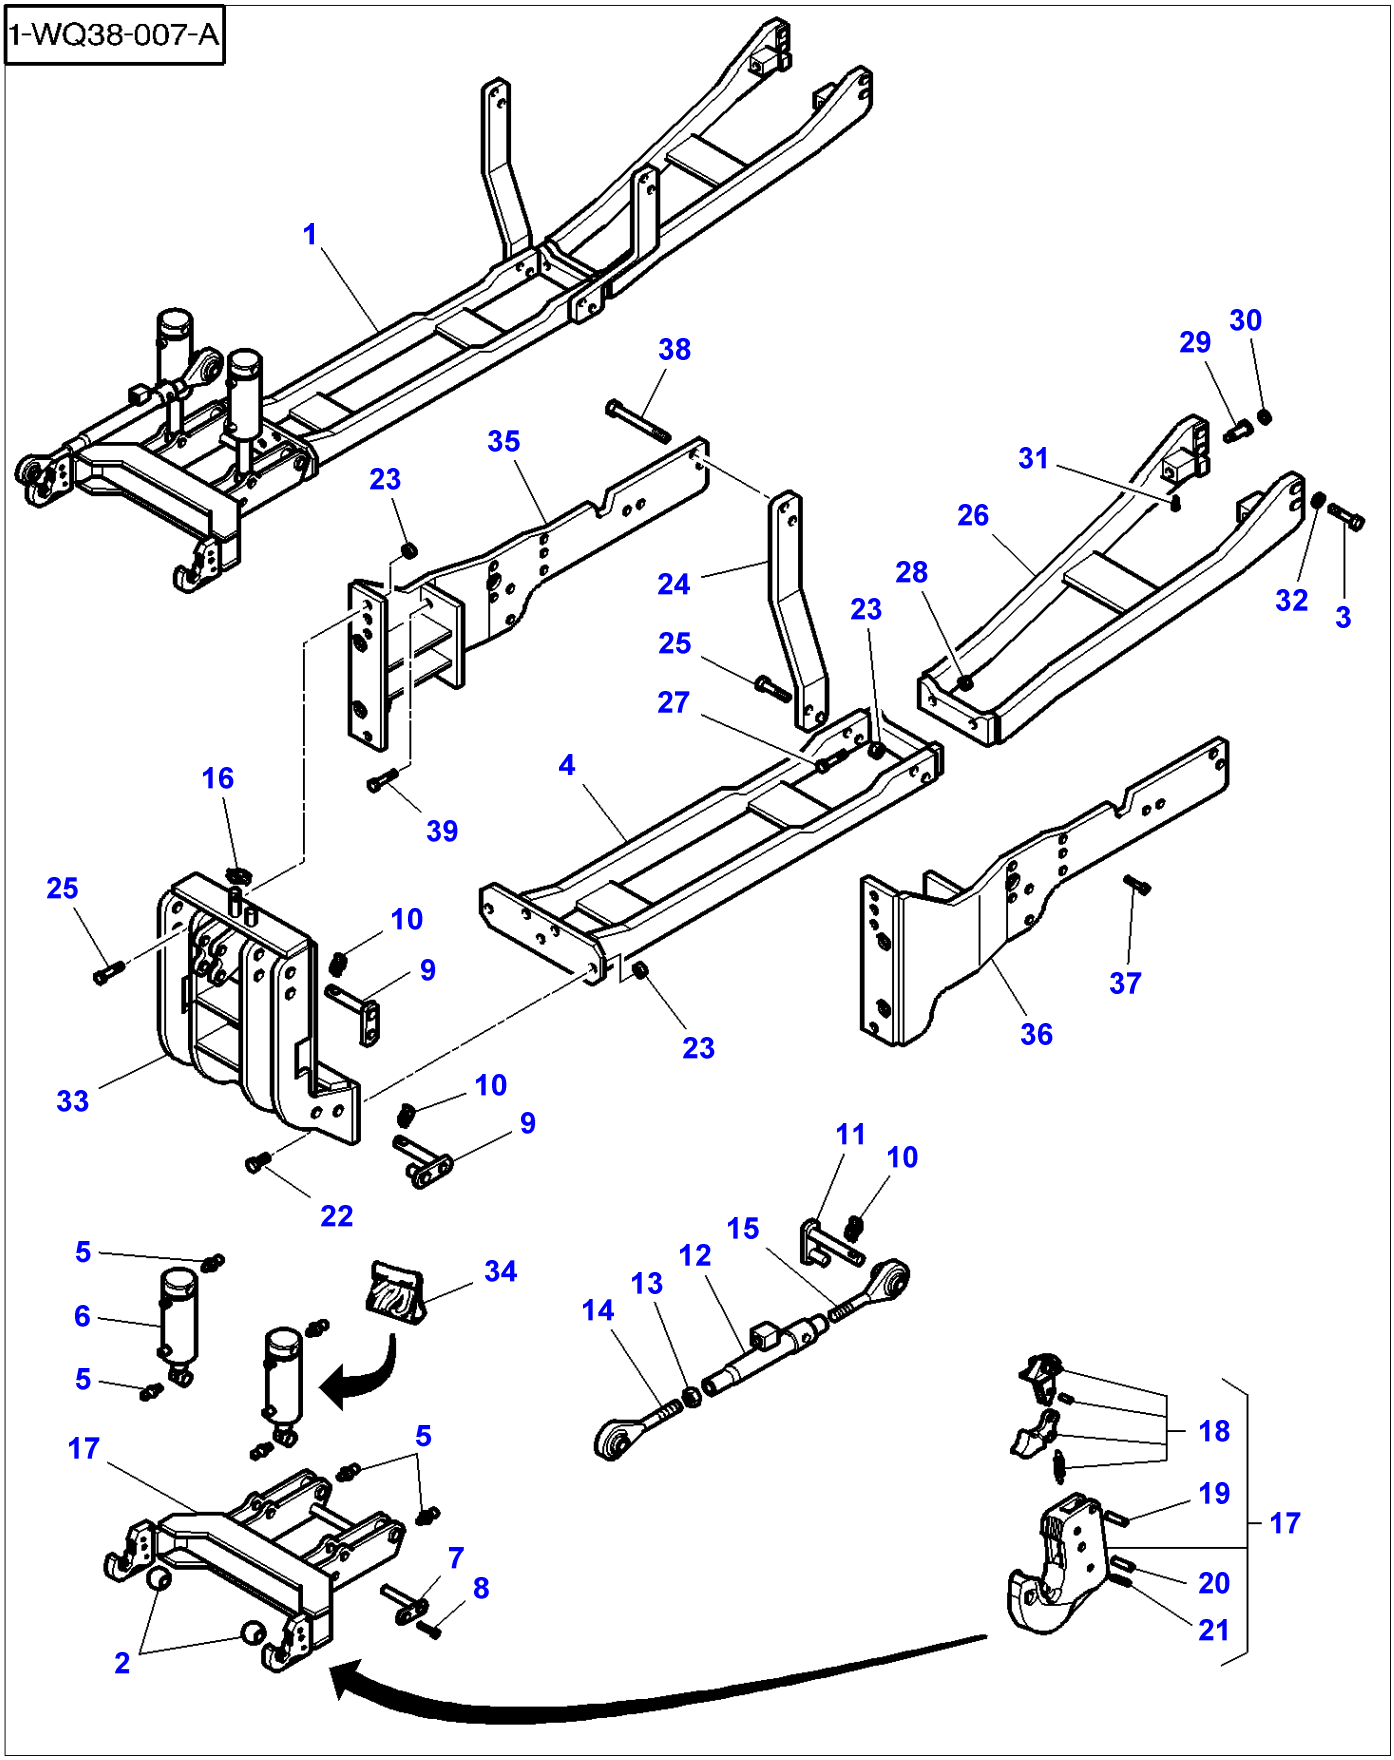
1-WQ38-007-A
1
38
35
23
24
25
27
4
16
39
25
10
9
33
10
9
22
23
29
30
31
26
28
23
32
3
37
36
11
10
15
12
13
14
5
6
5
34
17
5
7
8
2
18
19
17
20
21


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Front Linkage 50000N Page 040-0205

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4273685M91 | 1 | Hitch | |
| 2 | **3782685M1** | 2 | Toggle | (1) CAT 3 |
| | **3782686M1** | 2 | Toggle | (1) CAT 2-3 |
| 3 | 3010915X1 | 4 | Hex. Sock. Screw | (1) M20 X 70 |
| 4 | 4276033M1 | 1 | Transverse | (1) |
| 5 | 3900862M1 | 6 | Greaser | (1) M6 |
| 6 | 4276810M1 | 2 | Ram | (1) |
| 7 | 3783023M1 | 2 | Clevis Pin | (1) |
| 8 | 339020X1 | 2 | Hex. Sock. Screw | (1) M12 X 20 |
| 9 | 3783022M1 | 4 | Clevis Pin | (1) |
| 10 | 3782684M1 | 5 | Clip | (1) Diameter 8 X 45 |
| 11 | 3783024M1 | 1 | Support | (1) |
| 12 | 3783027M1 | 1 | Body | (1) |
| 13 | 3010927X1 | 1 | Nut | (1) M36 |
| 14 | **3783029M1** | 1 | Toggle | (1) Right Hand |
| 15 | **3783030M1** | 1 | Toggle | (1) Left Hand |
| 16 | 3782691M1 | 1 | Clip | (1) Diameter 6 X 45 |
| 17 | 3783021M2 | 1 | Arm | (1) |
| 18 | 3903314M91 | 1 | Kit, Repair | (17) |
| 19 | 3006429X1 | 1 | Pin | (17) Diameter 10 X 36 |
| 20 | 3008317X1 | 1 | Pin | (17) Diameter 13 X 36 |
| 21 | 339783X1 | 1 | Pin | (17) Diameter 6 X 32 |
| 22 | 3001968X1 | 5 | Hex. Sock. Screw | (1) M20 X 60 |
| 23 | 3009747X1 | 17 | Nut | (1) M20 |
| 24 | 3783168M1 | 1 | Stirrup | (1) Right Hand |
| | 3783169M1 | 1 | Stirrup | (1) Left Hand |
| 25 | 391329X1 | 12 | Hex. Sock. Screw | (1) M20 X 70 |
| 26 | 4273684M1 | 1 | Transverse | (1) |
| 27 | 3010164X1 | 2 | Hex. Sock. Screw | (1) M18 X 80 |
| 28 | 392335X1 | 2 | Nut | (1) M18 |
| 29 | 3619813M1 | 2 | Screw | (1) |
| 30 | 3619814M1 | 2 | Washer | (1) |
| 31 | 1440349X1 | 2 | Screw | (1) M8 X 30 |
| 32 | 390039X1 | 4 | Washer | (1) |
| 33 | 4276811M3 | 1 | Frame | |
| 34 | **3903317M91** | 1 | Kit, Joint | |
| 35 | 3783633M6 | 1 | Runner | Right Hand |
| 36 | 3783632M5 | 1 | Runner | Left Hand |
| 37 | 3384129M1 | 8 | Hex. Sock. Screw | M20 X 55 |
| | 391329X1 | 4 | Hex. Sock. Screw | M20 X 70 |
| 38 | 391914X1 | 4 | Hex. Sock. Screw | M20 X 110 |
| 39 | 3384129M1 | 2 | Hex. Sock. Screw | M20 X 55 |

1-WQ38-008-A

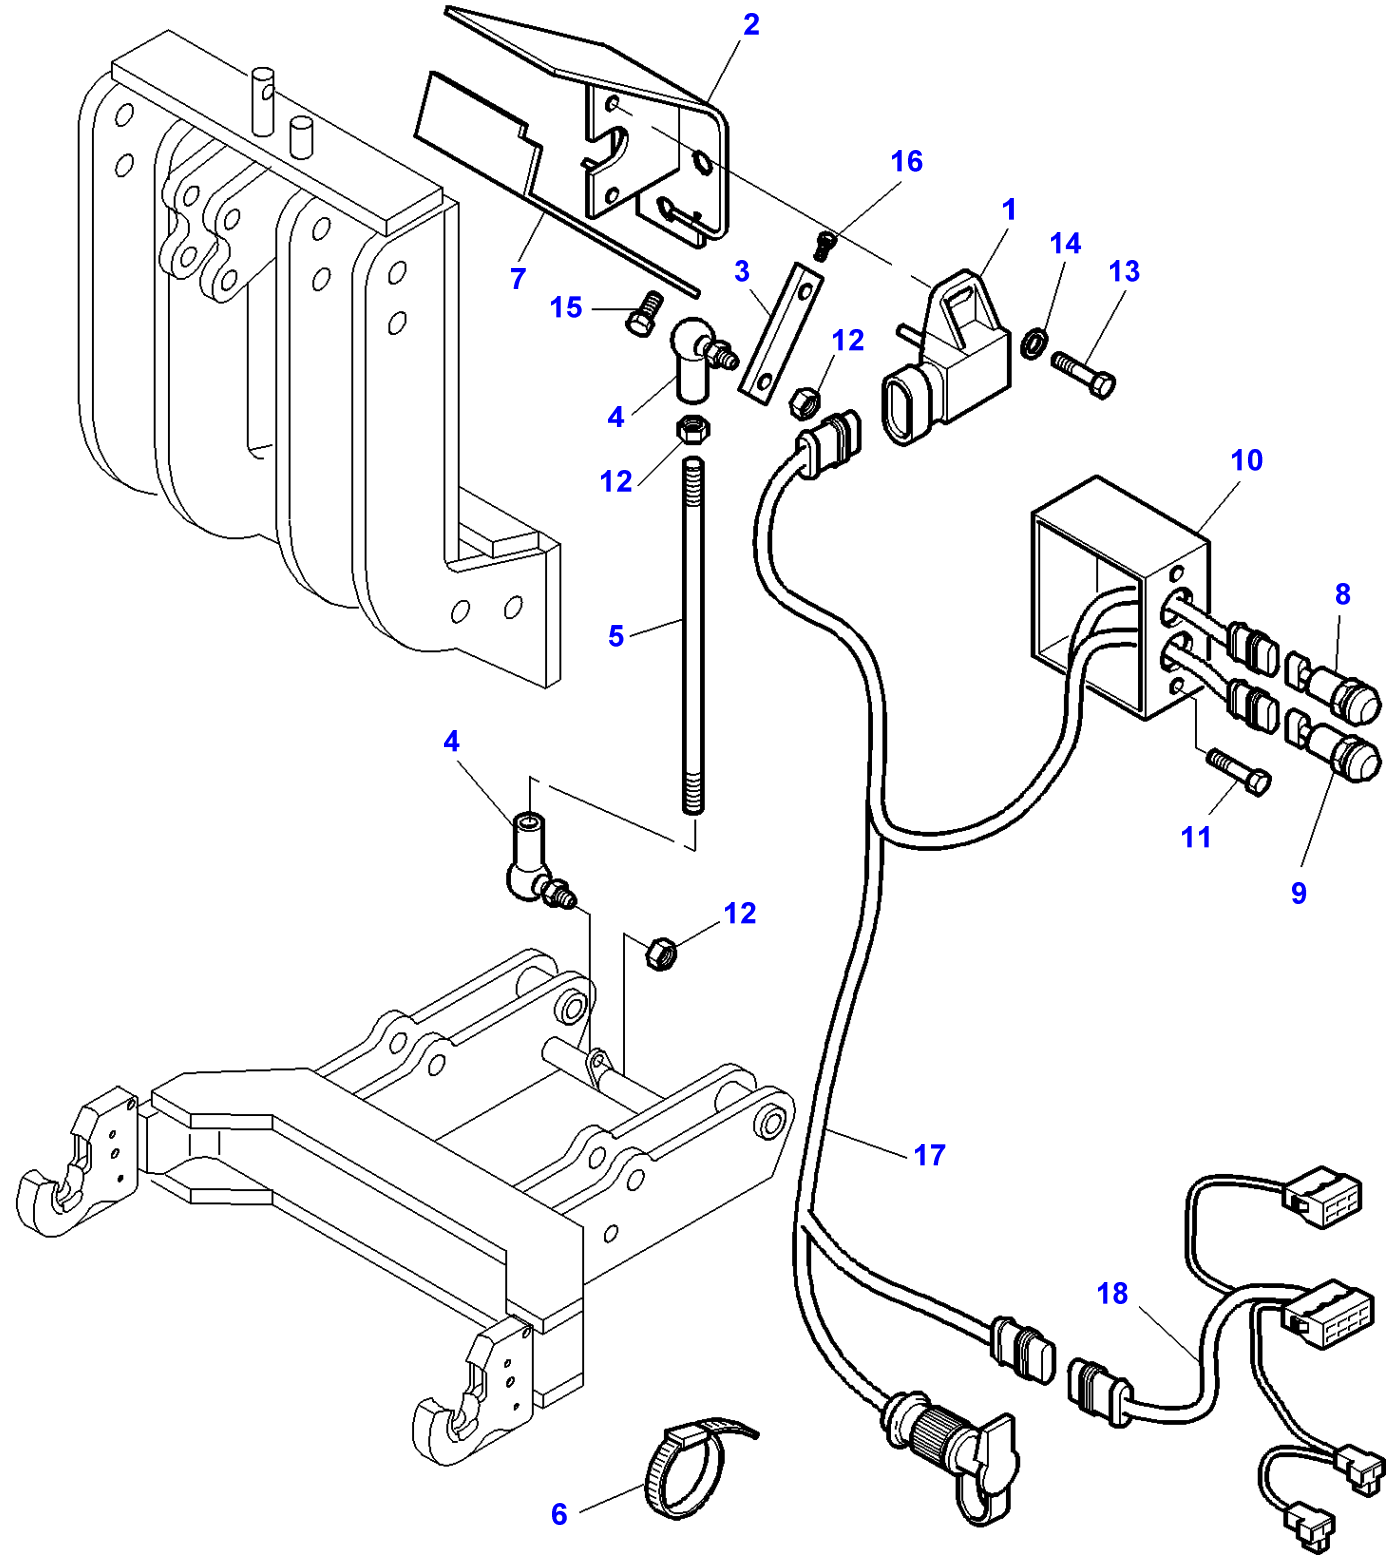


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | **3784361M1** | 1 | Transducer | |
| 2 | 3786259M1 | 1 | Support | |
| 3 | 3786098M2 | 1 | Rod Link | Length 56 MM |
| 4 | 3782780M1 | 2 | Stub | M6 |
| 5 | 3786131M2 | 1 | Stem | M6<br>Length 24 MM |
| 6 | 3619622M1 | 10 | Cable Tie | |
| 7 | 3786133M2 | 1 | Cowl | |
| 8 | **3714137M1** | 1 | Switch,Indirect | [A] |
| 9 | **3714138M1** | 1 | Switch,Indirect | [B] |
| 10 | 3786186M2 | 1 | Support | |
| 11 | 339009X1 | 2 | Hex. Sock. Screw | M8 X 35 |
| 12 | 3011202X1 | 3 | Nut | M8 |
| 13 | 1442171X1 | 2 | Hex. Sock. Screw | M4 X 10 |
| 14 | 339102X1 | 2 | Washer | Diameter 4-9 X 1 |
| 15 | 3009491X1 | 2 | Hex. Sock. Screw | M10 X 20 |
| 16 | 3011203X1 | 1 | Screw | M4 X 10 |
| 17 | 3786263M1 | 1 | Harness | Up to Serial or Engine Number 26-OCT-2004 |
| | 4280288M1 | 1 | Harness | From Serial or Engine Number 27-OCT-2004 |
| 18 | 3786264M2 | 1 | Harness | Up to Serial or Engine Number 26-OCT-2004<br>Length 2150 MM |

**FOOTNOTE [A]** UP
**FOOTNOTE [B]** DOWN

1-WG23-013-A

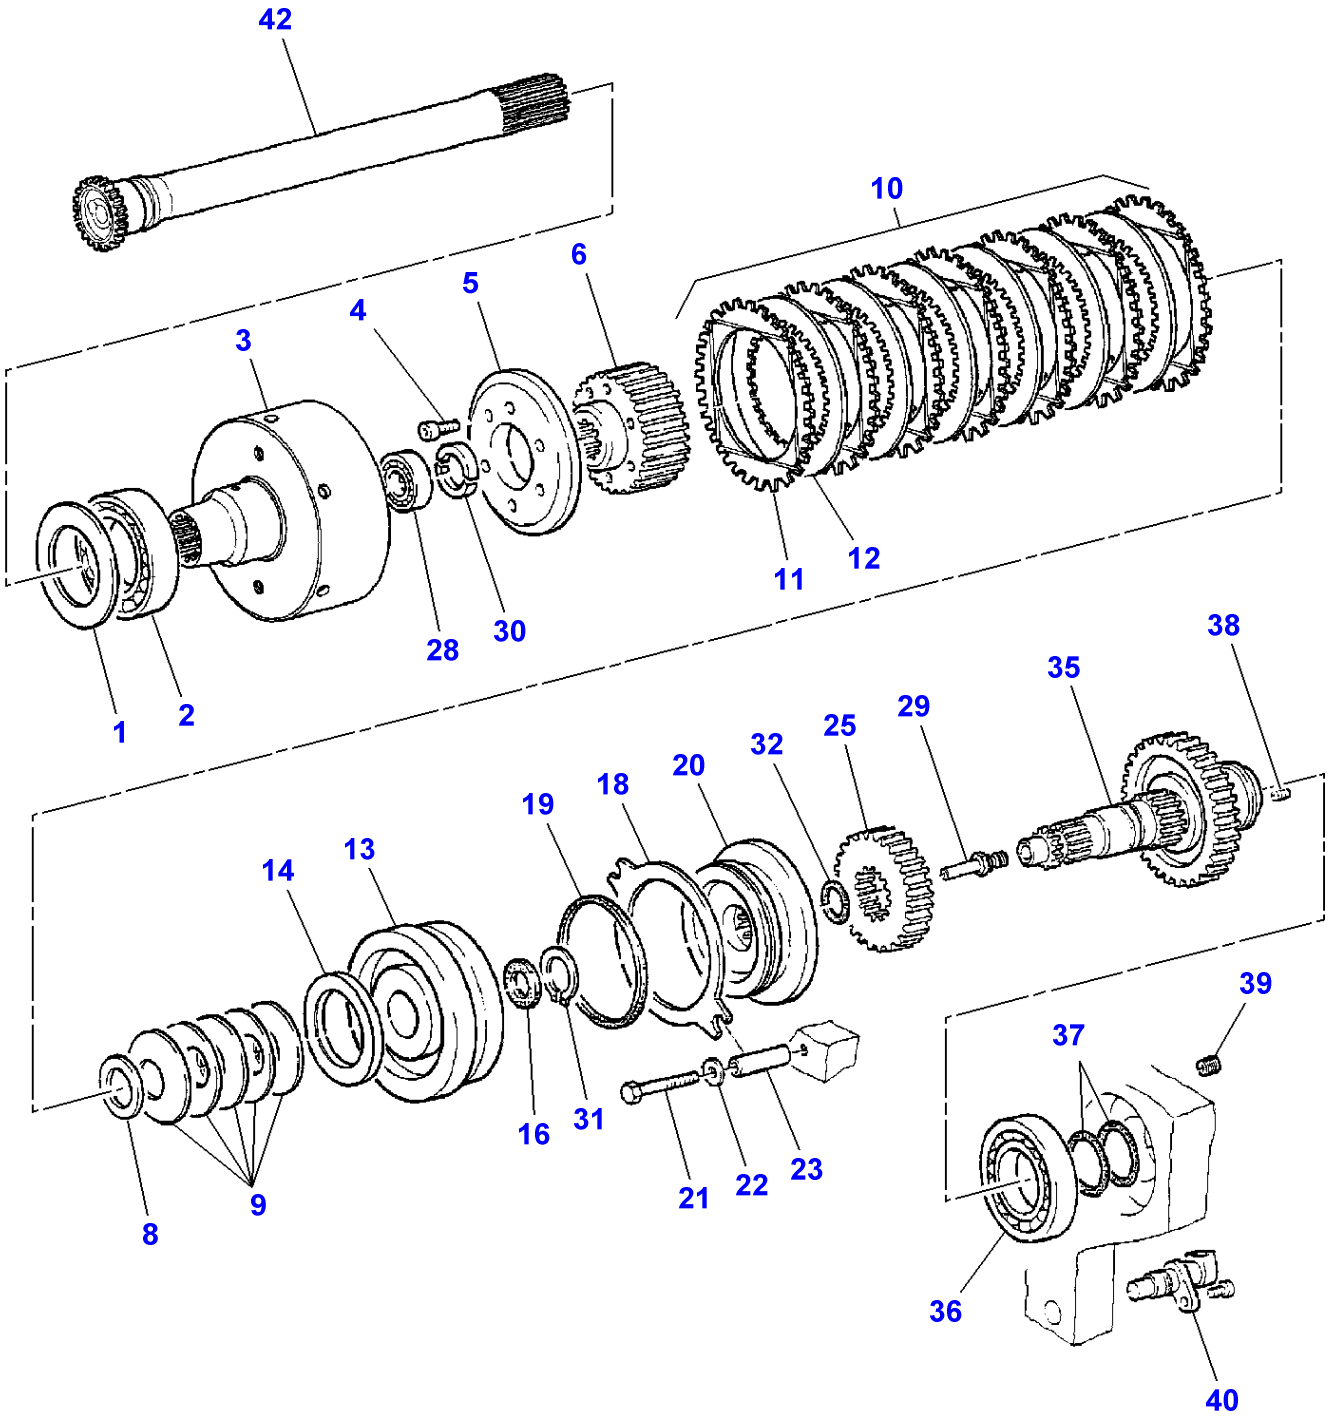

42
10
6
5
4
3
12
11
30
28
2
1
38
35
29
25
32
20
18
19
13
14
39
37
23
22
21
31
16
9
8
36
40

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X534.677.046.000 | X | Shim | Thickness 0,10 MM |
| | X534.677.146.000 | X | Shim | Thickness 0,30 MM |
| 2 | X605.506.311.000 | 1 | Ball Bearing | |
| 3 | 926.150.220.160 | 1 | Clutch Housing | |
| 4 | X493.607.305.000 | 6 | Hex. Sock. Screw | M8 X 20 |
| 5 | 822.100.220.170 | 1 | Backup Ring | |
| 6 | 822.100.220.040 | 1 | Disc Carrier | |
| 8 | X534.767.700.000 | X | Shim | Thickness 0,50 MM |
| | X534.767.900.000 | X | Shim | Thickness 1,00 MM |
| 9 | 822.100.220.510 | 5 | Cup Spring | |
| 10 | G926.150.220.040 | 1 | Kit, Disc | |
| 11 | | 7 | External Disc | (10)<br>Not serviced,order REF. 10 |
| 12 | | 6 | Internal Disc | (10)<br>Not serviced,order REF. 10 |
| 13 | 822.100.220.840 | 1 | Piston | |
| 14 | 822.100.220.860 | 1 | Ring | |
| 16 | 822.100.220.530 | 1 | Support Cover | |
| 18 | 514.100.220.630 | 1 | Compens. Sheet | |
| 19 | 822.100.220.380 | 1 | Support Cover | |
| 20 | 822.100.220.850 | 1 | Brake Disc | |
| 21 | X487.532.541.000 | 2 | Hex. Sock. Screw | M10 X 70 |
| 22 | X521.404.447.000 | 2 | Spring Plate | |
| 23 | 822.100.220.080 | 2 | Bush | |
| 25 | 822.100.220.340 | 1 | Spur Gear | Not for USA 750-1000 TR/MM<br>Number of teeth/spines 25 |
| | 824.100.220.010 | 1 | Spur Gear | 540-1000 TR/MM<br>Number of teeth/spines 22 |
| 28 | H822.100.220.070 | 1 | Ball Bearing | |
| 29 | 916.100.220.010 | 1 | Nozzle | |
| 30 | 199.100.080.110 | 2 | Banjo Fitting | |
| 31 | X530.005.446.000 | 1 | Circlip | Diameter 45 X 1,75 |
| 32 | X548.909.366.000 | 1 | O Ring | Diameter 40,2 X 3 |
| 35 | 822.100.220.520 | 1 | Shaft | |
| 36 | G822.100.220.030 | 1 | Bearing Roller | |
| 37 | X560.505.900.000 | 2 | Plain Compr.Ring | |
| 38 | X412.823.106.000 | 1 | Screw | M10 X 12 |
| 39 | 822.100.220.120 | 1 | Shroud | |
| 40 | | 1 | Transmitter | See Page - Reference Number 090-0085/11 |
| 42 | 926.102.080.130 | 1 | Shaft | |

1-WG78-002-A

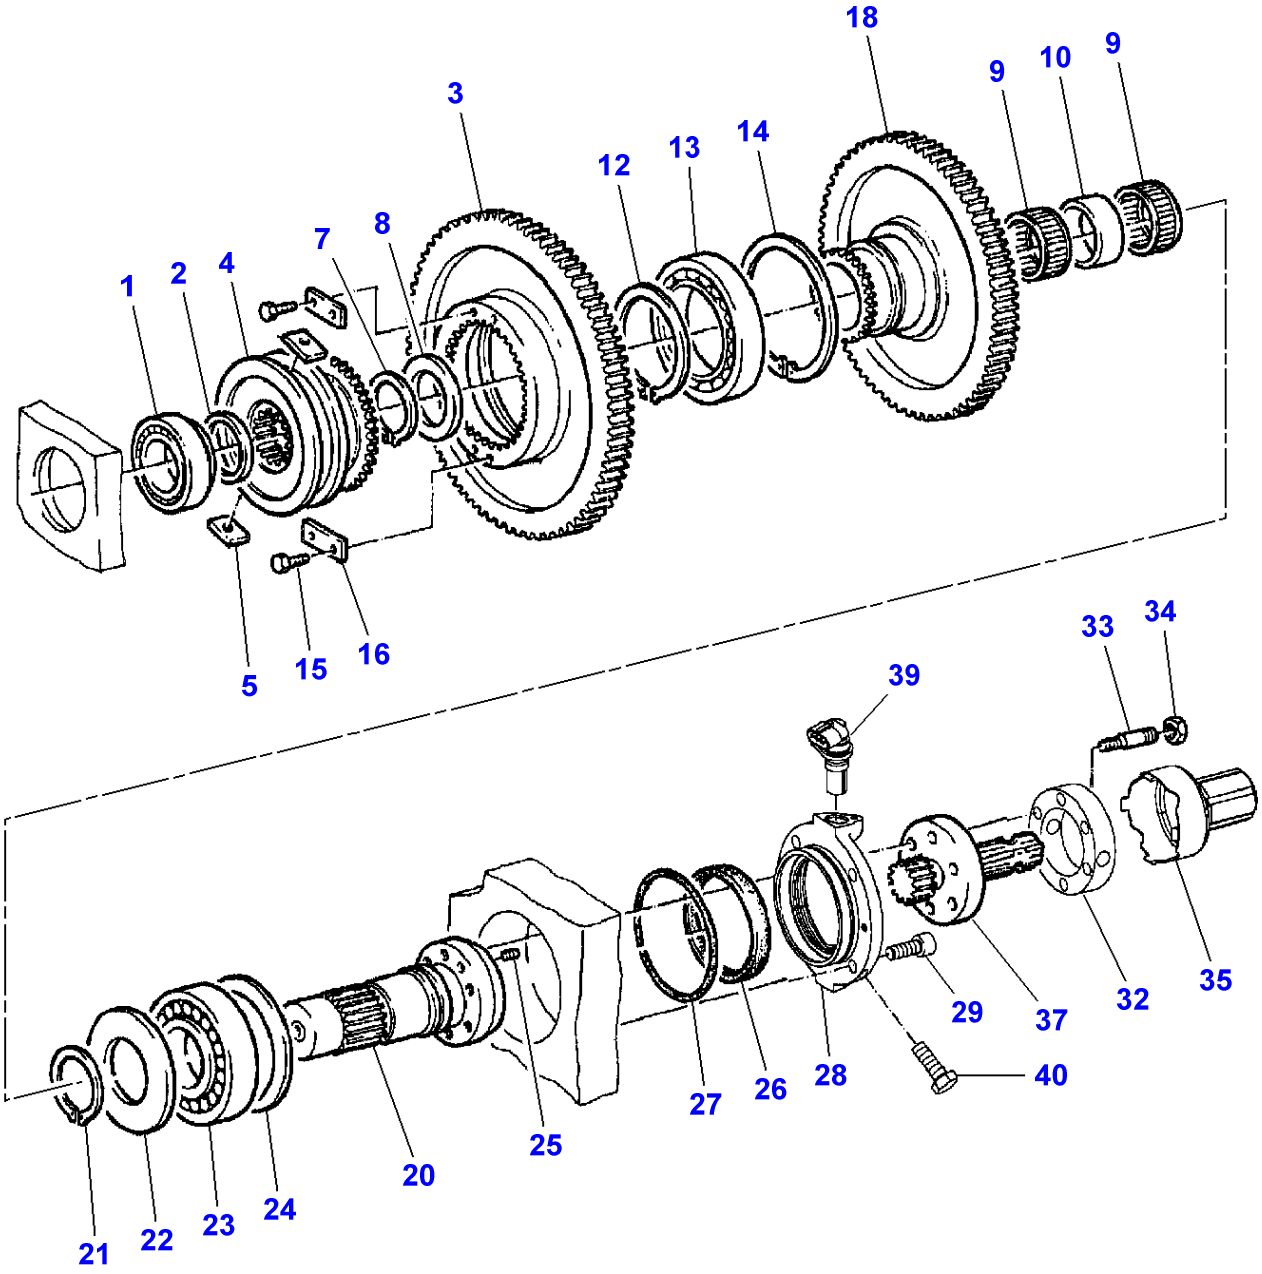
18
9
10
9
3
12
13
14
7
8
1
2
4
5
15
16
33
34
39
35
32
29
37
40
27
26
28
25
20
21
22
23
24


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X619.049.041.009 | 1 | Cup And Cone | |
| 2 | X534.566.246.000 | 1 | Backup Ring | Diameter 50 X 62 |
| 3 | 822.100.220.310 | 1 | Spur Gear | Not for USA 750-1000 TR/MM<br>Number of teeth/spines 74 |
| | 824.100.220.020 | 1 | Spur Gear | 540-1000 TR/MM<br>Number of teeth/spines 83 |
| 4 | 822.100.220.330 | 1 | Coupler | |
| 5 | 822.100.220.150 | 2 | Slide | |
| 7 | X530.006.146.000 | 1 | Circlip | Diameter 55 X 2 |
| 8 | 822.100.220.210 | 1 | Disc | |
| 9 | H312.100.222.020 | 2 | Needle Cage | |
| 10 | 822.100.220.220 | 1 | Spacer | |
| 12 | X530.007.946.000 | 1 | Circlip | Diameter 85 X 3 |
| 13 | X605.506.600.000 | 1 | Ball Bearing | |
| 14 | X530.325.046.000 | 1 | Circlip | Diameter 130 X 4 |
| 15 | X487.520.041.000 | 4 | Hex. Sock. Screw | M6 X 16 |
| 16 | 822.100.220.200 | 2 | Stop | |
| 18 | 822.100.220.300 | 1 | Spur Gear | Number of teeth/spines 65 |
| 20 | H822.100.220.010 | 1 | Shaft | |
| 21 | X530.009.100.000 | 1 | Circlip | Diameter 65 X 4 |
| 22 | 716.151.220.210 | 1 | Thrust Washer | |
| 23 | X619.049.341.009 | 1 | Cup And Cone | |
| 24 | X534.678.300.000 | X | Shim | Thickness 0,10 MM |
| | X534.678.400.000 | X | Shim | Thickness 0,15 MM |
| | X534.678.500.000 | X | Shim | Thickness 0,20 MM |
| | X534.678.600.000 | X | Shim | Thickness 0,30 MM |
| | X534.678.700.000 | X | Shim | Thickness 0,50 MM |
| 25 | X413.420.206.000 | 2 | Grub Screw | M6 X 16 |
| 26 | X550.162.800.000 | 1 | Oil Seal | 95 X 110 X 10 |
| 27 | X548.994.700.000 | 1 | O Ring | Diameter 114 X 3 |
| 28 | 926.150.220.200 | 1 | Cover | |
| 29 | X485.018.905.000 | 4 | Hex. Sock. Screw | M12 X 35 |
| 32 | 926.150.220.050 | 1 | Spacer | |
| 33 | X489.132.106.000 | 6 | Stud | M10 X 50 |
| 34 | X428.202.805.000 | 6 | Nut | M10 |
| 35 | 926.150.220.060 | 1 | Pto Guard | |
| 37 | 926.150.220.040 | 1 | Pto Shaft | Number of teeth/spines 21 |
| | 926.150.220.030 | 1 | Pto Shaft | [A]<br>Number of teeth/spines 6 |
| | 926.150.220.020 | 1 | Pto Shaft | Number of teeth/spines 20 |
| 39 | | 1 | Transmitter | See Page - Reference Number 090-0085/11 |
| 40 | X487.545.241.000 | 1 | Hex. Sock. Screw | M16 X 40 |

**FOOTNOTE [A]** OPTION ONLY

1-WG90-001-A

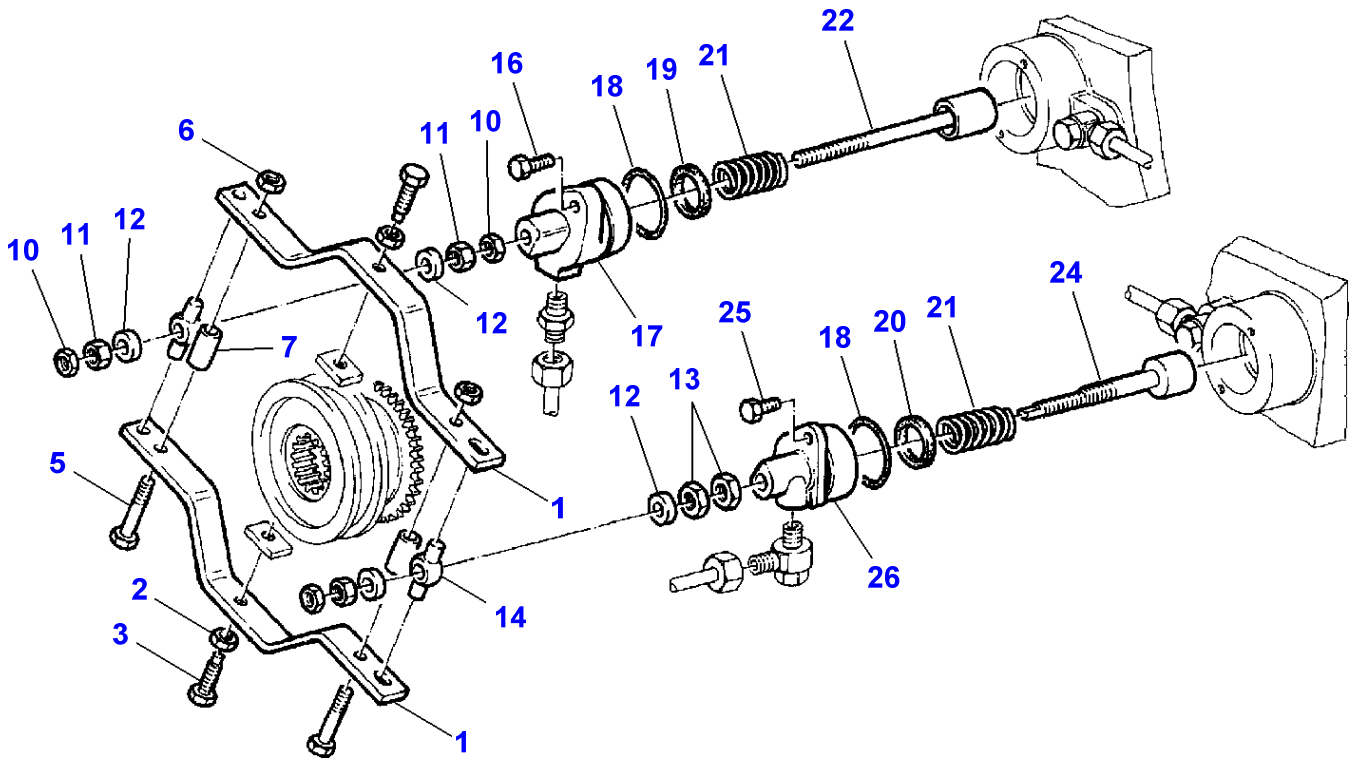


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 822.100.220.250 | 2 | Stirrup | |
| 2 | X428.203.203.000 | 2 | Nut | M12 |
| 3 | 822.100.220.390 | 2 | Stud | |
| 5 | X487.532.541.000 | 2 | Hex. Sock. Screw | M10 X 70 |
| 6 | X428.202.839.000 | 2 | Nut | M10 |
| 7 | 822.100.220.260 | 2 | Tube | |
| 10 | X428.803.240.000 | 3 | Nut | M12 |
| 11 | X428.203.203.000 | 3 | Nut | M12 |
| 12 | 822.100.220.470 | 4 | Disc | |
| 13 | X428.804.040.000 | 2 | Nut | M16 |
| 14 | 822.100.220.240 | 2 | Spacer | |
| 16 | X487.531.941.000 | 2 | Hex. Sock. Screw | M10 X 40 |
| 17 | 822.100.220.100 | 1 | Cylinder | |
| 18 | X548.926.801.000 | 2 | O Ring | Diameter 50 X 3 |
| 19 | X548.766.700.000 | 1 | Seal Section | |
| 20 | X548.767.000.000 | 1 | Seal Section | |
| 21 | 822.100.220.110 | 2 | Comp.Spring | |
| 22 | H822.100.220.080 | 1 | Piston | |
| 24 | 822.100.220.610 | 1 | Piston | |
| 25 | X487.531.505.000 | 2 | Hex. Sock. Screw | M10 X 25 |
| 26 | 822.100.220.620 | 1 | Cylinder | |


1-WG29-003-A

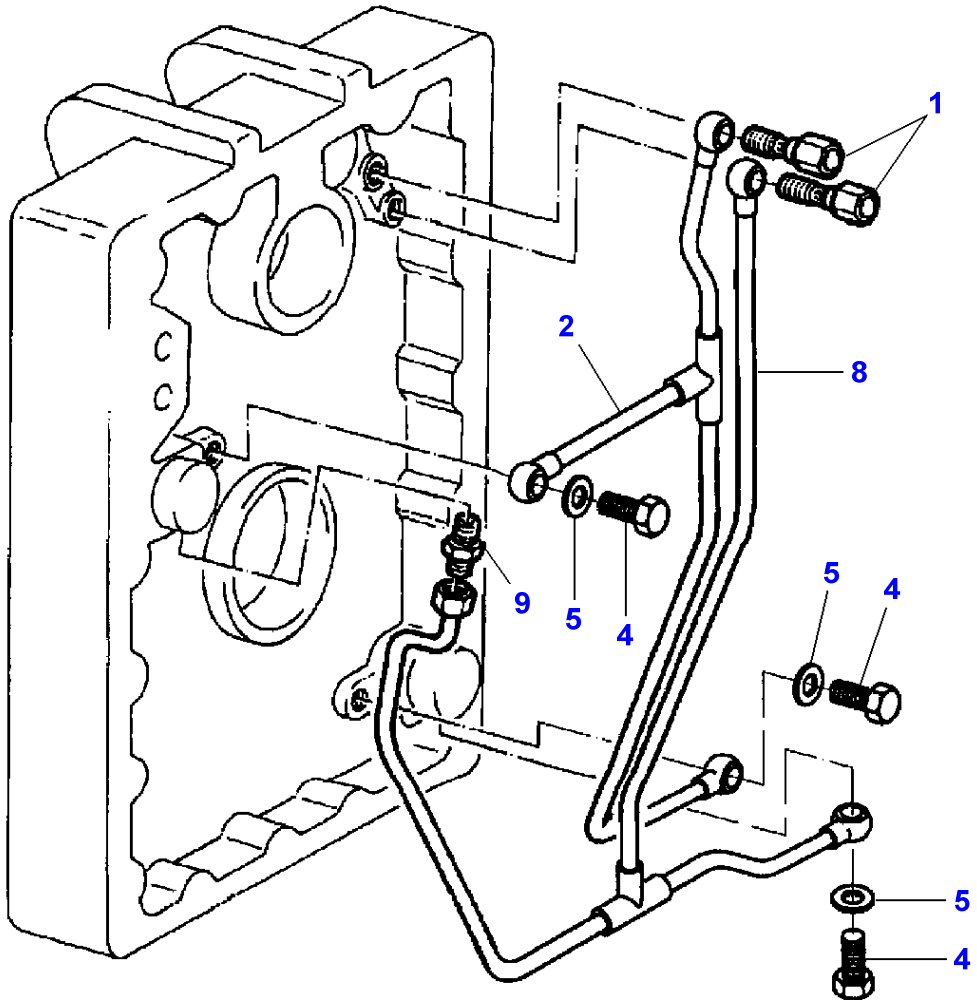

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 822.100.620.400 | 2 | Center Piece |
| 2 | H822.100.620.310 | 1 | Pipe |
| 4 | 822.100.620.460 | 3 | Union |
| 5 | X450.008.708.000 | 3 | Washer |
| 8 | H822.100.620.300 | 1 | Pipe |
| 9 | 822.100.620.450 | 1 | Thread. Part |

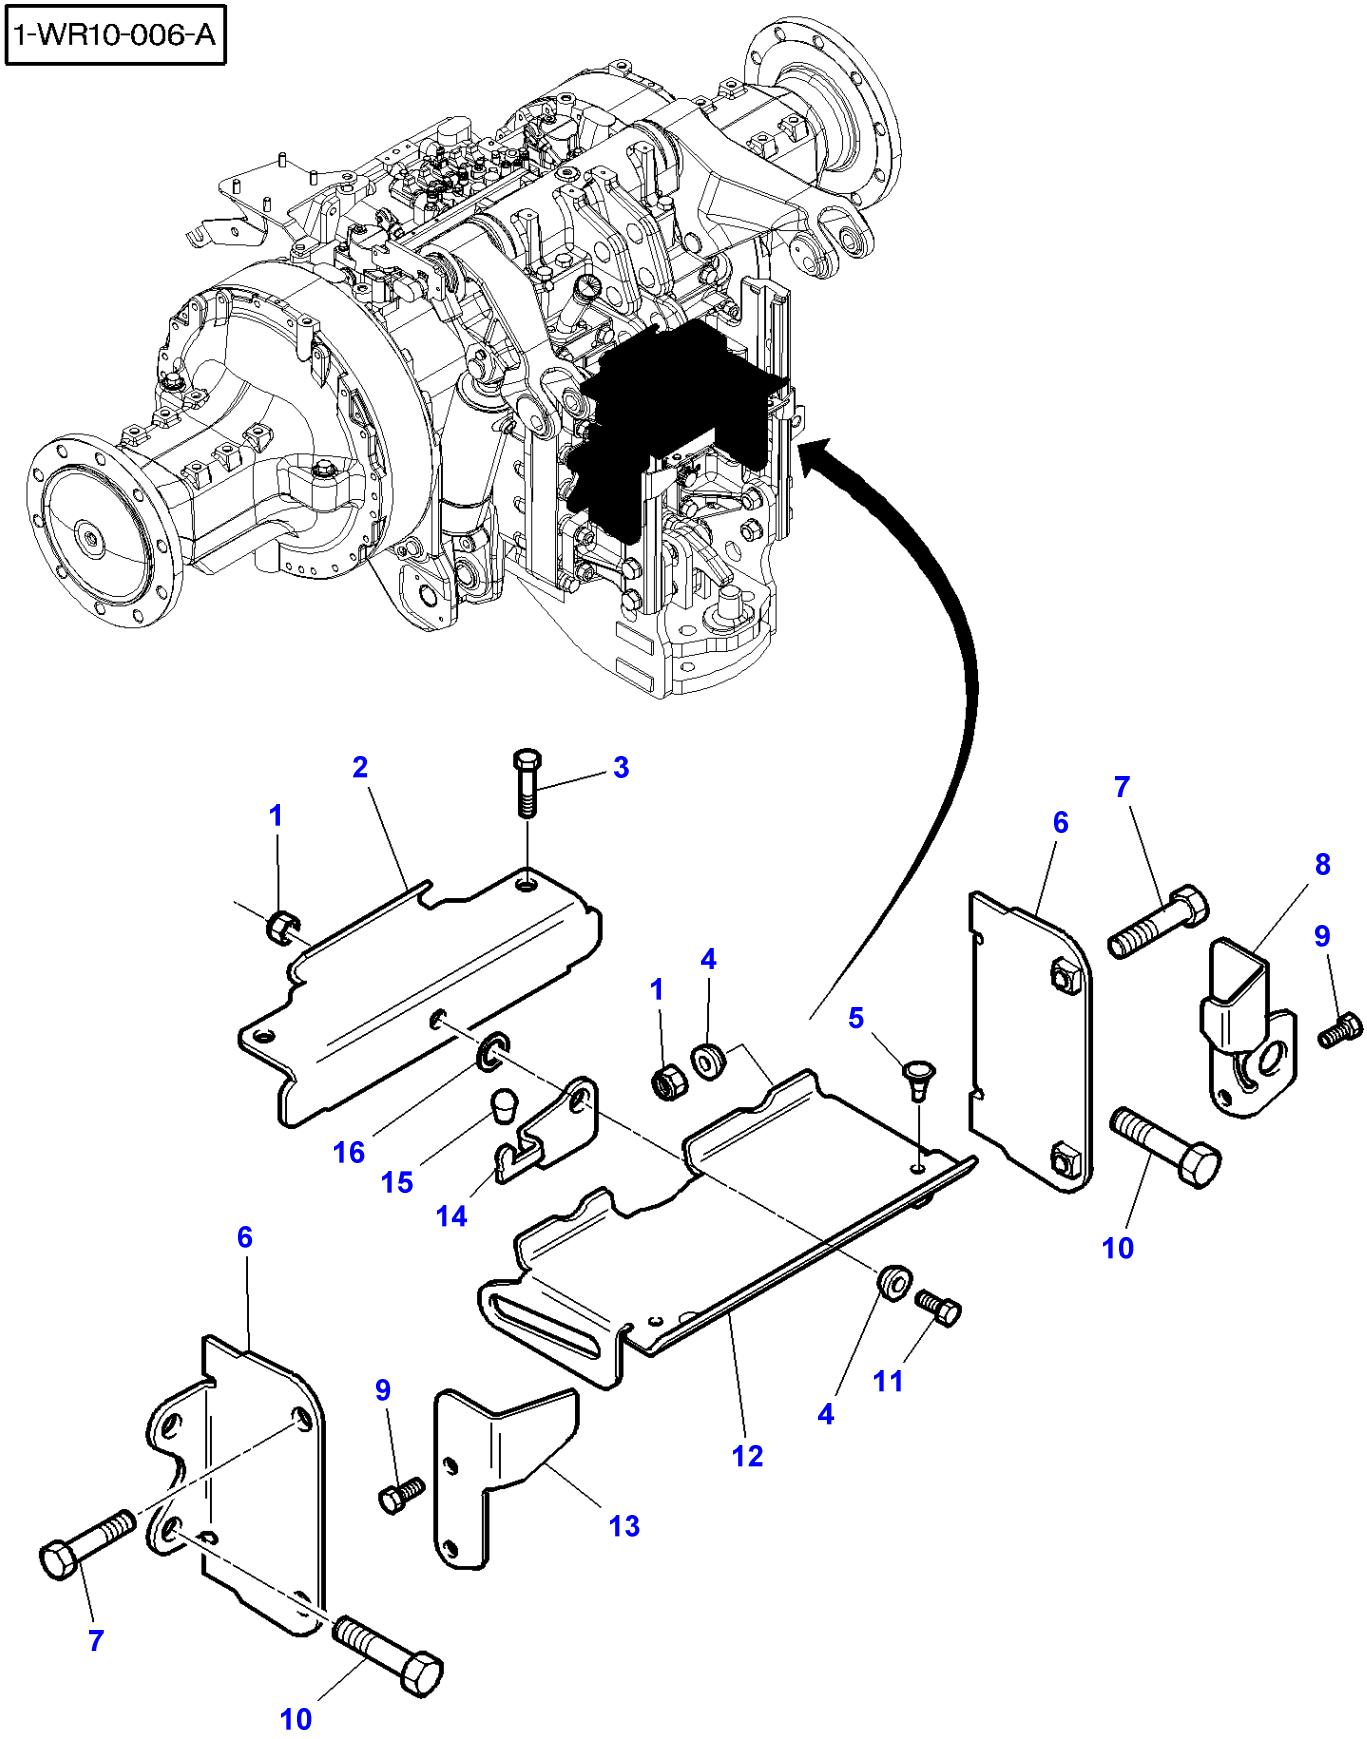

1-WR10-006-A
1
2
3
1
4
5
6
7
8
9
10
11
12
13
14
15
16
6
9
7
10
4

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 1440329X1 | 3 | Locknut | |
| 2 | H916.501.110.010 | 1 | Holder | |
| 3 | 339337X1 | 2 | Hex. Sock. Screw | M8 X 30 |
| 4 | 816.960.700.020 | 3 | Bush | |
| 5 | 205.900.163.040 | 2 | Plug | |
| 6 | H916.501.110.021 | 2 | Protector | |
| 7 | 3009494X1 | 2 | Hex. Sock. Screw | M10 X 35 |
| 8 | 916.501.110.060 | 1 | Stand | Right Hand |
| 9 | 339123X1 | 4 | Hex. Sock. Screw | M8 X 20 |
| 10 | 3011545X1 | 4 | Hex. Sock. Screw | M18 X 110 |
| 11 | 3009492X1 | 1 | Hex. Sock. Screw | M10 X 25 |
| 12 | 916.501.110.031 | 1 | Flap | |
| 13 | 916.501.110.050 | 1 | Stand | Left Hand |
| 14 | 916.501.110.040 | 1 | Lever | |
| 15 | X562.555.063.000 | 1 | Cap | |
| 16 | 311.200.020.050 | 1 | Disc | |

1-WR10-007-A

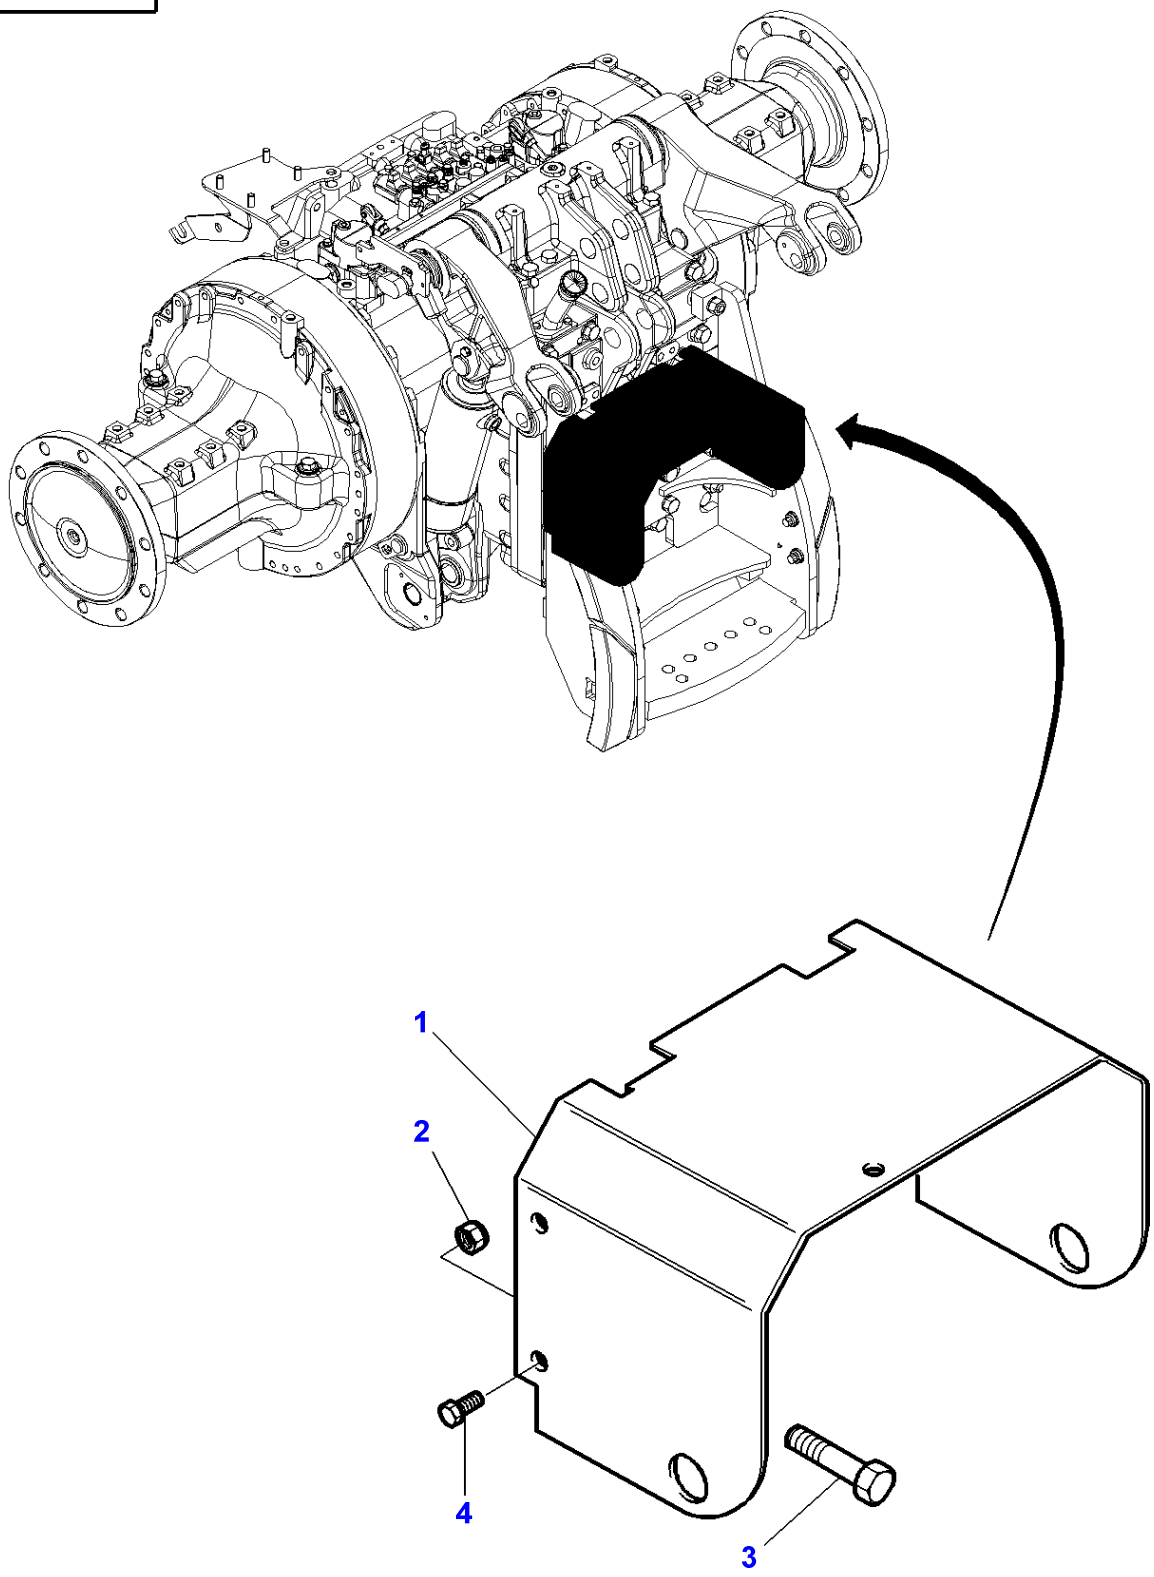


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 920501110010 | 1 | Pto Guard | |
| 2 | 339402X1 | 4 | Nut | |
| 3 | 3011545X1 | 4 | Hex. Sock. Screw | M18 X 110 |
| 4 | 3009494X1 | 4 | Hex. Sock. Screw | M10 X 35 |

1-WR10-008-A

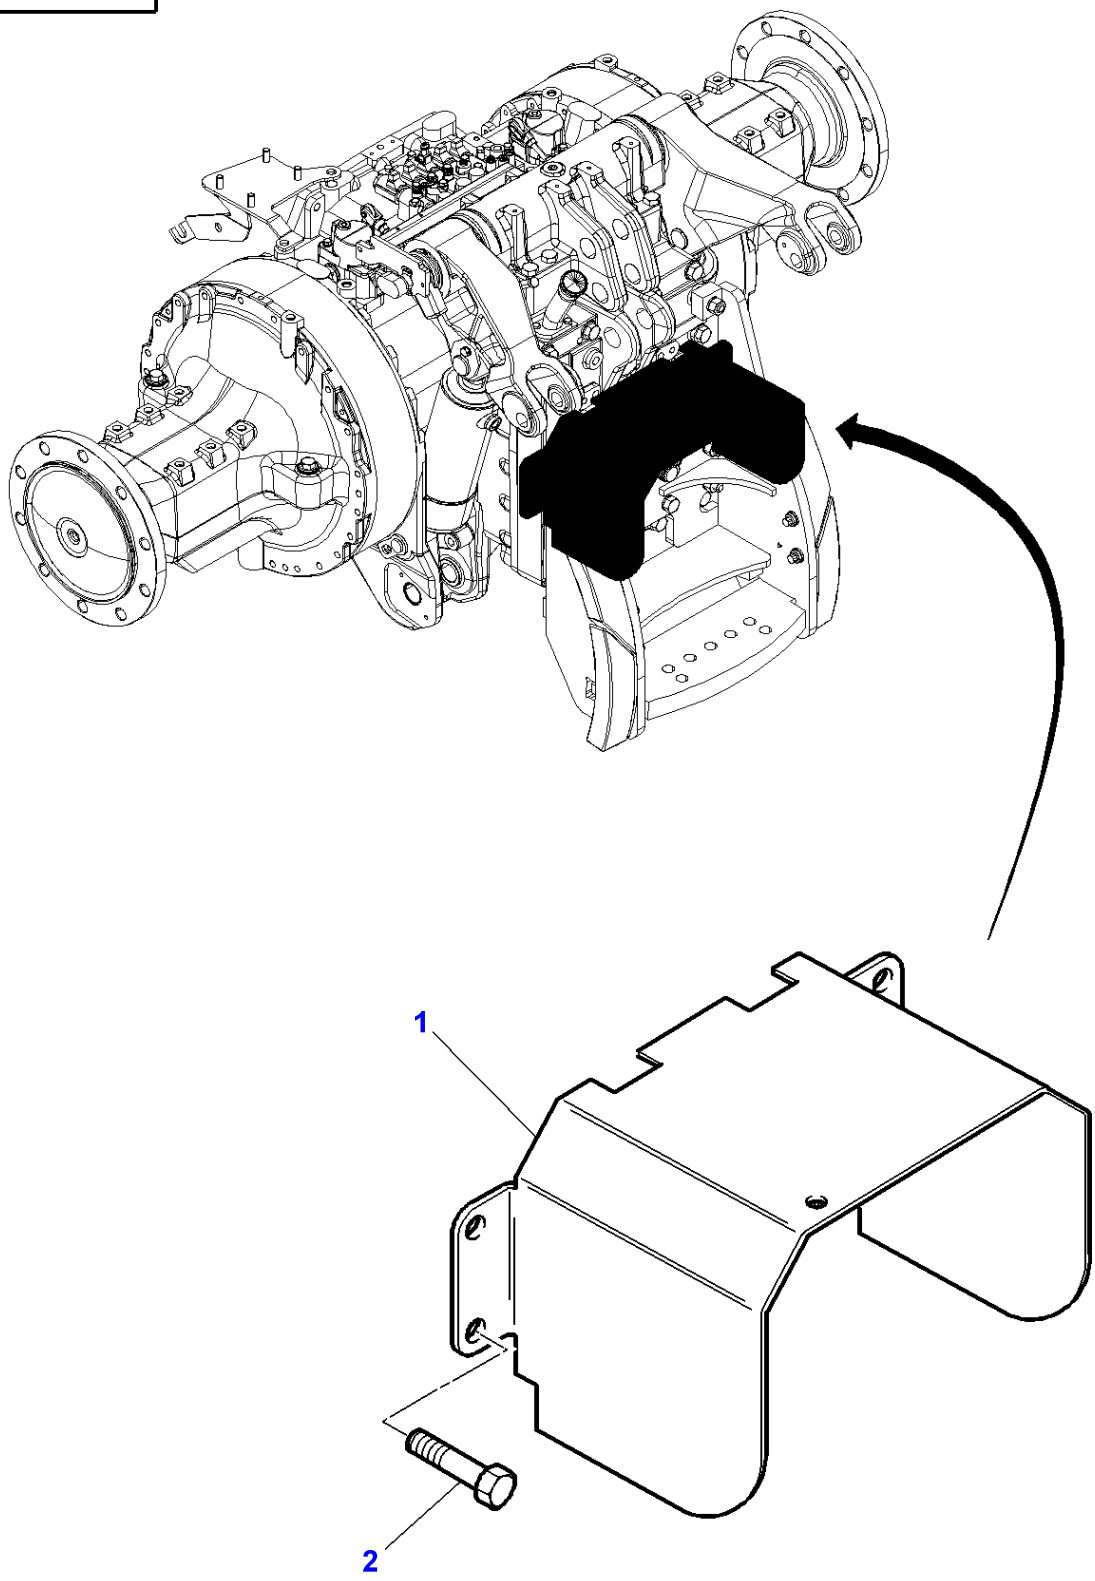


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276969M1 | 1 | Cowl | |
| 2 | 3011545X1 | 4 | Hex. Sock. Screw | M18 X 110 |

1-WX15-011-B

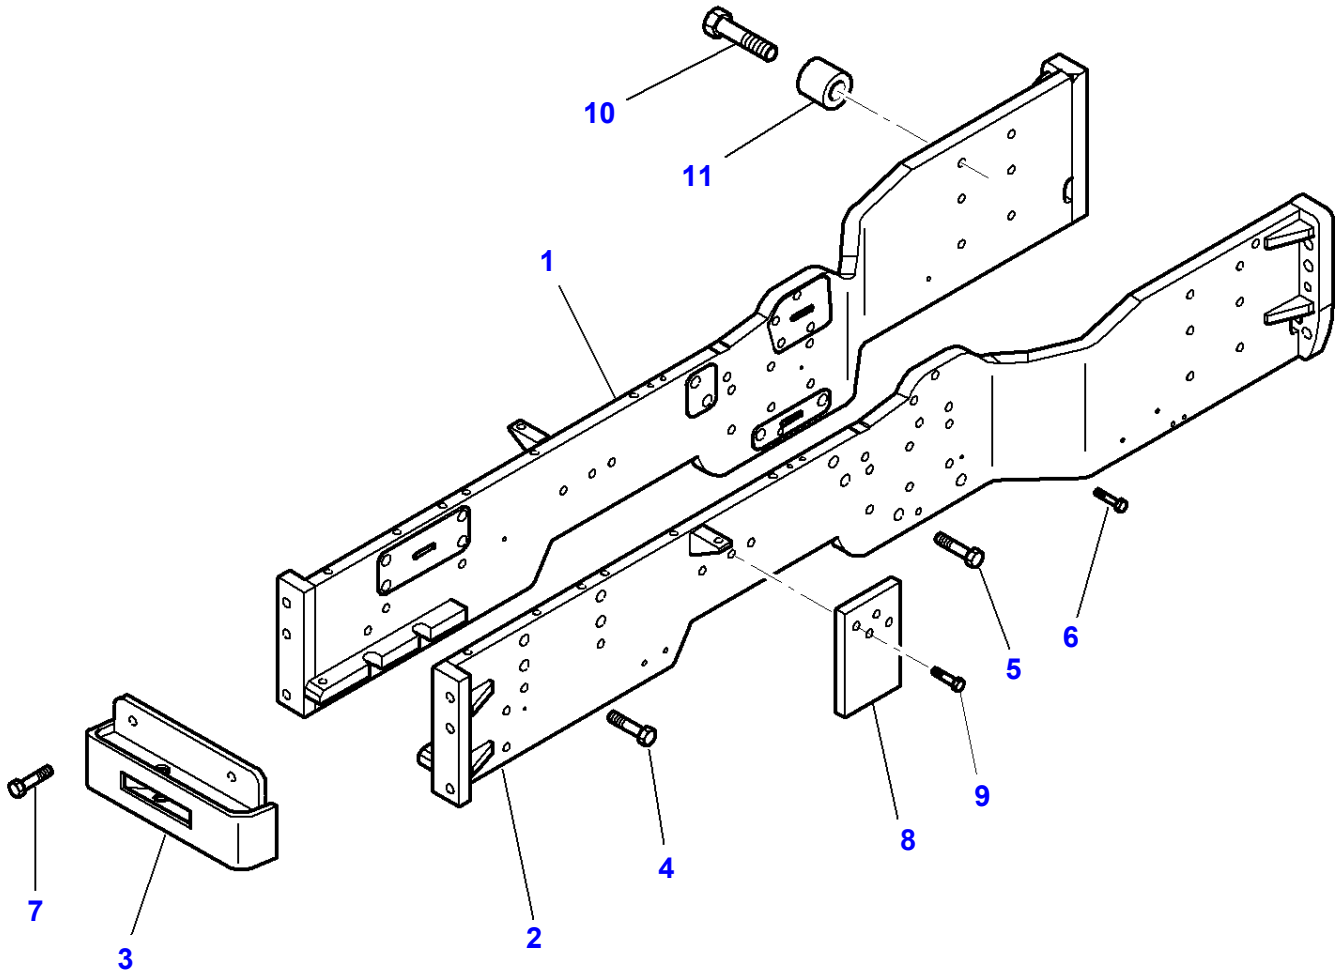


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4278257M93 | 1 | Runner | Right Hand |
| 2 | 4278256M93 | 1 | Runner | Left Hand |
| 3 | 3781211M93 | 1 | Support | |
| 4 | 3581527M1 | 12 | Hex. Sock. Screw | [A] M20 X 75 |
| | 3581527M1 | 12 | Hex. Sock. Screw | [B] M20 X 75 |
| | 3010966X1 | 6 | Hex. Sock. Screw | [C] M20 X 75 |
| | 3010976X1 | 2 | Screw | [C] M20 X 75 |
| | 391914X1 | 4 | Hex. Sock. Screw | [C] M20 X 110 |
| 5 | 3010915X1 | 4 | Hex. Sock. Screw | M20 X 70 |
| 6 | 3019852X1 | 8 | Hex. Sock. Screw | M12 X 55 |
| 7 | 3384129M1 | 4 | Hex. Sock. Screw | M20 X 55 |
| 8 | 5015565M1 | 2 | Plate | |
| 9 | 3010894X1 | 4 | Hex. Sock. Screw | M20 X 50 |
| | 3010915X1 | 4 | Hex. Sock. Screw | [C] M20 X 70 |
| 10 | 3001968X1 | 1 | Hex. Sock. Screw | M20 X 60 |
| 11 | 3011675X1 | 1 | Spacer | Diameter 21-28.5 X 30 |

**FOOTNOTE [A]** WITHOUT FRONT LINKAGE
**FOOTNOTE [B]** WITH FRONT LINKAGE 35000N
**FOOTNOTE [C]** WITH FRONT LINKAGE 50000N

1-WX15-009-A

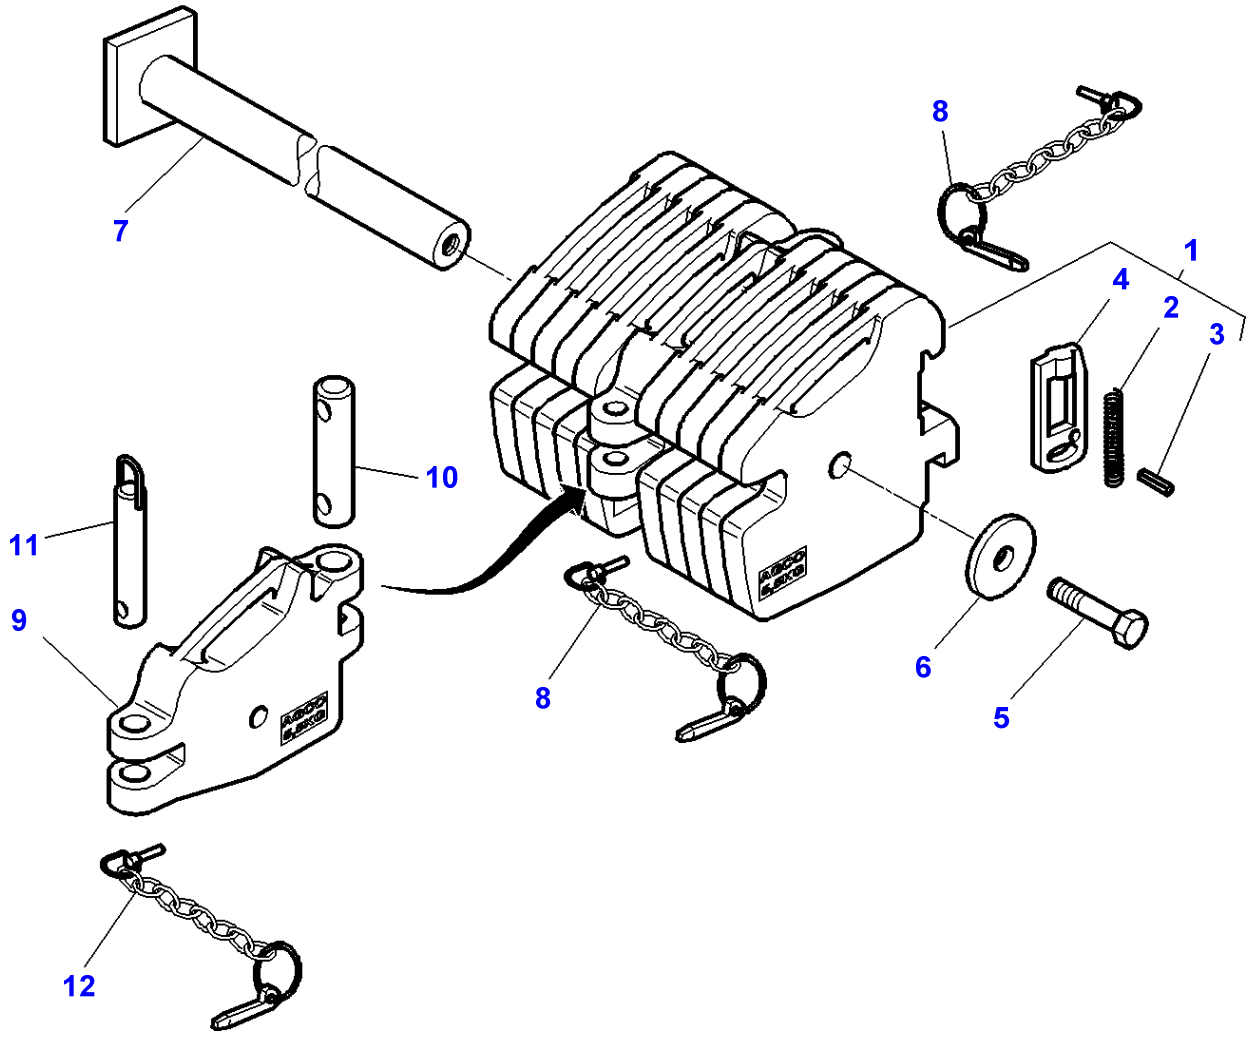



https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3784628M12 | X | Weight | Thickness 0,45 MM<br>55KG |
| 2 | 1680172M1 | 1 | Spring | (1) |
| 3 | 339080X1 | 1 | Roll Pin | (1)<br>Diameter 6 X 24 |
| 4 | 3581636M1 | 1 | Hasp | (1) |
| 5 | 3009132X1 | 1 | Hex. Sock. Screw | M16 X 50 |
| | 390190X1 | 1 | Hex. Sock. Screw | M16 X 140 |
| 6 | 3385963M1 | 1 | Washer | Diameter 17,2-68 X 6 MM |
| 7 | 3788795M1 | 1 | Bridle | Length 520 MM |
| | 3619728M1 | 1 | Bridle | Length 343 MM |
| 8 | 3382812M91 | 2 | Pin | |
| 9 | 3784591M2 | 1 | Weight | |
| 10 | 3782456M1 | 1 | Pin Hitch | Diameter 30<br>Length 245 MM |
| 11 | **3790349M92** | 1 | Pin Hitch | Diameter 30<br>Length 191 MM |
| 12 | 3382812M91 | 1 | Pin | |

1-WX15-003-A

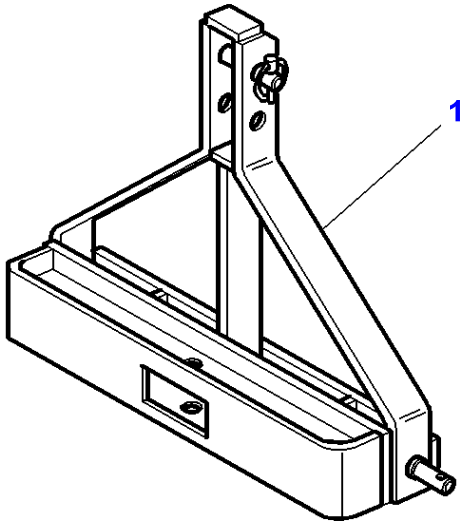


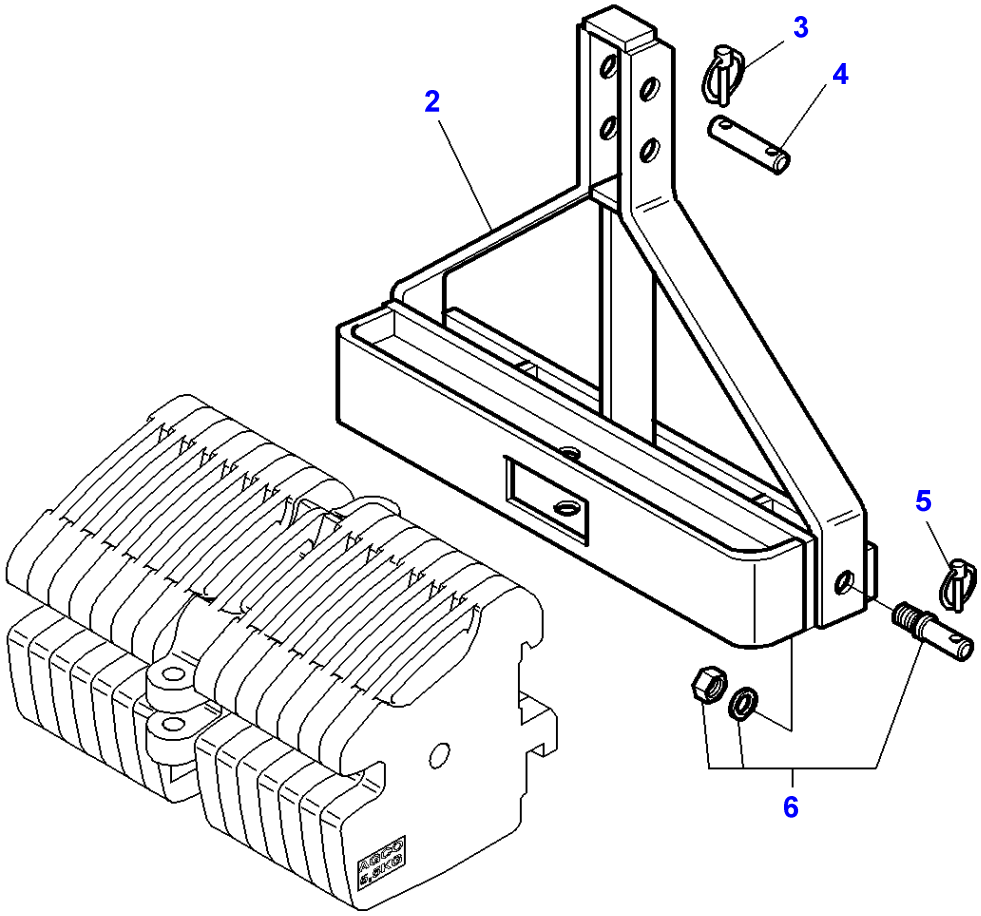https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786462M91 | 1 | Support | |
| 2 | | 1 | Support | (1)<br>Not serviced,order REF. 1 |
| 3 | 3782684M1 | 1 | Clip | (1) |
| 4 | 3903839M1 | 1 | Clevis Pin | (1) |
| 5 | 3903841M1 | 1 | Clip | (1) |
| 6 | 3903840M1 | 1 | Piton | (1) |



1-WX15-004-B
1
2
3
4
5
6
7
8
9
10
11
600KG

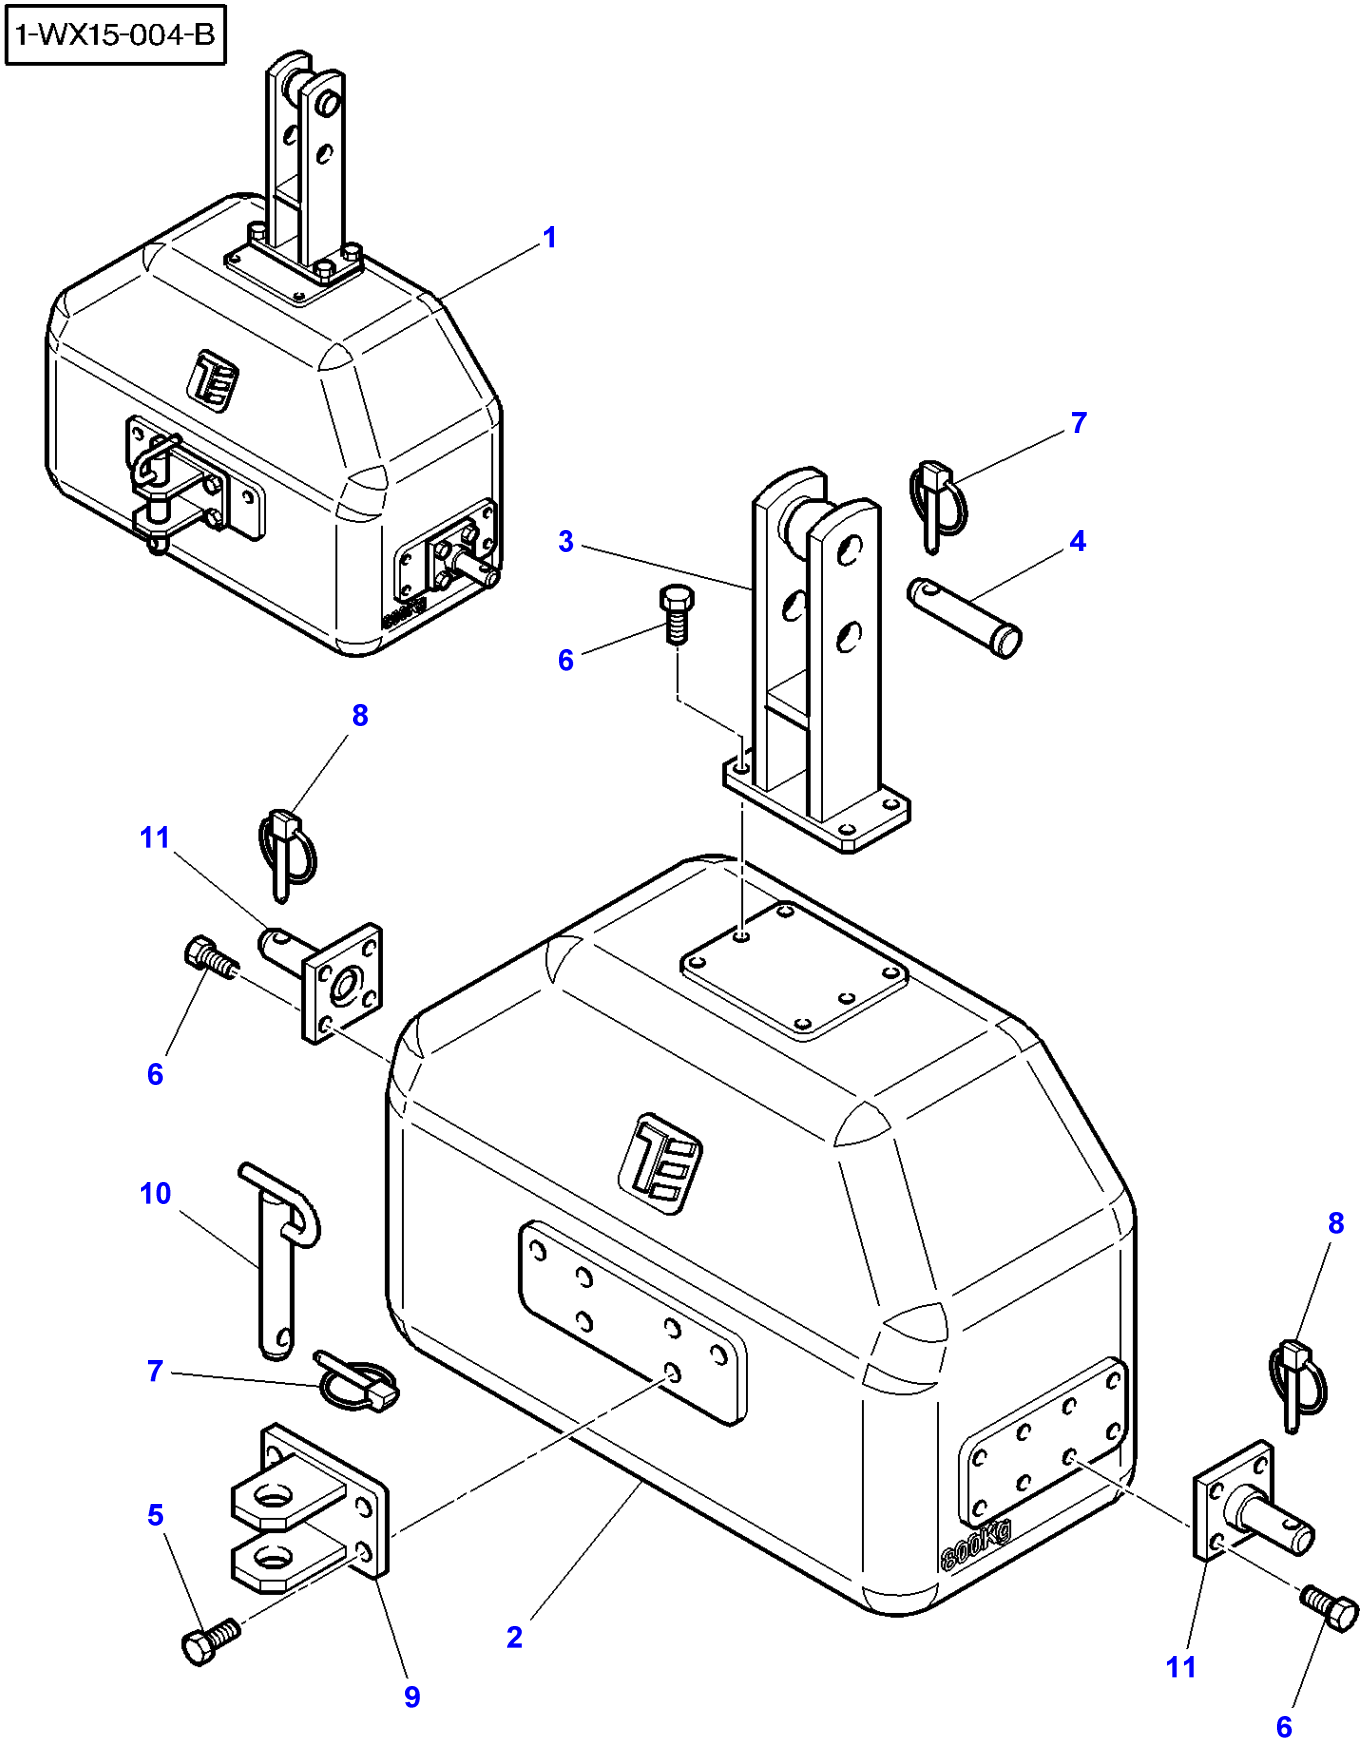https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271480M91 | 1 | Weight | 800KG |
| 2 | | 1 | Weight | (1)<br>Not serviced,order REF. 1 |
| 3 | 3907226M1 | 1 | Support | (1) |
| 4 | 3903839M1 | 1 | Clevis Pin | (1) |
| 5 | 391269X1 | 4 | Hex. Sock. Screw | (1)<br>M16 X 30 |
| 6 | 3011611X1 | 12 | Hex. Sock. Screw | (1)<br>M16 X 45 |
| 7 | 3782684M1 | 2 | Clip | (1)<br>Diameter 8 MM |
| 8 | 3903841M1 | 2 | Clip | (1)<br>Diameter 11 MM |
| 9 | 3907227M1 | 1 | Clevis | (1) |
| 10 | 3900263M91 | 1 | Pin | (1) |
| 11 | 3907225M1 | 2 | Piton | (1) |


1-WJ07-008-A

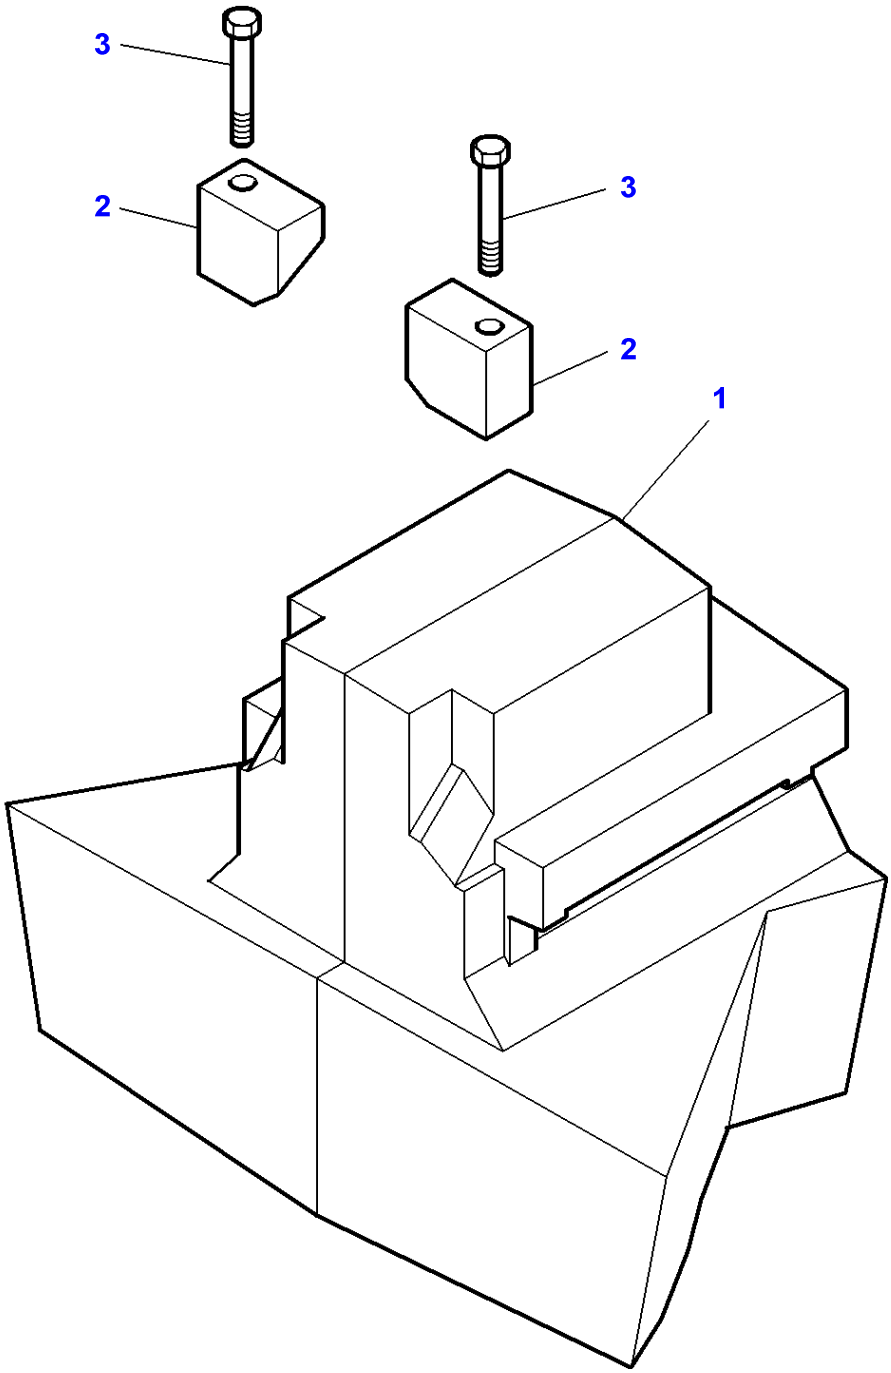

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3779507M6 | 1 | Weight | 500 KG |
| 2 | 3779514M2 | 1 | Bridle | Right Hand |
| | 3779515M2 | 1 | Bridle | Left Hand |
| 3 | 3011422X1 | 2 | Screw | M16 X 175 |

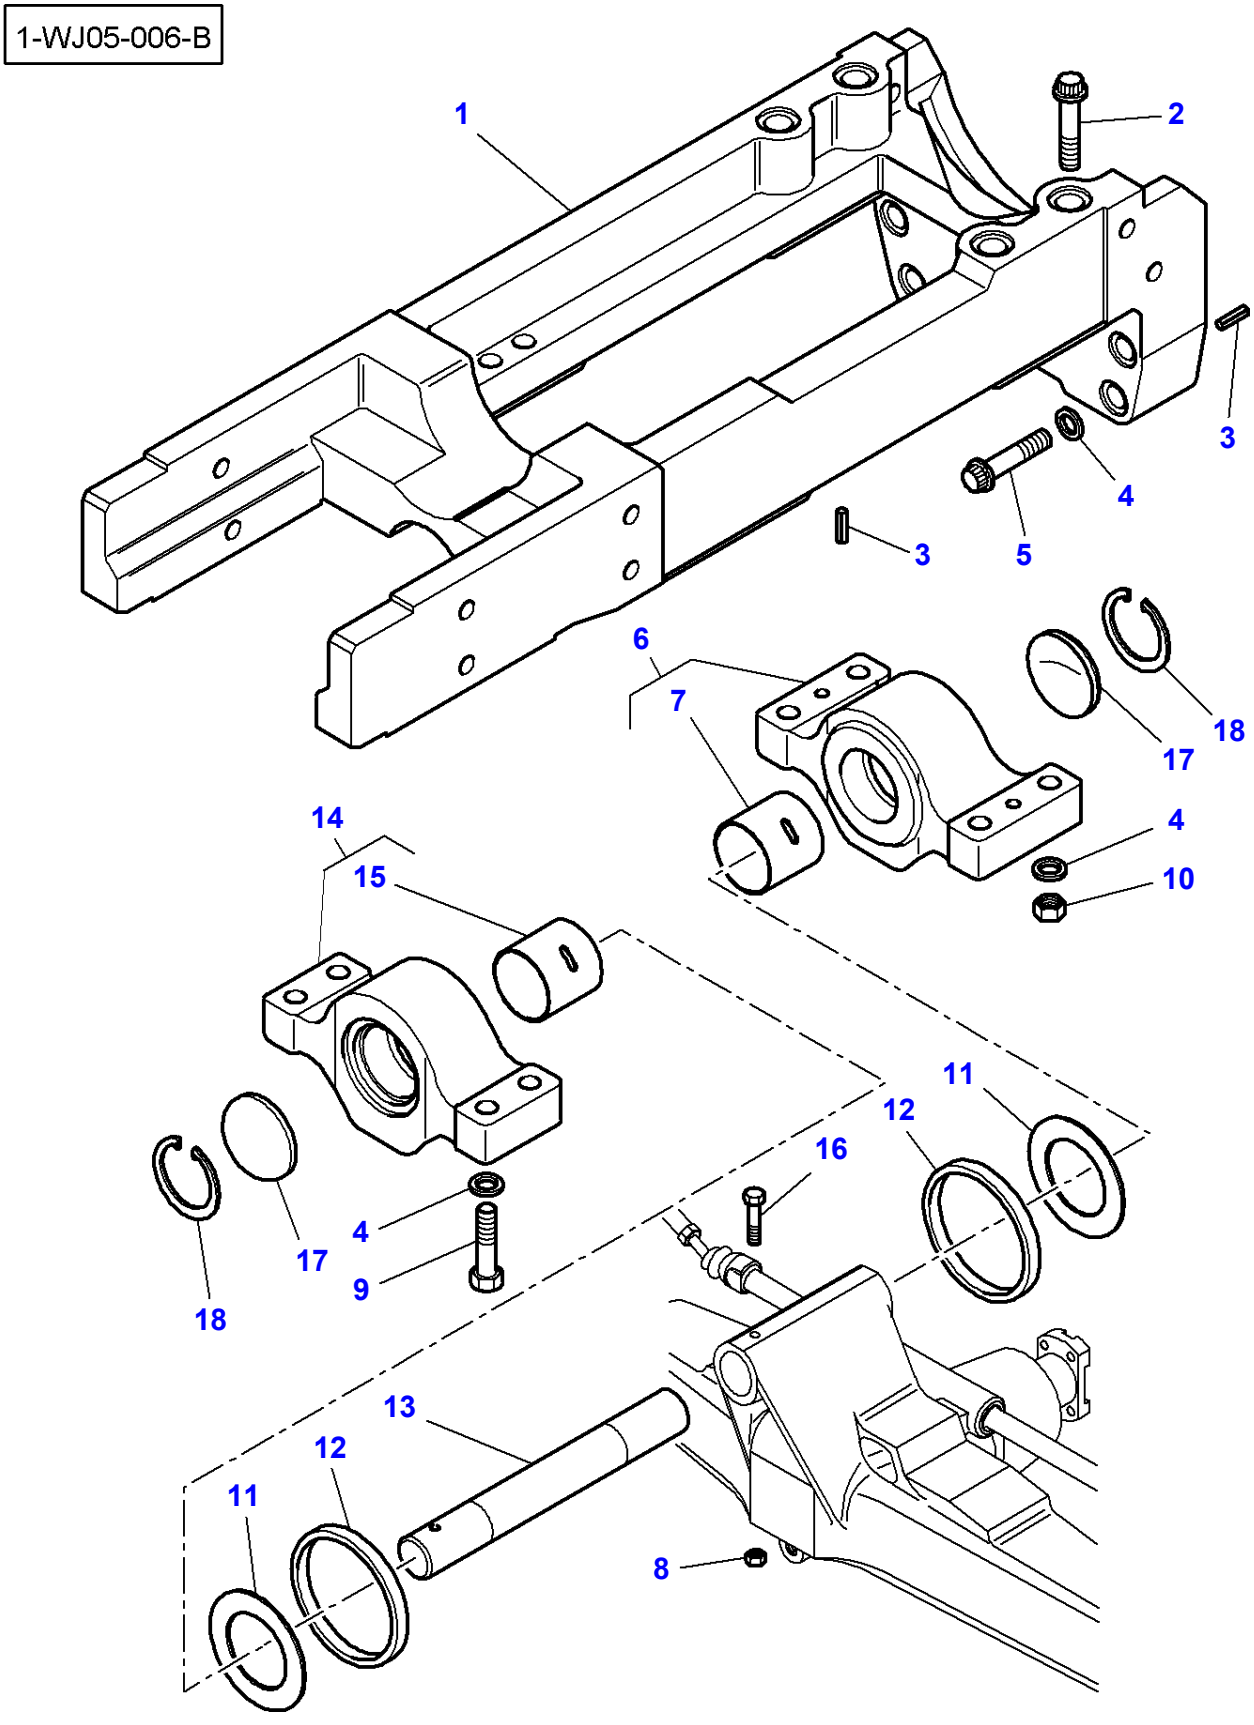

1-WJ05-006-B
1
2
3
4
5
3
6
7
18
17
14
15
4
10
11
12
16
4
17
9
18
13
12
11
8

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3780872M3 | 1 | Axle Holder | |
| 2 | 3010850X1 | 1 | Screw | M20 X 170 |
| | 3010852X1 | 3 | Screw Metric | M20 X 200 |
| 3 | 372081X1 | 4 | Locator | |
| 4 | 385365X1 | 12 | Washer | |
| 5 | 3010557X1 | 4 | Screw Metric | M20 X 100 |
| 6 | 3787719M11 | 1 | Bearing Carrier | |
| 7 | 3787722M2 | 1 | Bush | (6)<br>Diameter 70 MM |
| 8 | 339034X1 | 1 | Nut | M16 |
| 9 | 3010563X1 | 4 | Screw | M20 X 90 |
| 10 | 3009746X1 | 4 | Nut | M20 |
| 11 | 3785075M1 | 2 | Thrust Washer | Diameter 70-115 X 4 |
| 12 | 3788079M1 | 2 | Gasket | Diameter 120 X 8 |
| 13 | 3787723M1 | 1 | Clevis Pin | |
| 14 | 3787717M11 | 1 | Bearing Carrier | |
| 15 | 3787722M2 | 1 | Bush | (14) |
| 16 | 3384132M1 | 1 | Hex. Sock. Screw | M16 X 150 |
| 17 | 391549X1 | 2 | Plug | |
| 18 | 339437X1 | 2 | Circlip | |


1-WK12-003-B

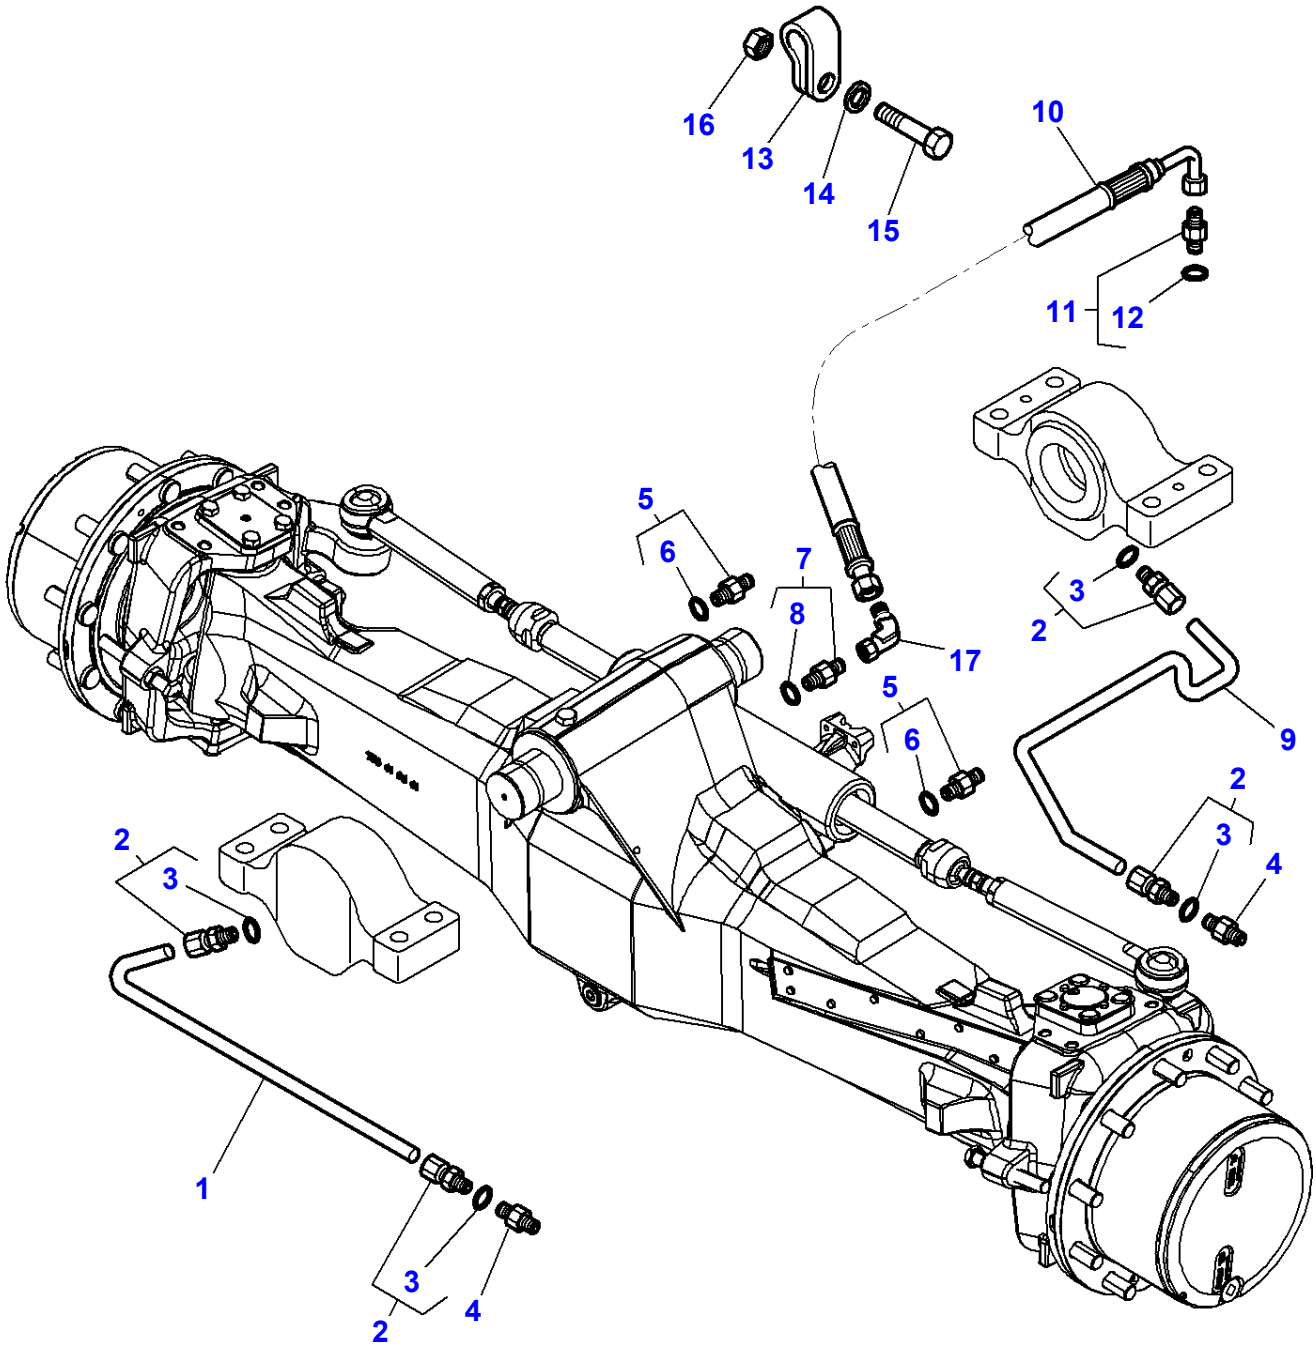

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3788783M1 | 1 | Tube | |
| 2 | 3002070X91 | 4 | Connector | |
| 3 | 338760X1 | 1 | O Ring | (2) |
| 4 | 339608X1 | 2 | Grease Nipple | M10 |
| 5 | 3011246X91 | 2 | Union | |
| 6 | 3015163X1 | 1 | O Ring | (5) |
| 7 | 338795X91 | 1 | Union | M14 X 1,5 |
| 8 | 338762X1 | 1 | Seal | (7) |
| 9 | 3788784M1 | 1 | Tube | |
| 10 | 4276146M1 | 1 | Hydr. Hose | Length 3700MM |
| 11 | 3011619X91 | 1 | Union | |
| 12 | 338762X1 | 1 | Seal | (11) |
| 13 | 3387756M1 | 1 | Clip | |
| 14 | 3714197M1 | 1 | Washer | |
| 15 | 339337X1 | 1 | Hex. Sock. Screw | M8 X 30 |
| 16 | 339169X1 | 1 | Nut | M8 |
| 17 | 4280507M1 | 1 | Union | From Serial or Engine Number |

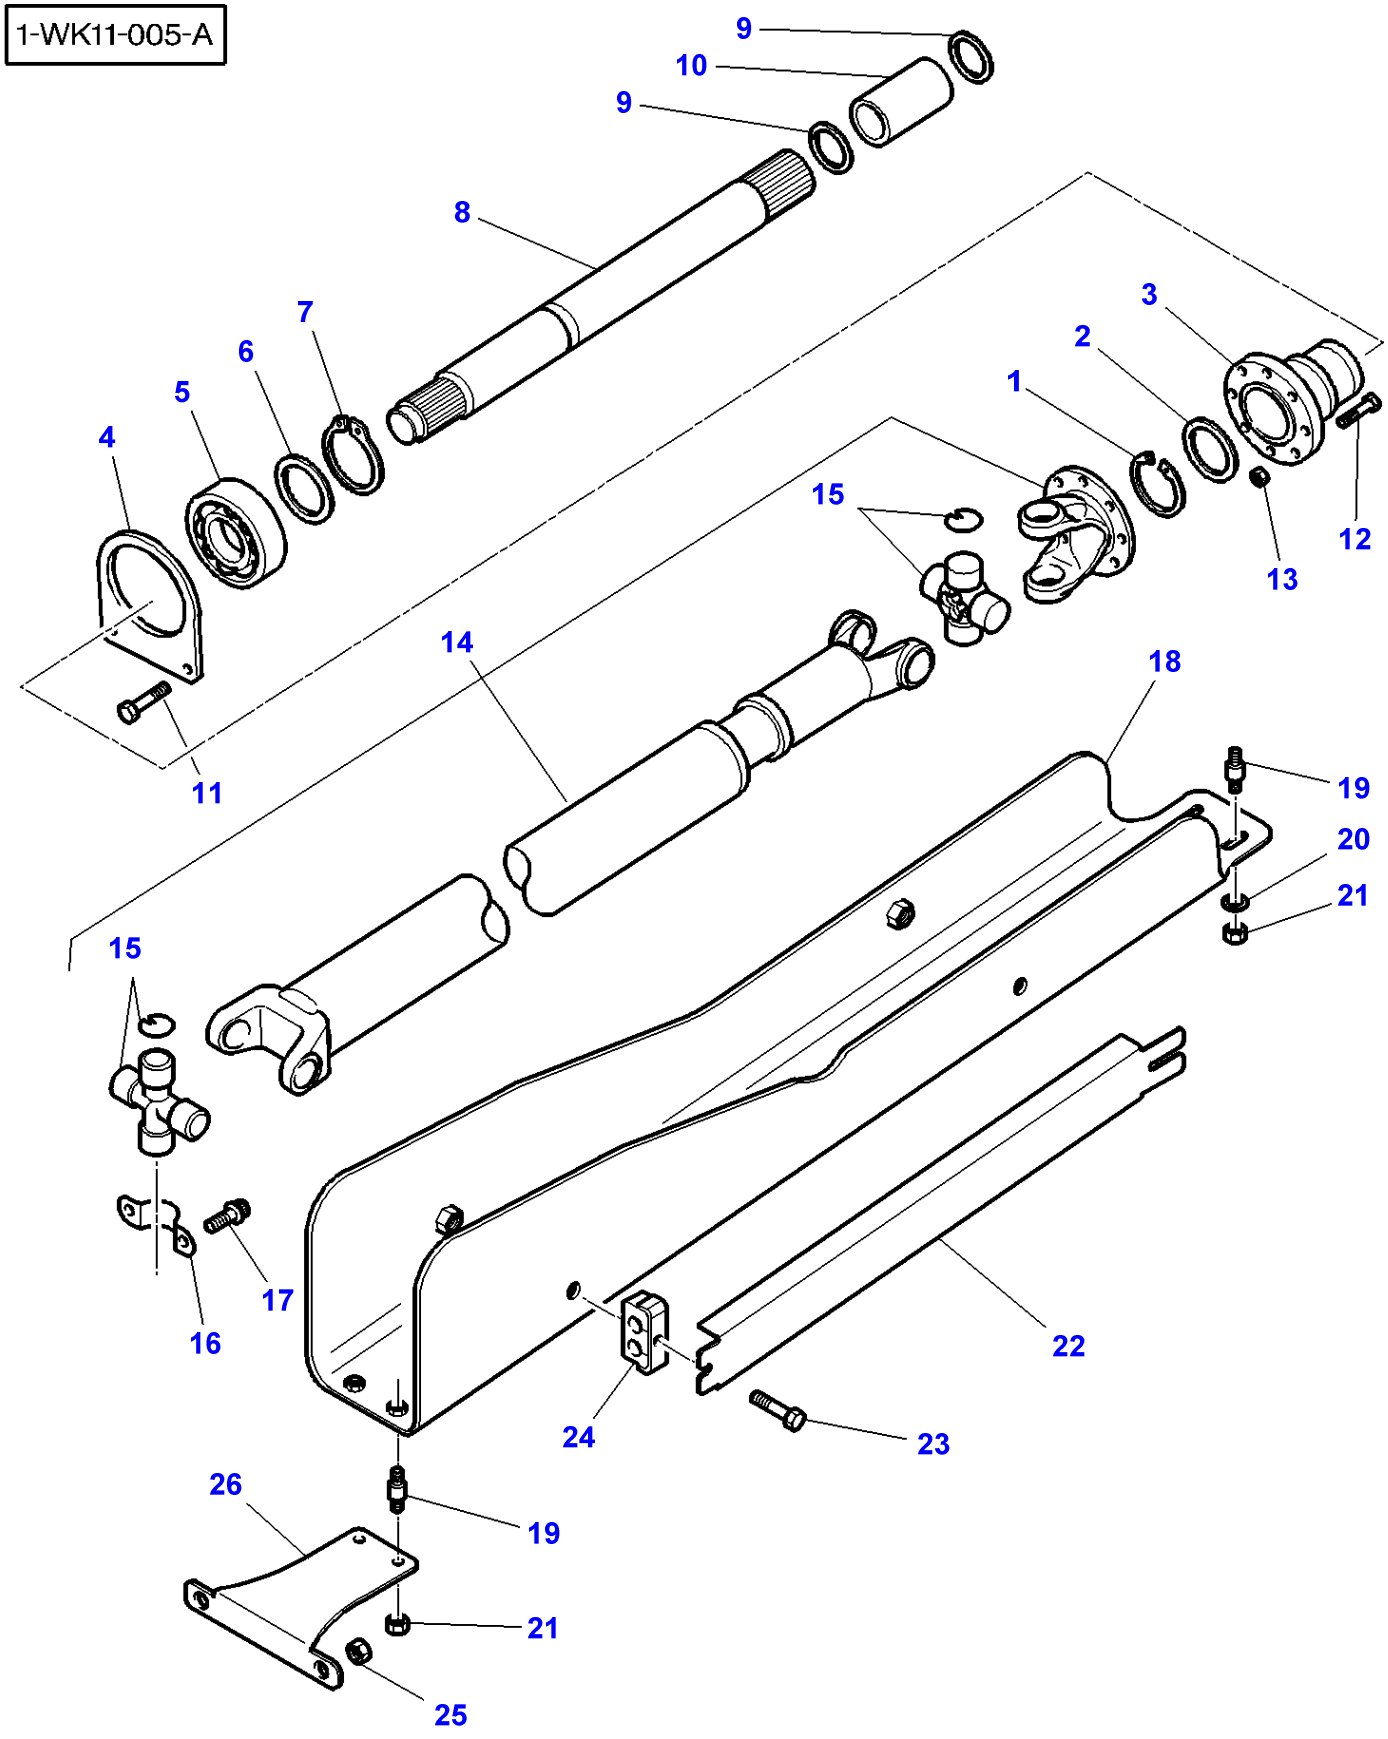

1-WK11-005-A
9
10
9
8
7
6
5
4
3
2
1
15
12
13
14
18
19
20
21
11
15
17
16
22
24
23
26
19
21
25

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 1441786X1 | 1 | Circlip | |
| 2 | 822.100.320.060 | 1 | Ring | |
| 3 | 3788813M1 | 1 | Sleeve | |
| 4 | 3789032M1 | 1 | Bridle | |
| 5 | 339602X1 | 1 | Bear. 6212 2rs | |
| 6 | X534.539.346.000 | 1 | Backup Ring | |
| 7 | 339605X1 | 1 | Circlip | Diameter 57MM |
| 8 | 903.100.320.010 | 1 | Shaft | Length 551,5MM |
| 9 | **3008359X1** | 2 | O Ring | Diameter 36,5 X 3 |
| 10 | 916.101.320.100 | 1 | Bush | |
| 11 | 392892X1 | 2 | Hex. Sock. Screw | M10 X 35 |
| 12 | 3010749X1 | 8 | Screw Metric | M10 X 30 |
| 13 | 1441932X1 | 8 | Nut Metric | M10 |
| 14 | 4271815M91 | 1 | Universal Joint | |
| 15 | 3907427M91 | 2 | Crosspiece | (14) |
| 16 | 4277510M1 | 2 | Bridle | |
| 17 | 4277509M1 | 4 | Screw | |
| 18 | 4273655M1 | 1 | Cowl | |
| 19 | 658081M2 | 4 | Damper | |
| 20 | 391039X1 | 2 | Washer Metric | |
| 21 | 394367X1 | 4 | Locknut | M8 |
| 22 | 3789475M1 | 2 | Cowl | |
| 23 | 339010X1 | 4 | Hex. Sock. Screw | M8 X 40 |
| 24 | 3789441M1 | 4 | Bridle | |
| 25 | 3010349X1 | 2 | Nut | M14 |
| 26 | 4277717M1 | 1 | Support | |

1-WK15-011-A

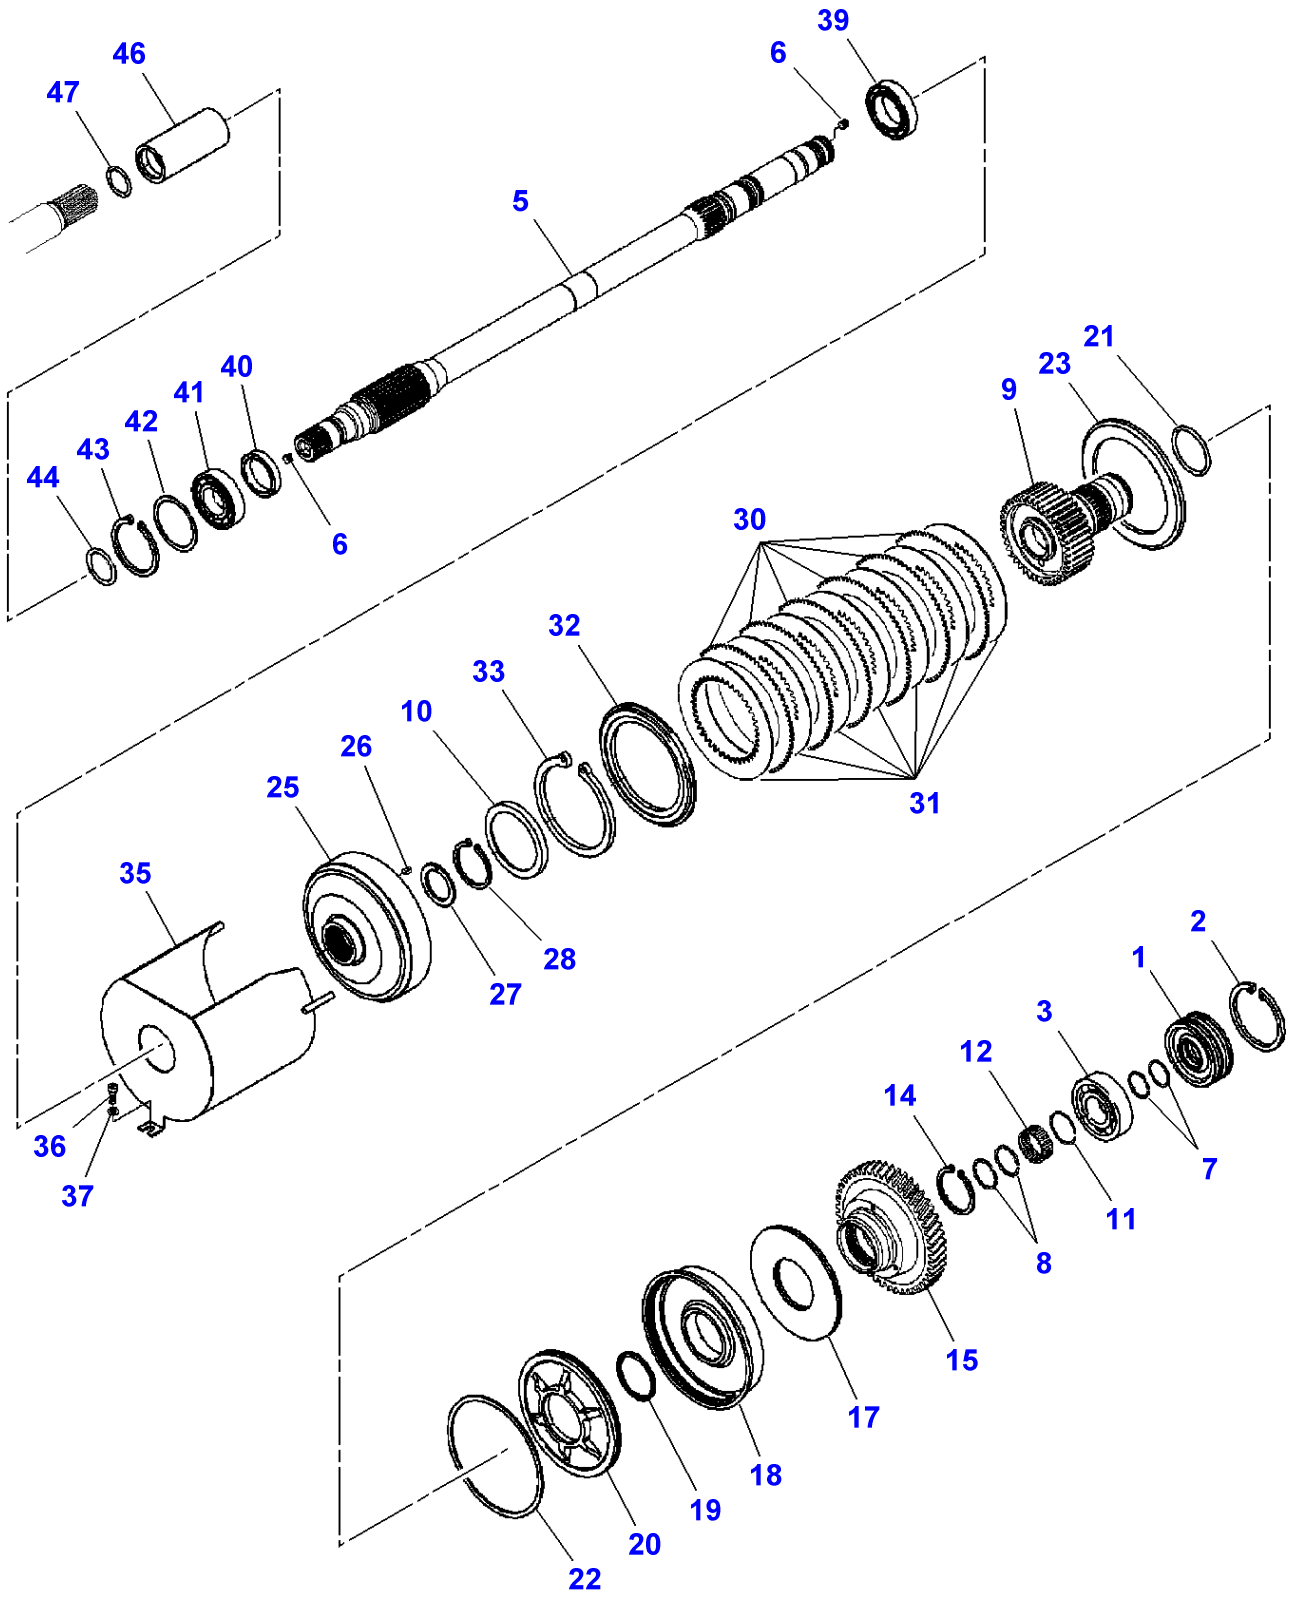
39
6
46
47
5
40
41
42
43
44
6
21
23
9
30
32
33
10
26
25
31
35
28
27
36
37
2
1
3
12
14
7
11
8
15
17
18
19
20
22


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Front Axle 4 Wheel Drive - Clutch Page 060-0045

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 916.100.320.080 | 1 | Cover | |
| 2 | X530.108.346.000 | 1 | Circlip | |
| 3 | X620.414.500.001 | 1 | Bearing Roller | |
| 5 | 916.100.320.070 | 1 | Shaft | |
| 6 | X412.823.006.000 | 2 | Grub Screw | M10 X 10 |
| 7 | X560.703.600.000 | 2 | Plain Compr.Ring | |
| 8 | X560.703.700.000 | 2 | Plain Compr.Ring | |
| 9 | 916.101.320.151 | 1 | Disc Carrier | |
| 10 | 916.100.410.060 | 1 | Sheet Metal | |
| 11 | X533.813.400.000 | 1 | Snapring | Diameter 47 X 1,5 |
| 12 | X638.525.149.000 | 1 | Needle Cage | 42 X 47 X 17 |
| 14 | X530.216.846.000 | 1 | Circlip | Diameter 63 X 3 |
| 15 | | 1 | Pinion | See Page - Reference Number 060-0050/4 |
| 17 | G916.100.320.010 | 1 | Kit, Spring | |
| 18 | 916.100.320.161 | 1 | Piston | |
| 19 | 916.100.320.170 | 1 | Support Cover | |
| 20 | 916.101.320.120 | 1 | Disc | |
| 21 | X548.949.815.000 | 1 | O Ring | Diameter 67 X 2,5 |
| 22 | 916.100.320.110 | 1 | Support Cover | |
| 23 | 916.100.320.131 | 1 | Plate | |
| 25 | 916.100.320.010 | 1 | Clutch Housing | |
| 26 | X500.615.046.000 | 1 | Roll Pin | 4 X 10 |
| 27 | 916.100.320.040 | 1 | Disc | |
| 28 | X531.206.800.000 | 1 | Circlip | Diameter 65 X 2,5 |
| 30 | 822.100.010.130 | 6 | External Disc | |
| 31 | 822.100.010.120 | 7 | Internal Disc | |
| 32 | 916.100.320.140 | 1 | Plate | |
| 33 | X530.209.700.000 | 1 | Circlip | Diameter 130 X 4 |
| 35 | H916.100.320.010 | 1 | Protector | |
| 36 | X487.526.841.000 | 1 | Hex. Sock. Screw | M8 X 16 |
| 37 | X450.006.308.000 | 1 | Washer | |
| 39 | X606.705.900.000 | 1 | Ball Bearing | |
| 40 | X550.108.900.000 | 1 | Shaft Seal | 50 X 65 X 8 |
| 41 | H312.100.200.100 | 1 | Ball Bearing | |
| 42 | 015.149.020.035 | 1 | Shim | Thickness 1,00 MM |
| | 015.149.020.030 | X | Shim | Thickness 0,10 MM |
| | 015.149.020.036 | X | Shim | Thickness 0,15 MM |
| | 015.149.020.031 | X | Shim | Thickness 0,20 MM |
| | 015.149.020.032 | X | Shim | Thickness 0,40 MM |
| 43 | X530.107.446.000 | 1 | Circlip | Diameter 80 X 2,5 |
| 44 | X548.901.801.000 | 1 | O Ring | Diameter 36,2 X 3 |
| 46 | 916.101.320.100 | 1 | Bush | |
| 47 | X548.901.801.000 | 1 | O Ring | Diameter 36,2 X 3 |

1-WK15-012-A

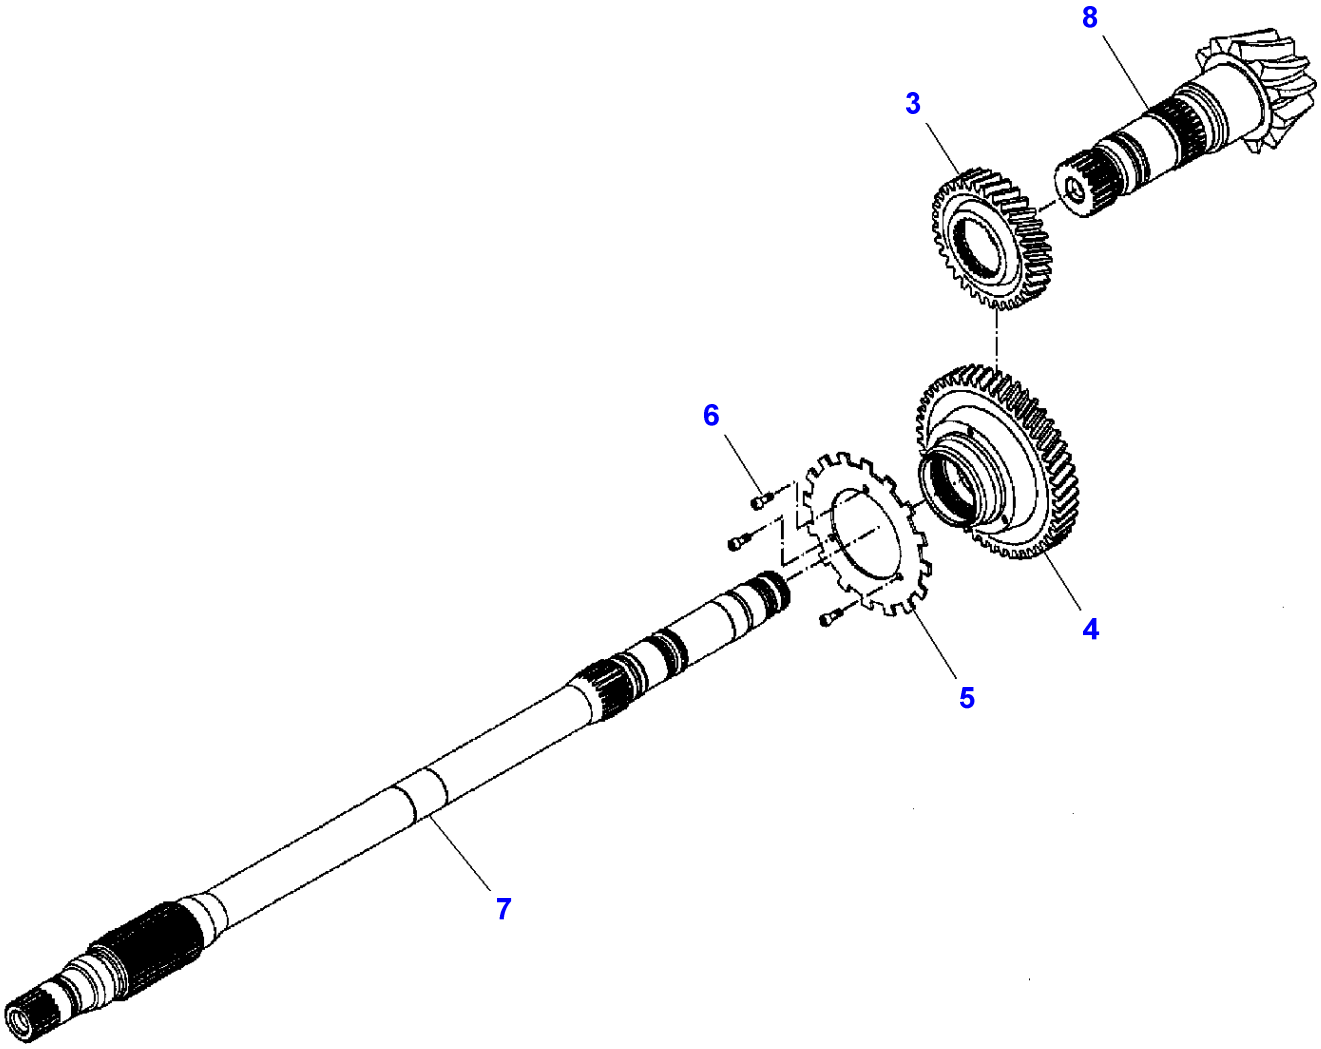


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 3 | 903.101.380.010 | 1 | Spur Gear | |
| 4 | 903.101.380.020 | 1 | Spur Gear | |
| 5 | 916.100.380.100 | 1 | Gear | |
| 6 | X485.004.700.000 | 3 | Hex. Sock. Screw | M16 X 10 |
| 7 | | 1 | Shaft | See Page - Reference Number 060-0045/5 |
| 8 | | 1 | Pinion Shaft | See Page - Reference Number 030-0040/18 |

1-WK01-006-A

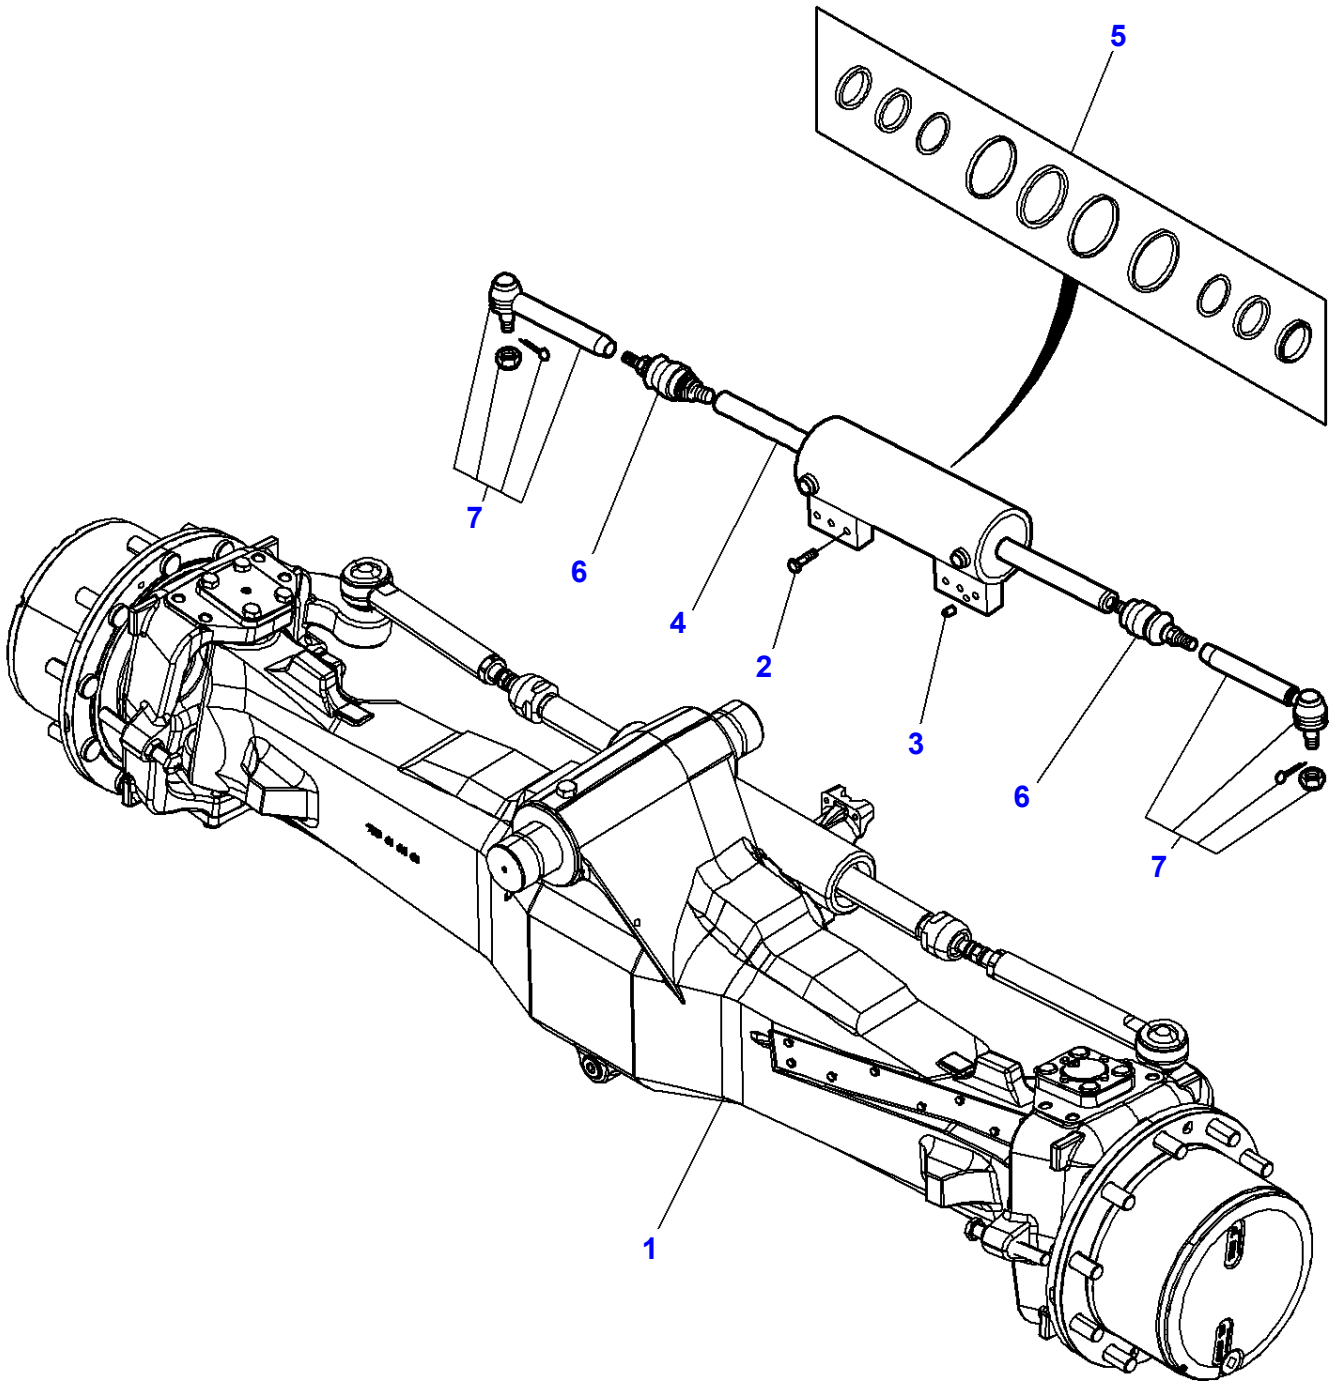


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3766280M91 | 1 | Front Live Axle | TYPE AG 280 |
| 2 | 3765902M1 | 6 | Screw | |
| 3 | 3764700M1 | 1 | Dowel | |
| 4 | 3765844M91 | 1 | Steering Cyl | |
| 5 | 3765904M91 | 1 | Kit, Seal | (4) |
| 6 | 3765843M91 | 2 | Ball Joint | |
| 7 | 3765842M91 | 2 | Toggle | |


1-WK03-006-A

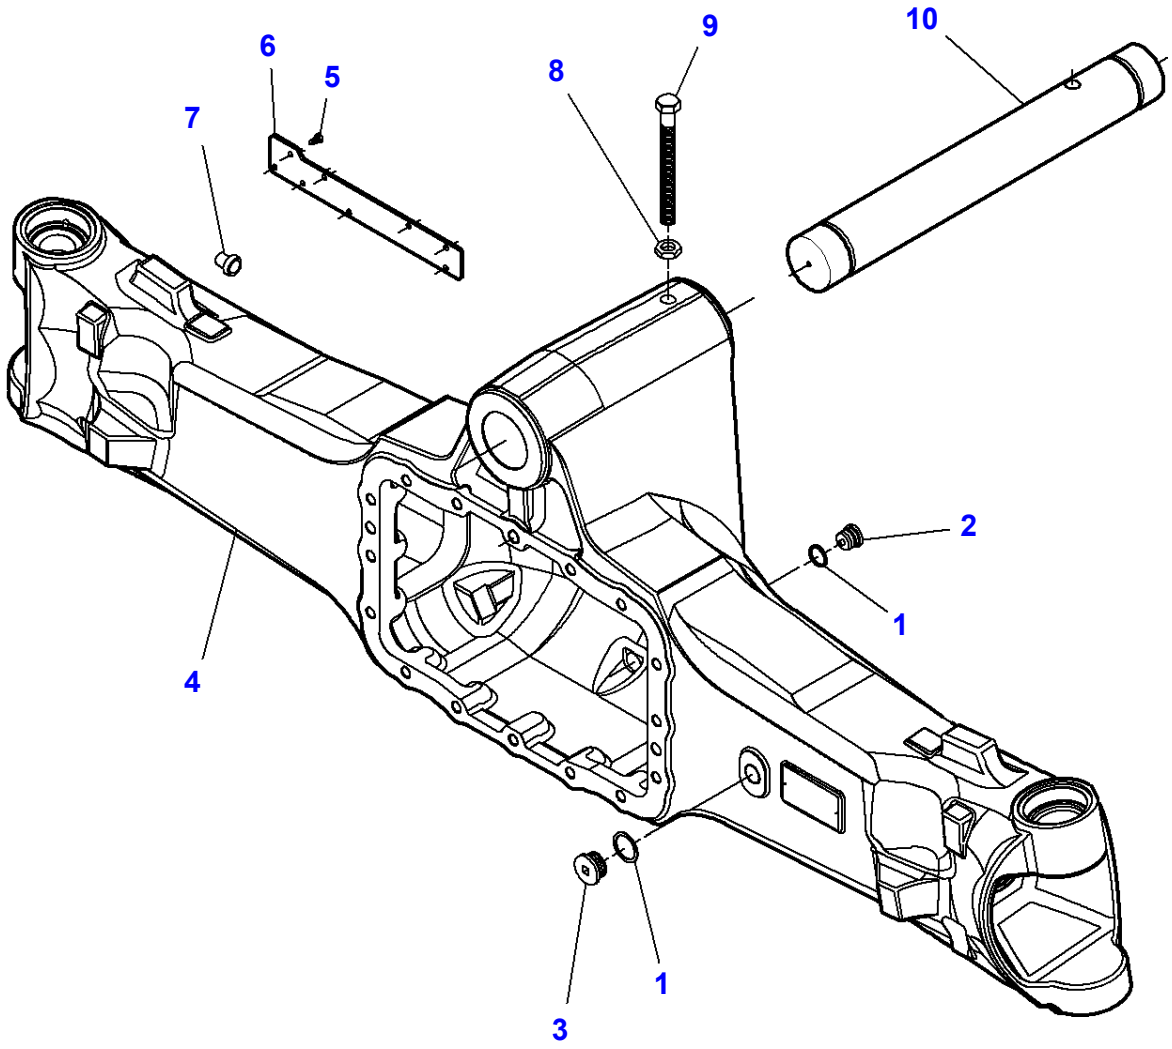

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X540.007.678.000 | 2 | Ring | TYPE AG 210 |
| 2 | 385.300.020.130 | 1 | Magnet | |
| 3 | 000065060 | 1 | Plug | |
| 4 | 7600170302 | 1 | Housing | |
| 5 | 000054058 | 8 | Screw | |
| 6 | 7500604201 | 1 | Fence | |
| 7 | 7500604301 | 1 | Bush | |
| 8 | 006033208 | 1 | Nut | |
| 9 | 016033621 | 1 | Screw | |
| 10 | 7600101401 | 1 | Clevis Pin | |

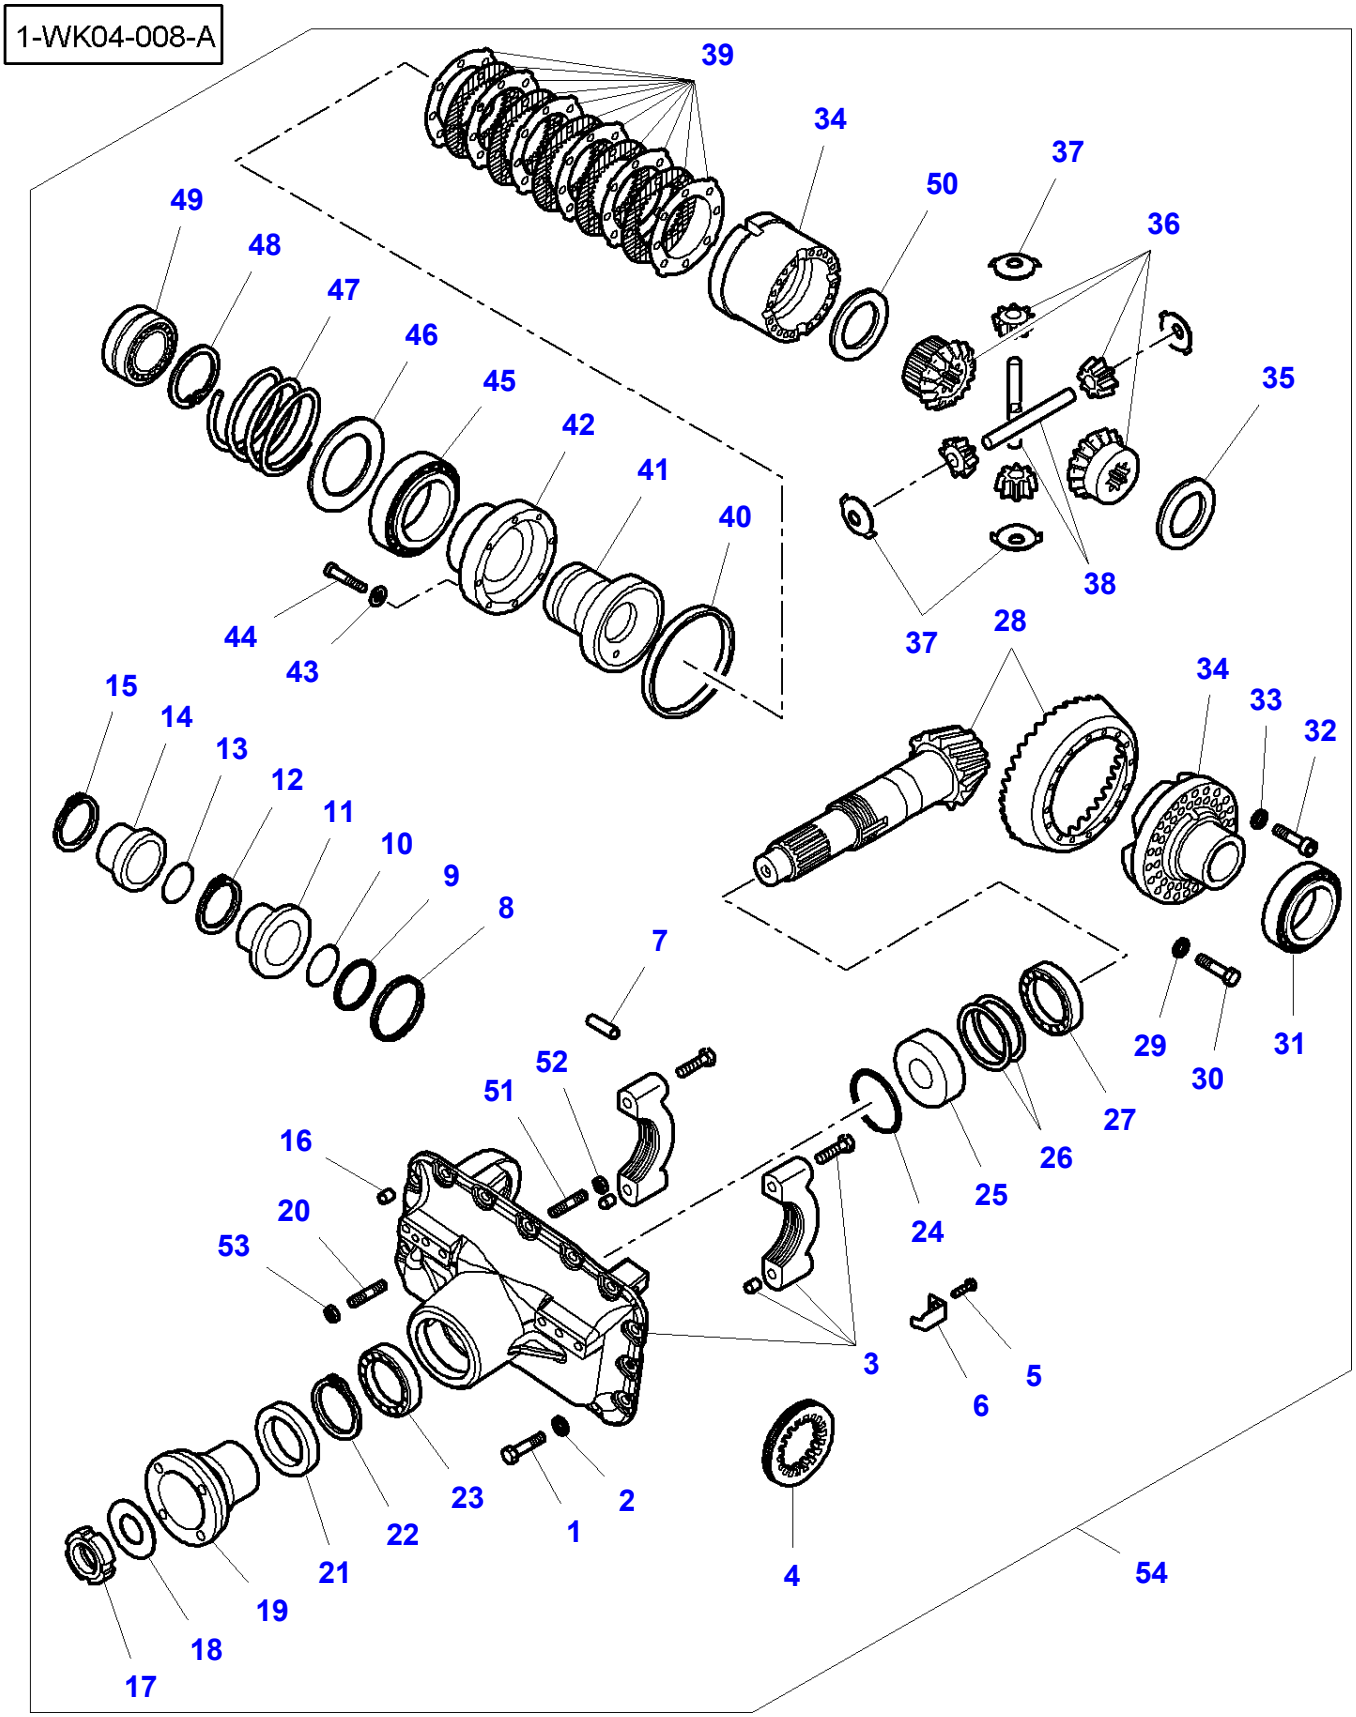
1-WK04-008-A
39
34
50
37
36
49
48
47
46
45
42
41
40
35
38
44
43
37
28
34
33
32
15
14
13
12
11
10
9
8
7
29
30
31
52
51
16
20
53
27
26
25
24
3
5
6
23
22
1
2
4
21
19
18
17
54

Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446


Front Axle 4 Wheel Drive - Differential Page 060-0065

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3764012M1 | 13 | Fork | |
| 2 | 011053790 | 16 | Washer | |
| 3 | 7600170402 | 1 | Support | |
| 4 | 3765787M1 | 1 | Nut | |
| 5 | 1444071X1 | 1 | Hex. Sock. Screw | |
| 6 | 3765786M1 | 1 | Locking Plate | |
| 7 | 014010327 | 1 | Dowel | |
| 8 | 001423359 | 1 | Seal | |
| 9 | 001423360 | 1 | Seal | |
| 10 | 3766055M1 | 1 | O Ring | |
| 11 | 3766054M1 | 1 | Bush | |
| 12 | 3766056M1 | 1 | Circlip | |
| 13 | 001051564 | 1 | Bush | |
| 14 | 3765836M1 | 1 | Piston | |
| 15 | 3765837M1 | 1 | Ring | |
| 16 | 014013773 | 2 | Dowel | |
| 17 | 3765039M1 | 1 | Nut | |
| 18 | 7600401701 | 1 | Bush | |
| 19 | 7600470401 | 1 | Bridle | |
| 20 | 017023490 | 2 | Stud | |
| 21 | 7600401201 | 1 | Seal | |
| 22 | 002021812 | 1 | Snapring | |
| 23 | 000137100 | 1 | Bearing Assy | |
| 24 | 3765901M1 | 1 | O Ring | |
| 25 | 3765873M1 | X | Spacer | Thickness 5,80 MM |
| | 3765874M1 | X | Spacer | Thickness 5,83 MM |
| | 3765875M1 | X | Spacer | Thickness 5,86 MM |
| | 3765876M1 | X | Spacer | Thickness 5,89 MM |
| | 3765877M1 | X | Spacer | Thickness 5,92 MM |
| | 3765878M1 | X | Spacer | Thickness 5,95 MM |
| | 3765879M1 | X | Spacer | Thickness 5,98 MM |
| | 3765880M1 | X | Spacer | Thickness 6,01 MM |
| | 3765881M1 | X | Spacer | Thickness 6,04 MM |
| | 3765882M1 | X | Spacer | Thickness 6,07 MM |
| | 3765883M1 | X | Spacer | Thickness 6,10 MM |
| | 3765884M1 | X | Spacer | Thickness 6,13 MM |
| | 3765885M1 | X | Spacer | Thickness 6,16 MM |
| | 3765886M1 | X | Spacer | Thickness 6,19 MM |
| | 3765887M1 | X | Spacer | Thickness 6,22 MM |
| | 3765888M1 | X | Spacer | Thickness 6,25 MM |
| | 3765889M1 | X | Spacer | Thickness 6,28 MM |
| | 3765890M1 | X | Spacer | Thickness 6,31 MM |
| | 3765891M1 | X | Spacer | Thickness 6,34 MM |
| | 3765892M1 | X | Spacer | Thickness 6,37 MM |
| | 3765893M1 | X | Spacer | Thickness 6,40 MM |
| | 3765894M1 | X | Spacer | Thickness 6,43 MM |
| | 3765895M1 | X | Spacer | Thickness 6,46 MM |
| | 3765896M1 | X | Spacer | Thickness 6,49 MM |
| | 3765897M1 | X | Spacer | Thickness 6,52 MM |
| | 3765898M1 | X | Spacer | Thickness 6,55 MM |
| | 3765899M1 | X | Spacer | Thickness 6,58 MM |
| | 3765900M1 | X | Spacer | Thickness 7,00 MM |
| 26 | 000245025A | X | Chock | Thickness 0.10 MM |
| | 000245027A | X | Chock | Thickness 0.30 MM |
| | 000245028A | X | Chock | Thickness 0.50 MM |
| 27 | 005093366 | 1 | Bearing Assy | |
| 28 | 7600450101 | 1 | Kit, Bevel Gear | |
| 29 | 011141455 | 18 | Washer | |
| 30 | 016010786 | 18 | Screw | |
| 31 | 005103365 | 1 | Bearing Assy | |
| 32 | 000057970 | 12 | Screw | |
| 33 | 011041318 | 12 | Washer | |
| 34 | 3766061M91 | 1 | Housing | |
| 35 | 000245680 | 1 | Washer | |
| 36 | 7600470201 | 1 | Gear | |
| 37 | 7600401401 | 4 | Washer | |
| 38 | 000215040A | 2 | Clevis Pin | |
| 39 | 000727512A | 1 | Clutch Disc | |
| 40 | 000139339 | 1 | Bush | |
| 41 | 7600400401 | 1 | Bridle | |
| 42 | 3766063M1 | 1 | Cover | |

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 43 | 011043431 | 18 | Washer | |
| 44 | 3766065M1 | 18 | Screw | |
| 45 | G816.300.020.180 | 1 | Cup And Cone | |
| 46 | 000345621 | 3 | Chock | Thickness 0.50 MM |
| 46 | 000345622 | 1 | Chock | Thickness 0.20 MM |
| 46 | 000345623A | 1 | Chock | Thickness 0.10 MM |
| 47 | 7600400501 | 1 | Spring | |
| 48 | 002011794 | 1 | Snapring | |
| 49 | 005733367 | 1 | Stop | |
| 50 | 000245837 | 1 | Washer | |
| 51 | 7600101501 | 1 | Stud | |
| 52 | 006053774 | 1 | Nut | |
| 53 | 006011489 | 2 | Nut | |
| 54 | 7600440004 | 1 | Kit,Differential | |

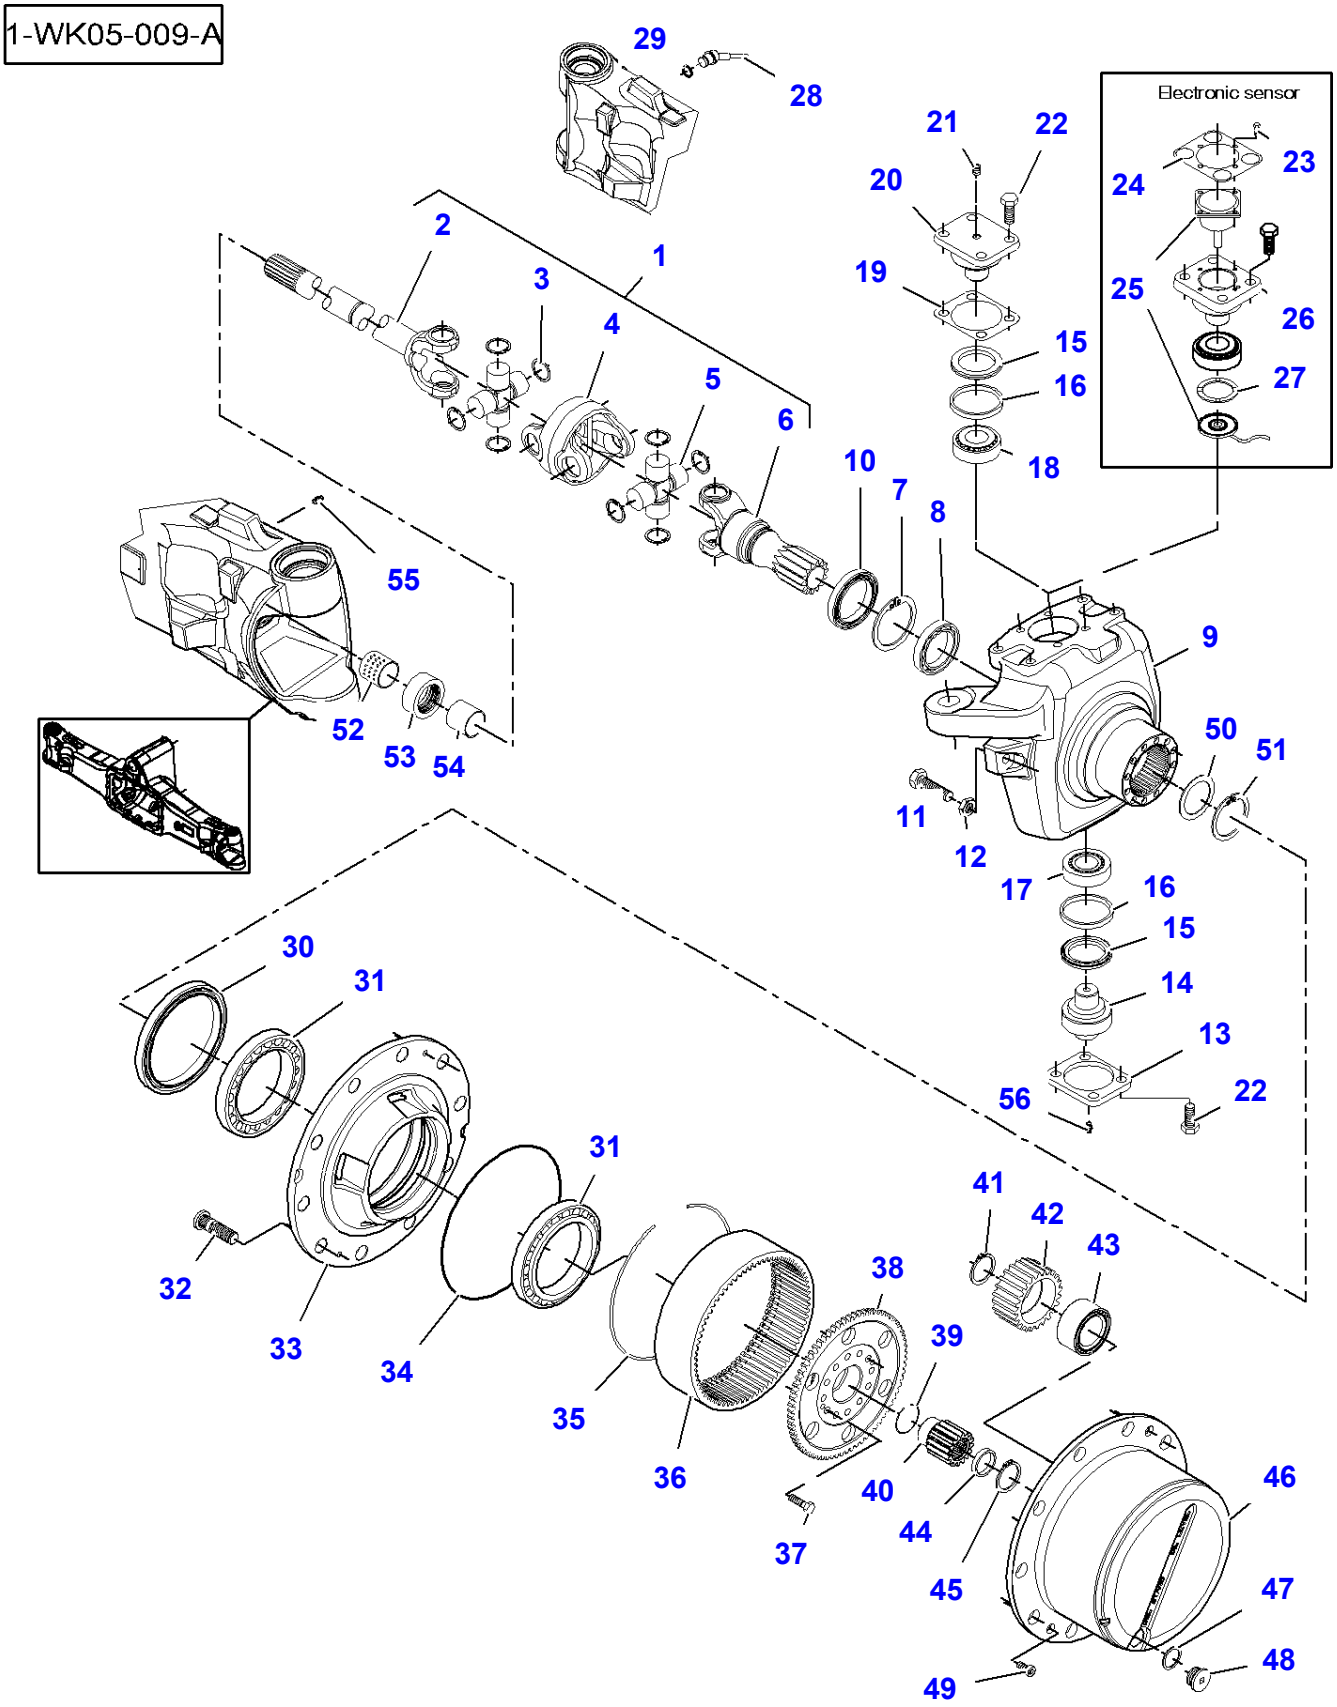
1-WK05-009-A
Electronic sensor
29
28
21
22
20
23
24
2
1
19
3
4
25
26
15
5
16
27
6
10
18
7
8
55
9
52
53
54
50
51
11
12
17
16
15
30
14
31
13
56
22
31
41
42
43
32
38
39
33
34
35
36
40
37
44
46
45
47
49
48


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Front Axle 4 Wheel Drive - Final Drive Page 060-0070

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3766060M91 | 1 | Universal Joint | Right Hand |
| | 3766059M91 | 1 | Universal Joint | Left Hand |
| 2 | 7600645003 | 1 | Shaft | (1) Right Hand |
| | 7600645005 | 1 | Shaft | (1) Left Hand |
| 3 | 002020903 | 8 | Snapring | (1) |
| 4 | 3766169M91 | 1 | Knuckle | (1) |
| 5 | 000513236 | 2 | Crosspiece | (1) |
| 6 | 7600645004 | 1 | Shaft | (1) |
| 7 | 002023410 | 2 | Snapring | |
| 8 | 005013296 | 2 | Bearing Assy | |
| 9 | 7600601801 | 1 | Housing | Left Hand |
| | 7600601701 | 1 | Housing | Right Hand |
| 10 | 7600601602 | 2 | Seal | |
| 11 | 7600601501 | 4 | Screw | |
| 12 | 000058321 | 4 | Nut | |
| 13 | 000145120 | 2 | Support | |
| 14 | 3766058M1 | 2 | Pin | |
| 15 | 7500604601 | 4 | Seal | |
| 16 | 7500604701 | 4 | Spacer | |
| 17 | 3766050M1 | 2 | Bearing Assy | |
| 18 | 005100497 | 2 | Bearing Assy | |
| 19 | F718.301.020.290 | 1 | Disc | Thickness 0.2 MM |
| | F718.301.020.300 | 1 | Disc | Thickness 0.5 MM |
| 20 | 7500604401 | 1 | Pivot | |
| 21 | 016083444 | 1 | Screw | |
| 22 | 016010786 | 20 | Screw | |
| 23 | 016010367 | 4 | Screw | |
| 24 | 7450600901 | 1 | Cover | |
| 25 | 7450661202 | 1 | Transducer | |
| 26 | 7500604501 | 1 | Pivot | |
| 27 | 7500604801 | 1 | Washer | |
| 28 | 7450100301 | 1 | Connectors | |
| 29 | 001051577 | 1 | O Ring | |
| 30 | 000051867 | 2 | Seal | |
| 31 | 005101427 | 4 | Bearing Assy | |
| 32 | 000057061 | 24 | Stud | |
| 33 | 7600600601 | 2 | Impeller Hub | |
| 34 | 001053338 | 2 | O Ring | |
| 35 | 7600601401 | 2 | Snapring | |
| 36 | 7600600801 | 2 | Annular Gear | |
| 37 | 3764103M1 | 24 | Screw | |
| 38 | 7600600901 | 2 | Support | |
| 39 | 002072756 | 2 | Snapring | |
| 40 | 7600601001 | 2 | Planet | |
| 41 | 002143202 | 8 | Seal | |
| 42 | 7600601101 | 8 | Gear | |
| 43 | 7600601201 | 8 | Bearing Assy | |
| 44 | 7600601302 | 2 | Bush | |
| 45 | 002011260 | 2 | Bush | |
| 46 | 7600600701 | 2 | Carrier | |
| 47 | X540.007.678.000 | 2 | Ring | |
| 48 | 385.300.020.130 | 2 | Magnet | |
| 49 | 000057073 | 4 | Screw | |
| 50 | 000245560B | 2 | Washer | |
| 51 | 002013405 | 2 | Snapring | |
| 52 | 339040X1 | 2 | Pin | |
| 53 | 3765756M1 | 2 | Oil Seal | |
| 54 | F718.301.020.520 | 2 | Cup | |
| 55 | 339004X1 | 2 | Greaser | |
| 56 | 339003X1 | 2 | Greaser | |

1-WN04-001-A

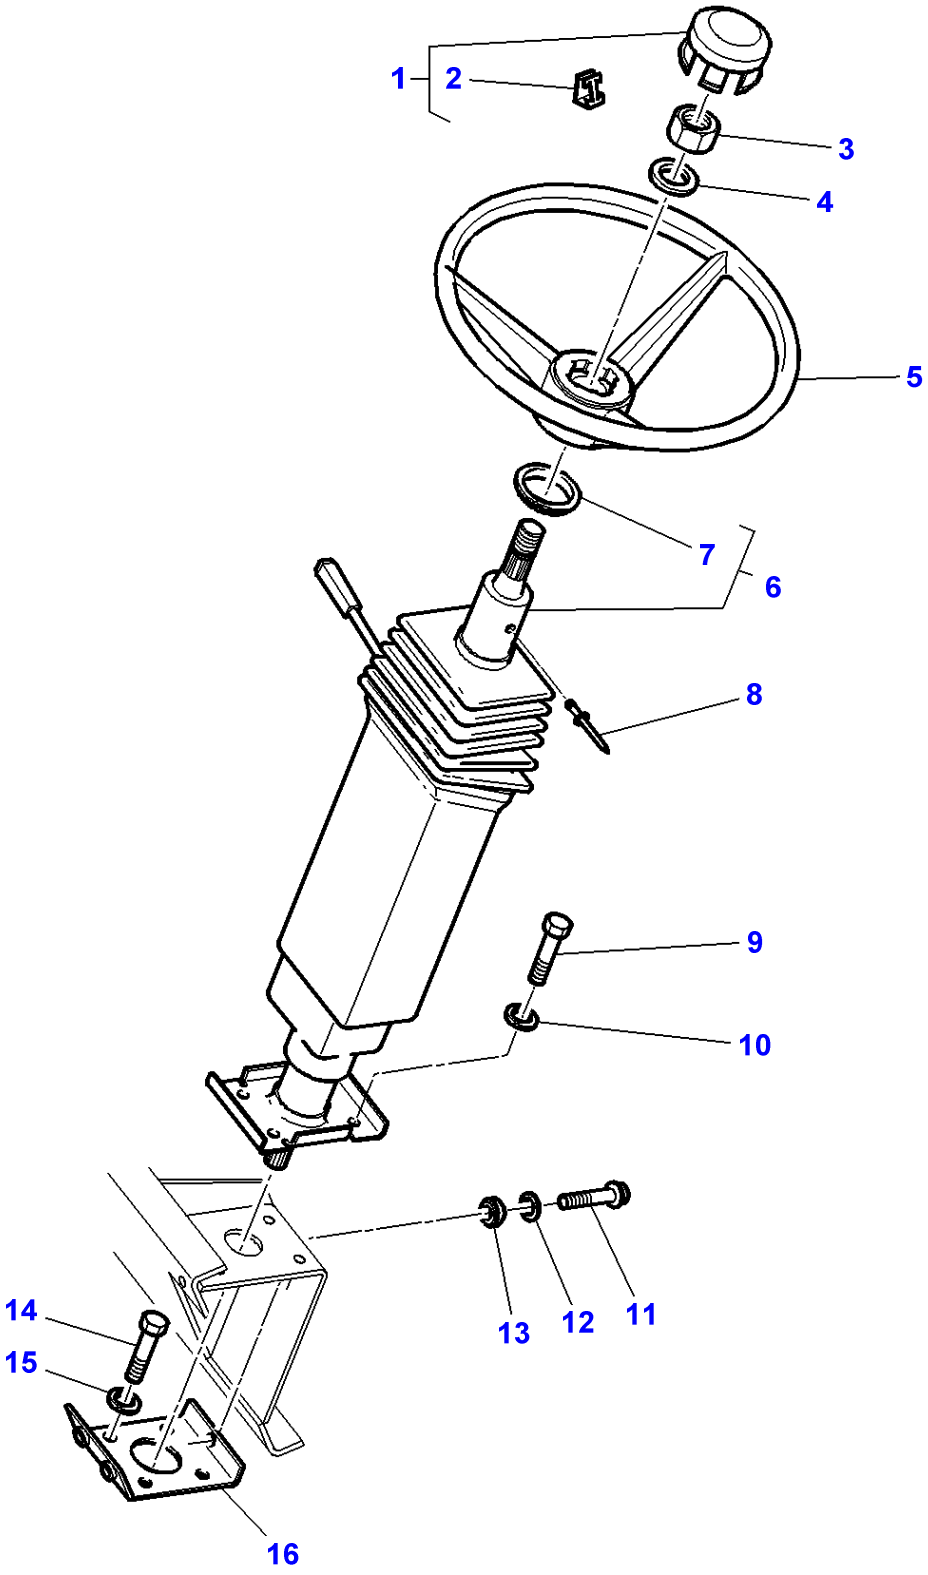


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3759758M92 | 1 | Cap | |
| 2 | 3817055M1 | 2 | Clip | (1) |
| 3 | 339070X1 | 1 | Nut | M14 |
| 4 | 390973X1 | 1 | Washer Metric | Diameter 15-28 X 2,5 |
| 5 | 3809661M1 | 1 | Steering Wheel | |
| 6 | 4273495M92 | 1 | Steering Column | See Page - Reference Number 070-0010/1 |
| 7 | 3902578M1 | 1 | Gasket | (6) |
| 8 | 3011268X1 | 1 | Rivet | 4 X 7,5 MM |
| 9 | 339124X1 | 4 | Hex. Sock. Screw | M8 X 16 |
| 10 | 1440921X1 | 4 | Washer Metric | Diameter 8-22 X 2 |
| 11 | 3009778X1 | 3 | Screw | M10 X 35 |
| 12 | 3389958M1 | 6 | Washer | Diameter 10,5-28 X 2 |
| 13 | 1619912M1 | 3 | Vibration Mount | |
| 14 | 339282X1 | 4 | Hex. Sock. Screw | M10 X 16 |
| 15 | 390734X1 | 4 | Washer | Diameter 10-21 X 2 |
| 16 | 3388920M94 | 1 | Support | |

**FOOTNOTE [A]** FOR JAPANESE MARKET ONLY

1-WN04-003-B

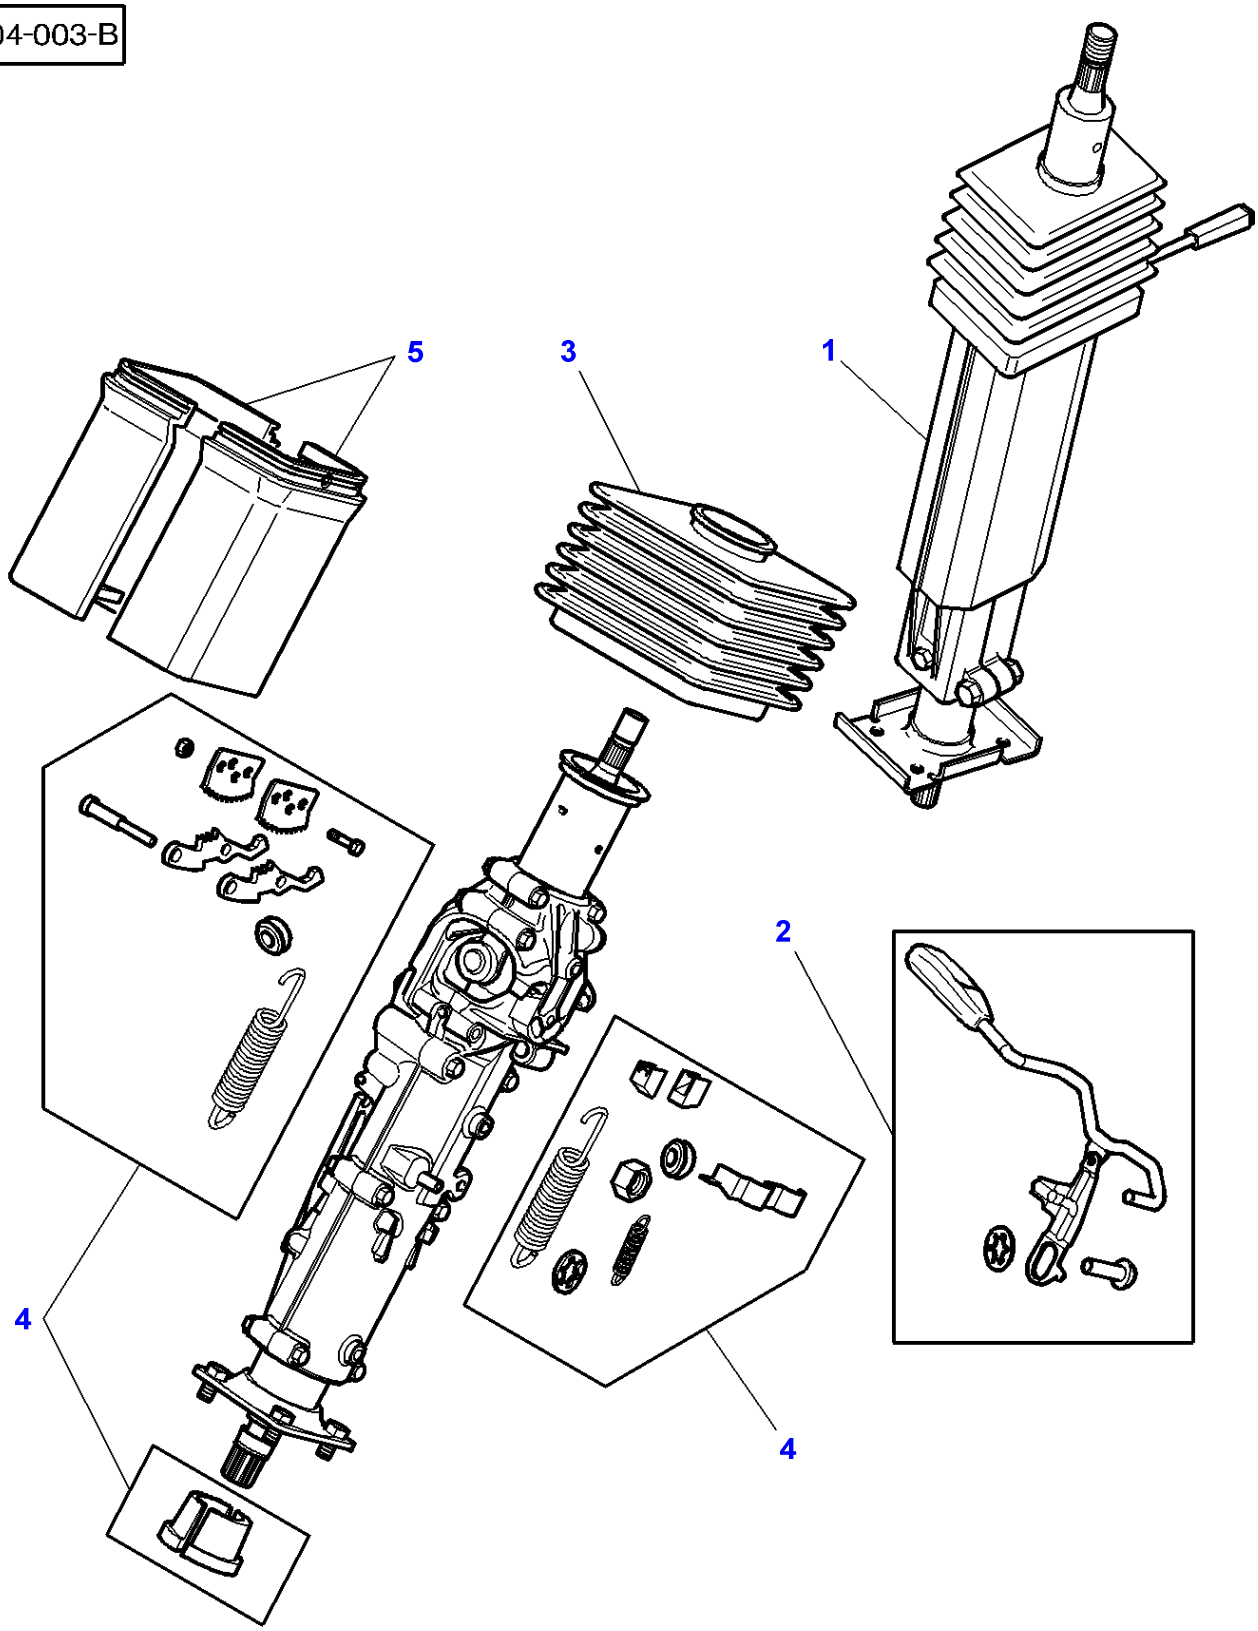


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4273495M92 | 1 | Steering Column | |
| 2 | 3907403M91 | 1 | Kit, Lever | [A] (1) |
| 3 | 3907405M91 | 1 | Bellows | (1) |
| 4 | 3907402M91 | 1 | Kit, Repair | [A] (1) |
| 5 | 3907404M91 | 1 | Case Assy | [A] (1) |

**FOOTNOTE [A]** NOT DETAILLED

1-WN14-001-B

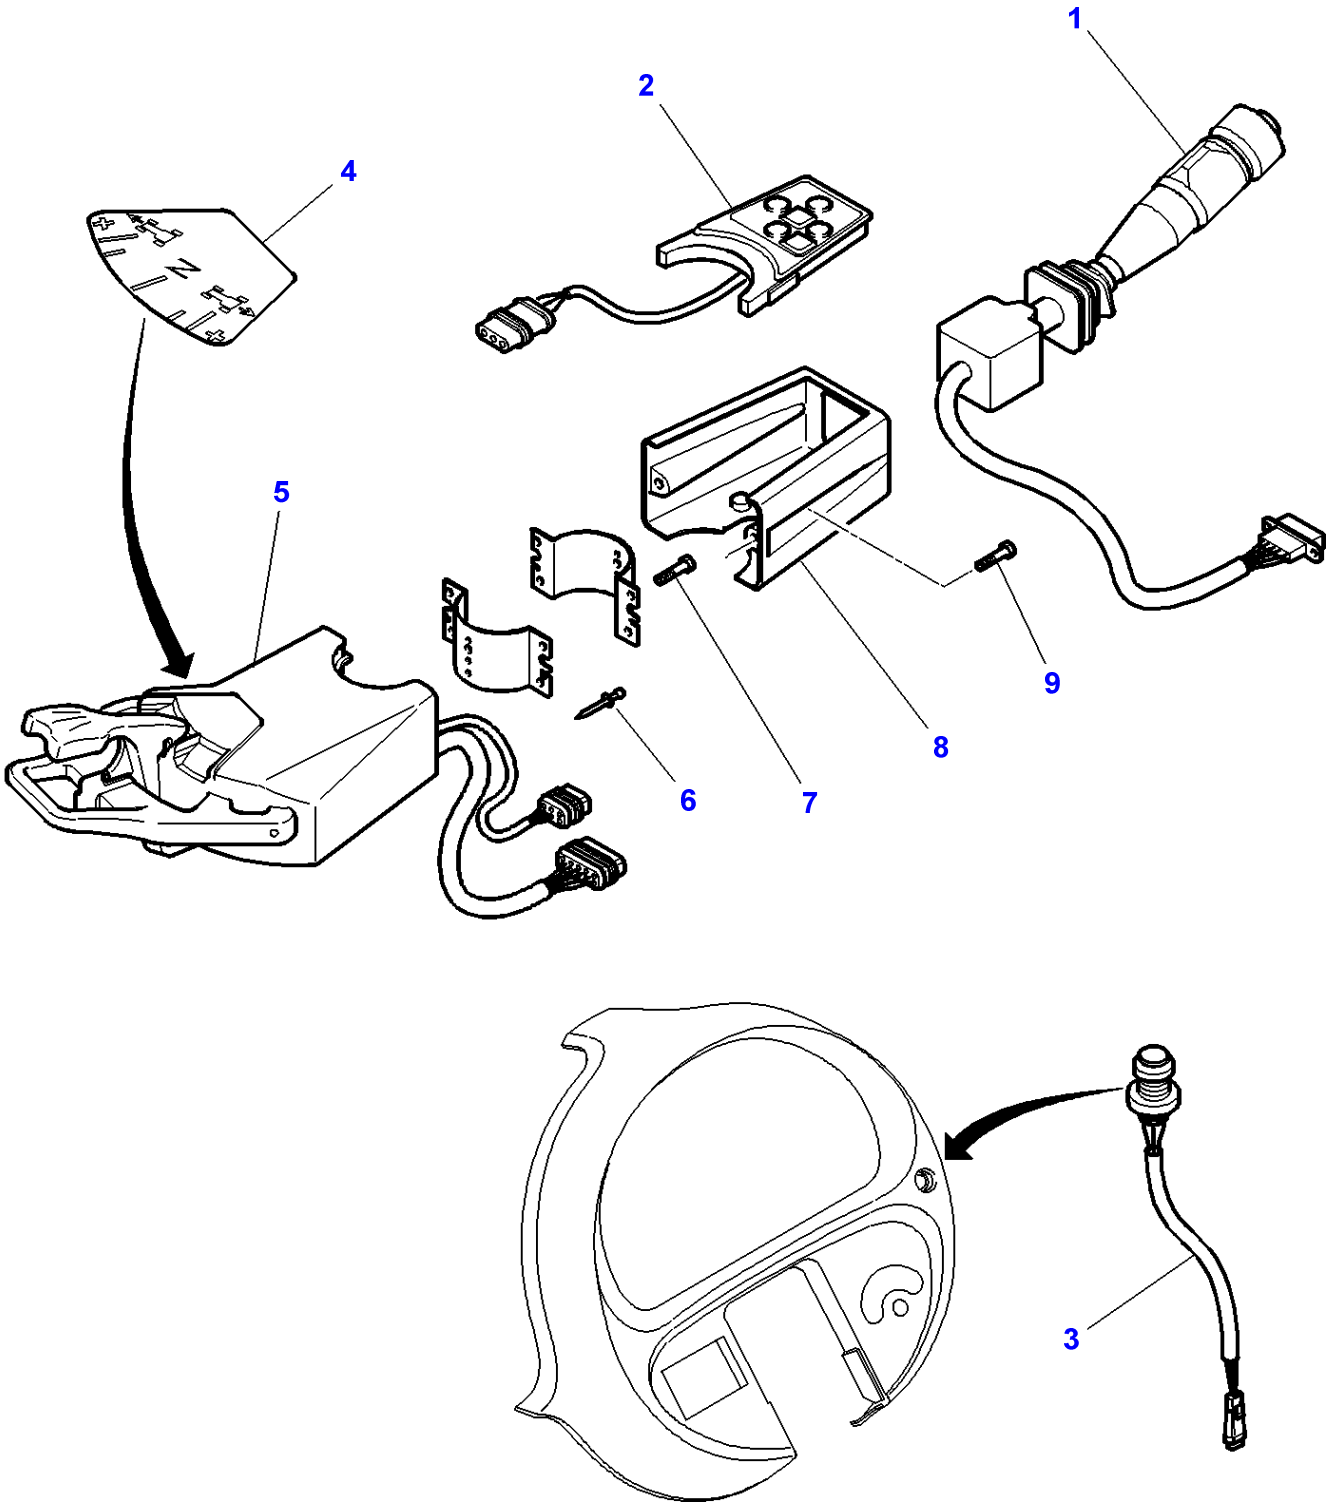


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3713669M3 | 1 | Switch,Indirect | |
| 2 | 3787415M1 | 1 | Wobble Drive | |
| 3 | 3789331M1 | 1 | Switch | |
| 4 | 4272209M1 | 1 | Decal | |
| 5 | 3787500M92 | 1 | Wobble Drive | [A] |
| 6 | 3011268X1 | 1 | Rivet | |
| 7 | 3713785M1 | 4 | Screw | M4 X 16 |
| 8 | 4271331M1 | 1 | Case Assy | |
| 9 | 3010895X1 | 1 | Screw Metric | M4 X 35 |
| | 3010818X1 | 1 | Screw Metric | M4 X 20 |

**FOOTNOTE [A]** WITH PARKING BRAKE
**FOOTNOTE [B]** WITHOUT PARKING BRAKE

1-WN07-001-A

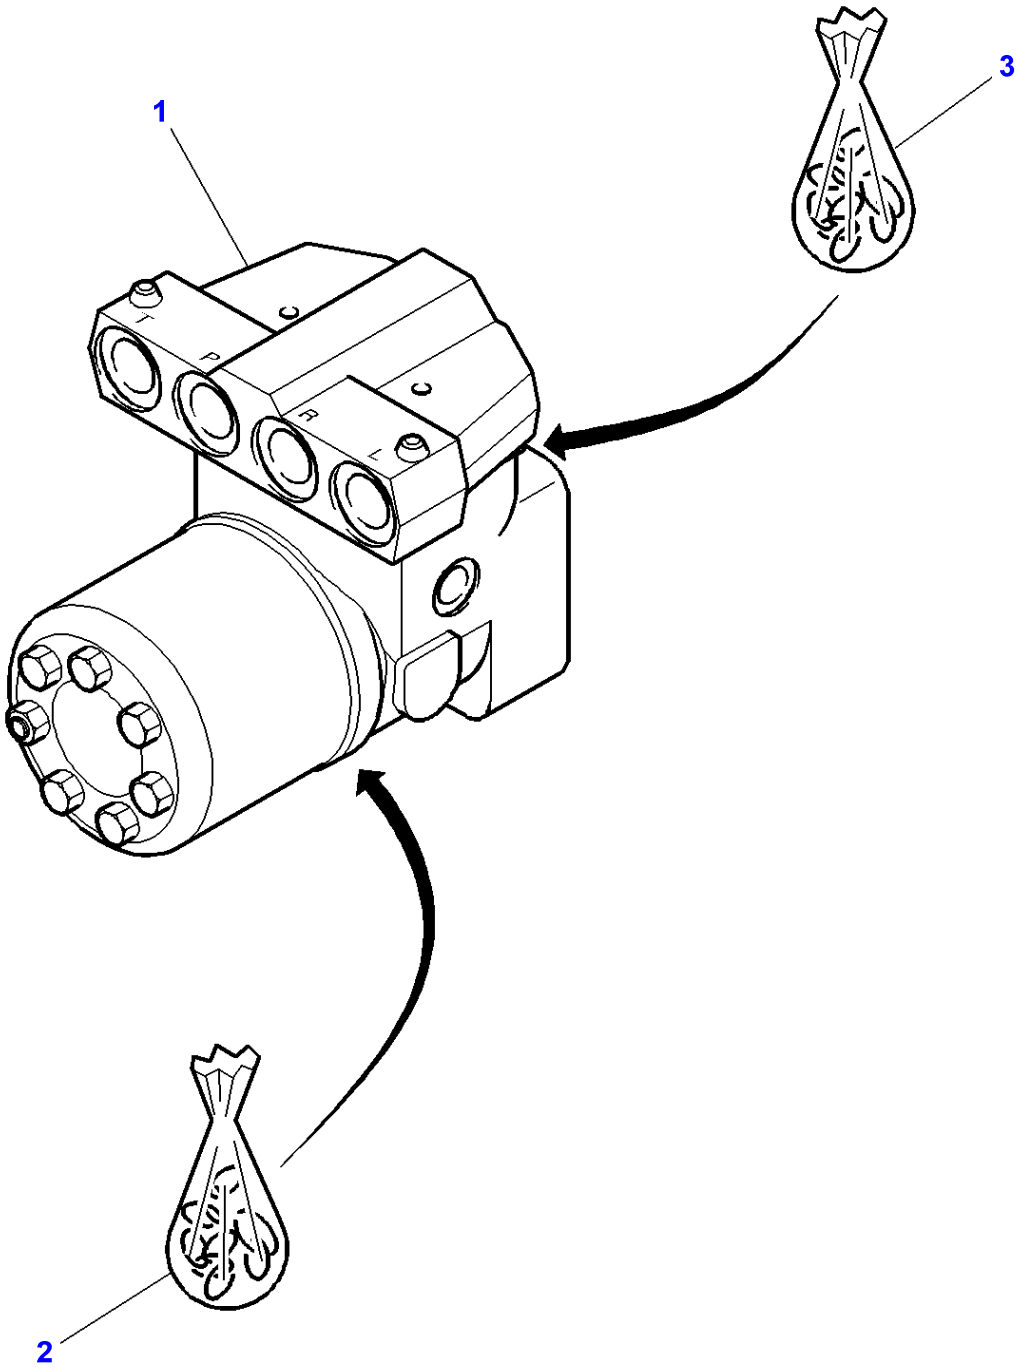


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271164M1 | 1 | Distributor | [Z] |
| 2 | 3903005M91 | 1 | Parts Pack | |
| 3 | 3907009M91 | 1 | Kit,Joint/Gasket | |

**FOOTNOTE [A]** OPEN CENTRE HYDRAULIC
**FOOTNOTE [B]** TWIN FLOW LOAD SENSING
**FOOTNOTE [C]** LOAD SENSING
**FOOTNOTE [D]** NUMBER TO BE ADVISED
**FOOTNOTE [Z]** NOT DETAILLED


1-WN06-026-B

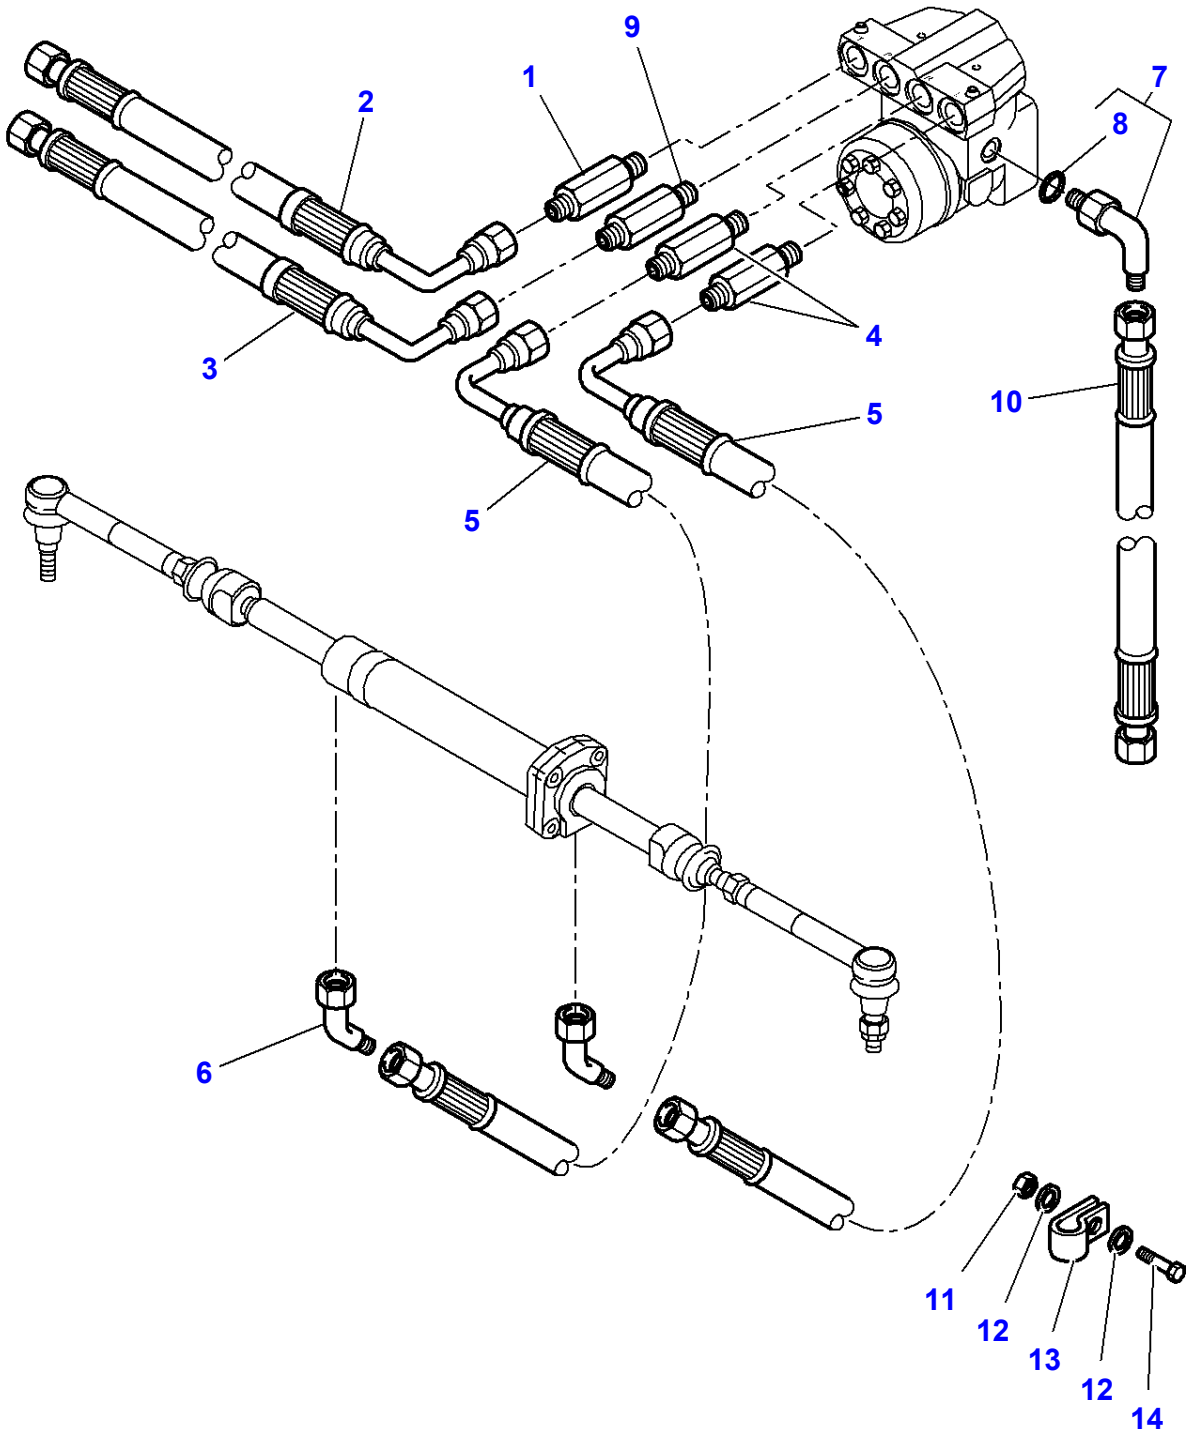

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3789721M1 | 1 | Union | |
| 2 | 4276126M3 | 1 | Hydr. Hose | |
| 3 | 4276125M1 | 1 | Hydr. Hose | |
| 4 | 4272115M1 | 2 | Union | |
| 5 | 4276127M1 | 2 | Hydr. Hose | |
| 6 | 3787918M1 | 2 | Union | |
| 7 | 4279816M1 | 1 | Union | M12 / M14 |
| 8 | 3011061X1 | 1 | O Ring | (7) |
| 9 | 4274551M1 | 1 | Union | |
| 10 | 4276124M1 | 1 | Hydr. Hose | |
| 11 | 394367X1 | 1 | Locknut | |
| 12 | 391039X1 | 2 | Washer Metric | |
| 13 | 3581131M1 | 1 | Clip | Diameter 20 - M8 |
| 14 | 339168X1 | 1 | Hex. Sock. Screw | M8 X 50 |

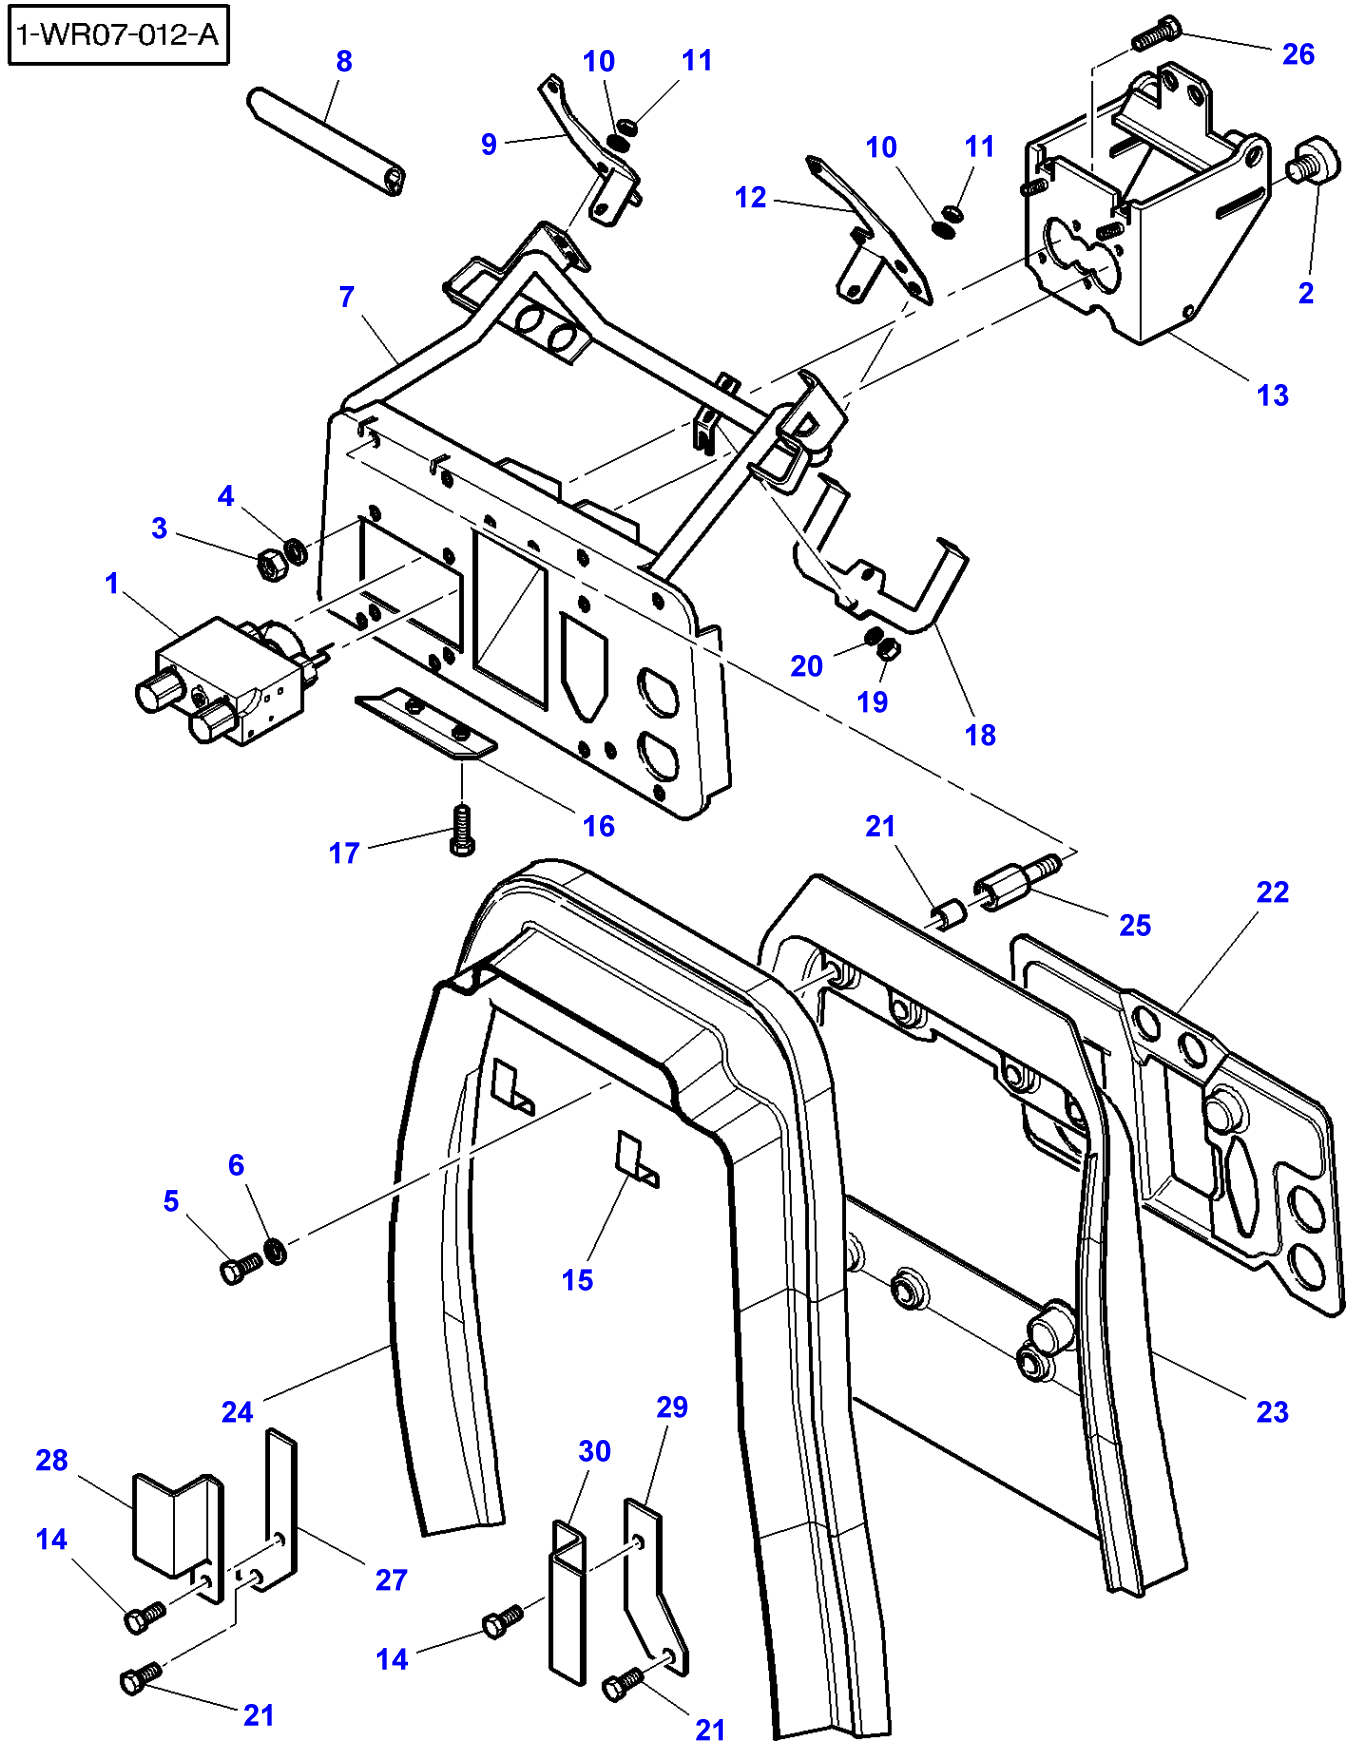
1-WR07-012-A
8
10
11
9
26
10
11
12
2
7
13
4
3
1
20
19
18
16
17
21
25
22
6
5
15
24
23
29
28
30
14
27
14
21
21


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Brackets Pedal Page 070-0030

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4270774M1 | 1 | Pressure Valve | |
| 2 | 4270770M4 | 1 | Button | |
| 3 | 339169X1 | 2 | Nut | M8 |
| 4 | 390972X1 | 4 | Washer | Diameter 8-17 X 1,7 |
| 5 | 339124X1 | 8 | Hex. Sock. Screw | M8 X 16 |
| | 339761X1 | 2 | Hex. Sock. Screw | M8 X 25 |
| 6 | 391039X1 | 8 | Washer Metric | Diameter 8-24 X 2 |
| 7 | 4270570M95 | 1 | Support | |
| 8 | 3580695M1 | 1 | Gasket | [A]<br>Length 1600 MM |
| 9 | 4270577M2 | 1 | Plate Clamping | Right Hand |
| 10 | 390971X1 | 4 | Washer | Diameter 6-12 X 1,5 |
| 11 | 1441462X1 | 4 | Locknut | M6 |
| 12 | 4270576M2 | 1 | Plate Clamping | Left Hand |
| 13 | 4270599M1 | 1 | Support | |
| 14 | 339666X1 | 2 | Hex. Sock. Screw | M6 X 20 |
| 15 | 4276478M1 | 2 | Strap | |
| 16 | 3785650M1 | 1 | Stop | |
| 17 | 339666X1 | 2 | Hex. Sock. Screw | M6 X 20 |
| 18 | 4271236M1 | 1 | Strap | |
| 19 | 1441462X1 | 2 | Locknut | M6 |
| 20 | 390971X1 | 2 | Washer | Diameter 6-12 X 1,5 |
| 21 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 22 | 4272627M4 | 1 | Case Assy | |
| 23 | 4271063M4 | 1 | Bulkhead | |
| 24 | 4276474M1 | 1 | Protector | |
| 25 | 4274753M2 | 8 | Stud | M8 X 50 |
| 26 | 339666X1 | 4 | Hex. Sock. Screw | M6 X 20 |
| 27 | 4275483M1 | 1 | Strap | |
| 28 | 4275484M1 | 1 | Strap | |
| 29 | 4275485M1 | 1 | Strap | |
| 30 | 4275486M1 | 1 | Strap | |

**FOOTNOTE [A]** CUT TO REQUIRED LENGTH

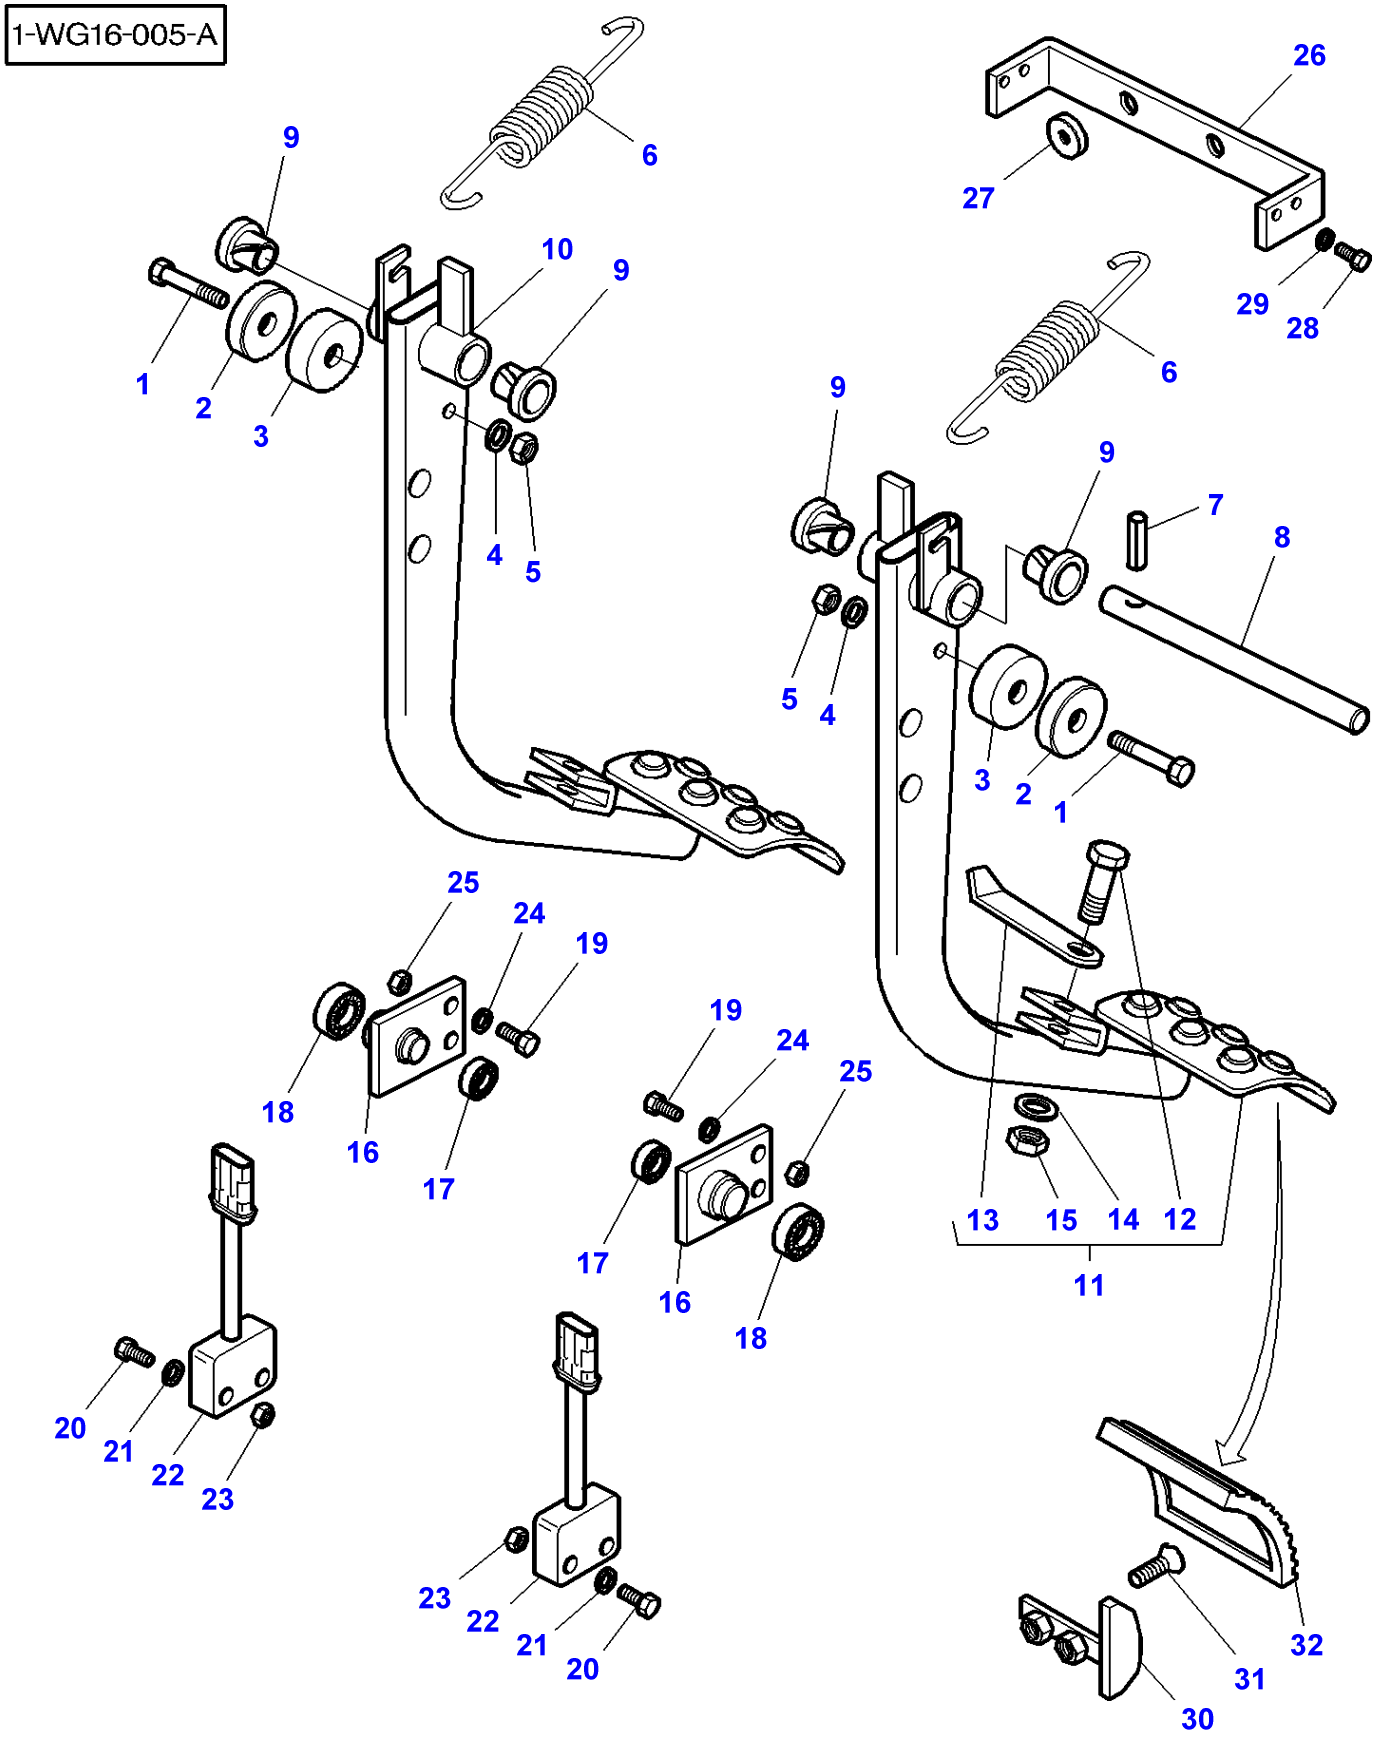
1-WG16-005-A
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Brake Pedals Page 070-0035

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3010895X1 | 2 | Screw Metric | M4 X 35 |
| 2 | X830.120.050.000 | 2 | Magnet | |
| 3 | 3788754M1 | 2 | Spacer | Diameter 26 X 14 |
| 4 | 339102X1 | 2 | Washer | Diameter 4-9 X 1 |
| 5 | 3019139X1 | 2 | Nut | M4 |
| 6 | 3785651M1 | 2 | Spring | |
| 7 | 391290X1 | 1 | Pin | Diameter 5 X 30 |
| 8 | 3785652M2 | 1 | Clevis Pin | Diameter 15 X 154 |
| 9 | 3385604M1 | 4 | Bearing | |
| 10 | 4271598M2 | 1 | Brake Pad | Right Hand |
| 11 | 4272615M92 | 1 | Brake Pad | Left Hand |
| 12 | 391990X1 | 1 | Screw | (11)<br>M8 X 25 |
| 13 | 4272621M1 | 1 | Latch | (11) |
| 14 | 1441782X1 | 1 | Spring | (11) |
| 15 | 394367X1 | 1 | Locknut | (11)<br>M8 |
| 16 | 4270768M2 | 2 | Support | |
| 17 | 391077X1 | 2 | Bear. 6005 2rs | Diameter 47-25 |
| 18 | 339800X1 | 2 | Bear. 6007 2rs | Diameter 62-35 |
| 19 | 3009508X1 | 4 | Hex. Sock. Screw | M12 X 40 |
| 20 | 3010818X1 | 4 | Screw Metric | M4 X 20 |
| 21 | 339102X1 | 4 | Washer | Diameter 4-9 X 1 |
| 22 | H312.900.150.010 | 2 | Solenoid Switch | |
| 23 | 1443615X1 | 4 | Nut Metric | M4 |
| 24 | 390735X1 | 4 | Washer | Diameter 12-24 X 2,5 |
| 25 | 1440330X1 | 4 | Locknut | M12 |
| 26 | 4270773M1 | 1 | Stop | |
| 27 | 3713404M1 | 2 | Plug | Diameter 15 |
| 28 | 3009280X1 | 4 | Screw | M6 X 12 |
| 29 | 390971X1 | 4 | Washer | Diameter 6-12 X 1,5 |
| 30 | 3714488M3 | 1 | Stop | |
| 31 | 392404X1 | 2 | Screw | M5 X 12 |
| 32 | 1626321M2 | 2 | Skate | |

1-WG17-003-A

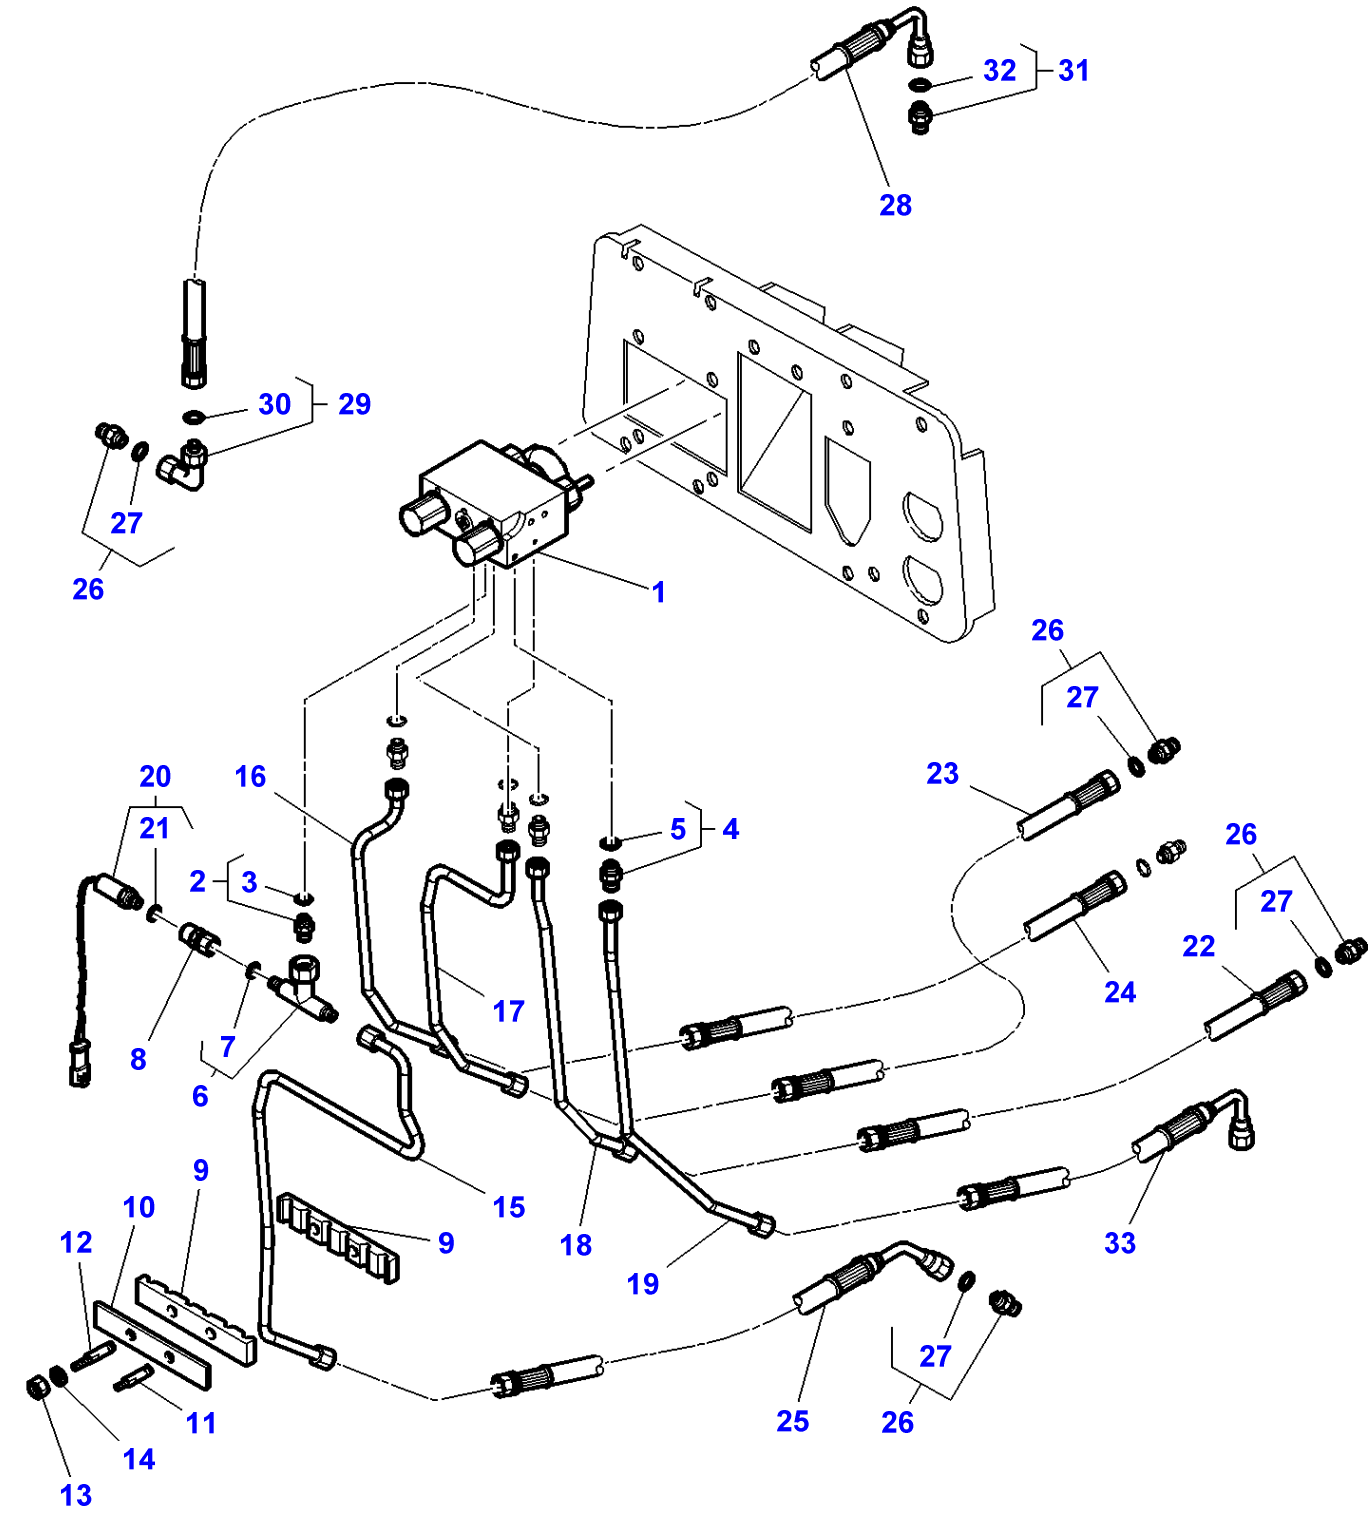
32
31
28
30
29
27
26
1
26
27
20
21
16
23
5
4
2
3
26
27
22
24
17
8
7
6
9
10
12
15
9
18
19
33
27
25
26
11
14
13


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Brakes - Hydraulic Pipes Page 070-0040

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4270774M1 | 1 | Pressure Valve | |
| 2 | 3011554X91 | 1 | Union | M12X1.5 |
| 3 | 338761X1 | 1 | Gasket | (2) |
| 4 | 3011038X91 | 4 | Union | M14X1.5 |
| 5 | 338762X1 | 1 | Seal | (4) |
| 6 | 3011553X91 | 1 | Teepiece | M16x1.5 |
| 7 | 3011144X1 | 1 | O Ring | (6) |
| 8 | 4276754M1 | 1 | Union | |
| 9 | 4275100M1 | 2 | Bridle | |
| 10 | 4275670M1 | 1 | Plate | |
| 11 | 3778279M1 | 1 | Stud | M8 X 28 |
| 12 | 4270451M1 | 1 | Stud | M8 / M6 |
| 13 | 1441500X1 | 1 | Locknut | M6 |
| 14 | 391038X1 | 3 | Washer | Diameter 6-18 X 1,5 |
| 15 | 4275096M2 | 1 | Tube | |
| 16 | 4275094M1 | 1 | Tube | |
| 17 | 4275095M1 | 1 | Tube | |
| 18 | 4275097M1 | 1 | Tube | |
| 19 | 4275098M1 | 1 | Tube | |
| 20 | **4275671M1** | 1 | Transducer | |
| 21 | 3907427M1 | 1 | Gasket | (20) |
| 22 | 4276152M2 | 1 | Hydr. Hose | Length 1450 MM |
| 23 | 4276156M1 | 1 | Hydr. Hose | Length 2100 MM |
| 24 | 4276155M1 | 1 | Hydr. Hose | Length 1700 MM |
| 25 | 4277412M2 | 1 | Hydr. Hose | Length 1700 MM |
| 26 | 3011038X91 | 4 | Union | M14X1.5 |
| 27 | 338762X1 | 1 | Seal | (26) |
| 28 | 4276158M1 | 1 | Hydr. Hose | Length 1700 MM |
| 29 | 3011543X91 | 1 | Union | M16X1.5 |
| 30 | 3011144X1 | 1 | O Ring | (29) |
| 31 | 3011547X91 | 1 | Union | M16X1.5 |
| 32 | 338763X1 | 1 | Seal | (31) |
| 33 | 4276157M1 | 1 | Hydr. Hose | Length 400 MM |


1-WG17-004-A

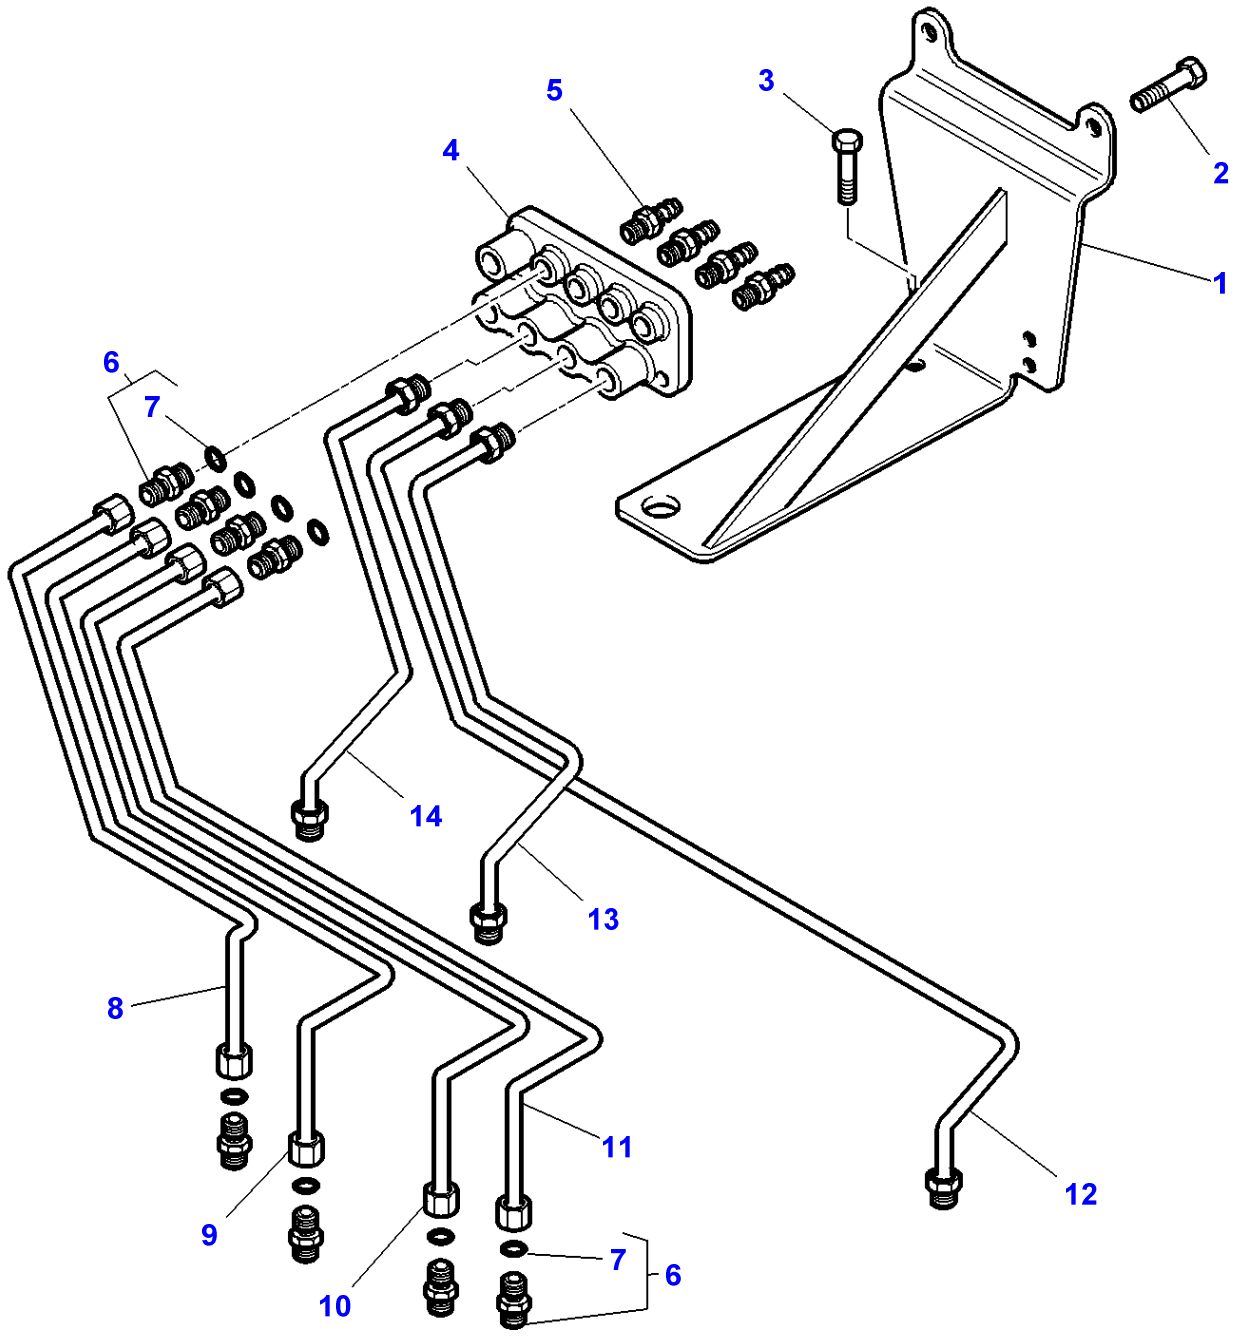

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275565M2 | 1 | Support | |
| 2 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 3 | 3009493X1 | 1 | Hex. Sock. Screw | M10 X 30 |
| 4 | 903.150.070.010 | 1 | Center Piece | |
| 5 | G514.100.100.060 | 4 | Breather Valve | |
| 6 | 338906X91 | 8 | Union | |
| 7 | 338760X1 | 1 | O Ring | (6) |
| 8 | 4274999M1 | 1 | Tube | |
| 9 | 4274998M1 | 1 | Tube | |
| 10 | 4274997M1 | 1 | Tube | |
| 11 | 4274996M1 | 1 | Tube | |
| 12 | 4274986M1 | 1 | Tube | |
| 13 | 4275000M1 | 1 | Tube | |
| 14 | 4274985M1 | 1 | Tube | |

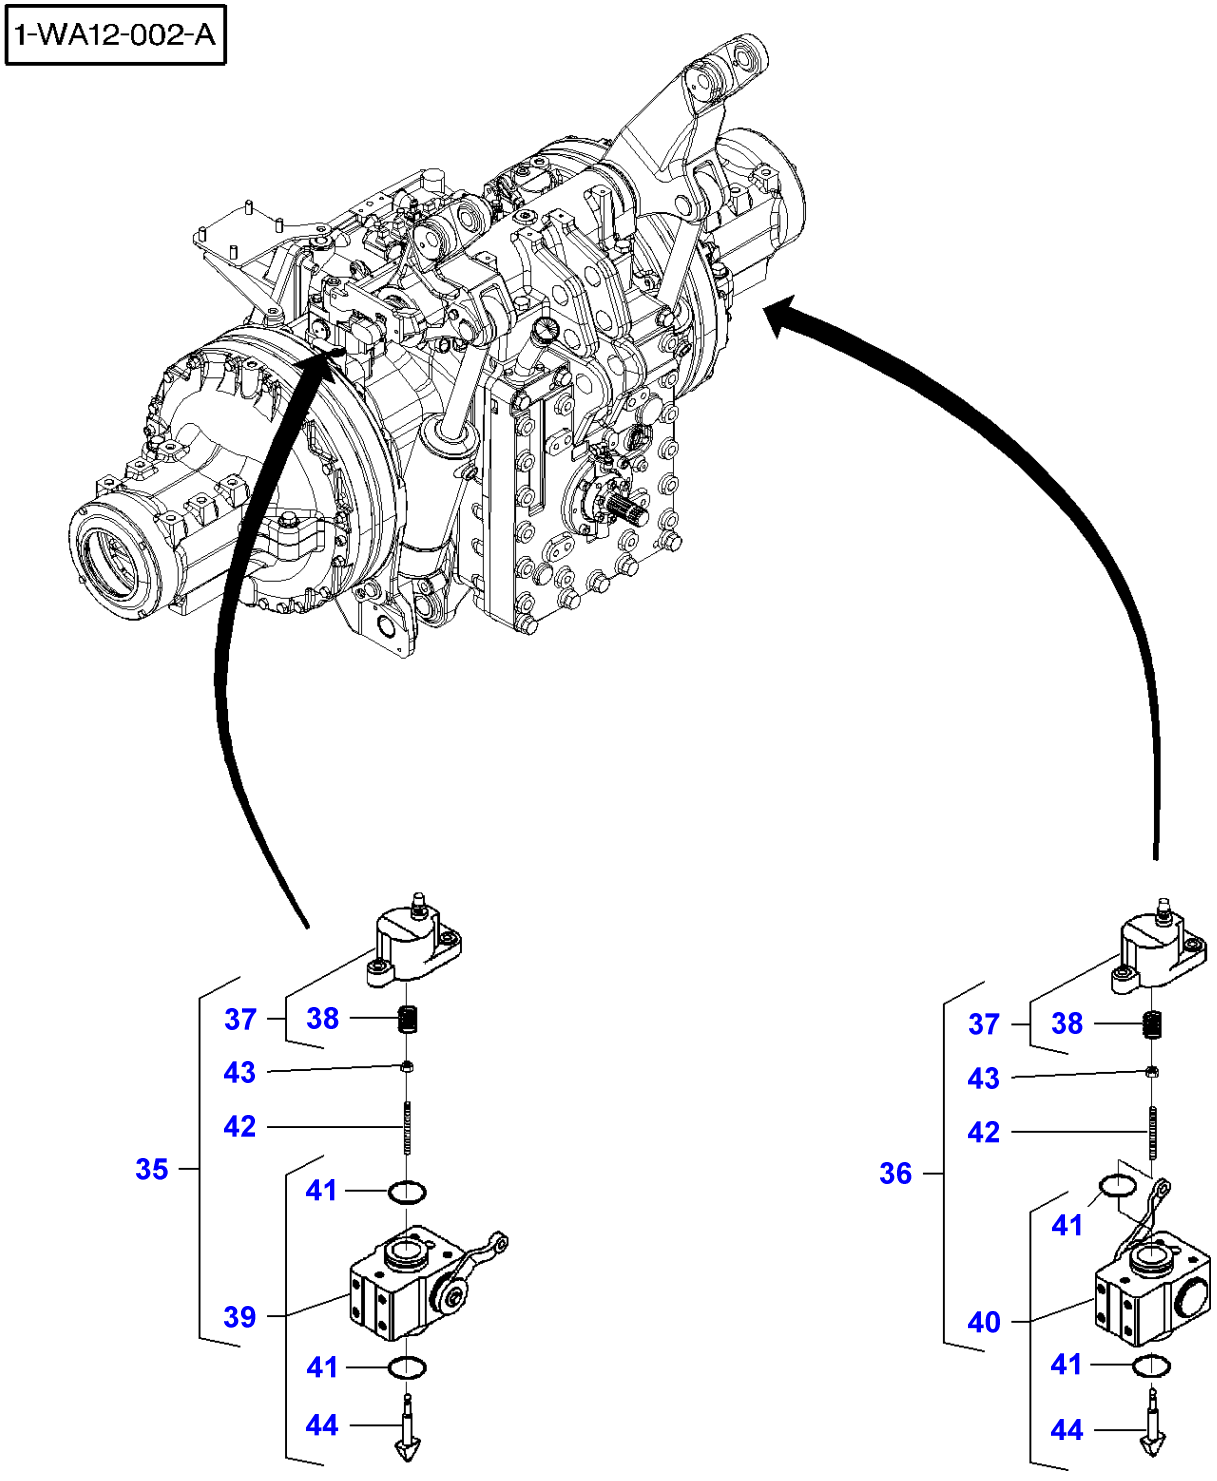
1-WA12-002-A
37
38
43
42
35
41
39
41
44
37
38
43
42
36
41
40
41
44


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 35 | G903.150.070.100 | 1 | Cylinder | [A] |
| 36 | G903.150.070.110 | 1 | Cylinder | [B] |
| 37 | F716.150.070.050 | 1 | Cyl Head Part | |
| 38 | F822.100.070.060 | 1 | Comp.Spring | (37) |
| 39 | G822.100.070.380 | 1 | Wheel Cylinder | [C] |
| 40 | G822.100.070.390 | 1 | Wheel Cylinder | [C] |
| 41 | F822.100.070.040 | 2 | O Ring | |
| 42 | F524.101.070.140 | 1 | Grub Screw | |
| 43 | X428.202.839.000 | 1 | Nut | M10 |
| 44 | F822.100.070.030 | 1 | Wedge | |

**FOOTNOTE [A]** INCLUDES REF : 37 TO 39-41 TO 44
**FOOTNOTE [B]** INCLUDES REF : 37-38-40 TO 44
**FOOTNOTE [C]** INCLUDES REF : 41-44

1-WG80-002-A

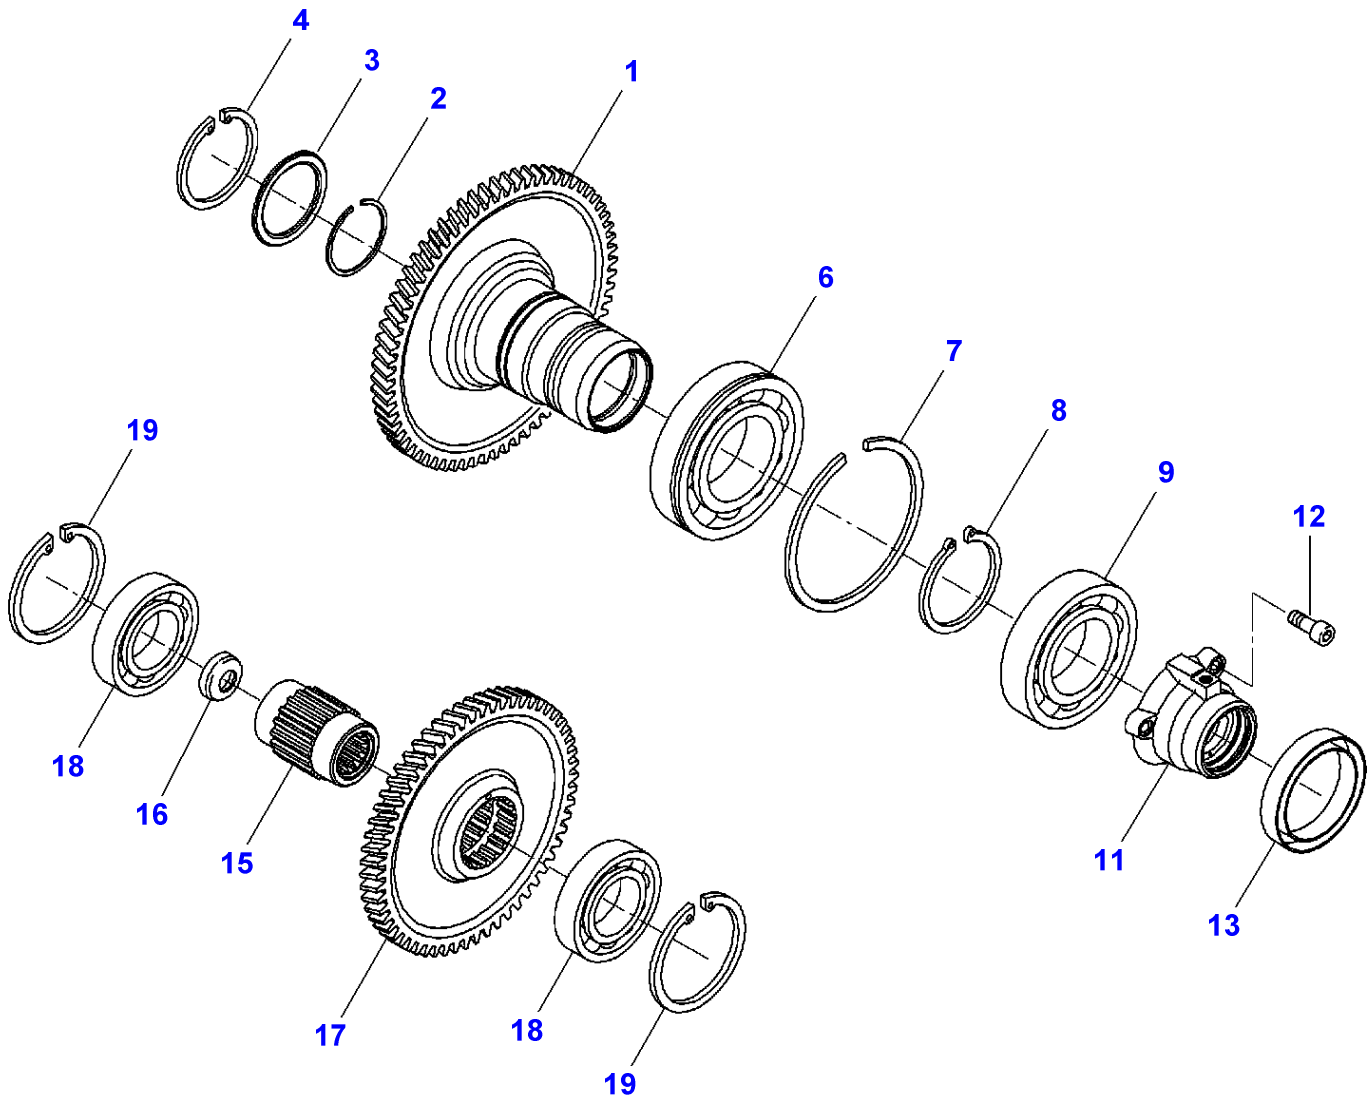


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 903.100.490.050 | 1 | Spur Gear | |
| 2 | X533.212.000.000 | 1 | Snapring | |
| 3 | 916.100.490.040 | 1 | Disc | |
| 4 | **X530.106.046.000** | 1 | Circlip | Diameter 52 X 2 |
| 6 | X605.511.411.003 | 1 | Ball Bearing | |
| 7 | X532.503.846.000 | 1 | Snapring | |
| 8 | X530.006.146.000 | 1 | Circlip | Diameter 55 X 2 |
| 9 | X605.505.900.000 | 1 | Ball Bearing | |
| 11 | 903.100.490.010 | 1 | Housing | |
| 12 | X485.013.205.000 | 3 | Hex. Sock. Screw | M10 X 30 |
| 13 | X550.108.900.000 | 1 | Shaft Seal | 50 X 65 X 8 |
| 15 | 903.100.490.080 | 1 | Shaft | |
| 16 | 903.100.490.170 | 1 | Cover | |
| 17 | 903.100.490.060 | 1 | Spur Gear | |
| 18 | X605.505.811.000 | 2 | Ball Bearing | |
| 19 | X530.107.246.000 | 2 | Circlip | Diameter 75 X 2,5 |

1-WG82-002-A

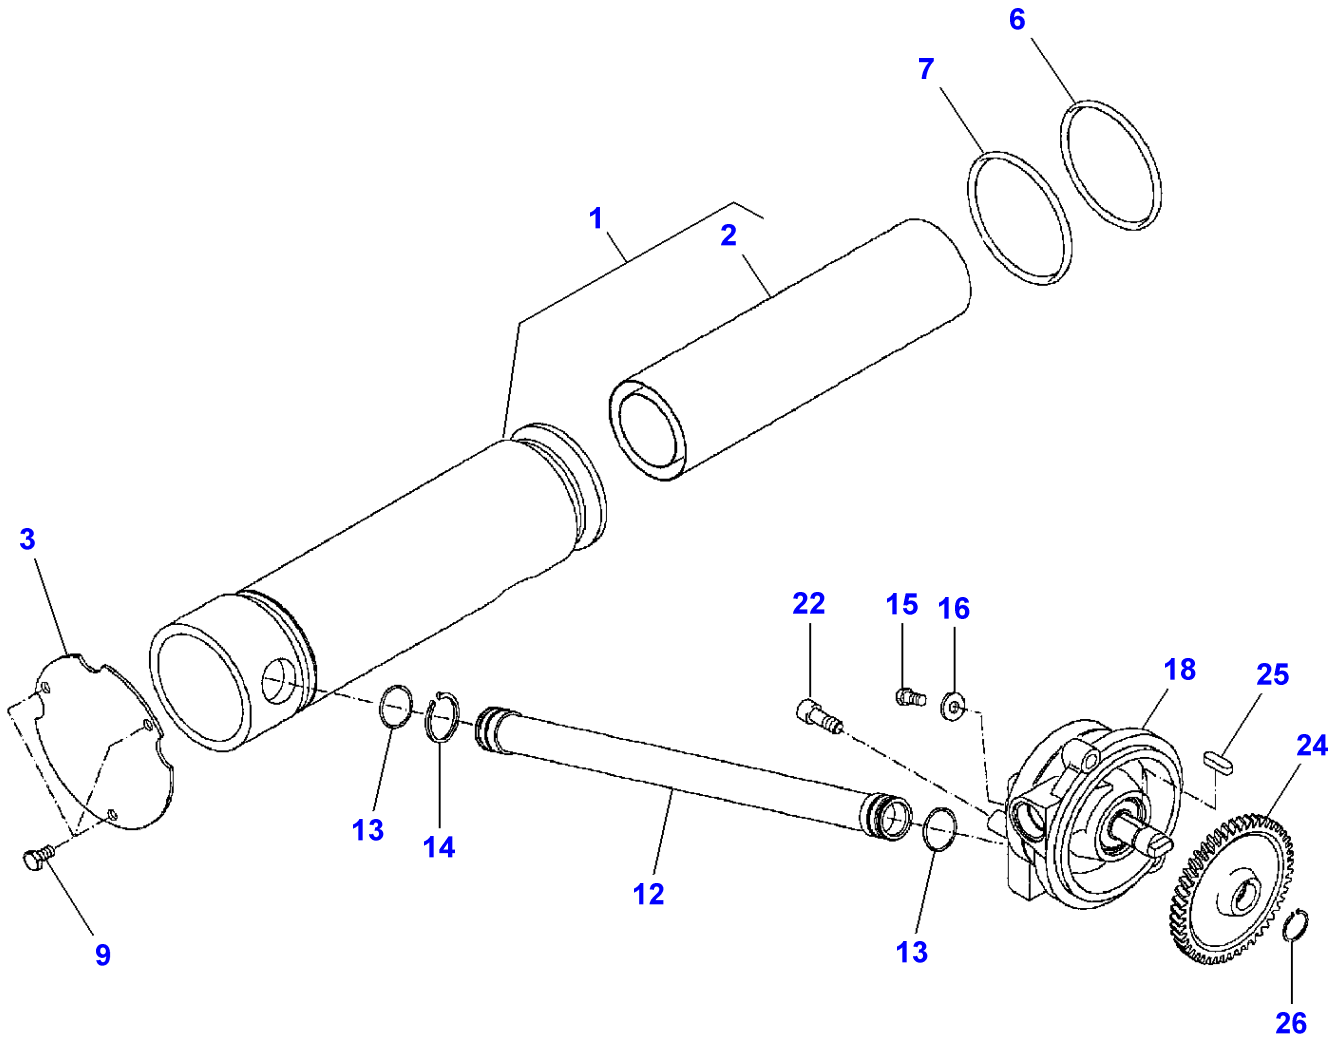


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G916.100.490.021 | 1 | Suction Filter | |
| 2 | **F916.100.490.010** | 1 | Filter | (1) |
| 3 | 916.100.490.180 | 1 | Cover | |
| 6 | **X548.987.066.000** | 1 | O Ring | Diameter 105 X 3 |
| 7 | **X548.989.201.000** | 1 | O Ring | Diameter 108 X 3 |
| 9 | X487.527.941.000 | 3 | Hex. Sock. Screw | M8 X 25 |
| 12 | H916.100.490.010 | 1 | Pipe | |
| 13 | X548.878.200.000 | 2 | O Ring | Diameter 27 X 3 |
| 14 | X530.004.146.000 | 1 | Circlip | Diameter 32 X 1,5 |
| 15 | X487.526.841.000 | 1 | Hex. Sock. Screw | M8 X 16 |
| 16 | 178.810.030.450 | 1 | Disc | |
| 18 | G916.100.490.011 | 1 | Oil Pump | |
| 22 | X485.013.305.000 | 2 | Hex. Sock. Screw | M10 X 35 |
| 24 | 903.100.490.100 | 1 | Spur Gear | |
| 25 | 178.107.080.030 | 1 | Key Parallel | |
| 26 | X530.215.446.000 | 1 | Circlip | Diameter 20 X 1,5 |

1-WG92-001-A

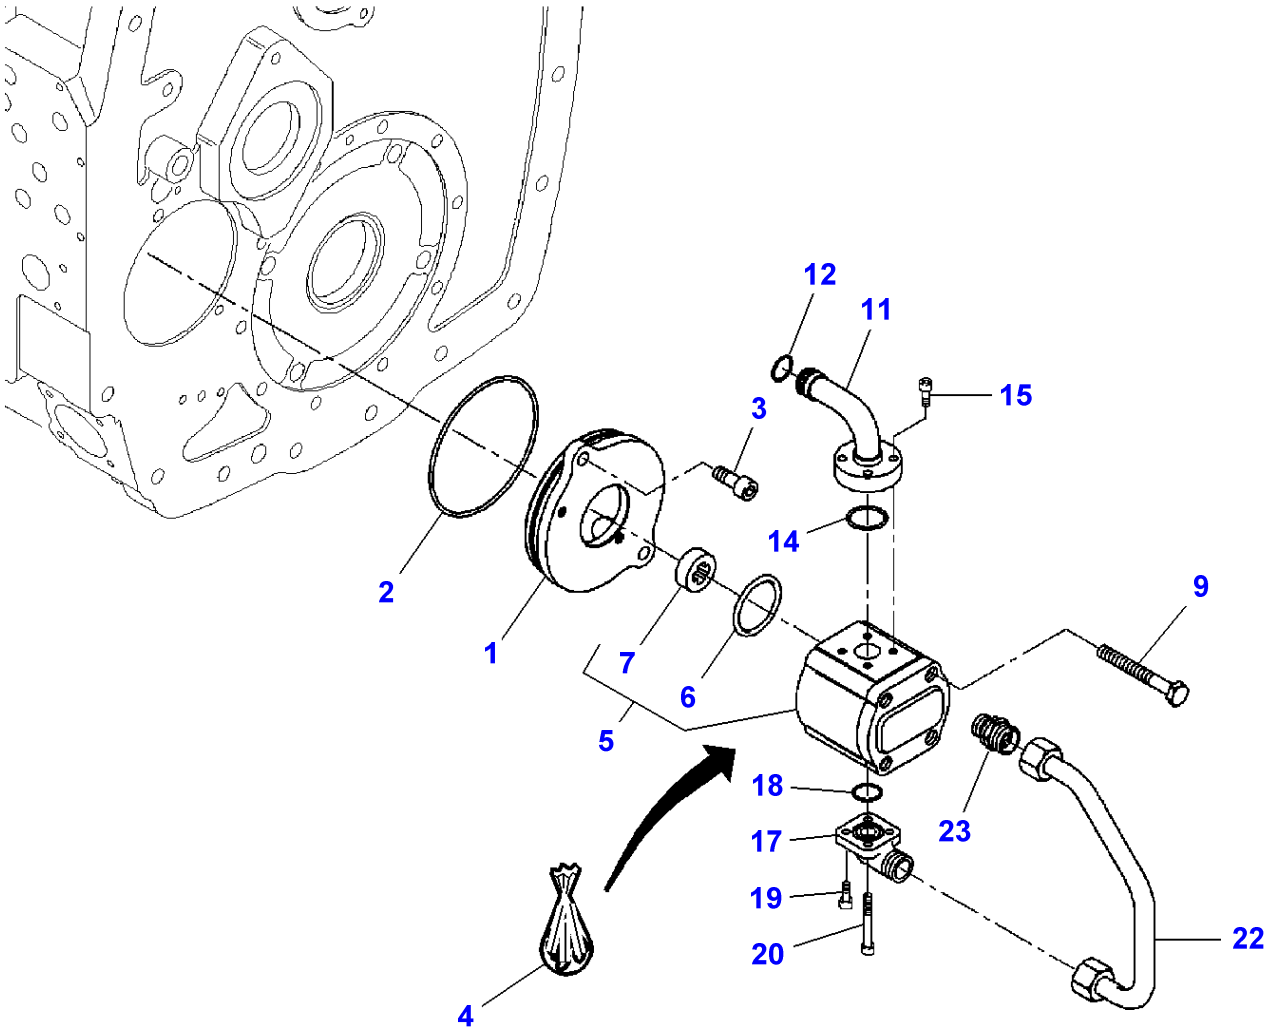


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 916.100.490.131 | 1 | Cover | |
| 2 | X548.995.902.000 | 1 | O Ring | Diameter 115 X 2,5 |
| 3 | X485.013.205.000 | 2 | Hex. Sock. Screw | M10 X 30 |
| 4 | F279.940.050.040 | 1 | Kit, Joint | |
| 5 | G916.100.490.030 | 1 | Gear Pump | |
| 6 | F916.100.490.020 | 1 | O Ring | (5) |
| 7 | F279.940.050.030 | 1 | Driving | (5) |
| 9 | X487.534.001.000 | 2 | Hex. Sock. Screw | M10 X 105 |
| 11 | H718.100.490.010 | 1 | Union | |
| 12 | X548.848.016.000 | 1 | O Ring | Diameter 16 X 3 |
| 14 | X548.868.966.000 | 1 | O Ring | Diameter 22,3 X 2,4 |
| 15 | X485.005.305.000 | 4 | Hex. Sock. Screw | M6 X 25 |
| 17 | X593.816.300.000 | 1 | Flanged Socket | |
| 18 | X548.860.601.000 | 1 | O Ring | Diameter 20 X 2,5 |
| 19 | X485.004.405.000 | 2 | Hex. Sock. Screw | M16 X 16 |
| 20 | X485.005.405.000 | 2 | Hex. Sock. Screw | M16 X 30 |
| 22 | H916.100.490.030 | 1 | Tube | |
| 23 | X592.501.300.000 | 1 | Thread. Part | |

1-WG83-002-A

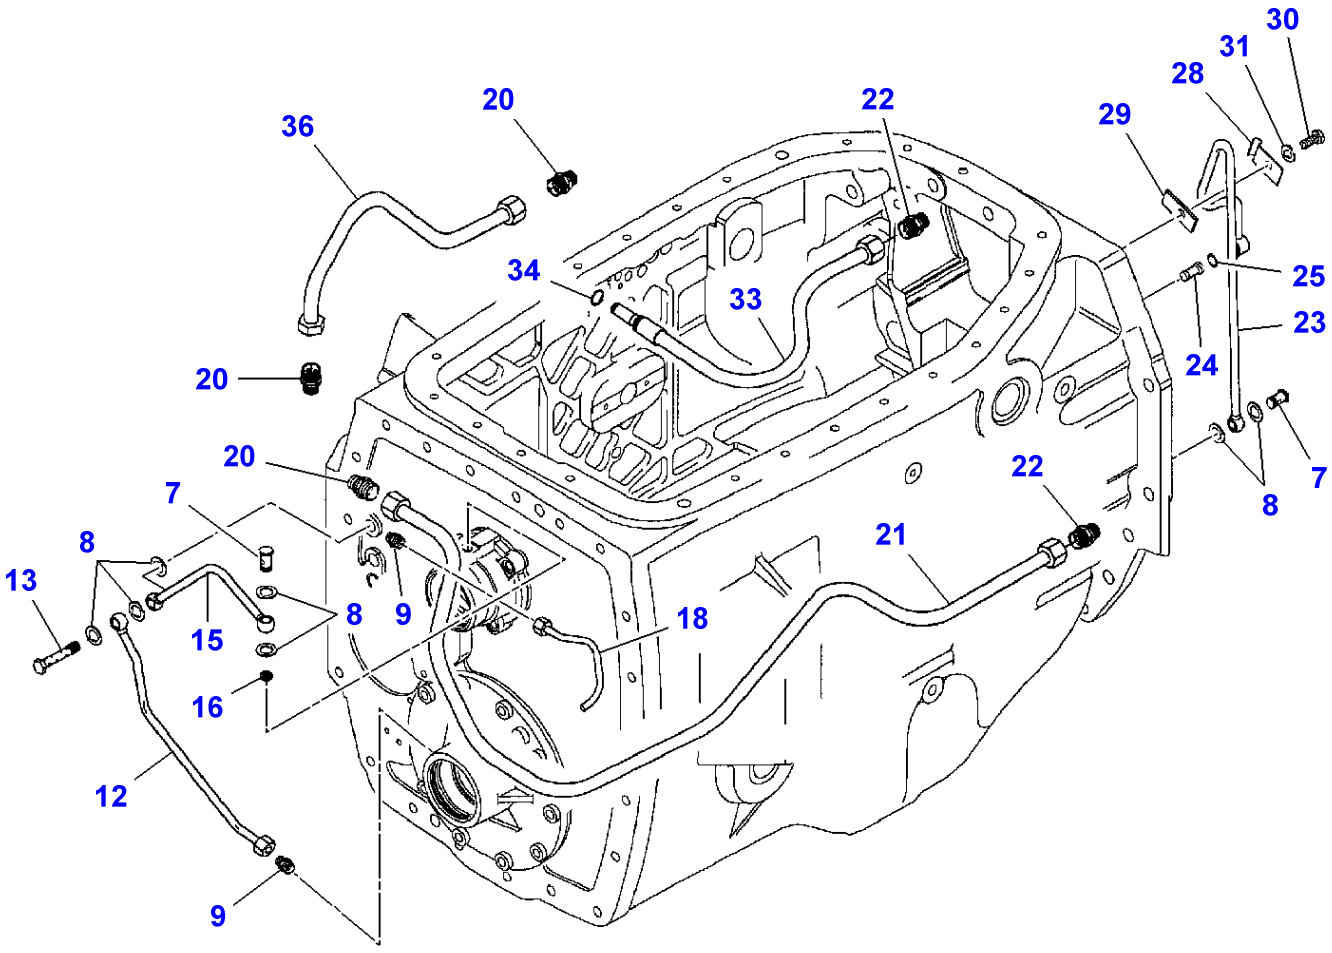


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 7 | X494.515.300.000 | 2 | Banjo Bolt | |
| 8 | X540.003.678.000 | 7 | Ring | |
| 9 | X592.501.000.000 | 2 | Thread. Part | |
| 12 | H903.100.470.010 | 1 | Pipe | [F] |
| 13 | X494.515.201.000 | 1 | Banjo Bolt | |
| 15 | H916.100.470.131 | 1 | Pipe | [D] |
| 16 | 916.100.470.121 | 1 | Nozzle | |
| 18 | H916.100.470.110 | 1 | Pipe | [A] |
| 20 | X592.501.300.000 | 3 | Thread. Part | |
| 21 | H916.100.470.121 | 1 | Pipe | [C] |
| 22 | X592.501.303.000 | 2 | Thread. Part | M16 X 1,5 |
| 23 | H916.100.470.100 | 1 | Pipe | [B] |
| 24 | 198.100.080.520 | 1 | Lub.Oil Pipe | |
| 25 | X548.818.015.000 | 1 | O Ring | Diameter 8 X 2,5 |
| 28 | 268.600.130.110 | 1 | Clip | |
| 29 | 025.840.020.110 | 1 | Plate | |
| 30 | X487.526.841.000 | 1 | Hex. Sock. Screw | M8 X 16 |
| 31 | X450.006.308.000 | 1 | Washer | |
| 33 | H916.100.620.121 | 1 | Pressure Hose | [C] |
| 34 | X530.014.200.000 | 1 | Circlip | Diameter 16 X 1,2 |
| 36 | H916.100.620.011 | 1 | Pipe | [E] |

**FOOTNOTE [A]** CONTROL PUMP
**FOOTNOTE [B]** BEVEL GEAR LUBRICATION
**FOOTNOTE [C]** REAR AXLE
**FOOTNOTE [D]** INPUTSHAFT
**FOOTNOTE [E]** DISTRIBUTOR
**FOOTNOTE [F]** BRAKE TRANSMISSION SHAFT

1-WG84-002-A

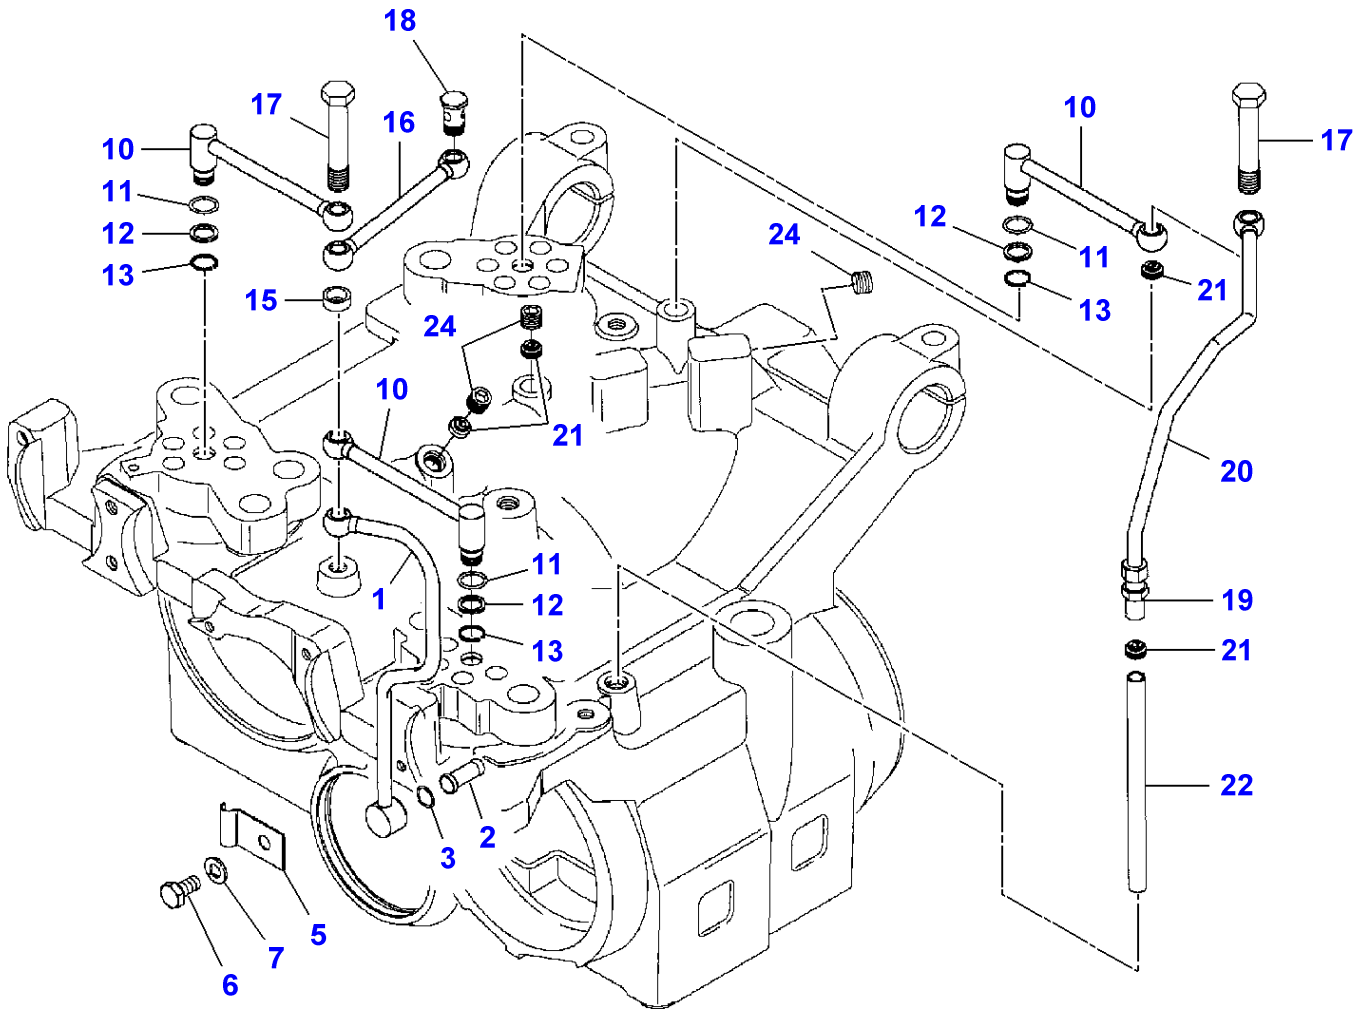
18
17
16
10
11
12
13
15
24
10
21
1
11
12
13
2
3
5
7
6
10
17
12
11
13
21
24
20
19
21
22


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | H916.100.470.230 | 1 | Pipe | [A] |
| 2 | 198.100.080.520 | 1 | Lub.Oil Pipe | |
| 3 | X548.818.015.000 | 1 | O Ring | Diameter 8 X 2,5 |
| 5 | 268.600.130.110 | 1 | Clip | |
| 6 | X487.527.741.000 | 1 | Hex. Sock. Screw | M8 X 20 |
| 7 | X450.006.308.000 | 1 | Washer | |
| 10 | H916.100.470.200 | 3 | Pipe | |
| 11 | X548.833.602.000 | 3 | O Ring | Diameter 12,3 X 2,4 |
| 12 | X534.535.346.000 | 3 | Backup Ring | |
| 13 | X530.001.146.000 | 3 | Circlip | Diameter 12 X 1 |
| 15 | 225.100.100.160 | 1 | Sleeve | |
| 16 | H916.100.470.220 | 1 | Pipe | |
| 17 | 916.100.470.210 | 2 | Banjo Bolt | |
| 18 | X494.515.300.000 | 1 | Banjo Bolt | |
| 19 | X592.501.000.000 | 1 | Thread. Part | |
| 20 | X591.652.500.000 | 1 | Pressure Hose | |
| 21 | 916.100.470.121 | 4 | Nozzle | |
| 22 | 916.100.470.240 | 1 | Pipe | |
| 24 | X483.500.600.000 | 3 | Plug | M12 X 1,5 |

**FOOTNOTE [A]** MAIN SHAFT

1-WG94-001-A

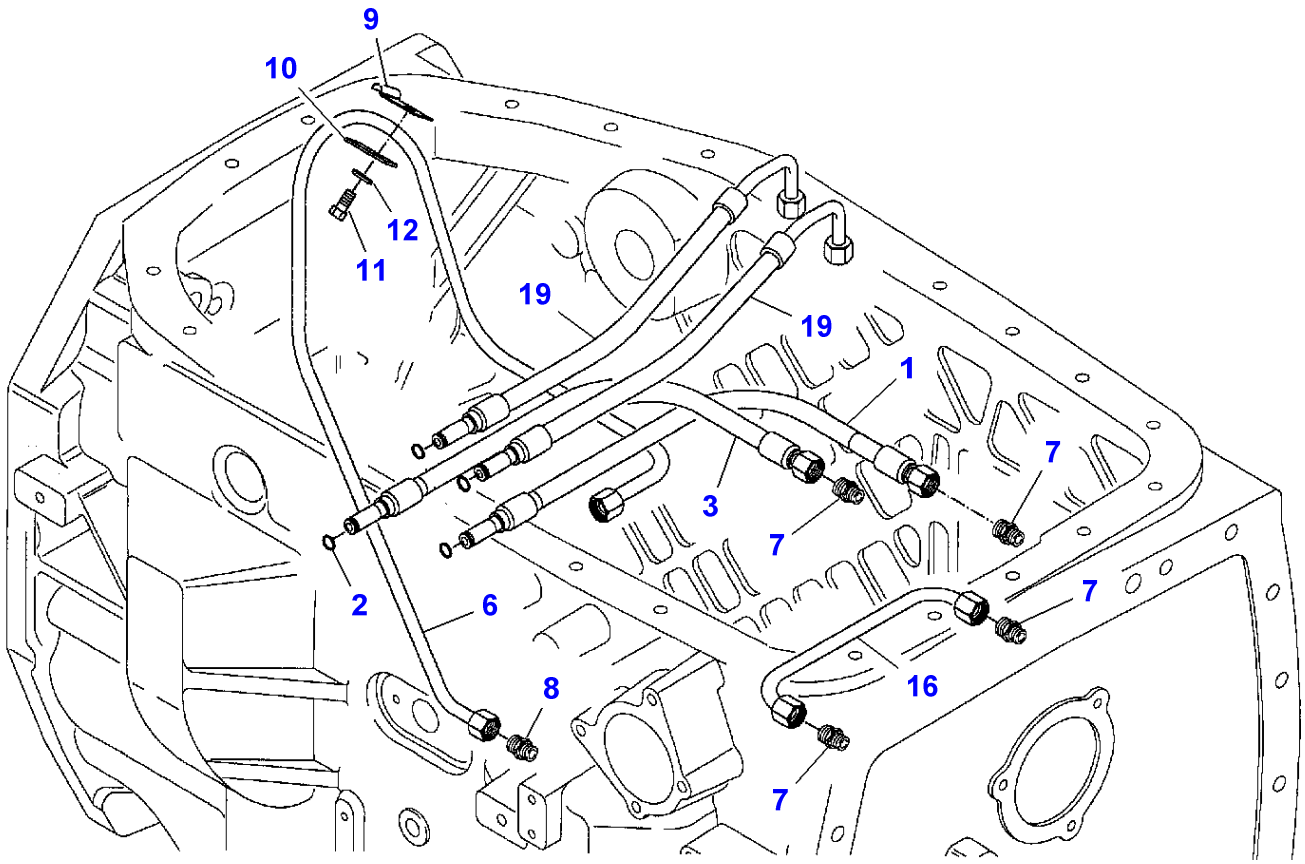


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | H916.100.620.101 | 1 | Pressure Hose | [A] |
| 2 | X531.001.146.000 | 5 | Circlip | Diameter 12 X 1,0 |
| 3 | H916.100.620.101 | 1 | Pressure Hose | [D] |
| 6 | H916.101.620.011 | 1 | Pipe | [C] |
| 7 | X592.501.100.000 | 4 | Thread. Part | |
| 8 | X592.502.500.000 | 1 | Thread. Part | |
| 9 | 268.600.130.110 | 1 | Clip | |
| 10 | 025.840.020.110 | 1 | Plate | |
| 11 | X487.527.741.000 | 1 | Hex. Sock. Screw | M8 X 20 |
| 12 | X450.006.308.000 | 1 | Washer | |
| 16 | H916.100.620.071 | 1 | Pipe | [A] |
| 19 | H411.100.620.100 | 2 | Pressure Hose | [B] |

**FOOTNOTE [A]** REGULATOR
**FOOTNOTE [B]** SELECTOR RAM
**FOOTNOTE [C]** CONTROL
**FOOTNOTE [D]** SPEED RESTRICTOR

1-WG94-002-A

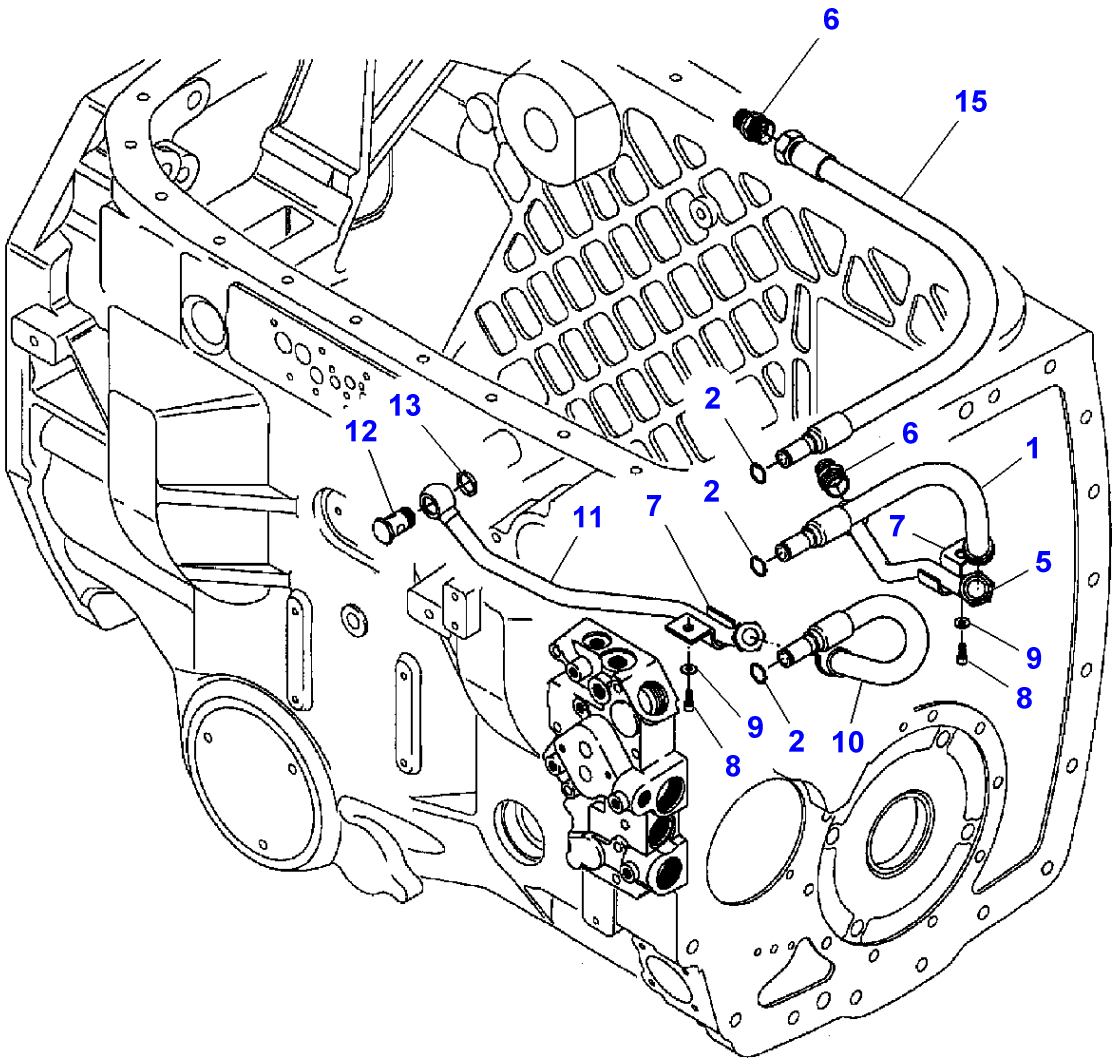


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | H916.100.620.130 | 1 | Pressure Hose | [A] |
| 2 | X530.014.200.000 | 3 | Circlip | Diameter 16 X 1,2 |
| 5 | H916.101.620.020 | 1 | Pipe | [A] |
| 6 | X592.501.300.000 | 2 | Thread. Part | |
| 7 | 238.950.010.010 | 2 | Clip | |
| 8 | X485.013.105.000 | 2 | Hex. Sock. Screw | M10 X 25 |
| 9 | X450.907.508.000 | 2 | Disc | |
| 10 | H916.100.620.142 | 1 | Pressure Hose | [B] |
| 11 | H916.100.620.061 | 1 | Pipe | [B] |
| 12 | 205.950.010.340 | 1 | Banjo Bolt | |
| 13 | X542.541.001.000 | 1 | Seal | |
| 15 | H916.100.620.121 | 1 | Pressure Hose | [C] |

**FOOTNOTE [A]** FEED SUPPLY
**FOOTNOTE [B]** OUTPUT
**FOOTNOTE [C]** HOUSING

1-WG85-002-A

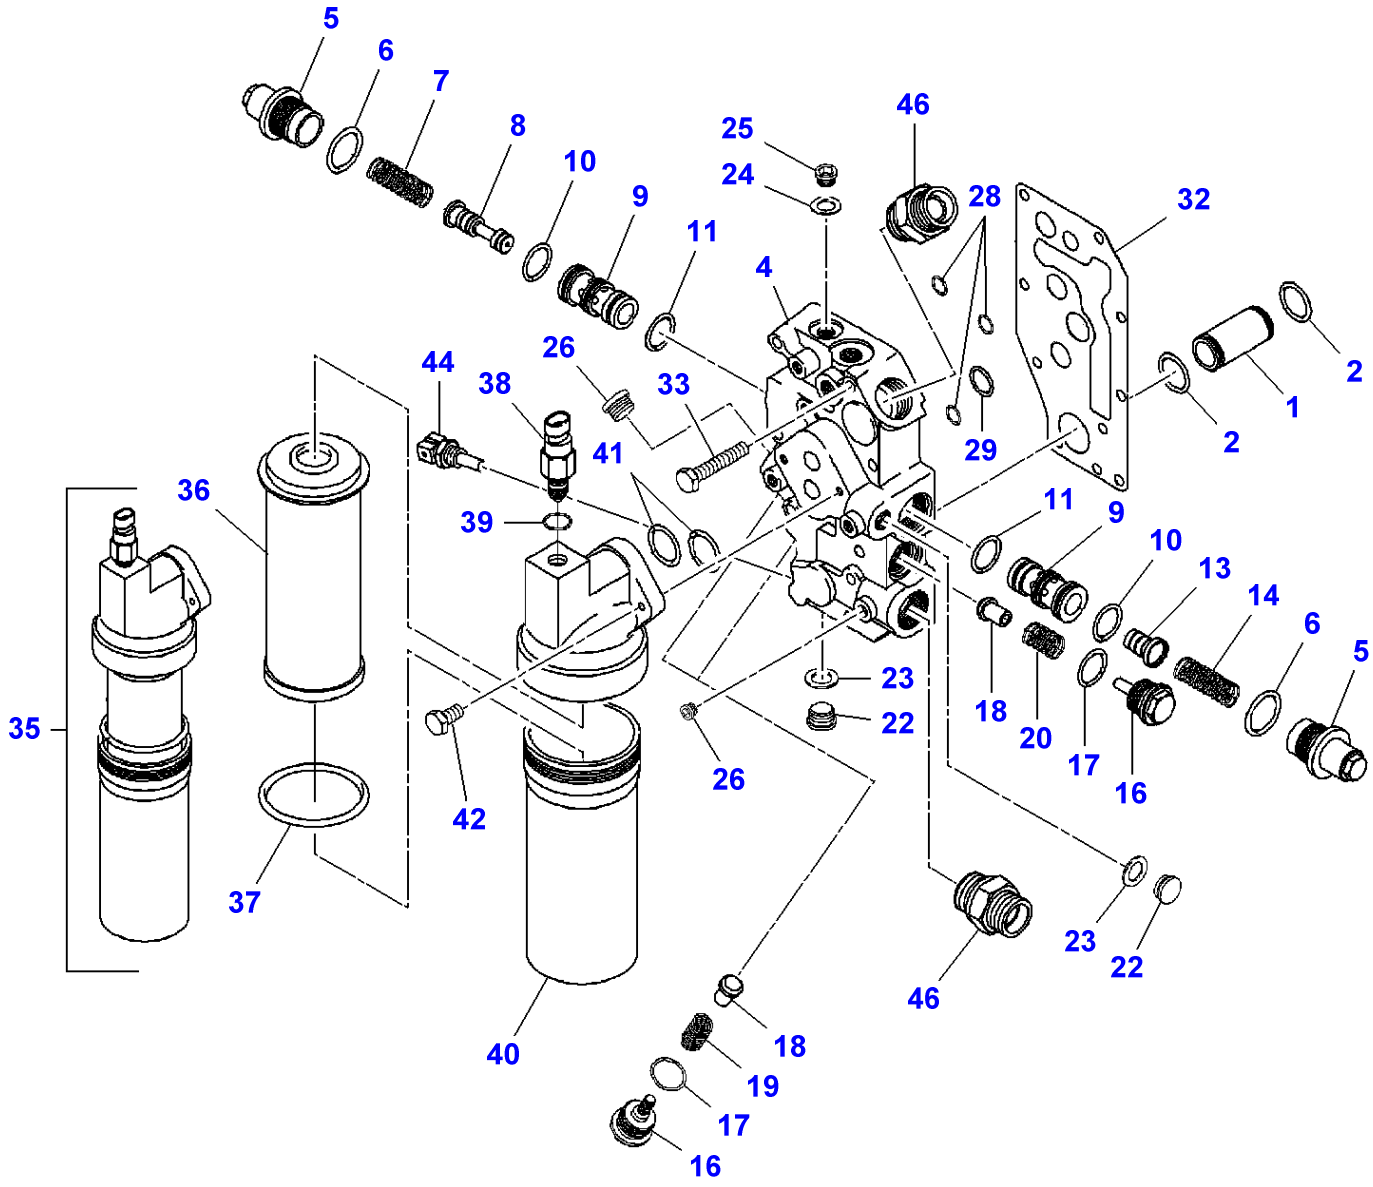
5
6
7
8
10
9
11
25
24
46
28
32
4
26
44
38
33
41
29
2
1
2
36
39
11
9
10
13
14
6
5
35
23
22
18
20
17
16
26
42
37
23
22
46
40
18
19
17
16

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Hydraulic Valve Block - Pressure Filter Page 070-0090

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 916.100.600.220 | 1 | Pipe | |
| 2 | X548.871.400.000 | 2 | O Ring | Diameter 24 X 2,5 |
| 4 | G916.100.600.020 | 1 | Valve Block | [A] |
| 5 | 395.100.600.040 | 2 | Sleeve | (4) |
| 6 | X548.881.466.000 | 2 | O Ring | (4)<br>Diameter 28 X 3 |
| 7 | 916.100.600.030 | 1 | Comp.Spring | (4) |
| 8 | 916.100.600.061 | 1 | Piston | (4) |
| 9 | 395.100.600.020 | 2 | Cartridge | (4) |
| 10 | X548.871.466.000 | 2 | O Ring | (4)<br>Diameter 24 X 2,5 |
| 11 | X548.870.566.000 | 2 | O Ring | (4)<br>Diameter 23,3 X 2,4 |
| 13 | 916.100.600.070 | 1 | Piston | (4) |
| 14 | 916.100.600.040 | 1 | Comp.Spring | (4) |
| 16 | 916.100.600.100 | 3 | Screw | (4) |
| 17 | X548.868.866.000 | 3 | O Ring | (4)<br>Diameter 22,2 X 3 |
| 18 | 514.100.600.080 | 3 | Cone | (4) |
| 19 | 916.100.600.050 | 3 | Comp.Spring | (4) |
| 20 | 514.100.600.090 | 1 | Comp.Spring | (4) |
| 22 | X483.801.600.000 | 2 | Screw | (4)<br>M18 |
| 23 | X540.005.478.000 | 2 | Ring | (4)<br>Diameter 18 X 22 |
| 24 | X540.004.278.000 | 1 | Ring | (4)<br>Diameter 14 X 20 |
| 25 | X483.800.800.000 | 1 | Plug | (4)<br>M14 |
| 26 | X483.900.000.000 | 6 | Screw | (4)<br>M10 |
| 28 | X548.829.200.000 | 3 | O Ring | (4)<br>Diameter 11 X 3 |
| 29 | X548.857.366.000 | 1 | O Ring | (4)<br>Diameter 18,72 X 2,62 |
| 32 | 916.100.600.210 | 1 | Gasket | |
| 33 | X486.528.705.000 | 8 | Hex. Sock. Screw | M8 X 60 |
| 35 | G916.100.600.044 | 1 | Filter | |
| 36 | **F916.100.600.010** | 1 | Filter Insert | (35) |
| 37 | **X548.960.666.000** | 1 | O Ring | (35)<br>Diameter 76 X 2,5 |
| 38 | **F916.100.600.040** | 1 | Switch | (35) |
| 39 | X548.833.602.000 | 1 | O Ring | (35)<br>Diameter 12,3 X 2,4 |
| 40 | F916.100.600.030 | 1 | Housing | (35) |
| 41 | X548.881.466.000 | 2 | O Ring | Diameter 28 X 3 |
| 42 | X487.528.105.000 | 2 | Hex. Sock. Screw | M8 X 30 |
| 44 | | 1 | Temp. Sensor | See Page - Reference Number 090-0085/38 |
| 46 | X592.501.600.000 | 2 | Thread. Part | |

**FOOTNOTE [A]** ORDER + 916 100 600 210

1-WG86-002-A

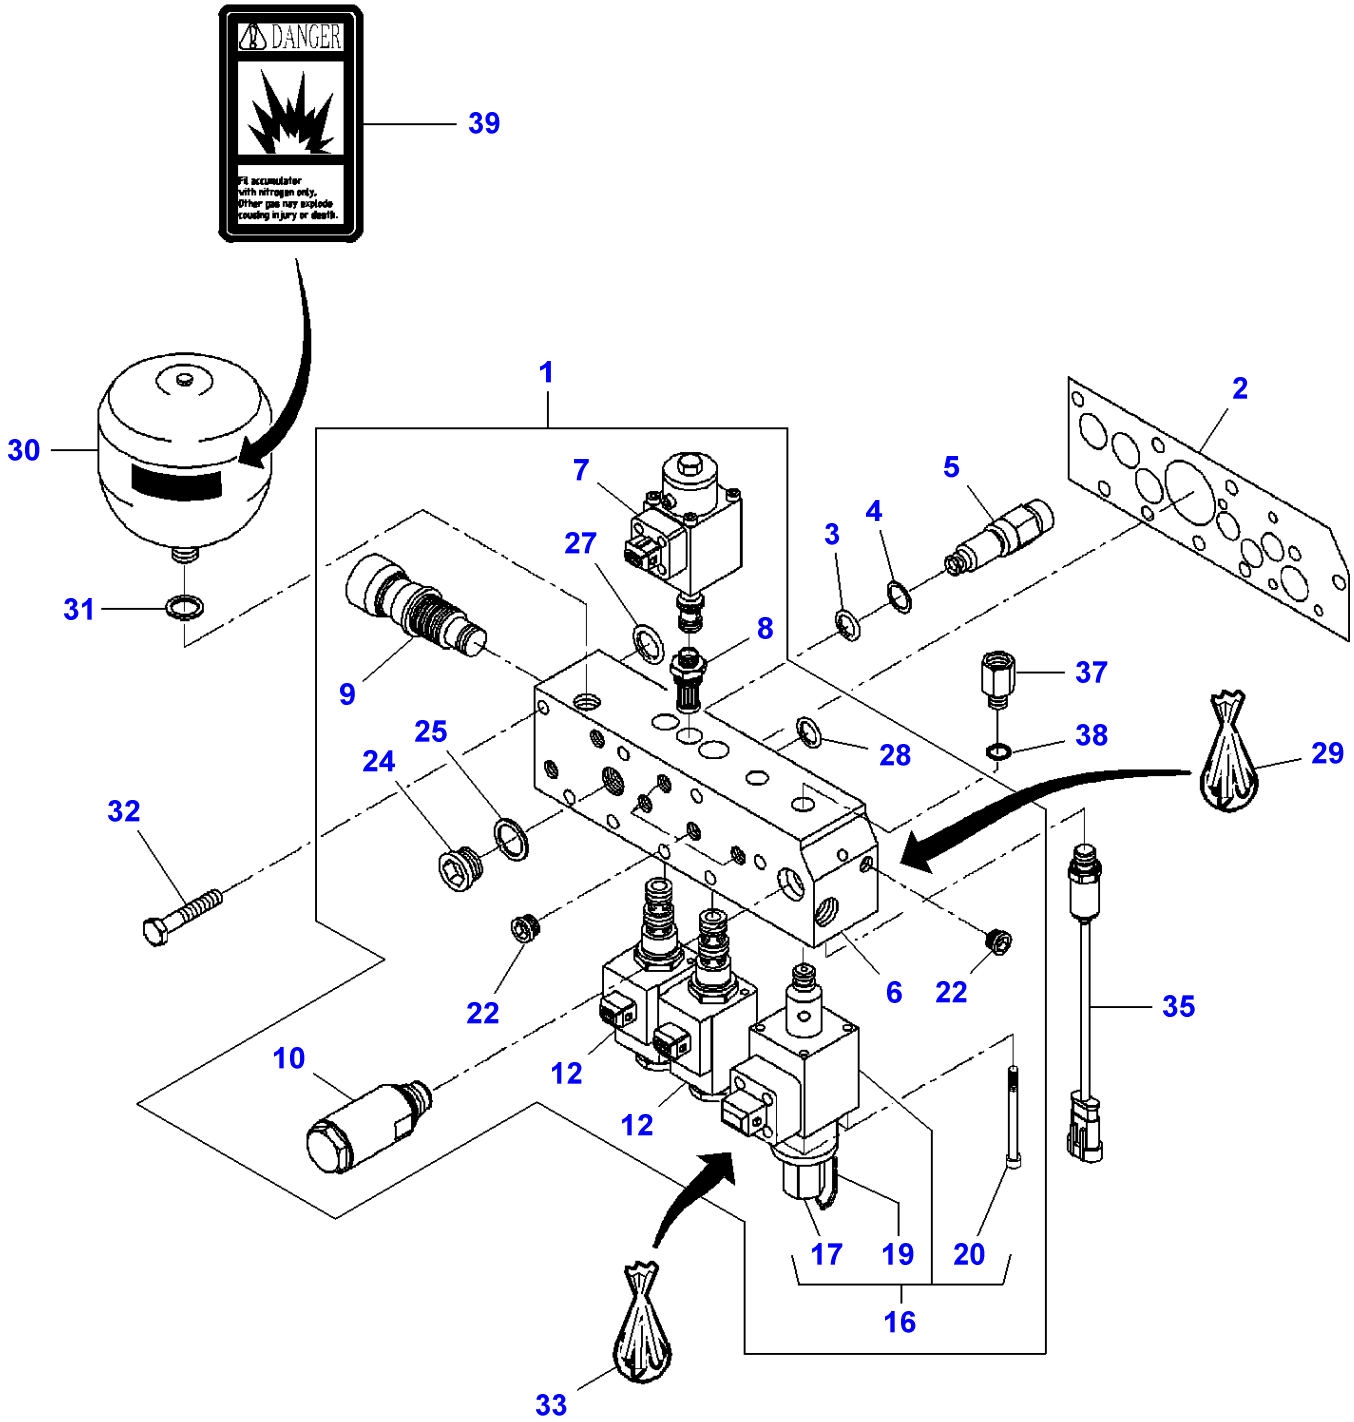
DANGER
Fit accumulator with nitrogen only. Other gas may explode causing injury or death.
39
30
31
1
2
7
27
3
4
5
8
9
37
38
28
25
24
29
32
22
6
22
35
10
12
12
17
19
20
16
33

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Hydraulic Valve Block Page 070-0095

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G916.101.600.012 | 1 | Valve Block | [E] |
| 2 | 916.100.600.201 | 1 | Gasket | |
| 3 | X548.809.016.000 | 1 | O Ring | Diameter 5,3 X 2,4 |
| 4 | X566.300.600.000 | 1 | Backup Ring | Diameter 10 X 5,9 X 1 |
| 5 | 716.100.600.091 | 1 | Union | |
| 6 | | 1 | Body | (1)<br>Not serviced,order REF. 1 |
| 7 | **G916.100.600.142** | 1 | Solenoid Valve | [B]<br>(1) |
| 8 | G916.100.600.180 | 1 | Insert Element | (1) |
| 9 | G916.101.600.020 | 1 | Discharge Valve | (1) |
| 10 | G718.100.600.113 | 1 | Slave Cylinder | (1) |
| 12 | **G312.100.600.110** | 2 | Directional Valv | [C]<br>(1) |
| 16 | **G716.100.600.122** | 1 | Discharge Valve | [A]<br>(1) |
| 17 | F716.100.600.080 | 1 | Cap Nut | (16) |
| 19 | F716.100.600.090 | 1 | Chain | (16) |
| 20 | F716.100.600.040 | 4 | Hex. Sock. Screw | (16) |
| 22 | X483.900.000.000 | 5 | Screw | (1)<br>M10 |
| 24 | X483.801.200.000 | 1 | Screw | (1)<br>M16 |
| 25 | X540.004.878.000 | 1 | Ring | (1)<br>Diameter 16 X 22 |
| 27 | X548.829.200.000 | 1 | O Ring | (1)<br>Diameter 11 X 3 |
| 28 | X548.813.100.000 | 4 | O Ring | (1)<br>Diameter 6,5 X 3 |
| 29 | F916.101.600.010 | 1 | Kit, Joint | |
| 30 | H916.100.600.010 | 1 | Pressure Tank | [F] |
| 31 | X540.004.278.000 | 1 | Ring | Diameter 14 X 20 |
| 32 | X486.528.705.000 | 7 | Hex. Sock. Screw | M8 X 60 |
| 33 | F716.100.600.100 | 1 | Kit, Joint | |
| 35 | | 1 | Transmitter | See Page - Reference Number 090-0085/25 |
| 37 | X596.135.200.000 | 1 | Thread. Part | |
| 38 | X540.003.878.000 | 1 | Ring | Diameter 12 X 18 |
| 39 | 3777021M3 | 1 | Decal | |

**FOOTNOTE [A]** CLUTCH
**FOOTNOTE [B]** EMERGENCY CONTROL
**FOOTNOTE [C]** GROUP GEAR SHIFTING
**FOOTNOTE [D]** ORDER + 718 150 151 300
**FOOTNOTE [E]** ORDER + 916 100 600 201
**FOOTNOTE [F]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

1-WG91-002-A

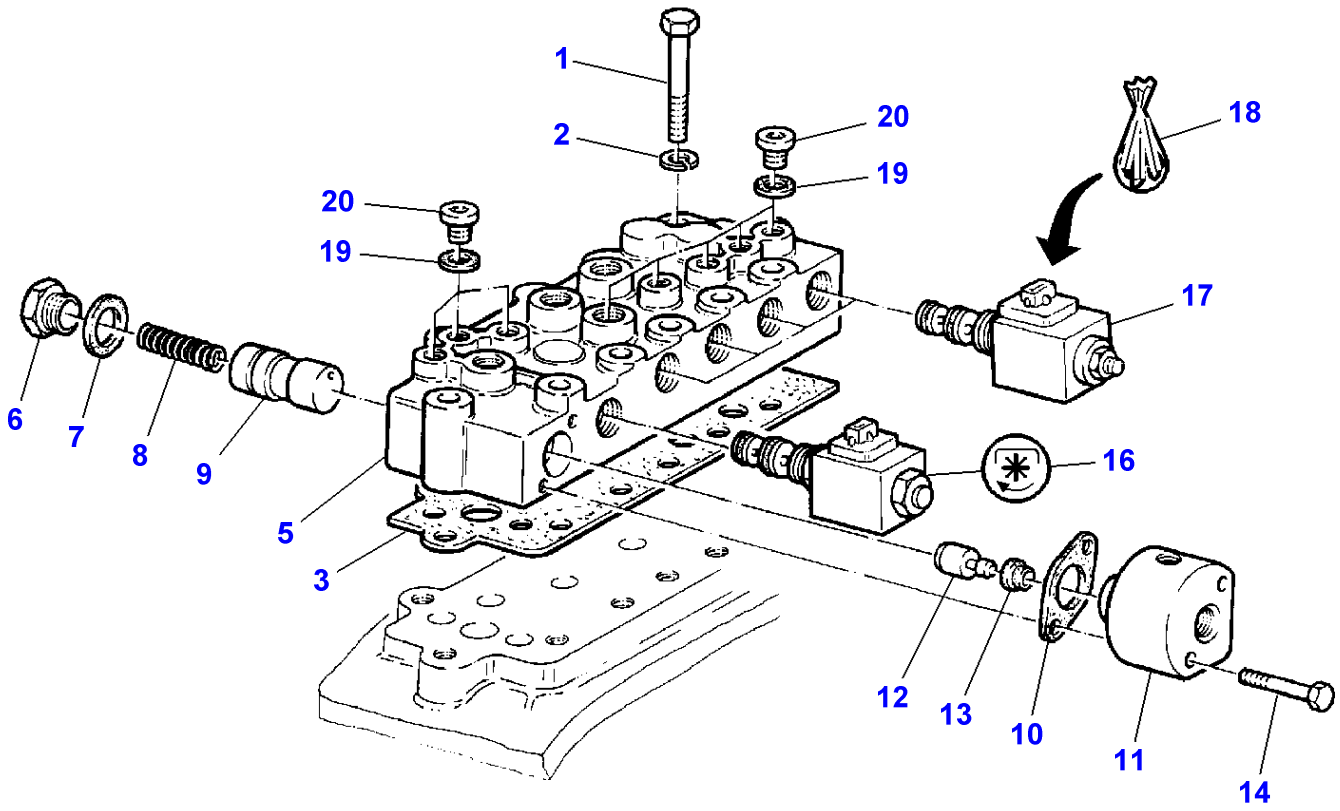

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Hydraulic Valve Block - Solenoid Valve - Up to Serial or Engine Number 903/0104 Page 070-0100

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X486.529.005.000 | 12 | Hex. Sock. Screw | M8 X 70 |
| 2 | X520.803.901.000 | 12 | Lock Washer | |
| 3 | 822.100.600.021 | 1 | Gasket | |
| 5 | G926.150.600.100 | 1 | Valve Block | [A]<br>Repairs and replaces G916100600030 |
| 6 | X494.206.000.000 | 1 | Screw | (5)<br>M22 |
| 7 | X540.006.678.000 | 1 | Ring | (5) |
| 8 | 822.100.600.060 | 1 | Comp.Spring | (5) |
| 9 | 822.100.600.030 | 1 | Piston | (5) |
| 10 | 822.100.600.070 | 1 | Gasket | (5) |
| 11 | 822.100.600.051 | 1 | Timing Gear Case | (5) |
| 12 | 822.100.070.451 | 1 | Piston | (5) |
| 13 | X548.301.500.000 | 1 | V-Seal | (5) |
| 14 | X487.522.341.000 | 2 | Hex. Sock. Screw | (5)<br>M6 X 50 |
| 16 | **G716.150.200.060** | 1 | Valve. | (5) |
| 17 | **G411.151.600.020** | 4 | Directional Valv | [B,C,D,E,F]<br>(5) |
| 18 | F411.151.600.010 | 1 | Kit, Joint | (17)<br>ARGO-HYTOS |
| | F312.100.600.040 | 1 | Kit, Joint | (17)<br>BOSCH |
| | F312.100.600.050 | 1 | Kit, Joint | (17)<br>HYDAC |
| 19 | X540.003.078.000 | 8 | Ring | (5) |
| 20 | X483.800.000.000 | 8 | Screw | (5)<br>M10 |

**FOOTNOTE [A]** ORDER + 822 100 600 021
**FOOTNOTE [B]** DIFFERENTIAL LOCK
**FOOTNOTE [C]** POWER TAKE OFF 750 TR/MM
**FOOTNOTE [D]** POWER TAKE OFF 1000
**FOOTNOTE [E]** 4 WHEEL DRIVE
**FOOTNOTE [F]** PTO BRAKES

1-WG91-001-A

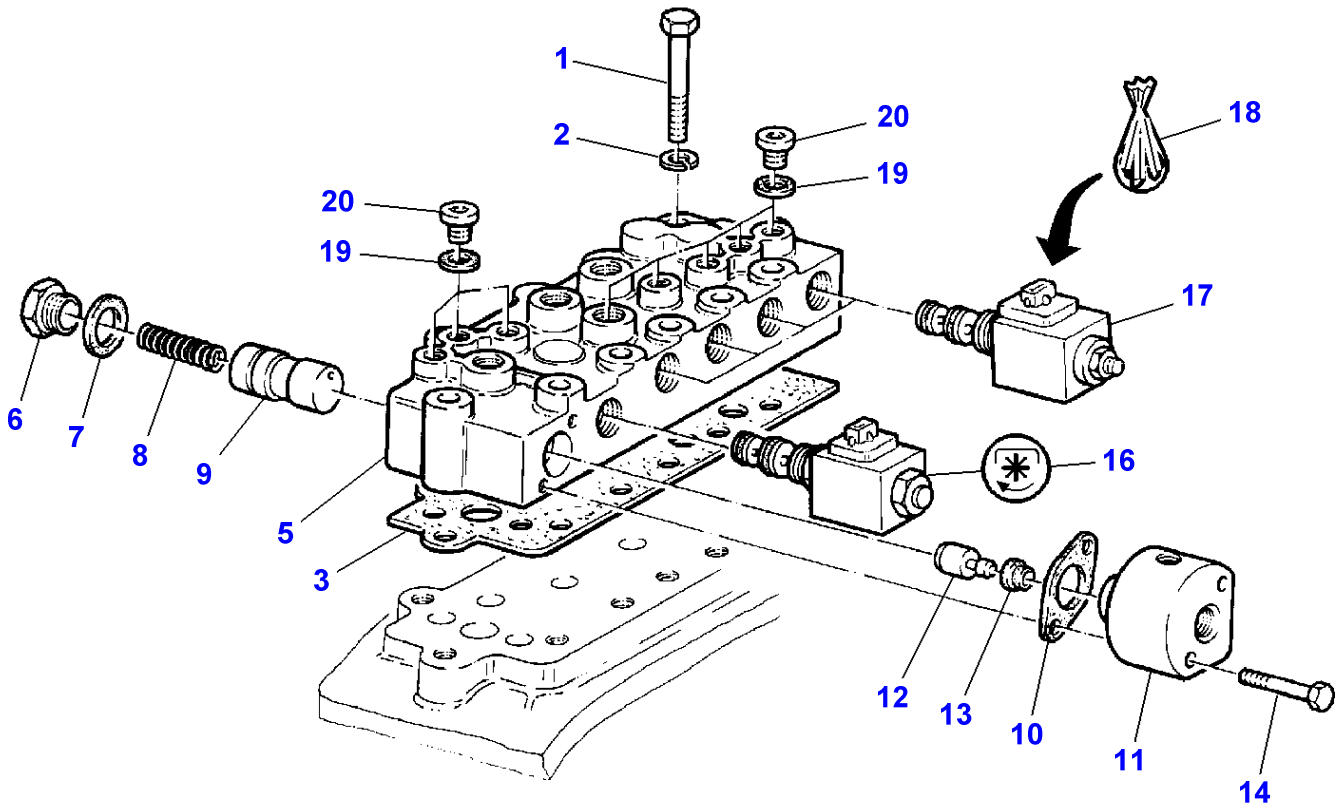

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Hydraulic Valve Block - Solenoid Valve - From Serial or Engine Number 903/0201 Page 070-0105

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X486.529.005.000 | 12 | Hex. Sock. Screw | M8 X 70 |
| 2 | X520.803.901.000 | 12 | Lock Washer | |
| 3 | 822.100.600.021 | 1 | Gasket | |
| 5 | G903.150.600.100 | 1 | Valve Block | [A] |
| 6 | F903.150.600.030 | 1 | Screw | (5) |
| 7 | X548.859.400.000 | 1 | O Ring | (5) Diameter 19,4 X 2,1 |
| 8 | 822.100.600.060 | 1 | Comp.Spring | (5) |
| 9 | F903.150.600.010 | 1 | Piston | (5) |
| 10 | 822.100.600.070 | 1 | Gasket | (5) |
| 11 | F903.150.600.020 | 1 | Timing Gear Case | (5) |
| 12 | 822.100.070.451 | 1 | Piston | (5) |
| 13 | X548.301.500.000 | 1 | V-Seal | (5) |
| 14 | X487.522.341.000 | 2 | Hex. Sock. Screw | (5) M6 X 50 |
| 16 | **G716.150.200.060** | 1 | Valve. | (5) |
| 17 | **G411.151.600.020** | 4 | Directional Valv | [B,C,D,E,F] (5) |
| 18 | F411.151.600.010 | 1 | Kit, Joint | (17) |
| 19 | X540.003.078.000 | 8 | Ring | (5) |
| 20 | X483.800.000.000 | 8 | Screw | (5) M10 |

**FOOTNOTE [A]** ORDER + 822 100 600 021
**FOOTNOTE [B]** DIFFERENTIAL LOCK
**FOOTNOTE [C]** POWER TAKE OFF 750 TR/MM
**FOOTNOTE [D]** POWER TAKE OFF 1000
**FOOTNOTE [E]** 4 WHEEL DRIVE
**FOOTNOTE [F]** PTO BRAKES


1-WG93-001-A

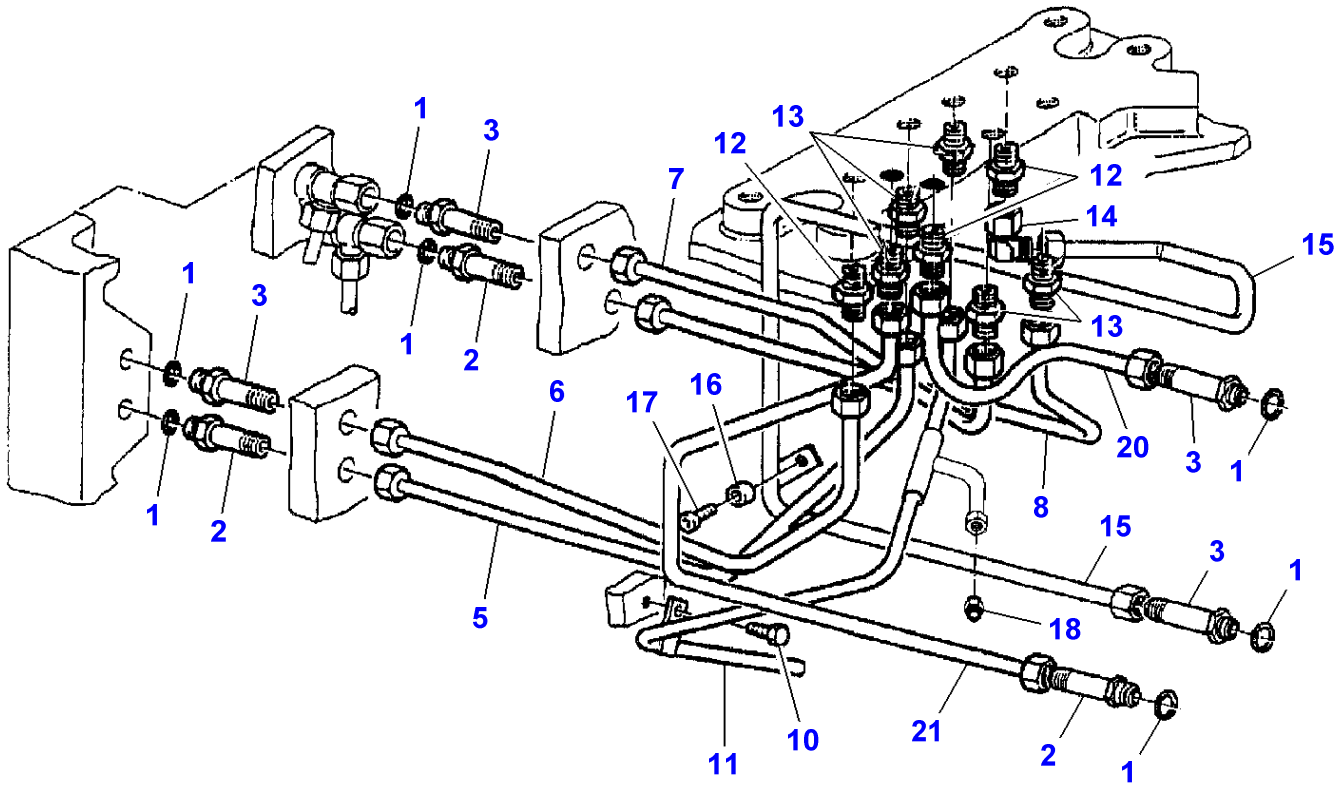

https://truckmanualshub.com/




| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | X548.830.066.000 | 7 | O Ring | Diameter 11,3 X 2,4 |
| 2 | 716.150.620.060 | 4 | Union | |
| 3 | 822.100.620.310 | 3 | Union | |
| 5 | H926.150.620.220 | 1 | Tube | |
| 6 | H926.150.620.210 | 1 | Tube | |
| 7 | H926.150.620.240 | 1 | Tube | |
| 8 | H926.150.620.230 | 1 | Tube | |
| 10 | X487.527.305.000 | 1 | Hex. Sock. Screw | M8 X 10 |
| 11 | H926.150.620.200 | 1 | Tube | |
| 12 | X592.501.200.000 | 3 | Thread. Part | |
| 13 | X592.501.100.000 | 5 | Thread. Part | |
| 14 | X584.316.900.000 | 1 | Union | |
| 15 | H916.100.620.260 | 1 | Tube | |
| 16 | 822.100.620.320 | 1 | Bush | |
| 17 | X493.613.105.000 | 1 | Hex. Sock. Screw | M10 X 25 |
| 18 | X592.501.100.000 | 1 | Thread. Part | |
| 20 | H916.100.620.270 | 1 | Tube | |
| 21 | H916.100.620.280 | 1 | Tube | |

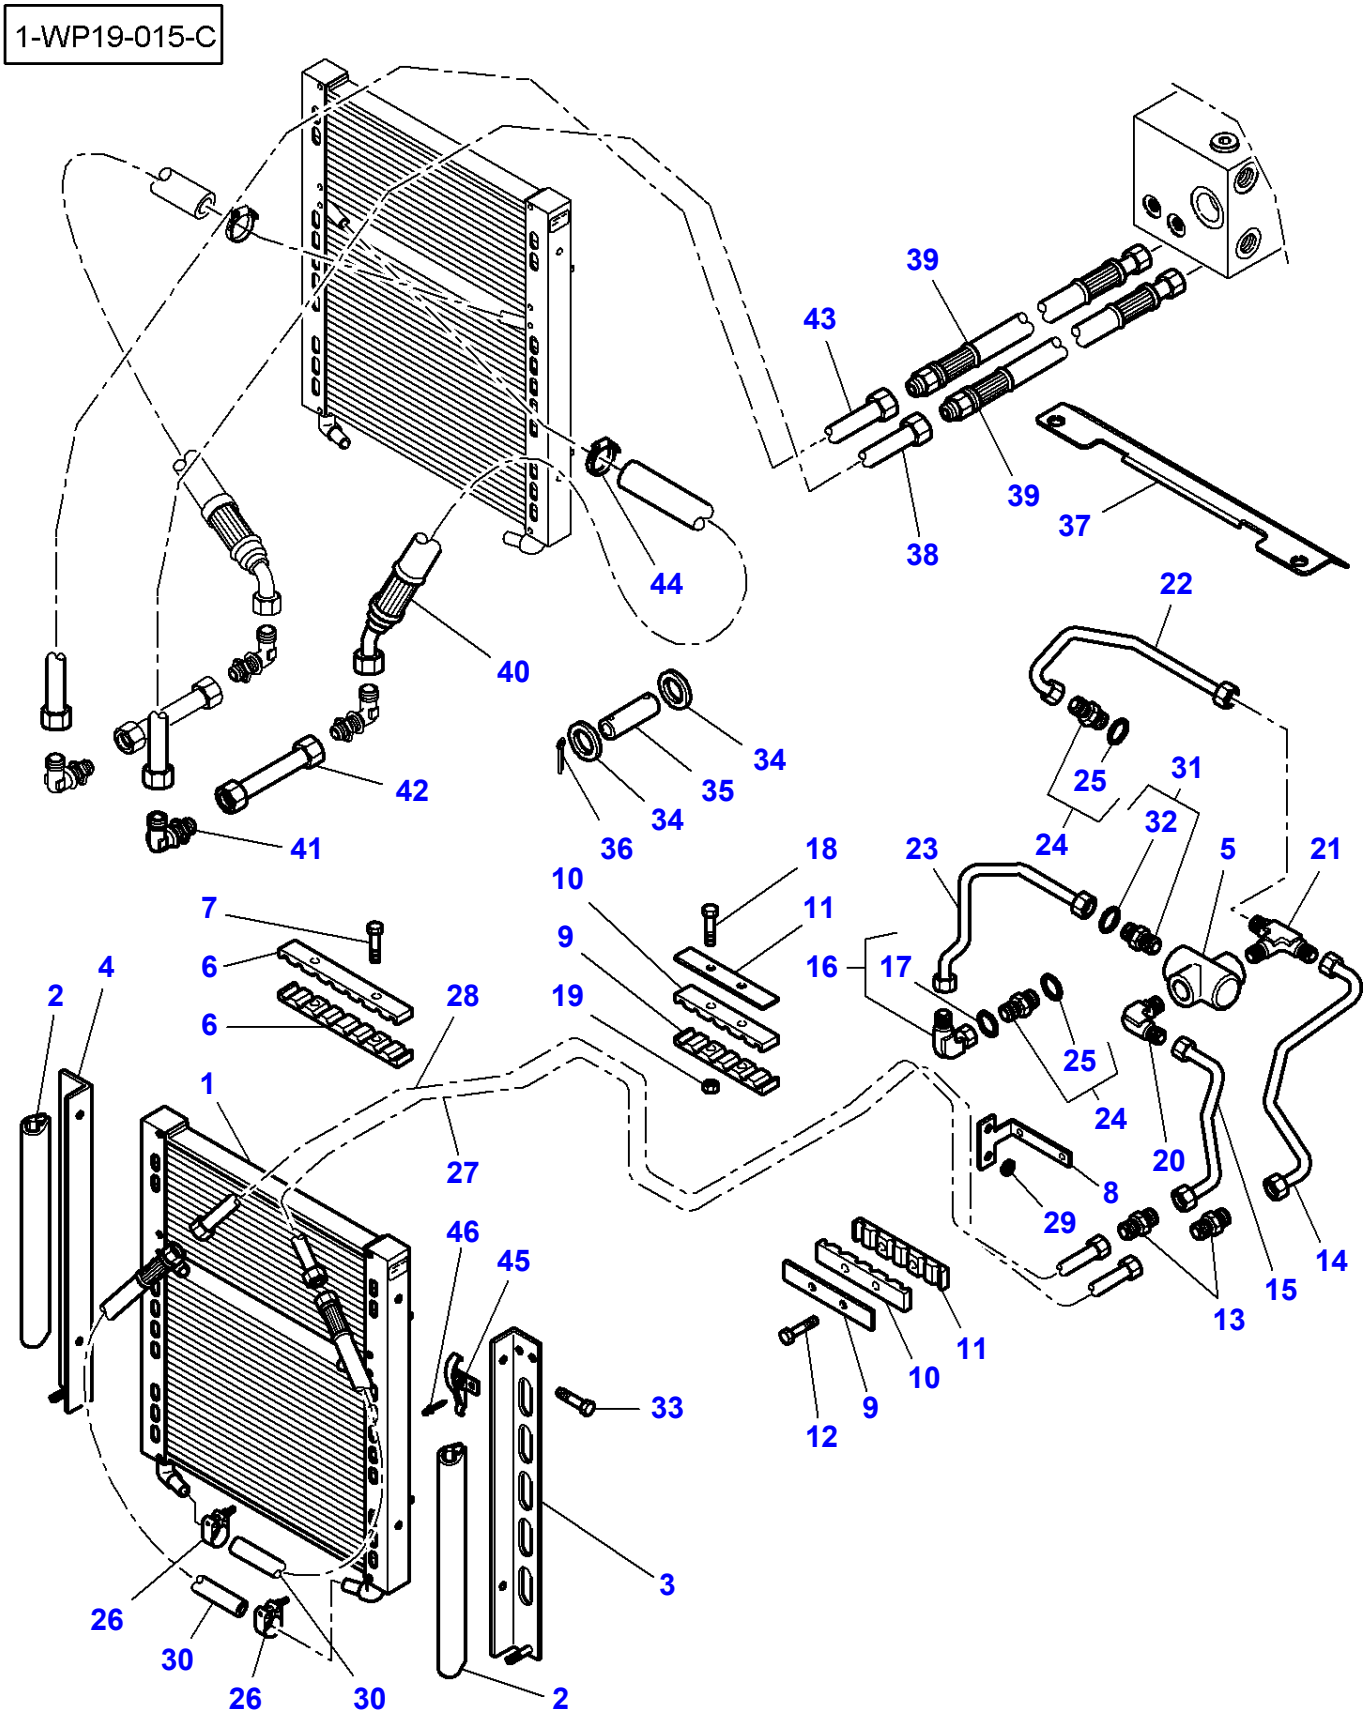
1-WP19-015-C
39
43
39
38
37
44
40
22
34
35
34
36
42
41
25
31
32
24
5
21
23
18
10
11
9
19
16
17
7
6
6
28
2
4
1
27
25
24
20
8
29
14
15
13
46
45
33
3
26
30
26
30
2
11
10
9
12

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4279293M1 | 1 | Oil Cooler | |
| 2 | 3782344M1 | 3 | Gasket | Length 475MM |
| 3 | 4279556M1 | 1 | Baffle | Left Hand |
| 4 | 4279555M1 | 1 | Baffle | Right Hand |
| 5 | 4278849M1 | 1 | Vane | |
| 6 | 4275070M3 | 2 | Bridle | |
| 7 | 3009257X1 | 2 | Screw | M6 X 35 |
| 8 | 4277411M3 | 1 | Support | |
| 9 | 4275691M2 | 2 | Bridle | |
| 10 | 4275692M2 | 2 | Bridle | |
| 11 | 4275693M2 | 2 | Bridle | |
| 12 | 3015134X1 | 2 | Hex. Sock. Screw | M6 X 65 |
| 13 | 3011222X1 | 2 | Union | |
| 14 | 4279819M1 | 1 | Tube | |
| 15 | 4279814M1 | 1 | Tube | |
| 16 | 3011593X91 | 1 | Union | M30 X 2 |
| 17 | 3011063X1 | 1 | O Ring | (16) |
| 18 | 1440922X1 | 2 | Hex. Sock. Screw | M6 X 60 |
| 19 | 1441500X1 | 2 | Locknut | M6 |
| 20 | 4279661M1 | 1 | Union | |
| 21 | 4279820M1 | 1 | Union | |
| 22 | 4279812M1 | 1 | Tube | |
| 23 | 4279811M2 | 1 | Tube | |
| 24 | 3011533X91 | 2 | Union | M33 |
| 25 | 3011037X1 | 1 | Seal | (24) |
| 26 | 3788734M1 | 2 | Clamp | Diameter 27/29 |
| 27 | 4276743M3 | 1 | Tube | |
| 28 | 4276742M3 | 1 | Tube | |
| 29 | 390597X1 | 2 | Washer | Diameter 10-30 X 2,5 |
| 30 | 4276141M2 | 2 | Hydr. Hose | Length 1150 MM |
| 31 | 3011639X91 | 1 | Union | |
| 32 | 3011037X1 | 1 | Seal | (31) |
| 33 | 339560X1 | 4 | Hex. Sock. Screw | M6 X 16 |
| 34 | 339424X1 | 4 | Washer | Diameter 10,5-18 X 1,6 |
| 35 | 3781233M1 | 2 | Roll | |
| 36 | 1442967X1 | 4 | Pin | Diameter 2,5 X 16 |
| 37 | 4279824M2 | 1 | Spacer | |
| 38 | 4276744M3 | 1 | Tube | |
| 39 | 4276142M1 | 2 | Hydr. Hose | Length 1400 MM |
| 40 | 4276144M2 | 2 | Hydr. Hose | Length 950 MM |
| 41 | 3011594X1 | 4 | Union | |
| 42 | 4276751M1 | 2 | Tube | |
| 43 | 4276745M3 | 1 | Tube | |
| 44 | 4277422M1 | 2 | Clamp | Diameter 23-25 |
| 45 | 3783272M1 | 2 | Latch | Up to Serial or Engine Number 29-AUG-2004 |
| | 3824482M91 | 2 | Kit, Fitting | From Serial or Engine Number 30-AUG-2004 |
| 46 | 3010021X1 | 4 | Rivet | |

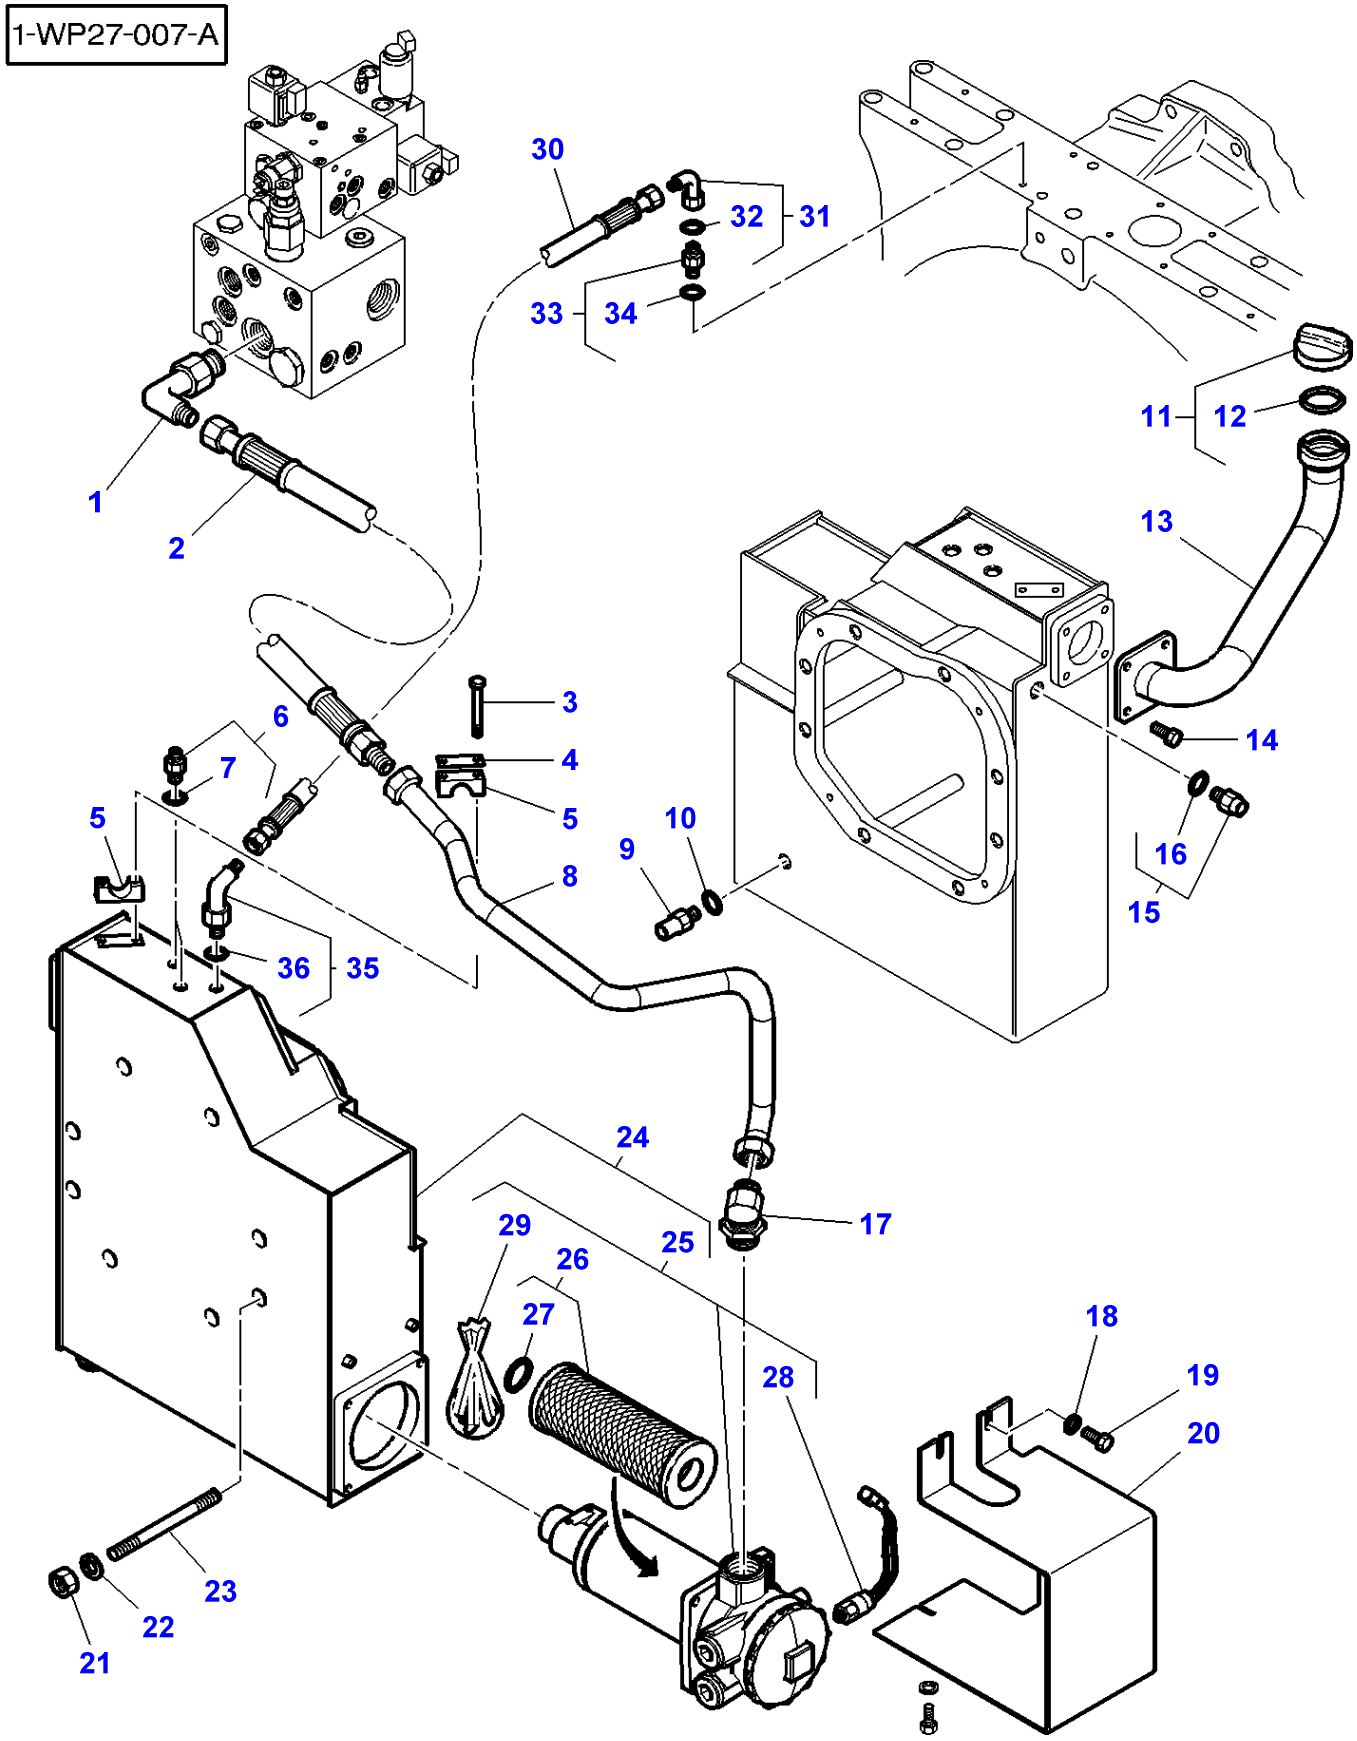

1-WP27-007-A
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787911M1 | 1 | Union | M33X2 |
| 2 | 4276132M1 | 1 | Hydr. Hose | Length 800MM |
| 3 | 391244X1 | 2 | Hex. Sock. Screw | M6X45 |
| 4 | 4273689M1 | 1 | Plate | |
| 5 | 4273688M1 | 2 | Bridle | |
| 6 | 338717X91 | 2 | Union | M18X1.5 |
| 7 | 338764X1 | 1 | Seal | (6) |
| 8 | 4275578M1 | 1 | Tube | |
| 9 | **3618249M1** | 1 | Inductive Sensor | |
| 10 | 1440012X1 | 1 | Gasket | Diameter 14-20X1,5 |
| 11 | 3011107X91 | 1 | Plug | M33X2 |
| 12 | 3011037X1 | 1 | Seal | (11) |
| 13 | 4274249M1 | 1 | Tube | |
| 14 | 339124X1 | 4 | Hex. Sock. Screw | M8X16 |
| 15 | 3001345X91 | 1 | Union | M16X1.5 |
| 16 | 338763X1 | 1 | Seal | (15) |
| 17 | 4276644M1 | 1 | Union | |
| 18 | 390971X1 | 3 | Washer | |
| 19 | 339230X1 | 3 | Hex. Sock. Screw | M6X10 |
| 20 | 4275579M2 | 1 | Cowl | |
| 21 | 339402X1 | 8 | Nut | M10 |
| 22 | 390734X1 | 8 | Washer | |
| 23 | 3010684X1 | 8 | Stud | M10X212 |
| 24 | 4278269M91 | 1 | Hydraulic Tank | |
| 25 | 4275577M91 | 1 | Filter | (24) |
| 26 | **4276648M1** | 1 | Filter Insert | (25) |
| 27 | **3907428M1** | 1 | O Ring | (26) |
| 28 | **3789379M1** | 1 | Indicator | (25) |
| 29 | 3907429M91 | 1 | Kit, Joint | (25) |
| 30 | 4276666M1 | 1 | Hydr. Hose | Length 650MM |
| 31 | 3011082X91 | 1 | Elbow | |
| 32 | 3011144X1 | 1 | O Ring | (31) |
| 33 | 338716X91 | 1 | Union | M12X1.5 |
| 34 | 338761X1 | 1 | Gasket | (33) |
| 35 | 4276133M1 | 1 | Union | M16X1.5 |
| 36 | 338763X1 | 1 | Seal | (35) |

1-WP27-006-A

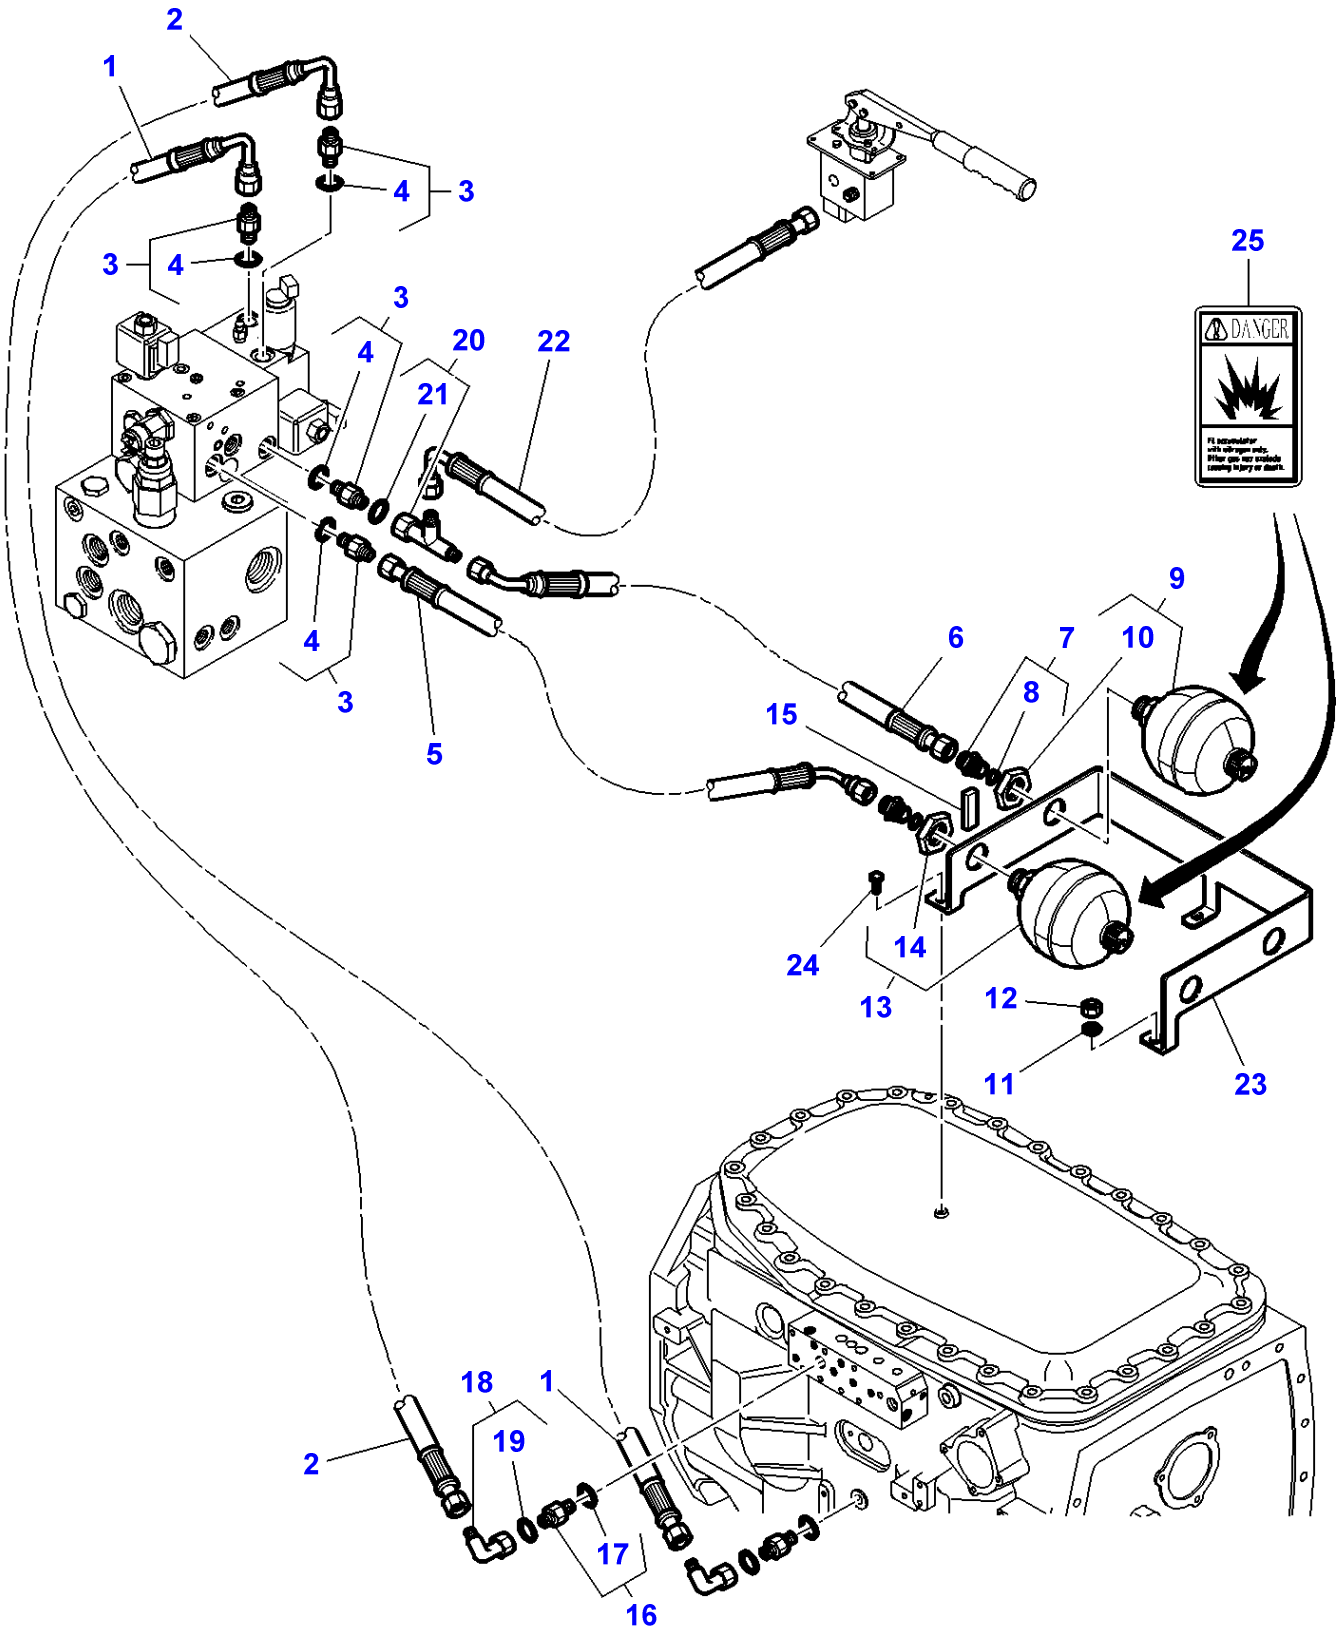
2
1
4
3
3
4
3
4
20
22
21
25
DANGER
4
3
5
9
6
7
10
8
15
24
14
13
12
11
23
18
1
19
2
17
16


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276148M1 | 1 | Hydr. Hose | [C]<br>18B<br>Length 1080MM |
| 2 | 4276147M1 | 1 | Hydr. Hose | [B]<br>18B<br>Length 750MM |
| 3 | 3011038X91 | 4 | Union | M14X1.5 |
| 4 | 338762X1 | 1 | Seal | (3) |
| 5 | 4276151M1 | 1 | Hydr. Hose | Length 550MM |
| 6 | 4276149M1 | 1 | Hydr. Hose | Length 500MM |
| 7 | 3011550X91 | 2 | Union | 1/2 |
| 8 | 3011154X1 | 1 | Gasket | (7) |
| 9 | 4275558M1 | 1 | Accumulator | [A]<br>108B |
| 10 | 3907430M1 | 1 | Nut | (9) |
| 11 | 390735X1 | 2 | Washer | |
| 12 | 3019862X1 | 2 | Nut Metric | M12 |
| 13 | 4276645M1 | 1 | Accumulator | [A]<br>44B |
| 14 | 3907430M1 | 1 | Nut | (13) |
| 15 | 3580695M1 | 1 | Gasket | Length 80MM |
| 16 | 3011547X91 | 2 | Union | M16X1.5 |
| 17 | 338763X1 | 1 | Seal | (16) |
| 18 | 3011543X91 | 2 | Union | M16X1.5 |
| 19 | 3011144X1 | 1 | O Ring | (18) |
| 20 | 3011544X91 | 1 | Union | M16X1,5 |
| 21 | 3011144X1 | 1 | O Ring | (20) |
| 22 | 4276150M1 | 1 | Hydr. Hose | Length 650MM |
| 23 | 4275571M3 | 1 | Support | |
| 24 | 339282X1 | 1 | Hex. Sock. Screw | M10X16 |
| 25 | 3777021M3 | 1 | Decal | |

**FOOTNOTE [A]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART
**FOOTNOTE [B]** FEED SUPPLY
**FOOTNOTE [C]** RETURN

1-WP27-008-B

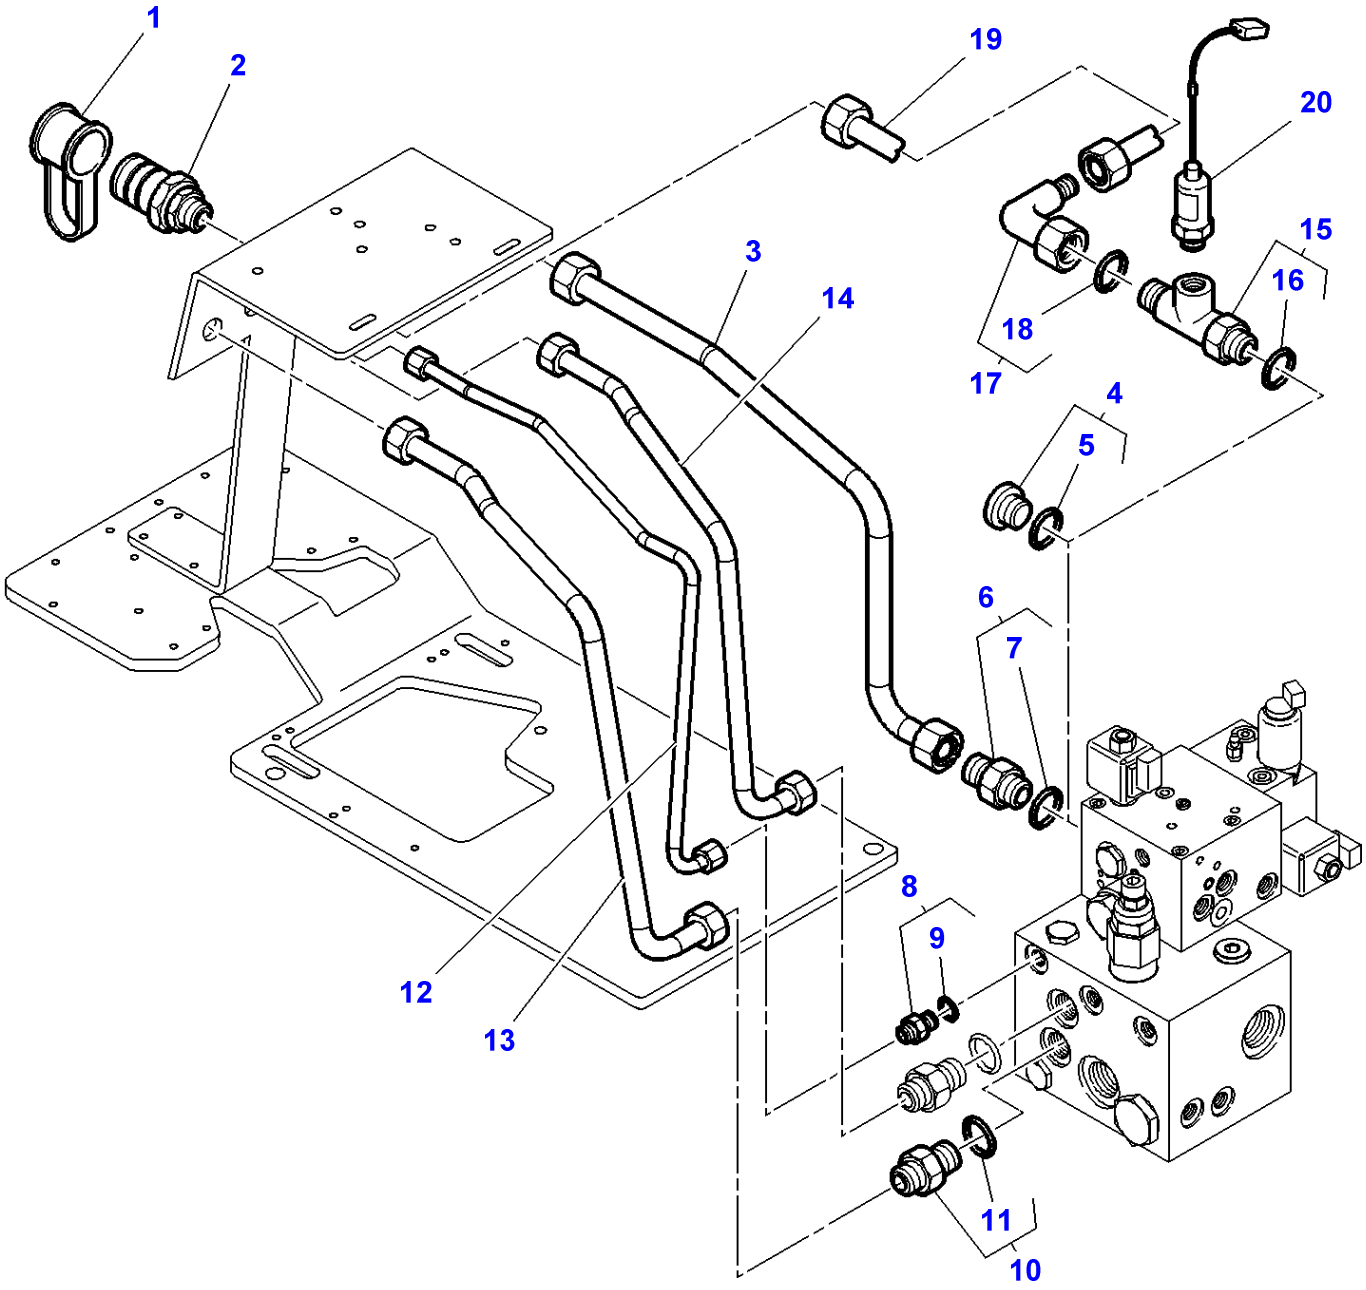


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277197M1 | 1 | Helmet | [A] |
| 2 | **3786820M2** | 1 | Female Coupler | [A] |
| 3 | 4274984M1 | 1 | Tube | [A] |
| 4 | 3011105X91 | 1 | Plug | [B] M22X1.5 |
| 5 | 3011036X1 | 1 | Seal | (4) |
| 6 | 3011040X91 | 1 | Union | [A] M22X1.5 |
| 7 | 3011036X1 | 1 | Seal | (6) |
| 8 | 338795X91 | 1 | Union | M14X1.5 |
| 9 | 338762X1 | 1 | Seal | (8) |
| 10 | 3011041X91 | 2 | Union | M22X1.5 |
| 11 | 3011036X1 | 1 | Seal | (10) |
| 12 | 4274983M1 | 1 | Tube | |
| 13 | 4274982M1 | 1 | Tube | |
| 14 | 4274981M1 | 1 | Tube | |
| 15 | 4279909M1 | 1 | Union | For Italy only or any text in Italian only |
| 16 | 3019398X1 | 1 | O Ring | (15) |
| 17 | 3011085X91 | 1 | Union | For Italy only or any text in Italian only |
| 18 | 3011147X1 | 1 | O Ring | (17) |
| 19 | 4279908M1 | 1 | Tube | For Italy only or any text in Italian only |
| 20 | | 1 | Harness | [C] |

**FOOTNOTE [A]** WITH TRAILOR BRAKING
**FOOTNOTE [B]** WITHOUT TRAILOR BRAKE
**FOOTNOTE [C]** NUMBER TO BE ADVISED

1-WP27-011-A

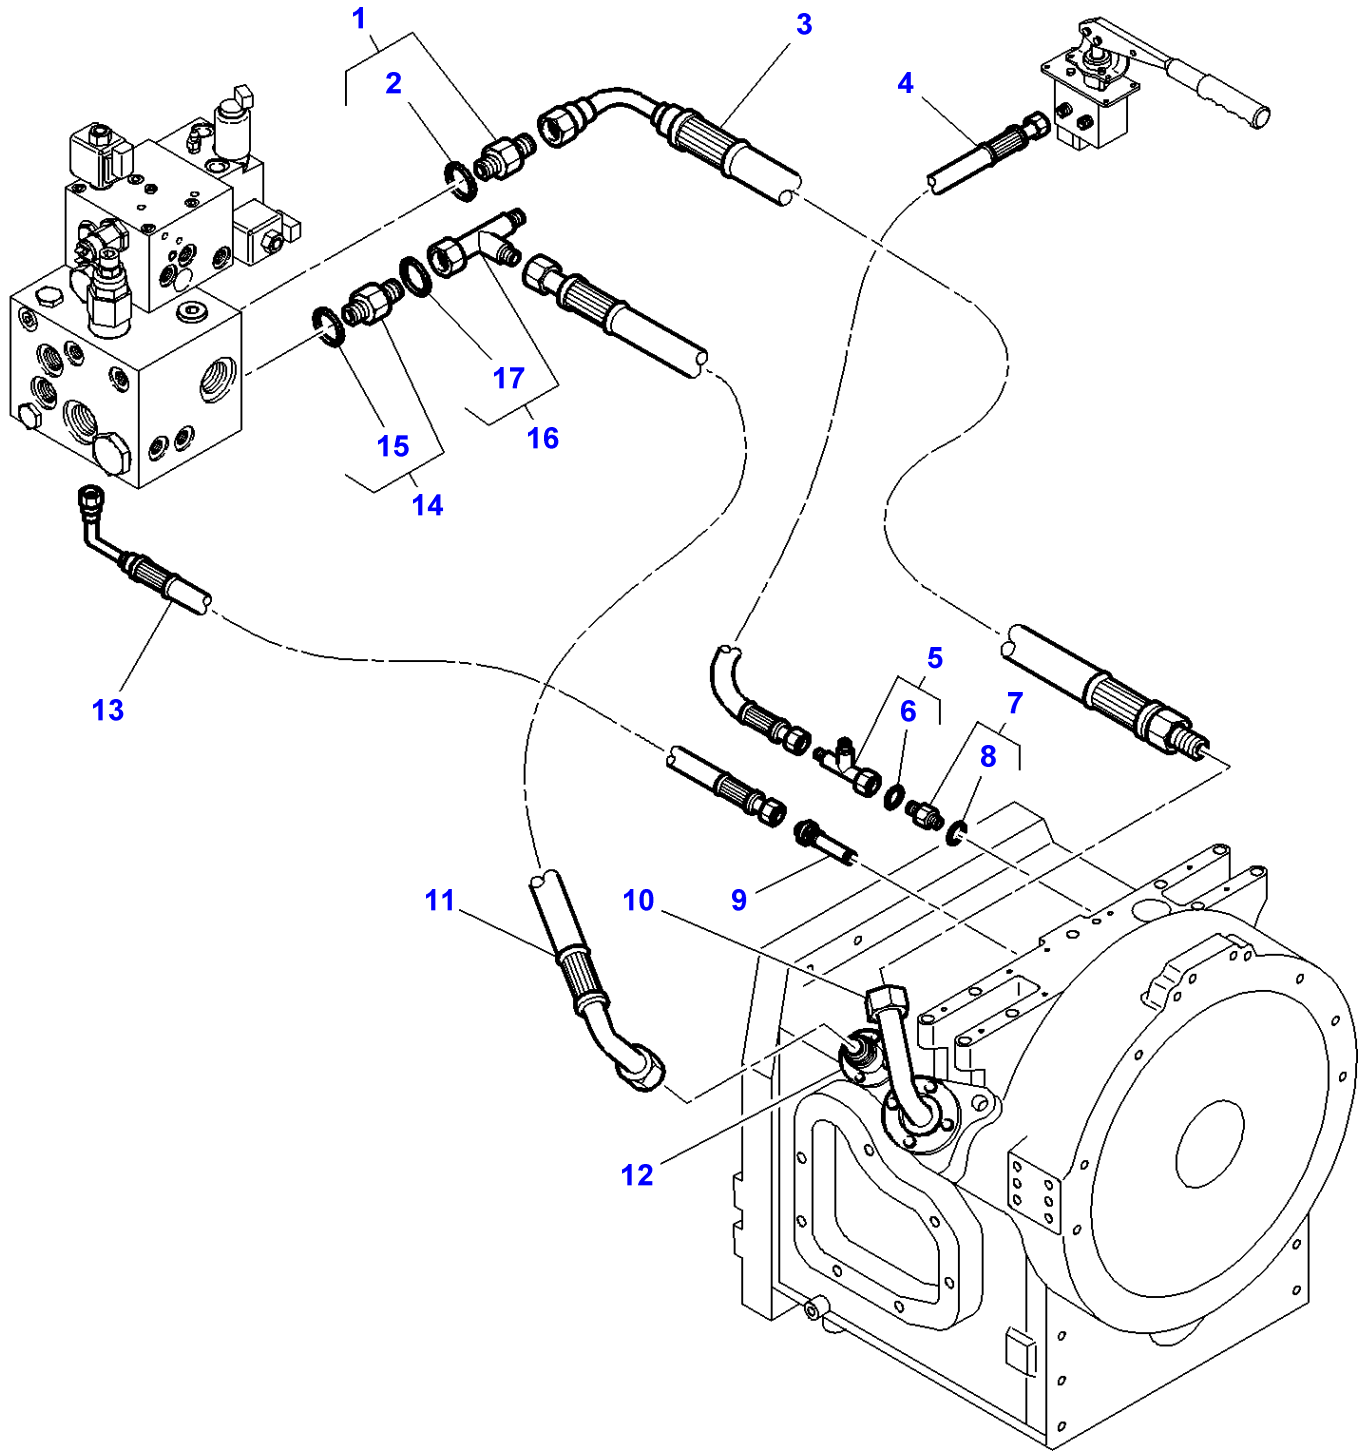


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3011043X91 | 1 | Union | M33X2 |
| 2 | 3011037X1 | 1 | Seal | (1) |
| 3 | 4274558M1 | 1 | Hydr. Hose | Length 1050MM |
| 4 | 4276154M1 | 1 | Hydr. Hose | Length 1100MM |
| 5 | 3011544X91 | 1 | Union | |
| 6 | 3011144X1 | 1 | O Ring | (5) |
| 7 | 3011554X91 | 1 | Union | M12X1.5 |
| 8 | 338761X1 | 1 | Gasket | (7) |
| 9 | | 1 | Union | See Page - Reference Number 070-0145/30 |
| 10 | | 1 | Tube | See Page - Reference Number 070-0145/4 |
| 11 | 4276123M1 | 1 | Hydr. Hose | Length 1000MM |
| 12 | | 1 | Union | See Page - Reference Number 070-0155/18 |
| 13 | 4276130M1 | 1 | Hydr. Hose | Length 1100MM |
| 14 | 3011040X91 | 1 | Union | M22X1.5 |
| 15 | 3011036X1 | 1 | Seal | (14) |
| 16 | 3011089X91 | 1 | Union | M22X1.5 |
| 17 | 3011147X1 | 1 | O Ring | (16) |

1-WP25-003-A

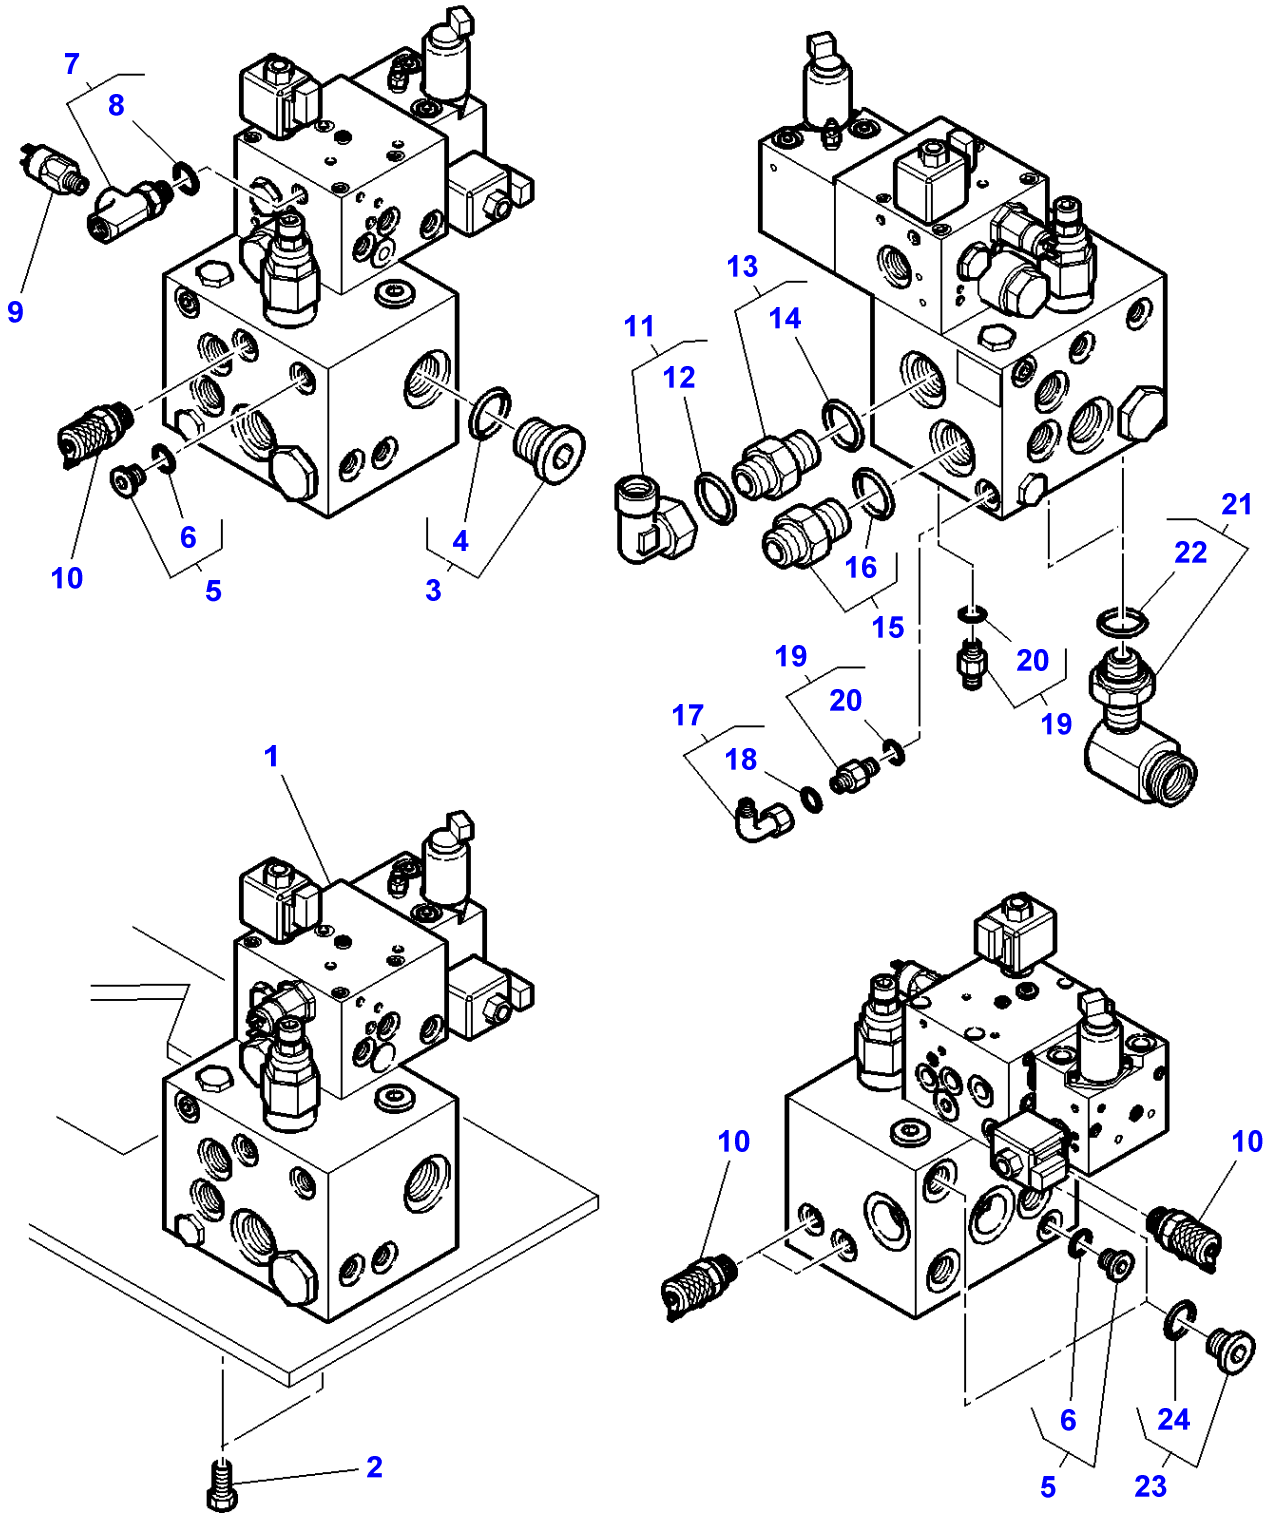


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4274585M91 | 1 | Pressure Valve | [A] |
| 2 | 3009505X1 | 2 | Hex. Sock. Screw | M12X25 |
| 3 | 3011107X91 | 1 | Plug | M33X2 |
| 4 | 3011037X1 | 1 | Seal | (3) |
| 5 | 3011099X91 | 2 | Plug | M14X1.5 |
| 6 | 338762X1 | 1 | Seal | (5) |
| 7 | 4278267M1 | 1 | Union | |
| 8 | 195562M1 | 1 | O Ring | (7) |
| 9 | **4278368M1** | 1 | Pressure Switch | 105 B |
| 10 | **3785665M1** | 4 | Pressure Intake | |
| 11 | 3011088X91 | 1 | Elbow Nipple | M36X2 |
| 12 | 3011150X1 | 1 | O Ring | (11) |
| 13 | 3011043X91 | 1 | Union | M33X2 |
| 14 | 3011037X1 | 1 | Seal | (13) |
| 15 | 3011042X91 | 1 | Union | M33X2 |
| 16 | 3011037X1 | 1 | Seal | (15) |
| 17 | 3011543X91 | 1 | Union | M16X1.5 |
| 18 | 3011144X1 | 1 | O Ring | (17) |
| 19 | 3011038X91 | 2 | Union | M14X1.5 |
| 20 | 338762X1 | 1 | Seal | (19) |
| 21 | 4277200M2 | 2 | Union | M22X1.5 |
| 22 | 1442477X1 | 1 | Gasket | (21) |
| 23 | 3011105X91 | 2 | Plug | M22X1.5 |
| 24 | 3011036X1 | 1 | Seal | (23) |

**FOOTNOTE [A]** DETAIL TO BE ADVISED


1-WP27-009-A

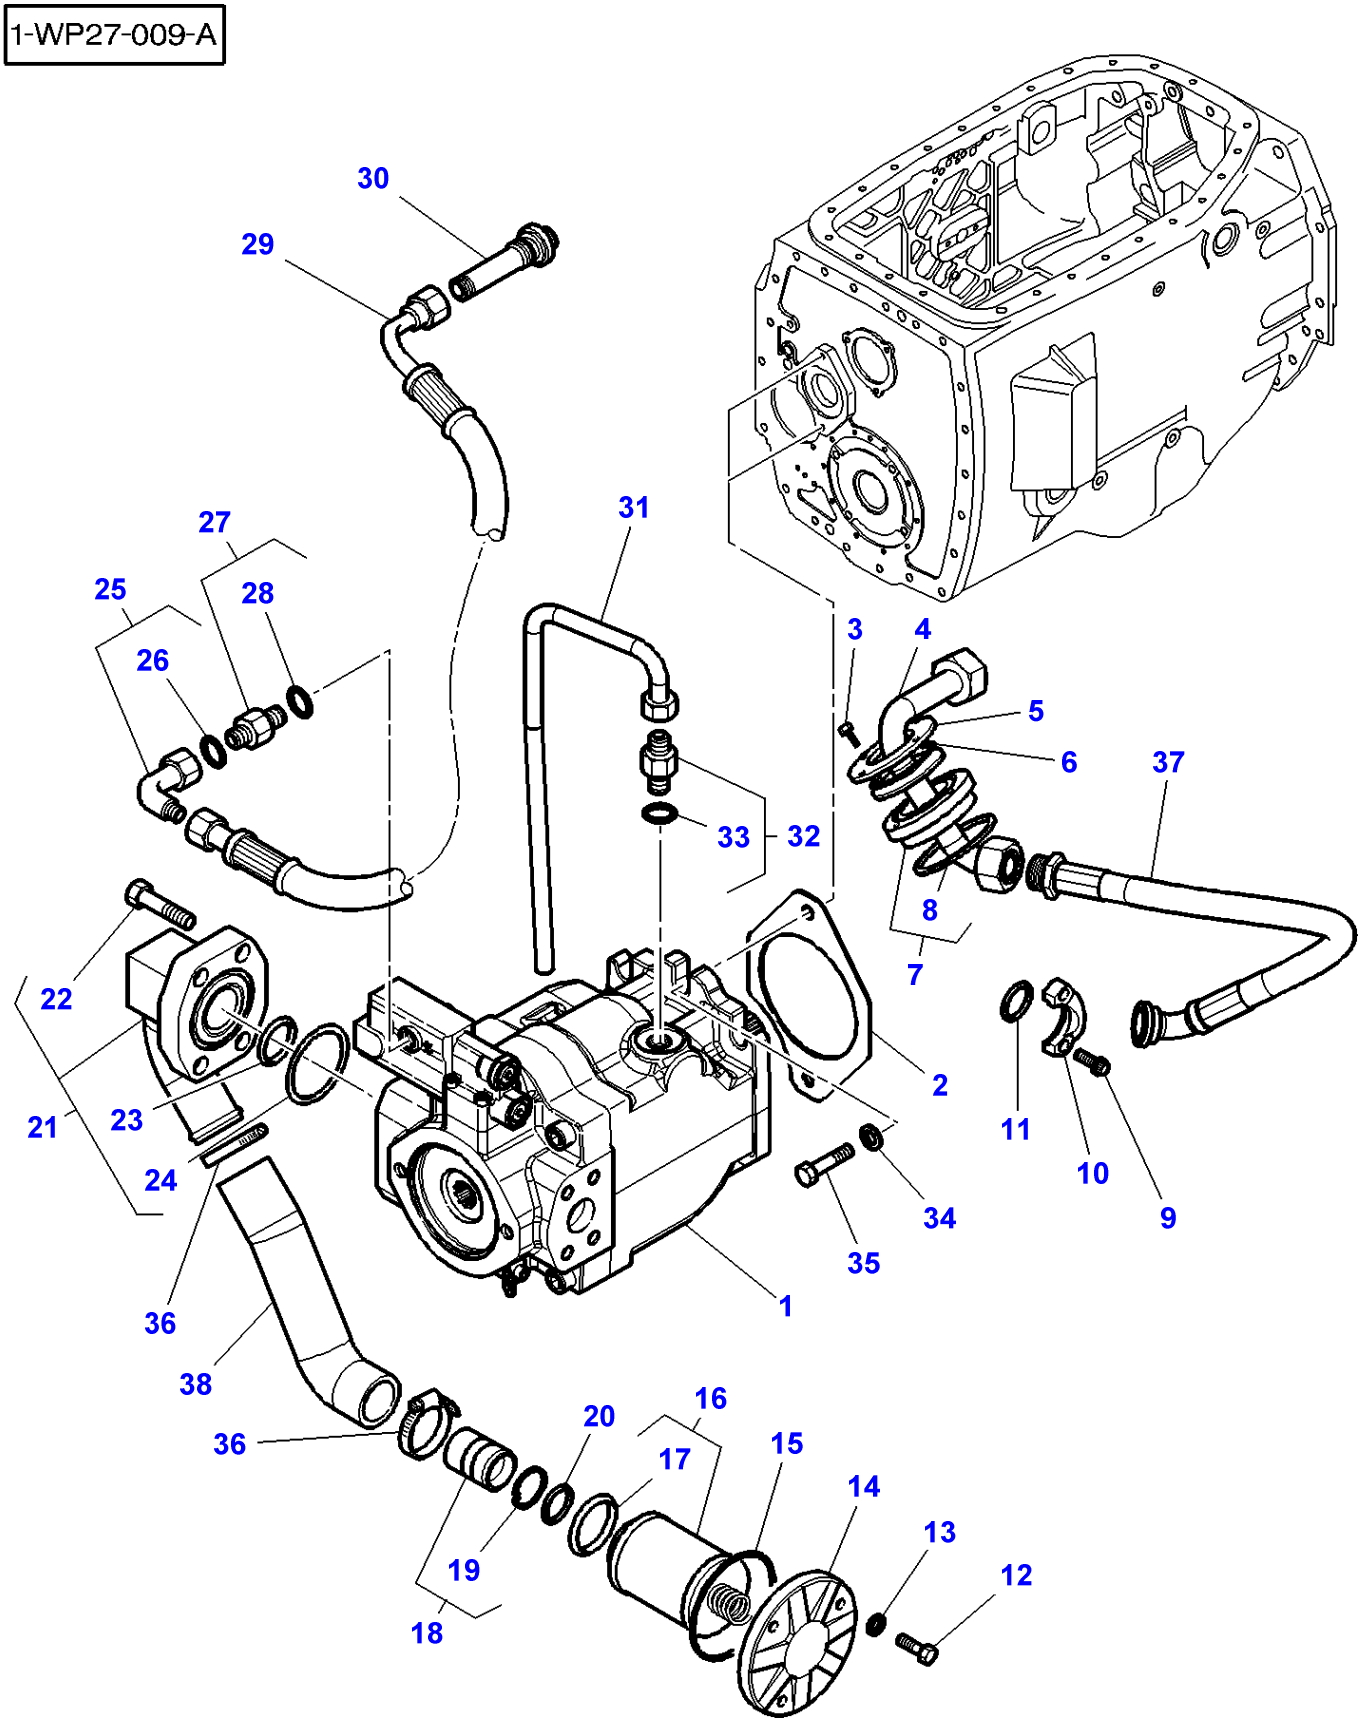
30
29
31
27
25
28
26
3
4
5
6
37
33
32
8
7
22
2
11
10
9
21
23
24
34
35
1
36
38
36
20
16
17
15
14
13
19
12
18

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272110M1 | 1 | Hydraulic Pump | See Page - Reference Number 070-0150/1 |
| 2 | 816.940.010.010 | 1 | Sump Gasket | |
| 3 | 339560X1 | 4 | Hex. Sock. Screw | M6X16 |
| 4 | 4274546M91 | 1 | Tube | |
| 5 | 4275574M1 | 1 | Washer | |
| 6 | 4274560M1 | 1 | O Ring | Diameter 69,45X3,53 |
| 7 | 4275572M91 | 1 | Plug | |
| 8 | 4276652M1 | 1 | Joint. | (7) |
| 9 | 367788X1 | 4 | Screw | 3/8 |
| 10 | 3787910M1 | 2 | Bridle | |
| 11 | 359305X1 | 1 | O Ring | |
| 12 | 339010X1 | 3 | Hex. Sock. Screw | M8X40 |
| 13 | 339374X1 | 3 | Lock Washer | |
| 14 | 716.100.490.110 | 1 | Cover | |
| 15 | X548.989.200.000 | 1 | O Ring | |
| 16 | **G916.951.010.010** | 1 | Suction Filter | |
| 17 | X548.922.800.000 | 1 | O Ring | (16) |
| 18 | G916.951.010.020 | 1 | Intake Stack | |
| 19 | X533.212.000.000 | 1 | Snapring | (18) |
| 20 | X548.907.866.000 | 1 | O Ring | |
| 21 | 4274545M1 | 1 | Bridle | |
| 22 | 358176X1 | 4 | Screw | (21) |
| 23 | 3907461M1 | 1 | O Ring | (21) Diameter 37,69X3,53 |
| 24 | 3907462M1 | 1 | O Ring | (21) Diameter 56,74X3,53 |
| 25 | 3011082X91 | 1 | Elbow | |
| 26 | 3011144X1 | 1 | O Ring | (25) |
| 27 | 3011314X91 | 1 | Union | |
| 28 | 70921883 | 1 | O Ring | (27) |
| 29 | 4276128M1 | 1 | Hydr. Hose | Length 450MM |
| 30 | 4275576M1 | 1 | Union | M18X1.5 |
| 31 | 4276668M1 | 1 | Tube | |
| 32 | 3011059X91 | 1 | Union | 7/8 |
| 33 | 70921886 | 1 | O Ring | (32) |
| 34 | 338686X1 | 2 | Washer | |
| 35 | 3019863X1 | 2 | Hex. Sock. Screw | M12X35 |
| 36 | 338617X1 | 2 | Hose Clip | Diameter 40- 60 |
| 37 | 4276129M1 | 1 | Hydr. Hose | Length 700MM |
| 38 | 4275559M1 | 1 | Hose | |

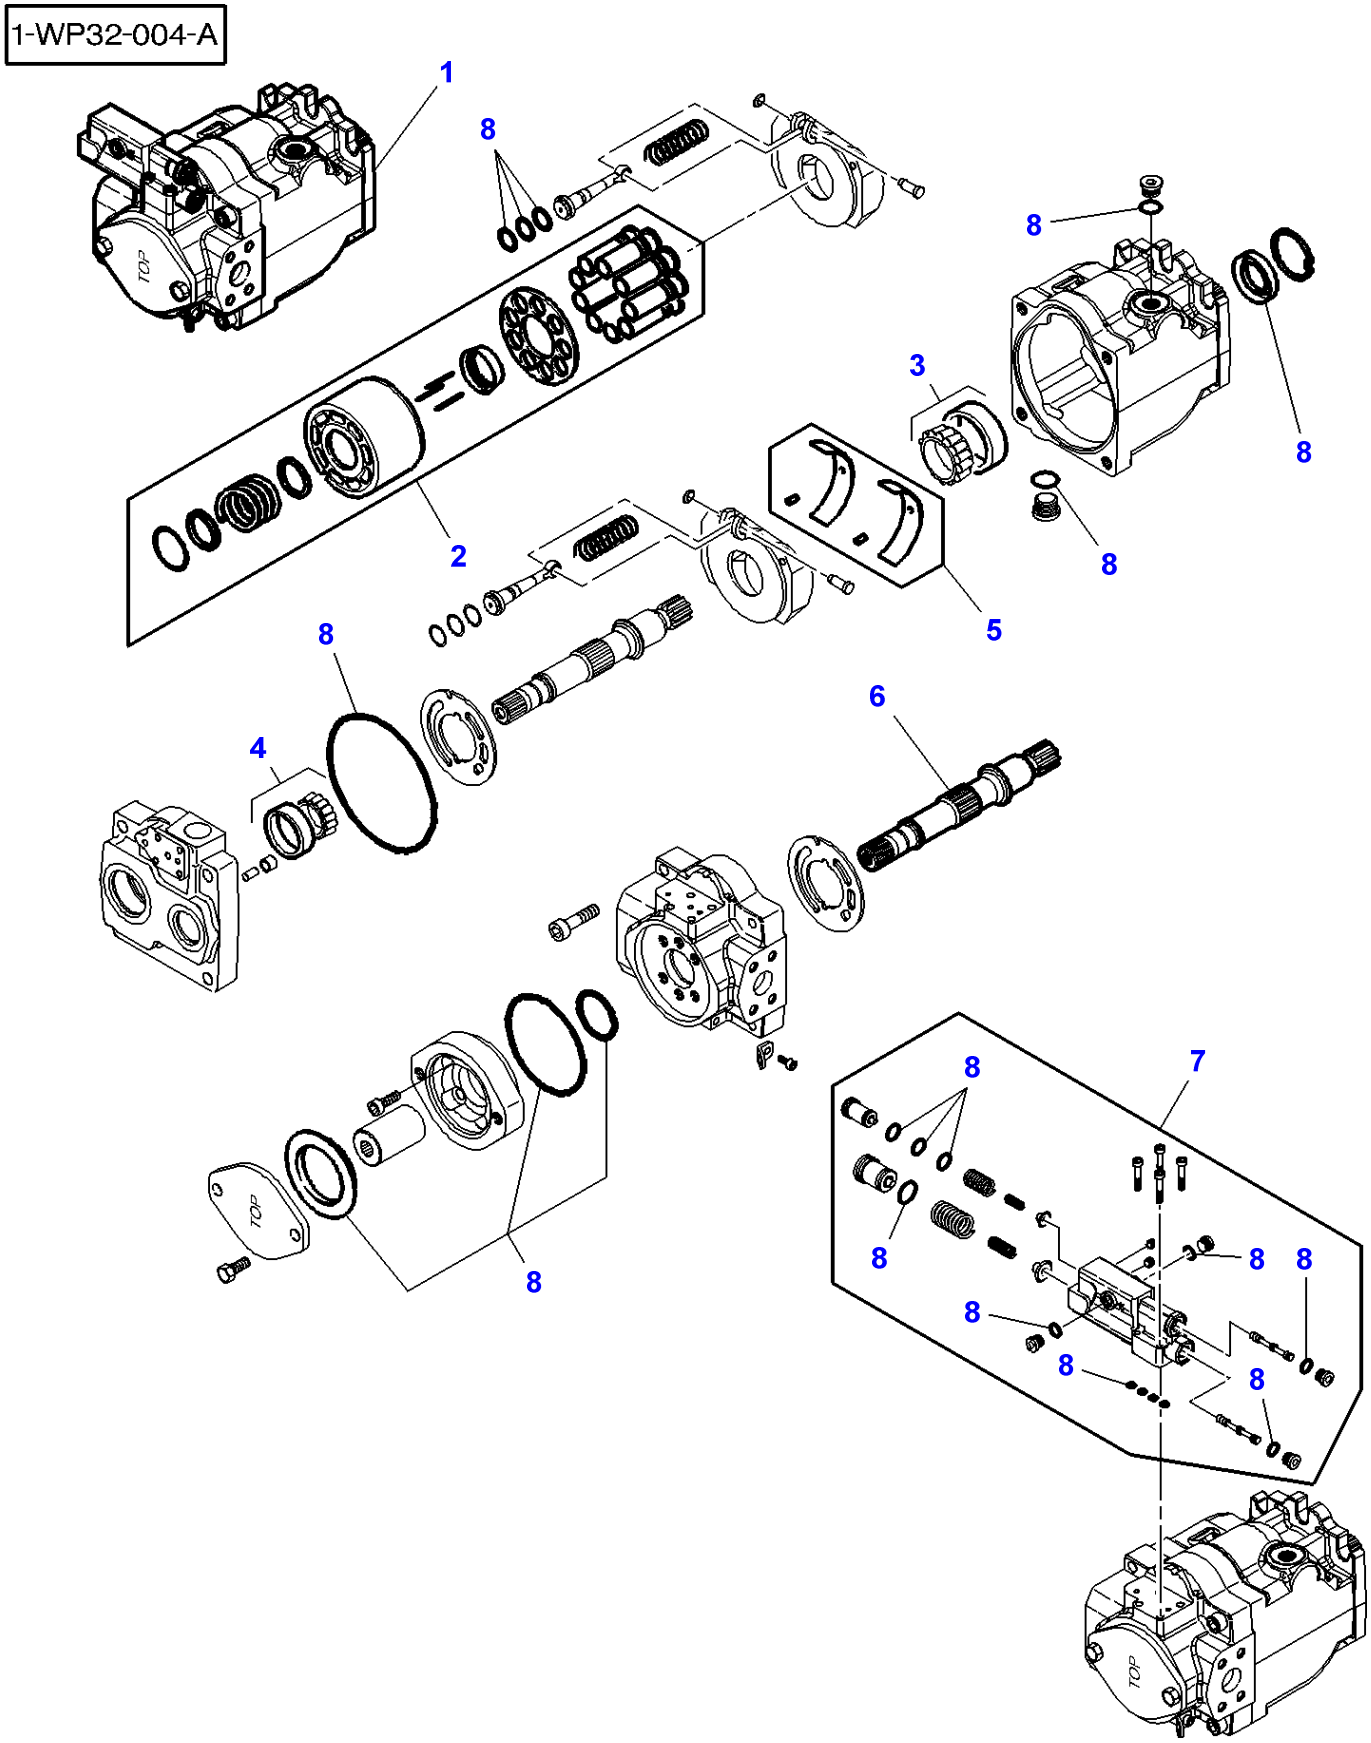

1-WP32-004-A
1
8
2
3
5
4
6
7
TOP

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272110M1 | 1 | Hydraulic Pump | |
| 2 | 3907469M91 | 1 | Kit, Piston | (1) |
| 3 | 3907466M91 | 1 | Bearing Assy | (1) |
| 4 | 3907467M91 | 1 | Bearing Assy | (1) |
| 5 | 3907468M91 | 1 | Parts Pack | (1) |
| 6 | 3907465M1 | 1 | Shaft | (1) |
| | | | | Number of teeth/spines 14 |
| 7 | 3907464M91 | 1 | Drive | (1) |
| 8 | 3907463M91 | 1 | Kit, Joint | (1) |

1-WP27-010-A

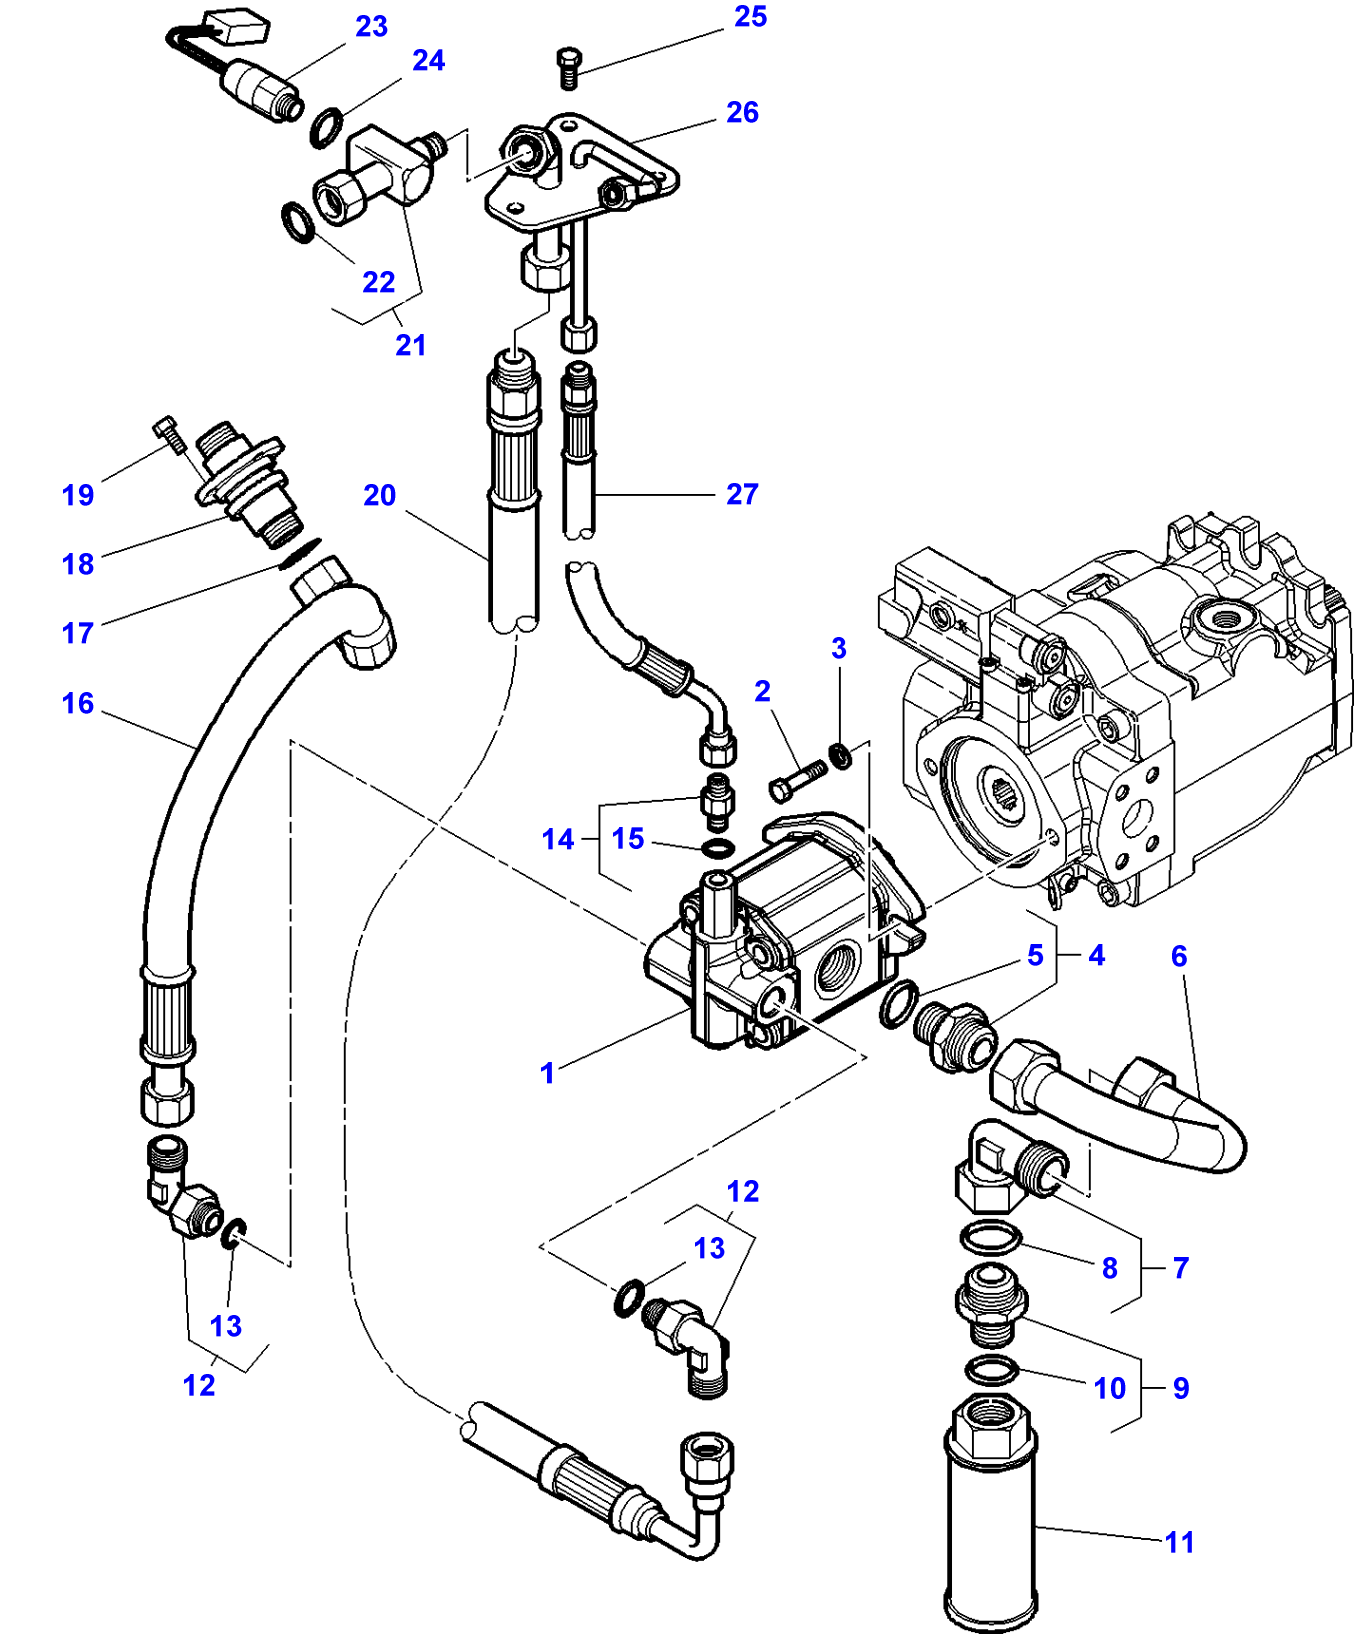


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Auxiliary Hydraulics Page 070-0155


| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272111M1 | 1 | Gear Pump | |
| 2 | 357740X1 | 2 | Screw Unc | 3/8 |
| 3 | 385362X1 | 2 | Washer | |
| 4 | 3011582X91 | 1 | Union | |
| 5 | 835025M1 | 4 | O Ring | (4) |
| 6 | 4275570M1 | 1 | Tube | |
| 7 | 3011087X91 | 1 | Union | |
| 8 | 3011149X1 | 1 | O Ring | (7) |
| 9 | 3011044X91 | 1 | Union | |
| 10 | 3011037X1 | 1 | Seal | (9) |
| 11 | **3787655M2** | 1 | Strainer | |
| 12 | 4275573M1 | 2 | Union | |
| 13 | 3019397X1 | 1 | O Ring | (12) |
| 14 | 3011618X91 | 1 | Union | M10 |
| 15 | 338760X1 | 1 | O Ring | (14) |
| 16 | 4276120M1 | 1 | Hydr. Hose | Length 430MM |
| 17 | X548.887.266.000 | 1 | O Ring | |
| 18 | 4275575M1 | 1 | Union | |
| 19 | 339160X1 | 4 | Hex. Sock. Screw | M5X10 |
| 20 | 4276122M1 | 1 | Hydr. Hose | Length 650MM |
| 21 | 4277199M1 | 1 | Union | |
| 22 | 3011147X1 | 1 | O Ring | (21) |
| 23 | **4278263M1** | 1 | Transducer | 8 BARS |
| 24 | 1440012X1 | 1 | Gasket | |
| 25 | 339124X1 | 3 | Hex. Sock. Screw | M8X16 |
| 26 | 4274547M91 | 1 | Tube | |
| 27 | 4276121M1 | 1 | Hydr. Hose | Length 220MM |

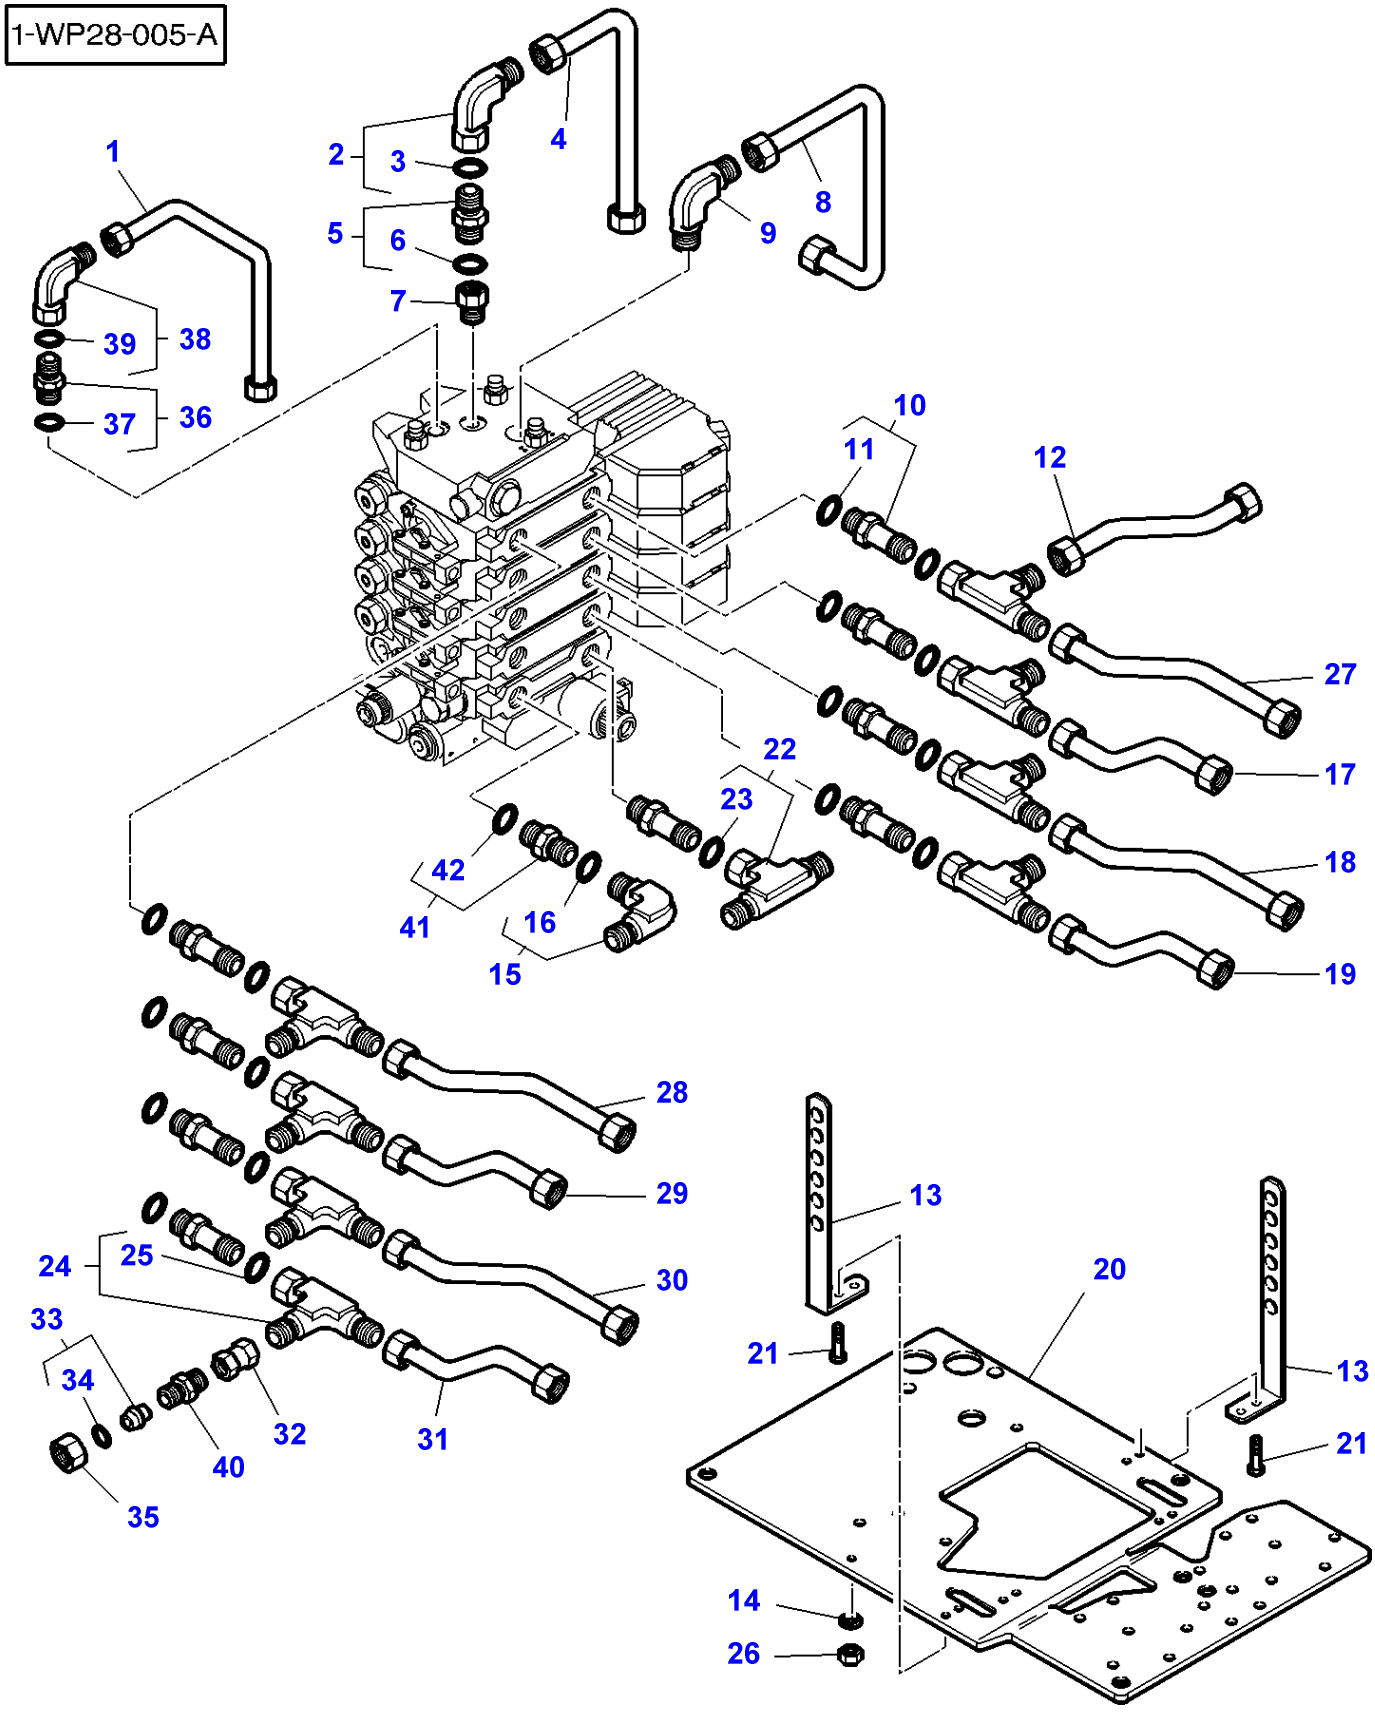
1-WP28-005-A
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275551M1 | 1 | Tube | |
| 2 | 3011082X91 | 1 | Elbow | |
| 3 | 3011144X1 | 1 | O Ring | (2) |
| 4 | 4275555M1 | 1 | Tube | |
| 5 | 3011045X91 | 1 | Union | M12 |
| 6 | 3011061X1 | 1 | O Ring | (5) |
| 7 | 3793729M1 | 1 | Reducer | |
| 8 | 4275553M1 | 1 | Tube | |
| 9 | 3787920M1 | 1 | Union | |
| 10 | 4274990M2 | 9 | Union | M22 |
| 11 | 3019398X1 | 1 | O Ring | (10) |
| 12 | 4274975M1 | 4 | Tube | |
| 13 | 4274987M1 | 2 | Support | |
| 14 | 390972X1 | 3 | Washer | |
| 15 | 3011085X91 | 1 | Union | |
| 16 | 3011147X1 | 1 | O Ring | (15) |
| 17 | 4274838M1 | 1 | Tube | |
| 18 | 4274836M1 | 1 | Tube | |
| 19 | 4274834M1 | 1 | Tube | |
| 20 | 4274562M1 | 1 | Support | |
| 21 | 339230X1 | 4 | Hex. Sock. Screw | M6 X 10 |
| 22 | 3011093X91 | 1 | Union | |
| 23 | 3011147X1 | 1 | O Ring | (22) |
| 24 | 3011089X91 | 8 | Union | |
| 25 | 3011147X1 | 1 | O Ring | (24) |
| 26 | 339169X1 | 3 | Nut | M8 |
| 27 | 4274840M1 | 1 | Tube | |
| 28 | 4274839M1 | 1 | Tube | |
| 29 | 4274837M1 | 1 | Tube | |
| 30 | 4274835M1 | 1 | Tube | |
| 31 | 4274833M1 | 1 | Tube | |
| 32 | 4274976M1 | 4 | Tube | |
| 33 | 3011136X91 | 8 | Tap | |
| 34 | 3011147X1 | 1 | O Ring | (33) |
| 35 | 3011119X1 | 8 | Nut | |
| 36 | 3011055X91 | 1 | Union | M33 |
| 37 | 3011062X1 | 1 | O Ring | (36) |
| 38 | 3011088X91 | 1 | Elbow Nipple | |
| 39 | 3011150X1 | 1 | O Ring | (38) |
| 40 | 338725X1 | 8 | Union | |
| 41 | 3011534X91 | 1 | Union | |
| 42 | 3019398X1 | 1 | O Ring | (41) |

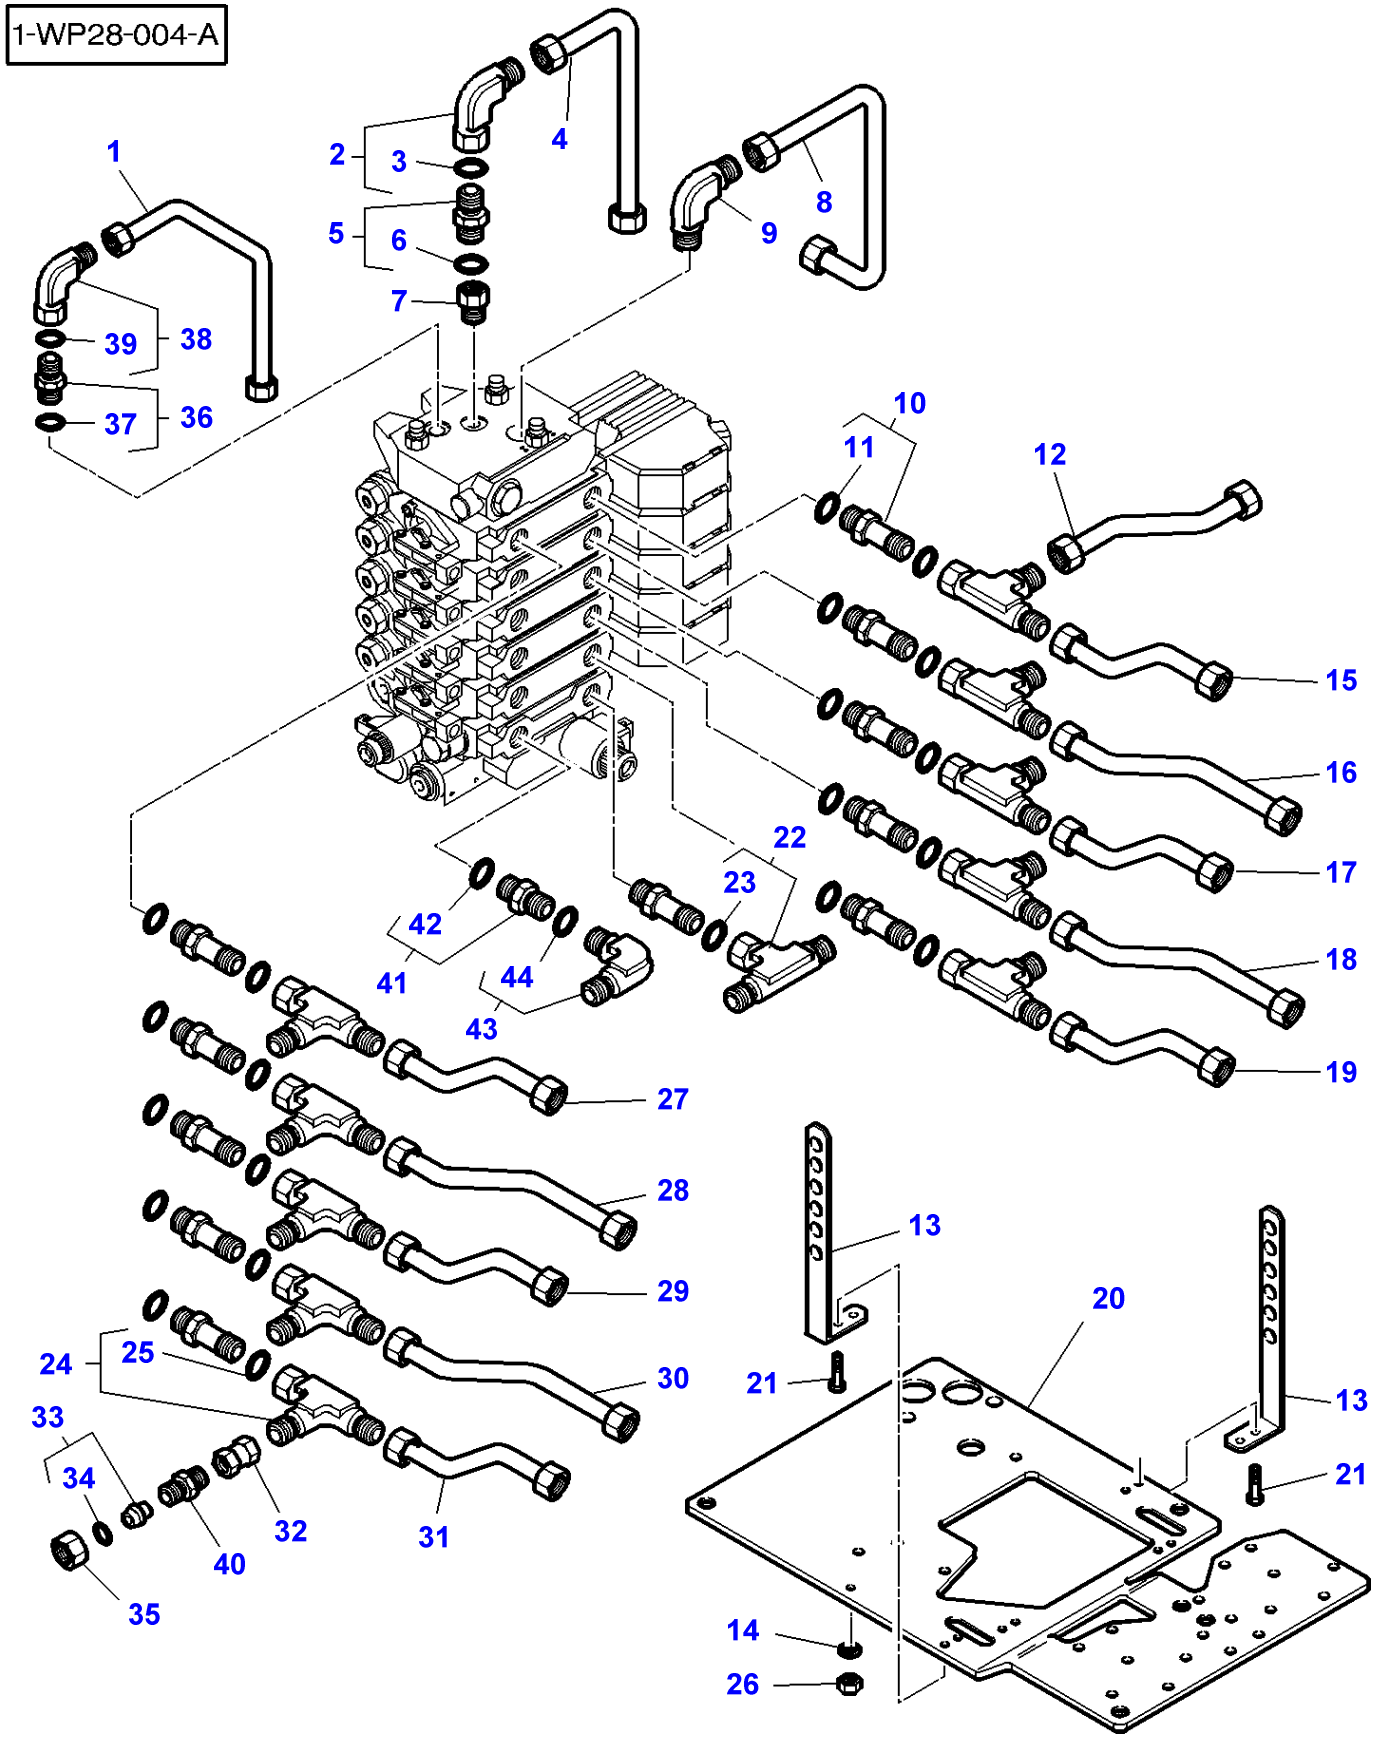

1-WP28-004-A
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275550M1 | 1 | Tube | |
| 2 | 3011082X91 | 1 | Elbow | |
| 3 | 3011144X1 | 1 | O Ring | (2) |
| 4 | 4275554M1 | 1 | Tube | |
| 5 | 3011045X91 | 1 | Union | M12 |
| 6 | 3011061X1 | 1 | O Ring | (5) |
| 7 | 3793729M1 | 1 | Reducer | |
| 8 | 4275552M1 | 1 | Tube | |
| 9 | 3787920M1 | 1 | Union | |
| 10 | 4274990M2 | 11 | Union | M22 |
| 11 | 3019398X1 | 1 | O Ring | (10) |
| 12 | 4274975M1 | 5 | Tube | |
| 13 | 4274987M1 | 2 | Support | |
| 14 | 390972X1 | 3 | Washer | |
| 15 | 4274973M1 | 1 | Tube | |
| 16 | 4274840M1 | 1 | Tube | |
| 17 | 4274838M1 | 1 | Tube | |
| 18 | 4274836M1 | 1 | Tube | |
| 19 | 4274834M1 | 1 | Tube | |
| 20 | 4274562M1 | 1 | Support | |
| 21 | 339230X1 | 4 | Hex. Sock. Screw | M6 X 10 |
| 22 | 3011093X91 | 1 | Union | |
| 23 | 3011147X1 | 1 | O Ring | (22) |
| 24 | 3011089X91 | 10 | Union | |
| 25 | 3011147X1 | 1 | O Ring | (24) |
| 26 | 339169X1 | 3 | Nut | M8 |
| 27 | 4274972M1 | 1 | Tube | |
| 28 | 4274839M1 | 1 | Tube | |
| 29 | 4274837M1 | 1 | Tube | |
| 30 | 4274835M1 | 1 | Tube | |
| 31 | 4274833M1 | 1 | Tube | |
| 32 | 4274976M1 | 5 | Tube | |
| 33 | 3011136X91 | 10 | Tap | |
| 34 | 3011147X1 | 1 | O Ring | (33) |
| 35 | 3011119X1 | 10 | Nut | |
| 36 | 3011055X91 | 1 | Union | M33 |
| 37 | 3011062X1 | 1 | O Ring | (36) |
| 38 | 3011088X91 | 1 | Elbow Nipple | |
| 39 | 3011150X1 | 1 | O Ring | (38) |
| 40 | 338725X1 | 10 | Union | |
| 41 | 3011534X91 | 1 | Union | |
| 42 | 3019398X1 | 1 | O Ring | (41) |
| 43 | 3011085X91 | 1 | Union | |
| 44 | 3011147X1 | 1 | O Ring | (43) |

**FOOTNOTE [A]** NUMBER TO BE ADVISED

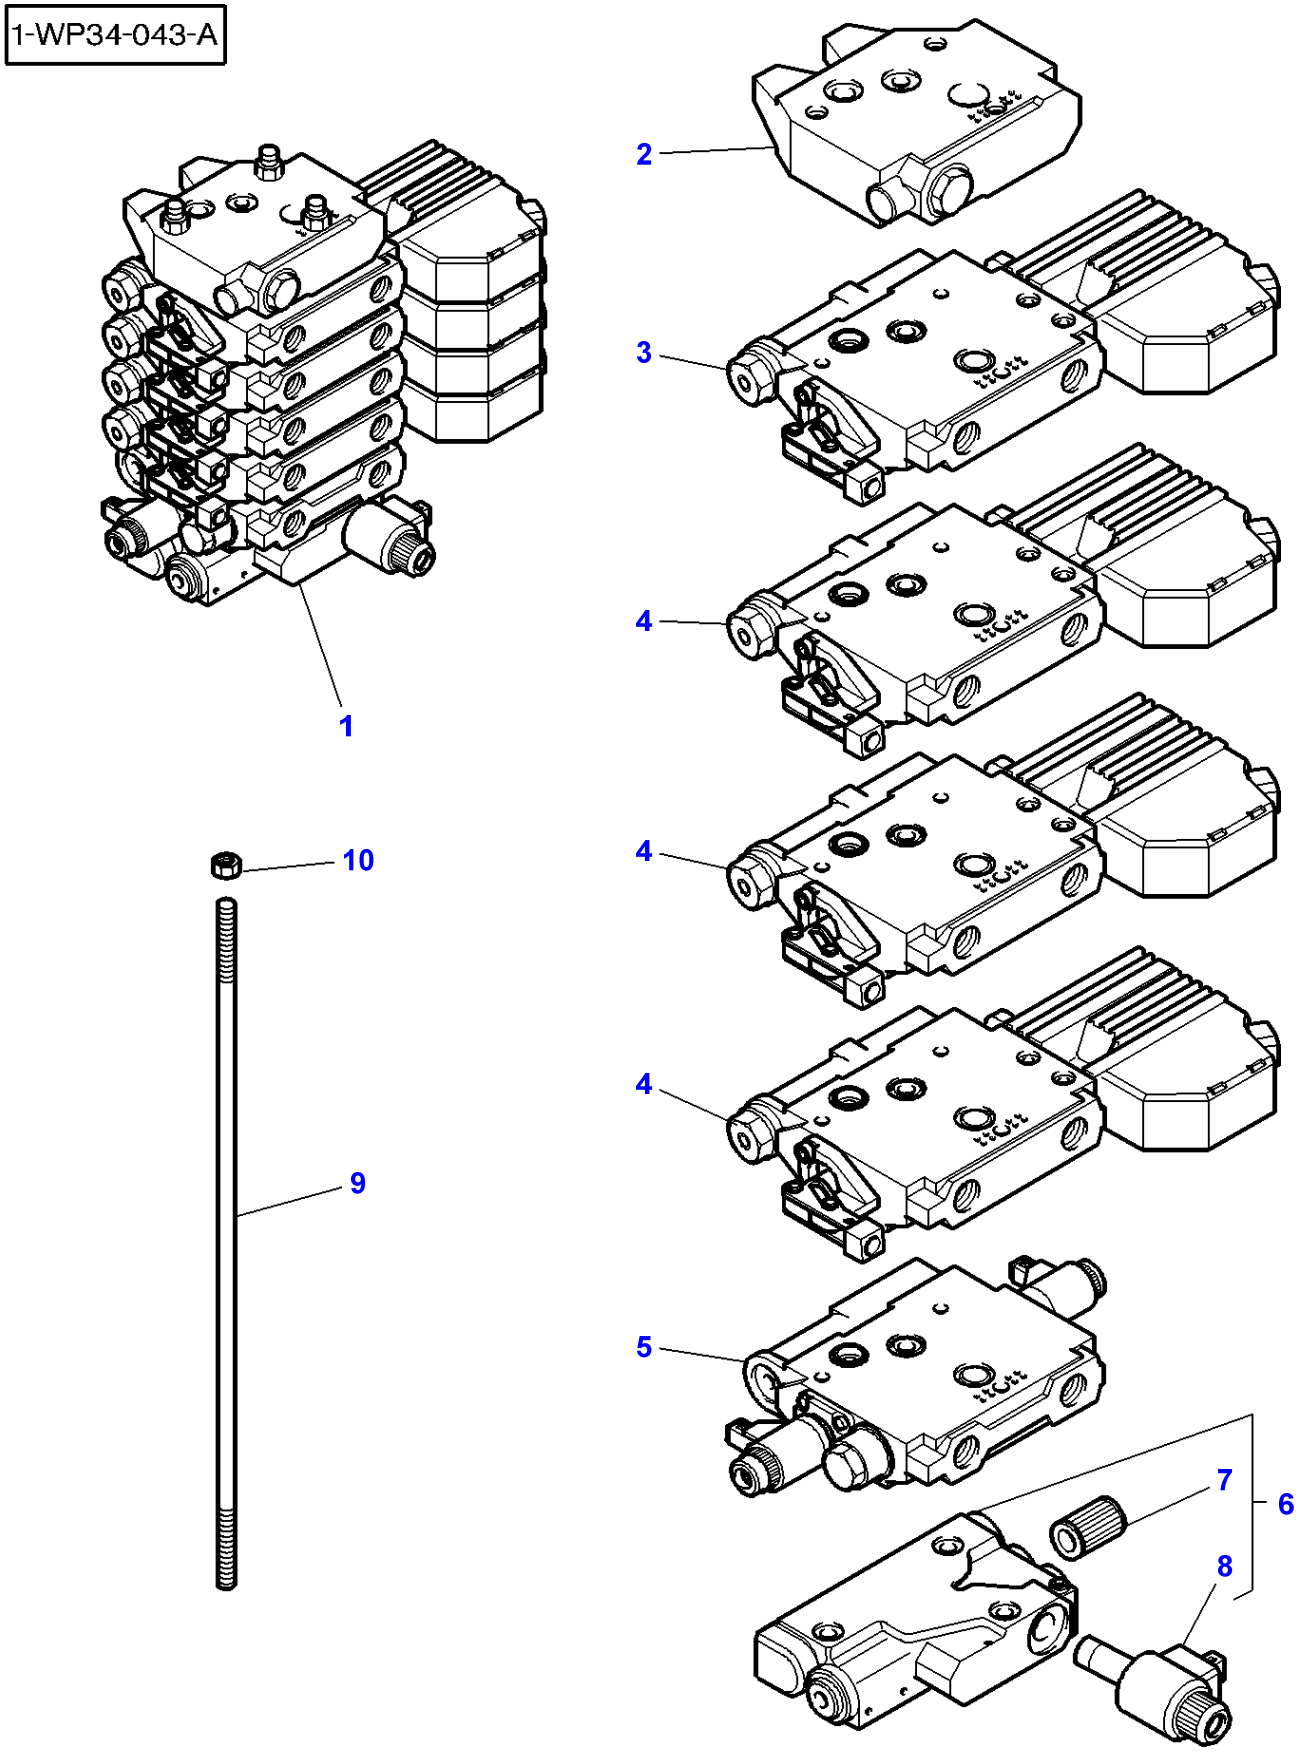

1-WP34-043-A
1
2
3
4
4
4
5
6
7
8
9
10

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 1 | Distributor | [E] |
| 2 | 3796110M1 | 1 | Element | (1) |
| 3 | 3796026M7 | 1 | Distributor | [A,B,C] (1) |
| 4 | 3796027M7 | 3 | Distributor | [A,B] (1) |
| 5 | 3796179M2 | 1 | Control Valve | [D,F] (1) |
| 6 | 3796028M2 | 1 | Element | (1) |
| 7 | G001.990.100.010 | 1 | Kit, Filter | (6) |
| 8 | 3903960M1 | 1 | Electrovalve | (6) |
| 9 | 3799724M1 | 3 | Stud | (1) M8 X 306 |
| 10 | 339169X1 | 3 | Nut | (1) M8 |

**FOOTNOTE [A]** DISTRIBUTOR WITH ELECTRIC CONTROL
**FOOTNOTE [B]** DIST 4 POSITIONS,FLOW ADJUST,DOUBLE ACTION,ZERO LE AK
**FOOTNOTE [C]** WITH TIGHTENESS BALLS
**FOOTNOTE [D]** HYDRAULIC LIFT VALVE
**FOOTNOTE [E]** ORDER DETAIL
**FOOTNOTE [F]** DETAILS TO BE ADVISED

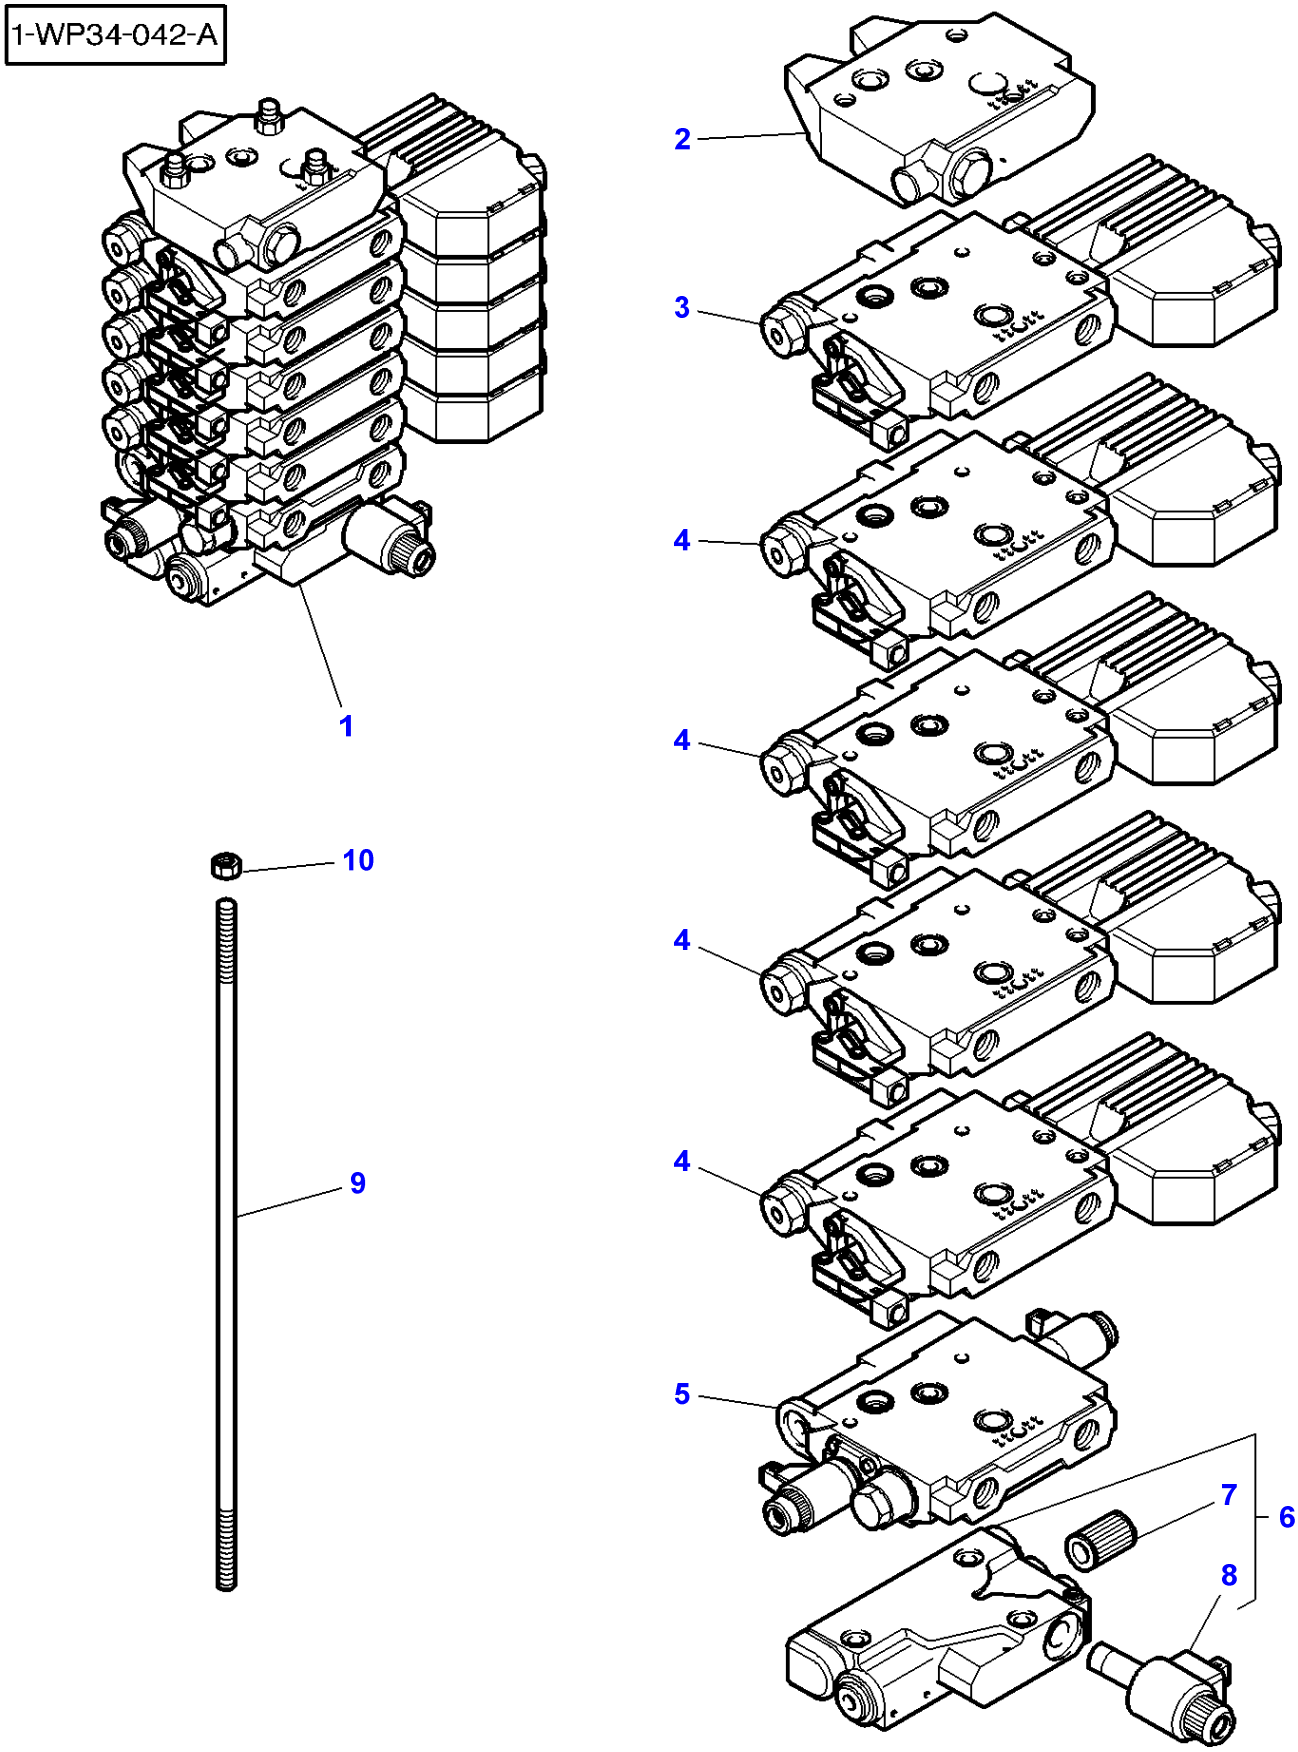

1-WP34-042-A
1
2
3
4
4
4
4
5
6
7
8
9
10

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | | 1 | Distributor | [E] |
| 2 | 3796110M1 | 1 | Element | (1) |
| 3 | 3796026M7 | 1 | Distributor | [A,B,C] (1) |
| 4 | 3796027M7 | 4 | Distributor | [A,B] (1) |
| 5 | 3796179M2 | 1 | Control Valve | [D,F] (1) |
| 6 | 3796028M2 | 1 | Element | (1) |
| 7 | G001.990.100.010 | 1 | Kit, Filter | (6) |
| 8 | 3903960M1 | 1 | Electrovalve | (6) |
| 9 | 3799725M1 | 3 | Stud | (1) M8 X 346 |
| 10 | 339169X1 | 3 | Nut | (1) M8 |

**FOOTNOTE [A]** DISTRIBUTOR WITH ELECTRIC CONTROL
**FOOTNOTE [B]** DIST 4 POSITIONS,FLOW ADJUST,DOUBLE ACTION,ZERO LE AK
**FOOTNOTE [C]** WITH TIGHTENESS BALLS
**FOOTNOTE [D]** HYDRAULIC LIFT VALVE
**FOOTNOTE [E]** ORDER DETAIL
**FOOTNOTE [F]** DETAILS TO BE ADVISED

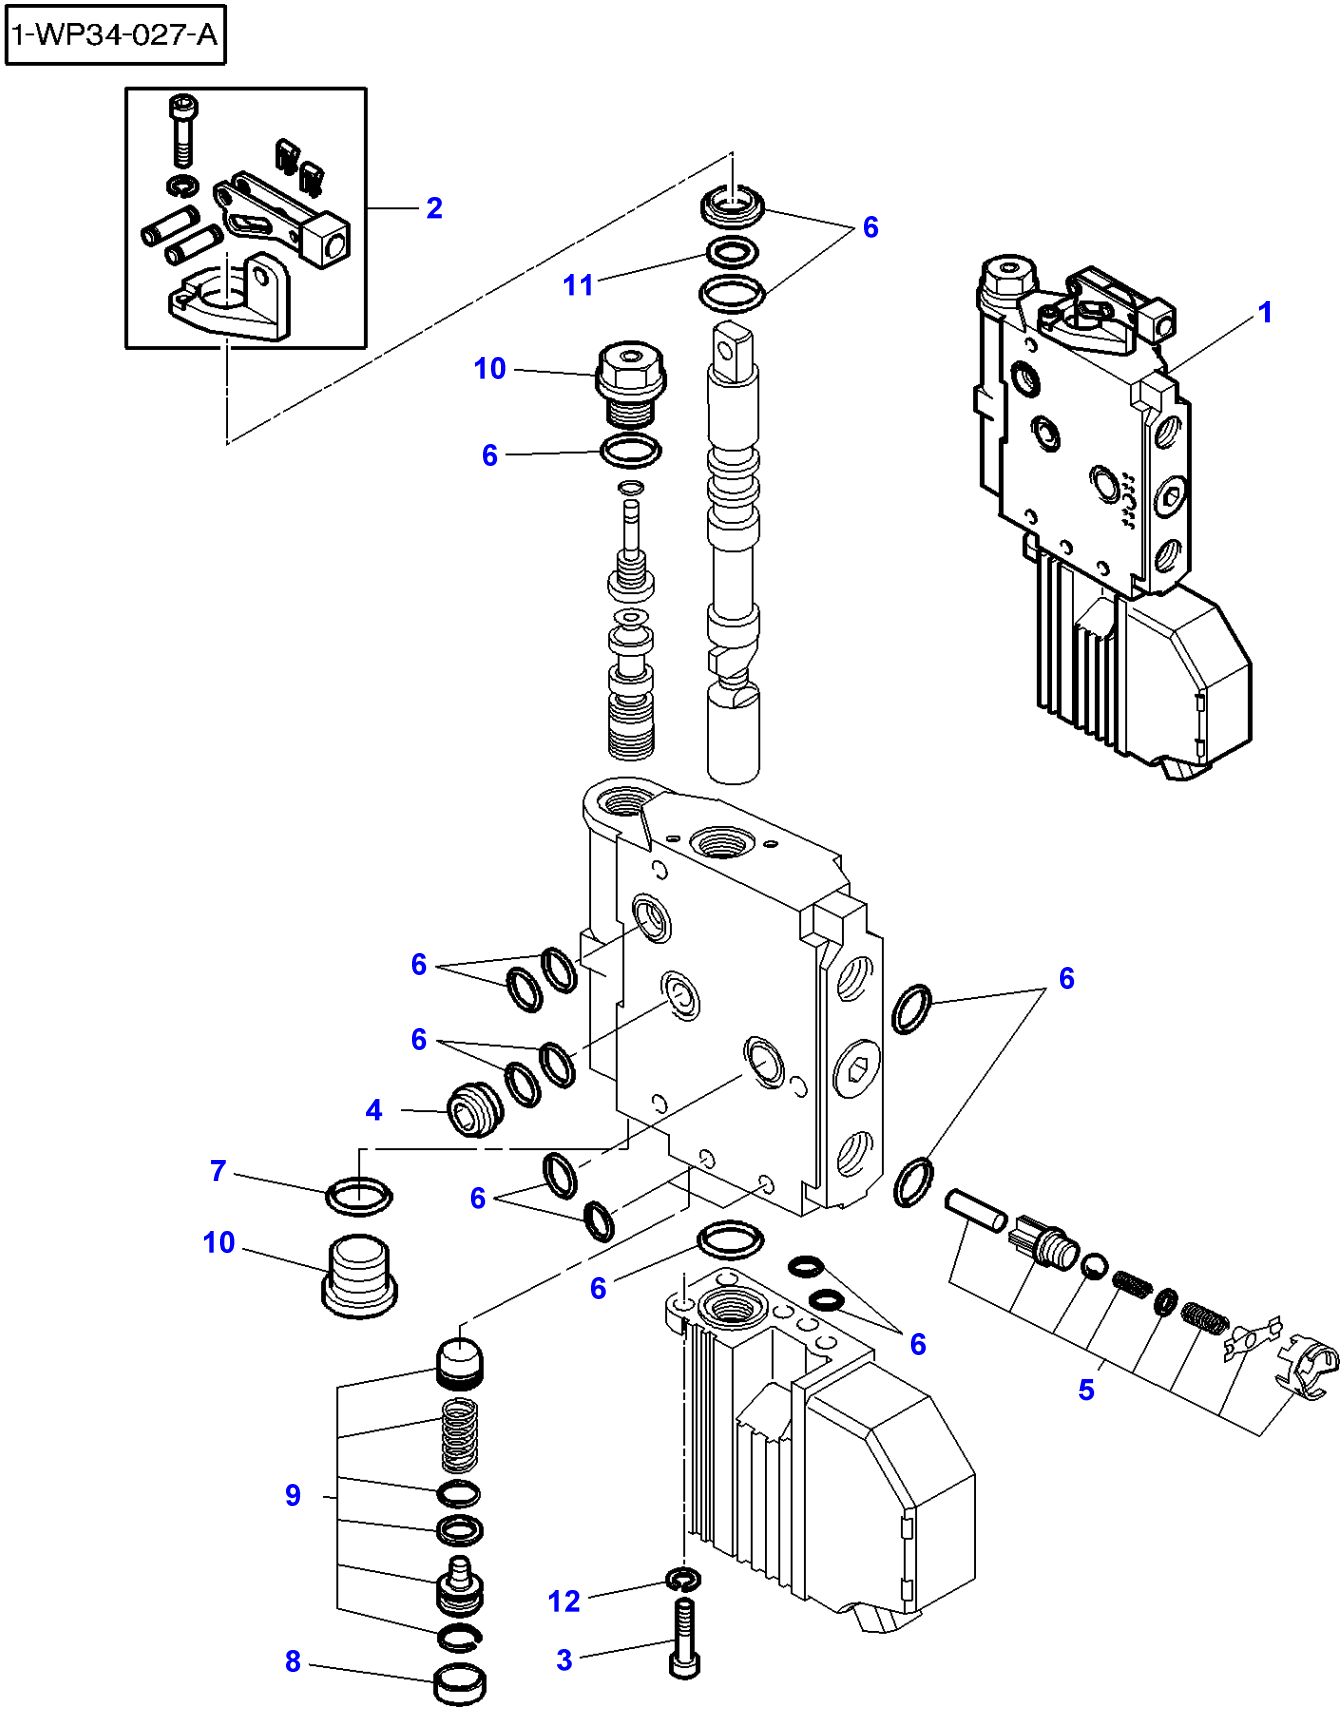

1-WP34-027-A
2
6
11
10
6
1
6
6
4
7
6
10
6
6
6
5
9
12
3
8

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3796026M7 | 1 | Distributor | [A,B] |
| | 3796027M7 | 1 | Distributor | [A] |
| 2 | 3797284M1 | 1 | Drive | (1) |
| 3 | 3009281X1 | 3 | Screw | (1) M6 X 16 |
| 4 | 3108248M1 | 1 | Bypass | (1) |
| 5 | 3903864M91 | 1 | Parts Pack | (1) |
| 6 | 3903869M92 | 1 | Kit,Joint/Gasket | (1) |
| 7 | 3108243M1 | 1 | Washer | (1) |
| 8 | 3903856M1 | 1 | Plug | (1) |
| 9 | 3904676M91 | 1 | Parts Pack | (1) |
| 10 | 3108244M1 | 2 | Plug | (1) |
| 11 | 3904668M1 | 1 | Washer | (1) |
| 12 | 391130X1 | 3 | Lock Washer | (1) |


**FOOTNOTE [A]** DIST 4 POSITIONS,FLOW ADJUST,DOUBLE ACTION,ZERO LE AK
**FOOTNOTE [B]** WITH TIGHTENESS BALLS

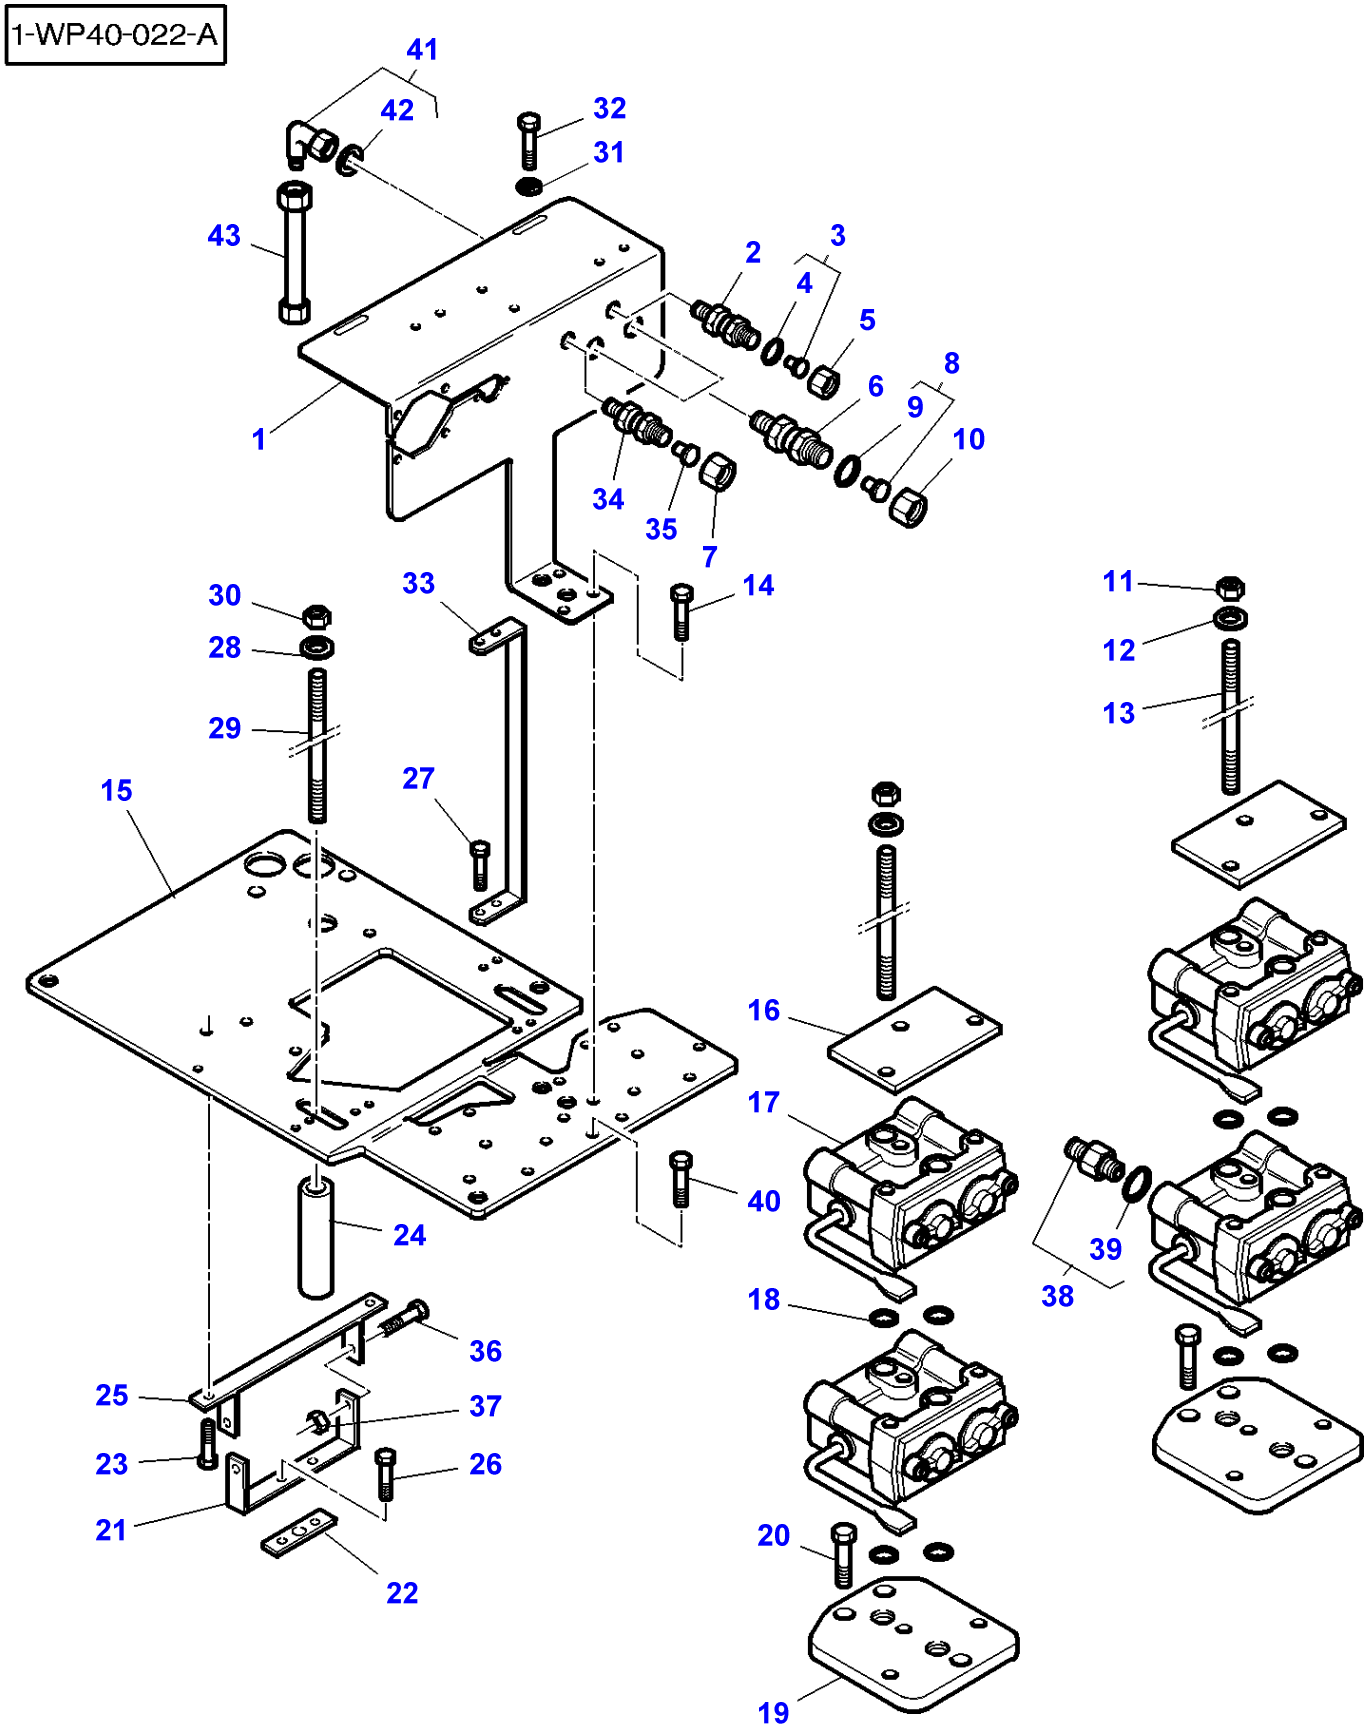
1-WP40-022-A
41
42
32
31
43
2
3
4
5
8
6
9
10
1
34
35
7
30
33
14
11
28
12
29
13
27
15
16
17
40
24
39
38
18
36
25
37
23
26
21
20
22
19

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277183M1 | 1 | Support | |
| 2 | 3001317X1 | 1 | Union | |
| 3 | 3011132X91 | 1 | Tap | |
| 4 | 3011145X1 | 1 | O Ring | (3) |
| 5 | 3011117X1 | 1 | Nut | |
| 6 | 3011404X91 | 2 | Union | |
| 7 | 3011118X1 | 1 | Nut | |
| 8 | 3011138X91 | 2 | Tap | |
| 9 | 3011148X1 | 1 | O Ring | (8) |
| 10 | 3011120X1 | 2 | Nut | |
| 11 | 3005908X1 | 6 | Cap Nut | |
| 12 | 390972X1 | 6 | Washer | |
| 13 | 4275557M1 | 6 | Stem | M8 X 175MM |
| 14 | 339228X1 | 2 | Hex. Sock. Screw | M8 X 12 |
| 15 | 4274562M1 | 1 | Support | |
| 16 | 3792734M1 | 2 | Plate | |
| 17 | 3796260M1 | 4 | Female Coupler | See Page - Reference Number 070-0195/1 |
| 18 | 3007432X1 | 12 | O Ring | |
| 19 | 4274829M2 | 2 | Support | |
| 20 | 3009285X1 | 6 | Screw | M8 X 16 |
| 21 | 4278264M1 | 1 | Support | |
| 22 | 822100070411 | 1 | Gasket | |
| 23 | 339282X1 | 2 | Hex. Sock. Screw | M10 X 16 |
| 24 | 4274977M1 | 2 | Spacer | |
| 25 | 4278265M1 | 1 | Support | |
| 26 | 339124X1 | 2 | Hex. Sock. Screw | M8 X 16 |
| 27 | 391074X1 | 4 | Hex. Sock. Screw | M6 X 12 |
| 28 | 390974X1 | 2 | Washer Metric | |
| 29 | 4276649M1 | 2 | Stem | |
| 30 | 3011390X1 | 2 | Nut | |
| 31 | 390971X1 | 4 | Washer | |
| 32 | 339230X1 | 4 | Hex. Sock. Screw | M6 X 10 |
| 33 | 4275580M1 | 2 | Support | |
| 34 | 1442332X91 | 1 | Union | |
| 35 | 3011134X91 | 1 | Tap | |
| 36 | 3009494X1 | 2 | Hex. Sock. Screw | M10 X 35 |
| 37 | 1441932X1 | 2 | Nut Metric | M10 |
| 38 | 3011534X91 | 8 | Union | M22 |
| 39 | 3019398X1 | 1 | O Ring | (38) |
| 40 | 391990X1 | 2 | Screw | M8 X 25 |
| 41 | 3011084X91 | 1 | Union | |
| 42 | 3011146X1 | 1 | O Ring | (41) |
| 43 | 4277192M1 | 1 | Tube | |

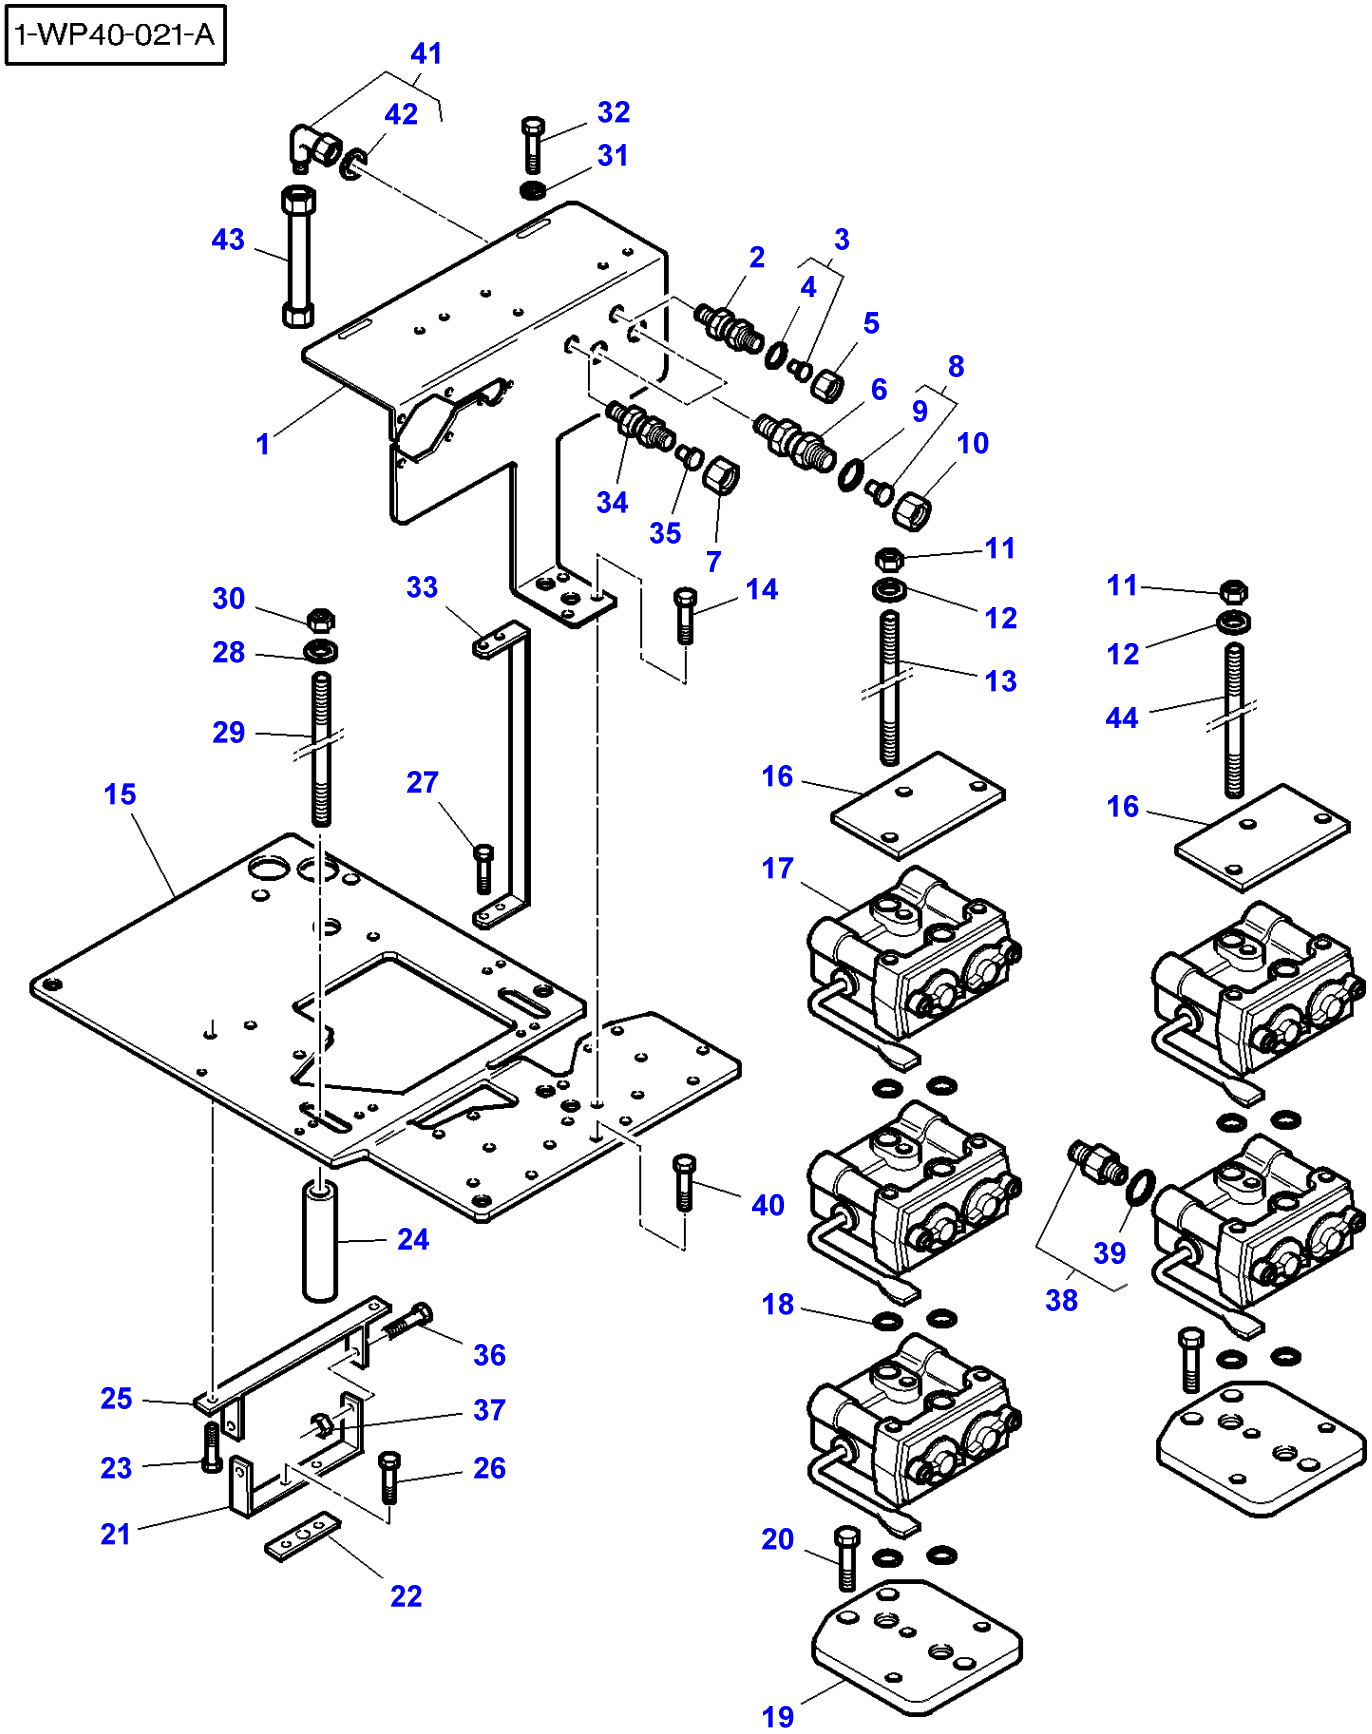

1-WP40-021-A
41
42
32
31
43
2
3
4
5
6
8
9
10
1
34
35
7
11
14
12
13
30
28
33
29
27
15
16
17
18
20
19
24
40
25
36
37
23
26
21
22
11
12
44
16
39
38

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277182M1 | 1 | Support | |
| 2 | 3001317X1 | 1 | Union | |
| 3 | 3011132X91 | 1 | Tap | |
| 4 | 3011145X1 | 1 | O Ring | (3) |
| 5 | 3011117X1 | 1 | Nut | |
| 6 | 3011404X91 | 2 | Union | |
| 7 | 3011118X1 | 1 | Nut | |
| 8 | 3011138X91 | 2 | Tap | |
| 9 | 3011148X1 | 1 | O Ring | (8) |
| 10 | 3011120X1 | 2 | Nut | |
| 11 | 3005908X1 | 6 | Cap Nut | |
| 12 | 390972X1 | 6 | Washer | |
| 13 | 4275556M1 | 3 | Stem | M8 X 245 |
| 14 | 339228X1 | 2 | Hex. Sock. Screw | M8 X 12 |
| 15 | 4274562M1 | 1 | Support | |
| 16 | 3792734M1 | 2 | Plate | |
| 17 | 3796260M1 | 5 | Female Coupler | See Page - Reference Number 070-0195/1 |
| 18 | 3007432X1 | 14 | O Ring | |
| 19 | 4274829M2 | 2 | Support | |
| 20 | 3009285X1 | 6 | Screw | M8 X 16 |
| 21 | 4278264M1 | 1 | Support | |
| 22 | 822100070411 | 1 | Gasket | |
| 23 | 339282X1 | 2 | Hex. Sock. Screw | M10 X 16 |
| 24 | 4274977M1 | 2 | Spacer | |
| 25 | 4278265M1 | 1 | Support | |
| 26 | 339124X1 | 2 | Hex. Sock. Screw | M8 X 16 |
| 27 | 391074X1 | 4 | Hex. Sock. Screw | M6 X 12 |
| 28 | 390974X1 | 2 | Washer Metric | |
| 29 | 4276649M1 | 2 | Stem | |
| 30 | 3011390X1 | 2 | Nut | |
| 31 | 390971X1 | 4 | Washer | |
| 32 | 339230X1 | 4 | Hex. Sock. Screw | M6 X 10 |
| 33 | 4275580M1 | 2 | Support | |
| 34 | 1442332X91 | 1 | Union | |
| 35 | 3011134X91 | 1 | Tap | |
| 36 | 3009494X1 | 2 | Hex. Sock. Screw | M10 X 35 |
| 37 | 1441932X1 | 2 | Nut Metric | M10 |
| 38 | 3011534X91 | 10 | Union | M22 |
| 39 | 3019398X1 | 1 | O Ring | (38) |
| 40 | 391990X1 | 2 | Screw | M8 X 25 |
| 41 | 3011084X91 | 1 | Union | |
| 42 | 3011146X1 | 1 | O Ring | (41) |
| 43 | 4277192M1 | 1 | Tube | |
| 44 | 4275557M1 | 3 | Stem | M8 X 175MM |

1-WP40-015-A

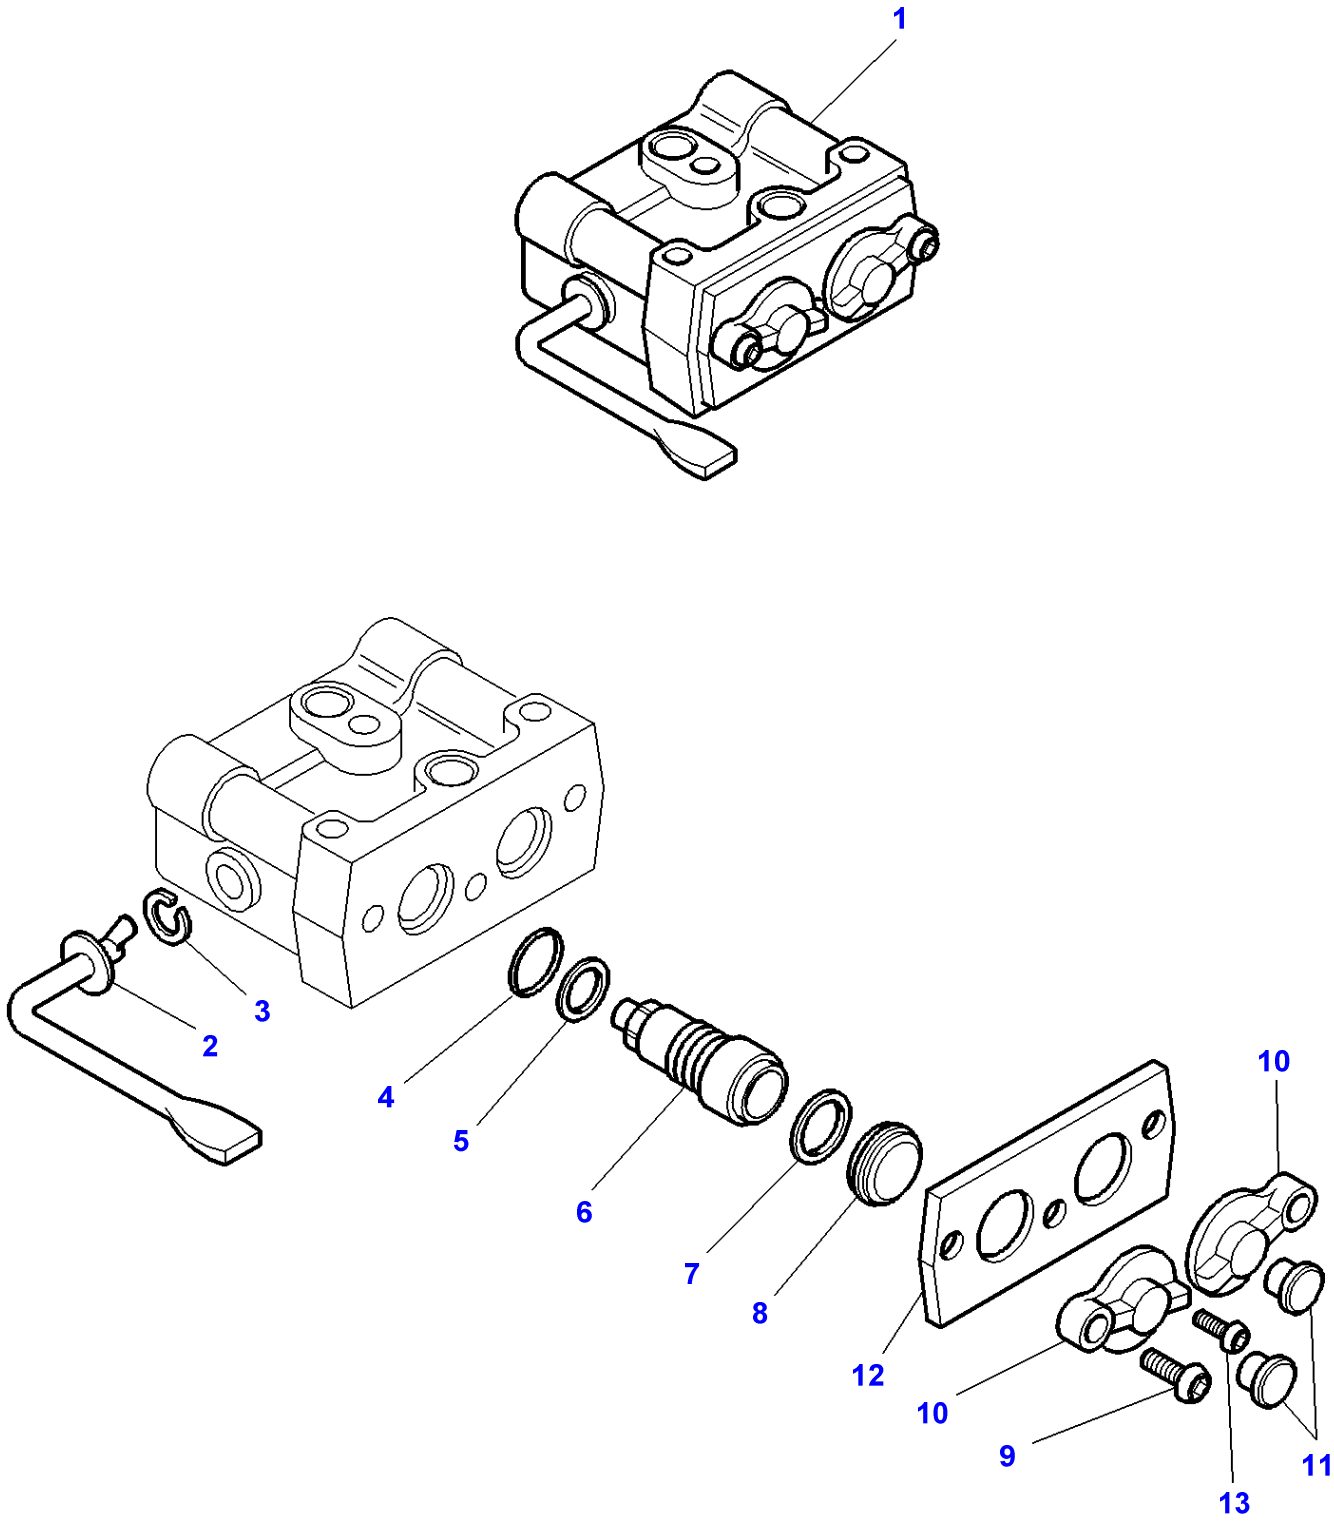

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Hydraulic Coupling Page 070-0195

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3796260M1 | 1 | Female Coupler | |
| 2 | 3903463M91 | 1 | Lever | (1) |
| 3 | 3903462M1 | 1 | Circlip | (1) |
| 4 | 3903465M1 | 2 | Gasket | (1) |
| 5 | 3903464M1 | 2 | Gasket | (1) |
| 6 | 3903972M91 | 2 | Kit, Cartridge | (1) Replace and repair. Old not interchangeable with new 3903461M91 |
| 7 | 3903460M1 | 2 | Clip | (1) |
| 8 | 3903459M1 | 2 | Seal | (1) |
| 9 | 3903455M1 | 2 | Screw | (1) |
| 10 | 3903456M1 | 2 | Tap | (1) |
| 11 | 3796263M1 | 2 | Plug | [A] |
| | 3796264M1 | 2 | Plug | [B] |
| | 3796262M1 | 2 | Plug | [C] |
| | 3796261M1 | 2 | Plug | [D] |
| | 4300879M1 | 2 | Plug | [E] |
| 12 | 3903458M1 | 1 | Plate | (1) |
| 13 | 3903457M1 | 1 | Screw | (1) |

**FOOTNOTE [A]** BLACK
**FOOTNOTE [B]** RED
**FOOTNOTE [C]** GREEN
**FOOTNOTE [D]** YELLOW
**FOOTNOTE [E]** BLUE
**FOOTNOTE [F]** BROWN

1-WP43-001-A

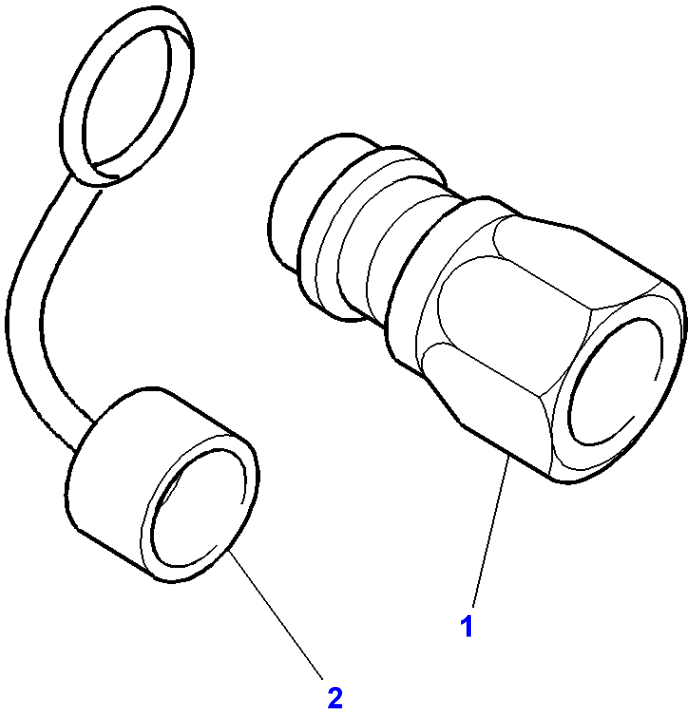


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | **3583932M1** | X | Male Coupler | M18X1,5 |
| | **1026700M91** | X | Male Coupler | 3/4" |
| 2 | 3615822M1 | X | Cap | |

1-WP41-019-A

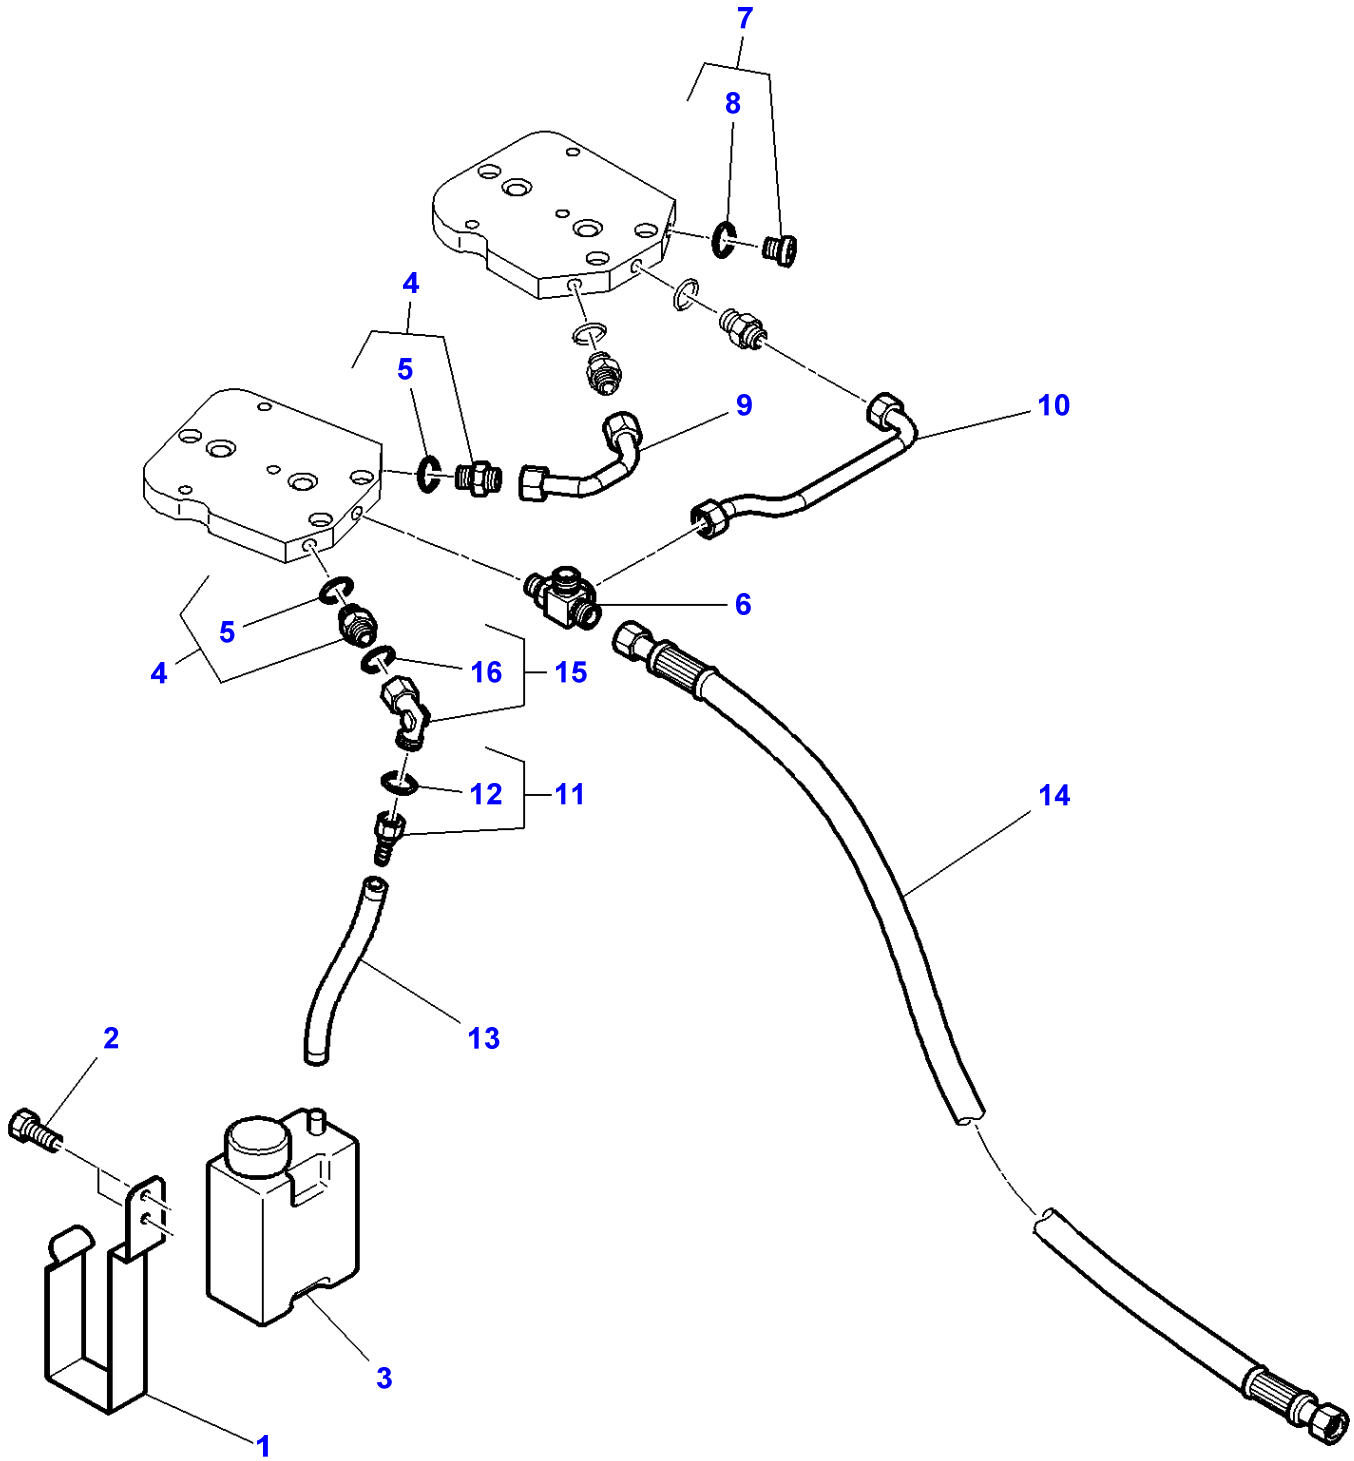


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4274980M1 | 1 | Support | |
| 2 | 390916X1 | 2 | Hex. Sock. Screw | M6 X 8 |
| 3 | 3794303M1 | 1 | Can | |
| 4 | 338795X91 | 4 | Union | M14 |
| 5 | 338762X1 | 1 | Seal | (4) |
| 6 | 4277193M1 | 1 | Union | M14 |
| 7 | 3011099X91 | 1 | Plug | M14X1,5 |
| 8 | 338762X1 | 1 | Seal | (7) |
| 9 | 4274830M1 | 1 | Tube | |
| 10 | 4274831M2 | 1 | Tube | |
| 11 | 4274995M1 | 1 | Union | |
| 12 | 1441121X1 | 1 | O Ring | (11) |
| 13 | 4276166M2 | 1 | Hydr. Hose | Length 210 MM |
| 14 | 4276167M1 | 1 | Hydr. Hose | |
| 15 | 3011083X91 | 1 | Union | M16X1,5 |
| 16 | 3011145X1 | 1 | O Ring | (15) |

1-WP58-003-A

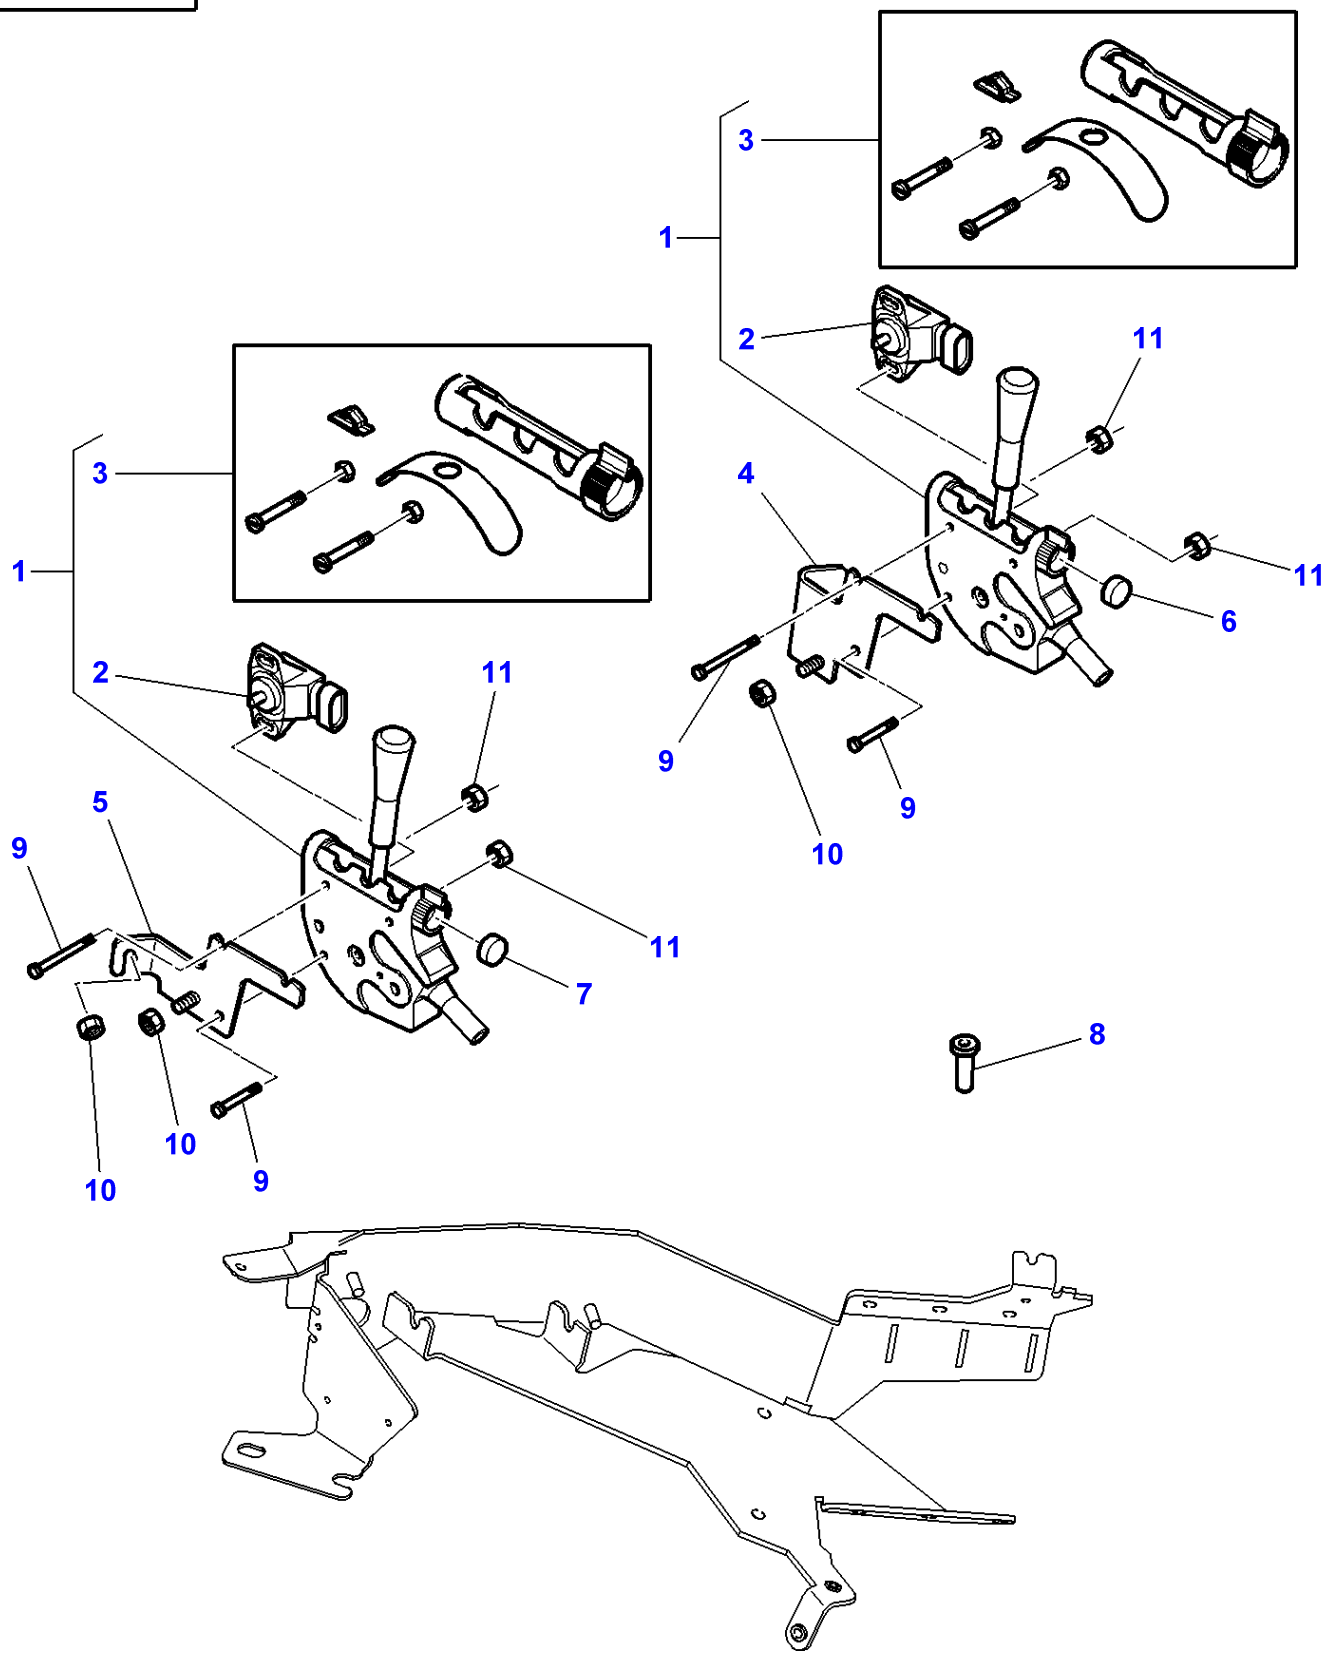


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787595M91 | 2 | Wobble Drive | |
| 2 | **3797129M1** | 1 | Position Sensor | (1) |
| 3 | 3907279M91 | 1 | Parts Pack | (1) |
| 4 | 4270720M2 | 1 | Plate Clamping | |
| 5 | 4271369M2 | 1 | Plate Clamping | |
| 6 | 3787596M2 | 1 | Padding | [B] |
| 7 | 3787597M2 | 1 | Padding | [A] |
| 8 | 3787578M1 | 4 | Plug | |
| 9 | 391244X1 | 6 | Hex. Sock. Screw | M6 X 45 |
| 10 | 394367X1 | 4 | Locknut | M8 |
| 11 | 1441500X1 | 6 | Locknut | M6 |

**FOOTNOTE [A]** BLACK
**FOOTNOTE [B]** YELLOW

1-WP44-001-B

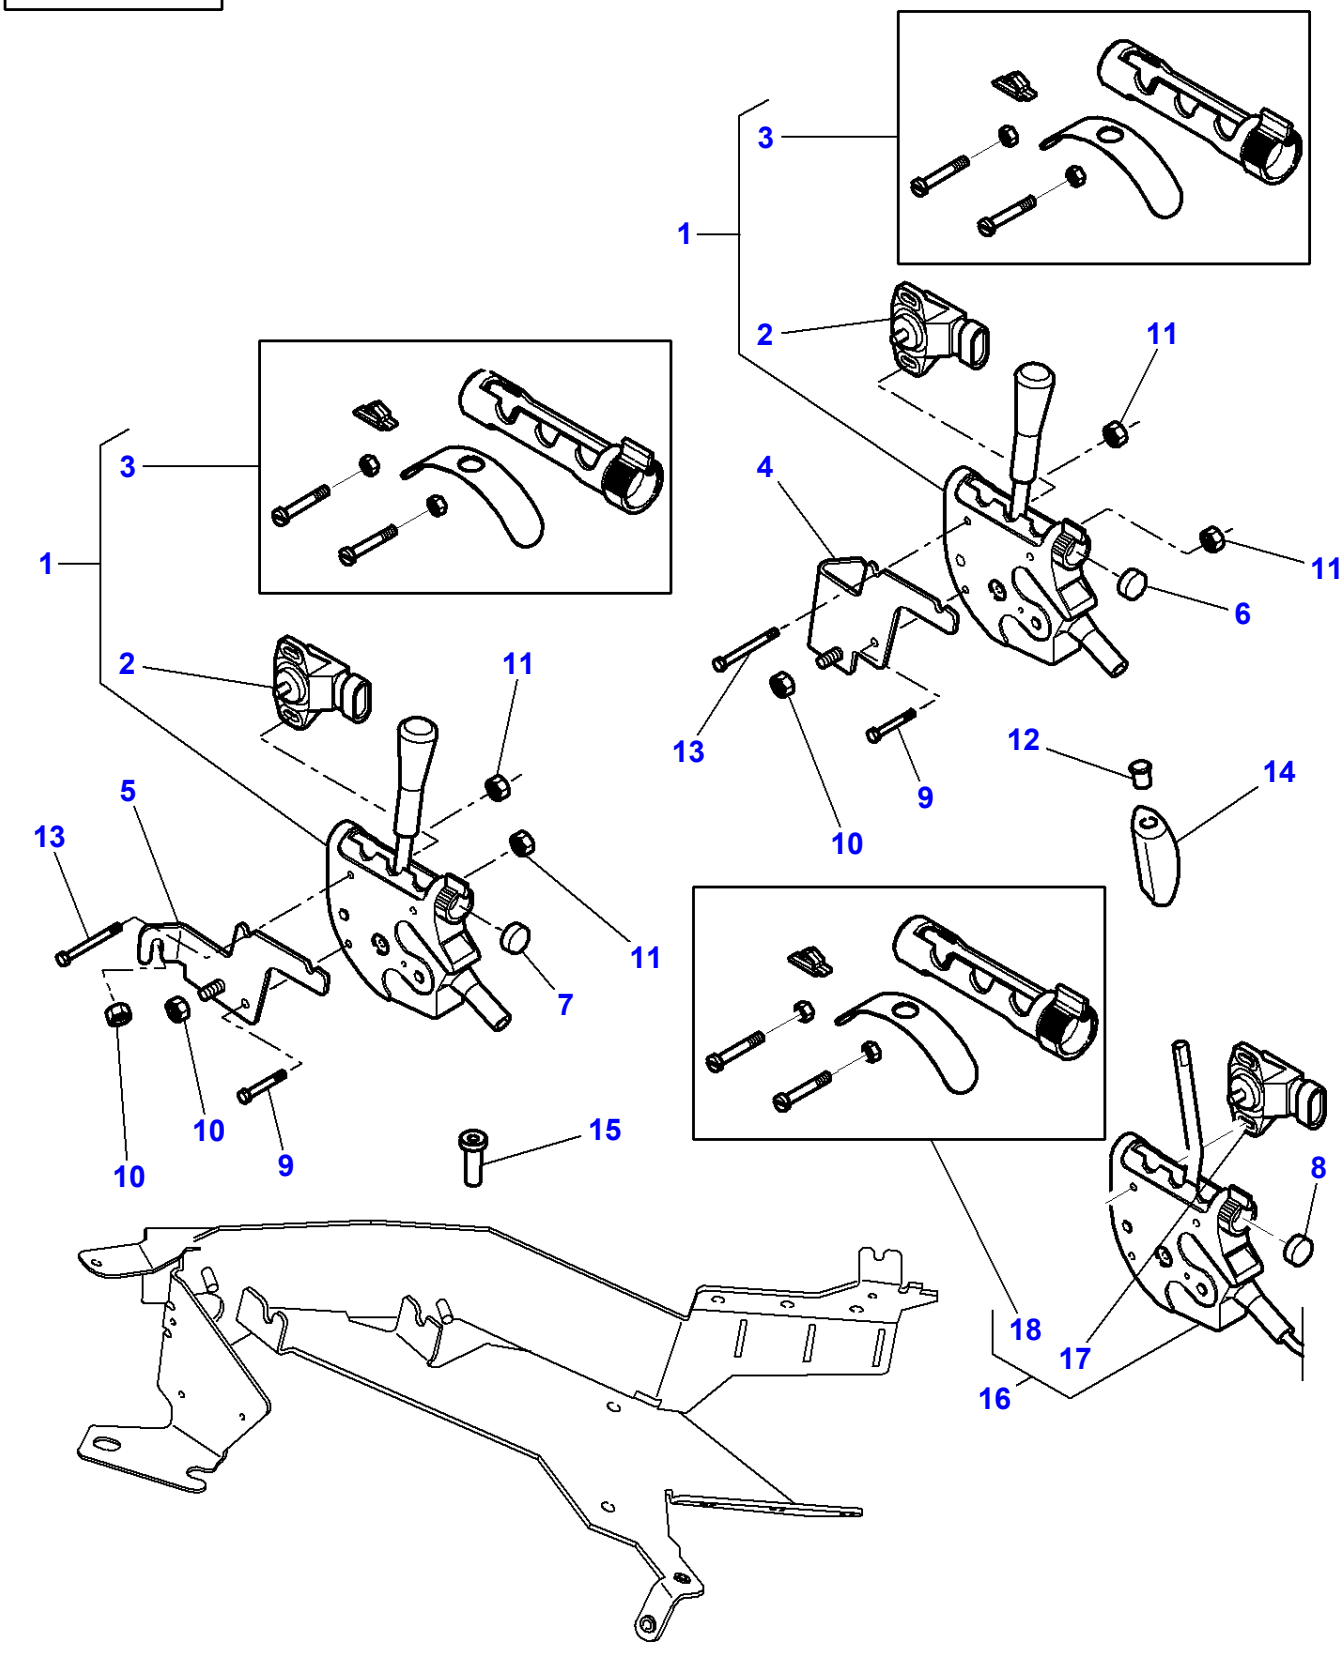


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787595M91 | 2 | Wobble Drive | |
| 2 | **3797129M1** | 1 | Position Sensor | (1) |
| 3 | 3907279M91 | 1 | Parts Pack | (1) |
| 4 | 4270720M2 | 1 | Plate Clamping | |
| 5 | 4271369M2 | 1 | Plate Clamping | |
| 6 | 3787596M2 | 1 | Padding | [B] |
| 7 | 3787597M2 | 1 | Padding | [A] |
| 8 | 3787600M2 | 1 | Padding | [C] |
| 9 | 391244X1 | 3 | Hex. Sock. Screw | M6 X 45 |
| 10 | 394367X1 | 4 | Locknut | M8 |
| 11 | 1441500X1 | 6 | Locknut | M6 |
| 12 | 3715496M1 | 1 | Muff | |
| 13 | 3009035X1 | 3 | Hex. Sock. Screw | M6 X 75 |
| 14 | 3715495M1 | 1 | Handle | |
| 15 | 3787578M1 | 4 | Plug | |
| 16 | 4277700M91 | 1 | Wobble Drive | |
| 17 | **3797129M1** | 1 | Position Sensor | (16) |
| 18 | 3907279M91 | 1 | Parts Pack | (16) |

**FOOTNOTE [A]** BLACK
**FOOTNOTE [B]** YELLOW
**FOOTNOTE [C]** BLUE

1-WC15-001-C

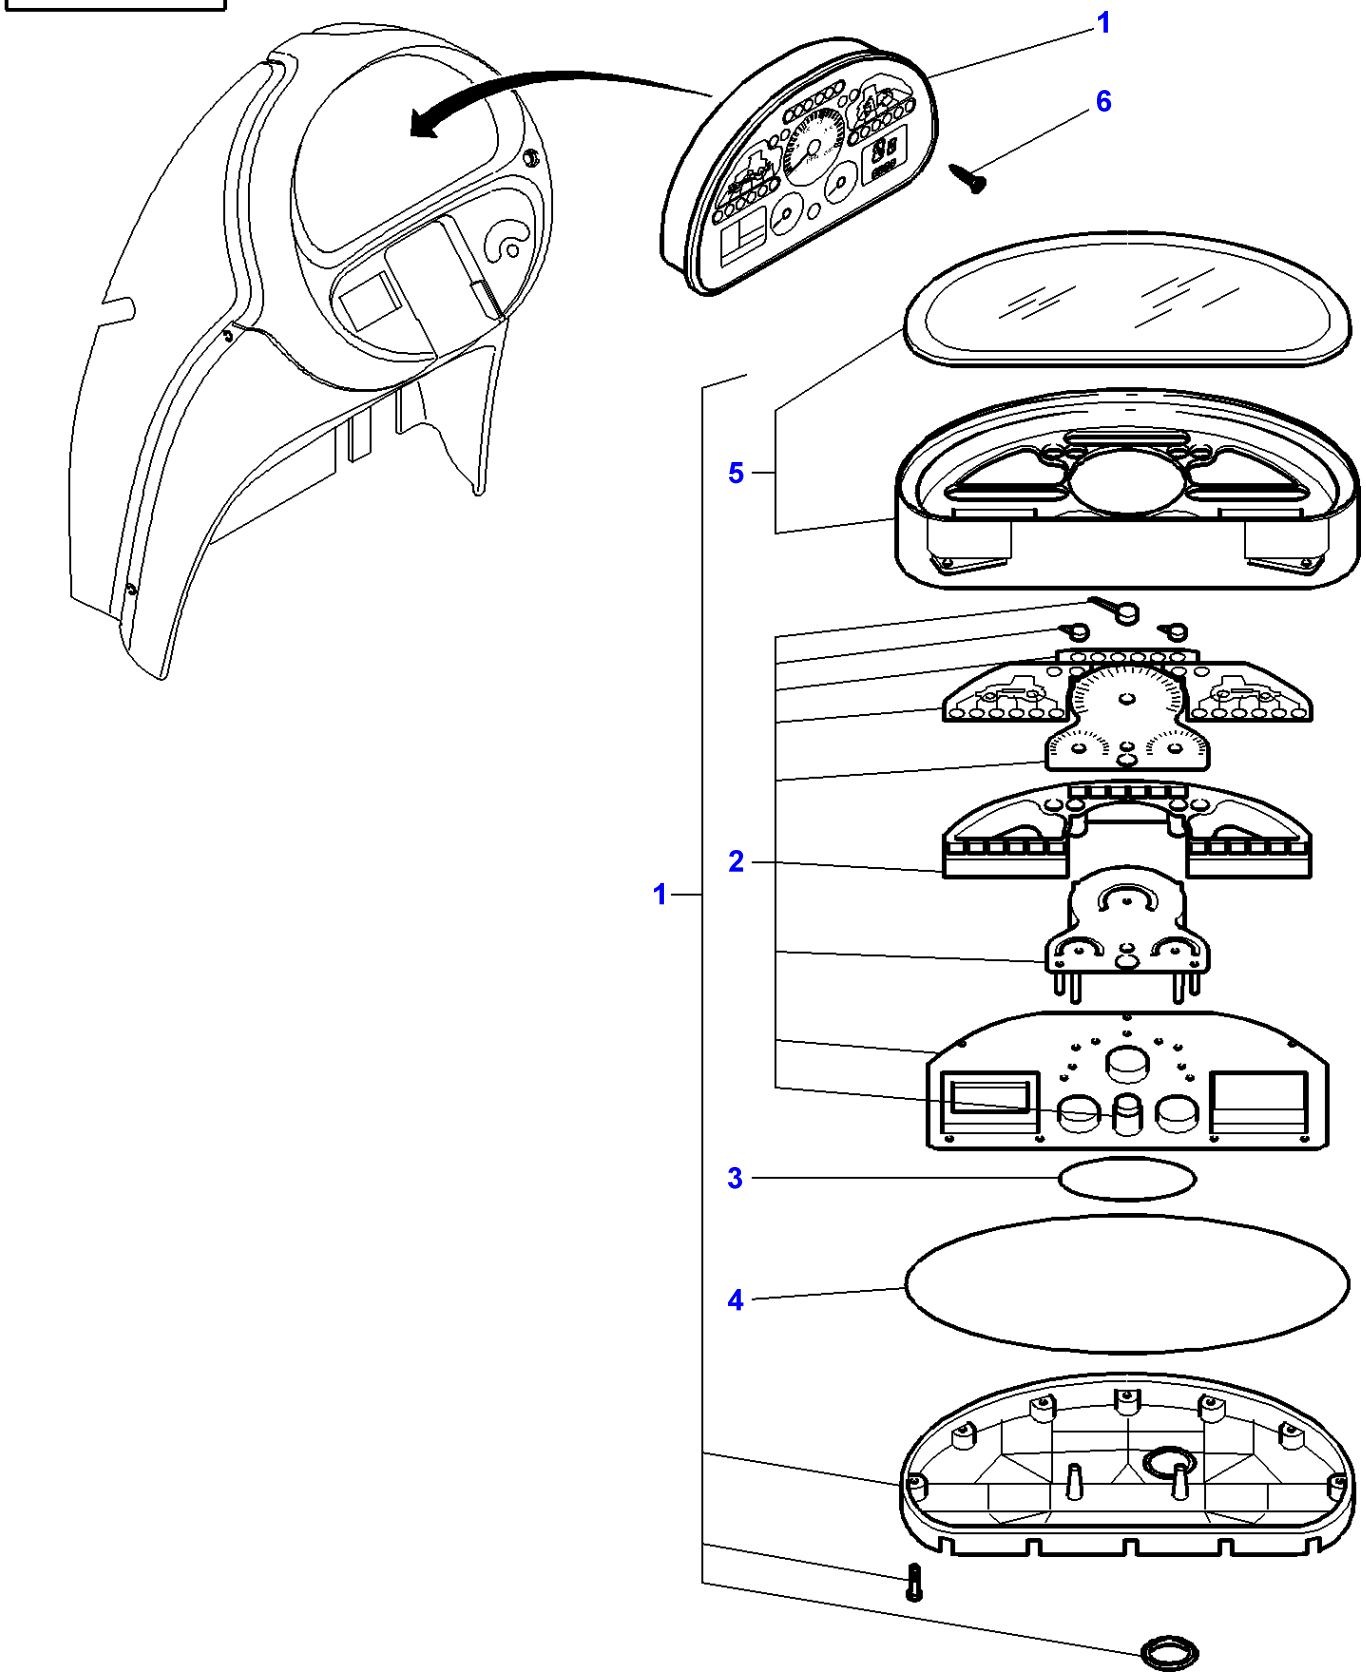


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787409M93 | 1 | Instrument Panel | |
| 2 | | 1 | Printed Circuit | (1) Not serviced,order REF. 1 |
| 3 | 3907246M1 | 1 | Gasket | (1) |
| 4 | 3907247M1 | 1 | Gasket | (1) |
| 5 | 3907532M91 | 1 | Panel | (1) |
| 6 | 3010791X1 | 4 | Screw | M4 X 20 |

1-WU21-001-B

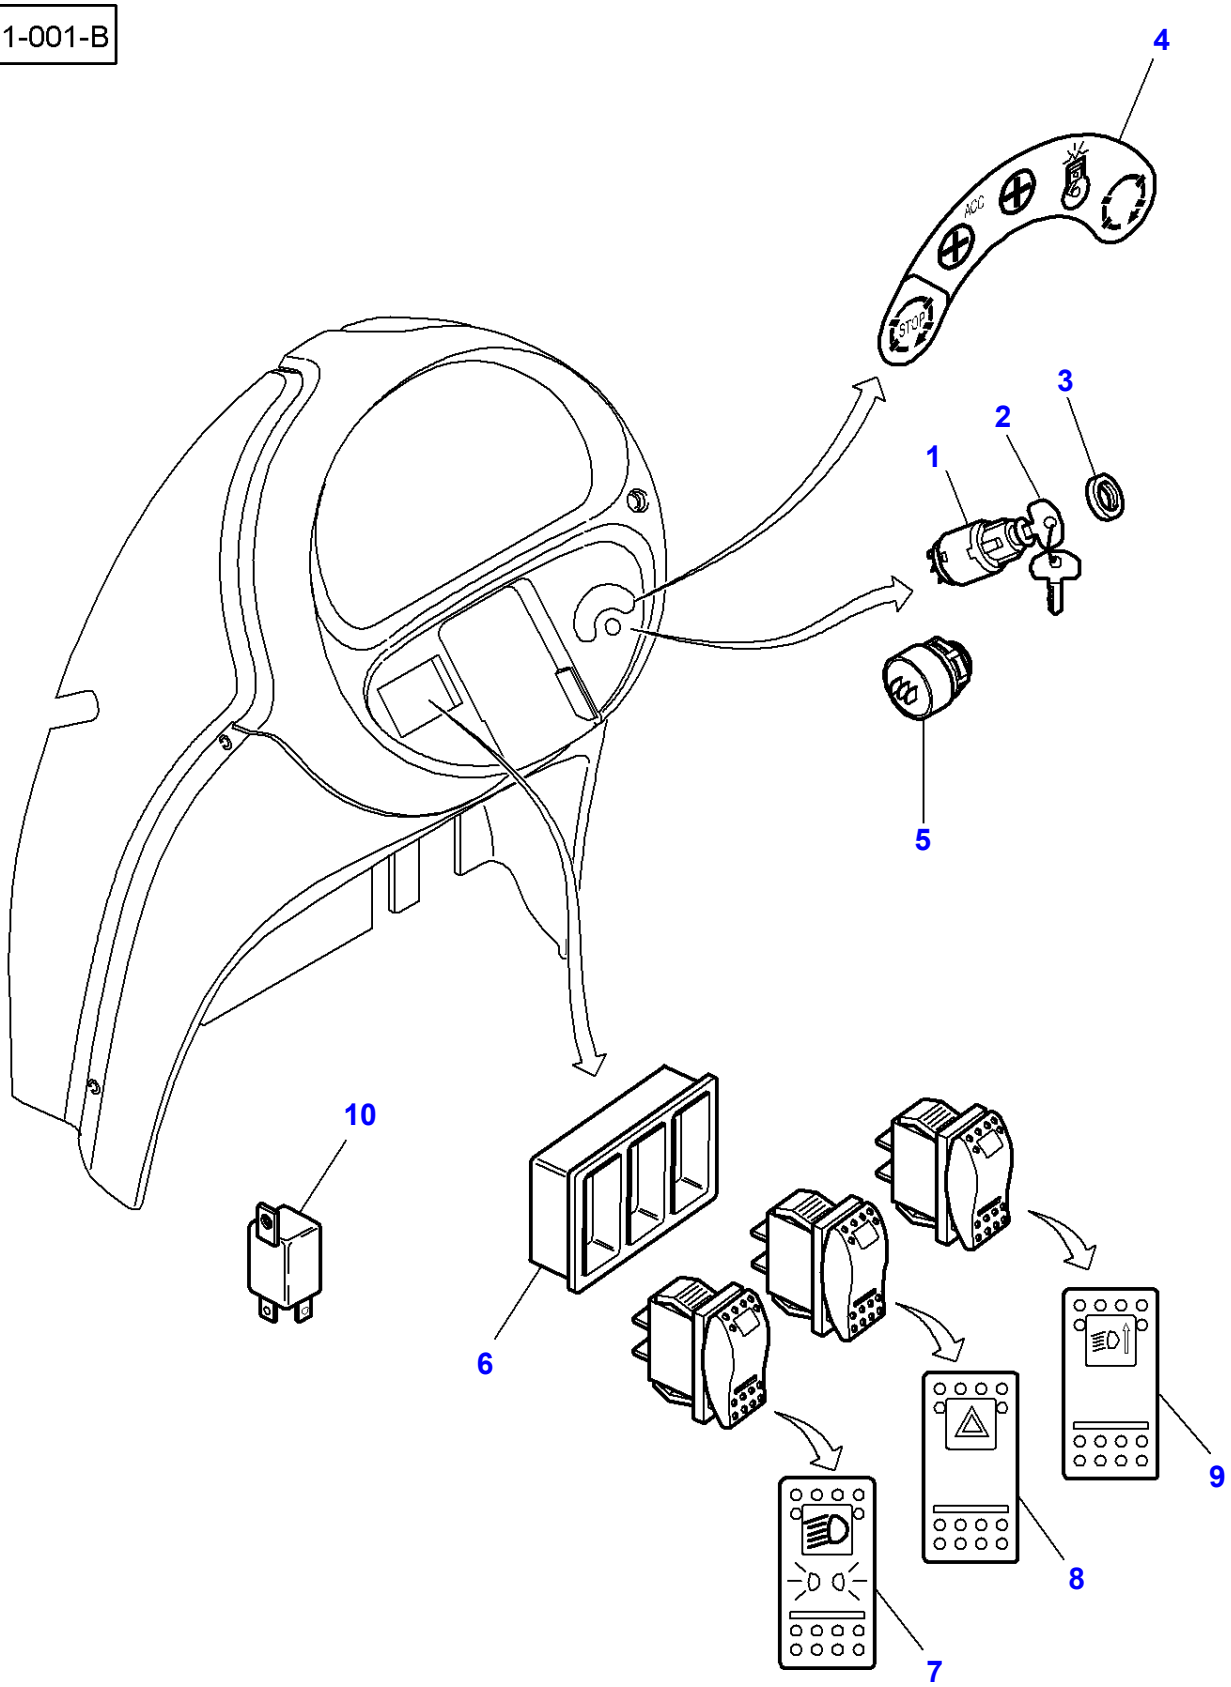


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3779699M1 | 1 | Switch,Indirect | |
| 2 | **3813361M1** | 1 | Ignition Key | |
| 3 | 1694534M1 | 1 | Nut | |
| 4 | 4271558M1 | 1 | Decal | |
| 5 | 3713367M1 | 1 | Horn | |
| 6 | 3809798M1 | 1 | Housing | |
| 7 | **4271342M1** | 1 | Switch,Indirect | |
| 8 | **4271916M2** | 1 | Switch,Indirect | |
| 9 | **4271343M1** | 1 | Switch,Indirect | Not for USA |
| 10 | | X | Not Used | |

**FOOTNOTE [A]** FOR JAPANESE MARKET ONLY

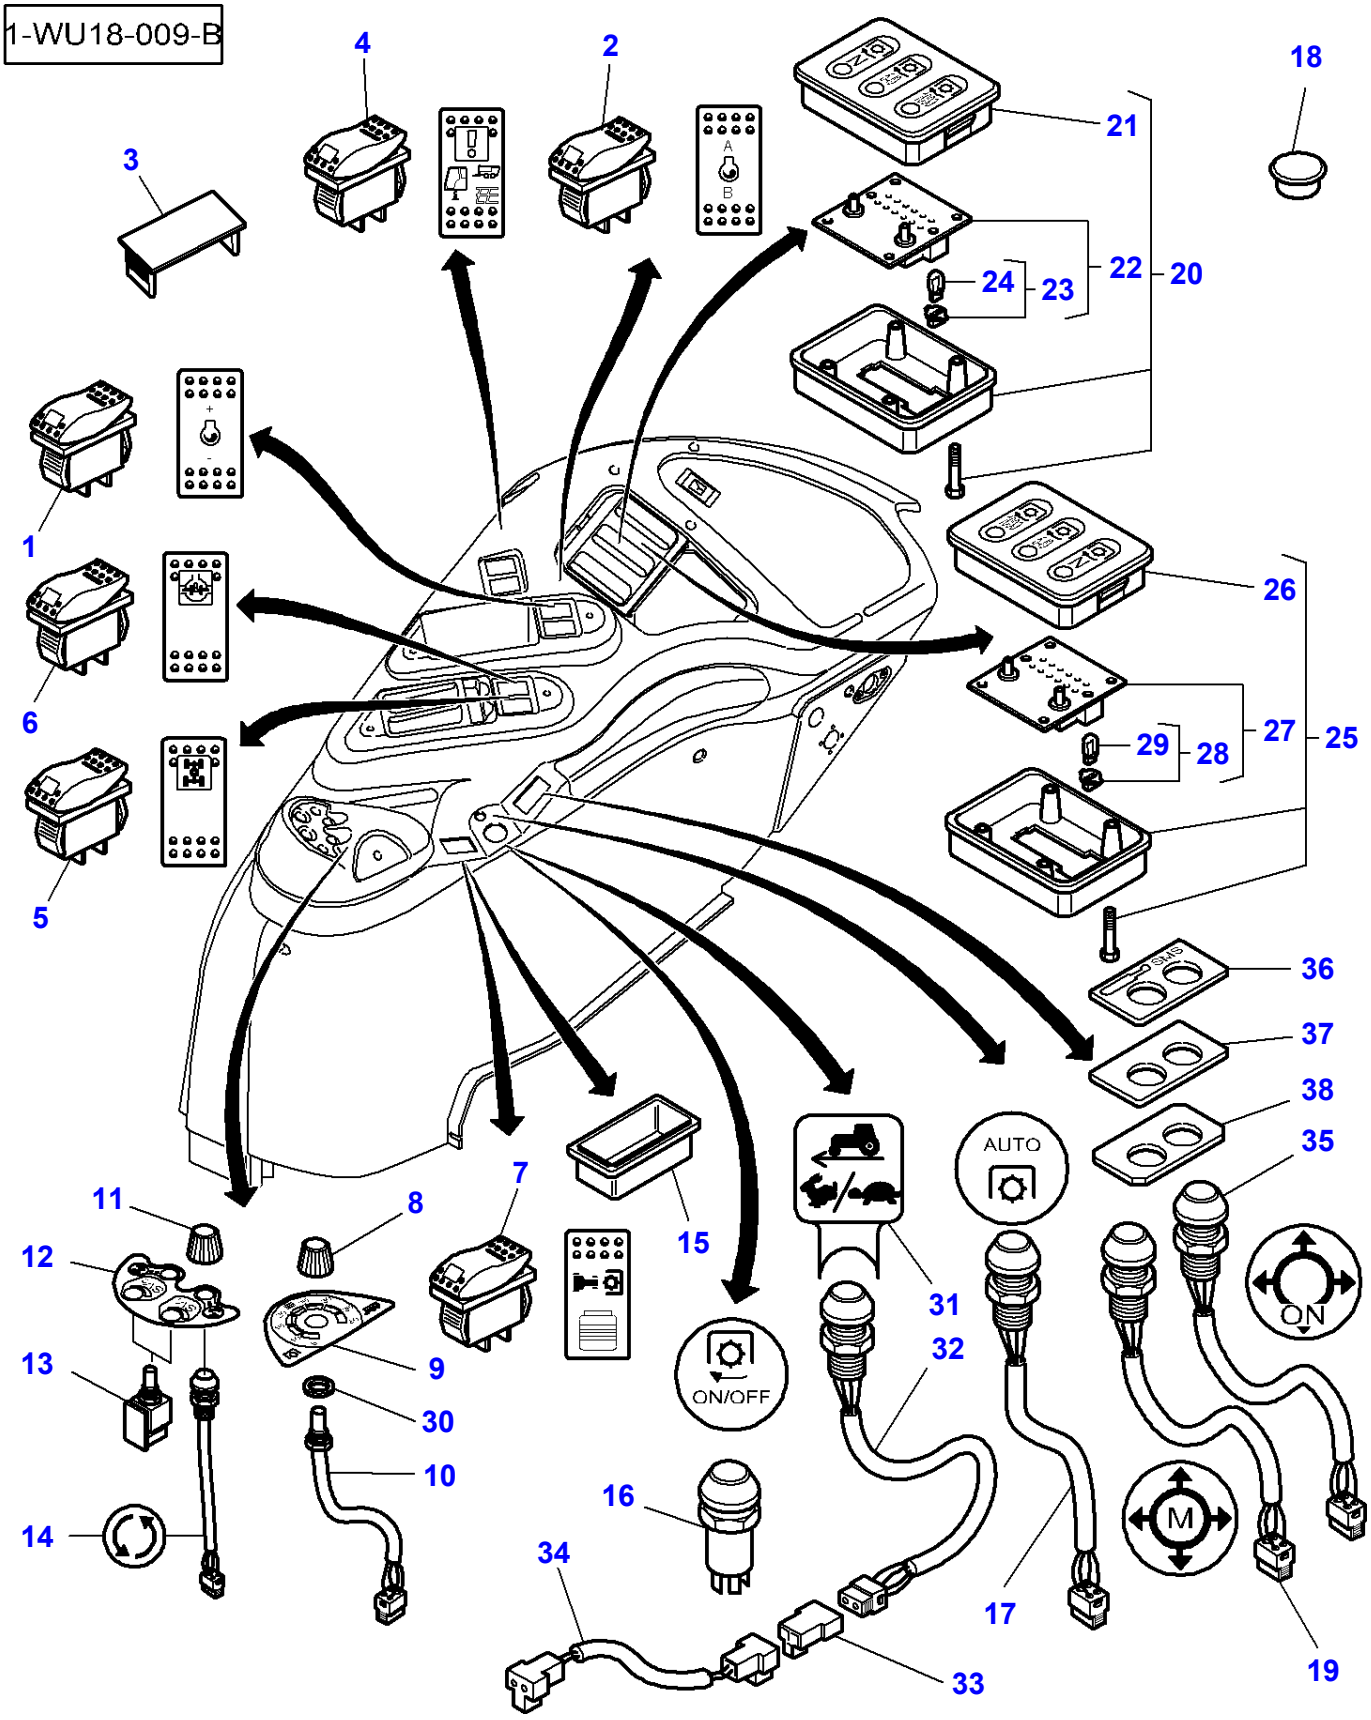
1-WU18-009-B
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
ON/OFF
AUTO
ON
M


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Side Console Switches Page 080-0015

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | **4271346M1** | 1 | Switch,Indirect | +/- |
| 2 | **4271347M1** | 1 | Switch,Indirect | A/B |
| 3 | 3713151M1 | X | Tap | |
| 4 | **4271351M2** | 1 | Switch,Indirect | |
| 5 | **4271349M2** | 1 | Switch,Indirect | Four Wheel Drive |
| 6 | **4271348M2** | 1 | Switch,Indirect | |
| 7 | **3783086M1** | 1 | Switch,Indirect | |
| 8 | 4273261M1 | 1 | Button | |
| 9 | 4271338M2 | 1 | Decal | |
| 10 | 4270162M2 | 1 | Potentiometer | |
| 11 | 4273260M1 | 2 | Button | |
| 12 | 4271337M2 | 1 | Decal | |
| 13 | 3788160M2 | 2 | Meter | |
| 14 | 3789331M1 | 2 | Switch | |
| 15 | 4271925M1 | 1 | Support | |
| 16 | **4271992M2** | 1 | Switch,Indirect | |
| 17 | **4270755M1** | 1 | Switch,Indirect | |
| 18 | 3784237M1 | 1 | Plug | |
| 19 | 4271759M1 | 1 | Switch,Indirect | |
| 20 | 4277367M2 | 1 | Console | 750/1000 RPM |
| 21 | 3907423M91 | 1 | Case Assy | (20) |
| 22 | | 1 | Printed Circuit | (20)<br>Not serviced,order REF. 20 |
| 23 | 3713385M1 | 2 | Lamp Socket | (22) |
| 24 | **3405185M1** | 1 | Bulb 12v 1.2w | (23) |
| 25 | 4277366M2 | 1 | Console | 540/1000 RPM |
| 26 | 3907422M91 | 1 | Case Assy | (25) |
| 27 | | 1 | Printed Circuit | (25)<br>Not serviced,order REF. 25 |
| 28 | 3713385M1 | 2 | Lamp Socket | (27) |
| 29 | **3405185M1** | 1 | Bulb 12v 1.2w | (28) |
| 30 | 3619096M1 | 1 | Washer | Diameter 10,5 X 32 |
| 31 | 4280318M1 | 1 | Decal | For United States of America |
| 32 | 4280311M1 | 1 | Switch,Indirect | For United States of America |
| 33 | 4275664M1 | 1 | Connectors | For United States of America<br>Up to Serial or Engine Number N310019 |
| 34 | 4279863M1 | 1 | Harness | For United States of America<br>Up to Serial or Engine Number N310019 |
| 35 | 4271760M1 | 1 | Switch,Indirect | |
| 36 | 4279054M1 | 1 | Decal | |
| 37 | 4279044M1 | 1 | Plate | |
| 38 | 4279046M1 | 1 | Support | |

1-WU22-001-C

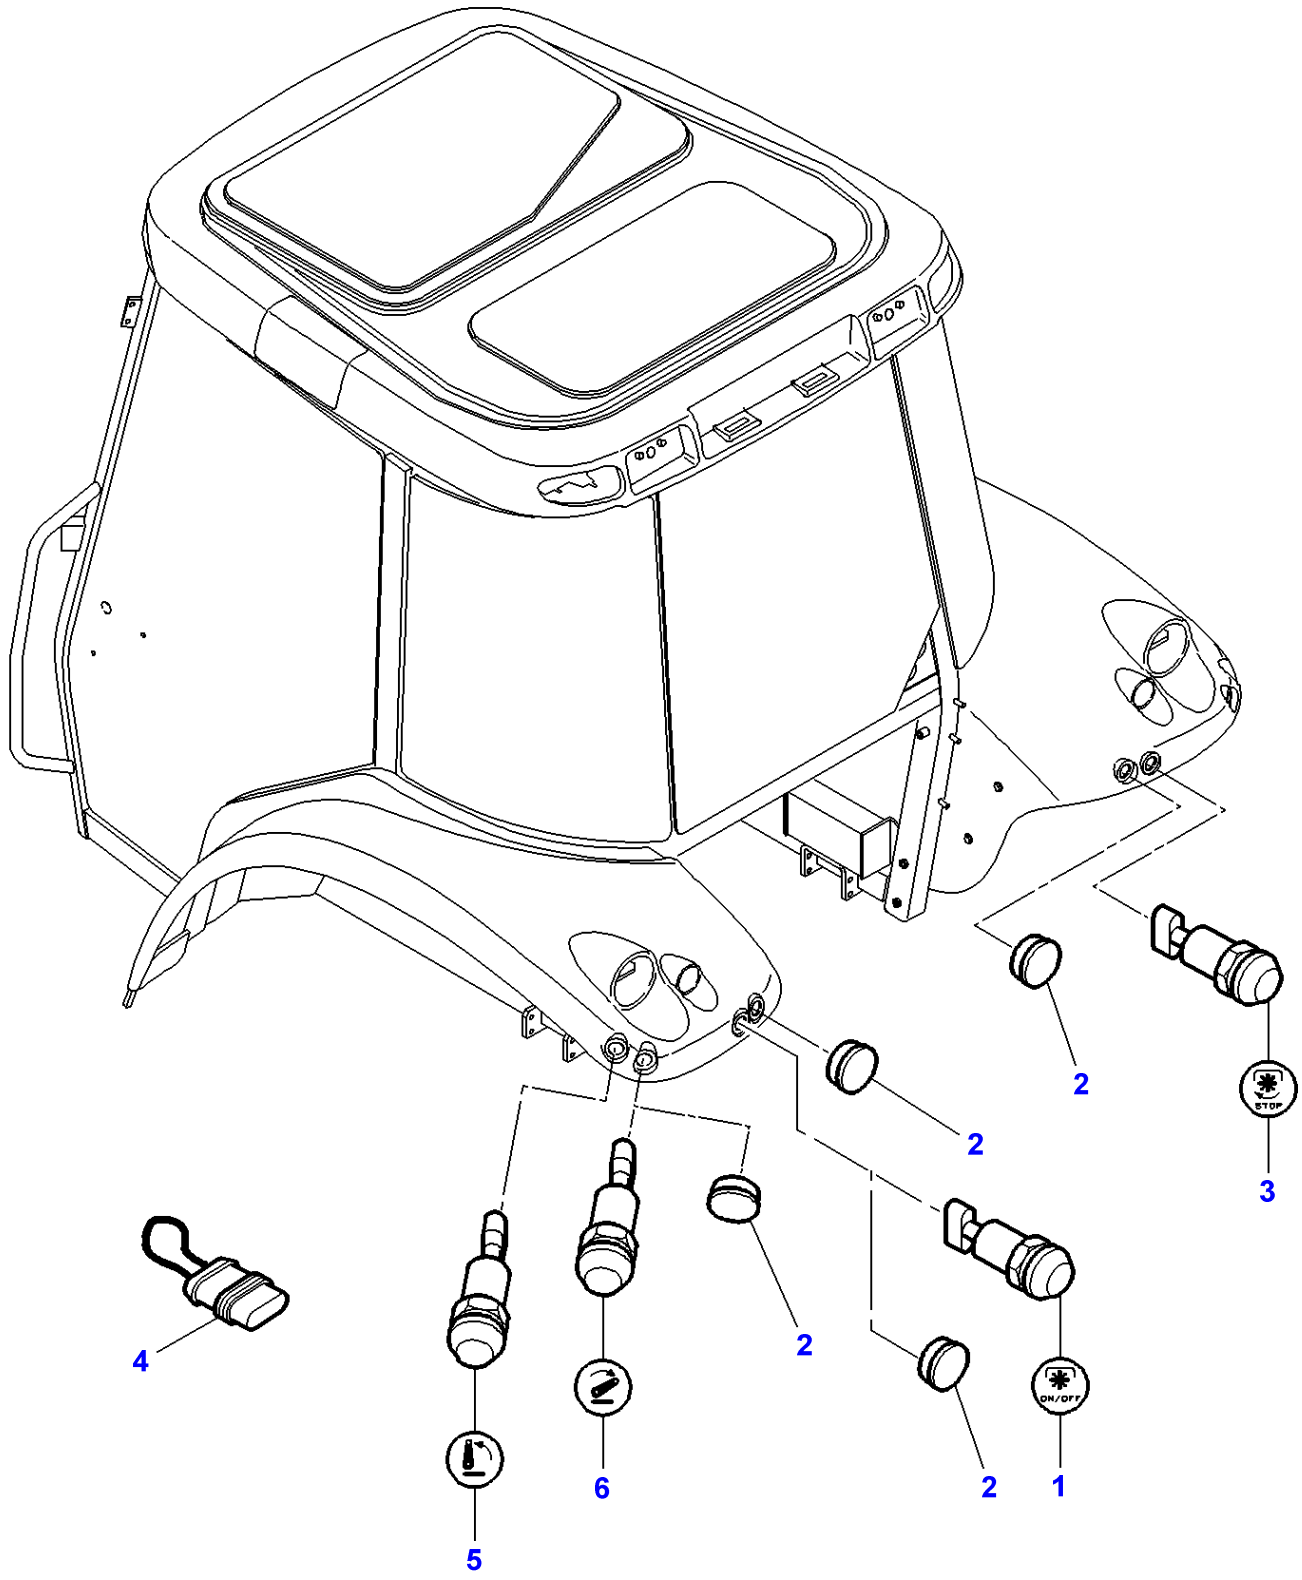


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | **4271992M2** | X | Switch,Indirect | |
| 2 | 4274755M2 | X | Plug | Diameter 31 MM |
| 3 | 4276343M2 | 1 | Switch,Indirect | For United States of America |
| 4 | 3782172M1 | 1 | Wire | |
| 5 | **4270313M2** | 2 | Switch,Indirect | [A] |
| 6 | **4270312M2** | 2 | Switch,Indirect | [B] |


**FOOTNOTE [A]** UP
**FOOTNOTE [B]** DOWN
**FOOTNOTE [C]** WITHOUT HYDRAULIC LIFT

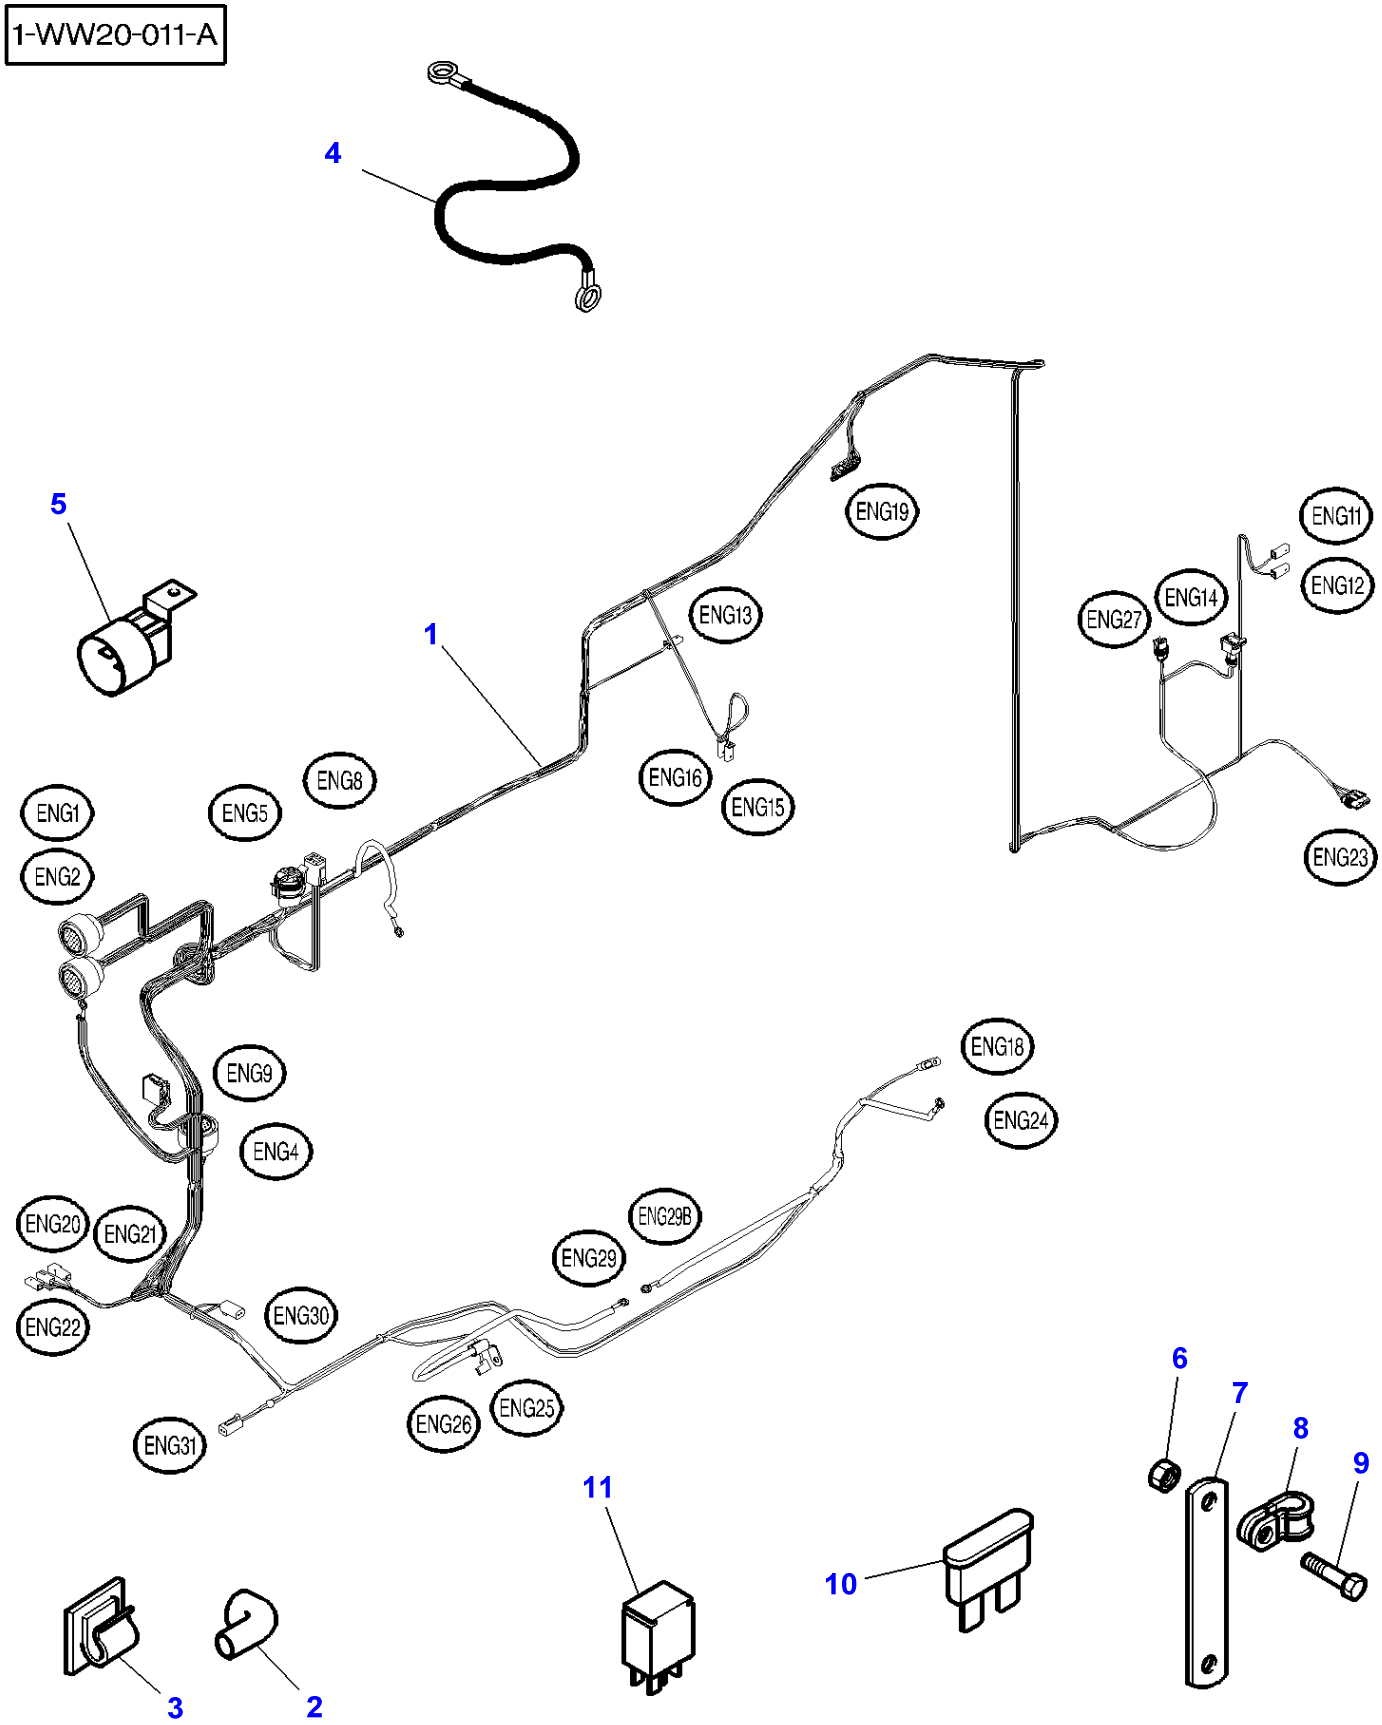
1-WW20-011-A
4
5
1
ENG19
ENG13
ENG16
ENG15
ENG11
ENG12
ENG14
ENG27
ENG23
ENG8
ENG5
ENG1
ENG2
ENG9
ENG4
ENG18
ENG24
ENG20
ENG21
ENG22
ENG30
ENG29B
ENG29
ENG26
ENG25
ENG31
6
7
8
9
11
10
3
2

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4278184M93 | 1 | Harness | |
| 2 | 3784666M1 | 1 | Helmet | |
| 3 | 3582094M1 | 24 | Tie | |
| 4 | 3712175M2 | 1 | Wire | Length 400 MM |
| 5 | **3779879M1** | 2 | Relay | 12V - 50A |
| 6 | 339169X1 | 1 | Nut | M8 |
| 7 | 3778841M2 | 1 | Strap | |
| 8 | 3010808X1 | 1 | Clip | Diameter 40 - M8 |
| 9 | 339123X1 | 1 | Hex. Sock. Screw | M8 X 20 |
| 10 | **4271799M1** | 3 | Fuse | 5 AMP |
| | **4271801M1** | 2 | Fuse | 10 AMP |
| | **4271802M1** | 2 | Fuse | 15 AMP |
| 11 | **4272431M1** | 4 | Relay | 12V - 10/20A<br>4RD 007 814-01 |

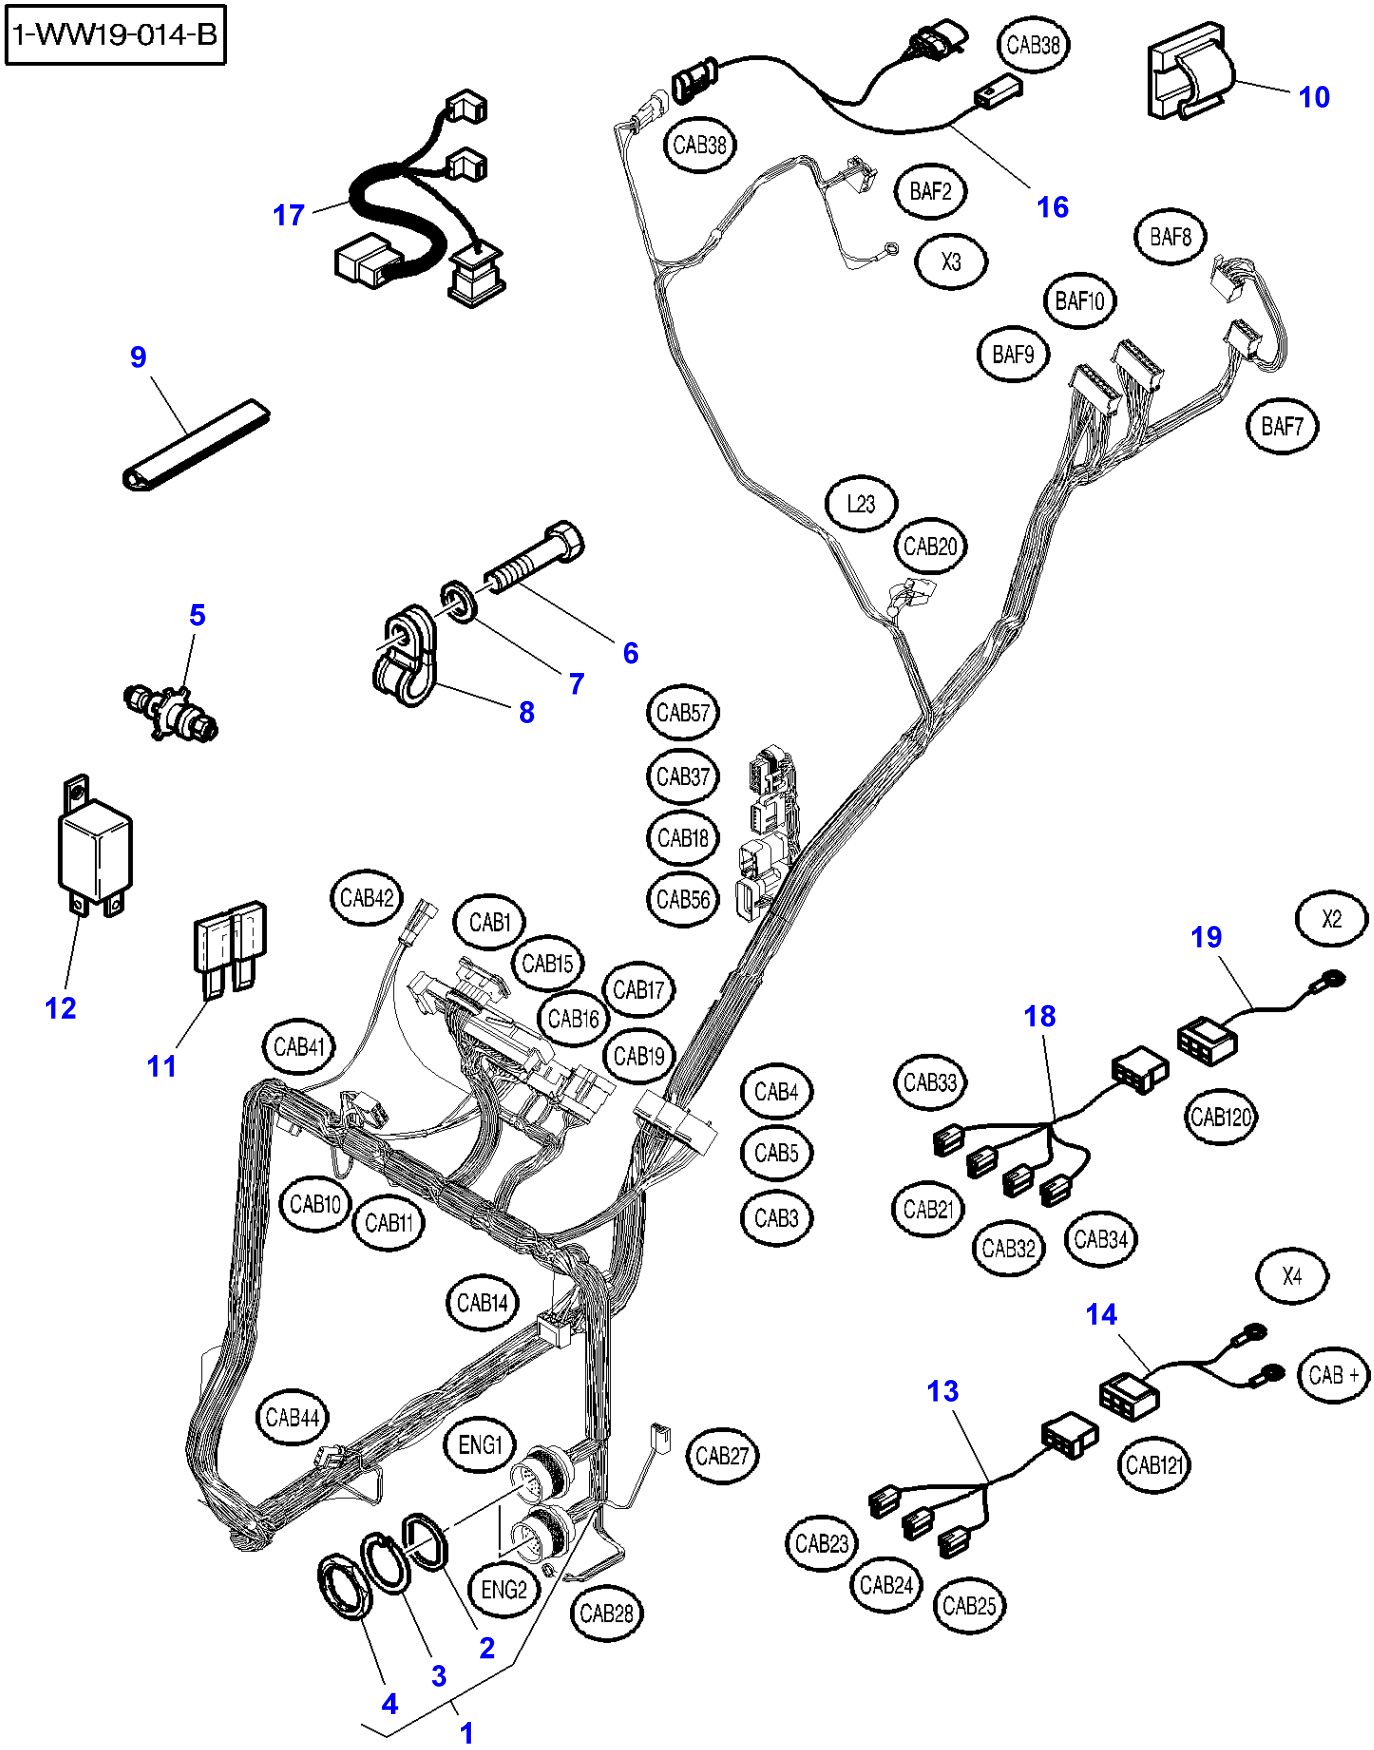
1-WW19-014-B
CAB38
CAB38
10
17
16
BAF2
X3
BAF8
BAF10
BAF9
BAF7
9
L23
CAB20
5
6
7
8
CAB57
CAB37
CAB18
CAB56
CAB42
CAB1
CAB15
CAB17
CAB16
CAB19
CAB41
12
11
CAB4
CAB5
CAB3
19
X2
18
CAB33
CAB120
CAB21
CAB32
CAB34
CAB10
CAB11
CAB14
X4
14
CAB +
13
CAB121
CAB44
ENG1
CAB27
CAB23
CAB24
CAB25
ENG2
CAB28
2
3
4
1


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276766M91 | 1 | Harness | |
| 2 | 3013355X1 | 1 | Seal | (1) |
| 3 | 3013354X1 | 1 | Washer | (1) |
| 4 | 3013353X1 | 1 | Nut | (1) |
| 5 | 72500822 | 1 | Terminal | |
| 6 | 390992X1 | 1 | Hex. Sock. Screw | M8 X 50 |
| 7 | 22428X | 1 | Lock Washer | |
| 8 | 3581424M1 | 1 | Clip | Diameter 25 MM |
| 9 | 3580695M1 | 1 | Gasket | [A]<br>Length 1600 MM |
| 10 | 3760697M1 | 1 | Tie | |
| 11 | **4271801M1** | 1 | Fuse | 10 AMP |
| | **4271842M1** | 1 | Fuse | 40 AMP |
| 12 | **4272431M1** | 1 | Relay | 12V - 10/20A<br>4RD 007 814-01 |
| 13 | 4276768M91 | 1 | Harness | |
| 14 | 4277434M91 | 1 | Harness | |
| 15 | 4278720M1 | 14 | Tie | [B] |
| 16 | 4279691M1 | 1 | Harness | [C] |
| 17 | 3783857M1 | 1 | Harness | |
| 18 | 4276769M91 | 1 | Harness | |
| 19 | 4277205M91 | 1 | Harness | Length 630 MM |

**FOOTNOTE [A]** CUT TO REQUIRED LENGTH
**FOOTNOTE [B]** NOT ILLUSTRATED
**FOOTNOTE [C]** AUTOMATIC AIR CONDITIONER

1-WW18-002-B

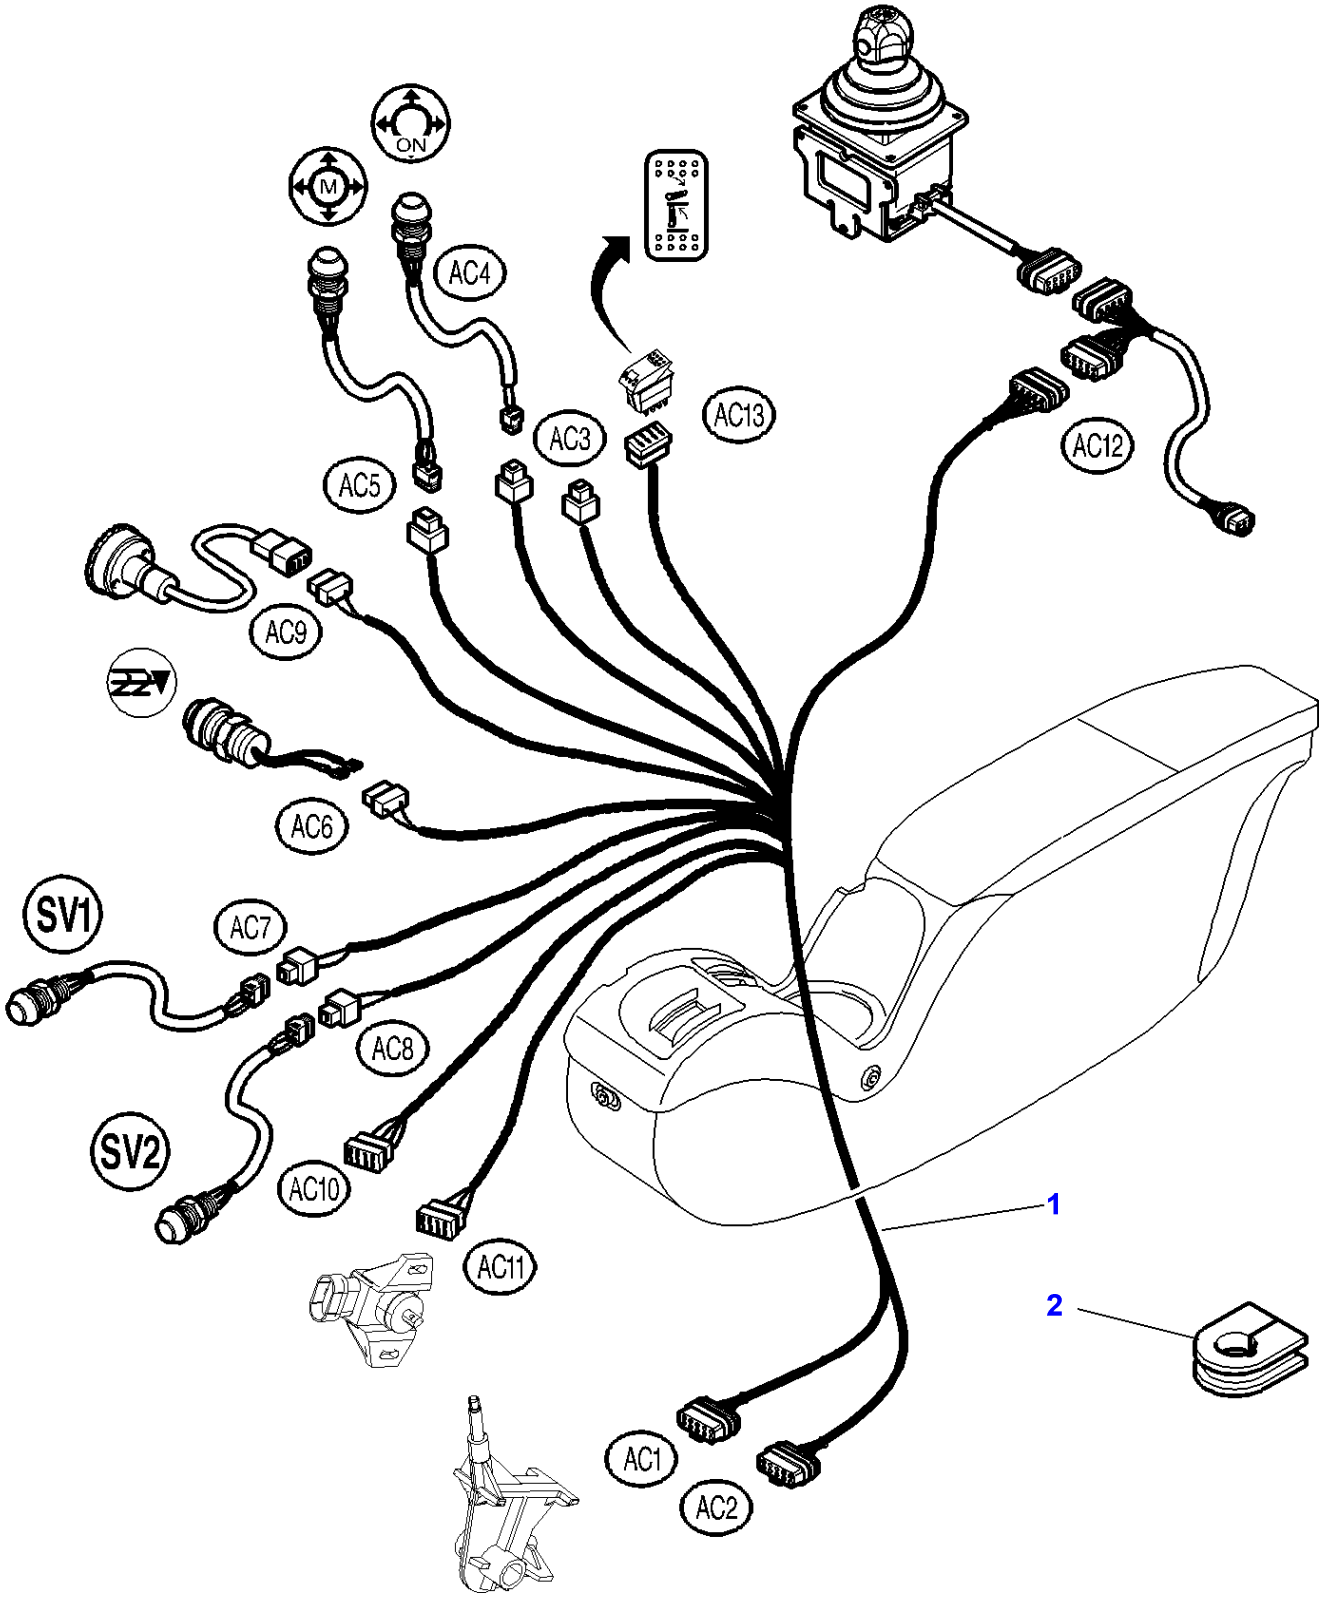

ON
M
AC4
AC3
AC13
AC12
AC5
AC9
AC6
SV1
AC7
AC8
SV2
AC10
AC11
AC1
AC2
1
2

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3789824M3 | 1 | Harness | |
| 2 | 4271408M2 | 1 | Grommet | Diameter 19 MM |

1-WW18-003-A

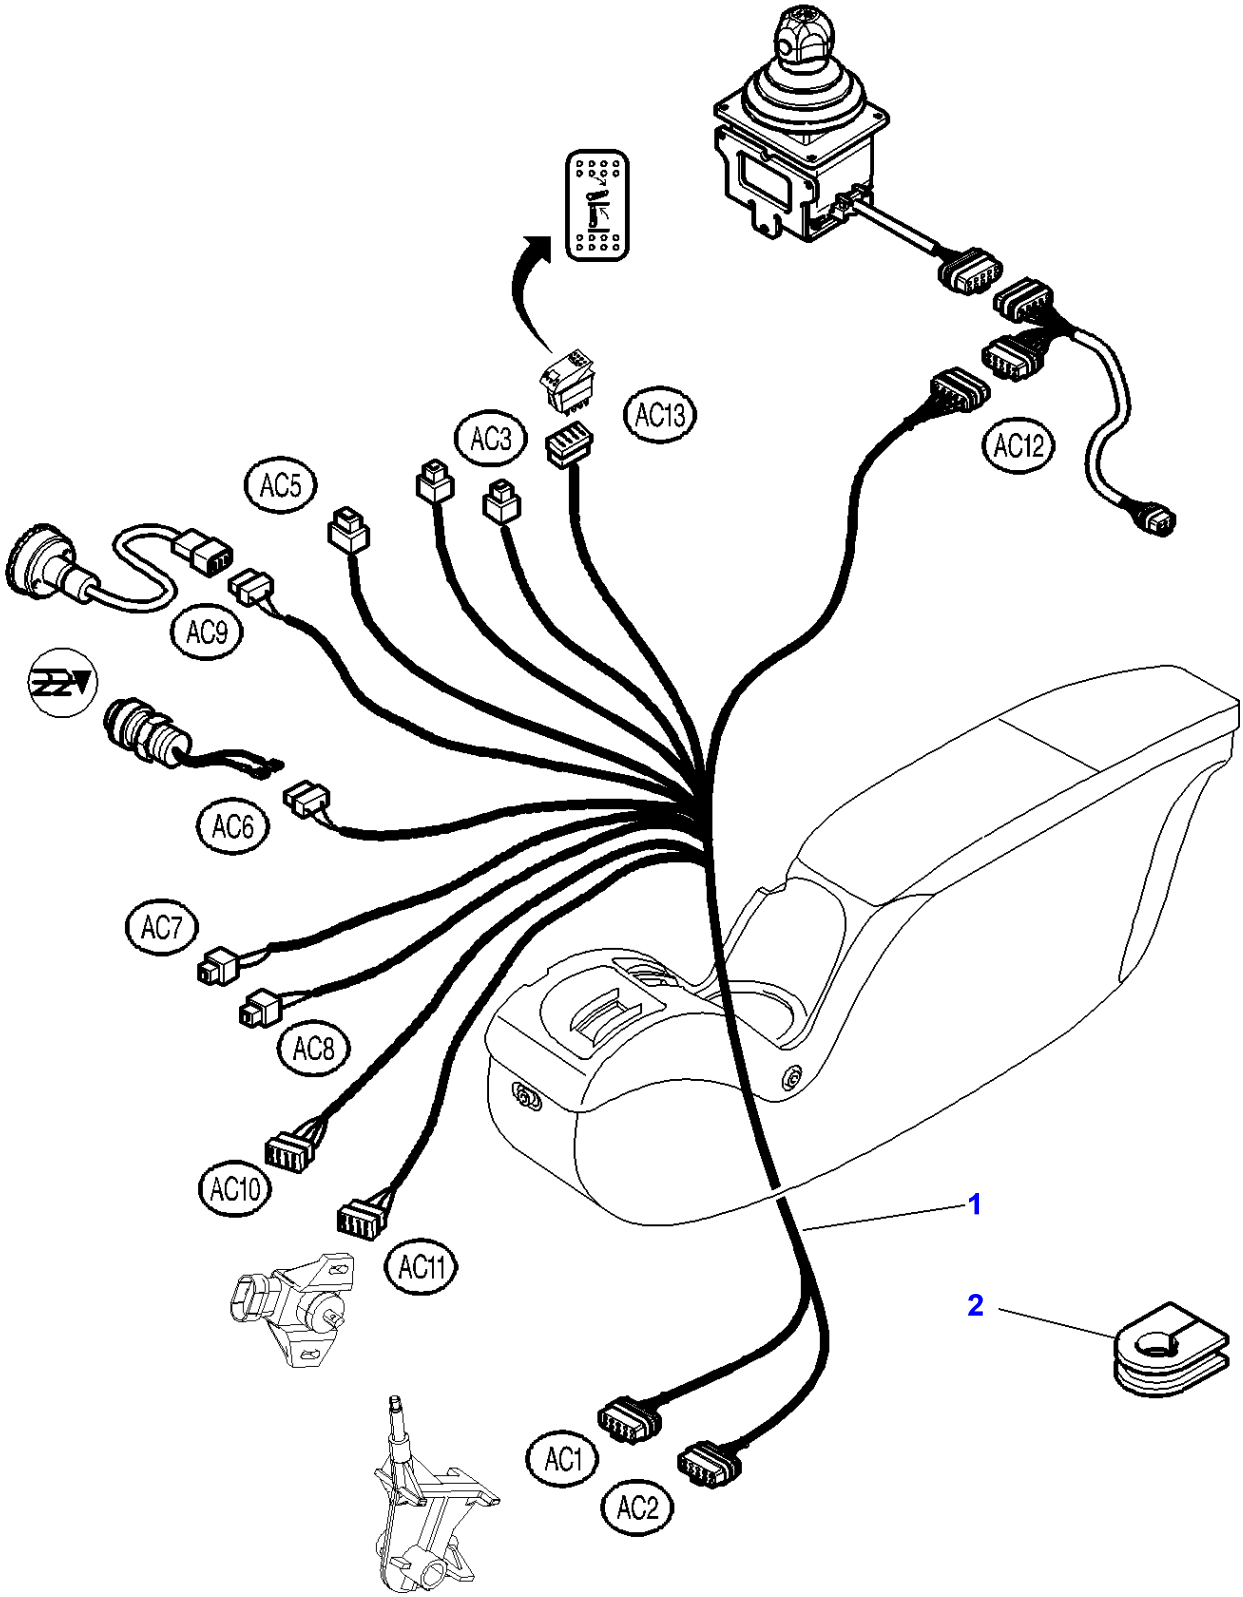


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3789824M3 | 1 | Harness | |
| 2 | 4271408M2 | 1 | Grommet | Diameter 19 MM |

1-WW50-001-D

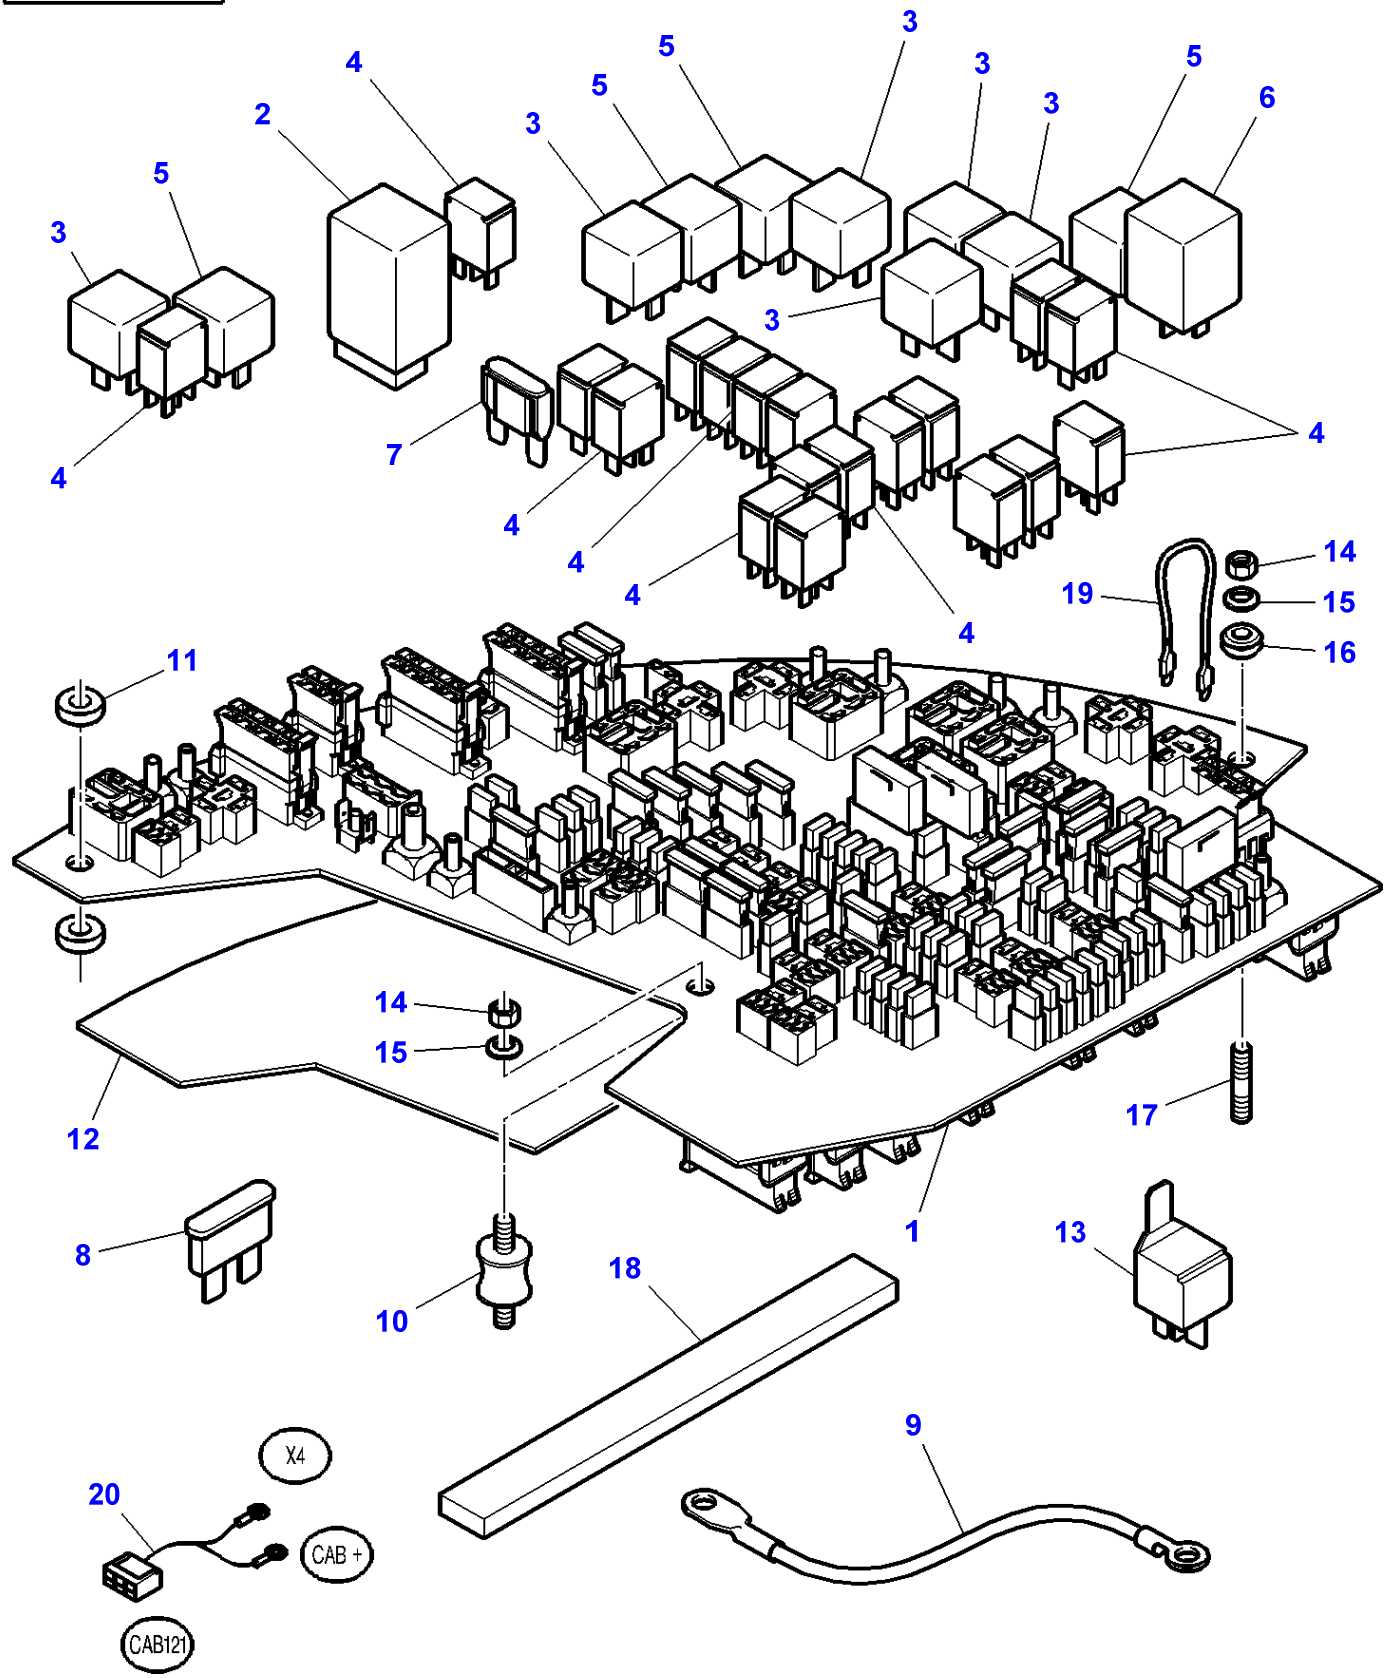

Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446


Plate Relay & Fuse Holder Page 080-0045

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275903M92 | 1 | Plate Clamping | [D] |
| 2 | **4271990M1** | 1 | Blinker | |
| | **4271989M1** | 1 | Blinker | For United States of America |
| 3 | **4270844M1** | X | Relay | [E]<br>12V<br>4RA 007 793-03 |
| 4 | **4272431M1** | X | Relay | [E]<br>12V 10/20A<br>4RD 007 814-01 |
| 5 | **4272432M1** | X | Relay | [E]<br>12V<br>4RD 007 794-02 |
| 6 | **4271991M1** | 1 | Relay | |
| 7 | **4271803M1** | 1 | Fuse | [E]<br>50 AMP<br>Length 29,2MM |
| 8 | **4271799M1** | X | Fuse | [E]<br>5 AMP<br>Length 11,2MM |
| | **4271800M1** | X | Fuse | [E]<br>7.5 AMP<br>Length 11,2MM |
| | **4271801M1** | X | Fuse | [E]<br>10 AMP<br>Length 11,2MM |
| | **4271802M1** | X | Fuse | 15 AMP<br>Length 11,2MM |
| | **3580868M1** | X | Fuse | [E]<br>3 AMP<br>Length 19,5 MM |
| | 3387321M1 | X | Fuse | 15 AMP<br>Length 19,5 MM |
| | **3780003M1** | X | Fuse | [E]<br>20 AMP<br>Length 19MM |
| | **3387322M1** | X | Fuse | [E]<br>25 AMP<br>Length 19MM |
| | **3712661M1** | X | Fuse | [E]<br>30 AMP<br>Length 19MM |
| | **4271842M1** | X | Fuse | 40 AMP<br>Length 29,2MM |
| 9 | 4272011M1 | 1 | Harness | [A]<br>Length 580 MM<br>Diameter 10 + 8 |
| | 3787520M2 | 1 | Harness | [B]<br>Length 610 MM<br>Diameter 10 + 10 |
| | 4275698M1 | 1 | Cable | [A]<br>Length 2000 MM<br>Diameter 8 + 8 |
| | 4277435M91 | 1 | Harness | [A]<br>Length 390 MM<br>Diameter 10 + 8 |
| 10 | 4271913M1 | 1 | Dowel | |
| 11 | 4271914M1 | 1 | Washer | |
| 12 | 4273612M1 | 1 | Foam | |
| 13 | **3387326M2** | 1 | Relay | 12V-50A<br>4RA 007 793-04 |
| 14 | 339030X1 | 3 | Nut Metric | M6 |
| | 1441500X1 | 1 | Locknut | [C]<br>M6 |
| 15 | 391038X1 | 3 | Washer | |
| 16 | 3814812M1 | 2 | Grommet | |
| 17 | 3019057X1 | 1 | Stud | M6 X 30 |
| | 3019056X1 | 1 | Stud | M6 X 25 |
| 18 | 4277850M1 | 1 | Gasket | Length 865 X 7 X 4 |
| 19 | 4276825M1 | 1 | Wire | Length 100 MM<br>Up to Serial or Engine Number N051053 |
| 20 | | 1 | Not Used | |

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| FOOTNOTE | [A] | | BLACK | |
| FOOTNOTE | [B] | | RED | |
| FOOTNOTE | [C] | | CHECK NUT | |
| FOOTNOTE | [D] | | PREEQUIPED PLATE CLAMPING | |
| FOOTNOTE | [E] | | BELONGS TO ASSEMBLY 4275903M91 | |
| FOOTNOTE | [F] | | DYNA-6 | |
| FOOTNOTE | [G] | | NOT USED | |
| FOOTNOTE | [H] | | WITH AUTO POWER V I | |

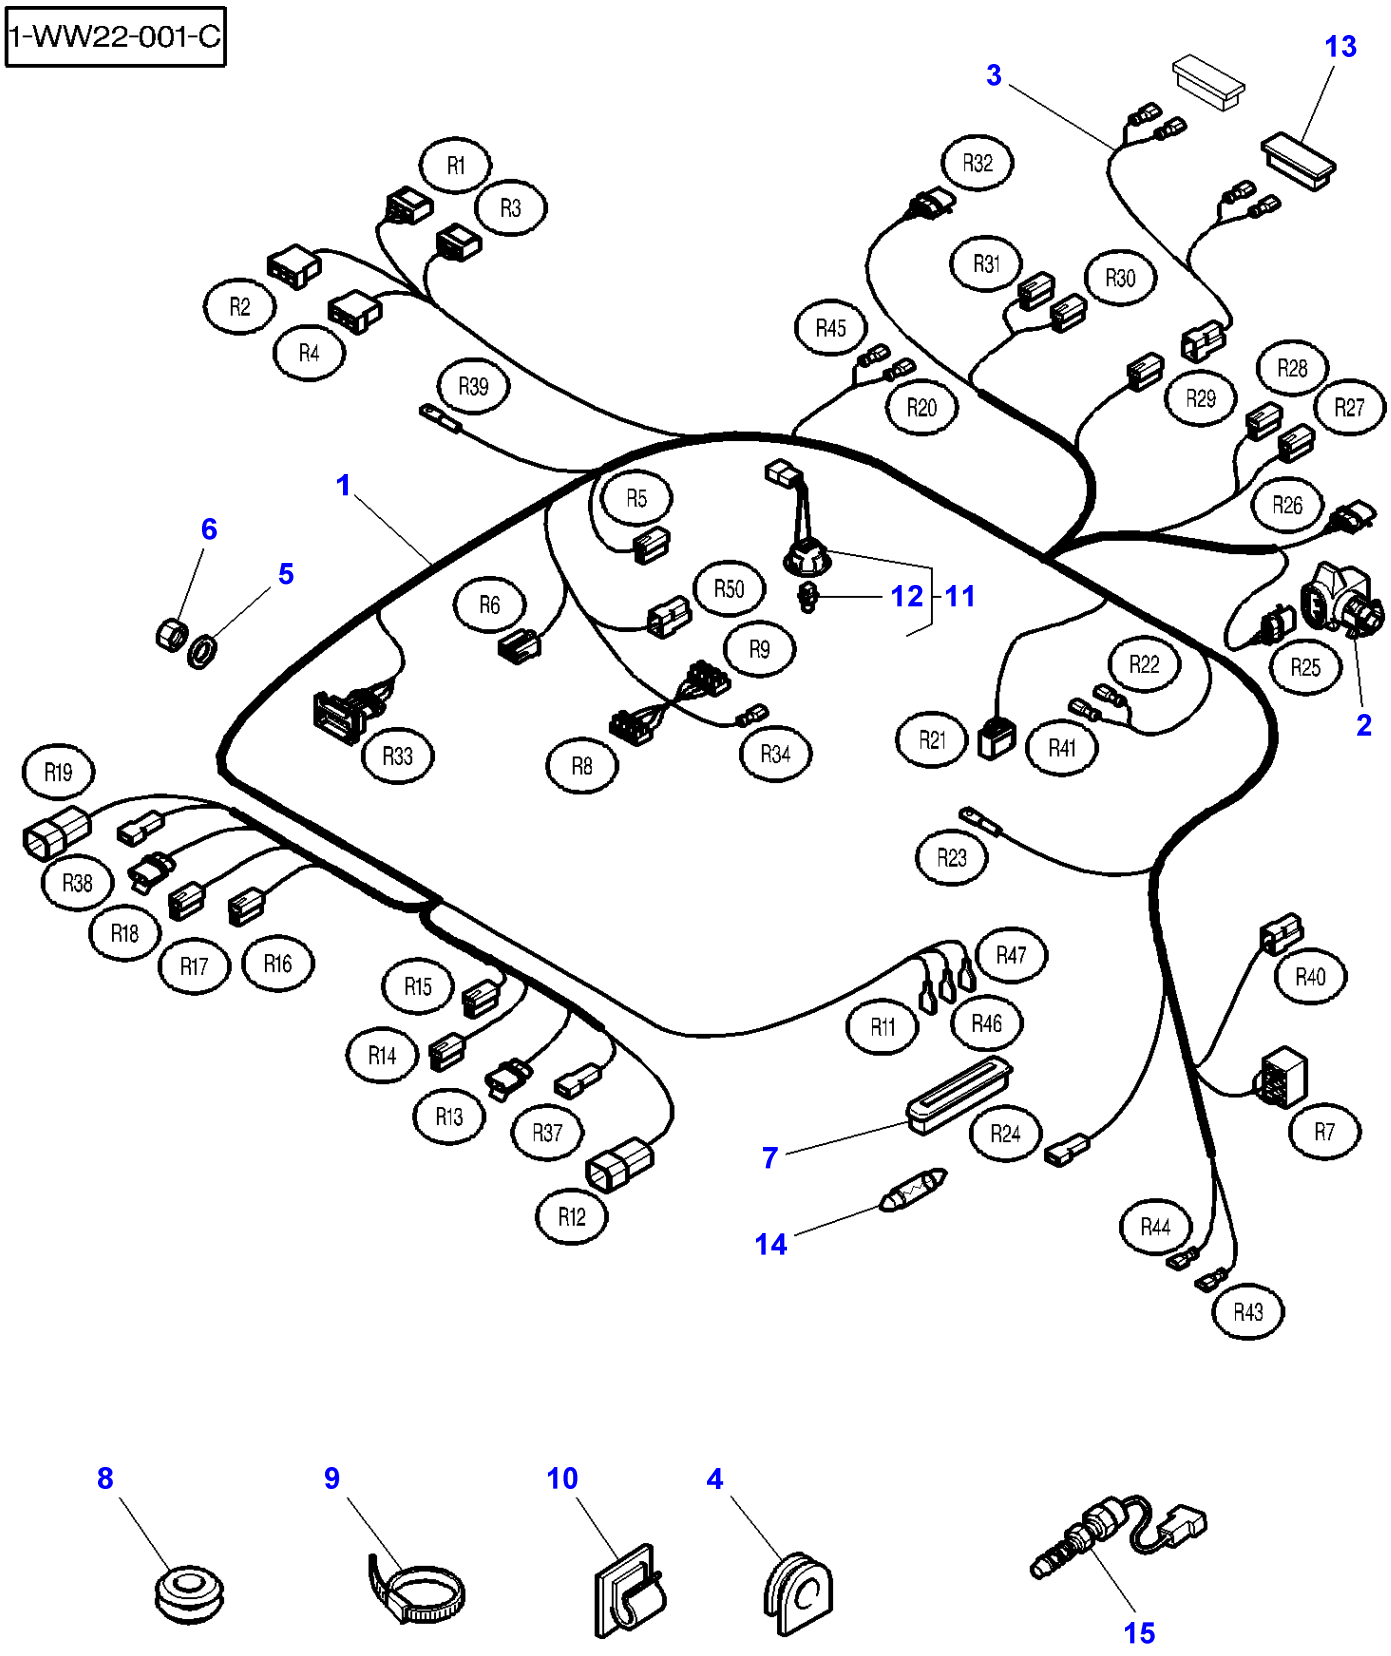
1-WW22-001-C
13
3
R1
R3
R32
R2
R4
R31
R30
R45
R39
R20
R29
R28
R27
1
R5
R26
6
5
R6
R50
12
11
R9
R22
R25
2
R33
R8
R34
R21
R41
R19
R23
R38
R18
R17
R16
R15
R47
R40
R14
R11
R46
R13
R37
R24
R7
7
R12
14
R44
R43
8
9
10
4
15


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Roof Harness Page 080-0050

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277241M91 | 1 | Harness | |
| | 4277244M91 | 1 | Harness | [B] |
| 2 | 3714264M1 | 1 | Transmitter | [A] |
| 3 | 3787513M91 | 1 | Harness | |
| 4 | 3387555M1 | 1 | Grommet | Diameter 11 MM |
| 5 | 3001856X1 | X | Washer | Diameter 4-12 X 1,1 |
| 6 | 3019139X1 | X | Nut | M4 |
| 7 | 3385820M1 | 1 | Roof Light | |
| 8 | 367439X1 | 1 | Grommet | Diameter 15-25 |
| | 3714694M1 | 1 | Grommet | Diameter 7-21 |
| 9 | 3619622M1 | X | Cable Tie | |
| 10 | 1677803M1 | 3 | Clip | |
| 11 | 3786673M1 | 1 | Roof Light | [C] |
| 12 | **3907271M1** | 1 | Bulb 12v 5w | (11) |
| 13 | 3786670M1 | 2 | N/Plate Lamp | |
| 14 | **3385821M1** | 1 | Bulb 12v 10w | |
| 15 | **3780395M2** | 1 | Switch,Indirect | |

**FOOTNOTE [A]** TEMPERATURE SENSOR
**FOOTNOTE [B]** USED WITH OPTIONAL FRONT WORKLAMPS
**FOOTNOTE [C]** CONSOLE READING LAMP

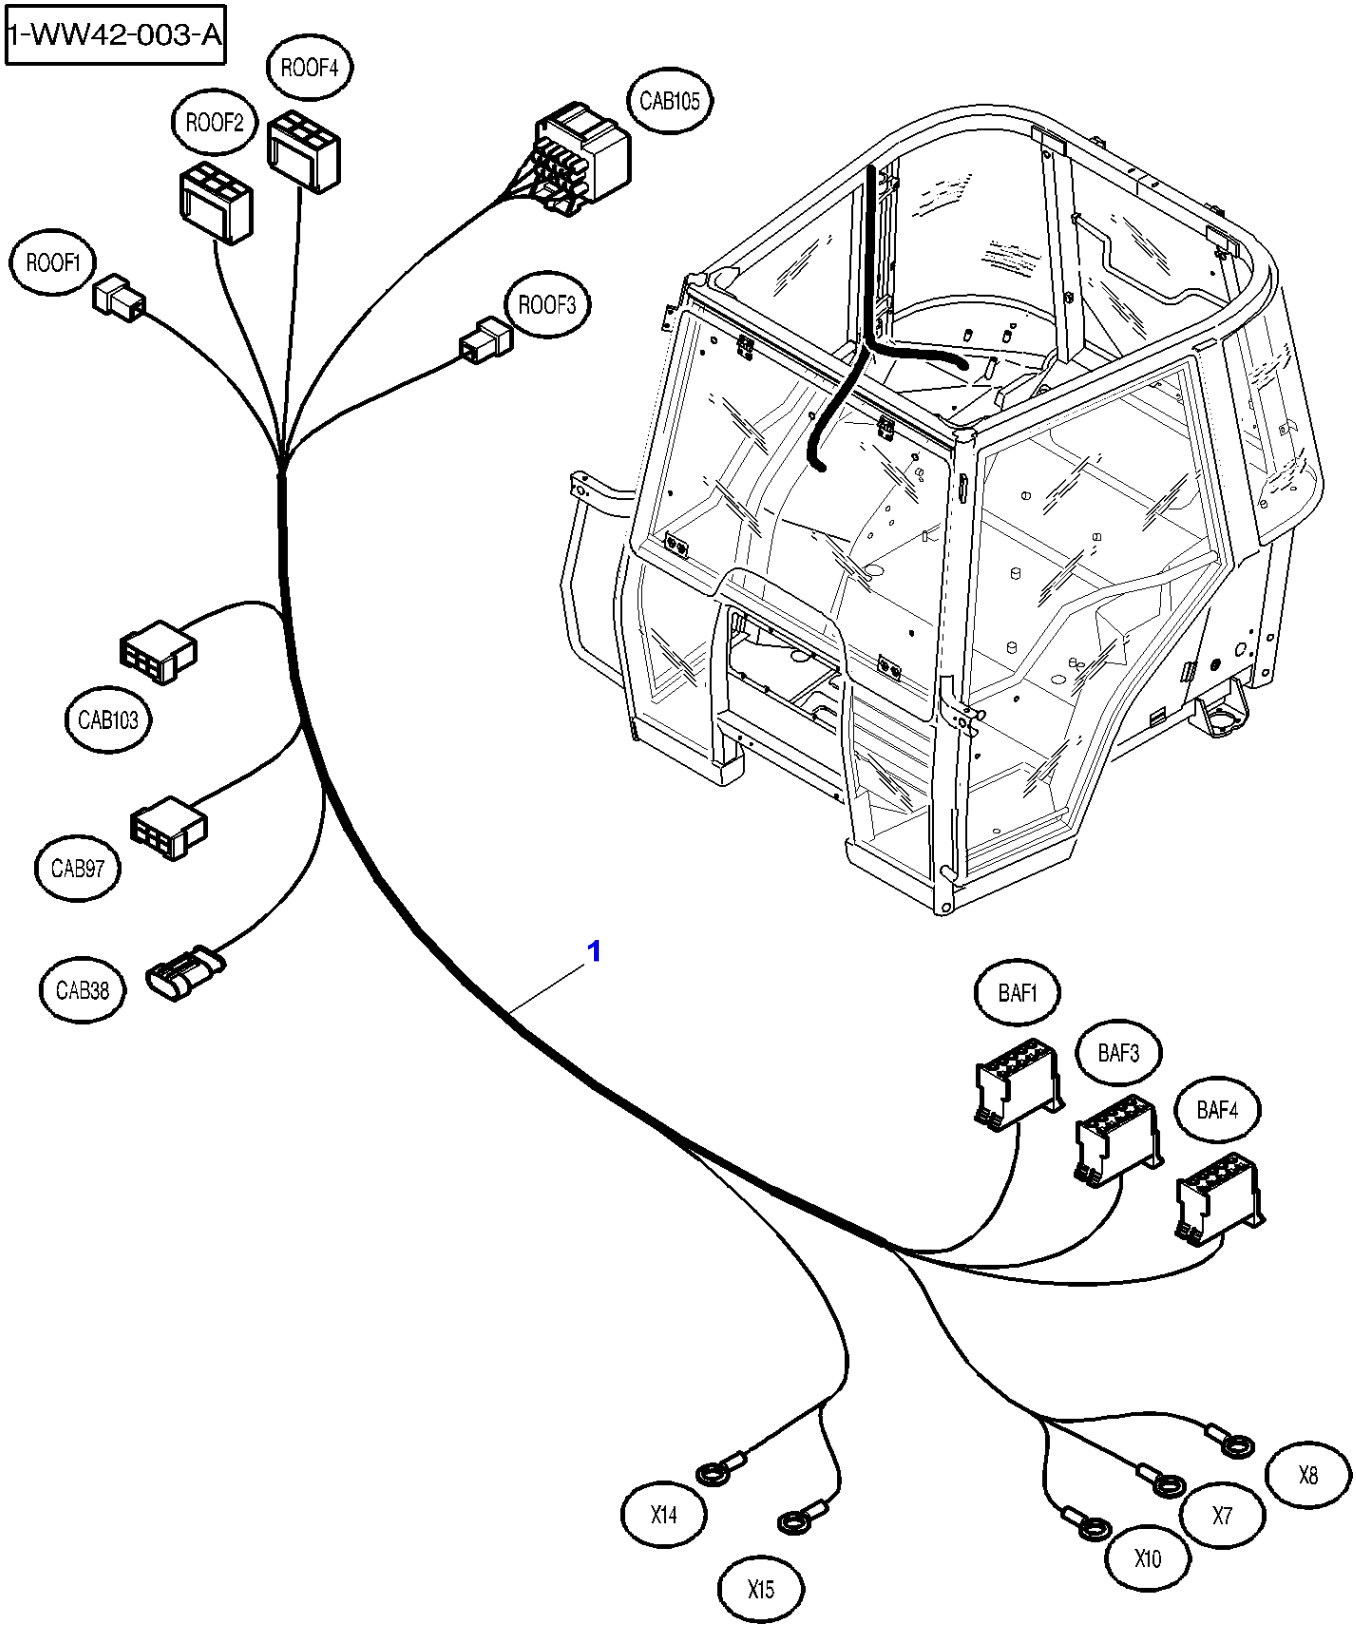

1-WW42-003-A
ROOF4
ROOF2
CAB105
ROOF1
ROOF3
CAB103
CAB97
CAB38
1
BAF1
BAF3
BAF4
X14
X15
X8
X7
X10

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4278258M92 | 1 | Harness | Up to Serial or Engine Number N328016 |
| | 4278258M93 | 1 | Harness | From Serial or Engine Number N328017 |
| | 4278258M92 | 1 | Harness | For United States of America<br>Up to Serial or Engine Number P004002 |
| | 4278258M93 | 1 | Harness | For United States of America<br>From Serial or Engine Number P004003 |

1-WW44-001-A

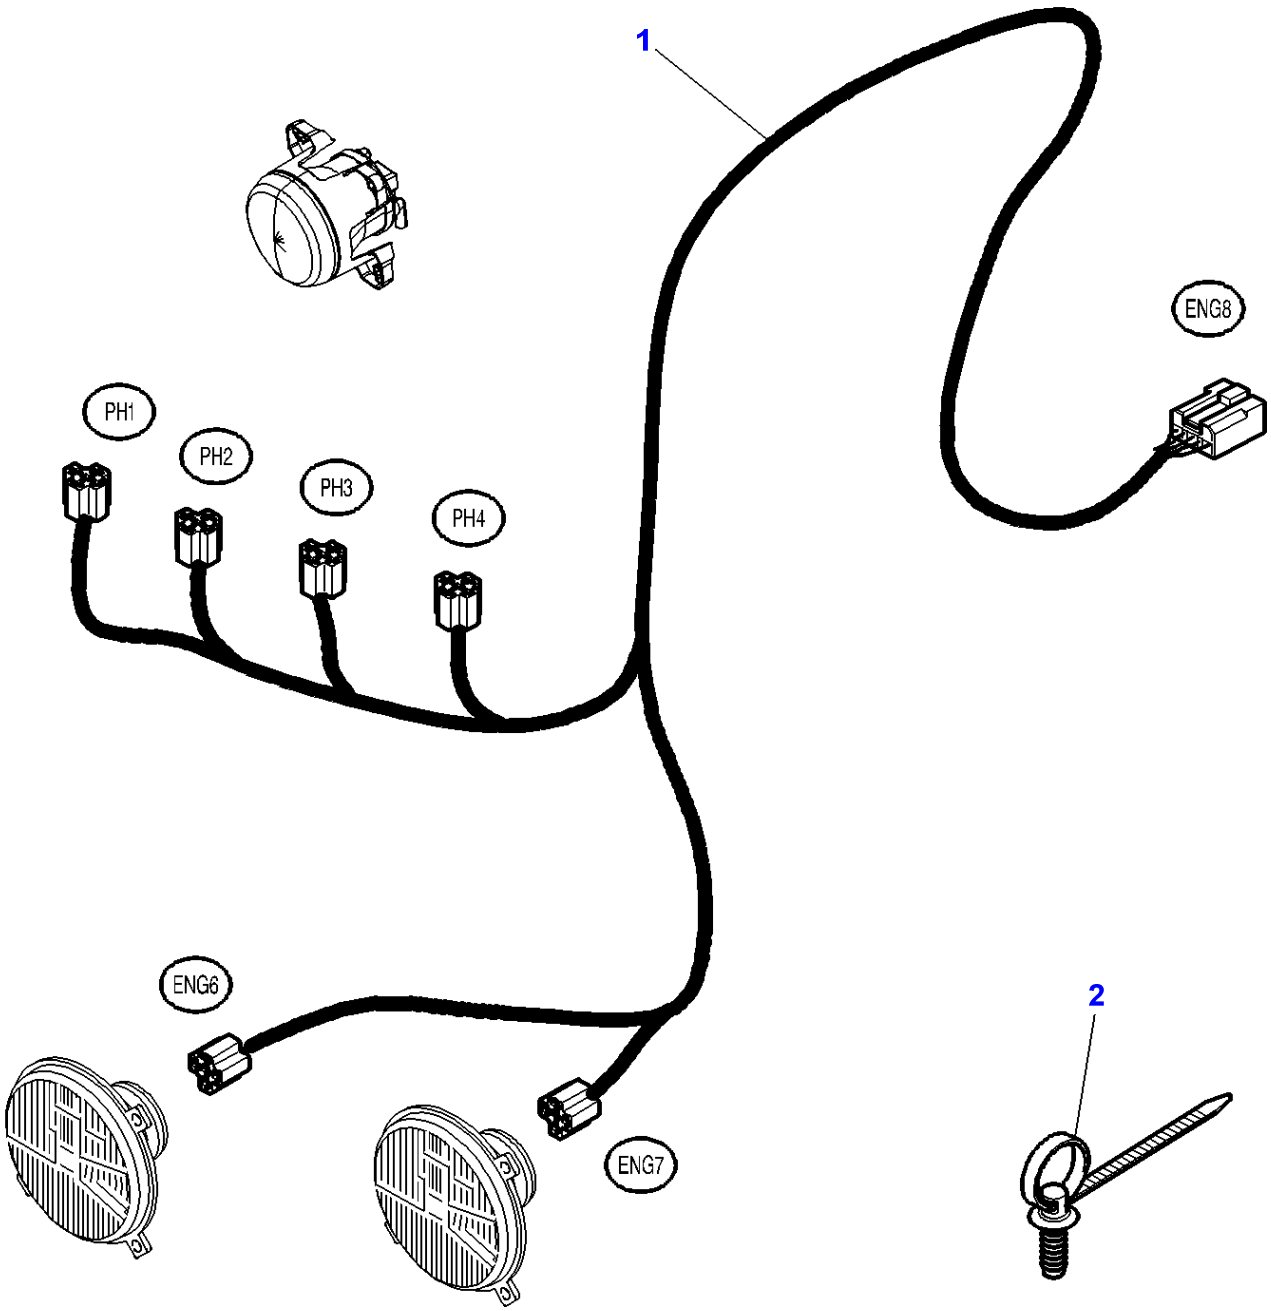


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4278401M92 | 1 | Harness | |
| 2 | 4278314M1 | 10 | Clamp | Length 167MM |


1-WW43-007-B

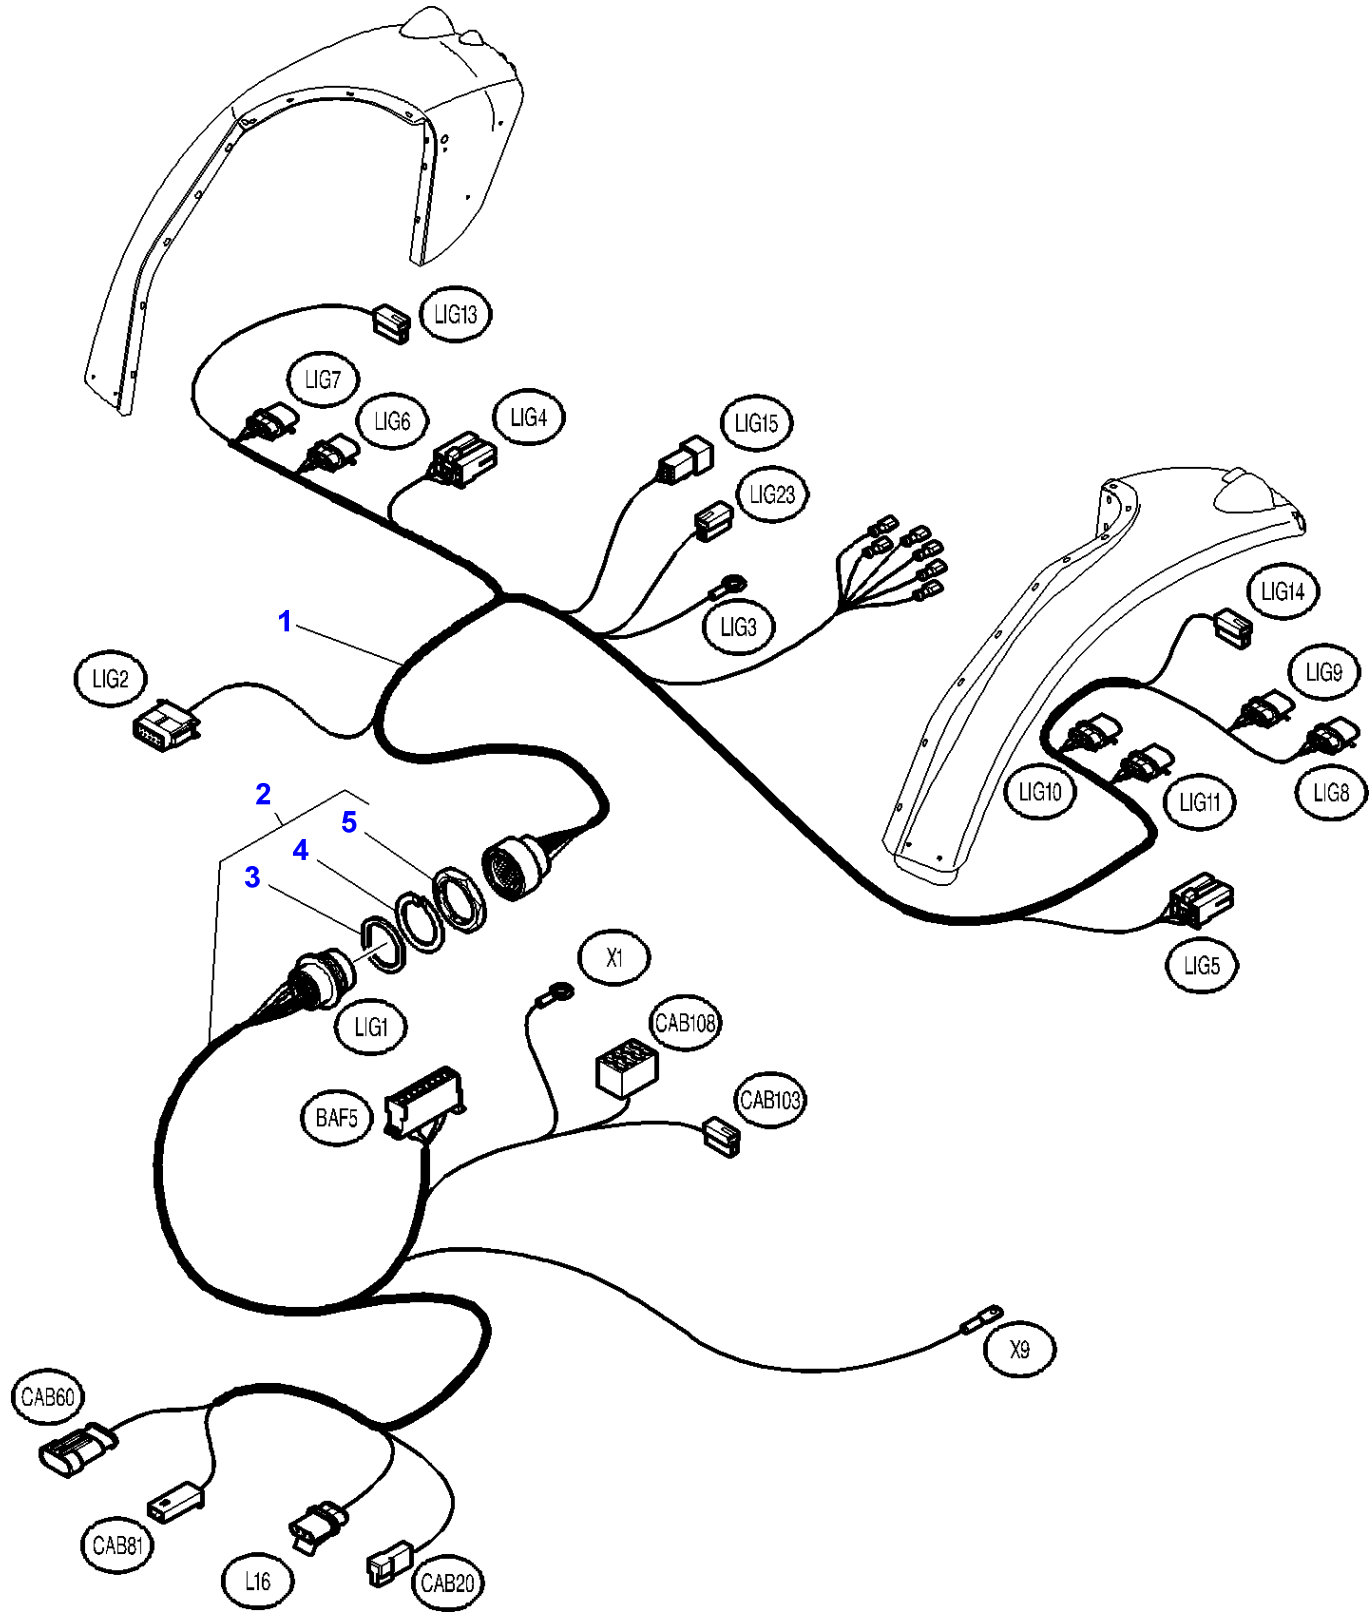
LIG13
LIG7
LIG6
LIG4
LIG15
LIG23
LIG3
1
LIG2
2
5
4
3
LIG14
LIG9
LIG8
LIG10
LIG11
LIG5
X1
LIG1
CAB108
BAF5
CAB103
X9
CAB60
CAB81
L16
CAB20

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787528M93 | 1 | Harness | Up to Serial or Engine Number N328016 |
| | 3787528M94 | 1 | Harness | From Serial or Engine Number N328017 |
| 2 | 4276770M92 | 1 | Harness | Up to Serial or Engine Number N328016 |
| | 4276770M93 | 1 | Harness | From Serial or Engine Number N328017 |
| 3 | 3013355X1 | 1 | Seal | (2) |
| 4 | 3013354X1 | 1 | Washer | (2) |
| 5 | 3013353X1 | 1 | Nut | (2) |

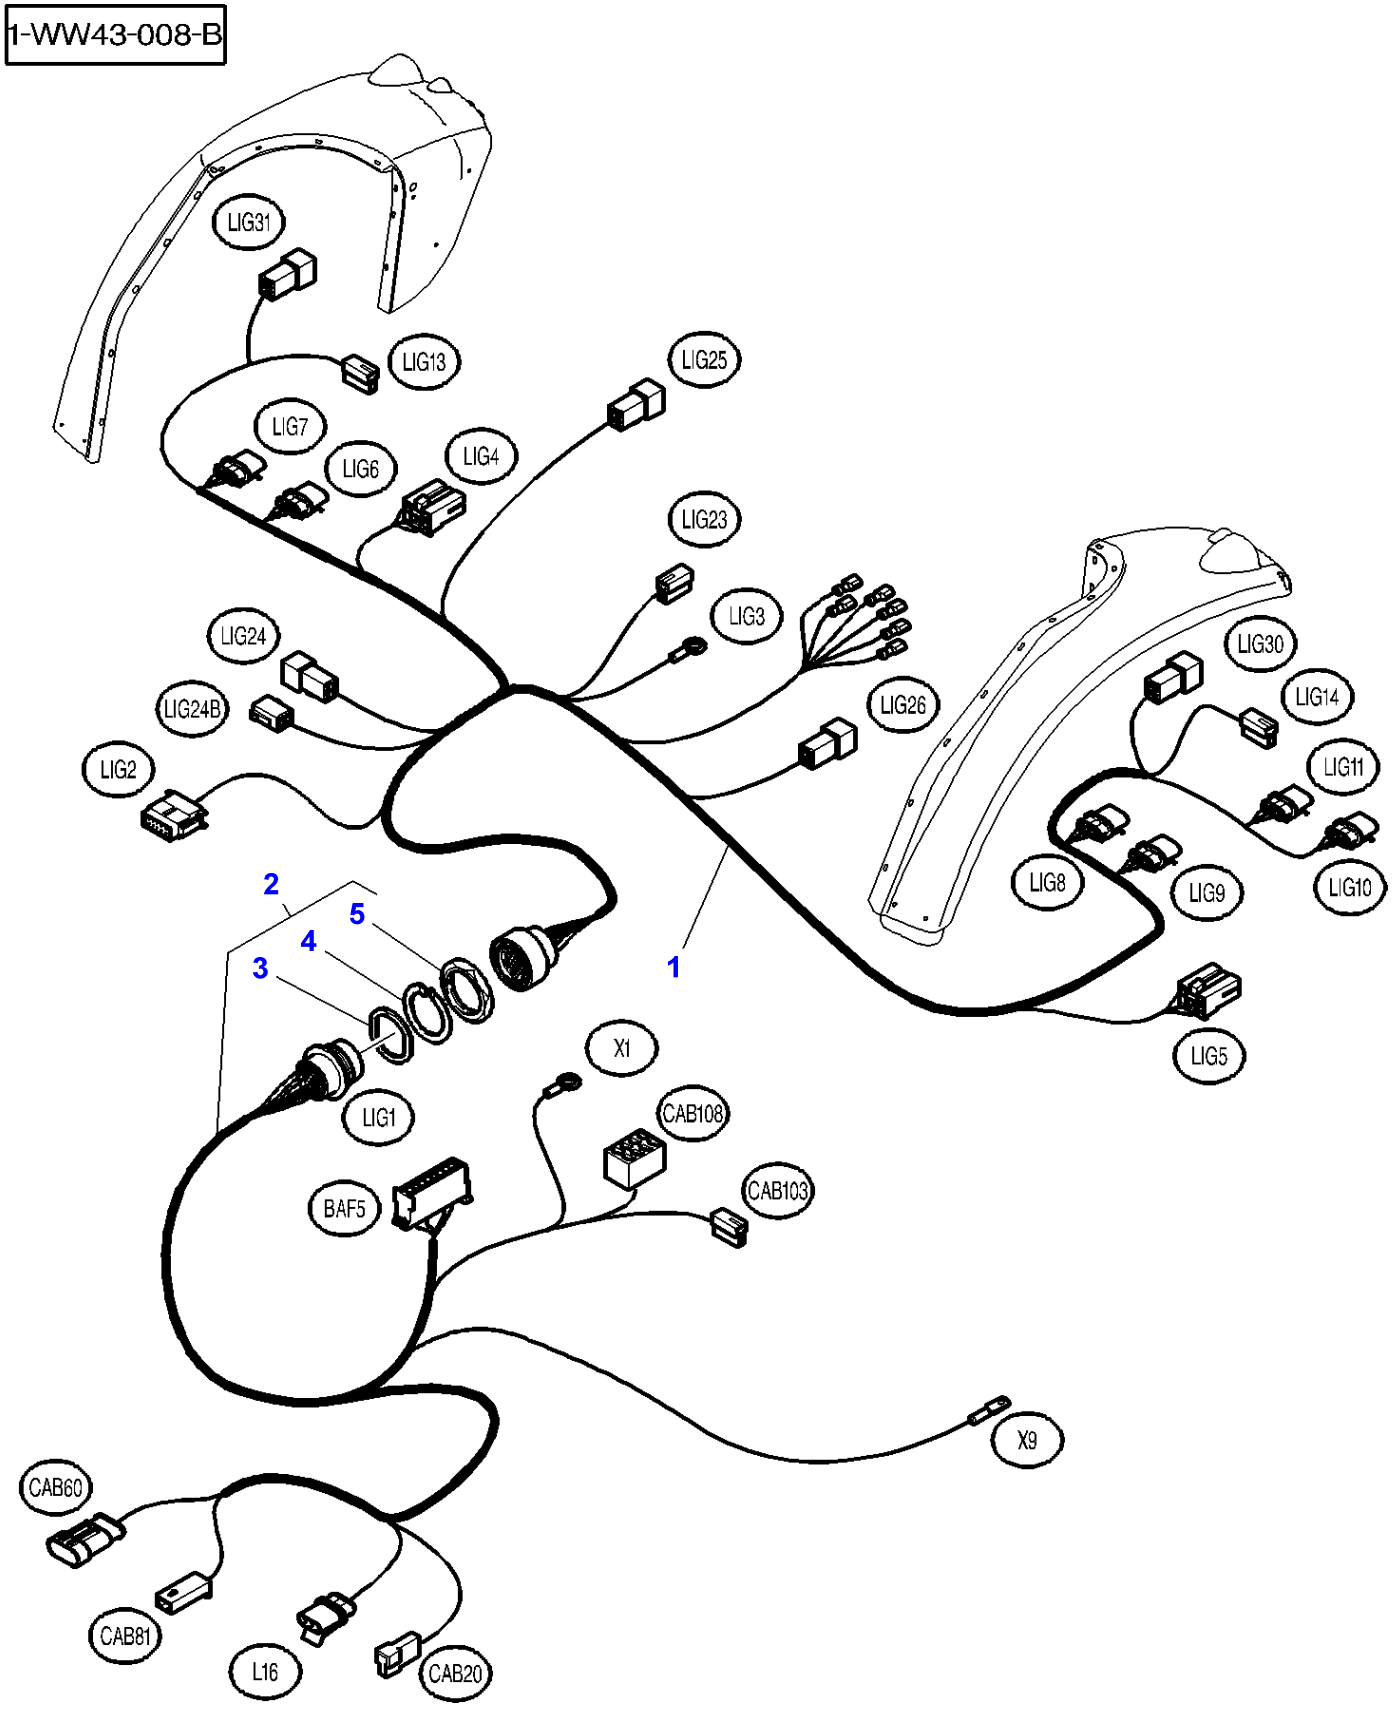

1-WW43-008-B
LIG31
LIG13
LIG25
LIG7
LIG6
LIG4
LIG23
LIG3
LIG24
LIG24B
LIG2
LIG26
LIG30
LIG14
LIG11
LIG8
LIG9
LIG10
LIG5
2
5
4
3
1
X1
LIG1
CAB108
BAF5
CAB103
X9
CAB60
CAB81
L16
CAB20

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4278756M2 | 1 | Harness | Up to Serial or Engine Number P004002 |
| | 4278756M3 | 1 | Harness | From Serial or Engine Number P004003 |
| 2 | 4278975M91 | 1 | Harness | Up to Serial or Engine Number P004002 |
| | 4278975M92 | 1 | Harness | From Serial or Engine Number P004003 |
| 3 | 3013355X1 | 1 | Seal | (2) |
| 4 | 3013354X1 | 1 | Washer | (2) |
| 5 | 3013353X1 | 1 | Nut | (2) |

1-WW39-008-A

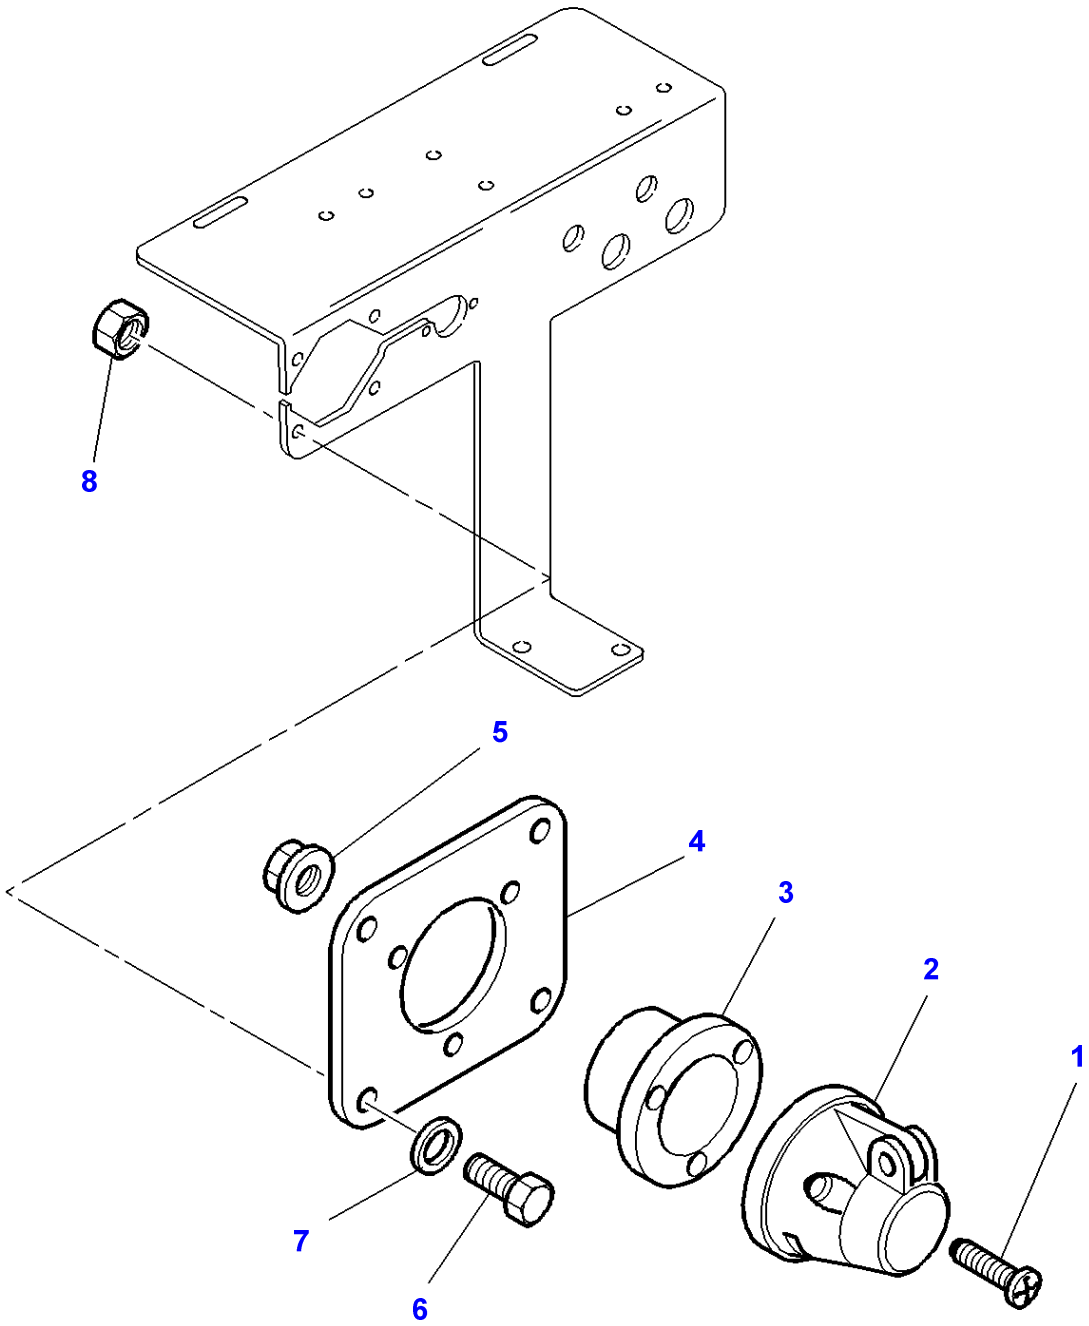


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3009538X1 | 3 | Screw | M5 X 35 |
| 2 | 409965M1 | 1 | Socket 7 Pin Sup | |
| 3 | 3041656M2 | 1 | Plate | |
| 4 | 3785913M1 | 1 | Support | |
| 5 | 3010477X1 | 3 | Nut Metric | M5 |
| 6 | 339560X1 | 4 | Hex. Sock. Screw | M6 X 16 |
| 7 | 339375X1 | 4 | Lock Washer | |
| 8 | 339030X1 | 4 | Nut Metric | M6 |


1-WW39-009-A

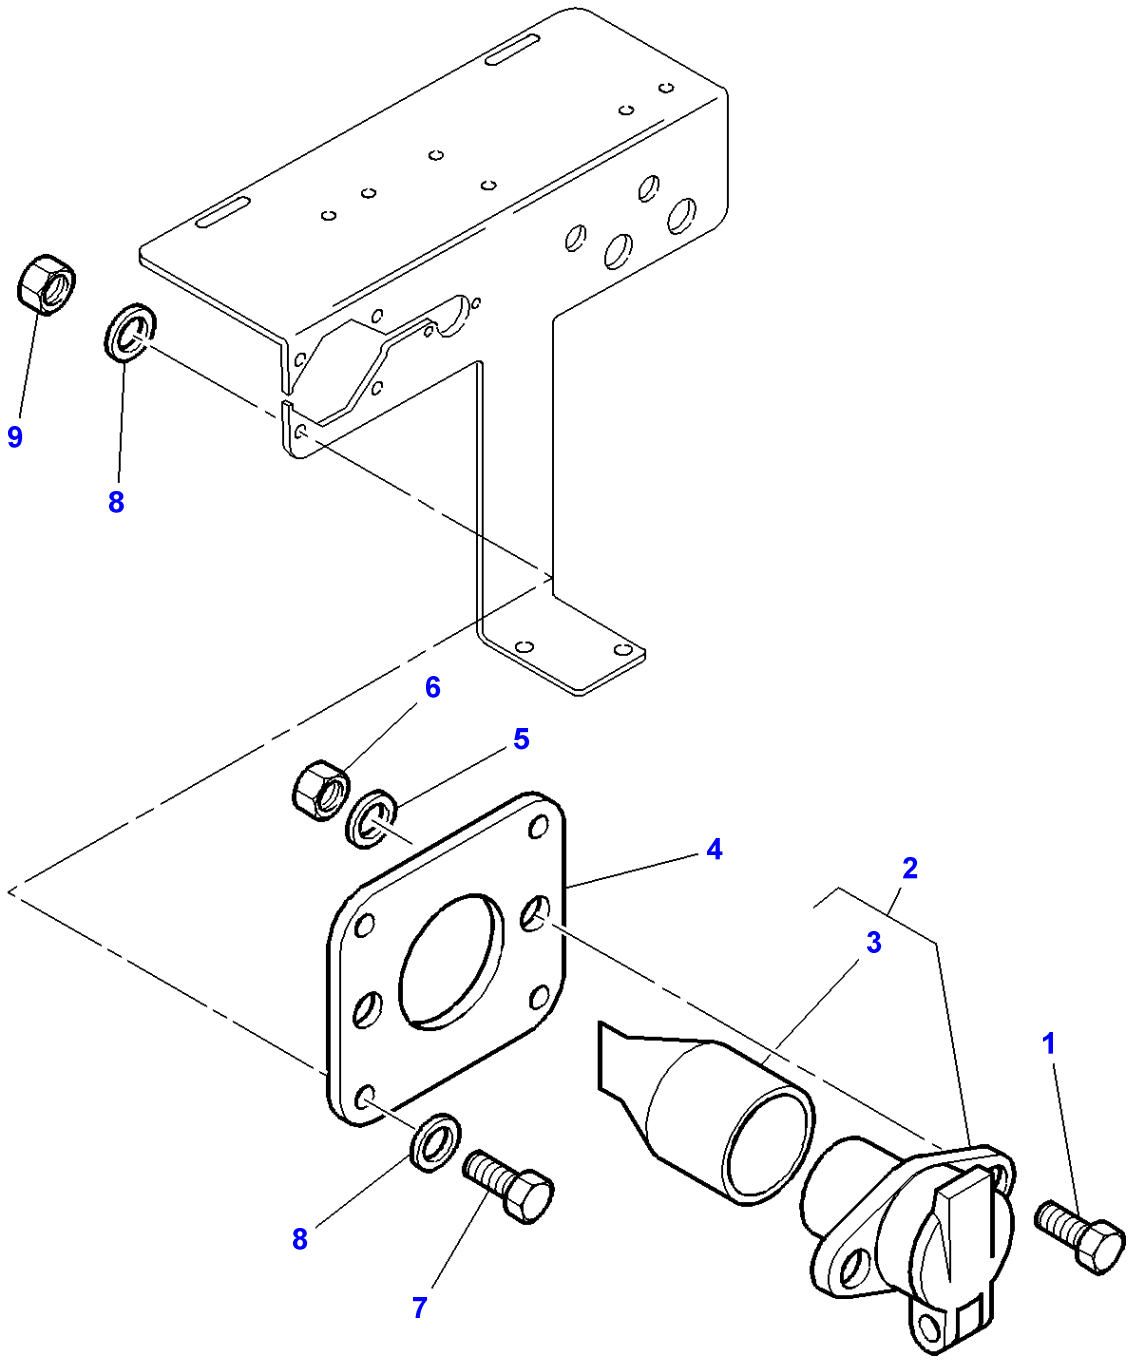

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 2 | 3715923M91 | 1 | Intake | |
| 3 | 3715925M1 | 1 | Helmet | (2) |
| 4 | 3785914M1 | 1 | Support | |
| 5 | 339374X1 | 2 | Lock Washer | |
| 6 | 339169X1 | 2 | Nut | M8 |
| 7 | 339560X1 | 4 | Hex. Sock. Screw | M6 X 16 |
| 8 | 339375X1 | 4 | Lock Washer | |
| 9 | 339030X1 | 4 | Nut Metric | M6 |

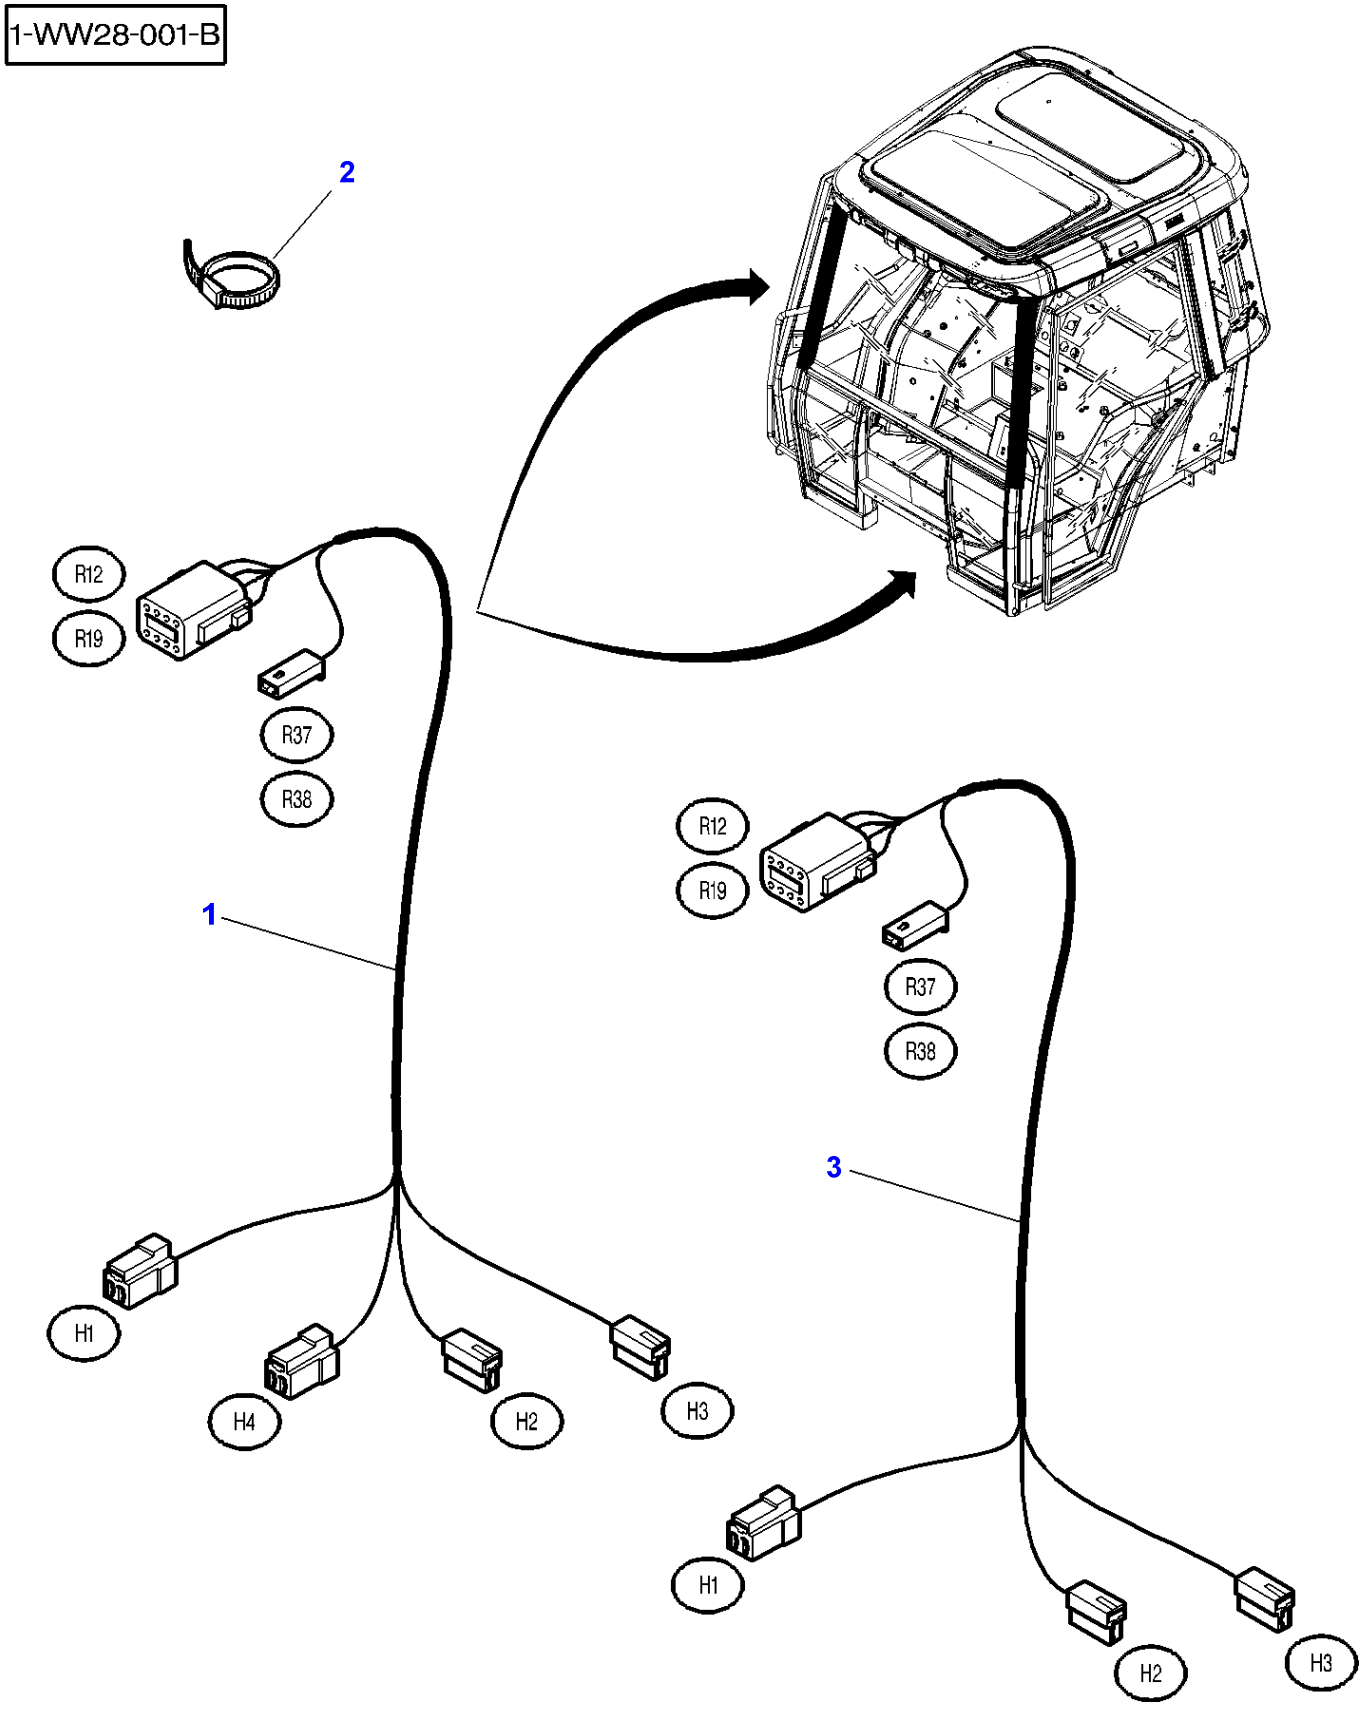

1-WW28-001-B
2
R12
R19
R37
R38
1
H1
H4
H2
H3
R12
R19
R37
R38
3
H1
H2
H3

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787512M91 | 2 | Harness | [A] |
| 2 | 3619622M1 | X | Cable Tie | |
| 3 | 4273146M1 | 2 | Harness | |

**FOOTNOTE [A]** USED WITH WAY LIGHTS FITTED ON THE GUIDEWAY

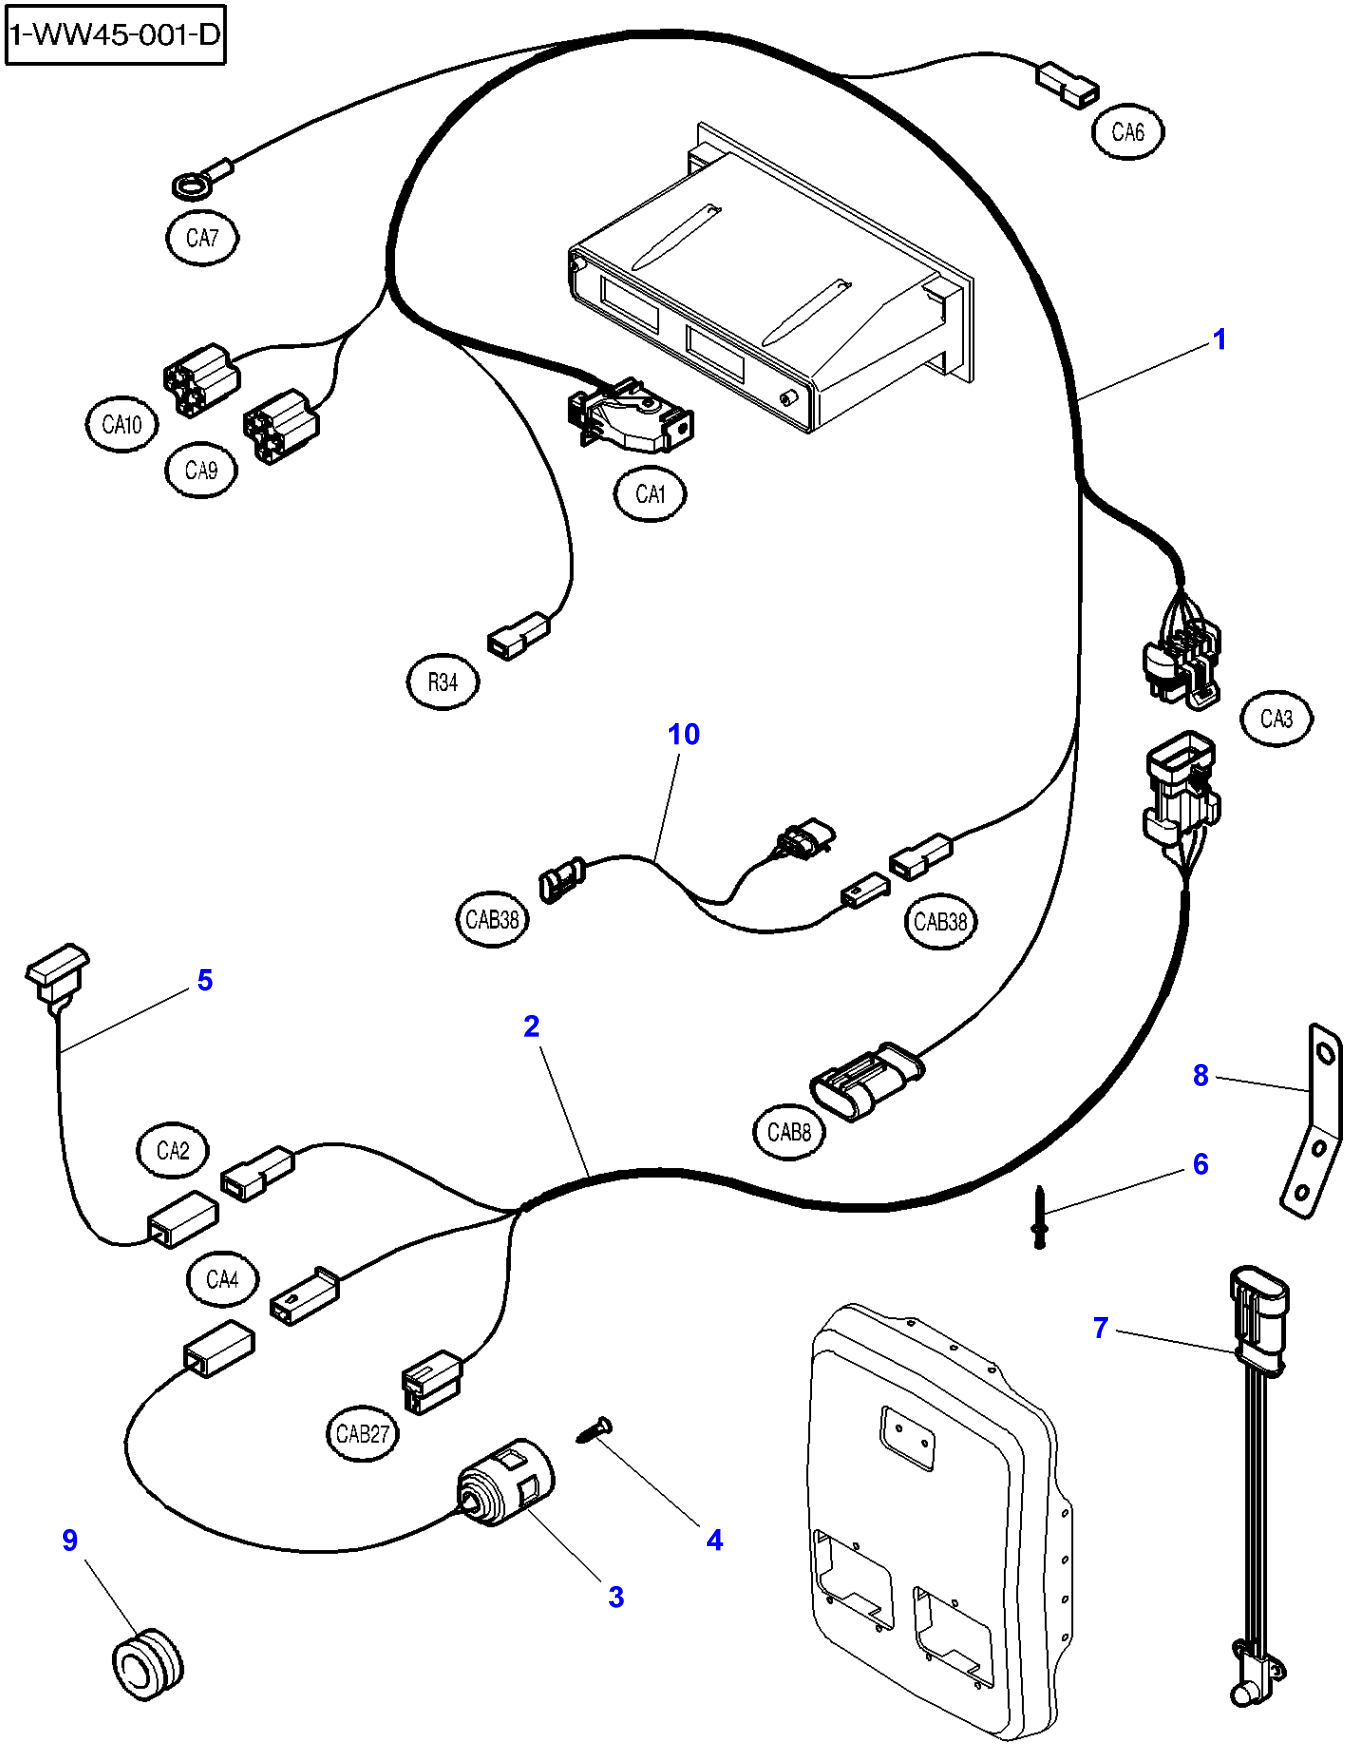
1-WW45-001-D
CA6
CA7
1
CA10
CA9
CA1
R34
CA3
10
CAB38
CAB38
5
2
8
CA2
CAB8
6
CA4
7
CAB27
4
9
3


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272347M2 | 1 | Harness | |
| 2 | 4272151M3 | 1 | Harness | |
| 3 | 3787192M1 | 1 | Temp. Sensor | [A] |
| 4 | 3787143M1 | 2 | Screw | |
| 5 | 3787185M1 | 1 | Transducer | [C] |
| 6 | 338662X1 | 2 | Rivet | Diameter 2,4 MM |
| 7 | 3787184M1 | 1 | Temp. Sensor | [B] |
| 8 | 4272846M1 | 1 | Support | |
| 9 | 3783677M1 | 1 | Grommet | Diameter 7-21 |
| 10 | 4279691M1 | 1 | Harness | |

**FOOTNOTE [A]** INSIDE TEMPERATURE SENSOR
**FOOTNOTE [B]** OUTSIDE TEMPERATURE SENSOR
**FOOTNOTE [C]** SOLAR SENSOR
**FOOTNOTE [D]** DYNA-6
**FOOTNOTE [E]** NOT USED


1-WW04-001-A

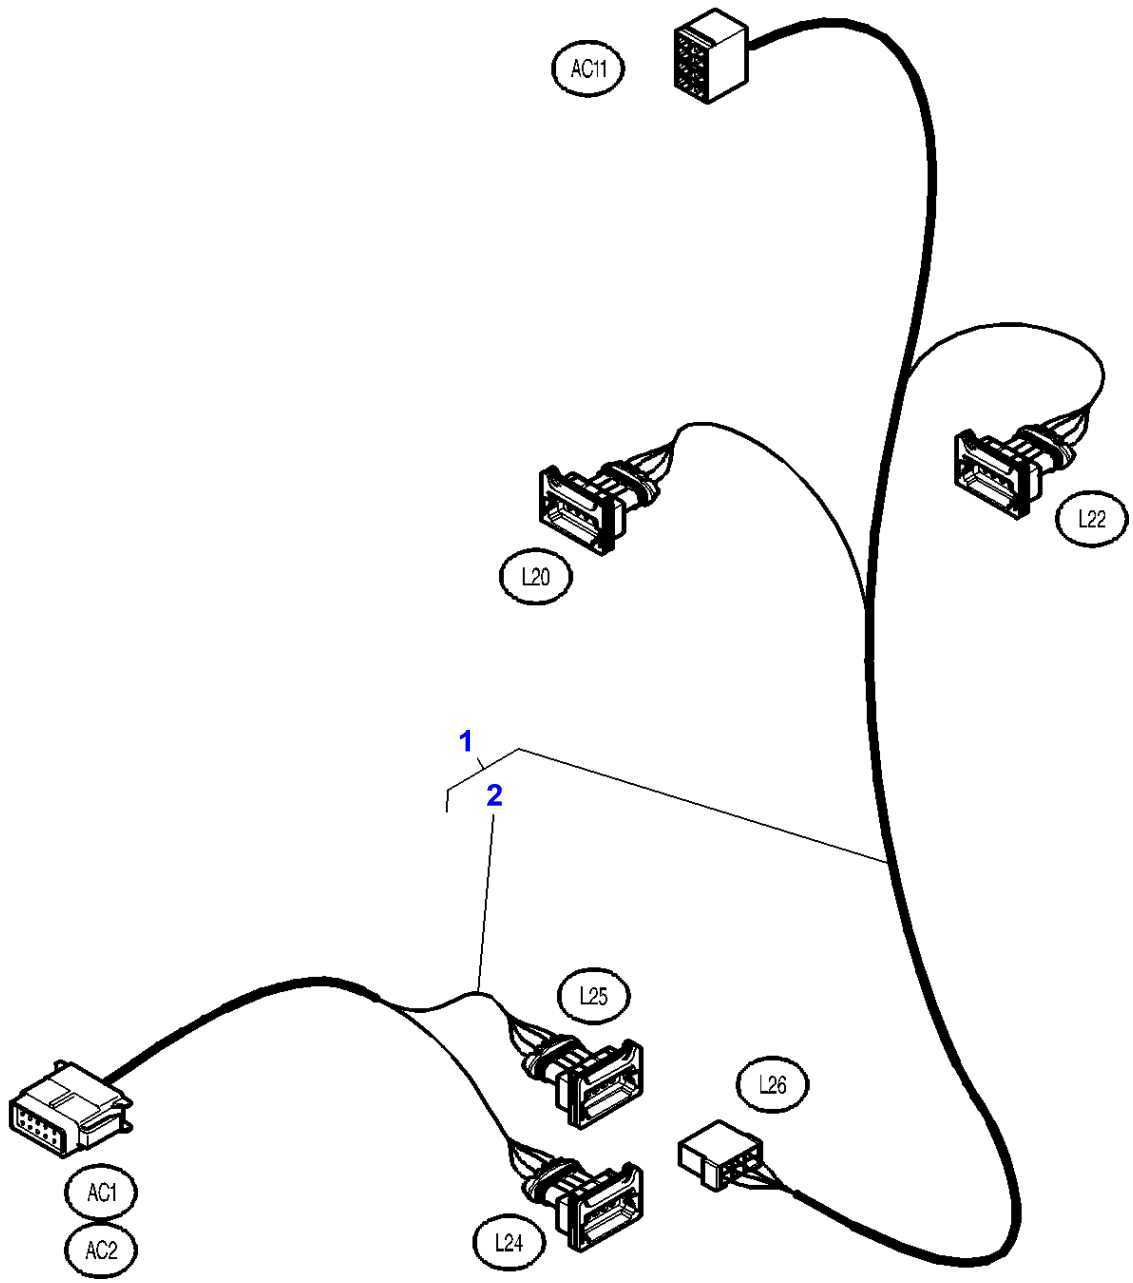

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3788426M1 | 1 | Harness | |
| 2 | | 1 | Harness | (1) Not serviced,order REF. 1 |

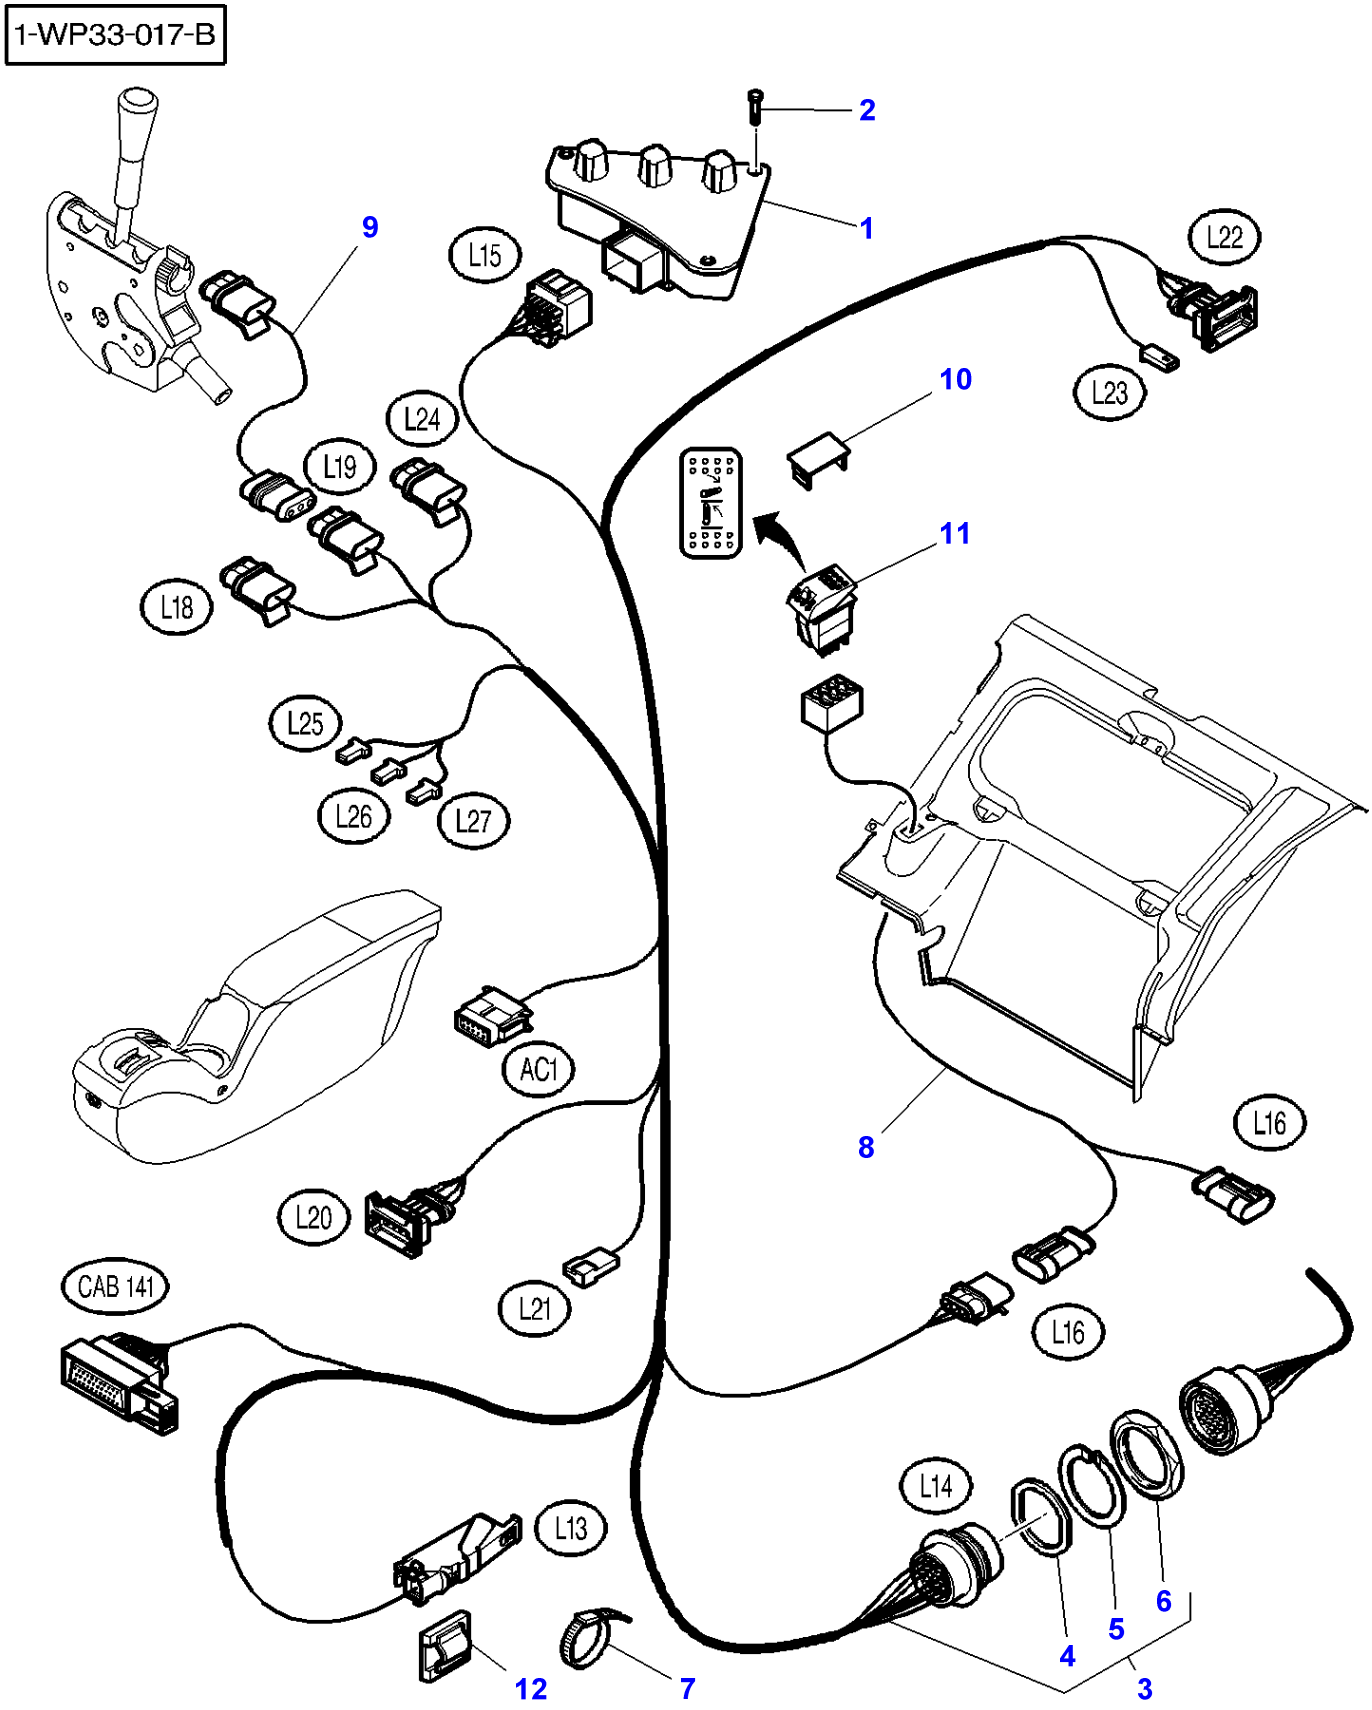
1-WP33-017-B
2
1
9
L15
L22
L23
10
L24
L19
11
L18
L25
L26
L27
8
AC1
L16
L20
CAB 141
L21
L16
L14
L13
6
5
4
12
7
3


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4278661M91 | 1 | Electron Console | [B] |
| | | | | See Page - Reference Number 090-0030/1 |
| | 4278662M91 | 1 | Electron Console | [A] |
| | | | | See Page - Reference Number 090-0035/1 |
| 2 | 3010506X1 | 4 | Screw | M5 X 16 |
| | 3010804X1 | 4 | Screw | M4 X 16 |
| 3 | 4277438M93 | 1 | Harness | |
| 4 | 3013355X1 | 1 | Seal | (3) |
| 5 | 3013354X1 | 1 | Washer | (3) |
| 6 | 3013353X1 | 1 | Nut | (3) |
| 7 | 3619622M1 | X | Cable Tie | |
| 8 | 3787437M1 | 1 | Harness | |
| 9 | 4279872M1 | 1 | Harness | Length 150 MM |
| 10 | 3713151M1 | 1 | Tap | |
| 11 | **4271356M1** | 1 | Switch,Indirect | |
| 12 | 3582094M1 | 2 | Tie | |

**FOOTNOTE [A]** WITH RADAR
**FOOTNOTE [B]** WITHOUT RADAR

1-WP33-016-A

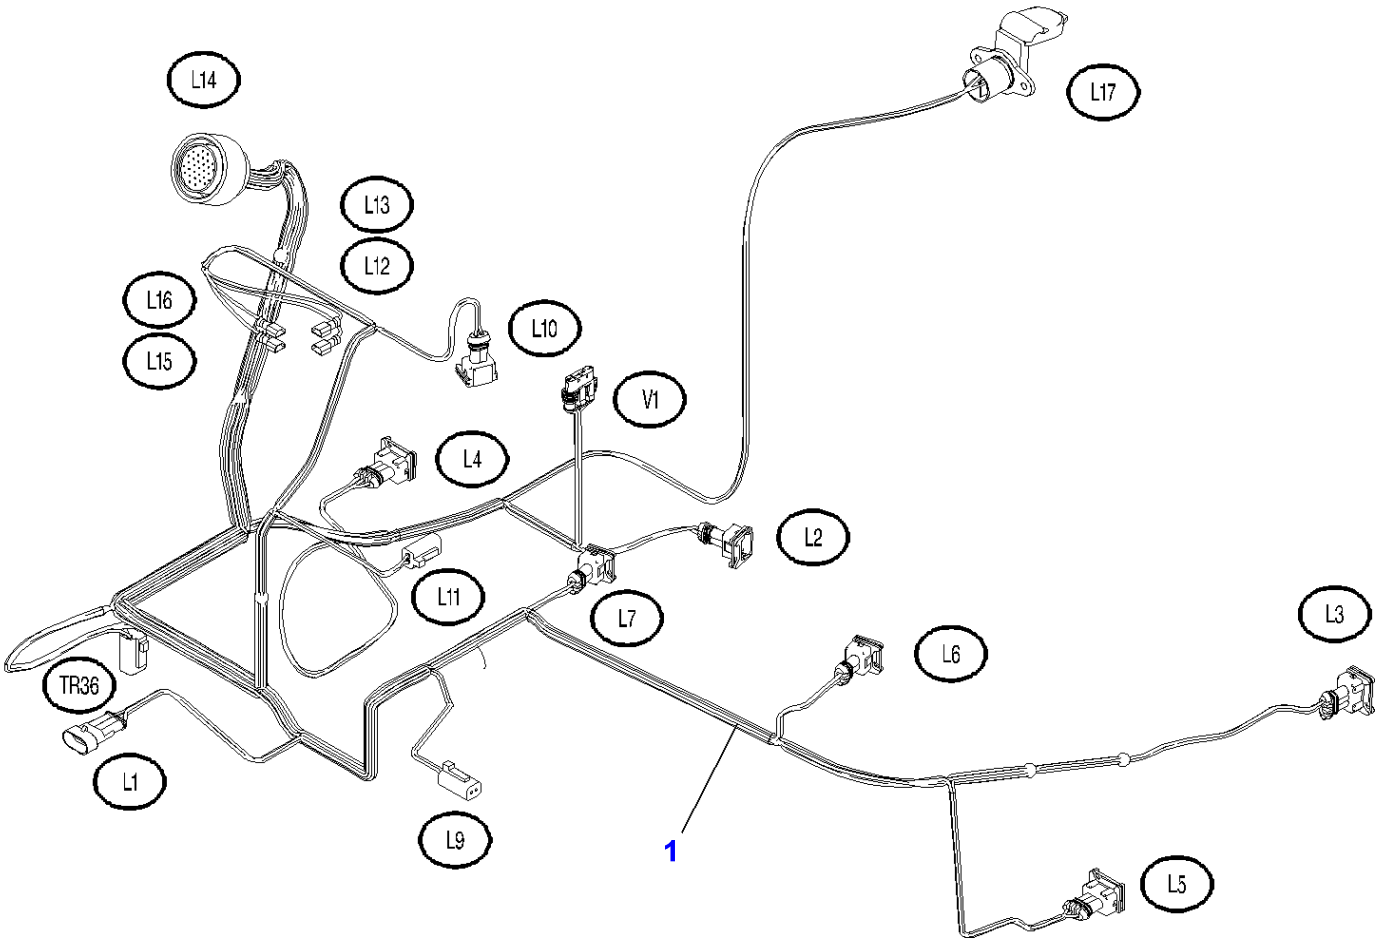


https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 4277437M93 | 1 | Harness |

1-WF85-001-A

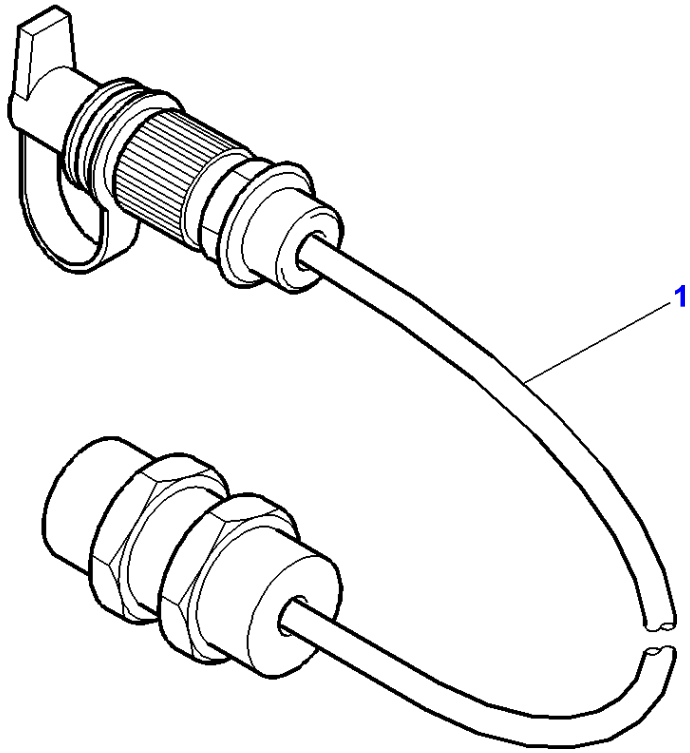


https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3784995M91 | 1 | Harness |

1-WP33-015-A

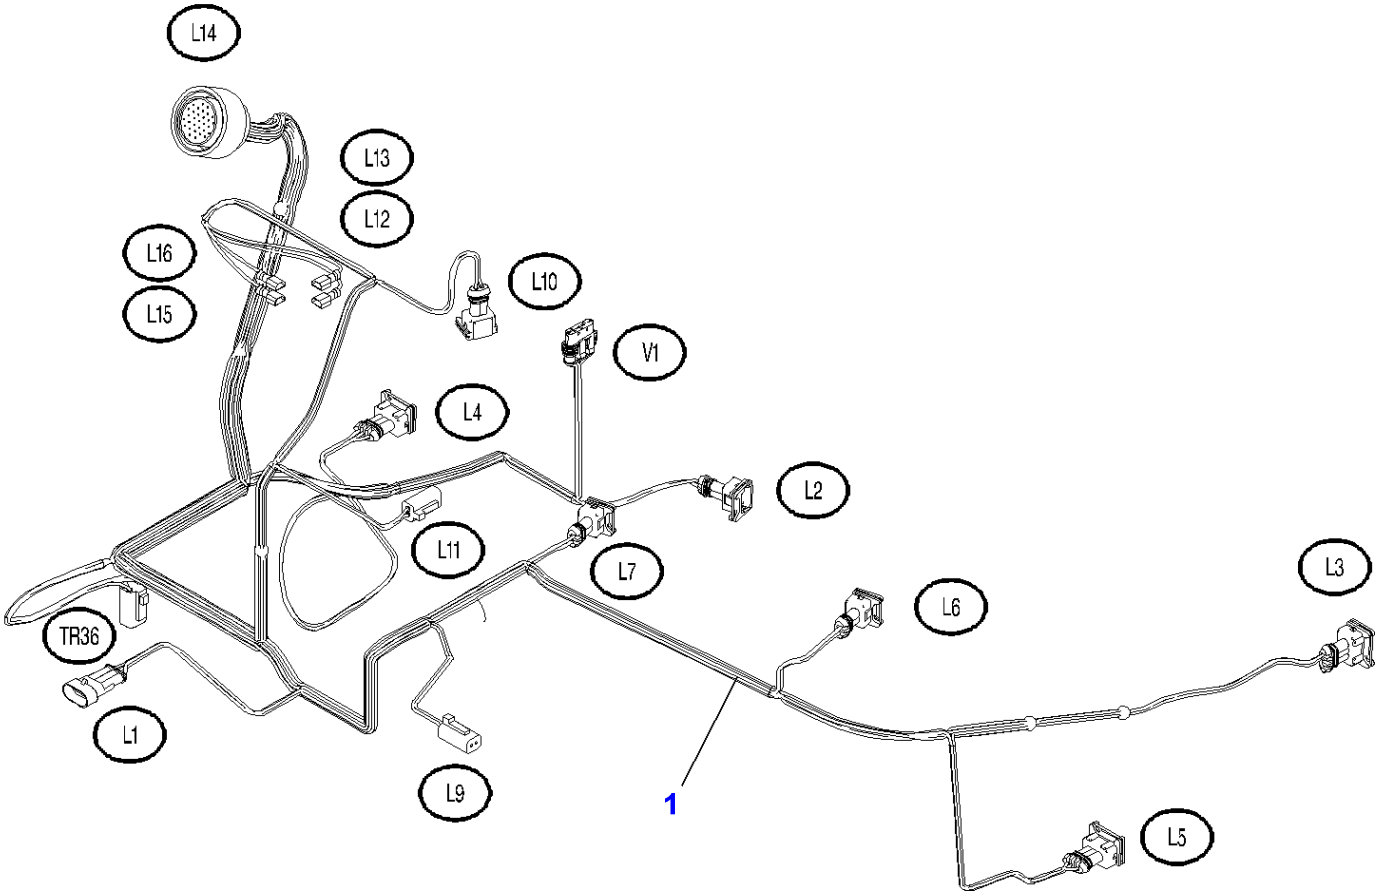


https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 4278176M93 | 1 | Harness |

1-WP10-005-A

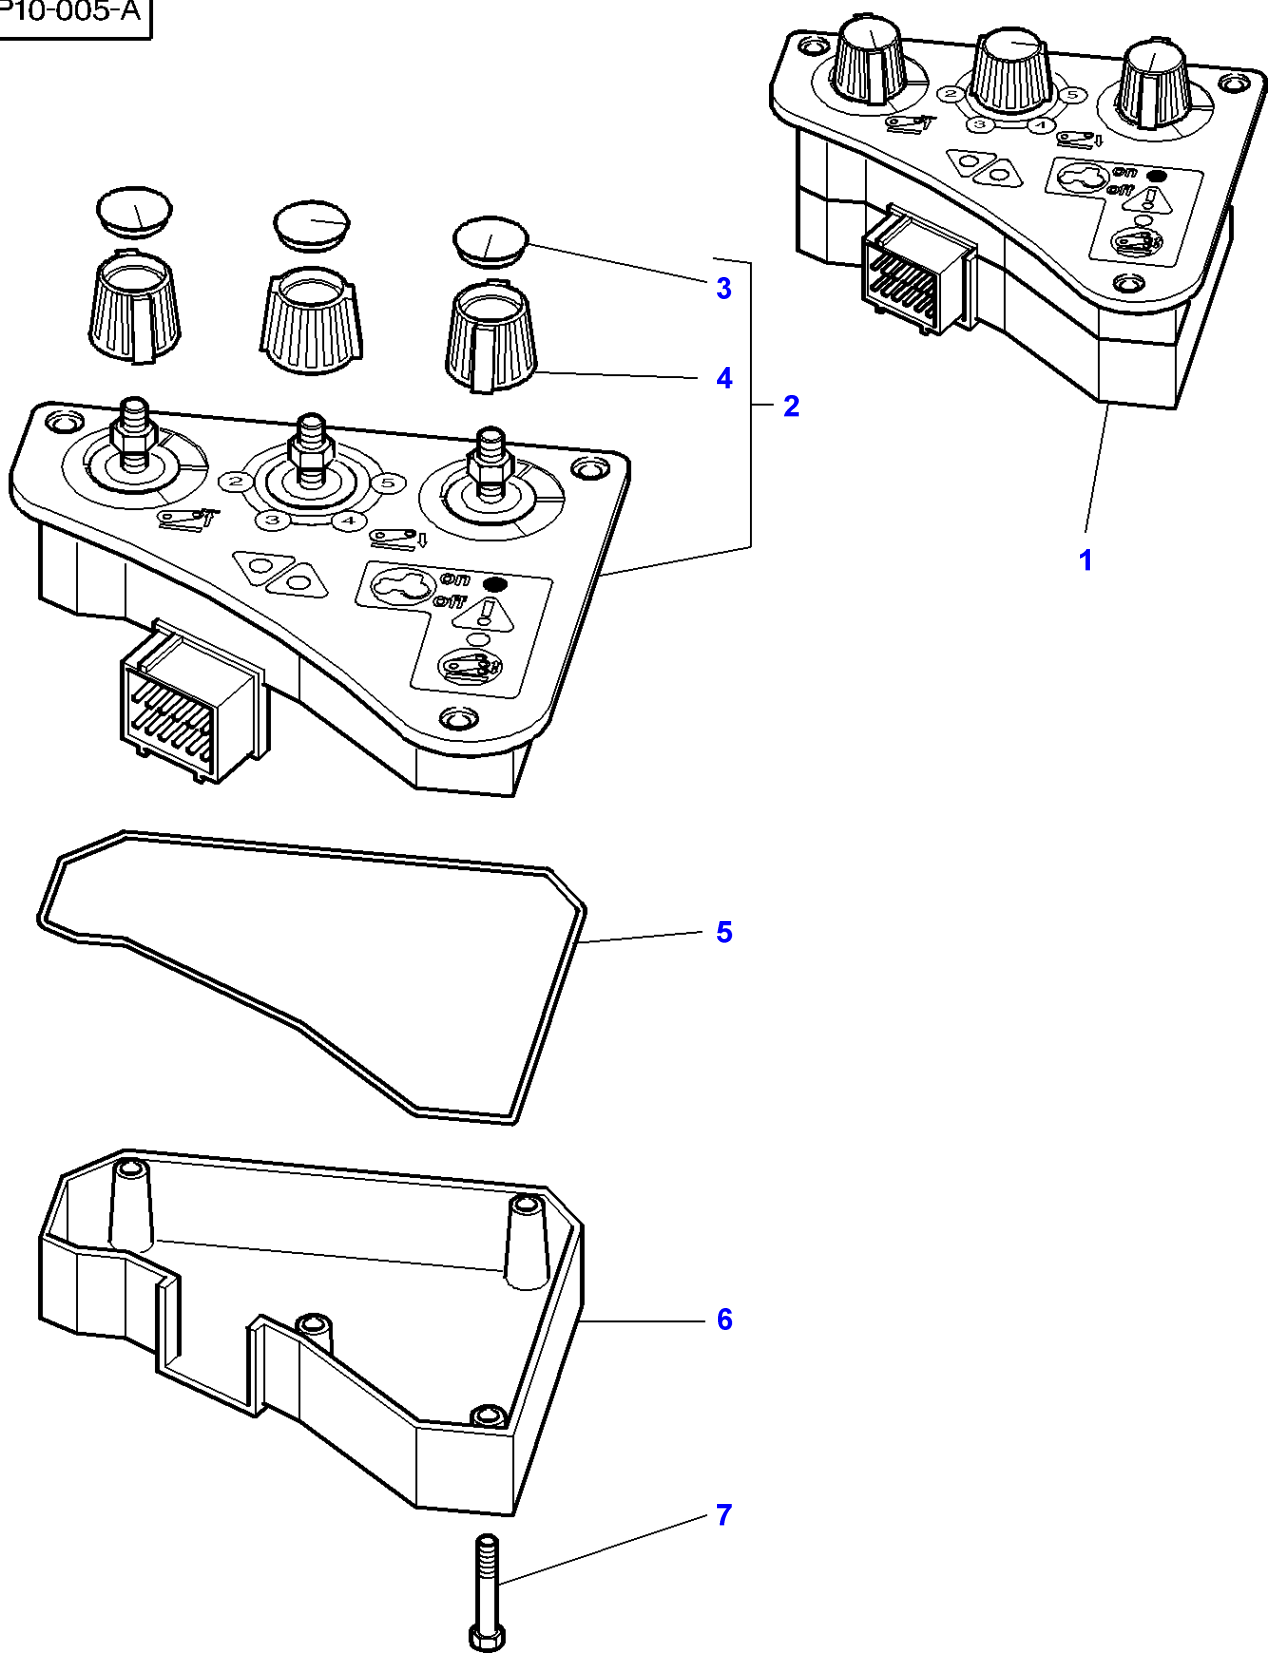


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4278661M91 | 1 | Electron Console | |
| 2 | | 1 | Case Assy | (1)<br>Not serviced,order REF. 1 |
| 3 | 3902440M1 | 3 | Helmet | (2) |
| 4 | 3903452M1 | 3 | Button | (2) |
| 5 | 3907250M1 | 1 | Seal | (1) |
| 6 | | 1 | Case Assy | (1)<br>Not serviced,order REF. 1 |
| 7 | | 4 | Screw | [A]<br>(1) |

**FOOTNOTE [A]** NOT DETAILLED

1-WP10-006-A

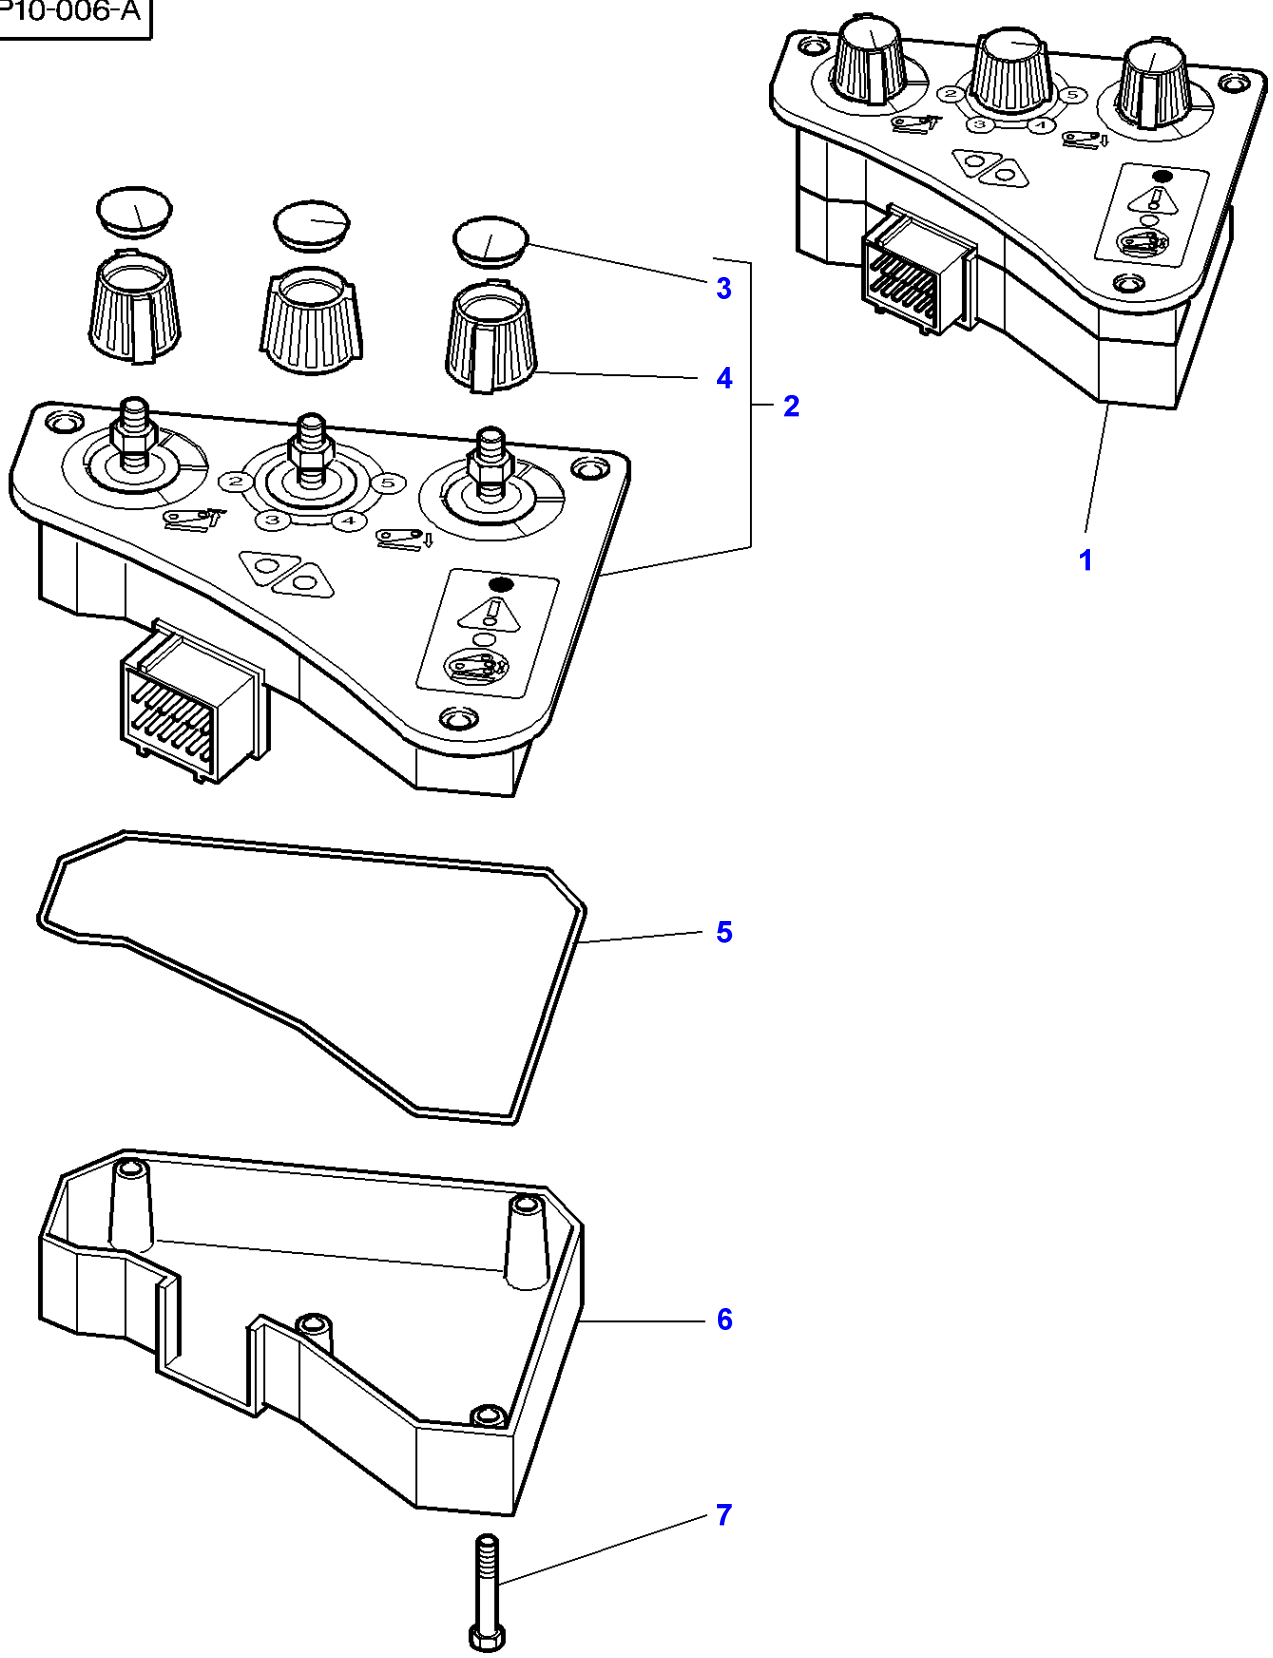


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787429M1 | 1 | Electron Console | |
| 2 | | 1 | Case Assy | (1)<br>Not serviced,order REF. 1 |
| 3 | 3902440M1 | 3 | Helmet | (2) |
| 4 | 3903452M1 | 3 | Button | (2) |
| 5 | 3907250M1 | 1 | Seal | (1) |
| 6 | | 1 | Case Assy | (1)<br>Not serviced,order REF. 1 |
| 7 | | 4 | Screw | [A]<br>(1) |

**FOOTNOTE [A]** NOT DETAILLED

1-WU31-003-C

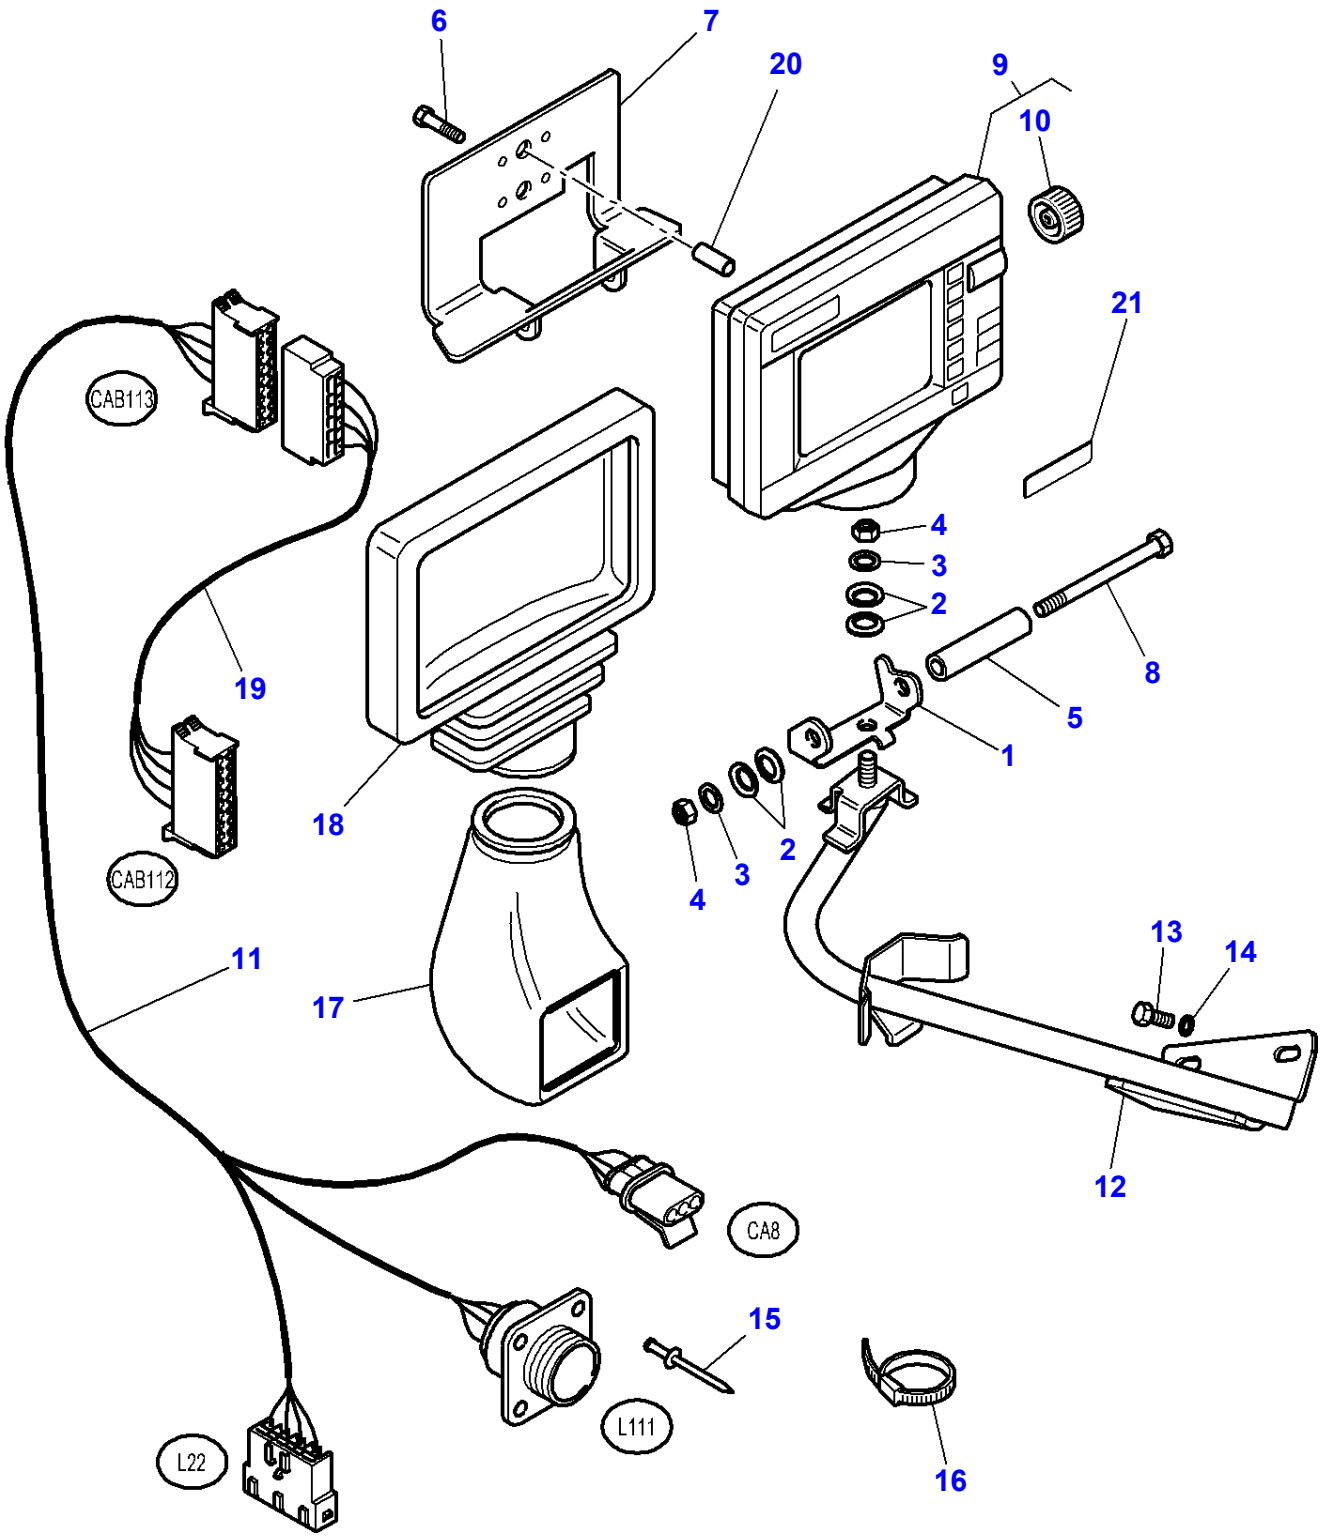
6
7
20
9
10
21
CAB113
4
3
2
19
8
5
1
18
CAB112
4
3
2
13
14
11
17
12
CA8
15
L111
16
L22


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277643M1 | 1 | Support | |
| 2 | 3386192M1 | 4 | Washer | Diameter 8-26 |
| 3 | 3010467X1 | 2 | Washer | Diameter 9-30 X 2 |
| 4 | 394367X1 | 2 | Locknut | M8 |
| 5 | 3712867M1 | 1 | Spacer | Diameter 9-12 X 74 |
| 6 | 339721X1 | 4 | Hex. Sock. Screw | M5 X 16 |
| 7 | 4277644M1 | 1 | Support | |
| 8 | 339013X1 | 1 | Hex. Sock. Screw | M8 X 110 |
| 9 | 4277666M91 | 1 | Onboard Computor | [A] |
| | 4277459M93 | 1 | Onboard Computor | [B] |
| | 4277461M91 | 1 | Onboard Computor | [C] |
| 10 | 3907557M1 | 1 | Button | (9) |
| 11 | 4280179M1 | 1 | Harness | |
| 12 | 4277640M91 | 1 | Tube | |
| 13 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 14 | 390972X1 | 2 | Washer | Diameter 8-17 X 1,7 |
| 15 | 3011214X1 | 4 | Rivet | |
| 16 | 3619622M1 | 10 | Cable Tie | |
| 17 | 4278792M91 | 1 | Bellows | |
| 18 | 4278789M91 | 1 | Bellows | |
| 19 | 4277219M93 | 1 | Harness | |
| 20 | 3011600X1 | 4 | Spacer | Diameter 7-10,5 MM |
| 21 | 4277472M1 | 1 | Decal | |

**FOOTNOTE [A]** BLACK AND WHITE SCREEN
**FOOTNOTE [B]** COLOR SCREEN
**FOOTNOTE [C]** VIDEO COLOR SCREEN AND ENTREE

1-WU31-004-A

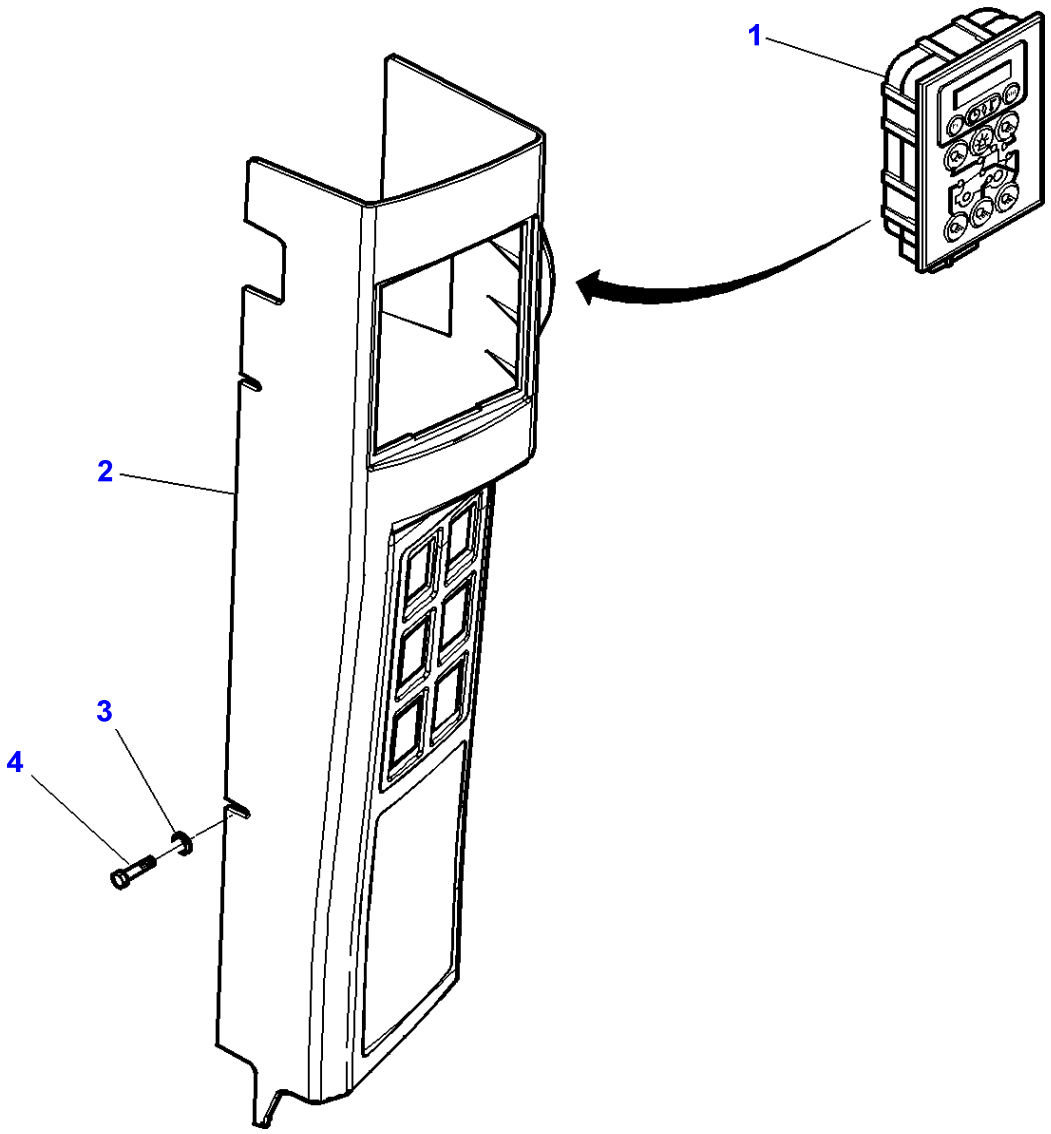


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786382M3 | 1 | Module | See Page - Reference Number 090-0050/1 |
| | 3786383M3 | 1 | Module | See Page - Reference Number 090-0050/1<br>For United States of America |
| 2 | | 1 | Mounting | See Page - Reference Number 110-0085/14 |
| 3 | 390469X1 | 4 | Washer | Diameter 5-10 X 1,5 |
| 4 | 3010578X1 | 4 | Screw | M5 X 10 |

1-WU31-002-A

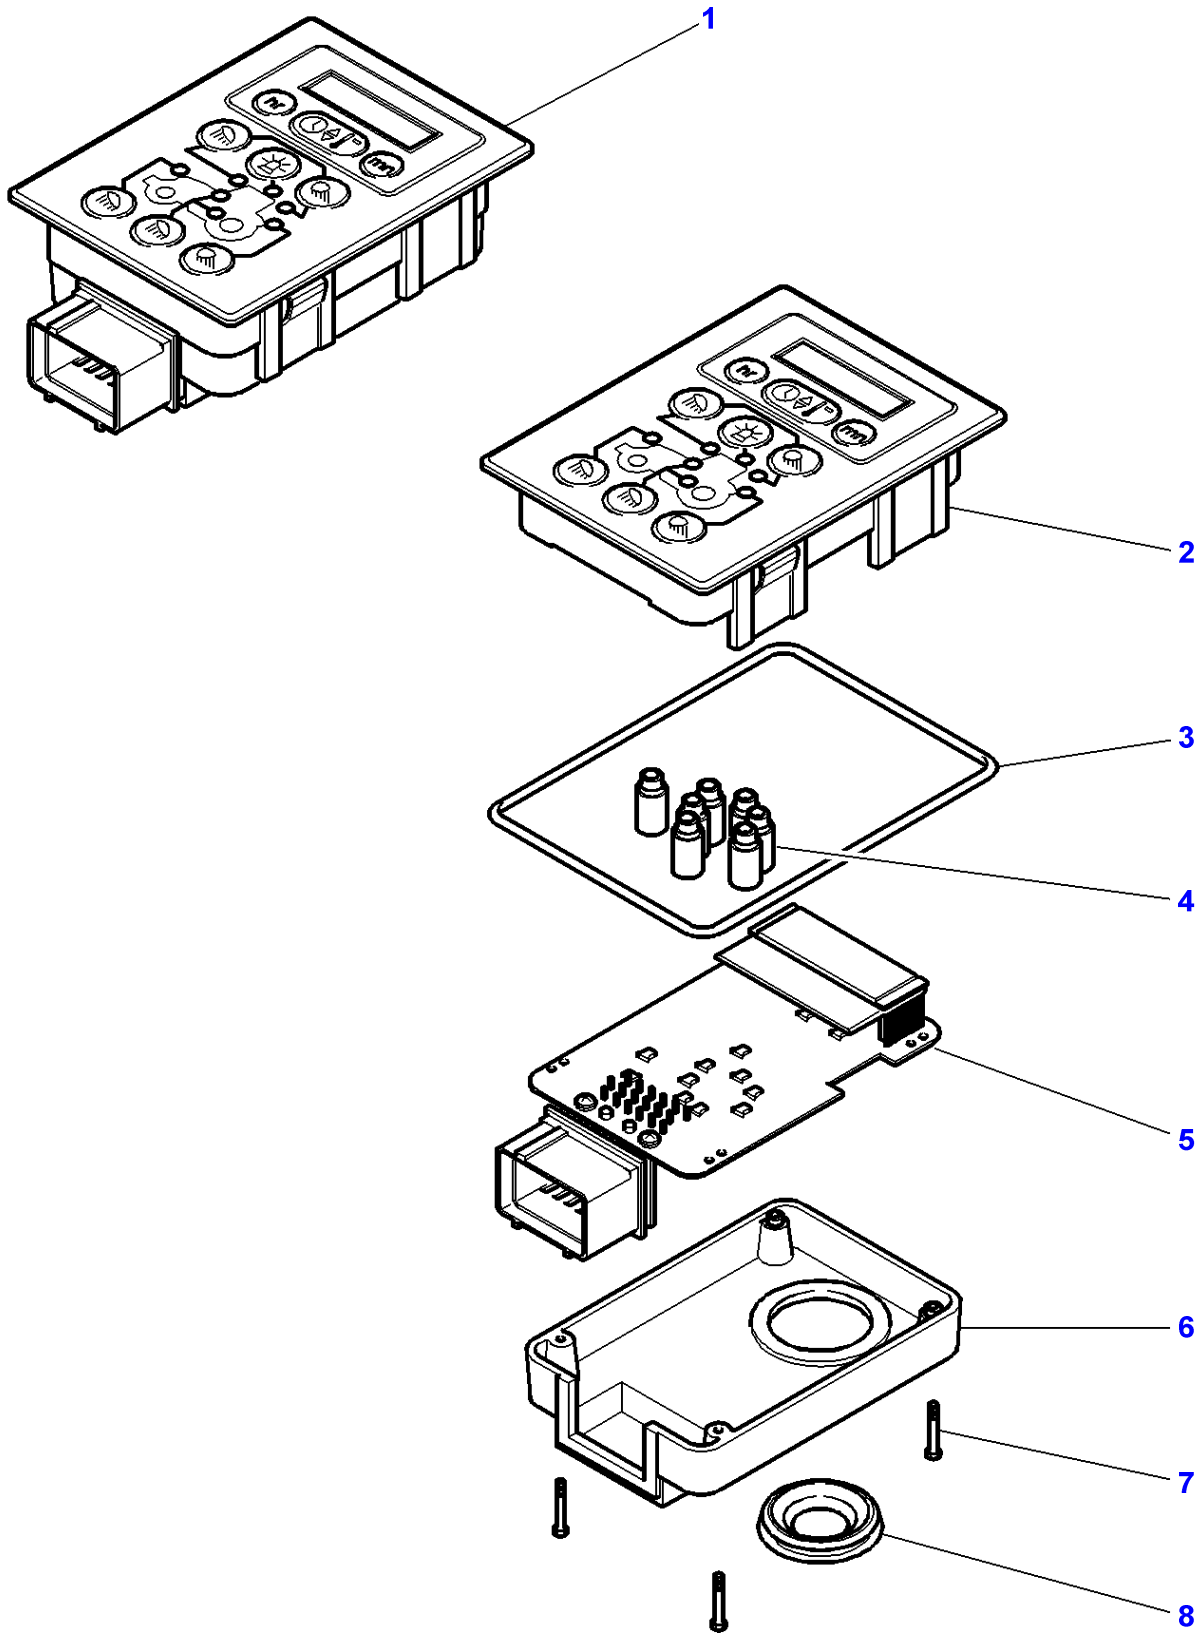


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786382M3 | 1 | Module | |
| | 3786383M3 | 1 | Module | For United States of America |
| 2 | 3907252M91 | 1 | Case Assy | (1) |
| | | | | For United States of America |
| | 3907256M91 | 1 | Case Assy | (1) |
| 3 | 3907253M1 | 1 | Seal | (1) |
| 4 | | 7 | Guide | [A] |
| | | | | (1) |
| | | | | Not serviced,order REF. 1 |
| 5 | | 1 | Printed Circuit | (1) |
| | | | | Not serviced,order REF. 1 |
| 6 | | 1 | Case Assy | [A] |
| | | | | (1) |
| 7 | | 4 | Screw | [A] |
| | | | | (1) |
| 8 | 3907255M1 | 1 | Helmet | (1) |

**FOOTNOTE [A]** NOT DETAILLED

1-WU34-004-A

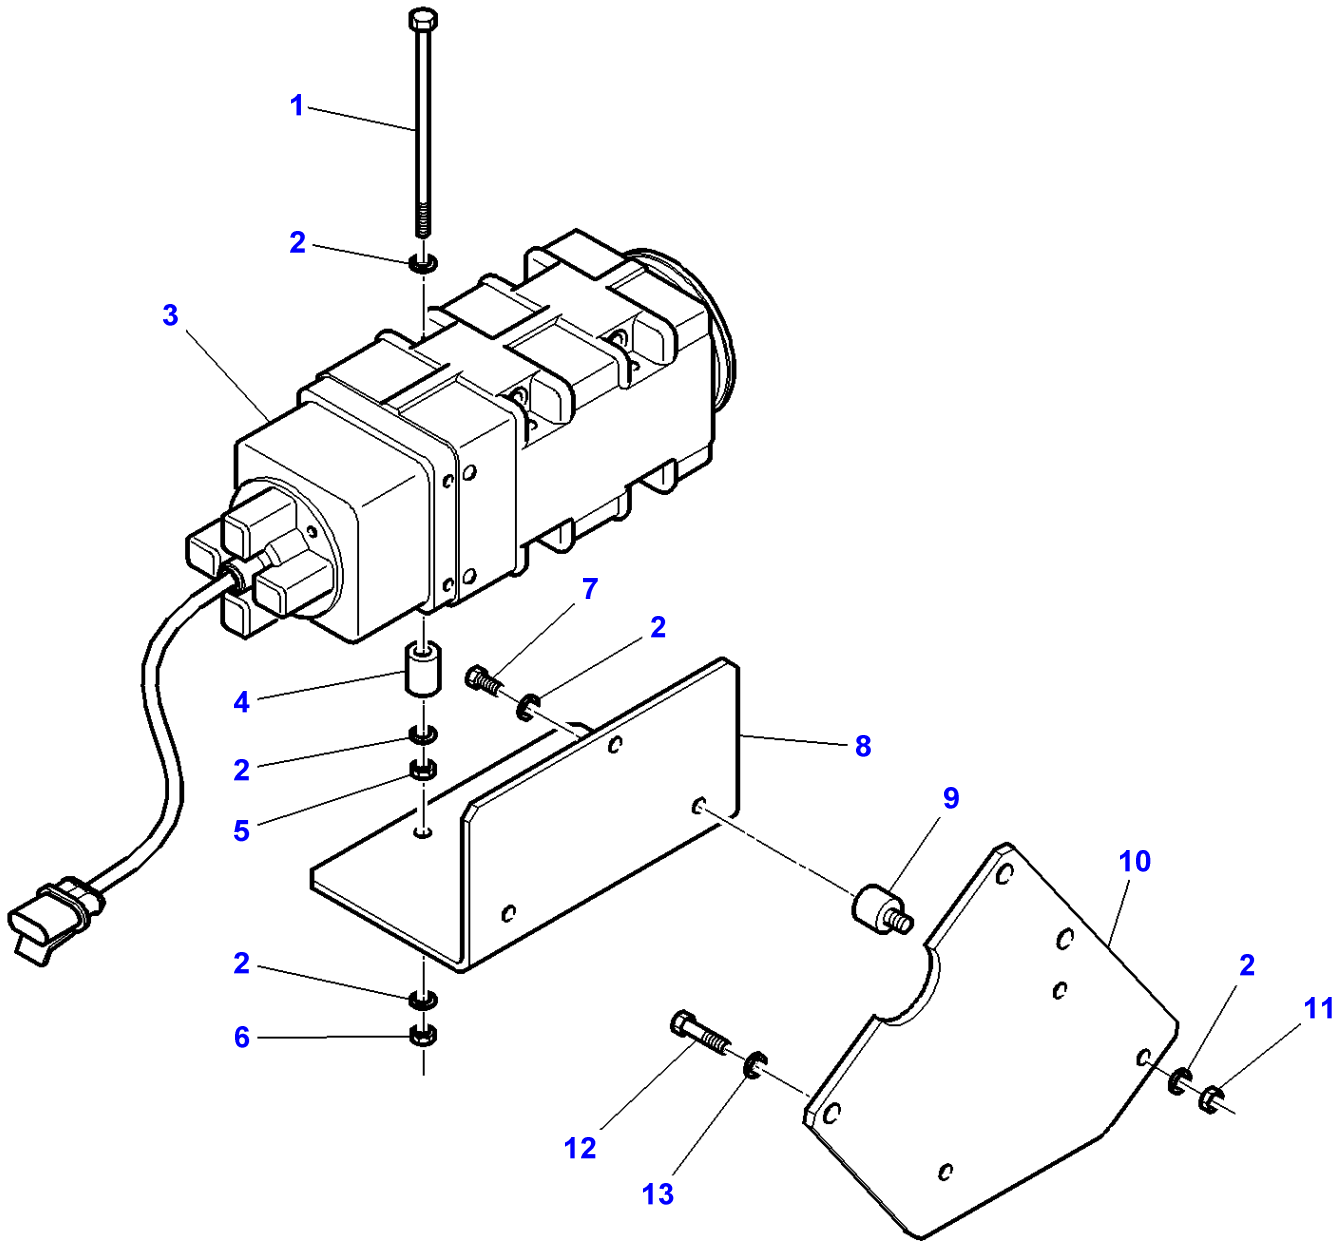


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3019894X1 | 4 | Hex. Sock. Screw | M6 X 100 |
| 2 | 390971X1 | 18 | Washer | Diameter 6-12 X 1,5 |
| 3 | 3714290M2 | 1 | Speed Detector | [A]<br>GHZ 24.300<br>For UK only or any text in English only |
| | 3714291M2 | 1 | Speed Detector | [A]<br>GHZ 24.125 |
| 4 | 3582802M1 | 4 | Spacer | Diameter 8-16 X 22 |
| 5 | 1440207X1 | 4 | Nut Metric | M6 |
| 6 | 339030X1 | 4 | Nut Metric | M6 |
| 7 | 339230X1 | 3 | Hex. Sock. Screw | M6 X 10 |
| 8 | 3781310M1 | 1 | Support | |
| 9 | 3583548M1 | 3 | Dowel | |
| 10 | 4277540M2 | 1 | Support | |
| 11 | 339030X1 | 3 | Nut Metric | M6 |
| 12 | 339123X1 | 3 | Hex. Sock. Screw | M8 X 20 |
| 13 | 390972X1 | 3 | Washer | Diameter 8-17 X 1,7 |


**FOOTNOTE [A]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART

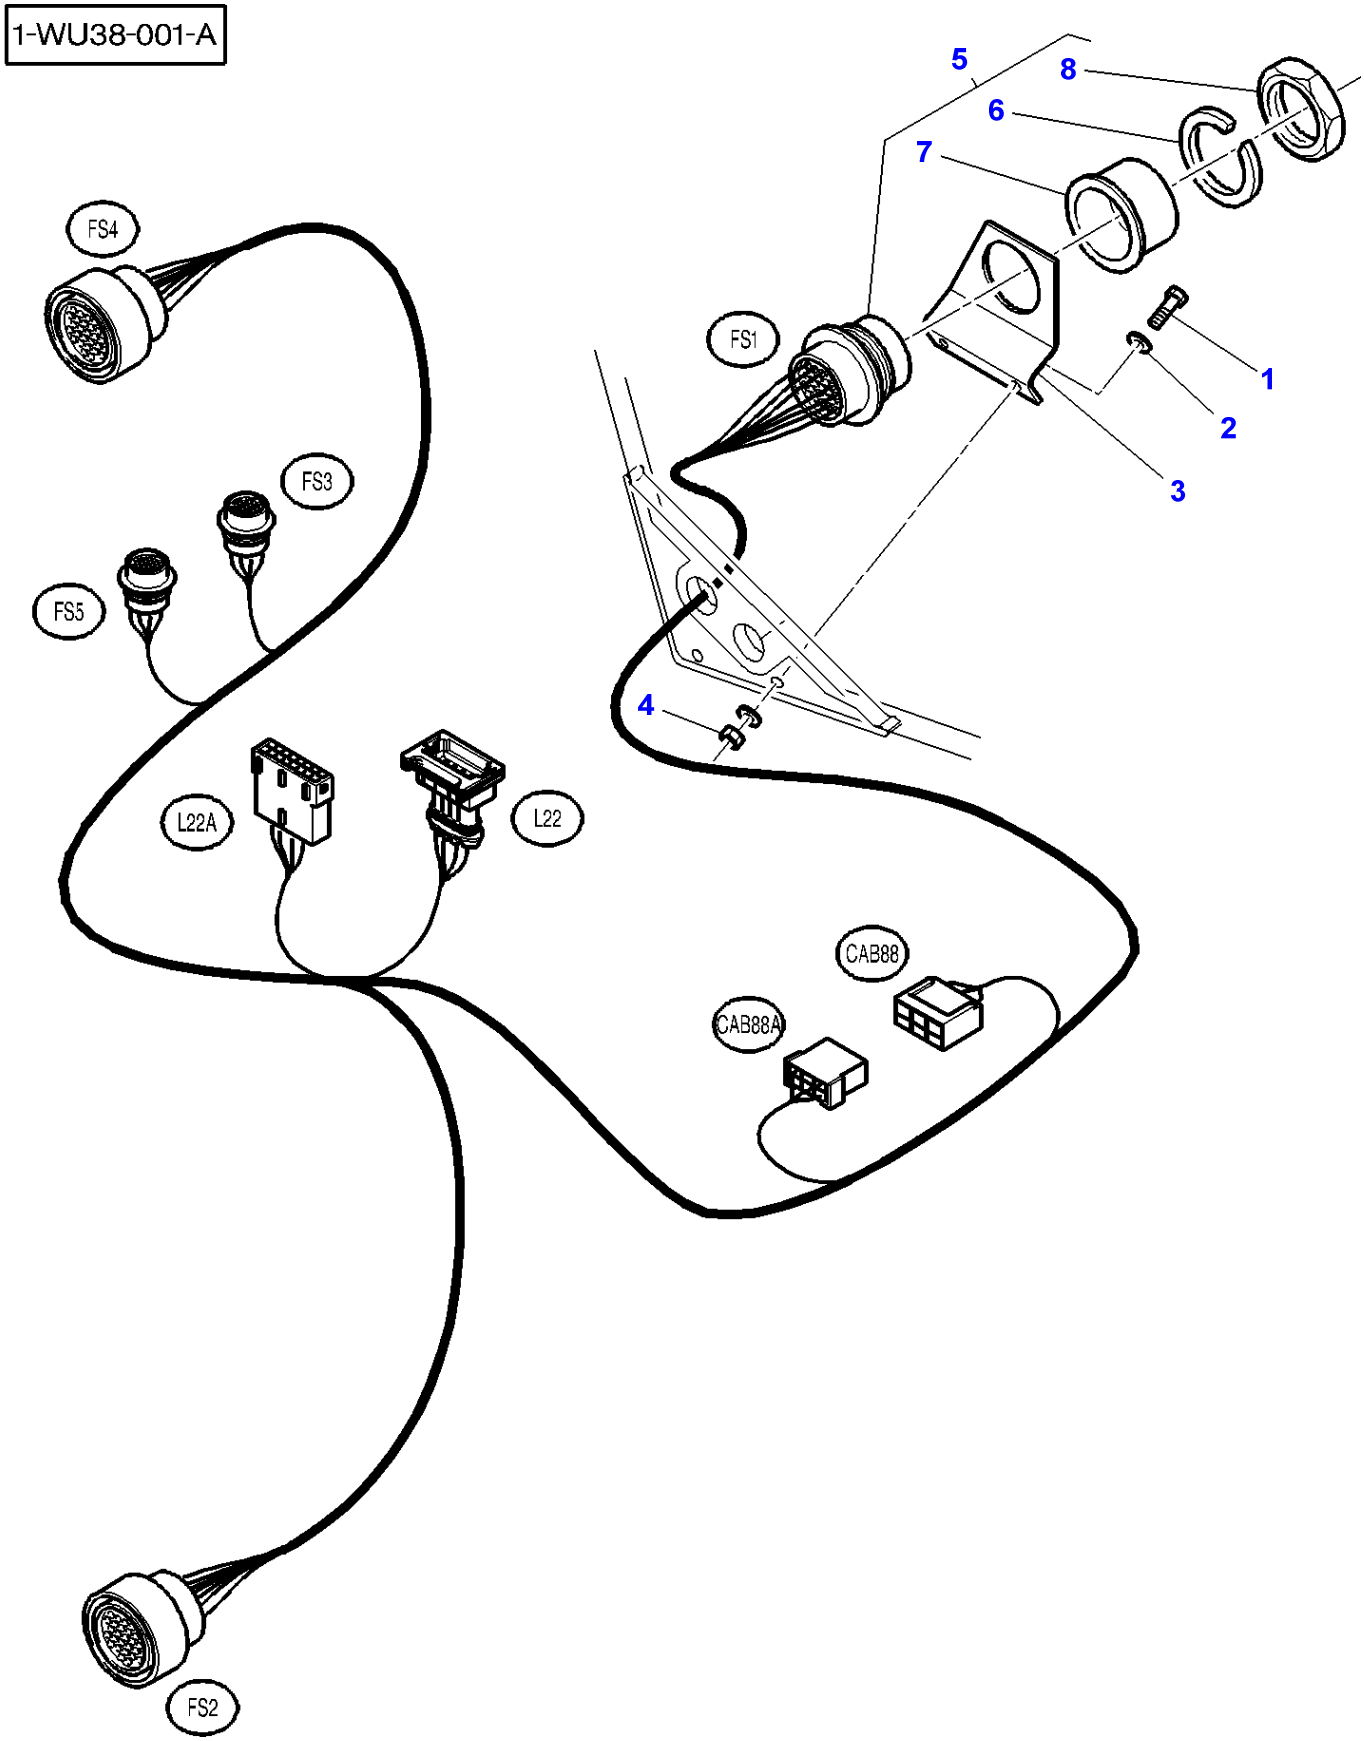
1-WU38-001-A
5
8
6
7
FS4
FS1
1
2
3
FS3
FS5
4
L22A
L22
CAB88
CAB88A
FS2

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 339666X1 | 2 | Hex. Sock. Screw | M6 X 20 |
| 2 | 390971X1 | 4 | Washer | Diameter 6-12 X 1,5 |
| 3 | 4276068M1 | 1 | Support | |
| 4 | 339030X1 | 2 | Nut Metric | M6 |
| 5 | 4275724M2 | 1 | Harness | |
| 6 | 3907278M1 | 1 | Washer | (5) |
| 7 | 3907276M1 | 1 | Plug | (5) |
| 8 | 3907277M1 | 1 | Nut | (5) |

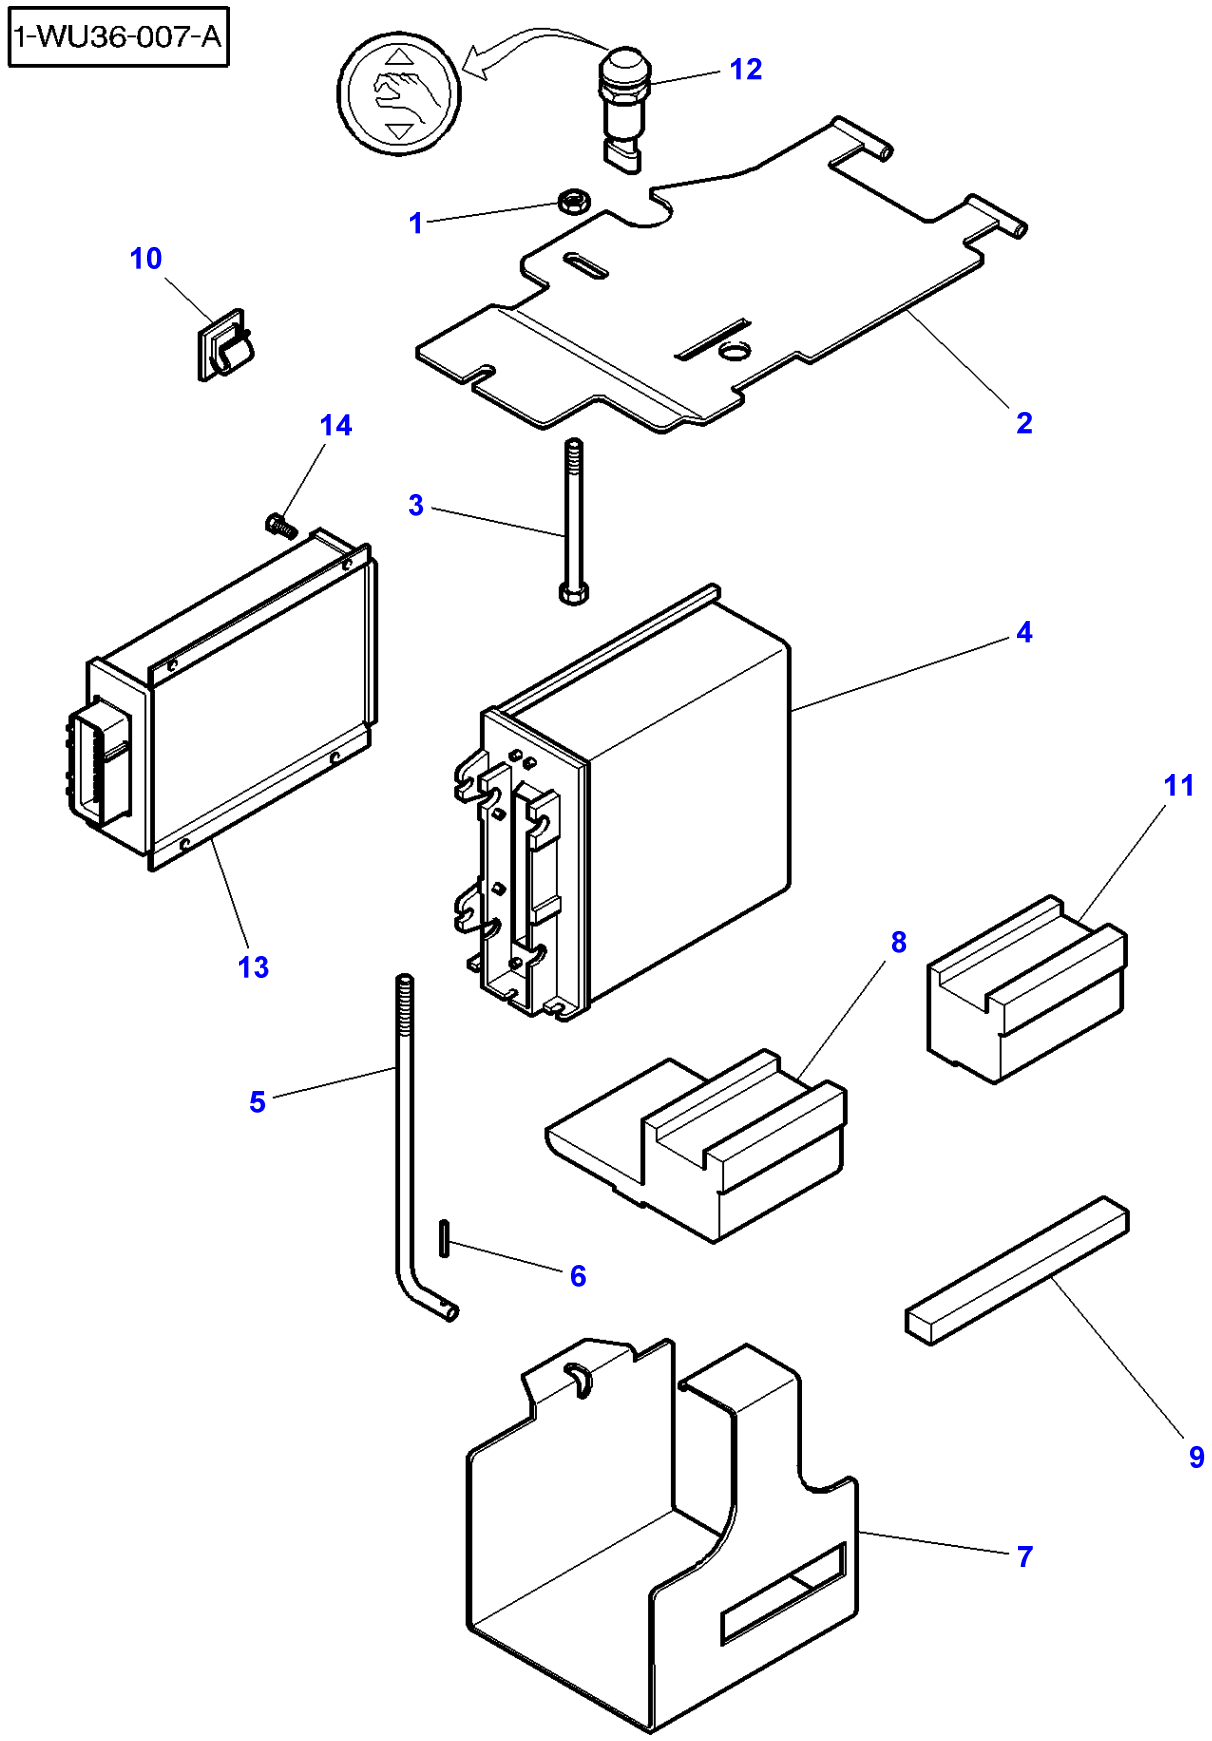

1-WU36-007-A
12
1
10
2
14
3
4
11
13
8
5
6
9
7

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 394367X1 | 1 | Locknut | M8 |
| 2 | 4270515M1 | 1 | Plate | |
| 3 | 339136X1 | 1 | Hex. Sock. Screw | M8 X 90 |
| 4 | G701.970.070.015 | 1 | Electronic Box | Replace and repair. Old not interchangeable with new G701970070013 |
| 5 | 4270516M1 | 1 | Stem | M8 |
| 6 | 70934582 | 1 | Pin | Diameter 3 X 26 |
| 7 | 4270517M1 | 1 | Support | |
| 8 | 4271648M1 | 1 | Chock | |
| 9 | 3778749M1 | 2 | Foam | 25 X 15 X 80 |
| | 3580639M1 | 1 | Gasket | 13 X 6 X 200 |
| 10 | 3582094M1 | 4 | Tie | |
| 11 | 4271640M1 | 1 | Chock | |
| 12 | **G716.970.160.030** | 1 | Pressure Switch | |
| 13 | 3796241M94 | 1 | Switch Box | |
| 14 | 3010804X1 | 4 | Screw | M4 X 16 |
| | 3010506X1 | 4 | Screw | M5 X 16 |


1-WW09-003-B

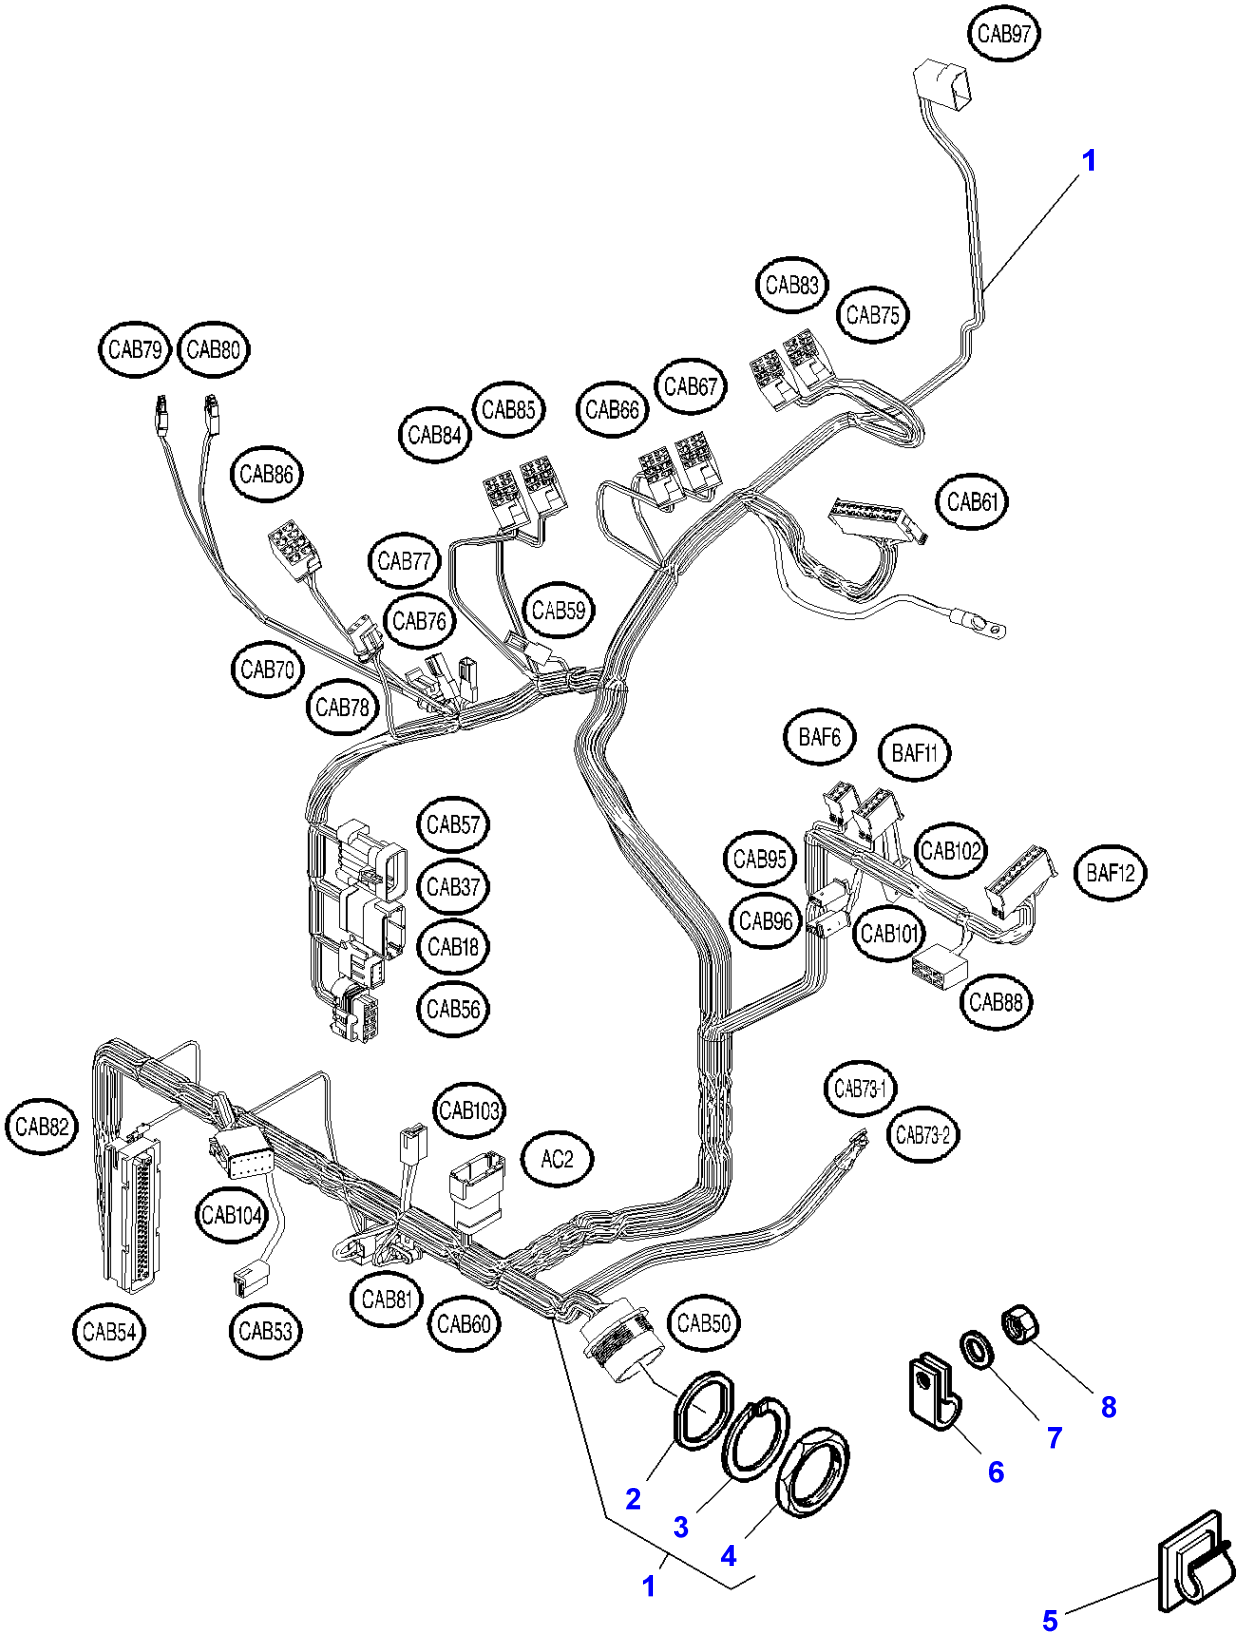
CAB97
1
CAB83
CAB75
CAB79
CAB80
CAB84
CAB85
CAB66
CAB67
CAB86
CAB61
CAB77
CAB76
CAB59
CAB70
CAB78
BAF6
BAF11
CAB57
CAB37
CAB18
CAB56
CAB95
CAB102
BAF12
CAB96
CAB101
CAB88
CAB73-1
CAB73-2
CAB82
CAB103
AC2
CAB104
CAB54
CAB53
CAB81
CAB60
CAB50
2
3
4
1
6
7
8
5

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4276763M92 | 1 | Harness | |
| 2 | 3013355X1 | 1 | Seal | (1) |
| 3 | 3013354X1 | 1 | Washer | (1) |
| 4 | 3013353X1 | 1 | Nut | (1) |
| 5 | 3582094M1 | 2 | Tie | |
| 6 | 3389841M1 | 1 | Clip | Diameter 12 - M6 |
| 7 | 390971X1 | 1 | Washer | Diameter 6-12 X 1,5 |
| 8 | 339030X1 | 1 | Nut Metric | M6 |

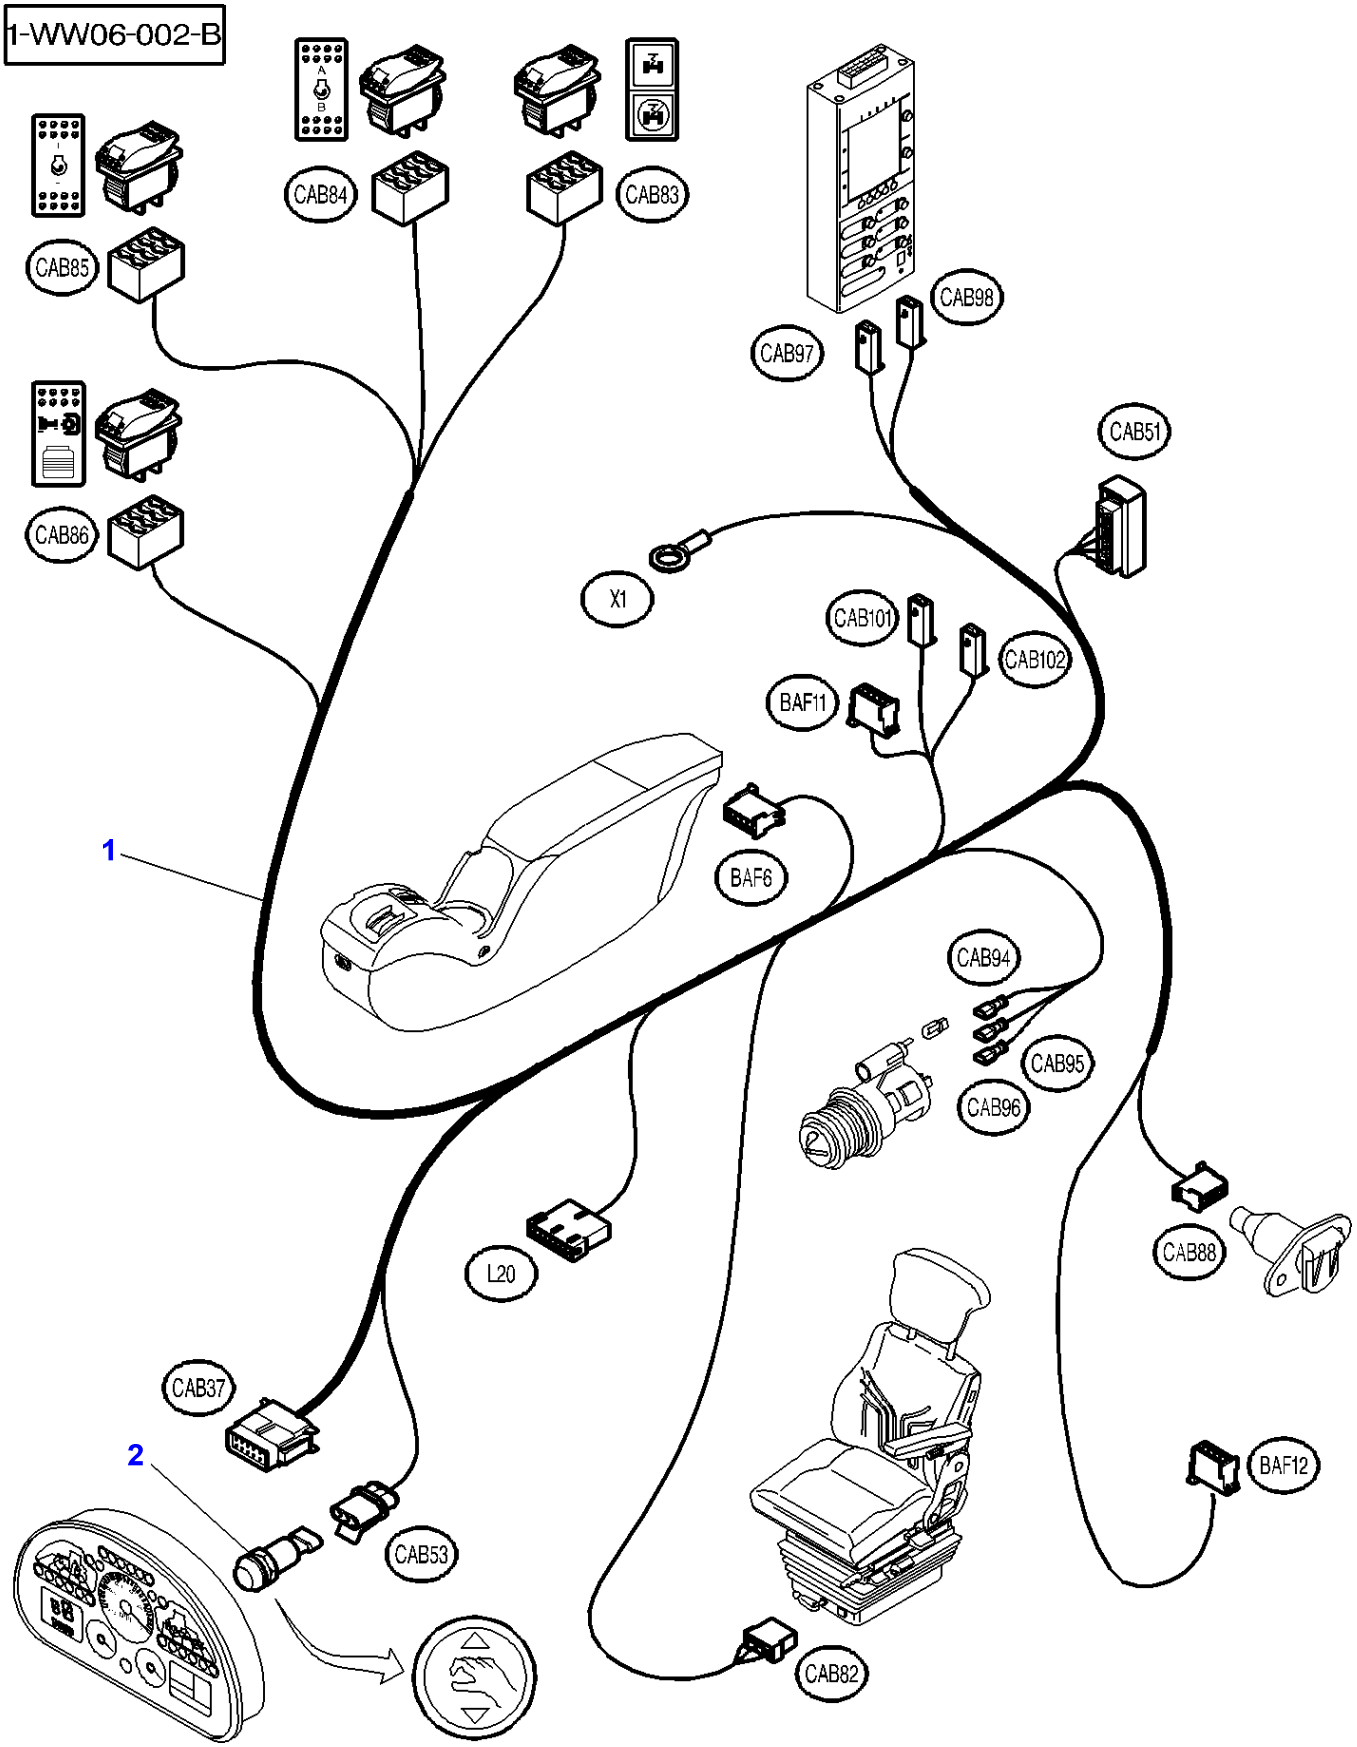

1-WW06-002-B
CAB84
CAB83
CAB85
CAB86
CAB98
CAB97
CAB51
X1
CAB101
CAB102
BAF11
1
BAF6
CAB94
CAB95
CAB96
L20
CAB88
CAB37
2
CAB53
BAF12
CAB82

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 4271327M92 | 1 | Harness |
| 2 | G716.970.160.030 | 1 | Pressure Switch |

1-WW08-013-A

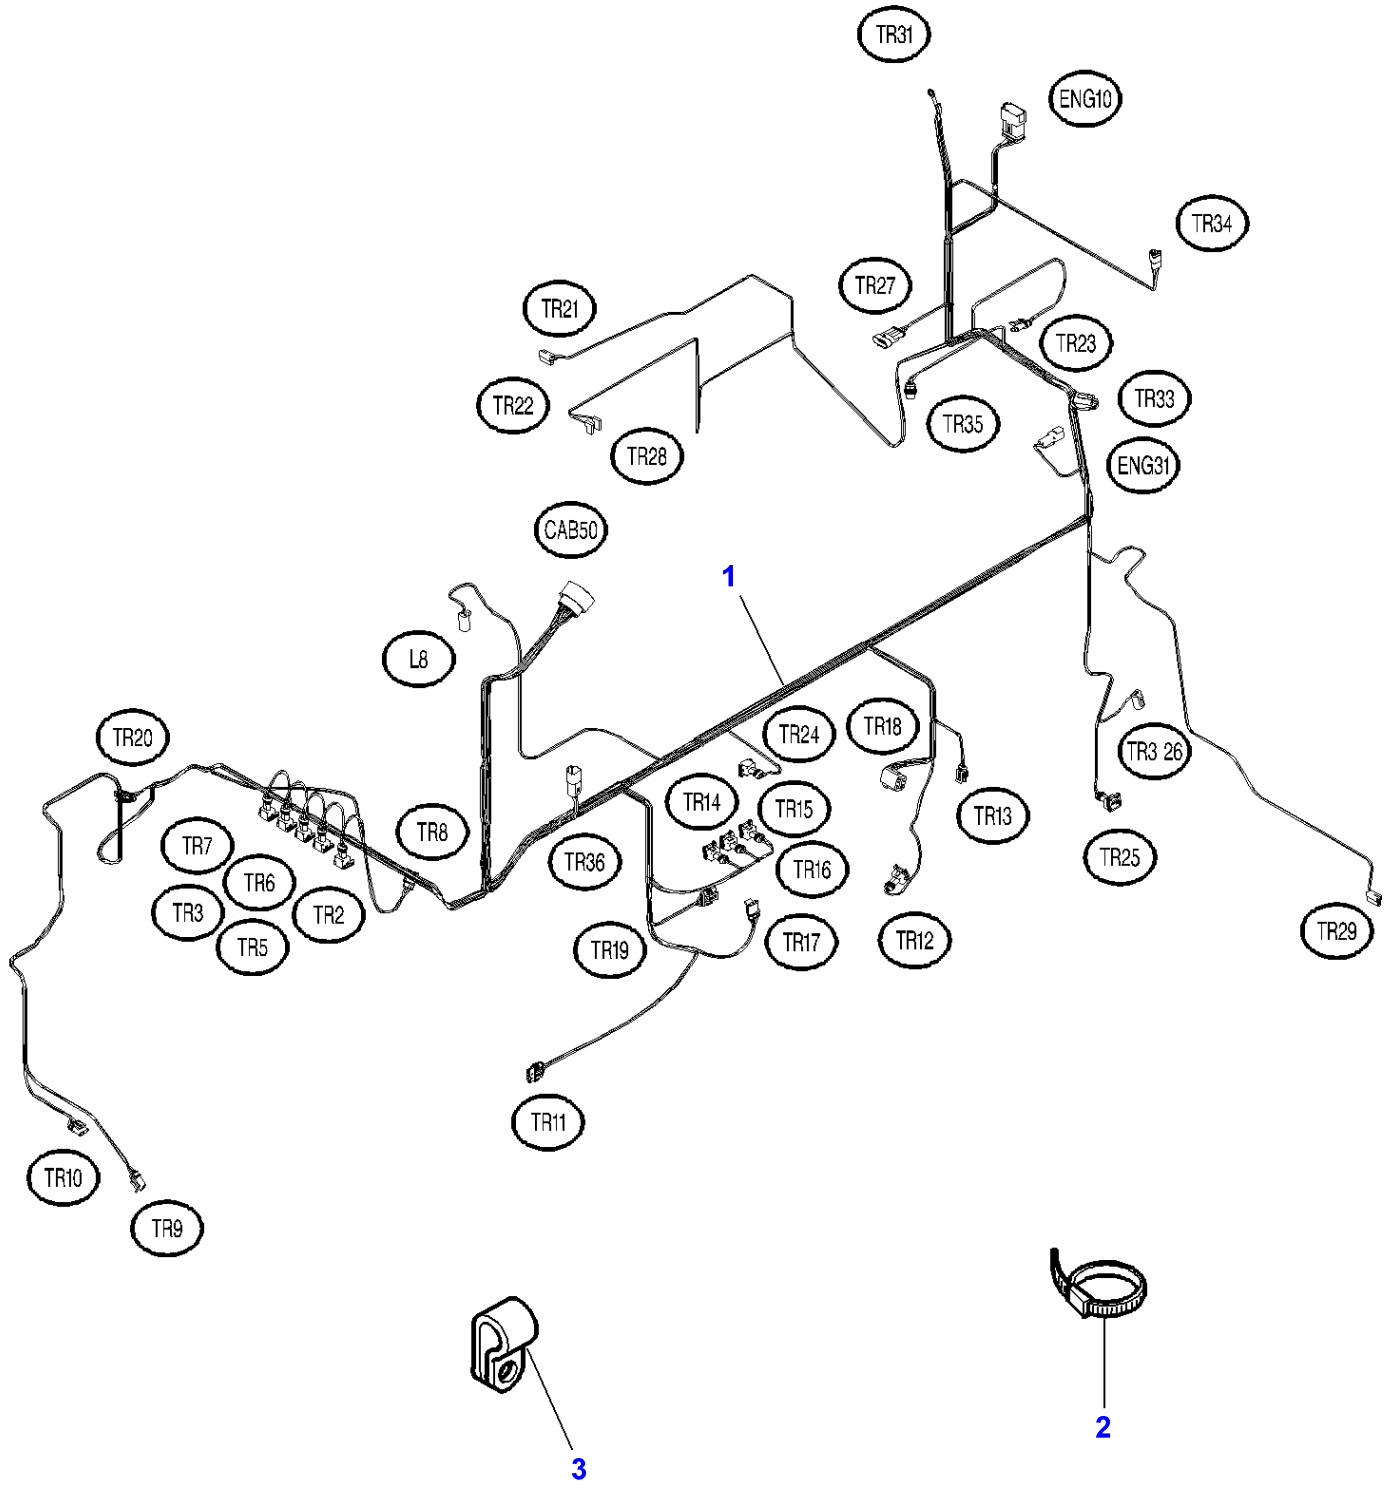

TR31
ENG10
TR34
TR27
TR21
TR23
TR22
TR33
TR35
TR28
ENG31
CAB50
1
L8
TR20
TR24
TR18
TR3 26
TR14
TR15
TR13
TR8
TR7
TR36
TR16
TR25
TR6
TR3
TR2
TR29
TR5
TR19
TR17
TR12
TR11
TR10
TR9
2
3


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277436M93 | 1 | Harness | |
| 2 | 3619622M1 | X | Cable Tie | |
| 3 | 4278721M1 | 2 | Clamp | Diameter 22 - M12 |

1-WU37-006-A

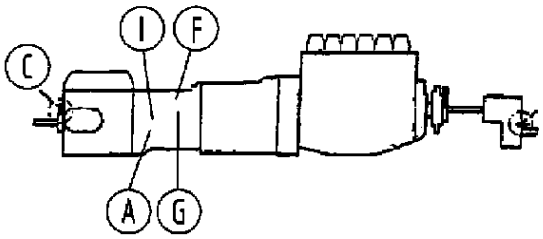

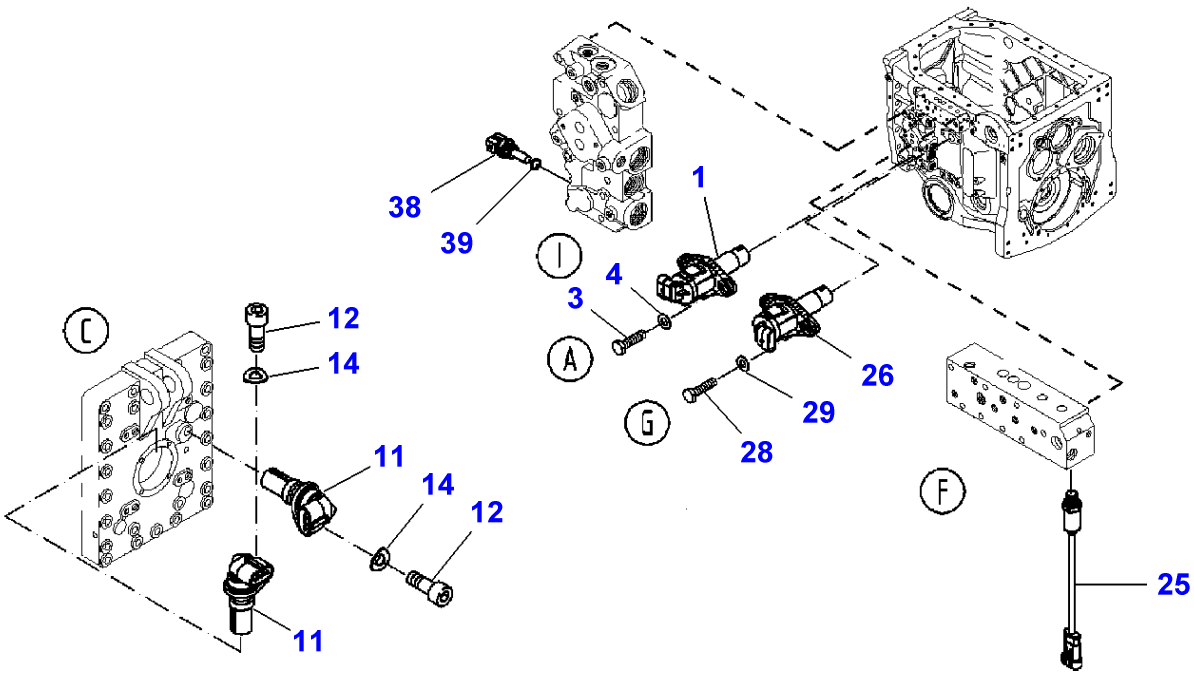
https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G916.970.020.014 | 1 | Sensor | [A] |
| 3 | X487.527.741.000 | 2 | Hex. Sock. Screw | M8 X 20 |
| 4 | X450.006.308.000 | 2 | Washer | |
| 11 | G816.970.020.040 | 2 | Hall Sensor | [B] |
| 12 | X485.009.405.000 | 2 | Hex. Sock. Screw | M8 X 16 |
| 14 | X521.403.947.000 | 2 | Spring Plate | |
| 25 | G718.970.020.020 | 1 | Press.Transducer | [C] |
| 26 | G916.970.020.014 | 1 | Sensor | [D] |
| 28 | X487.527.741.000 | 2 | Hex. Sock. Screw | M8 X 20 |
| 29 | X450.006.308.000 | 2 | Washer | |
| 38 | H312.100.360.030 | 1 | Temp. Sensor | [E] |
| 39 | X540.004.078.000 | 1 | Ring | |

**FOOTNOTE [A]** TRANSMITTER DRIVING-SPEED "A"
**FOOTNOTE [B]** TRANSMITTER P.T.O RPM REAR "C" 40MM
**FOOTNOTE [C]** TRANSMISSION "F"
**FOOTNOTE [D]** GEARBOX SPEED SENSOR "G"
**FOOTNOTE [E]** OIL TEMPERATURE TRANMISSION "I"

1-WR02-011-A

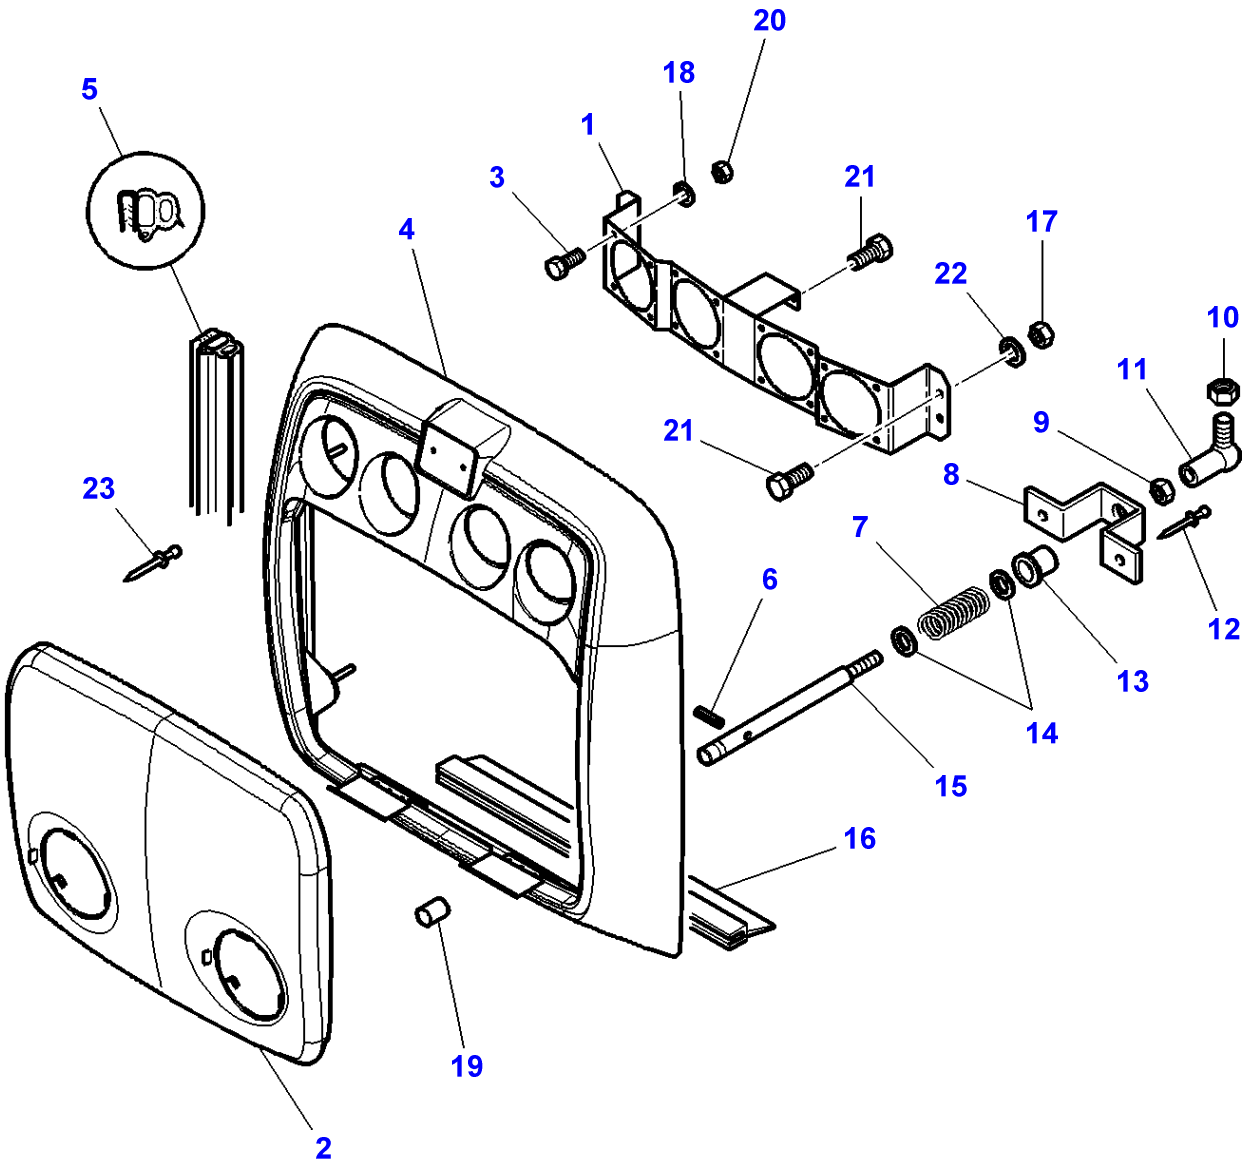


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272147M3 | 1 | Support | |
| 2 | 4271863P93 | 1 | Grille | |
| 3 | 339666X1 | 16 | Hex. Sock. Screw | M6X20 |
| 4 | 4271869P94 | 1 | Screen | |
| 5 | 3783309M2 | 1 | Gasket | Length 2130MM |
| 6 | 1442962X1 | 1 | Split Pin | |
| 7 | 5017249M1 | 1 | Spring | |
| 8 | 4279952M1 | 1 | Strap | |
| 9 | 1440085X1 | 1 | Nut Metric | |
| 10 | 1441500X1 | 1 | Locknut | |
| 11 | 3782780M1 | 1 | Stub | |
| 12 | 338828X1 | 2 | Rivet | M8X16 |
| 13 | 72160887 | 1 | Bush | |
| 14 | 390734X1 | 2 | Washer | |
| 15 | 4278218M2 | 1 | Stem | |
| 16 | 4270704M1 | 1 | Gasket | Length 730MM |
| 17 | 390345X1 | 4 | Nut Metric | M8 |
| 18 | 390971X1 | 16 | Washer | |
| 19 | 5016517M1 | 1 | Button | |
| 20 | 339030X1 | 16 | Nut Metric | |
| 21 | 339124X1 | 6 | Hex. Sock. Screw | M8X16 |
| 22 | 390972X1 | 4 | Washer | |
| 23 | 376820X1 | 16 | Rivet | Diameter 4,8X12,5 |


1-WR03-016-A

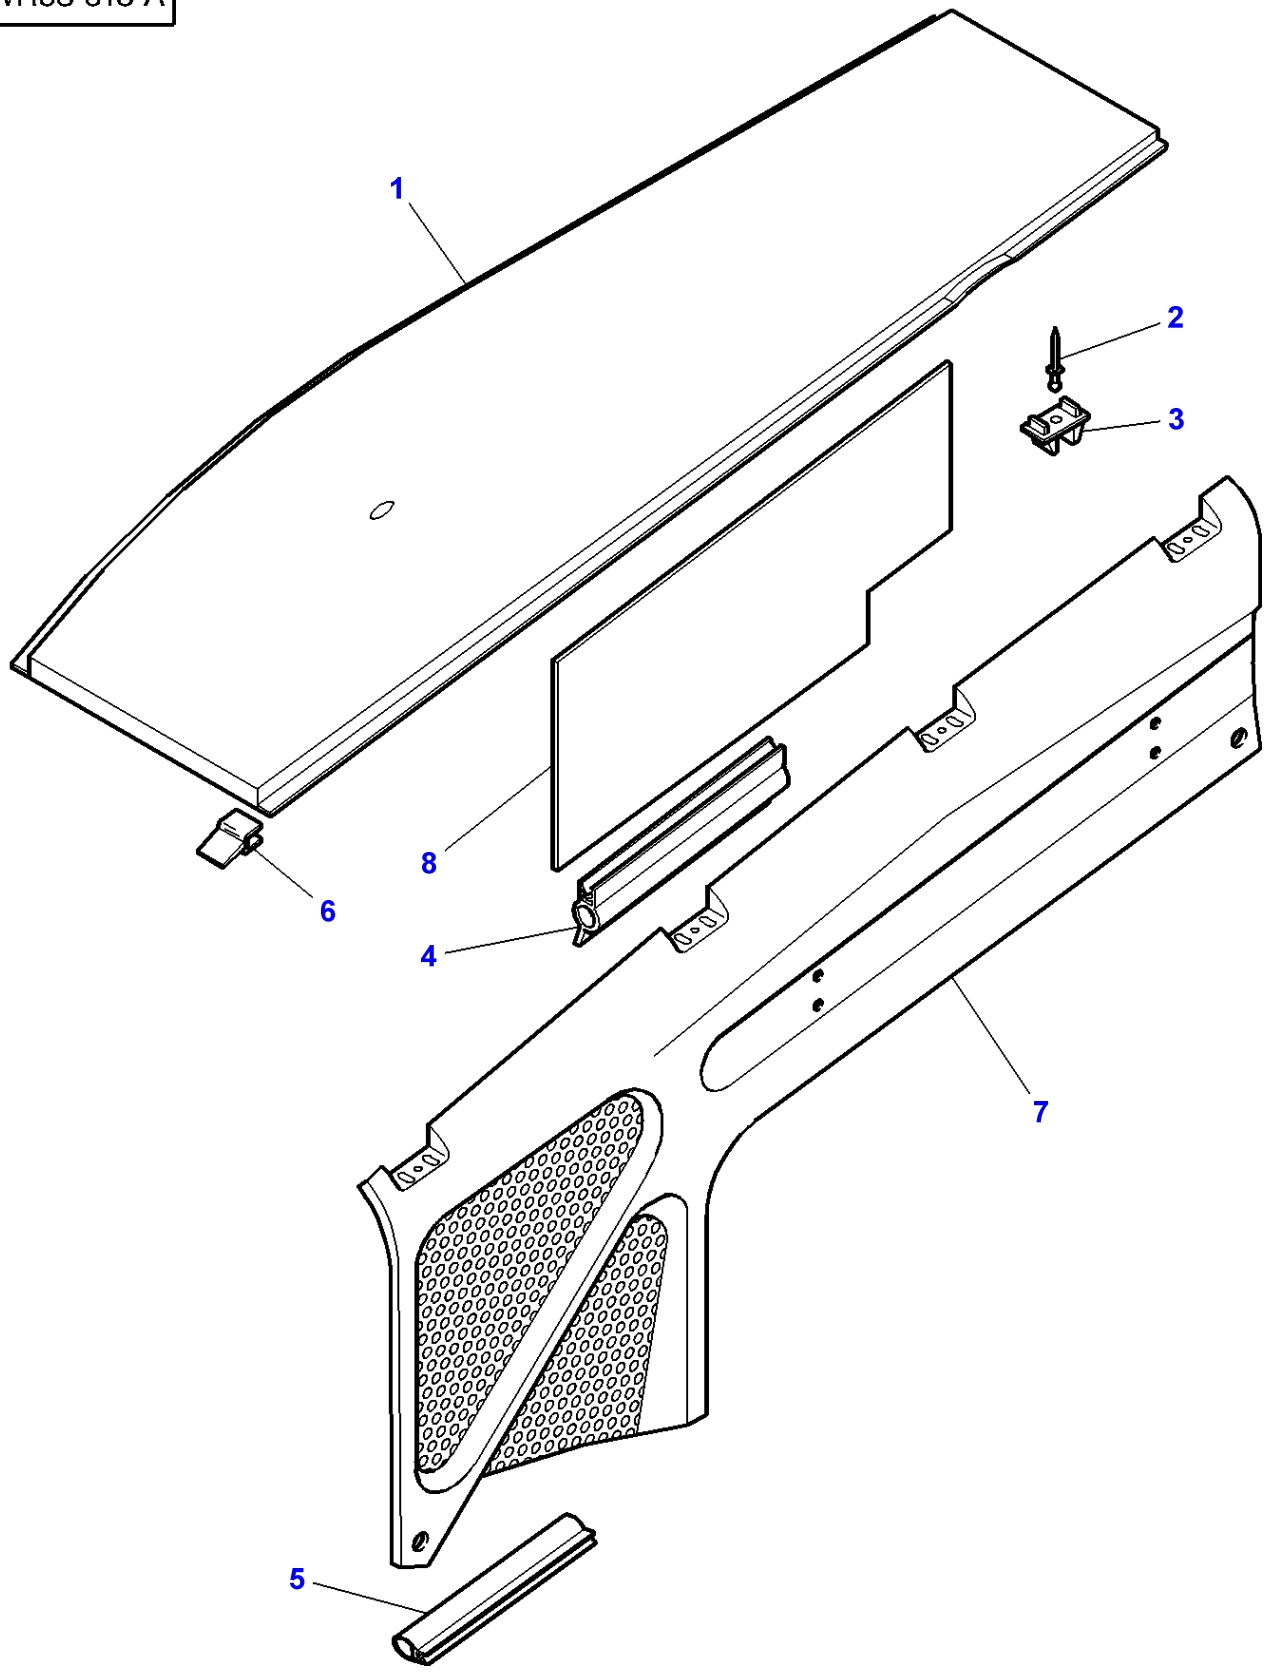

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3781322P3 | 1 | Bonnet. | |
| 2 | 3010934X1 | 8 | Rivet | |
| 3 | 3800376M1 | 8 | Buffer | |
| 4 | 3784954M1 | 2 | Seal | Length 540MM |
| 5 | 4270704M1 | 1 | Gasket | Length 730MM |
| 6 | 3783543M1 | 2 | Gasket | Length 50MM |
| 7 | 4275003P94 | 1 | Panel | Left Hand |
| | 4275002P94 | 1 | Panel | Right Hand |
| 8 | 3783113M1 | 1 | Protector | |

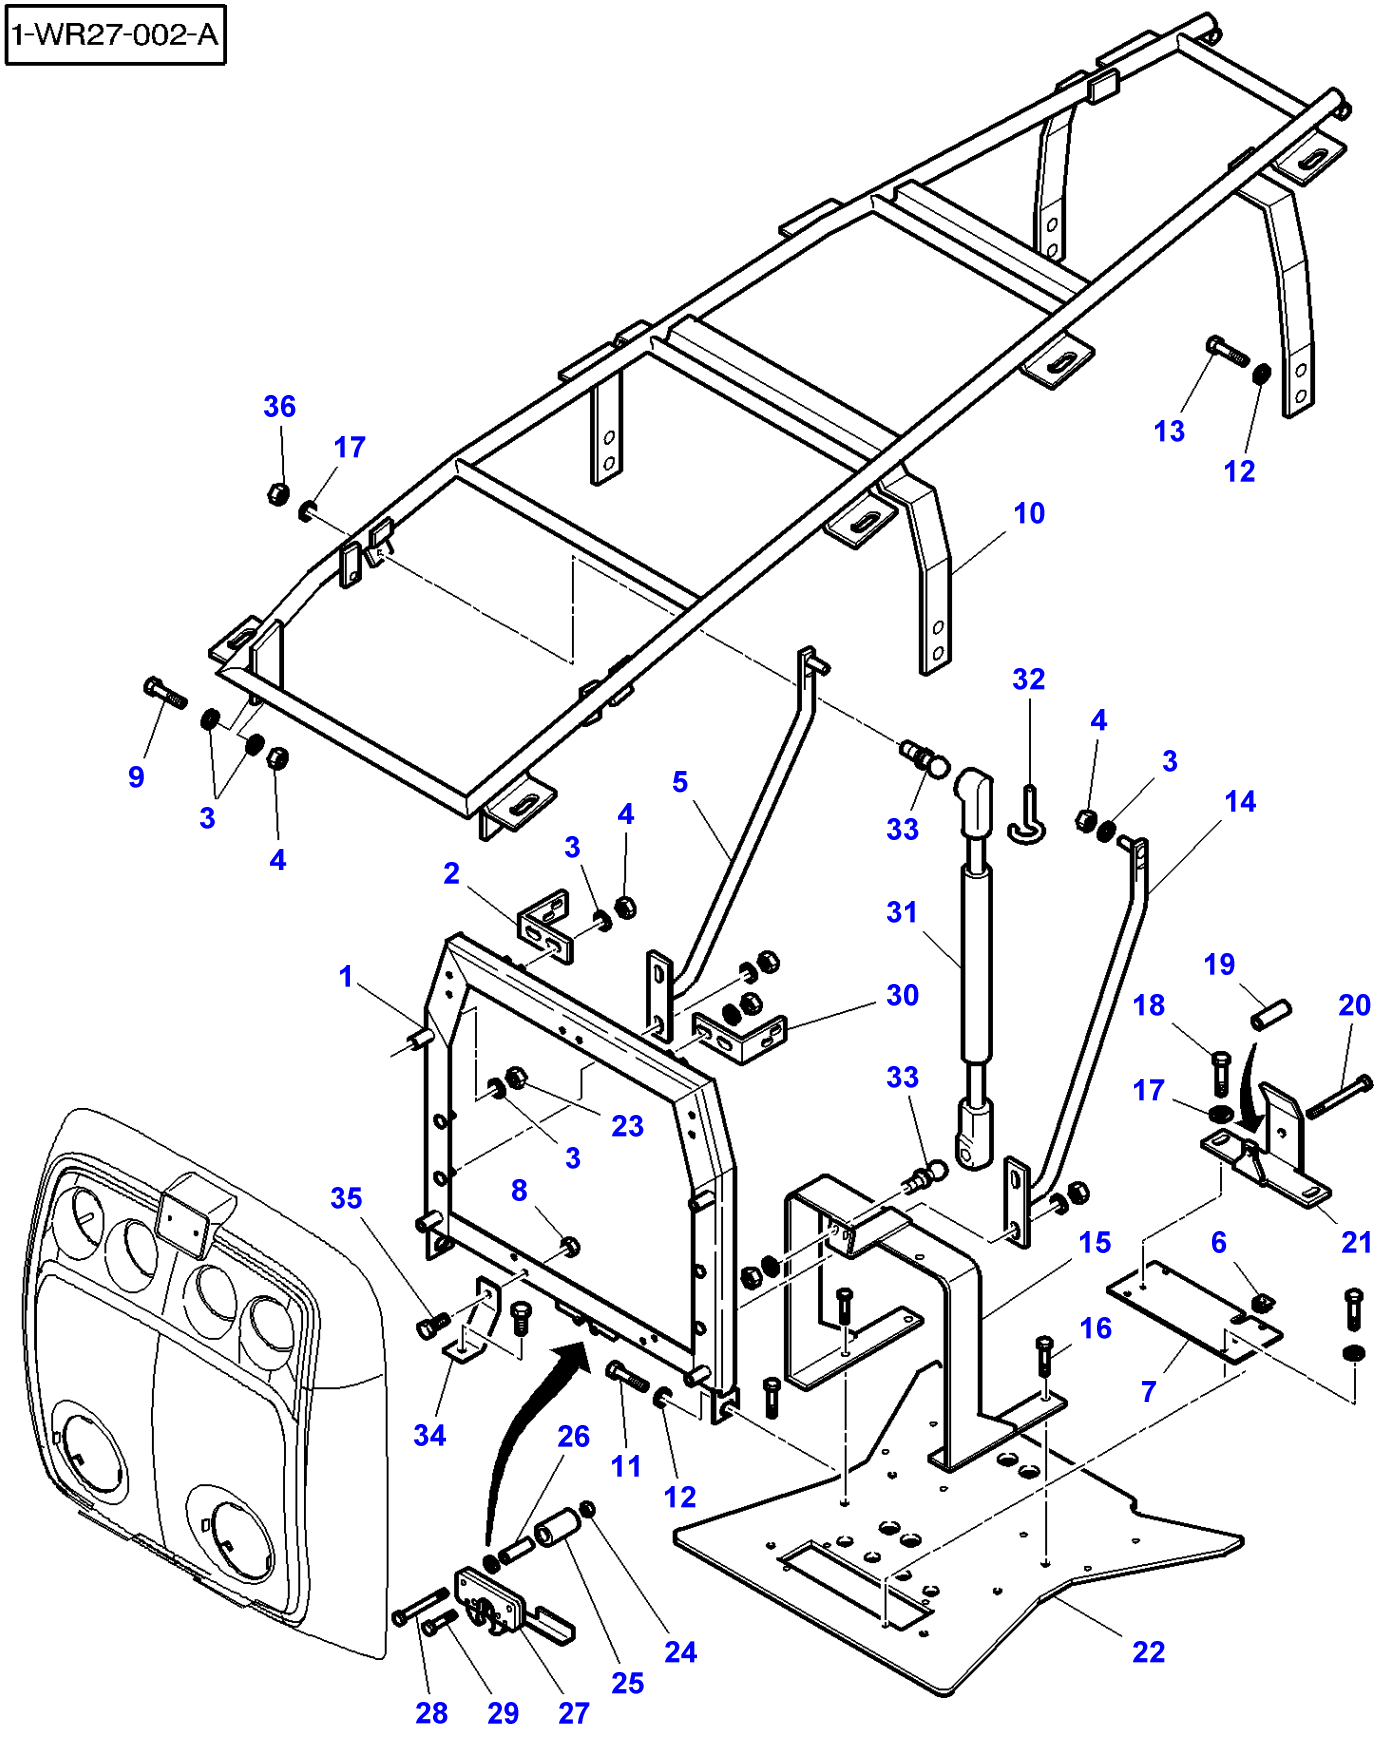

1-WR27-002-A
36
17
13
12
10
9
3
4
32
4
3
14
33
5
4
3
2
31
1
30
19
18
20
17
33
23
3
35
8
15
6
21
16
7
34
26
11
12
24
25
28
29
27
22

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271950M93 | 1 | Chassis | |
| 2 | 4272003M1 | 1 | Angle. | Right Hand |
| 3 | 390734X1 | X | Washer | |
| 4 | 339402X1 | X | Nut | |
| 5 | 4271946M91 | 1 | Tube | Right Hand |
| 6 | 3387555M1 | 1 | Grommet | Diameter 17 |
| 7 | 4278095M1 | 1 | Trap | |
| 8 | 339169X1 | X | Nut | M8 |
| 9 | 3009492X1 | 4 | Hex. Sock. Screw | M10X25 |
| 10 | 4274907M92 | 1 | Chassis | |
| 11 | 1440433X1 | 2 | Hex. Sock. Screw | M10X16 |
| 12 | 390597X1 | 8 | Washer | |
| 13 | 3009492X1 | 8 | Hex. Sock. Screw | M10X25 |
| 14 | 4271947M91 | 1 | Tube | Left Hand |
| 15 | 4277620M92 | 1 | Support | |
| 16 | 3009493X1 | 6 | Hex. Sock. Screw | M10X30 |
| 17 | 390972X1 | X | Washer | |
| 18 | 339123X1 | 6 | Hex. Sock. Screw | M8X20 |
| 19 | 3782811M2 | 1 | Spacer | |
| 20 | 390246X1 | 1 | Hex. Sock. Screw | M8X70 |
| 21 | 4278183M1 | 1 | Support | |
| 22 | 4277622M4 | 1 | Shield | |
| 23 | 1441932X1 | 4 | Nut Metric | M10 |
| 24 | 1441500X1 | 4 | Locknut | |
| 25 | 3781233M1 | 2 | Roll | |
| 26 | 3781976M1 | 2 | Spacer | |
| 27 | 5016791M1 | 1 | Latch | |
| 28 | 1441714X1 | 2 | Hex. Sock. Screw | M6X70 |
| 29 | 339096X1 | 2 | Hex. Sock. Screw | M6X35 |
| 30 | 4272004M1 | 1 | Angle. | Left Hand |
| 31 | 3788102M1 | 2 | Ram | |
| 32 | 71307132 | 4 | Clip | |
| 33 | **3778880M1** | 4 | Toggle | |
| 34 | 4278326M1 | 2 | Reinforcement | |
| 35 | 339124X1 | 4 | Hex. Sock. Screw | M8X16 |
| 36 | 390345X1 | 4 | Nut Metric | M8 |

1-WR25-003-A

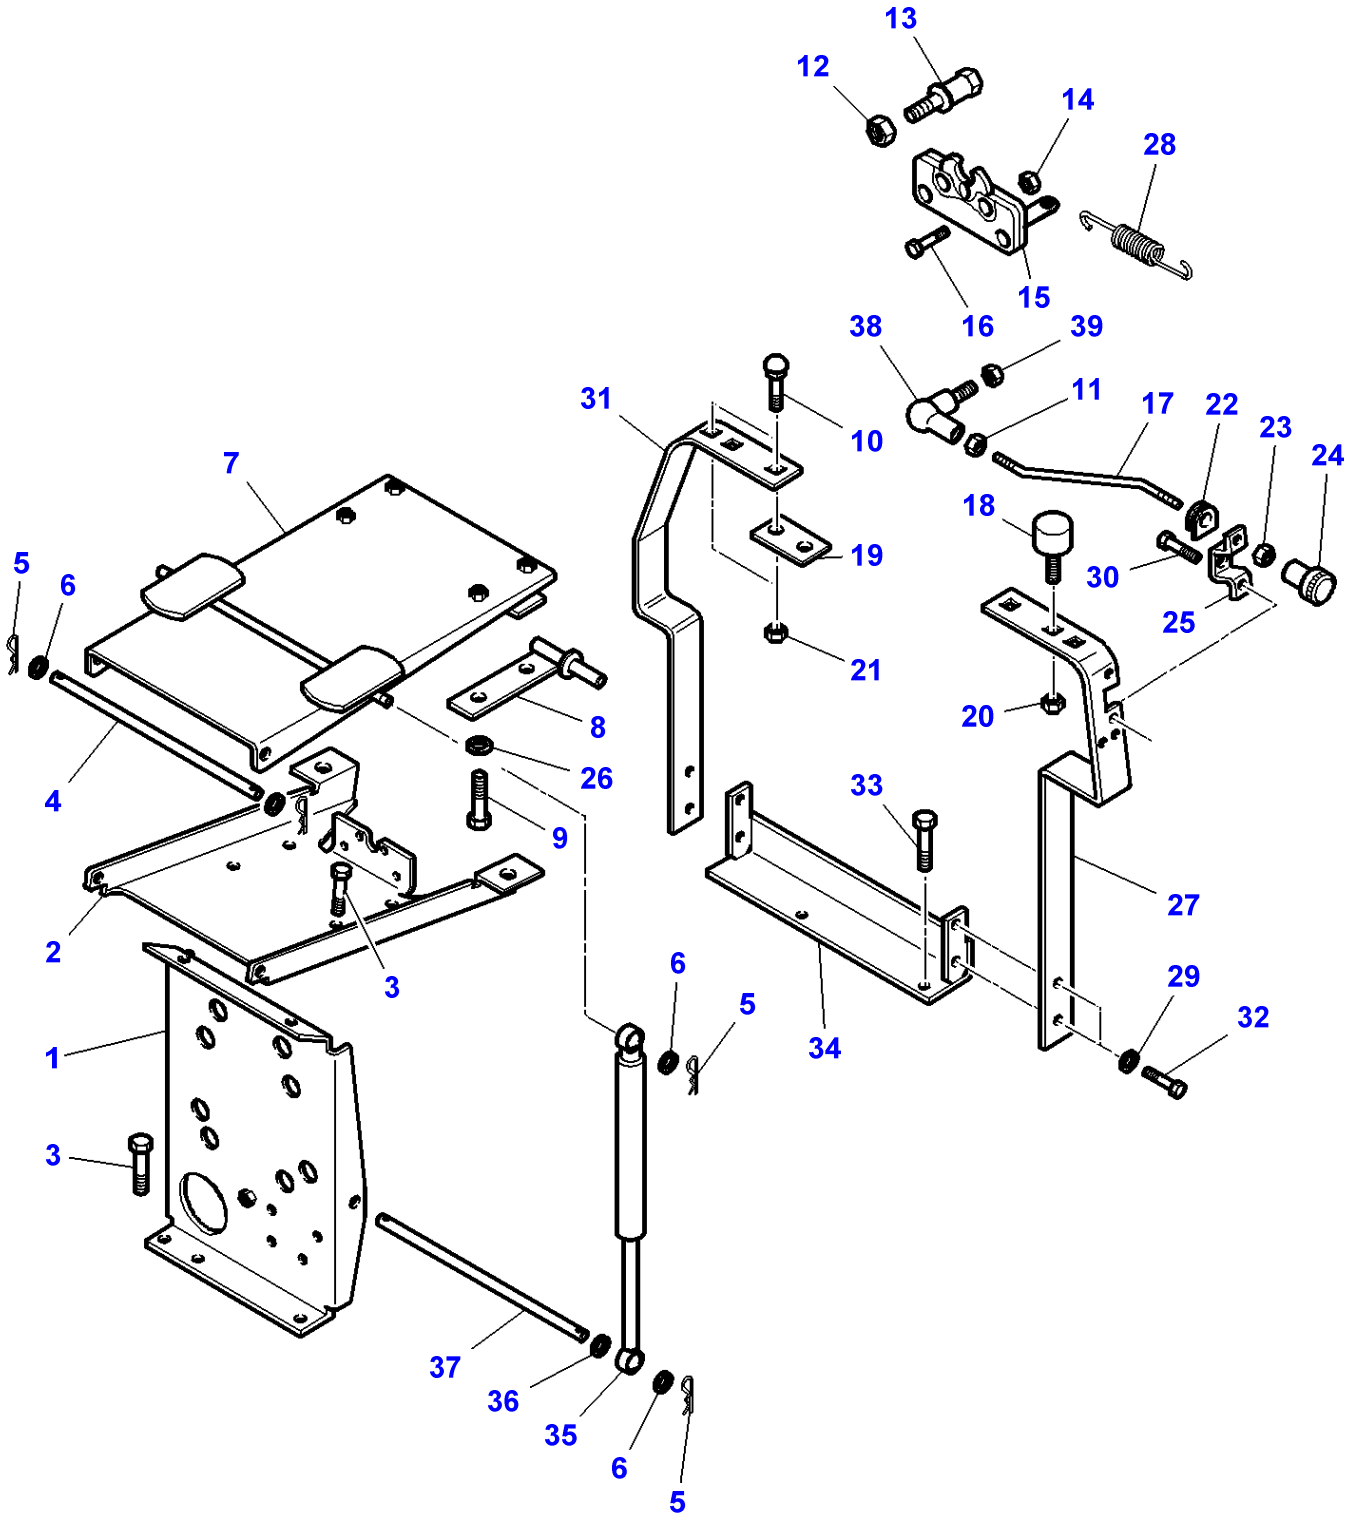

13
12
14
28
15
16
38
39
31
11
17
22
23
24
10
7
18
5
6
19
30
25
21
20
8
4
26
33
9
27
2
3
6
5
29
32
1
34
3
37
36
35
6
5

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4274917M2 | 1 | Plate | |
| 2 | 4274740M2 | 1 | Plate | |
| 3 | 3009493X1 | 4 | Hex. Sock. Screw | M10 X 30 |
| 4 | 5016813M1 | 1 | Clevis Pin | Length 279,4 MM |
| 5 | 1442962X1 | 6 | Split Pin | |
| 6 | 390734X1 | 6 | Washer | Diameter 10-21 X 2 |
| 7 | 4274741M94 | 1 | Plate | |
| 8 | 3782699M92 | 1 | Pivot | Right Hand |
| | 3782702M92 | 1 | Pivot | Left Hand |
| 9 | 3010923X1 | 4 | Hex. Sock. Screw | M12 X 20 |
| 10 | 390809X1 | 4 | Screw Special | M10 X 25 |
| 11 | 339030X1 | 1 | Nut Metric | M6 |
| 12 | 70935041 | 1 | Nut | |
| 13 | 72513270 | 1 | Latch | |
| 14 | 339030X1 | 4 | Nut Metric | M6 |
| 15 | 72161441 | 1 | Latch | |
| 16 | 339262X1 | 4 | Hex. Sock. Screw | M6 X 30 |
| 17 | 4274912M2 | 1 | Stem | |
| 18 | 4274918M1 | 2 | Stop | |
| 19 | 4274957M1 | 1 | Chock | |
| 20 | 339169X1 | 2 | Nut | M8 |
| 21 | 339402X1 | 4 | Nut | M10 |
| 22 | 3387555M1 | 1 | Grommet | |
| 23 | 339030X1 | 1 | Nut Metric | M6 |
| 24 | 3783419M1 | 1 | Button | |
| 25 | 4274911M2 | 1 | Support | |
| 26 | 390735X1 | 4 | Washer | Diameter 12-24 X 2,5 |
| 27 | 4274738M3 | 1 | Support | Left Hand |
| 28 | 3580581M1 | 1 | Spring | Length 128 MM |
| 29 | 390734X1 | 2 | Washer | |
| 30 | 339721X1 | 2 | Hex. Sock. Screw | M5 X 16 |
| 31 | 4274742M3 | 1 | Support | Right Hand |
| 32 | 3009493X1 | 4 | Hex. Sock. Screw | M10 X 30 |
| 33 | 391269X1 | 2 | Hex. Sock. Screw | M16 X 30 |
| 34 | 4275439M93 | 1 | Support | |
| 35 | 3783428M2 | 2 | Ram | |
| 36 | 5016817M1 | 2 | Spacer | |
| 37 | 5016451M1 | 1 | Bracket | Length 321,8 MM |
| 38 | 3782780M1 | 1 | Stub | |
| 39 | 1441500X1 | 1 | Locknut | |

1-WS02-012-B

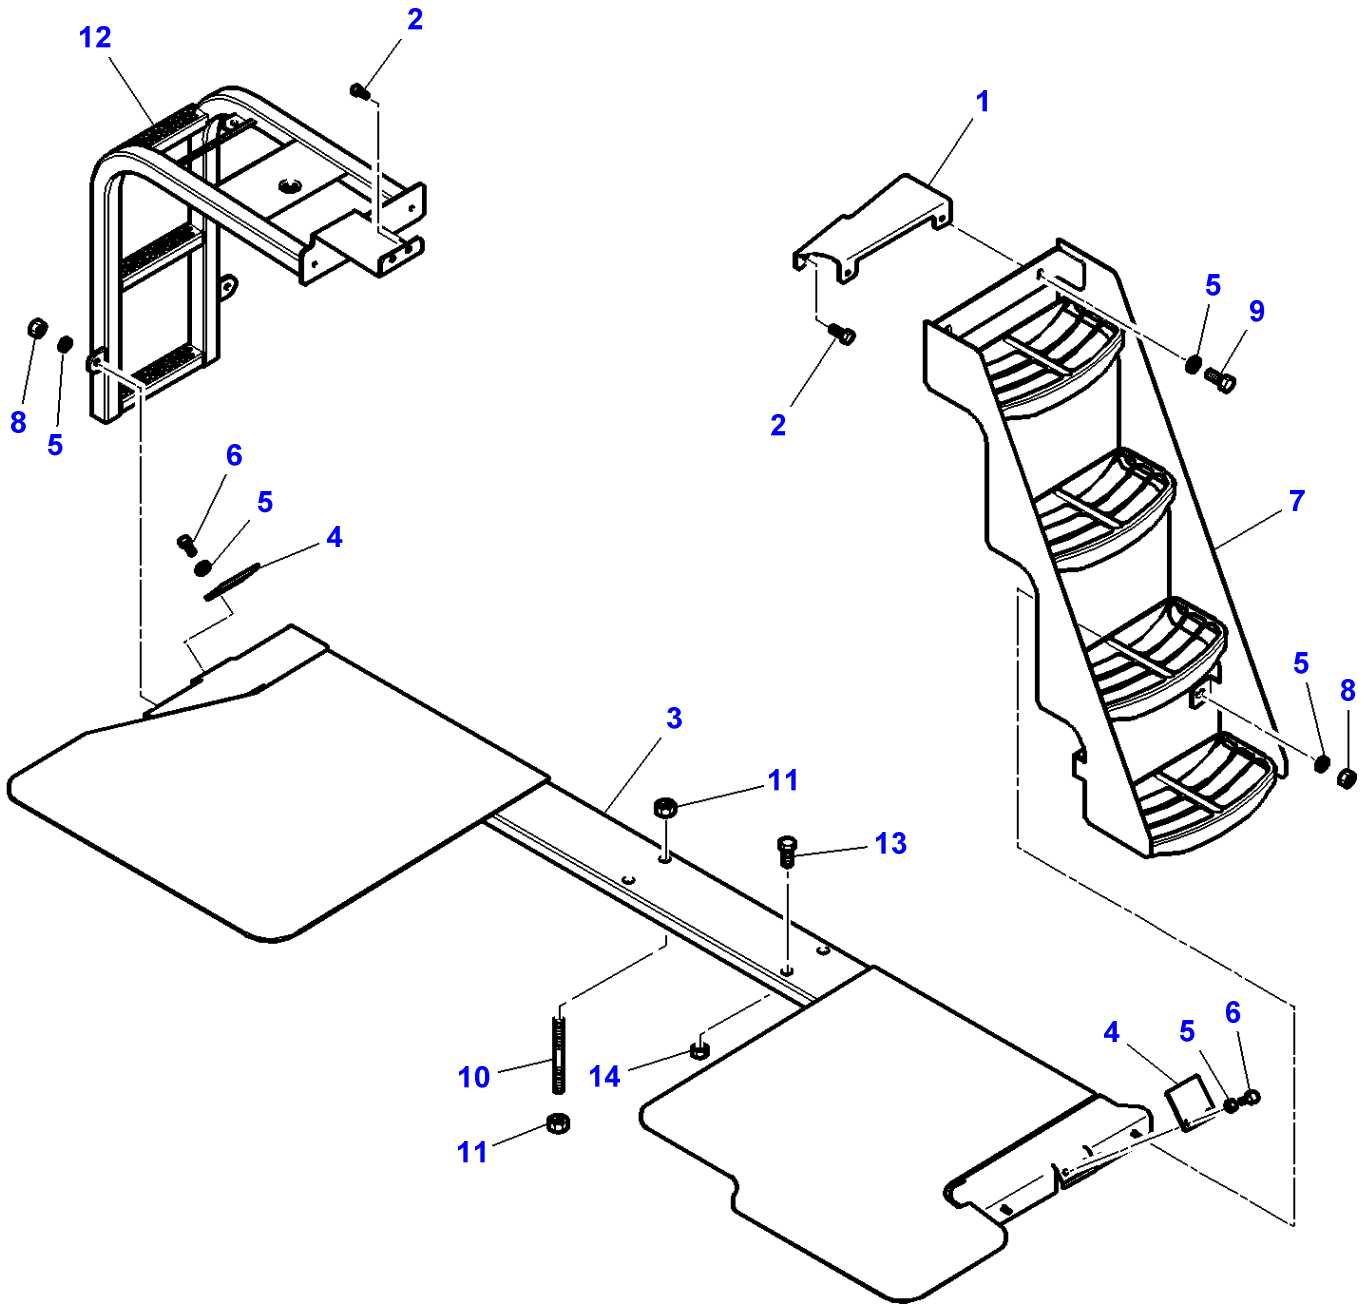


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4278049M1 | 1 | Support | Left Hand |
| 2 | 3009492X1 | 4 | Hex. Sock. Screw | M10 X 25 |
| 3 | 4275585M93 | 1 | Support | |
| 4 | 3786299M1 | 2 | Bridle | |
| 5 | 390972X1 | 10 | Washer | Diameter 8-17 X 1,7 |
| 6 | 339124X1 | 4 | Hex. Sock. Screw | M8 X 16 |
| 7 | 3787215M91 | 1 | Step | Left Hand |
| 8 | 339169X1 | 4 | Nut | M8 |
| 9 | 339761X1 | 2 | Hex. Sock. Screw | M8 X 25 |
| 10 | 3011610X1 | 2 | Stud | M16 X 70 |
| 11 | 339034X1 | 4 | Nut | M16 |
| 12 | 4275463M93 | 1 | Step | Right Hand |
| 13 | 391889X1 | 2 | Hex. Sock. Screw | M16 X 70 |
| 14 | 339034X1 | 2 | Nut | M16 |

1-WR05-028-A

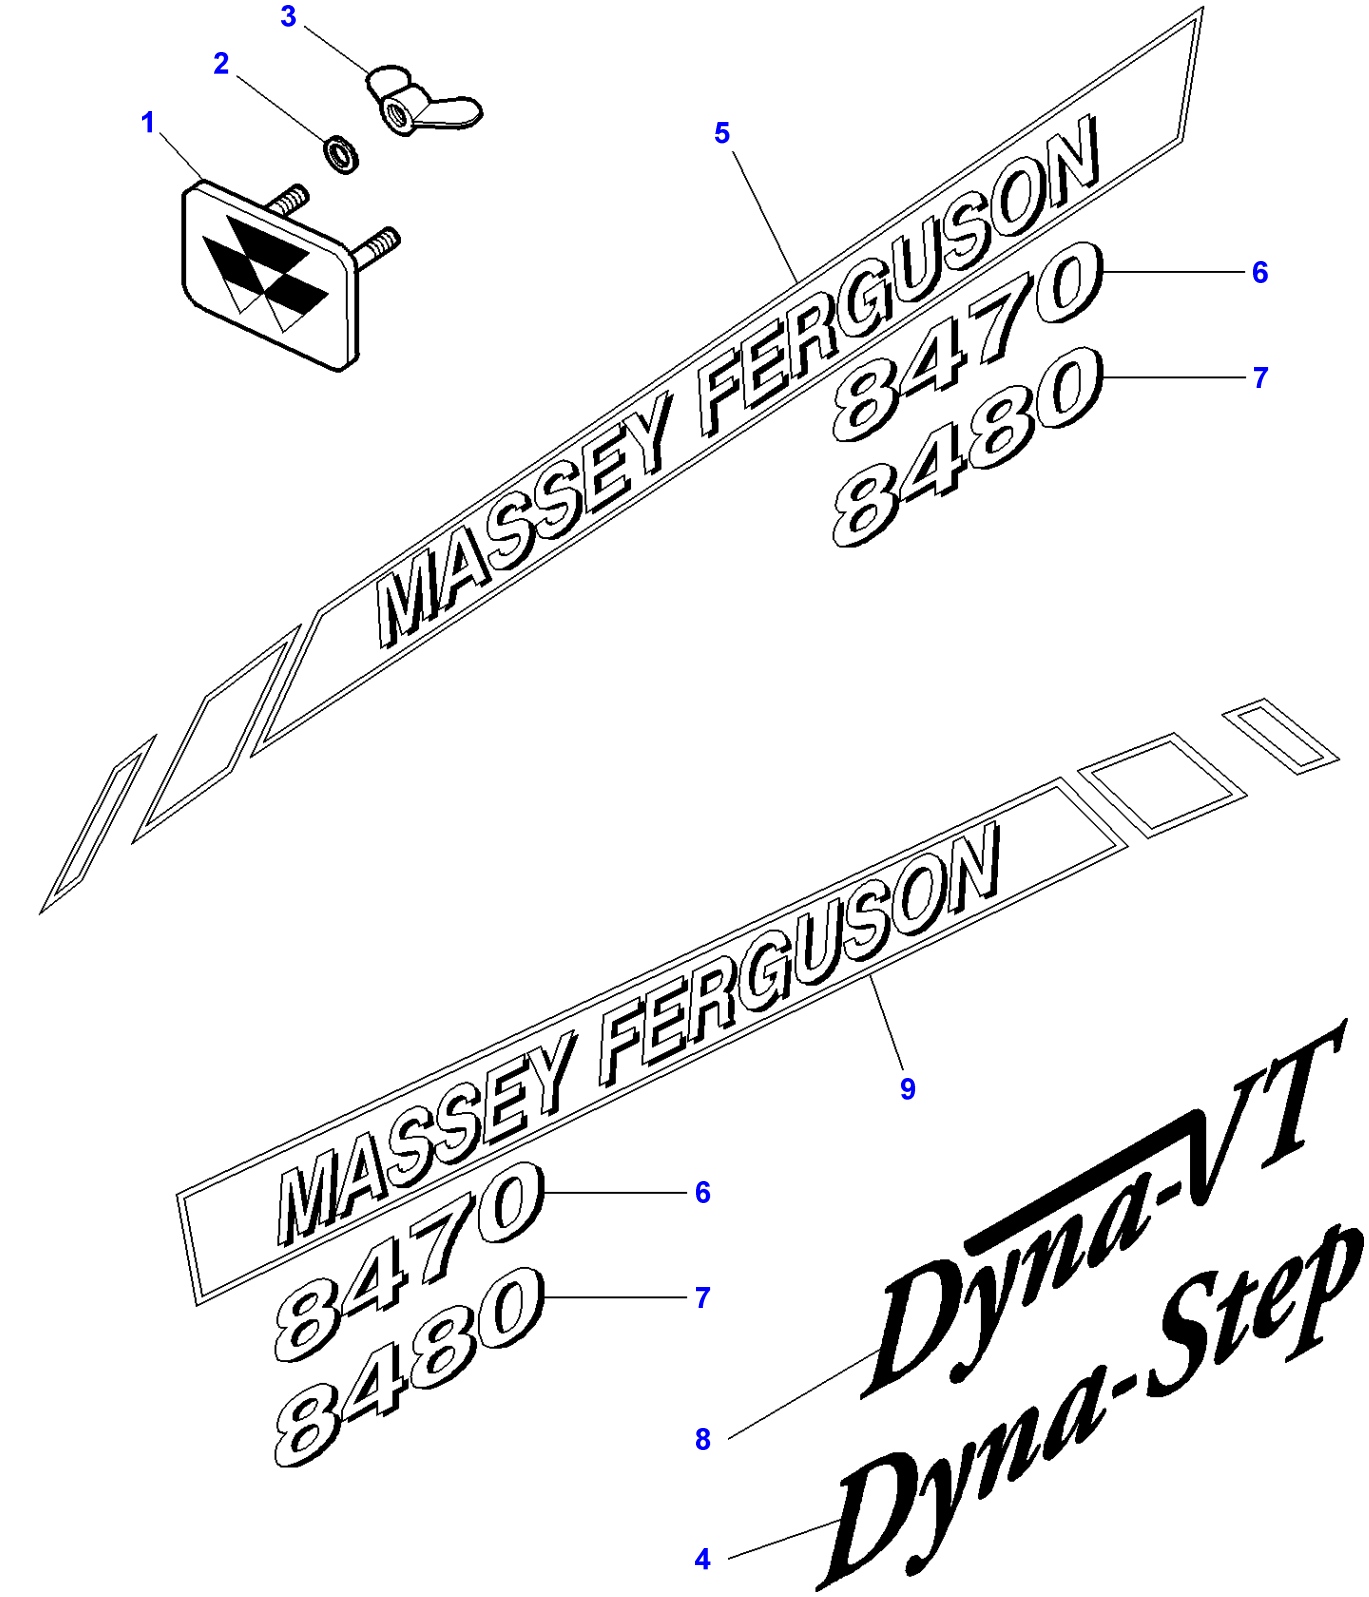
3
2
1
5
MASSEY FERGUSON
8470
8480
6
7
MASSEY FERGUSON
8470
8480
6
7
9
8
4
Dyna-VT
Dyna-Step


https://truckmanualshub.com/




| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271262M92 | 1 | Emblem | |
| 2 | 390971X1 | 2 | Washer | Diameter 6-12 X 1,5 MM |
| 3 | 1441500X1 | 2 | Locknut | M6 |
| 4 | 4275502M1 | 2 | Decal | For United States of America |
| 5 | 4270760M1 | 1 | Decal | Left Hand |
| 6 | 4270764M1 | 2 | Decal | MF 8470 |
| 7 | 4270765M1 | 2 | Decal | MF 8480 |
| 8 | 4274857M1 | 2 | Decal | |
| 9 | 4270761M1 | 1 | Decal | Right Hand |

1-WR12-016-A

1

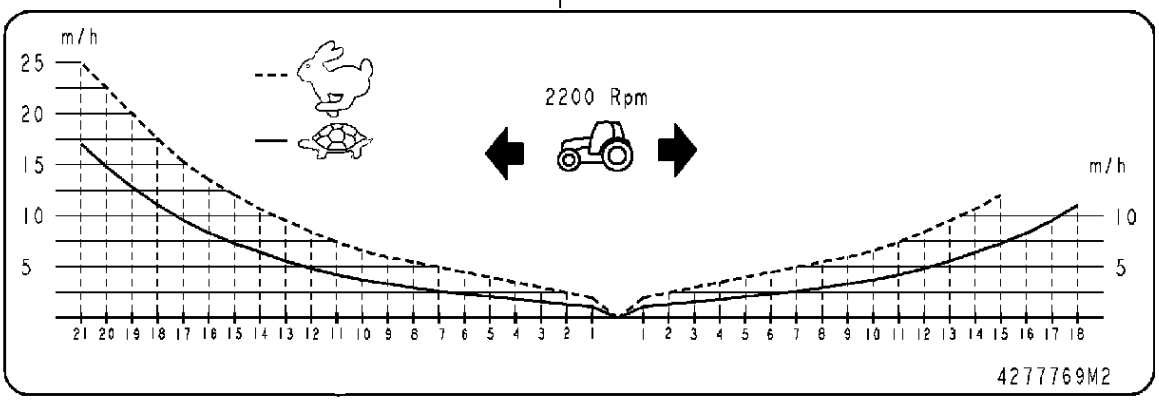

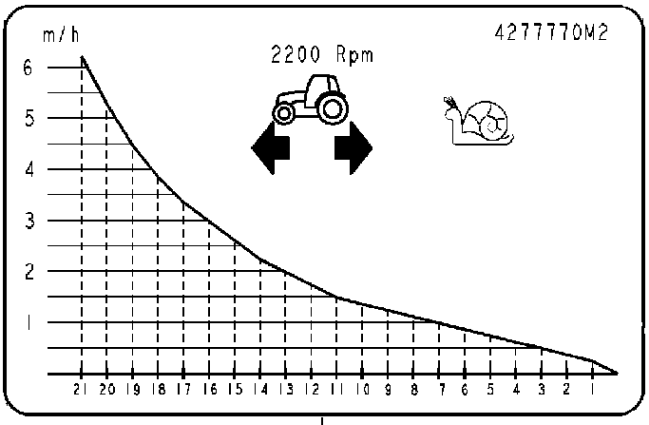
2


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4277769M2 | 1 | Decal | |
| 2 | 4277770M2 | 1 | Decal | [A] |

**FOOTNOTE [A]** WITH CREEPER GEAR

1-WR13-031-A

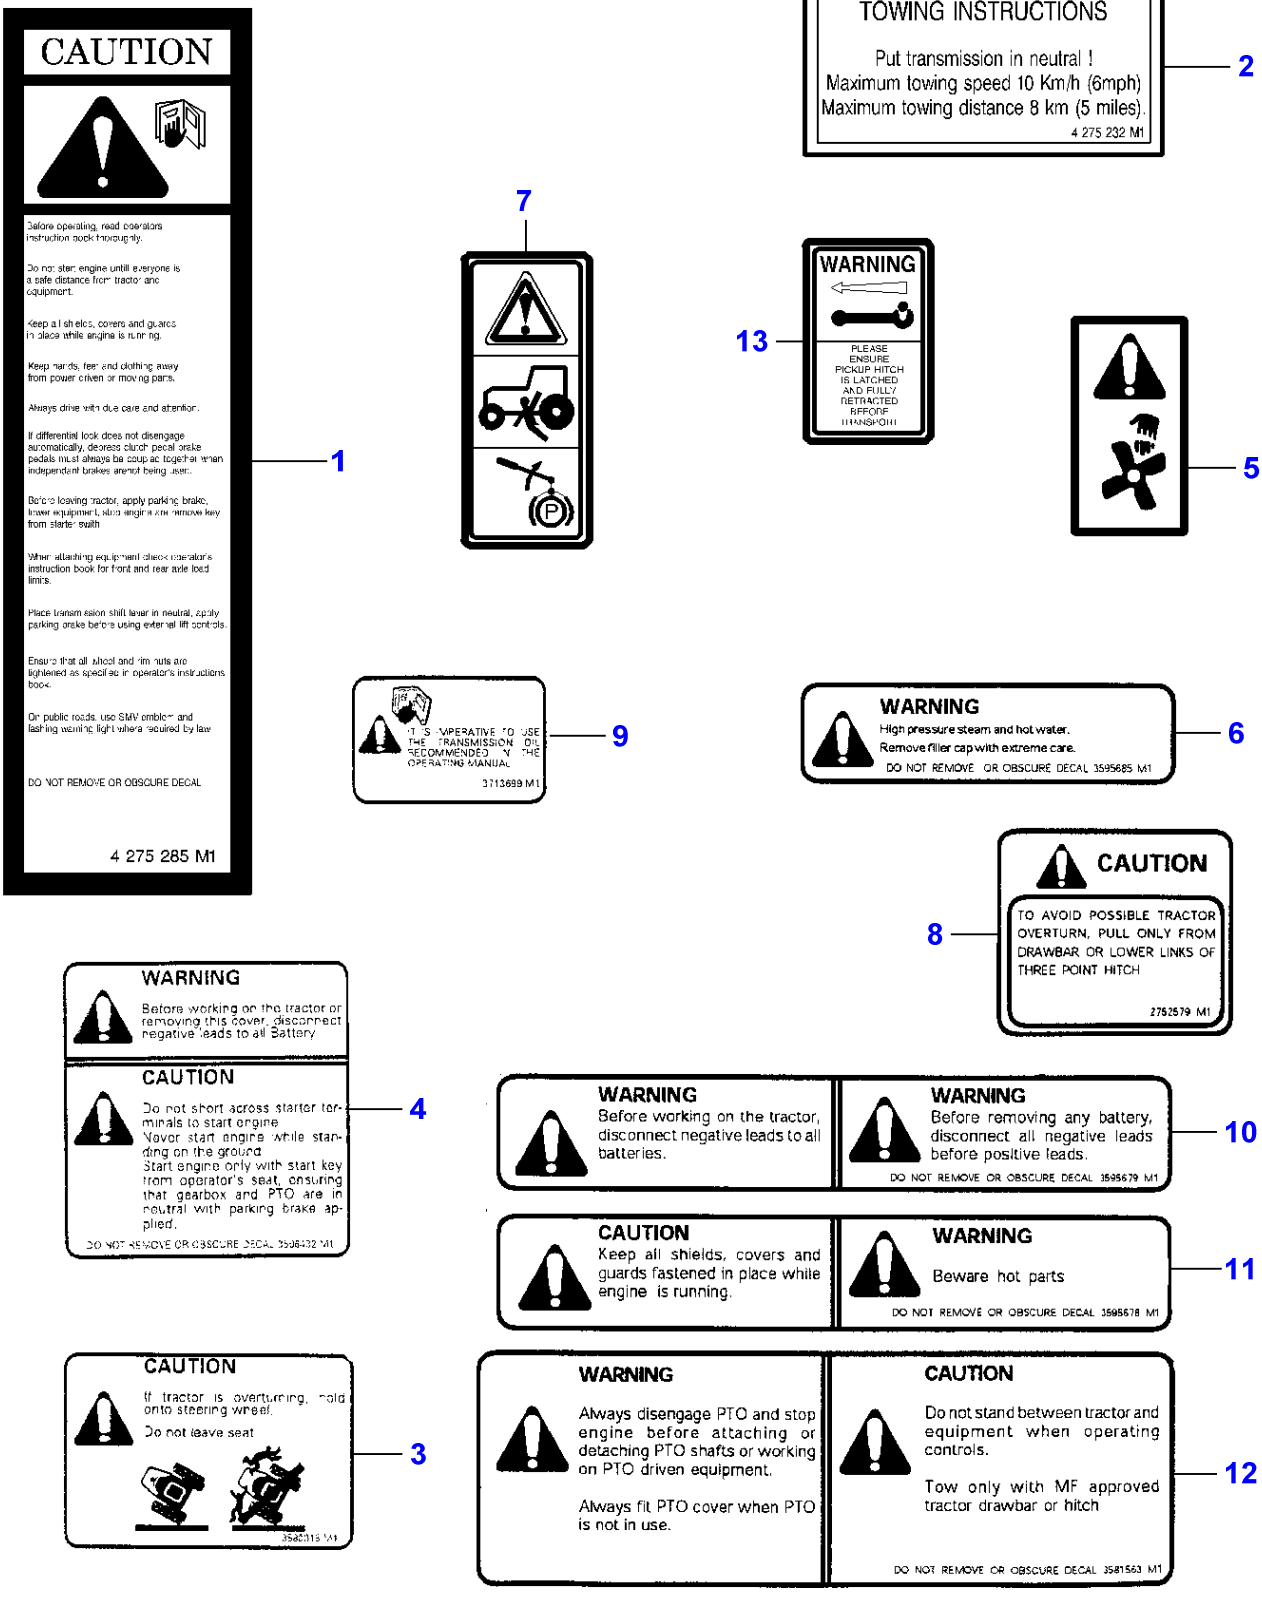
CAUTION
Before operating, read operators instruction book thoroughly.
Do not start engine until everyone is a safe distance from tractor and equipment.
Keep all shields, covers and guards in place while engine is running.
Keep hands, feet and clothing away from power driven or moving parts.
Always drive with due care and attention.
If differential lock does not disengage automatically, depress clutch pedal brake pedals must always be coupled together when independent brakes are not being used.
Before leaving tractor, apply parking brake, lower equipment, stop engine and remove key from starter switch
When attaching equipment check operator's instruction book for front and rear axle load limits.
Place transmission shift lever in neutral, apply parking brake before using external lift controls.
Ensure that all wheel and rim nuts are tightened as specified in operator's instruction book.
On public roads, use SMV emblem and flashing warning light where required by law
DO NOT REMOVE OR OBSCURE DECAL
4 275 285 M1
1
TOWING INSTRUCTIONS
Put transmission in neutral !
Maximum towing speed 10 Km/h (6mph)
Maximum towing distance 8 km (5 miles).
4 275 232 M1
2
7
WARNING
PLEASE ENSURE PICKUP HITCH IS LATCHED AND FULLY RETRACTED BEFORE TRANSPORT
13
5
WARNING
High pressure steam and hot water.
Remove filler cap with extreme care.
DO NOT REMOVE OR OBSCURE DECAL 3595685 M1
6
9
3713699 M1
CAUTION
TO AVOID POSSIBLE TRACTOR OVERTURN, PULL ONLY FROM DRAWBAR OR LOWER LINKS OF THREE POINT HITCH
2752579 M1
8
WARNING
Before working on the tractor or removing this cover, disconnect negative leads to all Battery
CAUTION
Do not short across starter terminals to start engine.
Never start engine while standing on the ground.
Start engine only with start key from operator's seat, ensuring that gearbox and PTO are in neutral with parking brake applied.
DO NOT REMOVE OR OBSCURE DECAL 3595432 M1
4
WARNING
Before working on the tractor, disconnect negative leads to all batteries.
WARNING
Before removing any battery, disconnect all negative leads before positive leads.
DO NOT REMOVE OR OBSCURE DECAL 3595679 M1
10
CAUTION
Keep all shields, covers and guards fastened in place while engine is running.
WARNING
Beware hot parts
DO NOT REMOVE OR OBSCURE DECAL 3595678 M1
11
CAUTION
If tractor is overturning, hold onto steering wheel.
Do not leave seat
3582315 M1
3
WARNING
Always disengage PTO and stop engine before attaching or detaching PTO shafts or working on PTO driven equipment.
Always fit PTO cover when PTO is not in use.
CAUTION
Do not stand between tractor and equipment when operating controls.
Tow only with MF approved tractor drawbar or hitch
DO NOT REMOVE OR OBSCURE DECAL 3581563 M1
12


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275285M2 | 1 | Decal | |
| 2 | 4275232M1 | 1 | Decal | |
| 3 | 3580315M1 | 1 | Decal | |
| 4 | 3596432M1 | 1 | Decal | |
| 5 | 4271915M1 | 1 | Decal | |
| 6 | 3595685M1 | 1 | Decal | |
| 7 | 3782489M1 | 1 | Decal | |
| 8 | 2752579M1 | 1 | Decal | |
| 9 | 3713699M1 | 1 | Decal | |
| 10 | 3595679M1 | 1 | Decal | |
| 11 | 3595678M1 | 1 | Decal | |
| 12 | 3581563M1 | 1 | Decal | |
| 13 | 3781401M1 | 1 | Decal | [A] |

**FOOTNOTE [A]** WITH AUTOMATIC HITCH


1-WR13-038-A

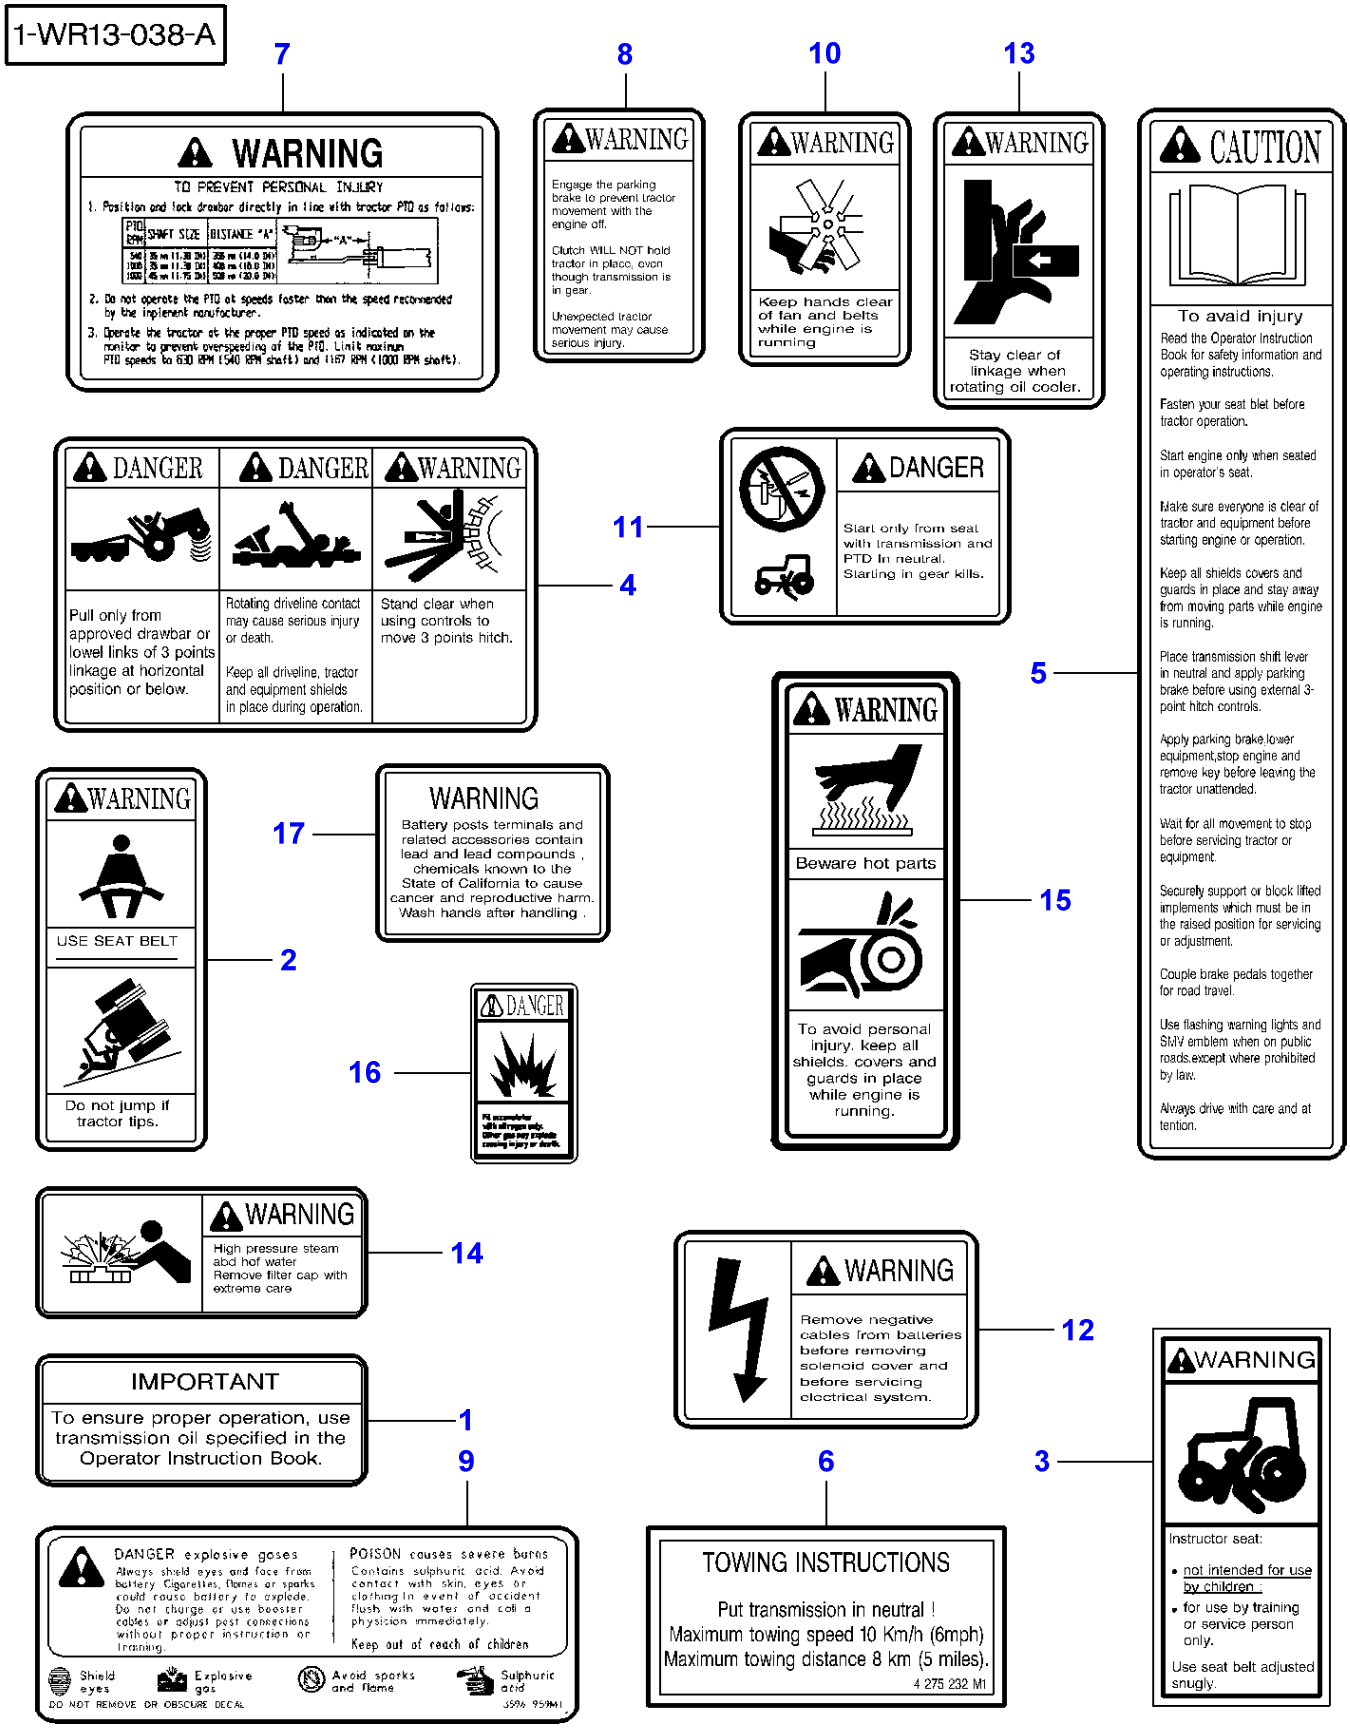
7
WARNING
TO PREVENT PERSONAL INJURY
1. Position and lock drawbar directly in line with tractor PTO as follows:
PTO RPM
SHAFT SIZE
DISTANCE "A"
2. Do not operate the PTO at speeds faster than the speed recommended by the implement manufacturer.
3. Operate the tractor at the proper PTO speed as indicated on the monitor to prevent overspeeding of the PTO. Limit maximum PTO speeds to 630 RPM (540 RPM shaft) and 1157 RPM (1000 RPM shaft).
8
WARNING
Engage the parking brake to prevent tractor movement with the engine off.
Clutch WILL NOT hold tractor in place, even though transmission is in gear.
Unexpected tractor movement may cause serious injury.
10
WARNING
Keep hands clear of fan and belts while engine is running
13
WARNING
Stay clear of linkage when rotating oil cooler.
CAUTION
To avaid injury
Read the Operator Instruction Book for safety information and operating instructions.
Fasten your seat blet before tractor operation.
Start engine only when seated in operator's seat.
Make sure everyone is clear of tractor and equipment before starting engine or operation.
Keep all shields covers and guards in place and stay away from moving parts while engine is running.
Place transmission shift lever in neutral and apply parking brake before using external 3-point hitch controls.
Apply parking brake,lower equipment,stop engine and remove key before leaving the tractor unattended.
Wait for all movement to stop before servicing tractor or equipment.
Securely support or block lifted implements which must be in the raised position for servicing or adjustment.
Couple brake pedals together for road travel.
Use flashing warning lights and SMV emblem when on public roads,except where prohibited by law.
Always drive with care and at tention.
5
DANGER
DANGER
WARNING
Pull only from approved drawbar or lowel links of 3 points linkage at horizontal position or below.
Rotating driveline contact may cause serious injury or death.
Keep all driveline, tractor and equipment shields in place during operation.
Stand clear when using controls to move 3 points hitch.
4
11
DANGER
Start only from seat with transmission and PTD in neutral.
Starting in gear kills.
WARNING
USE SEAT BELT
Do not jump if tractor tips.
2
17
WARNING
Battery posts terminals and related accessories contain lead and lead compounds , chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling .
16
DANGER
WARNING
Beware hot parts
To avoid personal injury, keep all shields, covers and guards in place while engine is running.
15
WARNING
High pressure steam abd hof water
Remove filter cap with extreme care
14
WARNING
Remove negative cables from batteries before removing solenoid cover and before servicing electrical system.
12
IMPORTANT
To ensure proper operation, use transmission oil specified in the Operator Instruction Book.
1
9
DANGER explosive goses
Always shield eyes and face from battery. Cigarettes, flames or sparks could cause battery to explode. Do not charge or use booster cables or adjust post connections without proper instruction or training.
POISON causes severe burns
Contains sulphuric acid. Avoid contact with skin, eyes or clothing.In event of accident flush with water and call a physician immediately.
Keep out of reach of children
Shield eyes
Explosive gas
Avoid sparks and flame
Sulphuric acid
DO NOT REMOVE OR OBSCURE DECAL
6
TOWING INSTRUCTIONS
Put transmission in neutral !
Maximum towing speed 10 Km/h (6mph)
Maximum towing distance 8 km (5 miles).
4 275 232 M1
3
WARNING
Instructor seat:
not intended for use by children .
for use by training or service person only.
Use seat belt adjusted snugly.

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3777020M1 | 1 | Decal |
| 2 | 3808567M2 | 1 | Decal |
| 3 | 3787683M1 | 1 | Decal |
| 4 | 3808558M3 | 1 | Decal |
| 5 | 3808550M3 | 1 | Decal |
| 6 | 4275232M1 | 1 | Decal |
| 7 | 72503125 | 1 | Decal |
| 8 | 3777017M2 | 1 | Decal |
| 9 | 3810054M1 | 2 | Decal |
| 10 | 3808500M2 | 2 | Decal |
| 11 | 5016264M1 | 1 | Decal |
| 12 | 5016204M1 | 1 | Decal |
| 13 | 5016744M1 | 2 | Decal |
| 14 | 3808561M3 | 1 | Decal |
| 15 | 3808555M2 | 2 | Decal |
| 16 | 3777021M3 | 1 | Decal |
| 17 | 3786812M1 | 2 | Decal |

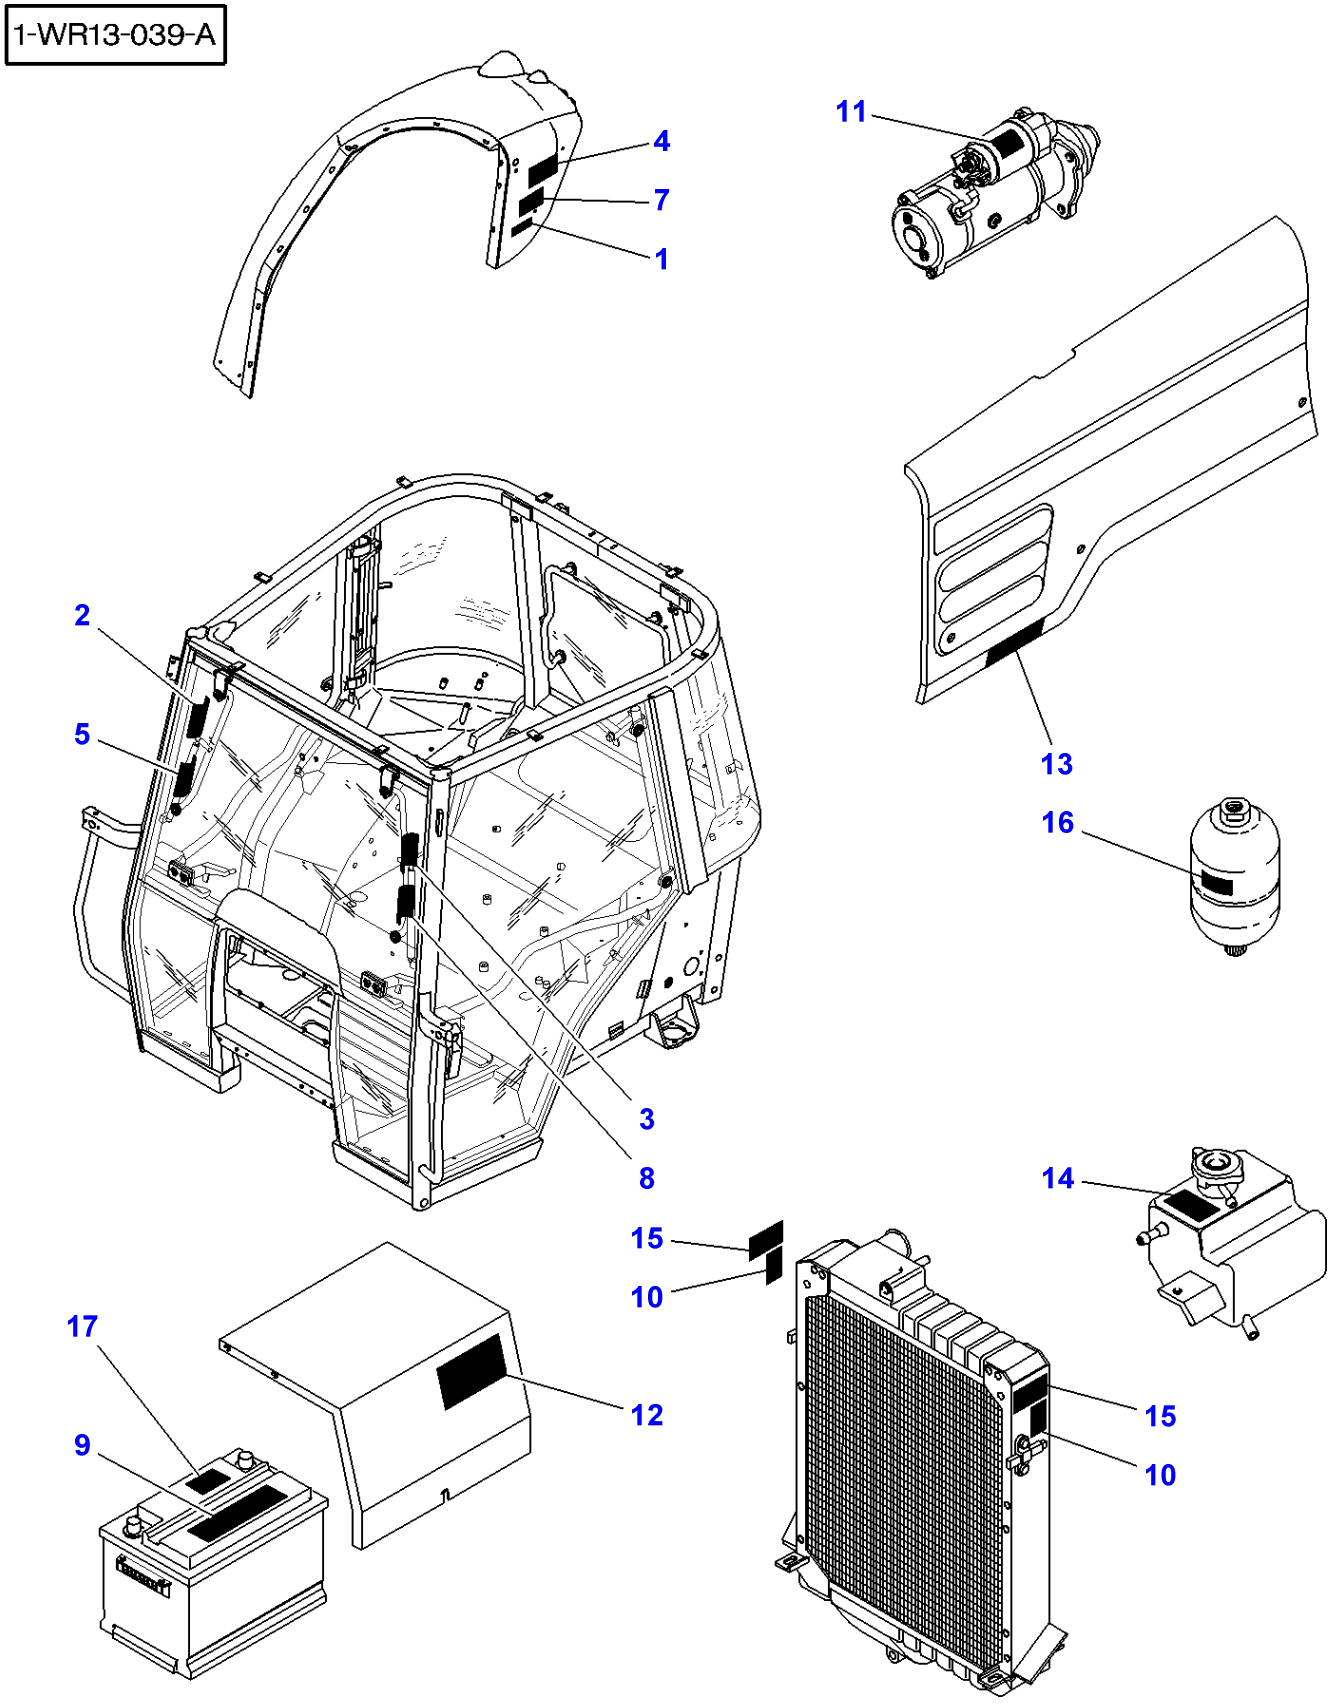
1-WR13-039-A
4
7
1
11
2
5
13
16
3
8
14
15
10
17
12
9
15
10


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3777020M1 | 1 | Decal | |
| 2 | 3808567M2 | 1 | Decal | |
| 3 | 3787683M1 | 1 | Decal | |
| 4 | 3808558M3 | 1 | Decal | |
| 5 | 3808550M3 | 1 | Decal | |
| 6 | 4275232M1 | 1 | Decal | [A] |
| 7 | 72503125 | 1 | Decal | |
| 8 | 3777017M2 | 1 | Decal | |
| 9 | 3810054M1 | 2 | Decal | |
| 10 | 3808500M2 | 2 | Decal | |
| 11 | 5016264M1 | 1 | Decal | |
| 12 | 5016204M1 | 1 | Decal | |
| 13 | 5016744M1 | 2 | Decal | |
| 14 | 3808561M3 | 1 | Decal | |
| 15 | 3808555M2 | 2 | Decal | |
| 16 | 3777021M3 | 1 | Decal | |
| 17 | 3786812M1 | 2 | Decal | |

**FOOTNOTE [A]** NOT ILLUSTRATED

1-WR13-032-A

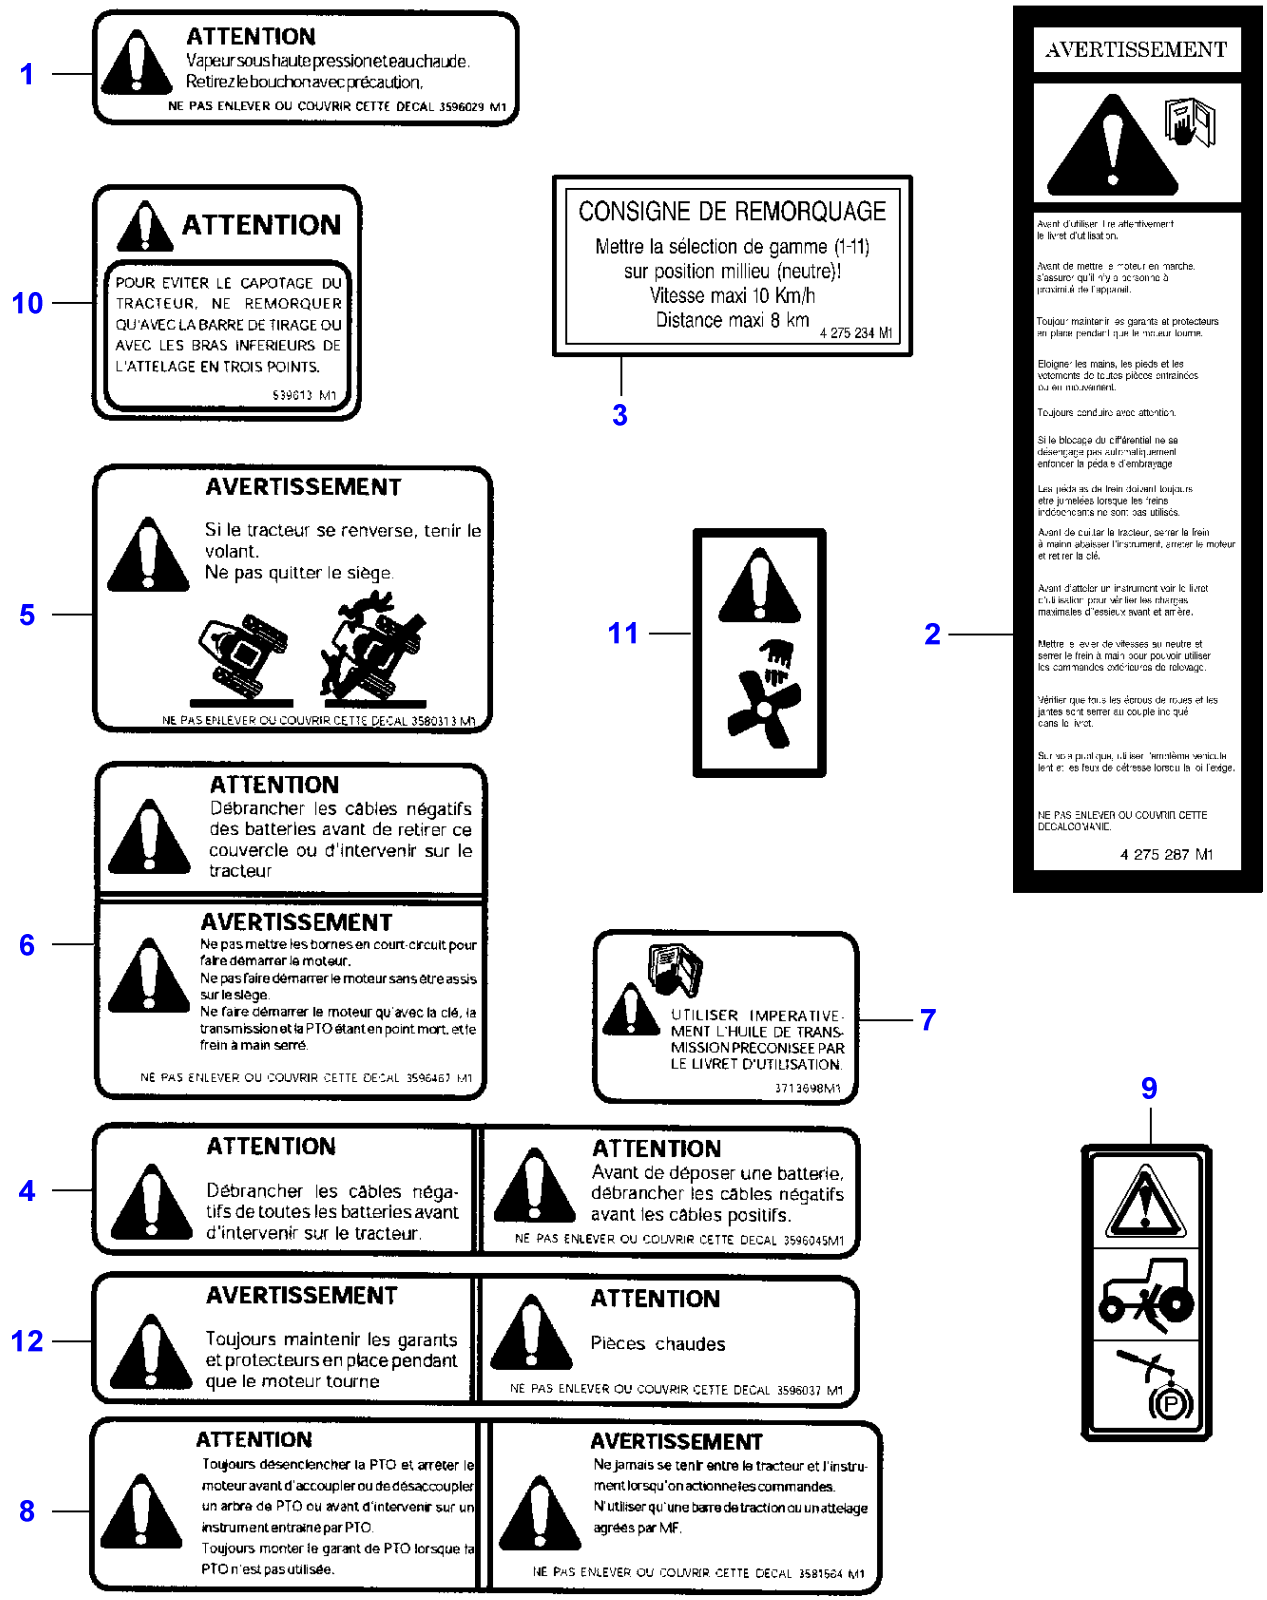

1
ATTENTION
Vapeur sous haute pression et eau chaude.
Retirez le bouchon avec précaution.
NE PAS ENLEVER OU COUVRIR CETTE DECAL 3596029 M1
10
ATTENTION
POUR EVITER LE CAPOTAGE DU TRACTEUR, NE REMORQUER QU'AVEC LA BARRE DE TIRAGE OU AVEC LES BRAS INFERIEURS DE L'ATTELAGE EN TROIS POINTS.
539813 M1
CONSIGNE DE REMORQUAGE
Mettre la sélection de gamme (1-11) sur position millieu (neutre)!
Vitesse maxi 10 Km/h
Distance maxi 8 km
4 275 234 M1
3
AVERTISSEMENT
Avant d'utiliser l'engin attentivement le livret d'utilisation.
Avant de mettre le moteur en marche, s'assurer qu'il n'y a personne à proximité de l'appareil.
Toujours maintenir les garants et protecteurs en place pendant que le moteur tourne.
Eloigner les mains, les pieds et les vêtements de toutes pièces entraînées ou en mouvement.
Toujours conduire avec attention.
Si le blocage du différentiel ne se désengage pas automatiquement enfoncer la pédale d'embrayage
Les pédales de frein doivent toujours être jumelées lorsque les freins indépendants ne sont pas utilisés.
Avant de quitter le tracteur, serrer le frein à main abaisser l'instrument, arrêter le moteur et retirer la clé.
Avant d'atteler un instrument voir le livret d'utilisation pour vérifier les charges maximales d'essieux avant et arrière.
Mettre le levier de vitesses au neutre et serrer le frein à main pour pouvoir utiliser les commandes extérieures de relevage.
Vérifier que tous les écrous de roues et les jantes sont serrés au couple indiqué dans le livret.
Surtout au début, utiliser l'embrayage verticale lentement les freux de côté sse lorsqu'il y a de l'herbe.
NE PAS ENLEVER OU COUVRIR CETTE DECALCOMANIE.
4 275 287 M1
5
AVERTISSEMENT
Si le tracteur se renverse, tenir le volant.
Ne pas quitter le siège.
NE PAS ENLEVER OU COUVRIR CETTE DECAL 3580313 M1
11
2
ATTENTION
Débrancher les câbles négatifs des batteries avant de retirer ce couvercle ou d'intervenir sur le tracteur
6
AVERTISSEMENT
Ne pas mettre les bornes en court-circuit pour faire démarrer le moteur.
Ne pas faire démarrer le moteur sans être assis sur le siège.
Ne faire démarrer le moteur qu'avec la clé, la transmission et la PTO étant en point mort, et le frein à main serré.
NE PAS ENLEVER OU COUVRIR CETTE DECAL 3596460 M1
UTILISER IMPERATIVEMENT L'HUILE DE TRANSMISSION PRECONISEE PAR LE LIVRET D'UTILISATION.
3713698M1
7
9
4
ATTENTION
Débrancher les câbles négatifs de toutes les batteries avant d'intervenir sur le tracteur.
ATTENTION
Avant de déposer une batterie, débrancher les câbles négatifs avant les câbles positifs.
NE PAS ENLEVER OU COUVRIR CETTE DECAL 3596045M1
12
AVERTISSEMENT
Toujours maintenir les garants et protecteurs en place pendant que le moteur tourne
ATTENTION
Pièces chaudes
NE PAS ENLEVER OU COUVRIR CETTE DECAL 3596037 M1
8
ATTENTION
Toujours désenclencher la PTO et arrêter le moteur avant d'accoupler ou de désaccoupler un arbre de PTO ou avant d'intervenir sur un instrument entraîné par PTO.
Toujours monter le garant de PTO lorsque la PTO n'est pas utilisée.
AVERTISSEMENT
Ne jamais se tenir entre le tracteur et l'instrument lorsqu'on actionne les commandes.
N'utiliser qu'une barre de traction ou un attelage agréés par MF.
NE PAS ENLEVER OU COUVRIR CETTE DECAL 3581564 M1

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3596029M1 | 1 | Decal |
| 2 | 4275287M1 | 1 | Decal |
| 3 | 4275234M1 | 1 | Decal |
| 4 | 3596045M1 | 1 | Decal |
| 5 | 3580313M1 | 1 | Decal |
| 6 | 3596467M2 | 1 | Decal |
| 7 | 3713698M1 | 1 | Decal |
| 8 | 3581564M1 | 1 | Decal |
| 9 | 3782489M1 | 1 | Decal |
| 10 | 539613M1 | 1 | Decal |
| 11 | 4271915M1 | 1 | Decal |
| 12 | 3596037M1 | 1 | Decal |

1-WR13-033-A

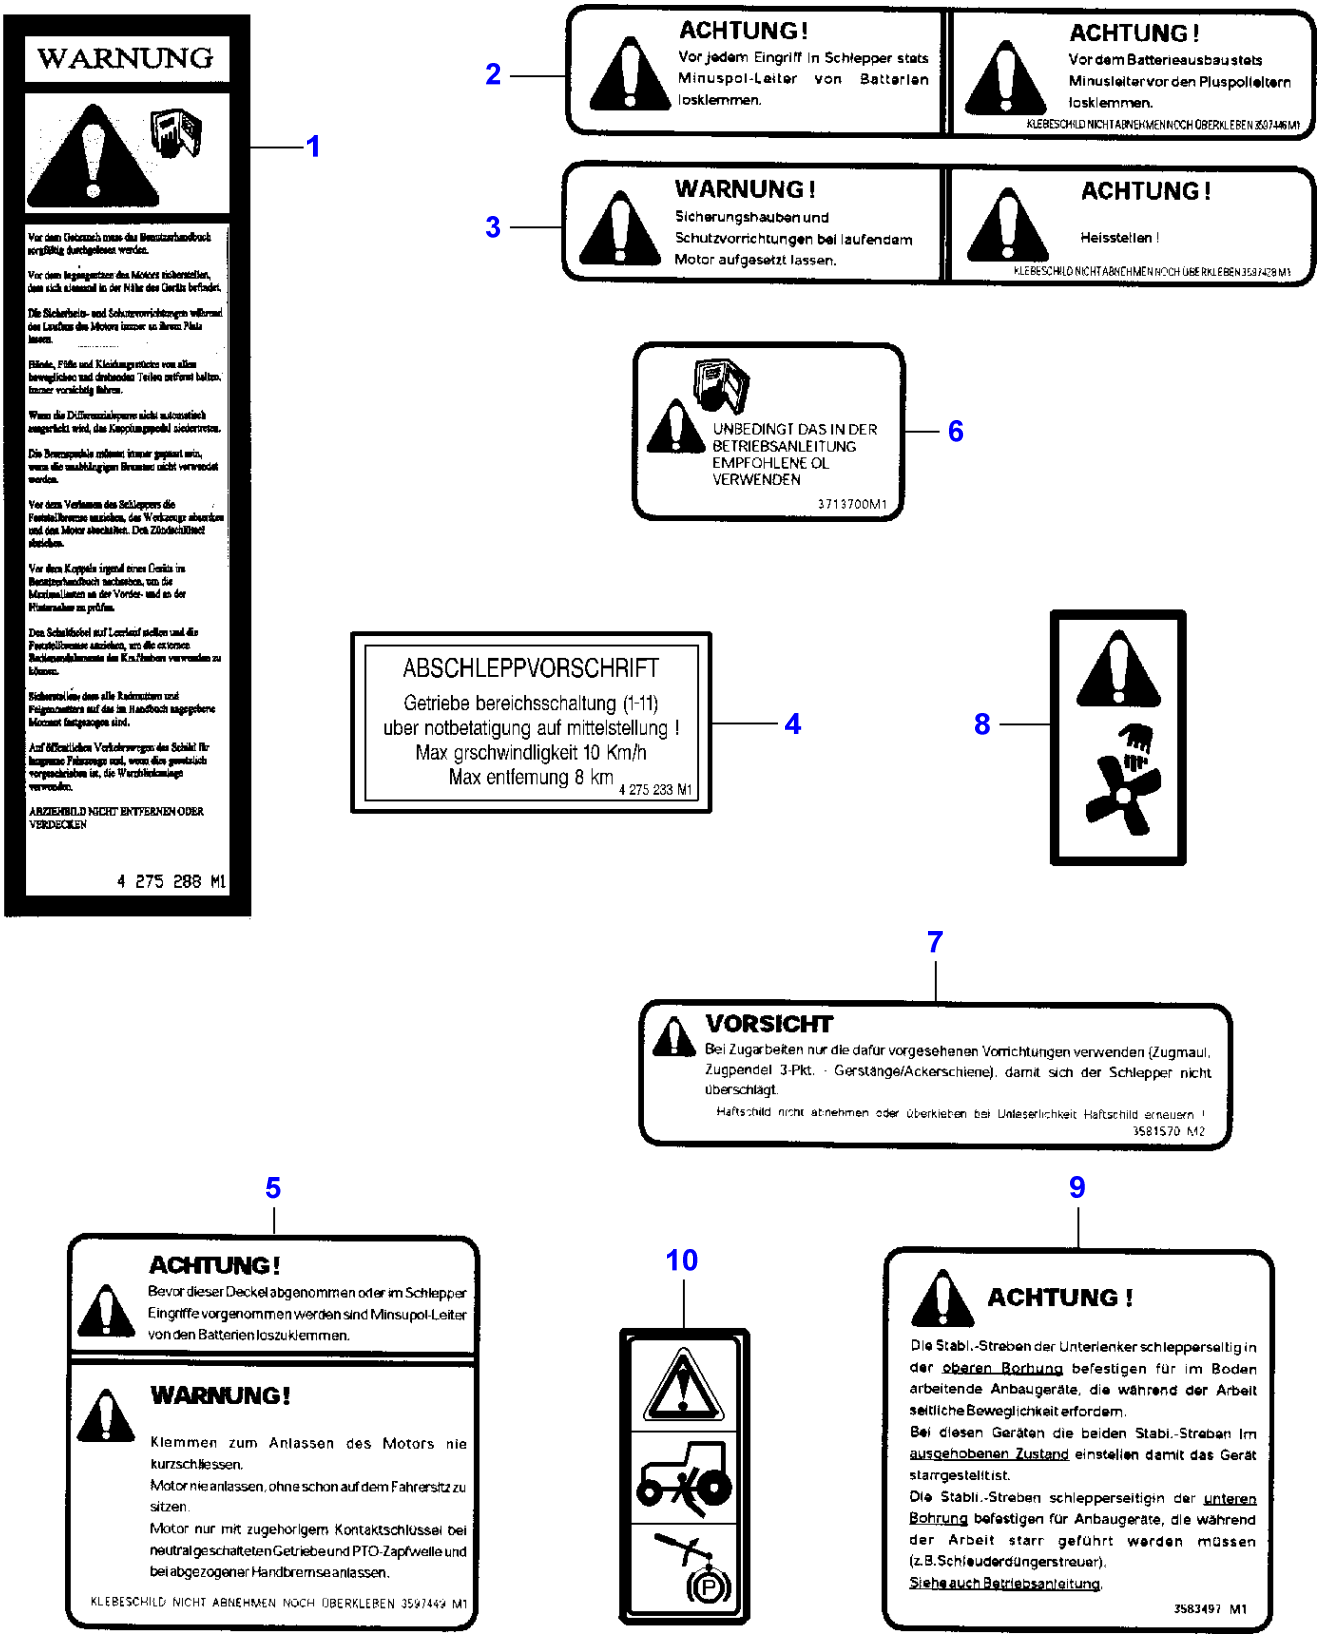

1
WARNUNG
4 275 288 M1
2
ACHTUNG!
Vor jedem Eingriff in Schlepper stets Minuspol-Leiter von Batterien losklemmen.
ACHTUNG!
Vor dem Batterieausbau stets Minusleiter vor den Pluspolleitern losklemmen.
KLEBESCHILD NICHT ABNEHMEN NOCH ÜBERKLEBEN 3587446M1
3
WARNUNG!
Sicherungshauben und Schutzvorrichtungen bei laufendem Motor aufgesetzt lassen.
ACHTUNG!
Heissteilen!
KLEBESCHILD NICHT ABNEHMEN NOCH ÜBERKLEBEN 3587428 M1
6
UNBEDINGT DAS IN DER BETRIEBSANLEITUNG EMPFOHLENE ÖL VERWENDEN
3713700M1
4
ABSCHLEPPVORSCHRIFT
Getriebe bereichsschaltung (1-11)
uber notbetatigung auf mittelstellung !
Max grschwindligkeit 10 Km/h
Max entfemung 8 km
4 275 233 M1
8
7
VORSICHT
Bei Zugarbeiten nur die dafür vorgesehenen Vorrichtungen verwenden (Zugmaul, Zugpendel 3-Pkt. - Gerstänge/Ackerschiene), damit sich der Schlepper nicht überschlägt.
Haftschild nicht abnehmen oder überkleben bei Unleserlichkeit Haftschild erneuern !
3581570 M2
5
ACHTUNG!
Bevor dieser Deckel abgenommen oder im Schlepper Eingriffe vorgenommen werden sind Minsupol-Leiter von den Batterien loszuklemmen.
WARNUNG!
Klemmen zum Anlassen des Motors nie kurzschliessen.
Motor nie anlassen, ohne schon auf dem Fahrersitz zu sitzen.
Motor nur mit zugehorigem Kontaktschlüssel bei neutral geschaltetem Getriebe und PTO-Zapfwelle und bei abgezogener Handbremse anlassen.
KLEBESCHILD NICHT ABNEHMEN NOCH ÜBERKLEBEN 3597449 M1
10
9
ACHTUNG!
Die Stabl.-Streben der Unterlenker schleppersaltig in der oberen Bohrung befestigen für im Boden arbeitende Anbaugeräte, die während der Arbeit seitliche Beweglichkeit erfordern.
Bei diesen Geräten die beiden Stabl.-Streben im ausgehobenen Zustand einstellen damit das Gerät starrgestelltist.
Die Stabl.-Streben schlepperseitig in der unteren Bohrung befestigen für Anbaugeräte, die während der Arbeit starr geführt werden müssen (z.B. Schleuderdüngerstreuer).
Siehe auch Betriebsanleitung.
3583497 M1

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 4275288M1 | 1 | Decal |
| 2 | 3597446M1 | 1 | Decal |
| 3 | 3597428M1 | 1 | Decal |
| 4 | 4275235M1 | 1 | Decal |
| 5 | 3597449M2 | 1 | Decal |
| 6 | 3713700M1 | 1 | Decal |
| 7 | 3581570M2 | 1 | Decal |
| 8 | 4271915M1 | 1 | Decal |
| 9 | 3583497M1 | 1 | Decal |
| 10 | 3782489M1 | 1 | Decal |

1-WR13-034-A

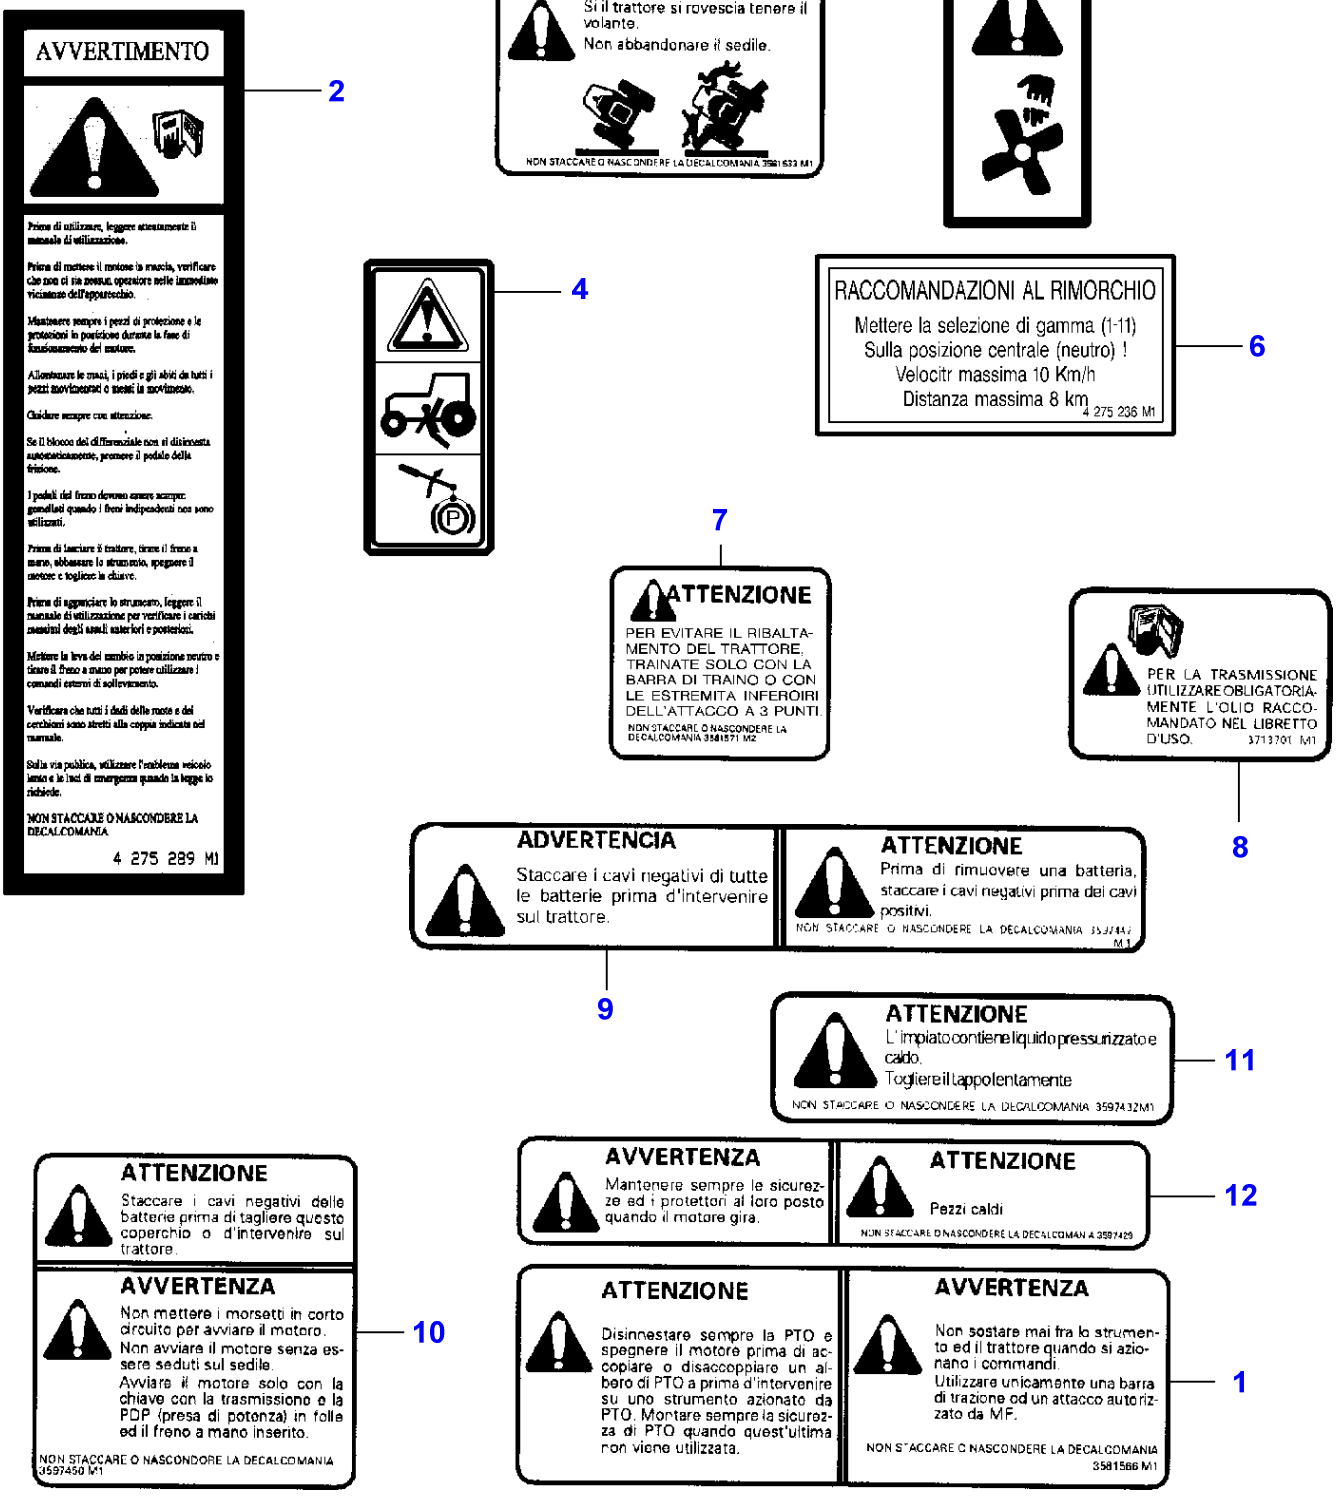

3
AVVERTENZA
Si il trattore si rovescia tenere il volante.
Non abbandonare il sedile.
NON STACCARE O NASCONDERE LA DECALCOMANIA 3581633 M1
5
AVVERTIMENTO
Prima di utilizzare, leggere attentamente il manuale di utilizzazione.
Prima di mettere il motore in marcia, verificare che non ci sia nessun operatore nelle immediate vicinanze dell'apparecchio.
Mantenere sempre i pezzi di protezione e le protezioni in posizione durante la fase di funzionamento del motore.
Allontanare le mani, i piedi e gli abiti da tutti i pezzi movimentati o mezzi in movimento.
Guidare sempre con attenzione.
Se il blocco del differenziale non si disinserisce automaticamente, premere il pedale della frizione.
I pedali del freno devono essere sempre gemellati quando i freni indipendenti non sono utilizzati.
Prima di lasciare il trattore, tirare il freno a mano, abbassare lo strumento, spegnere il motore e togliere la chiave.
Prima di aggiungere lo strumento, leggere il manuale di utilizzazione per verificare i carichi massimi degli assali anteriori e posteriori.
Mettere la leva del cambio in posizione neutro e tirare il freno a mano per potere utilizzare i comandi esterni di sollevamento.
Verificare che tutti i dadi delle ruote e dei cerchioni sono stretti alla coppia indicata nel manuale.
Sulla via pubblica, utilizzare l'emblema veicolo lento e le luci di emergenza quando la legge lo richiede.
NON STACCARE O NASCONDERE LA DECALCOMANIA
4 275 289 M1
2
4
RACCOMANDAZIONI AL RIMORCHIO
Mettere la selezione di gamma (1-11)
Sulla posizione centrale (neutro) !
Velocitr massima 10 Km/h
Distanza massima 8 km
4 275 236 M1
6
7
ATTENZIONE
PER EVITARE IL RIBALTAMENTO DEL TRATTORE, TRAINATE SOLO CON LA BARRA DI TRAINO O CON LE ESTREMITA INFEROIRI DELL'ATTACCO A 3 PUNTI.
NON STACCARE O NASCONDERE LA DECALCOMANIA 3581571 M2
PER LA TRASMISSIONE UTILIZZARE OBBLIGATORIAMENTE L'OLIO RACCOMANDATO NEL LIBRETTO D'USO.
3713701 M1
8
ADVERTENCIA
Staccare i cavi negativi di tutte le batterie prima d'intervenire sul trattore.
ATTENZIONE
Prima di rimuovere una batteria, staccare i cavi negativi prima dei cavi positivi.
NON STACCARE O NASCONDERE LA DECALCOMANIA 3537447 M1
9
ATTENZIONE
L'impiato contiene liquido pressurizzato e caldo.
Togliere il tappo lentamente
NON STACCARE O NASCONDERE LA DECALCOMANIA 3597432M1
11
ATTENZIONE
Staccare i cavi negativi delle batterie prima di tagliere questo coperchio o d'intervenire sul trattore.
AVVERTENZA
Non mettere i morsetti in corto circuito per avviare il motore.
Non avviare il motore senza essere seduti sul sedile.
Avviare il motore solo con la chiave con la trasmissione e la PDP (presa di potenza) in folle ed il freno a mano inserito.
NON STACCARE O NASCONDERE LA DECALCOMANIA 3597450 M1
10
AVVERTENZA
Mantenere sempre le sicurezze ed i protettori al loro posto quando il motore gira.
ATTENZIONE
Pezzi caldi
NON STACCARE O NASCONDERE LA DECALCOMANIA 3597429
12
ATTENZIONE
Disinnestare sempre la PTO e spegnere il motore prima di accopiare o disaccoppiare un albero di PTO a prima d'intervenire su uno strumento azionato da PTO. Montare sempre la sicurezza di PTO quando quest'ultima non viene utilizzata.
AVVERTENZA
Non sostare mai fra lo strumento ed il trattore quando si azionano i commandi.
Utilizzare unicamente una barra di trazione od un attacco autorizzato da MF.
NON STACCARE O NASCONDERE LA DECALCOMANIA 3581566 M1
1

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3581566M1 | 1 | Decal |
| 2 | 4275289M1 | 1 | Decal |
| 3 | 3581533M2 | 1 | Decal |
| 4 | 3782489M1 | 1 | Decal |
| 5 | 4271915M1 | 1 | Decal |
| 6 | 4275236M1 | 1 | Decal |
| 7 | 3581571M2 | 1 | Decal |
| 8 | 3713701M1 | 1 | Decal |
| 9 | 3597447M1 | 1 | Decal |
| 10 | 3597450M2 | 1 | Decal |
| 11 | 3597432M1 | 1 | Decal |
| 12 | 3597429M1 | 1 | Decal |


1-WR13-035-A

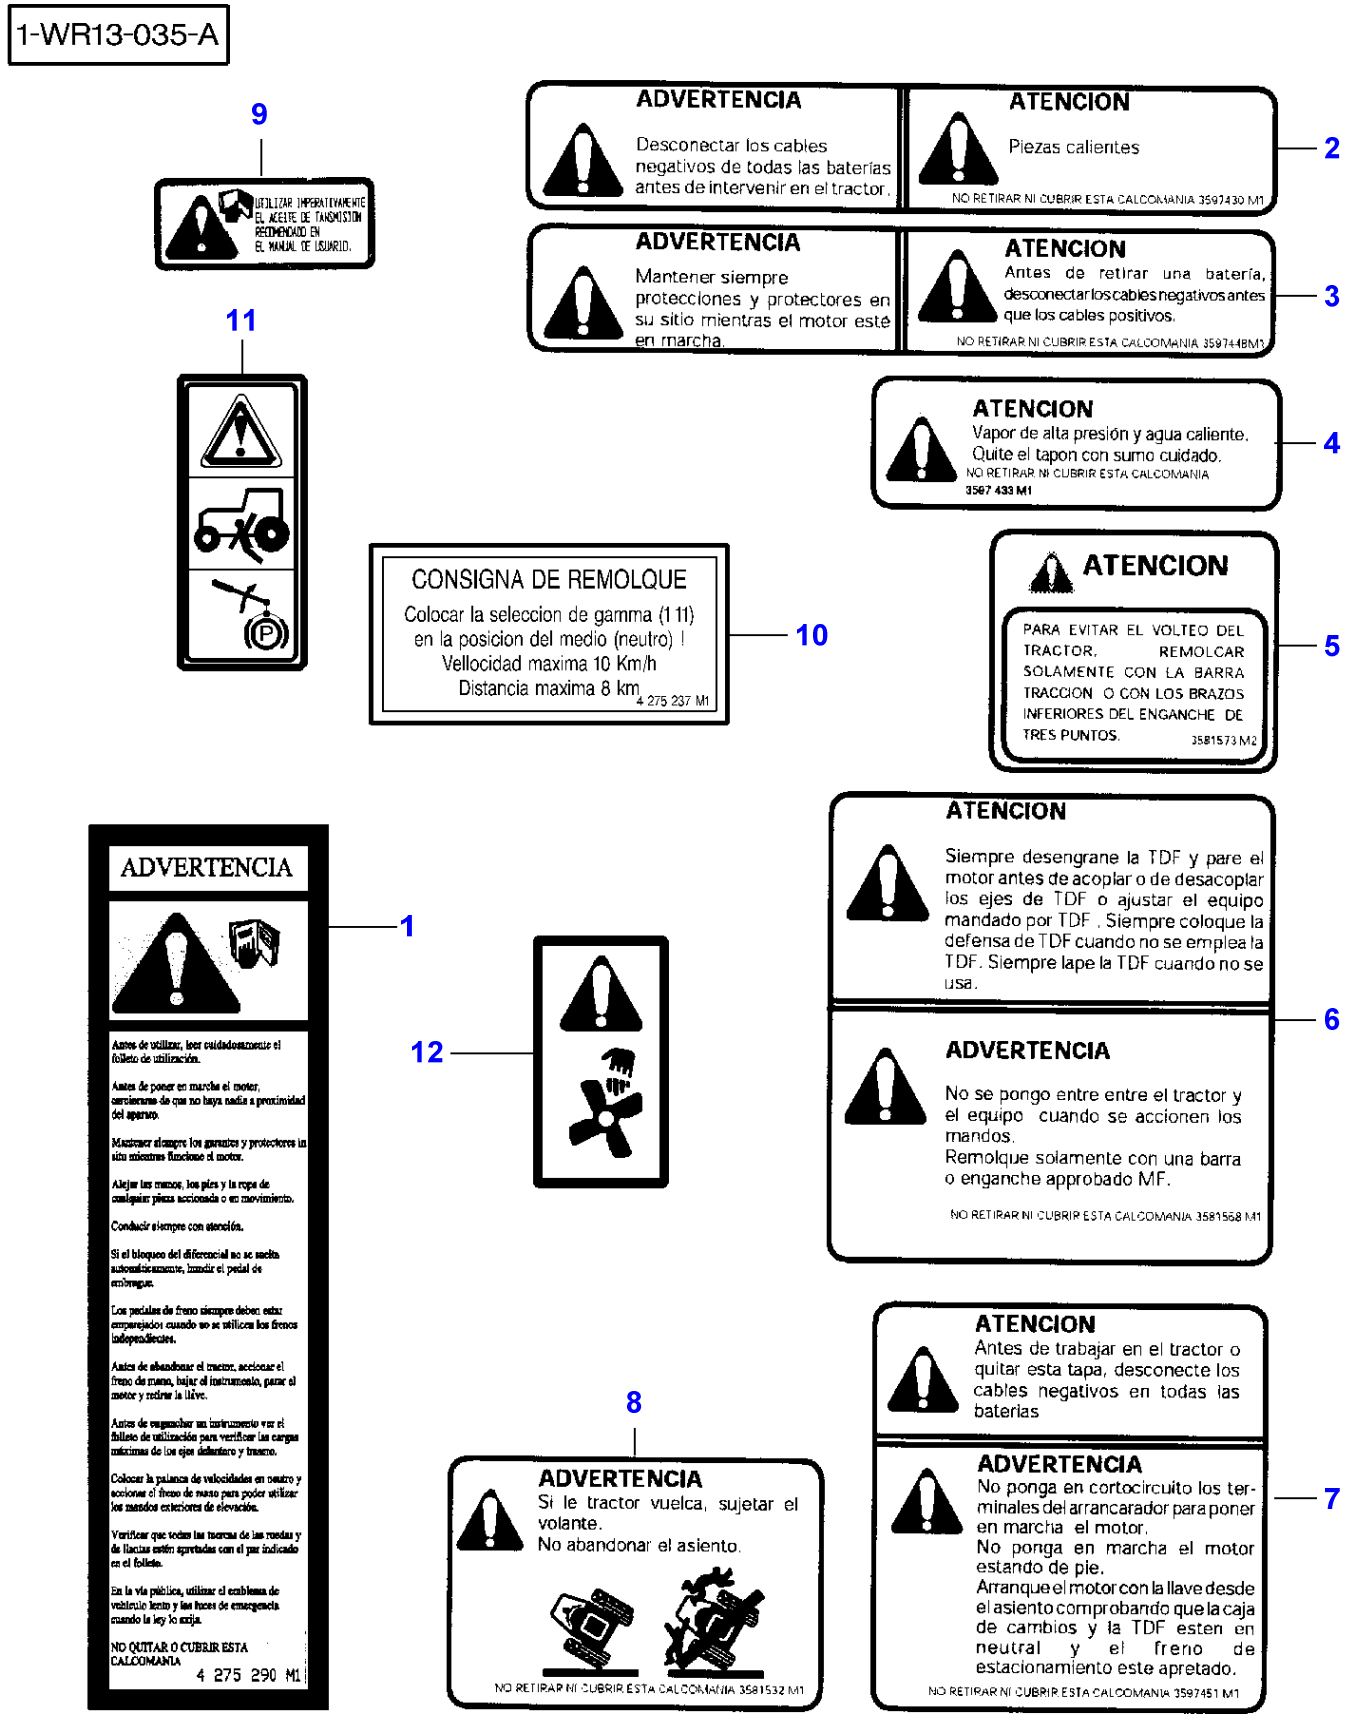
9
UTILIZAR IMPERATIVAMENTE EL ACEITE DE TRANSMISION RECOMENDADO EN EL MANUAL DE USUARIO.
11
ADVERTENCIA
Desconectar los cables negativos de todas las baterías antes de intervenir en el tractor.
ATENCION
Piezas calientes
NO RETIRAR NI CUBRIR ESTA CALCOMANIA 3597430 M1
2
ADVERTENCIA
Mantener siempre protecciones y protectores en su sitio mientras el motor esté en marcha.
ATENCION
Antes de retirar una batería, desconectar los cables negativos antes que los cables positivos.
NO RETIRAR NI CUBRIR ESTA CALCOMANIA 3597448M1
3
ATENCION
Vapor de alta presión y agua caliente. Quite el tapon con sumo cuidado.
NO RETIRAR NI CUBRIR ESTA CALCOMANIA
3567 433 M1
4
CONSIGNA DE REMOLQUE
Colocar la seleccion de gamma (1 11) en la posicion del medio (neutro) !
Vellocidad maxima 10 Km/h
Distancia maxima 8 km
4 275 237 M1
10
ATENCION
PARA EVITAR EL VOLTEO DEL TRACTOR, REMOLCAR SOLAMENTE CON LA BARRA TRACCION O CON LOS BRAZOS INFERIORES DEL ENGANCHE DE TRES PUNTOS.
3581573 M2
5
ADVERTENCIA
Antes de utilizar, leer cuidadosamente el folleto de utilización.
Antes de poner en marcha el motor, cerciorarse de que no haya nadie a proximidad del aparato.
Mantener siempre los guardas y protectores in sitio mientras funcione el motor.
Alejar las manos, los pies y la ropa de cualquier pieza accionada o en movimiento.
Conducir siempre con atención.
Si el bloqueo del diferencial no se suelta automáticamente, frenar el pedal de embrague.
Los pedales de freno siempre deben estar emparejados cuando no se utilicen los frenos independientes.
Antes de abandonar el tractor, accionar el freno de mano, bajar el instrumento, parar el motor y retirar la llave.
Antes de enganchar un instrumento ver el folleto de utilización para verificar las cargas máximas de los ejes delantero y trasero.
Colocar la palanca de velocidades en neutro y accionar el freno de mano para poder utilizar los mandos exteriores de elevación.
Verificar que todas las tuercas de las ruedas y de llantas están apretadas con el par indicado en el folleto.
En la vía pública, utilizar el emblema de vehículo lento y las luces de emergencia cuando la ley lo exija.
NO QUITAR O CUBRIR ESTA CALCOMANIA
4 275 290 M1
1
12
ATENCION
Siempre desengrane la TDF y pare el motor antes de acoplar o de desacoplar los ejes de TDF o ajustar el equipo mandado por TDF . Siempre coloque la defensa de TDF cuando no se emplea la TDF. Siempre lape la TDF cuando no se usa.
ADVERTENCIA
No se pongo entre entre el tractor y el equipo cuando se accionen los mandos.
Remolque solamente con una barra o enganche approbado MF.
NO RETIRAR NI CUBRIR ESTA CALCOMANIA 3581558 M1
6
ATENCION
Antes de trabajar en el tractor o quitar esta tapa, desconecte los cables negativos en todas las baterias
ADVERTENCIA
No ponga en cortocircuito los terminales del arrancarador para poner en marcha el motor.
No ponga en marcha el motor estando de pie.
Arranque el motor con la llave desde el asiento comprobando que la caja de cambios y la TDF esten en neutral y el freno de estacionamiento este apretado.
NO RETIRAR NI CUBRIR ESTA CALCOMANIA 3597451 M1
7
8
ADVERTENCIA
Si le tractor vuelca, sujetar el volante.
No abandonar el asiento.
NO RETIRAR NI CUBRIR ESTA CALCOMANIA 3581532 M1

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 4275290M1 | 1 | Decal |
| 2 | 3597430M1 | 1 | Decal |
| 3 | 3597448M1 | 1 | Decal |
| 4 | 3597433M1 | 1 | Decal |
| 5 | 3581573M2 | 1 | Decal |
| 6 | 3581568M1 | 1 | Decal |
| 7 | 3597451M2 | 1 | Decal |
| 8 | 3581532M1 | 1 | Decal |
| 9 | 3713702M1 | 1 | Decal |
| 10 | 4275237M1 | 1 | Decal |
| 11 | 3782489M1 | 1 | Decal |
| 12 | 4271915M1 | 1 | Decal |

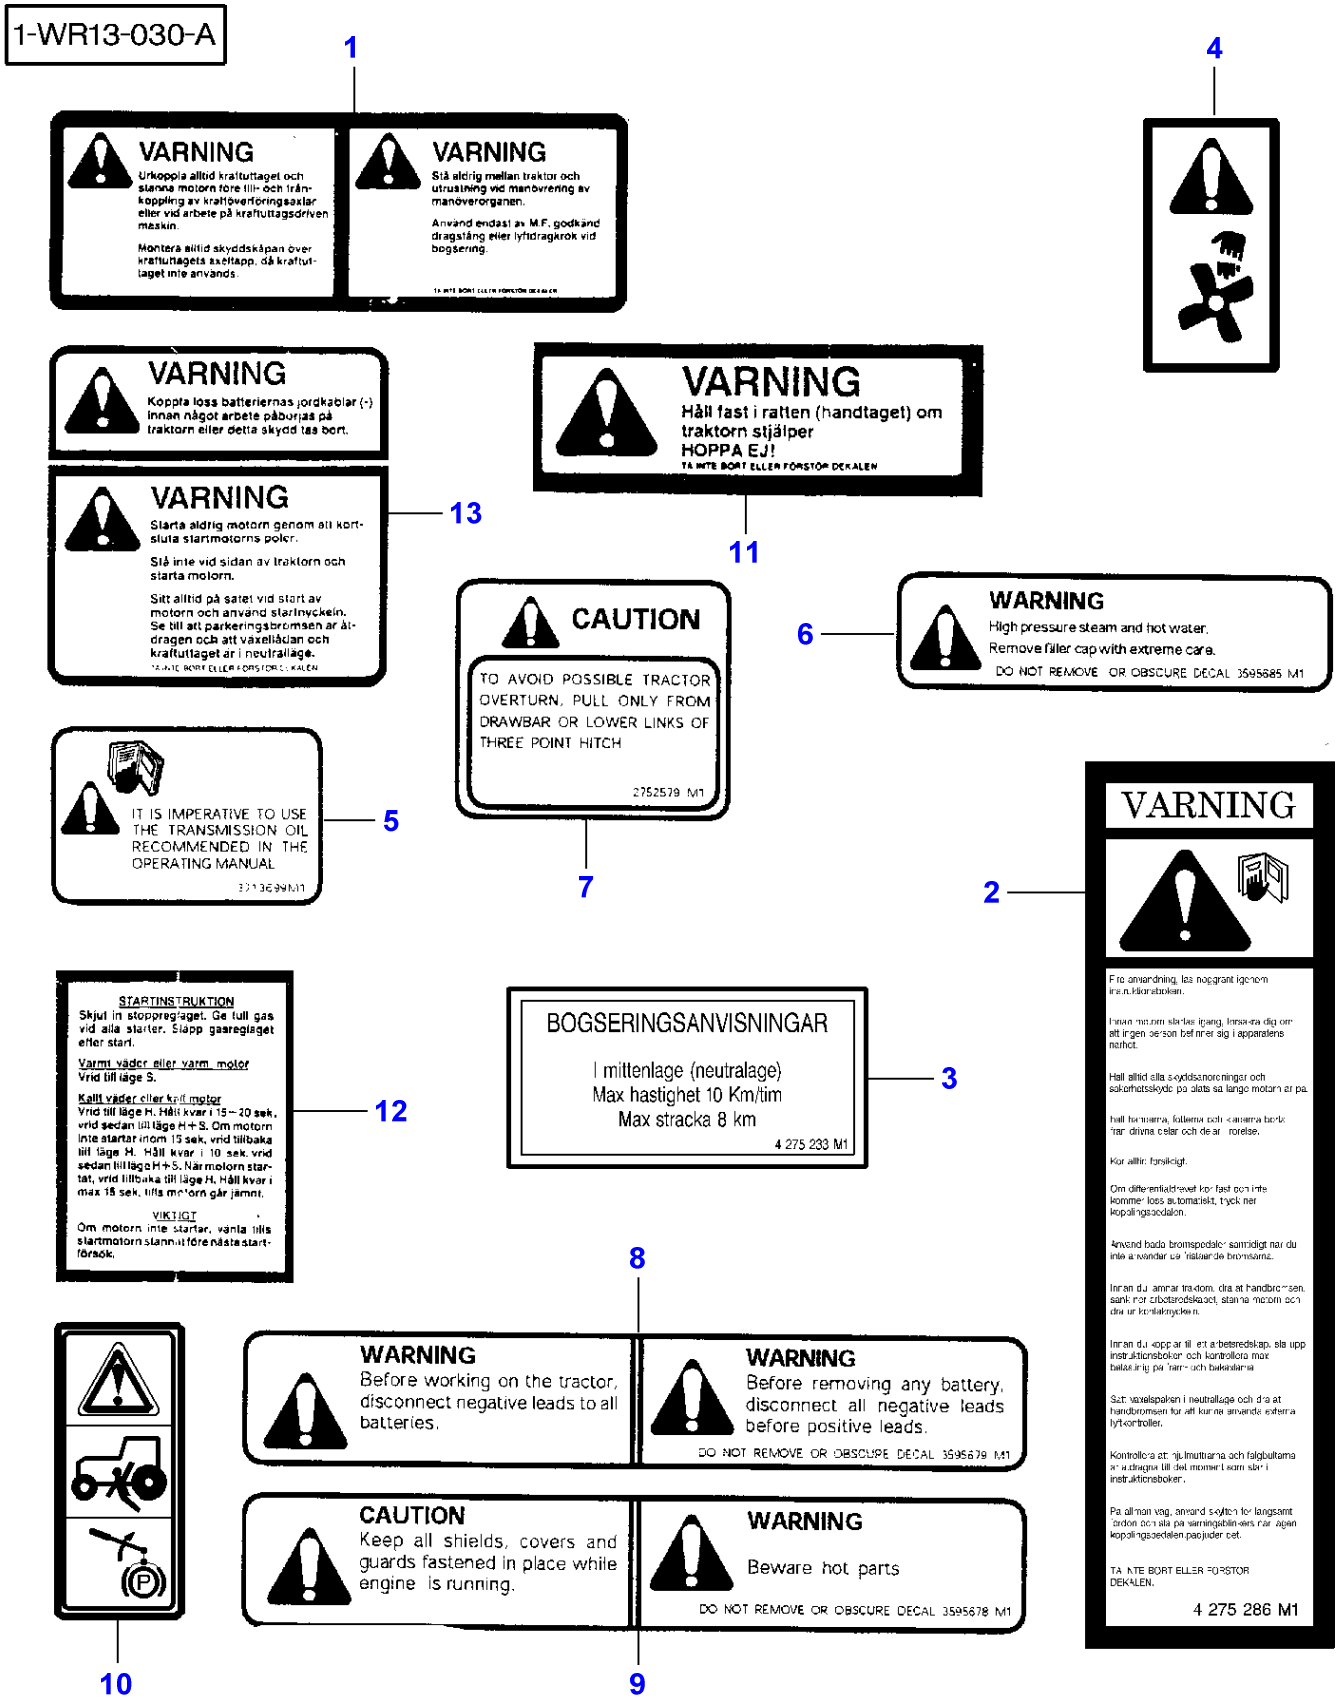

1-WR13-030-A
1
VARNING
Urkoppla alltid kraftuttaget och stanna motorn före till- och frånkoppling av kraftöverföringsaxlar eller vid arbete på kraftuttagsdriven maskin.
Montera alltid skyddskåpan över kraftuttagets axeltapp, då kraftuttaget inte används.
VARNING
Stå aldrig mellan traktor och utrustning vid manövrering av manöverorganen.
Använd endast av M.F. godkänd dragstång eller lyftdragkrok vid bogsering.
TA INTE BORT ELLER FÖRSTÖR DEKALEN
4
VARNING
Koppla loss batteriernas jordkablar (-) innan något arbete påbörjas på traktorn eller detta skydd tas bort.
VARNING
Starta aldrig motorn genom att kortsluta startmotorns poler.
Stå inte vid sidan av traktorn och starta motorn.
Sitt alltid på satet vid start av motorn och använd startnyckeln.
Se till att parkeringsbromsen är åtdragen och att växelhåven och kraftuttaget är i neutralläge.
TA INTE BORT ELLER FÖRSTÖR DEKALEN
13
VARNING
Håll fast i ratten (handtaget) om traktorn stjälper
HOPPA EJ!
TA INTE BORT ELLER FÖRSTÖR DEKALEN
11
CAUTION
TO AVOID POSSIBLE TRACTOR OVERTURN, PULL ONLY FROM DRAWBAR OR LOWER LINKS OF THREE POINT HITCH
2752579 M1
7
6
WARNING
High pressure steam and hot water.
Remove filler cap with extreme care.
DO NOT REMOVE OR OBSCURE DECAL 3595685 M1
IT IS IMPERATIVE TO USE THE TRANSMISSION OIL RECOMMENDED IN THE OPERATING MANUAL
5
VARNING
2
STARTINSTRUKTION
Skjut in stoppreglaget. Ge full gas vid alla starter. Släpp gasreglaget efter start.
Varmt väder eller varm motor
Vrid till läge S.
Kallt väder eller kall motor
Vrid till läge H. Håll kvar i 15 – 20 sek, vrid sedan till läge H+S. Om motorn inte startar inom 15 sek, vrid tillbaka till läge H. Håll kvar i 10 sek, vrid sedan till läge H+S. När motorn startat, vrid tillbaka till läge H. Håll kvar i max 15 sek, tills motorn går jämnt.
VIKTIGT
Om motorn inte startar, vänta tills startmotorn stannat före nästa startförsök.
12
BOGSERINGSANVISNINGAR
I mittenlage (neutralage)
Max hastighet 10 Km/tim
Max stracka 8 km
4 275 233 M1
3
8
WARNING
Before working on the tractor, disconnect negative leads to all batteries.
WARNING
Before removing any battery, disconnect all negative leads before positive leads.
DO NOT REMOVE OR OBSCURE DECAL 3595679 M1
CAUTION
Keep all shields, covers and guards fastened in place while engine is running.
WARNING
Beware hot parts
DO NOT REMOVE OR OBSCURE DECAL 3595678 M1
10
9

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3618264M1 | 1 | Decal |
| 2 | 4275286M1 | 1 | Decal |
| 3 | 4275233M1 | 1 | Decal |
| 4 | 4271915M1 | 1 | Decal |
| 5 | 3713699M1 | 1 | Decal |
| 6 | 3595685M1 | 1 | Decal |
| 7 | 2752579M1 | 1 | Decal |
| 8 | 3595679M1 | 1 | Decal |
| 9 | 3595678M1 | 1 | Decal |
| 10 | 3782489M1 | 1 | Decal |
| 11 | 3618260M1 | 1 | Decal |
| 12 | 3618261M1 | 1 | Decal |
| 13 | 3618262M1 | 1 | Decal |

1-WR13-036-A

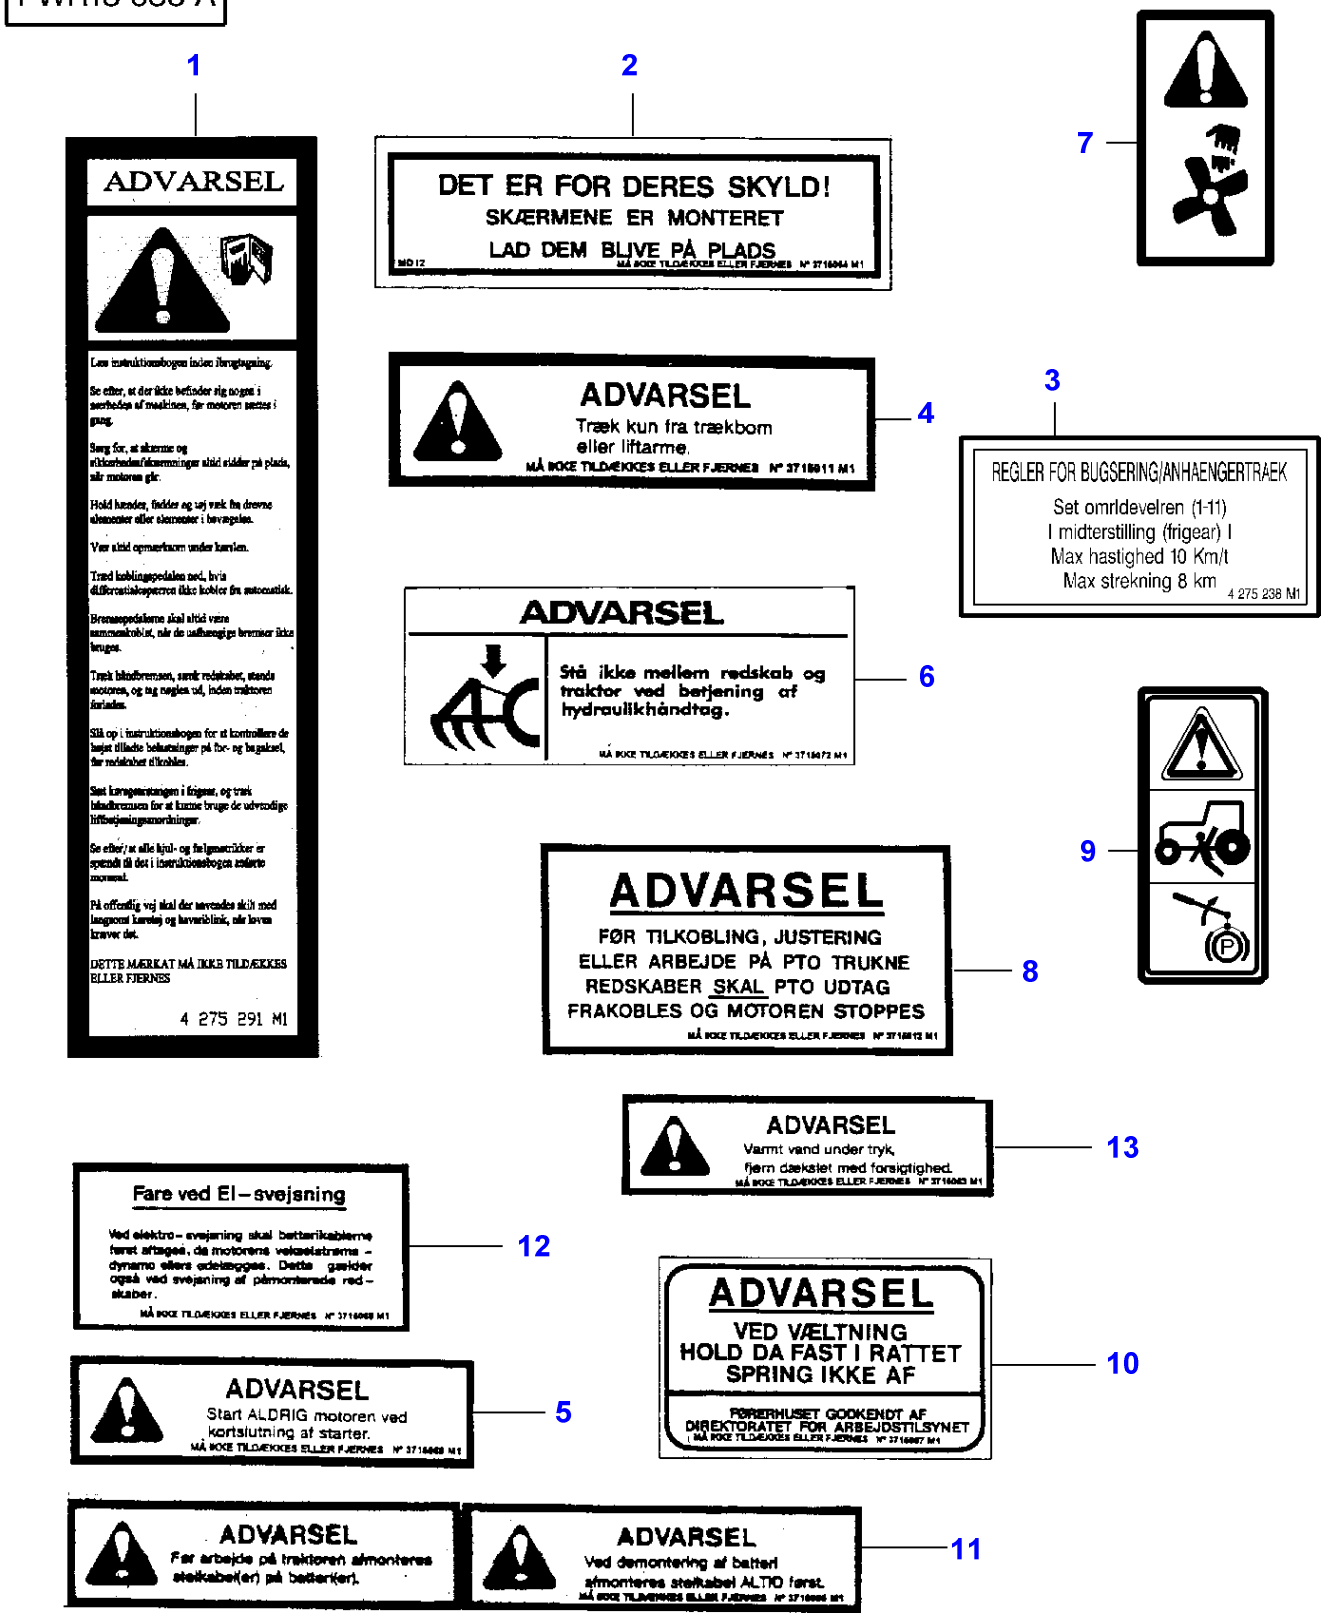

1
ADVARSEL
Læs instruktionsbogen inden ibrugtagning.
Se efter, at der ikke befinder sig nogen i nærheden af maskinen, før motoren startes i gang.
Sørg for, at skærme og sikkerhedsafskærmninger altid sidder på plads, når motoren går.
Hold hænder, fødder og tøj væk fra drevne elementer eller elementer i bevægelse.
Vær altid opmærksom under kørslen.
Træd koblingspedalen ned, hvis differentialespærren ikke kobler fra automatisk.
Bremsepedalerne skal altid være sammenkoblet, når der udføres bremser ikke bruges.
Træk håndbremsen, samt redskaber, stands motoren, og tag nøglen ud, inden traktoren forlades.
Slå op i instruktionsbogen for at kontrollere de højst tilladte belastninger på for- og bagaksel, før redskaber tilkobles.
Sæt kørepedalen i frigear, og træk håndbremsen for at kunne bruge de udvendige liftbetjeningsanordninger.
Se efter, at alle hjul- og fælgmøtrikker er spændt til det i instruktionsbogen anførte moment.
På offentlig vej skal der anvendes skilt med langsomt køretøj og havariblink, når loven kræver det.
DETTE MÆRKAT MÅ IKKE TILDÆKKES ELLER FJERNES
4 275 291 M1
2
DET ER FOR DERES SKYLD!
SKÆRMENE ER MONTERET
LAD DEM BLIVE PÅ PLADS
MÅ IKKE TILDÆKKES ELLER FJERNES
7
ADVARSEL
Træk kun fra trækbom eller liftarme.
MÅ IKKE TILDÆKKES ELLER FJERNES
4
3
REGLER FOR BUGSERING/ANHAENGERTRAEK
Set omrldevelren (1-11)
I midterstilling (frigear) I
Max hastighed 10 Km/t
Max strekning 8 km
4 275 238 M1
ADVARSEL
Stå ikke mellem redskab og traktor ved betjening af hydraulikhåndtag.
6
9
ADVARSEL
FØR TILKOBLING, JUSTERING ELLER ARBEJDE PÅ PTO TRUKNE REDSKABER SKAL PTO UDTAG FRAKOBLES OG MOTOREN STOPPES
8
ADVARSEL
Varmt vand under tryk, fjern dækslet med forsigtighed.
13
Fare ved El – svejsning
Ved elektro – svejsning skal batterikablerne først aftages, da motorens vekselstrøms – dynamo ellers ødelægges. Dette gælder også ved svejsning af påmonterede red – skaber.
12
ADVARSEL
VED VÆLTNING HOLD DA FAST I RATTET SPRING IKKE AF
FØRERHUSET GODKENDT AF DIREKTORATET FOR ARBEJDSTILSYNET
10
ADVARSEL
Start ALDRIG motoren ved kortslutning af starter.
5
ADVARSEL
Før arbejde på traktoren afmonteres stelkabel(er) på batteri(er).
ADVARSEL
Ved demontering af batteri afmonteres stelkabel ALTID først.
11

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 4275291M1 | 1 | Decal |
| 2 | 3715064M1 | 1 | Decal |
| 3 | 4275238M1 | 1 | Decal |
| 4 | 3715011M1 | 1 | Decal |
| 5 | 3715069M1 | 1 | Decal |
| 6 | 3715072M1 | 1 | Decal |
| 7 | 4271915M1 | 1 | Decal |
| 8 | 3715012M1 | 1 | Decal |
| 9 | 3782489M1 | 1 | Decal |
| 10 | 3715067M1 | 1 | Decal |
| 11 | 3715065M1 | 1 | Decal |
| 12 | 3715068M1 | 1 | Decal |
| 13 | 3715063M1 | 1 | Decal |

1-WR13-037-A

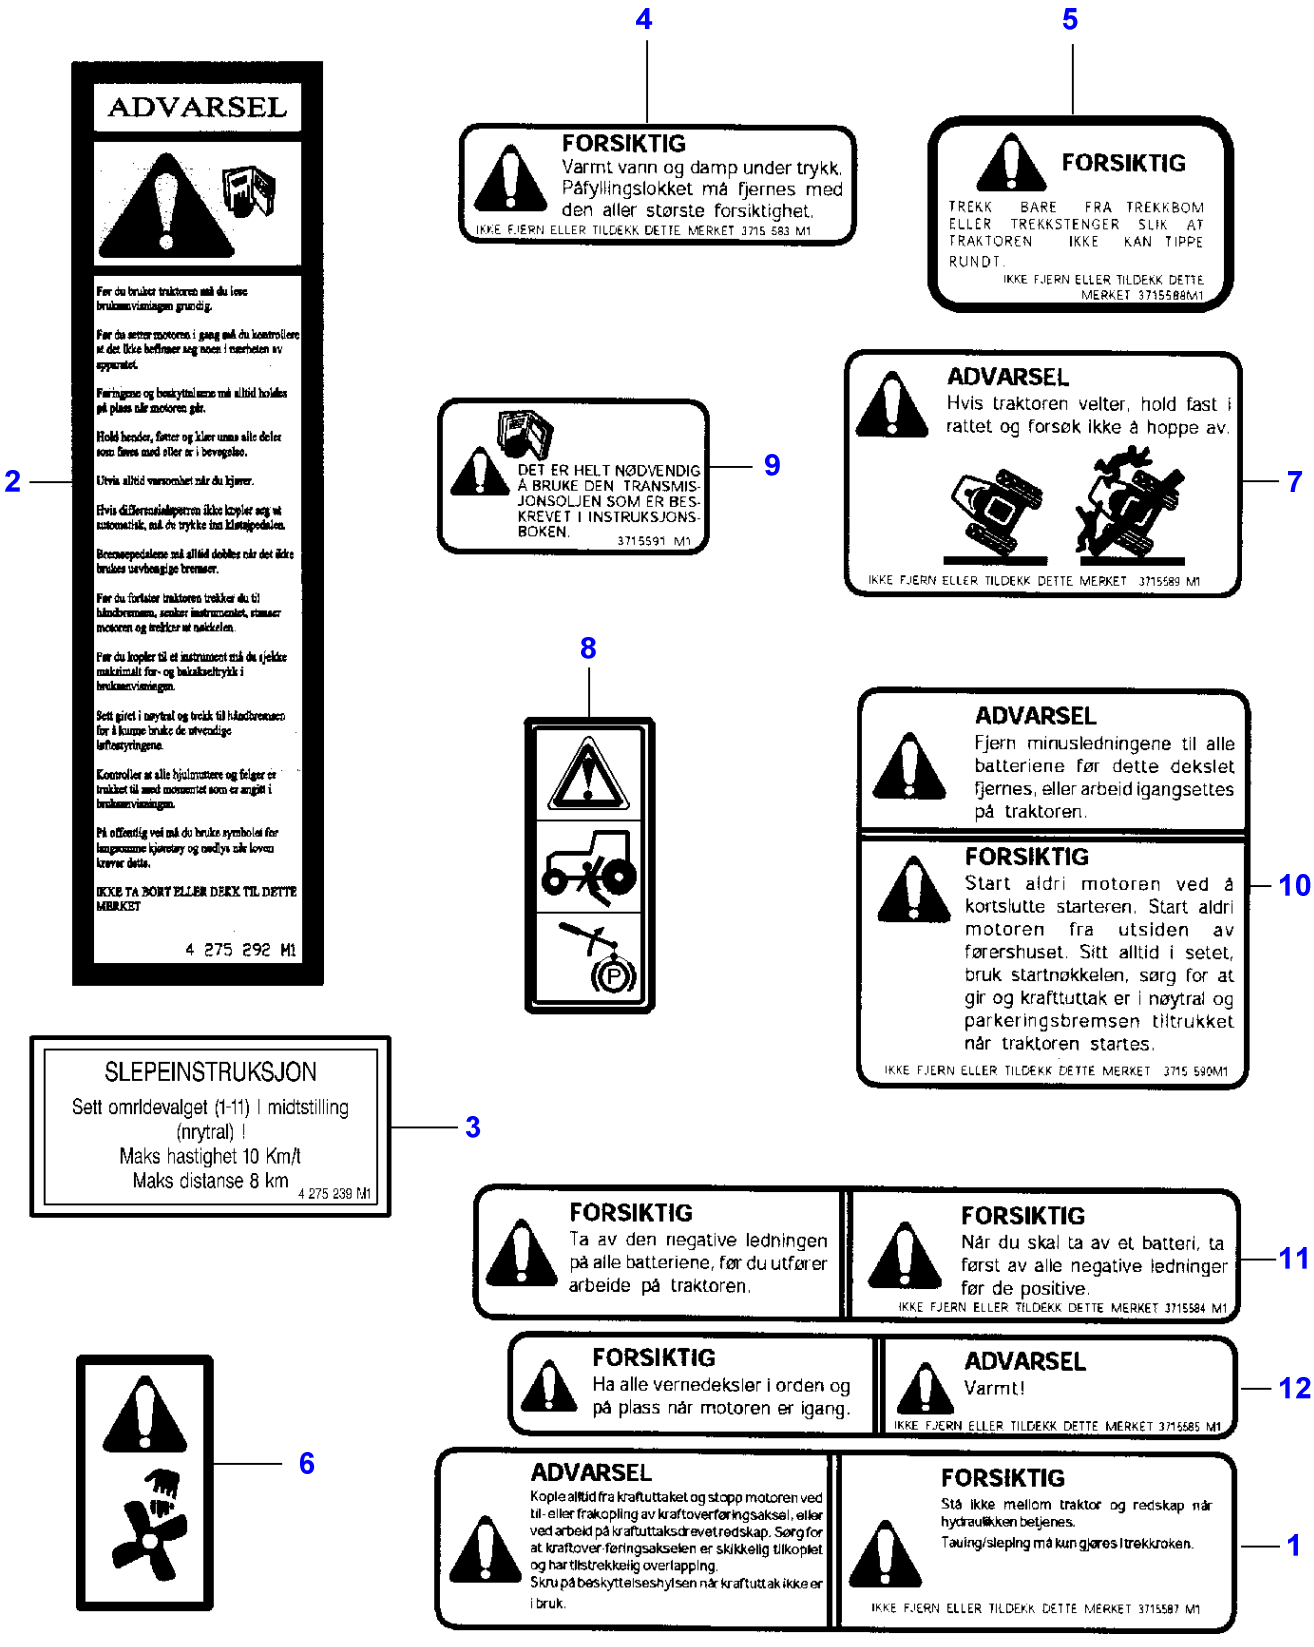

4
5
ADVARSEL
Før du bruker traktoren må du lese bruksanvisningen grundig.
Før du setter motoren i gang må du kontrollere at det ikke befinner seg noen i nærheten av apparatet.
Føringene og beskyttelsene må alltid holdes på plass når motoren går.
Hold hender, føtter og klær unna alle deler som finnes med eller er i bevegelse.
Utvis alltid varsomhet når du kjører.
Hvis differensialsperren ikke kopler seg ut automatisk, må du trykke inn klutsjpedalen.
Bremsepedalene må alltid dobles når det ikke brukes uavhengige bremser.
Før du forlater traktoren trekker du til håndbremsen, senker instrumentet, stanser motoren og trekker ut nøkkelen.
Før du kopler til et instrument må du tjekke maksimalt for- og bakaksletrykk i bruksanvisningen.
Sett giret i nøytral og trekk til håndbremsen for å kunne bruke de utvendige løftestyringene.
Kontroller at alle hjulmuttere og felger er trukket til med momentet som er angitt i bruksanvisningen.
På offentlig vei må du bruke symboler for langsomme kjøretøy og endlys når loven krever dette.
IKKE TA BORT ELLER DEKK TIL DETTE MERKET
4 275 292 M1
FORSIKTIG
Varmt vann og damp under trykk. Påfyllingslokket må fjernes med den aller største forsiktighet.
IKKE FJERN ELLER TILDEKK DETTE MERKET 3715 583 M1
FORSIKTIG
TREKK BARE FRA TREKKBOM ELLER TREKKSTENGER SLIK AT TRAKTOREN IKKE KAN TIPPE RUNDT.
IKKE FJERN ELLER TILDEKK DETTE MERKET 3715588M1
2
DET ER HELT NØDVENDIG Å BRUKE DEN TRANSMISJONSOLJEN SOM ER BESKREVET I INSTRUKSJONSBOKEN.
3715591 M1
9
ADVARSEL
Hvis traktoren velter, hold fast i rattet og forsøk ikke å hoppe av.
IKKE FJERN ELLER TILDEKK DETTE MERKET 3715589 M1
7
8
ADVARSEL
Fjern minusledningene til alle batteriene før dette dekslet fjernes, eller arbeid igangsettes på traktoren.
FORSIKTIG
Start aldri motoren ved å kortslutte starteren. Start aldri motoren fra utsiden av førershuset. Sitt alltid i setet, bruk startnøkkelen, sørg for at gir og kraftuttak er i nøytral og parkeringsbremsen tiltrukket når traktoren startes.
IKKE FJERN ELLER TILDEKK DETTE MERKET 3715 590M1
10
SLEPEINSTRUKSJON
Sett omrldevalget (1-11) I midtstilling (nrytral) !
Maks hastighet 10 Km/t
Maks distanse 8 km
4 275 239 M1
3
FORSIKTIG
Ta av den negative ledningen på alle batteriene, før du utfører arbeide på traktoren.
FORSIKTIG
Når du skal ta av et batteri, ta først av alle negative ledninger før de positive.
IKKE FJERN ELLER TILDEKK DETTE MERKET 3715584 M1
11
FORSIKTIG
Ha alle vernedeksler i orden og på plass når motoren er igang.
ADVARSEL
Varmt!
IKKE FJERN ELLER TILDEKK DETTE MERKET 3715585 M1
12
6
ADVARSEL
Kople alltid fra kraftuttaket og stopp motoren ved til- eller frakopling av kraftoverføringsaksel, eller ved arbeid på kraftuttaksdrevet redskap. Sørg for at kraftover-føringsakselen er skikkelig tilkoplet og har tilstrekkelig overlapping.
Skru på beskyttelseshylsen når kraftuttak ikke er i bruk.
FORSIKTIG
Stå ikke mellom traktor og redskap når hydraulikken betjenes.
Tauing/sleping må kun gjøres i trekkroken.
IKKE FJERN ELLER TILDEKK DETTE MERKET 3715587 M1
1

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3715587M1 | 1 | Decal |
| 2 | 4275292M1 | 1 | Decal |
| 3 | 4275239M1 | 1 | Decal |
| 4 | 3715583M1 | 1 | Decal |
| 5 | 3715588M1 | 1 | Decal |
| 6 | 4271915M1 | 1 | Decal |
| 7 | 3715589M1 | 1 | Decal |
| 8 | 3782489M1 | 1 | Decal |
| 9 | 3715591M1 | 1 | Decal |
| 10 | 3715590M1 | 1 | Decal |
| 11 | 3715584M1 | 1 | Decal |
| 12 | 3715585M1 | 1 | Decal |

1-WR06-009-A

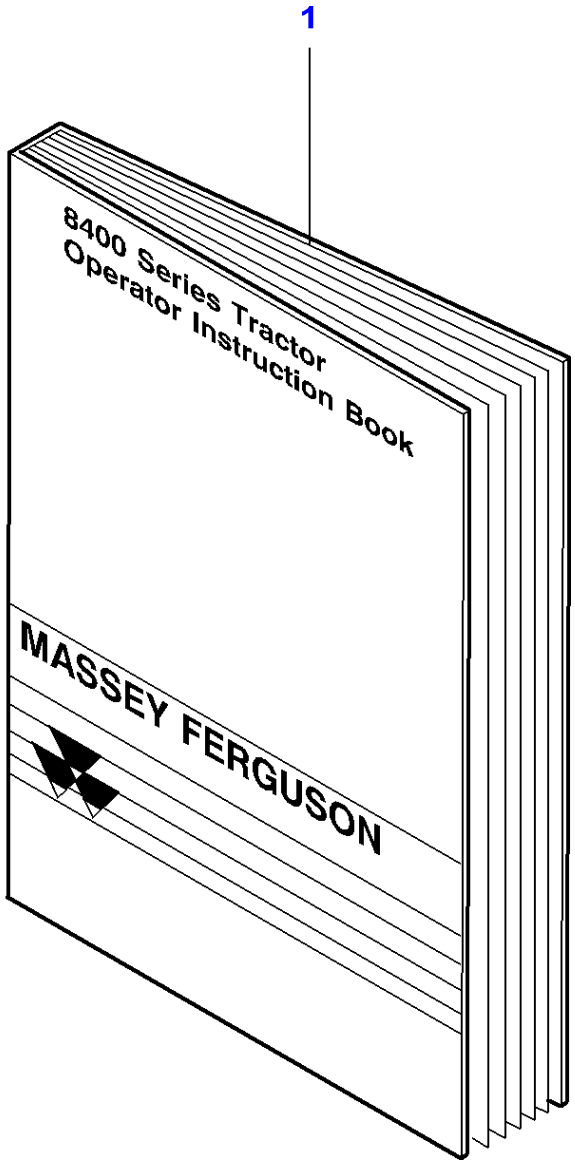

1
8400 Series Tractor
Operator Instruction Book
MASSEY FERGUSON

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3378486M1 | 1 | Instruction Book | For UK only or any text in English only |
| | 3378485M1 | 1 | Instruction Book | For France only or any text in French only |
| | 3378487M1 | 1 | Instruction Book | For Germany only or any text in German only |
| | 3378489M1 | 1 | Instruction Book | For Italy only or any text in Italian only |
| | 3378491M1 | 1 | Instruction Book | For Norway |
| | 3378492M1 | 1 | Instruction Book | For Sweden |
| | 3378488M1 | 1 | Instruction Book | [A] |
| | 3378490M1 | 1 | Instruction Book | [B] |
| | 3378593M1 | 1 | Instruction Book | For United States of America |


**FOOTNOTE [A]** SPAIN
**FOOTNOTE [B]** DENMARK

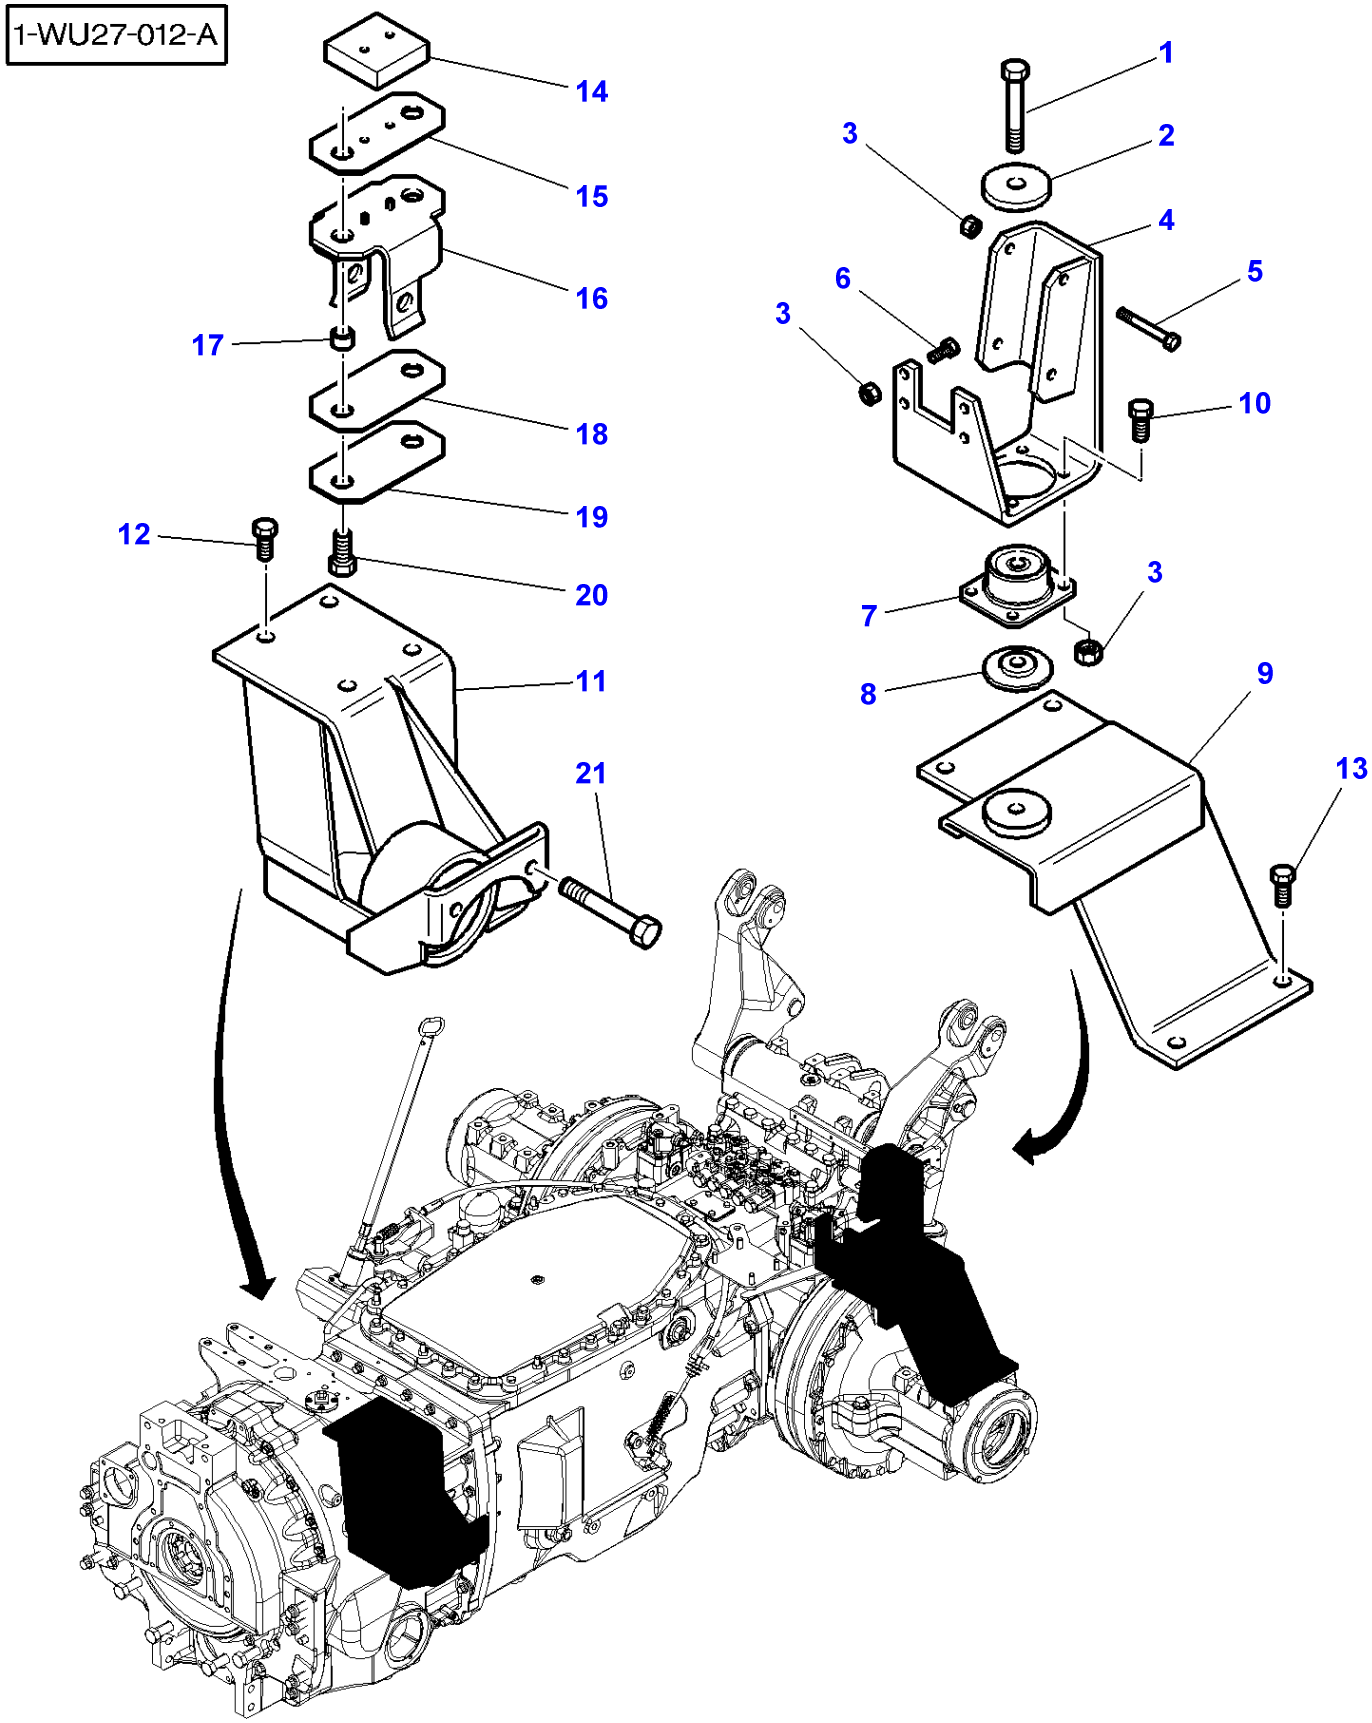
1-WU27-012-A
1
2
3
4
5
6
3
10
3
7
8
9
13
14
15
16
17
18
19
12
20
11
21

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 339182X1 | 2 | Hex. Sock. Screw | M16 X 90 |
| 2 | 3712809M2 | 2 | Spacer | Diameter 17-72 X 8 |
| 3 | 339402X1 | 20 | Nut | M10 |
| 4 | 3786991M3 | 1 | Foot | Left Hand |
| | 3786992M3 | 1 | Foot | Right Hand |
| 5 | 339234X1 | 4 | Hex. Sock. Screw | M10 X 120 |
| 6 | 3009493X1 | 8 | Hex. Sock. Screw | M10 X 30 |
| 7 | 3712693M1 | 2 | Vibration Mount | 2000N |
| 8 | 3388272M1 | 2 | Washer | Diameter 17-38-75 |
| 9 | 4274927M2 | 1 | Support | Left Hand |
| | 4274928M1 | 1 | Support | Right Hand |
| 10 | 3009492X1 | 8 | Hex. Sock. Screw | M10 X 25 |
| 11 | 4276062M94 | 1 | Support | Left Hand |
| | 4276063M94 | 1 | Support | Right Hand |
| 12 | 339275X1 | 8 | Hex. Sock. Screw | M16 X 35 |
| 13 | 3009132X1 | 4 | Hex. Sock. Screw | M16 X 50 |
| 14 | 4271078M1 | 2 | Plate | |
| 15 | 4274223M1 | 2 | Plate | Thickness 3 MM |
| 16 | 3787080M4 | 2 | Support | |
| 17 | 4274225M91 | 4 | Spacer | |
| 18 | 4275620M1 | 2 | Plate | Thickness 4 MM |
| 19 | 4279533M1 | 2 | Plate | Thickness 5 MM |
| 20 | 390419X1 | 4 | Hex. Sock. Screw | M16 X 40 |
| 21 | 391914X1 | 2 | Hex. Sock. Screw | M20 X 110 |

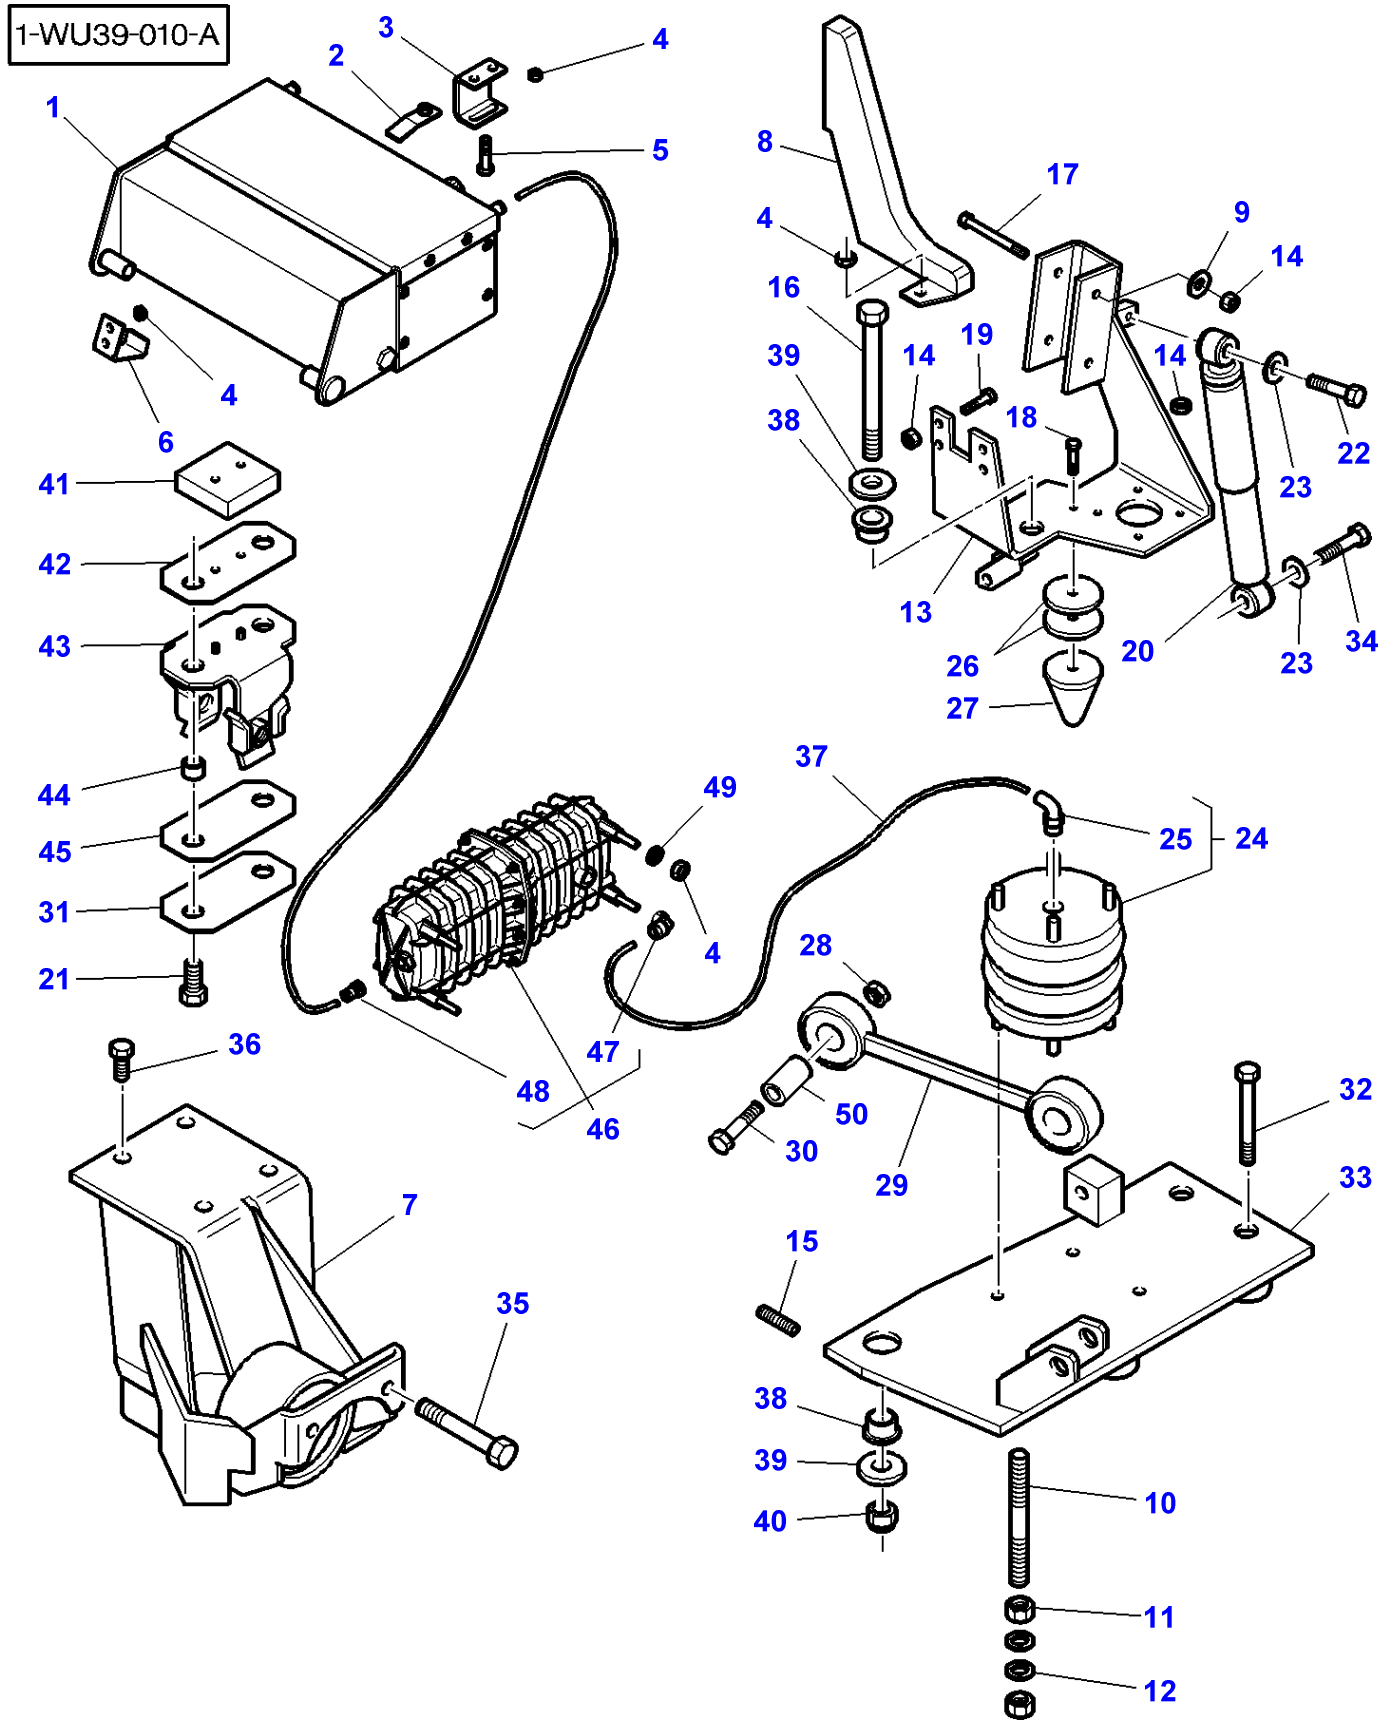
1-WU39-010-A
1
2
3
4
5
6
4
41
42
43
44
45
31
21
36
7
35
48
46
47
49
4
8
4
16
39
38
17
9
14
19
14
14
18
22
23
13
26
27
20
23
34
37
25
24
28
50
30
29
32
33
15
38
39
40
10
11
12


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Cab Mountings - With Suspension Page 110-0010

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787065M92 | 1 | Control Box | See Page - Reference Number 110-0015 |
| 2 | 3789906M2 | 1 | Support | |
| 3 | 3789905M2 | 1 | Support | |
| 4 | 339169X1 | 12 | Nut | M8 |
| | 394367X1 | X | Locknut | [A]<br>M8 |
| 5 | 339123X1 | 7 | Hex. Sock. Screw | M8 X 20 |
| 6 | 3789904M1 | 2 | Hinge | |
| 7 | 4279013M92 | 1 | Support | Left Hand |
| | 4279014M92 | 1 | Support | Right Hand |
| 8 | 4278784M2 | 1 | Cowl | Right Hand |
| | 4278785M2 | 1 | Cowl | Left Hand |
| 9 | 385362X1 | 8 | Washer | |
| 10 | 3786267M1 | 2 | Stem | M16 X 300 |
| 11 | 339034X1 | 4 | Nut | M16 |
| 12 | 3010875X1 | 4 | Washer | Diameter 16-30 X 5 |
| 13 | 4274968M1 | 1 | Foot | Left Hand |
| | 4274969M1 | 1 | Foot | Right Hand |
| 14 | 339402X1 | 8 | Nut | M10 |
| 15 | 4279690M1 | 2 | Stem | M16 X 55 |
| 16 | 3010613X1 | 2 | Hex. Sock. Screw | M20 X 280 |
| 17 | 339234X1 | 4 | Hex. Sock. Screw | M10 X 120 |
| 18 | 339291X1 | 2 | Hex. Sock. Screw | M8 X 55 |
| 19 | 3009493X1 | 8 | Hex. Sock. Screw | M10 X 30 |
| 20 | 4279945M1 | 2 | Shock Absorber | |
| 21 | 391120X1 | 4 | Hex. Sock. Screw | M16 X 45 |
| 22 | 3009515X1 | 2 | Hex. Sock. Screw | M12 X 80 |
| 23 | 391212X1 | 4 | Washer | Diameter 13-37 X 3 |
| 24 | **4273315M91** | 2 | Shock Absorber | |
| 25 | 4271561M1 | 1 | Union | (24) |
| 26 | 3787081M1 | 4 | Chock | |
| 27 | 4274350M1 | 2 | Stop | |
| 28 | 339034X1 | 4 | Nut | M16 |
| 29 | 4273003M92 | 2 | Linkage | |
| 30 | 3019865X1 | 4 | Hex. Sock. Screw | M16 X 75 |
| 31 | 4279533M1 | 2 | Plate | Thickness 5 MM |
| 32 | 339182X1 | 4 | Hex. Sock. Screw | M16 X 90 |
| 33 | 4274970M1 | 1 | Support | Left Hand |
| | 4274971M1 | 1 | Support | Right Hand |
| 34 | 3009512X1 | 2 | Hex. Sock. Screw | M12 X 60 |
| 35 | 391914X1 | 2 | Hex. Sock. Screw | M20 X 110 |
| 36 | 390419X1 | 8 | Hex. Sock. Screw | M16 X 40 |
| 37 | 4278783M1 | 2 | Hydr. Hose | |
| 38 | 3787068M1 | 4 | Bearing Carrier | |
| 39 | 3787069M1 | 4 | Thrust Washer | |
| 40 | 3010067X1 | 2 | Locknut | M20 |
| 41 | 4271078M1 | 2 | Plate | |
| 42 | 4274223M1 | 2 | Plate | Thickness 3 MM |
| 43 | 4278827M92 | 2 | Support | |
| 44 | 4274225M91 | 4 | Spacer | |
| 45 | 4275620M1 | 2 | Plate | Thickness 4 MM |
| 46 | 4273332M92 | 2 | Accumulator | 2 L |
| 47 | 4274577M1 | 1 | Union | (46) |
| 48 | 4273336M1 | 1 | Union | (46) |
| 49 | 390597X1 | 6 | Washer | Diameter 10-30 X 2,5 |
| 50 | 4275897M1 | 4 | Spacer | |

**FOOTNOTE [A]** CHECK NUT

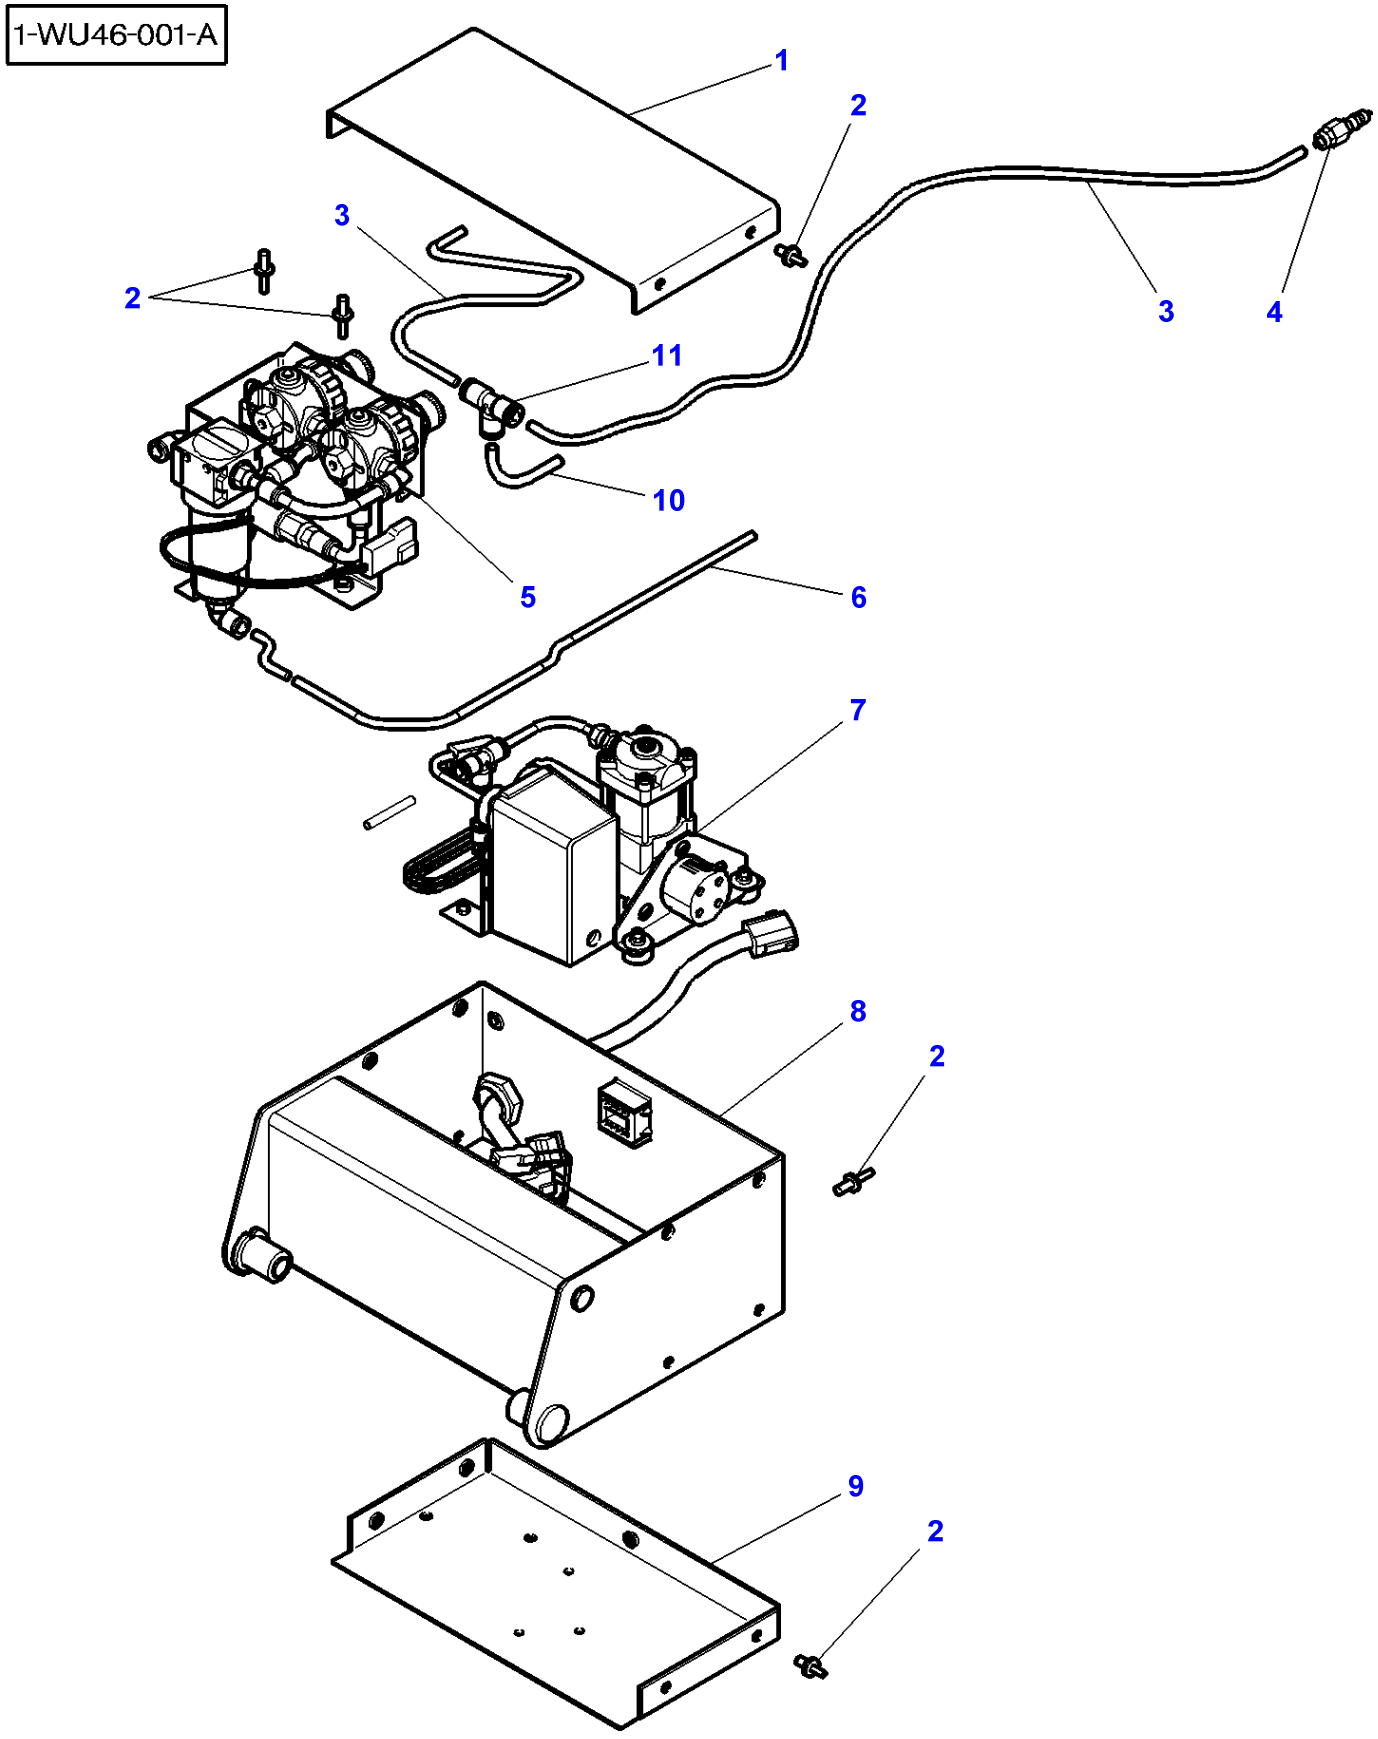

1-WU46-001-A
1
2
3
2
3
4
11
10
5
6
7
8
2
9
2

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275950M1 | 1 | Cover | |
| 2 | 3007920X1 | 11 | Screw | M6 X 12 |
| 3 | | 2 | Tube | Not serviced,order REF. 6 |
| 4 | 4275874M91 | 1 | Blow Off Valve | |
| 5 | | 1 | Kit, Air Cleaner | See Page - Reference Number 110-0020 |
| 6 | 4275963M1 | 1 | Pipe | |
| 7 | | 1 | Compressor | See Page - Reference Number 110-0025 |
| 8 | | 1 | Air Tank | See Page - Reference Number 110-0030 |
| 9 | 4275951M1 | 1 | Plate | |
| 10 | | 1 | Exhaust Pipe | Not serviced,order REF. 6 |
| 11 | 4275947M1 | 1 | Union | |

1-WU46-005-A

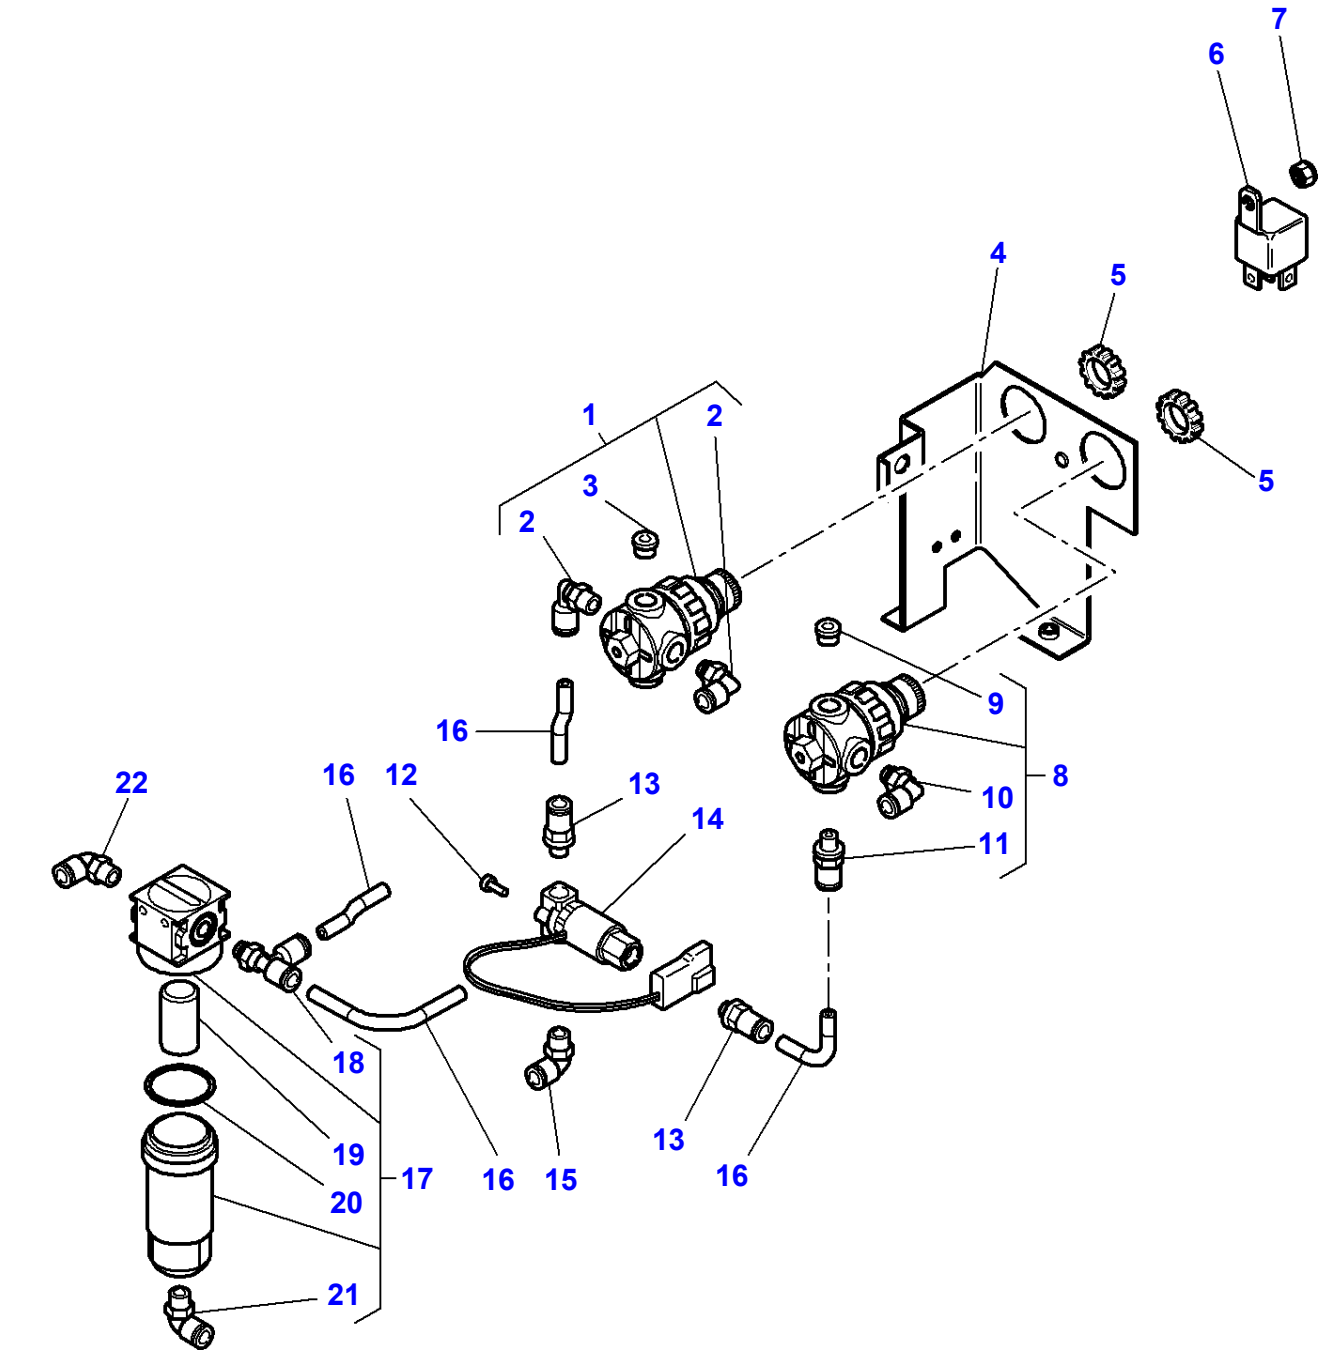


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275825M91 | 1 | Regulator | 2,65 BAR |
| 2 | 4275911M1 | 2 | Union | (1)<br>1/8"- 6/4 |
| 3 | 4275909M1 | 1 | Plug | (1)<br>1/8" |
| 4 | 4275921M1 | 1 | Plate | |
| 5 | 3907551M1 | 2 | Nut | |
| 6 | 4275922M1 | 1 | Relay | |
| 7 | 3019139X1 | 1 | Nut | |
| 8 | 4275824M91 | 1 | Regulator | 2,10 BAR |
| 9 | 4275909M1 | 1 | Plug | (8)<br>1/8" |
| 10 | 4275911M1 | 1 | Union | (8)<br>1/8"- 6/4 |
| 11 | 4273336M1 | 1 | Union | (8)<br>1/8"- 6/4 |
| 12 | 3019880X1 | 2 | Screw Metric | M4 X 12 |
| 13 | 4273336M1 | 2 | Union | |
| 14 | 4275916M1 | 1 | Electrovalve | |
| 15 | 4275911M1 | 1 | Union | |
| 16 | 4275963M1 | X | Pipe | [A]<br>Length 1135MM |
| 17 | 4275814M91 | 1 | Filter | |
| 18 | 4275914M1 | 1 | Teepiece | (17) |
| 19 | 4276397M1 | 1 | Filter Insert | (17) |
| 20 | 4276396M1 | 1 | O Ring | (17) |
| 21 | 4275911M1 | 1 | Union | (17) |
| 22 | 4275911M1 | 1 | Union | |

**FOOTNOTE [A]** CUT TO REQUIRED LENGTH

1-WU46-003-B

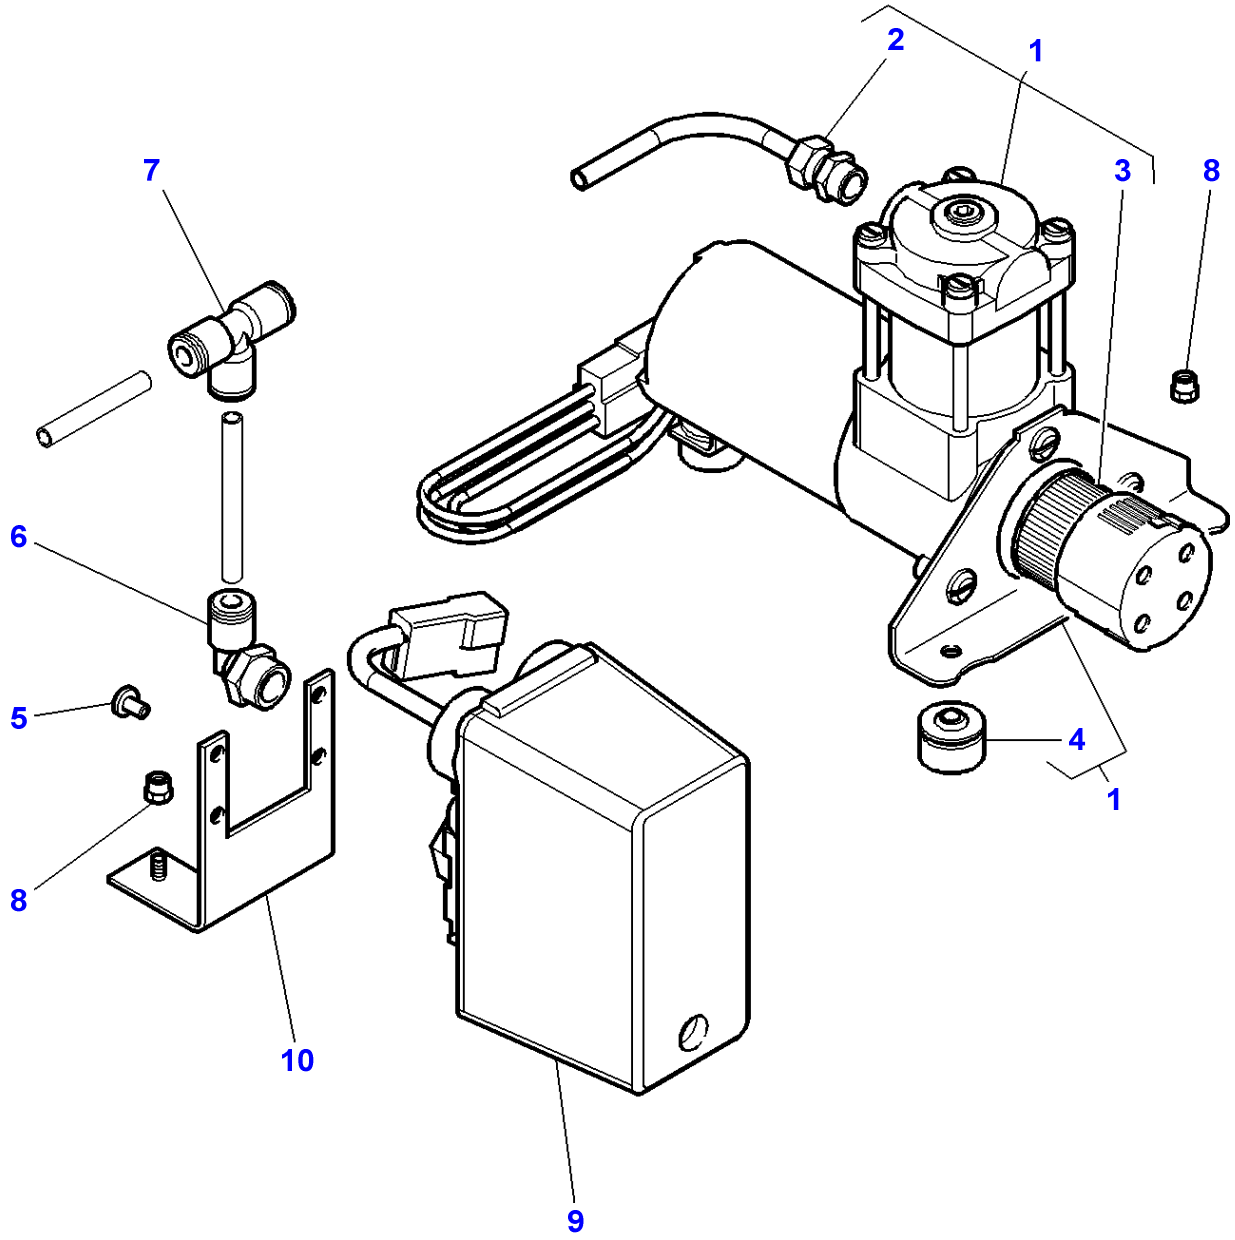


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275812M91 | 1 | Compressor | |
| 2 | 4277531M91 | 1 | Tube | (1) |
| 3 | 4277532M91 | 1 | Filter | (1) |
| 4 | 4275977M1 | 2 | Vibration Mount | (1) |
| 5 | 3009530X1 | 2 | Screw | |
| 6 | 4275942M1 | 1 | Union | |
| 7 | 4275947M1 | 1 | Union | |
| 8 | 3019139X1 | 5 | Nut | |
| 9 | 4275943M91 | 1 | Regulator | |
| 10 | 4275944M1 | 1 | Angle. | |


1-WU46-004-A

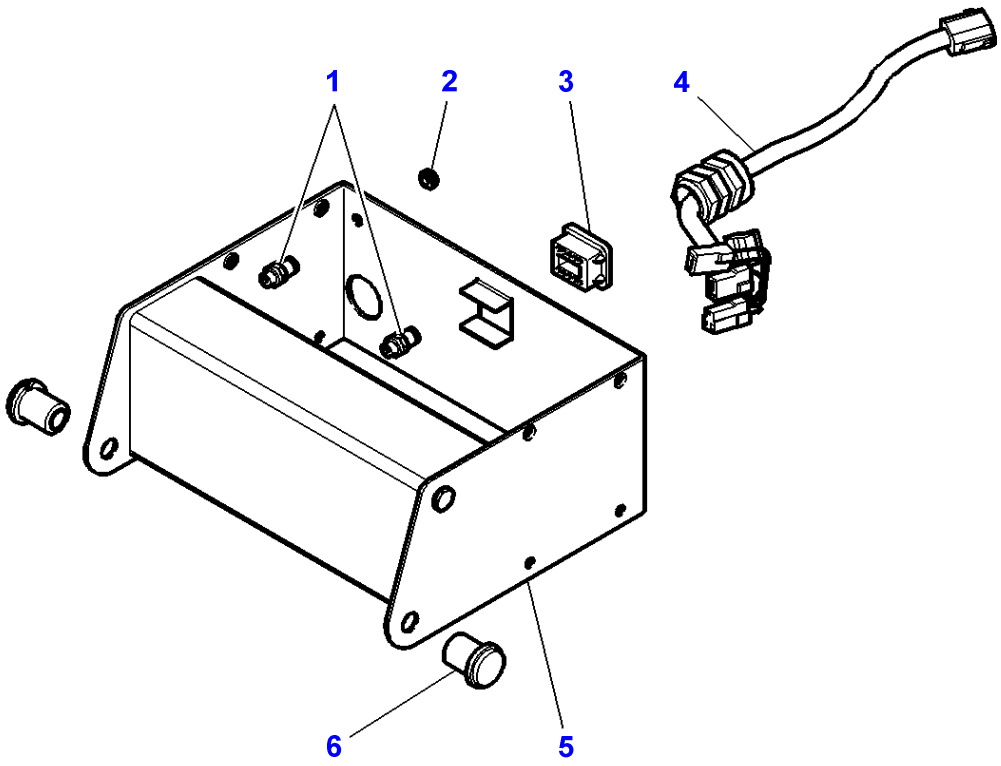

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 4273336M1 | 2 | Union |
| 2 | 4275937M1 | 3 | Grommet |
| 3 | 4275939M1 | 1 | Latch |
| 4 | 4275910M1 | 1 | Harness |
| 5 | 4274301M1 | 1 | Box |
| 6 | 4275938M1 | 2 | Sleeve |

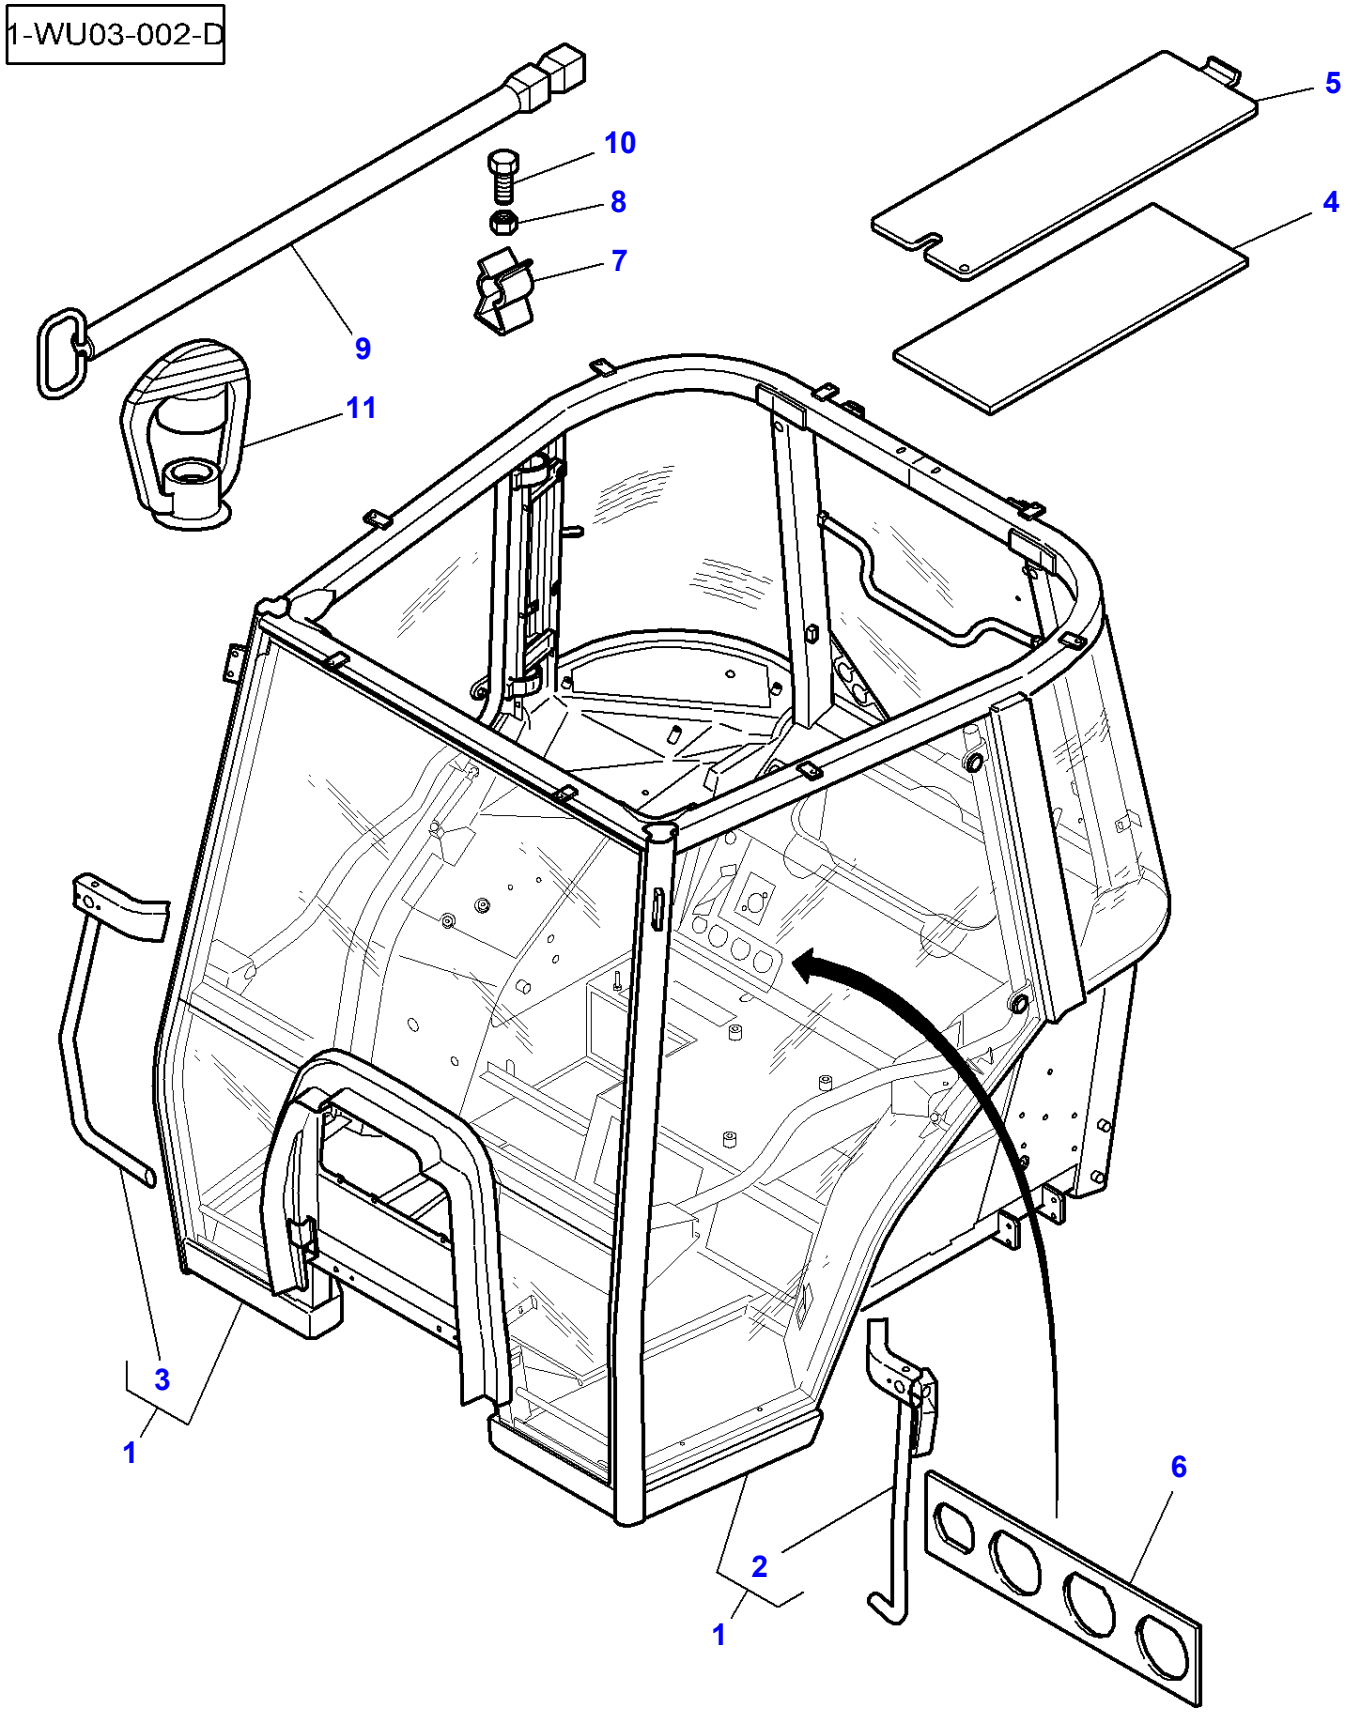

1-WU03-002-D
5
4
10
8
7
9
11
3
1
2
1
6

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4279923M91 | 1 | Cab | [B] |
| | 4279924M91 | 1 | Cab | [C] |
| 2 | 3907537M1 | 1 | Guideway | (1)<br>Left Hand |
| 3 | 3907481M1 | 1 | Guideway | (1)<br>Right Hand |
| 4 | 4273198M1 | 1 | Foam | |
| 5 | 4273193M1 | 1 | Trap | |
| 6 | 4276716M1 | 1 | Shield | Up to Serial or Engine Number ..... |
| 7 | 4276502M1 | 2 | Clip | |
| 8 | 339169X1 | 2 | Nut | Up to Serial or Engine Number 03-2005<br>M8 |
| 9 | G701.100.090.800 | 1 | Tool | |
| 10 | 3009285X1 | 2 | Screw | From Serial or Engine Number 03-2005<br>M8 X 16 |
| 11 | 3617859M1 | 1 | Helmet | From Serial or Engine Number 03-2005 |

**FOOTNOTE [A]** WITH 50KPH TRACTOR
**FOOTNOTE [B]** WITH FRONT SCREEN 5MM
**FOOTNOTE [C]** WITH FRONT SCREEN 6MM

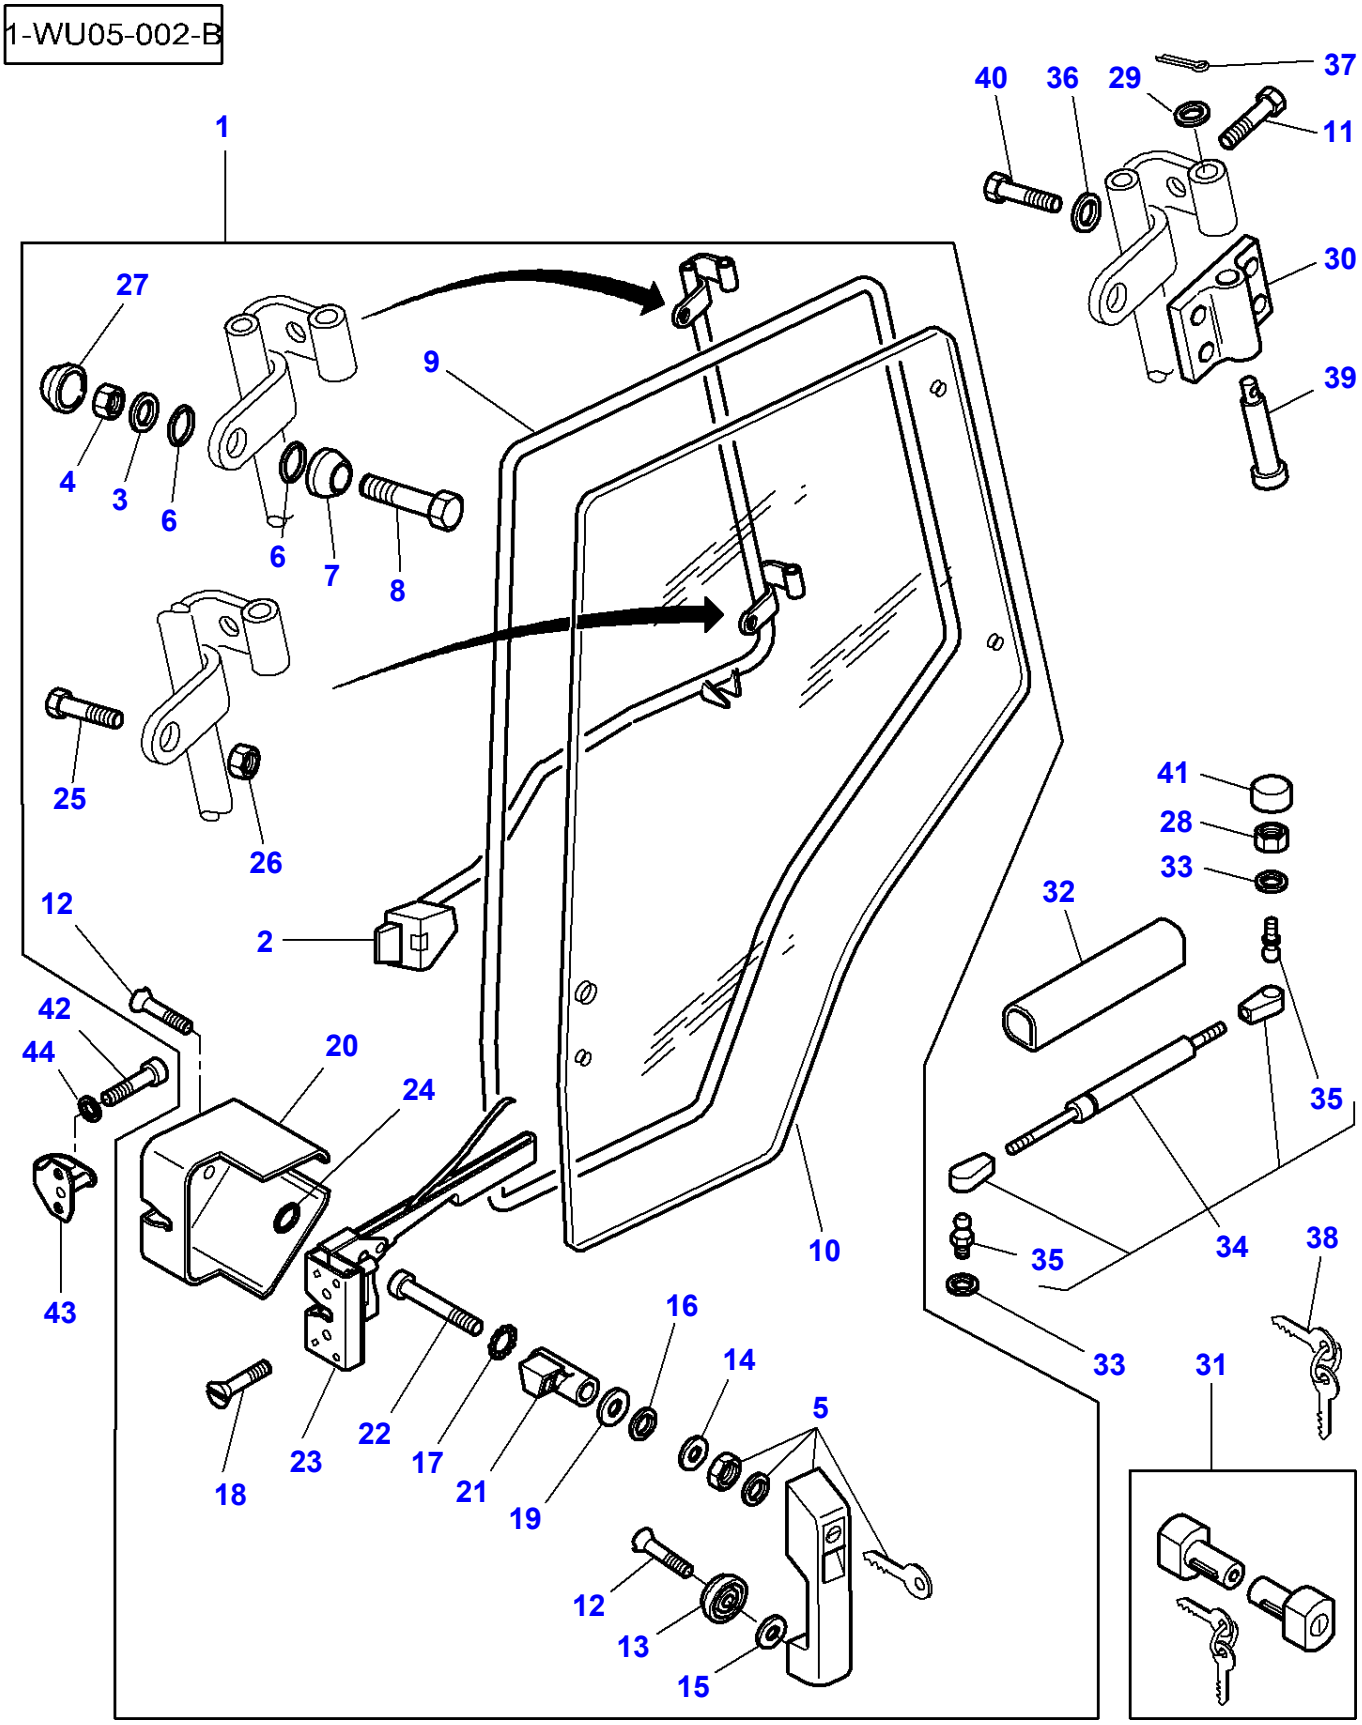
1-WU05-002-B
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44

**Massey Ferguson**

## MF 8470/8480 TRACTOR - 1637446



**Doors**




| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275243M92 | 1 | Gate | Right Hand |
| | 4275242M91 | 1 | Gate | Left Hand |
| 2 | 4272772M1 | 1 | Guideway | (1)<br>Left Hand |
| | 4272773M2 | 1 | Guideway | (1)<br>Right Hand |
| 3 | 385361X1 | 2 | Washer | (1)<br>Diameter 9-17 X 3,2 |
| 4 | 394367X1 | 2 | Locknut | (1)<br>M8 |
| 5 | 3902356M91 | 1 | Handle | [A]<br>(1)<br>No 610 |
| 6 | 3902365M1 | 2 | Washer | (1)<br>Diameter 8-30 X 3 |
| 7 | 4276449M1 | 2 | Pedestal | (1) |
| 8 | 3009444X1 | 2 | Screw | (1)<br>M8 X 40 |
| 9 | 3902122M1 | 1 | Seal | (1) |
| 10 | 4272775M1 | 1 | Window | (1)<br>Right Hand |
| | 4272774M1 | 1 | Window | (1)<br>Left Hand |
| 11 | 1442900X1 | 1 | Screw | (1)<br>M8 X 55<br>Replace and repair. Old not interchangeable with new 3008857X1 |
| 12 | 3902411M1 | 2 | Screw | (1)<br>M6 X 16 |
| 13 | 3902145M1 | 1 | Skate | (1) |
| 14 | 3902366M1 | 1 | Washer | (1)<br>Diameter 28-42 X 2 |
| 15 | 3902367M1 | 1 | Washer | (1)<br>Diameter 5-18 X 1 |
| 16 | 3011035X1 | 1 | Washer | (1)<br>Diameter 6-12 X 1,5 |
| 17 | 391289X1 | 1 | Lock Washer | (1) |
| 18 | 3902498M1 | 2 | Screw Metric | (1)<br>M6 X 25 |
| 19 | 391038X1 | 1 | Washer | (1)<br>Diameter 6-18 X 1,5 |
| 20 | 4276448M1 | 1 | Muff | (1)<br>Right Hand |
| | 4276447M1 | 1 | Muff | (1)<br>Left Hand |
| 21 | 3903504M1 | 1 | Latch | (1) |
| 22 | 3001757X1 | 1 | Bolt | (1)<br>M6 X 40 |
| 23 | 3804663M1 | 1 | Latch | (1)<br>Left Hand |
| | 3804662M1 | 1 | Latch | (1)<br>Right Hand |
| 24 | 4276446M1 | 1 | Washer | (1)<br>Diameter 14-28 X 3 |
| 25 | 339091X1 | 1 | Hex. Sock. Screw | (1)<br>M8 X 45 |
| 26 | 339169X1 | 1 | Nut | (1)<br>M8 |
| 27 | 3616277M1 | 2 | Helmet | (1) |
| 28 | 339169X1 | 2 | Nut | M8 |
| 29 | 3903187M1 | 4 | Washer | Diameter 12-22 X 1,2 |
| 30 | 3902116M1 | 4 | Hinge | |
| 31 | 3902370M91 | 1 | Parts Pack | No 610 |
| 32 | 3902415M1 | 2 | Protector | |
| 33 | 391025X1 | 4 | Lock Washer | |
| 34 | **3902121M4** | 1 | Ram | Left Hand |
| | 4279925M1 | 1 | Ram | Right Hand |
| 35 | 3902773M1 | 2 | Toggle | (34) |
| 36 | 385361X1 | 16 | Washer | Diameter 9-17 X 3,2 |
| 37 | 1442963X1 | 4 | Split Pin | Diameter 2,5 X 32 |
| 38 | **3902584M91** | 1 | Kit, Spanner | |
| 39 | 3903186M1 | 4 | Clevis Pin | |
| 40 | 3902414M1 | 16 | Screw | M8 X 20 |

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 41 | 3616277M1 | 2 | Helmet | |
| 42 | 3010775X1 | 4 | Screw | M6 X 25 |
| 43 | 3902372M1 | 2 | Latch | |
| 44 | 391038X1 | 4 | Washer | Diameter 6-18 X 1,5 |

**FOOTNOTE [A]** NUMBER STAMPED ON THE LOCK
**FOOTNOTE [B]** CAB WITH FLAT BOTTOM
**FOOTNOTE [C]** CAB WITH TUNNEL BOTTOM

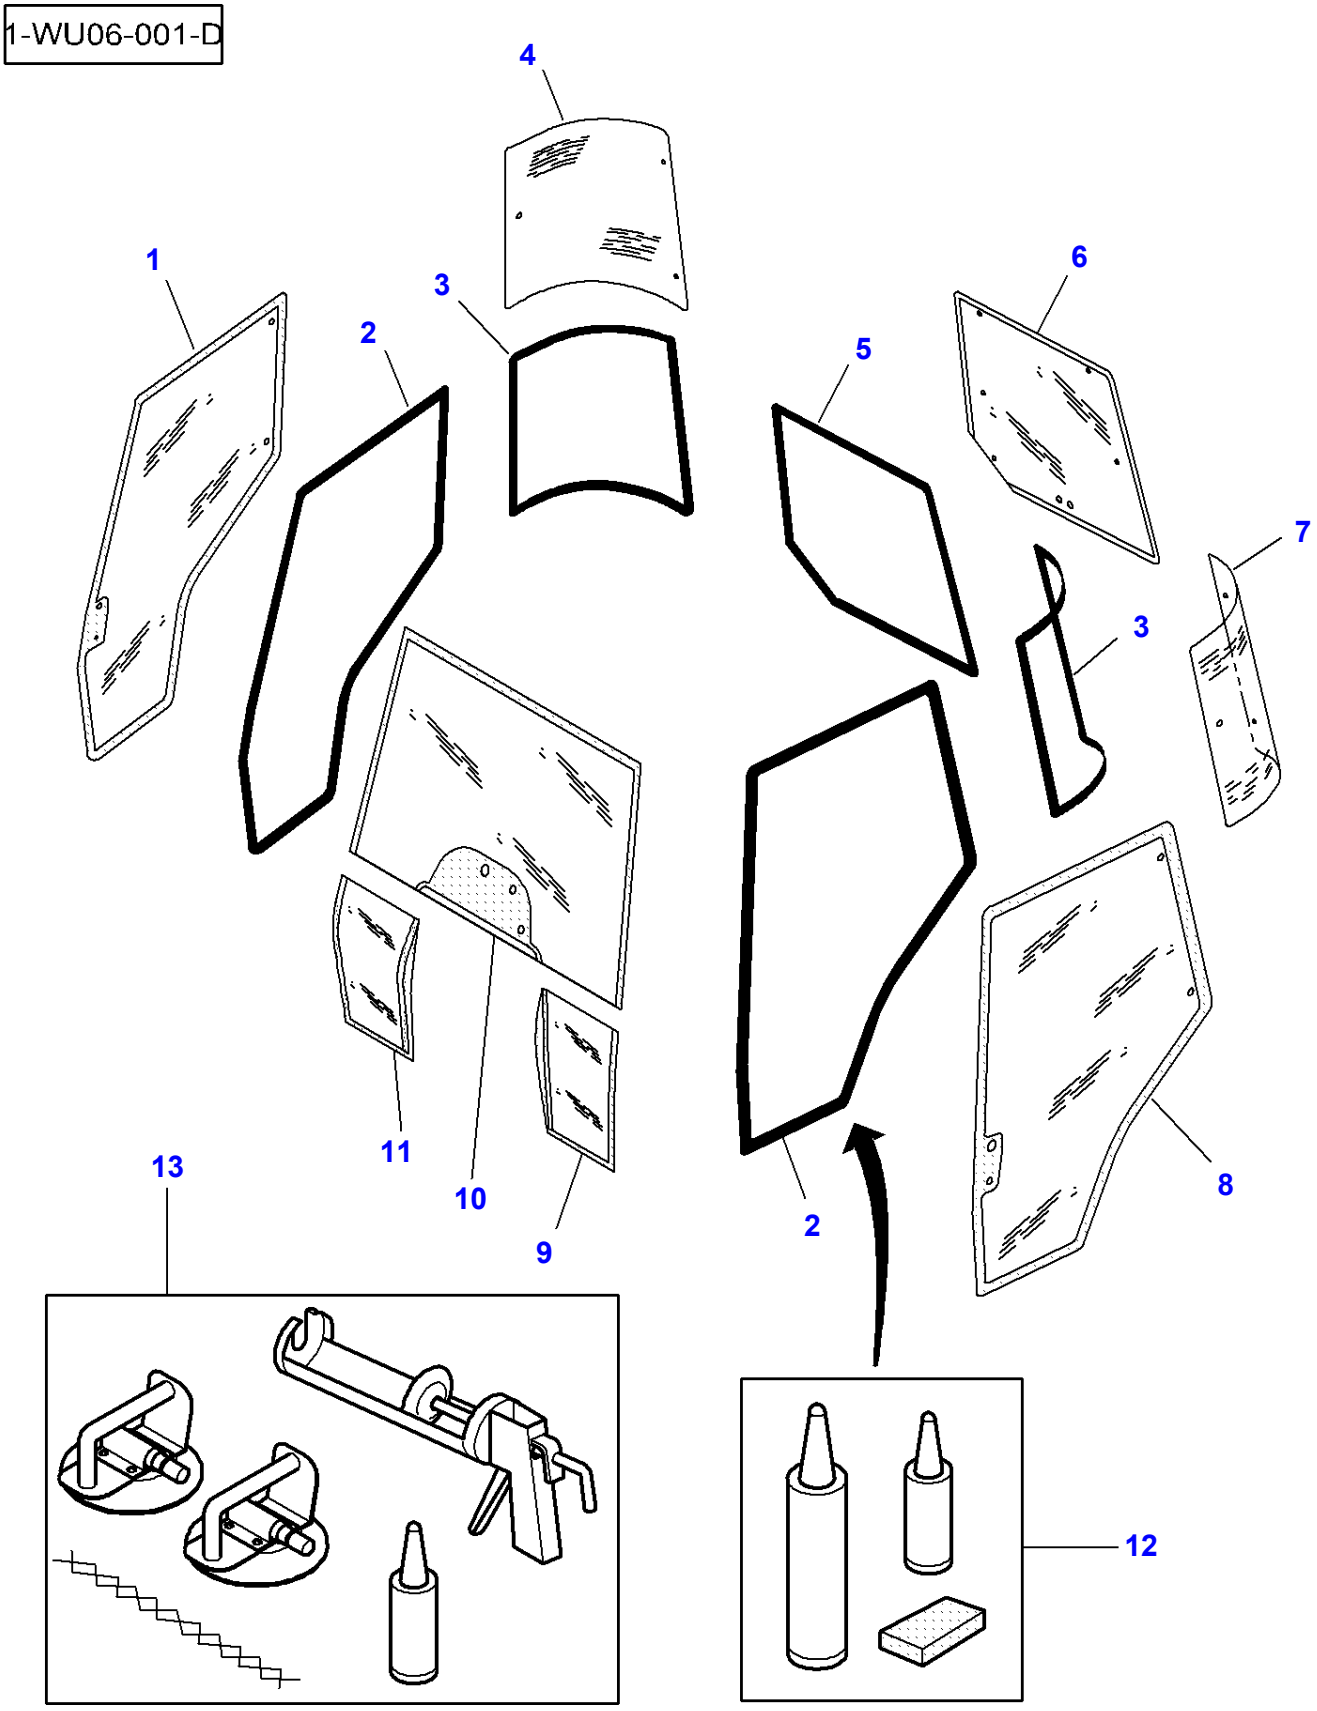
1-WU06-001-D
4
1
3
2
6
5
7
3
11
10
9
2
8
13
12


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272775M1 | 1 | Window | Right Hand |
| 2 | 3902122M1 | 2 | Seal | |
| 3 | 3902133M1 | 2 | Seal | |
| 4 | 3902131M1 | 1 | Window | Right Hand |
| 5 | 3902144M1 | 1 | Seal | |
| 6 | 3715438M1 | 1 | Window | |
| 7 | 3902130M1 | 1 | Window | Left Hand |
| 8 | 4272774M1 | 1 | Window | Left Hand |
| 9 | 3902149M1 | 1 | Window | Left Hand |
| 10 | 4273518M1 | 1 | Windscreen | Thickness 6 MM |
| | 4273519M1 | 1 | Windscreen | Thickness 5 MM |
| 11 | 3902150M1 | 1 | Window | Right Hand |
| 12 | 3902373M93 | 1 | Glazing Kit | |
| 13 | 3902503M91 | 1 | Parts Pack | |

**FOOTNOTE [A]** WITH 50KPH TRACTOR

1-WU85-001-C

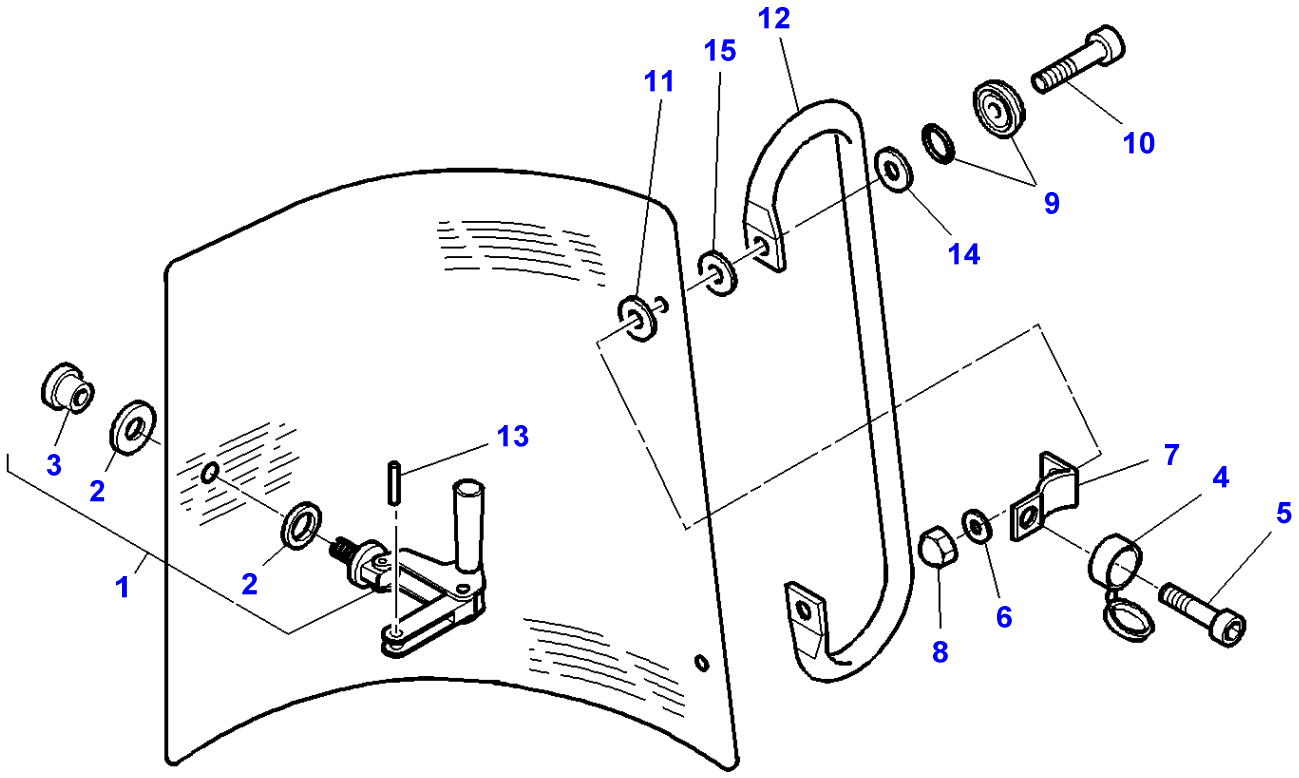


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3476132M91 | 1 | Stay | Right Hand |
| | 3476133M91 | 1 | Stay | Left Hand |
| 2 | 3478052M1 | 2 | Washer | (1) |
| 3 | 3478051M1 | 2 | Nut | (1) |
| 4 | 3902129M1 | 4 | Muff | |
| 5 | 3010775X1 | 4 | Screw | M6 X 25 |
| 6 | 3011035X1 | 4 | Washer | Diameter 6-12 X 1,5 |
| 7 | 3902128M1 | 4 | Hinge | |
| 8 | 3902455M1 | 4 | Cap Nut | M6 |
| 9 | 3902145M1 | 4 | Skate | |
| 10 | 4275839M1 | 4 | Screw | M6 X 35 |
| 11 | 3903189M1 | 4 | Washer | Diameter 10,9-30 X 2 |
| | 3902365M1 | 4 | Washer | Diameter 8-30 X 3 |
| 12 | 3783201M1 | 2 | Guideway | [A] |
| 13 | 1440396X1 | 2 | Dowel | 5 X 12 |
| 14 | 3902367M1 | 2 | Washer | Diameter 5-18 X 1 |
| 15 | 4274622M1 | 4 | Washer | Diameter 8-20 X 3 |

**FOOTNOTE [A]** CAB WITH FLAT BOTTOM
**FOOTNOTE [B]** CAB WITH TUNNEL BOTTOM

1-WU84-001-B

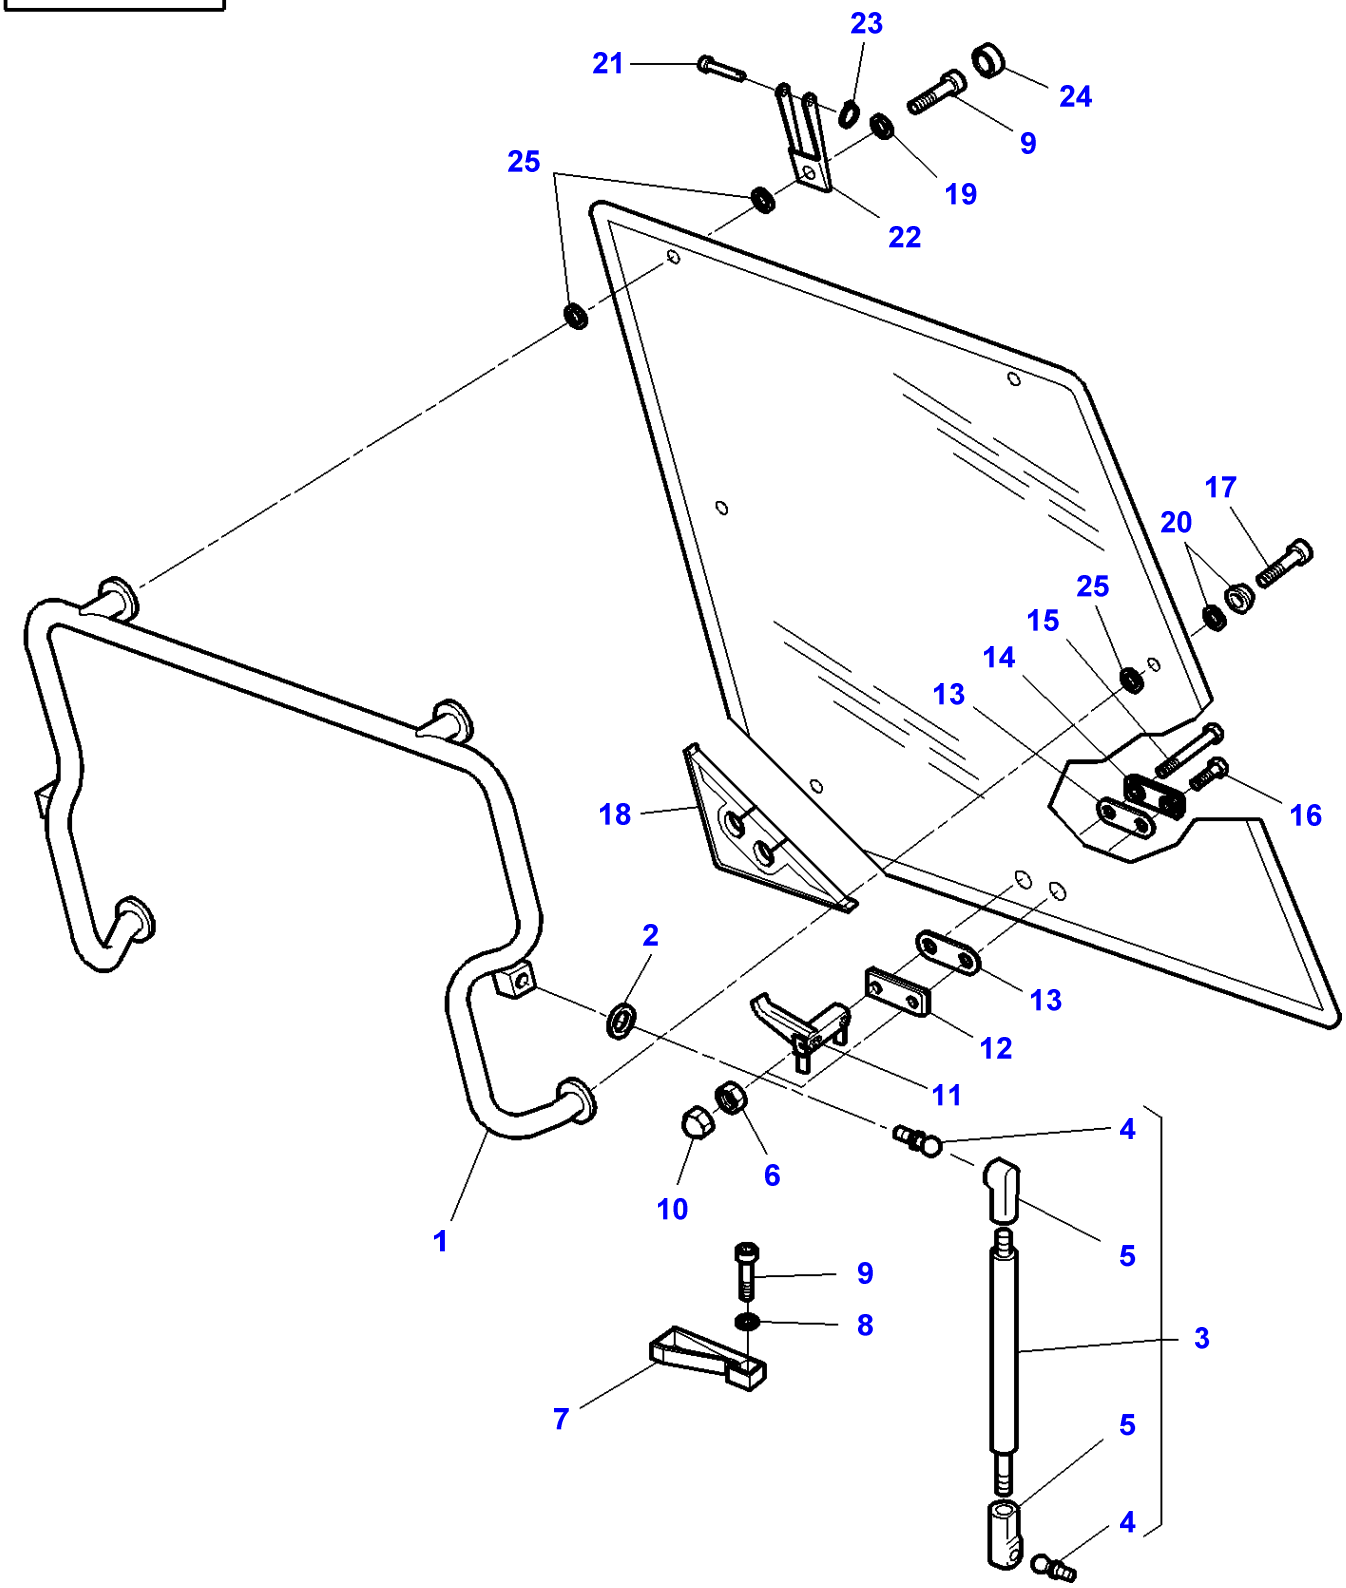



https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3902135M92 | 1 | Support | |
| 2 | 391025X1 | 4 | Lock Washer | |
| 3 | 3902140M1 | 2 | Ram | |
| 4 | | 2 | Toggle | (3) Not serviced,order REF. 3 |
| 5 | | 2 | Toggle | (3) Not serviced,order REF. 3 |
| 6 | 1440329X1 | 2 | Locknut | M10 |
| 7 | 3619610M1 | 1 | Thruster | |
| 8 | 391289X1 | 2 | Lock Washer | |
| 9 | 3010775X1 | 4 | Screw | M6 X 25 |
| 10 | 3619609M1 | 2 | Helmet | M10 |
| 11 | 3619605M1 | 1 | Handle | |
| 12 | 3619604M1 | 1 | Plate | |
| 13 | 3619906M1 | 2 | Gasket | |
| 14 | 3619603M1 | 1 | Plate | |
| 15 | 3619907M1 | 1 | Screw | M10 X 130 |
| 16 | 3619908M1 | 1 | Screw | M10 X 35 |
| 17 | 3010775X1 | 2 | Screw | M6 X 25 |
| 18 | 3806376M1 | 1 | Seal | |
| 19 | 385361X1 | 2 | Washer | |
| 20 | 3902145M1 | 2 | Skate | |
| 21 | 3902137M1 | 2 | Clevis Pin | |
| 22 | 3902136M2 | 2 | Clevis | |
| 23 | 1440988X1 | 2 | Circlip | |
| 24 | 3902129M1 | 2 | Muff | |
| 25 | 3902365M1 | 6 | Washer | Diameter 8-30 X 3 MM |

1-WU02-001-C

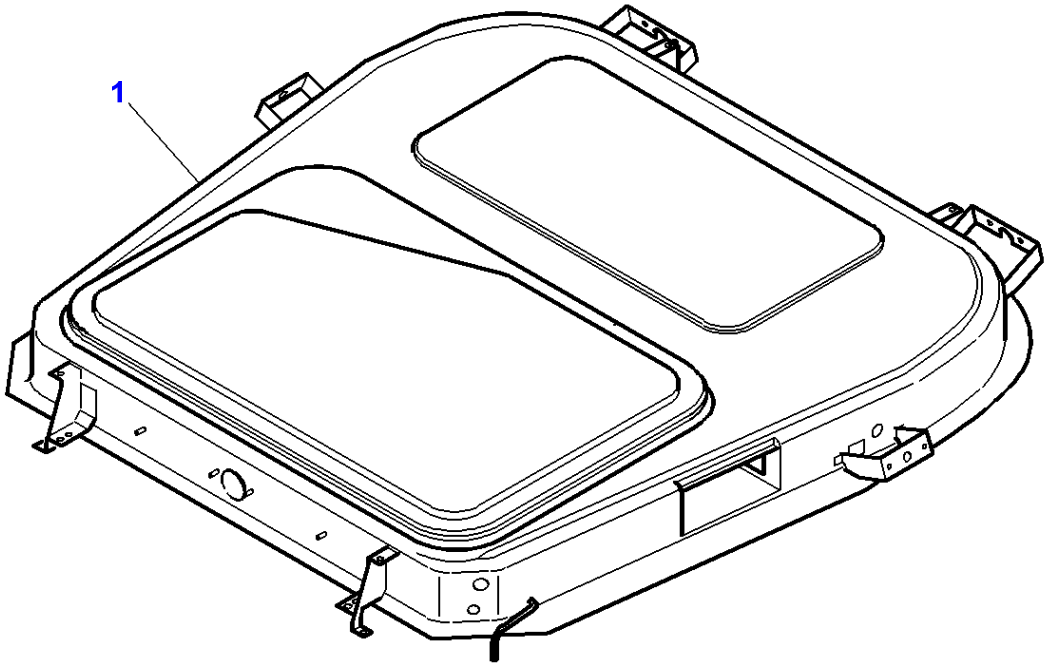

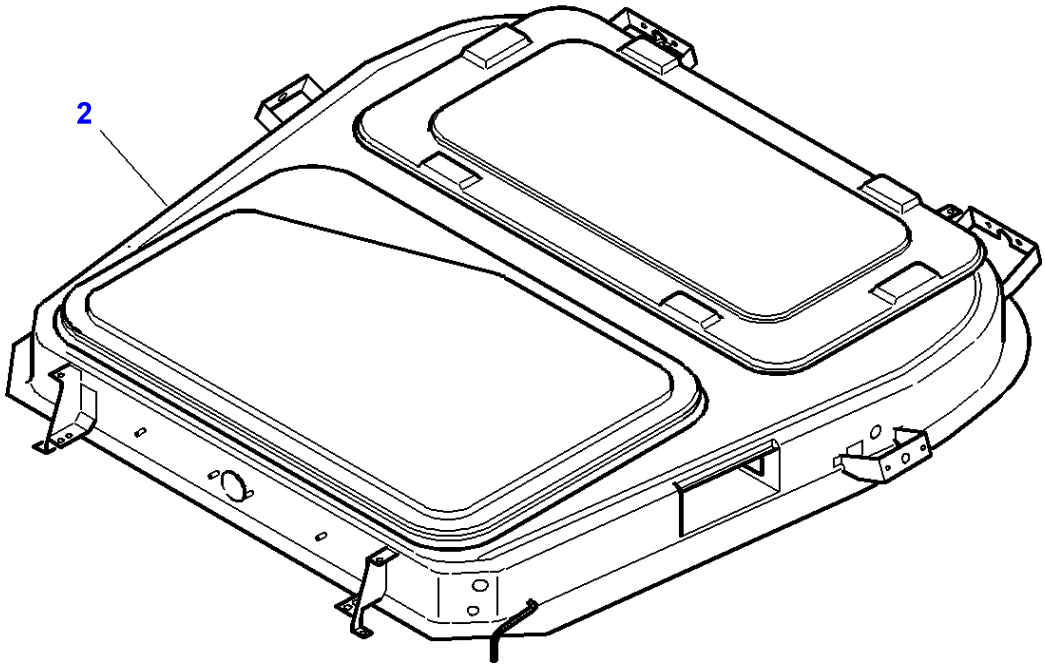



https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786624M93 | 1 | Roof | |
| 2 | 3786626M93 | 1 | Roof | [A] |

**FOOTNOTE [A]** WITH ROOF HATCH

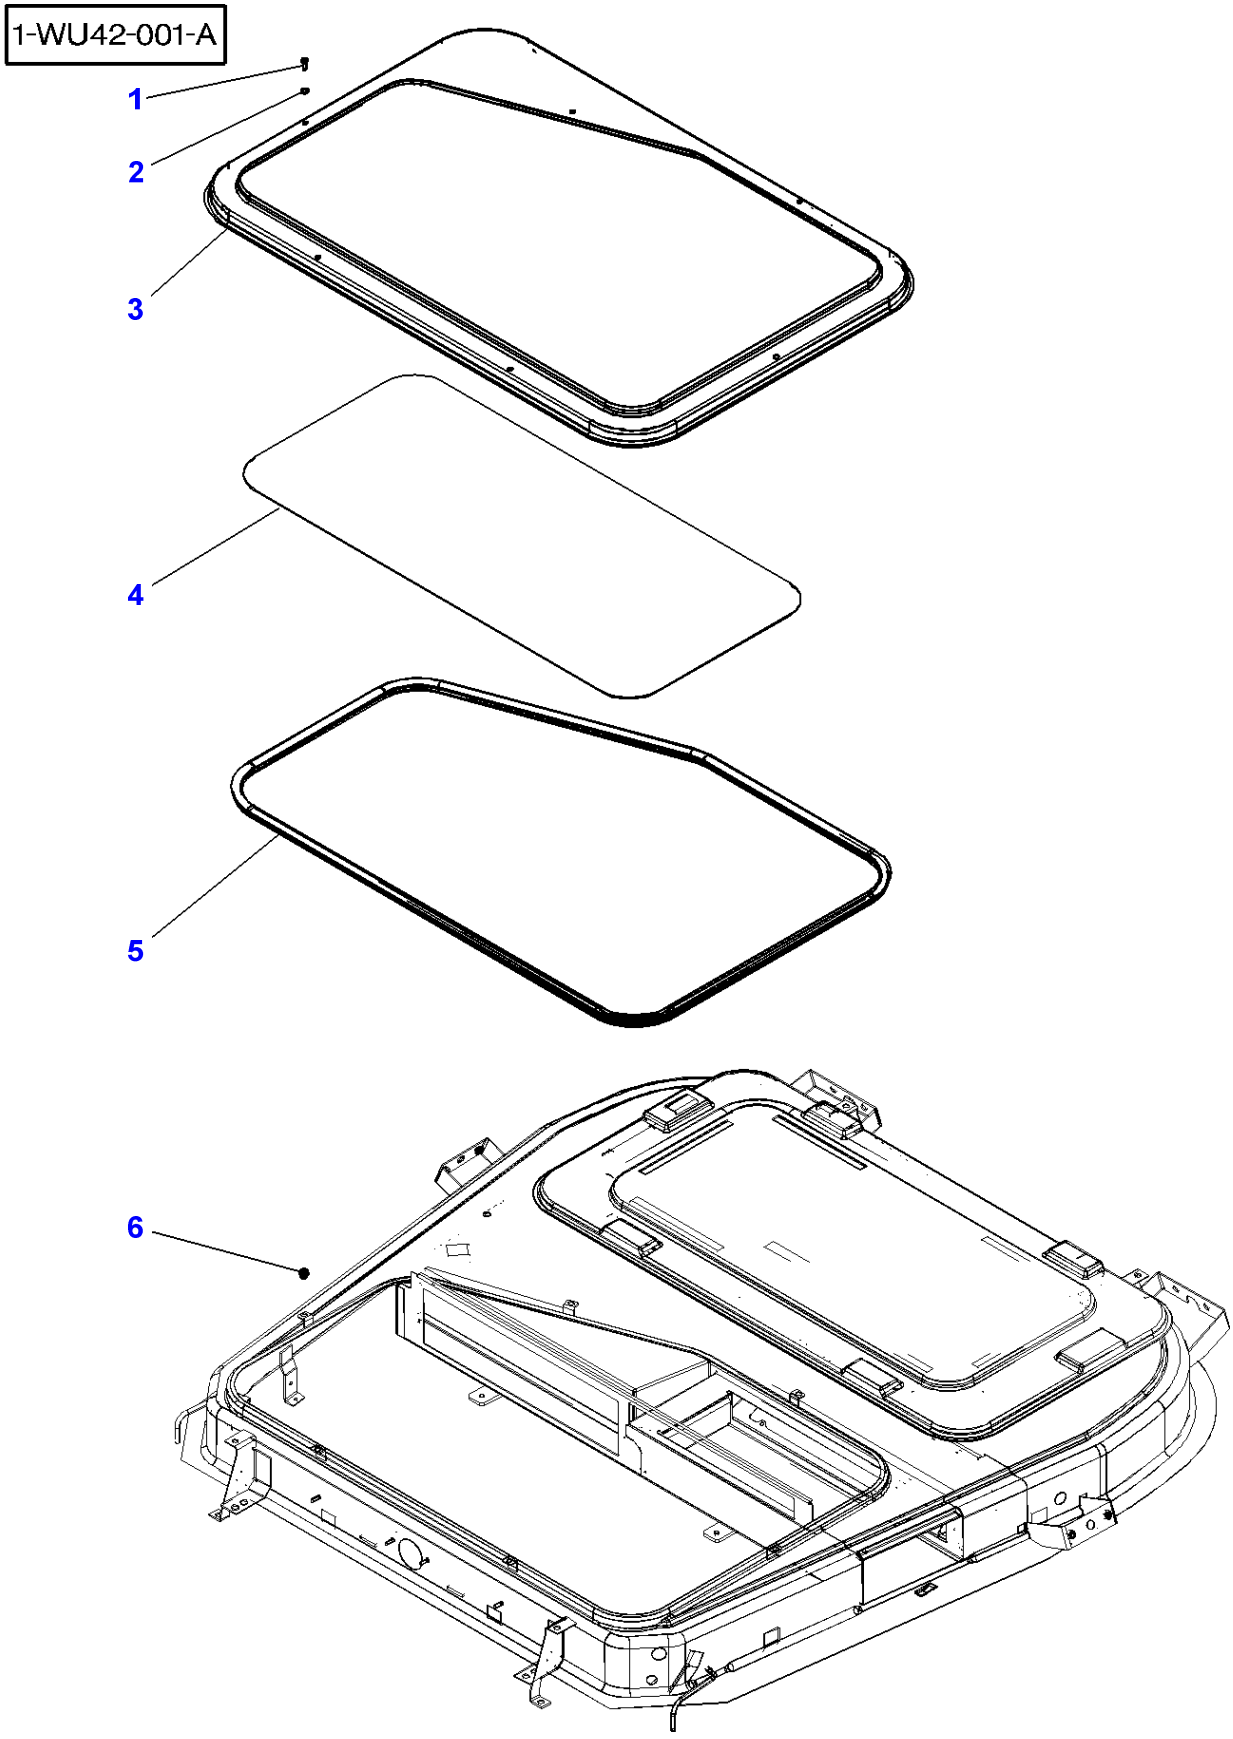

1-WU42-001-A
1
2
3
4
5
6

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 339560X1 | 6 | Hex. Sock. Screw | M6 X 16 |
| 2 | 390971X1 | 6 | Washer | Diameter 6-12 X 1,5 MM |
| 3 | 3787166M92 | 1 | Trap | |
| 4 | 3788932M1 | 1 | Sound Reduction | |
| 5 | 3786637M1 | 1 | Gasket | |
| 6 | 3580774M1 | 6 | Nut | M6 |

1-WU43-001-A

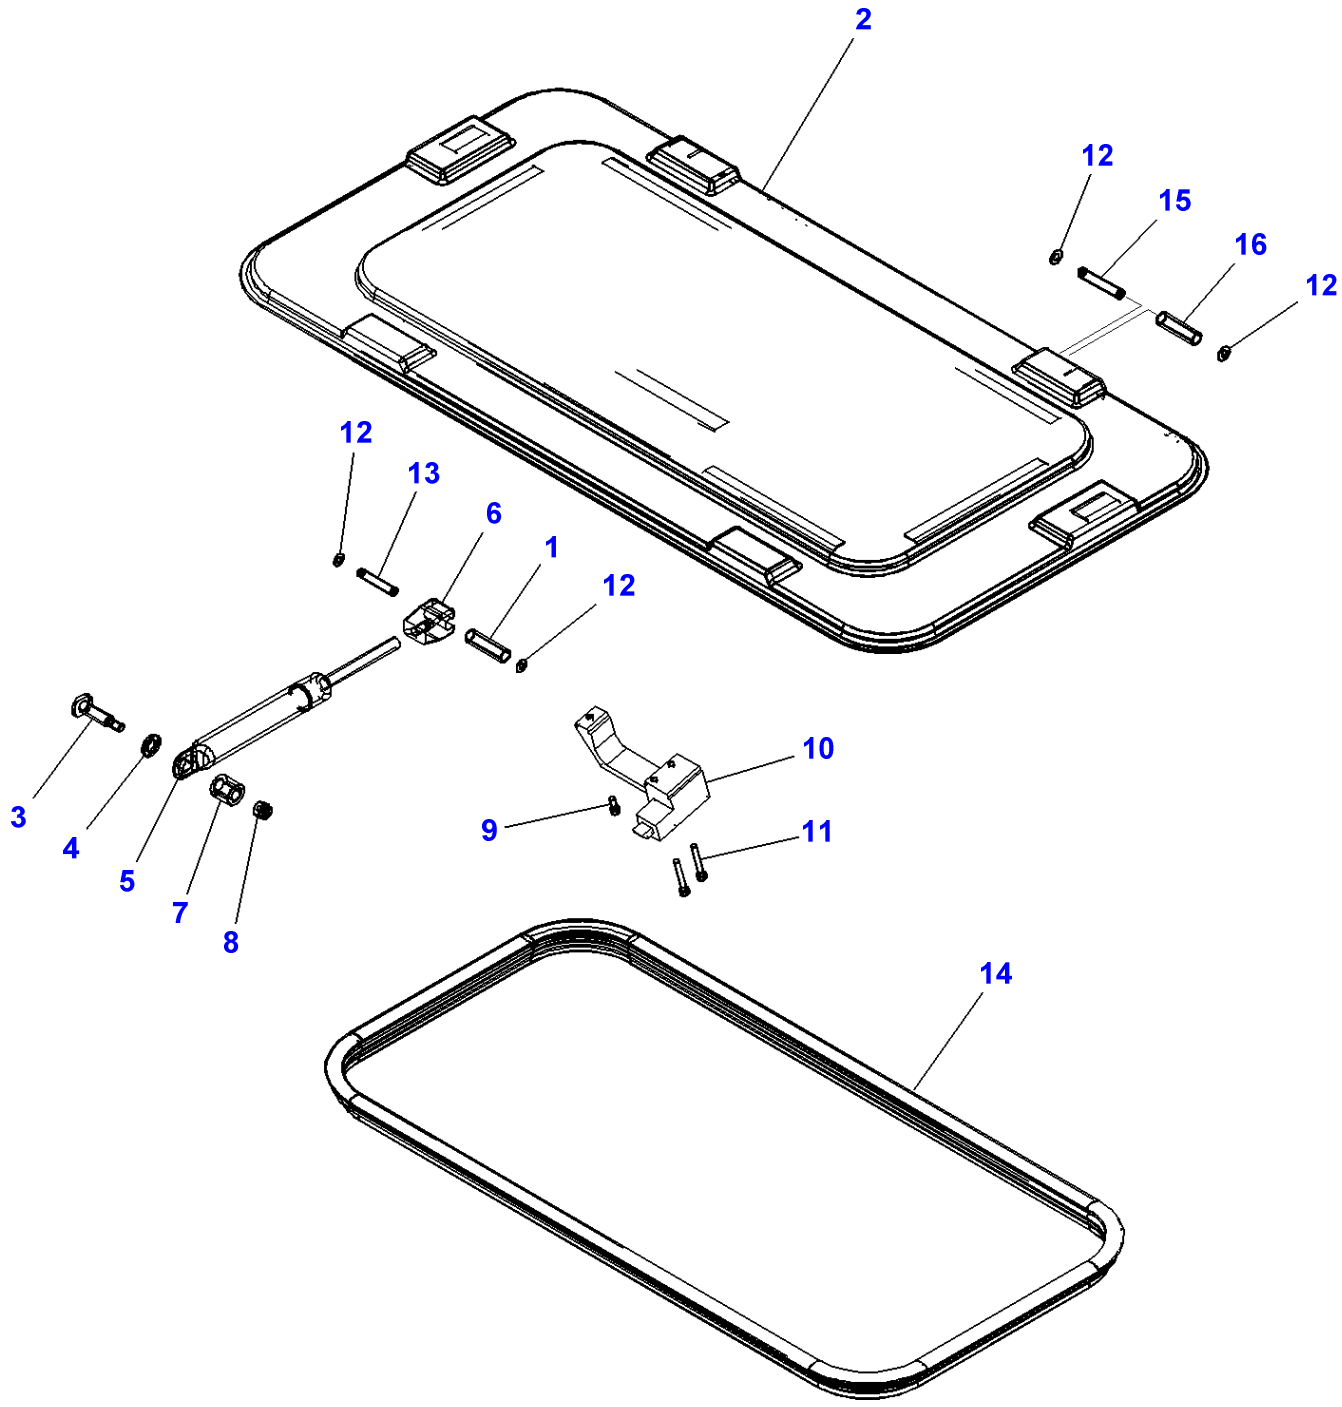


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3303076M1 | 2 | Bush | |
| 2 | 3787167M91 | 1 | Trap | |
| 3 | 3788925M1 | 2 | Pivot | |
| 4 | 3301741M1 | 2 | Washer | |
| 5 | 3303021M91 | 2 | Gas Strut | |
| 6 | 3303019M3 | 2 | Head | |
| 7 | 3788935M1 | 2 | Spacer | |
| 8 | 1441500X1 | 2 | Locknut | M6 |
| 9 | 395579X1 | 1 | Screw Metric | M6 X 16 |
| 10 | 3388511M91 | 1 | Handle | |
| 11 | 3009284X1 | 2 | Screw | M6 X 45 |
| 12 | 3000261X1 | 6 | Clip | |
| 13 | 3303075M1 | 2 | Clevis Pin | |
| 14 | 3788931M1 | 1 | Gasket | |
| 15 | 3303074M1 | 2 | Clevis Pin | |
| 16 | 3303077M1 | 2 | Bush | |

1-WU19-004-D

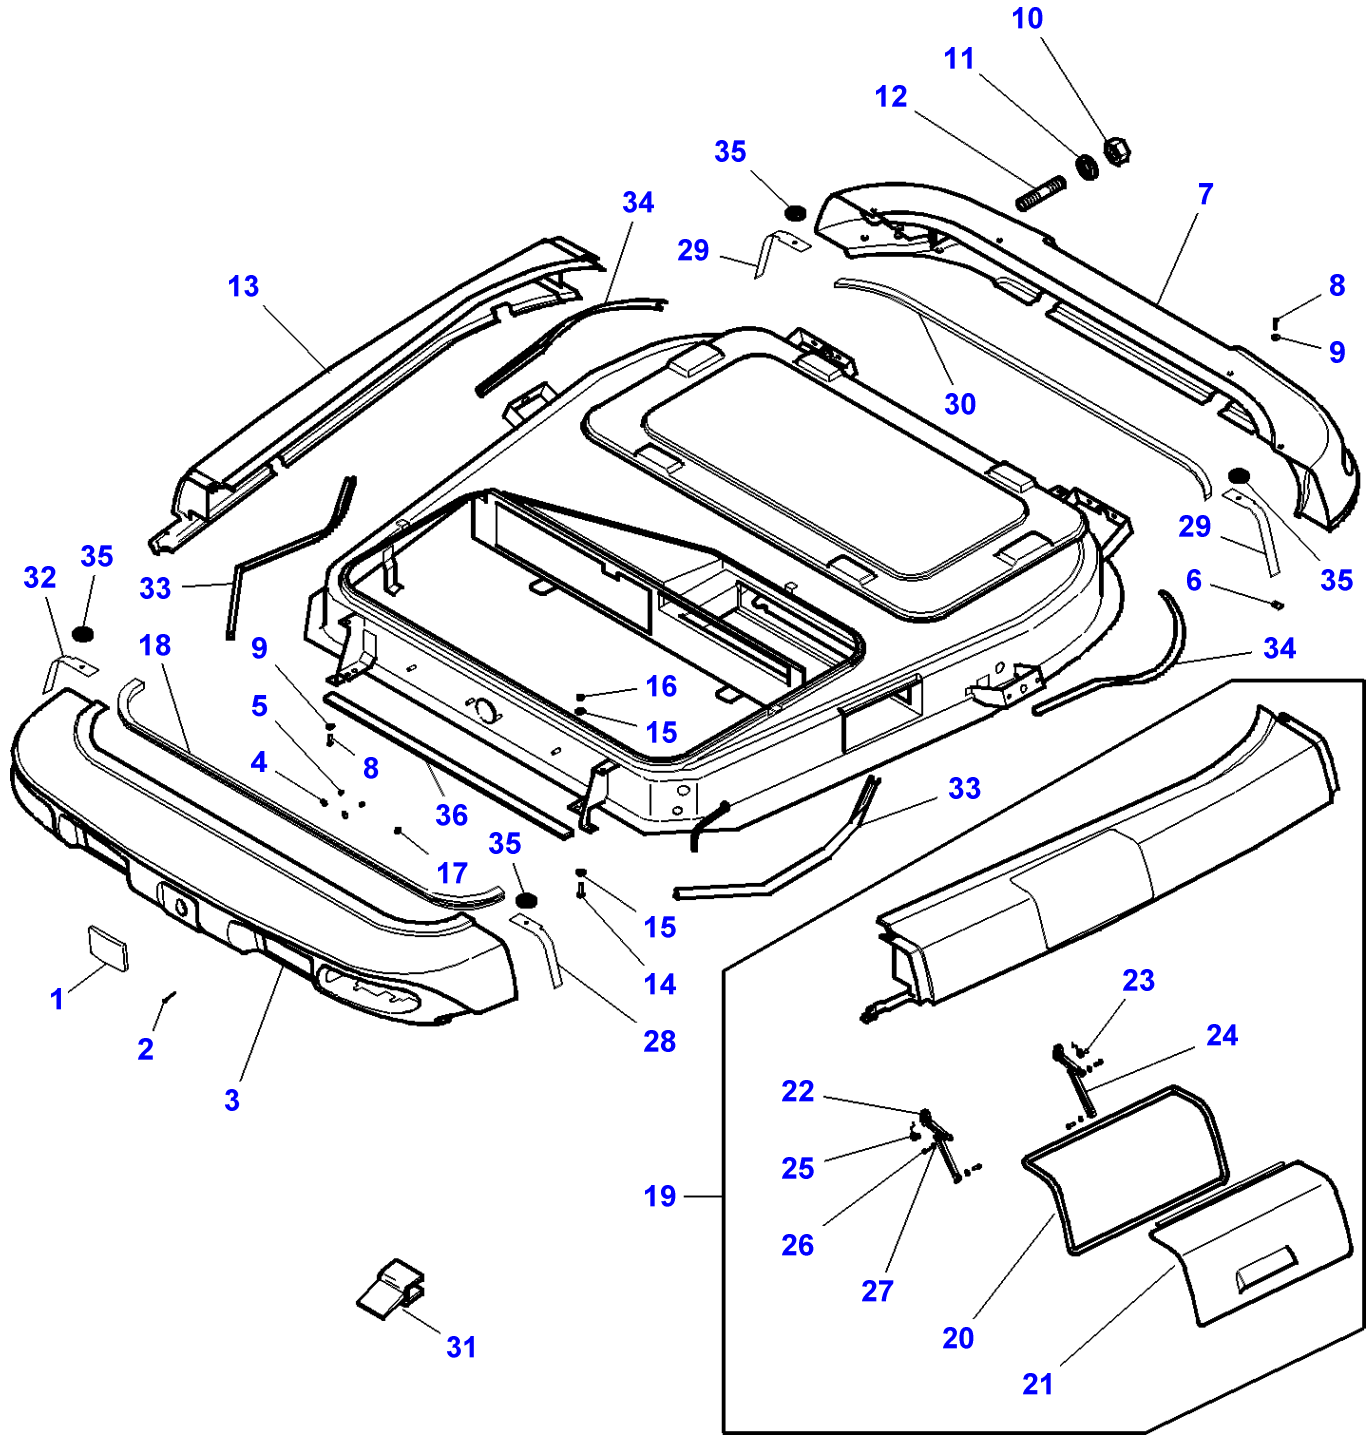
10
11
12
35
34
29
7
13
8
9
30
29
35
6
35
32
33
18
9
34
16
5
15
8
4
36
33
35
17
15
14
1
28
2
3
23
24
22
25
19
26
27
20
21
31

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Tractor Cab - Cladding Page 110-0075

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3808163M91 | 1 | Badge | |
| 2 | 3817216M1 | 3 | Screw | M4 X 19 |
| 3 | 3788202M93 | 1 | Visor | [A] |
| | 3788205M93 | 1 | Visor | [B] |
| | 3786642M93 | 1 | Visor | For United States of America |
| 4 | 3019560X1 | 2 | Washer | Diameter 5-15 X 1,5 |
| 5 | 1441494X1 | 2 | Nut Metric | M5 |
| 6 | 3010070X1 | 4 | Nut | M6 |
| 7 | 3786695M92 | 1 | Visor | |
| | 3787174M92 | 1 | Visor | For United States of America |
| 8 | 339666X1 | 10 | Hex. Sock. Screw | M6 X 20 |
| 9 | 391038X1 | 10 | Washer | Diameter 6-18 X 1,5 |
| 10 | 1440022X1 | 4 | Stud | M8 X 20 |
| 11 | 390972X1 | 4 | Washer | Diameter 8-17 X 1,7 |
| 12 | 339169X1 | 4 | Nut | M8 |
| 13 | 3788209M93 | 1 | Visor | Right Hand |
| 14 | 339761X1 | 43 | Hex. Sock. Screw | M8 X 25 |
| 15 | 3010597X1 | 8 | Tab Washer | Diameter 8-22 |
| 16 | 339169X1 | 4 | Nut | M8 |
| 17 | 3817218M1 | 4 | Spring Nut | Diameter 4,5 |
| 18 | | | Not Used | |
| 19 | 3787162M93 | 1 | Visor | Left Hand |
| 20 | 3787141M1 | 1 | Gasket | (19) |
| 21 | 3786648M1 | 1 | Trap | (19) |
| 22 | 3787180M1 | 2 | Rod Link | (19) |
| 23 | 3787182M1 | 1 | Spring | (19)<br>Right Hand |
| 24 | 3787181M1 | 2 | Rod Link | (19) |
| 25 | 3787183M1 | 1 | Spring | (19)<br>Left Hand |
| 26 | 3787143M1 | 4 | Screw | (19)<br>M3 X 8 |
| 27 | 390752X1 | 4 | Washer Metric | (19) |
| 28 | 4278385M1 | 1 | Gasket | Length 220 MM |
| 29 | 4278387M1 | 2 | Gasket | Length 270 MM |
| 30 | | | Not Used | |
| 31 | 3783543M1 | 2 | Gasket | Length 50 MM |
| 32 | 4278386M1 | 1 | Gasket | Length 220 MM |
| 33 | 4278388M1 | 2 | Gasket | Length 520 MM |
| 34 | 4278389M1 | 2 | Gasket | Length 800 MM |
| 35 | 3902365M1 | 4 | Washer | Diameter 8-30 |
| 36 | 4278398M1 | 2 | Gasket | Length 1230 MM |

**FOOTNOTE [A]** WITH 2 HEADLAMPS
**FOOTNOTE [B]** WITH 4 HEADLAMPS

1-WU19-016-A

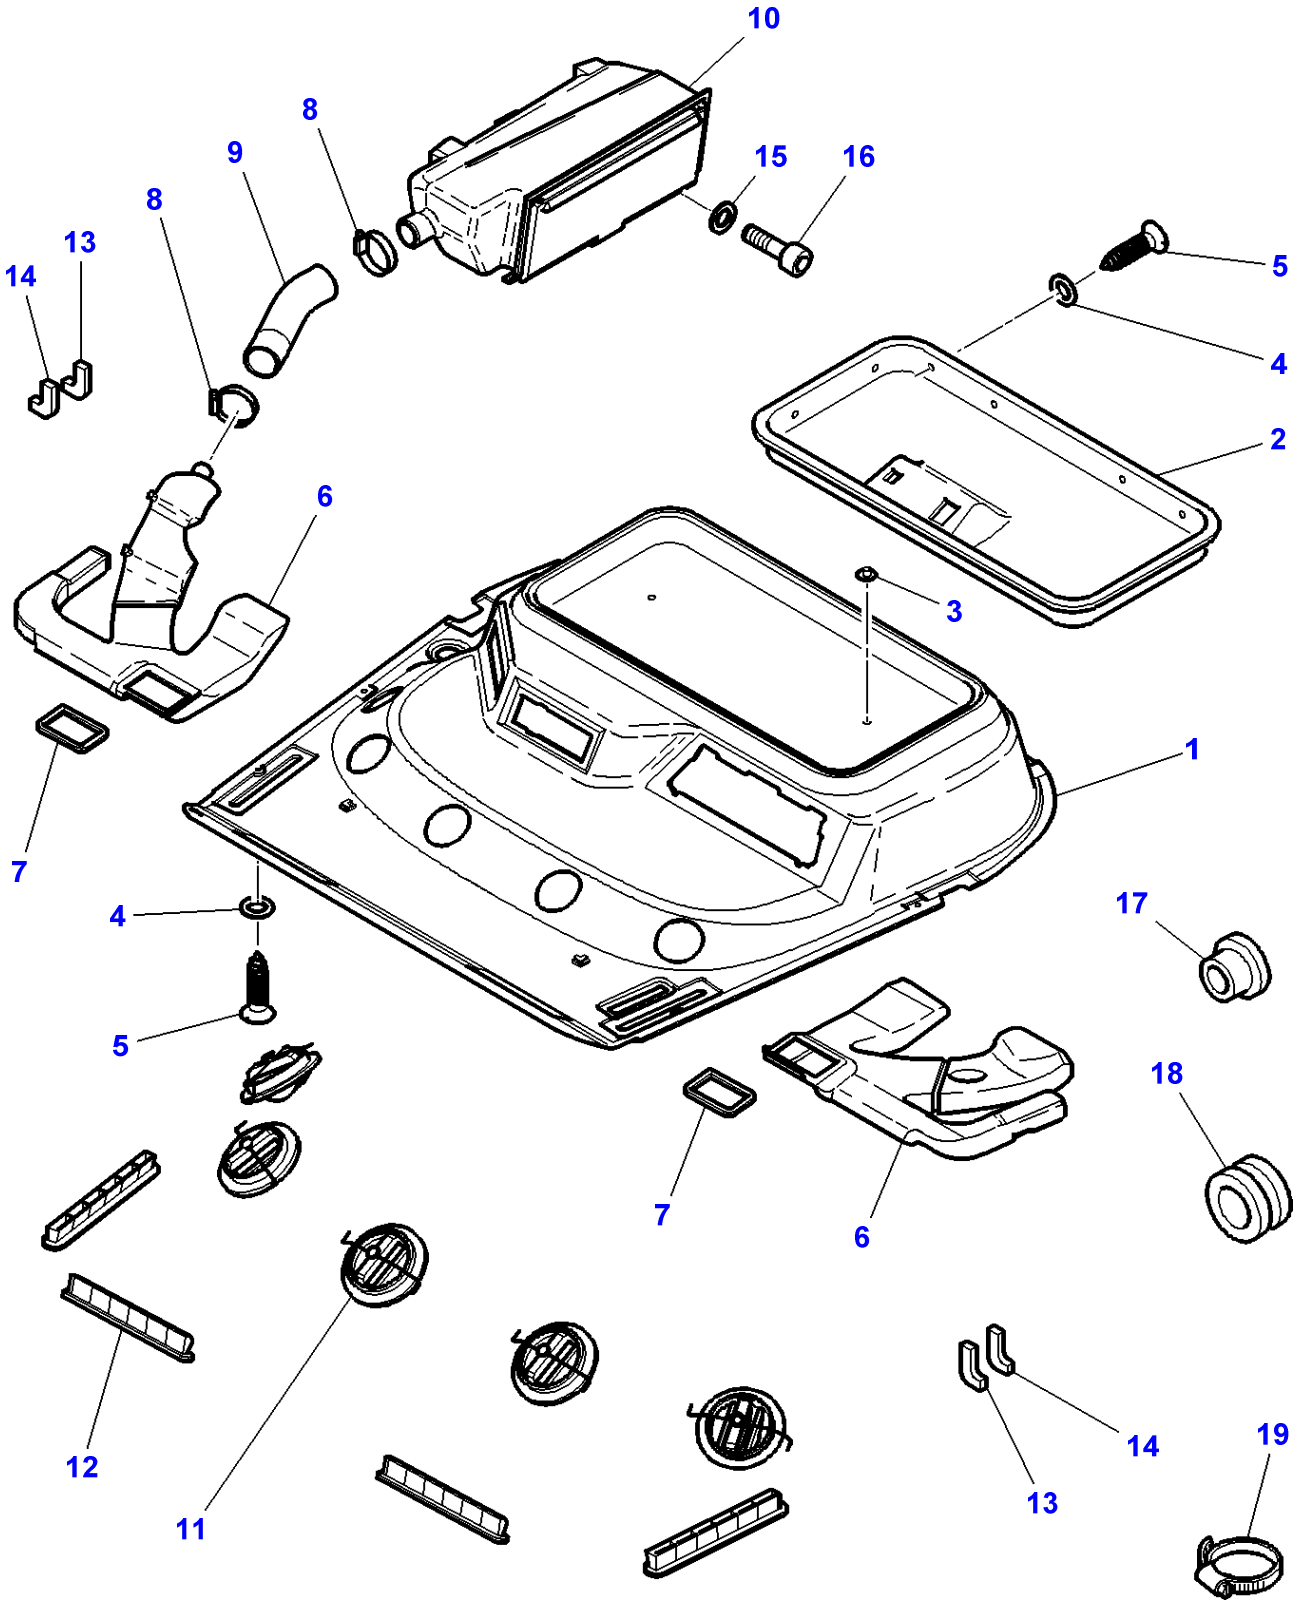


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4273536M92 | 1 | Cladding | [A] |
| | 4273535M92 | 1 | Facing | |
| 2 | 3788213M1 | 1 | Facing | |
| 3 | 4271027M1 | 2 | Nut | [A]<br>M8 |
| 4 | 1427000M1 | X | Washer | Diameter 5,2-16 X 4 MM |
| 5 | 3010506X1 | X | Screw | M5 X 16 |
| 6 | 3786684M1 | 1 | Pipe | Left Hand |
| | 3786672M1 | 1 | Pipe | Right Hand |
| 7 | 3615352M1 | 2 | Gasket | |
| 8 | 338617X1 | 2 | Hose Clip | Diameter 40-60 |
| 9 | 4271111M1 | 1 | Sheath | |
| 10 | 4273542M91 | 1 | Holder | |
| 11 | 3786678M1 | 5 | Vent | |
| 12 | 4273677M1 | 4 | Ventilator | |
| 13 | 4271133M1 | 2 | Gasket | Right Hand |
| 14 | 4271112M1 | 2 | Gasket | Left Hand |
| 15 | 391038X1 | 3 | Washer | Diameter 6-18 X 1,5 |
| 16 | 1440350X1 | 3 | Screw Metric | M6 X 20 |
| 17 | 3580599M1 | 1 | Plug | Diameter 22 MM |
| 18 | 3783677M1 | 1 | Grommet | Diameter 7-17-21 |
| 19 | 3619622M1 | 2 | Cable Tie | |

**FOOTNOTE [A]** WITHOUT ROOF HATCH

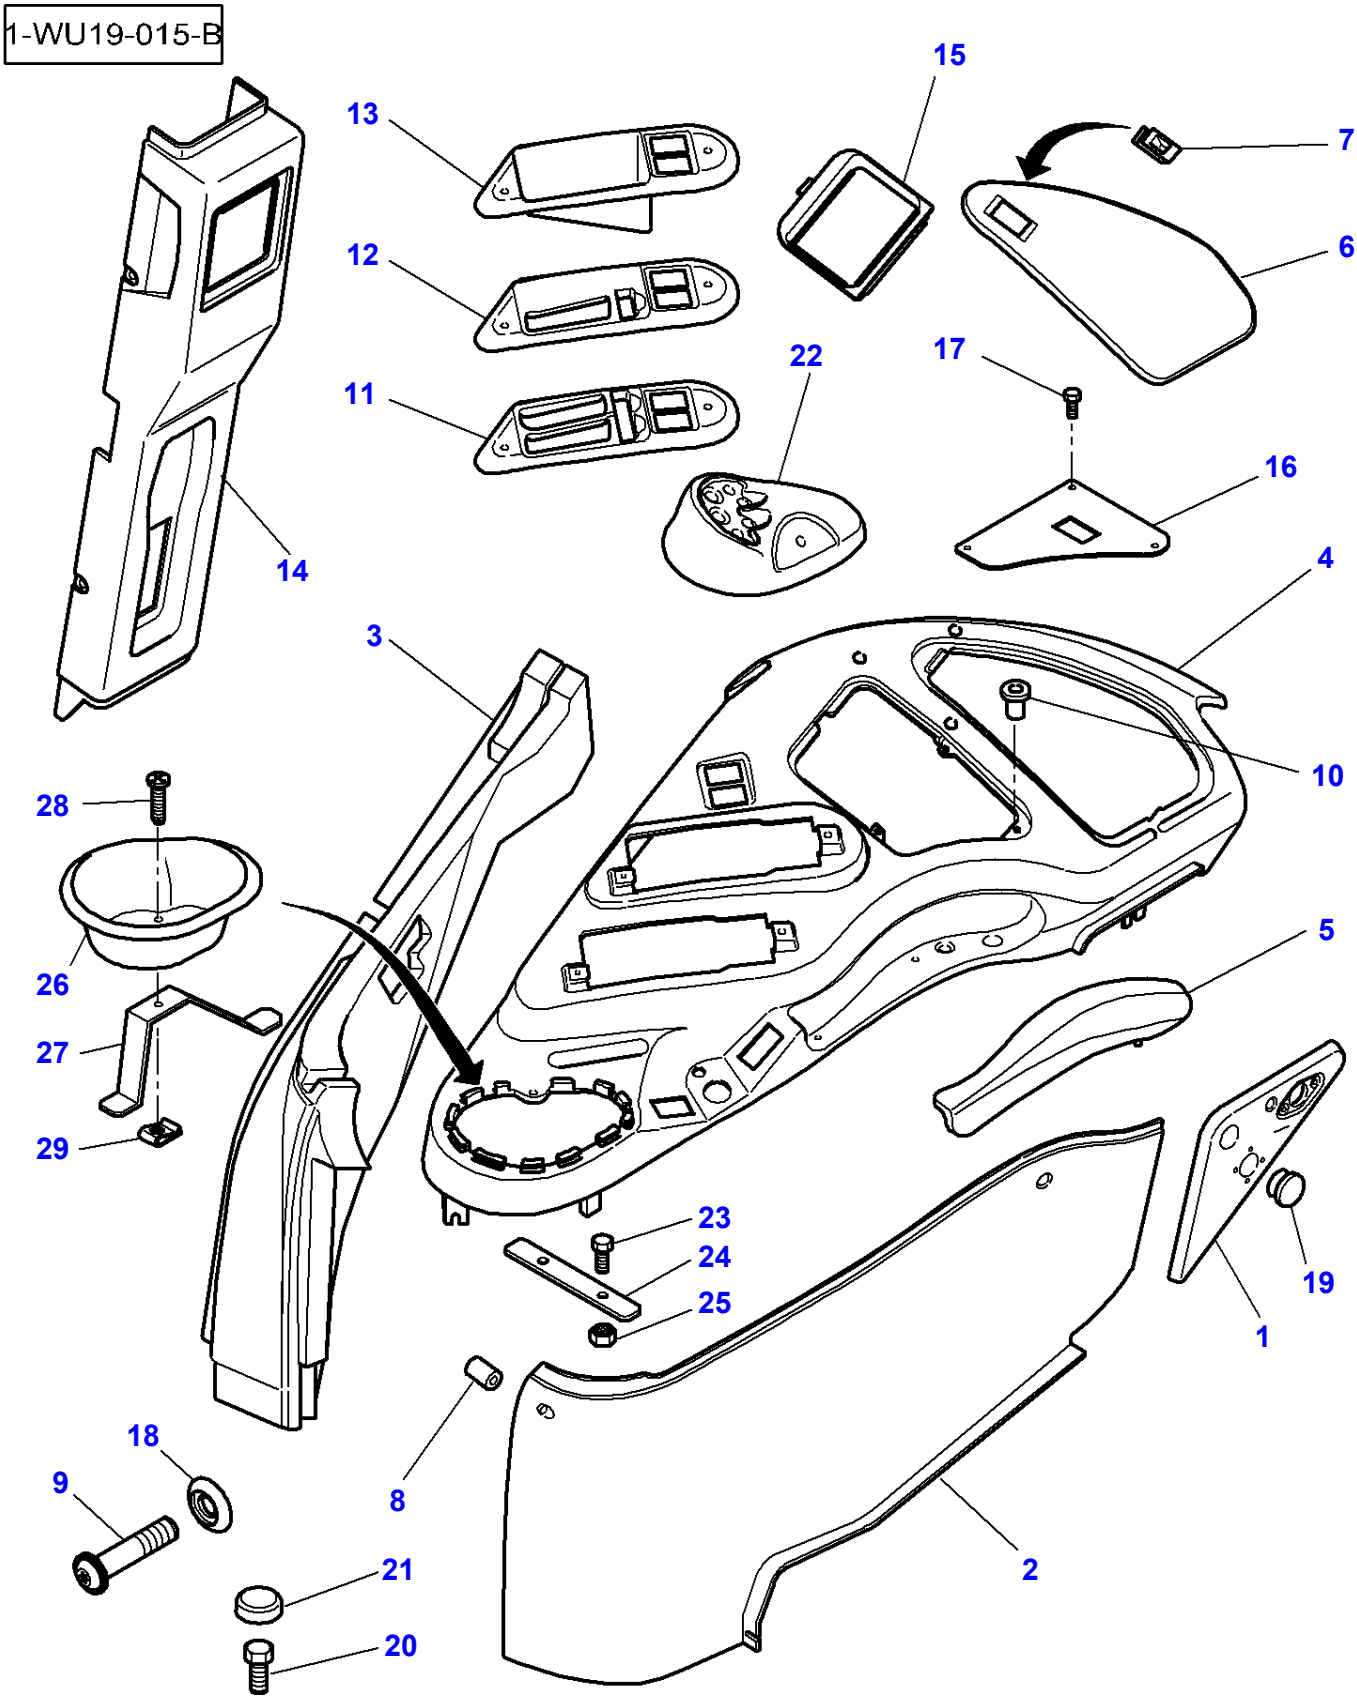
1-WU19-015-B
15
13
7
12
6
22
17
11
16
14
4
3
10
28
5
26
27
29
23
24
25
19
1
18
9
8
2
21
20


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Tractor Cab - Cladding Page 110-0085

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4279100M91 | 1 | Triangle | |
| 2 | 4279097M91 | 1 | Panel | |
| 3 | 4279109M91 | 1 | Envelope | |
| | 4279302M91 | 1 | Cladding | [A] |
| 4 | 4270864M92 | 1 | Plate Clamping | |
| | 4273513M92 | 1 | Plate Clamping | For United States of America |
| 5 | 3789486M1 | 1 | Armrest | |
| 6 | 4270868M91 | 1 | Cover | |
| | 4273512M91 | 1 | Cover | For United States of America |
| 7 | 4270986M1 | 1 | Hasp | |
| 8 | 4272208M1 | 1 | Spacer | Diameter 7-13 X 14,8 |
| 9 | 3010578X1 | X | Screw | M5 X 10 |
| | 3010506X1 | X | Screw | M5 X 16 |
| | 3011434X1 | X | Screw | M5 X 30 |
| 10 | 4277656M1 | 3 | Insert | M4 |
| 11 | 3787570M1 | 1 | Cover | |
| 12 | 4270711M1 | 1 | Cover | |
| 13 | 4270709M1 | 1 | Cover | |
| 14 | 4276954M91 | 1 | Mounting | Right Hand |
| | 4278016M91 | 1 | Mounting | Right Hand<br>For United States of America |
| 15 | 4270710M1 | 1 | Grille | |
| 16 | 3788427M1 | 1 | Blanking Plate | [B] |
| 17 | 3010506X1 | 3 | Screw | M5 X 16 |
| 18 | 1427000M1 | X | Washer | Diameter 5,2-16 X 4 |
| 19 | 4275985M1 | 3 | Tap | [C]<br>Diameter 32 MM |
| 20 | 3009491X1 | 3 | Hex. Sock. Screw | M10 X 20 |
| 21 | 3824109M1 | 3 | Cap | |
| 22 | 4270876M91 | 1 | Console | |
| 23 | 1440922X1 | 2 | Hex. Sock. Screw | M6 X 60 |
| 24 | 4273192M1 | 1 | Plate | |
| 25 | 3019123X1 | 2 | Nut | M6 |
| 26 | 4270951M1 | 1 | Pocket | For United States of America |
| 27 | 4274211M1 | 1 | Strap | For United States of America |
| 28 | 3010506X1 | 1 | Screw | For United States of America<br>M5 X 16 |
| 29 | 3715143M1 | 1 | Nut | For United States of America |

**FOOTNOTE [A]** WITH DATATRONIC
**FOOTNOTE [B]** WITHOUT HYDRAULIC LIFT
**FOOTNOTE [C]** WITHOUT ELECTRICAL PLUG

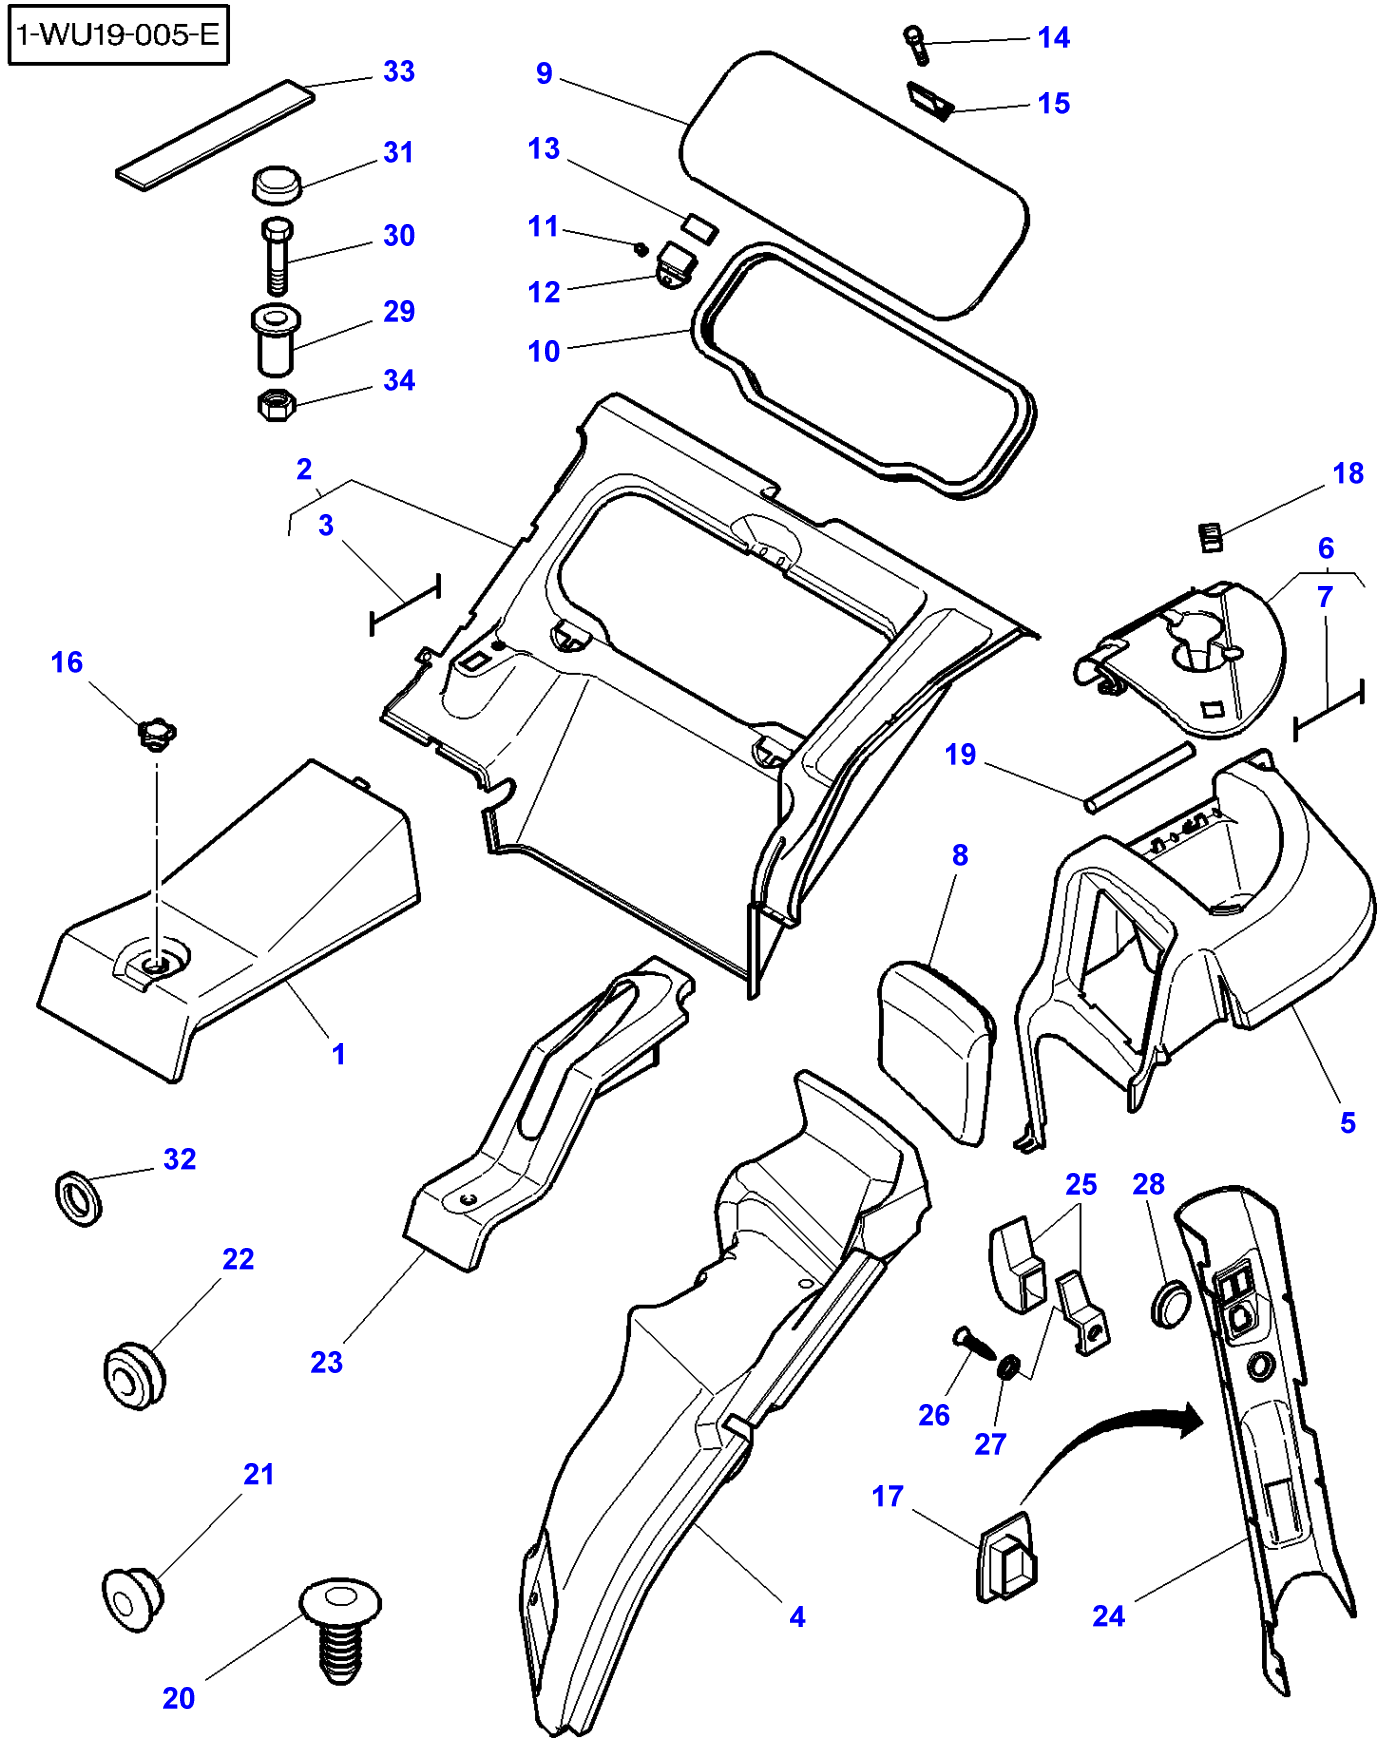
1-WU19-005-E
33
31
30
29
34
9
13
11
12
10
14
15
2
3
18
6
7
16
19
8
1
5
32
22
23
25
28
26
27
21
17
20
4
24


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Tractor Cab - Cladding Page 110-0090

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4279112M91 | 1 | Cover | |
| 2 | 4279115M91 | 1 | Rear Window | |
| 3 | 4270988M1 | 1 | Tie | (2)<br>Length 110 MM |
| 4 | 4279121M91 | 1 | Envelope | |
| 5 | 4279118M91 | 1 | Locker | |
| 6 | 4270882M93 | 1 | Cover | |
| 7 | 4270987M1 | 1 | Tie | (6)<br>Length 450 MM |
| 8 | 4279127M91 | 1 | Back Rest | |
| 9 | 3714482M1 | 1 | Window | |
| 10 | 3786411M1 | 1 | Gasket | Length 1385 MM |
| 11 | 3902455M1 | 2 | Cap Nut | M6 |
| 12 | 3784336M1 | 2 | Hinge | |
| 13 | 3784894M1 | 2 | Gasket | Length 50 MM |
| 14 | 3010506X1 | 2 | Screw | M5 X 16 |
| 15 | 3784337M1 | 1 | Latch | |
| 16 | 4270514M1 | 1 | Button | |
| 17 | 4271912M1 | 1 | Muff | [A] |
| 18 | 4270986M1 | 1 | Hasp | |
| 19 | 4270984M1 | 1 | Clevis Pin | |
| 20 | 4275041M1 | X | Button | Diameter 10 MM |
| | 4275057M1 | X | Button | Diameter 7 MM |
| 21 | 3713587M1 | 1 | Plug | Diameter 22 MM |
| | 3041932M1 | 1 | Plug | [B]<br>Diameter 13 - 19 MM |
| 22 | 1803494M1 | 1 | Grommet | Diameter 15-10-3 |
| 23 | 4279869M91 | 1 | Muff | |
| 24 | 4270881M91 | 1 | Mounting | |
| 25 | 3810912M91 | 1 | Hook | |
| 26 | 3010578X1 | 1 | Screw | M5 X 10 |
| 27 | 390469X1 | 1 | Washer | Diameter 5-10 X 1,5 |
| 28 | 4275985M1 | 1 | Tap | Diameter 32 MM |
| 29 | 3715991M1 | 1 | Spacer | Diameter 8,5-11,4 |
| 30 | 339337X1 | 1 | Hex. Sock. Screw | M8 X 30 |
| | 339009X1 | 2 | Hex. Sock. Screw | M8 X 35 |
| 31 | 3616277M1 | 3 | Helmet | |
| 32 | 1427000M1 | 9 | Washer | Diameter 5,2-16 X 4 |
| 33 | 3778749M1 | 2 | Foam | 25 X 15 X 80 |
| 34 | 339169X1 | 2 | Nut | M8 |

**FOOTNOTE [A]** WITH OUT ELECTRIC CONTROL REAR REFLECTING MIROR
**FOOTNOTE [B]** WITHOUT AUTOMATIC HITCH
**FOOTNOTE [C]** WITHOUT SECONDARY SEAT

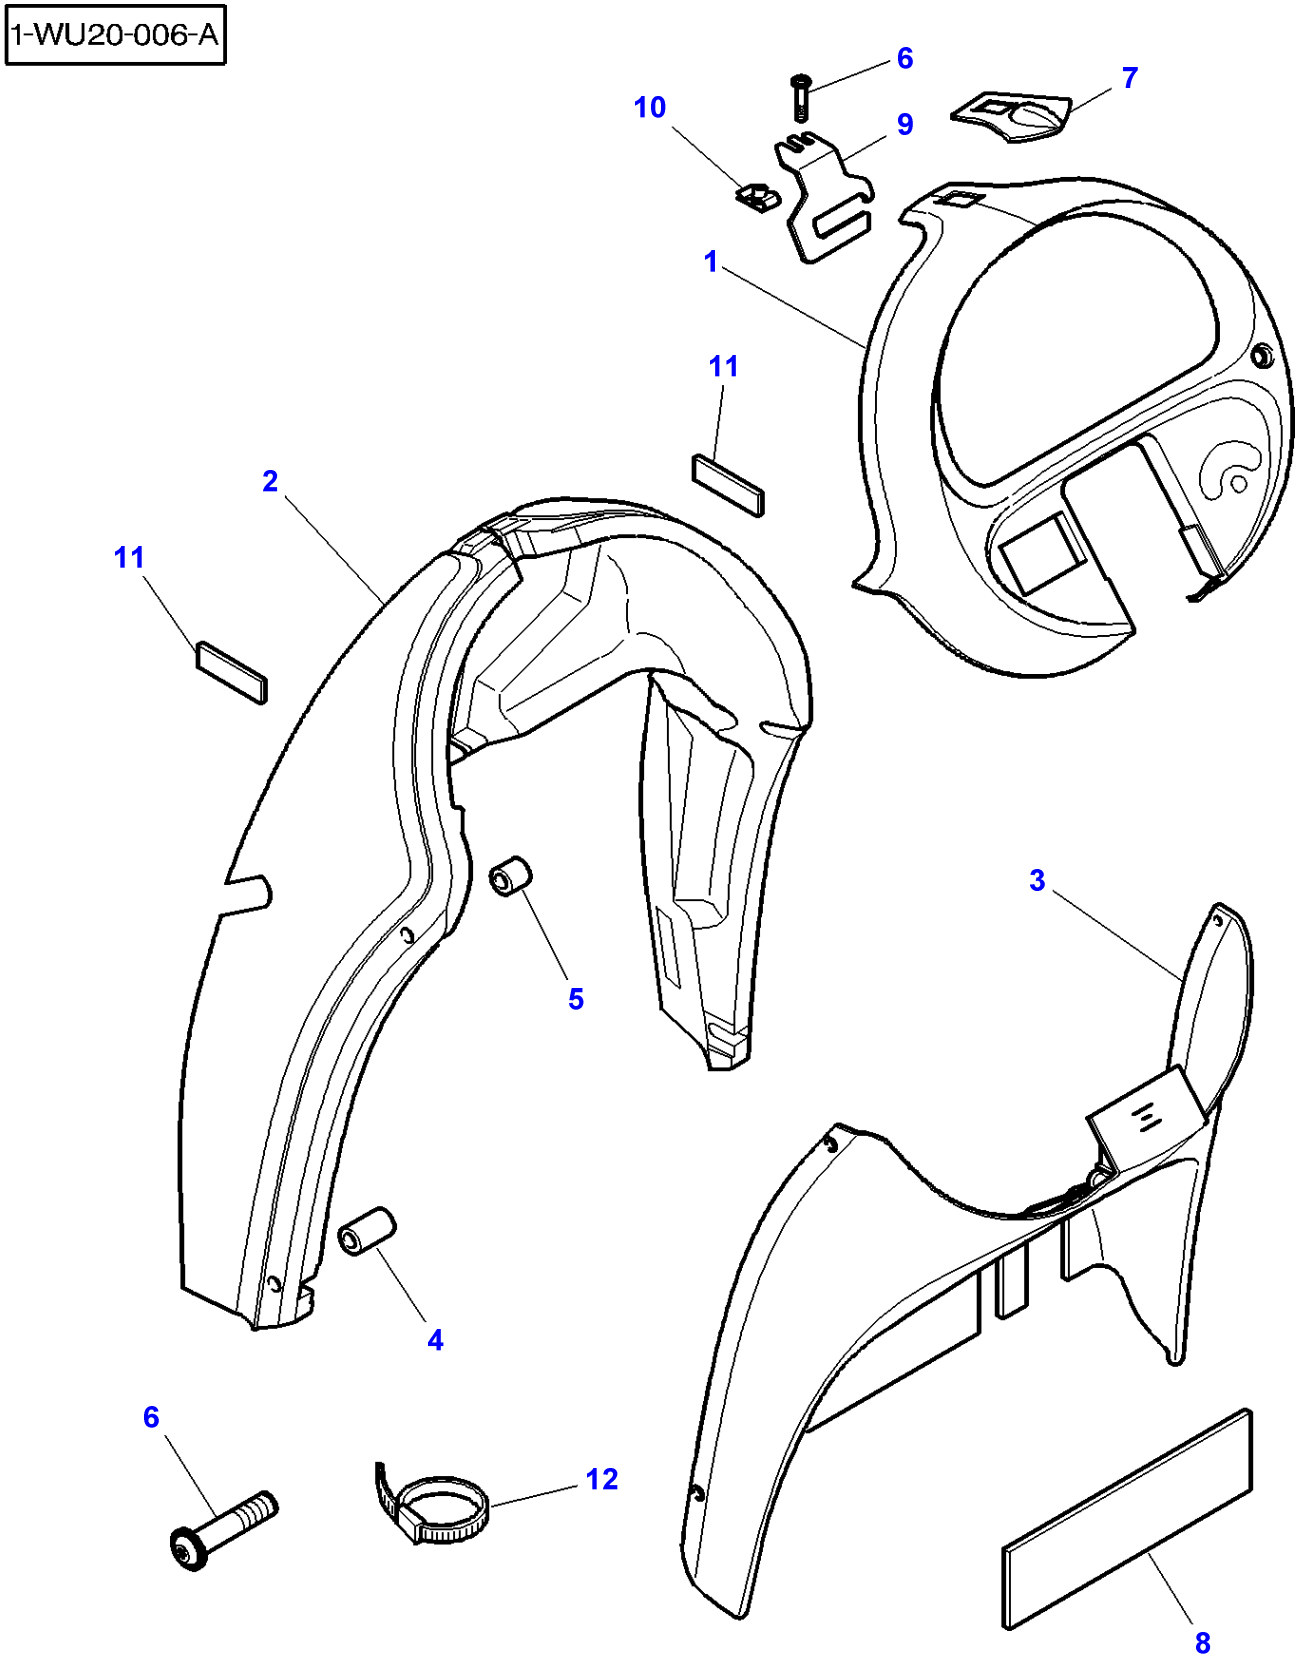
1-WU20-006-A
6
7
10
9
1
11
2
11
5
3
4
6
12
8


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4270884M93 | 1 | Plate Clamping | |
| | 4273510M93 | 1 | Plate Clamping | For United States of America |
| 2 | 4279106M91 | 1 | Envelope | |
| 3 | 4279103M91 | 1 | Panel | |
| 4 | 4272688M1 | 2 | Spacer | Diameter 15-M5 X 25 |
| 5 | 4272687M2 | 2 | Spacer | Diameter 15-M5 X 11 |
| 6 | 3010578X1 | X | Screw | M5 X 10 |
| | 3010506X1 | X | Screw | M5 X 16 |
| | 3011434X1 | X | Screw | M5 X 30 |
| 7 | 4276813M1 | 1 | Flange | [B] |
| | 4276867M1 | 1 | Flange | [C] |
| 8 | 4271499M1 | 1 | Trim | 520 X 150 |
| 9 | 4276864M2 | 1 | Support | |
| 10 | 3715143M1 | X | Nut | M5 |
| 11 | 3814980M1 | 4 | Pad | |
| 12 | 3619622M1 | X | Cable Tie | |

**FOOTNOTE [B]** AUTOMATIC AIR CONDITIONER
**FOOTNOTE [C]** MANUAL AIR CONDITIONER


1-WU11-005-A

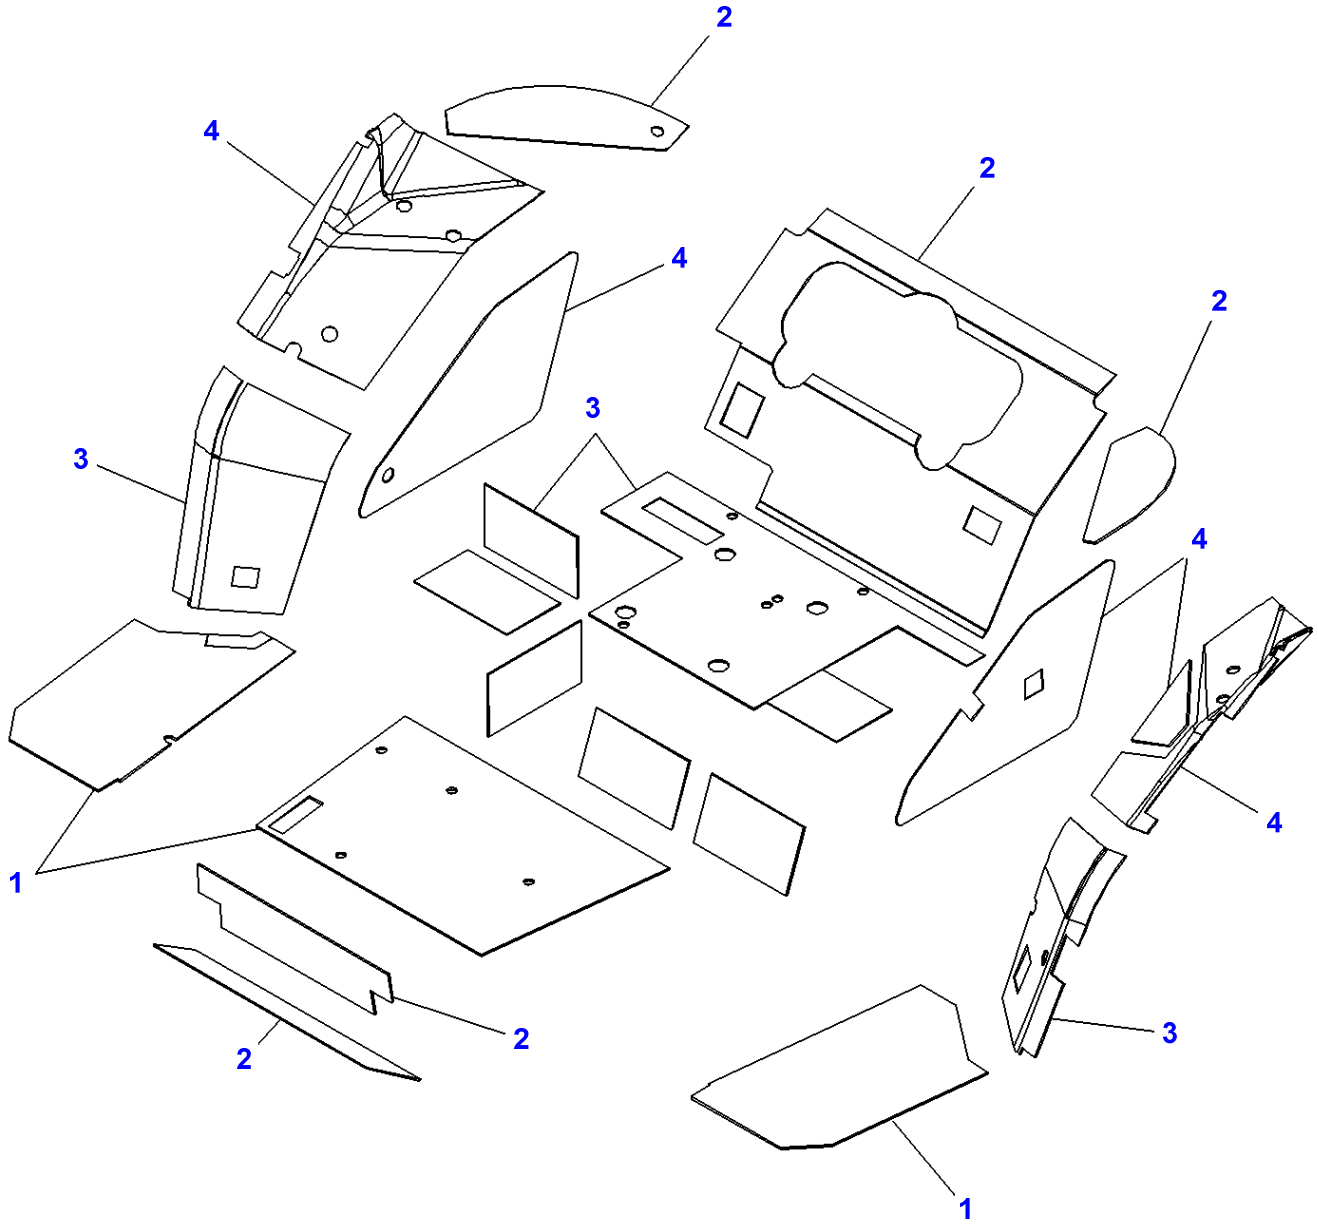

https://truckmanualshub.com/



| Item | Part Number | Qty | Description |
|---|---|---|---|
| 1 | 3789928M92 | 1 | Sound Reduction |
| 2 | 3789926M96 | 1 | Sound Reduction |
| 3 | 3789925M96 | 1 | Sound Reduction |
| 4 | 3789927M95 | 1 | Sound Reduction |

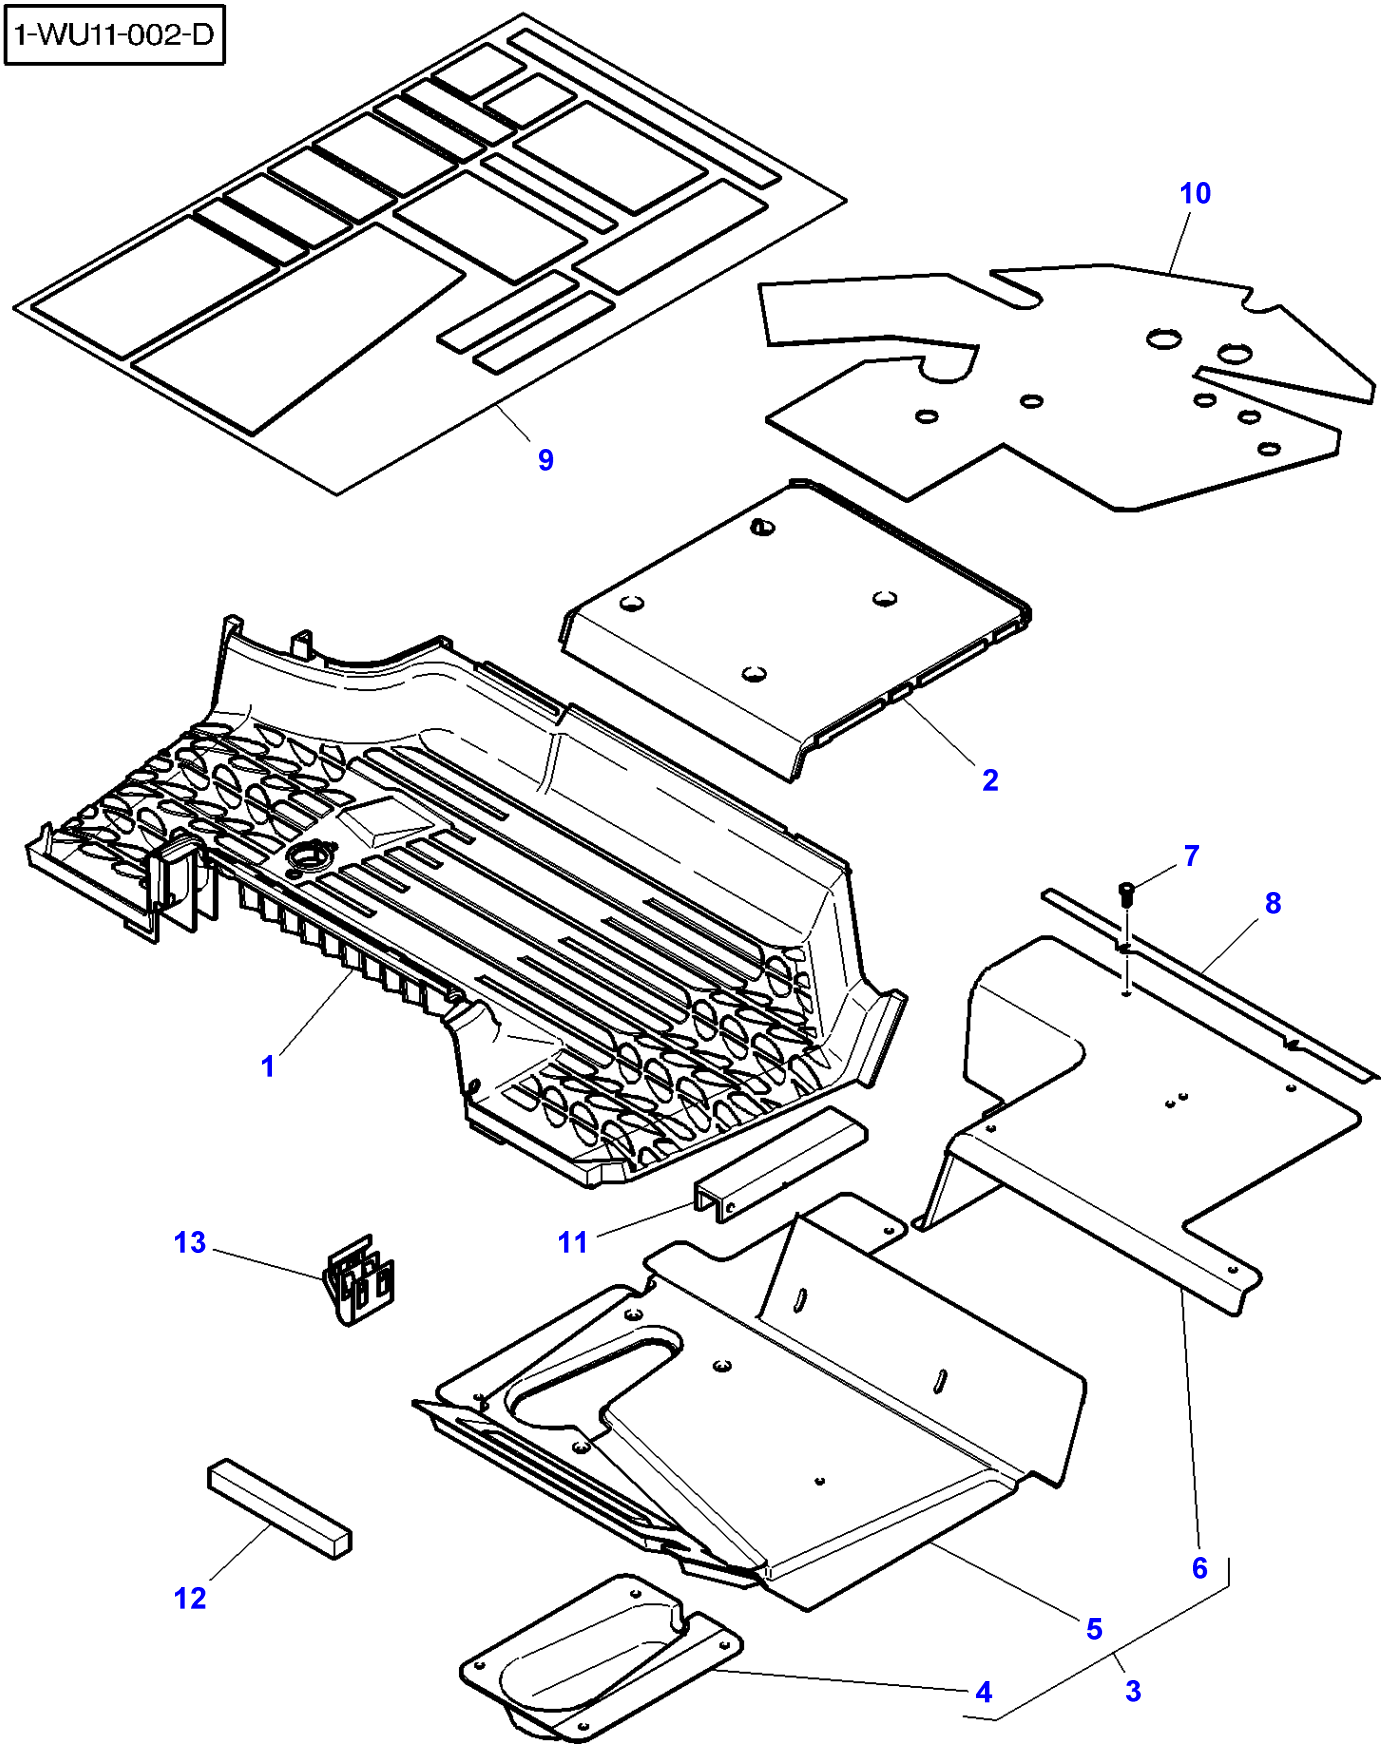

1-WU11-002-D
9
10
2
1
7
8
13
11
12
6
5
4
3

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4270891M92 | 1 | Mat | |
| 2 | 4270892M91 | 1 | Mat | |
| 3 | 4271510M93 | 1 | Fence | |
| 4 | | 1 | Fence | (3) Not serviced,order REF. 3 |
| 5 | | 1 | Fence | (3) Not serviced,order REF. 3 |
| 6 | | 1 | Fence | (3) Not serviced,order REF. 3 |
| 7 | 3010506X1 | X | Screw | M5 X 16 |
| 8 | 4271488M1 | 1 | Strap | |
| 9 | 4271481M92 | 1 | Sound Reduction | |
| 10 | 4271512M3 | 1 | Foam | Right Hand |
| 11 | 4277104M1 | 1 | Chock | |
| 12 | 3778749M1 | 2 | Foam | 25 X 15 X 80 |
| 13 | 4275137M1 | 1 | Clip | |

1-WU07-002-C

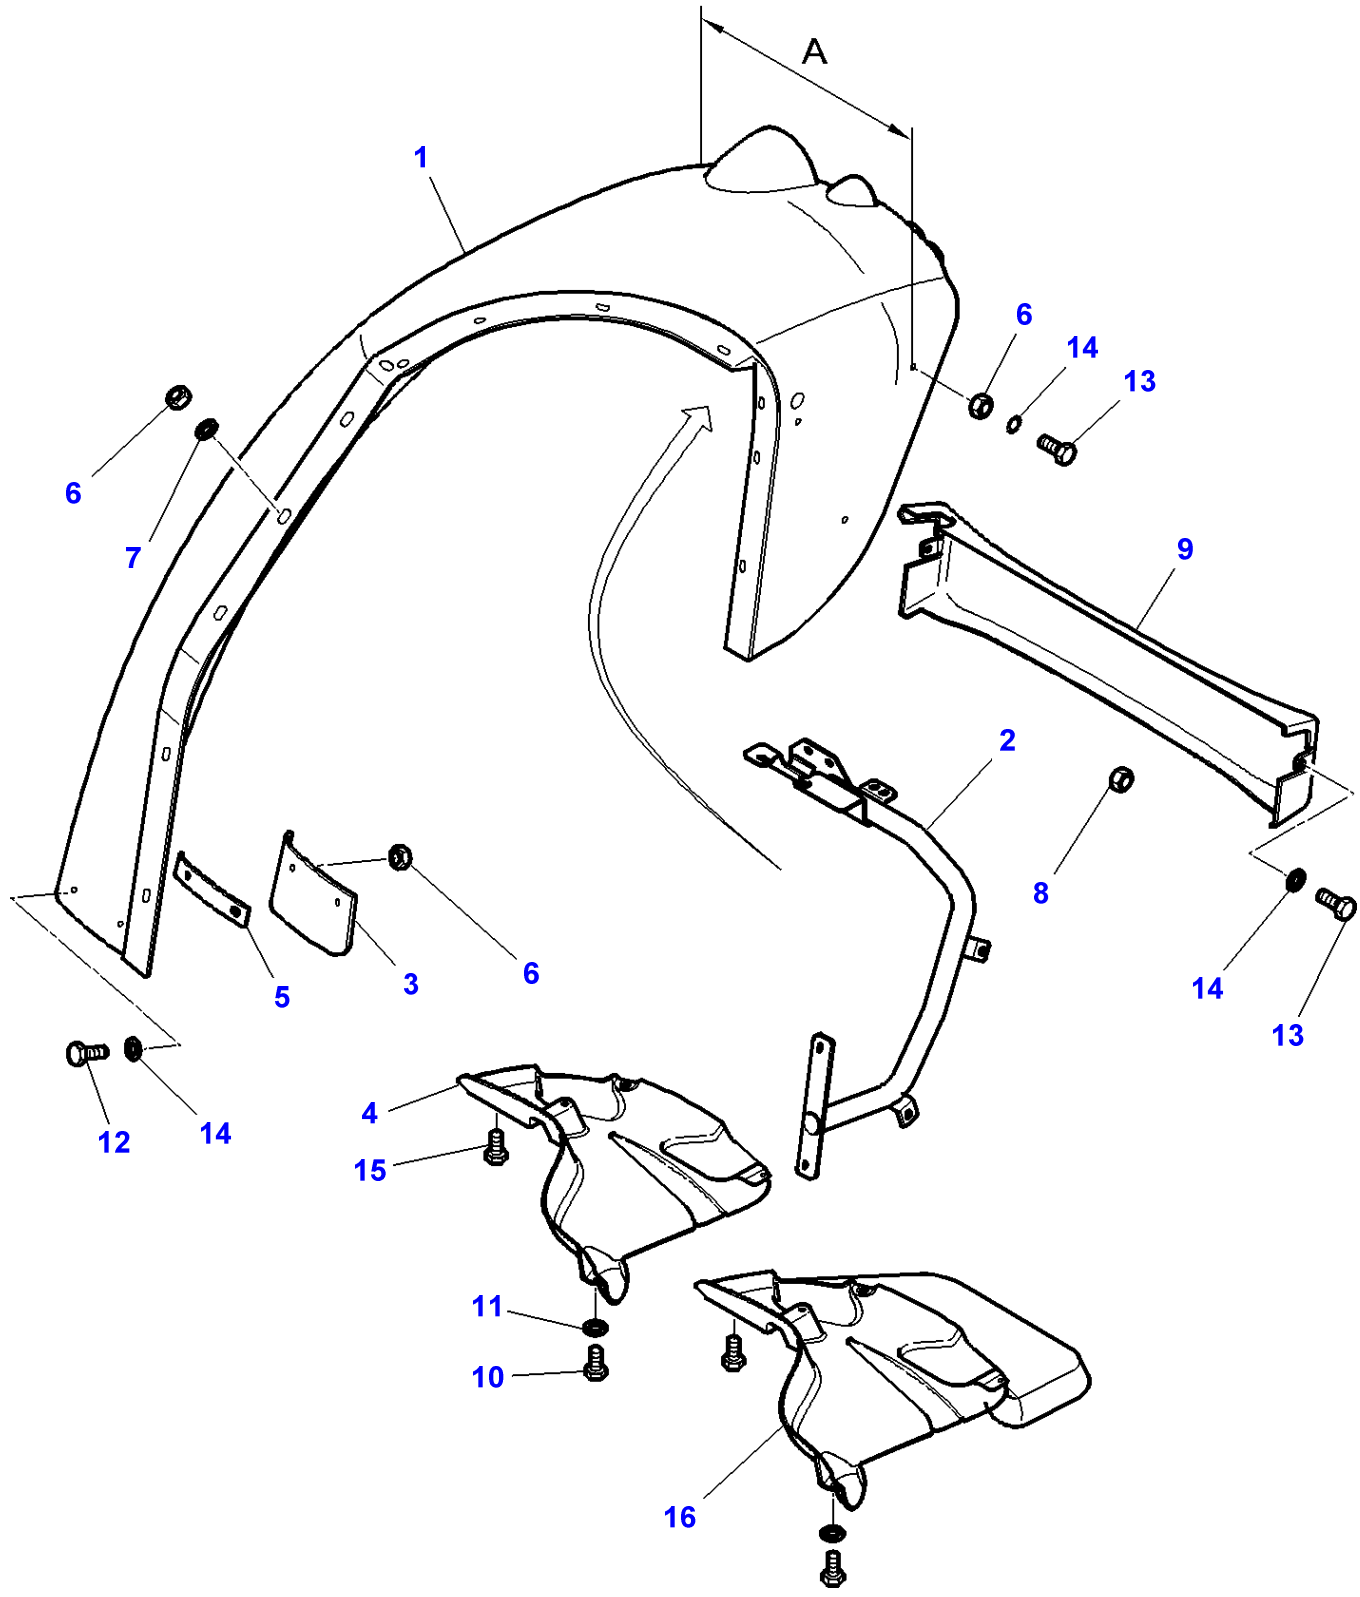

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Tractor Cab - Fenders Page 110-0110

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786915P1 | 1 | Fender | [B,C]<br>Left Hand A = 578 MM |
| | 3786913P1 | 1 | Fender | [B,D]<br>Left Hand A = 721 MM |
| | 3786919P1 | 1 | Fender | [B,E]<br>Left Hand A = 843 MM |
| | 3786916P1 | 1 | Fender | [B,C]<br>Right Hand A = 578 MM |
| | 3786914P1 | 1 | Fender | [B,D]<br>Right Hand A = 721 MM |
| | 3786920P1 | 1 | Fender | [B,E]<br>Right Hand A = 843 MM |
| 2 | 3787111M1 | 1 | Support | [C]<br>Left Hand |
| | 3787113M1 | 1 | Support | [D]<br>Left Hand |
| | 3787115M1 | 1 | Support | [E]<br>Left Hand |
| | 3787112M1 | 1 | Support | [C]<br>Right Hand |
| | 3787114M1 | 1 | Support | [D]<br>Right Hand |
| | 3787116M1 | 1 | Support | [E]<br>Right Hand |
| 3 | 3787129M1 | 1 | Extension | [C]<br>Left Hand |
| | 4277275M1 | 1 | Extension | [C]<br>Right Hand |
| | 3787130M1 | 1 | Extension | [D,E]<br>Right Hand |
| | 4277274M1 | 1 | Extension | [D,E]<br>Left Hand |
| 4 | 3787123M1 | 1 | Protector | [C]<br>Left Hand |
| | 3787125M1 | 1 | Protector | [D]<br>Left Hand |
| | 3787127M1 | 1 | Protector | [E]<br>Left Hand |
| | 3787124M1 | 1 | Protector | [C]<br>Right Hand |
| | 3787126M1 | 1 | Protector | [D]<br>Right Hand |
| | 3787128M1 | 1 | Protector | [E]<br>Right Hand |
| 5 | 3787195M1 | 2 | Support | [C] |
| | 3787196M1 | 2 | Support | [D,E] |
| 6 | 394367X1 | 34 | Locknut | M8 |
| 7 | 391039X1 | 24 | Washer Metric | Diameter 8-24 X 2 |
| 8 | 1427024M1 | 2 | Nut | M8 |
| 9 | 4275169P1 | 1 | Band | [B] |
| 10 | 3009280X1 | 6 | Screw | M6 X 12 |
| 11 | 390971X1 | 10 | Washer | Diameter 6-12 X 1,5 |
| 12 | 3010910X1 | 4 | Screw | M8 X 25 |
| 13 | 339761X1 | 6 | Hex. Sock. Screw | M8 X 25 |
| 14 | 385361X1 | 14 | Washer | Diameter 9-17 X 3,2 |
| 15 | 3009280X1 | 4 | Screw | M6 X 12 |
| 16 | 4271145M1 | 1 | Extension | [D,A]<br>Left Hand |
| | 4271147M1 | 1 | Extension | [E,A]<br>Left Hand |
| | 4271146M1 | 1 | Extension | [D,A]<br>Right Hand |
| | 4271148M1 | 1 | Extension | [E,A]<br>Right Hand |

**FOOTNOTE [A]** USED WITH EXTENSION FENDERS
**FOOTNOTE [B]** THE APPROPRIATE SAFETY DECALS MUST BE ORDERED AND FITTED TO THIS PART
**FOOTNOTE [C]** FOR WHEELBASE 2,00 M
**FOOTNOTE [D]** FOR WHEELBASE 2,30 M
**FOOTNOTE [E]** FOR WHEELBASE 2,55 M

1-WU13-001-B

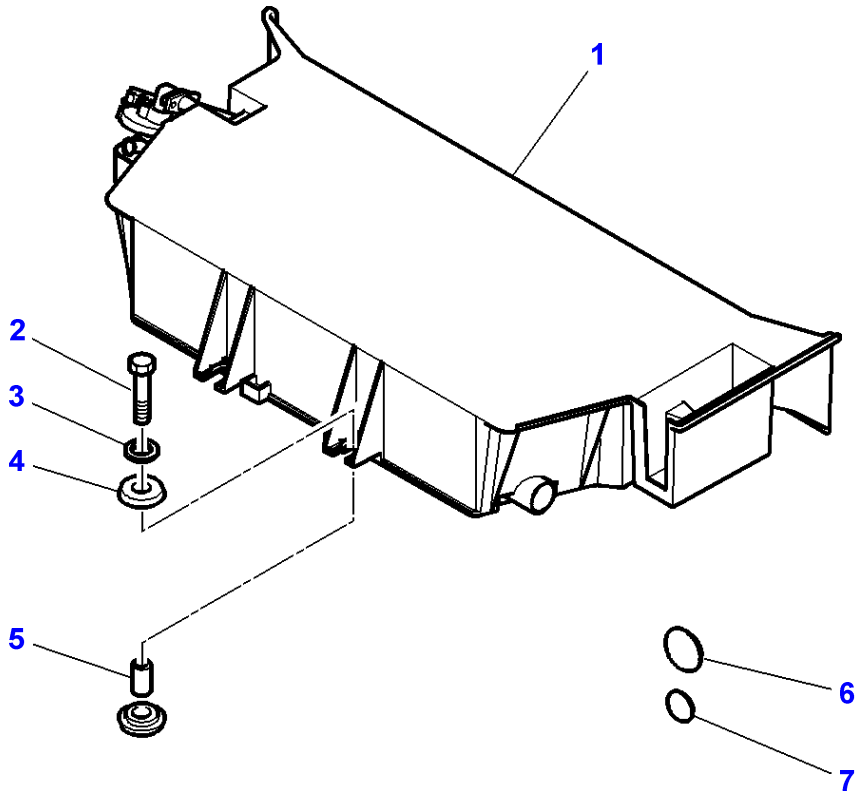


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272838M92 | 1 | Heater | See Page - Reference Number 110-0125/1 |
| 2 | 339337X1 | 4 | Hex. Sock. Screw | M8 X 30 |
| 3 | 391039X1 | 4 | Washer Metric | Diameter 8-24 X 2 |
| 4 | 3387512M1 | 8 | Buffer | |
| 5 | 3387513M1 | 4 | Spacer | Diameter 9-11 X 16 |
| 6 | 3808629M1 | 1 | Grommet | Diameter 22,5 MM |
| 7 | 3808628M1 | 1 | Grommet | Diameter 16,3 MM |


1-WU13-006-A

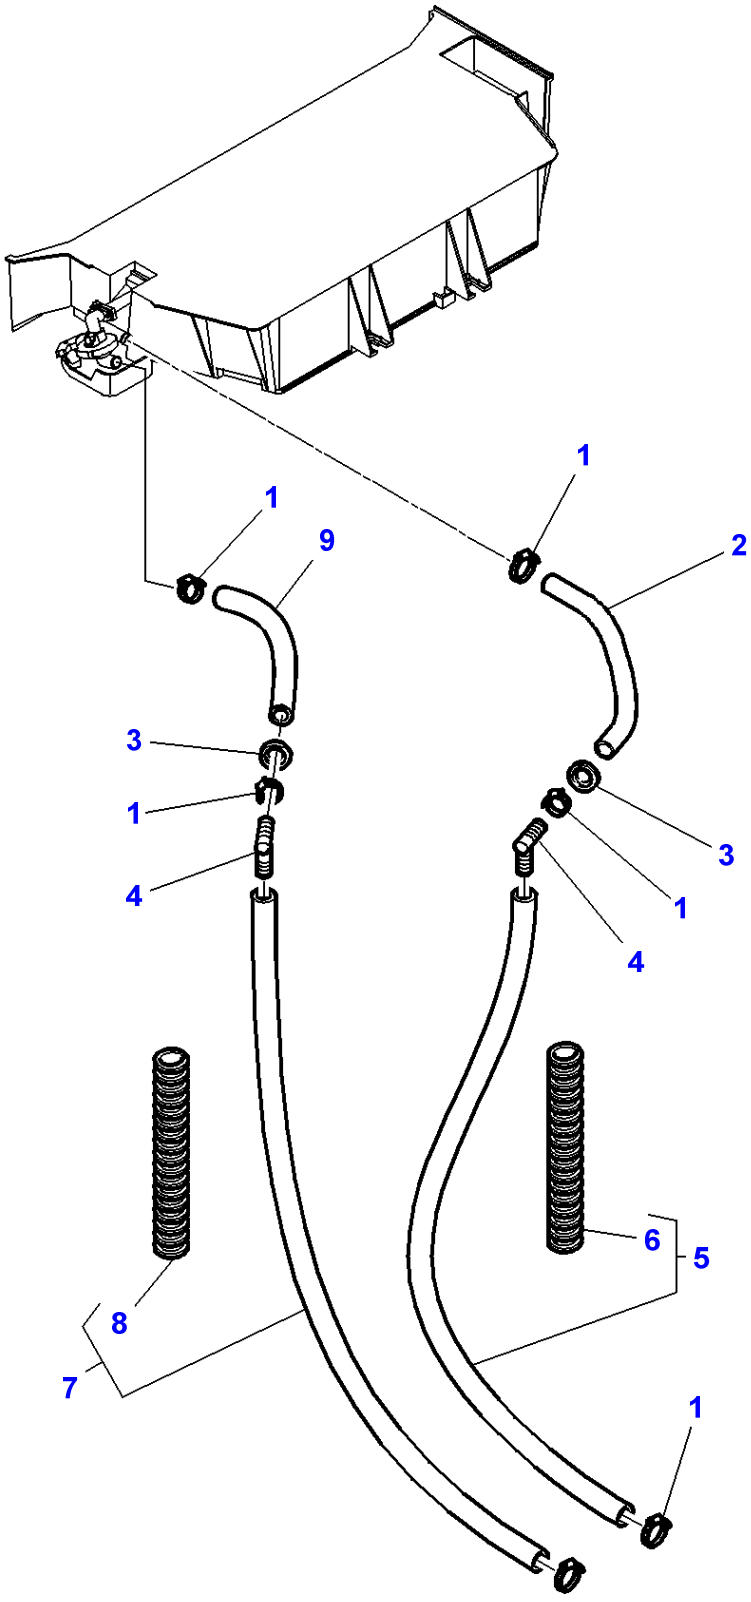

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3019564X1 | 8 | Hose Clip | Diameter 16-25 |
| 2 | 3787187M1 | 1 | Hose | Length 330 MM |
| 3 | 3788224M1 | 2 | Grommet | |
| 4 | 3788222M1 | 2 | Elbow | |
| 5 | 4277810M92 | 1 | Hose | Length 1720 MM |
| 6 | 4272050M1 | 1 | Sheath | (5)<br>Length 500 MM |
| 7 | 4277809M91 | 1 | Hose | Length 1740 MM |
| 8 | 4272050M1 | 1 | Sheath | (7)<br>Length 400 MM |
| 9 | 3787186M1 | 1 | Hose | Length 200 MM |

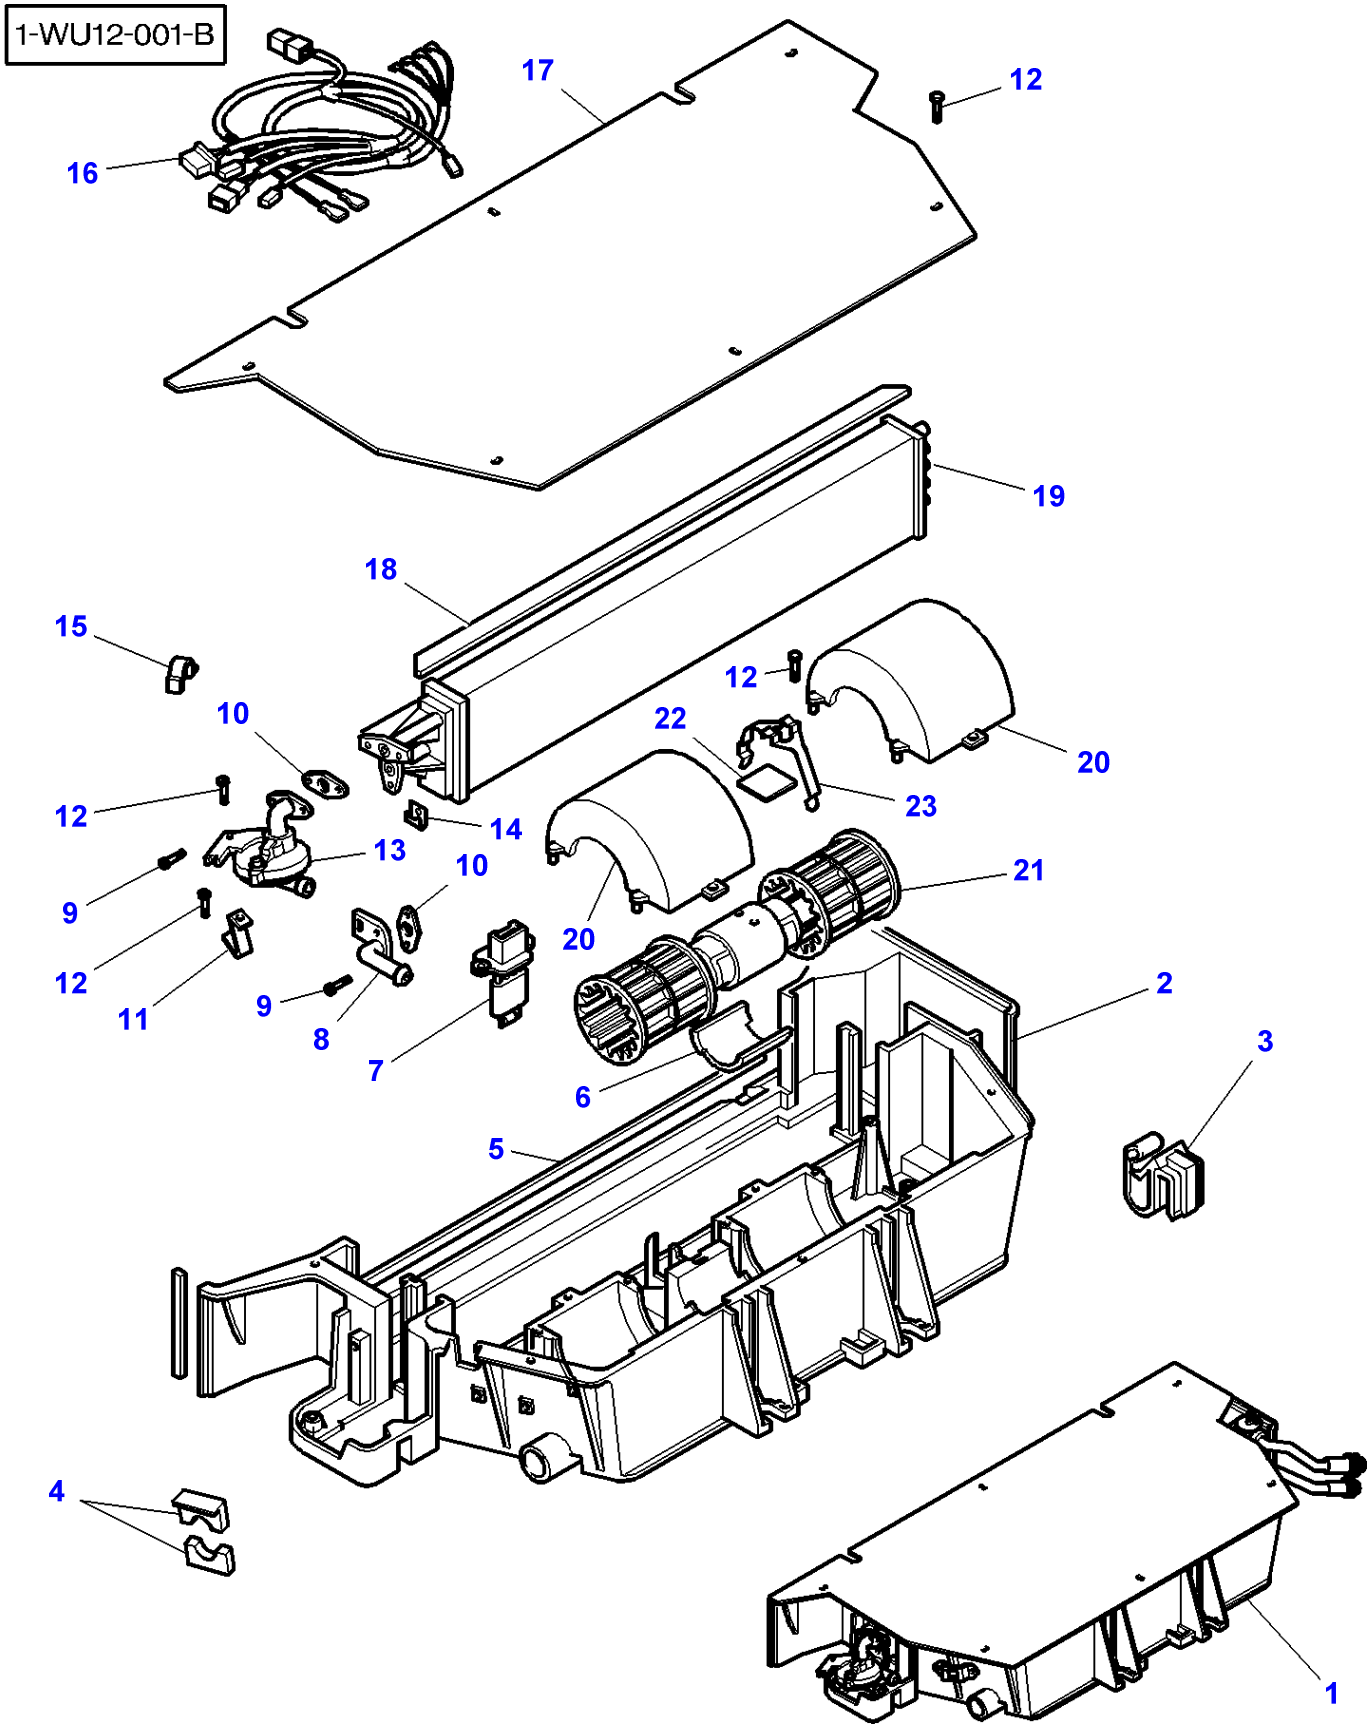
1-WU12-001-B
16
17
12
19
18
15
10
12
22
20
23
14
13
10
9
21
20
12
11
9
8
7
6
2
3
5
4
1


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272838M92 | 1 | Heater | |
| 2 | 3907309M1 | 1 | Housing | (1) |
| 3 | 3907306M1 | 1 | Clip | (1) |
| 4 | 3907303M1 | 1 | Foam | (1) |
| 5 | 3902322M1 | 1 | Foam | (1) |
| 6 | 3907302M1 | 1 | Protector | (1) |
| 7 | 3907288M2 | 1 | Resistor | (1) |
| 8 | 3907301M1 | 1 | Elbow | (1) |
| 9 | 3904319M1 | 4 | Screw | (1) 4,8X19 |
| 10 | 3902327M1 | 2 | Gasket | (1) |
| 11 | 3907296M1 | 1 | Strap | (1) |
| 12 | 365916X1 | 12 | Self Tap Screws | (1) 4X12 |
| 13 | 3907300M1 | 1 | Cock | (1) |
| 14 | 3902090M1 | 4 | Nut | (1) |
| 15 | 3904589M1 | 1 | Clip | (1) |
| 16 | 3907308M91 | 1 | Harness | (1) |
| 17 | 3310839M1 | 1 | Plate | (1) |
| 18 | 3310849M1 | 1 | Foam | (1) |
| 19 | 3310827M92 | 1 | Radiator | (1) |
| 20 | 3310833M1 | 2 | Cover | (1) |
| 21 | 3907297M91 | 1 | Engine | (1) |
| 22 | | 1 | Plate | [A] (1) |
| 23 | 3902320M1 | 1 | Strap | (1) |

**FOOTNOTE [A]** NOT DETAILLED

1-WU45-011-A

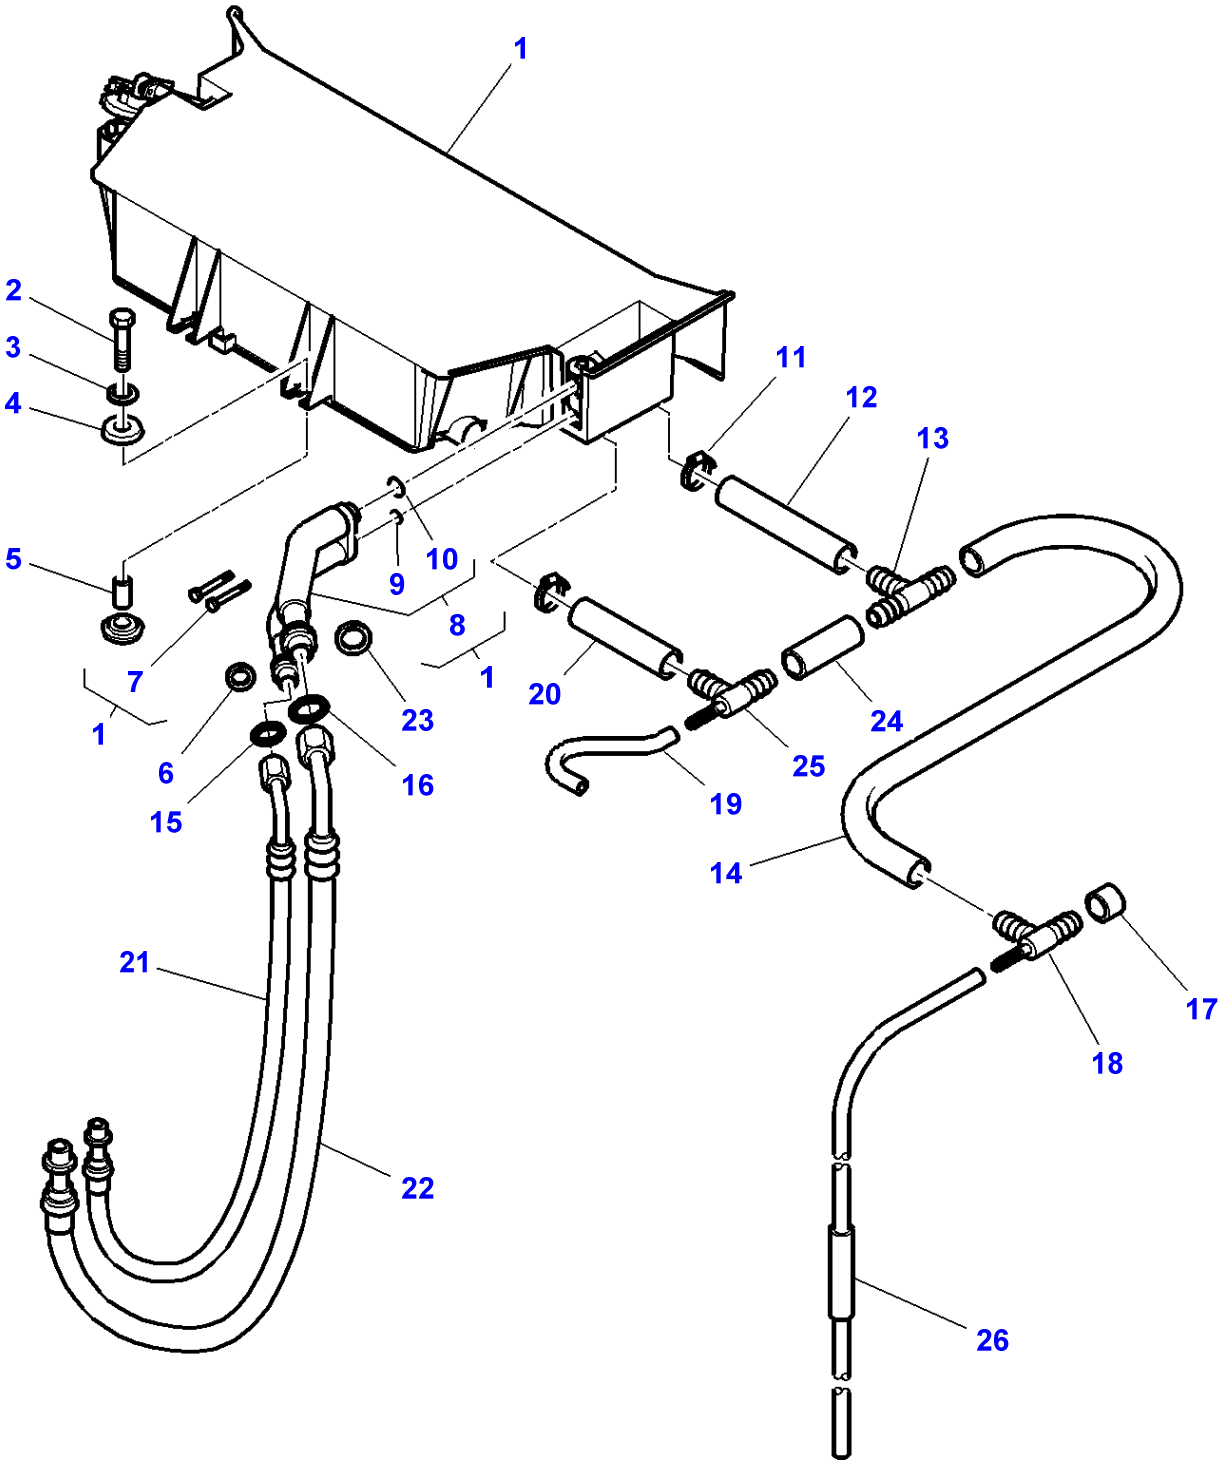

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Air Conditioner - Hose Page 110-0130

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272839M92 | 1 | Air Conditioner | [A]<br>See Page - Reference Number 110-0145/1 |
| | 4272840M91 | 1 | Air Conditioner | [B]<br>See Page - Reference Number 110-0150/1 |
| 2 | 339337X1 | 4 | Hex. Sock. Screw | M8 X 30 |
| 3 | 391039X1 | 4 | Washer Metric | Diameter 8-24 X 2 |
| 4 | 3387512M1 | 8 | Buffer | |
| 5 | 3387513M1 | 4 | Spacer | Diameter 9-11 X 16 |
| 6 | 3011495X1 | 1 | Bush | Diameter 16 MM |
| 7 | 3001758X1 | 2 | Screw Metric | (1)<br>M6 X 50 |
| 8 | 3786651M91 | 1 | Tube Assy | (1) |
| 9 | 3820743M1 | 1 | O Ring | (8)<br>Diameter 6,7 X 1,8 |
| 10 | 3820742M1 | 1 | O Ring | (8)<br>Diameter 13,4 X 2,4 |
| 11 | 3019564X1 | 2 | Hose Clip | Diameter 16-25 |
| 12 | 3777617M1 | 1 | Hose | Length 218 MM |
| 13 | 3010683X1 | 1 | Teepiece | |
| 14 | 3778361M1 | 1 | Water Hose | Length 529 MM |
| 15 | **3010471X1** | 1 | O Ring | Diameter 7,65 MM |
| 16 | 3010473X1 | 1 | O Ring | Diameter 14 MM |
| 17 | 3777737M1 | 1 | Plug | |
| 18 | 3388779M1 | 1 | Union | |
| 19 | 4275132M1 | 1 | Hose | Length 100 MM |
| 20 | 3777615M1 | 1 | Hose | Length 179 MM |
| 21 | 4273289M1 | 1 | Hydr. Hose | Length 2300 MM |
| 22 | 4273290M1 | 1 | Hydr. Hose | Length 2400 MM |
| 23 | 3011496X1 | 1 | Bush | Diameter 22 MM |
| 24 | 3777613M1 | 1 | Hose | Length 60 MM |
| 25 | 3388779M1 | 1 | Union | |
| 26 | 4276778M91 | 1 | Tube Assy | Length 850 MM |

**FOOTNOTE [A]** MANUAL AIR CONDITIONER
**FOOTNOTE [B]** AUTOMATIC AIR CONDITIONER

1-WU45-012-A

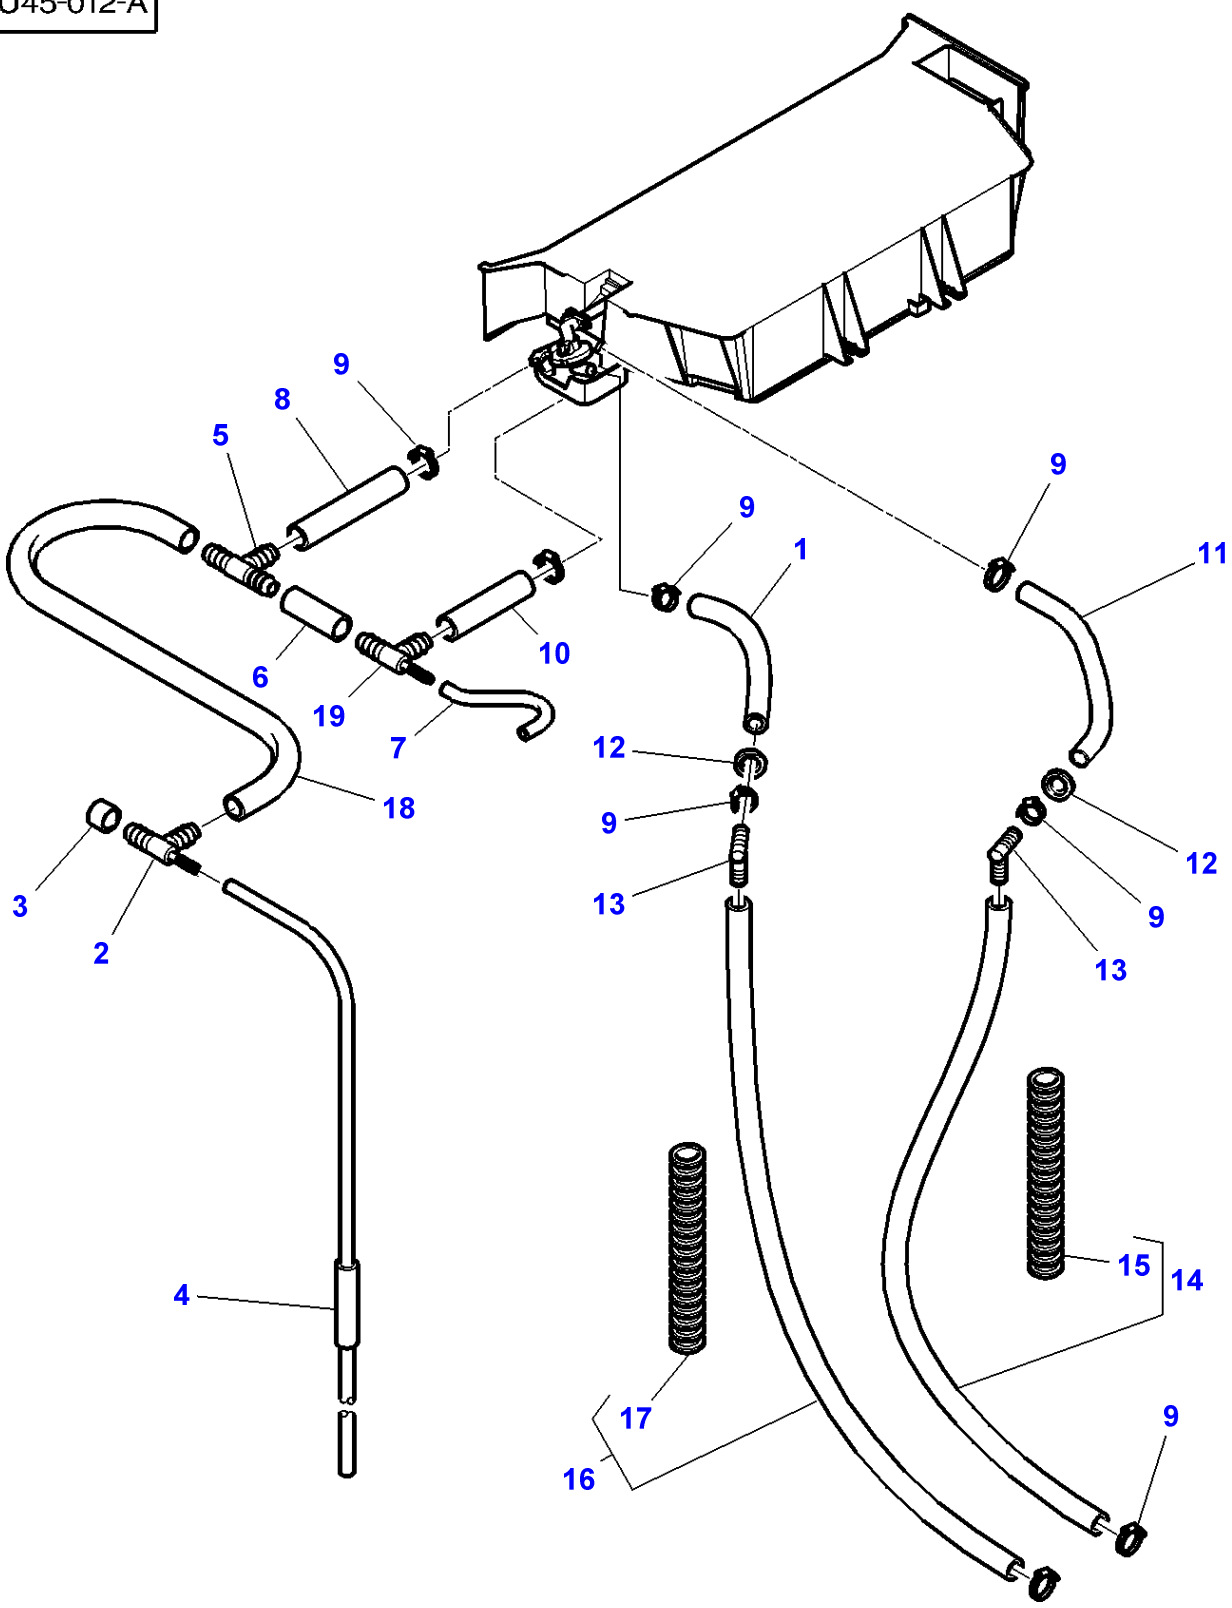


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787186M1 | 1 | Hose | Length 200 MM |
| 2 | 3388779M1 | 1 | Union | |
| 3 | 3777737M1 | 1 | Plug | |
| 4 | 4276778M91 | 1 | Tube Assy | Length 850 MM |
| 5 | 3010683X1 | 1 | Teepiece | |
| 6 | 3777613M1 | 1 | Hose | Length 60 MM |
| 7 | 4275132M1 | 1 | Hose | Length 100 MM |
| 8 | 3777617M1 | 1 | Hose | Length 218 MM |
| 9 | 3019564X1 | 8 | Hose Clip | Diameter 16-25 |
| 10 | 3777615M1 | 1 | Hose | Length 179 MM |
| 11 | 3787187M1 | 1 | Hose | Length 330 MM |
| 12 | 3788224M1 | 2 | Grommet | |
| 13 | 3788222M1 | 2 | Elbow | |
| 14 | 4277810M92 | 1 | Hose | Length 1720 MM |
| 15 | 4272050M1 | 1 | Sheath | (14)<br>Length 400 MM |
| 16 | 4277809M91 | 1 | Hose | Length 1740 MM |
| 17 | 4272050M1 | 1 | Sheath | (16)<br>Length 400 MM |
| 18 | 3778361M1 | 1 | Water Hose | Length 529 MM |
| 19 | 3388779M1 | 1 | Union | |


1-WU45-013-A

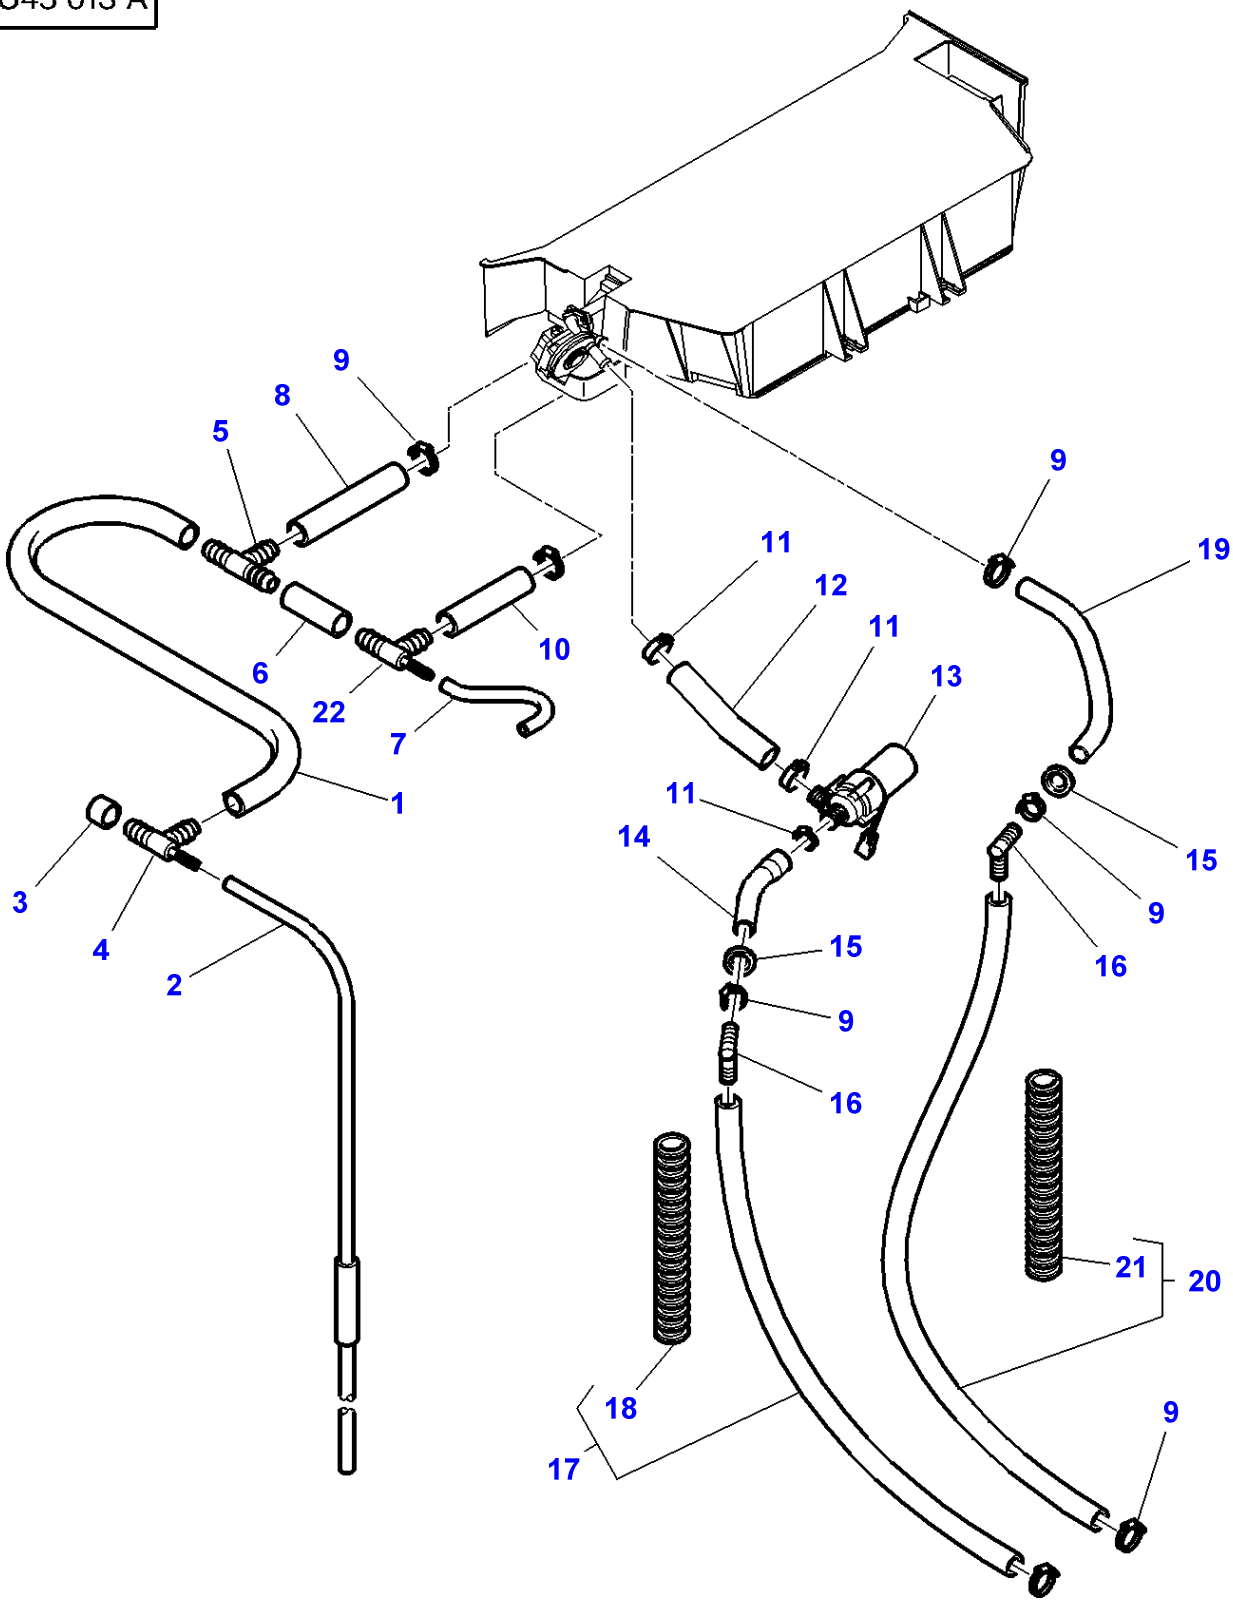

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3778361M1 | 1 | Water Hose | Length 529 MM |
| 2 | 4276778M91 | 1 | Tube Assy | |
| 3 | 3777737M1 | 1 | Plug | |
| 4 | 3388779M1 | 1 | Union | |
| 5 | 3010683X1 | 1 | Teepiece | |
| 6 | 3777613M1 | 1 | Hose | Length 60 MM |
| 7 | 4275132M1 | 1 | Hose | Length 100 MM |
| 8 | 3777617M1 | 1 | Hose | Length 218 MM |
| 9 | 3019564X1 | 8 | Hose Clip | Diameter 16-25 |
| 10 | 3777615M1 | 1 | Hose | Length 179 MM |
| 11 | 338614X1 | 3 | Hose Clip | Diameter 20-32 |
| 12 | 4271129M1 | 1 | Hose | Length 145 MM |
| 13 | 3712744M1 | 1 | Water Pump | |
| 14 | 4272841M1 | 1 | Hose | Length 150 MM |
| 15 | 3788224M1 | 2 | Grommet | |
| 16 | 3788222M1 | 2 | Elbow | |
| 17 | 4277809M91 | 1 | Hose | Length 1740 MM |
| 18 | 4272050M1 | 1 | Sheath | (17)<br>Length 400 MM |
| 19 | 3787187M1 | 1 | Hose | Length 330 MM |
| 20 | 4277810M92 | 1 | Hose | Diameter 1720 MM |
| 21 | 4272050M1 | 1 | Sheath | (20)<br>Length 400 MM |
| 22 | 3388779M1 | 1 | Union | |

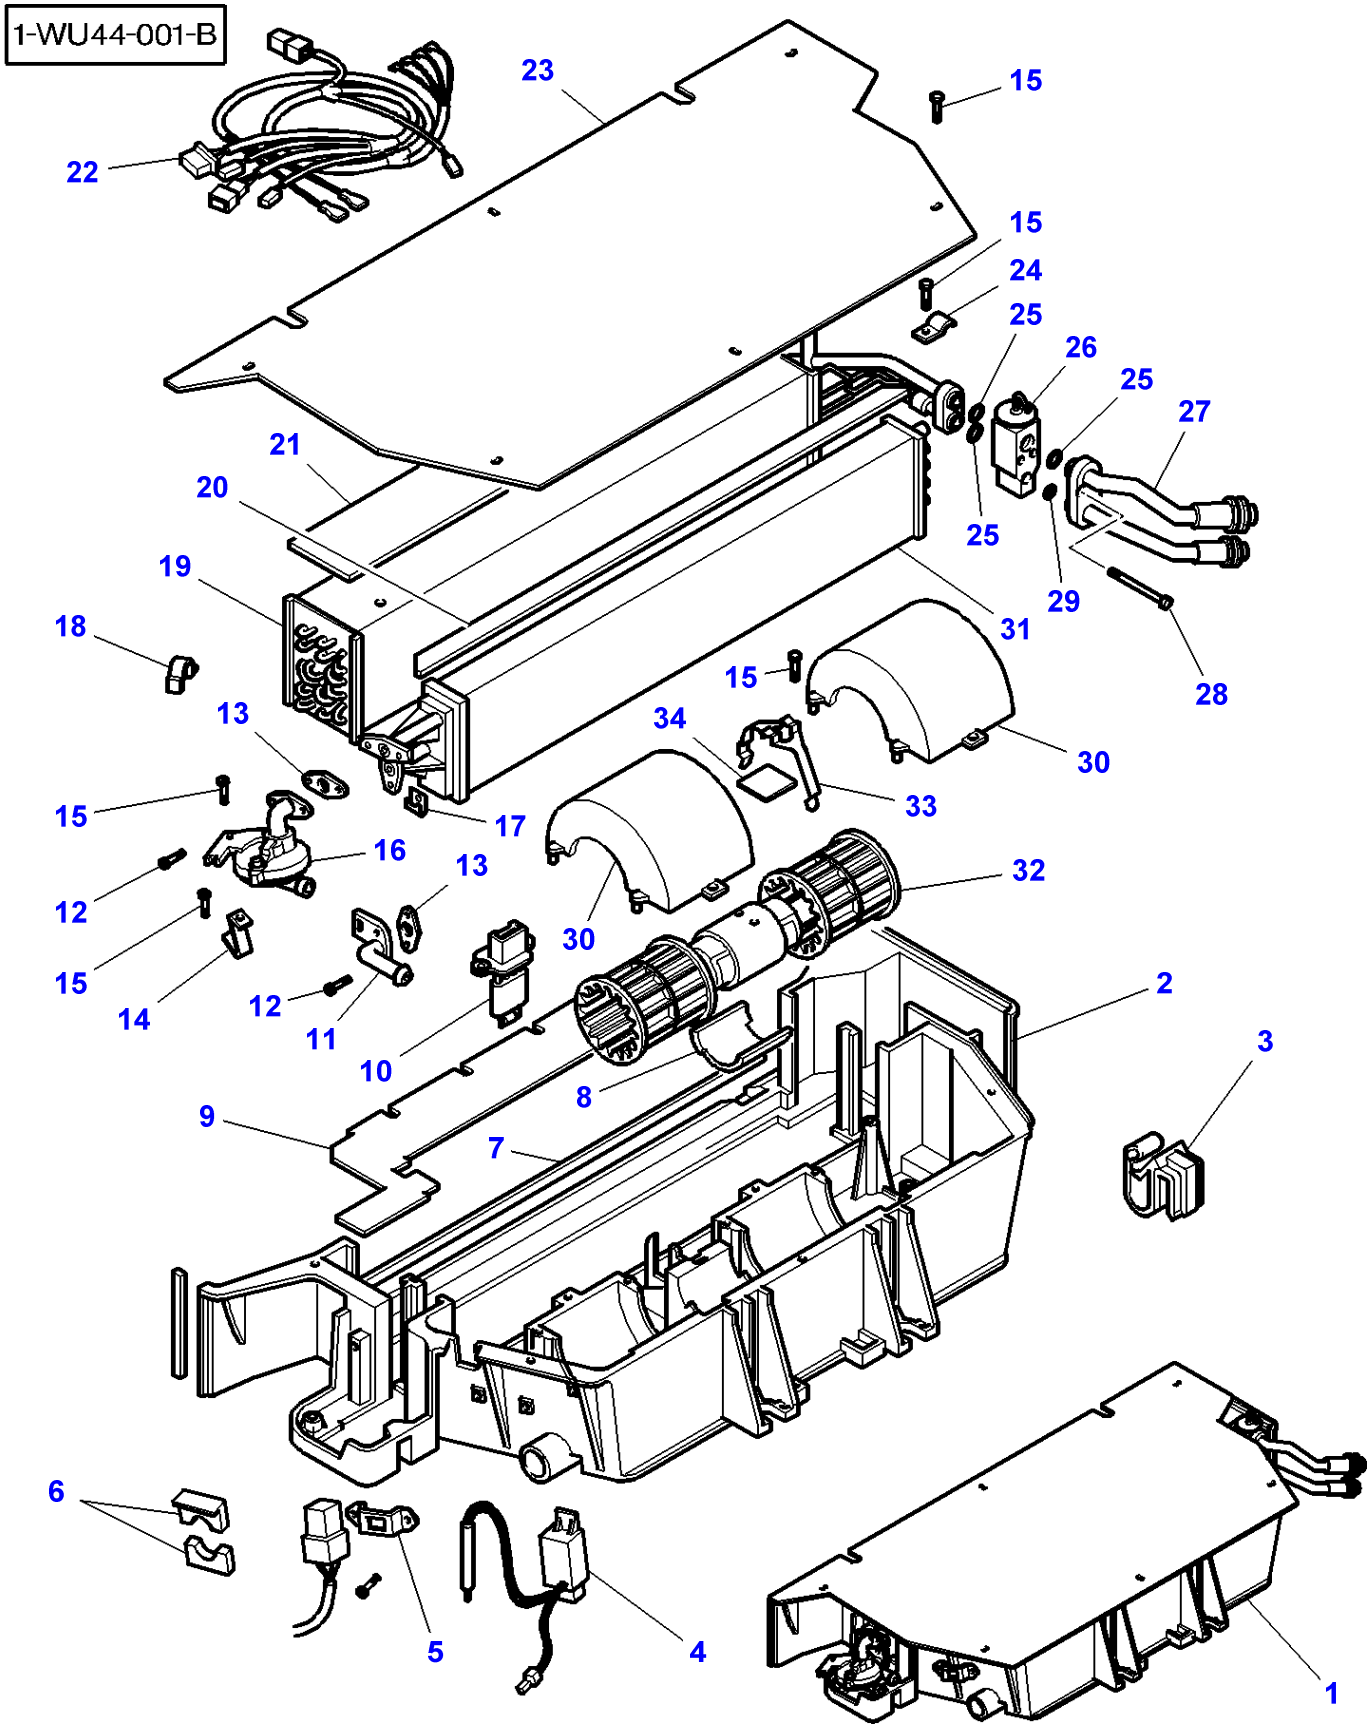
1-WU44-001-B
23
15
22
15
24
25
26
25
27
21
20
25
19
29
31
18
28
15
13
34
30
15
17
33
16
13
32
12
30
15
14
12
11
10
2
3
8
9
7
6
5
4
1


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Air Conditioner - Standard Roof - Manual Air Conditioner Page 110-0145

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272839M92 | 1 | Air Conditioner | [A] |
| 2 | 3907307M1 | 1 | Housing | (1) |
| 3 | 3907306M1 | 1 | Clip | (1) |
| 4 | 3907305M1 | 1 | Thermostat | (1) |
| 5 | 3907304M1 | 1 | Strap | (1) |
| 6 | 3907303M1 | 1 | Foam | (1) |
| 7 | 3902322M1 | 1 | Foam | (1) |
| 8 | 3907302M1 | 1 | Protector | (1) |
| 9 | 3902329M2 | 1 | Plate | (1) |
| 10 | 3904295M1 | 1 | Resistor | (1) |
| 11 | 3907301M1 | 1 | Elbow | (1) |
| 12 | 3904319M1 | 4 | Screw | (1) 4,8X19 |
| 13 | 3902327M1 | 2 | Gasket | (1) |
| 14 | 3907296M1 | 1 | Strap | (1) |
| 15 | 365916X1 | 13 | Self Tap Screws | (1) 4X12 |
| 16 | 3907300M1 | 1 | Cock | (1) |
| 17 | 3902090M1 | 4 | Nut | (1) |
| 18 | 3904589M1 | 1 | Clip | (1) |
| 19 | 3902331M92 | 1 | Evaporator | (1) |
| 20 | 3310849M1 | 1 | Foam | (1) |
| 21 | 3902332M1 | 1 | Foam | (1) |
| 22 | 3907299M91 | 1 | Harness | (1) |
| 23 | 3310839M1 | 1 | Plate | (1) |
| 24 | 3310836M1 | 1 | Strap | (1) |
| 25 | 3902500M1 | 3 | Gasket | (1) |
| 26 | 3902334M91 | 1 | Regulator | (1) |
| 27 | 3907298M91 | 1 | Tubing | (1) |
| 28 | 3904328M1 | 2 | Screw | (1) M6X50 |
| 29 | 3902550M1 | 1 | O Ring | (1) |
| 30 | 3310833M1 | 2 | Cover | (1) |
| 31 | 3310827M92 | 1 | Radiator | (1) |
| 32 | 3907297M91 | 1 | Engine | (1) |
| 33 | 3902320M1 | 1 | Strap | (1) |
| 34 | | 1 | Plate | [B] (1) |

**FOOTNOTE [A]** MANUAL AIR CONDITIONER
**FOOTNOTE [B]** NOT DETAILLED

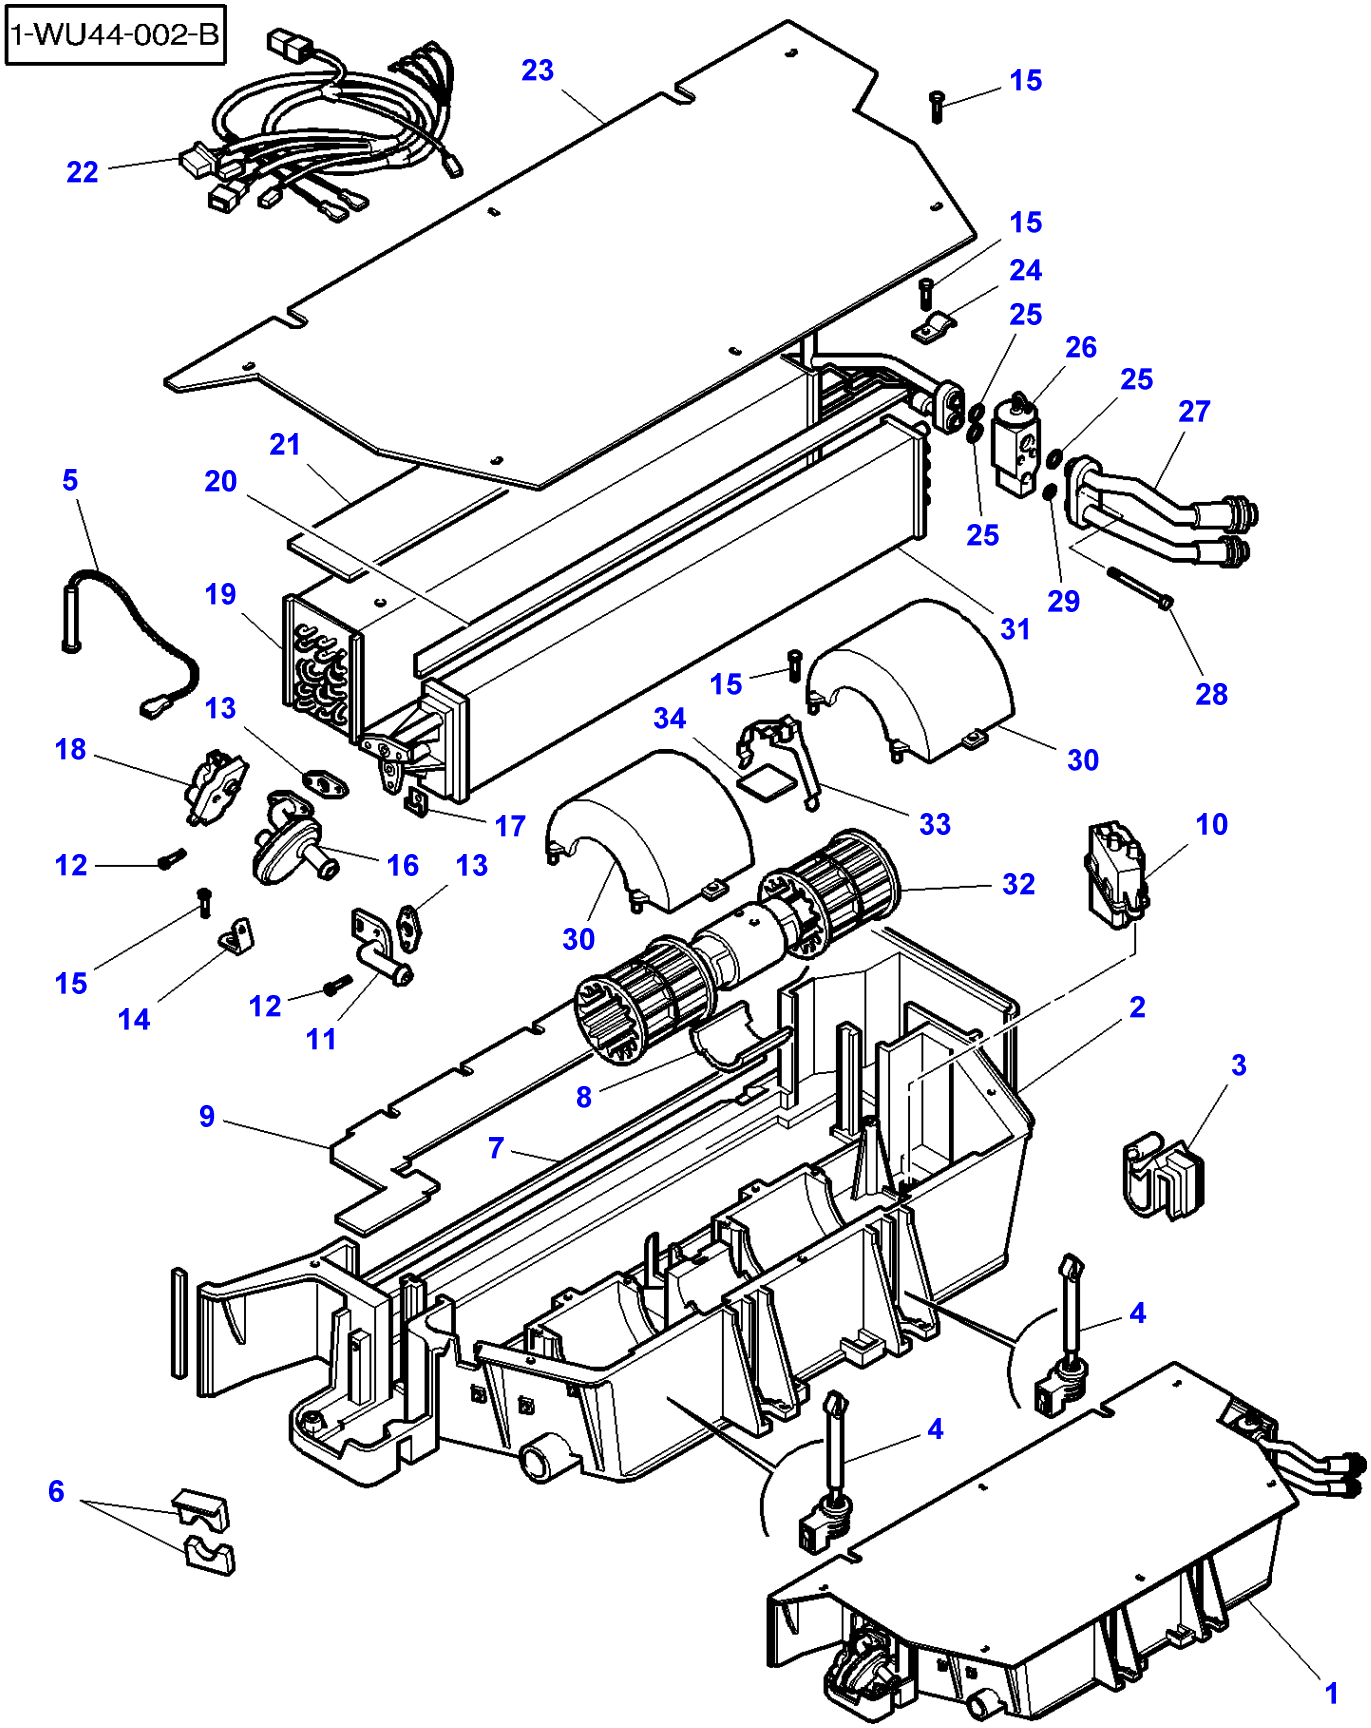

1-WU44-002-B
23
15
22
15
24
25
26
25
27
21
20
5
25
29
19
31
28
15
13
34
18
30
17
33
10
12
16
13
32
30
15
14
12
11
2
3
9
8
7
4
4
6
1

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272840M91 | 1 | Air Conditioner | [A] |
| 2 | 3907307M1 | 1 | Housing | (1) |
| 3 | 3907306M1 | 1 | Clip | (1) |
| 4 | 3907313M1 | 2 | Sensor | (1) |
| 5 | 3907316M1 | 1 | Sender | (1) |
| 6 | 3907303M1 | 2 | Foam | (1) |
| 7 | 3902322M1 | 1 | Foam | (1) |
| 8 | 3907302M1 | 1 | Protector | (1) |
| 9 | 3902329M2 | 1 | Plate | (1) |
| 10 | 3907310M1 | 1 | Regulator | (1) |
| 11 | 3907301M1 | 1 | Elbow | (1) |
| 12 | 3904319M1 | 4 | Screw | (1) |
| | | | | 4,8 X 19 |
| 13 | 3902327M1 | 2 | Gasket | (1) |
| 14 | 3907314M1 | 1 | Strap | (1) |
| 15 | 365916X1 | 15 | Self Tap Screws | (1) |
| | | | | 4 X 12 |
| 16 | 3907312M1 | 1 | Cock | (1) |
| 17 | 3902090M1 | 4 | Nut | (1) |
| 18 | | 1 | Engine | (1) |
| | | | | Not serviced,order REF. 16 |
| 19 | 3902331M92 | 1 | Evaporator | (1) |
| 20 | 3310849M1 | 1 | Foam | (1) |
| 21 | 3902332M1 | 1 | Foam | (1) |
| 22 | 3907315M1 | 1 | Harness | (1) |
| 23 | 3310839M1 | 1 | Plate | (1) |
| 24 | 3310836M1 | 1 | Strap | (1) |
| 25 | 3902500M1 | 3 | Gasket | (1) |
| 26 | 3902334M91 | 1 | Regulator | (1) |
| 27 | 3907298M91 | 1 | Tubing | (1) |
| 28 | 3904328M1 | 2 | Screw | (1) |
| 29 | 3902550M1 | 1 | O Ring | (1) |
| 30 | 3310833M1 | 1 | Cover | (1) |
| 31 | 3310827M92 | 1 | Radiator | (1) |
| 32 | 3907297M91 | 1 | Engine | (1) |
| 33 | 3902320M1 | 1 | Strap | (1) |
| 34 | | 1 | Plate | [B] |
| | | | | (1) |

**FOOTNOTE [A]** AUTOMATIC AIR CONDITIONER
**FOOTNOTE [B]** NOT DETAILLED

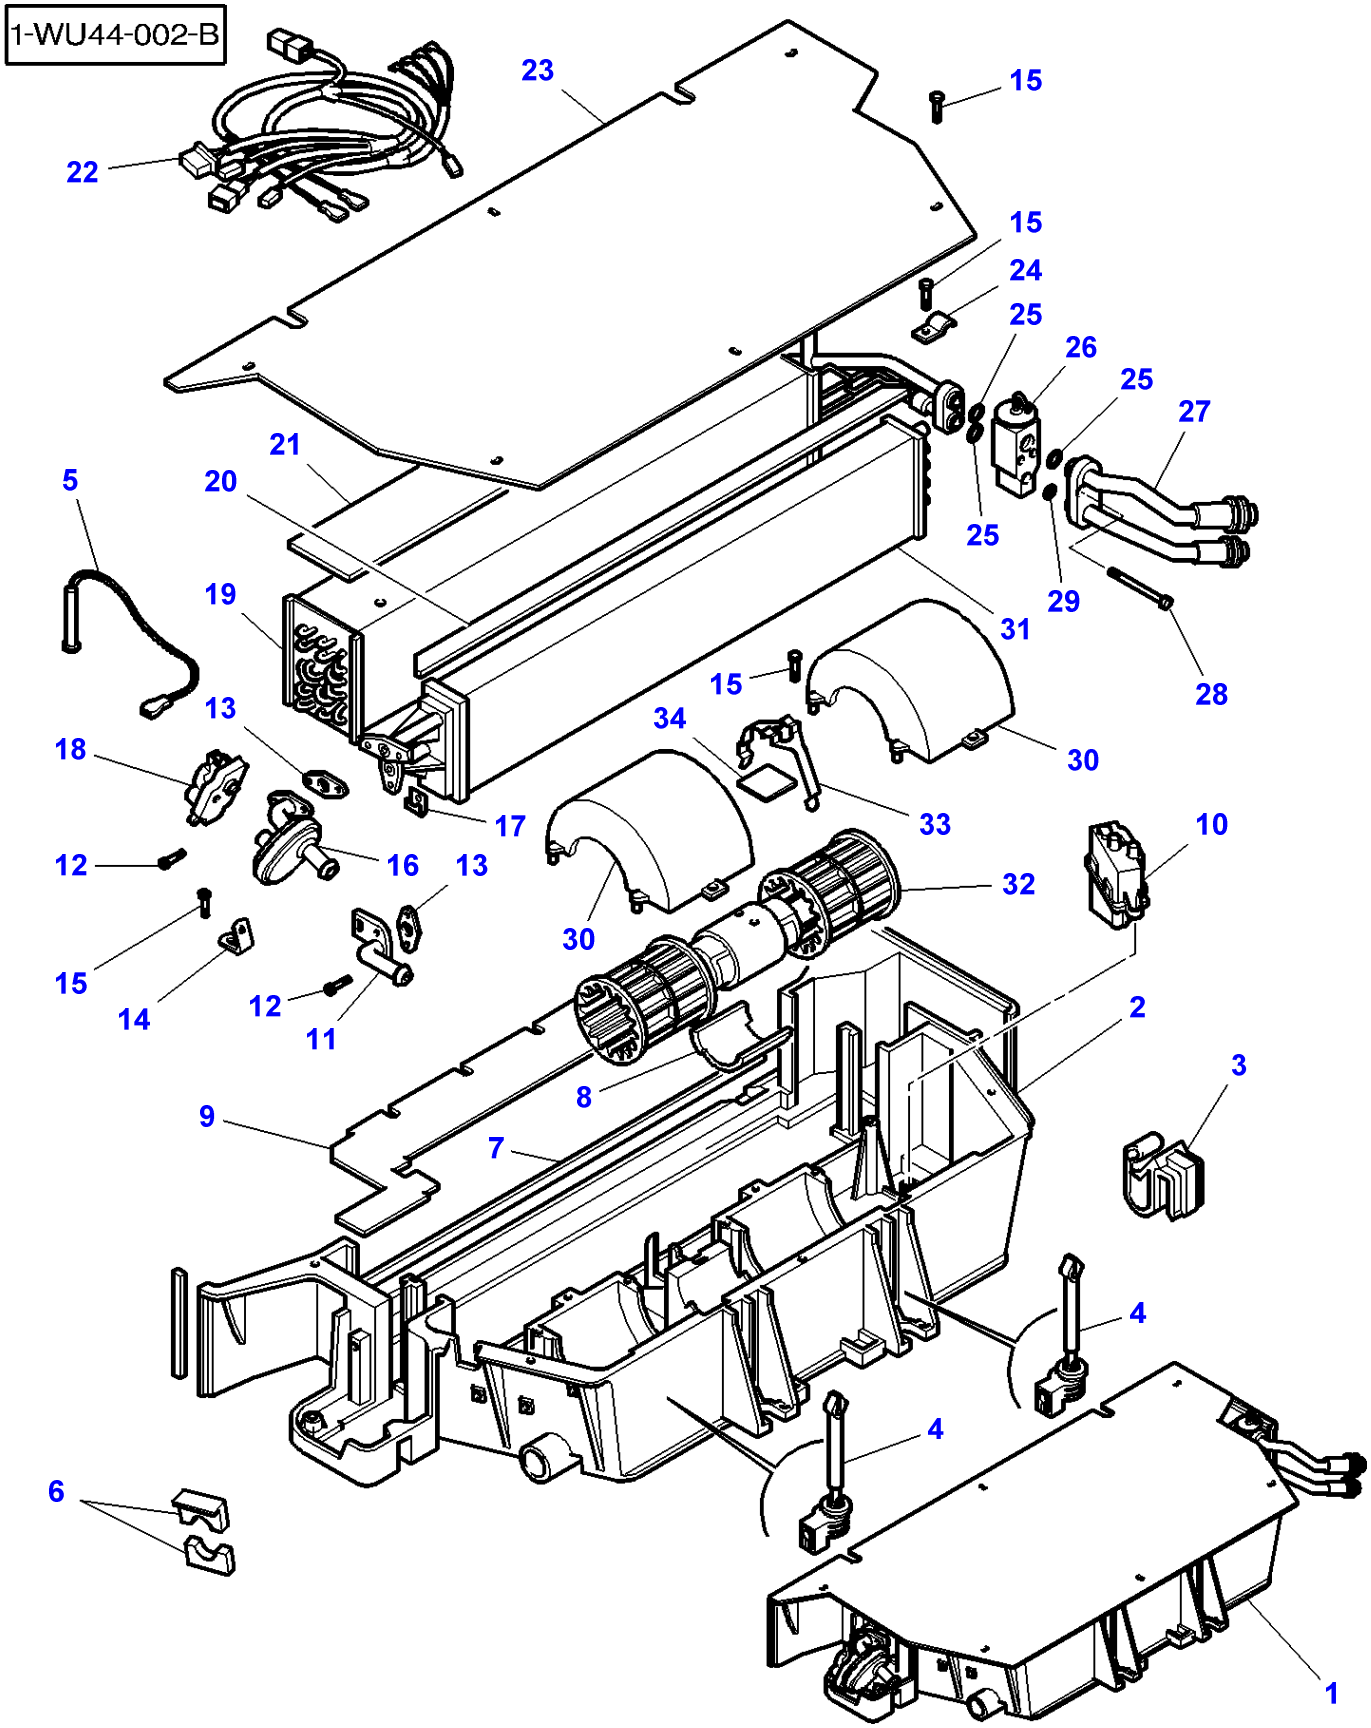
1-WU44-002-B
23
15
22
15
24
25
26
25
27
21
20
5
25
29
19
31
28
15
13
34
18
30
17
33
10
12
16
13
32
30
15
14
12
11
2
3
9
8
7
4
4
6
1


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272840M91 | 1 | Air Conditioner | [A] |
| 2 | 3907307M1 | 1 | Housing | (1) |
| 3 | 3907306M1 | 1 | Clip | (1) |
| 4 | 3907313M1 | 2 | Sensor | (1) |
| 5 | 3907316M1 | 1 | Sender | (1) |
| 6 | 3907303M1 | 2 | Foam | (1) |
| 7 | 3902322M1 | 1 | Foam | (1) |
| 8 | 3907302M1 | 1 | Protector | (1) |
| 9 | 3902329M2 | 1 | Plate | (1) |
| 10 | 3907310M1 | 1 | Regulator | (1) |
| 11 | 3907301M1 | 1 | Elbow | (1) |
| 12 | 3904319M1 | 4 | Screw | (1) |
| | | | | 4,8 X 19 |
| 13 | 3902327M1 | 2 | Gasket | (1) |
| 14 | 3907314M1 | 1 | Strap | (1) |
| 15 | 365916X1 | 15 | Self Tap Screws | (1) |
| | | | | 4 X 12 |
| 16 | 3907312M1 | 1 | Cock | (1) |
| 17 | 3902090M1 | 4 | Nut | (1) |
| 18 | | 1 | Engine | (1) |
| | | | | Not serviced,order REF. 16 |
| 19 | 3902331M92 | 1 | Evaporator | (1) |
| 20 | 3310849M1 | 1 | Foam | (1) |
| 21 | 3902332M1 | 1 | Foam | (1) |
| 22 | 3907315M1 | 1 | Harness | (1) |
| 23 | 3310839M1 | 1 | Plate | (1) |
| 24 | 3310836M1 | 1 | Strap | (1) |
| 25 | 3902500M1 | 3 | Gasket | (1) |
| 26 | 3902334M91 | 1 | Regulator | (1) |
| 27 | 3907298M91 | 1 | Tubing | (1) |
| 28 | 3904328M1 | 2 | Screw | (1) |
| 29 | 3902550M1 | 1 | O Ring | (1) |
| 30 | 3310833M1 | 1 | Cover | (1) |
| 31 | 3310827M92 | 1 | Radiator | (1) |
| 32 | 3907297M91 | 1 | Engine | (1) |
| 33 | 3902320M1 | 1 | Strap | (1) |
| 34 | | 1 | Plate | [B] |
| | | | | (1) |

**FOOTNOTE [A]** AUTOMATIC AIR CONDITIONER
**FOOTNOTE [B]** NOT DETAILLED

1-WU49-001-C

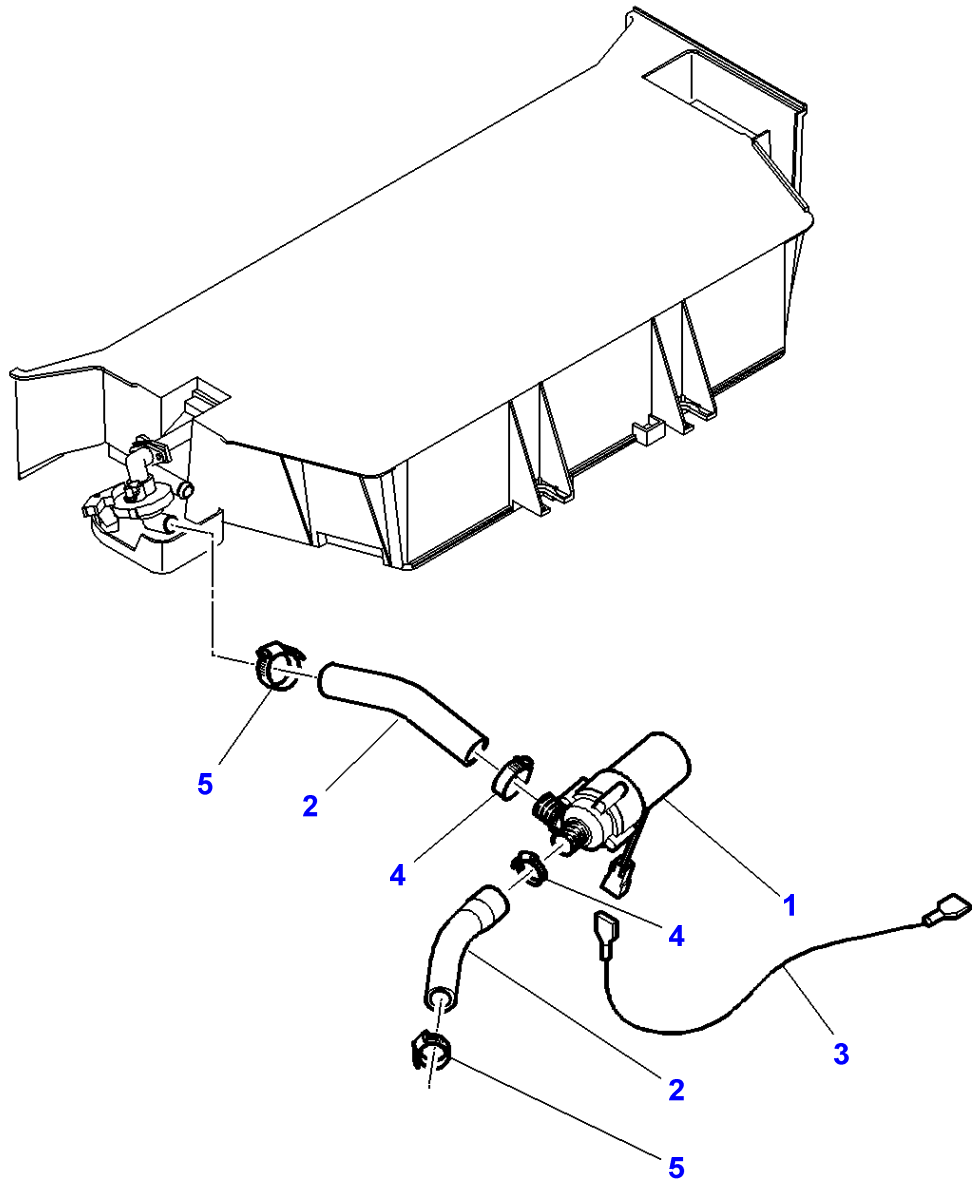


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3712744M1 | 1 | Water Pump | |
| 2 | 4272841M1 | 2 | Hose | Length 150 MM |
| 3 | 4270484M1 | 1 | Switch,Indirect | |
| 4 | 338614X1 | 2 | Hose Clip | Diameter 20-32 |
| 5 | 3019564X1 | 2 | Hose Clip | Diameter 16-25 |

1-WU48-001-A

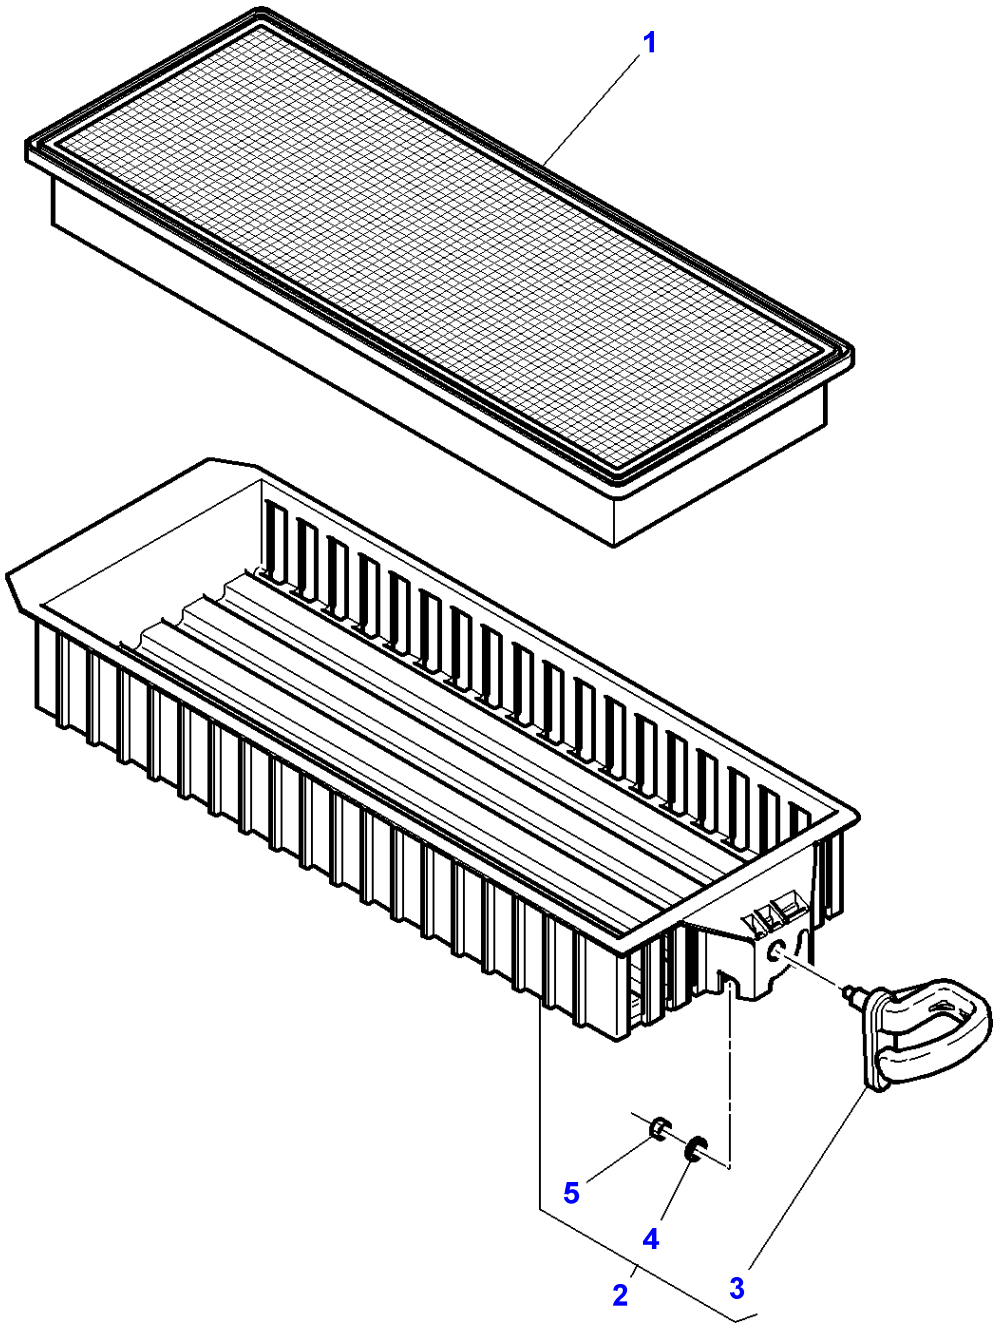


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | **3786649M1** | 1 | Cab Filter | 200 X 500 |
| | 4271140M1 | 1 | Cab Filter | [A] |
| 2 | 3786650M91 | 1 | Frame Assy | |
| 3 | 3788950M91 | 1 | Handle | (2) |
| 4 | 390971X1 | 1 | Washer | (2)<br>Diameter 6-12 X 1,5 |
| 5 | 1441462X1 | 1 | Locknut | (2)<br>M6 |

**FOOTNOTE [A]** CARBON FILTER

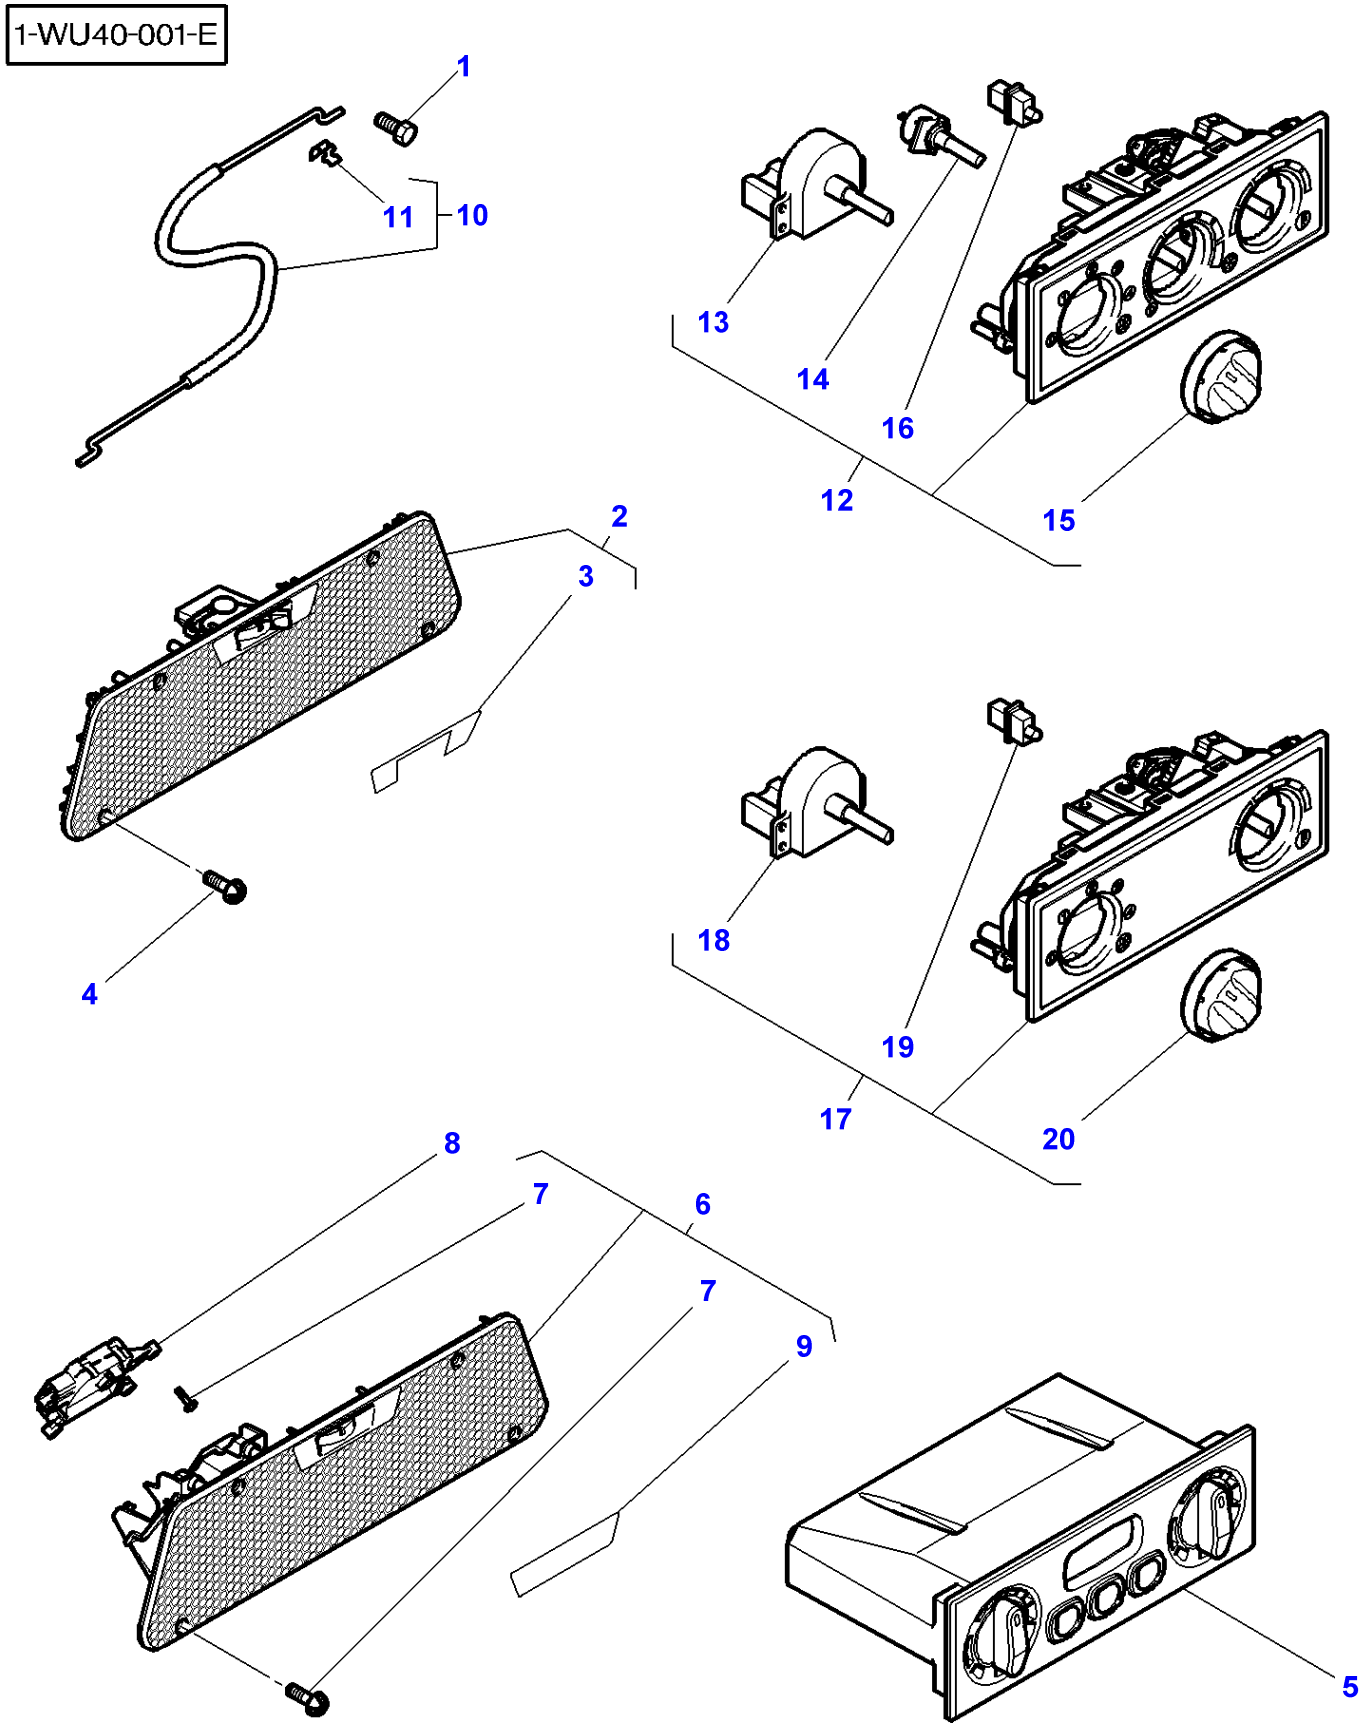

1-WU40-001-E
1
11
10
13
14
16
12
15
2
3
4
18
19
17
20
8
7
6
7
9
5

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 1442171X1 | 1 | Hex. Sock. Screw | [A,C]<br>M4 X 10 |
| 2 | 4273553M93 | 1 | Ventilator | [A,C] |
| 3 | 4273546M3 | 1 | Decal | (2) |
| 4 | 3010804X1 | 4 | Screw | M4 X 16 |
| 5 | 3786660M95 | 1 | Plate Control | [B,D] |
| 6 | 4273543M92 | 1 | Ventilator | [B] |
| 7 | 4271132M1 | 7 | Screw | [B]<br>(6)<br>M3,5 X 14 |
| 8 | 4271130M1 | 1 | Engine | |
| 9 | 4272833M2 | 1 | Decal | [B]<br>(6) |
| 10 | 4271161M1 | 1 | Cable | [A] |
| 11 | 1696477M1 | 1 | Clip | [A]<br>(10) |
| 12 | 3786659M2 | 1 | Plate Control | [A] |
| 13 | 3907283M1 | 1 | Connectors | (12) |
| 14 | 3907282M1 | 1 | Potentiometer | (12) |
| 15 | 3907285M1 | 3 | Knob | (12) |
| 16 | **3907284M1** | 1 | Diode | (12) |
| 17 | 3786700M2 | 1 | Plate Control | [C] |
| 18 | 3907283M1 | 1 | Connectors | (17) |
| 19 | **3907284M1** | 1 | Diode | (17) |
| 20 | 3907285M1 | 2 | Knob | (17) |

**FOOTNOTE [A]** MANUAL AIR CONDITIONER
**FOOTNOTE [B]** AUTOMATIC AIR CONDITIONER
**FOOTNOTE [C]** HEATER
**FOOTNOTE [D]** NOT DETAILLED

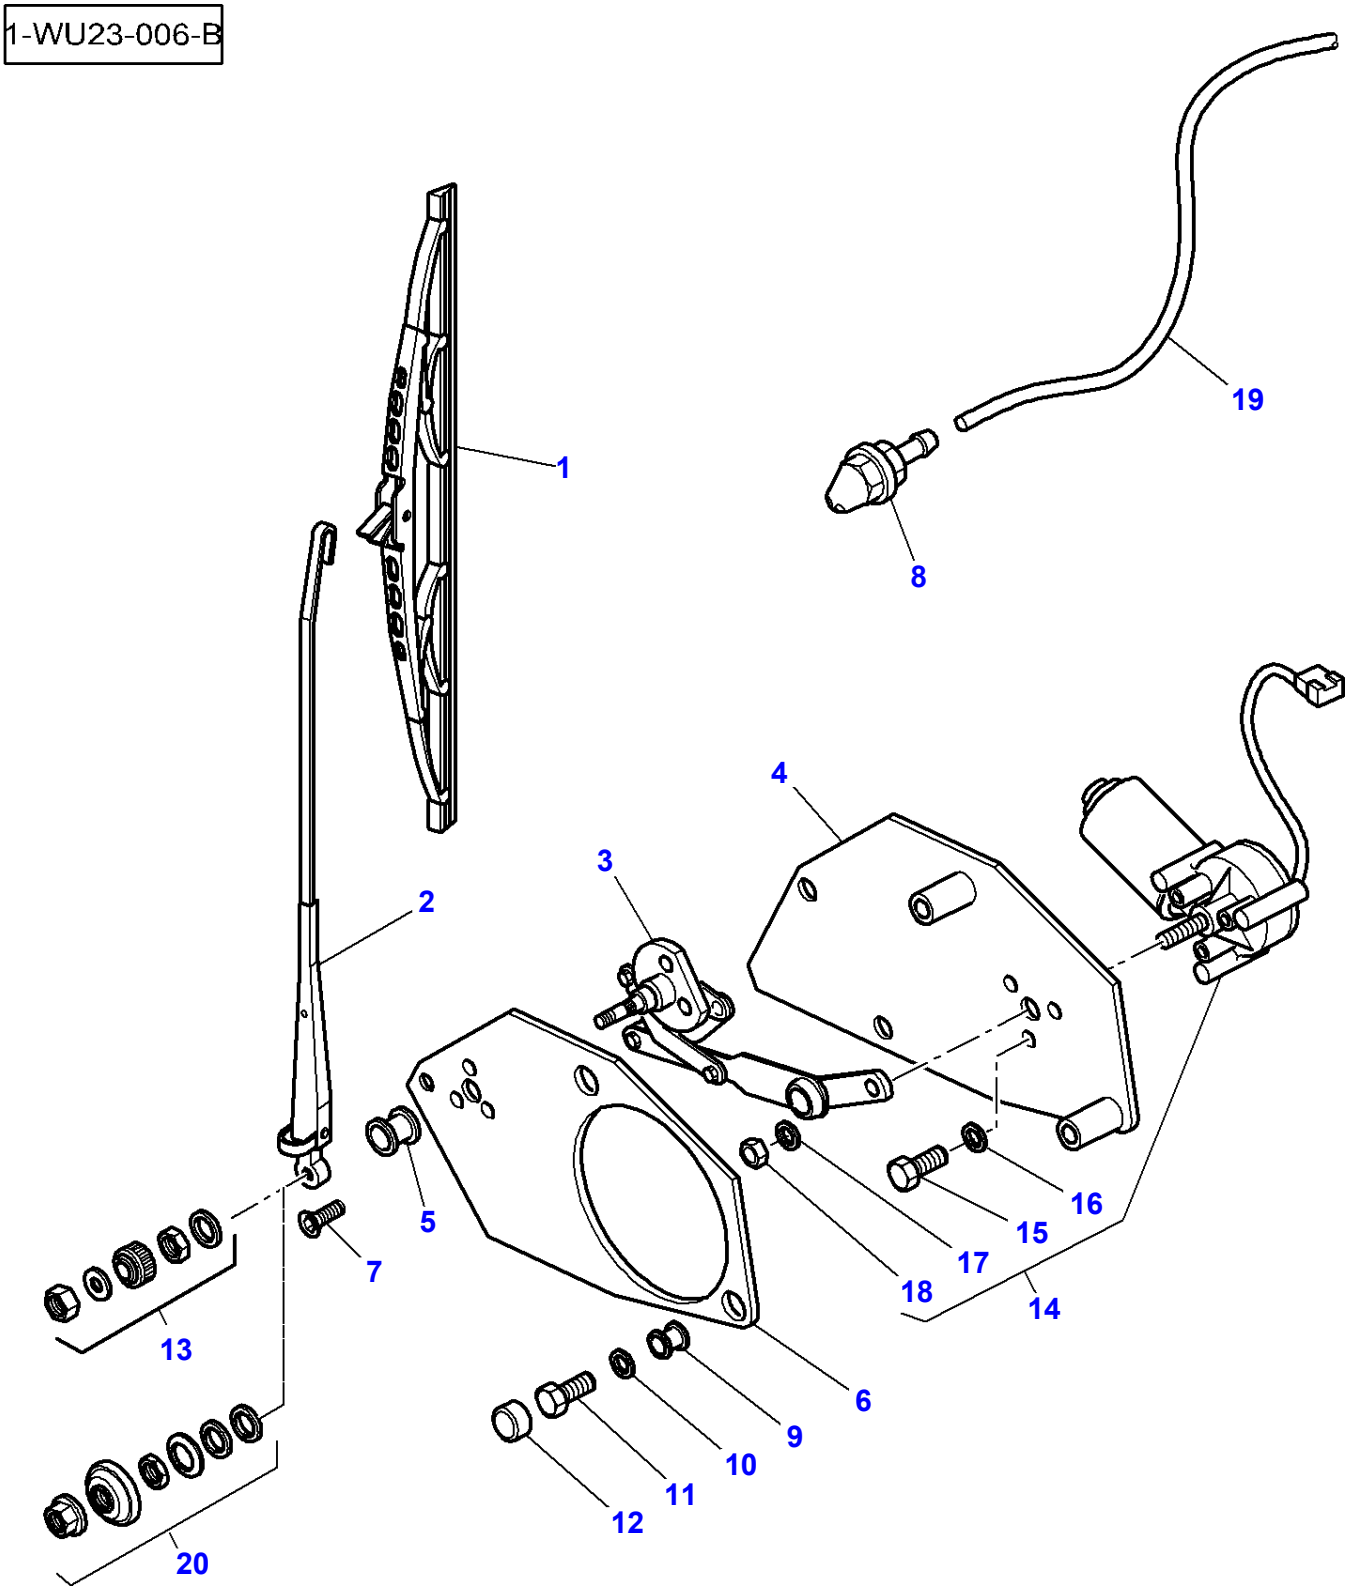
1-WU23-006-B
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | **3777648M1** | 1 | Wiper Blade | Up to Serial or Engine Number N268072<br>Length 500 MM |
| | **4275053M1** | 1 | Wiper Blade | From Serial or Engine Number N268073<br>Length 500 MM |
| 2 | 3777649M1 | 1 | Wiper Arm | Up to Serial or Engine Number N268072<br>Length 375 MM |
| | 4275054M1 | 1 | Wiper Arm | From Serial or Engine Number N268073<br>Length 375MM |
| 3 | 4275056M1 | 1 | Tie Rod | |
| 4 | 3777699M2 | 1 | Support | |
| 5 | 4277495M1 | 1 | Grommet | Diameter 28 MM |
| 6 | 3777700M2 | 1 | Support | |
| 7 | 3010762X1 | 3 | Screw | M5 X 10 |
| 8 | 3389664M1 | 2 | Jet | |
| 9 | 4277496M1 | 2 | Grommet | Diameter 16 MM |
| 10 | 391039X1 | 2 | Washer Metric | Diameter 8-24 X 2 MM |
| 11 | 339337X1 | 2 | Hex. Sock. Screw | M8 X 30 |
| 12 | 3616277M1 | 2 | Helmet | M8 |
| 13 | 3778258M1 | 1 | Parts Pack | Up to Serial or Engine Number N268072 |
| 14 | 3777698M92 | 1 | Wiper Motor | Up to Serial or Engine Number N268072 |
| | 4275055M1 | 1 | Wiper Motor | From Serial or Engine Number N268073 |
| 15 | 339560X1 | 3 | Hex. Sock. Screw | (14)<br>M6 X 16 |
| 16 | 391289X1 | 3 | Lock Washer | (14)<br>Up to Serial or Engine Number N268072 |
| 17 | 3008914X1 | 1 | Tab Washer | (14) |
| 18 | 339169X1 | 1 | Nut | (14)<br>M8 |
| 19 | 3786778M1 | 1 | Hose Flexible | [B]<br>Length 1840 MM |
| | 3786780M1 | 1 | Hose Flexible | Length 1550 MM |
| 20 | 3907533M91 | 1 | Kit, Hardware | From Serial or Engine Number N268073 |

**FOOTNOTE [B]** WITHOUT REAR WIPER AND WASHER WINDSCREEN

1-WU24-001-C

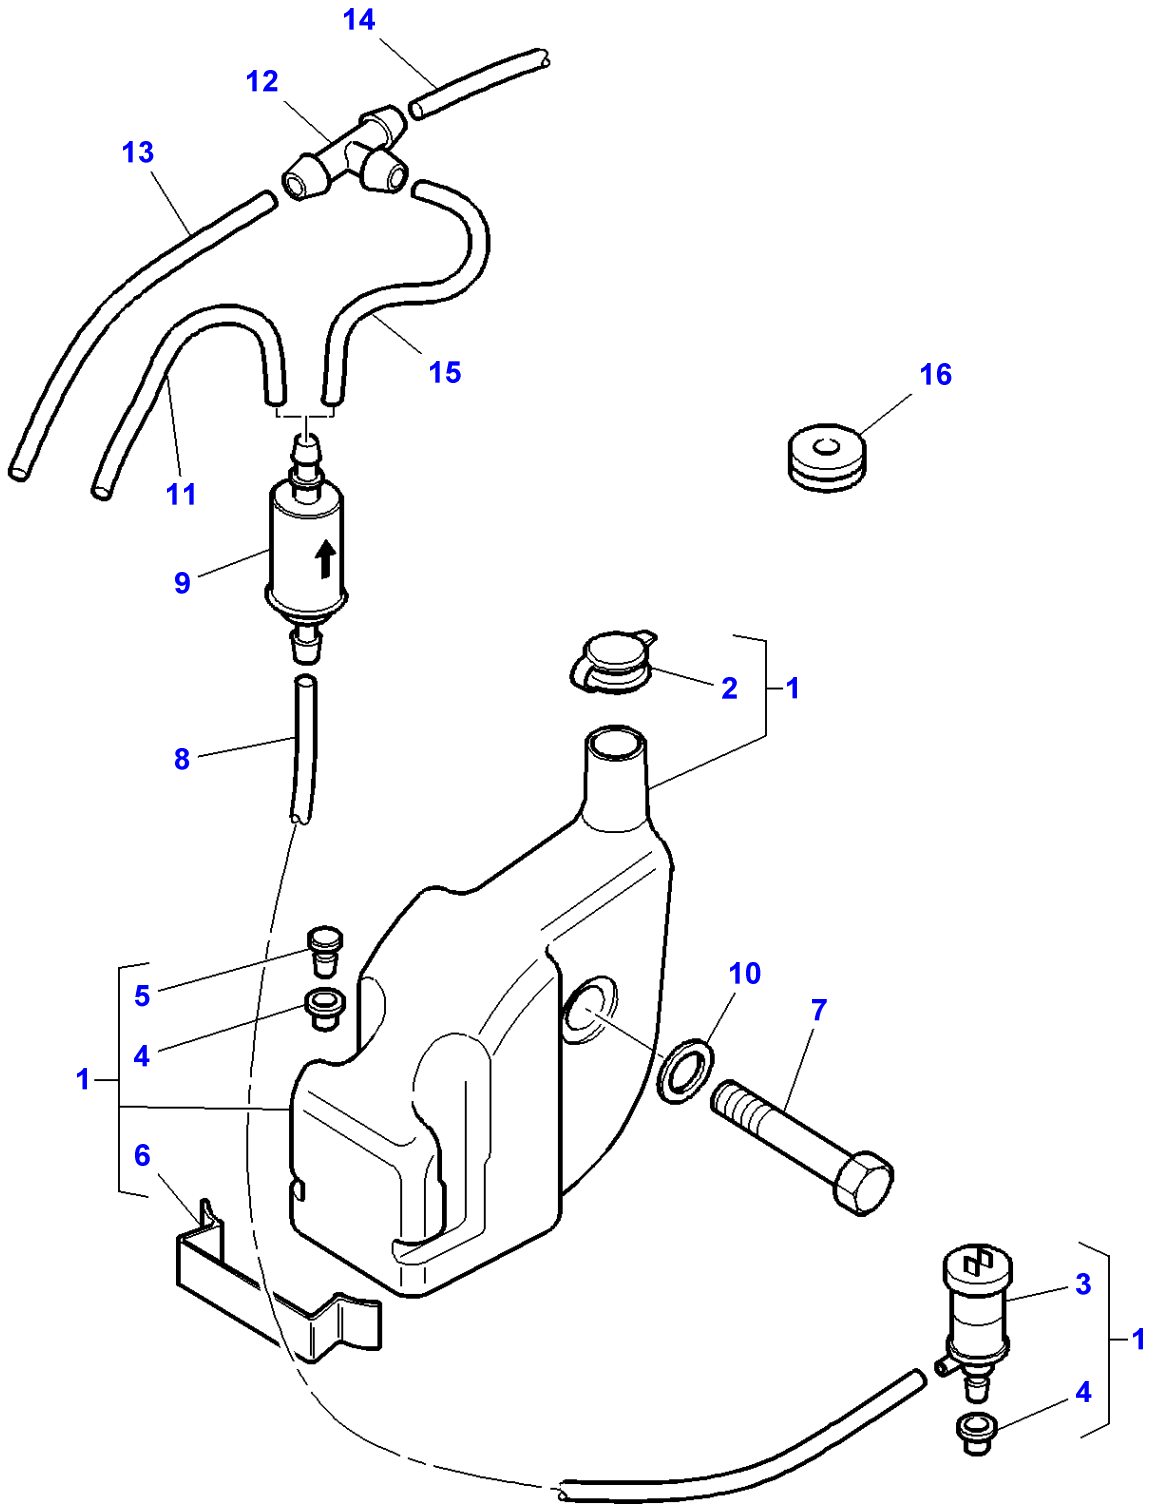


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786775M91 | 1 | Tank | |
| 2 | 3786800M1 | 1 | Tank Cap | (1) |
| 3 | 3582441M1 | 1 | Water Pump | (1) |
| 4 | 3582443M1 | 2 | Gasket | (1) |
| 5 | 3582442M1 | 1 | Plug | (1) |
| 6 | 4274610M1 | 1 | Clip | (1) |
| 7 | 339368X1 | 1 | Hex. Sock. Screw | M8 X 60 |
| 8 | 3786779M1 | 1 | Hose Flexible | Length 1330 MM |
| 9 | 3583086M1 | 1 | Pressure Valve | |
| 10 | 3010467X1 | 1 | Washer | Diameter 8-30 X 2 MM |
| 11 | 3786778M1 | 1 | Hose Flexible | [A]<br>Length 1840 MM |
| 12 | 3583069M1 | 1 | Teepiece | |
| 13 | 3786780M1 | 1 | Hose Flexible | Length 1550 MM |
| 14 | 3786782M1 | 1 | Hose Flexible | Length 1580 MM |
| 15 | 3786781M1 | 1 | Hose Flexible | Length 300 MM |
| 16 | 3714694M1 | 1 | Grommet | Diameter 7-21 |

**FOOTNOTE [A]** WITHOUT REAR WIPER AND WASHER WINDSCREEN
**FOOTNOTE [B]** WITH HIGH VISIBILITY ROOF

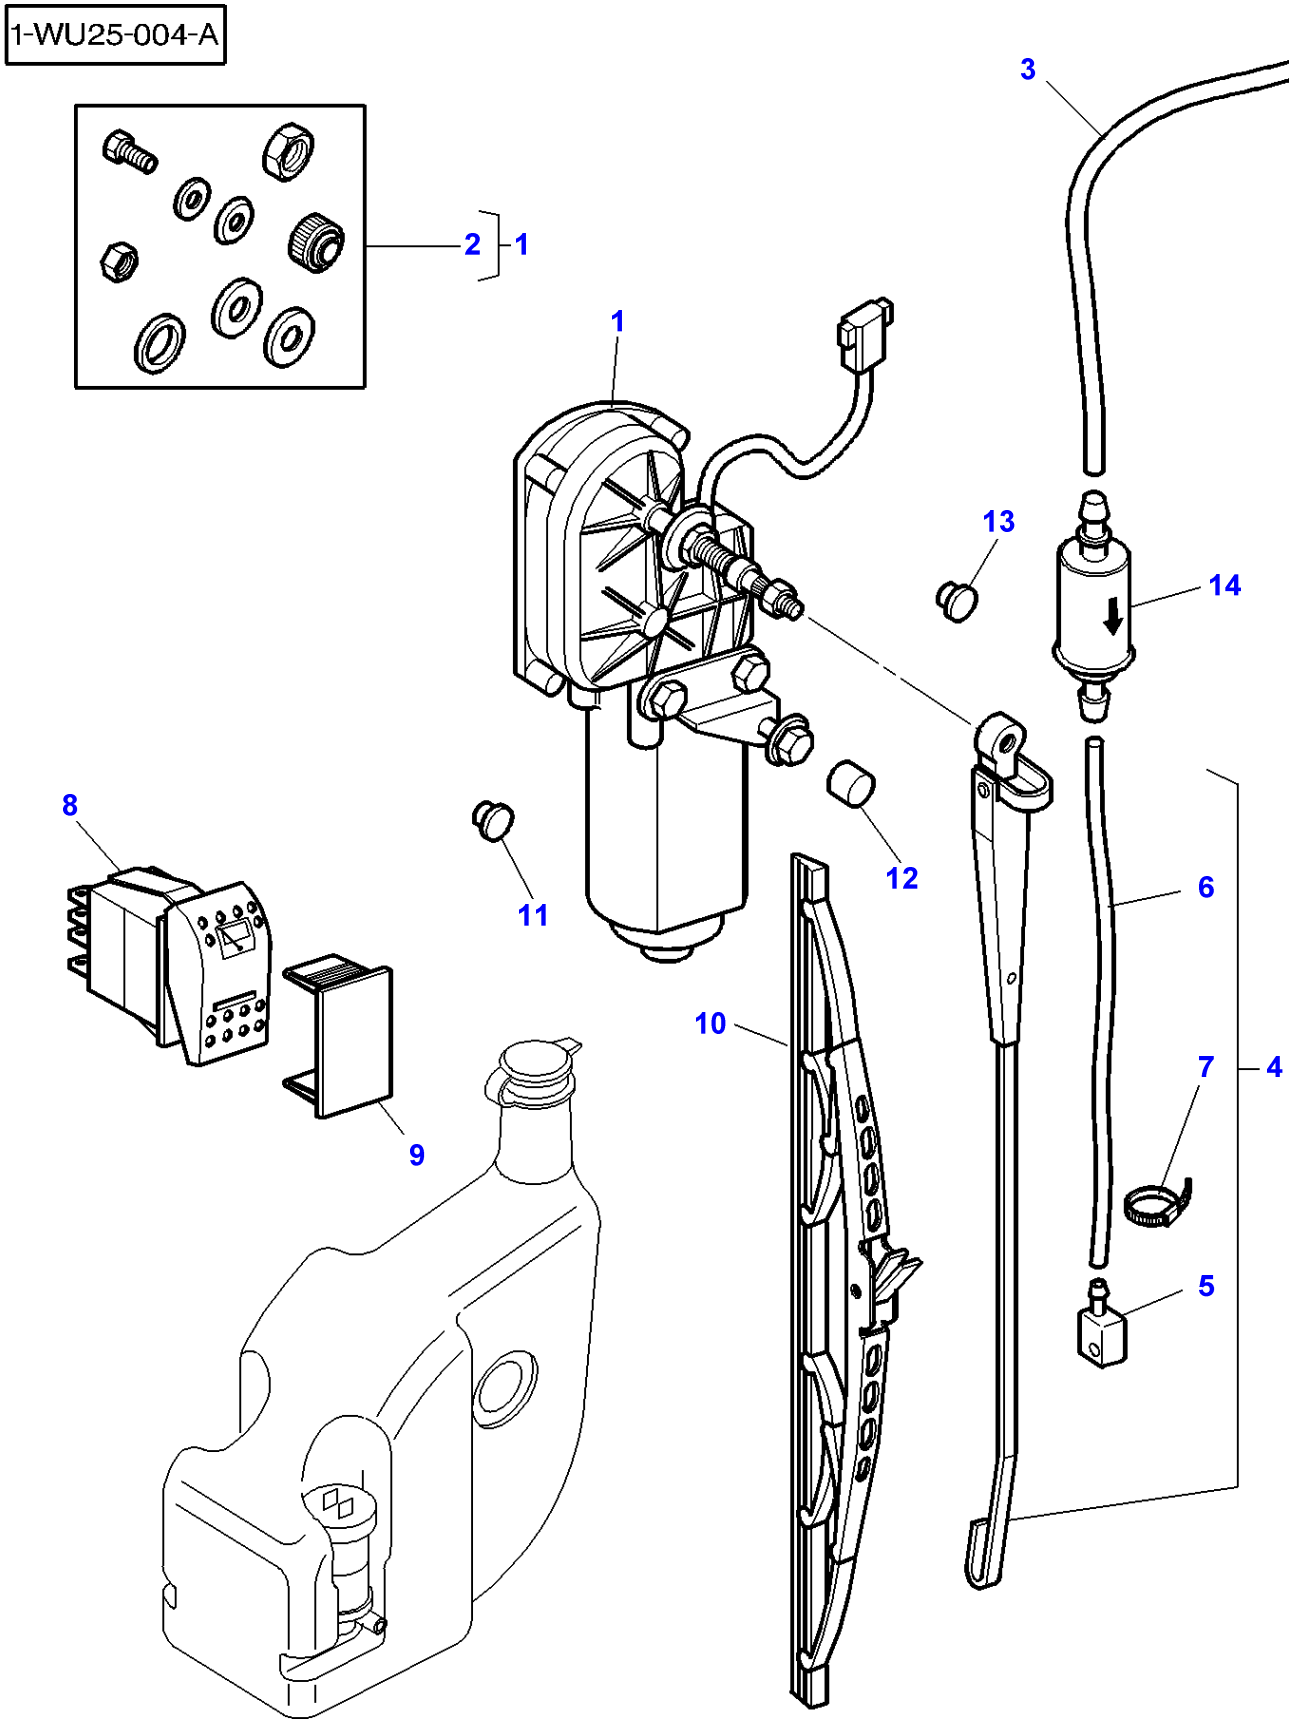
1-WU25-004-A
1
2
3
4
5
6
7
8
9
10
11
12
13
14


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3715610M2 | 1 | Wiper Motor | |
| 2 | 3902580M91 | 1 | Parts Pack | (1) |
| 3 | 3786782M1 | 1 | Hose Flexible | Length 1580 MM |
| 4 | 3713196M2 | 1 | Wiper Arm | Length 372 MM |
| 5 | 3902461M1 | 1 | Jet | (4) |
| 6 | 3902462M1 | 1 | Tube | (4) |
| 7 | 3902463M1 | 1 | Clamp | (4) |
| 8 | **4271344M1** | 1 | Switch,Indirect | |
| 9 | 3713151M1 | 1 | Tap | [A] |
| 10 | **3713195M1** | 1 | Wiper Blade | Length 450 MM |
| 11 | 3713742M1 | 1 | Plug | [A]<br>Diameter 9,5 MM |
| 12 | 3616277M1 | X | Helmet | |
| 13 | 3713741M1 | 1 | Plug | [A]<br>Diameter 17,5 MM |
| 14 | 3583086M1 | 1 | Pressure Valve | |

**FOOTNOTE [A]** WITHOUT REAR WIPER AND WASHER WINDSCREEN

1-WU25-008-A

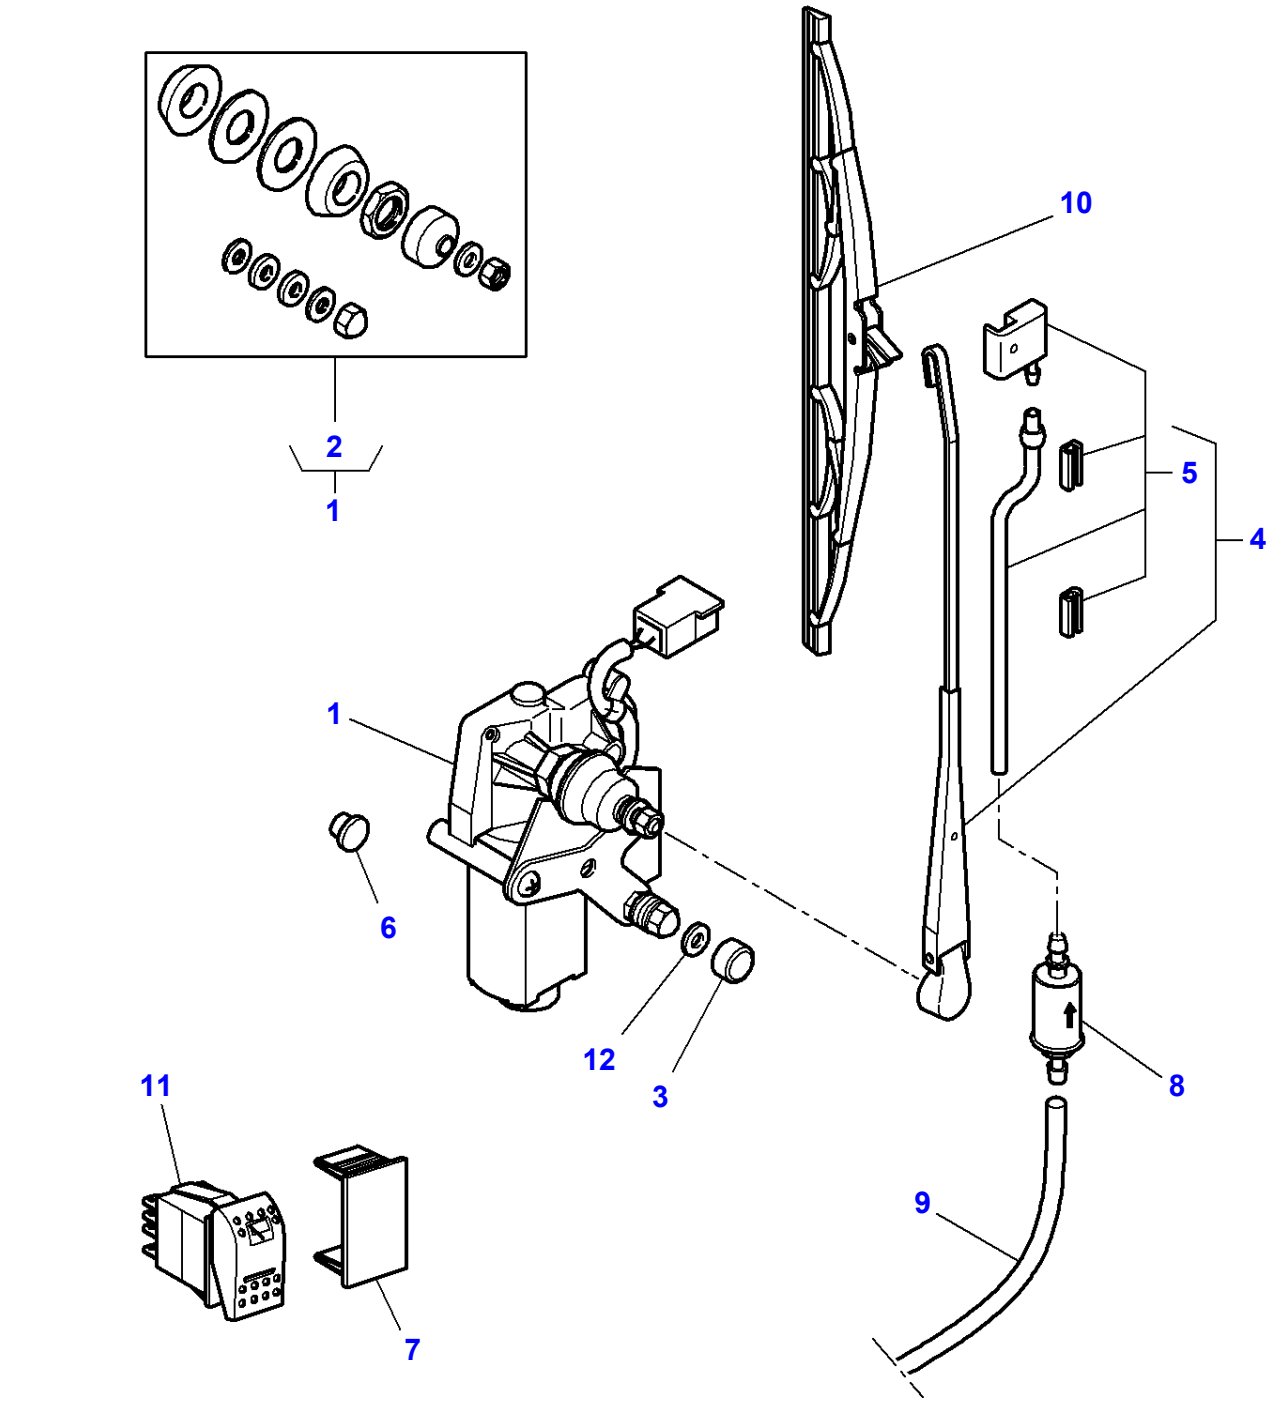


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4275051M1 | 1 | Wiper Motor | |
| 2 | 3907550M91 | 1 | Parts Pack | (1) |
| 3 | 3616277M1 | 1 | Helmet | |
| 4 | 4275050M1 | 1 | Wiper Arm | Length 372 MM |
| 5 | 3907575M91 | 1 | Parts Pack | (4) |
| 6 | 3713742M1 | 1 | Plug | [B]<br>Diameter 9,5 MM |
| | 3713741M1 | 1 | Plug | [B]<br>Diameter 17,5 MM |
| 7 | 3713151M1 | 1 | Tap | [B] |
| 8 | 3583086M1 | 1 | Pressure Valve | |
| 9 | 3786782M1 | 1 | Hose Flexible | Diameter 1580 MM |
| 10 | **4275049M1** | 1 | Wiper Blade | Length 450 MM |
| 11 | **4271344M1** | 1 | Switch,Indirect | |
| 12 | 4274622M1 | 1 | Washer | [C]<br>Diameter 8 - 20 X 3 MM |

**FOOTNOTE [B]** WITHOUT REAR WIPER AND WASHER WINDSCREEN
**FOOTNOTE [C]** RUBBER

1-WU28-001-B

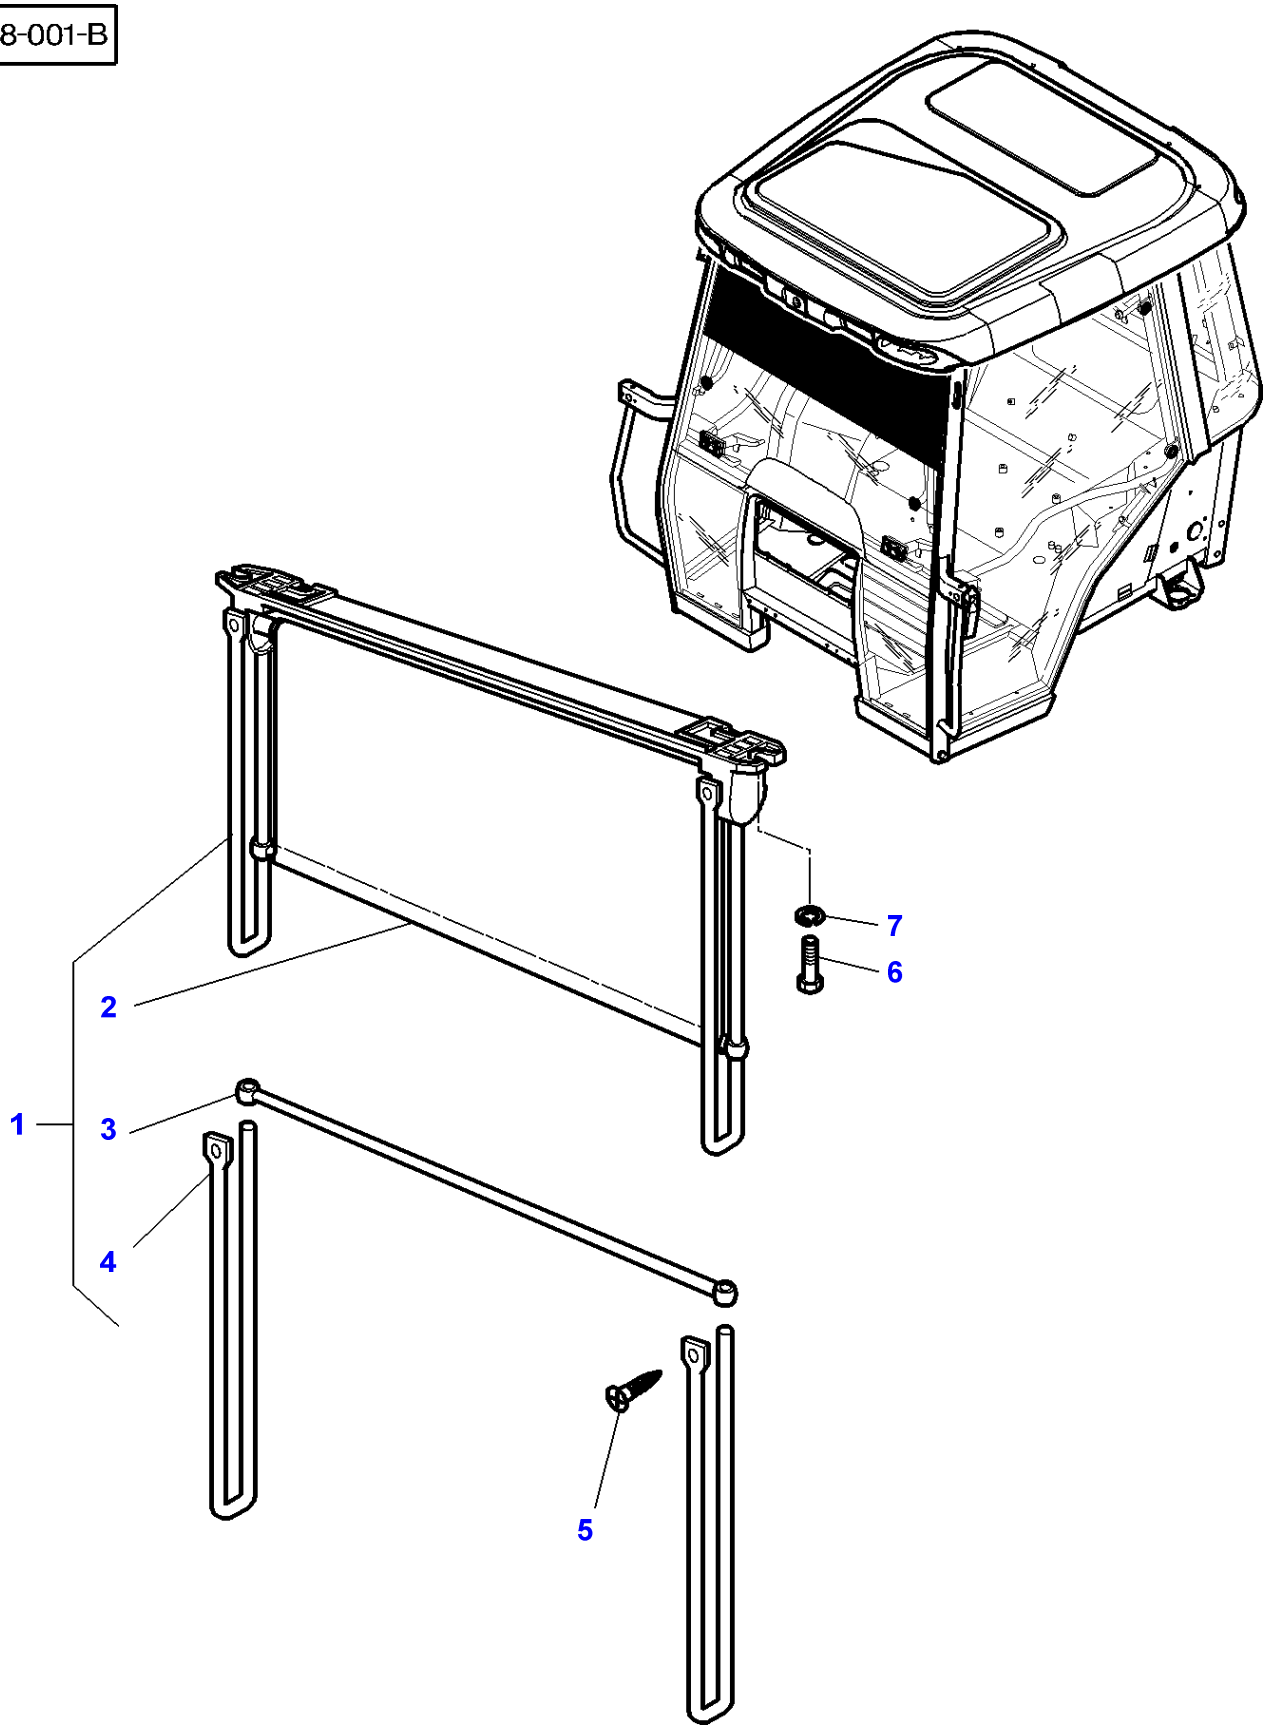


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3714072M91 | 1 | Canopy | |
| 2 | 3902176M91 | 1 | Panel | (1) |
| 3 | 3902175M91 | 1 | Bar | (1) |
| 4 | 3902174M91 | 2 | Rod | (1) |
| 5 | 365924X1 | 2 | Screw | (1) CBZ N10 X 16 |
| 6 | 1440350X1 | 2 | Screw Metric | M6 X 20 |
| 7 | 339375X1 | 2 | Lock Washer | |

1-WU26-001-D

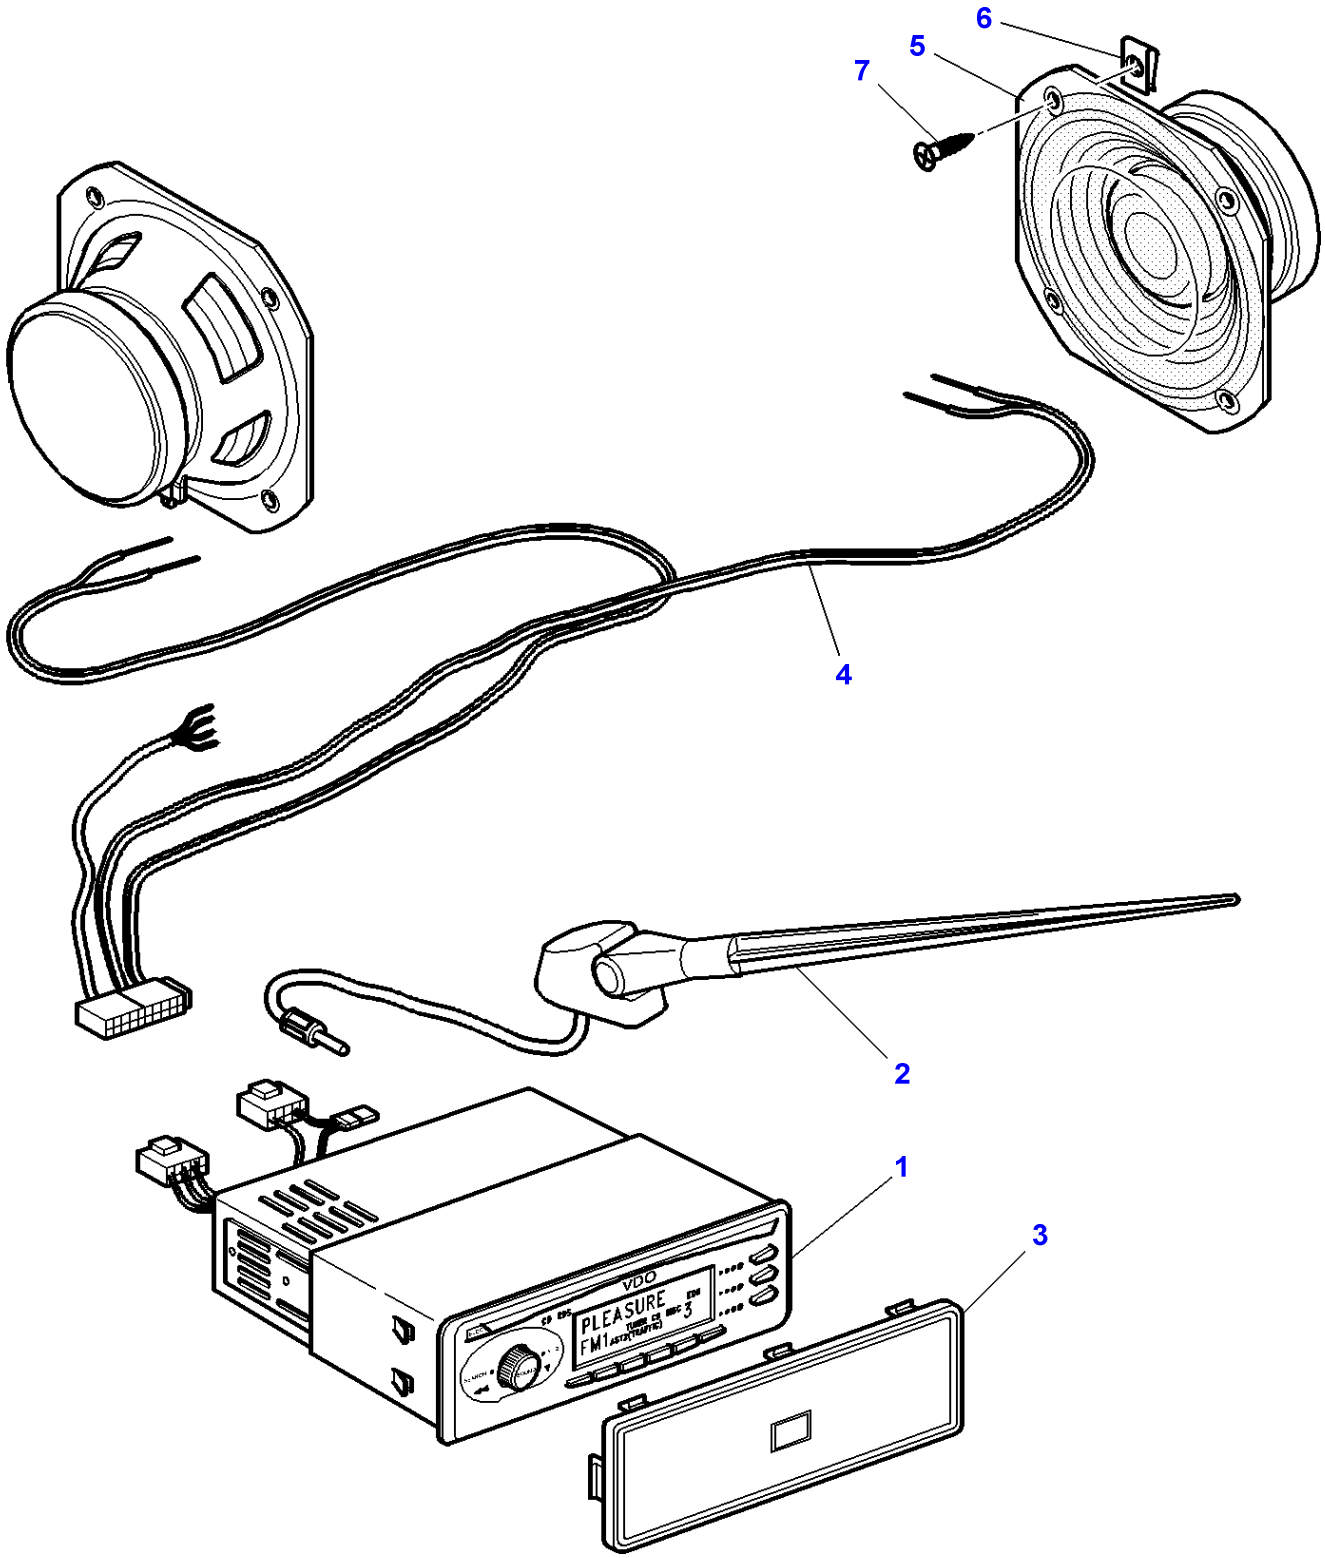


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271751M91 | 1 | Radio Cas Push B | [B] |
| | 3788235M91 | 1 | Radio Push Butt. | [D] |
| | 3788236M91 | 1 | Radio Push Butt. | [E] |
| 2 | 4277283M92 | 1 | Top Aerial | |
| 3 | 3580173M1 | 1 | Plate | [A] |
| 4 | 3786676M2 | 1 | Harness | |
| 5 | 4274735M1 | 2 | Speaker | |
| 6 | 3715142M1 | 8 | Nut | |
| 7 | 3010506X1 | 8 | Screw | M5 X 16 |

**FOOTNOTE [A]** WITHOUT RADIO
**FOOTNOTE [B]** WITH RADIO CASSETTE
**FOOTNOTE [C]** WITH RADIO CASSETTE + PHONE INTAKE
**FOOTNOTE [D]** WITH RADIO CD
**FOOTNOTE [E]** WITH RADIO CD + PHONE INTAKE

1-WU33-002-D

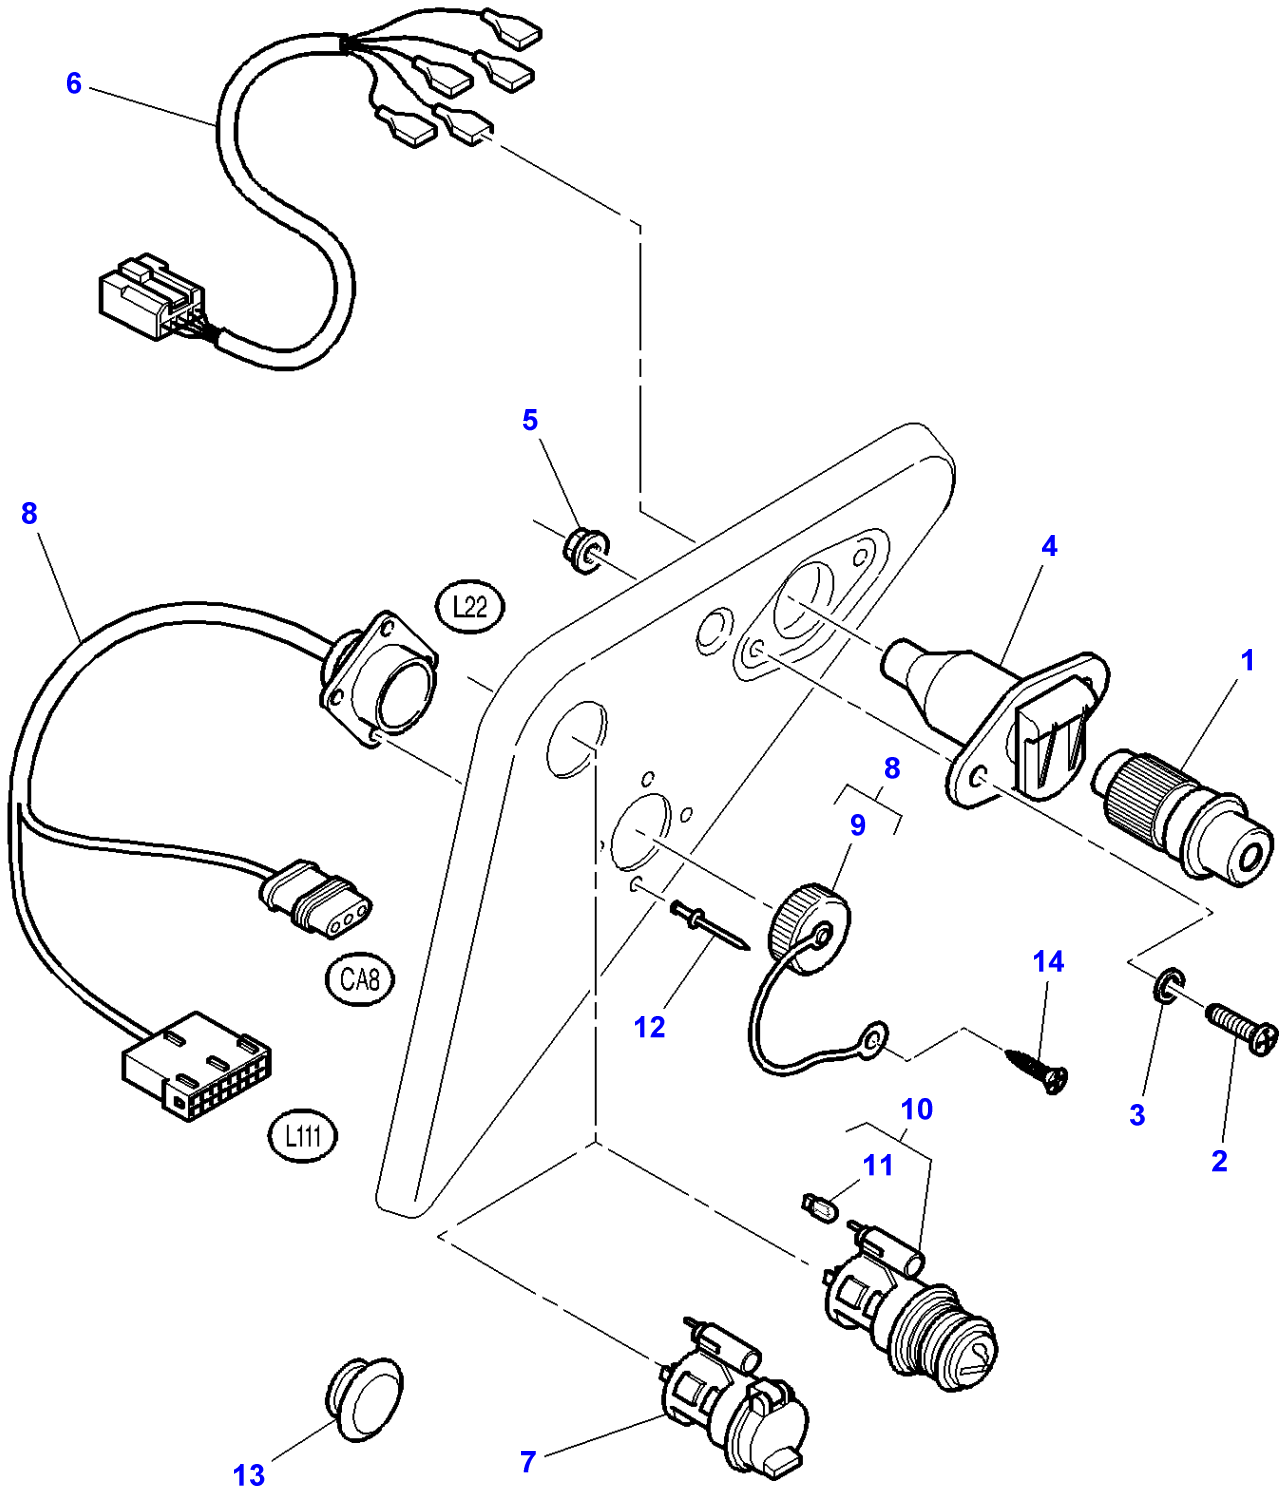

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Electrical Plug And Cigar Lighter - ISO STANDARD Page 110-0200

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | G205.900.900.020 | 1 | Electrical Plug | |
| 2 | 3010804X1 | 2 | Screw | M4 X 16 |
| 3 | 3001856X1 | 2 | Washer | Diameter 4-12 X 1,1 |
| 4 | 3713127M1 | 1 | Electric Socket | Replace and repair. Old not interchangeable with new 3760033M1 |
| 5 | 1443615X1 | 2 | Nut Metric | M4 |
| 6 | 3714516M2 | 1 | Harness | |
| 7 | 4272534M1 | 1 | Intake | [B] |
| 8 | 3778708M2 | 1 | Harness | [A] |
| 9 | 3900383M1 | 1 | Plug | (8) |
| 10 | 3617848M91 | 1 | Lighter | |
| 11 | 3302213M1 | 1 | Bulb 12v 1.2w | (10) |
| 12 | 3011214X1 | 4 | Rivet | Diameter 3,2 MM |
| 13 | 4275985M1 | 1 | Tap | Diameter 25,4 |
| 14 | 3580257M1 | 1 | Screw | M5X20 |

**FOOTNOTE [A]** WITHOUT DATATRONIC
**FOOTNOTE [B]** PHONE INTAKE

1-WU33-001-D

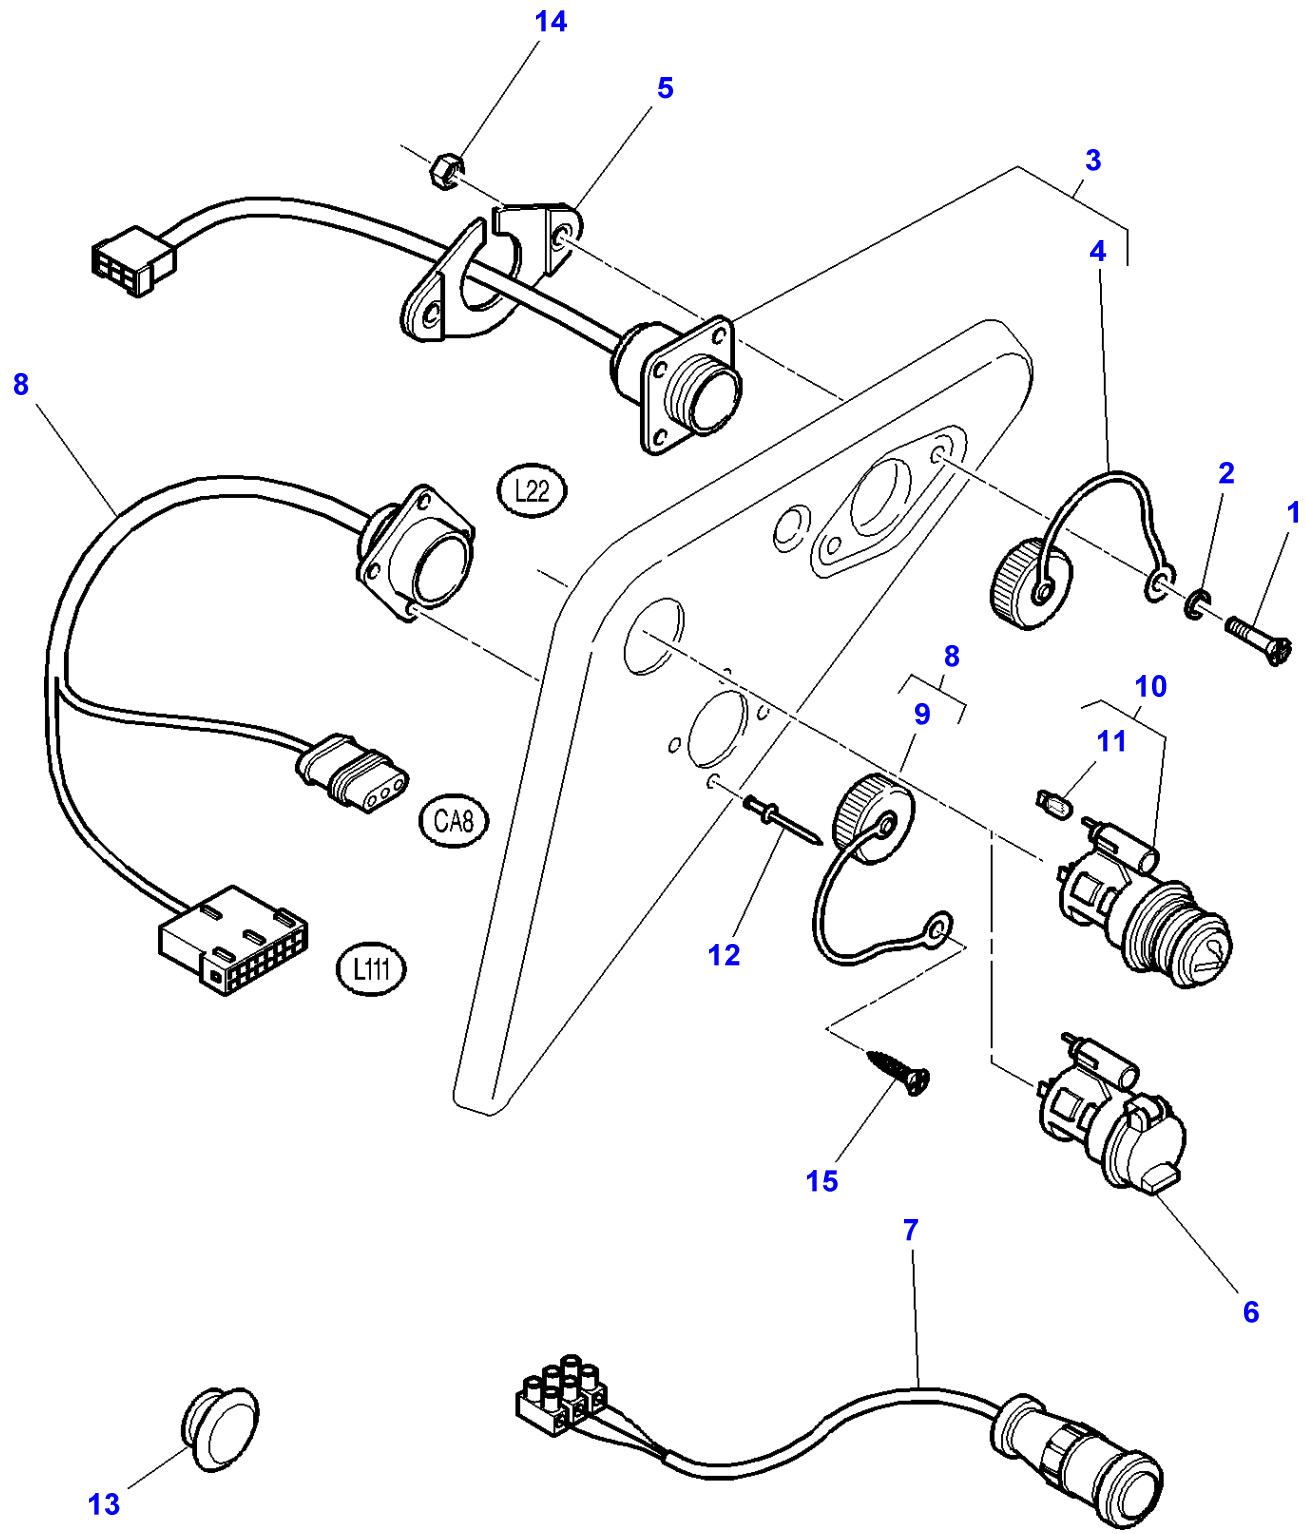


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3010804X1 | 2 | Screw | M4 X 16 |
| 2 | 3001856X1 | 2 | Washer | Diameter 4-12 X 1,1 |
| 3 | 3786495M2 | 1 | Intake | |
| 4 | 3900383M1 | 1 | Plug | (3) |
| 5 | 4273771M2 | 1 | Plate | |
| 6 | 4272534M1 | 1 | Intake | [B] |
| 7 | 3779786M2 | 1 | Plug 7 Pin Male | |
| 8 | 3778708M2 | 1 | Harness | [A] |
| 9 | 3900383M1 | 1 | Plug | (8) |
| 10 | 3617848M91 | 1 | Lighter | |
| 11 | **3302213M1** | 1 | Bulb 12v 1.2w | (10) |
| 12 | 3011214X1 | 4 | Rivet | Diameter 3,2 MM |
| 13 | 4275985M1 | 1 | Tap | Diameter 25,4-32MM |
| 14 | 1443615X1 | 2 | Nut Metric | M4 |
| 15 | 3580257M1 | 1 | Screw | M5X20 |


**FOOTNOTE [A]** WITHOUT DATATRONIC
**FOOTNOTE [B]** PHONE INTAKE

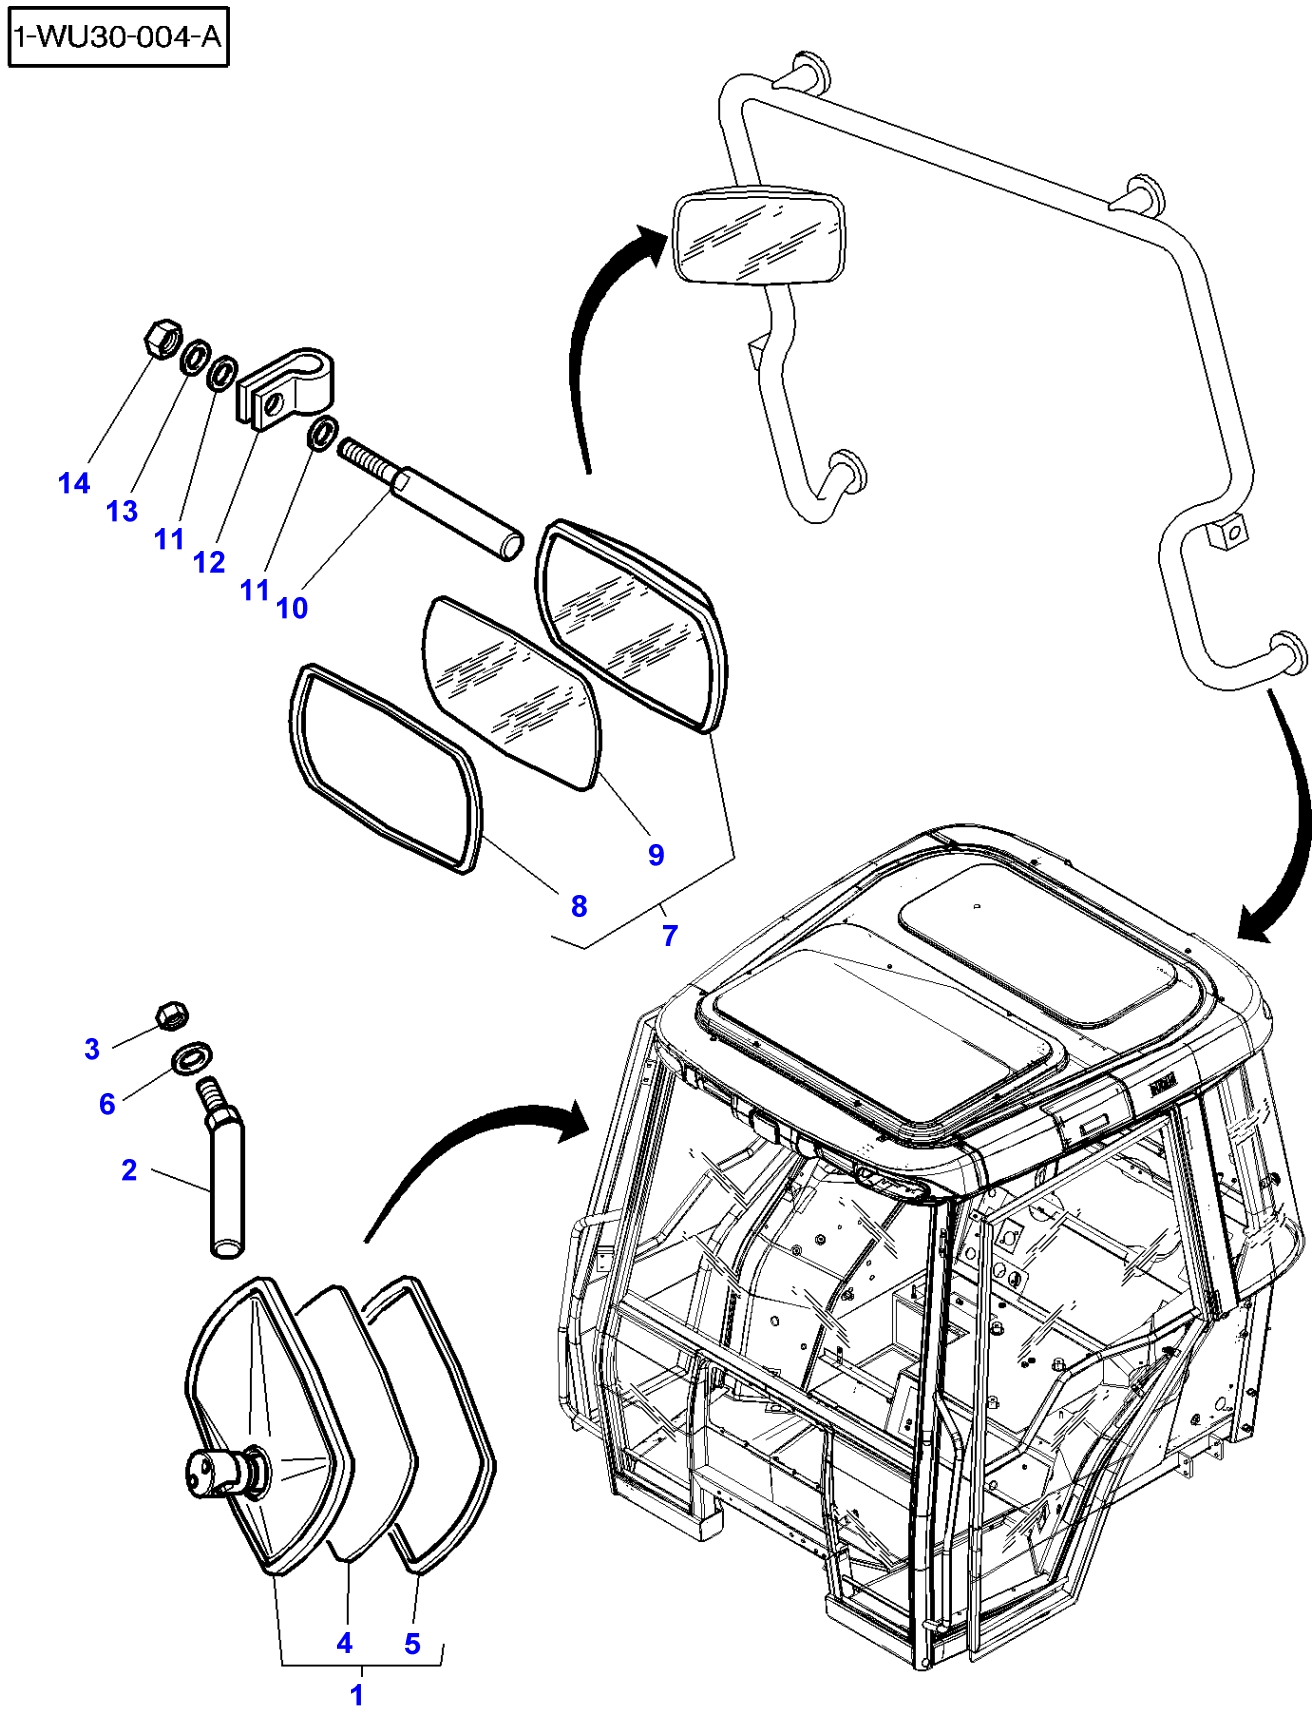
1-WU30-004-A
14
13
11
12
11
10
9
8
7
3
6
2
4
5
1

https://truckmanualshub.com/




| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3806618M91 | 1 | Mirror | |
| 2 | 3778091M1 | 1 | Clevis Pin | |
| 3 | 339402X1 | 1 | Nut | M10 |
| 4 | 3904487M1 | 1 | Mirror Glass | (1) |
| 5 | 3904491M1 | 1 | Gasket | (1) |
| 6 | 390734X1 | 1 | Washer | |
| 7 | 3806618M91 | 1 | Mirror | |
| 8 | 3904491M1 | 1 | Gasket | (7) |
| 9 | 3904487M1 | 1 | Mirror Glass | (7) |
| 10 | 3581239M1 | 1 | Clevis Pin | |
| 11 | 385362X1 | 2 | Washer | Diameter 10-20 X 3 |
| 12 | 3581507M1 | 1 | Clip | Diameter 18 - M10 |
| 13 | 391026X1 | 1 | Lock Washer | Diameter 10-18 |
| 14 | 339402X1 | 1 | Nut | M10 |

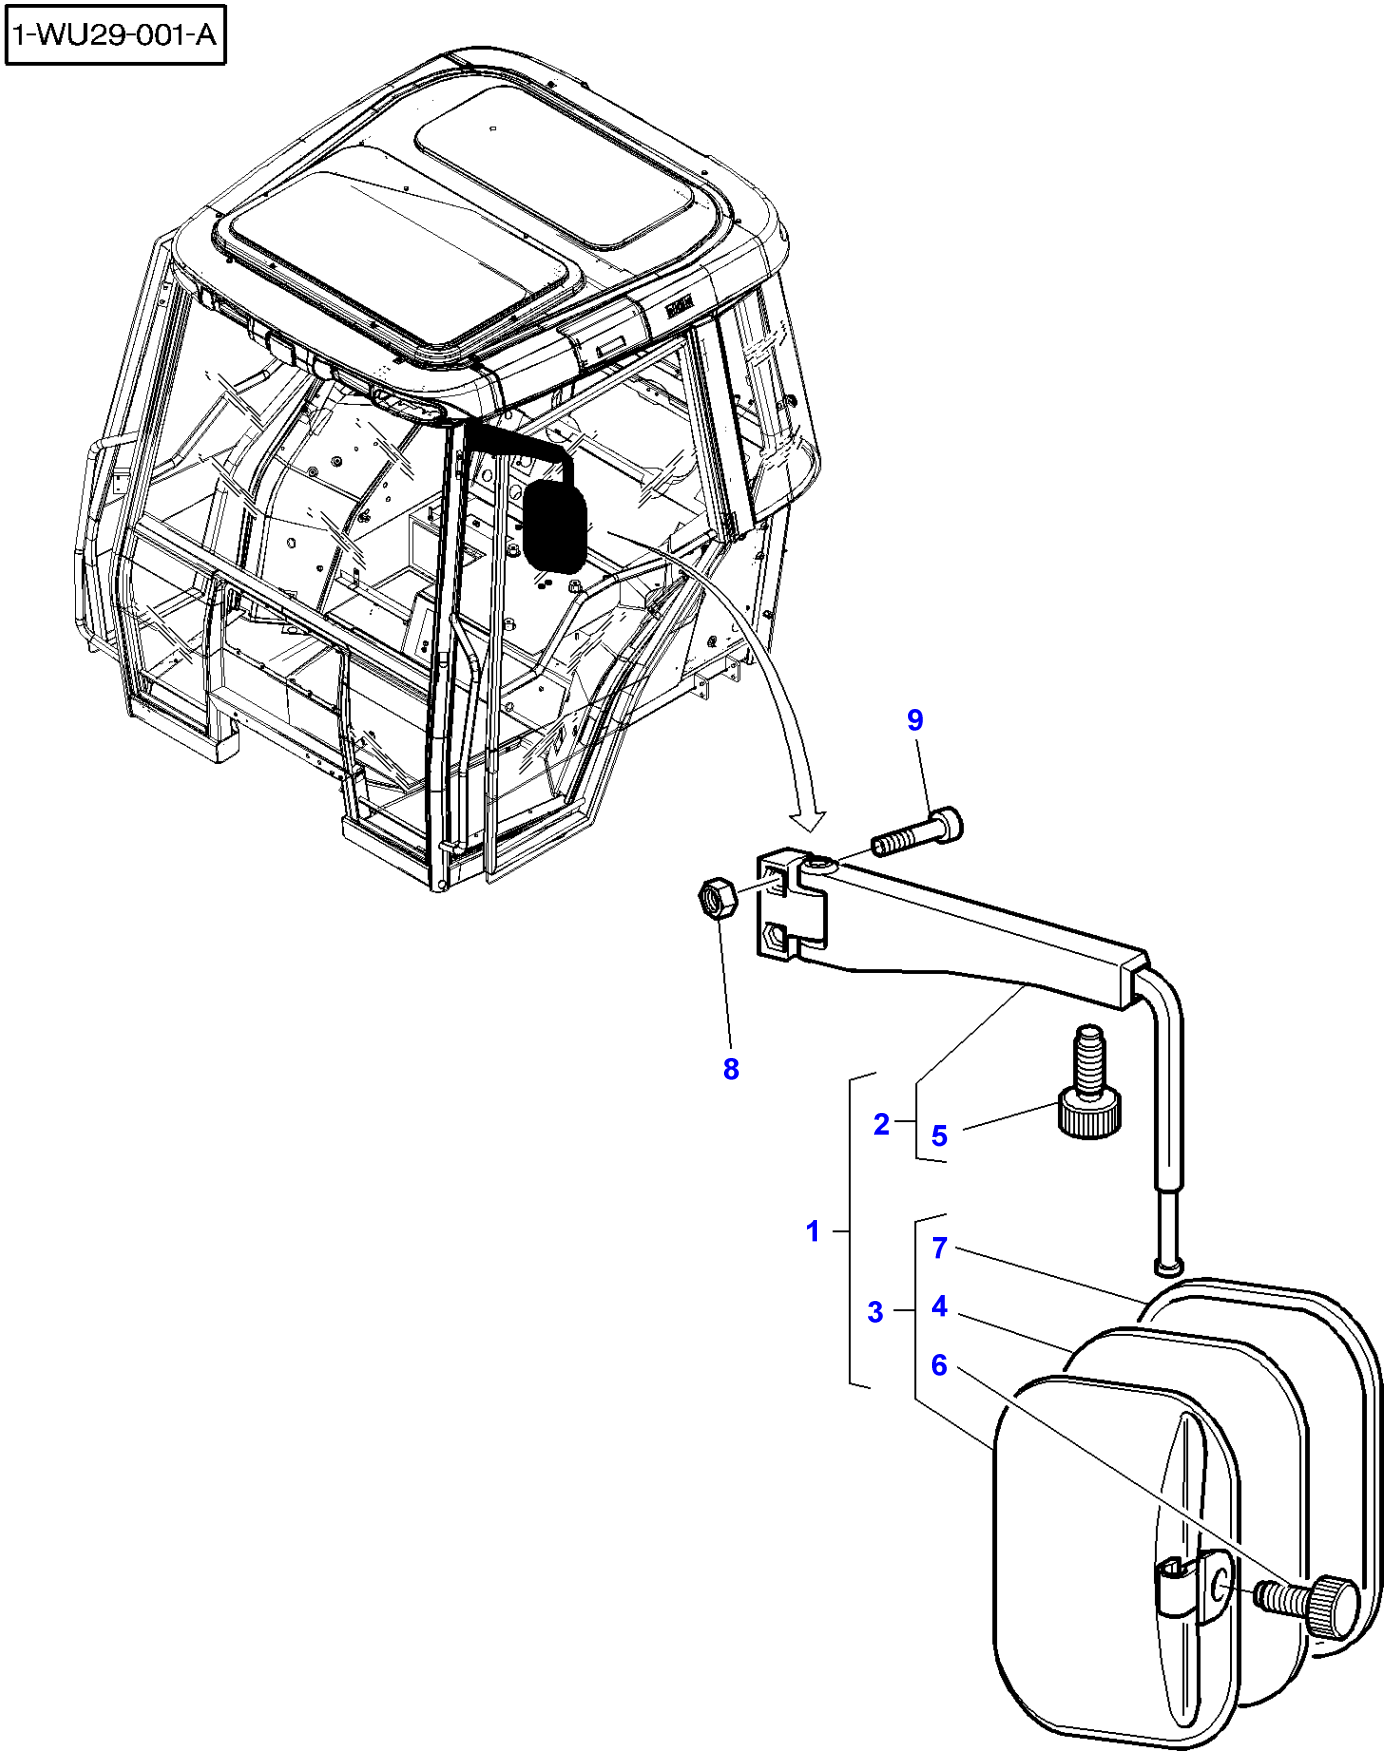
1-WU29-001-A
9
8
2
5
1
7
3
4
6

https://truckmanualshub.com/




| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787146M91 | 1 | Mirror | Left Hand |
| | 3787147M91 | 1 | Mirror | Right Hand |
| 2 | 3787145M91 | 1 | Arm | (1) |
| 3 | 3787152M1 | 1 | Mirror | (1) |
| 4 | 3904488M1 | 1 | Mirror Glass | (3) |
| 5 | 3907103M1 | 1 | Setscrew | (2) |
| 6 | 3907108M1 | 1 | Setscrew | (3) |
| 7 | 3907109M1 | 1 | Gasket | (3) |
| 8 | 1440329X1 | 4 | Locknut | M10 |
| 9 | 3011368X1 | 4 | Screw | M10 X 30 |

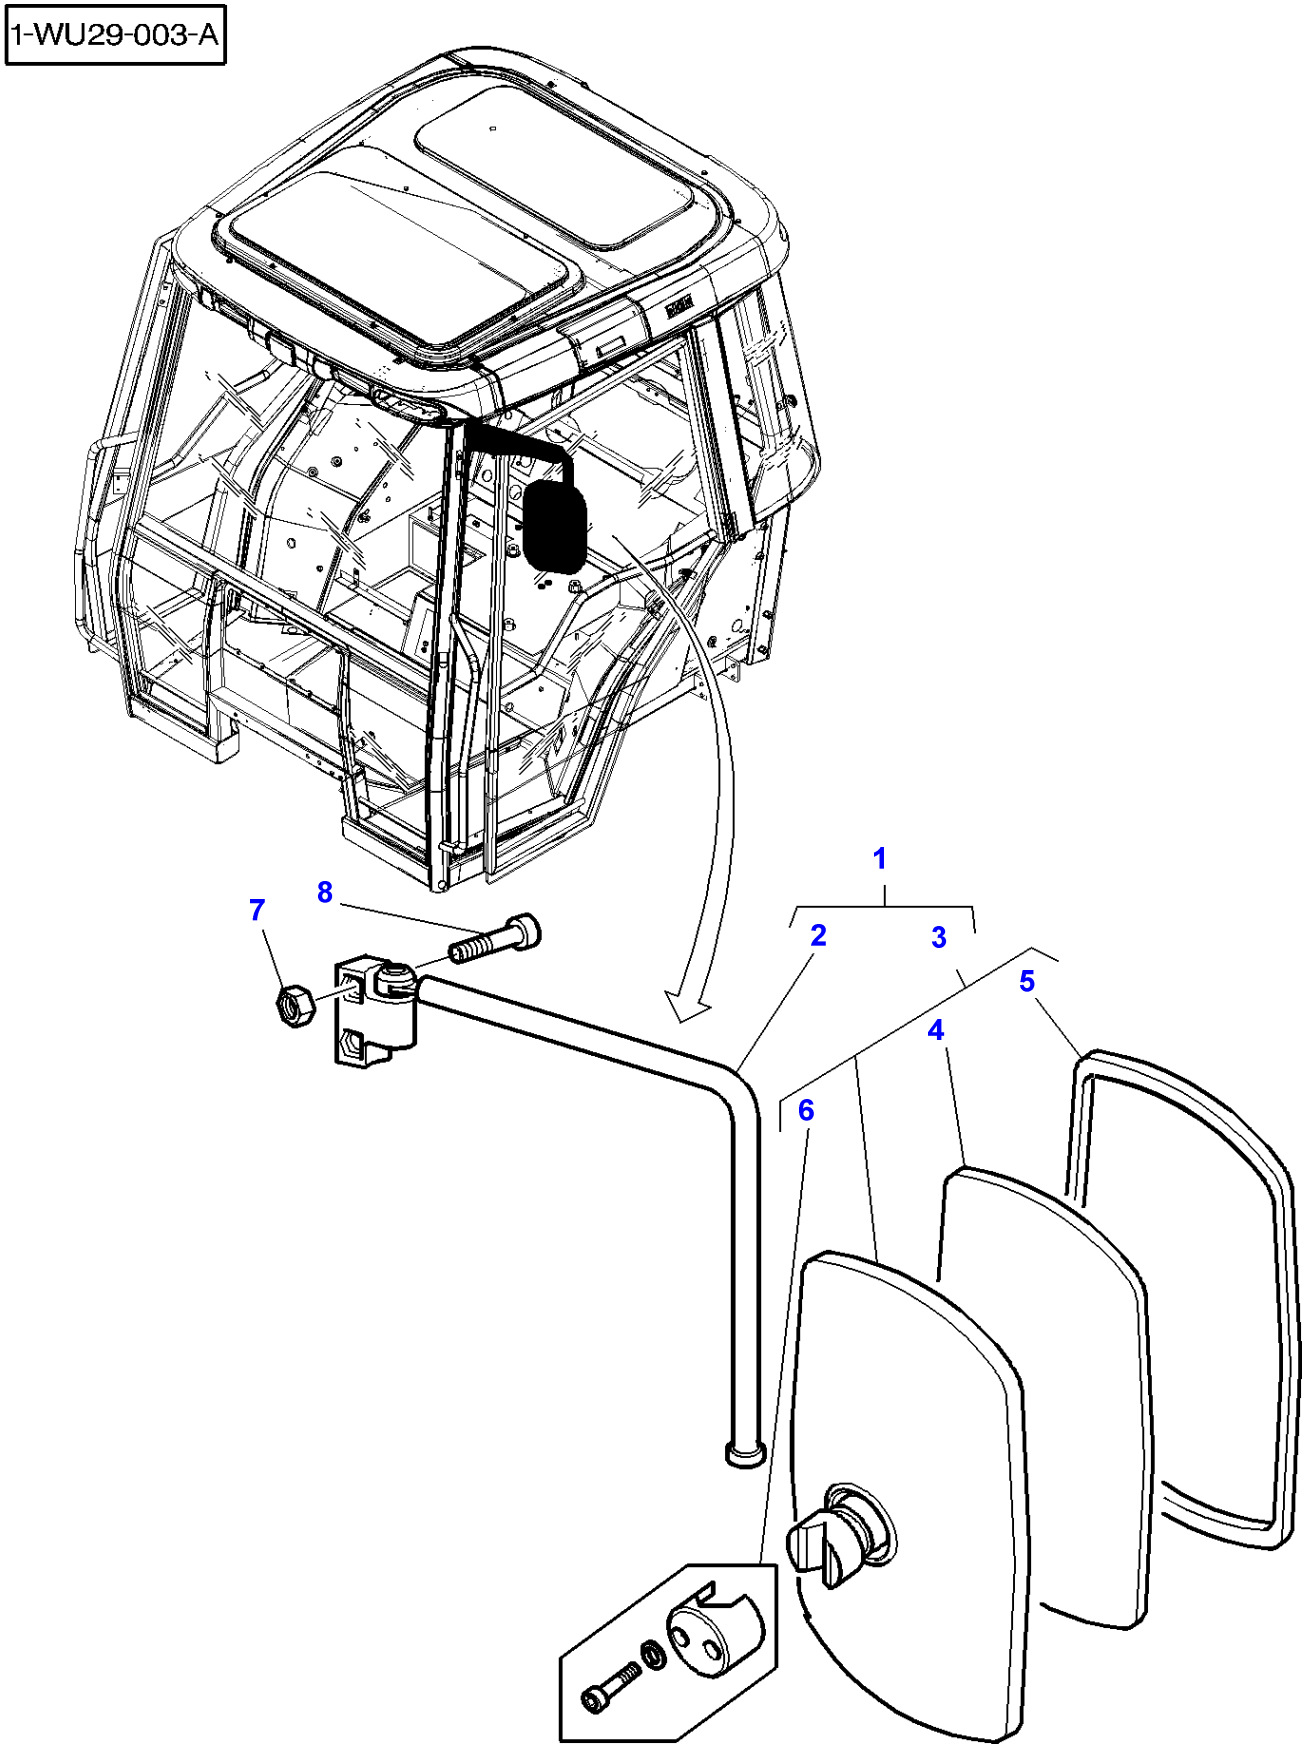
1-WU29-003-A
1
2
3
4
5
6
7
8

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787148M91 | 1 | Mirror | Left Hand |
| | 3787149M91 | 1 | Mirror | Right Hand |
| 2 | 3787144M91 | 1 | Arm | (1) |
| 3 | 3806614M91 | 1 | Mirror | (1) |
| 4 | 1894397M1 | 1 | Mirror Glass | (3) 172 X 280 MM |
| 5 | 3904489M1 | 1 | Gasket | (3) |
| 6 | 3907105M91 | 1 | Parts Pack | (3) |
| 7 | 1440329X1 | 4 | Locknut | M10 |
| 8 | 3011368X1 | 4 | Screw | M10 X 30 |

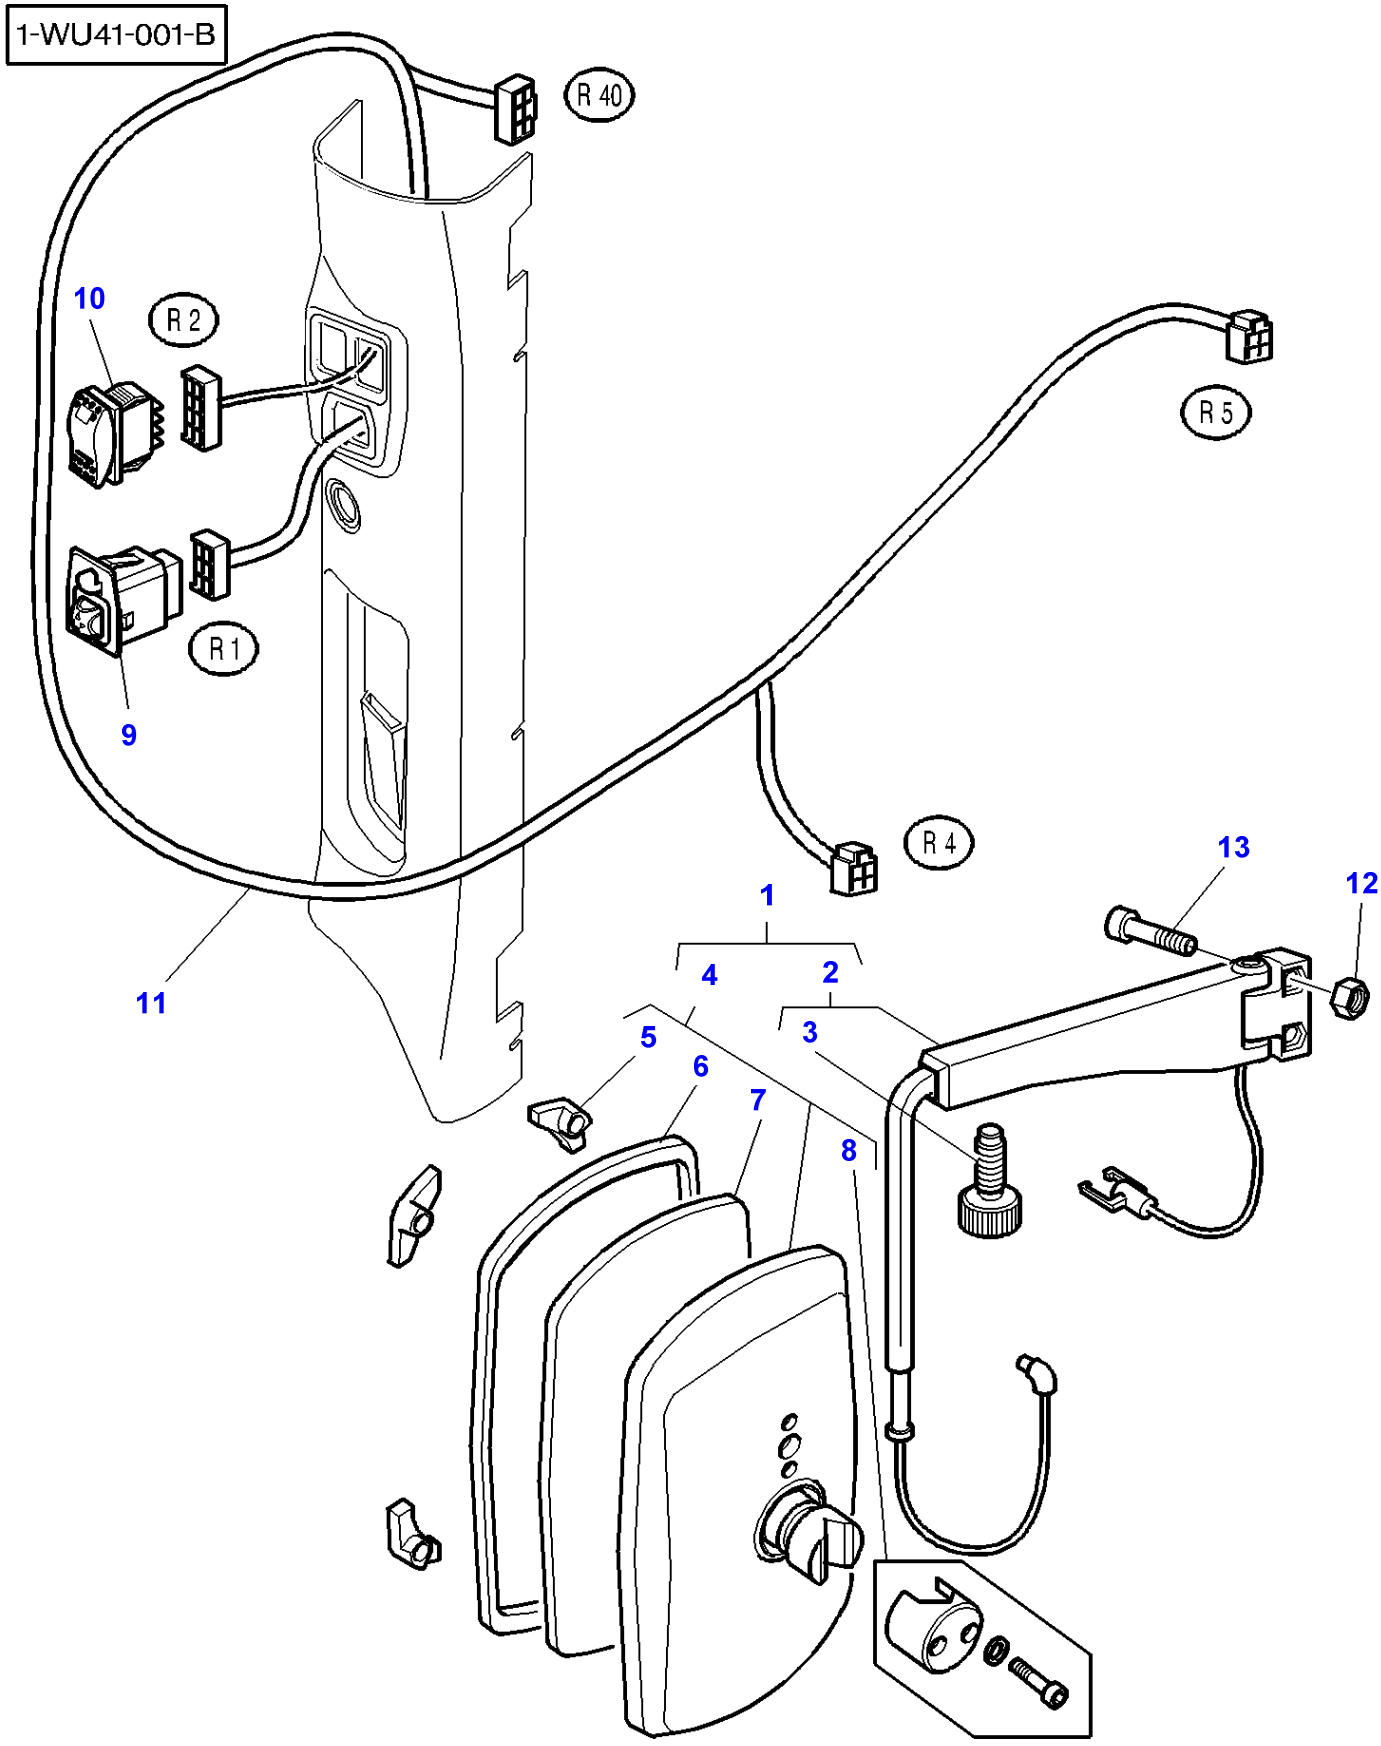

1-WU41-001-B
R 40
10
R 2
R 5
R 1
9
R 4
13
12
1
4
2
11
5
6
3
7
8

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787154M91 | 1 | Mirror | Left Hand |
| | 3787155M91 | 1 | Mirror | Right Hand |
| 2 | 3787156M91 | 1 | Arm | (1) |
| 3 | 3907103M1 | 1 | Setscrew | (2) |
| 4 | 3787157M1 | 1 | Mirror | (1) |
| 5 | 3904493M1 | 4 | Gusset | (4) |
| 6 | 3904492M1 | 1 | Gasket | (4) |
| 7 | 3907104M1 | 1 | Mirror Glass | (4) |
| 8 | 3907102M91 | 1 | Parts Pack | (4) |
| 9 | 4270273M1 | 1 | Drive | |
| 10 | 4271345M1 | 1 | Switch,Indirect | |
| 11 | 4271865M2 | 1 | Harness | |
| 12 | 1440329X1 | 4 | Locknut | M10 |
| 13 | 3011368X1 | 4 | Screw | M10 X 30 |

1-WV01-004-B

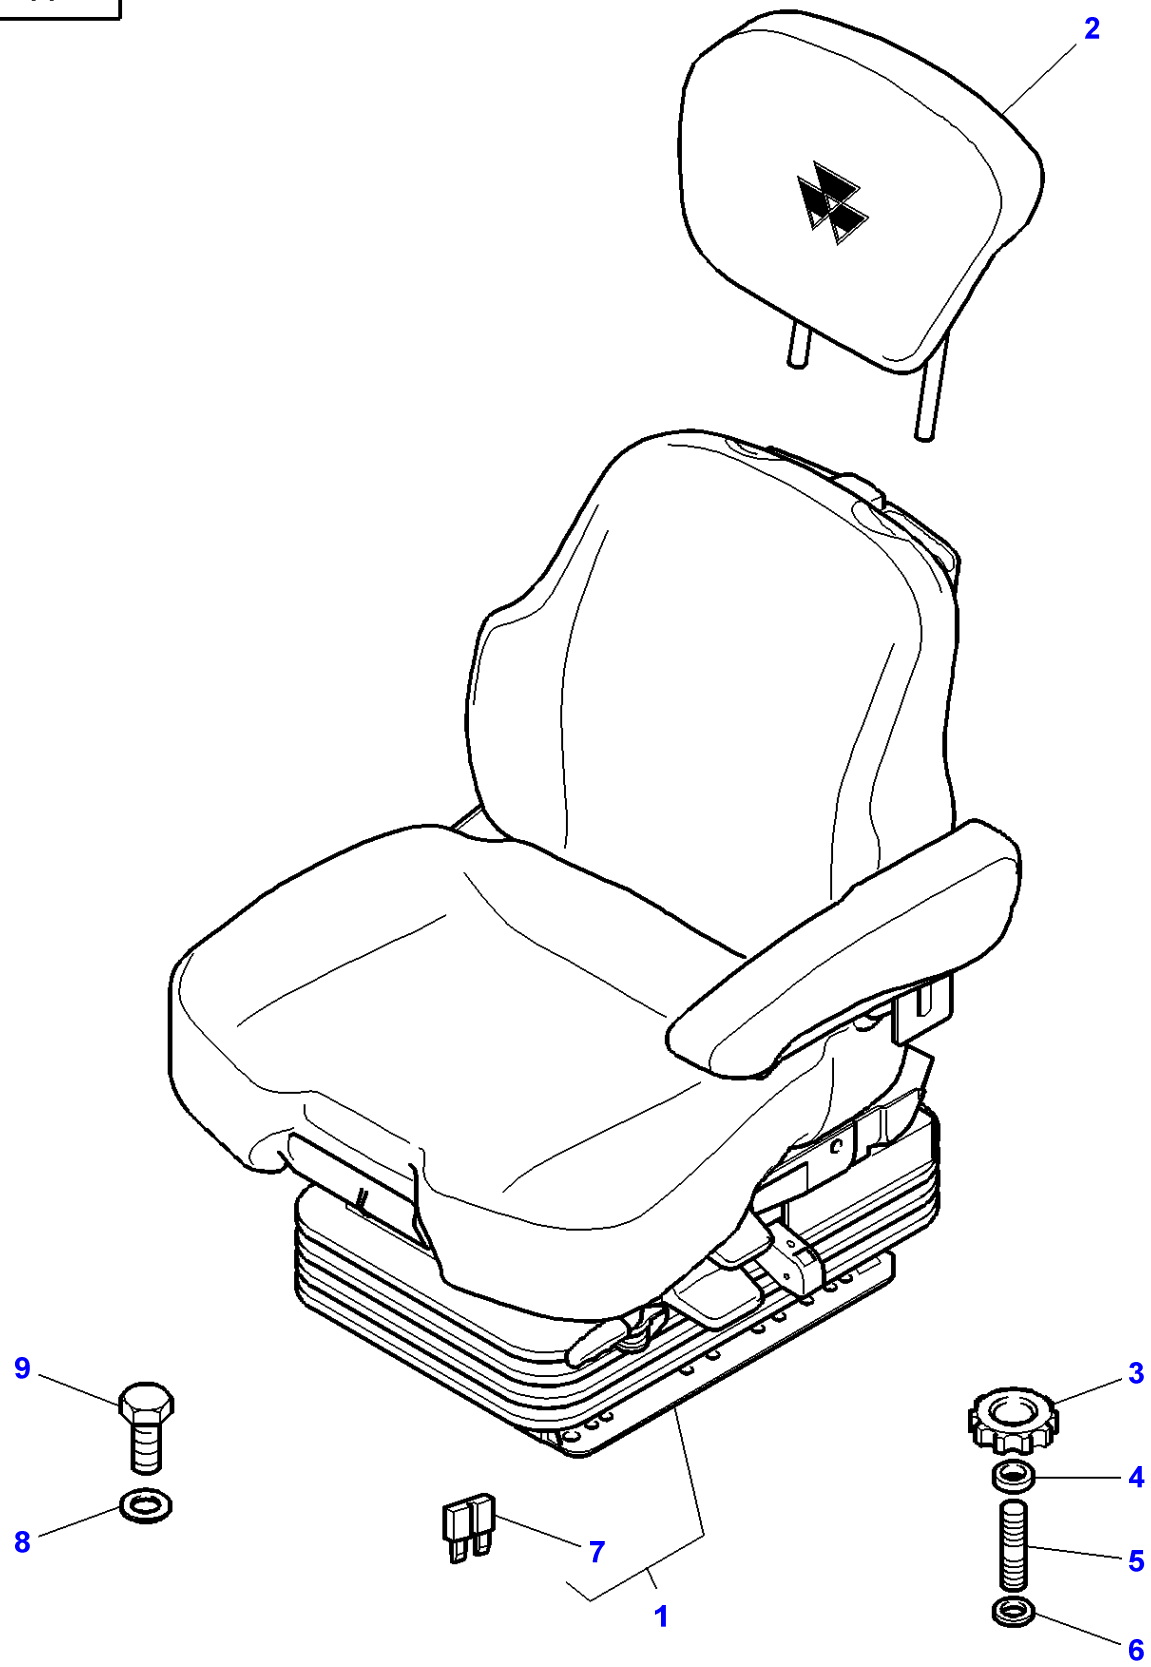


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Seat Page 110-0230

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4272521M91 | 1 | Seat | [A]<br>See Page - Reference Number 110-0250<br>See Page - Reference Number 110-0255 |
| | 4272520M91 | 1 | Seat | [B]<br>See Page - Reference Number 110-0235<br>See Page - Reference Number 110-0240 |
| | 4272517M91 | 1 | Seat | [C]<br>See Page - Reference Number 110-0235<br>See Page - Reference Number 110-0245 |
| 2 | 4272525M91 | 1 | Head Rest | |
| 3 | 3786216M1 | 2 | Button | |
| 4 | 3616096M1 | 2 | Spacer | Diameter 10,5-32X5 |
| 5 | 3008483X1 | 2 | Stud | M10X35 |
| 6 | 3778519M1 | 2 | Washer | Diameter 10-27X1,8 |
| 7 | **3387322M1** | 1 | Fuse | [A,B]<br>(1)<br>25 AMP. |
| 8 | 390972X1 | 4 | Washer | |
| 9 | 3009285X1 | 4 | Screw | M8X16 |

**FOOTNOTE [A]** AIR PRESSURE SEAT WITH AUTOMATIC ADJUSTMENT - LUXUY
**FOOTNOTE [B]** AIR PRESSURE SEAT WITH AUTOMATIC ADJUSTMENT
**FOOTNOTE [C]** AIR PRESSURE SEAT WITH MANUAL ADJUSTMENT

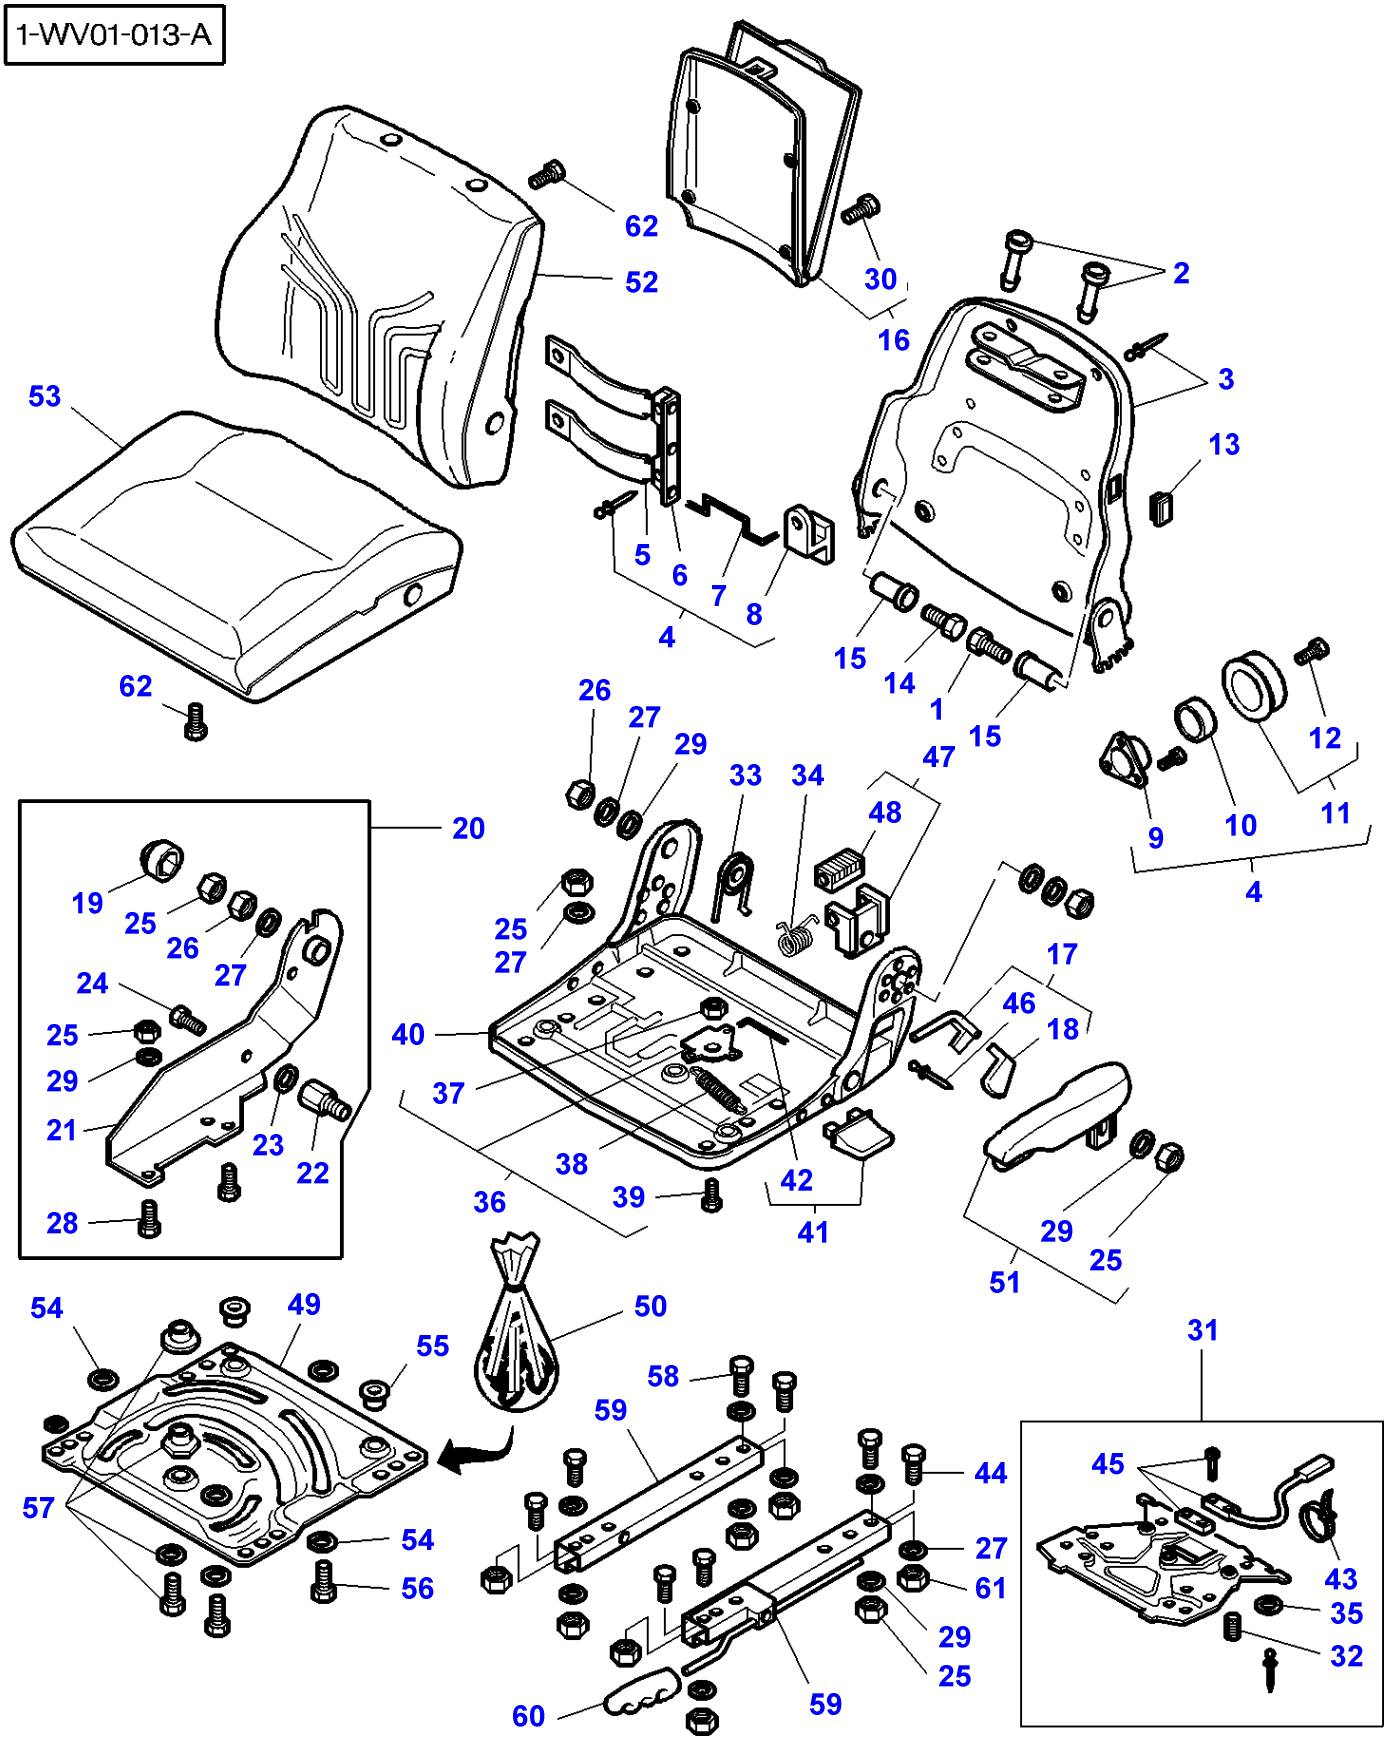
1-WV01-013-A
62
52
30
16
2
3
13
53
5
6
7
8
4
15
14
1
15
62
26
27
29
33
34
47
48
12
9
10
11
4
20
19
25
26
27
24
25
29
21
23
22
28
25
27
40
37
38
39
36
42
41
17
46
18
29
25
51
54
49
55
57
54
56
50
58
59
44
27
61
29
25
60
59
31
45
43
35
32

**Massey Ferguson**

## MF 8470/8480 TRACTOR - 1637446




**Seat**



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| | 4272520M91 | 1 | Seat | |
| | 4272517M91 | 1 | Seat | |
| 1 | 339010X1 | 1 | Hex. Sock. Screw | M8X40 |
| 2 | 3903626M1 | 2 | Insert | |
| 3 | 3903625M91 | 1 | Back Rest | |
| 4 | 3903628M91 | 1 | Support | |
| 5 | 3903601M1 | 2 | Plate | |
| 6 | 3903602M1 | 1 | Plate | |
| 7 | 3903600M1 | 1 | Rod | |
| 8 | 3903633M1 | 1 | Driving | |
| 9 | 3903632M1 | 1 | Holder | |
| 10 | 3903631M1 | 1 | Cam | |
| 11 | 3903630M91 | 1 | Handle | |
| 12 | 392831X1 | 1 | Screw | M6 X 10 |
| 13 | 3903598M1 | 1 | Tap | |
| 14 | 339168X1 | 1 | Hex. Sock. Screw | M8 X 50 |
| 15 | 3903634M1 | 2 | Tube | |
| 16 | 3903603M1 | 1 | Pocket | |
| 17 | 3904264M1 | 1 | Lever | |
| 18 | 3904265M1 | 1 | Handle | |
| 19 | 3903607M1 | 1 | Clevis | |
| 20 | 3907123M91 | 1 | Support | |
| 21 | | 1 | Support | Not serviced,order REF. 20 |
| 22 | 3907121M1 | 1 | Bolt | |
| 23 | 3903605M1 | 1 | Insert | |
| 24 | 353557X1 | 1 | Bolt Unf | 7/16-20 X 20 |
| 25 | 339169X1 | X | Nut | M8 |
| 26 | 3000193X1 | 2 | Nut | M8 |
| 27 | 391565X1 | X | Washer Metric | M8 |
| 28 | 3009439X1 | 2 | Screw | M8 X 16 |
| 29 | 391039X1 | X | Washer Metric | M8 |
| 30 | 3903093M1 | 5 | Screw | M4X8 |
| 31 | 3907126M91 | 1 | Timing Device | |
| 32 | 3907124M1 | 1 | Spring | |
| 33 | 3903615M1 | 1 | Spring | |
| 34 | 3903788M1 | 1 | Spring | |
| 35 | 3102401M1 | 2 | Buffer | |
| 36 | 3903635M91 | 1 | Lever | |
| 37 | 3903623M1 | 1 | Insert | |
| 38 | 3104902M1 | 1 | Spring | |
| 39 | 339228X1 | 1 | Hex. Sock. Screw | M8 X 12 |
| 40 | 3907122M1 | 1 | Frame | |
| 41 | 3903611M91 | 1 | Handle | |
| 42 | 3903612M1 | 1 | Rod | |
| 43 | 3903106M1 | 1 | Tie | |
| 44 | 3009285X1 | 5 | Screw | M8 X 16<br>Replace and repair. Old not interchangeable with new 1441000X1 |
| 45 | 3907125M91 | 1 | Switch | |
| 46 | | X | Rivet | [A] |
| 47 | 3904270M1 | 1 | Support | |
| 48 | 3904269M1 | 1 | Stop | |
| 49 | 3903622M91 | 1 | Plate | |
| 50 | 3904275M1 | 1 | Parts Pack | |
| 51 | 3904442M91 | 1 | Armrest | Left Hand |
| 52 | 3907117M1 | 1 | Cushion | |
| 53 | 3907118M1 | 1 | Cushion | |
| 54 | 390735X1 | 8 | Washer | Diameter 13 X 2.5-0.12 |
| 55 | 3903616M1 | 2 | Bearing | |
| 56 | 3903610M1 | 4 | Bolt | |
| 57 | 3903967M91 | 1 | Parts Pack | |
| 58 | 339124X1 | 4 | Hex. Sock. Screw | M8 X 16 |
| 59 | 3903621M91 | 1 | Kit, Slider | |
| 60 | 3903595M1 | 1 | Handle | |
| 61 | 3904089M1 | 4 | Nut | M8 |
| 62 | 3903965M1 | 7 | Screw | M5 X 25 |

**FOOTNOTE [A]** NOT SERVICED

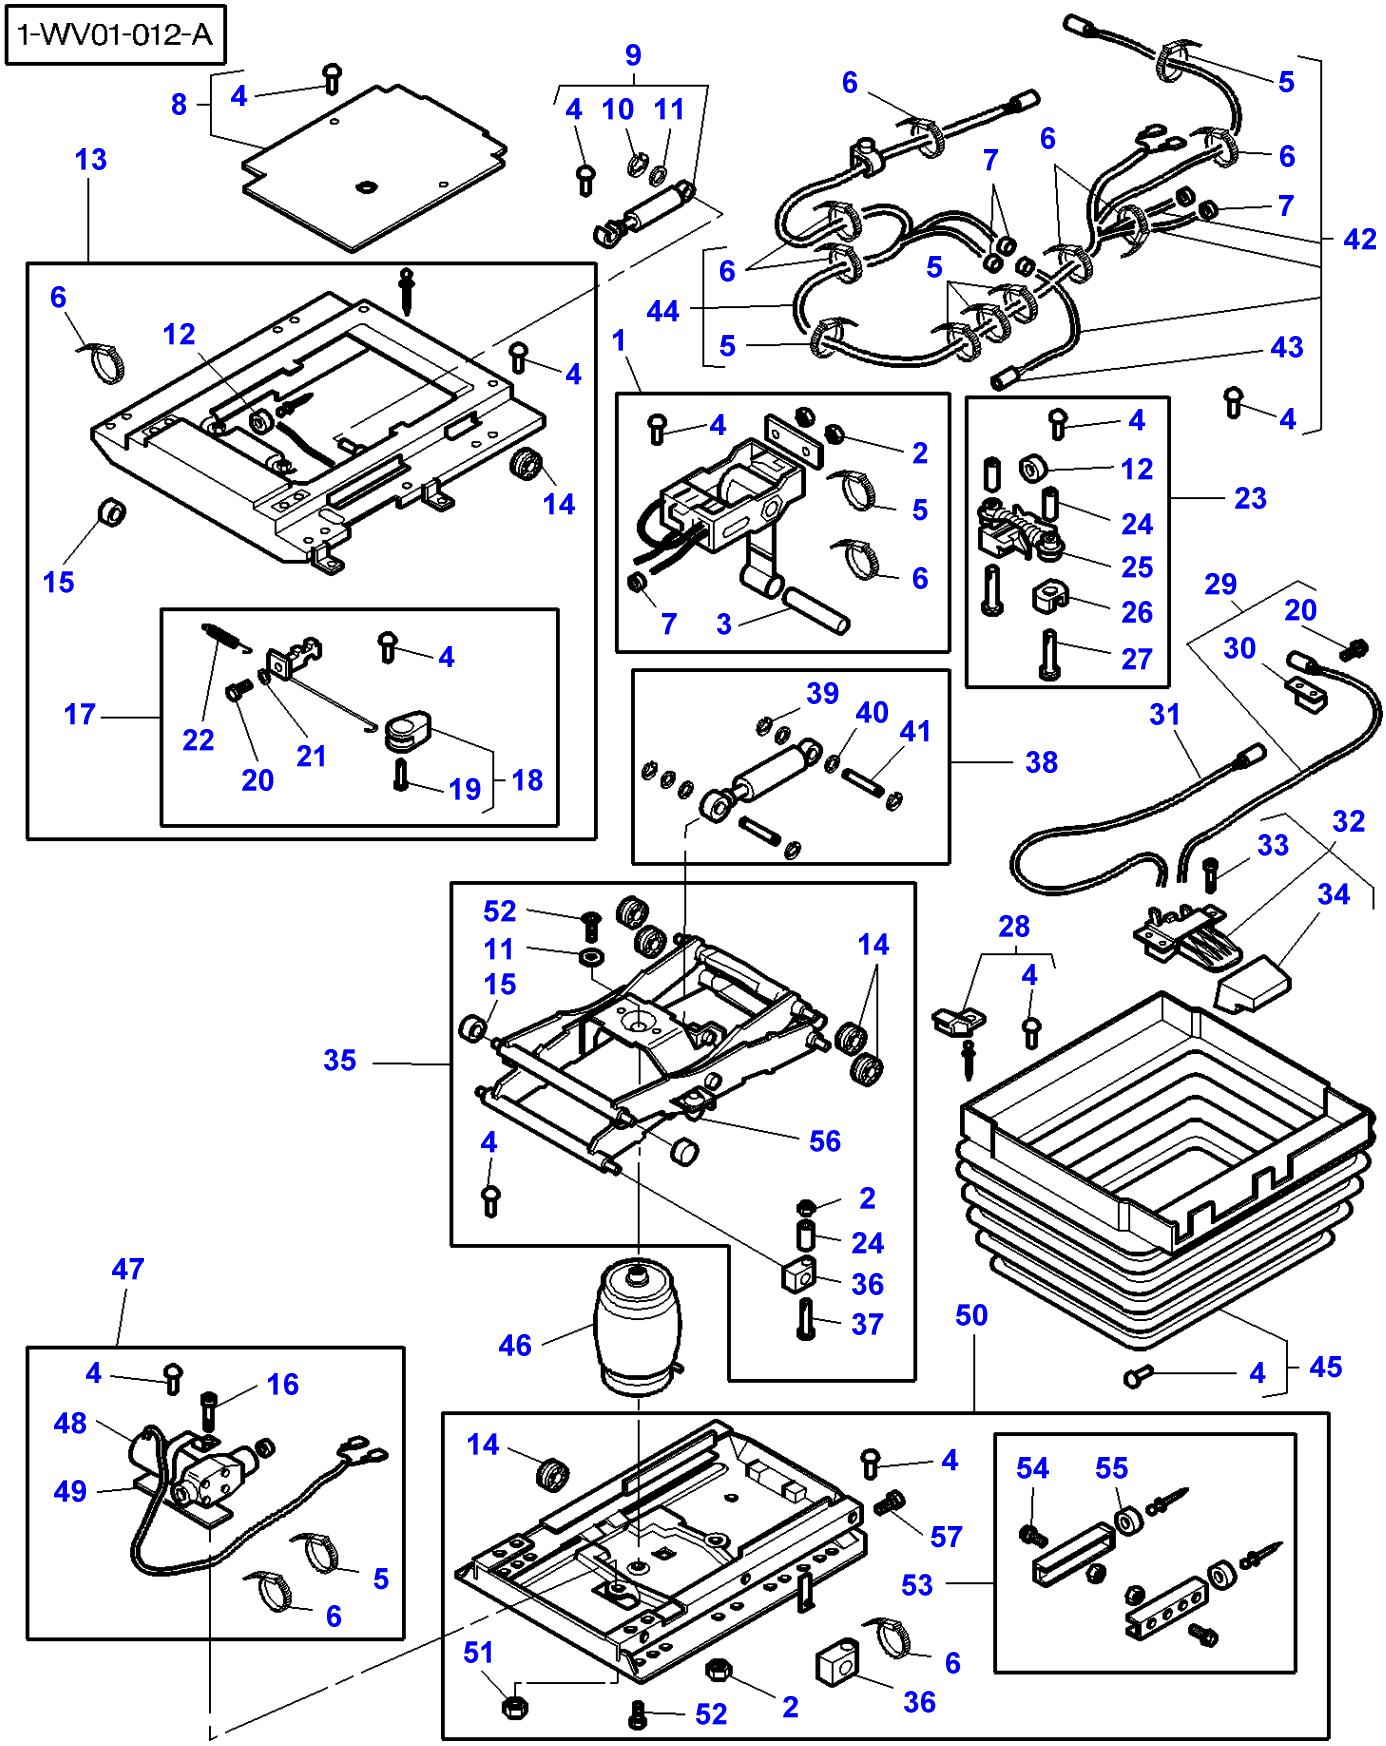
1-WV01-012-A
8
4
9
4
10
11
13
6
5
6
6
7
7
42
6
44
5
5
43
4
1
6
12
4
14
15
4
2
5
6
7
3
4
12
23
24
25
26
27
29
20
30
31
17
22
20
21
4
19
18
39
40
41
38
32
33
34
52
11
15
14
35
56
4
2
24
36
37
46
28
4
4
45
47
4
16
48
49
5
6
50
14
4
57
53
54
55
51
52
2
36
6


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Seat Page 110-0240

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| | 4272520M91 | 1 | Seat | |
| 1 | 3903129M91 | 1 | Lever | |
| 2 | 3000193X1 | 4 | Nut | M8 |
| 3 | 3903130M1 | 1 | Clevis Pin | |
| 4 | 1719896M1 | 24 | Plug | |
| 5 | 3903068M1 | 4 | Tie | 4,7x204 MM |
| 6 | 3903106M1 | 5 | Tie | 2,5x102 MM |
| 7 | 3903052M1 | 4 | Olive | |
| 8 | 3903037M91 | 1 | Housing | |
| 9 | 3903039M91 | 1 | Shock Absorber | |
| 10 | 1441206X1 | 1 | Lock Washer | Diameter 6 MM |
| 11 | 391565X1 | 2 | Washer Metric | Diameter 8.4 MM |
| 12 | 3903040M1 | 1 | Buffer | |
| 13 | 3903132M91 | 1 | Suspension | |
| 14 | 3903050M1 | 4 | Roller | |
| 15 | 3903815M1 | 2 | Pulley | |
| 16 | 3001414X1 | 1 | Screw Metric | M8x12 |
| 17 | 3903045M91 | 1 | Rod Link | |
| 18 | 3903180M91 | 1 | Handle | |
| 19 | 3903065M1 | 1 | Screw | 4x14 |
| 20 | 3904444M1 | 2 | Screw | 3.5x12 |
| 21 | 339362X1 | 1 | Washer | Diameter 4,3 MM |
| 22 | 3903044M1 | 2 | Spring | |
| 23 | 3903032M91 | 1 | Shock Absorber | (1) |
| 24 | 3105404M1 | 4 | Tube | (1) |
| 25 | 3903033M1 | 2 | Insert | |
| 26 | 3903034M1 | 2 | Buffer | |
| 27 | 339287X1 | 2 | Hex. Sock. Screw | M8x35 |
| 28 | 3903036M1 | 2 | Stop | |
| 29 | 3903138M91 | 1 | Cable | |
| 30 | 3903136M1 | 1 | Support | |
| 31 | 3903137M91 | 1 | Cable | |
| 32 | 3903164M91 | 1 | Selector | Replace and repair. Old interchangeable with new 3903043M91 |
| 33 | 3904087M1 | 3 | Bolt | M5X16 |
| 34 | 3903042M1 | 1 | Handle | |
| 35 | 3903047M91 | 1 | Suspension | |
| 36 | 3903049M1 | 2 | Bearing Carrier | |
| 37 | 3903066M1 | 2 | Screw | |
| 38 | 3903058M91 | 1 | Shock Absorber | |
| 39 | 390287X1 | 4 | Lock Washer | |
| 40 | 3101663M1 | 4 | Washer | |
| 41 | 3903035M1 | 2 | Clevis Pin | |
| 42 | 3903141M91 | 1 | Hydr. Hose | |
| 43 | 3105395M1 | 2 | Hose Clip | |
| 44 | 3903140M91 | 1 | Cable | |
| 45 | 3903139M91 | 1 | Bellows | |
| 46 | 3903051M91 | 1 | Accumulator | |
| 47 | 3903057M91 | 1 | Compressor | |
| 48 | 3903053M1 | 1 | Clamp | |
| 49 | 3903054M1 | 1 | Plate | |
| 50 | 3903059M91 | 1 | Fit Plate Seat | |
| 51 | 3000193X1 | 1 | Nut | M8 |
| 52 | 3903067M1 | 2 | Screw | M8x20 |
| 53 | 3903062M1 | 1 | Stop | |
| 54 | 3101996M1 | 2 | Screw Special | M8x16 |
| 55 | 3102401M1 | 2 | Buffer | |
| 56 | 1719867M1 | 2 | Protector | |
| 57 | 3000926X1 | 1 | Screw | M5x10 |
| 58 | 3903135M91 | 1 | Kit, Repair | [A,B] |

**FOOTNOTE [A]** INCLUDE ITEM 2/4/5/6/11/12/14/15/24/25/ 26/36/51/52/53/56/58
**FOOTNOTE [B]** NOT ILLUSTRATED

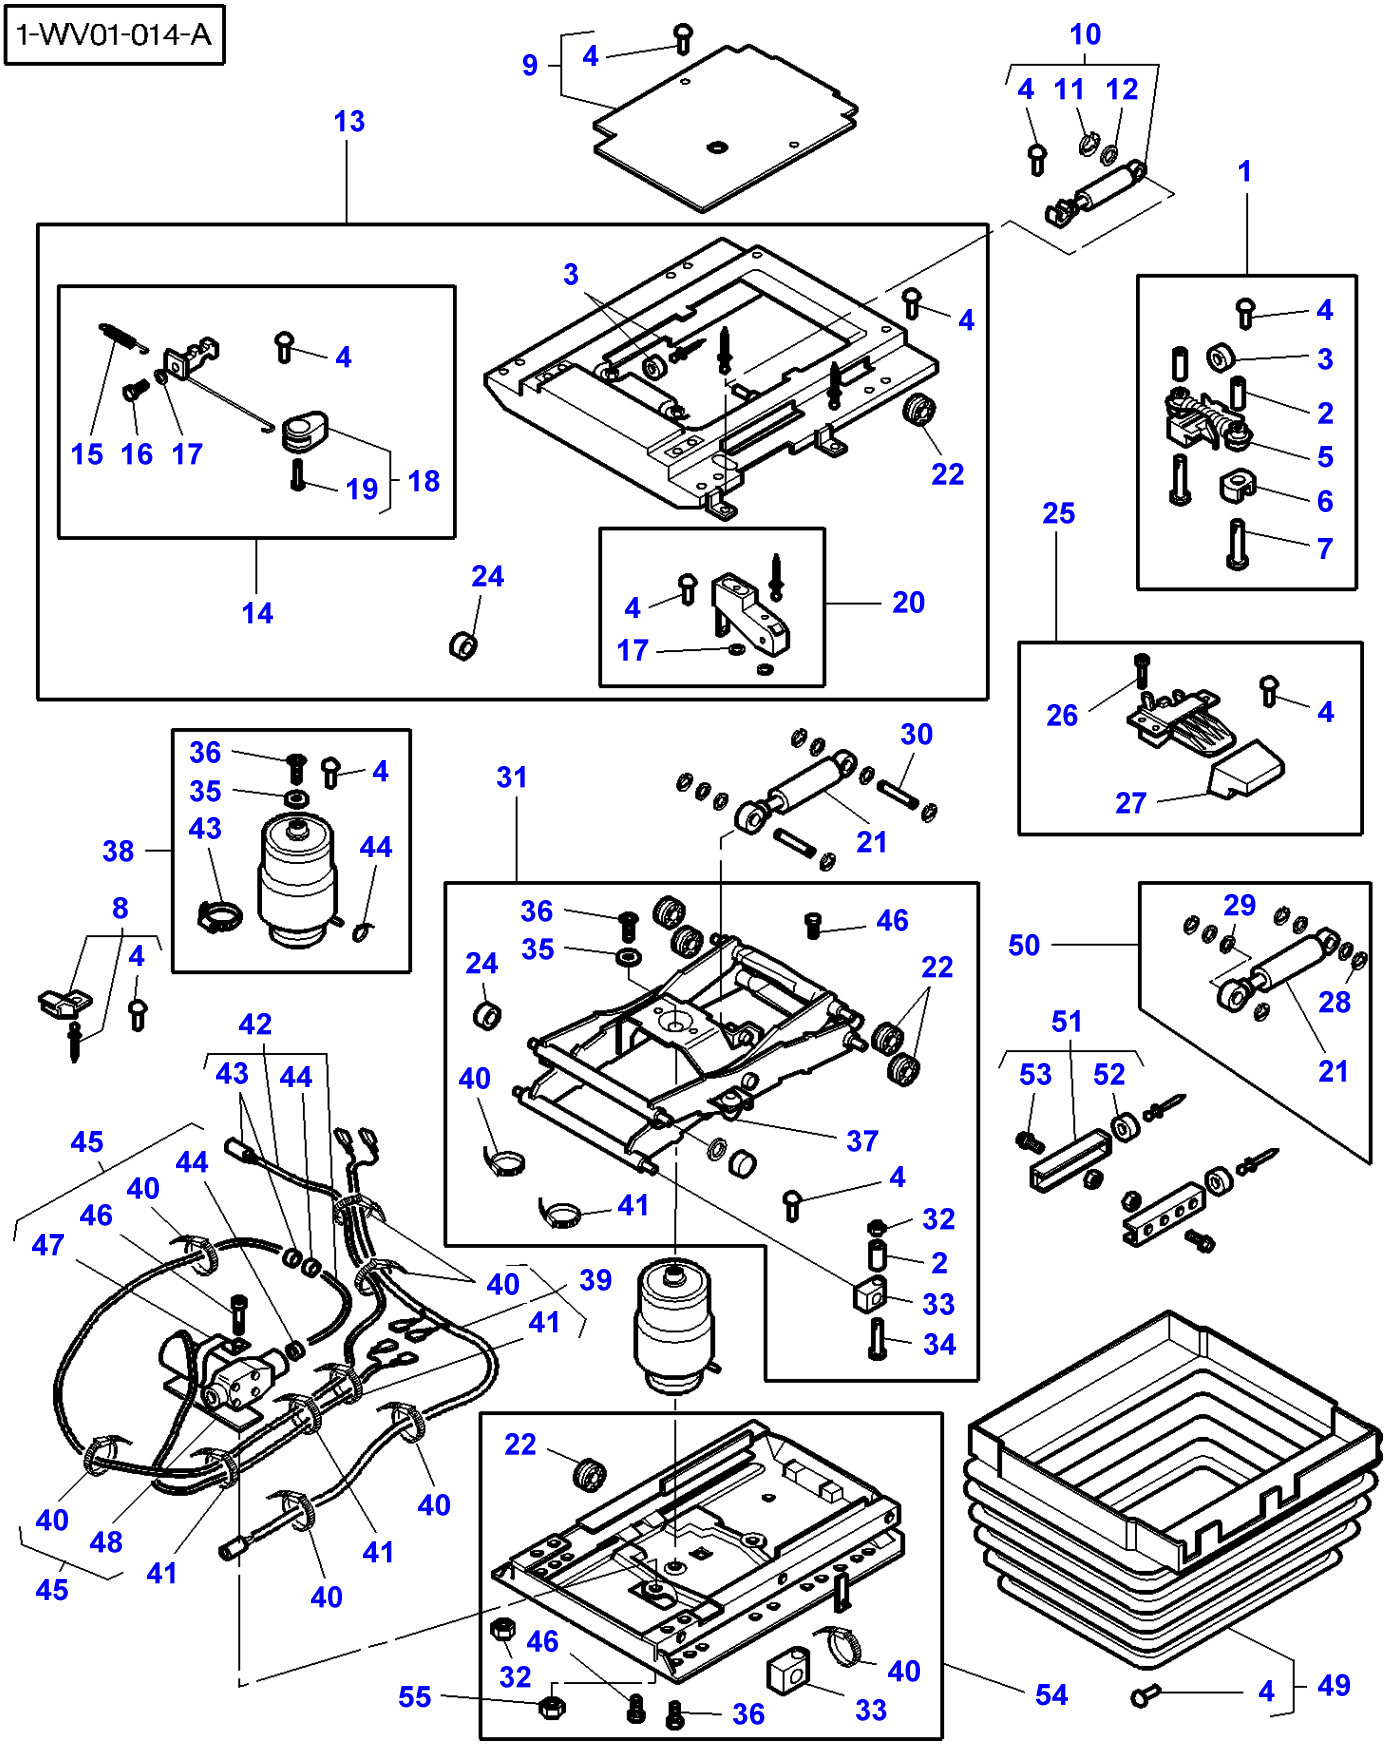
1-WV01-014-A
9
4
10
4 11 12
13
1
3
4
15 16 17
19 18
14
22
24
4
17
20
25
26
4
27
36
35
43
4
38
44
30
31
21
8
4
36
46
35
24
22
40
37
41
4
32
2
33
34
42
43 44
45
44
40
46
47
40
39
41
40
48
41
45
41
40
50
29
28
21
51
53 52
22
46
32
55
36
33
40
54
4
49

Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446


Seat Page 110-0245

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| | 4272517M91 | 1 | Seat | |
| 1 | 3903032M91 | 1 | Shock Absorber | |
| 2 | 3105404M1 | 4 | Tube | |
| 3 | 3903040M1 | 1 | Buffer | |
| 4 | 1719896M1 | 24 | Plug | |
| 5 | 3903033M1 | 2 | Insert | |
| 6 | 3903034M1 | 1 | Buffer | |
| 7 | 339287X1 | 2 | Hex. Sock. Screw | M8 X 35 |
| 8 | 3903036M1 | 2 | Stop | |
| 9 | 3903037M91 | 1 | Housing | |
| 10 | 3903039M91 | 1 | Shock Absorber | |
| 11 | 1441206X1 | 1 | Lock Washer | |
| 12 | 391565X1 | 1 | Washer Metric | |
| 13 | 3903038M91 | 1 | Fit Plate Seat | |
| 14 | 3903045M91 | 1 | Rod Link | |
| 15 | 3903044M1 | 2 | Spring | |
| 16 | 3904444M1 | 1 | Screw | 3,5 X 12 |
| 17 | 339362X1 | 3 | Washer | |
| 18 | 3903180M91 | 1 | Handle | |
| 19 | 3903065M1 | 1 | Screw | 4 X 14 |
| 20 | 3903041M91 | 1 | Parts Pack | |
| 21 | | 1 | Ram | Not serviced,order REF. 50 |
| 22 | 3903050M1 | 4 | Roller | |
| 23 | 3903135M91 | 1 | Kit, Repair | [A,B] |
| 24 | 3903815M1 | 2 | Pulley | |
| 25 | 3903313M91 | 1 | Drive | |
| 26 | 3904087M1 | 3 | Bolt | M5 X 16 |
| 27 | 3903042M1 | 1 | Handle | |
| 28 | 390287X1 | 4 | Lock Washer | |
| 29 | 3101663M1 | 3 | Washer | |
| 30 | 3903035M1 | 2 | Clevis Pin | |
| 31 | 3903047M91 | 1 | Suspension | |
| 32 | 3000193X1 | 3 | Nut | M8 |
| 33 | 3903049M1 | 2 | Bearing Carrier | |
| 34 | 3903066M1 | 2 | Screw | |
| 35 | 391565X1 | 1 | Washer Metric | |
| 36 | 3903067M1 | 2 | Screw | 8 X 20 |
| 37 | 1719867M1 | 2 | Protector | |
| 38 | 3903051M91 | 1 | Accumulator | |
| 39 | 3903056M91 | 1 | Cable | |
| 40 | 3903106M1 | 7 | Tie | |
| 41 | 3903068M1 | 4 | Tie | |
| 42 | 3904445M91 | 1 | Kit, Repair | |
| 43 | 3903052M1 | 2 | Olive | |
| 44 | 3105395M1 | 2 | Hose Clip | |
| 45 | 3903057M91 | 1 | Compressor | |
| 46 | 3001414X1 | 1 | Screw Metric | M8 X 12 |
| 47 | 3903053M1 | 1 | Clamp | |
| 48 | 3903054M1 | 1 | Plate | |
| 49 | 3903060M91 | 1 | Bellows | |
| 50 | 3903058M91 | 1 | Shock Absorber | |
| 51 | 3903062M1 | 1 | Stop | |
| 52 | 3102401M1 | 2 | Buffer | |
| 53 | 3101996M1 | 2 | Screw Special | M8 X 16 |
| 54 | 3903059M91 | 1 | Fit Plate Seat | |
| 55 | 3000193X1 | 1 | Nut | M8 |

**FOOTNOTE [A]** INCLUDE ITEM 2/3/4/6/22/24/33/35/36/37/40/41 /44/46/51
**FOOTNOTE [B]** NOT ILLUSTRATED

# MF 8470/8480 TRACTOR - 1637446

## 1-WV01-015-A

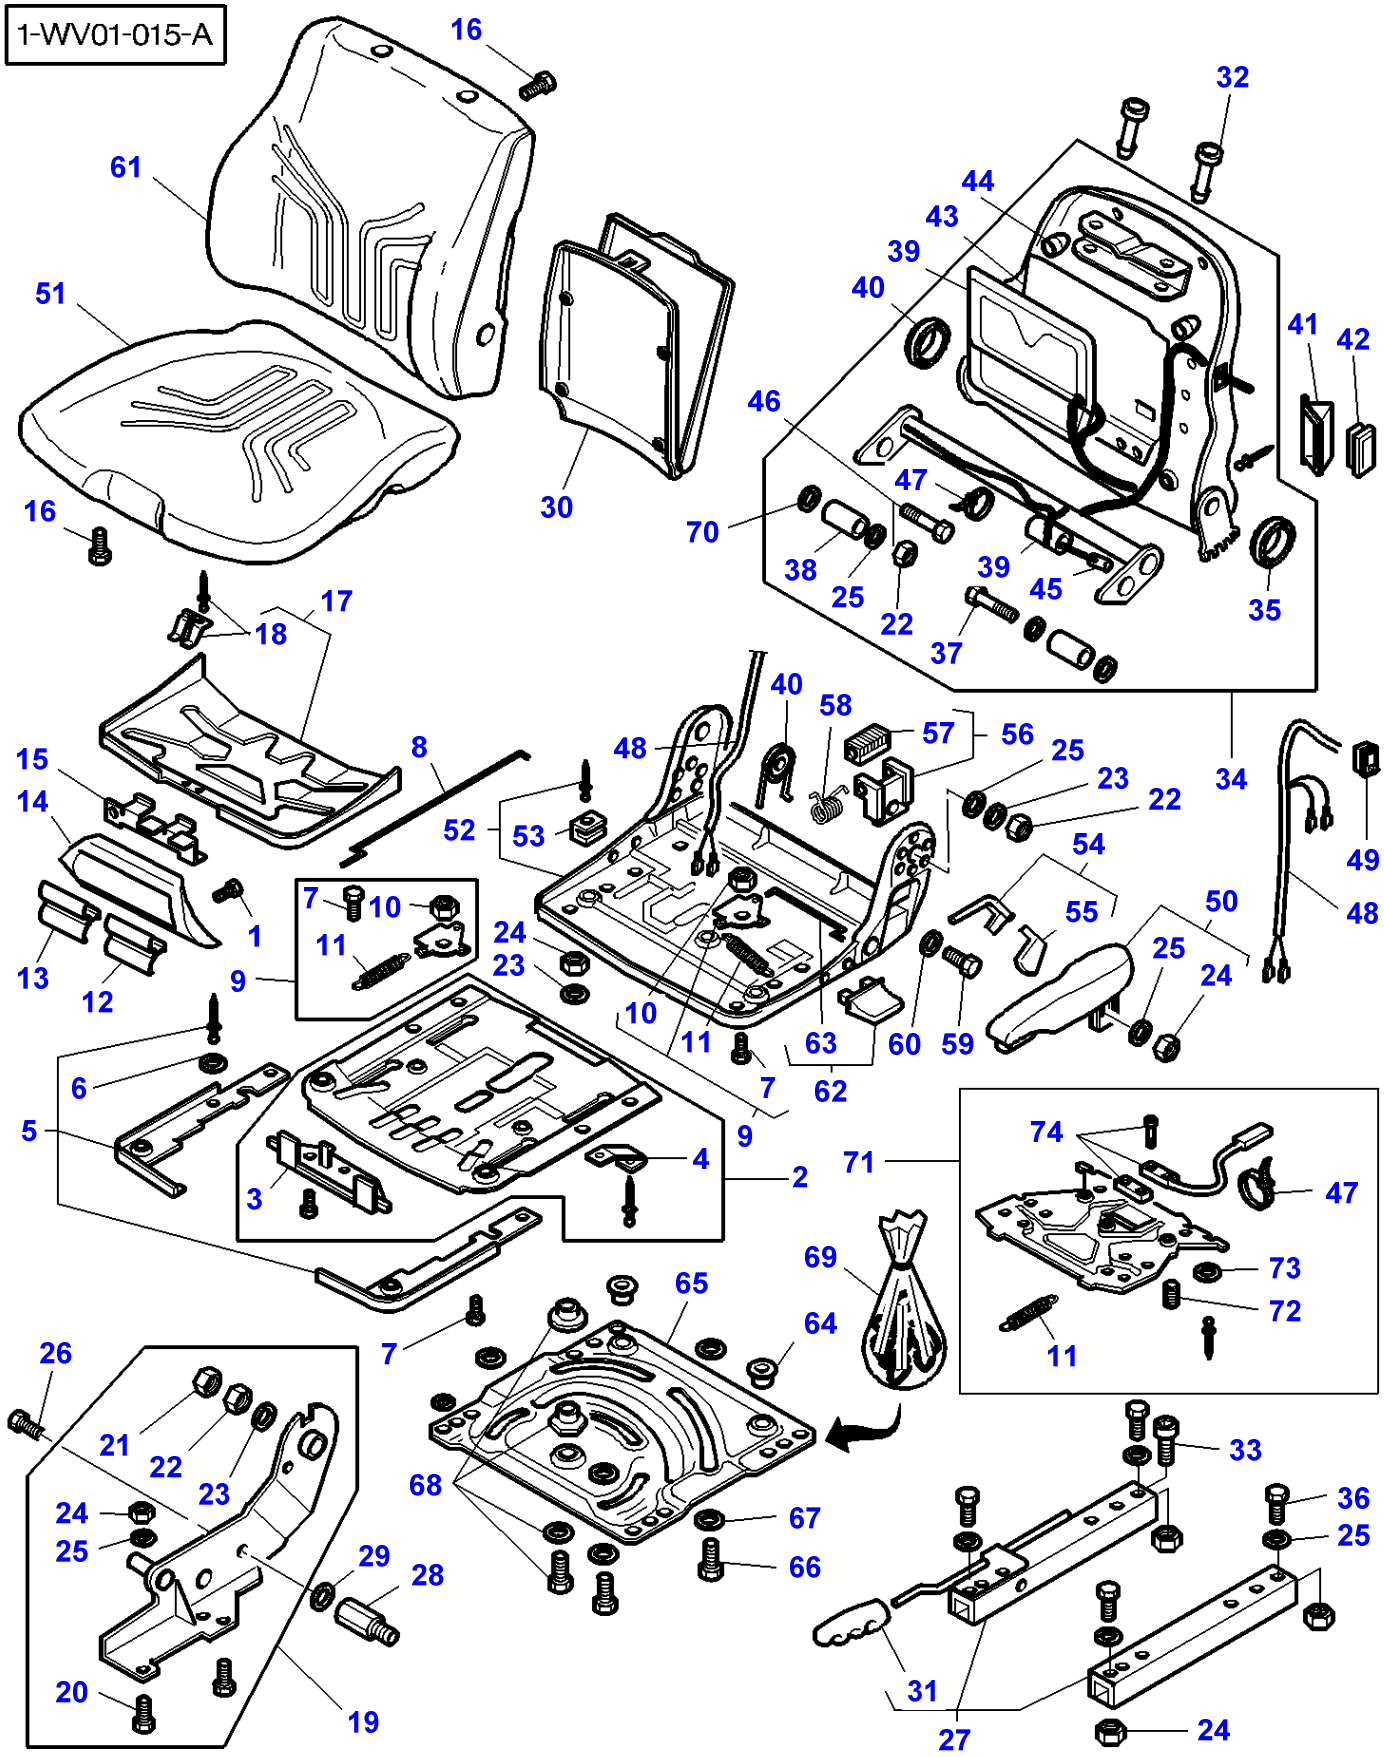

**Massey Ferguson**

**MF 8470/8480 TRACTOR - 1637446** **1637446**

**Seat - AIR PRESSURE SEAT WITH AUTOMATIC ADJUSTMENT - LUXUY** **Page 110-0250**


| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| | 4272521M91 | 1 | Seat | |
| 1 | 3904087M1 | 2 | Bolt | 5x16 |
| 2 | 3903780M91 | 1 | Frame | |
| 3 | 3903785M91 | 1 | Adjuster | |
| 4 | 3903781M1 | 1 | Shield | |
| 5 | 3903784M91 | 1 | Housing | |
| 6 | 339362X1 | 2 | Washer | |
| 7 | 339228X1 | 2 | Hex. Sock. Screw | M8x12 |
| 8 | 3903783M1 | 1 | Rod | |
| 9 | 3903635M91 | 2 | Lever | |
| 10 | 3903623M1 | 2 | Insert | |
| 11 | 3104902M1 | 2 | Spring | |
| 12 | 3903794M1 | 1 | Muff | |
| 13 | 3903793M91 | 1 | Handle | |
| 14 | 3903792M91 | 1 | Housing | |
| 15 | 3903791M1 | 1 | Lever | |
| 16 | 3903965M1 | 8 | Screw | M5x25 |
| 17 | 3903789M91 | 1 | Positioner | |
| 18 | 3903790M91 | 1 | Shield | |
| 19 | 3907123M91 | 1 | Support | |
| 20 | 3009439X1 | 4 | Screw | M8x16 |
| 21 | 3903607M1 | 1 | Clevis | |
| 22 | 3000193X1 | 2 | Nut | M8 |
| 23 | 391565X1 | 9 | Washer Metric | |
| 24 | 339169X1 | 10 | Nut | M8 |
| 25 | 391039X1 | 9 | Washer Metric | |
| 26 | 353557X1 | 1 | Bolt Unf | 7/16-20x20 |
| 27 | 3903621M91 | 1 | Kit, Slider | |
| 28 | 3907121M1 | 1 | Bolt | |
| 29 | 3903605M1 | 1 | Insert | |
| 30 | 3903603M1 | 1 | Pocket | |
| 31 | 3903595M1 | 1 | Handle | |
| 32 | 3903626M1 | 2 | Insert | |
| 33 | 3009285X1 | 4 | Screw | M8x16<br>Replace and repair. Old not interchangeable with new 1441000X1 |
| 34 | 3903795M91 | 1 | Back Rest | |
| 35 | 3907136M1 | 1 | Washer | |
| 36 | 339124X1 | 4 | Hex. Sock. Screw | M8x16 |
| 37 | 339168X1 | 2 | Hex. Sock. Screw | M8x50 |
| 38 | 3903796M1 | 2 | Tube | |
| 39 | 3903800M1 | 1 | Support | |
| 40 | 3903779M1 | 1 | Spring | |
| 41 | 3903798M1 | 1 | Cover | |
| 42 | 3903843M1 | 1 | Switch | |
| 43 | 3903799M91 | 1 | Plate | |
| 44 | 1719867M1 | 2 | Protector | |
| 45 | 3903970M1 | 3 | Spring | |
| 46 | 3903806M1 | 1 | Screw | M8x60 |
| 47 | 3903106M1 | 9 | Tie | |
| 48 | 3903801M1 | 1 | Harness | |
| 49 | 3903804M1 | 1 | Switch | [A] |
| 50 | 3904442M91 | 1 | Armrest | |
| 51 | 3907135M1 | 1 | Cushion | |
| 52 | 3903787M91 | 1 | Frame | |
| 53 | 3903786M1 | 1 | Skate | |
| 54 | 3904264M1 | 1 | Lever | |
| 55 | 3904265M1 | 1 | Handle | |
| 56 | 3904270M1 | 1 | Support | |
| 57 | 3904269M1 | 1 | Stop | |
| 58 | 3903788M1 | 1 | Spring | |
| 59 | 353562X1 | 1 | Bolt Unf | 7/16-20X35 |
| 60 | 353428X1 | 1 | Nut Unf | 7/16-20 |
| 61 | 3907134M1 | 1 | Cushion | |
| 62 | 3903611M91 | 1 | Handle | |
| 63 | 3903612M1 | 1 | Rod | (62) |
| 64 | 3903616M1 | 2 | Bearing | |
| 65 | 3903622M91 | 1 | Plate | |
| 66 | 3903610M1 | 4 | Bolt | |
| 67 | 390735X1 | 8 | Washer | |
| 68 | 3903967M91 | 1 | Parts Pack | |
| 69 | 3904275M1 | 1 | Parts Pack | |

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 70 | 1444351X1 | 2 | Washer | |
| 71 | 3907126M91 | 1 | Timing Device | |
| 72 | 3907124M1 | 3 | Spring | |
| 73 | 3105034M1 | 2 | Shock Absorber | |
| 74 | 3907125M91 | 1 | Switch | |

**FOOTNOTE [A]** HEATER

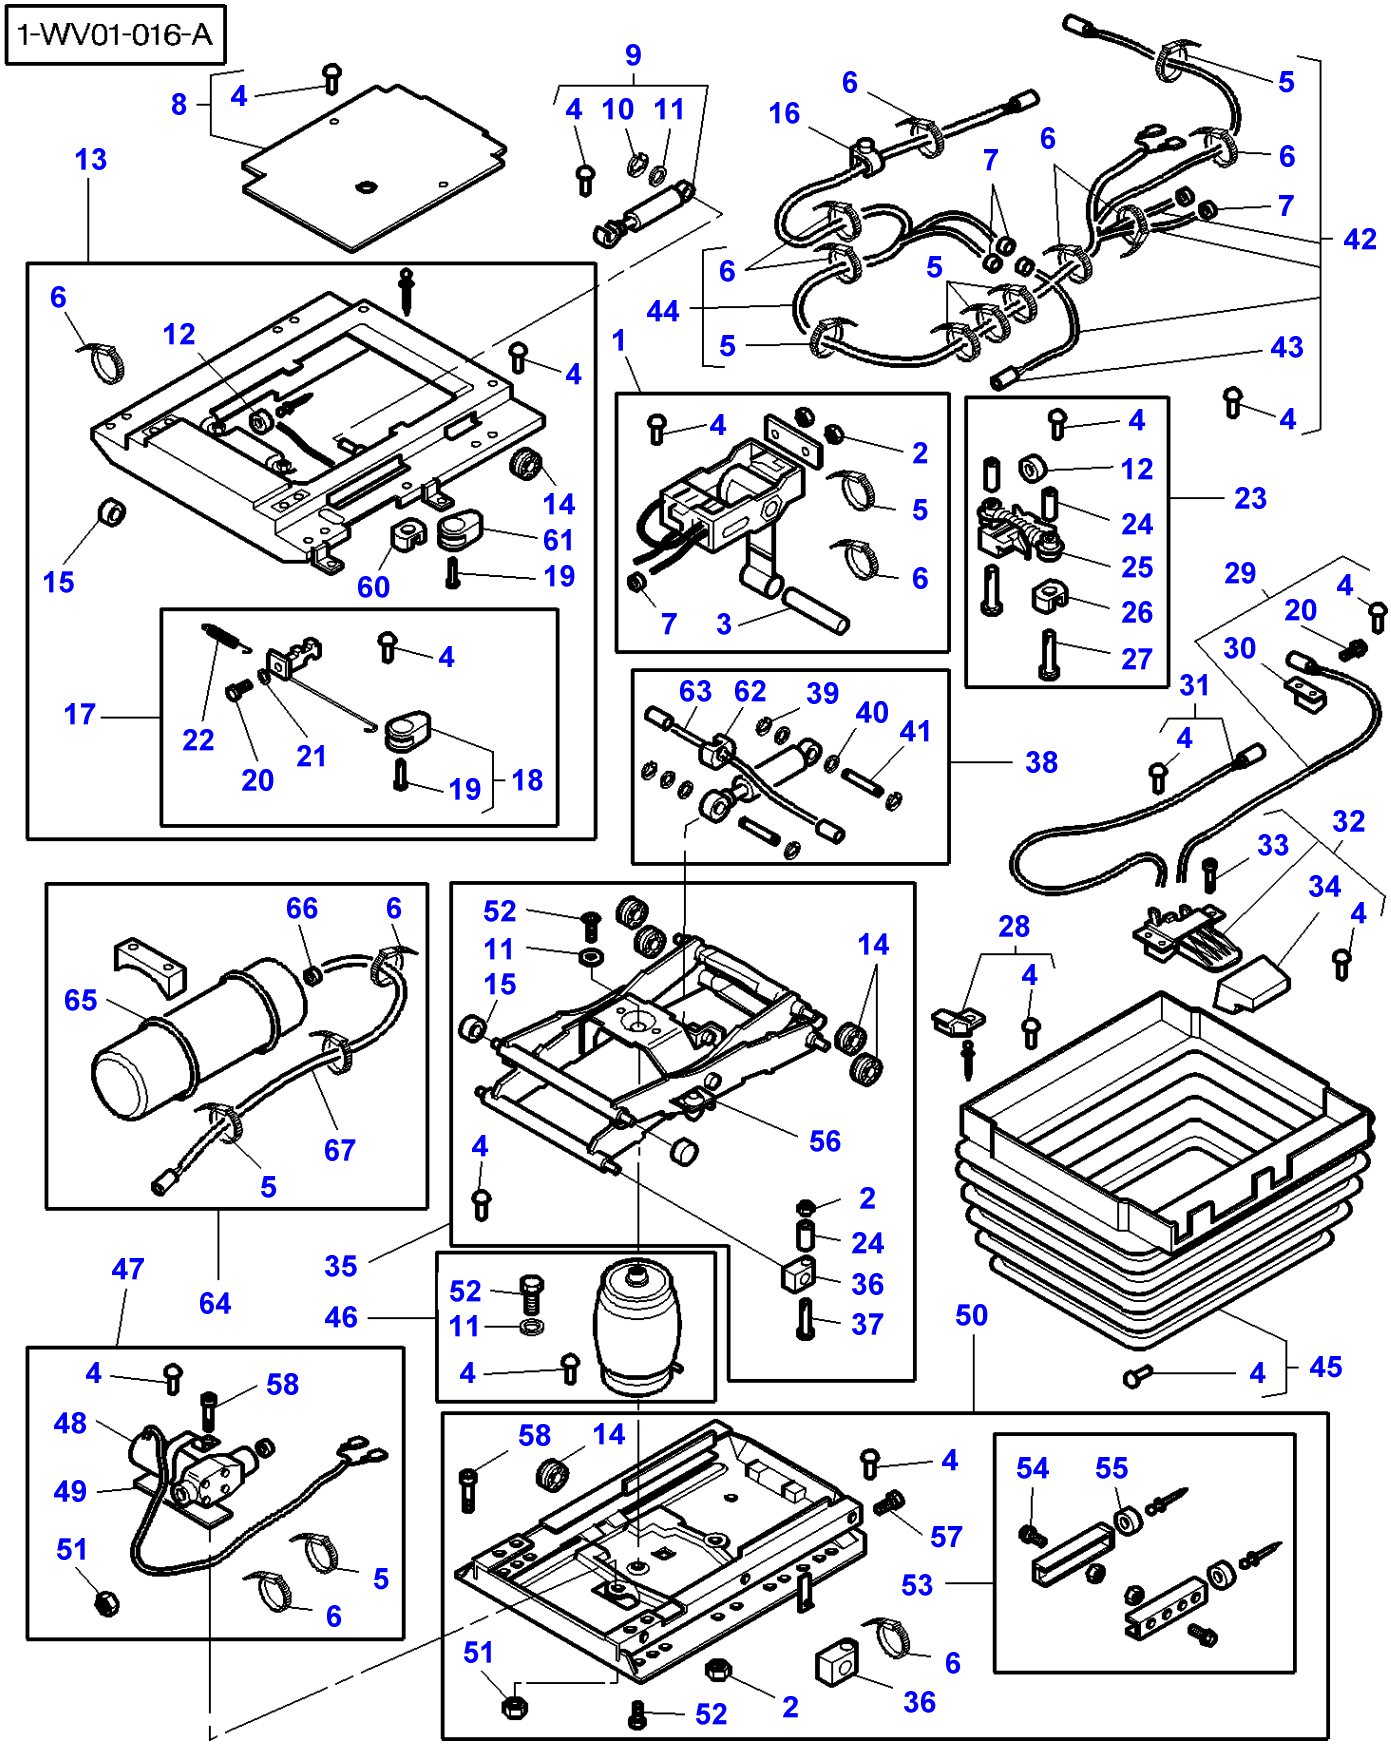
1-WV01-016-A
8
4
9
4
10
11
13
6
16
5
6
7
42
44
5
43
1
12
14
61
19
15
60
2
3
23
24
25
26
27
29
20
30
31
32
33
34
63
62
39
40
41
38
17
22
21
18
66
65
67
64
52
11
15
56
35
46
47
48
49
51
58
50
54
55
53
57
45
28

**Massey Ferguson**


**MF 8470/8480 TRACTOR - 1637446** **1637446**

**Seat - AIR PRESSURE SEAT WITH AUTOMATIC ADJUSTMENT - LUXUY** **Page 110-0255**

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| | 4272521M91 | 1 | Seat | |
| 1 | 3903129M91 | 1 | Lever | |
| 2 | 3000193X1 | 5 | Nut | M8 |
| 3 | 3903130M1 | 1 | Clevis Pin | |
| 4 | 1719896M1 | 24 | Plug | |
| 5 | 3903068M1 | 4 | Tie | 4,7x204 MM |
| 6 | 3903106M1 | 5 | Tie | 2,5x102 MM |
| 7 | 3903052M1 | 4 | Olive | |
| 8 | 3903037M91 | 1 | Housing | |
| 9 | 3903039M91 | 1 | Shock Absorber | |
| 10 | 1441206X1 | 1 | Lock Washer | Diameter 6 MM |
| 11 | 391565X1 | 2 | Washer Metric | Diameter 8.4 MM |
| 12 | 3903040M1 | 1 | Buffer | |
| 13 | 3903814M91 | 1 | Fit Plate Seat | |
| 14 | 3903816M1 | 4 | Roller | |
| 15 | 3903815M1 | 2 | Pulley | |
| 16 | 3903823M1 | 1 | Cable Clamp | |
| 17 | 3903045M91 | 1 | Rod Link | |
| 18 | 3903180M91 | 1 | Handle | |
| 19 | 3903065M1 | 1 | Screw | 4x14 |
| 20 | 3904444M1 | 2 | Screw | 3.5x12MM |
| 21 | 339362X1 | 1 | Washer | Diameter 4,3 MM |
| 22 | 3903044M1 | 2 | Spring | |
| 23 | 3903032M91 | 1 | Shock Absorber | (1) |
| 24 | 3105404M1 | 4 | Tube | (1) |
| 25 | 3903033M1 | 2 | Insert | |
| 26 | 3903034M1 | 2 | Buffer | |
| 27 | 339287X1 | 2 | Hex. Sock. Screw | M8x35 |
| 28 | 3903036M1 | 2 | Stop | |
| 29 | 3903138M91 | 1 | Cable | |
| 30 | 3903136M1 | 1 | Support | |
| 31 | 3903137M91 | 1 | Cable | |
| 32 | 3903164M91 | 1 | Selector | Replace and repair. Old interchangeable with new 3903043M91 |
| 33 | 3904087M1 | 3 | Bolt | M5X16 |
| 34 | 3903042M1 | 1 | Handle | |
| 35 | 3903047M91 | 1 | Suspension | |
| 36 | 3903049M1 | 2 | Bearing Carrier | |
| 37 | 3903066M1 | 2 | Screw | |
| 38 | 3903822M91 | 1 | Shock Absorber | |
| 39 | 390287X1 | 4 | Lock Washer | |
| 40 | 3101663M1 | 4 | Washer | |
| 41 | 3903035M1 | 2 | Clevis Pin | |
| 42 | 3903141M91 | 1 | Hydr. Hose | |
| 43 | 3105395M1 | 2 | Hose Clip | |
| 44 | 3903817M91 | 1 | Cable | |
| 45 | 3903172M91 | 1 | Bellows | |
| 46 | 3903051M91 | 1 | Accumulator | |
| 47 | 3903057M91 | 1 | Compressor | |
| 48 | 3903053M1 | 1 | Clamp | |
| 49 | 3903054M1 | 1 | Plate | |
| 50 | 3903059M91 | 1 | Fit Plate Seat | |
| 51 | 3000193X1 | 1 | Nut | M8 |
| 52 | 3903067M1 | 2 | Screw | M8x20 |
| 53 | 3903062M1 | 1 | Stop | |
| 54 | 3101996M1 | 2 | Screw Special | M8x16 |
| 55 | 3102401M1 | 2 | Buffer | |
| 56 | 1719867M1 | 2 | Protector | |
| 57 | 3000926X1 | 1 | Screw | M5x10 |
| 58 | 3903480M1 | 1 | Screw | M8x12 |
| 59 | 3903135M91 | 1 | Kit, Repair | [A,B] |
| 60 | 3903819M91 | 1 | Guide | |
| 61 | 3903818M91 | 1 | Handle | |
| 62 | 3903820M91 | 1 | Bearing Carrier | |
| 63 | 3903821M91 | 1 | Cable | |
| 64 | 3903827M91 | 1 | Accumulator | |
| 65 | 3903961M1 | 2 | Cable Clamp | 7.6x387 |
| 66 | 3903824M1 | 2 | Clamp | |
| 67 | 3903825M1 | 1 | Facing | |

**FOOTNOTE [A]** INCLUDE ITEM 2/4/5/6/11/12/14/15/24/25/ 26/36/51/52/53/56/58
**FOOTNOTE [B]** NOT ILLUSTRATED

1-WZ02-001-A

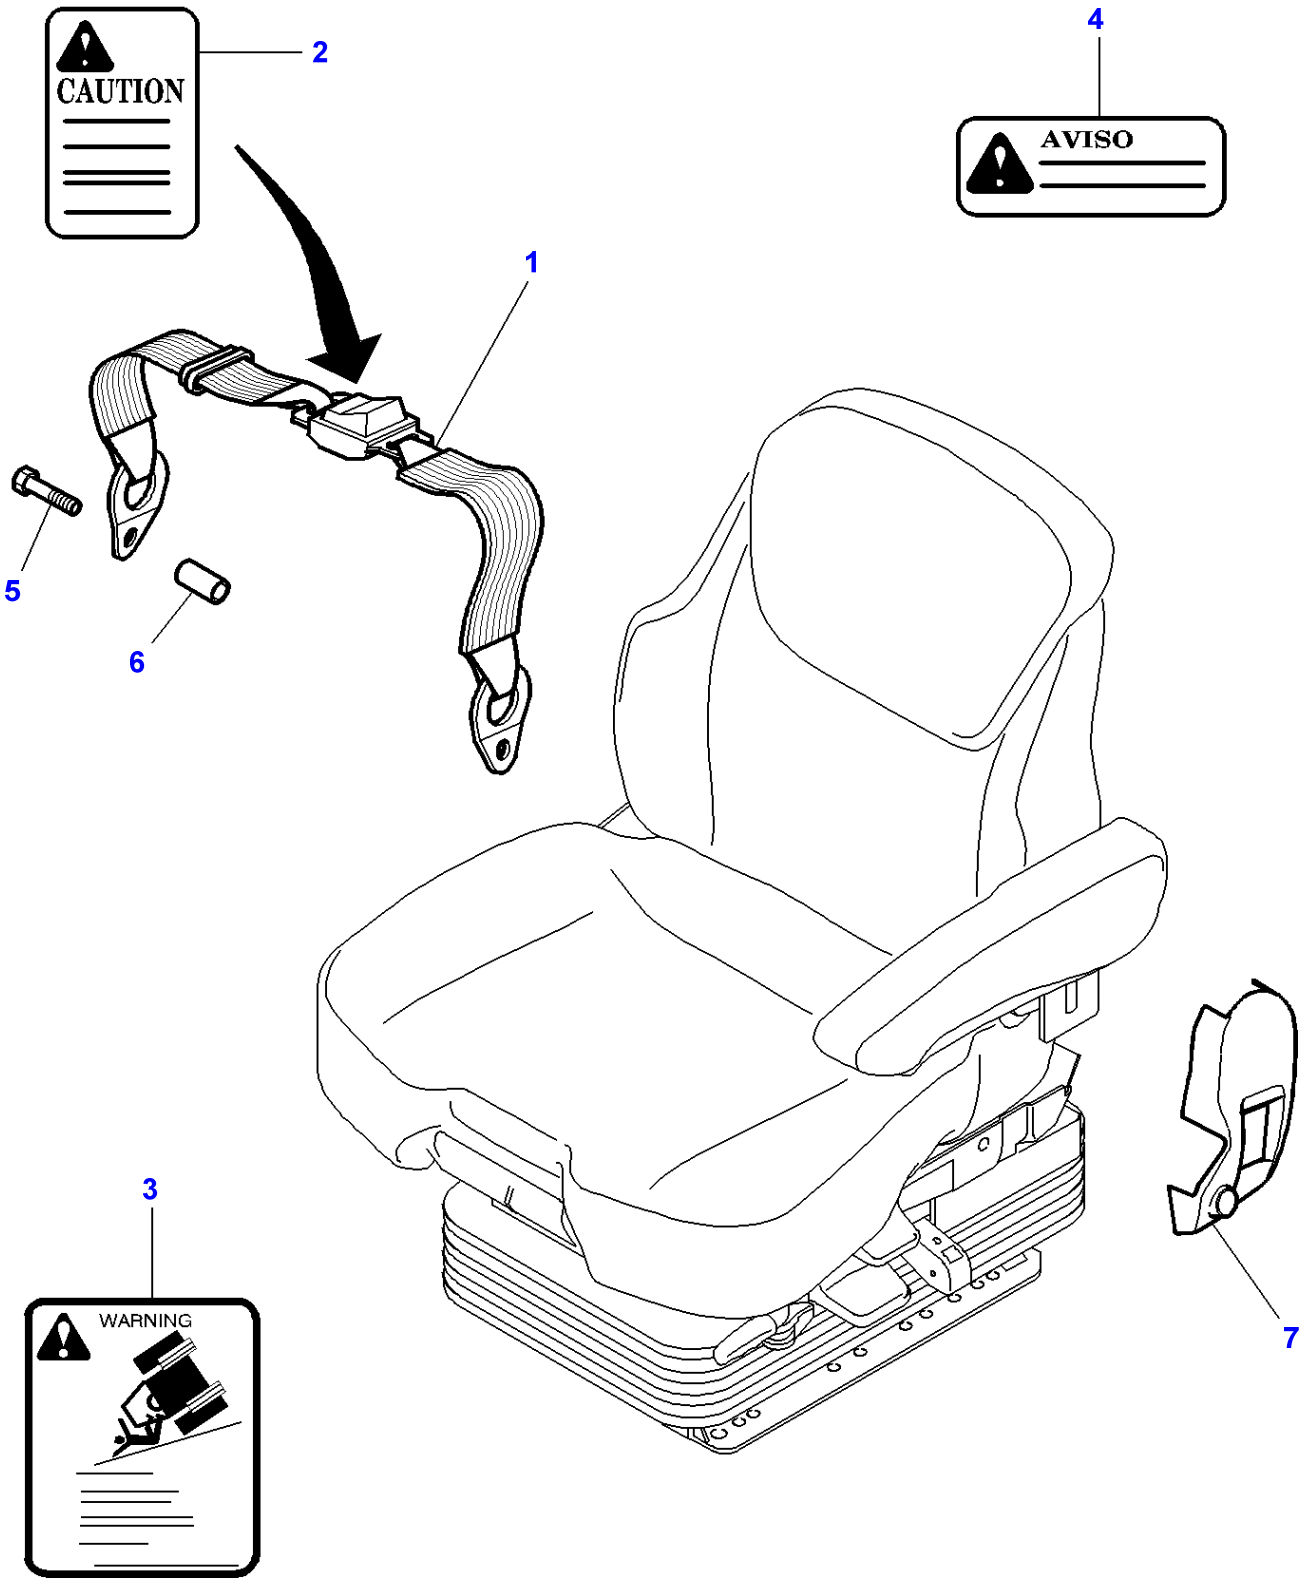


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3785693M91 | 1 | Safety Belt | |
| 2 | 523784M3 | 1 | Decal | For UK only or any text in English only |
| | 3597445M1 | 1 | Decal | [A] |
| 3 | 3760678M1 | 1 | Decal | For UK only or any text in English only |
| | 3760733M1 | 1 | Decal | For France only or any text in French only |
| 4 | 3597454M1 | 1 | Decal | [A] |
| 5 | 361530X1 | 2 | Bolt Unf | |
| 6 | 3011445X1 | 2 | Spacer | |
| 7 | 4272529M1 | 1 | Cover | |
| | 4272528M1 | 1 | Cover | [B] |

**FOOTNOTE [A]** SPANISH
**FOOTNOTE [B]** WITHOUT SEAT BELT

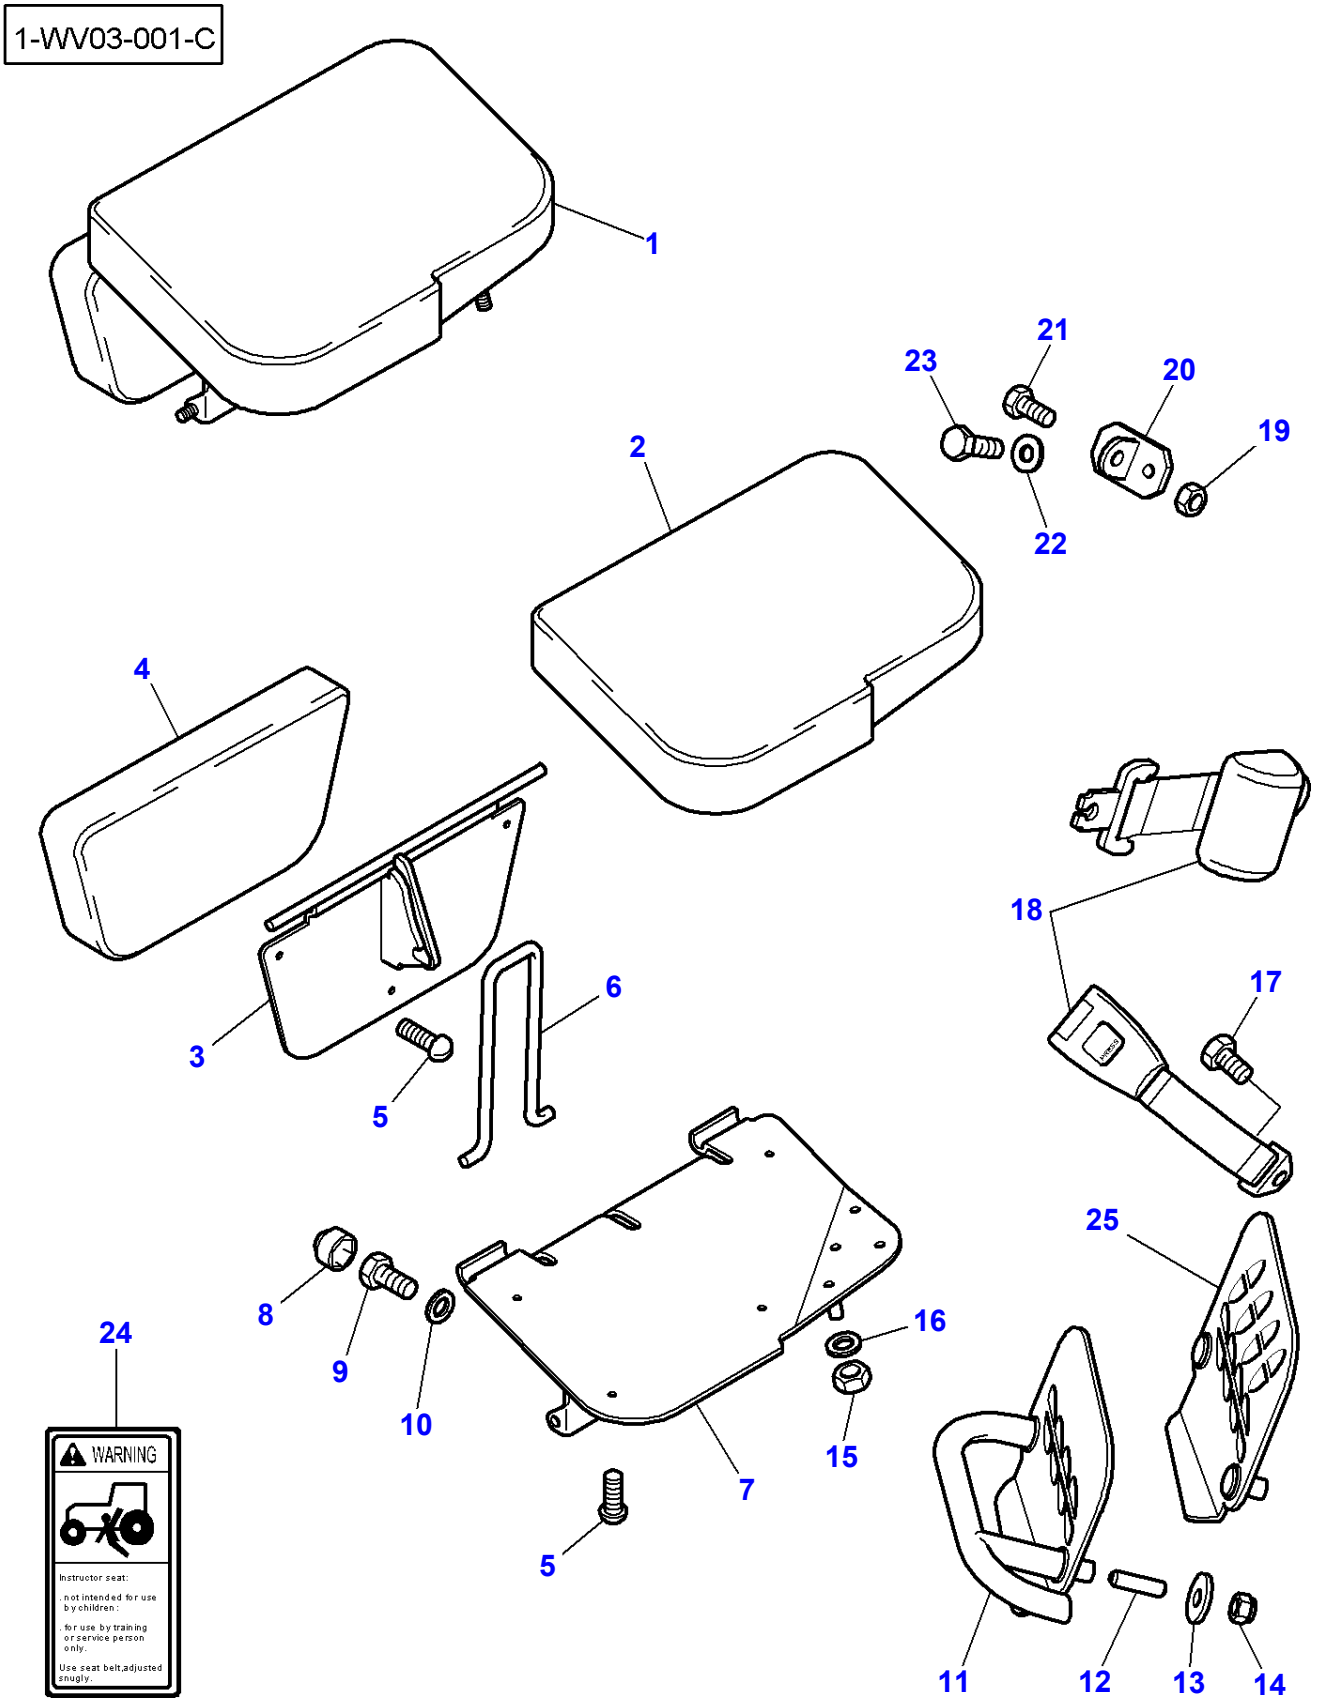
1-WV03-001-C
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
WARNING
Instructor seat:
. not intended for use by children :
. for use by training or service person only.
Use seat belt,adjusted snugly.


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4270578M91 | 1 | Seat | |
| 2 | 4271009M91 | 1 | Cushion | (1) |
| 3 | 4270581M1 | 1 | Support | (1) |
| 4 | 4271012M91 | 1 | Cushion | (1) |
| 5 | 3713140M1 | 9 | Screw | (1) |
| 6 | 4270583M1 | 1 | Stand | (1) |
| 7 | 4270579M1 | 1 | Support | (1) |
| 8 | 3616277M1 | 1 | Helmet | |
| 9 | 339123X1 | 1 | Hex. Sock. Screw | M8 X 20 |
| 10 | 390972X1 | 1 | Washer | Diameter 8-17 X 1,7 MM |
| 11 | 4271528M1 | 1 | Foot Rest | |
| 12 | 1440022X1 | 2 | Stud | M8 X 20 |
| 13 | 3010467X1 | 2 | Washer | Diameter 8-30 X 2 MM |
| 14 | 394367X1 | 2 | Locknut | M8 |
| 15 | 394367X1 | 2 | Locknut | M8 |
| 16 | 390972X1 | 2 | Washer | Diameter 8-17 X 1,7 MM |
| 17 | 353558X1 | 2 | Bolt Unf | 7/16-20 X 16 |
| 18 | 3789236M1 | 1 | Safety Belt | |
| 19 | 338600X1 | 1 | Nut Unf | 7/16-20 |
| 20 | 3715118M1 | 1 | Support | |
| 21 | 353558X1 | 1 | Bolt Unf | 7/16-20 X 16 |
| 22 | 390972X1 | 2 | Washer | Diameter 8-17 X 1,7 MM |
| 23 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| | 339124X1 | 2 | Hex. Sock. Screw | [A]<br>M8 X 16 |
| 24 | 3787683M1 | 1 | Decal | For United States of America |
| 25 | 4276204M1 | 1 | Plate | |

**FOOTNOTE [A]** WITHOUT SEAT BELT

1-WW02-016-A

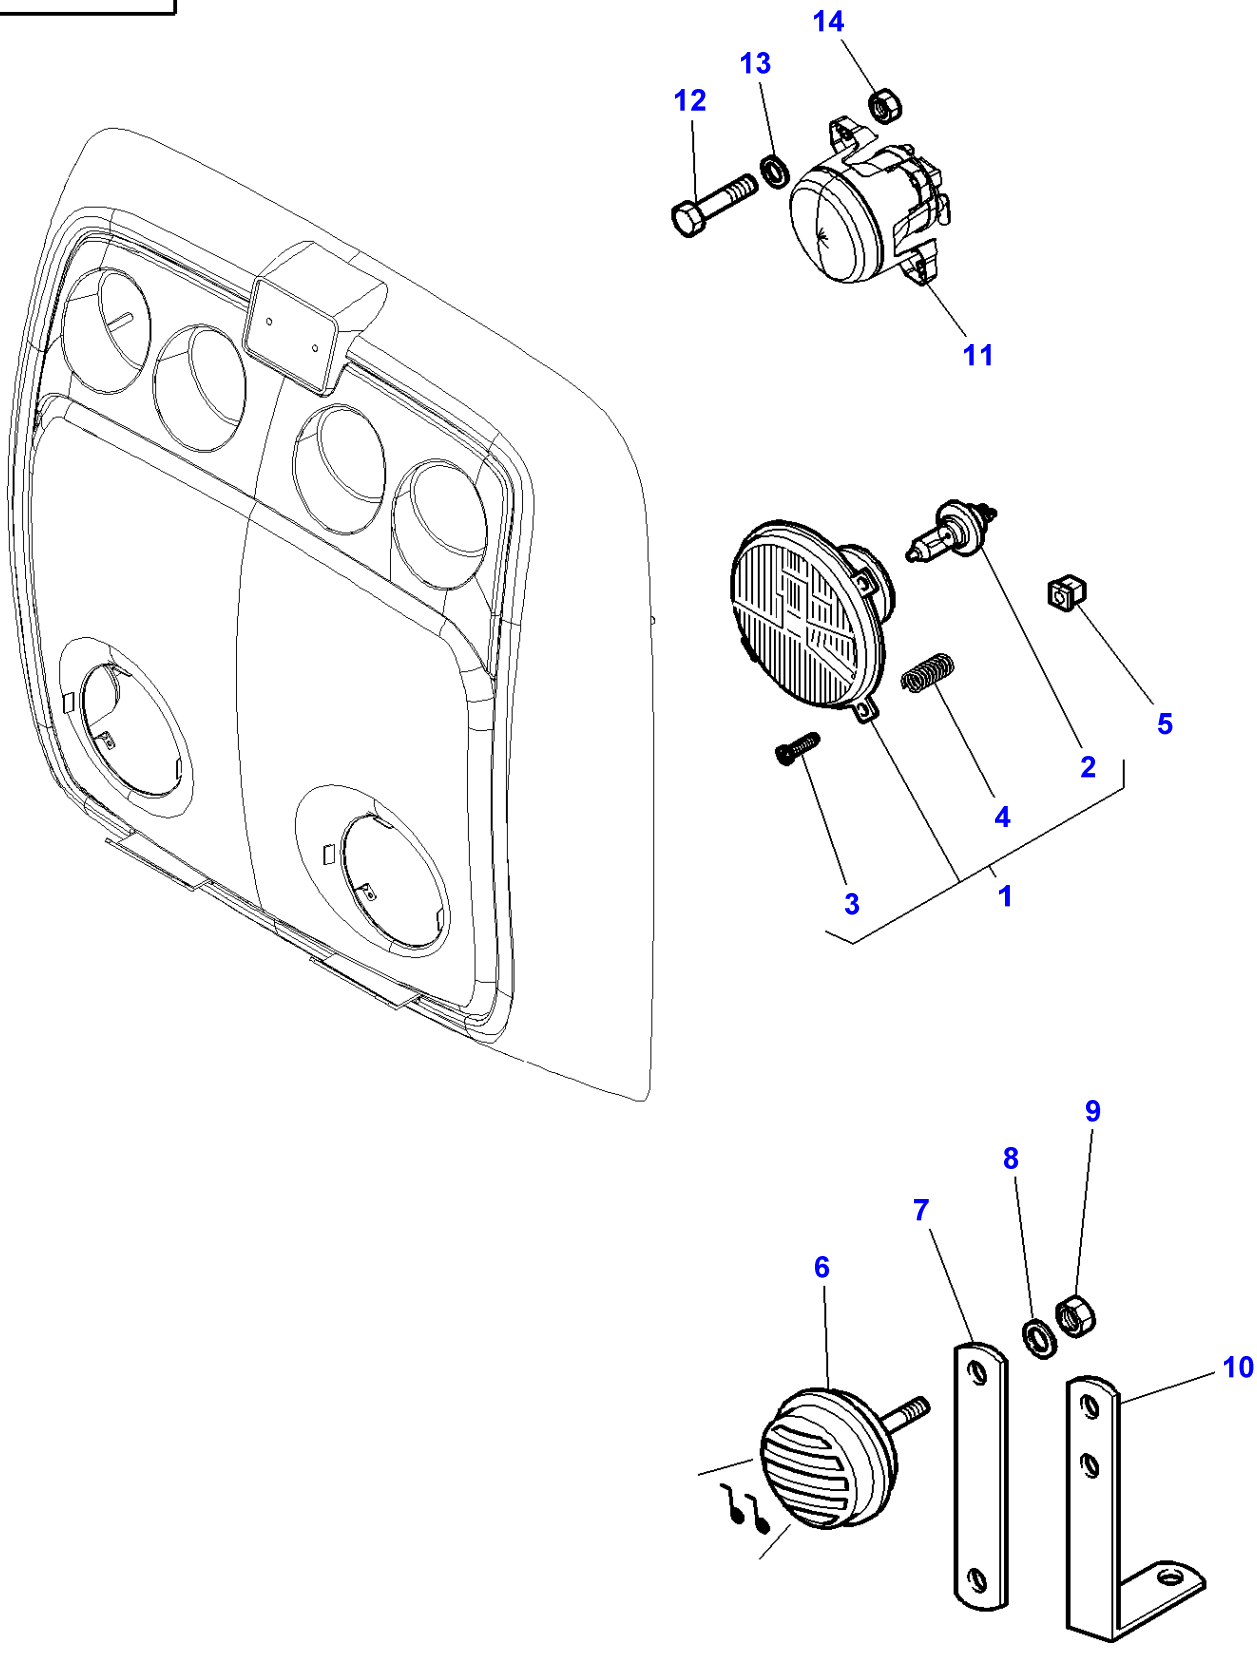

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Lighting Equipment - Front Page 120-0005

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3788220M91 | 2 | Lamp | [B]<br>Up to Serial or Engine Number N271034 |
| | 3788221M91 | 2 | Lamp | [A]<br>Up to Serial or Engine Number N287071 |
| | 4278938M91 | 2 | Lamp | [B]<br>From Serial or Engine Number N271035 |
| | 4278939M91 | 2 | Lamp | [A]<br>From Serial or Engine Number N287072 |
| 2 | **3713341M1** | 1 | Bulb 12v 60/55w | (1) |
| 3 | 3907011M1 | 6 | Screw | (1) |
| 4 | 3907012M1 | 6 | Spring | (1)<br>Up to Serial or Engine Number |
| | 3907476M1 | 6 | Spring | (1)<br>From Serial or Engine Number |
| 5 | 3809347M1 | 6 | Nut | |
| 6 | 1678404M1 | 1 | Horn | |
| 7 | 3778841M2 | 1 | Strap | |
| 8 | 339374X1 | 1 | Lock Washer | |
| 9 | 339169X1 | 1 | Nut | M8 |
| 10 | 656632M4 | 1 | Bracket | |
| 11 | 4271840M92 | 4 | Lamp | |
| 12 | 3008862X1 | 16 | Hex. Sock. Screw | M4 X 20 |
| 13 | 3001856X1 | 16 | Washer | Diameter 4-12 X 1,1 |
| 14 | 1443615X1 | 16 | Nut Metric | M4 |

**FOOTNOTE [A]** LEFT HAND DIP LIGHTS
**FOOTNOTE [B]** RIGHT HAND DIP LIGHTS

1-WW02-009-A

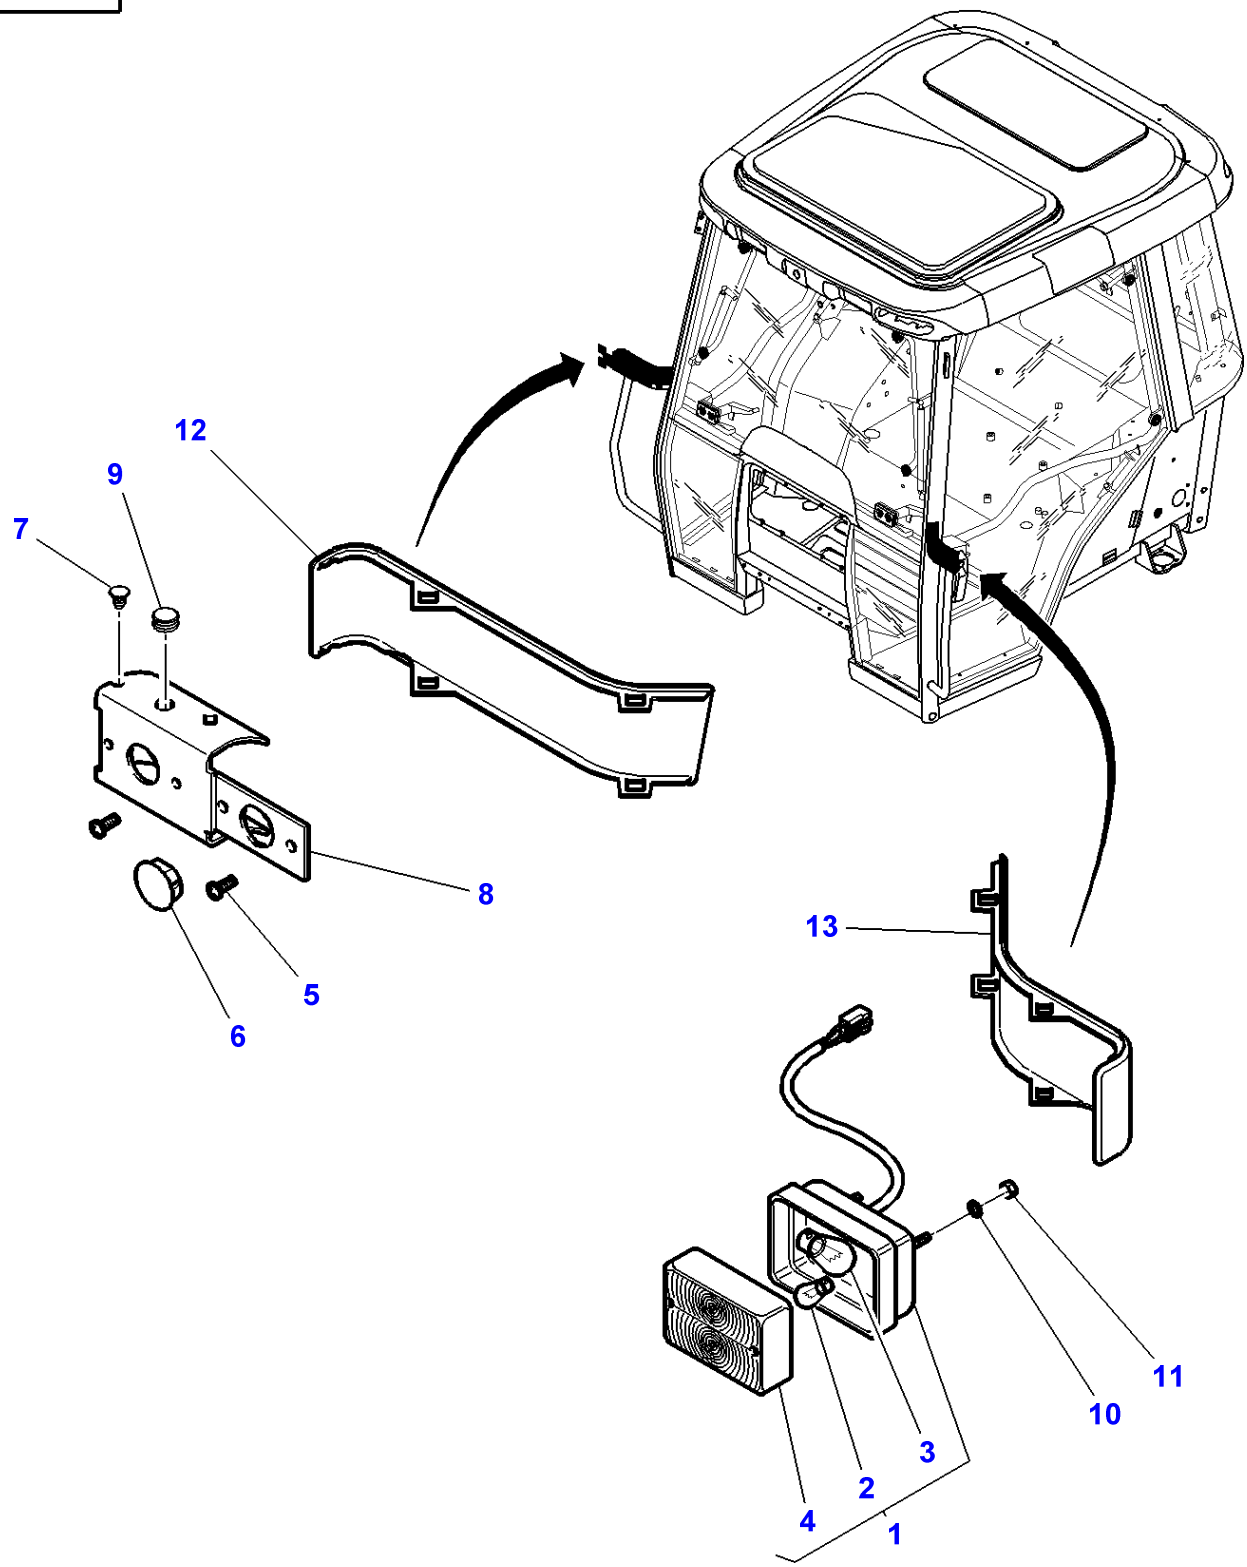


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786791M92 | 2 | Contour Light | Not for USA |
| 2 | **1420037M1** | 1 | Bulb 12v 5w | (1) |
| 3 | **621235M1** | 1 | Bulb 12v 21w Sbc | (1) |
| 4 | 3105505M1 | 1 | Lens | (1) |
| 5 | 3010578X1 | 8 | Screw | M5 X 10 |
| 6 | 3596314M1 | 3 | Plug | Diameter 25,5 |
| 7 | 4275043M1 | 6 | Plug | Diameter 6 |
| 8 | 4273311M1 | 1 | Support | Right Hand |
| 9 | 3042523M1 | 1 | Plug | Diameter 10 |
| 10 | 390469X1 | 4 | Washer | |
| 11 | 3010477X1 | 4 | Nut Metric | M5 |
| 12 | 4273312M1 | 1 | Muff | Right Hand |
| 13 | 4272746M1 | 1 | Muff | Left Hand |

**FOOTNOTE [A]** WITH HIGH VISIBILITY ROOF
**FOOTNOTE [B]** DETAILS TO BE ADVISED
**FOOTNOTE [C]** USED WITHOUT OPTIONAL FRONT WORKLAMPS


1-WW02-006-A

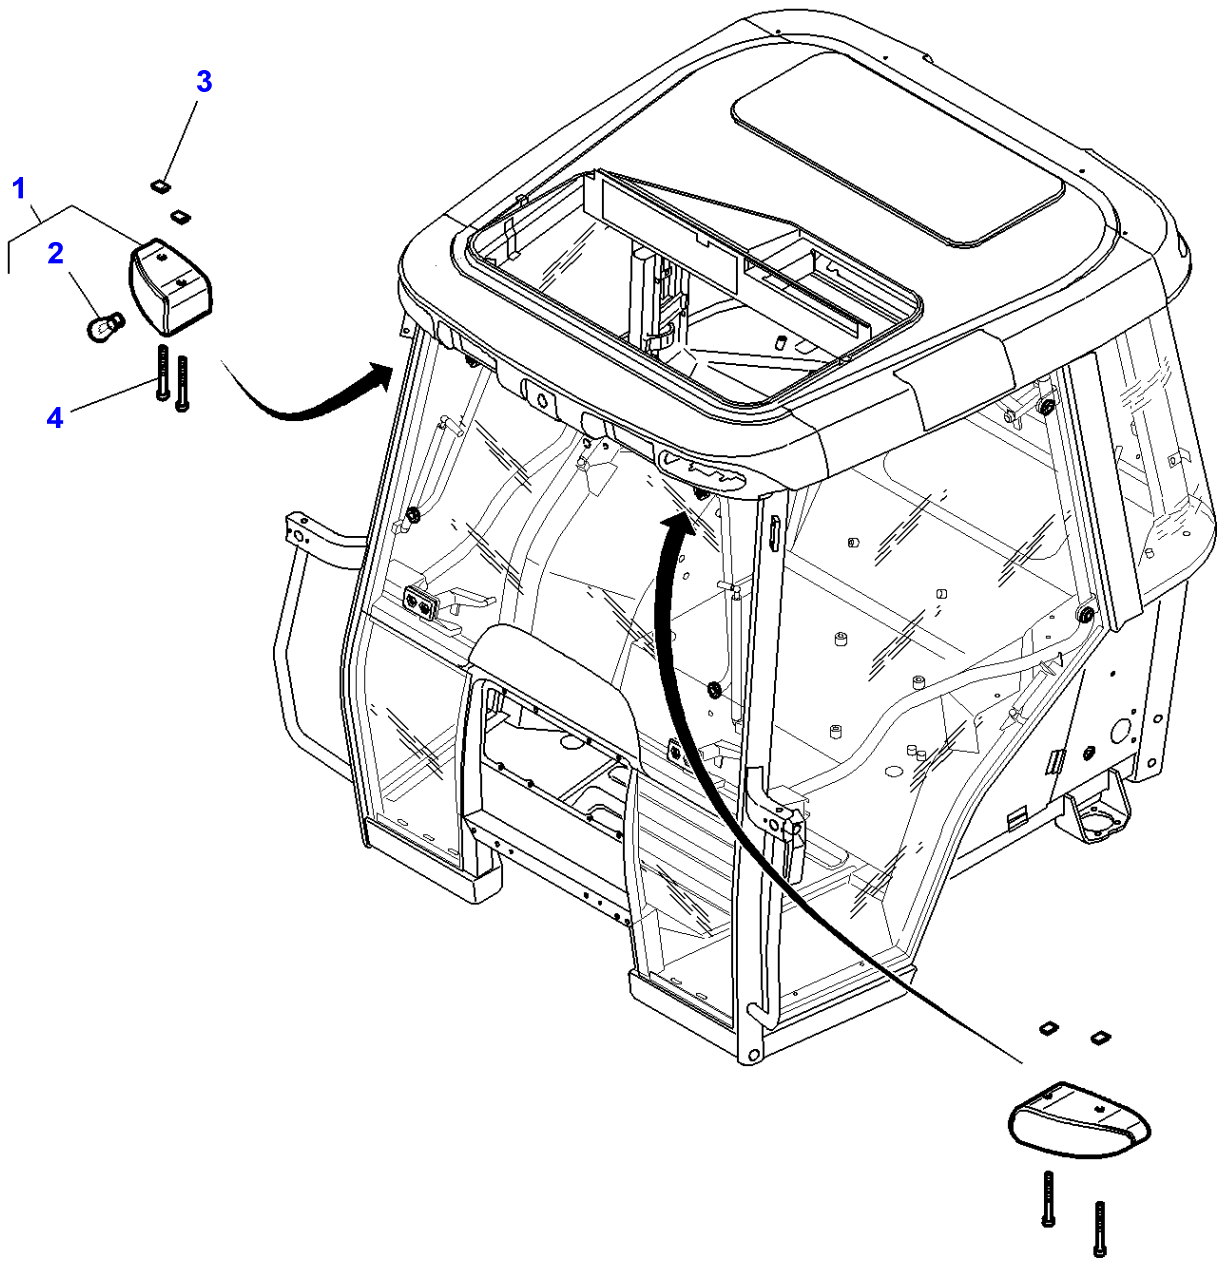

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787345M1 | 2 | Flasher | |
| 2 | **621235M1** | 1 | Bulb 12v 21w Sbc | (2) |
| 3 | 3010070X1 | 4 | Nut | M6 |
| 4 | 3011362X1 | 4 | Screw | M6 X 90 |

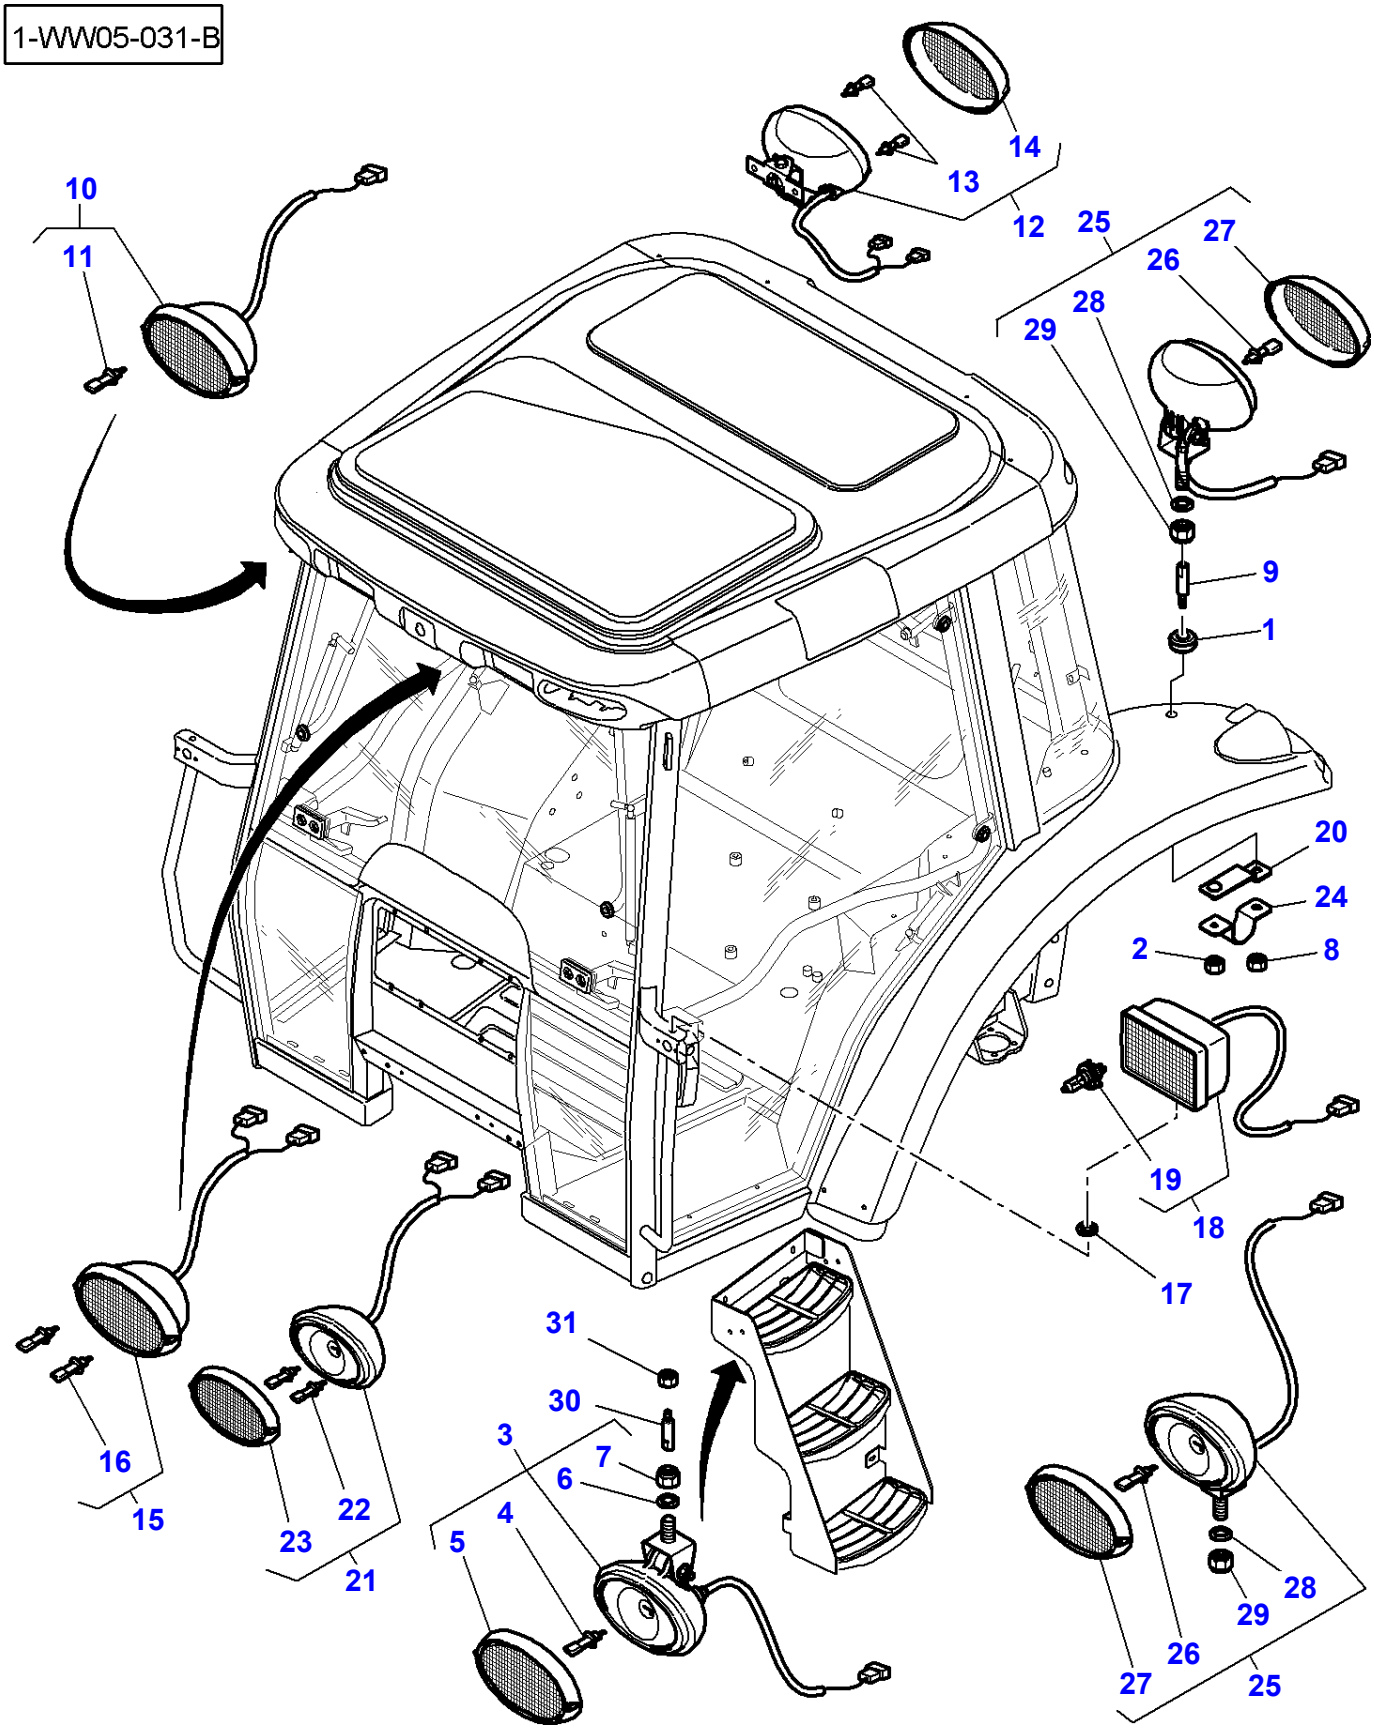
1-WW05-031-B
10
11
14
13
12
25
27
26
28
29
9
1
20
24
2
8
19
18
17
31
30
3
7
6
4
5
16
15
22
23
21
28
29
26
27
25


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Field Lights Page 120-0020

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 70921230 | 4 | Grommet | Diameter 27-35 |
| 2 | 1440329X1 | 4 | Locknut | M10 |
| 3 | 3788699M93 | 2 | Worklamp | |
| 4 | **1628494M1** | 1 | Bulb H3 | (3)<br>12V-55W |
| 5 | 3907280M91 | 1 | Lens | (3) |
| 6 | 1441075X1 | 1 | Cup Spring | (3) |
| 7 | 1440329X1 | 1 | Locknut | (3)<br>M10 |
| 8 | 339169X1 | 2 | Nut | M8 |
| 9 | 5016887M2 | 2 | Spacer | |
| 10 | 3786664M91 | X | Worklamp | [A] |
| 11 | **1628494M1** | 1 | Bulb H3 | (10)<br>12V-55W |
| 12 | 3786666M91 | 2 | Worklamp | |
| 13 | **1628494M1** | 2 | Bulb H3 | (12)<br>12V-55W |
| 14 | 3907064M1 | 1 | Lens | (12) |
| 15 | 3786665M91 | 2 | Worklamp | [B] |
| 16 | **1628494M1** | 2 | Bulb H3 | (15)<br>12V-55W |
| 17 | 385362X1 | 2 | Washer | Diameter 10-20 X 3 |
| 18 | 3786693M91 | 2 | Lamp | [C] |
| 19 | **3713341M1** | 1 | Bulb 12v 60/55w | (18)<br>H4 |
| 20 | 4273760M1 | 2 | Bridle | |
| 21 | 4276983M91 | 2 | Worklamp | [B]<br>For United States of America |
| 22 | **1628494M1** | 2 | Bulb H3 | (25)<br>12V-55W |
| 23 | 3907064M1 | 2 | Lens | (25) |
| 24 | 4273761M2 | 2 | Bridle | |
| 25 | 3786668M93 | X | Worklamp | [A] |
| 26 | **1628494M1** | 1 | Bulb H3 | (25)<br>12V-55W |
| 27 | 3907280M91 | 1 | Lens | (25) |
| 28 | 1441075X1 | 1 | Cup Spring | (25) |
| 29 | 1440329X1 | 1 | Locknut | (25)<br>M10 |
| 30 | 5016887M2 | 1 | Spacer | |
| 31 | 339402X1 | 1 | Nut | M10 |

**FOOTNOTE [A]** WITH 1 BULB WORKLIGHT
**FOOTNOTE [B]** WITH 2 BULB WORKLIGHT
**FOOTNOTE [C]** WAY LIGHTS

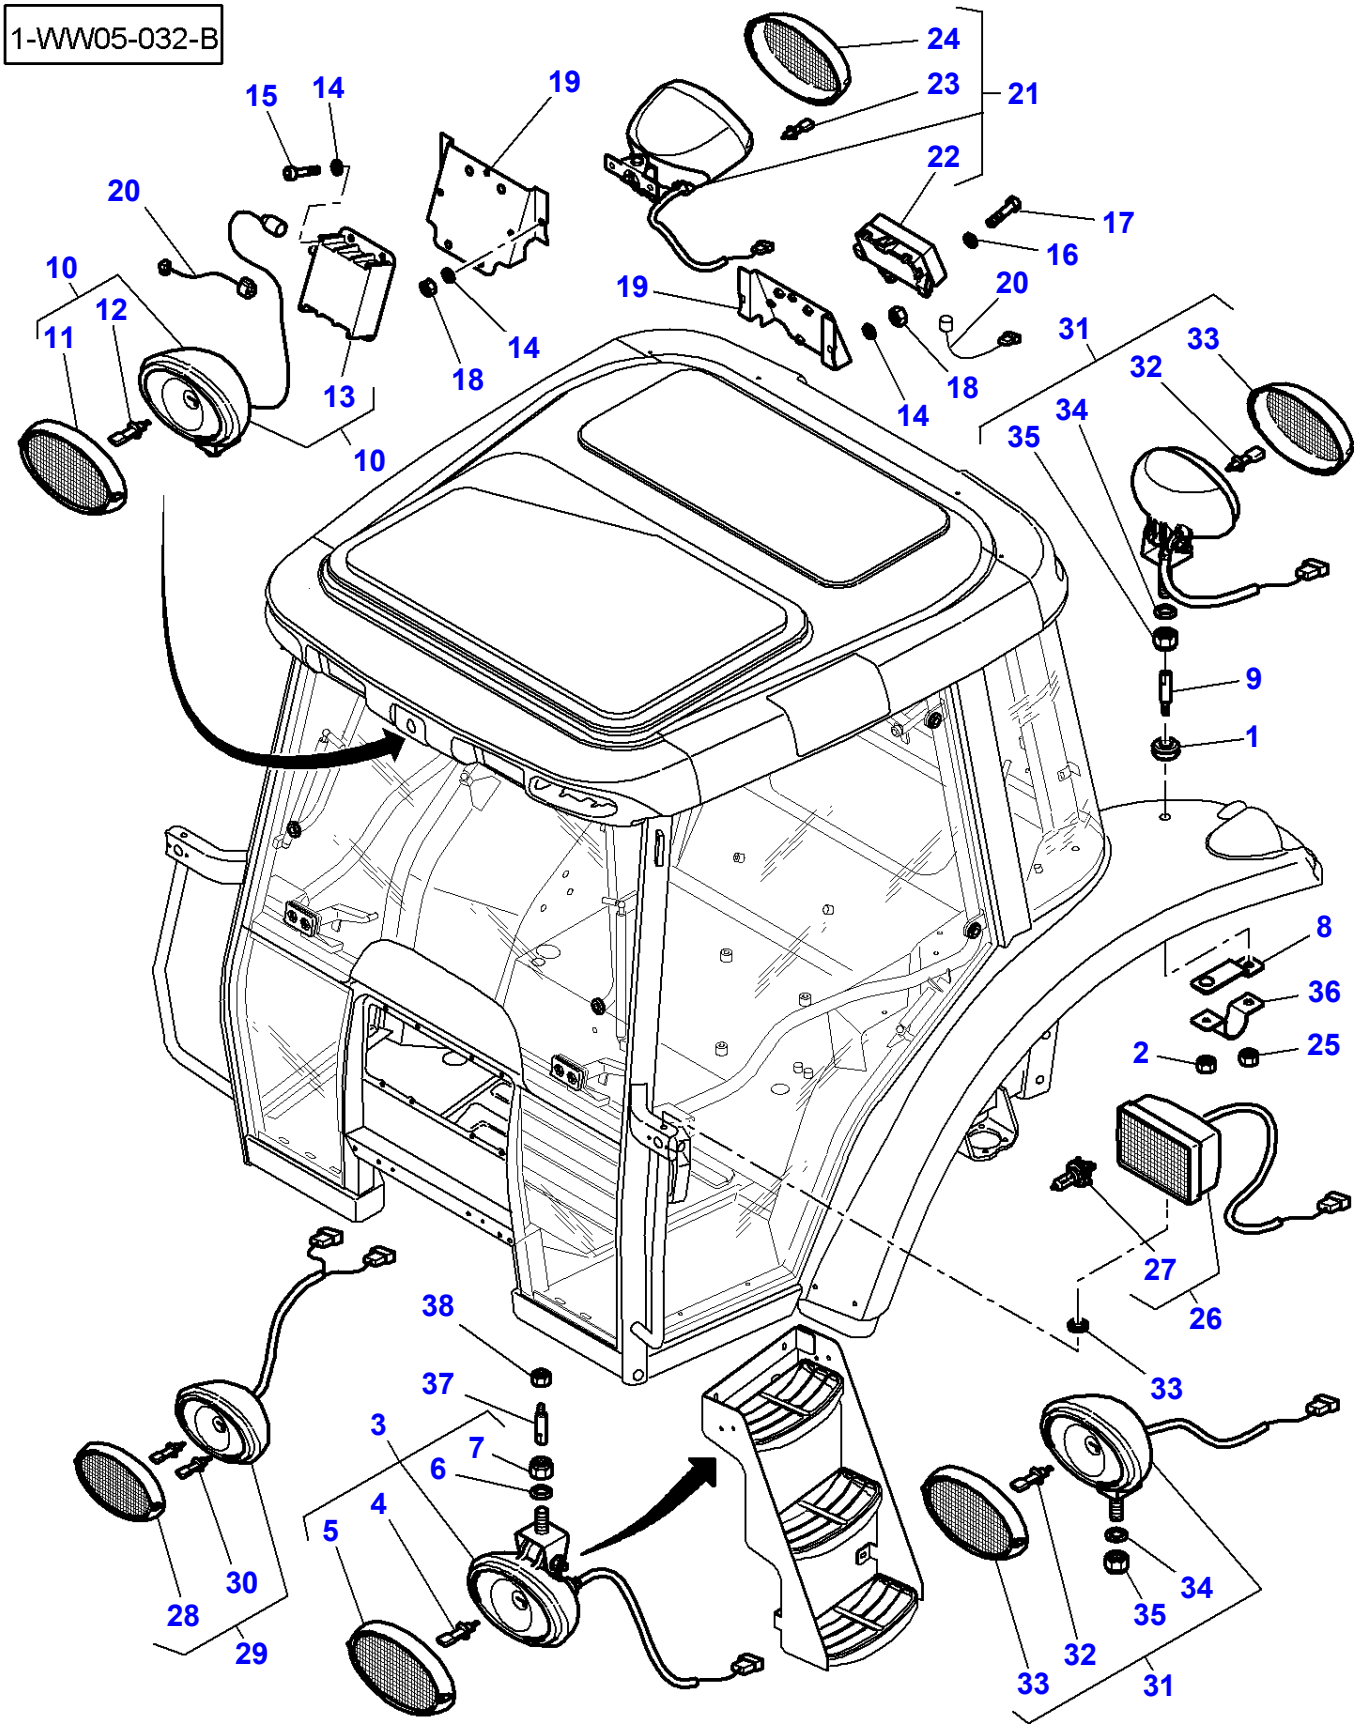
1-WW05-032-B
24
23
21
22
17
16
19
20
18
14
15
14
19
20
10
12
11
13
10
18
14
31
33
32
34
35
9
1
8
36
2
25
27
26
33
38
37
3
7
6
4
5
30
28
29
34
35
32
33
31


Massey Ferguson

MF 8470/8480 TRACTOR - 1637446 1637446

Field Lights - XENON / PIVOTING Page 120-0025

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 70921230 | 4 | Grommet | Diameter 27-35 |
| 2 | 1440329X1 | 4 | Locknut | M10 |
| 3 | 3788699M93 | 2 | Worklamp | |
| 4 | **1628494M1** | 1 | Bulb H3 | (3)<br>12V-55W |
| 5 | 3907280M91 | 1 | Lens | (3) |
| 6 | 1441075X1 | 1 | Cup Spring | (3) |
| 7 | 1440329X1 | 1 | Locknut | (3)<br>M10 |
| 8 | 4273760M1 | 2 | Bridle | |
| 9 | 5016887M2 | 2 | Spacer | |
| 10 | 3788231M91 | 2 | Lamp | |
| 11 | 3907078M1 | 1 | Lens | (10) |
| 12 | **3907077M1** | 1 | Bulb | (10) |
| 13 | 3907075M1 | 1 | Transformer | (10) |
| 14 | 390971X1 | 16 | Washer | Diameter 6-12 X 1,5 |
| 15 | 3009281X1 | 8 | Screw | M6 X 16 |
| 16 | 390469X1 | 6 | Washer | |
| 17 | 339387X1 | 6 | Screw Metric | |
| 18 | 339030X1 | 8 | Nut Metric | M6 |
| 19 | 3787136M1 | 4 | Support | |
| 20 | 4272566M1 | 4 | Harness | Length 400 MM |
| 21 | 3788232M91 | 2 | Lamp | |
| 22 | 3907383M1 | 1 | Transformer | (21) |
| 23 | **3907384M1** | 1 | Bulb | (21) |
| 24 | 3907385M1 | 1 | Lens | (21) |
| 25 | 339169X1 | 2 | Nut | M8 |
| 26 | 3786693M91 | 2 | Lamp | Not for USA |
| 27 | **3713341M1** | 1 | Bulb 12v 60/55w | (26)<br>H4 |
| 28 | 3907064M1 | 1 | Lens | (29) |
| 29 | 4276983M91 | 2 | Worklamp | For United States of America |
| 30 | **1628494M1** | 2 | Bulb H3 | (29)<br>12V-55W |
| 31 | 3786668M93 | X | Worklamp | |
| 32 | **1628494M1** | 1 | Bulb H3 | (31)<br>12V-55W |
| 33 | 3907280M91 | 1 | Lens | (31) |
| 34 | 1441075X1 | 1 | Cup Spring | (31) |
| 35 | 1440329X1 | 1 | Locknut | (31)<br>M10 |
| 36 | 4273761M2 | 2 | Bridle | |
| 37 | 5016887M2 | 1 | Spacer | |
| 38 | 339402X1 | 1 | Nut | M10 |

1-WW27-001-A

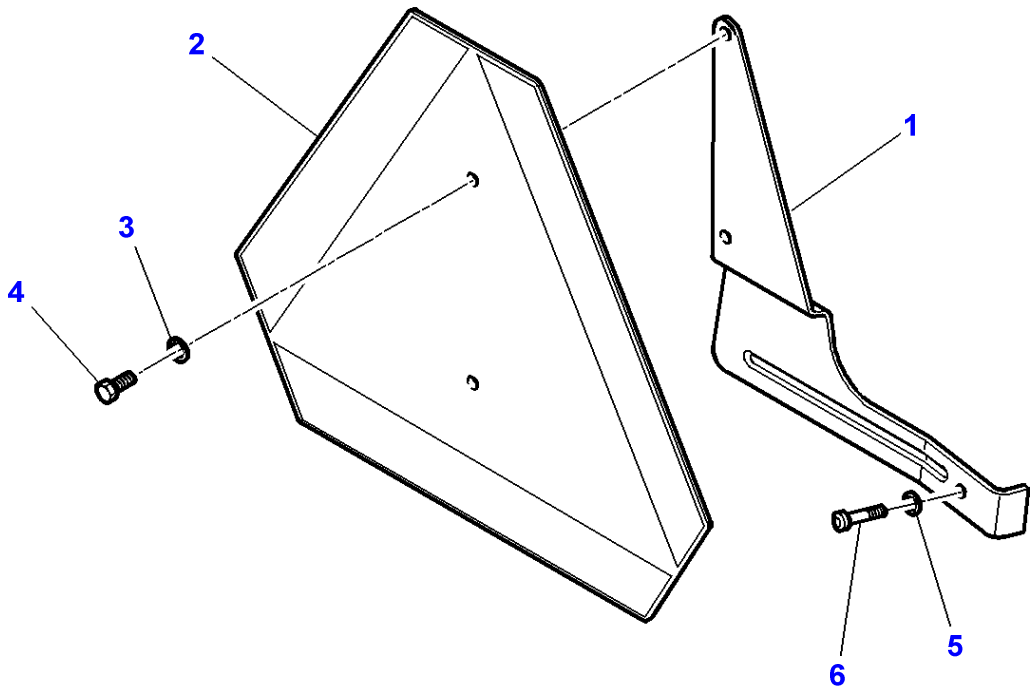


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271554M1 | 1 | Support | |
| 2 | 3712185M1 | 1 | Triangle | [A] |
| | 3789701M1 | 1 | Triangle | [B] |
| 3 | 339375X1 | 2 | Lock Washer | |
| 4 | 339560X1 | 2 | Hex. Sock. Screw | M6 X 16 |
| 5 | 4275846M1 | 1 | Washer | Diameter 6,7-12,2 X 3 |
| 6 | 4275839M1 | 1 | Screw | M6 X 35 |

**FOOTNOTE [A]** CEE STANDARD
**FOOTNOTE [B]** SAE STANDARD
**FOOTNOTE [C]** WIDE FENDER

1-WW03-018-A

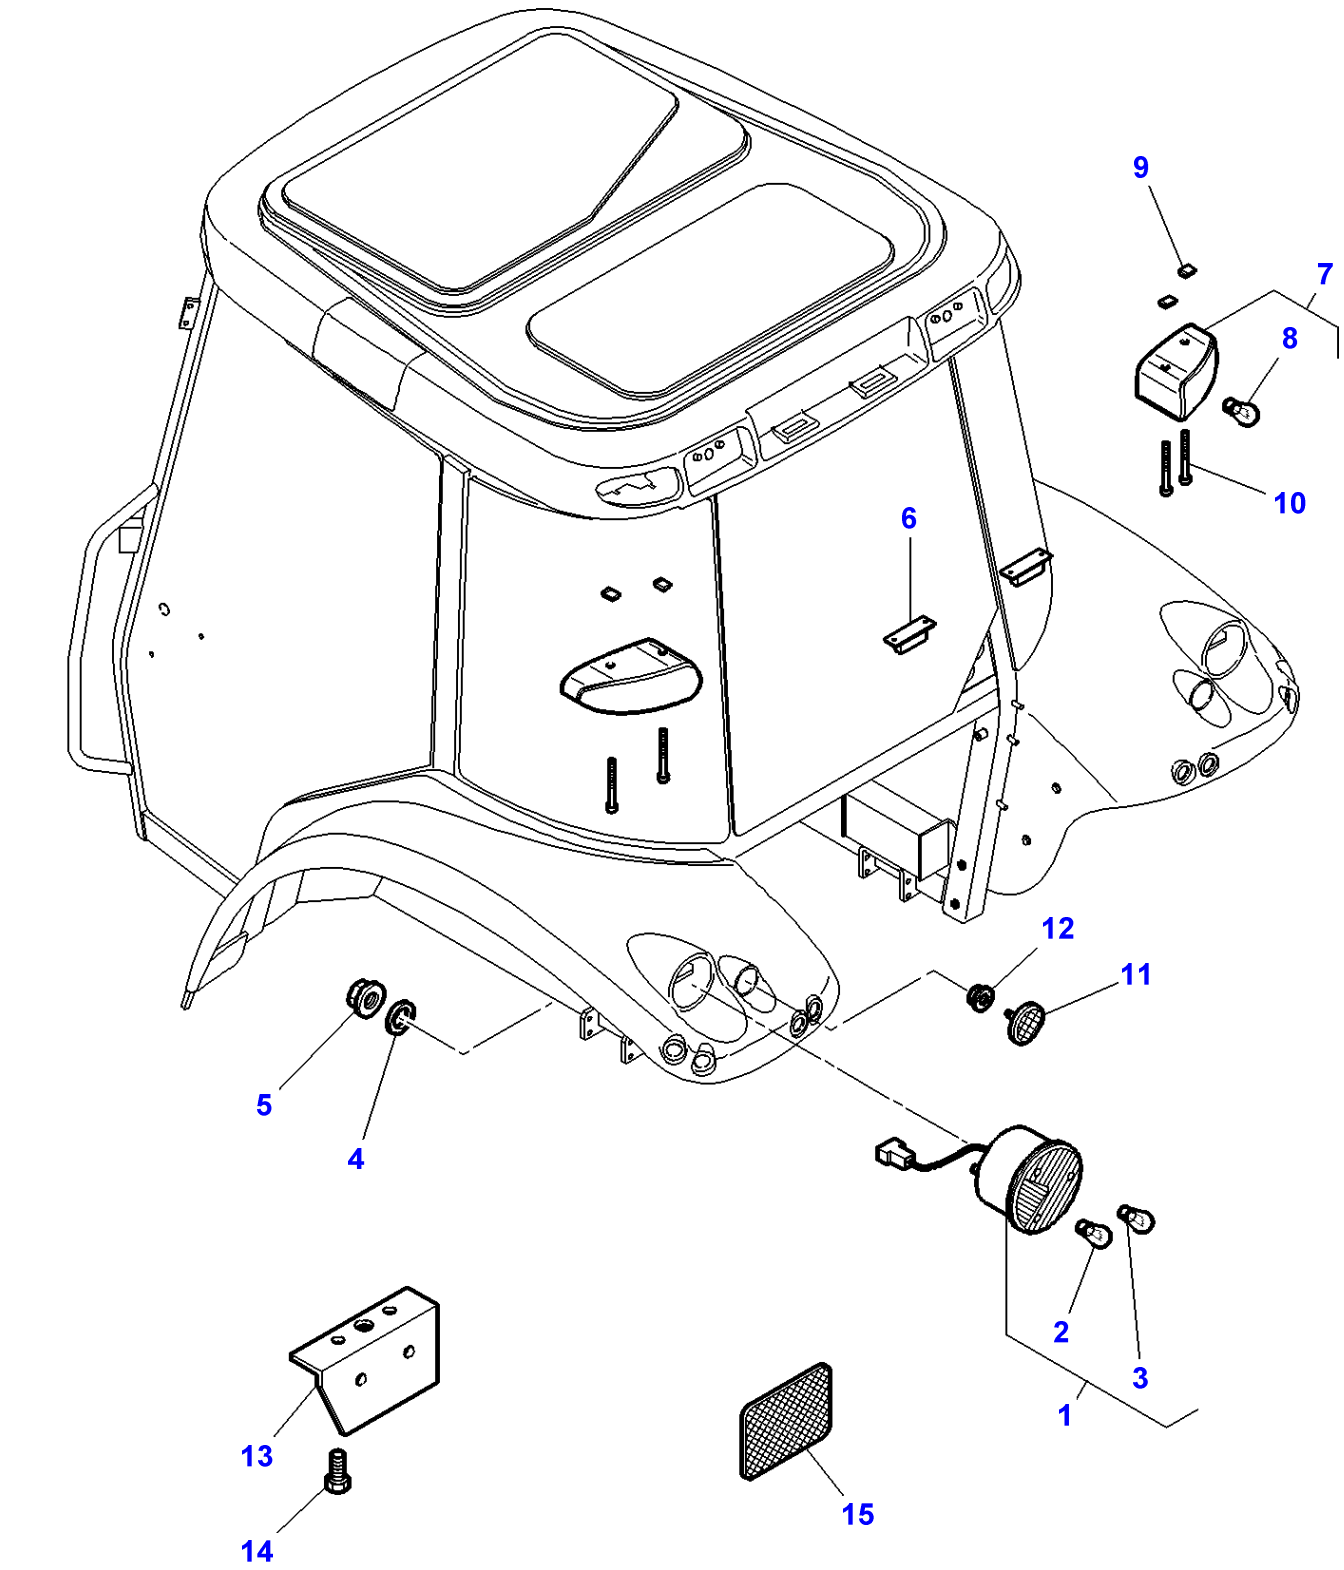


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786689M91 | 1 | Lh Rear Lamp | |
| | 3786690M91 | 1 | Rh Rear Lamp | |
| | 3786691M91 | 1 | Lh Rear Lamp | For United States of America |
| | 3786692M91 | 1 | Rh Rear Lamp | For United States of America |
| 2 | **621235M1** | 1 | Bulb 12v 21w Sbc | (1) |
| 3 | **908543M1** | 1 | Bulb S/L 21/5w | (1) |
| 4 | 390971X1 | 4 | Washer | Diameter 6-12 X 1,5 |
| 5 | 1441500X1 | 4 | Locknut | M6 |
| 6 | 3786670M1 | 2 | N/Plate Lamp | |
| 7 | 3787345M1 | 2 | Flasher | |
| 8 | **621235M1** | 1 | Bulb 12v 21w Sbc | (7) |
| 9 | 3010070X1 | 4 | Nut | |
| 10 | 3011362X1 | 4 | Screw | M6 X 90 |
| 11 | 4271028M1 | 2 | Reflector | |
| 12 | 3010477X1 | 2 | Nut Metric | M5 |
| 13 | 3052943M2 | 1 | Bearer | Right Hand |
| | 3052944M2 | 1 | Bearer | Left Hand |
| 14 | 339124X1 | 4 | Hex. Sock. Screw | M8 X 16 |
| 15 | 3618951M1 | 2 | Reflector | |

1-WW03-001-B

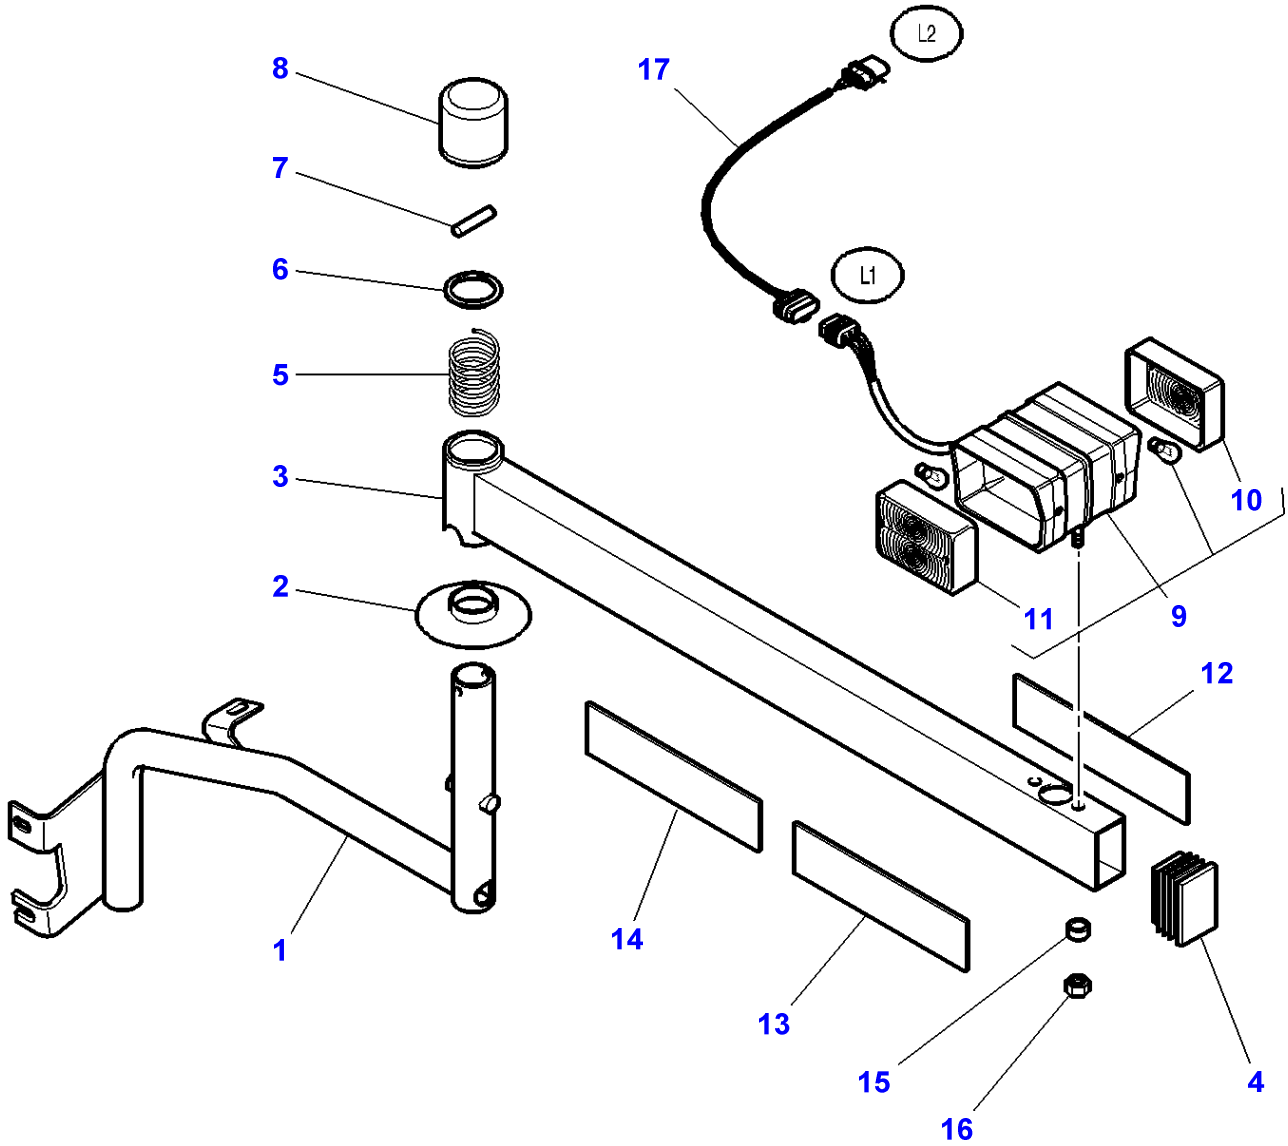


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4273244M91 | 1 | Support | Left Hand |
| | 4273245M91 | 1 | Support | Right Hand |
| 2 | 3788367M2 | 1 | Gasket | |
| 3 | 3788385M93 | 1 | Support | Left Hand |
| | 3788386M93 | 1 | Support | Right Hand |
| 4 | 3788368M1 | 1 | Tap | |
| 5 | 3788364M2 | 1 | Spring | |
| 6 | 3788365M2 | 1 | Washer | |
| 7 | 3019546X1 | 1 | Pin | 8 X 45 |
| 8 | 3788369M1 | 1 | Plug | |
| 9 | 3788465M2 | 1 | Light | |
| 10 | 3907168M91 | 1 | Lens | (9) |
| 11 | 3310902M91 | 1 | Lens | (9) |
| 12 | 3788462M1 | 1 | Reflectingmirror | [A] |
| 13 | 3788461M1 | 1 | Reflectingmirror | [B] |
| 14 | 3788460M1 | 1 | Reflectingmirror | [C] |
| 15 | 3580848M1 | 2 | Spacer | Diameter 11-20 X 14,5 MM |
| 16 | 339169X1 | 2 | Nut | M8 |
| 17 | 4274333M1 | 2 | Harness | |

**FOOTNOTE [A]** YELLOW
**FOOTNOTE [B]** RED
**FOOTNOTE [C]** ORANGE

1-WW03-020-A

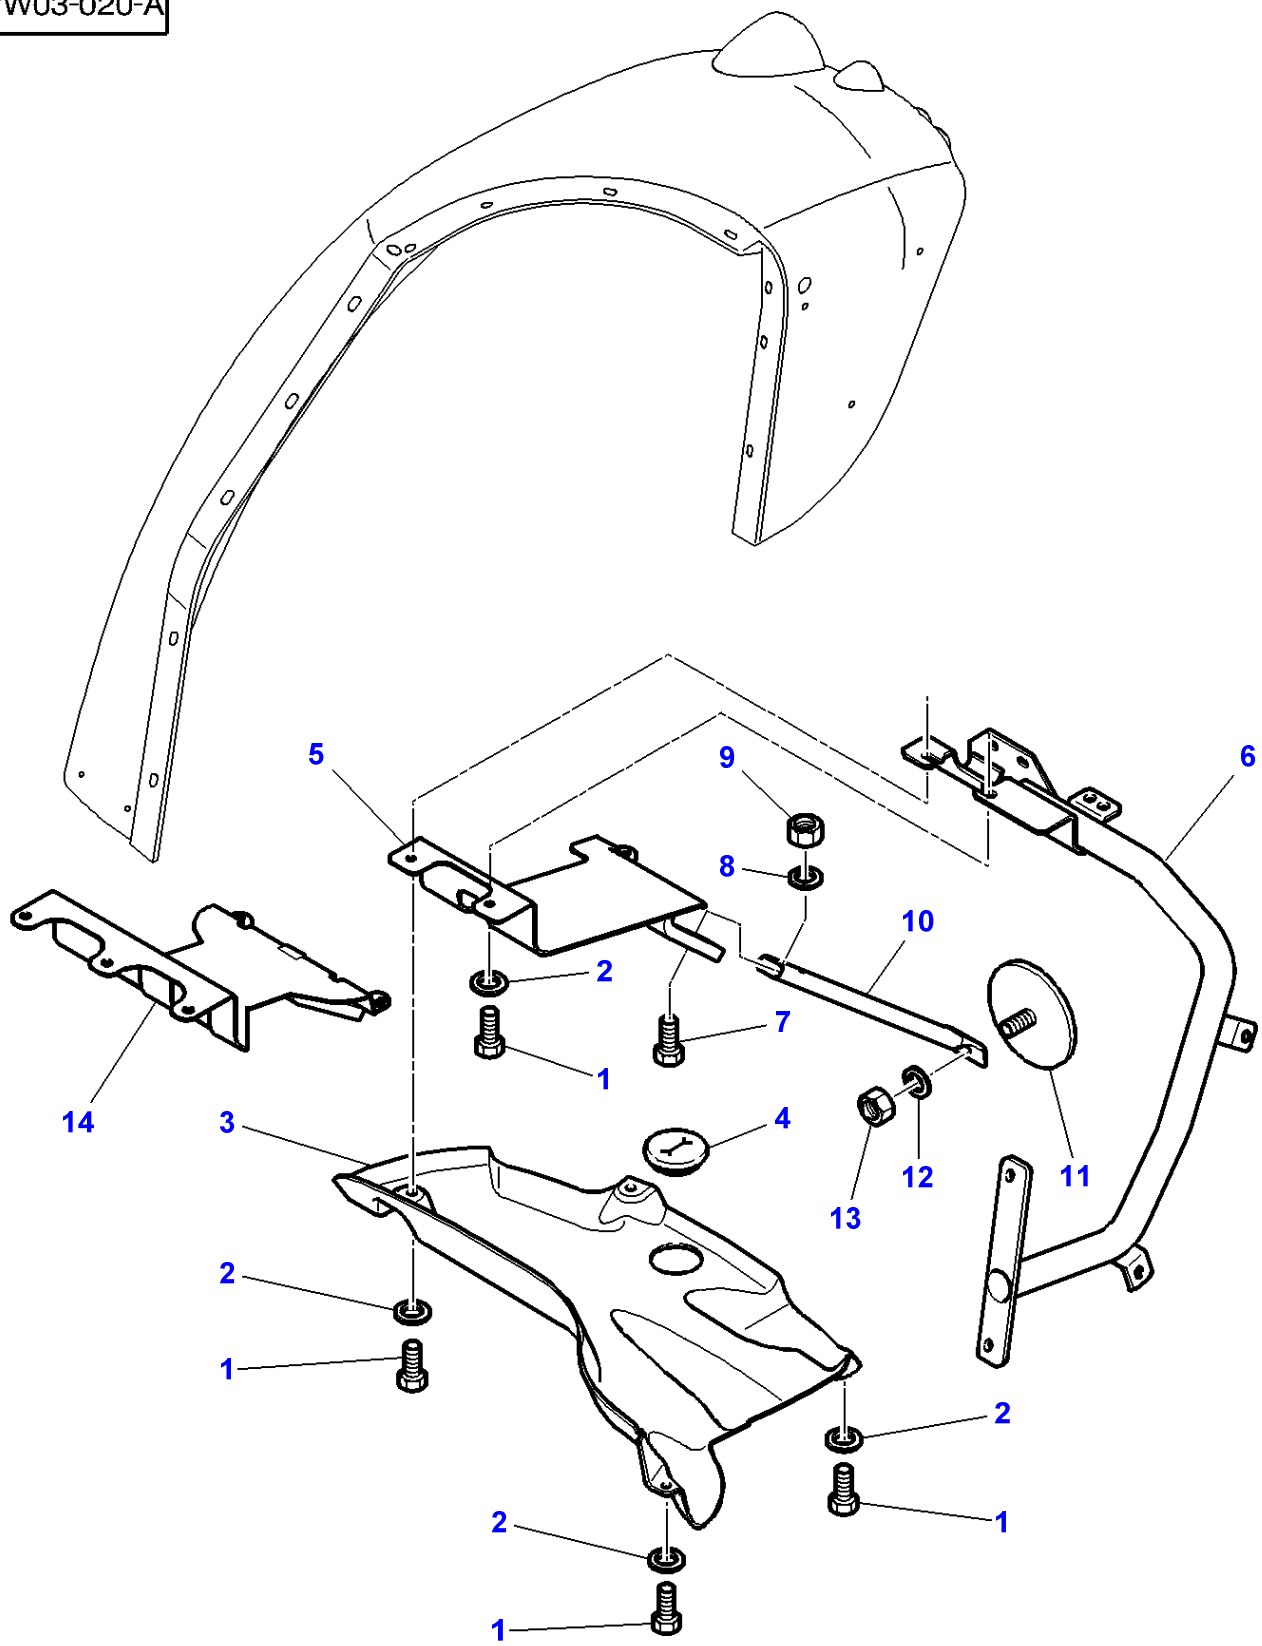


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 1440350X1 | X | Screw Metric | M6 X 20 |
| | 3009281X1 | X | Screw | M6 X 16 |
| | 3009280X1 | X | Screw | M6 X 12 |
| 2 | 390971X1 | X | Washer | |
| 3 | | 1 | Protector | See Page - Reference Number 110-0110/4<br>See Page - Reference Number 110-0110/16 |
| 4 | 4278067M1 | 1 | Tap | |
| 5 | 4278059M1 | 1 | Support | [B]<br>Left Hand |
| | 4278058M1 | 1 | Support | [B]<br>Right Hand |
| | 4278061M1 | 1 | Support | [C]<br>Left Hand |
| | 4278060M1 | 1 | Support | [C]<br>Right Hand |
| 6 | | 1 | Support | See Page - Reference Number 110-0110/2 |
| 7 | 339804X1 | 4 | Hex. Sock. Screw | M6 X 25 |
| 8 | 3011035X1 | 4 | Washer | |
| 9 | 1441500X1 | 4 | Locknut | M6 |
| 10 | 4277284M1 | 2 | Support | |
| 11 | 4271028M1 | 2 | Reflector | |
| 12 | 3019560X1 | 2 | Washer | |
| 13 | 1441917X1 | 2 | Locknut | M5 |
| 14 | 4276791M1 | 2 | Support | [A] |

**FOOTNOTE [A]** FOR WHEELBASE 2,00 M
**FOOTNOTE [B]** FOR WHEELBASE 2,30 M
**FOOTNOTE [C]** FOR WHEELBASE 2,55 M

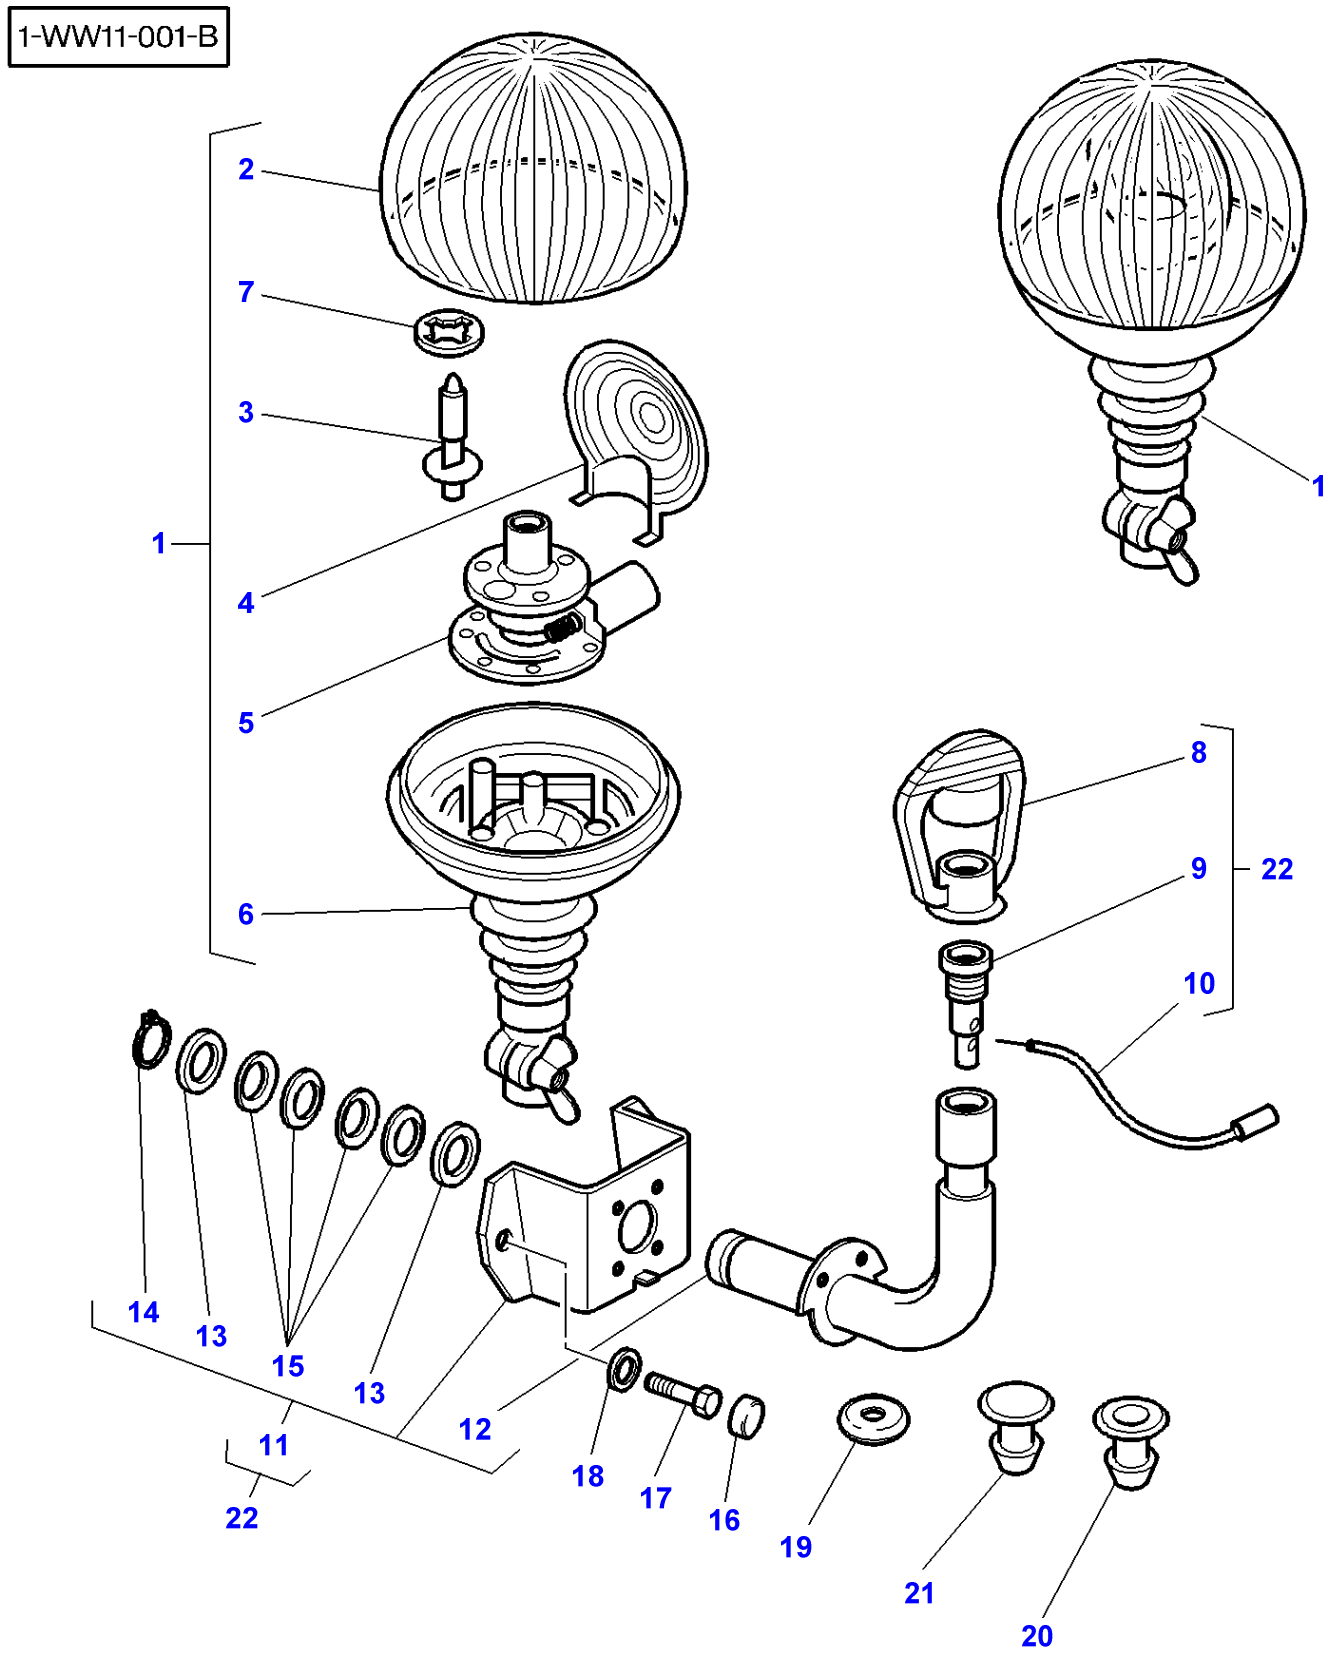
1-WW11-001-B
2
7
3
1
4
5
6
1
8
9
22
10
14
13
15
13
12
11
22
18
17
16
19
21
20

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Rotating Light Page 120-0050

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3715144M92 | 1 | Turning Light | |
| 2 | 3902469M1 | 1 | Lens | (1) |
| 3 | **3405180M1** | 1 | Bulb 12v | (1) |
| 4 | 3900282M1 | 1 | Reflectingmirror | (1) |
| 5 | 3900285M1 | 1 | Engine | (1) |
| 6 | | 1 | Support | (1)<br>Not serviced,order REF. 1 |
| 7 | 3900281M1 | 1 | Bush | (1) |
| 8 | 3617859M1 | 1 | Helmet | (22) |
| 9 | 3617860M1 | 1 | Intake | (22) |
| 10 | 3713260M1 | 1 | Wire | (22) |
| 11 | 4271246M91 | 1 | Support | (22) |
| 12 | 3778023M1 | 1 | Tube | (11) |
| 13 | 3778025M1 | 2 | Washer | (11)<br>45 X 23 X 3 |
| 14 | 3006699X1 | 1 | Clip | (11)<br>22 X 1,2 |
| 15 | 3778094M1 | 4 | Washer | (11)<br>45X22,4X1,5 |
| 16 | 3616277M1 | 2 | Helmet | M8 |
| 17 | 339123X1 | 2 | Hex. Sock. Screw | M8 X 20 |
| 18 | 390972X1 | 2 | Washer | Diameter 8-17 X 1,7 |
| 19 | 3714694M1 | 1 | Grommet | Diameter 7-21 |
| 20 | 3713405M2 | 1 | Grommet | Diameter 7-15 |
| 21 | 3713404M1 | 1 | Plug | Diameter 15 |
| 22 | 4274925M91 | 1 | Support | |

**FOOTNOTE [B]** WITH HIGH VISIBILITY ROOF

1-WL03-002-D

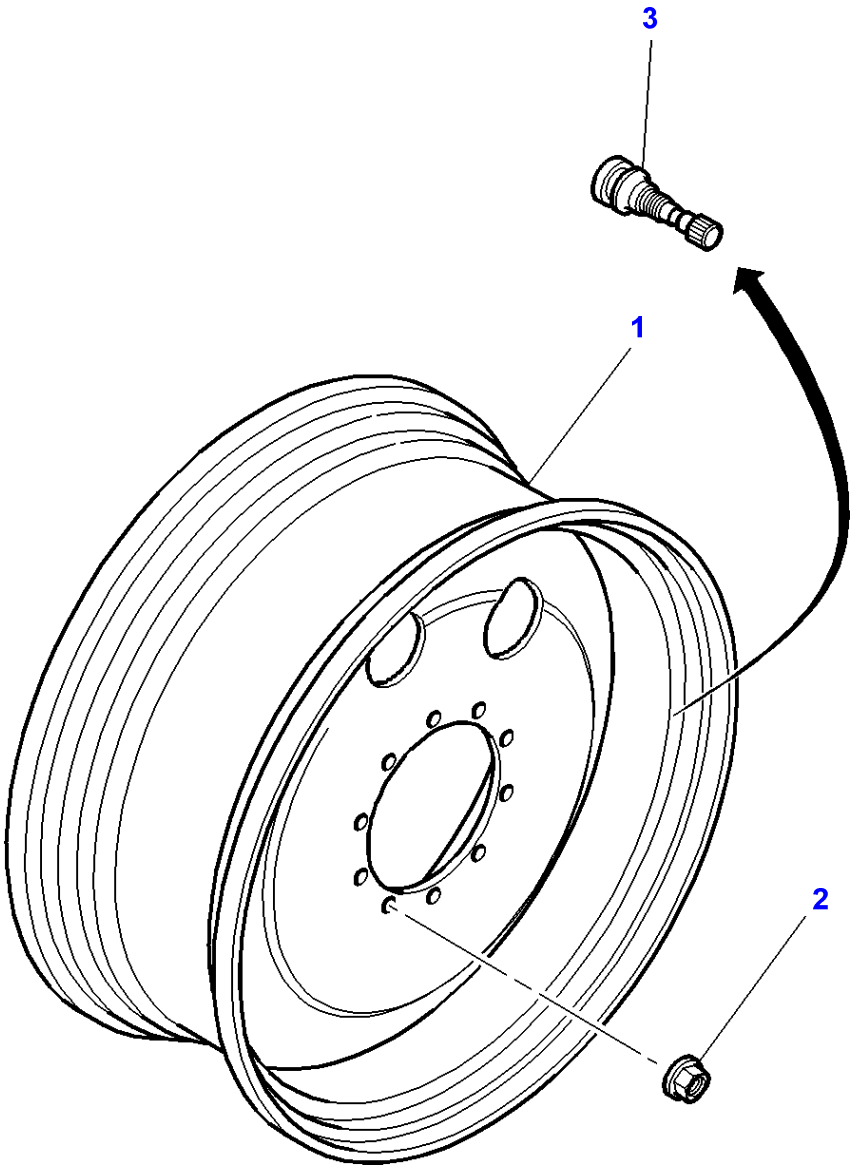


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3787689M1 | 2 | Rim | W14L X 28" |
| | 3786703M1 | 2 | Rim | W15L X 28" |
| | 3788572M1 | 2 | Rim | W23 X 30" |
| 2 | 3712611M2 | 20 | Nut Special | M22 |
| 3 | 4274219M1 | 2 | Pressure Valve | |

1-WL03-011-A

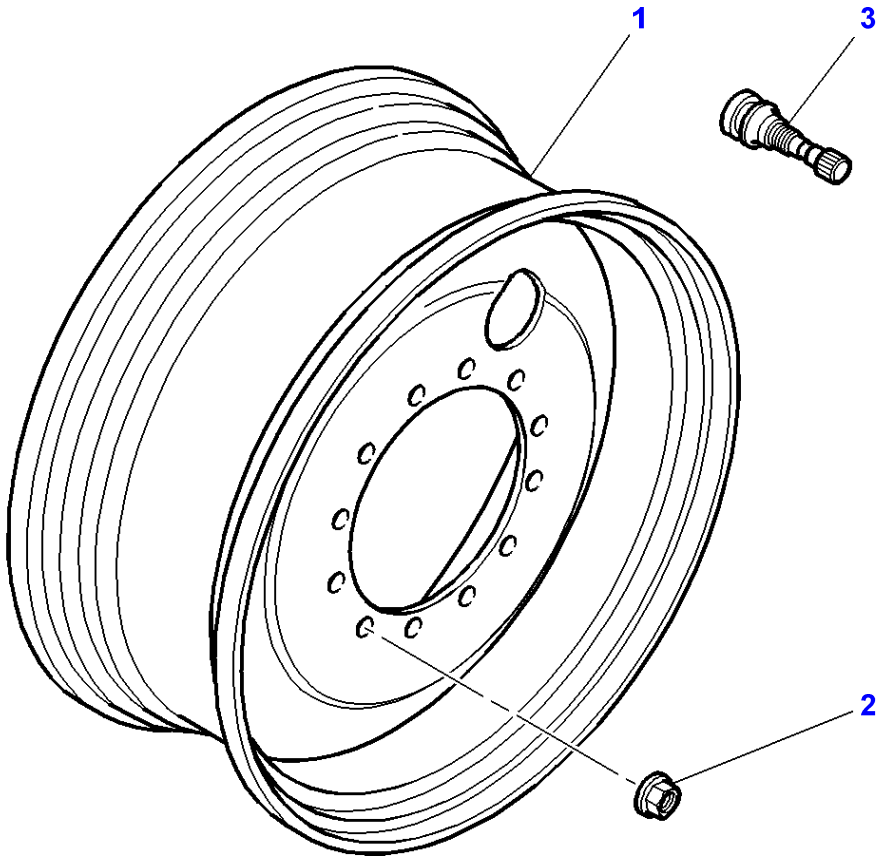


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3788573M1 | 2 | Rim | DWW 23A X 30" |
| 2 | **3712611M2** | 24 | Nut Special | M22 |
| 3 | 4274219M1 | 2 | Pressure Valve | |

1-WL03-004-C

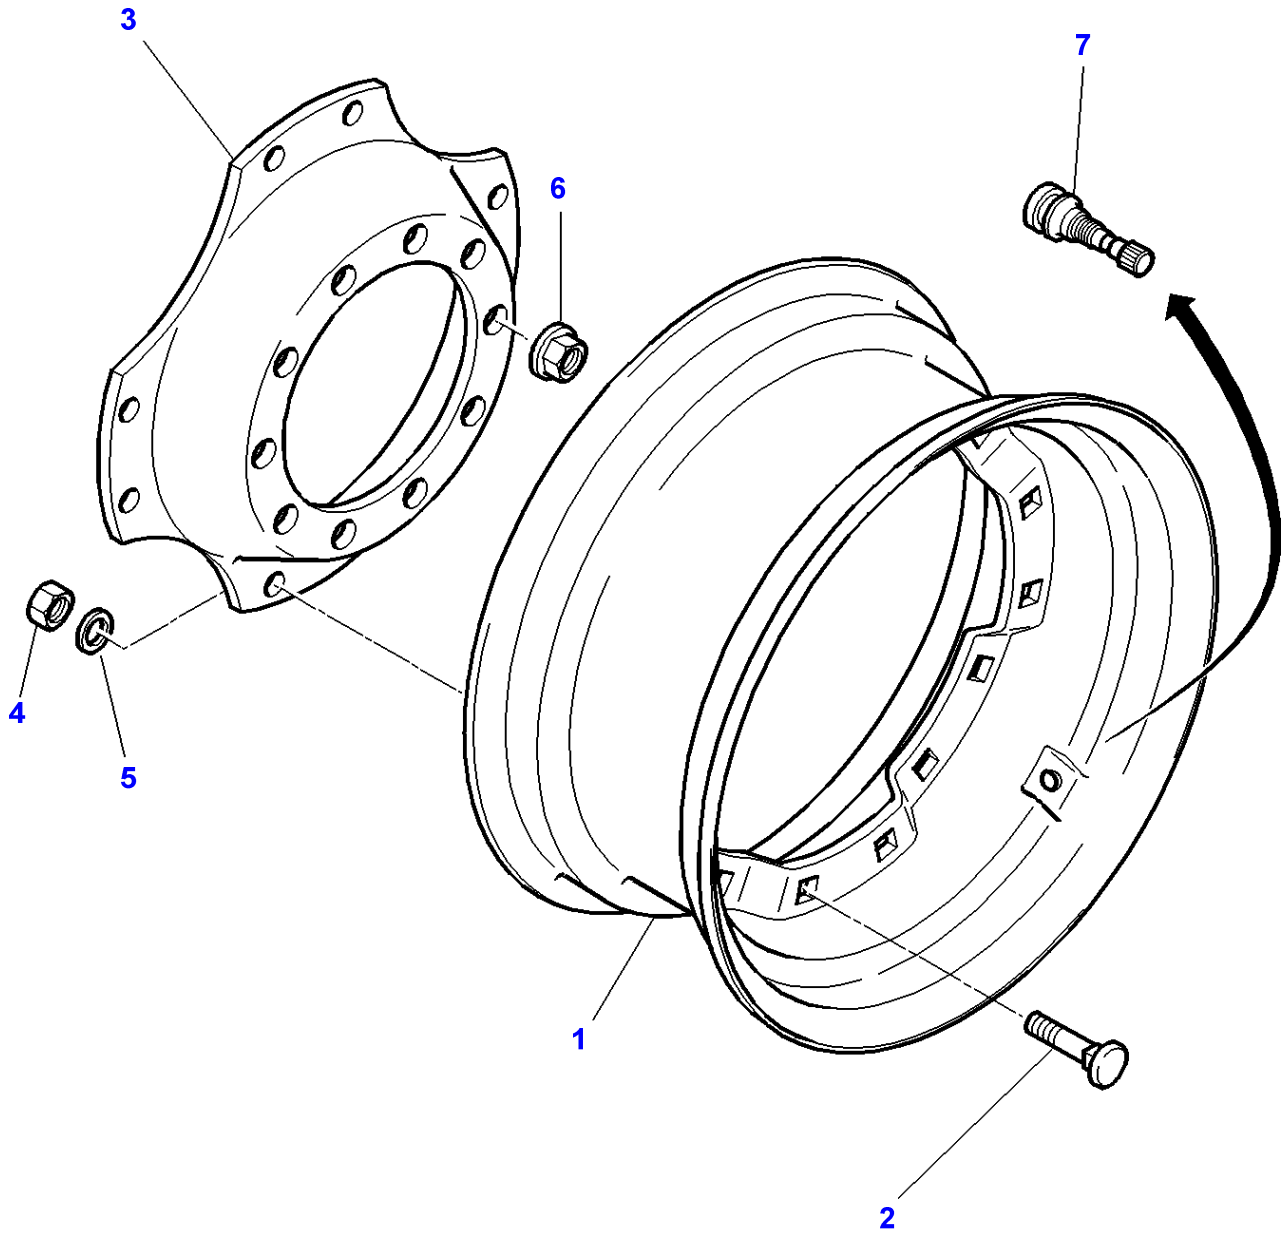


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786508M1 | 2 | Rim | W15L X 26" |
| | 3786607M1 | 2 | Rim | W18L X 28" |
| | 72514724 | 2 | Rim | WH 12 X 28" |
| | | | | Repairs and replaces 3786509M1 |
| | 3785778M1 | 2 | Rim | DWW 13 X 30" |
| | 3785786M1 | 2 | Rim | W13 X 34" |
| | 3786510M1 | 2 | Rim | W15 X 28" |
| | 3786511M1 | 2 | Rim | W10 X 34" |
| | 3785240M1 | 2 | Rim | DWW 15L X 30" |
| | 3786087M1 | 2 | Rim | W15L X 34" |
| | 4271722M1 | 2 | Rim | WH10 X 38" |
| 2 | 3785847M1 | 16 | Screw | M16 X 40 |
| 3 | 3785241M1 | 2 | Disc | 28" / 30" |
| | 3786512M1 | 2 | Disc | 26" |
| | 3786088M1 | 2 | Disc | 34" |
| | 4271723M1 | 2 | Disc | 38" |
| 4 | 3785846M1 | 16 | Nut | M16 |
| 5 | 3785848M1 | 16 | Washer | Diameter 16,3 X 31,5 |
| 6 | **3712611M2** | 20 | Nut Special | M22 |
| 7 | 4274219M1 | 2 | Pressure Valve | |

1-WL03-012-A

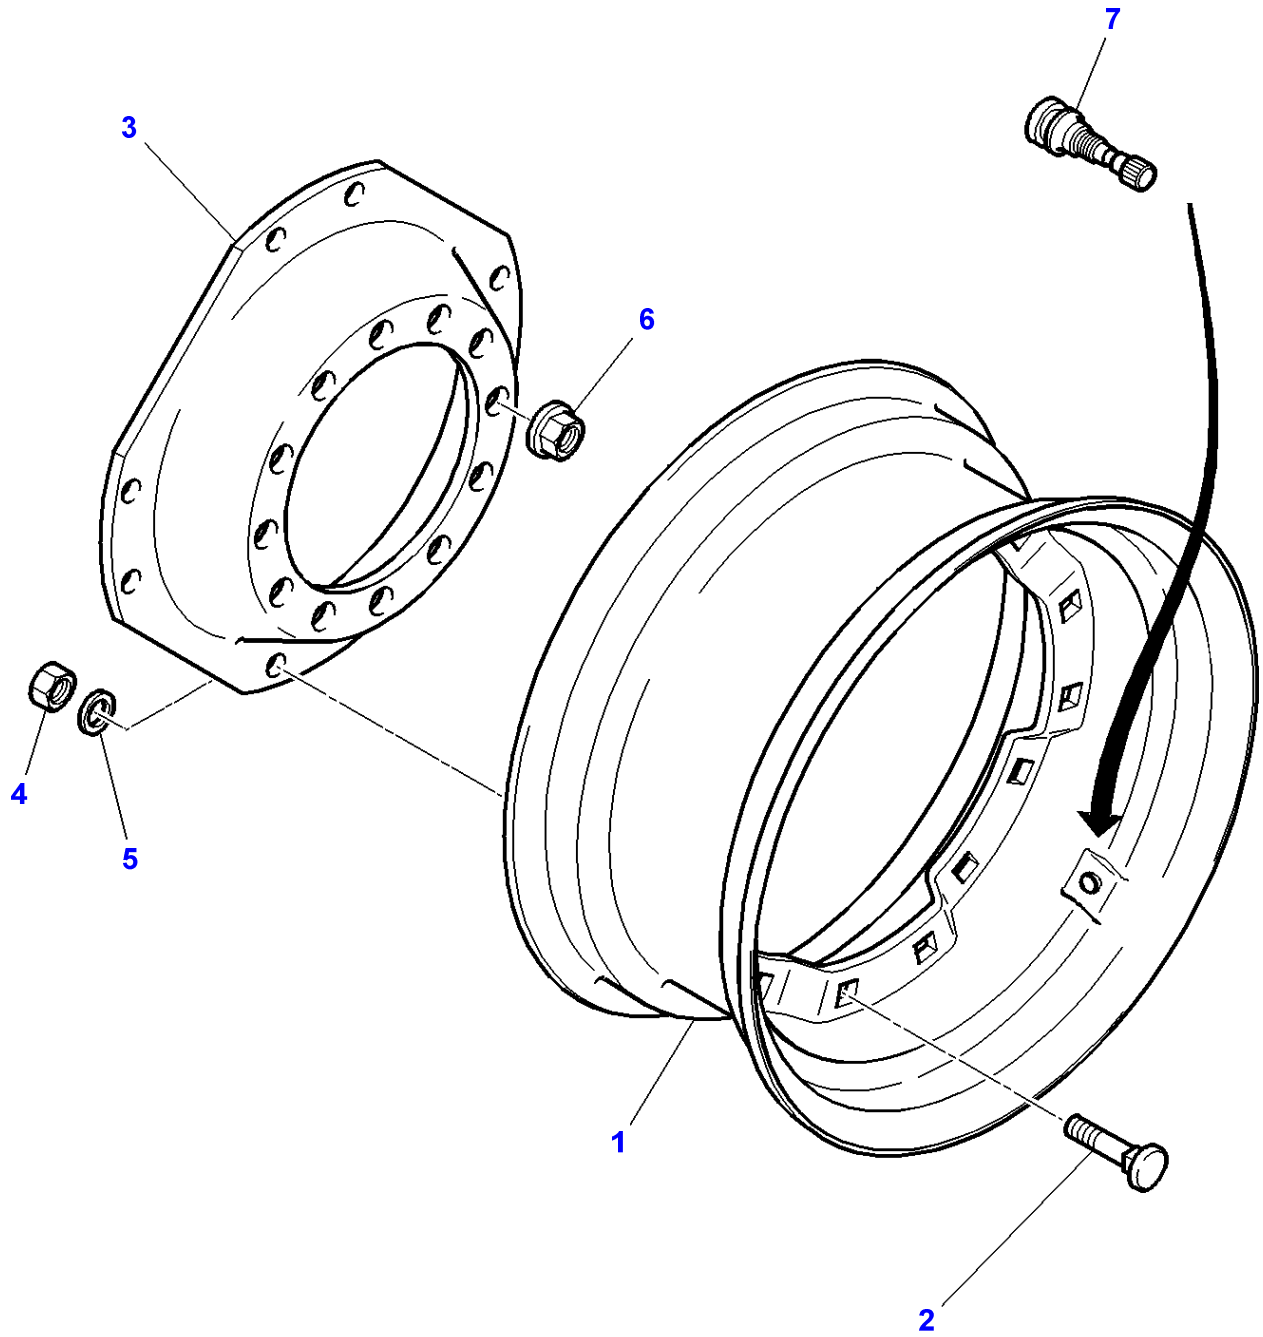


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3786607M1 | 2 | Rim | W18L X 28" |
| | 3785778M1 | 2 | Rim | DWW 13 X 30" |
| | 3785240M1 | 2 | Rim | DWW 15L X 30" |
| | 3785786M1 | 2 | Rim | W13 X 34" |
| 2 | 3785847M1 | 16 | Screw | |
| 3 | 3785098M1 | 2 | Disc | 34" |
| | 4270526M1 | 2 | Disc | 28" |
| 4 | 3785846M1 | 16 | Nut | |
| 5 | 3785848M1 | 16 | Washer | |
| 6 | 3712611M2 | 24 | Nut Special | M22 |
| 7 | 4274219M1 | 2 | Pressure Valve | |

1-WL03-013-A

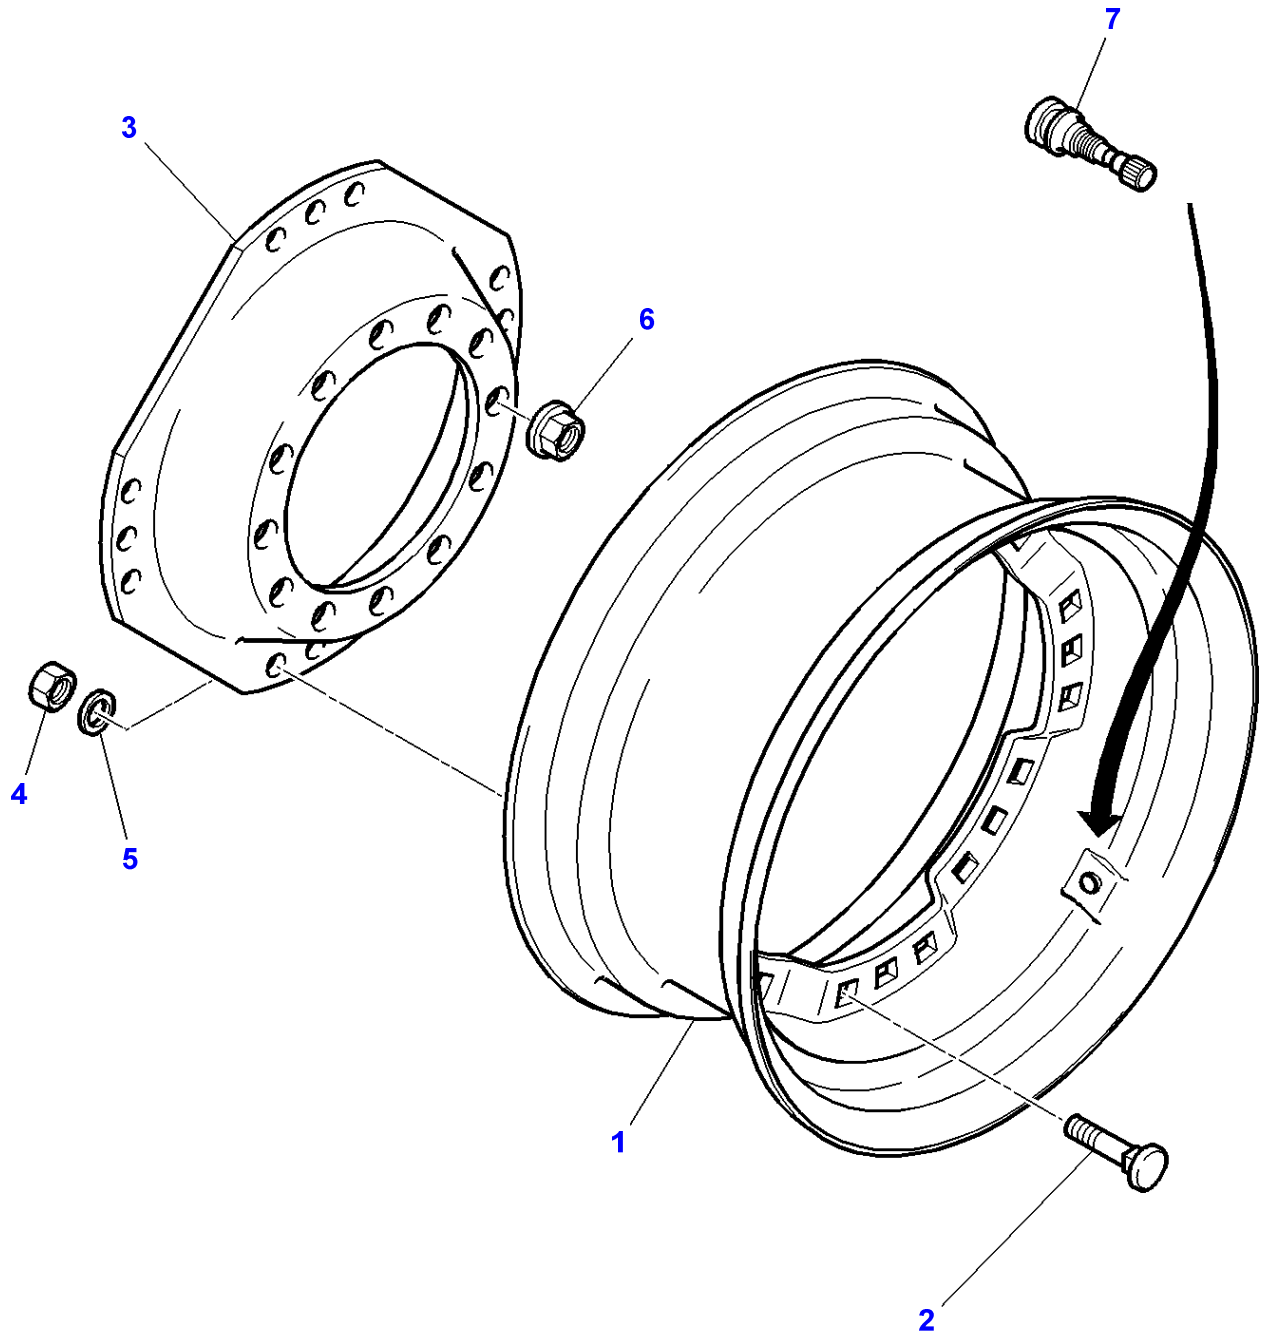


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271722M1 | 2 | Rim | W10 X 38" |
| 2 | 3785847M1 | 24 | Screw | |
| 3 | 4271724M1 | 2 | Disc | 38" |
| 4 | 3785846M1 | 24 | Nut | |
| 5 | 3785848M1 | 24 | Washer | |
| 6 | 3712611M2 | 24 | Nut Special | M22 |
| 7 | 4274219M1 | 2 | Pressure Valve | |

1-WK14-002-A

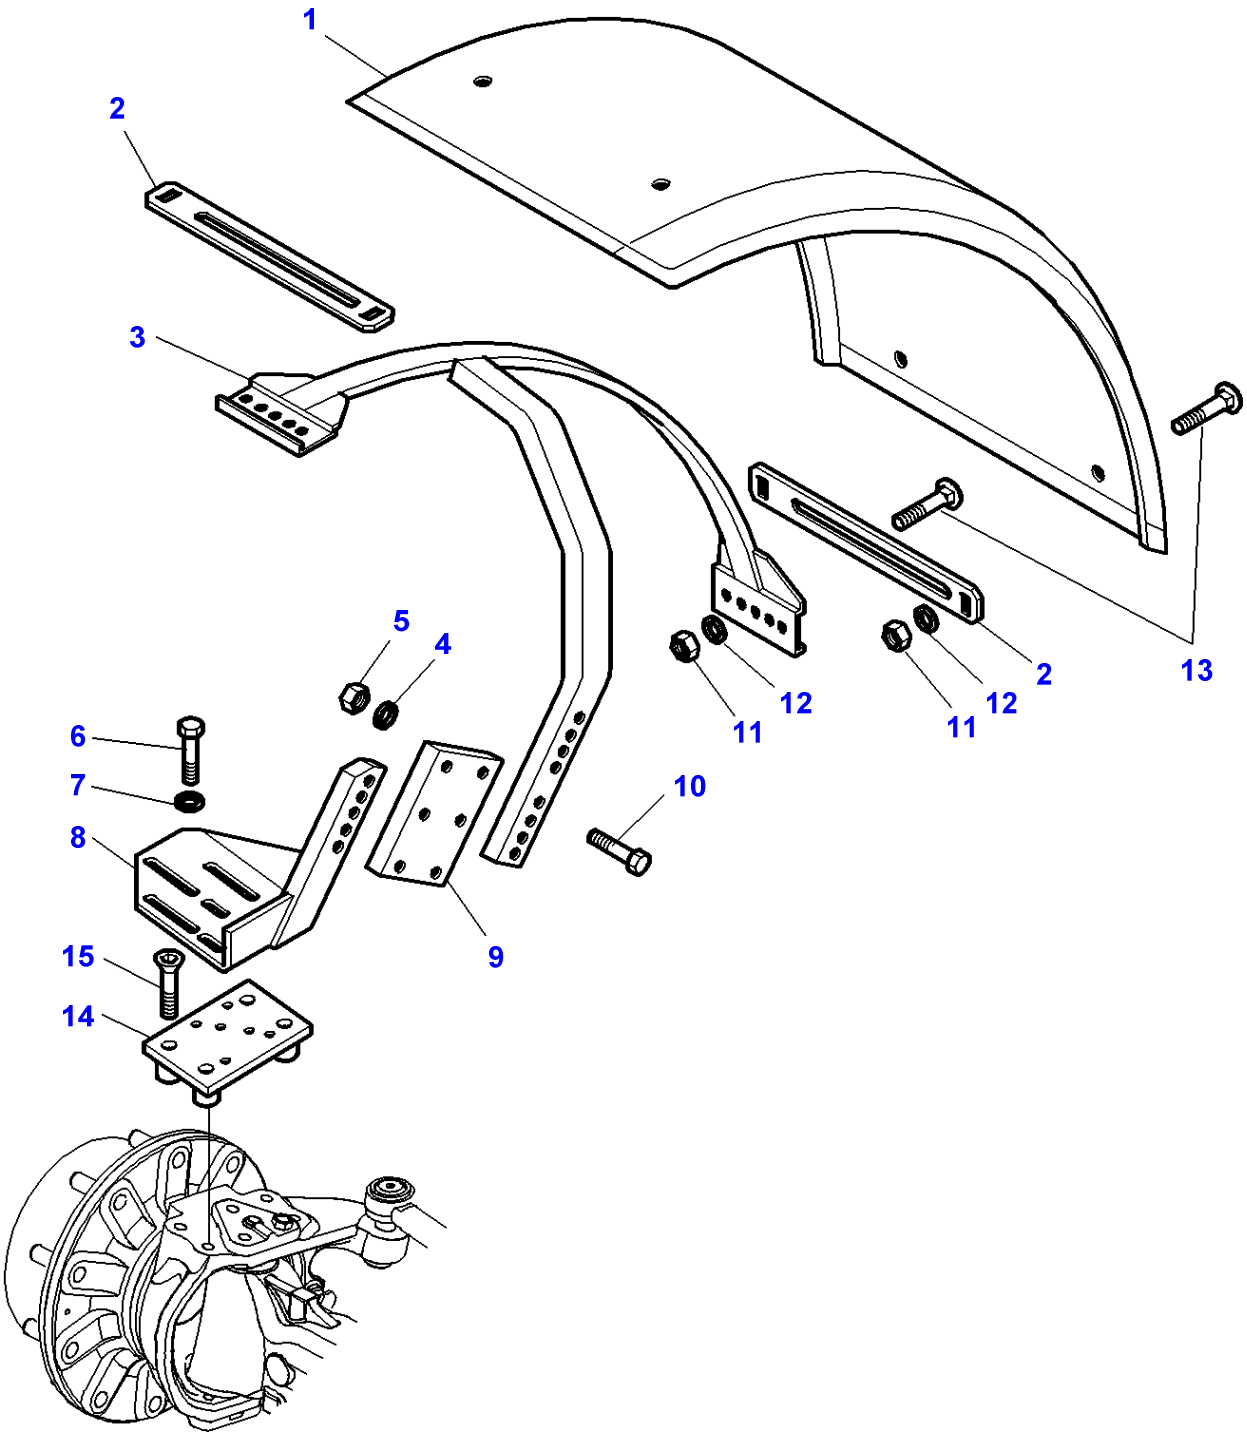


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3619229M2 | 2 | Fender | Width 470 MM |
| | 3779567M1 | 2 | Fender | Width 520 MM |
| | 3780467M1 | 2 | Fender | Width 620 MM |
| 2 | 3777586M2 | 4 | Plate | Length 340 MM |
| | 3777587M2 | 4 | Plate | Length 400 MM |
| | 3780468M2 | 4 | Plate | Length 448 MM |
| 3 | 3777588M1 | 1 | Support | Left Hand |
| | 3777590M1 | 1 | Support | Right Hand |
| 4 | 390735X1 | 8 | Washer | Diameter 12-24 X 2,5 |
| 5 | 3009695X1 | 8 | Nut | M12 |
| 6 | 3009492X1 | 6 | Hex. Sock. Screw | M10 X 25 |
| 7 | 390597X1 | 6 | Washer | Diameter 10-30 X 2,5 |
| 8 | 3784571M1 | 1 | Support | Left Hand |
| | 3784572M1 | 1 | Support | Right Hand |
| 9 | 3779565M2 | 2 | Spacer | |
| 10 | 3009513X1 | 8 | Hex. Sock. Screw | M12 X 65 |
| 11 | 339402X1 | 12 | Nut | M10 |
| 12 | 390734X1 | 12 | Washer | Diameter 10-21 X 2 |
| 13 | 390809X1 | 12 | Screw Special | M10 X 25 |
| 14 | 3784569M1 | 2 | Support | |
| 15 | 3009480X1 | 8 | Screw | M16 X 60 |

1-WK14-003-B

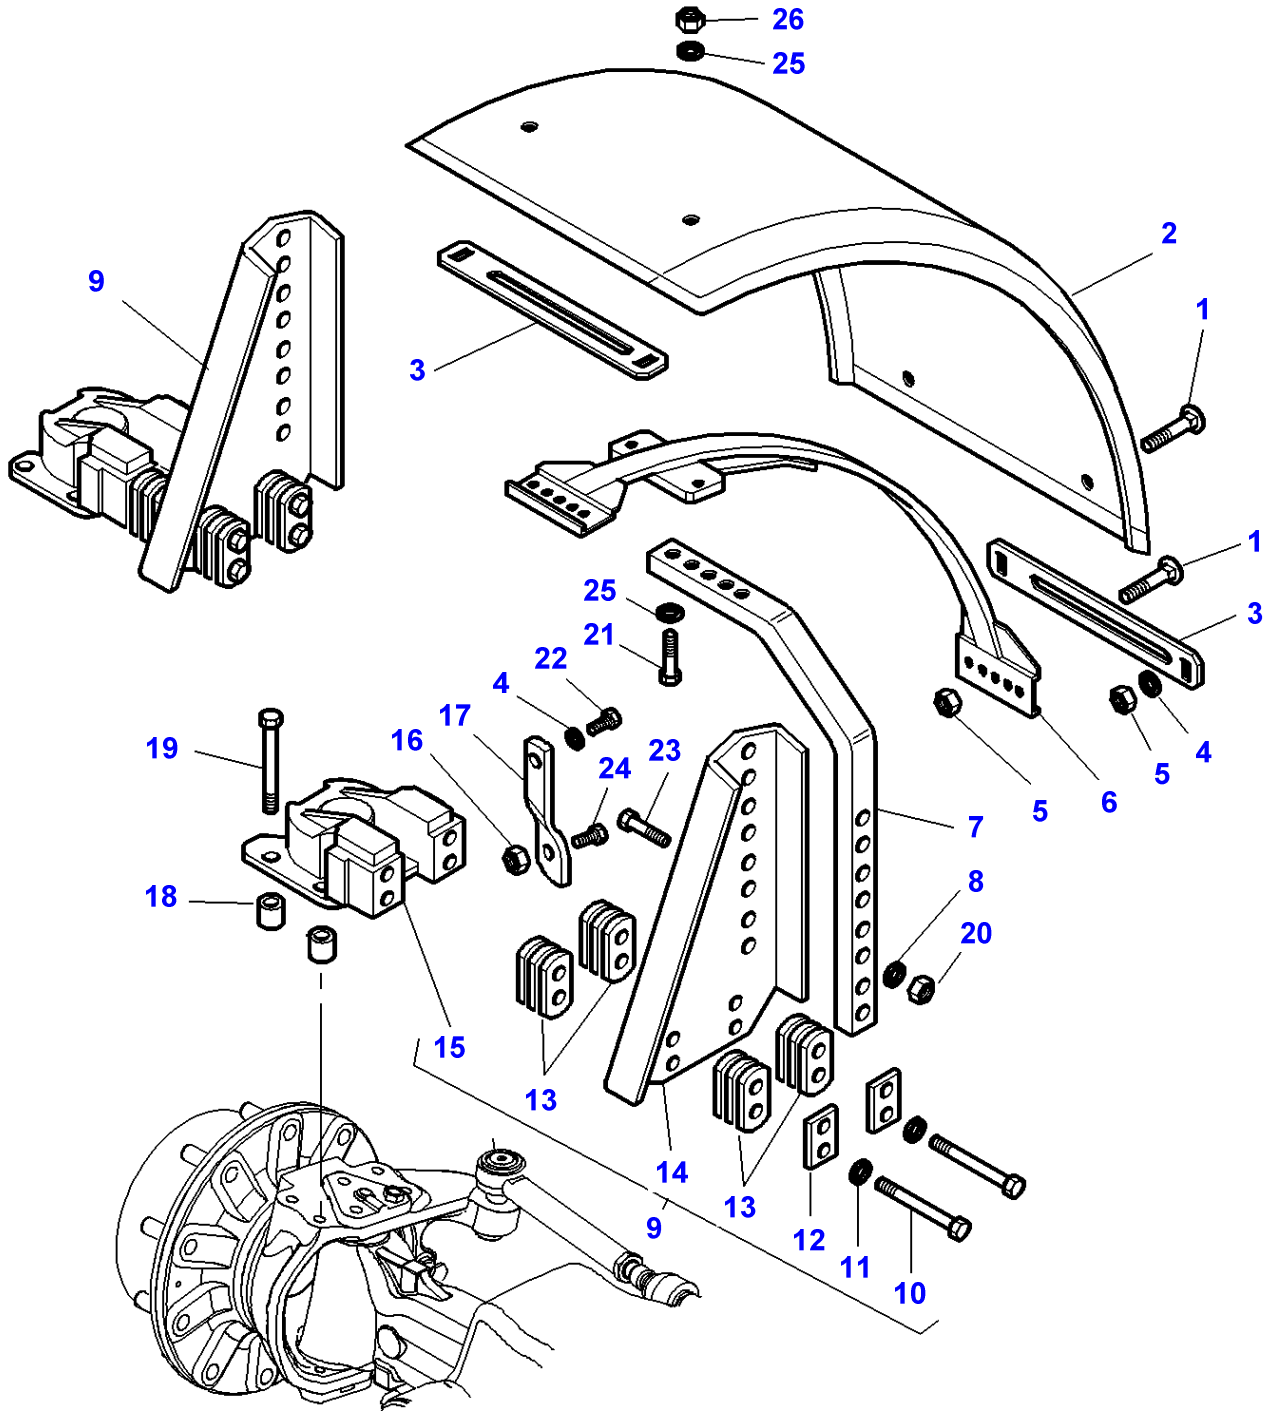
26
25
9
2
1
3
1
3
25
21
22
4
17
16
19
24
23
4
5
6
5
7
18
8
20
15
13
14
9
13
12
11
10

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Front Axle 4 Wheel Drive - Mudguards And Supports - Pivoting Page 130-0035

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 390809X1 | 12 | Screw Special | M10 X 25 |
| 2 | 3619229M2 | 2 | Fender | Width 470 MM |
| | 3779567M1 | 2 | Fender | Width 520 MM |
| | 3780467M1 | 2 | Fender | Width 620 MM |
| 3 | 3777586M2 | 4 | Plate | Length 340 MM |
| | 3777587M2 | 4 | Plate | Length 400 MM |
| | 3780468M2 | 4 | Plate | Length 448 MM |
| 4 | 390734X1 | 14 | Washer | Diameter 10-21 X 2 |
| 5 | 339402X1 | 12 | Nut | M10 |
| 6 | 3784948M1 | 2 | Safety Frame | |
| 7 | 3784947M2 | 2 | Arm | |
| 8 | 390735X1 | 8 | Washer | Diameter 12-24 X 2,5 |
| 9 | 3784945M92 | 1 | Pivot | Right Hand |
| | 3784946M92 | 1 | Pivot | Left Hand |
| 10 | 1442602X1 | 4 | Hex. Sock. Screw | (9)<br>M10 X 100 |
| 11 | 390734X1 | 4 | Washer | (9)<br>Diameter 10-21 X 2 |
| 12 | 3785052M1 | 2 | Bridle | (9) |
| 13 | 3785051M1 | 26 | Spacer | (9) |
| 14 | 3785050M1 | 1 | Plate | (9)<br>Left Hand |
| | 3785049M1 | 1 | Plate | (9)<br>Right Hand |
| 15 | 3785109M2 | 1 | Pivot | (9)<br>Right Hand<br>See Page - Reference Number 130-0040/1 |
| | 3785306M2 | 1 | Pivot | (9)<br>Left Hand<br>See Page - Reference Number 130-0040/1 |
| 16 | 339054X1 | 2 | Nut | M12 |
| 17 | 3788128M3 | 1 | Strap | Up to Serial or Engine Number N335044<br>Left Hand |
| | 4280475M1 | 1 | Strap | From Serial or Engine Number N335045<br>Left Hand |
| | 3788127M3 | 1 | Strap | Up to Serial or Engine Number N335044<br>Right Hand |
| | 4280473M1 | 1 | Strap | From Serial or Engine Number N335045<br>Right Hand |
| 18 | 3385920M1 | 8 | Spacer | Up to Serial or Engine Number N335044<br>Diameter 17.6-32 X 40 |
| | 3011172X1 | 8 | Spacer | From Serial or Engine Number N335045<br>Diameter 17.6-32 X 30 |
| 19 | 391889X1 | 8 | Hex. Sock. Screw | M16 X 70 |
| | 339881X1 | 8 | Hex. Sock. Screw | M16 X 60 |
| 20 | 1442190X1 | 4 | Locknut | M12 |
| 21 | 1441226X1 | 4 | Hex. Sock. Screw | M12 X 40 |
| 22 | 1441302X1 | 2 | Hex. Sock. Screw | M10 X 30 |
| 23 | 3009510X1 | 4 | Hex. Sock. Screw | M12 X 50 |
| 24 | 1440716X1 | 2 | Hex. Sock. Screw | M12 X 30 |
| 25 | 1441664X1 | 8 | Washer | Diameter 16-30 X 3 |
| 26 | 1442190X1 | 4 | Locknut | M12 |

**FOOTNOTE [A]** WITH FRONT AXLE SUSPENDED

1-WK14-004-A

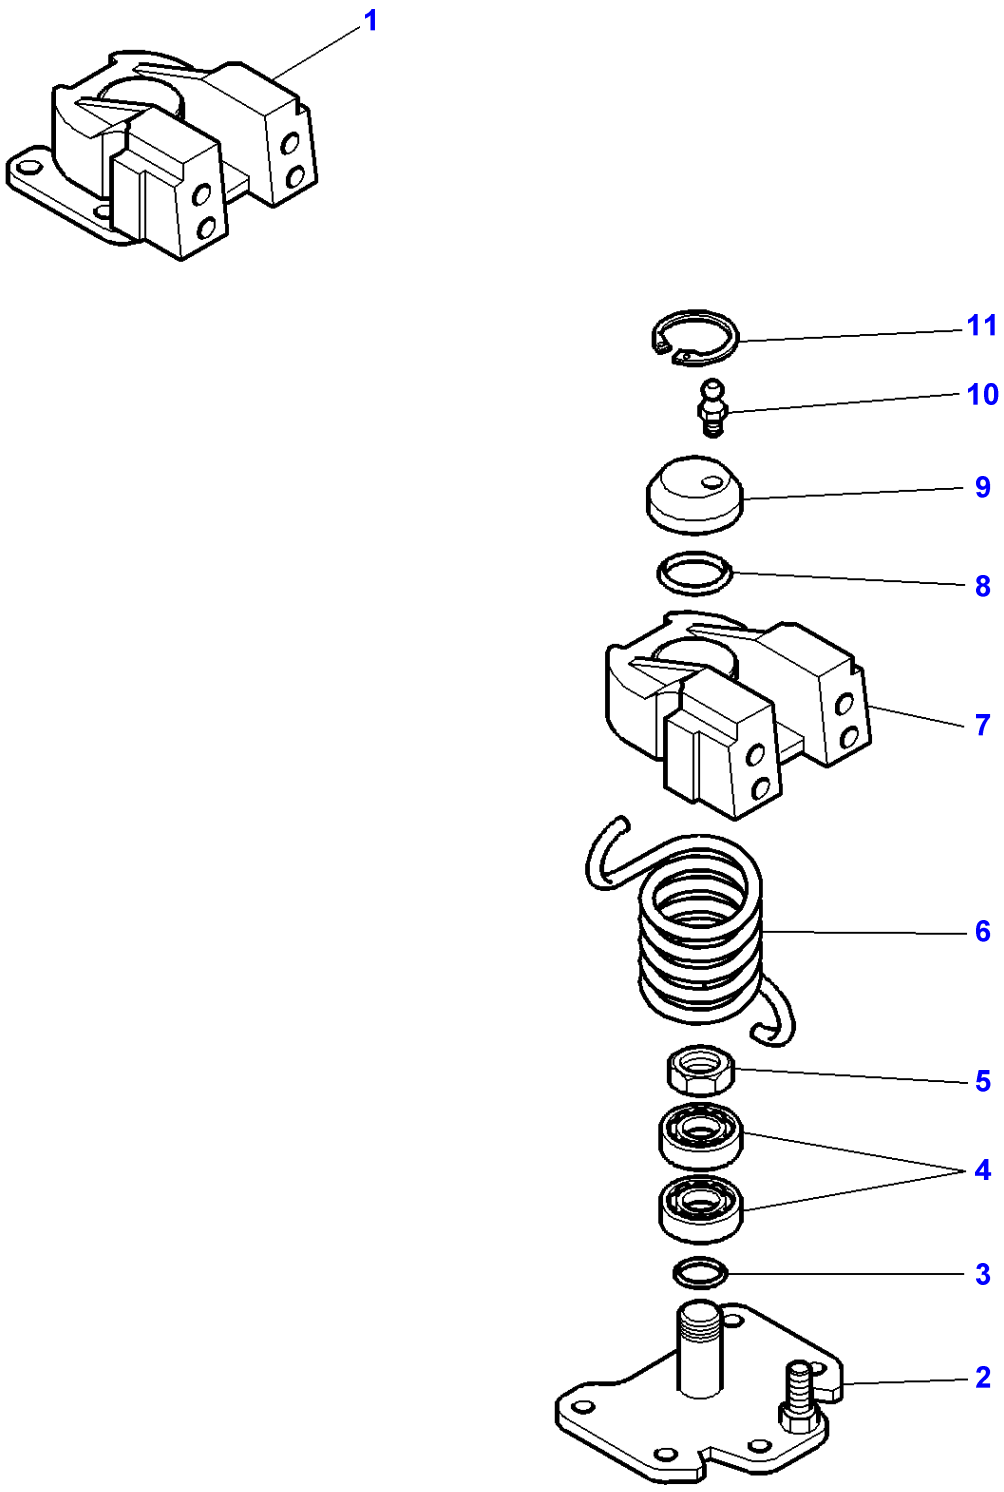


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3785306M2 | 1 | Pivot | Left Hand |
| | 3785109M2 | 1 | Pivot | Right Hand |
| 2 | | 1 | Pedestal | (1)<br>Not serviced,order REF. 1 |
| 3 | 3903902M1 | 1 | Gasket | (1) |
| 4 | 3903897M1 | 2 | Bearing Assy | (1) |
| 5 | 3000845X1 | 1 | Top Locknut | (1)<br>M25 |
| 6 | 3903899M1 | 1 | Spring | (1)<br>Left Hand |
| | 3903898M1 | 1 | Spring | (1)<br>Right Hand |
| 7 | | 1 | Cover | (1)<br>Not serviced,order REF. 1 |
| 8 | 3903903M1 | 1 | Gasket | (1) |
| 9 | 3903896M1 | 1 | Cover | (1) |
| 10 | 3903900M1 | 1 | Greaser | (1) |
| 11 | 3903901M1 | 1 | Segment | (1) |

**FOOTNOTE [A]** FRONT AXLE FIXED
**FOOTNOTE [B]** WITH FRONT AXLE SUSPENDED

1-WM01-004-C

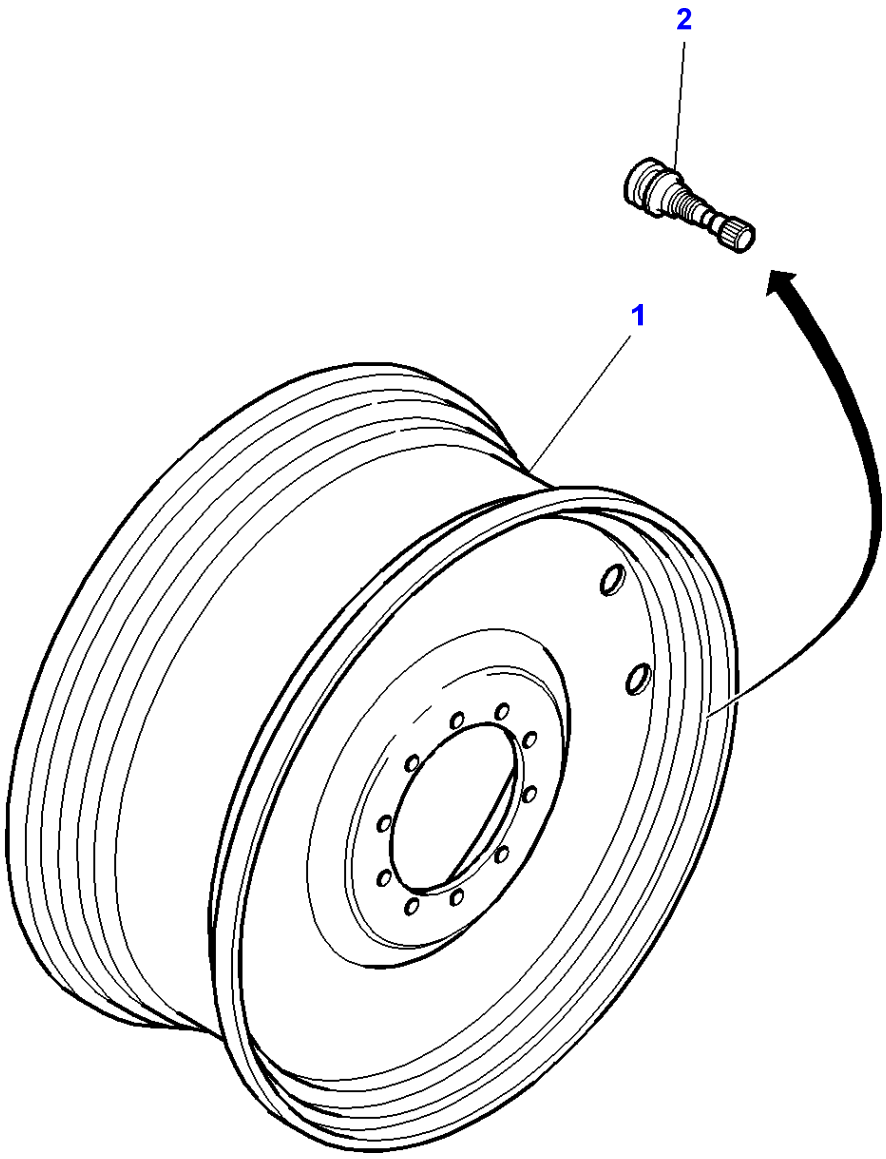

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Rear Wheels - Wheel Hub 10 Holes Assembling Page 130-0045

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3784119M1 | 2 | Rim | [D,I]<br>DWW 14L X 38" |
| | 3781970M2 | 2 | Rim | [A,J]<br>DWW 16L X 38" |
| | 3781971M2 | 2 | Rim | [B,J]<br>DWW 18L X 38" |
| | 3781972M2 | 2 | Rim | [C]<br>DWW 23A X 38" |
| | 3781968M2 | 2 | Rim | [E,J]<br>DWW 16L X 42" |
| | 3781969M2 | 2 | Rim | [F,J]<br>DWW 18L X 42" |
| | 3787712M1 | 2 | Rim | [G,J]<br>W 13 X 46" |
| | 3781982M2 | 2 | Rim | [J]<br>DD 16 X 46" |
| 2 | 4274219M1 | 2 | Pressure Valve | |

**FOOTNOTE [A]** USED WITH 16.9-18.4-20.8-420/85-460/85-480/70 -520/70-540/65 X 38" TYRES
**FOOTNOTE [B]** USED WITH 20.8-520/70-520/85-580/70-600/65 -650/65 X 38" TYRES
**FOOTNOTE [C]** USED WITH 650/85-710/70 X 38" TYRES
**FOOTNOTE [D]** USED WITH 16,9 - 420/85 X 38" TYRES
**FOOTNOTE [E]** USED WITH 18.4 X 42" TYRES
**FOOTNOTE [F]** USED WITH 20.8-620/70-350/65-520/85 X 42" TYRES
**FOOTNOTE [G]** USED WITH 19.90" X 46" TYRES
**FOOTNOTE [H]** USED WITH 18.4 - 520/85 X 46" TYRES
**FOOTNOTE [I]** WITH SHAFT DIAMETER 82 MM
**FOOTNOTE [J]** CAN BE TWINED FITTED

1-WM01-008-B

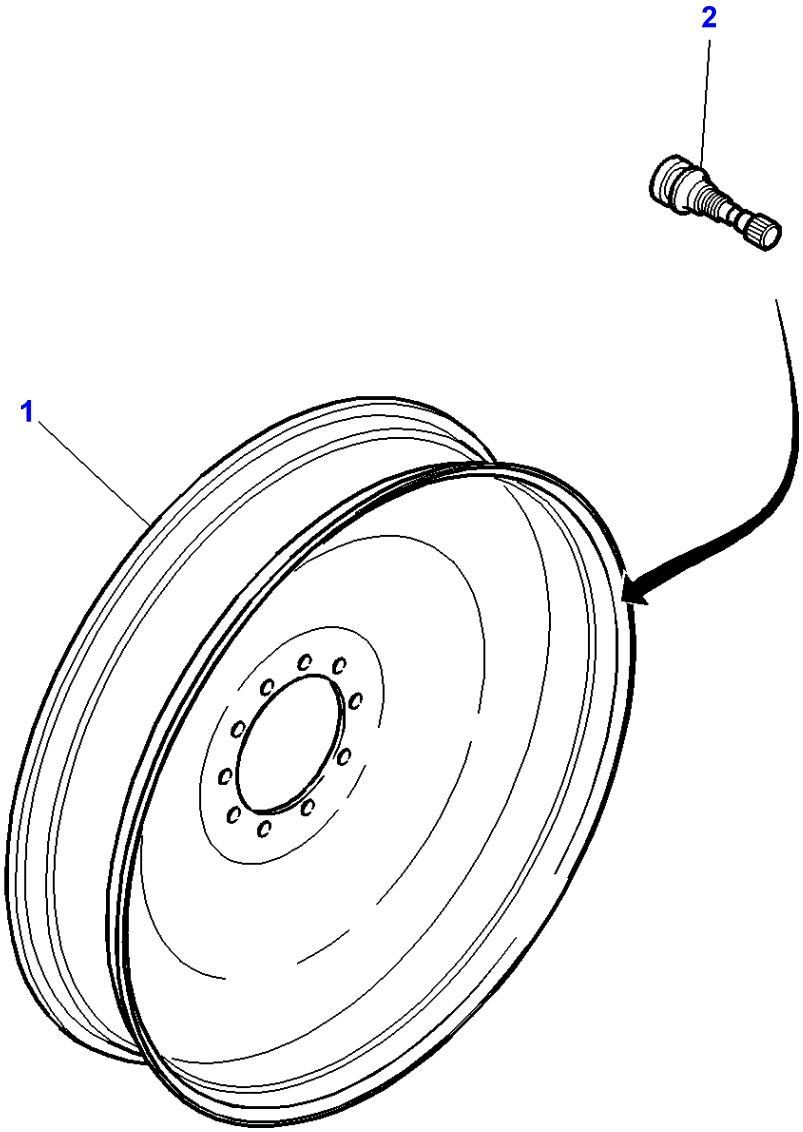


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 4271725M1 | 2 | Rim | [A]<br>W10 X 50" |
| 2 | 4274219M1 | 2 | Pressure Valve | |

**FOOTNOTE [A]** CAN BE TWINED FITTED

1-WM01-009-A

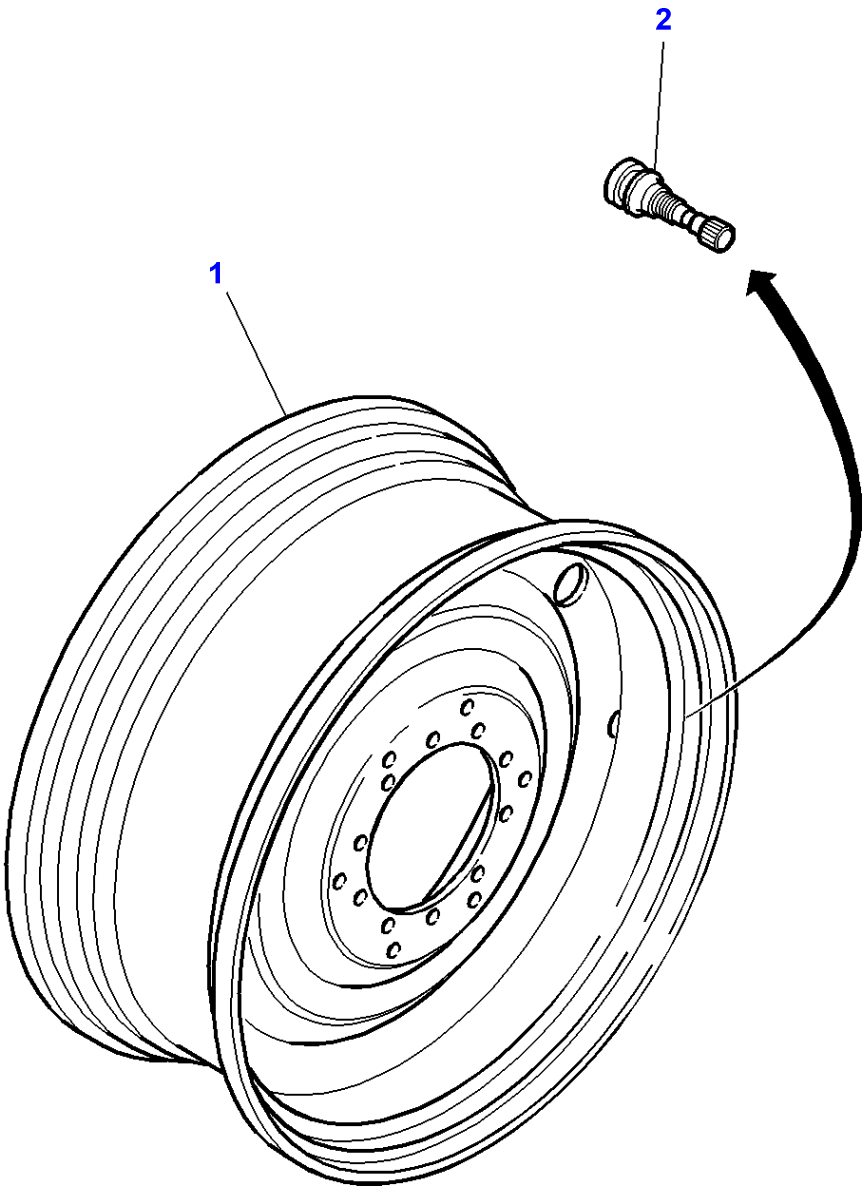


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3788574M1 | 2 | Rim | [A]<br>DWW 27A X 42" |
| 2 | 4274219M1 | 2 | Pressure Valve | |

**FOOTNOTE [A]** CAN BE TWINED FITTED

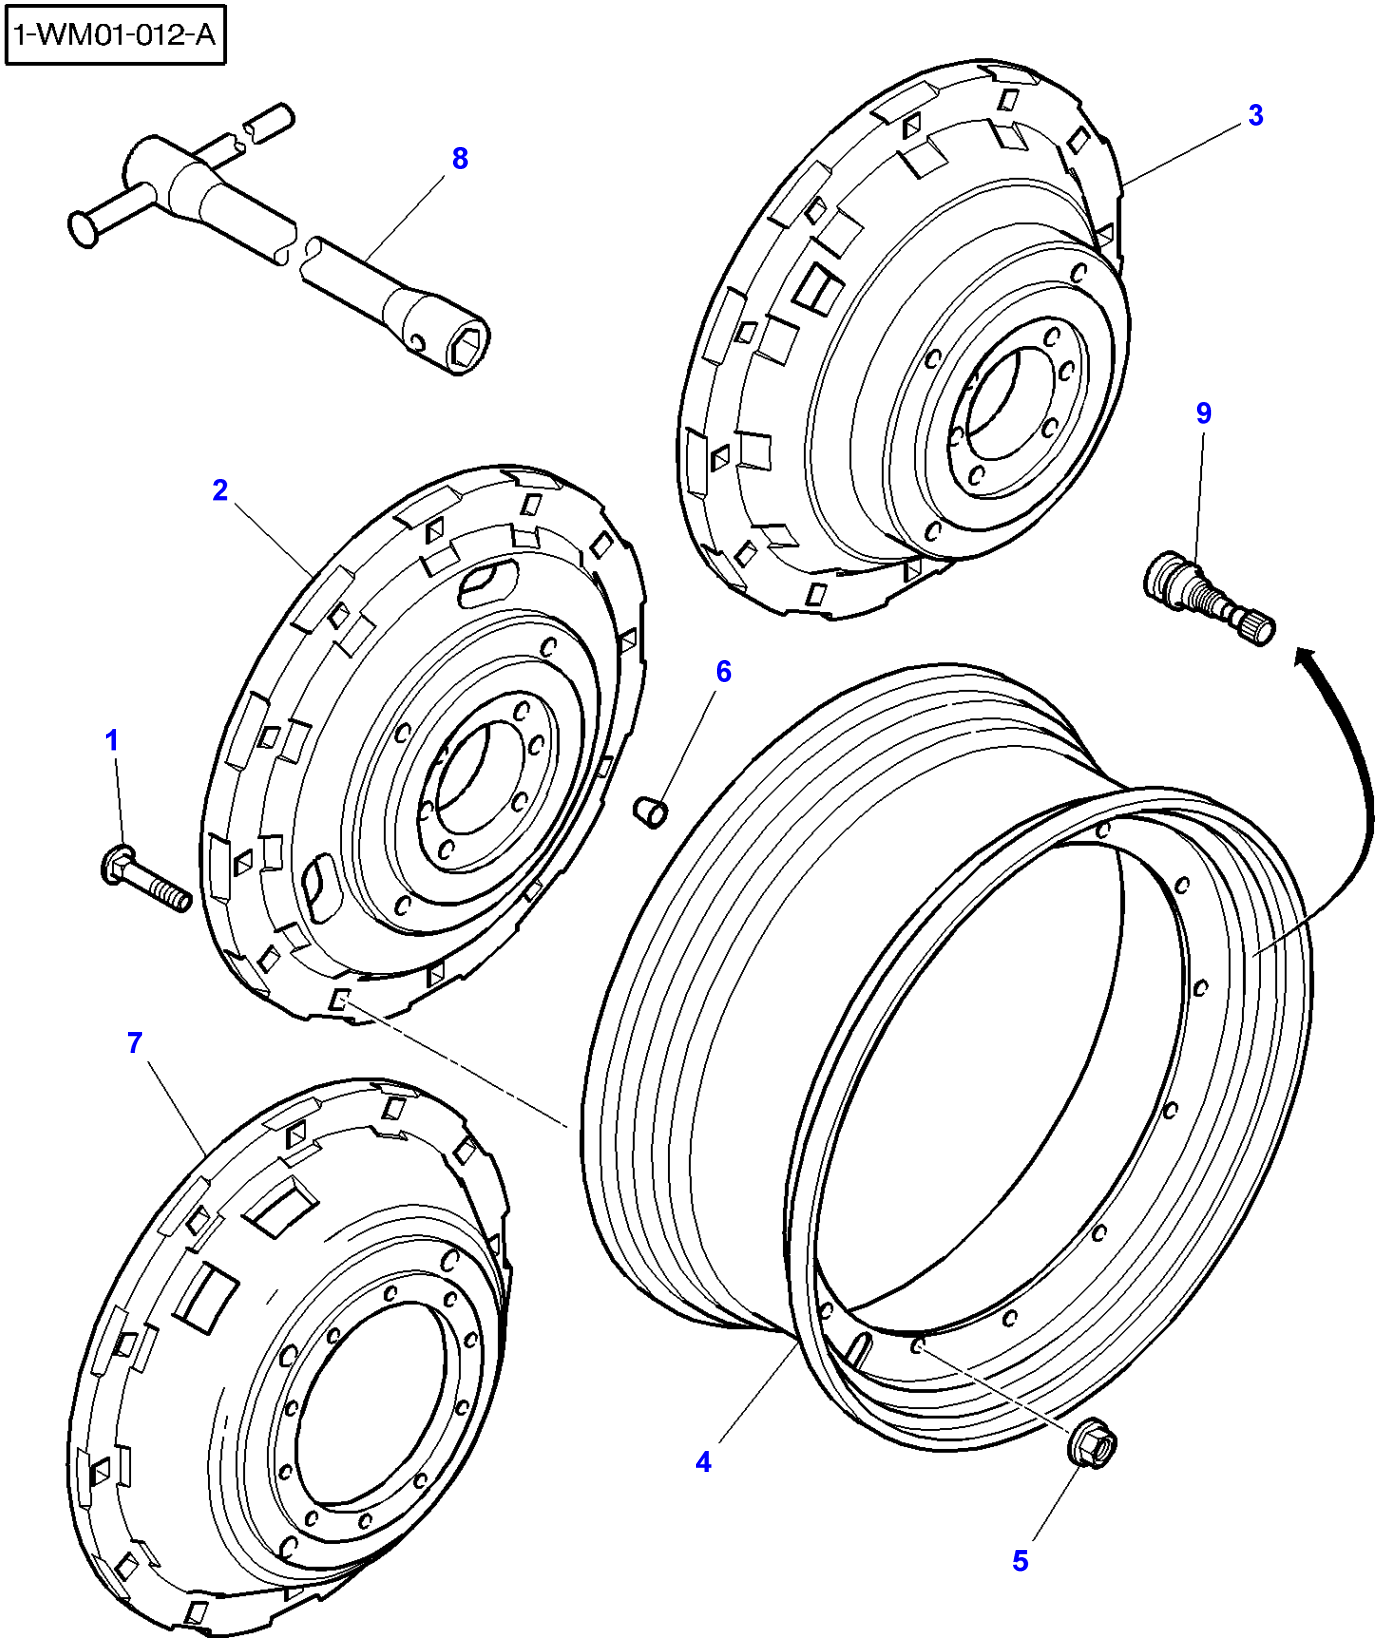
1-WM01-012-A
8
3
9
2
6
1
7
4
5

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Rear Wheels Page 130-0060

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3384603M1 | 24 | Bolt | M18 X 95 |
| 2 | 3582139M4 | 2 | Flange | 38"<br>195 KG |
| 3 | 3615370M3 | 2 | Flange | 38"<br>260 KG |
| 4 | 3781929M1 | 2 | Rim | [F,G,I]<br>DWW 16L X 38" |
| | 3781930M1 | 2 | Rim | [F,I]<br>DWW 18L X 38" |
| | 3782154M1 | 2 | Rim | [F]<br>DWW 23A X 38" |
| | 3781926M1 | 2 | Rim | [D,F]<br>DWW 16L X 42" |
| | 3782155M1 | 2 | Rim | [C,F]<br>DWW 18L X 42" |
| | 3787713M1 | 2 | Rim | [A,F,G]<br>W 13 X 46" |
| | 3782157M2 | 2 | Rim | [B,F]<br>DD 16 X 46" |
| | 4271726M1 | 2 | Rim | [E]<br>W 10 X 50" |
| 5 | **3384600M2** | 24 | Nut Special | M18 |
| 6 | 3780302M1 | 8 | Dowel | |
| 7 | 3716108M3 | 1 | Disc | 38"<br>209 KG |
| 8 | 3386406M1 | 1 | Spanner | |
| 9 | 4274219M1 | 2 | Pressure Valve | |

**FOOTNOTE [A]** WITH RIM 3716108M3 CAN BE TWINED FITTED WITH WHEEL 3787712M1
**FOOTNOTE [B]** WITH RIM 3716108M3 CAN BE TWINED FITTED WITH WHEEL 3781982M1
**FOOTNOTE [C]** WITH RIM 3716108M3 CAN BE TWINED FITTED WITH WHEEL 3781969M2
**FOOTNOTE [D]** WITH RIM 3716108M3 CAN BE TWINED FITTED WITH WHEEL 3781968M2
**FOOTNOTE [E]** WITH RIM 3716108M3 CAN BE TWINED FITTED WITH WHEEL 4271725M1
**FOOTNOTE [F]** WITH RIM 3716108M3 CAN BE TWINED FITTED
**FOOTNOTE [G]** WITH RIM 3582139M4+3615370M3 CAN BE TWINED FITTED
**FOOTNOTE [H]** WITH RIM 3716108M3 CAN BE TWINED FITTED WITH WHEEL 4271729M1
**FOOTNOTE [I]** WITH RIM 3716108M3 CAN BE TWINED FITTED WITH WHEEL 3781971M1

1-WM05-007-A

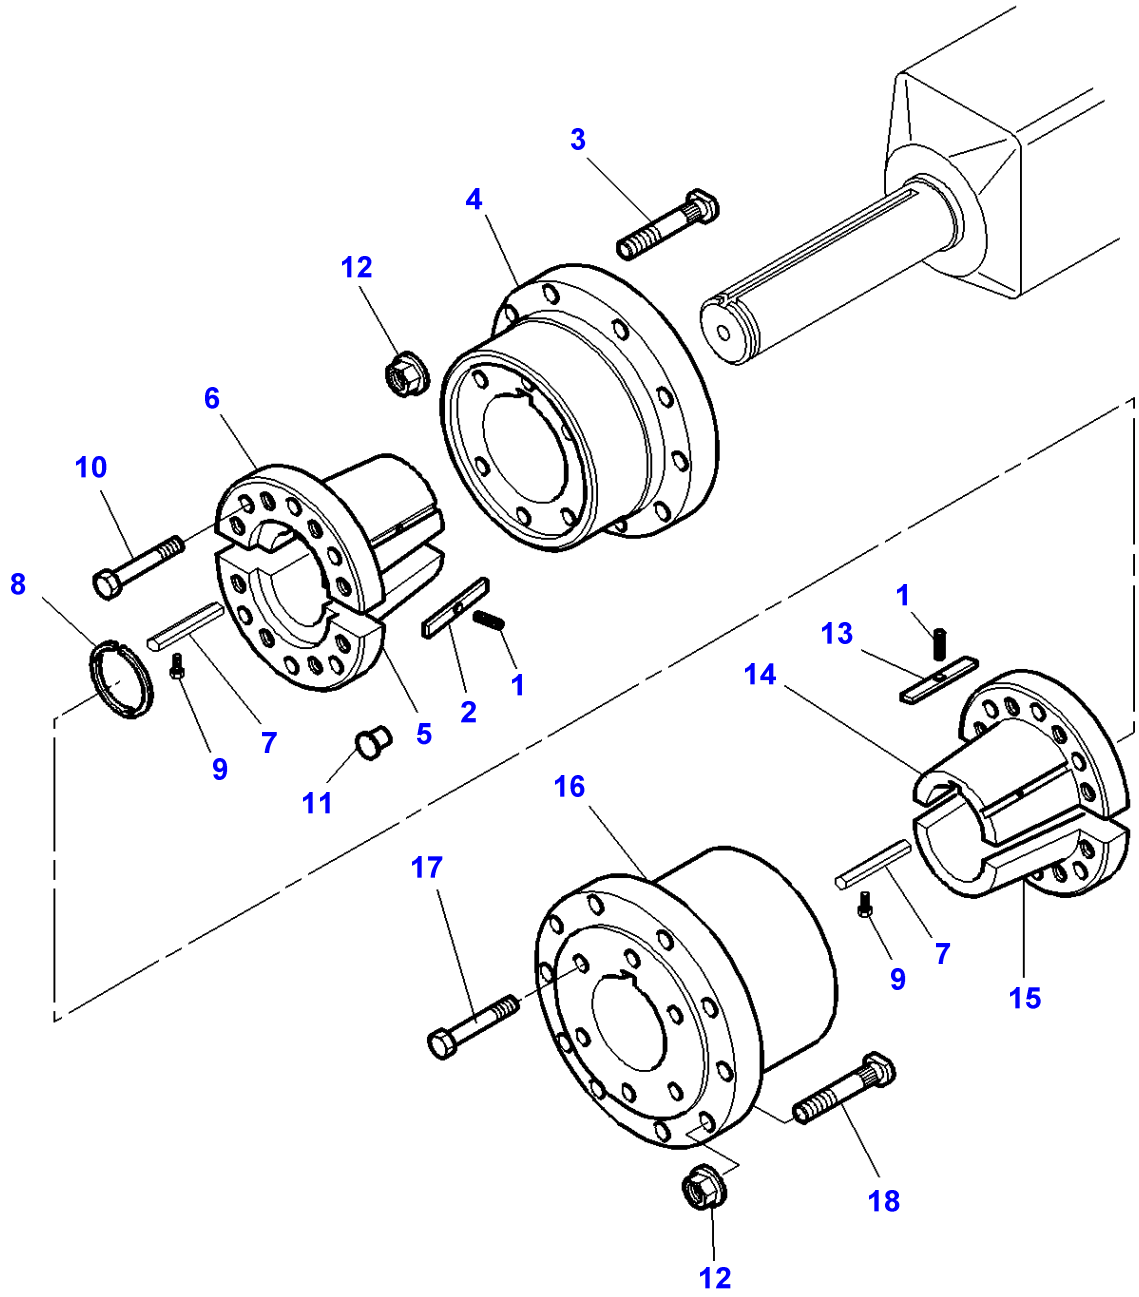

Massey Ferguson


MF 8470/8480 TRACTOR - 1637446 1637446

Rear Wheels - Fixing By Cone - Shaft Diameter 110 mm / Cone/Wheel Hub Reversed Page 130-0065

| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 763786M1 | 2 | Pin | Diameter 3 X 19 (Single Wheels) |
| | 763786M1 | 2 | Pin | Diameter 3 X 19 (Dual Wheels) |
| 2 | 509816M3 | 2 | Key | (Single Wheels) |
| | 509816M3 | 2 | Key | (Dual Wheels) |
| 3 | 3792488M2 | 20 | Stud | [A] M22 X 78 (Single Wheels) |
| | 3792488M2 | 20 | Stud | [A] M22 X 78 (Dual Wheels) |
| | **3716105M2** | 20 | Stud | [B] M22 X 100 (Single Wheels) |
| | **3716105M2** | 20 | Stud | [B] M22 X 100 (Dual Wheels) |
| 4 | 3716107M2 | 2 | Hub | (Single Wheels) |
| | 3716107M2 | 2 | Hub | (Dual Wheels) |
| 5 | 3716269M1 | 2 | Cone | Length 198 MM (Single Wheels) |
| | 3716269M1 | 2 | Cone | Length 198 MM (Dual Wheels) |
| 6 | 3716268M1 | 2 | Cone | Length 198 MM (Single Wheels) |
| | 3716268M1 | 2 | Cone | Length 198 MM (Dual Wheels) |
| 7 | 3716106M4 | 2 | Key | (Single Wheels) |
| | 3716106M4 | 2 | Key | (Dual Wheels) |
| 8 | 3010765X1 | 2 | Ring | (Single Wheels) |
| | 3010765X1 | 2 | Ring | (Dual Wheels) |
| 9 | 1440350X1 | 2 | Screw Metric | M6 X 20 (Single Wheels) |
| | 1440350X1 | 2 | Screw Metric | M6 X 20 (Dual Wheels) |
| 10 | 3010569X1 | 12 | Hex. Sock. Screw | M20 X 80 (Single Wheels) |
| | 3010569X1 | 12 | Hex. Sock. Screw | M20 X 80 (Dual Wheels) |
| 11 | 3791968M1 | 16 | Plug | (Single Wheels) |
| | 3791968M1 | 16 | Plug | (Dual Wheels) |
| 12 | **3712611M2** | 20 | Nut Special | M22 (Single Wheels) |
| | **3712611M2** | 20 | Nut Special | M22 (Dual Wheels) |
| 13 | 3787102M1 | | Key | (Dual Wheels) |
| 14 | 3786847M1 | | Cone | (Dual Wheels) |
| 15 | 3786848M1 | | Cone | (Dual Wheels) |
| 16 | 3786490M1 | | Hub | (Dual Wheels) |
| 17 | 3580230M1 | | Hex. Sock. Screw | M20 X 190 (Dual Wheels) |
| 18 | 3792488M2 | | Stud | [A] M22 X 78 (Dual Wheels) |

**FOOTNOTE [A]** WITH RIM STEEL
**FOOTNOTE [B]** WITH CAST WHEELS

1-WM05-008-A

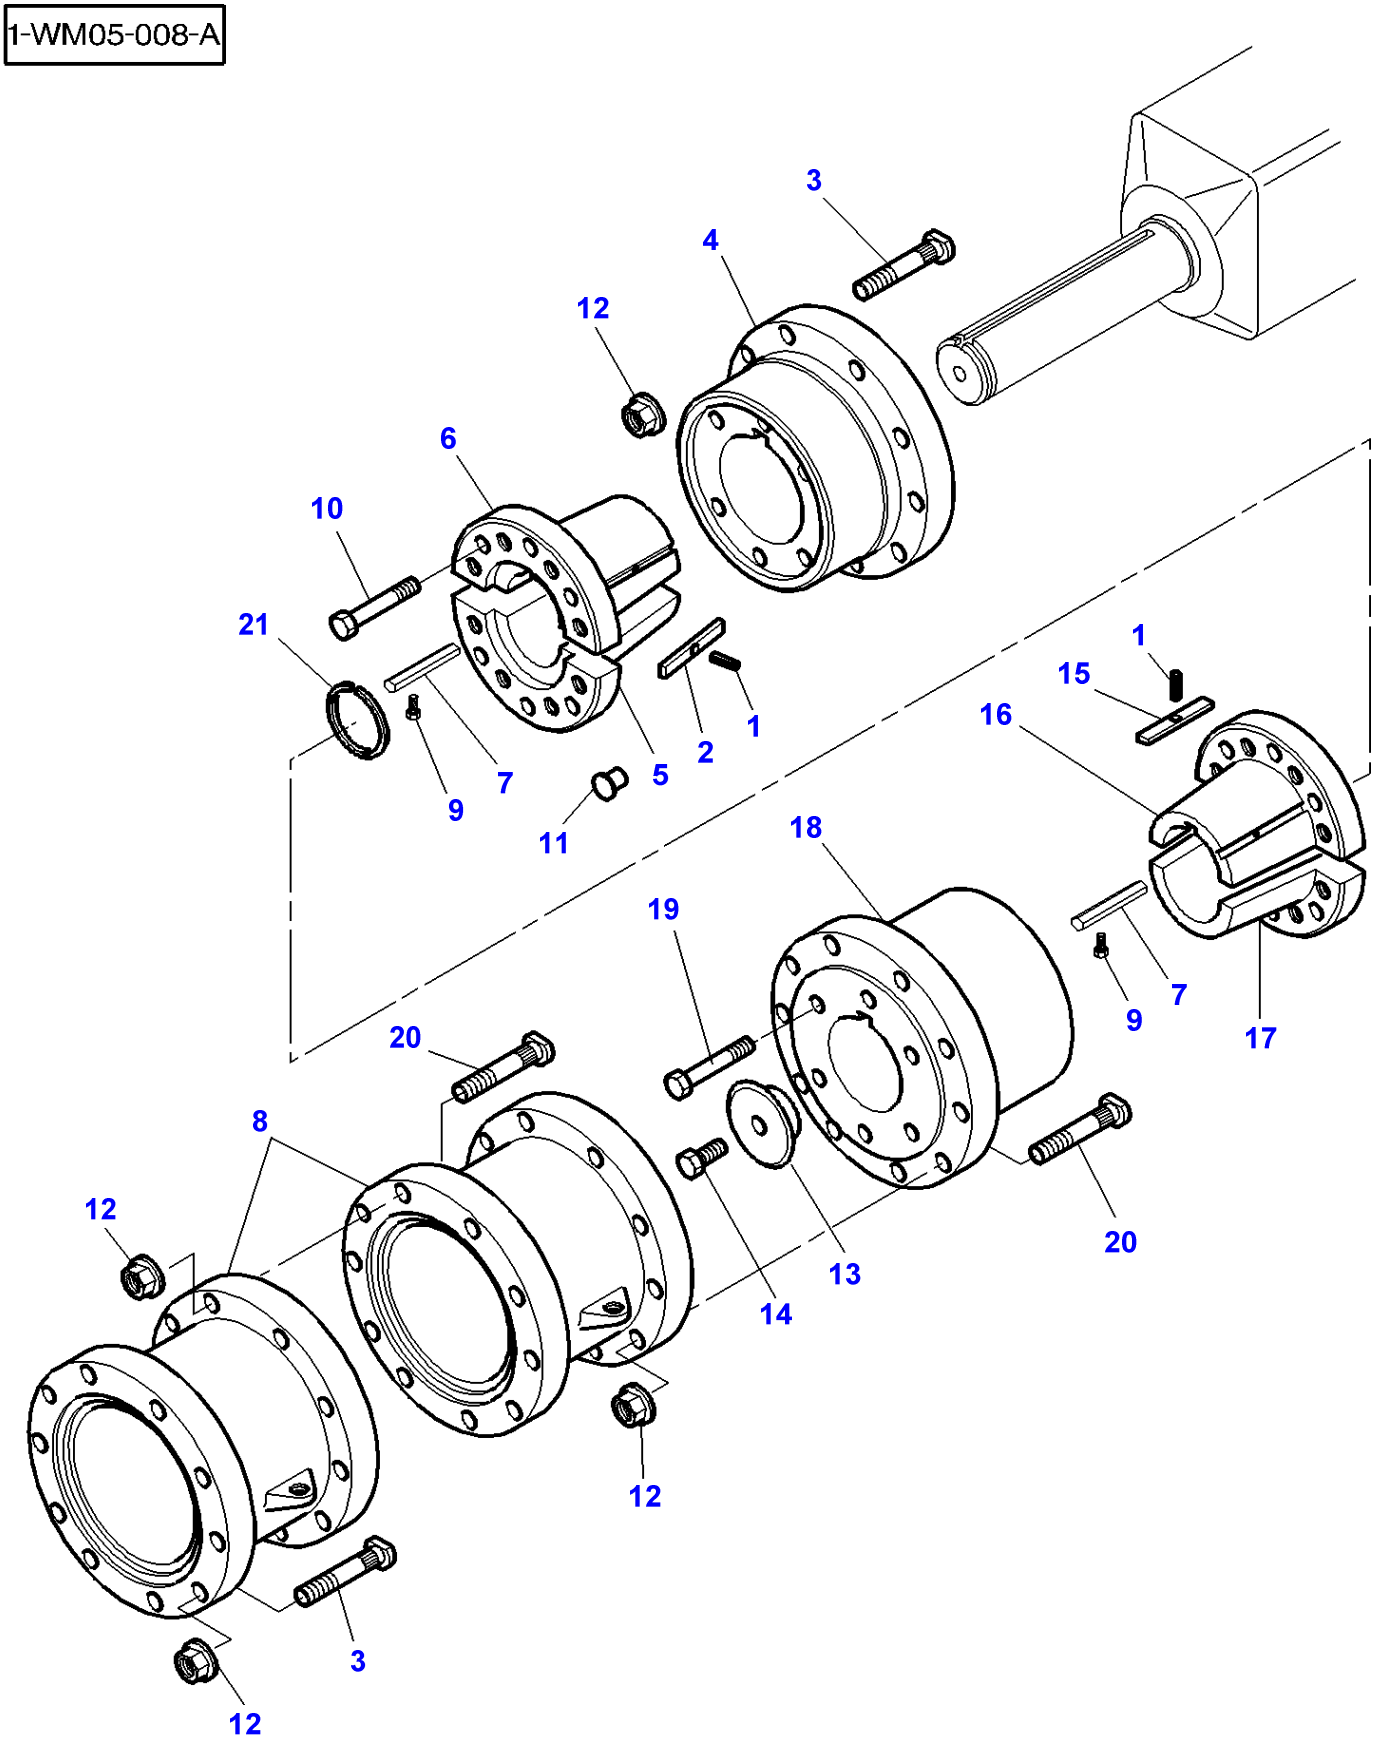


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 763786M1 | 4 | Pin | |
| 2 | 509816M3 | 4 | Key | |
| 3 | 3792488M2 | 40 | Stud | M22 X 78 |
| | 3792488M2 | 20 | Stud | [D,E] M22 X 78 |
| 4 | 3716107M2 | 2 | Hub | [A] |
| 5 | 3716269M1 | 4 | Cone | Length 198 MM |
| 6 | 3716268M1 | 4 | Cone | Length 198 MM |
| 7 | 3716106M4 | 4 | Key | |
| 8 | 3786577M2 | 4 | Spacer | |
| 9 | 1440350X1 | 4 | Screw Metric | M6 X 20 |
| 10 | 3010569X1 | 24 | Hex. Sock. Screw | M20 X 80 |
| 11 | 3791968M1 | 32 | Plug | |
| 12 | **3712611M2** | 80 | Nut Special | M22 X 1,5 |
| 13 | 3787332M1 | 2 | Thrust Washer | [C] |
| 14 | 3001462X1 | 2 | Hex. Sock. Screw | [C] M24 X 60 |
| 15 | 3787102M1 | 2 | Key | |
| 16 | 3786847M1 | 2 | Cone | Length 174 MM |
| 17 | 3786848M1 | 2 | Cone | Length 174 MM |
| 18 | 3786490M1 | 2 | Hub | [B] |
| 19 | 3580230M1 | 16 | Hex. Sock. Screw | M20 X 190 |
| 20 | **3716105M2** | 40 | Stud | M22 X 100 |
| | **3716105M2** | 60 | Stud | [D,E] M22 X 100 |
| 21 | 3010765X1 | 2 | Ring | [F] |

**FOOTNOTE [A]** 6 HOLES FIXING
**FOOTNOTE [B]** 8 HOLES FIXING
**FOOTNOTE [C]** WITH SHORT SHAFT
**FOOTNOTE [D]** WITH CAST WHEELS
**FOOTNOTE [E]** WITH RIM STEEL
**FOOTNOTE [F]** WITH LONG SHAFT

1-WX17-002-A

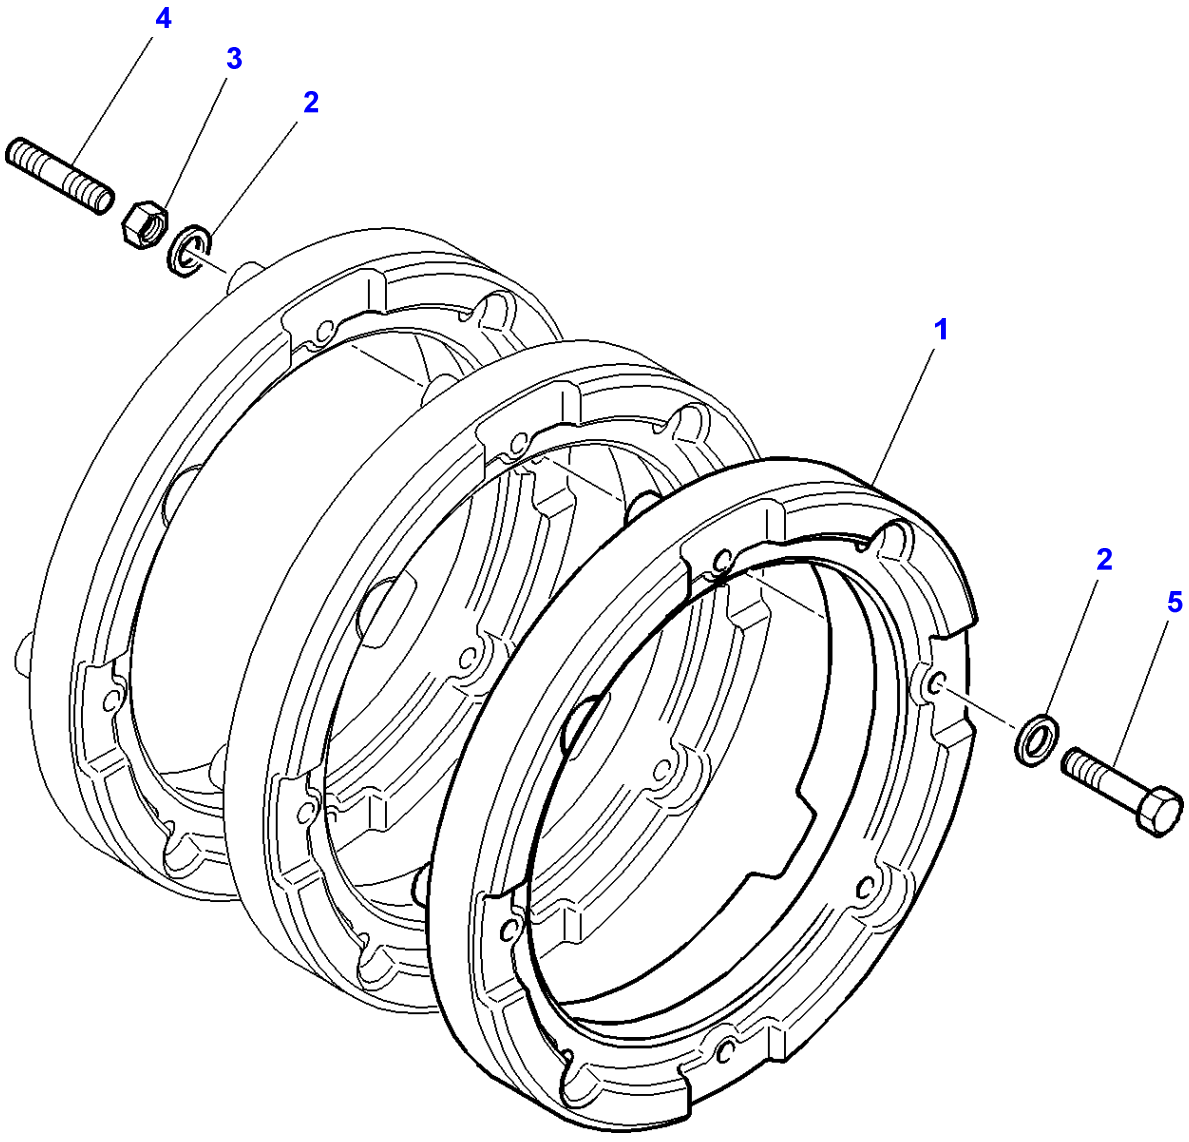


https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 3789077M1 | X | Weight | 50 KG |
| | 3789078M1 | X | Weight | 200 KG |
| 2 | 3019575X1 | X | Washer | Diameter 17-44 X 3 |
| 3 | 339034X1 | X | Nut | M16 |
| 4 | 3386466M1 | X | Stud | M16 X 65 |
| | 3009933X1 | X | Stud | M16-135 |
| 5 | 3009244X1 | X | Plough Bolt | M16 X 90 |
| | 3009248X1 | X | Plough Bolt | M16 X 130 |

1-WX37-008-A

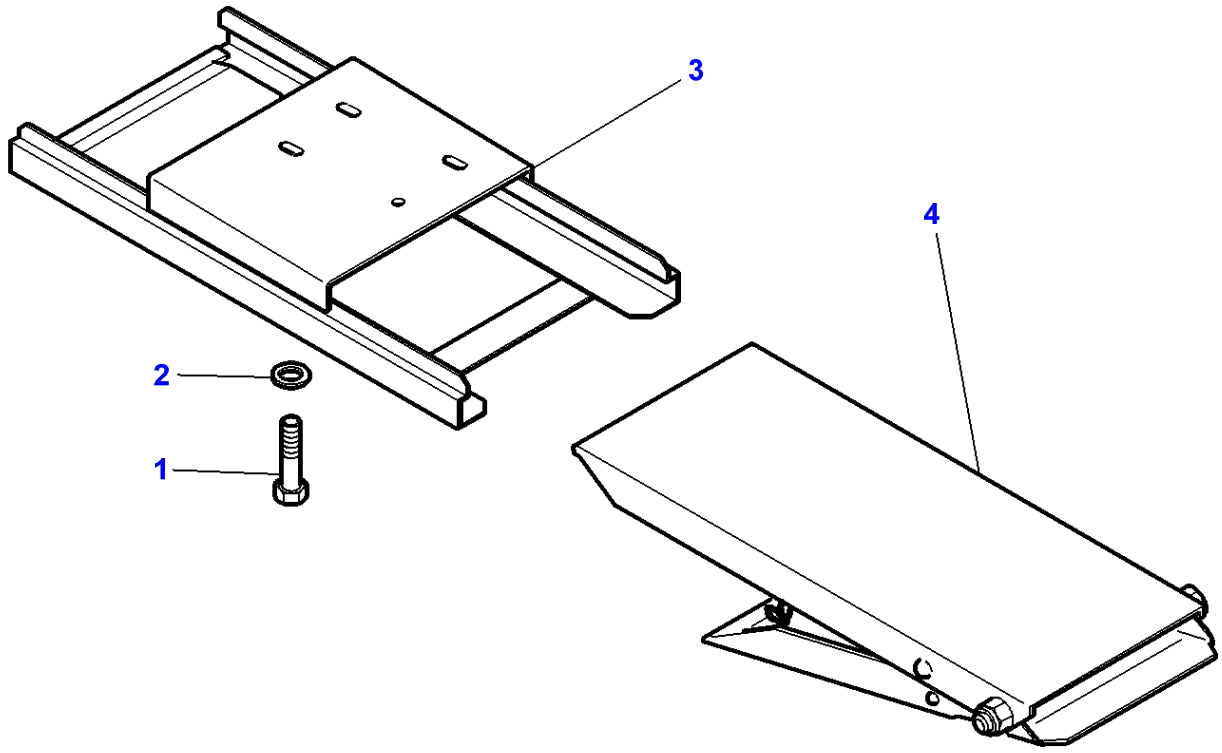

https://truckmanualshub.com/



| Item | Part Number | Qty | Description | Comments |
|---|---|---|---|---|
| 1 | 339124X1 | 4 | Hex. Sock. Screw | M8 X 16 |
| 2 | 390972X1 | 4 | Washer | |
| 3 | 4278080M2 | 1 | Support | |
| 4 | 4274765M1 | 1 | Chock | |