

JINMA TRACTORS

350



354



35 hp. Range.

0800 TRACTOR
0800 872 2767

Contents

Radiator Assembly	4
Air Intake System	6
Air Intake System II	7
Exhaust System I	8
Exhaust System II	9
Exhaust System III	10
Engine Control Mechanism	12
Single Stage Clutch	13
Dual stage clutch	14
Intermediate Axle	17
Intermediate Axle (4WD and Single Stage Clutch)	19
Intermediate Axle (Dual Stage Clutch)	22
Front Drive Release Fork (Four wheel drive)	24
Bracket & Sleeve	25
Front Axle Arm & Front Wheel Hub	27
Drag Link & Tie Rod	29
Front Central Drive (A) (Four Wheel Drive)	31
Front Central Drive (B) (Four Wheel Drive)	33
Final Drive Assembly (Front wheel drive)	35
Directive Wheel	38
Front Driving Wheel	39
Driving Wheel	40
Driving Wheel I	42
Pendulum Drawbar	43

Drawbar I.....	44
Drawbar II.....	45
Transmission Cover	46
Transmission Cover	48
Drive Gearbox Primary Shaft (Single Stage Clutch).....	50
Drive Gearbox Primary Shaft (For dual stage clutch).....	52
Drive Gearbox Main Shaft (For dual stage clutch)	56
Drive Gearbox Main Shaft.....	58
Differential	59
Differential Lock.....	60
Power Take-off (Meshing sleeve shift)	61
Drive Gearbox	63
Final Drive Assembly	66
Final Drive Assembly	68
Steering Gear	69
Transfer Case Drive Shaft Assembly (Four wheel drive).....	71
Brake and Operation Mechanism	74
Seat	76
Seat 1	77
Roll-over Protective Structure	79
Hood Panel and Bracket I.....	81
Hood Panel and Bracket II.....	83
Hood Panel and Bracket III.....	85
Mud Shield and Step	87
Battery Support Seat Assembly I.....	89


Battery Support Seat Assembly II.....	91
Tool Box	93
Fuel Tank.....	94
Lifter Assembly.....	96
Distributor Assembly.....	99
Suspension Mechanism Assembly	102
Air Brake Assembly	104
Power Steering Assembly	106
Side Hydraulic Steering Assembly.....	109
Pump and Pipe I	110
Pump and Pipe II	112
Hydraulic Take-off Pipe.....	114
Hydraulic Take-off Pipe (Multi-way valve).....	115
Electrical System Assy	117



Radiator Assembly

Radiator Assembly


Ser. No	Part No.	Description	Qty
1	TY395.12.010-1	Radiator assembly-----TY395/3100	1
	4L22T.12.010-1	Radiator assembly-----4L22T/BT	1
	ZN390.12.010-1	Radiator assembly-----ZN390/490	1
	304T.12.010-1	Radiator assembly-----SL2105	1
2	TY395.106	Rod	1
3	GB/T6170	Nut M8	2
4	TY395.101	Rubber tube	1
	SL3105BT.202	Rubber tube	1
	ZN390.102	Rubber tube	1
	TY395.101	Rubber tube	1
5	D16-ABA-50	Tube clamp $\Phi 38-\Phi 55$	4
6	TY395.102	Rubber tube	1
	Y385.109	Rubber tube	1
	4L22T.203	Rubber tube	1
	ZN390.101-1	Rubber tube	1
	SL2105.13.102	Rubber tube	1
7	BL-178	Rubber pad	2
8	GB/T97.1	Washer 12	2
9	GB/T889	Nut M12	2
10	B395.109	Shutter	1
11	GB/T91	Split pin 2 x 16	1
12	GB/T97.1	Washer 8	1



Air Intake System

Air Intake System


Ser. No	Part No.	Description	Qty
1	TY395.11.010A	Air filter assembly	1
	SL2105.11.010B	Air filter assembly	1
2	D16-ABA-65	Tube clampΦ50-65	4
3	TY395.104	Rubber tube 2	1
4	TY395.105-2	Air filter tube	1
5	TY395.103-1	Rubber tube 1	1
6	GB/T5783	Bolt M8 x 25	
7	GB/T93	Washer 8	



Air Intake System II

Air Intake System II


Ser. No	Part No.	Description	Qty
1	SL105.11.010	Air filter assembly	1
2	GB/T5783	Bolt M8 x 25	1
3	GB/T93	Washer 8	1



Exhaust System I

Exhaust System I

Ser No.	Part No.	Description	Qty
1	SL2105.10.010-1	Muffler assembly	1
	4L22T.10.010A	Muffler assembly	1
2	GB/T5783	Bolt M8 x 25	4
3	GB/T93	Washer 8	4
4	GB/T97.1	Washer 8	4
5	Y385.10.119	Muffler washer	1
6	GB/T5783	Bolt M10 x 30	2
7	GB/T93	Washer 10	2



Exhaust System II

Exhaust System II


Ser. No	Part No.	Description	Qty
1	SL2105.10.010-1	Muffler assembly	1
	4L22T.10.010A	Muffler assembly	1
2	GB/T5783	Bolt M8 x 25	4
3	GB/T93	Washer 8	4
4	GB/T97.1	Washer 8	4
5	Y385.10.119	Muffler washer	1
6	GB/T5783	Bolt M10 x 30	2
7	GB/T93	Washer 10	2
8	Y385.10.003	Cover assembly	1
9	GB/T93	Washer 6	6
10	GB/T5783	Bolt M6 x 20	6

			
11	TY385.10.014	Shield weld connection plate	1
12	TY385.10.013	Shield weld connection plate	1

Exhaust System III

Exhaust System III

Ser. No	Part No.	Description	Qty
1	GB/T6170	Nut M8	4
2	TY385.10.104A	Connection plate	1
3	TY295.10.106	Muffler fixed card	1
4	GB/T97.1	Washer 8	6
5	GB/T93	Washer 8	6
6	GB/T5783	Bolt M8 x 25	6
7	SL2105.10.010-1	Muffler assembly	1
8	GB/T5783	Bolt M10 x 30	4
9	GB/T93	Washer 10	4
10	Y385.10.119	Muffler washer	2

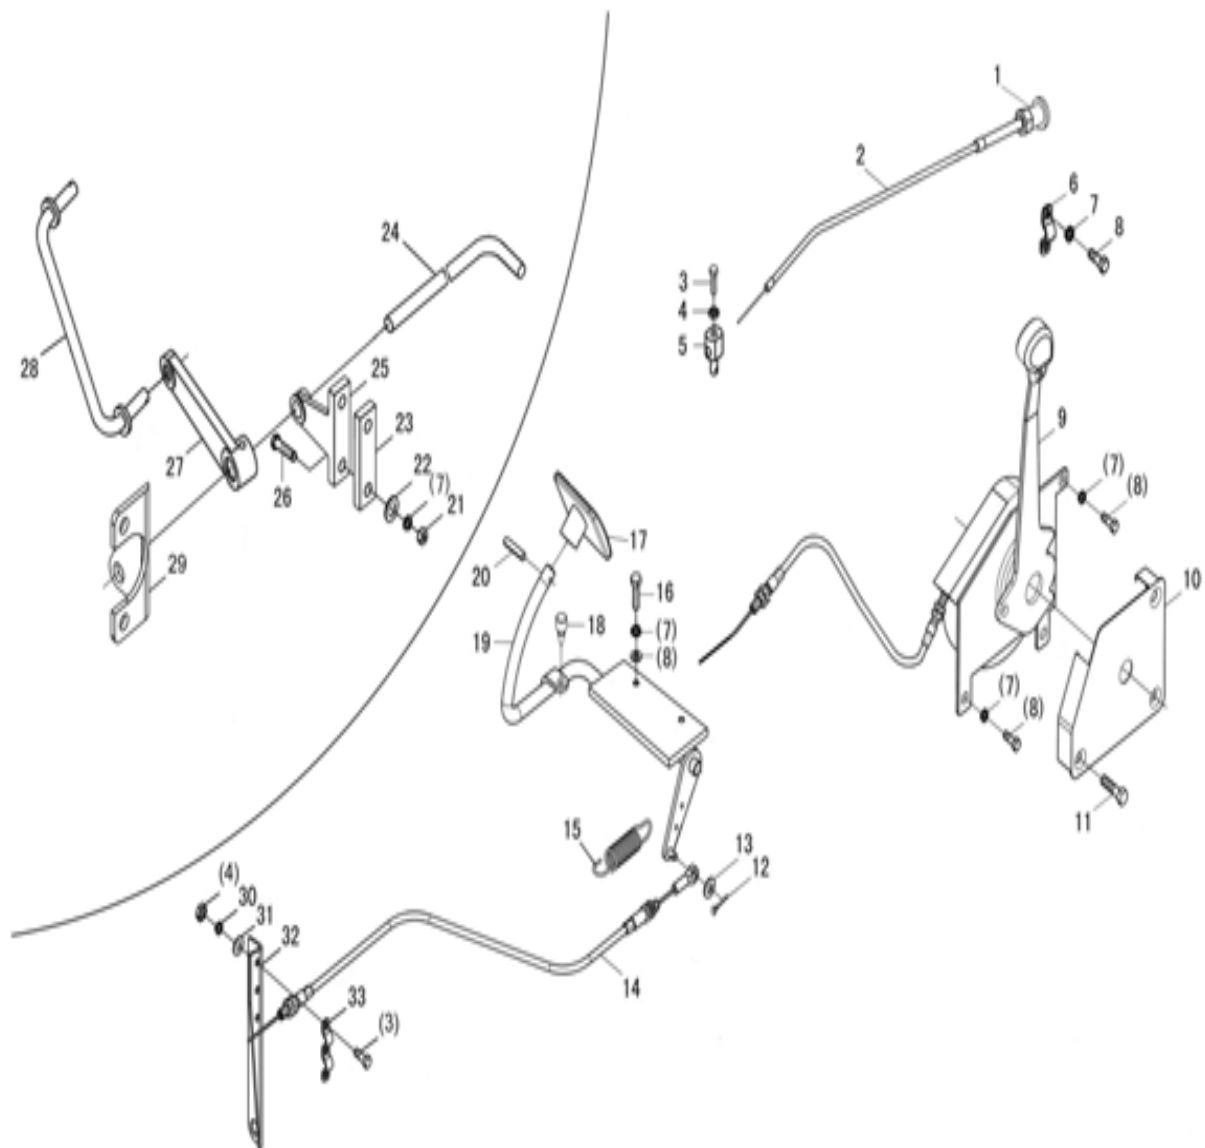


11	TY395.10.010	The muffler tube connection	1
12	GB/T6170	Nut M10	4

Engine Control Mechanism

Engine Control Mechanism

Ser. No	Part No.	Description	Qty
1	184.20.151	Bulb	1
2	300.20.025	Extinguish wire assembly	1
	300.20.025A	Extinguish wire assembly	1
	300.20.025B	Extinguish wire assembly	1
3	GB/T5783	Bolt M5 x 20	6
4	GB/T6170	Nit M5	5
5	300.20.213	Pin	2
6	300.20.117	Support (I)	1
7	GB/T93	Washer	5
8	GB/T5783	Bolt M6 x 16	5
9	300.20.030	Hand throttle assembly	1
10	700.20.127A	Cover, hand throttle	1
11	GB/T68	Bolt M8 x 30	3
12	GB/T91	Split pin 2 x 12	4
13	GB/T97.1	Washer 6	9
14	300.20.031	Foot throttle wire assembly	1
15	300.20.125	Return spring	1
16	GB/T5783	Bolt M8 x 20	2
17	700.20.101	Foot pedal	1
18	700.20.107	Rubber plug	1
19	300.20.027-1	Foot pedal rocker weldment	1
20	GB/T879.1	Spring-type straight pin-slotted 5 x 20	1
21	GB/T6170	Nut M8	2
22	GB/T97.1	Washer 8	2
23	300.20.204	Plate	1
24	300.20.120	Decompression handle	1
25	300.20.122	Support (III)	1
26	GB/T5783	Bolt M8 x 25	2
27	300.20.121	Decompression arm	1
28	300.20.016	Decompression pull rod (SL2105/ZN390)	1
	300.20.016B	Decompression pull rod (TY395/TY3100)	1
	300.20.016C	Decompression pull rod (Y480/Y485)	1
29	300.20.118-1	Support (SL2105)	1
	300.20.118B	Support (395/TY3100)	1
	300.20.118C	Support (y480/y485)	1
	300.20.118D	Support (NZ390)	1
30	GB/T93	Washer 5	5
31	GB/T97.1	Washer 5	5
32	300E.20.202	Support	1
33	300E.20.203	Press plate	1

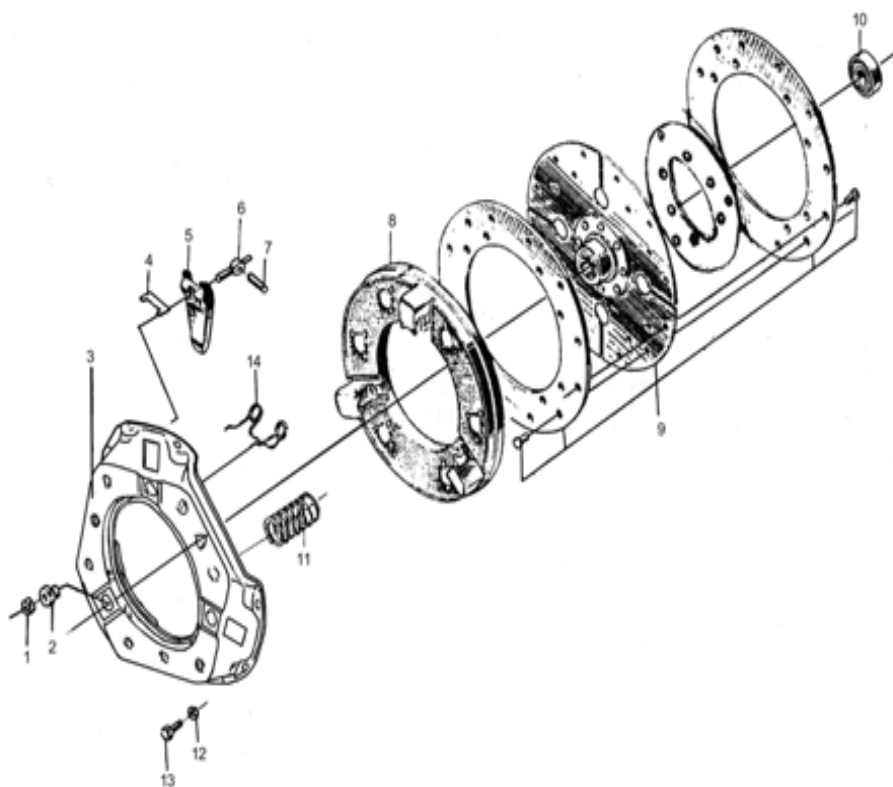

Single Stage Clutch

Single Stage Clutch

Ser. No	Part No.	Description	Qty
1	GB/T6173	Nut M10 x 1	3
2	130-160.1107	Adjusting nut, release lever	3
3	130-1601091B	Clutch cover	1
4	130-1601098B	Clamp iron, release lever	3
5	130-1601095B	Clutch release lever	3
6	130-1601104B	Adjusting bolt, release lever	3
7	130-16011038	Parallel pin, release lever	3
8	130-1601093B	Clutch pressure disk	1
9	NJ-130	Clutch driven disk assembly	1
10	GB/T278	Rolling bearing 6204-2RS	1
11	130-1601115	Clutch compression spring	9
12	GB/T93	Spring lock washer 8	6
13	GB/T5783	Bolt M8 x 20	6
14	130-1601096	Spring, release lever	3




Dual stage clutch

Dual stage clutch

Ser. No	Part No.	Description	Qty
1	GB/T276	Rolling bearing 6203-Z	1
2	304.21S.013	PTO clutch disc assy	1
3	304.21S.116	Pressure plate	1
4	304.21S.118	Spring	2
5	304.21S.117	Pressure plate	1
6	304.21S.018	Main clutch disc assy	1
7	184.21S.121	Adjusting bolt	3
8	304.21S.119	Main pressure plate	1
9	184.21S.122	Spring	3
10	GB/T97.1	Washer 10	10
11	GB/T6173	Nut M10 x 1	6
12	304.21S.120	Cover	1
13	184.21S.123	Connecting fork	3
14	184.21S.129	Bush	6
15	304.21S.130	Release lever	3
16	GB/T879	Pin 8 x 40	3
17	GB/T879	Pin 8 x 40	3
18	GB/T882	Axis pin B10 x 45	6
19	GB/T91	Pin 3.2 x 16	8
20	304.21S.103-1	York shaft	1
21	160.20.109	Spring	2
22	304.21S.102-1	York	1
23	304.21S.104-1	Bearing seat	1
24		Bearing 996713	1
25	GB/T5782-1986	Bolt M10 x 70	6
26	GB/T93-1987	Washer 10	6
27	184.21S.125	Adjusting nut	3
28	184.21S.124	Spring	3
29	184.21S.115	Pull rod	3
30	304.21S.106	Support release bearing seat	1
31	304.21S.113	Paper gasket, release bearing seat	1
32	304.21S.143-1	Compound bush	1
33	304.21S.111	Main clutch shaft	1
34	GB/T9877.1	Oil seal FB35 x 55 x 8	1
35	GB/T296	Bearing 3207-2Z	1
36	304.21S.150	Circlip for shaft 40	1
37	304.21S.109	Coupling driving sleeve, main clutch	1
38	304.21S.131	Secondary clutch shaft	1
39	304.21S.107-1	Seal sleeve	1
40	304.21S.142-1	Compound bush	1
41	304.37S.245-1	Bush	1
42	304.21S.108	Coupling driving sleeve, secondary clutch	1
43	GB/T894.1	Circlip for shaft 19	1
44	GB/T308	Steel ball 10.3188 G400b	4
45	GB/T6170	Nut M10	1
46	304.21S.138	Push rod	1
47	GB/T93	Washer 8	3
48	GB/T5783	Bolt M8 x 20	3
49	GB/T97.1	Washer 8	1
50	300.21.107	Adjusting fork, clutch push rod	1
51	GB/T882	Axis pin B8 x 30	1
52	304.21S.105	Release rock arm, clutch	1

Ser No.	Part No.	Description	Qty
53	JB/T7940.1	Oil cup M0 x 1	1
54	160.21.105	Pedal return spring	1
55	300.21.015A	Clutch pedal assembly	1



Intermediate Axle

Intermediate Axle

Ser. No	Part No.	Description	Qty
1	GB/T5783	Bolt M10 x 20	2
2	GB/T93	Spring lock washer 10	6
3	300.21.115	Bush	1
4	300.21.141	Cover plate	1
5	300.21.142	Paper gasket, cover plate	1
6	GB/T93	Spring lock washer 12	10
7	GB/T5782	Bolt M12 x 95 -8.8	1
8	GB/T6175	Nut M12	4
9	300.21.229	Plug	1
10	GB/T119	Parallel pin D8 x 16	2
11	300.21.114-1	Intermediate axle housing	1
12	350.21.131	Clutch shaft	1
13	300.21.140	Paper gasket, intermediate axle and transmission	1
14	300.21.146	Coupling pin	1
15	300.21.143	Driving coupling	1
16	GB/T97.1	Plain washer 5	1
17	GB/T91	Split pin 2 x 12	1
18	300.21.215	Clip (2)	2
19	GB/T5783	Bolt M10 x 25	4
20	300.21.112	Cover plate	1
21	GB/T91	Split pin 3.2 x 16	2
22	GB/T97.1	Plain washer	1
23	300.21.015-2	Clutch pedal assembly	1
24	300.21.106	Clutch push rod	1
25	160.21.105	Pedal return spring	1
26	JB/T7940.1	Oil cup M10 x 1	3
27	GB/T6170	Nut M10	2
28	GB/T882	Clevis pin with head B x 30	1
29	300.21.107	Adjusting fork, clutch push rod	1
30	GB/T97.1	Plain washer 8	1
31	300.21.105	Release rock arm, clutch	1
32	350.21.103	Release fork shaft, clutch	1
33	160.21.118	Bush	3
34	GB/T5783	Bolt M10 x 45	1
35	GB/T119	Parallel pin D12 x 24	2
36	300.21.111	Paper gasket, intermediate axle	1
37	350.21.101-1	Support, release bearing seat	1
38	GB/T93	Spring lock washer 8	3
39	GB/T5783	Bolt M8 x 20	3
40	160.21.109	Return spring, release bearing seat	1
41	350.21.130	Return bearing seat	1
42		Rolling bearing 996911	1
43	GB/T879	Pin 5 x 40	3
44	GB/T879	Pin 8 x 40	3
45	304.21S.102-1	Clutch release fork	1
46	GB/T5782	Bolt M12 x 80-8.8	5
47	GB/T898	Stud AM12-M12 X 100-8.8	1
48	GB/T898	Stud AM12-M12 X 190-8.8	3



Intermediate Axle (4WD and Single Stage Clutch)

Intermediate Axle (4WD and Single Stage Clutch)

Ser No.	Part No.	Description	Qty
1	GB/T5783	Bolt M10 x 20	2
2	GB/T93	Spring lock washer 10	6
3	300.21.141	Cover plate	1
4	GB/T93	Spring lock washer 12	10
5	GB/T5782	Bolt M12 x 95-8.8	1
6	GB/T5783	Bolt M10 x 25	4
7	300.21.112	Cover plate	1
8	300.21.230	Paper gasket, cover plate	1
9	GB/T6175	Nut M12	4
10	304.21.114-1	Intermediate axle housing	1
11	354.21.131	Clutch shaft	1
12	300.21.140	Paper gasket between intermediate axle and transmission	1
13	GB/T9877.1	Oil Seal FB30 x 50 x 8	2
14	GB/T894.1	Circlip for shaft 30	2
15	GB/T276	Rolling bearing 6206	1
16	304.21.302	Spacing sleeve	1
17	300.21.146	Coupling pin	1
18	300.21.143	Driving coupling	1
19	GB/T91	Split pin 2 x 12	1
20	GB/T119	Parallel pin D10 x 22	4
21	GB/T91	Spit pin 3.2 x 16	2
22	GB/T97.1	Plain washer 10	1
23	300.21.015-2	Clutch pedal	1
	304.21.015	Clutch pedal (For Power Steering)	1
24	300.21.106	Clutch push rod	1
25	160.21.105	Pedal return spring	1
26	JB/T7940.1	Oil cup M10 x 1	3
28	GB/T6170	Nut M10	2
29	GB/T882	Clevis pin with head B8 x 30	1
30	300.21.107	Adjusting fork, clutch push rod	1
31	GB/T97.1	Plain washer 8	1
32	300.21.105	Release rock arm, clutch	1
33	350.21.103	Release fork shaft, clutch	1
34	160.21.118	Bush	3
35	GB/T5783	Bolt M10 x 45	1
36	GB/T119	Parallel pin D12 x 25	2
37	300.21.111	Paper gasket, intermediate axle	1
38	GB/T119	Parallel pin D8 x 16	2
39	300.21.229	Plug	1
40	304.21.241	Paper gasket, release bearing seat	1
41	354.21.101-1	Support release bearing seat	1
42	GB/T93	Spring lock washer 8	3
43	GB/T5783	Bolt M8 x 20	3
44	160.21.109	Return spring, release bearing seat	1
45	350.21.130	Release bearing seat	1
46	D18-996911	Rolling bearing 996911	1
47	GB/T879	Pin 5 x 40	3
48	GB/T879	Pin 8 x 40	3
49	304.21S.102-1	Clutch release fork	1
50	GB/T5782	Bolt M12 x 80-8.8	5
51	GB/T898	Stud AM12-M12 x 100-8.8	1
52	300.21.115	Bush	1
53	GB/T898	Stud AM12-M12 x 190-8.8	3


Ser No.	Part No.	Description	Qty
54	300.21.142	Paper gasket, cover plate	1



Intermediate Axle (Dual Stage Clutch)

Intermediate Axle (Dual Stage Clutch)

Ser. No	Part No.	Description	Qty
1	GB/T5782	Bolt M12 x 45-10.9	5
2	GB/T93	Spring lock washer 12	10
3	GB/T898	Stud AM12-M12 x 100-8.8	4
4	304.21S.145	Paper gasket, cover plate	1
5	304.21S.146	Cover plate	1
6	GB/T5783	Bolt M 120 x 20	4
7	160.21.118	Bush	3
8	300.21.115	Bush	1
9	GB/T5782	Bolt M12 x 50-10.9	1
10	300.21.230	Paper gasket, cover plate	1
11	300.21.112	Cover plate	1
12	GB/T93	Spring lock washer 10	4
13	GB/T5783	Bolt M10 x 25	4
14	GB/T6175	Nut M12	4
15	300.21.140	Paper gasket between intermediate	1
16	GB/T119	Axle and transmission	2
17	300.210229	Parallel pin D8 x 16	1
18	GB/T119	Plug	4
19	JB/T7940.1	Parallel pin D10 x 22	3
20	GB/T5783	Oil cup M10 x 45	1
21	GB/T6170	Nut M10	1
22	304.21S.114-1	Intermediate axle housing	1
23	GB/T119	Parallel pin D12 x 25	2
24	300.21.111	Paper gasket, intermediate axle	1

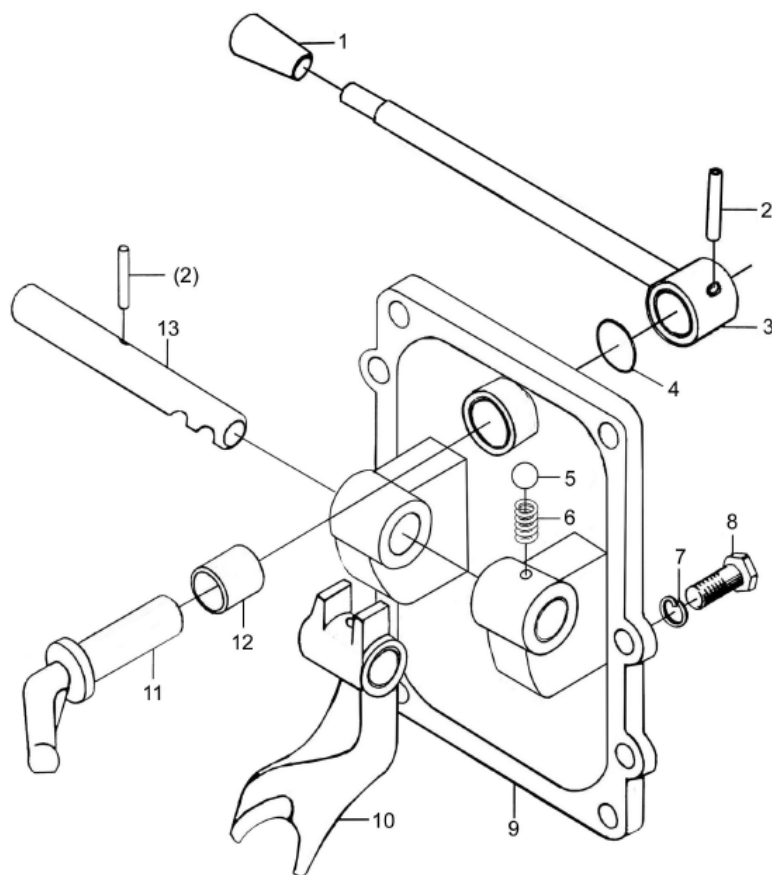

Front Drive Release Fork (Four wheel drive)

Front Drive Release Fork (Four wheel drive)

Ser. No	Part No.	Description	Qty
1	184.37.043	Handle control lever assembly	1
2	GB/T879	Pin 5 x 24	2
3	304.21.020-2	Control rod weldment assembly	1
4	GB/T3452.1	O-ring 15 x 2.65	1
5	GB/T308	Steel ball 8.7312-G400b	1
6	160.37.148	Locking spring, realize fork shaft	1
7	GB/T93	Spring lock washer 10	6
8	GB/T5783	Bolt M10 x 25	6
9	304.21.237-2	Seat plate, release fork assembly	1
10	304.21.233	Front drive release fork	1
11	304.21.234	Shaft, release fork head	1
12	304.21.235	Bush	1
13	304.21.236	Shaft, front drive release fork	1



Bracket & Sleeve

Bracket & Sleeve


Ser. No	Part No.	Description	Qty
1	GB/T5786	Bolt M14 x 1.5 x 30	2
2	GB/T93	Spring lock washer 14	12
3	300.31.015	Pendulum shaft weldment assembly	1
4	300.21.215	Clip (2)	1
5	GB/T5781	Bolt M10 x 18	1
6	GB/T93	Spring lock washer 10	1
7	300.31.113	Washer	2
8	BL-178	Rubber pad	2
9	GB/T5782	Bolt M16 x 55	4
		[Contrary fixing bolt M16 x 55 upside 4 holes to connect bracket and engine]	
	GB/T898	Stud AM16 –M16 X 50	2
		[Fixing stud M16 – M16 x 50 into downside 2 holes to connect bracket and engine]	
10	300.31.101-2	Bracket	6
11	GB/T93	Spring lock washer 16	2
12	GB/T6175	Nut M16	
		[Fixing nut N16 to downside to connect bracket and engine]	2
13	GB/T889	Nut M12	1
14	160.31.103	Washer of pendulum shaft	2
15	GB/T3452.1	O-ring 30 x 2.65	2
16	300.31.118	Bush of pendulum shaft	1
17	300.31.020	Sleeve weldment assembly	1
	300.31.020A	Sleeve weldment assembly (For Power Steering)	
18	GB/T7940.2	Oil cup M10 x 1	1
19	GB/T6176	Nut M14 x 1.5	6
20	220.31.105	Liner	6
21	GB/T5782	Bolt M14 x 1.5 x 85	6
22	GB/T898	Bolt M14 x 55-8.8 or Stud AM14-M14 x 1.5 x 50	4



Front Axle Arm & Front Wheel Hub

Front Axle Arm & Front Wheel Hub


Ser. No	Part No.	Description	Qty
1	300.31.022-1	Front axle arm weldment assembly (Right)	1
	300.31.022B	Front axle arm weldment assembly (Right) (For high ground clearance)	1
2	300.31.014	Steering knuckle assembly	2
	300.31.014A	Left-Steering knuckle assembly (For Power Steering)	1
	300.31.014B	Steering knuckle assembly (For high ground clearance)	2
3	JB/T7940.1	Oil cup M10 x 1	4
4	GB/T3452.1	Oil-ring 34.5 x 3.55	2
	GB/T9877.1	Oil seal FB35 x 50 x 8 (for high ground clearance)	2
5	300.31.123	Bush	4
6	300.31.021-1	Front axle arm weldment assembly (Left)	1
	300.31.021B	Front axle arm weldment assembly (Left) (For high ground clearance)	1
7	GB/T301	Rolling bearing 51207	2
8		Rubber pad	2
9		Oil seal FB45 x 65 x 8	4
10		Key 10 x 25	2
12	300.31.111	Oil seal 40 x 64 x 8	4
13	300.31.112	Spacing ring seal	2
14	GB/T297	Rolling bearing 32206	2
15	300.39.113	Wheel fixing screw	8
16	300.31.105	Front wheel hub	2
17	300.39.114	Wheel fixing nut	8
19	GB/T297	Rolling bearing 30305	2
20	300.31.107	Washer	2
21	300.31.108	Nut M22 1.5	2
22	GB/T91	Split pin 5 x 40	2
23	300.31.109	Paper gasket	2
24	300.31.106	Bearing cap	2
25	GB/T93	Spring lock washer 6	6
26	GB/T5781	Bolt M6 x 12	6

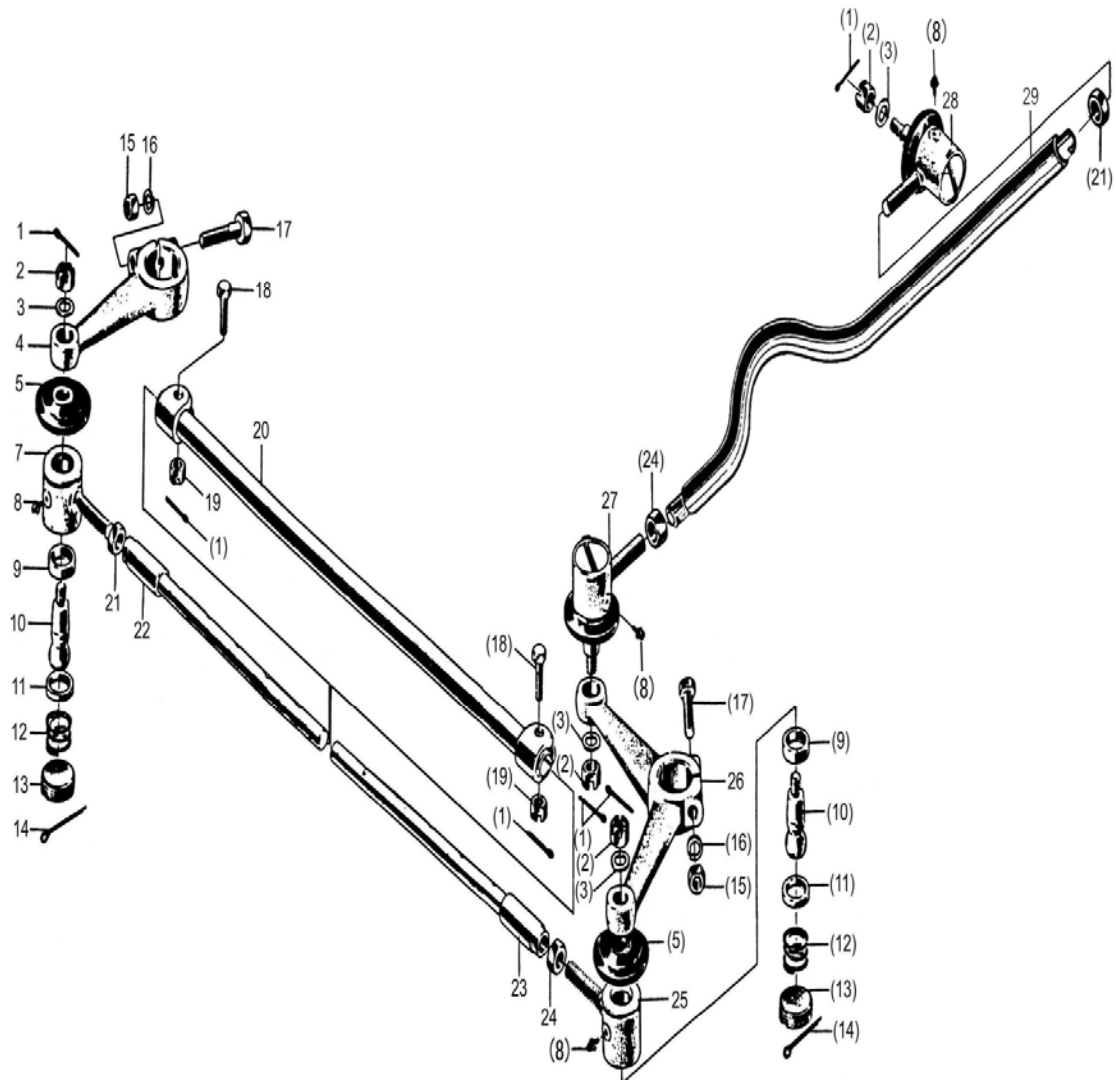

Drag Link & Tie Rod

Drag Link & Tie Rod


Ser No.	Part No.	Description	Qty
1	GB/T91	Split pin 3.2 x 26	6
2	GB/T9459	Nut M12 x 1.5	4
3	GB/T97.1	Plain washer 12	4
4	300.31.104	Right steering knuckle arm	1
5	300.31.145-1	Oil seal boot joint	2
7	300.31.147-2	Pull rod joint (Right)	1
8	JB/T7940.1	Oil cup M10 x 1	4
9	300.31.140-1	Ball pin seat	2
10	300.31.139-1	Ball pin	2
11	300.31.141-1	Ball pin cap	2
12	300.31.142-1	Compression spring	2
13	300.31.143-1	Screw cap	2
14	GB/T91	Split pin 2.5 x 55	2
15	GB/T6170	Nut M12	2
16	GB/T93	Spring lock washer 12	2
17	GB/T5782	Bolt M12 x 70	2
18	GB/T31.1	Bolt M12 x 45	2
19	GB/T6178	Nut M12	2
20	300.31.023	Main tie rod assembly	1
	300.31.023B	Main tie rod assembly (For high ground clearance)	1
21	GB/T6176	Nut M16 x 1.5	2
22	300.31.024	Secondary tie rod assembly (Right)	1
23	300.31.025	Secondary tie rod assembly (Left)	1
24	GB/T6176	Nut M16 x 1.5 (Left)	1
25	300.31.146-2	Pull rod joint (Left)	1
26	300.31.103	Left steering knuckle arm	1
	300.31.310	Left steering knuckle arm I (For power steering)	1
27	300.31.026-1	Steering joint assembly (Left)	1
28	300.31.027-1	Steering joint assembly (Right)	1
29	300.31.148B	Drag link	1
		664mm—For SL2105 engine	
		820mm—For TY395 or TY3100 engine	
		For 4L22T engine	
		For ZN390 engine	
	304.31.024A	903mm—For ZN490 or 4L22BT engine	

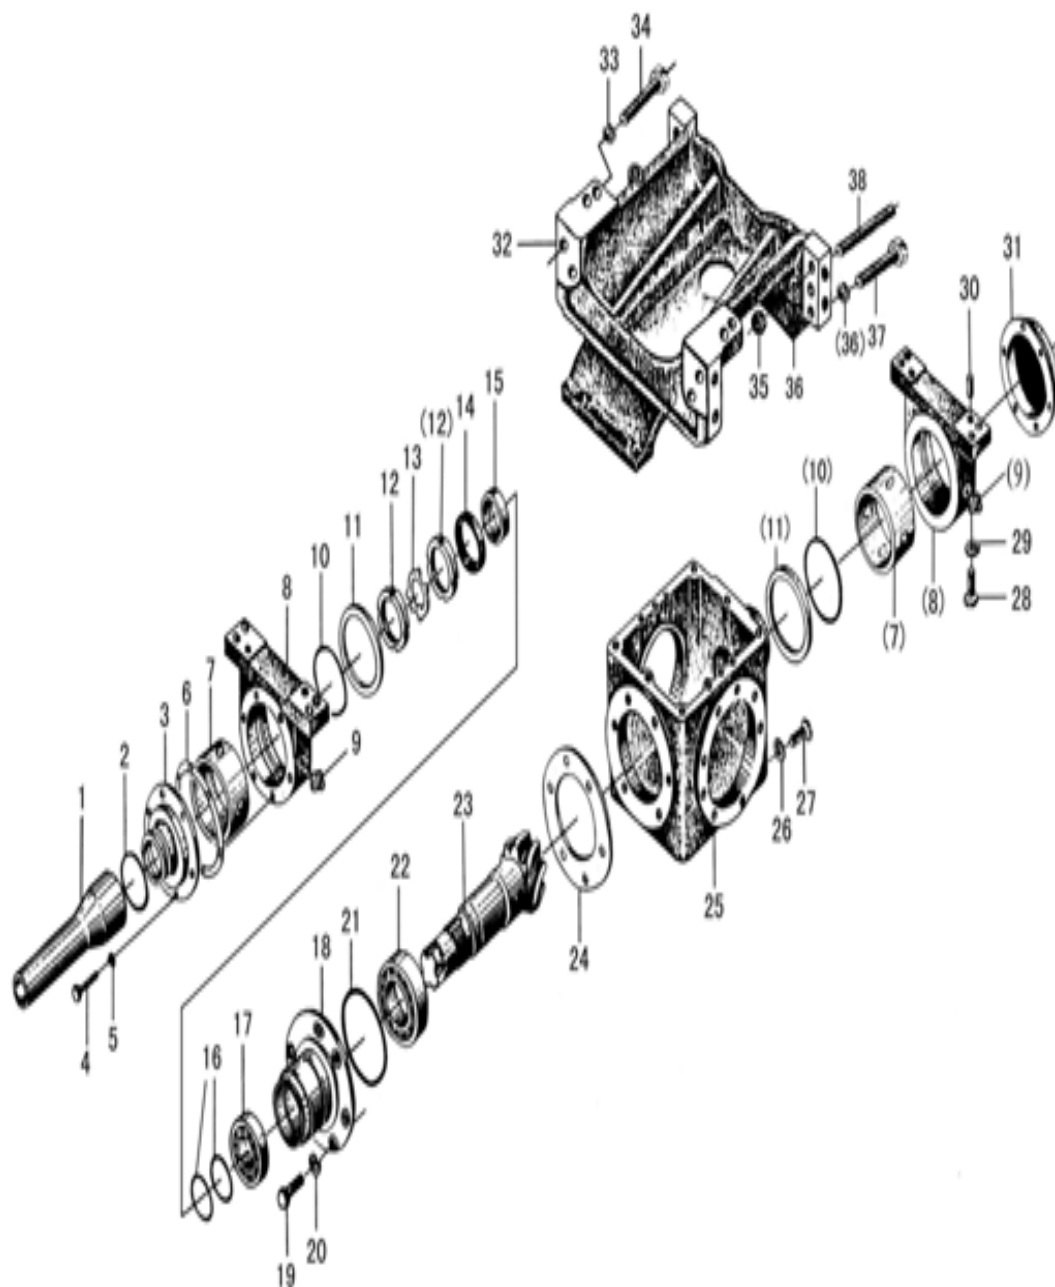

Front Central Drive (A) (Four Wheel Drive)

Front Central Drive (A) (Four Wheel Drive)


Ser. No	Part No.	Description	Qty
1	304.31.014-1	Dust pipe weldment	1
2	GB/T3452.1	O-ring 48 .7 x 3.55	1
3	304.31.211	Dust pipe seat	1
4	GB/T5780	Bolt M6 x 12	12
5	GB/T93	Spring lock washer 6	12
6	304.31.114	Paper gasket	2
7	304.31.123-1	Pendulum lining	2
8	304.31.124	Pendulum seat	2
9	JB/T7940.1	Oil cup M10 x 1	2
10	GB/T3452.1	O-ring 85 x 2.65	2
11	304.31.113	Thrust washer	2
12	GB/T810	Nut (M33 x 1.5)	2
13	GB/T858	Washer 33	1
14	GB/T9877.1	Oil seal FB45 x 70 x 8	1
15	304.31.122-1	Supporting sleeve	1
16	GB/T3452.1	O-ring 32.5 x 3.55	2
17	GB/T297	Rolling bearing 302007	1
18	304.31.106	Shaft seat	1
19	GB/T5783	Bolt M10 x 30	6
20	GB/T93	Spring lock washer 10	6
21	GB/T3452.1	O-ring 95 x 2.65	1
22	GB/T297	Rolling bearing 30208	1
23	304.31.117	Driving gear	1
24	304.31.502	Adjusting shim	Δ
25	304.31.104-1	Main drive case	1
26		Washer 16	1
27	GB/T5786	Bolt M16 x 1.5 x 18	1
28	304.31.220	Bush	1
29	GB/T5783	Bolt M12 x 30	8
30	GB/T93	Spring lock washer 12	8
31	GB/T119	Parallel pin D8 x 16	4
32	304.31.111	Dust cap	1
33	304.31.101	Bracket	1
34	GB/T93	Spring lock washer 14	4
35	GB/T5786	Bolt M14 x 55-8.8	4
36	GB/T6175	Nut M16	6
37	GB/T93	Spring lock washer 16	6
38	GB/T5782	Bolt M16 x 55	4
39	GB/T898	Stud AM16-M16 x 50	2

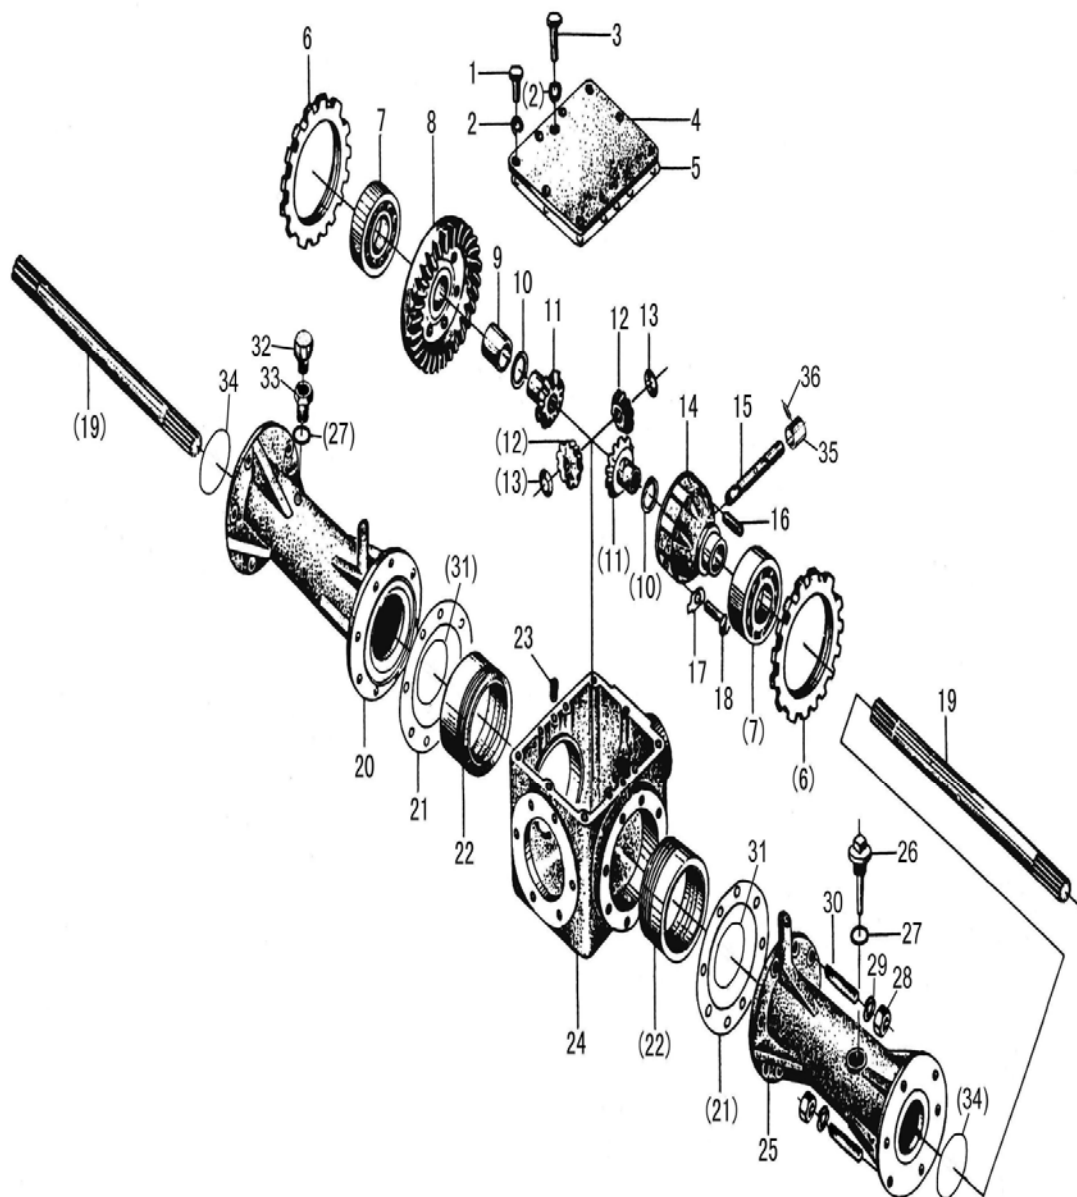

Front Central Drive (B) (Four Wheel Drive)

Front Central Drive (B) (Four Wheel Drive)

Ser. No	Part No.	Description	Qty
1	GB/T5781	Bolt M8 x 25	10
2	GB/T93	Spring lock washer 8	1
3	304.31.138	Limit crew	2
4	304.31.130	Case cover	1
5	304.31.131	Paper gasket	1
6	304.31.109	Adjusting nut	2
7	GB/T297	Rolling bearing 30211	2
8	304.31.118	Driven gear	1
9	304.31.119-1	Bush	2
10	304.31.120	Plain washer	2
11	304.31.103	Differential side gear	2
12	304.31.102	Planet gear	2
13	304.31.121	Spherical washer	2
14	304.31.107	Differential cover	1
15	304.31.116-2	Planet gear shaft	1
16	GB/T879	Pin 6 x 30	1
	GB/T879	Pin 6 x 30	1
17	GB/T861.1	Internal tooth lock washer 10	6
18	GB/T5785	Bolt M10 x 1 x 85	6
19	304.31.108-1	Differential axle	2
20	304.31.105-2	Differential axle housing	1
21	304.31.115-1	Paper gasket	2
22	304.31.110	Bearing seat	2
23	GB/T72	Screw M8 x 22	2
24	304.31.104-1	Front case	1
25	304YZ.31.105-2	Differential axle housing	1
26	184.31.030	Dipstick assembly	1
27		Washer 16	2
28	GB/T6171	Bolt M12 x 1.25	28
29	GB/T93	Spring lock washer 12	28
30	GB/T889	Stud AM12-M12 x 1.25 x 30	28
31	GB3452.1	O-ring 112 x 2.65	2
32	184.31.060	Vent pipe	1
33	184.31.125-1	Vent screw plug	1
34	GB3452.1	O-ring 80 x 2.65	2
35	304.31.201	Sleeve	1
36	GB/T879	Pin 3x 20	1

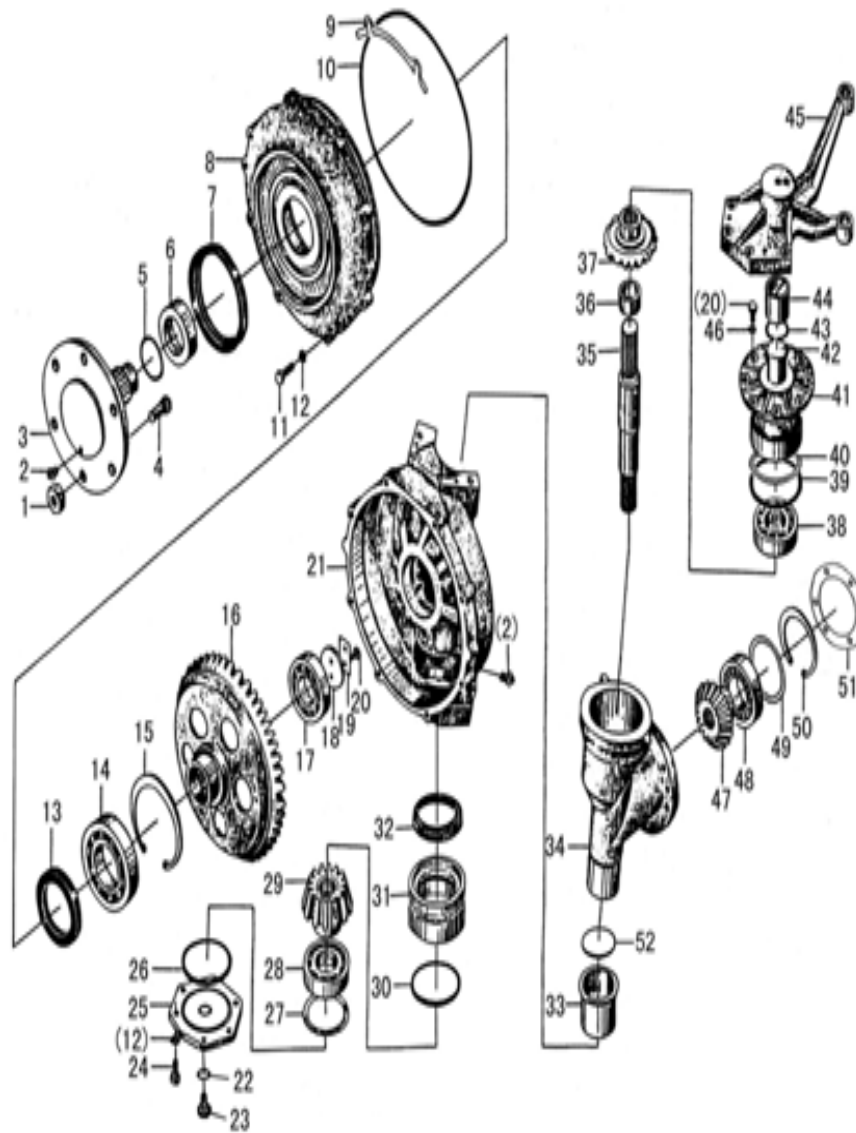


Final Drive Assembly (Front wheel drive)

Final Drive Assembly (Front wheel drive)

Ser No	Part No.	Description	Qty
1	300.39.114	Wheel fixing nut	12
2	JB/t7940.1	Oil cup M10 x 1	4
3	304.31.179-3	Front driving shaft	2
4	300.39.113	Wheel fixing screw	12
5	Gb3452.1	O-ring 46.2 x 3.55	2
6	304.31.178-2	Liner	2
7	304.31.180	End face oil seal	2
8	304.31.151	Front drive end cover	2
9	304.31.173	Adjusting shim 0.2	Δ
	304.31.174	Adjusting shim 0.5	Δ
	304.31.175	Adjusting shim 1.0	Δ
10	GB/T3452.1	O-ring 258 x 5.3	2
11	GB/T5783	Bolt M10 x 35	16
12	GB/T93	Spring lock washer 10	28
13	GB/T9877.1	Oil seal FB65 x 90 x 10	2
14	GB/T276	Rolling bearing 310	2
15	GB/T893.1	Circlip for hole 110	2
16	304.31.153	Large gear, front final drive	2
17	GB/T283	Rolling bearing NF208E	2
18	304.31.182	Clamping plate	2
19	304.31.181	Safety washer	2
20	GB/T5783	Bolt M8 x 20 (40Cr, hardened and tempered)	20
21	304.31.150	Right side reduction housing	1
	304.31.154	Left side reduction housing	1
22	GB3452.1	O-ring 10 x 2.65	2
23	304.31.152	Plug	2
24	GB/T5783	Bolt M10 x 25 (40Cr, hardened and tempered)	12
25	304.31.172-1	Lower end cover	2
26	GB/T3452.1	O-ring 90x 2.65	2
27	304.31.169	Adjusting shim 0.2	Δ
	304.31.170	Adjusting shim 0.5	Δ
	304.31.171	Adjusting shim 1.0	Δ
28	GB/T297	Rolling bearing 30210	2
29	304.31.167	Pinion gear, front final drive	2
30	GB3452.1	O-ring 63 x 5.3	2
31	304.31.215-1	Supporting sleeve	2
32	304.31.217	Dust ring	2
33	304.31.177	Boot	2
34	304.31.161	Left king pin housing	1
	304.31.187	Right king pin housing	1
35	304.31.183	King pin	2
36	304.31.165	Supporting sleeve	2
37	304.31.184	Bevel bear (2)	2
38	GB/T297	Rolling bearing	2
39	GB/T3452.1	O-ring 85 x 5.3	2
40	304.31.157	Adjusting shim 0.2	Δ
	304.31.158	Adjusting shim 0.5	Δ
	304.31.159	Adjusting shim 1.0	Δ
41	304.31.160	King pin shaft seat	2
42	304.31.216	King pin shaft head	2
43	GB3452.1	O-ring 37.5 x 3.55	2
44	304.31.156-1	Bush	2


Ser. No	Part No.	Description	Qty
45	304YZ.31.155-1	Left steering knuckle arm	1
	304.31.186-1	Right steering knuckle arm	1
46	GB/T93-1987	Spring lock washer 8	16
47	304.31.166	Bevel gear (1)	2
48	GB/T276	Rolling bearing 6209	2
49	304.31.162	Adjusting shim 0.2	Δ
	304.31.163	Adjusting shim 0.5	Δ
	304.31.164	Adjusting shim 1.0	Δ
50	GB/T893.1	Circlip for hole 85	2
51	304.31.231	Paper gasket	2
52	GB/T452.1-1992	O-ring 51.5 x 2.65	2

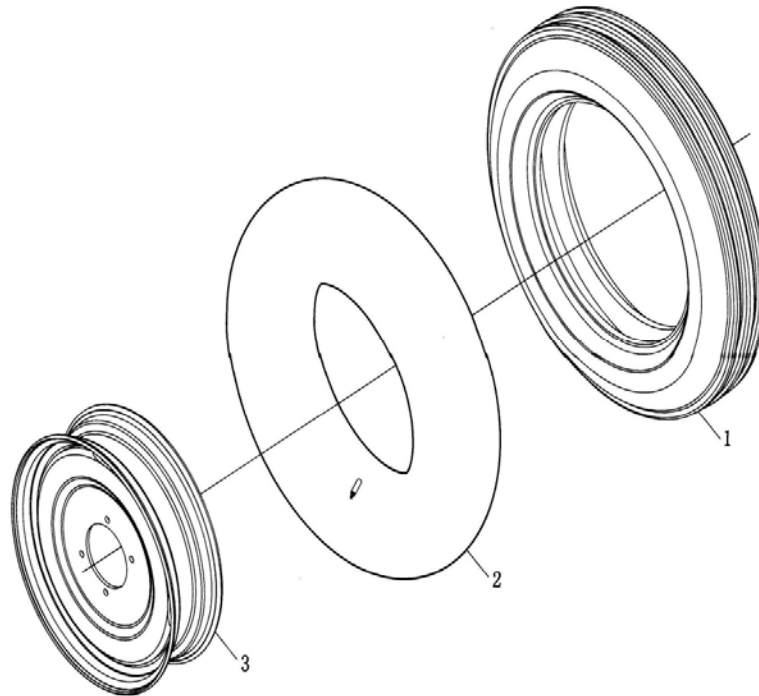

Directive Wheel

Directive Wheel


Ser. No	Part No	Description	Qty
1	GB/T2979 GB/T2979	Tyre 5.00-15	2
		Tyre 6.00-16	2
		Lawn Tyre (for gardening tractor)	2
2	GB/T2979 GB/T2979	Tube 5.00-15	2
		Tube 6.00-16	2
		Lawn Tube (for gardening tractor)	2
3	300.32.011	Rim assembly directive wheel	2
	400.32.011	Rim assembly directive wheel	2
	300.32.011A	Rim assembly directive wheel	2

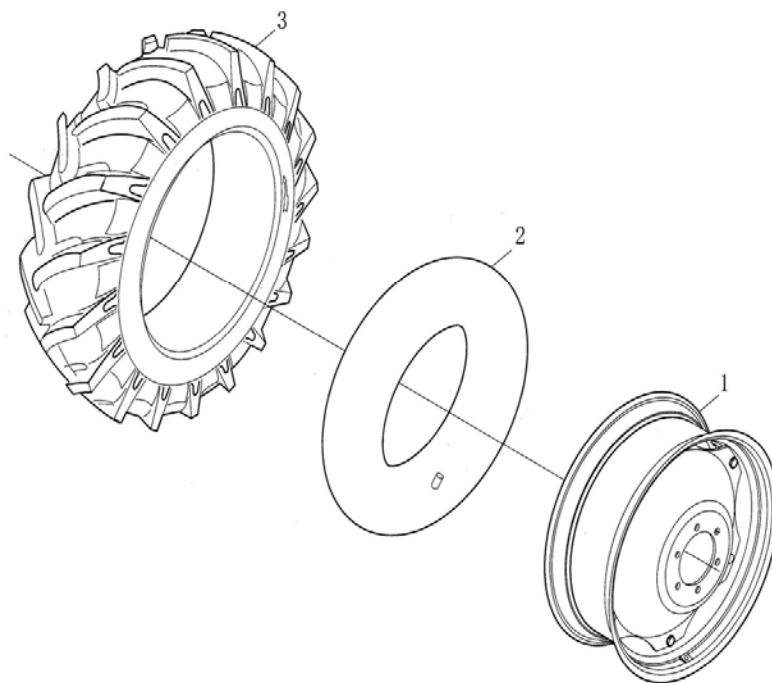

Front Driving Wheel

Front Driving Wheel


Ser. No	Part No.	Description	Qty
1	304.32.011	Rim assembly, front driving wheel	2
	304.31.011B	Rim assembly, front driving wheel	2
	304.32.011A	Rim assembly, front driving wheel (for gardening tractor)	2
2	GB/T2979	Tube 6.00-16	2
	GB/T2979	Tube 7.50-16	2
	GB/T29799	Tube 6.50-16 (for paddy field tractor)	2
3	GB/T2979	Lawn tube (for gardening field tractor)	2
	GB/T2979	Tyre 6.00-16	2
	GB/T2979	Tyre 7.50-16	2
	GB/T2979	Tyre 6.50-16 (for paddy field tractor)	2
		Lawn tire (for gardening tractor)	2

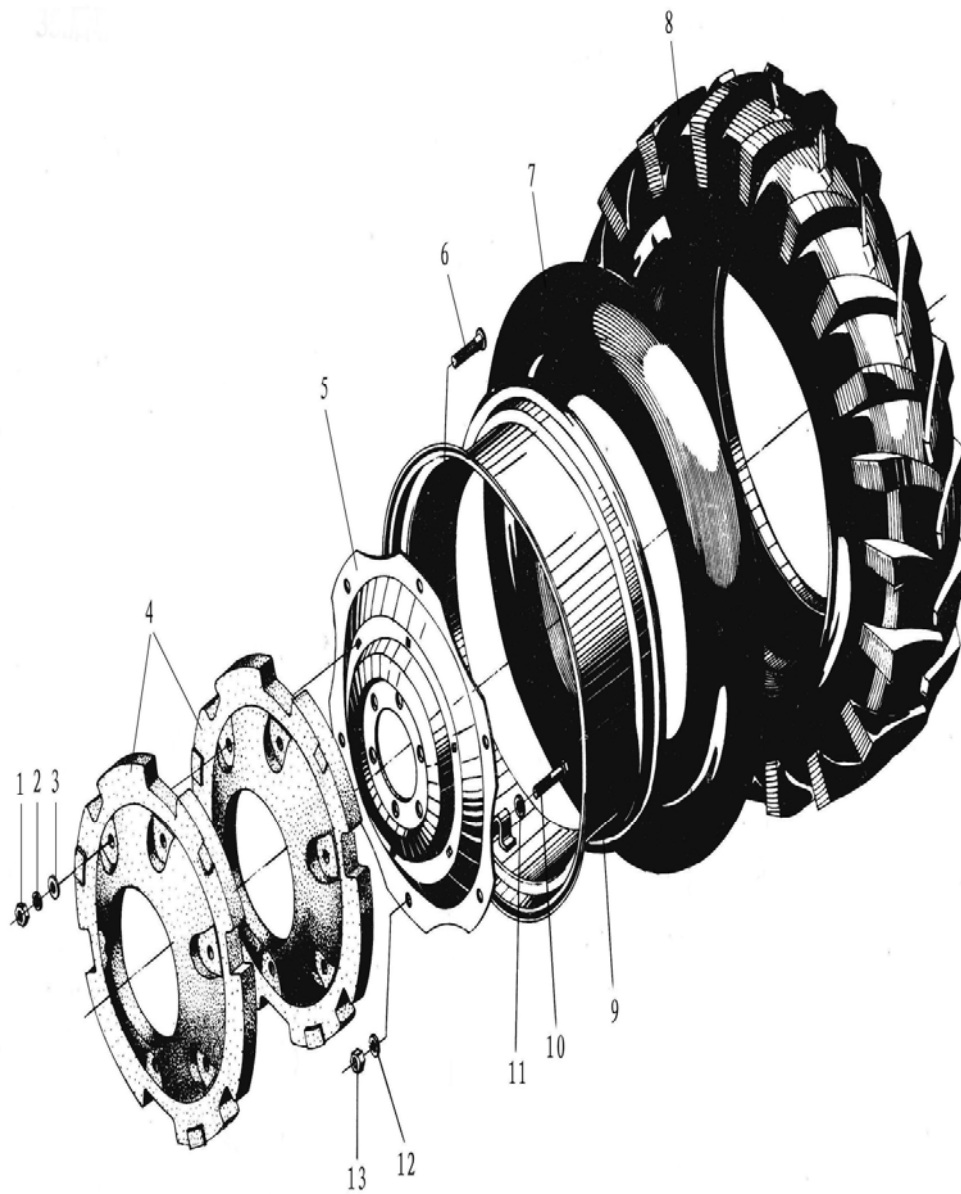

Driving Wheel

Driving Wheel


Ser. No	Part No.	Description	Qty
1	GB/T6170	Nut M12	12
2	GB/T93	Washer 12	12
3	GB/T96	Big washer 12	12
4	300.34.108-2	Ballast	2/4
5	300.34.103	Spoke driving wheel	2
	300.34.103C	Spoke driving wheel (for gardening tractor)	2
6	GB/T12	Bolt M12 x 100	12
	GB/T12	Bolt M12 x 60	12
7	GB/T2979	Tube 11.2-24	2
	GB/T2979	Tube 11.5-24 (for paddy field tractor)	2
		Tube 9.5-24 (for paddy field tractor)	2
		Tube (for gardening tractor)	2
8	GB/T2979	Tyre 11.2-24	2
	GB/T2979	Tyre 9.5-24	2
		Tyre 9.5-24 (for paddy field tractor)	2
		Tyre (for gardening tractor)	2
9	300.34.011-1	Rim assembly, driving wheel	2
	300.34.011A-1	Rim assembly, driving wheel	2
	300.34.011C	Rim assembly (for gardening tractor)	2
10	GB/T5782	Bolt M14 x 70	12
	300.34.012	Bolt	12
11	GB/T97.1	Washer 14	12
12	GB/T93	Washer 14	12
13	GB/T6170	Nut M14	12

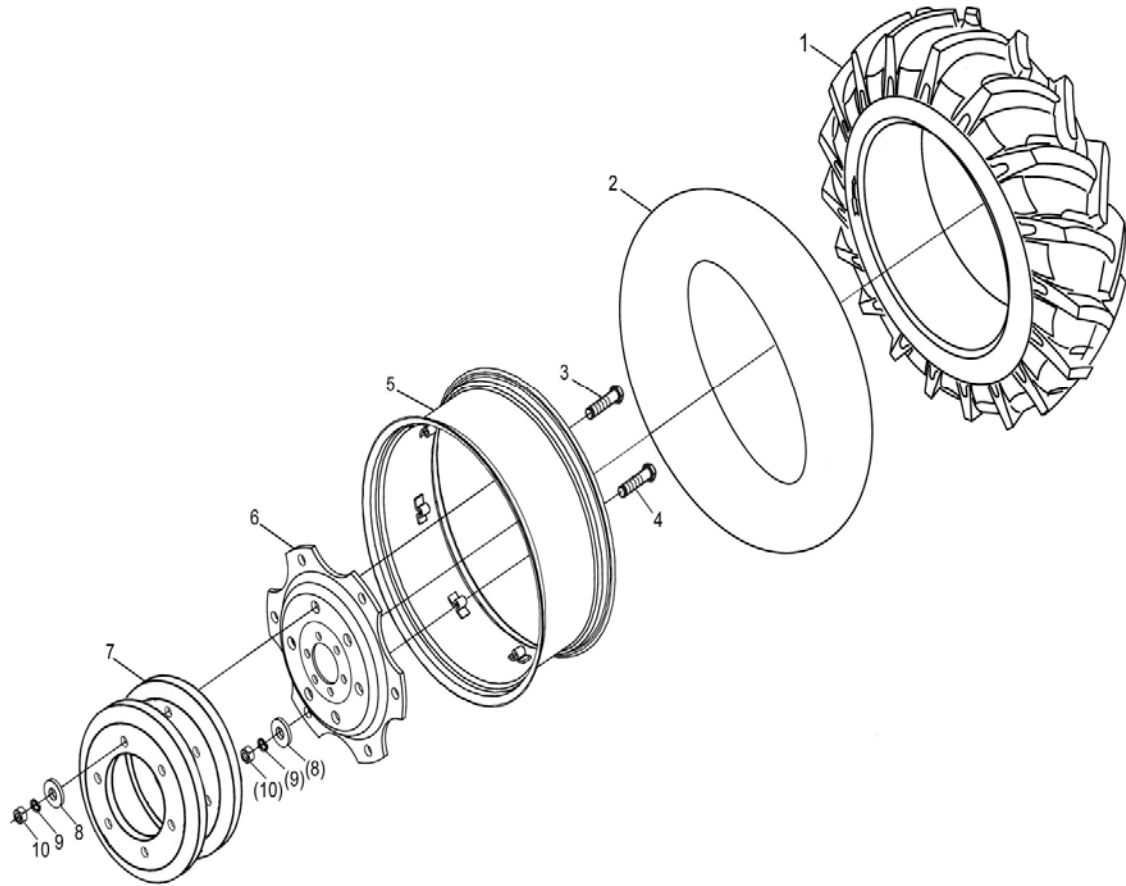

Driving Wheel I

Driving Wheel I


Ser No.	Part No.	Description	Qty
1	GB/T2979	Tyre 11.2-28	2
2	GB/T2979	Tube 11.2-28	2
3	GB/T12	Bolt M16 x 60	6
4	GB/T12	Bolt M16 x 95	6
5	GB/T12	Bolt M16 x 80	6
6	400.34.011	Rim assembly, driving wheel	2
7	300.34.103B	Spoke driving wheel	2
8	400.34.105-4	Ballast II	2/4
9	GB/T97.1	Washer 16	24
10	GB/T93	Washer 16	24
10	GB/T6170	Nut M16	24

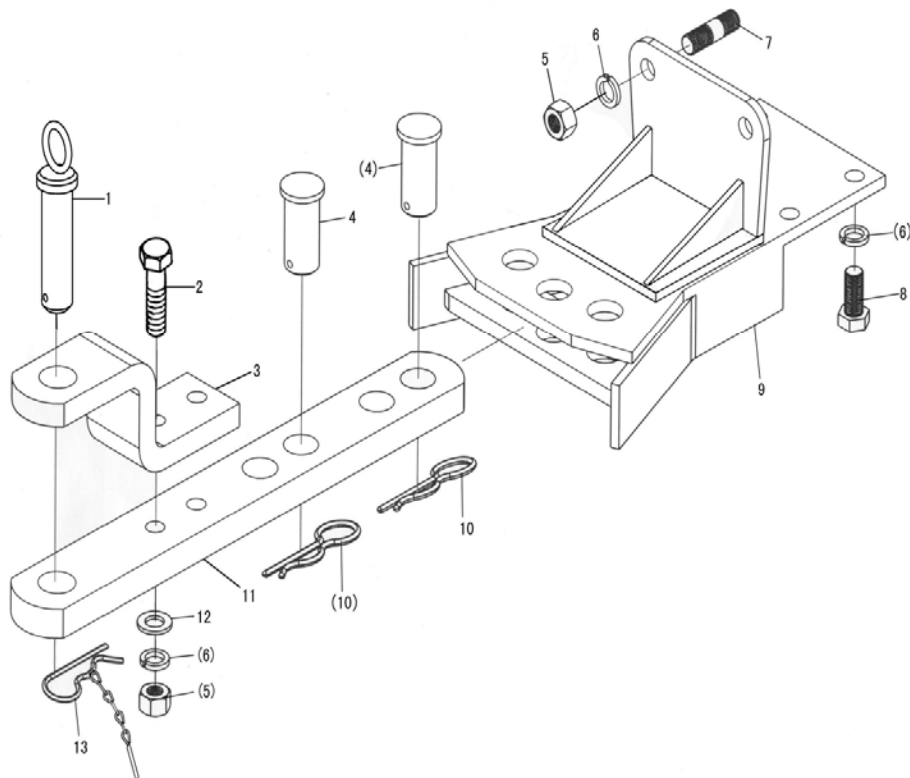

Pendulum Drawbar

Pendulum Drawbar


Ser. No	Part No.	Description	Qty
1	300E.35.019	Drawbar connection pin assembly	1
2	GB/T5782	Bolt M16 x 70	2
3	300E.35.203	Drawbar	1
4	300.35.103	Drawbar connection pin	2
5	GB/T6170	Nut M16	4
6	GB/T93	Washer 16	8
7	GB/T898	Stud AM16-M16 X 35	2
8	GB/T5783	Bolt M16 x 35	4
9	300.35.011-1	Pendulum Drawbar assembly	1
10	300.35.104	Lock pin	2
11	300.35.013	drawbar	1
12	GB/T97.1	Washer 16	2
13	300E.35.020	Lock pin	1

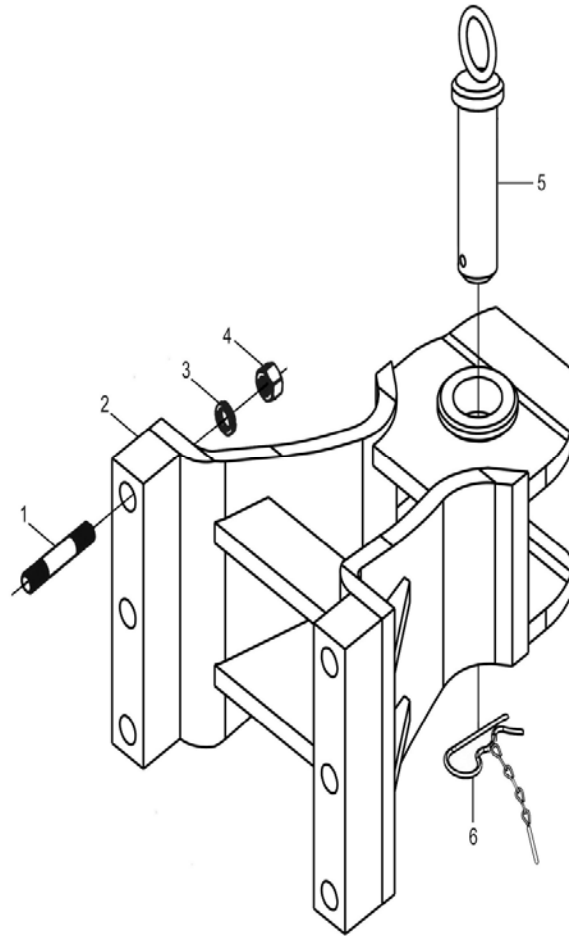

Drawbar I

Drawbar I


Ser. No	Part No.	Description	Qty
1	GB/T899	Stud AM14-M14 x 1.5 x 70-8.8	6
2	300.56.041B-1	Drawbar assembly	1
3	GB/T93	Washer 14	6
4	GB/T6176	Nut M14 x 1.5	6
5	300E.35.019	Drawbar connection pin	1
6	300E.35.020	Spring latch weld	1

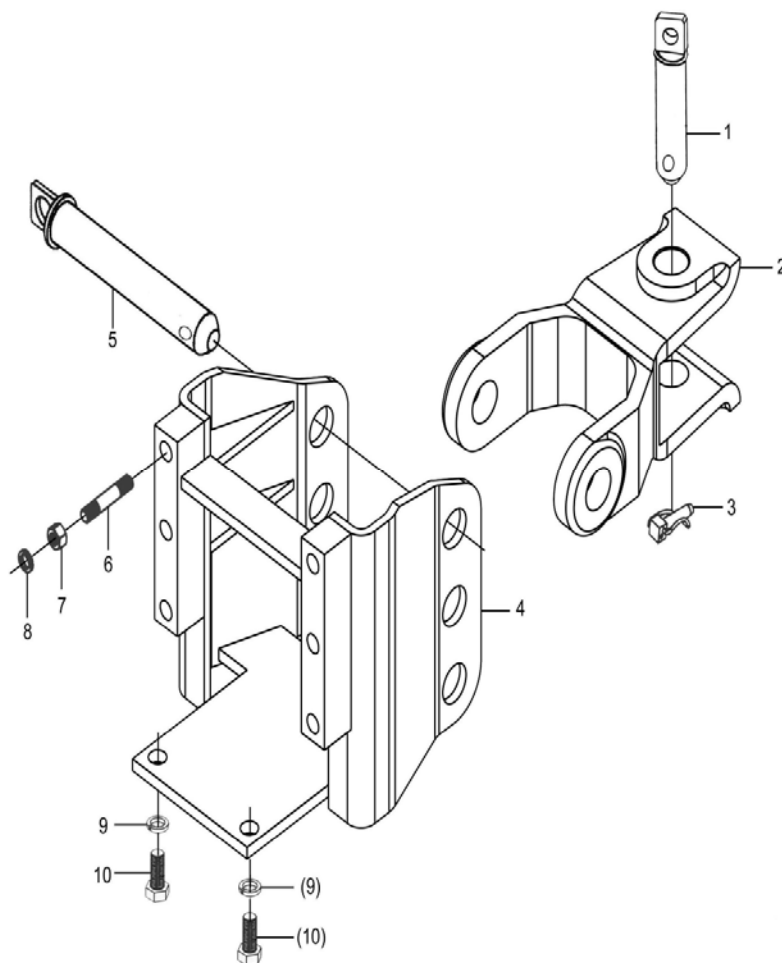

Drawbar II

Drawbar II


Ser. No	Part No.	Description	Qty
1	160.35.012-1	Drawbar connecting pin assembly II	
2	160.35.102-1	Drawbar crossing	
3	160.56.014	Lock pin	
4	300.35.015	Drawbar assembly	
5	300.35.206	Drawbar connecting pin	
6	GB/T899	Stud AM14-M14 x 1.5 x 70-8.8	
7	GB/T6176	Nut M14 x 1.5	
8	GB/T93	Washer 14	
9	GB/T93	Washer 16	
10	GB/T5783	Bolt M16	

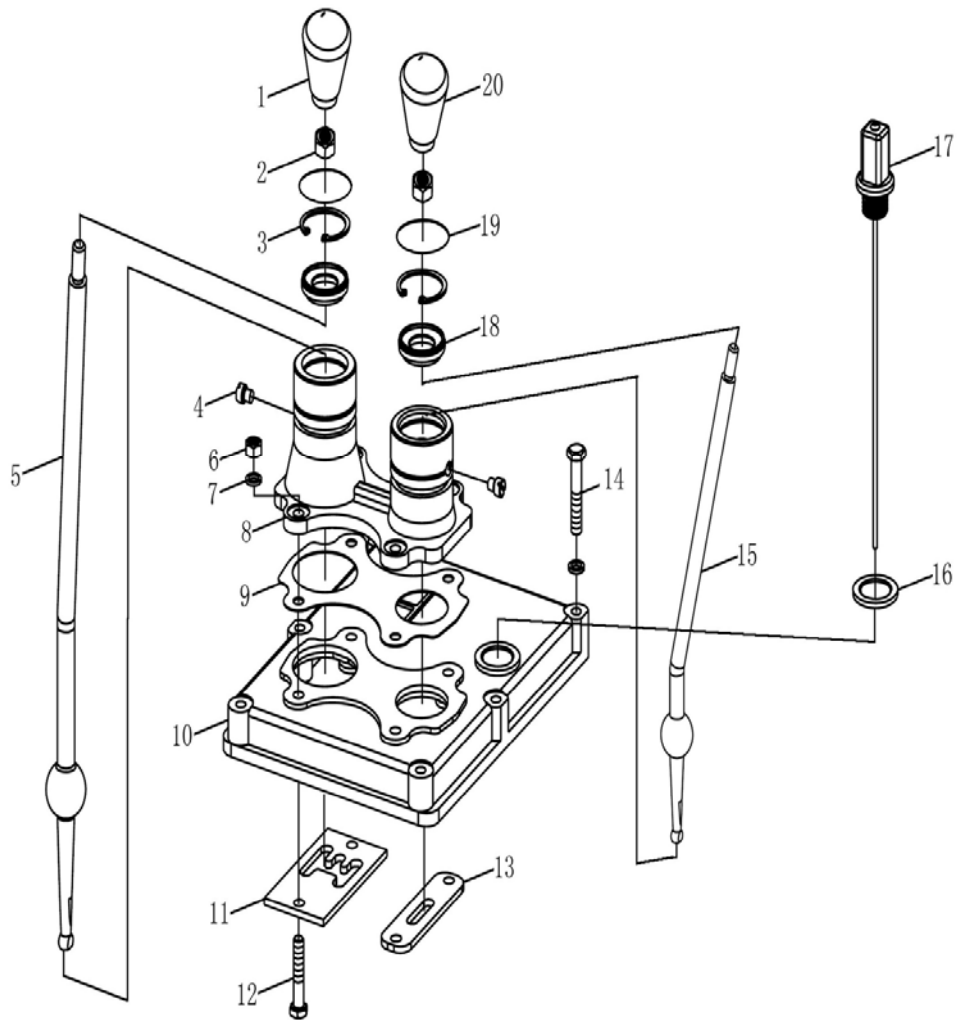

Transmission Cover

Transmission Cover


Ser. No	Part No.	Description	Qty
1	304.37S.211A	Handle control lever-----1	1
	300.37.211A	Handle control lever-----2	1
2	GB/T889	Nut M10	2
3	GB/T893.1	Retaining ring 37	2
4	GB/T75	Screw M10 x 13	2
5	300.37.192-1	Control lever, main change speed	1
6	GB/T889	Nut M8	4
7	GB/T93	Spring lock washer 6	10
8	300E.37.101	Change speed lever seat	1
9	300.37.195	Gasket change speed lever seat	1
10	304.37S.189	Transmission upper front cover-----1	1
	300.37.189	Transmission upper front cover-----2	1
11	304.37S.190	Guide plate, main change speed-----1	1
	300.37.190	Guide plate, main change speed-----2	1
12	GB/T5782	Bolt M8 x 40	4
13	304.37S.191	Guide lever, secondary change speed-----1	1
	300.37.191	Guide lever, secondary change speed-----2	1
14	GB/T5782	Bolt M8 x 45	6
15	300.37.193-3	Control lever, secondary change speed	1
16	160.55.104	washer	1
17	300.37.018A	Dipstick assembly	1
18	800.37.015	Oil seal	2
19	GB/T3082		2
20	160.37.032-3	Handle control lever, secondary change speed	1

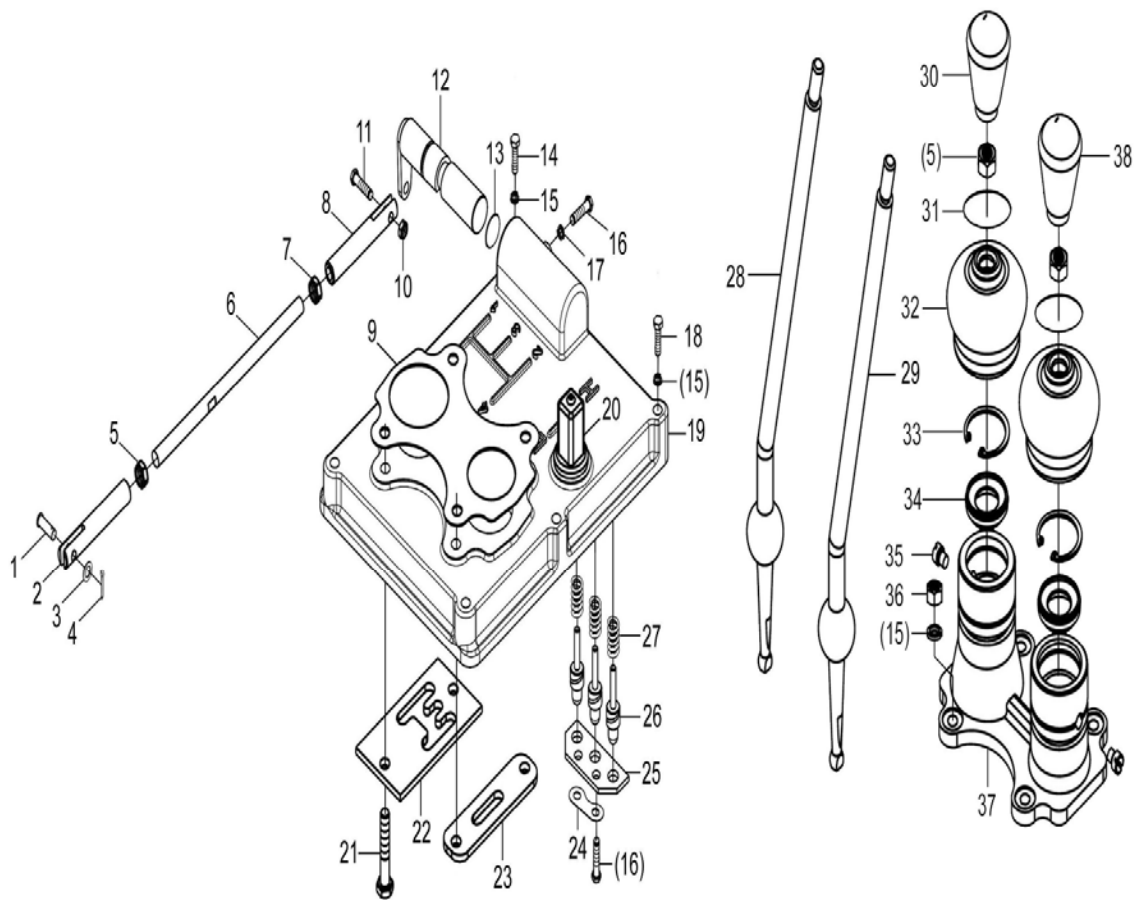

Transmission Cover

Transmission Cover


Ser. No	Part No.	Description	Qty
1	GB/T882	Pi roll B5 x 20	1
2	300.37.449-1	Adjuster bar	1
3	GB/T97.1	Washer 6	1
4	GB/T91	Split pin 2 x 12	1
5	GB/T6170	Nut M10	3
6	300.37.448-1	Adjuster bar	1
7	GB/T6170	Nut M10	1
8	300.37.449A	Adjuster bar	1
9	300.37.195	Gasket, change speed lever seat	1
10	GB/T889	Nut M6	1
11	GB/T5783	Bolt M6 x 20	1
12	300.37.024	Radial shaft weld	1
13	GB/T3452.1	O-ring 17*1.8	1
14	GB/T5783	Bolt M8 x 20	1
15	GB/T93	Washer 8	8
16	GB/T5783	Bolt M6 x 16	2
17	GB/T93	Washer 6	2
18	GB/T5782	Bolt M8 x 45	5
19	300.37.018A	Dipstick assembly	1
20	GB/T5782	Bolt M8 x 40	2
21	300.37.190	Guide plate, main change speed	1
22	300.37.191	Guide plate, secondary change speed	1
23	300.37.451	Lock piece	1
24	300.37.450	Flat	1
25	300.37.447	Locking pin	3
26	300.37.453	Fork shaft locking spring	3
27	300.37.192-1	Control lever, main charge speed	1
28	300.37.193-3	Control lever, secondary change speed	1
29	300.37.211	Handle control lever	1
	304.37S.211	Handle control lever	1
30	GB/T3082	Galvanized wire Zdl.4*250	1
31	400.37.166	Gear shift lever rubber cap	2
32	GB/T893.1	Retaining ring 37	2
33	800.37.015	Oil seal	2
34	GB/T75	Screw M10 x 13	2
35	GB/T6170	Nut M8	2
36	300E.37.101	Change speed lever seat	1
37	160.37.032	Handle control lever, secondary change speed	1

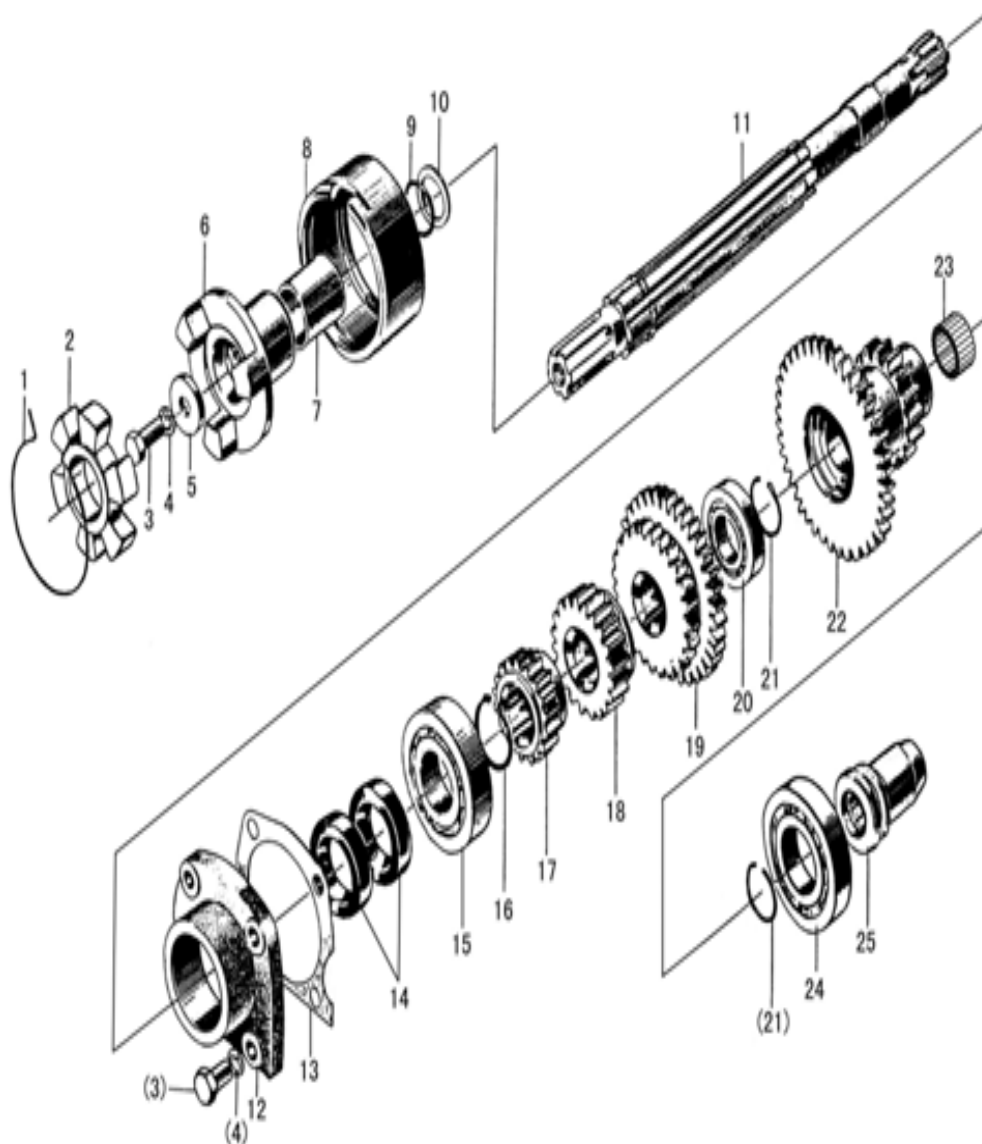

Drive Gearbox Primary Shaft (Single Stage Clutch)

Drive Gearbox Primary Shaft (Single Stage Clutch)


Ser. No	Part No.	Description	Qty
1	300.21.147-1	Snap ring, steel wire	1
2	300.21.145	Elastic block	1
3	GB/T5783	Bolt M10 x 25	5
4	GB/T93	Spring washer lock 10	5
5	300.37.315	Thick washer	1
6	300.37.314	Coupling, primary shaft	1
7	300.37.160	Sleeve	1
8	300.210144	Coupling boot	1
9	GB3452.1	O-ring 23.6 x 3.55	1
10	300.37.320	Coupling washer	1
11	300.37.188-1	Primary shaft	1
12	300.37.119	Primary shaft front bearing cap	1
13	300.37.171-1	Gasket, primary shaft front bearing cap	1
14	GB/T9877.1	Oil seal FB35 x 55 x 8	2
15	GB/T276	Rolling bearing 6307	1
16	GB/T894.1	Circlip for shaft 35	1
17	300.37.104	Sliding gear, 1 st speed	1
18	300.37.106	Sliding gear, 2 nd reverse speed	1
19	300.37.108	Sliding gear, 3 rd -4 th speed	1
20	GB/T276	Rolling bearing 6006	1
21	GB/T895.1	Round wire snap ring for hole 30	2
22	300.37.133	Twin gear, high-low speed	1
23		Needle roller bearing 25 x 30 x 25	1
24	GB/T276	Rolling bearing 6208	1
25	300.37.136	Spine connecting sleeve	1

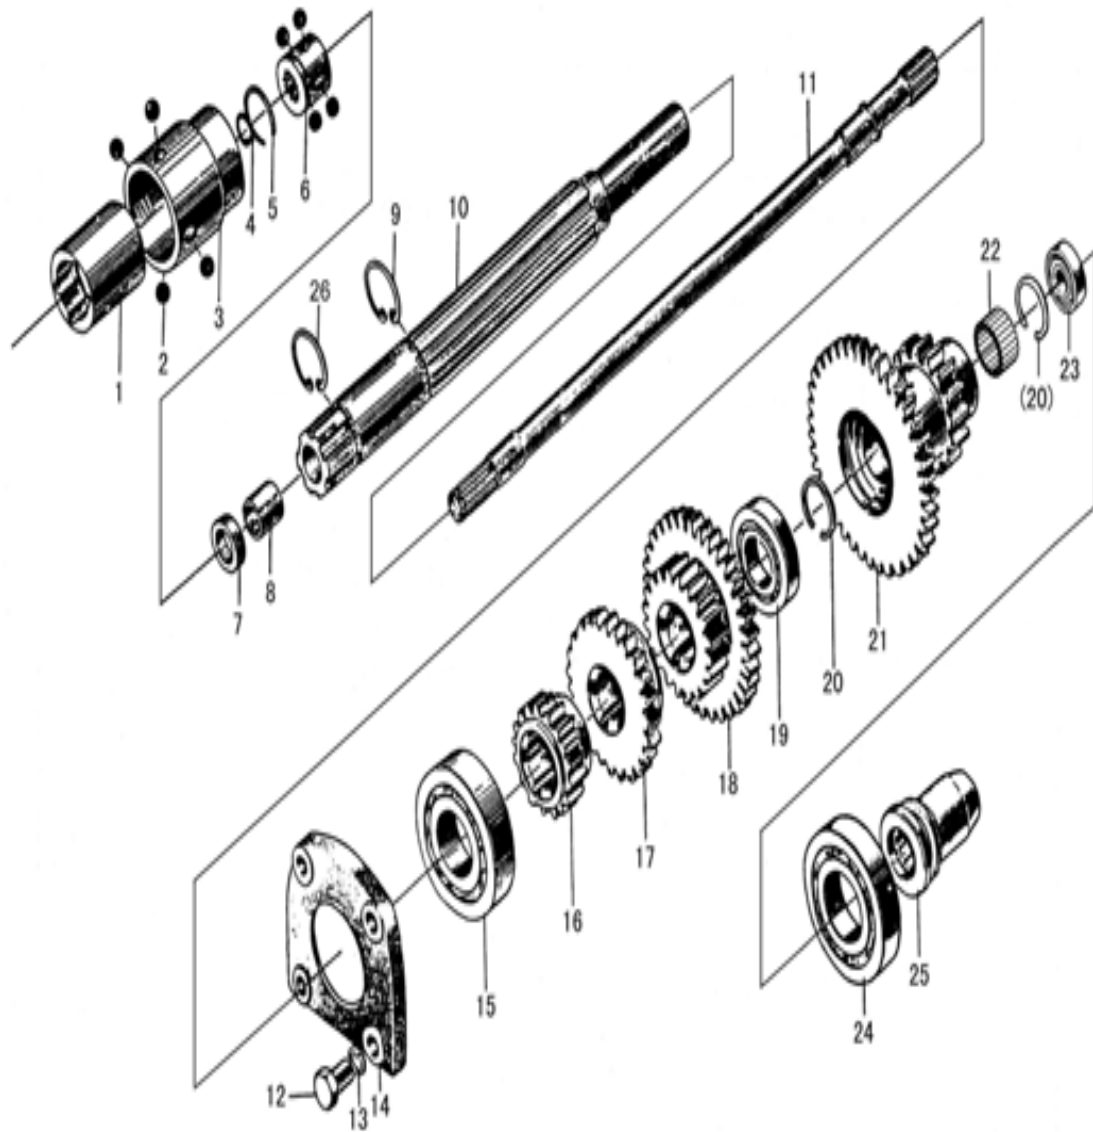

Drive Gearbox Primary Shaft (For dual stage clutch)

Drive Gearbox Primary Shaft (For dual stage clutch)

Ser. No	Part No.	Description	Qty
1	304.37S.242-1	Connecting sleeve, secondary clutch coupling	1
2	GB/T308	Steel ball 10.3188 G400b	8
3	304.37S.246	Driven sleeve, main clutch coupling	1
4	GB/T894.1	Circlip for shaft 19	1
5	304.37S.243	Circlip for shaft	1
6	304.37S.244	Driven sleeve, secondary clutch coupling	1
7	304.37S.245-1	Shaft sleeve	1
8	304.21S.142-1	Compound bush	1
9	GB/T894.1	Circlip for shaft 40	1
10	304.37S.188-1	Primary shaft	1
11	304.37S.240-1	P.T.O. driven shaft	1
12	GB/T5783	Bolt M10 x 25	4
13	GB/T93	Washer 10	4
14	304.37S.119	Primary shaft front bearing cap	1
15	GB/T276	Rolling bearing 6208	1
16	304.37S.104	Sliding gear, 1 st reverse speed	1
17	304.37S.106	Sliding gear, 3 rd speed	1
18	304.37S.108	Sliding gear, 2 nd -4 th speed	1
19	GB/T276	Rolling bearing 6007	1
20	GB/T895.1	Circlip for shaft 38	2
21	304.37S.111-1	Twin gear high-low speed	1
22		Needle roller bearing K32 x 38 x 26	1
23	GB/T276	Rolling bearing 6004	1
24	GB/T276	Rolling bearing 6010	1
25	300.37.136	Spline connecting sleeve	1
26	304.21S.150	Circlip for shaft 40	1

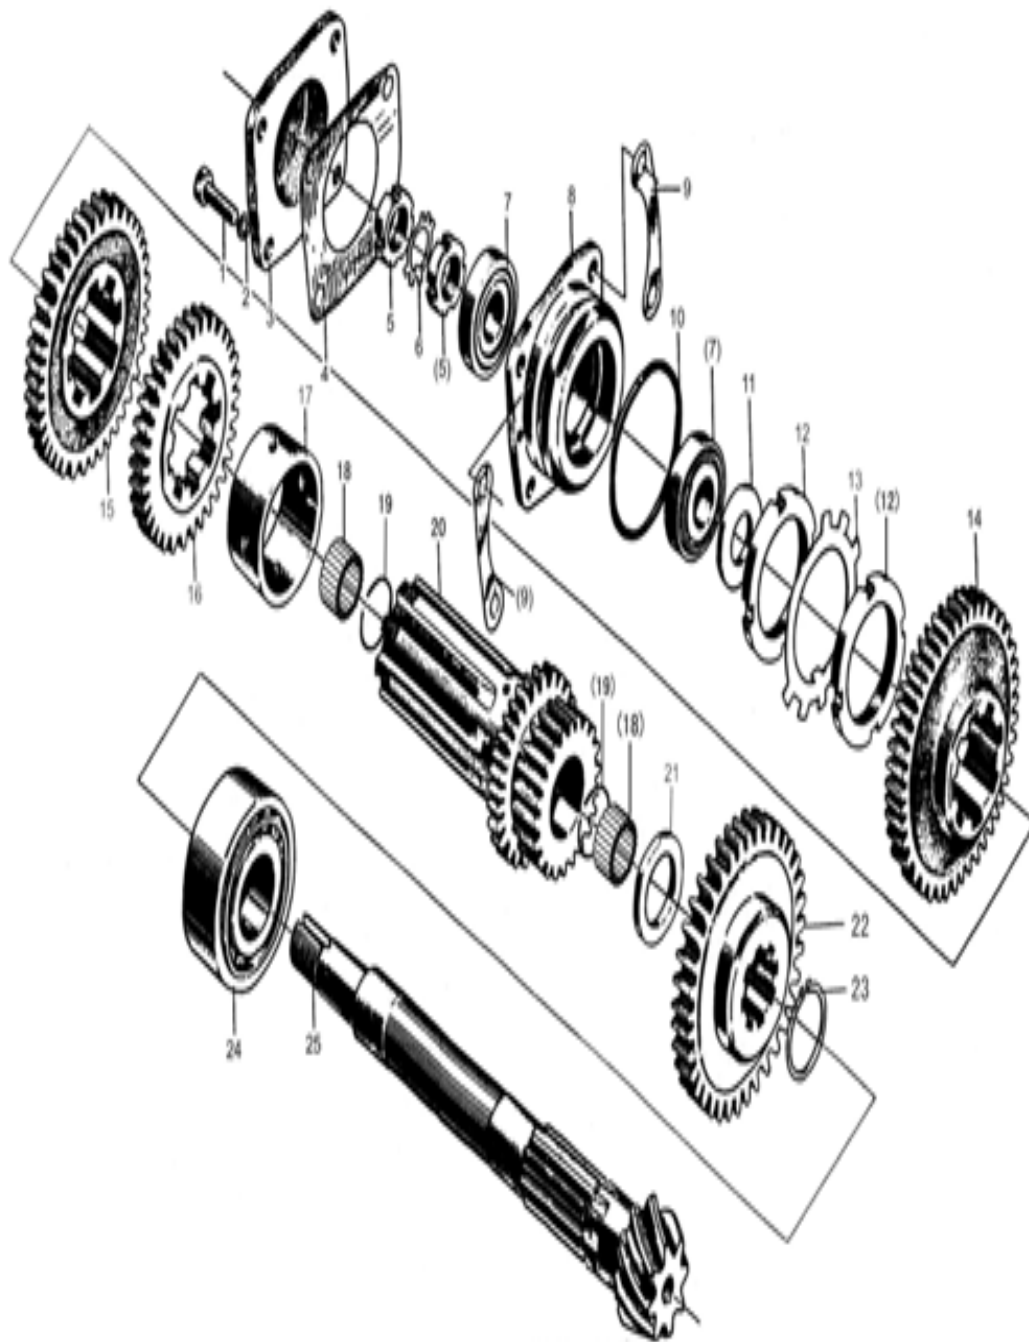

Drive Gearbox Main Shaft (Single Stage Clutch)

Drive Gearbox Main Shaft (Single Stage Clutch)


Ser. No	Part No.	Description	Qty
1	GB/T583	Bolt M10 xx 25	4
2	GB/T93	Spring lock washer 10	4
3	300.37.135	Main shaft front bearing cap	1
4	300.37.170	Gasket, main shaft from end cap	1
5	GB/T812	Nut M24 x 1.5	2
6	GB/T858	Washer 24	1
7	GB/T297	Rolling bearing 31305	2
8	300.37.117	Front bearing sleeve, main shaft	1
9	300.37.132	Adjusting shim, main shaft	Δ
10	GB/T3452.1	O-ring 80 x 5.3	1
11	300.37.151	Front thrust ring, main shaft	1
12	300.37.317	Round nut M60 x 2	2
13	300.37.430	Washer	1
14	300.37.105	Driven gear, 1 st speed	1
15	300.37.107	Driven gear, 2 nd speed	1
16	300.37.109	Driven gear, 3 rd speed	1
17	300.37.142	Spacing sleeve, main shaft	1
18		Needle rolling bearing K31 x 37 x 28	2
19	300.37.407	Circlip 37	2
20	300.37.110	Spine sleeve, main shaft	1
21	300.370152	Rear thrust ring, main shaft	1
22	300.37.134	Sliding gear, high-low speed	1
	300.37.134A	Sliding gear, high-low speed (Selected)	1
23	300.37.431	Circlip for shaft 38	1
24	GB/T283	Rolling bearing NUP2308	1
25	300.37.101	Main shaft	1



Drive Gearbox Main Shaft (For dual stage clutch)

Drive Gearbox Main Shaft (For dual stage clutch)


Ser. No	Part No.	Description	Qty
1	GB/T5783	Bolt M10 x 35	4
2	GB/T93	Spring lock washer 10	4
3	GB/T297	Rolling bearing 31305	2
4	304.37S.117	Front bearing sleeve, main shaft	1
5	300.37.132	Adjusting shim 0.1/0.2/0.5, main shaft	Δ
6	304.37S151	Front thrust ring, main shaft	1
7	GB/T810	Round nut M60 x 2	1
8	300.37.430	Washer	1
9	304.37S.105	Driven gear, 1 st speed	1
10	304.37S.109	Driven gear, 3 rd speed	1
11	304.37S.107	Driven gear, 2 nd speed	1
12	304.37S.142	Spacing sleeve, main shaft	1
13		Needle roller bearing 31 x 37 x 28	2
14	300.37.407	Circlip for shaft 37	2
15	304.37S.110	Spine sleeve, main shaft	1
16	300.37.152	Rear thrust ring, main shaft	1
17	304.37S.112A-1	Rear thrust ring high-low speed	1
18	300.37.431	Circlip for shaft 38	1
19	GB/T288	Self-aligning roller bearing 22308	1
20	304.37S101	Main shaft	1

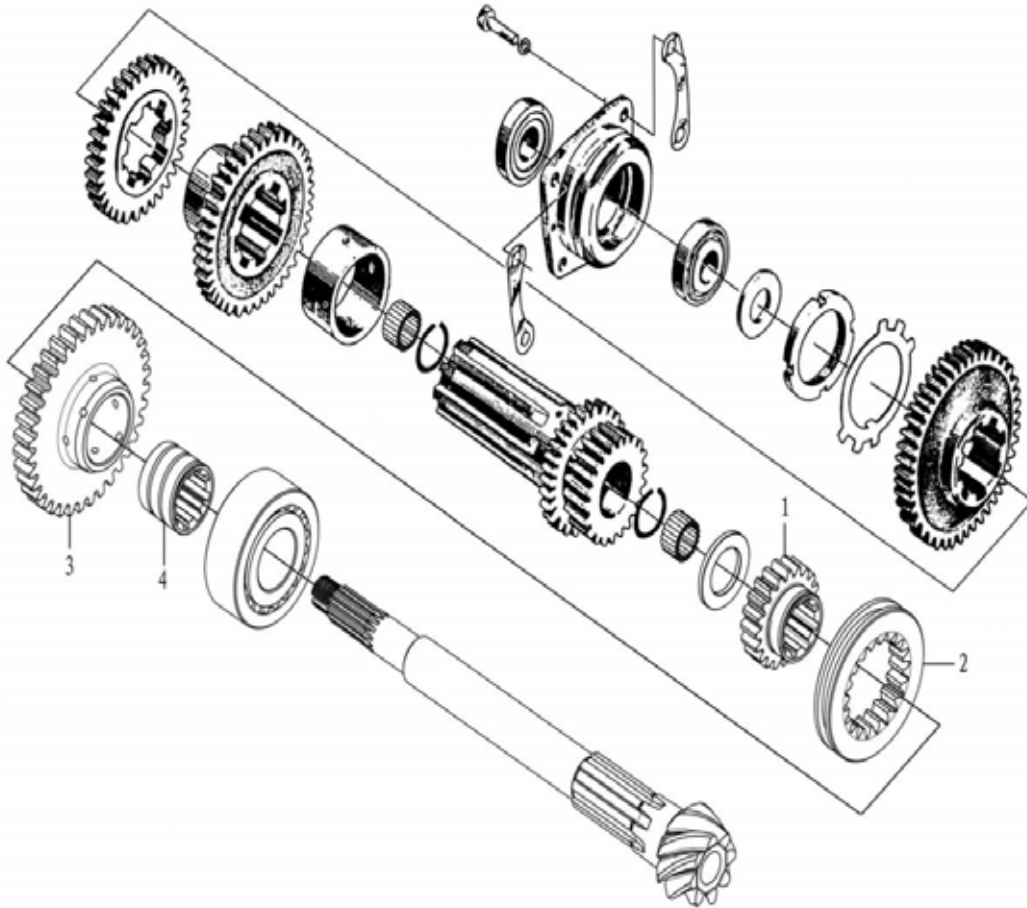

Drive Gearbox Main Shaft

Drive Gearbox Main Shaft


Ser. No	Part No.	Description	Qty
1	300.37.261	High grade fixed gear	1
	304.37S.220	High grade fixed gear	1
2	300.37.262	High grade meshing sets	1
	304.37S.221	High grade meshing sets	1
3	300.37.134-1	Cheap driven gear	1
	304.37S.112-1	Cheap driven gear	1
4	300.37.263	Cheap driven bushing	1
5	GB/T283	Rolling bearing NUP2308	1

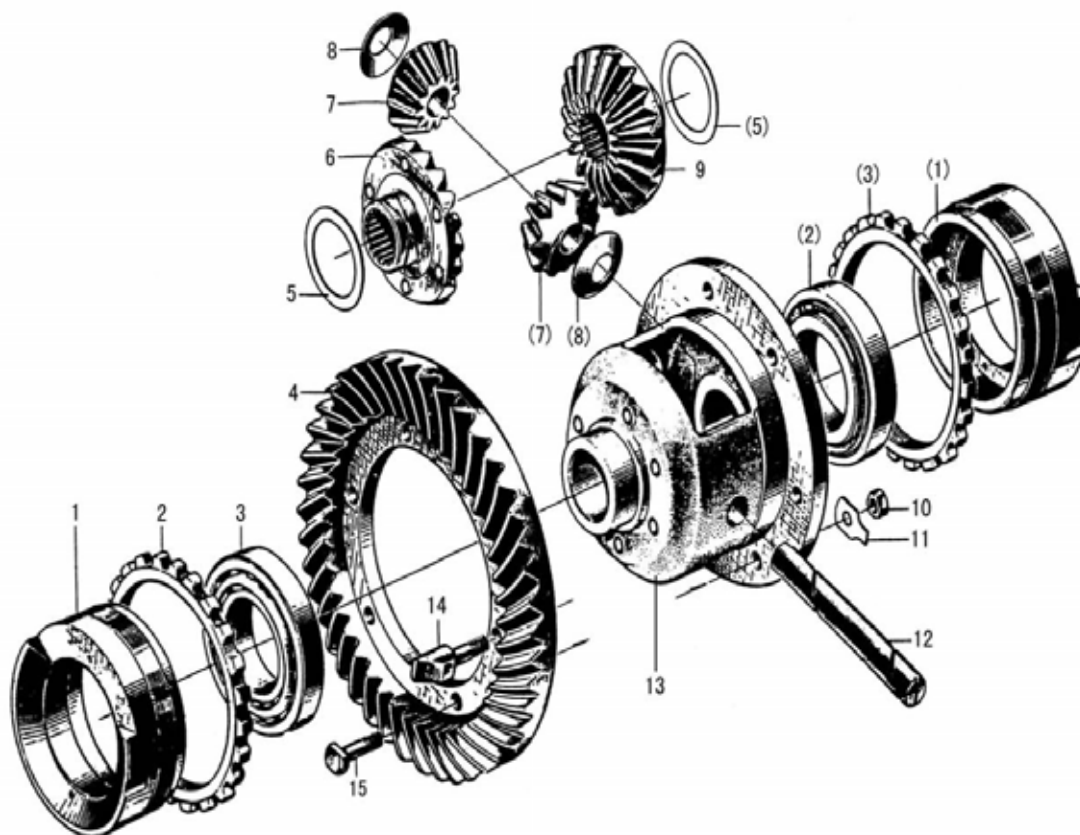

Differential

Differential


Ser. No	Part No.	Description	Qty
1	300.37.164	Differential bearing seat	2
2	300.37.150	Differential adjusting nut	2
3	GB/T297	Conical roller bearing 30212	2
4	300.37.180-1	Large bevel gear	1
5	300.37.184-1	Washer differential side gear	2
6	300.37.182	Right differential side gear	1
7	300.37.201	Planet gear	2
8	300.37.185-1	Washer planet gear	2
9	300.37.181	Left differential gear	1
10	GB/T6170	Nut M10	6
11	GB/T855	Washer 10	6
12	300.37.183-1	Planet gear shaft	1
13	300.37.179-1	Differential housing	1
14	300.37.205-1	Thrust bolt	2
15	300.37.187	Bolt, large bevel	4

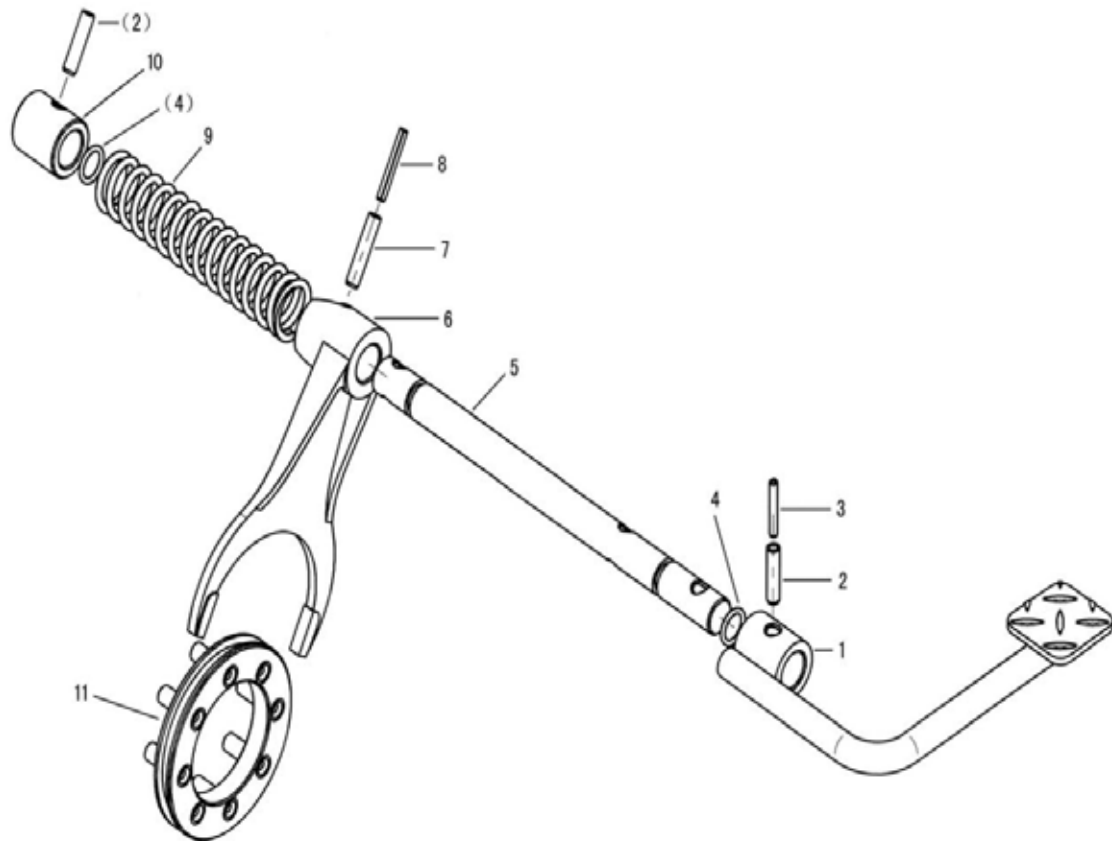

Differential Lock

Differential Lock


Ser. No	Part No.	Description	Qty
1	300.37.015	Pedal	1
2	GB/T879	Pin 8 x 32	2
3	GB/T879	Pin 5 x 32	1
4	GB3452.1	O-ring 15 x 2.65	2
5	300.37.222	Fork shaft	1
6	300.37.221	Fork	1
7	GB/T879	Pin 8 x 40	1
8	GB/T879	Pin 5 x 40	1
9	300.37.223	Spring	1
10	300.37.224	Bush	1
11	300.37.013	Differential lock	1

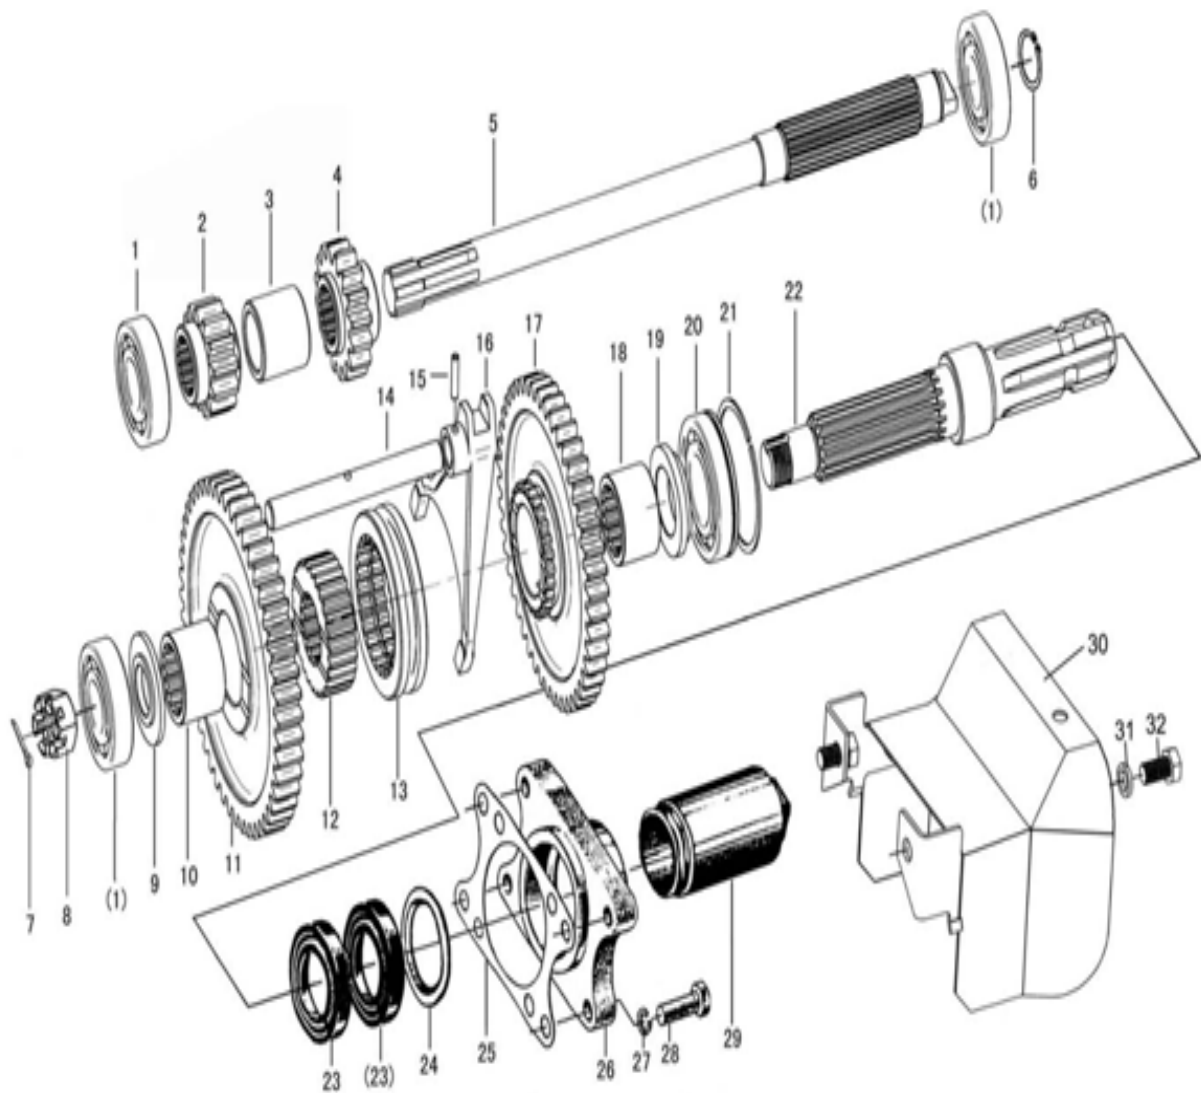

Power Take-off (Meshing sleeve shift)

Power Take-off (Meshing sleeve shift)

Ser. No	Part No.	Description	Qty
1	GB/T276	Rolling bearing 6305	3
2	300.37.251	P.T.O. low speed driving gear (720r/min)	1
3	300.37.253	Spacing sleeve	1
4	300.37.252	P.T.O. high speed driving gear (720r/min)	1
5	300.37.102-2	P.T.O. driving shaft	1
6	GB/T894.1	Circlip for shaft 25	1
7	GB/T91	Pin 5 x 40	1
8	GB/T9459	Nut M24 x 2	1
9	300.37.254	Front thrust ring, P.T.O shaft	1
10	300.37.255	Sliding sleeve	1
11	300.37.116-1	P.T.O. low speed gear (540r/min)	1
12	300.37.257	Seat	1
13	300.37.258	Sleeve	1
14	300.37.260	Shaft	1
15	GB/T879	Pin 5 x 24	1
16	300.37.259	Fork	1
17	300.37.115-1	P.T.O. high speed gear (720r/min)	1
18	300.37.256	Sliding sleeve	1
19	300.37.155-1	Rear thrust ring, P.T.O shaft	1
20	GB/T276	Rolling bearing 6207N	1
21	GB/T305	Snap ring 72	1
22	300.37.103A-2	P.T.O shaft (6-34.79 x 28.91 x 8.69)	1
	300.37.103-2	P.T.O shaft (8-38 x 31.4 x 6)	1
23	GB/T9877.1	Oil seal FB45 x 65 x 8	2
24	300.37.184-1	Washer, differential side gear	1
25	300.37.172	Gasket, rear end cover	1
26	300.37.118A-1	Rear end cover P.T.O. shaft	1
27	GB/T93	Spring lock washer 10	4
28	GB/T5783	Bolt M10 x 35	4
29	160.37.159-1	P.T.O. shaft guard	1
30	300.47.060-1	P.T.O. shaft guard	1
31	GB/T93	Washer 16	2
32	GB/T5783	Bolt M16 x 30	2

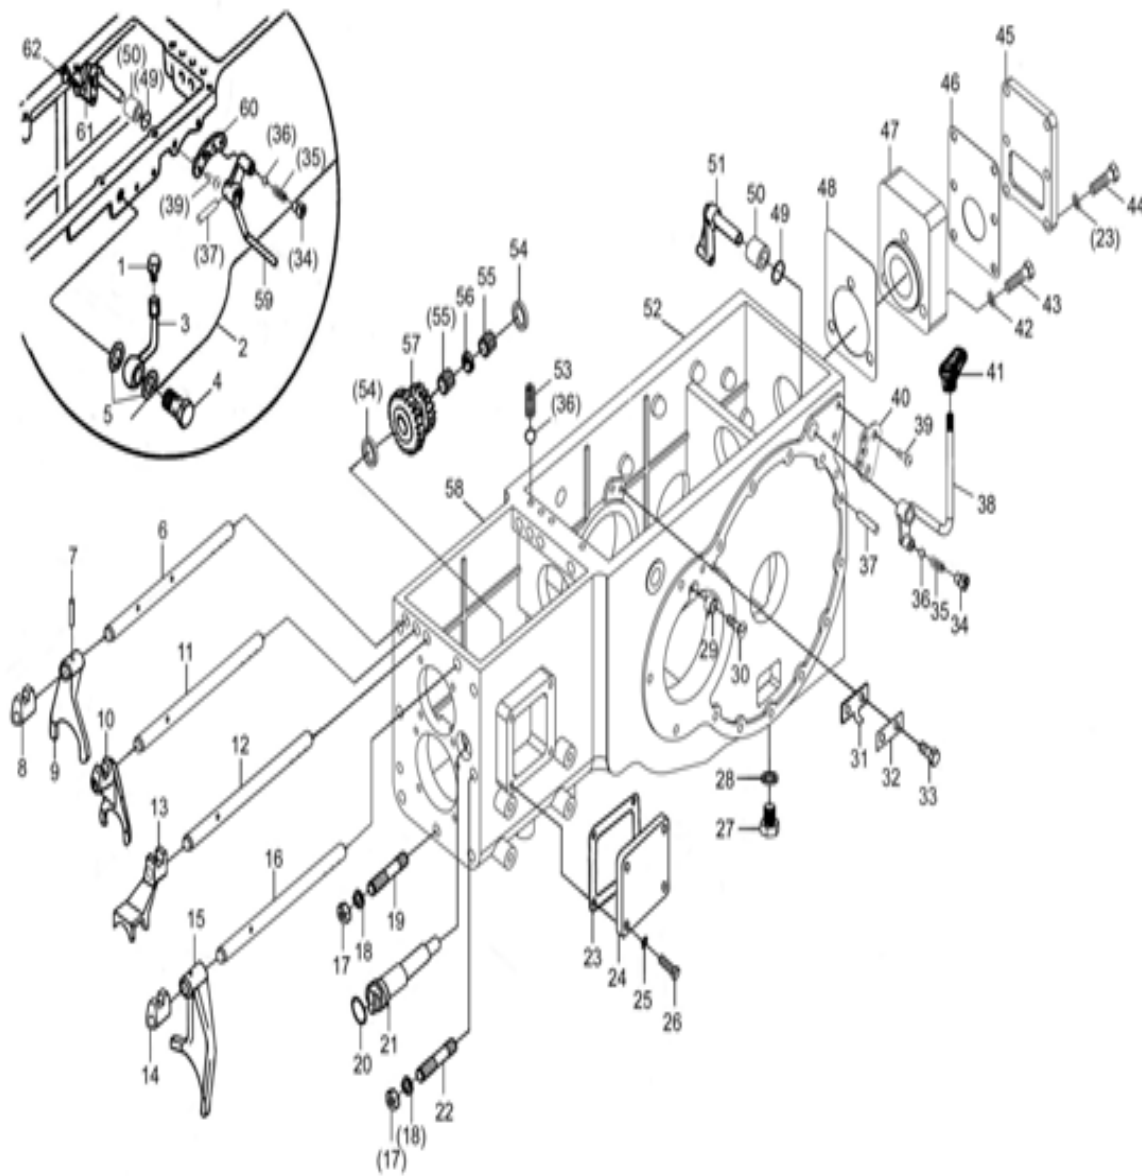


Drive Gearbox

Drive Gearbox

Ser. No	Part No.	Description	Qty
1	184.31.060	Vent pipe cap	1
2	300.37.176-1	Drive gearbox body	1
3	300.37.023-1	Breather pipe weldment	1
4	300.37.307	Screw, oil outlet pipe	1
5		Compound washer 16	2
6	300.37.128-1	3 rd -4 th shift fork shaft	1
7	GB/T879	Pin 5 x 24	8
8	300.37.137	3 rd -4 th shift fork head	1
9	300.37.121	1 st shift fork	1
10	300.37.122	2 nd reverse shift fork	1
11	300.37.127-1	2 nd reverse shift fork shaft	1
12	300.37.121	1 st shift fork	1
13	300.37.126-1	1 st shift fork shaft	1
14	300.37.138	High-low shift fork head	1
15	300.37.124	High-low shift fork	1
16	300.37.129-1	High-low shift fork shaft	1
17	GB/T6176	Nut M14 x 1.5	1
18	GB/T93	Spring lock washer 14	7
19	GB/T898	Stud AM14-M14 x 1.5 x 75	7
20	GB/T3452.1	O-ring 25.8 x 3.55	7
21	304.37S.120	Reverse shaft	1
22	GB/T898	Stud AM14-M14 x 1.5 x 50	1
23	300.37.306	Gasket	4
24	300.37.303	Blank cover	1
25	GB/T93	Spring lock washer 8	1
26	GB/T5783	Bolt M8 x 25	8
27	400.38.024	Bolt M20 x 1.5	4
28		Compound washer 16	1
29	300.37.175	Guide key, differential bearing seat	1
30	GB/T819	Screw M8 x 16	1
31	300.37.166	Locating plate, adjusting nut	1
32	300.37.167	Locking plate, locating plate	2
33	GB/T5783	Bolt M8 x 16	2
34	300.37.302	Plug M10 x 1	4
35	300.37.301-1	Spring	2
36	GB/T308	Steel ball 11/32" (8.7312 G400b)	2
37	GB/T119	Parallel pin D12 x 25	5
38	300.37.020	P.T.O shaft fork weldment assembly	4
39	GB/T818	screw M8 x 14	1
40	300.37.165	Locating plate, power shaft controlling rod	2
41	700.38.051	Handle, control lever	1
42	GB/T859	Washer 10	1
43	GB/T70	Screw M10 x 30	3
44	GB/T5783	Bolt M8 x 30	3
45	184.37.416-1	Blank cover	6
46	300.54.107	Gasket	1
47	300.54.105	Stool plate, oil pump	1
48	300.54.106	Gasket	1
49	GB/T3452.1	O-ring 15 x 2.65	1
50	300.37.177	Bush, P.T.O fork shaft	2
51	300.37.13-1	P.T.O shift fork head	2
52	300.37.156	Rear paper gasket, drive gearbox	1

Ser. No	Part No.	Description	Qty
53	160.37.148	Locking spring, fork shaft	1
54	160.37.112	Thrust ring, reverse shaft	4
55		Needle roller bearing K20 x 25 x 20	2
56	300.37.414	Spacing sleeve	1
57	300.37.113	Reverse gear	1
58	300.37.169	Gasket, box cover	1
59	300.37.021	Release fork weldment assembly	1
60	300.37.163	Locating plate, P.T.O. shaft release lever	1
61	300.37.139	P.T.O shaft fork head	1
62	300.37.154-1	Release fork shaft	1



Final Drive Assembly

Final Drive Assembly


Ser. No	Part No.	Description	Qty
1	GB/T893.1	Circlip for hole 100	2
2	GB/T9877.1	Oil seal FB75 x 100 x 10	4
3	300.39.119	Paper gasket, driving shaft pressing cover	2
4	300.39.106	Driving shaft pressing cover	2
5	GB/T93	Spring lock washer 10	40
6	GB/T6170	Nut M10	12
7	300.39.113	Wheel fixing screw	12
8	300.39.102-1	Driving shaft	2
9	300.39.114	Wheel fixing nut	12
10	GB/T276	Rolling bearing 6213	2
11	GB/T858	Washer 64	2
12	GB/T812	Nut M64 x 2	2
13	GB/T9877.1	Oil seal FB 60 x 85 x 8	6
14	GB/T7940.1	Oil cup M10 x 1	2
15	GB/T5782	Bolt M10 x 75	22
16	300.39.201B	Left final drive housing	1
	300.39.202B	Right final drive housing	1
17	300.39.108	Paper gasket, final drive housing	2
18	300.39.112	Stool plate	2
19	GB/T283	Rolling bearing NU311E	2
20	300.39.111	Stop plate	2
21	300.39.105	Large gear, final drive (53 teeth)	2
	300.39.105-1	Large gear, final drive (52 teeth)	2
22	300.39.110	Clamping plate	2
23	300.39.109	Safety washer	2
24	GB/T5783	Bolt M8 x 20-8.8	4
25	300.39.203	Paper gasket, brake drum case	2
26	GB/T895.2	Round wire snap ring for hole 40	2
27	GB/T276	Rolling bearing 6308	2
28	300.39.124	Pinion gear, final drive (13 teeth)	2
	300.39.124-1	Pinion gear, final drive (14 teeth)	2
29	GB/T276	Rolling bearing 6308N	2
30	GB/T305	Snap ring 90	2
31	300.39.204-1	Pin shaft	2
32	GB/T6172	Nut M12	2
33	GB/T85	Screw M12 x 35	2
34	GB/T5782	Bolt M10 x 60	6
35	GB/T898	Stud AM10-M10 x 28	12
36	GB/T119	Parallel pin D10 x 20	2



Final Drive Assembly

Final Drive Assembly

Ser. No	Part No.	Description	Qty
1	GB/T6170	Nut M14	4
2	GB/T5782	Bolt M12 x 55-10.9	12
3	GB/T93	Washer 12	12
4	300.34.132A	Wheel bolts	4
5	300.34.132	Wheel bolts	8
6	300.34.130	Driving wheel hub	2
7	GB/T75	Bolt M12 x 30	2
8	GB/T6170	Nut M12	2
9	300.34.131	Driving wheel cover	2
10	300.39.102A	Driving shaft	2
11	300.39.126	Straight key	2
12	GB/T119	Pin B6 x 12	4
13	300.39.127	Ring	2
14	GB/T93	Washer 16	2
15	GB/T5783	Bolt M16 x 40	2

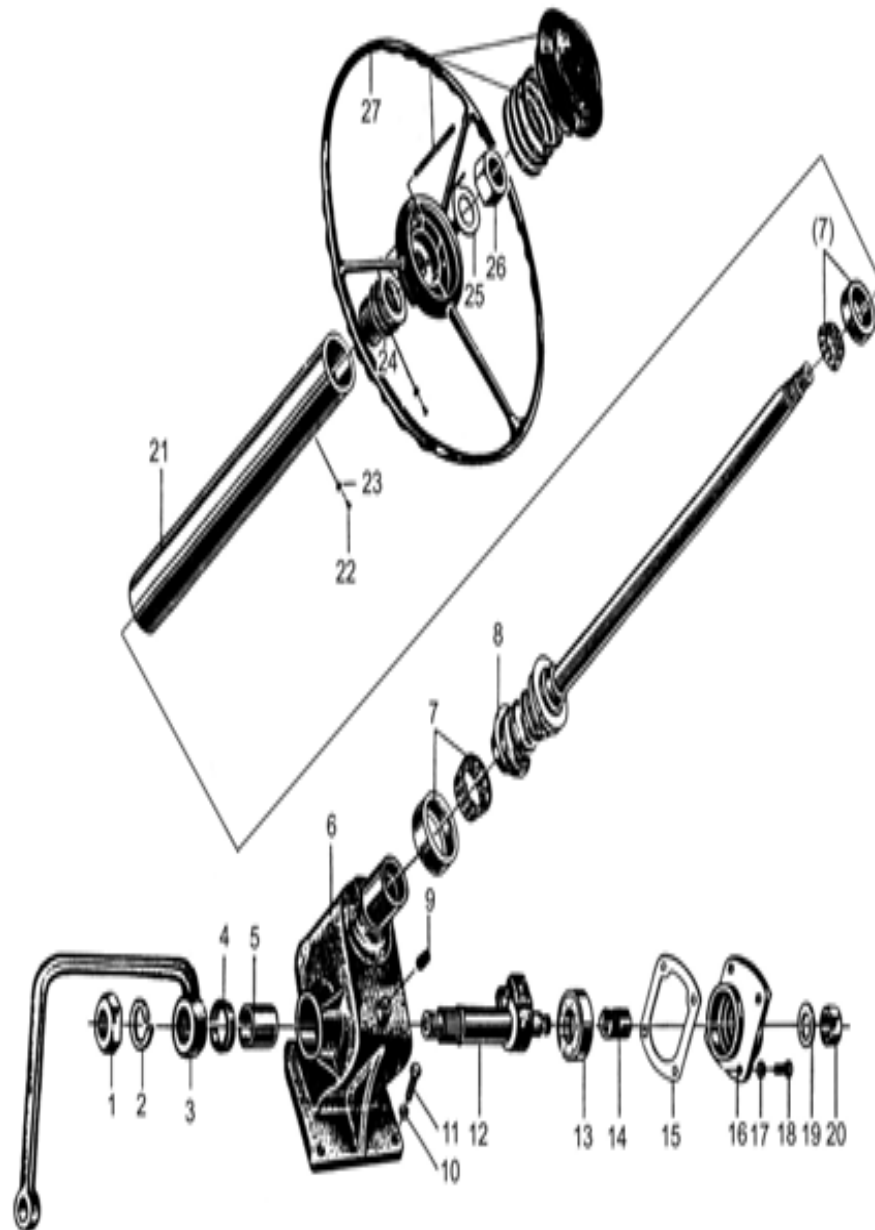

Steering Gear

Steering Gear

Ser No.	Part No.	Description	Qty
1	GB/T6171	Nut M22 x 1.5	1
2	GB/T93-1987	Spring lock washer 22	1
3	TS30.40.101-1A	Steering rock arm	1
4		Oil seal 44 x 32 x 10	1
5	TS30.40.110	Rock arm bush	1
6	TS30.40.109A	Steering bearing housing	1
7		Rolling bearing 977908	2
8	TS30.40.012A	Steering shaft assembly with steering worm	1
9	ZBT32001.4	Plug Z1/4"-18	1
10	GB/T93	Spring lock washer 10	4
11	GB/T5781	Bolt M10 x 30	4
12	TS30.40.017	Steering rock arm shaft	1
13	GB/T276	Rolling bearing 6205	1
14	TS30.40.202	Adjusting screw	1
15	TS25A.40.208	Steering gear side cover	1
16	TS30.40.207A	Steering gear side cover	1
17	GB/T93-1987	Spring lock washer 8	4
18	GB/T5781	Bolt M8 x 20	4
19	TS30.40.402	Cooper washer 24	1
20	GB/T6173	Nut M24*1.5-8.8	1
21	TS30.40.108A	Portfolio management steering columns	1
22	GB/T93	Spring lock washer 4	1
23	GB/T845	Tapping screw ST4.2 x 9.5-C-Z	1
24	24.40.024	Contact ring assembly	1
	GB/T845	Tapping screw ST4.2 x 9.5-C-Z	2
	24.40.119	Contact ring	1
	GB/T859	Spring lock washer 4	2
	24.40.200	Ring base	1
25	GB/T97.1	Washer 16	1
26	GB/T6173	Nut M16 x 1.5	1
27	160.40.019	Steering-wheel assembly	1




Transfer Case Drive Shaft Assembly (Four wheel drive)

Transfer Case Drive Shaft Assembly (Four wheel drive)

Ser. No	Part No.	Description	Qty
1	GB/T5783	Bolt M8 x 20	8
2	GB/T93	Spring lock washer 8	14
3	304.42.116	Drive shaft bearing cap	1
4	304.42.117	Paper gasket, bearing cap	1
5	GB/T276	Rolling bearing 6304	3
6	GB/T894.1	Circlip for shaft 25	1
7	304.42.119-1	Power input gear, transfer case	1
8	304.42.120	Spacing sleeve	1
9	GB/T276	Rolling bearing 6305	2
10	GB/T893.1	Circlip for hole 62	1
11	304.42.122-1	Gear coupling	1
	304.42.122A	Gear coupling (for dual stage clutch)	1
12	304.42.118-1	Power input shaft	1
	304.42.118A	Power input shaft (for dual stage clutch)	1
13	GB/T812	Nut M20 x 1.5	2
14	GB/T858	Washer 20	1
15	304.42.123A	Connecting internal gear	1
16	GB/T5783	Bolt M8 x 25	3
17	GB/T5783	Bolt M8 x 16	3
18	304.42.011	Coupling guard weldment (250mm)	1
	304.42.011A	Coupling guard weldment (425mm)	1
	304.42.011B	Coupling guard weldment (487mm)	1
19	304.42.112	Outside dust ring	1
20		Circlip 44-64	2
21	GB/T308	Steel ball 12.7000 G400 b	8
22	304.42.121	Ball coupling shaft	2
23	304.42.127	Coupling shaft (527mm)	1
	304.42.127A	Coupling shaft (527mm)	1
	304.42.127B	Coupling shaft (527mm)	1
24	12.37.148	Guard	1
25	184.42.107	Compression spring	1
26	304.42.105	Transfer case P.T.O. shaft	1
27	GB/T3452.1	O-ring 61.5 x 3.55	1
28	304.42.108	Oil seal seat	1
29	304.42.109	Paper gasket	1
30	GB/T9877.1	Oil seal FB30 x 50 x 8	2
31	GB/T276	Rolling bearing 6206	1
32	304.42.107	Transfer case P.T.O. gear	1
33	304.31.152	Oil drain plug	1
34	GB/T3452.1	O-ring 14 x 2.65	1
35	GB/T119	Parallel pin D10 x 22	2
36	304.42.106	Paper gasket, rear bearing cap	1
37	304.42.104	Rear bearing cap, transfer case	1
38	GB/T3452.1	O-ring 20 x 2.65	1
39	GB/T893.1	Circlip for hole 52	1
40	304.42.130	Spacing sleeve	1
41	GB/T3452.1	O-ring 10.6 x 2.65	1
42	304.42.101	Intermediate axle, transfer case	1
43	304.42.103	Intermediate axle, transfer case	1
44	GB/T6170	Nut M8	1
45	GB/T71	Screw M8 x 30	1
46	GB/T3452.1	O-ring 128 x 3.55	1


Ser No.	Part No.	Description	Qty
47	304.42.102-1	Transfer case body	1
48	GB/T93	Spring lock washer 10	4
49	GB/T5783	Bolt M10 x 25	4

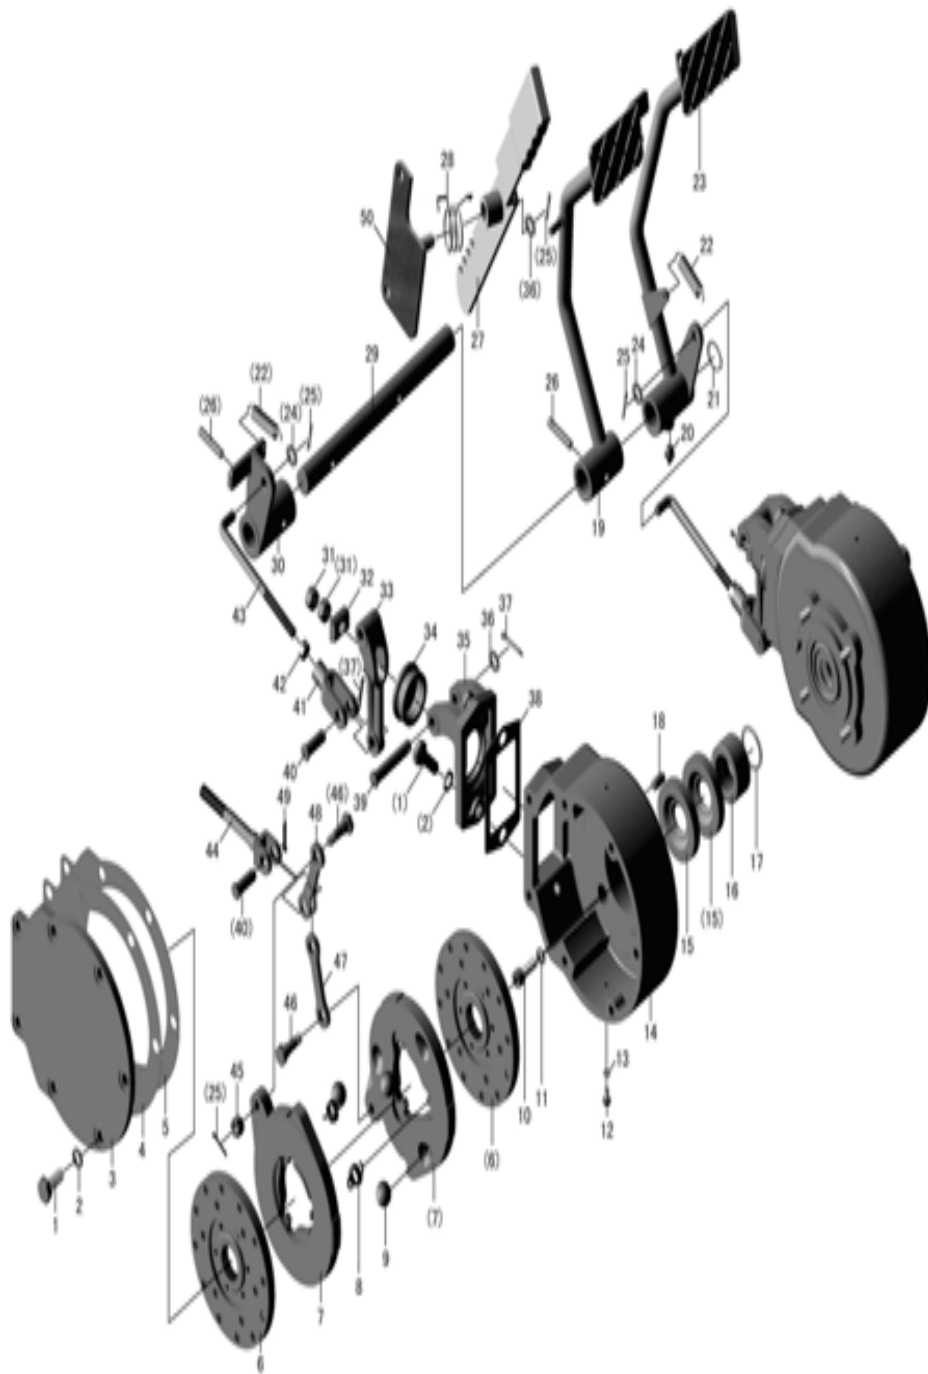

Brake and Operation Mechanism

Brake and Operation Mechanism


Ser. No	Part No	Description	Qty
1	GB/T5783	Bolt M12 x 30	18
2	GB/T93	Washer 12	18
3	300.43.102-1	Cover	2
4	300.43.105-1	Gasket 80.5	2
5	300.43.105	Gasket 80.3	2
6	300.43.012	Friction disc assy	4
7	300.43.111	Pressure plate	4
8	250.43.112	Spring	6
9	GB/T308	Ball 22.2250G40±0(±0)	6
10	GB/T70	Screw M10 x 30	8
11	GB/T93	Washer 10	8
12	GB/T5783	Bolt M6 x 10	2
13	GB/T97.1	Washer 6	2
14	300.43.101	Brake case	2
15	JB/T2600	Oil seal PD55 x 75 x 12	4
16	300.43.121-1	Sleeve	2
17	GB3452.1	O-ring 33.5 x 3.55	2
18	GB/T119	Pin 10 x 20	2
19	300.43.014-2	Left pedal	1
20	GB/T9740.1	Grease cup M10 x 1	1
21	GB/T894.1	Circlip 25	1
22	160.21.105	Spring	2
23	300.43.015-2	Right pedal	1
24	GB/T97.1	Washer 10	2
25	GB/T91	Pin 3.2 x 20	7
26	GB/T879	Pin 8 x 45	2
27	160.43.021-1	Plate	1
28	160.43.147	Spring	1
29	300.43.127	Shaft	1
30	300.43.126	Pedal pull arm	1
31	GB/T6170	Nut M12	2
	GB/T899	Nut M12	2
32	300.43.108	Spacer	2
33	300.43.106	Rocker arm	2
34	300.43.013-1	Sealing cap	2
35	300.43.104	Support	2
36	GB/T97.1	Washer 12	3
37	GB/T91	Pin 4 x 30	4
38	300.43.103	Gasket	2
39	GB/T882-1	Axis pin B12 x 70	2
40	GB/T882	Axis pin B12 x 35	4
41	300.43.109	Adjusting York	2
42	GB/T6170	Nut M10	2
43	300.43.110	Rod	2[1]
	300.43.020	Right rod (for air braking)	1
44	300.43.116	Adjusting rod	2
45	GB/T9457	Nut M10 x 1	4
46	300.43.113-1	Bolt	4
47	300.43.115	Pull plate	2
48	300.43.114	Pull plate	2
49	GB/T91	Pin 4 x 20	2
50	300.43.016-2	Support plate	2

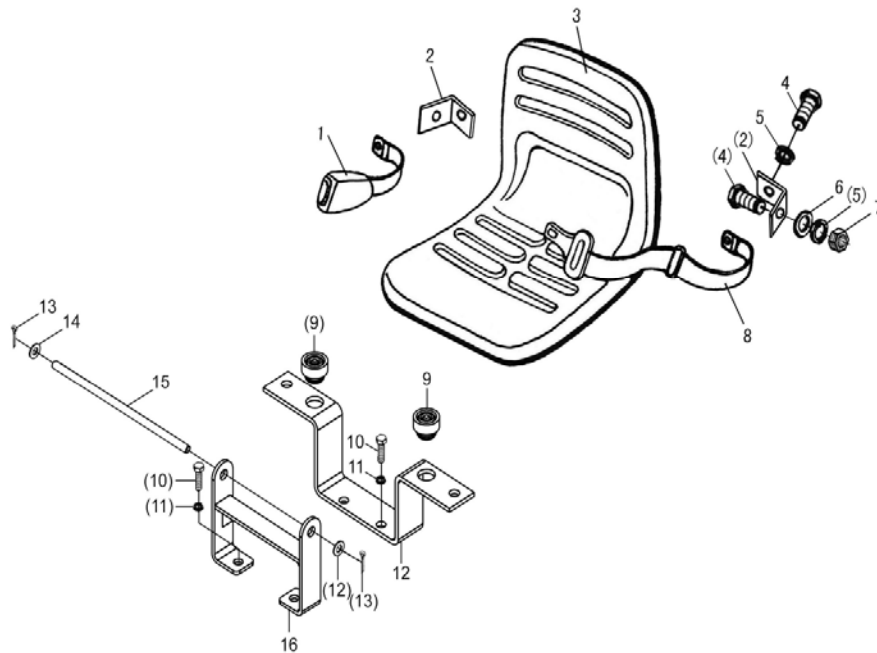

Seat

Seat


Ser. No	Part No.	Description	Qty
1	ZY-1-201	Seat	1
2	ZY-1-107	Bracket	2
3	300.44.001B	Seat	1
4	GB/T5783	Bolt M12 x 25	4
5	GB/T93	Washer 12	4
6	GB/T97.1	Washer 12	2
7	GB/T6170	Nut M12	4
8	ZY-1-202	Safe belt	1
9	160.44.102		2
10	GB/T5783	Bolt M10 x 25	4
11	GB/T93	Washer 10	4
12	300.44.111-1		2
13	GB/T91		2
14	GB/T97.1		1
15	160.44.105-1		1
16	300.44.021A		

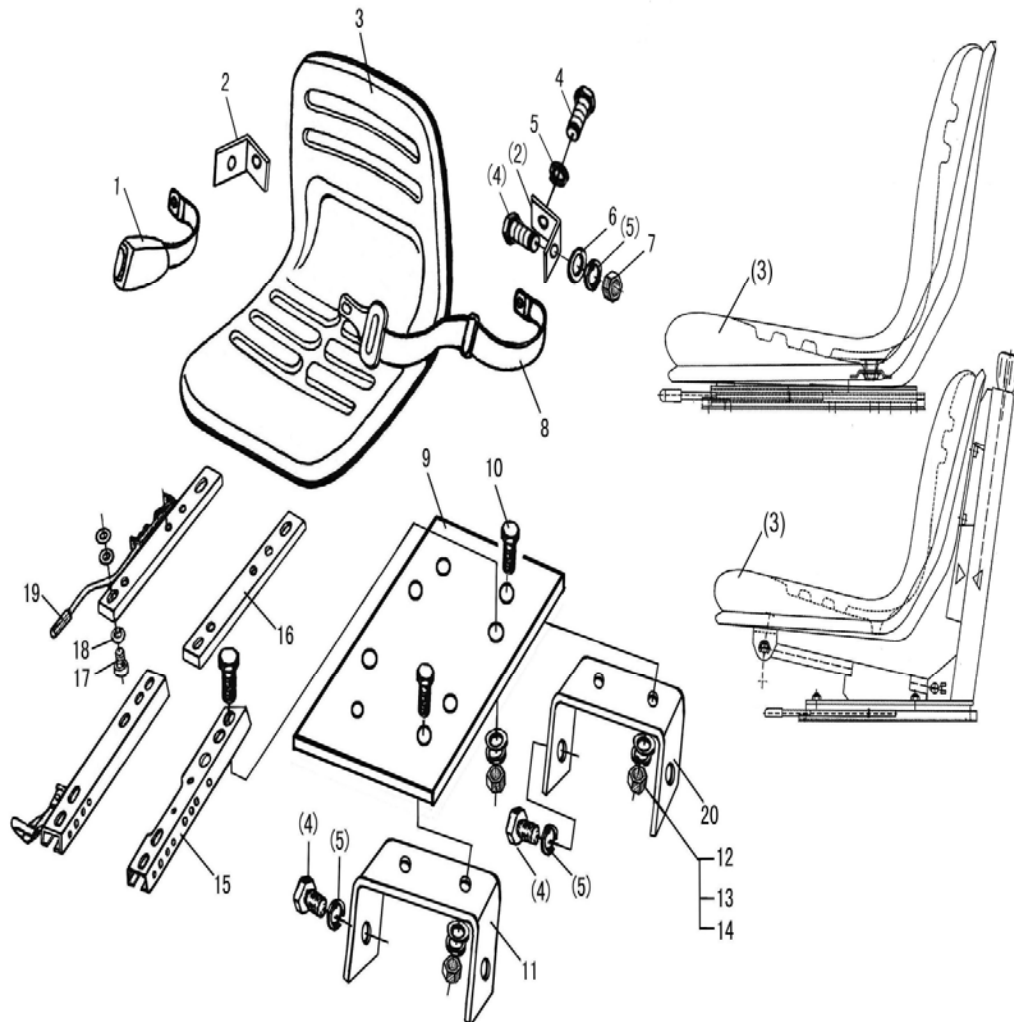

Seat 1

Seat 1

Ser. No	Part No	Description	Qty
1	ZY-1-201	Seat	1
2	ZY-1-107	Bracket	2
3	160.44.001A	Seat	1
	160.44.001B	Seat	1
4	GB/T5783	Bolt M12 x 25	8
5	GB/T93	Washer 12	8
6	GB/T97.1	Washer 12	4
7	GB/T6170	Nut M12	4
8	ZY-1-202	Safe belt	1
9	300.44.102A	Support plate	1
10	GB/T5783	Bolt M8 x 25	6
11	300.44.107	Seat support 1	1
	300.44.101	Seat support	1
12	GB/T93	Washer 8	8
13	GB/T97.1	Washer 8	6
14	GB/T6170	Nut M8	4
15	ZY-1-203	Upper board	2
16	ZY-1-1204	Lower board	2
17	GB/T70	Screw M8 x 25	4
18	GB/T97.1	Washer 8	8
19	ZY-1-205	Handle	1
20	300.44.101	Seat support	1

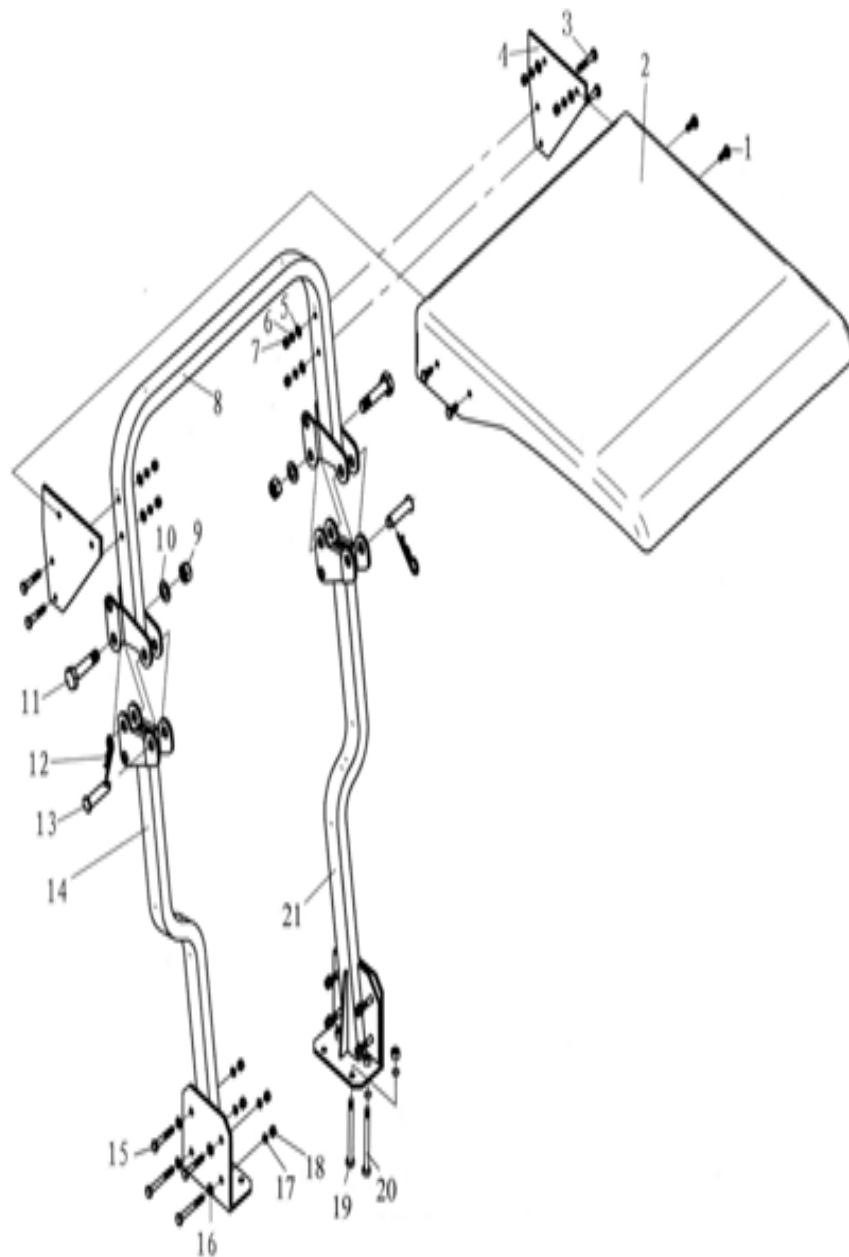

Roll-over Protective Structure

Roll-over Protective Structure


Ser. No	Part No.	Description	Qty
1	GB/T5782	Bolt M12 x 40	4
2	300.45B.011	Canopy	1
3	GB/T5782	Bolt M12 x 70	4
4	300.45.124	Connection plate	2
5	GB/T97.1	Washer 12	8
6	GB/T93	Washer 12	8
7	GB/T6170	Nut M12	8
8	300.45.010-1	Upper frame	1
9	GB/T889	Nut M24	2
10	GB/T95	Washer 24	2
11	300.45.102	Bolt	2
12	180.45.309	Stop pin	2
13	300.45.101	Pin axle	2
14	300.45.011-1	Right support	1
15	GB/T5782	Bolt M14 x 80	8
16	GB/T97.1	Washer 14	16
17	GB/T93	Washer 14	16
18	GB/T6170	Nut M14	16
19	GB/T5782	Bolt M14 x 190	4
20	GB/T5782	Bolt M14 x 180	4
21	300.45.012-1	Left support	1



Hood Panel and Bracket I

Hood Panel and Bracket I


Ser. No	Part No.	Description	Qty
1	180.47.145-C	Product design sign	1
2	300.47.040	According to the front	1
3	300.47B.010	Cover lock assembly	2
4	GB/5783	Bolt M10 x 40	4
5	700.47.664	Rubber blanket	2
6	GB/T5783	Bolt M6 x 20	8
7	GB/T97.1	Washer 6	12
8	GB/T93	Washer 6	12
9	GB/T6170	Nut 6	12
10	300.47.085	Right stents weld	1
11	GB/T97.1	Washer 8	4
12	GB/T5783	Bolt 8 x 16	4
13	300.47.084	Left stents weld	1
14	700.47.650	Lock gusset plate	2
15	300.47.067	Support weld	1
16	GB/T5783	Bolt M8 x 25	3
17	GB/T6170	Nut 8	3
18	300.47.064-1	Cover support weld	1
19	GB/T889	Nut 8	2
20	GB/T5783	Bolt M8 x 300	2
21	300.47.531B-3	Right bracket weldment (TY3100/TY395)	1
	300.47.531F	Right bracket weldment (ZN390)	1
	300.47.710A	Right bracket weldment (4L22BT)	1
	300.47.711-1	Right bracket weldment (NZ490)	1
	300.47.548	Right bracket weldment (SL2105)	1
22	300.47.079	Accommodate bracket	1
23	GB/T5783	Bolt M10 x 25	4
24	GB/T97.1	Washer 10	4
25	GB/T6170	Nut 10	4
26	300.47.530B-2	Left bracket weldment (TY3100/TY395)	1
	300.47.530F	Left bracket weldment (ZN390)	1
	300.47.711A	Left bracket weldment (4L22BT)	1
	300.47.710	Left bracket weldment (NZ490)	1
	300.47.547	Left bracket weldment (SL2105)	1
27	300.47.008-4	Engine hood	1
28	BL-017-A	Hinge	2
29	GB/T5783	Screw M5 x 30	12
30	GB/T97.1	Washer 5	12
31	GB/T93	Washer 5	12
32	GB/T6170	Nut 5	24
33	300.47.540-2	Fuel tank hood (SL2105)	1
	300.47.540A	Fuel tank hood (TY3100/4L22BT/ZN390)	1
	300.47.540B-1	Fuel tank hood (ZN490)	1
34	160.50.210	Re-fuelling valve bushing	1
35	BL-116	Rubber support	1
36	300.47.555	Engine hood back bracket	2
37	GB/T818	Bolt M8 x 40	2
38	GB/T5783	Bolt M10 x 20	4
39	300.47.078-2	Accommodate bracket	1

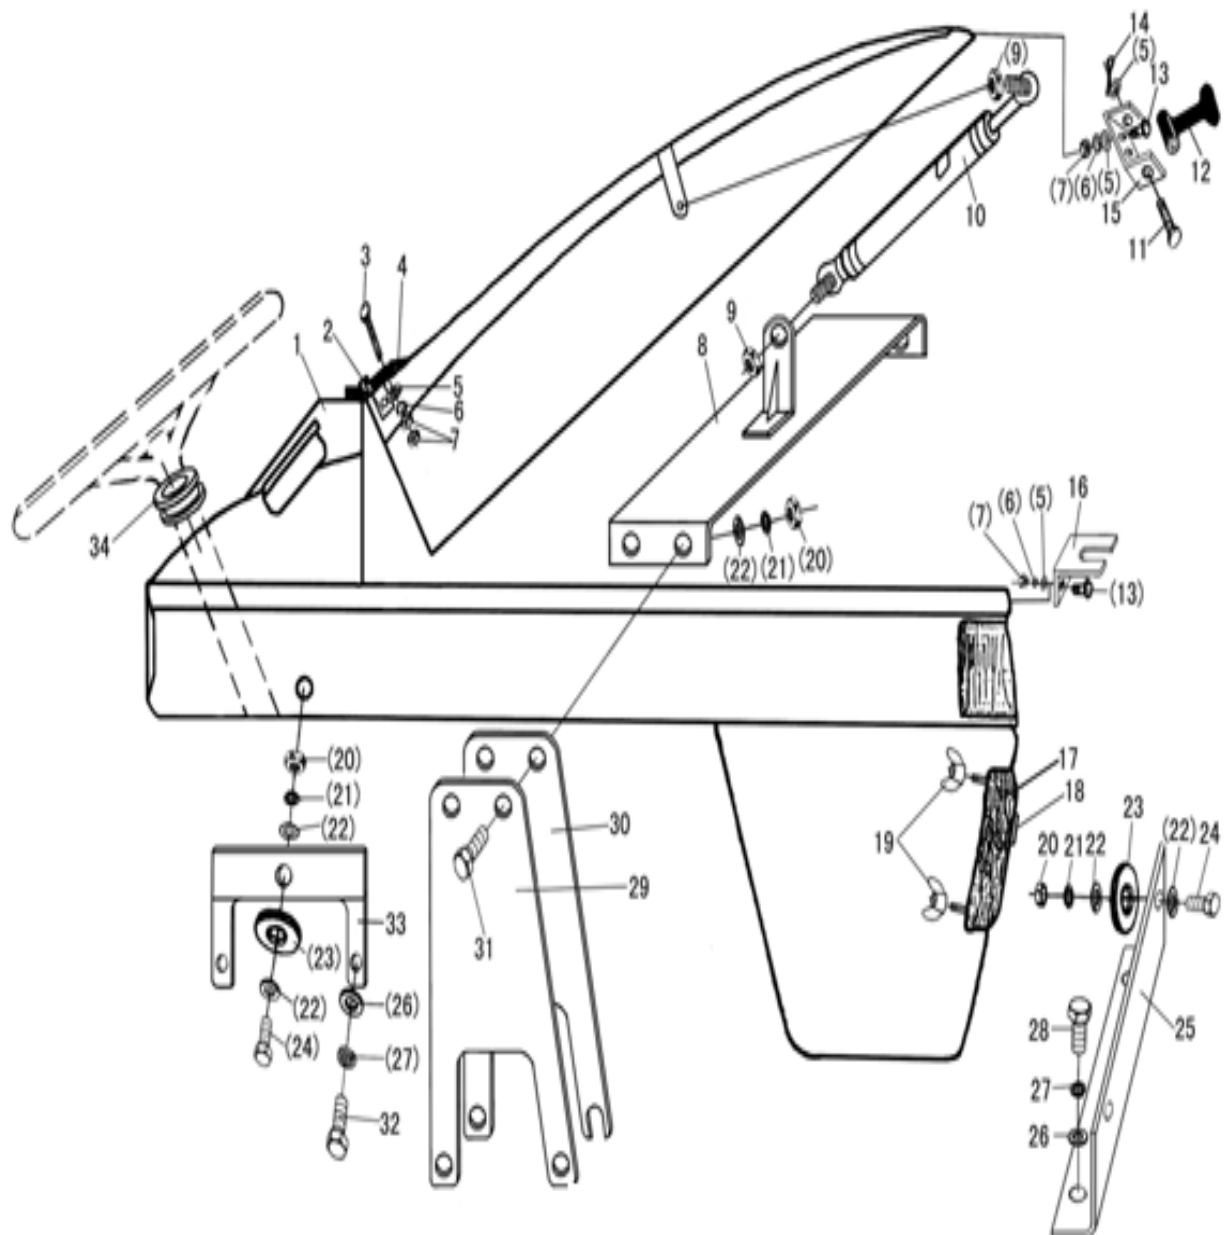

Hood Panel and Bracket II

Hood Panel and Bracket II


Ser No.	Part No.	Description	Qty
1	300.47B.011	Upper hood and low hood	1
2	BL-015	Support bracket	1
3	GB/T819	Screw M5 x 30	12
4	BL-017-A	Hinge	1
5	GB/T97.1	Washer 5	17
6	GB/T93	Washer 5	16
7	GB/T6170	Nut 5	28
8	300.47.065-1	Support bracket (for TY395 engine)	1
	300.47.065C	Support bracket (for Y480 engine)	1
9	GB/T889	Nut 8	2
10	YQ-10-175-560	Shock absorber (250N)	1
11	GB/T882	Axis pin 5 x 35	1
12	BL-107	Knot	1
13	GB/T818	Screw M5 x 20	4
14	GB/T91	Pin 2 x 20	1
15	BL-105	Upper bracket for knot	1
16	BL-106	Low bracket for knot	1
17	300.47.011A	Front skirt	1
18	180.47.145-B	Emblem	1
19	GB/T62	Nut M5	4
20	GB/T6170	Nut M8	4
21	GB/T93	Washer 8	4
22	GB/T97.1	Washer 8	8
23	BL-178	Rubber washer	
24	GB/T818	Screw M8 x 40	4
25	300.47.556	Front bracket for hood	1
26	GB/T97.1	Washer 10	6
27	GB/T93	Washer 10	6
28	GB/T5783	Bolt M10 x 25	2
29	300.47.530A-1	Right bracket (for TY395 engine)	1
	300.47.530C	Right bracket (for TY395 engine)	1
30	300.47.531A-1	Left bracket (for Y480 engine)	1
	300.47.531C	Left bracket (for Y480 engine)	1
31	GB/T5783	Bolt M8 x 25	4
32	GB/T5783	Bolt M10 x 20	4
33	300.47.555	Back bracket for hood	2
34	BL-116	Rubber support	1

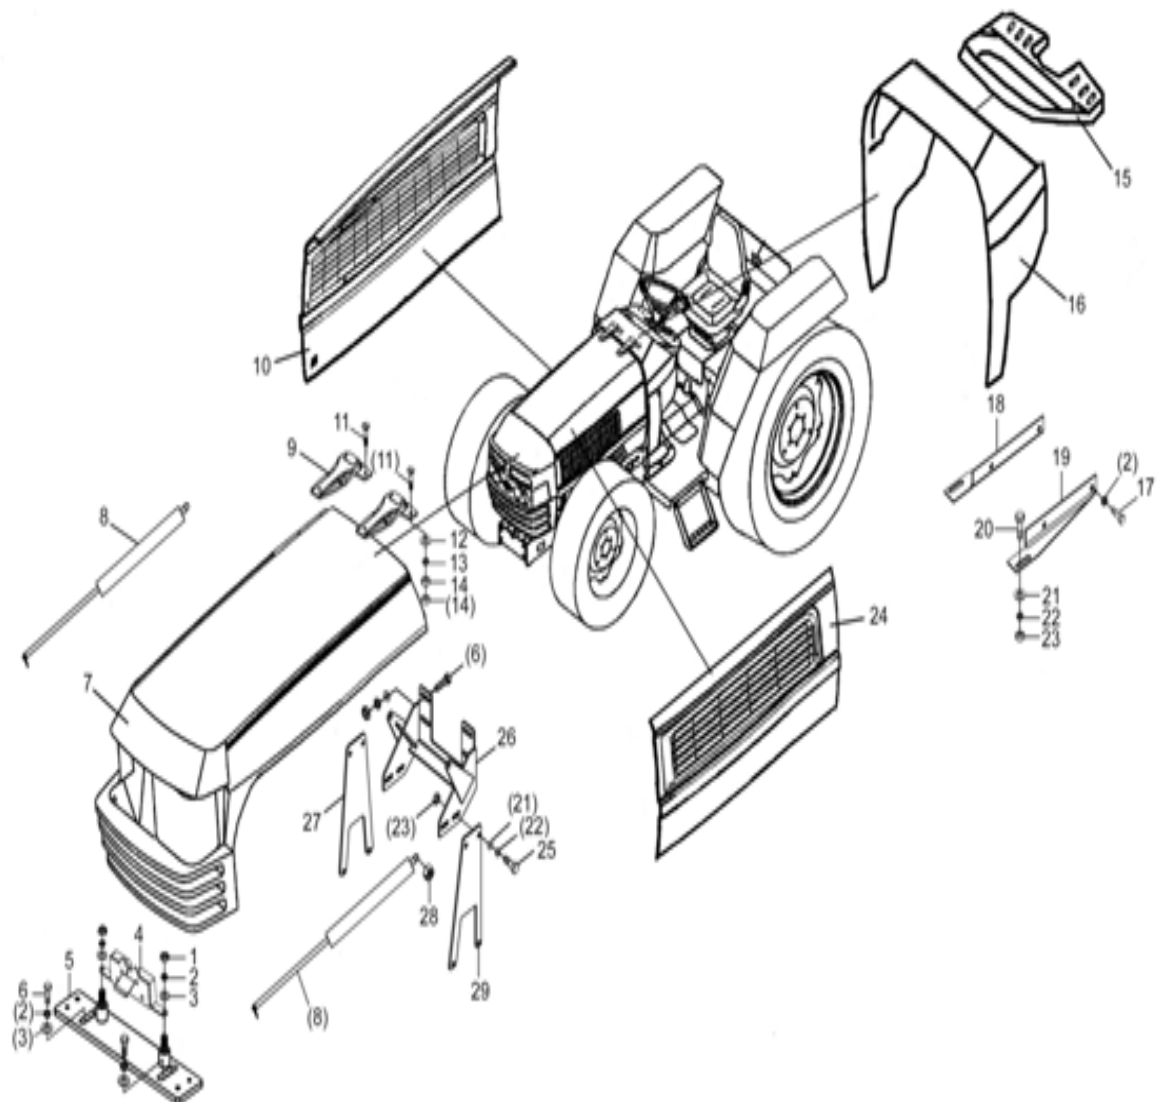

Hood Panel and Bracket III

Hood Panel and Bracket III


Ser No.	Part No.	Description	Qty
1	GB/T6170	Nut M10	2
2	GB/T97.1	Washer 10	8
3	GB/T93	Washer 10	4
4	300.47B.019	Engine hood front bracket weldment	1
5	300.47.083	Support	1
6	GB/T5783	Bolt M10 x 25	6
7	300.47B.014	Engine hood assembly-----1	1
	300.47B.014A	Engine hood assembly-----2	1
	300.47B.023A	Engine hood assembly-----3	1
	300.47B.023	Engine hood assembly-----4	1
8	YQ10-175-560	Spring for gas (400N)	2
9	BL-017-B	Hinge	2
10	300.47B.203	Cover, right side	1
11	GB/T819	Screw M5 x 30	12
12	GB/T93	Washer 5	12
13	GB/T97.1	Washer 5	24
14	GB/T6170	Nut M5	12
15	300.47B.205	Cover, instrument	2
16	300.47B.206	Fuel tank hood	1
17	GB/T5783	Bolt M10 x 20	4
18	300.47.558A		1
19	300.47.557A		1
20	GB/T5782	Bolt M8 x 30	2
21	GB/T97.1	Washer 8	6
22	GB/T93	Washer 8	6
23	GB/T6170	Nut M8	6
24	300.47B.207	Cover, left side	1
25	GB/T5783	Bolt M8 x 30	4
26	300.47.079	Accommodate bracket	1
27	300.47.530A-1	Right bracket (TY395)-----2	1
	300.47.530B-2	Right bracket (TY395)-----1 3 4	1
	300.47.530G	Right bracket (4L22T)-----2	1
	300.47.530D	Right bracket (4L22T)-----1 3 4	1
28	GB/T889	Nut M8	4
29	300.47.531A-1	Left bracket (TY395)-----2	1
	300.47.531B-3	Left bracket (TY395)-----1 3 4	1
	300.47.531G	Left bracket (4L22T)-----2	1
	300.47.531D	Left bracket (4L22T)-----1 3 4	1

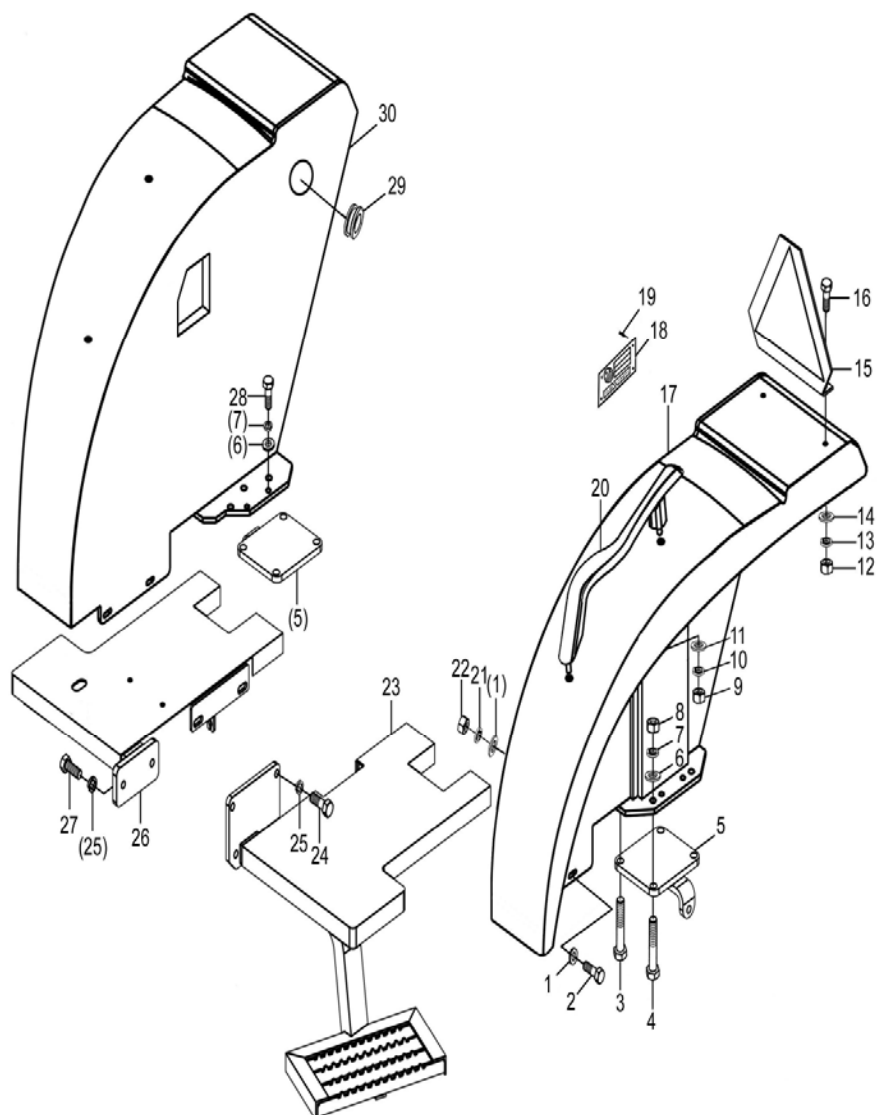

Mud Shield and Step

Mud Shield and Step


Ser No.	Part No.	Description	Qty
1	GB/T93	Washer 8	4
2	GB/T5783	Bolt M8 x 20	4
3	GB/T5782	Bolt M14 x 190-8.8	4
4	GB/T5782	Bolt M14 x 180-8.8	4
5	300.47.024	Limiting chain pull plate	2
6	GB/T97.1	Washer 14	8
7	GB/T93	Spring washer 14	12
8	GGB/T6170	Nut M14	8
9	GB/T6170	Nut M12	4
10	GB/T93	Washer 12	12
11	GB/T97.1	Washer 12	12
12	GB/T6170	Nut M6	2
13	GB/T93	Washer 6	2
14	GB/T97.1	Washer 6	2
15	180.47.402-1	Caution mark	1
16	GB/T5783	Bolt M6 x 20	1
17	300.47.032A	Left mud shield	1
	304.47B.051A		1
18	180.47.147-F	Emblem	1
19	GB/T12618	Rivet	4
20	180.47.024	Hand rail	2
	400.47.024	Hand rail	2
21	GB/T93	Washer 8	14
22	GB/T6170	Nut M6	4
23	300.47.034	Left step and bracket (Hole-step)	1
24	GB/T5783	Bolt M10 x 30	4
25	GB/T93	Washer 10	10
26	300.47.033A	Right step and bracket (Hole-step)	1
27	GB/T5783	Bolt M10 x 20	6
28	GB/T5783	Bolt M14 x 40	4
29	300.47.701	Rubber washer	1
30	300.47.031A-1	Right mud shield	1
	304.47B.051A		

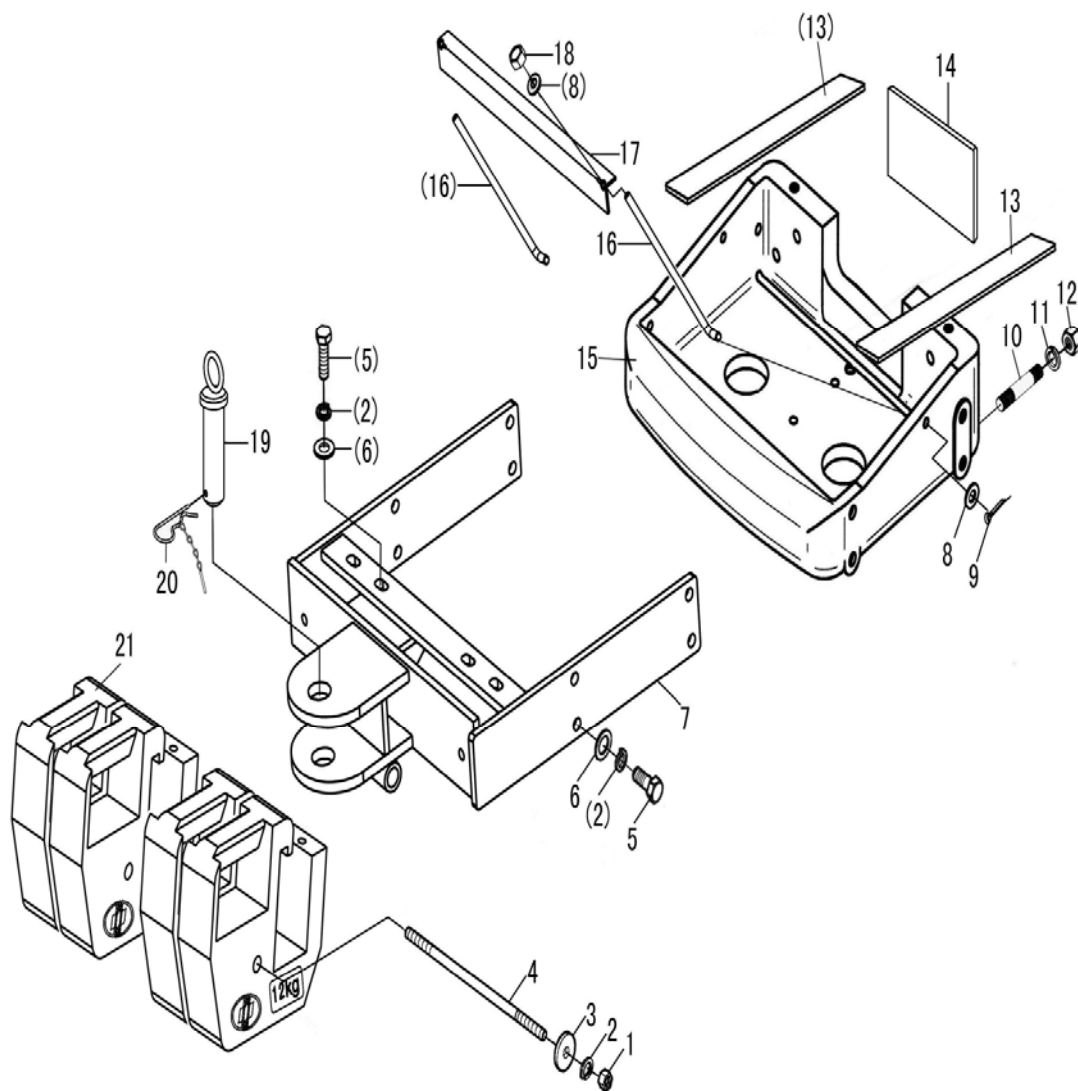

Battery Support Seat Assembly I

Battery Support Seat Assembly I

Ser. No	Part No.	Description	Qty
1	GB/T6170	Nut M12	2
2	GB/T93	Washer 12	14
3	GB/T96	Big washer 12	2
4	300E.31.203	Screw rod	1
5	GB/T5783	Bolt M12 x 35	12
6	GB/T97.1	Washer 12	12
7	300E.31.010-1	Front ballast carrier weldment	1
8	GB/T97.1	Washer 8	4
9	GB/T91	Split pin 2 x 20	2
10	GB/T898	Stud AM14 – M14 x 1.5 x 50	4
11	GB/T93	Washer 14	4
12	GB/T6176	Nut M14	4
13	160.48.124	Rubber pad	2
14	300.48.103-1	Pad	1
15	300.48.121-1	Batter support seat	1
16	300.48.150	Thread rod	2
17	300.48.107	Clamping plate	1
18	GB/T6170	Nut M8	4
19	300E.31.011	Connect pin	1
20	300E.35.020	Split pin	1
21	300E.31.202	Ballast weight	4



Battery Support Seat Assembly II

Battery Support Seat Assembly II


Ser. No	Part No	Description	Qty
1	GB/T6170	Nut M12	2
2	GB/T93	Washer 12	6
3	300E.31.203	Screw rod	1
4	300.48.032	Welding pieces of support	1
	300.48.032A	Welding pieces of support	1
5	GB/T97.1	Washer 8	2
6	GB/T91	Split pin 2 x 20	2
7	GB/T898	Stud AM14-M14 x 1.5 x 50	4
8	GB/T93	Washer 14	4
9	GB/T6176	Nut M14	4
10	300.48.325	Rubber pad	2
11	300.48.156	Rubber pad	2
12	300.18.150	Thread rod	2
13	300.48.107	Clamping plate	1
14	GB/T889	Washer 8	2
15	GB/T5783	Bolt M12 x 35	4
16	GB/T97.1	Washer 12	4
17	GB/T93	Washer 12	4
18	300E.31.011	Connect pin	1
19	300E.35.020	Split pin	1
20	300.47.702		1
21	GB/T5783	Bolt M10 x 20	2
22	GB/T93	Washer 10	2
23	300E.31.202	Ballast weight	4



Tool Box

Tool Box


Ser. No	Part No.	Description	Qty
1	160.49.001	Tool box assembly	1
2	GB/T6170	Nut 12	2
3	GB/T93	Washer 12	2
4	GB/T97.1	Washer	2
5	GB/T5783	Bolt M12 x 25	2
6	700.49.101	Fixed bracket	1
7	GB/T91	Pin 6.3 x 20	1

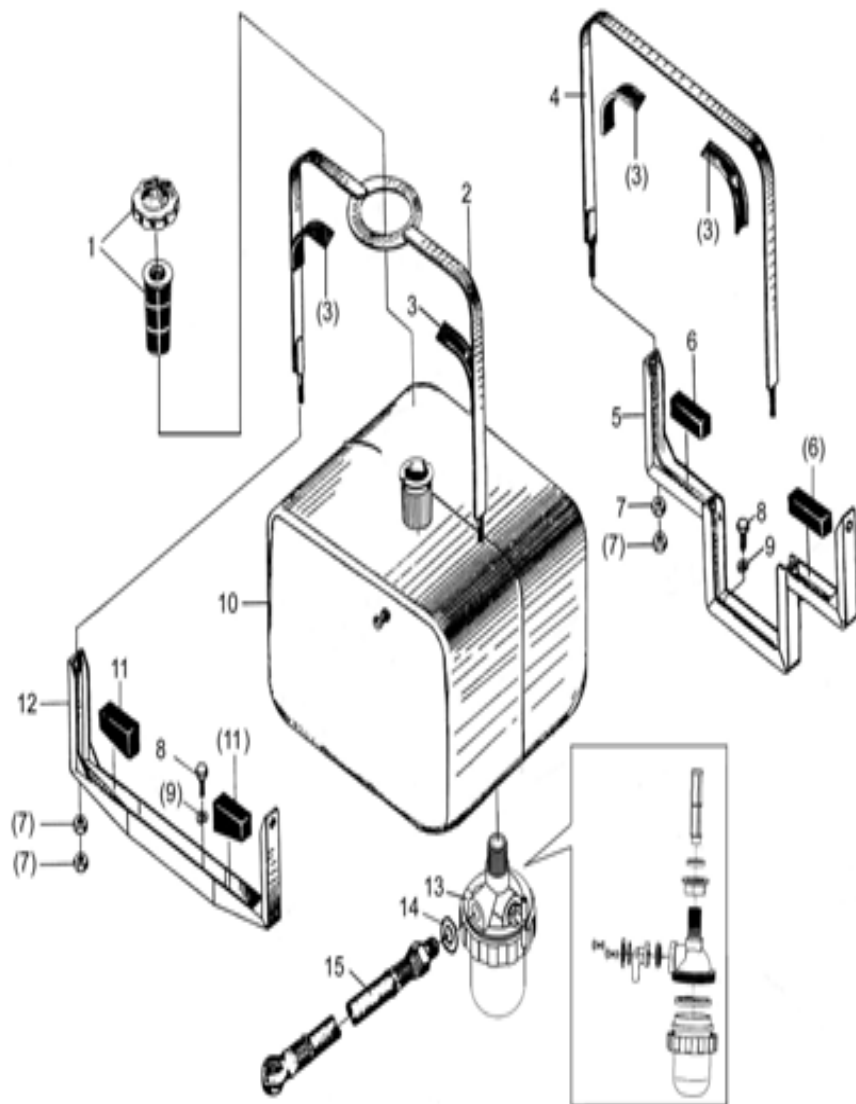

Fuel Tank

Fuel Tank

Ser. No	Part No.	Description	Qty
1	250.50.022	Fuel tank cap assembly	1
	160.50.015	Screen, oil filler hole	1
2	300.50.012	Front steel band	1
3	300.50.101-2	Rubber pad	4
4	300.50.013	Rear steel band	2
5	300.50.017-1	Fuel tank rear support	1
6	300.50.104	Rear rubber block	2
7	GB/T6170	Nut M8	8
8	GB/T5783	Bolt M8 x 20	4
9	GB/T93	Washer 8	4
10	300.50.011A-2	Fuel tank	1
	300.50.011H	Fuel tank	1
11	300.50.103	Front rubber block	2
12	300.50.016-1	Fuel tank front support	1
13	250.50.020	Sedimentary cap	1
	250.50.901	Screen, oil filter hole	1
	250.50.902	Oil filler seat	1
	250.50.903	Seal ring	1
	250.50.904	Nut	1
	250.50.905	Seal ring	1
	250.50.906	Screen	1
	250.50.907	Handle cap	1
	250.50.908	Washer	1
	250.50909	Handle	1
	250.50.910	Seal ring	1
	250.50.911	Cup	1
14		Washer 12	1
15	300.50.018-1	Fuel pipe assembly (500mm) (for TY395 engine)	1

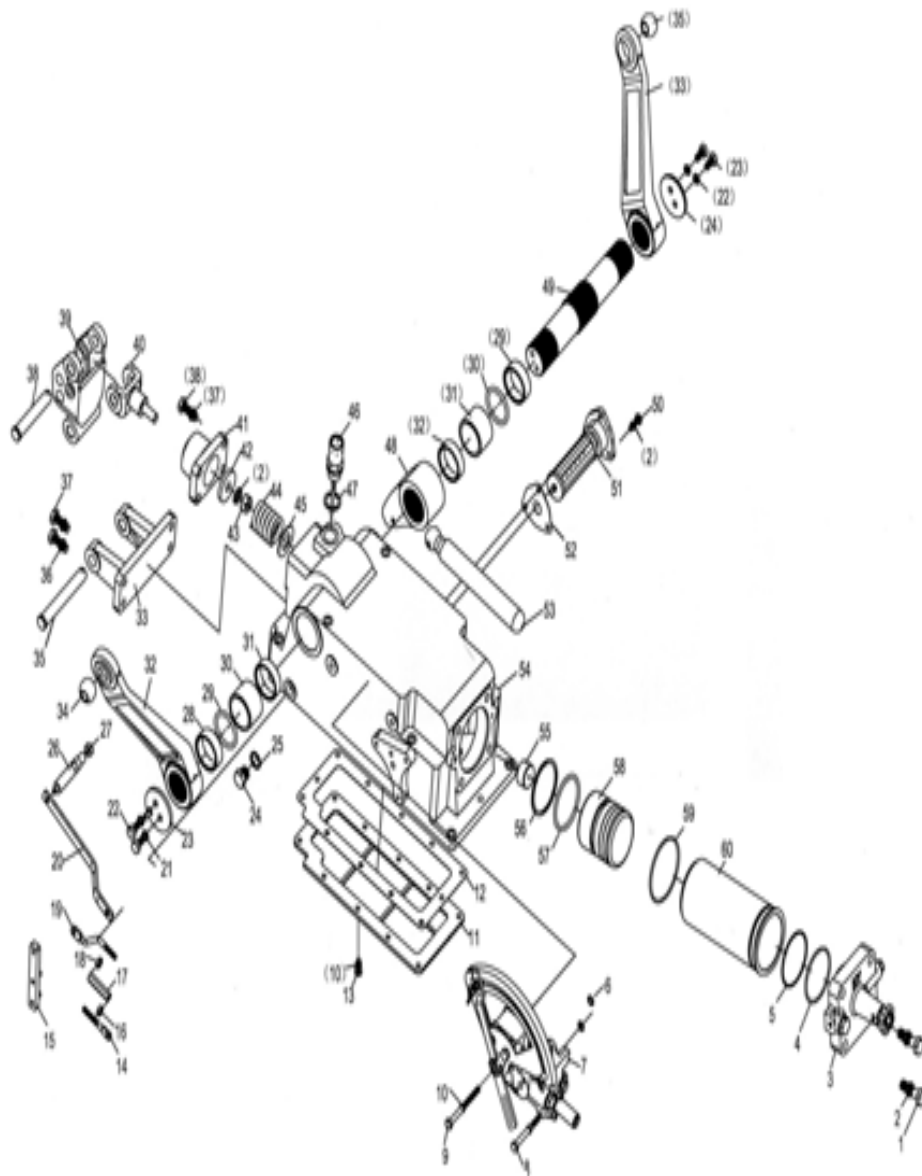

Lifter Assembly

Lifter Assembly

Ser. No	Part No.	Description	Qty
1	GB5785-86	Bolt M14 x 1.5 x 50	4
2	GB93-87	Washer 14	4
3	YT300B.55.011	Cylinder cap assy	1
4	GB3452.1-92	O-ring 77.5 x 3.55	1
5	E300.55.118	Circlip 85 x 1.5	1
6	GB3452.1-92	O-ring 11.8 x 2.65	2
7	E300.57.001	Distributor assy	1
8	GB5782-86	Bolt M8 x 80	2
9	GB5782-86	Bolt M8 x 100	1
10	GB93-87	Washer 8	18
11	YT300B.55.103	Bottom cover	1
12	YT300B.55.102	Gasket	1
13	GB5781-86	Bolt M8 x 20	12
14	E300.55.169	Front adjusting link	1
15	E300.55.017	Swing pole	1
16	300.55.158	Nut M8	1
17	YT300B.55.110	Adjusting bush	1
18	GB6170-86	Nut M8	1
19	300.55.156	Rear adjusting link	1
20	YT300B.55.109	Connecting link	1
21	GB93-87	Washer 10	4
22	GB5781-86	Bolt M10 x 20	4
23	YT500.55.020	Plate	1
24	150D.55.228-2	Plug	1
25	150.54.118	Washer	1
26	YT300B.55.115	Pin	1
27	GB6170-86	Nut M10	1
28	YT300.55.111C	Bush	2
29	GB1235-76	O-ring 60 x 5.7	2
30	BY350.55.122	Lifting bush	2
31	YT300B.55.111B	Bush	2
32	FT500A.55.119	Lifting arm	2
33	25.55.125	Support	1
34	25.55.156	Ball connector	2
35	25.55.128	Rocker arm link pin	1
36	GB93-87	Washer 12	8
37	GB5782-86	Bolt M12 x 35	8
38	25.55.126	Pin	1
39	YT300B.55.108	Rocker arm	1
40	YT300B.55.107	Sensor	1
41	YT300B.55.105	Spring	1
42	YT300B.55.106	Spring plate	1
43	GB6170-86	Nut M14	1
44	E300.55.107	Draft-responsive control spring	1
45	YT300B.55.104	Washer	1
46	TS300B.55.041	Dipstick	1
47	18.55.104	Washer	1
48	300.55.151	Inlet arm	1
49	YT300B.55.112	Lift shaft	1
50	GB5783-86	Bolt M8 x 25	3
51	YT300A.55.039	Lifter assy	1
52	YT300.55.253	Gasket	1

Ser. No	Part No.	Description	Qty
53	E300.55.152	Piston rod	1
54	YT300B.55.101	Lift case	1
55	E300.55.142	Piston ball seat	1
56	E300.55.117	Washer 85 x 2	1
57	GB3452.1-92	O-ring 75 x 5.3	1
58	E300.55.141	Piston	1
59	GB3452.1-92	O-ring 90 x 3.55	1
60	YT300B.55.114	cylinder	1



Distributor Assembly

Distributor Assembly

Ser. No	Part No.	Description	Qty
1	GB62-88	Nut M6	2
2	GB97.1-85	Washer 8	3
3	T30.57.123	Spring	1
4	E300.57.151	Control handle	1
5	GB5781-86	Bolt M10 x 16	2
6	T30.57.147	Stopper	1
7	E300.57.128	Bush	2
8	T30.57.108	Handle shaft	1
9	GB91-86	Pin 2 x 12	3
10	T30.57.125	Pin	1
11	T30.57.110	Control lever	1
12	GB5782-86	Bolt M6 x 75	4
13	GB859-87	Washer 6	7
14	T30.57.117A	Cover	1
15	T30.57.119	Swing pole	1
16	T30.57.109	Feedback shaft	1
17	T30.57.120	Feedback small arm	1
18	E300.57.135	Pin	1
19	T30.57.133-2	Feedback arm	1
20	GB3452.1-92	O-ring 9.5 x 2.65	2
21	T30.57.118	Gasket	1
22	GB879-86	Pin 5 x 24	4
23	T30.57.115-2A	Distributor case	1
24	T30.57.122	Main control valve	1
25	T30.57.104-2	Oil return valve	1
26	T30.57.103-1	Spring	1
27	GB3452.1-92	O-ring 19 x 2.65	1
28	T30.57.112	Spring	1
29	T30.57.102-1	Plug	1
30	GB3452.1-92	O-ring 19 x 2.65	6
31	GB70-85	Screw M6 x 16	3
32	T30.57.113	Front cover	1
33	T30.57.105	Spring support	1
34	T30.57.156—158	Adjusting washer	Δ
35	T30.57.106	Spring	1
36	T30.57.107	Safety valve	1
37	T30.57.127	Safety valve support	1
38	T30.57.128	Safety valve plug	1
39	T30.57.159—161	Adjustment washer	Δ
40	T30.57.114	Pushing pin	1
41	T30.57.166	Relief valve	1
42	T30.57.140-1	Spring	1
43	T30.57.138	Valve bush	1
44	T30.57.139	Valve case	1
45	GB3452.1-92	O-ring 16 x 1.8	1
46	T30.57.137	Valve plug	1
47	GB3452.1-92	O-ring 22 x 4x 2.65	1
48	T30.57.145B	Plug	1
49	T30.57.144B	Spring	1
50	T30.57.164	Washer	1
51	T30.57.142B	Needle valve	1
52	T30.57.143B	Valve seat	1

Ser. No	Part No.	Description	Qty
53	T30.57.124	Impacted screw	1
54	T30.57.126	Limited screw	1
55	E300.57.147-1	Control plate	1
56	T30.57.129	Limited bush	1
57	GB859-87	Washer 10	2
58	E300.57.132	Handle bush	1



Suspension Mechanism Assembly

Suspension Mechanism Assembly


Ser. No	Part No.	Description	Qty
1	300.56.184	Connecting pin	2
2	300.56.018	Upper adjusting UKD, lift link	2
3	184.56.102	Split pin (I)	6
4	300.56.023	Rear connecting pin & lock pin assembly	1
	160.56.014	Upper link lock pin assembly	1
		Zinc-coated iron wire chain #14	2
	300.56.127	Rear connecting pin, upper link	1
	300.56.128	Connecting ring	1
	300.56.129	Connecting round ring	1
5	300.56.020	Rear adjusting rod assembly, upper link	1
	300.56.122	Rear adjusting rod, upper link	1
6	160.56.110	Spherical joint, upper link	1
7	300.56.022-1	Adjusting thread pipe assembly, upper link	1
8	GB/T7940.1B	Oil cup M10 x 1	3
9	300.56.021	Front adjusting rod assembly, upper link	1
10	GB/T6170	Nut M22-Left	2
11	300.56.105	Thread pipe, hydraulic power lift	2
12	GB/T6170	Nut M22	2
13	300.56.019	Weldment assembly, lift link	2
14	300.56.015	Right lower link assembly with lock pin	1
	300.56.028	Right lower link assembly	1
	160.56.014	Lock pin assembly	1
		Zinc-coated iron wire chain #14	1
	GB/T91	Split pin 5 x 55	1
15	GB/T882	Axis pin B16 x 50	2
16	GB/T6170	Nut M14	2
17	GB/T93	Plain washer 14	2
18	300.56.048	Limit chain assembly lower link	1
	300.56.144	Chain ring, lower link	13
	300.56.145	Fixing bolt, lower link	2
19	300.56.012	Left lower link assembly with lock pin	1
	300.56.024	Left lower link assembly	1
	160.56.014	Lock pin assembly	1
		Zinc-coated iron wire chain 14#	1
	GB/T91	Split pin 5 x 22	1
20	GB/T6170	Nut 16	2
21	GB/T93-1987	Plain washer 16	2
22	300.56.017A	External limit assembly	2
	300.56.035	Adjusting bolt assembly I	1
	300.56.036	Adjusting bolt assembly II	1
	300.56.220	Adjusting rod	1
	GB/T6170	Nut M22-lift	1
	GB/T6170	Nut M22	1
23	GB/T95	Plain washer 10	2
24	GB/T882	Clevis pin with head B10 x 40	2
25	300.56.301	External limit chain	2



Air Brake Assembly

Air Brake Assembly

Ser .No	Part No.	Description	Qty
1	GB/T5783	Bolt M8 x 20	8
2	300.80.322	Connecting plate	2
3	GB/T97.1	Washer 8	10
4	GB/T93	Washer 8	10
5	GB/T6170	Nut M8	6
6	180.50.021	Safety valve assembly	1
7	300.80.012B-1	Air tank weldment	1
8	300.80.321	Air tank plate	1
9	300.80.021B	Outlet pipe assembly (for TY359/3100 engine)	1
	300.80.021C	Outlet pipe assembly (for SL2105ABT engine)	1
	300.80.021D	Outlet pipe assembly (for ZN390 engine)	1
	300.80.021E	Outlet pipe assembly (for ZN490 engine)	1
	300.80.021F	Outlet pipe assembly (for 4L22BT engine)	1
10	180.50.413	Washer	8
11	180.50.412	Bolt	4
12	300.80.010	Air pressure gauge pipe assembly	1
13	300.80.018	Brake valve inlet pipe assembly	1
14	300.80.315	Tube clamp	1
15	300.80.011	Brake valve air outlet pipe assembly	1
16	180.50.020	Brake valve assembly	1
17	GBT5782	Bolt M8 x 50	2
18	GB/T882	Clevis pin with head B10 x 30	1
19	180.50.411	Brake valve adjusting fork	1
20	GB/T6170	Nut M10	1
21	GB/T95	Washer 10	2
22	GB/T91	Split pin 3.2 x 16	2
23	300.80.313	Brake valve pull rod	1
24	300.80.304	Tube clamp	2
25	x300.80.021	Air compressor-----ZN390/490/SL2105	1
	300.80.016	Air compressor-----TY395/TY3100	1




Power Steering Assembly

Power Steering Assembly

Ser. No	Part No.	Description	Qty
1	160.40.016A	Steering wheel assembly	1
	160.40.019	Steering wheel assembly	1
	160.40.020	Steering wheel assembly	1
2	GB/T6171	Nut M16 x 1.5	1
3	404YZ.40.003	Column	1
4	GB/T5783	Bolt M10 x 30	4
5	GB/T93	Washer 10	6
6	GB/T5783	Bolt M8 x 25	2
7	GB/T93	Washer 8	2
8	GB/T5783	Bolt M10 x 25	2
9	304YZ.40.011-1	Steering support weldment	1
10	C905-01	Power steering gear	1
11	160.54.401	Washer	4
12	GB3452.1	O-ring 10 x 2.65	8
13	304YZ.40.106	Pipe connector power steering	4
14	D17EAA-16	Washer 16	4
15	GB/T898	Stud AM12-M12 x 40	2
16	GB/T93	Washer 12	6
17	GB/T6170	Nut M12	2
18	304YZ.40.015-2	Pipe assembly, steering cylinder (Right)	1
19	304YZ.40.014-2	Pipe assembly, steering cylinder (Left)	1
20	304YZ.40.130	Nut M20 x 1.5	2
21	304YZ.40.019-3	Pipe support weldment, steering cylinder	1
22	304YZ.40.121	Connector	2
23	304YZ.40.020	Steering pipe assembly---ZN390/TY395/4L22T	2
	554YZ.40.021	Steering pipe assembly----4L22BT/ZN490	2
24	304YZ.40.010-1	Steering cylinder assembly	1
	180YZ.40.041-A	Steering cylinder assembly	1
25	304.YZ.31.022-1	Pull rod joint assy	1
26	304YZ.31.301-1	Back support of hydraulic cylinder	1
27	GB/T119	Pin D12 x 25	2
28	GB/T93	Washer 14	2
29	GB/T5786	Bolt M14 x 35	2
30	GB/T6171	Nut M20 x 1.5	1
31	GB/T91	Split pin 3.2 x 26	2
32	GB/T6178	Nut M12	2
33	304YZ.31.020-1	Connector assembly, steering cylinder	1
34	304YZ.40.012B		1
35	GB/T5783	Bolt M12 x 25	4
36	304YZ.40.212A	Soft pipe, PVC	1
37	DP160.40.010-1	Power steering tank	1
38	D16-15001-20	Circlip 13-32	4
39	304YZ.40.212B	Soft pipe, PVC	1
40	304YZ.40.018-2	Inlet pipe assembly, power steering gear	1
	304T.40.018	Inlet pipe assembly, power steering gear	1
	304YZ.40.018C	Inlet pipe assembly, power steering gear	1
	304YZ.40.018E	Inlet pipe assembly, power steering gear	1
	304YZ.40.052	Inlet pipe assembly, power steering gear	1
	354YZ.40.014	Inlet pipe assembly, power steering gear	1
	354YZ.40.014A	Inlet pipe assembly, power steering gear	1
41	GB/T70	Bolt M8 x 40	2


Ser. No	Part No.	Description	Qty
43	C901-306-102	Stable overflow pump	1
	C901-306-103	Stable overflow pump	1
44	C901-306-105	Stable overflow pump	1
45	304YZ.40.204	Pipe clip II	1
46	304YZ.40.202	Pipe press plate II	1
	304YZ.40.016-2	Inlet pipe assembly, power steering gear	1
	304.40.016SB	Inlet pipe assembly, power steering gear	1
	304YZ.40.016C	Inlet pipe assembly, power steering gear	1
	304YT.40.016E	Inlet pipe assembly, power steering gear	1
	304YT.40.050	Inlet pipe assembly, power steering gear	1
	354YT.40.012	Inlet pipe assembly, power steering gear	1
47	354YZ.40.012A	Inlet pipe assembly, power steering gear	1
	304YZ.40.017-2	Oil return pipe assembly, power steering gear	1
	304.40.017SB	Oil return pipe assembly, power steering gear	1
	304YZ.40.017C	Oil return pipe assembly, power steering gear	1
	304YZ.40.017E	Oil return pipe assembly, power steering gear	1
	304YZ.40.051	Oil return pipe assembly, power steering gear	1
	354YZ.40.012	Oil return pipe assembly, power steering gear	1
48	354YZ.40.012A	Oil return pipe assembly, power steering gear	1
	304YZ.40.105-1	Connecting base, power steering gear	1
42	GB/T3452.1	O-ring 20 x 2.65	1



Side Hydraulic Steering Assembly

Side Hydraulic Steering Assembly


Ser. No	Part No.	Description	Qty
1	304YZ.40.030	Rear support seat	1
2	160YZ.40.030-1	45° connector	2
3	GB452.1-1992	O-ring 10 x 2.65	4
4	160YZ.40.011-1	pipe	2
5	304YZ.40.106	Pipe connector power steering	2
6	160YZ.40.102	Bush	1
7	GB/T6178	Nut M16	1
8	GB/T91	Pin 4 X 32	1
9	184YZ.40.041-B	Steering cylinder SG45 X 160	1
10	GB/T6173	Nut M20 X 1.5	1
11	304YZ.40.140	Connecting rod	1
12	GB/T6173	Nut M20 x 1.5-left	1
13	304YZ.31.156-1	Left steering knuckle arm	1
14	304YZ.31.022-1A	Pull rod joint	1
15	GB/T5783	Bolt M12 x 30	4
16	GB/T93	Washer 12	4
17		Washer 14	2



Pump and Pipe I

Pump and Pipe I

Ser. No	Part No.	Description	Qty
1	GB/T5783	Bolt M8 x 20	2
2	GB/T93	Washer 8	2
3	304YZ.54.040-1	Inlet pipe assembly	1
4	300.54.101	Screw, inlet pipe	1
5		Washer 20	2
6	GB/T3452.1	O-ring 18 x 2.65	1
7	CBN-E314	Gear pump	1
8	GB/T5783	Bolt 10 x 35	4
9	304YZ.54.022	Outlet pipe assy (III)	1
10		Quick release connector TRA12.5	1
11	304YZ.54.023	Outlet pipe assy (IV)	1
12	GB/T3452.1	O-ring 10 x 2.65	1
13	DP184.54.116	Connector	1
14	GB/T6173	Nut M22 x 1.5	1
15	GB/T6170	Nut M10	1
16	GB/T93	Washer 10	5
17	GB/T97.1	Washer 10	5
18	304YZ.54.021-2	Mounting seat weldment of outlet pipe	1
19	GB/T5783	Bolt 10 x 30	1
20	304YZ.54.013A	Outlet pipe assy I	1
21	GB/T5783	Bolt 8 x 40	2
22	GB/T3452.1	O-ring 11.2 x 2.65	1
23	GB/T5783	Bolt M10 x 25	3
24	304.37S.411	Cover	1
25	304.37S.412	Gasket	1
26	304YZ.54.041-1	Outlet pipe assy II	1
27	300.54.090	Filter assembly	1
	300.54.901	Valve seat	1
	300.54.902	Valve body	1
	300.54.903	Spring	1
	JX0810-0001	Seal loop	1
	JX0811A-0000	Oil filter	1
28	250.54.112	Filter assembly	2



Pump and Pipe II

Pump and Pipe II


Ser. No	Part No.	Description	Qty
1	GB/T3452.1	O-ring 18 x 2.65	1
2	GB/T93	Washer 8	2
3	GB/T5783	Bolt M8 x 20	2
4	304.54.012	Inlet pipe assembly II	1
	304.54.012A	Inlet pipe assembly II	1
	304.54.012B	Inlet pipe assembly II	1
	304.54.012C	Inlet pipe assembly II	1
	304.54.012D	Inlet pipe assembly II	1
5		Clamp 25	2
6	304YZ.54.513A	Clip cloth oil hose	1
7	160.54.108	Screw inlet pipe	4
8		Washer 18	1
9	C901-310-003	Gear pump	1
	C901-314-004	Gear pump	1
	C901-314-008	Gear pump	1
10	C901-314-010	Gear pump	1
11	GB/T5783	Bolt 10 X 35	1
12	304YZ.54.014C	Outlet pipe assy II	1
	304YZ.54.053A	Outlet pipe assy II	1
13	GB/T3452.1	O-ring 10 x 2.65	1
14	304.54.011	Outlet pipe assy II	1
15	304.54.011A	Outlet pipe assy II	1
16	GB/T5782	Bolt M8 x 40	1
18	GB/T3452.1	O-ring 11.2 x 2.65	1
19		Washer 18	4
20	300.54.101	Bolt	2
21	304.54.010	Inlet pipe assembly II	1
	304.54.010A	Inlet pipe assembly II	1



Hydraulic Take-off Pipe

Hydraulic Take-off Pipe

Ser. No	Part No.	Description	Qty
1	160.54.220	Plastic cover for connector	2
2		Quick release connector TRA12.5	2
3	300.54.201	Outlet pipe bracket	1
4		Compound washer 16	1
5	GB/T5786	Bolt M16 x 1.5 x 16	1
6	400.54.135	Outlet pipe bracket II	1
7	GB/T93	Washer 8	2
8	GB/T5783	Bolt M8 x 16	2
9	160.54.108	Bolt	1
10		Compound washer 18	2
11	300.54.016	Outlet pipe assembly	1
12	300.54.101	Screw, inlet pipe	1
13		Compound washer 20	2
14	300.54.015	Return pipe assembly	1



Hydraulic Take-off Pipe (Multi-way valve)


Hydraulic Take-off Pipe (Multi-way valve)

Ser. No	Part No.	Description	Qty
1	GB/T5783	Bolt M8 x 25	1
2	700.40.145	Clamp plate	2
3	160.54.220	Plastic cover for connector	2
4		Quick release connector TRA12.5	2
5	304YZ.54.058	Outlet pipe assembly	1
6		Washer 18	4
7	160.54.108	Bolt	2
8	304YZ.54.059	Outlet pipe assembly II	1
9	GB/T97.1	Washer 8	1
10	GB/T93	Washer 8	3
11	GB/T6170	Nut M8	1
12	GB/T5783	Bolt M10 x 30	3
13	GB/T93	Washer 10	3
14	GB/T6170	Washer 10	3
15	DLS-L15F-T	Multi-way valve	1
(1)	DLS-L15F-01	Screw M6 x 20	4
(2)	DLS-L15F-02	Washer 6	4
(3)	DLS-L15F-03	Axis pin	1
(4)	DLS-L15F-04	Support	1
(5)	DLS-L15F-05	Main safe valve	1
(6)	DLS-L15F-06	Hoddle	1
(7)	DLS-L15F-07	Valve body	1
(8)	DLS-L15F-08	Case	1
(9)	DLS-L15F-09	Washer	1
16	304YZ.54.056	Bracket weldment	1
17		Washer 22	3
18	400.54.701	Connector	1
19	GB3452.1	O-ring 11.2 x 2.65	2
20	304YZ.54.057	Outlet pipe assembly	1
21	GB/T5782	Bolt M8 x 40	1
22	700.13.130	Bolt	1
23	300.54.026A	Outlet pipe assembly	1


Electrical System Assy

Electrical System Assy

Ser. No	Part No.	Description	Qty
1	C502-Q280	Horn	1
2	GB/T93	Washer 12	3
3	GB/T97.1	Washer 12	3
4	C201-016	Front right	1
5	C702-BX-410	Fuse box	1
6	250.48.035-3	Bracket	1
7	C402-008	Switch for brake light	1
8	C501-001	Regulator	1
9	C503-SG123	Flasher	1
10	C502-J2	Horn relay	1
11	C107-30A	Electric current meter	1
12	C101-002	Water temperature meter	1
13	C103-001	Oil press meter	1
14	C104	Gas press meter	1
15	GB/T6170	Nut M12	1
16	C202-004	Rear light	1
17	C402-010	Veer light switch	1
18	C210-010	Front bulb	2
19	C402-002	Front light switch	1
20	300.48D.025	Main harness	1
21	C210-015	Double light bulb	2
22	C304-003	Speed sensor	1
23	C301-003	Water temperature sensor	1
24	C402-0031	Preheat starting switch	1
25	300.48.062D	Diesel engine harness	1
26	C303-002	Oil pressure plug	1
27	C402-005	Horn switch	1
28	C402-002	Tail lamp switch	1
29	C203-001	Tail lamp	1
30	C210-018	Bulb	2
31	180.48.027-3	Cable, from battery to starter	1
32	180.48.028	Earth cable, battery	1
33	GB/T6170	Nut M8	2
34	C603-6QW-90AH	Battery	1
35	GB/T97.1	Washer 8	2
36	GB/T93	Washer 8	2
37	300.48.063C	Head lamb harness	1
38	300.48.065C	Right apron harness	1
39	300.48.064C	Left apron harness	1
40	250.48.233	Bracket of deposition lamp	2
41	C202-009	Deposition lamp	2

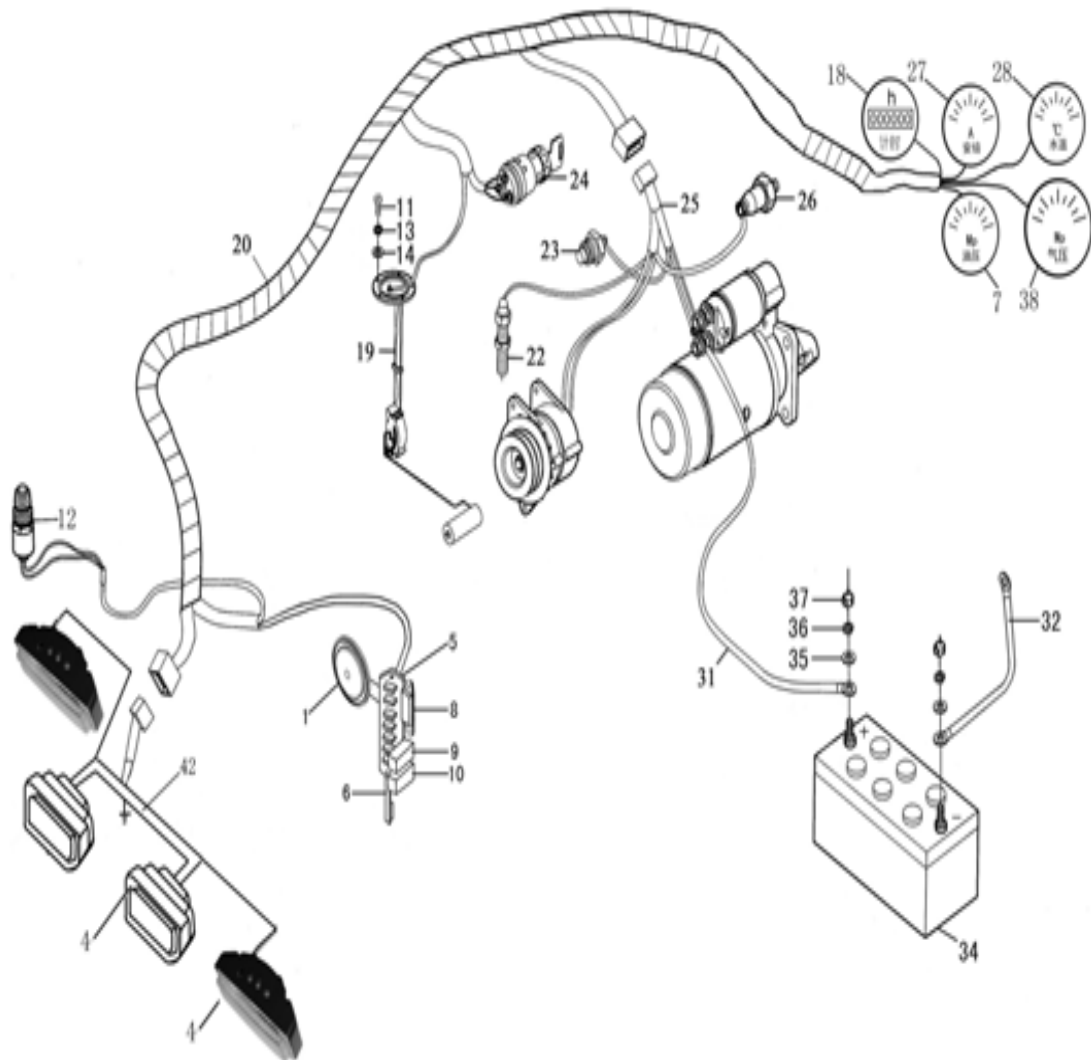


Electrical System Assy I



Cont. Electrical System Assy 1

Electrical System Assy I & Cont. Electrical System Assy 1

Ser. No	Part No.	Description	Qty
1	C502-Q280	Horn	1
2	GB/T93	Washer 12	3
3	GB/T97.1	Washer 12	3
4	C201-016	Front right	1
5	C702-BX-410	Fuse box	1
6	250.48.035-3	Bracket	1
7	C402-008	Switch for brake light	1
8	C501-001	Regulator	1
9	C503-SG123	Flasher	1
10	C502-J2	Horn relay	1
11	C107-30A	Electric current meter	1
12	C101-002	Water temperature meter	1
13	C103-001	Oil pres meter	1
14	C104	Gas press meter	1
15	GB/T6170	Nut M12	1
16	C202-004	Rear light	1
17	C402-010	Veer light switch	1
18	C210-010	Front bulb	1
19	C402-002	Front light switch	2
20	300.48D.025	Main harness	1
21	C210-015	Double light bulb	1
22	C304-003	Speed sensor	2
22	C304-003	Speed sensor	1
23	C301-003	Water temperature sensor	1
24	C402-003	Preheat starting switch	1
25	300.48.062	Diesel engine harness	1
26	C303-002	Oil pressure plug	1
27	C107-30A1	Electric current meter	1
28	C101-0021	Water temperature meter	1
29	C203-002	Tail lamp	1
30	180.48D.039	Left 5-function switch	1
31	180.48.027-3	Cable, form battery to start	1
32	180.48.028	Earth cable, battery	1
33	180.48D.040	Right 2-function switch	1
34	C603-6QW-90AH	Battery	1
35	GB/T97.1	Washer 8	1
36	GB/T93	Washer 8	1
37	GB/T6170	Nut M8	2
38	C104	Gas press meter	2
39	C210-018	Brake light bulb	2
40	C208-002	Warning (option)	1
41	C402-007	Clutch chain switch (neutral switch)	1
42	300.48.063E	Headlamp harness	1
	300.48.063A	Headlamp harness	1
43	300.48.064	Left apron harness	1
44	300.48.065	Right apron harness	2
45	250.48.233	Bracket of deposition lamp	2
46	C202-009	Deposition lamp	

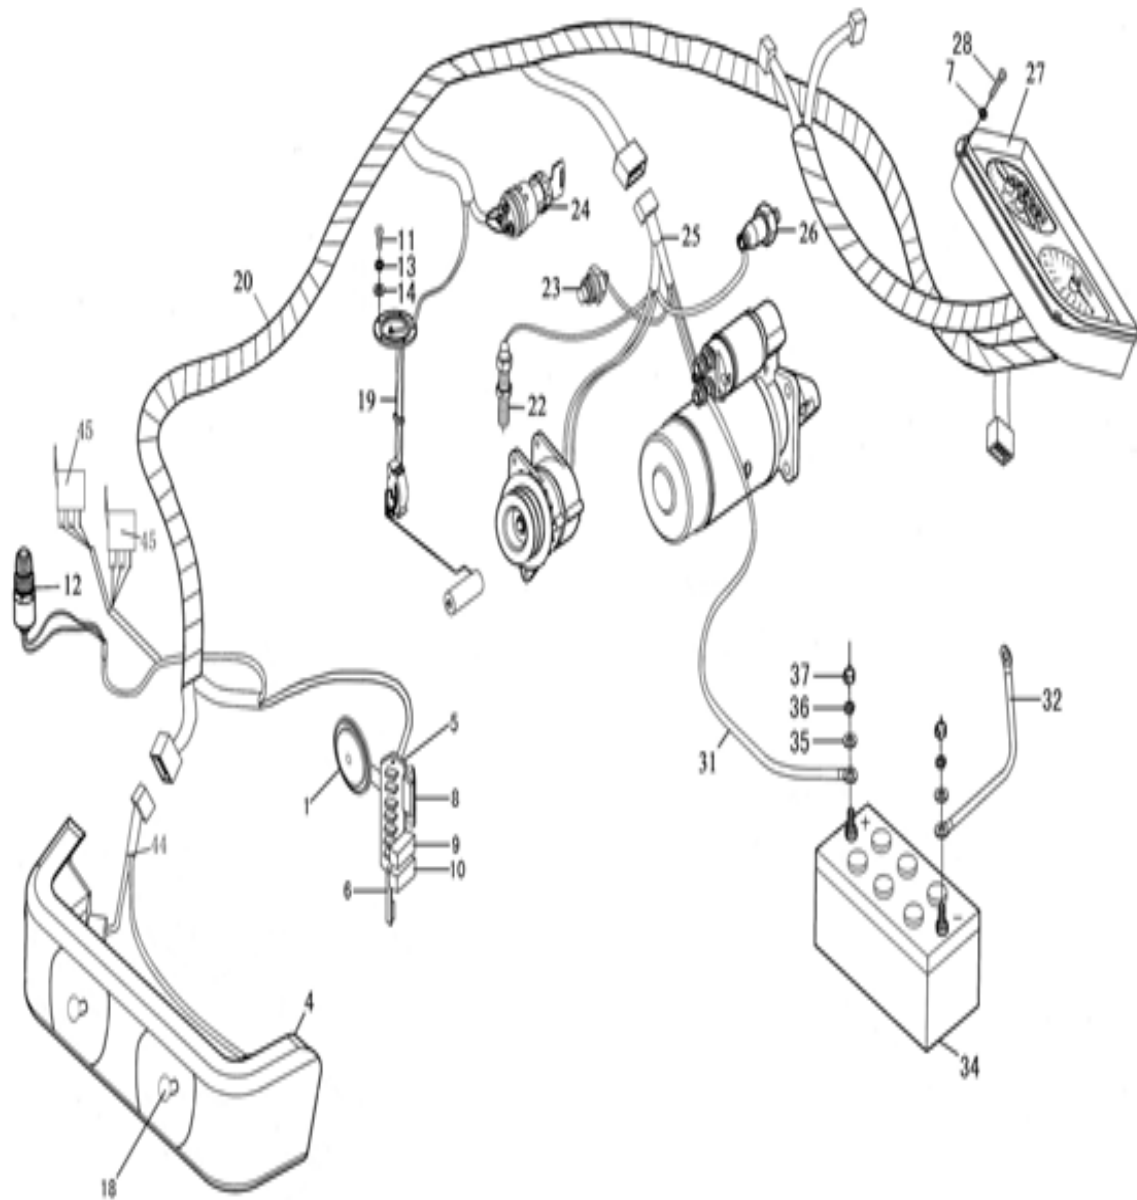

Electrical System Assy II



Cont. Electrical System Assy II

Electrical System Assy II & Cont. Electrical System Assy II

Ser. No	Part No.	Description	Qty
1	C502-Q280	Horn	1
2	GB/T93	Washer 12	3
3	GB/T97.1	Washer 12	3
4	C201-016	Front right	1
5	C702-BX-410	Fuse box	1
6	250.48.035-3	Bracket	1
7	C402-008	Switch for brake light	1
8	C501-001	Regulator	1
9	C503-SG123	Flasher	1
10	C505-J2	Horn relay	1
11	C107-30A	Electric current meter	1
12	C101-002	Water temperature meter	1
13	C103-001	Oil press meter	1
14	C104	Gas press meter	1
15	GB/T6170	Nut M12	1
16	C202-004	Rear light	1
17	C402-010	Veer light switch	1
18	C210-010	Front bulb	2
19	C402-002	Front light switch	1
20	300.48D.025	Main harness	1
21	C210-015	Double light bulb	2
22	C304-003	Speed sensor	1
22	C304-003	Speed sensor	1
23	C301-003	Water temperature sensor	1
24	C402-003	Preheat starter switch	1
25	300.48.062	Diesel engine harness	1
26	C303-002	Oil pressure plug	1
27	C110-015	Gauge unit assembly	1
28	GB/T818	Bolt M6 x 20	6
29	C203-002	Tail lamp	1
30	180.48D.039	Left 5-function switch	1
31	180.48.027-3	Cable, form battery to starter	1
32	180.48.028	Earth cable, battery	1
33	180.48D.040	Right 2-function switch	1
34	C603-6QW-90AH	Battery	1
35	GB/T97.1	Washer 8	2
36	GB/T93	Washer 8	2
37	GB/T6170	Nut M8	2
38	C402-007	Neutrally switch	1
39	C210-018	Brake light bulb	2
40	C208-002	Warning (option)	2
41	C402-007	Clutch chain switch (neutral switch)	1
42	300.48.064	Left apron harness	1
43	300.48.065	Right apron harness	1
44	300.48.063E	Headlamp harness	1
	300.48.063A	Headlamp harness	1
45	C502-001	Relay	2
46	250.48.233	Bracket of deposition lamp	2
47	C202-009	Deposition lamp	2