


SNAPPER®

REAR ENGINE RIDER

SERIES 11

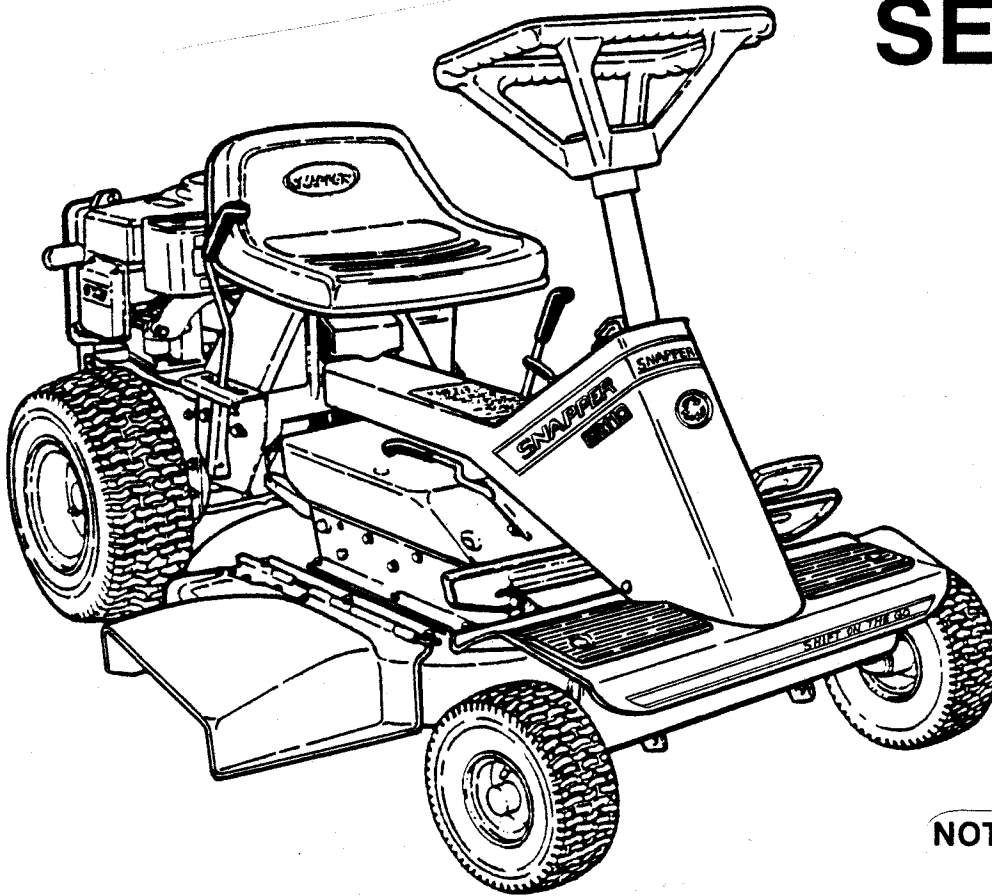


NOTE: The Series number
is the last numeral
in the model number.

SNAPPER® McDonough, GA., 30253 U.S.A.

NOTE: REFER TO PARTS MANUAL #06084 FOR ACCESSORIES.


WHEELS-FRONT

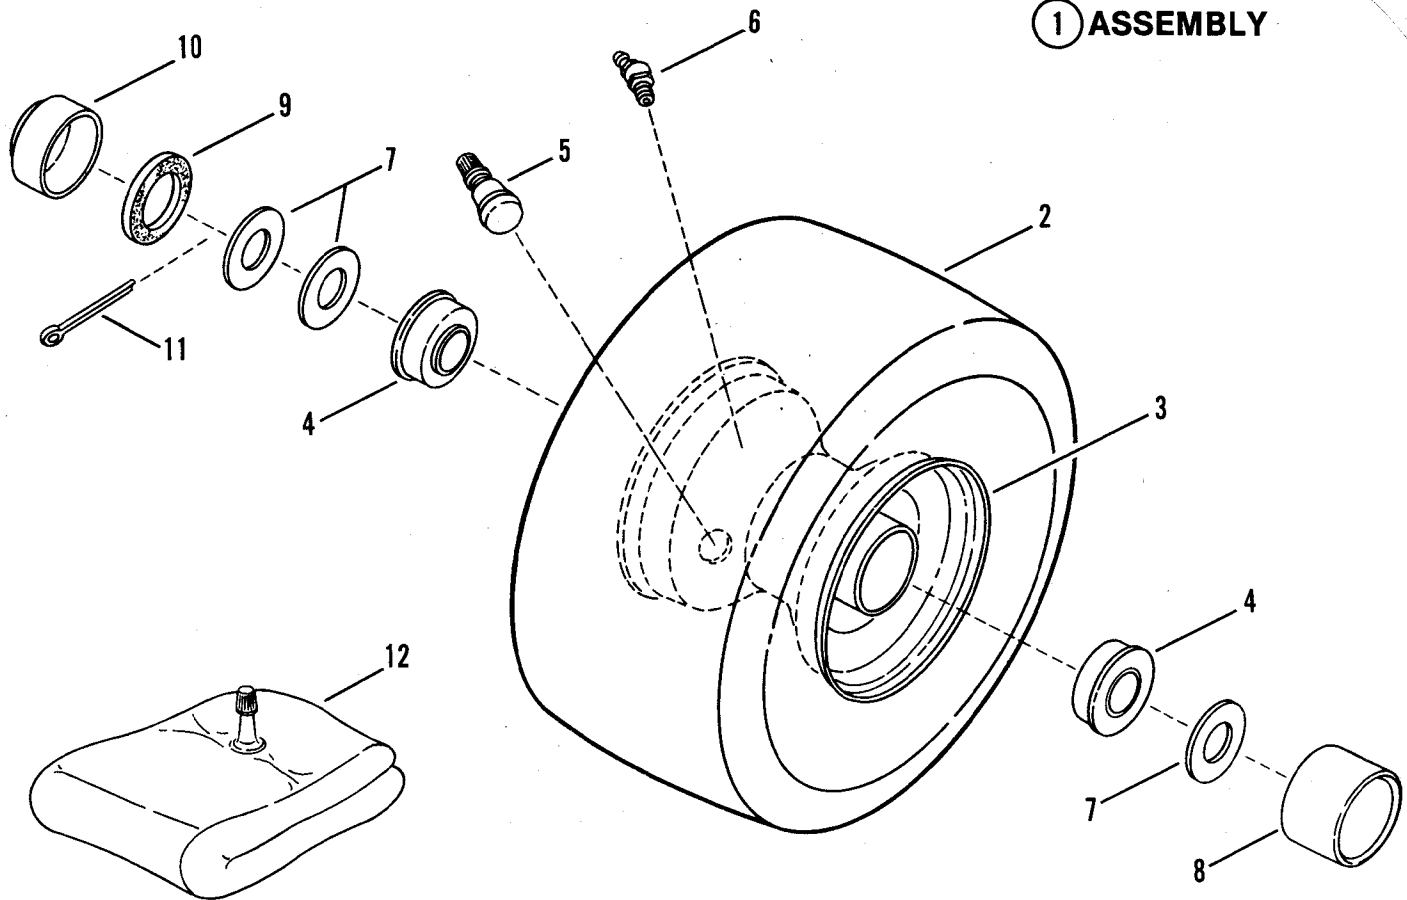

① ASSEMBLY


ITEM	PART NO.	DESCRIPTION
1	5-2268	ASSEMBLY, Front Tire & Rim (Complete)(Includes Items 2,3,4,6,12)
-	5-2267	ASSEMBLY, Front Tire & Rim (Includes Items 2,3,4,5,6)
2	2-3828	TIRE, Pneumatic 4.10/3.50 x 4
3	1-7146	RIM (For 4.10/3.50 x 4 Tire)
4	1-1807	BEARING, Ball
5	1-2234	VALVE, Air (Snap-in)(8, 10 HP)
6	1-4247	FITTING Lube
7	1-0935	WASHER
8	1-1022	CAP, Hub
9	1-1032	SEAL, Felt
10	3-1038	CAP, Dust
11	9-0364	PIN, 5/32 x 1" Cotter
12	1-0821	TUBE, Inner (For 4.10/3.50 x 4 Tire)(11.5, 12.5, 14, 16 HP)

WHEELS-REAR

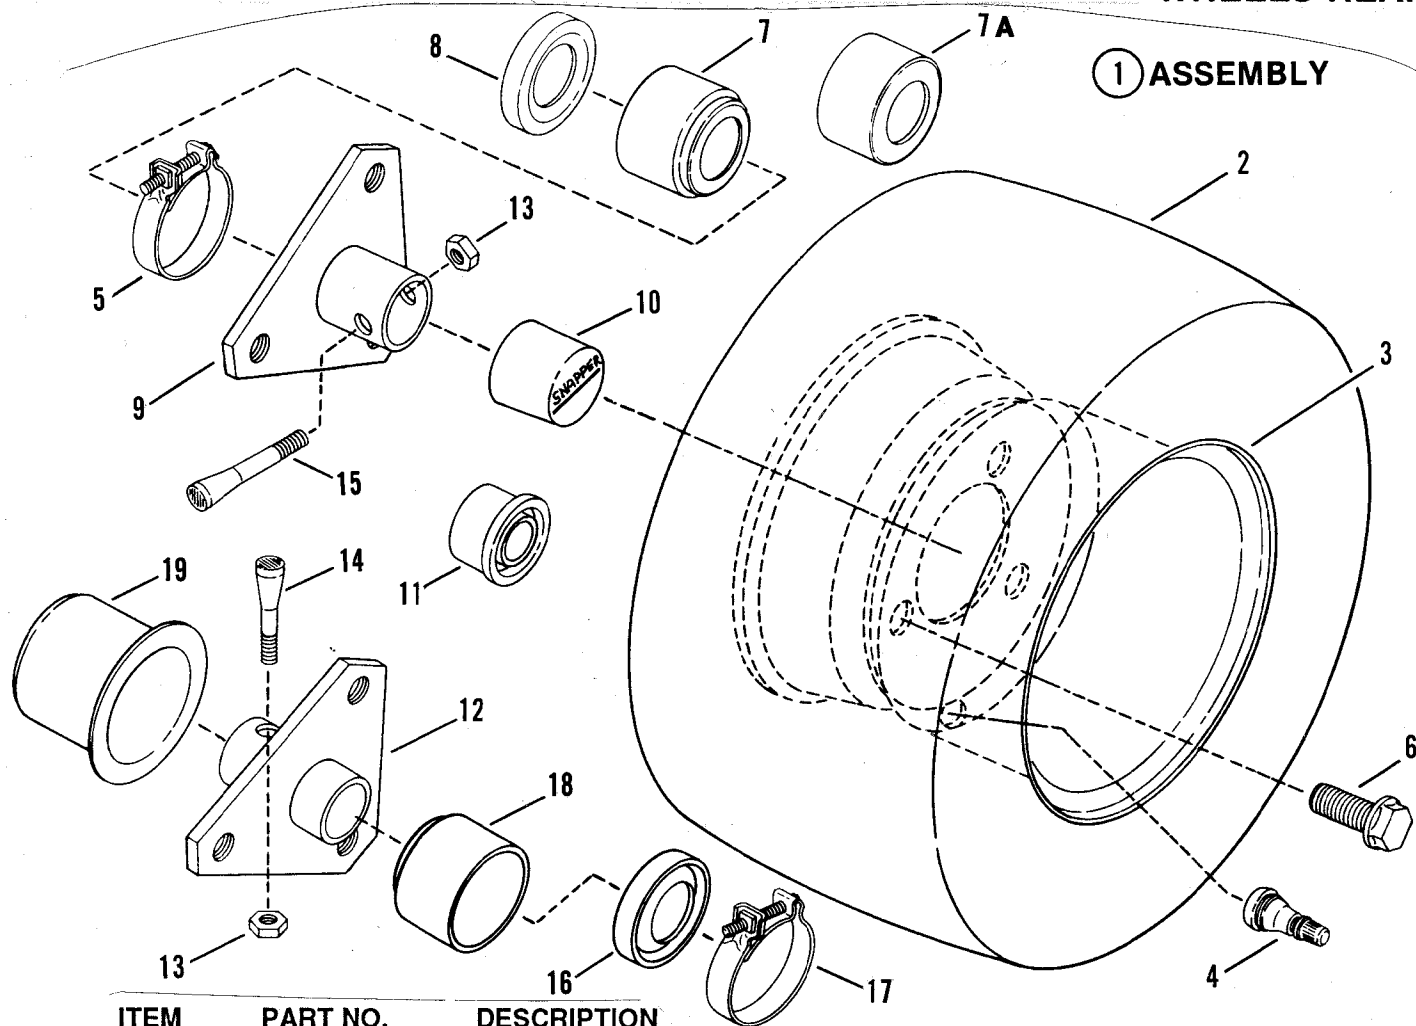


ITEM	PART NO.	DESCRIPTION
1	5-2269	ASSEMBLY, Rear Tire & Rim (Includes Items 2A,3A,4) (25" Models)
-	5-2270	ASSEMBLY, Rear Tire & Rim (Includes Items 2B,3B,4) (28" & 30" Models)
-	5-2671	ASSEMBLY, Rear Tire & Rim (Includes Items 2C,3C,4) (33" & 41" Models)
2A	2-3889	TIRE, Std., 16/4.80 x 8
2B	2-2511	TIRE, Wide, 16/6.50 x 8
2C	2-2584	TIRE, Ext Wide, 16/7.50 x 8
3A	1-2162	RIM, Std., (For 16/4.80 x 8 Tire)
3B	1-2163	RIM, Wide, (For 16/6.50 x 8 Tire)
3C	1-7145	RIM, Ext Wide, (For 16/7.50 x 8 Tire)
4	1-2234	VALVE, Air (Snap-in)
5	1-1037	CLAMP, Right Hand (8 & 10 HP)
-	1-4542	CLAMP, Right Hand (11.5, 12.5, 14, & 16 HP)
6	9-0367	BOLT, 1/2-20 x 3/4" Lug (6)
7	3-1732	BOOT, Right Hand (8 & 10 HP)
7A	1-4541	BOOT, Right Hand (11.5, 12.5, 14 & 16HP)
8	1-1817	SEAL, Oil
9	4-0433	HUB, Rear Wheel (Right Hand)
10	2-3895	CAP, Hub
11	1-0967	CAP, Seal (Left Hand) (8 & 10 HP)
12	4-0434	HUB, Rear Wheel
13	1-1201	NUT, 5/16-24 Hex Center Lock
14	1-1035	BOLT, 5/16-24 x 1-5/8" Tapered (Left Hand)
15	1-1013	BOLT, 5/16-24 x 2" Tapered (Right Hand)
16	1-4662	SEAL, Oil (Left Hand)
17	1-2332	CLAMP, (Left Hand) (11.5, 12.5, 14 & 16HP)
18	1-4658	BOOT, (Left Hand) (11.5, 12.5, 14 & 16HP)
19	2-3522	CAP, Hub (Left Hand)

FRONT END STEERING

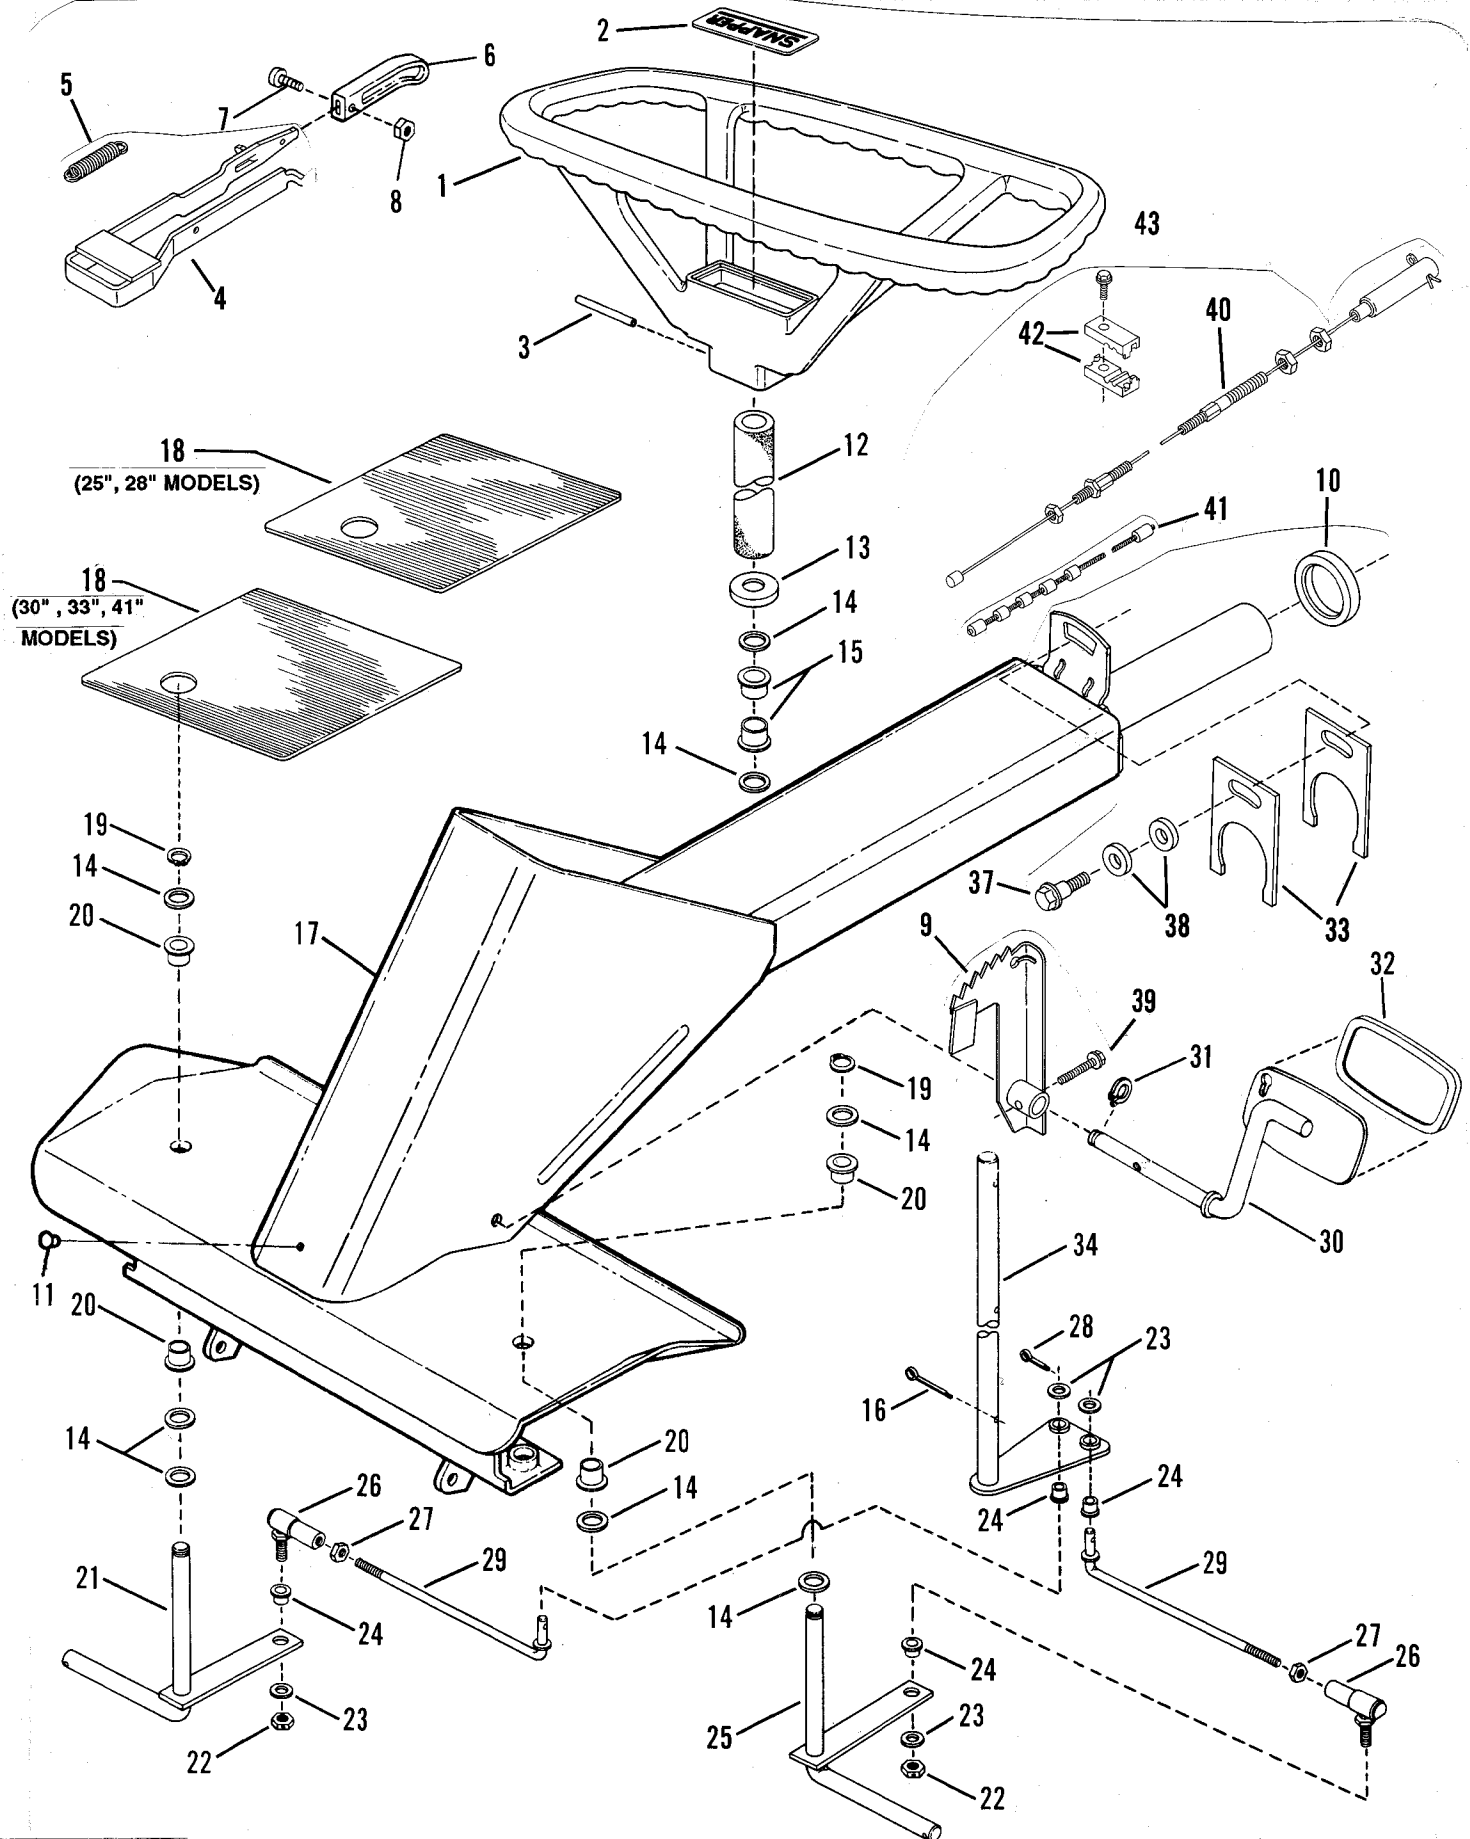


FRONT END STEERING

25, 26 & 28" MODELS

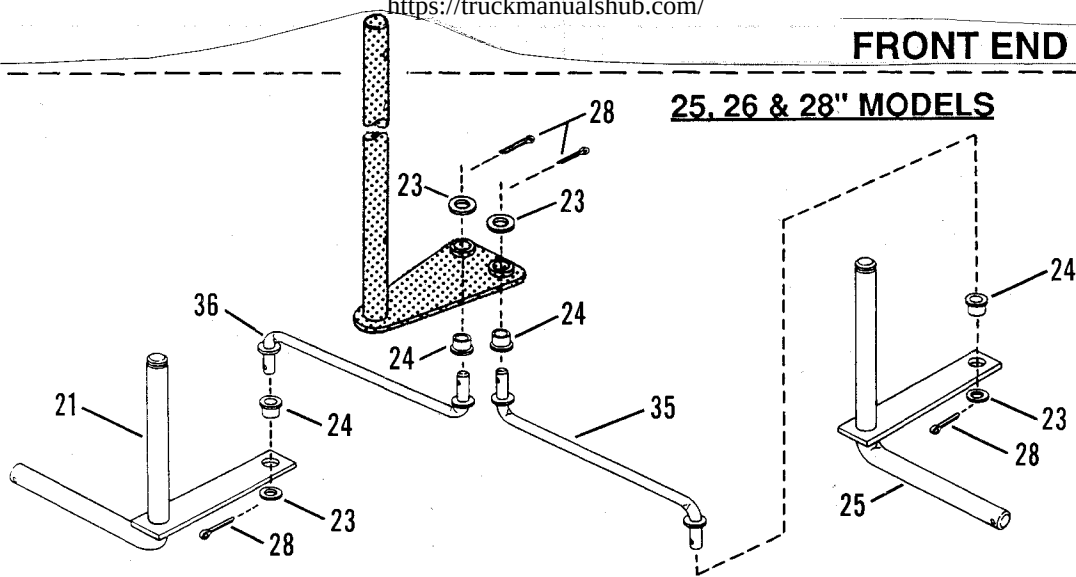


ITEM	PART NO.	DESCRIPTION
1	5-1941	ASSEMBLY, Steering Wheel (Includes Item 2)
2	2-3781	DECAL, Snapper
3	1-3862	PIN, 1/4 x 1-1/2" Roll
4	4-1144	BRACKET, Clutch/Brake
5	2-3666	SPRING
6	2-3655	KNOB
7	9-1017	SCREW, #8-32 x 3/8" Cross Recess
8	9-1018	NUT, #8-32 Hex
9	4-1004	ARM, Clutch/Brake
10	2-2372	SPACER, Main Tube
11	1-6704	PLUG
12	2-3667	COVER, Steering Shaft (Foam)
13	2-3671	COVER
14	1-0935	WASHER, 3/4 Flat
15	1-9166	BUSHING, 3/4" Steering Shaft (2)
16	9-0753	PIN, 3/16 x 1-1/2" Cotter (2)
17	4-1002	FRAME, Front (25" & 28" Models)
--	4-1003	FRAME, Front (30", 33" & 41" Models)
18	2-3660	PAD, Foot (Right Side Shown) (25" & 28" Models)
--	2-3663	PAD, Foot (Right Side Shown) (30", 33", & 41" Models)
--	2-3659	PAD, Foot (Left Side) (25" & 28" Models) (Not Shown)
--	2-3662	PAD, Foot (Left Side) (30", 33", & 41" Models) (Not Shown)
19	1-0746	RING, Retaining (2)
20	1-0986	BEARING (4)
21	4-0361	PIN, King (Right Side)
22	9-0289	NUT, 3/8-24 Hex Lock (2)
23	9-0122	WASHER, 3/8 Flat (4)
24	1-3321	BUSHING (4)
25	4-0362	PIN, King (Left Side)
26	1-0745	BALL-JOINT (2)
27	9-0155	NUT, 3/8-24 Hex (2)
28	9-0365	PIN, 1/8 x 3/4" Cotter (2)
29	2-3819	TIE-ROD (2) (30", 33" & 41" Models)
30	4-1005	PEDAL, Clutch/Brake
31	1-0739	RING, Retaining
32	1-1815	PAD, Clutch/Brake Pedal
33	2-2589	SPACER, Pivot
34	4-0593	SHAFT, Steering
35	1-2933	TIE-ROD, Left Side (25" & 28" Models)
36	1-3023	TIE-ROD, Right Side (25" & 28" Models)
37	2-4267	BOLT, 3/8-24 x 5/8" Hex Shoulder
38	2-2881	SPACER (2)
39	9-1151	SCREW, 5/16-18 x 1-1/4" Self-Tapping
40	2-2344	CABLE, Brake
41	2-2451	CABLE, Clutch
42	2-4284	UNION, Cable
43	9-0584	BOLT, 1/4-20 x 1/2" Hex Flange Lock

MAIN CASE

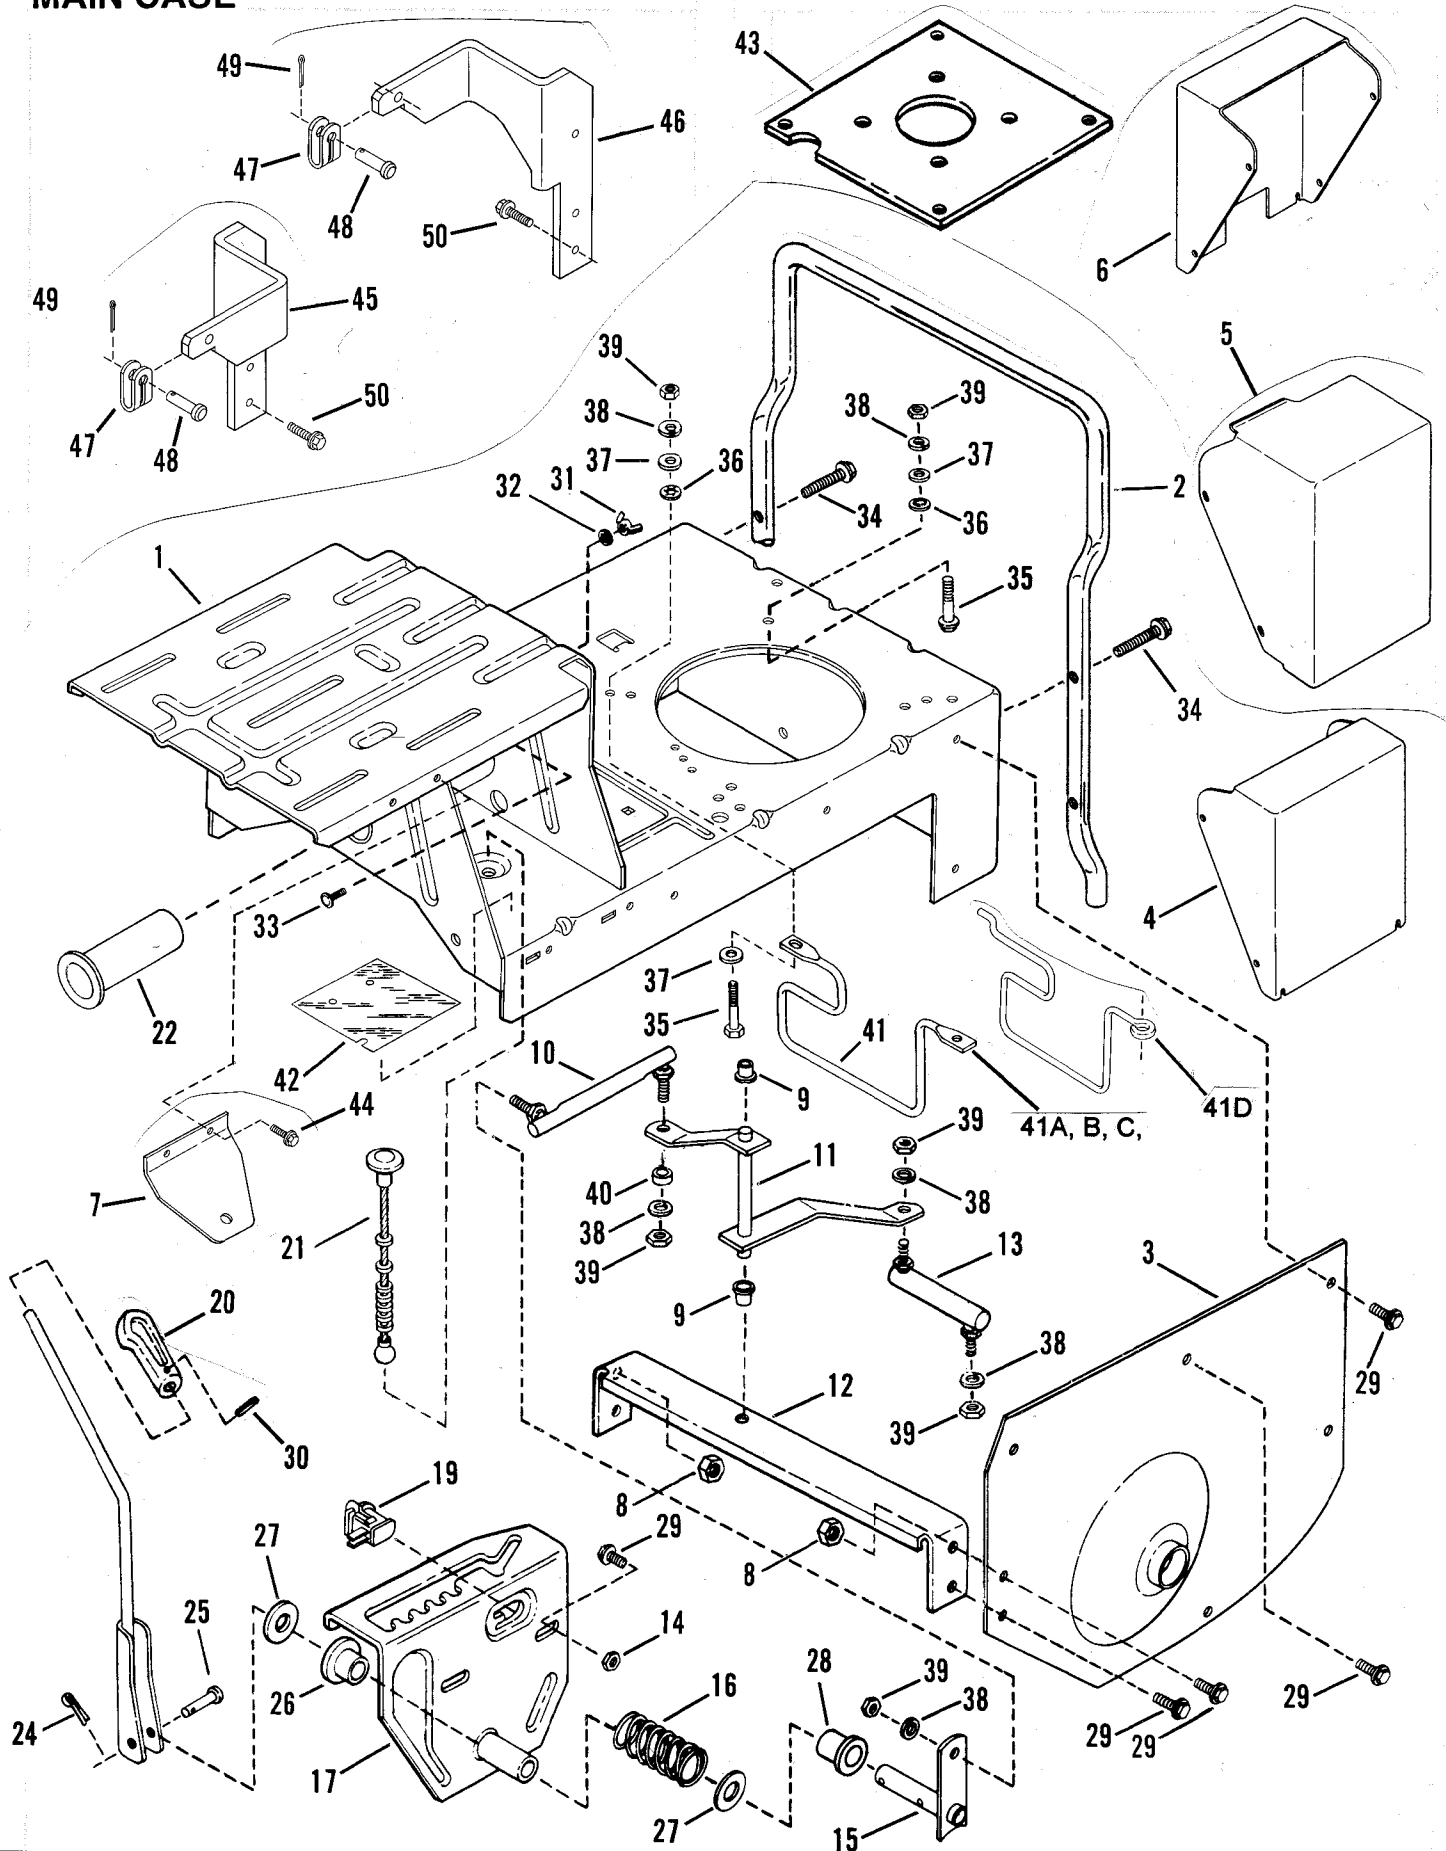

ITEM	PART NO.	DESCRIPTION
1	4-0992	CASE, Main (Standard)
--	4-1386	CASE, Main w/belt guides (Kohler)
2	3-6367	BUMPER, Rear
-	3-3587	BUMPER, Rear (41" Models Only)
3	3-7958	FENDER, Left Hand
4	1-6085	COVER
5	1-6084	COVER, Battery
-	1-7605	COVER, Battery (41" Models Only)
6	1-7074	COVER, Switch
7	3-3569	PLATE, Choke (41" Models Only)
8	9-1070	NUT, 5/16-18 Hex Flange Lock
9	1-1016	BUSHING, Nylon (2)
10	2-3676	LINK, Shift (Long)
11	4-0600	ARM, Shift
12	3-2991	BRACE, Cross
13	1-1018	LINK, Shift (Short)
14	9-0196	NUT, 5/16-18 Hex (2)
15	4-0598	ARM, Shift Handle
16	1-0754	SPRING, Shift Handle
17	4-0961	DETENT, Shift
18	4-0599	HANDLE, Shift
19	1-5707	SWITCH, Interlock
20	2-3656	KNOB, Shift Handle
21	1-9337	CABLE, Deck Support
22	2-2509	BUSHING, Pilot
23	9-0391	WASHER, 5/16 Internal Tooth Lock
24	9-0037	PIN, 3/32 x 3/4" Cotter
25	2-3914	PIN, 1/4 x 1-3/4" Tapered Clevis
26	1-9245	BUSHING, Nylon
27	3-1036	WASHER, Thrust (2)
28	1-9246	BUSHING, Nylon (2)
29	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (14)
30	9-0844	PIN, 3/16 x 3/4" Roll
31	9-1039	NUT, #10-24 Locking Wing (8)
32	9-1037	RETAINER, #10 Bolt (8)
33	9-0530	BOLT, #10-24 x 1/2" Carriage (8)
34	9-0484	SCREW, 5/16-18 x 1-1/2" Self-Tapping (4)
35	9-0242	SCREW, 5/16-24 x 1-1/2" Hex Head Cap (4)
36	1-1791	RETAINER, 5/16 Bolt (4)
37	9-0188	WASHER, 5/16" Flat (4)
38	9-0187	WASHER, 5/16" Split Lock (8)
39	9-0223	NUT, 5/16-24 Hex (8)
40	1-1968	ROLLER
41A	1-7653	GUIDE, Belt (25", 26", 28" Models)
41B	1-7604	GUIDE, Belt (30" 10HP & 11.5HP, 33" 12.5HP)
41C	2-4164	GUIDE, Belt (16HP 41" Models)
41D	2-4080	GUIDE, Belt (25" & 26" 6HP Tec.; 25" & 26" opening price point)
42	2-2887	PROTECTOR, Solenoid
43	3-2982	PLATE, Engine
44	9-0362	SCREW, 1/4-20 x 5/8" Self-Tapping (2)
45	3-3223	DECK WING, Rear (Left)
46	3-3224	DECK WING, Rear (Right)
47	3-3313	BRACKET, Cable
48	1-0736	PIN, 3/8 x 1-1/16" Clevis (2)
49	9-0037	PIN, 3/32 x 3/4" Cotter (2)
50	9-0369	SCREW, 5/16-18 x 1" Self-Tapping (6)

DIFFERENTIAL, R.H. FENDER

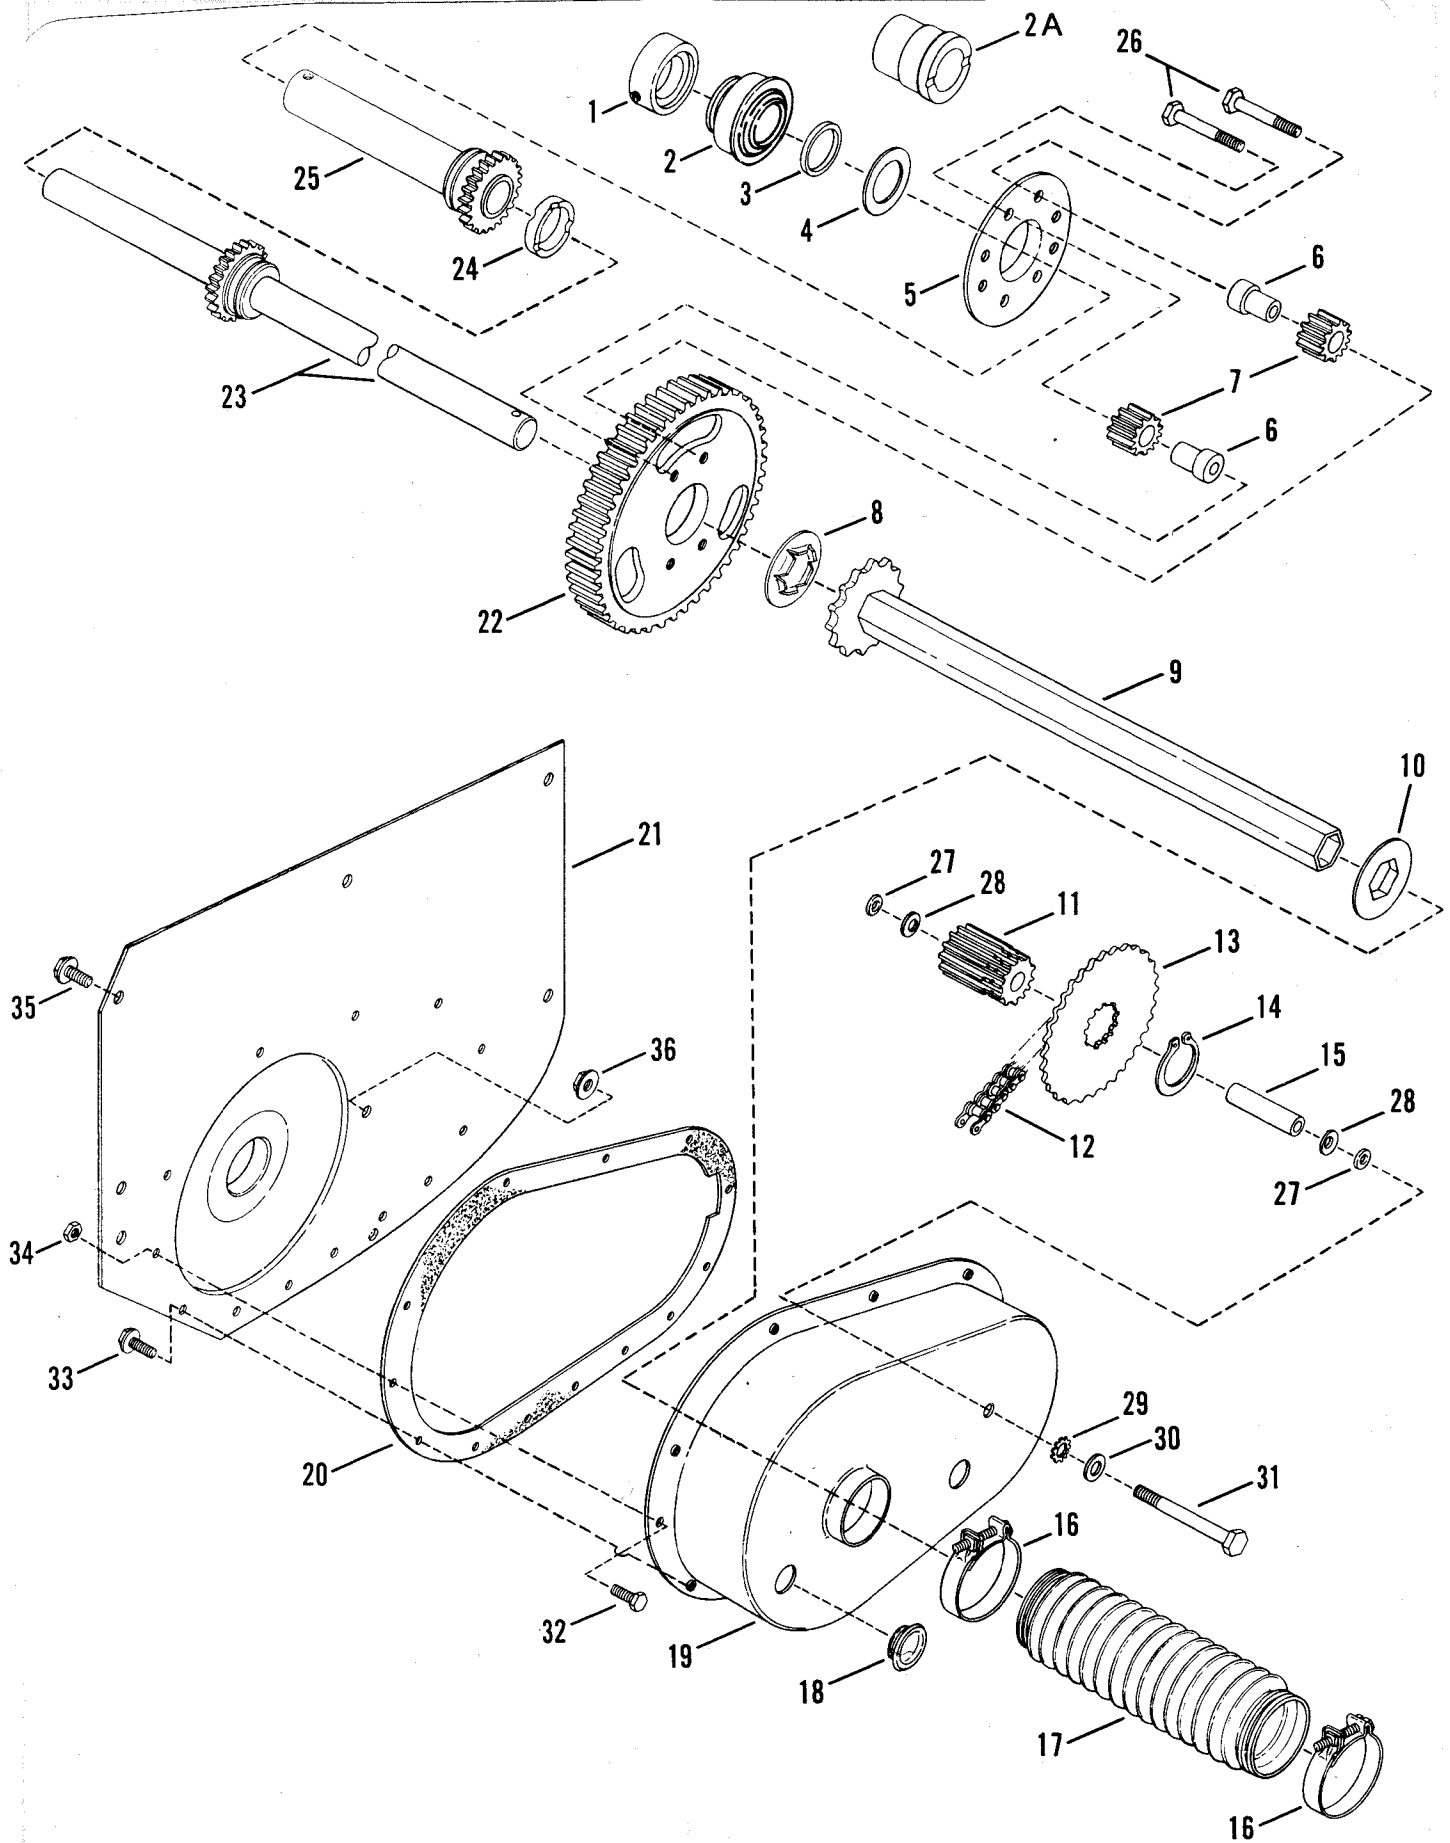


DIFFERENTIAL, R.H. FENDER

ITEM	PART NO.	DESCRIPTION
1	1-4401	COLLAR, Lock (Includes #9-0201 Set Screw)
2	1-8822	BALL BEARING, Axle (R. H. Fender) (11.5, 12.5, 14, 16 HP Models)
2A	1-2296	BEARING, Axle (Right Hand Fender) (8, 10 HP Models)
3	3-2107	SPACER, Short Axle
4	3-1079	WASHER, Thrust
5	3-8067	PLATE, Differential
6	2-2115	SPACER, Pinion (4)
7	2-1127	GEARS, Differential Pinion (4)
8	1-1072	WASHER, Thrust
9	5-1584	ASSEMBLY, Drive Hex Tube
10	1-0988	WASHER, Hex Insert
11	1-0964	GEAR, 11 Teeth-10 Pitch
12	1-0941	CHAIN, 46 Pitch (#35)
13	2-1129	SPROCKET
14	1-0965	RING, Retaining
15	2-1128	SPACER
16	1-1037	CLAMP, Boot (2)
17	1-7083	BOOT, Oil Seal
18	1-1024	PLUG, Oil Fill & Check
19	3-7279	CASE, Transmission
20	1-8060	GASKET, Transmission Case
21	3-7957	FENDER, Right Hand (Commercial Models)
--	3-7280	FENDER, Right Hand (Standard Models)
22	2-1158	GEAR, 63 Teeth-10 Pitch
23	4-7763	AXLE, Long (Includes Gear) (Use Only With Short Axle #5-7398)
24	1-1026	SPACER
25	5-7398	AXLE, Short (Includes Gear) (Use Only With Long Axle #4-7763)
26	1-2333	SCREW, 5/16-24 x 1-5/8" Hex Cap Special Lock (4)
27	1-1156	O-RING, 5/16 (2)
28	1-1782	WASHER, Belleville (2)
29	9-0395	WASHER, 5/16" External Tooth Lock
30	9-0188	WASHER, 5/16" Flat
31	1-1042	BOLT, 5/16-24 x 2-5/8" Idler
32	9-0072	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
33	9-0362	SCREW, 1/4-20 x 5/8" Self-Tapping (11)
34	9-0372	NUT, 1/4-20 Hex Center Lock (2)
35	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (11)
36	1-0969	NUT, 5/16-24 Hex Flange Lock
--	6-0411	KIT, Differential (Includes item 2A and 3-7280 Fender)
--	6-0662	KIT, Differential (Includes item 2 and 3-7957 Fender)

CHAIN CASE, L.H. FENDER

① ASSEMBLY

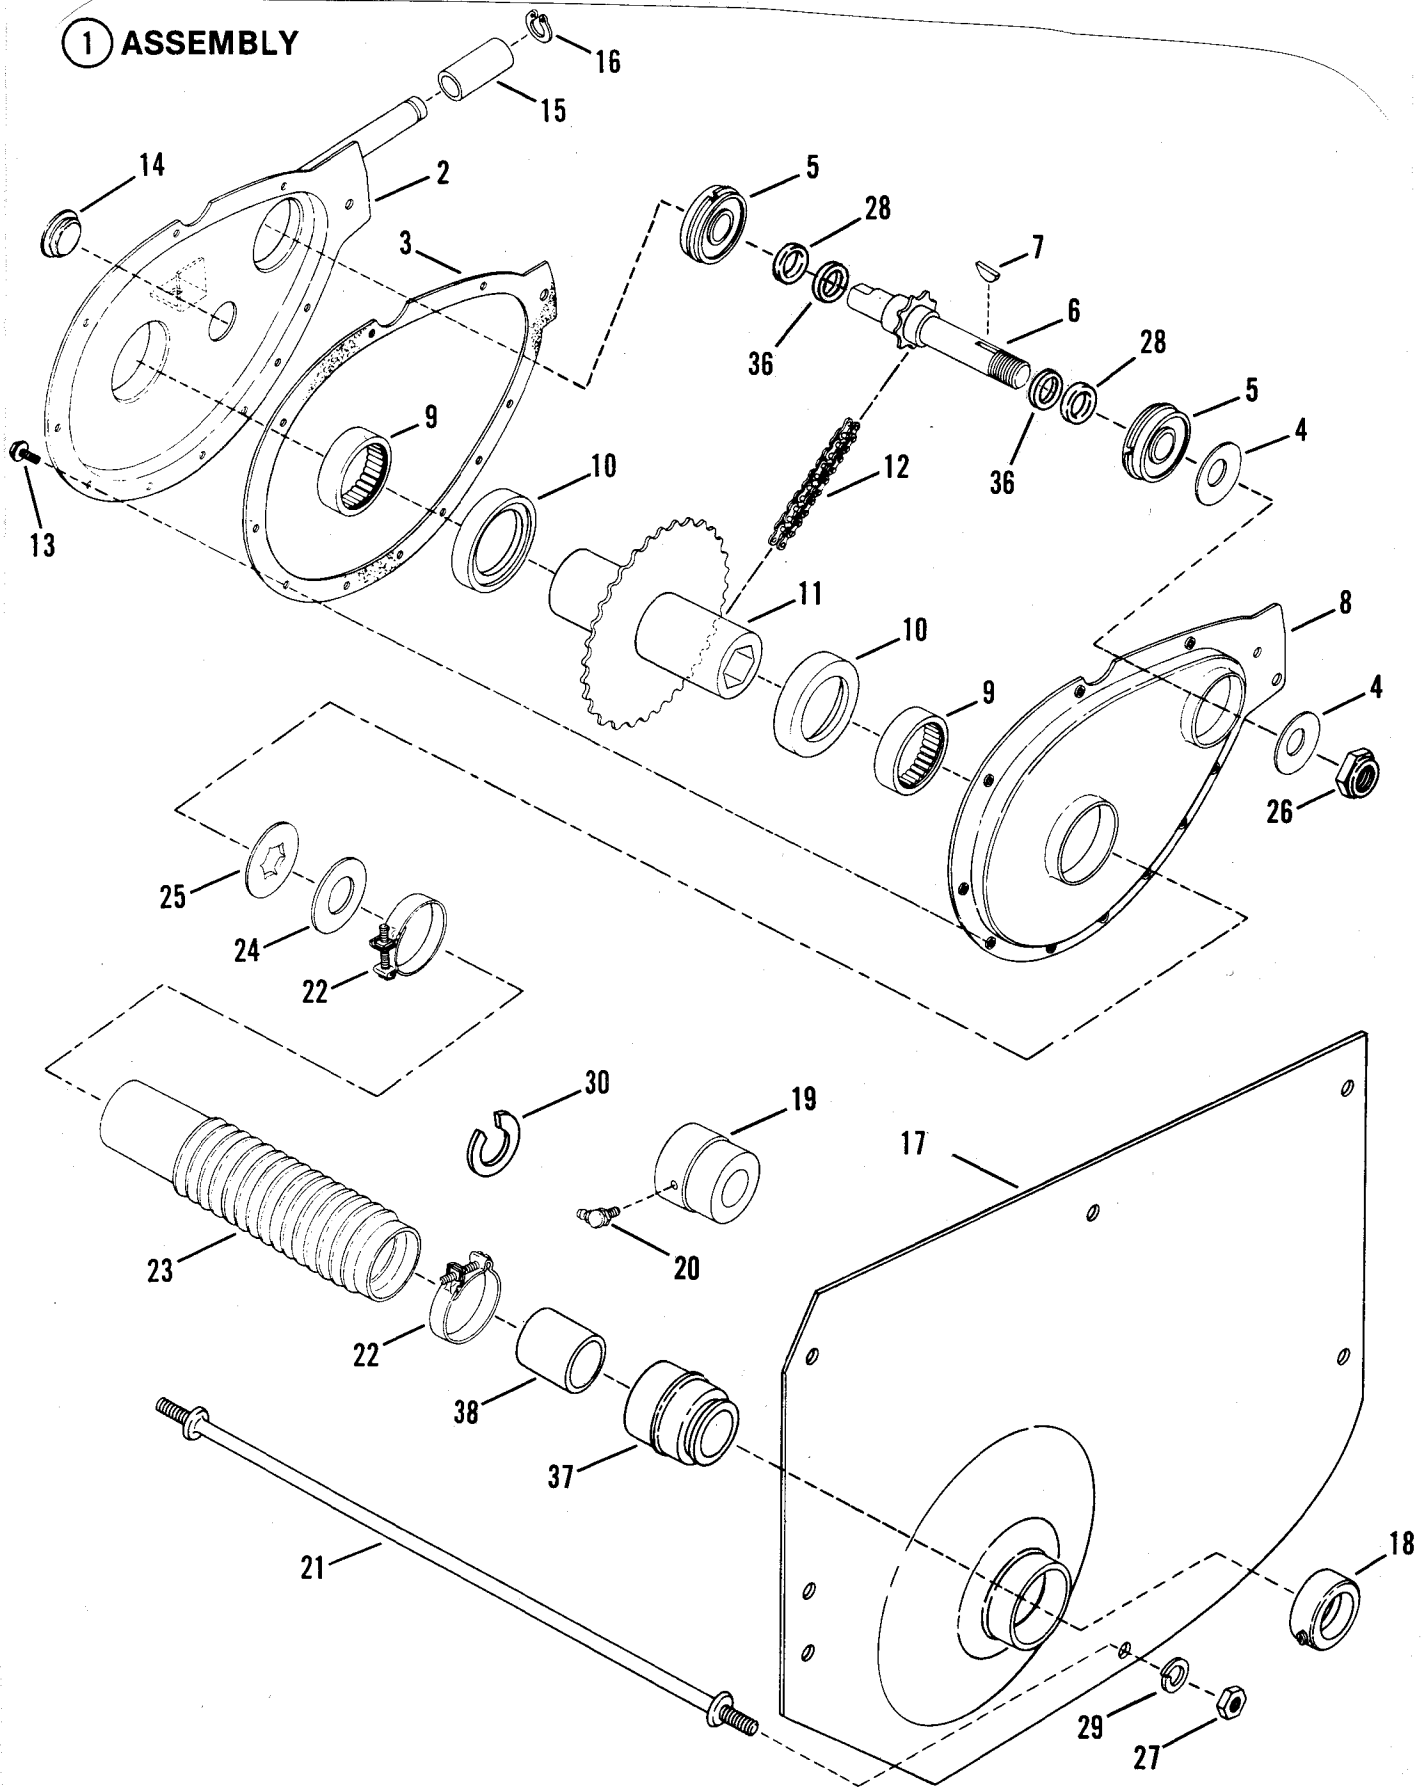




CHAIN CASE, L. H. FENDER

ITEM	PART NO.	DESCRIPTION
1	5-2683	ASSEMBLY, Chain Case (Includes Items 2 Thru 13,15,16,31 Thru 35)
2	4-1136	CASE, Sprocket
3	1-8059	GASKET, Case Cover
4	1-1121	WASHER, Belleville (2)
5	1-0756	BEARING, Ball (2)
6	1-8963	SPROCKET & SHAFT
7	1-0614	KEY, 1/8 x 5/8" Woodruff
8	3-9778	COVER, Chain Case
9	1-0942	BEARING, Needle (2)
10	1-1086	WASHER, Nylon Thrust (2)
11	4-0355	HUB & SPROCKET
12	1-0941	CHAIN
13	9-0307	SCREW, #10-24 x 5/8" Self-Tapping (10)
14	1-1024	PLUG, Oil Fill & Check
15	2-2785	ROLLER
16	1-0776	RING, Retaining
17	3-7285	FENDER, Left Hand (8 & 10HP Models)
-	3-7958	FENDER, Left Hand (11.5, 12.5, 14, & 16HP Models)
18	1-4625	COLLAR, Lock (Includes #9-0776 Set Screw-1/4-20 x 1/4")
19	5-0918	BEARING, Left Hand Fender (Includes Item 20) (8, 10 HP Models)
20	1-3324	FITTING, Lube
21	1-1070	ROD, Cross-Tie
22	1-1037	CLAMP, Boot (2)
23	1-7084	BOOT, Oil Seal
24	1-1071	WASHER, Thrust Nylon
25	1-1072	WASHER, Thrust
26	9-1062	NUT, 5/8-18 Hex Lock
27	9-0223	NUT, 5/16-24 Hex
28	1-9260	O-RING (2)
29	9-0187	WASHER, 5/16 Split Lock
30	1-2271	WASHER, Shim (As Required)
*31	5-2143	ASSEMBLY, Brake Lever
*32	1-0916	SPACER, Split
*33	9-0535	SCREW, 1/4-28 x 1" Hex Head Cap
*34	9-0055	WASHER, 1/4 Flat
*35	9-0303	NUT, 1/4-28 Hex Top Lock
36	1-0960	WASHER, Shim (6)
-	2-2713	WASHER, Shim (2)
37	1-4624	BEARING, Left Hand Fender (11.5, 12.5, 14, & 16HP Models)
-	5-1451	ASSEMBLY, Left Hand Fender (Includes P.N. 3-7958 Left Hand Fender & P.N. 1-4624 Bearing) (11.5, 12.5, 14, & 16HP Models)
38	2-3447	SPACER

*** NOTE: See Pages 12 & 13 For Illustration Of Brake Lever Assembly & Related Parts.**

SMOOTH CLUTCH ASSEMBLY

① ASSEMBLY

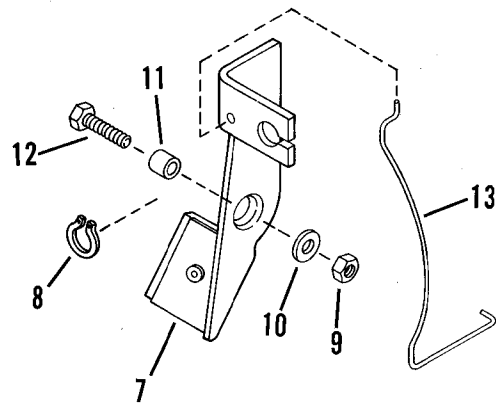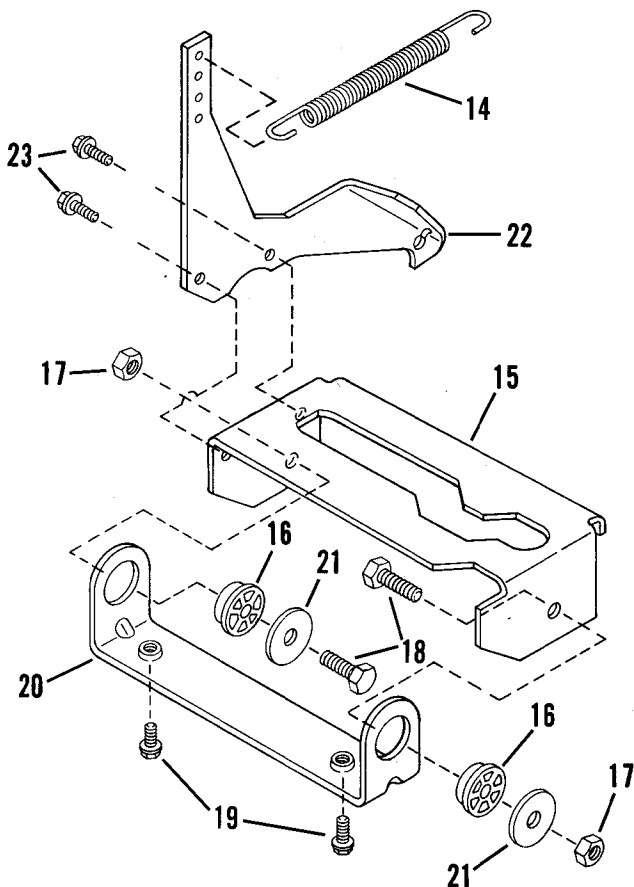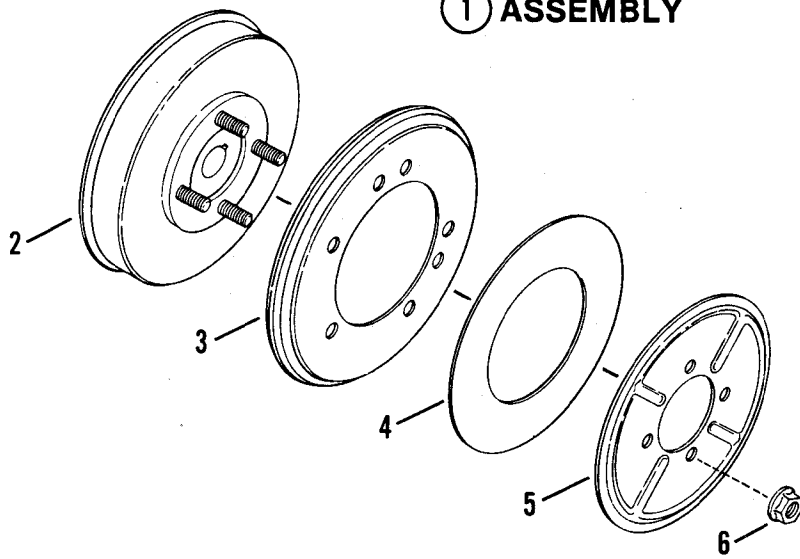


SMOOTH CLUTCH ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1	*	ASSEMBLY, Smooth Clutch (Includes Items 2 Thru 6)
2	5-7338	HUB, Driven Disc
3	5-7423	DISC, Driven
4	1-4523	WASHER, Thrust
5	2-2331	PLATE
6	9-0585	NUT, 5/16-18 Hex Flange Lock (4)
7	5-2497	ASSEMBLY, Brake Lever (Includes Brake Lining & Rivet)
8	1-2313	RING, Retaining
9	9-0303	NUT, 1/4-28 Hex Top Lock
10	9-0055	WASHER, 1/4 Flat
11	1-0916	SPACER
12	9-0535	SCREW, 1/4-28 x 1" Hex Head Cap
13	2-2371	SPRING, Brake Return
14	1-2264	SPRING, Clutch Brake
15	3-3292	LIFT, Yoke
16	1-1048	BEARING, Yoke (2)
17	1-1201	NUT, 5/16-24 Hex Center Lock (2)
18	9-0233	SCREW, 5/16-24 x 3/4" Hex Head Cap (2)
19	9-0506	SCREW, 3/8-16 x 1/2" Self-Tapping
20	3-3291	COLLAR, Yoke
21	1-1763	WASHER, 5/16 Flat (2)
22	3-3293	ARM, Yoke
23	9-0858	SCREW, 5/16-18 x 1/2" Self-Tapping (2)

***CANNOT BE ORDERED AS ASSEMBLY. ORDER PARTS SEPARATELY.**

CUTTING DECKS, DEFLECTORS

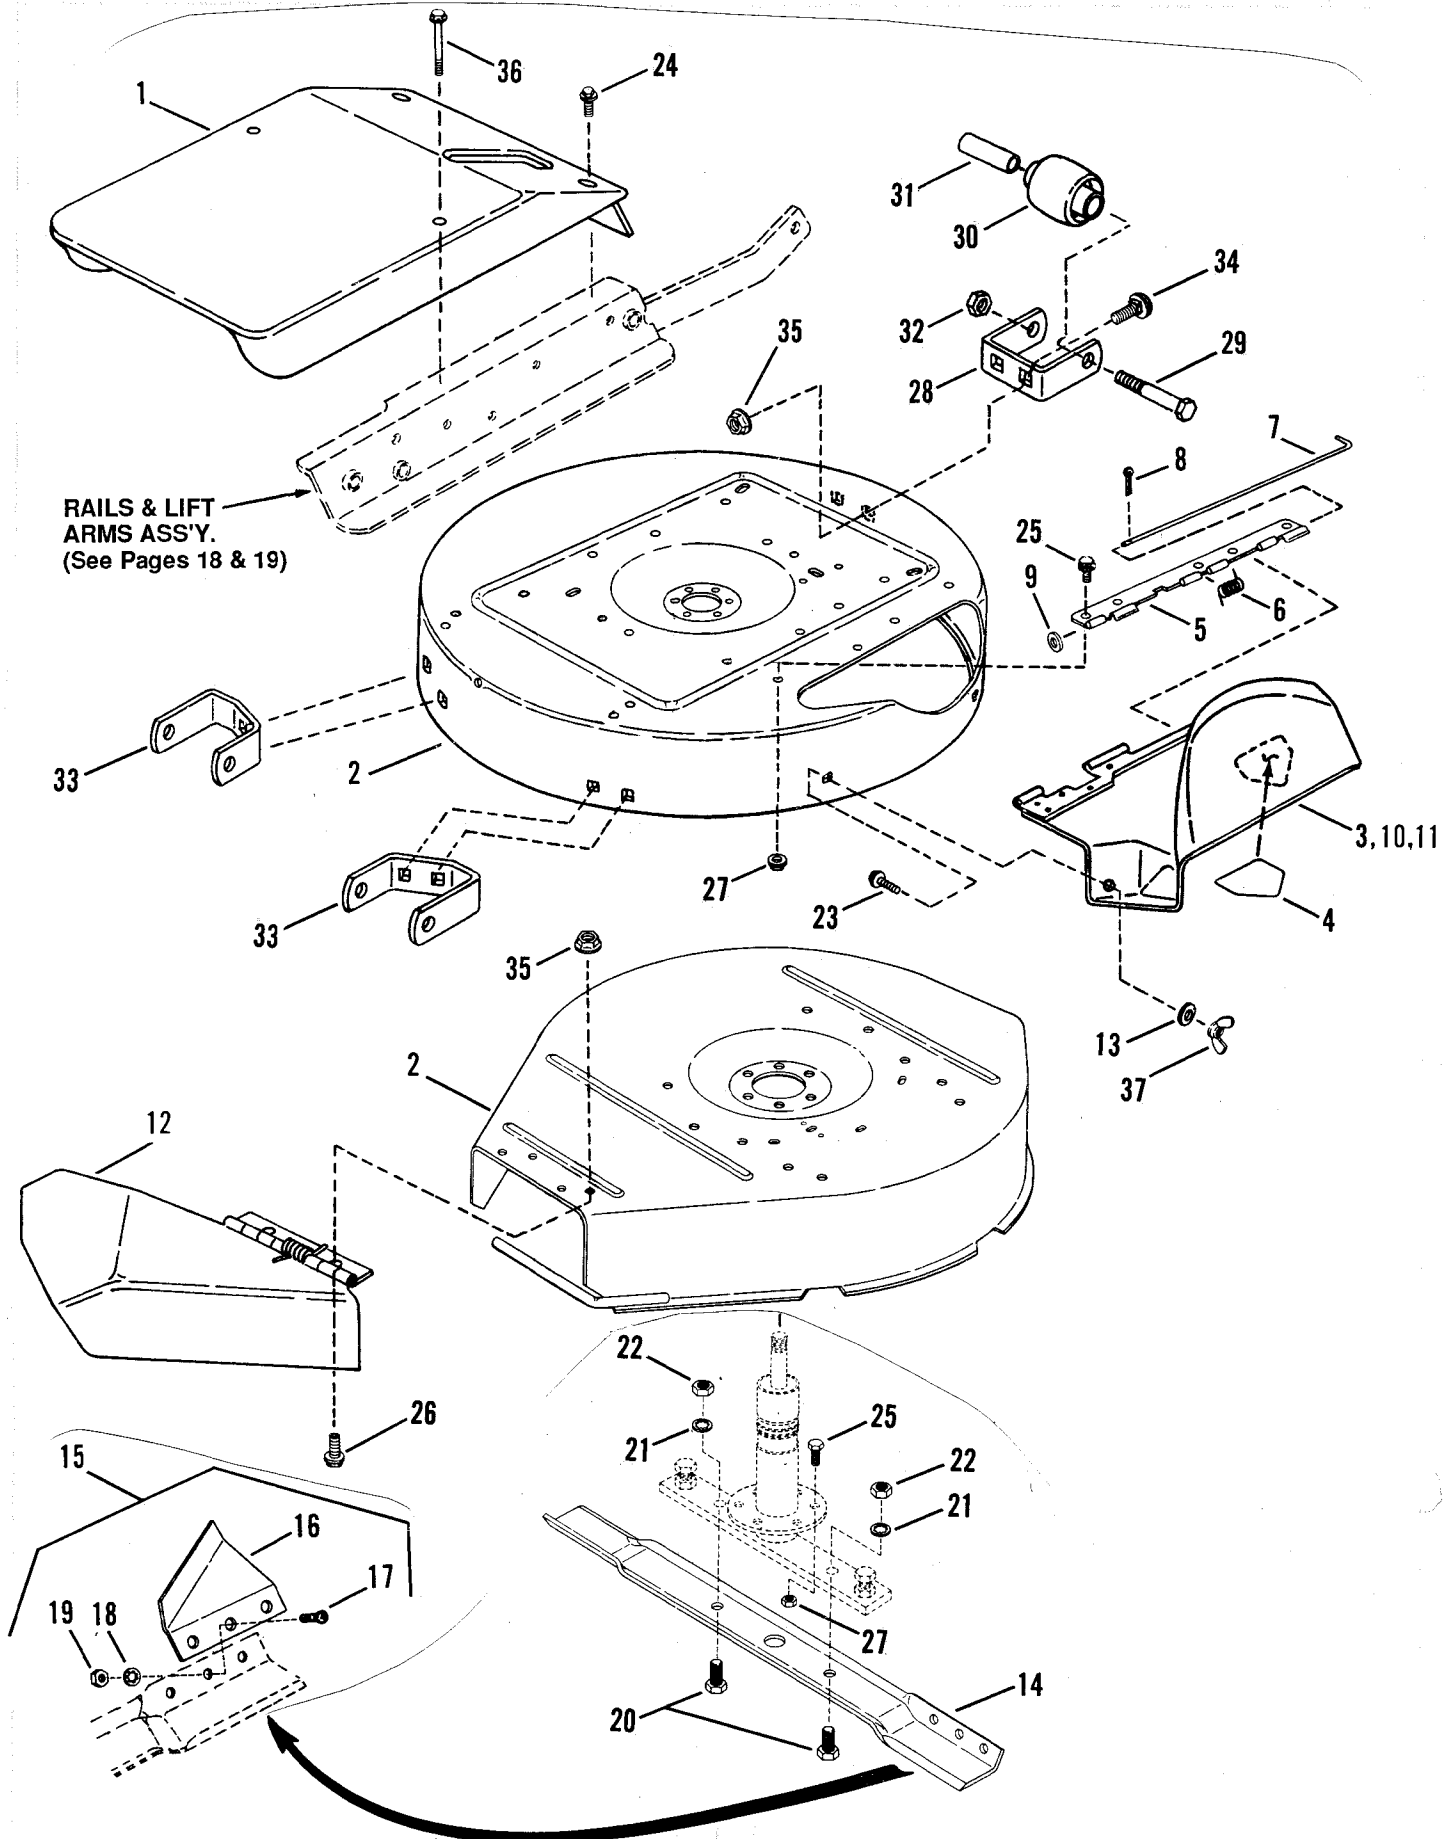

CUTTING DECKS, DEFLECTORS

ITEM	PART NO.	DESCRIPTION
1	2-2562	COVER, Spindle
2	6-0976	25" DECK KIT (*See NOTE Below For Complete Cutter Unit)
-	6-0977	28" DECK KIT (*See NOTE Below For Complete Cutter Unit)
-	6-0996	30" DECK KIT (*See NOTE Below For Complete Cutter Unit)
-	6-0978	33" DECK KIT (*See NOTE Below For Complete Cutter Unit)
3	5-1977	DEFLECTOR, Discharge (28" Deck) (Includes Item 4)
-	5-1978	DEFLECTOR, Discharge (33" Deck) (Includes Item 4)
-	5-7628	ASSEMBLY, Discharge (28" Deck) (Includes Items 3 Thru 9)
-	5-1994	ASSEMBLY, Discharge (33" Deck) (Includes Items 3 Thru 9)
4	1-3010	DECAL, Danger (Cut Finger)
5	3-9586	HINGE, Deflector
6	1-6341	SPRING, Hinge
7	3-2323	PIN, Hinge
8	9-0037	PIN, 3/32 x 3/4" Cotter
9	9-0055	WASHER, 1/4 Flat
10	9-0492	NUT, 5/16-18 Wing (2)
11	5-1976	DEFLECTOR, Discharge (25" Deck) (Includes Item 4)
-	5-7624	ASSEMBLY, Discharge (25" Deck) (Includes Items 4 Thru 9 & 11)
12	5-2057	DEFLECTOR, Discharge (30" Decks)
13	9-0188	WASHER, 5/16 Flat (2)
14	1-9518	25" BLADE
-	1-9515	28" BLADE
-	1-8069	30" BLADE
-	1-9523	33" BLADE
15	6-0480	KIT, Air Lift (28", 33" Models) (Includes 16,17,18 & 19)
-	6-0735	KIT, Air Lift (30" Models) (Includes 16,17,18 & 19)
16	3-7723	AIR-LIFT (2) (28", 33" Models)
-	3-1724	AIR-LIFT (2) (30" Models)
17	9-0228	SCREW, 5/16-24 x 11/16" Machine (6)
18	9-0391	WASHER, 5/16-24 Internal Tooth Lock (6)
19	9-0223	NUT, 5/16-24 Hex (6)
20	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap (2)
21	9-0509	WASHER, 1/2 Internal Tooth Lock (2)
22	9-0559	NUT, 1/2-20 Hex Jam (2)
23	9-0001	BOLT, 5/16-18 x 3/4" Short Neck Carriage (2)
24	9-1016	SCREW, 1/4-20 x 5/8" Self-Tapping (4)
25	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock (9)
26	9-0721	BOLT, 5/16-18 x 1/2" Hex Flange Lock (2)
27	9-0613	NUT, 3/8-16 Hex Flange Lock (9)
28	3-8451	BRACKET, Gage Wheel (Front)
29	9-0859	SCREW, 3/8-24 x 3-3/4" Hex Head Cap (3)
30	1-9190	WHEEL, Gage (3)
31	1-5272	SPACER (3)
32	9-0289	NUT, 3/8-24 Hex Lock (3)
33	3-8450	BRACKET, Gage Wheel (Rear) (2)
34	9-0004	BOLT, 5/16-18 x 1/2" Short Neck Carriage (6)
35	9-0585	NUT, 5/16-18 Hex Flange Lock (8)
36	9-1015	SCREW, 1/4-20 x 3-1/2" Self-Tapping (2)
37	9-0492	NUT, 5/16-18 Wing (2)

***NOTE: FOR COMPLETE CUTTER UNIT, ORDER FOLLOWING NUMBERS:**


25" Replacement Deck - Complete Unit 6-1038

28" Replacement Deck - Complete Unit 6-1040

30" Replacement Deck - Complete Unit 6-1041

33" Replacement Deck - Complete Unit 6-1042

41" CUTTING DECKS, DEFLECTORS

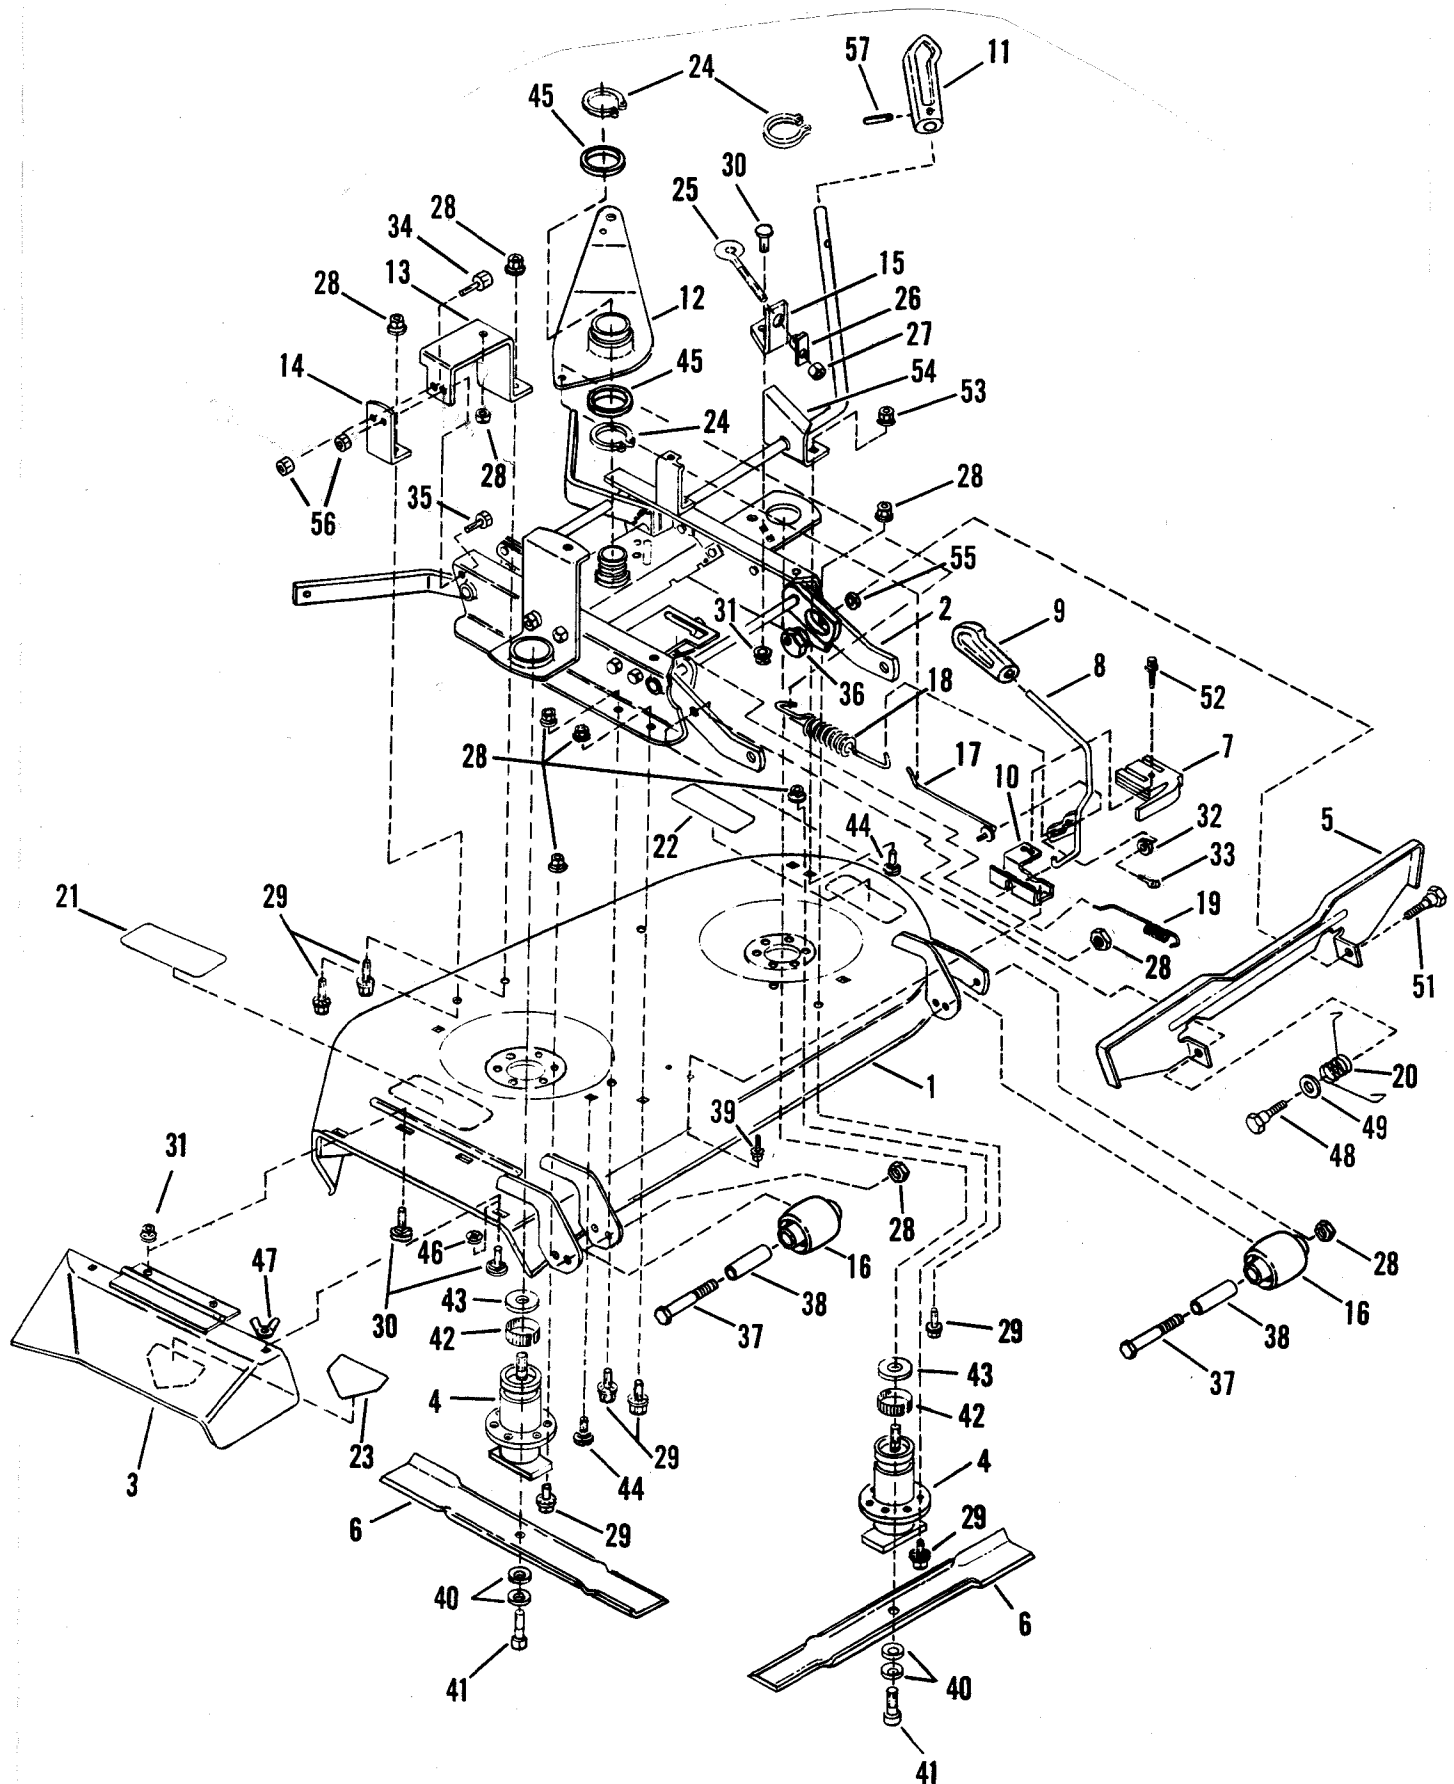


41" CUTTING DECKS, DEFLECTORS

ITEM	PART NO.	DESCRIPTION
1	4-9960	ASSEMBLY, Deck (See Note Below For Complete Cutter Unit)
2	--	ASSEMBLY, Rail (See Page 20 & 21 For Parts Breakdown)
3	5-1401	ASSEMBLY, Side Chute (Includes Item 23 Decal)
4	5-9628	ASSEMBLY, Spindle (2)
5	3-3045	ASSEMBLY, Pedal
6	1-9795	21" BLADE (2)
7	1-8524	SWITCH, Deck Interlock
8	4-0594	LEVER, Blade Engagement
9	2-3657	GRIP, Handle
10	3-8021	MOUNT, Handle
11	2-3658	GRIP, Height Adjustment Lever
12	3-7713	ARM, Idler
13	3-6089	SUPPORT, Idler
14	3-8114	BRACKET
15	3-2334	ANCHOR
16	1-9190	ROLLER (2)
17	1-2055	ROD, Idler
18	1-4168	SPRING, Belt
19	1-9410	SPRING, Latch
20	1-5448	SPRING, Pedal
21	1-4852	DECAL, Caution
22	1-6973	DECAL, Caution Rotating Blades
23	1-3010	DECAL, Danger
24	1-0740	RING, Retaining (4)
25	1-4302	BOLT, 1/4-20 Eye
26	1-4303	T-NUT, 1/4-20
27	9-0063	NUT, 1/4-20 Hex
28	9-0289	NUT, 3/8-24 Hex Head (14)
29	9-0292	SCREW, 3/8-24 x 3/4" Hex Head Cap (20)
30	9-0316	BOLT, 5/16-18 x 3/4" Carriage (4)
31	9-0585	NUT, 5/16-18 Hex Flange Lock (4)
32	9-0055	WASHER, 1/4 Flat
33	9-0037	PIN, 3/32 x 3/4" Cotter
34	9-0134	SCREW, 3/8-16 x 3/4" Hex Head Cap
35	9-0138	SCREW, 3/8-16 x 1" Hex Head Cap
36	1-5447	ECCENTRIC, Leveling
37	9-0859	SCREW, 3/8-24 x 3-3/4" Hex Head Cap (2)
38	1-5272	SPACER
39	9-0362	SCREW, 1/4-20 x 5/8" Self-Tapping (2)
40	1-2063	WASHER, Cone (4)
41	9-0824	SCREW, 3/8-24 x 1" Hex Head Cap
42	1-2670	RING, Tolerance (2)
43	1-4526	SPACER (2)
44	9-0850	BOLT, 3/8-16 x 3/4" Carriage (6)
45	1-4795	WASHER, 2" I.D. Nylon (2)
46	1-1791	RETAINER, 5/16 Bolt (2)
47	9-0375	NUT, 5/16-18 Wing (2)
48	1-5446	BOLT, 3/8-24 x 9/16" Shoulder
49	9-0250	WASHER, 1/2 Flat (3)
50	9-0122	WASHER, 3/8 Flat
51	1-5495	BOLT, 3/8-24 x 3/4" Shoulder
52	9-0299	SCREW, #10-32 x 1" Self-Tapping
53	9-0613	NUT, 3/8-16 Hex Lock (2)
54	3-8129	BRACKET, Height Indicator
55	9-0390	WASHER, 3/8 Internal Tooth Lock
56	9-0546	NUT, 3/8-16 Hex Lock (2)
57	9-0844	PIN, 3/16 x 3/4" Roll

NOTE: 41" Replacement Deck-Complete Cutter Unit 6-1043


RAILS, LIFT ARMS, CAM LIFT

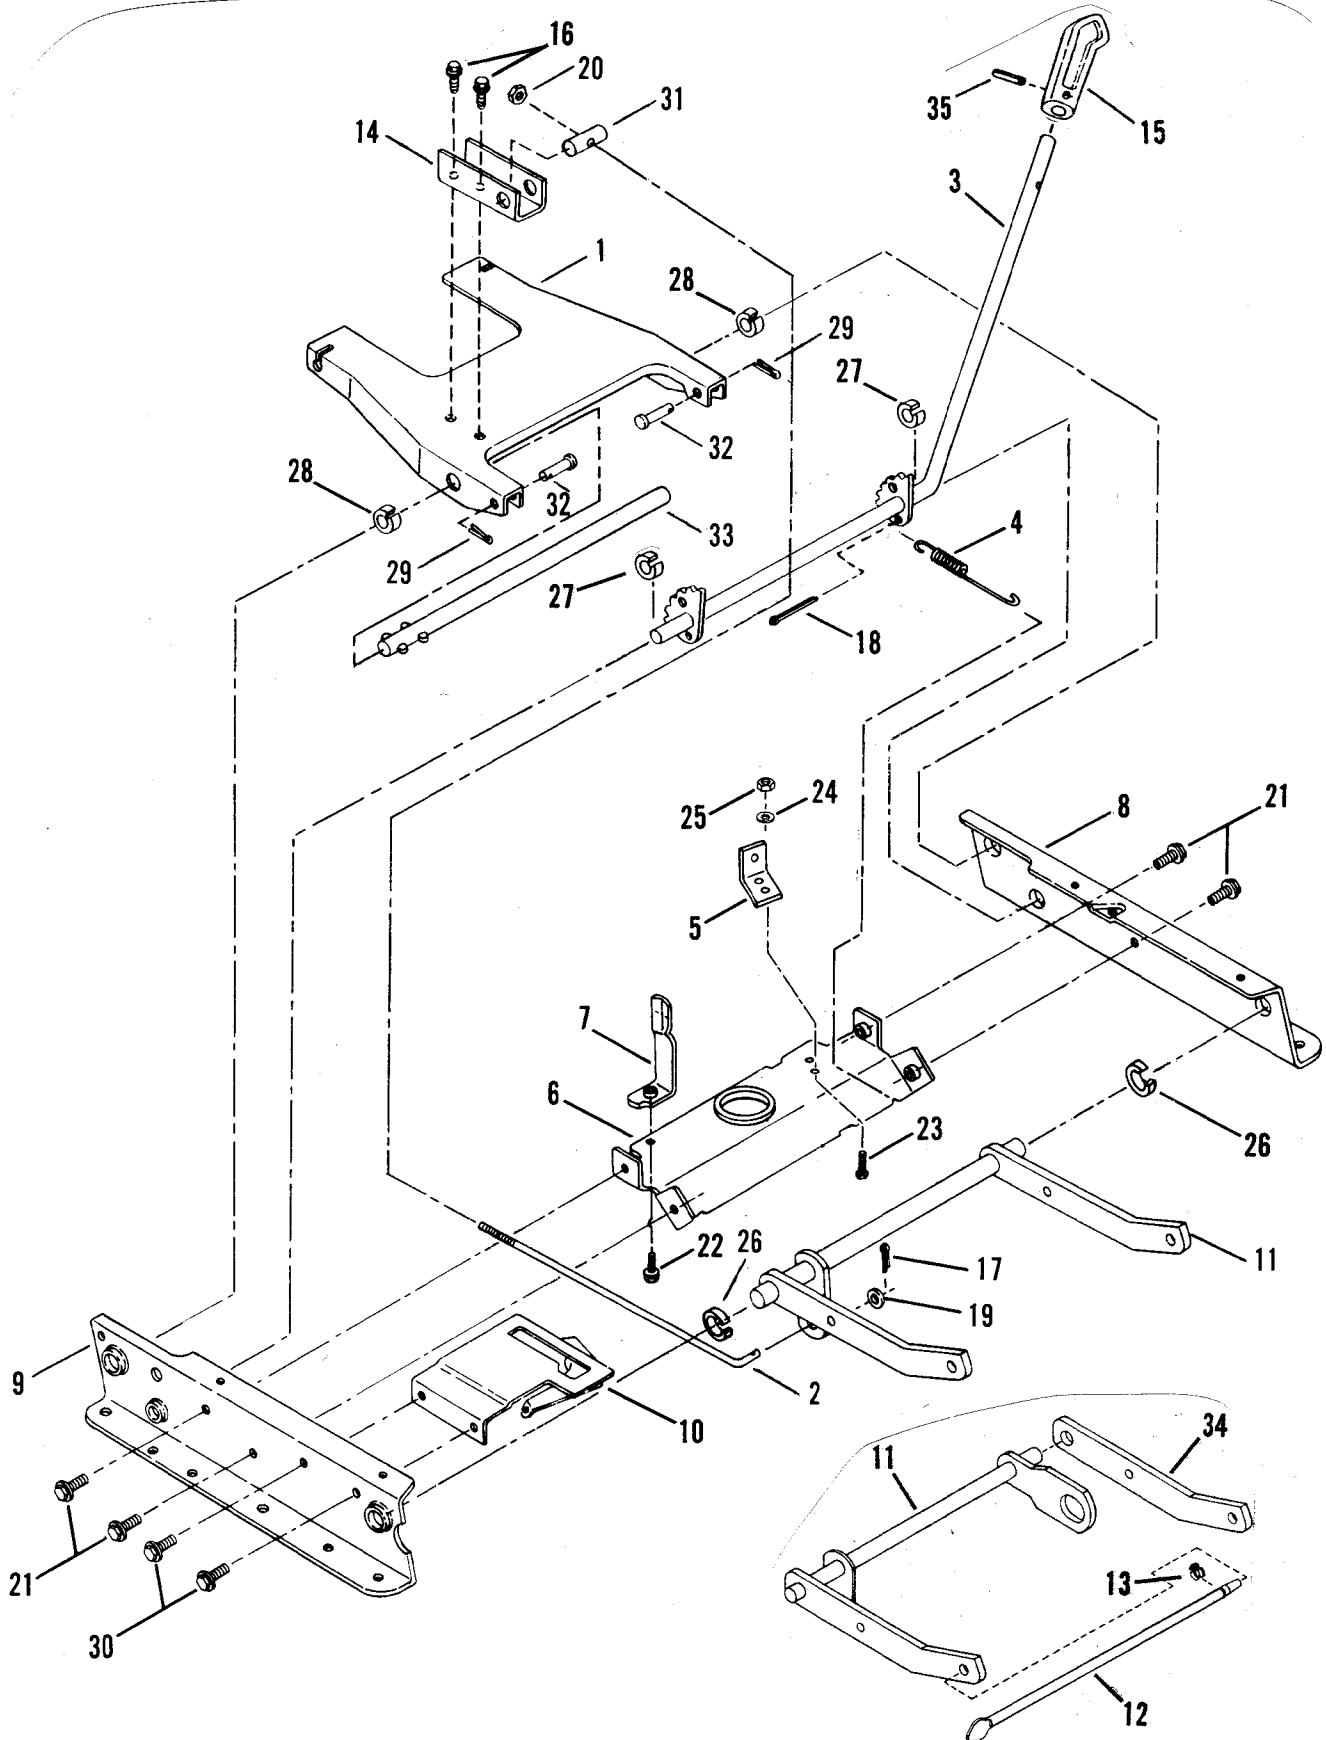


RAILS, LIFT ARMS, CAM LIFT

ITEM	PART NO.	DESCRIPTION
1	3-3034	ARM, Rear Lift
2	1-6122	ROD, Leveling
3	4-0696	WELDMENT, Lift Lever
4	1-1074	SPRING, Cam Lever
5	3-2243	ANCHOR (Auto. Blade Control Models)
6	3-1838	BRACE, Top
7	3-1855	GUIDE, Belt
8	3-3036	RAIL, Left Hand
9	3-3037	RAIL, Right Hand
10	5-1310	ASSEMBLY, Clutch Plate
11	4-0684	ARM, Front Lift, Non-Adjustable (25", 28" Models)
-	4-0685	ARM, Front Lift, Adjustable (30", 33" Models)
12	2-2717	ROD, Support (Front Lift Arm to Front End)
13	1-7847	RING, 7/16 Retaining
14	3-3008	ARM, Leveling
15	2-2296	GRIP, Height Adjustment Lever
16	9-0506	SCREW, 3/8-16 x 1/2" Self-Tapping (2)
17	9-0365	PIN, 1/8 x 3/4" Cotter
18	9-0364	PIN, 5/32 x 1" Cotter
19	9-0122	WASHER, 3/8 flat
20	9-0289	NUT, 3/8-24 Hex
21	9-0506	SCREW, 3/8-16 x 1/2" Self-Tapping (4)
22	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping
23	9-0233	SCREW, 5/16-24 x 3/4" Hex Head Cap (2)
24	9-0391	WASHER, 5/16 Internal Tooth Lock (2)
25	9-0223	NUT, 5/16-24 Hex (2)
26	1-2067	RING, Red (2)
27	1-9401	RING, White (2)
28	2-2112	RING, White
29	9-0037	PIN, 3/32 x 3/4" Cotter (2)
30	9-0858	SCREW, 5/16-18 x 1/2" Self-Tapping (2)
31	2-2082	PIVOT, Leveling
32	1-0736	PIN, Clevis (2)
33	2-2114	SHAFT, Pivot
34	3-2997	ARM, Front Lift-Left (30" Models)
35	9-0844	PIN, 3/16 x 3/4" Roll

41" RAILS, LIFT ARMS, CAM LIFT

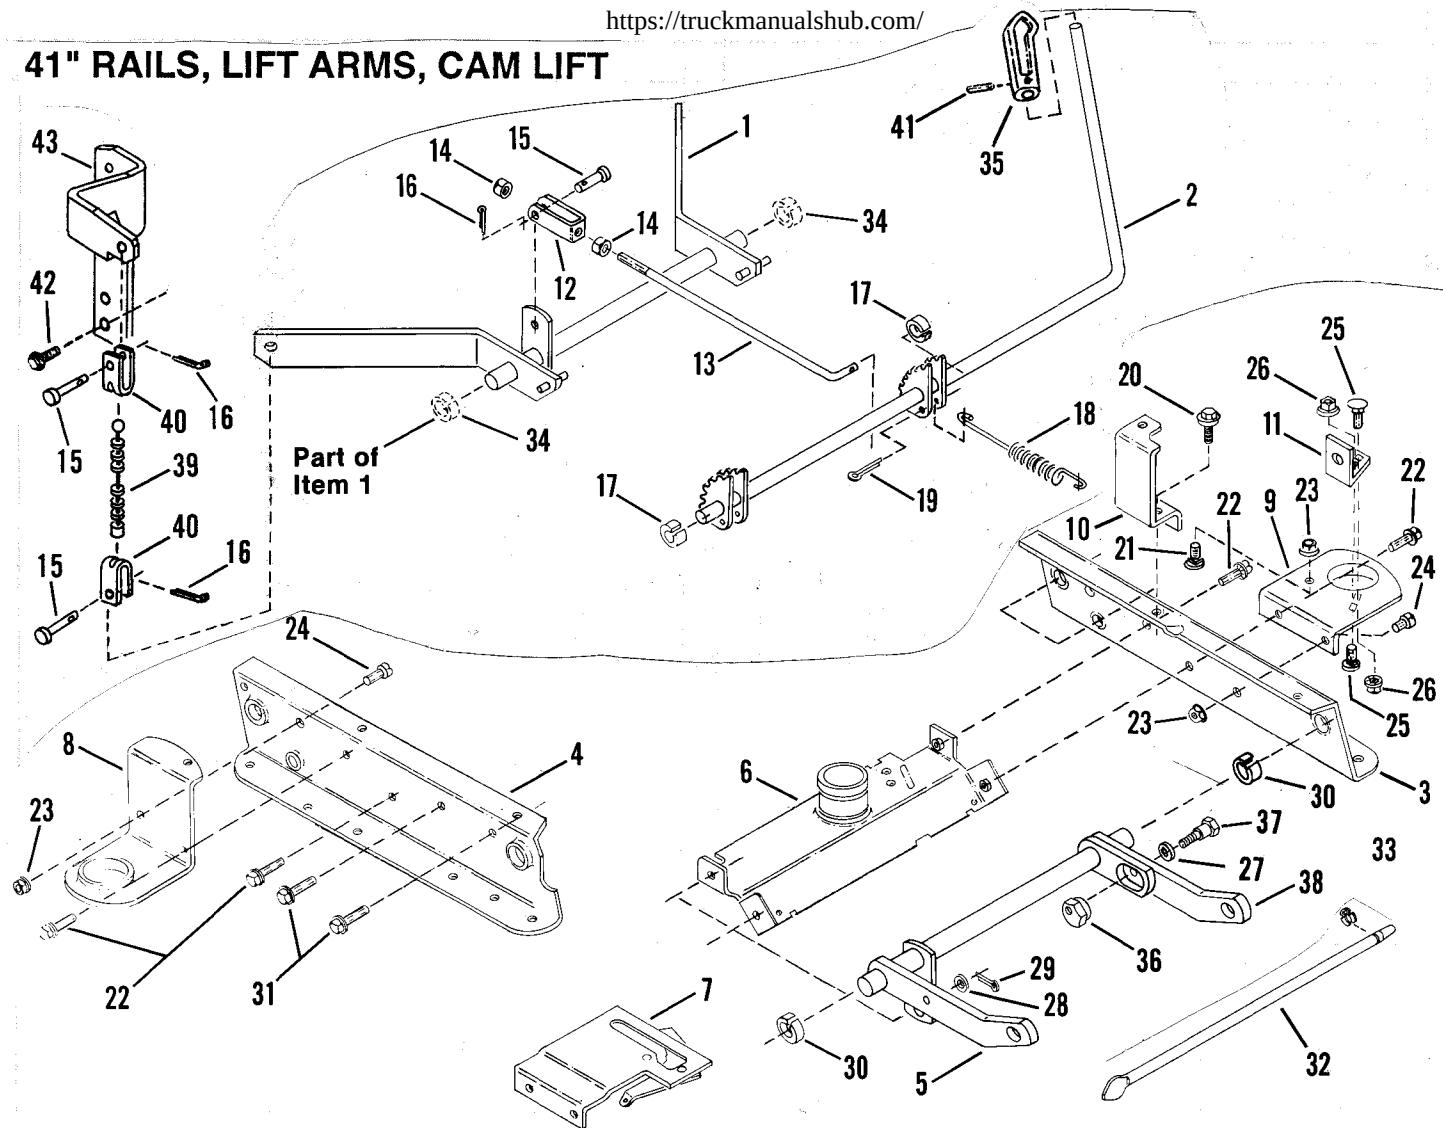


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	5-2394	ASSEMBLY, Rear Lift Arm	24	9-0292	SCREW, 3/8-24 x 3/4" Hex Cap (2)
2	4-7835	LEVER, Height Adjustment Lift	25	9-0316	BOLT, 5/16-18 x 3/4" Carriage (2)
3	3-3036	RAIL, Left Half	26	9-0585	NUT, 5/16-18 Hex Flange Lock (2)
4	3-3037	RAIL, Right Half	27	9-0390	WASHER, 3/8 Internal Tooth Lock
5	4-0685	STRUCTURE, Front Lift Arm	28	9-0122	WASHER, 3/8 Flat
6	4-0502	BRACE, Weldment	29	9-0365	PIN, 1/8 x 3/4" Cotter
7	5-1310	ASSEMBLY, Clutch Plate	30	1-2067	RING, Red (2)
8	3-6090	SPINDLE, Brace (Right)	31	9-0361	SCREW, 5/16-18 x 5/8" Hex Self-Tapping (2)
9	3-8096	SPINDLE, Brace (Left)	32	2-2717	SUPPORT, Rod
10	3-8104	BRACKET, Cover	33	1-7847	RING, Retaining
11	3-2334	ANCHOR	34	1-2068	RING, Blue (2)
12	3-1837	CLEVIS, Timing Rod	35	2-3658	GRIP, Height Adjustment Lever
13	1-2030	ROD, Timing	36	1-5447	ECCENTRIC, Leveling
14	9-0155	NUT, 3/8-24 Hex (3)	37	1-5495	BOLT, 3/8-24 x 3/4" Shoulder
15	1-0736	PIN, 3/8 x 1-1/16 Clevis(5)	38	3-2997	ARM, Front Lift (Left Side)
16	9-0037	PIN, 3/32 x 3/4" Cotter	39	1-7153	CABLE, 41" Deck
17	2-3791	RING, Black (2)	40	3-3313	BRACKET, Cable
18	1-1074	SPRING, Cam Lift	41	9-0844	PIN, 3/16 x 3/4" Roll
19	9-0364	PIN, 5/32 x 1" Cotter	42	9-0369	SCREW, 5/16-18 x 1" Hex Self-Tapping (6)
20	9-0741	SCREW, 1/4-20 x 5/8" Self-Tap	43	3-3224	DECK-WING, Rear (Right)
21	9-0160	SCREW, 3/8-24 x 1" Hex Cap	--	3-3223	DECK-WING, Rear (Left)
22	9-0324	SCREW, 3/8-16 x 1" Self-Tap (4)			
23	9-0289	NUT, 3/8-24 Hex Lock (3)			

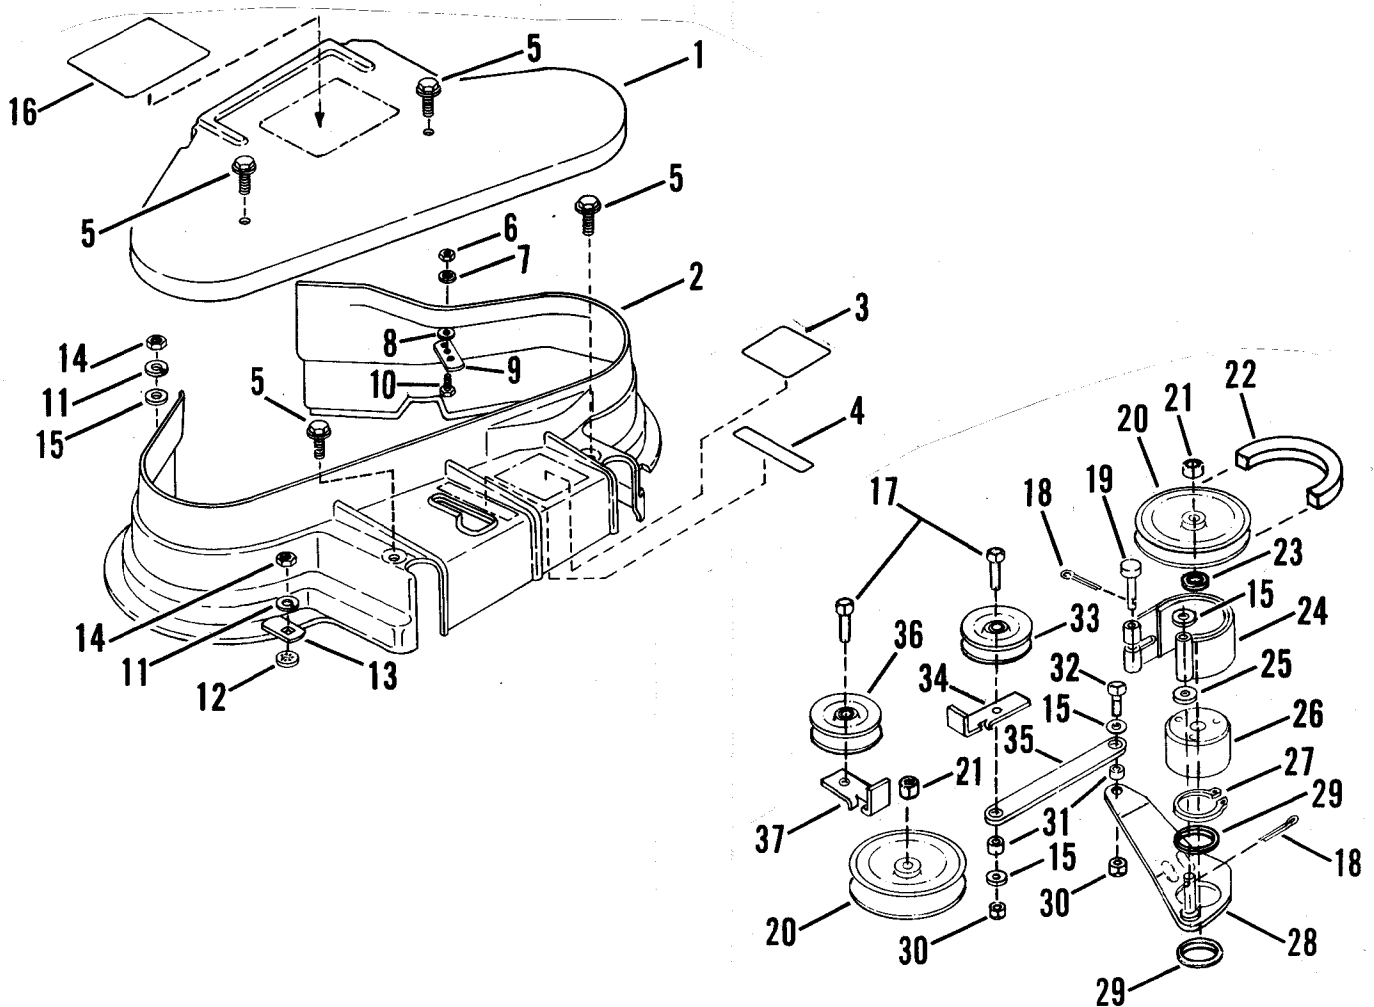41" DECK COVER, BLADE BRAKE

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	5-7371	ASSEMBLY, 41" Cover (Top) (Includes Item 16)	19	1-4304	PIN, 1/4 Clevis
2	5-2413	ASSEMBLY, 41" Cover (Bottom) (Includes Items 3,4,6 Thru 10)	20	1-4532	PULLEY, 5" O.D. (2)
3	1-7876	DECAL, Brake Operation	21	9-0820	NUT, 3/4-16 Hex Jam Lock (2)
4	1-4731	DECAL, Blade (ON-OFF)	22	1-4525	BELT, AA105
5	9-0741	SCREW, 1/4-28 x 5/8" Self-Tap (4)	23	1-0935	WASHER, 3/4 Flat
6	9-0063	NUT, 1/4-20 Hex (2)	24	5-7307	ASSEMBLY, Brake Band
7	9-0053	WASHER, 1/4 Internal Tooth Lock	25	1-4314	SPACER
8	9-0055	WASHER, 1/4 Flat	26	3-2169	BRAKE DRUM
9	3-2427	GUIDE, Belt	27	1-0740	RING, Retaining (4)
10	9-0071	SCREW, 1/4-20 x 1/2" Hex Cap (2)	28	4-7862	ASSEMBLY, Brake Arm
11	9-0118	WASHER, 3/8 Split Lock (4)	29	1-4795	WASHER, 2" I.D. (2)
12	1-3847	RETAINER, 3/8 Bolt (4)	30	9-0289	NUT, 3/8-24 Hex Lock (12)
13	3-2367	CLIP (2)	31	1-4527	SPACER (2)
14	9-0130	NUT, 3/8-16 Hex (4)	32	9-0292	SCREW, 3/8-24 x 3/4" Hex Head Cap (14)
15	9-0122	WASHER, 3/8 Flat	33	1-1029	PULLEY, Idler
16	1-9776	DECAL, Caution	34	3-2111	RESTRICTOR
17	9-0161	SCREW, 3/8-24 x 1-3/4" Hex Cap (2)	35	3-2333	LINK
18	9-0037	PIN, 3/32 x 3/4" Cotter (3)	36	1-8651	PULLEY, Idler
			37	3-2368	GUIDE, Belt


BELTS, BRAKES, INTERLOCK

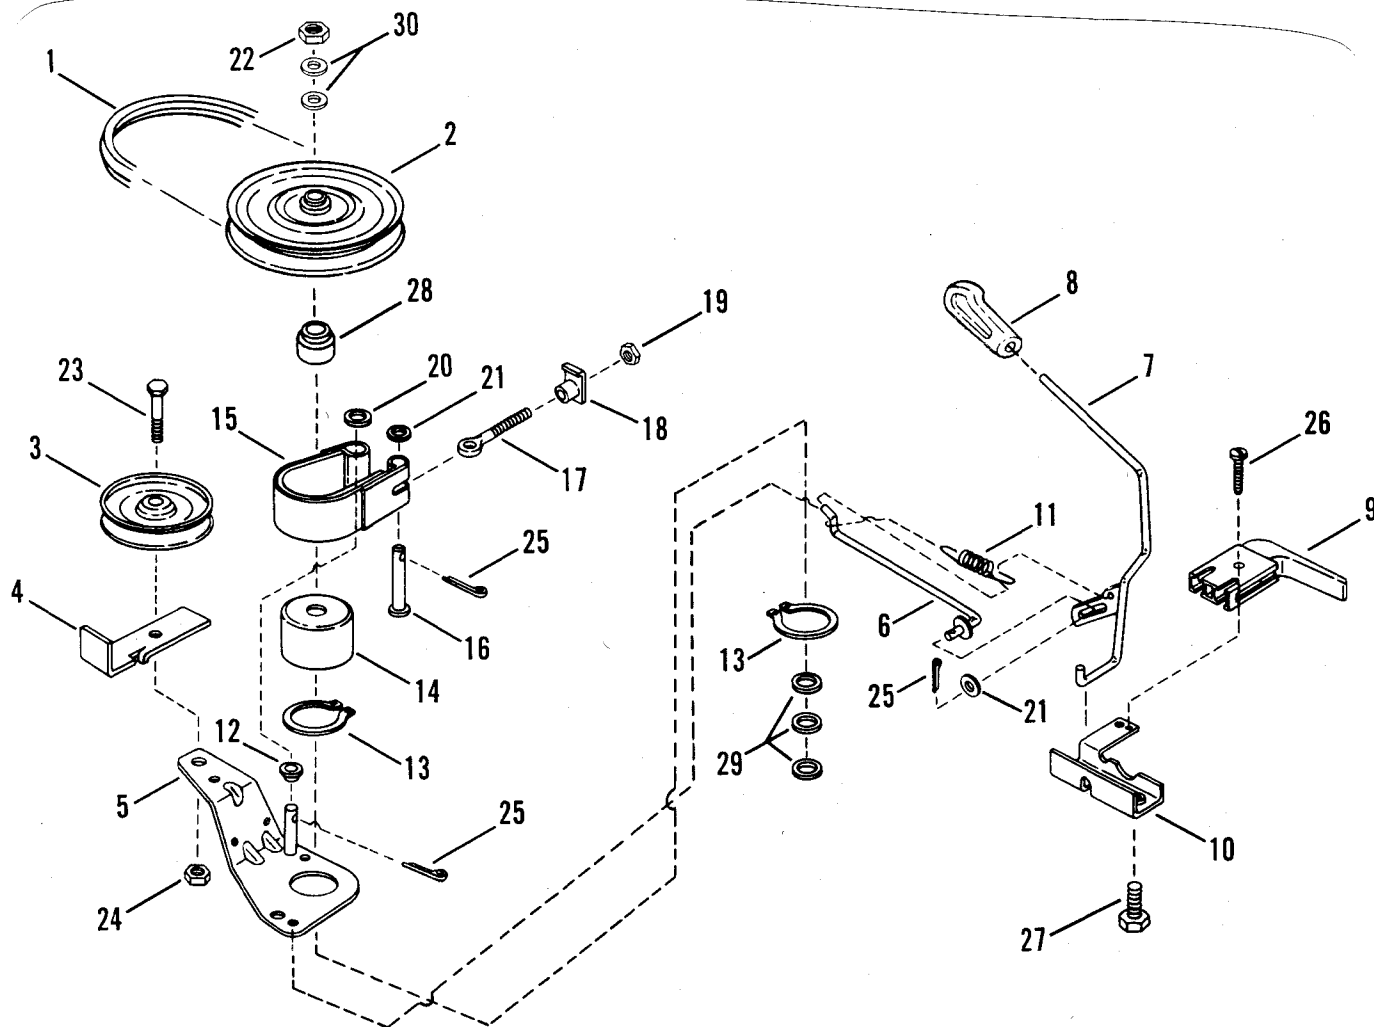


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	2-2252	BELT, Drive	15	5-7307	BAND, Brake
2	1-8781	PULLEY, Spindle	16	1-4304	PIN, 1/4 x 1-5/8" Clevis
3	1-1029	PULLEY, Idler	17	1-4302	BOLT, 1/4-20 Eye
4	3-2111	RESTRICTOR, Belt	18	1-4303	NUT, 1/4-20 Tee
5	4-7787	ARM, Idler	19	9-0063	NUT, 1/4-20 Hex
6	1-2055	ROD, Idler	20	9-0122	WASHER, 3/8 Flat
7	4-0594	HANDLE, Blade Lever(On-Off)	21	9-0055	WASHER, 1/4 Flat
-	4-1324	HANDLE, Blade Lever(On-Off) (Reduced Effort) (Mid-'92 Models)	22	1-0027	NUT, 3/4-16 Hex Jam
8	2-3657	GRIP, Handle	23	9-0161	SCREW, 3/8-24 x 1-3/4" Hex Cap
9	1-8524	SWITCH, Deck Interlock	24	9-0289	NUT, 3/8-24 Hex Lock
10	3-8021	MOUNT, Handle	25	9-0037	PIN, 3/32 x 3/4" Cotter (3)
11	1-4168	SPRING, Blade Handle	26	9-0299	SCREW, #10-32 x 1" Self-Tap
12	1-4314	SPACER	27	9-0362	SCREW, 1/4-20 x 5/8" Self-Tap
13	1-0740	RING, Retainer (2)	28	1-5290	HUB, Pulley
14	3-2169	DRUM, Brake	29	1-0935	WASHER, 49/64 x 1-1/8" Flat(3)
			30	3-2027	WASHER, 49/64 x 1-1/2" Flat (2)

BLADE STOP PEDALS

25", 28" DECKS

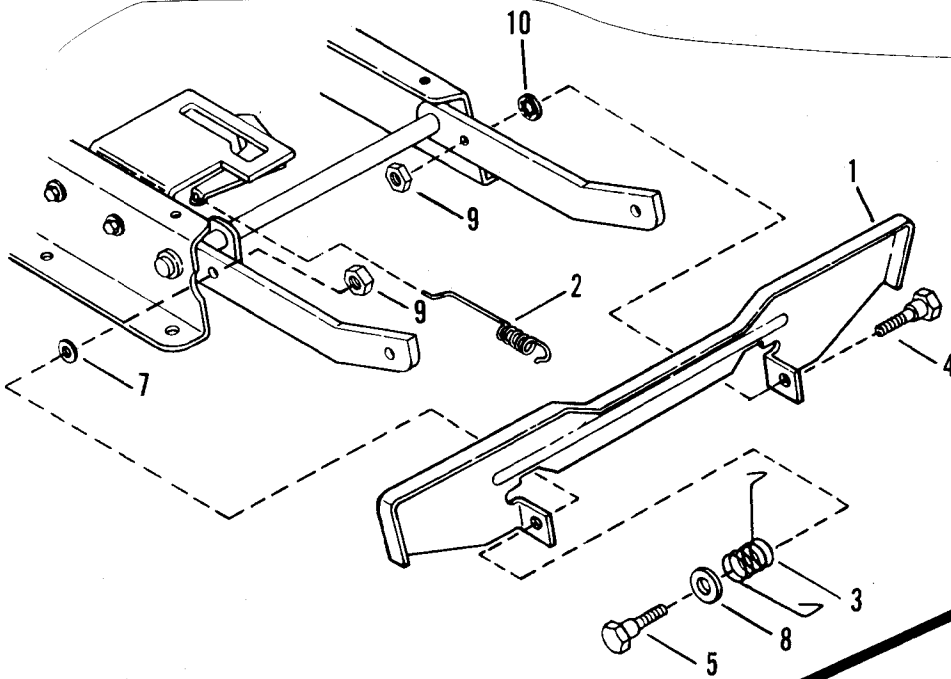


30", 33" DECKS

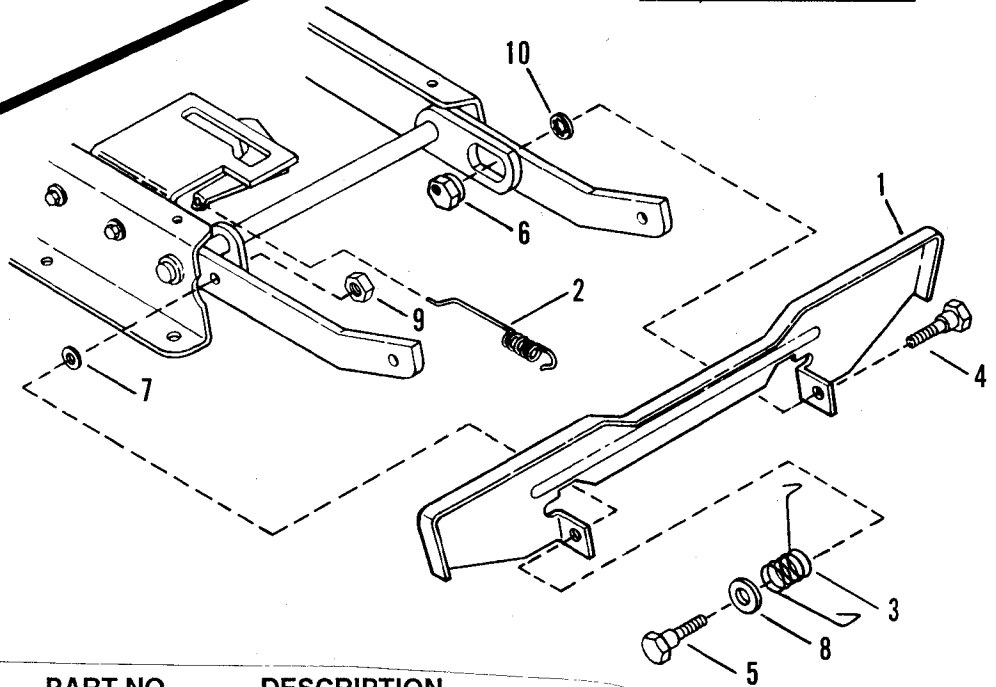

ITEM	PART NO.	DESCRIPTION
1	3-3601	PEDAL, Blade Stop Control
2	1-9410	SPRING, Latching
3	1-5448	SPRING, Pedal
4	1-5495	BOLT, 3/8-24 x 3/4" Shoulder
5	1-5446	BOLT, 3/8-24 x 9/16" Shoulder
6	1-5447	ECCENTRIC, Leveling
7	9-0122	WASHER, 3/8 Flat
8	9-0250	WASHER, 1/2 Flat (2)
9	9-0289	NUT, 3/8-24 Hex Lock
10	9-0390	WASHER, 3/8 Internal Tooth Lock


SPINDLE

① ASSEMBLY

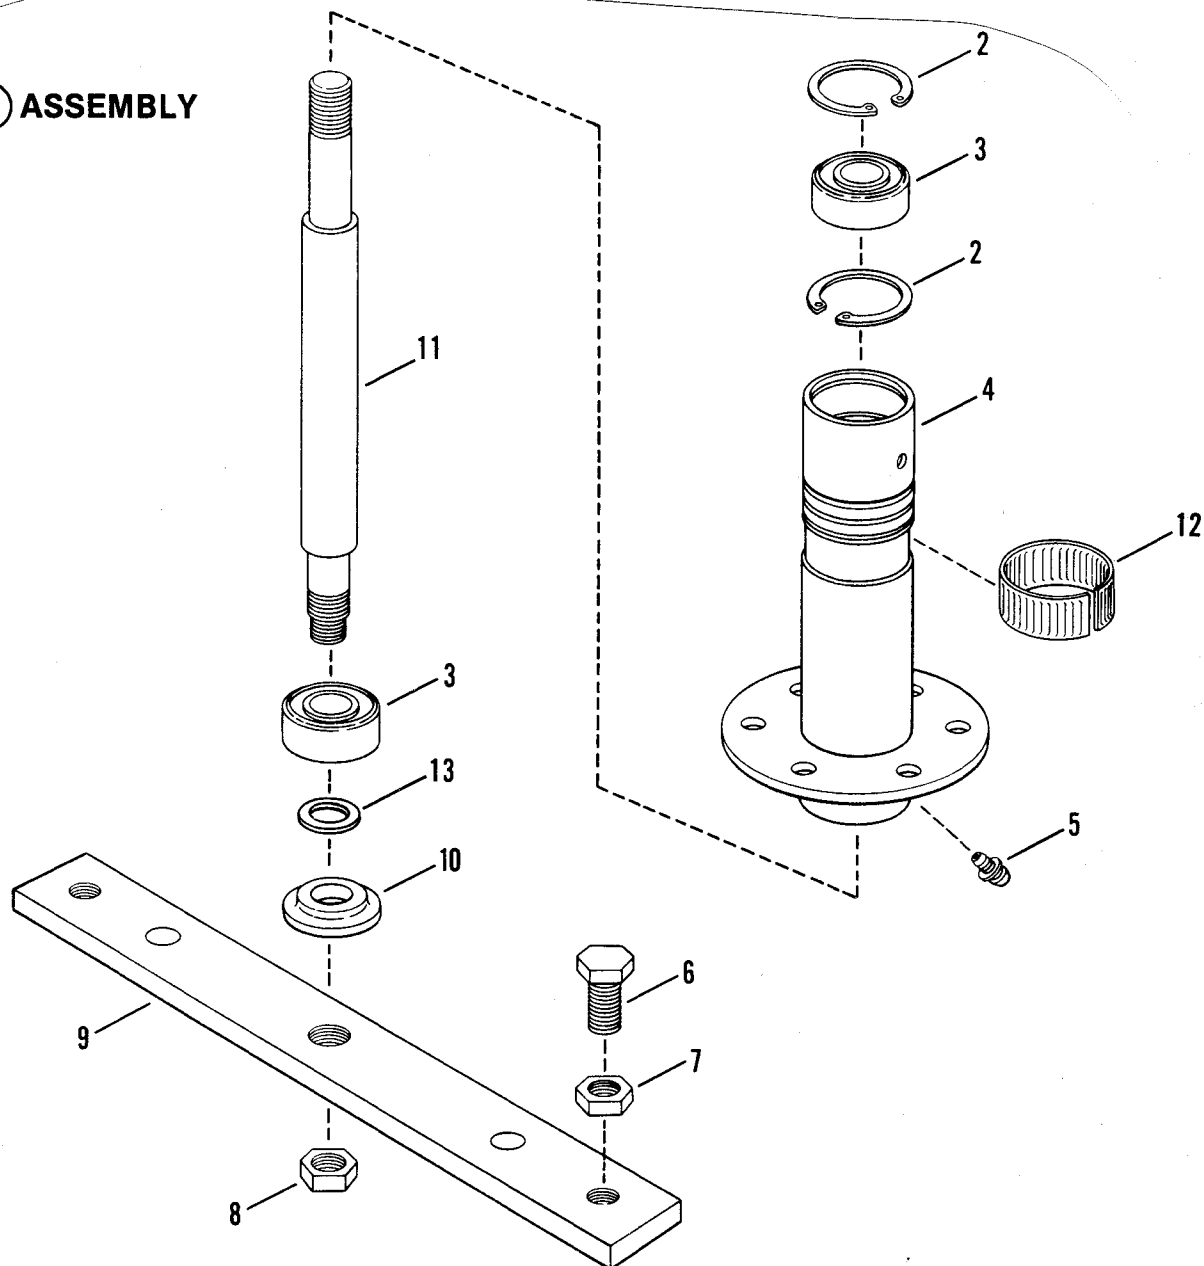


ITEM	PART NO.	DESCRIPTION
1	5-9813	ASSEMBLY, Spindle Housing (Includes Items 2 Thru 11)
2	1-2491	RING, Retaining (2)
3	1-3313	BEARING, Spindle (2)
4	5-0696	HOUSING, Spindle (Includes Item 5)
5	1-0817	FITTING, Lube
6	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap (2) (GR.5)
7	9-0559	NUT, 1/2-20 Hex Jam (2)
8	9-0356	NUT, 5/8-18 Hex Lock
9	3-7751	HOLDER, Blade
10	1-4407	WASHER, Spindle
11	2-1742	SPINDLE
12	1-2670	RING, Tolerance
13	1-0121	WASHER, Shim

DRIVE DISC ASSEMBLY

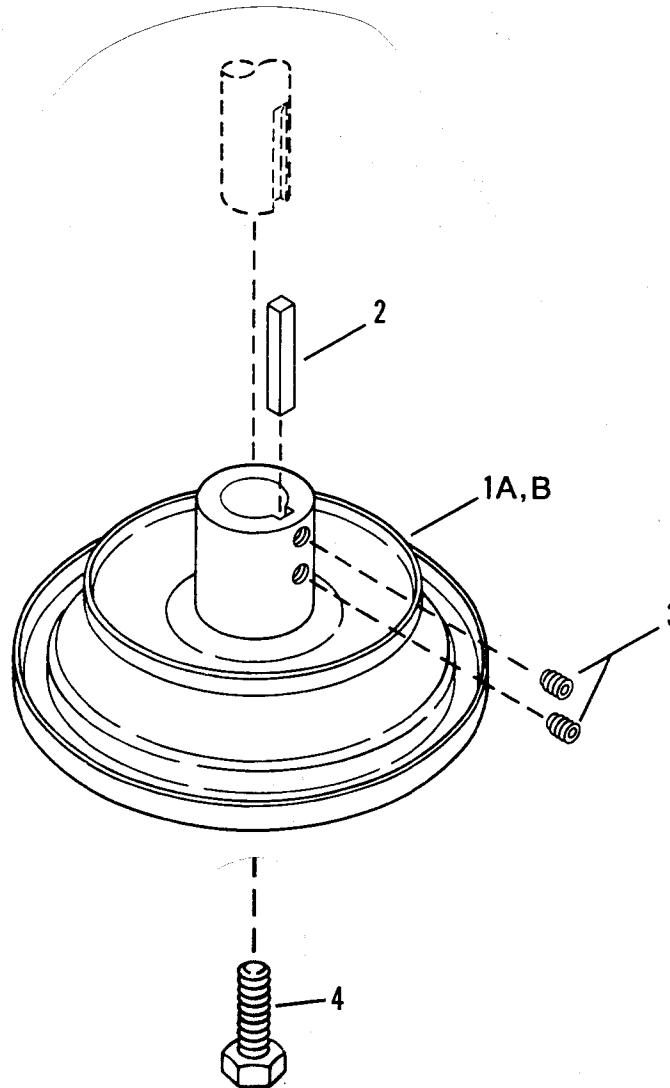

ITEM	PART NO.	DESCRIPTION
1	5-2073	ASSEMBLY, Drive Disc
-	5-2811	ASSEMBLY, Drive Disc (41" Models Only)
2	1-0210	KEY, 1/4 x 1/4 x 2" Square
3	9-0132	SCREW, 3/8-16 x 3/8" Socket Set (2)
4	9-0458	SCREW, 7/16-20 x 1" Hex Head Cap (41" Models Only)

FUEL TANK & OPERATORS SEAT

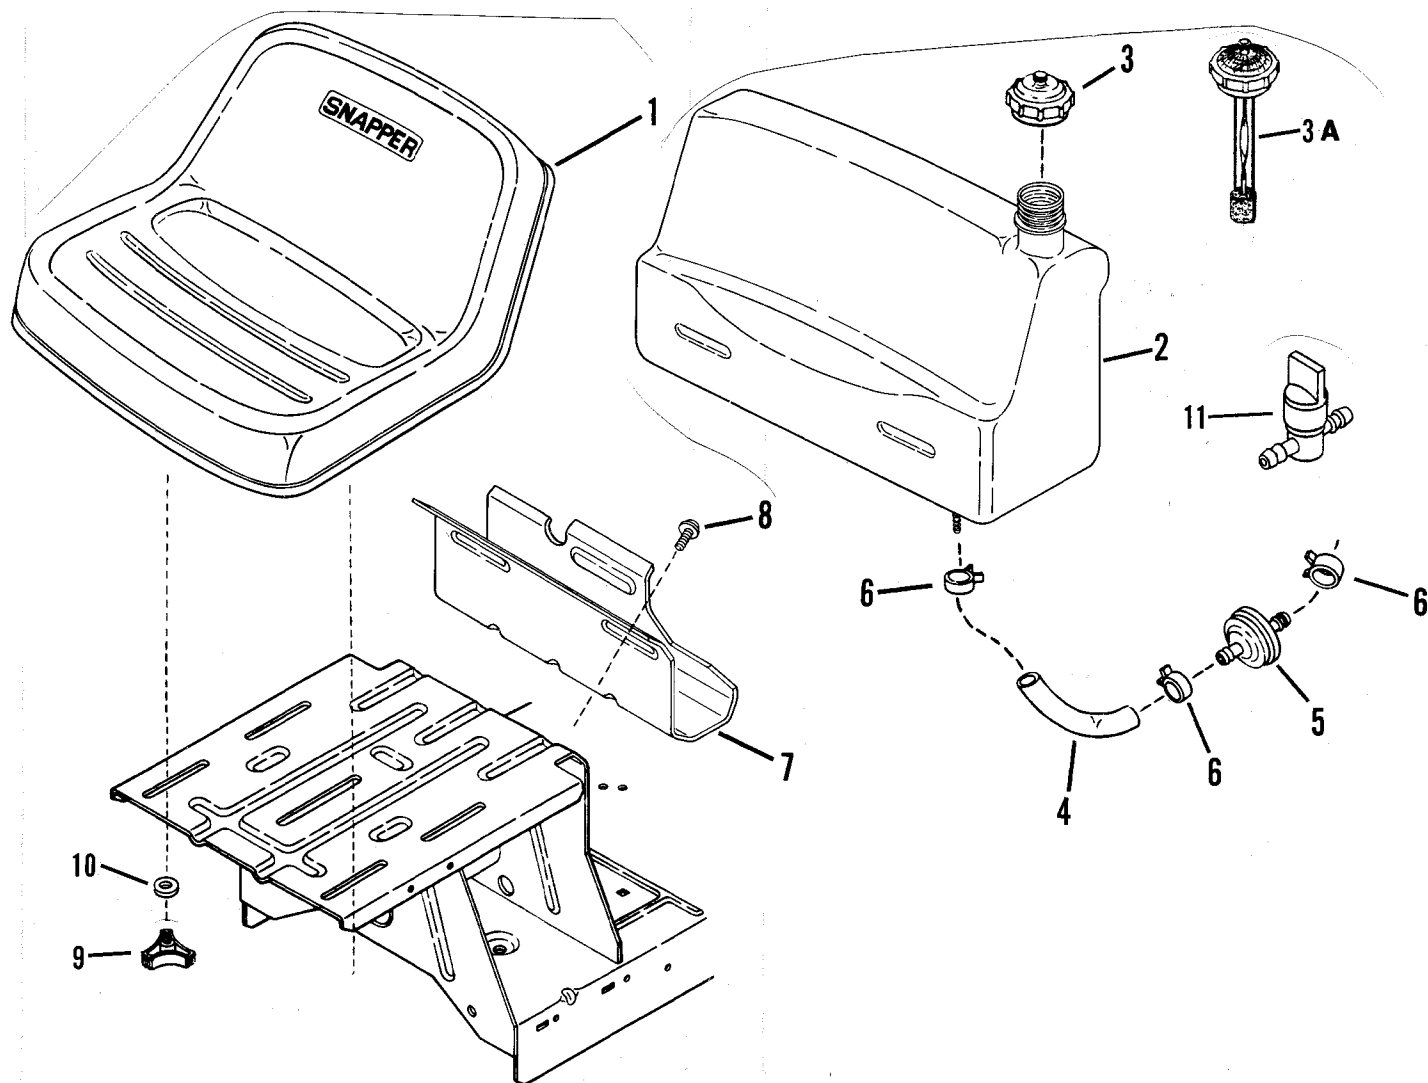

ITEM	PART NO.	DESCRIPTION
1	1-6749	SEAT, Operator (25" Models)
-	1-6082	SEAT, Operator (25" & 28" Recycling Models)
-	2-4093	SEAT, Operator (28" & 30" 10 HP Models)
		(Replacement Seat Cover for 2-4093 Seat is #2-4264)
-	2-2585	SEAT, Operator (28", 30", 33", 41" 11.5, 12.5, 14, 16 HP Models)
2	5-1905	ASSEMBLY, Fuel Tank (Includes Item 3)
-	5-2435	ASSEMBLY, Fuel Tank (Includes Item 3A) (41" Models Only)
3	1-2515	CAP, Fuel Tank
3A	1-9377	CAP, Fuel Tank/with Gauge (41" Models Only)
4	3-2015	HOSE, Fuel (7" Long)
-	3-2038	HOSE, Fuel (5" Long)
-	7-6272	HOSE, Fuel (8-1/2" Long)
-	2-4247	HOSE, Fuel (24-1/4" Long)
5	1-4359	FILTER, Fuel (In-Line)
6	1-2222	CLAMP, Fuel Line (4)
7	3-3377	BRACKET, Fuel Tank (Rear)
8	9-1001	SCREW, 5/16-18 x 5/8" Self-Tapping (2)
9	2-3191	KNOB, Seat adjusting (2)
10	9-0188	WASHER, 5/16 Flat (2)
11	2-4507	VALVE, Fuel Shut-Off (41" Models Only)

ENGINE SPECS.

8 H.P. B & S ENGINE
SNAPPER NO. 2-2551


10 H.P. B & S ENGINE
SNAPPER NO. 2-2552

11.5 H.P. B & S ENGINE
SNAPPER NO. 2-2553

12.5 H.P. B & S ENGINE
SNAPPER NO. 2-2554


14 H.P. KOHLER ENGINE
SNAPPER NO. 2-2555

16 H.P. B & S ENGINE
SNAPPER NO. 2-4094

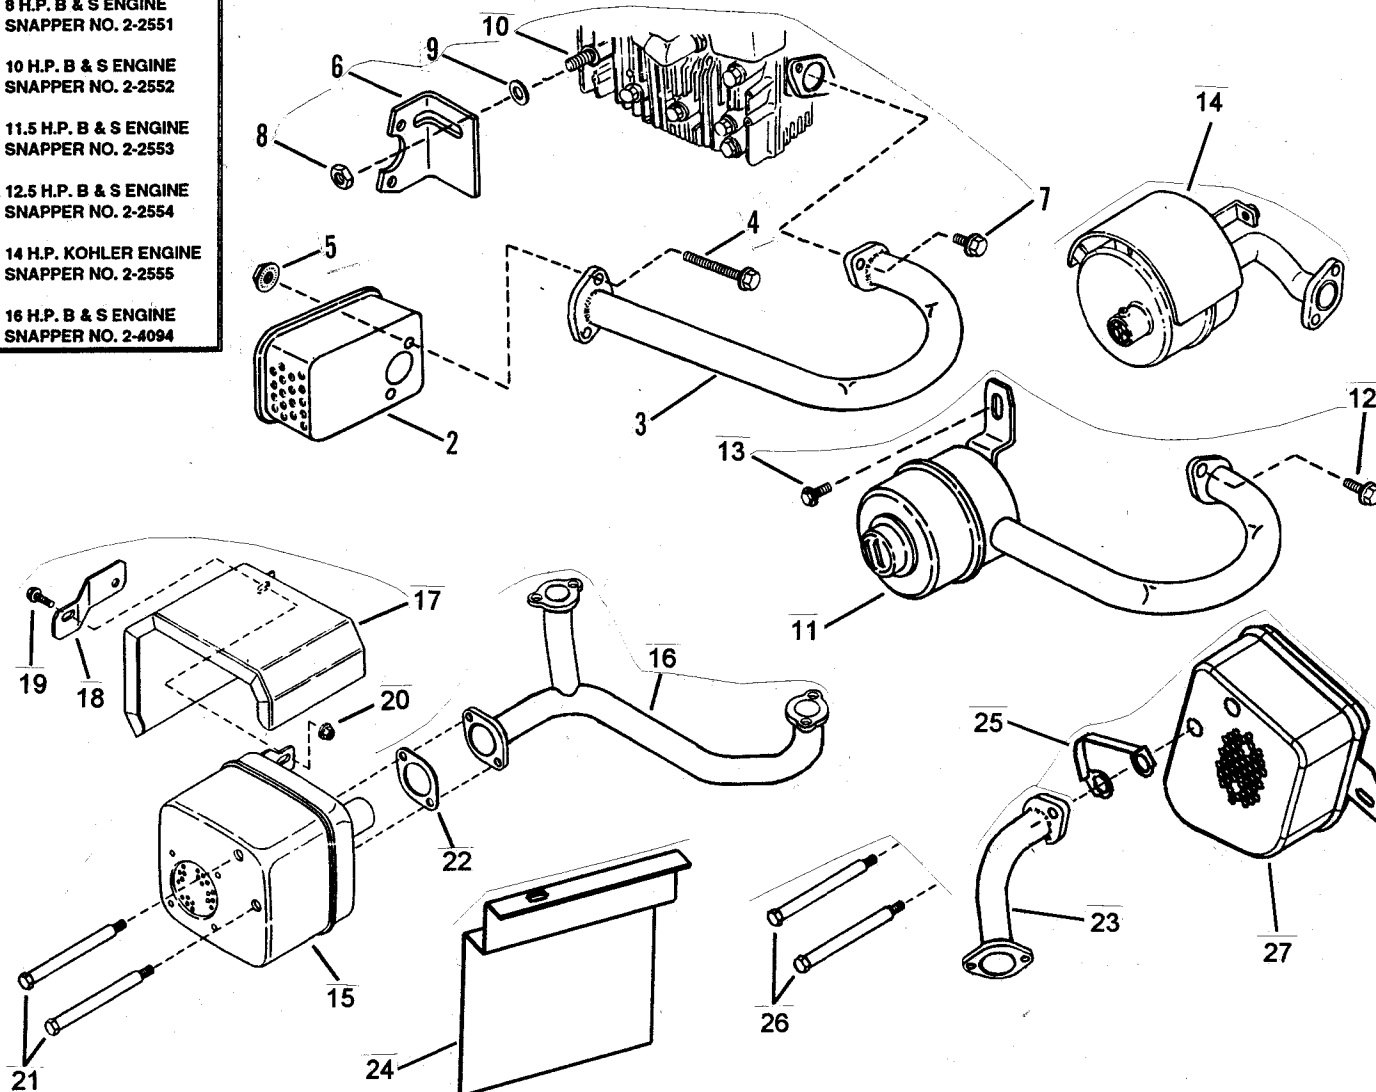① KIT, Muffler


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	6-0316	KIT, Muffler (Incl. Items 2 thru 10) (8 HP Models)	15	2-4241	MUFFLER (16 HP Briggs) (41" Models Only)
2	1-8198	MUFFLER	16	5-2779	MANIFOLD, Exhaust (41" Models Only)
3	1-8197	TUBE, Exhaust	17	3-3594	SHIELD, Muffler (41" Models Only)
--	6-0489	BAG, Hardware (Incl. Items 4-10)	18	3-3589	BRACE, Muffler (41" Models Only)
4	9-0553	SCREW, 5/16-18 x 3" Hex Head	19	9-0596	BOLT, 1/4-20 x 5/8" Hex Flange Lock (41" Models Only)
5	9-0585	NUT, 5/16-18 Hex Flange Lock (2)	20	9-0583	NUT, 1/4-20 Hex Flange Lock (41" Models Only)
6	3-2414	BRACKET, Muffler	21	2-4161	BOLT, 5/16-18 (1/2") x 4" Shoulder (2) (41" Models Only)
7	9-0072	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)	22	1-4509	GASKET, Exhaust (41" Mods Only)
8	9-0196	NUT, 5/16-18 Hex	23	2-4734	MANIFOLD, Exhaust
9	1-2418	WASHER, 21/64 Flat	24	2-4739	GUARD, Heat (Tecumseh Muffler, Kohler Engine)
10	1-2419	STUD, Cylinder Head	25	2-4744	LOCK TAB
11	5-1996	MUFFLER (10, 11.5, 12.5 HP Briggs)	26	2-4745	BOLT, Shoulder- Muffler (2)
12	9-0206	SCREW, 5/16-18 x 3/4" Hex Head Cap (2)	27	2-4746	MUFFLER (14 HP Kohler KVE)
13	9-0073	SCREW, 1/4-20 x 3/4" Hex Head CAP			
14	1-9358	MUFFLER (14 HP Kohler)			


ELECTRICAL SYSTEMS

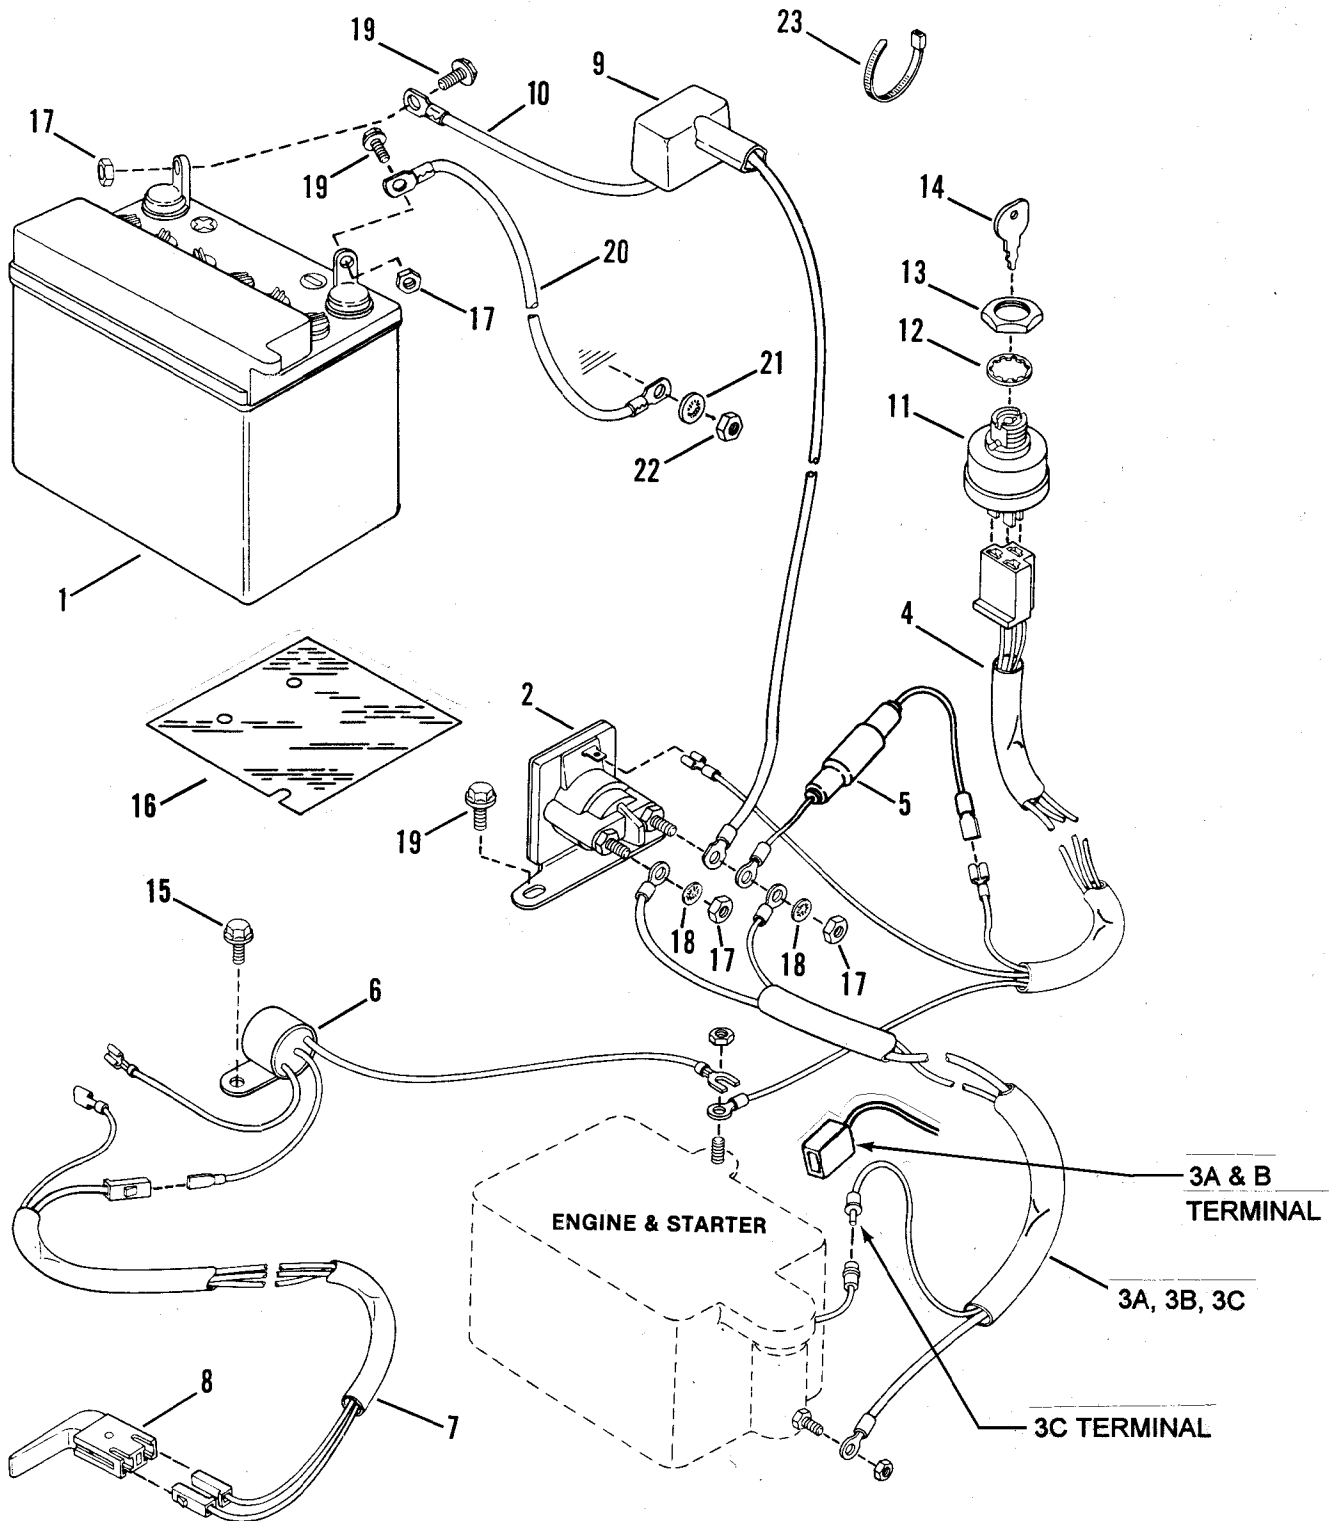

ELECTRICAL SYSTEMS

ITEM	PART NO.	DESCRIPTION
1	6-0753	KIT, 12V Dry Charge Battery
2	1-8817	SOLENOID
3A	2-2788	HARNESS, Starter Wiring (Briggs)
3B	1-9321	HARNESS, Starter Wiring (Kohler)
3C	1-5430	HARNESS, Starter Wiring (Briggs)
4	1-9297	HARNESS, Ignition Wiring (Briggs)
-	1-9322	HARNESS, Ignition Wiring (Kohler)
-	2-4237	HARNESS, Ignition Wiring (16 HP Briggs Only)
5	1-6168	HOLDER, Fuse (Includes Fuse)
-	1-6169	FUSE (10 AMP)
6	2-3782	INTERLOCK (Briggs)
-	1-5759	INTERLOCK (Kohler)
-	2-4236	INTERLOCK (16 HP Briggs Only)
7	1-9143	HARNESS, Deck Interlock Wiring
8	1-8524	SWITCH, Deck Interlock
9	1-2444	COVER, Battery Cable
10	2-3811	CABLE, Positive (Red)
-	1-9326	CABLE, Positive (16 HP Briggs Only) (Red)
11	1-8816	SWITCH, Ignition (Used With Electric Start)
12	9-0880	WASHER, 5/8 Internal Tooth Lock
13	1-5438	NUT, 5/8-32 Hex
14	2-3504	KEY, Switch (2)
15	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping
16	2-2887	PROTECTOR, Solenoid
17	9-0063	NUT, 1/4-20 Hex (4)
18	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
19	9-0072	SCREW, 1/4-20 x 5/8" Hex Head Cap (3)
20	2-3812	CABLE, Negative
21	9-0391	WASHER, 5/16 Internal Tooth Lock
22	9-0196	NUT, 5/16-18 Hex
23	1-2080	TIE, Cable (2)

THROTTLE CONTROL

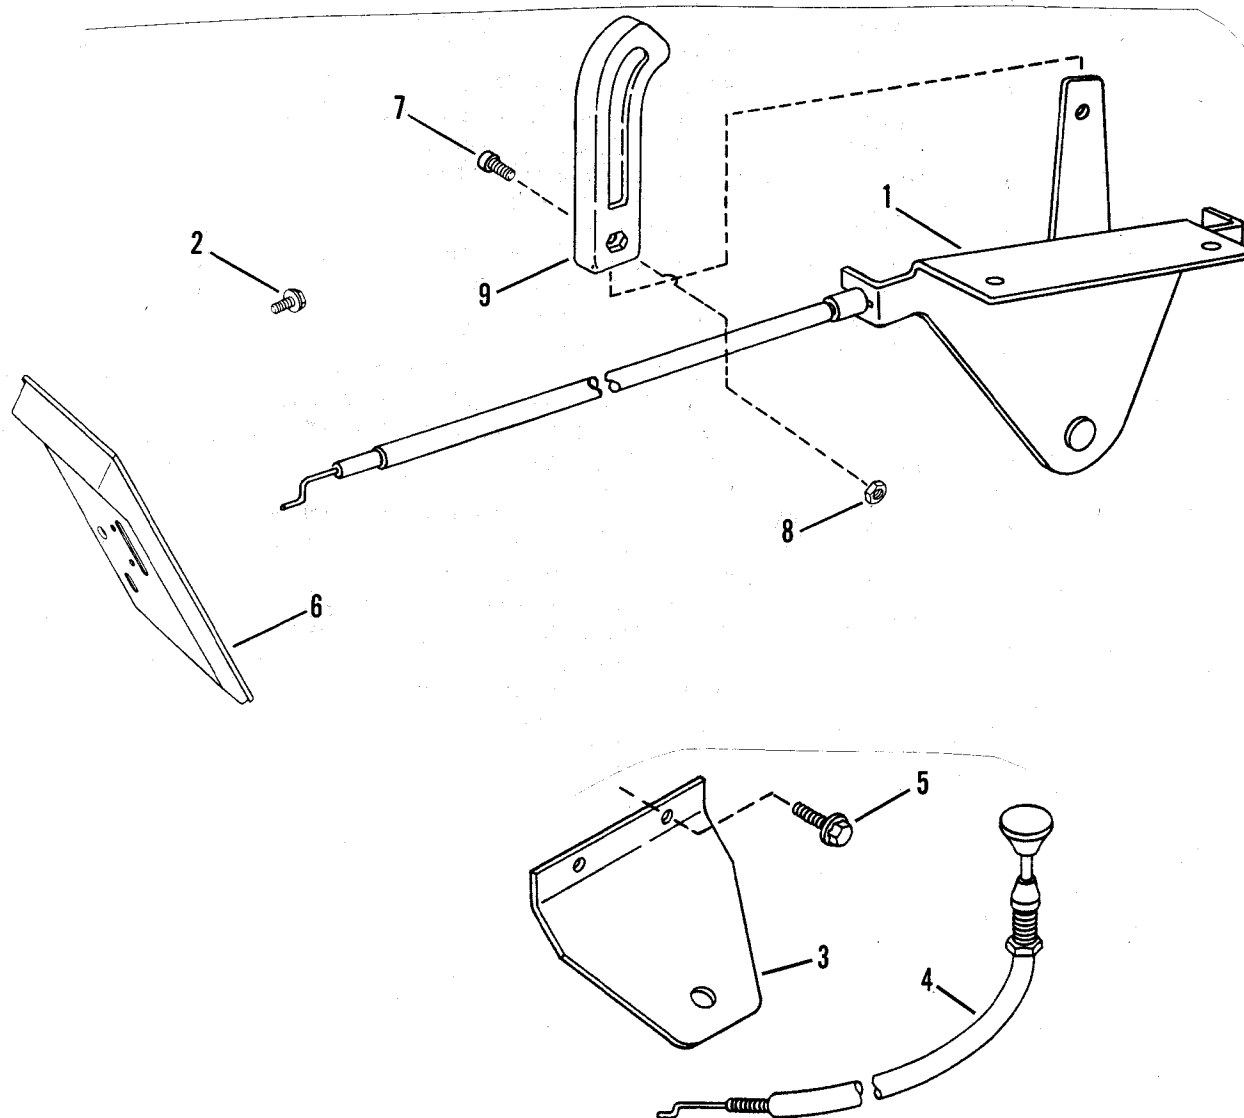

ITEM	PART NO.	DESCRIPTION
1	2-4155	CONTROL, Throttle
-	2-2483	CONTROL, Throttle (14 HP Kohler)
-	2-4242	CONTROL, Throttle (16 HP Briggs)
2	9-0853	SCREW, #10-24 x 1/2" Self-Tapping (5)
3	3-3569	PLATE, Throttle Control (41" Models Only)
4	2-4185	CONTROL, Choke (41" Models Only)
5	9-0362	SCREW, 1/4-20 x 5/8" Self-Tapping (2)
6	2-3665	COVER, Dash Panel
7	9-1017	SCREW, #8-32 x 3/8" Cross Recess Filister (2)
8	9-1018	NUT, #8-32 Hex (2)
9	2-3655	KNOB, Throttle Control

ITEM	PART NO.	DESCRIPTION
1	2-3992	DECAL, 25 Inch
2	2-3996	DECAL, 28 Inch
3	2-3997	DECAL, 30 Inch
4	2-2991	DECAL, 33 Inch
5	2-2992	DECAL, 41 Inch
6	2-3999	DECAL, SR 110
7	2-4018	DECAL, SRM 110
8	2-4010	DECAL, SR 120
9	2-4012	DECAL, SR 130
10	2-4020	DECAL, SRM 130
11	2-4014	DECAL, SR 140
12	2-4022	DECAL, SRM 140
13	2-4016	DECAL, SR 150
14	2-4238	DECAL, SR 160
15	1-6974	SNAPPER, (Molded Logo)
16	2-4070	DECAL, Convertible (Silver) (25" Models)
17	2-4068	DECAL, Convertible (Teal) (28" Models)
18	2-3994	LOGO, Convertible (Teal) (30" Briggs Models)
19	2-3995	LOGO, Convertible (Blue) (30" Kohler Models)
20	2-4067	LOGO, Convertible (Blue) (33" Models)
21	2-4066	LOGO, Twin Turbo (Blue) (41" Models)
22	2-4065	LOGO, Recycle (Green) (Recycling Models)
23	2-4042	DECAL, Banner (Silver) (25" Models)
24	2-4043	DECAL, Banner (Teal) (28", 30" Models)
25	2-4045	DECAL, Banner (Blue) (30" Kohler, 33", 41" Models)
26	2-4044	DECAL, Banner (Green) (Recycling Models)
27	2-4001	DECAL, Bumper Stripe (Silver) (25" Models)
28	2-3998	DECAL, Bumper Stripe (Teal) (28" Models)
29	2-4002	DECAL, Bumper Stripe (Teal) (30" Models)
30	2-4004	DECAL, Bumper Stripe (Blue) (30" Kohler, 33", 41" Models)
31	2-4003	DECAL, Bumper Stripe (Green) (25", 28" Recycling Models)
32	2-4059	DECAL, Bumper Stripe (Green) (33" Recycling Models)
33	2-2993	DECAL, Deep Drawn Chamber (Recycling Models)
34	1-7328	DECAL, Cut Height Recycling (Recycling Models)
35	1-7176	DECAL, Recycling Speed
36	2-3980	DECAL, Back-up Recoil (30" & 33" Kohler Models)
37	2-3982	DECAL, OHV (30" & 33" Kohler Models)
38	2-3983	DECAL, 14 HP (30" & 33" Kohler Models)
39	2-4072	DECAL, Auto Blade Stop
40	2-2448	DECAL, Safety Instruction Warning
41	1-6972	DECAL, Caution Deflector
42	1-6973	DECAL, Caution Rotating Blades
43	1-3010	DECAL, Danger
44	1-2358	DECAL, Battery Storage
45	1-5691	DECAL, Caution Battery
46	2-4506	DECAL, Fuel Shut-Off

Parts Manual for

SNAPPER®

SERIES 11

REAR ENGINE RIDER

IT IS THE POLICY OF SNAPPER POWER EQUIPMENT TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

SNAPPER® McDonough, GA., 30253 U.S.A.