
https://truckmanualshub.com/

FRU01155-00

# PARTS BOOK

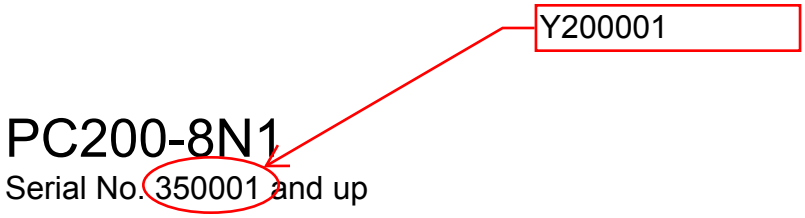


PC200-8N1
Serial No. 350001 and up

SAA6D107E-1B
Serial No. 26541137 and up

https://truckmanualshub.com/

# FOREWORD

When ordering a spare part, specify the part number, part name, and quantity required, and also specify your machine model code, machine serial number, engine serial number and the service meter reading.

This Parts Book describes not only standard items but also optional equipment and attachments. To order a part, please contact your nearest Komatsu distributor.

This Parts Book contains the information and special codes as follows:

## ILLUSTRATION AND PARTS LIST

When you open this Parts Book, you will find an illustration following its figure number (FIG.) Each individual part in the illustration is given an index number. Following the illustration, the component parts of the unit are listed in the order of the index numbers shown in the illustration. The part number, part name, quantity and applicable serial number are given for each part as a parts list.

## FIGURE NUMBER (FIG.)

The figure number (FIG.) is the number which shows the figure of the page. It is not the spare part number. The numbers are not always continuous.

## PARTS LIST

Spare parts information are listed in the parts list page as follows:

**Index:**

This is the same as the index number in the illustration. The parts are listed in index number order.

**Code:**

Codes are used in this column and represent as follows:

A1 This part and the part specified in the line immediately above are interchangeable.

A2 The part specified in the line above can be used instead of this part.

A3 This part can be used instead of the part specified in the line immediately above.

A4 The part specified in the description column can be used instead of this part if it is used as a set.

B1 This shows discontinued part. The part specified in the above line is supplied instead.

B2 This shows a discontinued part. The part specified in the description column is supplied instead as a set.

C1 This part cannot be supplied as an individual part. It is supplied as an assembly.

C2 This part is supplied for authorized Komatsu distributors only. It cannot be supplied as an individual part. It is supplied as an assembly.

C3 This indicates a part supplied as semi-finished. It requires additional work before installation.

**Part Number:**

The number given in the part number column is the part number for the part shown. It is the identification code used when ordering that part. It is important that there be no mistake in this code number when ordering.

**Description:**

This gives the name of part that has the part number listed. The mark "･" is put in front of the component part name of an assembly part and the item is entered following the assembly. If a part marked with "･" is a sub assembly, its components are marked with "･･".

Example: Tank Assembly
･Tank
･Cap
･･Packing

Furthermore, the following marks and abbreviations are used in this column.

| | |
|---|---|
| Kit | This indicates kit parts. For kit parts, refer to the section FIELD REPAIR SERVICE PARTS in this Parts Book. |
| D | Diameter |
| L | Length |
| LHS | Left-hand side |
| RHS | Right-hand side |
| T | Thickness |
| W | Width |

**Quantity (Qty):**

This specifies the number of pieces used for one machine. However, if a part is included in the assembly and/or component, the quantity per such assembly and/or component is specified.
Code AR (as required) shall be used in the Quantity column if the part cannot be specified numbers requires per machine and/or component. In such case, any number of quantities may be ordered depend on the field service requirement.

**Serial Numbers:**

Applicable engine serial number is indicated for the engine volume. In the chassis volume, this indicates the machine serial number in which the part is used.

If the serial number is enclosed in parenthesis, it shows that it is the applicable serial number for exclusive use of the equipment of figure number (FIG.)

# ПРЕДИСЛОВИЕ

При заказе запчасти укажите номер части, наименование части и нужное количество; кроме того, укажите код модели вашей машины, серийный номер машины, серийный номер двигателя и показания счетчика мото-часов.

В Каталоге приведены не только стандартные изделия, но и дополнительное оборудование и принадлежности. Для заказа запчасти пожалуйста обратитесь к ближайшему дилеру "Комацу".

Содержащаяся в Каталоге информация и специальные коды разъясняются ниже:

## РИСУНОК И ПЕРЕЧЕНЬ ЧАСТЕЙ

Раскрыв Каталог, вы увидите рисунок после номера рисунка (ПОЗ). Каждой отдельной части на рисунке присвоен позиционный номер. За рисунком следует перечень составных частей устройства в порядке номеров позиций рисунка. Перечень частей указывает для каждой части ее номер, наименование, количество и применимый серийный номер.

## НОМЕР РИСУНКА (ПОЗ)

Номер рисунка (ПОЗ) – это номер, который указывает рисунок на странице. Он не является номером запчасти. Последовательность номеров не обязательно непрерывна.

## ПЕРЕЧЕНЬ ЧАСТЕЙ

Данные запасных частей приведены на странице перечня частей следующим образом:

**Индекс (Index):**

То же, что номер позиции на рисунке. Части перечислены в порядке их позиционных номеров.

**Код: (Code):**

В этой колонке находятся коды, обозначающие следующее:

A1 Данная часть и часть, указанная в предыдущей строке, взаимозаменяемы.

A2 Вместо данной части можно использовать часть, указанную в предыдущей строке.

A3 Данную часть можно использовать вместо части, указанной в предыдущей строке.

A4 В комплекте, вместо данной части можно использовать указанную в колонке описания.

B1 Поставки этой части прекращены. Взамен поставляется часть, указанная в предыдущей строке.

B2 Поставки этой части прекращены. Взамен комплектом поставляется часть, указанная в колонке описания.

C1 Данная часть отдельно не поставляется. Она поставляется с узлом.

C2 Данная часть поставляется лишь уполномоченным дилерам "Комацу". Отдельно не поставляется. Поставляется с узлом.

СЗ Обозначает часть, поставляемую без доводки. Требует предустановочной подготовки.

**Номер части (Part Number):**

Приведенный в колонке номеров частей номер является номером изображенной части. Это код-идентификатор для заказа данной части. Важно, чтобы при заказе этот кодовый номер был указан без ошибок.

**Описание (Description):**

Здесь приводится наименование части, обозначенной номером в перечне. Значок "·" ставится перед наименованием детали компонента, причем деталь записана после узла. Если помеченная "·" часть является подсборкой узла, то ее составные части обозначаются значком "··".

Пример: Tank Assembly
·Tank
·Cap
··Packing

Далее, в этой колонке используются следующие обозначения и сокращения.

| | |
|---|---|
| Kit | Указывает на элементы комплекта. Элементы комплекта смотри в разделе ЗАПАСНЫЕ ЧАСТИ ДЛЯ РЕМОНТА В УСЛОВИЯХ ЭКСПЛУАТАЦИИ данного Каталога. |
| D | Диаметр |
| L | Длина |
| LHS | Левая сторона |
| RHS | Правая сторона |
| T | Толщина |
| W | Ширина |

**Количество (Qty):**

Указывает общее число изделий в одной машине. Если же изделие является частью узла и/или устройства, то указывается количество в таком узле и/или устройстве.
При невозможности указать количество частей на машину и/или устройство, в колонке Количество проставляется код AR (по потребности). В таком случае можно заказывать любые количества в зависимости от потребностей обслуживания на месте.

**Серийные номера (Serial Numbers):**

В книге по двигателю приводится соответствующий серийный номер двигателя. В книге по шасси указывает на серийный номер машины, где используется данная часть.

Серийный номер, заключенный в круглые скобки означает, что он применяется только для оборудования с номером рисунка (ПОЗ.)

https://truckmanualshub.com/

## CONTENTS

FOREWORD .....1

FIG No. PAGE

### ENGINE CYLINDER HEAD AND ITS RELATED PARTS

Lifting Bracket Mounting ..... (LA 9108)
ALA10-001001 .....34

Lifting Bracket ..... (LA 9106)
ALA00-001001 .....35

Head Cover ..... (VC 9327)
AVC00-001001 .....36

Exhaust Muffler And Mounting Bracket, With Dustproof Net ..... (X16-0B01070)
A1610-002001 .....37

Exhaust Muffler And Mounting Bracket ..... (X16-0B01400)
A1610-003001 .....38

Breather And Hose ..... (BR 9249)
ABR00-001001 .....39

Exhaust Connector Clamp ..... (XS 9252)
AXS00-001001 .....40

Cylinder Head ..... (X16-0B90020)
A1009-001001 .....41

Air Intake Port Cover ..... (IM 9061)
AIM00-001001 .....42

Air Intake Connector ..... (IC 9392)
AIC00-001001 .....43

Air Intake Heater ..... (AH 9147)
AAH00-001001 .....44

Air Cleaner ..... (X16-0B00270)
B9999-506001 .....45

Air Cleaner ..... (X16-0B01180)
Pre-Cleaner B9999-509001 .....80

Air Transfer Connection ..... (X16-0B00560)
B9999-507001 .....47

Exhaust Manifold ..... (TB91135)
ATB30-001001 .....48
Turbocharger ..... (X16-0B90030)
A1539-001001 .....49
Turbocharger Oil Piping ..... (TP97294)
ATP00-001001 .....50
Exhaust Muffler Piping ..... (X16-0B00090)
B9999-504001 .....51
Heat Shield, Turbocharger ..... (SH 9031)
ASH00-001001 .....52
Heat Shield ..... (X16-0B00100)
A1570-001001 .....53
Heat Shield, Sandy and Dusty Terrain Spec ..... (X16-0B00760)
A1570-002001 .....54

**ENGINE CYLINDER BLOCK AND ITS RELATED PARTS**

Breather Hose Related Parts ..... (X16-0B00040)
A2210-001001 .....56
Rear Gear Cover Fitting Parts ..... (DR 9024)
ADR20-001001 .....57
Flywheel Mounting ..... (FW 9704)
AFW10-001001 .....58
Front Gear Cover ..... (GG 9787)
AGG00-001001 .....59
Spare Parts..... (X16-0B00641)
B9999-508001 .....60
Rocker Arm..... (RL 9765)
ARL00-001001 .....61
Tappet And Block Plate ..... (BB 9233)
ABB00-001001 .....62
Accessory Drive Pulley..... (PA 9013)
APA00-001001 .....63
Flywheel Housing ..... (X16-0B90100)
A2219-001001 .....64

https://truckmanualshub.com/

Flywheel ..... (FW 9766)
AFW00-001001 .....65
Engine Oil Pan..... (OP 9402)
AOP10-001001 .....66
Engine Oil Pan Drain ..... (RD 9028)
ARD00-001001 .....67
Engine Oil Level Sensor..... SD 9128)
ASD00-001001 .....68
Cylinder Block..... (X16-0B90090)
A2019-001001 .....69
Crankshaft ..... (X16-0B90040)
A2319-001001 .....70
Vibration Damper..... (DA90K979)
ADA00-001001 .....71
Piston and Connecting Rod..... (X16-0B90050)
A2359-001001 .....72
Oil Level Gauge..... (LG90090)
ALG00-001001.....73
Rear Gear Housing..... (BB 9135)
ABB20-001001.....74

## ENGINE LUBRICATING SYSTEM

Heater Switch ..... (X16-090684A)
B9999-502001 .....76
Engine Oil Pump..... (LP 9057)
ALP00-001001 .....77
Engine Oil Filter Bracket..... (X16-0B00800)
A3110-001001.....78
Engine Oil Cooler ..... (LC 9274)
ALC00-001001.....79
Engine Oil Filter And Piping..... (LF 9137)
ALF00-001001 .....80

https://truckmanualshub.com/

## ENGINE FUEL SYSTEM

Fuel Injection Pump ..... (X16-0B90070)
A4019-001001 ..... 82
Fuel Injection Controller ..... (X16-0B90160)
A4719-001001 ..... 83
Fuel Injector ..... (X16-0B90110)
A4219-001001 ..... 84
Fuel Piping ..... (FT 9205)
AFT00-001001 ..... 85
Fuel Filter ..... (FF 9621)
AFF10-003001 ..... 86
Water Separator ..... (X16-0014550)
B9999-501001 ..... 87
Fuel Filter Piping ..... (FF 9620)
AFF20-001001 ..... 88
Fuel System Related Parts ..... (FP90313)
AFP10-001001 ..... 89
Fuel System Cover ..... (FS 9905)
AFS20-001001 ..... 90
Parts Performance ..... (PP41584)
Camshaft APP10-001001 ..... 91
Common Rail APP10-001002 ..... 92
Fuel Pre-Filter ..... (X16-0B00260)
B9999-505001 ..... 93

## ENGINE COOLING SYSTEM

Cooling Fan Drive Pulley ..... (FA 9534)
AFA10-003001 ..... 95
Cooling Fan Drive Pulley,
High Speed Fan Spec. ..... (FA 9539)
AFA10-004001 ..... 96
Cooling Fan ..... (X16-091067A)
A5030-001001 ..... 97

https://truckmanualshub.com/

Cooling Fan Spacer ..... SP 9096)
ASP00-001001.....98
Cooling Fan Belt, 35Amp. ..... (WP 9534)
AWP10-005001.....99
Cooling Fan Belt Tensioner ..... (WP97056)
AWP20-001001.....100
Water Pump ..... (WP 9757)
Mounting AWP00-001001.....101
Water Pump ..... (X16-0B90080)
A5019-001001 .....102
Water Outlet Connector ..... (WO 9026)
AWO00-001001 .....103
Water Inlet Connector ..... (WI 9179)
AWI10-001001 .....104
Thermostat ..... (EC 9049)
AEC00-001001 .....105

## ENGINE ELECTRICAL SYSTEM

Alternator, 35Amp. ..... (EE 9093)
Inner Parts AEE00-001001.....107
Starting Motor, 4.5KW ..... (ST 9391)
Inner Parts AST00-001001.....108
Starting Motor, 5.5KW ..... (ST90K235)
Inner Parts AST00-002001.....110
Wiring Harness..... (WR 9336)
AWR00-001001..... 111
Starter Relay ..... (X16-091158A)
B9999-503001 .....113
Alternator Mounting,
For 35Amp.60Amp. Alternator ..... (EH 9660)
AEH10-001001 .....114
Alternator Mounting, For 35 Amp. Sealed ..... (EH97505)
AEH10-002001 .....115

https://truckmanualshub.com/

Starting Motor Mounting, 5.5KW ..... (SM 9141)
ASM00-001001 ..... 116

## FIELD REPAIR SERVICE PARTS

Repair Service Parts ..... (X16-0B90120)
A8110-001001 ..... 118

## ENGINE RELATED PARTS

Damper ..... (X21-1148060)
(1/2) B0000-001001 ..... 120
(2/2) B0000-001002 ..... 121
Engine Mounts..... (X21-1145140)
B0100-001001 ..... 122
Air Intake Connector..... (X21-1145171)
Inner Parts, Air Cleaner B0200-002001 ..... 123
Air Cleaner Related Part B0200-002002 ..... 124
Air Intake Connector, With Pre-cleaner ..... (X21-1172281)
Air Cleaner Related Part B0200-004002 ..... 125

## COOLING SYSTEM

Cooling System,
With Auto Air Conditioner ..... (X21-1151433)
Radiator C0100-020001 ..... 128
Aftercooler And Oil Cooler C0100-020002 ..... 129
After Cooler And Shroud C0100-020003 ..... 130
Fuel Cooler And Condenser C0100-020004 ..... 132
Fan Guard And After Cooler Piping C0100-020005 ..... 133
Cooling System, With Auto Air
Conditioner, For 35 Amp.
Sealed Alternator ..... (X21-1176812)
Radiator C0100-020001 ..... 128
Aftercooler And Oil Cooler C0100-020002 ..... 129
After Cooler And Shroud C0100-020003 ..... 130
Fuel Cooler And Condenser C0100-020004 ..... 132
Fan Guard And After Cooler Piping,
For 35 Amp. Sealed Alternator C0100-022005 ..... 135

https://truckmanualshub.com/

## FUEL SYSTEM


Fuel Tank ..... (X21-1147380)

D0100-001001 ..... 138

Fuel Tank, For Fuel Refill Pump ..... (X21-1157210)

D0100-002001 ..... 139

Fuel Supply Piping, For Fuel Refill Pump ..... (X21-1159151)

- Fuel Piping — D0200-004001 ..... 141
- Pre Filter — D0200-001002 ..... 140
- Drain Piping — D0200-004003 ..... 142

Fuel Supply Piping, Bad Fuel And Poor Fuel Arrangement, Water+Dust ..... (X21-1237682)

- Fuel Piping — D0200-010001 ..... 143
- Pre Filter — D0200-001002 ..... 140
- Fuel Filter — D0200-010003 ..... 144
- Drain Piping — D0200-010005 ..... 145

Fuel Supply Piping, Bad Fuel And Poor Fuel Arrangement, Water+Dust, For Webasto Heater ..... (X21-1971890)

- Fuel Piping — D0200-011001 ..... 146
- Pre Filter — D0200-001002 ..... 140
- Fuel Filter — D0200-010003 ..... 147
- Drain Piping — D0200-011005 ..... 148


## ELECTRICAL SYSTEM


Battery, With Large Capacity Battery, Wet Type ..... (X21-0957100)

E0100-002001 ..... 150

Electric Wiring ..... (X21-1134751)

- Starting Harness — E0200-002001 ..... 151
- Main Harness (1/3) — E0200-002002 ..... 152
- Main Harness (2/3) — E0200-002003 ..... 154
- Main Harness (3/3) — E0200-002004 ..... 156
- Battery Case Side — E0200-002005 ..... 158

https://truckmanualshub.com/

Additional Working Lamp, Front Guard ..... (X21-1172570)
E0310-001001 .....159
Additional Working Lamp . ..... (X21-1338690)
E0310-003001 .....160
Additional Working Lamp,
Top And Front Guard,
Demolition Specification ..... (X21-1338700)
E0310-004001 .....161
Additional Rear Working Lamp,
Mounted On Counterweight ..... (X21-1169371)
E0320-001001 .....162
Additional Rear Working Lamp . ..... (X21-1169372)
E0320-002001 .....163
Beacon Lamp . ..... (X21-1088762)
E0340-001001 .....164
Horn..... (X21-1134660)
E0410-001001 .....165
Travel Alarm ..... (X21-1138890)
E0420-001001 .....166
Rear View Camera Less, Less Camera ..... (X21-1322690)
E0450-008001 .....167

## HYDRAULIC SYSTEM

Hydraulic Tank..... (X21-1146670)
H0110-001001 .....169
Hydraulic Tank, 1-actuator ..... (X21-1146680)
H0110-002001 .....171
Main Control Valve ..... (X21-1149430)
Inner Parts (1/17) H0120-001001 .....173
Inner Parts (2/17) H0120-001002 .....174
Inner Parts (3/17) H0120-001003 .....175
Inner Parts (4/17) H0120-001004 .....176
Inner Parts (5/17) H0120-001005 .....177
Inner Parts (6/17) H0120-001006 .....178
Inner Parts (7/17) H0120-001007 .....179

Inner Parts (8/17) H0120-001008 .....180
Inner Parts (9/17) H0120-001009 .....181
Inner Parts (10/17) H0120-001010 .....182
Inner Parts (11/17) H0120-001011 .....183
Inner Parts (12/17) H0120-001012 .....184
Inner Parts (13/17) H0120-001013 .....185
Inner Parts (14/17) H0120-001014 .....187
Inner Parts (15/17) H0120-001015 .....188
Inner Parts (16/17) H0120-001016 .....189
Inner Parts (17/17) H0120-001017 .....190
Connecting Parts (1/2) H0120-001018 .....191
Connecting Parts (2/2) H0120-001019 .....192
Valve Bracket And Sensor H0120-001020 .....193
Main Control Valve, 1-actuator ..... (X21-1149540)
Inner Parts (1/21) H0120-002001 .....194
Inner Parts (2/21) H0120-002002 .....195
Inner Parts (3/21) H0120-002003 .....196
Inner Parts (4/21) H0120-002004 .....197
Inner Parts (5/21) H0120-002005 .....198
Inner Parts (6/21) H0120-002006 .....199
Inner Parts (7/21) H0120-002007 .....201
Inner Parts (8/21) H0120-002008 .....202
Inner Parts (9/21) H0120-002009 .....203
Inner Parts (10/21) H0120-002010 .....204
Inner Parts (11/21) H0120-002011 .....205
Inner Parts (12/21) H0120-002012 .....206
Inner Parts (13/21) H0120-002013 .....207
Inner Parts (14/21) H0120-002014 .....209
Inner Parts (15/21) H0120-002015 .....210
Inner Parts (16/21) H0120-002016 .....211
Inner Parts (17/21) H0120-002017 .....212
Inner Parts (18/21) H0120-002018 .....213
Inner Parts (19/21) H0120-002019 .....214

Inner Parts (20/21) H0120-002020 .....215
Inner Parts (21/21) H0120-002021 .....216
Connecting Parts (1/2) H0120-002022 .....217
Connecting Parts (2/2) H0120-002023 .....218
Valve Bracket And Sensor H0120-002024 .....219
Main Control Valve, Service Valve..... (X21-1171460)
Inner Parts (1/21) H0120-002001 .....271
Inner Parts (2/21) H0120-002002 .....195
Inner Parts (3/21) H0120-002003 .....196
Inner Parts (4/21) H0120-002004 .....197
Inner Parts (5/21) H0120-002005 .....198
Inner Parts (6/21) H0120-002006 .....199
Inner Parts (7/21) H0120-002007 .....201
Inner Parts (8/21) H0120-002008 .....202
Inner Parts (9/21) H0120-002009 .....203
Inner Parts (10/21) H0120-002010 .....204
Inner Parts (11/21) H0120-002011 .....205
Inner Parts (12/21) H0120-002012 .....206
Inner Parts (13/21) H0120-002013 .....207
Inner Parts (14/21) H0120-002014 .....209
Inner Parts (15/21) H0120-002015 .....210
Inner Parts (16/21) H0120-002016 .....211
Inner Parts (17/21) H0120-002017 .....212
Inner Parts (18/21) H0120-002018 .....213
Inner Parts (19/21) H0120-002019 .....214
Inner Parts (20/21) H0120-002020 .....215
Inner Parts (21/21) H0120-002021 .....216
Connecting Parts (1/2) H0120-004022 .....220
Connecting Parts (2/2) H0120-004023 .....221
Valve Bracket And Sensor H0120-002024 .....219
Main Control Valve, 2-actuator ..... (X21-1171870)
Inner Parts (1/23) H0120-002001 .....194
Inner Parts (2/23) H0120-002002 .....195

https://truckmanualshub.com/

Inner Parts (3/23) H0120-002003 .....196
Inner Parts (4/23) H0120-002004 .....197
Inner Parts (5/23) H0120-008005 .....222
Inner Parts (6/23) H0120-002006 .....199
Inner Parts (7/23) H0120-008007 .....223
Inner Parts (8/23) H0120-008008 .....224
Inner Parts (9/23) H0120-008009 .....225
Inner Parts (10/23) H0120-002010 .....204
Inner Parts (11/23) H0120-008011 .....226
Inner Parts (12/23) H0120-002012 .....206
Inner Parts (13/23) H0120-002013 .....207
Inner Parts (14/23) H0120-002014 .....209
Inner Parts (15/23) H0120-002015 .....210
Inner Parts (16/23) H0120-002016 .....211
Inner Parts (17/23) H0120-008017 .....227
Inner Parts (18/23) H0120-008018 .....228
Inner Parts (19/23) H0120-008019 .....229
Inner Parts (20/23) H0120-008020 .....230
Inner Parts (21/23) H0120-008021 .....231
Inner Parts (22/23) H0120-008022 .....232
Inner Parts (23/23) H0120-002021 .....216
Connecting Parts (1/2) H0120-008024 .....233
Connecting Parts (2/2) H0120-008025 .....234
Valve Bracket And Sensor H0120-002024 .....219
Main Piston Pump .....(708-2L-00501)
Inner Parts (1/11) H0210-001001 .....235
Inner Parts (2/11) H0210-001002 .....236
Inner Parts (3/11) H0210-001003 .....237
Inner Parts (4/11) H0210-001004 .....238
Inner Parts (5/11) H0210-001005 .....239
Inner Parts (6/11) H0210-001006 .....240
Inner Parts (7/11) H0210-001007 .....241
Inner Parts (8/11) H0210-001008 .....242

Inner Parts (9/11) H0210-001009 .....243
Inner Parts (10/11) H0210-001010 .....244
Inner Parts (11/11) H0210-001011 .....245
Main Piston Pump ..... (X21-1147040)
H0210-002001 .....246
Main Piston Pump, 1-actuator ..... (X21-1147050)
H0210-003001 .....247
Suction Piping..... (X21-1144000)
H0311-001001 .....248
Delivery Piping..... (X21-1146661)
H0312-002001 .....249
Delivery Piping,
For Fuel Refill Pump,
For Webasto Heater. ..... (X21-1159280)
H0312-005001 .....250
Delivery Piping, With In-line Filter..... (X21-1149321)
H0312-004001 .....251
Oil Cooler Piping..... (X21-1144480)
H0320-001001 .....252
Return Piping..... (X21-1144520)
H0330-001001 .....253
Return Piping, 1-actuator..... (X21-1144550)
H0330-002001 .....254
Drain Piping ..... (X21-1146380)
H0340-001001 .....255
Boom Piping ..... (X21-1144220)
H1210-001001 .....256
Arm And Bucket Piping..... (X21-1144320)
H1220-001001 .....257
Arm And Bucket Piping,
With Arm Holding Valve..... (X21-1150100)
H1220-002001 .....258
Hydraulic drift prevention valve, Arm..... (X21-0848610)
H1240-001001 .....259

https://truckmanualshub.com/


Mounting Parts H1240-001002 .....337

Actuator Piping, For Breaker Adapter ..... (X21-114827B)

Main Piping, LHS H1270-009001 .....261

Shift Pattern Selector Valve H1270-009002 .....262

Main Piping, RHS H1270-009003 .....263

Return Piping H1270-009004 .....265

Actuator Piping, 1-actuator..... (X21-1148270)

Main Piping, LHS H1270-009001 .....261

Shift Pattern Selector Valve H1270-009002 .....262

Main Piping, RHS H1270-008003 .....267

Return Piping H1270-009004 .....265

Additional Actuator Piping, 2-actuator ..... (X21-1171800)

H1272-001001 .....269

Travel Piping ..... (X21-1144390)

H1310-002001 .....270

Swing Piping . ..... (X21-1143930)

H1340-001001 .....271

LS Piping. ..... (X21-1144170)

H1810-001001 .....272

LS Piping, 1-actuator. ..... (X21-1144190)

H1810-002001 .....273

Solenoid Valve Piping ..... (X21-1148030)

Inner Parts, Solenoid Valve H1831-001001 .....274

Solenoid Valve H1831-001002 .....275

Solenoid Valve Piping H1831-001003 .....276

Solenoid Valve Piping, 1-actuator ..... (X21-1148140)

Inner Parts, Solenoid Valve H1831-002001 .....277

Solenoid Valve H1831-002002 .....278

Solenoid Valve Piping H1831-002003 .....279

Solenoid Valve Piping, 2-actuator ..... (X21-1171810)

Inner Parts, Solenoid Valve H1831-002001 .....277

Solenoid Valve H1831-002002 .....278

Solenoid Valve Piping H1831-003003 .....280

https://truckmanualshub.com/

Pressure Switch Block..... (X21-1144261)
H1833-002001 .....281
Proportional Pressure
Control (PPC) Valve Piping . ..... (X21-1148750)
H1840-004001 .....282

## FRAME AND ITS RELATED PARTS

Revolving Frame ..... (X21-1145891)
J1110-002001.....284
Revolving Frame, With Deck Guard..... (X21-1152381)
J1110-005001.....286
Revolving Frame, For Fuel Refill Pump..... (X21-1247961)
J1110-007001.....287
Revolving Frame, For Fuel Refill
Pump, With Deck Guard ..... (X21-1247971)
J1110-009001.....290
Revolving Frame, With Webasto Heater ..... (X21-1400090)
J1110-015001.....292
Boom Foot Pin..... (X21-0839480)
J1310-002001 .....294

## OPERATOR'S COMPARTMENT AND CONTROL SYSTEM

Operator's Seat, Suspension Type..... (X21-1045171)
(1/2) K0110-001001.....296
(2/2) K0110-001002.....297
Seat Belt, 78mm Width..... (X21-1145200)
K0160-002001 .....298
Seat Belt, 78mm Width, Non-Cinching..... (X21-1145210)
K0160-003001 .....299
Head Guard..... (X21-1045251)
K0220-001001 .....300
Front Guard, Full, Level 2..... (X21-1045261)
K0230-001001 .....301
Front Guard, Half..... (X21-1077310)
K0230-002001 .....302

https://truckmanualshub.com/

Front Guard, Full, Level 1 ..... (X21-1077321)
K0230-003001 .....303
Floor Mat ..... (X21-1148850)
K0310-001001 .....304
Floor Mat, 1-actuator ..... (X21-1148870)
K0310-002001 .....305
Floor Mat, 2-actuator ..... (X21-1170350)
K0310-003001 .....306
Rain Visor ..... (X21-1045271)
K0320-001001 .....307
Sun Visor. ..... (X21-1045280)
K0330-001001A.....308
Window Washer . ..... (X21-1143300)
K0350-001001 .....309
Air Conditioner ..... (X21-1146350)
K0700-001001 .....310
Fire Extinguisher, Russian ..... (X21-0920541)
K0830-004001 .....311
First Aid Box. ..... (X21-1284890)
K0840-001001 .....313
Thermos Bottle. ..... (X21-1283910)
K0850-001001 .....314

Floor, Foot Rest, RHS . K1110-130029.....345
Floor, Air Conditioner Hose K1110-130047.....340
Floor, Heater Hose K1110-130048.....341
Floor, P, T Block And Seal . K1110-130052.....370
Floor, P, T Block And Seal, For 1-Attachment K1110-130052.....370

Cab, With EOPS Cab, Vandalism Protection, With Webasto Heater ..... (X21-1910242)

Cab Body And Window. K1110-130001.....376
Floor, Foot Rest, RHS . K1110-130029.....345
Floor, P, T Block And Seal, For 1-Attachment K1110-131052.....375

https://truckmanualshub.com/

K1730-001001 .....378

## GUARDS AND COVERS

Hood, Without Dustproof Net..... (X21-1148501)
M1110-002001 .....380
Hood, With Dustproof Net..... (X21-114850C)
Hood M1110-004001 .....381
Net M1110-004002 .....382
Machine Cab Frame,
With Webasto Heater,
With Pre-Creaner . ..... (X21-127821A)
M1120-012001 .....383
Machine Cab Frame,
With Webasto Heater ..... (X21-1400201)
M1120-006001 .....384
Side Cover..... (X21-1148283)
M1130-010001 .....385
Side Cover, RHS ..... (X21-1149071)
M1140-002001 .....387
Machine Cab Partition,
With Air Conditioner ..... (X21-1147281)
LHS M1150-002001 .....388
Middle M1150-002002 .....389
Valve and Muffler Side M1150-002003 .....390
Machine Cab Partition,
With Webasto Heater ..... (X21-1400220)
LHS M1150-008001 .....391
Middle M1150-008002 .....392
Valve and Muffler Side M1150-008003 .....393
Machine Cab Cover..... (X21-1147311)
Cover M1210-002001 .....394
Machine Cab Cover,
With Pre-cleaner ..... (X21-1173951)
Cover M1210-006001 .....396
Pre-Cleaner M1210-006002 .....398

https://truckmanualshub.com/

Machine Cab Cover, 2-actuator ..... (X21-1169391)
M1210-004001 .....399
Battery Case . ..... (X21-1147322)
M1220-001001 .....401
Battery Case, For Fuel Refill Pump ..... (X21-1156491)
M1220-003001 .....402
Handrail. ..... (X21-1172560)
M1310-001001 .....406
Rearview Mirror, LHS. ..... (X21-1167361)
M1410-004001 .....404
Rearview Mirror, RHS . ..... (X21-1167371)
M1420-008001 .....405
Rear View Mirror, Counter Weight ..... (X21-116738B)
M1430-003001 .....406
Counterweight, 3730kg, 1-camera ..... (X21-1147761)
M1510-002001 .....407
Counterweight Mounts . ..... (X21-1148630)
M1520-001001 .....408
Under Cover,
With Water Separator
And Additional Fuel Filter . ..... (X21-123838B)
M1810-006001 .....409
Under Cover, For Fuel Refill Pump ..... (X21-1239231)
M1810-007001 .....411
Under Cover, With Webasto Heater ..... (X21-1450020)
M1810-013001 .....413

## SWING CIRCLE AND ITS RELATED PARTS

Swing Piping . ..... (X21-0628931)
N1110-001001 .....416
Swing Piping, Extreme Cold
Area Arrangement (-50deg C) ..... (X21-1268260)
N1110-002001 .....417
Swing Machinery ..... (X21-1145000)
Inner Parts, Swing Motor (1/3) N1210-002001 .....418

https://truckmanualshub.com/

Inner Parts, Swing Motor (2/3) N1210-002002 .....419
Inner Parts, Swing Motor (3/3) N1210-002003 .....420
Mounts N1210-002004 .....421
Drain Piping N1210-002005 .....422
Swing Machinery, Extreme Cold Area Arrangement (-50deg C) ..... (X21-1223570)
Inner Parts, Swing Motor (1/3) N1210-003001 .....423
Inner Parts, Swing Motor (2/3) N1210-004002 .....424
Inner Parts, Swing Motor (3/3) N1210-004003 .....425
Mounts N1210-004004 .....426
Drain Piping N1210-004005 .....427
Swivel Joint..... (X21-1146540)
Swivel Joint N1310-002001 .....428
Connecting Parts N1310-002002 .....429

## TRAVEL SYSTEM AND ITS RELATED PARTS

Travel Piping..... (X21-0816420)
P1120-001001.....431
Travel Piping, With Webasto Heater ..... (X21-1166450)
P1120-003001.....432
Travel Piping, LC ..... (X21-2060640)
P1120-002001.....794
Travel Piping, With Webasto Heater, LC ..... (X21-2081260)
P1120-004001.....432
Final Drive ..... (X21-1146000)
Inner Parts, Travel Motor (1/2) P1210-002001 .....435
Inner Parts, Travel Motor (2/2) P1210-002002 .....436
Final Drive P1210-002003 .....437
Final Drive, Extreme Cold Area Arrangement (-50deg C) ..... (X21-1228730)
Inner Parts, Travel Motor (1/2) P1210-003001 .....439
Inner Parts, Travel Motor (2/2) P1210-003002 .....440
Final Drive P1210-003003 .....441

https://truckmanualshub.com/

## UNDERCARRIAGE

Front Idler And Idler Cushion..... (X21-1146470)

Front Idler R0110-001001 .....444

Idler Cushion R0110-001002 .....445

Front Idler And Idler Cushion, LC. ..... (X21-11464780)

Front Idler R0110-001001 .....444

Idler Cushion, LC R0110-002002 .....446

Front Idler And Idler Cushion, Extreme
Cold Area Arrangement (-50deg C) ..... (X21-1278450)

Front Idler R0110-006001 .....447

Idler Cushion R0110-001002 .....445

Front Idler And Idler Cushion, Extreme
Cold Area Arrangement (-50deg C), LC ..... (X21-0990960)

Front Idler R0110-001001 .....444

Track Roller ..... (X21-0389721)

R0200-001001 .....448

Track Roller, Extreme
Cold Area Arrangement (-50deg C)..... (X21-0765751)

R0200-002001 .....449

Carrier Roller ..... (X21-1077371)

R0300-001001 .....452

Carrier Roller, Extreme
Cold Area Arrangement (-50deg C)..... (X21-1283470)

R0300-002001 .....453

Track Shoe Assembly,
Swamp Shoe, 860mm Width..... (X21-0726370)

R0500-001001 .....454

Track Shoe Assembly,
Triple Shoe Grouser, 500mm Width ..... (X21-0815760)

R0500-004001 .....455

Track Shoe Assembly,
Triple Shoe Grouser, 600mm Width ..... (X21-0815770)

R0500-005001 .....456

Track Shoe Assembly,
Triple Shoe Grouser, 800mm Width ..... (X21-0815790)

R0500-007001 .....457

https://truckmanualshub.com/

Track Roller, LC ..... (X21-0389741)
R0200-00301 .....449

Track Roller, Extreme Cold Area
Arrangement (-50deg C), LC ..... (X21-0951380)
R0200-00301 .....449

Track Shoe Assembly, Triple Shoe
Grouser, 700mm Width..... (X21-0815780)
R0500-006001 .....458

Track Link Assembly ..... (20Y-32-00300)
R0501-001001 .....465

Track Frame, With Under Cover. ..... (X21-1149011)
R1100-010001 .....466

Track Frame, With Under Cover Track
Frame With Under Cover, LC ..... (X21-1149031)
R1100-008001 .....467

Track Frame Under Cover ..... (X21-0000950)
R1140-001001 .....468

Track Roller Guard,
With Track Roller Guard ..... (X21-0793780)
R1200-001001 .....469

Track Roller Guard,
With Full Length Track Roller Guard ..... (X21-0815130)
R1200-002001 .....470

## WORK EQUIPMENT

Track Shoe Assembly,
Swamp Shoe, 860mm Width, LC ..... (X21-0726440)
R0500-011001 .....465

Track Shoe Assembly,
Triple Shoe Grouser, 600mm Width, LC ..... (X21-0815810)
R0500-014001 .....465

Track Shoe Assembly,
Triple Shoe Grouser, 800mm Width, LC ..... (X21-0815830)
R0500-016001 .....465

Track Shoe Assembly,
Triple Shoe Grouser, 900mm Width, LC ..... (X21-0815840)
R0500-017001 .....465

Track Shoe Assembly,
Triple Shoe Grouser, 700mm Width LC ..... (X21-0815820)
R0500-015001 .....465

Track Link Assembly, Supply Parts, LC ..... (20Y-32-00310)
R0501-011001 .....465

Track Roller Guard,
With Track Roller Guard, LC ..... (X21-0815140)
R1200-011001 .....470

Track Roller Guard, With Full
Length Roller Guard, LC ..... (X21-0815120)
R1200-012001 .....470

Boom, 5.7m, Heavy Duty,
100 Hours Greasing Type ..... (X21-114990C)
Boom T1110-005001 .....480
Top Pin and Bottom Pin T1110-005002 .....481
Arm and Bucket Cylinder Piping T1110-004003 .....474
Lubricating Piping T1110-004004 .....476
Attachment Plug T1110-004005 .....477
Working Lamp T1110-004006 .....478

Boom, 5.7m, Heavy Duty, 100 Hours
Greasing Type, With Webasto Heater ..... (X21-128209A)
Boom T1110-013001 .....482
Top Pin and Bottom Pin T1110-005002 .....481
Arm and Bucket Cylinder Piping T1110-013003 .....483
Lubricating Piping T1110-004004 .....476
Attachment Plug T1110-004005 .....477
Working Lamp T1110-013006 .....485

Boom, 5.7m, Heavy Duty, 100 Hours
Greasing Type, 1-actuator ..... (X21-114985C)
Boom T1110-005001 .....480
Top Pin and Bottom Pin T1110-005002 .....481
Arm and Bucket Cylinder Piping T1110-004003 .....474

Lubricating Piping T1110-004004 .....476
Additional Piping T1110-002005 .....479
Working Lamp T1110-004006 .....478
Boom, 5.7m, Heavy Duty,
100 Hours Greasing Type,
1-actuator, With Webasto Heater ..... (X21-114985E)
Boom T1110-013001 .....480
Top Pin and Bottom Pin T1110-005002 .....481
Lubricating Piping T1110-004004 .....476
Additional Piping T1110-002005 .....479
Working Lamp T1110-013006 .....478
Boom Cylinder, 100 Hours Greasing Type ..... (X21-114764A)
Inner Parts, Boom Swing Cylinder T1120-002001 .....487
Inner Parts, Boom Cylinder T1120-002002 .....489
Fitting T1120-001003 .....486
Boom Cylinder, With Webasto Heater ..... (X21-1282150)
Inner Parts, Boom Swing Cylinder T1120-006001 .....491
Inner Parts, Boom Cylinder T1120-006002 .....493
Fitting T1120-001003 .....486
Boom Cylinder Head Pin,
100 Hours Greasing Type..... (X21-114522B)
T1125-002001 .....495
Arm Cylinder, 100 Hours Greasing Type ..... (X21-114767A)
T1140-002001 .....496
Arm Cylinder, With Webasto Heater . ..... (X21-1282160)
T1140-007001 .....498
Parts For Less Arm . ..... X21-0566910)
T1190-002001 .....500
Arm, 2.9m, 1-actuator,
100 Hours Greasing Type..... (X21-114953B)
Arm T1200-011001 .....505
Bucket Cylinder T1200-011002 .....506
Bucket Link T1200-013003.....502
Additional Piping T1200-013005.....503

Arm, 2.9m, 1-actuator,
100 Hours Greasing Type,
With Webasto Heater. ..... (X21-14953G)

Bucket Cylinder T1200-029002.....506

Bucket Link T1200-013003.....502

Additional Pipin,
With Webasto Heater T1200-014005.....503

Arm, 2.9m, Heavy Duty,
100 Hours Greasing Type ..... (X21-114921B)

Arm T1200-008001.....507

Bucket Cylinder T1200-011002.....506

Bucket Link T1200-013003.....502

Bucket Cylinder Hose T1200-003004.....501

Arm, 2.9m, 100 Hours Greasing Type,
With Webasto Heater ..... (X21-1282170)

Arm T1200-029001.....508

Bucket Cylinder T1200-029002.....509

Bucket Link T1200-013003.....502

Bucket Cylinder Hose T1200-029004.....511

Arm, 2.4m, 100 Hours Greasing Type ..... (X21-117155B)

Arm T1200-016001.....516

Bucket Cylinder T1200-011002.....506

Bucket Link T1200-015003.....514

Bucket Cylinder Hose T1200-015004.....515

Arm, 2.4m, 1-actuator,
100 Hours Greasing Type..... (X21-117240B)

Arm T1200-021001.....516

Bucket Cylinder T1200-011002.....506

Bucket Link T1200-013003.....502

Bucket Cylinder Hose T1200-019004.....518

Additional Piping T1200-019005.....519

Parts For Less Bucket ..... (X21-0332411)

T1290-002001.....521

Bucket, 0.5m³, 750mm Width,
Horizontal Pin Type. ..... (X21-0002270)
T1510-004001.....522
Spacer T1510-004002.....523
Bucket, 0.8m³, 1150mm Width,
Horizontal Pin Type ..... (X21-1172580)
T1510-021001.....524
Bucket, 0.8m³, 1150mm Width,
Horizontal Pin Type, Strengthened ..... (X21-1150030)
T1510-020001.....525
Bucket, 0.8m³, 1150mm Width,
Horizontal Pin Type, Lifting Hook. ..... (X21-1172620)
T1510-025001.....526
Bucket, 0.8m³, 1150mm Width,
Horizontal Pin Type, Lifting Hook,
Strengthened ..... (X21-1172630)
T1510-026001.....527
Bucket, 0.9m³, 1200mm Width,
Horizontal Pin Type ..... (X21-1172600)
T1510-023001.....528
Bucket, 0.9m³, 1200mm Width,
Horizontal Pin Type, Lifting Hook. ..... (X21-1172660)
T1510-028001.....529
Bucket, 1.0m³, 1330mm Width,
Horizontal Pin Type ..... (X21-0310872)
T1510-014001.....530
Bucket, 1.0m³, 1330mm Width,
Horizontal Pin Type, Lifting Hook. ..... (X21-0840040)
T1510-016001.....531
Hook T1510-016002.....532
Bucket, 1.17M³, 1450mm Width,
Horizontal Pin Type ..... (X21-0310761)
T1510-012001.....533
Bucket, 1.17M³, 1450mm Width,
Horizontal Pin Type, Lifting Hook ..... (X21-0840060)
T1510-017001.....534
Hook T1510-016002.....532

https://truckmanualshub.com/

Clamshell Bucket, 0.6m$^3$, Clamshell Type ..... (X21-0000430)
T1510-002001.....535
Inner Parts, Blade Angle Cylinder T1510-002002.....537
Ripper Bucket, 0.61m$^3$, 950mm Width..... (X21-0006120)
T1510-005001.....539
Spacer T1510-004002.....523
Slope Finishing Bucket,
Slope Finishing Type ..... (X21-0006130)
T1510-006001.....540
Spacer T1510-004002.....523
Ditch Cleaning Bucket, 0.8m$^3$,
1800mm Width,
Ditch Cleaning Type. ..... (X21-0007160)
T1510-008001.....541
Ripper, Single Shank Type ..... (X21-0007170)
T1510-009001.....542
Spacer T1510-004002.....523
Ripper, Three Shank Type ..... (X21-0007180)
T1510-010001.....543
Spacer T1510-004002.....523
Trapezoidal Bucket, Trapezoidal Type ..... (X21-0007130)
T1510-007001.....544
Spacer T1510-004002.....523
Breaker Adapter, For Nippon Pneumatic..... (X21-1179940)
Accumulator Related Part T1920-006001.....545
Breaker Adapter, For KRUPP..... (X21-1179930)
Accumulator Related Part T1920-006001.....545
Adapter T1920-005002.....546

## MARKS AND PLATES

Marks And Name Plates,
Russian, Pictorial Type ..... (X21-1209230)
U0100-010001 .....548

https://truckmanualshub.com/

Lubrication Chart, English,
100 Hours Greasing Type ..... (X21-1172110)
U0110-003001 .....549

Caution Plates, Russian ..... (X21-1209550)
U0120-011001 .....550

Komatsu Logo, Boom
And Counter Weight ..... (X21-0811981)
U0150-002001 .....551

Coolant Decal, Russian. ..... (X21-1392240)
U0202-008001 .....552

Caution Plates, Arm ..... X21-1134080)
U0510-002001 .....553

Caution Plates, Top Guard, Russian ..... (X21-117195G)
U0520-010001 .....554

Caution Plates, Top And Front
Guard, Russian..... (X21-117197G)
U0520-028001 .....555

Caution Plates, Front Guard, Russian..... (X21-117196G)
U0520-019001 .....556

Service Instruction, Russian ..... (X21-0369361)
U0550-001001 .....557

Caution Plates, 2-actuator ..... (X21-0568970)
U0580-004001 .....558

Caution Plates, 1-actuator ..... (X21-0568650)
U0580-003001 .....559

Caution Plates, 12volt Power Source ..... (X21-0786551)
U0710-011001 .....560

## AUXILIARY PARTS AND TOOL

Spare Parts . ..... (X21-1181531)
V0100-001001 .....562

Spare Parts, Shield Alternator. ..... (X21-1213391)
V0100-002001 .....563

Cap And Overall ..... (X21-0291910)
V0200-001001 .....564

https://truckmanualshub.com/

General Tool Set . ..... (X21-1255070)
V0300-001001 .....565

## OTHER EQUIPMENT

Webasto Heater ..... (X21-1400821)
Hose W1111-001001 .....567
Cover W1111-001002 .....568
Heater W1111-001003 .....568
Webasto Heater ..... (X21-1400871)
Hose And Bracket W1112-001001 .....570
Heater Hose W1112-001002 .....571
Duct W1112-001003 .....573
Fuel Refill Pump ..... (X21-1231700)
Inner Parts, Pump W1113-001001 .....574
Related Parts W1113-001002 .....575
Step ..... (X21-1152390)
W1114-001001 .....576

## FIELD REPAIR SERVICE PARTS


Service Kit Parts. ..... (Y99-0000002)
KIT

# ENGINE CYLINDER HEAD AND ITS RELATED PARTS

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. ALA10-001001 Lifting Bracket Mounting

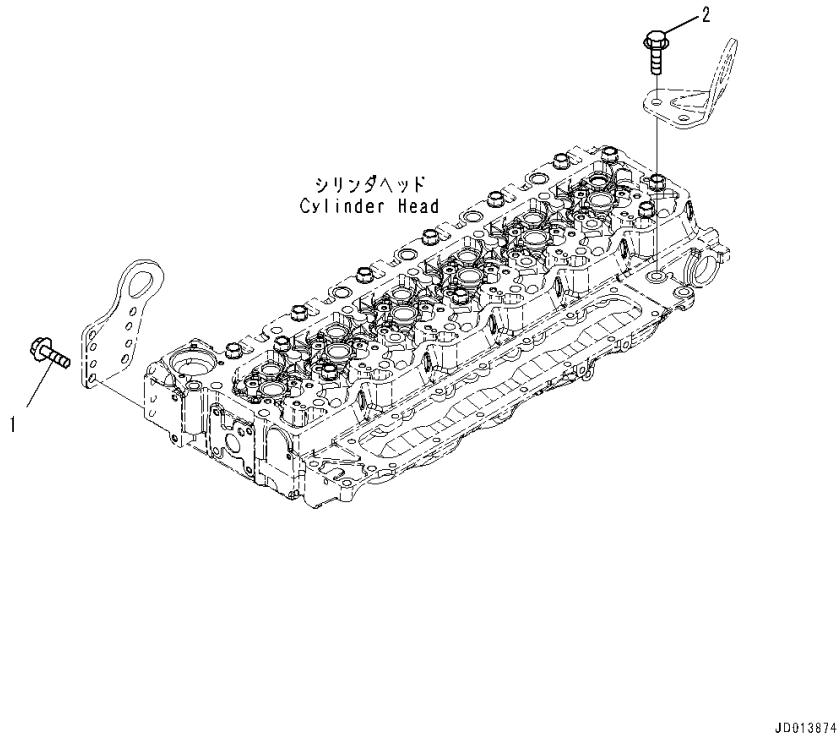


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6735-71-3220 | Bolt | 4 | 26541137- |
| 2 | | 6754-11-4130 | Screw | 2 | 26541137- |

https://truckmanualshub.com/


# FIG. ALA00-001001 Lifting Bracket

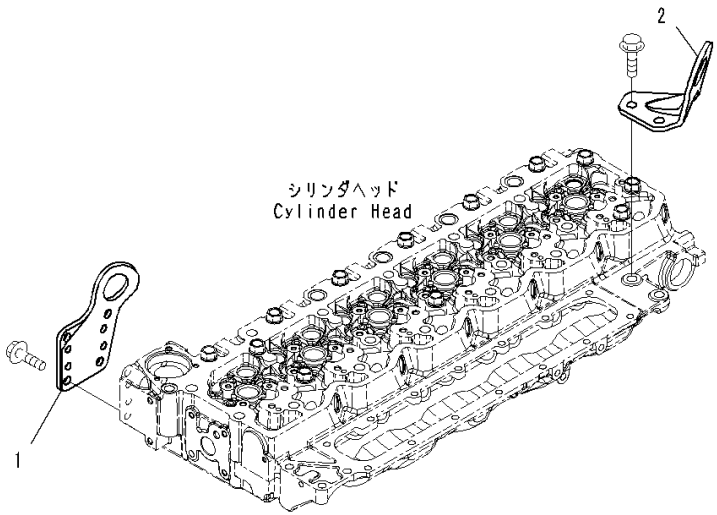


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-11-1710 | Bracket | 1 | 26541137- |
| 2 | | 6754-11-1960 | Bracket | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AVC00-001001 Head Cover

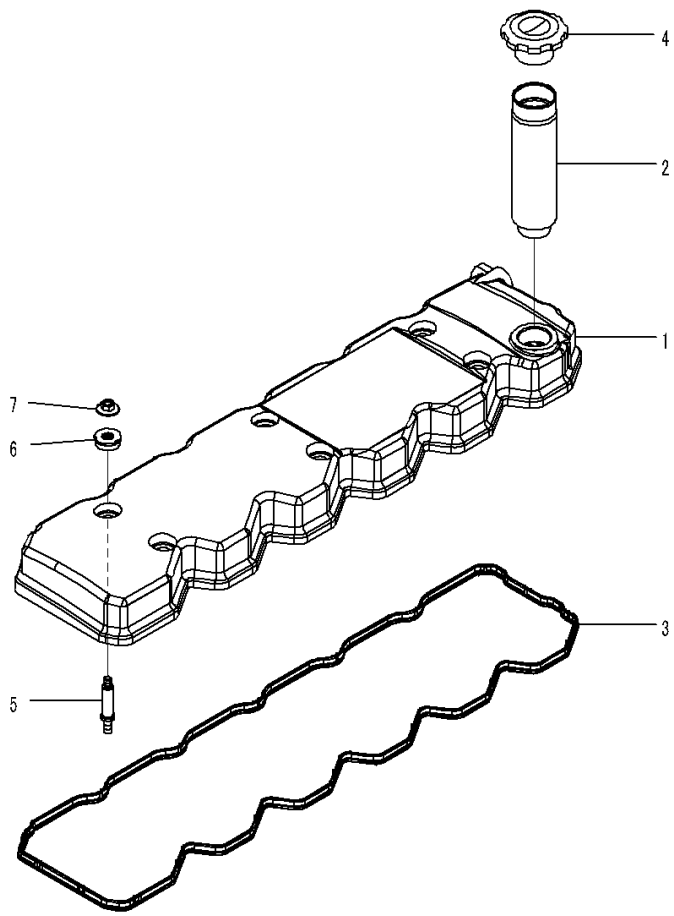


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-11-8100 | Cover Assembly | 1 | 26541137- |
| 1 | | 6754-11-8110 | • Cover | 1 | 26541137- |
| 2 | | 6754-11-8140 | • Filler, Oil | 1 | 26541137- |
| 3 | | 6754-11-8180 | Packing, head cover | 1 | 26541137- |
| 4 | | 6130-12-8610 | Cap | 1 | 26541137- |
| 5 | | 6754-11-8150 | Stud | 6 | 26541137- |
| 6 | | 6754-11-8210 | Isolator, head cover | 6 | 26541137- |
| 7 | | 6754-11-8160 | Nut | 6 | 26541137- |

https://truckmanualshub.com/


# FIG. A1610-002001 Exhaust Muffler And Mounting Bracket, With Dustproof Net

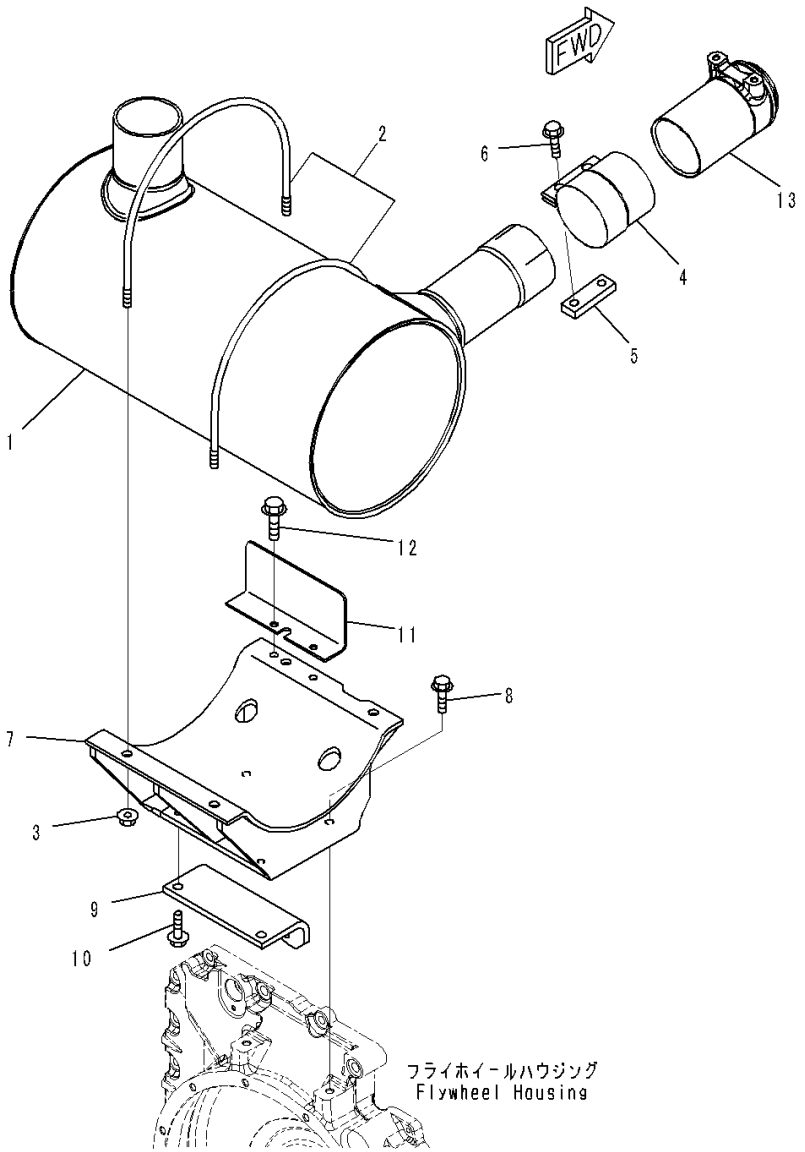


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-11-5330 | Muffler | 1 | 26541137- |
| 2 | | 6754-11-5940 | U-bolt | 2 | 26541137- |
| 3 | | 01594-01008 | Nut | 4 | 26541137- |
| 4 | | 6210-11-5232 | Clamp | 1 | 26541137- |
| 5 | | 6206-11-5850 | Plate | 1 | 26541137- |
| 6 | | 01435-01235 | Bolt | 2 | 26541137- |
| 7 | | 6754-11-5410 | Bracket | 1 | 26541137- |
| 8 | | 01435-01030 | Bolt | 2 | 26541137- |
| 9 | | 6754-11-5420 | Bracket | 1 | 26541137- |
| 10 | | 01435-01025 | Bolt | 2 | 26541137- |
| 11 | | 6754-71-9720 | Cover | 1 | 26541137- |
| 12 | | 01435-00820 | Bolt | 2 | 26541137- |
| 13 | | 6735-11-5611 | Tube | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. A1610-003001 Exhaust Muffler And Mounting Bracket

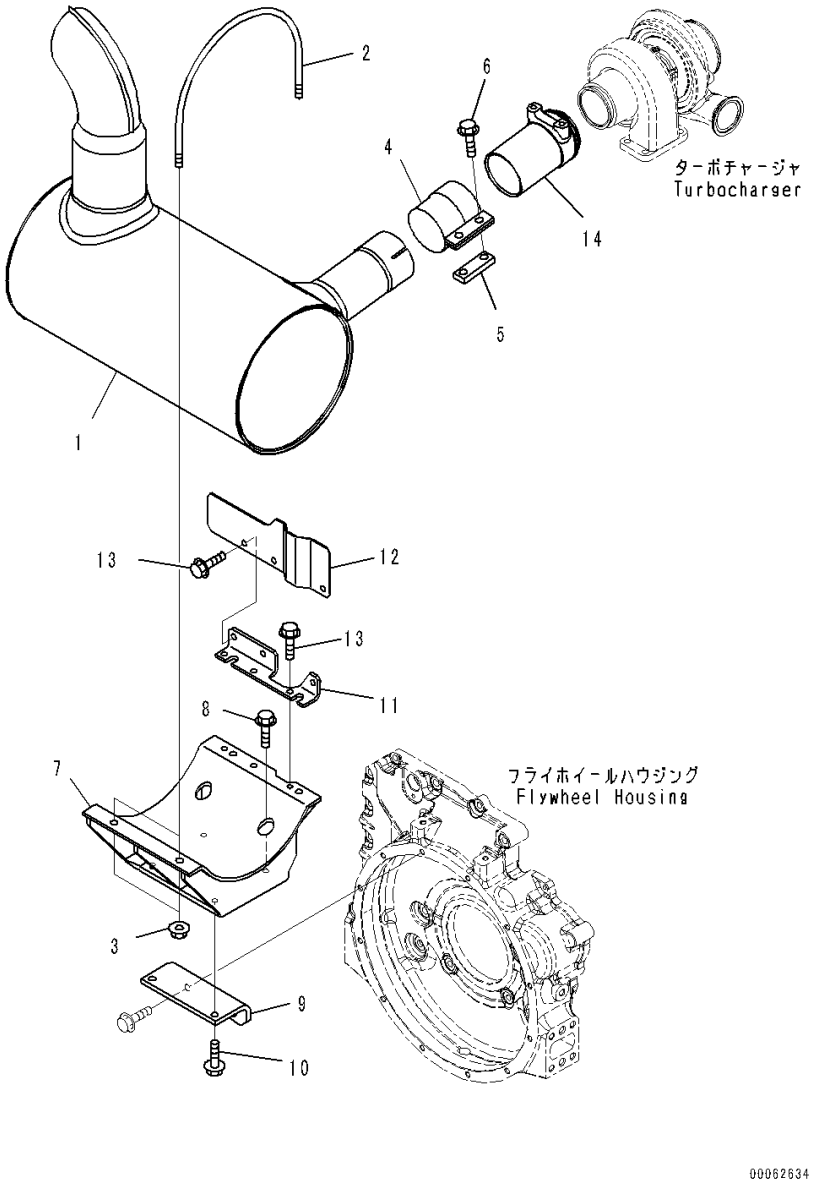


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-11-5340 | Muffler | 1 | 26541137- |
| 2 | | 6754-11-5940 | U-bolt | 2 | 26541137- |
| 3 | | 01594-01008 | Nut | 4 | 26541137- |
| 4 | | 6210-11-5232 | Clamp | 1 | 26541137- |
| 5 | | 6206-11-5850 | Plate | 1 | 26541137- |
| 6 | | 01435-01235 | Bolt | 2 | 26541137- |
| 7 | | 6754-11-5490 | Bracket | 1 | 26541137- |
| 8 | | 01435-01030 | Bolt | 2 | 26541137- |
| 9 | | 6754-11-5420 | Bracket | 1 | 26541137- |
| 10 | | 01435-01025 | Bolt | 2 | 26541137- |
| 11 | | 6754-71-9740 | Bracket | 1 | 26541137- |
| 12 | | 6754-71-9730 | Cover | 1 | 26541137- |
| 13 | | 01435-00820 | Bolt | 6 | 26541137- |
| 14 | | 6735-11-5611 | Tube | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. ABR00-001001 Breather And Hose

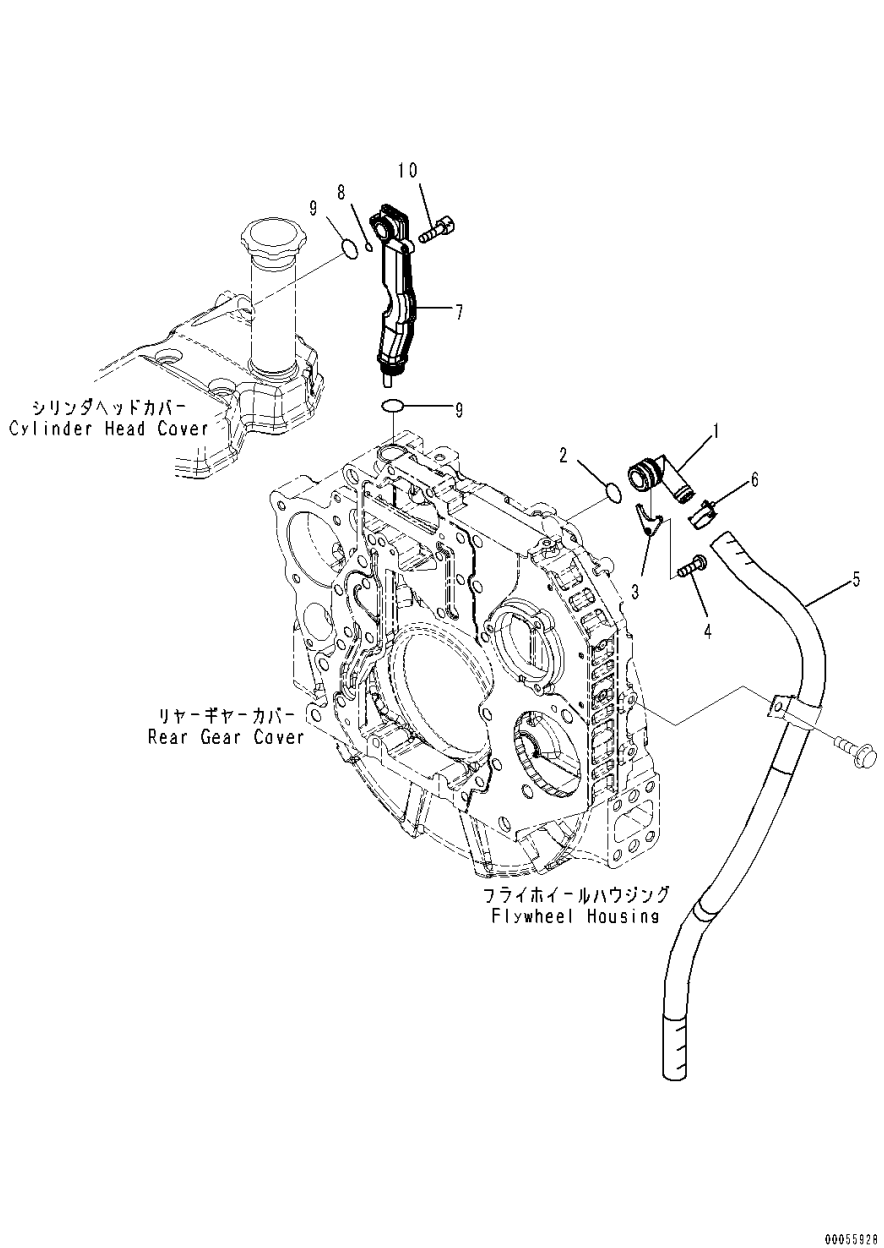


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-21-6140 | Breather | 1 | 26541137- |
| 2 | | 124-11-55H1 | O-ring | 1 | 26541137- |
| 3 | | 6754-21-6150 | Plate | 1 | 26541137- |
| 4 | | 6754-21-6160 | Bolt | 1 | 26541137- |
| 5 | | 6754-21-6170 | Hose | 1 | 26541137- |
| 6 | | 6754-21-6180 | Clamp | 1 | 26541137- |
| | | 6754-21-6100 | Tube Assembly | 1 | 26541137- |
| 7 | C1 | | • Tube | 1 | 26541137- |
| 8 | | 6754-21-6250 | • O-ring | 1 | 26541137- |
| 9 | | 6754-21-6240 | • O-ring | 2 | 26541137- |
| 10 | | 6754-21-6280 | Bolt | 2 | 26541137- |

https://truckmanualshub.com/


# FIG. AXS00-001001 Exhaust Connector Clamp

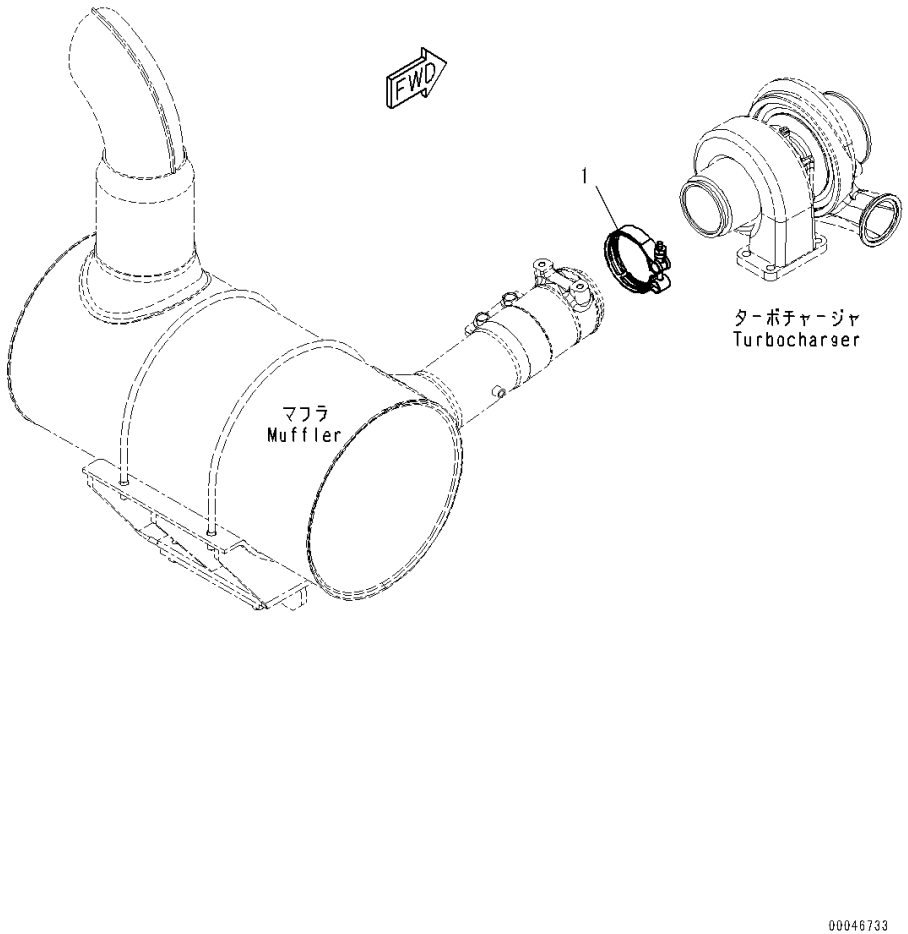


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6732-81-8220 | Clamp ..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. A1009-001001 Cylinder Head

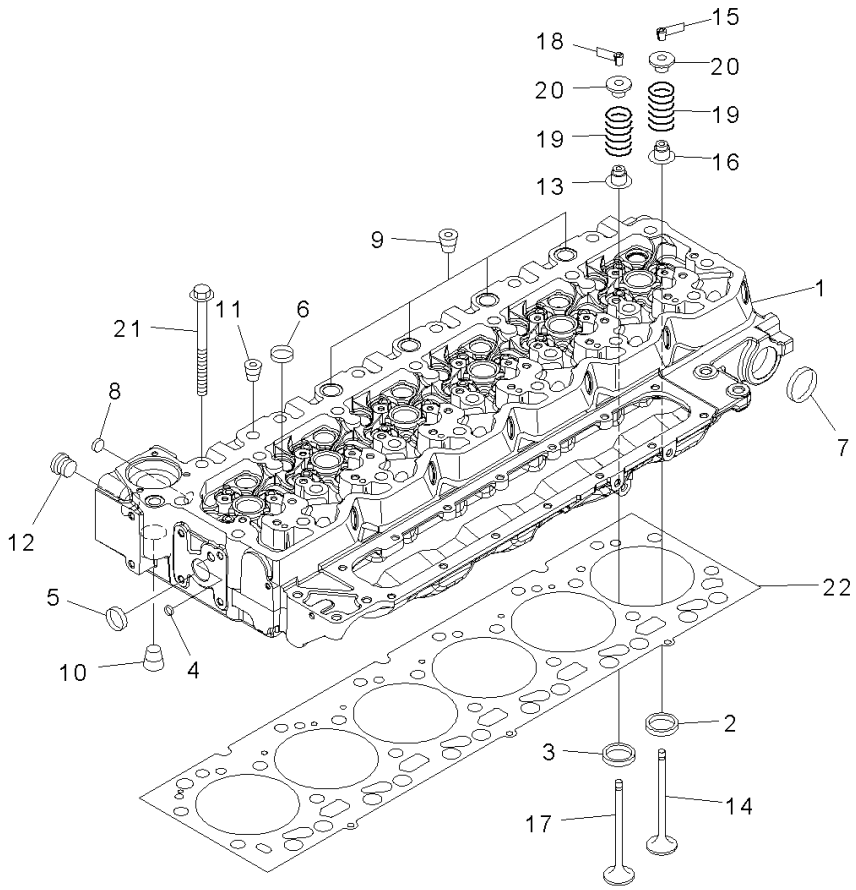


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-11-1211 | Cylinder Head Assembly | 1 | 26541137- |
| | C1 | | • Head Assembly, Cylinder | 1 | 26541137- |
| 1 | C1 | | •• Cylinder Head | 1 | 26541137- |
| 2 | C1 | | •• Insert, Intake | 12 | 26541137- |
| 3 | C1 | | •• Insert, Exhaust | 12 | 26541137- |
| 4 | | 6754-11-1150 | •• Plug | 7 | 26541137- |
| 5 | | 6732-21-1820 | •• Plug | 13 | 26541137- |
| 6 | | 6735-21-5530 | •• Plug | 11 | 26541137- |
| 7 | | 6744-11-1070 | •• Plug | 2 | 26541137- |
| 8 | | 6754-11-1160 | •• Plug | 2 | 26541137- |
| 9 | | 6732-11-1910 | • Plug | 4 | 26541137- |
| 10 | | 6732-11-1920 | • Plug | 3 | 26541137- |
| 11 | | 6732-61-2240 | • Plug | 1 | 26541137- |
| 12 | | 6216-14-6820 | • Plug Assembly | 1 | 26541137- |
| | | 6216-14-6860 | •• O-ring | 1 | 26541137- |
| 13 | | 6754-41-4540 | Seal | 12 | 26541137- |
| | | 6754-41-4100 | Valve Kit, Intake | 12 | 26541137- |
| 14 | C1 | | • Valve | 1 | 26541137- |
| 15 | | 6744-11-1020 | • Collet | 2 | 26541137- |
| 16 | | 6754-41-4540 | • Seal | 1 | 26541137- |
| | | 6754-41-4200 | Valve Kit, Exhaust | 12 | 26541137- |
| 17 | C1 | | • Valve | 1 | 26541137- |
| 18 | | 6744-11-1020 | • Collet | 2 | 26541137- |
| 19 | | 6754-41-4430 | Spring | 24 | 26541137- |
| 20 | | 6754-41-4510 | Retainer | 24 | 26541137- |
| 21 | | 6754-11-1610 | Bolt | 26 | 26541137- |
| 22 | | 6754-11-1811 | Gasket | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AIM00-001001 Air Intake Port Cover

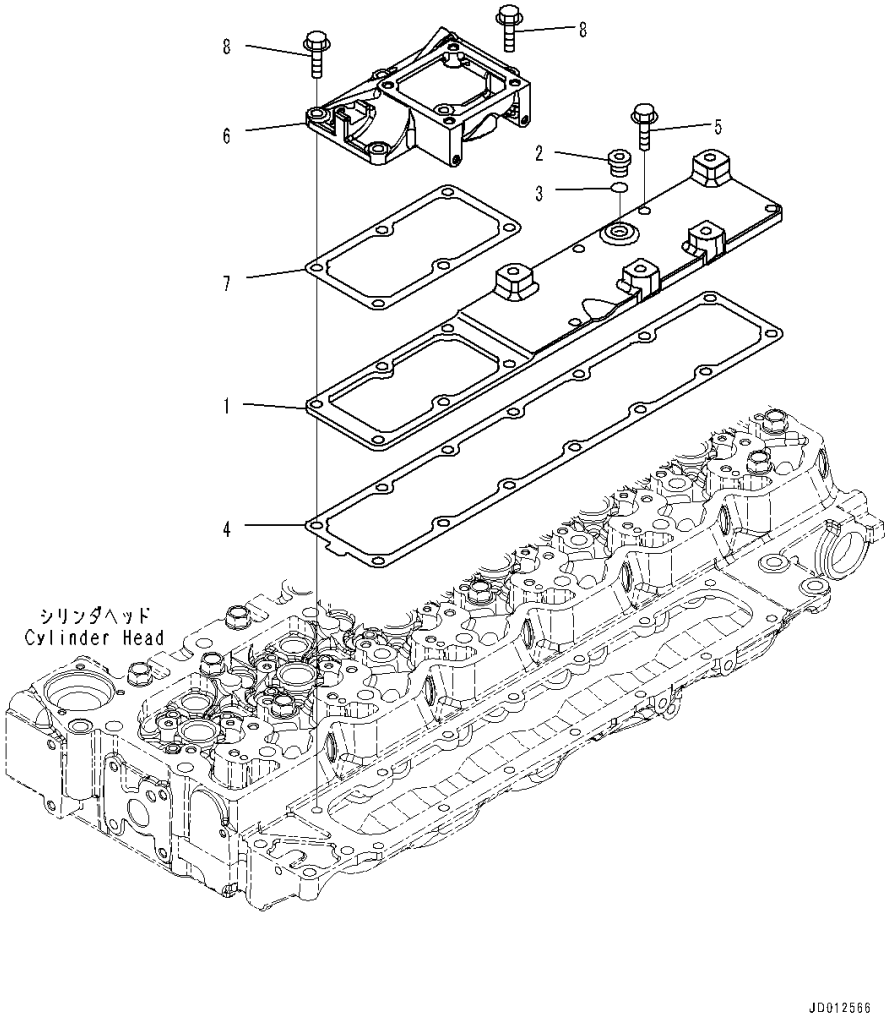


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-11-4230 | Cover | 1 | 26541137- |
| | | 6735-21-1910 | Plug Assembly | 1 | 26541137- |
| 2 | | 6735-21-1920 | • Plug | 1 | 26541137- |
| 3 | | 6735-21-1930 | • O-ring | 1 | 26541137- |
| 4 | | 6754-11-4280 | Gasket | 1 | 26541137- |
| 5 | | 6732-11-4160 | Bolt | 4 | 26541137- |
| 6 | | 6754-11-4221 | Connector | 1 | 26541137- |
| 7 | | 6754-11-4390 | Gasket | 1 | 26541137- |
| 8 | | 6743-12-4110 | Bolt | 6 | 26541137- |

https://truckmanualshub.com/


# FIG. AIC00-001001 Air Intake Connector

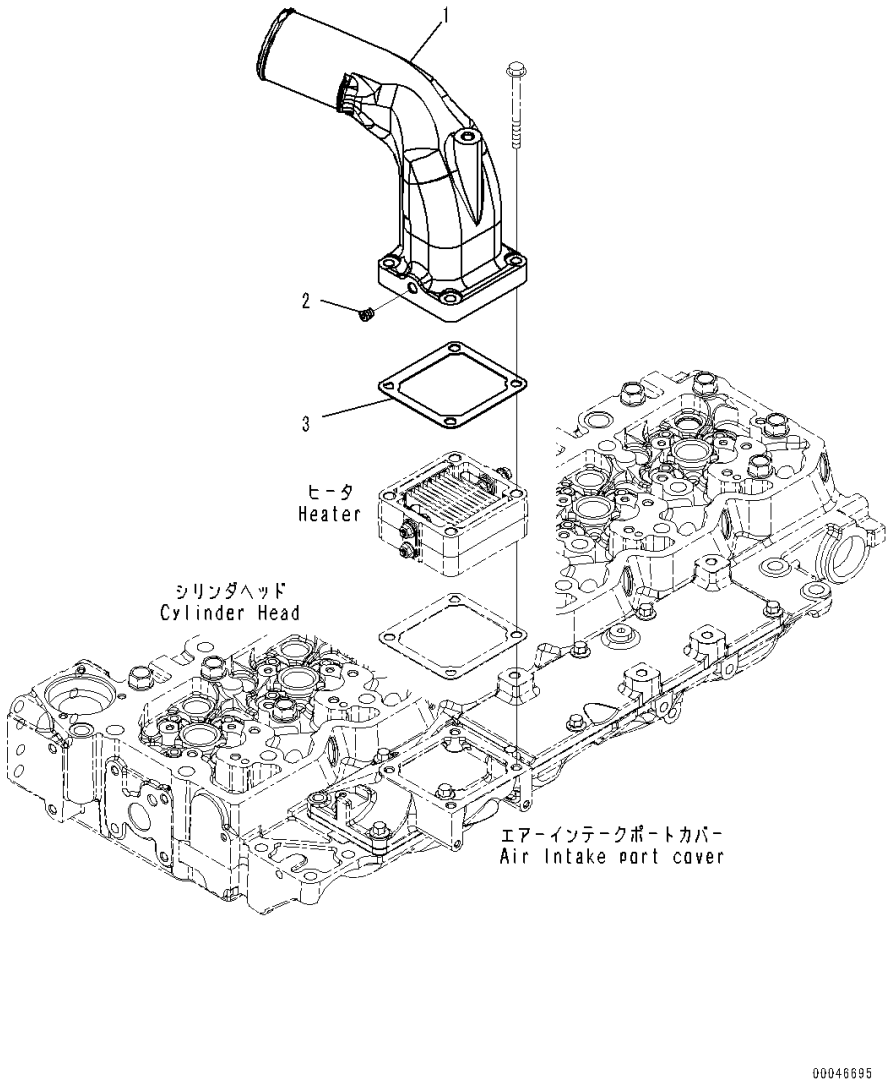


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-11-4410 | Connector, Air Intake | 1 | 26541137- |
| 2 | | 07043-70108 | Plug | 1 | 26541137- |
| 3 | | 6754-11-4120 | Gasket | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AAH00-001001 Air Intake Heater

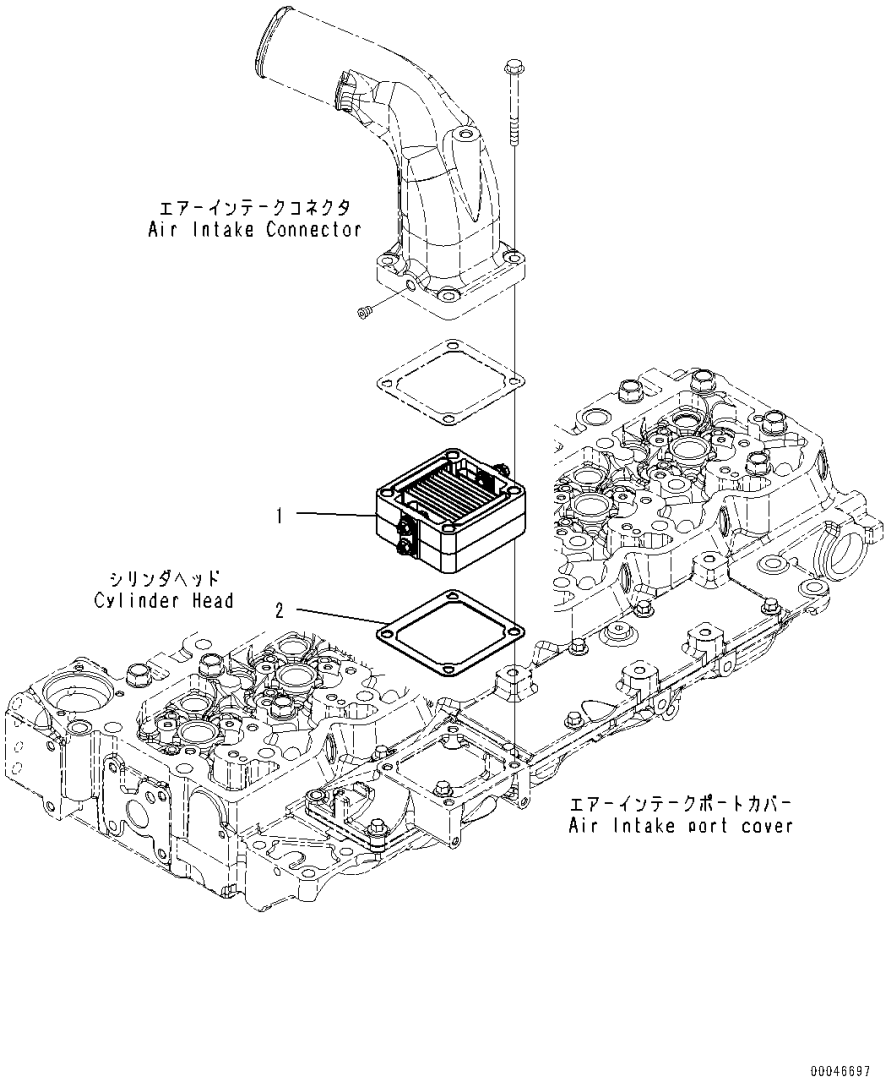


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-81-5110 | Heater | 1 | 26541137- |
| 2 | | 6754-11-4120 | Gasket | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. B9999-506001 Air Cleaner

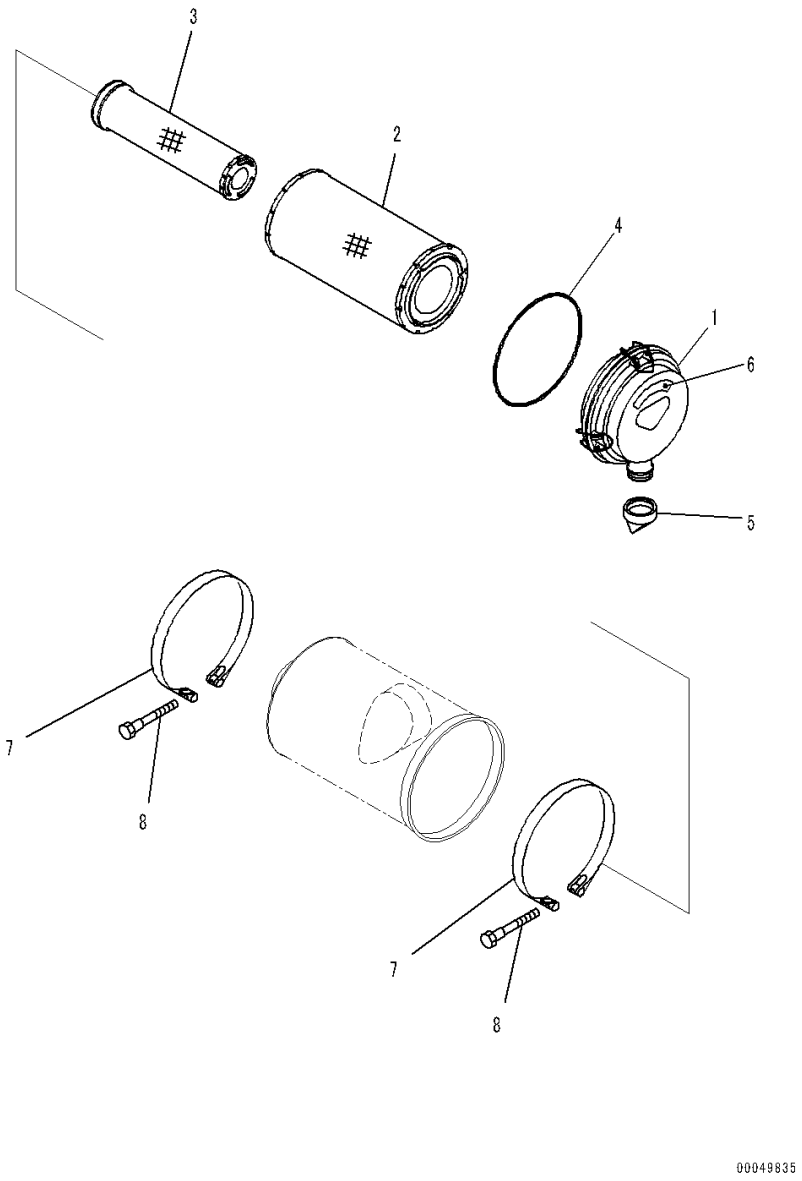


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-81-7300 | Air Cleaner Assembly | 1 | 26541137- |
| 1 | | 600-184-1420 | • Cover | 1 | 26541137- |
| | | 600-185-4100 | • Element Assembly | 1 | 26541137- |
| 2 | | 600-185-4110 | •• Element | 1 | 26541137- |
| 3 | C1 | | •• Element | 1 | 26541137- |
| 4 | | 600-184-1470 | •• O-ring | 1 | 26541137- |
| 5 | | 600-184-1350 | • Valve, Vaquator | 1 | 26541137- |
| 6 | | 600-181-1930 | • Plate, Service Instruction | 1 | 26541137- |
| 7 | | 6222-81-7190 | Band | 2 | 26541137- |
| 8 | | 6643-11-4641 | Bolt | 2 | 26541137- |

https://truckmanualshub.com/


# FIG. B9999-509001 Air Cleaner, Pre-Cleaner

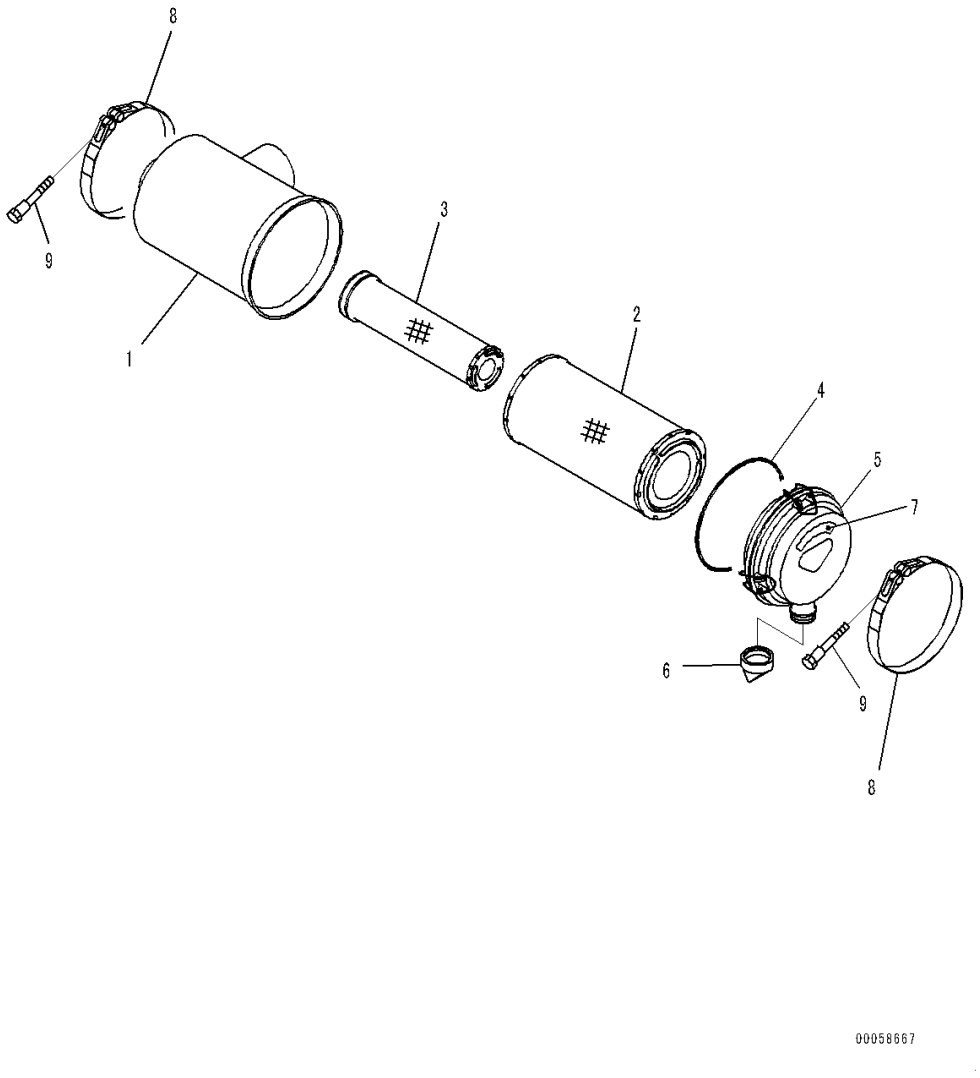


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6738-81-7500 | Air Cleaner Assembly | 1 | 26541137- |
| 1 | | 6738-81-7510 | • Body | 1 | 26541137- |
| | | 600-185-4100 | • Element Assembly | 1 | 26541137- |
| 2 | | 600-185-4110 | •• Element | 1 | 26541137- |
| 3 | | 600-185-4120 | •• Element | 1 | 26541137- |
| 4 | | 600-184-1470 | •• O-ring | 1 | 26541137- |
| 5 | | 600-184-1420 | • Cover | 1 | 26541137- |
| 6 | | 600-184-1350 | • Valve, Vaquator | 1 | 26541137- |
| 7 | | 600-181-1930 | • Plate, Service Instruction | 1 | 26541137- |
| 8 | | 6222-81-7190 | Band | 2 | 26541137- |
| 9 | | 6643-11-4641 | Bolt | 2 | 26541137- |

https://truckmanualshub.com/


# FIG. B9999-507001 Air Transfer Connection

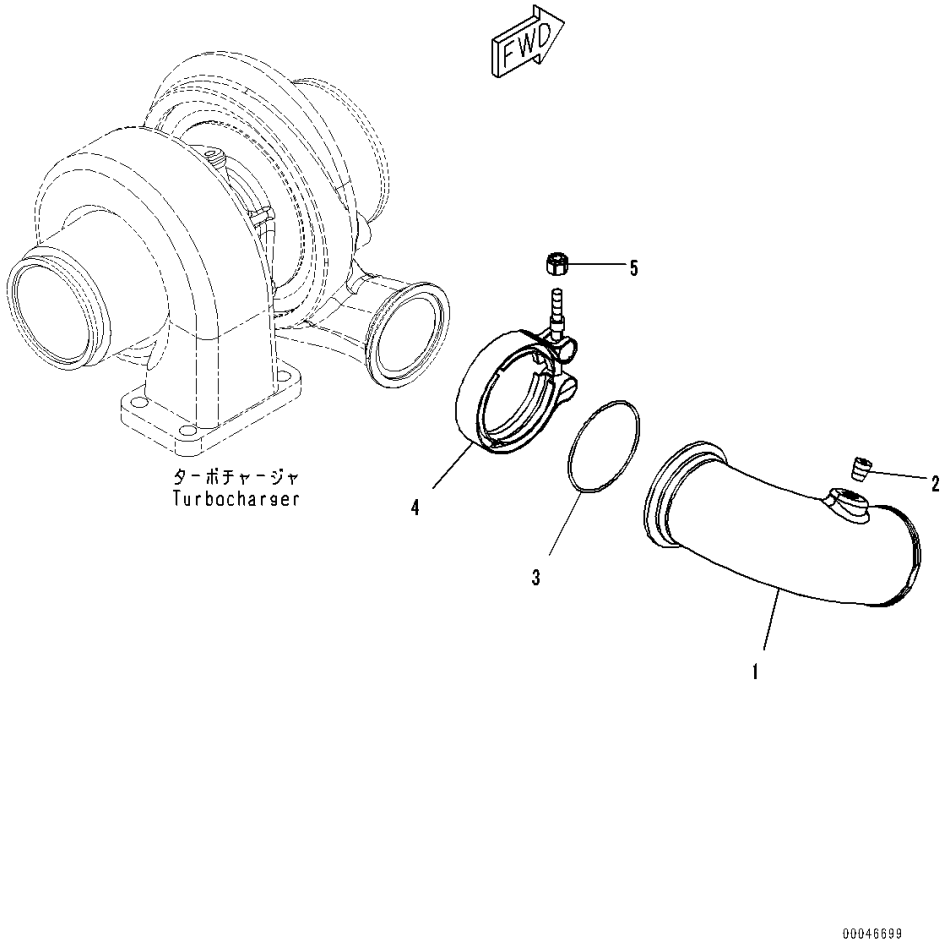


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6738-11-4320 | Pipe | 1 | 26541137- |
| 2 | | 07043-70108 | Plug | 1 | 26541137- |
| 3 | | 6738-11-4370 | O-ring | 1 | 26541137- |
| 4 | | 6738-11-4380 | Clamp | 1 | 26541137- |
| 5 | | 6738-11-4390 | Nut | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. ATB30-001001 Exhaust Manifold

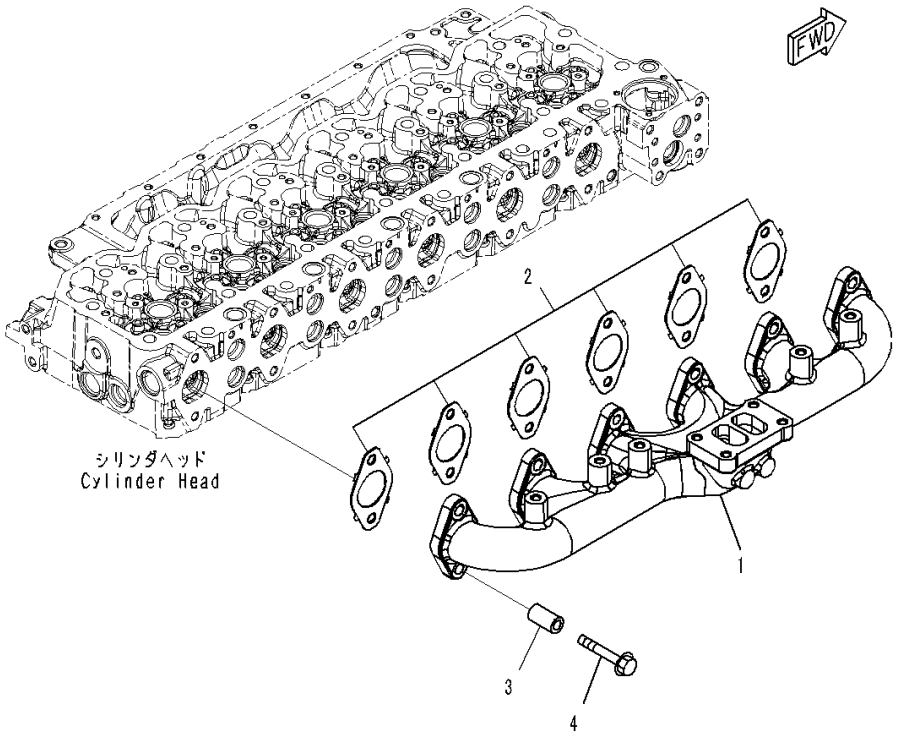


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-11-5110 | Manifold, Exhaust ..... | 1 | 26541137- |
| 2 | | 6754-11-5140 | Gasket ..... | 6 | 26541137- |
| 3 | | 6754-11-5150 | Spacer ..... | 12 | 26541137- |
| 4 | | 6732-11-5860 | Bolt..... | 12 | 26541137- |

https://truckmanualshub.com/


# FIG. A1539-001001 Turbocharger

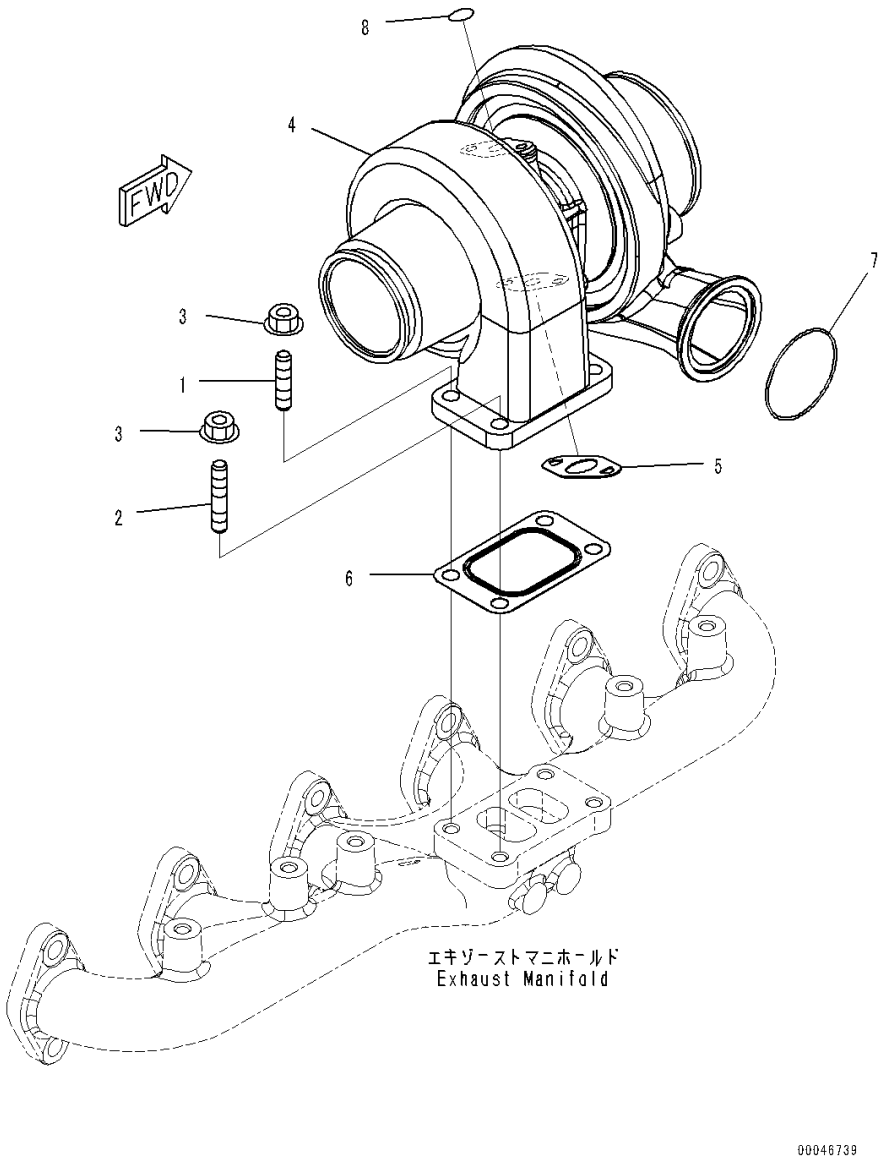


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6732-81-8810 | Stud | 2 | 26541137- |
| 2 | | 6738-82-8810 | Stud | 2 | 26541137- |
| 3 | | 6732-81-8820 | Nut | 4 | 26541137- |
| | | 6754-81-8090 | Turbocharger Kit | 1 | 26541137- |
| 4 | C1 | | • Turbocharger | 1 | 26541137- |
| 5 | | 6754-51-8121 | • Gasket | 1 | 26541137- |
| 6 | | 6754-81-8710 | • Gasket | 1 | 26541137- |
| 7 | | 6738-11-4370 | • O-ring | 1 | 26541137- |
| 8 | | 6736-51-8710 | • O-ring | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. ATP00-001001 Turbocharger Oil Piping

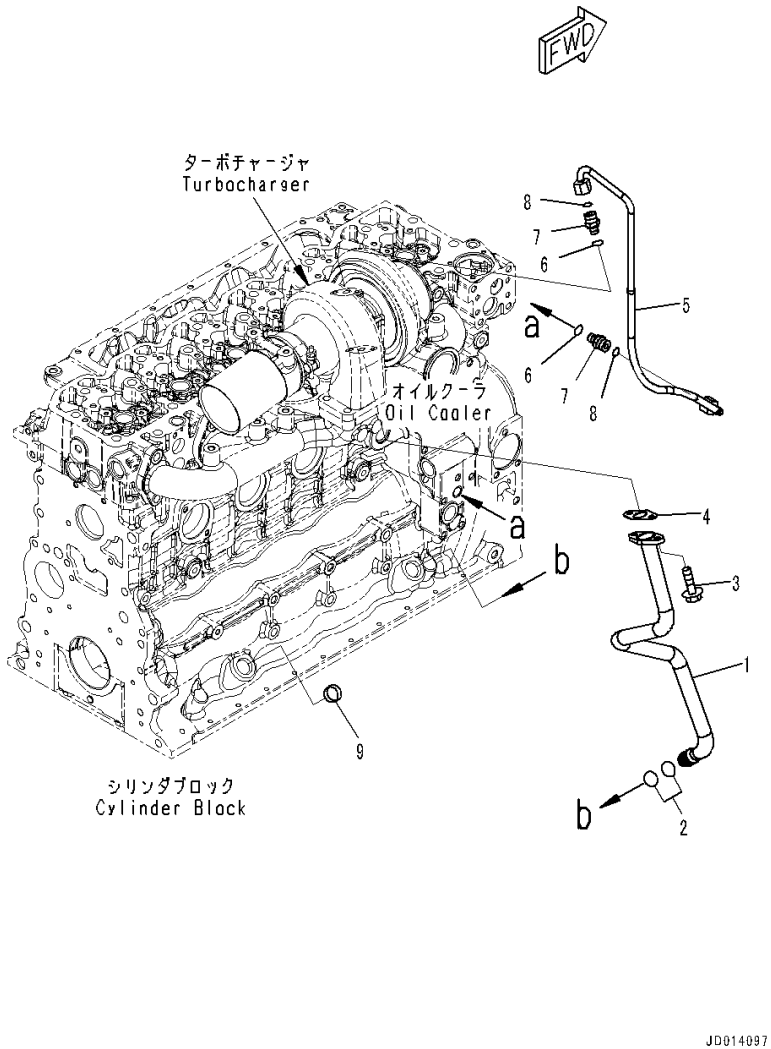


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-51-8100 | Tube Assembly | 1 | 26541137- |
| 1 | C1 | | • Tube | 1 | 26541137- |
| 2 | | 6732-51-8330 | • O-ring | 2 | 26541137- |
| 3 | | 6731-61-1370 | Bolt | 2 | 26541137- |
| 4 | | 6754-51-8121 | Gasket | 1 | 26541137- |
| 5 | | 6754-51-8210 | Hose | 1 | 26541137- |
| 6 | | 6736-51-8710 | O-ring | 2 | 26541137- |
| 7 | | 6732-81-8850 | Connector | 2 | 26541137- |
| 8 | | 6732-81-8860 | O-ring | 2 | 26541137- |
| 9 | | 6735-21-5530 | Plug | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. B9999-504001 Exhaust Muffler Piping

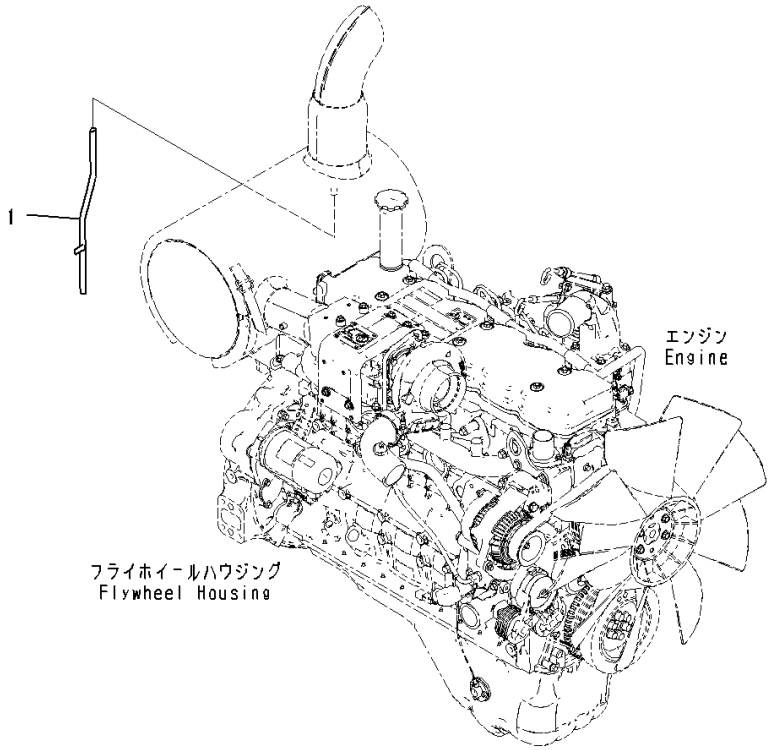


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-11-5440 | Tube..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. ASH00-001001 Heat Shield, Turbocharger

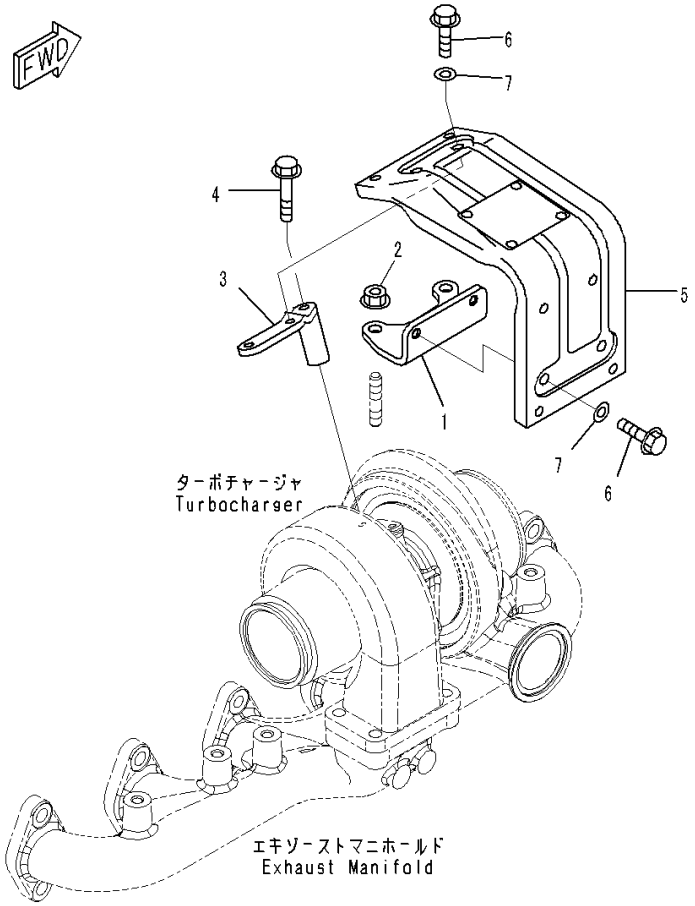


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6738-81-8450 | Bracket | 1 | 26541137- |
| 2 | | 6732-81-8820 | Nut | 2 | 26541137- |
| 3 | | 6754-81-8410 | Bracket | 1 | 26541137- |
| 4 | | 01435-00845 | Bolt | 1 | 26541137- |
| 5 | | 6732-81-8412 | Cover | 1 | 26541137- |
| 6 | | 01435-00816 | Bolt | 4 | 26541137- |
| 7 | | 154-61-16570 | Washer | 4 | 26541137- |

https://truckmanualshub.com/


# FIG. A1570-001001 Heat Shield

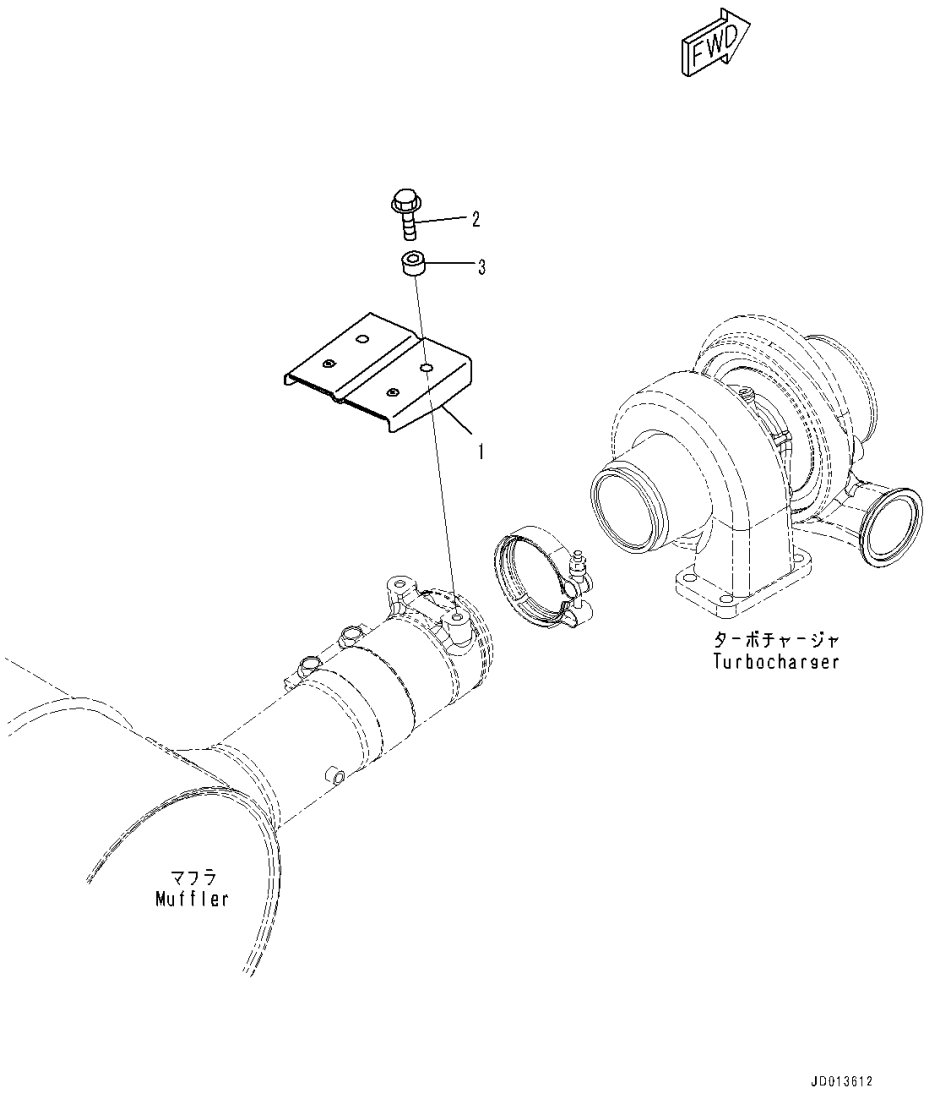


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6732-81-8451 | Cover | 1 | 26541137- |
| 2 | | 01435-00820 | Bolt | 2 | 26541137- |
| 3 | | 6131-12-4570 | Spacer | 2 | 26541137- |

https://truckmanualshub.com/

# FIG. A1570-002001 Heat Shield, Sandy and Dusty Terrain Spec.

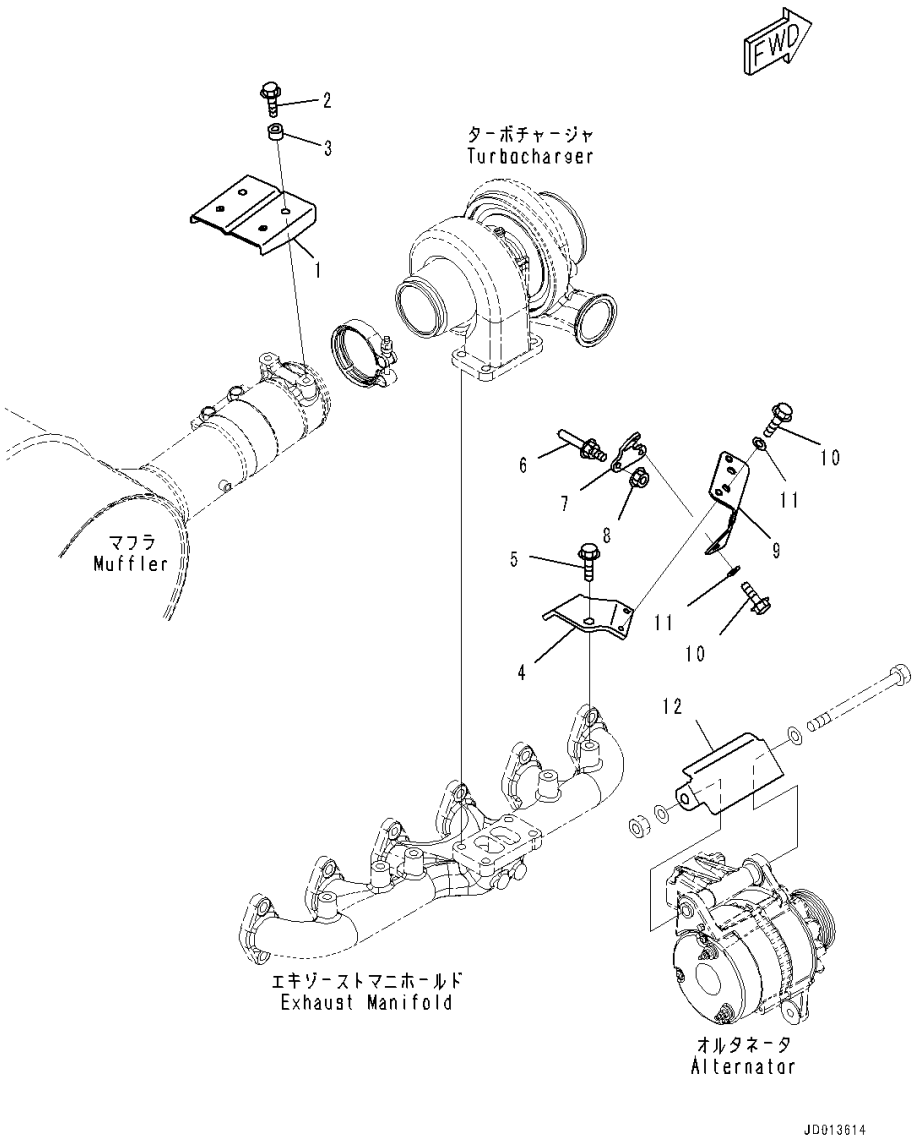



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6732-81-8451 | Cover | 1 | 26541137- |
| 2 | | 01435-00820 | Bolt | 2 | 26541137- |
| 3 | | 6131-12-4570 | Spacer | 2 | 26541137- |
| 4 | | 6754-81-8420 | Bracket | 1 | 26541137- |
| 5 | | 01435-01020 | Bolt | 1 | 26541137- |
| 6 | | 6754-81-9160 | Bolt | 2 | 26541137- |
| 7 | | 6754-81-8430 | Bracket | 1 | 26541137- |
| 8 | | 01584-00605 | Nut | 2 | 26541137- |
| 9 | | 6751-81-8410 | Cover | 1 | 26541137- |
| 10 | | 01435-00812 | Bolt | 3 | 26541137- |
| 11 | | 154-61-16570 | Washer | 3 | 26541137- |
| 12 | | 6754-81-8440 | Cover | 1 | 26541137- |

# ENGINE CYLINDER BLOCK AND ITS RELATED PARTS

https://truckmanualshub.com/


# FIG. A2210-001001 Breather Hose Related Parts

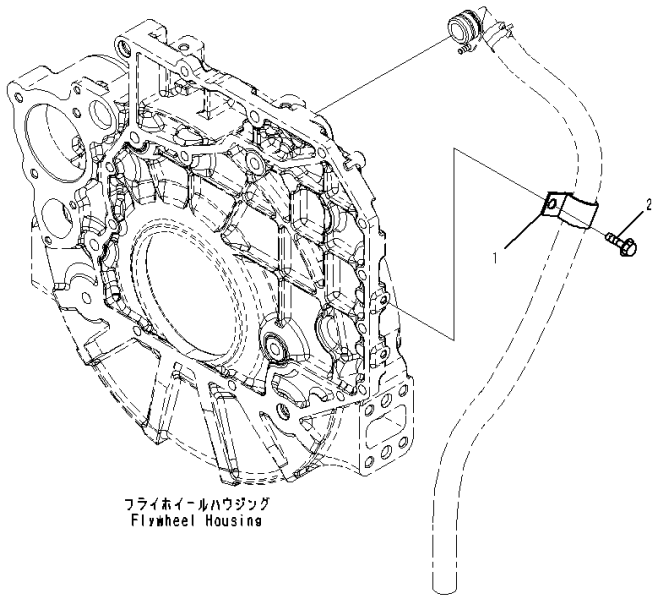


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 04434-52511 | Clip | 1 | 26541137- |
| 2 | | 01435-00820 | Bolt | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. ADR20-001001 Rear Gear Cover Fitting Parts

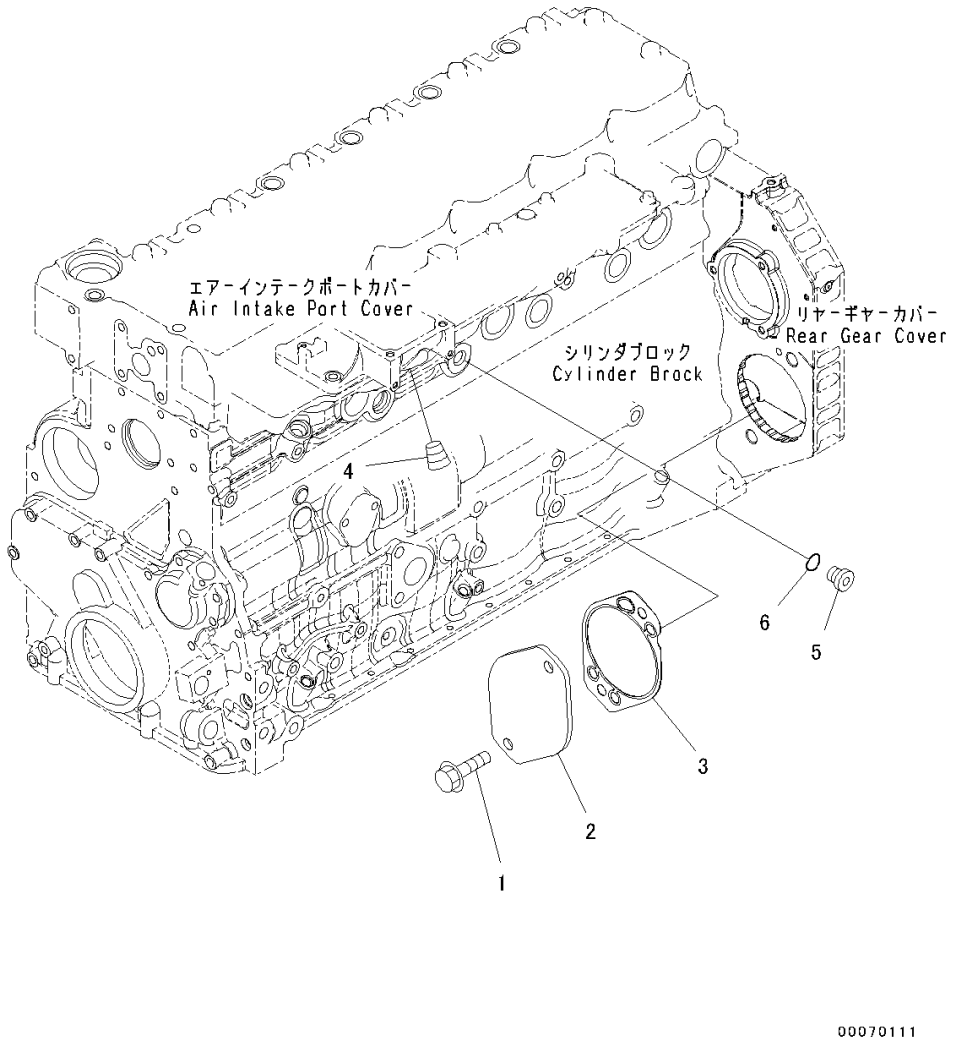


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6732-51-5130 | Bolt | 2 | 26541137- |
| 2 | | 6754-21-9110 | Plate | 1 | 26541137- |
| 3 | | 6754-21-9120 | Gasket | 1 | 26541137- |
| 4 | | 6732-11-1920 | Plug | 1 | 26541137- |
| | | 6216-14-6830 | Plug Assembly | 1 | 26541137- |
| 5 | | 6216-14-6890 | • Plug | 1 | 26541137- |
| 6 | | 6216-14-6840 | • Seal | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AFW10-001001 Flywheel Mounting

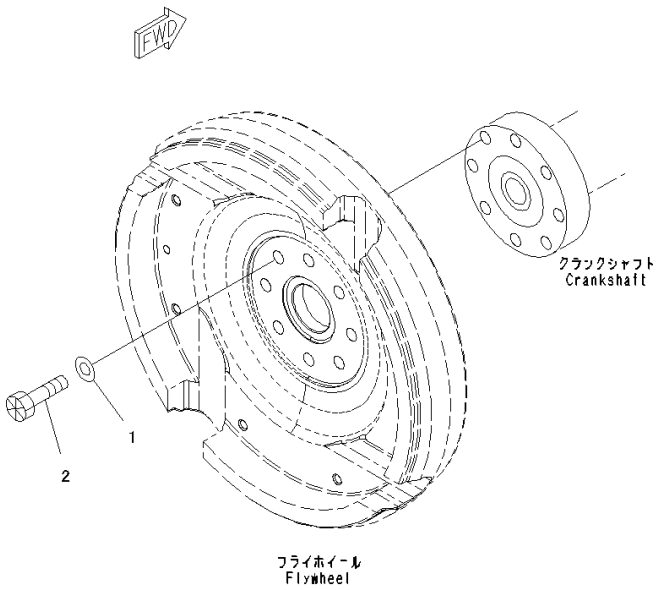


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6732-31-4120 | Washer ..... | 8 | 26541137- |
| 2 | | 6732-31-4130 | Bolt..... | 8 | 26541137- |

https://truckmanualshub.com/


# FIG. AGG00-001001 Front Gear Cover

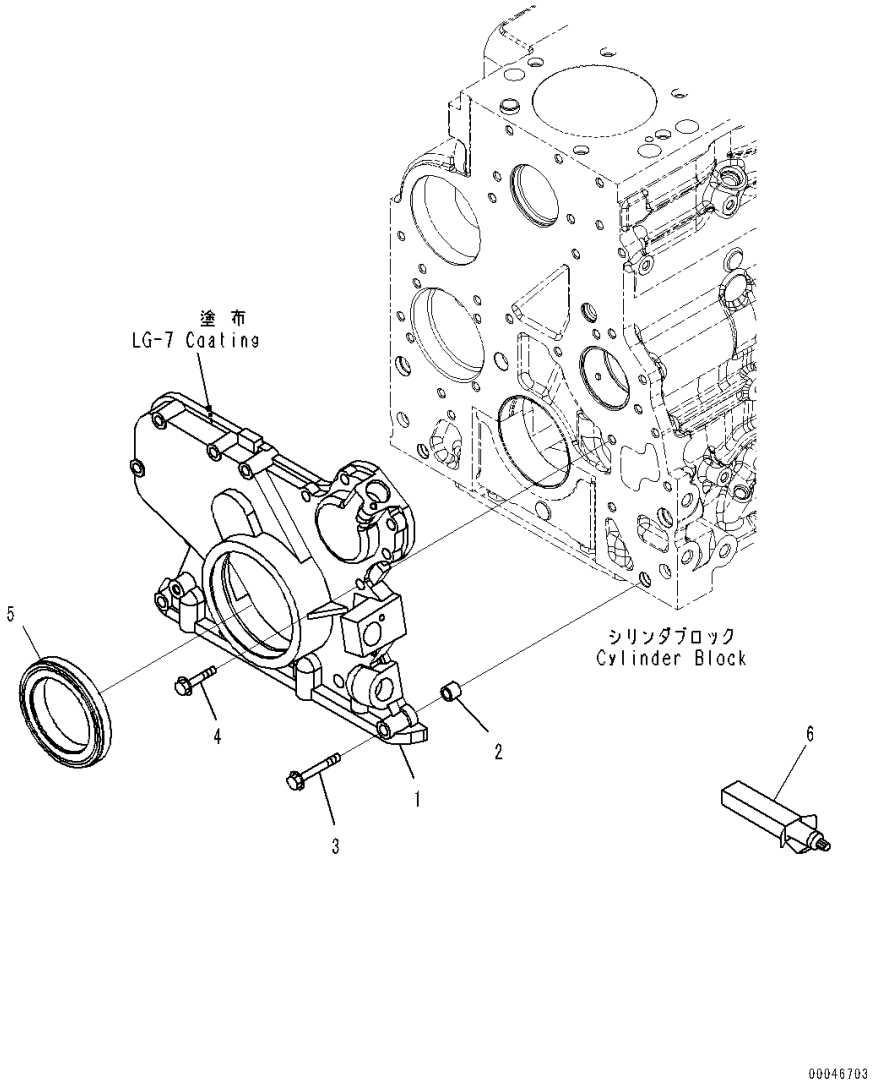


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-21-6211 | Cover, Front | 1 | 26541137- |
| 2 | | 6754-21-6220 | Ring | 2 | 26541137- |
| 3 | | 6735-61-2120 | Bolt | 6 | 26541137- |
| 4 | | 6732-21-6630 | Screw | 7 | 26541137- |
| 5 | | 6754-21-6230 | Seal | 1 | 26541137- |
| 6 | | 09920-00150 | Liquid gasket, LG-7, 150G | AR | 26541137- |

https://truckmanualshub.com/


# FIG. B9999-508001 Spare Parts

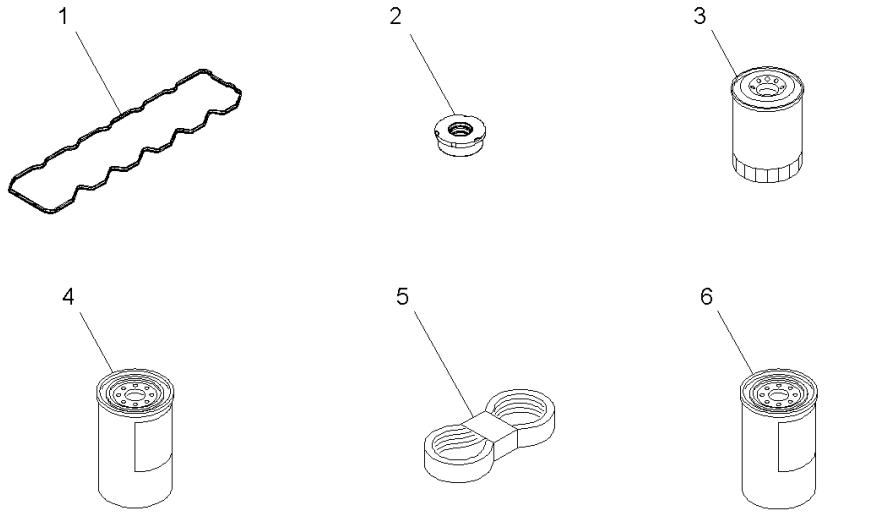


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-11-8180 | Packing | 1 | 26541137- |
| 2 | | 6754-11-8210 | Isolator | 6 | 26541137- |
| 3 | | 6736-51-5142 | Cartridge | 1 | 26541137- |
| 4 | | 600-319-3750 | Cartridge | 1 | 26541137- |
| 5 | | 6732-82-3680 | Belt | 1 | 26541137- |
| 6 | | 600-319-3610 | Cartridge Assembly | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. ARL00-001001 Rocker Arm

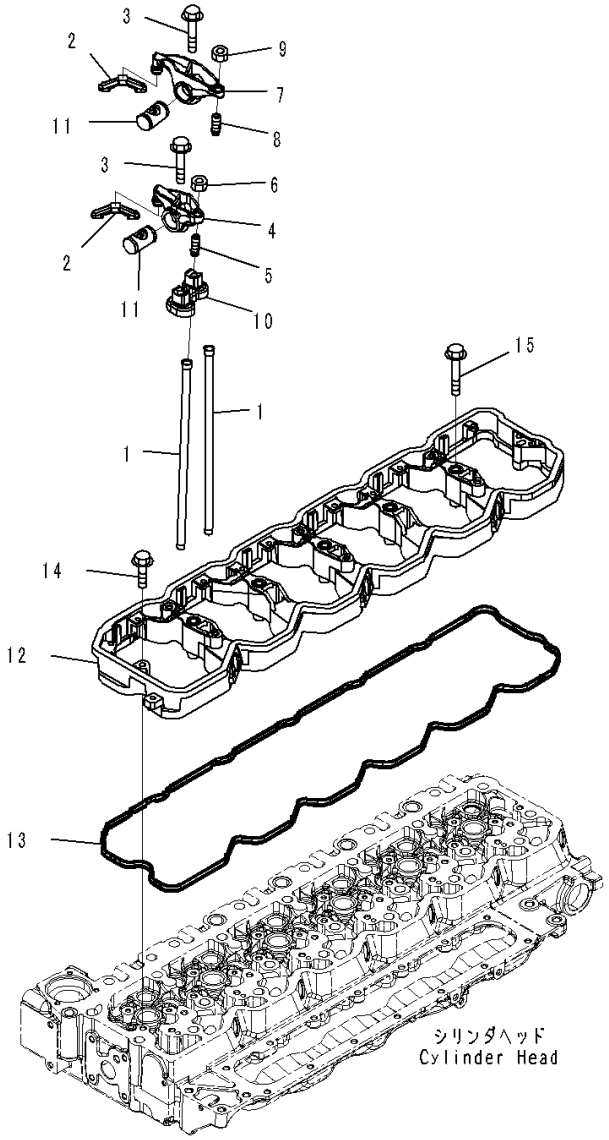


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-41-3110 | Rod | 12 | 26541137- |
| 2 | | 6754-41-5310 | Crosshead | 12 | 26541137- |
| 3 | | 6754-41-5180 | Bolt | 12 | 26541137- |
| | | 6754-41-5211 | Arm Assembly, Intake | 6 | 26541137- |
| 4 | C1 | | • Lever Assembly, Intake | 1 | 26541137- |
| 5 | | 6754-41-5140 | •• Screw | 1 | 26541137- |
| 6 | | 6735-41-5550 | •• Nut | 1 | 26541137- |
| | | 6754-41-5111 | Arm Assembly, Exhaust | 6 | 26541137- |
| 7 | C1 | | • Lever Assembly, Exhaust | 1 | 26541137- |
| 8 | | 6754-41-5140 | •• Screw | 1 | 26541137- |
| 9 | | 6735-41-5550 | •• Nut | 1 | 26541137- |
| 10 | | 6754-41-5260 | Support | 6 | 26541137- |
| 11 | | 6754-41-5190 | Shaft | 12 | 26541137- |
| 12 | | 6754-11-7110 | Housing Assembly | 1 | 26541137- |
| 13 | | 6754-11-7120 | Gasket | 1 | 26541137- |
| 14 | | 6736-21-3210 | Bolt | 2 | 26541137- |
| 15 | | 6732-61-6150 | Bolt | 5 | 26541137- |

https://truckmanualshub.com/


# FIG. ABB00-001001 Tappet And Block Plate

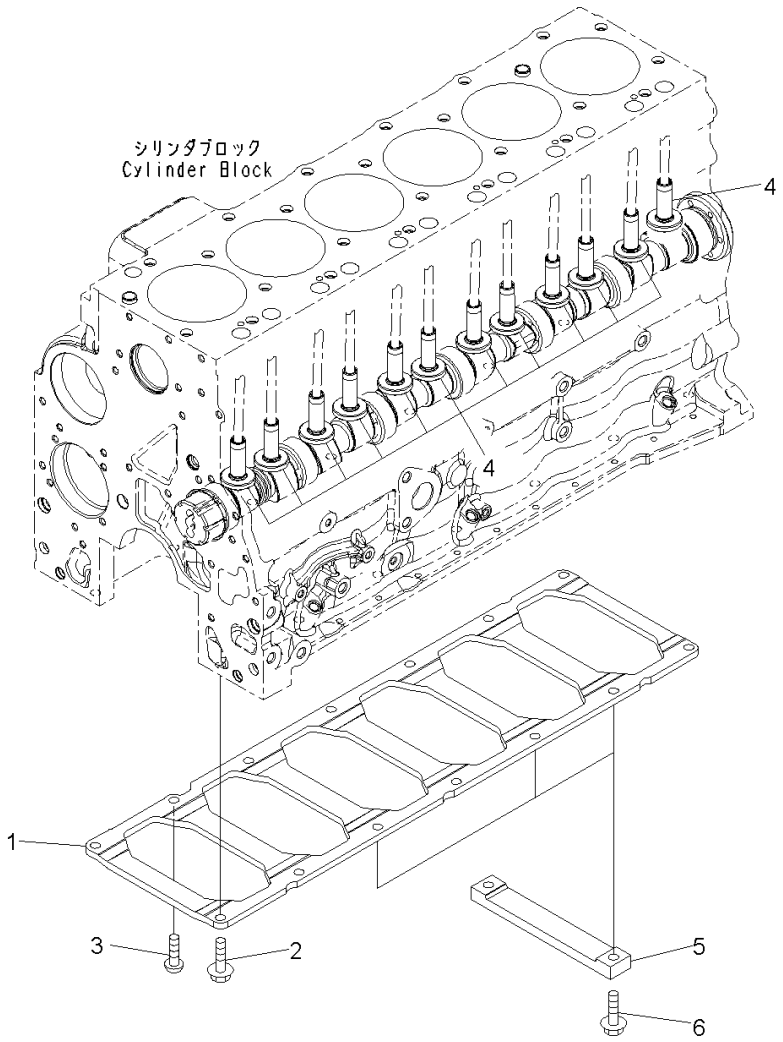


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-21-5150 | Plate | 1 | 26541137- |
| 2 | | 6735-71-3220 | Bolt | 7 | 26541137- |
| 3 | | 6754-21-1920 | Bolt | 1 | 26541137- |
| 4 | | 6754-41-2110 | Tappet | 12 | 26541137- |
| 5 | | 6754-21-5170 | Plate | 3 | 26541137- |
| 6 | | 6742-01-5504 | Bolt | 6 | 26541137- |

https://truckmanualshub.com/


# FIG. APA00-001001 Accessory Drive Pulley

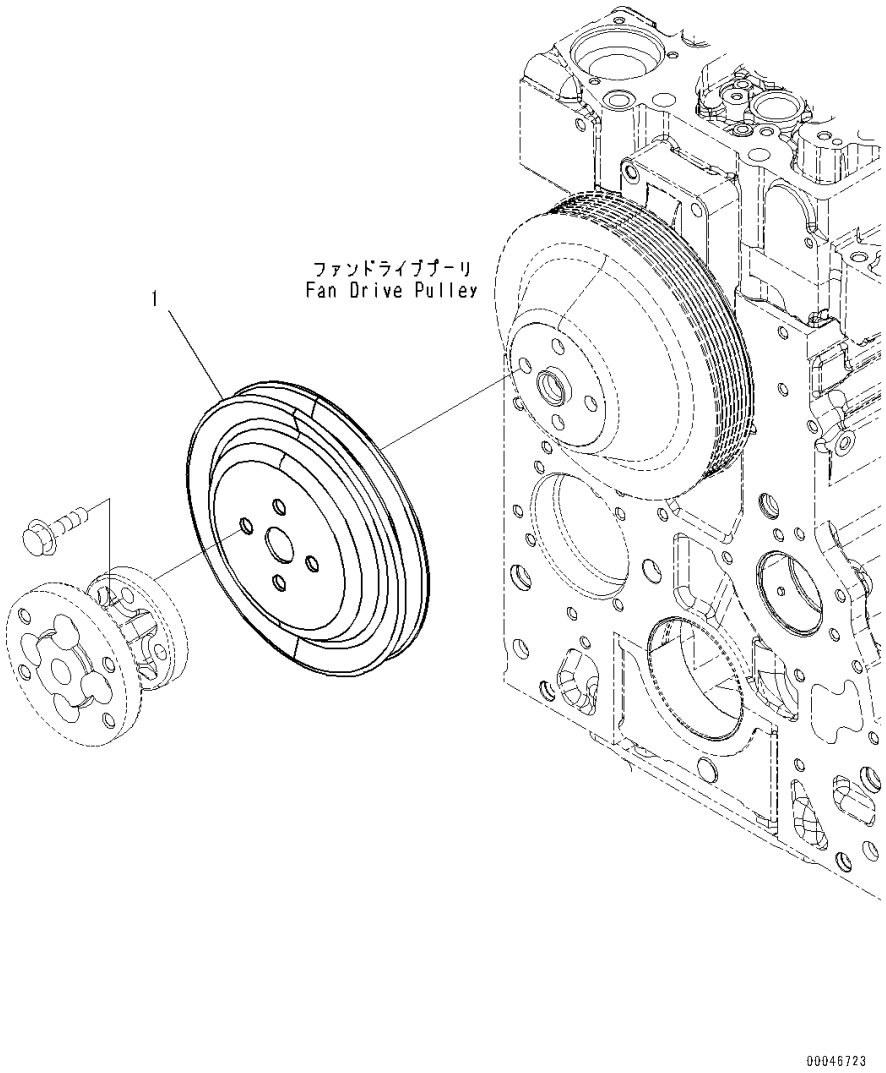


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6738-91-1510 | Pulley, Accessoy..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. A2219-001001 Flywheel Housing

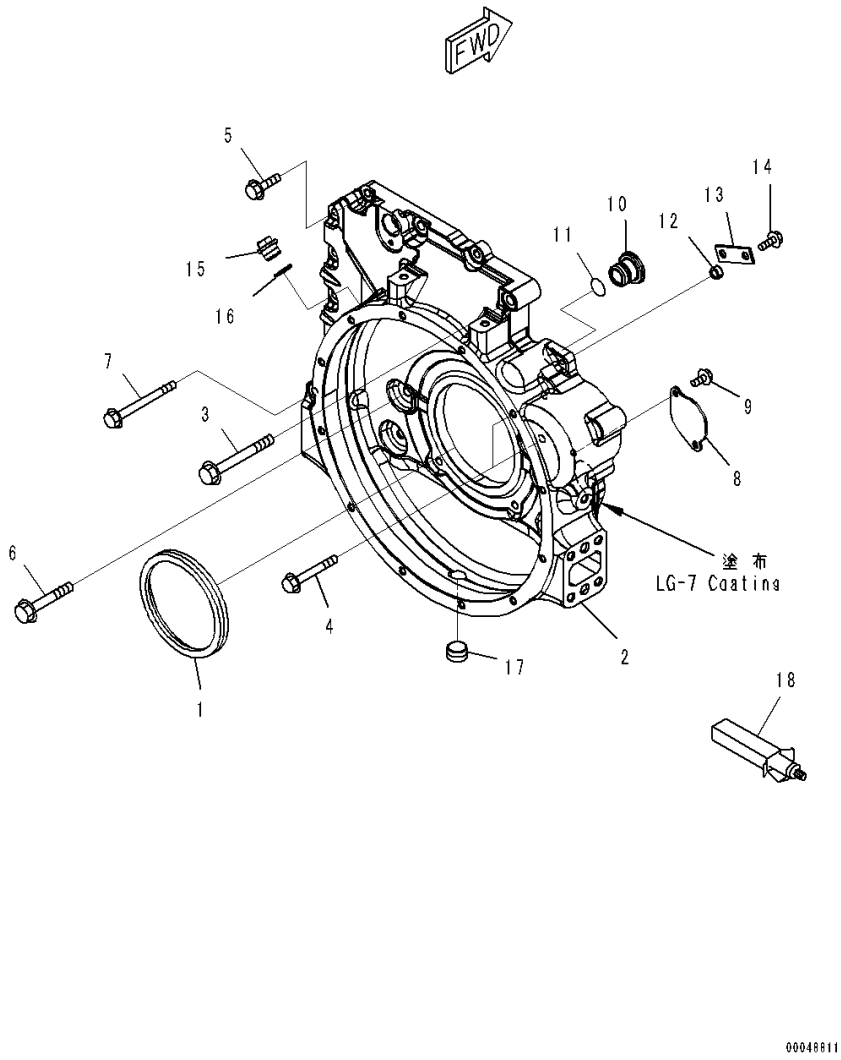


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6736-21-4221 | Seal | 1 | 26541137- |
| 2 | | 6754-21-4111 | Housing, Flywheel | 1 | 26541137- |
| 3 | | 6754-21-4210 | Bolt | 2 | 26541137- |
| 4 | | 6731-21-6220 | Bolt | 2 | 26541137- |
| 5 | | 6742-01-5504 | Bolt | 9 | 26541137- |
| 6 | | 6736-21-5350 | Bolt | 6 | 26541137- |
| 7 | | 6754-21-4220 | Bolt | 1 | 26541137- |
| 8 | | 6732-21-4130 | Plate | 1 | 26541137- |
| 9 | | 6732-71-3220 | Bolt | 2 | 26541137- |
| 10 | | 6732-21-4150 | Plug | 1 | 26541137- |
| 11 | | 6732-21-4161 | O-ring | 1 | 26541137- |
| 12 | | 6130-12-1961 | Spacer | 1 | 26541137- |
| 13 | | 6301-11-4630 | Plate | 1 | 26541137- |
| 14 | | 6732-21-5160 | Bolt | 1 | 26541137- |
| 15 | | 6736-21-5320 | Plug | 1 | 26541137- |
| 16 | | 6732-21-5170 | Gasket | 1 | 26541137- |
| 17 | | 6732-11-1920 | Plug | 1 | 26541137- |
| 18 | | 09920-00150 | Liquid gasket, LG-7, 150G | AR | 26541137- |

https://truckmanualshub.com/


# FIG. AFW00-001001 Flywheel

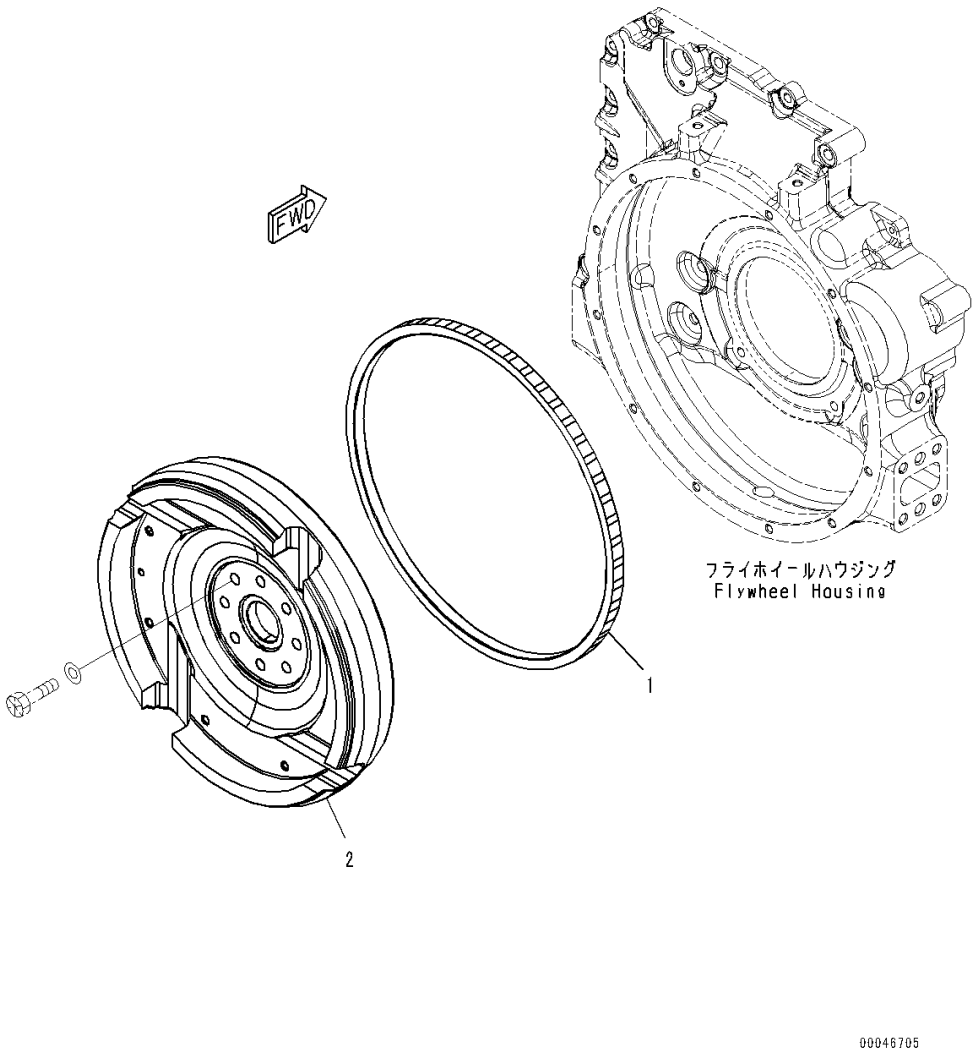


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6738-31-4200 | Flywheel Assembly ..... | 1 | 26541137- |
| 1 | | 6732-31-4180 | • Gear, Ring ..... | 1 | 26541137- |
| 2 | C1 | | • Flywheel ..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AOP10-001001 Engine Oil Pan

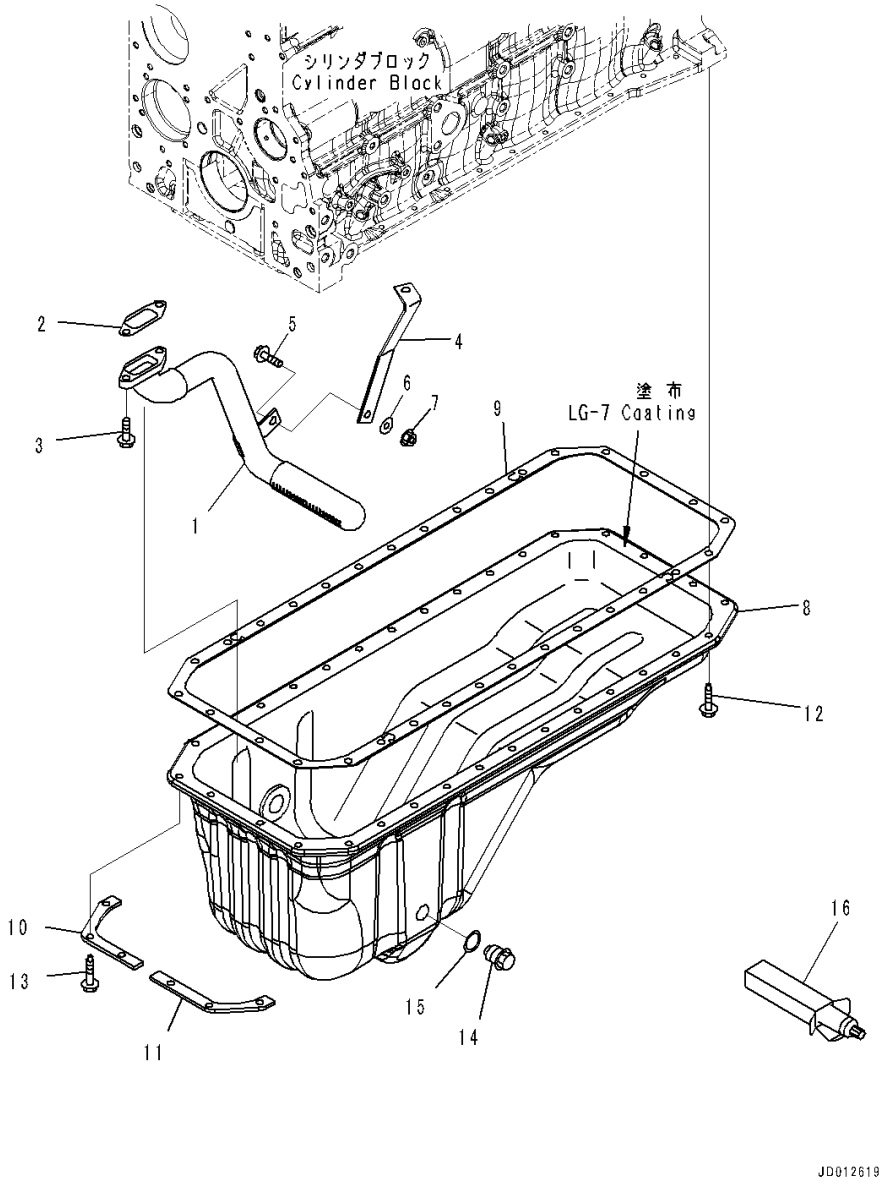


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-21-5510 | Tube, Suction | 1 | 26541137- |
| 2 | | 6754-21-5530 | Gasket | 1 | 26541137- |
| 3 | | 6732-21-5160 | Bolt | 2 | 26541137- |
| 4 | | 6754-21-5520 | Bracket | 1 | 26541137- |
| 5 | | 6735-71-5190 | Bolt | 1 | 26541137- |
| 6 | | 6742-01-2690 | Washer | 1 | 26541137- |
| 7 | | 01584-00605 | Nut | 1 | 26541137- |
| 8 | | 6754-21-5120 | Oil Pan | 1 | 26541137- |
| 9 | | 6754-21-5830 | Gasket | 1 | 26541137- |
| 10 | | 6754-21-5130 | Plate | 1 | 26541137- |
| 11 | | 6754-21-5140 | Plate | 1 | 26541137- |
| 12 | | 6735-21-5540 | Bolt | 26 | 26541137- |
| 13 | | 6732-21-6610 | Bolt | 6 | 26541137- |
| 14 | | 6736-21-5320 | Plug | 1 | 26541137- |
| 15 | | 6732-21-5170 | Gasket | 1 | 26541137- |
| 16 | | 09920-00150 | Liquid gasket, LG-7, 150G | AR | 26541137- |

https://truckmanualshub.com/


# FIG. ARD00-001001 Engine Oil Pan Drain

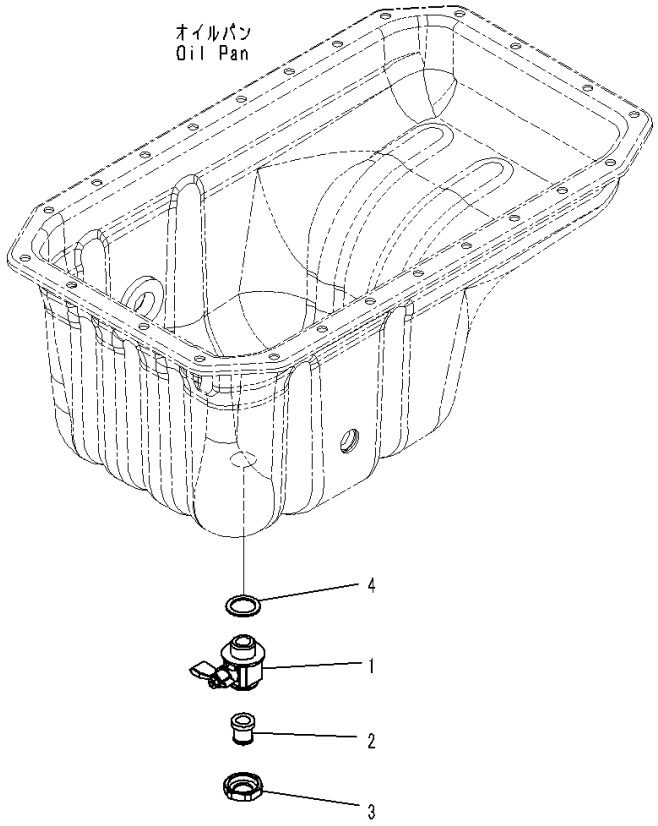


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6738-21-5610 | Valve Assembly ..... | 1 | 26541137- |
| 1 | | 6738-21-5620 | • Valve ..... | 1 | 26541137- |
| 2 | | 6738-21-5630 | • Joint..... | 1 | 26541137- |
| 3 | | 6738-21-5640 | • Union ..... | 1 | 26541137- |
| 4 | | 07005-02216 | Gasket ..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. ASD00-001001 Engine Oil Level Sensor

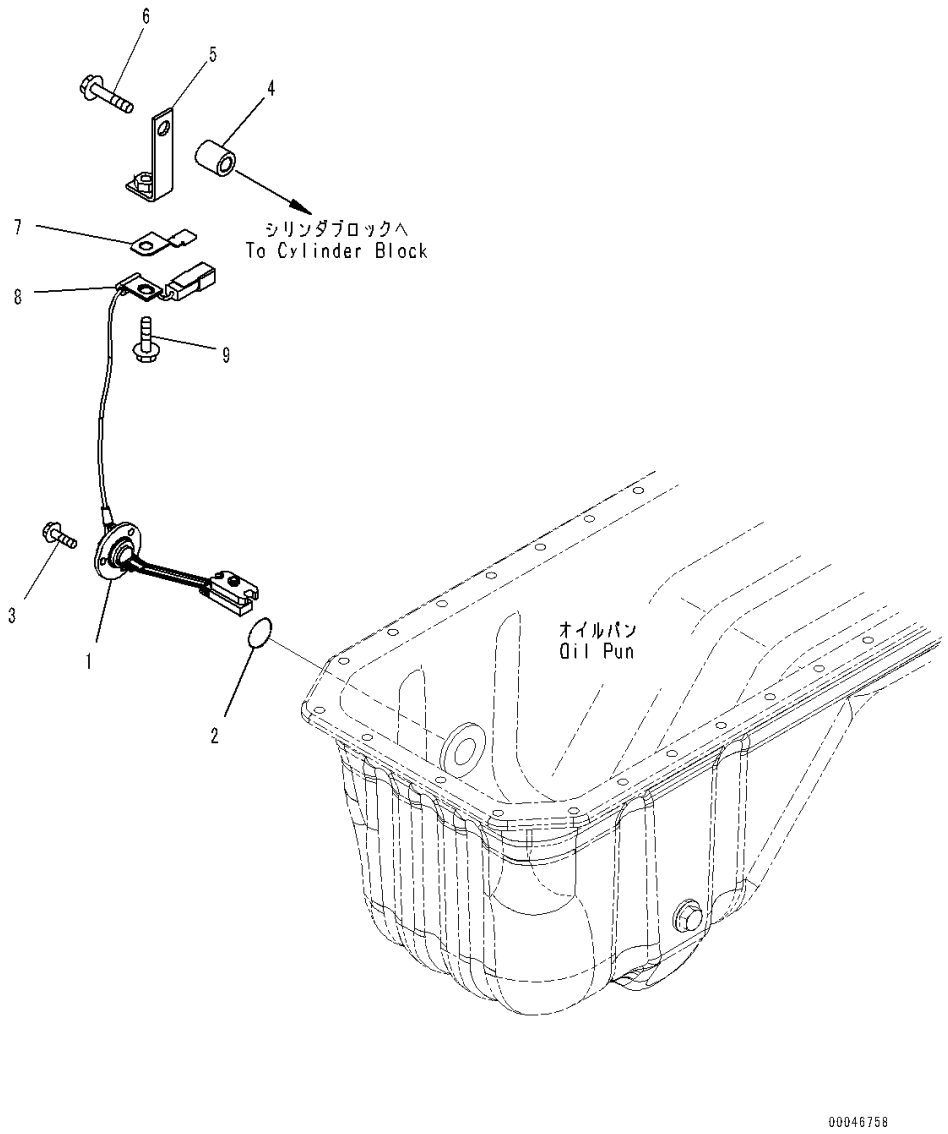


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6741-81-9220 | Sensor | 1 | 26541137- |
| 2 | | 7861-91-4220 | • O-ring | 1 | 26541137- |
| 3 | | 6733-71-5680 | Bolt | 3 | 26541137- |
| 4 | | 6144-81-6680 | Spacer | 1 | 26541137- |
| 5 | | 6215-11-6330 | Bracket | 1 | 26541137- |
| 6 | | 6754-81-9190 | Bolt | 1 | 26541137- |
| 7 | | 08193-20010 | Clip | 1 | 26541137- |
| 8 | | 04434-50510 | Clip | 1 | 26541137- |
| 9 | | 6734-71-5610 | Bolt | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. A2019-001001 Cylinder Block

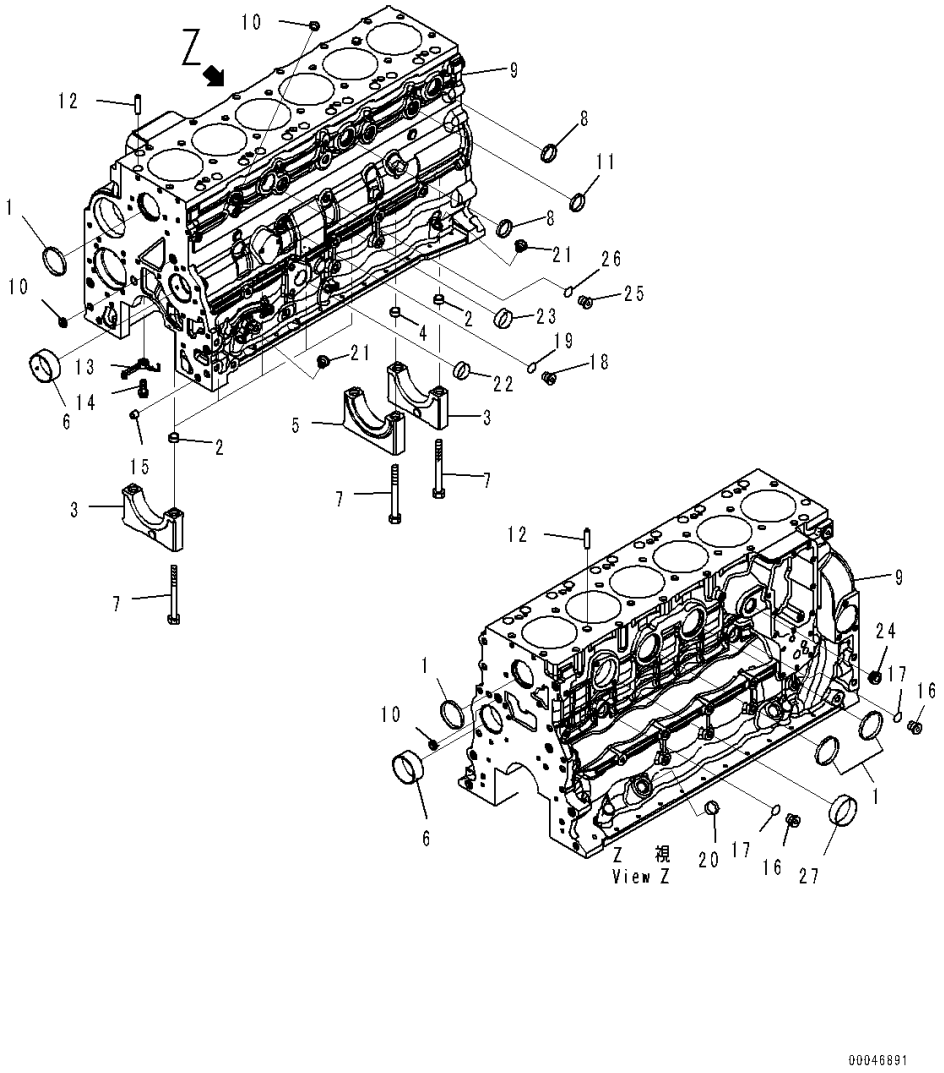


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-21-1310 | Cylinder Block Assembly | 1 | 26541137- |
| | C1 | | • Block Assembly | 1 | 26541137- |
| | C1 | | •• Block Assembly | 1 | 26541137- |
| 1 | | 6732-21-1831 | ••• Plug | 4 | 26541137- |
| | C3 | 6754-21-1220 | ••• Cap Assembly | 6 | 26541137- |
| 2 | C1 | | •••• Ring | 2 | 26541137- |
| 3 | C1 | | •••• Cap | 1 | 26541137- |
| | C3 | 6754-21-1240 | ••• Cap Assembly | 1 | 26541137- |
| 4 | C1 | | •••• Ring | 2 | 26541137- |
| 5 | C1 | | •••• Cap | 1 | 26541137- |
| 6 | | 6732-21-1411 | ••• Bushing | 2 | 26541137- |
| 7 | | 6732-21-1611 | ••• Bolt | 14 | 26541137- |
| 8 | | 6742-01-1420 | ••• Plug | 2 | 26541137- |
| 9 | C1 | | ••• Block | 1 | 26541137- |
| 10 | | 6732-21-1812 | •• Plug | 2 | 26541137- |
| 11 | | 6732-21-1820 | •• Plug | 3 | 26541137- |
| | | 6754-21-1320 | • Block Kit | 1 | 26541137- |
| 12 | | 6732-21-6140 | •• Ring | 2 | 26541137- |
| 13 | | 6754-21-1191 | •• Nozzle | 6 | 26541137- |
| 14 | | 6754-21-1180 | •• Joint | 6 | 26541137- |
| 15 | | 6754-21-6220 | •• Ring | 2 | 26541137- |
| | | 6560-81-7110 | •• Plug Assembly | 2 | 26541137- |
| 16 | | 6560-81-7120 | ••• Plug | 1 | 26541137- |
| 17 | | 6560-81-7130 | ••• O-ring | 1 | 26541137- |
| | | 6732-21-1960 | •• Plug Assembly | 1 | 26541137- |
| 18 | | 6215-81-9510 | ••• Plug | 1 | 26541137- |
| 19 | | 6215-81-9710 | ••• O-ring | 1 | 26541137- |
| 20 | | 6735-21-5530 | •• Plug | 1 | 26541137- |
| 21 | | 6732-21-5530 | •• Plug | 4 | 26541137- |
| 22 | | 6732-21-6160 | •• Plug | 1 | 26541137- |
| 23 | | 6742-01-1420 | •• Plug | 1 | 26541137- |
| 24 | | 6732-11-1920 | •• Plug | 1 | 26541137- |
| | | 6216-24-5130 | •• Plug Assembly | 1 | 26541137- |
| 25 | C1 | | ••• Plug | 1 | 26541137- |
| 26 | | 6735-21-1930 | ••• O-ring | 1 | 26541137- |
| 27 | | 6732-21-1831 | •• Plug | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. A2319-001001 Crankshaft

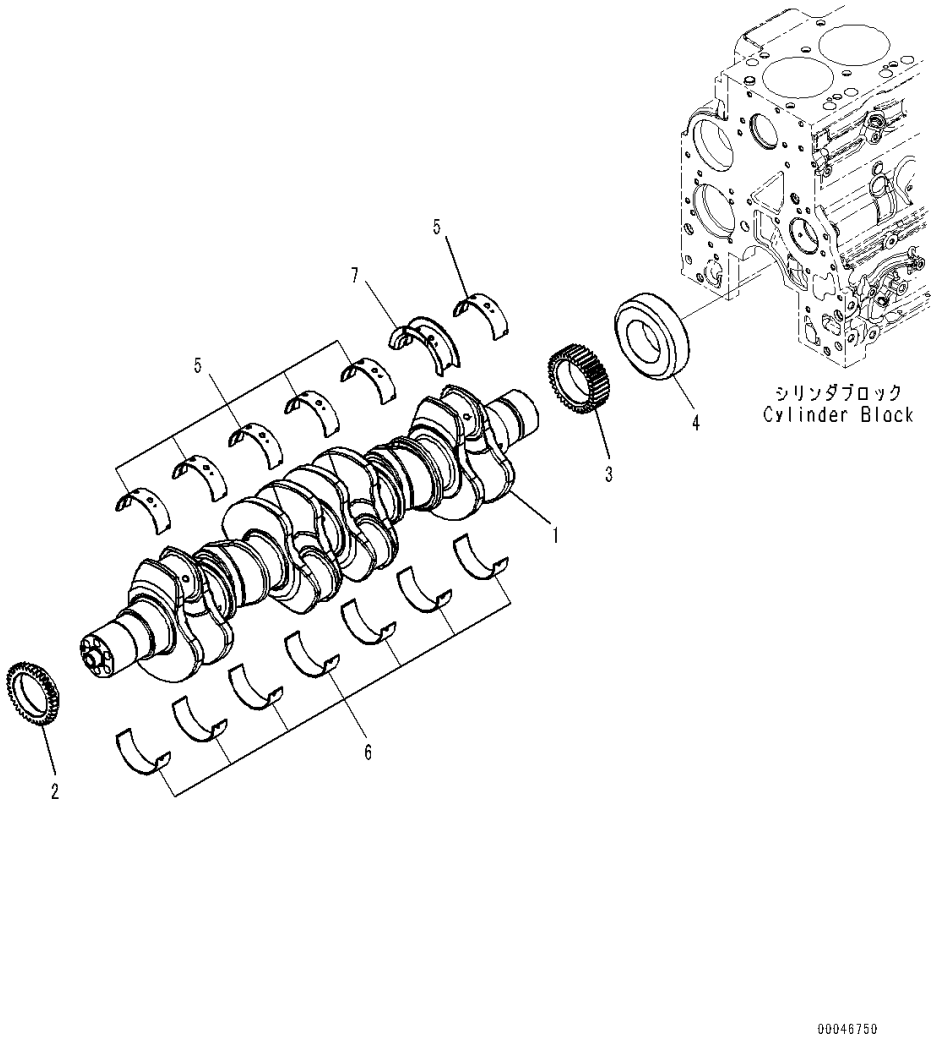


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-01-1310 | Crankshaft Assembly | 1 | 26541137- |
| 1 | C1 | | • Crankshaft | 1 | 26541137- |
| 2 | C1 | | • Gear | 1 | 26541137- |
| 3 | C1 | | • Gear | 1 | 26541137- |
| 4 | C1 | | • Collar | 1 | 26541137- |
| | | 6754-22-8100 | Main Metal Assembly | 1 | 26541137- |
| 5 | C1 | | • Metal, Upper | 6 | 26541137- |
| 6 | C1 | | • Metal, Lower | 7 | 26541137- |
| 7 | C1 | | • Bearing, Thrust, Upper | 1 | 26541137- |


https://truckmanualshub.com/

# FIG. ADA00-001001 Vibration Damper

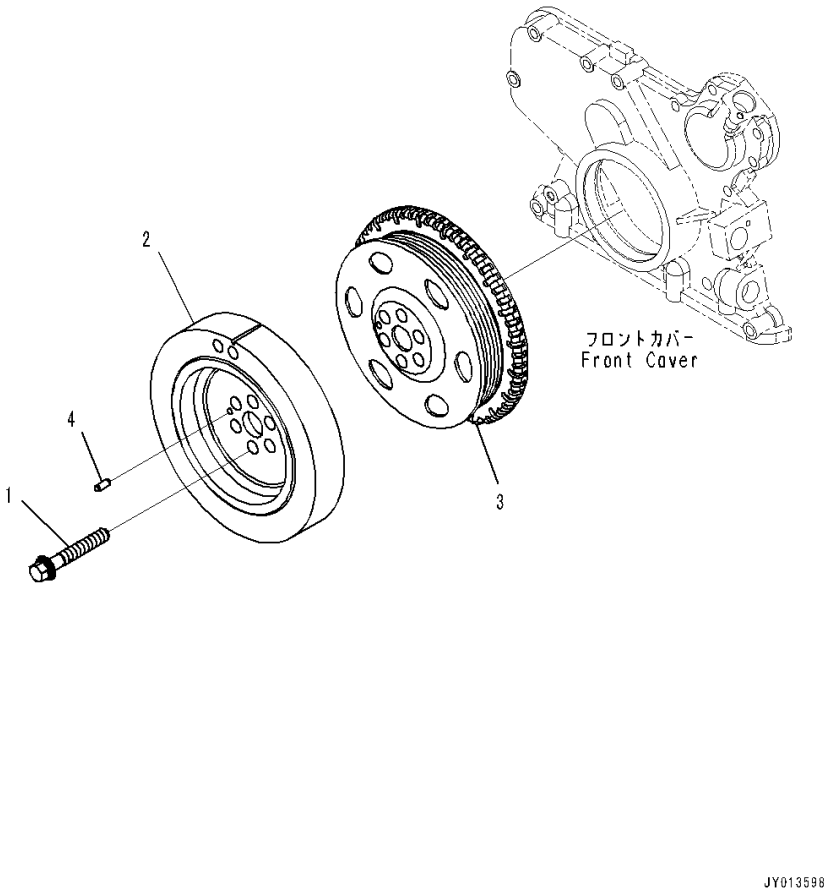


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-31-8120 | Bolt | 6 | 26541137- |
| 2 | | 6754-31-8210 | Damper | 1 | 26541137- |
| 3 | | 6751-81-2610 | Pulley, Crankshaft | 1 | 26541137- |
| 4 | | 6754-31-8130 | Pin | 1 | 26541137- |


# FIG. A2359-001001 Piston and Connecting Rod

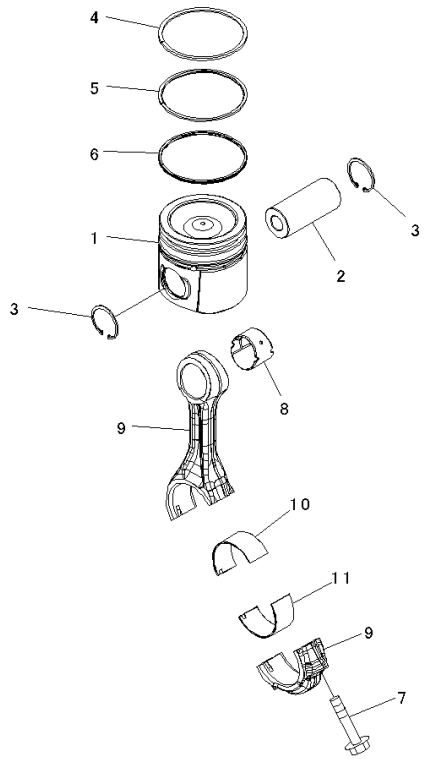


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-31-2111 | Piston | 6 | 26541137- |
| 2 | | 6754-31-2410 | Pin | 6 | 26541137- |
| 3 | | 6732-31-2420 | Ring | 12 | 26541137- |
| | | 6754-31-2010 | Ring Assembly | 6 | 26541137- |
| 4 | C1 | | • Ring, Top | 1 | 26541137- |
| 5 | C1 | | • Ring, 2nd | 1 | 26541137- |
| 6 | C1 | | • Ring, Oil | 1 | 26541137- |
| | | 6737-32-3121 | Rod Assembly | 6 | 26541137- |
| 7 | | 6732-31-3320 | • Screw | 2 | 26541137- |
| 8 | | 6732-31-3132 | • Bushing | 1 | 26541137- |
| 9 | | 6754-31-3111 | • Rod | 1 | 26541137- |
| 10 | | 6754-31-3410 | Metal,Upper | 6 | 26541137- |
| 11 | | 6732-31-3420 | Metal,Lower | 6 | 26541137- |

https://truckmanualshub.com/


# FIG. ALG00-001001 Oil Level Gauge

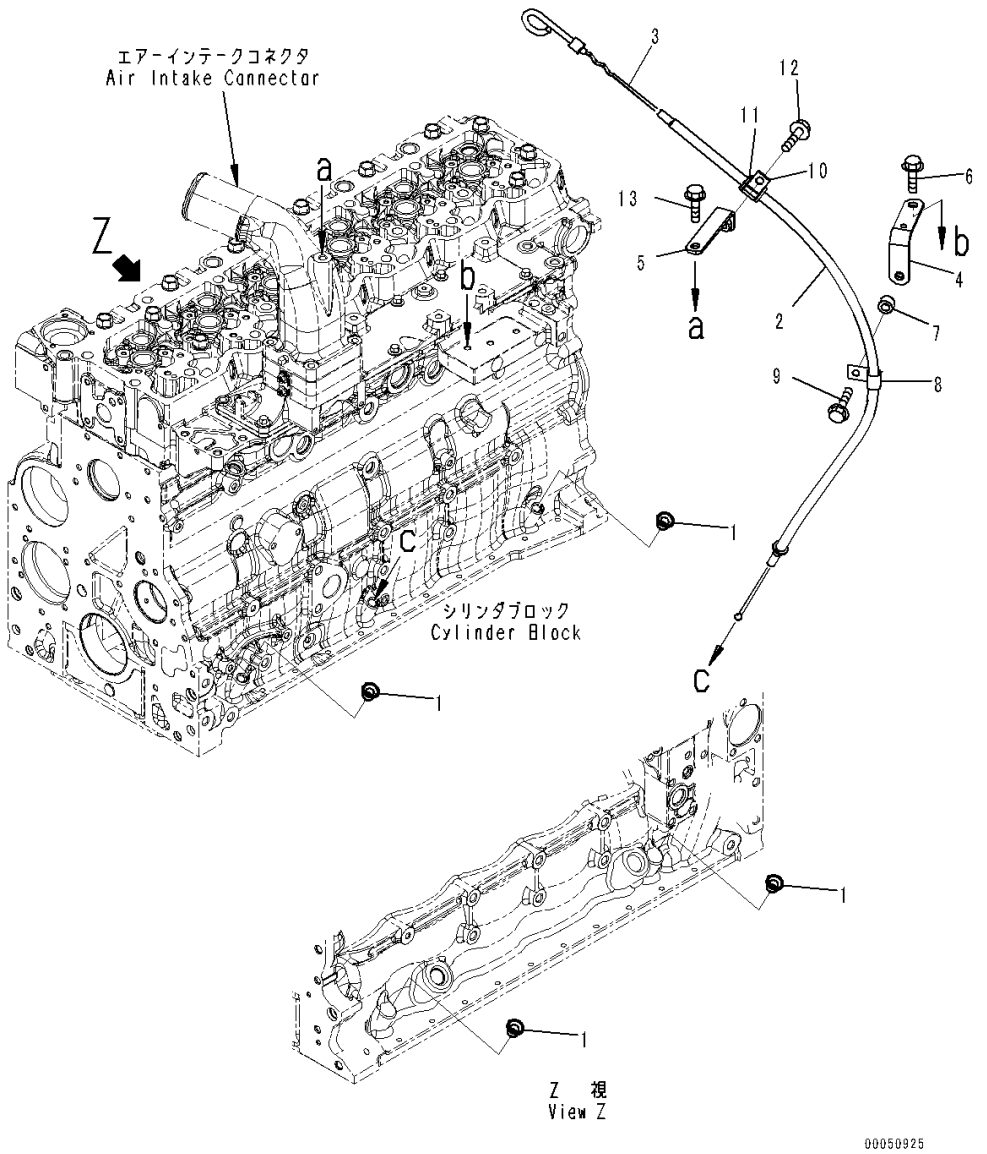


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6732-21-5530 | Plug | 4 | 26541137- |
| 2 | | 6732-21-5491 | Guide | 1 | 26541137- |
| 3 | | 6754-21-5610 | Gauge | 1 | 26541137- |
| 4 | | 6754-21-5810 | Bracket | 1 | 26541137- |
| 5 | | 6754-21-5820 | Bracket | 1 | 26541137- |
| 6 | | 6732-71-3220 | Bolt | 1 | 26541137- |
| 7 | | 6131-12-5920 | Spacer | 1 | 26541137- |
| 8 | | 04434-51208 | Clip | 1 | 26541137- |
| 9 | | 6732-21-6630 | Screw | 1 | 26541137- |
| 10 | | 04434-51708 | Clip | 1 | 26541137- |
| 11 | | 07095-20211 | Cushion | 1 | 26541137- |
| 12 | | 6732-21-3120 | Bolt | 1 | 26541137- |
| 13 | | 6735-71-3220 | Bolt | 1 | 26541137- |

https://truckmanualshub.com/

# FIG. ABB20-001001 Rear Gear Housing

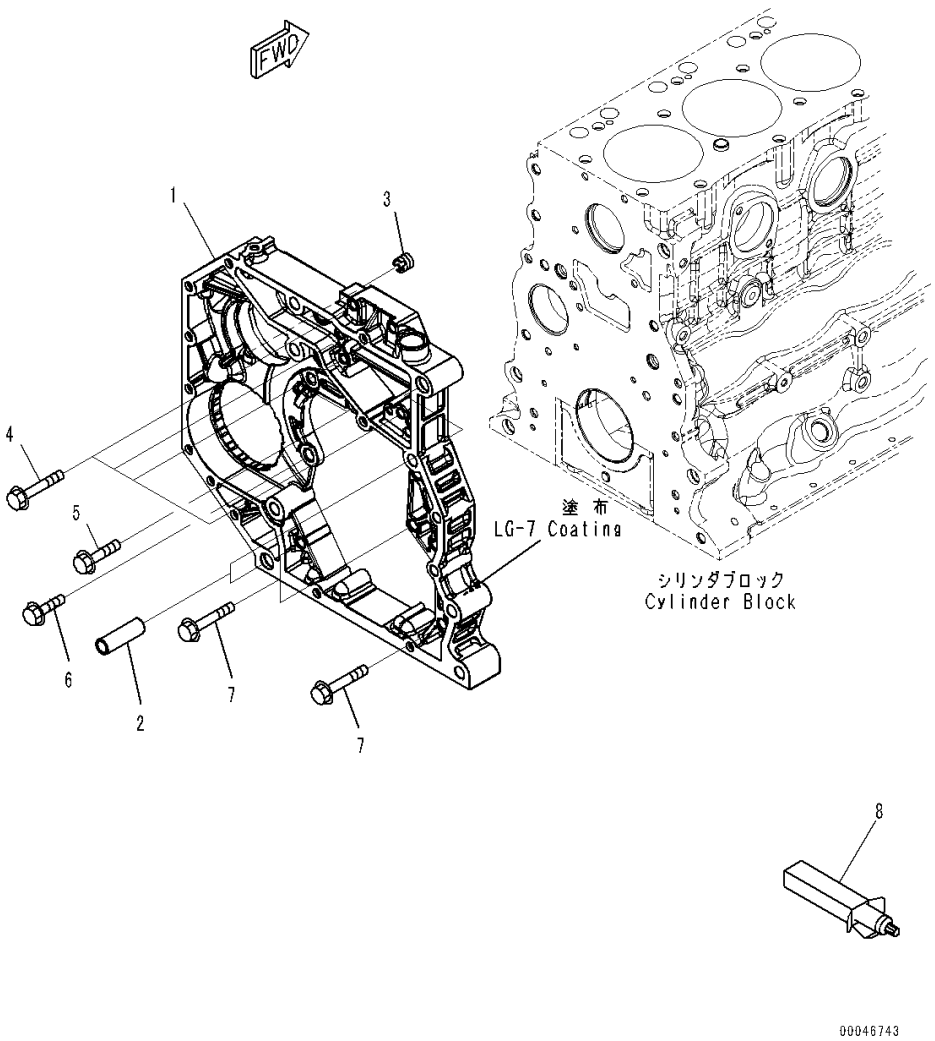



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-21-3102 | Housing Assembly, Rear Gear ..... | 1 | 26541137- |
| 1 | C1 | | • Housing, Rear Gear ..... | 1 | 26541137- |
| 2 | | 6754-21-3120 | • Pin ..... | 2 | 26541137- |
| 3 | | 6754-21-3150 | • Insert ..... | 2 | 26541137- |
| 4 | | 6735-61-2120 | Bolt..... | 4 | 26541137- |
| 5 | | 6735-61-3810 | Bolt..... | 2 | 26541137- |
| 6 | | 6732-11-1720 | Bolt..... | 1 | 26541137- |
| 7 | | 6754-21-3140 | Bolt..... | 3 | 26541137- |
| 8 | | 09920-00150 | Liquid gasket, LG-7, 150G..... | AR | 26541137- |

https://truckmanualshub.com/

# ENGINE LUBRICATING SYSTEM

https://truckmanualshub.com/

# FIG. B9999-502001 Heater Switch

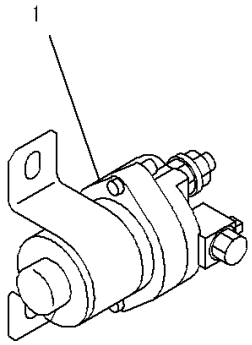



PJ6F064

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 600-815-2170 | Switch, Heater ..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. ALP00-001001 Engine Oil Pump

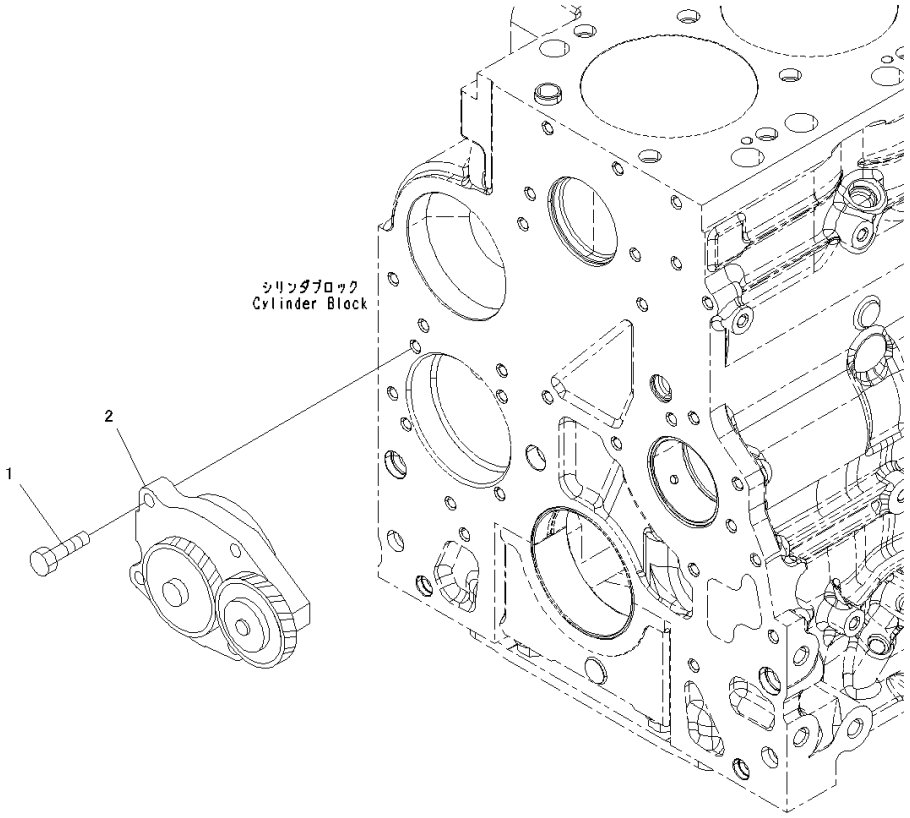


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6735-51-1120 | Bolt..... | 4 | 26541137- |
| 2 | | 6754-51-1110 | Pump Assembly, Oil..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. A3110-001001 Engine Oil Filter Bracket

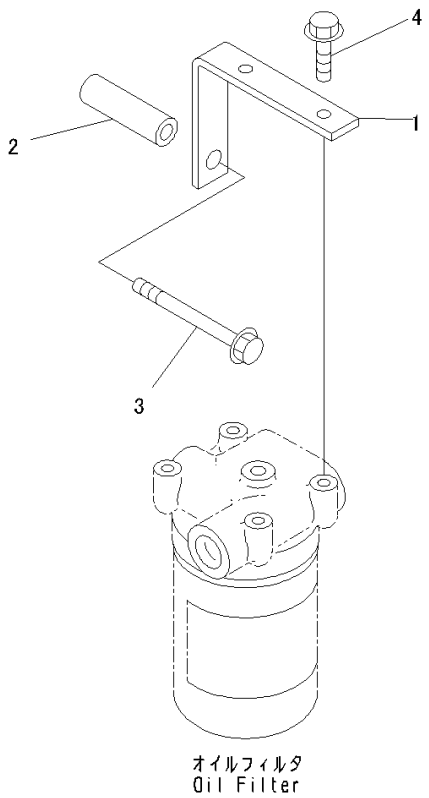


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6738-51-9950 | Bracket | 1 | 26541137- |
| 2 | | 6136-11-5120 | Spacer | 1 | 26541137- |
| 3 | | 01435-01095 | Bolt | 1 | 26541137- |
| 4 | | 01435-00820 | Bolt | 2 | 26541137- |

https://truckmanualshub.com/


# FIG. ALC00-001001 Engine Oil Cooler

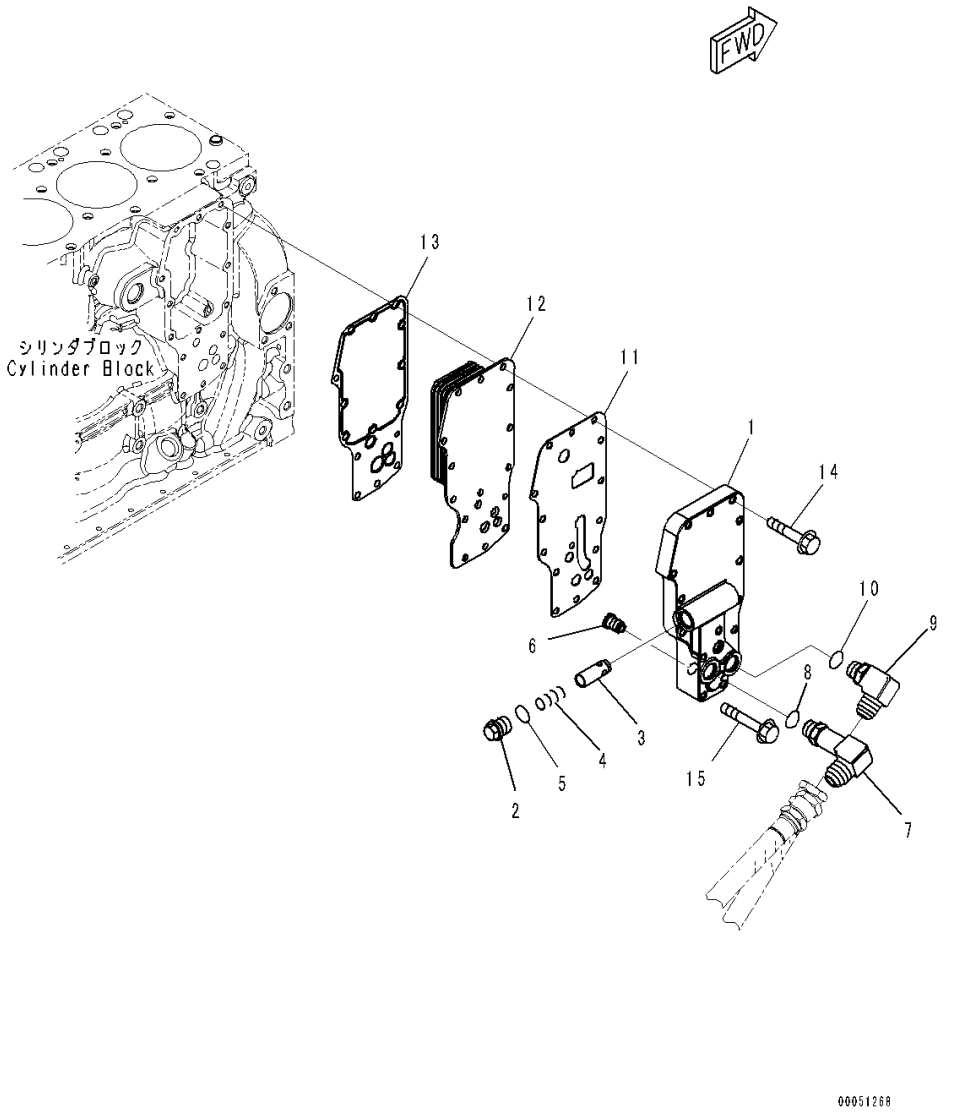


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-61-2220 | Cover, Oil Cooler | 1 | 26541137- |
| 2 | | 6735-61-2140 | Plug | 1 | 26541137- |
| 3 | | 6735-61-2160 | Plunger | 1 | 26541137- |
| 4 | | 6735-61-2190 | Spring | 1 | 26541137- |
| 5 | | 6732-51-4420 | O-ring | 1 | 26541137- |
| 6 | | 6731-61-2151 | Valve | 1 | 26541137- |
| 7 | | 6731-51-5250 | Elbow | 1 | 26541137- |
| 8 | | 6731-51-5290 | • O-ring | 1 | 26541137- |
| 9 | | 6738-51-5240 | Elbow | 1 | 26541137- |
| 10 | | 6731-51-5290 | • O-ring | 1 | 26541137- |
| 11 | | 6754-51-4440 | Gasket | 1 | 26541137- |
| 12 | | 6754-61-2110 | Core, Cooler | 1 | 26541137- |
| 13 | | 6754-61-2320 | Gasket | 1 | 26541137- |
| 14 | | 6735-61-2120 | Bolt | 11 | 26541137- |
| 15 | | 6736-21-3230 | Bolt | 4 | 26541137- |

https://truckmanualshub.com/

# FIG. ALF00-001001 Engine Oil Filter And Piping

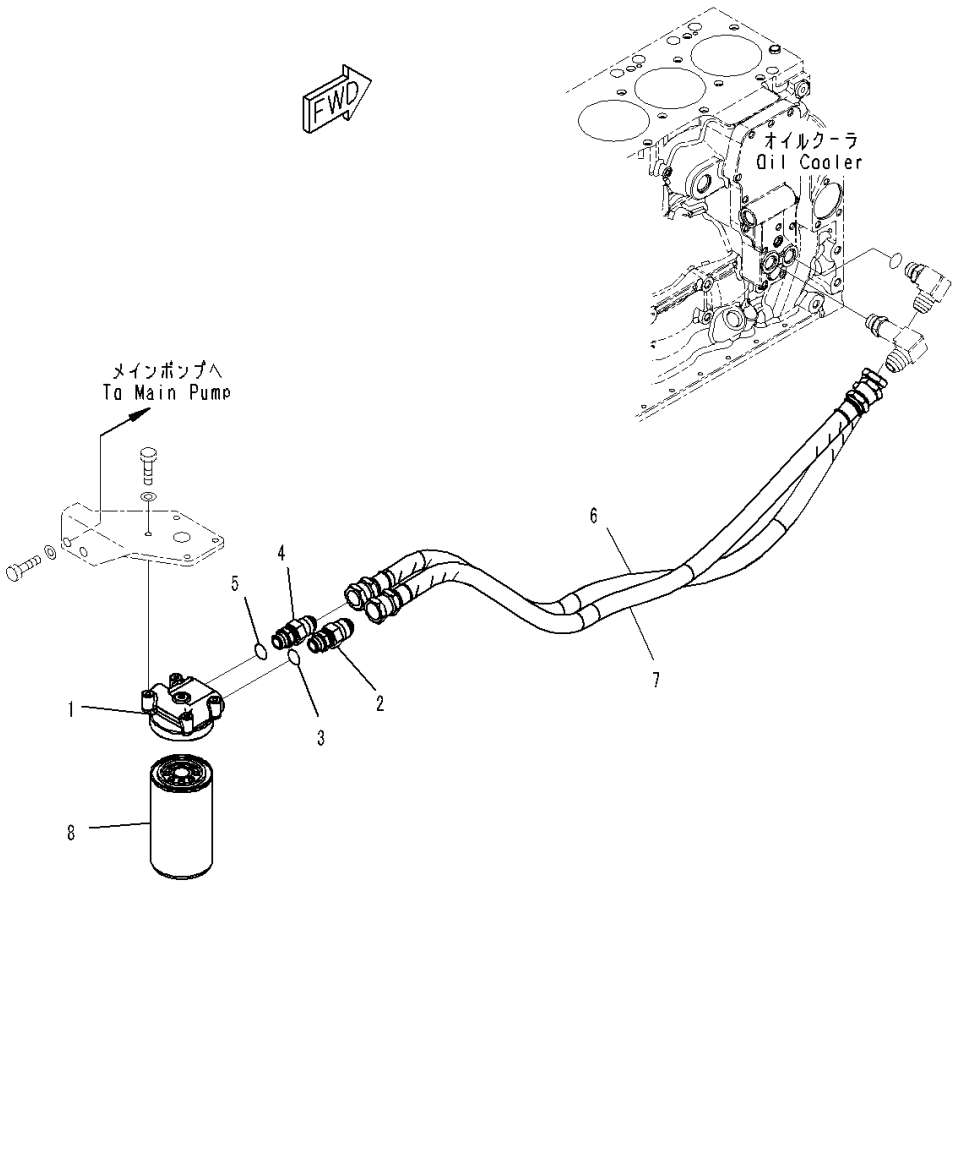



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-52-5310 | Head | 1 | 26541137- |
| 2 | | 6731-51-5260 | Nipple | 1 | 26541137- |
| 3 | | 6731-51-5290 | • O-ring | 1 | 26541137- |
| 4 | | 6738-51-5260 | Nipple | 1 | 26541137- |
| 5 | | 6731-51-5290 | • O-ring | 1 | 26541137- |
| 6 | | 6754-51-9810 | Hose | 1 | 26541137- |
| 7 | | 6754-51-9910 | Hose | 1 | 26541137- |
| 8 | | 6736-51-5142 | Cartridge, oil filler | 1 | 26541137- |

https://truckmanualshub.com/

# ENGINE FUEL SYSTEM

https://truckmanualshub.com/


# FIG. A4019-001001 Fuel Injection Pump

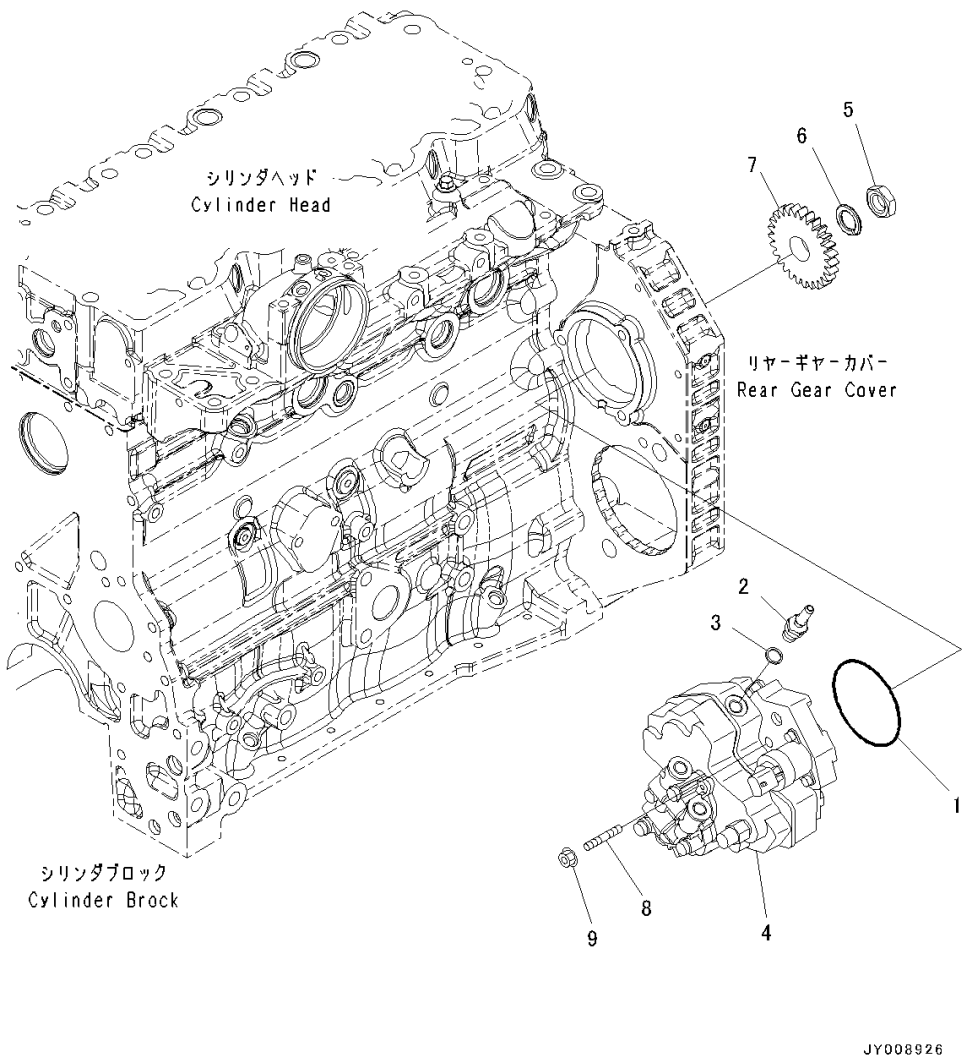


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-71-1012 | Fuel Supply Pump Assembly | 1 | 26541137- |
| | | 6754-72-1012 | • Pump Assembly | 1 | 26541137- |
| 1 | | 6754-71-1320 | •• O-ring | 1 | 26541137- |
| 2 | | 6754-71-1330 | •• Connector | 1 | 26541137- |
| 3 | | 6754-71-5350 | •• Washer | 1 | 26541137- |
| 4 | C1 | | •• Pump | 1 | 26541137- |
| 5 | | 6754-71-1340 | •• Nut | 1 | 26541137- |
| 6 | | 6754-71-1350 | •• Washer, Spring | 1 | 26541137- |
| 7 | | 6754-71-3110 | • Gear | 1 | 26541137- |
| 8 | | 6754-71-3130 | Stud | 3 | 26541137- |
| 9 | | 6732-71-3210 | Nut | 3 | 26541137- |

https://truckmanualshub.com/


# FIG. A4719-001001 Fuel Injection Controller

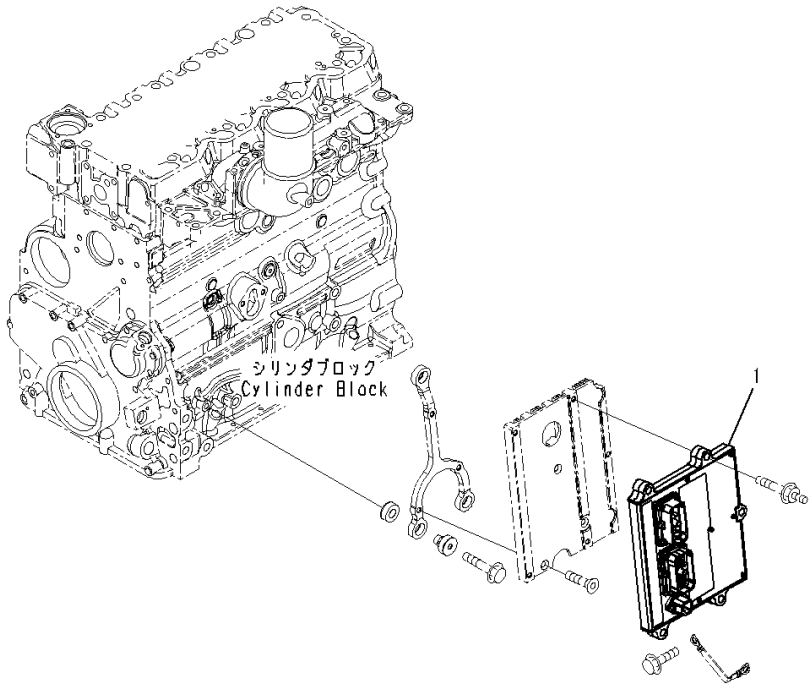


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 600-467-1100 | Controller Assembly..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. A4219-001001 Fuel Injector

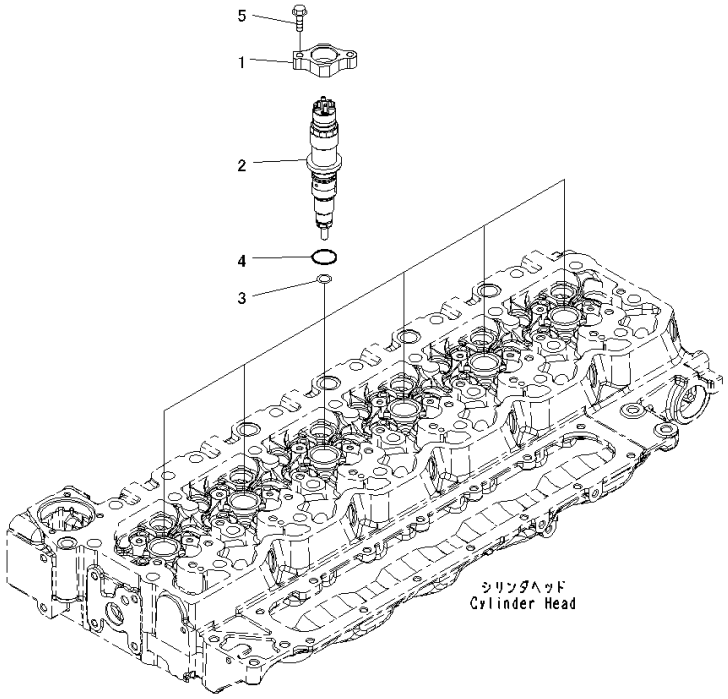


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-11-3011 | Injector Assembly | 6 | 26541137- |
| 1 | C1 | | • Clamp | 1 | 26541137- |
| 2 | C1 | | • Injector | 1 | 26541137- |
| 3 | | 6754-11-3130 | •• Gasket | 1 | 26541137- |
| 4 | | 6754-11-3140 | •• O-ring | 1 | 26541137- |
| 5 | | 6742-01-2630 | Bolt | 12 | 26541137- |

https://truckmanualshub.com/


# FIG. AFT00-001001 Fuel Piping

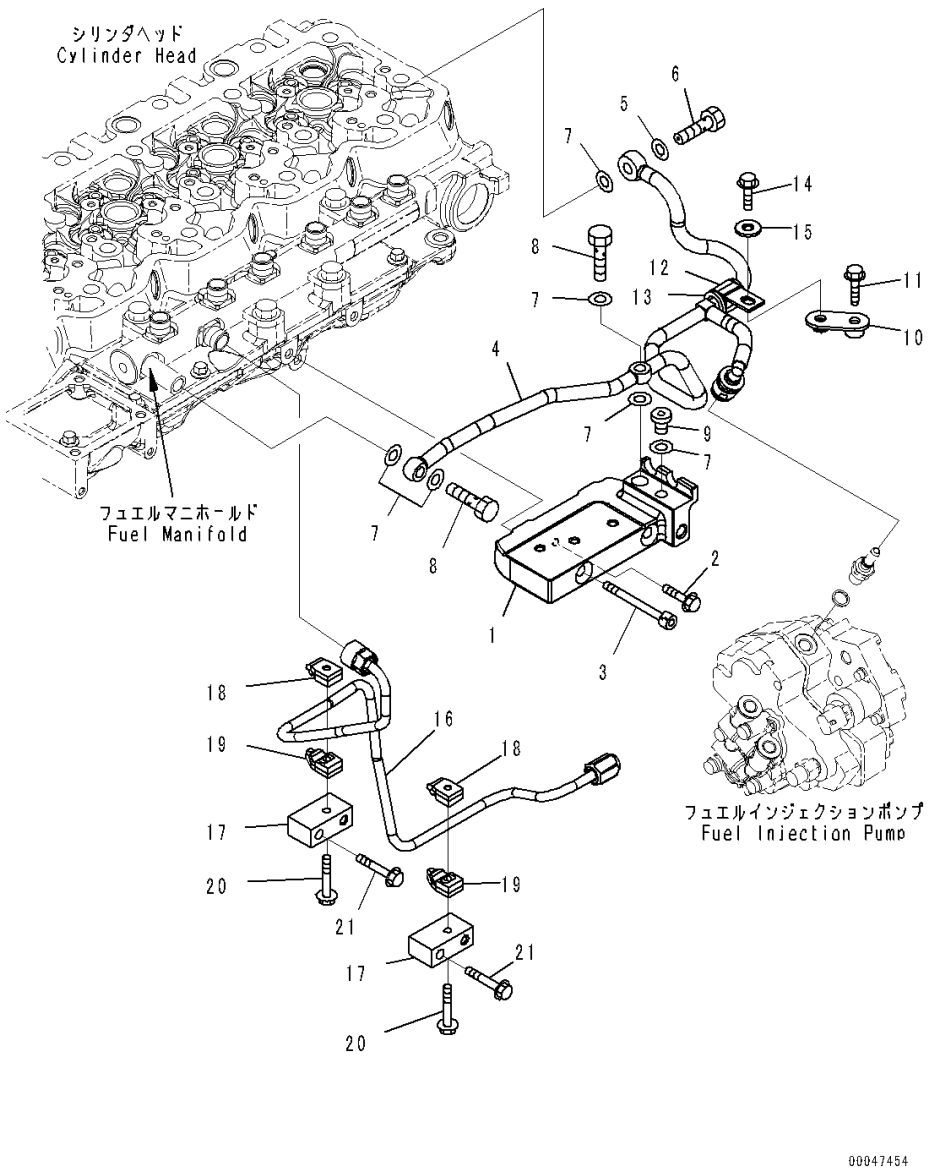


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-71-5410 | Connector | 1 | 26541137- |
| 2 | | 6732-61-6140 | Bolt | 1 | 26541137- |
| 3 | | 6736-81-8730 | Bolt | 2 | 26541137- |
| 4 | | 6754-71-5420 | Tube | 1 | 26541137- |
| 5 | | 6735-71-3821 | Seal | 1 | 26541137- |
| 6 | | 6754-71-5430 | Valve, Check | 1 | 26541137- |
| 7 | | 07005-01212 | Seal, Washer | 6 | 26541137- |
| 8 | | 6732-71-6510 | Bolt | 2 | 26541137- |
| 9 | | 6754-71-5150 | Plug, Threaded | 1 | 26541137- |
| 10 | | 6754-71-5450 | Bracket | 1 | 26541137- |
| 11 | | 6732-21-6630 | Screw | 1 | 26541137- |
| 12 | | 04434-51708 | Clip | 1 | 26541137- |
| 13 | | 07095-20211 | Cushion | 1 | 26541137- |
| 14 | | 6732-21-3120 | Bolt | 1 | 26541137- |
| 15 | | 154-61-16570 | Washer | 1 | 26541137- |
| 16 | | 6754-71-5130 | Tube | 1 | 26541137- |
| 17 | | 6754-71-5140 | Plate | 2 | 26541137- |
| 18 | | 6217-71-6670 | Clamp | 2 | 26541137- |
| 19 | | 6217-71-6660 | Clamp | 2 | 26541137- |
| 20 | | 6733-71-5830 | Bolt | 2 | 26541137- |
| 21 | | 6732-61-3110 | Bolt | 2 | 26541137- |

https://truckmanualshub.com/


# FIG. AFF10-003001 Fuel Filter

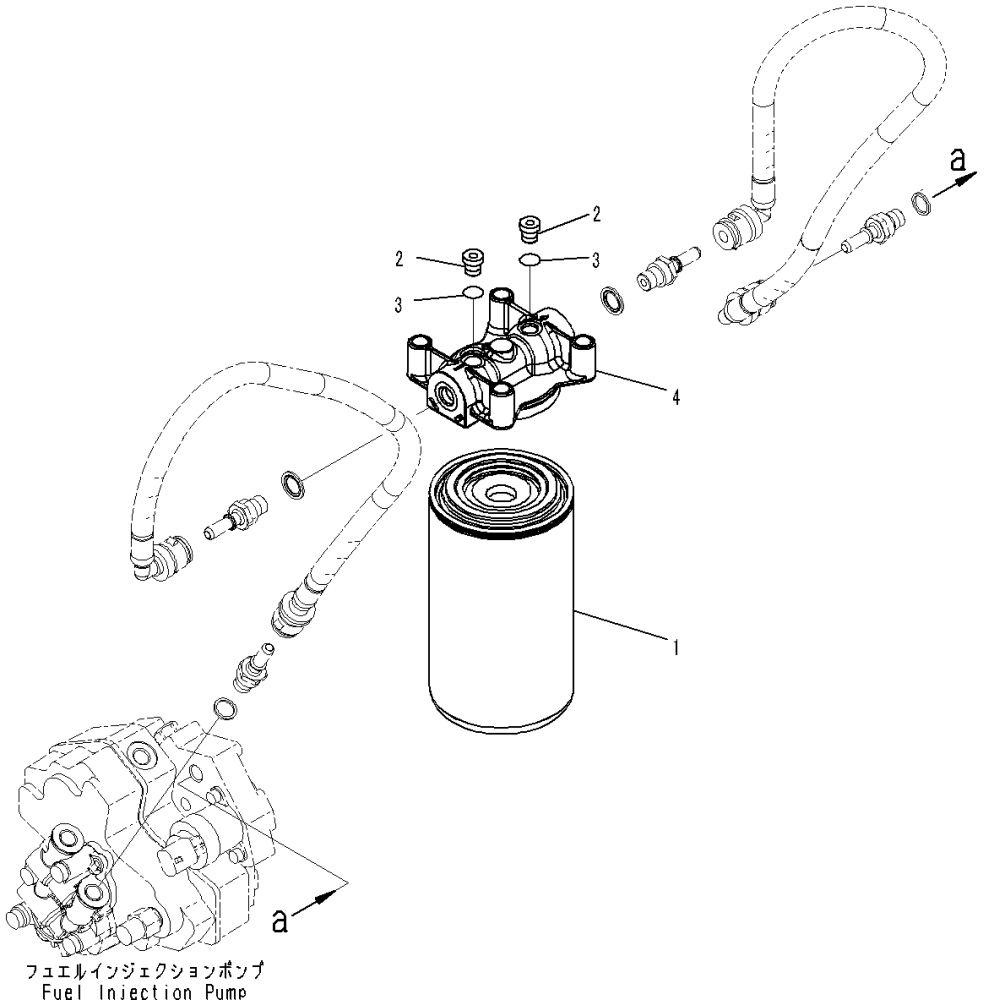


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-71-6301 | Filter Assembly ..... | 1 | 26541137- |
| 1 | C1 | | • Filter ..... | 1 | 26541137- |
| | | 6732-21-1960 | • Plug Assembly..... | 2 | 26541137- |
| 2 | | 6215-81-9510 | •• Plug..... | 1 | 26541137- |
| 3 | | 6215-81-9710 | •• O-ring..... | 1 | 26541137- |
| 4 | | 6754-71-6340 | • Head..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. B9999-501001 Water Separator

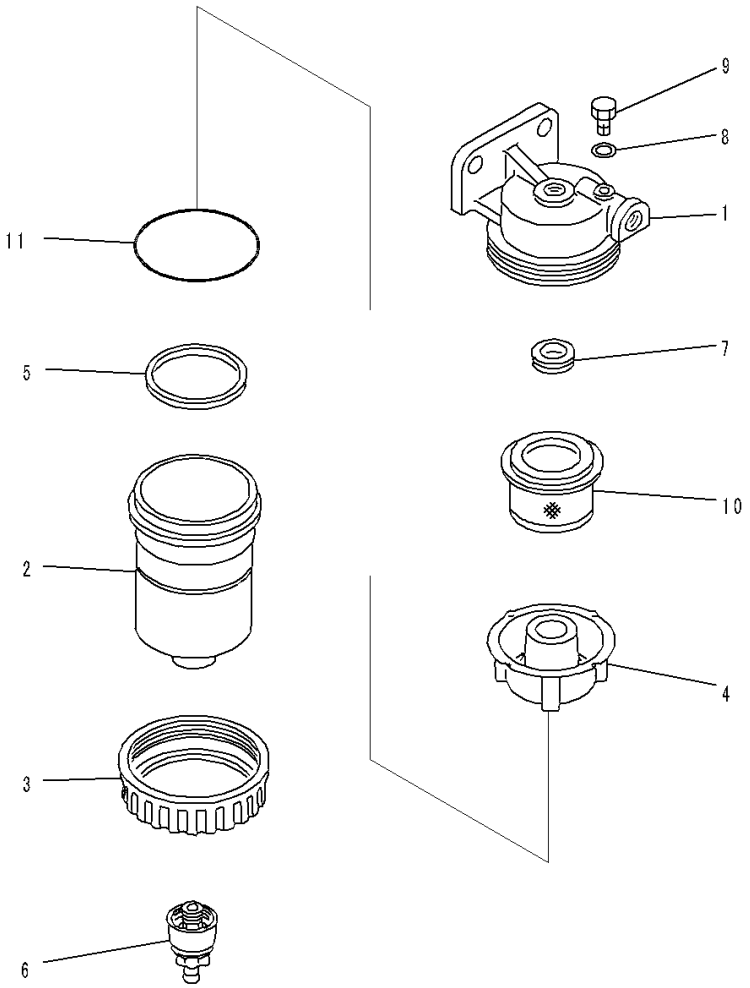


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 600-311-9732 | Water Separator | 1 | 26541137- |
| 1 | | 600-311-9912 | • Cover | 1 | 26541137- |
| 2 | | 600-311-9921 | • Case | 1 | 26541137- |
| 3 | | 600-311-9931 | • Nut | 1 | 26541137- |
| 4 | | 600-311-9941 | • Baffle | 1 | 26541137- |
| 5 | | 600-311-9950 | • Ring | 1 | 26541137- |
| 6 | | 600-311-9760 | • Plug | 1 | 26541137- |
| 7 | | 600-311-9961 | • Gasket | 1 | 26541137- |
| 8 | | 07005-00812 | • Gasket | 1 | 26541137- |
| 9 | | 6110-73-6231 | • Plug | 1 | 26541137- |
| 10 | | 600-311-9971 | • Screen | 1 | 26541137- |
| 11 | | 600-311-9490 | • O-ring | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AFF20-001001 Fuel Filter Piping

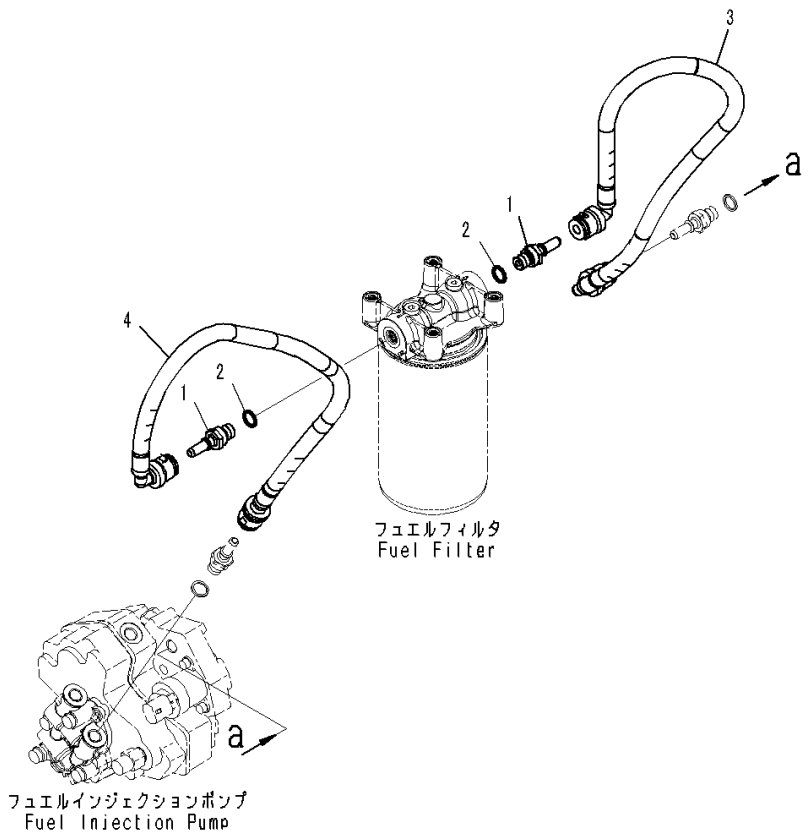


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-71-5340 | Connector | 2 | 26541137- |
| 2 | | 6754-71-5350 | Washer | 2 | 26541137- |
| 3 | | 6754-71-9910 | Hose | 1 | 26541137- |
| 4 | | 6754-71-9920 | Hose | 1 | 26541137- |

https://truckmanualshub.com/

# FIG. AFP10-001001 Fuel System Related Parts

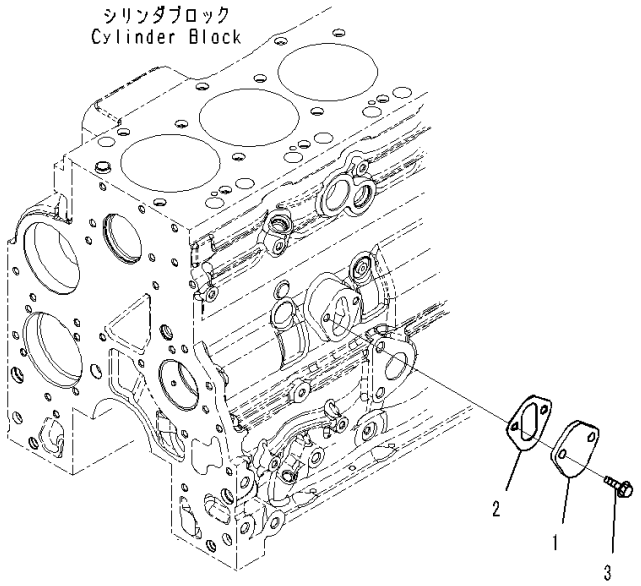



00046762

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6736-71-5811 | Plate | 1 | 26541137- |
| 2 | | 6735-61-6411 | Gasket | 1 | 26541137- |
| 3 | | 6732-71-3220 | Bolt | 2 | 26541137- |

https://truckmanualshub.com/


# FIG. AFS20-001001 Fuel System Cover

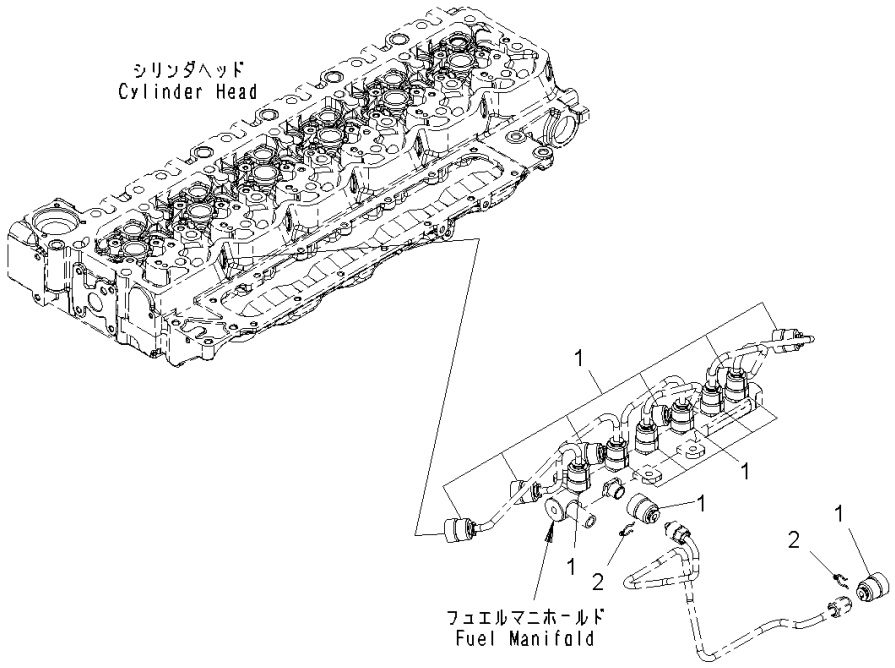


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-71-9710 | Cover | 14 | 26541137- |
| 2 | | 6217-71-5770 | Clamp | 14 | 26541137- |

https://truckmanualshub.com/


# FIG. APP10-001001 Parts Performance, Camshaft

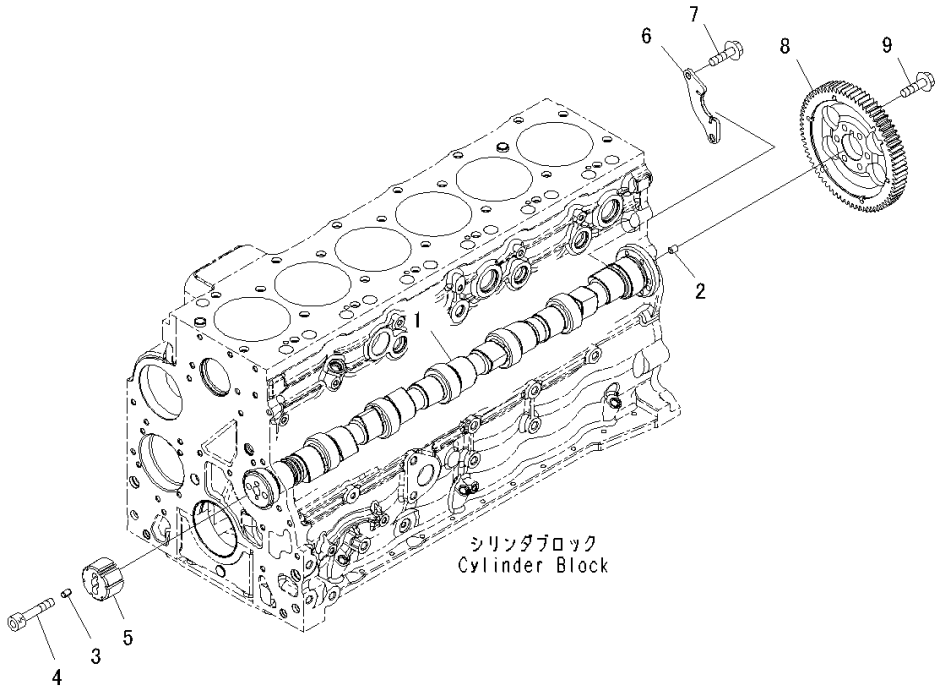


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-41-1100 | Camshaft Assembly | 1 | 26541137- |
| | | 6754-41-1170 | • Camshaft Assembly | 1 | 26541137- |
| 1 | C1 | | •• Camshaft | 1 | 26541137- |
| 2 | C1 | | •• Pin, Dowel | 1 | 26541137- |
| 3 | | 6754-41-1120 | • Ring | 1 | 26541137- |
| 4 | | 6754-41-1130 | • Bolt | 2 | 26541137- |
| 5 | | 6754-41-1140 | • Ring | 1 | 26541137- |
| 6 | | 6754-41-1160 | Support | 1 | 26541137- |
| 7 | | 6736-21-5310 | Bolt | 2 | 26541137- |
| 8 | | 6754-41-1150 | Gear | 1 | 26541137- |
| 9 | | 01435-00825 | Bolt | 6 | 26541137- |

https://truckmanualshub.com/


# FIG. APP10-001002 Parts Performance, Common Rail

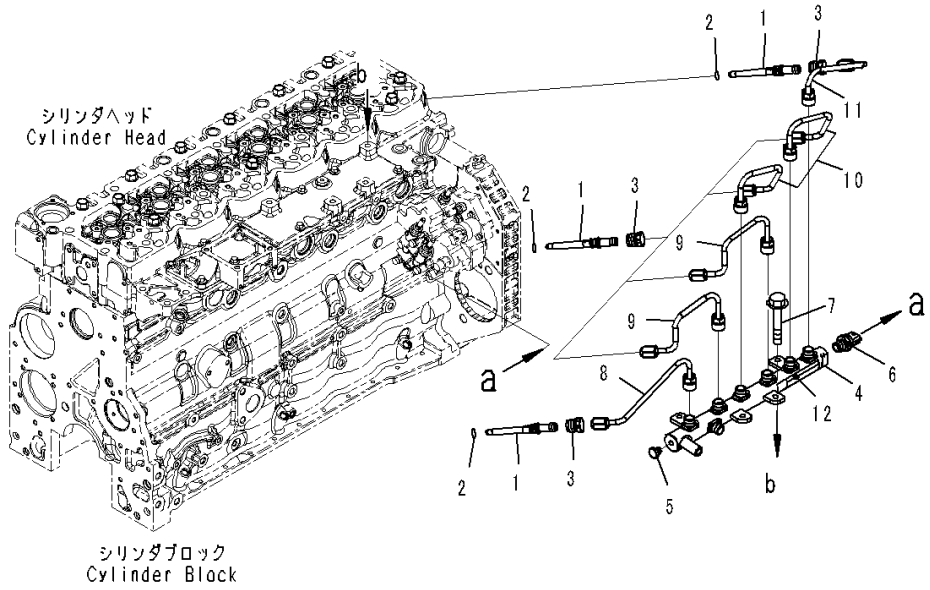


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-71-5510 | Connector Assembly | 6 | 26541137- |
| 1 | C1 | | • Connector | 1 | 26541137- |
| 2 | | 6754-71-5530 | • O-ring | 1 | 26541137- |
| 3 | | 6754-71-5540 | Retainer | 6 | 26541137- |
| | | 6754-71-1210 | Rail Assembly, common | 1 | 26541137- |
| 4 | C1 | | • Common Rail | 1 | 26541137- |
| 5 | | 6754-72-1220 | • Valve | 1 | 26541137- |
| 6 | | 6754-72-1210 | • Sensor | 1 | 26541137- |
| 7 | | 6733-11-4150 | Bolt | 4 | 26541137- |
| 8 | | 6754-71-5210 | Tube, No.1 | 1 | 26541137- |
| 9 | | 6754-71-5220 | Tube, No2,3 | 2 | 26541137- |
| 10 | | 6754-71-5230 | Tube, No4,5 | 2 | 26541137- |
| 11 | | 6754-71-5240 | Tube, No.6 | 1 | 26541137- |
| 12 | | 6754-71-1991 | Decal | 1 | 26541137- |

https://truckmanualshub.com/

# FIG. B9999-505001 Fuel Pre-Filter

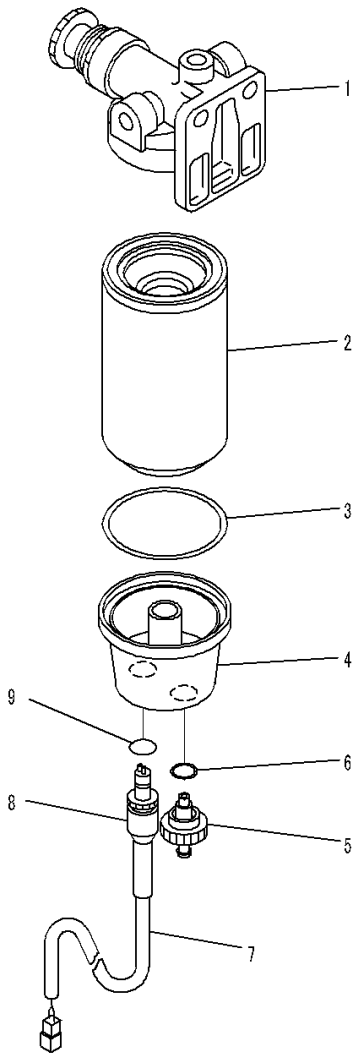



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-71-7402 | Filter Assembly | 1 | 26541137- |
| 1 | | 6754-71-7200 | • Head | 1 | 26541137- |
| | | 600-311-3602 | • Filter Assembly | 1 | 26541137- |
| 2 | C1 | | •• Cartridge | 1 | 26541137- |
| 3 | | 600-311-3630 | •• Seal | 1 | 26541137- |
| 4 | | 600-311-3640 | •• Bowl | 1 | 26541137- |
| | | 600-311-3660 | •• Valve Assembly | 1 | 26541137- |
| 5 | | 600-311-3711 | ••• Valve | 1 | 26541137- |
| 6 | | 600-311-3670 | ••• Seal | 1 | 26541137- |
| | | 600-311-3722 | •• Sensor | 1 | 26541137- |
| 7 | | 600-311-3730 | ••• Tube | 1 | 26541137- |
| 8 | | 600-311-3681 | ••• Sensor | 1 | 26541137- |
| 9 | | 600-311-3690 | ••• O-ring | 1 | 26541137- |

# ENGINE COOLING SYSTEM

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. AFA10-003001 Cooling Fan Drive Pulley

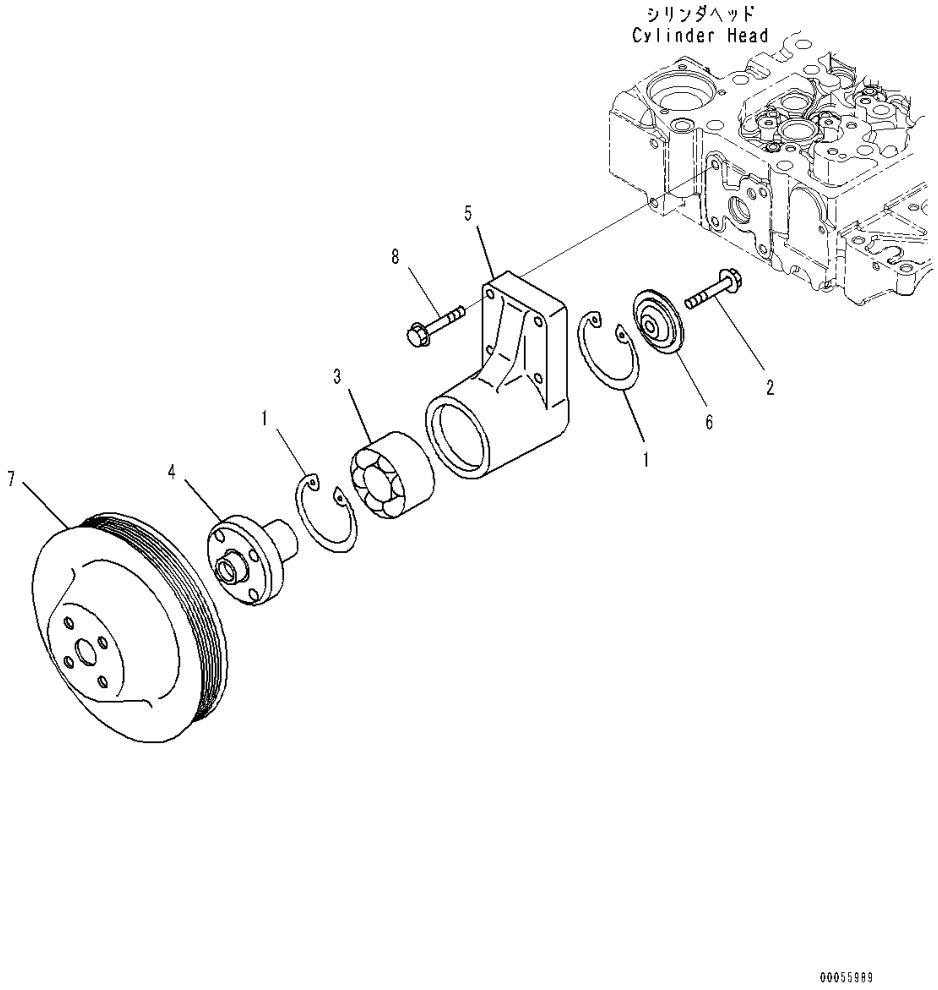


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6732-61-3120 | Support Assembly | 1 | 26541137- |
| 1 | | 6732-61-3450 | • Ring, Snap | 2 | 26541137- |
| 2 | | 6732-61-3440 | • Bolt | 1 | 26541137- |
| 3 | | 6732-61-3420 | • Bearing, Ball | 1 | 26541137- |
| 4 | | 6732-61-3410 | • Hub | 1 | 26541137- |
| 5 | C1 | | • Support | 1 | 26541137- |
| 6 | | 6732-61-3430 | • Retainer | 1 | 26541137- |
| 7 | | 6738-61-3150 | Pulley, D=182mm | 1 | 26541137- |
| 8 | | 6732-61-3170 | Bolt | 4 | 26541137- |

https://truckmanualshub.com/


# FIG. AFA10-004001 Cooling Fan Drive Pulley, High Speed Fan Spec.

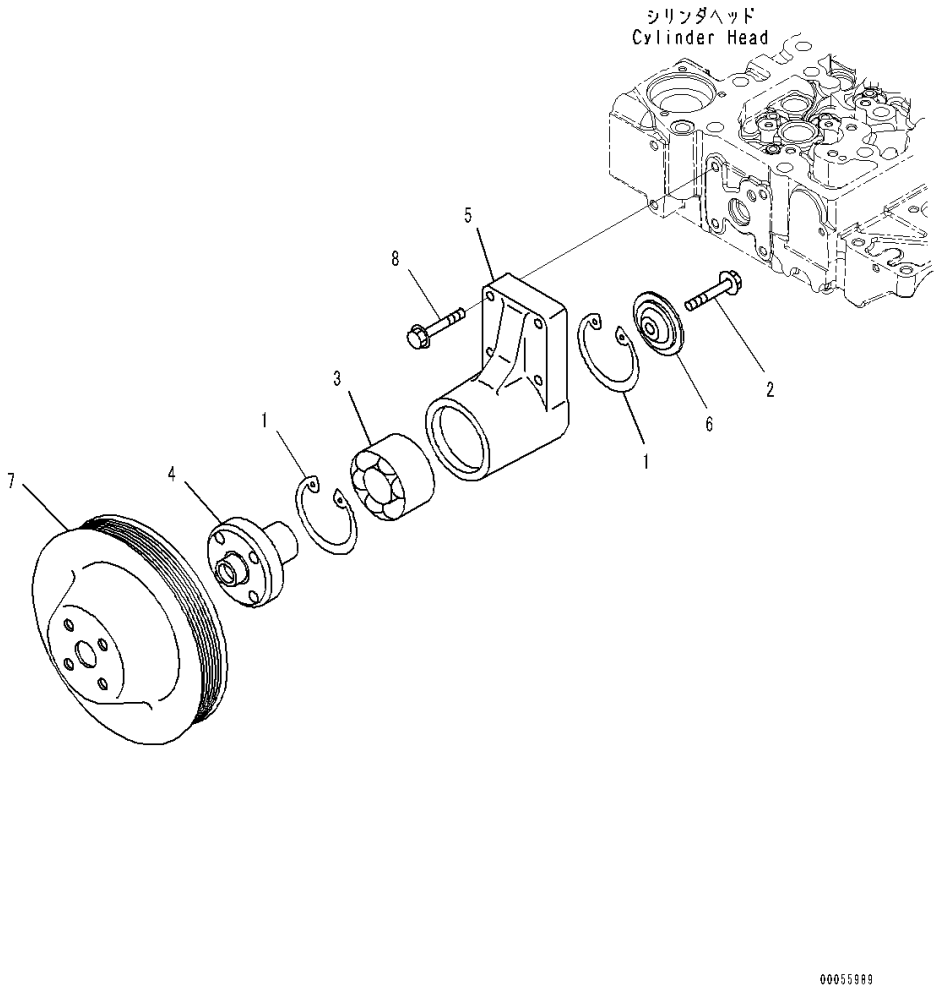


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6732-61-3120 | Support Assembly | 1 | 26541137- |
| 1 | | 6732-61-3450 | • Ring, Snap | 2 | 26541137- |
| 2 | | 6732-61-3440 | • Bolt | 1 | 26541137- |
| 3 | | 6732-61-3420 | • Bearing, Ball | 1 | 26541137- |
| 4 | | 6732-61-3410 | • Hub | 1 | 26541137- |
| 5 | C1 | | • Support | 1 | 26541137- |
| 6 | | 6732-61-3430 | • Retainer | 1 | 26541137- |
| 7 | | 6732-61-3750 | Pulley, D=158mm | 1 | 26541137- |
| 8 | | 6732-61-3170 | Bolt | 3 | 26541137- |

https://truckmanualshub.com/


# FIG. A5030-001001 Cooling Fan

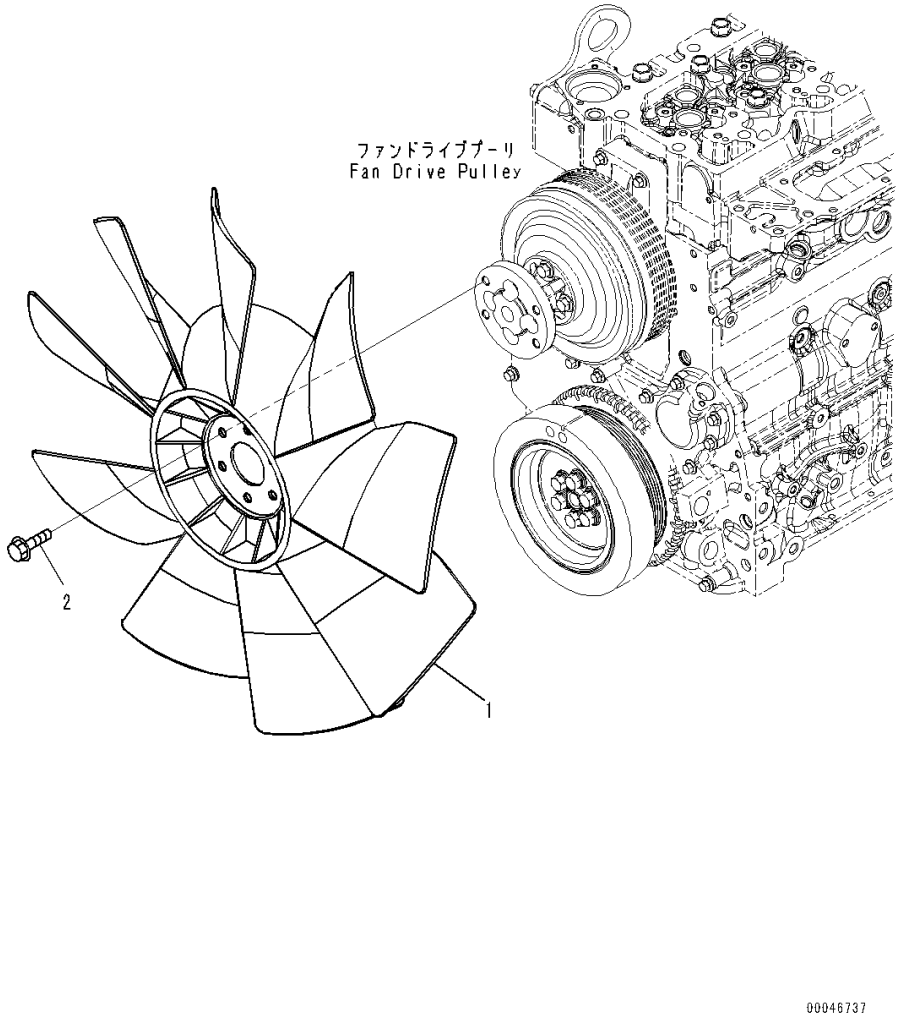


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 600-625-7620 | Fan | 1 | 26541137- |
| 2 | | 01435-01020 | Bolt | 4 | 26541137- |

https://truckmanualshub.com/


# FIG. ASP00-001001 Cooling Fan Spacer

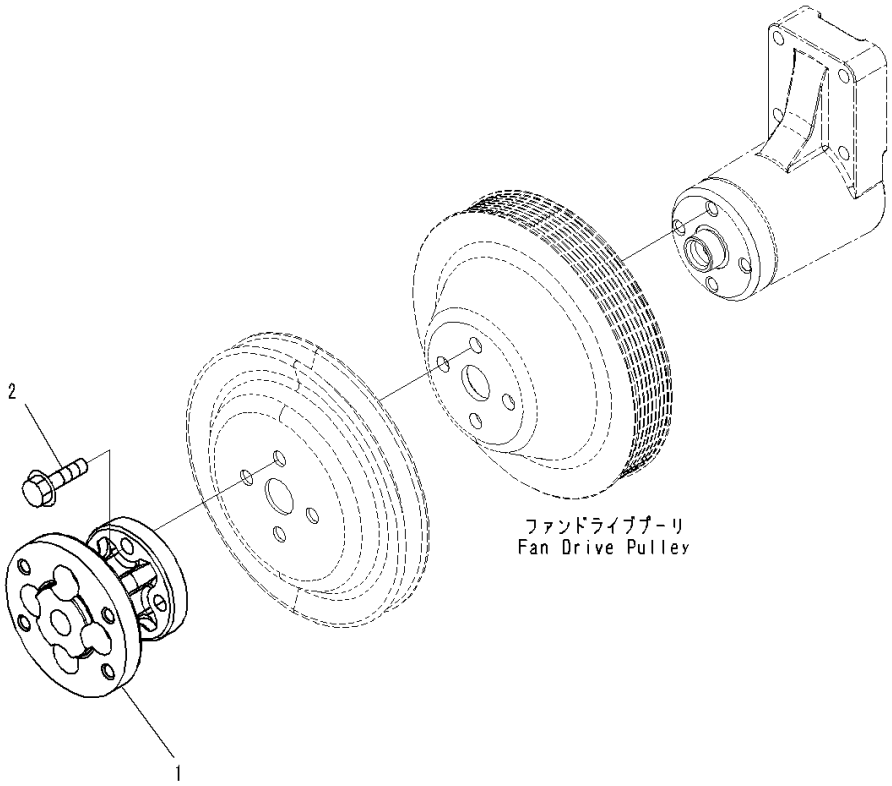


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6732-61-3610 | Spacer | 1 | 26541137- |
| 2 | | 01435-01035 | Bolt | 4 | 26541137- |

https://truckmanualshub.com/


# FIG. AWP10-005001 Cooling Fan Belt, 35Amp.

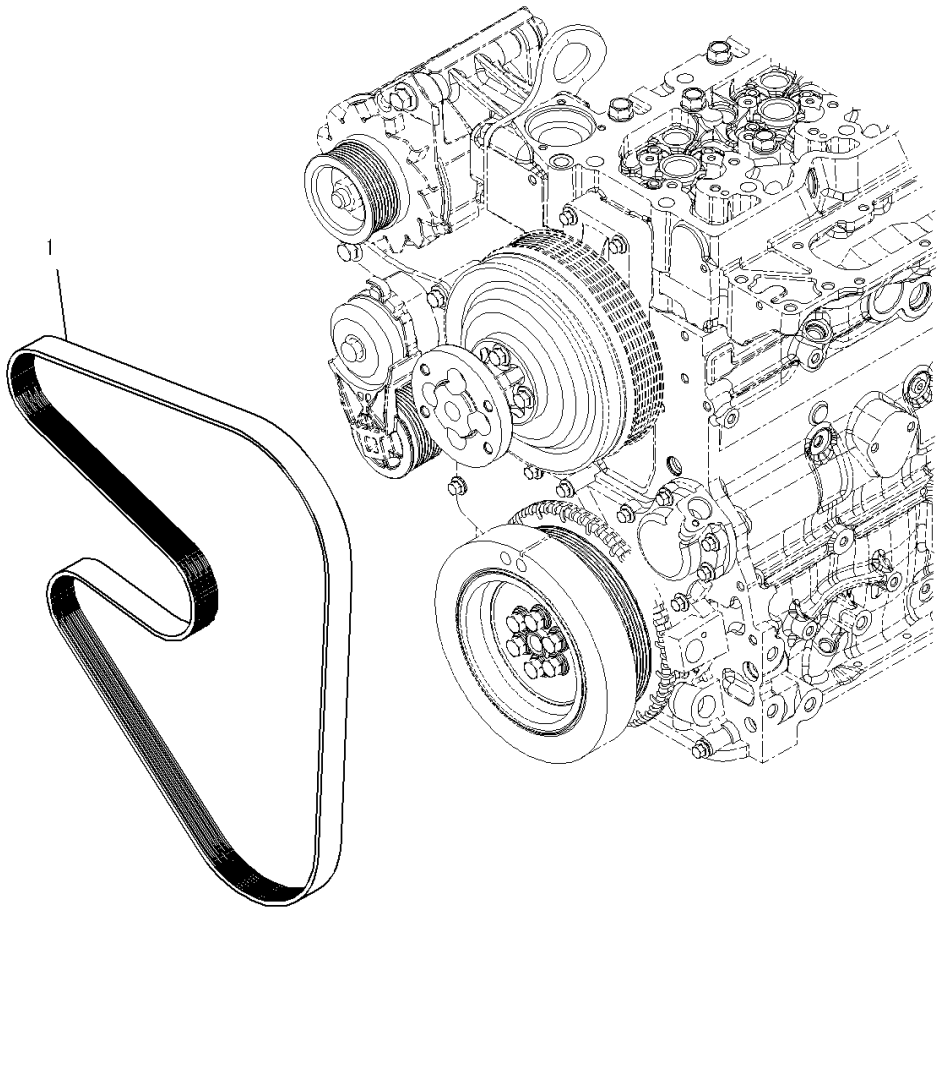


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-61-3810 | Belt, L=1742mm..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AWP20-001001 Cooling Fan Belt Tensioner

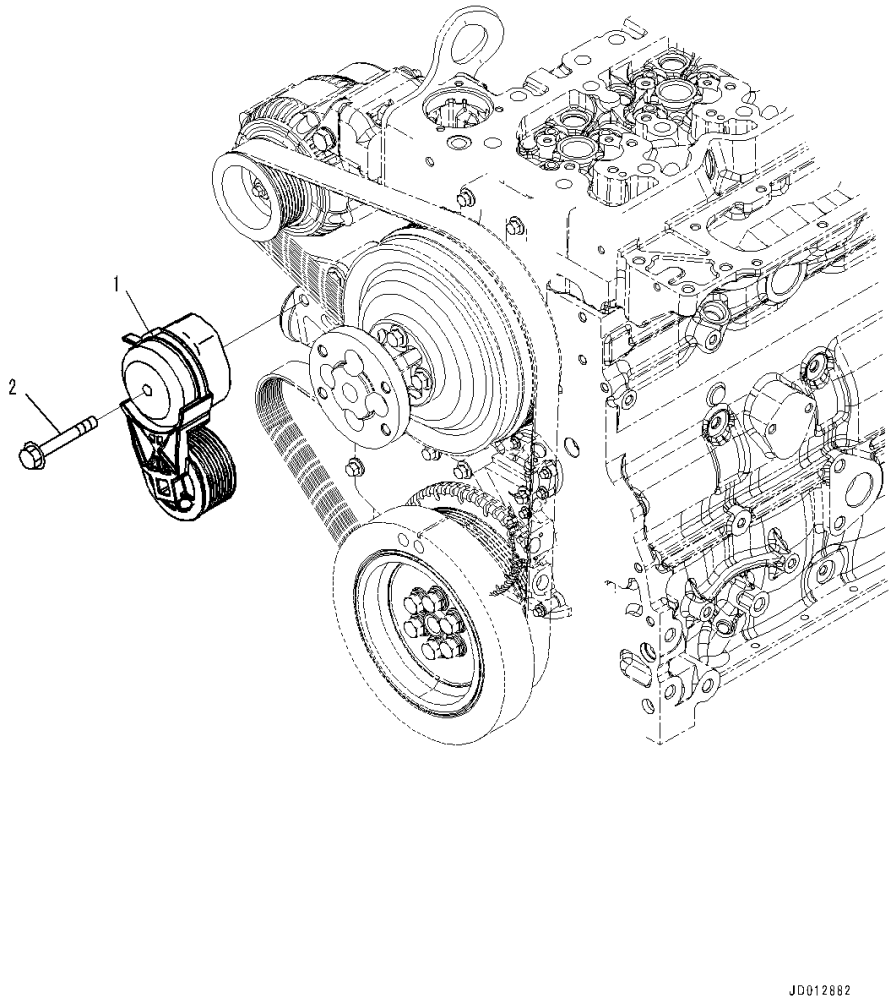


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-61-4111 | Tensioner, Belt..... | 1 | 26541137- |
| 2 | | 6731-21-6220 | Bolt..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AWP00-001001 Water Pump, Mounting

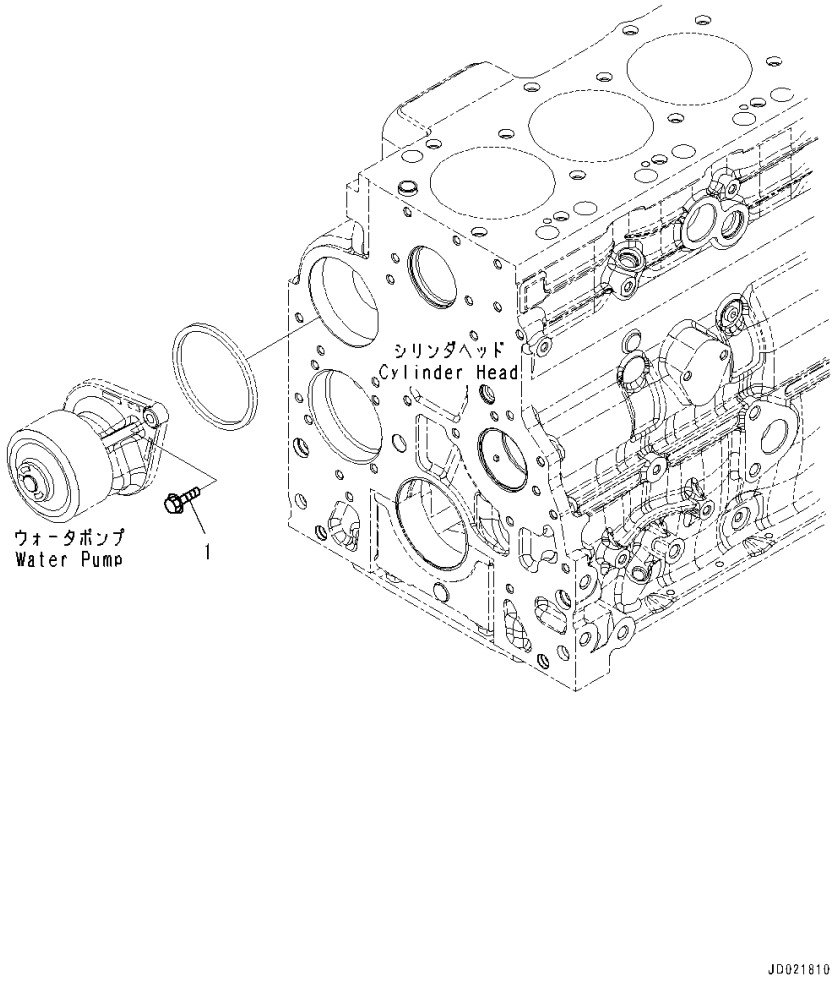


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01435-00825 | Bolt, for shipping ..... | 2 | 26541137- |

https://truckmanualshub.com/


# FIG. A5019-001001 Water Pump

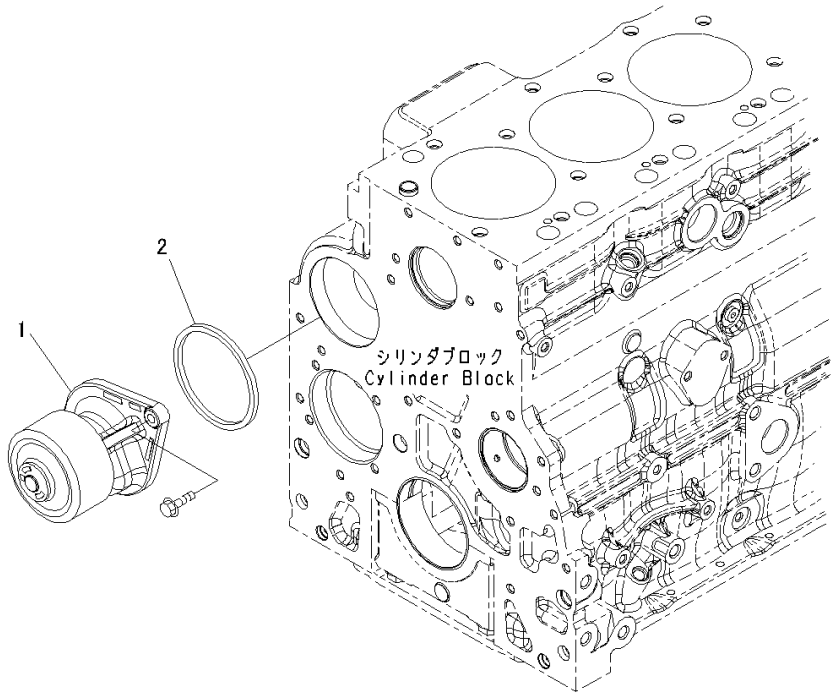


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-61-1010 | Pump Kit ..... | 1 | 26541137- |
| 1 | | 6754-61-1100 | • Pump Assembly ..... | 1 | 26541137- |
| 2 | | 6736-61-1520 | • Seal ..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AWO00-001001 Water Outlet Connector

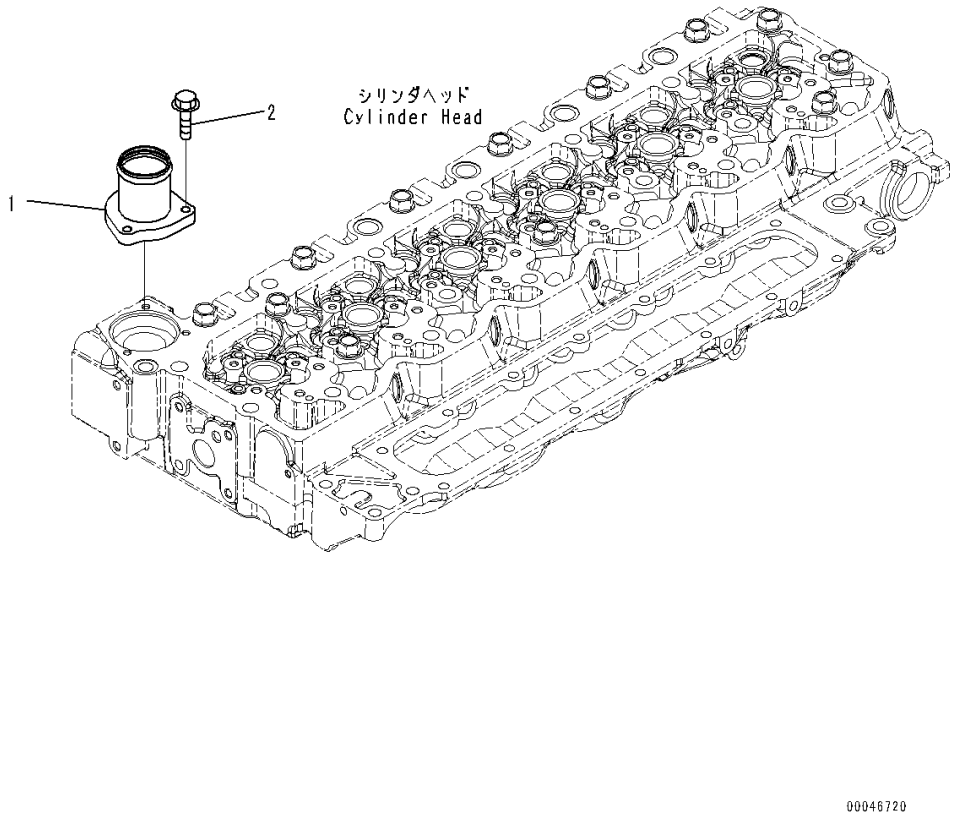


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-61-6340 | Connector, Outlet..... | 1 | 26541137- |
| 2 | | 6735-71-5190 | Bolt..... | 3 | 26541137- |

https://truckmanualshub.com/


# FIG. AWI10-001001 Water Inlet Connector

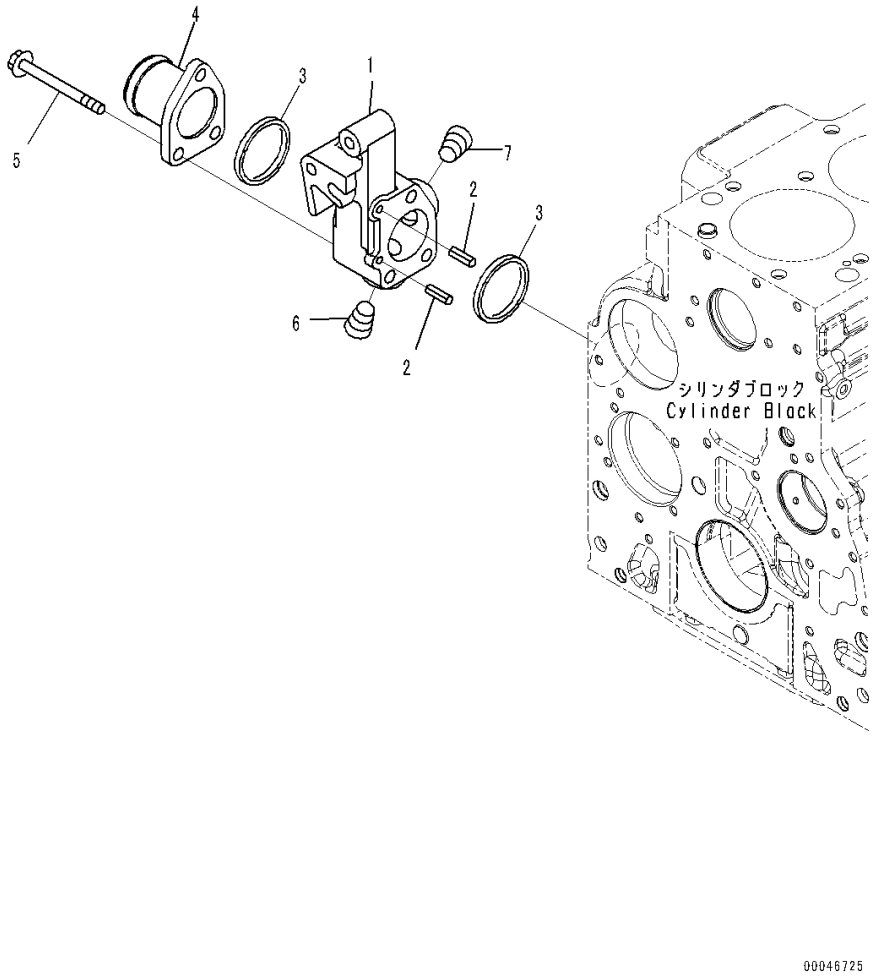


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6737-62-6220 | Connector Assembly | 1 | 26541137- |
| 1 | C1 | | • Connection | 1 | 26541137- |
| 2 | | 6737-32-2110 | • Pin | 2 | 26541137- |
| 3 | | 6732-61-6131 | Seal Ring | 2 | 26541137- |
| 4 | | 6754-61-6130 | Connector | 1 | 26541137- |
| 5 | | 6731-21-6220 | Bolt | 3 | 26541137- |
| 6 | | 6732-11-1910 | Plug | 1 | 26541137- |
| 7 | | 6732-11-1920 | Plug | 1 | 26541137- |

https://truckmanualshub.com/

# FIG. AEC00-001001 Thermostat

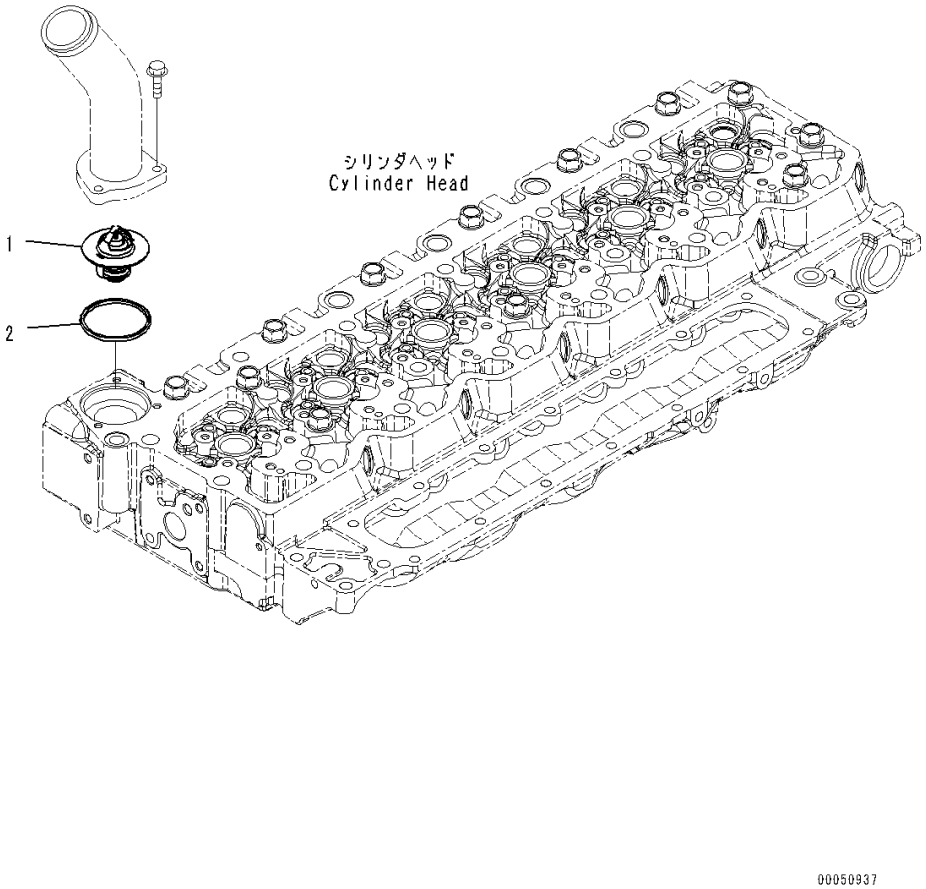



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-61-6211 | Thermostat Assembly ..... | 1 | 26541137- |
| 1 | C1 | | • Thermostat ..... | 1 | 26541137- |
| 2 | | 6754-61-6230 | • Seal ..... | 1 | 26541137- |

# ENGINE ELECTRICAL SYSTEM

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. AEE00-001001 Alternator, 35Amp., Inner Parts

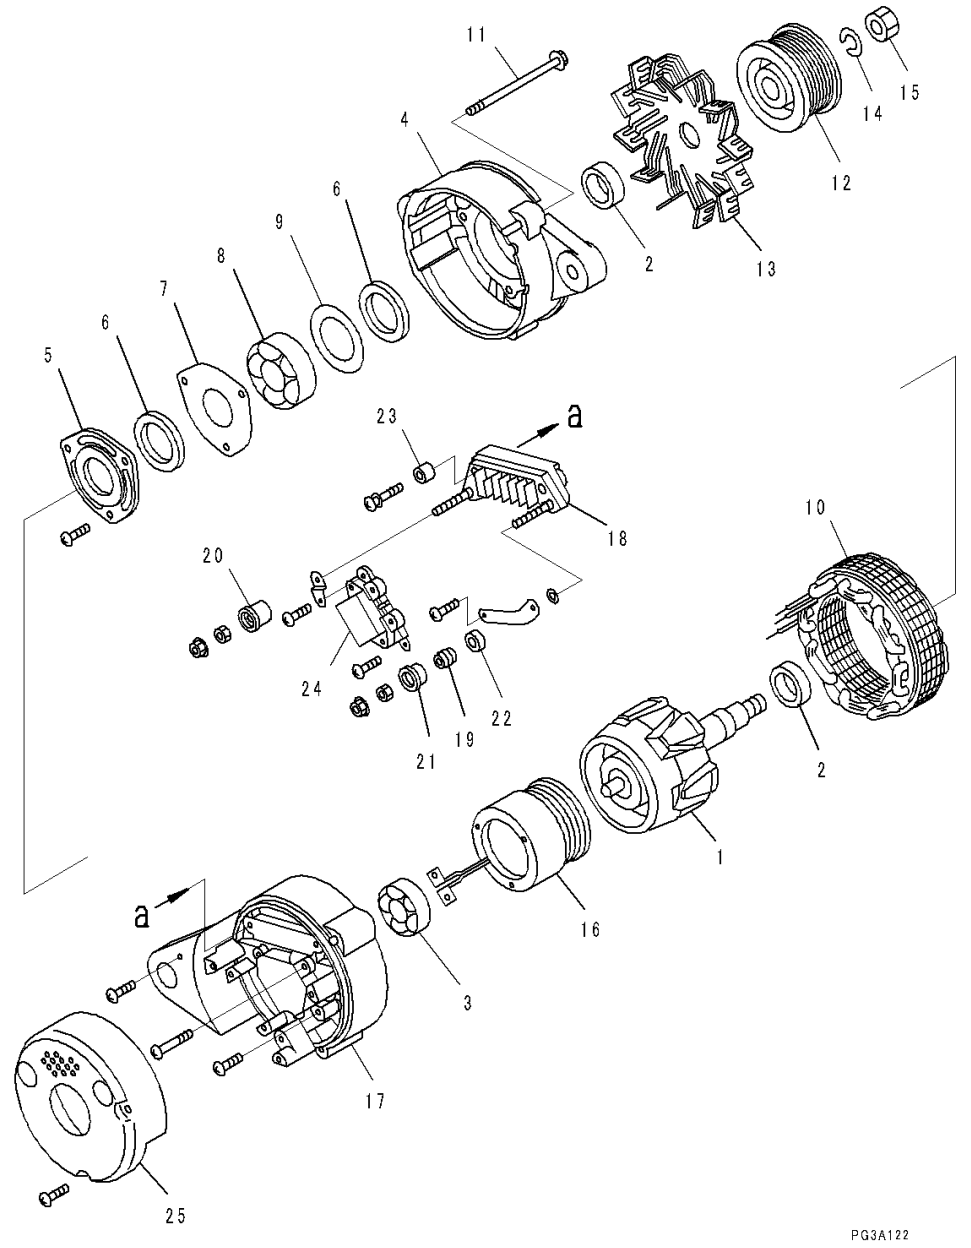


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 600-861-3111 | Alternator, 35Amp. | 1 | 26541137- |
| 1 | | KD0-35100-0280 | • Rotor Assembly | 1 | 26541137- |
| 2 | | KD1-33923-0790 | • Collar | 2 | 26541137- |
| 3 | | KD0-09201-0870 | • Bearing, Ball | 1 | 26541137- |
| 4 | | KD0-35300-0160 | • Bracket Assembly | 1 | 26541137- |
| 5 | | KD0-35926-0070 | •• Retainer | 1 | 26541137- |
| 6 | | KD0-35951-0060 | •• Packing | 2 | 26541137- |
| 7 | | KD0-35926-0090 | •• Retainer | 1 | 26541137- |
| 8 | | KD0-09201-0880 | •• Bearing, Ball | 1 | 26541137- |
| 9 | | KD1-33926-0730 | •• Retainer | 1 | 26541137- |
| 10 | | KD0-35200-0400 | • Stator Assembly | 1 | 26541137- |
| 11 | | KD0-0275-06802 | • Bolt | 3 | 26541137- |
| 12 | | KD0-35411-0640 | • Pulley | 1 | 26541137- |
| 13 | | KD0-35421-0140 | • Fan | 1 | 26541137- |
| 14 | | KD1-0335-16001 | • Washer, Spring | 1 | 26541137- |
| 15 | | KD0-0280-16022 | • Nut | 1 | 26541137- |
| 16 | | KD0-35120-0450 | • Coil, Field | 1 | 26541137- |
| | | KD0-35700-0701 | • Bracket Assembly | 1 | 26541137- |
| 17 | | KD0-35710-0810 | •• Bracket | 1 | 26541137- |
| 18 | | KD0-35730-0510 | •• Rectifier Assembly | 1 | 26541137- |
| 19 | | KD0-35923-0130 | •• Collar | 1 | 26541137- |
| 20 | | KD0-35943-0140 | •• Bushing, Insulate, Insulate | 1 | 26541137- |
| 21 | | KD0-35943-0150 | •• Bushing, Insulate, Insulate | 1 | 26541137- |
| 22 | | KD0-35943-0160 | •• Bushing, Insulate, Insulate | 1 | 26541137- |
| 23 | | KD0-35943-0170 | •• Bushing, Insulate, Insulate | 1 | 26541137- |
| 24 | | KD0-35719-1850 | •• Regulator Assembly | 1 | 26541137- |
| 25 | | KD0-35761-0200 | •• Cover | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AST00-001001 Starting Motor, 4.5KW, Inner Parts

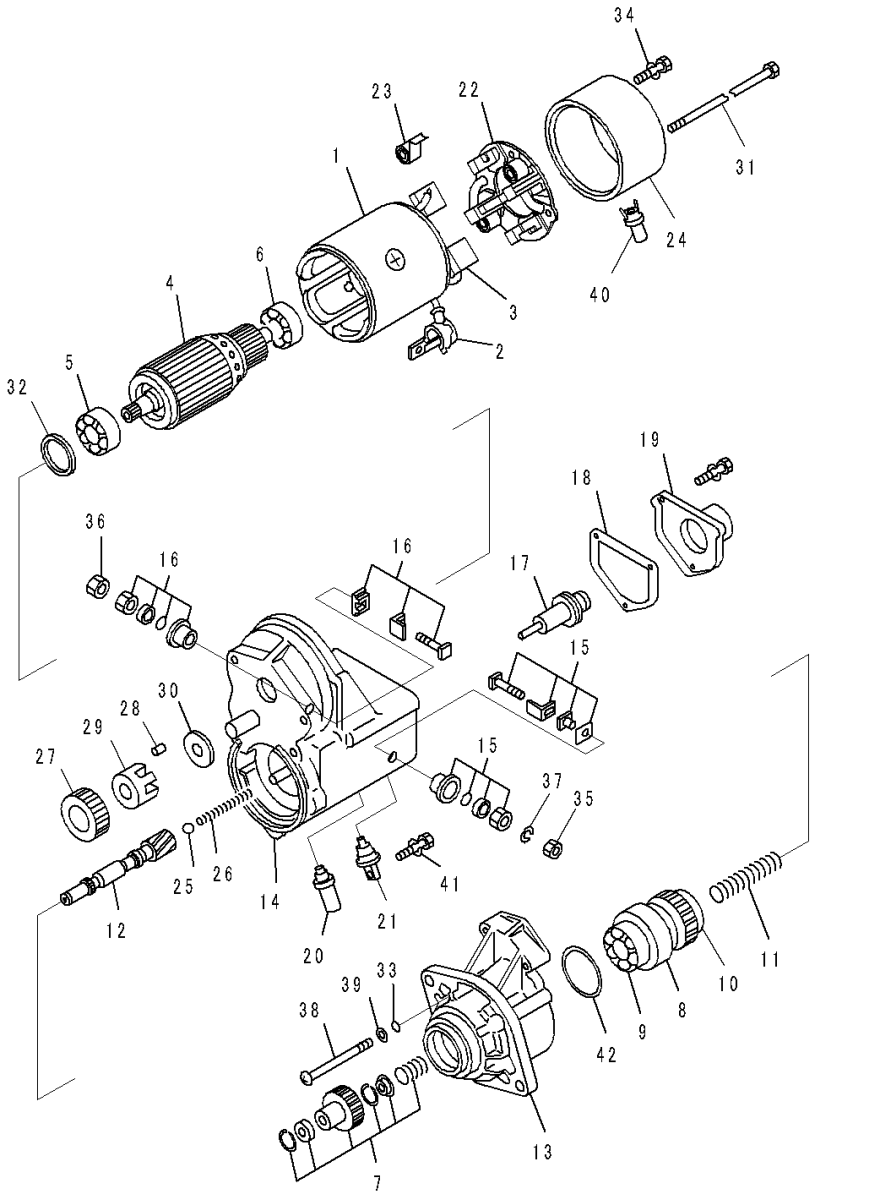


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 600-863-4210 | Starting Motor Assembly | 1 | 26541137- |
| 1 | | ND028100-2882 | • Yoke Assembly | 1 | 26541137- |
| 2 | | ND028062-0130 | •• Cover | 1 | 26541137- |
| 3 | | ND028099-3570 | •• Starting Motor Kit | 2 | 26541137- |
| 4 | | ND028200-1590 | • Armature Assembly | 1 | 26541137- |
| 5 | | ND949100-1930 | •• Bearing, Ball | 1 | 26541137- |
| 6 | | ND949100-1750 | •• Bearing, Ball | 1 | 26541137- |
| | | ND028300-6551 | • Clutch Assembly | 1 | 26541137- |
| 7 | | ND028099-3270 | •• Starting Motor Kit | 1 | 26541137- |
| 8 | | ND028300-6751 | •• Clutch Assembly | 1 | 26541137- |
| 9 | | ND949100-4500 | ••• Bearing, Ball,Front | 1 | 26541137- |
| 10 | | ND949100-1920 | ••• Bearing, Ball,Rear | 1 | 26541137- |
| 11 | | ND949170-4040 | •• Spring | 1 | 26541137- |
| 12 | | ND028381-0071 | •• Shaft | 1 | 26541137- |
| 13 | | ND228401-0633 | • Housing Assembly | 1 | 26541137- |
| 14 | | ND153400-8530 | • Switch Assembly | 1 | 26541137- |
| 15 | | ND028099-5620 | •• Starting Motor Kit | 1 | 26541137- |
| 16 | | ND028099-3160 | •• Starting Motor Kit | 1 | 26541137- |
| 17 | | ND053660-7170 | •• Plunger | 1 | 26541137- |
| 18 | | ND053404-0240 | •• Gasket | 1 | 26541137- |
| 19 | | ND053505-0290 | •• Cover | 1 | 26541137- |
| 20 | | ND053480-7560 | •• Bolt Assembly | 1 | 26541137- |
| 21 | | ND028065-0250 | •• Bushing | 1 | 26541137- |
| 22 | | ND028510-5390 | • Holder Assembly, Brush | 1 | 26541137- |
| 23 | | ND949173-0571 | •• Spring | 4 | 26541137- |
| 24 | | ND028501-8091 | • Frame | 1 | 26541137- |
| 25 | | ND128961-0010 | • Ball | 1 | 26541137- |
| 26 | | ND949170-4070 | • Spring | 1 | 26541137- |
| 27 | | ND028371-1500 | • Pinion | 1 | 26541137- |
| 28 | | ND028306-0070 | • Roller | 5 | 26541137- |
| 29 | | ND028063-0030 | • Retainer | 1 | 26541137- |
| 30 | | ND028327-0171 | • Retainer | 1 | 26541137- |
| 31 | | ND128950-0520 | • Bolt | 2 | 26541137- |
| 32 | | ND949020-0600 | • Washer, felt | 1 | 26541137- |
| 33 | | ND90801-10050 | • O-ring | 3 | 26541137- |
| 34 | | ND949007-6530 | • Screw | 2 | 26541137- |
| 35 | | ND90170-10061 | • Nut | 1 | 26541137- |
| 36 | | ND949056-4480 | • Nut | 1 | 26541137- |
| 37 | | ND90258-10001 | • Washer | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AST00-001001 Starting Motor, 4.5KW, Inner Parts

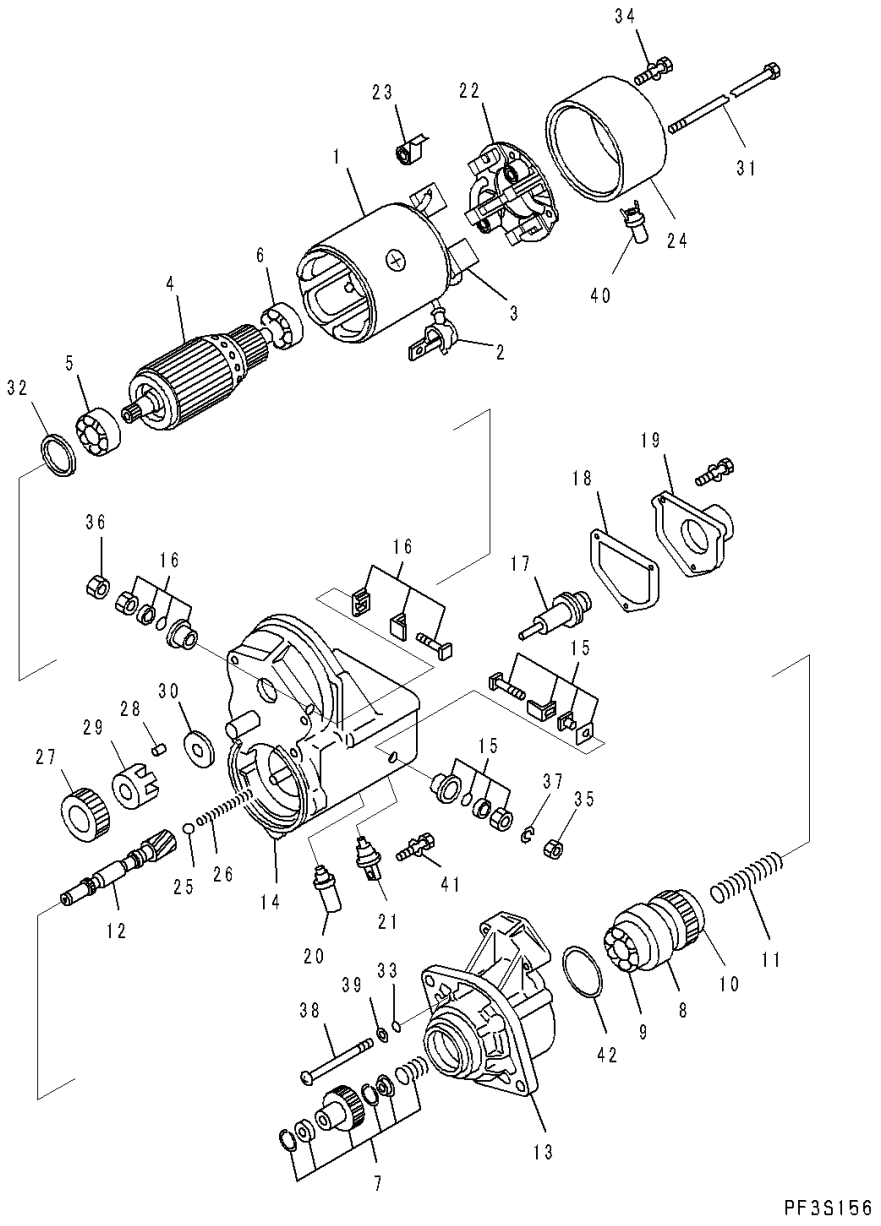


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | ND949006-4720 | • Screw | 3 | 26541137- |
| 39 | | ND90200-06241 | • Washer | 3 | 26541137- |
| 40 | | ND028062-5790 | • Cover | 1 | 26541137- |
| 41 | | ND949007-6850 | • Screw | 1 | 26541137- |
| 42 | | ND028901-5190 | • Seal | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AST00-002001 Starting Motor, 5.5KW, Inner Parts

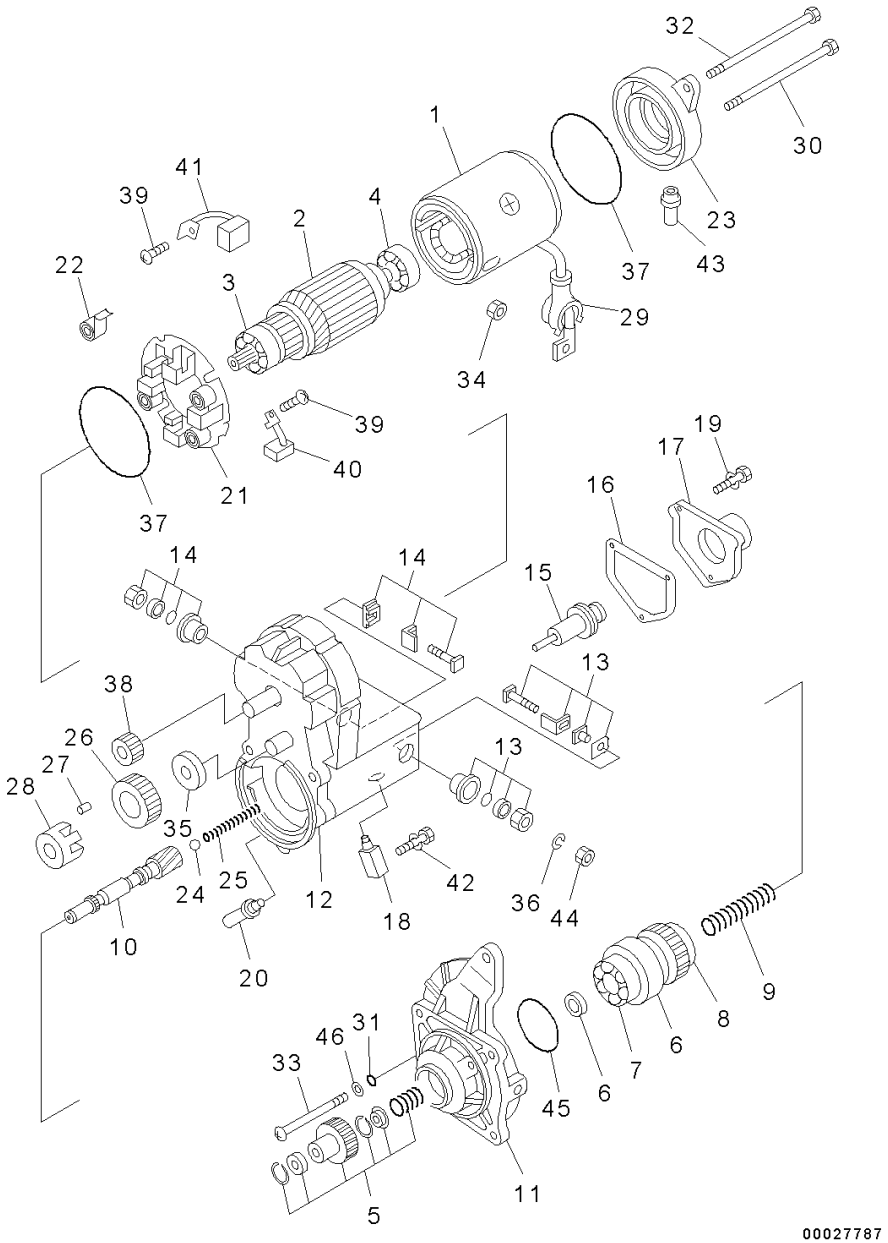


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 600-863-5111 | Starting Motor Assembly | 1 | 26541137- |
| 1 | | ND028100-5410 | • Yoke Assembly | 1 | 26541137- |
| 2 | | ND028200-5250 | • Armature Assembly | 1 | 26541137- |
| 3 | | ND949100-3161 | •• Bearing, Ball | 1 | 26541137- |
| | | ND949100-5290 | •• Bearing, Ball | 1 | 26541137- |
| 4 | | ND949100-3540 | •• Bearing, Ball | 1 | 26541137- |
| | | ND028300-6551 | • Clutch Assembly | 1 | 26541137- |
| 5 | | ND028099-3270 | •• Starting Motor Kit | 1 | 26541137- |
| 6 | | ND028300-6751 | •• Clutch Assembly | 1 | 26541137- |
| 7 | | ND949100-4500 | ••• Bearing, Ball | 1 | 26541137- |
| 8 | | ND949100-1920 | ••• Bearing, Ball | 1 | 26541137- |
| 9 | | ND949170-4040 | •• Spring | 1 | 26541137- |
| 10 | | ND028381-0071 | •• Shaft | 1 | 26541137- |
| 11 | | ND128401-5621 | • Housing | 1 | 26541137- |
| 12 | | ND153400-6740 | • Switch Assembly, Magnetic | 1 | 26541137- |
| 13 | | ND128099-5770 | •• Starting Motor Kit | 1 | 26541137- |
| 14 | | ND028099-5100 | •• Starting Motor Kit | 1 | 26541137- |
| 15 | | ND053660-0443 | •• Plunger | 1 | 26541137- |
| 16 | | ND053404-0240 | •• Gasket | 1 | 26541137- |
| 17 | | ND053505-0290 | •• Cover | 1 | 26541137- |
| 18 | | ND053480-7560 | •• Bolt Assembly, terminal | 1 | 26541137- |
| 19 | | ND949047-4440 | •• Bolt | 3 | 26541137- |
| 20 | | ND028065-0250 | •• Bushing, Drain | 1 | 26541137- |
| 21 | | ND028510-0880 | • Holder Assembly, Brush | 1 | 26541137- |
| 22 | | ND028520-0011 | •• Spring, brush | 4 | 26541137- |
| 23 | | ND028501-7711 | • Frame | 1 | 26541137- |
| 24 | | ND128961-0010 | • Ball | 1 | 26541137- |
| 25 | | ND949170-4070 | • Spring | 1 | 26541137- |
| 26 | | ND028371-3210 | • Pinion, starter | 1 | 26541137- |
| 27 | | ND028306-0070 | • Roller, clutch | 5 | 26541137- |
| 28 | | ND028063-0030 | • Retainer | 1 | 26541137- |
| 29 | | ND028062-0130 | • Cover | 1 | 26541137- |
| 30 | | ND949042-3680 | • Bolt | 1 | 26541137- |
| 31 | | ND90801-10050 | • O-ring | 3 | 26541137- |
| 32 | | ND949042-3690 | • Bolt | 1 | 26541137- |
| 33 | | ND949006-4720 | • Screw | 3 | 26541137- |
| 34 | | ND949056-4480 | • Nut | 1 | 26541137- |
| 35 | | ND028327-0171 | • Retainer, snap | 1 | 26541137- |
| 36 | | ND90258-10001 | • Washer | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AST00-002001 Starting Motor, 5.5KW, Inner Parts

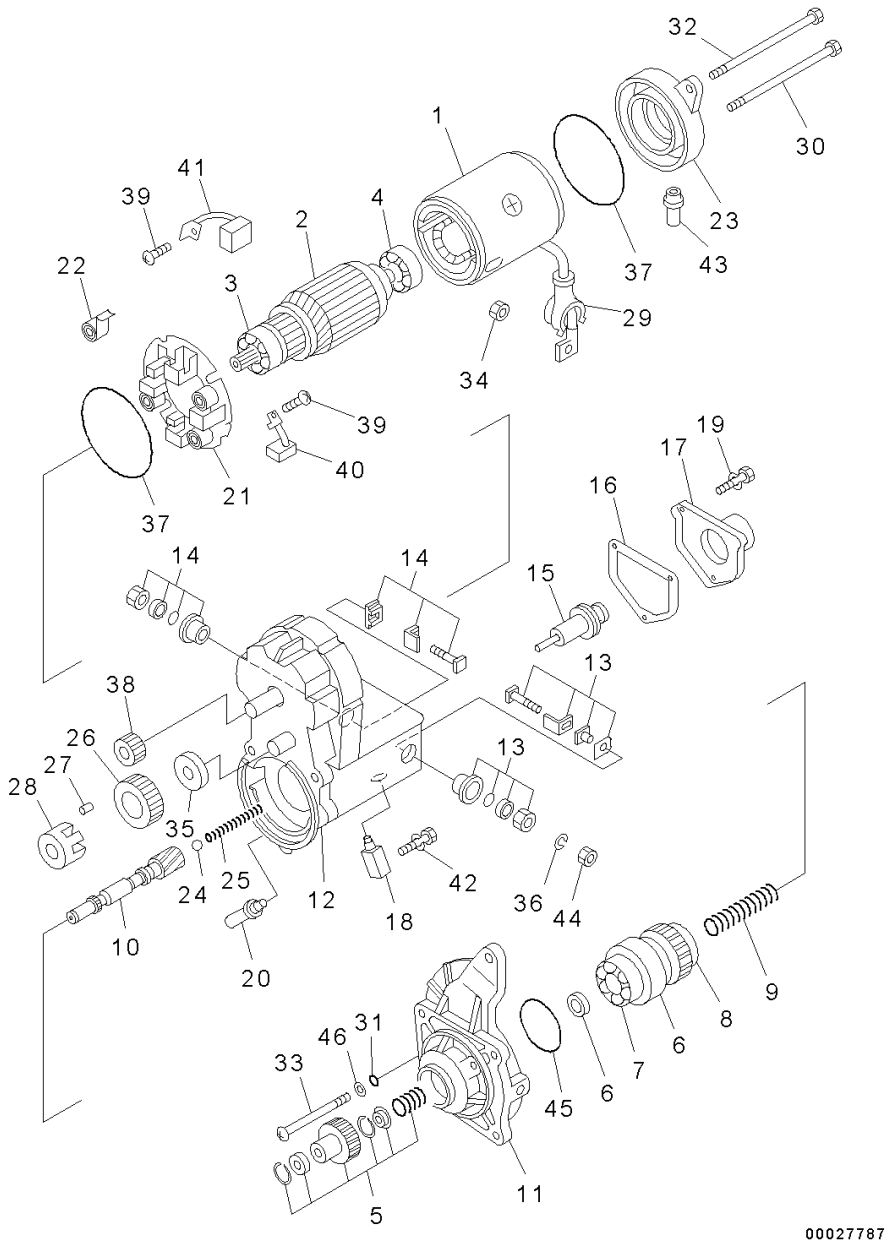


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 37 | | ND028901-0361 | • Seal | 2 | 26541137- |
| 38 | | ND028371-3200 | • Pinion | 1 | 26541137- |
| 39 | | ND949007-6530 | • Screw | 4 | 26541137- |
| 40 | | ND028530-1090 | • Brush Assembly | 2 | 26541137- |
| 41 | | ND028530-1100 | • Brush Assembly | 2 | 26541137- |
| 42 | | ND949007-6850 | • Screw | 1 | 26541137- |
| 43 | | ND028062-5790 | • Cover | 1 | 26541137- |
| 44 | | ND90170-10061 | • Nut | 1 | 26541137- |
| 45 | | ND028901-5190 | • Seal | 1 | 26541137- |
| 46 | | ND90200-06241 | • Washer | 3 | 26541137- |

https://truckmanualshub.com/


# FIG. AWR00-001001 Wiring Harness

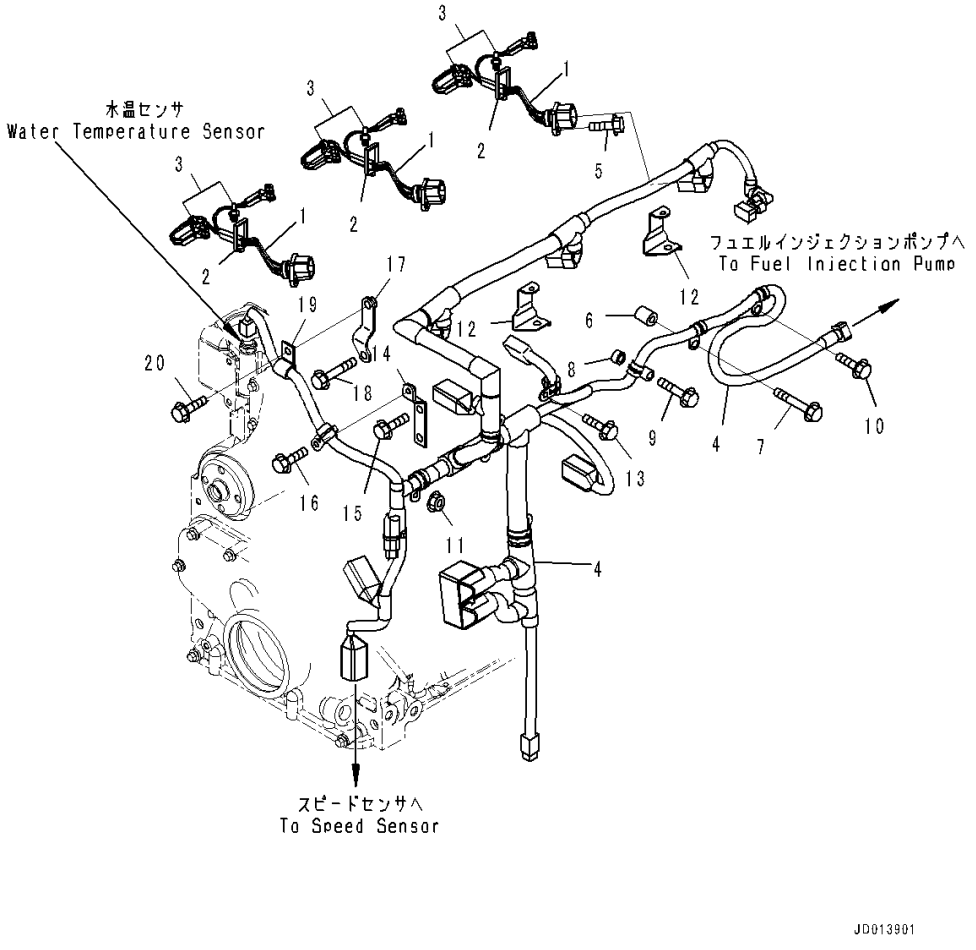


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-81-9450 | Wire Harness | 3 | 26541137- |
| 2 | | 6754-81-9220 | Clip | 3 | 26541137- |
| 3 | | 6754-81-9230 | Clip | 6 | 26541137- |
| 4 | | 6754-81-9440 | Wire Harness | 1 | 26541137- |
| 5 | | 6732-21-4180 | Bolt | 3 | 26541137- |
| 6 | | 6162-23-5770 | Spacer | 1 | 26541137- |
| 7 | | 6732-61-6140 | Bolt | 1 | 26541137- |
| 8 | | 6754-81-9330 | Spacer | 1 | 26541137- |
| 9 | | 6731-61-1370 | Bolt | 1 | 26541137- |
| 10 | | 6216-74-6180 | Bolt | 2 | 26541137- |
| 11 | | 01584-00605 | Nut | 3 | 26541137- |
| 12 | | 6754-81-9340 | Bracket | 2 | 26541137- |
| 13 | | 6736-81-5110 | Bolt | 2 | 26541137- |
| 14 | | 6754-81-9280 | Bracket | 1 | 26541137- |
| 15 | | 6732-21-3120 | Bolt | 2 | 26541137- |
| 16 | | 6733-71-5680 | Bolt | 1 | 26541137- |
| 17 | | 6754-81-9270 | Bracket | 1 | 26541137- |
| 18 | | 6754-81-9390 | Bolt | 1 | 26541137- |
| 19 | | 04434-51308 | Clip | 1 | 26541137- |
| 20 | | 6216-74-6180 | Bolt | 1 | 26541137- |

https://truckmanualshub.com/

# FIG. B9999-503001 Starter Relay

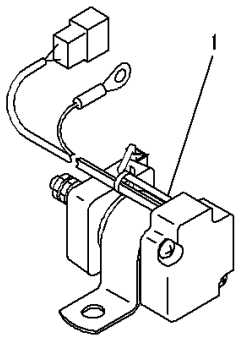



PJ6F066

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 600-815-8941 | Relay..... | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AEH10-001001 Alternator Mounting, For 35Amp.60Amp. Alternator

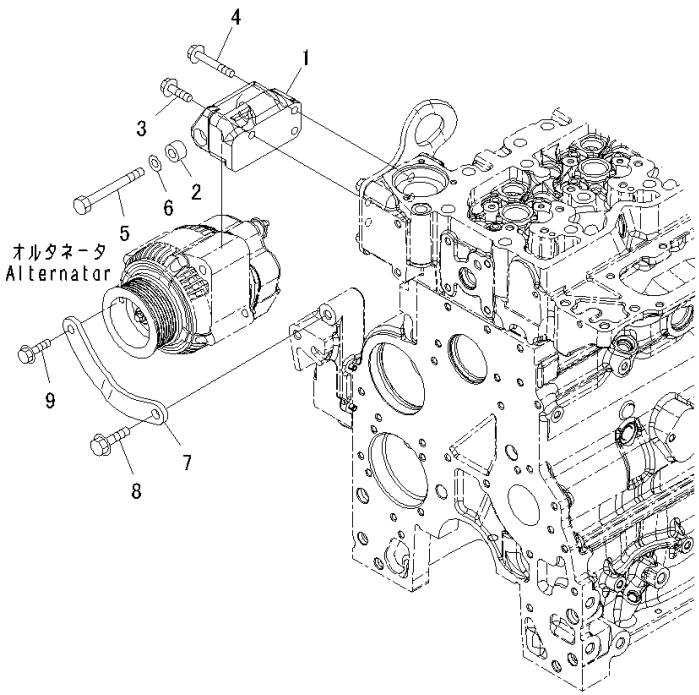


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-81-6110 | Support Assembly | 1 | 26541137- |
| 1 | | 6754-81-6120 | • Support | 1 | 26541137- |
| 2 | | 6732-81-6630 | • Spacer | 1 | 26541137- |
| 3 | | 6732-21-6630 | Screw | 1 | 26541137- |
| 4 | | 6736-11-4460 | Bolt | 2 | 26541137- |
| 5 | | 01018-31095 | Bolt | 1 | 26541137- |
| 6 | | 01641-01016 | Washer, Flat | 1 | 26541137- |
| 7 | | 6754-81-6130 | Bracket | 1 | 26541137- |
| 8 | | 6735-71-3220 | Bolt | 1 | 26541137- |
| 9 | | 6732-21-5160 | Bolt | 1 | 26541137- |

https://truckmanualshub.com/


# FIG. AEH10-002001 Alternator Mounting, For 35 Amp. Sealed

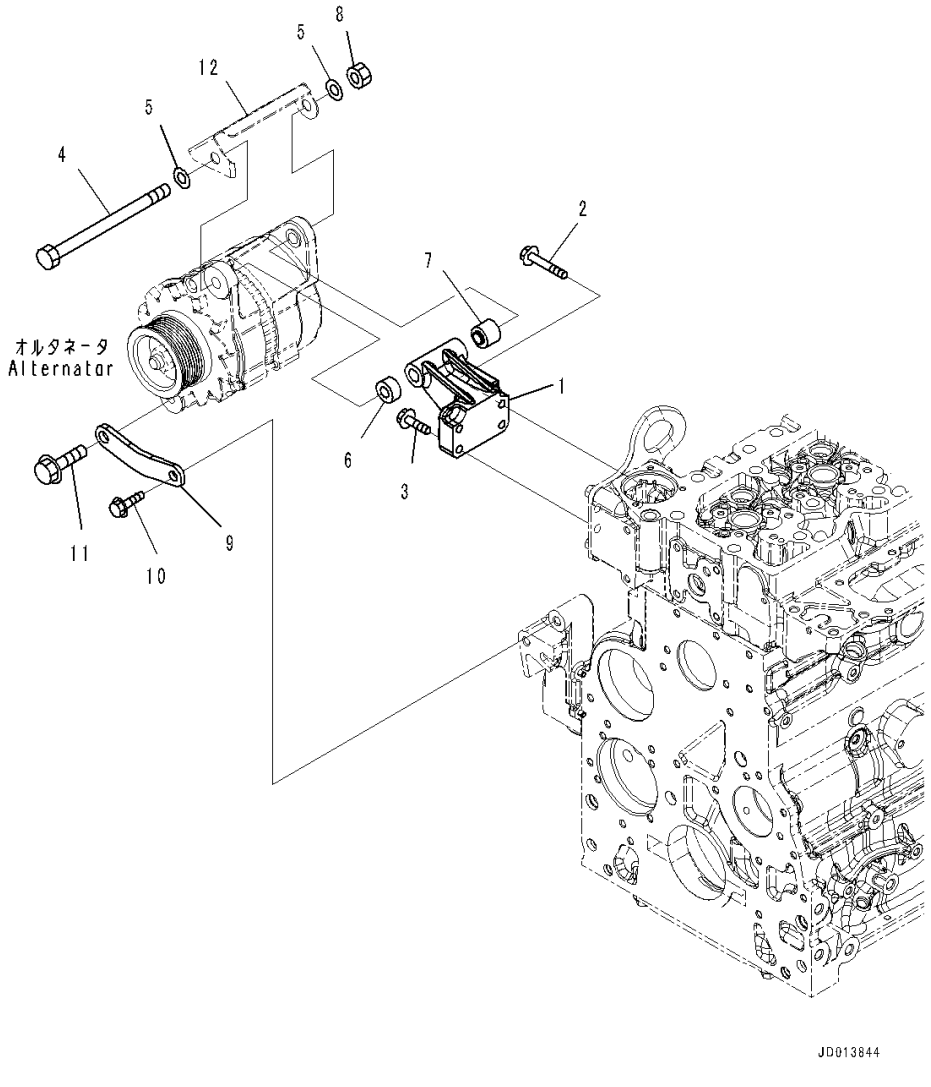


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-81-6140 | Support Assembly | 1 | 26541137- |
| 2 | | 6742-01-2441 | Bolt | 1 | 26541137- |
| 3 | | 6732-61-3110 | Bolt | 3 | 26541137- |
| 4 | | 6207-81-6980 | Bolt | 1 | 26541137- |
| 5 | | 01641-21223 | Washer | 2 | 26541137- |
| 6 | | 6732-81-6490 | Spacer | 1 | 26541137- |
| 7 | | 6732-81-6530 | Spacer | 1 | 26541137- |
| 8 | | 01580-11210 | Nut | 1 | 26541137- |
| 9 | | 6754-81-6150 | Bracket | 1 | 26541137- |
| 10 | | 6735-71-3220 | Bolt | 1 | 26541137- |
| 11 | | 01050-31230 | Bolt | 1 | 26541137- |
| 12 | | (6754-81-8440) | Cover(Refer to Page 88) | | - |

https://truckmanualshub.com/

# FIG. ASM00-001001 Starting Motor Mounting, 5.5KW

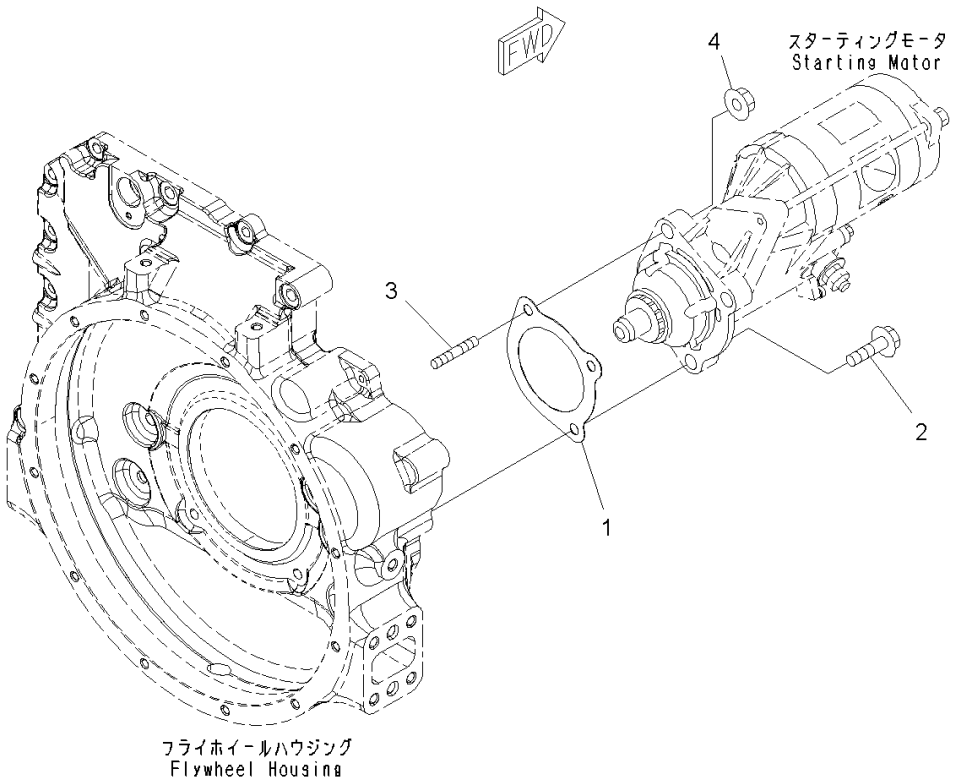


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6754-81-6810 | Gasket | 1 | 26541137- |
| 2 | | 6731-82-6810 | Bolt | 2 | 26541137- |
| 3 | | 6735-81-6170 | Stud | 1 | 26541137- |
| 4 | | 6736-81-6170 | Nut | 1 | 26541137- |

# FIELD REPAIR SERVICE PARTS

https://truckmanualshub.com/

https://truckmanualshub.com/

# FIG. A8110-001001 Repair Service Parts (1/1)


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6736-29-1410 | Bushing | 1 | 26541137- |
| 2 | | 6736-29-1420 | Bushing | 1 | 26541137- |
| | | 6736-39-1130 | Sleeve,Rear | 1 | 26541137- |
| 3 | | 6736-39-1160 | • Sleeve, Wear | 1 | 26541137- |
| 4 | | 6736-39-1170 | • Seal | 1 | 26541137- |
| | | 6754-29-8320 | Bearing, T=0.25mm | 6 | 26541137- |
| 5 | C1 | | • Bearing | 1 | 26541137- |
| 6 | C1 | | • Bearing | 1 | 26541137- |
| | | 6754-29-8310 | Bearing, Thrust, T=0.25mm | 1 | 26541137- |
| 7 | C1 | | • Bearing, Thrust | 1 | 26541137- |
| 8 | C1 | | • Bearing | 1 | 26541137- |
| | | 6754-28-8320 | Bearing, T=0.50mm | 6 | 26541137- |
| 9 | C1 | | • Bearing | 1 | 26541137- |
| 10 | C1 | | • Bearing, T=0.50mm | 1 | 26541137- |
| | | 6754-28-8310 | Bearing, Thrust, T=0.50mm | 1 | 26541137- |
| 11 | C1 | | • Bearing, Thrust | 1 | 26541137- |
| 12 | C1 | | • Bearing, T=0.50mm | 1 | 26541137- |
| | | 6754-27-8320 | Bearing, T=0.75mm | 6 | 26541137- |
| 13 | C1 | | • Bearing | 1 | 26541137- |
| 14 | C1 | | • Bearing | 1 | 26541137- |
| | | 6754-27-8310 | Bearing, Thrust, T=0.75mm | 1 | 26541137- |
| 15 | C1 | | • Bearing, Thrust | 1 | 26541137- |
| 16 | C1 | | • Bearing | 1 | 26541137- |
| | | 6754-26-8320 | Bearing, T=1.00mm | 6 | 26541137- |
| 17 | C1 | | • Bearing | 1 | 26541137- |
| 18 | C1 | | • Bearing, T=1.00mm | 1 | 26541137- |
| | | 6754-26-8310 | Bearing, Thrust, T=1.00mm | 1 | 26541137- |
| 19 | C1 | | • Bearing, Thrust | 1 | 26541137- |
| 20 | C1 | | • Bearing, T=1.00mm | 1 | 26541137- |
| | | 6754-28-8410 | Bearing, Thrust | 1 | 26541137- |
| 21 | C1 | | • Bearing, Thrust, T=0.50/0.50mm | 1 | 26541137- |
| 22 | C1 | | • Bearing, T=0.50mm | 1 | 26541137- |
| | | 6754-26-8410 | Bearing, Thrust | 1 | 26541137- |
| 23 | C1 | | • Bearing, Thrust, T=1.00/1.00mm | 1 | 26541137- |
| 24 | C1 | | • Bearing, T=1.00mm | 1 | 26541137- |
| 25 | C1 | | Metal, rod,lower,undersized,0.25mm | 6 | 26541137- |
| 26 | C1 | | Metal, rod,lower,undersized,0.25mm | 6 | 26541137- |
| 27 | C1 | | Metal, rod,lower,undersized,0.25mm | 6 | 26541137- |
| 28 | C1 | | Metal, rod,lower,undersized,0.25mm | 6 | 26541137- |
| 29 | | 6754-39-2111 | Piston | 6 | 26541137- |
| | | 6754-39-2010 | Ring Assembly, Piston | 6 | 26541137- |
| 30 | C1 | | • Ring, T=0.05mm | 1 | 26541137- |
| 31 | C1 | | • Ring,2nd | 1 | 26541137- |
| 32 | C1 | | • Ring, Oil | 1 | 26541137- |
| 33 | | 6754-39-3410 | Bearing | 6 | 26541137- |
| 34 | | 6754-38-3410 | Bearing | 6 | 26541137- |
| 35 | | 6754-37-3410 | Bearing | 6 | 26541137- |
| 36 | | 6754-36-3410 | Bearing | 6 | 26541137- |

# ENGINE RELATED PARTS

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. B0000-001001 Damper, (1/2)

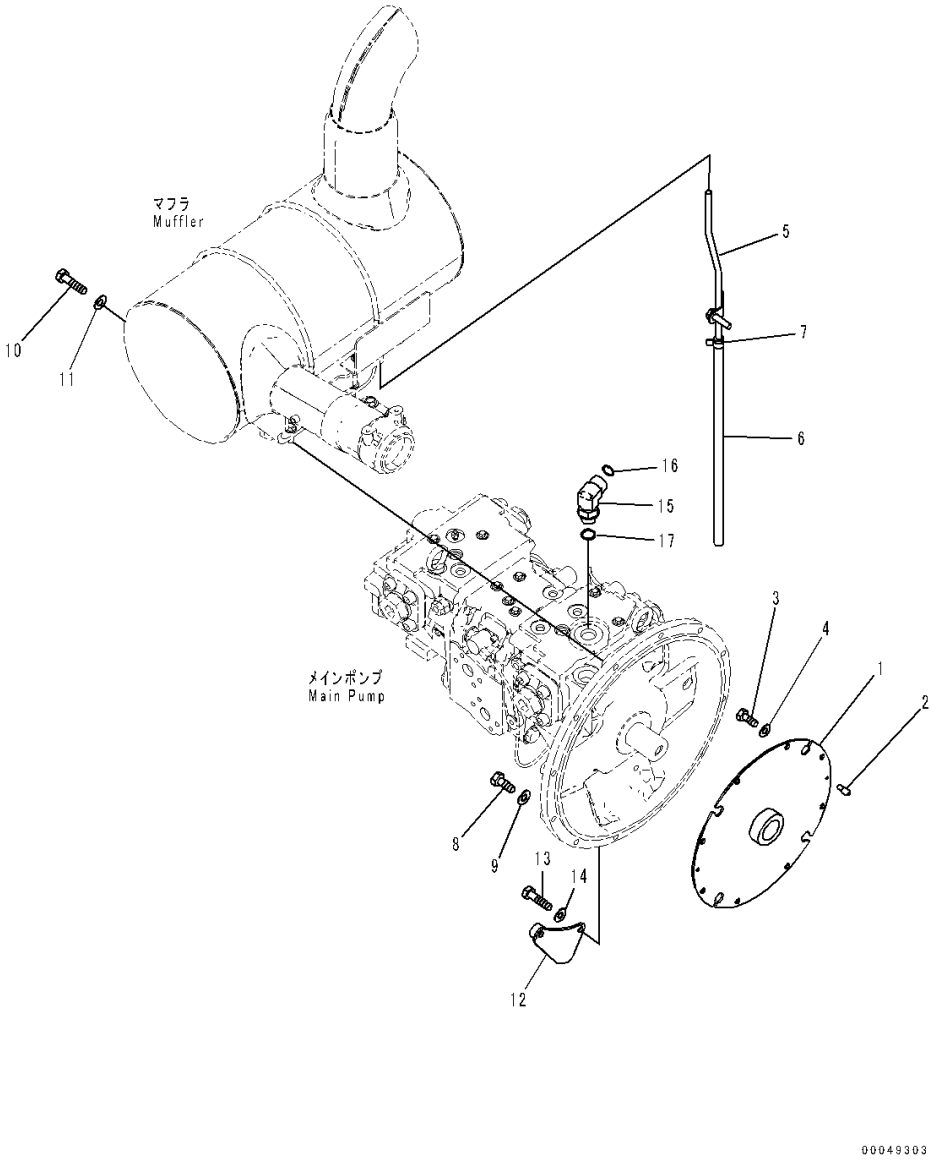


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22U-01-21310 | Dumper | 1 | 315646- |
| 2 | | 203-01-51120 | Pin | 2 | 315646- |
| 3 | | 01010-81020 | Bolt | 8 | 315646- |
| 4 | | 01643-31032 | Washer | 8 | 315646- |
| 5 | | 6754-11-5440 | Tube | 1 | 315646- |
| 6 | | 07260-20950 | Hose | 1 | 315646- |
| 7 | | 07285-00155 | Clip | 1 | 315646- |
| 8 | | 01010-81050 | Bolt | 8 | 315646- |
| 9 | | 01643-31032 | Washer | 8 | 315646- |
| 10 | | 01010-81060 | Bolt | 2 | 315646- |
| 11 | | 01643-31032 | Washer | 2 | 315646- |
| 12 | | 20Y-62-41572 | Bracket | 1 | 315646- |
| 13 | | 01010-81050 | Bolt | 2 | 315646- |
| 14 | | 01643-31032 | Washer | 2 | 315646- |
| 15 | | 02782-10628 | Elbow | 1 | 315646- |
| 16 | | 02896-11018 | O-ring | 1 | 315646- |
| 17 | | 07002-12434 | O-ring | 1 | 315646- |

https://truckmanualshub.com/


# FIG. B0000-001002 Damper, (2/2)

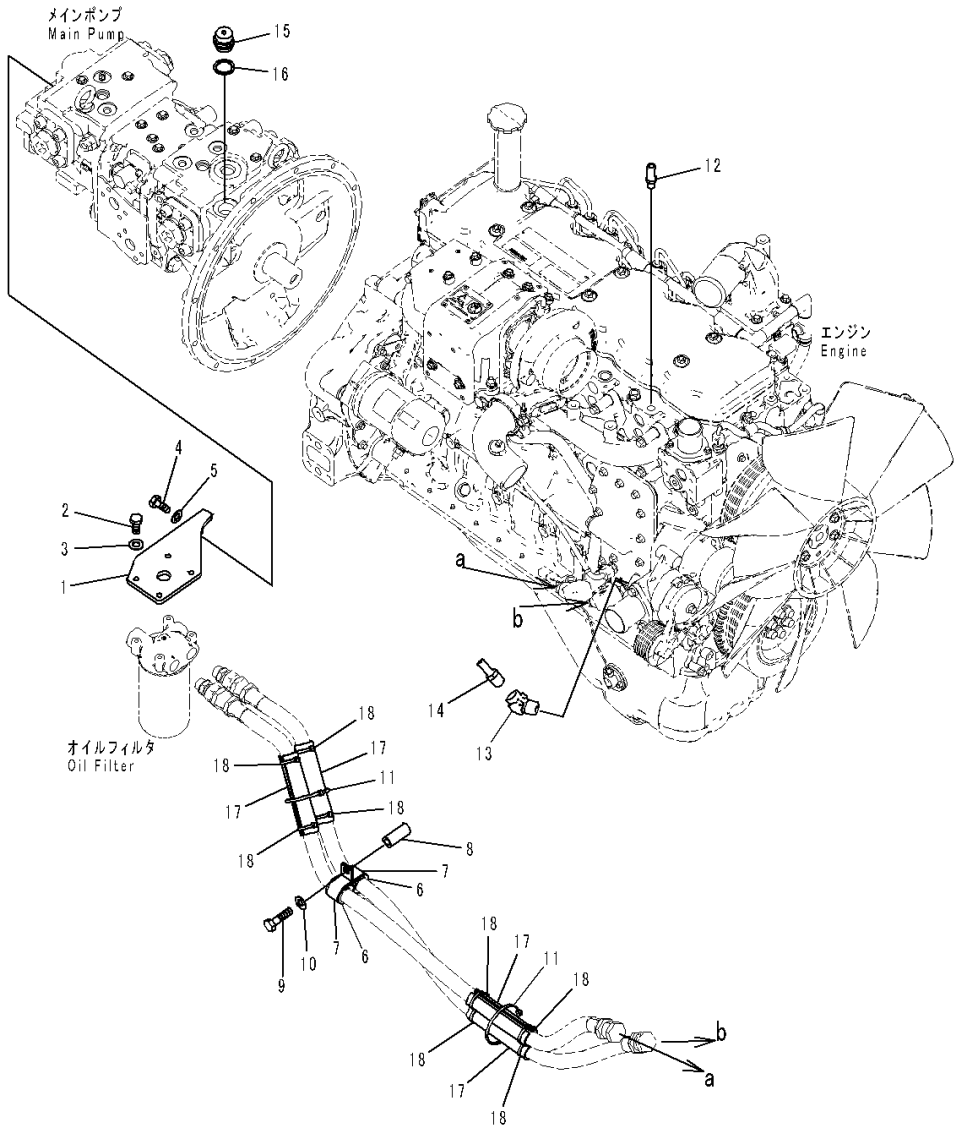


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-51433 | Plate | 1 | 315646- |
| 2 | | 01010-80825 | Bolt | 4 | 315646- |
| 3 | | 01643-30823 | Washer | 4 | 315646- |
| 4 | | 01010-81230 | Bolt | 2 | 315646- |
| 5 | | 01643-31232 | Washer | 2 | 315646- |
| 6 | | 198-06-53630 | Cushion | 2 | 315646- |
| 7 | | 04434-53412 | Clip | 2 | 315646- |
| 8 | | 195-979-5190 | Collar | 1 | 315646- |
| 9 | | 01010-81275 | Bolt | 1 | 315646- |
| 10 | | 01643-31232 | Washer | 1 | 315646- |
| 11 | | 08034-20536 | Band | 2 | 315646- |
| 12 | | 20Y-810-1120 | Nipple | 1 | 315646- |
| 13 | | 20Y-810-1161 | Elbow | 1 | 315646- |
| 14 | | 22U-979-1930 | Nipple | 1 | 315646- |
| 15 | | 07030-03034 | Breather | 1 | 315646- |
| 16 | | 07005-03016 | Gasket | 1 | 315646- |
| 17 | | 20Y-01-41250 | Cover | 4 | 315646- |
| 18 | | 08034-20536 | Band | 8 | 315646- |

https://truckmanualshub.com/


# FIG. B0100-001001 Engine Mounts

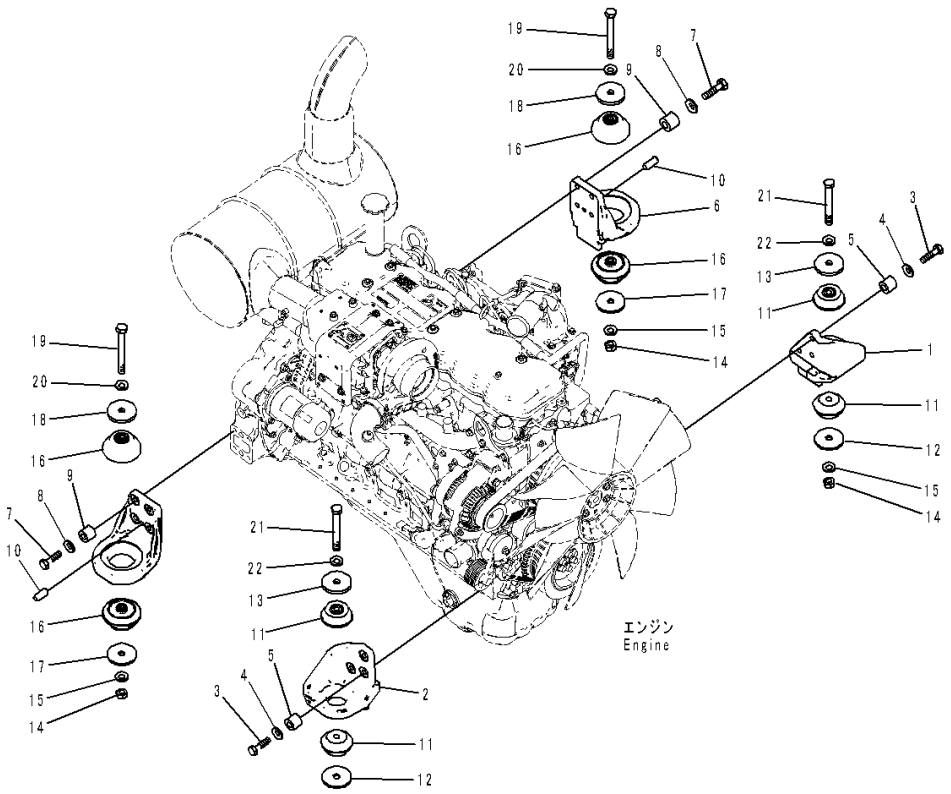


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-01-41161 | Bracket | 1 | 315646- |
| 2 | | 20Y-01-41170 | Bracket | 1 | 315646- |
| 3 | | 20Y-01-41230 | Bolt | 6 | 315646- |
| 4 | | 01643-31232 | Washer | 6 | 315646- |
| 5 | | 20Y-01-21260 | Spacer | 6 | 315646- |
| 6 | | 20Y-01-41180 | Bracket | 2 | 315646- |
| 7 | | 20Y-01-41230 | Bolt | 8 | 315646- |
| 8 | | 01643-31232 | Washer | 8 | 315646- |
| 9 | | 20Y-01-21260 | Spacer | 8 | 315646- |
| 10 | | 04020-01228 | Pin, Dowel | 2 | 315646- |
| 11 | | 20Y-01-12210 | Cushion | 4 | 315646- |
| 12 | | 20Y-01-41210 | Plate | 2 | 315646- |
| 13 | | 20Y-01-11141 | Washer | 2 | 315646- |
| 14 | | 01580-11613 | Nut | 3 | 315646- |
| 15 | | 01643-31645 | Washer | 3 | 315646- |
| 16 | | 20Y-01-12222 | Cushion | 4 | 315646- |
| 17 | | 20Y-01-41210 | Plate | 2 | 315646- |
| 18 | | 20Y-01-11141 | Washer | 2 | 315646- |
| 19 | | 01011-B1655 | Bolt | 2 | 315646- |
| 20 | | 01643-31645 | Washer | 2 | 315646- |
| 21 | | 20Y-01-12270 | Bolt | 2 | 315646- |
| 22 | | 01643-31645 | Washer | 2 | 315646- |

https://truckmanualshub.com/


# FIG. B0200-002001 Air Intake Connector, Inner Parts, Air Cleaner

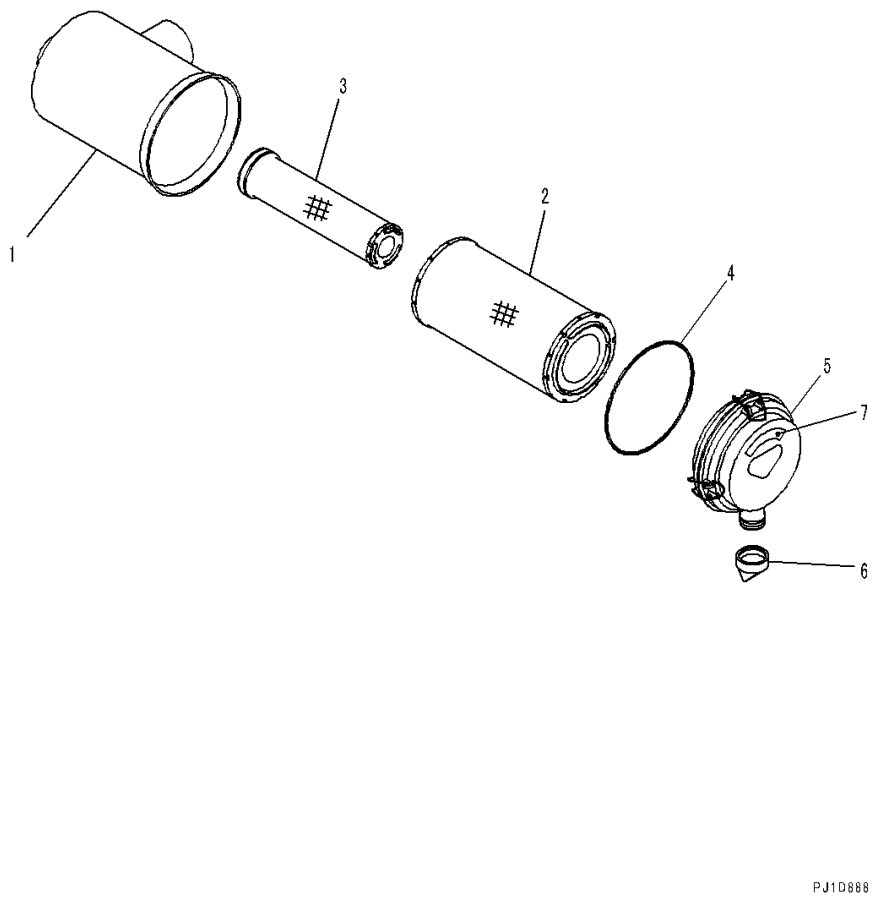


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6738-81-7200 | Air Cleaner Assembly | 1 | 315646- |
| 1 | | 6738-81-7210 | • Body | 1 | 315646- |
| | | 600-185-4100 | • Element Assembly | 1 | 315646- |
| 2 | | 600-185-4110 | •• Element | 1 | 315646- |
| 3 | C1 | | •• Element | 1 | 315646- |
| 4 | | 600-184-1470 | •• O-ring | 1 | 315646- |
| 5 | | 600-184-1420 | • Cover | 1 | 315646- |
| 6 | | 600-184-1350 | • Valve, Vaquator | 1 | 315646- |
| 7 | | 600-181-1930 | • Plate, Service Instruction | 1 | 315646- |

https://truckmanualshub.com/


# FIG. B0200-002002 Air Intake Connector, Air Cleaner Related Part

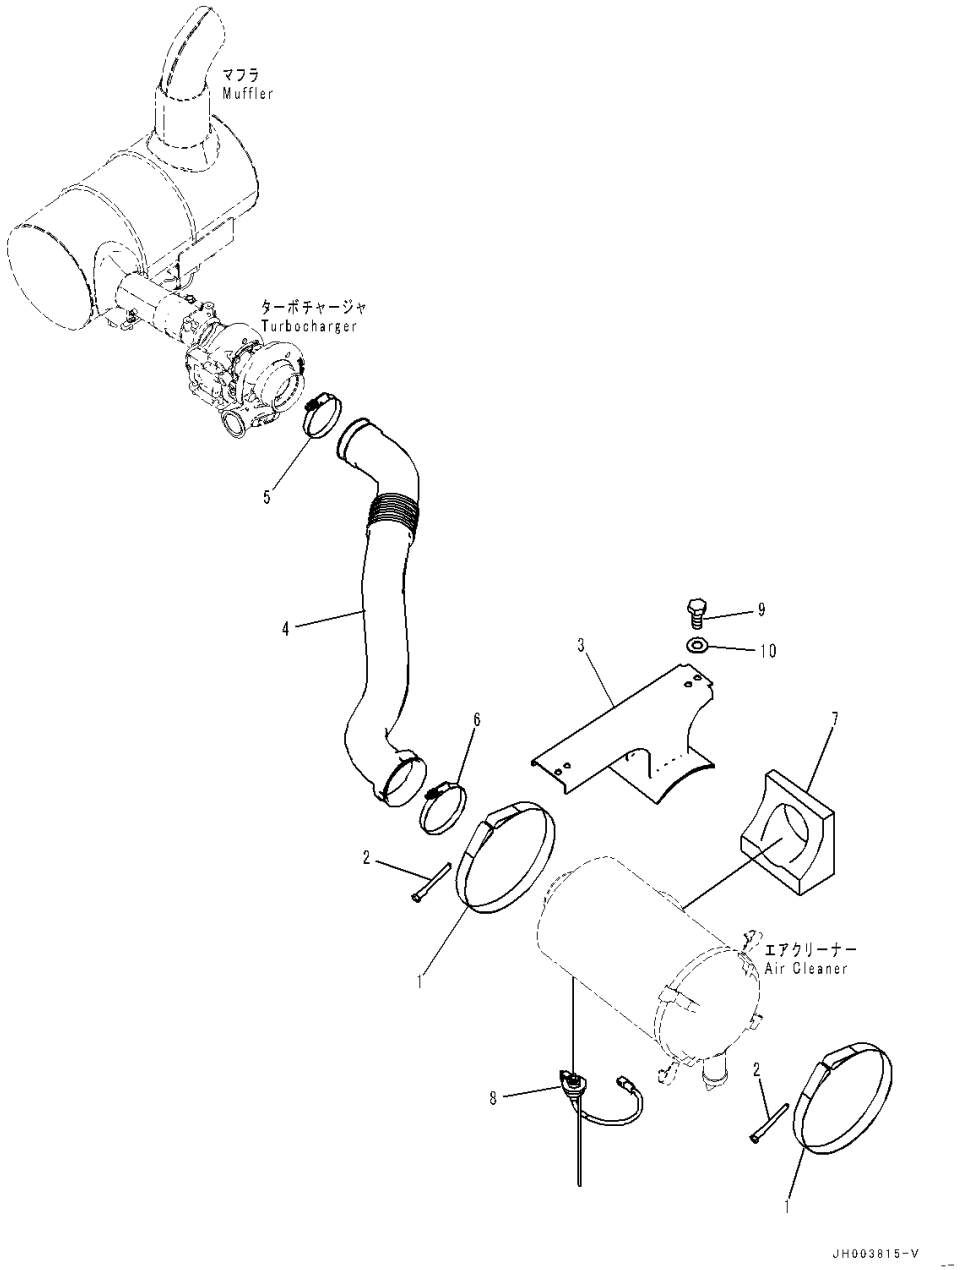


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6222-81-7190 | Band | 2 | 315646- |
| 2 | | 6643-11-4641 | Bolt | 2 | 315646- |
| 3 | | 20Y-01-41190 | Frame | 1 | 315646- |
| 4 | | 20Y-01-41110 | Hose | 1 | 315646- |
| 5 | | 07299-00105 | Clamp, Hose | 1 | 315646- |
| 6 | | 07299-00130 | Clamp, Hose | 1 | 315646- |
| 7 | | 20Y-01-41340 | Seal | 1 | 315646- |
| 8 | | 7861-93-1421 | Sensor | 1 | 315708- |
| 9 | | 01010-81230 | Bolt | 4 | 315646- |
| 10 | | 01643-31232 | Washer | 4 | 315646- |

https://truckmanualshub.com/


# FIG. B0200-004002 Air Intake Connector, With Pre-cleaner, Air Cleaner Related Part

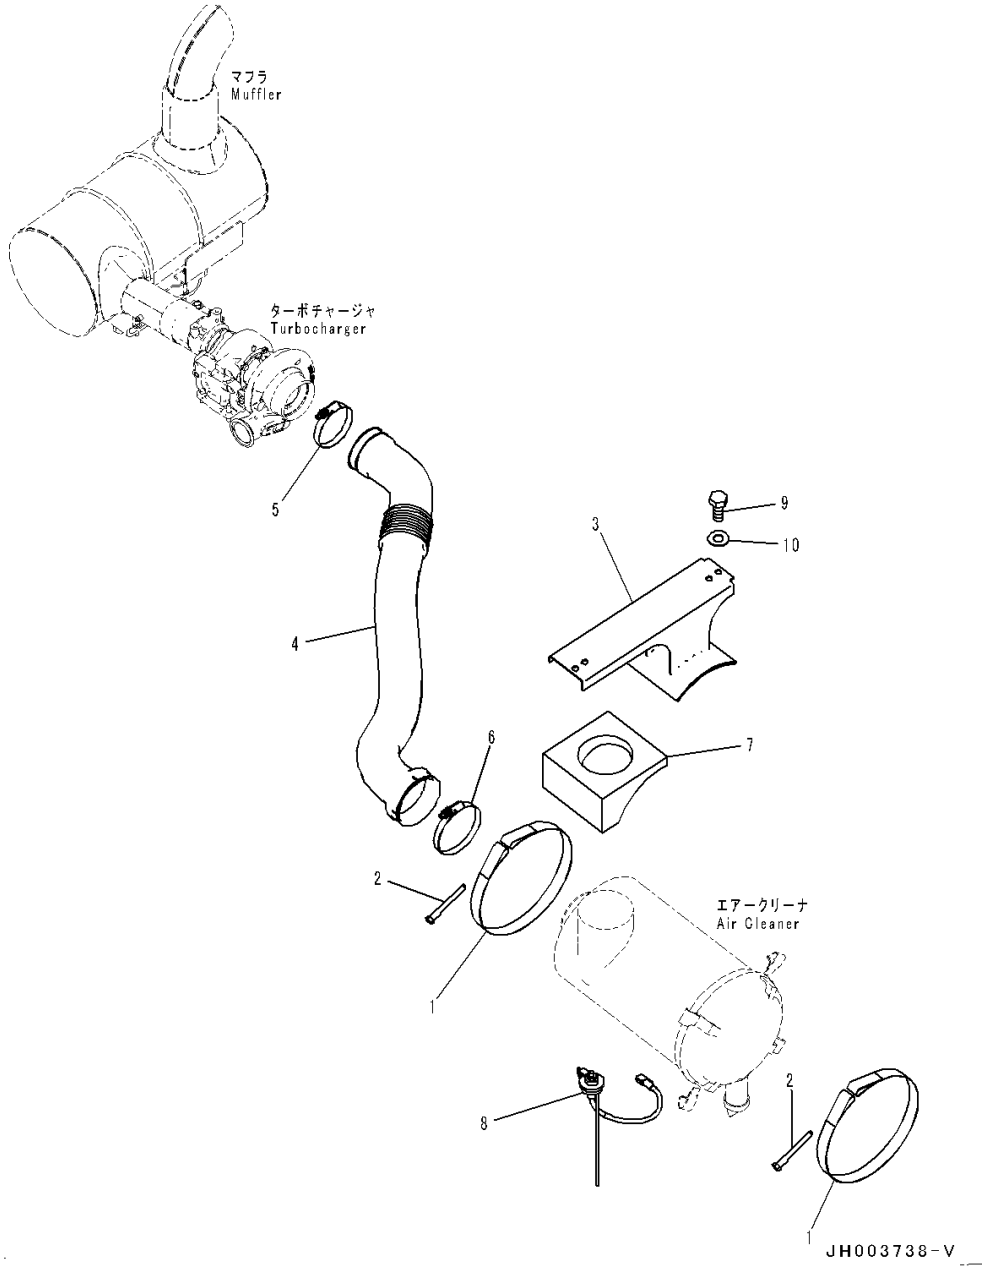


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 6222-81-7190 | Band | 2 | 315646- |
| 2 | | 6643-11-4641 | Bolt | 2 | 315646- |
| 3 | | 20Y-01-41190 | Frame | 1 | 315646- |
| 4 | | 20Y-01-41110 | Hose | 1 | 315646- |
| 5 | | 07299-00105 | Clamp, Hose | 1 | 315646- |
| 6 | | 07299-00130 | Clamp, Hose | 1 | 315646- |
| 7 | | 20Y-01-41220 | Seal | 1 | 315646- |
| 8 | | 7861-93-1421 | Sensor | 1 | 315708- |
| 9 | | 01010-81230 | Bolt | 4 | 315646- |
| 10 | | 01643-31232 | Washer | 4 | 315646- |

https://truckmanualshub.com/

# FIG. B0200-002001 Air Intake Connector, With Pre-cleaner, Inner Parts, Air Cleaner

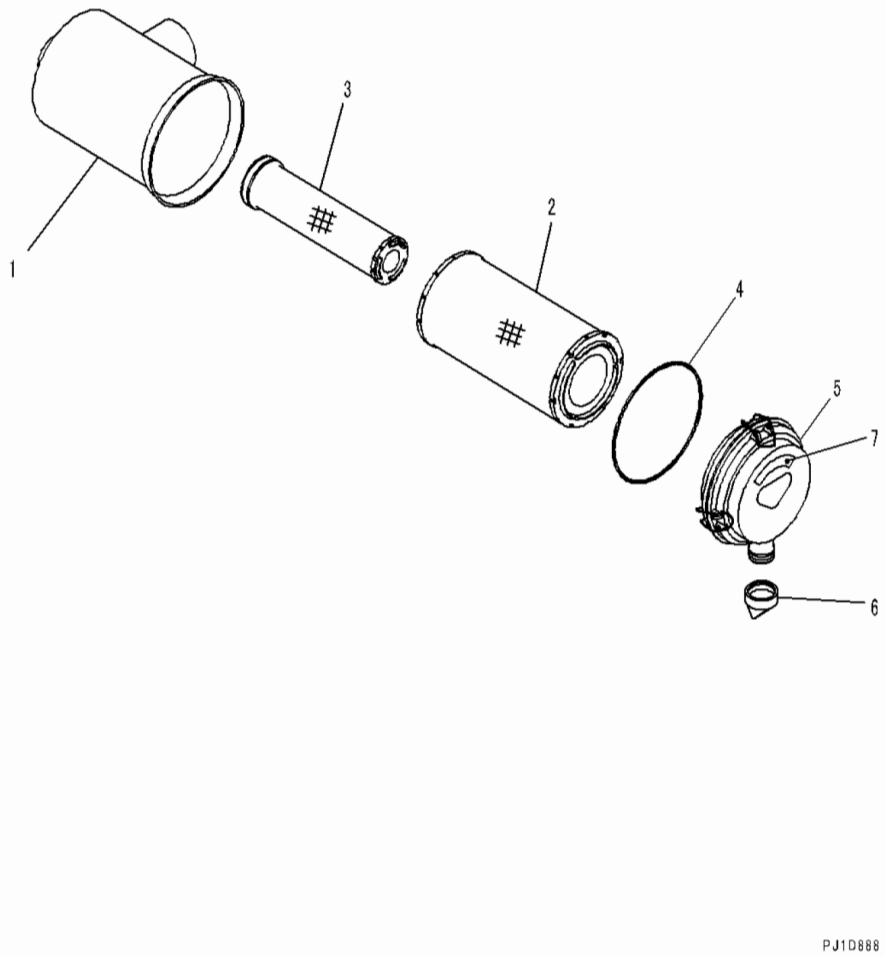



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6738-81-7500 | Air Cleaner Assembly | 1 | Y200001- |
| 1 | | 6738-81-7570 | • Body | 1 | Y200001- |
| | | 600-185-4100 | • Element Assembly | 1 | Y200001- |
| 2 | | 600-185-4110 | •• Element | 1 | Y200001- |
| 3 | C1 | | •• Element | 1 | Y200001- |
| 4 | | 600-184-1470 | •• O-ring | 1 | Y200001- |
| 5 | | 600-184-1420 | • Cover | 1 | Y200001- |
| 6 | | 600-184-1350 | • Valve, Vaquator | 1 | Y200001- |
| 7 | | 600-181-1930 | • Plate, Service Instruction | 1 | Y200001- |

# COOLING SYSTEM

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. C0100-020001 Cooling System, Radiator

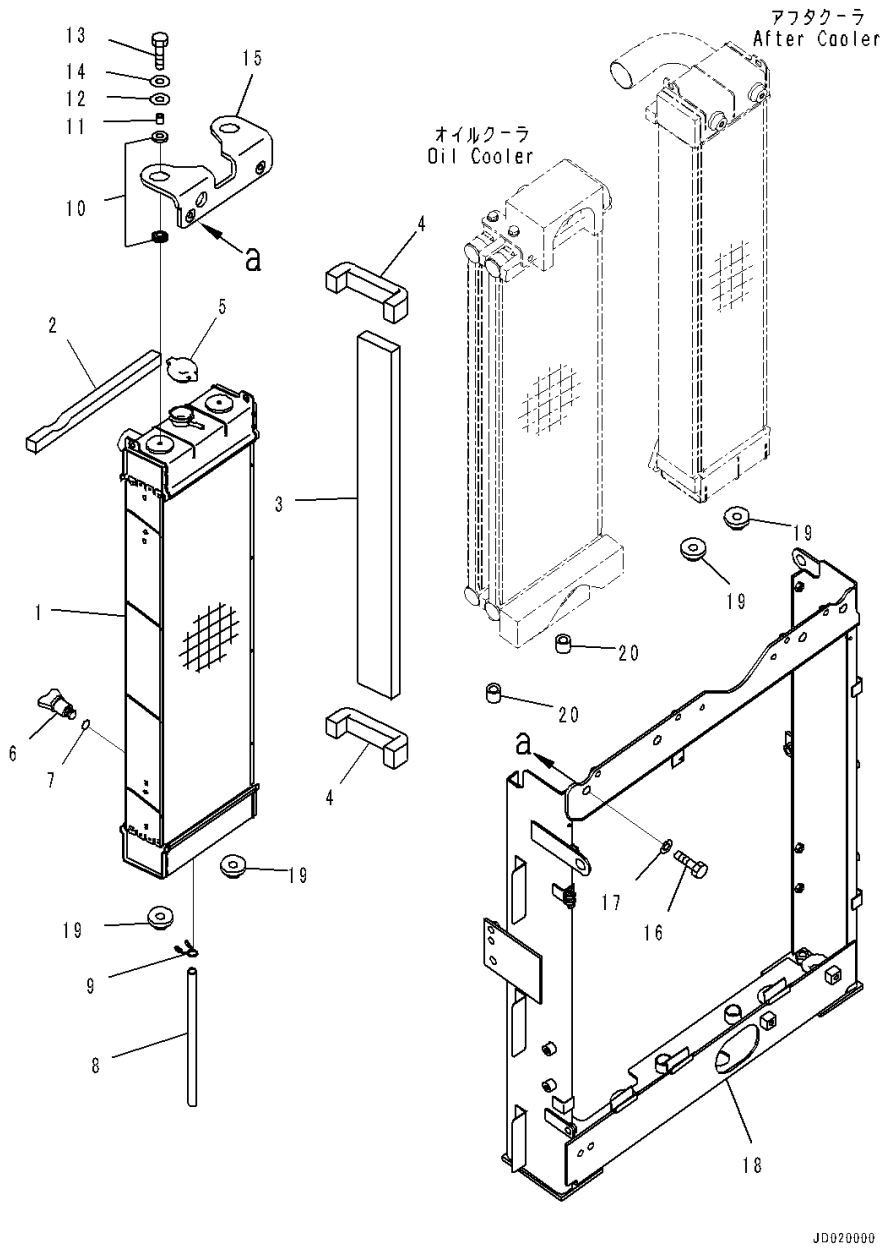


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-03-42452 | Radiator Assembly | 1 | Y200001- |
| 1 | C1 | | • Radiator | 1 | Y200001- |
| 2 | | 20Y-03-42650 | • Sheet | 1 | Y200001- |
| 3 | | 20Y-03-42270 | • Sheet | 1 | Y200001- |
| 4 | | 20Y-03-42160 | • Sheet | 2 | Y200001- |
| 5 | | 20Y-03-22110 | Cap | 1 | Y200001- |
| 6 | | 205-03-62660 | Plug | 1 | Y200001- |
| 7 | | 07000-11007 | • O-ring | 1 | Y200001- |
| 8 | | 203-03-41410 | Hose | 1 | Y200001- |
| 9 | | 20Y-03-11330 | Clip | 1 | Y200001- |
| 10 | | 14X-03-51621 | Cushion | 4 | Y200001- |
| 11 | | 14X-03-51640 | Spacer | 2 | Y200001- |
| 12 | | 14X-03-51770 | Washer | 2 | Y200001- |
| 13 | | 01010-81045 | Bolt | 2 | Y200001- |
| 14 | | 01643-31032 | Washer | 2 | Y200001- |
| 15 | | 20Y-03-42840 | Bracket | 1 | Y200001- |
| 16 | | 01010-81225 | Bolt | 2 | Y200001- |
| 17 | | 01643-31232 | Washer | 2 | Y200001- |
| 18 | | 20Y-03-42511 | Frame | 1 | Y200001- |
| 19 | | 20Y-03-41580 | Cushion | 4 | Y200001- |
| 20 | | 20Y-03-41590 | Cushion | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. C0100-020002 Cooling System, Aftercooler And Oil Cooler

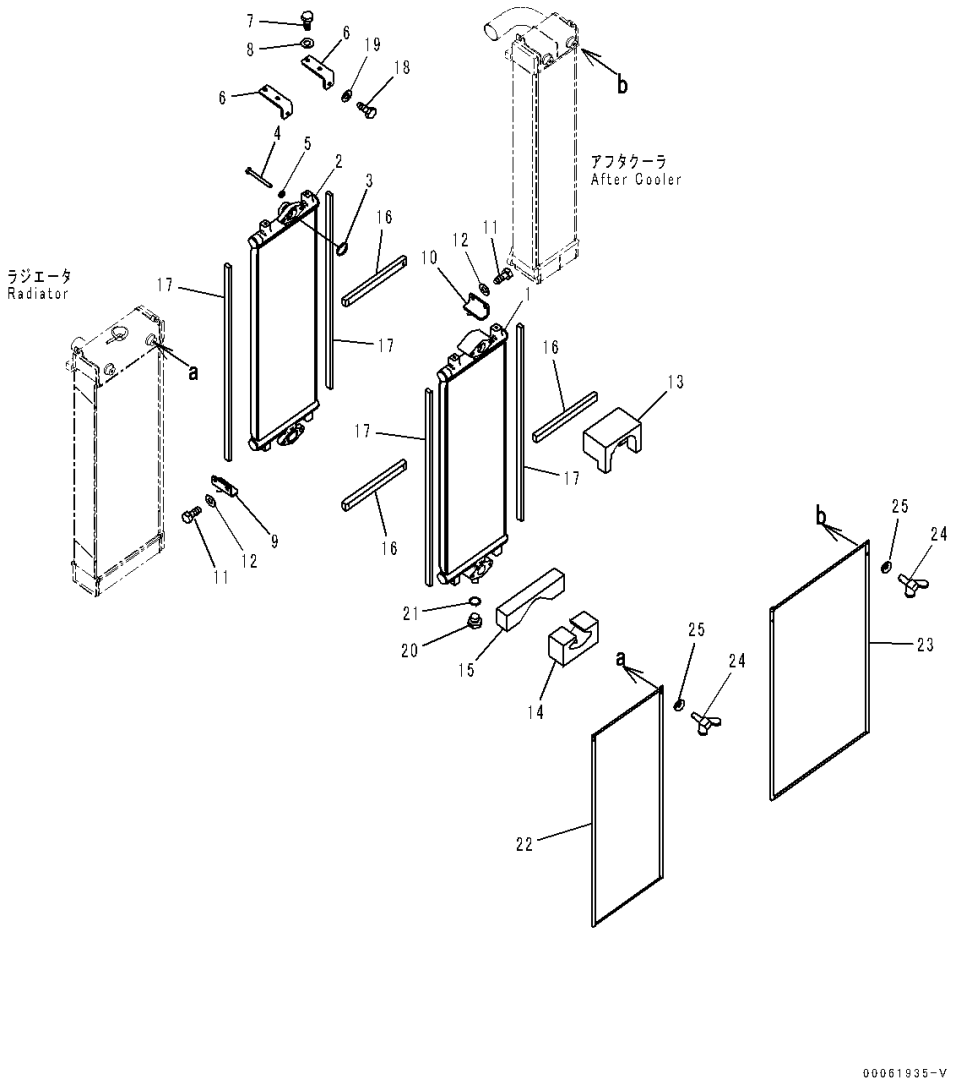


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-03-42561 | Oil Cooler | 1 | Y200001- |
| 2 | | 20Y-03-42571 | Oil Cooler | 1 | Y200001- |
| 3 | | 07000-13045 | O-ring | 2 | Y200001- |
| 4 | | 01010-81240 | Bolt | 4 | Y200001- |
| 5 | | 01643-31232 | Washer | 4 | Y200001- |
| 6 | | 20Y-03-42610 | Bracket | 2 | Y200001- |
| 7 | | 01010-81025 | Bolt | 4 | Y200001- |
| 8 | | 01643-31032 | Washer | 4 | Y200001- |
| 9 | | 20Y-03-42620 | Bracket | 1 | Y200001- |
| 10 | | 20Y-03-42630 | Bracket | 1 | Y200001- |
| 11 | | 01010-81025 | Bolt | 4 | Y200001- |
| 12 | | 01643-31032 | Washer | 4 | Y200001- |
| 13 | | 206-03-21470 | Sheet | 1 | Y200001- |
| 14 | | 206-03-21520 | Sheet | 1 | Y200001- |
| 15 | | 20Y-03-42640 | Sheet | 1 | Y200001- |
| 16 | | 22U-03-22790 | Sheet | 3 | Y200001- |
| 17 | | 206-03-21580 | Sheet | 4 | Y200001- |
| 18 | | 01010-81030 | Bolt | 2 | Y200001- |
| 19 | | 01643-31032 | Washer | 2 | Y200001- |
| 20 | | 07040-11409 | Plug | 1 | Y200001- |
| 21 | | 07002-11423 | O-ring | 1 | Y200001- |
| 22 | | 20Y-03-42670 | Net | 1 | Y200001- |
| 23 | | 20Y-03-42710 | Net | 1 | Y200001- |
| 24 | | 01434-10616 | Bolt, Wing | 4 | Y200001- |
| 25 | | 01643-30623 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. C0100-020003 Cooling System, After Cooler And Shroud

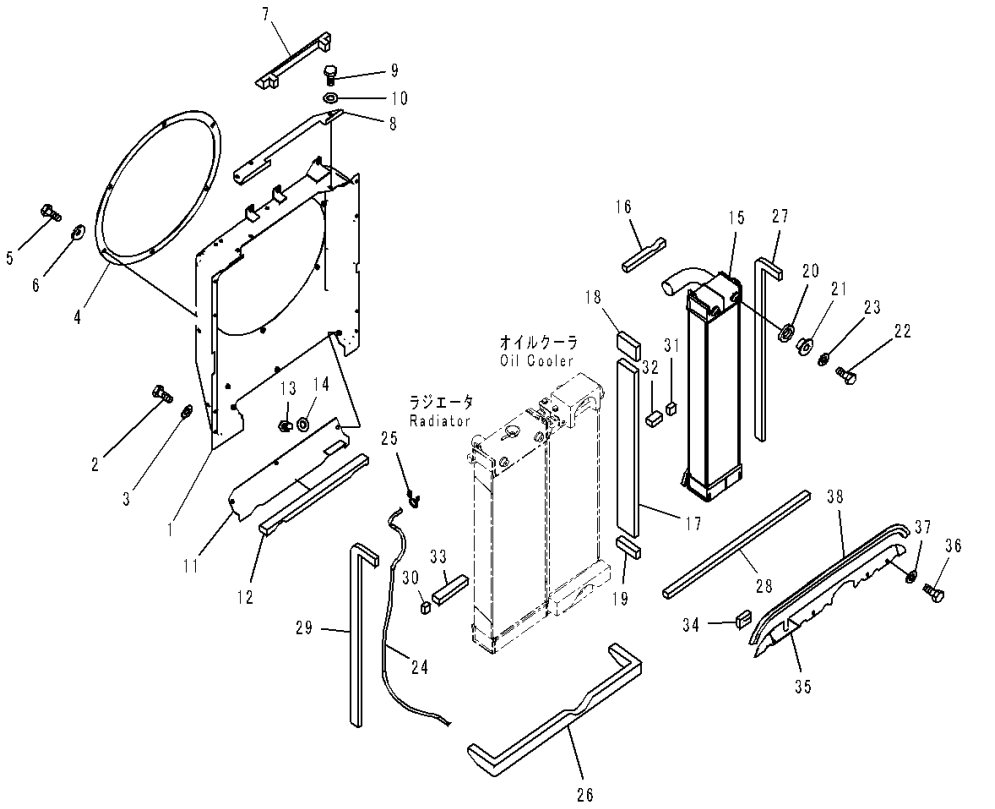


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-03-42471 | Shroud | 1 | Y200001- |
| 2 | | 01010-81020 | Bolt | 8 | Y200001- |
| 3 | | 01643-31032 | Washer | 8 | Y200001- |
| 4 | | 20Y-03-41321 | Plate | 1 | Y200001- |
| 5 | | 01010-81020 | Bolt | 6 | Y200001- |
| 6 | | 203-54-56970 | Washer | 6 | Y200001- |
| 7 | | 20Y-03-42210 | Sheet | 1 | Y200001- |
| 8 | | 20Y-03-42190 | Cover | 1 | Y200001- |
| 9 | | 01010-81020 | Bolt | 3 | Y200001- |
| 10 | | 01643-31032 | Washer | 3 | Y200001- |
| 11 | | 20Y-03-42820 | Cover | 1 | Y200001- |
| 12 | | 20Y-03-42830 | Sheet | 1 | Y200001- |
| 13 | | 01010-81020 | Bolt | 3 | Y200001- |
| 14 | | 01643-31032 | Washer | 3 | Y200001- |
| 15 | | 20Y-03-41131 | After Cooler | 1 | Y200001- |
| 16 | | 20Y-03-41491 | Sheet | 1 | Y200001- |
| 17 | | 20Y-03-42260 | Sheet | 1 | Y200001- |
| 18 | | 20Y-03-42160 | Sheet | 1 | Y200001- |
| 19 | | 20Y-03-42290 | Sheet | 1 | Y200001- |
| 20 | | 22U-03-22860 | Cushion | 2 | Y200001- |
| 21 | | 6738-61-4952 | Collar | 2 | Y200001- |
| 22 | | 01010-81030 | Bolt | 2 | Y200001- |
| 23 | | 01643-31032 | Washer | 2 | Y200001- |
| 24 | | 20Y-03-42340 | Hose | 1 | Y200001- |
| 25 | | 206-03-43340 | Clip | 1 | Y200001- |
| 26 | | 20Y-03-41391 | Sheet | 1 | Y200001- |
| 27 | | 206-03-21310 | Sheet | 1 | Y200001- |
| 28 | | 206-03-21320 | Sheet | 1 | Y200001- |
| 29 | | 206-03-21310 | Sheet | 1 | Y200001- |
| 30 | | 206-03-21560 | Sheet | 1 | Y200001- |
| 31 | | 206-03-21570 | Sheet | 1 | Y200001- |
| 32 | | 20Y-03-41461 | Sheet | 1 | Y200001- |
| 33 | | 20Y-03-41521 | Sheet | 1 | Y200001- |
| 34 | | 20Y-03-41633 | Sheet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. C0100-020003 Cooling System, After Cooler And Shroud

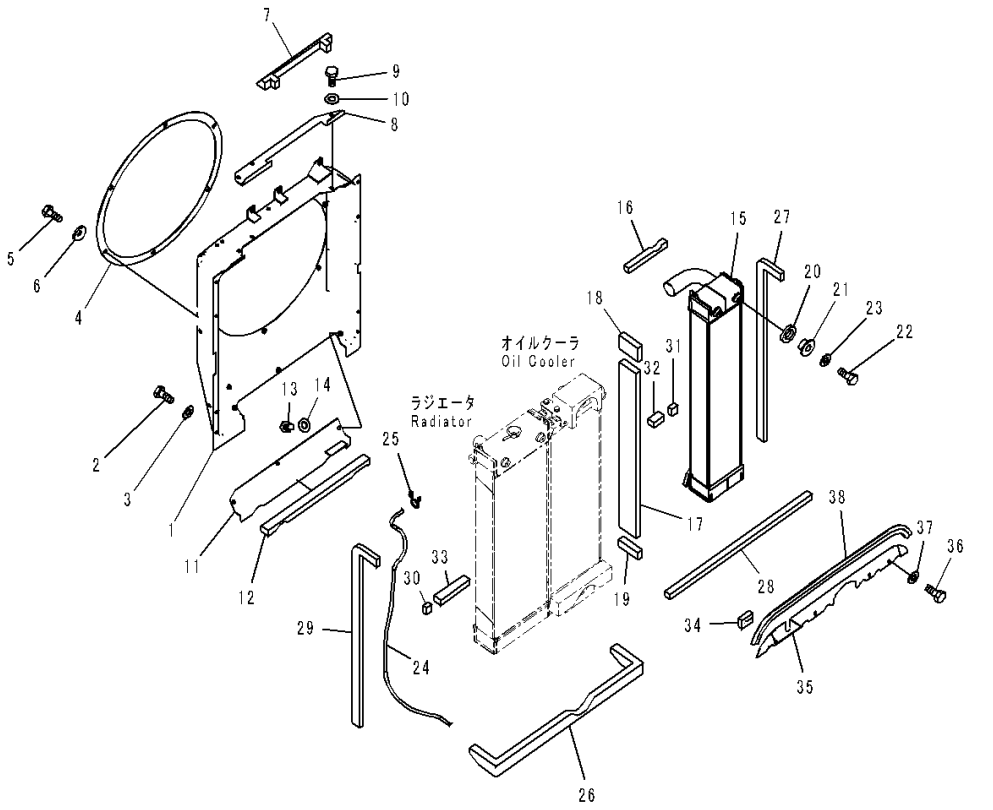


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 35 | | 20Y-03-42721 | Cover | 1 | Y200001- |
| 36 | | 01010-81020 | Bolt | 4 | Y200001- |
| 37 | | 01643-31032 | Washer | 4 | Y200001- |
| 38 | | 20Y-03-41870 | Seal | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. C0100-020004 Cooling System, Fuel Cooler And Condenser

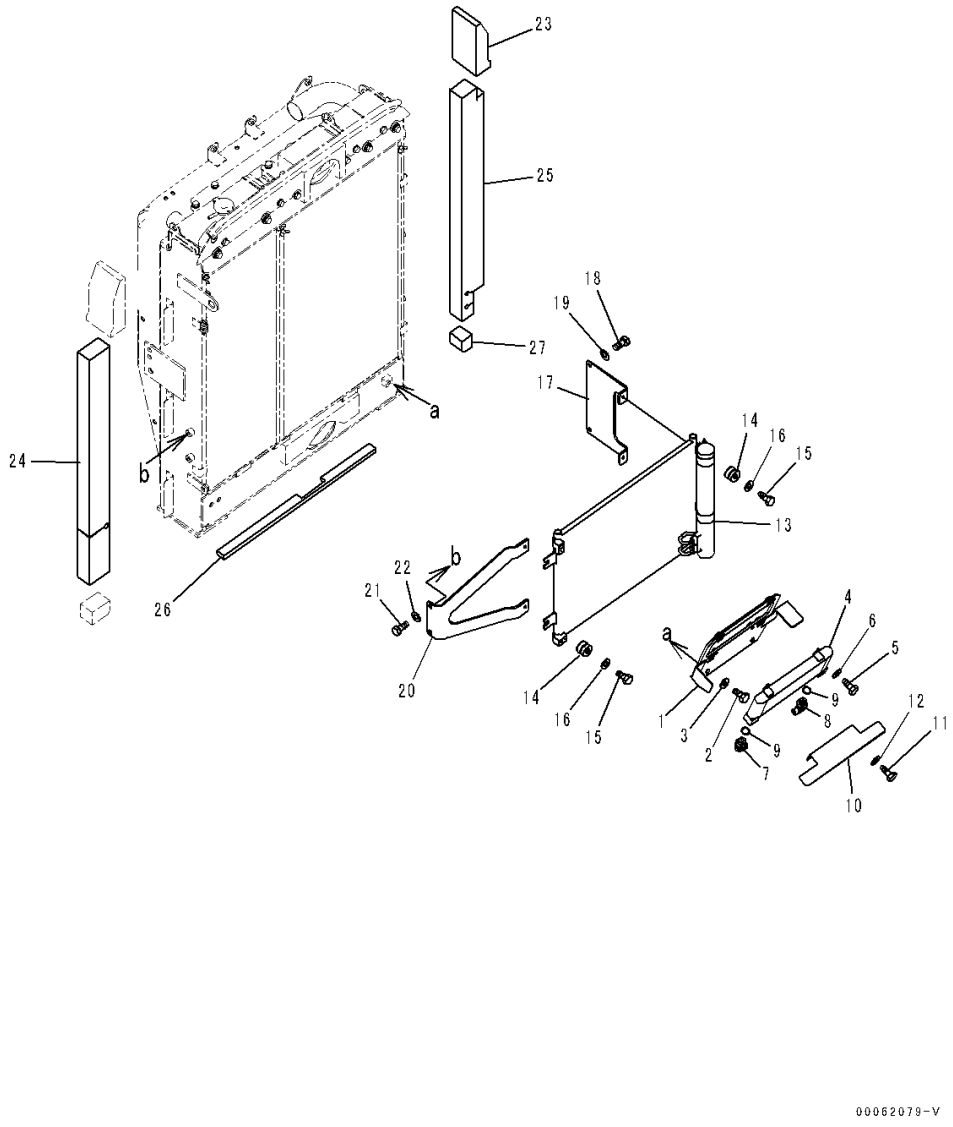


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-03-41750 | Bracket | 1 | Y200001- |
| 2 | | 01010-81225 | Bolt | 2 | Y200001- |
| 3 | | 01643-31232 | Washer | 2 | Y200001- |
| 4 | | 208-03-71161 | Oil Cooler | 1 | Y200001- |
| 5 | | 01010-80825 | Bolt | 4 | Y200001- |
| 6 | | 01643-30823 | Washer | 4 | Y200001- |
| 7 | | 02782-10315 | Elbow | 1 | Y200001- |
| 8 | | 02782-10315 | Elbow | 1 | Y200001- |
| 9 | | 07002-12034 | O-ring | 2 | Y200001- |
| 10 | | 208-03-71290 | Cover | 1 | Y200001- |
| 11 | | 01010-81020 | Bolt | 2 | Y200001- |
| 12 | | 01643-31032 | Washer | 2 | Y200001- |
| 13 | | 20Y-810-1221 | Condenser Assembly | 1 | Y200001- |
| | | 20Y-810-1250 | • Filter | 1 | Y200001- |
| 14 | | 20Y-810-1240 | Cushion | 4 | Y200001- |
| 15 | | 01010-80835 | Bolt | 4 | Y200001- |
| 16 | | 01643-30823 | Washer | 4 | Y200001- |
| 17 | | 20Y-03-41371 | Bracket | 1 | Y200001- |
| 18 | | 01010-81020 | Bolt | 2 | Y200001- |
| 19 | | 01643-31032 | Washer | 2 | Y200001- |
| 20 | | 20Y-03-42440 | Bracket | 1 | Y200001- |
| 21 | | 01010-81020 | Bolt | 2 | Y200001- |
| 22 | | 01643-31032 | Washer | 2 | Y200001- |
| 23 | | 206-03-21371 | Sheet | 1 | Y200001- |
| 24 | | 20Y-03-41541 | Sheet | 1 | Y200001- |
| 25 | | 20Y-03-41562 | Sheet | 1 | Y200001- |
| 26 | | 20Y-03-41572 | Sheet | 1 | Y200001- |
| 27 | | 20Y-03-41841 | Sheet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. C0100-020005 Cooling System, Fan Guard And After Cooler Piping

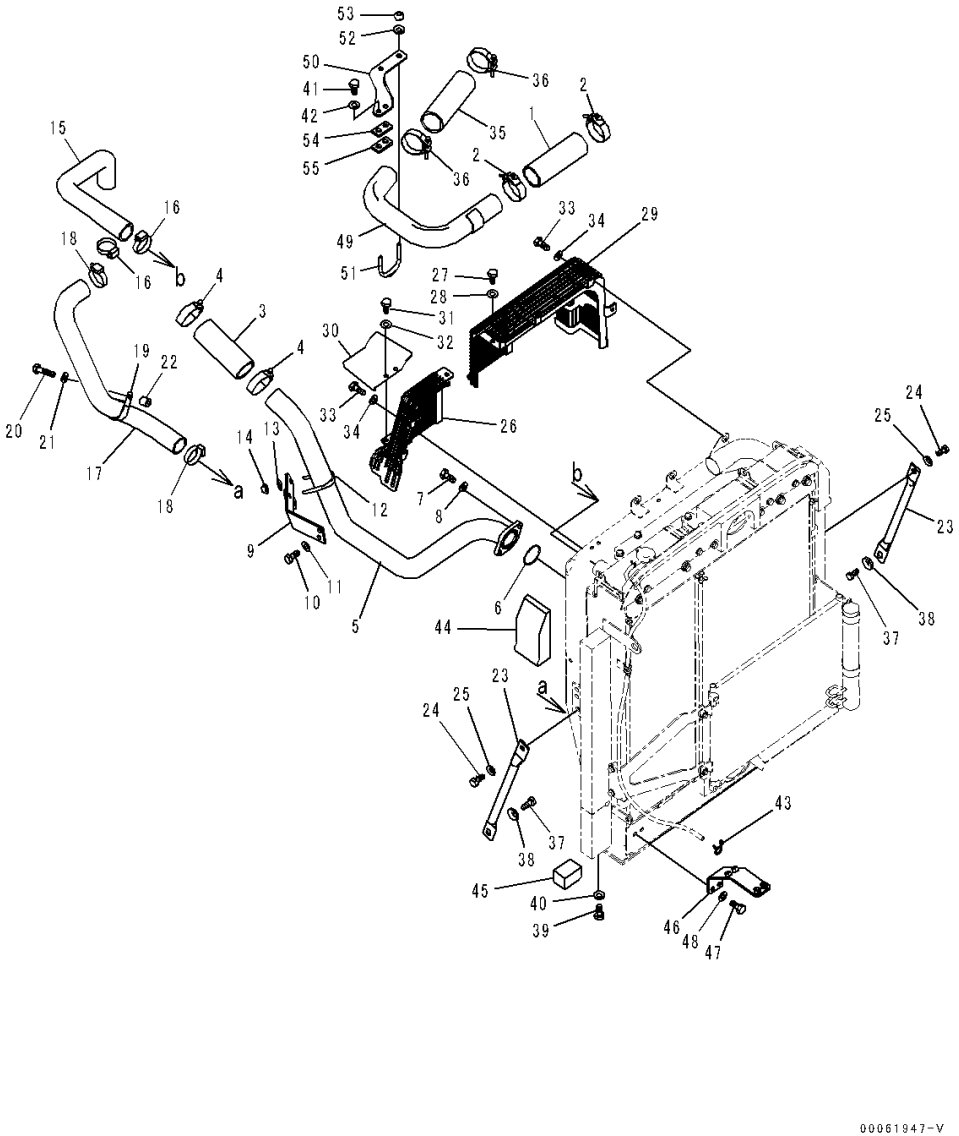


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-03-21151 | Hose | 1 | Y200001- |
| 2 | | 07299-00070 | Clamp | 2 | Y200001- |
| 3 | | 20Y-03-41181 | Hose | 1 | Y200001- |
| 4 | | 21T-62-69711 | Clamp, Hose | 2 | Y200001- |
| 5 | | 20Y-03-41191 | Tube | 1 | Y200001- |
| 6 | | 07000-E2065 | O-ring | 1 | Y200001- |
| 7 | | 01010-81030 | Bolt | 2 | Y200001- |
| 8 | | 01643-31032 | Washer | 2 | Y200001- |
| 9 | | 206-03-21651 | Bracket | 1 | Y200001- |
| 10 | | 01010-81230 | Bolt | 2 | Y200001- |
| 11 | | 01643-31232 | Washer | 2 | Y200001- |
| 12 | | 07283-37060 | Clip, Pipe | 1 | Y200001- |
| 13 | | 01643-31032 | Washer | 2 | Y200001- |
| 14 | | 01597-01009 | Nut | 2 | Y200001- |
| 15 | | 20Y-03-41141 | Hose | 1 | Y200001- |
| 16 | | 07289-00055 | Clamp | 2 | Y200001- |
| 17 | | 20Y-03-42250 | Hose | 1 | Y200001- |
| 18 | | 07289-00055 | Clamp | 2 | Y200001- |
| 19 | | 208-62-38370 | Clip | 1 | Y200001- |
| 20 | | 01010-81045 | Bolt | 1 | Y200001- |
| 21 | | 01643-31032 | Washer | 1 | Y200001- |
| 22 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 23 | | 20Y-03-32660 | Stay | 2 | Y200001- |
| 24 | | 01010-81635 | Bolt | 2 | Y200001- |
| 25 | | 01643-31645 | Washer | 2 | Y200001- |
| 26 | | 20Y-03-42490 | Guard | 1 | Y200001- |
| 27 | | 01010-81025 | Bolt | 1 | Y200001- |
| 28 | | 01643-31032 | Washer | 1 | Y200001- |
| 29 | | 20Y-03-41622 | Guard | 1 | Y200001- |
| 30 | | 20Y-03-41811 | Bracket | 1 | Y200001- |
| 31 | | 01010-81020 | Bolt | 2 | Y200001- |
| 32 | | 01643-31032 | Washer | 2 | Y200001- |
| 33 | | 01010-81025 | Bolt | 6 | Y200001- |
| 34 | | 01643-31032 | Washer | 6 | Y200001- |
| 35 | | 20Y-03-41161 | Hose | 1 | Y200001- |
| 36 | | 21T-62-69711 | Clamp, Hose | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. C0100-020005 Cooling System, Fan Guard And After Cooler Piping

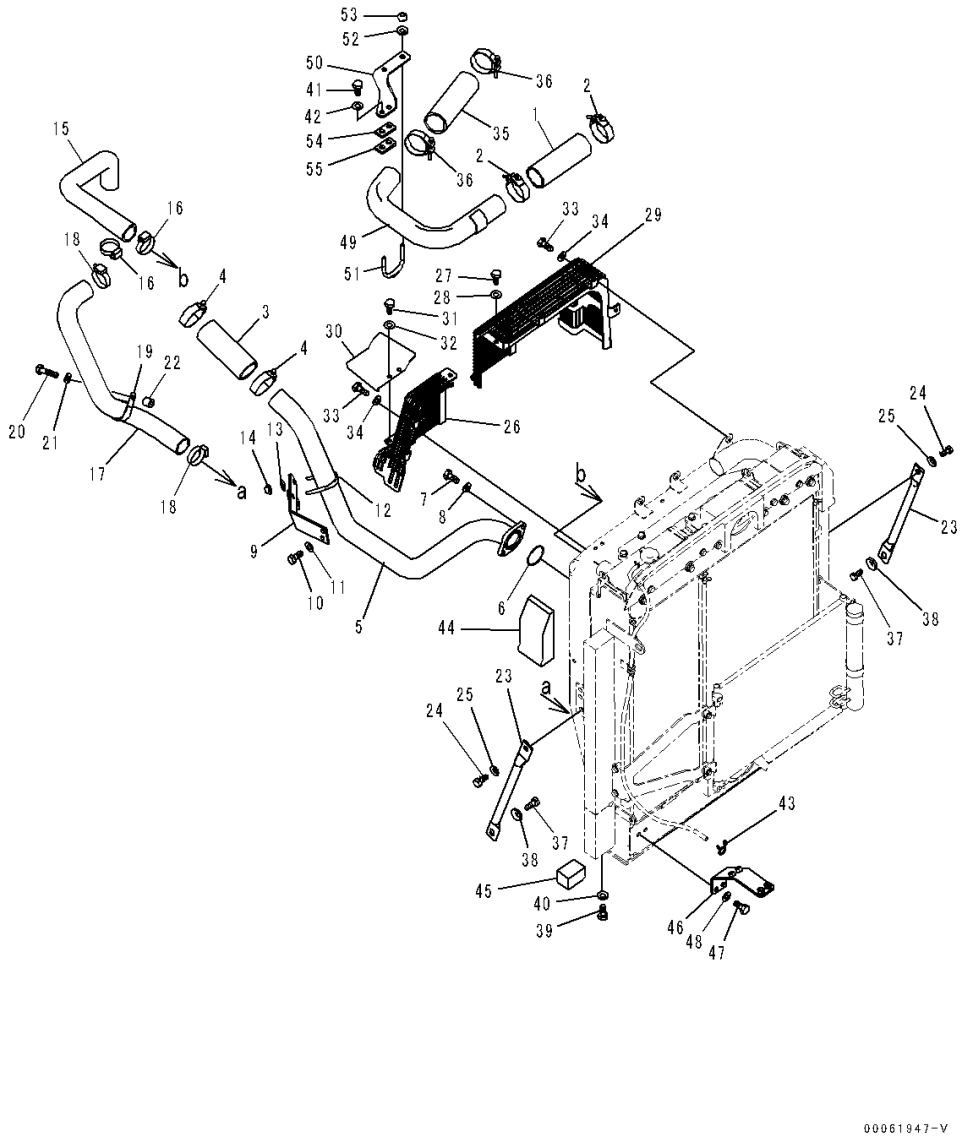


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 37 | | 01010-81635 | Bolt | 2 | Y200001- |
| 38 | | 21T-54-16150 | Washer | 2 | Y200001- |
| 39 | | 01010-81640 | Bolt | 4 | Y200001- |
| 40 | | 01643-31645 | Washer | 4 | Y200001- |
| 41 | | 01010-81030 | Bolt | 3 | Y200001- |
| 42 | | 01643-31032 | Washer | 3 | Y200001- |
| 43 | | 206-03-43340 | Clip | 1 | Y200001- |
| 44 | | 206-03-21371 | Sheet | 1 | Y200001- |
| 45 | | 20Y-03-41831 | Sheet | 1 | Y200001- |
| 46 | | 20Y-62-51481 | Bracket | 1 | Y200001- |
| 47 | | 01010-81225 | Bolt | 2 | Y200001- |
| 48 | | 01643-31232 | Washer | 2 | Y200001- |
| 49 | | 20Y-03-41171 | Tube | 1 | Y200001- |
| 50 | | 20Y-03-42480 | Bracket | 1 | Y200001- |
| 51 | | 07283-37060 | Clip, Pipe | 1 | Y200001- |
| 52 | | 01643-31032 | Washer | 2 | Y200001- |
| 53 | | 01597-01009 | Nut | 2 | Y200001- |
| 54 | | 154-Z11-1290 | Shim, T=3.2mm | 2 | Y200001- |
| 55 | | 154-Z11-1280 | Shim, T=9.0mm | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. C0100-022005 Cooling System, Fan Guard And After Cooler Piping, For 35 Amp. Sealed Alternator

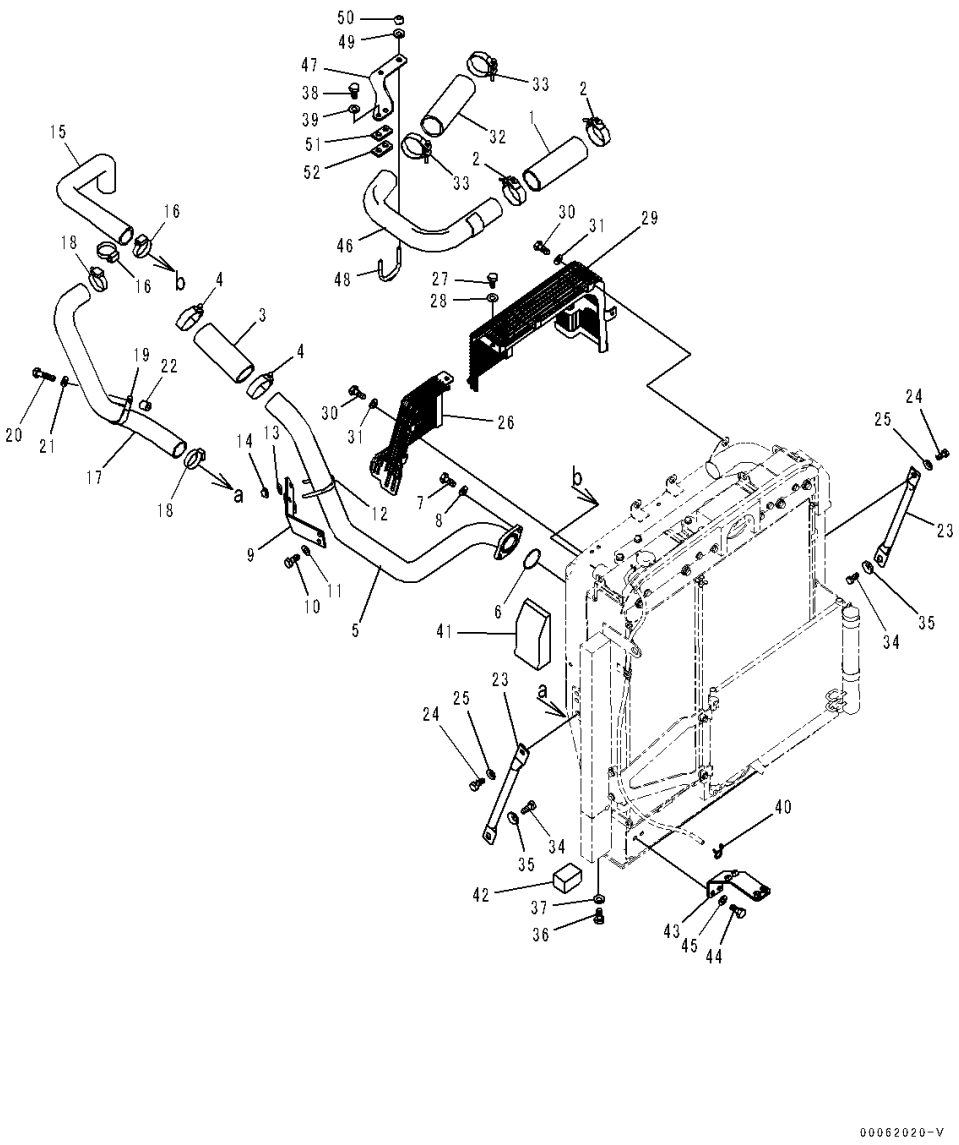


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-03-21151 | Hose | 1 | Y200001- |
| 2 | | 07299-00070 | Clamp | 2 | Y200001- |
| 3 | | 20Y-03-41181 | Hose | 1 | Y200001- |
| 4 | | 21T-62-69711 | Clamp, Hose | 2 | Y200001- |
| 5 | | 20Y-03-41191 | Tube | 1 | Y200001- |
| 6 | | 07000-E2065 | O-ring | 1 | Y200001- |
| 7 | | 01010-81030 | Bolt | 2 | Y200001- |
| 8 | | 01643-31032 | Washer | 2 | Y200001- |
| 9 | | 206-03-21651 | Bracket | 1 | Y200001- |
| 10 | | 01010-81230 | Bolt | 2 | Y200001- |
| 11 | | 01643-31232 | Washer | 2 | Y200001- |
| 12 | | 07283-37060 | Clip, Pipe | 1 | Y200001- |
| 13 | | 01643-31032 | Washer | 2 | Y200001- |
| 14 | | 01597-01009 | Nut | 2 | Y200001- |
| 15 | | 20Y-03-41141 | Hose | 1 | Y200001- |
| 16 | | 07289-00055 | Clamp | 2 | Y200001- |
| 17 | | 20Y-03-42250 | Hose | 1 | Y200001- |
| 18 | | 07289-00055 | Clamp | 2 | Y200001- |
| 19 | | 208-62-38370 | Clip | 1 | Y200001- |
| 20 | | 01010-81045 | Bolt | 1 | Y200001- |
| 21 | | 01643-31032 | Washer | 1 | Y200001- |
| 22 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 23 | | 20Y-03-32660 | Stay | 2 | Y200001- |
| 24 | | 01010-81635 | Bolt | 2 | Y200001- |
| 25 | | 01643-31645 | Washer | 2 | Y200001- |
| 26 | | 20Y-03-42750 | Guard | 1 | Y200001- |
| 27 | | 01010-81025 | Bolt | 1 | Y200001- |
| 28 | | 01643-31032 | Washer | 1 | Y200001- |
| 29 | | 20Y-03-41622 | Guard | 1 | Y200001- |
| 30 | | 01010-81025 | Bolt | 6 | Y200001- |
| 31 | | 01643-31032 | Washer | 6 | Y200001- |
| 32 | | 20Y-03-41161 | Hose | 1 | Y200001- |
| 33 | | 21T-62-69711 | Clamp, Hose | 2 | Y200001- |
| 34 | | 01010-81635 | Bolt | 2 | Y200001- |
| 35 | | 21T-54-16150 | Washer | 2 | Y200001- |
| 36 | | 01010-81640 | Bolt | 4 | Y200001- |

https://truckmanualshub.com/

# FIG. C0100-022005 Cooling System, Fan Guard And After Cooler Piping

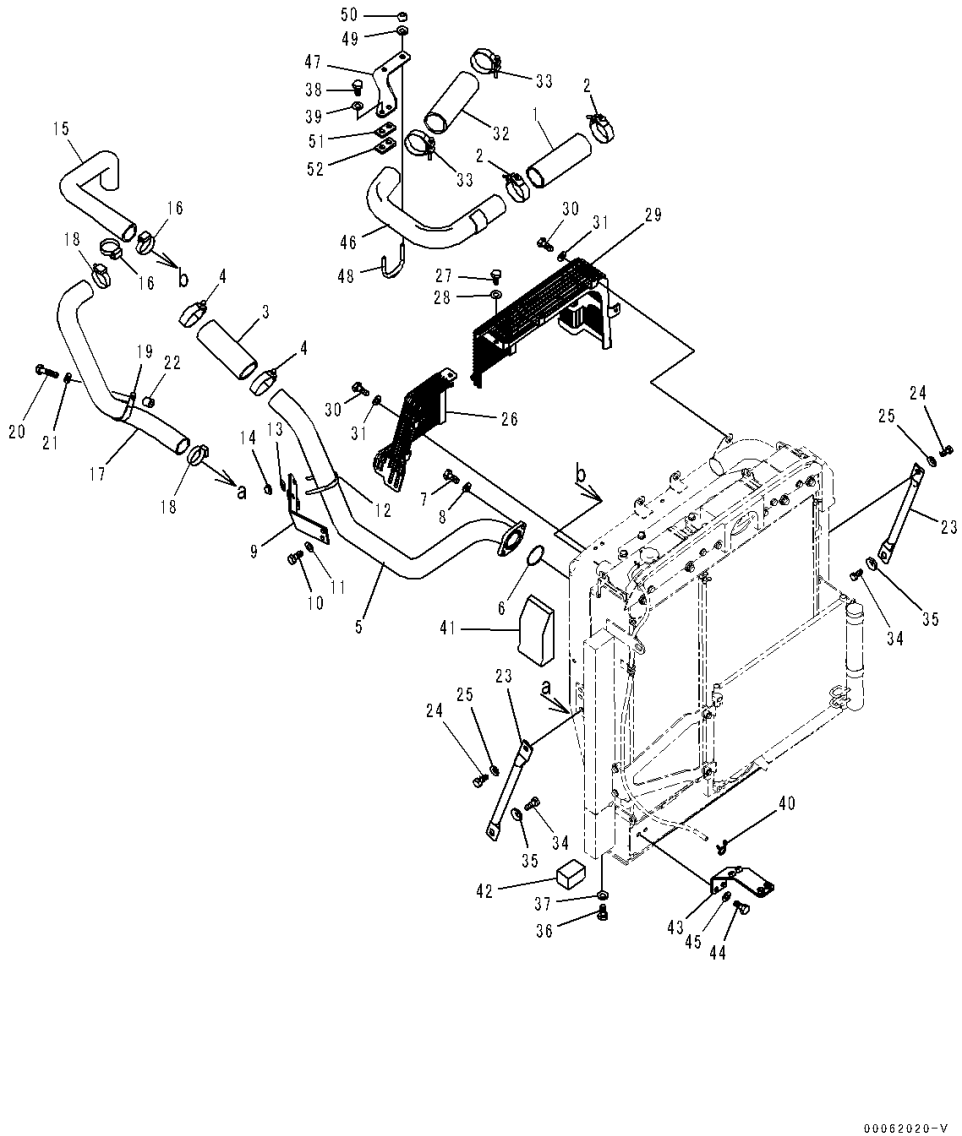



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 37 | | 01643-31645 | Washer | 4 | Y200001- |
| 38 | | 01010-81030 | Bolt | 3 | Y200001- |
| 39 | | 01643-31032 | Washer | 3 | Y200001- |
| 40 | | 206-03-43340 | Clip | 1 | Y200001- |
| 41 | | 206-03-21371 | Sheet | 1 | Y200001- |
| 42 | | 20Y-03-41831 | Sheet | 1 | Y200001- |
| 43 | | 20Y-62-51481 | Bracket | 1 | Y200001- |
| 44 | | 01010-81225 | Bolt | 2 | Y200001- |
| 45 | | 01643-31232 | Washer | 2 | Y200001- |
| 46 | | 20Y-03-41171 | Tube | 1 | Y200001- |
| 47 | | 20Y-03-42480 | Bracket | 1 | Y200001- |
| 48 | | 07283-37060 | Clip, Pipe | 1 | Y200001- |
| 49 | | 01643-31032 | Washer | 2 | Y200001- |
| 50 | | 01597-01009 | Nut | 2 | Y200001- |
| 51 | | 154-Z11-1290 | Shim, T=3.2mm | 2 | Y200001- |
| 52 | | 154-Z11-1280 | Shim, T=9.0mm | 1 | Y200001- |

# FUEL SYSTEM

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. D0100-001001 Fuel Tank

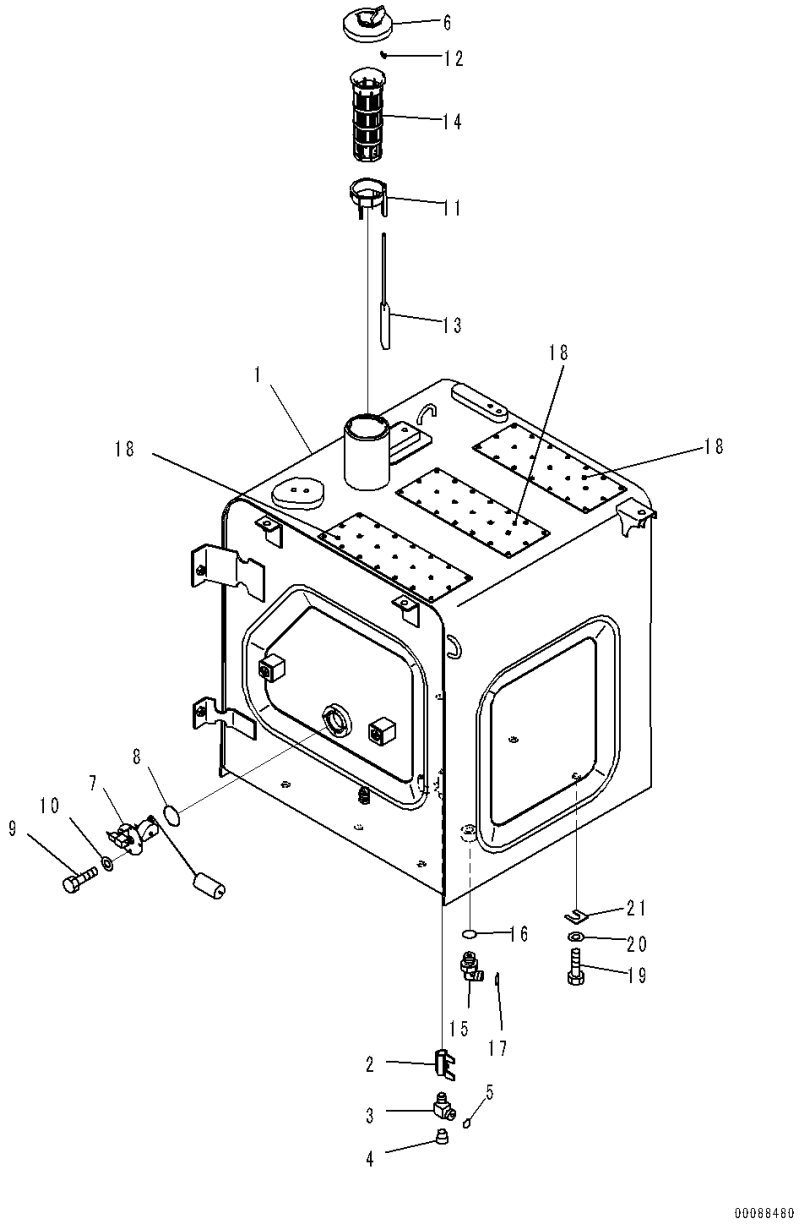


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-04-21310 | Tank | 1 | Y200001- |
| 2 | | 07700-50240 | Valve | 1 | Y200001- |
| 3 | | 20Y-04-41231 | Elbow | 1 | Y200001- |
| 4 | | 07043-A0108 | Plug | 1 | Y200001- |
| 5 | | 02896-11009 | O-ring | 1 | Y200001- |
| 6 | | 20Y-04-11161 | Cap | 1 | Y200001- |
| | | 20Y-04-11240 | • Packing | 1 | Y200001- |
| 7 | | 7861-92-5810 | Sensor | 1 | Y200001- |
| 8 | | 07000-13050 | O-ring | 1 | Y200001- |
| 9 | | 01010-80612 | Bolt | 4 | Y200001- |
| 10 | | 01643-30623 | Washer | 4 | Y200001- |
| | | 22U-04-21241 | Strainer Assembly | 1 | Y200001- |
| | | 22U-04-21200 | • Float Assembly | 1 | Y200001- |
| 11 | | 22U-04-21210 | •• Guide | 1 | Y200001- |
| 12 | | 20Y-04-21580 | •• Cap | 1 | Y200001- |
| 13 | | 22U-04-21220 | •• Float | 1 | Y200001- |
| 14 | | 07056-18425 | • Strainer | 1 | Y200001- |
| 15 | | 20Y-04-41590 | Elbow | 1 | Y200001- |
| 16 | | 07002-12034 | O-ring | 1 | Y200001- |
| 17 | | 02896-11009 | O-ring | 1 | Y200001- |
| 18 | | 20Y-00-42110 | Plate | 3 | Y200001- |
| 19 | | 01010-81635 | Bolt | 6 | Y200001- |
| 20 | | 01643-31645 | Washer | 6 | Y200001- |
| 21 | | 195-03-11570 | Shim, T=1.0mm | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. D0100-002001 Fuel Tank, For Fuel Refill Pump

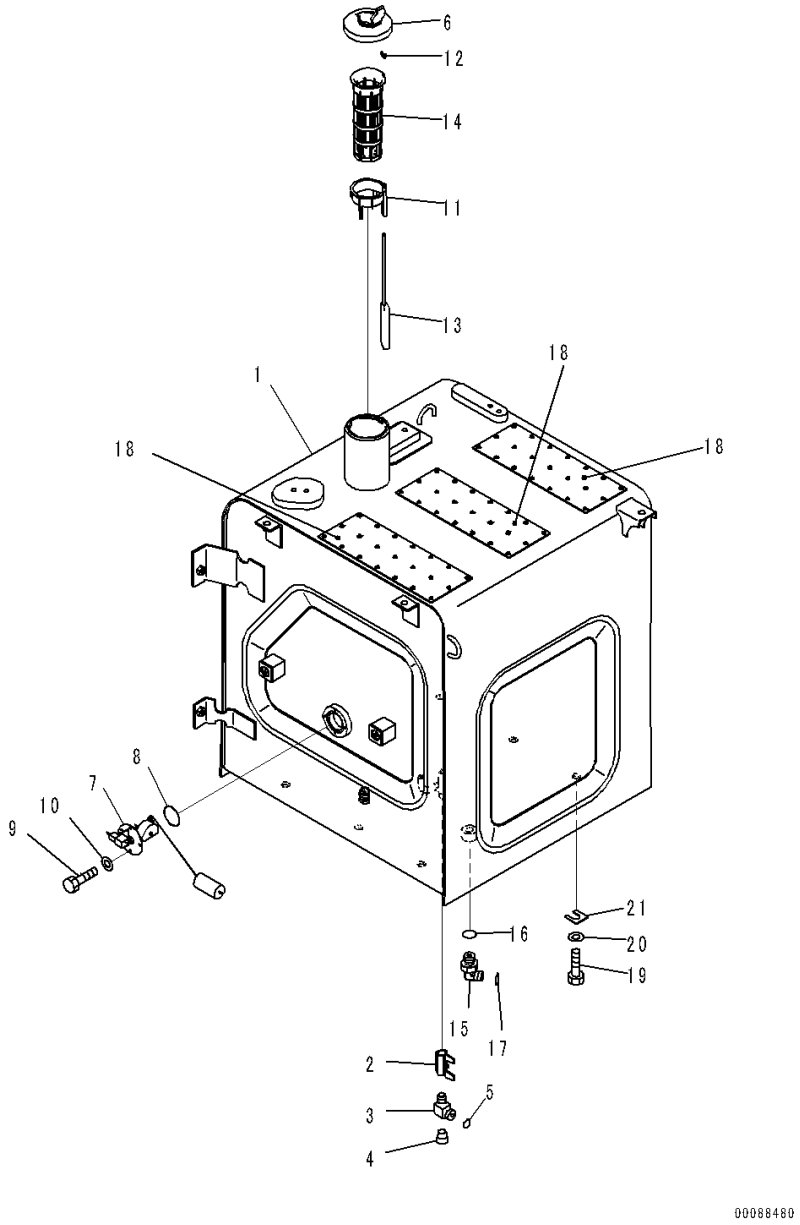


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-04-21112 | Tank | 1 | Y200001- |
| 2 | | 07700-50240 | Valve | 1 | Y200001- |
| 3 | | 20Y-04-41231 | Elbow | 1 | Y200001- |
| 4 | | 07043-A0108 | Plug | 1 | Y200001- |
| 5 | | 02896-11009 | O-ring | 1 | Y200001- |
| 6 | | 20Y-04-11161 | Cap | 1 | Y200001- |
| | | 20Y-04-11240 | • Packing | 1 | Y200001- |
| 7 | | 7861-92-5810 | Sensor | 1 | Y200001- |
| 8 | | 07000-13050 | O-ring | 1 | Y200001- |
| 9 | | 01010-80612 | Bolt | 4 | Y200001- |
| 10 | | 01643-30623 | Washer | 4 | Y200001- |
| | | 22U-04-21241 | Strainer Assembly | 1 | Y200001- |
| | | 22U-04-21200 | • Float Assembly | 1 | Y200001- |
| 11 | | 22U-04-21210 | •• Guide | 1 | Y200001- |
| 12 | | 20Y-04-21580 | •• Cap | 1 | Y200001- |
| 13 | | 22U-04-21220 | •• Float | 1 | Y200001- |
| 14 | | 07056-18425 | • Strainer | 1 | Y200001- |
| 15 | | 20Y-04-41590 | Elbow | 1 | Y200001- |
| 16 | | 07002-12034 | O-ring | 1 | Y200001- |
| 17 | | 02896-11009 | O-ring | 1 | Y200001- |
| 18 | | 20Y-00-42110 | Plate | 3 | Y200001- |
| 19 | | 01010-81635 | Bolt | 6 | Y200001- |
| 20 | | 01643-31645 | Washer | 6 | Y200001- |
| 21 | | 195-03-11570 | Shim, T=1.0mm | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. D0200-001002 Fuel Supply Piping, Pre Filter

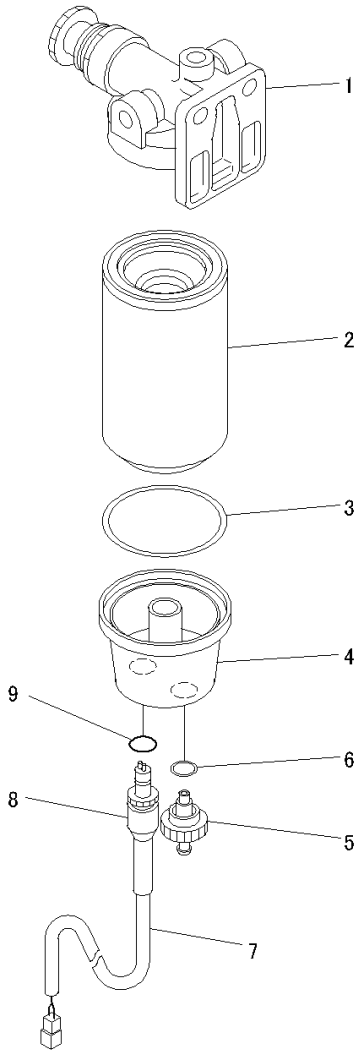


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 6754-71-7402 | Filter Assembly | 1 | Y200001- |
| 1 | | 6754-71-7200 | • Head | 1 | Y200001- |
| | | 600-311-3602 | • Filter Assembly | 1 | Y200001- |
| | | 600-311-3610 | •• Cartridge Assembly | 1 | Y200001- |
| 2 | C1 | | ••• Cartridge | 1 | Y200001- |
| 3 | | 600-311-3630 | ••• Seal | 1 | Y200001- |
| 4 | | 600-311-3640 | •• Bowl | 1 | Y200001- |
| | | 600-311-3660 | •• Valve Assembly | 1 | Y200001- |
| 5 | | 600-311-3711 | ••• Valve | 1 | Y200001- |
| 6 | | 600-311-3670 | ••• Seal | 1 | Y200001- |
| | | 600-311-3722 | •• Sensor | 1 | Y200001- |
| 7 | C1 | | ••• Tube | 1 | Y200001- |
| 8 | C1 | | ••• Sensor | 1 | Y200001- |
| 9 | | 600-311-3690 | ••• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. D0200-004001 Fuel Supply Piping, Fuel Piping

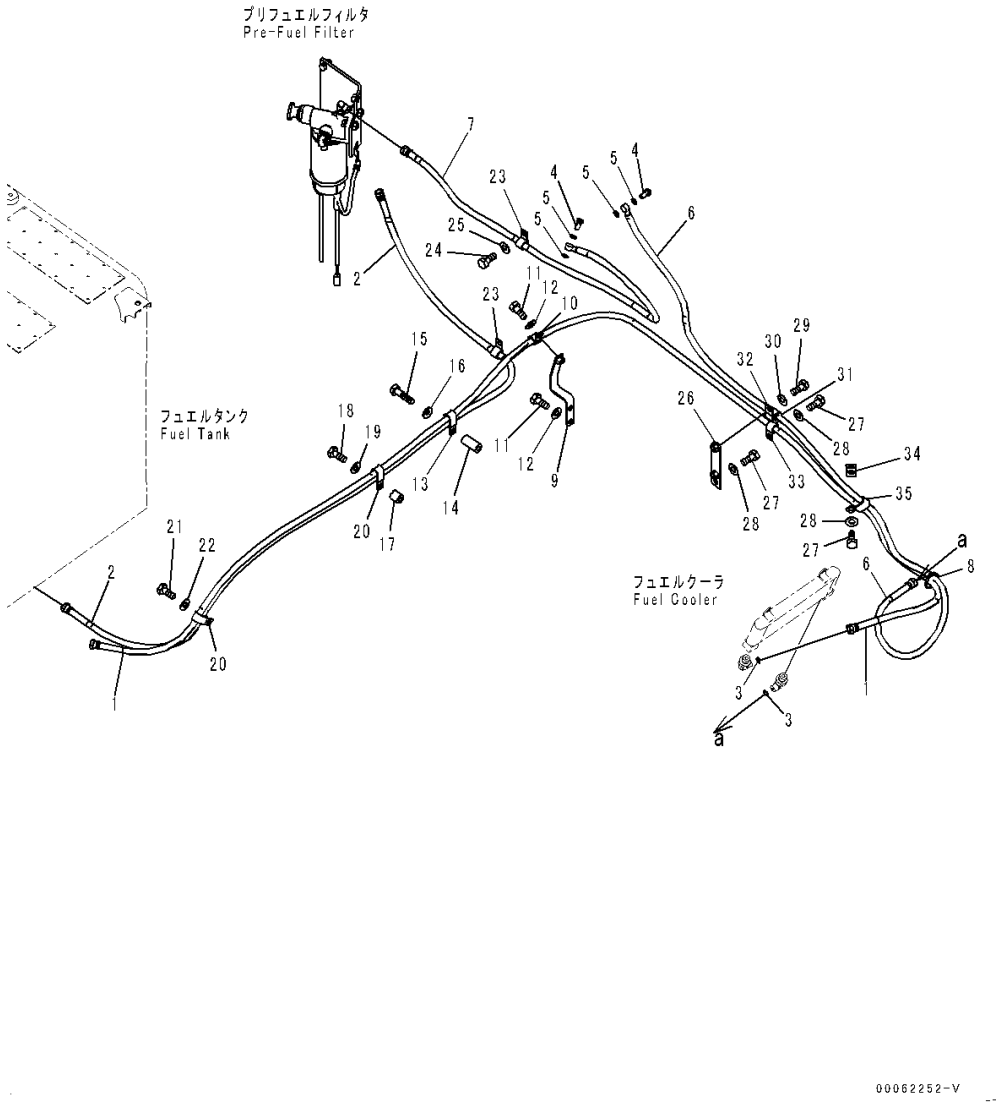


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 02762-00335 | Hose | 1 | Y200001- |
| 2 | | 02762-00325 | Hose | 1 | Y200001- |
| 3 | | 02896-11009 | O-ring | 2 | Y200001- |
| 4 | | 07206-30812 | Bolt, Joint | 2 | Y200001- |
| 5 | | 07005-01212 | Seal, Washer | 4 | Y200001- |
| 6 | | 20Y-04-41414 | Hose | 1 | Y200001- |
| 7 | | 20Y-04-41373 | Hose | 1 | Y200001- |
| 8 | | 08034-20519 | Band | 1 | Y200001- |
| 9 | | 20Y-04-41321 | Bracket | 1 | Y200001- |
| 10 | | 04434-51912 | Clip | 1 | Y200001- |
| 11 | | 01010-81225 | Bolt | 3 | Y200001- |
| 12 | | 01643-31232 | Washer | 3 | Y200001- |
| 13 | | 04435-51812 | Clip | 1 | Y200001- |
| 14 | | 154-979-1480 | Collar | 1 | Y200001- |
| 15 | | 01010-81275 | Bolt | 1 | Y200001- |
| 16 | | 01643-31232 | Washer | 1 | Y200001- |
| 17 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 18 | | 01010-81250 | Bolt | 1 | Y200001- |
| 19 | | 01643-31232 | Washer | 1 | Y200001- |
| 20 | | 04435-51812 | Clip | 2 | Y200001- |
| 21 | | 01010-81225 | Bolt | 1 | Y200001- |
| 22 | | 01643-31232 | Washer | 1 | Y200001- |
| 23 | | 04434-51912 | Clip | 2 | Y200001- |
| 24 | | 01010-81225 | Bolt | 2 | Y200001- |
| 25 | | 01643-31232 | Washer | 2 | Y200001- |
| 26 | | 20Y-04-41421 | Plate | 1 | Y200001- |
| 27 | | 01010-81225 | Bolt | 4 | Y200001- |
| 28 | | 01643-31232 | Washer | 4 | Y200001- |
| 29 | | 01010-81235 | Bolt | 1 | Y200001- |
| 30 | | 01643-31232 | Washer | 1 | Y200001- |
| 31 | | 198-06-53560 | Cushion | 1 | Y200001- |
| 32 | | 04434-52512 | Clip | 1 | Y200001- |
| 33 | | 04434-51812 | Clip | 1 | Y200001- |
| 34 | | 21T-38-71260 | Bracket | 1 | Y200001- |
| 35 | | 04435-51812 | Clip | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. D0200-004003 Fuel Supply Piping, For Fuel Refill Pump, Drain Piping

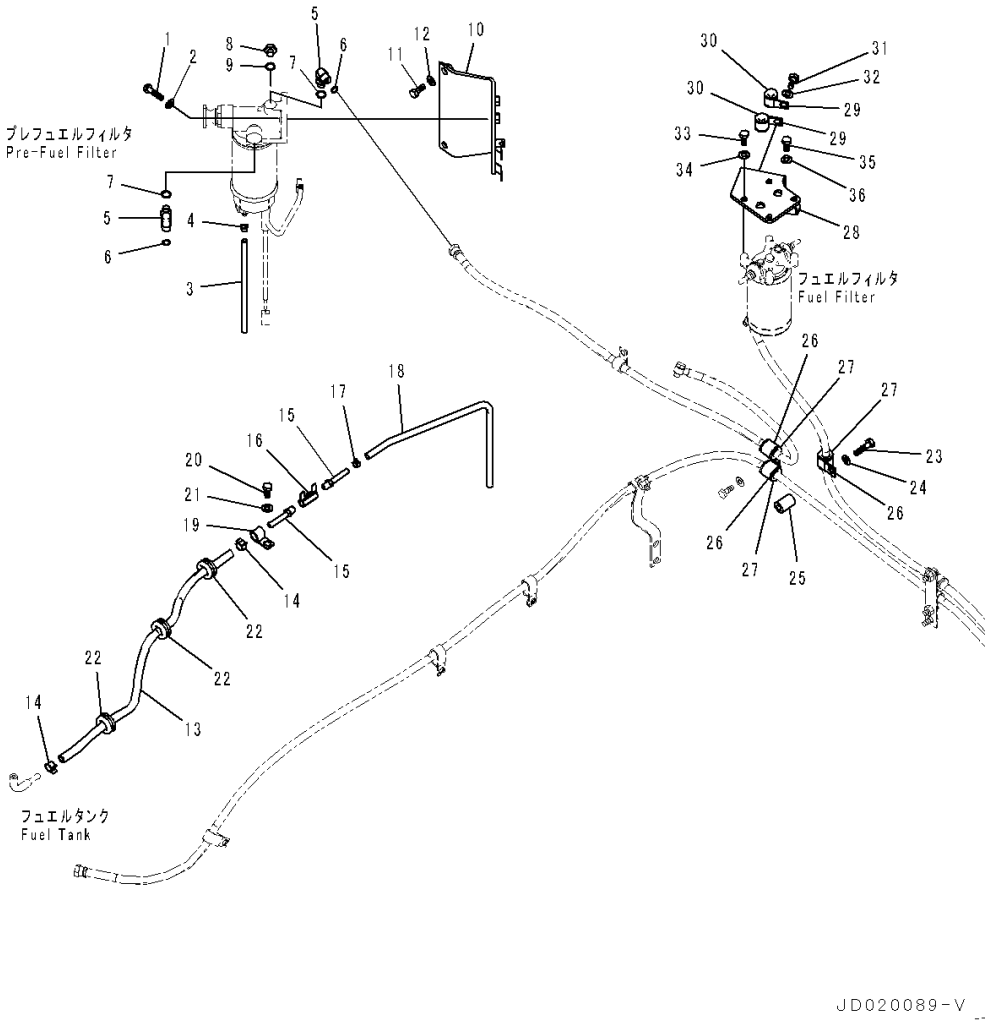


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07372-21235 | Bolt | 2 | Y200001- |
| 2 | | 01643-51232 | Washer | 2 | Y200001- |
| 3 | | 07270-00827 | Tube | 1 | Y200001- |
| 4 | | 07285-00100 | Clip | 1 | Y200001- |
| 5 | | 02782-10311 | Elbow | 2 | Y200001- |
| 6 | | 02896-11009 | O-ring | 2 | Y200001- |
| 7 | | 07002-11423 | O-ring | 2 | Y200001- |
| 8 | | 07040-11409 | Plug | 1 | Y200001- |
| 9 | | 07002-11423 | O-ring | 1 | Y200001- |
| 10 | | 20Y-04-48160 | Bracket | 1 | Y200001- |
| 11 | | 01010-81225 | Bolt | 2 | Y200001- |
| 12 | | 01643-31232 | Washer | 2 | Y200001- |
| 13 | | 20Y-04-41281 | Hose | 1 | Y200001- |
| 14 | | 11Y-09-11140 | Clip | 2 | Y200001- |
| 15 | | 20Y-04-31170 | Nipple | 2 | Y200001- |
| 16 | | 07700-50240 | Valve | 1 | Y200001- |
| 17 | | 07285-00115 | Clip | 1 | Y200001- |
| 18 | | 07270-01070 | Tube | 1 | Y200001- |
| 19 | | 04434-51612 | Clip | 1 | Y200001- |
| 20 | | 01010-81225 | Bolt | 1 | Y200001- |
| 21 | | 01643-31232 | Washer | 1 | Y200001- |
| 22 | | 205-977-7310 | Grommet | 3 | Y200001- |
| 23 | | 01010-81275 | Bolt | 1 | Y200001- |
| 24 | | 01643-31232 | Washer | 1 | Y200001- |
| 25 | | 20Y-03-11220 | Collar | 1 | Y200001- |
| 26 | | 04434-52512 | Clip | 3 | Y200001- |
| 27 | | 198-06-53560 | Cushion | 3 | Y200001- |
| 28 | | 20Y-54-72441 | Bracket | 1 | Y200001- |
| 29 | | 04434-52112 | Clip | 2 | Y200001- |
| 30 | | 198-06-53550 | Cushion | 2 | Y200001- |
| 31 | | 01010-81225 | Bolt | 1 | Y200001- |
| 32 | | 01643-31232 | Washer | 1 | Y200001- |
| 33 | | 01010-80825 | Bolt | 4 | Y200001- |
| 34 | | 01643-30823 | Washer | 4 | Y200001- |
| 35 | | 01010-81225 | Bolt | 2 | Y200001- |
| 36 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. D0200-010001 Fuel Supply Piping, Bad Fuel And Poor Fuel Arrangement, Water+Dust, Fuel Piping

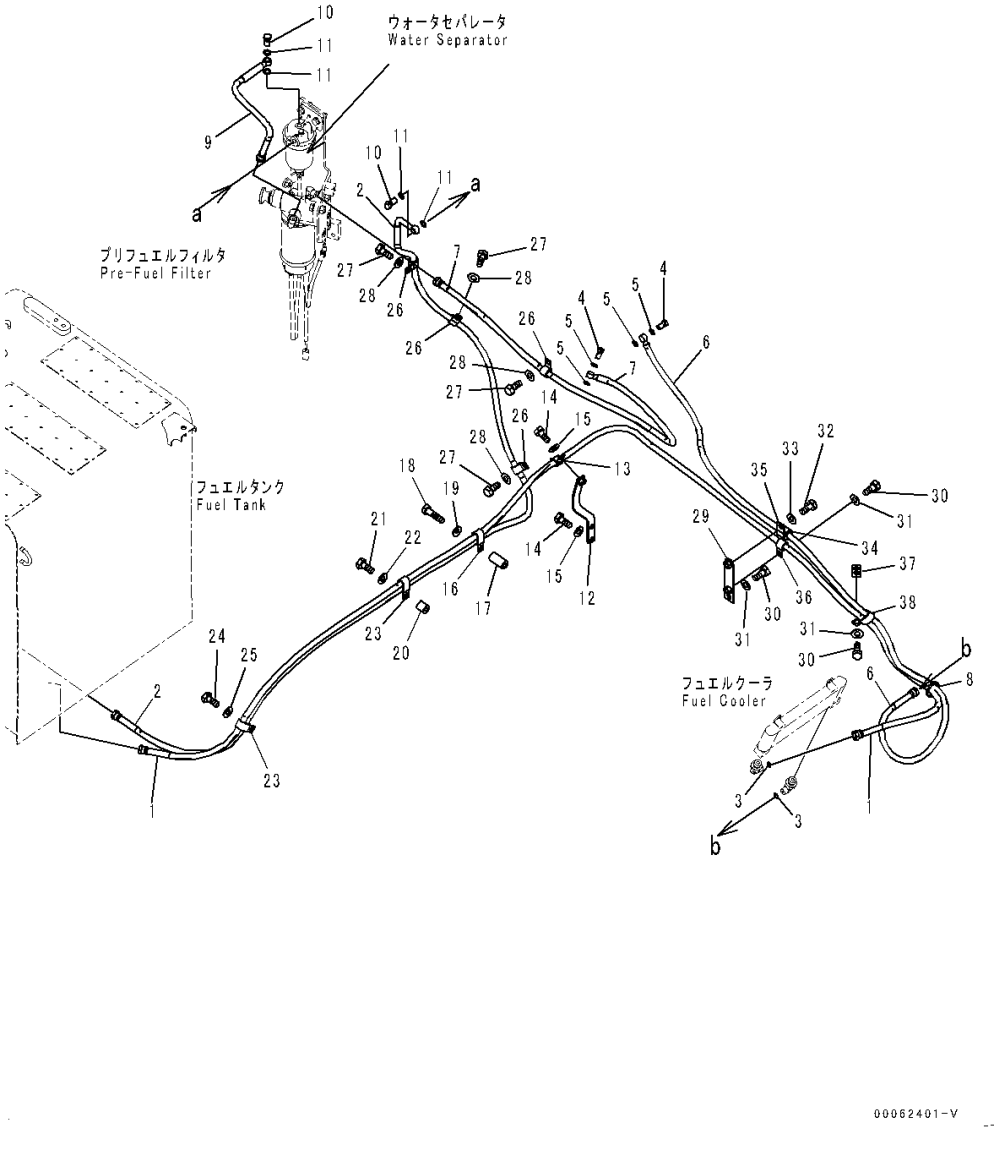


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 02762-00335 | Hose | 1 | Y200001- |
| 2 | | 20Y-04-41530 | Hose | 1 | Y200001- |
| 3 | | 02896-11009 | O-ring | 2 | Y200001- |
| 4 | | 07206-30812 | Bolt, Joint | 2 | Y200001- |
| 5 | | 07005-01212 | Seal, Washer | 4 | Y200001- |
| 6 | | 20Y-04-41414 | Hose | 1 | Y200001- |
| 7 | | 20Y-04-41373 | Hose | 1 | Y200001- |
| 8 | | 08034-20519 | Band | 1 | Y200001- |
| 9 | | 20Y-04-41540 | Hose | 1 | Y200001- |
| 10 | | 07206-31014 | Bolt, Joint | 2 | Y200001- |
| 11 | | 07005-01412 | Gasket | 4 | Y200001- |
| 12 | | 20Y-04-41321 | Bracket | 1 | Y200001- |
| 13 | | 04434-51912 | Clip | 1 | Y200001- |
| 14 | | 01010-81225 | Bolt | 3 | Y200001- |
| 15 | | 01643-31232 | Washer | 3 | Y200001- |
| 16 | | 04435-51812 | Clip | 1 | Y200001- |
| 17 | | 154-979-1480 | Collar | 1 | Y200001- |
| 18 | | 01010-81275 | Bolt | 1 | Y200001- |
| 19 | | 01643-31232 | Washer | 1 | Y200001- |
| 20 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 21 | | 01010-81250 | Bolt | 1 | Y200001- |
| 22 | | 01643-31232 | Washer | 1 | Y200001- |
| 23 | | 04435-51812 | Clip | 2 | Y200001- |
| 24 | | 01010-81225 | Bolt | 1 | Y200001- |
| 25 | | 01643-31232 | Washer | 1 | Y200001- |
| 26 | | 04434-51912 | Clip | 4 | Y200001- |
| 27 | | 01010-81225 | Bolt | 4 | Y200001- |
| 28 | | 01643-31232 | Washer | 4 | Y200001- |
| 29 | | 20Y-04-41421 | Plate | 1 | Y200001- |
| 30 | | 01010-81225 | Bolt | 4 | Y200001- |
| 31 | | 01643-31232 | Washer | 4 | Y200001- |
| 32 | | 01010-81235 | Bolt | 1 | Y200001- |
| 33 | | 01643-31232 | Washer | 1 | Y200001- |
| 34 | | 198-06-53560 | Cushion | 1 | Y200001- |
| 35 | | 04434-52512 | Clip | 1 | Y200001- |
| 36 | | 04434-51812 | Clip | 1 | Y200001- |
| 37 | | 21T-38-71260 | Bracket | 1 | Y200001- |
| 38 | | 04435-51812 | Clip | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. D0200-010003 Fuel Supply Piping, Bad Fuel And Poor Fuel Arrangement, Water+Dust, Fuel Filter

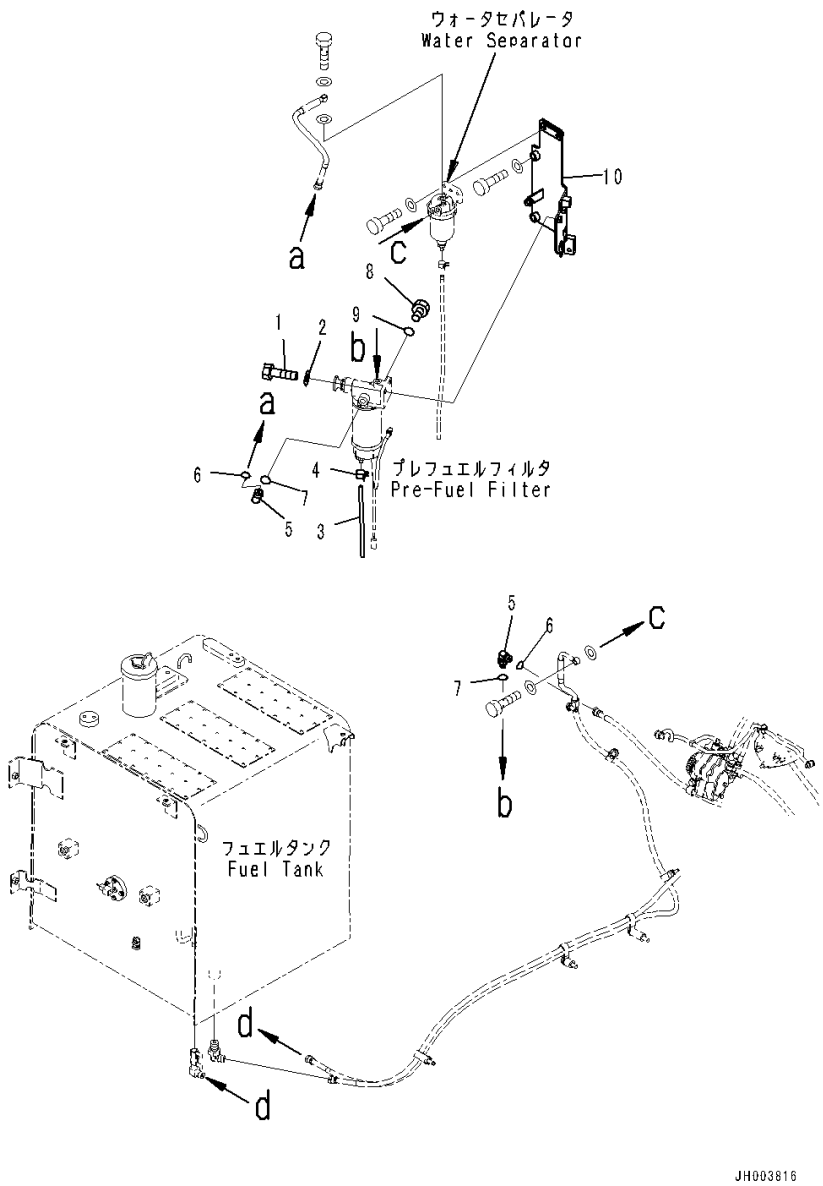


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07372-21235 | Bolt | 2 | Y200001- |
| 2 | | 01643-51232 | Washer | 2 | Y200001- |
| 3 | | 07270-00827 | Tube | 1 | Y200001- |
| 4 | | 07285-00100 | Clip | 1 | Y200001- |
| 5 | | 02782-10311 | Elbow | 2 | Y200001- |
| 6 | | 02896-11009 | O-ring | 2 | Y200001- |
| 7 | | 07002-11423 | O-ring | 2 | Y200001- |
| 8 | | 07040-11409 | Plug | 1 | Y200001- |
| 9 | | 07002-11423 | O-ring | 1 | Y200001- |
| 10 | | 20Y-04-41481 | Bracket | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. D0200-010005 Fuel Supply Piping, Bad Fuel And Poor Fuel Arrangement, Water+Dust, Drain Piping

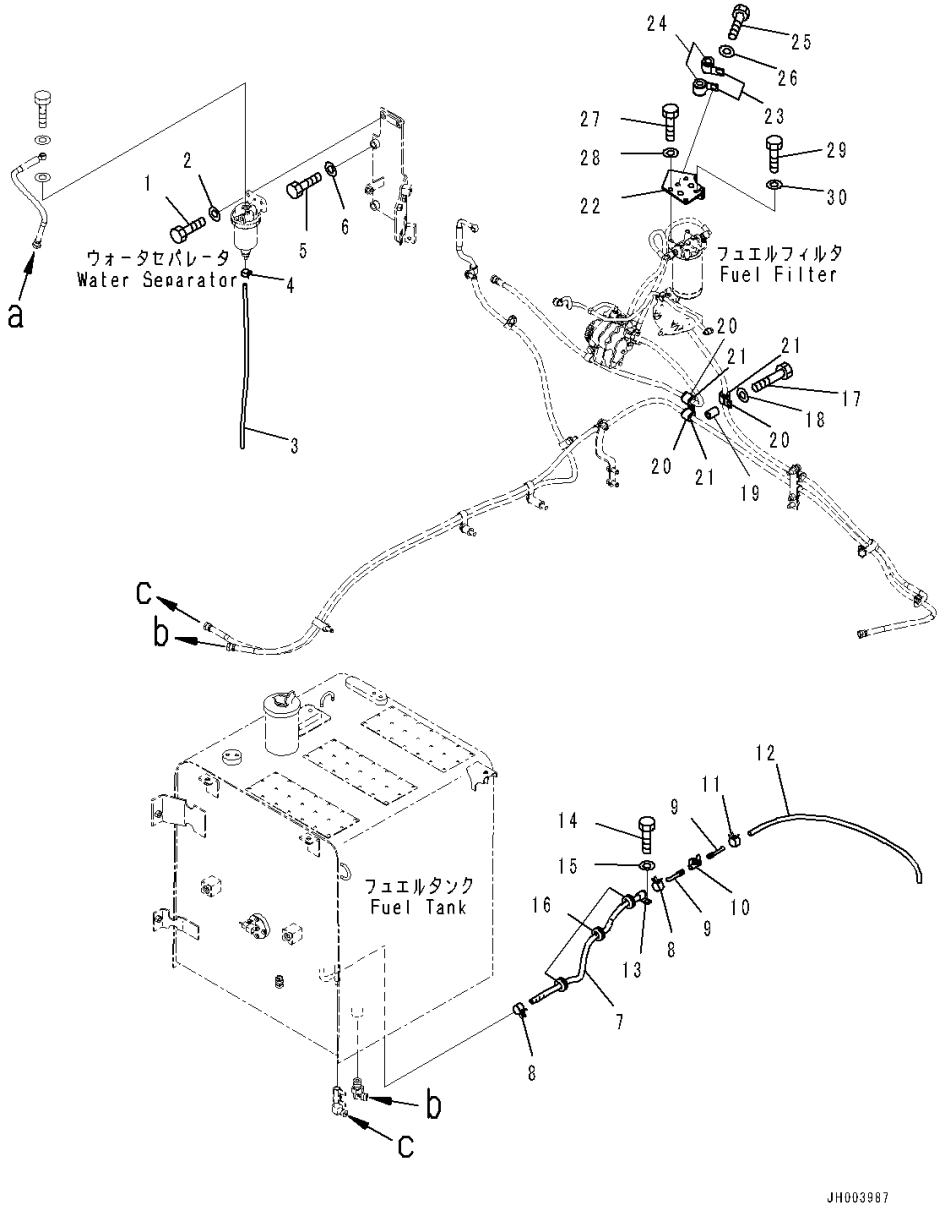


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01010-81035 | Bolt | 2 | Y200001- |
| 2 | | 01643-31032 | Washer | 2 | Y200001- |
| 3 | | 07270-00860 | Tube | 1 | Y200001- |
| 4 | | 07285-00100 | Clip | 1 | Y200001- |
| 5 | | 01010-81240 | Bolt | 2 | Y200001- |
| 6 | | 01643-31232 | Washer | 2 | Y200001- |
| 7 | | 20Y-04-41281 | Hose | 1 | Y200001- |
| 8 | | 11Y-09-11140 | Clip | 2 | Y200001- |
| 9 | | 20Y-04-31170 | Nipple | 2 | Y200001- |
| 10 | | 07700-50240 | Valve | 1 | Y200001- |
| 11 | | 07285-00115 | Clip | 1 | Y200001- |
| 12 | | 07270-01070 | Tube | 1 | Y200001- |
| 13 | | 04434-51612 | Clip | 1 | Y200001- |
| 14 | | 01010-81225 | Bolt | 1 | Y200001- |
| 15 | | 01643-31232 | Washer | 1 | Y200001- |
| 16 | | 205-977-7310 | Grommet | 3 | Y200001- |
| 17 | | 01010-81275 | Bolt | 1 | Y200001- |
| 18 | | 01643-31232 | Washer | 1 | Y200001- |
| 19 | | 20Y-03-11220 | Collar | 1 | Y200001- |
| 20 | | 04434-52512 | Clip | 3 | Y200001- |
| 21 | | 198-06-53560 | Cushion | 3 | Y200001- |
| 22 | | 20Y-54-72441 | Bracket | 1 | Y200001- |
| 23 | | 04434-52112 | Clip | 2 | Y200001- |
| 24 | | 198-06-53550 | Cushion | 2 | Y200001- |
| 25 | | 01010-81225 | Bolt | 1 | Y200001- |
| 26 | | 01643-31232 | Washer | 1 | Y200001- |
| 27 | | 01010-80825 | Bolt | 4 | Y200001- |
| 28 | | 01643-30823 | Washer | 4 | Y200001- |
| 29 | | 01010-81225 | Bolt | 2 | Y200001- |
| 30 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. D0200-011001 Fuel Supply Piping, Bad Fuel And Poor Fuel Arrangement, Water+Dust, Provision For Webasto Heater, Fuel Piping

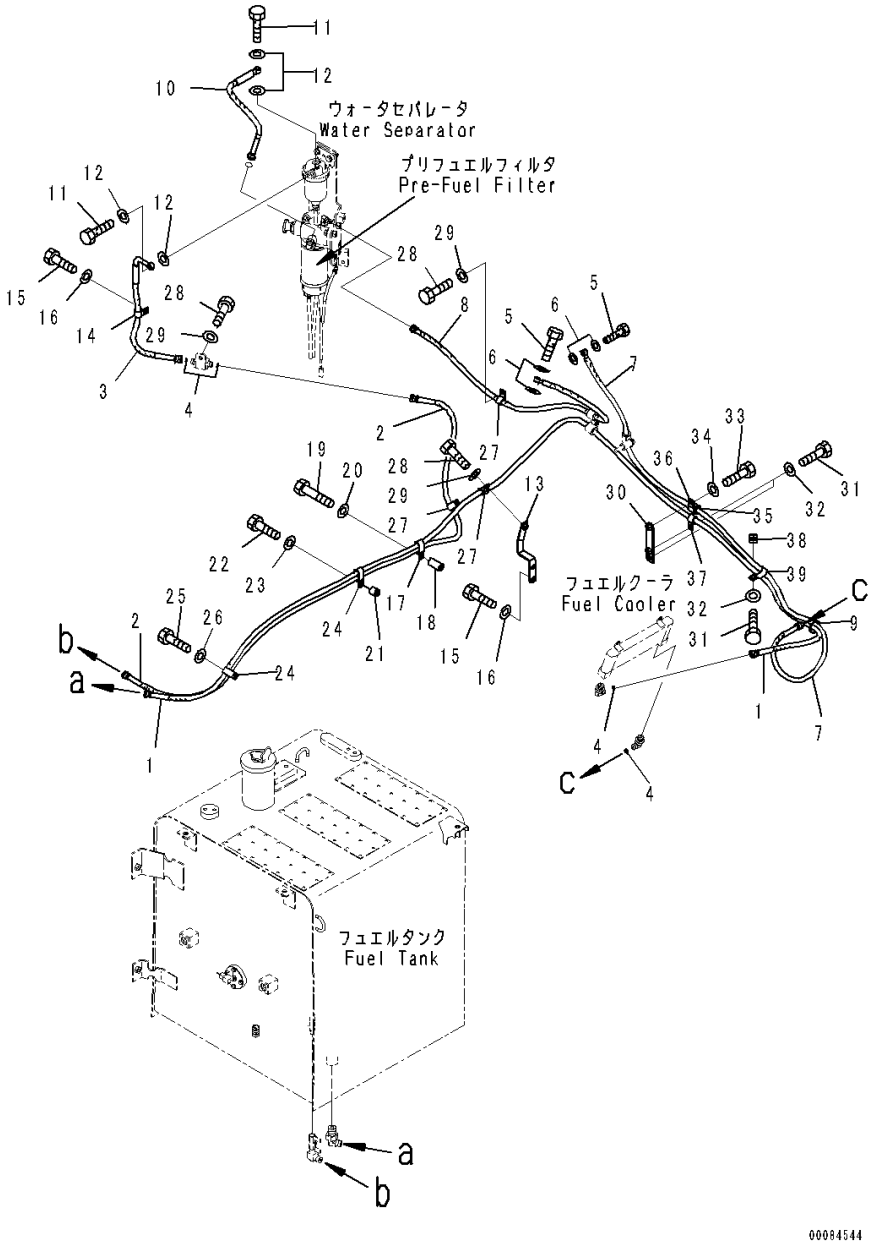


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-62-87930 | Hose . | 1 | Y200001- |
| 2 | | 02762-00324 | Hose . | 1 | Y200001- |
| 3 | | 20Y-04-41650 | Hose . | 1 | Y200001- |
| 4 | | 02896-11009 | O-ring | 4 | Y200001- |
| 5 | | 07206-30812 | Bolt, Joint | 2 | Y200001- |
| 6 | | 07005-01212 | Seal, Washer | 4 | Y200001- |
| 7 | | 20Y-04-41414 | Hose . | 1 | Y200001- |
| 8 | | 20Y-04-41620 | Hose . | 1 | Y200001- |
| 9 | | 08034-20519 | Band | 1 | Y200001- |
| 10 | | 20Y-04-41540 | Hose . | 1 | Y200001- |
| 11 | | 07206-31014 | Bolt, Joint | 2 | Y200001- |
| 12 | | 07005-01412 | Gasket | 4 | Y200001- |
| 13 | | 20Y-04-41321 | Bracket | 1 | Y200001- |
| 14 | | 04434-51412 | Clip | 1 | Y200001- |
| 15 | | 01010-81225 | Bolt | 3 | Y200001- |
| 16 | | 01643-31232 | Washer | 3 | Y200001- |
| 17 | | 04435-51812 | Clip | 1 | Y200001- |
| 18 | | 154-979-1480 | Collar | 1 | Y200001- |
| 19 | | 01010-81275 | Bolt | 1 | Y200001- |
| 20 | | 01643-31232 | Washer | 1 | Y200001- |
| 21 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 22 | | 01010-81250 | Bolt | 1 | Y200001- |
| 23 | | 01643-31232 | Washer | 1 | Y200001- |
| 24 | | 04435-51812 | Clip | 2 | Y200001- |
| 25 | | 01010-81225 | Bolt | 1 | Y200001- |
| 26 | | 01643-31232 | Washer | 1 | Y200001- |
| 27 | | 04434-51912 | Clip | 3 | Y200001- |
| 28 | | 01010-81225 | Bolt | 4 | Y200001- |
| 29 | | 01643-31232 | Washer | 4 | Y200001- |
| 30 | | 20Y-04-41421 | Plate | 1 | Y200001- |
| 31 | | 01010-81225 | Bolt | 4 | Y200001- |
| 32 | | 01643-31232 | Washer | 4 | Y200001- |
| 33 | | 01010-81235 | Bolt | 1 | Y200001- |
| 34 | | 01643-31232 | Washer | 1 | Y200001- |
| 35 | | 198-06-53560 | Cushion | 1 | Y200001- |
| 36 | | 04434-52512 | Clip | 1 | Y200001- |
| 37 | | 04434-51812 | Clip | 1 | Y200001- |
| 38 | | 21T-38-71260 | Bracket | 1 | Y200001- |
| 39 | | 04435-51812 | Clip | 1 | Y200001- |


https://truckmanualshub.com/

# FIG. D0200-010003 Fuel Supply Piping, Extra Bad Fuel And Poor Fuel Arrangement, Water+Dust, Additional Filter, Fuel Filter Mounts

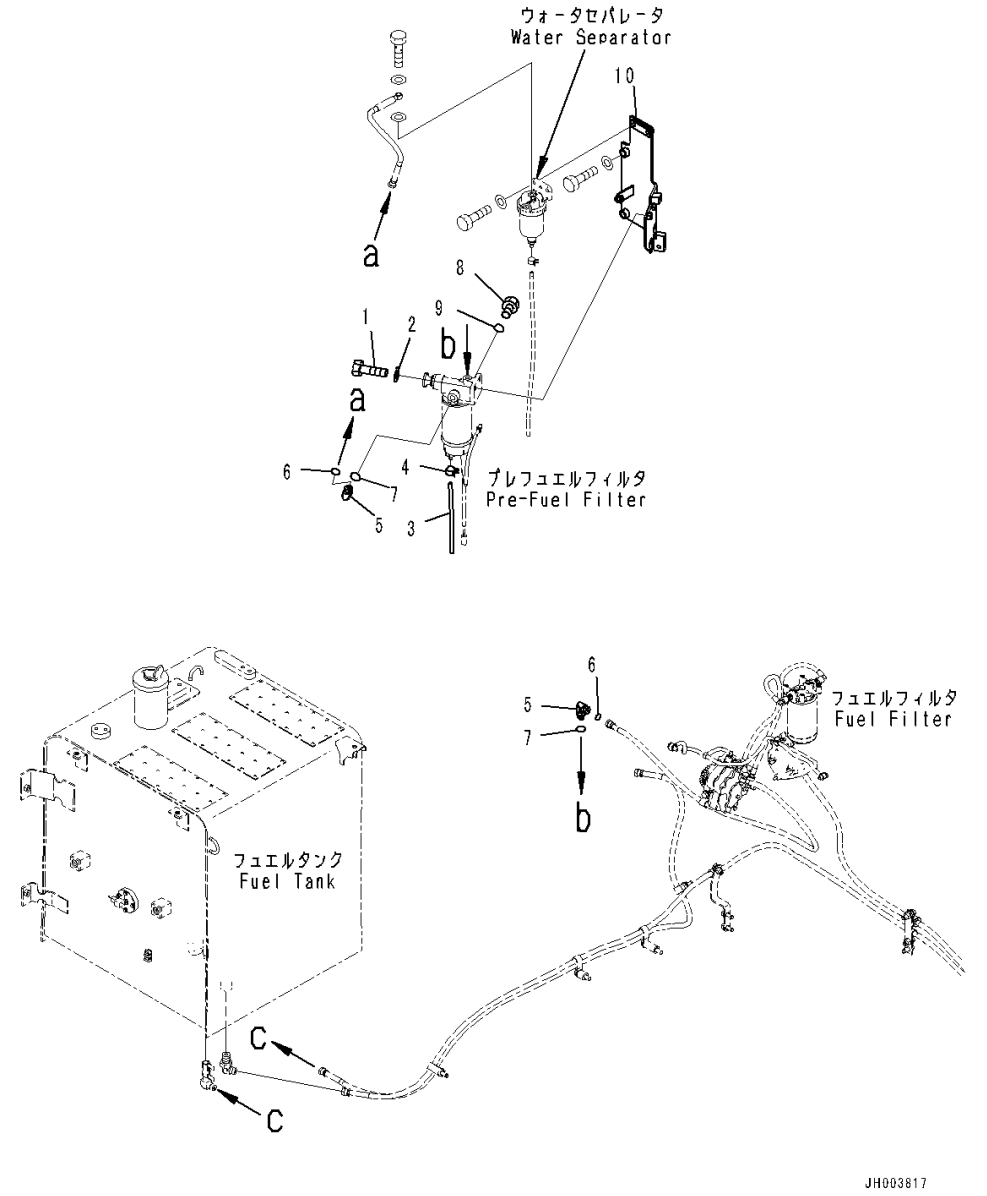


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07372-21235 | Bolt | 2 | Y200001- |
| 2 | | 01643-51232 | Washer | 2 | Y200001- |
| 3 | | 07270-00827 | Tube | 1 | Y200001- |
| 4 | | 07285-00100 | Clip | 1 | Y200001- |
| 5 | | 02782-10311 | Elbow | 2 | Y200001- |
| 6 | | 02896-11009 | O-ring | 2 | Y200001- |
| 7 | | 07002-11423 | O-ring | 2 | Y200001- |
| 8 | | 07040-11409 | Plug | 1 | Y200001- |
| 9 | | 07002-11423 | O-ring | 1 | Y200001- |
| 10 | | 20Y-04-41481 | Bracket | 1 | Y200001- |

# FIG. D0200-011005 Fuel Supply Piping, Extra Bad Fuel And Poor Fuel Arrangement, Water+Dust, Additional Filter, Drain Piping

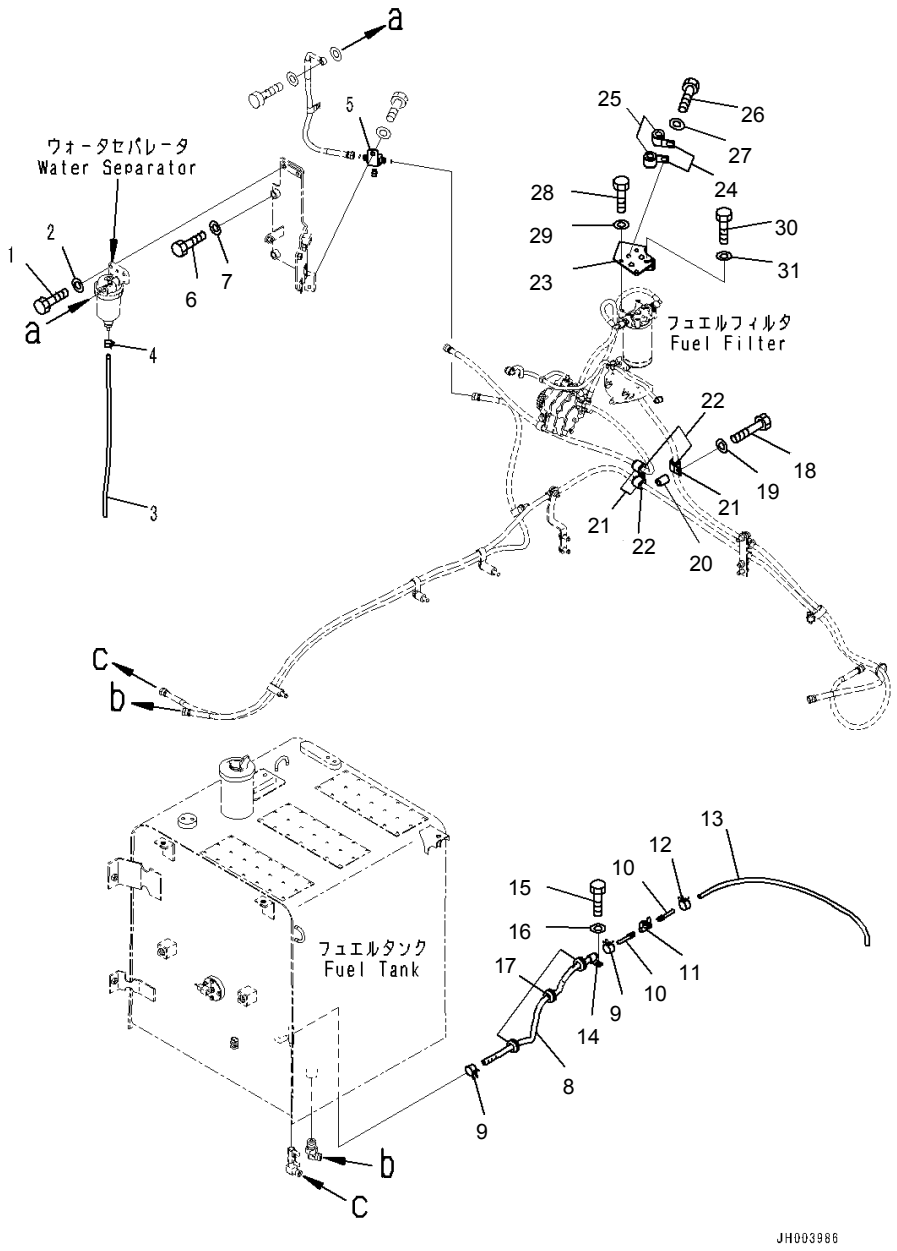



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01010-81035 | Bolt | 2 | Y200001- |
| 2 | | 01643-31032 | Washer | 2 | Y200001- |
| 3 | | 07270-00860 | Tube | 1 | Y200001- |
| 4 | | 07285-00100 | Clip | 1 | Y200001- |
| 5 | | 20Y-04-41660 | Tee | 1 | Y200001- |
| 6 | | 01010-81240 | Bolt | 2 | Y200001- |
| 7 | | 01643-31232 | Washer | 2 | Y200001- |
| 8 | | 20Y-04-41281 | Hose | 1 | Y200001- |
| 9 | | 11Y-09-11140 | Clip | 2 | Y200001- |
| 10 | | 20Y-04-31170 | Nipple | 2 | Y200001- |
| 11 | | 07700-50240 | Valve | 1 | Y200001- |
| 12 | | 07285-00115 | Clip | 1 | Y200001- |
| 13 | | 07270-01070 | Tube | 1 | Y200001- |
| 14 | | 04434-51612 | Clip | 1 | Y200001- |
| 15 | | 01010-81225 | Bolt | 1 | Y200001- |
| 16 | | 01643-31232 | Washer | 1 | Y200001- |
| 17 | | 205-977-7310 | Grommet | 3 | Y200001- |
| 18 | | 01010-81275 | Bolt | 1 | Y200001- |
| 19 | | 01643-31232 | Washer | 1 | Y200001- |
| 20 | | 20Y-03-11220 | Collar | 1 | Y200001- |
| 21 | | 04434-52512 | Clip | 3 | Y200001- |
| 22 | | 198-06-53560 | Cushion | 3 | Y200001- |
| 23 | | 20Y-54-72441 | Bracket | 1 | Y200001- |
| 24 | | 04434-52112 | Clip | 2 | Y200001- |
| 25 | | 198-06-53550 | Cushion | 2 | Y200001- |
| 26 | | 01010-81225 | Bolt | 1 | Y200001- |
| 27 | | 01643-31232 | Washer | 1 | Y200001- |
| 28 | | 01010-80825 | Bolt | 4 | Y200001- |
| 29 | | 01643-30823 | Washer | 4 | Y200001- |
| 30 | | 01010-81225 | Bolt | 2 | Y200001- |
| 31 | | 01643-31232 | Washer | 2 | Y200001- |

# ELECTRICAL SYSTEM

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. E0100-002001 Battery, With Large Capacity Battery, Wet Type

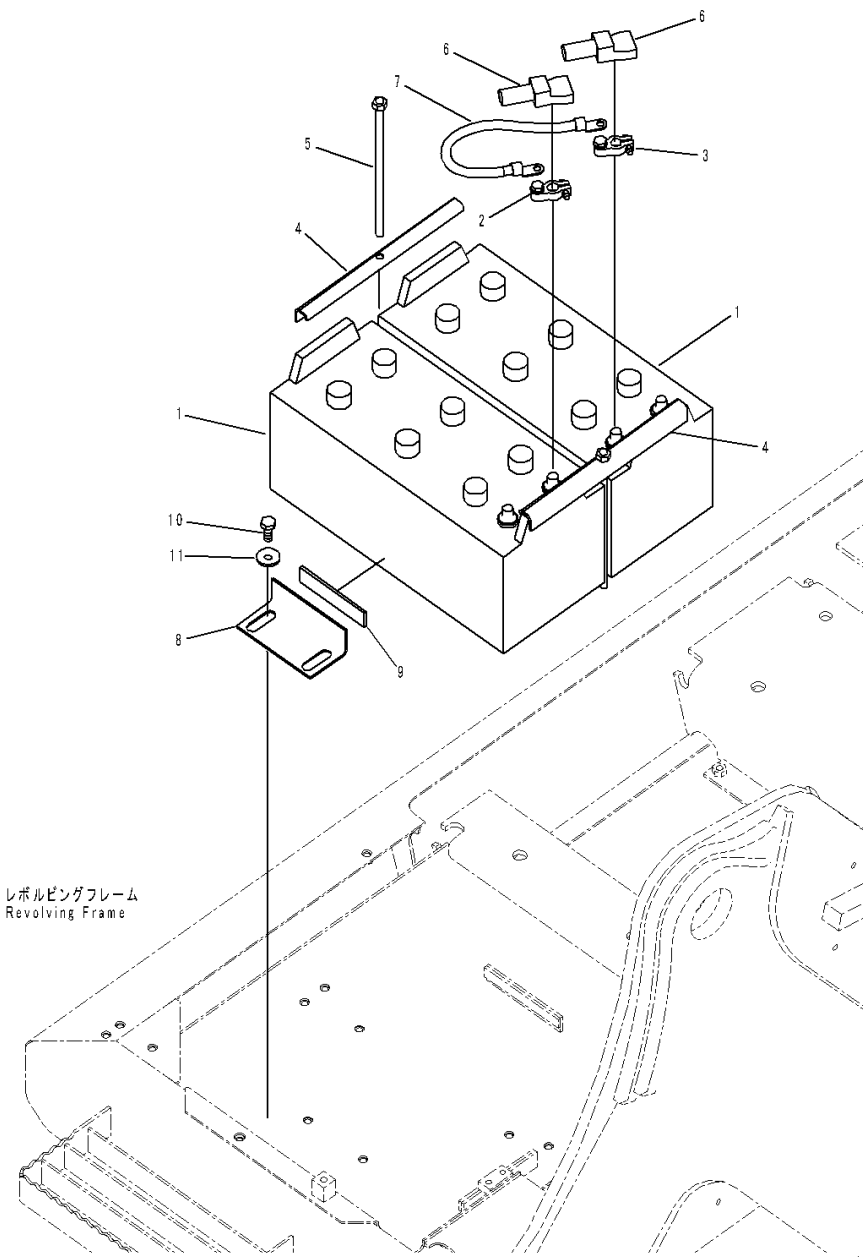


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 08000-3222Z | Battery, Wet, 195G51 | 2 | Y200001- |
| 2 | | 08000-00000 | Terminal, (+) | 2 | Y200001- |
| 3 | | 08000-00001 | Terminal, (-) | 2 | Y200001- |
| 4 | | 205-06-51380 | Clamp | 2 | Y200001- |
| 5 | | 202-09-11120 | Bolt | 2 | Y200001- |
| 6 | | 08038-42511 | Cap | 2 | Y200001- |
| 7 | | 08028-63035 | Cable, Ground | 1 | Y200001- |
| 8 | | 207-06-61461 | Bracket | 1 | Y200001- |
| 9 | | 207-06-51330 | • Sheet | 1 | Y200001- |
| 10 | | 01010-81225 | Bolt | 2 | Y200001- |
| 11 | | 175-54-34170 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. E0200-002001 Electric Wiring, Starting Harness

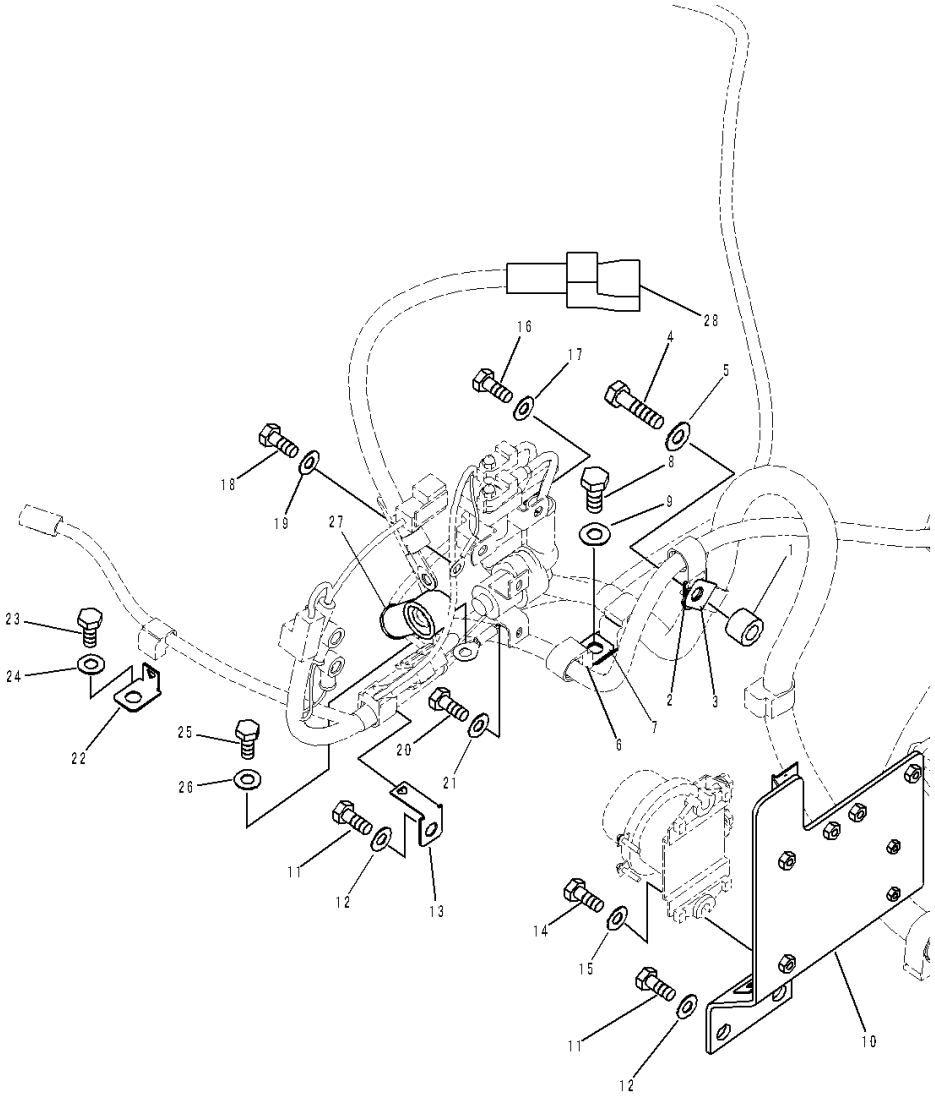


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 144-947-3490 | Spacer | 1 | Y200001- |
| 2 | | 08057-12012 | Clip | 1 | Y200001- |
| 3 | | 08057-12012 | Clip | 1 | Y200001- |
| 4 | | 01010-81245 | Bolt | 1 | Y200001- |
| 5 | | 01643-31232 | Washer | 1 | Y200001- |
| 6 | | 08057-12012 | Clip | 1 | Y200001- |
| 7 | | 08057-12012 | Clip | 1 | Y200001- |
| 8 | | 01010-81225 | Bolt | 1 | Y200001- |
| 9 | | 01643-31232 | Washer | 1 | Y200001- |
| 10 | | 20Y-06-41640 | Bracket | 1 | Y200001- |
| 11 | | 01010-81225 | Bolt | 2 | Y200001- |
| 12 | | 01643-31232 | Washer | 2 | Y200001- |
| 13 | | 08057-14012 | Clip | 1 | Y200001- |
| 14 | | 01010-80830 | Bolt | 2 | Y200001- |
| 15 | | 01643-30823 | Washer | 2 | Y200001- |
| 16 | | 01010-80820 | Bolt | 2 | Y200001- |
| 17 | | 01643-30823 | Washer | 2 | Y200001- |
| 18 | | 01010-80820 | Bolt | 1 | Y200001- |
| 19 | | 01643-30823 | Washer | 1 | Y200001- |
| 20 | | 01010-80620 | Bolt | 2 | Y200001- |
| 21 | | 01643-30623 | Washer | 2 | Y200001- |
| 22 | | 08057-12012 | Clip | 1 | Y200001- |
| 23 | | 01010-81225 | Bolt | 1 | Y200001- |
| 24 | | 01643-31232 | Washer | 1 | Y200001- |
| 25 | | 01010-81025 | Bolt | 1 | Y200001- |
| 26 | | 01643-31032 | Washer | 1 | Y200001- |
| 27 | | 08038-10035 | Cap | 1 | Y200001- |
| 28 | | 08038-42511 | Cap | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. E0200-002002 Electric Wiring, Main Harness (1/3)

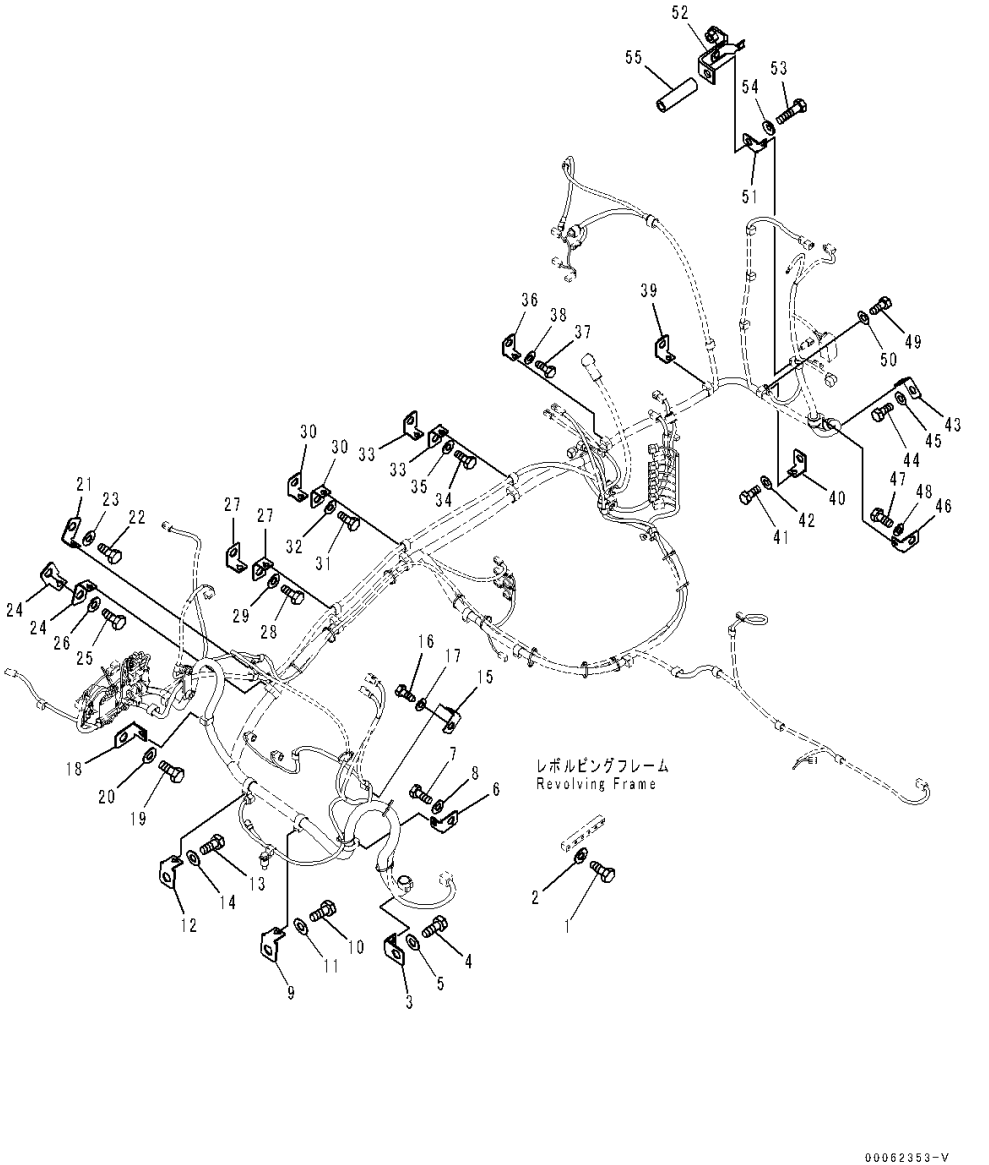


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01010-81020 | Bolt | 6 | Y200001- |
| 2 | | 01643-31032 | Washer | 6 | Y200001- |
| 3 | | 08057-12012 | Clip | 1 | Y200001- |
| 4 | | 01010-81225 | Bolt | 1 | Y200001- |
| 5 | | 01643-31232 | Washer | 1 | Y200001- |
| 6 | | 08057-12012 | Clip | 1 | Y200001- |
| 7 | | 01010-81225 | Bolt | 1 | Y200001- |
| 8 | | 01643-31232 | Washer | 1 | Y200001- |
| 9 | | 08057-12012 | Clip | 1 | Y200001- |
| 10 | | 01010-81225 | Bolt | 1 | Y200001- |
| 11 | | 01643-31232 | Washer | 1 | Y200001- |
| 12 | | 08057-12012 | Clip | 1 | Y200001- |
| 13 | | 01010-81225 | Bolt | 1 | Y200001- |
| 14 | | 01643-31232 | Washer | 1 | Y200001- |
| 15 | | 08057-12012 | Clip | 1 | Y200001- |
| 16 | | 01010-81225 | Bolt | 1 | Y200001- |
| 17 | | 01643-31232 | Washer | 1 | Y200001- |
| 18 | | 08057-12012 | Clip | 1 | Y200001- |
| 19 | | 01010-81225 | Bolt | 1 | Y200001- |
| 20 | | 01643-31232 | Washer | 1 | Y200001- |
| 21 | | 08057-12012 | Clip | 1 | Y200001- |
| 22 | | 01010-81225 | Bolt | 1 | Y200001- |
| 23 | | 01643-31232 | Washer | 1 | Y200001- |
| 24 | | 08057-12012 | Clip | 2 | Y200001- |
| 25 | | 01010-81225 | Bolt | 1 | Y200001- |
| 26 | | 01643-31232 | Washer | 1 | Y200001- |
| 27 | | 08057-12012 | Clip | 2 | Y200001- |
| 28 | | 01010-81225 | Bolt | 1 | Y200001- |
| 29 | | 01643-31232 | Washer | 1 | Y200001- |
| 30 | | 08057-12012 | Clip | 2 | Y200001- |
| 31 | | 01010-81225 | Bolt | 1 | Y200001- |
| 32 | | 01643-31232 | Washer | 1 | Y200001- |
| 33 | | 08057-12012 | Clip | 2 | Y200001- |
| 34 | | 01010-81225 | Bolt | 1 | Y200001- |
| 35 | | 01643-31232 | Washer | 1 | Y200001- |
| 36 | | 08057-12012 | Clip | 1 | Y200001- |
| 37 | | 01010-81225 | Bolt | 1 | Y200001- |
| 38 | | 01643-31232 | Washer | 1 | Y200001- |
| 39 | | 08057-12012 | Clip | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. E0200-002002 Electric Wiring, Main Harness (1/3)

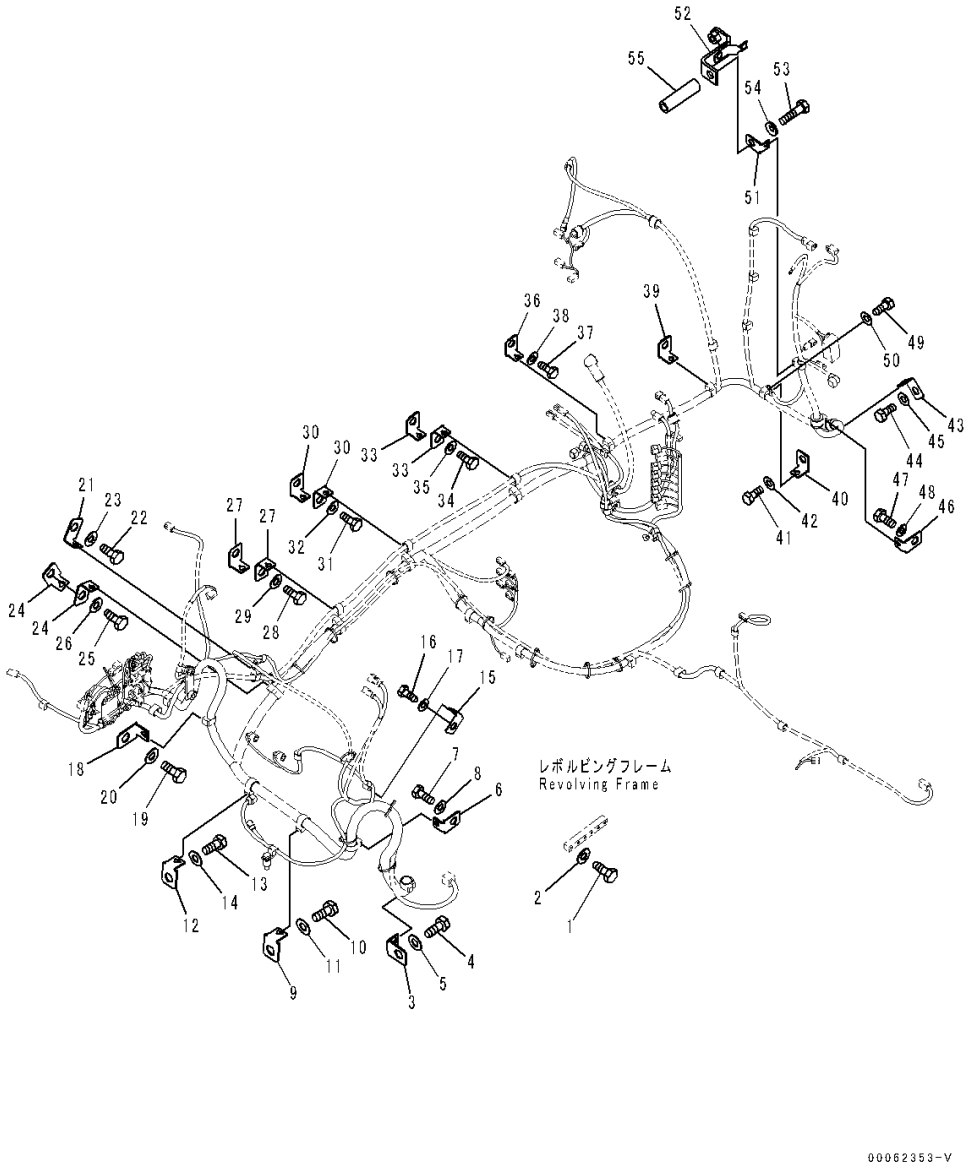


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 08057-12012 | Clip. | 1 | Y200001- |
| 41 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 42 | | 01643-31232 | Washer . | 1 | Y200001- |
| 43 | | 08057-12012 | Clip. | 1 | Y200001- |
| 44 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 45 | | 01643-31232 | Washer . | 1 | Y200001- |
| 46 | | 08057-12012 | Clip. | 1 | Y200001- |
| 47 | | 01010-81020 | Bolt. | 1 | Y200001- |
| 48 | | 01643-31032 | Washer . | 1 | Y200001- |
| 49 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 50 | | 01643-31232 | Washer . | 1 | Y200001- |
| 51 | | 08057-12012 | Clip. | 1 | Y200001- |
| 52 | | 20Y-06-41630 | Bracket. | 1 | Y200001- |
| 53 | | 01011-81210 | Bolt. | 1 | Y200001- |
| 54 | | 01643-31232 | Washer . | 1 | Y200001- |
| 55 | | 22S-62-26210 | Spacer . | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. E0200-002003 Electric Wiring, Main Harness (2/3)

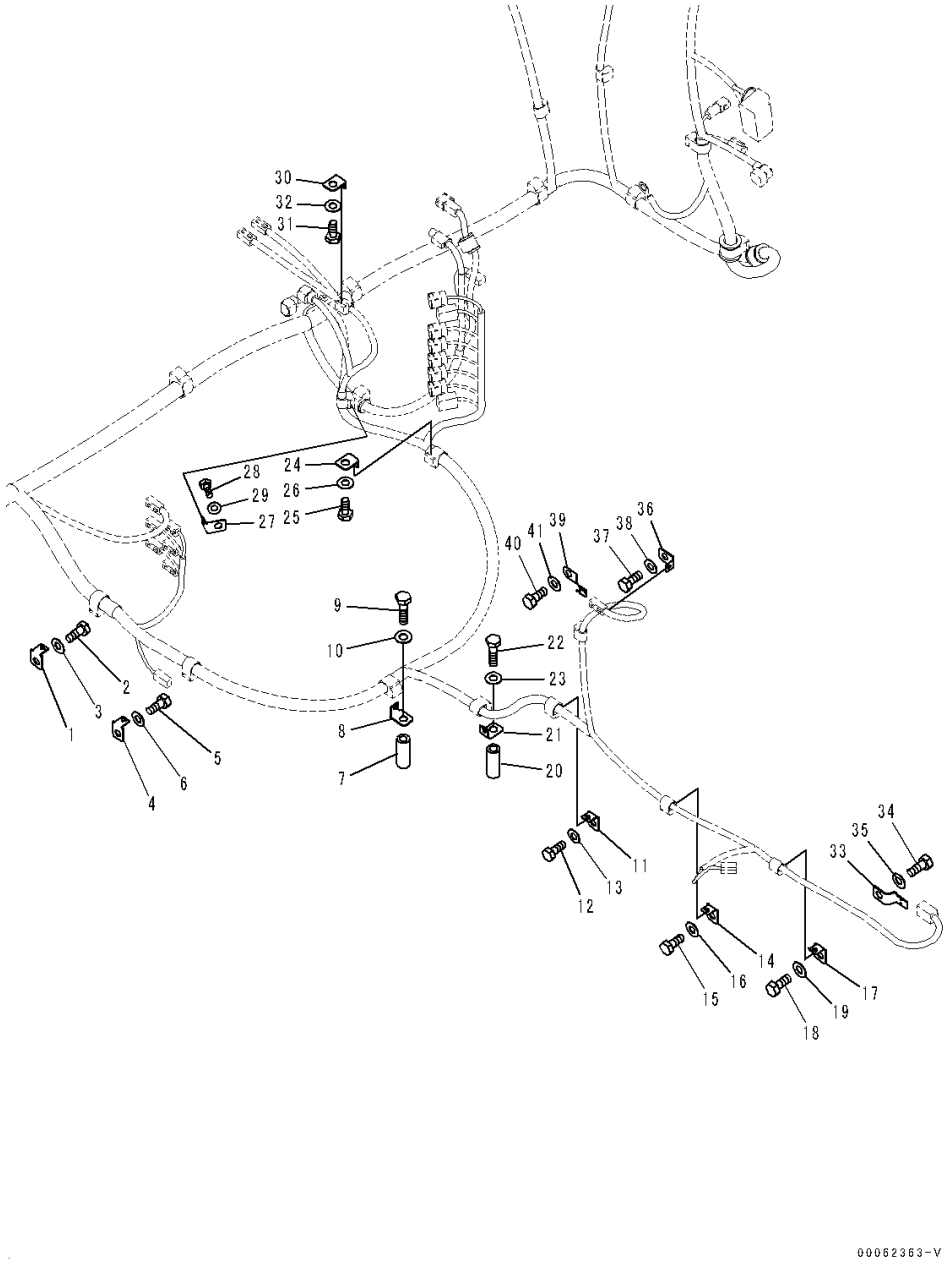


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 08057-12012 | Clip | 1 | Y200001- |
| 2 | | 01010-81225 | Bolt | 1 | Y200001- |
| 3 | | 01643-31232 | Washer | 1 | Y200001- |
| 4 | | 08057-12012 | Clip | 1 | Y200001- |
| 5 | | 01010-81225 | Bolt | 1 | Y200001- |
| 6 | | 01643-31232 | Washer | 1 | Y200001- |
| 7 | | 175-61-17240 | Collar | 1 | Y200001- |
| 8 | | 08057-12012 | Clip | 1 | Y200001- |
| 9 | | 01010-81285 | Bolt | 1 | Y200001- |
| 10 | | 01643-31232 | Washer | 1 | Y200001- |
| 11 | | 08057-12012 | Clip | 1 | Y200001- |
| 12 | | 01010-81225 | Bolt | 1 | Y200001- |
| 13 | | 01643-31232 | Washer | 1 | Y200001- |
| 14 | | 08057-12012 | Clip | 1 | Y200001- |
| 15 | | 01010-81225 | Bolt | 1 | Y200001- |
| 16 | | 01643-31232 | Washer | 1 | Y200001- |
| 17 | | 08057-12012 | Clip | 1 | Y200001- |
| 18 | | 01010-81225 | Bolt | 1 | Y200001- |
| 19 | | 01643-31232 | Washer | 1 | Y200001- |
| 20 | | 175-61-17240 | Collar | 1 | Y200001- |
| 21 | | 08057-12012 | Clip | 1 | Y200001- |
| 22 | | 01010-81285 | Bolt | 1 | Y200001- |
| 23 | | 01643-31232 | Washer | 1 | Y200001- |
| 24 | | 08057-12012 | Clip | 1 | Y200001- |
| 25 | | 01010-81225 | Bolt | 1 | Y200001- |
| 26 | | 01643-31232 | Washer | 1 | Y200001- |
| 27 | | 08057-12012 | Clip | 1 | Y200001- |
| 28 | | 01010-81225 | Bolt | 1 | Y200001- |
| 29 | | 01643-31232 | Washer | 1 | Y200001- |
| 30 | | 08057-12012 | Clip | 1 | Y200001- |
| 31 | | 01010-81225 | Bolt | 1 | Y200001- |
| 32 | | 01643-31232 | Washer | 1 | Y200001- |
| 33 | | 08053-01512 | Clip | 1 | Y200001- |
| 34 | | 01010-81225 | Bolt | 1 | Y200001- |
| 35 | | 01643-31232 | Washer | 1 | Y200001- |
| 36 | | 08057-12012 | Clip | 1 | Y200001- |
| 37 | | 01010-81225 | Bolt | 1 | Y200001- |
| 38 | | 01643-31232 | Washer | 1 | Y200001- |
| 39 | | 08193-21012 | Clip | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. E0200-002003 Electric Wiring, Main Harness (2/3)

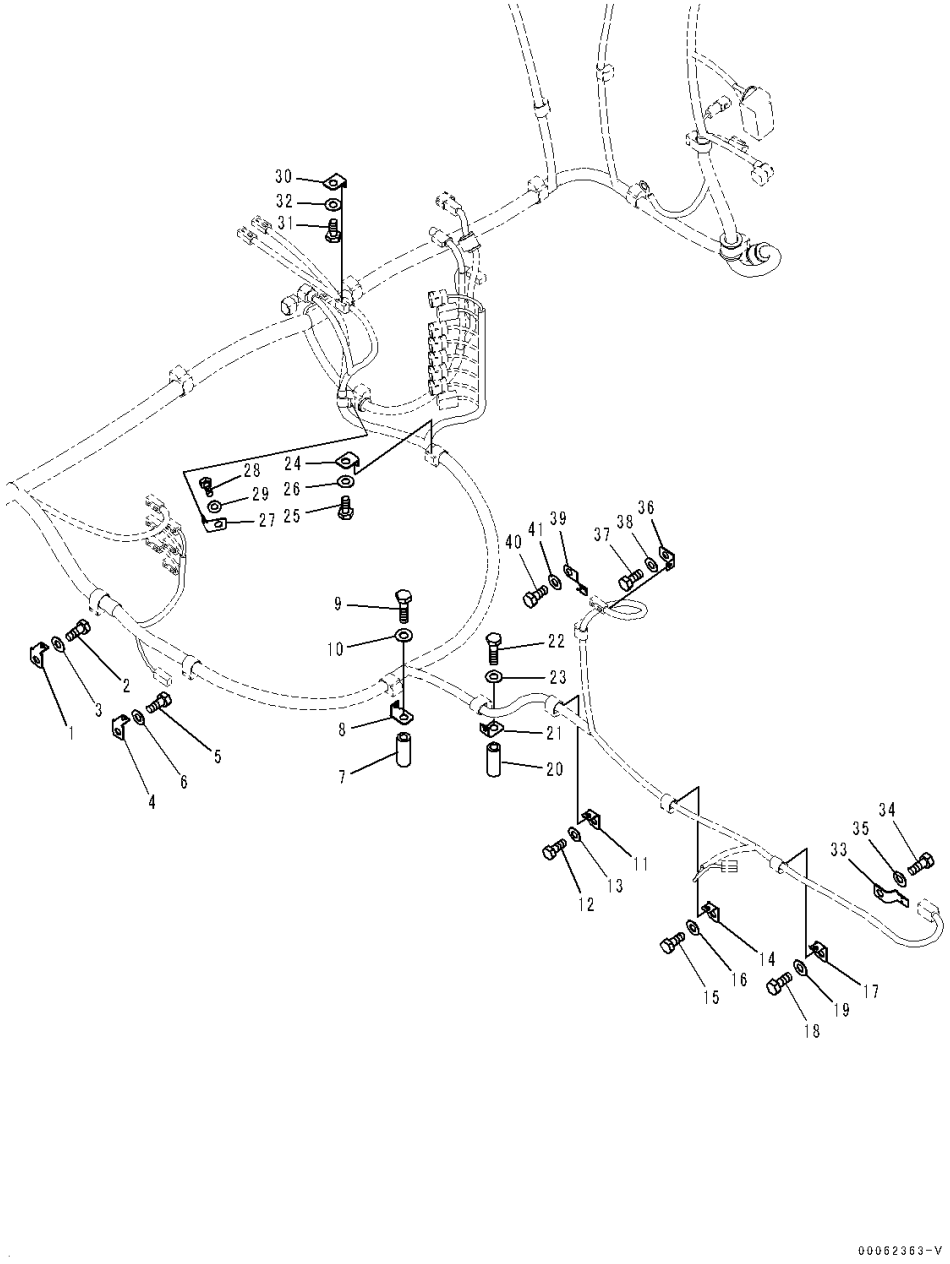


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 01010-81225 | Bolt | 1 | Y200001- |
| 41 | | 01643-31232 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. E0200-002004 Electric Wiring, Main Harness (3/3)

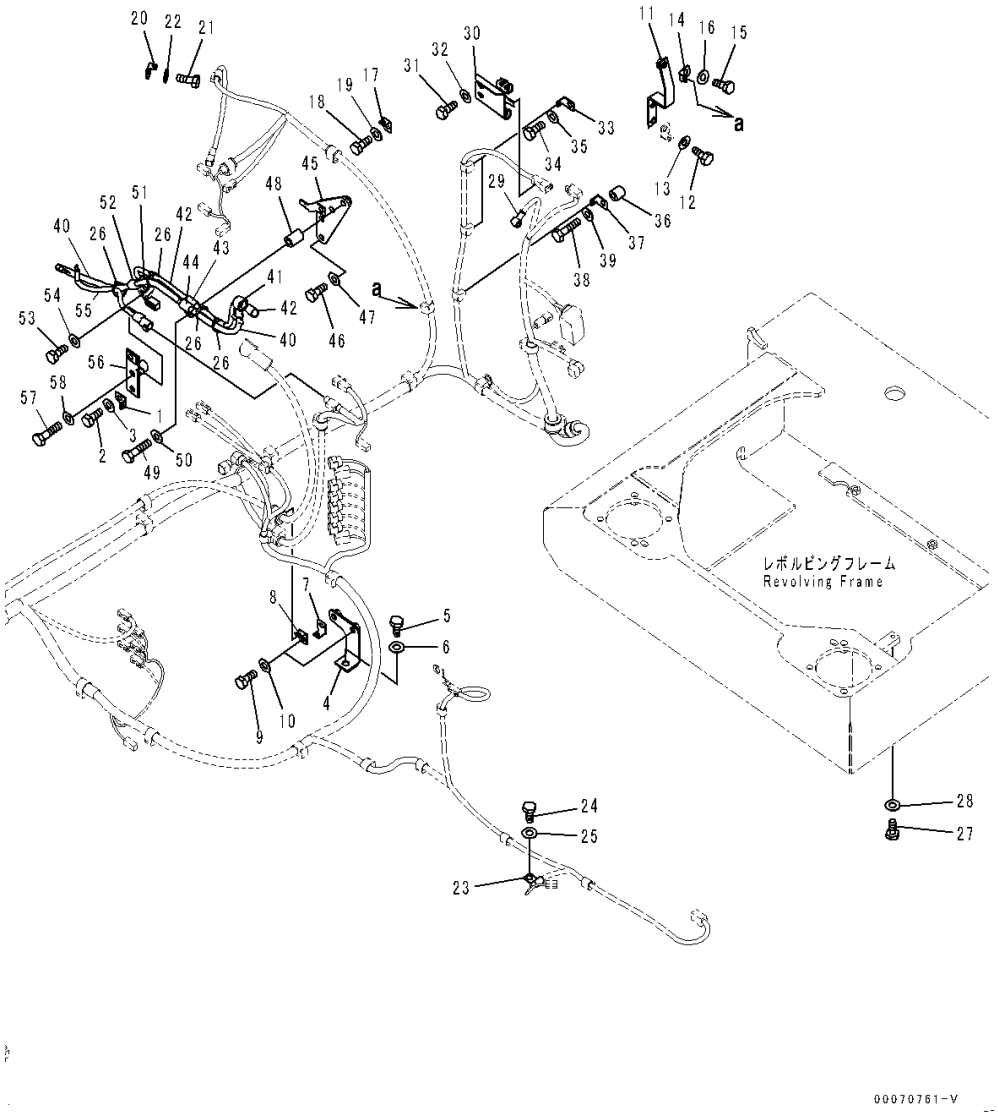


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 08057-12012 | Clip | 1 | Y200001- |
| 2 | | 01010-81225 | Bolt | 1 | Y200001- |
| 3 | | 01643-31232 | Washer | 1 | Y200001- |
| 4 | | 20Y-06-42520 | Bracket | 1 | Y200001- |
| 5 | | 01010-81225 | Bolt | 1 | Y200001- |
| 6 | | 01643-31232 | Washer | 1 | Y200001- |
| 7 | | 08057-12012 | Clip | 1 | Y200001- |
| 8 | | 08057-12012 | Clip | 1 | Y200001- |
| 9 | | 01010-81225 | Bolt | 2 | Y200001- |
| 10 | | 01643-31232 | Washer | 2 | Y200001- |
| 11 | | 20Y-04-31120 | Bracket | 1 | Y200001- |
| 12 | | 01010-81225 | Bolt | 2 | Y200001- |
| 13 | | 01643-31232 | Washer | 2 | Y200001- |
| 14 | | 08057-12012 | Clip | 1 | Y200001- |
| 15 | | 01010-81225 | Bolt | 1 | Y200001- |
| 16 | | 01643-31232 | Washer | 1 | Y200001- |
| 17 | | 08057-12012 | Clip | 1 | Y200001- |
| 18 | | 01010-81225 | Bolt | 1 | Y200001- |
| 19 | | 01643-31232 | Washer | 1 | Y200001- |
| 20 | | 08057-12012 | Clip | 1 | Y200001- |
| 21 | | 01010-81225 | Bolt | 1 | Y200001- |
| 22 | | 01643-31232 | Washer | 1 | Y200001- |
| 23 | | 04434-51012 | Clip | 1 | Y200001- |
| 24 | | 01010-81225 | Bolt | 1 | Y200001- |
| 25 | | 01643-31232 | Washer | 1 | Y200001- |
| 26 | | 08034-20536 | Band | 4 | Y200001- |
| 27 | | 01010-81020 | Bolt | 1 | Y200001- |
| 28 | | 01643-31032 | Washer | 1 | Y200001- |
| 29 | | 08038-12027 | Cap | 1 | Y200001- |
| 30 | | 20Y-54-76421 | Bracket | 1 | Y200001- |
| 31 | | 01010-81225 | Bolt | 2 | Y200001- |
| 32 | | 01643-31232 | Washer | 2 | Y200001- |
| 33 | | 08057-12012 | Clip | 2 | Y200001- |
| 34 | | 01010-81225 | Bolt | 2 | Y200001- |
| 35 | | 01643-31232 | Washer | 2 | Y200001- |
| 36 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 37 | | 08057-12012 | Clip | 1 | Y200001- |
| 38 | | 01010-81260 | Bolt | 1 | Y200001- |
| 39 | | 01643-31232 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. E0200-002004 Electric Wiring, Main Harness (3/3)

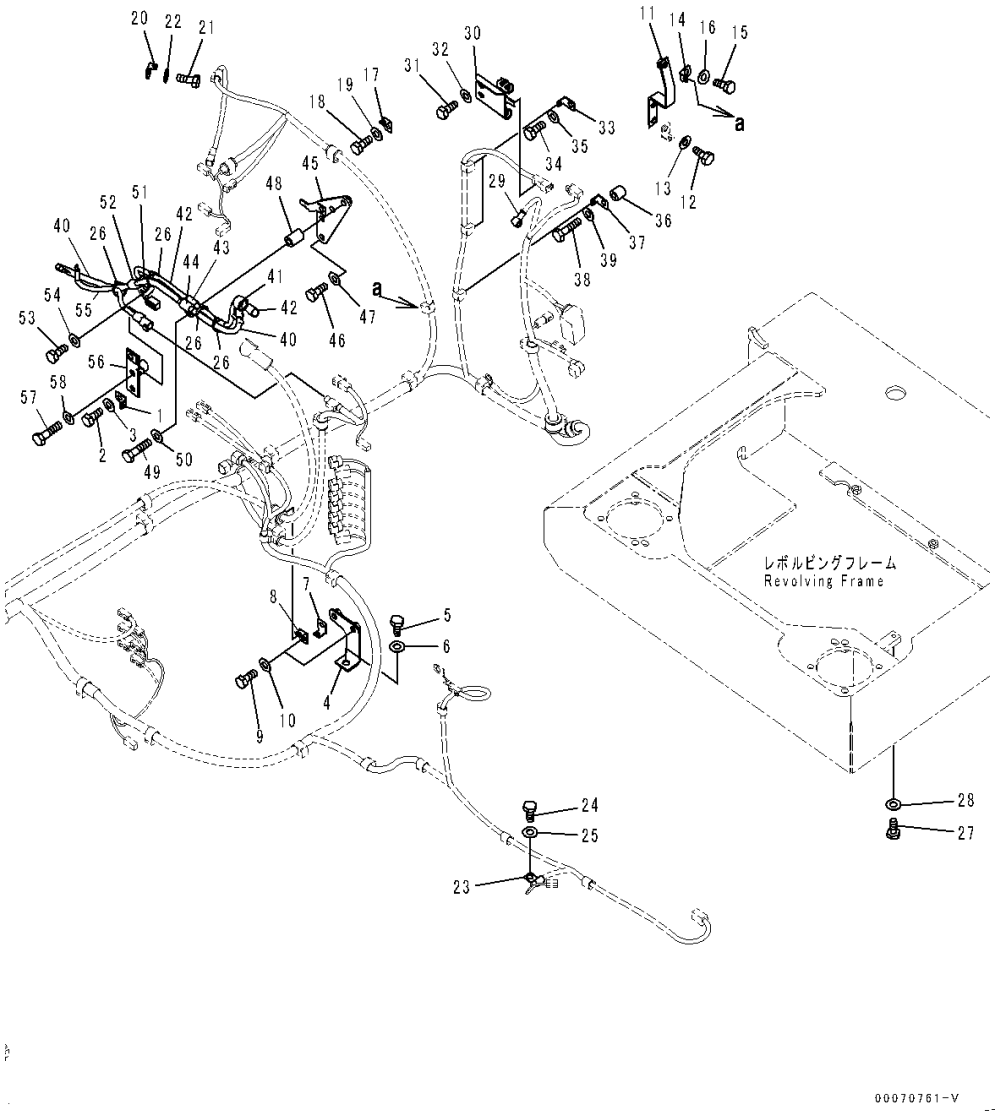


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 20Y-06-41351 | Cable . | 1 | Y200001- |
| 41 | | 08038-12027 | Cap . | 1 | Y200001- |
| 42 | | 20Y-06-41361 | Wiring Harness . | 1 | Y200001- |
| 43 | | 04434-51412 | Clip. | 1 | Y200001- |
| 44 | | 04434-51012 | Clip. | 1 | Y200001- |
| 45 | | 20Y-06-41791 | Bracket. | 1 | Y200001- |
| 46 | | 01010-81230 | Bolt. | 2 | Y200001- |
| 47 | | 01643-31232 | Washer . | 2 | Y200001- |
| 48 | | 20Y-03-11220 | Collar . | 1 | Y200001- |
| 49 | | 01010-81265 | Bolt. | 1 | Y200001- |
| 50 | | 01643-31232 | Washer . | 1 | Y200001- |
| 51 | | 04434-51412 | Clip. | 1 | Y200001- |
| 52 | | 04434-51012 | Clip. | 1 | Y200001- |
| 53 | | 01010-81230 | Bolt. | 1 | Y200001- |
| 54 | | 01643-31232 | Washer . | 1 | Y200001- |
| 55 | | 20Y-06-41770 | Cable . | 1 | Y200001- |
| 56 | | 20Y-06-41720 | Bracket. | 1 | Y200001- |
| 57 | | 01010-81265 | Bolt. | 1 | Y200001- |
| 58 | | 01643-31232 | Washer . | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. E0200-002005 Electric Wiring, Battery Case Side

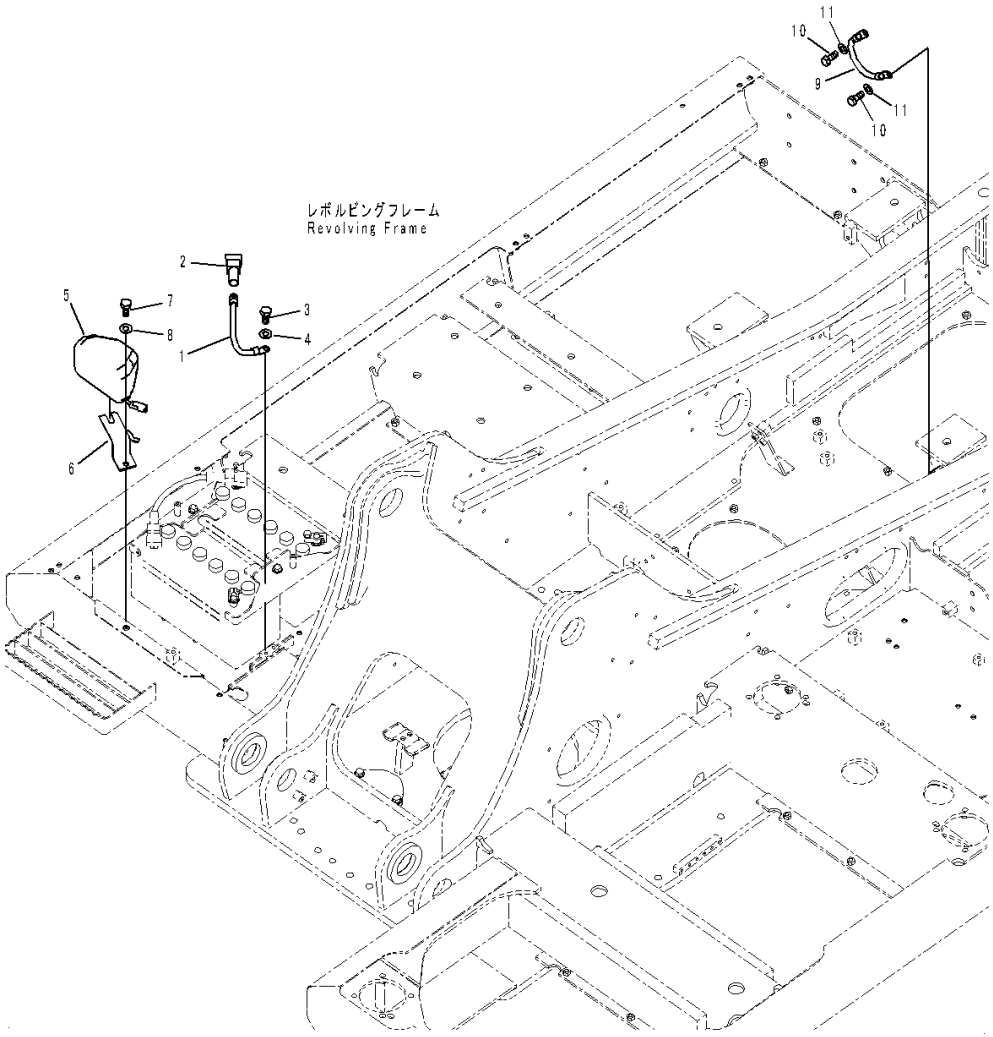


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 08028-43030 | Cable, Ground | 1 | Y200001- |
| 2 | | 08038-22511 | Cap | 1 | Y200001- |
| 3 | | 01010-81025 | Bolt | 1 | Y200001- |
| 4 | | 01643-31032 | Washer | 1 | Y200001- |
| 5 | | 21T-06-32810 | Working Lamp Assembly, 24volt, 70watt | 1 | Y200001- |
| | | 421-06-23330 | • Bulb, 70watt. | 1 | Y200001- |
| 6 | | 20Y-06-41690 | Bracket. | 1 | Y200001- |
| 7 | | 01010-81230 | Bolt. | 1 | Y200001- |
| 8 | | 01643-31232 | Washer . | 1 | Y200001- |
| 9 | | 08028-43030 | Cable, Ground . | 1 | Y200001- |
| 10 | | 01010-81020 | Bolt. | 2 | Y200001- |
| 11 | | 01643-31032 | Washer . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. E0310-001001 Additional Working Lamp, Front Guard

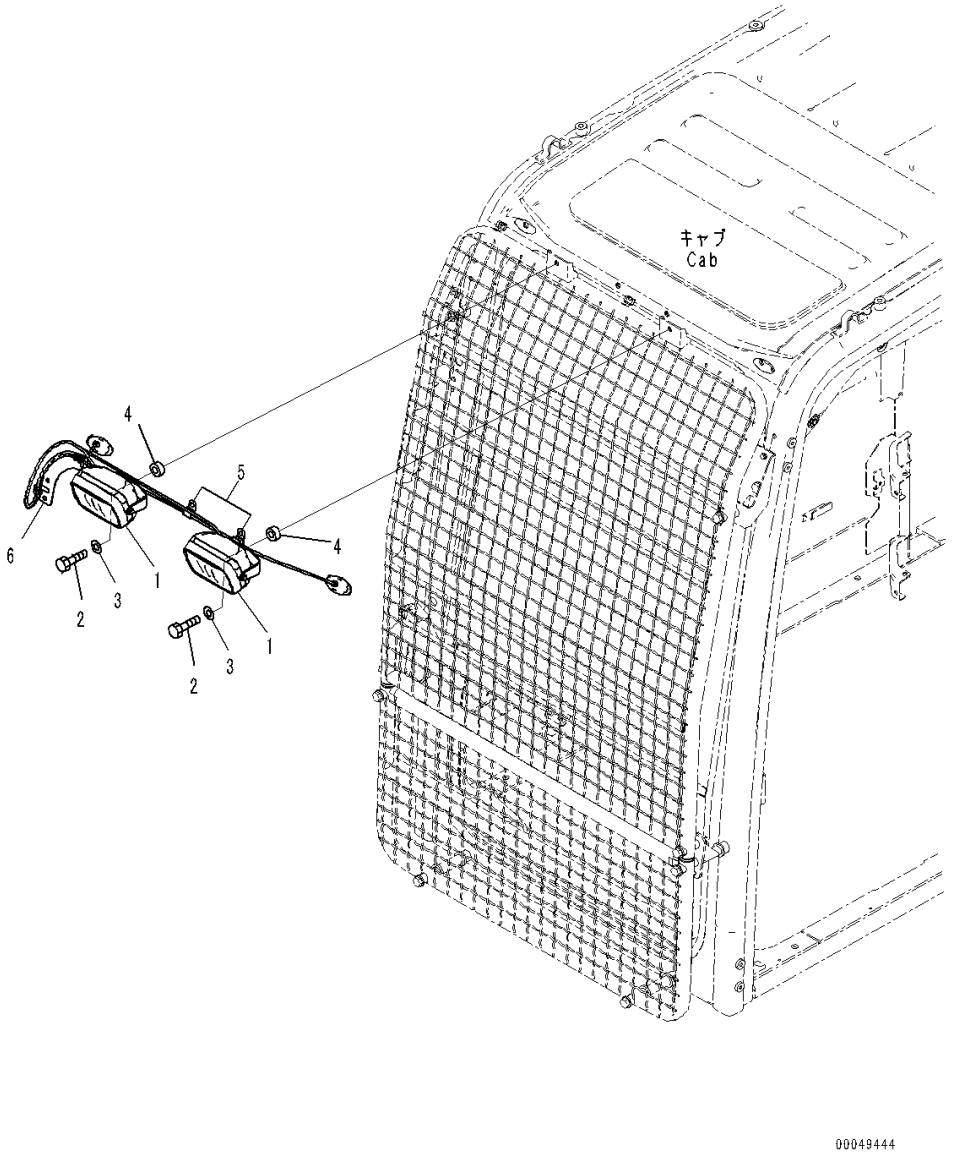


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-15220 | Light Assembly, Working | 2 | Y200001- |
| | | 421-06-23330 | • Bulb, 70watt | 1 | Y200001- |
| 2 | | 01010-D1030 | Bolt | 2 | Y200001- |
| 3 | | 01643-71032 | Washer | 2 | Y200001- |
| 4 | | 560-43-15220 | Washer | 2 | Y200001- |
| 5 | | 08036-10810 | Clip | 2 | Y200001- |
| 6 | | 20Y-54-54480 | Plate | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. E0310-003001 Additional Working Lamp

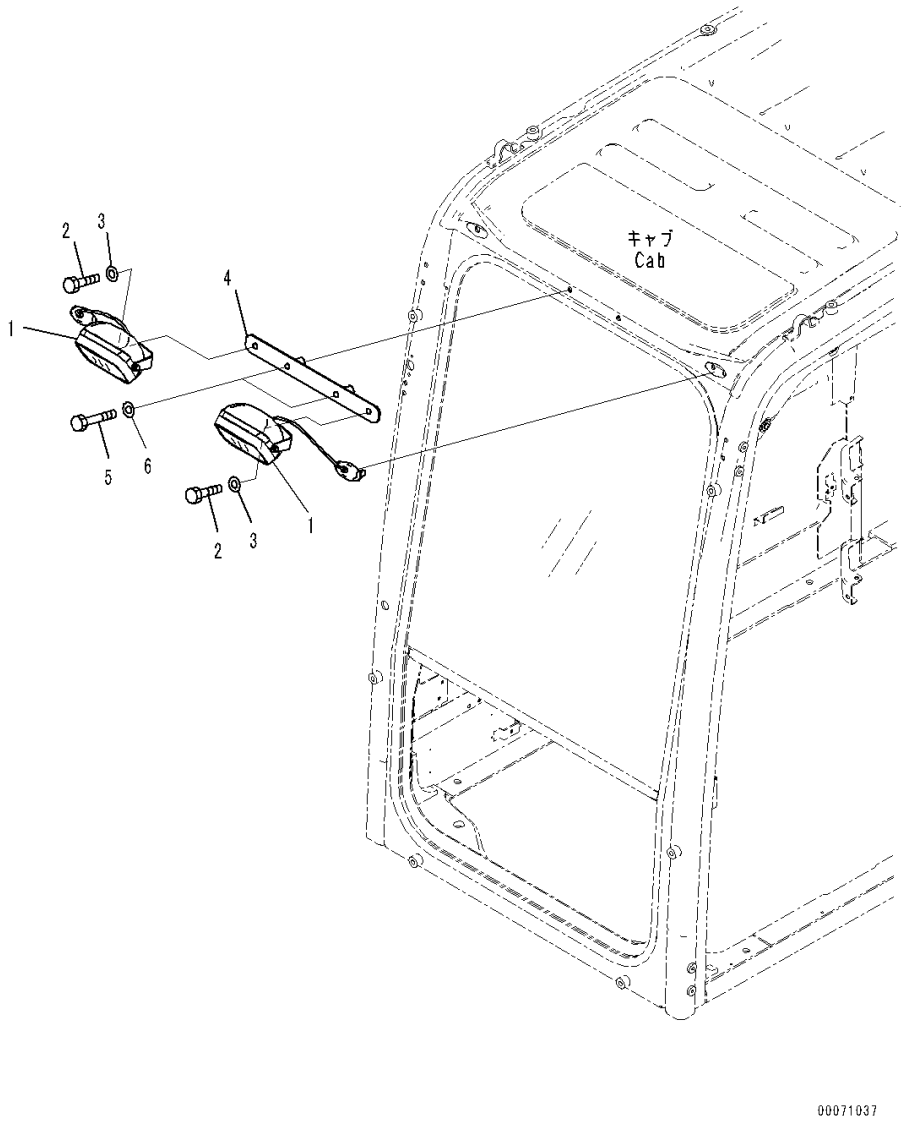


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-15210 | Light Assembly, Working | 2 | Y200001- |
| | | 421-06-23330 | • Bulb, 70watt | 1 | Y200001- |
| 2 | | 01010-D1025 | Bolt | 2 | Y200001- |
| 3 | | 01643-71032 | Washer | 2 | Y200001- |
| 4 | | 20Y-53-15150 | Bracket | 1 | Y200001- |
| 5 | | 01010-D1060 | Bolt | 2 | Y200001- |
| 6 | | 01643-71032 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. E0310-004001 Additional Working Lamp, Top And Front Guard, Demolition Specification

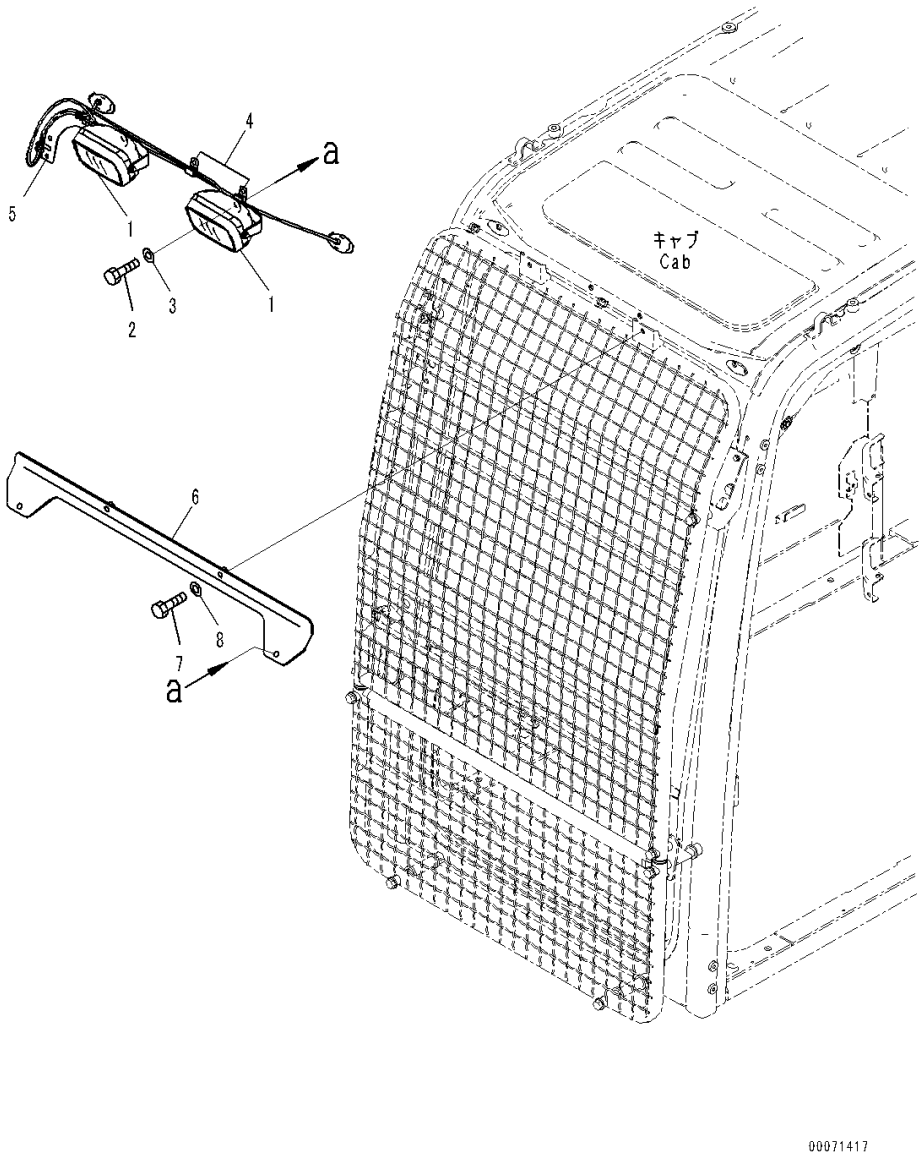


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-15220 | Light Assembly, Working | 2 | Y200001- |
| | | 421-06-23330 | • Bulb, 70watt | 1 | Y200001- |
| 2 | | 01010-D1025 | Bolt | 2 | Y200001- |
| 3 | | 01643-71032 | Washer | 2 | Y200001- |
| 4 | | 08036-10810 | Clip | 2 | Y200001- |
| 5 | | 20Y-54-54480 | Plate | 1 | Y200001- |
| 6 | | 20Y-954-6371 | Bracket | 1 | Y200001- |
| 7 | | 01010-D1035 | Bolt | 2 | Y200001- |
| 8 | | 01643-71032 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. E0320-001001 Additional Rear Working Lamp, Mounted On Counterweight

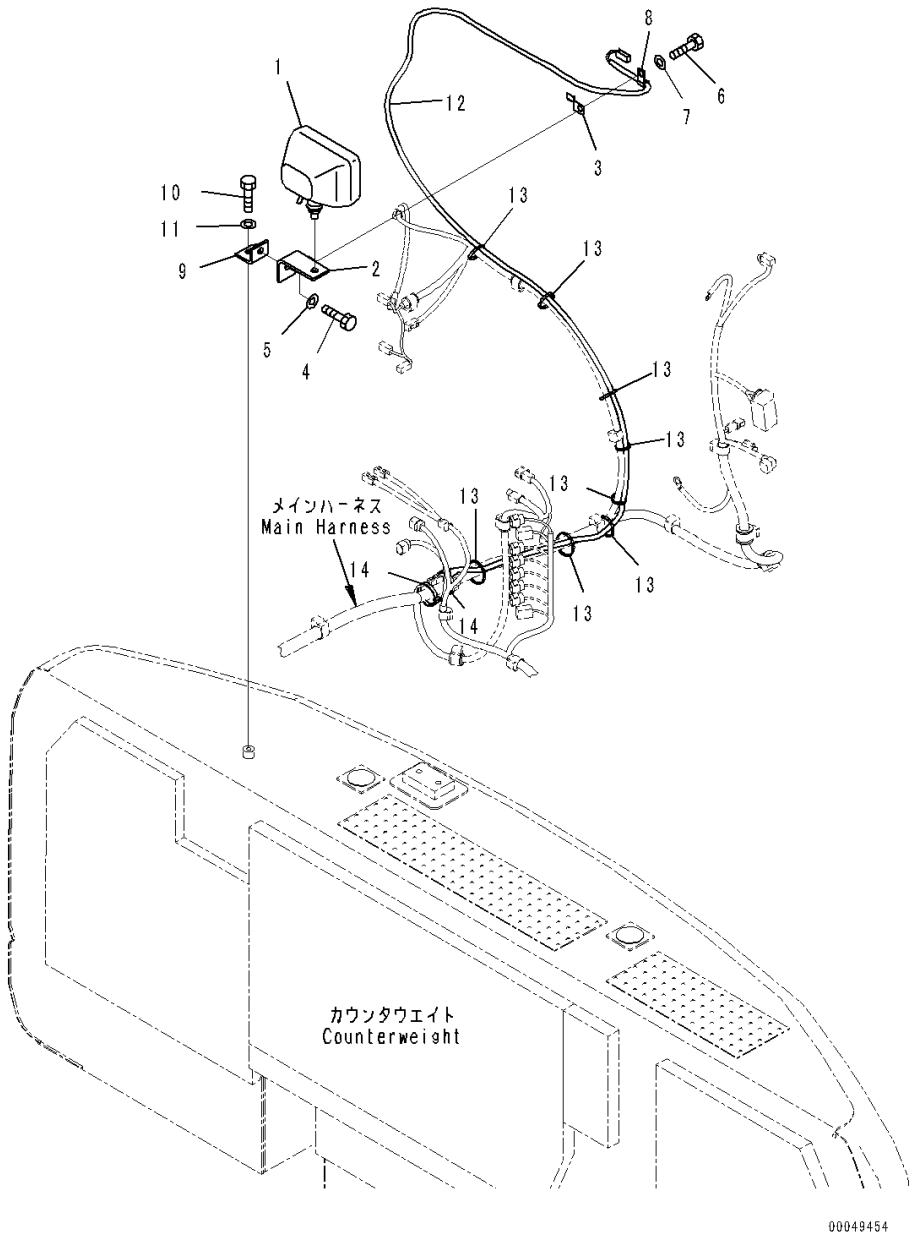


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 21T-06-32810 | Working Lamp Assembly, 24volt, 70watt | 1 | Y200001- |
| | | 421-06-23330 | • Bulb, 70watt. | 1 | Y200001- |
| 2 | | 20Y-06-21551 | Bracket. | 1 | Y200001- |
| 3 | | 08193-21012 | Clip. | 1 | Y200001- |
| 4 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 5 | | 01643-31232 | Washer . | 1 | Y200001- |
| 6 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 7 | | 01643-31232 | Washer . | 1 | Y200001- |
| 8 | | 04434-51012 | Clip. | 1 | Y200001- |
| 9 | | 20Y-06-21590 | Bracket. | 1 | Y200001- |
| 10 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 11 | | 01643-31232 | Washer . | 1 | Y200001- |
| 12 | | 20Y-06-41171 | Wire Harness . | 1 | Y200001- |
| 13 | | 08034-20536 | Band . | 8 | Y200001- |
| 14 | | 08034-20834 | Band . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. E0320-002001 Additional Rear Working Lamp

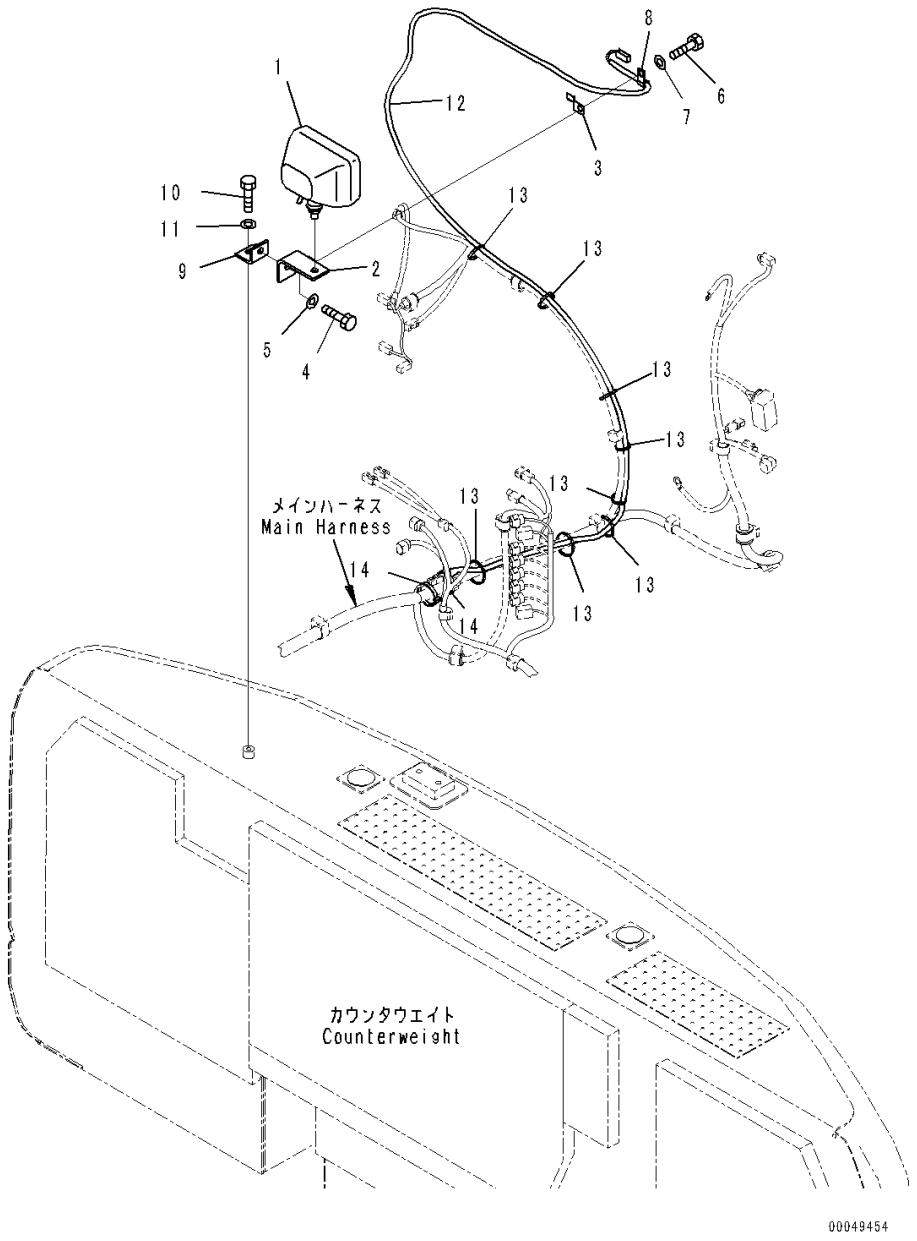


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 21T-06-32810 | Working Lamp Assembly, 24volt, 70watt | 1 | Y200001- |
| | | 421-06-23330 | • Bulb, 70watt. | 1 | Y200001- |
| 2 | | 20Y-06-21551 | Bracket. | 1 | Y200001- |
| 3 | | 08193-21012 | Clip. | 1 | Y200001- |
| 4 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 5 | | 01643-31232 | Washer . | 1 | Y200001- |
| 6 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 7 | | 01643-31232 | Washer . | 1 | Y200001- |
| 8 | | 04434-51012 | Clip. | 1 | Y200001- |
| 9 | | 20Y-06-21590 | Bracket. | 1 | Y200001- |
| 10 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 11 | | 01643-31232 | Washer . | 1 | Y200001- |
| 12 | | 206-06-21170 | Wiring Harness . | 1 | Y200001- |
| 13 | | 08034-20536 | Band . | 8 | Y200001- |
| 14 | | 08034-20834 | Band . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. E0340-001001 Beacon Lamp

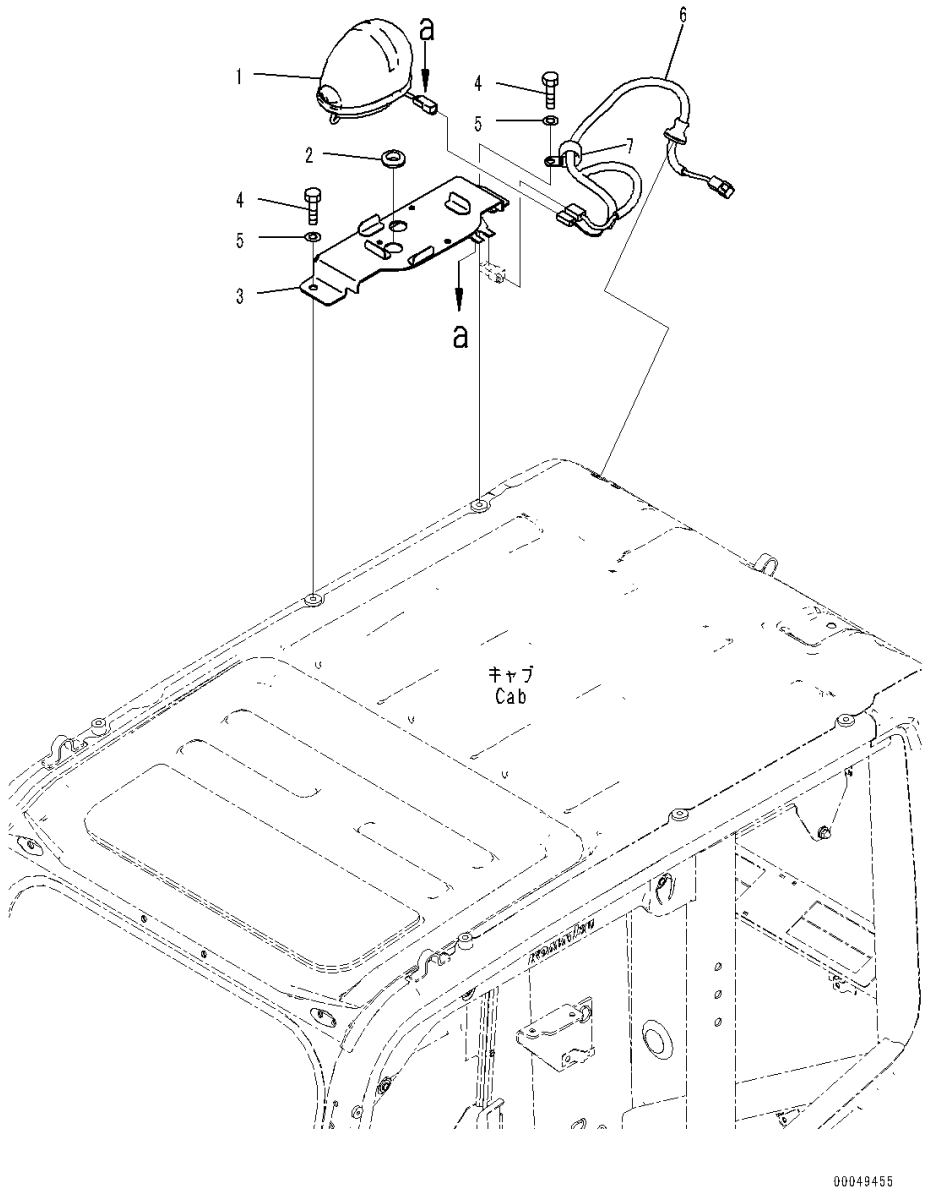


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22B-54-17612 | Lamp Assembly, Working | 1 | Y200001- |
| | | 22B-54-17660 | • Bulb, 62watt, 28volt | 1 | Y200001- |
| 2 | | 08037-02512 | Grommet | 1 | Y200001- |
| 3 | | 20Y-53-15121 | Bracket | 1 | Y200001- |
| 4 | | 01010-D1220 | Bolt | 2 | Y200001- |
| 5 | | 01643-71232 | Washer | 2 | Y200001- |
| 6 | | 20Y-06-41542 | Wiring Harness | 1 | Y200001- |
| 7 | | 04434-51412 | Clip | 1 | Y200001- |


https://truckmanualshub.com/

# FIG. E0410-001001 Horn

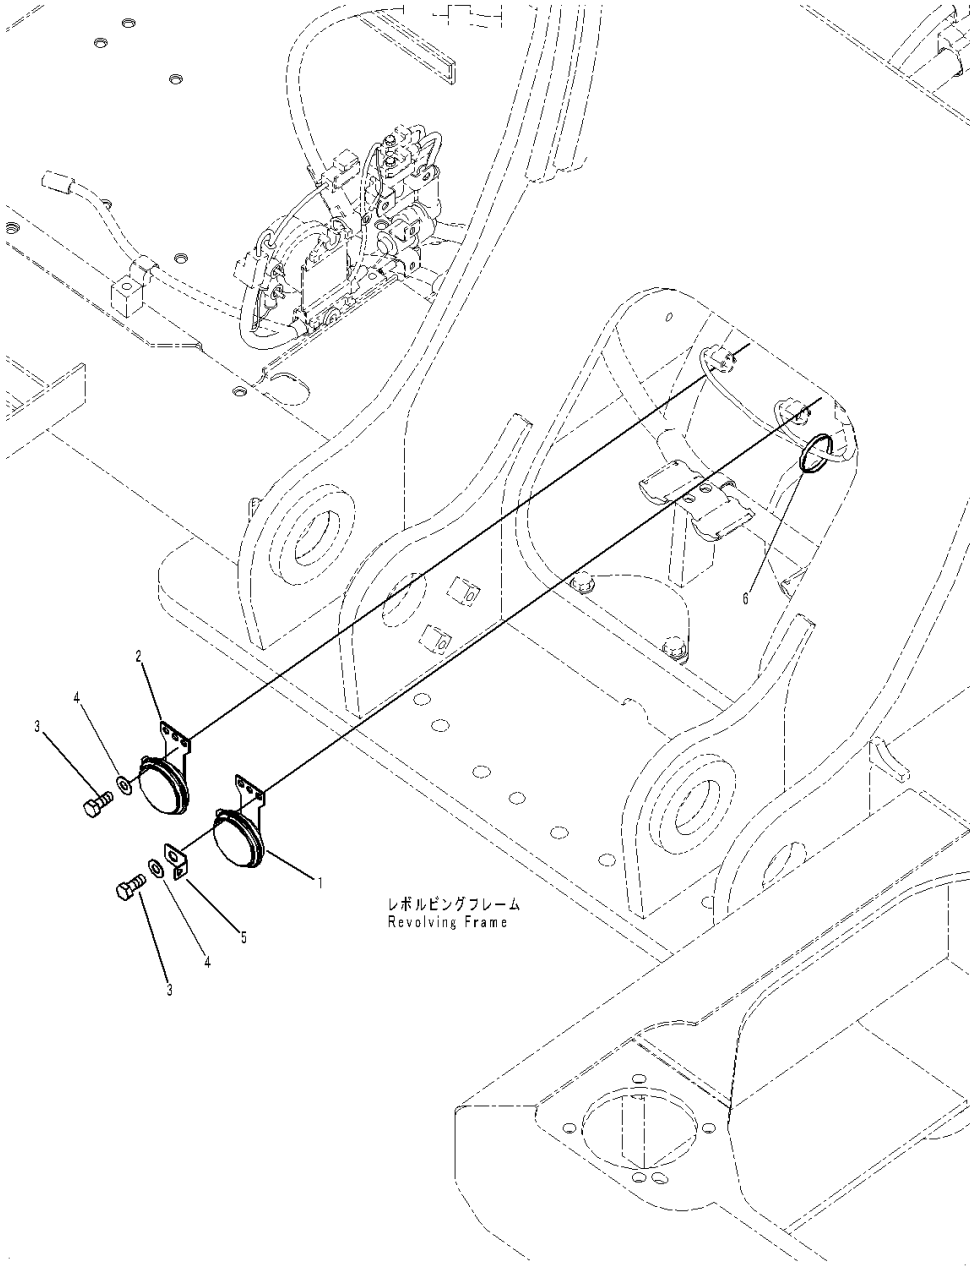


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 08160-72400 | Horn | 1 | Y200001- |
| 2 | | 08160-72420 | Horn | 1 | Y200001- |
| 3 | | 01010-80825 | Bolt | 4 | Y200001- |
| 4 | | 01643-30823 | Washer | 4 | Y200001- |
| 5 | | 08057-12008 | Clip | 1 | Y200001- |
| 6 | | 08034-20414 | Band | 1 | Y200001- |


# FIG. E0420-001001 Travel Alarm

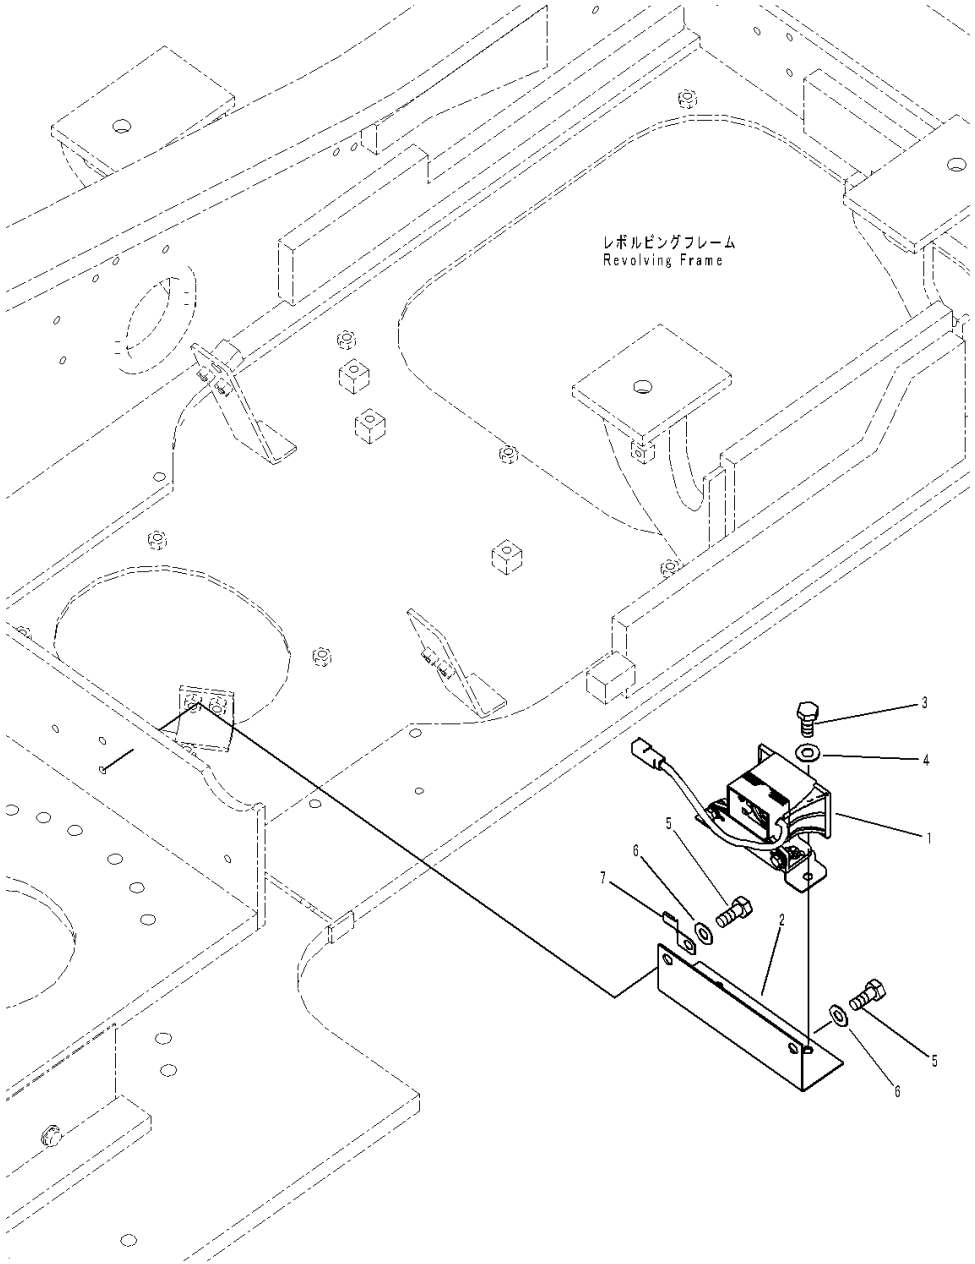


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-06-41812 | Alarm, Back-up | 1 | Y200001- |
| 2 | | 20Y-06-31710 | Bracket | 1 | Y200001- |
| 3 | | 01010-81020 | Bolt | 2 | Y200001- |
| 4 | | 01643-31032 | Washer | 2 | Y200001- |
| 5 | | 01010-81225 | Bolt | 2 | Y200001- |
| 6 | | 01643-31232 | Washer | 2 | Y200001- |
| 7 | | 08193-21012 | Clip | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. E0450-008001 Rear View Camera Less, Less Camera

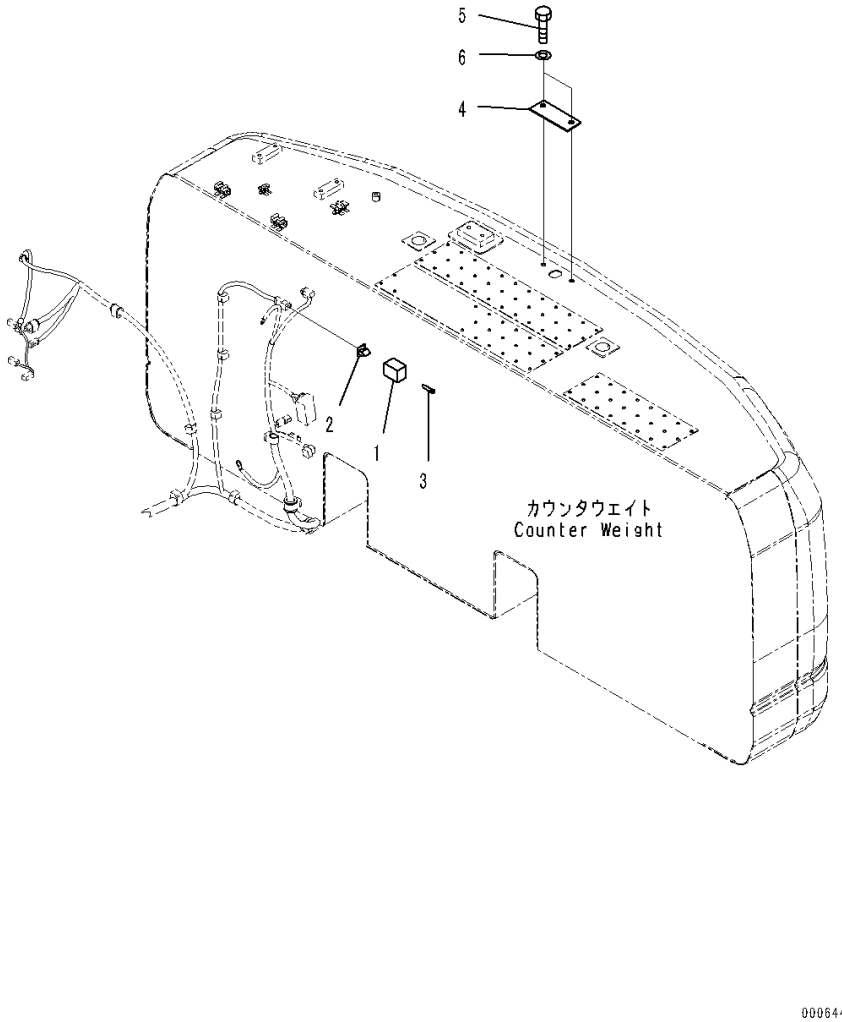



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 08192-24200 | Connector . | 1 | Y200001- |
| 2 | | 08192-14400 | Wedge . | 1 | Y200001- |
| 3 | | 08191-00770 | Plug, Connector | 4 | Y200001- |
| 4 | | 207-06-76270 | Plate. | 1 | Y200001- |
| 5 | | 01010-81220 | Bolt. | 2 | Y200001- |
| 6 | | 01643-31232 | Washer | 2 | Y200001- |

# HYDRAULIC SYSTEM

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. H0110-001001 Hydraulic Tank

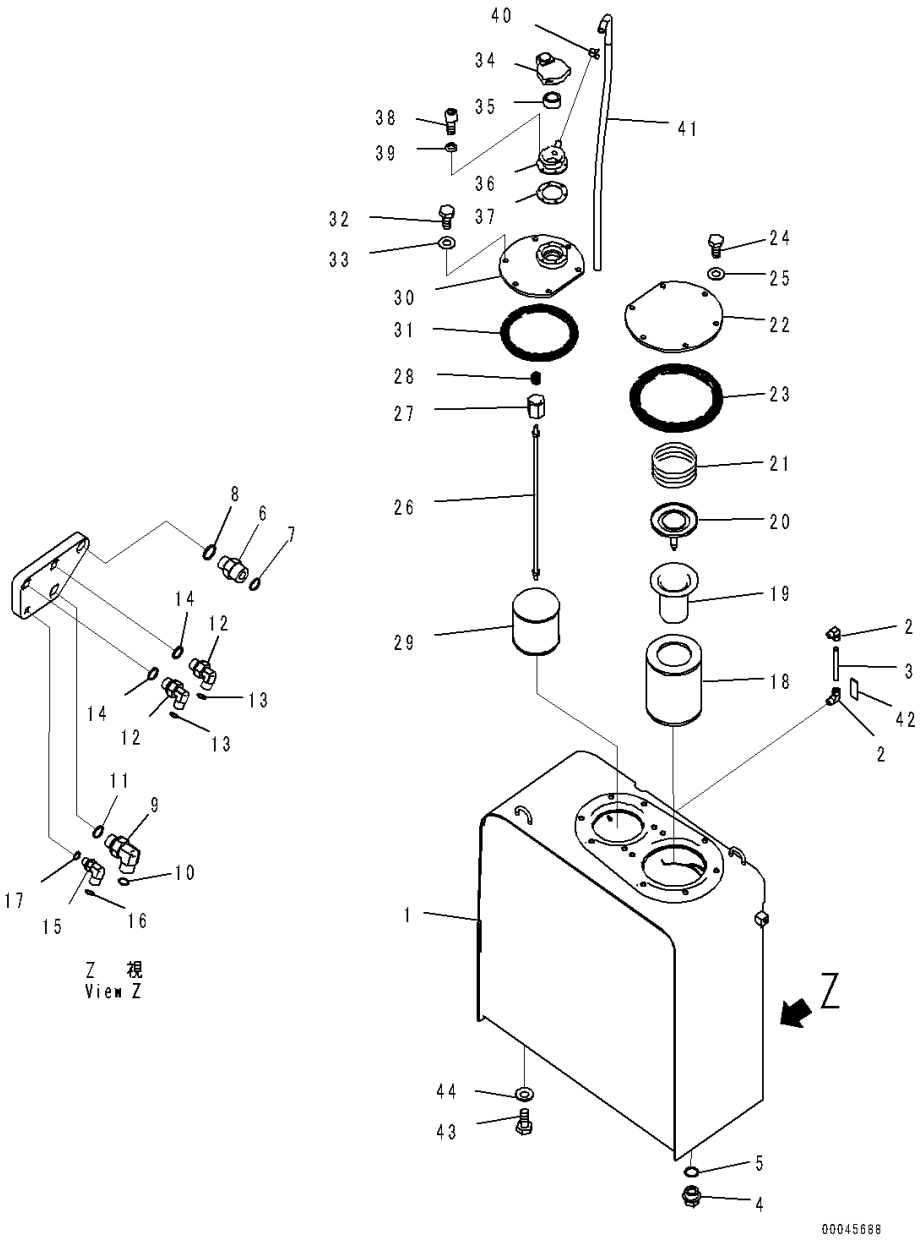


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-60-41114 | Tank | 1 | Y200001- |
| 2 | | 203-60-31100 | Elbow Assembly | 2 | Y200001- |
| 3 | | 203-60-31160 | Tube | 1 | Y200001- |
| 4 | | 07044-12412 | Plug | 1 | Y200001- |
| 5 | | 07002-12434 | O-ring | 1 | Y200001- |
| 6 | | 02781-00628 | Union | 1 | Y200001- |
| 7 | | 02896-11018 | O-ring | 1 | Y200001- |
| 8 | | 07002-12434 | O-ring | 1 | Y200001- |
| 9 | | 02782-10522 | Elbow | 1 | Y200001- |
| 10 | | 02896-11015 | O-ring | 1 | Y200001- |
| 11 | | 07002-12434 | O-ring | 1 | Y200001- |
| 12 | | 02782-10315 | Elbow | 2 | Y200001- |
| 13 | | 02896-11009 | O-ring | 2 | Y200001- |
| 14 | | 07002-12034 | O-ring | 2 | Y200001- |
| 15 | | 02782-10311 | Elbow | 1 | Y200001- |
| 16 | | 02896-11009 | O-ring | 1 | Y200001- |
| 17 | | 07002-11423 | O-ring | 1 | Y200001- |
| 18 | | 207-60-71182 | Element | 1 | Y200001- |
| 19 | | 20Y-60-31140 | Strainer | 1 | Y200001- |
| 20 | | 20Y-60-31131 | Valve Assembly | 1 | Y200001- |
| 21 | | 20Y-60-21240 | Spring | 1 | Y200001- |
| 22 | | 22U-60-21232 | Cover | 1 | Y200001- |
| 23 | | 07000-15195 | O-ring | 1 | Y200001- |
| 24 | | 01010-81230 | Bolt | 6 | Y200001- |
| 25 | | 01643-31232 | Washer | 6 | Y200001- |
| | | 20Y-60-31171 | Strainer Assembly | 1 | Y200001- |
| 26 | | 207-60-61150 | • Rod Assembly | 1 | Y200001- |
| 27 | | 20Y-60-21320 | •• Holder | 1 | Y200001- |
| 28 | | 12R-60-11230 | •• Spring | 1 | Y200001- |
| 29 | | 22B-60-11160 | • Strainer | 1 | Y200001- |
| 30 | | 20Y-60-41162 | Cover | 1 | Y200001- |
| 31 | | 07000-15160 | O-ring | 1 | Y200001- |
| 32 | | 01010-81230 | Bolt | 6 | Y200001- |
| 33 | | 01643-31232 | Washer | 6 | Y200001- |
| 34 | | 17A-60-11310 | Cap Assembly | 1 | Y200001- |
| 35 | | 20Y-60-21470 | • Element | 1 | Y200001- |
| 36 | | 208-60-71180 | Filler Neck, Filler | 1 | Y200001- |
| 37 | | 20Y-60-21340 | Gasket | 1 | Y200001- |
| 38 | | 01252-70516 | Bolt | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. H0110-001001 Hydraulic Tank

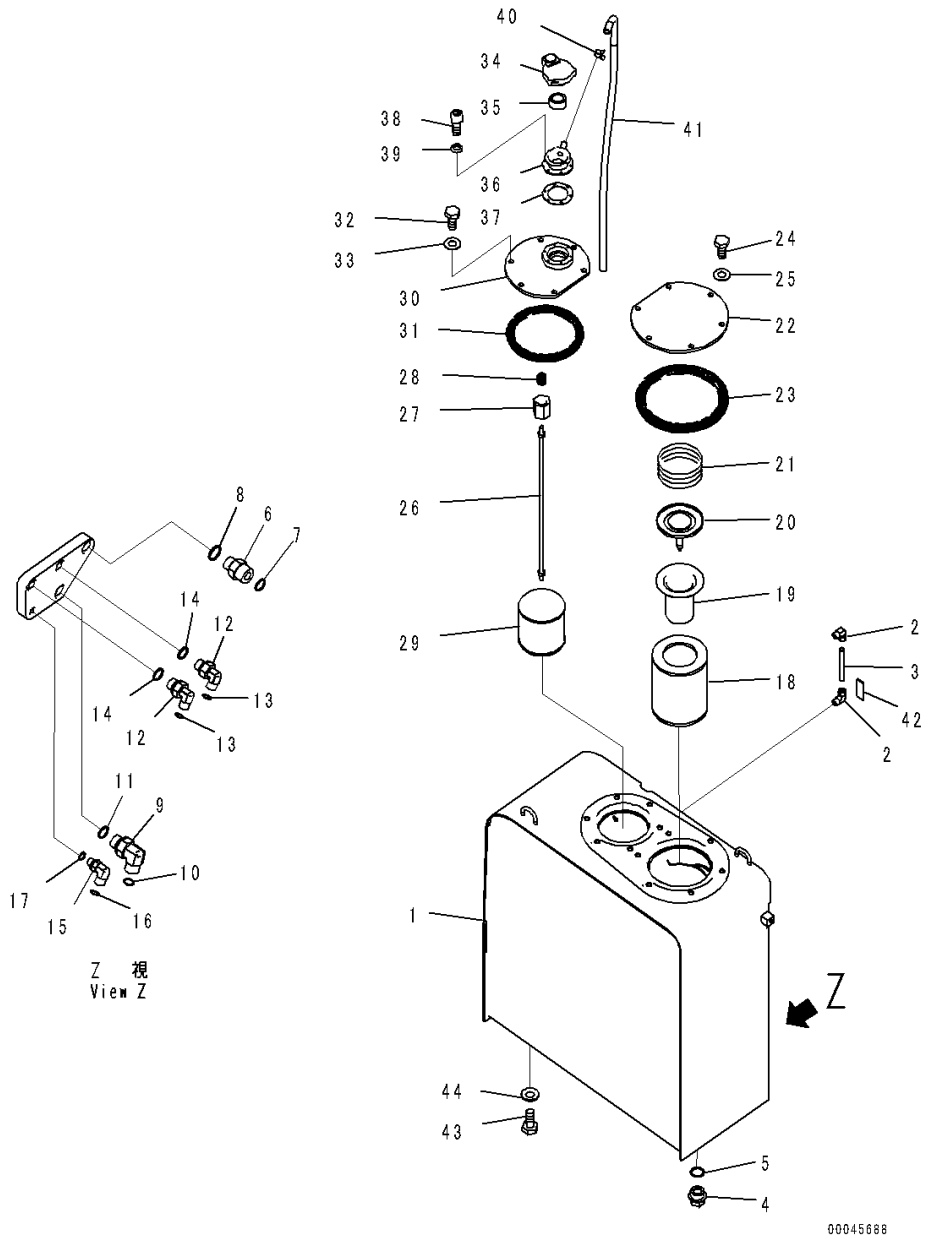


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 01601-20513 | Washer . | 6 | Y200001- |
| 40 | | 07285-00155 | Clip. | 1 | Y200001- |
| 41 | | 07270-61411 | Tube. | 1 | Y200001- |
| 42 | | 205-00-73360 | Plate, Operating. | 1 | Y200001- |
| 43 | | 01010-81635 | Bolt. | 6 | Y200001- |
| 44 | | 01643-31645 | Washer . | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. H0110-002001 Hydraulic Tank, 1-actuator

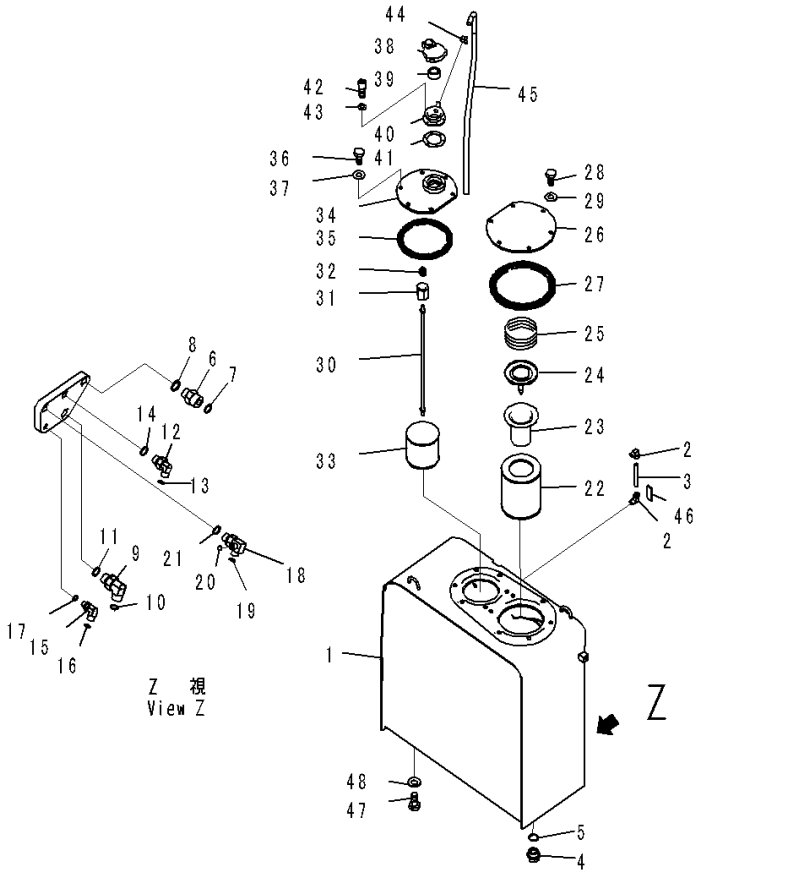


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-60-41114 | Tank | 1 | Y200001- |
| 2 | | 203-60-31100 | Elbow Assembly | 2 | Y200001- |
| 3 | | 203-60-31160 | Tube | 1 | Y200001- |
| 4 | | 07044-12412 | Plug | 1 | Y200001- |
| 5 | | 07002-12434 | O-ring | 1 | Y200001- |
| 6 | | 02781-00628 | Union | 1 | Y200001- |
| 7 | | 02896-11018 | O-ring | 1 | Y200001- |
| 8 | | 07002-12434 | O-ring | 1 | Y200001- |
| 9 | | 02782-10522 | Elbow | 1 | Y200001- |
| 10 | | 02896-11015 | O-ring | 1 | Y200001- |
| 11 | | 07002-12434 | O-ring | 1 | Y200001- |
| 12 | | 02782-10315 | Elbow | 1 | Y200001- |
| 13 | | 02896-11009 | O-ring | 1 | Y200001- |
| 14 | | 07002-12034 | O-ring | 1 | Y200001- |
| 15 | | 02782-10311 | Elbow | 1 | Y200001- |
| 16 | | 02896-11009 | O-ring | 1 | Y200001- |
| 17 | | 07002-11423 | O-ring | 1 | Y200001- |
| 18 | | 20Y-62-45690 | Tee | 1 | Y200001- |
| 19 | | 02896-11009 | O-ring | 1 | Y200001- |
| 20 | | 02896-11008 | O-ring | 1 | Y200001- |
| 21 | | 07002-12034 | O-ring | 1 | Y200001- |
| 22 | | 207-60-71182 | Element | 1 | Y200001- |
| 23 | | 20Y-60-31140 | Strainer | 1 | Y200001- |
| 24 | | 20Y-60-31131 | Valve Assembly | 1 | Y200001- |
| 25 | | 20Y-60-21240 | Spring | 1 | Y200001- |
| 26 | | 22U-60-21232 | Cover | 1 | Y200001- |
| 27 | | 07000-15195 | O-ring | 1 | Y200001- |
| 28 | | 01010-81230 | Bolt | 6 | Y200001- |
| 29 | | 01643-31232 | Washer | 6 | Y200001- |
| | | 20Y-60-31171 | Strainer Assembly | 1 | Y200001- |
| 30 | | 207-60-61150 | • Rod Assembly | 1 | Y200001- |
| 31 | | 20Y-60-21320 | •• Holder | 1 | Y200001- |
| 32 | | 12R-60-11230 | •• Spring | 1 | Y200001- |
| 33 | | 22B-60-11160 | • Strainer | 1 | Y200001- |
| 34 | | 20Y-60-41162 | Cover | 1 | Y200001- |
| 35 | | 07000-15160 | O-ring | 1 | Y200001- |
| 36 | | 01010-81230 | Bolt | 6 | Y200001- |
| 37 | | 01643-31232 | Washer | 6 | Y200001- |
| 38 | | 17A-60-11310 | Cap Assembly | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0110-002001 Hydraulic Tank, 1-actuator

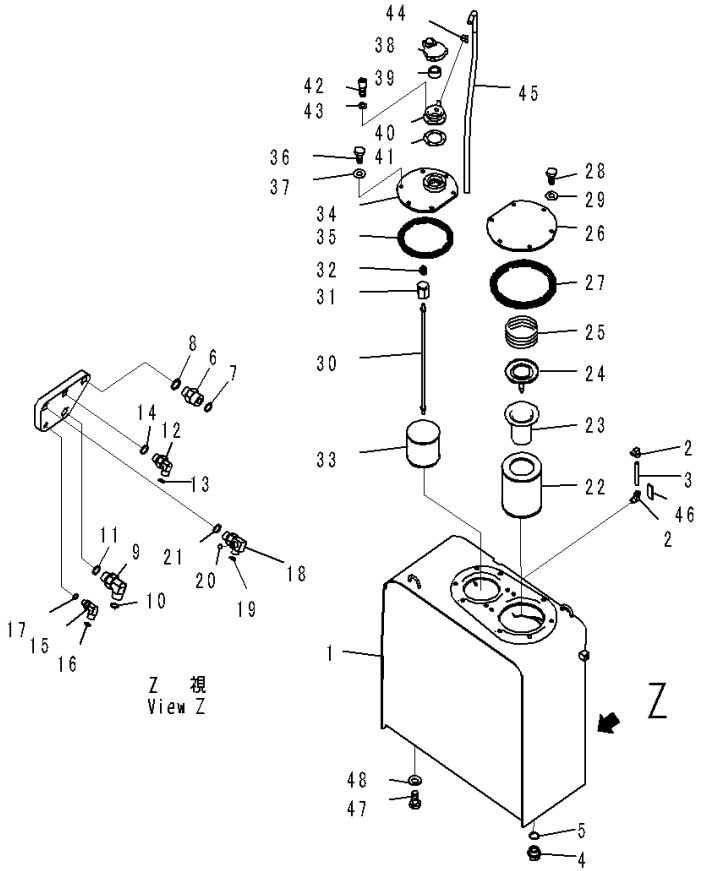


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 20Y-60-21470 | • Element . | 1 | Y200001- |
| 40 | | 208-60-71180 | Filler Neck, Filler . | 1 | Y200001- |
| 41 | | 20Y-60-21340 | Gasket . | 1 | Y200001- |
| 42 | | 01252-70516 | Bolt. | 6 | Y200001- |
| 43 | | 01601-20513 | Washer . | 6 | Y200001- |
| 44 | | 07285-00155 | Clip. | 1 | Y200001- |
| 45 | | 07270-61411 | Tube. | 1 | Y200001- |
| 46 | | 205-00-73360 | Plate, Operating . | 1 | Y200001- |
| 47 | | 01010-81635 | Bolt. | 6 | Y200001- |
| 48 | | 01643-31645 | Washer . | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001001 Main Control Valve, Inner Parts (1/17)

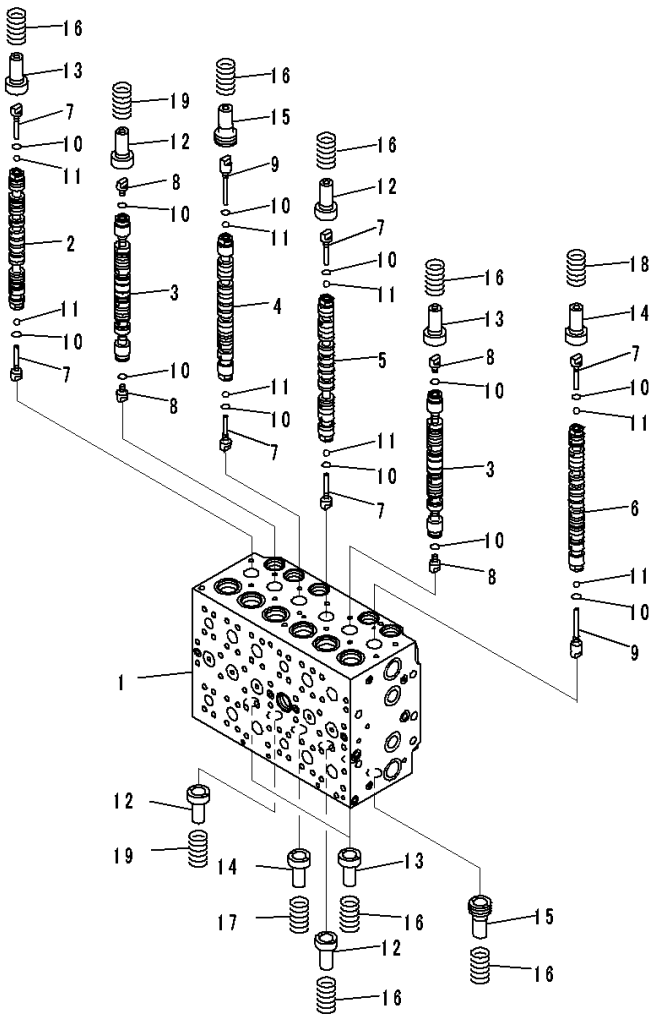


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly | 1 | Y200001- |
| | C1 | | • Body Subassembly | 1 | Y200001- |
| 1 | C1 | | •• Block, Valve | 1 | Y200001- |
| 2 | C1 | | •• Spool | 1 | Y200001- |
| 3 | C1 | | •• Spool | 2 | Y200001- |
| 4 | C1 | | •• Spool | 1 | Y200001- |
| 5 | C1 | | •• Spool | 1 | Y200001- |
| 6 | C1 | | •• Spool | 1 | Y200001- |
| 7 | | 723-46-15130 | •• Plug | 6 | Y200001- |
| 8 | | 723-46-15140 | •• Plug | 4 | Y200001- |
| 9 | | 723-46-15650 | •• Plug | 2 | Y200001- |
| 10 | | 07002-10823 | •• O-ring | 12 | Y200001- |
| 11 | | 708-7T-16460 | •• Ball | 8 | Y200001- |
| 12 | | 723-46-15120 | •• Retainer | 4 | Y200001- |
| 13 | | 723-46-15690 | •• Retainer | 4 | Y200001- |
| 14 | | 723-46-15950 | •• Retainer | 2 | Y200001- |
| 15 | | 723-46-15880 | •• Retainer | 2 | Y200001- |
| 16 | | 723-46-14110 | •• Spring | 8 | Y200001- |
| 17 | | 723-46-14280 | •• Spring | 1 | Y200001- |
| 18 | | 723-46-14290 | •• Spring | 1 | Y200001- |
| 19 | | 723-46-14131 | •• Spring | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001002 Main Control Valve, Inner Parts (2/17)

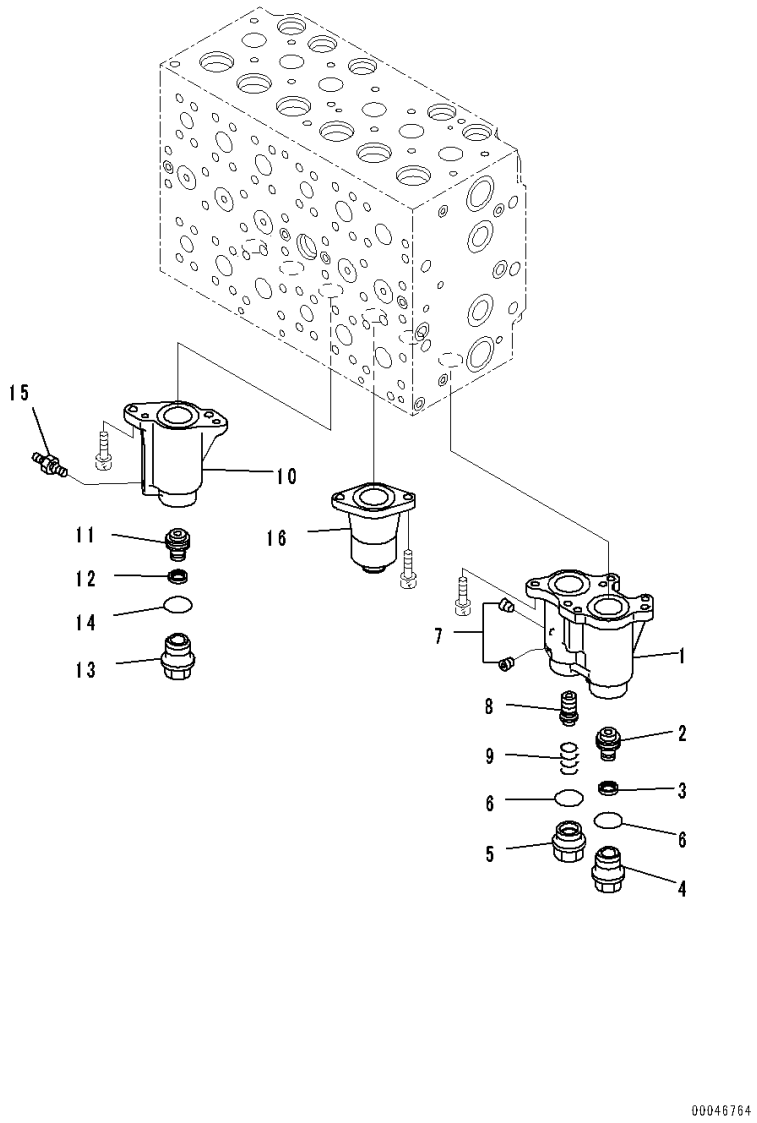


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| | | 723-46-18300 | •• Case Subassembly. | 1 | Y200001- |
| 1 | C1 | | ••• Case. | 1 | Y200001- |
| 2 | C1 | | ••• Piston . | 1 | Y200001- |
| 3 | C1 | | ••• Seal. | 1 | Y200001- |
| 4 | | 723-46-15630 | ••• Plug. | 1 | Y200001- |
| 5 | | 723-46-17340 | ••• Plug. | 1 | Y200001- |
| 6 | | 07000-13024 | ••• O-ring . | 2 | Y200001- |
| 7 | C1 | | ••• Screw . | 3 | Y200001- |
| 8 | | 723-46-17320 | ••• Spool. | 1 | Y200001- |
| 9 | | 723-46-17330 | ••• Spring. | 1 | Y200001- |
| | | 723-46-19100 | •• Case Subassembly. | 1 | Y200001- |
| 10 | C1 | | ••• Case. | 1 | Y200001- |
| 11 | C1 | | ••• Piston . | 1 | Y200001- |
| 12 | C1 | | ••• Seal. | 1 | Y200001- |
| 13 | | 723-46-15630 | ••• Plug. | 1 | Y200001- |
| 14 | | 07000-13024 | ••• O-ring . | 1 | Y200001- |
| 15 | C1 | | ••• Plug. | 1 | Y200001- |
| 16 | | 723-46-15111 | •• Case . | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. H0120-001003 Main Control Valve, Inner Parts (3/17)

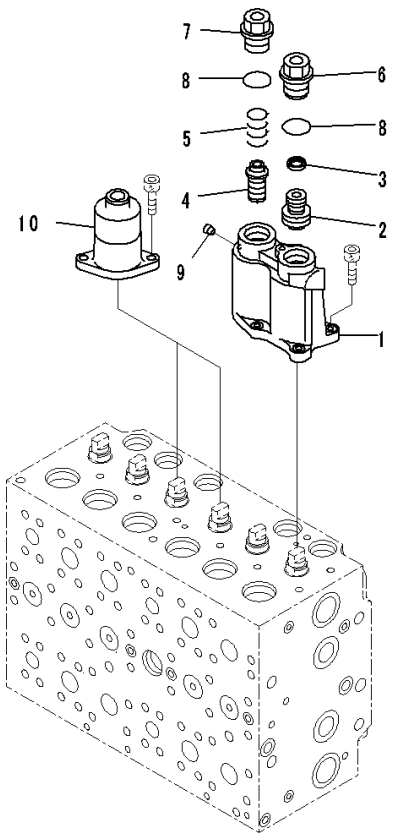



00046765

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| | | 723-46-19200 | •• Case Subassembly. | 1 | Y200001- |
| 1 | C1 | | ••• Case. | 1 | Y200001- |
| 2 | C1 | | ••• Piston . | 1 | Y200001- |
| 3 | C1 | | ••• Seal. | 1 | Y200001- |
| 4 | | 723-46-17320 | ••• Spool. | 1 | Y200001- |
| 5 | | 723-46-17330 | ••• Spring. | 1 | Y200001- |
| 6 | | 723-46-15630 | ••• Plug. | 1 | Y200001- |
| 7 | | 723-46-17340 | ••• Plug. | 1 | Y200001- |
| 8 | | 07000-13024 | ••• O-ring . | 2 | Y200001- |
| 9 | C1 | | ••• Screw . | 3 | Y200001- |
| 10 | | 723-46-15111 | •• Case . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001004 Main Control Valve, Inner Parts (4/17)

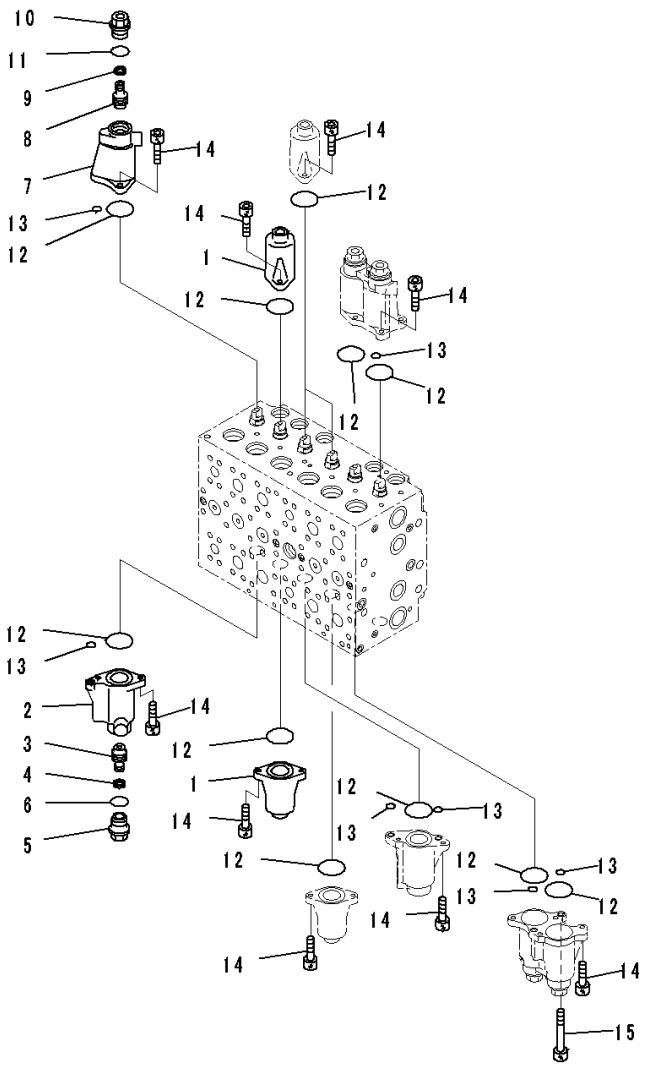


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| 1 | | 723-46-15111 | •• Case . | 2 | Y200001- |
| | | 723-46-18500 | •• Case Subassembly. | 1 | Y200001- |
| 2 | C1 | | ••• Case. | 1 | Y200001- |
| 3 | C1 | | ••• Piston . | 1 | Y200001- |
| 4 | C1 | | ••• Seal. | 1 | Y200001- |
| 5 | | 723-46-15630 | ••• Plug. | 1 | Y200001- |
| 6 | | 07000-13024 | ••• O-ring . | 1 | Y200001- |
| | | 723-46-18600 | •• Case Subassembly. | 1 | Y200001- |
| 7 | C1 | | ••• Case. | 1 | Y200001- |
| 8 | C1 | | ••• Piston . | 1 | Y200001- |
| 9 | C1 | | ••• Seal. | 1 | Y200001- |
| 10 | | 723-46-15630 | ••• Plug. | 1 | Y200001- |
| 11 | | 07000-13024 | ••• O-ring . | 1 | Y200001- |
| 12 | | 07430-71380 | •• O-ring. | 12 | Y200001- |
| 13 | | 702-16-53920 | •• O-ring. | 8 | Y200001- |
| 14 | | 01252-60820 | •• Bolt. | 22 | Y200001- |
| 15 | | 723-46-17350 | •• Bolt. | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001005 Main Control Valve, Inner Parts (5/17)

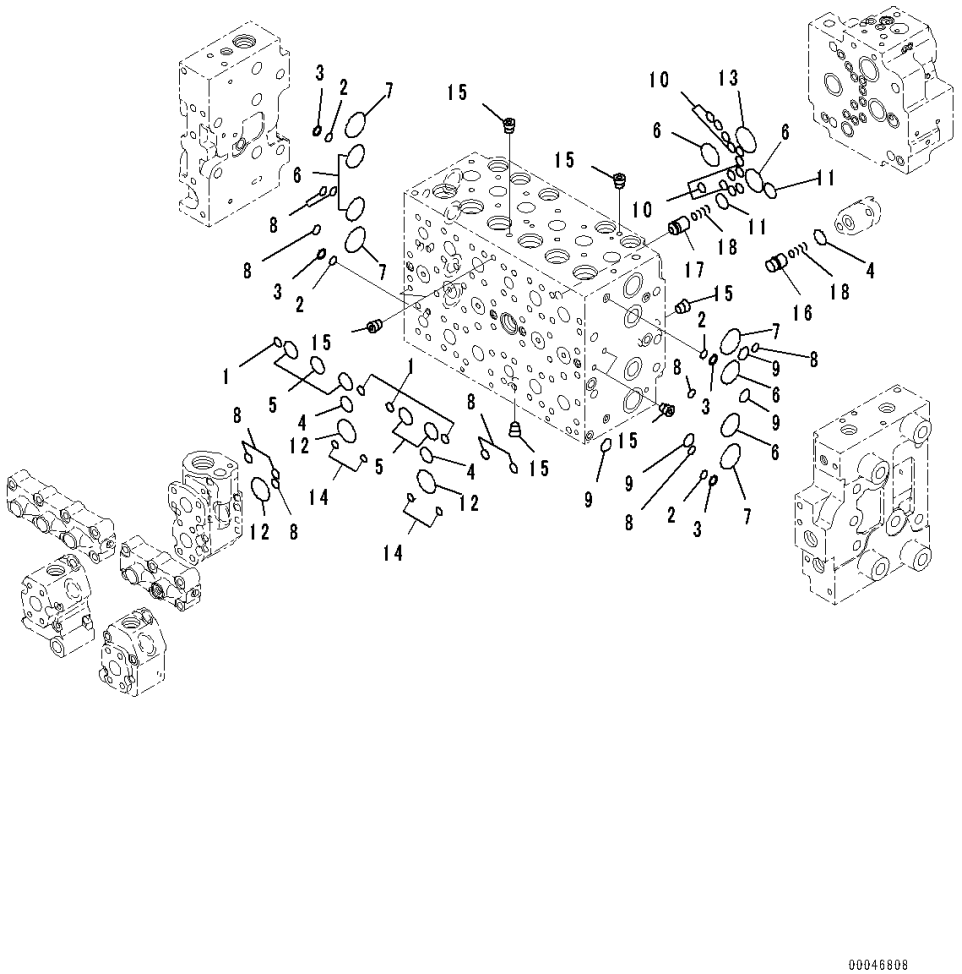


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| 1 | | 07000-12012 | •• O-ring. | 4 | Y200001- |
| 2 | | 723-11-19130 | •• O-ring. | 4 | Y200001- |
| 3 | | 723-46-17520 | •• Ring, Back-up . | 4 | Y200001- |
| 4 | | 07000-12021 | •• O-ring. | 3 | Y200001- |
| 5 | | 07000-13028 | •• O-ring. | 5 | Y200001- |
| 6 | | 07000-13032 | •• O-ring. | 6 | Y200001- |
| 7 | | 723-46-17510 | •• O-ring. | 4 | Y200001- |
| 8 | | 723-46-17530 | •• O-ring. | 11 | Y200001- |
| 9 | | 723-11-18150 | •• O-ring. | 4 | Y200001- |
| 10 | | 07000-12012 | •• O-ring. | 12 | Y200001- |
| 11 | | 07000-12021 | •• O-ring. | 2 | Y200001- |
| 12 | | 07000-13032 | •• O-ring. | 3 | Y200001- |
| 13 | | 07000-13036 | •• O-ring. | 1 | Y200001- |
| 14 | | 702-16-53920 | •• O-ring. | 4 | Y200001- |
| 15 | C1 | | •• Plug. | 16 | Y200001- |
| 16 | | 723-46-17650 | •• Valve. | 1 | Y200001- |
| 17 | | 723-46-15150 | •• Valve. | 1 | Y200001- |
| 18 | | 723-46-14150 | •• Spring . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001006 Main Control Valve, Inner Parts (6/17)

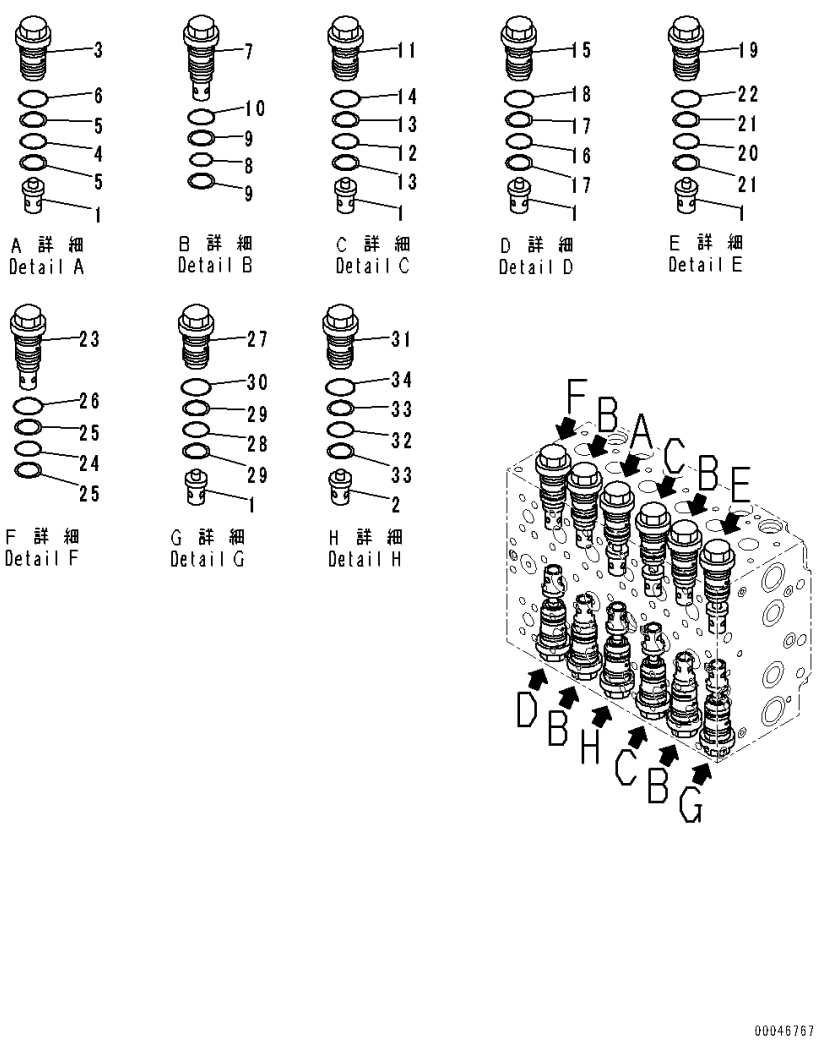


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| 1 | | 723-46-41210 | •• Valve. | 6 | Y200001- |
| 2 | | 723-46-41190 | •• Valve. | 1 | Y200001- |
| 3 | | 723-46-40100 | •• Valve Assembly . | 1 | Y200001- |
| 4 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 5 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 6 | | 07002-13634 | ••• O-ring . | 1 | Y200001- |
| 7 | | 723-46-42700 | •• Valve Assembly . | 4 | Y200001- |
| 8 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 9 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 10 | | 07002-13634 | ••• O-ring . | 1 | Y200001- |
| 11 | | 723-46-41100 | •• Valve Assembly . | 2 | Y200001- |
| 12 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 13 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 14 | | 07002-13634 | ••• O-ring . | 1 | Y200001- |
| 15 | | 723-46-45100 | •• Valve Assembly . | 1 | Y200001- |
| 16 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 17 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 18 | | 07002-13634 | ••• O-ring . | 1 | Y200001- |
| 19 | | 723-46-46300 | •• Valve Assembly . | 1 | Y200001- |
| 20 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 21 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 22 | | 07002-13634 | ••• O-ring . | 1 | Y200001- |
| 23 | | 723-46-43400 | •• Valve Assembly . | 1 | Y200001- |
| 24 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 25 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 26 | | 07002-13634 | ••• O-ring . | 1 | Y200001- |
| 27 | | 723-46-43100 | •• Valve Assembly . | 1 | Y200001- |
| 28 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 29 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 30 | | 07002-13634 | ••• O-ring . | 1 | Y200001- |
| 31 | | 723-46-46101 | •• Valve Assembly . | 1 | Y200001- |
| 32 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 33 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 34 | | 07002-13634 | ••• O-ring . | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001007 Main Control Valve, Inner Parts (7/17)

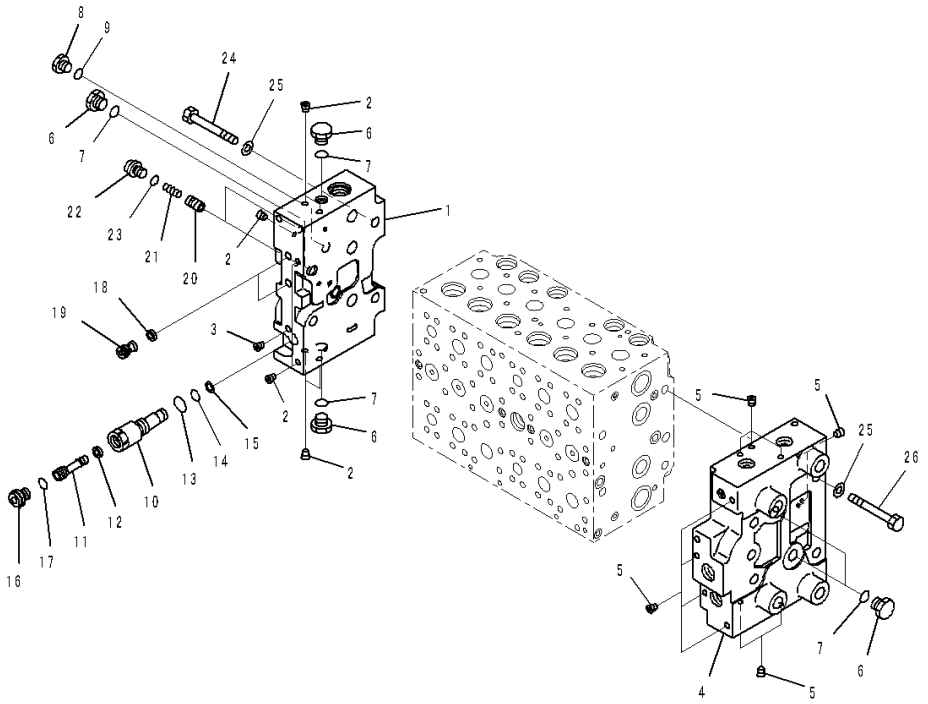

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | | 723-46-00750 | • Cover Assembly . | 1 | Y200001- |
| 1 | C1 | | •• Cover | 1 | Y200001- |
| 2 | C1 | | •• Plug. | 7 | Y200001- |
| 3 | C1 | | •• Plug. | 1 | Y200001- |
| | | 723-46-00790 | • Cover Assembly . | 1 | Y200001- |
| 4 | C1 | | •• Cover . | 1 | Y200001- |
| 5 | C1 | | •• Plug. | 12 | Y200001- |
| 6 | | 708-8E-16250 | • Plug . | 5 | Y200001- |
| 7 | | 07002-11823 | • O-ring . | 5 | Y200001- |
| 8 | | 708-8H-11530 | • Plug . | 1 | Y200001- |
| 9 | | 07002-11423 | • O-ring . | 1 | Y200001- |
| | | 723-46-17600 | • Plug Assembly. | 1 | Y200001- |
| 10 | | 723-46-17610 | •• Sleeve. | 1 | Y200001- |
| 11 | | 723-46-17640 | •• Plug. | 1 | Y200001- |
| 12 | | 702-21-55760 | •• Filter. | 1 | Y200001- |
| 13 | | 07002-11423 | •• O-ring. | 1 | Y200001- |
| 14 | | 07000-11007 | •• O-ring. | 1 | Y200001- |
| 15 | | 07001-01007 | •• Ring, Back-up . | 1 | Y200001- |
| 16 | | 708-8E-16160 | •• Plug. | 1 | Y200001- |
| 17 | | 07002-11023 | •• O-ring. | 1 | Y200001- |
| 18 | | 723-40-82220 | • Filter . | 2 | Y200001- |
| 19 | | 723-46-17550 | • Plug . | 2 | Y200001- |
| 20 | | 723-46-15190 | • Valve . | 2 | Y200001- |
| 21 | | 723-46-14140 | • Spring. | 2 | Y200001- |
| 22 | | 708-8E-16160 | • Plug . | 2 | Y200001- |
| 23 | | 07002-11023 | • O-ring . | 2 | Y200001- |
| 24 | | 01010-61490 | • Bolt . | 4 | Y200001- |
| 25 | | 01643-31445 | • Washer. | 8 | Y200001- |
| 26 | | 01010-61490 | • Bolt . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001008 Main Control Valve, Inner Parts (8/17)

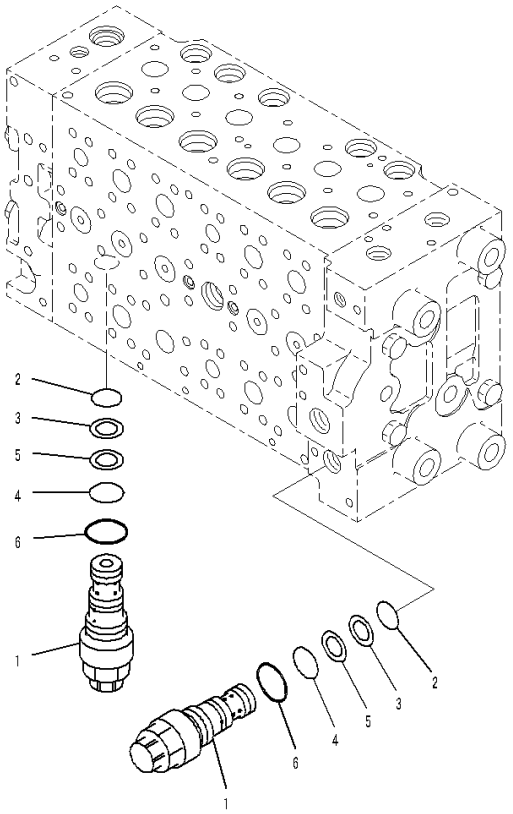


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly | 1 | Y200001- |
| 1 | | 723-40-57200 | • Valve Assembly, Unloader | 2 | Y200001- |
| 2 | | 07000-12014 | •• O-ring | 1 | Y200001- |
| 3 | | 723-40-56350 | •• Ring | 1 | Y200001- |
| 4 | | 07000-12016 | •• O-ring | 1 | Y200001- |
| 5 | | 723-60-22230 | •• Ring, Back-up | 1 | Y200001- |
| 6 | | 07002-12434 | •• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001009 Main Control Valve, Inner Parts (9/17)

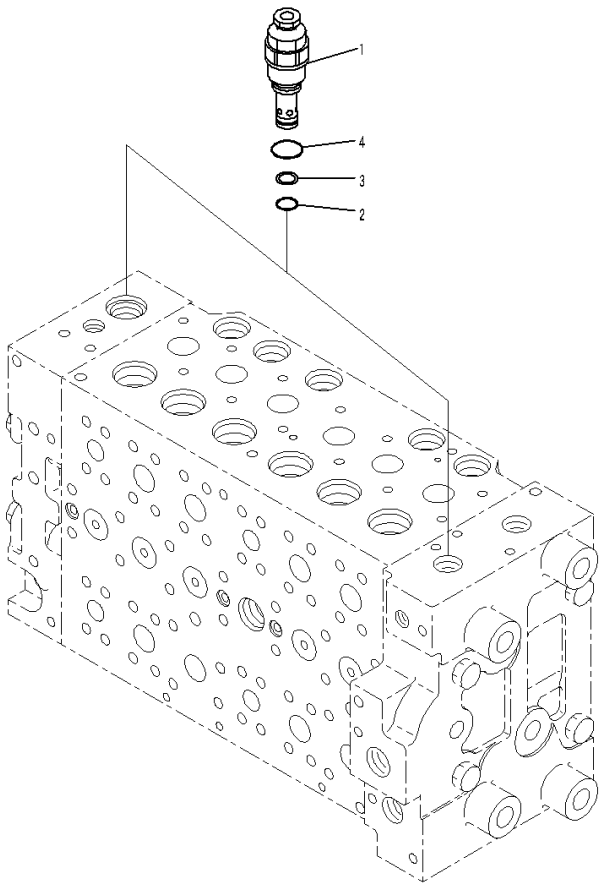


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly | 1 | Y200001- |
| 1 | | 723-40-93600 | • Valve Assembly, Relief | 2 | Y200001- |
| 2 | | 700-22-11410 | •• O-ring | 1 | Y200001- |
| 3 | | 700-80-64220 | •• Ring | 1 | Y200001- |
| 4 | | 07002-12434 | •• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001010 Main Control Valve, Inner Parts (10/17)

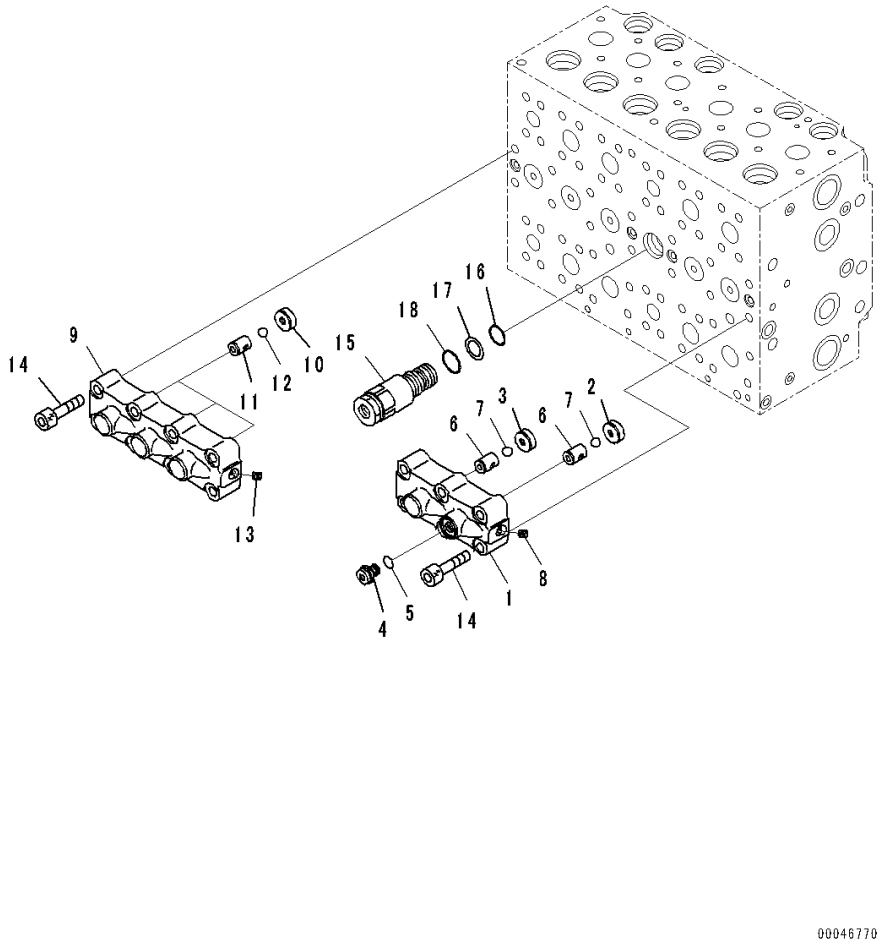


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | | 723-40-66701 | • Valve Assembly. | 1 | Y200001- |
| 1 | C1 | | •• Case . | 1 | Y200001- |
| 2 | C1 | | •• Seat . | 1 | Y200001- |
| 3 | C1 | | •• Seat . | 1 | Y200001- |
| 4 | | 708-8H-11530 | •• Plug. | 1 | Y200001- |
| 5 | | 07002-11423 | •• O-ring. | 1 | Y200001- |
| 6 | C1 | | •• Seat . | 2 | Y200001- |
| 7 | C1 | | •• Ball. | 2 | Y200001- |
| 8 | C1 | | •• Plug. | 1 | Y200001- |
| | | 723-40-66601 | • Valve Assembly. | 1 | Y200001- |
| 9 | C1 | | •• Case . | 1 | Y200001- |
| 10 | C1 | | •• Seat . | 3 | Y200001- |
| 11 | C1 | | •• Seat . | 3 | Y200001- |
| 12 | C1 | | •• Ball. | 3 | Y200001- |
| 13 | C1 | | •• Plug. | 1 | Y200001- |
| 14 | | 01252-61045 | • Bolt, Hexagon Socket Head . | 14 | Y200001- |
| 15 | | 723-40-60101 | • Valve Assembly. | 1 | Y200001- |
| 16 | | 07000-12020 | •• O-ring. | 1 | Y200001- |
| 17 | | 07001-02020 | •• Ring, Back-up . | 1 | Y200001- |
| 18 | | 709-25-11390 | •• O-ring. | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001011 Main Control Valve, Inner Parts (11/17)

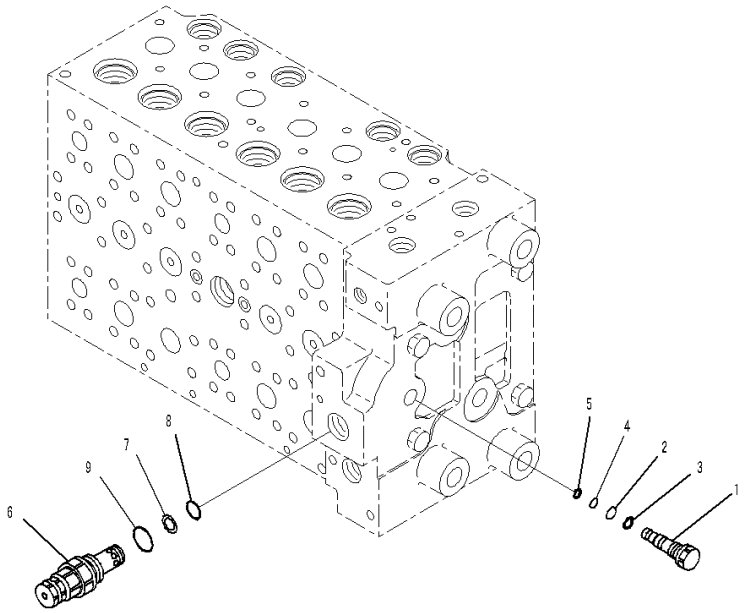


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly | 1 | Y200001- |
| | | 723-46-17701 | • Plug Assembly | 1 | Y200001- |
| 1 | | 723-46-17711 | •• Plug | 1 | Y200001- |
| 2 | | 07000-11009 | •• O-ring | 1 | Y200001- |
| 3 | | 07001-01009 | •• Ring, Back-up | 1 | Y200001- |
| 4 | | 07000-11007 | •• O-ring | 1 | Y200001- |
| 5 | | 07001-01007 | •• Ring, Back-up | 1 | Y200001- |
| 6 | | 723-40-91500 | • Valve Assembly, Relief | 1 | Y200001- |
| 7 | | 700-80-64220 | •• Ring | 1 | Y200001- |
| 8 | | 700-22-11410 | •• O-ring | 1 | Y200001- |
| 9 | | 709-25-11390 | •• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001012 Main Control Valve, Inner Parts (12/17)

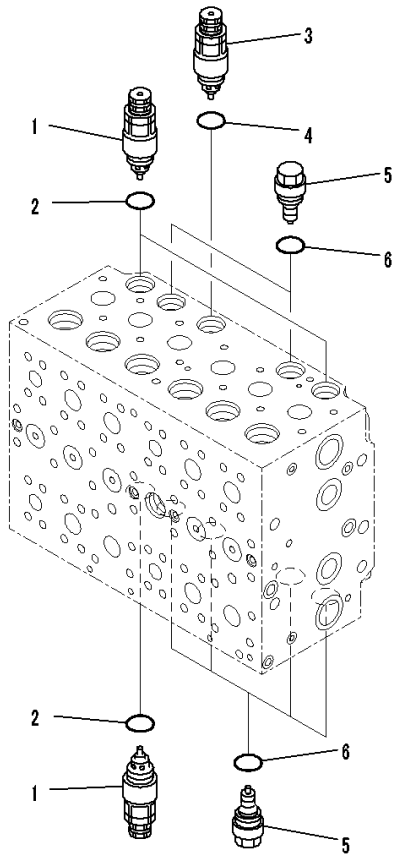


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly | 1 | Y200001- |
| 1 | | 723-40-91200 | • Valve Assembly, Suction and Relief | 3 | Y200001- |
| 2 | | 709-25-11390 | •• O-ring | 1 | Y200001- |
| 3 | | 723-90-61600 | • Valve Assembly | 1 | Y200001- |
| 4 | | 07000-13024 | •• O-ring | 1 | Y200001- |
| 5 | | 723-40-85100 | • Valve Assembly, Suction | 6 | Y200001- |
| 6 | | 709-25-11390 | •• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001013 Main Control Valve, Inner Parts (13/17)

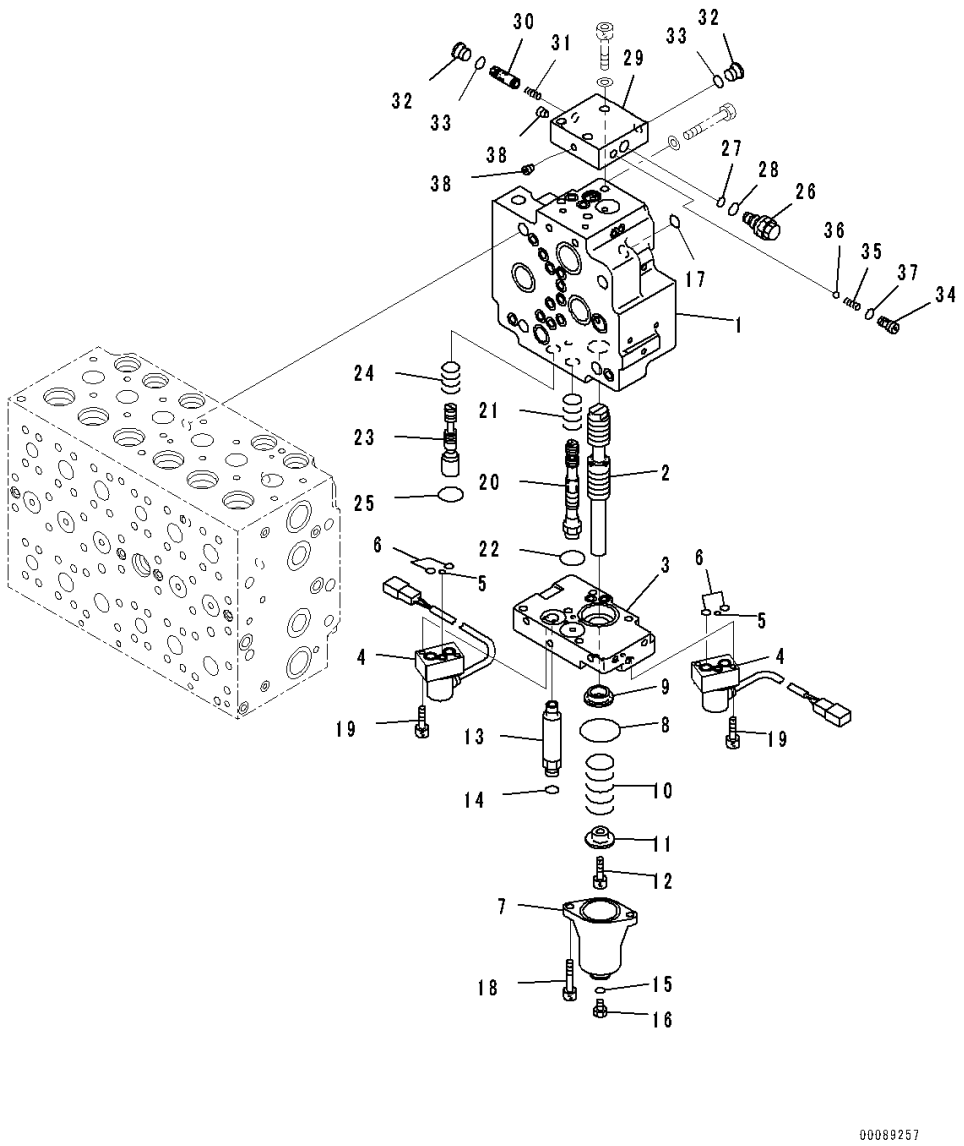


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | | 723-40-72100 | • Valve Assembly. | 1 | Y200001- |
| 1 | C1 | | •• Body. | 1 | Y200001- |
| 2 | C1 | | •• Spool. | 1 | Y200001- |
| 3 | | 723-40-72800 | •• Plate Assembly | 1 | Y200001- |
| 4 | | 702-21-60500 | •• Valve, Pilot | 2 | Y200001- |
| 5 | | 723-11-19960 | ••• O-ring | 1 | Y200001- |
| 6 | | 702-21-54910 | ••• O-ring | 2 | Y200001- |
| 7 | | 723-46-15111 | •• Case | 1 | Y200001- |
| 8 | | 07430-71380 | •• O-ring | 1 | Y200001- |
| 9 | | 723-40-71330 | •• Retainer | 1 | Y200001- |
| 10 | | 723-40-71340 | •• Spring | 1 | Y200001- |
| 11 | | 723-40-71350 | •• Retainer | 1 | Y200001- |
| 12 | | 01252-60816 | •• Bolt. | 1 | Y200001- |
| 13 | | 723-40-71870 | •• Union | 1 | Y200001- |
| 14 | | 02896-11008 | •• O-ring | 1 | Y200001- |
| 15 | | 07002-11423 | •• O-ring | 1 | Y200001- |
| 16 | | 07040-11409 | •• Plug. | 1 | Y200001- |
| 17 | | 07002-11423 | •• O-ring | 1 | Y200001- |
| 18 | | 01252-60855 | •• Bolt, Hexagon Socket Head | 2 | Y200001- |
| 19 | | 01252-60635 | •• Bolt. | 4 | Y200001- |
| 20 | C1 | | •• Spool Assembly . | 1 | Y200001- |
| 21 | | 723-40-71850 | •• Spring . | 1 | Y200001- |
| 22 | | 723-46-18720 | •• O-ring. | 1 | Y200001- |
| 23 | C1 | | •• Spool. | 1 | Y200001- |
| 24 | | 723-40-71390 | •• Spring . | 1 | Y200001- |
| 25 | | 723-46-18720 | •• O-ring. | 1 | Y200001- |
| | | 723-40-71900 | •• Valve Assembly . | 1 | Y200001- |
| 26 | C1 | | ••• Valve Assembly, Relief . | 1 | Y200001- |
| 27 | | 702-16-53920 | •••• O-ring . | 1 | Y200001- |
| 28 | | 07002-11623 | •••• O-ring . | 1 | Y200001- |
| 29 | C1 | | ••• Block . | 1 | Y200001- |
| 30 | C1 | | ••• Spool. | 1 | Y200001- |
| 31 | C1 | | ••• Spring. | 1 | Y200001- |
| 32 | | 702-21-55620 | ••• Plug. | 2 | Y200001- |
| 33 | | 07002-11423 | ••• O-ring | 2 | Y200001- |
| 34 | | 702-21-55710 | ••• Seat. | 1 | Y200001- |
| 35 | | 702-21-55720 | ••• Spring. | 1 | Y200001- |
| 36 | | 04260-00793 | ••• Ball | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001013 Main Control Valve, Inner Parts (13/17)

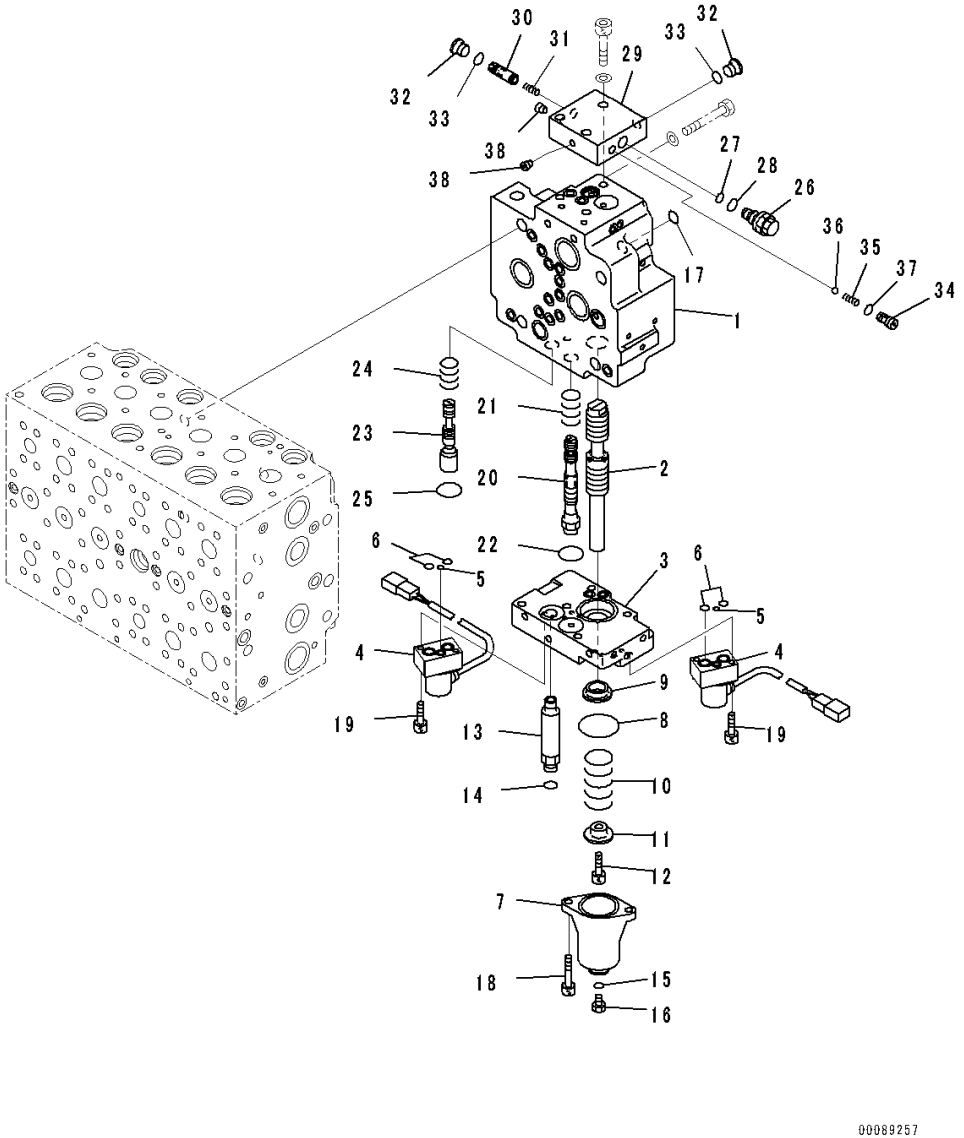


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 37 | | 07000-11009 | ••• O-ring | 1 | Y200001- |
| 38 | C1 | | ••• Plug | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001014 Main Control Valve, Inner Parts (14/17)

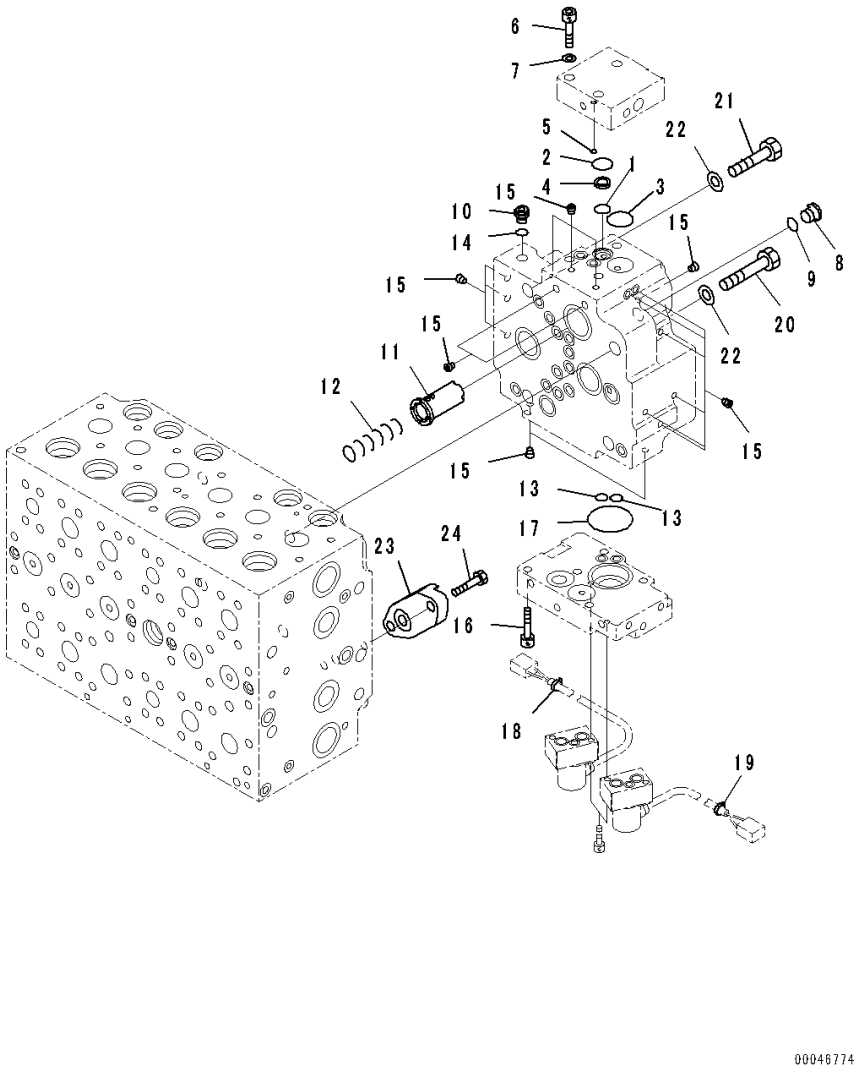


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | | 723-40-72100 | • Valve Assembly. | 1 | Y200001- |
| 1 | | 702-21-55420 | •• O-ring. | 1 | Y200001- |
| 2 | | 702-21-55520 | •• O-ring. | 1 | Y200001- |
| 3 | | 702-21-55440 | •• O-ring. | 1 | Y200001- |
| 4 | | 702-21-53120 | •• Filter. | 1 | Y200001- |
| 5 | | 07000-12011 | •• O-ring. | 2 | Y200001- |
| 6 | | 01252-61040 | •• Bolt. | 3 | Y200001- |
| 7 | | 01643-51032 | •• Washer . | 3 | Y200001- |
| 8 | | 702-21-55620 | •• Plug. | 1 | Y200001- |
| 9 | | 07002-11423 | •• O-ring. | 1 | Y200001- |
| 10 | | 708-8E-16160 | •• Plug. | 1 | Y200001- |
| 11 | | 723-40-71430 | •• Valve. | 1 | Y200001- |
| 12 | | 702-21-55460 | •• Spring . | 1 | Y200001- |
| 13 | | 07000-11010 | •• O-ring. | 2 | Y200001- |
| 14 | | 07002-11023 | •• O-ring. | 1 | Y200001- |
| 15 | C1 | | •• Plug | 17 | Y200001- |
| 16 | | 01252-60845 | •• Bolt | 3 | Y200001- |
| 17 | | 07000-12035 | •• O-ring | 1 | Y200001- |
| 18 | | 20Y-62-22790 | •• Band, Red | 1 | Y200001- |
| 19 | | 20Y-62-22830 | •• Band, White | 1 | Y200001- |
| 20 | | 01010-61470 | • Bolt | 3 | Y200001- |
| 21 | | 01010-61460 | • Bolt | 1 | Y200001- |
| 22 | | 01643-31445 | • Washer | 4 | Y200001- |
| 23 | | 723-46-17680 | • Plate | 1 | Y200001- |
| 24 | | 01010-81030 | • Bolt | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001015 Main Control Valve, Inner Parts (15/17)

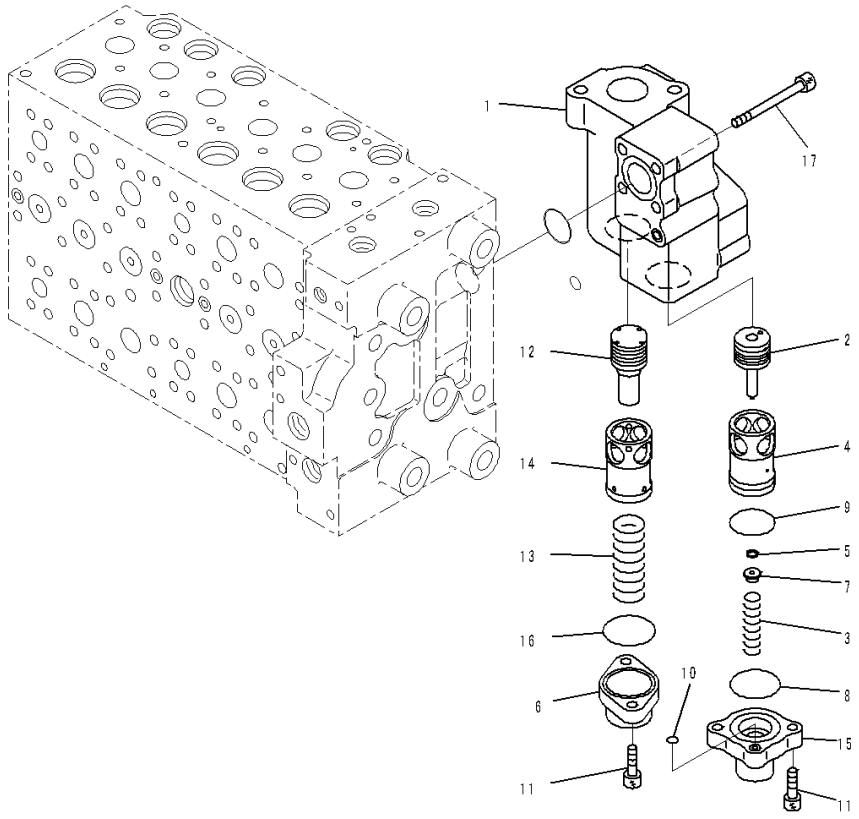


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | | 723-40-87601 | • Valve Assembly. | 1 | Y200001- |
| 1 | | 723-40-87510 | •• Body. | 1 | Y200001- |
| 2 | | 723-40-87240 | •• Spool. | 1 | Y200001- |
| 3 | | 723-40-87260 | •• Spring . | 1 | Y200001- |
| 4 | C1 | | •• Sleeve. | 1 | Y200001- |
| 5 | C1 | | •• Seal. | 1 | Y200001- |
| 6 | C1 | | •• Case . | 1 | Y200001- |
| 7 | | 723-40-87250 | •• Retainer . | 1 | Y200001- |
| 8 | | 723-40-87170 | •• O-ring. | 1 | Y200001- |
| 9 | | 07000-13035 | •• O-ring. | 1 | Y200001- |
| 10 | | 07000-11007 | •• O-ring. | 1 | Y200001- |
| 11 | | 01252-60825 | •• Bolt. | 4 | Y200001- |
| 12 | | 723-40-87520 | •• Piston. | 1 | Y200001- |
| 13 | | 723-40-87540 | •• Spring . | 1 | Y200001- |
| 14 | C1 | | •• Sleeve. | 1 | Y200001- |
| 15 | C1 | | •• Case . | 1 | Y200001- |
| 16 | | 723-40-87170 | •• O-ring. | 1 | Y200001- |
| 17 | | 01252-61080 | • Bolt, Hexagon Socket Head . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001016 Main Control Valve, Inner Parts (16/17)

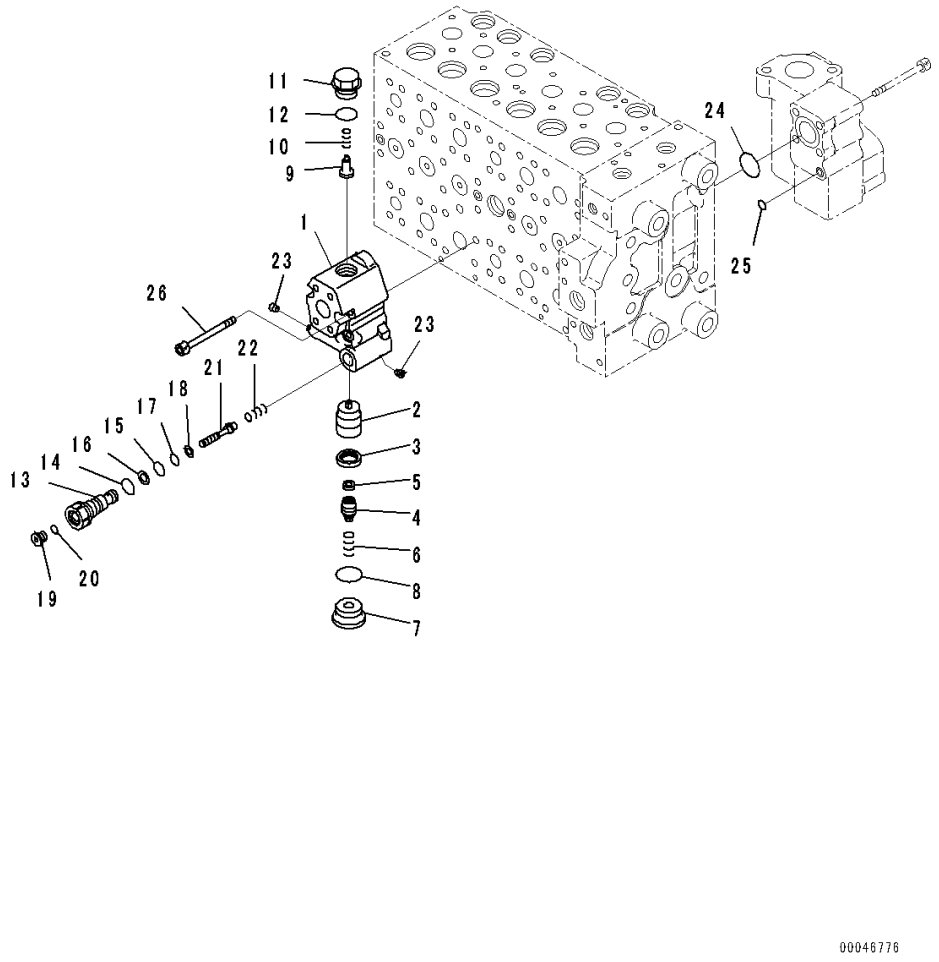


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly | 1 | Y200001- |
| | | 723-40-82501 | • Valve Assembly | 1 | Y200001- |
| 1 | C1 | | •• Body | 1 | Y200001- |
| 2 | C1 | | •• Valve | 1 | Y200001- |
| 3 | C1 | | •• Seal | 1 | Y200001- |
| 4 | | 723-40-82210 | •• Plug | 1 | Y200001- |
| 5 | | 723-40-82220 | •• Filter | 1 | Y200001- |
| 6 | | 723-40-82140 | •• Spring | 1 | Y200001- |
| 7 | | 723-40-82150 | •• Plug | 1 | Y200001- |
| 8 | | 07002-13334 | •• O-ring | 1 | Y200001- |
| 9 | | 723-40-84420 | •• Valve, Check | 1 | Y200001- |
| 10 | | 723-40-84430 | •• Spring | 1 | Y200001- |
| 11 | | 723-40-84440 | •• Plug | 1 | Y200001- |
| 12 | | 07000-13024 | •• O-ring | 1 | Y200001- |
| 13 | C1 | | •• Plug | 1 | Y200001- |
| 14 | | 07002-11823 | •• O-ring | 1 | Y200001- |
| 15 | | 07000-12011 | •• O-ring | 1 | Y200001- |
| 16 | | 07001-02011 | •• Ring, Back-up | 1 | Y200001- |
| 17 | | 07000-11010 | •• O-ring | 1 | Y200001- |
| 18 | | 07001-01010 | •• Ring, Back-up | 1 | Y200001- |
| 19 | | 723-11-18190 | •• Plug | 1 | Y200001- |
| 20 | | 07002-11023 | •• O-ring | 1 | Y200001- |
| 21 | C1 | | •• Piston | 1 | Y200001- |
| 22 | | 723-40-82290 | •• Spring | 1 | Y200001- |
| 23 | C1 | | •• Plug | 2 | Y200001- |
| 24 | | 07000-13038 | • O-ring | 1 | Y200001- |
| 25 | | 07000-11010 | • O-ring | 1 | Y200001- |
| 26 | | 01252-61075 | • Bolt, Hexagon Socket Head | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001017 Main Control Valve, Inner Parts (17/17)

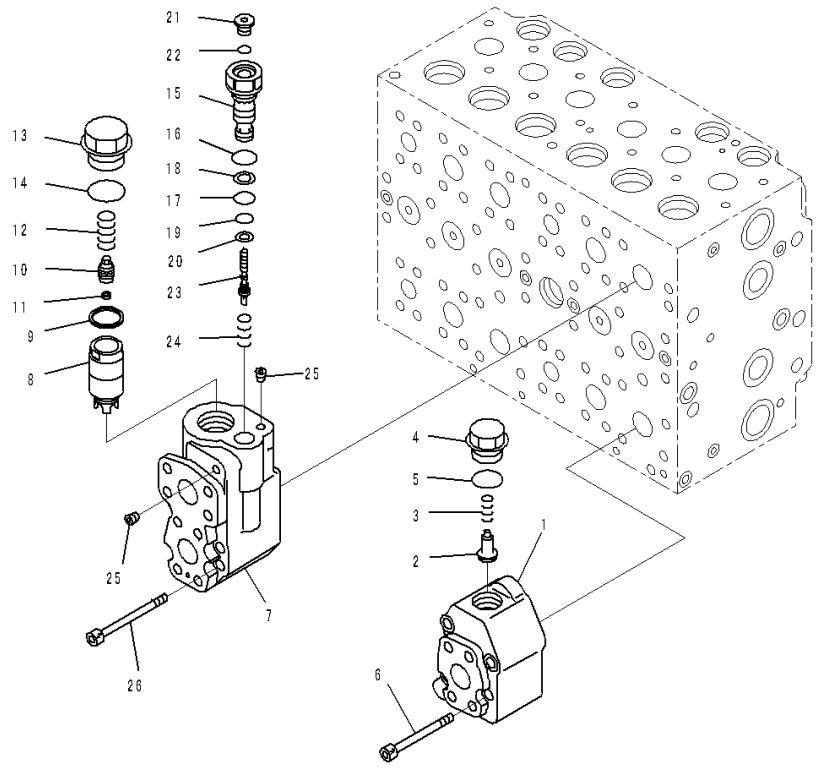


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-46-23103 | Valve Assembly . | 1 | Y200001- |
| | | 723-40-84601 | • Valve Assembly. | 1 | Y200001- |
| 1 | | 723-40-84410 | •• Block. | 1 | Y200001- |
| 2 | | 723-40-84420 | •• Valve, Check. | 1 | Y200001- |
| 3 | | 723-40-84430 | •• Spring . | 1 | Y200001- |
| 4 | | 723-40-84440 | •• Plug. | 1 | Y200001- |
| 5 | | 07000-13024 | •• O-ring. | 1 | Y200001- |
| 6 | | 01252-61070 | • Bolt, Hexagon Socket Head . | 4 | Y200001- |
| | | 723-40-84501 | • Valve Assembly. | 1 | Y200001- |
| 7 | C1 | | •• Body. | 1 | Y200001- |
| 8 | C1 | | •• Valve. | 1 | Y200001- |
| 9 | C1 | | •• Seal. | 1 | Y200001- |
| 10 | | 723-40-84330 | •• Plug. | 1 | Y200001- |
| 11 | | 723-40-82220 | •• Filter. | 1 | Y200001- |
| 12 | | 723-40-84340 | •• Spring . | 1 | Y200001- |
| 13 | | 723-40-84350 | •• Plug. | 1 | Y200001- |
| 14 | | 07002-13334 | •• O-ring. | 1 | Y200001- |
| 15 | C1 | | •• Plug. | 1 | Y200001- |
| 16 | | 07002-11823 | •• O-ring. | 1 | Y200001- |
| 17 | | 07000-12011 | •• O-ring. | 1 | Y200001- |
| 18 | | 07001-02011 | •• Ring, Back-up . | 1 | Y200001- |
| 19 | | 07000-11010 | •• O-ring. | 1 | Y200001- |
| 20 | | 07001-01010 | •• Ring, Back-up . | 1 | Y200001- |
| 21 | | 723-11-18190 | •• Plug. | 1 | Y200001- |
| 22 | | 07002-11023 | •• O-ring. | 1 | Y200001- |
| 23 | C1 | | •• Piston. | 1 | Y200001- |
| 24 | | 723-40-84382 | •• Spring | 1 | Y200001- |
| 25 | C1 | | •• Plug. | 2 | Y200001- |
| 26 | | 01252-61080 | • Bolt, Hexagon Socket Head . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001018 Main Control Valve, Connecting Parts (1/2)

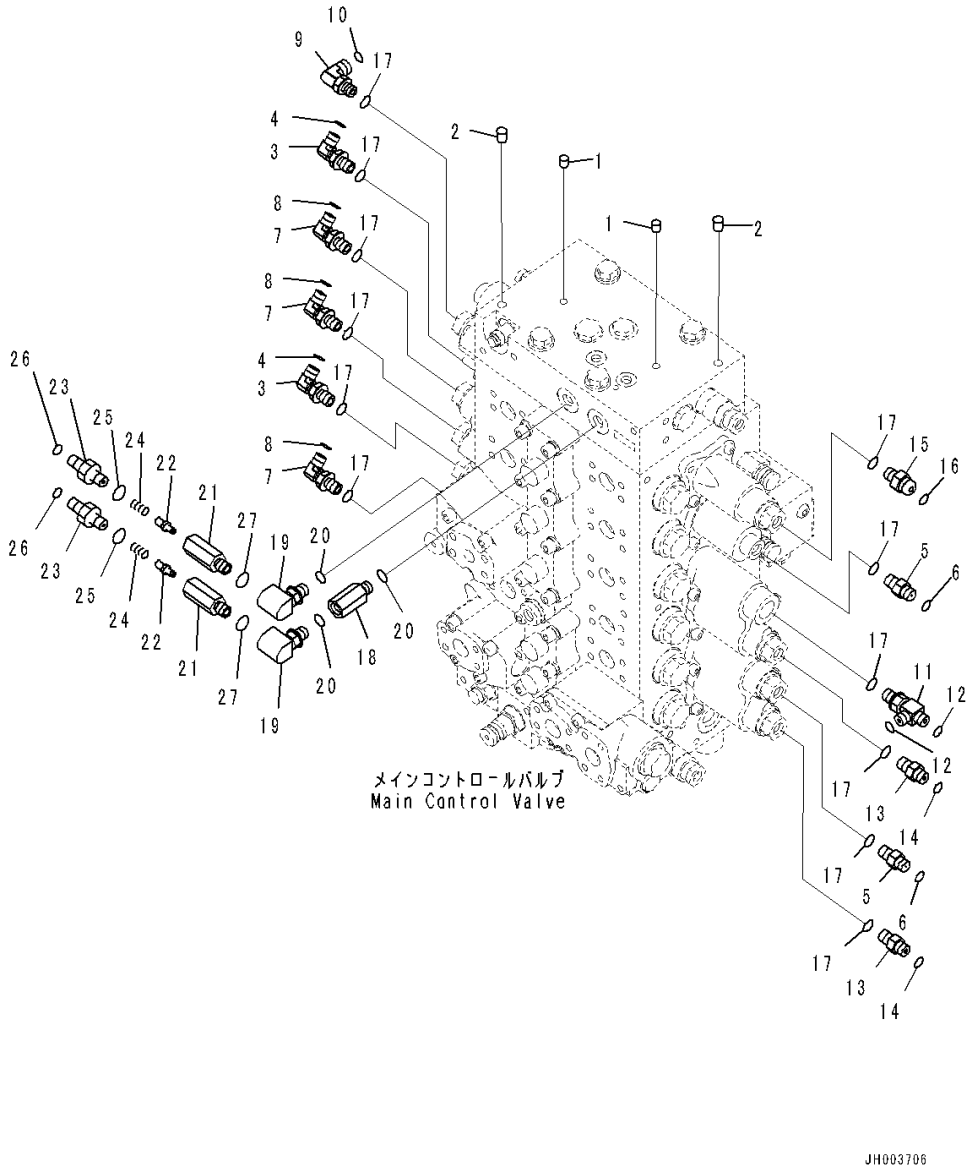


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07049-01012 | Plug | 2 | Y200001- |
| 2 | | 07049-01215 | Plug | 2 | Y200001- |
| 3 | | 20Y-62-45620 | Elbow | 2 | Y200001- |
| 4 | | 02896-11008 | O-ring | 2 | Y200001- |
| 5 | | 20Y-62-45610 | Nipple | 2 | Y200001- |
| 6 | | 02896-11008 | O-ring | 2 | Y200001- |
| 7 | | 11Y-62-12160 | Elbow | 3 | Y200001- |
| 8 | | 02896-11008 | O-ring | 3 | Y200001- |
| 9 | | 02782-10311 | Elbow | 1 | Y200001- |
| 10 | | 02896-11009 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 12 | | 02896-11008 | O-ring | 2 | Y200001- |
| 13 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 14 | | 02896-11008 | O-ring | 2 | Y200001- |
| 15 | | 11Y-62-12520 | Union | 1 | Y200001- |
| 16 | | 02896-11009 | O-ring | 1 | Y200001- |
| 17 | | 07002-11423 | O-ring | 12 | Y200001- |
| 18 | | 20Y-62-22160 | Adapter | 1 | Y200001- |
| 19 | | 20F-61-12460 | Elbow | 2 | Y200001- |
| 20 | | 07002-11423 | O-ring | 3 | Y200001- |
| | | 20Y-62-41602 | Valve Assembly | 2 | Y200001- |
| 21 | C1 | | • Body | 1 | Y200001- |
| 22 | | 20Y-60-22270 | • Poppet | 1 | Y200001- |
| 23 | | 20Y-62-41971 | • Nipple | 1 | Y200001- |
| 24 | | 701-20-61230 | • Spring | 1 | Y200001- |
| 25 | | 07002-11423 | • O-ring | 1 | Y200001- |
| 26 | | 02896-11008 | O-ring | 2 | Y200001- |
| 27 | | 07002-11423 | O-ring | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001019 Main Control Valve, Connecting Parts (2/2)

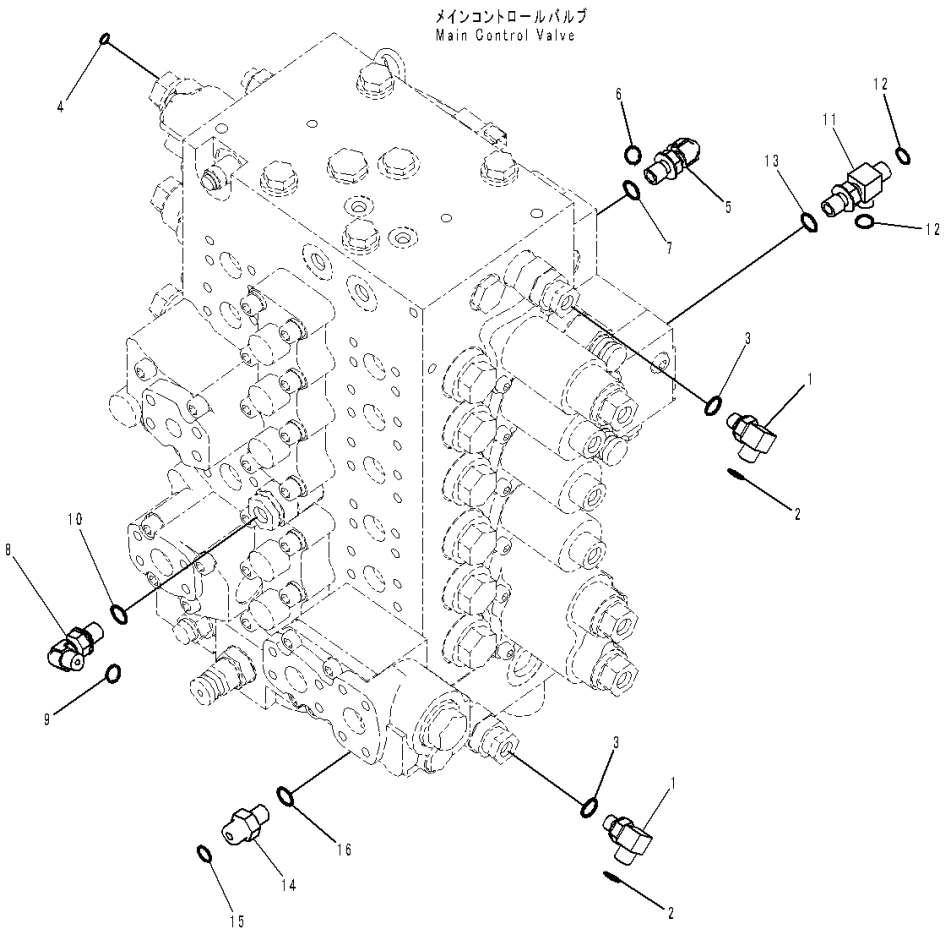


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-41920 | Elbow | 2 | Y200001- |
| 2 | | 02896-11008 | O-ring | 2 | Y200001- |
| 3 | | 07002-11223 | O-ring | 2 | Y200001- |
| 4 | | 02896-11008 | O-ring | 1 | Y200001- |
| 5 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 6 | | 02896-11008 | O-ring | 1 | Y200001- |
| 7 | | 07002-11423 | O-ring | 1 | Y200001- |
| 8 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 9 | | 02896-11008 | O-ring | 1 | Y200001- |
| 10 | | 07002-11423 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 12 | | 02896-11008 | O-ring | 2 | Y200001- |
| 13 | | 07002-11423 | O-ring | 1 | Y200001- |
| 14 | | 11Y-62-12520 | Union | 1 | Y200001- |
| 15 | | 02896-11009 | O-ring | 1 | Y200001- |
| 16 | | 07002-11423 | O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-001020 Main Control Valve, Valve Bracket And Sensor

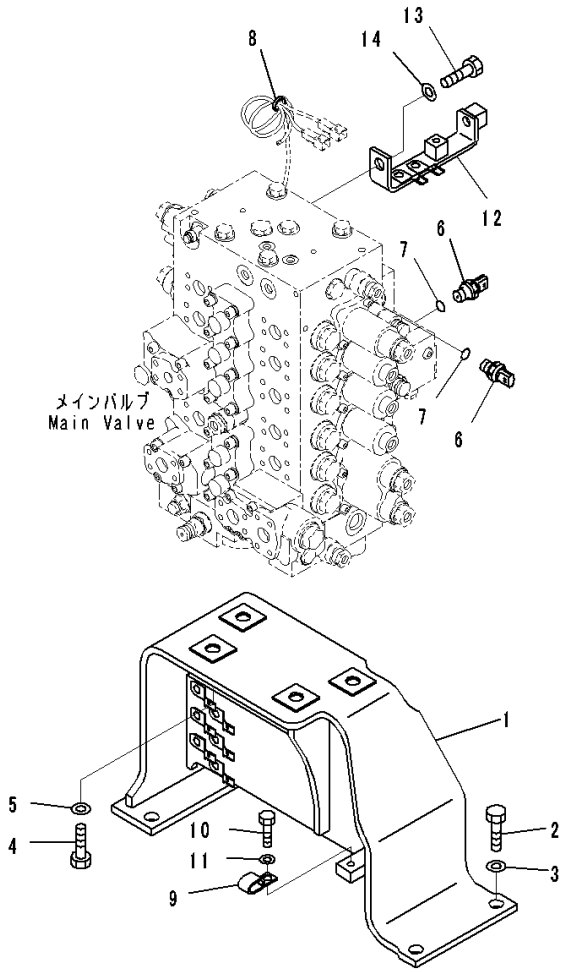


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-51112 | Bracket | 1 | Y200001- |
| 2 | | 01010-81640 | Bolt | 4 | Y200001- |
| 3 | | 01643-31645 | Washer | 4 | Y200001- |
| 4 | | 01010-81645 | Bolt | 4 | Y200001- |
| 5 | | 01643-31645 | Washer | 4 | Y200001- |
| 6 | | 7861-93-1811 | Sensor | 2 | Y200001- |
| 7 | | 07002-11823 | • O-ring | 1 | Y200001- |
| 8 | | 08034-20536 | Band | 1 | Y200001- |
| 9 | | 04435-51512 | Clip | 1 | Y200001- |
| 10 | | 01010-81225 | Bolt | 1 | Y200001- |
| 11 | | 01643-31232 | Washer | 1 | Y200001- |
| 12 | | 20Y-62-51471 | Bracket | 1 | Y200001- |
| 13 | | 01010-81635 | Bolt | 1 | Y200001- |
| 14 | | 01643-31645 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002001 Main Control Valve, Inner Parts (1/21)

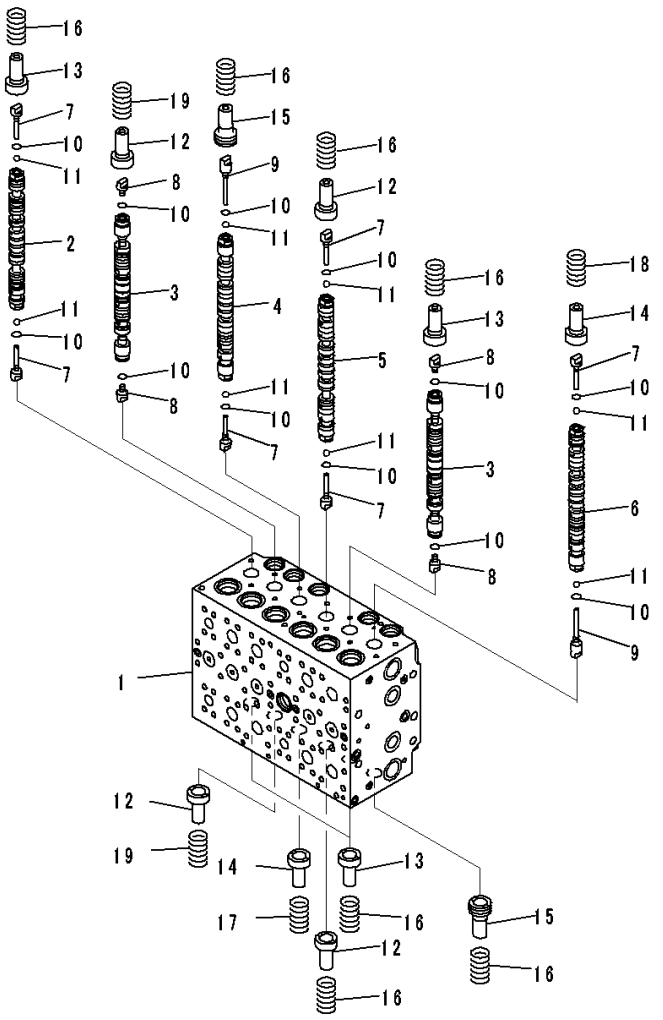


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve | | | |
| | | 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly ..... | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 2-actuator | | |
| | C1 | | • Body Subassembly. ..... | 1 | Y200001- |
| 1 | C1 | | •• Block, Valve ..... | 1 | Y200001- |
| 2 | C1 | | •• Spool..... | 1 | Y200001- |
| 3 | C1 | | •• Spool..... | 2 | Y200001- |
| 4 | C1 | | •• Spool..... | 1 | Y200001- |
| 5 | C1 | | •• Spool..... | 1 | Y200001- |
| 6 | C1 | | •• Spool..... | 1 | Y200001- |
| 7 | | 723-46-15130 | •• Plug..... | 6 | Y200001- |
| 8 | | 723-46-15140 | •• Plug..... | 4 | Y200001- |
| 9 | | 723-46-15650 | •• Plug..... | 2 | Y200001- |
| 10 | | 07002-10823 | •• O-ring..... | 12 | Y200001- |
| 11 | | 708-7T-16460 | •• Ball..... | 8 | Y200001- |
| 12 | | 723-46-15120 | •• Retainer ..... | 4 | Y200001- |
| 13 | | 723-46-15690 | •• Retainer ..... | 4 | Y200001- |
| 14 | | 723-46-15950 | •• Retainer ..... | 2 | Y200001- |
| 15 | | 723-46-15880 | •• Retainer ..... | 2 | Y200001- |
| 16 | | 723-46-14110 | •• Spring ..... | 8 | Y200001- |
| 17 | | 723-46-14280 | •• Spring ..... | 1 | Y200001- |
| 18 | | 723-46-14290 | •• Spring ..... | 1 | Y200001- |
| 19 | | 723-46-14131 | •• Spring ..... | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002002 Main Control Valve, Inner Parts (2/21)

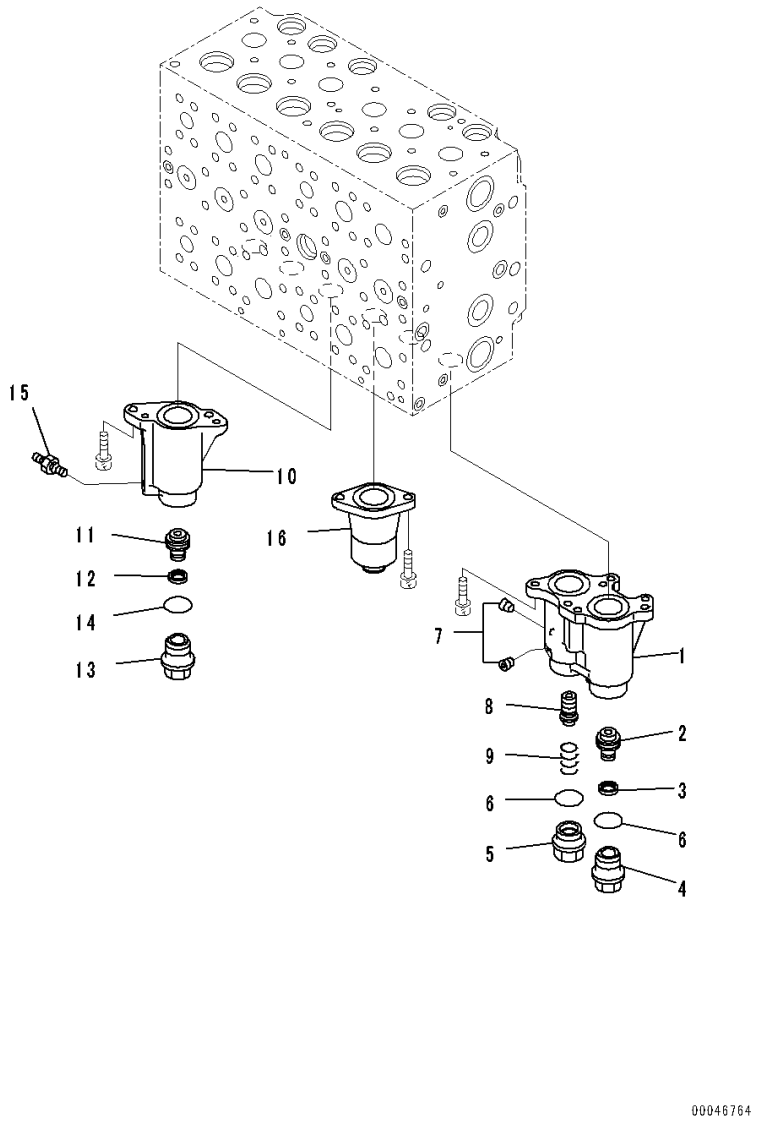


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve | | | |
| | | 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . . . . . | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly . . . . . | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly . . . . . | 1 | Y200001- |
| | | | 2-actuator | | |
| | C1 | | • Body Subassembly. . . . . | 1 | Y200001- |
| | | 723-46-18300 | •• Case Subassembly. . . . . | 1 | Y200001- |
| 1 | C1 | | ••• Case. . . . . | 1 | Y200001- |
| 2 | C1 | | ••• Piston. . . . . | 1 | Y200001- |
| 3 | C1 | | ••• Seal. . . . . | 1 | Y200001- |
| 4 | | 723-46-15630 | ••• Plug. . . . . | 1 | Y200001- |
| 5 | | 723-46-17340 | ••• Plug. . . . . | 1 | Y200001- |
| 6 | | 07000-13024 | ••• O-ring. . . . . | 2 | Y200001- |
| 7 | C1 | | ••• Screw. . . . . | 3 | Y200001- |
| 8 | | 723-46-17320 | ••• Spool. . . . . | 1 | Y200001- |
| 9 | | 723-46-17330 | ••• Spring. . . . . | 1 | Y200001- |
| | | 723-46-19100 | •• Case Subassembly. . . . . | 1 | Y200001- |
| 10 | C1 | | ••• Case. . . . . | 1 | Y200001- |
| 11 | C1 | | ••• Piston. . . . . | 1 | Y200001- |
| 12 | C1 | | ••• Seal. . . . . | 1 | Y200001- |
| 13 | | 723-46-15630 | ••• Plug. . . . . | 1 | Y200001- |
| 14 | | 07000-13024 | ••• O-ring. . . . . | 1 | Y200001- |
| 15 | C1 | | ••• Plug. . . . . | 1 | Y200001- |
| 16 | | 723-46-15111 | •• Case . . . . . | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. H0120-002003 Main Control Valve, Inner Parts (3/21)

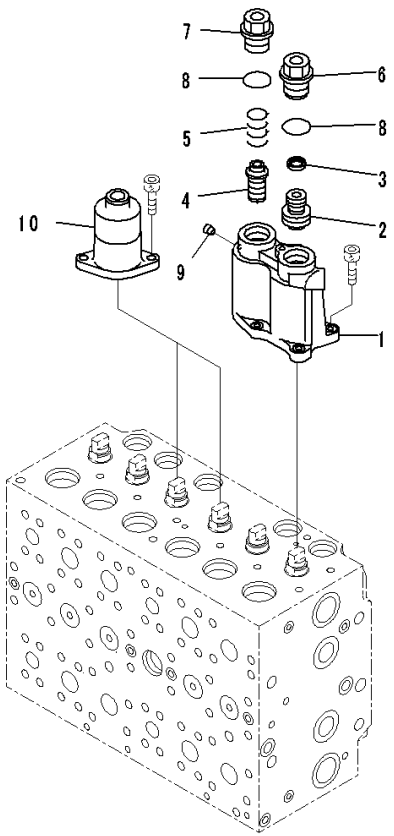



00046765

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. 1-actuator Service Valve 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . . . . . 1-actuator | 1 | Y200001- |
| | | 723-47-23103 | Valve Assembly . . . . . Service Valve | 1 | Y200001- |
| | | 723-48-23102 | Valve Assembly . . . . . 2-actuator | 1 | Y200001- |
| | C1 | | • Body Subassembly. . . . . | 1 | Y200001- |
| | | 723-46-19200 | •• Case Subassembly. . . . . | 1 | Y200001- |
| 1 | C1 | | ••• Case. . . . . | 1 | Y200001- |
| 2 | C1 | | ••• Piston . . . . . | 1 | Y200001- |
| 3 | C1 | | ••• Seal. . . . . | 1 | Y200001- |
| 4 | | 723-46-17320 | ••• Spool. . . . . | 1 | Y200001- |
| 5 | | 723-46-17330 | ••• Spring. . . . . | 1 | Y200001- |
| 6 | | 723-46-15630 | ••• Plug. . . . . | 1 | Y200001- |
| 7 | | 723-46-17340 | ••• Plug. . . . . | 1 | Y200001- |
| 8 | | 07000-13024 | ••• O-ring . . . . . | 2 | Y200001- |
| 9 | C1 | | ••• Screw . . . . . | 3 | Y200001- |
| 10 | | 723-46-15111 | •• Case . . . . . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002004 Main Control Valve, Inner Parts (4/21)

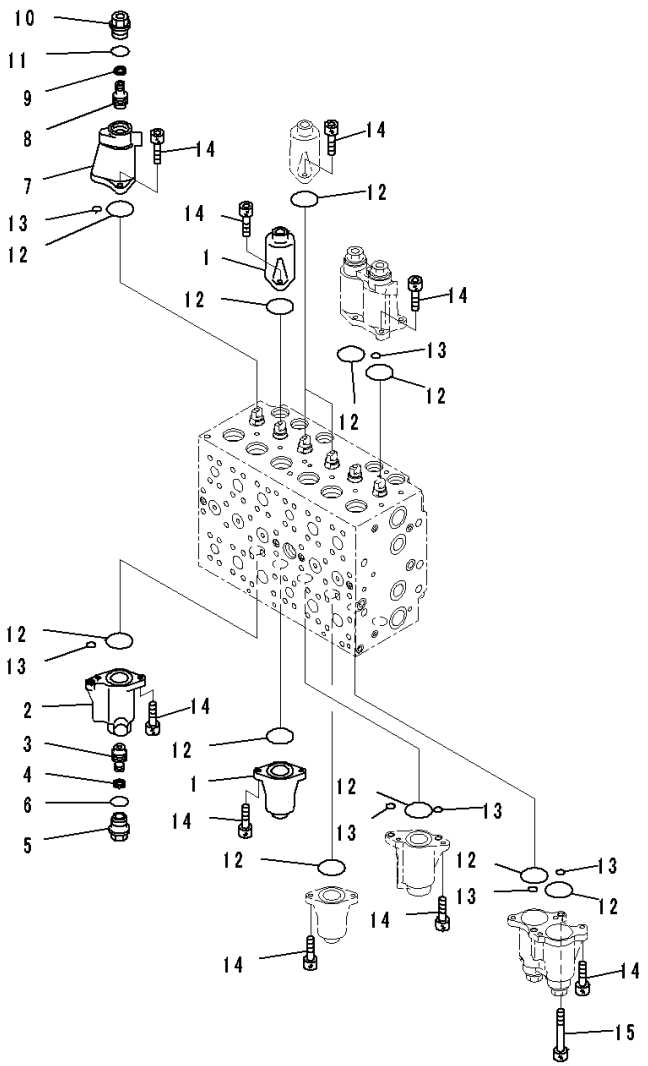


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve | | | |
| | | 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 2-actuator | | |
| | C1 | | • Body Subassembly. ..... | 1 | Y200001- |
| 1 | | 723-46-15111 | •• Case . ..... | 2 | Y200001- |
| | | 723-46-18500 | •• Case Subassembly. ..... | 1 | Y200001- |
| 2 | C1 | | ••• Case. ..... | 1 | Y200001- |
| 3 | C1 | | ••• Piston . ..... | 1 | Y200001- |
| 4 | C1 | | ••• Seal ..... | 1 | Y200001- |
| 5 | | 723-46-15630 | ••• Plug. ..... | 1 | Y200001- |
| 6 | | 07000-13024 | ••• O-ring . ..... | 1 | Y200001- |
| | | 723-46-18600 | •• Case Subassembly ..... | 1 | Y200001- |
| 7 | C1 | | ••• Case ..... | 1 | Y200001- |
| 8 | C1 | | ••• Piston ..... | 1 | Y200001- |
| 9 | C1 | | ••• Seal ..... | 1 | Y200001- |
| 10 | | 723-46-15630 | ••• Plug ..... | 1 | Y200001- |
| 11 | | 07000-13024 | ••• O-ring ..... | 1 | Y200001- |
| 12 | | 07430-71380 | •• O-ring ..... | 12 | Y200001- |
| 13 | | 702-16-53920 | •• O-ring ..... | 8 | Y200001- |
| 14 | | 01252-60820 | •• Bolt ..... | 22 | Y200001- |
| 15 | | 723-46-17350 | •• Bolt ..... | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002005 Main Control Valve, Inner Parts (5/21)

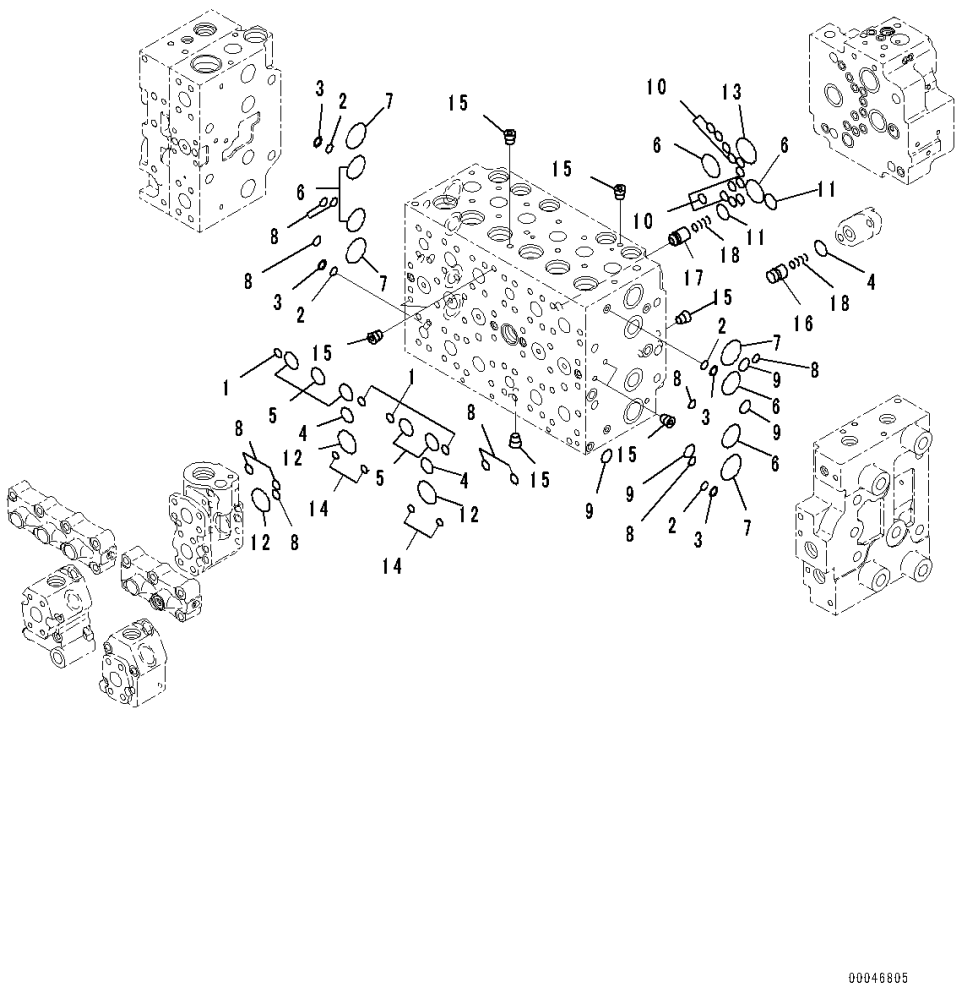


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve | | | |
| | | 723-47-23103 | Valve Assembly | 1 | Y200001- |
| | C1 | | • Body Subassembly | 1 | Y200001- |
| 1 | | 07000-12012 | •• O-ring | 4 | Y200001- |
| 2 | | 723-11-19130 | •• O-ring | 4 | Y200001- |
| 3 | | 723-46-17520 | •• Ring, Back-up | 4 | Y200001- |
| 4 | | 07000-12021 | •• O-ring | 3 | Y200001- |
| 5 | | 07000-13028 | •• O-ring | 5 | Y200001- |
| 6 | | 07000-13032 | •• O-ring | 6 | Y200001- |
| 7 | | 723-46-17510 | •• O-ring | 4 | Y200001- |
| 8 | | 723-46-17530 | •• O-ring | 11 | Y200001- |
| 9 | | 723-11-18150 | •• O-ring | 4 | Y200001- |
| 10 | | 07000-12012 | •• O-ring | 12 | Y200001- |
| 11 | | 07000-12021 | •• O-ring | 2 | Y200001- |
| 12 | | 07000-13032 | •• O-ring | 3 | Y200001- |
| 13 | | 07000-13036 | •• O-ring | 1 | Y200001- |
| 14 | | 702-16-53920 | •• O-ring | 4 | Y200001- |
| 15 | C1 | | •• Plug. | 16 | Y200001- |
| 16 | | 723-46-17650 | •• Valve. | 1 | Y200001- |
| 17 | | 723-46-15150 | •• Valve. | 1 | Y200001- |
| 18 | | 723-46-14150 | •• Spring . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002006 Main Control Valve, Inner Parts (6/21)

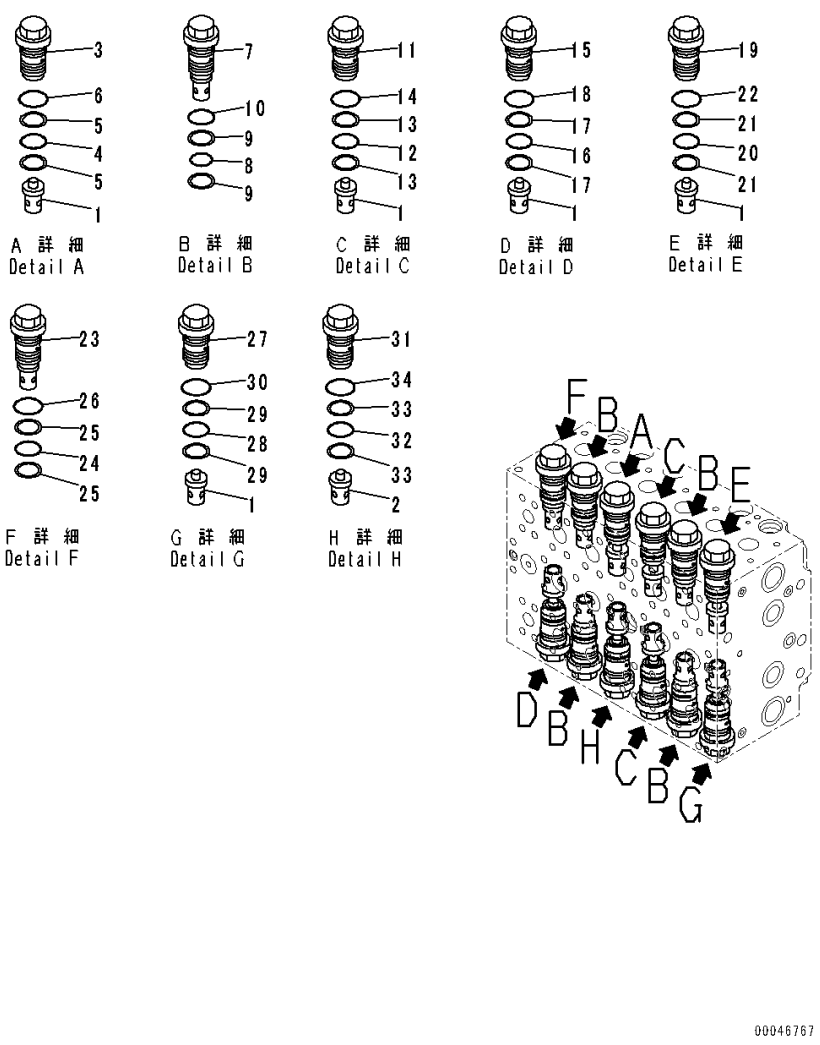


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve | | | |
| | | 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly ..... | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 2-actuator | | |
| | C1 | | • Body Subassembly. ..... | 1 | Y200001- |
| 1 | | 723-46-41210 | •• Valve. ..... | 6 | Y200001- |
| 2 | | 723-46-41190 | •• Valve. ..... | 1 | Y200001- |
| 3 | | 723-46-40100 | •• Valve Assembly . ..... | 1 | Y200001- |
| 4 | | 700-93-11320 | ••• O-ring . ..... | 1 | Y200001- |
| 5 | | 723-46-41950 | ••• Ring. ..... | 2 | Y200001- |
| 6 | | 07002-13634 | ••• O-ring . ..... | 1 | Y200001- |
| 7 | | 723-46-42700 | •• Valve Assembly . ..... | 4 | Y200001- |
| 8 | | 700-93-11320 | ••• O-ring . ..... | 1 | Y200001- |
| 9 | | 723-46-41950 | ••• Ring. ..... | 2 | Y200001- |
| 10 | | 07002-13634 | ••• O-ring . ..... | 1 | Y200001- |
| 11 | | 723-46-41100 | •• Valve Assembly . ..... | 2 | Y200001- |
| 12 | | 700-93-11320 | ••• O-ring . ..... | 1 | Y200001- |
| 13 | | 723-46-41950 | ••• Ring. ..... | 2 | Y200001- |
| 14 | | 07002-13634 | ••• O-ring . ..... | 1 | Y200001- |
| 15 | | 723-46-45100 | •• Valve Assembly . ..... | 1 | Y200001- |
| 16 | | 700-93-11320 | ••• O-ring . ..... | 1 | Y200001- |
| 17 | | 723-46-41950 | ••• Ring. ..... | 2 | Y200001- |
| 18 | | 07002-13634 | ••• O-ring . ..... | 1 | Y200001- |
| 19 | | 723-46-46300 | •• Valve Assembly . ..... | 1 | Y200001- |
| 20 | | 700-93-11320 | ••• O-ring . ..... | 1 | Y200001- |
| 21 | | 723-46-41950 | ••• Ring. ..... | 2 | Y200001- |
| 22 | | 07002-13634 | ••• O-ring . ..... | 1 | Y200001- |
| 23 | | 723-46-43400 | •• Valve Assembly . ..... | 1 | Y200001- |
| 24 | | 700-93-11320 | ••• O-ring . ..... | 1 | Y200001- |
| 25 | | 723-46-41950 | ••• Ring. ..... | 2 | Y200001- |
| 26 | | 07002-13634 | ••• O-ring . ..... | 1 | Y200001- |
| 27 | | 723-46-43100 | •• Valve Assembly . ..... | 1 | Y200001- |
| 28 | | 700-93-11320 | ••• O-ring . ..... | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002006 Main Control Valve, Inner Parts (6/21)

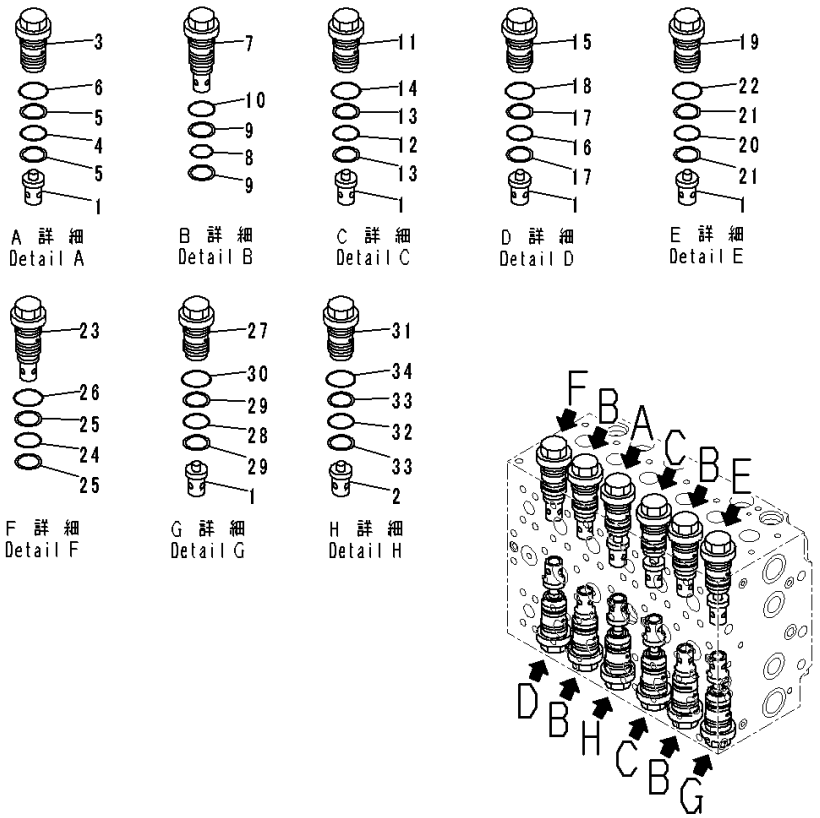


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 29 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 30 | | 07002-13634 | ••• O-ring. | 1 | Y200001- |
| 31 | | 723-46-46101 | •• Valve Assembly. | 1 | Y200001- |
| 32 | | 700-93-11320 | ••• O-ring. | 1 | Y200001- |
| 33 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 34 | | 07002-13634 | ••• O-ring. | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002007 Main Control Valve, Inner Parts (7/21)

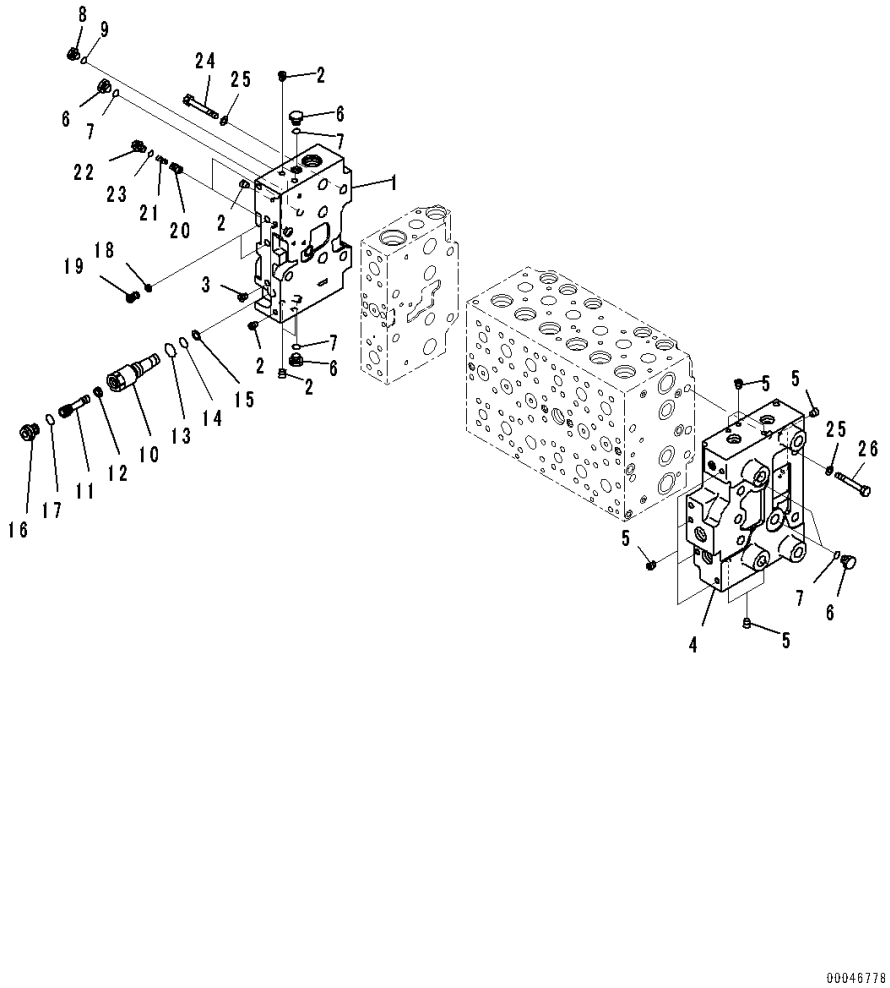


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve | | | |
| | | 723-47-23103 | Valve Assembly | 1 | Y200001- |
| | | 723-46-00750 | • Cover Assembly | 1 | Y200001- |
| 1 | C1 | | •• Cover | 1 | Y200001- |
| 2 | C1 | | •• Plug | 7 | Y200001- |
| 3 | C1 | | •• Plug | 1 | Y200001- |
| | | 723-46-00790 | • Cover Assembly | 1 | Y200001- |
| 4 | C1 | | •• Cover | 1 | Y200001- |
| 5 | C1 | | •• Plug | 12 | Y200001- |
| 6 | | 708-8E-16250 | • Plug | 5 | Y200001- |
| 7 | | 07002-11823 | • O-ring | 5 | Y200001- |
| 8 | | 708-8H-11530 | • Plug | 1 | Y200001- |
| 9 | | 07002-11423 | • O-ring | 1 | Y200001- |
| | | 723-46-17600 | • Plug Assembly | 1 | Y200001- |
| 10 | | 723-46-17610 | •• Sleeve | 1 | Y200001- |
| 11 | | 723-46-17640 | •• Plug | 1 | Y200001- |
| 12 | | 702-21-55760 | •• Filter | 1 | Y200001- |
| 13 | | 07002-11423 | •• O-ring | 1 | Y200001- |
| 14 | | 07000-11007 | •• O-ring | 1 | Y200001- |
| 15 | | 07001-01007 | •• Ring, Back-up | 1 | Y200001- |
| 16 | | 708-8E-16160 | •• Plug | 1 | Y200001- |
| 17 | | 07002-11023 | •• O-ring | 1 | Y200001- |
| 18 | | 723-40-82220 | • Filter | 2 | Y200001- |
| 19 | | 723-46-17550 | • Plug | 2 | Y200001- |
| 20 | | 723-46-15190 | • Valve | 2 | Y200001- |
| 21 | | 723-46-14140 | • Spring | 2 | Y200001- |
| 22 | | 708-8E-16160 | • Plug | 2 | Y200001- |
| 23 | | 07002-11023 | • O-ring | 2 | Y200001- |
| 24 | | 01010-61490 | • Bolt | 4 | Y200001- |
| 25 | | 01643-31445 | • Washer | 8 | Y200001- |
| 26 | | 01011-61455 | • Bolt | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002008 Main Control Valve, Inner Parts (8/21)

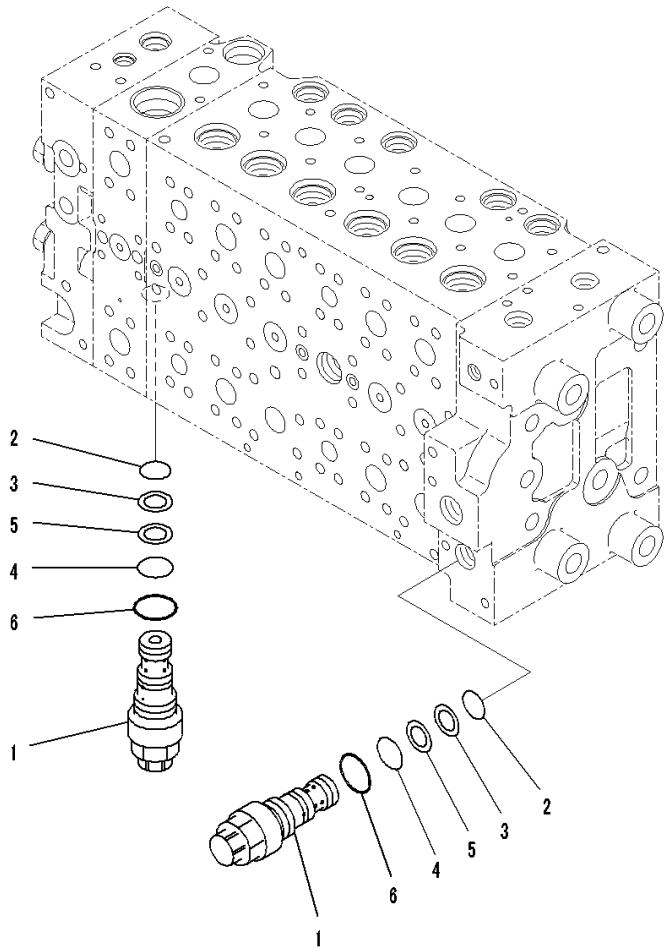


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 723-47-23103 | Valve Assembly | 1 | Y200001- |
| 1 | | 723-40-57200 | • Valve Assembly, Unloader | 2 | Y200001- |
| 2 | | 07000-12014 | •• O-ring | 1 | Y200001- |
| 3 | | 723-40-56350 | •• Ring | 1 | Y200001- |
| 4 | | 07000-12016 | •• O-ring | 1 | Y200001- |
| 5 | | 723-60-22230 | •• Ring, Back-up | 1 | Y200001- |
| 6 | | 07002-12434 | •• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002009 Main Control Valve, Inner Parts (9/21)

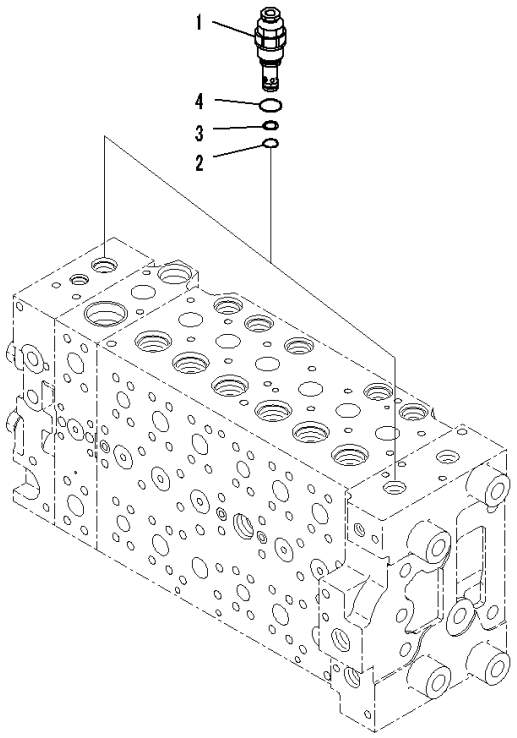


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 723-47-23103 | Valve Assembly | 1 | Y200001- |
| 1 | | 723-40-93600 | • Valve Assembly, Relief | 2 | Y200001- |
| 2 | | 700-22-11410 | •• O-ring | 1 | Y200001- |
| 3 | | 700-80-64220 | •• Ring | 1 | Y200001- |
| 4 | | 07002-12434 | •• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002010 Main Control Valve, Inner Parts (10/21)

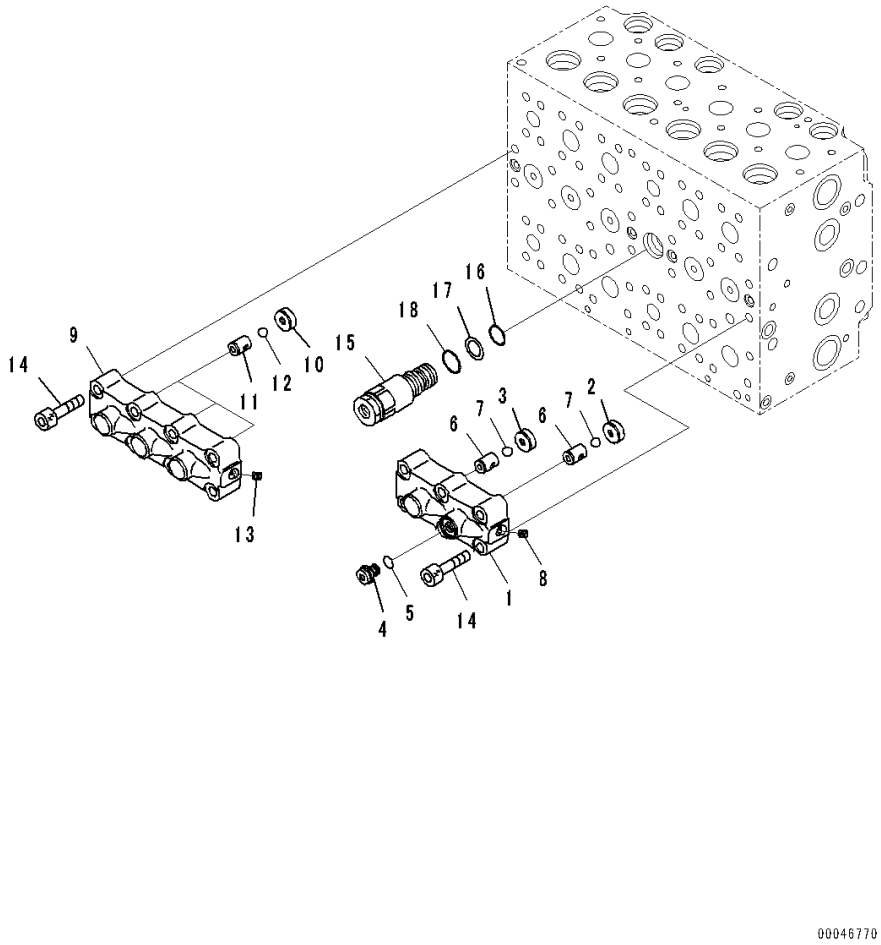


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 2-actuator | | |
| | | 723-40-66701 | • Valve Assembly. ..... | 1 | Y200001- |
| 1 | C1 | | •• Case ..... | 1 | Y200001- |
| 2 | C1 | | •• Seat . ..... | 1 | Y200001- |
| 3 | C1 | | •• Seat . ..... | 1 | Y200001- |
| 4 | | 708-8H-11530 | •• Plug. ..... | 1 | Y200001- |
| 5 | | 07002-11423 | •• O-ring. ..... | 1 | Y200001- |
| 6 | C1 | | •• Seat . ..... | 2 | Y200001- |
| 7 | C1 | | •• Ball. ..... | 2 | Y200001- |
| 8 | C1 | | •• Plug. ..... | 1 | Y200001- |
| | | 723-40-66601 | • Valve Assembly ..... | 1 | Y200001- |
| 9 | C1 | | •• Case ..... | 1 | Y200001- |
| 10 | C1 | | •• Seat ..... | 3 | Y200001- |
| 11 | C1 | | •• Seat ..... | 3 | Y200001- |
| 12 | C1 | | •• Ball ..... | 3 | Y200001- |
| 13 | C1 | | •• Plug. ..... | 1 | Y200001- |
| 14 | | 01252-61045 | • Bolt, Hexagon Socket Head . ..... | 14 | Y200001- |
| 15 | | 723-40-60101 | • Valve Assembly. ..... | 1 | Y200001- |
| 16 | | 07000-12020 | •• O-ring. ..... | 1 | Y200001- |
| 17 | | 07001-02020 | •• Ring, Back-up . ..... | 1 | Y200001- |
| 18 | | 709-25-11390 | •• O-ring. ..... | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002011 Main Control Valve, Inner Parts (11/21)

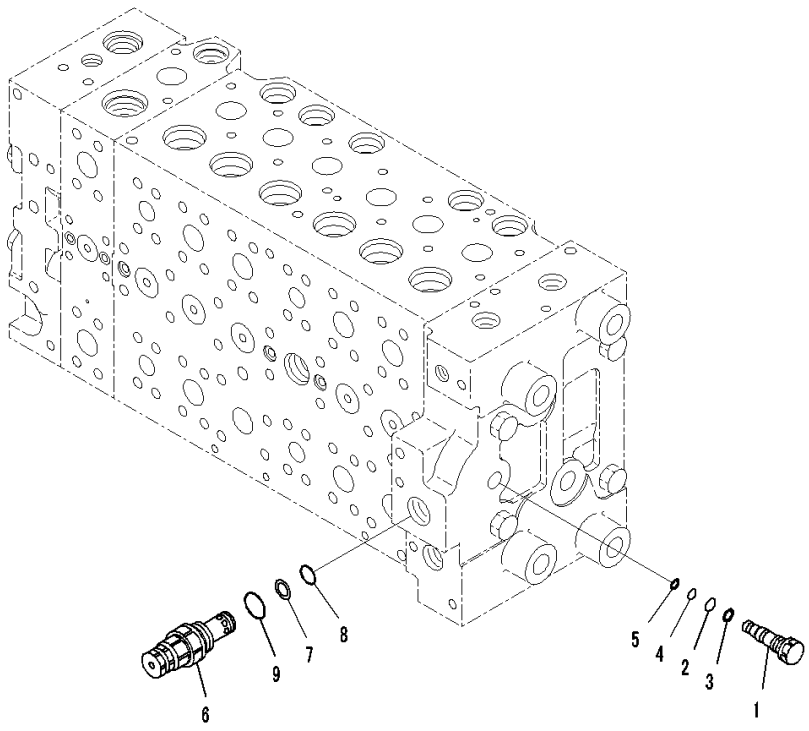


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 723-47-23103 | Valve Assembly | 1 | Y200001- |
| | | 723-46-17701 | • Plug Assembly | 1 | Y200001- |
| 1 | | 723-46-17711 | •• Plug | 1 | Y200001- |
| 2 | | 07000-11009 | •• O-ring | 1 | Y200001- |
| 3 | | 07001-01009 | •• Ring, Back-up | 1 | Y200001- |
| 4 | | 07000-11007 | •• O-ring | 1 | Y200001- |
| 5 | | 07001-01007 | •• Ring, Back-up | 1 | Y200001- |
| 6 | | 723-40-91500 | • Valve Assembly, Relief | 1 | Y200001- |
| 7 | | 700-80-64220 | •• Ring | 1 | Y200001- |
| 8 | | 700-22-11410 | •• O-ring | 1 | Y200001- |
| 9 | | 709-25-11390 | •• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002012 Main Control Valve, Inner Parts (12/21)

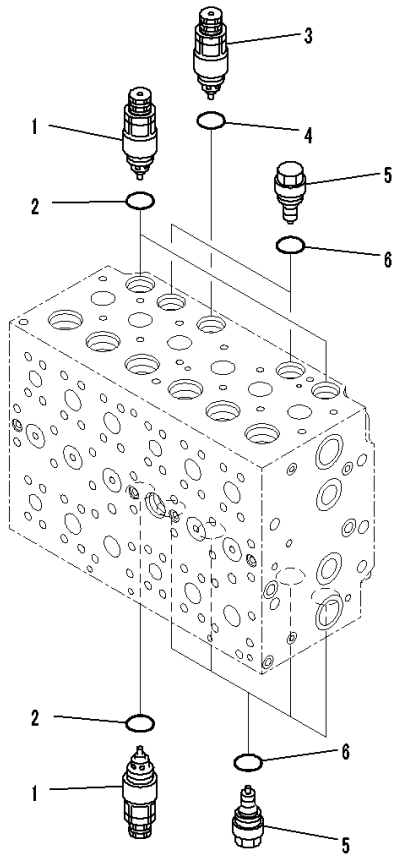


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly ..... | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 2-actuator | | |
| 1 | | 723-40-91200 | • Valve Assembly, Suction and Relief. .... | 3 | Y200001- |
| 2 | | 709-25-11390 | •• O-ring..... | 1 | Y200001- |
| 3 | | 723-90-61600 | • Valve Assembly. ..... | 1 | Y200001- |
| 4 | | 07000-13024 | •• O-ring..... | 1 | Y200001- |
| 5 | | 723-40-85100 | • Valve Assembly, Suction. ..... | 6 | Y200001- |
| 6 | | 709-25-11390 | •• O-ring..... | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002013 Main Control Valve, Inner Parts (13/21)

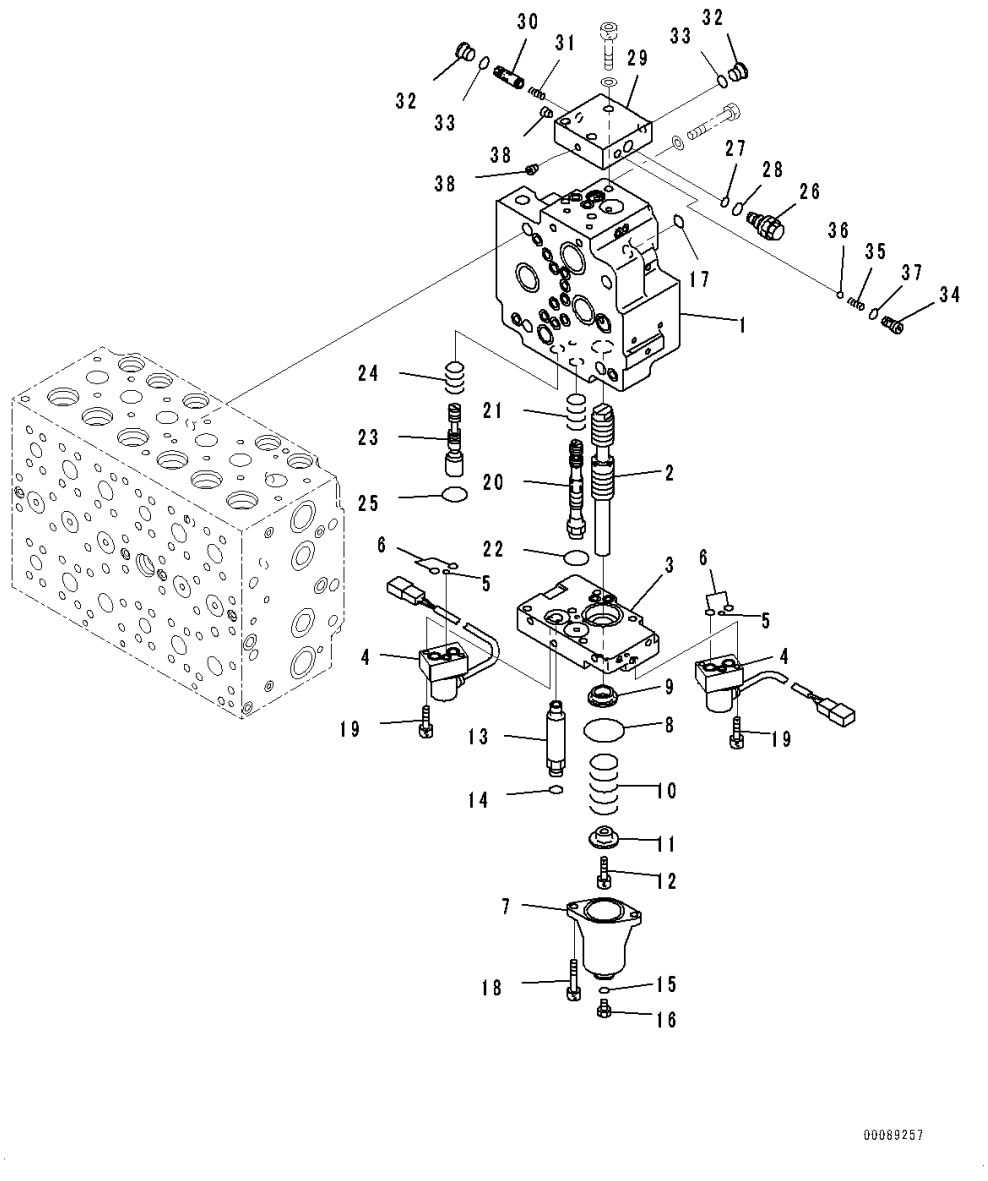


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 2-actuator | | |
| | | 723-40-72100 | • Valve Assembly..... | 1 | Y200001- |
| 1 | C1 | | •• Body. ..... | 1 | Y200001- |
| 2 | C1 | | •• Spool. ..... | 1 | Y200001- |
| 3 | | 723-40-72800 | •• Plate Assembly . ..... | 1 | Y200001- |
| 4 | | 702-21-60500 | •• Valve, Pilot. ..... | 2 | Y200001- |
| 5 | | 723-11-19960 | ••• O-ring . ..... | 1 | Y200001- |
| 6 | | 702-21-54910 | ••• O-ring . ..... | 2 | Y200001- |
| 7 | | 723-46-15111 | •• Case . ..... | 1 | Y200001- |
| 8 | | 07430-71380 | •• O-ring. ..... | 1 | Y200001- |
| 9 | | 723-40-71330 | •• Retainer . ..... | 1 | Y200001- |
| 10 | | 723-40-71340 | •• Spring . ..... | 1 | Y200001- |
| 11 | | 723-40-71350 | •• Retainer . ..... | 1 | Y200001- |
| 12 | | 01252-60816 | •• Bolt. ..... | 1 | Y200001- |
| 13 | | 723-40-71870 | •• Union . ..... | 1 | Y200001- |
| 14 | | 02896-11008 | •• O-ring. ..... | 1 | Y200001- |
| 15 | | 07002-11423 | •• O-ring. ..... | 1 | Y200001- |
| 16 | | 07040-11409 | •• Plug. ..... | 1 | Y200001- |
| 17 | | 07002-11423 | •• O-ring. ..... | 1 | Y200001- |
| 18 | | 01252-60855 | •• Bolt, Hexagon Socket Head. ..... | 2 | Y200001- |
| 19 | | 01252-60635 | •• Bolt. ..... | 4 | Y200001- |
| 20 | C1 | | •• Spool Assembly . ..... | 1 | Y200001- |
| 21 | | 723-40-71850 | •• Spring . ..... | 1 | Y200001- |
| 22 | | 723-46-18720 | •• O-ring. ..... | 1 | Y200001- |
| 23 | C1 | | •• Spool. ..... | 1 | Y200001- |
| 24 | | 723-40-71390 | •• Spring . ..... | 1 | Y200001- |
| 25 | | 723-46-18720 | •• O-ring. ..... | 1 | Y200001- |
| | | 723-40-71900 | •• Valve Assembly . ..... | 1 | Y200001- |
| 26 | C1 | | ••• Valve Assembly, Relief . ..... | 1 | Y200001- |
| 27 | | 702-16-53920 | •••• O-ring . ..... | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002013 Main Control Valve, Inner Parts (13/21)

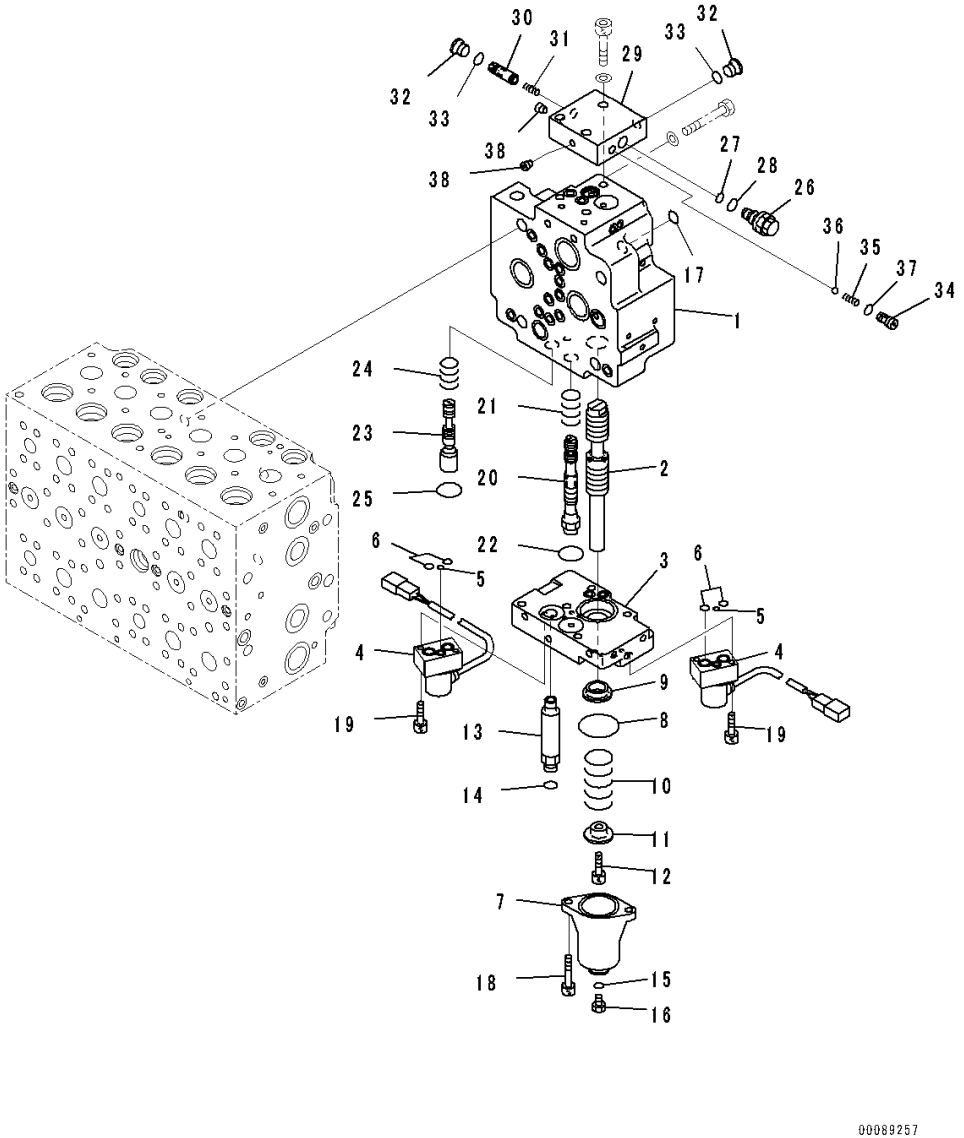


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 28 | | 07002-11623 | •••• O-ring | 1 | Y200001- |
| 29 | C1 | | ••• Block | 1 | Y200001- |
| 30 | C1 | | ••• Spool | 1 | Y200001- |
| 31 | C1 | | ••• Spring | 1 | Y200001- |
| 32 | | 702-21-55620 | ••• Plug | 2 | Y200001- |
| 33 | | 07002-11423 | ••• O-ring | 2 | Y200001- |
| 34 | | 702-21-55710 | ••• Seat | 1 | Y200001- |
| 35 | | 702-21-55720 | ••• Spring | 1 | Y200001- |
| 36 | | 04260-00793 | ••• Ball | 1 | Y200001- |
| 37 | | 07000-11009 | ••• O-ring | 1 | Y200001- |
| 38 | C1 | | ••• Plug | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002014 Main Control Valve, Inner Parts (14/21)

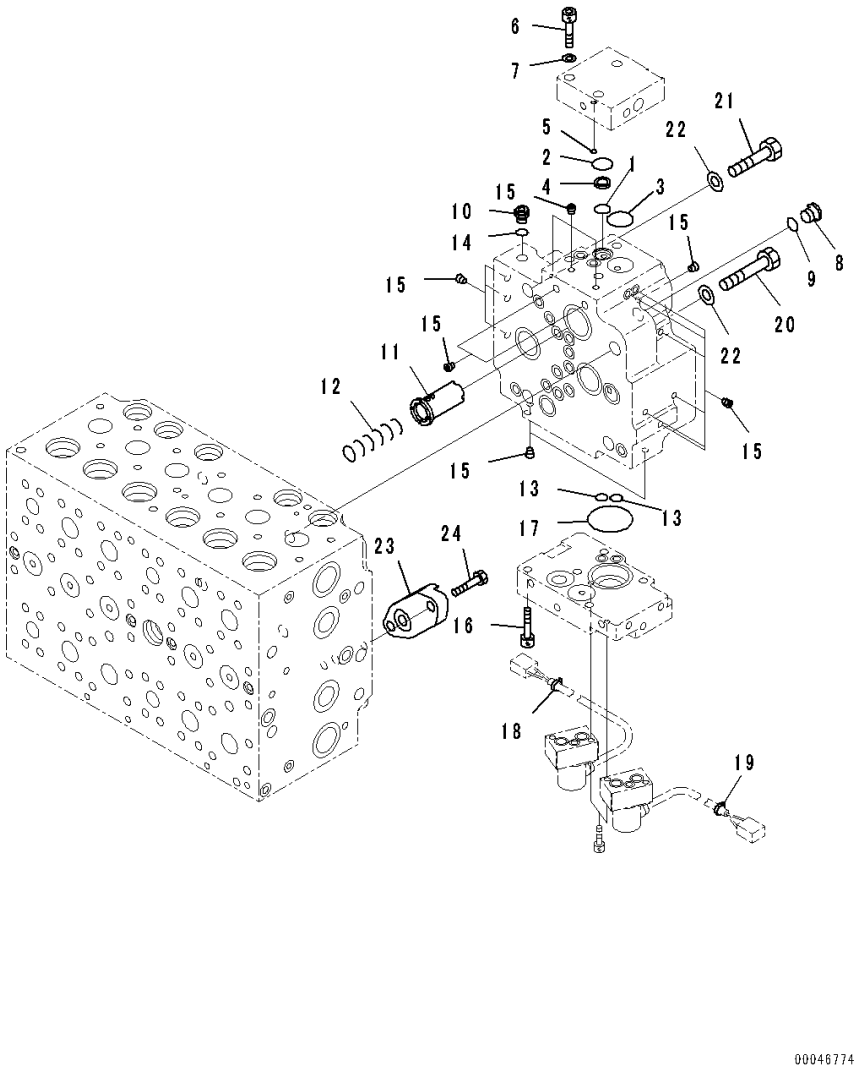


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly . | 1 | Y200001- |
| | | | 2-actuator | | |
| | | 723-40-72100 | • Valve Assembly | 1 | Y200001- |
| 1 | | 702-21-55420 | •• O-ring. | 1 | Y200001- |
| 2 | | 702-21-55520 | •• O-ring. | 1 | Y200001- |
| 3 | | 702-21-55440 | •• O-ring. | 1 | Y200001- |
| 4 | | 702-21-53120 | •• Filter. | 1 | Y200001- |
| 5 | | 07000-12011 | •• O-ring. | 2 | Y200001- |
| 6 | | 01252-61040 | •• Bolt. | 3 | Y200001- |
| 7 | | 01643-51032 | •• Washer . | 3 | Y200001- |
| 8 | | 702-21-55620 | •• Plug. | 1 | Y200001- |
| 9 | | 07002-11423 | •• O-ring. | 1 | Y200001- |
| 10 | | 708-8E-16160 | •• Plug. | 1 | Y200001- |
| 11 | | 723-40-71430 | •• Valve. | 1 | Y200001- |
| 12 | | 702-21-55460 | •• Spring . | 1 | Y200001- |
| 13 | | 07000-11010 | •• O-ring. | 2 | Y200001- |
| 14 | | 07002-11023 | •• O-ring. | 1 | Y200001- |
| 15 | C1 | | •• Plug. | 17 | Y200001- |
| 16 | | 01252-60845 | •• Bolt. | 3 | Y200001- |
| 17 | | 07000-12035 | •• O-ring | 1 | Y200001- |
| 18 | | 20Y-62-22790 | •• Band, Red | 1 | Y200001- |
| 19 | | 20Y-62-22830 | •• Band, White | 1 | Y200001- |
| 20 | | 01010-61470 | • Bolt | 3 | Y200001- |
| 21 | | 01010-61460 | • Bolt | 1 | Y200001- |
| 22 | | 01643-31445 | • Washer | 4 | Y200001- |
| 23 | | 723-46-17680 | • Plate | 1 | Y200001- |
| 24 | | 01010-81030 | • Bolt | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002015 Main Control Valve, Inner Parts (15/21)

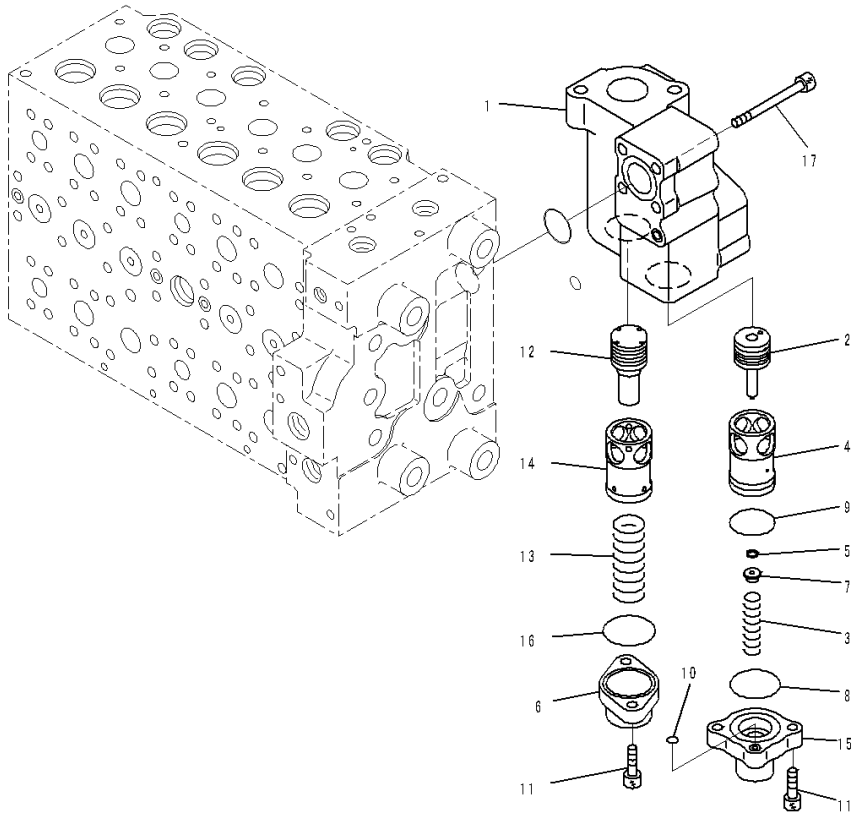


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly ..... | 1 | Y200001- |
| | | | 2-actuator | | |
| | | 723-40-87601 | • Valve Assembly..... | 1 | Y200001- |
| 1 | | 723-40-87510 | •• Body. ..... | 1 | Y200001- |
| 2 | | 723-40-87240 | •• Spool. ..... | 1 | Y200001- |
| 3 | | 723-40-87260 | •• Spring . ..... | 1 | Y200001- |
| 4 | C1 | | •• Sleeve. ..... | 1 | Y200001- |
| 5 | C1 | | •• Seal. ..... | 1 | Y200001- |
| 6 | C1 | | •• Case . ..... | 1 | Y200001- |
| 7 | | 723-40-87250 | •• Retainer . ..... | 1 | Y200001- |
| 8 | | 723-40-87170 | •• O-ring. ..... | 1 | Y200001- |
| 9 | | 07000-13035 | •• O-ring. ..... | 1 | Y200001- |
| 10 | | 07000-11007 | •• O-ring. ..... | 1 | Y200001- |
| 11 | | 01252-60825 | •• Bolt. ..... | 4 | Y200001- |
| 12 | | 723-40-87520 | •• Piston. ..... | 1 | Y200001- |
| 13 | | 723-40-87540 | •• Spring . ..... | 1 | Y200001- |
| 14 | C1 | | •• Sleeve. ..... | 1 | Y200001- |
| 15 | C1 | | •• Case ..... | 1 | Y200001- |
| 16 | | 723-40-87170 | •• O-ring..... | 1 | Y200001- |
| 17 | | 01252-61080 | • Bolt, Hexagon Socket Head ..... | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002016 Main Control Valve, Inner Parts (16/21)

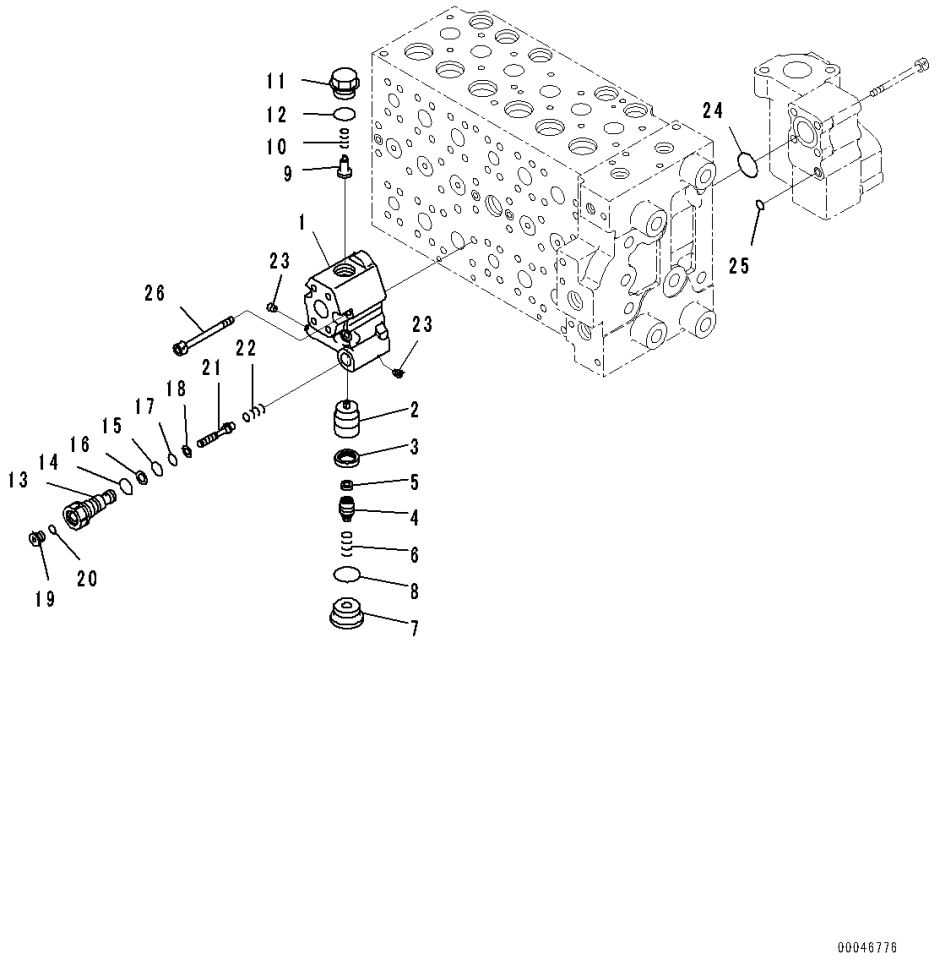


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly . ..... | 1 | Y200001- |
| | | | 2-actuator | | |
| | | 723-40-82501 | • Valve Assembly. ..... | 1 | Y200001- |
| 1 | C1 | | •• Body. ..... | 1 | Y200001- |
| 2 | C1 | | •• Valve. ..... | 1 | Y200001- |
| 3 | C1 | | •• Seal. ..... | 1 | Y200001- |
| 4 | | 723-40-82210 | •• Plug. ..... | 1 | Y200001- |
| 5 | | 723-40-82220 | •• Filter. ..... | 1 | Y200001- |
| 6 | | 723-40-82140 | •• Spring . ..... | 1 | Y200001- |
| 7 | | 723-40-82150 | •• Plug. ..... | 1 | Y200001- |
| 8 | | 07002-13334 | •• O-ring. ..... | 1 | Y200001- |
| 9 | | 723-40-84420 | •• Valve, Check. ..... | 1 | Y200001- |
| 10 | | 723-40-84430 | •• Spring . ..... | 1 | Y200001- |
| 11 | | 723-40-84440 | •• Plug. ..... | 1 | Y200001- |
| 12 | | 07000-13024 | •• O-ring. ..... | 1 | Y200001- |
| 13 | C1 | | •• Plug. ..... | 1 | Y200001- |
| 14 | | 07002-11823 | •• O-ring. ..... | 1 | Y200001- |
| 15 | | 07000-12011 | •• O-ring. ..... | 1 | Y200001- |
| 16 | | 07001-02011 | •• Ring, Back-up . ..... | 1 | Y200001- |
| 17 | | 07000-11010 | •• O-ring. ..... | 1 | Y200001- |
| 18 | | 07001-01010 | •• Ring, Back-up . ..... | 1 | Y200001- |
| 19 | | 723-11-18190 | •• Plug. ..... | 1 | Y200001- |
| 20 | | 07002-11023 | •• O-ring. ..... | 1 | Y200001- |
| 21 | C1 | | •• Piston. ..... | 1 | Y200001- |
| 22 | | 723-40-82290 | •• Spring . ..... | 1 | Y200001- |
| 23 | C1 | | •• Plug. ..... | 2 | Y200001- |
| 24 | | 07000-13038 | • O-ring . ..... | 1 | Y200001- |
| 25 | | 07000-11010 | • O-ring . ..... | 1 | Y200001- |
| 26 | | 01252-61075 | • Bolt, Hexagon Socket Head . ..... | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002017 Main Control Valve, Inner Parts (17/21)

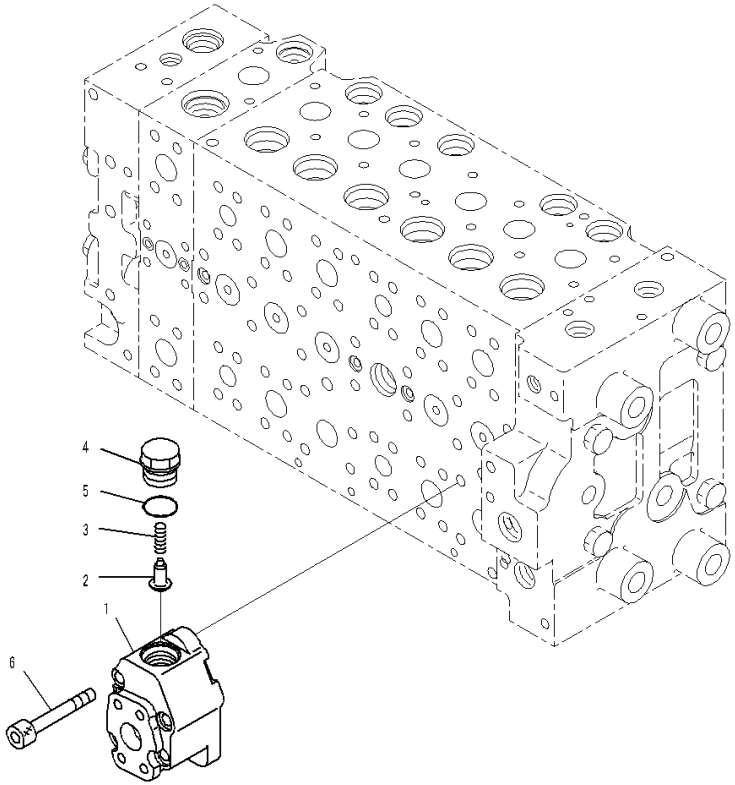


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 723-47-23103 | Valve Assembly . | 1 | Y200001- |
| | | 723-40-84601 | • Valve Assembly. | 1 | Y200001- |
| 1 | | 723-40-84410 | •• Block. | 1 | Y200001- |
| 2 | | 723-40-84420 | •• Valve, Check. | 1 | Y200001- |
| 3 | | 723-40-84430 | •• Spring . | 1 | Y200001- |
| 4 | | 723-40-84440 | •• Plug. | 1 | Y200001- |
| 5 | | 07000-13024 | •• O-ring. | 1 | Y200001- |
| 6 | | 01252-61070 | • Bolt, Hexagon Socket Head . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002018 Main Control Valve, Inner Parts (18/21)

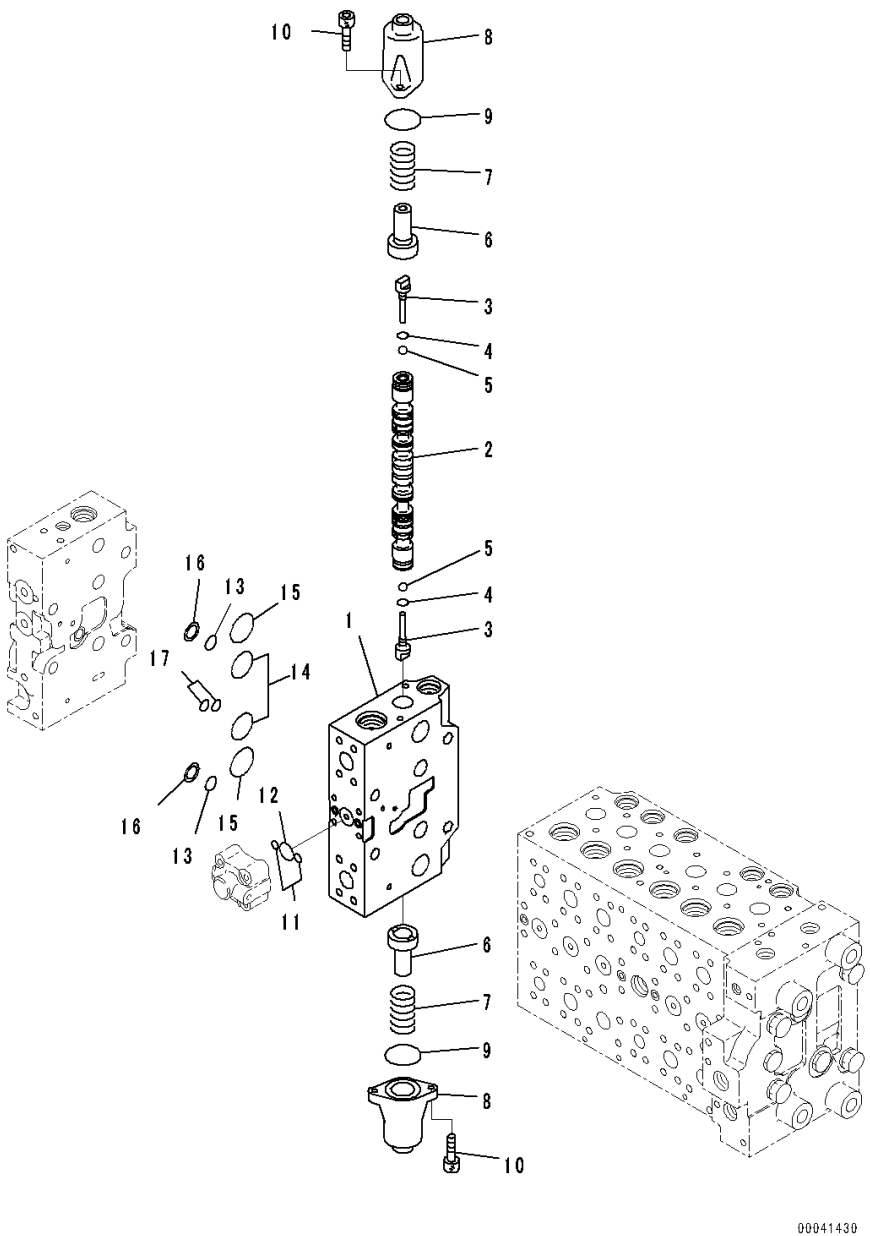


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 723-47-23103 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| 1 | C1 | | •• Block. | 1 | Y200001- |
| 2 | C1 | | •• Spool. | 1 | Y200001- |
| 3 | | 723-46-15130 | •• Plug. | 2 | Y200001- |
| 4 | | 07002-10823 | •• O-ring. | 2 | Y200001- |
| 5 | | 708-7T-16460 | •• Ball. | 2 | Y200001- |
| 6 | | 723-46-15120 | •• Retainer . | 2 | Y200001- |
| 7 | | 723-46-14110 | •• Spring . | 2 | Y200001- |
| 8 | | 723-46-15111 | •• Case . | 2 | Y200001- |
| 9 | | 07430-71380 | •• O-ring. | 2 | Y200001- |
| 10 | | 01252-60820 | •• Bolt. | 4 | Y200001- |
| 11 | | 07000-11009 | •• O-ring. | 2 | Y200001- |
| 12 | | 07000-12021 | •• O-ring. | 1 | Y200001- |
| 13 | | 723-11-19130 | •• O-ring. | 2 | Y200001- |
| 14 | | 07000-13032 | •• O-ring. | 2 | Y200001- |
| 15 | | 723-46-17510 | •• O-ring. | 2 | Y200001- |
| 16 | | 723-46-17520 | •• Ring, Back-up . | 2 | Y200001- |
| 17 | | 723-46-17530 | •• O-ring. | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002019 Main Control Valve, Inner Parts (19/21)

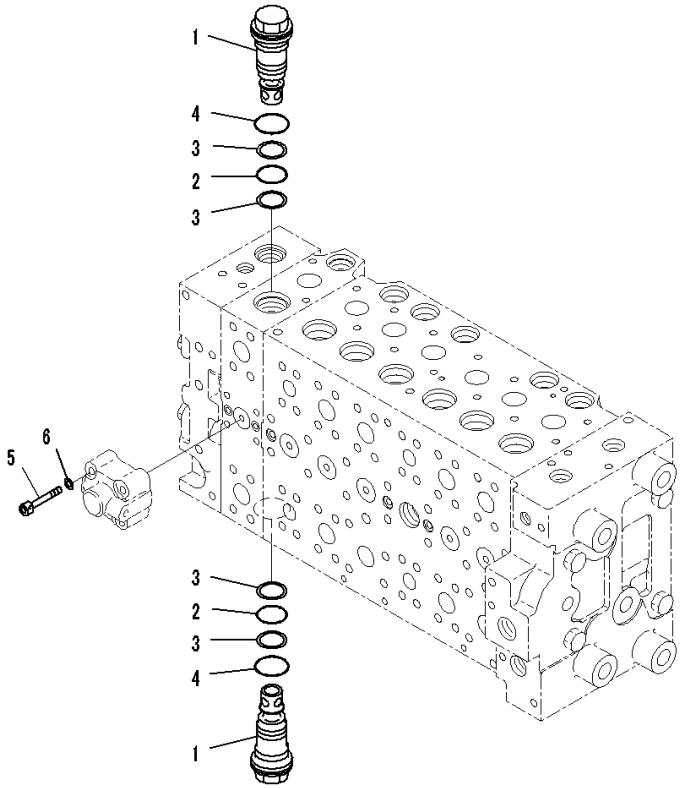


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 723-47-23103 | Valve Assembly . ..... | 1 | Y200001- |
| | C1 | | • Body Subassembly. ..... | 1 | Y200001- |
| 1 | | 723-46-45700 | •• Valve Assembly . ..... | 2 | Y200001- |
| 2 | | 700-93-11320 | ••• O-ring . ..... | 1 | Y200001- |
| 3 | | 723-46-41950 | ••• Ring. ..... | 2 | Y200001- |
| 4 | | 07002-13634 | ••• O-ring . ..... | 1 | Y200001- |
| 5 | | 01252-60845 | •• Bolt. ..... | 4 | Y200001- |
| 6 | | 01643-50823 | •• Washer ..... | 4 | Y200001- |

https://truckmanualshub.com/

# FIG. H0120-002020 Main Control Valve, Inner Parts (20/21)

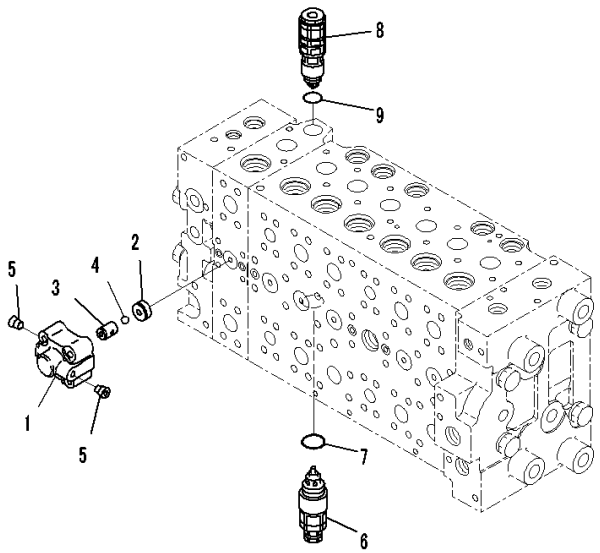



00041432

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 723-47-23103 | Valve Assembly | 1 | Y200001- |
| | | 723-40-66300 | • Valve Assembly | 1 | Y200001- |
| 1 | C1 | | •• Case | 1 | Y200001- |
| 2 | C1 | | •• Seat | 1 | Y200001- |
| 3 | C1 | | •• Seat | 1 | Y200001- |
| 4 | C1 | | •• Ball | 1 | Y200001- |
| 5 | C1 | | •• Plug | 2 | Y200001- |
| 6 | | 723-40-91300 | • Valve Assembly, Suction and Relief | 1 | Y200001- |
| 7 | | 709-25-11390 | •• O-ring | 1 | Y200001- |
| 8 | | 723-90-76101 | • Valve Assembly, Suction and Relief | 1 | Y200001- |
| 9 | | 07000-13024 | •• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002021 Main Control Valve, Inner Parts (21/21)

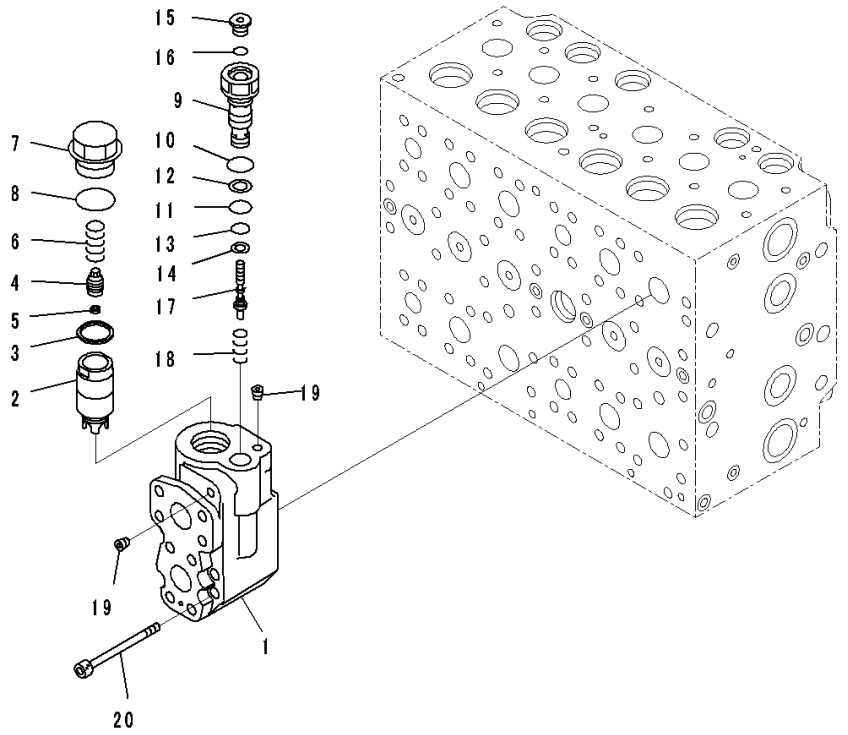


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | Service Valve 2-actuator | | | |
| | | 723-47-23103 | Valve Assembly | 1 | Y200001- |
| | | | 1-actuator | | |
| | | 723-47-23103 | Valve Assembly | 1 | Y200001- |
| | | | Service Valve | | |
| | | 723-48-23102 | Valve Assembly | 1 | Y200001- |
| | | | 2-actuator | | |
| | | 723-40-84501 | • Valve Assembly | 1 | Y200001- |
| 1 | C1 | | •• Body | 1 | Y200001- |
| 2 | C1 | | •• Valve | 1 | Y200001- |
| 3 | C1 | | •• Seal | 1 | Y200001- |
| 4 | | 723-40-84330 | •• Plug | 1 | Y200001- |
| 5 | | 723-40-82220 | •• Filter | 1 | Y200001- |
| 6 | | 723-40-84340 | •• Spring | 1 | Y200001- |
| 7 | | 723-40-84350 | •• Plug | 1 | Y200001- |
| 8 | | 07002-13334 | •• O-ring | 1 | Y200001- |
| 9 | C1 | | •• Plug | 1 | Y200001- |
| 10 | | 07002-11823 | •• O-ring | 1 | Y200001- |
| 11 | | 07000-12011 | •• O-ring | 1 | Y200001- |
| 12 | | 07001-02011 | •• Ring, Back-up | 1 | Y200001- |
| 13 | | 07000-11010 | •• O-ring | 1 | Y200001- |
| 14 | | 07001-01010 | •• Ring, Back-up | 1 | Y200001- |
| 15 | | 723-11-18190 | •• Plug | 1 | Y200001- |
| 16 | | 07002-11023 | •• O-ring | 1 | Y200001- |
| 17 | C1 | | •• Piston | 1 | Y200001- |
| 18 | | 723-40-84382 | •• Spring | 1 | Y200001- |
| 19 | C1 | | •• Plug | 2 | Y200001- |
| 20 | | 01252-61080 | • Bolt, Hexagon Socket Head | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002022 Main Control Valve, 1-actuator, Connecting Parts (1/2)

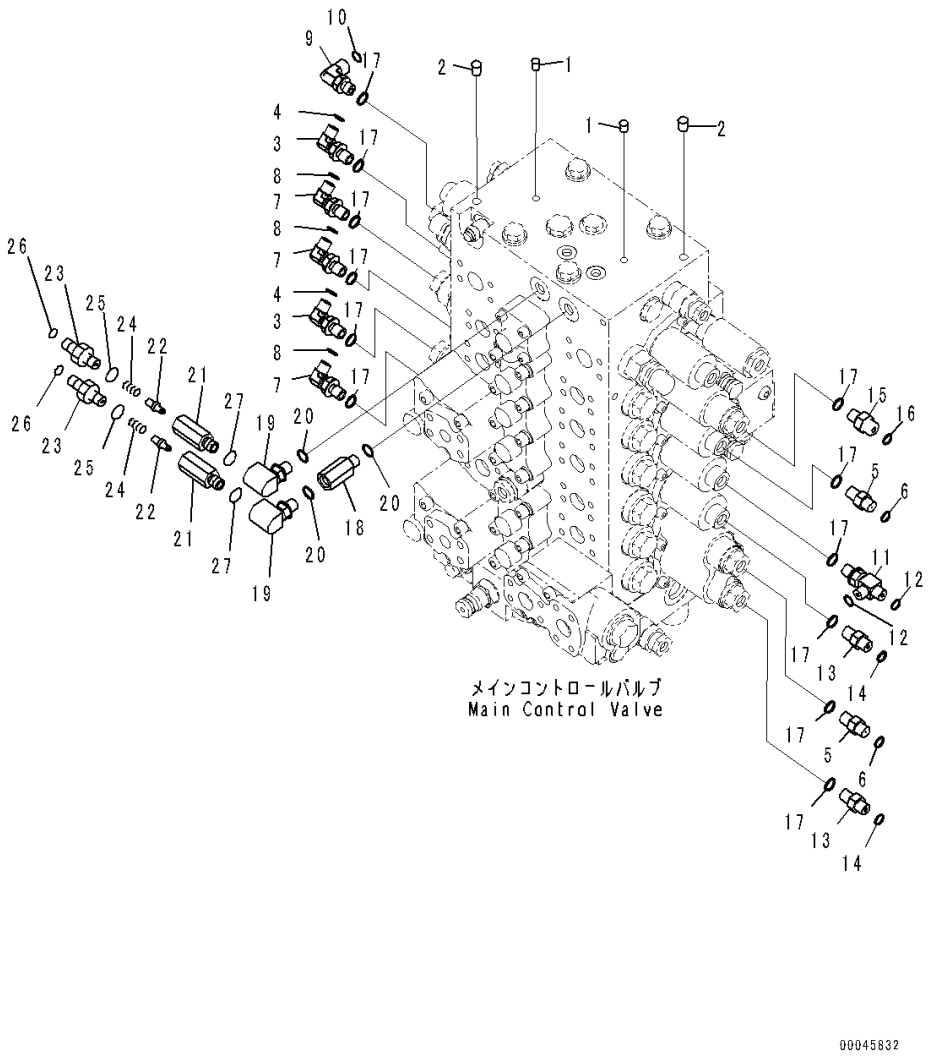


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07049-01012 | Plug | 2 | Y200001- |
| 2 | | 07049-01215 | Plug | 2 | Y200001- |
| 3 | | 20Y-62-45620 | Elbow | 2 | Y200001- |
| 4 | | 02896-11008 | O-ring | 2 | Y200001- |
| 5 | | 20Y-62-45610 | Nipple | 2 | Y200001- |
| 6 | | 02896-11008 | O-ring | 2 | Y200001- |
| 7 | | 11Y-62-12160 | Elbow | 3 | Y200001- |
| 8 | | 02896-11008 | O-ring | 3 | Y200001- |
| 9 | | 02782-10311 | Elbow | 1 | Y200001- |
| 10 | | 02896-11009 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 12 | | 02896-11008 | O-ring | 2 | Y200001- |
| 13 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 14 | | 02896-11008 | O-ring | 2 | Y200001- |
| 15 | | 11Y-62-12520 | Union | 1 | Y200001- |
| 16 | | 02896-11009 | O-ring | 1 | Y200001- |
| 17 | | 07002-11423 | O-ring | 12 | Y200001- |
| 18 | | 20Y-62-22160 | Adapter | 1 | Y200001- |
| 19 | | 20F-61-12460 | Elbow | 2 | Y200001- |
| 20 | | 07002-11423 | O-ring | 3 | Y200001- |
| | | 20Y-62-41602 | Valve Assembly | 2 | Y200001- |
| 21 | C1 | | • Body | 1 | Y200001- |
| 22 | | 20Y-60-22270 | • Poppet | 1 | Y200001- |
| 23 | | 20Y-62-41971 | • Nipple | 1 | Y200001- |
| 24 | | 701-20-61230 | • Spring | 1 | Y200001- |
| 25 | | 07002-11423 | • O-ring | 1 | Y200001- |
| 26 | | 02896-11008 | O-ring | 2 | Y200001- |
| 27 | | 07002-11423 | O-ring | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002023 Main Control Valve, 1-actuator, Connecting Parts (2/2)

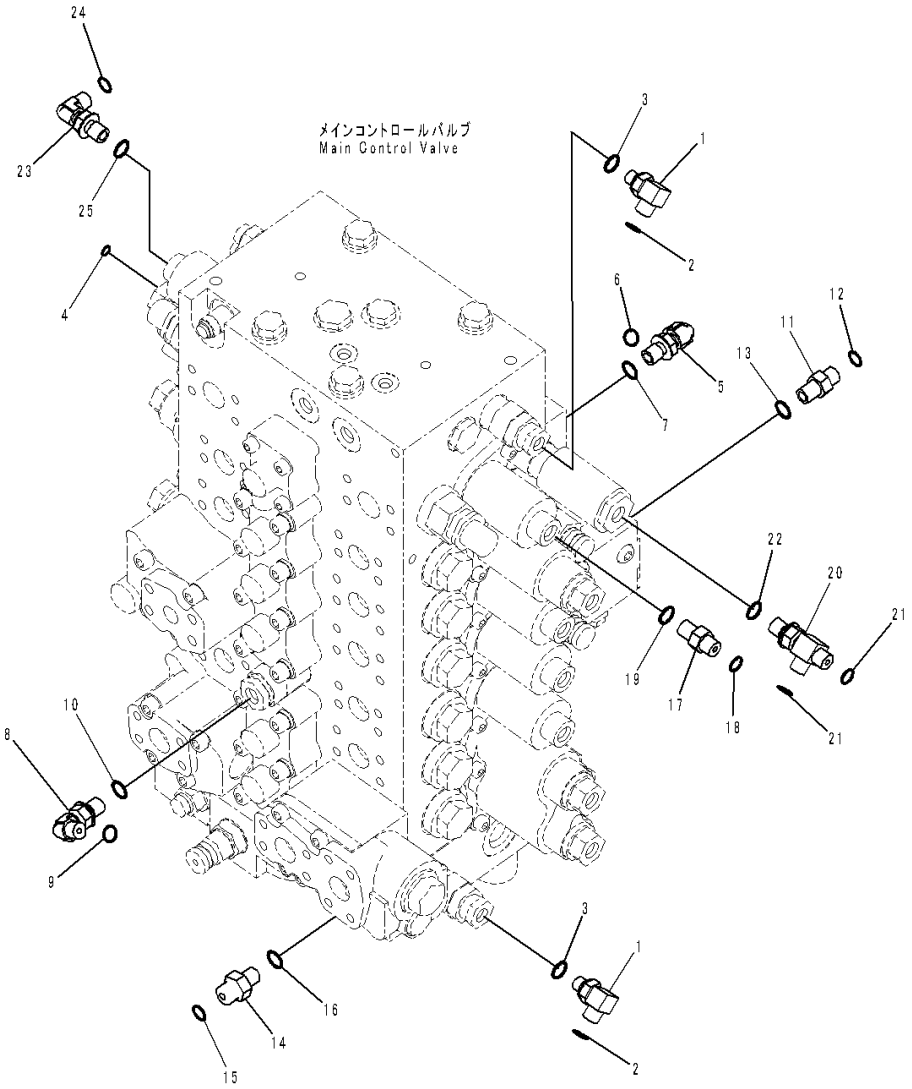


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-41920 | Elbow | 2 | Y200001- |
| 2 | | 02896-11008 | O-ring | 2 | Y200001- |
| 3 | | 07002-11223 | O-ring | 2 | Y200001- |
| 4 | | 02896-11008 | O-ring | 1 | Y200001- |
| 5 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 6 | | 02896-11008 | O-ring | 1 | Y200001- |
| 7 | | 07002-11423 | O-ring | 1 | Y200001- |
| 8 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 9 | | 02896-11008 | O-ring | 1 | Y200001- |
| 10 | | 07002-11423 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12130 | Nipple | 1 | Y200001- |
| 12 | | 02896-11008 | O-ring | 1 | Y200001- |
| 13 | | 07002-11423 | O-ring | 1 | Y200001- |
| 14 | | 11Y-62-12520 | Union | 1 | Y200001- |
| 15 | | 02896-11009 | O-ring | 1 | Y200001- |
| 16 | | 07002-11423 | O-ring | 1 | Y200001- |
| 17 | | 11Y-62-12130 | Nipple | 1 | Y200001- |
| 18 | | 02896-11008 | O-ring | 1 | Y200001- |
| 19 | | 07002-11423 | O-ring | 1 | Y200001- |
| 20 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 21 | | 02896-11008 | O-ring | 2 | Y200001- |
| 22 | | 07002-11423 | O-ring | 1 | Y200001- |
| 23 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 24 | | 02896-11008 | O-ring | 1 | Y200001- |
| 25 | | 07002-11423 | O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-002024 Main Control Valve, Valve Bracket And Sensor

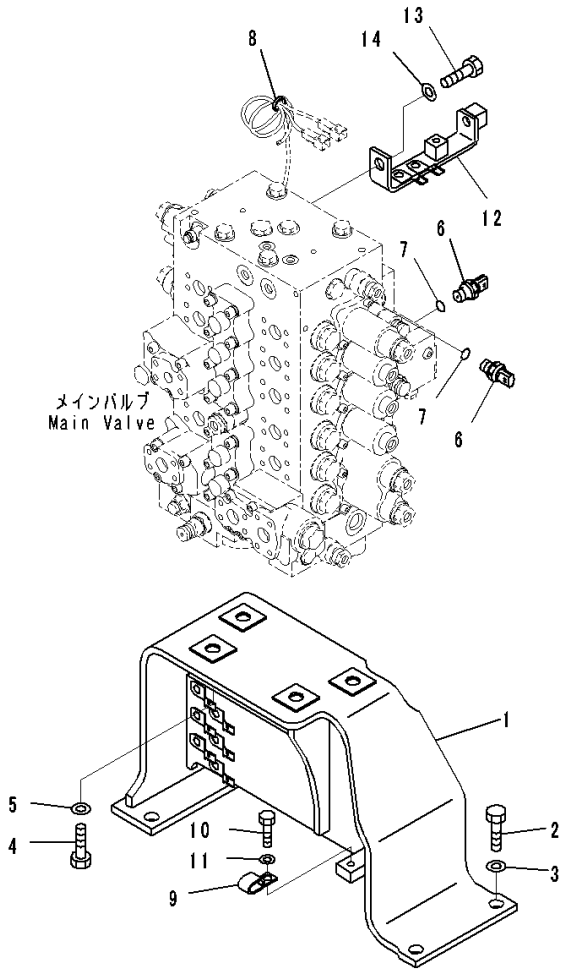


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator Service Valve | | | |
| | | 2-actuator | | | |
| 1 | | 20Y-62-51112 | Bracket. | 1 | Y200001- |
| 2 | | 01010-81640 | Bolt. | 4 | Y200001- |
| 3 | | 01643-31645 | Washer . | 4 | Y200001- |
| 4 | | 01010-81645 | Bolt. | 4 | Y200001- |
| 5 | | 01643-31645 | Washer . | 4 | Y200001- |
| 6 | | 7861-93-1811 | Sensor . | 2 | Y200001- |
| 7 | | 07002-11823 | • O-ring . | 1 | Y200001- |
| 8 | | 08034-20536 | Band . | 1 | Y200001- |
| 9 | | 04435-51512 | Clip. | 1 | Y200001- |
| 10 | | 01010-81225 | Bolt. | 1 | Y200001- |
| 11 | | 01643-31232 | Washer . | 1 | Y200001- |
| 12 | | 20Y-62-51471 | Bracket. | 1 | Y200001- |
| 13 | | 01010-81635 | Bolt. | 1 | Y200001- |
| 14 | | 01643-31645 | Washer . | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-004022 Main Control Valve, Service Valve, Connecting Parts (1/2)

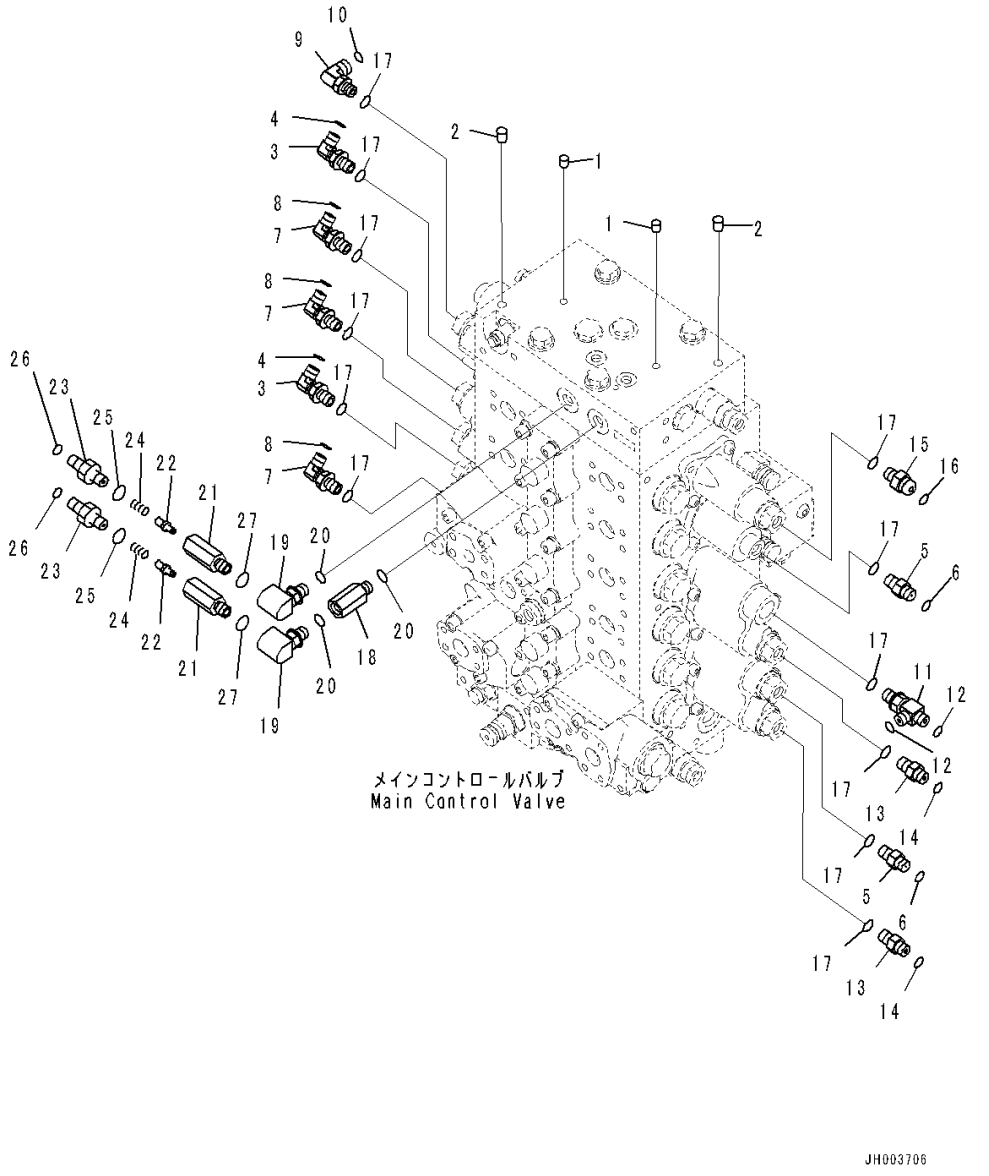


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07049-01012 | Plug | 2 | Y200001- |
| 2 | | 07049-01215 | Plug | 2 | Y200001- |
| 3 | | 20Y-62-45620 | Elbow | 2 | Y200001- |
| 4 | | 02896-11008 | O-ring | 2 | Y200001- |
| 5 | | 20Y-62-45610 | Nipple | 2 | Y200001- |
| 6 | | 02896-11008 | O-ring | 2 | Y200001- |
| 7 | | 11Y-62-12160 | Elbow | 3 | Y200001- |
| 8 | | 02896-11008 | O-ring | 3 | Y200001- |
| 9 | | 02782-10311 | Elbow | 1 | Y200001- |
| 10 | | 02896-11009 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 12 | | 02896-11008 | O-ring | 2 | Y200001- |
| 13 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 14 | | 02896-11008 | O-ring | 2 | Y200001- |
| 15 | | 11Y-62-12520 | Union | 1 | Y200001- |
| 16 | | 02896-11009 | O-ring | 1 | Y200001- |
| 17 | | 07002-11423 | O-ring | 12 | Y200001- |
| 18 | | 20Y-62-22160 | Adapter | 1 | Y200001- |
| 19 | | 20F-61-12460 | Elbow | 2 | Y200001- |
| 20 | | 07002-11423 | O-ring | 3 | Y200001- |
| | | 20Y-62-41602 | Valve Assembly | 2 | Y200001- |
| 21 | C1 | | • Body | 1 | Y200001- |
| 22 | | 20Y-60-22270 | • Poppet | 1 | Y200001- |
| 23 | | 20Y-62-41971 | • Nipple | 1 | Y200001- |
| 24 | | 701-20-61230 | • Spring | 1 | Y200001- |
| 25 | | 07002-11423 | • O-ring | 1 | Y200001- |
| 26 | | 02896-11008 | O-ring | 2 | Y200001- |
| 27 | | 07002-11423 | O-ring | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-004023 Main Control Valve, Service Valve, Connecting Parts (2/2)

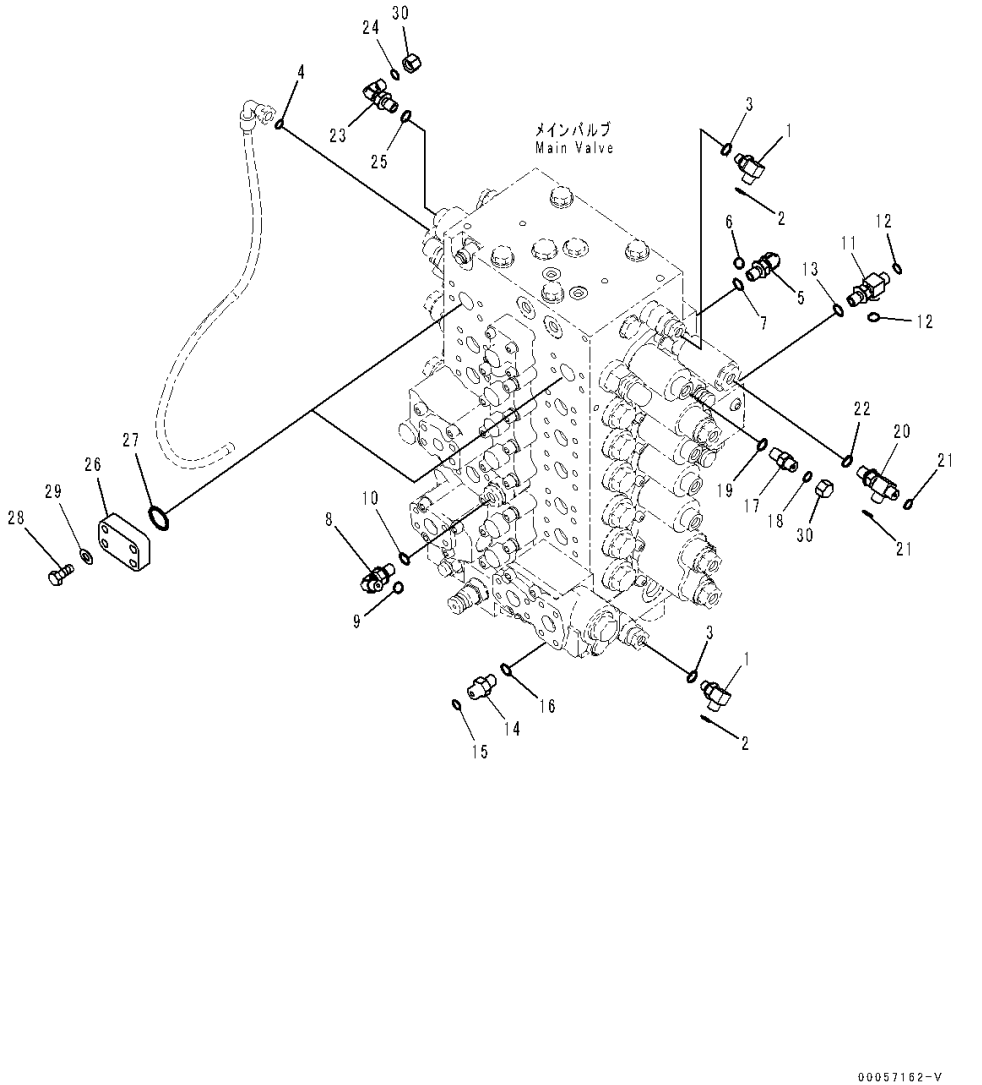


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-41920 | Elbow | 2 | Y200001- |
| 2 | | 02896-11008 | O-ring | 2 | Y200001- |
| 3 | | 07002-11223 | O-ring | 2 | Y200001- |
| 4 | | 02896-11008 | O-ring | 1 | Y200001- |
| 5 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 6 | | 02896-11008 | O-ring | 1 | Y200001- |
| 7 | | 07002-11423 | O-ring | 1 | Y200001- |
| 8 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 9 | | 02896-11008 | O-ring | 1 | Y200001- |
| 10 | | 07002-11423 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 12 | | 02896-11008 | O-ring | 2 | Y200001- |
| 13 | | 07002-11423 | O-ring | 1 | Y200001- |
| 14 | | 11Y-62-12520 | Union | 1 | Y200001- |
| 15 | | 02896-11009 | O-ring | 1 | Y200001- |
| 16 | | 07002-11423 | O-ring | 1 | Y200001- |
| 17 | | 11Y-62-12130 | Nipple | 1 | Y200001- |
| 18 | | 02896-11008 | O-ring | 1 | Y200001- |
| 19 | | 07002-11423 | O-ring | 1 | Y200001- |
| 20 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 21 | | 02896-11008 | O-ring | 2 | Y200001- |
| 22 | | 07002-11423 | O-ring | 1 | Y200001- |
| 23 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 24 | | 02896-11008 | O-ring | 1 | Y200001- |
| 25 | | 07002-11423 | O-ring | 1 | Y200001- |
| 26 | | 207-62-56190 | Flange | 2 | Y200001- |
| 27 | | 07000-13035 | O-ring | 2 | Y200001- |
| 28 | | 07372-21040 | Bolt | 8 | Y200001- |
| 29 | | 01643-51032 | Washer | 8 | Y200001- |
| 30 | | 02789-00210 | Plug, Face Seal Type | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008005 Main Control Valve, 2-actuator, Inner Parts (5/23)

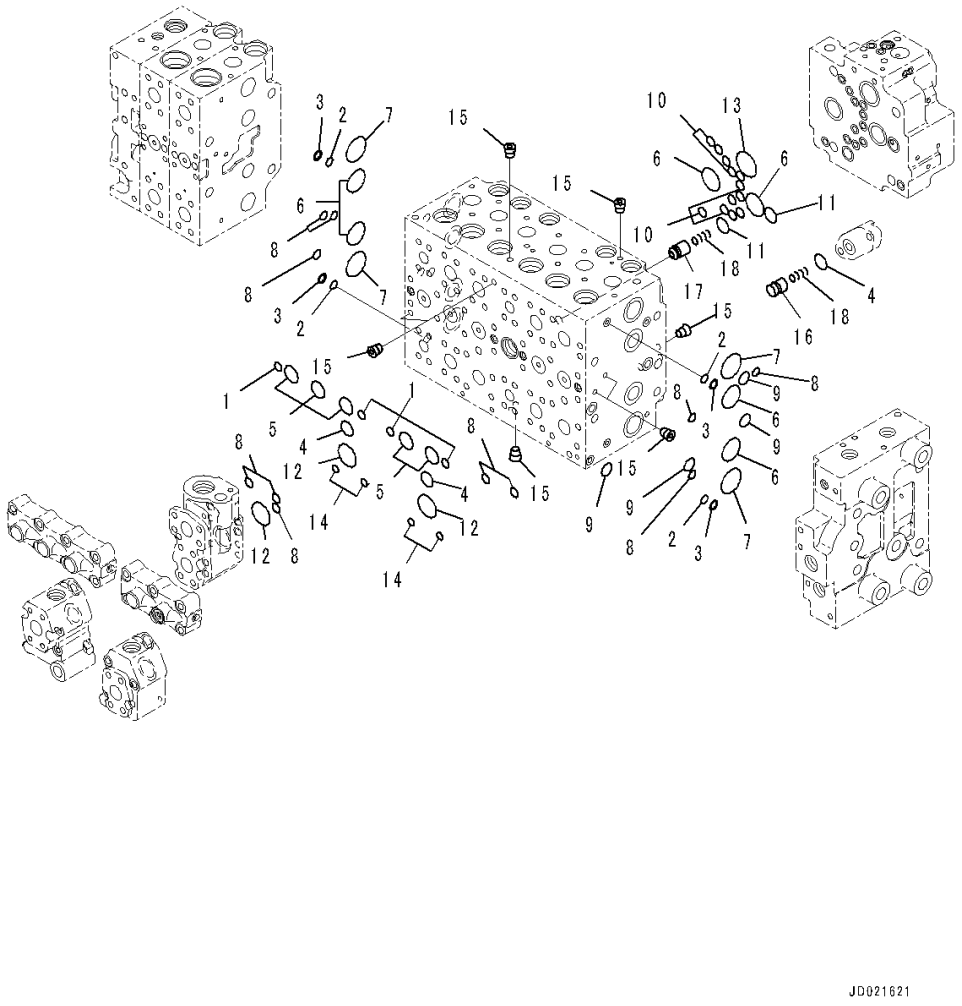


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| 1 | | 07000-12012 | •• O-ring. | 4 | Y200001- |
| 2 | | 723-11-19130 | •• O-ring. | 4 | Y200001- |
| 3 | | 723-46-17520 | •• Ring, Back-up . | 4 | Y200001- |
| 4 | | 07000-12021 | •• O-ring. | 3 | Y200001- |
| 5 | | 07000-13028 | •• O-ring. | 5 | Y200001- |
| 6 | | 07000-13032 | •• O-ring. | 6 | Y200001- |
| 7 | | 723-46-17510 | •• O-ring. | 4 | Y200001- |
| 8 | | 723-46-17530 | •• O-ring. | 11 | Y200001- |
| 9 | | 723-11-18150 | •• O-ring. | 4 | Y200001- |
| 10 | | 07000-12012 | •• O-ring. | 12 | Y200001- |
| 11 | | 07000-12021 | •• O-ring. | 2 | Y200001- |
| 12 | | 07000-13032 | •• O-ring. | 3 | Y200001- |
| 13 | | 07000-13036 | •• O-ring. | 1 | Y200001- |
| 14 | | 702-16-53920 | •• O-ring. | 4 | Y200001- |
| 15 | C1 | | •• Plug. | 16 | Y200001- |
| 16 | | 723-46-17650 | •• Valve. | 1 | Y200001- |
| 17 | | 723-46-15150 | •• Valve. | 1 | Y200001- |
| 18 | | 723-46-14150 | •• Spring . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008007 Main Control Valve, 2-actuator, Inner Parts (7/23)

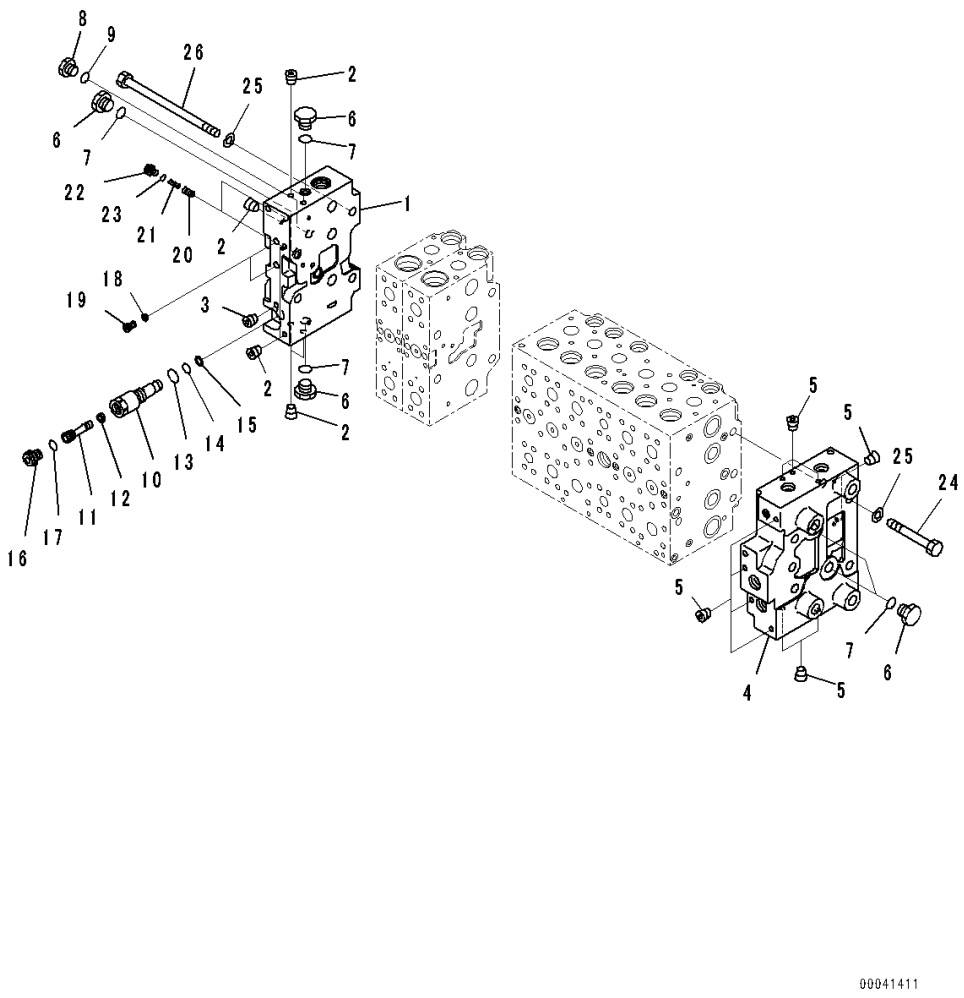


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly | 1 | Y200001- |
| | | 723-46-00750 | • Cover Assembly | 1 | Y200001- |
| 1 | C1 | | •• Cover | 1 | Y200001- |
| 2 | C1 | | •• Plug | 7 | Y200001- |
| 3 | C1 | | •• Plug | 1 | Y200001- |
| | | 723-46-00790 | • Cover Assembly | 1 | Y200001- |
| 4 | C1 | | •• Cover | 1 | Y200001- |
| 5 | C1 | | •• Plug | 12 | Y200001- |
| 6 | | 708-8E-16250 | • Plug | 5 | Y200001- |
| 7 | | 07002-11823 | • O-ring | 5 | Y200001- |
| 8 | | 708-8H-11530 | • Plug | 1 | Y200001- |
| 9 | | 07002-11423 | • O-ring | 1 | Y200001- |
| | | 723-46-17600 | • Plug Assembly | 1 | Y200001- |
| 10 | | 723-46-17610 | •• Sleeve | 1 | Y200001- |
| 11 | | 723-46-17640 | •• Plug | 1 | Y200001- |
| 12 | | 702-21-55760 | •• Filter | 1 | Y200001- |
| 13 | | 07002-11423 | •• O-ring | 1 | Y200001- |
| 14 | | 07000-11007 | •• O-ring | 1 | Y200001- |
| 15 | | 07001-01007 | •• Ring, Back-up | 1 | Y200001- |
| 16 | | 708-8E-16160 | •• Plug | 1 | Y200001- |
| 17 | | 07002-11023 | •• O-ring | 1 | Y200001- |
| 18 | | 723-40-82220 | • Filter | 2 | Y200001- |
| 19 | | 723-46-17550 | • Plug | 2 | Y200001- |
| 20 | | 723-46-15190 | • Valve | 2 | Y200001- |
| 21 | | 723-46-14140 | • Spring | 2 | Y200001- |
| 22 | | 708-8E-16160 | • Plug | 2 | Y200001- |
| 23 | | 07002-11023 | • O-ring | 2 | Y200001- |
| 24 | | 01010-61490 | • Bolt | 4 | Y200001- |
| 25 | | 01643-31445 | • Washer | 8 | Y200001- |
| 26 | | 723-46-15220 | • Bolt | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008008 Main Control Valve, 2-actuator, Inner Parts (8/23)

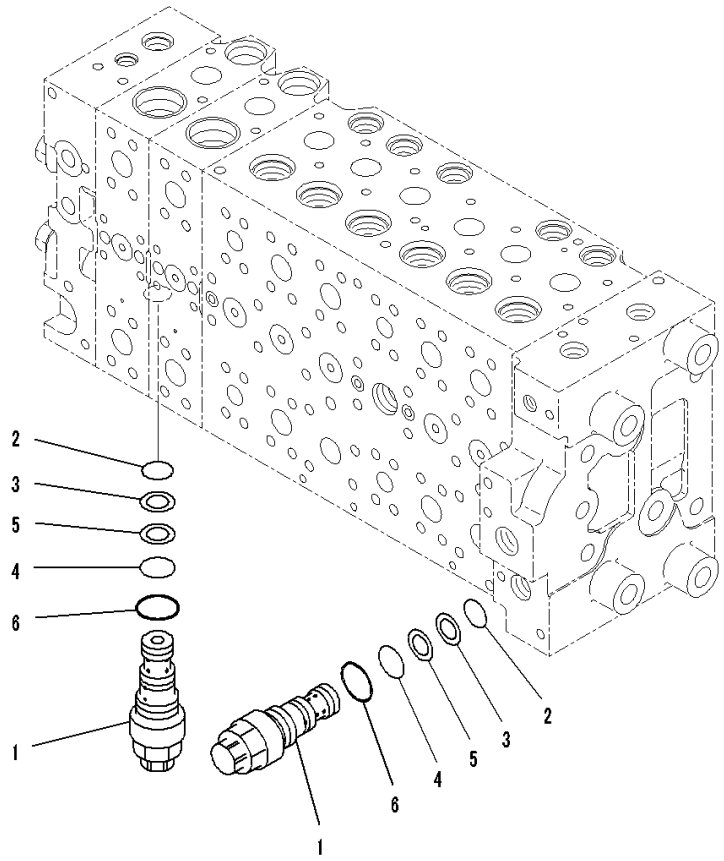


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly . ..... | 1 | Y200001- |
| 1 | | 723-40-57200 | • Valve Assembly, Unloader . ..... | 2 | Y200001- |
| 2 | | 07000-12014 | •• O-ring. ..... | 1 | Y200001- |
| 3 | | 723-40-56350 | •• Ring . ..... | 1 | Y200001- |
| 4 | | 07000-12016 | •• O-ring. ..... | 1 | Y200001- |
| 5 | | 723-60-22230 | •• Ring, Back-up . ..... | 1 | Y200001- |
| 6 | | 07002-12434 | •• O-ring. ..... | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008009 Main Control Valve, 2-actuator, Inner Parts (9/23)

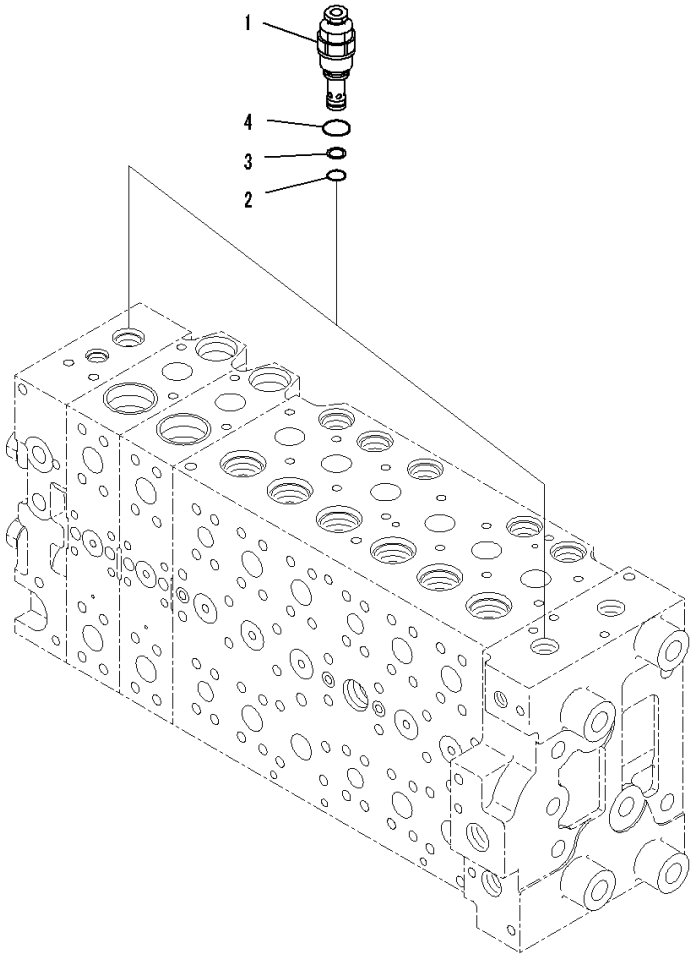


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly . | 1 | Y200001- |
| 1 | | 723-40-93600 | • Valve Assembly, Relief. | 2 | Y200001- |
| 2 | | 700-22-11410 | •• O-ring. | 1 | Y200001- |
| 3 | | 700-80-64220 | •• Ring . | 1 | Y200001- |
| 4 | | 07002-12434 | •• O-ring. | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008011 Main Control Valve, 2-actuator, Inner Parts (11/23)

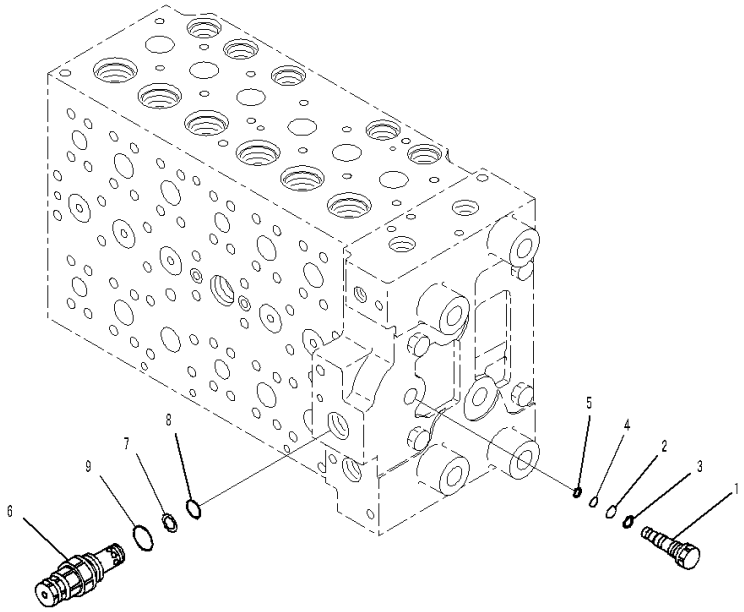


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly | 1 | Y200001- |
| | | 723-46-17701 | • Plug Assembly | 1 | Y200001- |
| 1 | | 723-46-17711 | •• Plug. | 1 | Y200001- |
| 2 | | 07000-11009 | •• O-ring. | 1 | Y200001- |
| 3 | | 07001-01009 | •• Ring, Back-up . | 1 | Y200001- |
| 4 | | 07000-11007 | •• O-ring. | 1 | Y200001- |
| 5 | | 07001-01007 | •• Ring, Back-up . | 1 | Y200001- |
| 6 | | 723-40-91500 | • Valve Assembly, Relief. | 1 | Y200001- |
| 7 | | 700-80-64220 | •• Ring . | 1 | Y200001- |
| 8 | | 700-22-11410 | •• O-ring. | 1 | Y200001- |
| 9 | | 709-25-11390 | •• O-ring. | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008017 Main Control Valve, 2-actuator, Inner Parts (17/23)

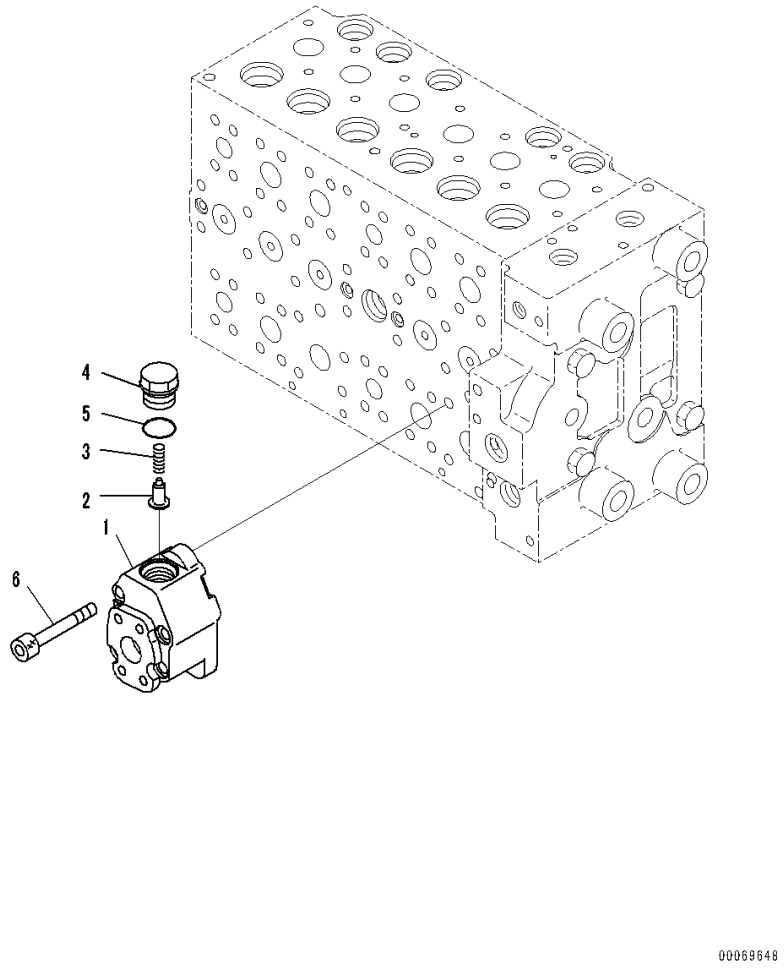


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly . | 1 | Y200001- |
| | | 723-40-84601 | • Valve Assembly. | 1 | Y200001- |
| 1 | | 723-40-84410 | •• Block. | 1 | Y200001- |
| 2 | | 723-40-84420 | •• Valve, Check. | 1 | Y200001- |
| 3 | | 723-40-84430 | •• Spring . | 1 | Y200001- |
| 4 | | 723-40-84440 | •• Plug. | 1 | Y200001- |
| 5 | | 07000-13024 | •• O-ring. | 1 | Y200001- |
| 6 | | 01252-61070 | • Bolt, Hexagon Socket Head | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008018 Main Control Valve, 2-actuator, Inner Parts (18/23)

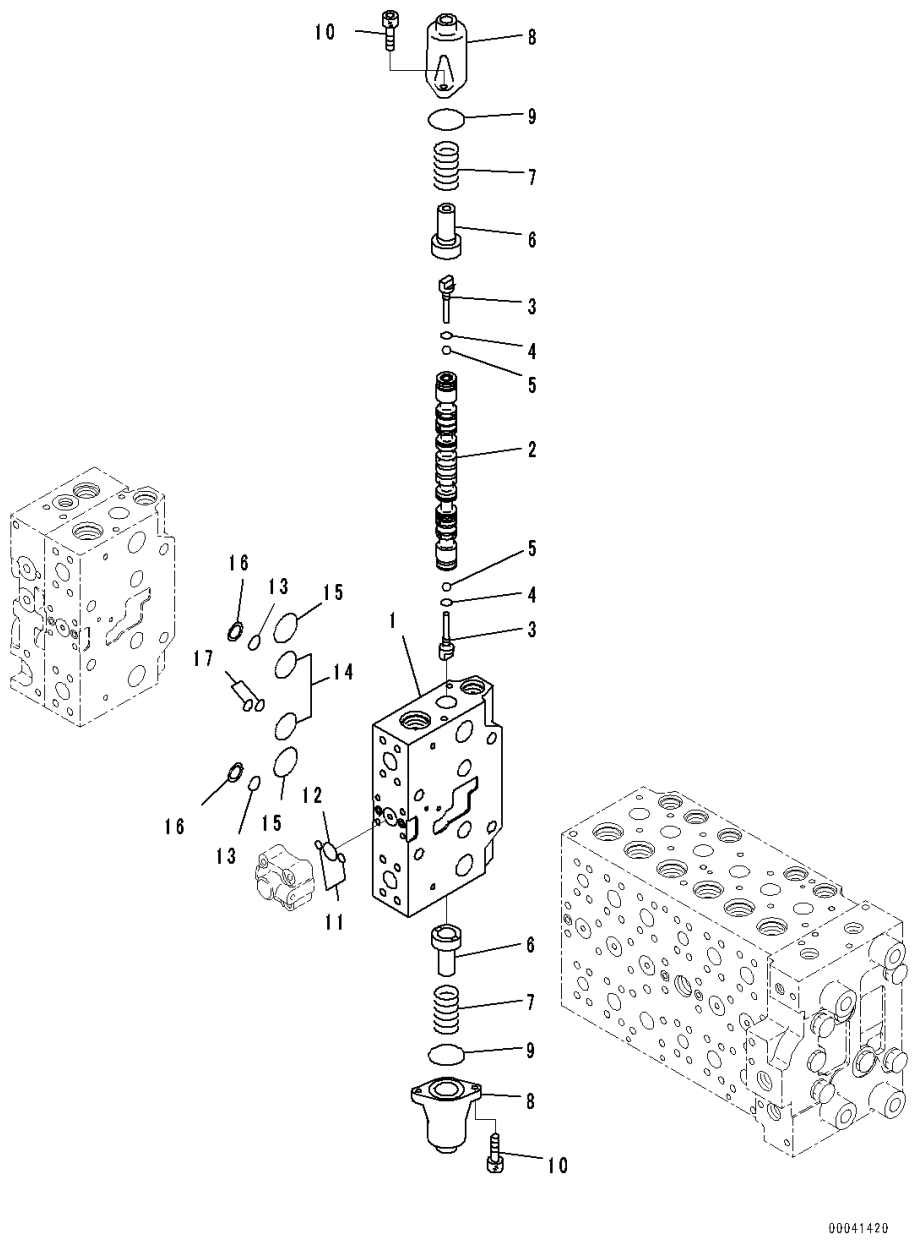


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| 1 | C1 | | •• Block. | 1 | Y200001- |
| 2 | C1 | | •• Spool. | 1 | Y200001- |
| 3 | | 723-46-15130 | •• Plug. | 2 | Y200001- |
| 4 | | 07002-10823 | •• O-ring. | 2 | Y200001- |
| 5 | | 708-7T-16460 | •• Ball. | 2 | Y200001- |
| 6 | | 723-46-15120 | •• Retainer . | 2 | Y200001- |
| 7 | | 723-46-14110 | •• Spring . | 2 | Y200001- |
| 8 | | 723-46-15111 | •• Case . | 2 | Y200001- |
| 9 | | 07430-71380 | •• O-ring. | 2 | Y200001- |
| 10 | | 01252-60820 | •• Bolt. | 4 | Y200001- |
| 11 | | 07000-11009 | •• O-ring. | 2 | Y200001- |
| 12 | | 07000-12021 | •• O-ring. | 1 | Y200001- |
| 13 | | 723-11-19130 | •• O-ring. | 2 | Y200001- |
| 14 | | 07000-13032 | •• O-ring. | 2 | Y200001- |
| 15 | | 723-46-17510 | •• O-ring. | 2 | Y200001- |
| 16 | | 723-46-17520 | •• Ring, Back-up . | 2 | Y200001- |
| 17 | | 723-46-17530 | •• O-ring. | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008019 Main Control Valve, 2-actuator, Inner Parts (19/23)

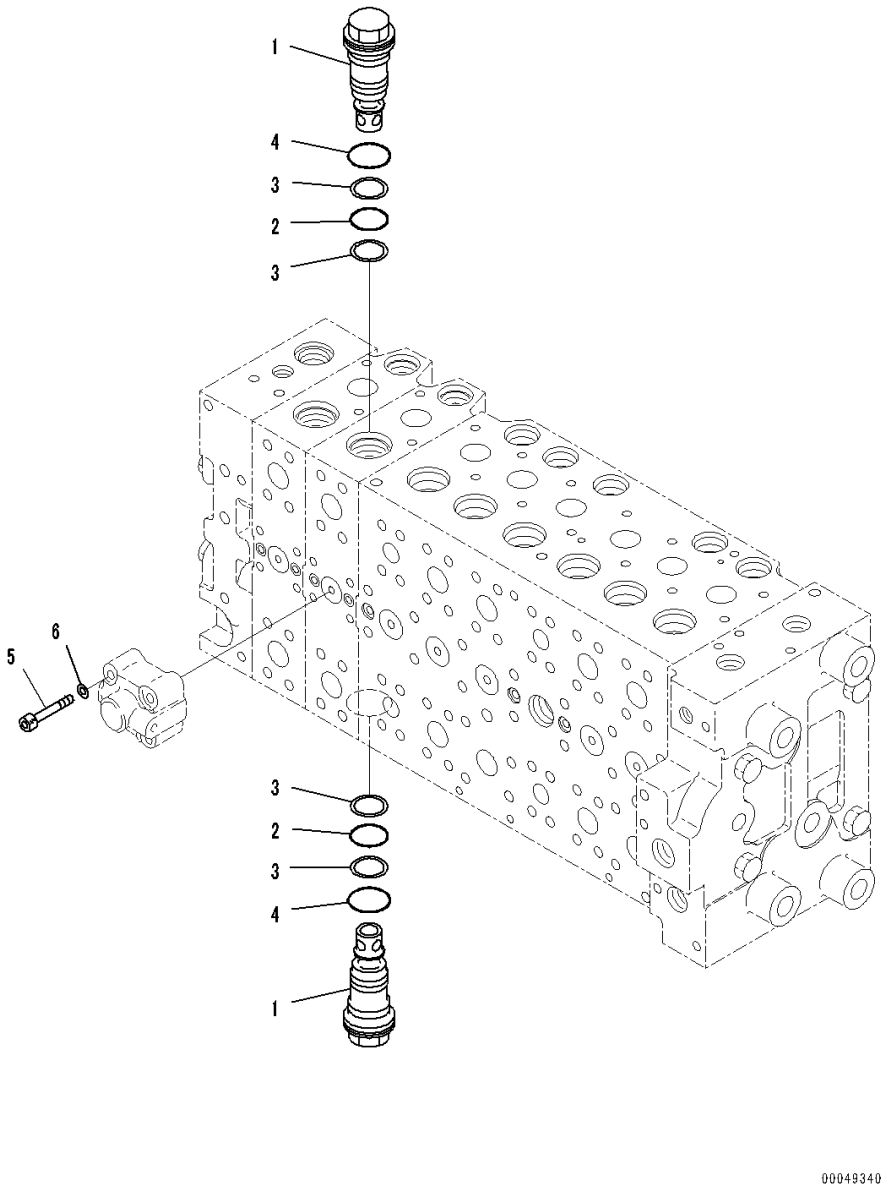


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| 1 | | 723-46-45700 | •• Valve Assembly . | 2 | Y200001- |
| 2 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 3 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 4 | | 07002-13634 | ••• O-ring | 1 | Y200001- |
| 5 | | 01252-60845 | •• Bolt. | 4 | Y200001- |
| 6 | | 01643-50823 | •• Washer . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008020 Main Control Valve, 2-actuator, Inner Parts (20/23)

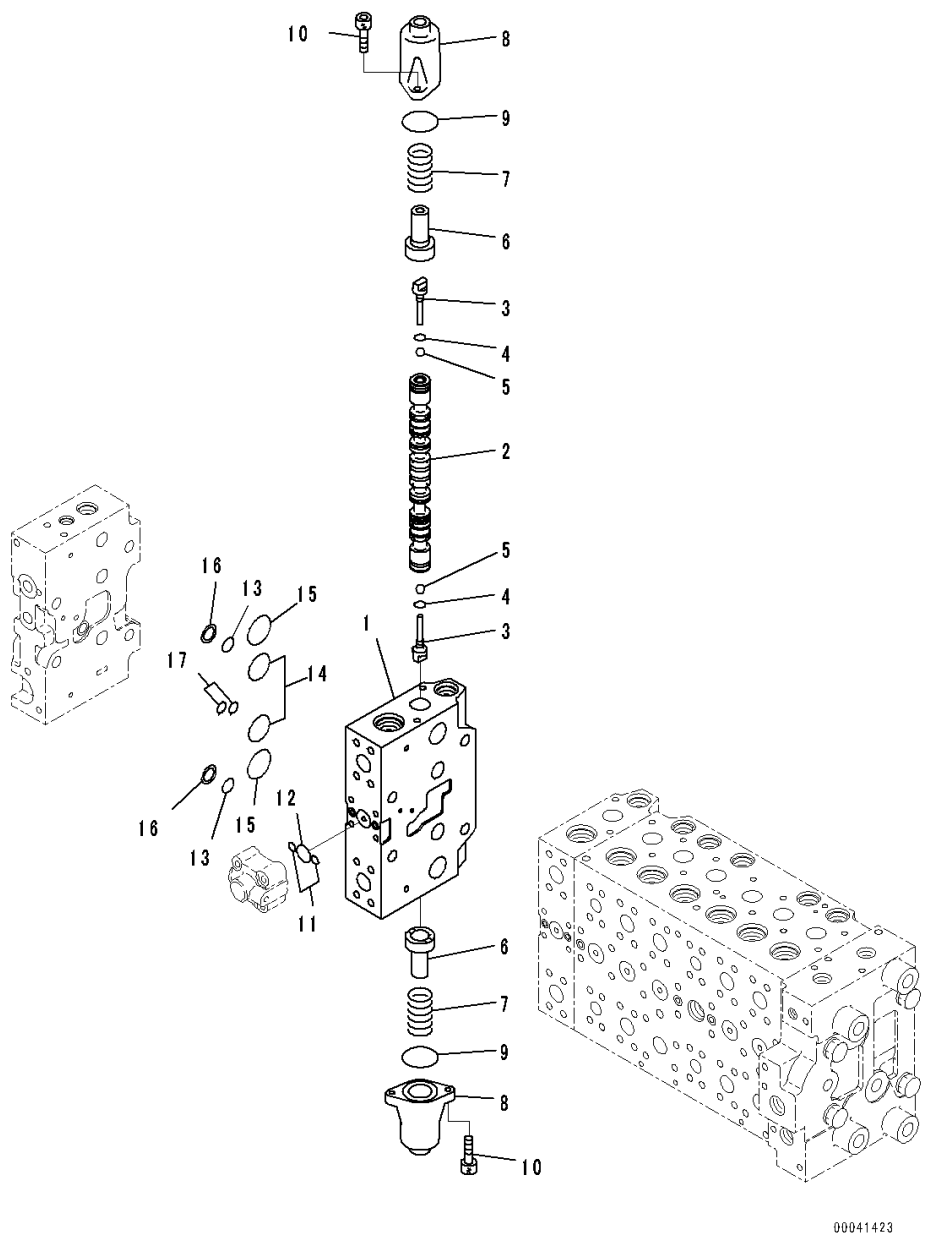


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| 1 | C1 | | •• Block. | 1 | Y200001- |
| 2 | C1 | | •• Spool. | 1 | Y200001- |
| 3 | | 723-46-15130 | •• Plug. | 2 | Y200001- |
| 4 | | 07002-10823 | •• O-ring. | 2 | Y200001- |
| 5 | | 708-7T-16460 | •• Ball. | 2 | Y200001- |
| 6 | | 723-46-15120 | •• Retainer . | 2 | Y200001- |
| 7 | | 723-46-14110 | •• Spring . | 2 | Y200001- |
| 8 | | 723-46-15111 | •• Case . | 2 | Y200001- |
| 9 | | 07430-71380 | •• O-ring. | 2 | Y200001- |
| 10 | | 01252-60820 | •• Bolt. | 4 | Y200001- |
| 11 | | 07000-11009 | •• O-ring. | 2 | Y200001- |
| 12 | | 07000-12021 | •• O-ring. | 1 | Y200001- |
| 13 | | 723-11-19130 | •• O-ring. | 2 | Y200001- |
| 14 | | 07000-13032 | •• O-ring. | 2 | Y200001- |
| 15 | | 723-46-17510 | •• O-ring. | 2 | Y200001- |
| 16 | | 723-46-17520 | •• Ring, Back-up . | 2 | Y200001- |
| 17 | | 723-46-17530 | •• O-ring. | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008021 Main Control Valve, 2-actuator, Inner Parts (21/23)

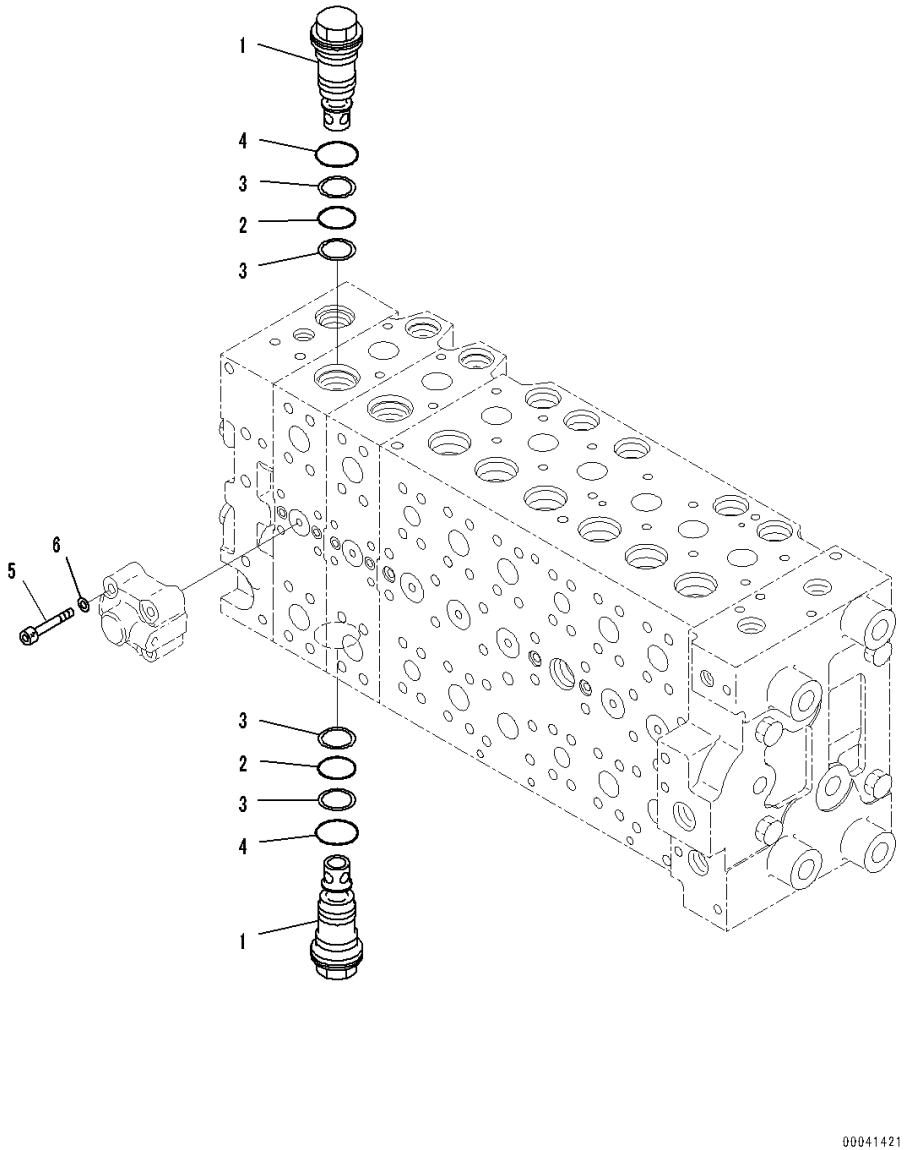


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly . | 1 | Y200001- |
| | C1 | | • Body Subassembly. | 1 | Y200001- |
| 1 | | 723-46-45700 | •• Valve Assembly . | 2 | Y200001- |
| 2 | | 700-93-11320 | ••• O-ring . | 1 | Y200001- |
| 3 | | 723-46-41950 | ••• Ring. | 2 | Y200001- |
| 4 | | 07002-13634 | ••• O-ring . | 1 | Y200001- |
| 5 | | 01252-60845 | •• Bolt. | 4 | Y200001- |
| 6 | | 01643-50823 | •• Washer . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008022 Main Control Valve, 2-actuator, Inner Parts (22/23)

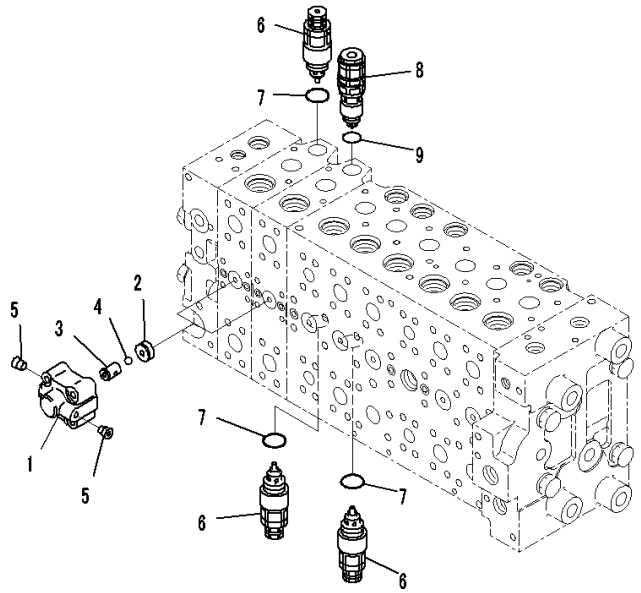


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-48-23102 | Valve Assembly | 1 | Y200001- |
| | | 723-40-66300 | • Valve Assembly | 2 | Y200001- |
| 1 | C1 | | •• Case | 1 | Y200001- |
| 2 | C1 | | •• Seat | 1 | Y200001- |
| 3 | C1 | | •• Seat | 1 | Y200001- |
| 4 | C1 | | •• Ball | 1 | Y200001- |
| 5 | C1 | | •• Plug | 2 | Y200001- |
| 6 | | 723-40-91300 | • Valve Assembly, Suction and Relief | 3 | Y200001- |
| 7 | | 709-25-11390 | •• O-ring | 1 | Y200001- |
| 8 | | 723-90-76101 | • Valve Assembly, Suction and Relief | 1 | Y200001- |
| 9 | | 07000-13024 | •• O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008024 Main Control Valve, 2-actuator, Connecting Parts (1/2)

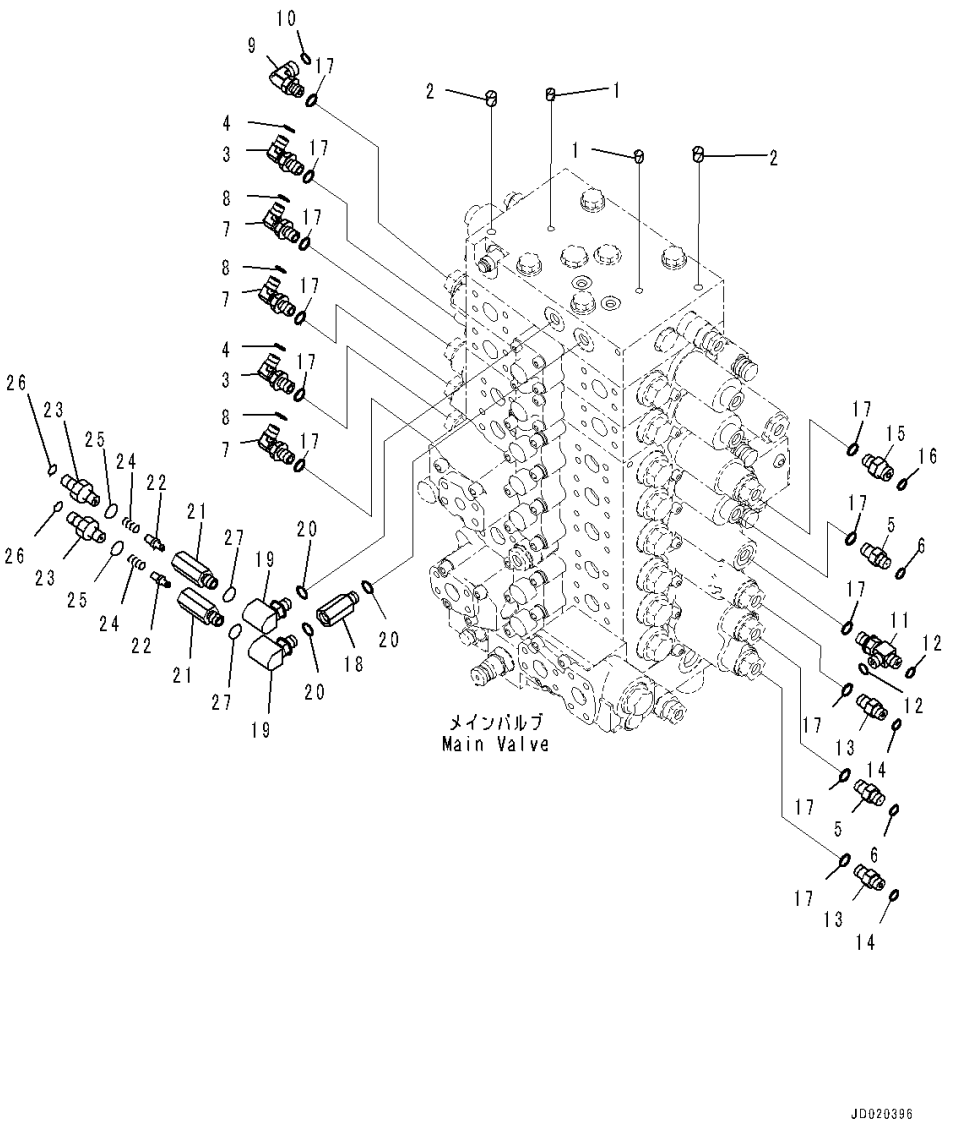


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07049-01012 | Plug | 2 | Y200001- |
| 2 | | 07049-01215 | Plug | 2 | Y200001- |
| 3 | | 20Y-62-45620 | Elbow | 2 | Y200001- |
| 4 | | 02896-11008 | O-ring | 2 | Y200001- |
| 5 | | 20Y-62-45610 | Nipple | 2 | Y200001- |
| 6 | | 02896-11008 | O-ring | 2 | Y200001- |
| 7 | | 11Y-62-12160 | Elbow | 3 | Y200001- |
| 8 | | 02896-11008 | O-ring | 3 | Y200001- |
| 9 | | 02782-10311 | Elbow | 1 | Y200001- |
| 10 | | 02896-11009 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 12 | | 02896-11008 | O-ring | 2 | Y200001- |
| 13 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 14 | | 02896-11008 | O-ring | 2 | Y200001- |
| 15 | | 11Y-62-12520 | Union | 1 | Y200001- |
| 16 | | 02896-11009 | O-ring | 1 | Y200001- |
| 17 | | 07002-11423 | O-ring | 12 | Y200001- |
| 18 | | 20Y-62-22160 | Adapter | 1 | Y200001- |
| 19 | | 20F-61-12460 | Elbow | 2 | Y200001- |
| 20 | | 07002-11423 | O-ring | 3 | Y200001- |
| | | 20Y-62-41602 | Valve Assembly | 2 | Y200001- |
| 21 | C1 | | • Body | 1 | Y200001- |
| 22 | | 20Y-60-22270 | • Poppet | 1 | Y200001- |
| 23 | | 20Y-62-41971 | • Nipple | 1 | Y200001- |
| 24 | | 701-20-61230 | • Spring | 1 | Y200001- |
| 25 | | 07002-11423 | • O-ring | 1 | Y200001- |
| 26 | | 02896-11008 | O-ring | 2 | Y200001- |
| 27 | | 07002-11423 | O-ring | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0120-008025 Main Control Valve, 2-actuator, Connecting Parts (2/2)

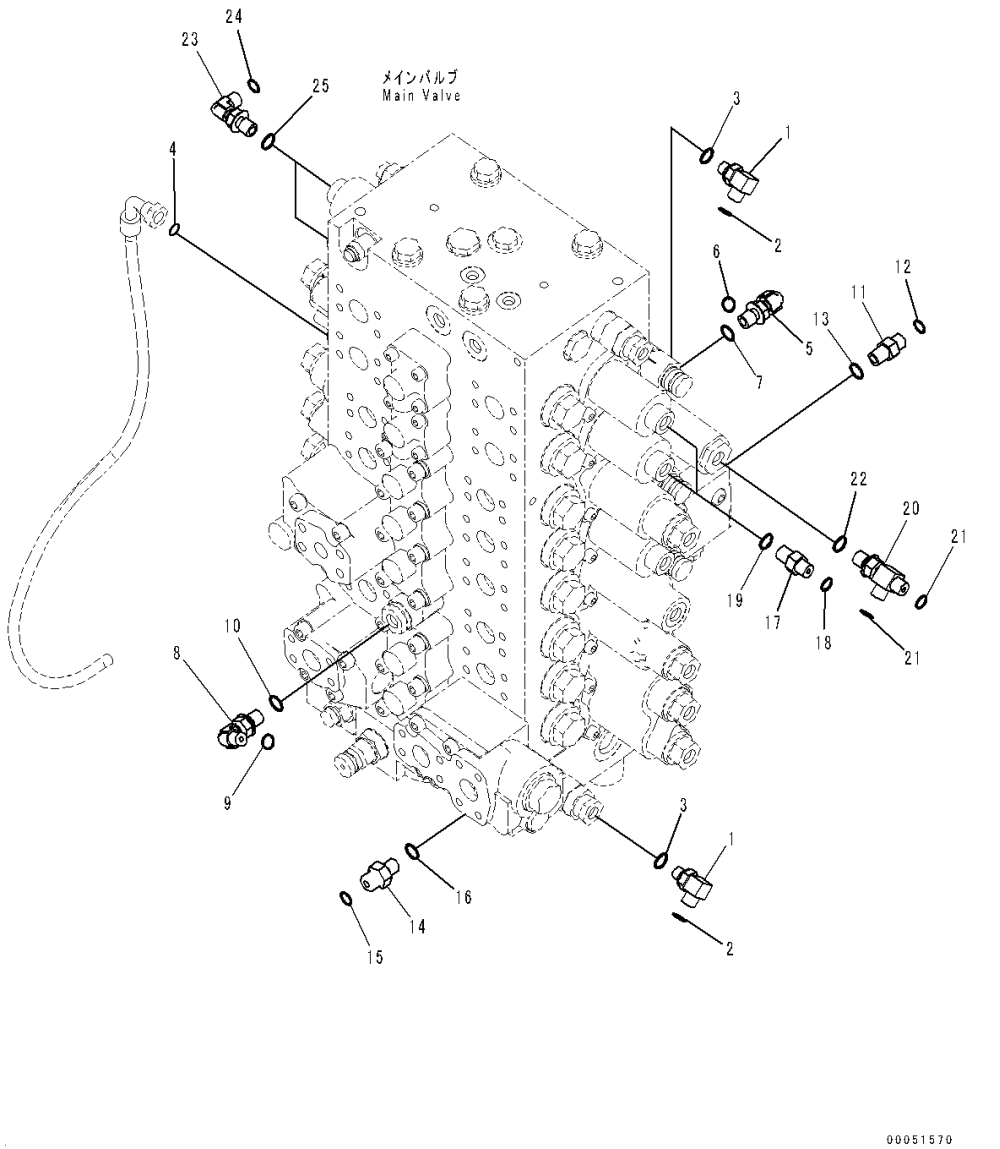


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-41920 | Elbow | 2 | Y200001- |
| 2 | | 02896-11008 | O-ring | 2 | Y200001- |
| 3 | | 07002-11223 | O-ring | 2 | Y200001- |
| 4 | | 02896-11008 | O-ring | 1 | Y200001- |
| 5 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 6 | | 02896-11008 | O-ring | 1 | Y200001- |
| 7 | | 07002-11423 | O-ring | 1 | Y200001- |
| 8 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 9 | | 02896-11008 | O-ring | 1 | Y200001- |
| 10 | | 07002-11423 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12130 | Nipple | 1 | Y200001- |
| 12 | | 02896-11008 | O-ring | 1 | Y200001- |
| 13 | | 07002-11423 | O-ring | 1 | Y200001- |
| 14 | | 11Y-62-12520 | Union | 1 | Y200001- |
| 15 | | 02896-11009 | O-ring | 1 | Y200001- |
| 16 | | 07002-11423 | O-ring | 1 | Y200001- |
| 17 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 18 | | 02896-11008 | O-ring | 2 | Y200001- |
| 19 | | 07002-11423 | O-ring | 2 | Y200001- |
| 20 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 21 | | 02896-11008 | O-ring | 2 | Y200001- |
| 22 | | 07002-11423 | O-ring | 1 | Y200001- |
| 23 | | 11Y-62-12160 | Elbow | 2 | Y200001- |
| 24 | | 02896-11008 | O-ring | 2 | Y200001- |
| 25 | | 07002-11423 | O-ring | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001001 Main Piston Pump, Inner Parts (1/11)

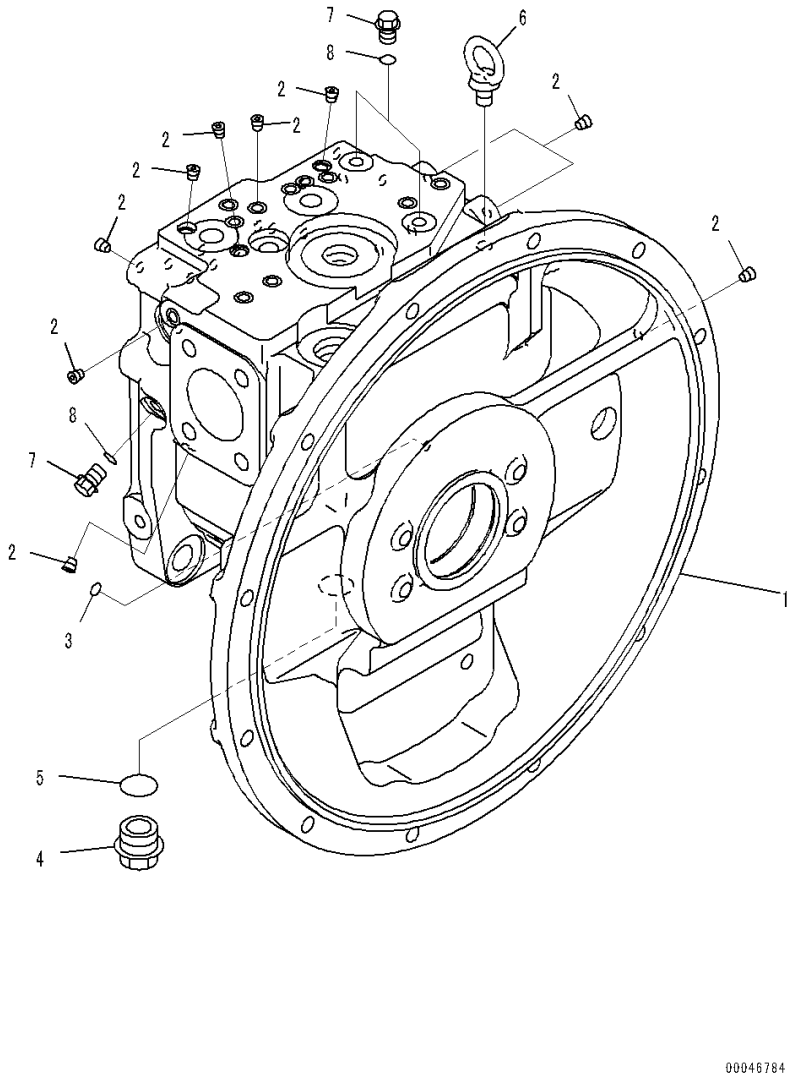


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-01500 | Pump Subassembly | 1 | Y200001- |
| | C2 | 708-2L-06440 | • Case Assembly,Front | 1 | Y200001- |
| 1 | C1 | | •• Case,Front | 1 | Y200001- |
| 2 | C1 | | •• Plug. | 32 | Y200001- |
| 3 | | 07000-B1009 | • O-ring | 1 | Y200001- |
| 4 | | 07044-12412 | • Plug | 1 | Y200001- |
| 5 | | 07002-62434 | • O-ring | 1 | Y200001- |
| 6 | | 04530-11222 | • Bolt, Eye | 1 | Y200001- |
| 7 | | 708-8E-16150 | • Plug | 3 | Y200001- |
| 8 | | 07002-61023 | • O-ring | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001002 Main Piston Pump, Inner Parts (2/11)

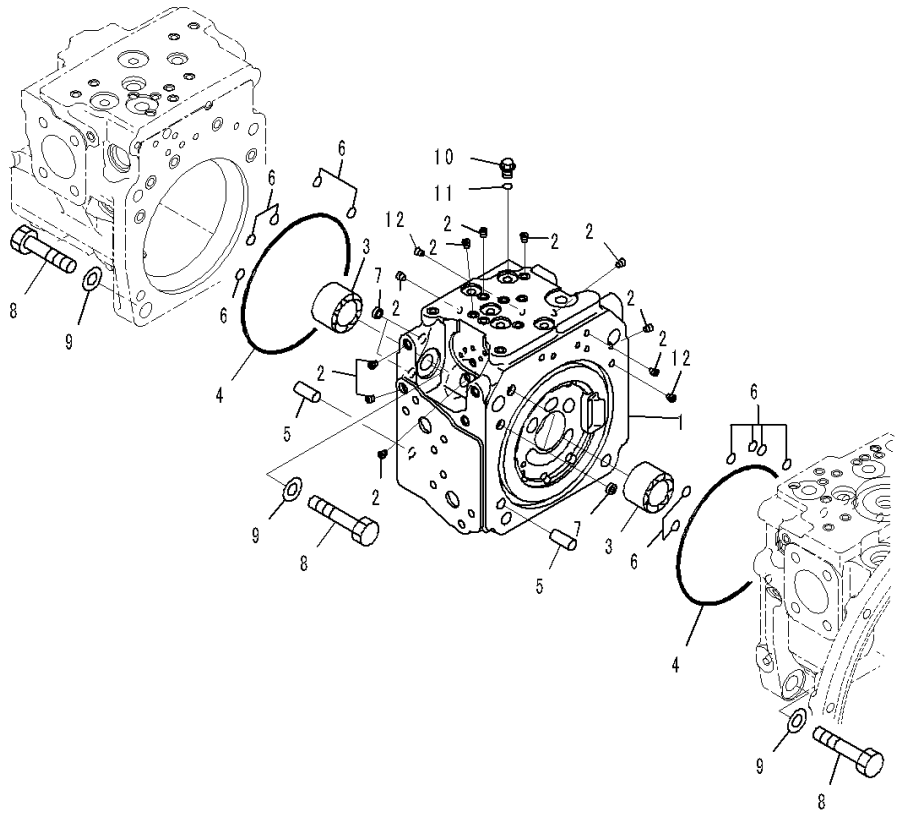


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-01500 | Pump Subassembly | 1 | Y200001- |
| | C2 | 708-2L-06450 | • Cap Assembly, End | 1 | Y200001- |
| 1 | C1 | | •• Cap, End | 1 | Y200001- |
| 2 | C1 | | •• Plug | 20 | Y200001- |
| 3 | C2 | 708-2L-32260 | • Bearing | 2 | Y200001- |
| 4 | C2 | 07000-A5165 | • O-ring | 2 | Y200001- |
| 5 | C2 | 04020-01228 | • Pin, Dowel | 2 | Y200001- |
| 6 | C2 | 07000-B2012 | • O-ring | 11 | Y200001- |
| 7 | C2 | 708-2L-25480 | • Filter | 4 | Y200001- |
| 8 | C2 | 01010-61655 | • Bolt | 8 | Y200001- |
| 9 | C2 | 01643-31645 | • Washer | 8 | Y200001- |
| 10 | | 708-8E-16150 | • Plug | 5 | Y200001- |
| 11 | | 07002-61023 | • O-ring | 5 | Y200001- |
| 12 | | 708-1L-29340 | • Orifice | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001003 Main Piston Pump, Inner Parts (3/11)

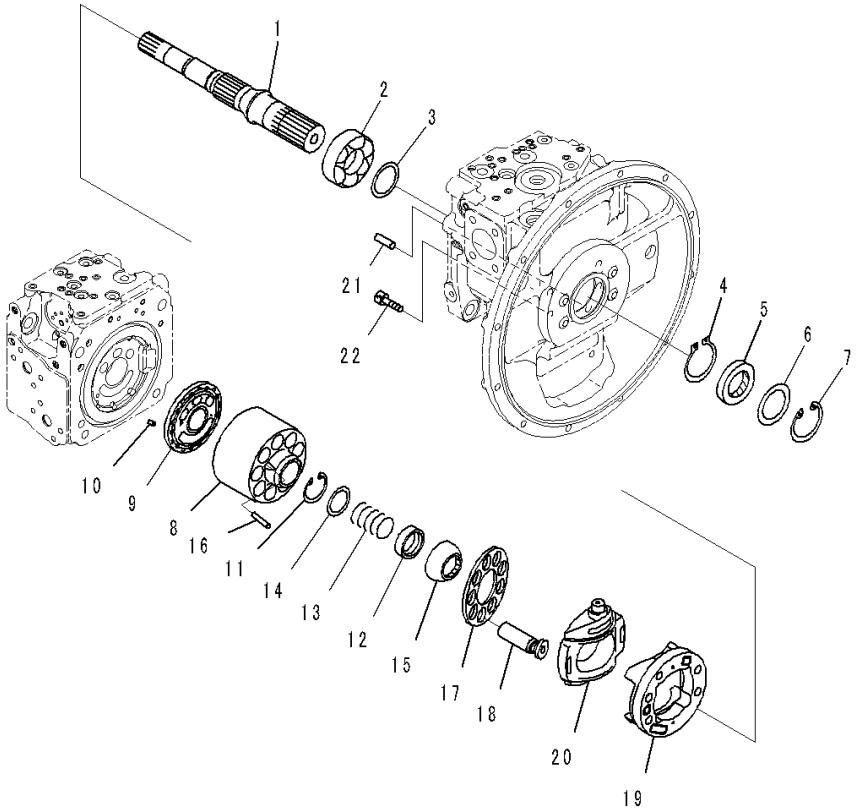


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-01500 | Pump Subassembly | 1 | Y200001- |
| 1 | C2 | 708-2L-32160 | • Shaft,Front. | 1 | Y200001- |
| 2 | C2 | 708-2L-32150 | • Bearing | 1 | Y200001- |
| 3 | C2 | 708-2E-05040 | • Washer Kit. | 1 | Y200001- |
| | C1 | | •• Washer, T=3.1mm | 1 | Y200001- |
| | C1 | | •• Washer, T=3.0mm | 1 | Y200001- |
| | C1 | | •• Washer, T=2.9mm | 1 | Y200001- |
| | C1 | | •• Washer, T=2.8mm | 1 | Y200001- |
| 4 | C2 | 708-25-12790 | • Ring, Snap. | 1 | Y200001- |
| 5 | | 708-25-52861 | • Seal, Oil | 1 | Y200001- |
| 6 | | 708-2L-22160 | • Spacer | 1 | Y200001- |
| 7 | | 04065-06825 | • Ring, Snap. | 1 | Y200001- |
| | C2 | 708-2L-06470 | • Block Assembly,Front. | 1 | Y200001- |
| 8 | C1 | | •• Block, Cylinder | 1 | Y200001- |
| 9 | C1 | | •• Plate | 1 | Y200001- |
| 10 | C2 | 720-68-19610 | • Pin | 1 | Y200001- |
| 11 | C2 | 04065-04818 | • Ring, Snap. | 1 | Y200001- |
| 12 | C2 | 708-2L-23131 | • Seat | 1 | Y200001- |
| 13 | C2 | 708-2L-33160 | • Spring | 1 | Y200001- |
| 14 | C2 | 708-7L-13140 | • Seat | 1 | Y200001- |
| 15 | C2 | 708-2L-23351 | • Guide, Retainer | 1 | Y200001- |
| 16 | C2 | 708-2L-23360 | • Pin | 3 | Y200001- |
| 17 | C2 | 708-2L-33350 | • Retainer, Shoe | 1 | Y200001- |
| 18 | C2 | 708-2L-33430 | • Piston Subassembly. | 9 | Y200001- |
| | C2 | 708-2L-06630 | • Cradle Assembly | 1 | Y200001- |
| 19 | C1 | | •• Cradle | 1 | Y200001- |
| 20 | C1 | | •• Cam, Rocker. | 1 | Y200001- |
| 21 | C2 | 04020-01228 | • Pin, Dowel | 1 | Y200001- |
| 22 | C2 | 01252-61230 | • Bolt | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001004 Main Piston Pump, Inner Parts (4/11)

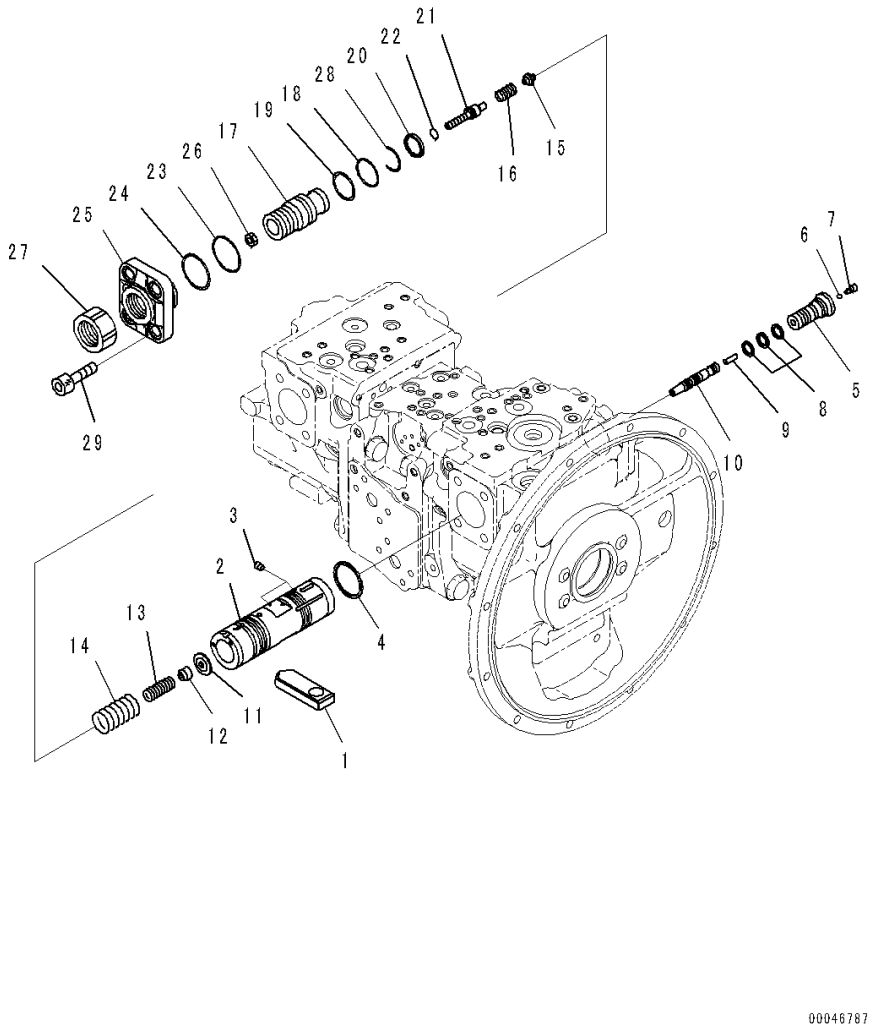


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-01500 | Pump Subassembly | 1 | Y200001- |
| 1 | C2 | 708-2L-34180 | • Slider | 1 | Y200001- |
| | C2 | 708-2L-06650 | • Valve Assembly | 1 | Y200001- |
| | C2 | 708-2L-06660 | •• Piston Assembly, Servo | 1 | Y200001- |
| 2 | C1 | | ••• Piston, Servo | 1 | Y200001- |
| 3 | C1 | | ••• Screw | 8 | Y200001- |
| 4 | C2 | 708-2L-35680 | •• Seal | 1 | Y200001- |
| 5 | C2 | 708-2L-35260 | •• Plug | 1 | Y200001- |
| 6 | C2 | 708-2L-35760 | •• Ball | 1 | Y200001- |
| 7 | C2 | 708-2L-35770 | •• Plug | 1 | Y200001- |
| 8 | C2 | 708-2L-35690 | •• Seal | 3 | Y200001- |
| 9 | C2 | 708-2L-35280 | •• Pin | 1 | Y200001- |
| 10 | C2 | 708-2L-35860 | •• Spool | 1 | Y200001- |
| 11 | C2 | 708-2L-35630 | •• Retainer | 1 | Y200001- |
| 12 | C2 | 708-2L-35641 | •• Seat | 1 | Y200001- |
| 13 | C2 | 708-2L-35240 | •• Spring | 1 | Y200001- |
| 14 | C2 | 708-2L-35730 | •• Spring | 1 | Y200001- |
| 15 | C2 | 708-2L-35650 | •• Seat | 1 | Y200001- |
| 16 | C2 | 708-2L-35250 | •• Spring | 1 | Y200001- |
| 17 | C2 | 708-2L-34330 | •• Screw | 1 | Y200001- |
| 18 | C2 | 07000-B3034 | •• O-ring | 1 | Y200001- |
| 19 | C2 | 708-2L-35210 | •• Ring, Back-up | 1 | Y200001- |
| 20 | C2 | 708-2L-35710 | •• Seal | 1 | Y200001- |
| 21 | C2 | 708-2L-35270 | •• Plug | 1 | Y200001- |
| 22 | C2 | 07000-B2011 | •• O-ring | 1 | Y200001- |
| 23 | C2 | 07000-B3045 | •• O-ring | 1 | Y200001- |
| 24 | C2 | 708-2L-35750 | •• Ring | 1 | Y200001- |
| 25 | C2 | 708-2L-34310 | •• Cover | 1 | Y200001- |
| 26 | C2 | 01580-10806 | •• Nut | 1 | Y200001- |
| 27 | C2 | 708-2L-35290 | •• Nut | 1 | Y200001- |
| 28 | C2 | 708-2L-35670 | •• Ring, Wire | 1 | Y200001- |
| 29 | C2 | 01252-61440 | • Bolt, Hexagon Socket Head | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001005 Main Piston Pump, Inner Parts (5/11)

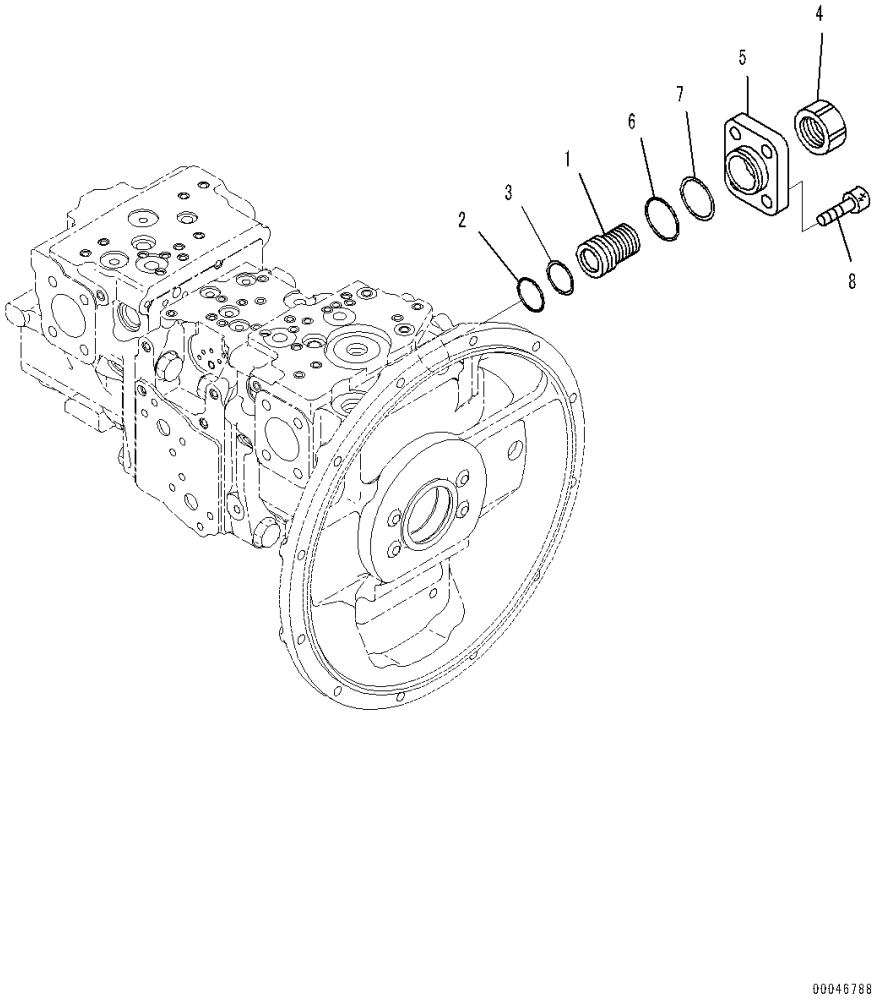


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-01500 | Pump Subassembly . . . . . | 1 | Y200001- |
| | C2 | 708-2L-06670 | • Cover Assembly . . . . . | 1 | Y200001- |
| 1 | C2 | 708-2L-34340 | •• Screw . . . . . | 1 | Y200001- |
| 2 | C2 | 07000-B3034 | •• O-ring . . . . . | 1 | Y200001- |
| 3 | C2 | 708-2L-35210 | •• Ring, Back-up . . . . . | 1 | Y200001- |
| 4 | C2 | 708-2L-35290 | •• Nut . . . . . | 1 | Y200001- |
| 5 | C2 | 708-2L-34320 | •• Cover . . . . . | 1 | Y200001- |
| 6 | C2 | 07000-B3045 | •• O-ring . . . . . | 1 | Y200001- |
| 7 | C2 | 708-2L-35750 | •• Ring . . . . . | 1 | Y200001- |
| 8 | C2 | 01252-61440 | • Bolt, Hexagon Socket Head . . . . . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001006 Main Piston Pump, Inner Parts (6/11)

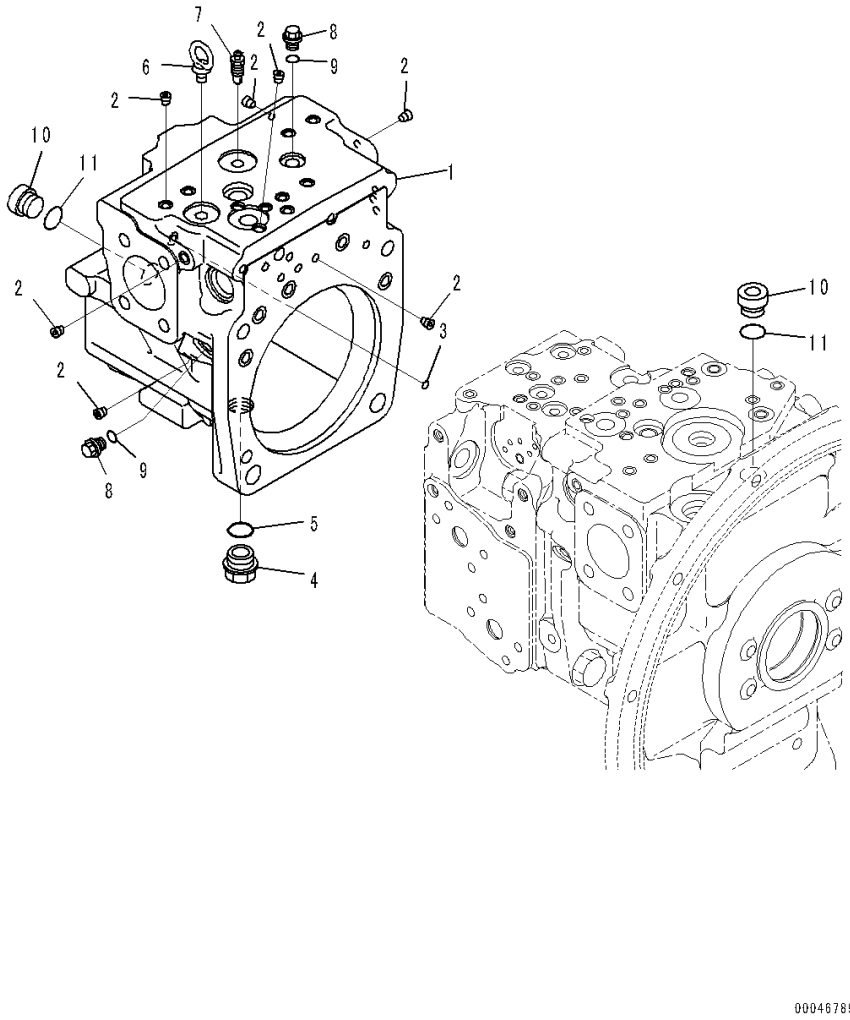


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-01500 | Pump Subassembly. | 1 | Y200001- |
| | C2 | 708-2L-06460 | • Case Assembly,Rear. | 1 | Y200001- |
| 1 | C1 | | •• Case,Rear. | 1 | Y200001- |
| 2 | C1 | | •• Plug. | 27 | Y200001- |
| 3 | C2 | 07000-B1009 | • O-ring . | 1 | Y200001- |
| 4 | | 07044-12412 | • Plug . | 1 | Y200001- |
| 5 | | 07002-62434 | • O-ring . | 1 | Y200001- |
| 6 | | 04530-11222 | • Bolt, Eye. | 1 | Y200001- |
| 7 | | 20B-27-11210 | • Bleeder. | 1 | Y200001- |
| 8 | | 708-8E-16150 | • Plug . | 2 | Y200001- |
| 9 | | 07002-61023 | • O-ring . | 2 | Y200001- |
| 10 | | 07040-12414 | • Plug . | 2 | Y200001- |
| 11 | | 07002-62434 | • O-ring . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001007 Main Piston Pump, Inner Parts (7/11)

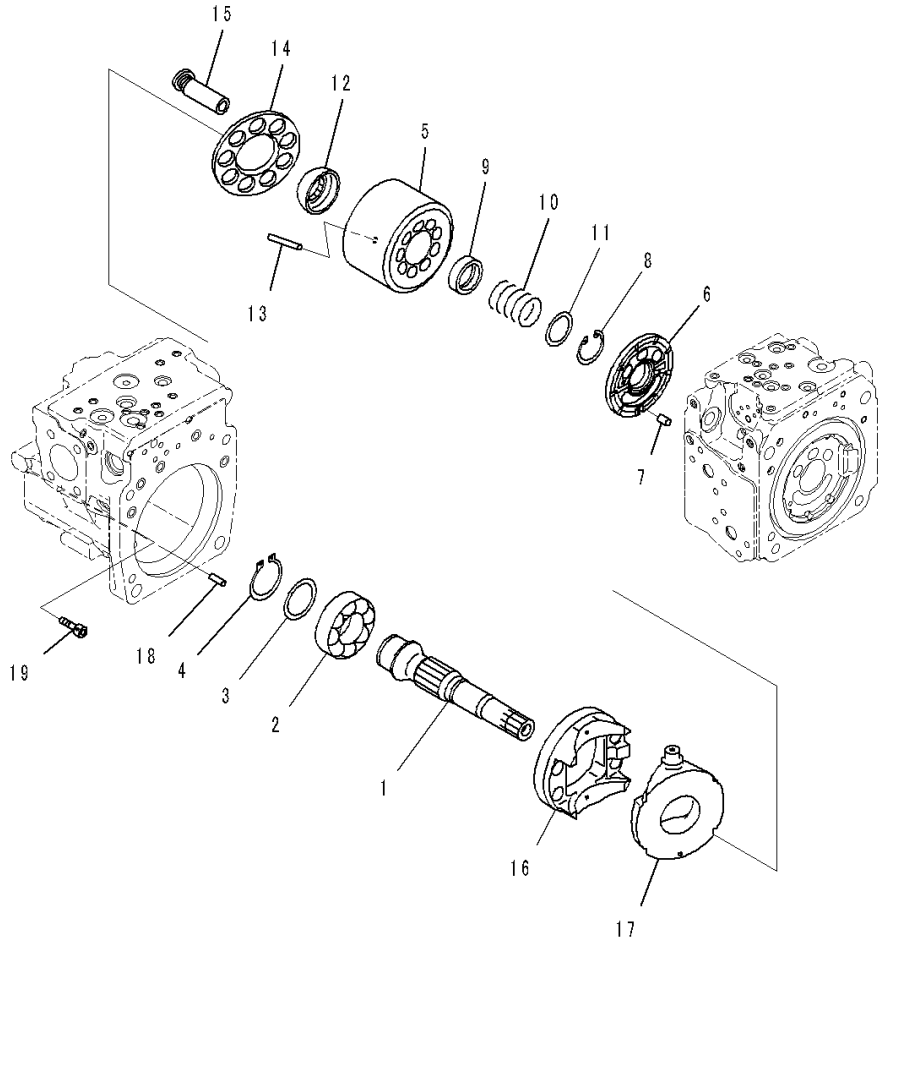


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-01500 | Pump Subassembly | 1 | Y200001- |
| 1 | C2 | 708-2L-32170 | • Shaft,Rear | 1 | Y200001- |
| 2 | C2 | 708-2L-32150 | • Bearing | 1 | Y200001- |
| 3 | C2 | 708-2E-05040 | • Washer Kit | 1 | Y200001- |
| | C1 | | •• Washer, T=3.1mm | 1 | Y200001- |
| | C1 | | •• Washer, T=3.0mm | 1 | Y200001- |
| | C1 | | •• Washer, T=2.9mm | 1 | Y200001- |
| | C1 | | •• Washer, T=2.8mm | 1 | Y200001- |
| 4 | C2 | 708-25-12790 | • Ring, Snap | 1 | Y200001- |
| | C2 | 708-2L-06480 | • Block Assembly,Rear | 1 | Y200001- |
| 5 | C1 | | •• Block, Cylinder | 1 | Y200001- |
| 6 | C1 | | •• Plate, Valve | 1 | Y200001- |
| 7 | C2 | 720-68-19610 | • Pin | 1 | Y200001- |
| 8 | C2 | 04065-04818 | • Ring, Snap | 1 | Y200001- |
| 9 | C2 | 708-2L-23131 | • Seat | 1 | Y200001- |
| 10 | C2 | 708-2L-33160 | • Spring | 1 | Y200001- |
| 11 | C2 | 708-7L-13140 | • Seat | 1 | Y200001- |
| 12 | C2 | 708-2L-23351 | • Guide, Retainer | 1 | Y200001- |
| 13 | C2 | 708-2L-23360 | • Pin | 3 | Y200001- |
| 14 | C2 | 708-2L-33350 | • Retainer, Shoe | 1 | Y200001- |
| 15 | C2 | 708-2L-33430 | • Piston Subassembly | 9 | Y200001- |
| | C2 | 708-2L-06630 | • Cradle Assembly | 1 | Y200001- |
| 16 | C1 | | •• Cradle | 1 | Y200001- |
| 17 | C1 | | •• Cam, Rocker | 1 | Y200001- |
| 18 | C2 | 04020-01228 | • Pin, Dowel | 1 | Y200001- |
| 19 | C2 | 01252-61230 | • Bolt | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001008 Main Piston Pump, Inner Parts (8/11)

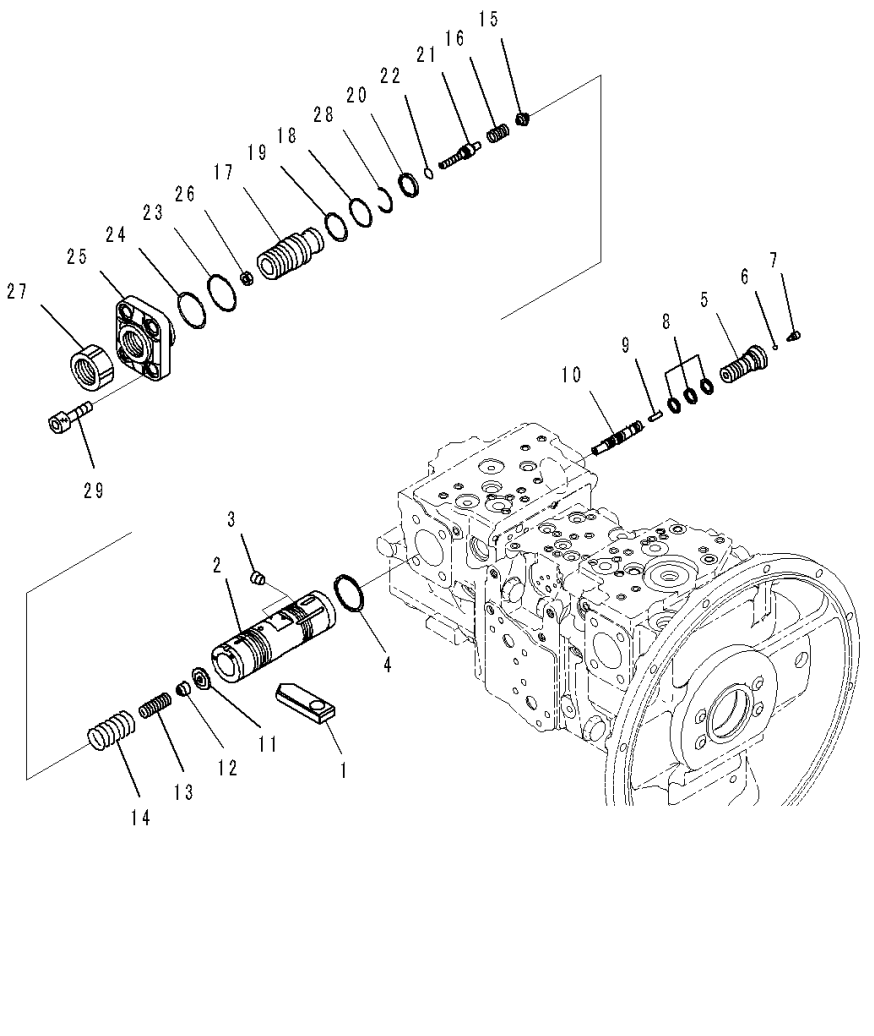


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-01500 | Pump Subassembly | 1 | Y200001- |
| 1 | C2 | 708-2L-34180 | • Slider | 1 | Y200001- |
| | C2 | 708-2L-06650 | • Valve Assembly | 1 | Y200001- |
| | C2 | 708-2L-06660 | •• Piston Assembly, Servo | 1 | Y200001- |
| 2 | C1 | | ••• Piston, Servo. | 1 | Y200001- |
| 3 | C1 | | ••• Screw | 8 | Y200001- |
| 4 | C2 | 708-2L-35680 | •• Seal. | 1 | Y200001- |
| 5 | C2 | 708-2L-35260 | •• Plug. | 1 | Y200001- |
| 6 | C2 | 708-2L-35760 | •• Ball. | 1 | Y200001- |
| 7 | C2 | 708-2L-35770 | •• Plug. | 1 | Y200001- |
| 8 | C2 | 708-2L-35690 | •• Seal. | 3 | Y200001- |
| 9 | C2 | 708-2L-35280 | •• Pin. | 1 | Y200001- |
| 10 | C2 | 708-2L-35860 | •• Spool. | 1 | Y200001- |
| 11 | C2 | 708-2L-35630 | •• Retainer | 1 | Y200001- |
| 12 | C2 | 708-2L-35641 | •• Seat | 1 | Y200001- |
| 13 | C2 | 708-2L-35240 | •• Spring | 1 | Y200001- |
| 14 | C2 | 708-2L-35730 | •• Spring | 1 | Y200001- |
| 15 | C2 | 708-2L-35650 | •• Seat | 1 | Y200001- |
| 16 | C2 | 708-2L-35250 | •• Spring | 1 | Y200001- |
| 17 | C2 | 708-2L-34330 | •• Screw | 1 | Y200001- |
| 18 | C2 | 07000-B3034 | •• O-ring | 1 | Y200001- |
| 19 | C2 | 708-2L-35210 | •• Ring, Back-up | 1 | Y200001- |
| 20 | C2 | 708-2L-35710 | •• Seal | 1 | Y200001- |
| 21 | C2 | 708-2L-35270 | •• Plug | 1 | Y200001- |
| 22 | C2 | 07000-B2011 | •• O-ring | 1 | Y200001- |
| 23 | C2 | 07000-B3045 | •• O-ring | 1 | Y200001- |
| 24 | C2 | 708-2L-35750 | •• Ring | 1 | Y200001- |
| 25 | C2 | 708-2L-34310 | •• Cover | 1 | Y200001- |
| 26 | C2 | 01580-10806 | •• Nut | 1 | Y200001- |
| 27 | C2 | 708-2L-35290 | •• Nut | 1 | Y200001- |
| 28 | C2 | 708-2L-35670 | •• Ring, Wire | 1 | Y200001- |
| 29 | C2 | 01252-61440 | • Bolt, Hexagon Socket Head | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001009 Main Piston Pump, Inner Parts (9/11)

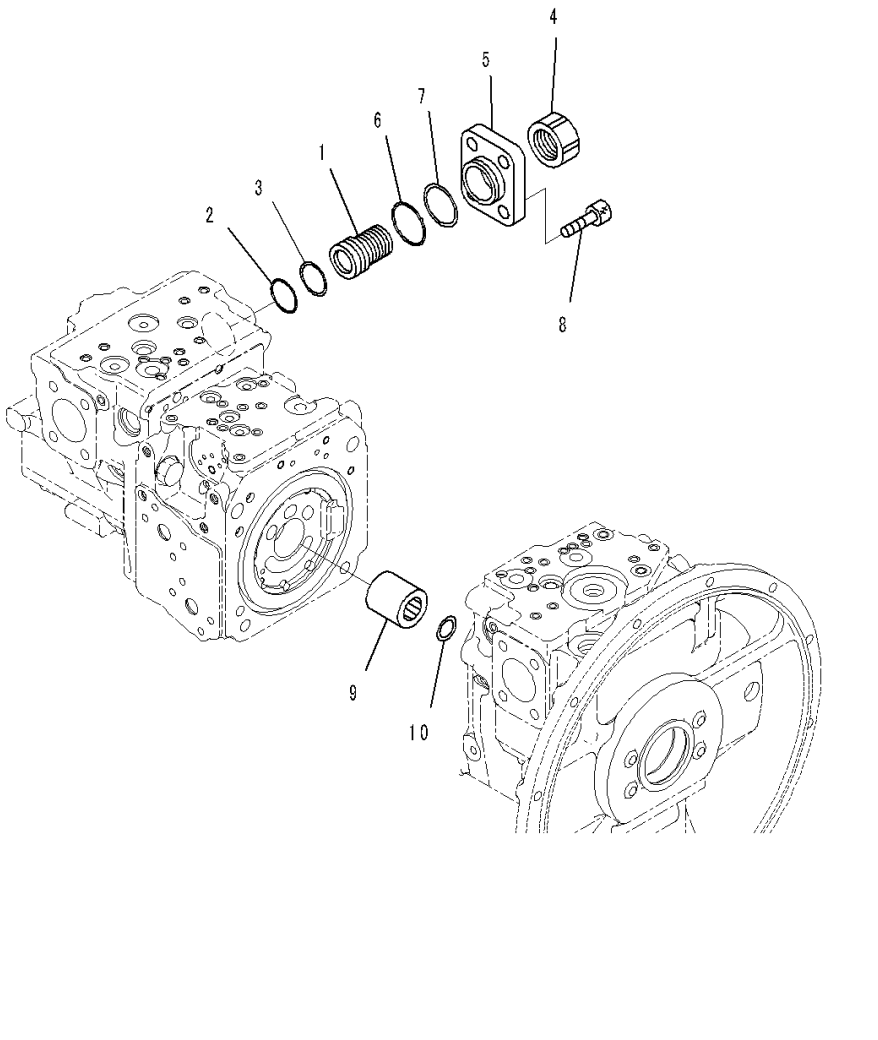


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-01500 | Pump Subassembly | 1 | Y200001- |
| | | 708-2L-06670 | • Cover Assembly | 1 | Y200001- |
| 1 | C2 | 708-2L-34340 | •• Screw | 1 | Y200001- |
| 2 | C2 | 07000-B3034 | •• O-ring | 1 | Y200001- |
| 3 | C2 | 708-2L-35210 | •• Ring, Back-up | 1 | Y200001- |
| 4 | C2 | 708-2L-35290 | •• Nut | 1 | Y200001- |
| 5 | C2 | 708-2L-34320 | •• Cover | 1 | Y200001- |
| 6 | C2 | 07000-B3045 | •• O-ring | 1 | Y200001- |
| 7 | C2 | 708-2L-35750 | •• Ring | 1 | Y200001- |
| 8 | C2 | 01252-61440 | • Bolt, Hexagon Socket Head | 4 | Y200001- |
| 9 | C2 | 708-2L-32180 | • Coupling | 1 | Y200001- |
| 10 | C2 | 708-2L-32190 | • Ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001010 Main Piston Pump, Inner Parts (10/11)

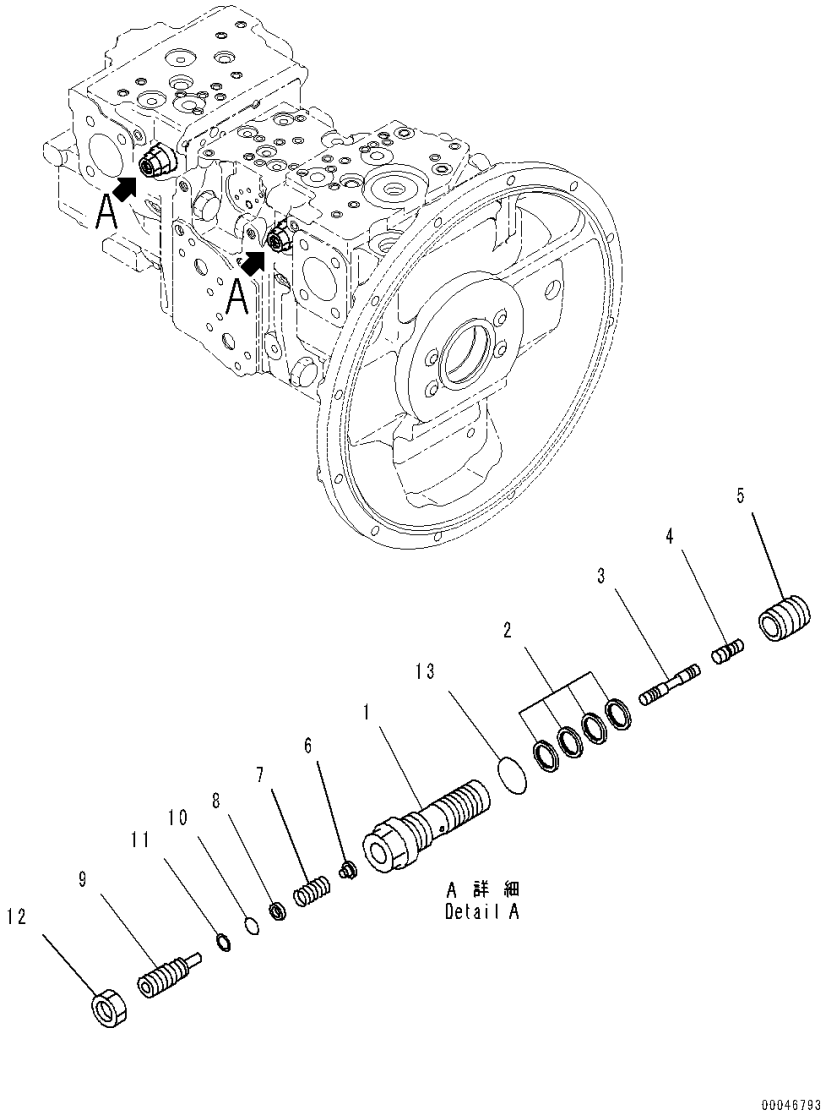


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 708-2L-07710 | Valve Assembly | 2 | Y200001- |
| 1 | C2 | 708-2L-35311 | • Sleeve | 1 | Y200001- |
| 2 | | 708-2L-24680 | • Seal | 4 | Y200001- |
| 3 | C2 | 708-2L-35430 | • Spool | 1 | Y200001- |
| 4 | C2 | 708-2L-28540 | • Piston | 1 | Y200001- |
| 5 | C2 | 708-2L-35360 | • Sleeve | 1 | Y200001- |
| 6 | C2 | 708-2L-35331 | • Seat | 1 | Y200001- |
| 7 | C2 | 708-2L-35880 | • Spring | 1 | Y200001- |
| 8 | C2 | 708-2L-35341 | • Seat | 1 | Y200001- |
| 9 | C2 | 708-2L-35351 | • Plug | 1 | Y200001- |
| 10 | C2 | 07000-B1009 | • O-ring | 1 | Y200001- |
| 11 | C2 | 07001-01009 | • Ring, Back-up | 1 | Y200001- |
| 12 | | 01583-11408 | • Nut | 1 | Y200001- |
| 13 | | 07002-62434 | • O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-001011 Main Piston Pump, Inner Parts (11/11)

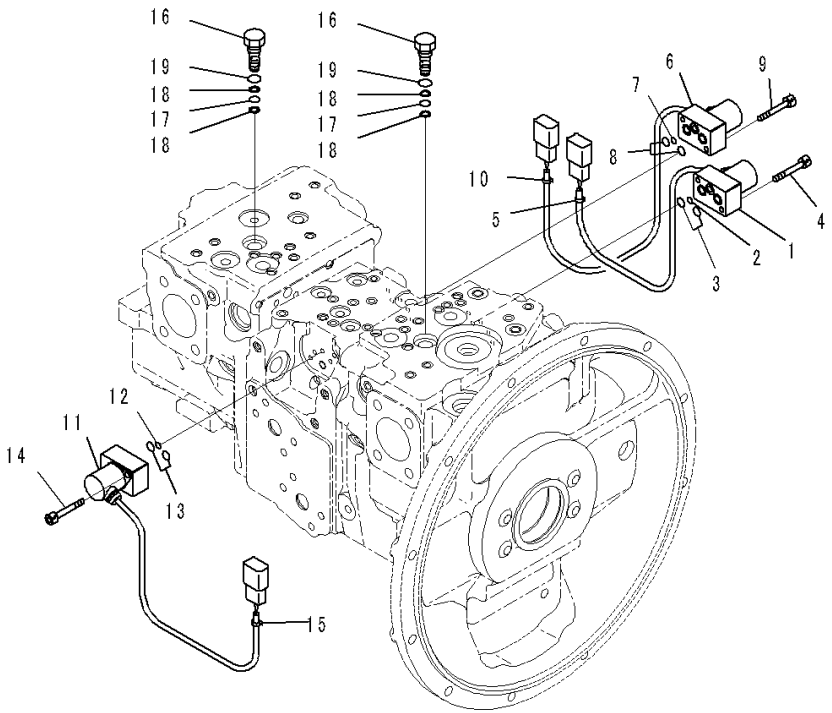


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 702-21-57400 | Valve, Pilot | 1 | Y200001- |
| 2 | | 723-11-19960 | • O-ring | 1 | Y200001- |
| 3 | | 702-21-54910 | • O-ring | 2 | Y200001- |
| 4 | | 01252-60635 | Bolt | 2 | Y200001- |
| 5 | | 20Y-62-22790 | Band, Red | 1 | Y200001- |
| 6 | | 702-21-57400 | Valve, Pilot | 1 | Y200001- |
| 7 | | 723-11-19960 | • O-ring | 1 | Y200001- |
| 8 | | 702-21-54910 | • O-ring | 2 | Y200001- |
| 9 | | 01252-60635 | Bolt | 2 | Y200001- |
| 10 | | 20Y-62-22830 | Band, White | 1 | Y200001- |
| 11 | | 702-21-57400 | Valve, Pilot | 1 | Y200001- |
| 12 | | 723-11-19960 | • O-ring | 1 | Y200001- |
| 13 | | 702-21-54910 | • O-ring | 2 | Y200001- |
| 14 | | 01252-60635 | Bolt | 2 | Y200001- |
| 15 | | 20Y-62-22810 | Band, Yellow | 1 | Y200001- |
| 16 | C2 | 708-2L-35941 | Plug | 2 | Y200001- |
| 17 | | 07000-B1008 | O-ring | 2 | Y200001- |
| 18 | | 07001-01008 | Ring | 4 | Y200001- |
| 19 | | 07002-61423 | O-ring | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-002001 Main Piston Pump

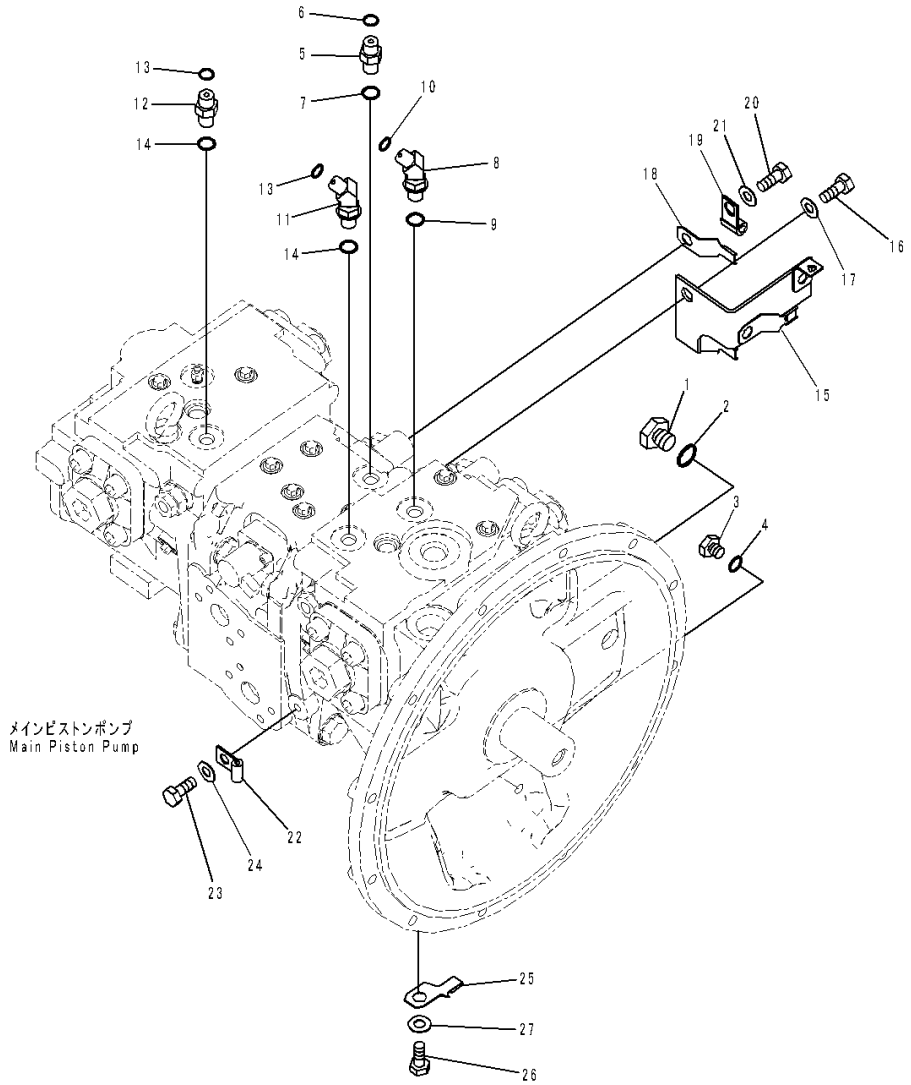


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07040-12412 | Plug | 1 | Y200001- |
| 2 | | 07002-02434 | O-ring | 1 | Y200001- |
| 3 | | 07040-11209 | Plug | 1 | Y200001- |
| 4 | | 07002-11223 | O-ring | 1 | Y200001- |
| 5 | | 11Y-62-12130 | Nipple | 1 | Y200001- |
| 6 | | 02896-11008 | O-ring | 1 | Y200001- |
| 7 | | 07002-11423 | O-ring | 1 | Y200001- |
| 8 | | 11Y-62-12240 | Elbow | 1 | Y200001- |
| 9 | | 07002-11423 | O-ring | 1 | Y200001- |
| 10 | | 02896-11008 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12240 | Elbow | 1 | Y200001- |
| 12 | | 11Y-62-12130 | Nipple | 1 | Y200001- |
| 13 | | 02896-11008 | O-ring | 2 | Y200001- |
| 14 | | 07002-11423 | O-ring | 2 | Y200001- |
| 15 | | 20Y-06-41530 | Bracket | 1 | Y200001- |
| 16 | | 01010-81225 | Bolt | 1 | Y200001- |
| 17 | | 01643-31232 | Washer | 1 | Y200001- |
| 18 | | 08193-21012 | Clip | 1 | Y200001- |
| 19 | | 04434-50812 | Clip | 1 | Y200001- |
| 20 | | 01010-81225 | Bolt | 1 | Y200001- |
| 21 | | 01643-31232 | Washer | 1 | Y200001- |
| 22 | | 04434-50510 | Clip | 1 | Y200001- |
| 23 | | 01010-81020 | Bolt | 1 | Y200001- |
| 24 | | 01643-31032 | Washer | 1 | Y200001- |
| 25 | | 08193-21012 | Clip | 1 | Y200001- |
| 26 | | 01010-81020 | Bolt | 1 | Y200001- |
| 27 | | 01643-31032 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0210-003001 Main Piston Pump, 1-actuator

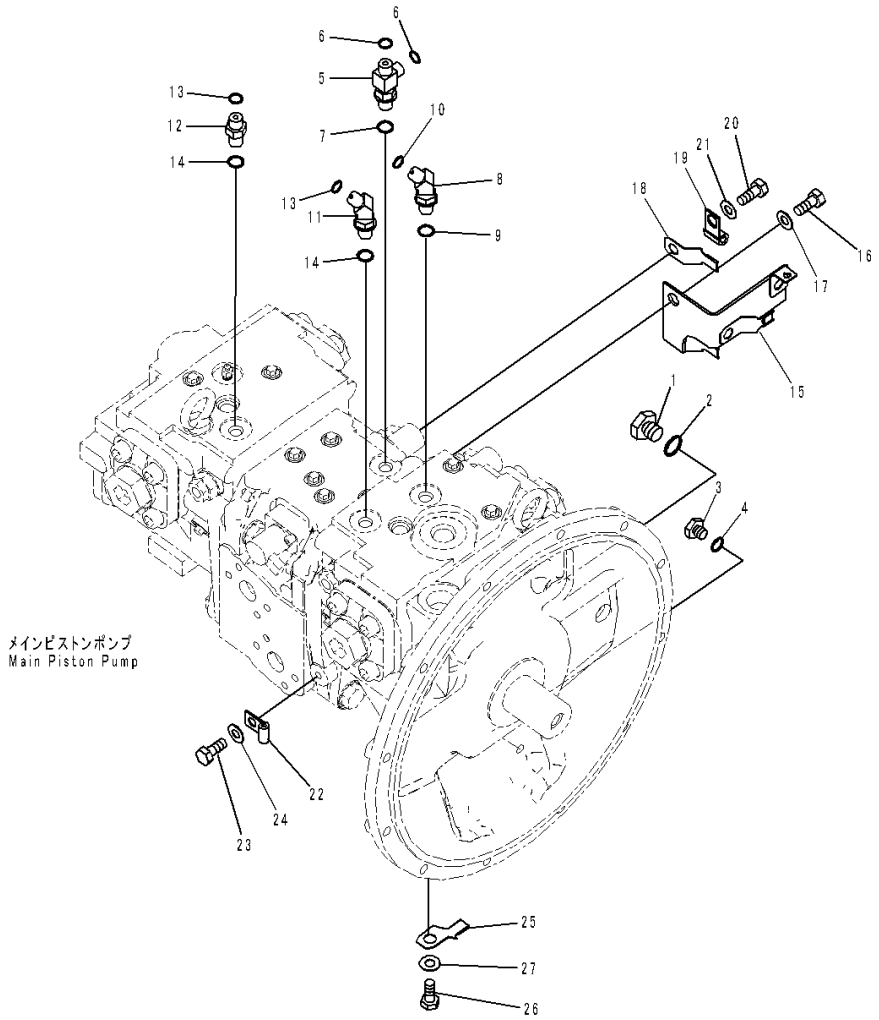


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07040-12412 | Plug | 1 | Y200001- |
| 2 | | 07002-02434 | O-ring | 1 | Y200001- |
| 3 | | 07040-11209 | Plug | 1 | Y200001- |
| 4 | | 07002-11223 | O-ring | 1 | Y200001- |
| 5 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 6 | | 02896-11008 | O-ring | 2 | Y200001- |
| 7 | | 07002-11423 | O-ring | 1 | Y200001- |
| 8 | | 11Y-62-12240 | Elbow | 1 | Y200001- |
| 9 | | 07002-11423 | O-ring | 1 | Y200001- |
| 10 | | 02896-11008 | O-ring | 1 | Y200001- |
| 11 | | 11Y-62-12240 | Elbow | 1 | Y200001- |
| 12 | | 11Y-62-12130 | Nipple | 1 | Y200001- |
| 13 | | 02896-11008 | O-ring | 2 | Y200001- |
| 14 | | 07002-11423 | O-ring | 2 | Y200001- |
| 15 | | 20Y-06-41530 | Bracket | 1 | Y200001- |
| 16 | | 01010-81225 | Bolt | 1 | Y200001- |
| 17 | | 01643-31232 | Washer | 1 | Y200001- |
| 18 | | 08193-21012 | Clip | 1 | Y200001- |
| 19 | | 04434-50812 | Clip | 1 | Y200001- |
| 20 | | 01010-81225 | Bolt | 1 | Y200001- |
| 21 | | 01643-31232 | Washer | 1 | Y200001- |
| 22 | | 04434-50510 | Clip | 1 | Y200001- |
| 23 | | 01010-81020 | Bolt | 1 | Y200001- |
| 24 | | 01643-31032 | Washer | 1 | Y200001- |
| 25 | | 08193-21012 | Clip | 1 | Y200001- |
| 26 | | 01010-81020 | Bolt | 1 | Y200001- |
| 27 | | 01643-31032 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H0311-001001 Suction Piping

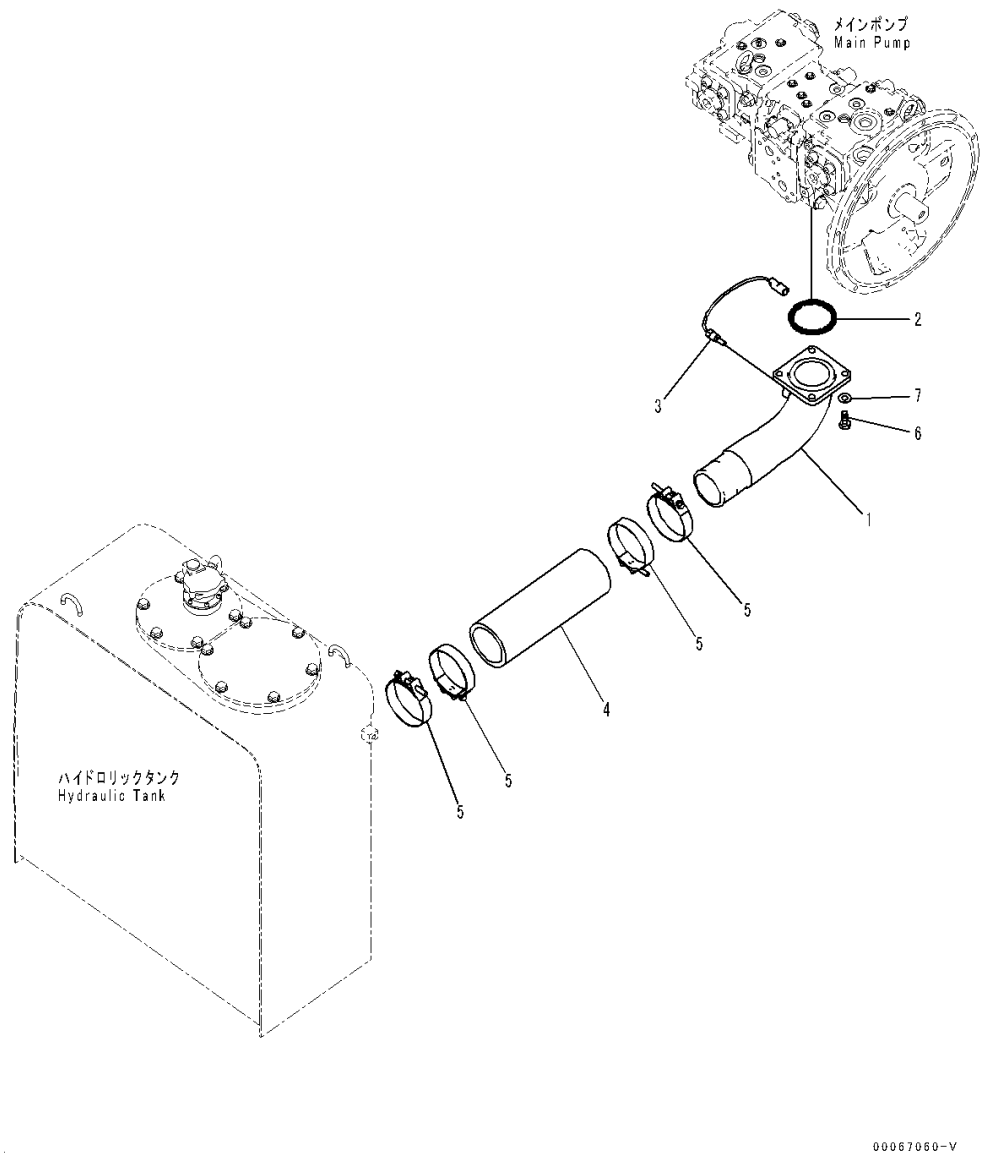


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-41321 | Tube. | 1 | Y200001- |
| 2 | | 07000-12100 | O-ring . | 1 | Y200001- |
| 3 | | 7861-93-3320 | Sensor . | 1 | Y200001- |
| 4 | | 07260-08732 | Hose . | 1 | Y200001- |
| 5 | | 20Y-62-51671 | Clamp . | 4 | Y200001- |
| 6 | | 01010-81235 | Bolt. | 4 | Y200001- |
| 7 | | 01643-31232 | Washer . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H0312-002001 Delivery Piping

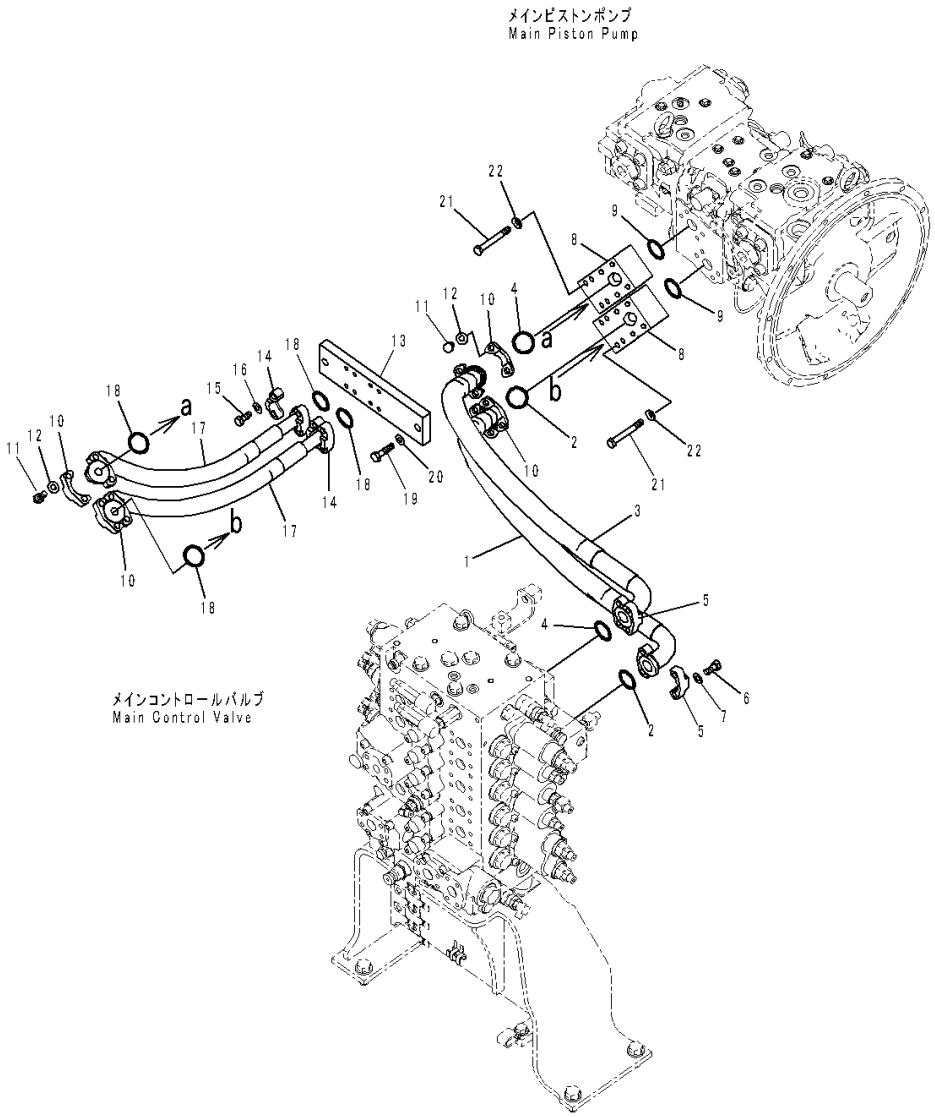


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07084-01AA9 | Hose, Flange Type, L=950mm | 1 | Y200001- |
| 2 | | 07000-13032 | O-ring | 2 | Y200001- |
| 3 | | 20Y-62-52690 | Hose, L=930mm | 1 | Y200001- |
| 4 | | 07000-13032 | O-ring | 2 | Y200001- |
| 5 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 6 | | 07372-21035 | Bolt | 8 | Y200001- |
| 7 | | 01643-51032 | Washer | 8 | Y200001- |
| 8 | | 20Y-62-52790 | Block | 2 | Y200001- |
| 9 | | 07000-13032 | O-ring | 2 | Y200001- |
| 10 | | 07371-31049 | Flange, Split | 8 | Y200001- |
| 11 | | 07372-21035 | Bolt | 16 | Y200001- |
| 12 | | 01643-51032 | Washer | 16 | Y200001- |
| 13 | | 20Y-62-52474 | Bracket | 1 | Y200001- |
| 14 | | 07371-30640 | Flange, Split | 4 | Y200001- |
| 15 | | 07372-21035 | Bolt | 8 | Y200001- |
| 16 | | 01643-51032 | Washer | 8 | Y200001- |
| 17 | | 20Y-62-52461 | Hose, L=750mm | 2 | Y200001- |
| 18 | | 07000-13032 | O-ring | 2 | Y200001- |
| 19 | | 01010-81245 | Bolt | 2 | Y200001- |
| 20 | | 01643-31232 | Washer | 2 | Y200001- |
| 21 | | 01011-81025 | Bolt | 8 | Y200001- |
| 22 | | 01643-31032 | Washer | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. H0312-005001 Delivery Piping, For Fuel Refill Pump, For Webasto Heater

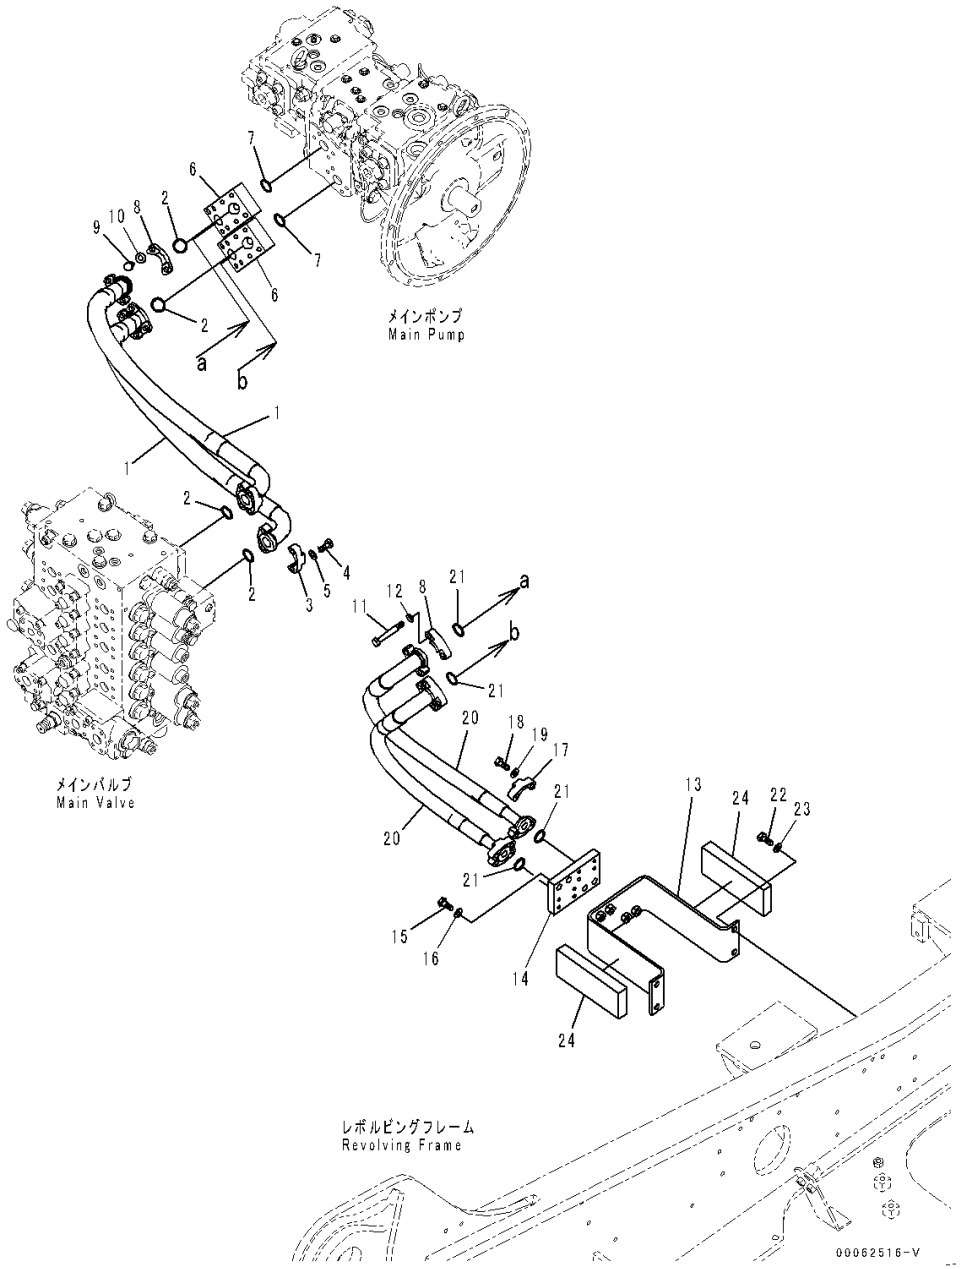


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07084-01AA9 | Hose, Flange Type, L=950mm | 2 | Y200001- |
| 2 | | 07000-13032 | O-ring | 4 | Y200001- |
| 3 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 4 | | 07372-21035 | Bolt | 8 | Y200001- |
| 5 | | 01643-51032 | Washer | 8 | Y200001- |
| 6 | | 20Y-62-52411 | Block | 2 | Y200001- |
| 7 | | 07000-13032 | O-ring | 2 | Y200001- |
| 8 | | 07371-31049 | Flange, Split | 8 | Y200001- |
| 9 | | 07372-21035 | Bolt | 8 | Y200001- |
| 10 | | 01643-51032 | Washer | 8 | Y200001- |
| 11 | | 417-875-1670 | Bolt | 8 | Y200001- |
| 12 | | 01643-51032 | Washer | 8 | Y200001- |
| 13 | | 206-62-21230 | Bracket | 1 | Y200001- |
| 14 | | 20Y-62-52421 | Bracket | 1 | Y200001- |
| 15 | | 01010-81245 | Bolt | 4 | Y200001- |
| 16 | | 01643-31232 | Washer | 4 | Y200001- |
| 17 | | 07371-30640 | Flange, Split | 4 | Y200001- |
| 18 | | 07372-21035 | Bolt | 8 | Y200001- |
| 19 | | 01643-51032 | Washer | 8 | Y200001- |
| 20 | | 20Y-62-52480 | Hose | 2 | Y200001- |
| 21 | | 07000-13032 | O-ring | 2 | Y200001- |
| 22 | | 01010-81225 | Bolt | 4 | Y200001- |
| 23 | | 01643-31232 | Washer | 4 | Y200001- |
| 24 | | 206-62-21250 | Sheet | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0312-004001 Delivery Piping, With In-line Filter

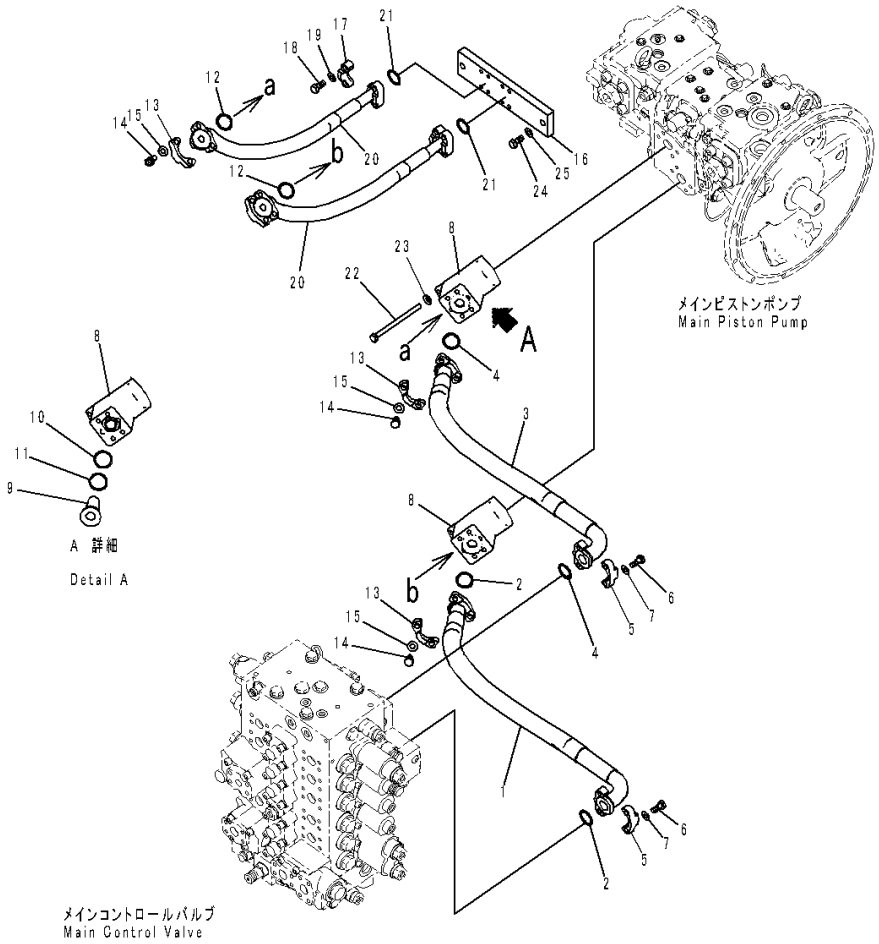


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-51630 | Hose, L=835mm | 1 | Y200001- |
| 2 | | 07000-13032 | O-ring | 2 | Y200001- |
| 3 | | 20Y-62-51640 | Hose, L=810mm | 1 | Y200001- |
| 4 | | 07000-13032 | O-ring | 2 | Y200001- |
| 5 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 6 | | 07372-21035 | Bolt | 8 | Y200001- |
| 7 | | 01643-51032 | Washer | 8 | Y200001- |
| 8 | | 20Y-60-41500 | Filter Assembly | 2 | Y200001- |
| 9 | | 20Y-60-31430 | • Element | 1 | Y200001- |
| 10 | | 07000-12035 | •• O-ring | 1 | Y200001- |
| 11 | | 21K-62-72790 | •• Ring, Back-up | 1 | Y200001- |
| 12 | | 07000-13035 | O-ring | 2 | Y200001- |
| 13 | | 07371-31049 | Flange, Split | 8 | Y200001- |
| 14 | | 07372-21035 | Bolt | 16 | Y200001- |
| 15 | | 01643-51032 | Washer | 16 | Y200001- |
| 16 | | 20Y-62-52474 | Bracket | 1 | Y200001- |
| 17 | | 07371-30640 | Flange, Split | 4 | Y200001- |
| 18 | | 07372-21035 | Bolt | 8 | Y200001- |
| 19 | | 01643-51032 | Washer | 8 | Y200001- |
| 20 | | 20Y-62-52461 | Hose, L=750mm | 2 | Y200001- |
| 21 | | 07000-13032 | O-ring | 2 | Y200001- |
| 22 | | 01011-81040 | Bolt | 8 | Y200001- |
| 23 | | 01643-31032 | Washer | 8 | Y200001- |
| 24 | | 01010-81245 | Bolt | 2 | Y200001- |
| 25 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0320-001001 Oil Cooler Piping

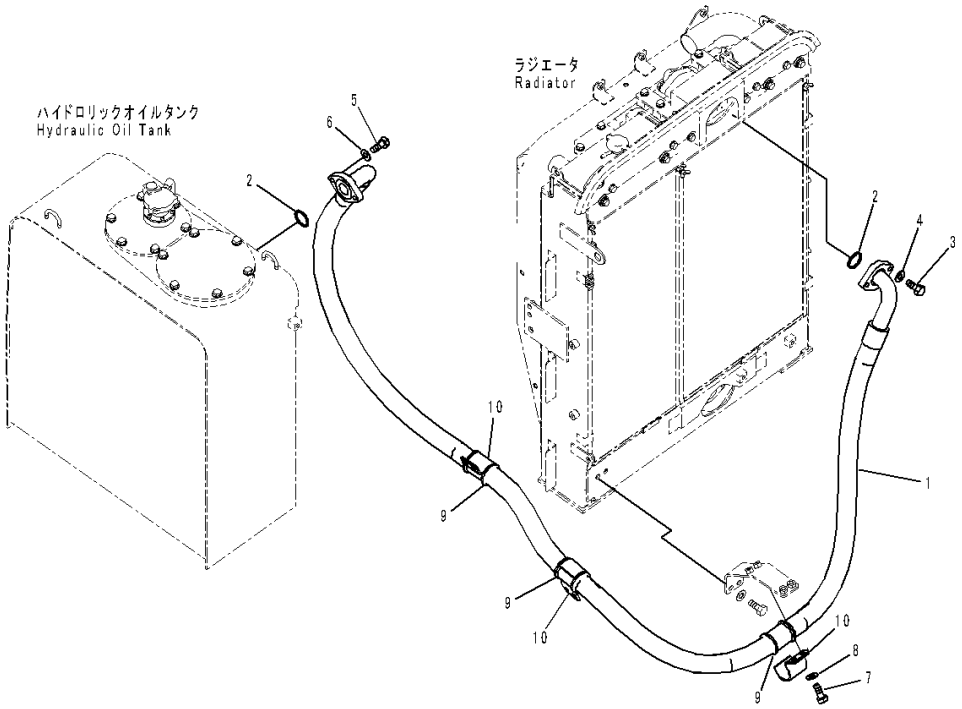


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-62-21171 | Hose | 1 | Y200001- |
| 2 | | 07000-13048 | O-ring | 2 | Y200001- |
| 3 | | 01010-81240 | Bolt | 2 | Y200001- |
| 4 | | 01643-31232 | Washer | 2 | Y200001- |
| 5 | | 01010-81235 | Bolt | 2 | Y200001- |
| 6 | | 01643-31232 | Washer | 2 | Y200001- |
| 7 | | 01010-81225 | Bolt | 6 | Y200001- |
| 8 | | 01643-31232 | Washer | 6 | Y200001- |
| 9 | | 07095-01245 | Cushion | 3 | Y200001- |
| 10 | | 22U-62-21551 | Clamp | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. H0330-001001 Return Piping

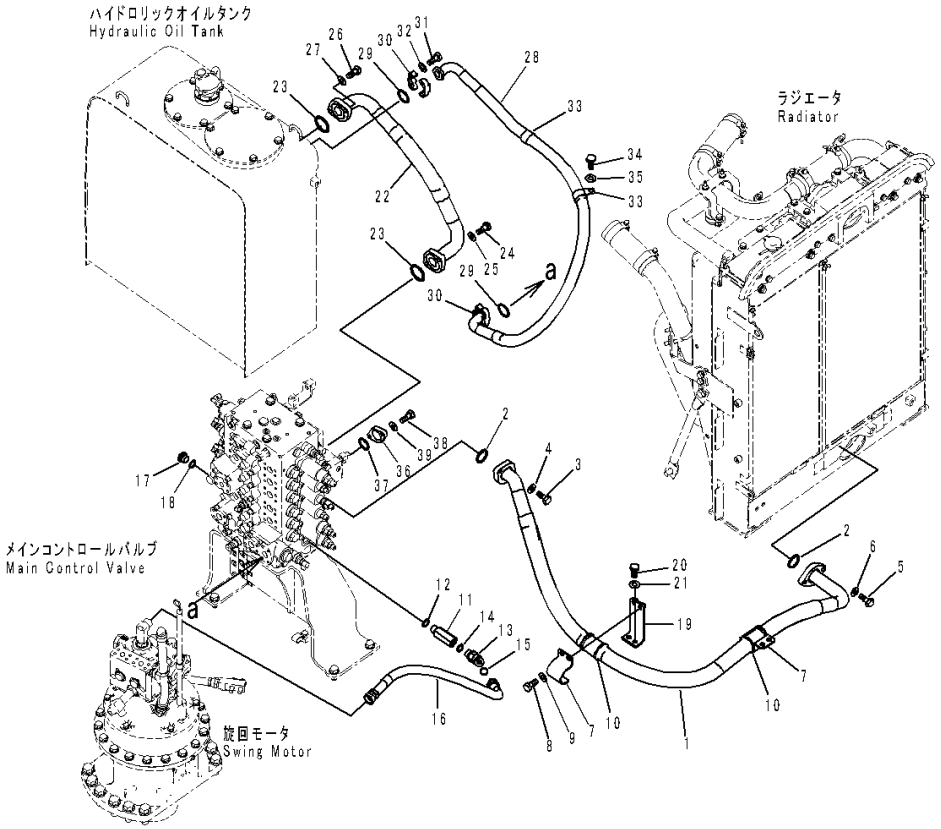


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-62-21181 | Hose, L=1800mm | 1 | Y200001- |
| 2 | | 07000-13048 | O-ring | 2 | Y200001- |
| 3 | | 01010-81240 | Bolt | 2 | Y200001- |
| 4 | | 01643-31232 | Washer | 2 | Y200001- |
| 5 | | 01010-81240 | Bolt | 2 | Y200001- |
| 6 | | 01643-31232 | Washer | 2 | Y200001- |
| 7 | | 22U-62-21551 | Clamp | 2 | Y200001- |
| 8 | | 01010-81225 | Bolt | 4 | Y200001- |
| 9 | | 01643-31232 | Washer | 4 | Y200001- |
| 10 | | 07095-01245 | Cushion | 2 | Y200001- |
| 11 | | 203-62-61410 | Joint | 1 | Y200001- |
| 12 | | 07002-12434 | O-ring | 1 | Y200001- |
| 13 | | 02783-10628 | Elbow | 1 | Y200001- |
| 14 | | 07002-12434 | O-ring | 1 | Y200001- |
| 15 | | 02896-11018 | O-ring | 1 | Y200001- |
| 16 | | 02753-00608 | Hose, Face Seal Type | 1 | Y200001- |
| 17 | | 07040-12412 | Plug | 1 | Y200001- |
| 18 | | 07002-12434 | O-ring | 1 | Y200001- |
| 19 | | 20Y-62-51461 | Bracket | 1 | Y200001- |
| 20 | | 01010-81225 | Bolt | 2 | Y200001- |
| 21 | | 01643-31232 | Washer | 2 | Y200001- |
| 22 | | 20Y-62-51251 | Hose, L=615mm | 1 | Y200001- |
| 23 | | 07000-13048 | O-ring | 2 | Y200001- |
| 24 | | 01010-81240 | Bolt | 2 | Y200001- |
| 25 | | 01643-31232 | Washer | 2 | Y200001- |
| 26 | | 01010-81235 | Bolt | 2 | Y200001- |
| 27 | | 01643-31232 | Washer | 2 | Y200001- |
| 28 | | 20Y-62-51332 | Hose, L=1600mm | 1 | Y200001- |
| 29 | | 07000-13032 | O-ring | 2 | Y200001- |
| 30 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 31 | | 07372-21035 | Bolt | 8 | Y200001- |
| 32 | | 01643-51032 | Washer | 8 | Y200001- |
| 33 | | 281-01-13180 | Clip | 2 | Y200001- |
| 34 | | 01010-81225 | Bolt | 2 | Y200001- |
| 35 | | 01643-31232 | Washer | 2 | Y200001- |
| 36 | | 20Y-62-53160 | Flange | 1 | Y200001- |
| 37 | | 07000-13040 | O-ring | 1 | Y200001- |
| 38 | | 01010-81035 | Bolt | 2 | Y200001- |
| 39 | | 01643-31032 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0330-002001 Return Piping, 1-actuator

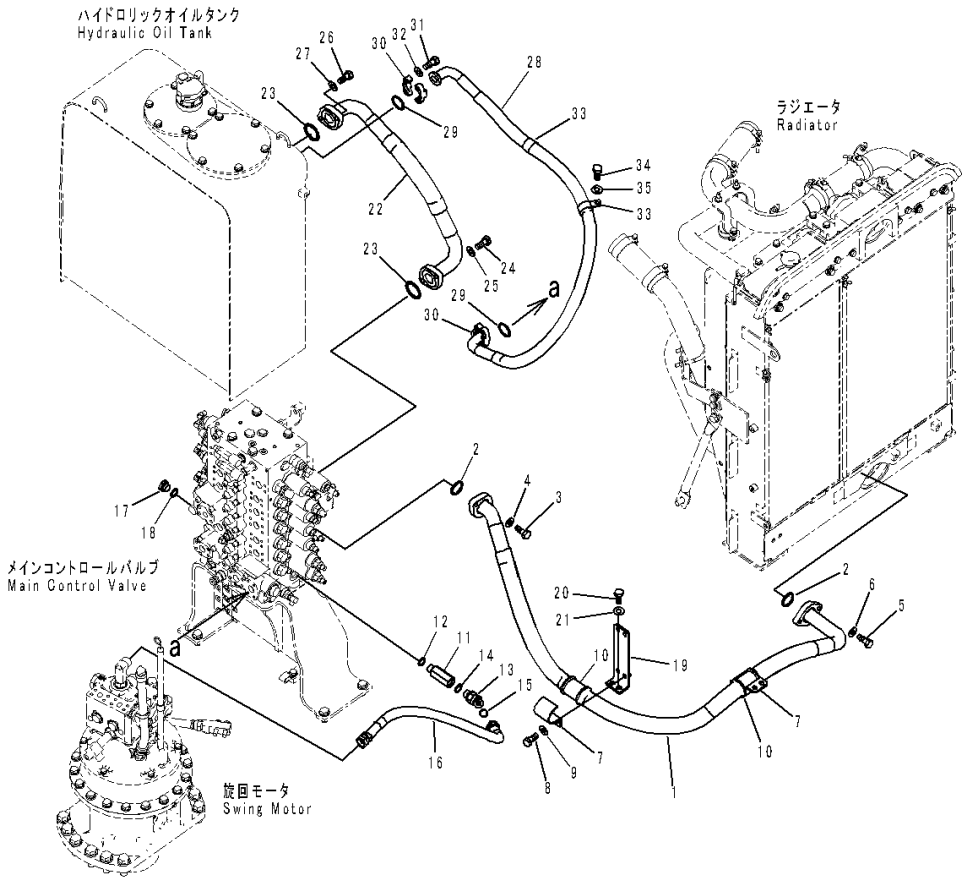


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-62-21181 | Hose, L=1800mm | 1 | Y200001- |
| 2 | | 07000-13048 | O-ring | 2 | Y200001- |
| 3 | | 01010-81240 | Bolt | 2 | Y200001- |
| 4 | | 01643-31232 | Washer | 2 | Y200001- |
| 5 | | 01010-81240 | Bolt | 2 | Y200001- |
| 6 | | 01643-31232 | Washer | 2 | Y200001- |
| 7 | | 22U-62-21551 | Clamp | 2 | Y200001- |
| 8 | | 01010-81225 | Bolt | 4 | Y200001- |
| 9 | | 01643-31232 | Washer | 4 | Y200001- |
| 10 | | 07095-01245 | Cushion | 2 | Y200001- |
| 11 | | 203-62-61410 | Joint | 1 | Y200001- |
| 12 | | 07002-12434 | O-ring | 1 | Y200001- |
| 13 | | 02783-10628 | Elbow | 1 | Y200001- |
| 14 | | 07002-12434 | O-ring | 1 | Y200001- |
| 15 | | 02896-11018 | O-ring | 1 | Y200001- |
| 16 | | 02753-00608 | Hose, Face Seal Type | 1 | Y200001- |
| 17 | | 07040-12412 | Plug | 1 | Y200001- |
| 18 | | 07002-12434 | O-ring | 1 | Y200001- |
| 19 | | 20Y-62-51450 | Bracket | 1 | Y200001- |
| 20 | | 01010-81225 | Bolt | 2 | Y200001- |
| 21 | | 01643-31232 | Washer | 2 | Y200001- |
| 22 | | 20Y-62-51251 | Hose, L=615mm | 1 | Y200001- |
| 23 | | 07000-13048 | O-ring | 2 | Y200001- |
| 24 | | 01010-81240 | Bolt | 2 | Y200001- |
| 25 | | 01643-31232 | Washer | 2 | Y200001- |
| 26 | | 01010-81235 | Bolt | 2 | Y200001- |
| 27 | | 01643-31232 | Washer | 2 | Y200001- |
| 28 | | 20Y-62-51332 | Hose, L=1600mm | 1 | Y200001- |
| 29 | | 07000-13032 | O-ring | 2 | Y200001- |
| 30 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 31 | | 07372-21035 | Bolt | 8 | Y200001- |
| 32 | | 01643-51032 | Washer | 8 | Y200001- |
| 33 | | 281-01-13180 | Clip | 2 | Y200001- |
| 34 | | 01010-81225 | Bolt | 2 | Y200001- |
| 35 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H0340-001001 Drain Piping

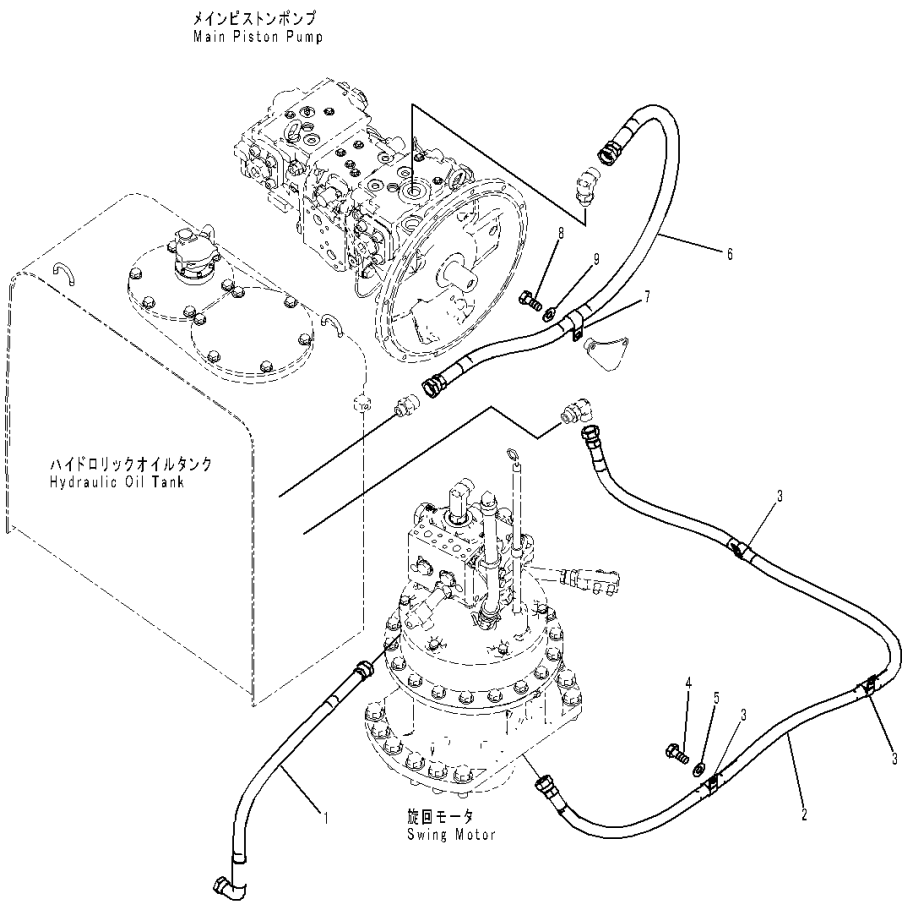


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 02763-00508 | Hose, Face Seal Type | 1 | Y200001- |
| 2 | | 20Y-62-42471 | Hose, L=2200mm | 1 | Y200001- |
| 3 | | 04434-52312 | Clip | 3 | Y200001- |
| 4 | | 01010-81225 | Bolt | 3 | Y200001- |
| 5 | | 01643-31232 | Washer | 3 | Y200001- |
| 6 | | 20Y-62-43870 | Hose, L=1300mm | 1 | Y200001- |
| 7 | | 04434-52712 | Clip | 1 | Y200001- |
| 8 | | 01010-81225 | Bolt | 1 | Y200001- |
| 9 | | 01643-31232 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H1210-001001 Boom Piping

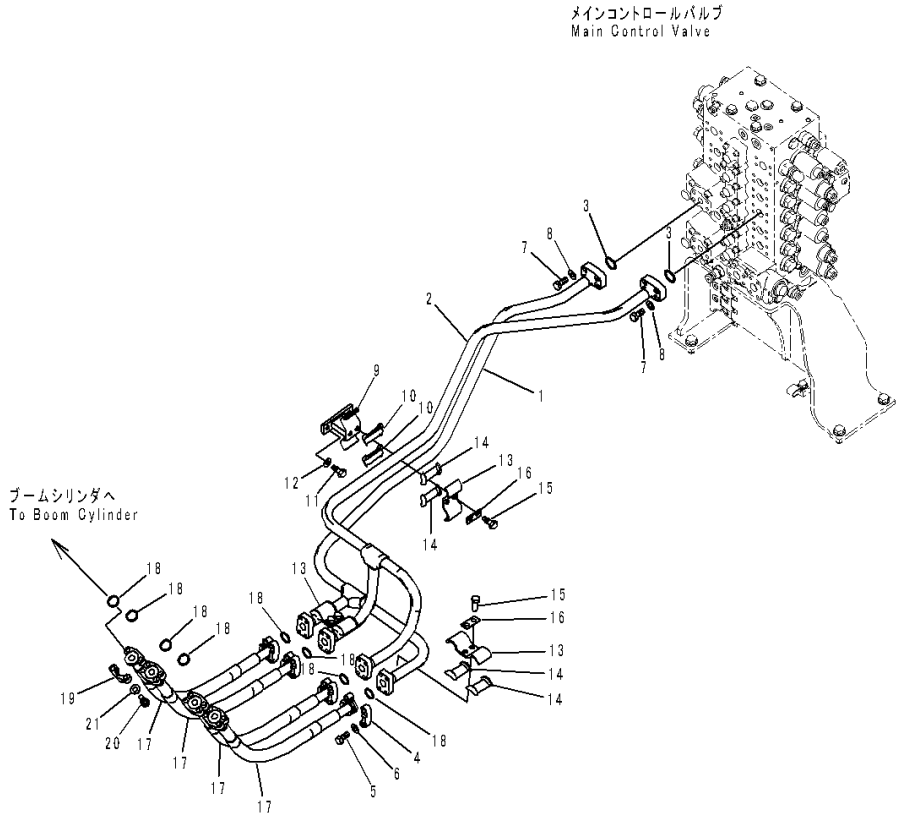


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-41140 | Tube | 1 | Y200001- |
| 2 | | 20Y-62-41150 | Tube | 1 | Y200001- |
| 3 | | 07000-13032 | O-ring | 2 | Y200001- |
| 4 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 5 | | 07372-21035 | Bolt | 16 | Y200001- |
| 6 | | 01643-51032 | Washer | 16 | Y200001- |
| 7 | | 07372-21040 | Bolt | 8 | Y200001- |
| 8 | | 01643-51032 | Washer | 8 | Y200001- |
| 9 | | 20Y-62-41281 | Clamp | 1 | Y200001- |
| 10 | | 20Y-62-13760 | • Seat | 2 | Y200001- |
| 11 | | 01010-81235 | Bolt | 2 | Y200001- |
| 12 | | 01643-31232 | Washer | 2 | Y200001- |
| 13 | | 20Y-62-13230 | Clamp | 3 | Y200001- |
| 14 | | 20Y-62-13760 | • Seat | 2 | Y200001- |
| 15 | | 01010-81235 | Bolt | 6 | Y200001- |
| 16 | | 20Y-62-13450 | Plate | 3 | Y200001- |
| 17 | | 20Y-62-17480 | Hose | 4 | Y200001- |
| 18 | | 07000-13025 | O-ring | 8 | Y200001- |
| 19 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 20 | | 07372-21035 | Bolt | 16 | Y200001- |
| 21 | | 01643-51032 | Washer | 16 | Y200001- |

https://truckmanualshub.com/


# FIG. H1220-001001 Arm And Bucket Piping

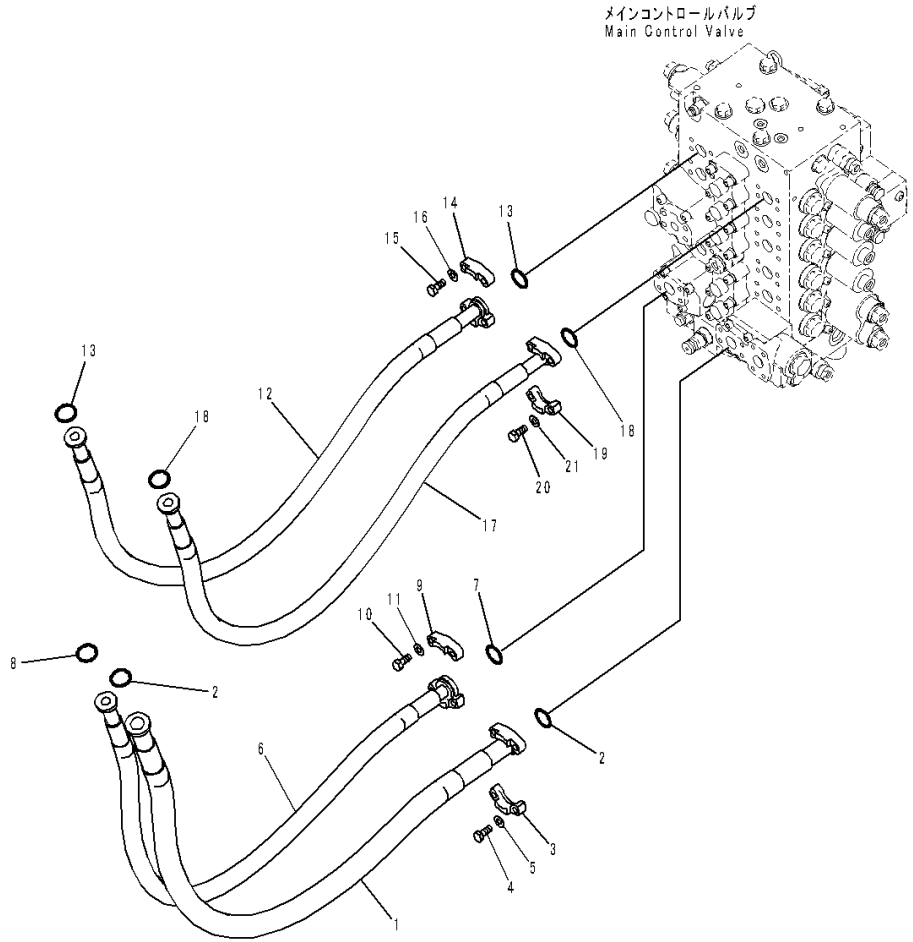


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-51240 | Hose | 1 | Y200001- |
| 2 | | 07000-13032 | O-ring | 2 | Y200001- |
| 3 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 4 | | 07372-21035 | Bolt | 4 | Y200001- |
| 5 | | 01643-51032 | Washer | 4 | Y200001- |
| 6 | | 20Y-62-51230 | Hose | 1 | Y200001- |
| 7 | | 07000-13025 | O-ring | 1 | Y200001- |
| 8 | | 07000-13032 | O-ring | 1 | Y200001- |
| 9 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 10 | | 07372-21035 | Bolt | 4 | Y200001- |
| 11 | | 01643-51032 | Washer | 4 | Y200001- |
| 12 | | 20Y-62-41181 | Hose | 1 | Y200001- |
| 13 | | 07000-13025 | O-ring | 2 | Y200001- |
| 14 | | 07371-30640 | Flange, Split | 2 | Y200001- |
| 15 | | 07372-21035 | Bolt | 4 | Y200001- |
| 16 | | 01643-51032 | Washer | 4 | Y200001- |
| 17 | | 20Y-62-41181 | Hose | 1 | Y200001- |
| 18 | | 07000-13025 | O-ring | 2 | Y200001- |
| 19 | | 07371-30640 | Flange, Split | 2 | Y200001- |
| 20 | | 07372-21035 | Bolt | 4 | Y200001- |
| 21 | | 01643-51032 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H1220-002001 Arm And Bucket Piping, With Arm Holding Valve

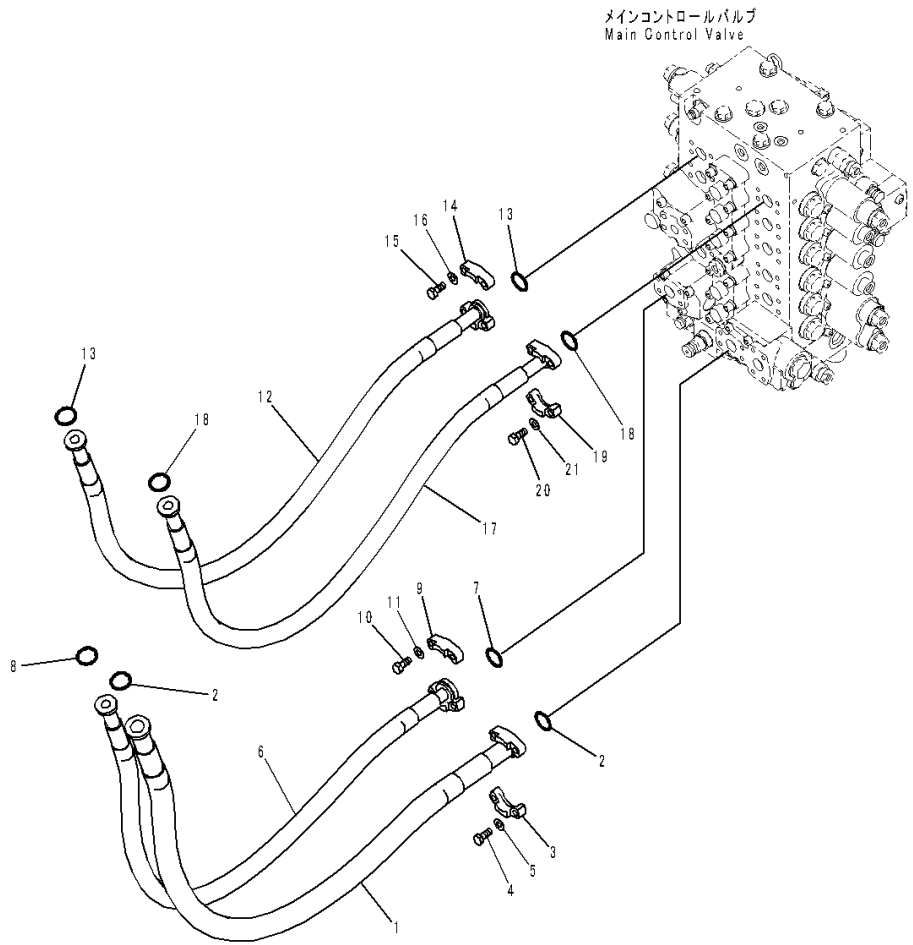


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-51240 | Hose | 1 | Y200001- |
| 2 | | 07000-13032 | O-ring | 2 | Y200001- |
| 3 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 4 | | 07372-21035 | Bolt | 4 | Y200001- |
| 5 | | 01643-51032 | Washer | 4 | Y200001- |
| 6 | | 20Y-62-41860 | Hose | 1 | Y200001- |
| 7 | | 07000-13025 | O-ring | 1 | Y200001- |
| 8 | | 07000-13032 | O-ring | 1 | Y200001- |
| 9 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 10 | | 07372-21035 | Bolt | 4 | Y200001- |
| 11 | | 01643-51032 | Washer | 4 | Y200001- |
| 12 | | 20Y-62-41181 | Hose | 1 | Y200001- |
| 13 | | 07000-13025 | O-ring | 2 | Y200001- |
| 14 | | 07371-30640 | Flange, Split | 2 | Y200001- |
| 15 | | 07372-21035 | Bolt | 4 | Y200001- |
| 16 | | 01643-51032 | Washer | 4 | Y200001- |
| 17 | | 20Y-62-41181 | Hose | 1 | Y200001- |
| 18 | | 07000-13025 | O-ring | 2 | Y200001- |
| 19 | | 07371-30640 | Flange, Split | 2 | Y200001- |
| 20 | | 07372-21035 | Bolt | 4 | Y200001- |
| 21 | | 01643-51032 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H1240-001001 Hydraulic drift prevention valve, Arm

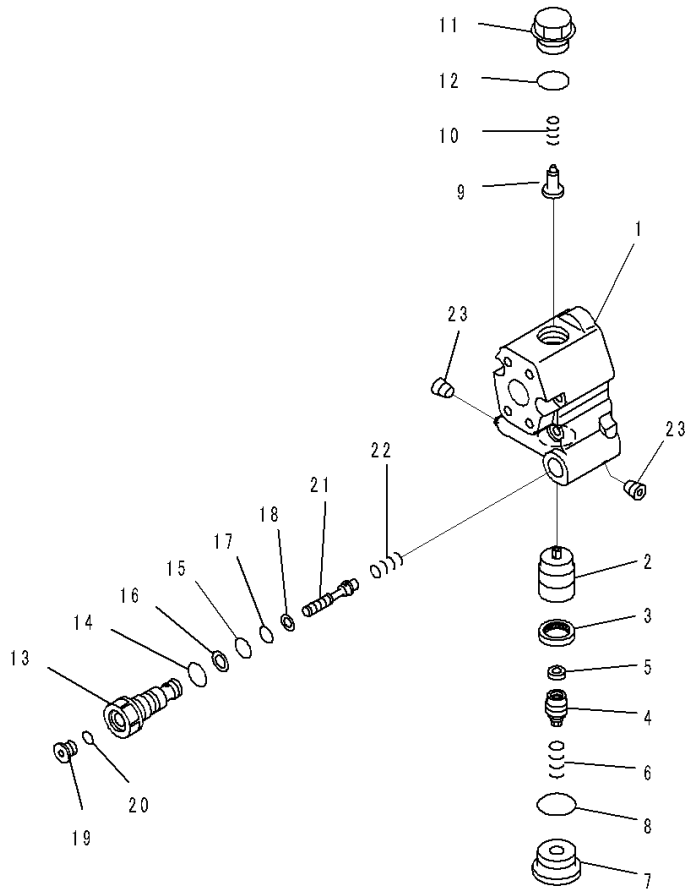


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 723-40-82601 | Lock Assembly, Steering Axle | 1 | Y200001- |
| 1 | C1 | | • Body | 1 | Y200001- |
| 2 | C1 | | • Valve | 1 | Y200001- |
| 3 | C1 | | • Seal | 1 | Y200001- |
| 4 | C1 | | • Plug | 1 | Y200001- |
| 5 | C1 | | • Filter | 1 | Y200001- |
| 6 | C1 | | • Spring | 1 | Y200001- |
| 7 | C1 | | • Plug | 1 | Y200001- |
| 8 | | 07002-13334 | • O-ring | 1 | Y200001- |
| 9 | | 723-40-84420 | • Valve, Check | 1 | Y200001- |
| 10 | | 723-40-84430 | • Spring | 1 | Y200001- |
| 11 | C1 | | • Plug | 1 | Y200001- |
| 12 | | 07000-13024 | • O-ring | 1 | Y200001- |
| 13 | C1 | | • Plug | 1 | Y200001- |
| 14 | | 07002-11823 | • O-ring | 1 | Y200001- |
| 15 | | 07000-12011 | • O-ring | 1 | Y200001- |
| 16 | | 07001-02011 | • Ring, Back-up | 1 | Y200001- |
| 17 | | 07000-11010 | • O-ring | 1 | Y200001- |
| 18 | | 07001-01010 | • Ring, Back-up | 1 | Y200001- |
| 19 | | 723-11-18190 | • Plug | 1 | Y200001- |
| 20 | | 07002-11023 | • O-ring | 1 | Y200001- |
| 21 | C1 | | • Piston | 1 | Y200001- |
| 22 | C1 | | • Spring | 1 | Y200001- |
| 23 | C1 | | • Plug | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H1240-001002 Hydraulic drift prevention valve, Arm, Mounting Parts

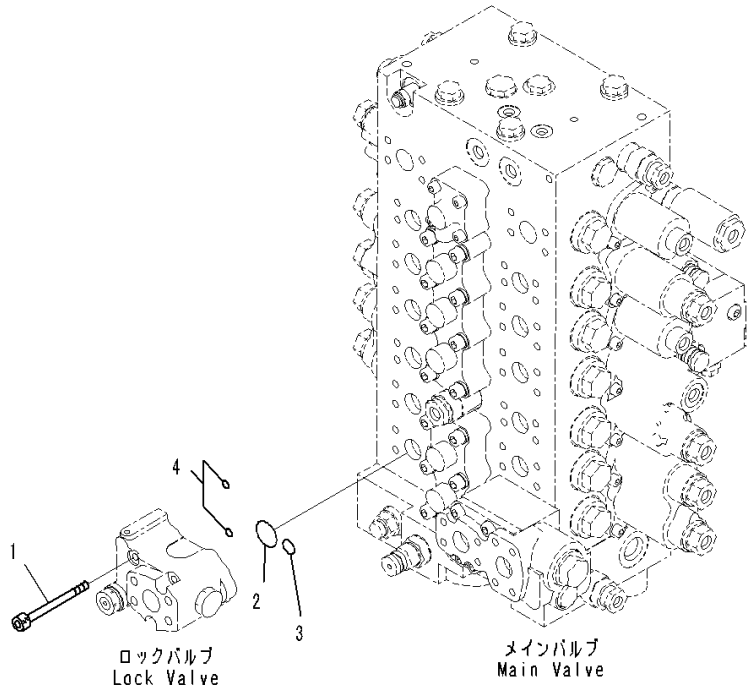


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01252-61075 | Bolt, Hexagon Socket Head | 4 | Y200001- |
| 2 | | 07000-13032 | O-ring | 1 | Y200001- |
| 3 | | 07000-12021 | O-ring | 1 | Y200001- |
| 4 | | 702-16-53920 | O-ring | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H1270-009001 Actuator Piping, Main Piping, LHS

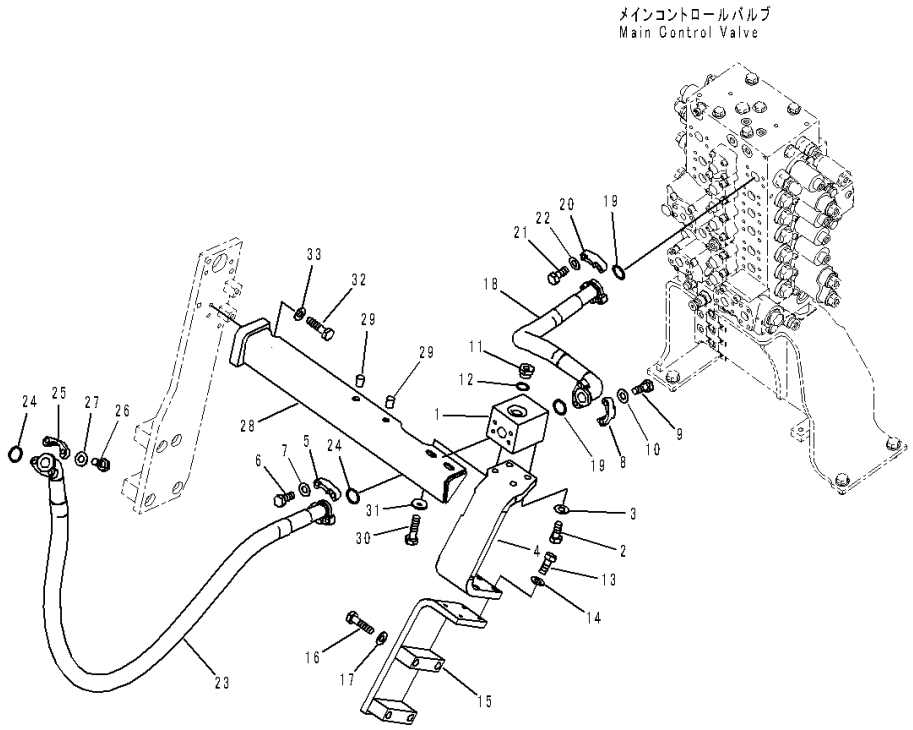


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | For Breaker Adapter | | | |
| | | 1-actuator | | | |
| 1 | | 20Y-62-51580 | Block | 1 | Y200001- |
| 2 | | 01010-81240 | Bolt | 2 | Y200001- |
| 3 | | 01643-31232 | Washer | 2 | Y200001- |
| 4 | | 20Y-62-43222 | Bracket | 1 | Y200001- |
| 5 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 6 | | 07372-21035 | Bolt | 4 | Y200001- |
| 7 | | 01643-51032 | Washer | 4 | Y200001- |
| 8 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 9 | | 07372-21035 | Bolt | 4 | Y200001- |
| 10 | | 01643-51032 | Washer | 4 | Y200001- |
| 11 | | 07040-12412 | Plug | 1 | Y200001- |
| 12 | | 07002-12434 | O-ring | 1 | Y200001- |
| 13 | | 01010-81240 | Bolt | 4 | Y200001- |
| 14 | | 01643-31232 | Washer | 4 | Y200001- |
| 15 | | 20Y-62-51760 | Bracket | 1 | Y200001- |
| 16 | | 01010-81285 | Bolt | 4 | Y200001- |
| 17 | | 01643-31232 | Washer | 4 | Y200001- |
| 18 | | 07098-01007 | Hose, Flange Type, L=700mm | 1 | Y200001- |
| 19 | | 07000-13032 | O-ring | 2 | Y200001- |
| 20 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 21 | | 07372-21035 | Bolt | 4 | Y200001- |
| 22 | | 01643-51032 | Washer | 4 | Y200001- |
| 23 | | 07097-21016 | Hose, Flange Type | 1 | Y200001- |
| 24 | | 07000-13032 | O-ring | 2 | Y200001- |
| 25 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 26 | | 07372-21035 | Bolt | 4 | Y200001- |
| 27 | | 01643-51032 | Washer | 4 | Y200001- |
| 28 | | 20Y-62-51181 | Frame | 1 | Y200001- |
| 29 | | 07049-01215 | Plug | 2 | Y200001- |
| 30 | | 01010-81250 | Bolt | 2 | Y200001- |
| 31 | | 175-54-34170 | Washer | 2 | Y200001- |
| 32 | | 01010-81250 | Bolt | 2 | Y200001- |
| 33 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/

# FIG. H1270-009002 Actuator Piping, Shift Pattern Selector Valve

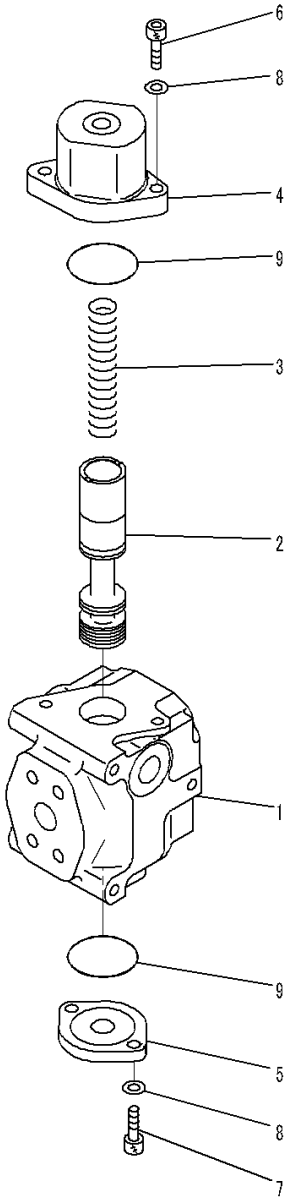



JD021691

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | For Breaker Adapter 1-actuator | | | |
| | | For Quick Coupler | | | |
| | | 702-21-01910 | Valve Assembly . | 1 | Y200001- |
| 1 | C1 | | • Block. | 1 | Y200001- |
| 2 | C1 | | • Spool | 1 | Y200001- |
| 3 | | 702-21-11930 | • Spring | 1 | Y200001- |
| 4 | | 702-21-11940 | • Case | 1 | Y200001- |
| 5 | | 709-10-91240 | • Flange | 1 | Y200001- |
| 6 | | 01252-61040 | • Bolt | 2 | Y200001- |
| 7 | | 01252-61030 | • Bolt, Hexagon Socket Head | 2 | Y200001- |
| 8 | | 01643-51032 | • Washer | 4 | Y200001- |
| 9 | | 07000-12055 | • O-ring | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H1270-009003 Actuator Piping, For Breaker Adapter, Main Piping, RHS

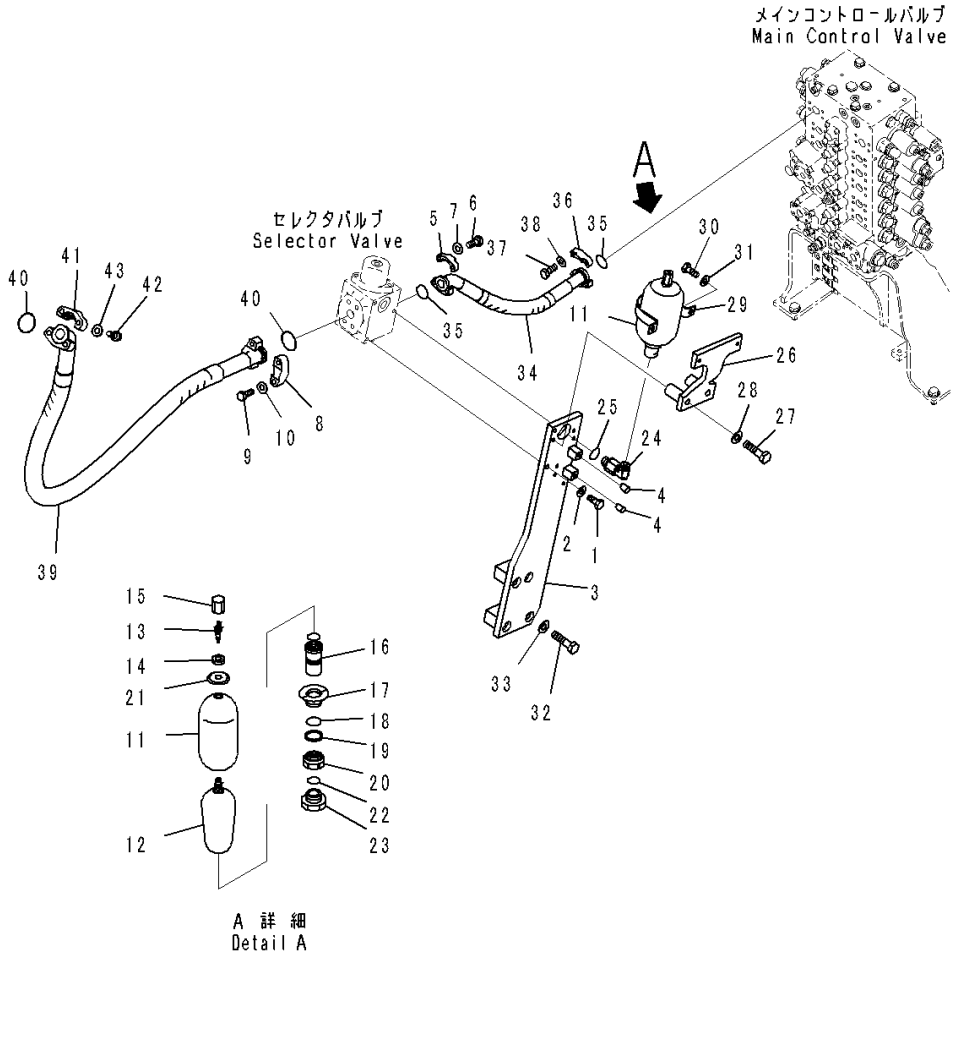


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01010-81040 | Bolt | 3 | Y200001- |
| 2 | | 01643-31032 | Washer | 3 | Y200001- |
| 3 | | 20Y-62-51771 | Bracket | 1 | Y200001- |
| 4 | | 07049-01215 | Plug | 2 | Y200001- |
| 5 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 6 | | 07372-21035 | Bolt | 4 | Y200001- |
| 7 | | 01643-51032 | Washer | 4 | Y200001- |
| 8 | | 07371-51260 | Flange | 2 | Y200001- |
| 9 | | 01010-81245 | Bolt | 4 | Y200001- |
| 10 | | 01643-31232 | Washer | 4 | Y200001- |
| | | 20Y-970-6450 | Accumulator Assembly | 1 | Y200001- |
| 11 | C1 | | • Shell | 1 | Y200001- |
| | | NFEB3401 A1 | • Bleeder Assembly | 1 | Y200001- |
| 12 | | NFEB3026 A1 | •• Bleeder | 1 | Y200001- |
| 13 | | NFEB4475 Z0 | •• Core | 1 | Y200001- |
| 14 | C1 | | • Nut | 1 | Y200001- |
| 15 | | DUMMY-KIP3058 | • Cap | 1 | Y200001- |
| 16 | | NFEB0427 Z0 | • Body Assembly | 1 | Y200001- |
| 17 | | NFEB4477 Z0 | • Ring | 1 | Y200001- |
| 18 | C1 | | • O-ring | 1 | Y200001- |
| 19 | C1 | | • Ring, Back-up | 1 | Y200001- |
| 20 | C1 | | • Ring | 1 | Y200001- |
| 21 | C1 | | • Plate | 1 | Y200001- |
| 22 | | 205-970-5560 | • O-ring | 1 | Y200001- |
| 23 | C1 | | • Bushing | 1 | Y200001- |
| 24 | | 20Y-62-43290 | Elbow | 1 | Y200001- |
| 25 | | 07002-12434 | O-ring | 1 | Y200001- |
| 26 | | 20Y-62-43280 | Bracket | 1 | Y200001- |
| 27 | | 01010-81295 | Bolt | 2 | Y200001- |
| 28 | | 01643-31232 | Washer | 2 | Y200001- |
| 29 | | 175-61-51750 | Plate | 1 | Y200001- |
| 30 | | 01010-81225 | Bolt | 2 | Y200001- |
| 31 | | 01643-31232 | Washer | 2 | Y200001- |
| 32 | | 01010-81285 | Bolt | 4 | Y200001- |
| 33 | | 01643-31232 | Washer | 4 | Y200001- |
| 34 | | 07097-01005 | Hose, Flange Type, L=500mm | 1 | Y200001- |
| 35 | | 07000-13032 | O-ring | 2 | Y200001- |
| 36 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 37 | | 07372-21035 | Bolt | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H1270-009003 Actuator Piping, For Breaker Adapter, Main Piping, RHS

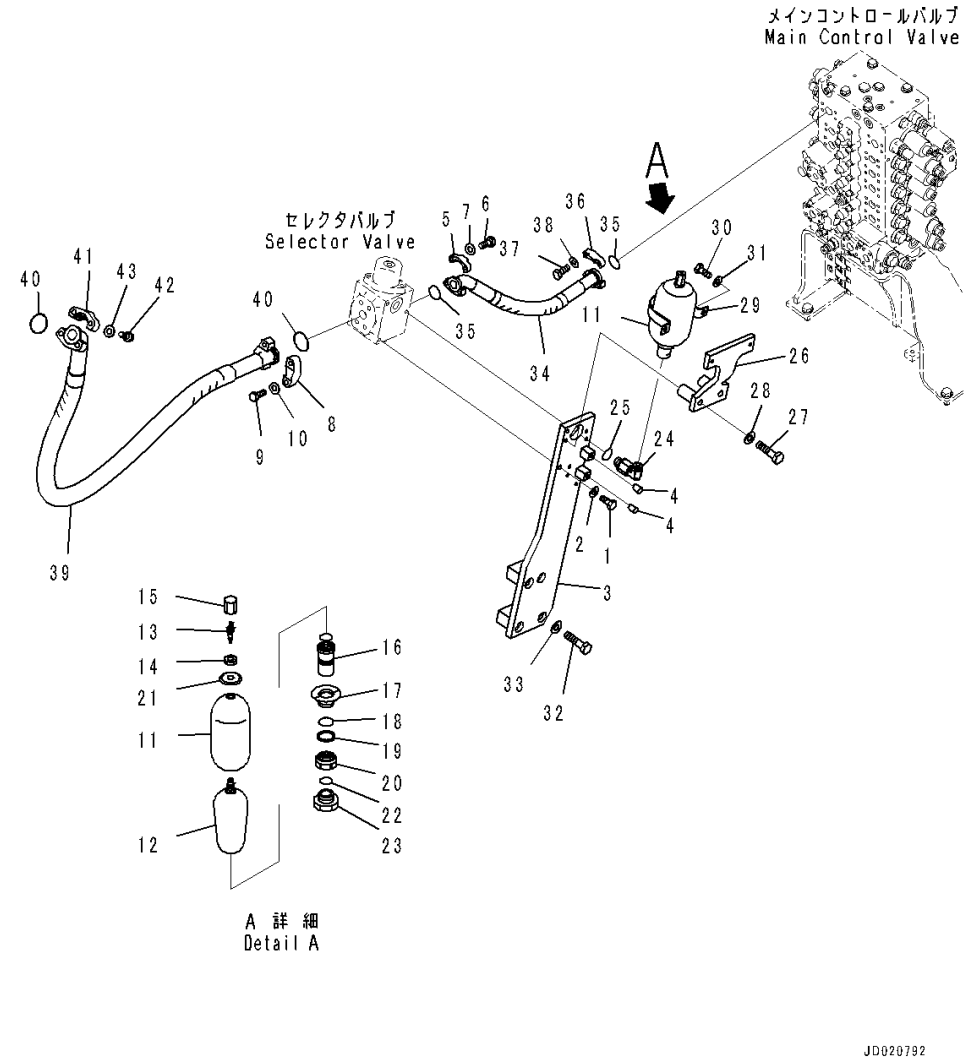


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | 01643-51032 | Washer | 4 | Y200001- |
| 39 | | 07097-21217 | Hose, Flange Type | 1 | Y200001- |
| 40 | | 07000-13038 | O-ring | 2 | Y200001- |
| 41 | | 07371-51260 | Flange | 2 | Y200001- |
| 42 | | 01010-81245 | Bolt | 4 | Y200001- |
| 43 | | 01643-31232 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H1270-009004 Actuator Piping, Return Piping

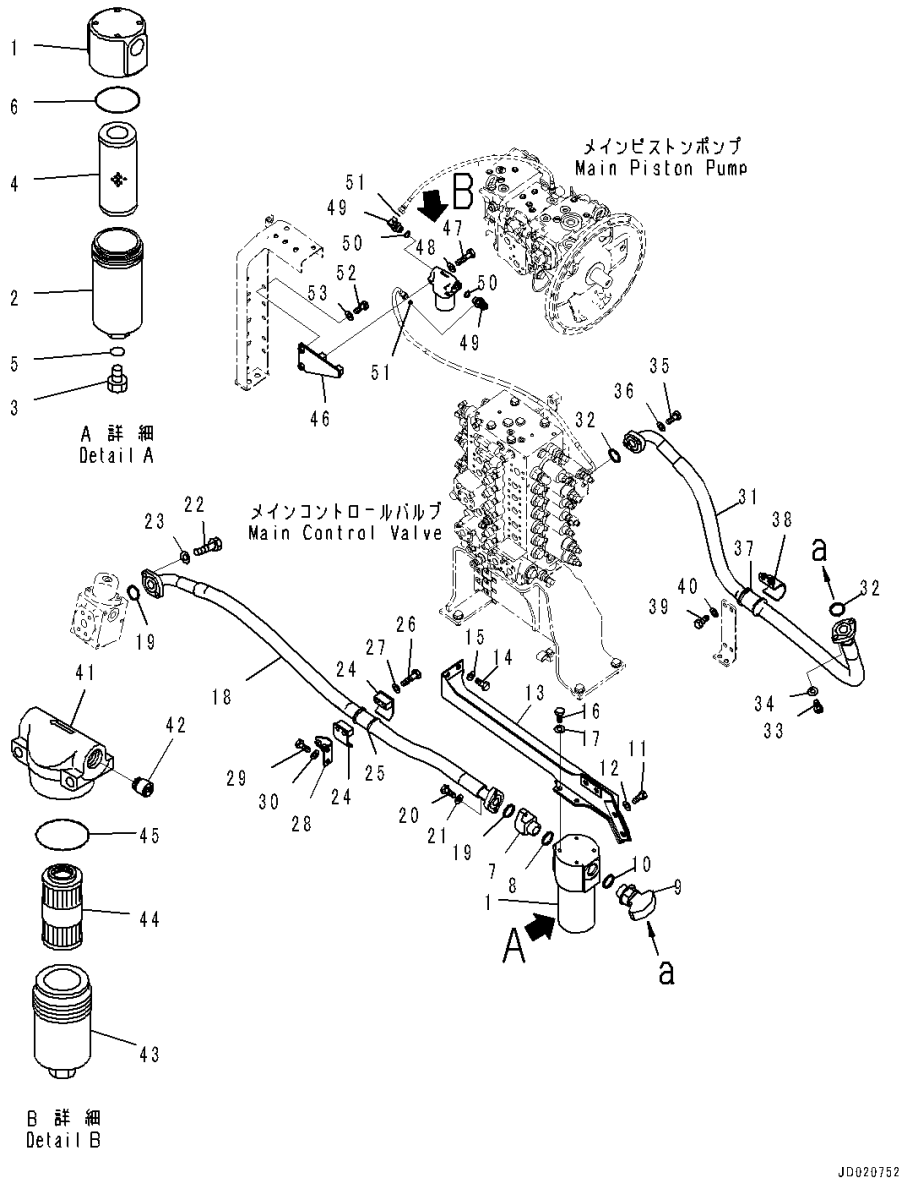


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | For Breaker Adapter 1-actuator | | | |
| | | 20Y-970-2700 | Filter | 1 | Y200001- |
| 1 | C1 | | • Head | 1 | Y200001- |
| 2 | C1 | | • Case | 1 | Y200001- |
| 3 | C1 | | • Plug | 1 | Y200001- |
| 4 | | 20Y-970-1820 | • Filter | 1 | Y200001- |
| | | 07000-13050 | •• O-ring | 1 | Y200001- |
| 5 | | 07000-12014 | • O-ring | 1 | Y200001- |
| 6 | | 07000-12115 | • O-ring | 1 | Y200001- |
| 7 | | 20Y-62-43351 | Flange | 1 | Y200001- |
| 8 | | 07002-14234 | O-ring | 1 | Y200001- |
| 9 | | 20Y-62-43361 | Elbow | 1 | Y200001- |
| 10 | | 07002-14234 | O-ring | 1 | Y200001- |
| 11 | | 01010-81230 | Bolt | 4 | Y200001- |
| 12 | | 01643-31232 | Washer | 4 | Y200001- |
| 13 | | 20Y-62-51280 | Frame | 1 | Y200001- |
| 14 | | 01010-81225 | Bolt | 2 | Y200001- |
| 15 | | 01643-31232 | Washer | 2 | Y200001- |
| 16 | | 01010-81230 | Bolt | 4 | Y200001- |
| 17 | | 01643-31232 | Washer | 4 | Y200001- |
| 18 | | 20Y-62-43311 | Hose | 1 | Y200001- |
| 19 | | 07000-13038 | O-ring | 2 | Y200001- |
| 20 | | 01010-81035 | Bolt | 2 | Y200001- |
| 21 | | 01643-31032 | Washer | 2 | Y200001- |
| 22 | | 01010-81035 | Bolt | 2 | Y200001- |
| 23 | | 01643-31032 | Washer | 2 | Y200001- |
| 24 | | 07094-11024 | Clamp | 2 | Y200001- |
| 25 | | 07095-01038 | Cushion | 1 | Y200001- |
| 26 | | 01010-81280 | Bolt | 2 | Y200001- |
| 27 | | 01643-31232 | Washer | 2 | Y200001- |
| 28 | | 20Y-62-43320 | Bracket | 1 | Y200001- |
| 29 | | 01010-81225 | Bolt | 2 | Y200001- |
| 30 | | 01643-31232 | Washer | 2 | Y200001- |
| 31 | | 20Y-62-51321 | Hose, L=1850mm | 1 | Y200001- |
| 32 | | 07000-13038 | O-ring | 2 | Y200001- |
| 33 | | 01010-81035 | Bolt | 2 | Y200001- |
| 34 | | 01643-31032 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H1270-009004 Actuator Piping, Return Piping

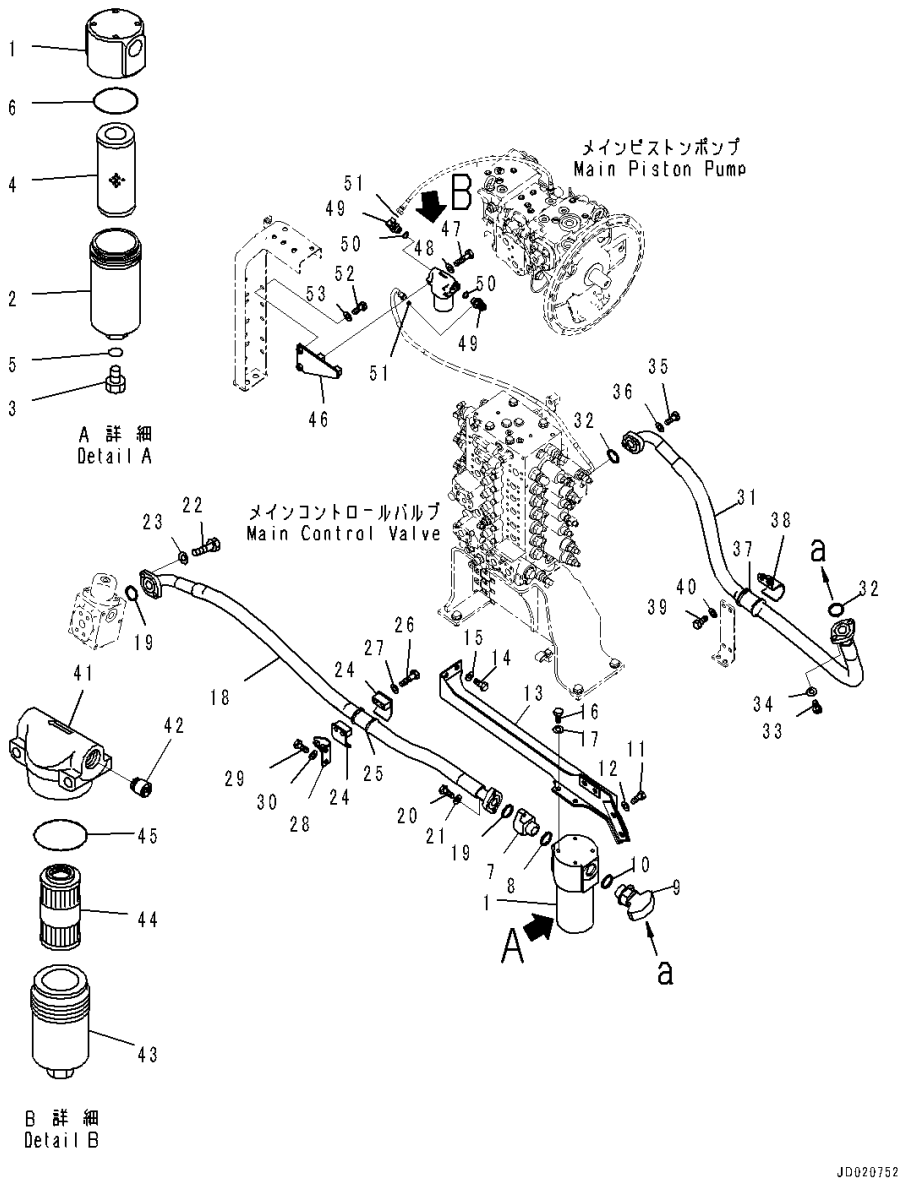


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 35 | | 01010-81040 | Bolt | 2 | Y200001- |
| 36 | | 01643-31032 | Washer | 2 | Y200001- |
| 37 | | 07095-01241 | Cushion | 1 | Y200001- |
| 38 | | 21K-62-72810 | Clamp | 1 | Y200001- |
| 39 | | 01010-81225 | Bolt | 2 | Y200001- |
| 40 | | 01643-31232 | Washer | 2 | Y200001- |
| | | 20Y-62-51681 | Filter Assembly | 1 | Y200001- |
| 41 | C1 | | • Filter Assembly | 1 | Y200001- |
| 42 | C1 | | • Filter Assembly | 1 | Y200001- |
| 43 | C1 | | • Filter Assembly | 1 | Y200001- |
| 44 | | 20Y-62-51691 | • Filter | 1 | Y200001- |
| 45 | | 706-76-71390 | • O-ring | 1 | Y200001- |
| 46 | | 20Y-62-51781 | Bracket | 1 | Y200001- |
| 47 | | 01010-81075 | Bolt | 2 | Y200001- |
| 48 | | 01643-31032 | Washer | 2 | Y200001- |
| 49 | | 02782-10214 | Elbow | 2 | Y200001- |
| 50 | | 07002-12034 | O-ring | 2 | Y200001- |
| 51 | | 02896-11008 | O-ring | 2 | Y200001- |
| 52 | | 01010-81225 | Bolt | 2 | Y200001- |
| 53 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H1270-008003 Actuator Piping, 1-actuator, Main Piping, RHS

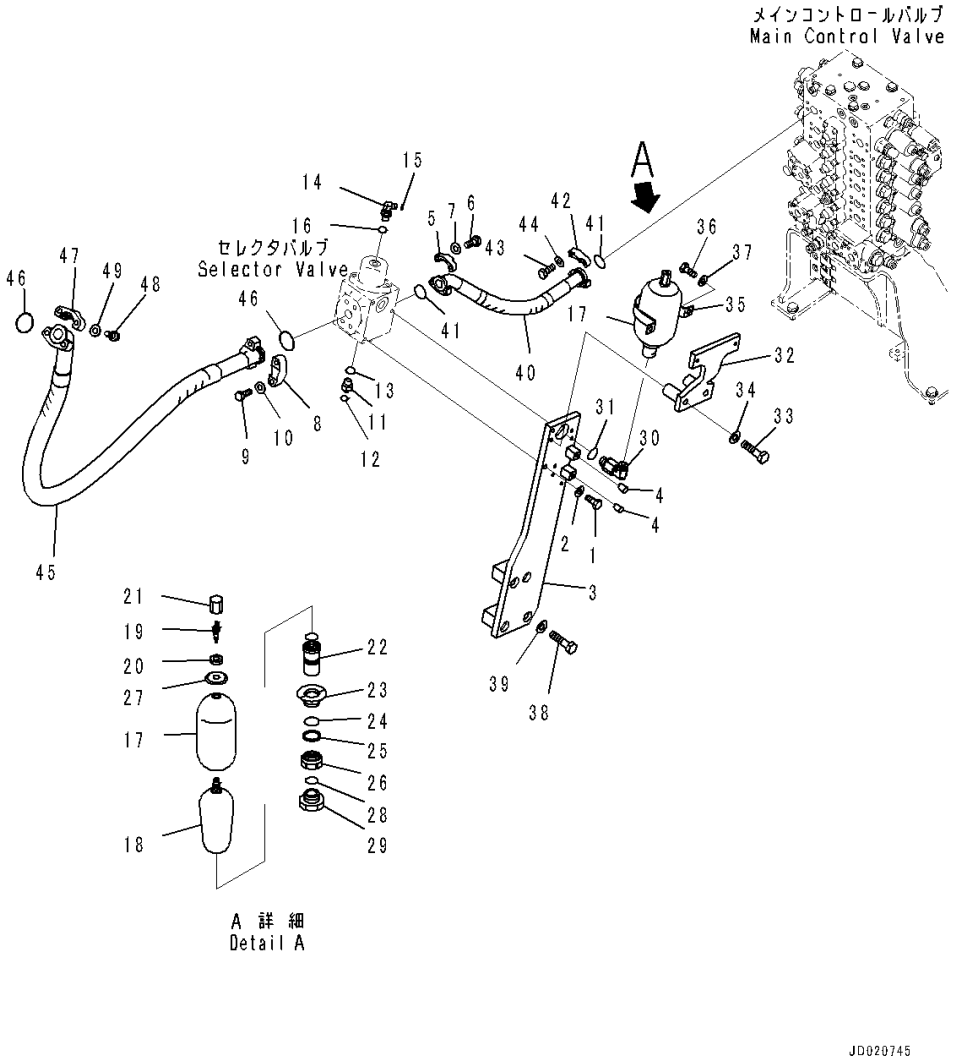


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01010-81040 | Bolt | 3 | Y200001- |
| 2 | | 01643-31032 | Washer | 3 | Y200001- |
| 3 | | 20Y-62-51771 | Bracket | 1 | Y200001- |
| 4 | | 07049-01215 | Plug | 2 | Y200001- |
| 5 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 6 | | 07372-21035 | Bolt | 4 | Y200001- |
| 7 | | 01643-51032 | Washer | 4 | Y200001- |
| 8 | | 07371-51260 | Flange | 2 | Y200001- |
| 9 | | 01010-81245 | Bolt | 4 | Y200001- |
| 10 | | 01643-31232 | Washer | 4 | Y200001- |
| 11 | | 20Y-62-43460 | Nipple | 1 | Y200001- |
| 12 | | 02896-11008 | O-ring | 1 | Y200001- |
| 13 | | 07002-12034 | O-ring | 1 | Y200001- |
| 14 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 15 | | 02896-11008 | O-ring | 1 | Y200001- |
| 16 | | 07002-11423 | O-ring | 1 | Y200001- |
| | | 20Y-970-6450 | Accumulator Assembly | 1 | Y200001- |
| 17 | C1 | | • Shell | 1 | Y200001- |
| | | NFEB3401 A1 | • Bleeder Assembly | 1 | Y200001- |
| 18 | | NFEB3026 A1 | •• Bleeder | 1 | Y200001- |
| 19 | | NFEB4475 Z0 | •• Core | 1 | Y200001- |
| 20 | C1 | | • Nut | 1 | Y200001- |
| 21 | C1 | | • Cap | 1 | Y200001- |
| 22 | | NFEB0427 Z0 | • Body Assembly | 1 | Y200001- |
| 23 | | NFEB4477 Z0 | • Ring | 1 | Y200001- |
| 24 | C1 | | • O-ring | 1 | Y200001- |
| 25 | C1 | | • Ring, Back-up | 1 | Y200001- |
| 26 | C1 | | • Ring | 1 | Y200001- |
| 27 | C1 | | • Plate | 1 | Y200001- |
| 28 | | 205-970-5560 | • O-ring | 1 | Y200001- |
| 29 | C1 | | • Bushing | 1 | Y200001- |
| 30 | | 20Y-62-43290 | Elbow | 1 | Y200001- |
| 31 | | 07002-12434 | O-ring | 1 | Y200001- |
| 32 | | 20Y-62-43280 | Bracket | 1 | Y200001- |
| 33 | | 01010-81295 | Bolt | 2 | Y200001- |
| 34 | | 01643-31232 | Washer | 2 | Y200001- |
| 35 | | 175-61-51750 | Plate | 1 | Y200001- |
| 36 | | 01010-81225 | Bolt | 2 | Y200001- |
| 37 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H1270-008003 Actuator Piping, 1-actuator, Main Piping, RHS

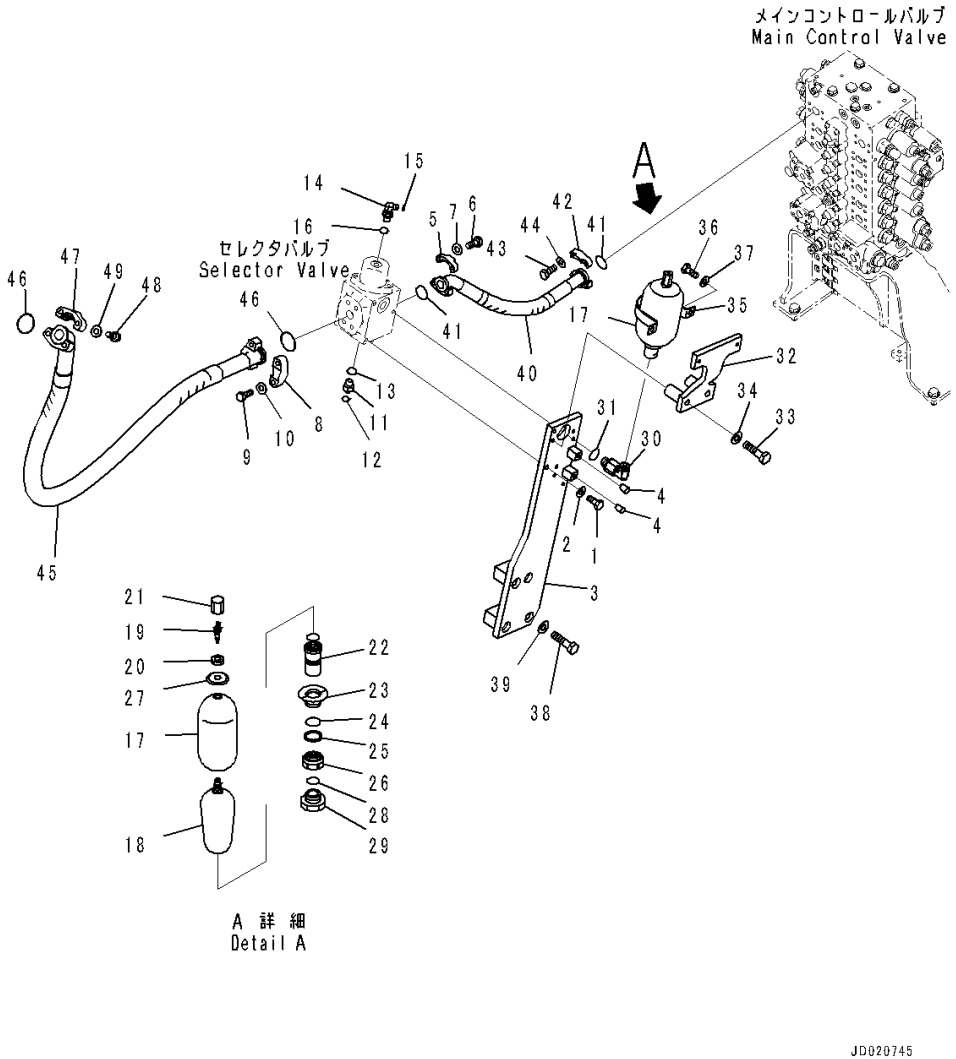


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | 01010-81285 | Bolt | 4 | Y200001- |
| 39 | | 01643-31232 | Washer | 4 | Y200001- |
| 40 | | 07097-01005 | Hose, Flange Type, L=500mm | 1 | Y200001- |
| 41 | | 07000-13032 | O-ring | 2 | Y200001- |
| 42 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 43 | | 07372-21035 | Bolt | 4 | Y200001- |
| 44 | | 01643-51032 | Washer | 4 | Y200001- |
| 45 | | 07097-21217 | Hose, Flange Type | 1 | Y200001- |
| 46 | | 07000-13038 | O-ring | 2 | Y200001- |
| 47 | | 07371-51260 | Flange | 2 | Y200001- |
| 48 | | 01010-81245 | Bolt | 4 | Y200001- |
| 49 | | 01643-31232 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. H1272-001001 Additional Actuator Piping, 2-actuator

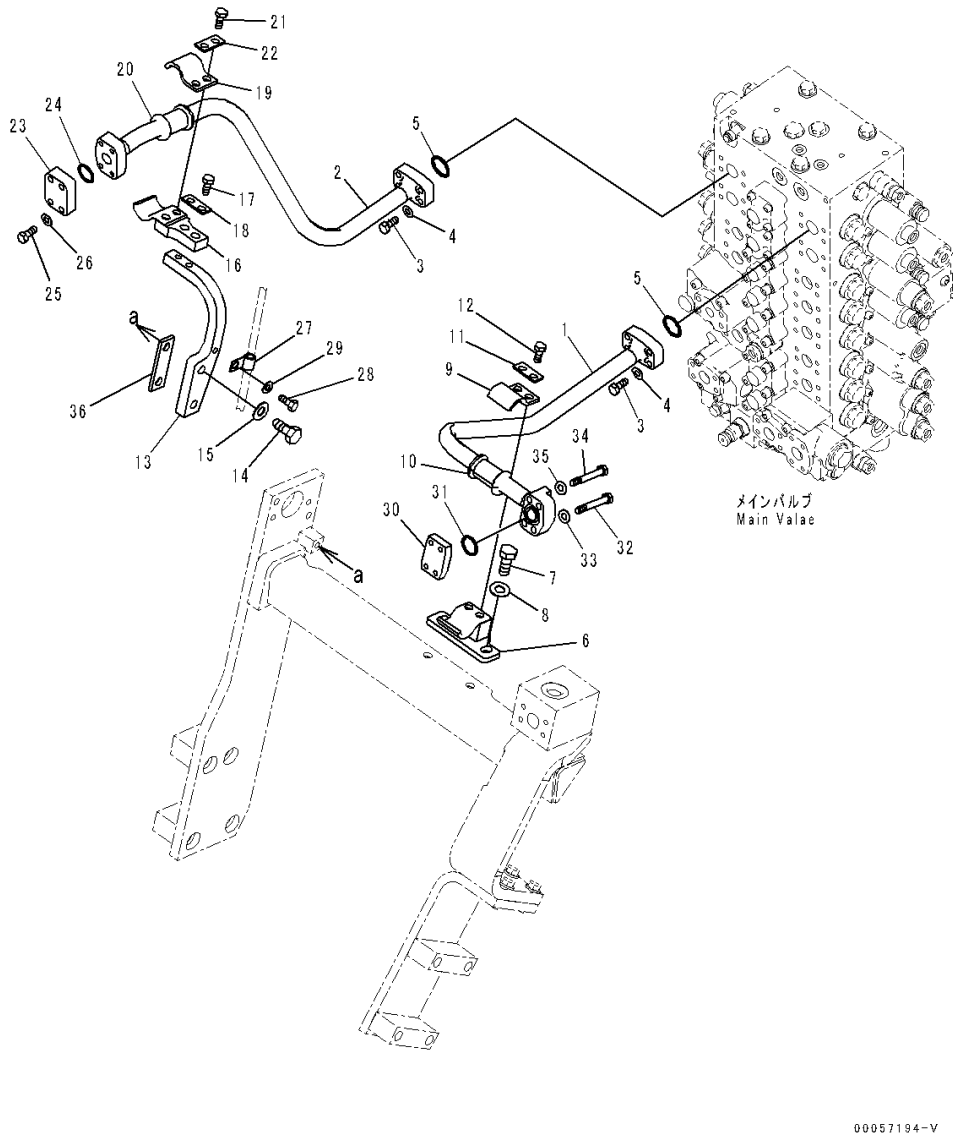


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-43942 | Tube | 1 | Y200001- |
| 2 | | 20Y-62-51290 | Tube | 1 | Y200001- |
| 3 | | 07372-21040 | Bolt | 8 | Y200001- |
| 4 | | 01643-51032 | Washer | 8 | Y200001- |
| 5 | | 07000-13032 | O-ring | 2 | Y200001- |
| 6 | | 20Y-62-52890 | Bracket | 1 | Y200001- |
| 7 | | 01010-81230 | Bolt | 2 | Y200001- |
| 8 | | 01643-31232 | Washer | 2 | Y200001- |
| 9 | | 20Y-62-13180 | Clamp | 1 | Y200001- |
| 10 | | 20Y-62-13761 | Seat | 1 | Y200001- |
| 11 | | 20Y-62-13450 | Plate | 1 | Y200001- |
| 12 | | 01010-81235 | Bolt | 2 | Y200001- |
| 13 | | 20Y-62-43590 | Bracket | 1 | Y200001- |
| 14 | | 01010-81250 | Bolt | 2 | Y200001- |
| 15 | | 01643-31232 | Washer | 2 | Y200001- |
| 16 | | 20Y-62-53110 | Bracket | 1 | Y200001- |
| 17 | | 01010-81240 | Bolt | 2 | Y200001- |
| 18 | | 20Y-62-13450 | Plate | 1 | Y200001- |
| 19 | | 20Y-62-13180 | Clamp | 1 | Y200001- |
| 20 | | 20Y-62-13761 | Seat | 1 | Y200001- |
| 21 | | 01010-81235 | Bolt | 2 | Y200001- |
| 22 | | 20Y-62-13450 | Plate | 1 | Y200001- |
| 23 | | 207-62-56190 | Flange | 1 | Y200001- |
| 24 | | 07000-13032 | O-ring | 1 | Y200001- |
| 25 | | 07372-21040 | Bolt | 4 | Y200001- |
| 26 | | 01643-51032 | Washer | 4 | Y200001- |
| 27 | | 04434-51212 | Clip | 1 | Y200001- |
| 28 | | 01010-81225 | Bolt | 1 | Y200001- |
| 29 | | 01643-31232 | Washer | 1 | Y200001- |
| 30 | | 07379-00640 | Flange | 1 | Y200001- |
| 31 | | 07000-13030 | O-ring | 1 | Y200001- |
| 32 | | 07372-21045 | Bolt | 2 | Y200001- |
| 33 | | 01643-51032 | Washer | 2 | Y200001- |
| 34 | | 07372-21060 | Bolt | 2 | Y200001- |
| 35 | | 01643-51032 | Washer | 2 | Y200001- |
| 36 | | 12R-49-12880 | Plate | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H1310-002001 Travel Piping

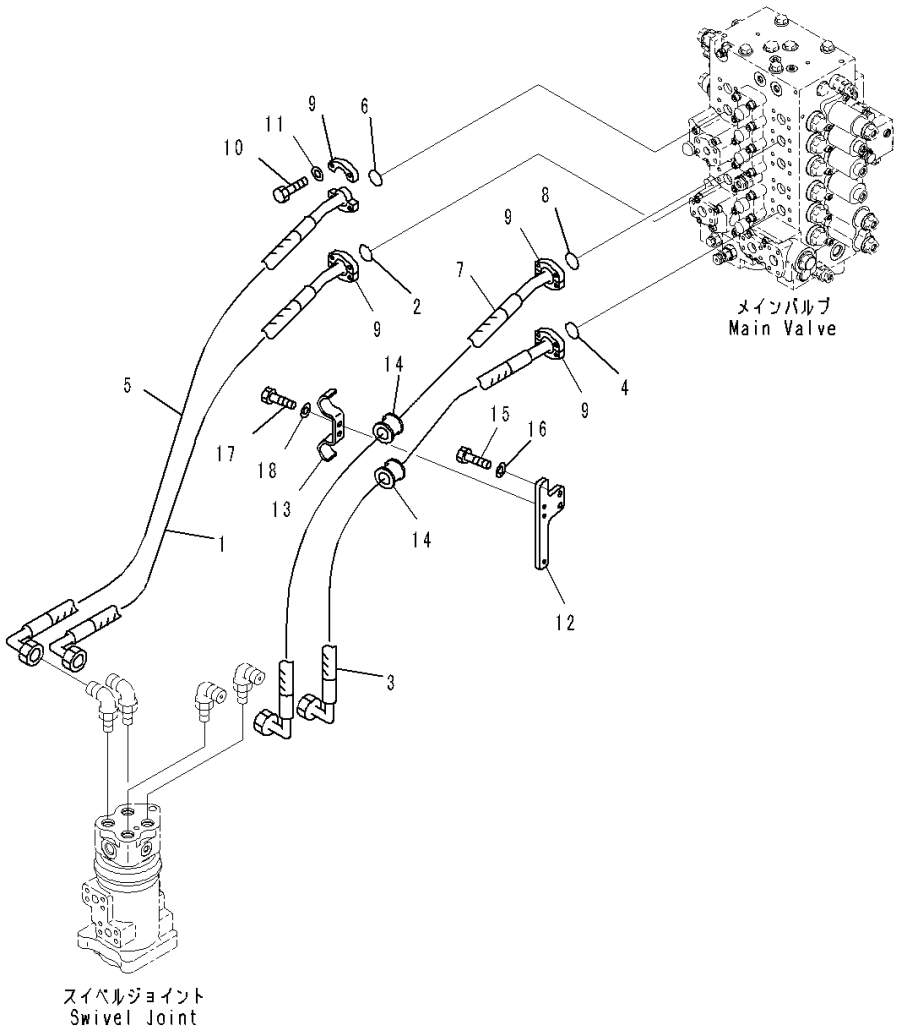


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-51212 | Hose | 1 | Y200001- |
| 2 | | 07000-13032 | O-ring | 1 | Y200001- |
| 3 | | 20Y-62-41213 | Hose | 1 | Y200001- |
| 4 | | 07000-13032 | O-ring | 1 | Y200001- |
| 5 | | 20Y-62-51222 | Hose | 1 | Y200001- |
| 6 | | 07000-13032 | O-ring | 1 | Y200001- |
| 7 | | 20Y-62-51151 | Hose | 1 | Y200001- |
| 8 | | 07000-13032 | O-ring | 1 | Y200001- |
| 9 | | 07371-31049 | Flange, Split | 8 | Y200001- |
| 10 | | 07372-21035 | Bolt | 16 | Y200001- |
| 11 | | 01643-51032 | Washer | 16 | Y200001- |
| 12 | | 20Y-62-41292 | Bracket | 1 | Y200001- |
| 13 | | 206-62-71141 | Clamp | 1 | Y200001- |
| 14 | | 07095-00628 | Cushion | 2 | Y200001- |
| 15 | | 01010-81030 | Bolt | 2 | Y200001- |
| 16 | | 01643-31032 | Washer | 2 | Y200001- |
| 17 | | 01010-81030 | Bolt | 2 | Y200001- |
| 18 | | 01643-31032 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. H1340-001001 Swing Piping

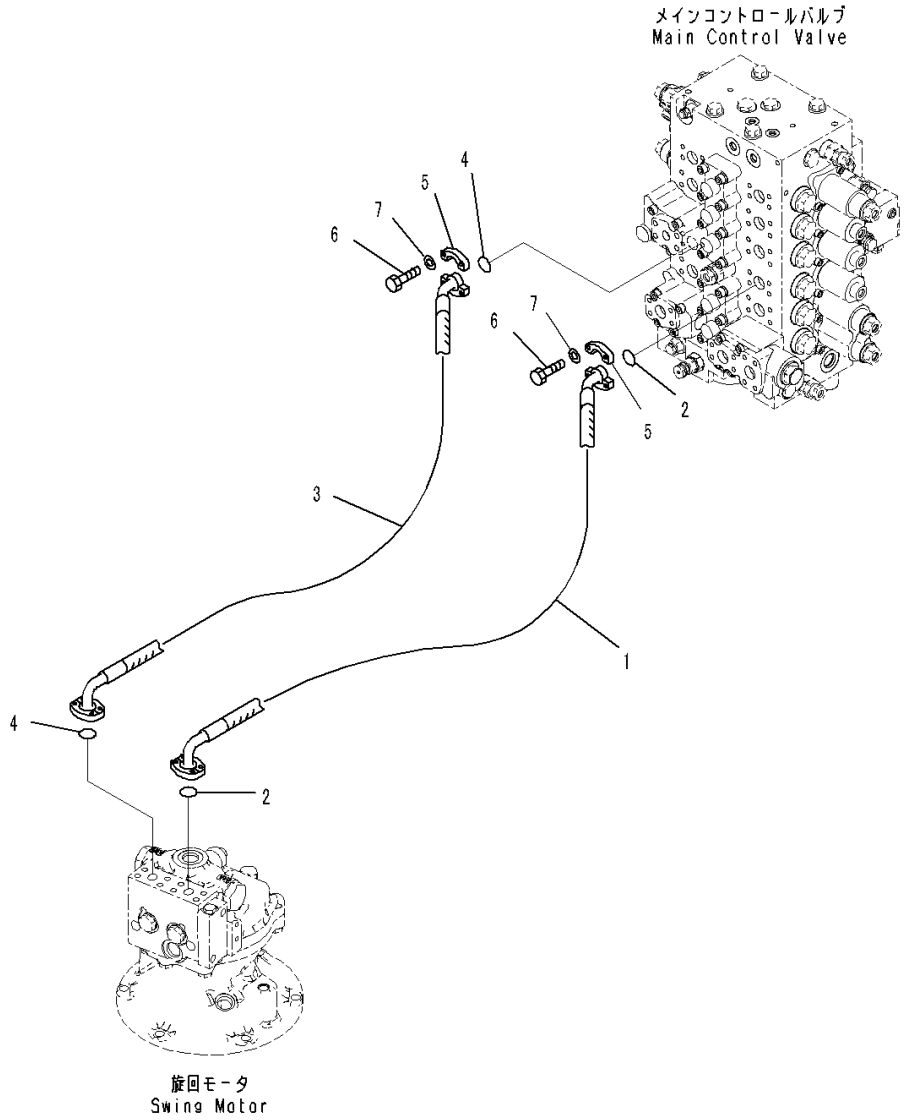


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-51531 | Hose | 1 | Y200001- |
| 2 | | 07000-13025 | O-ring | 2 | Y200001- |
| 3 | | 20Y-62-51541 | Hose | 1 | Y200001- |
| 4 | | 07000-13025 | O-ring | 2 | Y200001- |
| 5 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 6 | | 07372-21035 | Bolt | 16 | Y200001- |
| 7 | | 01643-51032 | Washer | 16 | Y200001- |

https://truckmanualshub.com/


# FIG. H1810-001001 LS Piping

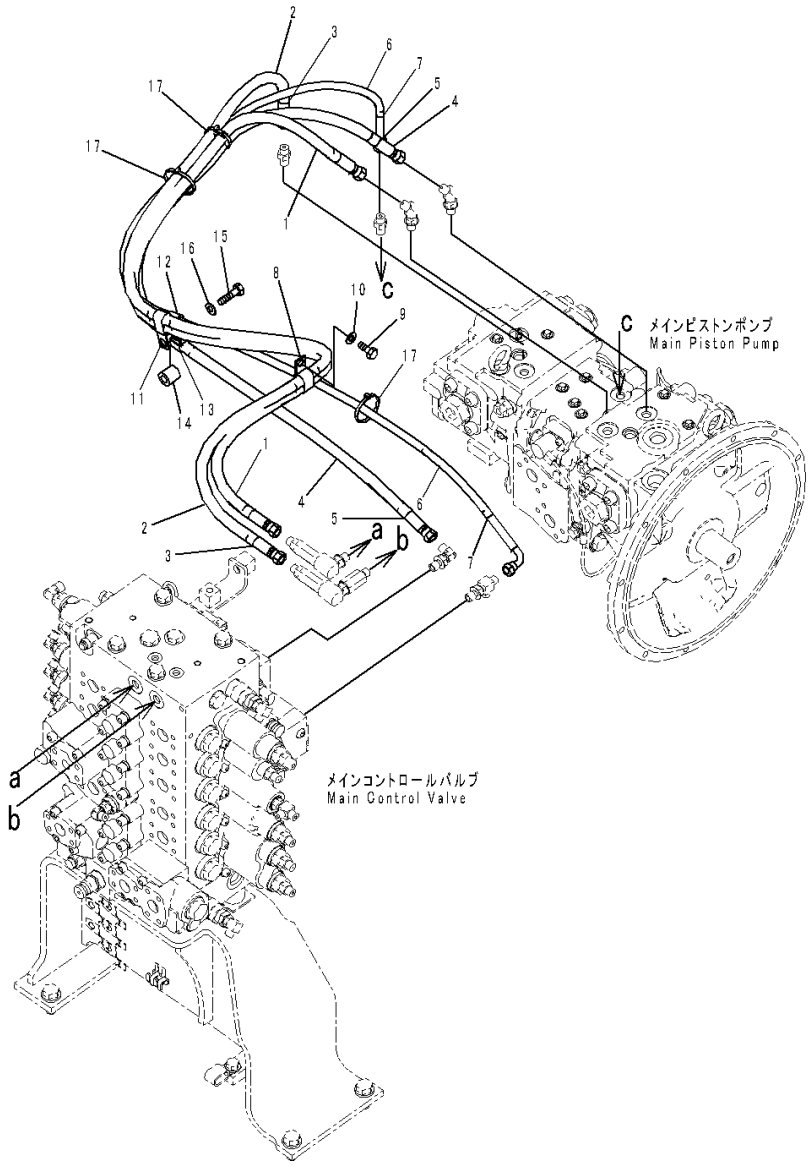


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-53650 | Hose | 1 | Y200001- |
| 2 | | 20Y-62-53660 | Hose | 1 | Y200001- |
| 3 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 4 | | 20Y-62-53670 | Hose | 1 | Y200001- |
| 5 | | 20Y-62-22820 | Band, Blue | 2 | Y200001- |
| 6 | | 20Y-62-52860 | Hose Assembly, L=1600mm | 1 | Y200001- |
| 7 | | 20Y-62-22810 | • Band, Yellow | 2 | Y200001- |
| 8 | | 04435-51612 | Clip | 1 | Y200001- |
| 9 | | 01010-81220 | Bolt | 1 | Y200001- |
| 10 | | 01643-31232 | Washer | 1 | Y200001- |
| 11 | | 04435-51612 | Clip | 1 | Y200001- |
| 12 | | 04434-51312 | Clip | 1 | Y200001- |
| 13 | | 04434-51612 | Clip | 1 | Y200001- |
| 14 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 15 | | 01010-81255 | Bolt | 1 | Y200001- |
| 16 | | 01643-31232 | Washer | 1 | Y200001- |
| 17 | | 08034-20536 | Band | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. H1810-002001 LS Piping, 1-actuator

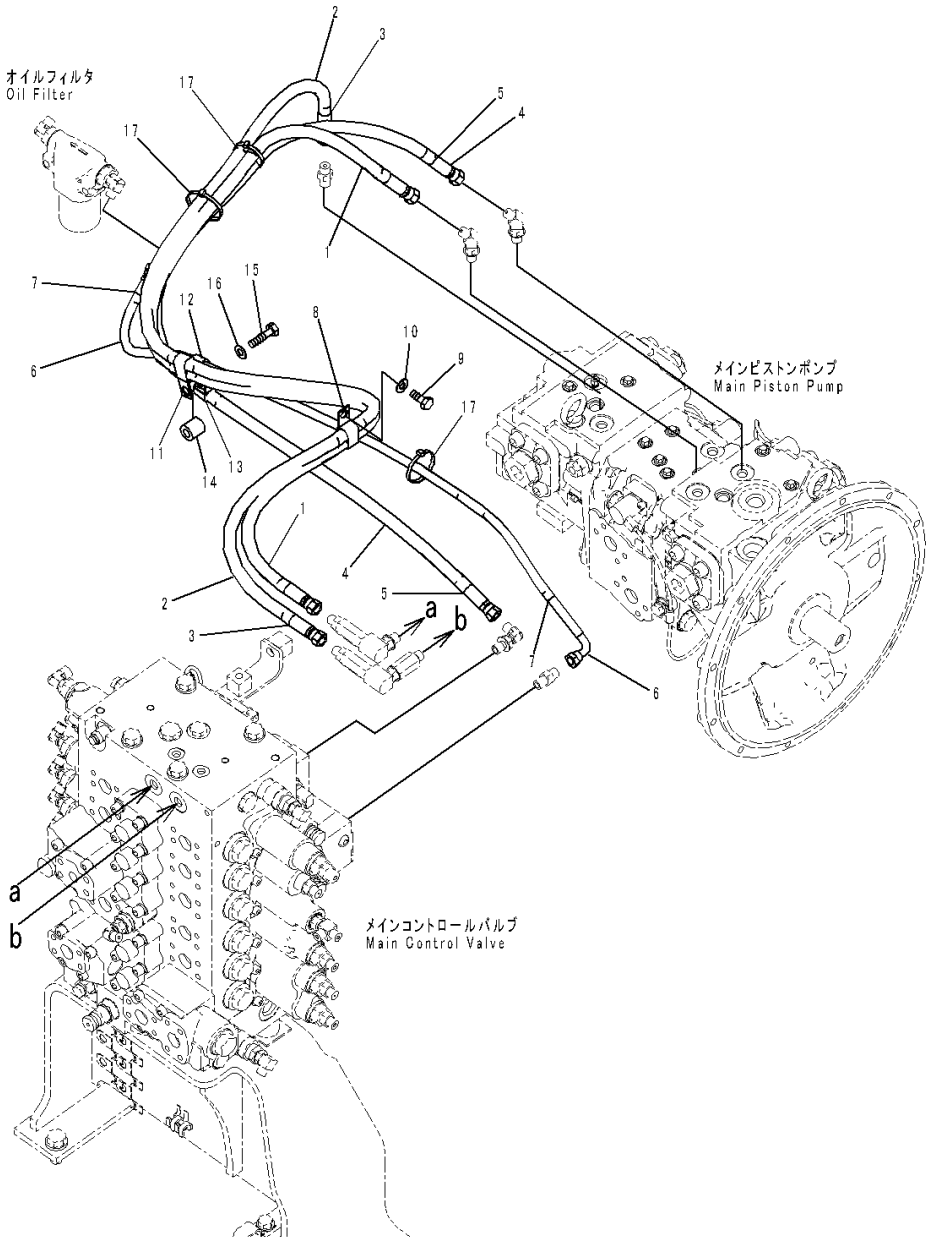


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-53650 | Hose | 1 | Y200001- |
| 2 | | 20Y-62-53660 | Hose | 1 | Y200001- |
| 3 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 4 | | 20Y-62-53670 | Hose | 1 | Y200001- |
| 5 | | 20Y-62-22820 | Band, Blue | 2 | Y200001- |
| 6 | | 20Y-62-51922 | Hose Assembly | 1 | Y200001- |
| 7 | | 20Y-62-22810 | • Band, Yellow | 2 | Y200001- |
| 8 | | 04435-51612 | Clip | 1 | Y200001- |
| 9 | | 01010-81220 | Bolt | 1 | Y200001- |
| 10 | | 01643-31232 | Washer | 1 | Y200001- |
| 11 | | 04435-51612 | Clip | 1 | Y200001- |
| 12 | | 04434-51312 | Clip | 1 | Y200001- |
| 13 | | 04434-51612 | Clip | 1 | Y200001- |
| 14 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 15 | | 01010-81255 | Bolt | 1 | Y200001- |
| 16 | | 01643-31232 | Washer | 1 | Y200001- |
| 17 | | 08034-20536 | Band | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. H1831-001001 Solenoid Valve Piping, Inner Parts, Solenoid Valve

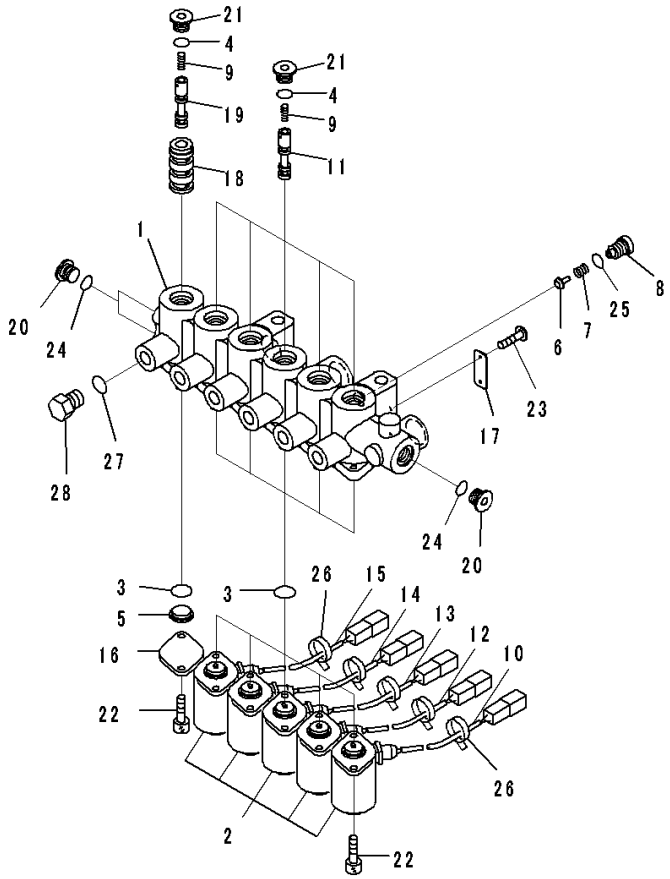


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-60-41621 | Solenoid Assembly | 1 | Y200001- |
| 1 | C1 | | • Block | 1 | Y200001- |
| 2 | | 20Y-60-32121 | • Solenoid Assembly | 5 | Y200001- |
| 3 | | 07000-12016 | • O-ring | 6 | Y200001- |
| 4 | | 07000-12011 | • O-ring | 6 | Y200001- |
| 5 | | NY01720-10600 | • Stopper | 1 | Y200001- |
| 6 | | NY05062-1170A | • Plunger | 1 | Y200001- |
| 7 | | NY05062-11800 | • Spring | 1 | Y200001- |
| 8 | | NY06277-1320A | • Plug | 1 | Y200001- |
| 9 | | NY06339-10200 | • Spring | 6 | Y200001- |
| 10 | | NY07207-11700 | • Tube | 1 | Y200001- |
| 11 | | NY07493-10200 | • Spool | 5 | Y200001- |
| 12 | | NY07529-10200 | • Tube | 1 | Y200001- |
| 13 | | NY07529-10300 | • Tube | 1 | Y200001- |
| 14 | | NY07529-10400 | • Tube | 1 | Y200001- |
| 15 | | NY07529-10500 | • Tube | 1 | Y200001- |
| 16 | | NY07926-10100 | • Plate | 1 | Y200001- |
| 17 | | NY09000-11400 | • Plate | 1 | Y200001- |
| 18 | | NY16207-10200 | • Sleeve | 1 | Y200001- |
| 19 | | NY16207-10300 | • Spool | 1 | Y200001- |
| 20 | | NY80000-02100 | • Plug | 3 | Y200001- |
| 21 | | NY80000-02200 | • Plug | 6 | Y200001- |
| 22 | | NY81416-05012 | • Bolt, Hexagon Socket Head | 12 | Y200001- |
| 23 | | NY84110-00248 | • Screw | 2 | Y200001- |
| 24 | | 07000-11008 | • O-ring | 3 | Y200001- |
| 25 | | 07000-11010 | • O-ring | 1 | Y200001- |
| 26 | | NY89103-00090 | • Band | 5 | Y200001- |
| 27 | | 07002-11423 | • O-ring | 1 | Y200001- |
| 28 | | 07040-11409 | • Plug | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H1831-001002 Solenoid Valve Piping, Solenoid Valve

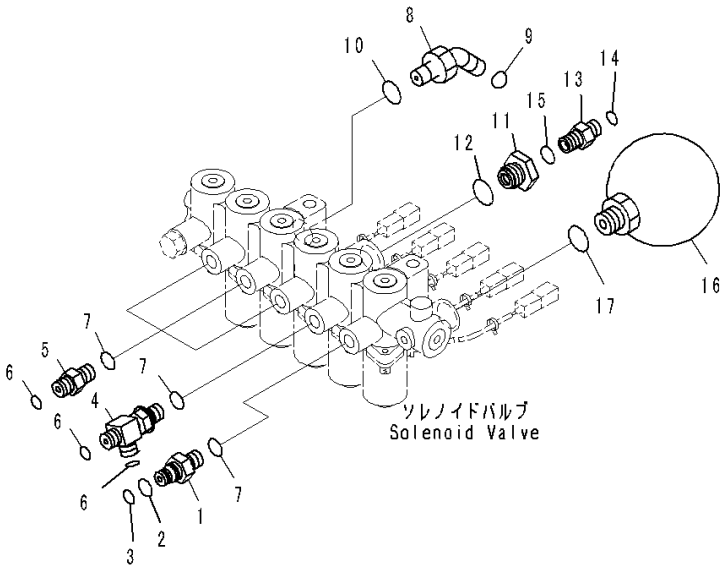


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-16630 | Nipple | 1 | Y200001- |
| 2 | | 201-60-11390 | • O-ring | 1 | Y200001- |
| 3 | | 20Y-62-19560 | • O-ring | 1 | Y200001- |
| 4 | | 20Y-62-41960 | Tee | 1 | Y200001- |
| 5 | | 11Y-62-12130 | Nipple | 3 | Y200001- |
| 6 | | 02896-11008 | O-ring | 5 | Y200001- |
| 7 | | 07002-11423 | O-ring | 5 | Y200001- |
| 8 | | 02783-10315 | Elbow | 1 | Y200001- |
| 9 | | 02896-11009 | O-ring | 1 | Y200001- |
| 10 | | 07002-12034 | O-ring | 1 | Y200001- |
| 11 | | 20Y-62-21940 | Filter Assembly | 1 | Y200001- |
| 12 | | 07002-12034 | O-ring | 1 | Y200001- |
| 13 | | 11Y-62-12130 | Nipple | 1 | Y200001- |
| 14 | | 02896-11008 | O-ring | 1 | Y200001- |
| 15 | | 07002-11423 | O-ring | 1 | Y200001- |
| 16 | | 22U-60-21330 | Accumulator | 1 | Y200001- |
| 17 | | 07002-12034 | O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H1831-001003 Solenoid Valve Piping, Solenoid Valve Piping

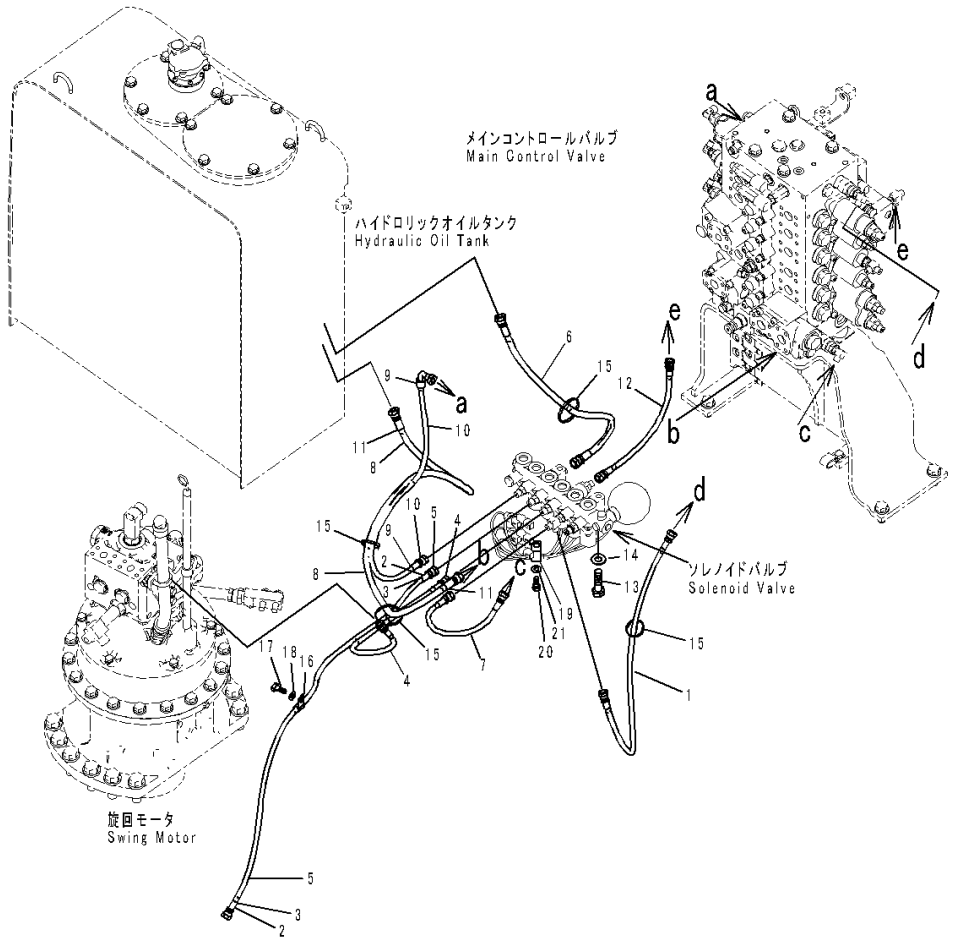


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 208-62-72310 | Hose, L=950mm | 1 | Y200001- |
| 2 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 3 | | 20Y-62-22810 | Band, Yellow | 2 | Y200001- |
| 4 | | 20Y-62-51930 | Hose, L=650mm | 1 | Y200001- |
| 5 | | 20Y-62-51940 | Hose, L=1350mm | 1 | Y200001- |
| 6 | | 20Y-62-51993 | Hose, L=600mm | 1 | Y200001- |
| 7 | | 20Y-62-51910 | Hose, L=400mm | 1 | Y200001- |
| 8 | | 20Y-62-51260 | Hose, L=1200mm | 1 | Y200001- |
| 9 | | 20Y-62-22860 | Band, Brown | 2 | Y200001- |
| 10 | | 20Y-62-51960 | Hose, L=700mm | 1 | Y200001- |
| 11 | | 20Y-62-22810 | Band, Yellow | 2 | Y200001- |
| 12 | | 208-62-72610 | Hose | 1 | Y200001- |
| 13 | | 01010-81085 | Bolt | 2 | Y200001- |
| 14 | | 01643-31032 | Washer | 2 | Y200001- |
| 15 | | 08034-20536 | Band | 4 | Y200001- |
| 16 | | 04434-51010 | Clip | 1 | Y200001- |
| 17 | | 01010-81020 | Bolt | 1 | Y200001- |
| 18 | | 01643-31032 | Washer | 1 | Y200001- |
| 19 | | 04434-51512 | Clip | 1 | Y200001- |
| 20 | | 01010-81225 | Bolt | 1 | Y200001- |
| 21 | | 01643-31232 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H1831-002001 Solenoid Valve Piping, Inner Parts, Solenoid Valve

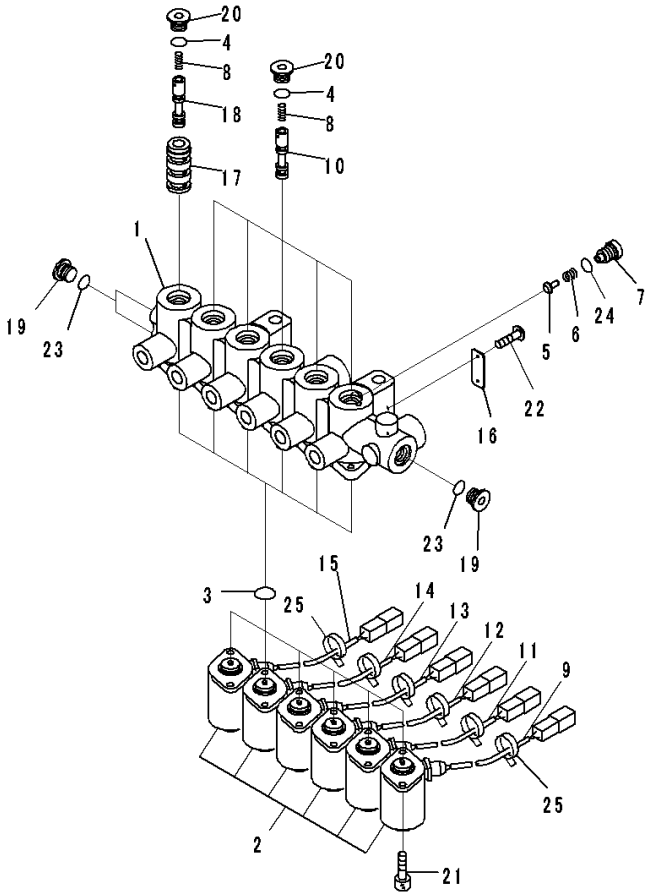


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | 2-actuator | | | |
| | | 20Y-60-41611 | Solenoid Assembly | 1 | Y200001- |
| 1 | C1 | | • Block | 1 | Y200001- |
| 2 | | 20Y-60-32121 | • Solenoid Assembly | 6 | Y200001- |
| 3 | | 07000-12016 | • O-ring | 6 | Y200001- |
| 4 | | 07000-12011 | • O-ring | 6 | Y200001- |
| 5 | | NY05062-1170A | • Plunger | 1 | Y200001- |
| 6 | | NY05062-11800 | • Spring | 1 | Y200001- |
| 7 | | NY06277-1320A | • Plug | 1 | Y200001- |
| 8 | | NY06339-10200 | • Spring | 6 | Y200001- |
| 9 | | NY07207-11700 | • Tube | 1 | Y200001- |
| 10 | | NY07493-10200 | • Spool | 5 | Y200001- |
| 11 | | NY07529-10200 | • Tube | 1 | Y200001- |
| 12 | | NY07529-10300 | • Tube | 1 | Y200001- |
| 13 | | NY07529-10400 | • Tube | 1 | Y200001- |
| 14 | | NY07529-10500 | • Tube | 1 | Y200001- |
| 15 | | NY07529-10600 | • Tube | 1 | Y200001- |
| 16 | | NY09000-11400 | • Plate | 1 | Y200001- |
| 17 | | NY16207-10200 | • Sleeve | 1 | Y200001- |
| 18 | | NY16207-10300 | • Spool | 1 | Y200001- |
| 19 | | NY80000-02100 | • Plug | 3 | Y200001- |
| 20 | | NY80000-02200 | • Plug | 6 | Y200001- |
| 21 | | NY81416-05012 | • Bolt, Hexagon Socket Head | 12 | Y200001- |
| 22 | | NY84110-00248 | • Screw | 2 | Y200001- |
| 23 | | 07000-11008 | • O-ring | 3 | Y200001- |
| 24 | | 07000-11010 | • O-ring | 1 | Y200001- |
| 25 | | NY89103-00090 | • Band | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. H1831-002002 Solenoid Valve Piping, Solenoid Valve

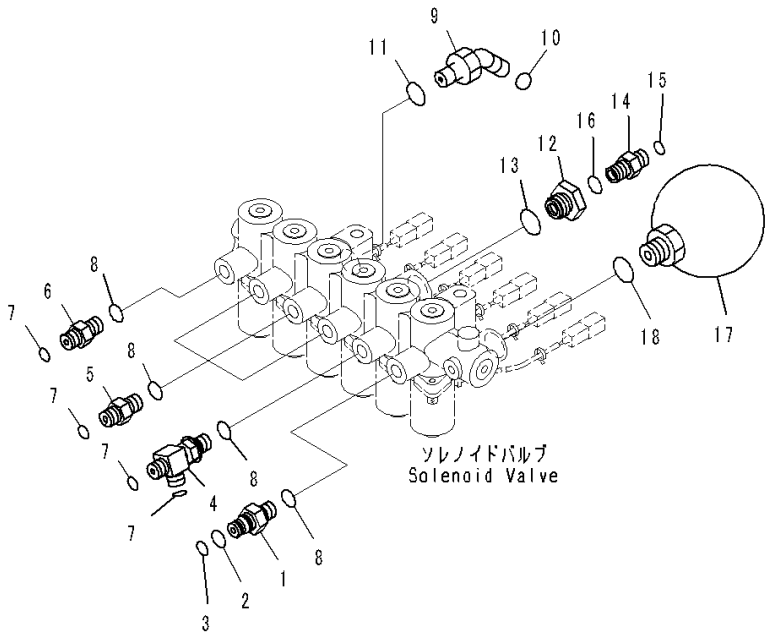


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | Note: This list covers following specifications. | | | |
| | | 1-actuator | | | |
| | | 2-actuator | | | |
| 1 | | 20Y-62-16630 | Nipple | 1 | Y200001- |
| 2 | | 201-60-11390 | • O-ring | 1 | Y200001- |
| 3 | | 20Y-62-19560 | • O-ring | 1 | Y200001- |
| 4 | | 20Y-62-41960 | Tee | 1 | Y200001- |
| 5 | | 11Y-62-12130 | Nipple | 3 | Y200001- |
| 6 | | 22B-26-11320 | Union | 1 | Y200001- |
| 7 | | 02896-11008 | O-ring | 6 | Y200001- |
| 8 | | 07002-11423 | O-ring | 6 | Y200001- |
| 9 | | 02783-10315 | Elbow | 1 | Y200001- |
| 10 | | 02896-11009 | O-ring | 1 | Y200001- |
| 11 | | 07002-12034 | O-ring | 1 | Y200001- |
| 12 | | 20Y-62-21940 | Filter Assembly | 1 | Y200001- |
| 13 | | 07002-12034 | O-ring | 1 | Y200001- |
| 14 | | 11Y-62-12130 | Nipple | 1 | Y200001- |
| 15 | | 02896-11008 | O-ring | 1 | Y200001- |
| 16 | | 07002-11423 | O-ring | 1 | Y200001- |
| 17 | | 22U-60-21330 | Accumulator | 1 | Y200001- |
| 18 | | 07002-12034 | O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H1831-002003 Solenoid Valve Piping, 1-actuator, Solenoid Valve Piping

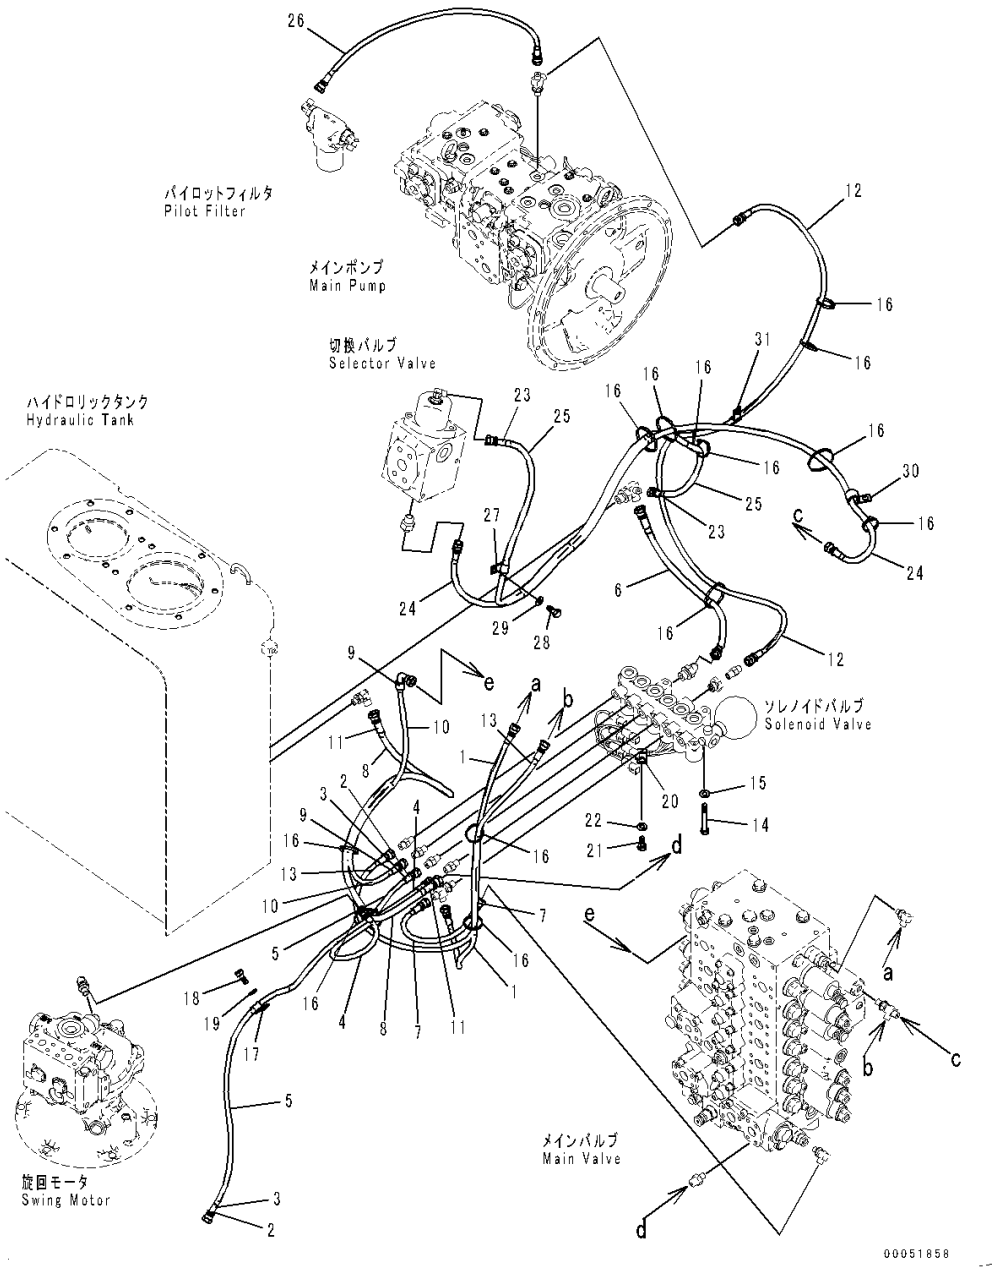


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 208-62-72310 | Hose, L=950mm | 1 | Y200001- |
| 2 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 3 | | 20Y-62-22810 | Band, Yellow | 2 | Y200001- |
| 4 | | 20Y-62-51930 | Hose, L=650mm | 1 | Y200001- |
| 5 | | 20Y-62-51940 | Hose, L=1350mm | 1 | Y200001- |
| 6 | | 20Y-62-51993 | Hose, L=600mm | 1 | Y200001- |
| 7 | | 20Y-62-51910 | Hose, L=400mm | 1 | Y200001- |
| 8 | | 20Y-62-51260 | Hose, L=1200mm | 1 | Y200001- |
| 9 | | 20Y-62-22860 | Band, Brown | 2 | Y200001- |
| 10 | | 20Y-62-51960 | Hose, L=700mm | 1 | Y200001- |
| 11 | | 20Y-62-22810 | Band, Yellow | 2 | Y200001- |
| 12 | | 20Y-62-52121 | Hose, L=1800mm | 1 | Y200001- |
| 13 | | 208-62-72480 | Hose | 1 | Y200001- |
| 14 | | 01010-81085 | Bolt | 2 | Y200001- |
| 15 | | 01643-31032 | Washer | 2 | Y200001- |
| 16 | | 08034-20536 | Band | 13 | Y200001- |
| 17 | | 04434-51010 | Clip | 1 | Y200001- |
| 18 | | 01010-81020 | Bolt | 1 | Y200001- |
| 19 | | 01643-31032 | Washer | 1 | Y200001- |
| 20 | | 04434-51512 | Clip | 1 | Y200001- |
| 21 | | 01010-81225 | Bolt | 1 | Y200001- |
| 22 | | 01643-31232 | Washer | 1 | Y200001- |
| 23 | | 20Y-62-22820 | Band, Blue | 2 | Y200001- |
| 24 | | 02760-00219 | Hose, Face Seal Type | 1 | Y200001- |
| 25 | | 02760-00218 | Hose, Face Seal Type | 1 | Y200001- |
| 26 | | 20Y-62-51930 | Hose, L=650mm | 1 | Y200001- |
| 27 | | 04434-51212 | Clip | 1 | Y200001- |
| 28 | | 01010-81225 | Bolt | 1 | Y200001- |
| 29 | | 01643-31232 | Washer | 1 | Y200001- |
| 30 | | 04434-52212 | Clip | 1 | Y200001- |
| 31 | | 04434-51012 | Clip | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H1831-003003 Solenoid Valve Piping, 2-actuator, Solenoid Valve Piping

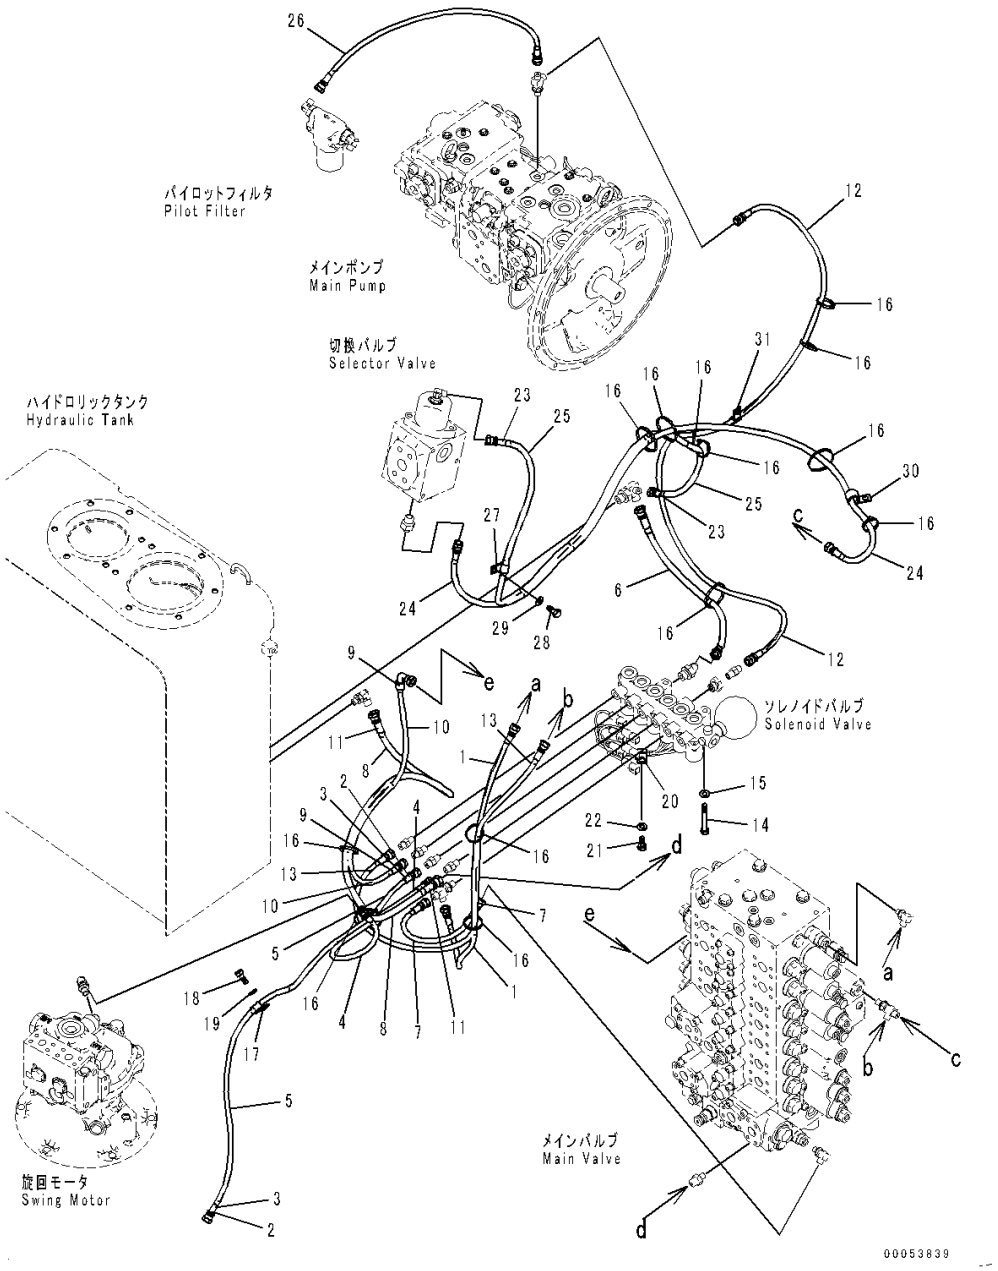


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22U-62-26850 | Hose, L=1050mm | 1 | Y200001- |
| 2 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 3 | | 20Y-62-22810 | Band, Yellow | 2 | Y200001- |
| 4 | | 20Y-62-51930 | Hose, L=650mm | 1 | Y200001- |
| 5 | | 20Y-62-51940 | Hose, L=1350mm | 1 | Y200001- |
| 6 | | 20Y-62-51993 | Hose, L=600mm | 1 | Y200001- |
| 7 | | 20Y-62-51910 | Hose, L=400mm | 1 | Y200001- |
| 8 | | 20Y-62-51260 | Hose, L=1200mm | 1 | Y200001- |
| 9 | | 20Y-62-22860 | Band, Brown | 2 | Y200001- |
| 10 | | 20Y-62-51960 | Hose, L=700mm | 1 | Y200001- |
| 11 | | 20Y-62-22810 | Band, Yellow | 2 | Y200001- |
| 12 | | 20Y-62-52121 | Hose, L=1800mm | 1 | Y200001- |
| 13 | | 208-62-72480 | Hose | 1 | Y200001- |
| 14 | | 01010-81085 | Bolt | 2 | Y200001- |
| 15 | | 01643-31032 | Washer | 2 | Y200001- |
| 16 | | 08034-20536 | Band | 13 | Y200001- |
| 17 | | 04434-51010 | Clip | 1 | Y200001- |
| 18 | | 01010-81020 | Bolt | 1 | Y200001- |
| 19 | | 01643-31032 | Washer | 1 | Y200001- |
| 20 | | 04434-51512 | Clip | 1 | Y200001- |
| 21 | | 01010-81225 | Bolt | 1 | Y200001- |
| 22 | | 01643-31232 | Washer | 1 | Y200001- |
| 23 | | 20Y-62-22820 | Band, Blue | 2 | Y200001- |
| 24 | | 02760-00219 | Hose, Face Seal Type | 1 | Y200001- |
| 25 | | 02760-00218 | Hose, Face Seal Type | 1 | Y200001- |
| 26 | | 20Y-62-51930 | Hose, L=650mm | 1 | Y200001- |
| 27 | | 04434-51212 | Clip | 1 | Y200001- |
| 28 | | 01010-81225 | Bolt | 1 | Y200001- |
| 29 | | 01643-31232 | Washer | 1 | Y200001- |
| 30 | | 04434-52512 | Clip | 1 | Y200001- |
| 31 | | 04434-51012 | Clip | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. H1833-002001 Pressure Switch Block

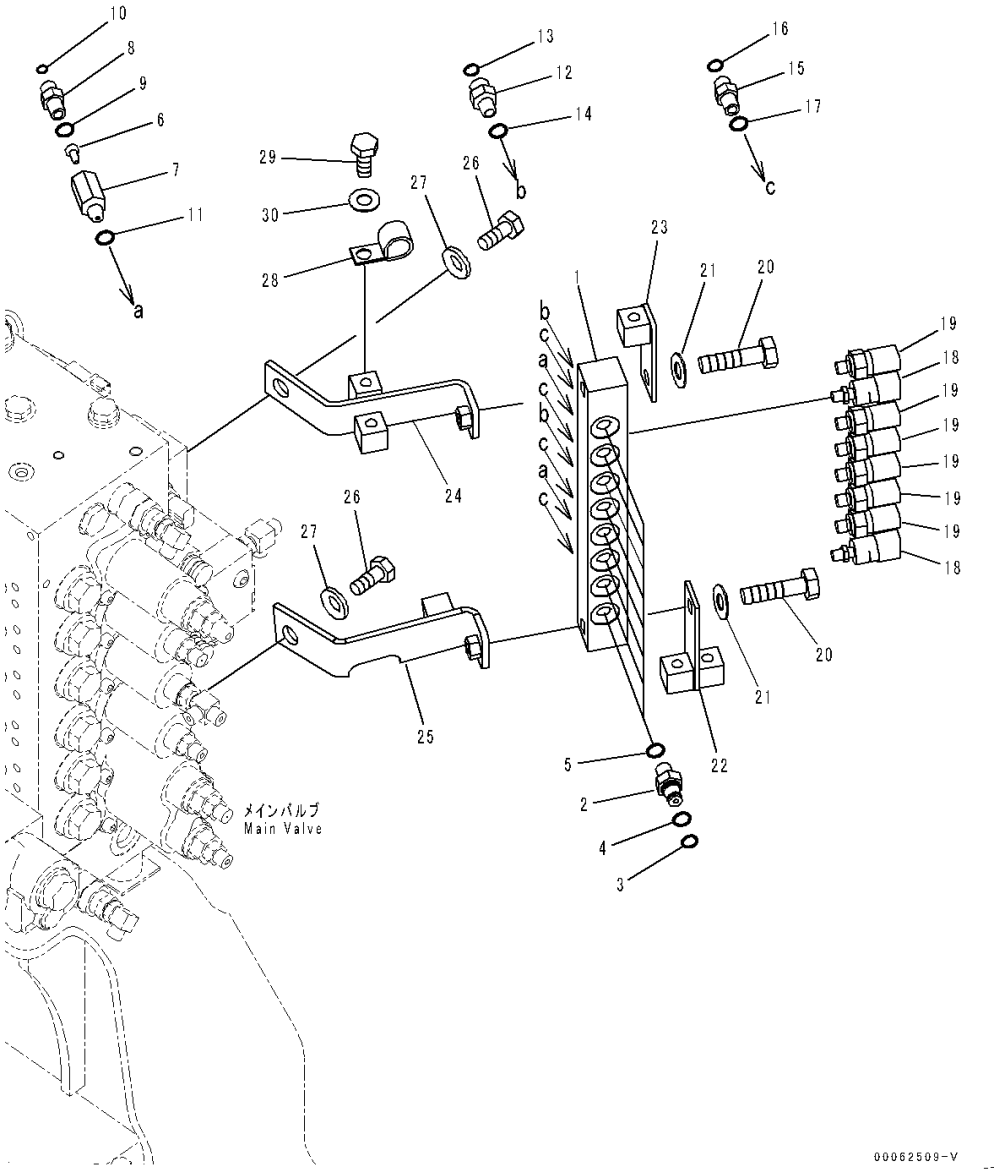


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-51381 | Block | 1 | Y200001- |
| 2 | | 20Y-62-16630 | Nipple | 8 | Y200001- |
| 3 | | 201-60-11390 | • O-ring | 1 | Y200001- |
| 4 | | 20Y-62-19560 | • O-ring | 1 | Y200001- |
| 5 | | 07002-11423 | O-ring | 8 | Y200001- |
| | | 20Y-60-32300 | Valve Assembly | 2 | Y200001- |
| 6 | | 20Y-62-41830 | • Poppet | 1 | Y200001- |
| 7 | C1 | | • Body | 1 | Y200001- |
| 8 | | 21W-62-43930 | • Nipple | 1 | Y200001- |
| 9 | | 07002-11423 | • O-ring | 1 | Y200001- |
| 10 | | 02896-11008 | O-ring | 2 | Y200001- |
| 11 | | 07002-11423 | O-ring | 2 | Y200001- |
| 12 | | 11Y-62-12520 | Union | 2 | Y200001- |
| 13 | | 02896-11009 | O-ring | 2 | Y200001- |
| 14 | | 07002-11423 | O-ring | 2 | Y200001- |
| 15 | | 11Y-62-12130 | Nipple | 4 | Y200001- |
| 16 | | 02896-11008 | O-ring | 4 | Y200001- |
| 17 | | 07002-11423 | O-ring | 4 | Y200001- |
| 18 | | 206-06-61130 | Switch | 2 | Y200001- |
| 19 | | 7861-93-1840 | Sensor | 6 | Y200001- |
| 20 | | 01010-81265 | Bolt | 2 | Y200001- |
| 21 | | 01643-31232 | Washer | 2 | Y200001- |
| 22 | | 20Y-62-51371 | Bracket | 1 | Y200001- |
| 23 | | 20Y-62-51411 | Bracket | 1 | Y200001- |
| 24 | | 20Y-62-51392 | Bracket | 1 | Y200001- |
| 25 | | 20Y-62-51352 | Bracket | 1 | Y200001- |
| 26 | | 01010-81635 | Bolt | 2 | Y200001- |
| 27 | | 01643-31645 | Washer | 2 | Y200001- |
| 28 | | 04434-52112 | Clip | 1 | Y200001- |
| 29 | | 01010-81225 | Bolt | 1 | Y200001- |
| 30 | | 01643-31232 | Washer | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. H1840-004001 Proportional Pressure Control (PPC) Valve Piping

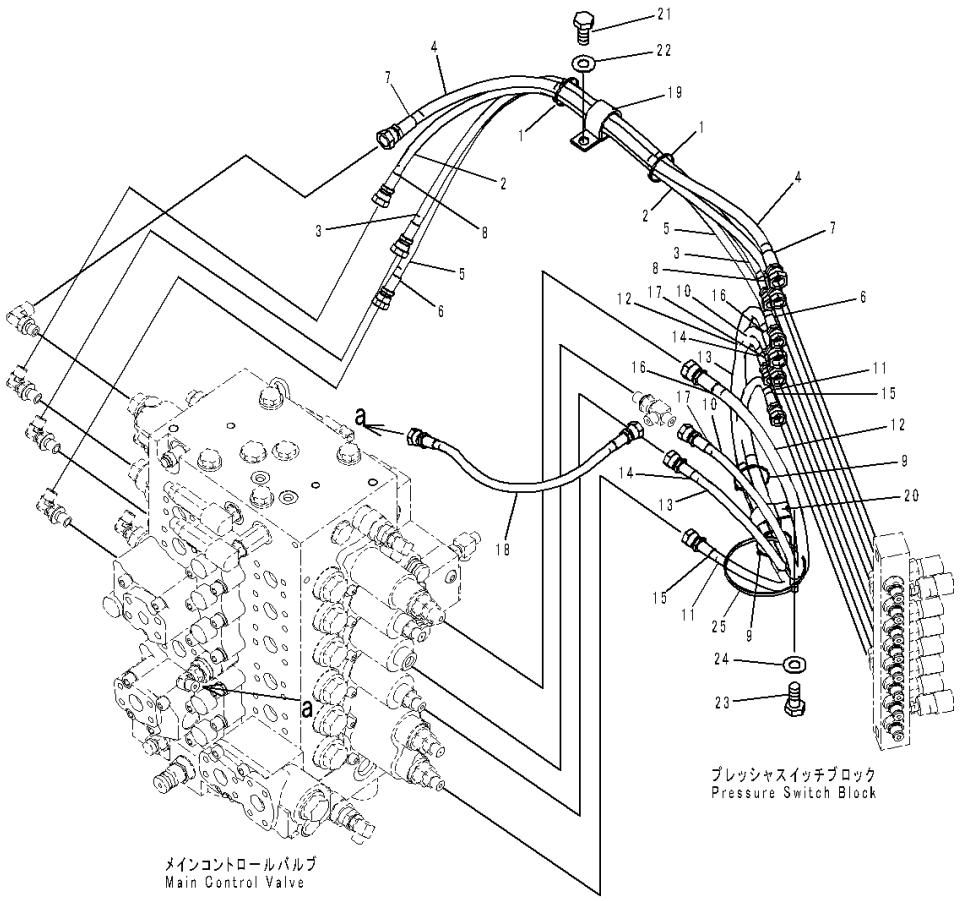



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 08034-20536 | Band | 2 | Y200001- |
| 2 | | 208-62-72160 | Hose | 1 | Y200001- |
| 3 | | 20Y-62-51160 | Hose | 1 | Y200001- |
| 4 | | 20Y-62-51870 | Hose | 1 | Y200001- |
| 5 | | 20Y-62-51890 | Hose | 1 | Y200001- |
| 6 | | 20Y-62-22820 | Band, Blue | 2 | Y200001- |
| 7 | | 20Y-62-22830 | Band, White | 2 | Y200001- |
| 8 | | 20Y-62-22860 | Band, Brown | 2 | Y200001- |
| 9 | | 08034-20536 | Band | 2 | Y200001- |
| 10 | | 208-62-72310 | Hose | 1 | Y200001- |
| 11 | | 208-62-72590 | Hose | 1 | Y200001- |
| 12 | | 20Y-62-51880 | Hose | 1 | Y200001- |
| 13 | | 20Y-62-51890 | Hose | 1 | Y200001- |
| 14 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 15 | | 20Y-62-22810 | Band, Yellow | 2 | Y200001- |
| 16 | | 20Y-62-22840 | Band, Black | 2 | Y200001- |
| 17 | | 20Y-62-22850 | Band, Green | 2 | Y200001- |
| 18 | | 20Y-62-51910 | Hose | 1 | Y200001- |
| 19 | | 04434-53212 | Clip | 1 | Y200001- |
| 20 | | 04434-53712 | Clip | 1 | Y200001- |
| 21 | | 01010-81225 | Bolt | 1 | Y200001- |
| 22 | | 01643-31232 | Washer | 1 | Y200001- |
| 23 | | 01010-81225 | Bolt | 1 | Y200001- |
| 24 | | 01643-31232 | Washer | 1 | Y200001- |
| 25 | | 08034-20536 | Band | 1 | Y200001- |

# FRAME AND ITS RELATED PARTS

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. J1110-002001 Revolving Frame

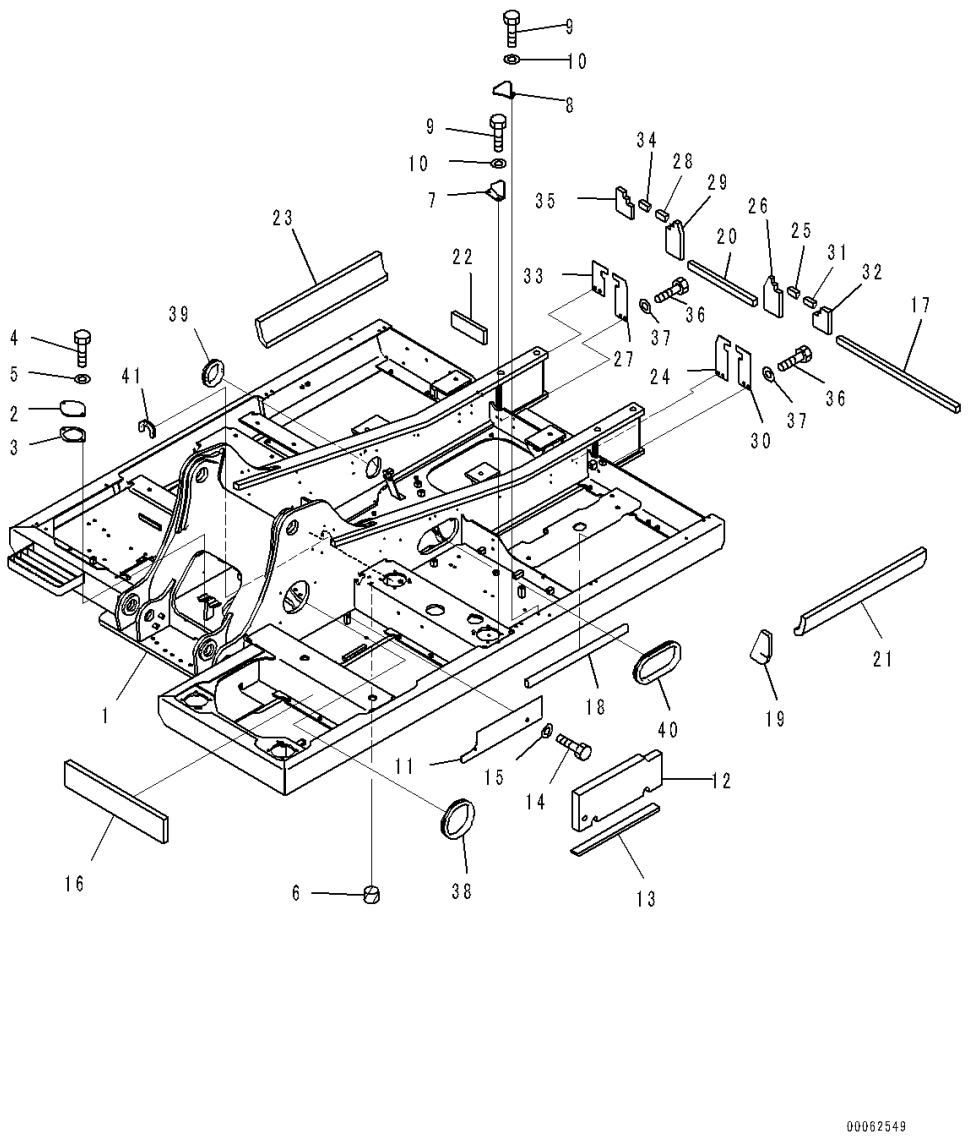


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-46-51101 | Frame | 1 | Y200001- |
| 2 | | 205-30-71181 | Cover | 1 | Y200001- |
| 3 | | 205-30-71191 | Gasket | 1 | Y200001- |
| 4 | | 01010-81230 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 20Y-46-41280 | Plug | 2 | Y200001- |
| 7 | | 20Y-54-61670 | Bracket | 1 | Y200001- |
| 8 | | 20Y-54-61680 | Bracket | 1 | Y200001- |
| 9 | | 01010-81230 | Bolt | 4 | Y200001- |
| 10 | | 01643-31232 | Washer | 4 | Y200001- |
| | | 20Y-46-52441 | Cover | 1 | Y200001- |
| 11 | C1 | | • Cover | 1 | Y200001- |
| 12 | | 20Y-46-52180 | • Sheet | 1 | Y200001- |
| 13 | | 20Y-46-52172 | • Sheet | 1 | Y200001- |
| 14 | | 01010-81230 | Bolt | 2 | Y200001- |
| 15 | | 01643-31232 | Washer | 2 | Y200001- |
| 16 | | 20Y-46-52130 | Sheet | 1 | Y200001- |
| 17 | | 20Y-46-52230 | Sheet | 1 | Y200001- |
| 18 | | 20Y-46-51162 | Sheet | 1 | Y200001- |
| 19 | | 20Y-46-52141 | Sheet | 1 | Y200001- |
| 20 | | 20Y-46-52220 | Sheet | 1 | Y200001- |
| 21 | | 20Y-54-72361 | Sheet | 1 | Y200001- |
| 22 | | 20Y-54-73451 | Sheet | 1 | Y200001- |
| 23 | | 20Y-54-72361 | Sheet | 1 | Y200001- |
| | | 20Y-54-75940 | Cover | 1 | Y200001- |
| 24 | C1 | | • Plate | 1 | Y200001- |
| 25 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |
| 26 | | 20Y-54-76140 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75950 | Cover | 1 | Y200001- |
| 27 | C1 | | • Plate | 1 | Y200001- |
| 28 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |
| 29 | | 20Y-54-76150 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75960 | Cover | 1 | Y200001- |
| 30 | C1 | | • Plate | 1 | Y200001- |
| 31 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |
| 32 | | 20Y-54-76160 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75970 | Cover | 1 | Y200001- |
| 33 | C1 | | • Plate | 1 | Y200001- |
| 34 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. J1110-002001 Revolving Frame

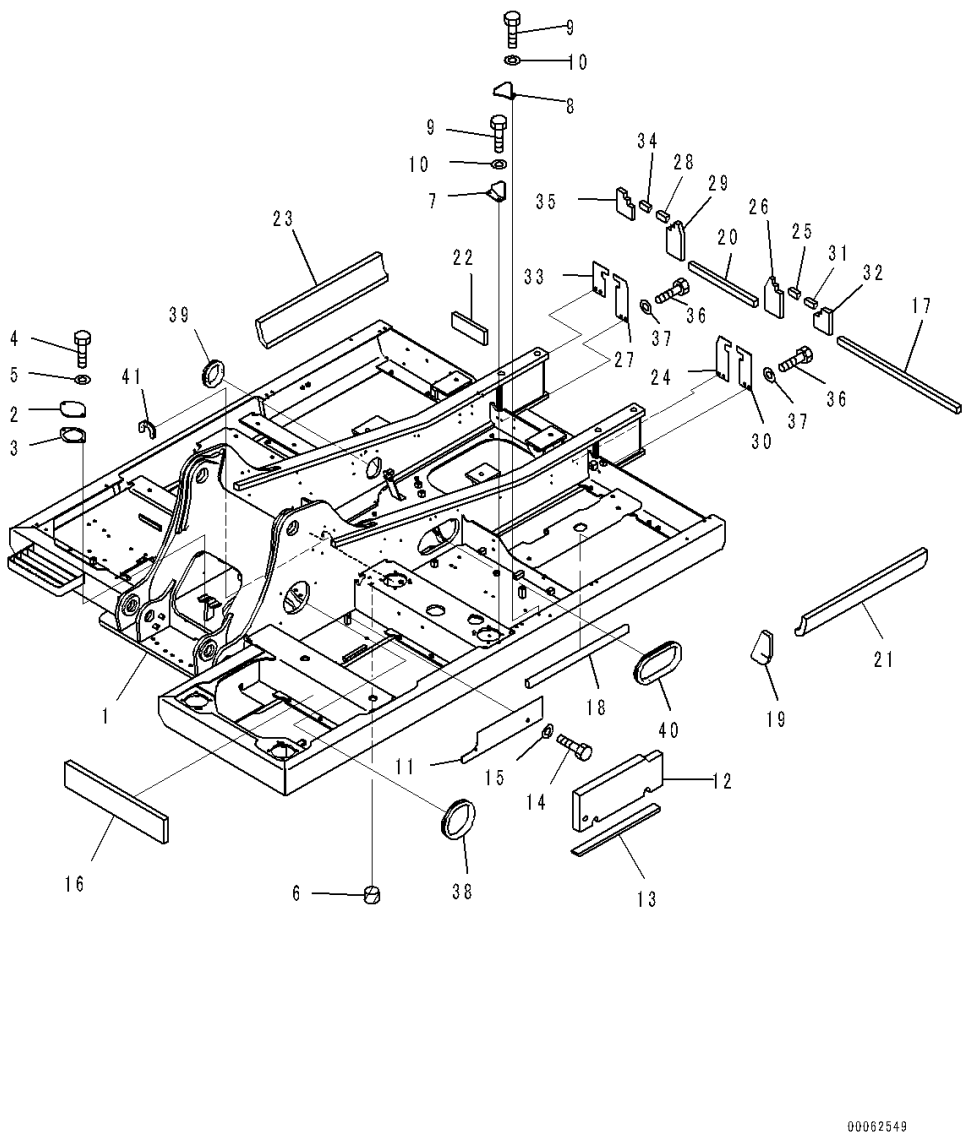


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 35 | | 20Y-54-76170 | • Sheet | 1 | Y200001- |
| 36 | | 01010-81225 | Bolt | 8 | Y200001- |
| 37 | | 01643-31232 | Washer | 8 | Y200001- |
| 38 | | 20Y-46-41170 | Grommet | 1 | Y200001- |
| 39 | | 20Y-46-51180 | Grommet | 1 | Y200001- |
| 40 | | 20Y-46-51190 | Grommet | 1 | Y200001- |
| 41 | | 20Y-46-51140 | Grommet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. J1110-005001 Revolving Frame, With Deck Guard

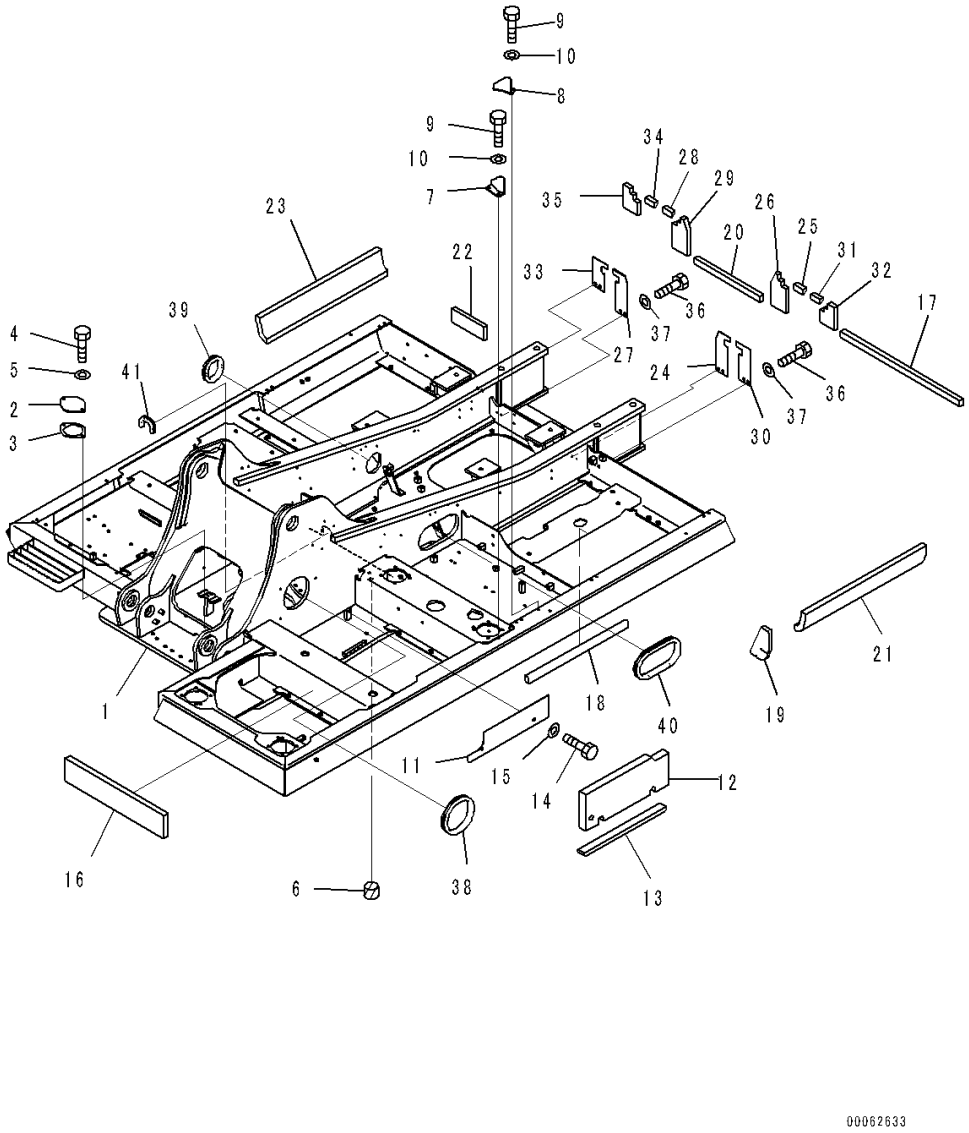


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-46-51501 | Frame | 1 | Y200001- |
| 2 | | 205-30-71181 | Cover | 1 | Y200001- |
| 3 | | 205-30-71191 | Gasket | 1 | Y200001- |
| 4 | | 01010-81230 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 20Y-46-41280 | Plug | 2 | Y200001- |
| 7 | | 20Y-54-61670 | Bracket | 1 | Y200001- |
| 8 | | 20Y-54-61680 | Bracket | 1 | Y200001- |
| 9 | | 01010-81230 | Bolt | 4 | Y200001- |
| 10 | | 01643-31232 | Washer | 4 | Y200001- |
| | | 20Y-46-52441 | Cover | 1 | Y200001- |
| 11 | C1 | | • Cover | 1 | Y200001- |
| 12 | | 20Y-46-52180 | • Sheet | 1 | Y200001- |
| 13 | | 20Y-46-52172 | • Sheet | 1 | Y200001- |
| 14 | | 01010-81230 | Bolt | 2 | Y200001- |
| 15 | | 01643-31232 | Washer | 2 | Y200001- |
| 16 | | 20Y-46-52130 | Sheet | 1 | Y200001- |
| 17 | | 20Y-46-52230 | Sheet | 1 | Y200001- |
| 18 | | 20Y-46-51162 | Sheet | 1 | Y200001- |
| 19 | | 20Y-46-52141 | Sheet | 1 | Y200001- |
| 20 | | 20Y-46-52220 | Sheet | 1 | Y200001- |
| 21 | | 20Y-54-72361 | Sheet | 1 | Y200001- |
| 22 | | 20Y-54-73451 | Sheet | 1 | Y200001- |
| 23 | | 20Y-54-72361 | Sheet | 1 | Y200001- |
| | | 20Y-54-75940 | Cover | 1 | Y200001- |
| 24 | C1 | | • Plate | 1 | Y200001- |
| 25 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |
| 26 | | 20Y-54-76140 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75950 | Cover | 1 | Y200001- |
| 27 | C1 | | • Plate | 1 | Y200001- |
| 28 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |
| 29 | | 20Y-54-76150 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75960 | Cover | 1 | Y200001- |
| 30 | C1 | | • Plate | 1 | Y200001- |
| 31 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |
| 32 | | 20Y-54-76160 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75970 | Cover | 1 | Y200001- |
| 33 | C1 | | • Plate | 1 | Y200001- |
| 34 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. J1110-005001 Revolving Frame, With Deck Guard

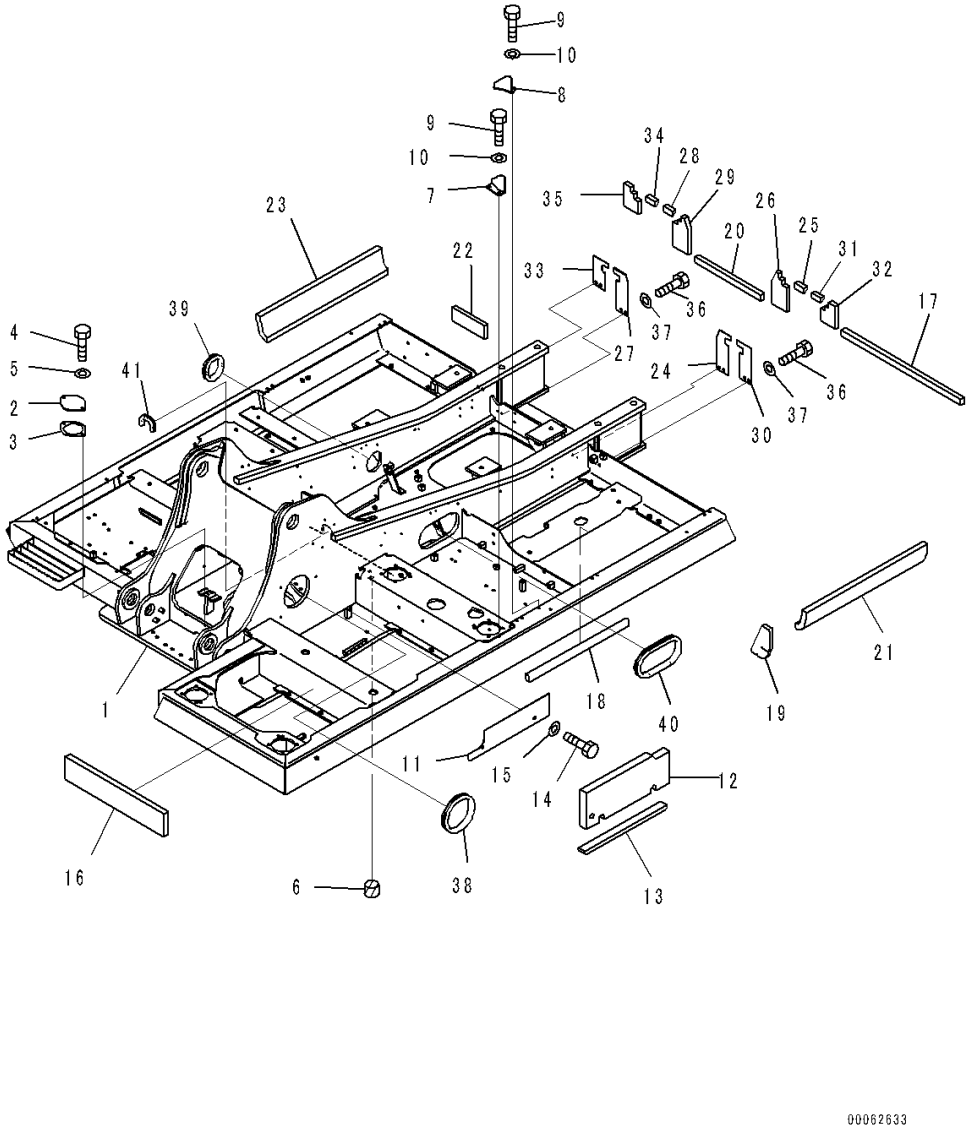


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 35 | | 20Y-54-76170 | • Sheet | 1 | Y200001- |
| 36 | | 01010-81225 | Bolt | 8 | Y200001- |
| 37 | | 01643-31232 | Washer | 8 | Y200001- |
| 38 | | 20Y-46-41170 | Grommet | 1 | Y200001- |
| 39 | | 20Y-46-51180 | Grommet | 1 | Y200001- |
| 40 | | 20Y-46-51190 | Grommet | 1 | Y200001- |
| 41 | | 20Y-46-51140 | Grommet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. J1110-007001 Revolving Frame, For Fuel Refill Pump

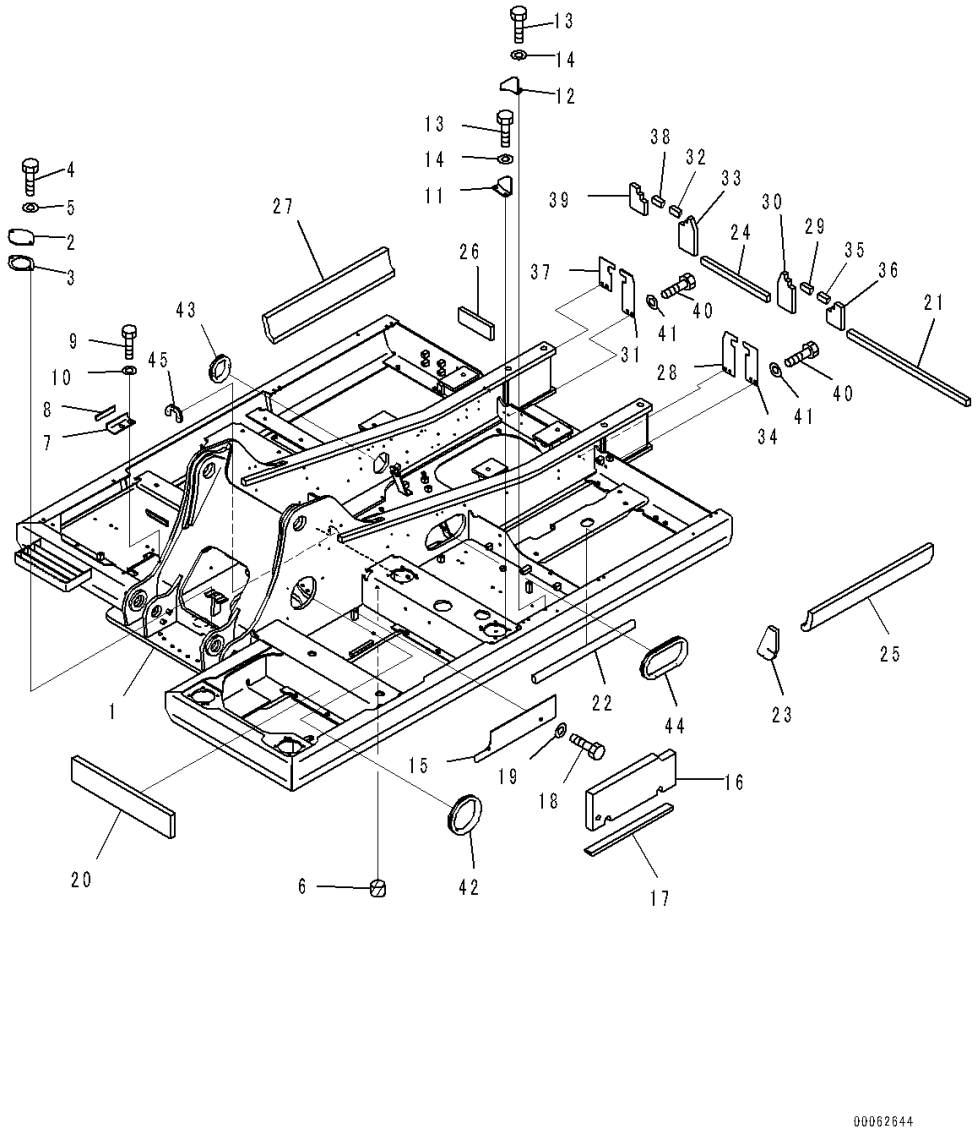


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-46-51602 | Frame | 1 | Y200001- |
| 2 | | 205-30-71181 | Cover | 1 | Y200001- |
| 3 | | 205-30-71191 | Gasket | 1 | Y200001- |
| 4 | | 01010-81230 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 20Y-46-41280 | Plug | 2 | Y200001- |
| 7 | | 206-06-22140 | Bracket | 1 | Y200001- |
| 8 | | 207-06-51330 | • Sheet | 1 | Y200001- |
| 9 | | 01010-81230 | Bolt | 2 | Y200001- |
| 10 | | 175-54-34170 | Washer | 2 | Y200001- |
| 11 | | 20Y-54-61670 | Bracket | 1 | Y200001- |
| 12 | | 20Y-54-61680 | Bracket | 1 | Y200001- |
| 13 | | 01010-81230 | Bolt | 4 | Y200001- |
| 14 | | 01643-31232 | Washer | 4 | Y200001- |
| | | 20Y-46-52441 | Cover | 1 | Y200001- |
| 15 | C1 | | • Cover | 1 | Y200001- |
| 16 | | 20Y-46-52180 | • Sheet | 1 | Y200001- |
| 17 | | 20Y-46-52172 | • Sheet | 1 | Y200001- |
| 18 | | 01010-81230 | Bolt | 2 | Y200001- |
| 19 | | 01643-31232 | Washer | 2 | Y200001- |
| 20 | | 20Y-46-52130 | Sheet | 1 | Y200001- |
| 21 | | 20Y-46-52230 | Sheet | 1 | Y200001- |
| 22 | | 20Y-46-51162 | Sheet | 1 | Y200001- |
| 23 | | 20Y-46-52141 | Sheet | 1 | Y200001- |
| 24 | | 20Y-46-52220 | Sheet | 1 | Y200001- |
| 25 | | 20Y-54-72361 | Sheet | 1 | Y200001- |
| 26 | | 20Y-54-73451 | Sheet | 1 | Y200001- |
| 27 | | 20Y-54-72361 | Sheet | 1 | Y200001- |
| | | 20Y-54-75940 | Cover | 1 | Y200001- |
| 28 | C1 | | • Plate | 1 | Y200001- |
| 29 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |
| 30 | | 20Y-54-76140 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75950 | Cover | 1 | Y200001- |
| 31 | C1 | | • Plate | 1 | Y200001- |
| 32 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |
| 33 | | 20Y-54-76150 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75960 | Cover . | 1 | Y200001- |
| 34 | C1 | | • Plate | 1 | Y200001- |
| 35 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. J1110-007001 Revolving Frame, For Fuel Refill Pump

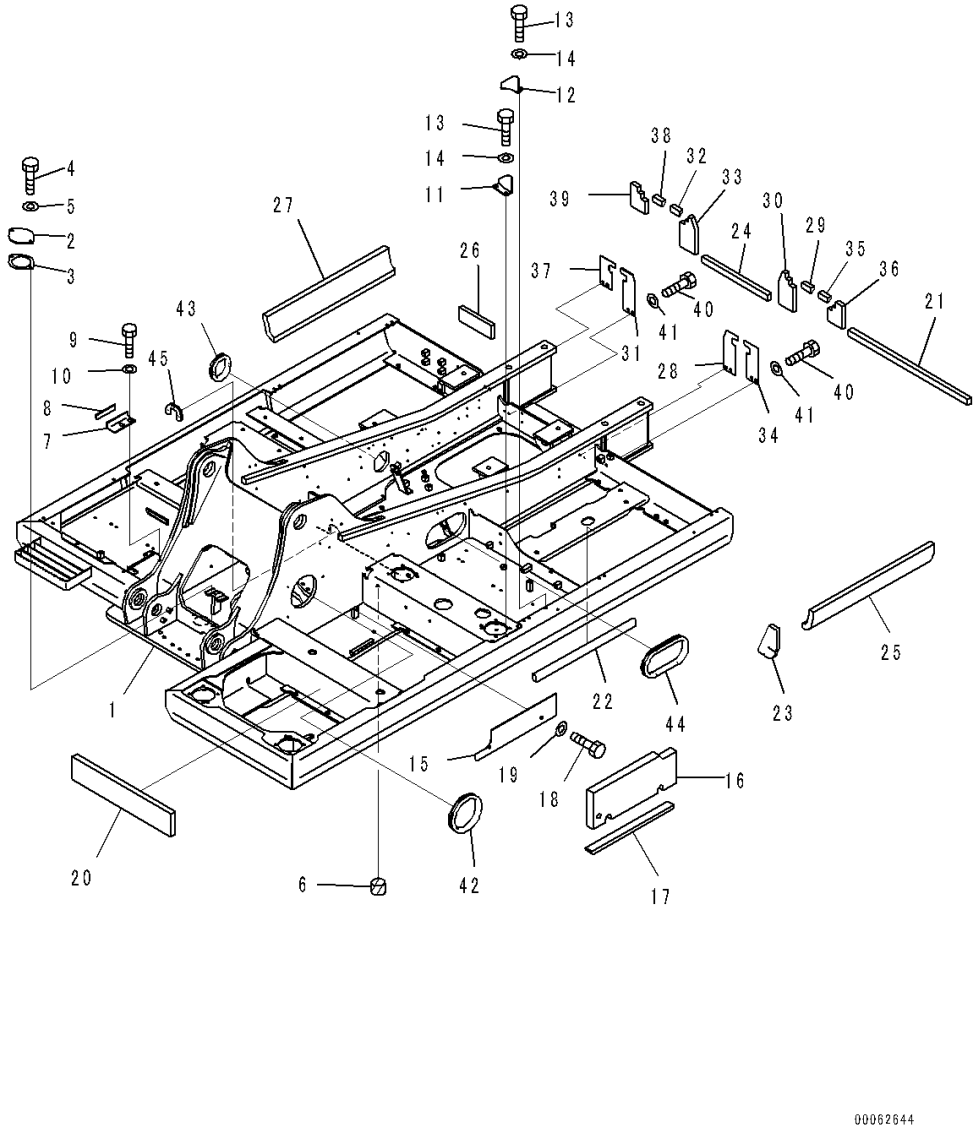


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 36 | | 20Y-54-76160 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75970 | Cover | 1 | Y200001- |
| 37 | C1 | | • Plate | 1 | Y200001- |
| 38 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |
| 39 | | 20Y-54-76170 | • Sheet | 1 | Y200001- |
| 40 | | 01010-81225 | Bolt | 8 | Y200001- |
| 41 | | 01643-31232 | Washer | 8 | Y200001- |
| 42 | | 20Y-46-41170 | Grommet | 1 | Y200001- |
| 43 | | 20Y-46-51180 | Grommet | 1 | Y200001- |
| 44 | | 20Y-46-51190 | Grommet | 1 | Y200001- |
| 45 | | 20Y-46-51140 | Grommet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. J1110-009001 Revolving Frame, For Fuel Refill Pump, With Deck Guard

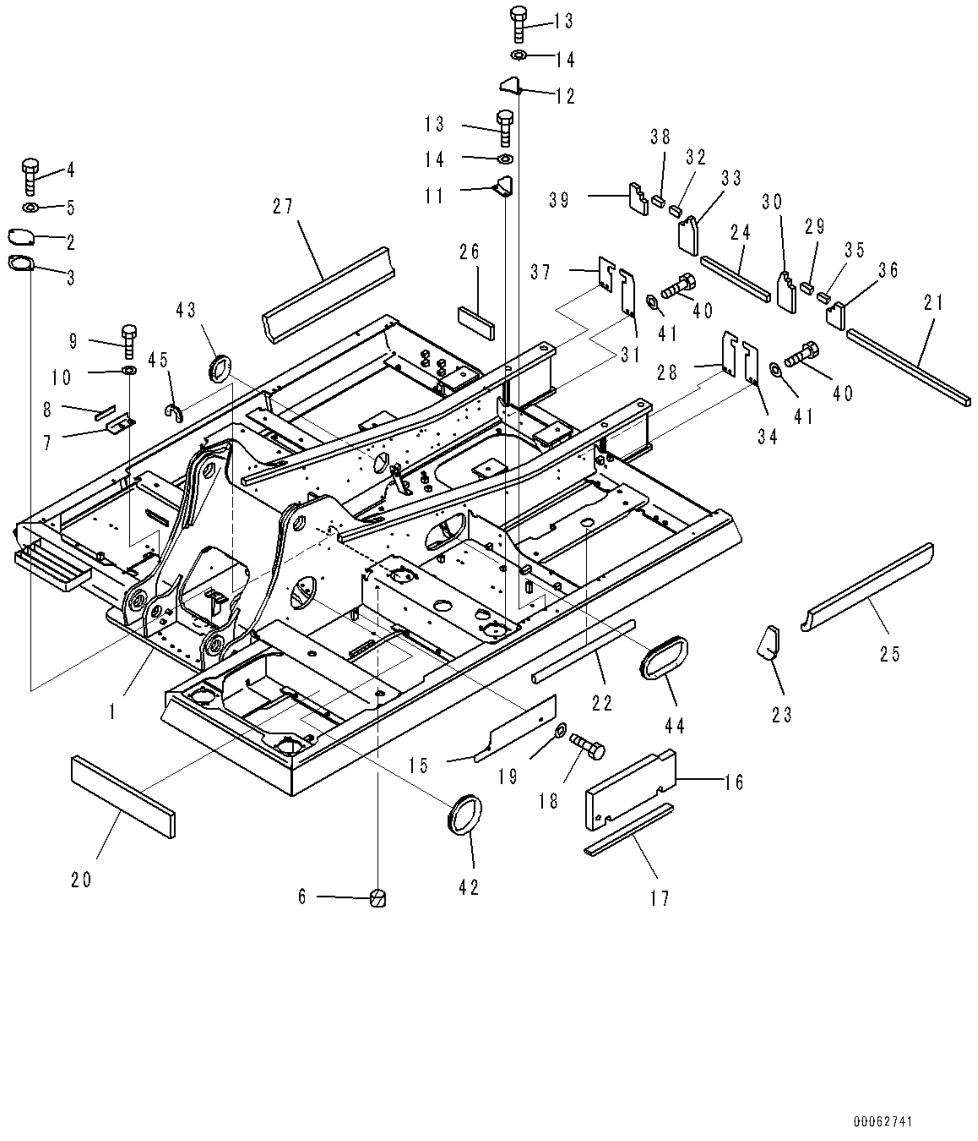


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-46-51702 | Frame | 1 | Y200001- |
| 2 | | 205-30-71181 | Cover | 1 | Y200001- |
| 3 | | 205-30-71191 | Gasket | 1 | Y200001- |
| 4 | | 01010-81230 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 20Y-46-41280 | Plug | 2 | Y200001- |
| 7 | | 206-06-22140 | Bracket | 1 | Y200001- |
| 8 | | 207-06-51330 | • Sheet | 1 | Y200001- |
| 9 | | 01010-81230 | Bolt | 2 | Y200001- |
| 10 | | 175-54-34170 | Washer | 2 | Y200001- |
| 11 | | 20Y-54-61670 | Bracket | 1 | Y200001- |
| 12 | | 20Y-54-61680 | Bracket | 1 | Y200001- |
| 13 | | 01010-81230 | Bolt | 4 | Y200001- |
| 14 | | 01643-31232 | Washer | 4 | Y200001- |
| | | 20Y-46-52441 | Cover | 1 | Y200001- |
| 15 | C1 | | • Cover | 1 | Y200001- |
| 16 | | 20Y-46-52180 | • Sheet | 1 | Y200001- |
| 17 | | 20Y-46-52172 | • Sheet | 1 | Y200001- |
| 18 | | 01010-81230 | Bolt | 2 | Y200001- |
| 19 | | 01643-31232 | Washer | 2 | Y200001- |
| 20 | | 20Y-46-52130 | Sheet | 1 | Y200001- |
| 21 | | 20Y-46-52230 | Sheet | 1 | Y200001- |
| 22 | | 20Y-46-51162 | Sheet | 1 | Y200001- |
| 23 | | 20Y-46-52141 | Sheet | 1 | Y200001- |
| 24 | | 20Y-46-52220 | Sheet | 1 | Y200001- |
| 25 | | 20Y-54-72361 | Sheet | 1 | Y200001- |
| 26 | | 20Y-54-73451 | Sheet | 1 | Y200001- |
| 27 | | 20Y-54-72361 | Sheet | 1 | Y200001- |
| | | 20Y-54-75940 | Cover | 1 | Y200001- |
| 28 | C1 | | • Plate | 1 | Y200001- |
| 29 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |
| 30 | | 20Y-54-76140 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75950 | Cover | 1 | Y200001- |
| 31 | C1 | | • Plate | 1 | Y200001- |
| 32 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |
| 33 | | 20Y-54-76150 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75960 | Cover | 1 | Y200001- |
| 34 | C1 | | • Plate | 1 | Y200001- |
| 35 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. J1110-009001 Revolving Frame, For Fuel Refill Pump, With Deck Guard

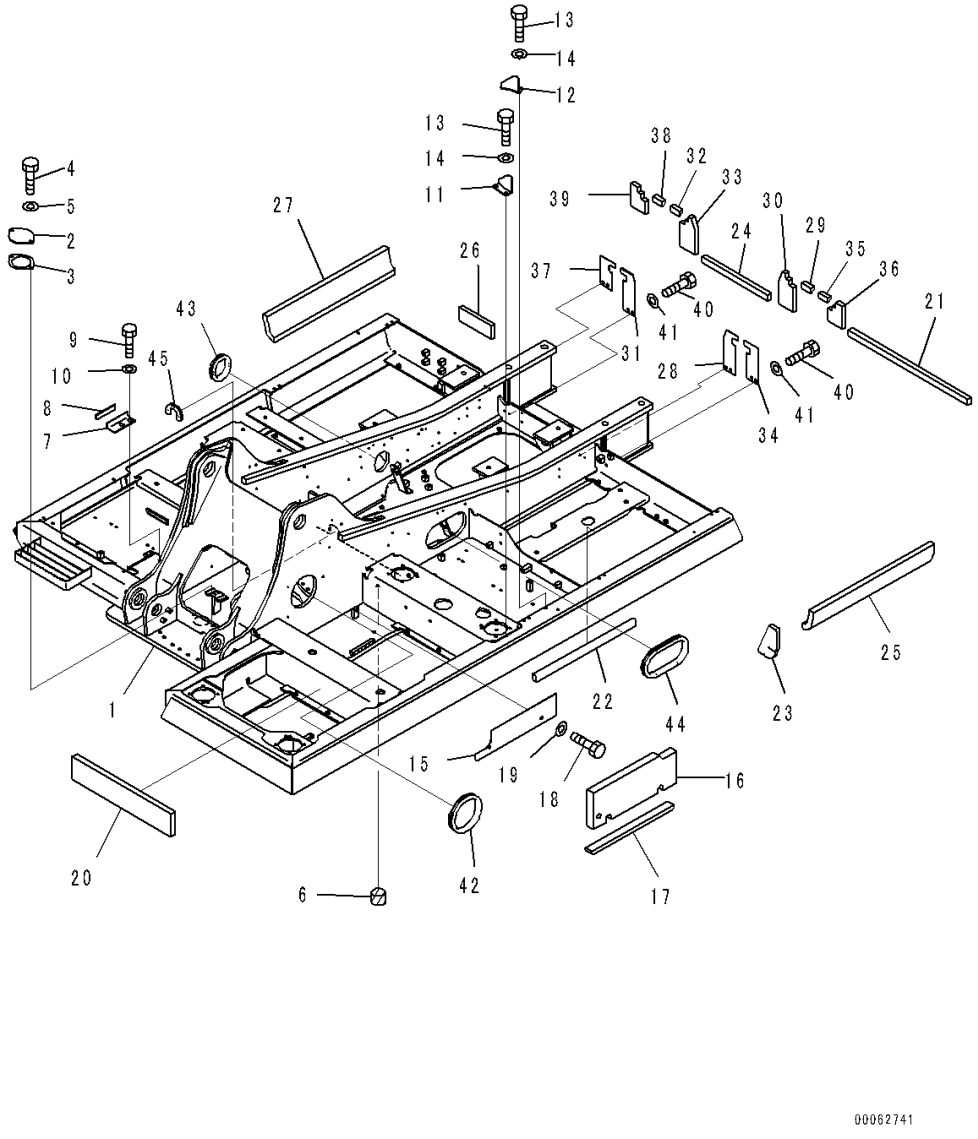


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 36 | | 20Y-54-76160 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75970 | Cover | 1 | Y200001- |
| 37 | C1 | | • Plate | 1 | Y200001- |
| 38 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |
| 39 | | 20Y-54-76170 | • Sheet | 1 | Y200001- |
| 40 | | 01010-81225 | Bolt | 8 | Y200001- |
| 41 | | 01643-31232 | Washer | 8 | Y200001- |
| 42 | | 20Y-46-41170 | Grommet | 1 | Y200001- |
| 43 | | 20Y-46-51180 | Grommet | 1 | Y200001- |
| 44 | | 20Y-46-51190 | Grommet | 1 | Y200001- |
| 45 | | 20Y-46-51140 | Grommet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. J1110-015001 Revolving Frame, With Webasto Heater

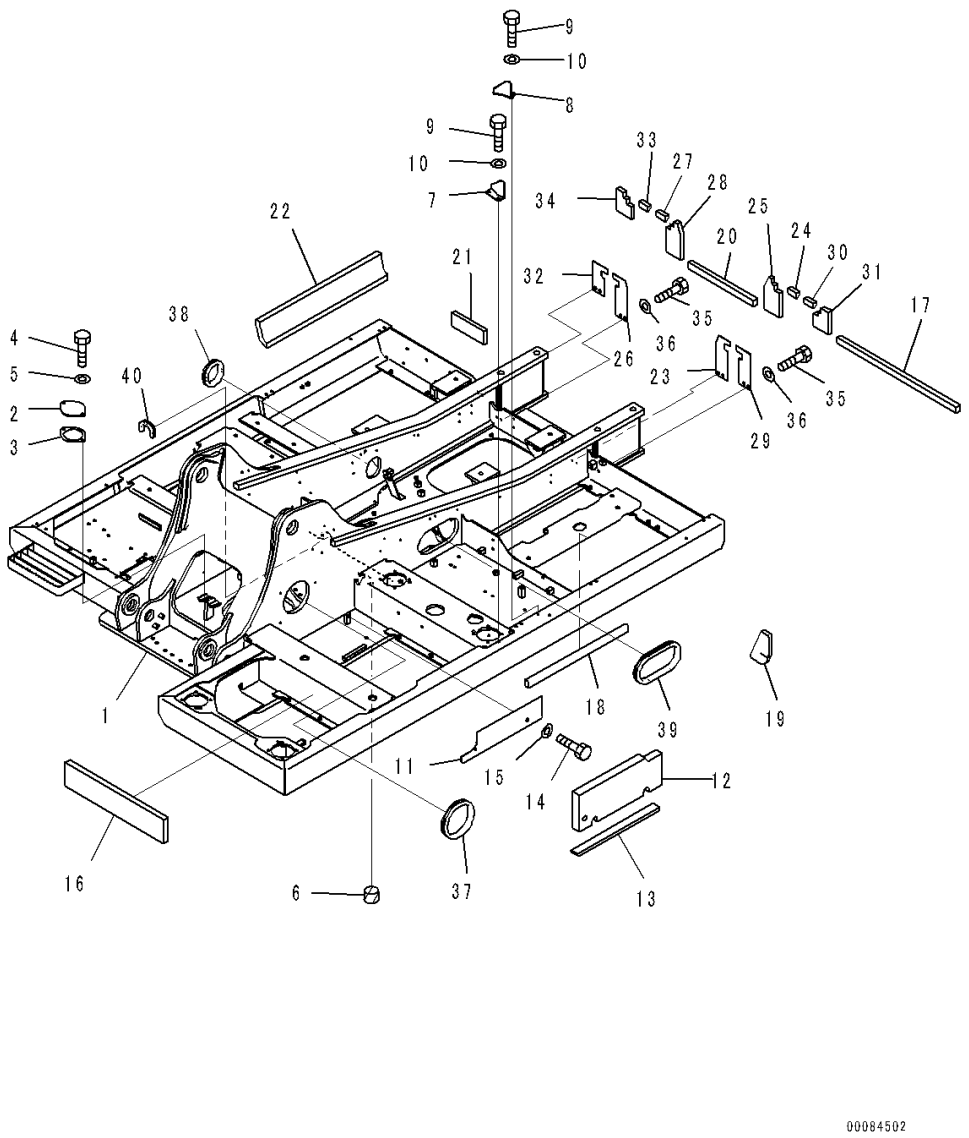


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-46-56100 | Frame | 1 | Y200001- |
| 2 | | 205-30-71181 | Cover | 1 | Y200001- |
| 3 | | 205-30-71191 | Gasket | 1 | Y200001- |
| 4 | | 01010-81230 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 20Y-46-41280 | Plug | 2 | Y200001- |
| 7 | | 20Y-54-61670 | Bracket | 1 | Y200001- |
| 8 | | 20Y-54-61680 | Bracket | 1 | Y200001- |
| 9 | | 01010-81230 | Bolt | 4 | Y200001- |
| 10 | | 01643-31232 | Washer | 4 | Y200001- |
| | | 20Y-46-52441 | Cover | 1 | Y200001- |
| 11 | C1 | | • Cover | 1 | Y200001- |
| 12 | | 20Y-46-52180 | • Sheet | 1 | Y200001- |
| 13 | | 20Y-46-52172 | • Sheet | 1 | Y200001- |
| 14 | | 01010-81230 | Bolt | 2 | Y200001- |
| 15 | | 01643-31232 | Washer | 2 | Y200001- |
| 16 | | 20Y-46-52130 | Sheet | 1 | Y200001- |
| 17 | | 20Y-46-52230 | Sheet | 1 | Y200001- |
| 18 | | 20Y-46-51162 | Sheet | 1 | Y200001- |
| 19 | | 20Y-46-52141 | Sheet | 1 | Y200001- |
| 20 | | 20Y-46-52220 | Sheet | 1 | Y200001- |
| 21 | | 20Y-54-73451 | Sheet | 1 | Y200001- |
| 22 | | 20Y-54-72361 | Sheet | 1 | Y200001- |
| | | 20Y-54-75940 | Cover | 1 | Y200001- |
| 23 | C1 | | • Plate | 1 | Y200001- |
| 24 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |
| 25 | | 20Y-54-76140 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75950 | Cover | 1 | Y200001- |
| 26 | C1 | | • Plate | 1 | Y200001- |
| 27 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |
| 28 | | 20Y-54-76150 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75960 | Cover | 1 | Y200001- |
| 29 | C1 | | • Plate | 1 | Y200001- |
| 30 | | 20Y-54-76110 | • Sheet | 1 | Y200001- |
| 31 | | 20Y-54-76160 | • Sheet | 1 | Y200001- |
| | | 20Y-54-75970 | Cover | 1 | Y200001- |
| 32 | C1 | | • Plate | 1 | Y200001- |
| 33 | | 20Y-54-76120 | • Sheet | 1 | Y200001- |
| 34 | | 20Y-54-76170 | • Sheet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. J1110-015001 Revolving Frame, With Webasto Heater

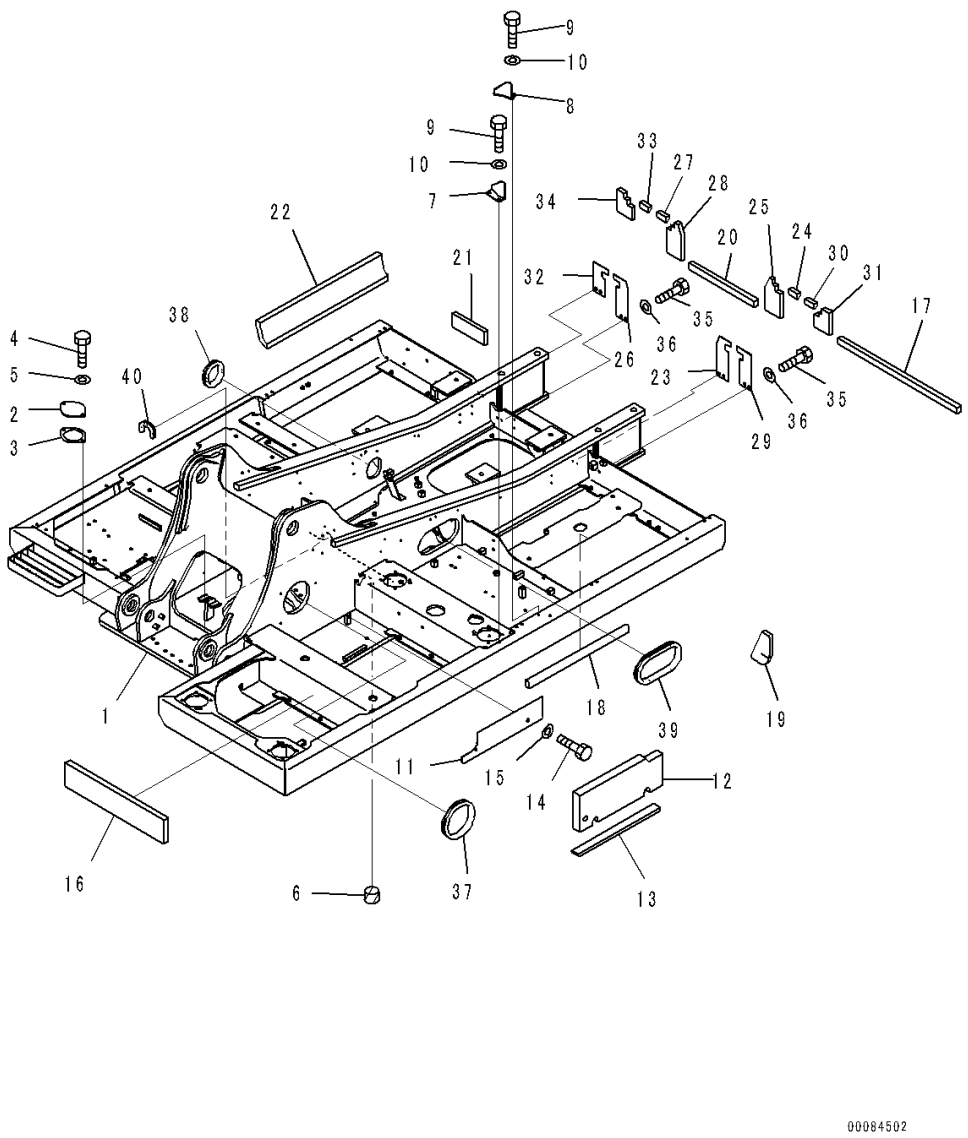


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 35 | | 01010-81225 | Bolt | 8 | Y200001- |
| 36 | | 01643-31232 | Washer | 8 | Y200001- |
| 37 | | 20Y-46-41170 | Grommet | 1 | Y200001- |
| 38 | | 20Y-46-51180 | Grommet | 1 | Y200001- |
| 39 | | 20Y-46-51190 | Grommet | 1 | Y200001- |
| 40 | | 20Y-46-51140 | Grommet | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. J1310-002001 Boom Foot Pin

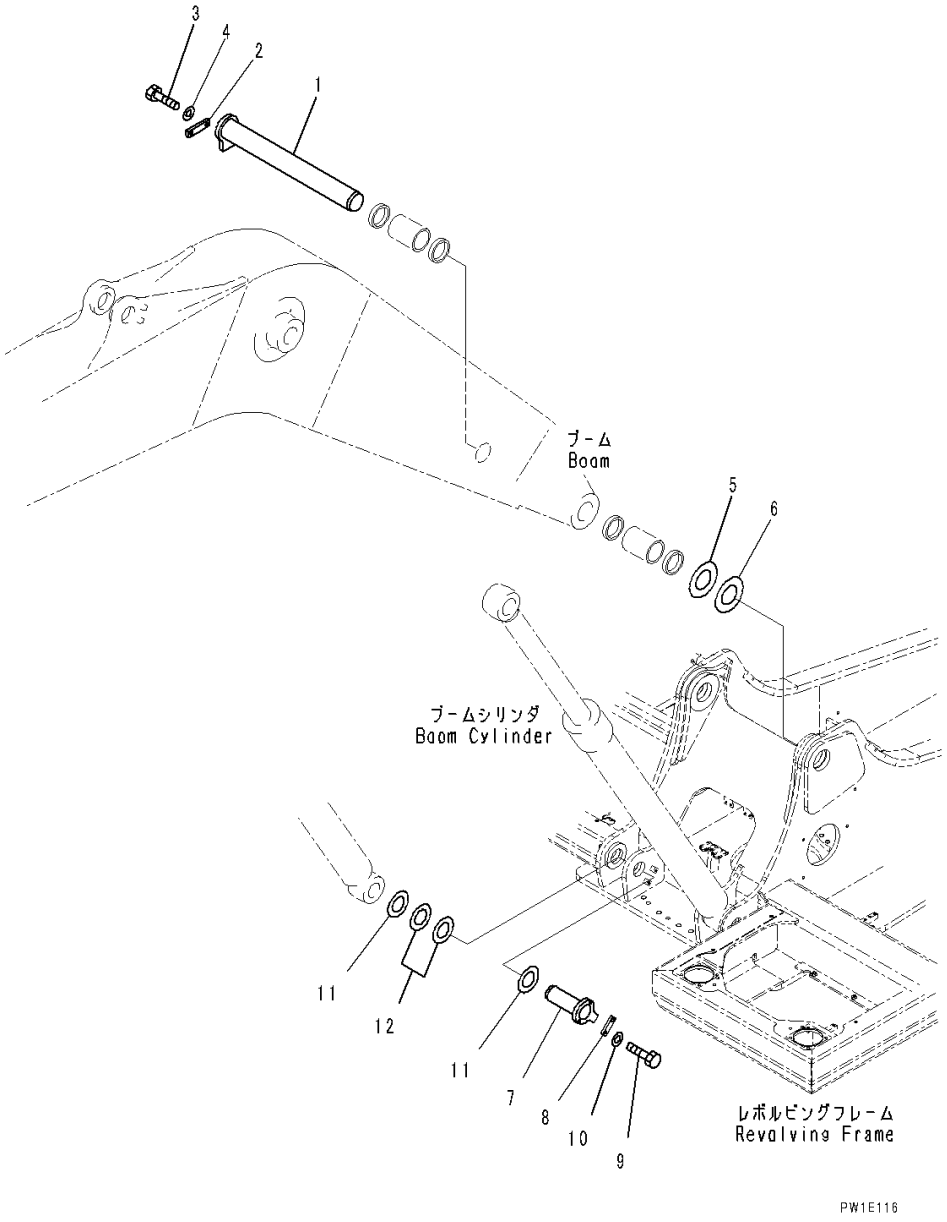



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-70-55160 | Pin | 1 | Y200001- |
| 2 | | 20Y-70-11190 | Plate | 1 | Y200001- |
| 3 | | 01010-81640 | Bolt | 2 | Y200001- |
| 4 | | 01643-31645 | Washer | 2 | Y200001- |
| 5 | | 20Y-70-11410 | Spacer, T=0.8mm | 1 | Y200001- |
| 6 | | 20Y-70-11420 | Spacer, T=1.5mm | 4 | Y200001- |
| 7 | | 205-70-71210 | Pin | 2 | Y200001- |
| 8 | | 205-70-66580 | Plate | 2 | Y200001- |
| 9 | | 01010-81235 | Bolt | 4 | Y200001- |
| 10 | | 01643-31232 | Washer | 4 | Y200001- |
| 11 | | 20Y-70-11430 | Spacer, T=0.8mm | 2 | Y200001- |
| 12 | | 20Y-70-11440 | Spacer, T=1.5mm | 6 | Y200001- |

# OPERATOR'S COMPARTMENT AND CONTROL SYSTEM

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. K0110-001001 Operator's Seat, Suspension Type, (1/2)

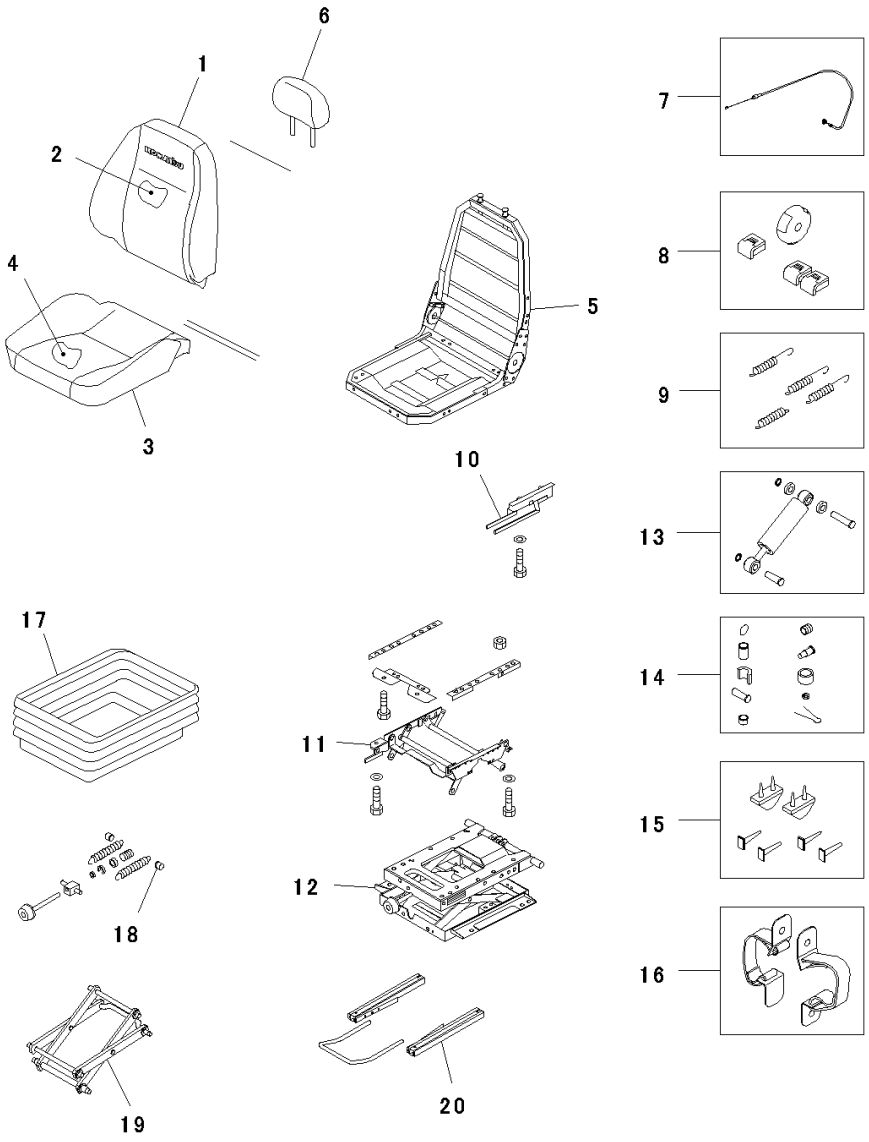


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-57-41103 | Seat Assembly | 1 | Y200001- |
| | | AS195381 | • Seat Assembly | 1 | Y200001- |
| 1 | | AS195367 | •• Back Seat Cover Kit | 1 | Y200001- |
| 2 | | AS195369 | •• Back Seat Foam Kit | 1 | Y200001- |
| 3 | | AS195370 | •• Seat Cover Kit | 1 | Y200001- |
| 4 | | AS195372 | •• Seat Foam Kit | 1 | Y200001- |
| 5 | | AS195373 | •• Frame Kit | 1 | Y200001- |
| 6 | | AS195374 | •• Headrest Kit | 1 | Y200001- |
| 7 | | AS192161 | •• Cable Kit | 1 | Y200001- |
| 8 | | AS186833 | •• Handle Kit | 1 | Y200001- |
| 9 | | AS160122 | • Spring Kit | 1 | Y200001- |
| 10 | | AS195376 | • Latch Kit | 1 | Y200001- |
| 11 | | AS195377 | • Riser Kit | 1 | Y200001- |
| 12 | | AS195388 | • Suspension Kit | 1 | Y200001- |
| 13 | | AS164899 | • Damper Kit | 1 | Y200001- |
| 14 | | AS166011 | • Bearing Kit. | 1 | Y200001- |
| 15 | | AS195389 | • Up Stop And Bump Stop Kit. | 1 | Y200001- |
| 16 | | AS195390 | • Tether Belt Kit | 1 | Y200001- |
| 17 | | AS195391 | • Suspension Cover Kit | 1 | Y200001- |
| 18 | | AS195392 | • Adjuster Kit, Weight | 1 | Y200001- |
| 19 | | AS165989 | • Lever | 1 | Y200001- |
| 20 | | AS195393 | • Adjuster Kit. | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K0110-001002 Operator's Seat, Suspension Type, (2/2)

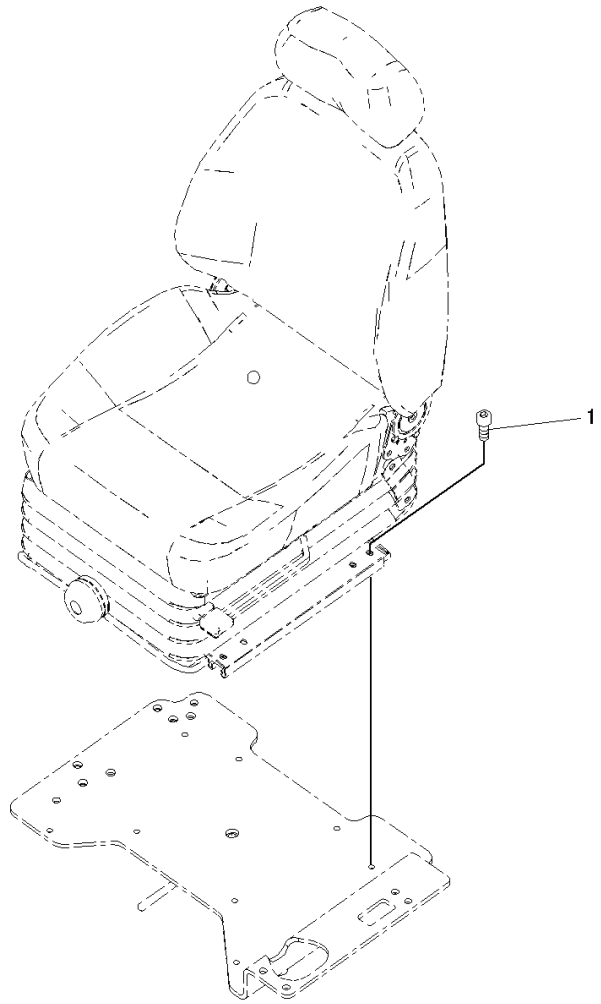


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01252-80825 | Bolt..... | 4 | Y200001- |

https://truckmanualshub.com/

# FIG. K0160-002001 Seat Belt, 78mm Width

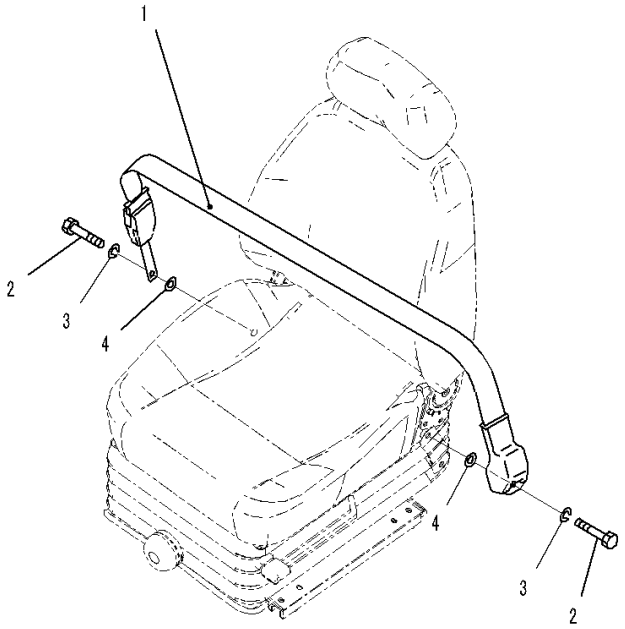



00045683

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22B-57-11911 | Belt | 1 | Y200001- |
| 2 | | 02030-70751 | • Bolt | 2 | Y200001- |
| 3 | | 09409-00002 | • Washer | 2 | Y200001- |
| 4 | | 01643-11232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K0160-003001 Seat Belt, 78mm Width, Non-Cinching

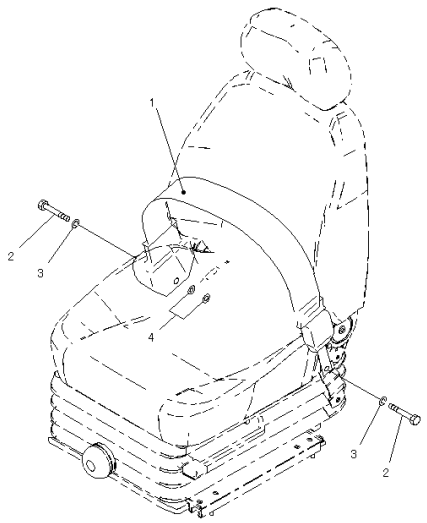


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-57-A1661 | Seat Belt, Lap | 1 | Y200001- |
| 2 | | 02030-70757 | • Bolt | 2 | Y200001- |
| 3 | | 09409-00002 | • Washer | 2 | Y200001- |
| 4 | | 01643-11232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K0220-001001 Head Guard

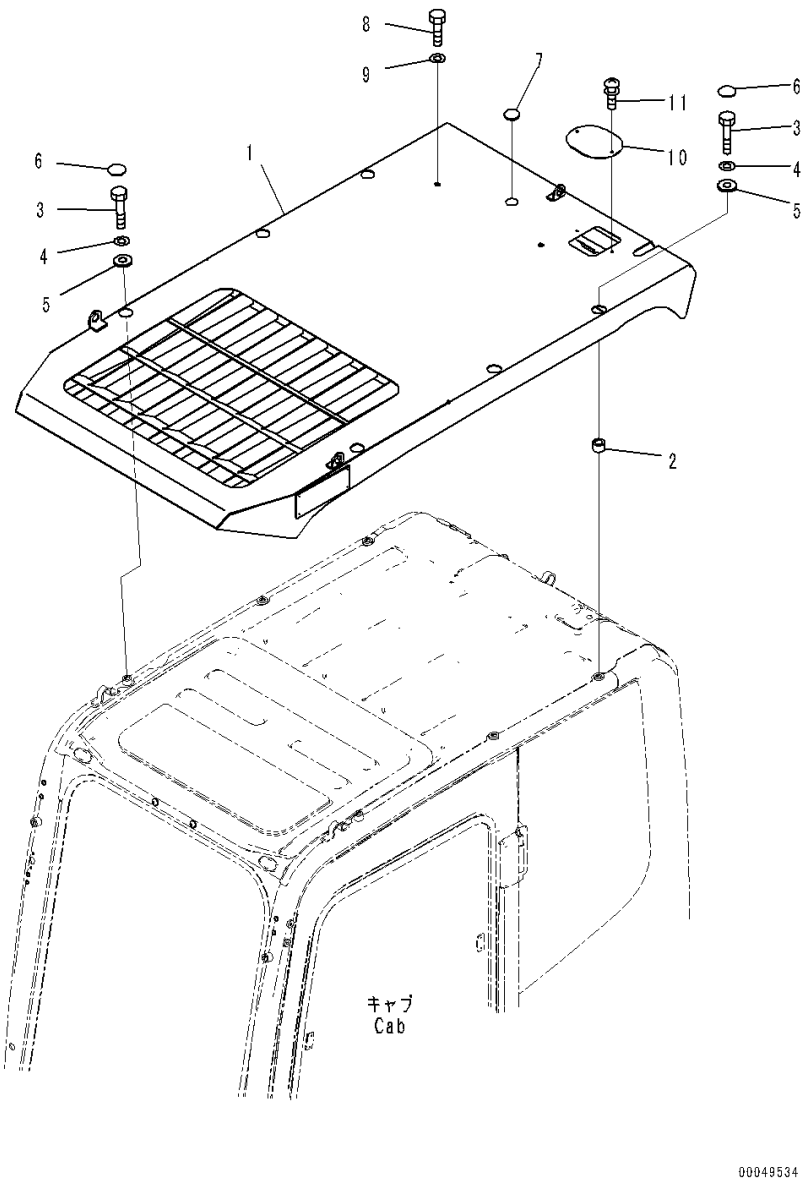


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-954-6122 | Guard | 1 | Y200001- |
| 2 | | 20Y-954-6241 | Pipe | 4 | Y200001- |
| 3 | | 01010-81280 | Bolt | 6 | Y200001- |
| 4 | | 01643-31232 | Washer | 6 | Y200001- |
| 5 | | 130-43-64260 | Collar | 6 | Y200001- |
| 6 | | 195-Z11-2970 | Cap | 6 | Y200001- |
| 7 | | 09415-02512 | Cap | 1 | Y200001- |
| 8 | | 01010-D1220 | Bolt | 2 | Y200001- |
| 9 | | 01643-71232 | Washer | 2 | Y200001- |
| 10 | | 20Y-954-6250 | Plate | 1 | Y200001- |
| 11 | | 01023-20612 | Screw | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K0230-001001 Front Guard, Full, Level 2

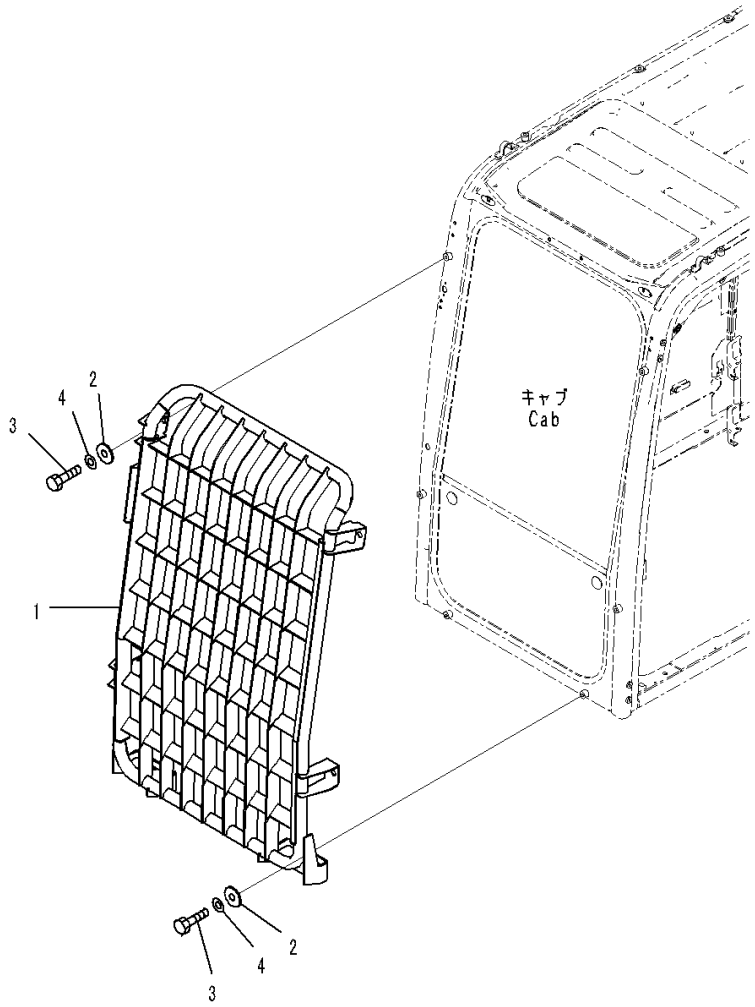


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-954-6111 | Guard | 1 | Y200001- |
| 2 | | 130-43-64260 | Collar | 6 | Y200001- |
| 3 | | 01010-D1225 | Bolt | 6 | Y200001- |
| 4 | | 01643-71232 | Washer | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. K0230-002001 Front Guard, Half

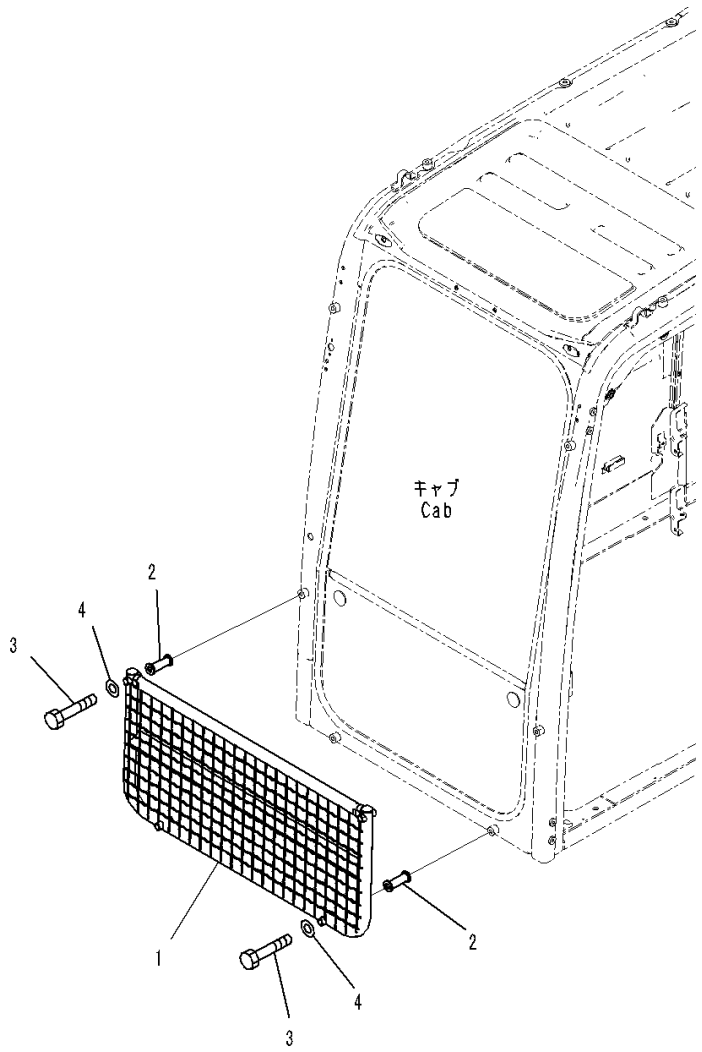


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-954-6132 | Guard | 1 | Y200001- |
| 2 | | 20Y-954-6192 | Spacer | 4 | Y200001- |
| 3 | | 01011-D1245 | Bolt | 4 | Y200001- |
| 4 | | 01643-71232 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. K0230-003001 Front Guard, Full, Level 1

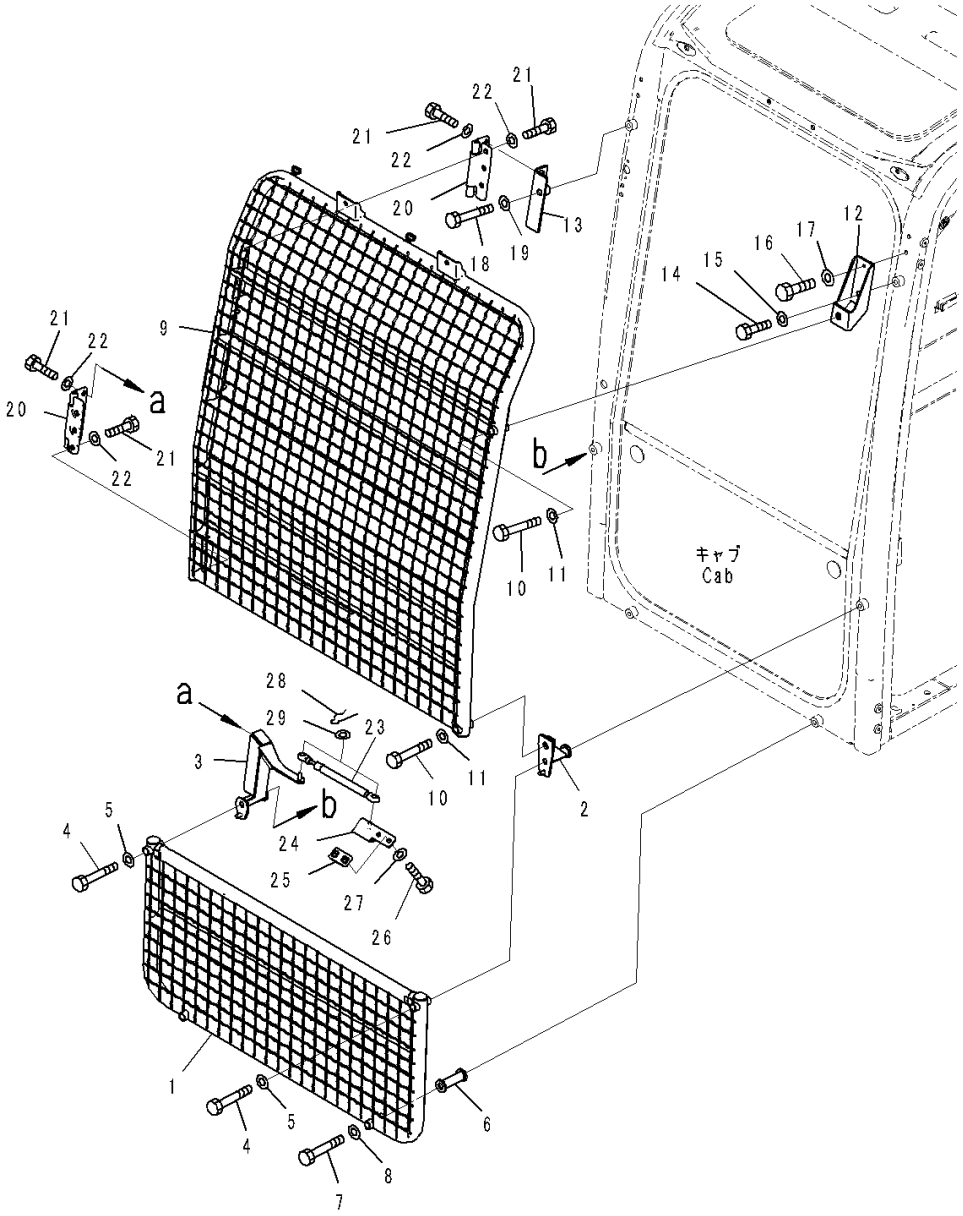


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-954-6132 | Guard | 1 | Y200001- |
| 2 | | 20Y-954-6171 | Bracket | 1 | Y200001- |
| 3 | | 20Y-954-6181 | Bracket | 1 | Y200001- |
| 4 | | 01011-D1245 | Bolt | 2 | Y200001- |
| 5 | | 01643-71232 | Washer | 2 | Y200001- |
| 6 | | 20Y-954-6192 | Spacer | 2 | Y200001- |
| 7 | | 01011-D1245 | Bolt | 2 | Y200001- |
| 8 | | 01643-71232 | Washer | 2 | Y200001- |
| 9 | | 20Y-954-6142 | Guard | 1 | Y200001- |
| 10 | | 01010-D1275 | Bolt | 2 | Y200001- |
| 11 | | 01643-71232 | Washer | 2 | Y200001- |
| 12 | | 20Y-954-6151 | Bracket | 1 | Y200001- |
| 13 | | 20Y-954-6161 | Bracket | 1 | Y200001- |
| 14 | | 01010-D1220 | Bolt | 1 | Y200001- |
| 15 | | 01643-71232 | Washer | 1 | Y200001- |
| 16 | | 01010-D0640 | Bolt | 1 | Y200001- |
| 17 | | 01643-70623 | Washer | 1 | Y200001- |
| 18 | | 01010-D1245 | Bolt | 1 | Y200001- |
| 19 | | 01643-71232 | Washer | 1 | Y200001- |
| 20 | | 14X-911-1330 | Hinge | 2 | Y200001- |
| 21 | | 01010-D1025 | Bolt | 12 | Y200001- |
| 22 | | 01643-71032 | Washer | 12 | Y200001- |
| 23 | | 20Y-54-36342 | Gas Spring Assembly | 1 | Y200001- |
| 24 | | 22B-954-1840 | Plate | 1 | Y200001- |
| 25 | | 22B-954-1660 | Plate | 1 | Y200001- |
| 26 | | 01010-D0820 | Bolt | 2 | Y200001- |
| 27 | | 01643-70823 | Washer | 2 | Y200001- |
| 28 | | 04052-10833 | Pin, Snap | 2 | Y200001- |
| 29 | | 01643-70823 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K0310-001001 Floor Mat

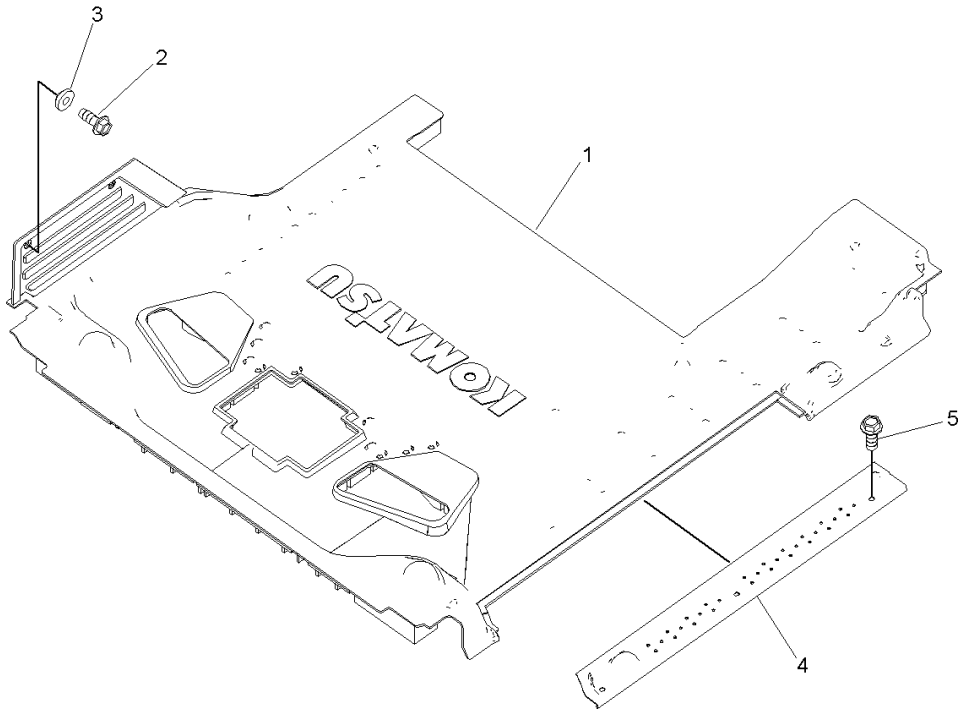


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-14713 | Floor Mat | 1 | Y200001- |
| 2 | | 01435-40616 | Bolt | 2 | Y200001- |
| 3 | | 20Y-43-41290 | Collar | 2 | Y200001- |
| 4 | | 20Y-53-11953 | Cover | 1 | Y200001- |
| 5 | | 01435-40612 | Bolt | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. K0310-002001 Floor Mat, 1-actuator

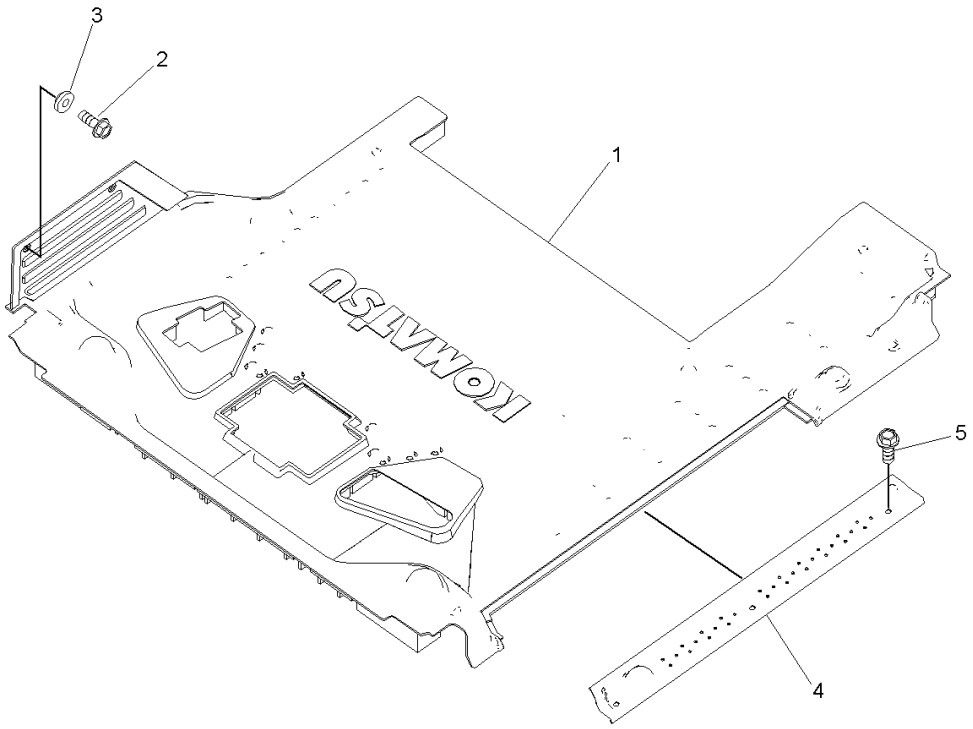


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-14723 | Floor Mat | 1 | Y200001- |
| 2 | | 01435-40616 | Bolt. | 2 | Y200001- |
| 3 | | 20Y-43-41290 | Collar . | 2 | Y200001- |
| 4 | | 20Y-53-11953 | Cover . | 1 | Y200001- |
| 5 | | 01435-40612 | Bolt. | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. K0310-003001 Floor Mat, 2-actuator

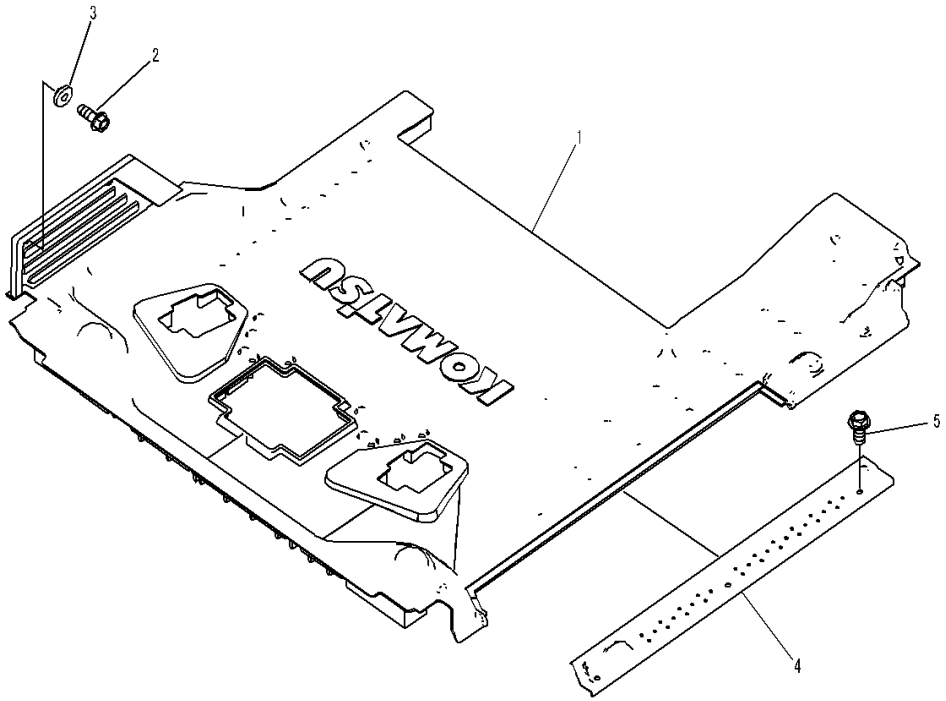


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-14733 | Floor Mat. | 1 | Y200001- |
| 2 | | 01435-40616 | Bolt | 2 | Y200001- |
| 3 | | 20Y-43-41290 | Collar | 2 | Y200001- |
| 4 | | 20Y-53-11953 | Cover . | 1 | Y200001- |
| 5 | | 01435-40612 | Bolt | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. K0320-001001 Rain Visor

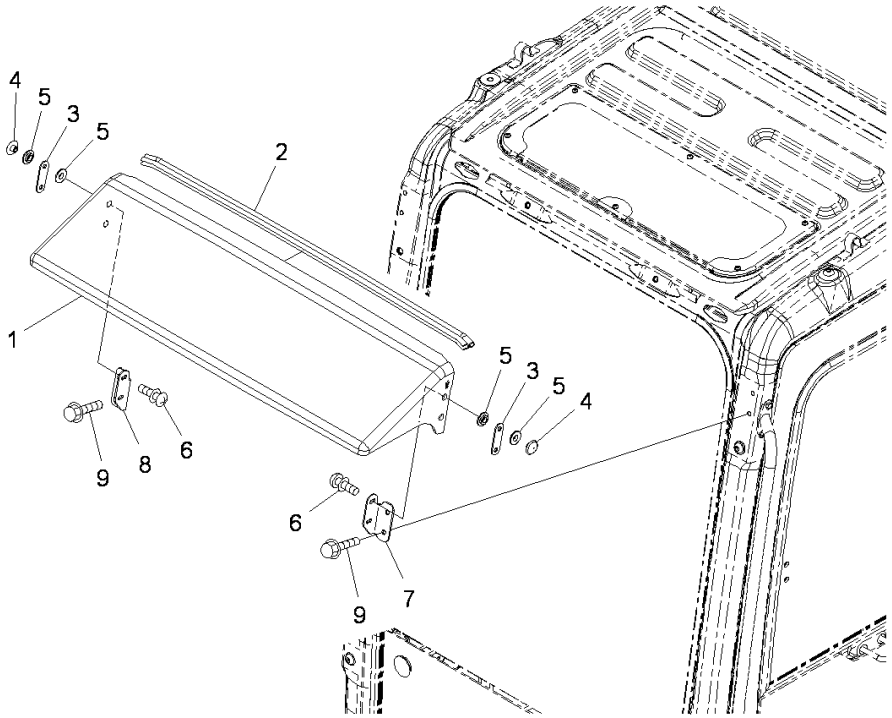


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-15710 | Rain Visor | 1 | Y200001- |
| 2 | | 20Y-53-15750 | • Seal | 1 | Y200001- |
| 3 | | 20Y-54-52530 | Plate | 2 | Y200001- |
| 4 | | 205-54-51720 | Retainer | 4 | Y200001- |
| 5 | | 205-54-51730 | Packing | 8 | Y200001- |
| 6 | | 01023-20612 | Screw | 4 | Y200001- |
| 7 | | 20Y-53-15780 | Plate | 1 | Y200001- |
| 8 | | 20Y-53-15790 | Plate | 1 | Y200001- |
| 9 | | 01435-40620 | Bolt | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. K0330-001001A Sun Visor

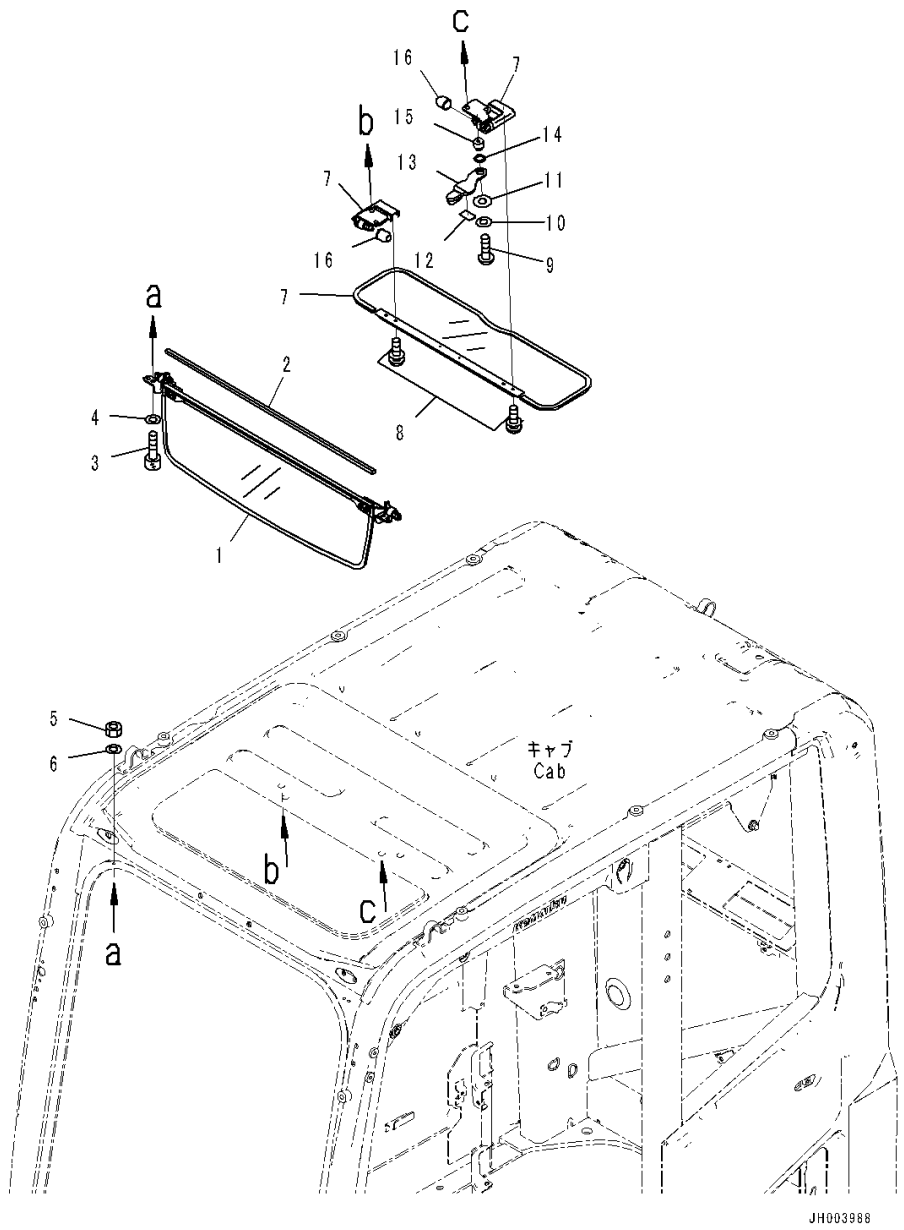


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-16741 | Sun Visor,Front | 1 | Y200001- |
| 2 | | 20Y-53-16910 | • Seal | 1 | Y200001- |
| 3 | | 01252-80616 | Bolt | 4 | Y200001- |
| 4 | | 01643-70623 | Washer | 4 | Y200001- |
| 5 | | 01580-10605 | Nut | 4 | Y200001- |
| 6 | | 01640-20610 | Washer | 4 | Y200001- |
| 7 | | 20Y-53-17411 | Sun Visor | 1 | Y200001- |
| 8 | | 01023-20616 | • Screw | 4 | Y200001- |
| 9 | | 01245-00816 | • Screw | 1 | Y200001- |
| 10 | | 01643-70823 | • Washer | 1 | Y200001- |
| 11 | | 01643-71032 | • Washer | 1 | Y200001- |
| 12 | | 20Y-53-17420 | • Plate | 1 | Y200001- |
| 13 | | 20Y-54-52961 | • Lever | 1 | Y200001- |
| 14 | | 20Y-54-52970 | • Spring | 1 | Y200001- |
| 15 | | 20Y-54-52980 | • Boss | 1 | Y200001- |
| 16 | | 08013-01513 | • Cap | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K0350-001001 Window Washer

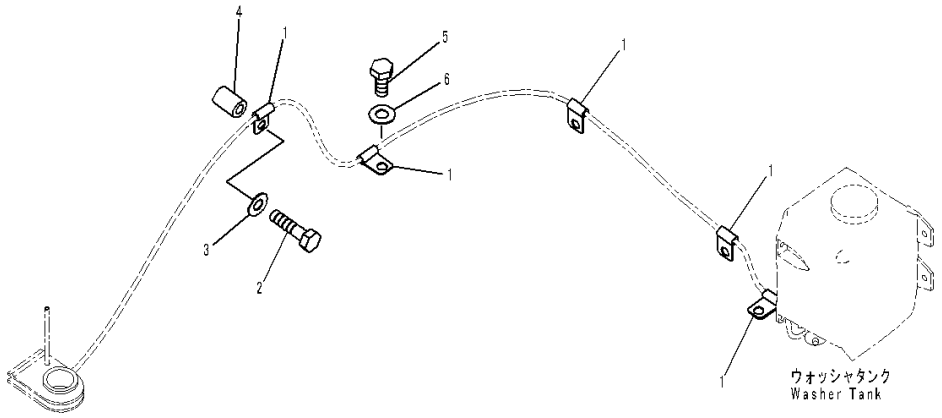


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 21T-38-12270 | Clip | 5 | Y200001- |
| 2 | | 01010-81250 | Bolt | 1 | Y200001- |
| 3 | | 01643-31232 | Washer | 1 | Y200001- |
| 4 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 5 | | 01010-81225 | Bolt | 1 | Y200001- |
| 6 | | 01643-31232 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K0700-001001 Air Conditioner

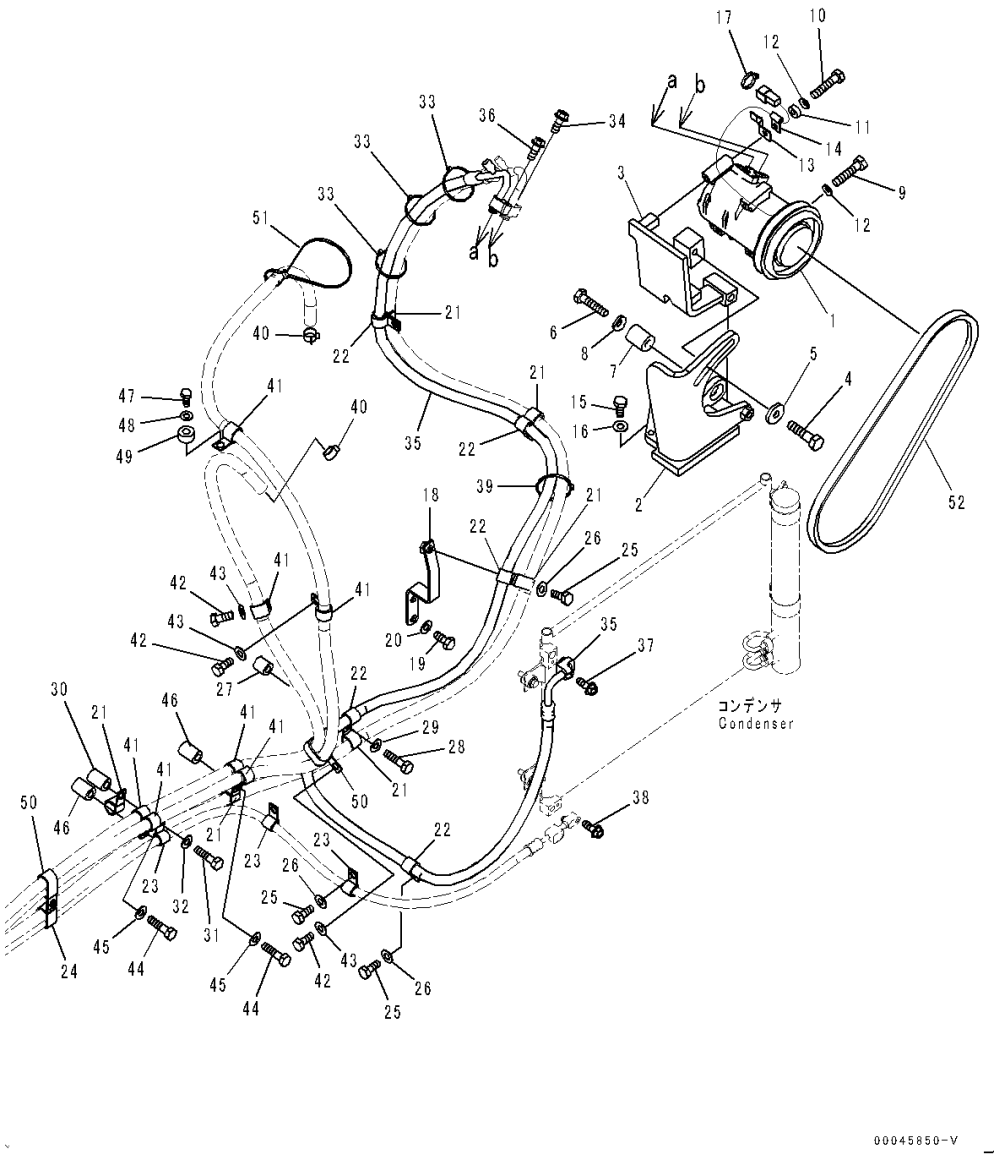


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-810-1260 | Compressor Assembly | 1 | Y200001- |
| 2 | | 20Y-810-1112 | Bracket | 1 | Y200001- |
| 3 | | 20Y-979-6612 | Bracket | 1 | Y200001- |
| 4 | | 01010-81440 | Bolt | 1 | Y200001- |
| 5 | | 195-71-32220 | Washer | 1 | Y200001- |
| 6 | | 20Y-810-1190 | Bolt | 1 | Y200001- |
| 7 | | 20Y-810-1180 | Spacer | 1 | Y200001- |
| 8 | | 01643-31445 | Washer | 1 | Y200001- |
| 9 | | 01010-80875 | Bolt | 3 | Y200001- |
| 10 | | 01010-80885 | Bolt | 1 | Y200001- |
| 11 | | 22N-957-1420 | Collar | 1 | Y200001- |
| 12 | | 01643-30823 | Washer | 4 | Y200001- |
| 13 | | 08053-01510 | Clip | 1 | Y200001- |
| 14 | | 04434-50508 | Clip | 1 | Y200001- |
| 15 | | 01010-81035 | Bolt | 3 | Y200001- |
| 16 | | 01643-31032 | Washer | 3 | Y200001- |
| 17 | | 08034-20519 | Band | 1 | Y200001- |
| 18 | | 20Y-810-1130 | Bracket | 1 | Y200001- |
| 19 | | 01010-81225 | Bolt | 2 | Y200001- |
| 20 | | 01643-31232 | Washer | 2 | Y200001- |
| 21 | | 04434-52112 | Clip | 6 | Y200001- |
| 22 | | 04434-51912 | Clip | 5 | Y200001- |
| 23 | | 04434-51512 | Clip | 3 | Y200001- |
| 24 | | 20Y-810-1170 | Clip | 1 | Y200001- |
| 25 | | 01010-81225 | Bolt | 4 | Y200001- |
| 26 | | 01643-31232 | Washer | 4 | Y200001- |
| 27 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 28 | | 01010-81250 | Bolt | 1 | Y200001- |
| 29 | | 01643-31232 | Washer | 1 | Y200001- |
| 30 | | 20Y-03-11220 | Collar | 1 | Y200001- |
| 31 | | 01010-81260 | Bolt | 1 | Y200001- |
| 32 | | 01643-31232 | Washer | 1 | Y200001- |
| 33 | | 08034-20519 | Band | 3 | Y200001- |
| 34 | | 01435-00630 | Bolt | 1 | Y200001- |
| 35 | | 20Y-810-1141 | Hose | 1 | Y200001- |
| 36 | | 01435-00630 | Bolt | 1 | Y200001- |
| 37 | | 01435-00625 | Bolt | 1 | Y200001- |
| 38 | | 01435-00625 | Bolt | 1 | Y200001- |
| 39 | | 08034-20519 | Band | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K0700-001001 Air Conditioner

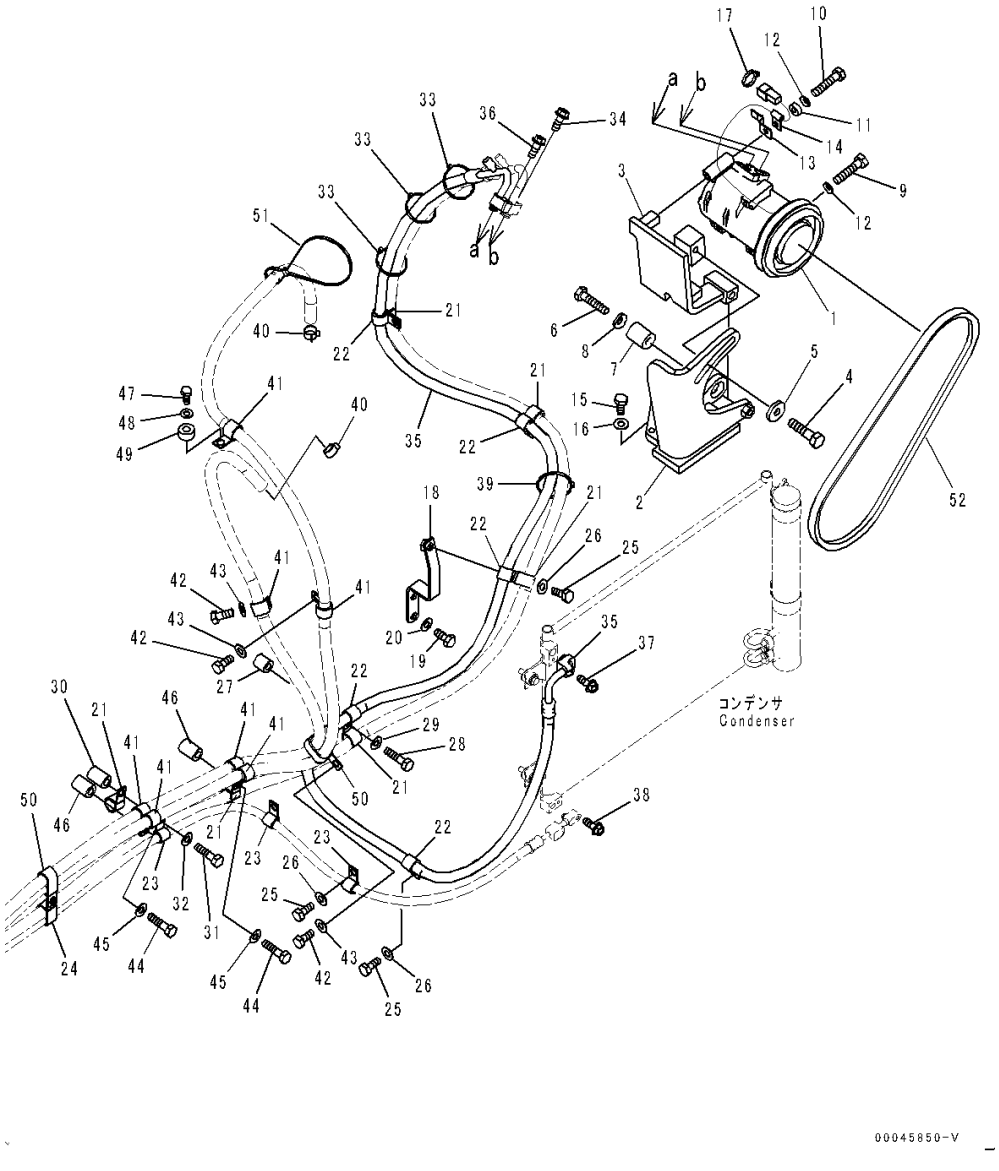


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 11Y-09-11160 | Clip | 2 | Y200001- |
| 41 | | 04434-52112 | Clip | 7 | Y200001- |
| 42 | | 01010-81225 | Bolt | 3 | Y200001- |
| 43 | | 01643-31232 | Washer | 3 | Y200001- |
| 44 | | 01010-81260 | Bolt | 2 | Y200001- |
| 45 | | 01643-31232 | Washer | 2 | Y200001- |
| 46 | | 20Y-03-11220 | Collar | 2 | Y200001- |
| 47 | | 01010-81240 | Bolt | 1 | Y200001- |
| 48 | | 01643-31232 | Washer | 1 | Y200001- |
| 49 | | 131-43-41631 | Spacer | 1 | Y200001- |
| 50 | | 04435-52112 | Clip | 2 | Y200001- |
| 51 | | 134-03-61410 | Band | 1 | Y200001- |
| 52 | | 04120-21747 | V-belt | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K0830-004001 Fire Extinguisher, Russian

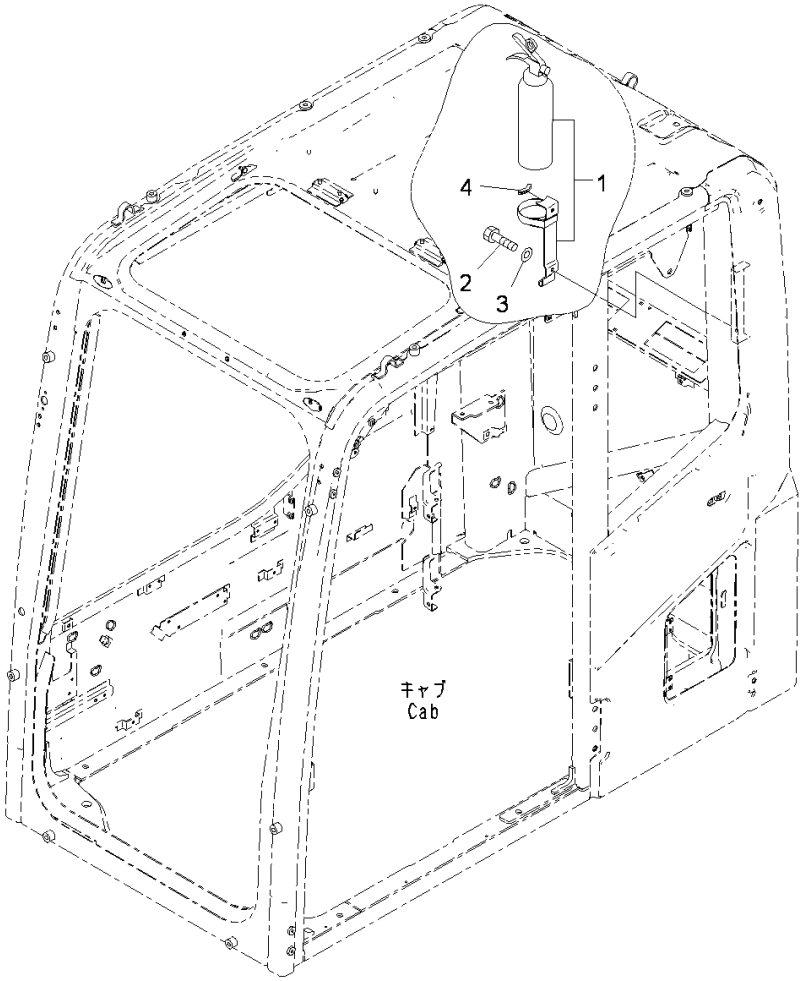


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22B-98-11140 | Fire Extinguisher | 1 | Y200001- |
| 2 | | 01010-D0820 | Bolt | 2 | Y200001- |
| 3 | | 01643-70823 | Washer | 2 | Y200001- |
| 4 | | 208-53-11780 | Trim | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. K0840-001001 First Aid Box

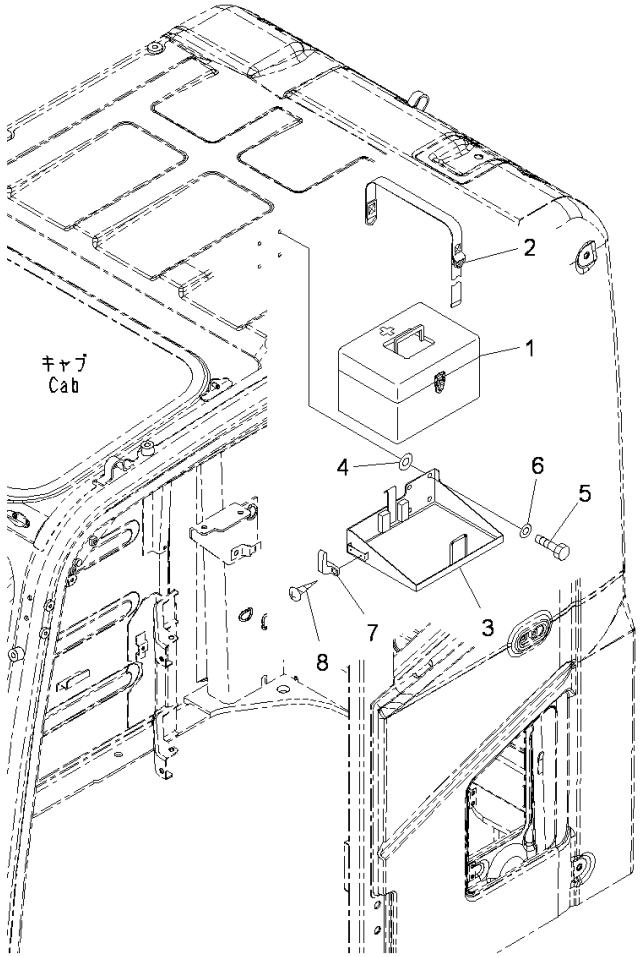



00064613

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 195-911-6531 | Box | 1 | Y200001- |
| 2 | | 195-911-6562 | Band | 1 | Y200001- |
| 3 | | 20Y-54-53370 | Bracket | 1 | Y200001- |
| 4 | | 20D-62-17620 | Collar | 4 | Y200001- |
| 5 | | 01010-80835 | Bolt | 4 | Y200001- |
| 6 | | 01643-30823 | Washer | 4 | Y200001- |
| 7 | | 205-54-51250 | Hanger | 1 | Y200001- |
| 8 | | 01370-30412 | Screw | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K0850-001001 Thermos Bottle

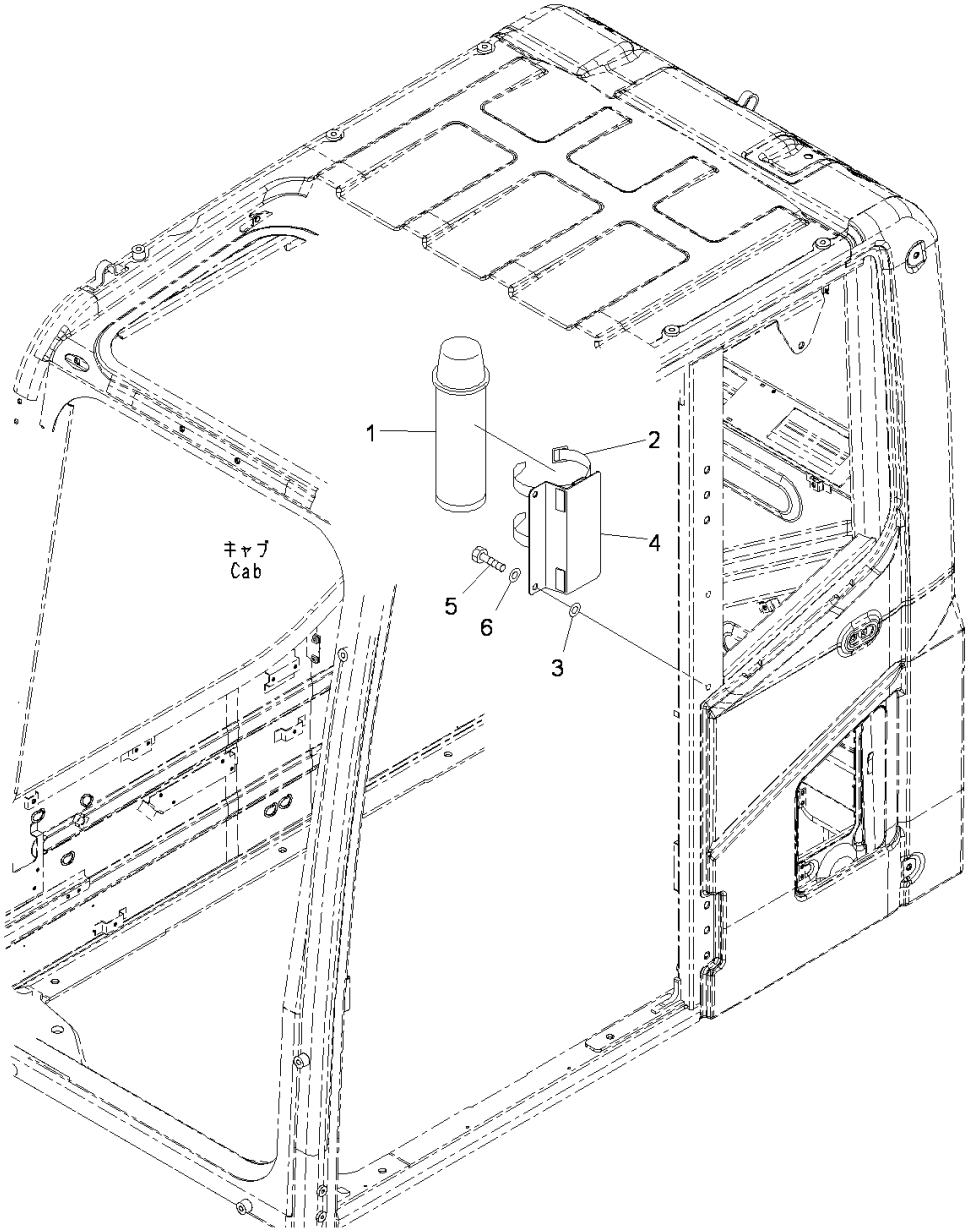


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 195-911-1722 | Thermos Bottle . | 1 | Y200001- |
| 2 | | 195-911-1330 | Band . | 2 | Y200001- |
| 3 | | 01643-70823 | Washer . | 2 | Y200001- |
| 4 | | 20Y-53-17811 | Bracket. | 1 | Y200001- |
| 5 | | 01245-00825 | Screw | 2 | Y200001- |
| 6 | | 01643-70823 | Washer . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130001 Cab, Cab Body And Window

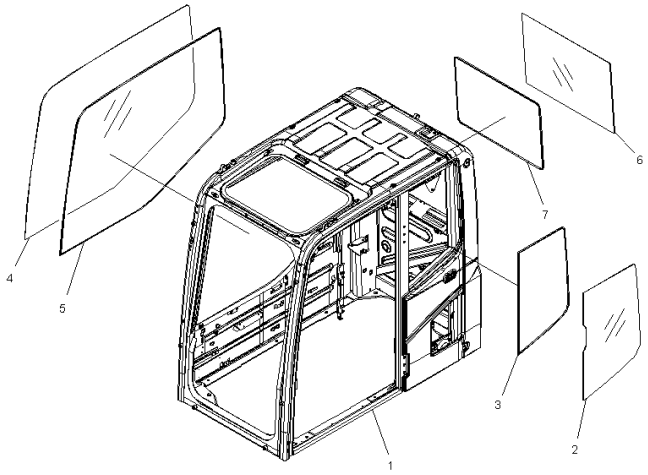


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly. | 1 | Y200001- |
| 1 | C1 | | • Cab. | 1 | Y200001- |
| 2 | | 20Y-53-11241 | • Glass . | 1 | Y200001- |
| 3 | | 20Y-53-11260 | • Seal . | 1 | Y200001- |
| 4 | | 20Y-53-11841 | • Glass . | 1 | Y200001- |
| 5 | | 20Y-53-11850 | • Seal . | 1 | Y200001- |
| 6 | | 20Y-53-11271 | • Glass . | 1 | Y200001- |
| 7 | | 20Y-53-11250 | • Seal . | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130002 Cab, Front Window

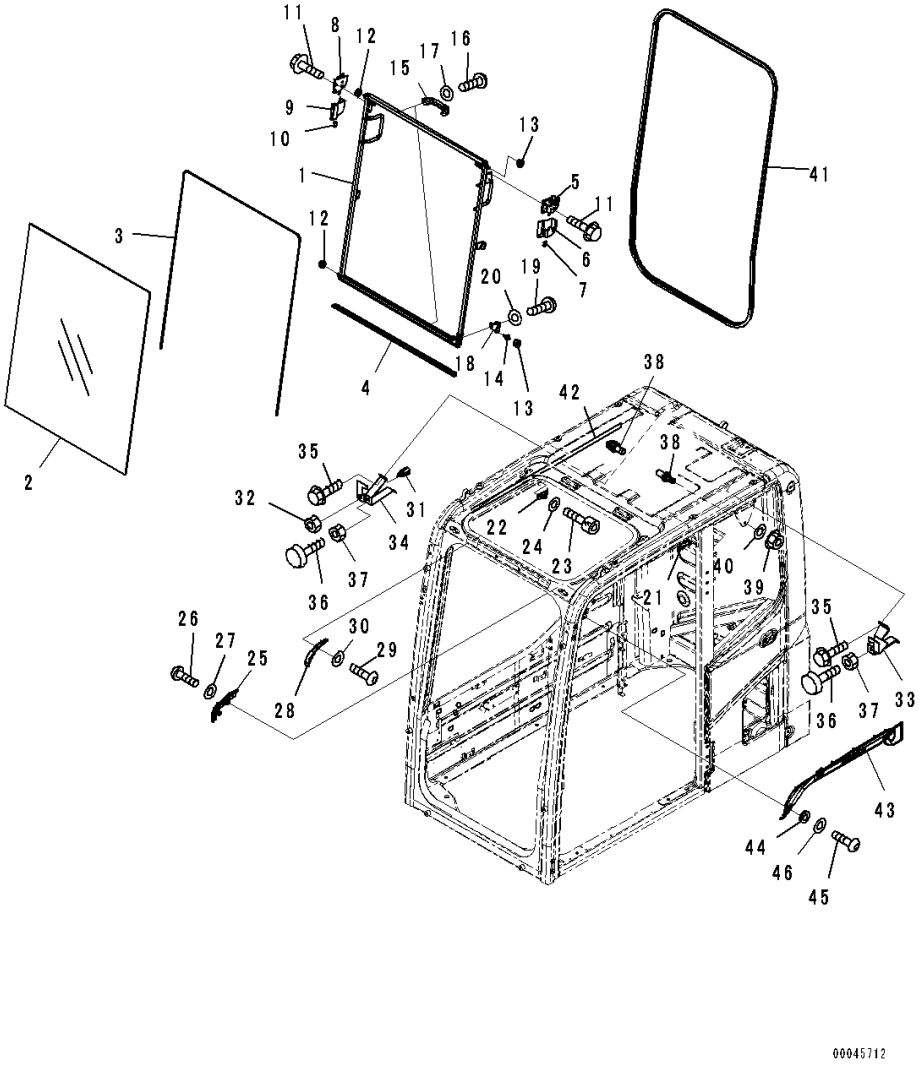


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly | 1 | Y200001- |
| | | 20Y-53-00031 | • Window Assembly | 1 | Y200001- |
| 1 | | 20Y-53-11511 | •• Frame | 1 | Y200001- |
| 2 | | 20Y-53-11520 | •• Glass | 1 | Y200001- |
| 3 | | 20Y-54-51531 | •• Seal | 1 | Y200001- |
| 4 | | 20Y-53-11551 | •• Seal | 1 | Y200001- |
| 5 | | 22B-54-15411 | •• Lock Assembly | 1 | Y200001- |
| 6 | | 22B-54-15440 | •• Case | 1 | Y200001- |
| 7 | | 22B-54-15470 | •• Knob | 1 | Y200001- |
| 8 | | 22B-54-15421 | •• Lock Assembly | 1 | Y200001- |
| 9 | | 22B-54-15450 | •• Case | 1 | Y200001- |
| 10 | | 22B-54-15480 | •• Knob | 1 | Y200001- |
| 11 | | 01435-40812 | •• Bolt | 4 | Y200001- |
| 12 | | 20Y-54-52621 | •• Roller | 2 | Y200001- |
| 13 | | 20Y-54-52681 | •• Roller | 2 | Y200001- |
| 14 | | 20Y-53-12330 | •• Pin | 1 | Y200001- |
| 15 | | 20Y-54-14590 | •• Handle | 2 | Y200001- |
| 16 | | 01245-00616 | •• Screw, Hexagon Socket Head | 4 | Y200001- |
| 17 | | 01643-70623 | •• Washer | 4 | Y200001- |
| 18 | | 20Y-53-12830 | •• Bracket | 1 | Y200001- |
| 19 | | 01245-00816 | •• Screw | 2 | Y200001- |
| 20 | | 01643-70823 | •• Washer | 2 | Y200001- |
| 21 | | 20Y-54-51670 | • Stopper | 1 | Y200001- |
| 22 | | 20Y-54-51680 | • Stopper | 1 | Y200001- |
| 23 | | 01252-80616 | • Bolt | 4 | Y200001- |
| 24 | | 01643-70623 | • Washer | 4 | Y200001- |
| 25 | | 20Y-53-11561 | • Block Assembly | 1 | Y200001- |
| 26 | | 01245-00816 | • Screw | 2 | Y200001- |
| 27 | | 01643-70823 | • Washer | 2 | Y200001- |
| 28 | | 20Y-53-11661 | • Bracket | 1 | Y200001- |
| 29 | | 01245-00816 | • Screw | 2 | Y200001- |
| 30 | | 01643-70823 | • Washer | 2 | Y200001- |
| 31 | | 21J-06-12440 | • Switch | 1 | Y200001- |
| 32 | | 01583-11811 | • Nut | 1 | Y200001- |
| 33 | | 20Y-53-11581 | • Bracket | 1 | Y200001- |
| 34 | | 20Y-53-11641 | • Bracket | 1 | Y200001- |
| 35 | | 01435-00612 | • Bolt | 4 | Y200001- |
| 36 | | 20Y-54-11611 | • Stopper | 2 | Y200001- |
| 37 | | 01580-11008 | • Nut | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130002 Cab, Front Window

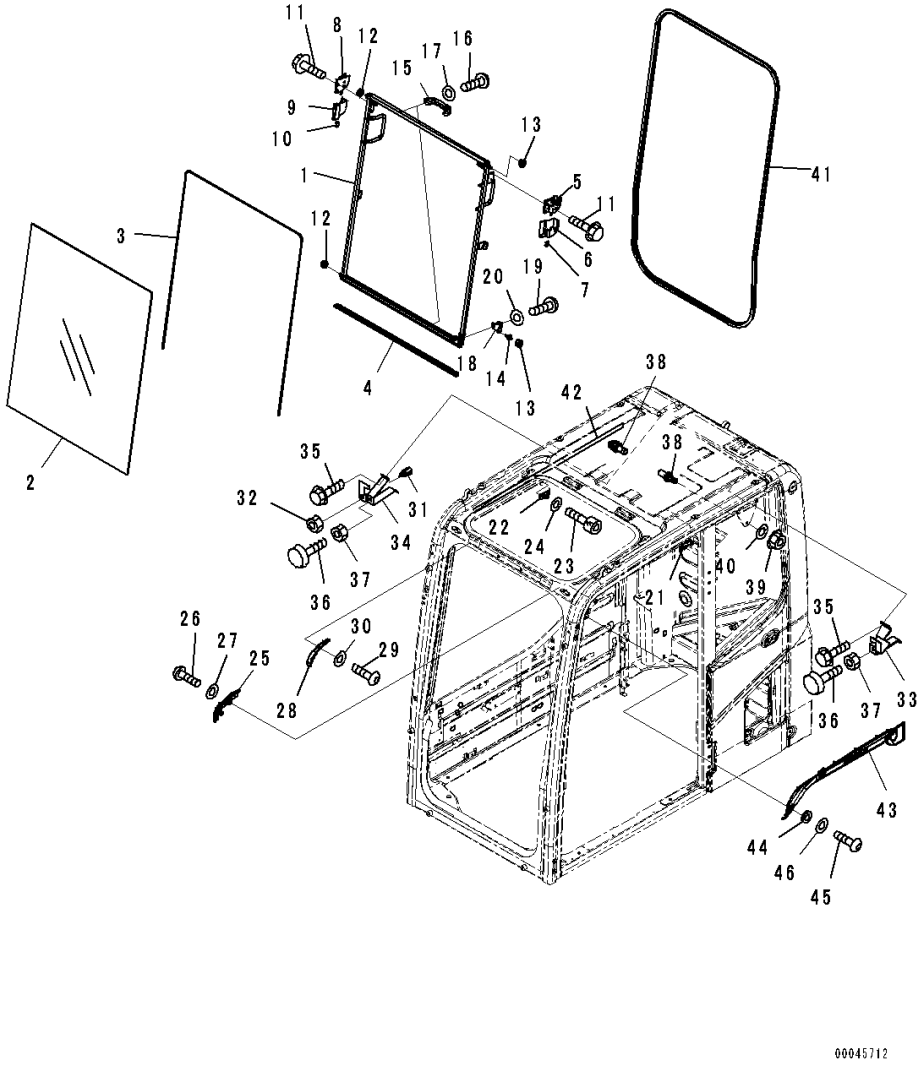


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | 20Y-54-51621 | • Striker | 2 | Y200001- |
| 39 | | 01584-31008 | • Nut | 2 | Y200001- |
| 40 | | 01643-71032 | • Washer | 2 | Y200001- |
| 41 | | 20Y-53-11540 | • Seal | 1 | Y200001- |
| 42 | | 20Y-54-51420 | • Seal | 1 | Y200001- |
| 43 | | 20Y-53-12531 | • Cover | 1 | Y200001- |
| 44 | | 20Y-53-12310 | • Collar | 3 | Y200001- |
| 45 | | 01245-00616 | • Screw, Hexagon Socket Head | 3 | Y200001- |
| 46 | | 01643-70623 | • Washer | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130003 Cab, Front Lower Window

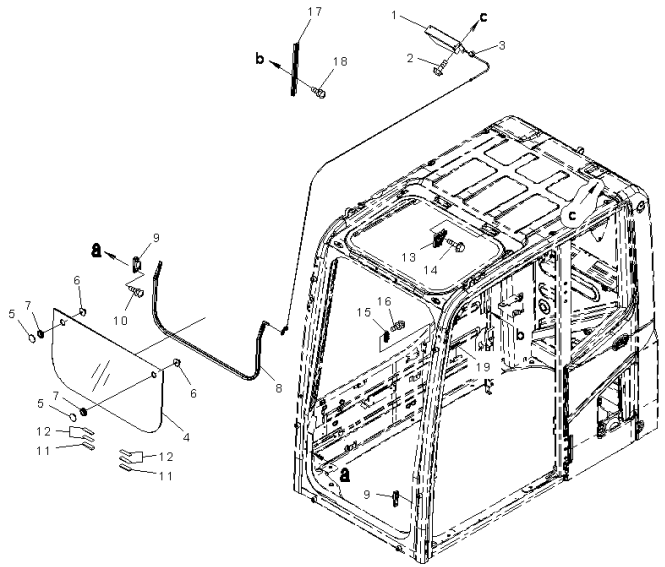


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly. | 1 | Y200001- |
| 1 | | 20Y-53-11591 | • Spring Assembly . | 1 | Y200001- |
| 2 | | 01435-00616 | • Bolt | 2 | Y200001- |
| 3 | | 20Y-54-51640 | • Holder. | 1 | Y200001- |
| | | 20Y-53-11601 | • Glass Assembly | 1 | Y200001- |
| 4 | | 20Y-53-11611 | •• Glass | 1 | Y200001- |
| 5 | | 22B-54-15970 | •• Retainer | 2 | Y200001- |
| 6 | | 22B-54-15980 | •• Knob | 2 | Y200001- |
| 7 | | 08037-02512 | •• Grommet | 2 | Y200001- |
| 8 | | 208-53-11860 | • Trim | 1 | Y200001- |
| 9 | | 20Y-53-11940 | • Seat | 2 | Y200001- |
| 10 | | 01023-20612 | • Screw | 4 | Y200001- |
| 11 | | 20Y-53-11973 | • Rubber | 2 | Y200001- |
| 12 | | 20Y-53-12892 | • Rubber | 4 | Y200001- |
| 13 | | 22B-54-15841 | • Lock Assembly | 1 | Y200001- |
| 14 | | 01435-40616 | • Bolt | 2 | Y200001- |
| 15 | | 20Y-53-12611 | • Seat | 1 | Y200001- |
| 16 | | 01023-20616 | • Screw | 2 | Y200001- |
| 17 | | 20Y-53-12631 | • Rail | 1 | Y200001- |
| 18 | | 01023-20616 | • Screw | 2 | Y200001- |
| 19 | | 20U-54-25140 | • Stopper | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130004 Cab, Roof Ventilator

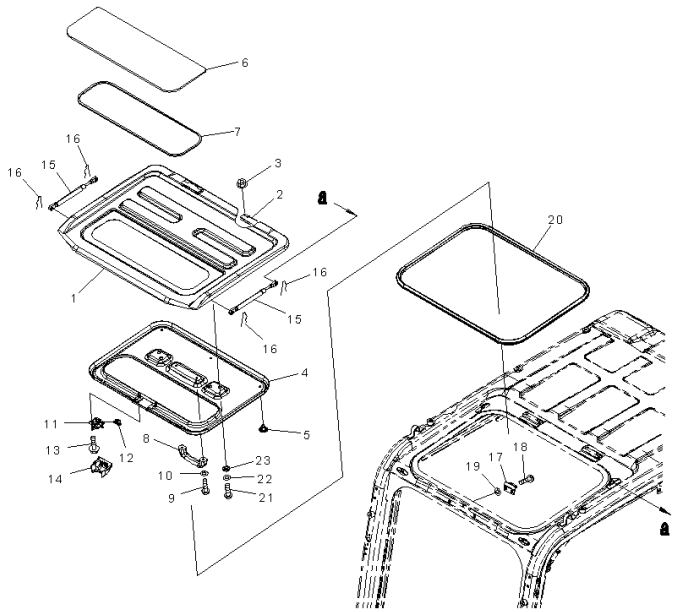


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly. | 1 | Y200001- |
| 1 | | 20Y-53-11712 | • Roof | 1 | Y200001- |
| 2 | | 20Y-53-11H71 | •• Hinge | 2 | Y200001- |
| 3 | | 01584-30806 | • Nut | 4 | Y200001- |
| 4 | | 20Y-53-11921 | • Cover | 1 | Y200001- |
| 5 | | 09416-10200 | • Button | 5 | Y200001- |
| 6 | | 20Y-53-11741 | • Plate | 1 | Y200001- |
| 7 | | 20Y-53-11790 | • Seal | 1 | Y200001- |
| 8 | | 20Y-54-14590 | • Handle | 1 | Y200001- |
| 9 | | 01245-00616 | • Screw, Hexagon Socket Head | 2 | Y200001- |
| 10 | | 01643-70623 | • Washer | 2 | Y200001- |
| 11 | | 20Y-53-11721 | • Lock | 1 | Y200001- |
| 12 | | 20Y-53-11781 | • Knob | 1 | Y200001- |
| 13 | | 01435-40610 | • Bolt | 3 | Y200001- |
| 14 | | 20Y-53-11931 | • Cover | 1 | Y200001- |
| 15 | | 20Y-54-36342 | • Gas Spring Assembly | 2 | Y200001- |
| 16 | | 04052-10833 | • Pin, Snap | 4 | Y200001- |
| 17 | | 20Y-53-11771 | • Striker | 1 | Y200001- |
| 18 | | 01245-00820 | • Screw | 2 | Y200001- |
| 19 | | 20Y-54-52651 | • Spacer | 2 | Y200001- |
| 20 | | 20Y-53-11861 | • Seal | 1 | Y200001- |
| 21 | | 01245-00620 | • Screw | 4 | Y200001- |
| 22 | | 01643-70623 | • Washer | 4 | Y200001- |
| 23 | | 20Y-54-52651 | • Spacer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130005 Cab, Door

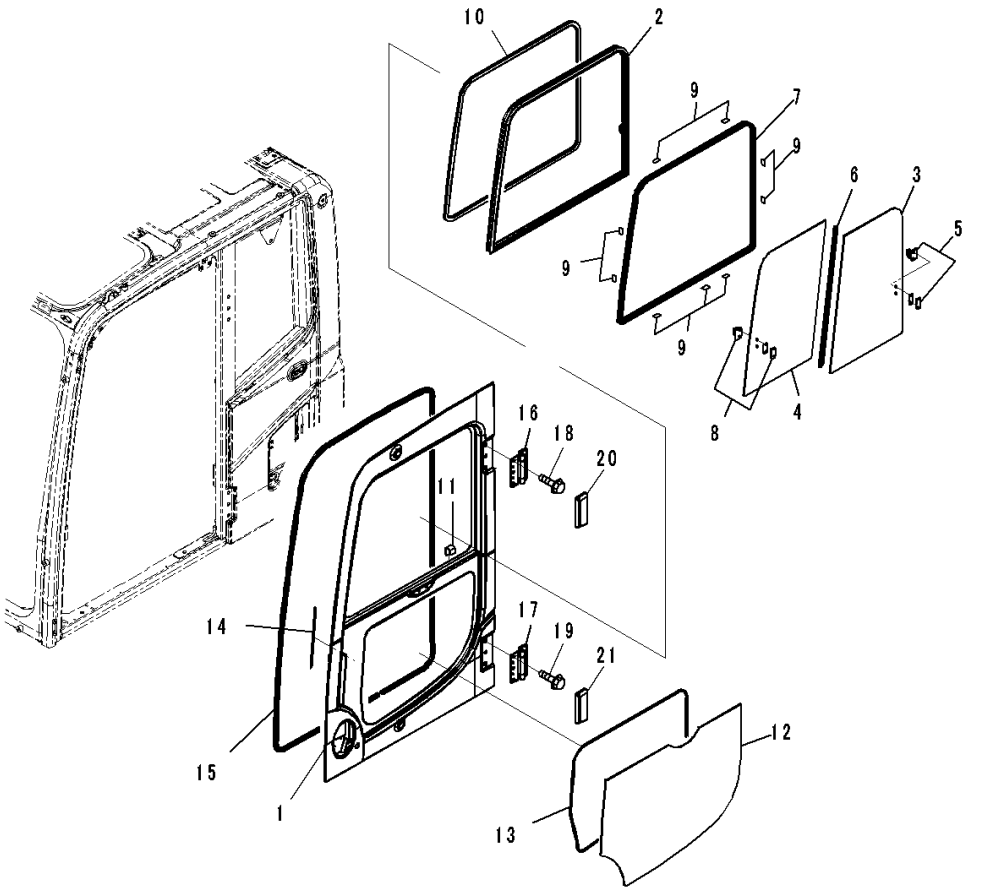


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly | 1 | Y200001- |
| | | 20Y-53-00072 | • Door Assembly | 1 | Y200001- |
| 1 | C1 | | •• Door | 1 | Y200001- |
| | | 20Y-53-11402 | •• Sash Assembly | 1 | Y200001- |
| 2 | C1 | | ••• Sash | 1 | Y200001- |
| 3 | | 20Y-53-12840 | ••• Glass | 1 | Y200001- |
| 4 | | 20Y-53-12850 | ••• Glass | 1 | Y200001- |
| 5 | | 20Y-54-52860 | ••• Lock Assembly | 1 | Y200001- |
| 6 | | 20Y-53-12870 | ••• Seal | 1 | Y200001- |
| 7 | | 20Y-53-12880 | ••• Seal | 1 | Y200001- |
| 8 | | 20Y-54-13322 | ••• Lock Assembly | 1 | Y200001- |
| 9 | | 20Y-53-12971 | •• Seat | 9 | Y200001- |
| 10 | | 20Y-53-11470 | •• Trim | 1 | Y200001- |
| 11 | | 20Y-53-13910 | •• Cover | 1 | Y200001- |
| 12 | | 20Y-53-11451 | •• Glass | 1 | Y200001- |
| 13 | | 20Y-53-11460 | •• Seal | 1 | Y200001- |
| 14 | | 20Y-53-13880 | •• Seal | 1 | Y200001- |
| 15 | | 20Y-53-11484 | •• Weather Strip | 1 | Y200001- |
| 16 | | 20Y-53-11332 | •• Hinge | 1 | Y200001- |
| 17 | | 20Y-53-11332 | •• Hinge | 1 | Y200001- |
| 18 | | 01435-01220 | •• Bolt | 6 | Y200001- |
| 19 | | 01435-01220 | •• Bolt | 6 | Y200001- |
| 20 | | 20Y-53-11411 | •• Cover | 1 | Y200001- |
| 21 | | 20Y-53-11421 | •• Cover | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130006 Cab, Door Lock

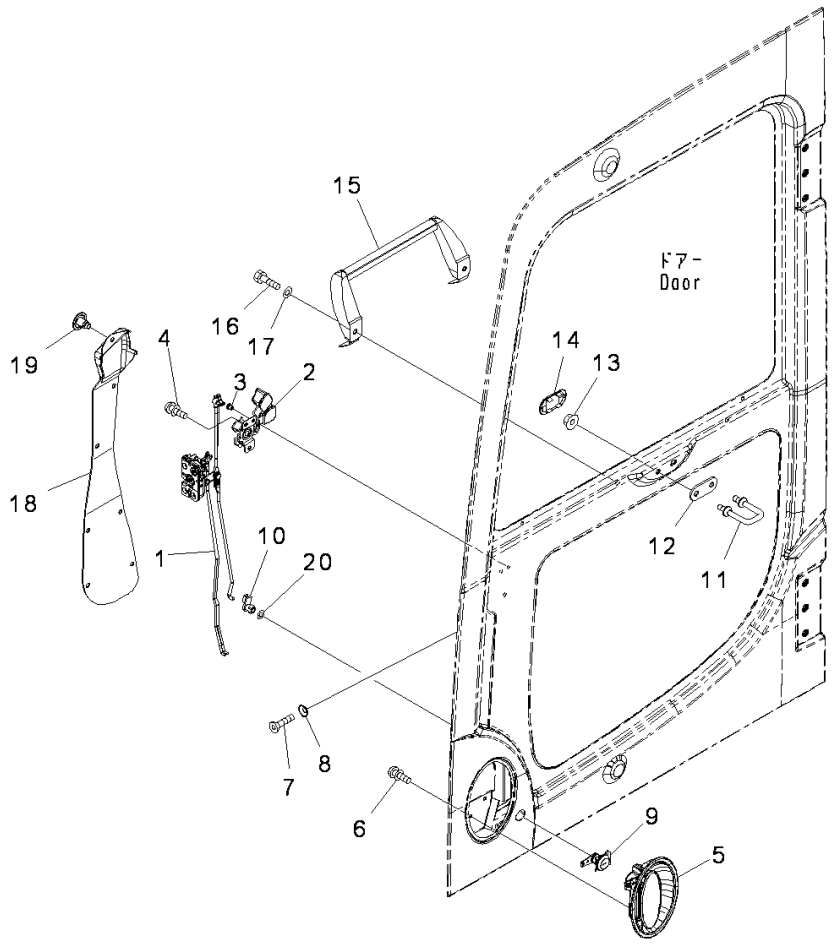


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00072 | • Door Assembly | 1 | Y200001- |
| 1 | | 20Y-53-12201 | •• Latch Assembly | 1 | Y200001- |
| 2 | | 20Y-54-52300 | •• Handle Assembly | 1 | Y200001- |
| 3 | | 22B-54-16340 | ••• Snap | 1 | Y200001- |
| 4 | | 01023-10612 | •• Screw | 3 | Y200001- |
| 5 | | 20Y-53-12991 | •• Handle | 1 | Y200001- |
| 6 | | 01023-10612 | •• Screw | 3 | Y200001- |
| 7 | | 01240-00616 | •• Screw | 3 | Y200001- |
| 8 | | 195-Z11-1690 | •• Washer | 3 | Y200001- |
| 9 | | 20Y-54-52820 | •• Lock Assembly | 1 | Y200001- |
| 10 | | 22B-54-16330 | •• Snap | 1 | Y200001- |
| 11 | | 20Y-53-11320 | •• Striker | 1 | Y200001- |
| 12 | | 20Y-53-12940 | •• Plate | 1 | Y200001- |
| 13 | | 01584-01008 | •• Nut | 2 | Y200001- |
| 14 | | 20Y-53-12661 | •• Cover | 1 | Y200001- |
| 15 | | 20Y-54-51393 | •• Grip | 1 | Y200001- |
| 16 | | 01010-80820 | •• Bolt | 2 | Y200001- |
| 17 | | 01643-30823 | •• Washer | 2 | Y200001- |
| 18 | | 20Y-53-11441 | •• Cover | 1 | Y200001- |
| 19 | | 22B-54-16461 | •• Rivet | 7 | Y200001- |
| 20 | | 145-Z79-6270 | •• Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130007 Cab, Open Lock and Door Catch

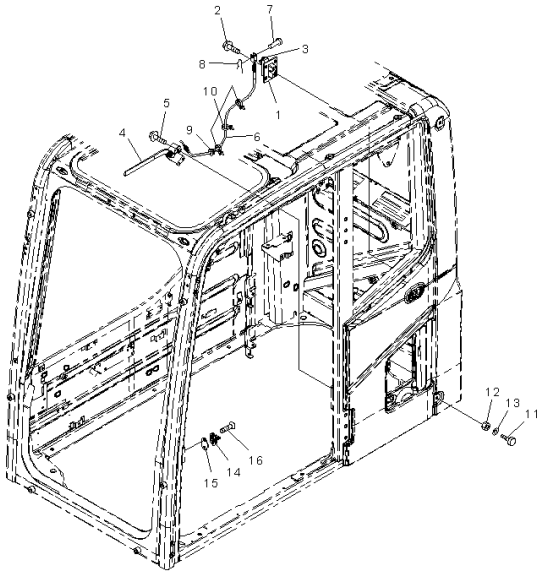


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly | 1 | Y200001- |
| 1 | | 20Y-53-11981 | • Lock | 1 | Y200001- |
| 2 | | 01435-40825 | • Bolt | 4 | Y200001- |
| 3 | | 20Y-53-12280 | • Cover | 1 | Y200001- |
| 4 | | 208-53-14540 | • Lever Assembly | 1 | Y200001- |
| 5 | | 01435-40616 | • Bolt | 3 | Y200001- |
| 6 | | 20Y-53-11990 | • Cable | 1 | Y200001- |
| 7 | | 04205-10520 | • Pin | 1 | Y200001- |
| 8 | | 04052-10530 | • Pin | 1 | Y200001- |
| 9 | | 08034-20414 | • Band | 1 | Y200001- |
| 10 | | 08059-00413 | • Clip | 2 | Y200001- |
| 11 | | 20Y-54-11611 | • Stopper | 2 | Y200001- |
| 12 | | 01580-11008 | • Nut | 2 | Y200001- |
| 13 | | 01643-31032 | • Washer | 2 | Y200001- |
| 14 | | 20Y-53-11810 | • Striker | 1 | Y200001- |
| 15 | | 20Y-53-11890 | • Plate | 1 | Y200001- |
| 16 | | 01240-01025 | • Screw | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130008 Cab, Wiper and Room Lamp

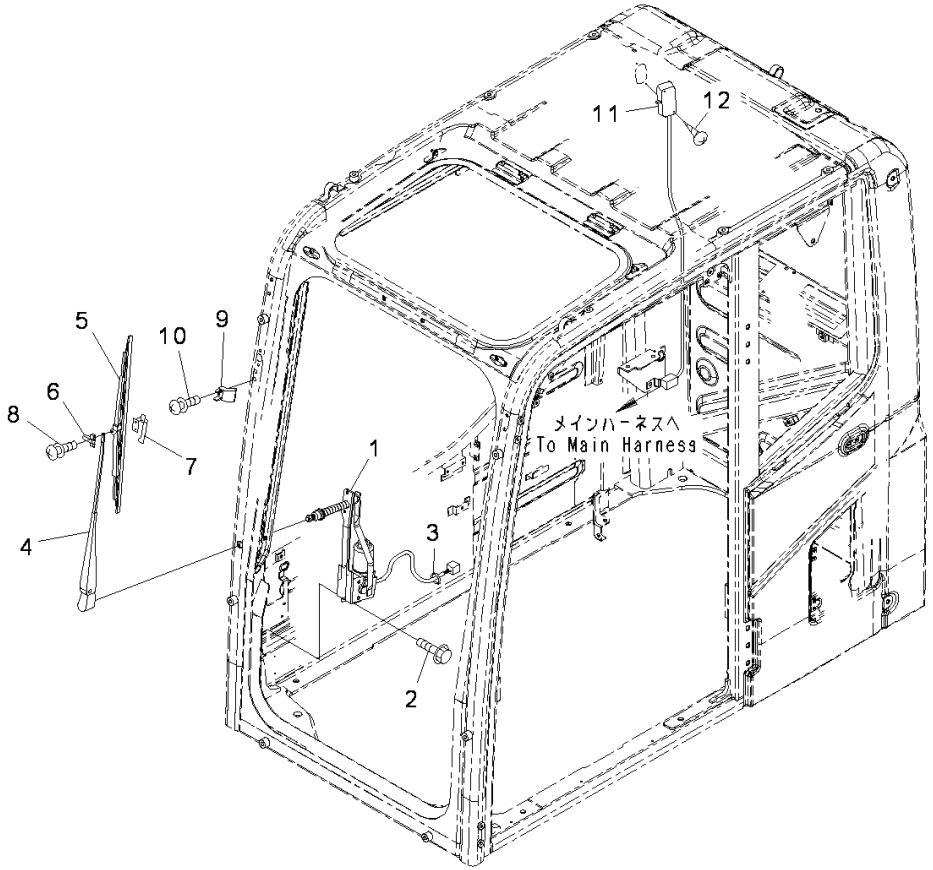


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly | 1 | Y200001- |
| 1 | | 20Y-54-52211 | • Wiper Motor Assembly | 1 | Y200001- |
| 2 | | 01435-00616 | • Bolt | 6 | Y200001- |
| 3 | | 08034-20414 | • Band | 1 | Y200001- |
| | | 20Y-54-52221 | • Wiper Assembly | 1 | Y200001- |
| 4 | | 20Y-54-52350 | •• Arm | 1 | Y200001- |
| 5 | | 20Y-54-39450 | •• Wiper Blade | 1 | Y200001- |
| 6 | | 20Y-54-39460 | •• Slider | 1 | Y200001- |
| 7 | | 20Y-54-39480 | •• Plate | 1 | Y200001- |
| 8 | | ND949007-2350 | ••• Screw and Washer | 2 | Y200001- |
| 9 | | 20Y-53-12232 | • Stopper | 1 | Y200001- |
| 10 | | 01023-20620 | • Screw | 2 | Y200001- |
| 11 | | 20Y-53-12790 | • Light | 1 | Y200001- |
| | | 08116-02410 | •• Bulb, 10watt | 1 | Y200001- |
| 12 | | 01370-00420 | • Screw | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130009 Cab, Rubber Antenna

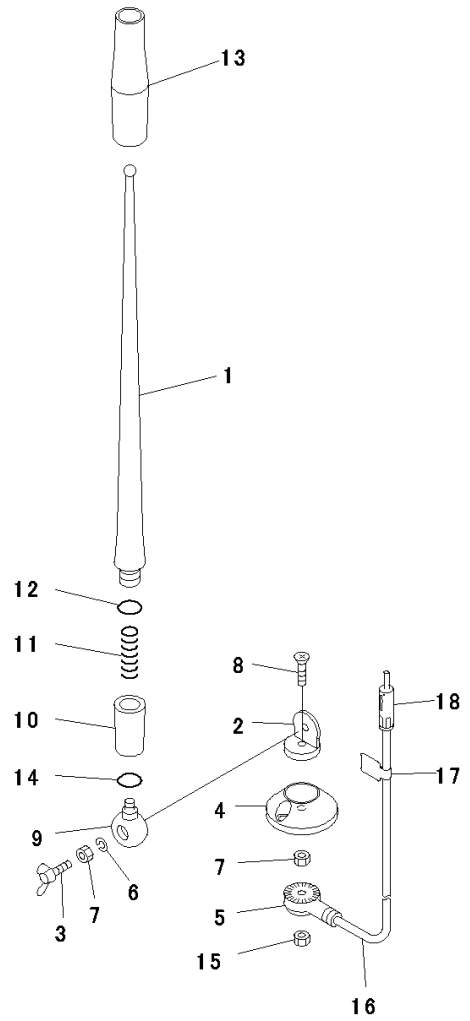


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly | 1 | Y200001- |
| | | 20Y-06-41990 | • Antenna | 1 | Y200001- |
| 1 | | RFU419B-418-A | •• Rod | 1 | Y200001- |
| 2 | C1 | | •• Holder | 1 | Y200001- |
| 3 | | RFU419B-418-D | •• Bolt, Wing | 1 | Y200001- |
| 4 | | RFU419B-418-E | •• Base | 1 | Y200001- |
| 5 | C1 | | •• Holder | 1 | Y200001- |
| 6 | | RFU419B-418-B | •• Washer, Spring | 1 | Y200001- |
| 7 | | RFU419B-418-C | •• Nut | 2 | Y200001- |
| 8 | C1 | | •• Screw | 1 | Y200001- |
| 9 | C1 | | •• Holder | 1 | Y200001- |
| 10 | C1 | | •• Holder Assembly | 1 | Y200001- |
| 11 | C1 | | •• Spring | 1 | Y200001- |
| 12 | C1 | | •• O-ring | 1 | Y200001- |
| 13 | C1 | | •• Tube | 1 | Y200001- |
| 14 | C1 | | •• O-ring | 1 | Y200001- |
| 15 | | REU419B-418-C | •• Nut | 1 | Y200001- |
| 16 | | RFU419B-418-F | •• Cable | 1 | Y200001- |
| 17 | C1 | | •• Plate | 1 | Y200001- |
| 18 | C1 | | •• Plug | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130010 Cab, Speaker and Window Washer

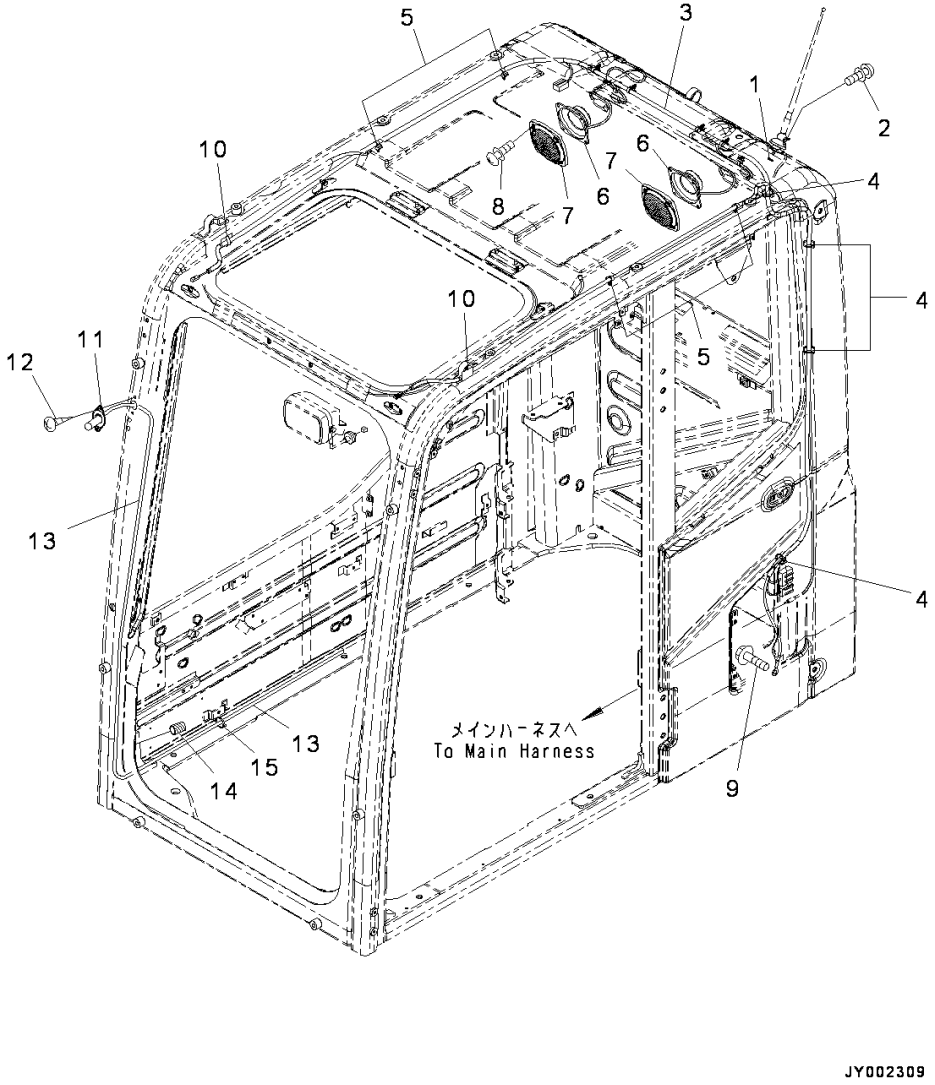


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly | 1 | Y200001- |
| 1 | | 01643-30623 | • Washer | 1 | Y200001- |
| 2 | | 01023-20412 | • Screw | 2 | Y200001- |
| 3 | | 20Y-06-41141 | • Wiring Harness | 1 | Y200001- |
| 4 | | 08034-20414 | • Band | 4 | Y200001- |
| 5 | | 08059-00413 | • Clip | 8 | Y200001- |
| 6 | | 20Y-06-42180 | • Speaker | 2 | Y200001- |
| 7 | | 20Y-53-12221 | • Cover | 2 | Y200001- |
| 8 | | 01023-20416 | • Screw | 8 | Y200001- |
| 9 | | 01435-40812 | • Bolt | 1 | Y200001- |
| 10 | | 08051-00801 | • Clip | 2 | Y200001- |
| 11 | | 20Y-54-39511 | • Nozzle | 1 | Y200001- |
| 12 | | 01023-70412 | • Screw | 2 | Y200001- |
| 13 | | 195-979-7770 | • Hose | 1 | Y200001- |
| 14 | | 08017-B0701 | • Conduit | 1 | Y200001- |
| 15 | | 08034-20414 | • Band | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130011 Cab, Roof Cover and Air Intake

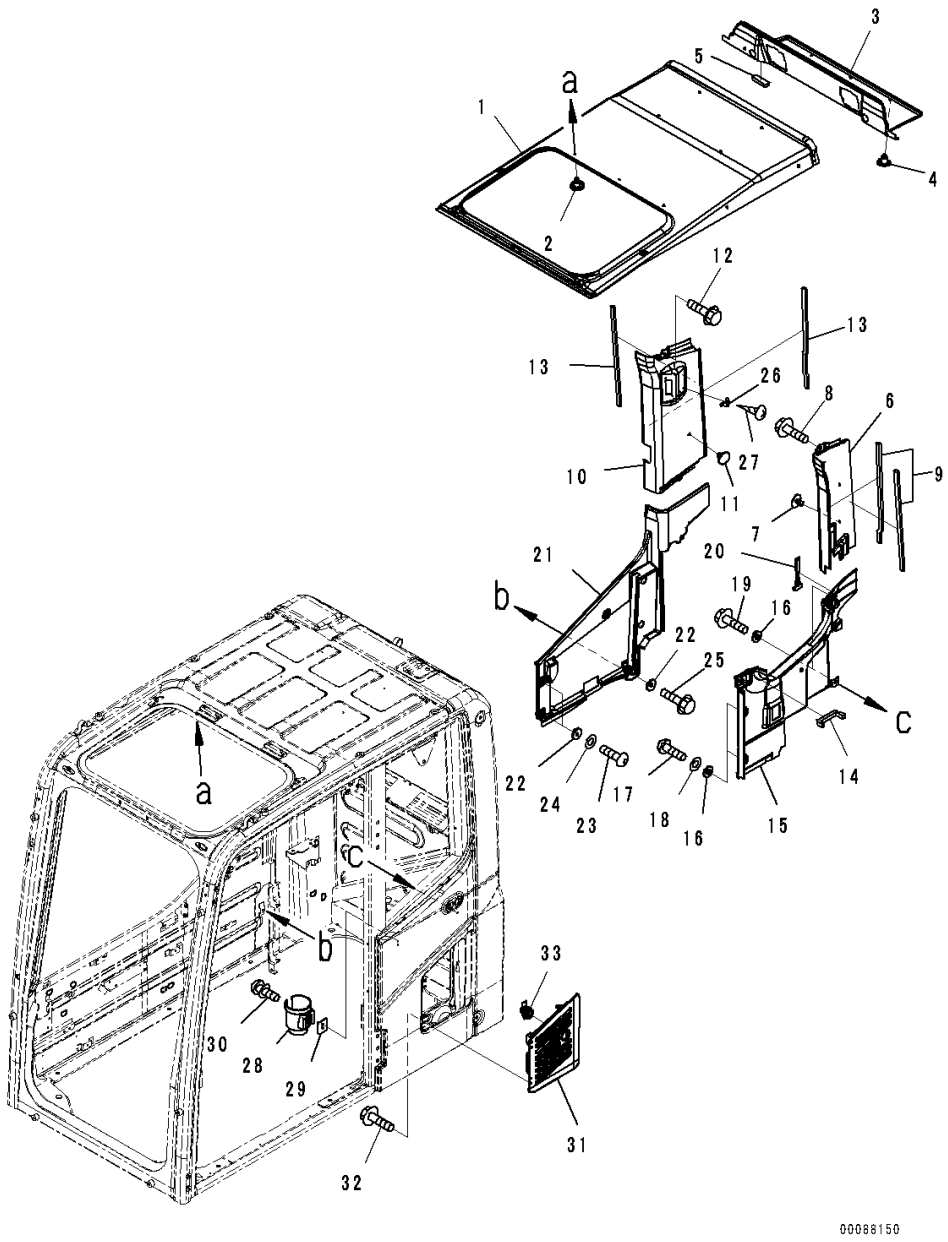


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly | 1 | Y200001- |
| 1 | | 20Y-53-12412 | • Cover | 1 | Y200001- |
| 2 | | 09416-10200 | • Button | 17 | Y200001- |
| 3 | | 20Y-53-12421 | • Cover | 1 | Y200001- |
| 4 | | 09416-10200 | • Button | 3 | Y200001- |
| 5 | | 20Y-53-13870 | • Seal | 1 | Y200001- |
| 6 | | 20Y-53-12431 | • Cover,LHS | 1 | Y200001- |
| 7 | | 208-53-13270 | • Rivet | 2 | Y200001- |
| 8 | | 01435-00612 | • Bolt | 1 | Y200001- |
| 9 | | 20Y-53-12710 | • Seal | 2 | Y200001- |
| 10 | | 20Y-53-12441 | • Cover,RHS | 1 | Y200001- |
| 11 | | 09416-10200 | • Button | 1 | Y200001- |
| 12 | | 01435-00612 | • Bolt | 1 | Y200001- |
| 13 | | 20Y-53-12710 | • Seal | 2 | Y200001- |
| 14 | | 20Y-53-12552 | • Seal | 1 | Y200001- |
| 15 | | 20Y-53-12463 | • Cover,LHS | 1 | Y200001- |
| 16 | | 20Y-53-12310 | • Collar | 4 | Y200001- |
| 17 | | 01245-00616 | • Screw, Hexagon Socket Head | 2 | Y200001- |
| 18 | | 01643-70623 | • Washer | 2 | Y200001- |
| 19 | | 01435-00612 | • Bolt | 2 | Y200001- |
| 20 | | 22B-54-17380 | • Hammer | 1 | Y200001- |
| 21 | | 20Y-53-12472 | • Cover,RHS | 1 | Y200001- |
| 22 | | 20Y-53-12310 | • Collar | 5 | Y200001- |
| 23 | | 01245-00616 | • Screw, Hexagon Socket Head | 3 | Y200001- |
| 24 | | 01643-70623 | • Washer | 3 | Y200001- |
| 25 | | 01435-00612 | • Bolt | 2 | Y200001- |
| 26 | | 205-54-51250 | • Hanger | 1 | Y200001- |
| 27 | | 01370-30416 | • Screw | 2 | Y200001- |
| 28 | | 208-53-12991 | • Holder | 1 | Y200001- |
| 29 | | 208-53-12980 | • Plate | 1 | Y200001- |
| 30 | | 01023-20616 | • Screw | 2 | Y200001- |
| 31 | | 20Y-53-11752 | • Cover | 1 | Y200001- |
| 32 | | 01435-40610 | • Bolt | 4 | Y200001- |
| 33 | | 20Y-53-11761 | • Lock Assembly | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130012 Cab, Pressure Valve and Grip

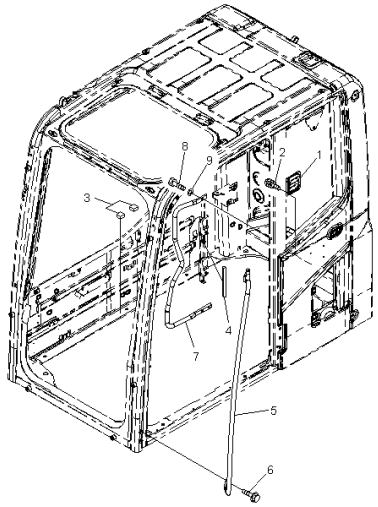


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly | 1 | Y200001- |
| 1 | | 20Y-53-11961 | • Valve Assembly | 1 | Y200001- |
| 2 | | 01023-60512 | • Screw | 4 | Y200001- |
| 3 | | 20Y-53-13490 | • Rubber | 2 | Y200001- |
| 4 | | 20Y-53-12591 | • Seal | 1 | Y200001- |
| 5 | | 20Y-53-11821 | • Grip | 1 | Y200001- |
| 6 | | 01435-40825 | • Bolt | 4 | Y200001- |
| 7 | | 20Y-53-11831 | • Grip | 1 | Y200001- |
| 8 | | 01010-D1025 | • Bolt | 3 | Y200001- |
| 9 | | 01643-71032 | • Washer | 3 | Y200001- |


https://truckmanualshub.com/

# FIG. K1110-130013 Cab, KOMTRAX Less

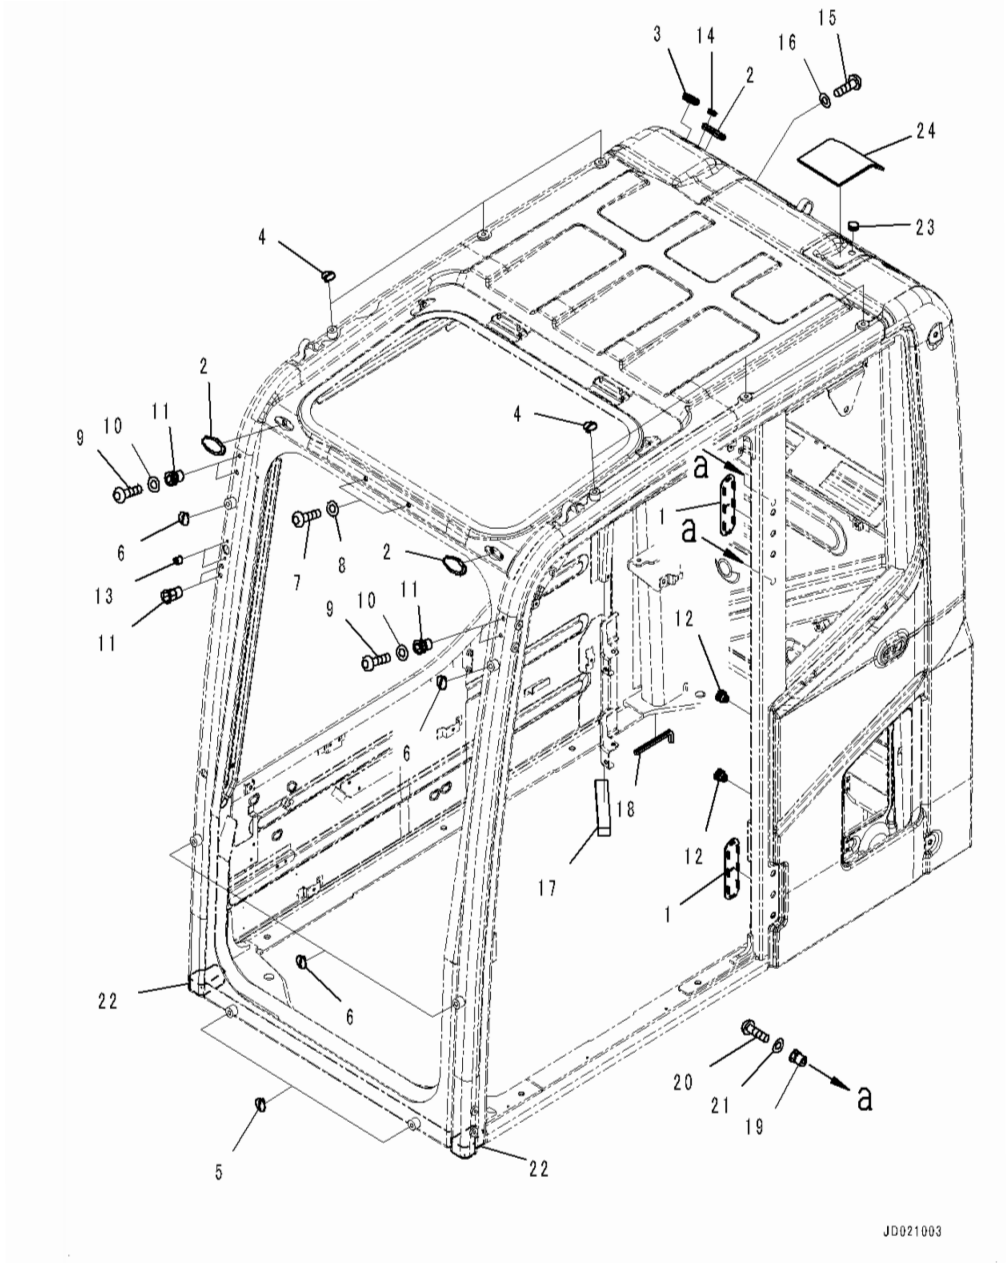


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-00551 | Cab Assembly | 1 | Y200001- |
| 1 | | 20Y-53-12960 | • Cover | 2 | Y200001- |
| 2 | | 22B-54-17282 | • Cap | 3 | Y200001- |
| 3 | | 09415-02512 | • Cap | 1 | Y200001- |
| 4 | | 20Y-53-11390 | • Cap | 6 | Y200001- |
| 5 | | 20Y-53-11390 | • Cap | 2 | Y200001- |
| 6 | | 20Y-53-11380 | • Cap | 4 | Y200001- |
| 7 | | 01245-01016 | • Screw | 2 | Y200001- |
| 8 | | 01643-71032 | • Washer | 2 | Y200001- |
| 9 | | 01245-00616 | • Screw, Hexagon Socket Head | 4 | Y200001- |
| 10 | | 01643-70623 | • Washer | 4 | Y200001- |
| 11 | | 20Y-53-12260 | • Nut | 6 | Y200001- |
| 12 | | 20Y-54-35451 | • Nut | 2 | Y200001- |
| 13 | | 20Y-53-12320 | • Nut | 2 | Y200001- |
| 14 | | 09415-01008 | • Cap | 1 | Y200001- |
| 15 | | 01245-01016 | • Screw. | 1 | Y200001- |
| 16 | | 01643-71032 | • Washer | 1 | Y200001- |
| 17 | | 20Y-53-12580 | • Seal | 1 | Y200001- |
| 18 | | 20Y-53-12740 | • Trim. | 1 | Y200001- |
| 19 | | 20Y-53-12270 | • Nut. | 2 | Y200001- |
| 20 | | 01245-00816 | • Screw | 2 | Y200001- |
| 21 | | 01643-70823 | • Washer. | 2 | Y200001- |
| 22 | | 20Y-53-18880 | • Seal | 2 | Y200001- |
| 23 | | 09415-01008 | • Cap | 1 | Y200001- |
| 24 | | 20Y-53-12951 | • Cover. | 1 | Y200001- |


# FIG. K1110-130014 Cab, Cab In Parts, Monitor And Cover

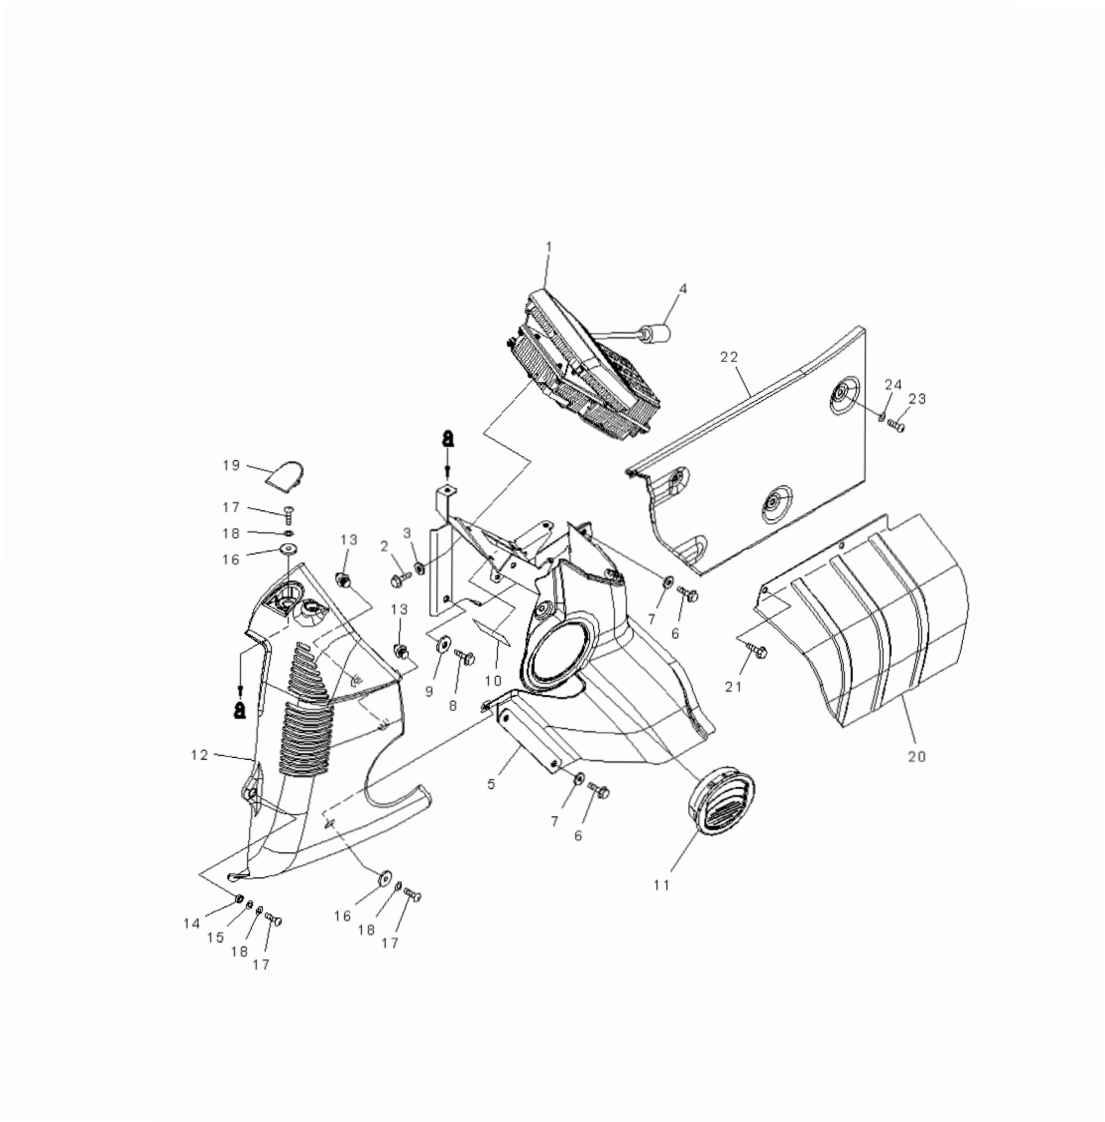


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 7835-31-1011 | Monitor | 1 | Y200001- |
| 2 | | 01435-00616 | Bolt | 4 | Y200001- |
| 3 | | 209-72-12230 | Washer | 4 | Y200001- |
| 4 | | 20Y-53-12810 | Cover | 1 | Y200001- |
| 5 | | 20Y-53-12154 | Cover | 1 | Y200001- |
| 6 | | 01435-00616 | Bolt | 4 | Y200001- |
| 7 | | 209-72-12230 | Washer | 4 | Y200001- |
| 8 | | 01435-00820 | Bolt | 1 | Y200001- |
| 9 | | 208-53-11330 | Washer | 1 | Y200001- |
| 10 | | 20Y-00-41330 | Plate | 1 | Y200001- |
| 11 | | 20Y-53-12172 | Grille | 1 | Y200001- |
| 12 | | 20Y-53-12122 | Cover | 1 | Y200001- |
| 13 | | 22U-54-25360 | • Clip | 2 | Y200001- |
| 14 | | 205-54-75240 | Collar | 1 | Y200001- |
| 15 | | 01643-70823 | Washer | 1 | Y200001- |
| 16 | | 20Y-53-12310 | Collar | 2 | Y200001- |
| 17 | | 01245-00616 | Screw, Hexagon Socket Head | 3 | Y200001- |
| 18 | | 01643-70623 | Washer | 3 | Y200001- |
| 19 | | 20Y-53-12291 | Cap | 1 | Y200001- |
| 20 | | 20Y-53-12161 | Cover | 1 | Y200001- |
| 21 | | 01435-00616 | Bolt | 2 | Y200001- |
| 22 | | 20Y-53-12483 | Cover | 1 | Y200001- |
| 23 | | 01245-00612 | Screw | 3 | Y200001- |
| 24 | | 01643-70623 | Washer | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130015 Cab, Cab In Parts, Monitor Cover

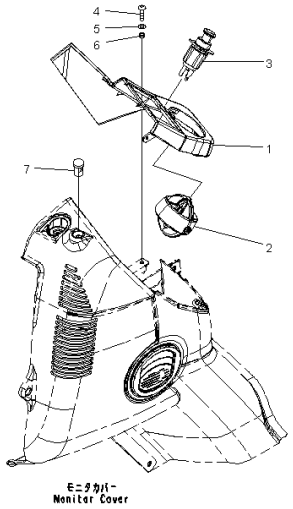


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-12111 | Cover . . . . . | 1 | Y200001- |
| 2 | | 20Y-53-12240 | Louver . . . . . | 1 | Y200001- |
| 3 | | 20Y-06-23472 | Cigarette Lighter . . . . . | 1 | Y200001- |
| 4 | | 01245-00616 | Screw, Hexagon Socket Head . . . . . | 1 | Y200001- |
| 5 | | 01643-70623 | Washer . . . . . | 1 | Y200001- |
| 6 | | 20Y-43-41290 | Collar . . . . . | 1 | Y200001- |
| 7 | | 20Y-979-6161 | Sensor . . . . . | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130016 Cab, Cab In Parts, Luggage Plate

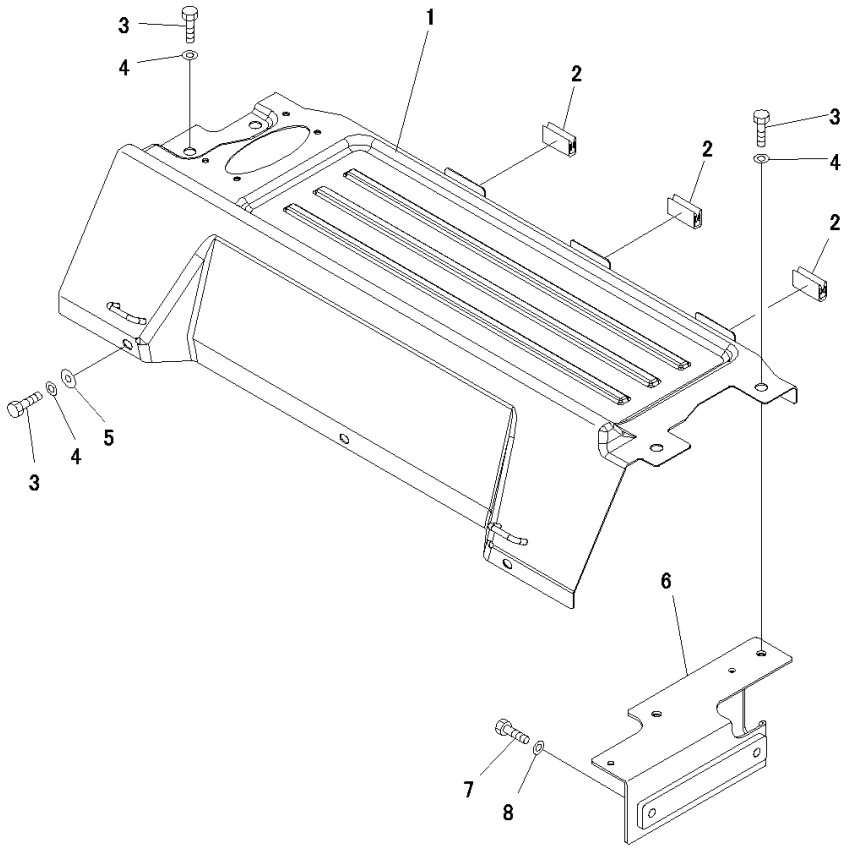


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-13617 | Cover Assembly. | 1 | Y200001- |
| 1 | C1 | | • Cover. | 1 | Y200001- |
| 2 | | 208-53-12460 | • Seat. | 3 | Y200001- |
| 3 | | 01010-D0825 | Bolt. | 7 | Y200001- |
| 4 | | 01643-70823 | Washer | 7 | Y200001- |
| 5 | | 418-54-35450 | Washer . | 3 | Y200001- |
| 6 | | 20Y-53-12771 | Plate. | 1 | Y200001- |
| 7 | | 01010-D0825 | Bolt. | 2 | Y200001- |
| 8 | | 01643-70823 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130017 Cab, Cab In Parts, Monitor Duct

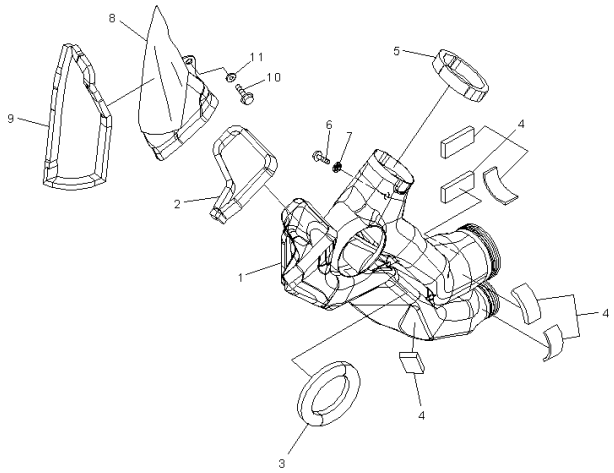


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-13371 | Duct | 1 | Y200001- |
| 2 | | 20Y-53-13480 | Seal | 1 | Y200001- |
| 3 | | 20Y-53-13280 | Seal | 1 | Y200001- |
| 4 | | 208-53-12440 | Seal | 6 | Y200001- |
| 5 | | 208-53-11941 | Seal | 1 | Y200001- |
| 6 | | 01435-00612 | Bolt | 1 | Y200001- |
| 7 | | 20Y-53-12310 | Collar | 1 | Y200001- |
| 8 | | 20Y-53-13421 | Duct | 1 | Y200001- |
| 9 | | 208-53-11920 | Seal | 1 | Y200001- |
| 10 | | 01435-00612 | Bolt | 1 | Y200001- |
| 11 | | 20Y-53-12310 | Collar | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130018 Cab, Cab In Parts, Air Duct

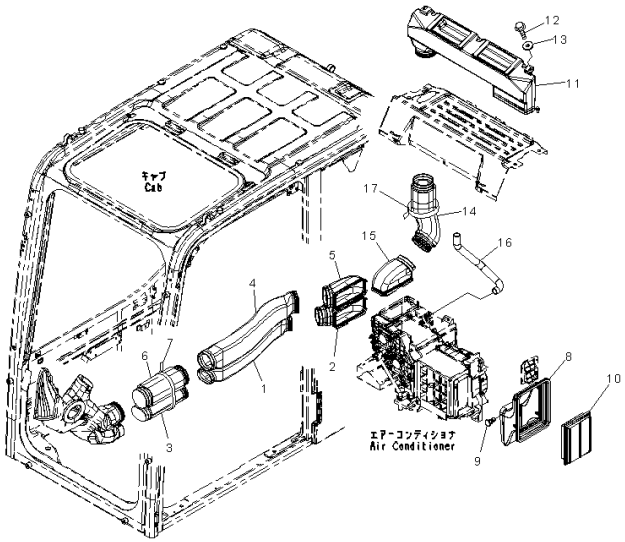


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-13311 | Duct | 1 | Y200001- |
| 2 | | 20Y-53-13331 | Duct | 1 | Y200001- |
| 3 | | 20Y-53-13351 | Duct | 1 | Y200001- |
| 4 | | 20Y-53-13321 | Duct | 1 | Y200001- |
| 5 | | 20Y-53-13341 | Duct | 1 | Y200001- |
| 6 | | 20Y-53-13361 | Duct | 1 | Y200001- |
| 7 | | 08034-20876 | Band | 1 | Y200001- |
| 8 | | 20Y-53-12522 | Duct | 1 | Y200001- |
| 9 | | 208-53-12680 | Clip | 1 | Y200001- |
| 10 | | 17M-911-3530 | Element | 1 | Y200001- |
| 11 | | 20Y-53-13451 | Duct | 1 | Y200001- |
| 12 | | 01435-40616 | Bolt | 2 | Y200001- |
| 13 | | 20Y-53-12310 | Collar | 2 | Y200001- |
| 14 | | 20Y-53-13461 | Duct | 1 | Y200001- |
| 15 | | 208-53-12120 | Duct | 1 | Y200001- |
| 16 | | 208-53-12432 | Hose | 1 | Y200001- |
| 17 | | 08034-20876 | Band | 1 | 350001- |

https://truckmanualshub.com/


# FIG. K1110-130019 Cab, Cab In Parts, Partition And Filter

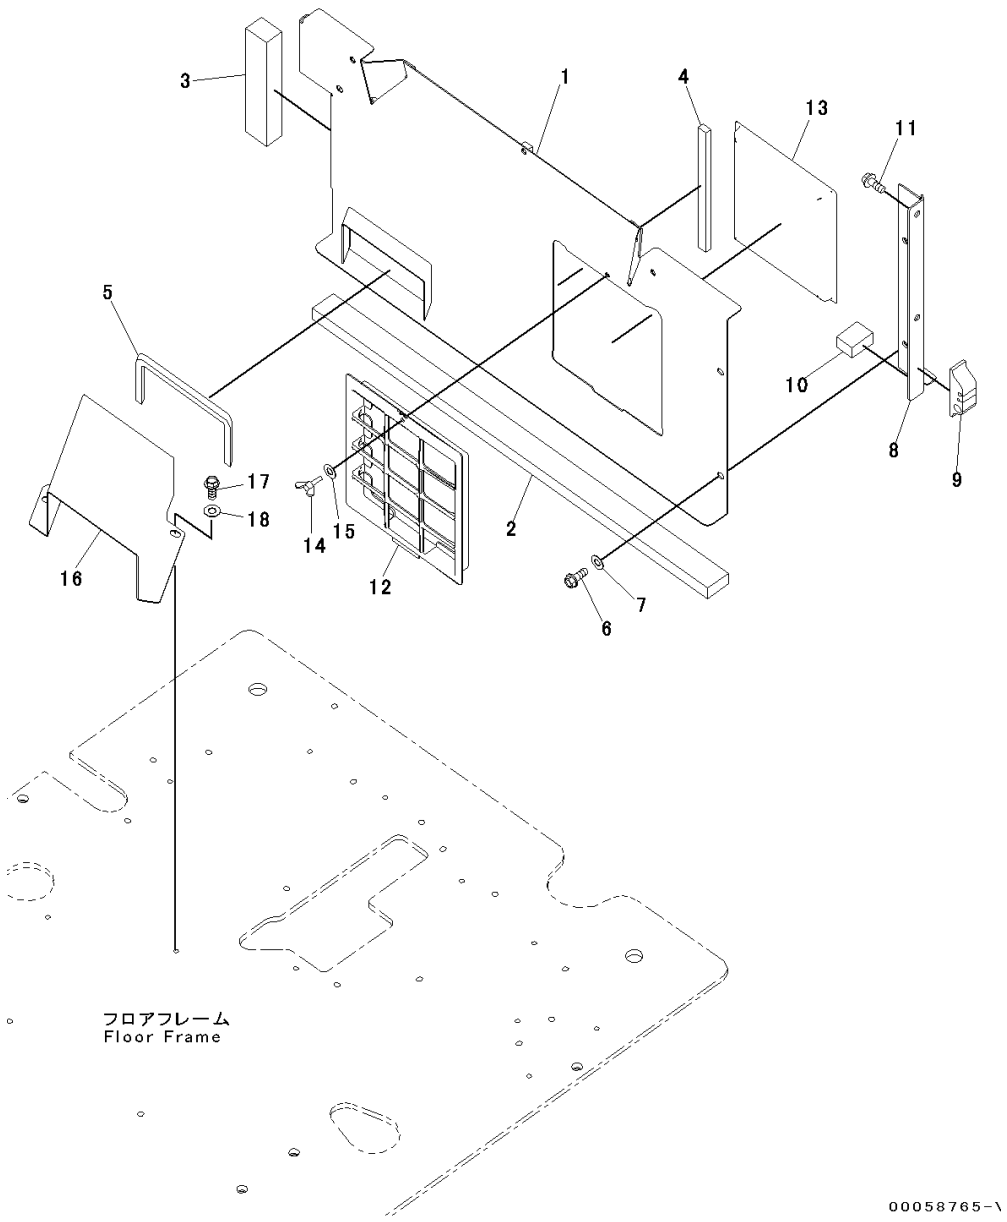


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-12565 | Bracket | 1 | Y200001- |
| 2 | | 20Y-53-11870 | Seal | 1 | Y200001- |
| 3 | | 20Y-53-11880 | Seal | 1 | Y200001- |
| 4 | | 208-53-11890 | Seal | 1 | Y200001- |
| 5 | | 208-53-12230 | Seal | 1 | Y200001- |
| 6 | | 01435-40820 | Bolt | 3 | Y200001- |
| 7 | | 418-54-35450 | Washer | 3 | Y200001- |
| 8 | | 20Y-53-12781 | Plate | 1 | Y200001- |
| 9 | | 20Y-53-12751 | Seal | 1 | Y200001- |
| 10 | | 20Y-53-12760 | Seal | 1 | Y200001- |
| 11 | | 01435-40820 | Bolt | 2 | Y200001- |
| 12 | | 208-979-7530 | Holder | 1 | Y200001- |
| 13 | | 208-979-7620 | Filter | 1 | Y200001- |
| 14 | | 20Y-54-65790 | Bolt | 1 | Y200001- |
| 15 | | 20Y-54-65690 | Washer | 1 | Y200001- |
| 16 | | 208-53-12551 | Duct | 1 | Y200001- |
| 17 | | 01010-D0820 | Bolt | 2 | Y200001- |
| 18 | | 01643-70823 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130020 Cab, Cab In Parts, Sub Plate And Relay

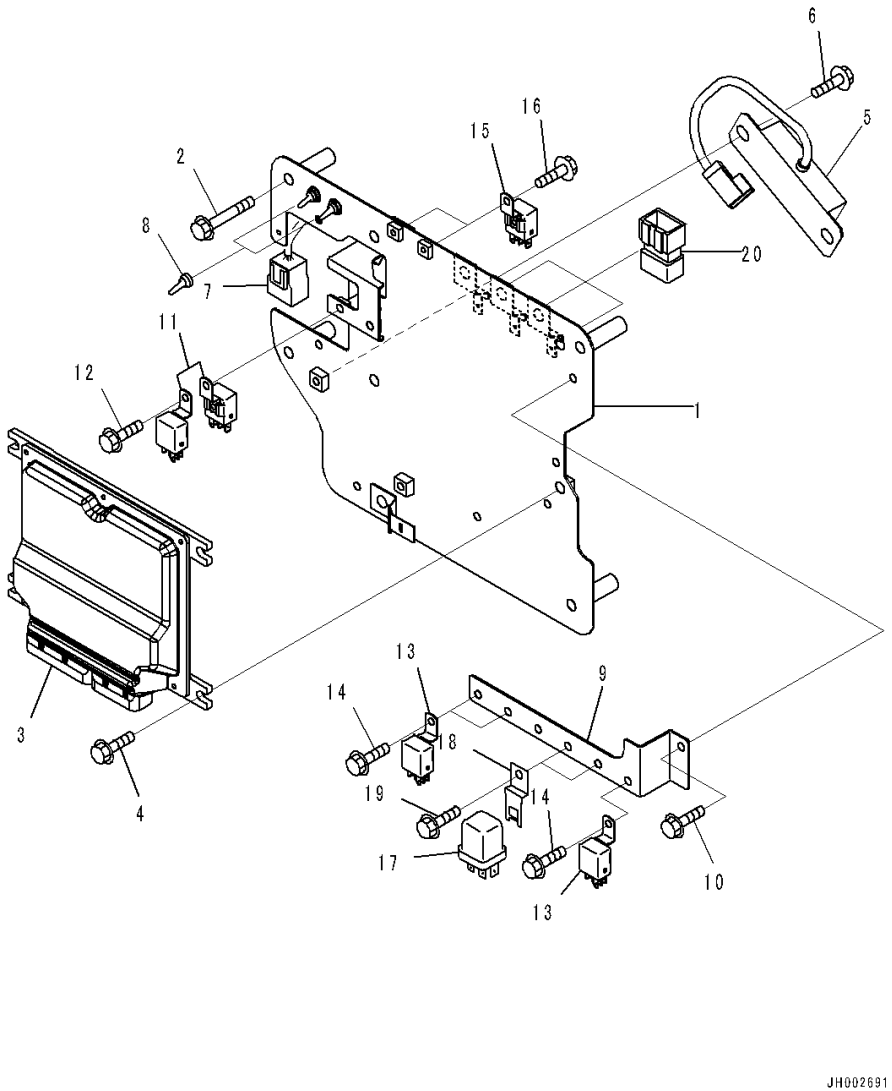


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-14812 | Bracket | 1 | Y200001- |
| 2 | | 01435-00860 | Bolt | 4 | Y200001- |
| 3 | | 7835-46-1007 | Controller | 1 | Y200001- |
| 4 | | 01435-00820 | Bolt | 4 | Y200001- |
| 5 | | 7861-94-2000 | Resistor. | 1 | Y200001- |
| 6 | | 01435-00820 | Bolt | 2 | Y200001- |
| 7 | | 20Y-06-41150 | Wiring Harness | 1 | Y200001- |
| 8 | | 208-43-71420 | Cap | 2 | Y200001- |
| 9 | | 20Y-53-18211 | Bracket | 1 | Y200001- |
| 10 | | 01435-00610 | Bolt | 1 | Y200001- |
| 11 | | 7861-74-5100 | Relay | 2 | Y200001- |
| 12 | | 01435-00610 | Bolt | 1 | Y200001- |
| 13 | | 7861-74-5100 | Relay | 3 | Y200001- |
| 14 | | 01435-00610 | Bolt | 3 | Y200001- |
| 15 | | 7861-74-5100 | Relay | 2 | Y200001- |
| 16 | | 01435-00610 | Bolt | 2 | Y200001- |
| 17 | | 569-06-61960 | Relay | 2 | Y200001- |
| 18 | | 287-06-16420 | Bracket | 2 | Y200001- |
| 19 | | 01435-00610 | Bolt | 2 | Y200001- |
| 20 | | 8233-06-3350 | Diode | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130021 Cab, Cab In Parts, Air Conditioner Controller

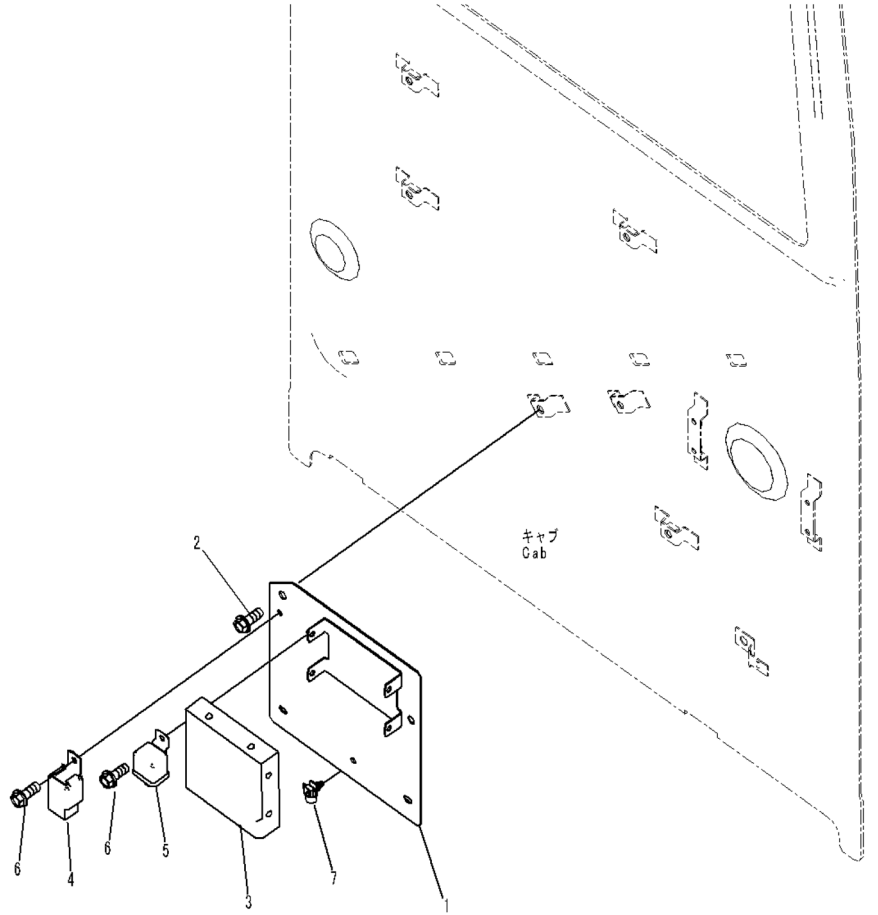


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-14820 | Plate. | 1 | Y200001- |
| 2 | | 01435-40812 | Bolt. | 2 | Y200001- |
| 3 | | 17A-979-3180 | Controller . | 1 | Y200001- |
| 4 | | 421-07-31270 | Relay. | 1 | Y200001- |
| 5 | | 20Y-979-6771 | Relay. | 1 | Y200001- |
| 6 | | 01435-00610 | Bolt. | 2 | Y200001- |
| 7 | | 08059-00515 | Clip. | 1 | Y200001- |


https://truckmanualshub.com/

# FIG. K1110-130022 Cab, Cab In Parts, Main Harness Clamp

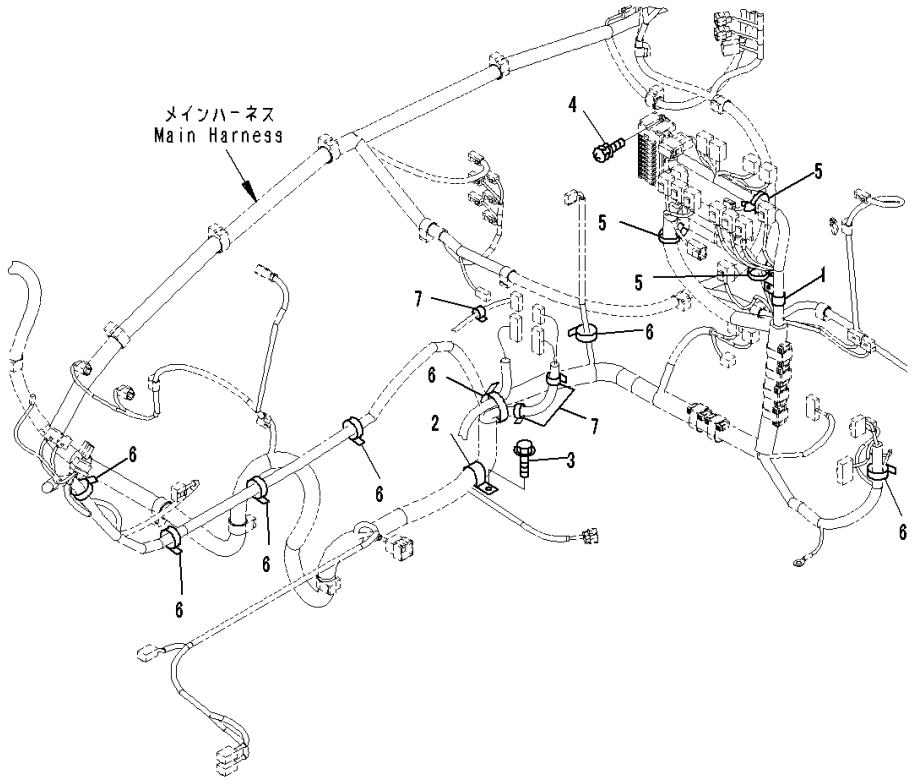


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 04434-52511 | Clip | 1 | Y200001- |
| 2 | | 04434-51708 | Clip | 1 | Y200001- |
| 3 | | 01435-00816 | Bolt | 1 | Y200001- |
| 4 | | 01023-60620 | Screw | 2 | Y200001- |
| 5 | | 08059-00515 | Clip | 3 | Y200001- |
| 6 | | 08034-20414 | Band | 6 | Y200001- |
| 7 | | 08034-20519 | Band | 5 | Y200001- |


# FIG. K1110-130023 Cab, Cab In Parts, Rear Cover

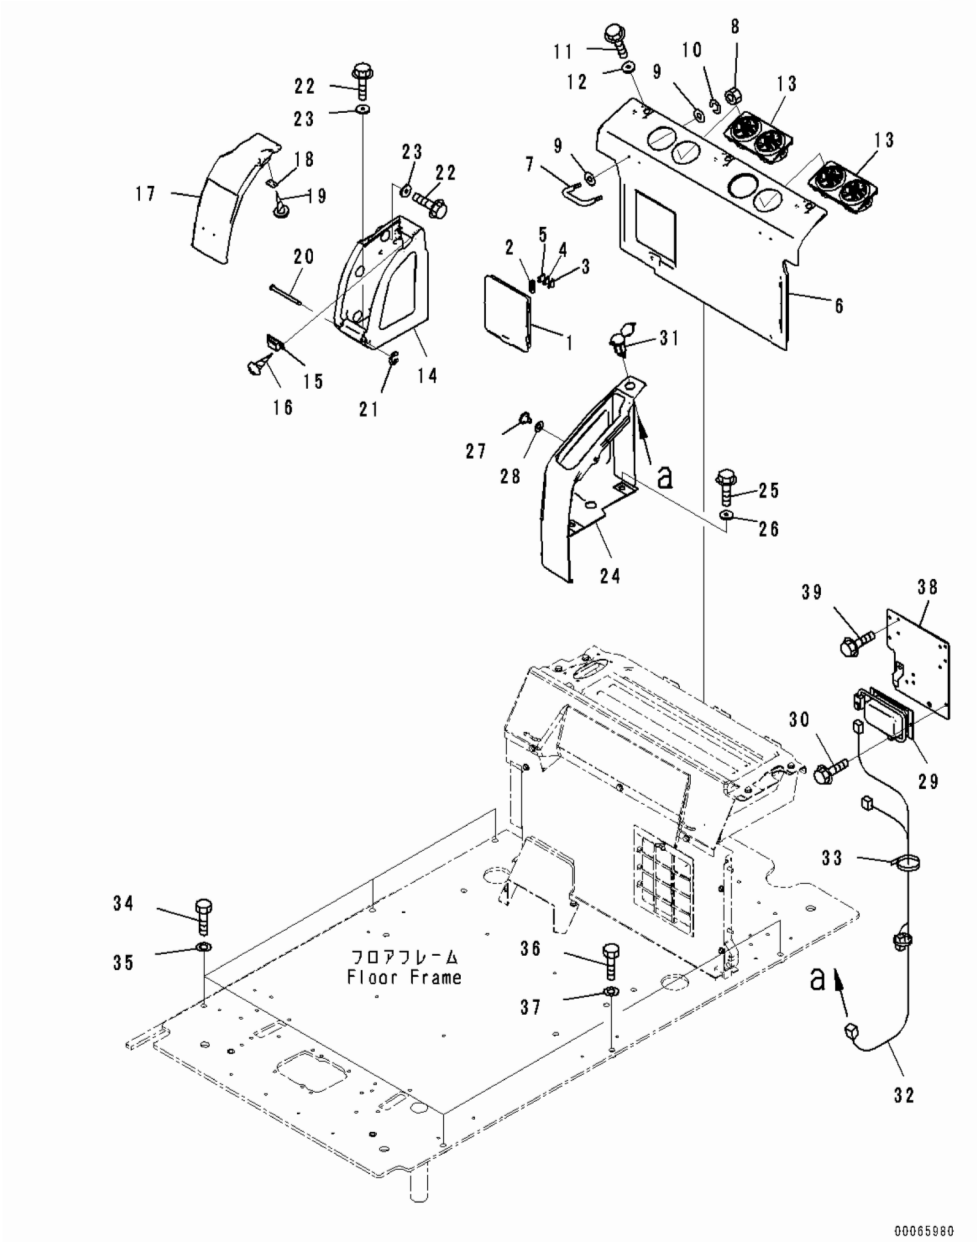


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-53-13631 | Cover Assembly. | 1 | Y200001- |
| 1 | C1 | • Cover. | | 1 | Y200001- |
| 2 | | 22U-43-22340 | • Puller. | 1 | Y200001- |
| 3 | | 08041-01000 | • Fuse, 10Amp. | 1 | Y200001- |
| 4 | | 08041-02000 | • Fuse, 20Amp. | 1 | Y200001- |
| 5 | | 08041-03000 | • Fuse, 30Amp. | 1 | Y200001- |
| 6 | | 20Y-53-12371 | Cover. | 1 | Y200001- |
| 7 | | 208-53-12290 | • Hook. | 2 | Y200001- |
| 8 | | 01580-10403 | • Nut. | 4 | Y200001- |
| 9 | | 01640-20408 | • Washer, Flat | 8 | Y200001- |
| 10 | | 01601-20410 | • Washer. | 4 | Y200001- |
| 11 | | 01435-40616 | Bolt | 3 | Y200001- |
| 12 | | 20Y-53-12310 | Collar. | 3 | Y200001- |
| 13 | | 208-979-7560 | Grille | 2 | Y200001- |
| 14 | | 20Y-53-12381 | Cover. | 1 | Y200001- |
| 15 | | 09452-14503 | Catcher. | 1 | Y200001- |
| 16 | | 01370-10308 | Screw | 2 | Y200001- |
| 17 | | 20Y-53-12391 | Cover. | 1 | Y200001- |
| 18 | | 208-53-12410 | Plate | 1 | Y200001- |
| 19 | | 01370-20308 | Screw | 2 | Y200001- |
| 20 | | 208-53-12320 | Pin | 1 | Y200001- |
| 21 | | 208-53-12330 | Ring | 1 | Y200001- |
| 22 | | 01435-40616 | Bolt | 5 | Y200001- |
| 23 | | 20Y-53-12310 | Collar. | 5 | Y200001- |
| 24 | | 20Y-53-12931 | Cover. | 1 | Y200001- |
| 25 | | 01435-40620 | Bolt | 2 | Y200001- |
| 26 | | 20Y-53-12310 | Collar. | 2 | Y200001- |
| 27 | | 23D-950-4450 | Button | 1 | Y200001- |
| 28 | | 20Y-53-12860 | Spacer | 1 | Y200001- |
| 29 | | 22U-06-22251 | Converter | 1 | Y200001- |
| 30 | | 01435-00610 | Bolt | 2 | Y200001- |
| 31 | | 198-Z11-2640 | Socket Assembly | 1 | Y200001- |
| 32 | | 20Y-06-41270 | Wiring Harness | 1 | Y200001- |
| 33 | | 08034-20414 | Band | 1 | Y200001- |
| 34 | | 01010-81245 | Bolt | 5 | Y200001- |
| 35 | | 01643-31232 | Washer | 5 | Y200001- |
| 36 | | 01010-D1650 | Bolt | 1 | Y200001- |
| 37 | | 01643-31645 | Washer | 1 | Y200001- |
| 38 | | 20Y-53-18221 | Bracket | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130023 Cab, Cab In Parts, Rear Cover

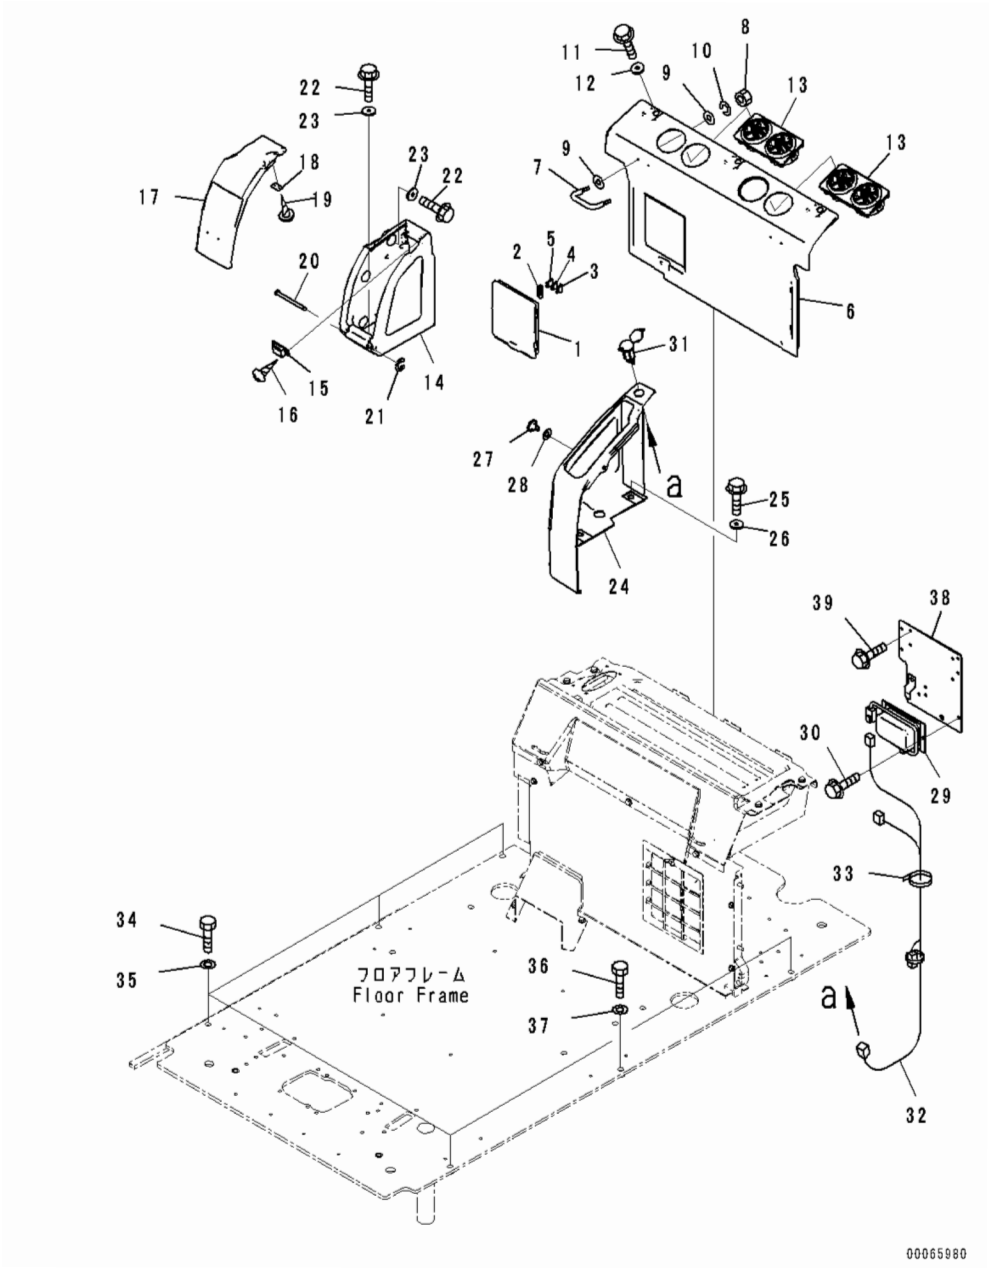


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 01435-00612 | Bolt | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130024 Cab, Floor, Frame

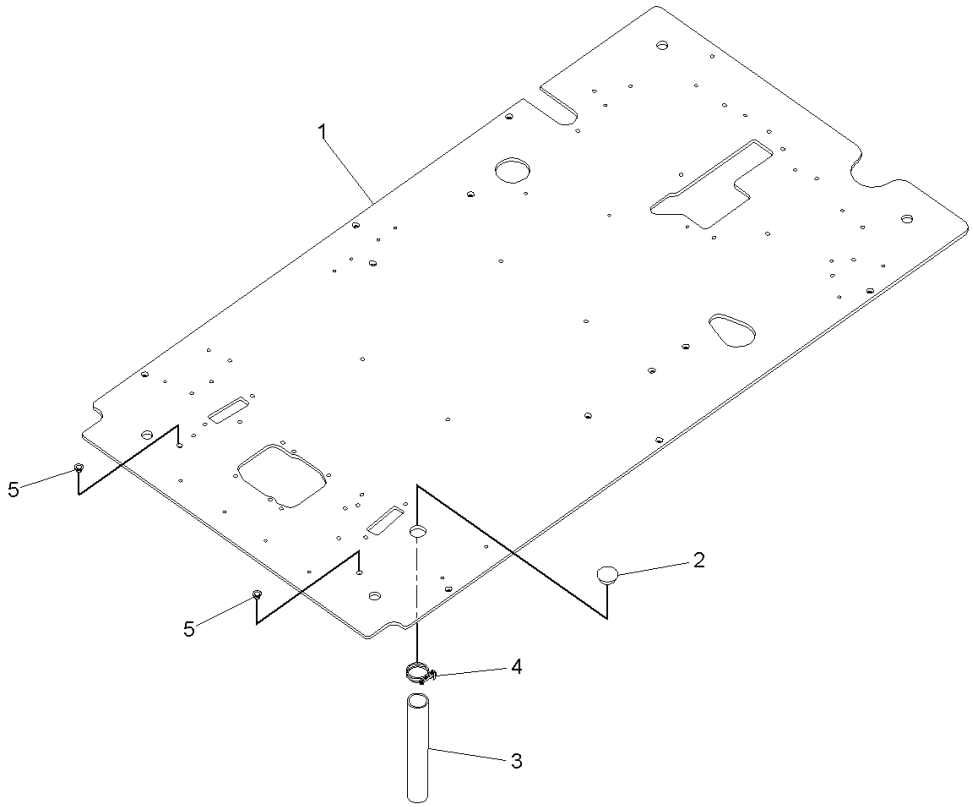


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-14116 | Floor, Floor | 1 | Y200001- |
| 2 | | 22U-54-25581 | Grommet | 1 | Y200001- |
| 3 | | 07286-03828 | Hose | 1 | Y200001- |
| 4 | | 07280-04726 | Clamp | 1 | Y200001- |
| 5 | | 07048-01310 | Plug | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130025 Cab, Floor, P.P.C. Valve, For Travel (1/2)

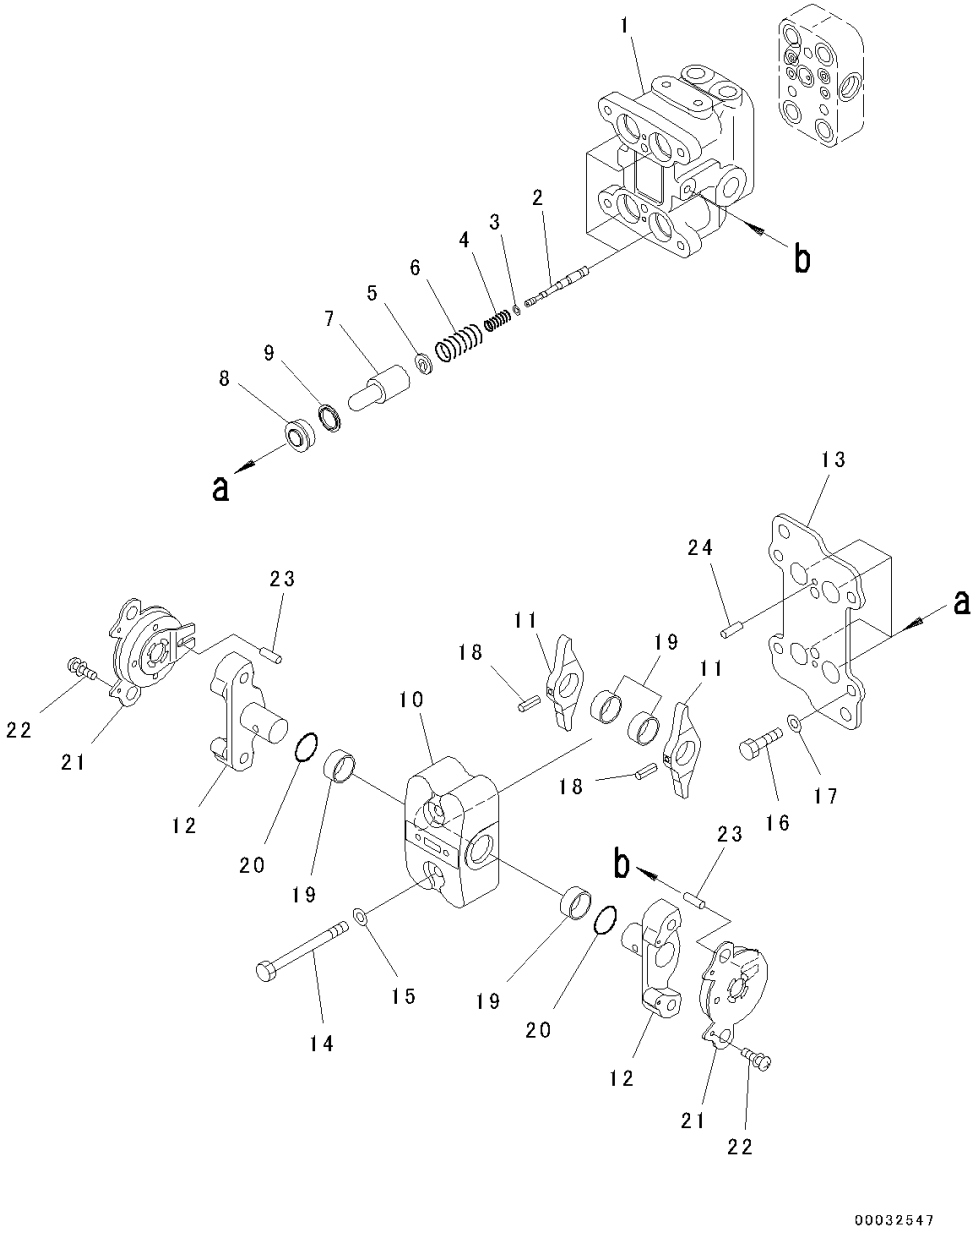


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 702-16-04250 | Valve, Pilot | 1 | Y200001- |
| 1 | C1 | | • Valve Body | 1 | Y200001- |
| 2 | C1 | | • Valve | 4 | Y200001- |
| 3 | | 702-16-51140 | • Shim, T=0.30mm | 4 | Y200001- |
| 4 | | 702-16-53420 | • Spring | 4 | Y200001- |
| 5 | | 702-16-53140 | • Retainer | 4 | Y200001- |
| 6 | | 702-16-54420 | • Spring | 4 | Y200001- |
| 7 | | 702-16-53170 | • Piston | 4 | Y200001- |
| 8 | | 702-16-71150 | • Seal | 4 | Y200001- |
| 9 | | 702-16-71160 | • Seat | 4 | Y200001- |
| 10 | | 702-16-73630 | • Case | 1 | Y200001- |
| 11 | C1 | | • Lever | 2 | Y200001- |
| 12 | C1 | | • Shaft | 2 | Y200001- |
| 13 | C1 | • Plate | | 1 | Y200001- |
| 14 | | 01010-80855 | • Bolt | 2 | Y200001- |
| 15 | | 01643-30823 | • Washer | 2 | Y200001- |
| 16 | | 01010-80816 | • Bolt | 4 | Y200001- |
| 17 | | 702-16-54331 | • Washer, T=1.60mm | 4 | Y200001- |
| | | 702-16-54341 | • Washer, T=1.30mm | 4 | Y200001- |
| | | 702-16-54351 | • Washer, T=1.00mm | 4 | Y200001- |
| | | 702-16-56380 | • Washer, T=1.90mm | 4 | Y200001- |
| | | 702-16-56390 | • Washer, T=2.20mm | 4 | Y200001- |
| 18 | | 04025-00432 | • Pin | 2 | Y200001- |
| 19 | | 702-16-54430 | • Bushing | 4 | Y200001- |
| 20 | | 07000-12018 | • O-ring | 2 | Y200001- |
| 21 | C2 | 702-16-73610 | • Damper Assembly | 2 | Y200001- |
| 22 | | 01023-10306 | • Screw | 4 | Y200001- |
| 23 | | 702-16-73650 | • Pin | 2 | Y200001- |
| 24 | | 04022-04016 | • Pin, Dowel | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130026 Cab, Floor, P.P.C. Valve, For Travel (2/2)

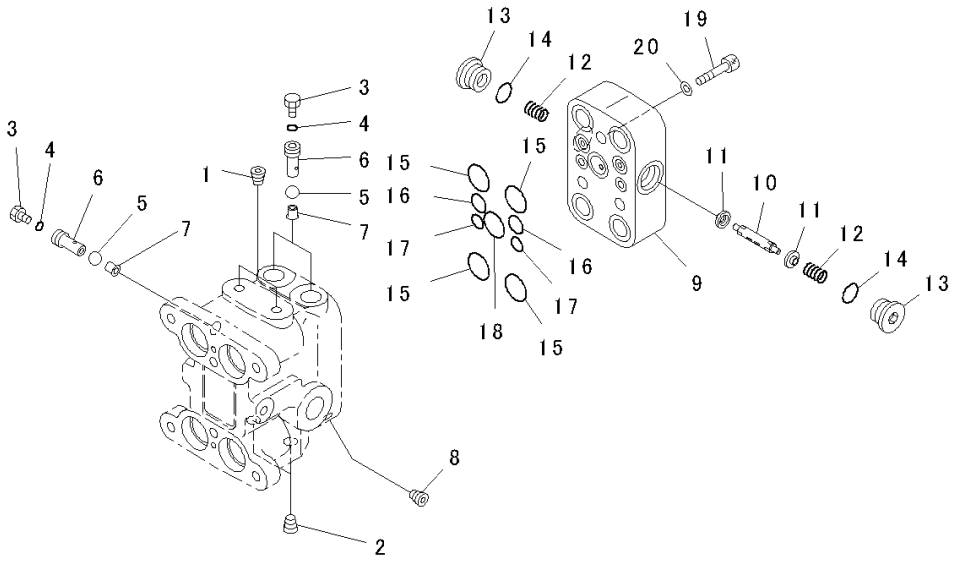


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 702-16-04250 | Valve, Pilot | 1 | Y200001- |
| 1 | C1 | | • Plug | 2 | Y200001- |
| 2 | C1 | | • Plug | 2 | Y200001- |
| 3 | | 07040-11209 | • Plug | 3 | Y200001- |
| 4 | | 07002-11223 | • O-ring | 3 | Y200001- |
| 5 | C1 | | • Ball | 3 | Y200001- |
| 6 | | 702-16-55940 | • Plug | 3 | Y200001- |
| 7 | | 702-16-55950 | • Seat | 3 | Y200001- |
| 8 | C1 | | • Screw | 2 | Y200001- |
| 9 | C1 | | • Body, Valve | 1 | Y200001- |
| 10 | C1 | | • Spool | 1 | Y200001- |
| 11 | | 702-16-57440 | • Retainer | 2 | Y200001- |
| 12 | | 702-16-57450 | • Spring | 2 | Y200001- |
| 13 | | 723-11-15110 | • Plug | 2 | Y200001- |
| 14 | | 07002-11623 | • O-ring | 2 | Y200001- |
| 15 | | 07000-12015 | • O-ring | 4 | Y200001- |
| 16 | | 07000-11010 | • O-ring | 2 | Y200001- |
| 17 | | 07000-11007 | • O-ring | 2 | Y200001- |
| 18 | | 700-22-11410 | • O-ring | 1 | Y200001- |
| 19 | | 01252-60835 | • Bolt | 3 | Y200001- |
| 20 | | 01643-50823 | • Washer | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130027 Cab, Floor, Travel Control

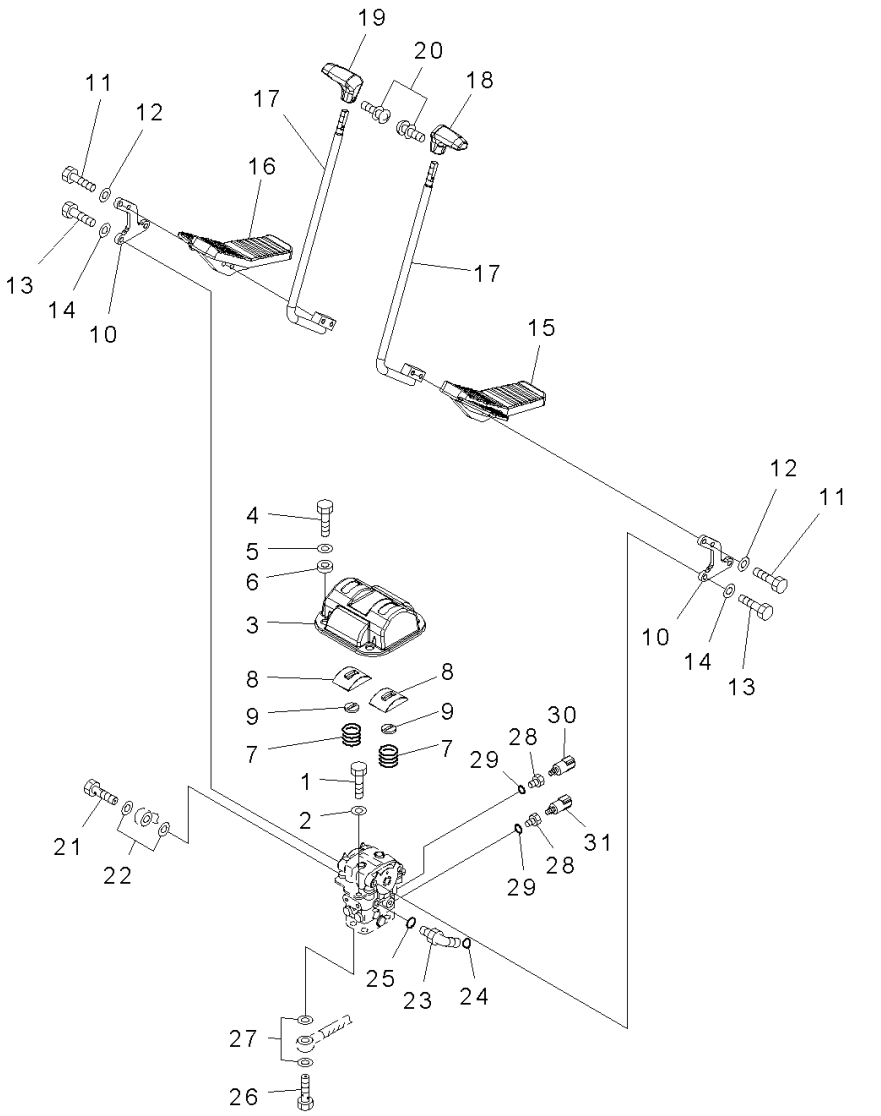


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01010-81020 | Bolt | 2 | Y200001- |
| 2 | | 01643-31032 | Washer | 2 | Y200001- |
| 3 | | 20Y-43-41121 | Cover | 1 | Y200001- |
| 4 | | 01010-81020 | Bolt | 4 | Y200001- |
| 5 | | 01643-31032 | Washer | 4 | Y200001- |
| 6 | | 20Y-43-41361 | Collar | 4 | Y200001- |
| 7 | | 203-43-51620 | Spring | 2 | Y200001- |
| | | 22U-43-21350 | Cover Assembly | 2 | Y200001- |
| 8 | C1 | | • Cover | 1 | Y200001- |
| 9 | | 22U-43-21360 | • Seal | 1 | Y200001- |
| 10 | | 20Y-43-41111 | Lever | 2 | Y200001- |
| 11 | | 01010-D1045 | Bolt | 4 | Y200001- |
| 12 | | 01643-71032 | Washer | 4 | Y200001- |
| 13 | | 01010-81030 | Bolt | 4 | Y200001- |
| 14 | | 01643-31032 | Washer | 4 | Y200001- |
| 15 | | 22U-43-21111 | Pedal | 1 | Y200001- |
| 16 | | 22U-43-21121 | Pedal | 1 | Y200001- |
| 17 | | 22U-43-21131 | Lever | 2 | Y200001- |
| 18 | | 20Y-43-21231 | Knob | 1 | Y200001- |
| 19 | | 20Y-43-21241 | Knob | 1 | Y200001- |
| 20 | | 01023-20416 | Screw | 2 | Y200001- |
| 21 | | 20Y-62-18910 | Bolt | 1 | Y200001- |
| 22 | | 07000-12018 | O-ring | 2 | Y200001- |
| 23 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 24 | | 02896-11008 | O-ring | 1 | Y200001- |
| 25 | | 07002-11423 | O-ring | 1 | Y200001- |
| 26 | | 20Y-62-18890 | Bolt | 4 | Y200001- |
| 27 | | 07000-12015 | O-ring | 8 | Y200001- |
| 28 | | 20Y-62-41390 | Adapter | 2 | Y200001- |
| 29 | | 07002-11423 | O-ring | 2 | Y200001- |
| 30 | | 20Y-06-21710 | Switch | 1 | Y200001- |
| 31 | | 206-06-61130 | Switch | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130028 Cab, Floor, Foot Rest, LHS

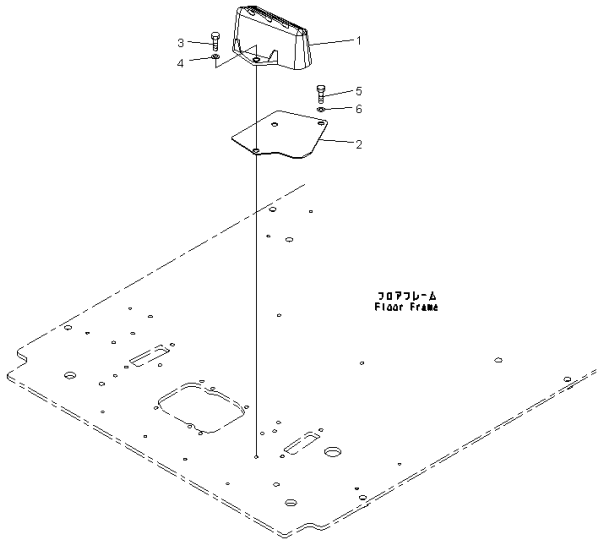


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22U-54-25110 | Foot Rest,LHS | 1 | Y200001- |
| 2 | | 22U-54-25521 | Plate | 1 | Y200001- |
| 3 | | 01010-81025 | Bolt | 2 | Y200001- |
| 4 | | 01643-31032 | Washer | 2 | Y200001- |
| 5 | | 01010-81020 | Bolt | 2 | Y200001- |
| 6 | | 01643-31032 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130029 Cab, Floor, Foot Rest, RHS

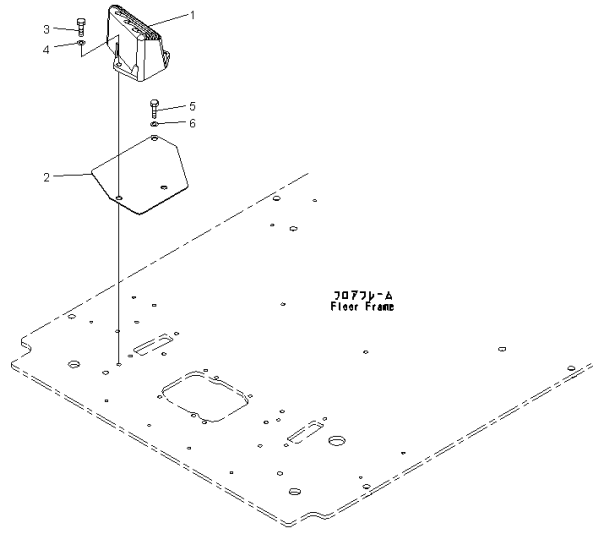


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22U-54-25120 | Foot Rest,RHS | 1 | Y200001- |
| 2 | | 22U-54-25531 | Plate | 1 | Y200001- |
| 3 | | 01010-81025 | Bolt | 2 | Y200001- |
| 4 | | 01643-31032 | Washer | 2 | Y200001- |
| 5 | | 01010-81020 | Bolt | 1 | Y200001- |
| 6 | | 01643-31032 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130030 Cab, Floor, Base

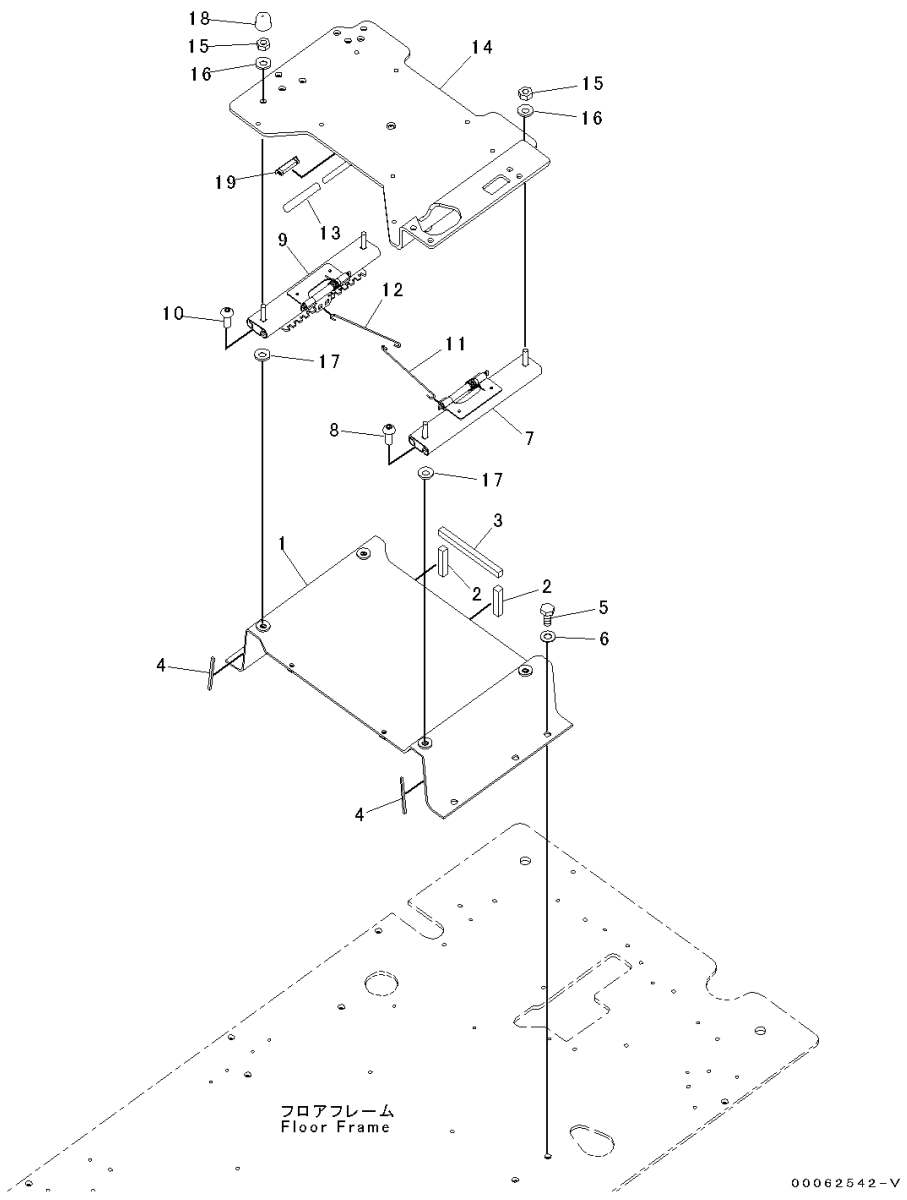


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-43-41230 | Frame . | 1 | Y200001- |
| 2 | | 208-43-71520 | • Seal . | 2 | Y200001- |
| 3 | | 208-43-71530 | • Seal . | 1 | Y200001- |
| 4 | | 208-43-71590 | • Seal . | 2 | Y200001- |
| 5 | | 01010-81230 | Bolt. | 5 | Y200001- |
| 6 | | 01643-31232 | Washer . | 5 | Y200001- |
| 7 | | 20Y-43-41813 | Adjuster. | 1 | Y200001- |
| 8 | | 01245-01025 | Screw. | 2 | Y200001- |
| 9 | | 20Y-43-41823 | Adjuster. | 1 | Y200001- |
| 10 | | 01245-01025 | Screw. | 2 | Y200001- |
| 11 | | 20Y-43-41832 | Wire . | 1 | Y200001- |
| 12 | | 20Y-43-41891 | Wire . | 1 | Y200001- |
| 13 | | 22U-43-21390 | Cap . | 1 | Y200001- |
| 14 | | 20Y-43-41252 | Frame . | 1 | Y200001- |
| 15 | | 20Y-54-65340 | Nut . | 4 | Y200001- |
| 16 | | 01643-71032 | Washer . | 4 | Y200001- |
| 17 | | 01640-21016 | Washer . | 4 | Y200001- |
| 18 | | 20Y-54-65540 | Cap . | 2 | Y200001- |
| 19 | | 20Y-979-6630 | Catcher . | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130031 Cab, Floor, Harness

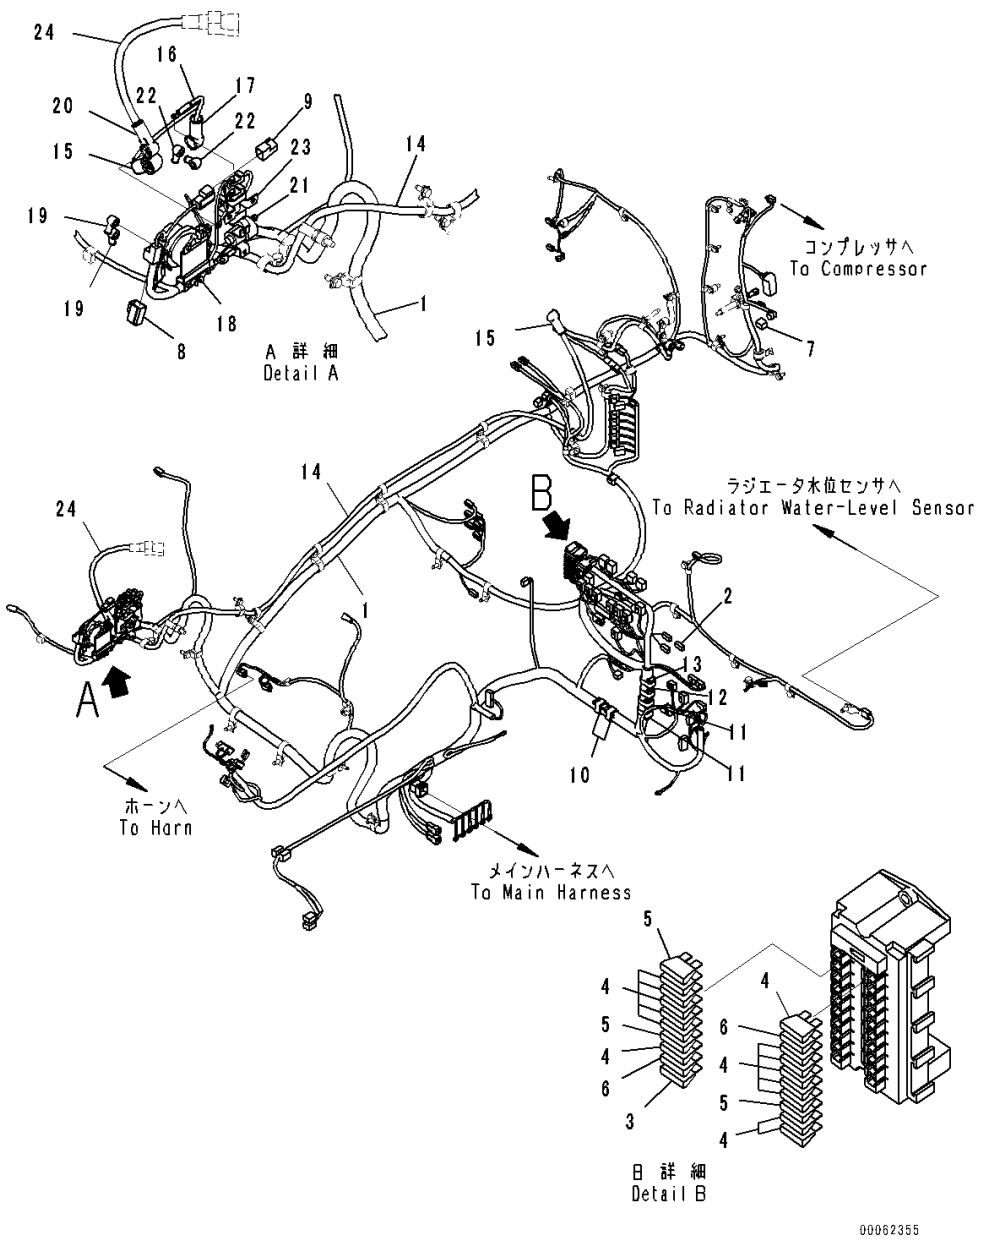


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-06-42721 | Wiring Harness | 1 | Y200001- |
| 2 | | 08020-20000 | • Diode | 2 | Y200001- |
| 3 | | 08041-00500 | • Fuse, 5Amp. | 1 | Y200001- |
| 4 | | 08041-01000 | • Fuse, 10Amp. | 14 | Y200001- |
| 5 | | 08041-02000 | • Fuse, 20Amp. | 3 | Y200001- |
| 6 | | 08041-03000 | • Fuse, 30Amp. | 2 | Y200001- |
| 7 | | 19M-06-31720 | • Resistor | 1 | Y200001- |
| 8 | | 20Y-06-31660 | • Fusible Link, 30Amp. | 1 | Y200001- |
| 9 | | 22U-06-11270 | • Fusible Link, 65Amp. | 1 | Y200001- |
| 10 | | HM6400-0012 | • F-Connector, Black | 2 | Y200001- |
| | | HM6409-0071 | • M-Connector, Black | 2 | Y200001- |
| 11 | | HM6400-0013 | • F-Connector, Green | 2 | Y200001- |
| | | HM6409-0072 | • M-Connector, Green | 2 | Y200001- |
| 12 | | HM6440-0129 | • F-Connector, Pink | 1 | Y200001- |
| | | HM6440-0128 | • M-Connector, Pink | 1 | Y200001- |
| 13 | | HM6400-0016 | • F-Connector, Orange | 1 | Y200001- |
| | | HM6409-0075 | • M-Connector, Orange | 1 | Y200001- |
| 14 | | 20Y-06-41283 | Cable | 1 | Y200001- |
| 15 | | 08038-00035 | Cap, Terminal | 1 | Y200001- |
| 16 | | 20Y-06-22872 | Cable | 1 | Y200001- |
| 17 | | 08038-06031 | Cap | 1 | Y200001- |
| 18 | | 08088-30000 | Switch | 1 | Y200001- |
| 19 | | 08038-00519 | Cap | 2 | Y200001- |
| 20 | | 08038-06031 | Cap | 1 | Y200001- |
| 21 | | 600-815-2170 | Switch, Heater | 1 | Y200001- |
| 22 | | 08038-00519 | Cap | 2 | Y200001- |
| 23 | | 600-815-8941 | Relay | 1 | Y200001- |
| 24 | | 08028-CC065 | Cable | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130032 Cab, Floor, Harness Clamp And Earth

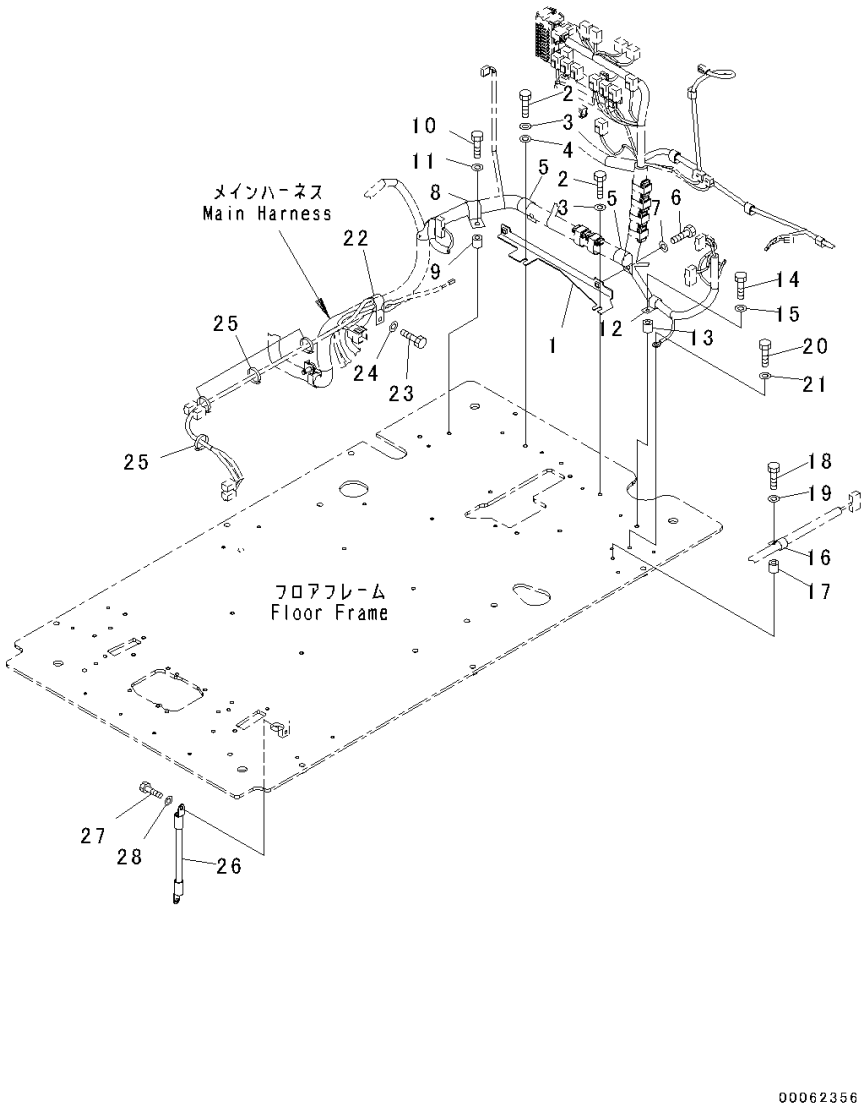


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-14121 | Bracket | 1 | Y200001- |
| 2 | | 01010-81016 | Bolt | 2 | Y200001- |
| 3 | | 01643-31032 | Washer | 2 | Y200001- |
| 4 | | 01643-31032 | Washer | 1 | Y200001- |
| 5 | | 04434-53411 | Clip | 2 | Y200001- |
| 6 | | 01010-81020 | Bolt | 2 | Y200001- |
| 7 | | 01643-31032 | Washer | 2 | Y200001- |
| 8 | | 04434-53411 | Clip | 1 | Y200001- |
| 9 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 10 | | 01010-81040 | Bolt | 1 | Y200001- |
| 11 | | 01643-31032 | Washer | 1 | Y200001- |
| 12 | | 04434-51910 | Clip | 1 | Y200001- |
| 13 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 14 | | 01010-81040 | Bolt | 1 | Y200001- |
| 15 | | 01643-31032 | Washer | 1 | Y200001- |
| 16 | | 04434-51410 | Clip | 1 | Y200001- |
| 17 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 18 | | 01010-81040 | Bolt | 1 | Y200001- |
| 19 | | 01643-31032 | Washer | 1 | Y200001- |
| 20 | | 01010-81020 | Bolt | 1 | Y200001- |
| 21 | | 01643-31032 | Washer | 1 | Y200001- |
| 22 | | 04434-53411 | Clip | 1 | Y200001- |
| 23 | | 01010-81020 | Bolt | 1 | Y200001- |
| 24 | | 01643-31032 | Washer | 1 | Y200001- |
| 25 | | 08034-20519 | Band | 4 | Y200001- |
| 26 | | 08028-43030 | Cable, Ground | 1 | Y200001- |
| 27 | | 01010-81020 | Bolt | 1 | Y200001- |
| 28 | | 01643-31032 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130033 Cab, Floor, Window Washer Hose

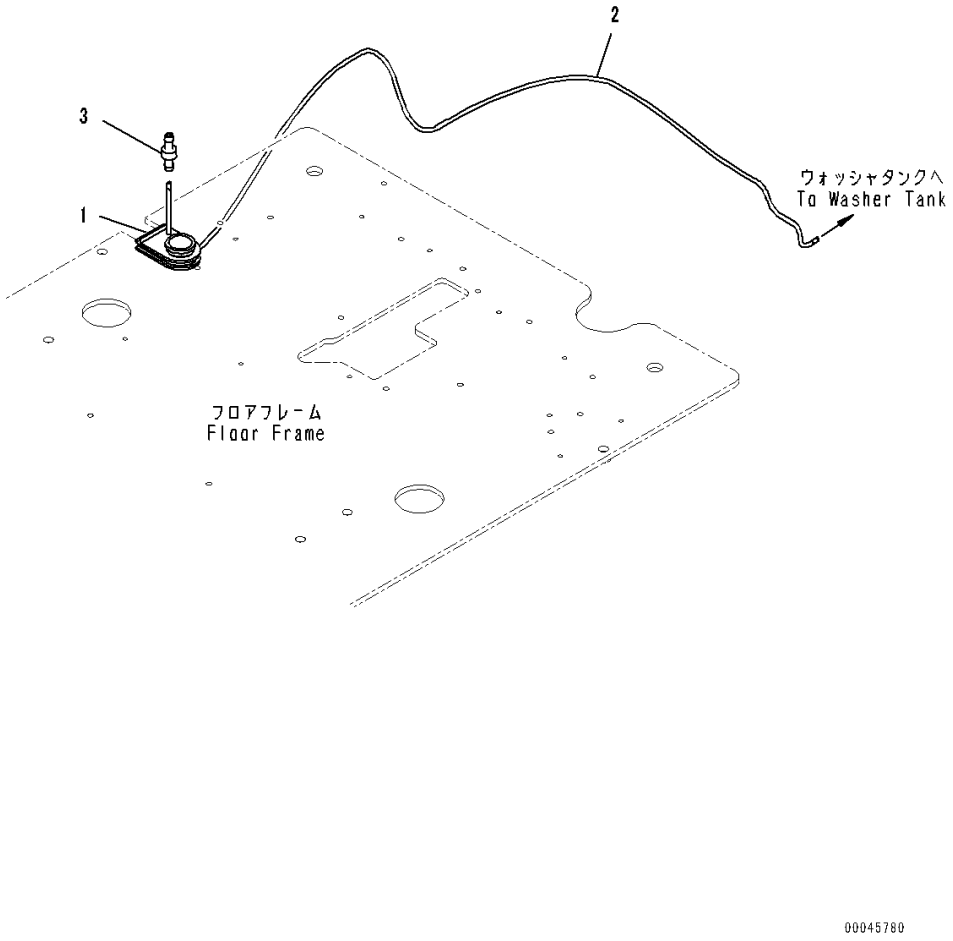


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-53-14991 | Grommet | 1 | Y200001- |
| 2 | | 195-979-7770 | Hose | 1 | Y200001- |
| 3 | | 207-06-61490 | Valve | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130034 Cab, Floor, Lever, LHS

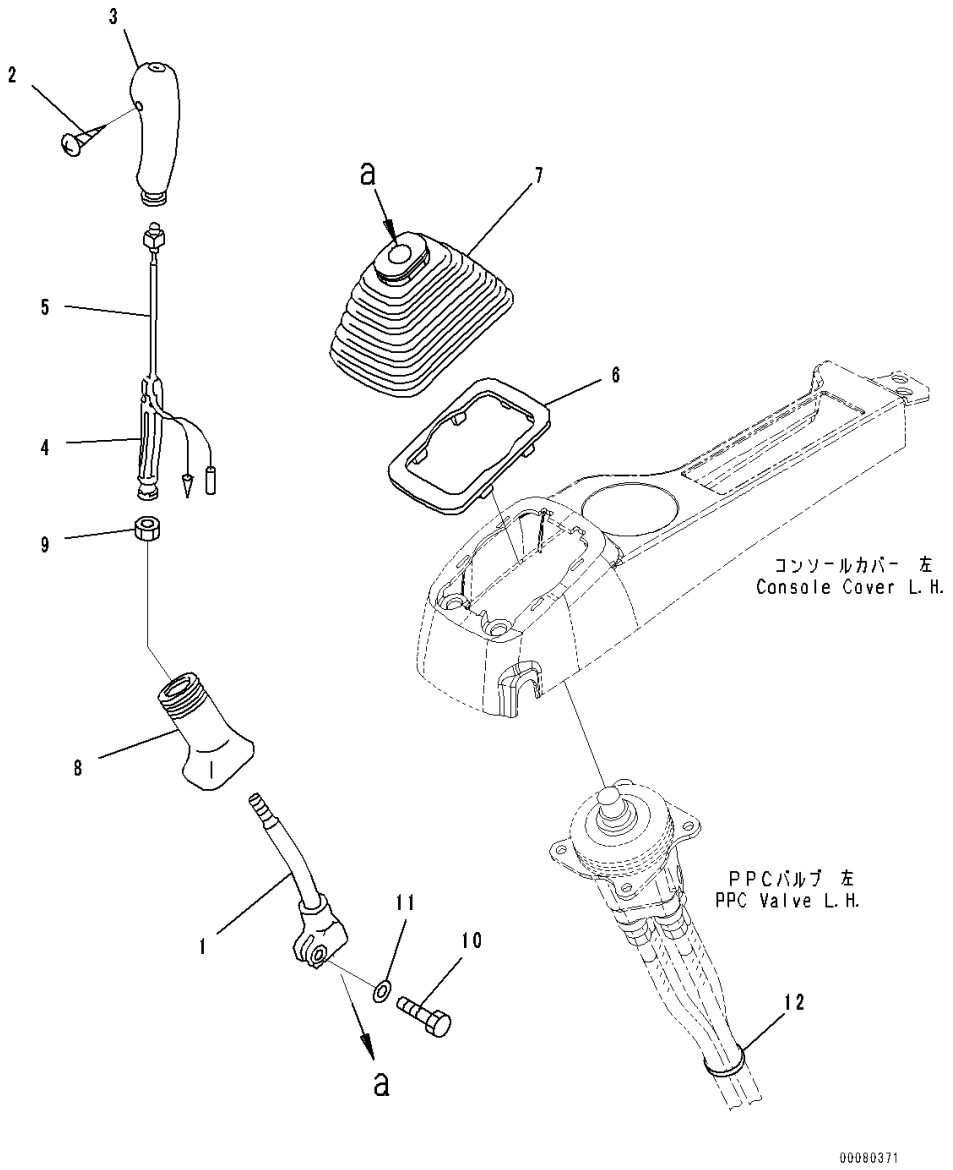


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-43-22211 | Lever,LHS | 1 | Y200001- |
| | | 22U-43-21182 | Knob . | 1 | Y200001- |
| 2 | C1 | | • Knob | 1 | Y200001- |
| 3 | | 20Y-43-22381 | • Knob,LHS | 1 | Y200001- |
| 4 | | 20Y-43-22421 | • Insert | 1 | Y200001- |
| 5 | | 22U-43-21211 | • Switch | 1 | Y200001- |
| 6 | | 20Y-43-22250 | Plate | 1 | Y200001- |
| 7 | | 20Y-43-22261 | Boot | 1 | Y200001- |
| 8 | | 20Y-43-22370 | Boot | 1 | Y200001- |
| 9 | | 600-411-1280 | Nut | 1 | Y200001- |
| 10 | | 01252-41025 | Bolt | 1 | Y200001- |
| 11 | | 01643-51032 | Washer | 1 | Y200001- |
| 12 | | 08034-20536 | Band | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. K1110-130035 Cab, Floor, P.P.C. Valve, For Work Equipment, LHS

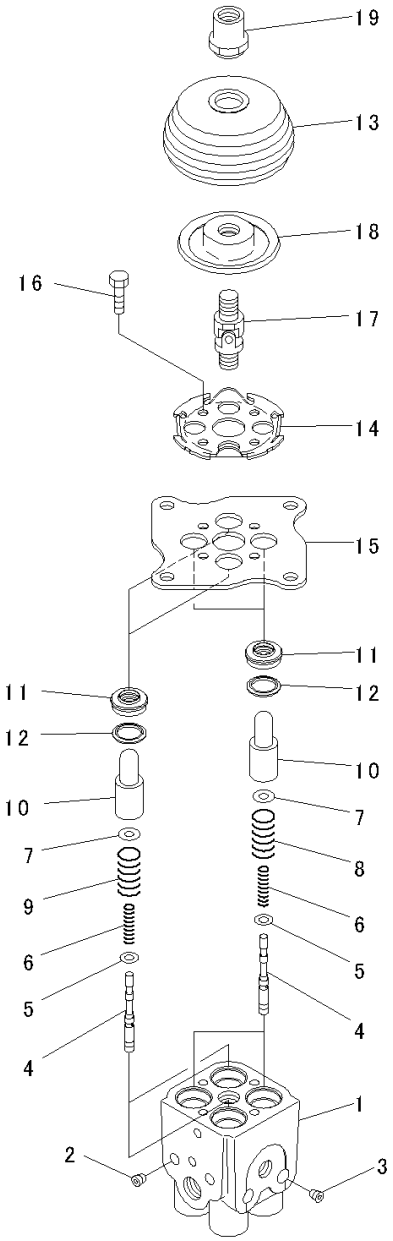



PW5X112

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 702-16-03910 | Valve, Pilot | 1 | Y200001- |
| 1 | C1 | | • Valve Body | 1 | Y200001- |
| 2 | C1 | | • Plug | 2 | Y200001- |
| 3 | C1 | | • Plug | 2 | Y200001- |
| 4 | C1 | | • Valve | 4 | Y200001- |
| 5 | | 702-16-51140 | • Shim, T=0.30mm | 4 | Y200001- |
| 6 | | 702-16-53420 | • Spring | 4 | Y200001- |
| 7 | | 702-16-53140 | • Retainer | 4 | Y200001- |
| 8 | | 702-16-53470 | • Spring | 2 | Y200001- |
| 9 | | 702-16-53590 | • Spring | 2 | Y200001- |
| 10 | | 702-16-53170 | • Piston | 4 | Y200001- |
| 11 | | 702-16-71210 | • Seal | 4 | Y200001- |
| 12 | | 702-16-71160 | • Seat | 4 | Y200001- |
| 13 | | 702-16-71280 | • Boot | 1 | Y200001- |
| 14 | | 702-16-71131 | • Plate | 1 | Y200001- |
| 15 | | 702-16-71141 | • Plate | 1 | Y200001- |
| 16 | | 01010-80620 | • Bolt | 4 | Y200001- |
| 17 | | 702-16-51240 | • Universal Joint | 1 | Y200001- |
| 18 | | 702-16-71361 | • Disc | 1 | Y200001- |
| 19 | | 702-16-71441 | • Nut | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130036 Cab, Floor, Valve, LHS

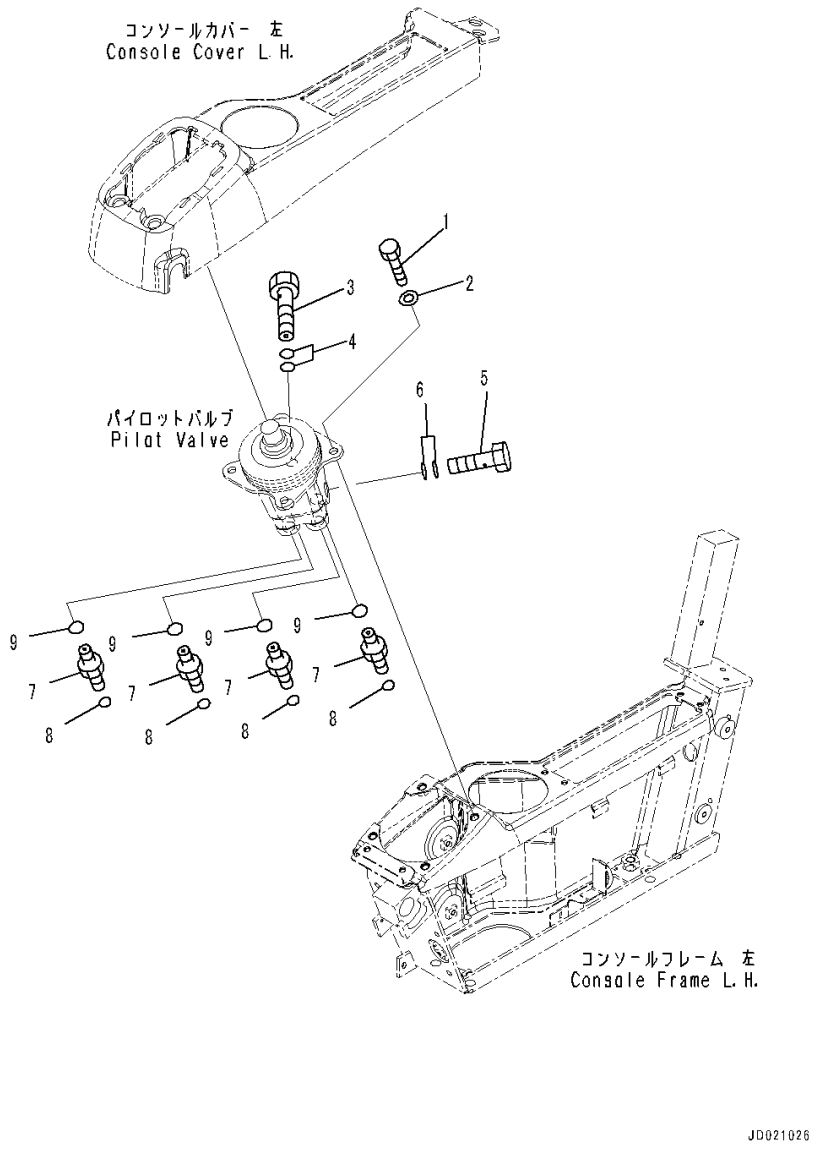


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01010-80820 | Bolt | 4 | Y200001- |
| 2 | | 01643-30823 | Washer | 4 | Y200001- |
| 3 | | 20Y-62-18910 | Bolt | 1 | Y200001- |
| 4 | | 07000-12018 | O-ring | 2 | Y200001- |
| 5 | | 20Y-62-18890 | Bolt | 1 | Y200001- |
| 6 | | 07000-12015 | O-ring | 2 | Y200001- |
| 7 | | 11Y-62-12130 | Nipple | 4 | Y200001- |
| 8 | | 02896-11008 | O-ring | 4 | Y200001- |
| 9 | | 07002-11423 | O-ring | 4 | Y200001- |


https://truckmanualshub.com/

# FIG. K1110-130037 Cab, Floor, Console, LHS

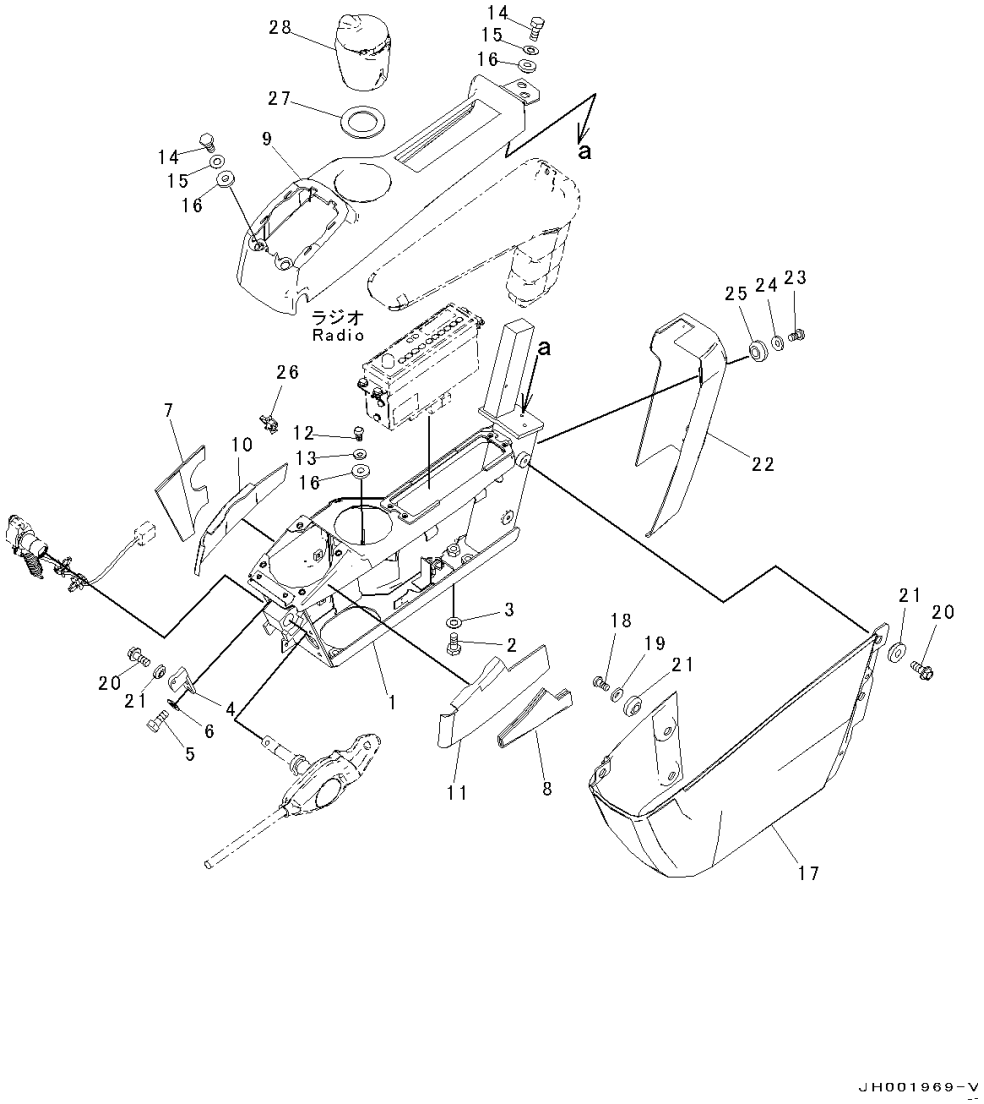


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-43-41415 | Frame,LHS | 1 | Y200001- |
| 2 | | 01010-81030 | Bolt | 4 | Y200001- |
| 3 | | 01643-31032 | Washer | 4 | Y200001- |
| 4 | | 20Y-43-41472 | Bracket | 1 | Y200001- |
| 5 | | 01010-80616 | Bolt | 2 | Y200001- |
| 6 | | 01643-30623 | Washer | 2 | Y200001- |
| 7 | | 20Y-43-41621 | Sheet | 1 | Y200001- |
| 8 | | 20Y-43-41641 | Sheet | 1 | Y200001- |
| 9 | | 20Y-43-41423 | Cover | 1 | Y200001- |
| 10 | | 20Y-43-41651 | Sheet | 1 | Y200001- |
| 11 | | 20Y-43-41661 | Sheet | 1 | Y200001- |
| 12 | | 01245-00616 | Screw, Hexagon Socket Head | 1 | Y200001- |
| 13 | | 01643-70623 | Washer | 1 | Y200001- |
| 14 | | 01010-80616 | Bolt | 4 | Y200001- |
| 15 | | 01643-30623 | Washer | 4 | Y200001- |
| 16 | | 20Y-43-41290 | Collar | 5 | Y200001- |
| 17 | | 20Y-43-41442 | Cover | 1 | Y200001- |
| 18 | | 01245-00616 | Screw, Hexagon Socket Head | 2 | Y200001- |
| 19 | | 01643-70623 | Washer | 2 | Y200001- |
| 20 | | 01435-00612 | Bolt | 3 | Y200001- |
| 21 | | 20Y-43-41290 | Collar | 5 | Y200001- |
| 22 | | 20Y-43-41453 | Cover | 1 | Y200001- |
| 23 | | 01245-00616 | Screw, Hexagon Socket Head | 2 | Y200001- |
| 24 | | 01643-70623 | Washer | 2 | Y200001- |
| 25 | | 20Y-43-41290 | Collar | 2 | Y200001- |
| 26 | | 22U-43-23260 | Clip | 1 | Y200001- |
| 27 | | 20Y-43-41970 | Sheet | 1 | Y200001- |
| 28 | | 20Y-43-41491 | Ashtray | 1 | Y200001- |


# FIG. K1110-130038 Cab, Floor, P.P.C. Lock Lever And Radio

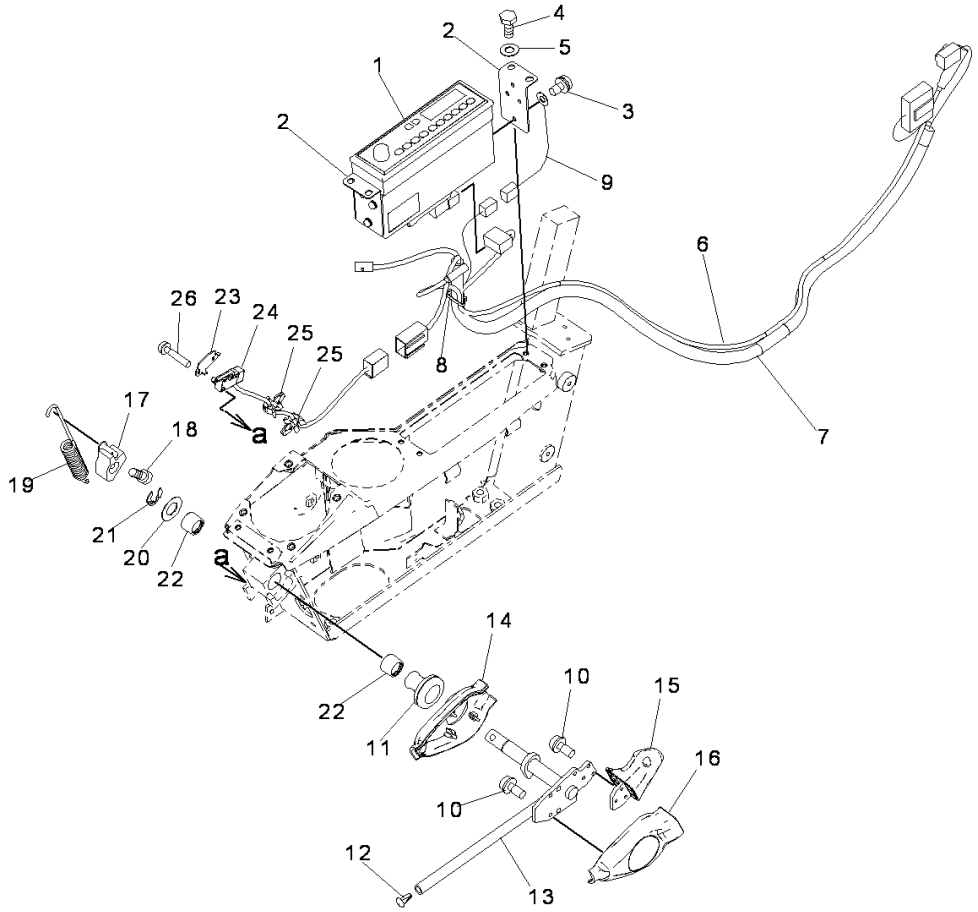


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-06-42430 | Radio | 1 | Y200001- |
| 2 | | 20Y-43-42130 | Plate | 2 | Y200001- |
| 3 | | 01023-60510 | Screw | 6 | Y200001- |
| 4 | | 01010-80616 | Bolt | 4 | Y200001- |
| 5 | | 01643-30623 | Washer | 4 | Y200001- |
| 6 | | 08912-51600 | Cord | 1 | Y200001- |
| 7 | | 21M-06-31170 | Wire Harness | 1 | Y200001- |
| 8 | | 08034-20414 | Band | 1 | Y200001- |
| 9 | | 20Y-06-41830 | Wiring Harness | 1 | Y200001- |
| 10 | | 01023-60410 | Screw | 6 | Y200001- |
| 11 | | 08037-11425 | Grommet | 1 | Y200001- |
| 12 | | 208-53-12280 | Cap | 1 | Y200001- |
| 13 | | 20Y-43-31513 | Lever | 1 | Y200001- |
| 14 | | 20Y-43-31522 | Cover | 1 | Y200001- |
| 15 | | 20Y-43-31611 | Knob | 1 | Y200001- |
| 16 | | 20Y-43-31621 | Cover | 1 | Y200001- |
| 17 | | 20Y-43-31432 | Cam | 1 | Y200001- |
| 18 | | 01252-70816 | Bolt | 1 | Y200001- |
| 19 | | 20Y-43-31421 | Spring | 1 | Y200001- |
| 20 | | 20Y-43-31440 | Ring | 1 | Y200001- |
| 21 | | 20Y-43-31450 | Plate | 1 | Y200001- |
| 22 | | 06124-01616 | Bearing | 2 | Y200001- |
| 23 | | 22U-06-22490 | Plate | 1 | Y200001- |
| 24 | | 22U-06-22360 | Switch Assembly | 1 | Y200001- |
| 25 | | 22U-43-23260 | Clip | 2 | Y200001- |
| 26 | | 01023-60320 | Screw | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130039 Cab, Floor, Arm Rest, LHS

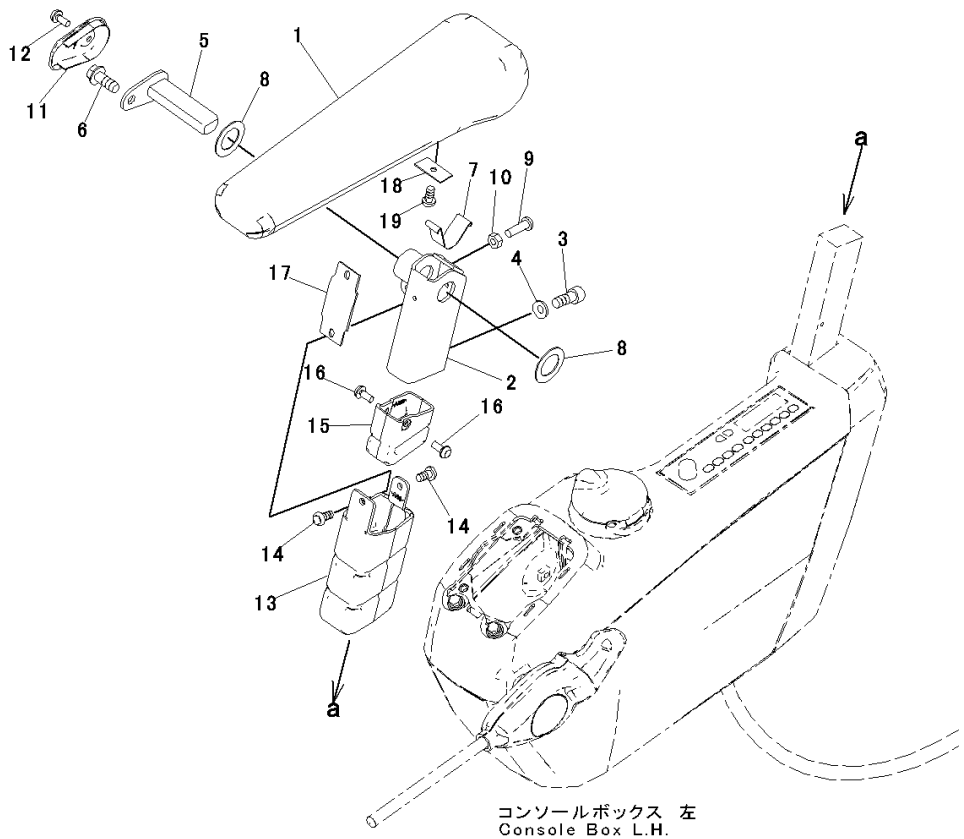


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-43-41143 | Armrest,LHS | 1 | Y200001- |
| 2 | | 20Y-43-41173 | Bracket,LHS | 1 | Y200001- |
| 3 | | 01252-80820 | Bolt | 2 | Y200001- |
| 4 | | 01643-70823 | Washer | 2 | Y200001- |
| 5 | | 20Y-43-41162 | Pin | 1 | Y200001- |
| 6 | | 01435-40816 | Bolt | 1 | Y200001- |
| 7 | | 20Y-43-41152 | Spring | 1 | Y200001- |
| 8 | | 437-40-26240 | Washer | 2 | Y200001- |
| 9 | | 01245-00620 | Screw | 1 | Y200001- |
| 10 | | 01580-40605 | Nut | 1 | Y200001- |
| 11 | | 20Y-43-41181 | Cap | 1 | Y200001- |
| 12 | | 01023-20512 | Screw | 1 | Y200001- |
| 13 | | 20Y-43-41191 | Cover | 1 | Y200001- |
| 14 | | 01370-40510 | Screw | 2 | Y200001- |
| 15 | | 20Y-43-41591 | Cover | 1 | Y200001- |
| 16 | | 01023-20512 | Screw | 2 | Y200001- |
| 17 | | 20Y-43-41281 | Rubber | 1 | Y200001- |
| 18 | | 20Y-43-41461 | Plate | 1 | Y200001- |
| 19 | | 01370-40610 | Screw | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130040 Cab, Floor, Lever, RHS

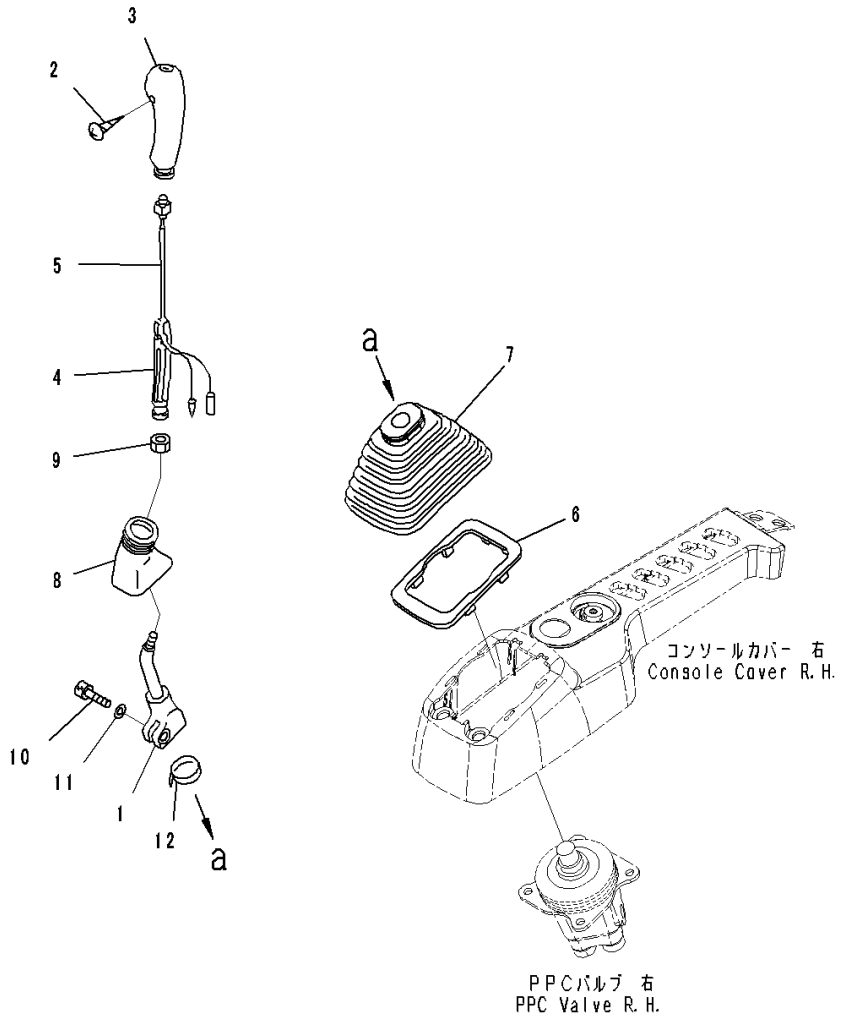


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-43-22221 | Lever,RHS | 1 | Y200001- |
| 2 | C1 | | • Lever | 1 | Y200001- |
| | | 22U-43-21192 | Knob | 1 | Y200001- |
| 3 | | 20Y-43-22390 | • Knob,RHS | 1 | Y200001- |
| 4 | | 20Y-43-22421 | • Insert | 1 | Y200001- |
| 5 | | 22U-43-21211 | • Switch | 1 | Y200001- |
| 6 | | 20Y-43-22250 | Plate | 1 | Y200001- |
| 7 | | 20Y-43-22261 | Boot | 1 | Y200001- |
| 8 | | 20Y-43-22370 | Boot | 1 | Y200001- |
| 9 | | 600-411-1280 | Nut | 1 | Y200001- |
| 10 | | 01252-41025 | Bolt | 1 | Y200001- |
| 11 | | 01643-51032 | Washer | 1 | Y200001- |
| 12 | | 08034-20536 | Band | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. K1110-130041 Cab, Floor, P.P.C. Valve, For Work Equipment, RHS

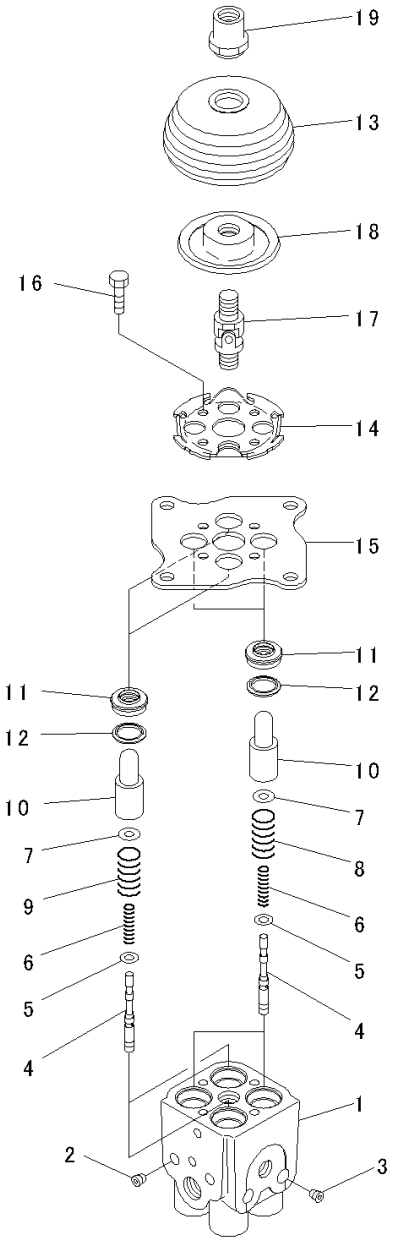



PW5X112

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 702-16-03910 | Valve, Pilot | 1 | Y200001- |
| 1 | C1 | | • Valve Body | 1 | Y200001- |
| 2 | C1 | | • Plug | 2 | Y200001- |
| 3 | C1 | | • Plug | 2 | Y200001- |
| 4 | C1 | | • Valve | 4 | Y200001- |
| 5 | | 702-16-51140 | • Shim, T=0.30mm | 4 | Y200001- |
| 6 | | 702-16-53420 | • Spring | 4 | Y200001- |
| 7 | | 702-16-53140 | • Retainer | 4 | Y200001- |
| 8 | | 702-16-53470 | • Spring | 2 | Y200001- |
| 9 | | 702-16-53590 | • Spring | 2 | Y200001- |
| 10 | | 702-16-53170 | • Piston | 4 | Y200001- |
| 11 | | 702-16-71210 | • Seal | 4 | Y200001- |
| 12 | | 702-16-71160 | • Seat | 4 | Y200001- |
| 13 | | 702-16-71280 | • Boot | 1 | Y200001- |
| 14 | | 702-16-71131 | • Plate | 1 | Y200001- |
| 15 | | 702-16-71141 | • Plate | 1 | Y200001- |
| 16 | | 01010-80620 | • Bolt | 4 | Y200001- |
| 17 | | 702-16-51240 | • Universal Joint | 1 | Y200001- |
| 18 | | 702-16-71361 | • Disc | 1 | Y200001- |
| 19 | | 702-16-71441 | • Nut | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130042 Cab, Floor, Valve, RHS

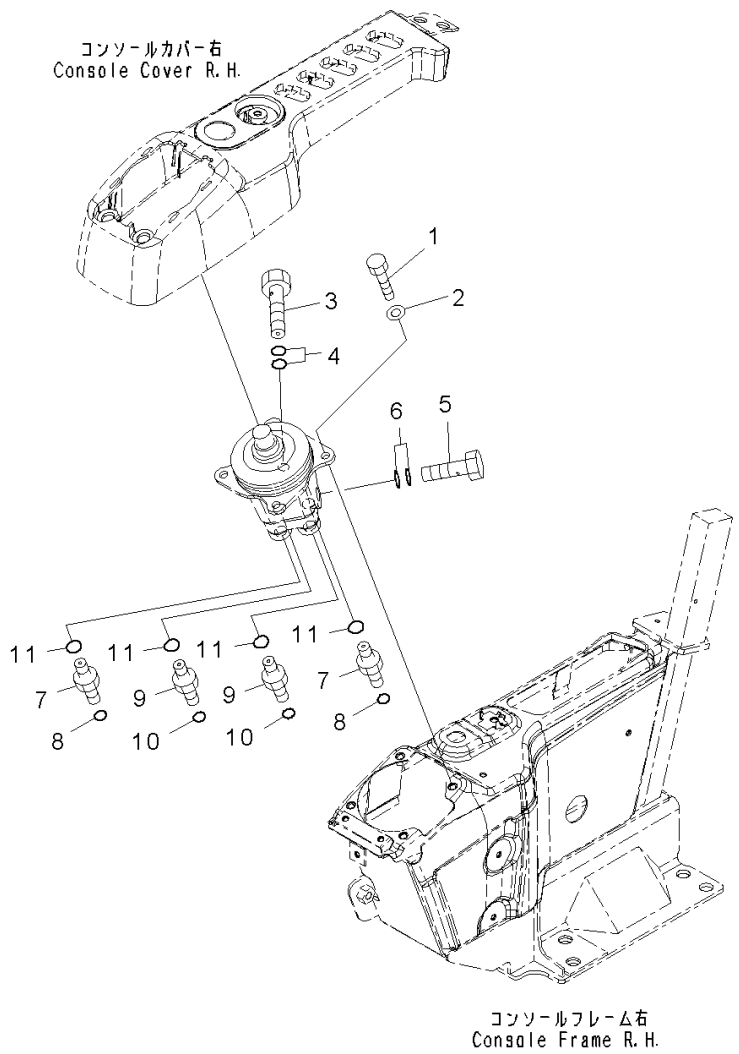


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01010-80820 | Bolt | 4 | Y200001- |
| 2 | | 01643-30823 | Washer | 4 | Y200001- |
| 3 | | 20Y-62-18910 | Bolt | 1 | Y200001- |
| 4 | | 07000-12018 | O-ring | 2 | Y200001- |
| 5 | | 20Y-62-18890 | Bolt | 1 | Y200001- |
| 6 | | 07000-12015 | O-ring | 2 | Y200001- |
| 7 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 8 | | 02896-11008 | O-ring | 2 | Y200001- |
| 9 | | 11Y-62-12520 | Union | 2 | Y200001- |
| 10 | | 02896-11009 | O-ring | 2 | Y200001- |
| 11 | | 07002-11423 | O-ring | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130043 Cab, Floor, Console, RHS

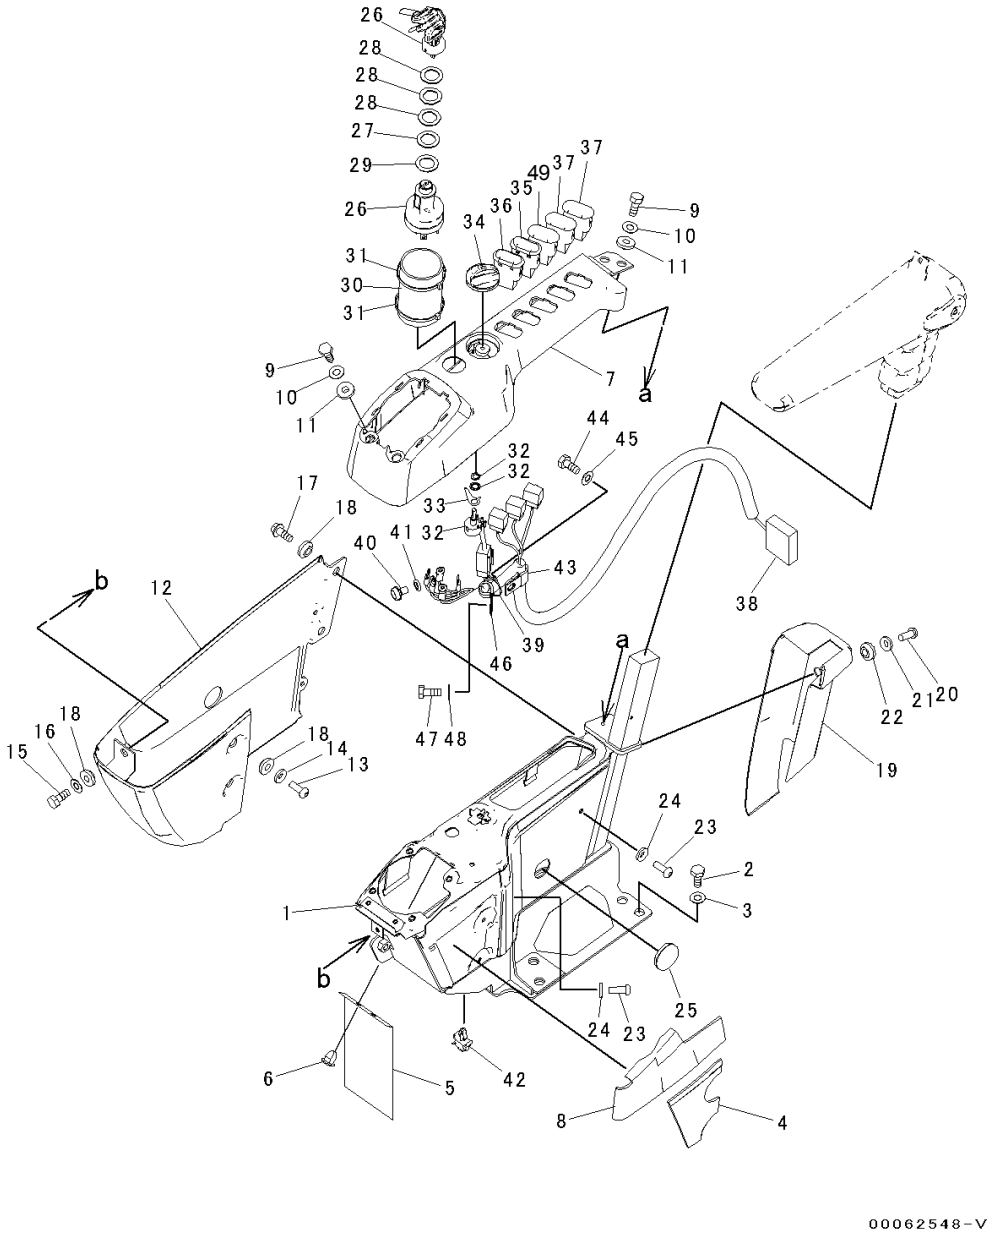


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-43-41313 | Frame,RHS | 1 | Y200001- |
| 2 | | 01010-D1230 | Bolt | 4 | Y200001- |
| 3 | | 01643-71232 | Washer | 4 | Y200001- |
| 4 | | 20Y-43-41631 | Sheet | 1 | Y200001- |
| 5 | | 22U-43-23251 | Sheet | 1 | Y200001- |
| 6 | | 22U-43-23290 | Clip | 2 | Y200001- |
| 7 | | 20Y-43-41323 | Cover | 1 | Y200001- |
| 8 | | 20Y-43-41661 | Sheet | 1 | Y200001- |
| 9 | | 01010-80616 | Bolt | 4 | Y200001- |
| 10 | | 01643-30623 | Washer | 4 | Y200001- |
| 11 | | 20Y-43-41290 | Collar | 4 | Y200001- |
| 12 | | 20Y-43-41332 | Cover | 1 | Y200001- |
| 13 | | 01245-00616 | Screw, Hexagon Socket Head | 2 | Y200001- |
| 14 | | 01643-70623 | Washer | 2 | Y200001- |
| 15 | | 01010-80616 | Bolt | 1 | Y200001- |
| 16 | | 01643-30623 | Washer | 1 | Y200001- |
| 17 | | 01435-00612 | Bolt | 2 | Y200001- |
| 18 | | 20Y-43-41290 | Collar | 5 | Y200001- |
| 19 | | 20Y-43-41353 | Cover | 1 | Y200001- |
| 20 | | 01245-00616 | Screw, Hexagon Socket Head | 2 | Y200001- |
| 21 | | 01643-70623 | Washer | 2 | Y200001- |
| 22 | | 20Y-43-41290 | Collar | 2 | Y200001- |
| 23 | | 01245-00616 | Screw, Hexagon Socket Head | 3 | Y200001- |
| 24 | | 01643-70623 | Washer | 3 | Y200001- |
| 25 | | 09415-02512 | Cap | 1 | Y200001- |
| 26 | | 08086-20000 | Switch, Starting | 1 | Y200001- |
| 27 | | 20Y-43-41740 | Plate | 1 | Y200001- |
| 28 | | 20Y-43-41750 | Washer | 3 | Y200001- |
| 29 | | 20Y-43-41790 | Washer | 1 | Y200001- |
| 30 | | 20Y-43-41671 | Sheet | 1 | Y200001- |
| 31 | | 08034-20519 | Band | 2 | Y200001- |
| 32 | | 22U-06-22380 | Potentiometer | 1 | Y200001- |
| 33 | | 22U-06-22460 | Spring | 1 | Y200001- |
| 34 | | 20Y-43-41780 | Knob | 1 | Y200001- |
| 35 | | 20Y-06-42110 | Switch | 1 | Y200001- |
| 36 | | 20Y-06-42121 | Switch, Light | 1 | Y200001- |
| 37 | | 20Y-06-42190 | Cover | 2 | Y200001- |
| 38 | | 20Y-06-41130 | Wiring Harness | 1 | Y200001- |
| 39 | | 08034-20414 | Band | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130043 Cab, Floor, Console, RHS

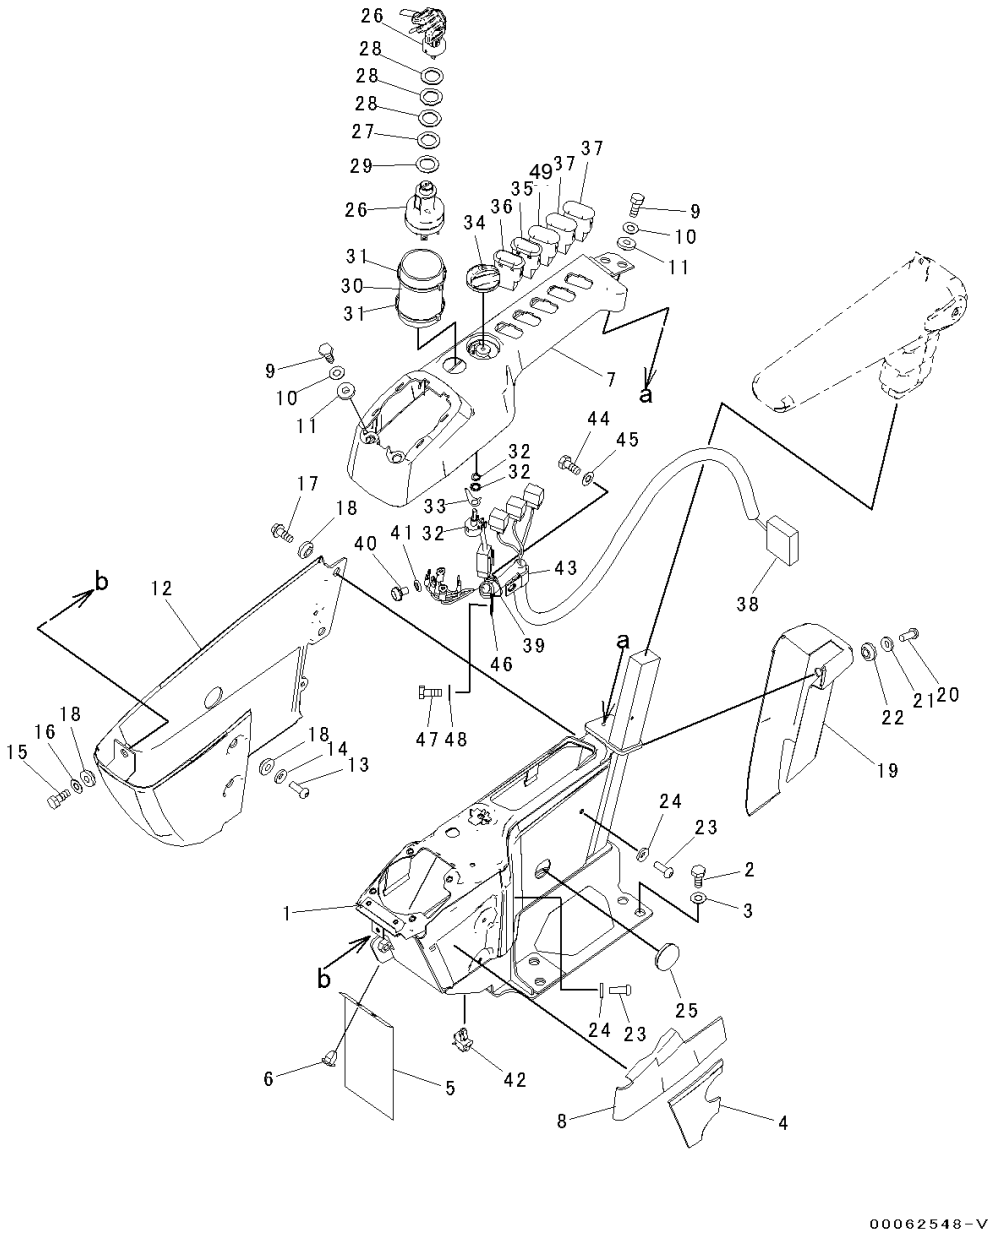


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 01023-10508 | Screw | 5 | Y200001- |
| 41 | | 01601-20513 | Washer | 5 | Y200001- |
| 42 | | 22U-43-23260 | Clip | 1 | Y200001- |
| 43 | | 04434-51710 | Clip | 1 | Y200001- |
| 44 | | 01010-81016 | Bolt | 1 | Y200001- |
| 45 | | 01643-31032 | Washer | 1 | Y200001- |
| 46 | | 04434-51410 | Clip | 1 | Y200001- |
| 47 | | 01010-81016 | Bolt | 1 | Y200001- |
| 48 | | 01643-31032 | Washer | 1 | Y200001- |
| 49 | | 20Y-06-42130 | Switch, Beacon | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130044 Cab, Floor, Arm Rest, RHS

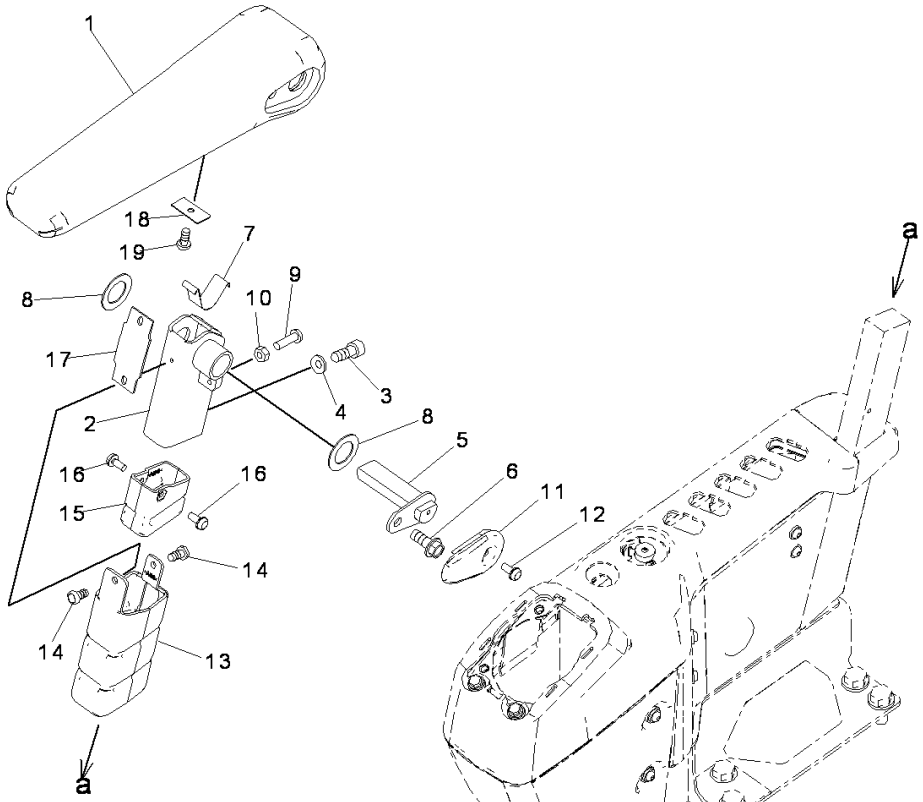


00048930

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-43-41343 | Arm Rest,RHS . | 1 | Y200001- |
| 2 | | 20Y-43-41533 | Bracket,RHS . | 1 | Y200001- |
| 3 | | 01252-80820 | Bolt. | 2 | Y200001- |
| 4 | | 01643-70823 | Washer . | 2 | Y200001- |
| 5 | | 20Y-43-41850 | Pin. | 1 | Y200001- |
| 6 | | 01435-40816 | Bolt. | 1 | Y200001- |
| 7 | | 20Y-43-41152 | Spring . | 1 | Y200001- |
| 8 | | 437-40-26240 | Washer . | 2 | Y200001- |
| 9 | | 01245-00620 | Screw. | 1 | Y200001- |
| 10 | | 01580-40605 | Nut . | 1 | Y200001- |
| 11 | | 20Y-43-41181 | Cap . | 1 | Y200001- |
| 12 | | 01023-20512 | Screw. | 1 | Y200001- |
| 13 | | 20Y-43-41191 | Cover . | 1 | Y200001- |
| 14 | | 01370-40510 | Screw. | 2 | Y200001- |
| 15 | | 20Y-43-41591 | Cover . | 1 | Y200001- |
| 16 | | 01023-20512 | Screw. | 2 | Y200001- |
| 17 | | 20Y-43-41281 | Rubber . | 1 | Y200001- |
| 18 | | 20Y-43-41461 | Plate. | 1 | Y200001- |
| 19 | | 01370-40610 | Screw. | 1 | Y200001- |


# FIG. K1110-130045 Cab, Floor, Air Conditioner

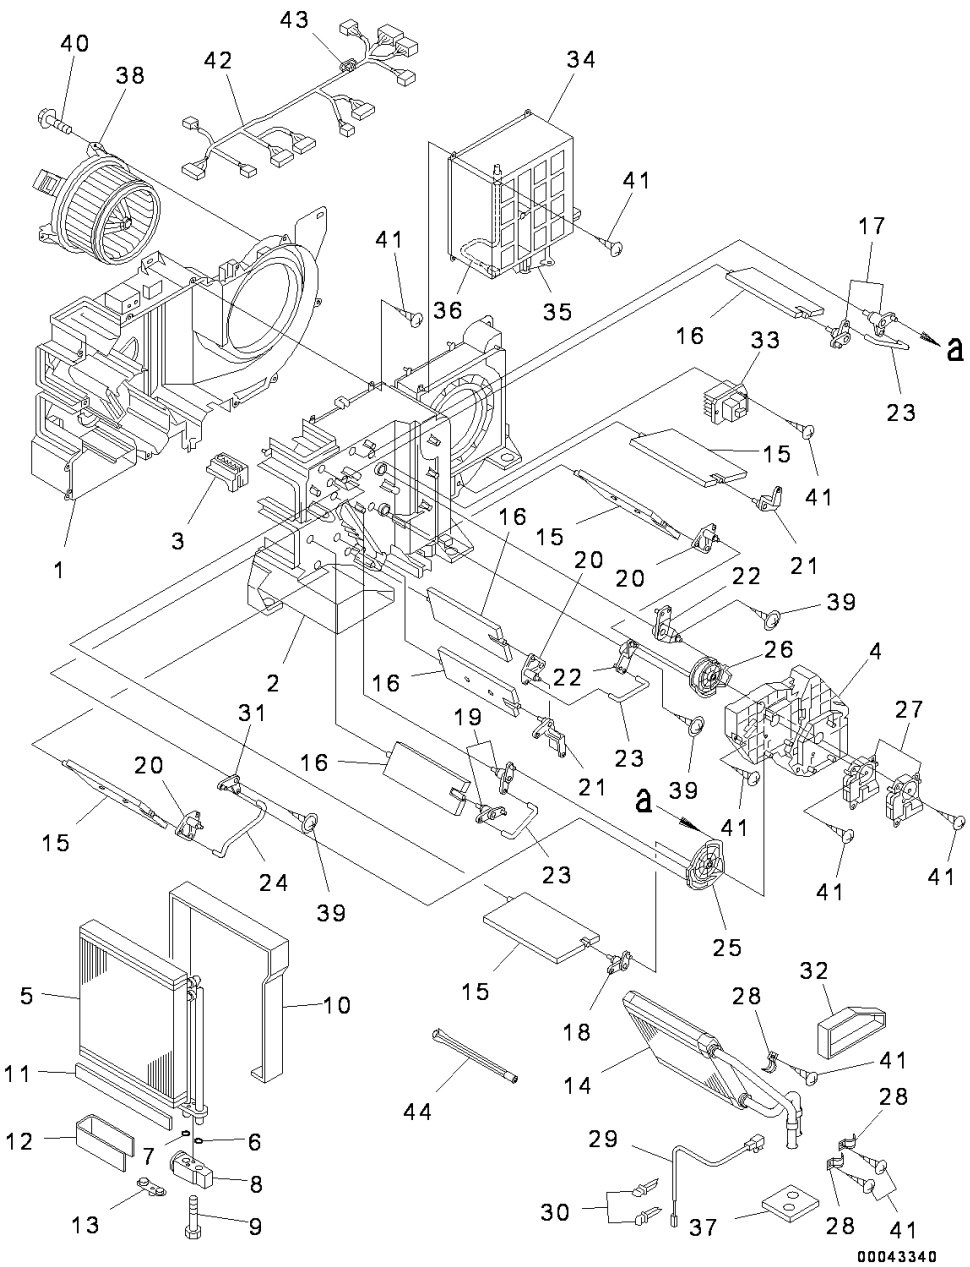


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-810-1211 | Air Conditioner Assembly. | 1 | Y200001- |
| 1 | | ND245450-5831 | • Case, Cooling. | 1 | Y200001- |
| 2 | | ND245450-5840 | • Case, Cooling. | 1 | Y200001- |
| 3 | | ND116576-3810 | • Plate | 1 | Y200001- |
| 4 | | ND116576-3820 | • Plate | 1 | Y200001- |
| | | ND446010-3132 | • Evaporator. | 1 | Y200001- |
| 5 | | ND446600-0991 | •• Evaporator Assembly. | 1 | Y200001- |
| 6 | | ND949142-0020 | •• O-ring. | 1 | Y200001- |
| 7 | | ND949142-0030 | •• O-ring. | 1 | Y200001- |
| 8 | | ND447500-2750 | •• Valve. | 1 | Y200001- |
| 9 | | ND949046-3100 | •• Bolt. | 2 | Y200001- |
| 10 | | ND146657-8841 | •• Packing. | 1 | Y200001- |
| 11 | | ND146657-9811 | •• Packing. | 3 | Y200001- |
| 12 | | ND146657-8850 | •• Packing. | 1 | Y200001- |
| 13 | | ND445021-3941 | •• Plug. | 1 | Y200001- |
| 14 | | ND116140-0050 | • Core Subassembly, Heater | 1 | Y200001- |
| 15 | | ND116660-7570 | • Door Assembly | 4 | Y200001- |
| 16 | | ND116650-6850 | • Door Assembly | 4 | Y200001- |
| 17 | | ND116780-2481 | • Lever Subassembly, Link | 2 | Y200001- |
| 18 | | ND116780-2491 | • Lever Subassembly, Link | 1 | Y200001- |
| 19 | | ND116780-2501 | • Lever Subassembly, Link | 2 | Y200001- |
| 20 | | ND116780-2510 | • Lever Subassembly, Link | 3 | Y200001- |
| 21 | | ND116781-3000 | • Lever | 2 | Y200001- |
| 22 | | ND116780-3130 | • Lever Subassembly, Link | 2 | Y200001- |
| 23 | | ND116662-7670 | • Shaft | 3 | Y200001- |
| 24 | | ND116662-7681 | • Shaft | 1 | Y200001- |
| 25 | | ND116576-3852 | • Plate | 1 | Y200001- |
| 26 | | ND116576-3862 | • Plate | 1 | Y200001- |
| 27 | | ND063800-0300 | • Servo Motor Assembly | 2 | Y200001- |
| 28 | | ND017231-0700 | • Clamp | 3 | Y200001- |
| 29 | | ND077500-5890 | • Thermistor Assembly. | 1 | Y200001- |
| 30 | | ND246790-2060 | • Clamp | 2 | Y200001- |
| 31 | | ND116780-3920 | • Lever Subassembly, Link | 1 | Y200001- |
| 32 | | ND146667-0440 | • Packing. | 1 | Y200001- |
| 33 | | ND077800-0750 | • Transistor | 1 | Y200001- |
| 34 | | ND146340-0560 | • Box Assembly. | 1 | Y200001- |
| 35 | | ND063600-4580 | •• Servo Motor Assembly. | 1 | Y200001- |
| 36 | | ND077500-5650 | •• Thermistor Assembly | 1 | Y200001- |
| 37 | | ND146657-8860 | • Packing. | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130045 Cab, Floor, Air Conditioner

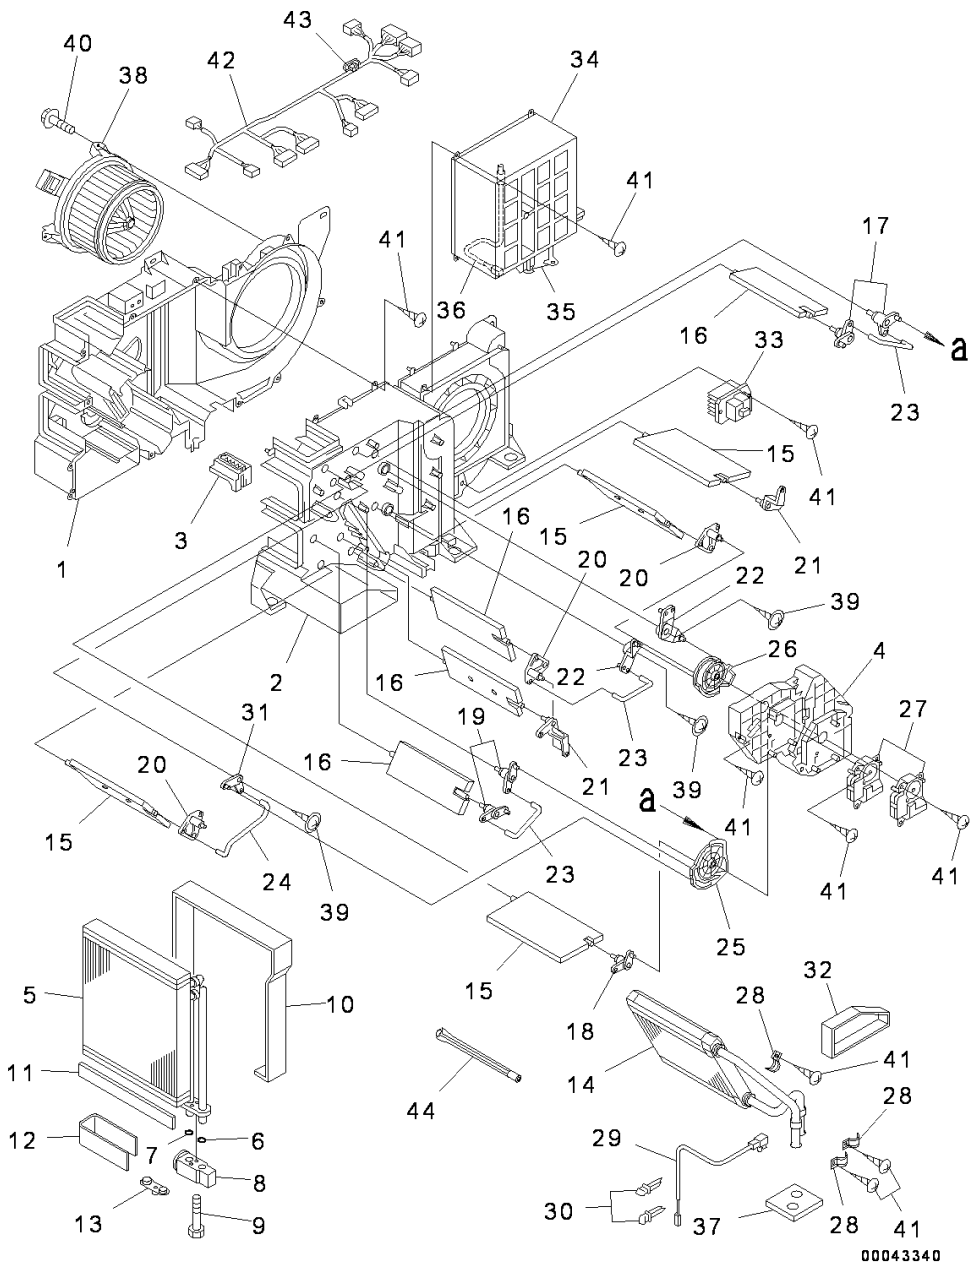


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | ND116340-7350 | • Motor Assembly, Fan | 1 | Y200001- |
| 39 | | ND949008-0460 | • Screw, Tapping | 3 | Y200001- |
| 40 | | ND949008-0330 | • Screw, Tapping | 3 | Y200001- |
| 41 | | ND949001-1730 | • Screw, Tapping | 32 | Y200001- |
| 42 | | ND246470-4311 | • Wire Harness Assembly | 1 | Y200001- |
| 43 | | ND93950-05003 | •• Fuse | 1 | Y200001- |
| 44 | | ND116662-8320 | • Shaft | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130046 Cab, Floor, Air Conditioner Unit

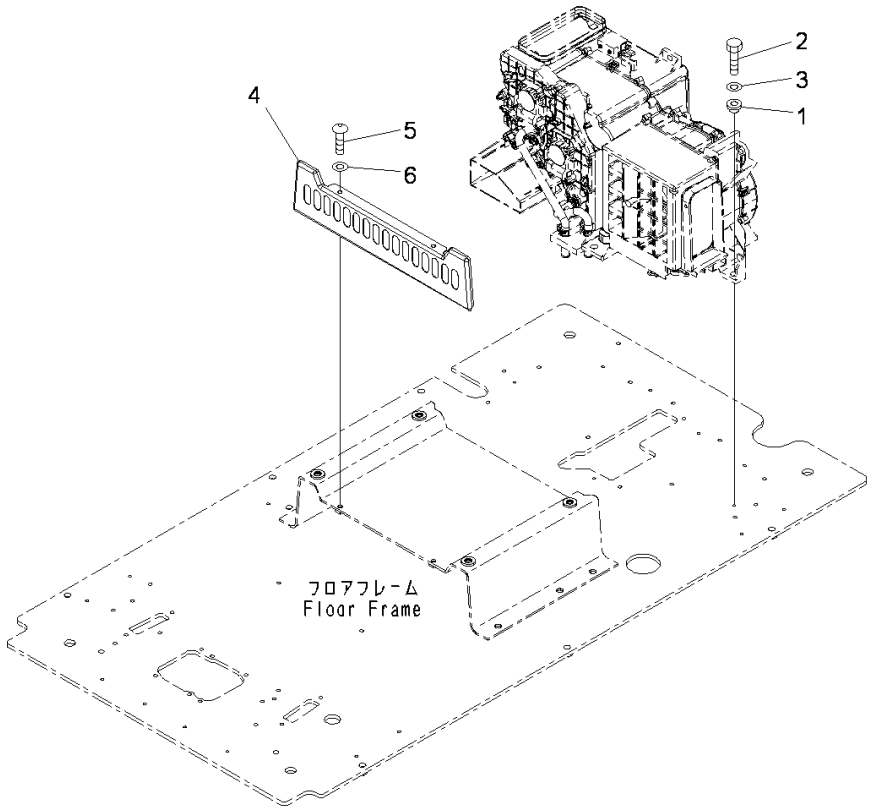


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 208-979-7540 | Collar | 7 | Y200001- |
| 2 | | 01010-80825 | Bolt | 7 | Y200001- |
| 3 | | 01643-30823 | Washer | 7 | Y200001- |
| 4 | | 20Y-43-41240 | Cover | 1 | Y200001- |
| 5 | | 01245-00820 | Screw | 2 | Y200001- |
| 6 | | 01643-70823 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130047 Cab, Floor, Air Conditioner Hose

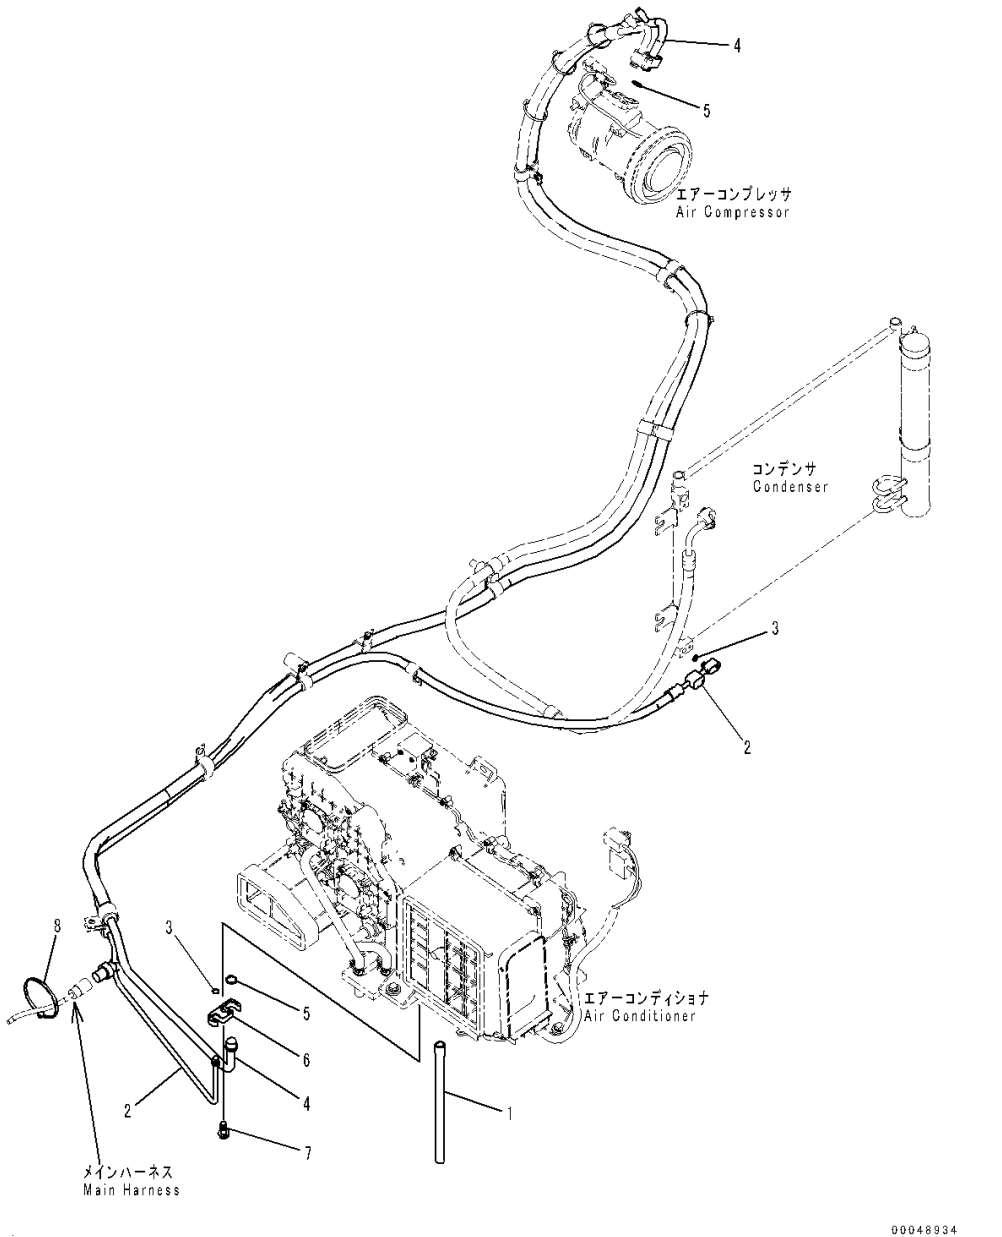


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 208-979-7640 | Hose, L=300mm | 1 | Y200001- |
| 2 | | 20Y-810-1311 | Hose | 1 | Y200001- |
| 3 | | 20Y-979-3150 | • O-ring | 2 | Y200001- |
| 4 | | 20Y-810-1321 | Hose | 1 | Y200001- |
| 5 | | 20Y-979-3130 | • O-ring | 2 | Y200001- |
| 6 | | 208-979-7650 | Connector | 1 | Y200001- |
| 7 | | 01435-40620 | Bolt | 1 | Y200001- |
| 8 | | 08034-20536 | Band | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130048 Cab, Floor, Heater Hose

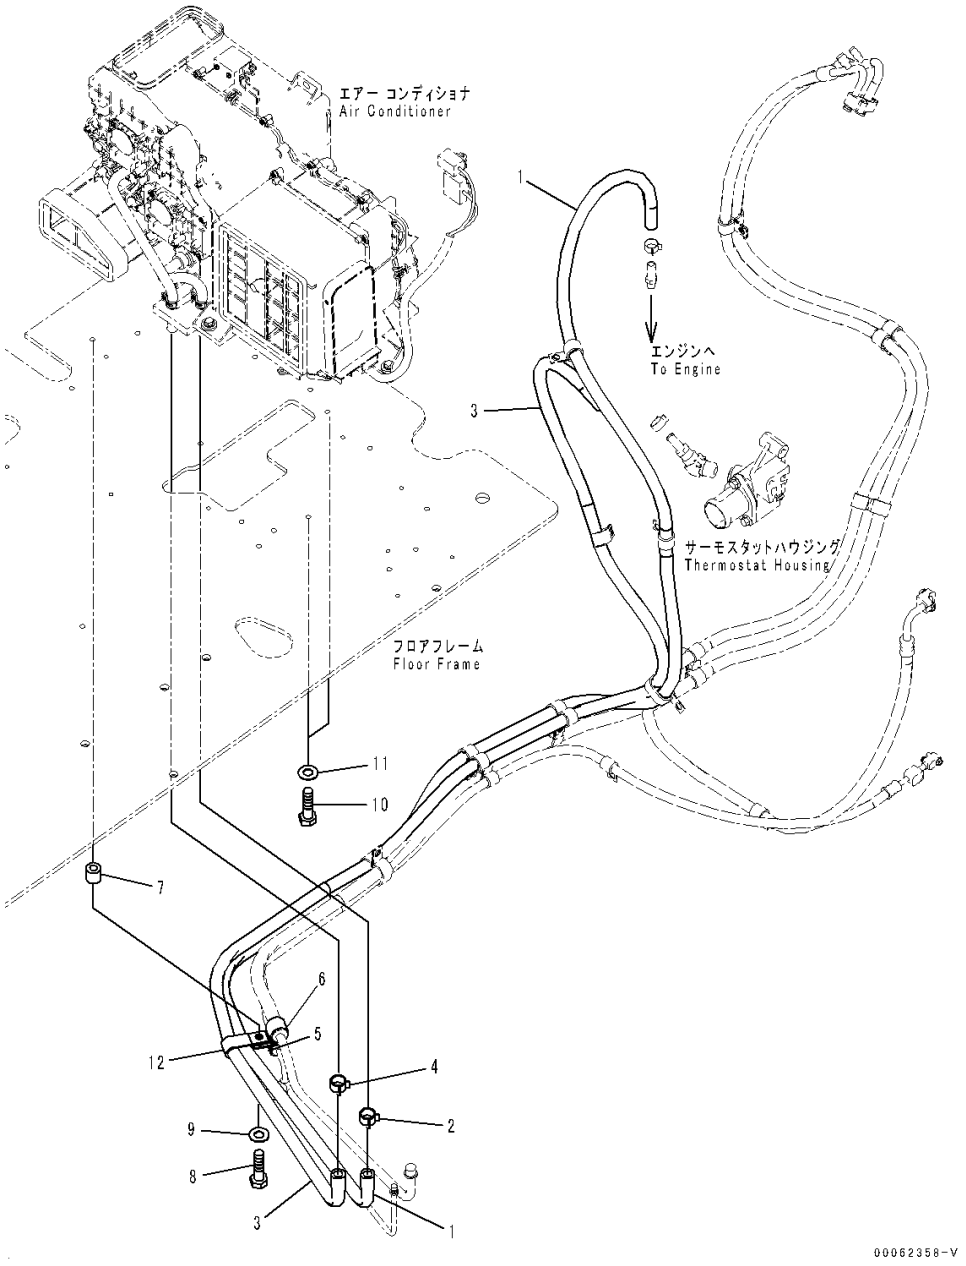


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-810-1332 | Hose Assembly | 1 | Y200001- |
| 2 | | 09479-02400 | Clamp | 1 | Y200001- |
| 3 | | 20Y-810-1342 | Hose Assembly | 1 | Y200001- |
| 4 | | 09479-02400 | Clamp | 1 | Y200001- |
| 5 | | 04434-52110 | Clip | 1 | Y200001- |
| 6 | | 04434-52511 | Clip | 1 | Y200001- |
| 7 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 8 | | 01010-81045 | Bolt | 1 | Y200001- |
| 9 | | 01643-31032 | Washer | 1 | Y200001- |
| 10 | | 01010-81016 | Bolt | 2 | Y200001- |
| 11 | | 01643-31032 | Washer | 2 | Y200001- |
| 12 | | 141-06-11220 | Clip | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130049 Cab, Floor, P.P.C. Piping For Travel Valve

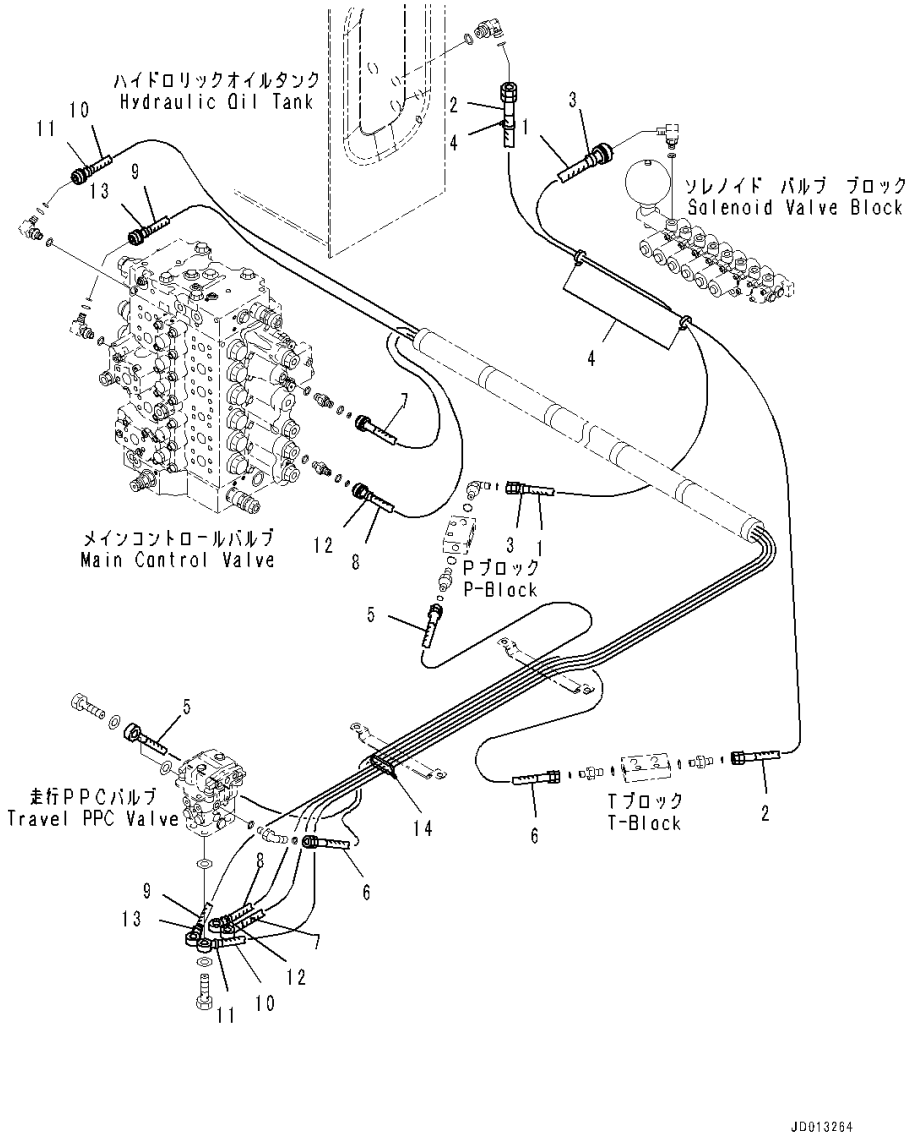


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-52210 | Hose | 1 | Y200001- |
| 2 | | 20Y-62-52220 | Hose | 1 | Y200001- |
| 3 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 4 | | 08034-20823 | Band | 3 | Y200001- |
| 5 | | 208-62-72290 | Hose | 1 | Y200001- |
| 6 | | 208-62-72310 | Hose, L=950mm | 1 | Y200001- |
| 7 | | 20Y-62-52230 | Hose | 1 | Y200001- |
| 8 | | 20Y-62-52240 | Hose | 1 | Y200001- |
| 9 | | 20Y-62-52250 | Hose | 1 | Y200001- |
| 10 | | 20Y-62-52260 | Hose | 1 | Y200001- |
| 11 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 12 | | 20Y-62-22820 | Band, Blue | 2 | Y200001- |
| 13 | | 20Y-62-22850 | Band, Green | 2 | Y200001- |
| 14 | | 08034-20536 | Band | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130050 Cab, Floor, P.P.C. Piping For Pilot Valve

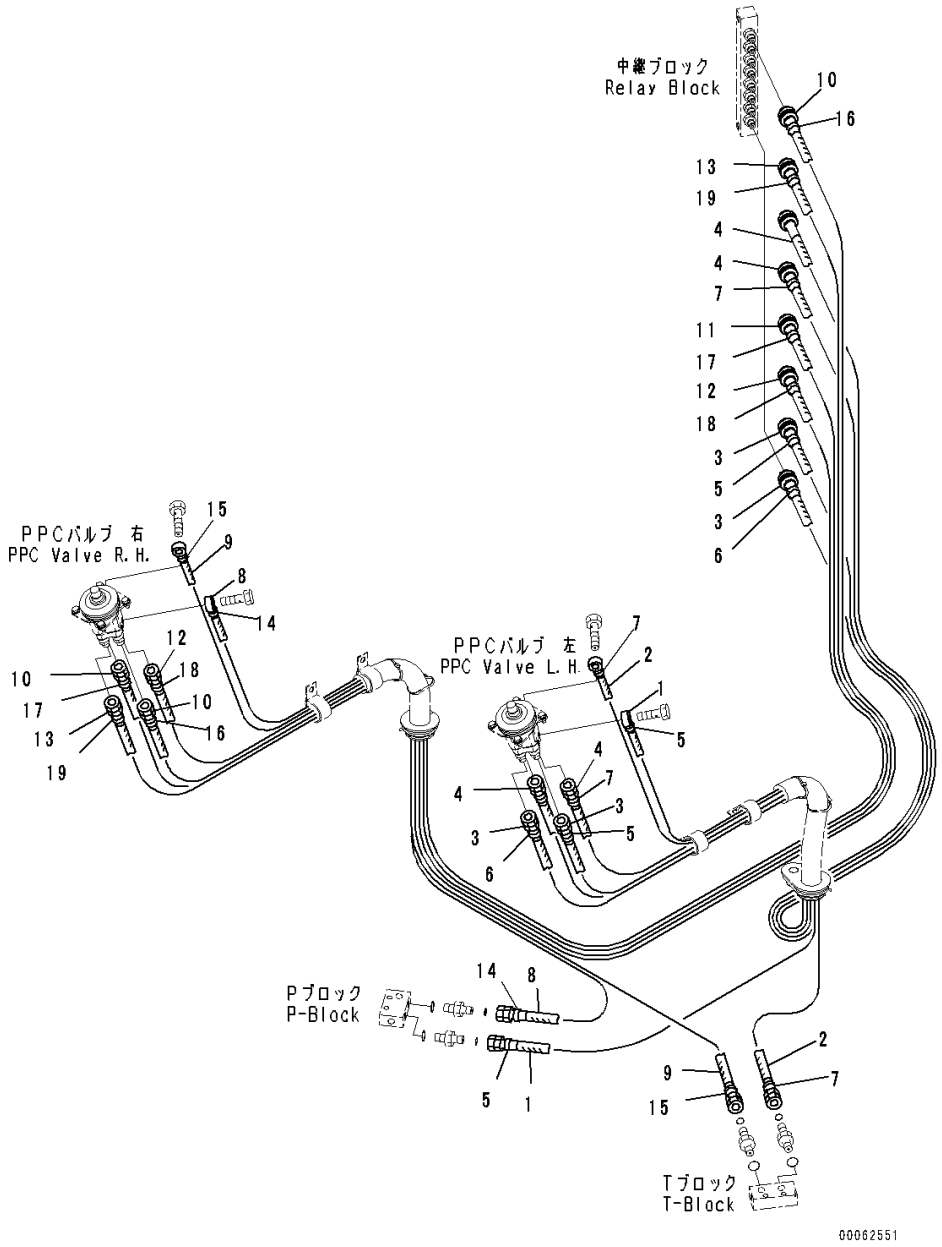


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-53410 | Hose | 1 | Y200001- |
| 2 | | 20Y-62-53420 | Hose | 1 | Y200001- |
| 3 | | 20Y-62-42271 | Hose | 2 | Y200001- |
| 4 | | 20Y-62-52280 | Hose | 2 | Y200001- |
| 5 | | 20Y-62-22790 | Band, Red | 4 | Y200001- |
| 6 | | 20Y-62-22810 | Band, Yellow | 2 | Y200001- |
| 7 | | 20Y-62-22820 | Band, Blue | 4 | Y200001- |
| 8 | | 20Y-62-42251 | Hose | 1 | Y200001- |
| 9 | | 208-62-72870 | Hose | 1 | Y200001- |
| 10 | | 209-64-16690 | Hose | 1 | Y200001- |
| 11 | | 209-64-16830 | Hose | 1 | Y200001- |
| 12 | | 20Y-62-52290 | Hose | 1 | Y200001- |
| 13 | | 20Y-62-52310 | Hose | 1 | Y200001- |
| 14 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 15 | | 20Y-62-22820 | Band, Blue | 2 | Y200001- |
| 16 | | 20Y-62-22830 | Band, White | 2 | Y200001- |
| 17 | | 20Y-62-22840 | Band, Black | 2 | Y200001- |
| 18 | | 20Y-62-22850 | Band, Green | 2 | Y200001- |
| 19 | | 20Y-62-22860 | Band, Brown | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130051 Cab, Floor, PPC Piping Clamp

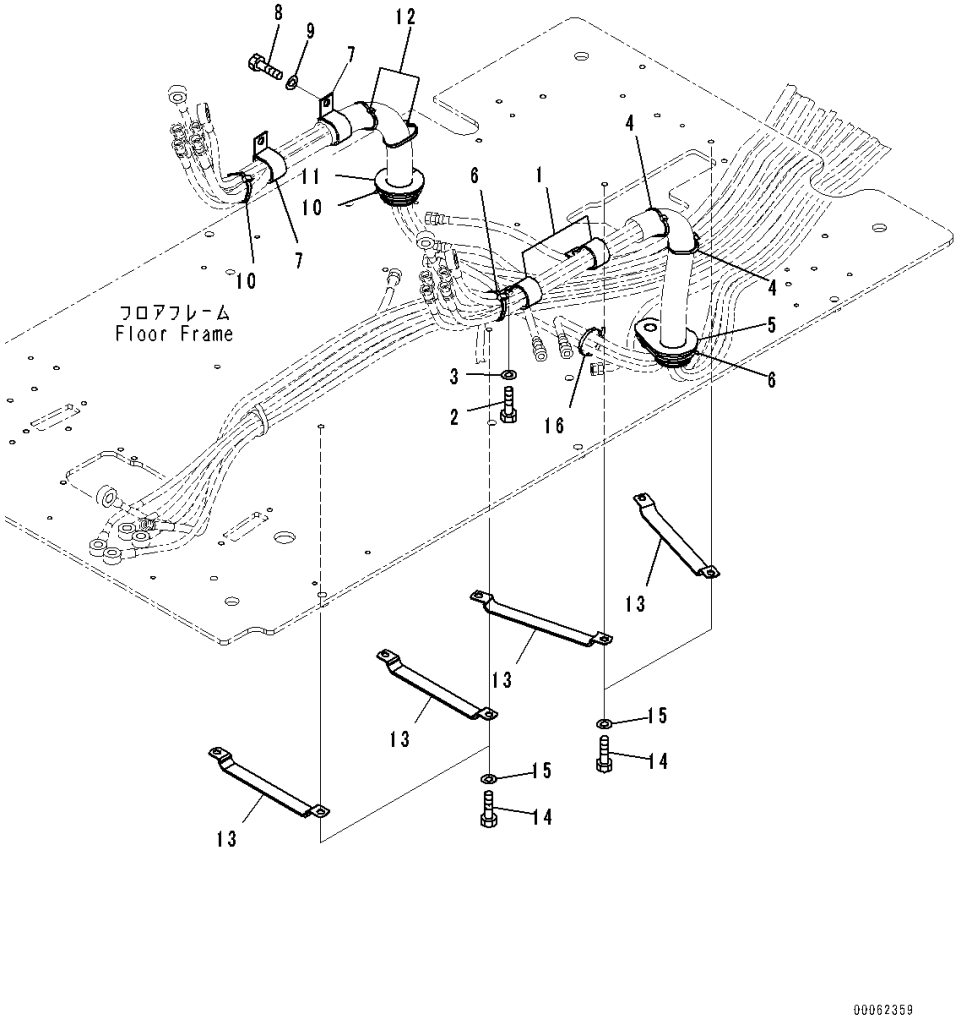


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 04434-53211 | Clip | 2 | Y200001- |
| 2 | | 01010-81020 | Bolt | 2 | Y200001- |
| 3 | | 01643-31032 | Washer | 2 | Y200001- |
| 4 | | 08034-20536 | Band | 2 | Y200001- |
| 5 | | 20Y-53-14140 | Grommet | 1 | Y200001- |
| 6 | | 08034-20536 | Band | 2 | Y200001- |
| 7 | | 04434-53411 | Clip | 2 | Y200001- |
| 8 | | 01010-81020 | Bolt | 2 | Y200001- |
| 9 | | 01643-31032 | Washer | 2 | Y200001- |
| 10 | | 08034-20536 | Band | 2 | Y200001- |
| 11 | | 20Y-54-65121 | Grommet | 1 | Y200001- |
| 12 | | 08034-20536 | Band | 2 | Y200001- |
| 13 | | 20Y-62-27770 | Clamp | 4 | Y200001- |
| 14 | | 01010-81016 | Bolt | 8 | Y200001- |
| 15 | | 01643-31032 | Washer | 8 | Y200001- |
| 16 | | 08034-20536 | Band | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-130052 Cab, Floor, P, T Block And Seal

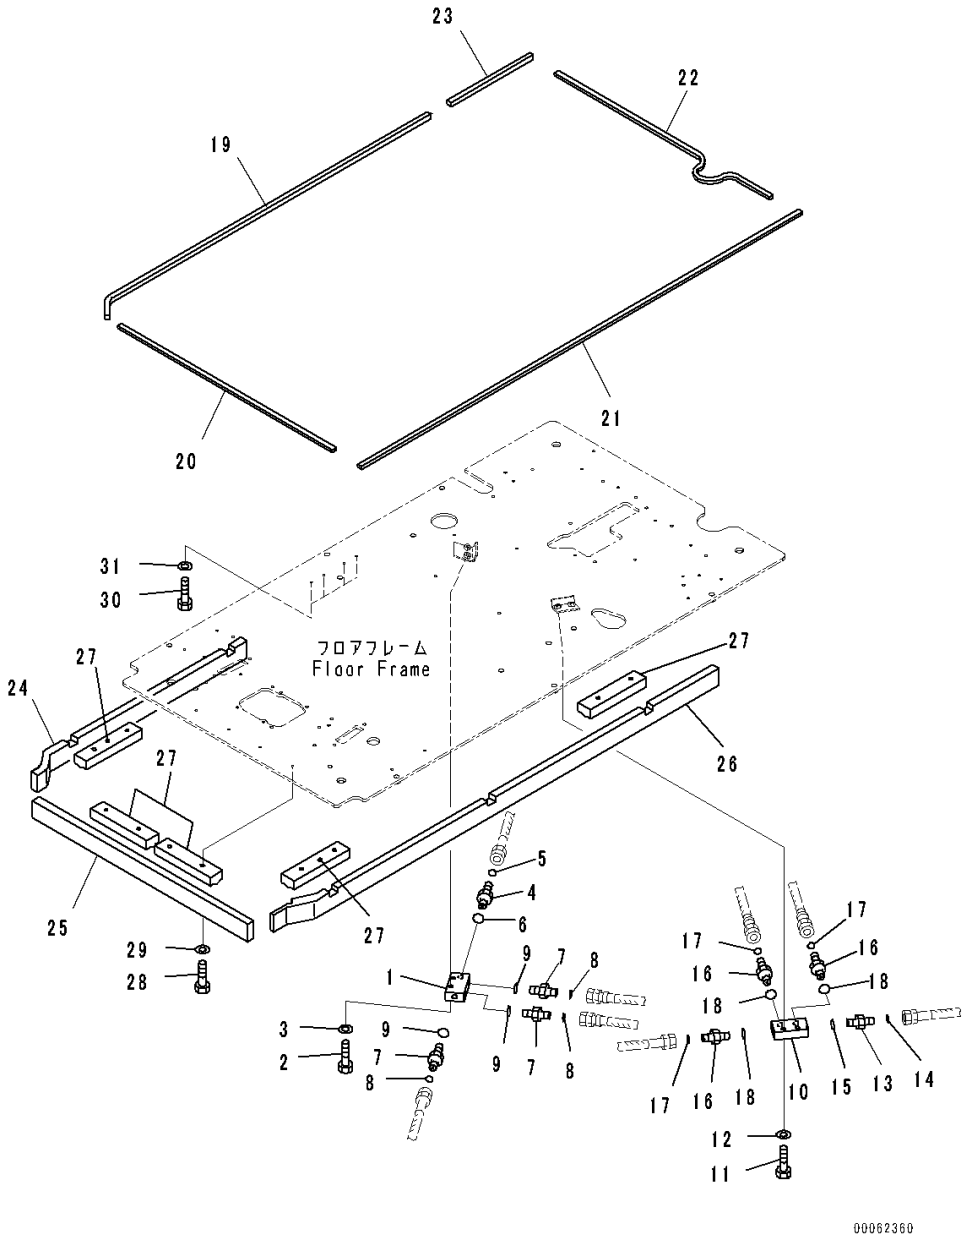


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-15831 | Block | 1 | Y200001- |
| 2 | | 01010-81045 | Bolt | 2 | Y200001- |
| 3 | | 01643-31032 | Washer | 2 | Y200001- |
| 4 | | 02781-0031D | Union | 1 | Y200001- |
| 5 | | 02896-11009 | O-ring | 1 | Y200001- |
| 6 | | 07002-11423 | O-ring | 1 | Y200001- |
| 7 | | 02781-0021D | Union | 3 | Y200001- |
| 8 | | 02896-11008 | O-ring | 3 | Y200001- |
| 9 | | 07002-11423 | O-ring | 3 | Y200001- |
| 10 | | 20Y-62-15831 | Block | 1 | Y200001- |
| 11 | | 01010-81045 | Bolt | 2 | Y200001- |
| 12 | | 01643-31032 | Washer | 2 | Y200001- |
| 13 | | 02781-0031D | Union | 1 | Y200001- |
| 14 | | 02896-11009 | O-ring | 1 | Y200001- |
| 15 | | 07002-11423 | O-ring | 1 | Y200001- |
| 16 | | 02781-0021D | Union | 3 | Y200001- |
| 17 | | 02896-11008 | O-ring | 3 | 350001- |
| 18 | | 07002-11423 | O-ring | 3 | 350001- |
| 19 | | 20Y-53-14910 | Seal | 1 | 350001- |
| 20 | | 20Y-53-14920 | Seal | 1 | 350001- |
| 21 | | 20Y-53-14930 | Seal | 1 | 350001- |
| 22 | | 20Y-53-14940 | Seal | 1 | 350001- |
| 23 | | 20Y-53-14950 | Seal | 1 | 350001- |
| 24 | | 20Y-53-14963 | Sheet | 1 | 350001- |
| 25 | | 20Y-53-14973 | Sheet | 1 | 350001- |
| 26 | | 20Y-53-14983 | Sheet | 1 | 350001- |
| 27 | | 20Y-53-14831 | Sheet | 5 | 350001- |
| 28 | | 01010-80830 | Bolt | 10 | 350001- |
| 29 | | 01643-30823 | Washer | 10 | 350001- |
| 30 | | 01010-80816 | Bolt | 4 | 350001- |
| 31 | | 01643-30823 | Washer | 4 | 350001- |

https://truckmanualshub.com/


# FIG. K1110-130053 Cab, Floor, Rear Camera Cable

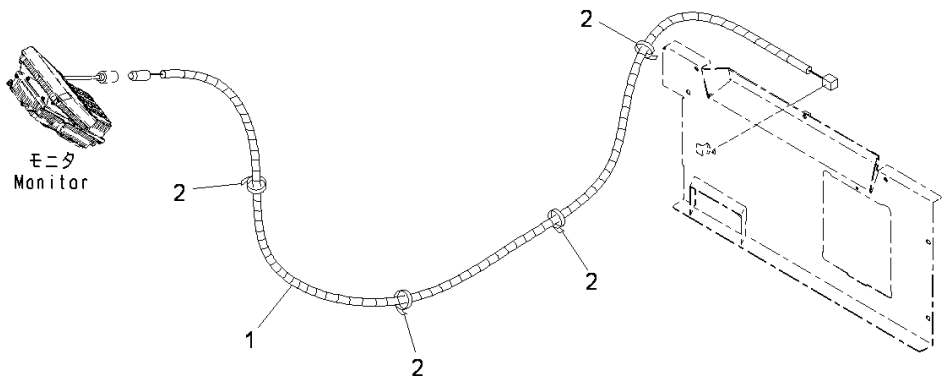


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-06-42320 | Cable | 1 | Y200001- |
| 2 | | 08034-20519 | Band | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-131029 Cab, Floor, P.P.C. Valve, For 1-Attachment

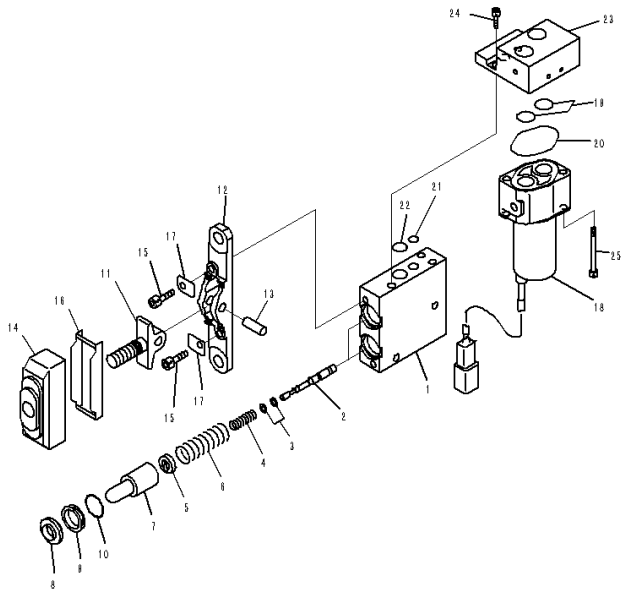


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 702-16-04290 | Valve, Pilot | 1 | Y200001- |
| 1 | C1 | | • Valve Body | 1 | Y200001- |
| 2 | C1 | | • Valve | 2 | Y200001- |
| 3 | | 702-16-51140 | • Shim, T=0.30mm | 2 | Y200001- |
| 4 | | 702-16-54550 | • Spring | 2 | Y200001- |
| 5 | | 702-16-54571 | • Retainer | 2 | Y200001- |
| 6 | | 702-16-54560 | • Spring | 2 | Y200001- |
| 7 | | 702-16-53170 | • Piston | 2 | Y200001- |
| 8 | | 702-16-51270 | • Seal | 2 | Y200001- |
| 9 | | 702-16-54580 | • Collar | 2 | Y200001- |
| 10 | | 702-16-54590 | • O-ring | 2 | Y200001- |
| 11 | C1 | | • Lever | 1 | Y200001- |
| 12 | C1 | | • Plate | 1 | Y200001- |
| 13 | C1 | | • Shaft | 1 | Y200001- |
| 14 | | 702-16-54641 | • Boot | 1 | Y200001- |
| 15 | | 01252-30625 | • Bolt | 2 | Y200001- |
| 16 | | 702-16-54660 | • Plate | 1 | Y200001- |
| 17 | | 702-16-54650 | • Plate | 2 | Y200001- |
| | | 702-16-54670 | • Shim, T=0.20mm | 4 | Y200001- |
| 18 | | 702-21-07610 | • Valve, Solenoid | 1 | Y200001- |
| 19 | | 700-22-11410 | • O-ring | 2 | Y200001- |
| 20 | | 702-21-39450 | • O-ring | 1 | Y200001- |
| 21 | | 07000-11008 | • O-ring | 1 | Y200001- |
| 22 | | 07000-12012 | • O-ring | 1 | Y200001- |
| 23 | C1 | | • Body | 1 | Y200001- |
| 24 | | 01252-60612 | • Bolt | 3 | Y200001- |
| 25 | | 203-60-62220 | • Bolt | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-131030 Cab, Floor, 1st. Attachment Control

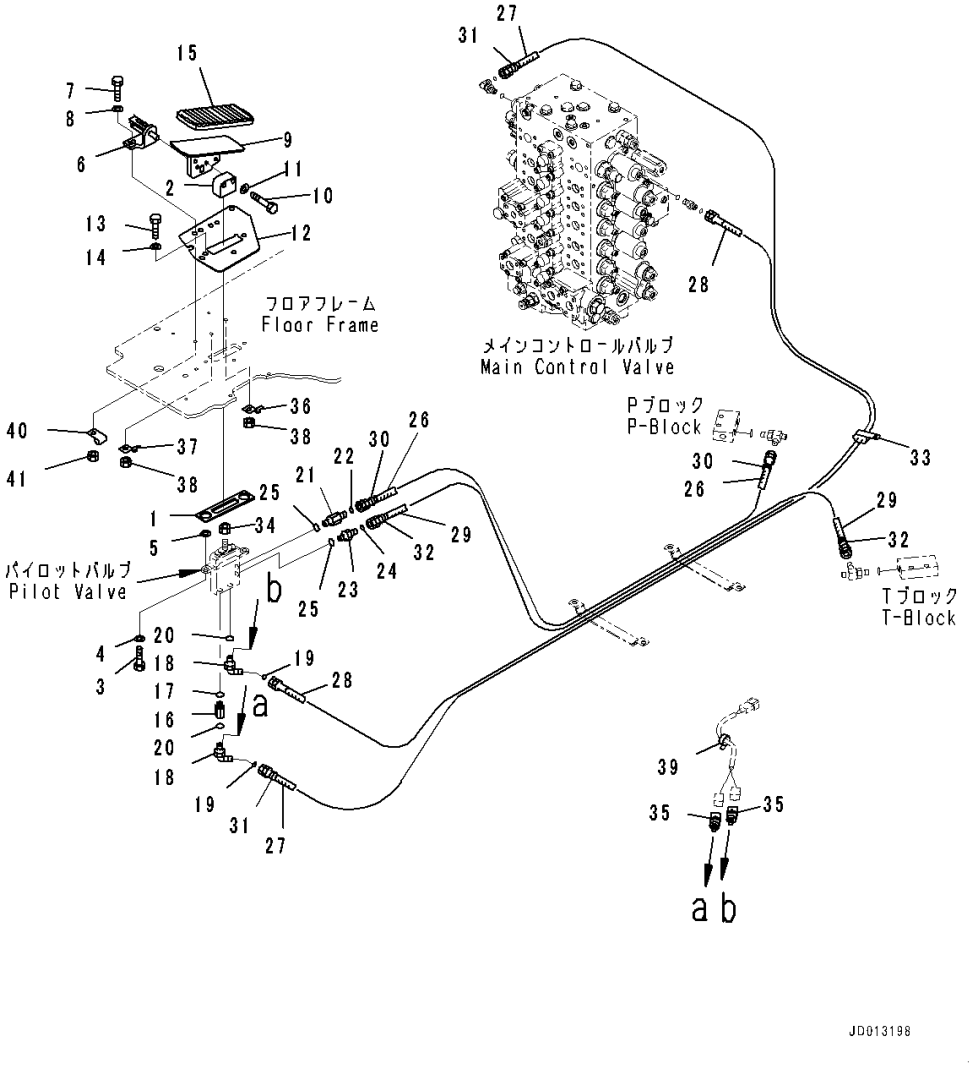


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22U-54-25660 | Seal | 1 | Y200001- |
| 2 | | 20Y-43-41760 | Seat | 1 | Y200001- |
| 3 | | 01010-81025 | Bolt | 2 | Y200001- |
| 4 | | 01643-31032 | Washer | 2 | Y200001- |
| 5 | | 01643-31032 | Washer | 2 | Y200001- |
| 6 | | 20Y-62-25360 | Bracket | 1 | Y200001- |
| 7 | | 01010-D1035 | Bolt | 2 | Y200001- |
| 8 | | 01643-71032 | Washer | 2 | Y200001- |
| 9 | | 20Y-53-14220 | Pedal | 1 | Y200001- |
| 10 | | 01010-D1045 | Bolt | 2 | Y200001- |
| 11 | | 01643-71032 | Washer | 2 | Y200001- |
| 12 | | 22U-54-25541 | Plate | 1 | Y200001- |
| 13 | | 01010-81025 | Bolt | 3 | Y200001- |
| 14 | | 01643-31032 | Washer | 3 | Y200001- |
| 15 | | 207-43-81240 | Cap | 1 | Y200001- |
| 16 | | 20T-910-8660 | Nipple | 1 | Y200001- |
| 17 | | 07000-12011 | O-ring | 1 | Y200001- |
| 18 | | 20Y-62-52160 | Elbow | 2 | Y200001- |
| 19 | | 02896-11008 | O-ring | 2 | Y200001- |
| 20 | | 07000-12011 | O-ring | 2 | Y200001- |
| 21 | | 20Y-62-43470 | Nipple | 1 | Y200001- |
| 22 | | 02896-11008 | O-ring | 1 | Y200001- |
| 23 | | 11Y-62-12140 | Nipple | 1 | Y200001- |
| 24 | | 02896-11008 | O-ring | 1 | Y200001- |
| 25 | | 07000-12011 | O-ring | 2 | Y200001- |
| 26 | | 20Y-62-52330 | Hose | 1 | Y200001- |
| 27 | | 20Y-62-52340 | Hose | 1 | Y200001- |
| 28 | | 20Y-62-52350 | Hose | 1 | Y200001- |
| 29 | | 208-62-72480 | Hose | 1 | Y200001- |
| 30 | | 20Y-62-22790 | Band, Red | 2 | Y200001- |
| 31 | | 20Y-62-22810 | Band, Yellow | 2 | Y200001- |
| 32 | | 20Y-62-22820 | Band, Blue | 2 | Y200001- |
| 33 | | 04435-51210 | Clip | 1 | Y200001- |
| 34 | | 01583-11408 | Nut | 1 | Y200001- |
| 35 | | 206-06-61130 | Switch | 2 | Y200001- |
| 36 | | 08193-21012 | Clip | 1 | Y200001- |
| 37 | | 08053-01510 | Clip | 1 | Y200001- |
| 38 | | 01580-01008 | Nut | 2 | Y200001- |
| 39 | | 08034-20536 | Band | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-131030 Cab, Floor, 1st. Attachment Control

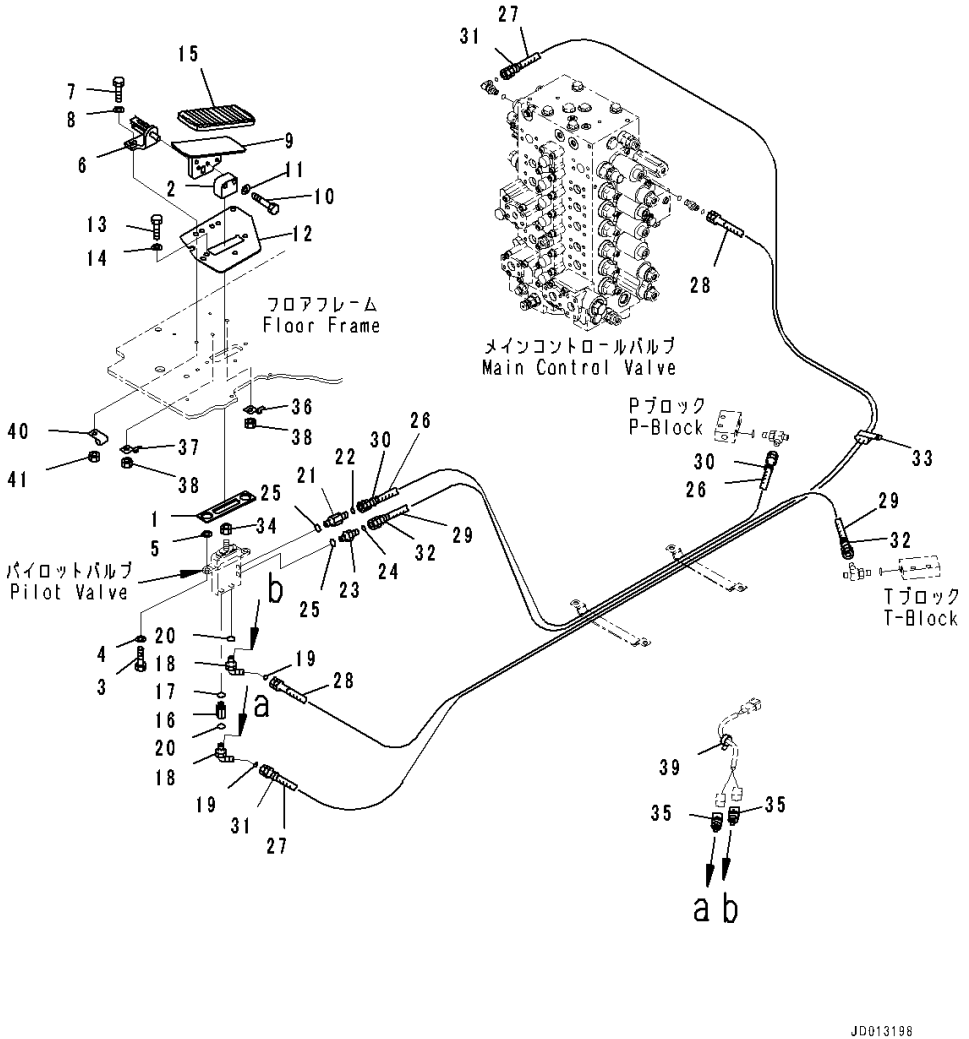


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 04434-50610 | Clip | 1 | Y200001- |
| 41 | | 01580-01008 | Nut | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-131052 Cab, Floor, P, T Block And Seal, For 1-Attachment

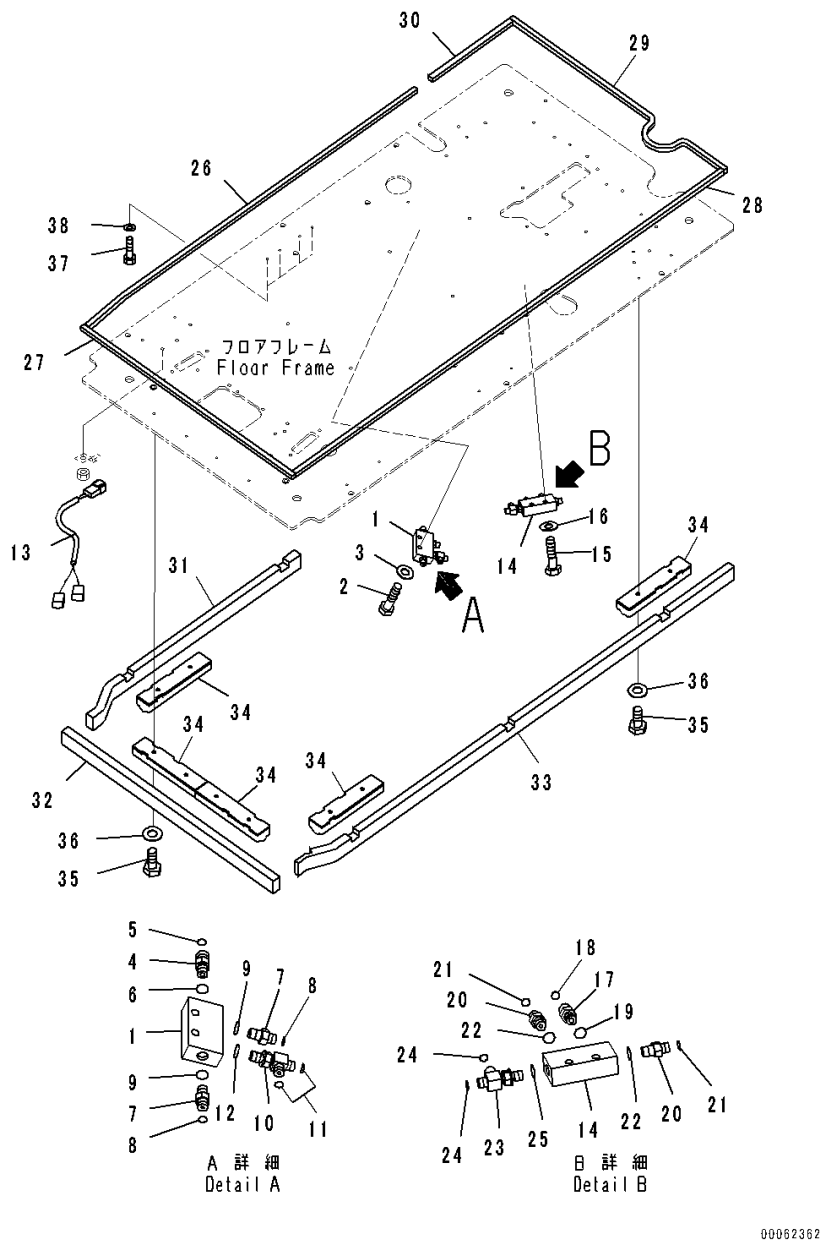


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-15831 | Block | 1 | Y200001- |
| 2 | | 01010-81045 | Bolt | 2 | Y200001- |
| 3 | | 01643-31032 | Washer | 2 | Y200001- |
| 4 | | 02781-0031D | Union | 1 | Y200001- |
| 5 | | 02896-11009 | O-ring | 1 | Y200001- |
| 6 | | 07002-11423 | O-ring | 1 | Y200001- |
| 7 | | 02781-0021D | Union | 2 | Y200001- |
| 8 | | 02896-11008 | O-ring | 2 | Y200001- |
| 9 | | 07002-11423 | O-ring | 2 | Y200001- |
| 10 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 11 | | 02896-11008 | O-ring | 2 | Y200001- |
| 12 | | 07002-11423 | O-ring | 1 | Y200001- |
| 13 | | 20Y-06-41251 | Wiring Harness | 1 | Y200001- |
| 14 | | 20Y-62-15831 | Block | 1 | Y200001- |
| 15 | | 01010-81045 | Bolt | 2 | Y200001- |
| 16 | | 01643-31032 | Washer | 2 | Y200001- |
| 17 | | 02781-0031D | Union | 1 | Y200001- |
| 18 | | 02896-11009 | O-ring | 1 | Y200001- |
| 19 | | 07002-11423 | O-ring | 1 | Y200001- |
| 20 | | 02781-0021D | Union | 2 | Y200001- |
| 21 | | 02896-11008 | O-ring | 2 | Y200001- |
| 22 | | 07002-11423 | O-ring | 2 | Y200001- |
| 23 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 24 | | 02896-11008 | O-ring | 2 | Y200001- |
| 25 | | 07002-11423 | O-ring | 1 | Y200001- |
| 26 | | 20Y-53-14910 | Seal | 1 | Y200001- |
| 27 | | 20Y-53-14920 | Seal | 1 | Y200001- |
| 28 | | 20Y-53-14930 | Seal | 1 | Y200001- |
| 29 | | 20Y-53-14940 | Seal | 1 | Y200001- |
| 30 | | 20Y-53-14950 | Seal | 1 | Y200001- |
| 31 | | 20Y-53-14963 | Sheet | 1 | Y200001- |
| 32 | | 20Y-53-14973 | Sheet | 1 | Y200001- |
| 33 | | 20Y-53-14983 | Sheet | 1 | Y200001- |
| 34 | | 20Y-53-14831 | Sheet | 5 | Y200001- |
| 35 | | 01010-80830 | Bolt | 10 | Y200001- |
| 36 | | 01643-30823 | Washer | 10 | Y200001- |
| 37 | | 01010-80816 | Bolt | 4 | Y200001- |
| 38 | | 01643-30823 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-132031 Cab, Floor, Harness, For Webasto Heater

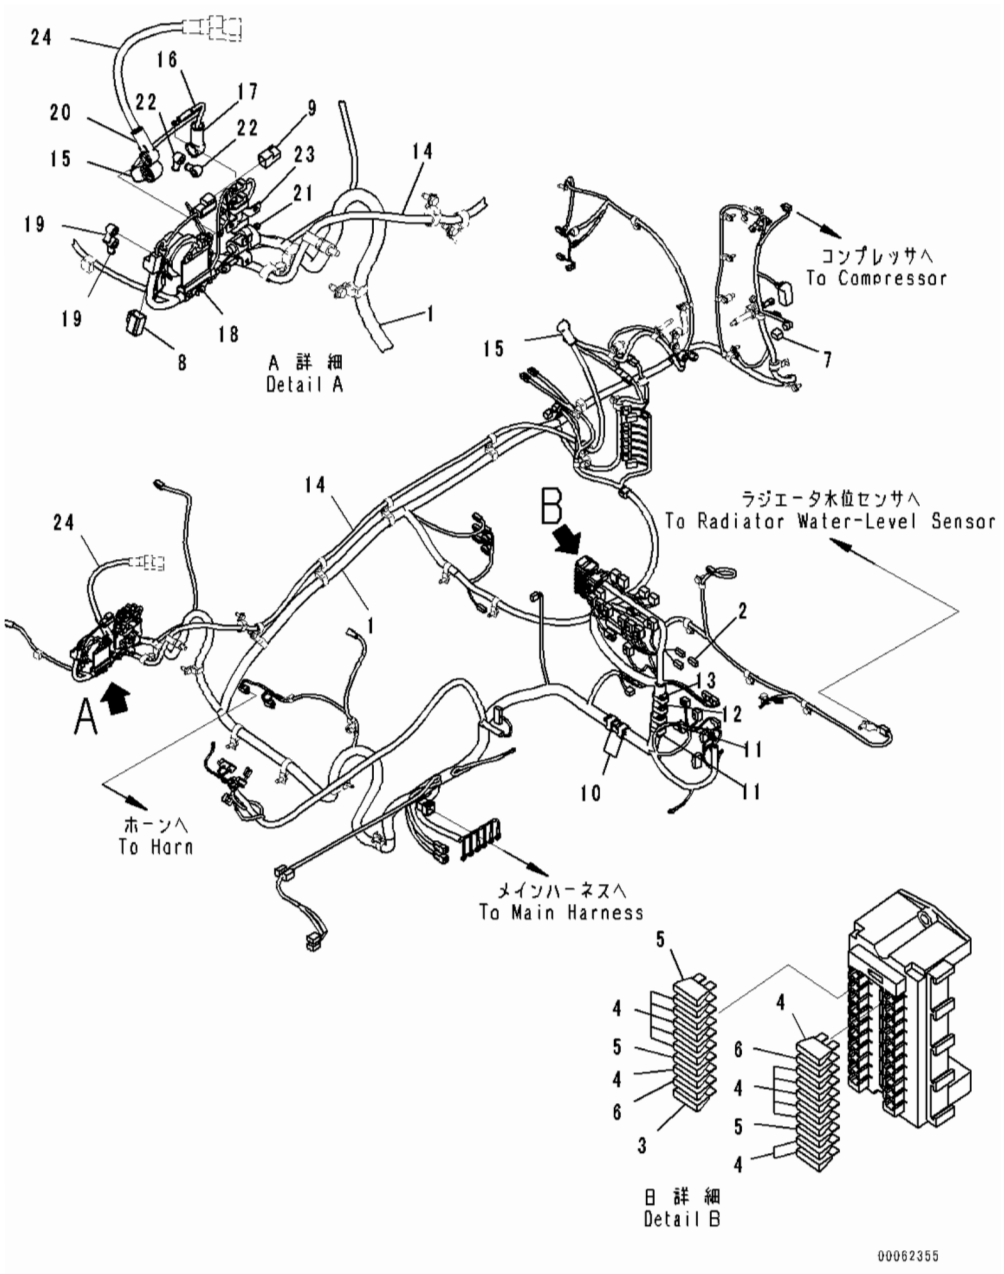


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-977-7371 | Wiring Harness | 1 | Y200001- |
| 2 | | 08020-20000 | • Diode | 2 | Y200001- |
| 3 | | 08041-00500 | • Fuse, 5Amp | 1 | Y200001- |
| 4 | | 08041-01000 | • Fuse, 10Amp | 14 | Y200001- |
| 5 | | 08041-02000 | • Fuse, 20Amp | 3 | Y200001- |
| 6 | | 08041-03000 | • Fuse, 30Amp | 2 | Y200001- |
| 7 | | 19M-06-31720 | • Resistor | 1 | Y200001- |
| 8 | | 20Y-06-31660 | • Fusible Link, 30Amp | 1 | Y200001- |
| 9 | | 22U-06-11270 | • Fusible Link, 65Amp. | 1 | Y200001- |
| 10 | | HM6400-0012 | • F-Connector, Black | 2 | Y200001- |
| | | HM6409-0071 | • M-Connector, Black | 2 | Y200001- |
| 11 | | HM6400-0013 | • F-Connector, Green | 2 | Y200001- |
| | | HM6409-0072 | • M-Connector, Green | 2 | Y200001- |
| 12 | | HM6440-0129 | • F-Connector, Pink | 1 | Y200001- |
| | | HM6440-0128 | • M-Connector, Pink | 1 | Y200001- |
| 13 | | HM6400-0016 | • F-Connector, Orange | 1 | Y200001- |
| | | HM6409-0075 | • M-Connector, Orange | 1 | Y200001- |
| 14 | | 20Y-06-41283 | Cable | 1 | Y200001- |
| 15 | | 08038-00035 | Cap, Terminal | 1 | Y200001- |
| 16 | | 20Y-06-22872 | Cable | 1 | Y200001- |
| 17 | | 08038-06031 | Cap | 1 | Y200001- |
| 18 | | 08088-30000 | Switch | 1 | Y200001- |
| 19 | | 08038-00519 | Cap | 2 | Y200001- |
| 20 | | 08038-06031 | Cap | 1 | Y200001- |
| 21 | | 600-815-2170 | Switch, Heater | 1 | Y200001- |
| 22 | | 08038-00519 | Cap | 2 | Y200001- |
| 23 | | 600-815-8941 | Relay | 1 | Y200001- |
| 24 | | 08028-CC065 | Cable | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. K1110-132048 Cab, Floor, Heater Hose, For Webasto Heater

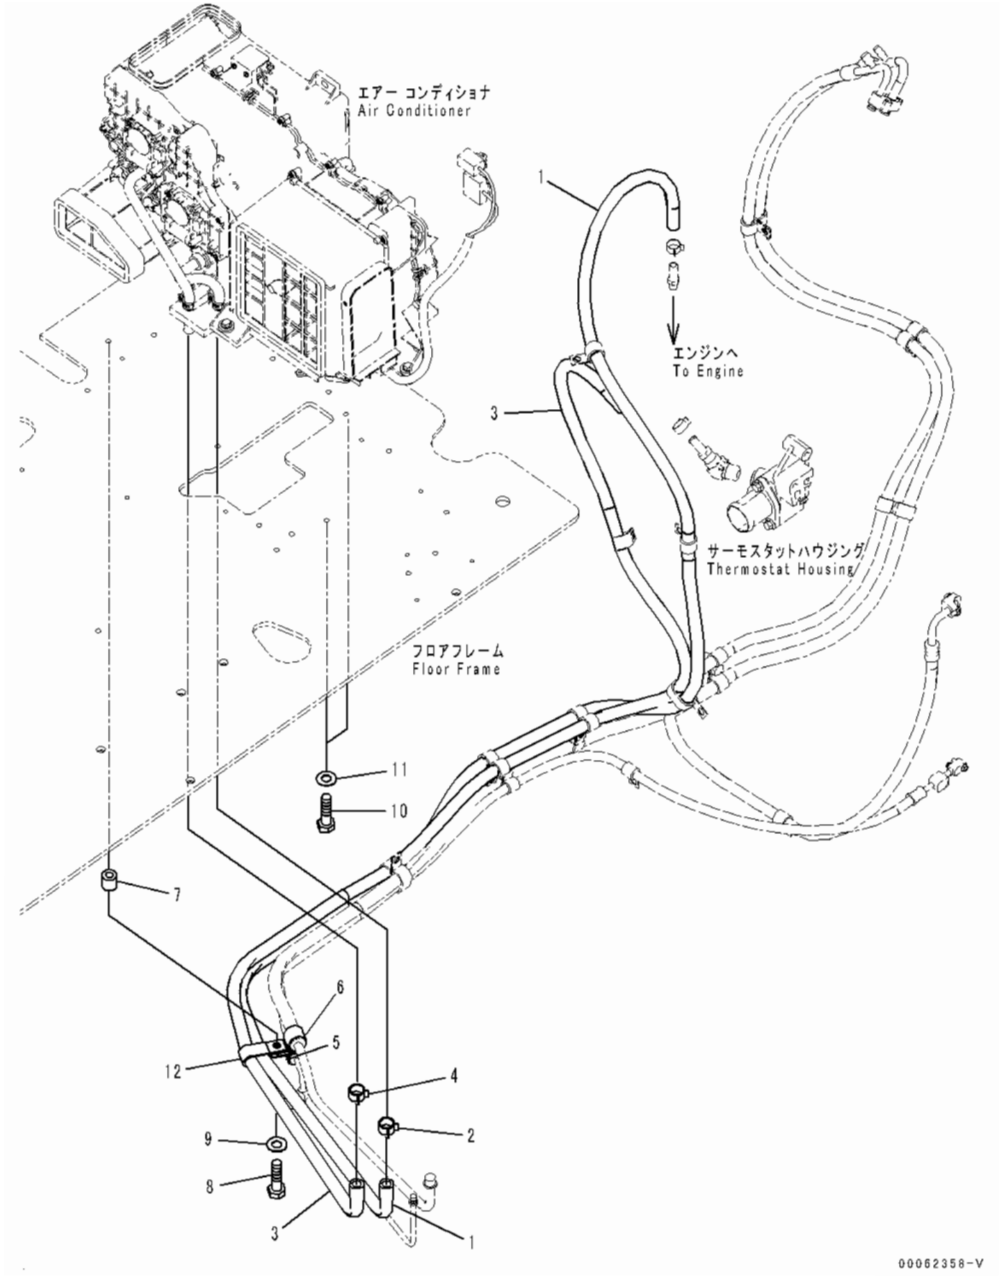


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-810-1581 | Hose Assembly | 1 | Y200001- |
| 2 | | 09479-02400 | Clamp | 1 | Y200001- |
| 3 | | 20Y-810-1342 | Hose Assembly | 1 | Y200001- |
| 4 | | 09479-02400 | Clamp | 1 | Y200001- |
| 5 | | 04434-52110 | Clip | 1 | Y200001- |
| 6 | | 04434-52511 | Clip | 1 | Y200001- |
| 7 | | 195-33-11220 | Spacer | 1 | Y200001- |
| 8 | | 01010-81045 | Bolt | 1 | Y200001- |
| 9 | | 01643-31032 | Washer | 1 | Y200001- |
| 10 | | 01010-81016 | Bolt | 2 | Y200001- |
| 11 | | 01643-31032 | Washer | 2 | Y200001- |
| 12 | | 141-06-11220 | Clip | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. K1730-001001 Switch

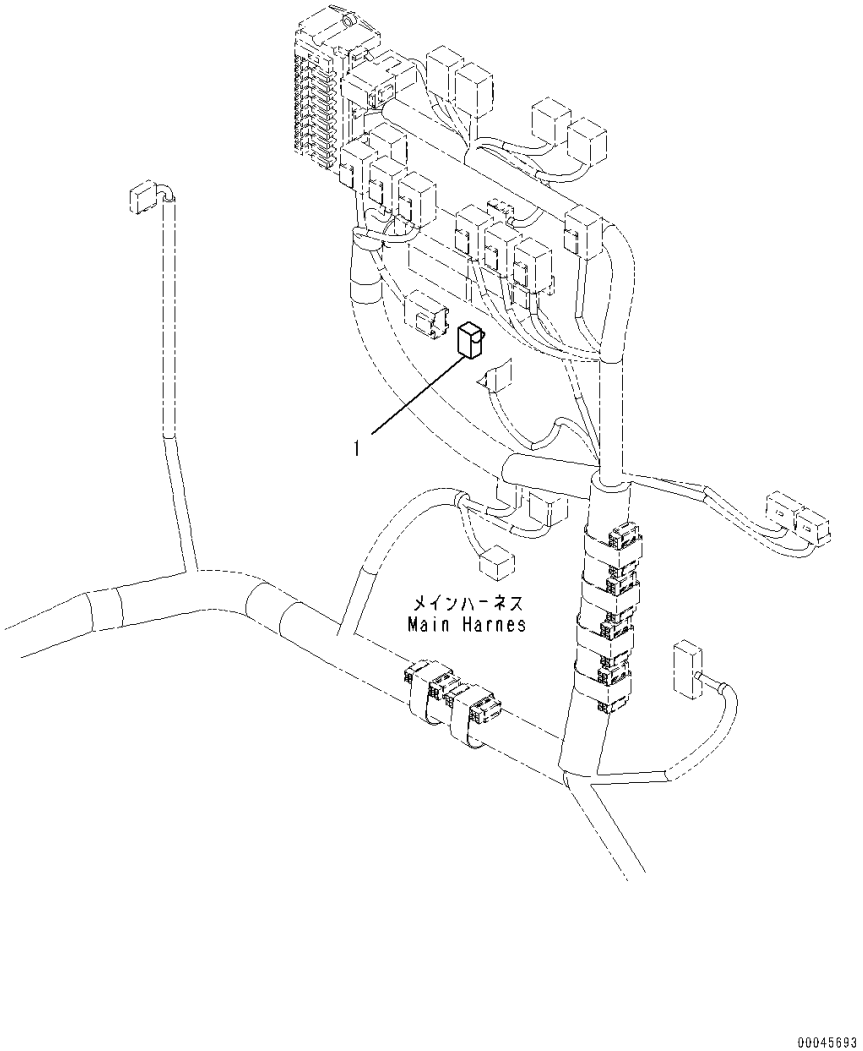



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-06-21421 | Connector Assembly..... | 1 | Y200001- |

# GUARDS AND COVERS

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. M1110-002001 Hood, Without Dustproof Net

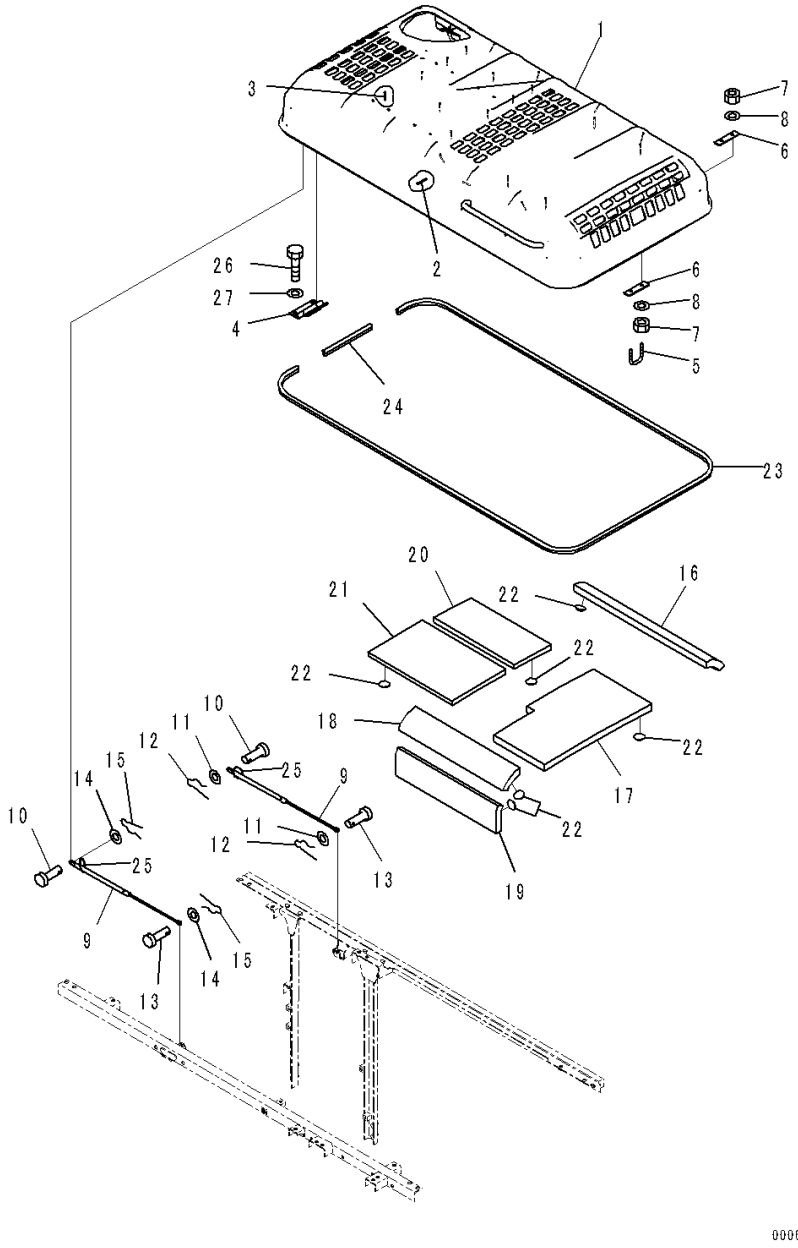


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-76450 | Hood | 1 | Y200001- |
| 2 | | 20Y-54-71460 | • Stud,Welded | 10 | Y200001- |
| 3 | | 124-A62-1910 | • Stud,Welded | 14 | Y200001- |
| 4 | | 20Y-54-K7321 | • Hinge,Welded | 2 | Y200001- |
| 5 | | 20Y-54-27172 | Bolt, U | 1 | Y200001- |
| 6 | | 20Y-54-27330 | Plate | 2 | Y200001- |
| 7 | | 01580-11210 | Nut | 4 | Y200001- |
| 8 | | 01643-31232 | Washer | 4 | Y200001- |
| 9 | | 20Y-54-71182 | Damper | 2 | Y200001- |
| 10 | | 04205-30825 | Pin | 2 | Y200001- |
| 11 | | 01640-20816 | Washer | 2 | Y200001- |
| 12 | | 04052-20833 | Pin | 2 | Y200001- |
| 13 | | 04205-30828 | Pin | 2 | Y200001- |
| 14 | | 01640-20816 | Washer | 2 | Y200001- |
| 15 | | 04052-20833 | Pin | 2 | Y200001- |
| 16 | | 20Y-54-72113 | Sheet | 1 | Y200001- |
| 17 | | 20Y-54-72191 | Sheet | 1 | Y200001- |
| 18 | | 20Y-54-72141 | Sheet | 1 | Y200001- |
| 19 | | 206-54-21130 | Sheet | 1 | Y200001- |
| 20 | | 206-54-21252 | Sheet | 1 | Y200001- |
| 21 | | 206-54-21161 | Sheet | 1 | Y200001- |
| 22 | | 124-A62-1920 | Cap | 24 | Y200001- |
| 23 | | 20Y-54-71470 | Seal | 1 | Y200001- |
| 24 | | 20Y-54-71480 | Seal | 1 | Y200001- |
| 25 | | 08034-20414 | Band | 2 | Y200001- |
| 26 | | 01010-81230 | Bolt | 4 | Y200001- |
| 27 | | 01643-31232 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. M1110-004001 Hood, With Dustproof Net, Hood

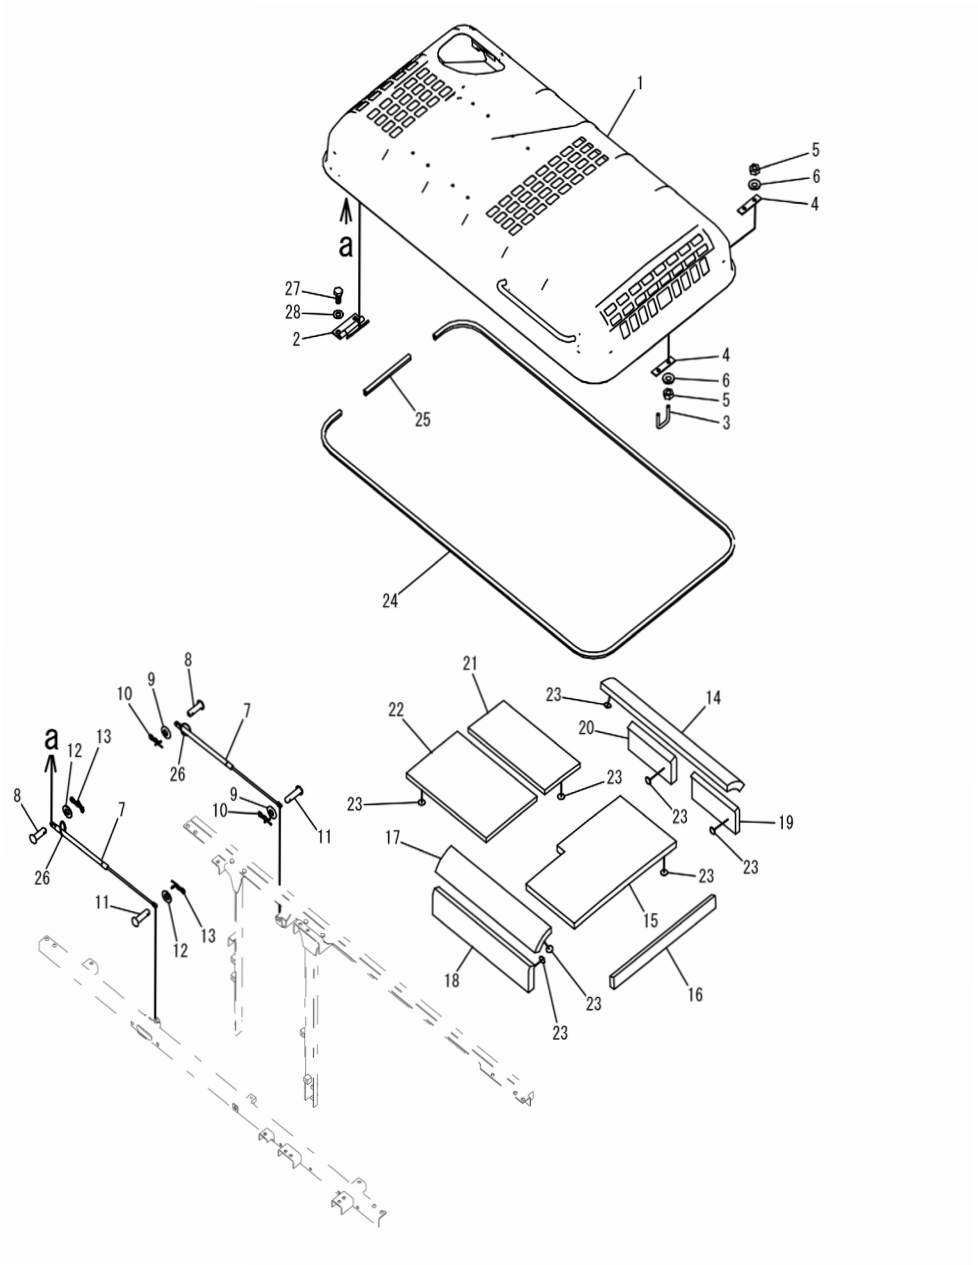


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-71112 | Hood . | 1 | Y200001- |
| 2 | | 20Y-54-K7321 | • Hinge,Welded. | 2 | Y200001- |
| 3 | | 20Y-54-27172 | Bolt, U . | 1 | Y200001- |
| 4 | | 20Y-54-27330 | Plate. | 2 | Y200001- |
| 5 | | 01580-11210 | Nut . | 4 | Y200001- |
| 6 | | 01643-31232 | Washer . | 4 | Y200001- |
| 7 | | 20Y-54-71182 | Damper . | 2 | Y200001- |
| 8 | | 04205-30825 | Pin. | 2 | Y200001- |
| 9 | | 01640-20816 | Washer . | 2 | Y200001- |
| 10 | | 04052-20833 | Pin. | 2 | Y200001- |
| 11 | | 04205-30828 | Pin. | 2 | Y200001- |
| 12 | | 01640-20816 | Washer . | 2 | Y200001- |
| 13 | | 04052-20833 | Pin. | 2 | Y200001- |
| 14 | | 20Y-54-72113 | Sheet . | 1 | Y200001- |
| 15 | | 20Y-54-72191 | Sheet . | 1 | Y200001- |
| 16 | | 20Y-54-72881 | Sheet | 1 | Y200001- |
| 17 | | 20Y-54-72141 | Sheet . | 1 | Y200001- |
| 18 | | 206-54-21130 | Sheet . | 1 | Y200001- |
| 19 | | 206-54-21140 | Sheet | 1 | Y200001- |
| 20 | | 206-54-21152 | Sheet | 1 | Y200001- |
| 21 | | 206-54-21252 | Sheet . | 1 | Y200001- |
| 22 | | 206-54-21161 | Sheet . | 1 | Y200001- |
| 23 | | 124-A62-1920 | Cap . | 28 | Y200001- |
| 24 | | 20Y-54-71470 | Seal. | 1 | Y200001- |
| 25 | | 20Y-54-71480 | Seal. | 1 | Y200001- |
| 26 | | 08034-20414 | Band . | 2 | Y200001- |
| 27 | | 01010-81230 | Bolt. | 4 | Y200001- |
| 28 | | 01643-31232 | Washer . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. M1110-004002 Hood, With Dustproof Net, Net

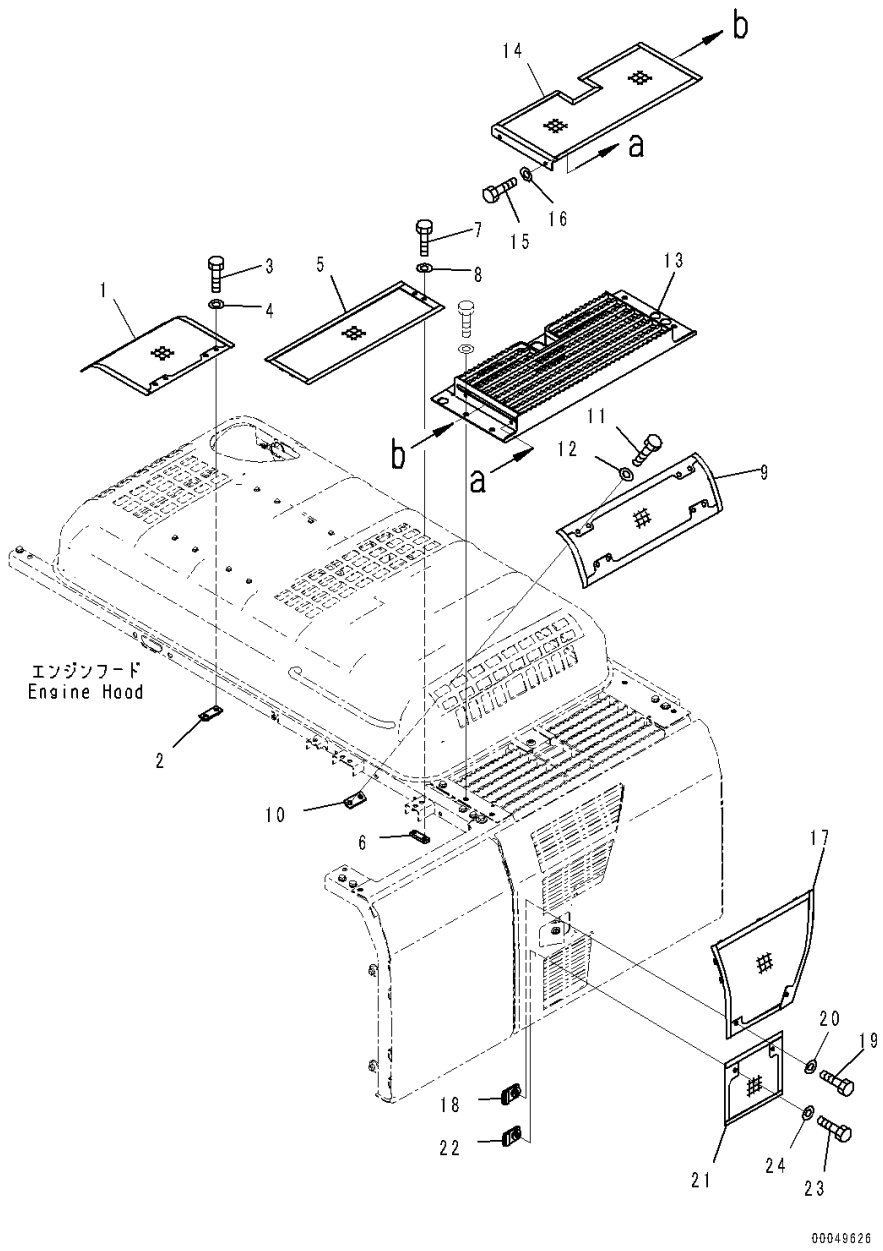


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-74410 | Net | 1 | Y200001- |
| 2 | | 20Y-54-74560 | Plate | 4 | Y200001- |
| 3 | | 01010-D1230 | Bolt | 8 | Y200001- |
| 4 | | 01643-71232 | Washer | 8 | Y200001- |
| 5 | | 20Y-54-32760 | Net | 1 | Y200001- |
| 6 | | 20Y-54-11750 | Seat | 1 | Y200001- |
| 7 | | 01010-D1230 | Bolt | 2 | Y200001- |
| 8 | | 01643-71232 | Washer | 2 | Y200001- |
| 9 | | 20Y-54-74420 | Net | 1 | Y200001- |
| 10 | | 20Y-54-74560 | Plate | 4 | Y200001- |
| 11 | | 01010-D1230 | Bolt | 8 | Y200001- |
| 12 | | 01643-71232 | Washer | 8 | Y200001- |
| 13 | | 20Y-54-74441 | Cover . | 1 | Y200001- |
| 14 | | 20Y-54-74431 | Net | 1 | Y200001- |
| 15 | | 01010-D1030 | Bolt | 2 | Y200001- |
| 16 | | 01643-71032 | Washer | 2 | Y200001- |
| 17 | | 20Y-54-74550 | Net | 1 | Y200001- |
| 18 | | 20Y-54-74570 | Plate | 2 | Y200001- |
| 19 | | 01010-D1230 | Bolt | 2 | Y200001- |
| 20 | | 01643-71232 | Washer | 2 | Y200001- |
| 21 | | 20Y-54-74540 | Net | 1 | Y200001- |
| 22 | | 20Y-54-74570 | Plate | 2 | Y200001- |
| 23 | | 01010-D1230 | Bolt | 2 | Y200001- |
| 24 | | 01643-71232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1120-012001 Machine Cab Frame, With Webasto Heater, With Pre-Cleaner

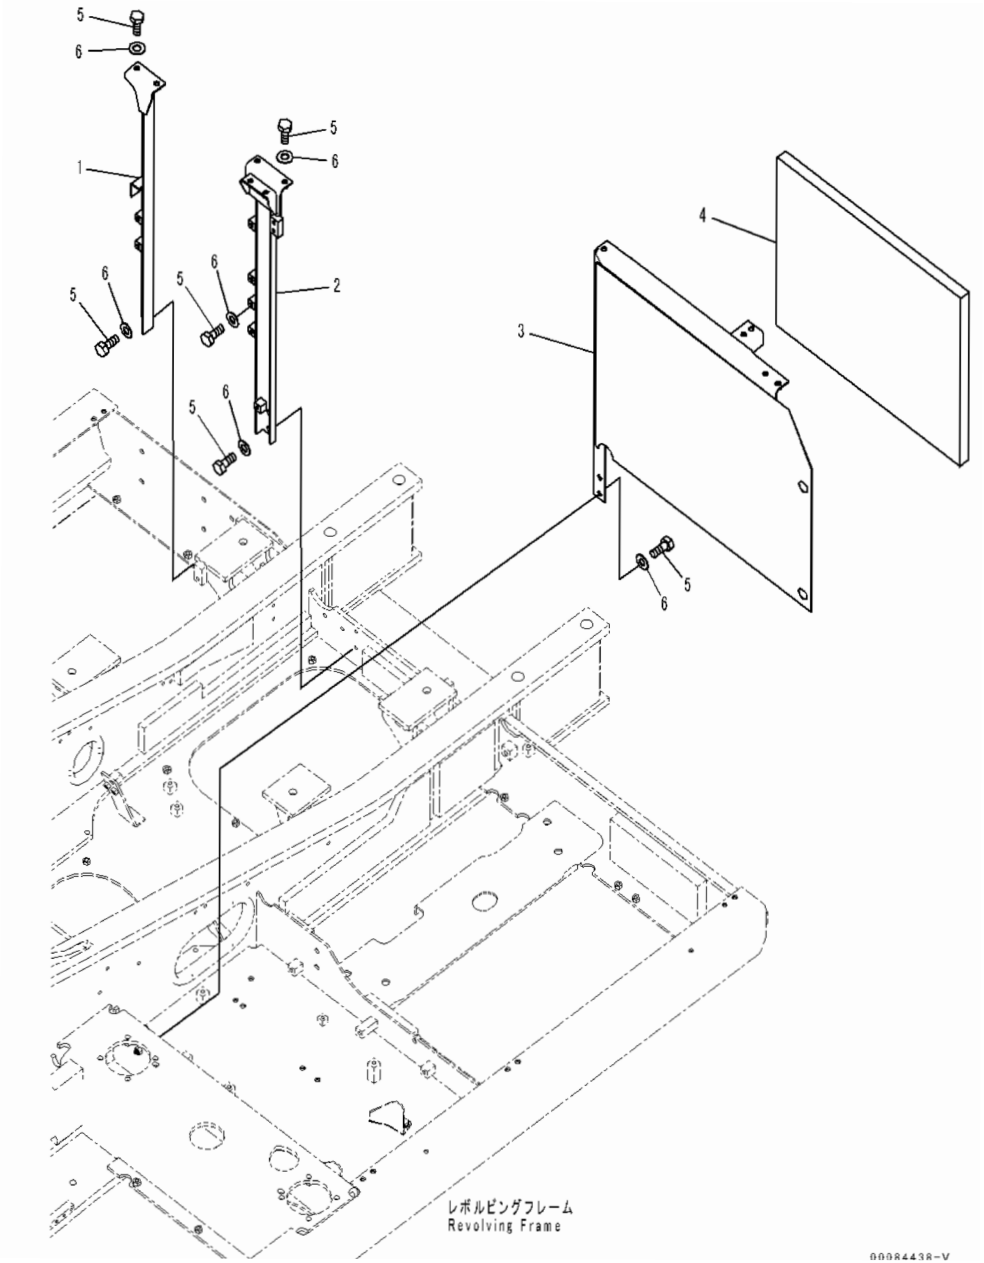


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-71211 | Frame . | 1 | Y200001- |
| 2 | | 20Y-54-76781 | Frame . | 1 | Y200001- |
| | | 20Y-54-74590 | Frame | 1 | Y200001- |
| 3 | C1 | | • Frame | 1 | Y200001- |
| 4 | | 20Y-54-61760 | • Sheet | 1 | Y200001- |
| 5 | | 01010-81230 | Bolt | 11 | Y200001- |
| 6 | | 01643-31232 | Washer | 11 | Y200001- |

https://truckmanualshub.com/


# FIG. M1120-006001 Machine Cab Frame, With Webasto Heater

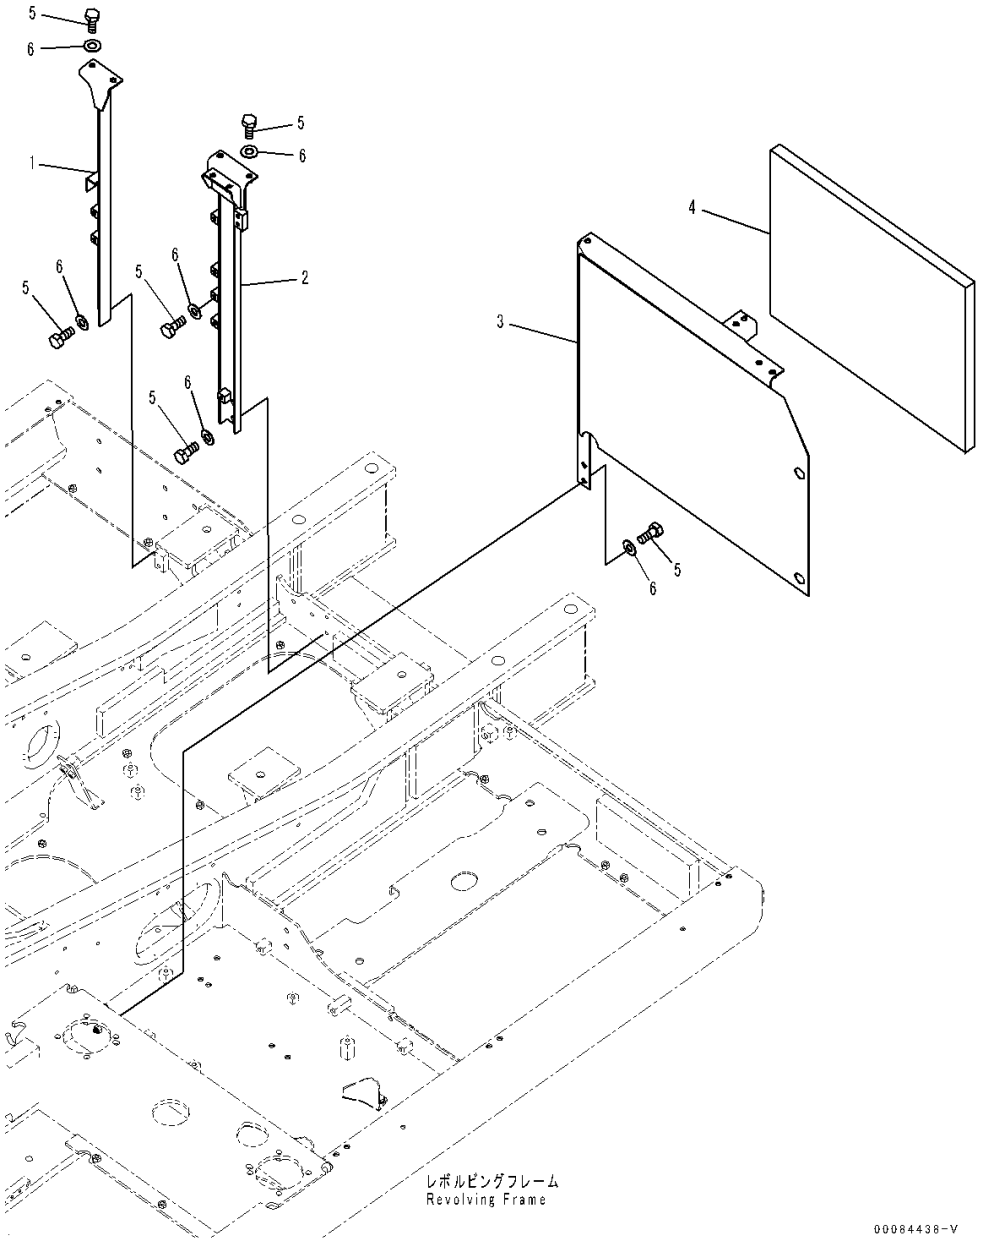


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-71211 | Frame . | 1 | Y200001- |
| 2 | | 20Y-54-76781 | Frame | 1 | Y200001- |
| | | 20Y-54-71271 | Frame | 1 | Y200001- |
| 3 | C1 | | • Frame | 1 | Y200001- |
| 4 | | 20Y-54-61760 | • Sheet . | 1 | Y200001- |
| 5 | | 01010-81230 | Bolt | 11 | Y200001- |
| 6 | | 01643-31232 | Washer | 11 | Y200001- |

https://truckmanualshub.com/


# FIG. M1130-010001 Side Cover

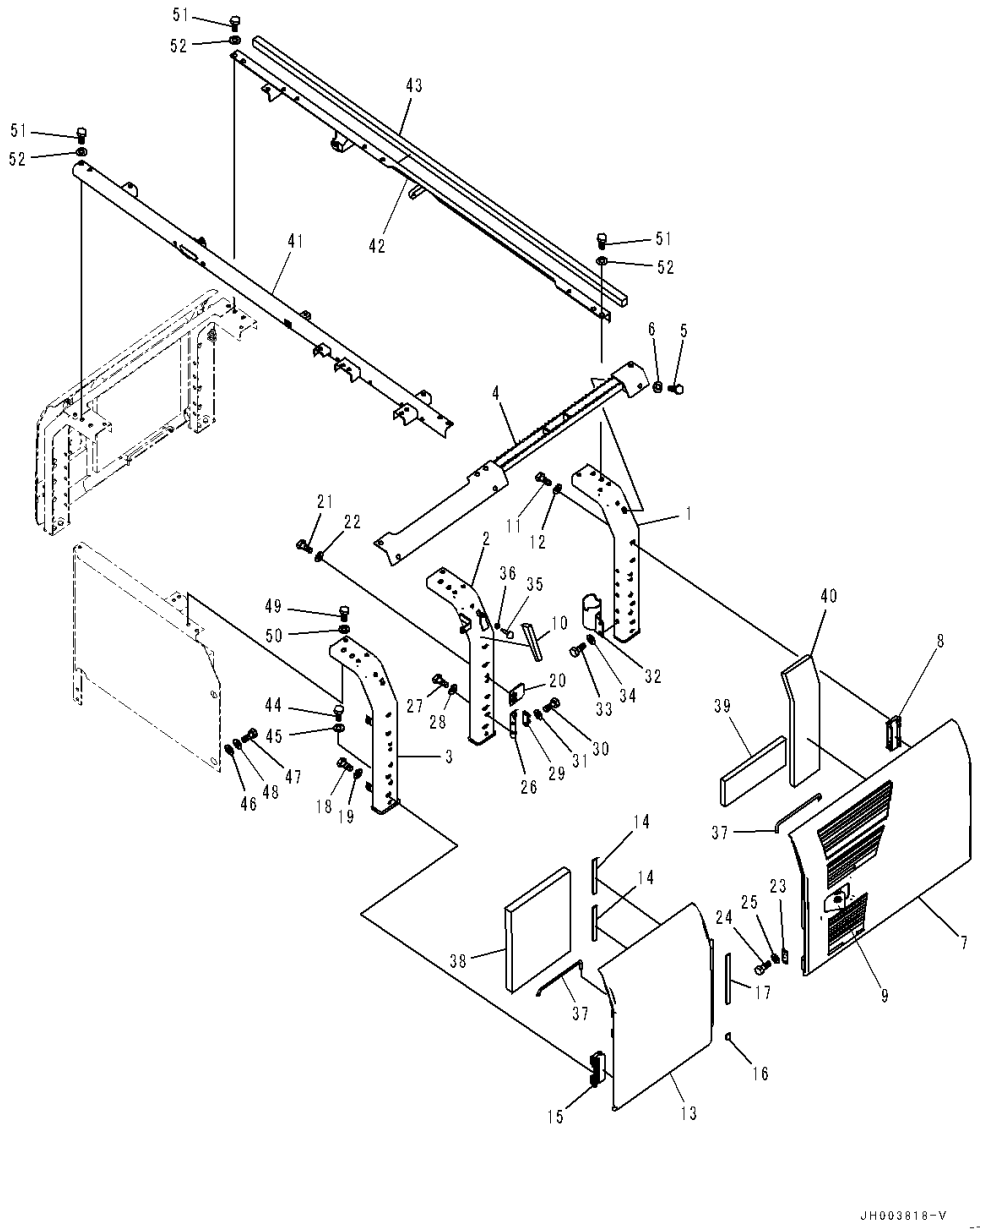


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-71312 | Frame | 1 | Y200001- |
| 2 | | 20Y-54-71323 | Frame | 1 | Y200001- |
| 3 | | 20Y-54-71331 | Frame | 1 | Y200001- |
| 4 | | 20Y-54-71341 | Frame | 1 | Y200001- |
| 5 | | 01010-81225 | Bolt | 3 | Y200001- |
| 6 | | 01643-31232 | Washer | 3 | Y200001- |
| 7 | | 20Y-54-71136 | Cover | 1 | Y200001- |
| 8 | | 20Y-54-63414 | • Hinge,Welded | 2 | Y200001- |
| 9 | | 20Y-54-71372 | • Lock,Welded | 1 | Y200001- |
| 10 | | 20Y-54-72870 | Sheet | 1 | Y200001- |
| 11 | | 01010-81225 | Bolt | 4 | Y200001- |
| 12 | | 01643-31232 | Washer | 4 | Y200001- |
| 13 | | 20Y-54-71144 | Cover | 1 | Y200001- |
| 14 | | 20Y-54-63390 | • Sheet | 2 | Y200001- |
| 15 | | 20Y-54-63414 | • Hinge,Welded | 2 | Y200001- |
| 16 | | 20Y-54-73841 | • Sheet | 1 | Y200001- |
| 17 | | 20Y-54-73752 | • Sheet | 1 | Y200001- |
| 18 | | 01010-81225 | Bolt | 4 | Y200001- |
| 19 | | 01643-31232 | Washer | 4 | Y200001- |
| 20 | | 20Y-54-61470 | Plate | 1 | Y200001- |
| 21 | | 01010-81225 | Bolt | 2 | Y200001- |
| 22 | | 01643-31232 | Washer | 2 | Y200001- |
| 23 | | 205-54-53550 | Dovetail | 1 | Y200001- |
| 24 | | 01010-80612 | Bolt | 2 | Y200001- |
| 25 | | 01643-30623 | Washer | 2 | Y200001- |
| 26 | | 20Y-54-28170 | Bracket | 1 | Y200001- |
| 27 | | 01010-81225 | Bolt | 2 | Y200001- |
| 28 | | 01643-31232 | Washer | 2 | Y200001- |
| 29 | | 205-54-51970 | Dovetail | 1 | Y200001- |
| 30 | | 01010-80616 | Bolt | 2 | Y200001- |
| 31 | | 01643-30623 | Washer | 2 | Y200001- |
| 32 | | 20Y-54-61372 | Bracket | 1 | Y200001- |
| 33 | | 01010-81225 | Bolt | 2 | Y200001- |
| 34 | | 01643-31232 | Washer | 2 | Y200001- |
| 35 | | 20Y-54-11611 | Stopper | 2 | Y200001- |
| 36 | | 01580-11008 | Nut | 2 | Y200001- |
| 37 | | 20Y-54-29232 | Bar | 2 | Y200001- |
| 38 | | 20Y-54-71361 | Sheet | 1 | Y200001- |
| 39 | | 20Y-54-72750 | Sheet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. M1130-010001 Side Cover

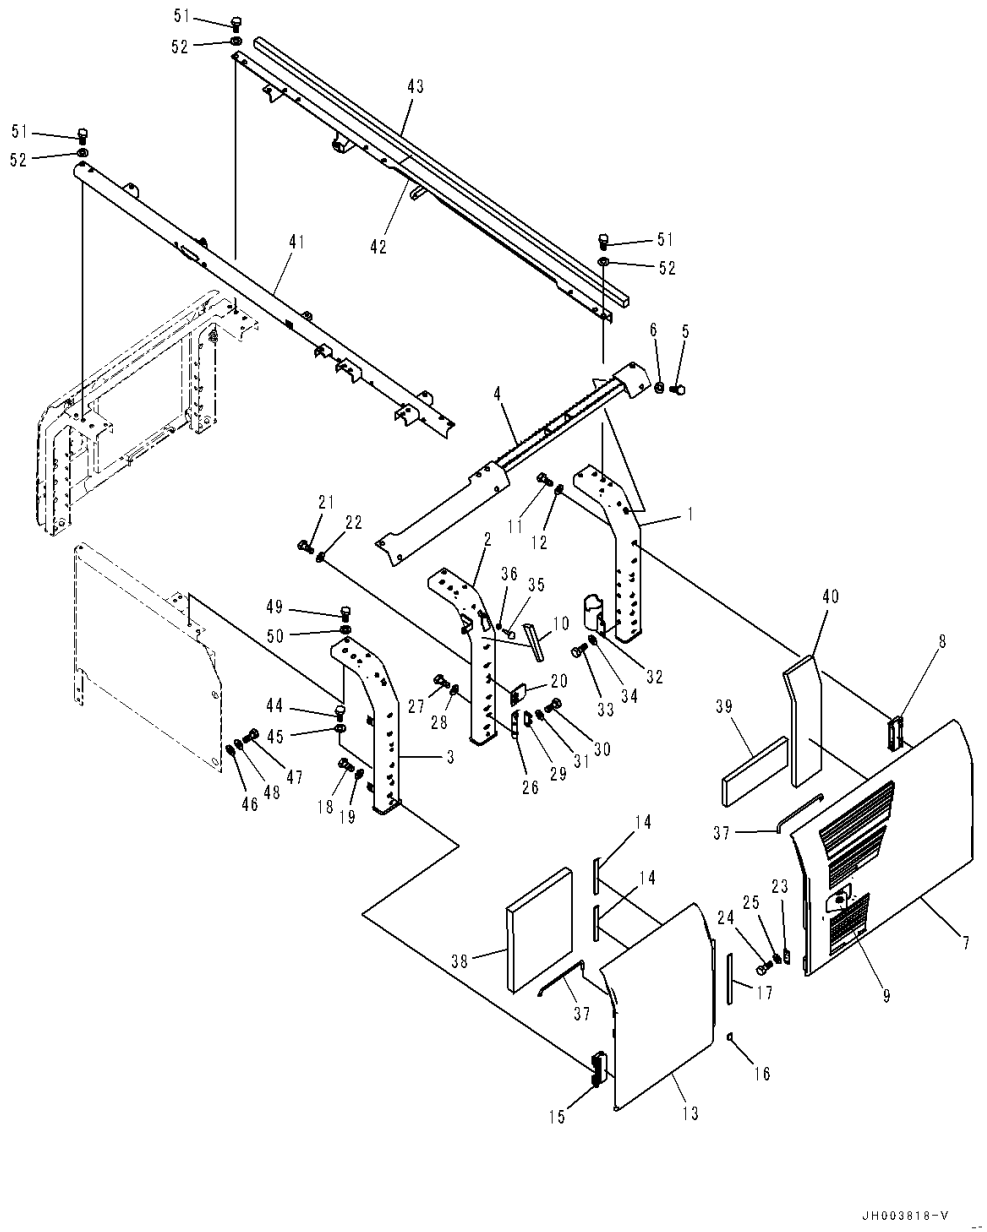


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 20Y-54-72740 | Sheet | 1 | Y200001- |
| 41 | | 20Y-54-71222 | Frame | 1 | Y200001- |
| | | 20Y-54-71283 | Frame | 1 | Y200001- |
| 42 | C1 | | • Frame | 1 | Y200001- |
| 43 | | 20Y-54-71241 | • Sheet | 1 | Y200001- |
| 44 | | 01010-81230 | Bolt | 6 | Y200001- |
| 45 | | 01643-31232 | Washer | 6 | Y200001- |
| 46 | | 20Y-54-12550 | Collar | 2 | Y200001- |
| 47 | | 01010-81225 | Bolt | 2 | Y200001- |
| 48 | | 01643-31232 | Washer | 2 | Y200001- |
| 49 | | 01010-81230 | Bolt | 2 | Y200001- |
| 50 | | 01643-31232 | Washer | 2 | Y200001- |
| 51 | | 01010-81230 | Bolt | 5 | Y200001- |
| 52 | | 01643-31232 | Washer | 5 | Y200001- |

https://truckmanualshub.com/


# FIG. M1140-002001 Side Cover, RHS

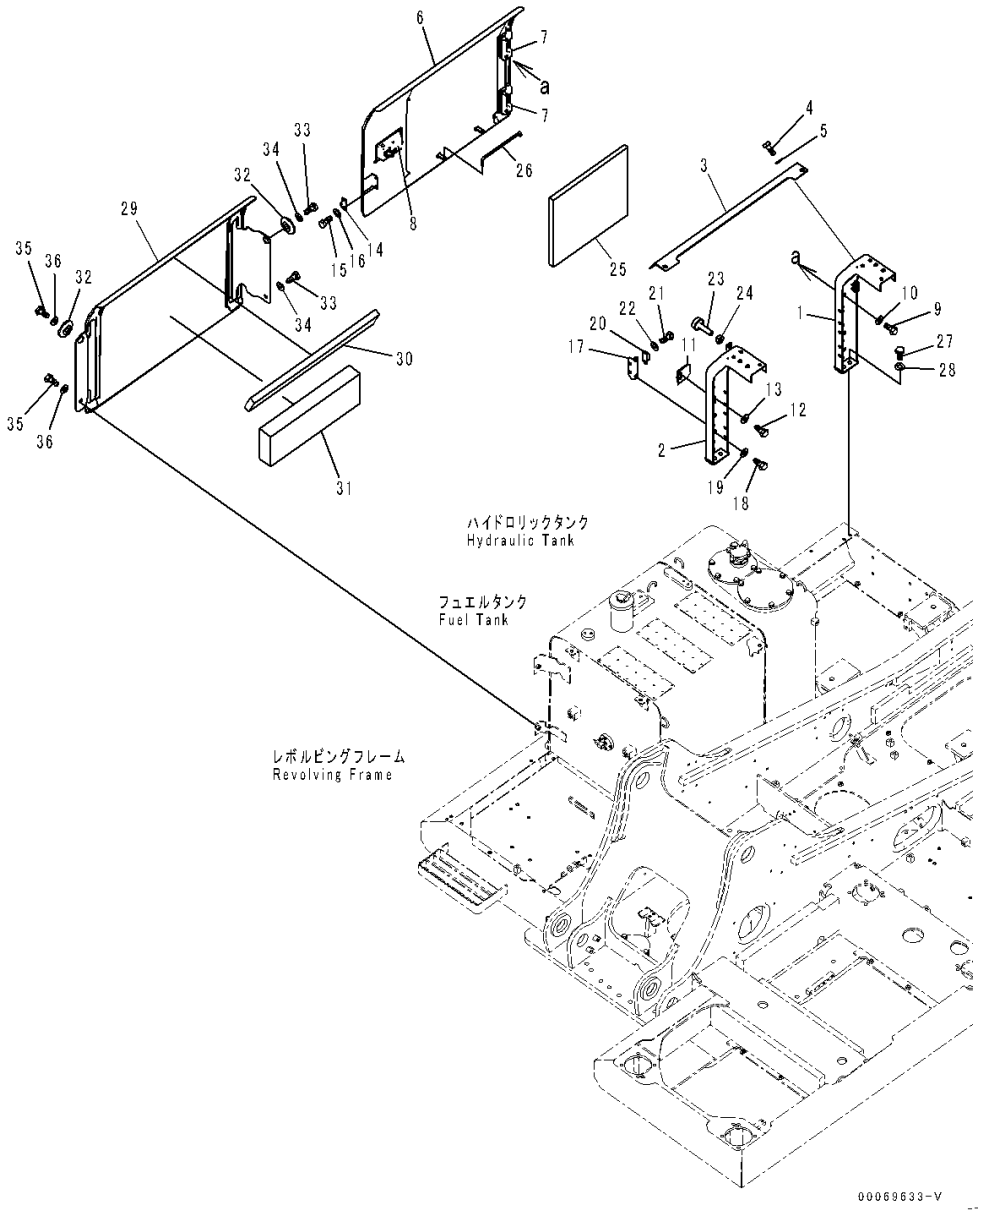


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-71411 | Frame . | 1 | Y200001- |
| 2 | | 20Y-54-71421 | Frame | 1 | Y200001- |
| 3 | | 20Y-54-71431 | Plate | 1 | Y200001- |
| 4 | | 01010-81225 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 20Y-54-71454 | Cover . | 1 | Y200001- |
| 7 | | 20Y-54-63414 | • Hinge,Welded | 2 | Y200001- |
| 8 | | 20Y-54-71491 | • Lock,Welded | 1 | Y200001- |
| 9 | | 01010-81225 | Bolt | 4 | Y200001- |
| 10 | | 01643-31232 | Washer | 4 | Y200001- |
| 11 | | 20Y-54-61470 | Plate | 1 | Y200001- |
| 12 | | 01010-81225 | Bolt | 2 | Y200001- |
| 13 | | 01643-31232 | Washer | 2 | Y200001- |
| 14 | | 205-54-53550 | Dovetail . | 1 | Y200001- |
| 15 | | 01010-80612 | Bolt | 2 | Y200001- |
| 16 | | 01643-30623 | Washer | 2 | Y200001- |
| 17 | | 20Y-54-28170 | Bracket | 1 | Y200001- |
| 18 | | 01010-81225 | Bolt | 2 | Y200001- |
| 19 | | 01643-31232 | Washer | 2 | Y200001- |
| 20 | | 205-54-51970 | Dovetail . | 1 | Y200001- |
| 21 | | 01010-80616 | Bolt | 2 | Y200001- |
| 22 | | 01643-30623 | Washer | 2 | Y200001- |
| 23 | | 20Y-54-11611 | Stopper | 1 | Y200001- |
| 24 | | 01580-11008 | Nut . | 1 | Y200001- |
| 25 | | 20Y-54-71440 | Sheet | 1 | Y200001- |
| 26 | | 20Y-54-29232 | Bar | 1 | Y200001- |
| 27 | | 01010-81230 | Bolt | 4 | Y200001- |
| 28 | | 01643-31232 | Washer | 4 | Y200001- |
| | | 20Y-54-71153 | Cover . | 1 | Y200001- |
| 29 | C1 | | • Cover | 1 | Y200001- |
| 30 | | 20Y-54-61391 | • Sheet | 1 | Y200001- |
| 31 | | 20Y-54-76910 | • Sheet | 1 | Y200001- |
| 32 | | 208-54-57180 | Collar . | 2 | Y200001- |
| 33 | | 01010-81230 | Bolt | 2 | Y200001- |
| 34 | | 01643-31232 | Washer | 2 | Y200001- |
| 35 | | 01010-81240 | Bolt | 2 | Y200001- |
| 36 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1150-002001 Machine Cab Partition, With Air Conditioner, LHS

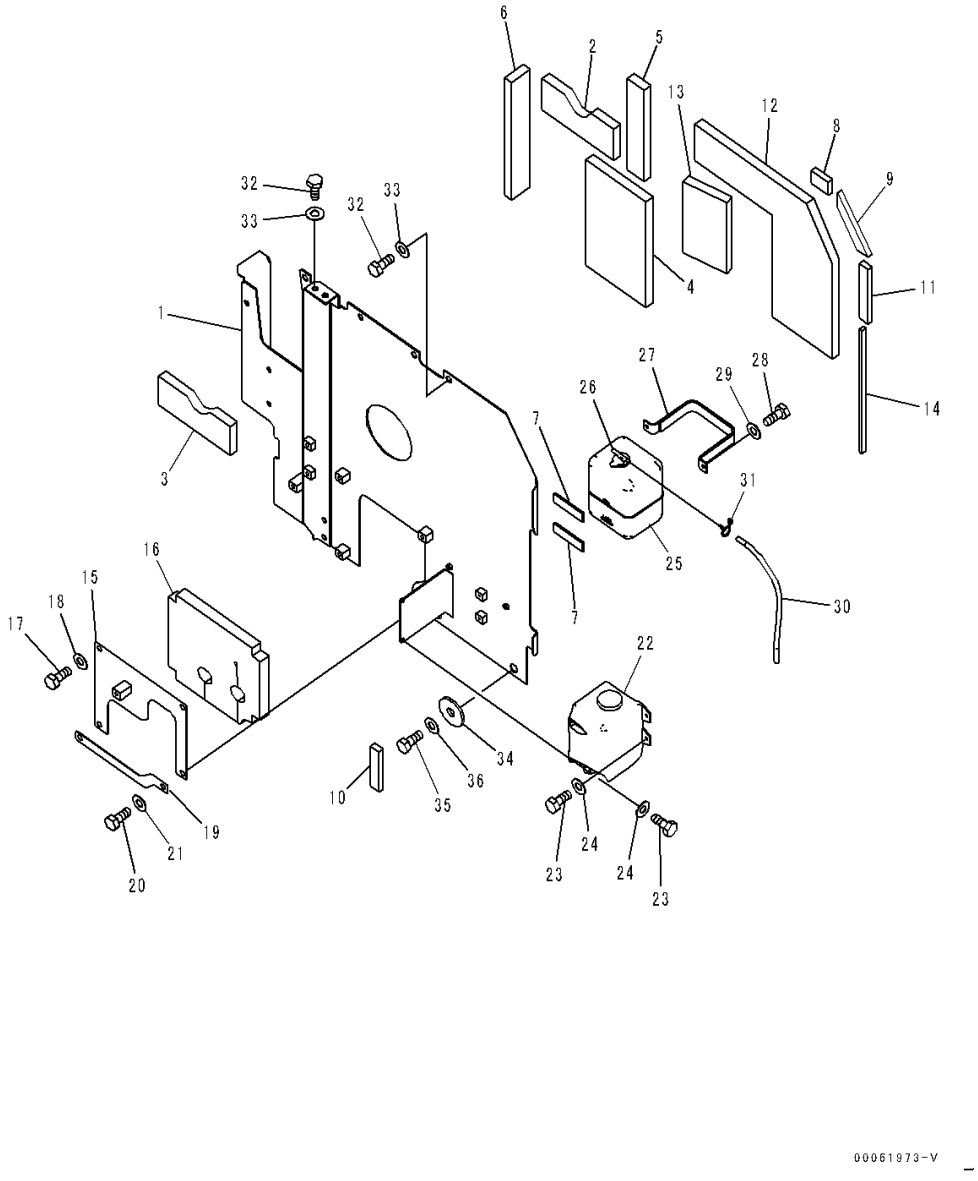


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-72313 | Cover . | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-71970 | • Sheet | 1 | Y200001- |
| 3 | | 20Y-54-71980 | • Sheet | 1 | Y200001- |
| 4 | | 20Y-54-72260 | • Sheet | 1 | Y200001- |
| 5 | | 20Y-54-72270 | • Sheet | 1 | Y200001- |
| 6 | | 20Y-54-72280 | • Sheet | 1 | Y200001- |
| 7 | | 205-03-71440 | • Sheet | 2 | Y200001- |
| 8 | | 20Y-54-72510 | • Sheet | 1 | Y200001- |
| 9 | | 20Y-54-72520 | • Sheet | 1 | Y200001- |
| 10 | | 20Y-54-72540 | • Sheet | 1 | Y200001- |
| 11 | | 20Y-54-72551 | • Sheet | 1 | Y200001- |
| 12 | | 20Y-54-72831 | • Sheet | 1 | Y200001- |
| 13 | | 20Y-54-73711 | • Sheet | 1 | Y200001- |
| 14 | | 20Y-54-75590 | • Sheet | 1 | Y200001- |
| | | 20Y-54-71613 | Cover . | 1 | Y200001- |
| 15 | C1 | | • Cover | 1 | Y200001- |
| 16 | | 20Y-54-71633 | • Sheet | 1 | Y200001- |
| 17 | | 01010-81225 | Bolt | 2 | Y200001- |
| 18 | | 01643-31232 | Washer | 2 | Y200001- |
| 19 | | 20Y-54-71670 | Plate | 1 | Y200001- |
| 20 | | 01010-81225 | Bolt | 2 | Y200001- |
| 21 | | 01643-31232 | Washer | 2 | Y200001- |
| 22 | | 21T-06-11350 | Tank Assembly | 1 | Y200001- |
| 23 | | 01010-80620 | Bolt | 4 | Y200001- |
| 24 | | 01643-30623 | Washer | 4 | Y200001- |
| 25 | | 20Y-06-15240 | Tank | 1 | Y200001- |
| 26 | | 205-03-71532 | • Cap | 1 | Y200001- |
| | | 205-03-71540 | •• Packing . | 1 | Y200001- |
| 27 | | 203-03-56650 | Bracket | 1 | Y200001- |
| 28 | | 01010-80820 | Bolt | 2 | Y200001- |
| 29 | | 01643-30823 | Washer | 2 | Y200001- |
| 30 | | 20Y-03-41880 | Hose . | 1 | Y200001- |
| 31 | | 206-03-43340 | Clip | 1 | Y200001- |
| 32 | | 01010-81230 | Bolt | 7 | Y200001- |
| 33 | | 01643-31232 | Washer | 7 | Y200001- |
| 34 | | 205-54-76411 | Collar | 2 | Y200001- |
| 35 | | 01010-81230 | Bolt | 2 | Y200001- |
| 36 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1150-002002 Machine Cab Partition, Middle

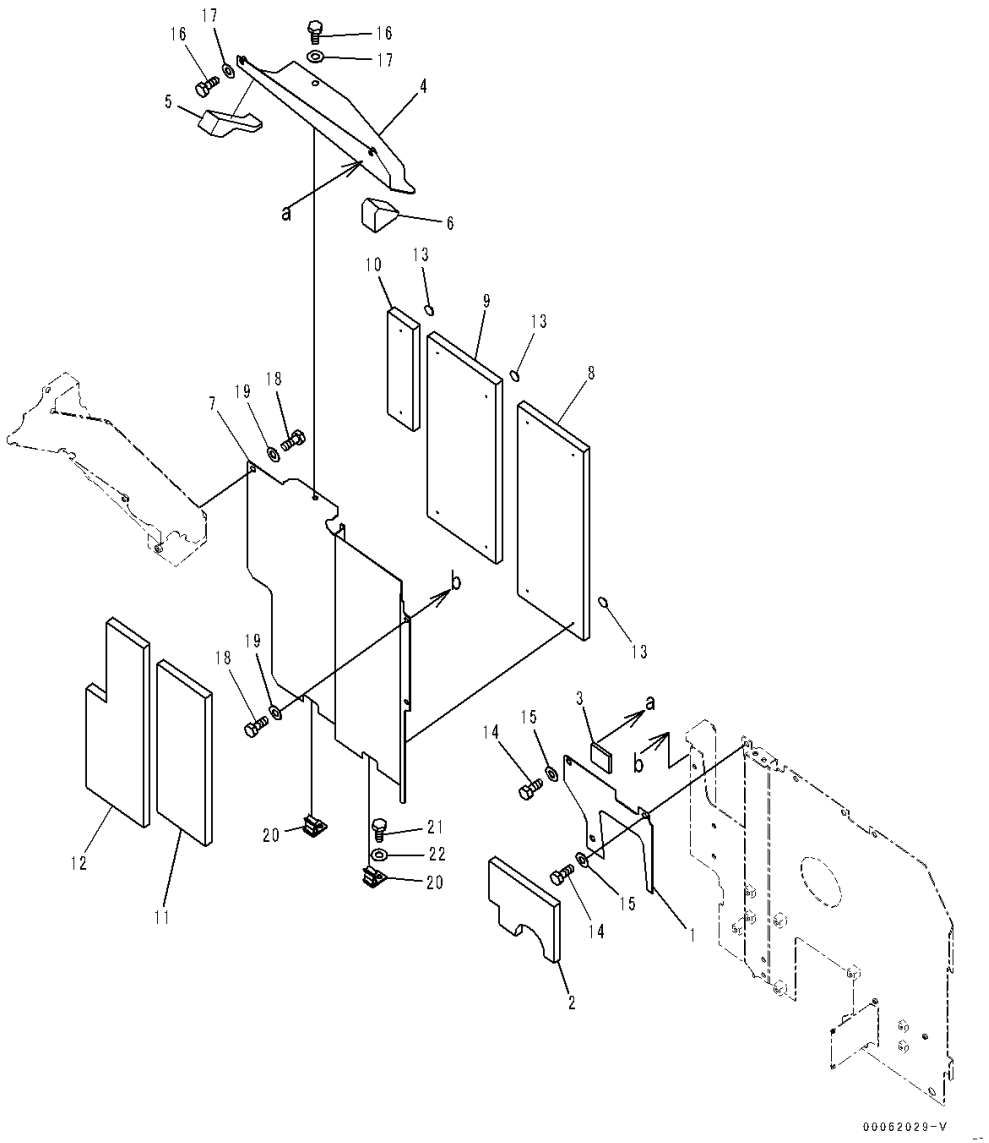


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-72322 | Cover | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-71991 | • Sheet | 1 | Y200001- |
| 3 | | 20Y-54-73830 | • Sheet | 1 | Y200001- |
| | | 20Y-54-76470 | Cover | 1 | Y200001- |
| 4 | C1 | | • Cover | 1 | Y200001- |
| 5 | | 20Y-54-72251 | • Sheet | 1 | Y200001- |
| 6 | | 20Y-54-72491 | • Sheet | 1 | Y200001- |
| | | 20Y-54-72331 | Cover | 1 | Y200001- |
| 7 | C1 | | • Cover | 1 | Y200001- |
| 8 | | 20Y-54-72221 | • Sheet | 1 | Y200001- |
| 9 | | 20Y-54-72231 | • Sheet | 1 | Y200001- |
| 10 | | 20Y-54-72351 | • Sheet | 1 | Y200001- |
| 11 | | 20Y-54-73390 | • Sheet | 1 | Y200001- |
| 12 | | 20Y-54-73411 | • Sheet | 1 | Y200001- |
| 13 | | 124-A62-1920 | • Cap | 10 | Y200001- |
| 14 | | 01010-81230 | Bolt | 3 | Y200001- |
| 15 | | 01643-31232 | Washer | 3 | Y200001- |
| 16 | | 01010-81230 | Bolt | 2 | Y200001- |
| 17 | | 01643-31232 | Washer | 2 | Y200001- |
| 18 | | 01010-81230 | Bolt | 3 | Y200001- |
| 19 | | 01643-31232 | Washer | 3 | Y200001- |
| 20 | | 20Y-54-12320 | Catcher | 2 | Y200001- |
| 21 | | 01010-81230 | Bolt | 2 | Y200001- |
| 22 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1150-002003 Machine Cab Partition, Valve and Muffler Side

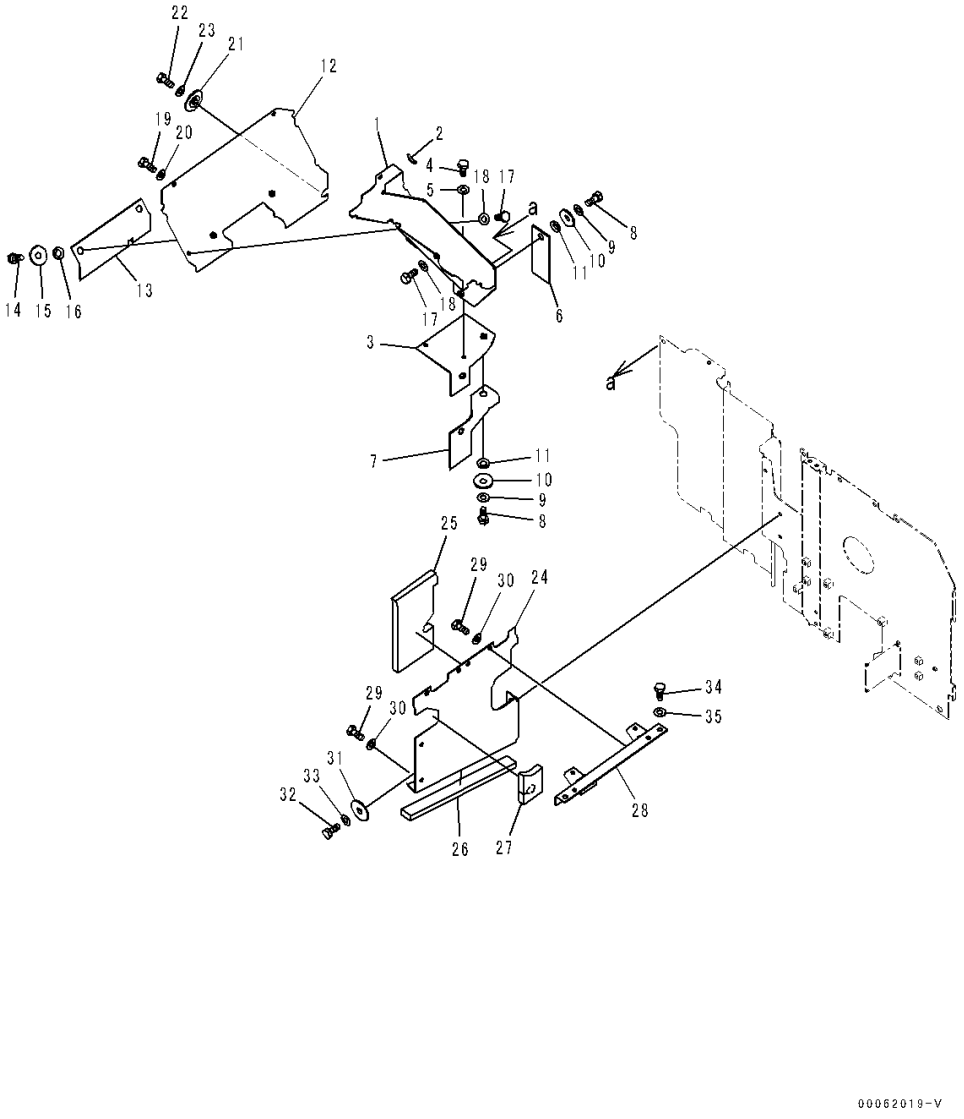


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-73850 | Cover Assembly | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-73781 | • Sheet | 1 | Y200001- |
| 3 | | 20Y-54-72481 | Cover | 1 | Y200001- |
| 4 | | 01010-81225 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 20Y-54-73760 | Sheet | 1 | Y200001- |
| 7 | | 20Y-54-73770 | Sheet | 1 | Y200001- |
| 8 | | 01010-81225 | Bolt | 3 | Y200001- |
| 9 | | 01643-31232 | Washer | 3 | Y200001- |
| 10 | | 124-54-26540 | Washer | 3 | Y200001- |
| 11 | | 01643-51232 | Washer | 3 | Y200001- |
| 12 | | 20Y-54-71561 | Cover | 1 | Y200001- |
| 13 | | 20Y-54-72470 | Sheet | 1 | Y200001- |
| 14 | | 01010-81225 | Bolt | 2 | Y200001- |
| 15 | | 124-54-26540 | Washer | 2 | Y200001- |
| 16 | | 01643-51232 | Washer | 2 | Y200001- |
| 17 | | 01010-81230 | Bolt | 3 | Y200001- |
| 18 | | 01643-31232 | Washer | 3 | Y200001- |
| 19 | | 01010-81230 | Bolt | 2 | Y200001- |
| 20 | | 01643-31232 | Washer | 2 | Y200001- |
| 21 | | 20Y-54-12550 | Collar | 1 | Y200001- |
| 22 | | 01010-81230 | Bolt | 1 | Y200001- |
| 23 | | 01643-31232 | Washer | 1 | Y200001- |
| 24 | | 20Y-54-71572 | Cover | 1 | Y200001- |
| 25 | | 20Y-54-71950 | • Sheet | 1 | Y200001- |
| 26 | | 20Y-54-71962 | • Sheet | 1 | Y200001- |
| 27 | | 206-54-71460 | • Sheet | 1 | Y200001- |
| 28 | | 20Y-54-71262 | Frame | 1 | Y200001- |
| 29 | | 01010-81230 | Bolt | 6 | Y200001- |
| 30 | | 01643-31232 | Washer | 6 | Y200001- |
| 31 | | 203-54-62670 | Collar | 2 | Y200001- |
| 32 | | 01010-81230 | Bolt | 2 | Y200001- |
| 33 | | 01643-31232 | Washer | 2 | Y200001- |
| 34 | | 01010-81230 | Bolt | 2 | Y200001- |
| 35 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1150-008001 Machine Cab Partition, With Webasto Heater, LHS

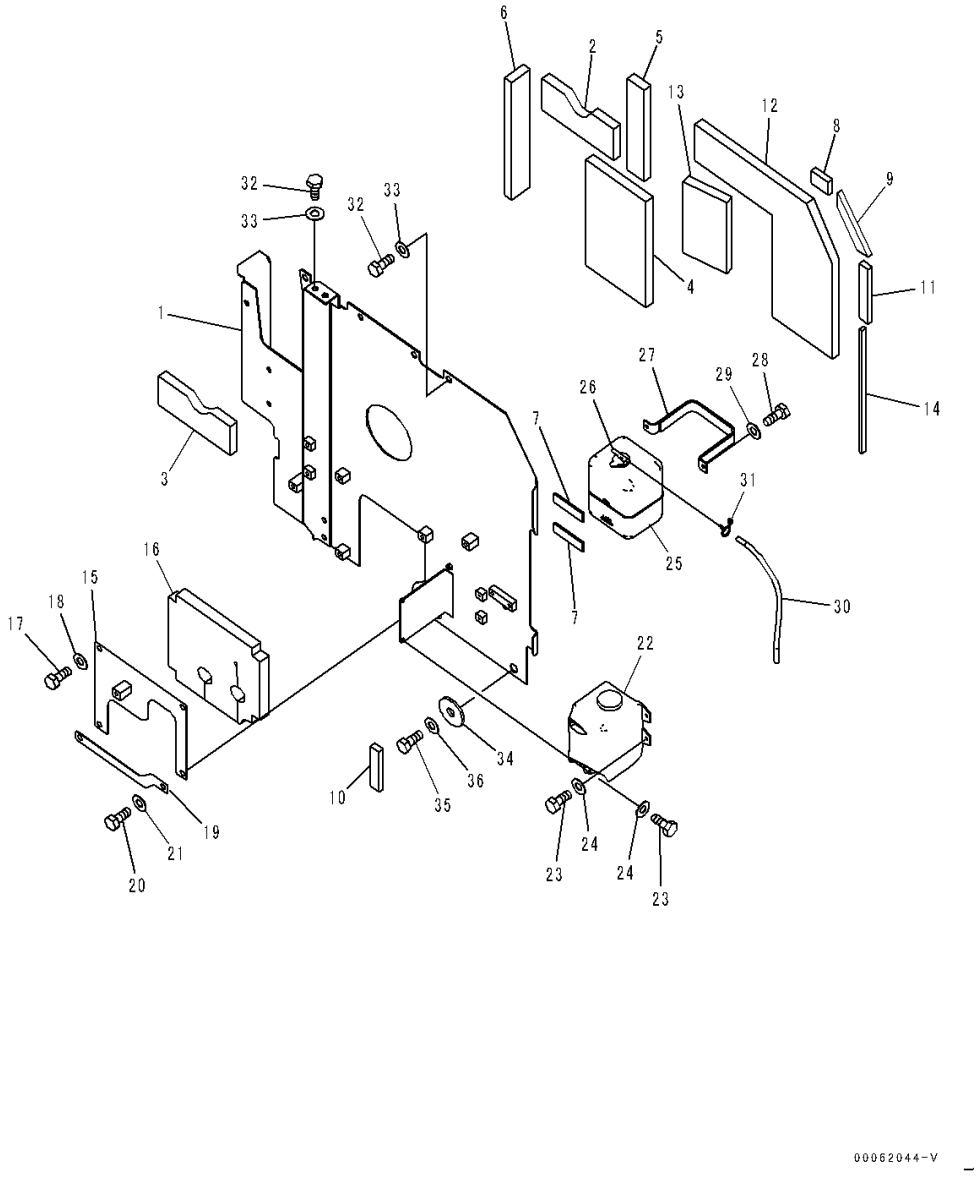


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-74372 | Cover . | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-71970 | • Sheet | 1 | Y200001- |
| 3 | | 20Y-54-71980 | • Sheet | 1 | Y200001- |
| 4 | | 20Y-54-72260 | • Sheet | 1 | Y200001- |
| 5 | | 20Y-54-72270 | • Sheet | 1 | Y200001- |
| 6 | | 20Y-54-72280 | • Sheet | 1 | Y200001- |
| 7 | | 205-03-71440 | • Sheet | 2 | Y200001- |
| 8 | | 20Y-54-72510 | • Sheet | 1 | Y200001- |
| 9 | | 20Y-54-72520 | • Sheet | 1 | Y200001- |
| 10 | | 20Y-54-72540 | • Sheet | 1 | Y200001- |
| 11 | | 20Y-54-72551 | • Sheet | 1 | Y200001- |
| 12 | | 20Y-54-72831 | • Sheet | 1 | Y200001- |
| 13 | | 20Y-54-73711 | • Sheet | 1 | Y200001- |
| 14 | | 20Y-54-75590 | • Sheet | 1 | Y200001- |
| | | 20Y-54-71613 | Cover . | 1 | Y200001- |
| 15 | C1 | | • Cover | 1 | Y200001- |
| 16 | | 20Y-54-71633 | • Sheet | 1 | Y200001- |
| 17 | | 01010-81225 | Bolt | 1 | Y200001- |
| 18 | | 01643-31232 | Washer | 1 | Y200001- |
| 19 | | 20Y-54-71670 | Plate | 1 | Y200001- |
| 20 | | 01010-81225 | Bolt | 2 | Y200001- |
| 21 | | 01643-31232 | Washer | 2 | Y200001- |
| 22 | | 21T-06-11350 | Tank Assembly | 1 | Y200001- |
| 23 | | 01010-80620 | Bolt | 4 | Y200001- |
| 24 | | 01643-30623 | Washer | 4 | Y200001- |
| 25 | | 20Y-06-15240 | Tank | 1 | Y200001- |
| 26 | | 205-03-71532 | • Cap | 1 | Y200001- |
| | | 205-03-71540 | •• Packing . | 1 | Y200001- |
| 27 | | 203-03-56650 | Bracket | 1 | Y200001- |
| 28 | | 01010-80820 | Bolt | 2 | Y200001- |
| 29 | | 01643-30823 | Washer | 2 | Y200001- |
| 30 | | 20Y-03-41880 | Hose . | 1 | Y200001- |
| 31 | | 206-03-43340 | Clip | 1 | Y200001- |
| 32 | | 01010-81230 | Bolt | 7 | Y200001- |
| 33 | | 01643-31232 | Washer | 7 | Y200001- |
| 34 | | 205-54-76411 | Collar | 2 | Y200001- |
| 35 | | 01010-81230 | Bolt | 2 | Y200001- |
| 36 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1150-008002 Machine Cab Partition, With Webasto Heater, Middle

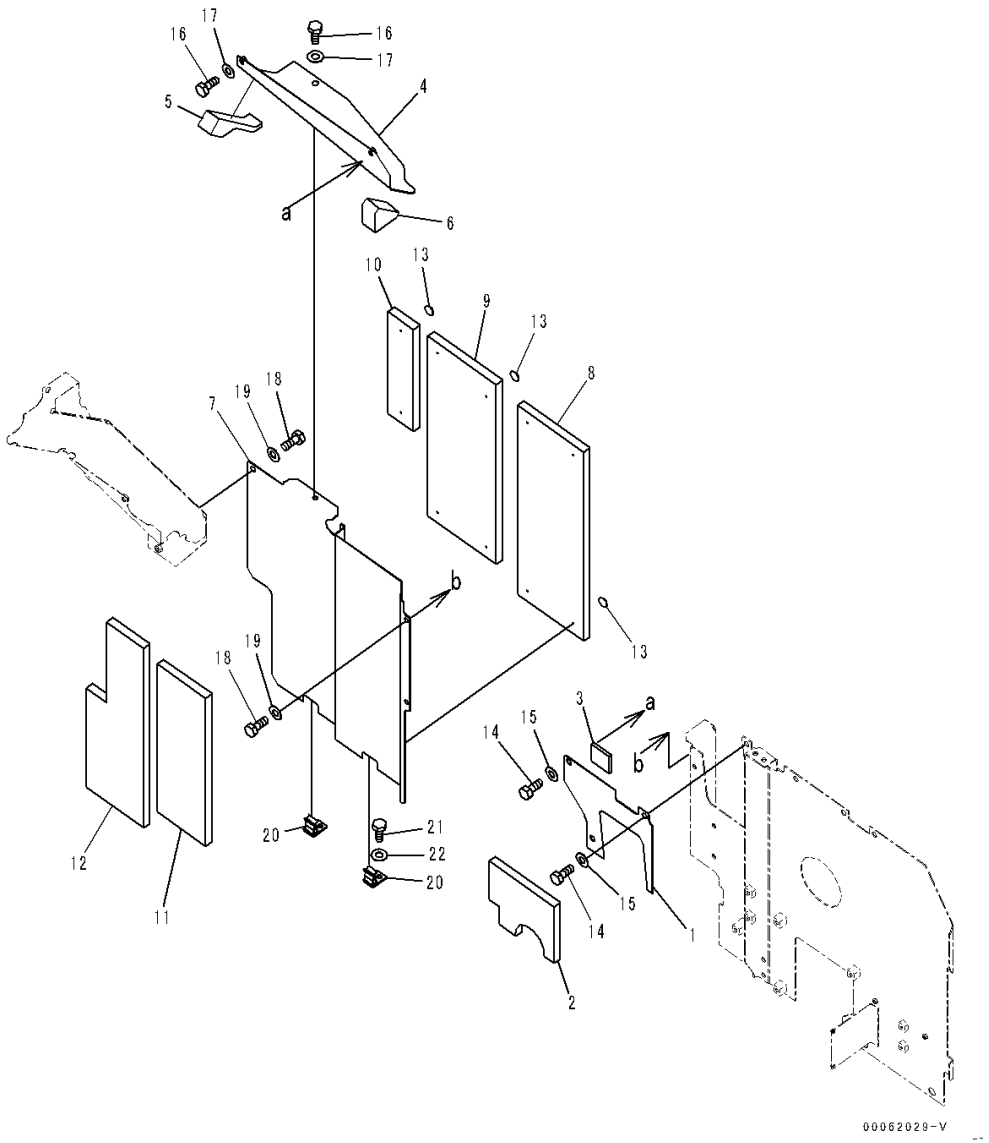


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-72322 | Cover . ..... | 1 | Y200001- |
| 1 | C1 | | • Cover. ..... | 1 | Y200001- |
| 2 | | 20Y-54-71991 | • Sheet. ..... | 1 | Y200001- |
| 3 | | 20Y-54-73830 | • Sheet. ..... | 1 | Y200001- |
| | | 20Y-54-76470 | Cover . ..... | 1 | Y200001- |
| 4 | C1 | | • Cover. ..... | 1 | Y200001- |
| 5 | | 20Y-54-72251 | • Sheet. ..... | 1 | Y200001- |
| 6 | | 20Y-54-72491 | • Sheet. ..... | 1 | Y200001- |
| | | 20Y-54-76760 | Cover . ..... | 1 | Y200001- |
| 7 | C1 | | • Cover. ..... | 1 | Y200001- |
| 8 | | 20Y-54-72221 | • Sheet. ..... | 1 | Y200001- |
| 9 | | 20Y-54-72231 | • Sheet. ..... | 1 | Y200001- |
| 10 | | 20Y-54-72351 | • Sheet. ..... | 1 | Y200001- |
| 11 | | 20Y-54-73390 | • Sheet. ..... | 1 | Y200001- |
| 12 | | 20Y-54-73411 | • Sheet. ..... | 1 | Y200001- |
| 13 | | 124-A62-1920 | • Cap. ..... | 10 | Y200001- |
| 14 | | 01010-81230 | Bolt. ..... | 3 | Y200001- |
| 15 | | 01643-31232 | Washer . ..... | 3 | Y200001- |
| 16 | | 01010-81230 | Bolt. ..... | 2 | Y200001- |
| 17 | | 01643-31232 | Washer . ..... | 2 | Y200001- |
| 18 | | 01010-81230 | Bolt. ..... | 3 | Y200001- |
| 19 | | 01643-31232 | Washer . ..... | 3 | Y200001- |
| 20 | | 20Y-54-12320 | Catcher . ..... | 2 | Y200001- |
| 21 | | 01010-81230 | Bolt. ..... | 2 | Y200001- |
| 22 | | 01643-31232 | Washer . ..... | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1150-008003 Machine Cab Partition, With Webasto Heater, Valve and Muffler Side

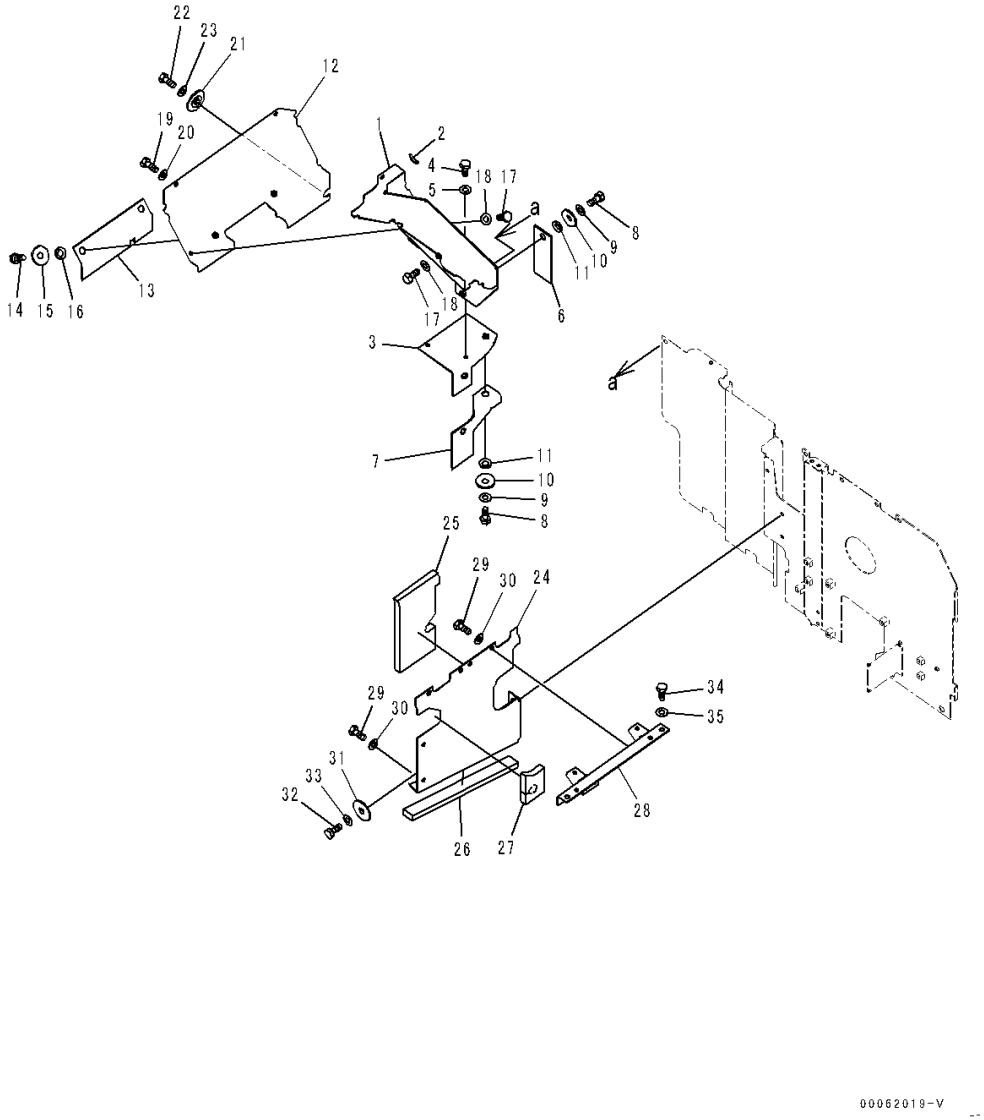


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-73850 | Cover Assembly | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-73781 | • Sheet | 1 | Y200001- |
| 3 | | 20Y-54-72481 | Cover | 1 | Y200001- |
| 4 | | 01010-81225 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 20Y-54-73760 | Sheet | 1 | Y200001- |
| 7 | | 20Y-54-73770 | Sheet | 1 | Y200001- |
| 8 | | 01010-81225 | Bolt | 3 | Y200001- |
| 9 | | 01643-31232 | Washer | 3 | Y200001- |
| 10 | | 124-54-26540 | Washer | 3 | Y200001- |
| 11 | | 01643-51232 | Washer | 3 | Y200001- |
| 12 | | 20Y-54-71561 | Cover | 1 | Y200001- |
| 13 | | 20Y-54-72470 | Sheet | 1 | Y200001- |
| 14 | | 01010-81225 | Bolt | 2 | Y200001- |
| 15 | | 124-54-26540 | Washer | 2 | Y200001- |
| 16 | | 01643-51232 | Washer | 2 | Y200001- |
| 17 | | 01010-81230 | Bolt | 3 | Y200001- |
| 18 | | 01643-31232 | Washer | 3 | Y200001- |
| 19 | | 01010-81230 | Bolt | 2 | Y200001- |
| 20 | | 01643-31232 | Washer | 2 | Y200001- |
| 21 | | 20Y-54-12550 | Collar | 1 | Y200001- |
| 22 | | 01010-81230 | Bolt | 1 | Y200001- |
| 23 | | 01643-31232 | Washer | 1 | Y200001- |
| 24 | | 20Y-54-71572 | Cover | 1 | Y200001- |
| 25 | | 20Y-54-71950 | • Sheet | 1 | Y200001- |
| 26 | | 20Y-54-71962 | • Sheet | 1 | Y200001- |
| 27 | | 206-54-71460 | • Sheet | 1 | Y200001- |
| 28 | | 20Y-54-71262 | Frame | 1 | Y200001- |
| 29 | | 01010-81230 | Bolt | 6 | Y200001- |
| 30 | | 01643-31232 | Washer | 6 | Y200001- |
| 31 | | 203-54-62670 | Collar | 2 | Y200001- |
| 32 | | 01010-81230 | Bolt | 2 | Y200001- |
| 33 | | 01643-31232 | Washer | 2 | Y200001- |
| 34 | | 01010-81230 | Bolt | 2 | Y200001- |
| 35 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1210-002001 Machine Cab Cover, Cover

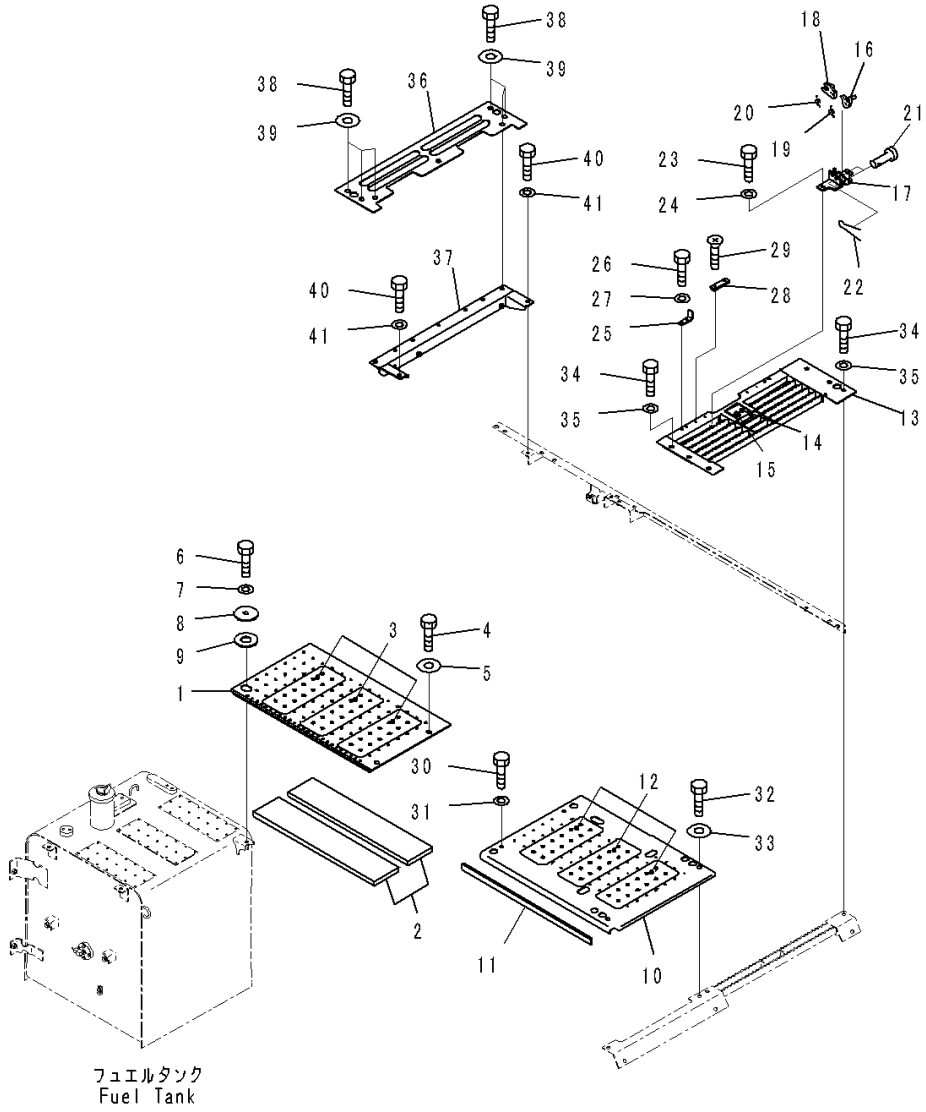


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-76490 | Cover . | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-76230 | • Sheet | 2 | Y200001- |
| 3 | | 20Y-00-42140 | Plate | 3 | Y200001- |
| 4 | | 01010-81230 | Bolt | 2 | Y200001- |
| 5 | | 175-54-34170 | Washer | 2 | Y200001- |
| 6 | | 01010-81230 | Bolt | 1 | Y200001- |
| 7 | | 01643-31232 | Washer | 1 | Y200001- |
| 8 | | 20Y-54-61990 | Collar . | 1 | Y200001- |
| 9 | | 20Y-54-61790 | Plate | 1 | Y200001- |
| | | 20Y-54-73741 | Cover . | 1 | Y200001- |
| 10 | C1 | | • Cover | 1 | Y200001- |
| 11 | | 20Y-54-73730 | • Sheet | 1 | Y200001- |
| 12 | | 20Y-00-42140 | Plate | 3 | Y200001- |
| 13 | | 20Y-54-71723 | Cover . | 1 | Y200001- |
| 14 | | 20Y-54-25852 | • Lock,Welded | 1 | Y200001- |
| 15 | | 20Y-54-73190 | Lock Assembly | 1 | Y200001- |
| 16 | | 20Y-54-75910 | Lever | 1 | Y200001- |
| 17 | | 20Y-54-75930 | Bracket | 1 | Y200001- |
| 18 | | 20Y-54-75920 | Lever | 1 | Y200001- |
| 19 | | 21K-54-26351 | Spring | 1 | Y200001- |
| 20 | | 20X-54-21460 | Spring | 1 | Y200001- |
| 21 | | 04205-11038 | Pin | 2 | Y200001- |
| 22 | | 04050-13020 | Pin, Cotter | 2 | Y200001- |
| 23 | | 01010-81025 | Bolt | 2 | Y200001- |
| 24 | | 01643-31032 | Washer | 2 | Y200001- |
| 25 | | 20Y-54-27182 | Bracket | 2 | Y200001- |
| 26 | | 01010-81025 | Bolt | 4 | Y200001- |
| 27 | | 01643-31032 | Washer | 4 | Y200001- |
| 28 | | 205-54-68440 | Plate | 2 | Y200001- |
| 29 | | 01224-40616 | Screw | 4 | Y200001- |
| 30 | | 01010-81230 | Bolt | 2 | Y200001- |
| 31 | | 01643-31232 | Washer | 2 | Y200001- |
| 32 | | 01010-81230 | Bolt | 2 | Y200001- |
| 33 | | 175-54-34170 | Washer | 2 | Y200001- |
| 34 | | 01010-81230 | Bolt | 6 | Y200001- |
| 35 | | 01643-31232 | Washer | 6 | Y200001- |
| 36 | | 20Y-54-71731 | Cover . | 1 | Y200001- |
| 37 | | 20Y-54-71172 | Frame | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. M1210-002001 Machine Cab Cover, Cover

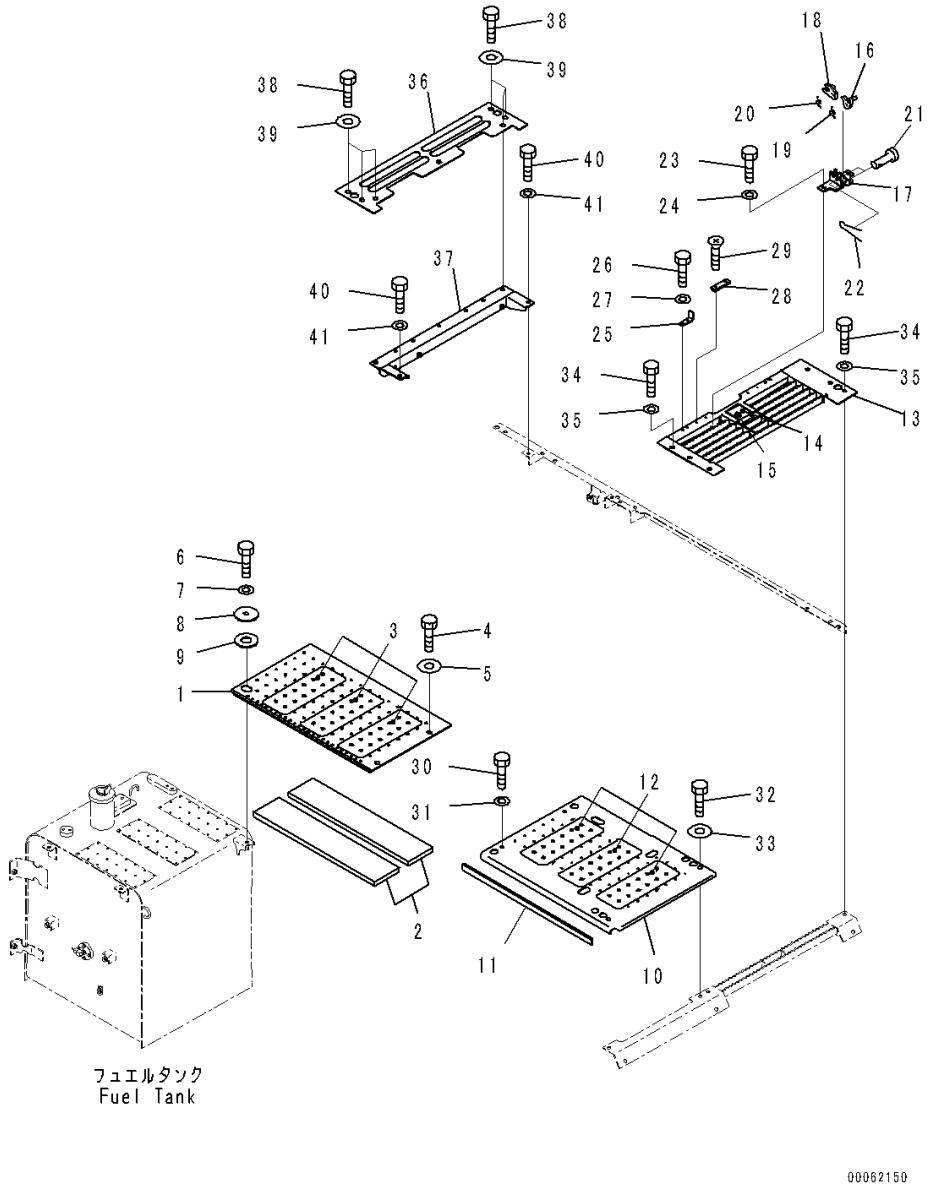


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | 01010-81230 | Bolt | 7 | Y200001- |
| 39 | | 175-54-34170 | Washer | 7 | Y200001- |
| 40 | | 01010-81230 | Bolt | 2 | Y200001- |
| 41 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1210-006001 Machine Cab Cover, With Pre-cleaner, Cover

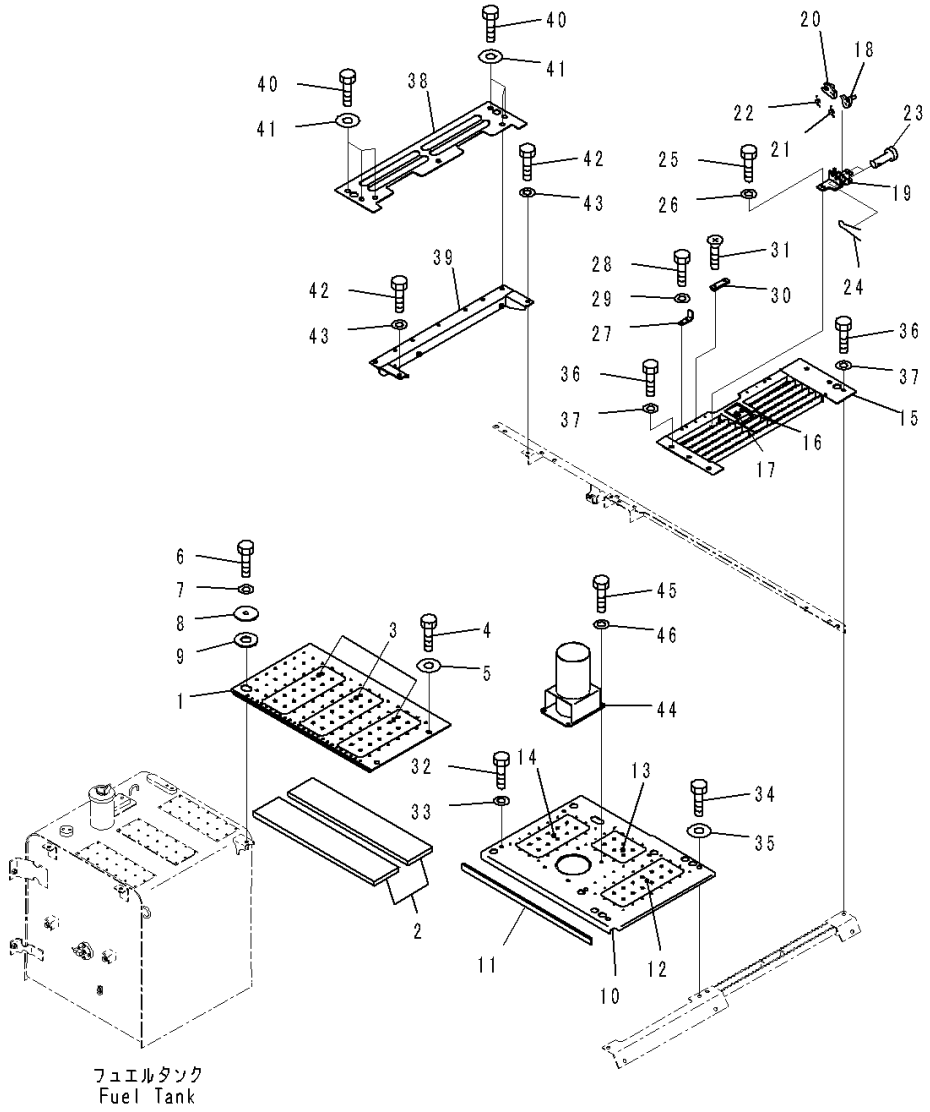


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-76490 | Cover . | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-76230 | • Sheet | 2 | Y200001- |
| 3 | | 20Y-00-42140 | Plate | 3 | Y200001- |
| 4 | | 01010-81230 | Bolt | 2 | Y200001- |
| 5 | | 175-54-34170 | Washer | 2 | Y200001- |
| 6 | | 01010-81230 | Bolt | 1 | Y200001- |
| 7 | | 01643-31232 | Washer | 1 | Y200001- |
| 8 | | 20Y-54-61990 | Collar . | 1 | Y200001- |
| 9 | | 20Y-54-61790 | Plate | 1 | Y200001- |
| | | 20Y-54-74451 | Cover . | 1 | Y200001- |
| 10 | C1 | | • Cover | 1 | Y200001- |
| 11 | | 20Y-54-73730 | • Sheet | 1 | Y200001- |
| 12 | | 20Y-00-42140 | Plate | 1 | Y200001- |
| 13 | | 22U-00-28150 | Plate | 1 | Y200001- |
| 14 | | 207-00-76250 | Plate | 1 | Y200001- |
| 15 | | 20Y-54-71723 | Cover . | 1 | Y200001- |
| 16 | | 20Y-54-25852 | • Lock,Welded | 1 | Y200001- |
| 17 | | 20Y-54-73190 | Lock Assembly | 1 | Y200001- |
| 18 | | 20Y-54-75910 | Lever | 1 | Y200001- |
| 19 | | 20Y-54-75930 | Bracket | 1 | Y200001- |
| 20 | | 20Y-54-75920 | Lever | 1 | Y200001- |
| 21 | | 21K-54-26351 | Spring | 1 | Y200001- |
| 22 | | 20X-54-21460 | Spring | 1 | Y200001- |
| 23 | | 04205-11038 | Pin | 2 | Y200001- |
| 24 | | 04050-13020 | Pin, Cotter | 2 | Y200001- |
| 25 | | 01010-81025 | Bolt | 2 | Y200001- |
| 26 | | 01643-31032 | Washer | 2 | Y200001- |
| 27 | | 20Y-54-27182 | Bracket | 2 | Y200001- |
| 28 | | 01010-81025 | Bolt | 4 | Y200001- |
| 29 | | 01643-31032 | Washer | 4 | Y200001- |
| 30 | | 205-54-68440 | Plate | 2 | Y200001- |
| 31 | | 01224-40616 | Screw | 4 | Y200001- |
| 32 | | 01010-81230 | Bolt | 2 | Y200001- |
| 33 | | 01643-31232 | Washer | 2 | Y200001- |
| 34 | | 01010-81230 | Bolt | 2 | Y200001- |
| 35 | | 175-54-34170 | Washer | 2 | Y200001- |
| 36 | | 01010-81230 | Bolt | 6 | Y200001- |
| 37 | | 01643-31232 | Washer | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. M1210-006001 Machine Cab Cover, With Pre-cleaner, Cover

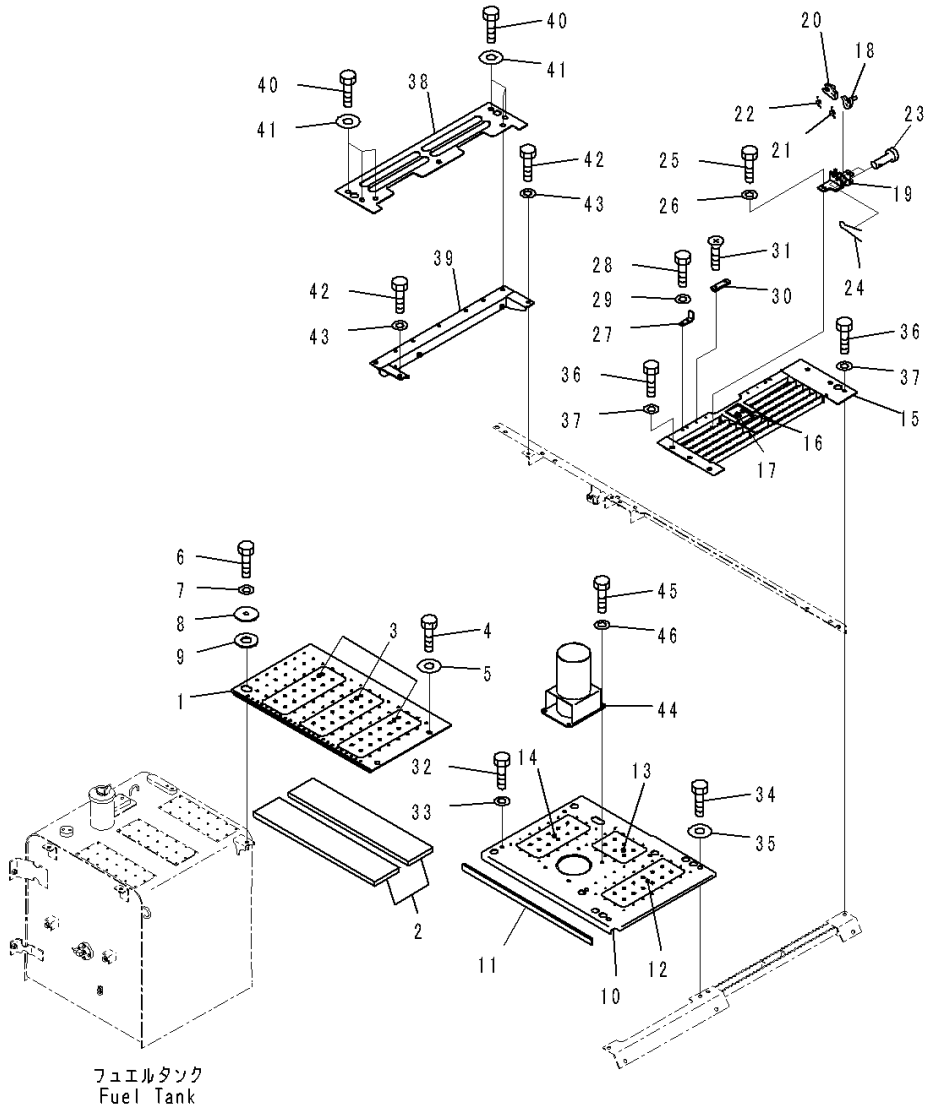


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | 20Y-54-71731 | Cover . | 1 | Y200001- |
| 39 | | 20Y-54-71172 | Frame | 1 | Y200001- |
| 40 | | 01010-81230 | Bolt | 7 | Y200001- |
| 41 | | 175-54-34170 | Washer | 7 | Y200001- |
| 42 | | 01010-81230 | Bolt | 2 | Y200001- |
| 43 | | 01643-31232 | Washer | 2 | Y200001- |
| 44 | | 206-01-61130 | Duct . | 1 | Y200001- |
| 45 | | 01010-81230 | Bolt | 4 | Y200001- |
| 46 | | 01643-31232 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. M1210-006002 Machine Cab Cover, With Pre-cleaner, Pre-Cleaner

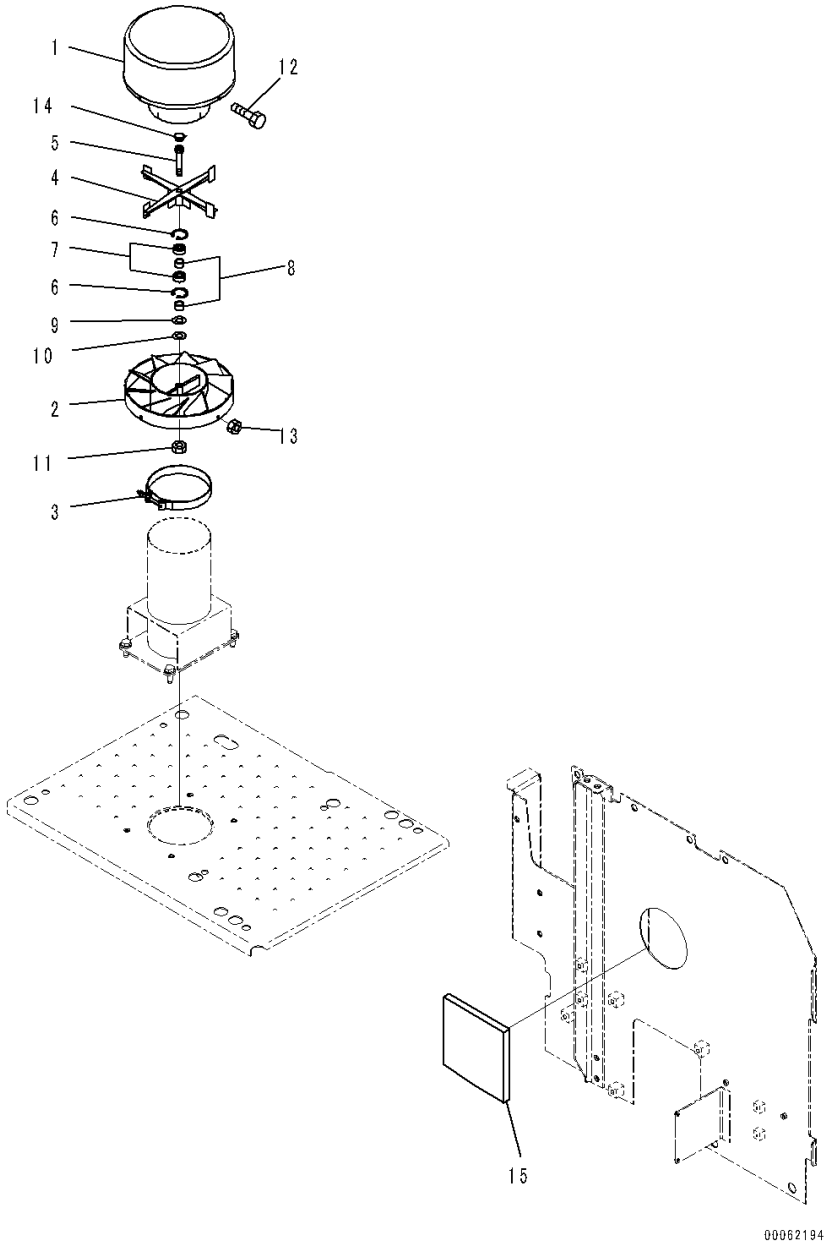


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 423-U12-3100 | Pre-cleaner Assembly. | 1 | Y200001- |
| 1 | | 423-U12-3120 | • Hood | 1 | Y200001- |
| 2 | | 423-U12-3130 | • Body | 1 | Y200001- |
| 3 | | 421-U12-3140 | • Clamp | 1 | Y200001- |
| 4 | | 423-U12-3150 | • Rotor | 1 | Y200001- |
| 5 | | 421-U12-3160 | • Bolt | 1 | Y200001- |
| 6 | | 421-U12-3170 | • Ring, Snap | 2 | Y200001- |
| 7 | | 421-U12-3180 | • Bearing, Ball | 2 | Y200001- |
| 8 | | 421-U12-3190 | • Bushing, Spacer | 2 | Y200001- |
| 9 | | 421-U12-3210 | • Washer | 1 | Y200001- |
| 10 | | 421-U12-3220 | • Washer, Flat | 1 | Y200001- |
| 11 | | 421-U12-3230 | • Nut | 1 | Y200001- |
| 12 | | 421-U12-3240 | • Bolt | 4 | Y200001- |
| 13 | | 421-U12-3250 | • Nut | 4 | Y200001- |
| 14 | | 421-U12-3260 | • Plug, Plastic. | 1 | Y200001- |
| 15 | | 20Y-54-74530 | Sheet | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. M1210-004001 Machine Cab Cover, 2-actuator

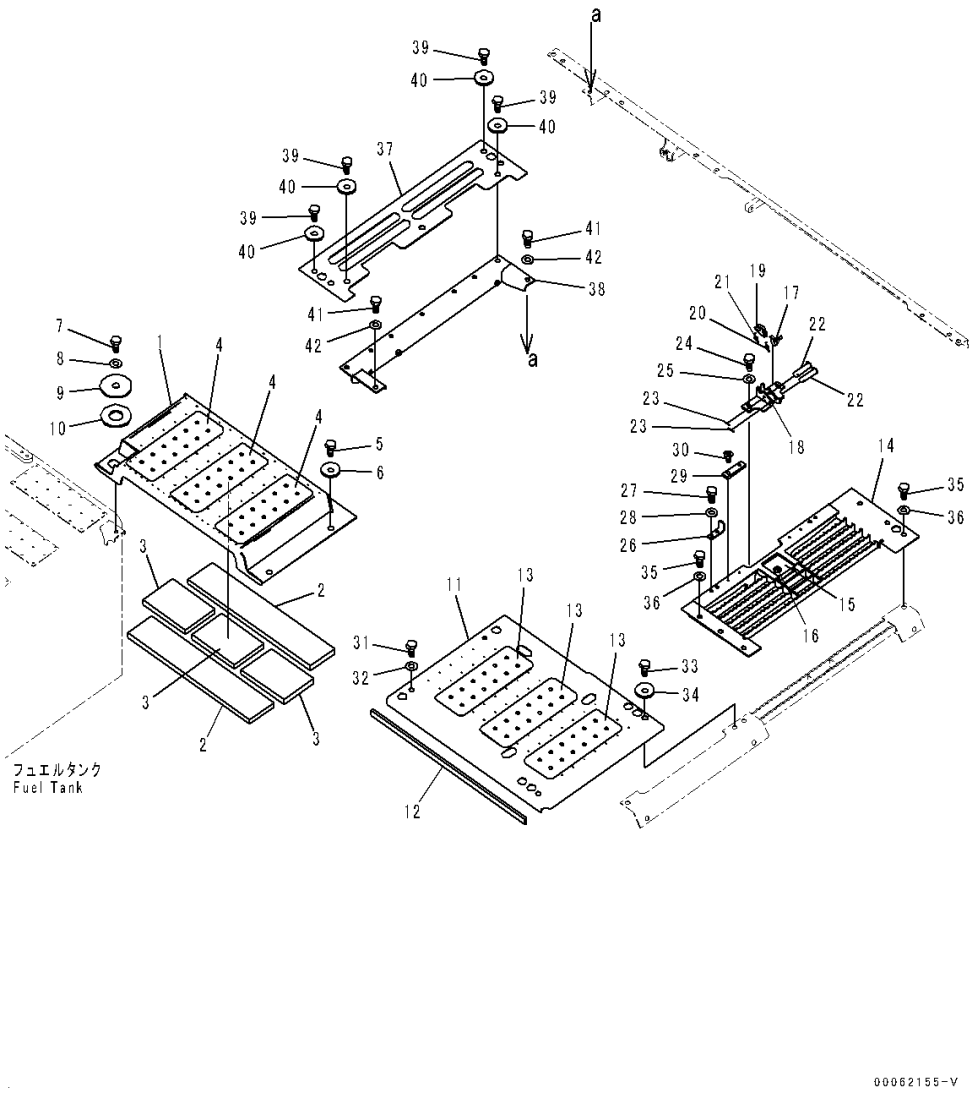


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-76510 | Cover | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-76520 | • Sheet | 2 | Y200001- |
| 3 | | 20Y-54-76530 | • Sheet | 3 | Y200001- |
| 4 | | 20Y-00-42140 | Plate | 3 | Y200001- |
| 5 | | 01010-81230 | Bolt | 2 | Y200001- |
| 6 | | 175-54-34170 | Washer | 2 | Y200001- |
| 7 | | 01010-81230 | Bolt | 1 | Y200001- |
| 8 | | 01643-31232 | Washer | 1 | Y200001- |
| 9 | | 20Y-54-61990 | Collar | 1 | Y200001- |
| 10 | | 20Y-54-61790 | Plate | 1 | Y200001- |
| | | 20Y-54-73741 | Cover | 1 | Y200001- |
| 11 | C1 | | • Cover | 1 | Y200001- |
| 12 | | 20Y-54-73730 | • Sheet | 1 | Y200001- |
| 13 | | 20Y-00-42140 | Plate | 3 | Y200001- |
| 14 | | 20Y-54-71723 | Cover | 1 | Y200001- |
| 15 | | 20Y-54-25852 | • Lock,Welded | 1 | Y200001- |
| 16 | | 20Y-54-73190 | Lock Assembly | 1 | Y200001- |
| 17 | | 20Y-54-75910 | Lever | 1 | Y200001- |
| 18 | | 20Y-54-75930 | Bracket | 1 | Y200001- |
| 19 | | 20Y-54-75920 | Lever | 1 | Y200001- |
| 20 | | 21K-54-26351 | Spring | 1 | Y200001- |
| 21 | | 20X-54-21460 | Spring | 1 | Y200001- |
| 22 | | 04205-11038 | Pin | 2 | Y200001- |
| 23 | | 04050-13020 | Pin, Cotter | 2 | Y200001- |
| 24 | | 01010-81025 | Bolt | 2 | Y200001- |
| 25 | | 01643-31032 | Washer | 2 | Y200001- |
| 26 | | 20Y-54-27182 | Bracket | 2 | Y200001- |
| 27 | | 01010-81025 | Bolt | 4 | Y200001- |
| 28 | | 01643-31032 | Washer | 4 | Y200001- |
| 29 | | 205-54-68440 | Plate | 2 | Y200001- |
| 30 | | 01224-40616 | Screw | 4 | Y200001- |
| 31 | | 01010-81230 | Bolt | 2 | Y200001- |
| 32 | | 01643-31232 | Washer | 2 | Y200001- |
| 33 | | 01010-81230 | Bolt | 2 | Y200001- |
| 34 | | 175-54-34170 | Washer | 2 | Y200001- |
| 35 | | 01010-81230 | Bolt | 6 | Y200001- |
| 36 | | 01643-31232 | Washer | 6 | Y200001- |
| 37 | | 20Y-54-71731 | Cover | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. M1210-004001 Machine Cab Cover, 2-actuator

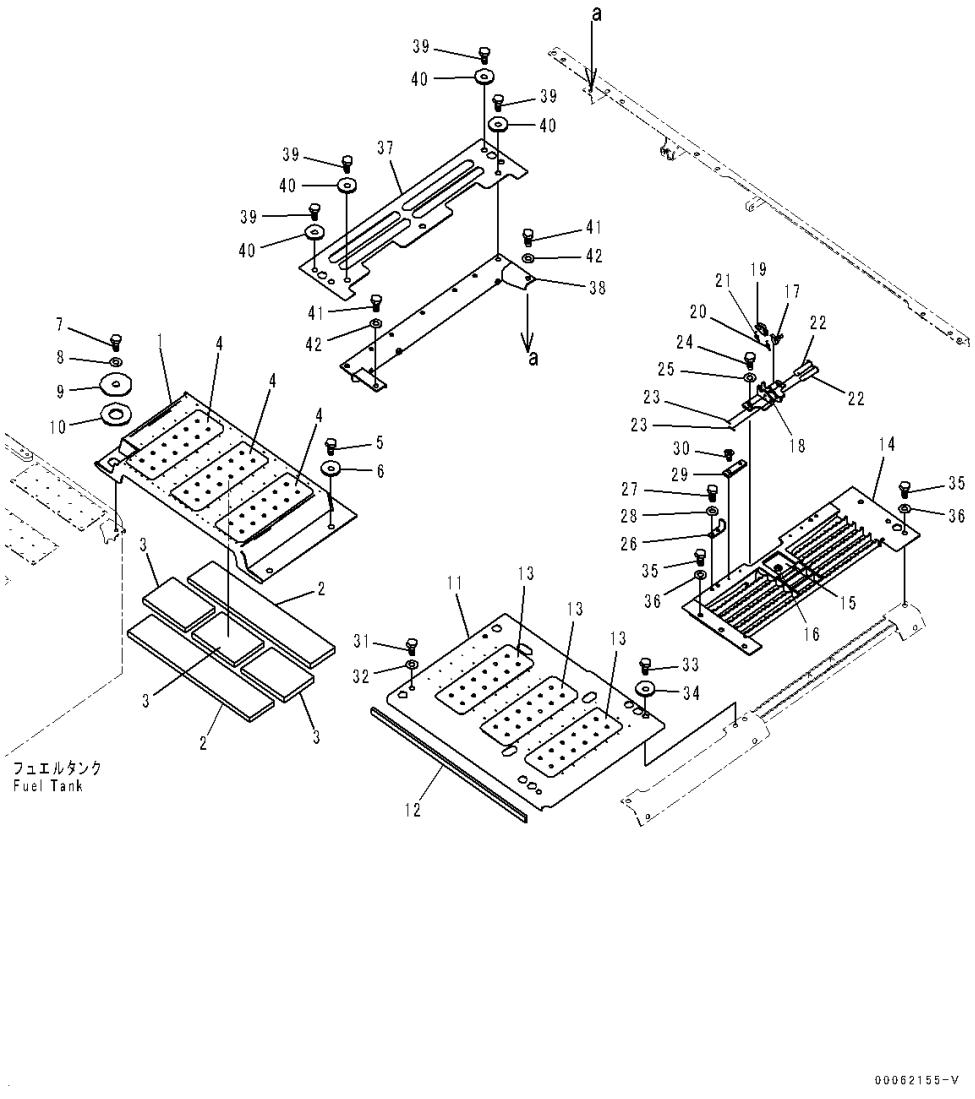


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | 20Y-54-71172 | Frame | 1 | Y200001- |
| 39 | | 01010-81230 | Bolt | 7 | Y200001- |
| 40 | | 175-54-34170 | Washer | 7 | Y200001- |
| 41 | | 01010-81230 | Bolt | 2 | Y200001- |
| 42 | | 01643-31232 | Washer | 2 | Y200001- |


https://truckmanualshub.com/

# FIG. M1220-001001 Battery Case

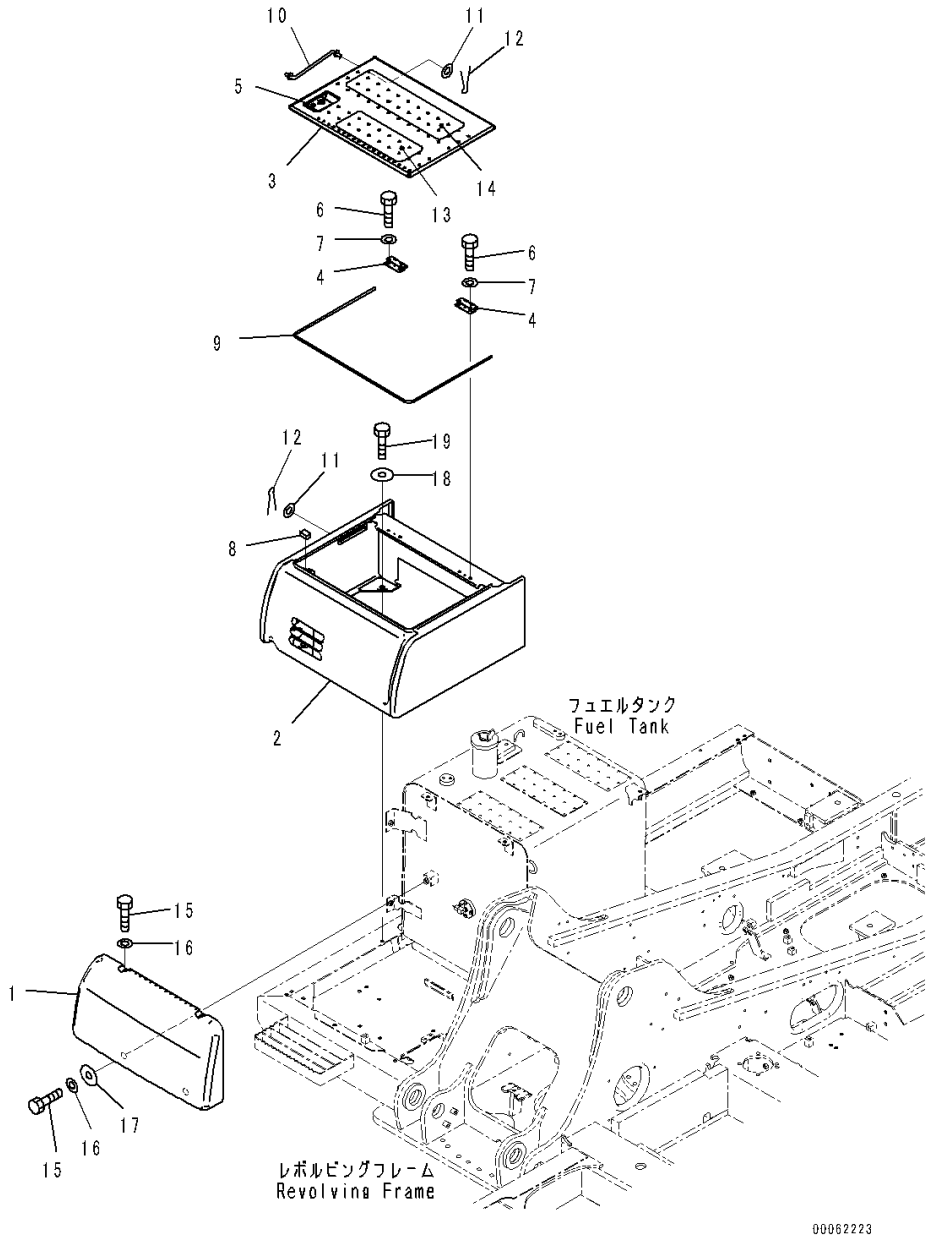


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-74143 | Cover . | 1 | Y200001- |
| 2 | | 20Y-54-74122 | Cover . | 1 | Y200001- |
| 3 | | 20Y-54-74133 | Cover . | 1 | Y200001- |
| 4 | | 20Y-54-74161 | • Hinge,Welded | 2 | Y200001- |
| 5 | | 20Y-54-74172 | • Lock,Welded | 1 | Y200001- |
| 6 | | 01010-81020 | Bolt | 4 | Y200001- |
| 7 | | 01643-31032 | Washer | 4 | Y200001- |
| 8 | | 20Y-54-29680 | Sheet | 1 | Y200001- |
| 9 | | 20Y-54-29660 | Seal | 1 | Y200001- |
| 10 | | 203-54-56630 | Rod | 1 | Y200001- |
| 11 | | 01643-30623 | Washer | 2 | Y200001- |
| 12 | | 04050-11612 | Pin, Cotter | 2 | Y200001- |
| 13 | | 20Y-00-42140 | Plate | 1 | Y200001- |
| 14 | | 209-00-41550 | Plate | 1 | Y200001- |
| 15 | | 01010-81230 | Bolt | 4 | Y200001- |
| 16 | | 01643-31232 | Washer | 4 | Y200001- |
| 17 | | 20Y-54-19930 | Collar . | 2 | Y200001- |
| 18 | | 175-54-34170 | Washer | 4 | Y200001- |
| 19 | | 01010-81230 | Bolt | 4 | Y200001- |


# FIG. M1220-003001 Battery Case, For Fuel Refill Pump

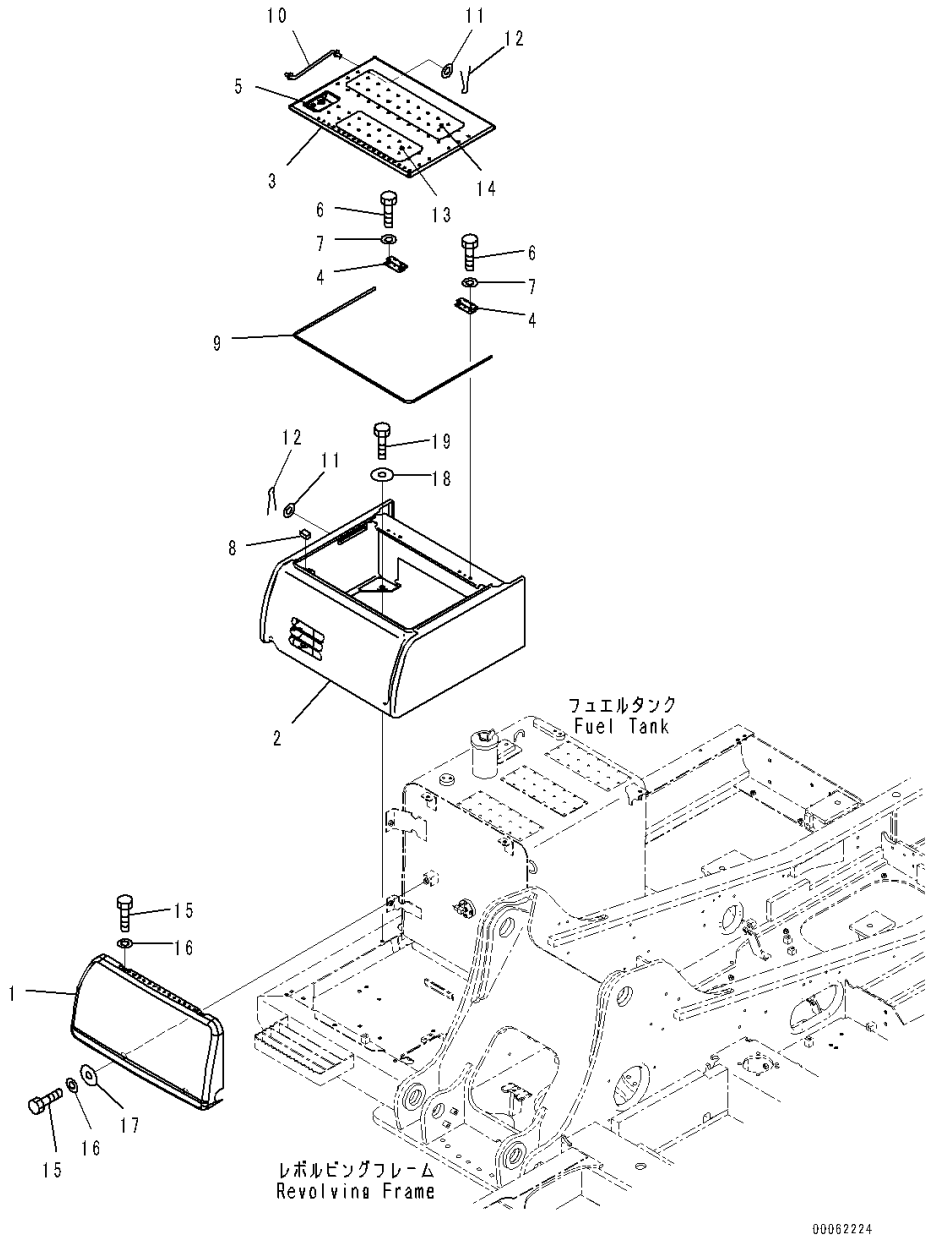


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-73960 | Cover . | 1 | Y200001- |
| 2 | | 20Y-54-74122 | Cover . | 1 | Y200001- |
| 3 | | 20Y-54-74133 | Cover . | 1 | Y200001- |
| 4 | | 20Y-54-74161 | • Hinge,Welded | 2 | Y200001- |
| 5 | | 20Y-54-74172 | • Lock,Welded | 1 | Y200001- |
| 6 | | 01010-81020 | Bolt | 4 | Y200001- |
| 7 | | 01643-31032 | Washer | 4 | Y200001- |
| 8 | | 20Y-54-29680 | Sheet | 1 | Y200001- |
| 9 | | 20Y-54-29660 | Seal | 1 | Y200001- |
| 10 | | 203-54-56630 | Rod | 1 | Y200001- |
| 11 | | 01643-30623 | Washer | 2 | Y200001- |
| 12 | | 04050-11612 | Pin, Cotter | 2 | Y200001- |
| 13 | | 20Y-00-42140 | Plate | 1 | Y200001- |
| 14 | | 209-00-41550 | Plate | 1 | Y200001- |
| 15 | | 01010-81230 | Bolt | 4 | Y200001- |
| 16 | | 01643-31232 | Washer | 4 | Y200001- |
| 17 | | 20Y-54-19930 | Collar . | 2 | Y200001- |
| 18 | | 175-54-34170 | Washer | 4 | Y200001- |
| 19 | | 01010-81230 | Bolt | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. M1310-001001 Handrail

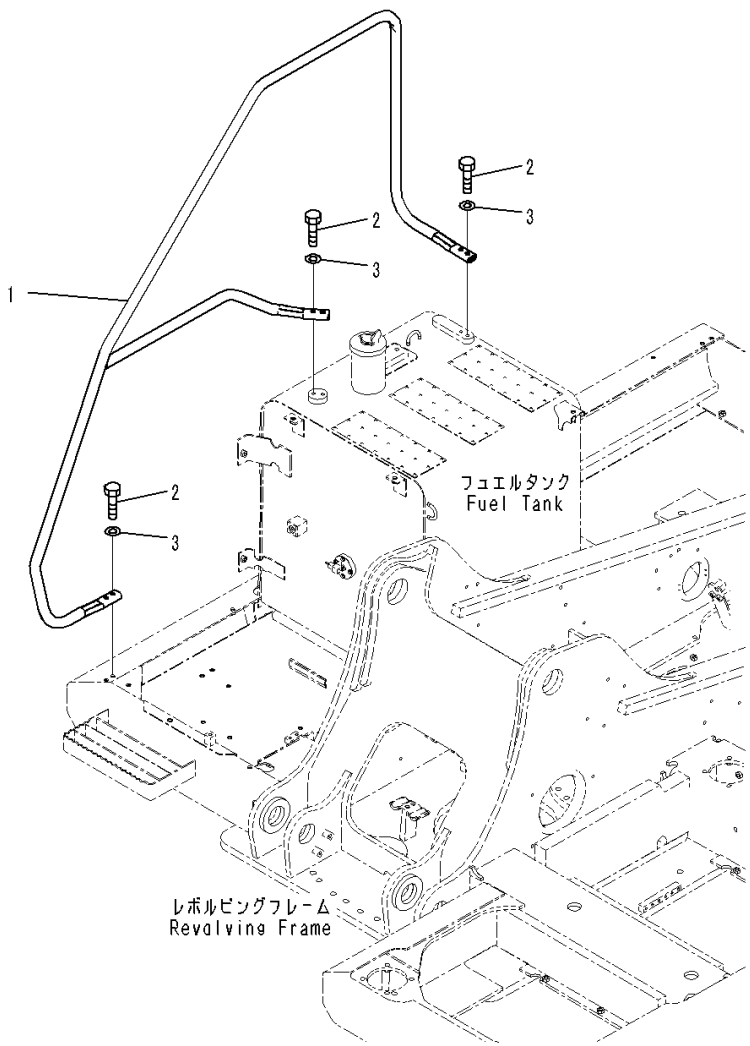


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 207-54-75220 | Handrail | 1 | Y200001- |
| 2 | | 01010-81240 | Bolt | 6 | Y200001- |
| 3 | | 01643-31232 | Washer | 6 | Y200001- |

https://truckmanualshub.com/

# FIG. M1410-004001 Rearview Mirror, LHS

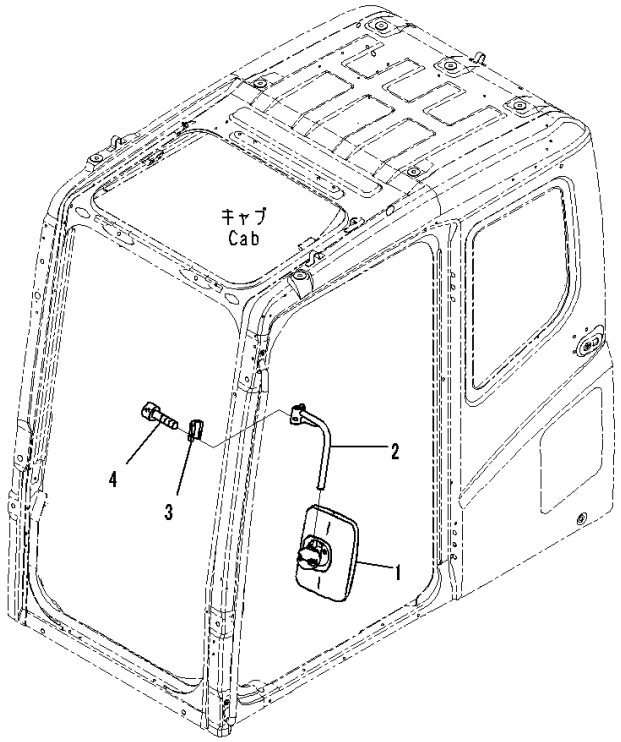



JH004133

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 2A5-54-13420 | Mirror, Rearview | 1 | Y200001- |
| 2 | | 20Y-54-74260 | Support | 1 | Y200001- |
| 3 | | 20Y-54-35430 | Clamp | 1 | Y200001- |
| 4 | | 01252-71030 | Bolt | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1420-008001 Rearview Mirror, RHS

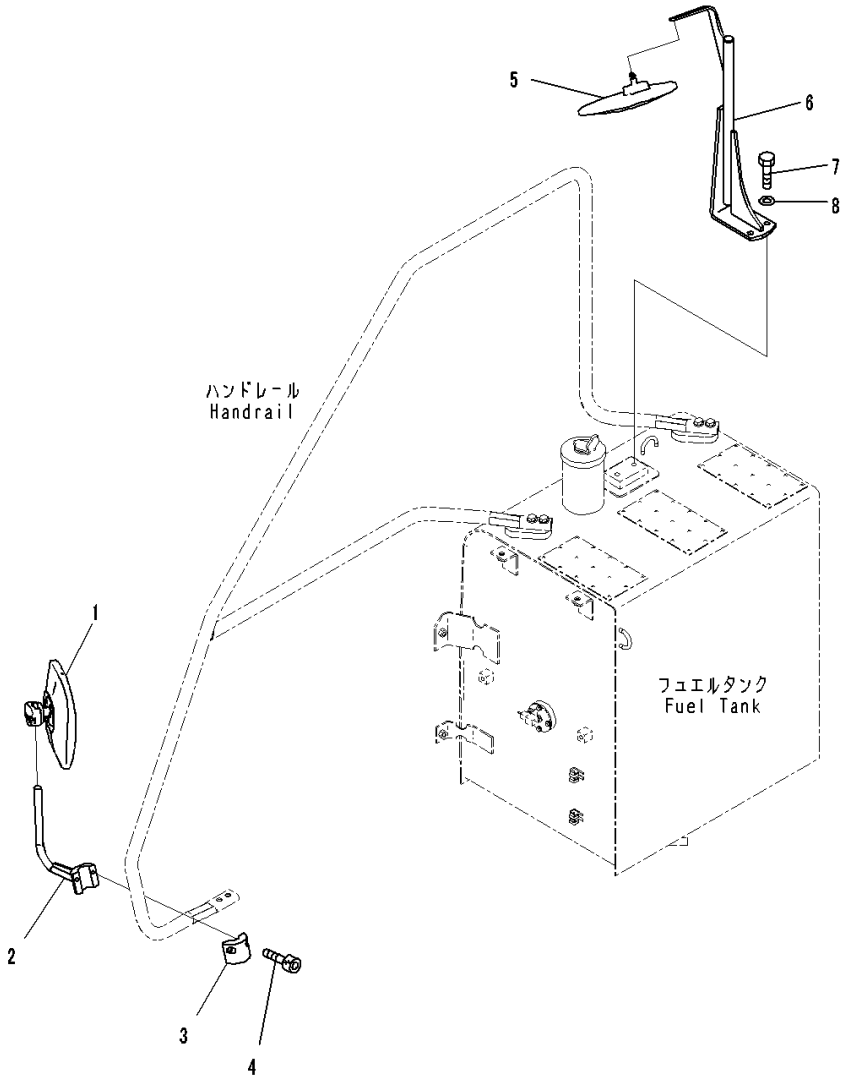


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 2A5-54-13420 | Mirror, Rearview. | 1 | Y200001- |
| 2 | | 20Y-54-74270 | Support | 1 | Y200001- |
| 3 | | 20Y-54-61630 | Clamp | 1 | Y200001- |
| 4 | | 01252-71030 | Bolt | 2 | Y200001- |
| 5 | | 207-54-75710 | Mirror | 1 | Y200001- |
| 6 | | 20Y-54-74240 | Bracket | 1 | Y200001- |
| 7 | | 01010-81230 | Bolt | 2 | Y200001- |
| 8 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1430-003001 Rear View Mirror, Counter Weight

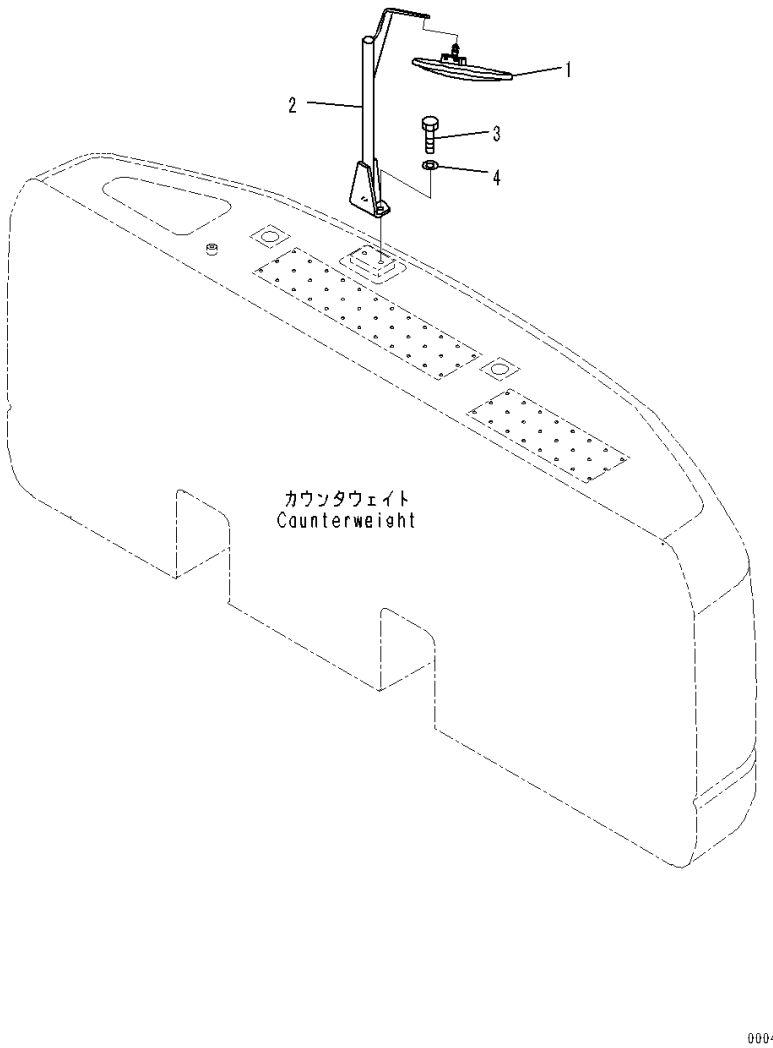


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 207-54-75710 | Mirror | 1 | Y200001- |
| 2 | | 20Y-54-74310 | Bracket | 1 | Y200001- |
| 3 | | 01010-81230 | Bolt | 2 | Y200001- |
| 4 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1510-002001 Counterweight, 3730kg

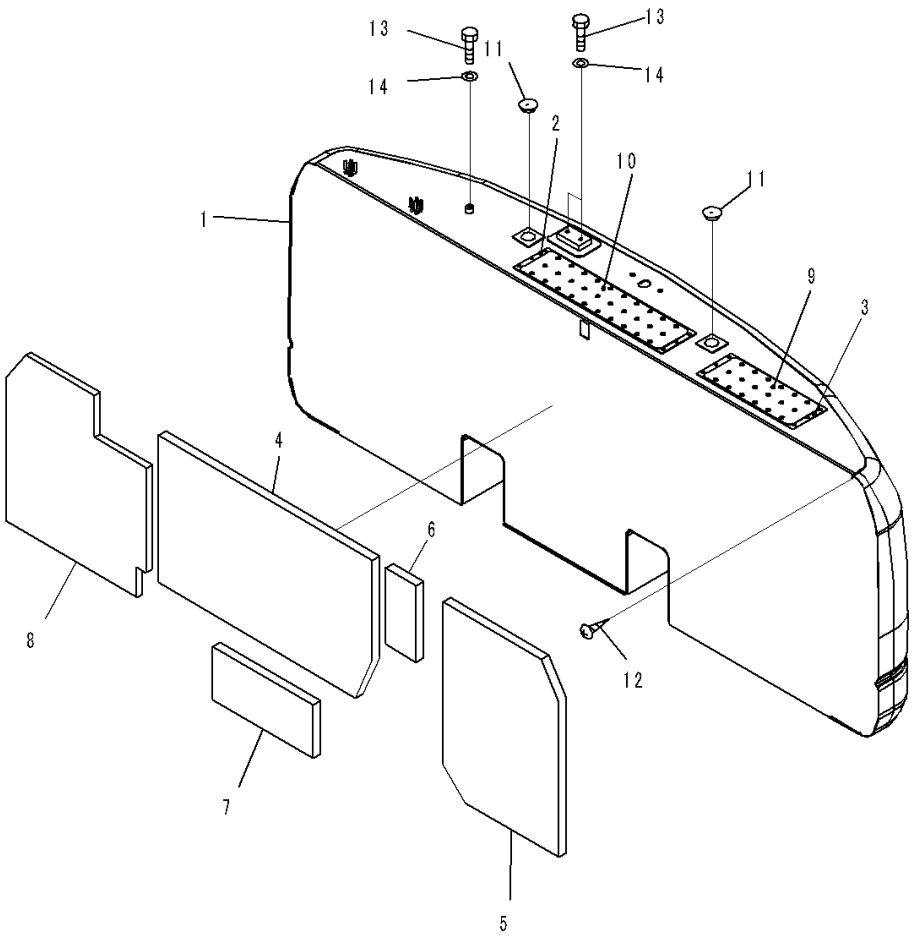


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-46-54612 | Weight | 1 | Y200001- |
| 1 | C1 | | • Weight . | 1 | Y200001- |
| 2 | | 20Y-46-54313 | •• Plate,Welded . | 1 | Y200001- |
| 3 | | 20Y-46-54323 | •• Plate,Welded . | 1 | Y200001- |
| 4 | | 20Y-46-54141 | • Sheet . | 1 | Y200001- |
| 5 | | 20Y-46-54151 | • Sheet . | 1 | Y200001- |
| 6 | | 20Y-46-54160 | • Sheet . | 1 | Y200001- |
| 7 | | 20Y-46-54181 | • Sheet . | 1 | Y200001- |
| 8 | | 20Y-46-54191 | • Sheet . | 1 | Y200001- |
| 9 | | 20Y-00-42150 | Plate | 1 | Y200001- |
| 10 | | 20Y-00-42160 | Plate | 1 | Y200001- |
| 11 | | 20Y-46-11270 | Cap . | 2 | Y200001- |
| 12 | | 01370-00508 | Screw | 1 | Y200001- |
| 13 | | 01010-81220 | Bolt | 3 | Y200001- |
| 14 | | 01643-31232 | Washer | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. M1520-001001 Counterweight Mounts

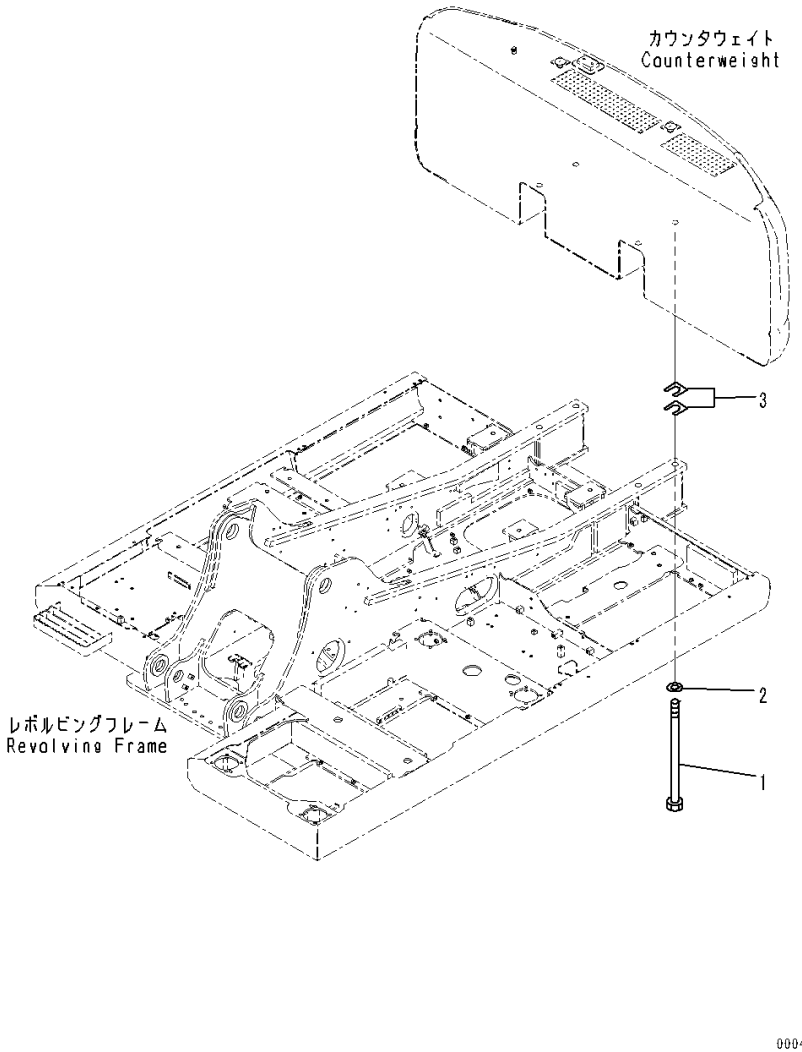


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-46-54130 | Bolt | 4 | Y200001- |
| 2 | | 207-46-32220 | Washer | 4 | Y200001- |
| 3 | | 20Y-46-11410 | Plate, T=1.6mm . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1810-006001 Under Cover, With Water Separator And Additional Fuel Filter

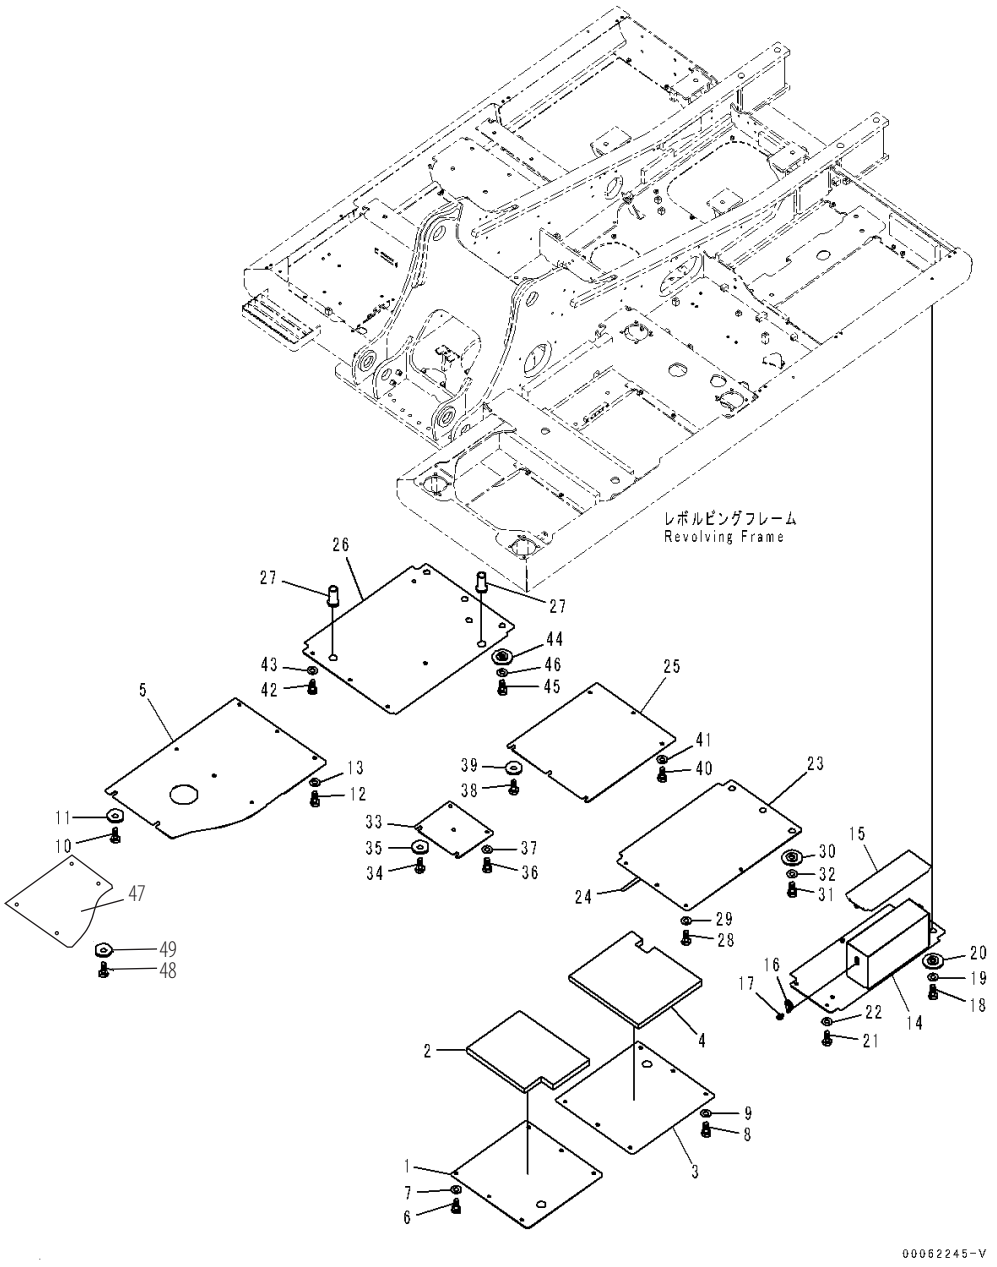


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-73791 | Cover | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-61770 | • Sheet | 1 | Y200001- |
| | | 20Y-54-73810 | Cover | 1 | Y200001- |
| 3 | C1 | | • Cover | 1 | Y200001- |
| 4 | | 20Y-54-61780 | • Sheet | 1 | Y200001- |
| 5 | | 20Y-54-71863 | Cover | 1 | Y200001- |
| 6 | | 01010-81230 | Bolt | 6 | Y200001- |
| 7 | | 01643-31232 | Washer | 6 | Y200001- |
| 8 | | 01010-81230 | Bolt | 7 | Y200001- |
| 9 | | 01643-31232 | Washer | 7 | Y200001- |
| 10 | | 01010-81230 | Bolt | 2 | Y200001- |
| 11 | | 175-54-34170 | Washer | 2 | Y200001- |
| 12 | | 01010-81230 | Bolt | 5 | Y200001- |
| 13 | | 01643-31232 | Washer | 5 | Y200001- |
| | | 20Y-54-71811 | Cover | 1 | Y200001- |
| 14 | C1 | | • Cover | 1 | Y200001- |
| 15 | | 20Y-54-73870 | • Cover | 1 | Y200001- |
| 16 | | 195-57-11530 | • Clip, Catch | 1 | Y200001- |
| 17 | | 01023-20512 | • Screw | 3 | Y200001- |
| 18 | | 01010-81230 | Bolt | 2 | Y200001- |
| 19 | | 01643-31232 | Washer | 2 | Y200001- |
| 20 | | 20Y-54-12550 | Collar | 2 | Y200001- |
| 21 | | 01010-81230 | Bolt | 2 | Y200001- |
| 22 | | 01643-31232 | Washer | 2 | Y200001- |
| 23 | | 20Y-54-71831 | Cover | 1 | Y200001- |
| 24 | | 20Y-54-61890 | • Sheet | 1 | Y200001- |
| 25 | | 20Y-54-71851 | Cover | 1 | Y200001- |
| | | 20Y-54-74760 | Cover | 1 | Y200001- |
| 26 | C1 | | • Cover | 1 | Y200001- |
| 27 | | 22U-54-24760 | • Grommet | 2 | Y200001- |
| 28 | | 01010-81230 | Bolt | 4 | Y200001- |
| 29 | | 01643-31232 | Washer | 4 | Y200001- |
| 30 | | 20Y-54-12550 | Collar | 3 | Y200001- |
| 31 | | 01010-81230 | Bolt | 3 | Y200001- |
| 32 | | 01643-31232 | Washer | 3 | Y200001- |
| 33 | | 20Y-54-61870 | Cover | 1 | Y200001- |
| 34 | | 01010-81230 | Bolt | 2 | Y200001- |
| 35 | | 175-54-34170 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1810-006001 Under Cover, With Water Separator And Additional Fuel Filter

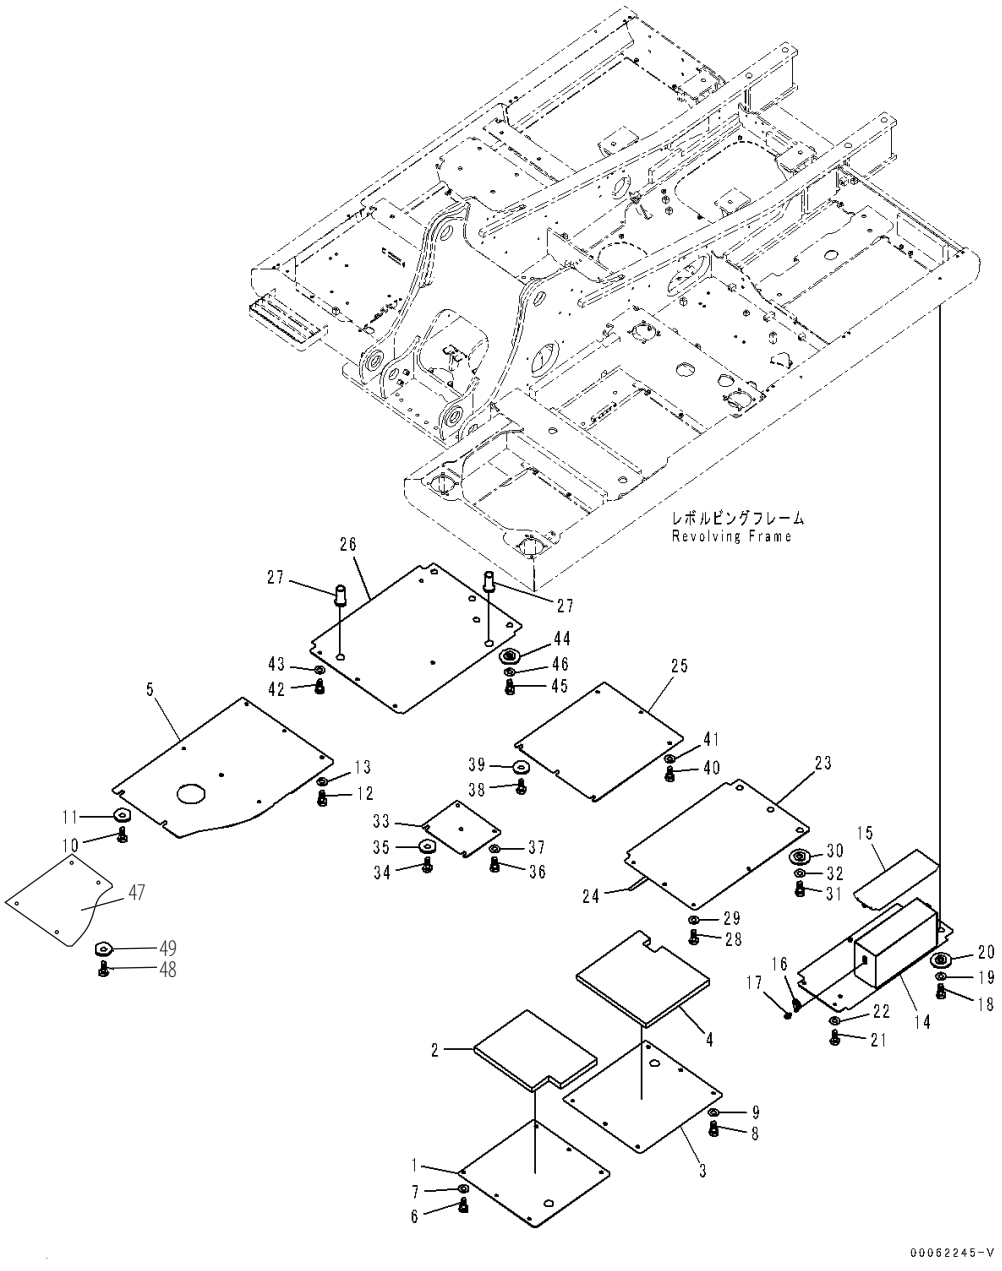


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 36 | | 01010-81230 | Bolt | 2 | Y200001- |
| 37 | | 01643-31232 | Washer | 2 | Y200001- |
| 38 | | 01010-81230 | Bolt | 3 | Y200001- |
| 39 | | 175-54-34170 | Washer | 3 | Y200001- |
| 40 | | 01010-81230 | Bolt | 3 | Y200001- |
| 41 | | 01643-31232 | Washer | 3 | Y200001- |
| 42 | | 01010-81230 | Bolt | 3 | Y200001- |
| 43 | | 01643-31232 | Washer | 3 | Y200001- |
| 44 | | 20Y-54-12550 | Collar | 3 | Y200001- |
| 45 | | 01010-81230 | Bolt | 3 | Y200001- |
| 46 | | 01643-31232 | Washer | 3 | Y200001- |
| 47 | | 20Y-54-76650 | Cover | 1 | Y200001- |
| 48 | | 01010-81230 | Bolt | 4 | Y200001- |
| 49 | | 01643-31232 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. M1810-007001 Under Cover, For Fuel Refill Pump

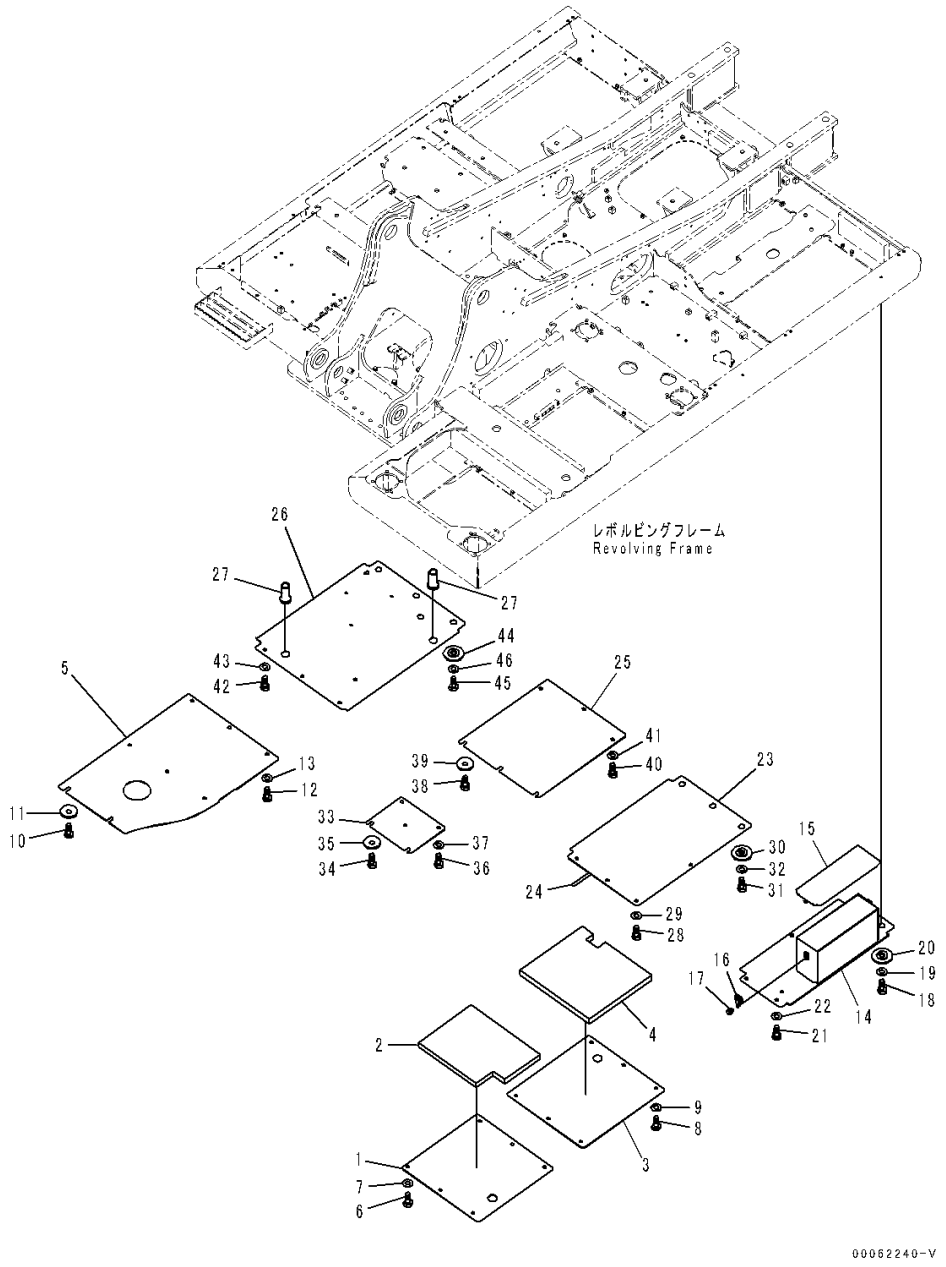


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-73791 | Cover | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-61770 | • Sheet | 1 | Y200001- |
| | | 20Y-54-73810 | Cover | 1 | Y200001- |
| 3 | C1 | | • Cover | 1 | Y200001- |
| 4 | | 20Y-54-61780 | • Sheet | 1 | Y200001- |
| 5 | | 20Y-54-71863 | Cover | 1 | Y200001- |
| 6 | | 01010-81230 | Bolt | 6 | Y200001- |
| 7 | | 01643-31232 | Washer | 6 | Y200001- |
| 8 | | 01010-81230 | Bolt | 7 | Y200001- |
| 9 | | 01643-31232 | Washer | 7 | Y200001- |
| 10 | | 01010-81230 | Bolt | 2 | Y200001- |
| 11 | | 175-54-34170 | Washer | 2 | Y200001- |
| 12 | | 01010-81230 | Bolt | 5 | Y200001- |
| 13 | | 01643-31232 | Washer | 5 | Y200001- |
| | | 20Y-54-71811 | Cover | 1 | Y200001- |
| 14 | C1 | | • Cover | 1 | Y200001- |
| 15 | | 20Y-54-73870 | • Cover | 1 | Y200001- |
| 16 | | 195-57-11530 | • Clip, Catch | 1 | Y200001- |
| 17 | | 01023-20512 | • Screw | 3 | Y200001- |
| 18 | | 01010-81230 | Bolt | 2 | Y200001- |
| 19 | | 01643-31232 | Washer | 2 | Y200001- |
| 20 | | 20Y-54-12550 | Collar | 2 | Y200001- |
| 21 | | 01010-81230 | Bolt | 2 | Y200001- |
| 22 | | 01643-31232 | Washer | 2 | Y200001- |
| 23 | | 20Y-54-71831 | Cover | 1 | Y200001- |
| 24 | | 20Y-54-61890 | • Sheet | 1 | Y200001- |
| 25 | | 20Y-54-71851 | Cover | 1 | Y200001- |
| | | 20Y-54-74780 | Cover | 1 | Y200001- |
| 26 | C1 | | • Cover | 1 | Y200001- |
| 27 | | 22U-54-24760 | • Grommet | 2 | Y200001- |
| 28 | | 01010-81230 | Bolt | 4 | Y200001- |
| 29 | | 01643-31232 | Washer | 4 | Y200001- |
| 30 | | 20Y-54-12550 | Collar | 3 | Y200001- |
| 31 | | 01010-81230 | Bolt | 3 | Y200001- |
| 32 | | 01643-31232 | Washer | 3 | Y200001- |
| 33 | | 20Y-54-61870 | Cover | 1 | Y200001- |
| 34 | | 01010-81230 | Bolt | 2 | Y200001- |
| 35 | | 175-54-34170 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. M1810-007001 Under Cover, For Fuel Refill Pump

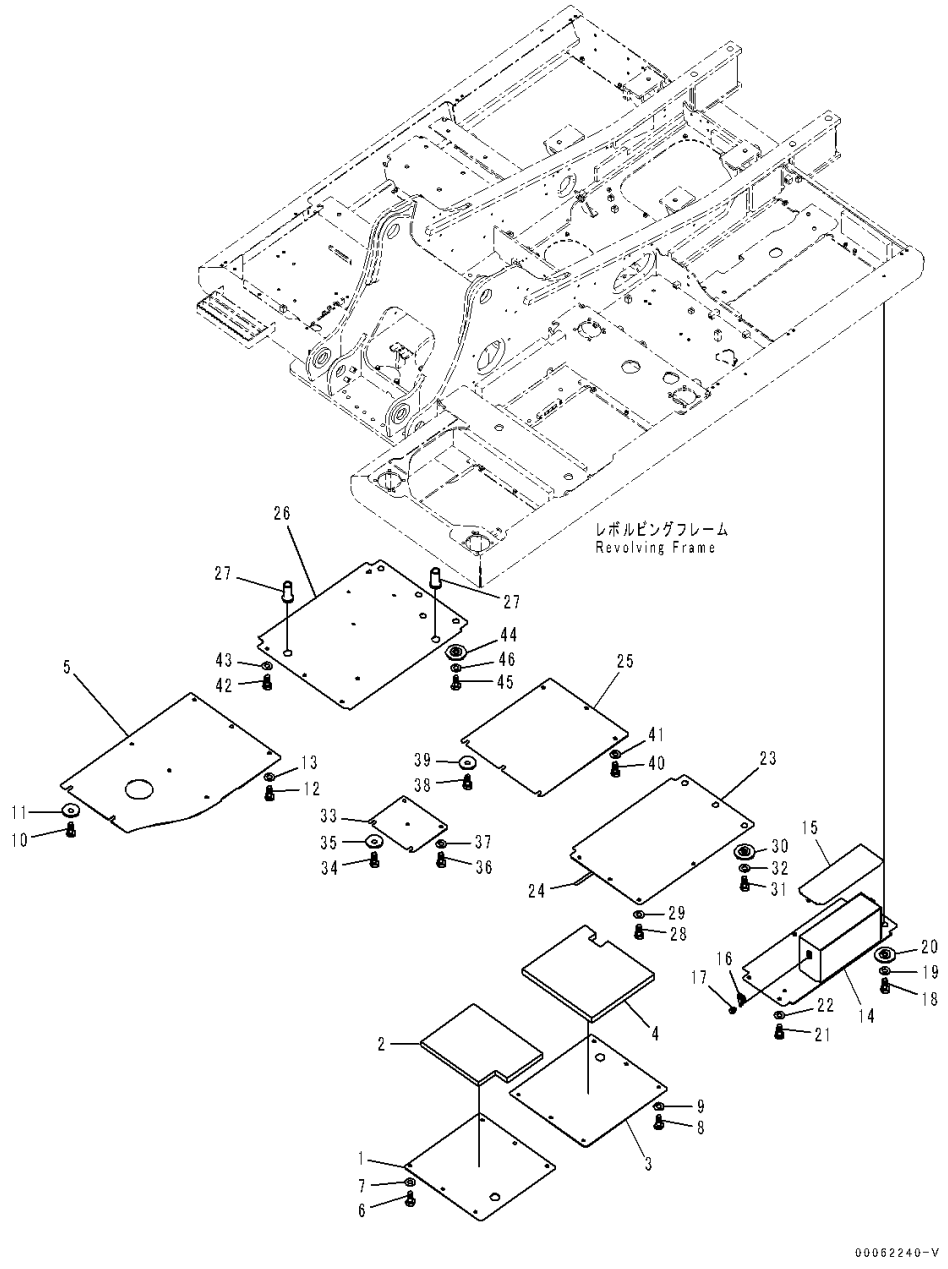


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 36 | | 01010-81230 | Bolt | 2 | Y200001- |
| 37 | | 01643-31232 | Washer | 2 | Y200001- |
| 38 | | 01010-81230 | Bolt | 3 | Y200001- |
| 39 | | 175-54-34170 | Washer | 3 | Y200001- |
| 40 | | 01010-81230 | Bolt | 3 | Y200001- |
| 41 | | 01643-31232 | Washer | 3 | Y200001- |
| 42 | | 01010-81230 | Bolt | 3 | Y200001- |
| 43 | | 01643-31232 | Washer | 3 | Y200001- |
| 44 | | 20Y-54-12550 | Collar . | 3 | Y200001- |
| 45 | | 01010-81230 | Bolt | 3 | Y200001- |
| 46 | | 01643-31232 | Washer | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. M1810-013001 Under Cover, With Webasto Heater

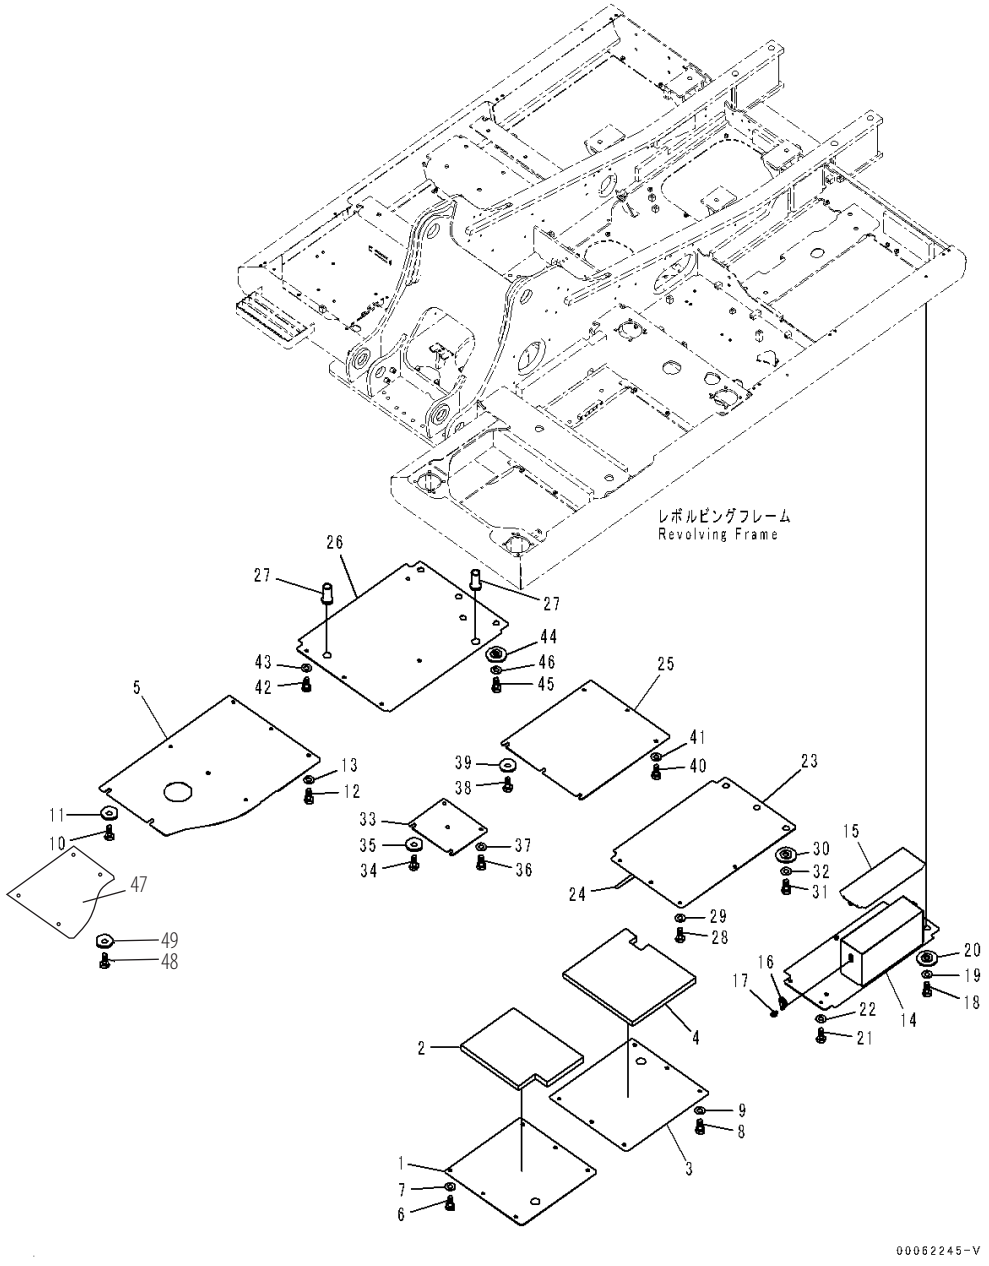


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-54-73791 | Cover | 1 | Y200001- |
| 1 | C1 | | • Cover | 1 | Y200001- |
| 2 | | 20Y-54-61770 | • Sheet | 1 | Y200001- |
| | | 20Y-54-73810 | Cover | 1 | Y200001- |
| 3 | C1 | | • Cover | 1 | Y200001- |
| 4 | | 20Y-54-61780 | • Sheet | 1 | Y200001- |
| 5 | | 20Y-54-71863 | Cover | 1 | Y200001- |
| 6 | | 01010-81230 | Bolt | 6 | Y200001- |
| 7 | | 01643-31232 | Washer | 6 | Y200001- |
| 8 | | 01010-81230 | Bolt | 7 | Y200001- |
| 9 | | 01643-31232 | Washer | 7 | Y200001- |
| 10 | | 01010-81230 | Bolt | 2 | Y200001- |
| 11 | | 175-54-34170 | Washer | 2 | Y200001- |
| 12 | | 01010-81230 | Bolt | 5 | Y200001- |
| 13 | | 01643-31232 | Washer | 5 | Y200001- |
| | | 20Y-54-71811 | Cover | 1 | Y200001- |
| 14 | C1 | | • Cover | 1 | Y200001- |
| 15 | | 20Y-54-73870 | • Cover | 1 | Y200001- |
| 16 | | 195-57-11530 | • Clip, Catch | 1 | Y200001- |
| 17 | | 01023-20512 | • Screw | 3 | Y200001- |
| 18 | | 01010-81230 | Bolt | 2 | Y200001- |
| 19 | | 01643-31232 | Washer | 2 | Y200001- |
| 20 | | 20Y-54-12550 | Collar | 2 | Y200001- |
| 21 | | 01010-81230 | Bolt | 2 | Y200001- |
| 22 | | 01643-31232 | Washer | 2 | Y200001- |
| 23 | | 20Y-54-71831 | Cover | 1 | Y200001- |
| 24 | | 20Y-54-61890 | • Sheet | 1 | Y200001- |
| 25 | | 20Y-54-71851 | Cover | 1 | Y200001- |
| | | 20Y-54-76810 | Cover | 1 | Y200001- |
| 26 | C1 | | • Cover | 1 | Y200001- |
| 27 | | 22U-54-24760 | • Grommet | 2 | Y200001- |
| 28 | | 01010-81230 | Bolt | 4 | Y200001- |
| 29 | | 01643-31232 | Washer | 4 | Y200001- |
| 30 | | 20Y-54-12550 | Collar | 3 | Y200001- |
| 31 | | 01010-81230 | Bolt | 3 | Y200001- |
| 32 | | 01643-31232 | Washer | 3 | Y200001- |
| 33 | | 20Y-54-61870 | Cover | 1 | Y200001- |
| 34 | | 01010-81230 | Bolt | 2 | Y200001- |
| 35 | | 175-54-34170 | Washer | 2 | Y200001- |

https://truckmanualshub.com/

# FIG. M1810-013001 Under Cover, With Webasto Heater

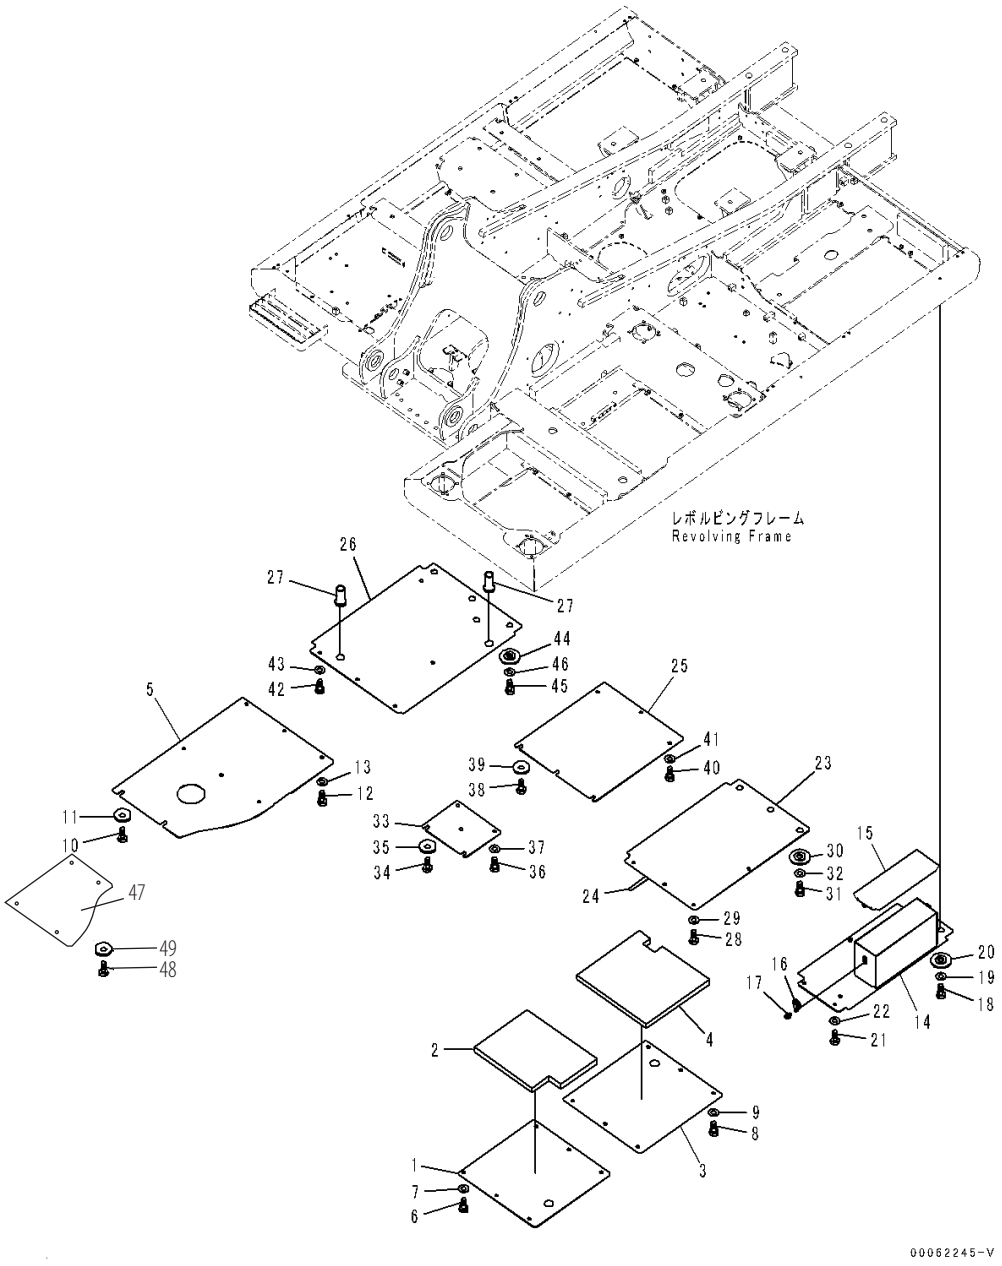



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 36 | | 01010-81230 | Bolt | 2 | Y200001- |
| 37 | | 01643-31232 | Washer | 2 | Y200001- |
| 38 | | 01010-81230 | Bolt | 3 | Y200001- |
| 39 | | 175-54-34170 | Washer | 3 | Y200001- |
| 40 | | 01010-81230 | Bolt | 3 | Y200001- |
| 41 | | 01643-31232 | Washer | 3 | Y200001- |
| 42 | | 01010-81230 | Bolt | 3 | Y200001- |
| 43 | | 01643-31232 | Washer | 3 | Y200001- |
| 44 | | 20Y-54-12550 | Collar | 3 | Y200001- |
| 45 | | 01010-81230 | Bolt | 3 | Y200001- |
| 46 | | 01643-31232 | Washer | 3 | Y200001- |
| 47 | | 20Y-54-76650 | Cover | 1 | Y200001- |
| 48 | | 01010-81230 | Bolt | 4 | Y200001- |
| 49 | | 01643-31232 | Washer | 4 | Y200001- |

# SWING CIRCLE AND ITS RELATED PARTS

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. N1110-001001 Swing Piping

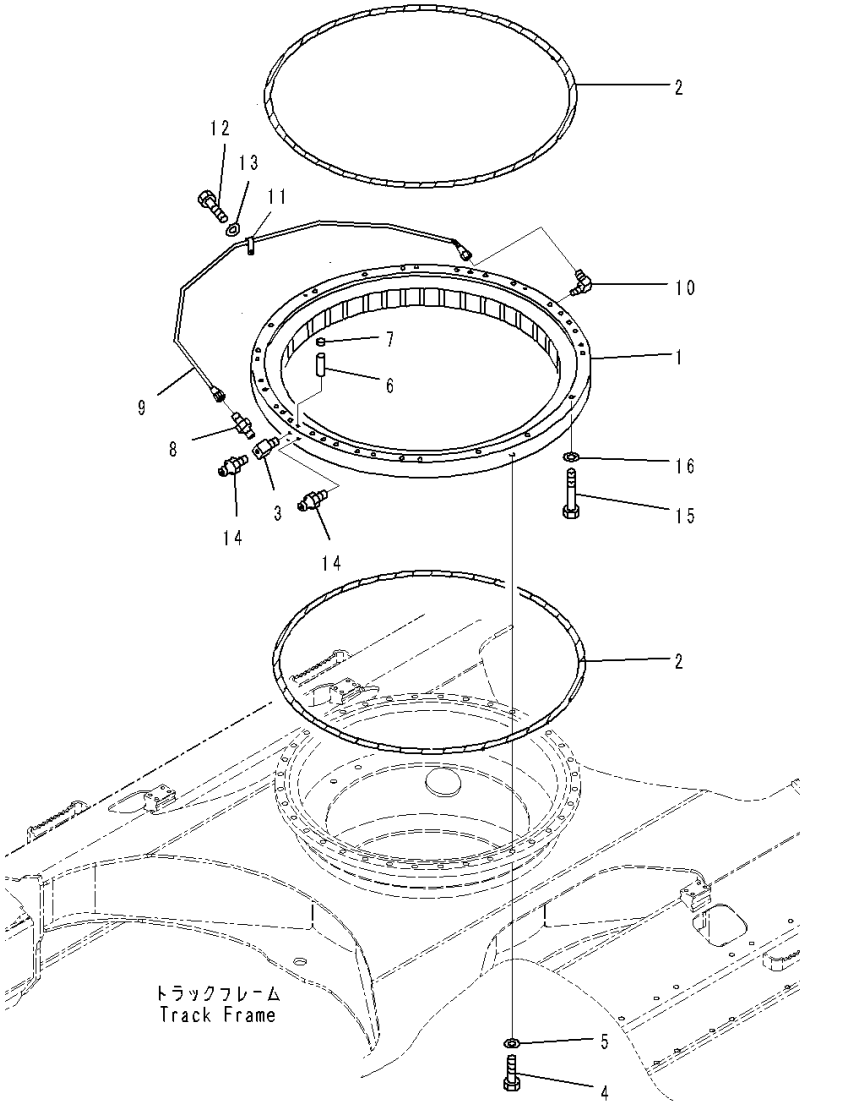


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-25-00200 | Swing Circle Assembly | 1 | Y200001- |
| 2 | | 205-25-71152 | • Seal | 2 | Y200001- |
| 3 | | 205-25-71280 | • Nipple | 1 | Y200001- |
| 4 | | 20Y-09-11170 | Bolt | 36 | Y200001- |
| 5 | | 01643-72060 | Washer | 36 | Y200001- |
| 6 | | 04020-01842 | Pin, Dowel | 2 | Y200001- |
| 7 | | 20Y-46-21520 | Cap | 1 | Y200001- |
| 8 | | 07214-50813 | Connector | 1 | Y200001- |
| 9 | | 20Y-25-21123 | Tube | 1 | Y200001- |
| 10 | | 20Y-25-11270 | Elbow | 1 | Y200001- |
| 11 | | 08036-00814 | Clip | 1 | Y200001- |
| 12 | | 01010-81016 | Bolt | 1 | Y200001- |
| 13 | | 01643-31032 | Washer | 1 | Y200001- |
| 14 | | 07020-00000 | Fitting, Grease | 2 | Y200001- |
| 15 | | 206-25-61110 | Bolt | 32 | Y200001- |
| 16 | | 01643-72260 | Washer | 32 | Y200001- |

https://truckmanualshub.com/


# FIG. N1110-002001 Swing Piping, Extreme Cold Area Arrangement (-50deg C)

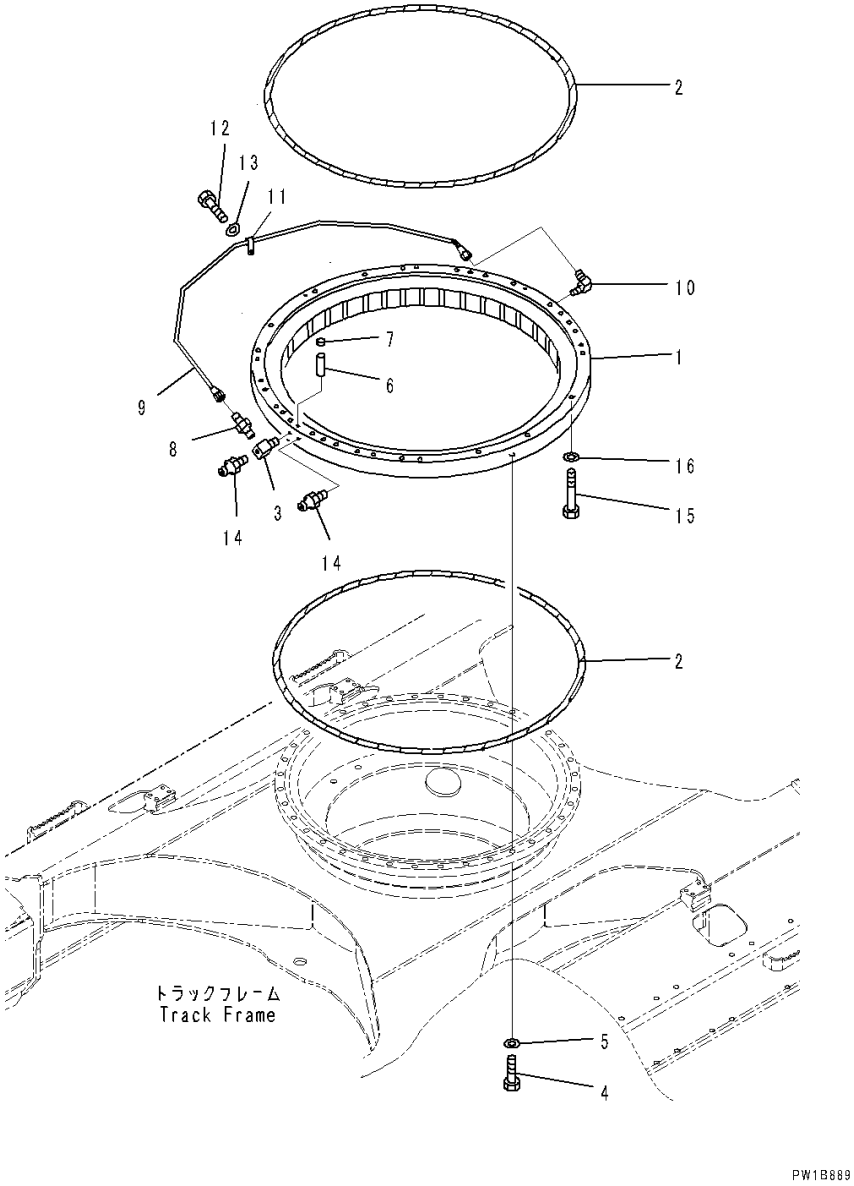


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 206-25-00220 | Swing Circle Assembly | 1 | Y200001- |
| 2 | | 20Y-25-31350 | • Seal | 2 | Y200001- |
| 3 | | 205-25-71280 | • Nipple | 1 | Y200001- |
| 4 | | 20Y-09-11170 | Bolt | 36 | Y200001- |
| 5 | | 01643-72060 | Washer | 36 | Y200001- |
| 6 | | 04020-01842 | Pin, Dowel | 2 | Y200001- |
| 7 | | 20Y-46-21520 | Cap | 1 | Y200001- |
| 8 | | 07214-50813 | Connector | 1 | Y200001- |
| 9 | | 20Y-25-21123 | Tube | 1 | Y200001- |
| 10 | | 20Y-25-11270 | Elbow | 1 | Y200001- |
| 11 | | 08036-00814 | Clip | 1 | Y200001- |
| 12 | | 01010-81016 | Bolt | 1 | Y200001- |
| 13 | | 01643-31032 | Washer | 1 | Y200001- |
| 14 | | 07020-00000 | Fitting, Grease | 2 | Y200001- |
| 15 | | 206-25-61110 | Bolt | 32 | Y200001- |
| 16 | | 01643-72260 | Washer | 32 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-002001 Swing Machinery, Inner Parts, Swing Motor (1/3)

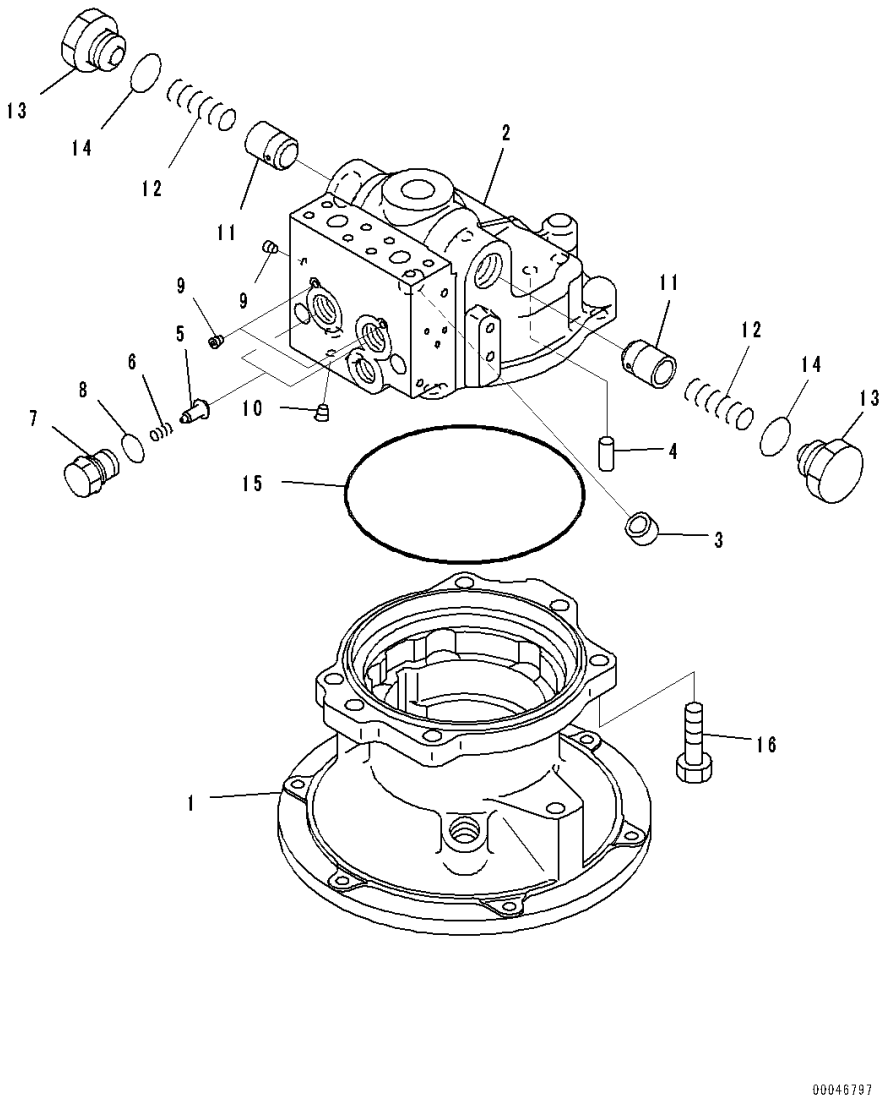


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 706-7G-01170 | Motor Assembly | 1 | Y200001- |
| | | 706-7G-03130 | • Motor Subassembly | 1 | Y200001- |
| 1 | C2 | 706-7G-41240 | •• Case | 1 | Y200001- |
| 2 | C2 | 706-7G-71160 | •• Housing | 1 | Y200001- |
| 3 | C2 | 706-7G-40110 | •• Bushing | 1 | Y200001- |
| 4 | C2 | 708-8K-15190 | •• Pin, Dowel | 1 | Y200001- |
| 5 | | 709-25-11650 | •• Valve, Check | 2 | Y200001- |
| 6 | | 709-25-11361 | •• Spring | 2 | Y200001- |
| 7 | | 709-25-11640 | •• Plug | 2 | Y200001- |
| 8 | | 07000-12020 | •• O-ring | 2 | Y200001- |
| 9 | | 708-21-12541 | •• Plug | 3 | Y200001- |
| 10 | | 708-8F-31620 | •• Plug | 1 | Y200001- |
| 11 | | 706-7G-71710 | •• Valve | 2 | Y200001- |
| 12 | | 706-7G-71560 | •• Spring | 2 | Y200001- |
| 13 | | 706-7G-71630 | •• Plug | 2 | Y200001- |
| 14 | | 07002-13334 | •• O-ring | 2 | Y200001- |
| 15 | C2 | 706-75-42370 | •• O-ring | 1 | Y200001- |
| 16 | | 01010-61450 | •• Bolt | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-002002 Swing Machinery, Inner Parts, Swing Motor (2/3)

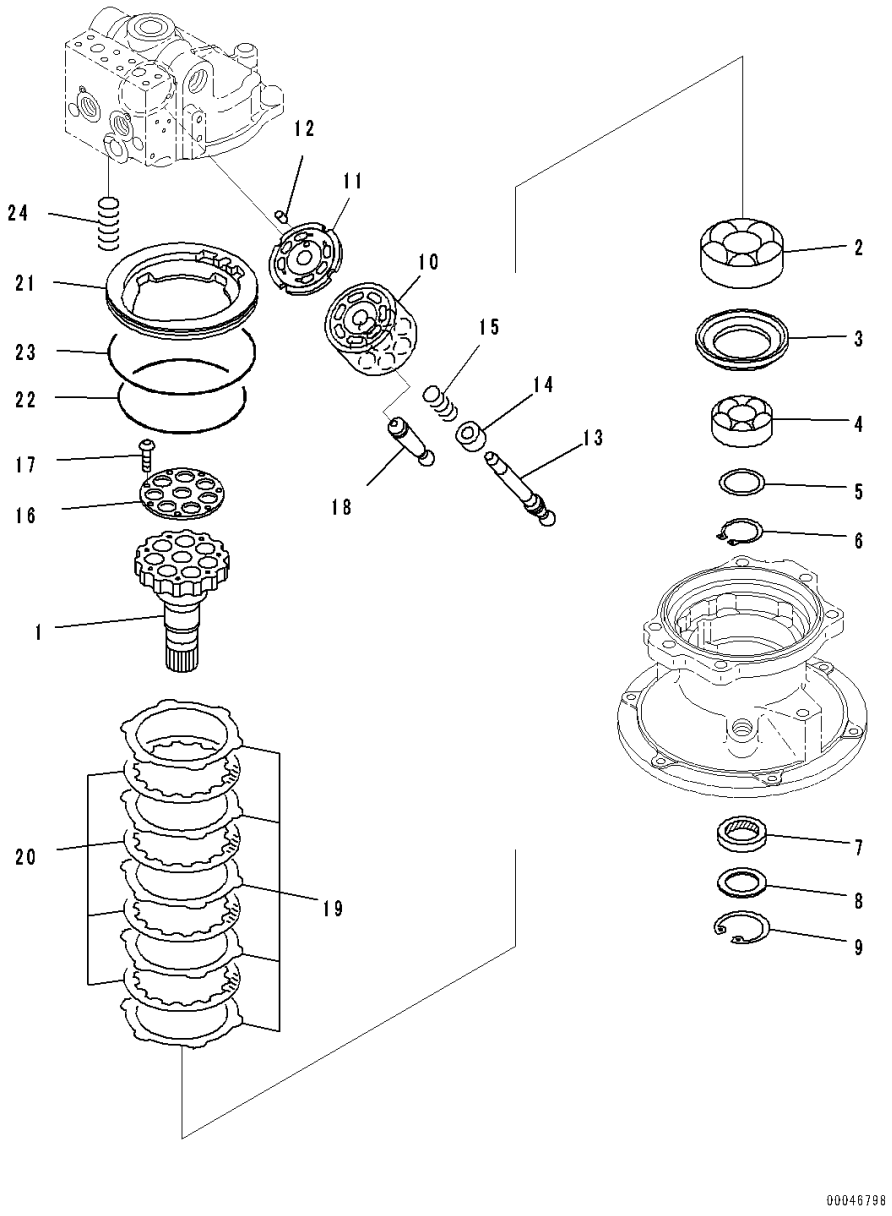


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 706-7G-01170 | Motor Assembly | 1 | Y200001- |
| | | 706-7G-03130 | • Motor Subassembly | 1 | Y200001- |
| 1 | C2 | 706-7G-41630 | •• Shaft, Drive | 1 | Y200001- |
| 2 | C2 | 706-75-42880 | •• Bearing | 1 | Y200001- |
| 3 | C2 | 706-7G-41660 | •• Spacer | 1 | Y200001- |
| 4 | C2 | 706-76-40890 | •• Bearing | 1 | Y200001- |
| 5 | C2 | 706-7G-41510 | •• Spacer Kit | 1 | Y200001- |
| | C1 | | ••• Spacer, T=3.1mm | 1 | Y200001- |
| | C1 | | ••• Spacer, T=3.4mm | 1 | Y200001- |
| | C1 | | ••• Spacer, T=3.7mm | 1 | Y200001- |
| 6 | | 04064-04518 | •• Ring, Snap | 1 | Y200001- |
| 7 | | 706-7E-11280 | •• Oil | 1 | Y200001- |
| 8 | | 706-7G-41910 | •• Spacer | 1 | Y200001- |
| 9 | | 04065-06220 | •• Ring, Snap | 1 | Y200001- |
| 10 | C2 | 706-7G-41310 | •• Block, Cylinder | 1 | Y200001- |
| 11 | C2 | 706-7G-41720 | •• Plate, Valve | 1 | Y200001- |
| 12 | C2 | 706-75-43750 | •• Pin, Dowel | 1 | Y200001- |
| 13 | C2 | 706-7G-41320 | •• Shaft,Center | 1 | Y200001- |
| 14 | C2 | 706-7G-41130 | •• Ring,Center | 1 | Y200001- |
| 15 | C2 | 706-7G-41140 | •• Spring | 1 | Y200001- |
| | C2 | 706-7G-05010 | •• Retainer Kit | 1 | Y200001- |
| 16 | C1 | | ••• Retainer | 1 | Y200001- |
| 17 | C1 | | ••• Screw | 7 | Y200001- |
| 18 | C2 | 706-7G-41410 | •• Piston Subassembly | 7 | Y200001- |
| 19 | C2 | 706-7G-91441 | •• Plate | 5 | Y200001- |
| 20 | C2 | 706-7G-91450 | •• Disc | 4 | Y200001- |
| 21 | C2 | 706-7G-91120 | •• Piston, Brake | 1 | Y200001- |
| 22 | C2 | 706-75-92310 | •• O-ring | 1 | Y200001- |
| 23 | C2 | 708-8F-31610 | •• O-ring | 1 | Y200001- |
| 24 | C2 | 706-7G-91360 | •• Spring | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-002003 Swing Machinery, Inner Parts, Swing Motor (3/3)

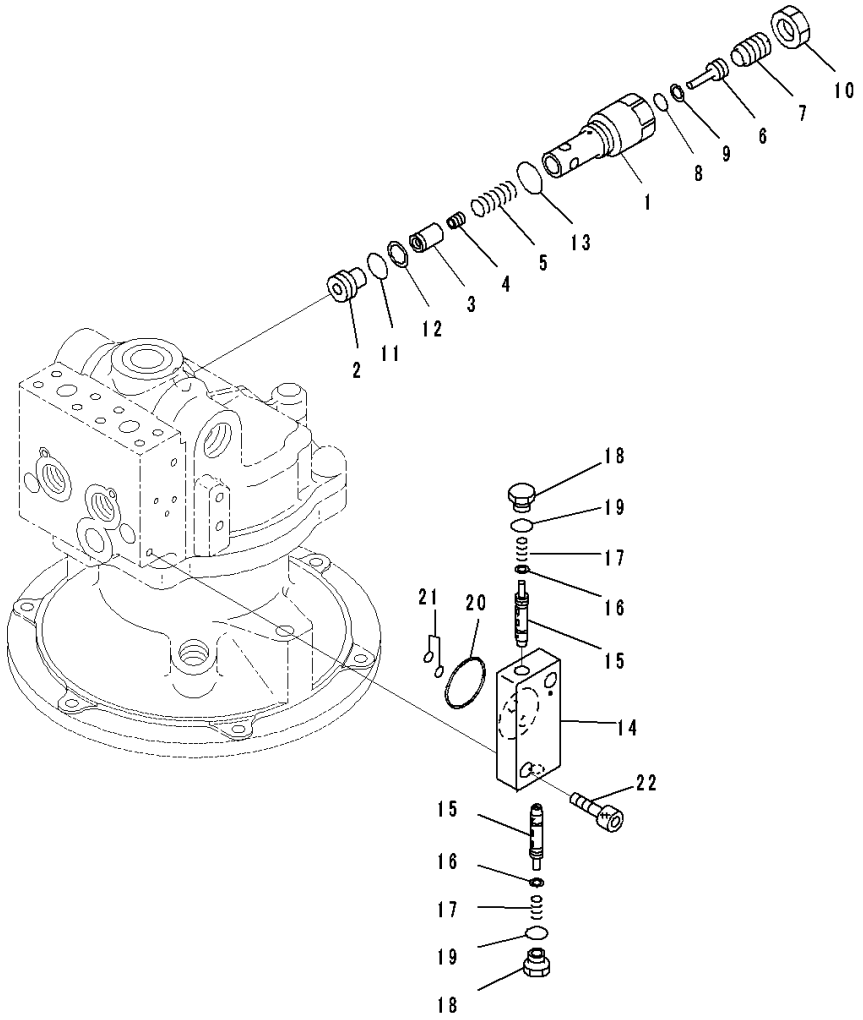


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 706-7G-01170 | Motor Assembly | 1 | Y200001- |
| | | 702-75-01310 | • Valve, Relief | 1 | Y200001- |
| 1 | C1 | | •• Sleeve | 1 | Y200001- |
| 2 | C1 | | •• Seat, Valve | 1 | Y200001- |
| 3 | C1 | | •• Valve | 1 | Y200001- |
| 4 | C1 | | •• Piston | 1 | Y200001- |
| 5 | C1 | | •• Spring | 1 | Y200001- |
| 6 | C1 | | •• Rod | 1 | Y200001- |
| 7 | C1 | | •• Screw | 1 | Y200001- |
| 8 | C1 | | •• O-ring | 1 | Y200001- |
| 9 | C1 | | •• Ring, Back-up | 1 | Y200001- |
| 10 | C1 | | •• Nut | 1 | Y200001- |
| 11 | | 07000-F2020 | •• O-ring | 1 | Y200001- |
| 12 | | 07001-02020 | •• Ring, Back-up | 1 | Y200001- |
| 13 | | 07002-13034 | •• O-ring | 1 | Y200001- |
| | | 702-15-77000 | • Valve Assembly | 1 | Y200001- |
| 14 | C1 | | •• Body | 1 | Y200001- |
| 15 | C1 | | •• Spool | 2 | Y200001- |
| 16 | | 709-70-71610 | •• Seal | 2 | Y200001- |
| 17 | | 702-15-71130 | •• Spring | 2 | Y200001- |
| 18 | | 702-15-71140 | •• Plug | 2 | Y200001- |
| 19 | | 07002-01423 | •• O-ring | 2 | Y200001- |
| 20 | | 07000-13042 | • O-ring | 1 | Y200001- |
| 21 | | 07000-11009 | • O-ring | 2 | Y200001- |
| 22 | | 01252-60825 | • Bolt | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-002004 Swing Machinery, Mounts

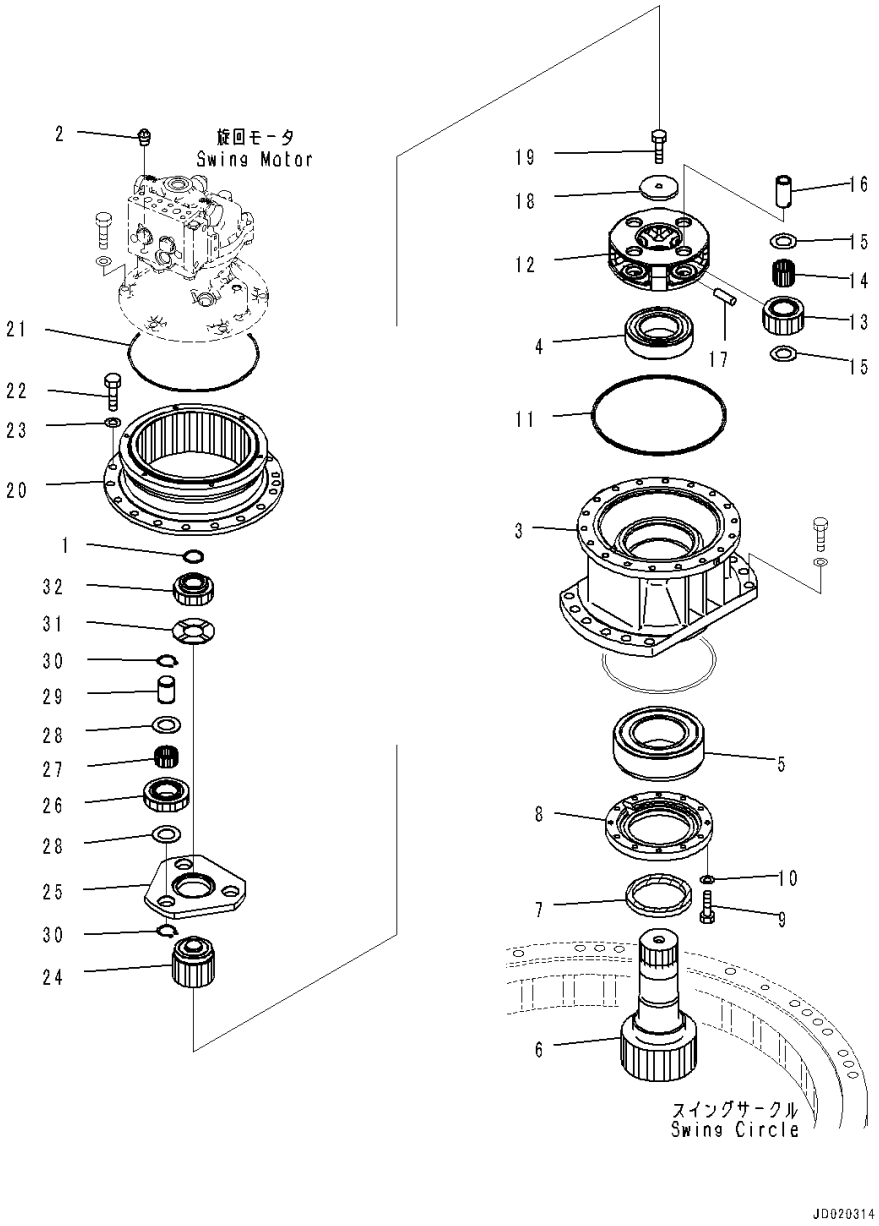


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22U-26-21280 | Ring | 1 | Y200001- |
| 2 | | 07042-00312 | Plug, Taper | 1 | Y200001- |
| 3 | | 20Y-26-31120 | Case | 1 | Y200001- |
| 4 | | 20Y-26-22330 | Bearing | 1 | Y200001- |
| 5 | | 20Y-26-22340 | Bearing | 1 | Y200001- |
| 6 | | 206-26-69111 | Shaft | 1 | Y200001- |
| 7 | | 20Y-26-22420 | Seal | 1 | Y200001- |
| 8 | | 20Y-26-22191 | Cover | 1 | Y200001- |
| 9 | | 01010-81045 | Bolt | 12 | Y200001- |
| 10 | | 01643-31032 | Washer | 12 | Y200001- |
| 11 | | 07000-15310 | O-ring | 1 | Y200001- |
| 12 | | 22U-26-21580 | Carrier | 1 | Y200001- |
| 13 | | 22U-26-21540 | Gear | 4 | Y200001- |
| 14 | | 20G-26-11241 | Bearing | 4 | Y200001- |
| 15 | | 20Y-27-21240 | Washer, Thrust | 8 | Y200001- |
| 16 | | 20Y-26-22250 | Pin | 4 | Y200001- |
| 17 | | 20Y-27-21280 | Pin | 4 | Y200001- |
| 18 | | 20Y-26-21240 | Plate | 1 | Y200001- |
| 19 | | 112-32-11211 | Bolt | 1 | Y200001- |
| 20 | | 22U-26-21551 | Gear | 1 | Y200001- |
| 21 | | 20K-22-11190 | O-ring | 1 | Y200001- |
| 22 | | 01010-81440 | Bolt | 18 | Y200001- |
| 23 | | 01643-31445 | Washer | 18 | Y200001- |
| 24 | | 22U-26-21530 | Gear | 1 | Y200001- |
| 25 | | 22U-26-21572 | Carrier | 1 | Y200001- |
| 26 | | 22U-26-21520 | Gear | 3 | Y200001- |
| 27 | | 20Y-26-21281 | Bearing | 3 | Y200001- |
| 28 | | 22U-26-21230 | Washer, Thrust | 6 | Y200001- |
| 29 | | 22U-26-21210 | Pin | 3 | Y200001- |
| 30 | | 04064-03515 | Ring | 6 | Y200001- |
| 31 | | 22U-26-21250 | Washer, Thrust | 1 | Y200001- |
| 32 | | 22U-26-21510 | Gear | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-002005 Swing Machinery, Drain Piping

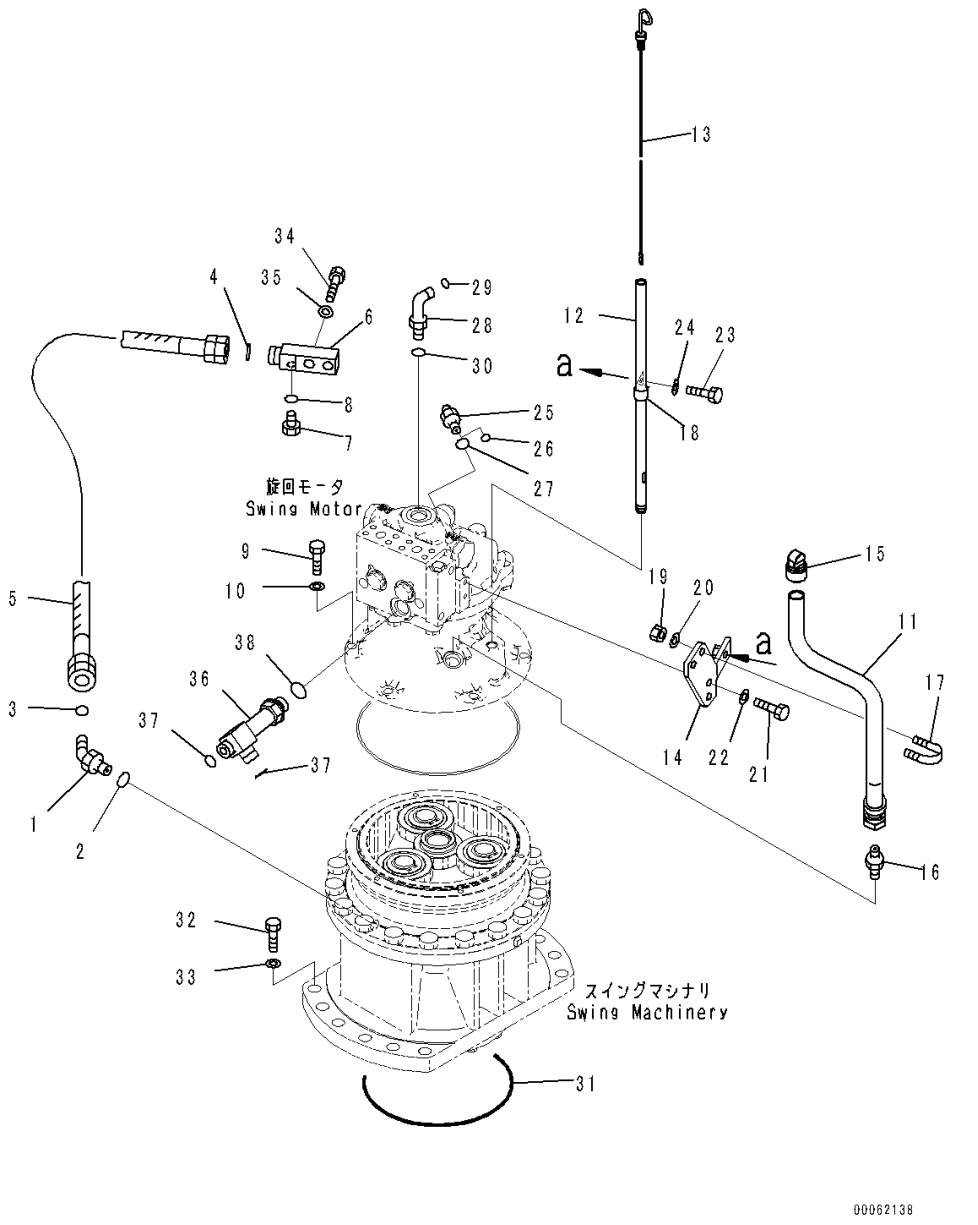


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 02783-10522 | Elbow | 1 | Y200001- |
| 2 | | 07002-12434 | O-ring | 1 | Y200001- |
| 3 | | 02896-11015 | O-ring | 1 | Y200001- |
| 4 | | 02896-11015 | O-ring | 1 | Y200001- |
| 5 | | 02762-005A5 | Hose | 1 | Y200001- |
| 6 | | 20Y-26-31211 | Elbow | 1 | Y200001- |
| 7 | | 07040-11409 | Plug | 1 | Y200001- |
| 8 | | 07002-11423 | O-ring | 1 | Y200001- |
| 9 | | 01010-81035 | Bolt | 6 | Y200001- |
| 10 | | 01643-51032 | Washer | 6 | Y200001- |
| 11 | | 20Y-26-31471 | Tube | 1 | Y200001- |
| 12 | | 20Y-26-31421 | Filler | 1 | Y200001- |
| 13 | | 20Y-26-31431 | Gauge | 1 | Y200001- |
| 14 | | 20Y-26-31460 | Bracket | 1 | Y200001- |
| 15 | | 22U-26-21460 | Cap | 1 | Y200001- |
| 16 | | 07238-10630 | Connector | 1 | Y200001- |
| 17 | | 07283-32738 | Clip, Pipe | 1 | Y200001- |
| 18 | | 04434-51710 | Clip | 1 | Y200001- |
| 19 | | 01597-01009 | Nut | 2 | Y200001- |
| 20 | | 01643-31032 | Washer | 2 | Y200001- |
| 21 | | 01010-81030 | Bolt | 2 | Y200001- |
| 22 | | 01643-31032 | Washer | 2 | Y200001- |
| 23 | | 01010-81025 | Bolt | 1 | Y200001- |
| 24 | | 01643-31032 | Washer | 1 | Y200001- |
| 25 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 26 | | 02896-11008 | O-ring | 1 | Y200001- |
| 27 | | 07002-11423 | O-ring | 1 | Y200001- |
| 28 | | 02782-10630 | Elbow | 1 | Y200001- |
| 29 | | 02896-11018 | O-ring | 1 | Y200001- |
| 30 | | 07002-12434 | O-ring | 1 | Y200001- |
| 31 | | 07000-15240 | O-ring | 1 | Y200001- |
| 32 | | 01010-82060 | Bolt | 12 | Y200001- |
| 33 | | 01643-32060 | Washer | 12 | Y200001- |
| 34 | | 01010-81250 | Bolt | 2 | Y200001- |
| 35 | | 01643-31232 | Washer | 2 | Y200001- |
| 36 | | 20Y-62-41940 | Elbow | 1 | Y200001- |
| 37 | | 02896-11015 | O-ring | 2 | Y200001- |
| 38 | | 07002-12434 | O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-003001 Swing Machinery, Inner Parts, Swing Motor (1/3)

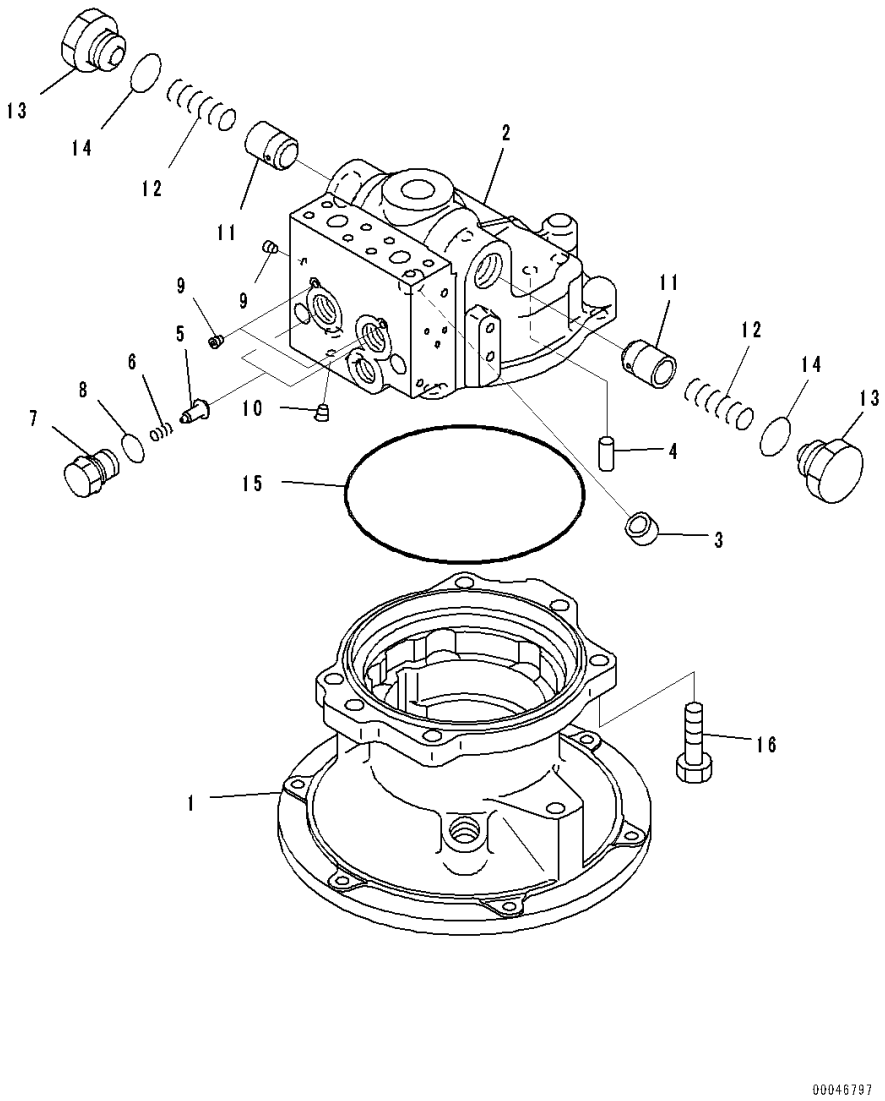


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 706-7G-01170 | Motor Assembly | 1 | Y200001- |
| | | | Extreme Cold Area Arrangement (-50deg C) | | |
| | | 706-7G-03130 | • Motor Subassembly | 1 | Y200001- |
| | | | Extreme Cold Area Arrangement (-50deg C) | | |
| 1 | C2 | 706-7G-41240 | •• Case | 1 | Y200001- |
| 2 | C2 | 706-7G-71160 | •• Housing | 1 | Y200001- |
| 3 | C2 | 706-7G-40110 | •• Bushing | 1 | Y200001- |
| 4 | C2 | 708-8K-15190 | •• Pin, Dowel | 1 | Y200001- |
| 5 | | 709-25-11650 | •• Valve, Check | 2 | Y200001- |
| 6 | | 709-25-11361 | •• Spring | 2 | Y200001- |
| 7 | | 709-25-11640 | •• Plug | 2 | Y200001- |
| 8 | | 07000-12020 | •• O-ring | 2 | Y200001- |
| 9 | | 708-21-12541 | •• Plug | 3 | Y200001- |
| 10 | | 708-8F-31620 | •• Plug | 1 | Y200001- |
| 11 | | 706-7G-71710 | •• Valve | 2 | Y200001- |
| 12 | | 706-7G-71560 | •• Spring | 2 | Y200001- |
| 13 | | 706-7G-71630 | •• Plug | 2 | Y200001- |
| 14 | | 07002-13334 | •• O-ring | 2 | Y200001- |
| 15 | C2 | 706-75-42370 | •• O-ring | 1 | Y200001- |
| 16 | | 01010-61450 | •• Bolt | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-004002 Swing Machinery, Extreme Cold Area Arrangement (-50deg C), Inner Parts, Swing Motor (2/3)

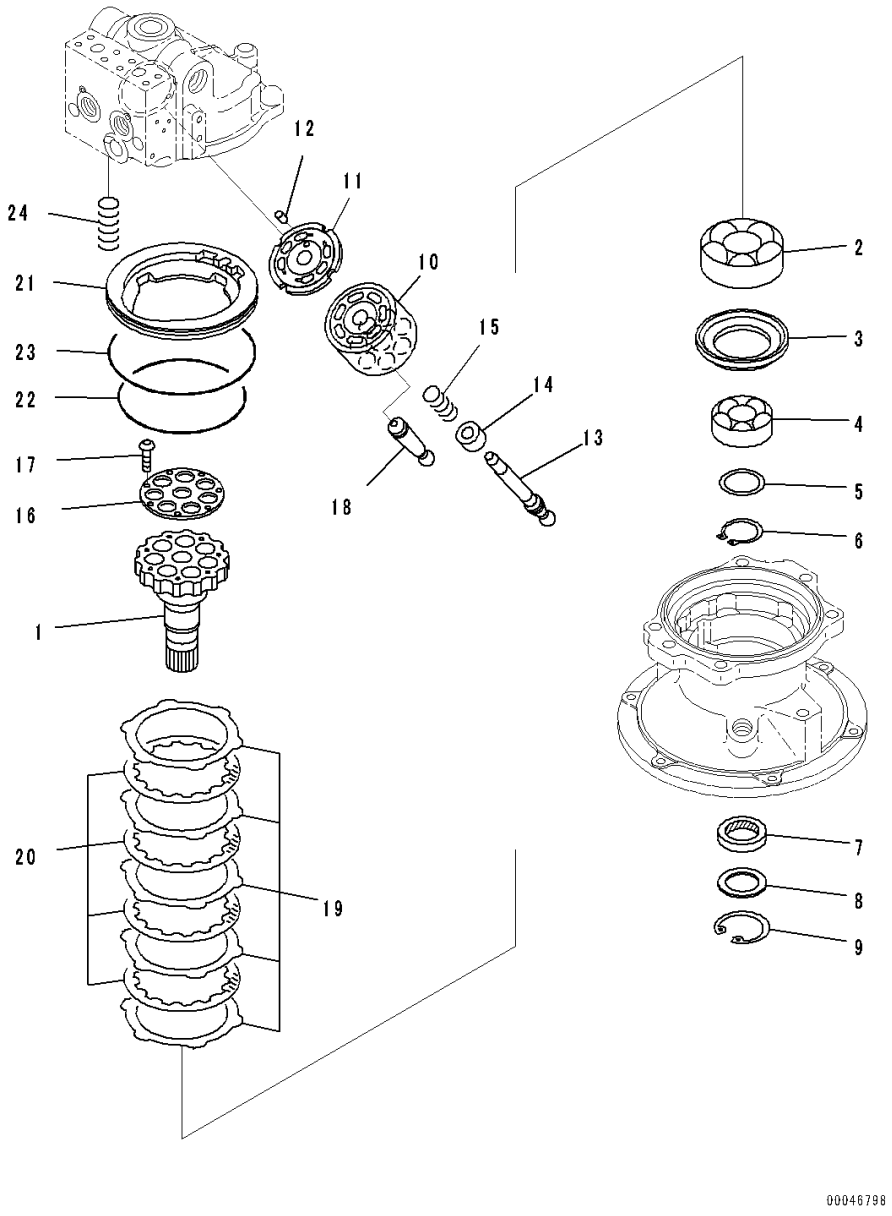


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 706-7G-01170 | Motor Assembly | 1 | Y200001- |
| | | 706-7G-03130 | • Motor Subassembly | 1 | Y200001- |
| 1 | C2 | 706-7G-41630 | •• Shaft, Drive | 1 | Y200001- |
| 2 | C2 | 706-75-42880 | •• Bearing | 1 | Y200001- |
| 3 | C2 | 706-7G-41660 | •• Spacer | 1 | Y200001- |
| 4 | C2 | 706-76-40890 | •• Bearing | 1 | Y200001- |
| 5 | C2 | 706-7G-41510 | •• Spacer Kit | 1 | Y200001- |
| | C1 | | ••• Spacer, T=3.1mm | 1 | Y200001- |
| | C1 | | ••• Spacer, T=3.4mm | 1 | Y200001- |
| | C1 | | ••• Spacer, T=3.7mm | 1 | Y200001- |
| 6 | | 04064-04518 | •• Ring, Snap | 1 | Y200001- |
| 7 | | 706-7E-11280 | •• Oil | 1 | Y200001- |
| 8 | | 706-7G-41910 | •• Spacer | 1 | Y200001- |
| 9 | | 04065-06220 | •• Ring, Snap | 1 | Y200001- |
| 10 | C2 | 706-7G-41310 | •• Block, Cylinder | 1 | Y200001- |
| 11 | C2 | 706-7G-41720 | •• Plate, Valve | 1 | Y200001- |
| 12 | C2 | 706-75-43750 | •• Pin, Dowel | 1 | Y200001- |
| 13 | C2 | 706-7G-41320 | •• Shaft,Center | 1 | Y200001- |
| 14 | C2 | 706-7G-41130 | •• Ring,Center | 1 | Y200001- |
| 15 | C2 | 706-7G-41140 | •• Spring | 1 | Y200001- |
| | C2 | 706-7G-05010 | •• Retainer Kit | 1 | Y200001- |
| 16 | C1 | | ••• Retainer | 1 | Y200001- |
| 17 | C1 | | ••• Screw | 7 | Y200001- |
| 18 | C2 | 706-7G-41410 | •• Piston Subassembly | 7 | Y200001- |
| 19 | C2 | 706-7G-91441 | •• Plate | 5 | Y200001- |
| 20 | C2 | 706-7G-91450 | •• Disc | 4 | Y200001- |
| 21 | C2 | 706-7G-91120 | •• Piston, Brake | 1 | Y200001- |
| 22 | C2 | 706-75-92310 | •• O-ring | 1 | Y200001- |
| 23 | C2 | 708-8F-31610 | •• O-ring | 1 | Y200001- |
| 24 | C2 | 706-7G-91360 | •• Spring | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-004003 Swing Machinery, Extreme Cold Area Arrangement (-50deg C), Inner Parts, Swing Motor (3/3)

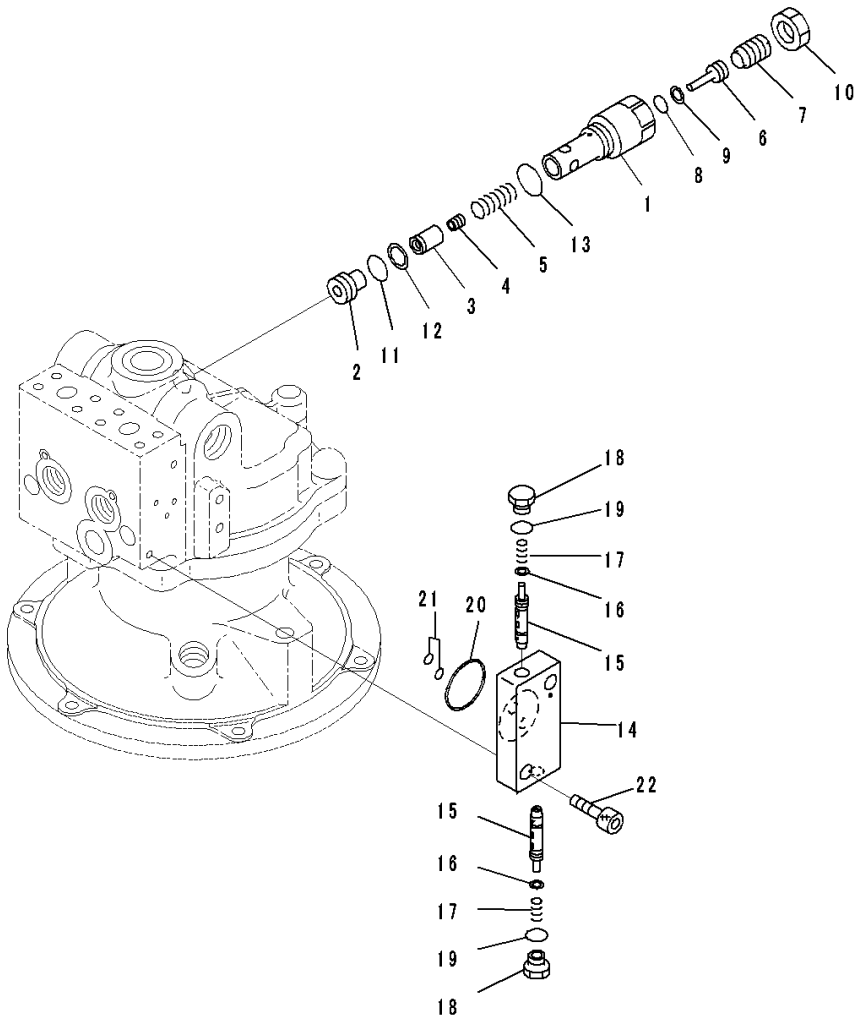


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 706-7G-01170 | Motor Assembly | 1 | Y200001- |
| | | 702-75-01310 | • Valve, Relief | 1 | Y200001- |
| 1 | C1 | | •• Sleeve | 1 | Y200001- |
| 2 | C1 | | •• Seat, Valve | 1 | Y200001- |
| 3 | C1 | | •• Valve | 1 | Y200001- |
| 4 | C1 | | •• Piston | 1 | Y200001- |
| 5 | C1 | | •• Spring | 1 | Y200001- |
| 6 | C1 | | •• Rod | 1 | Y200001- |
| 7 | C1 | | •• Screw | 1 | Y200001- |
| 8 | C1 | | •• O-ring | 1 | Y200001- |
| 9 | C1 | | •• Ring, Back-up | 1 | Y200001- |
| 10 | C1 | | •• Nut | 1 | Y200001- |
| 11 | | 07000-F2020 | •• O-ring | 1 | Y200001- |
| 12 | | 07001-02020 | •• Ring, Back-up | 1 | Y200001- |
| 13 | | 07002-13034 | •• O-ring | 1 | Y200001- |
| | | 702-15-77000 | • Valve Assembly | 1 | Y200001- |
| 14 | C1 | | •• Body | 1 | Y200001- |
| 15 | C1 | | •• Spool | 2 | Y200001- |
| 16 | | 709-70-71610 | •• Seal | 2 | Y200001- |
| 17 | | 702-15-71130 | •• Spring | 2 | Y200001- |
| 18 | | 702-15-71140 | •• Plug | 2 | Y200001- |
| 19 | | 07002-01423 | •• O-ring | 2 | Y200001- |
| 20 | | 07000-13042 | • O-ring | 1 | Y200001- |
| 21 | | 07000-11009 | • O-ring | 2 | Y200001- |
| 22 | | 01252-60825 | • Bolt | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-004004 Swing Machinery, Extreme Cold Area Arrangement (-50deg C), Mounts

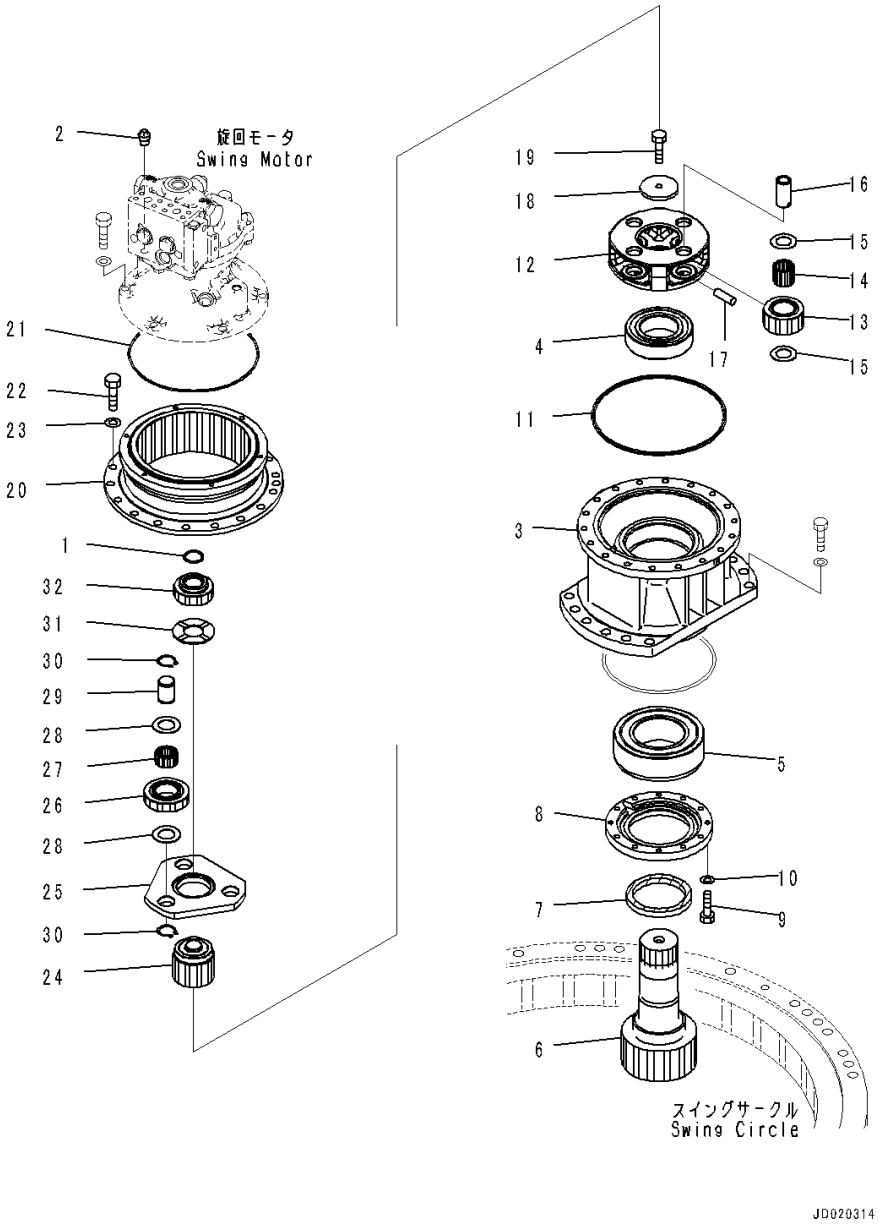


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22U-26-21280 | Ring | 1 | Y200001- |
| 2 | | 07042-00312 | Plug, Taper | 1 | Y200001- |
| 3 | | 20Y-26-31120 | Case | 1 | Y200001- |
| 4 | | 20Y-09-31130 | Bearing | 1 | Y200001- |
| 5 | | 20Y-09-31140 | Bearing | 1 | Y200001- |
| 6 | | 206-26-69111 | Shaft | 1 | Y200001- |
| 7 | | 20Y-09-31120 | Seal | 1 | Y200001- |
| 8 | | 20Y-26-22191 | Cover | 1 | Y200001- |
| 9 | | 01010-81045 | Bolt | 12 | Y200001- |
| 10 | | 01643-31032 | Washer | 12 | Y200001- |
| 11 | | 07000-55310 | O-ring | 1 | Y200001- |
| 12 | | 22U-26-21580 | Carrier | 1 | Y200001- |
| 13 | | 22U-26-21540 | Gear | 4 | Y200001- |
| 14 | | 20G-26-11240 | Bearing | 4 | Y200001- |
| 15 | | 20Y-27-21240 | Washer, Thrust | 8 | Y200001- |
| 16 | | 20Y-26-22250 | Pin | 4 | Y200001- |
| 17 | | 20Y-27-21280 | Pin | 4 | Y200001- |
| 18 | | 20Y-26-21240 | Plate | 1 | Y200001- |
| 19 | | 112-32-11211 | Bolt | 1 | Y200001- |
| 20 | | 22U-26-21551 | Gear | 1 | Y200001- |
| 21 | | 20Y-09-31110 | O-ring | 1 | Y200001- |
| 22 | | 01010-81440 | Bolt | 18 | Y200001- |
| 23 | | 01643-31445 | Washer | 18 | Y200001- |
| 24 | | 22U-26-21530 | Gear | 1 | Y200001- |
| 25 | | 22U-26-21572 | Carrier | 1 | Y200001- |
| 26 | | 22U-26-21520 | Gear | 3 | Y200001- |
| 27 | | 20Y-26-21280 | Bearing | 3 | Y200001- |
| 28 | | 22U-26-21230 | Washer, Thrust | 6 | Y200001- |
| 29 | | 22U-26-21210 | Pin | 3 | Y200001- |
| 30 | | 04064-03515 | Ring | 6 | Y200001- |
| 31 | | 22U-26-21250 | Washer, Thrust | 1 | Y200001- |
| 32 | | 22U-26-21510 | Gear | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. N1210-004005 Swing Machinery, Extreme Cold Area Arrangement (-50deg C), Drain Piping

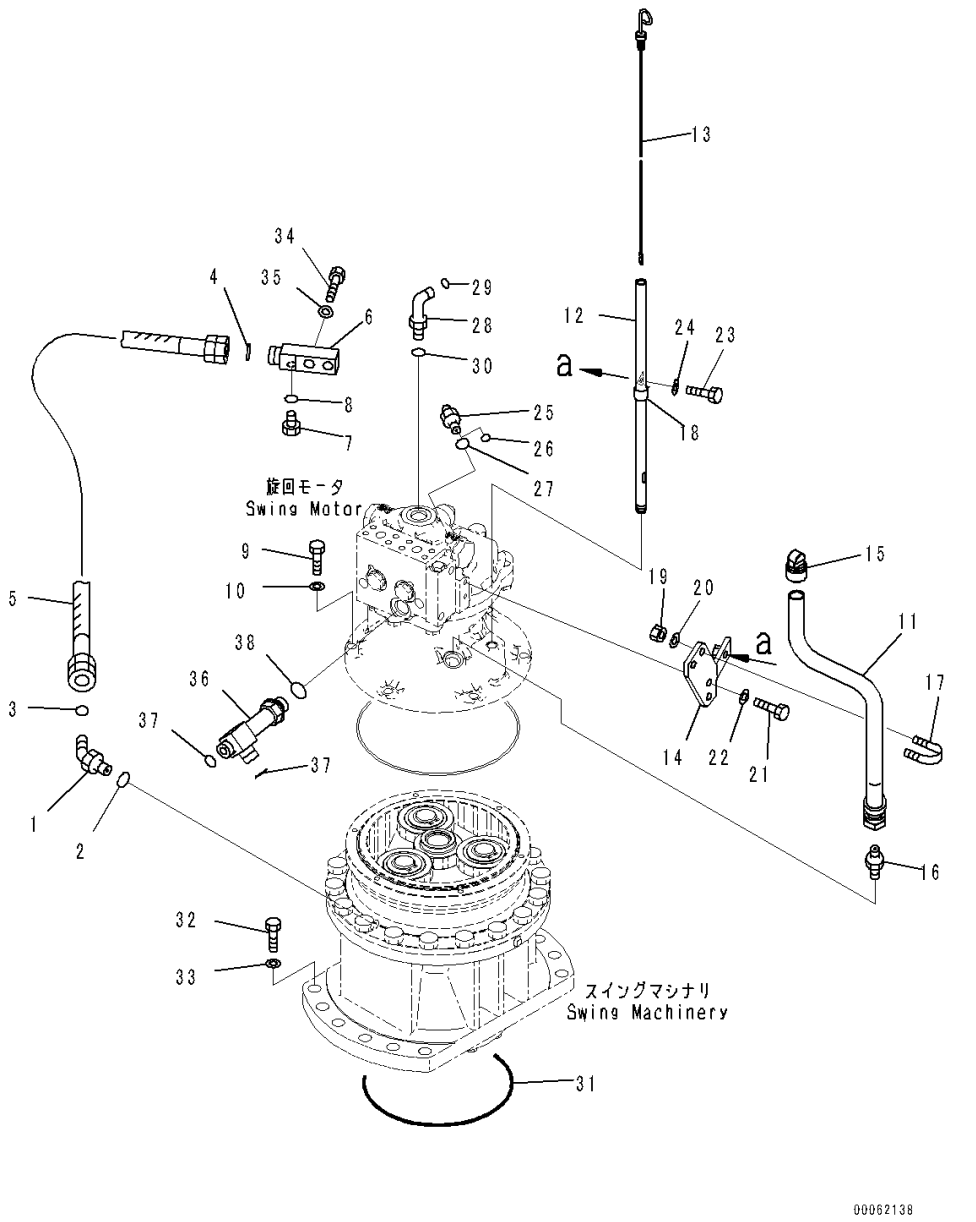


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 02783-10522 | Elbow | 1 | Y200001- |
| 2 | | 07002-52434 | O-ring | 1 | Y200001- |
| 3 | | 02896-51015 | O-ring | 1 | Y200001- |
| 4 | | 02896-51015 | O-ring | 1 | Y200001- |
| 5 | | 02762-305A5 | Hose | 1 | Y200001- |
| 6 | | 20Y-26-31211 | Elbow | 1 | Y200001- |
| 7 | | 07040-11409 | Plug | 1 | Y200001- |
| 8 | | 07002-51423 | O-ring | 1 | Y200001- |
| 9 | | 01010-81035 | Bolt | 6 | Y200001- |
| 10 | | 01643-51032 | Washer | 6 | Y200001- |
| 11 | | 20Y-26-31471 | Tube | 1 | Y200001- |
| 12 | | 20Y-26-31421 | Filler | 1 | Y200001- |
| 13 | | 20Y-26-31431 | Gauge | 1 | Y200001- |
| 14 | | 20Y-26-31460 | Bracket | 1 | Y200001- |
| 15 | | 22U-26-21460 | Cap | 1 | Y200001- |
| 16 | | 07238-10630 | Connector | 1 | Y200001- |
| 17 | | 07283-32738 | Clip, Pipe | 1 | Y200001- |
| 18 | | 04434-51710 | Clip | 1 | Y200001- |
| 19 | | 01597-01009 | Nut | 2 | Y200001- |
| 20 | | 01643-31032 | Washer | 2 | Y200001- |
| 21 | | 01010-81030 | Bolt | 2 | Y200001- |
| 22 | | 01643-31032 | Washer | 2 | Y200001- |
| 23 | | 01010-81025 | Bolt | 1 | Y200001- |
| 24 | | 01643-31032 | Washer | 1 | Y200001- |
| 25 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 26 | | 02896-51008 | O-ring | 1 | Y200001- |
| 27 | | 07002-51423 | O-ring | 1 | Y200001- |
| 28 | | 02782-10630 | Elbow | 1 | Y200001- |
| 29 | | 02896-51018 | O-ring | 1 | Y200001- |
| 30 | | 07002-52434 | O-ring | 1 | Y200001- |
| 31 | | 07000-55240 | O-ring | 1 | Y200001- |
| 32 | | 01010-82060 | Bolt | 12 | Y200001- |
| 33 | | 01643-32060 | Washer | 12 | Y200001- |
| 34 | | 01010-81250 | Bolt | 2 | Y200001- |
| 35 | | 01643-31232 | Washer | 2 | Y200001- |
| 36 | | 20Y-62-41940 | Elbow | 1 | Y200001- |
| 37 | | 02896-51015 | O-ring | 2 | Y200001- |
| 38 | | 07002-52434 | O-ring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. N1310-002001 Swivel Joint, Swivel Joint

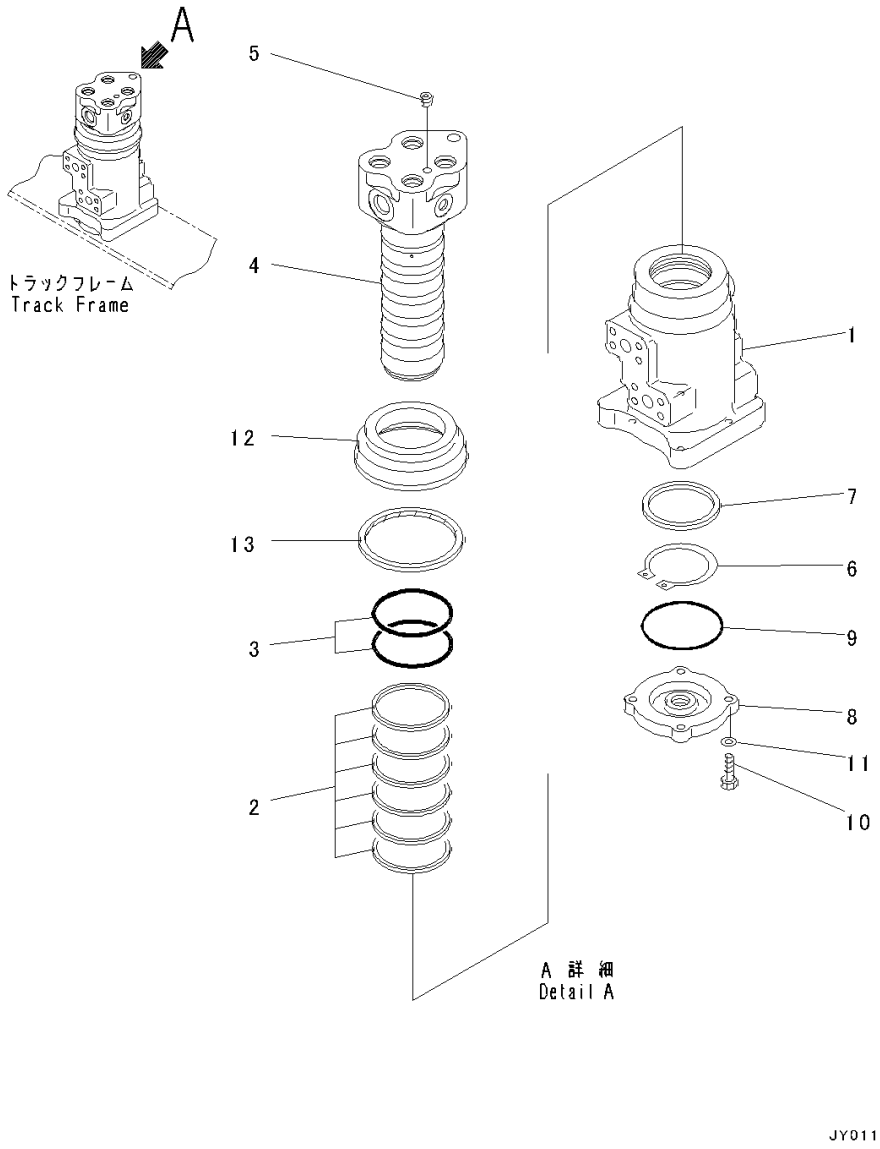


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 703-08-33631 | Swivel Joint Assembly . | 1 | Y200001- |
| 1 | C1 | | • Rotor. | 1 | Y200001- |
| 2 | | 703-08-95620 | • Seal, Oil. | 6 | Y200001- |
| 3 | | 07000-15080 | • O-ring . | 2 | Y200001- |
| 4 | C1 | | • Shaft . | 1 | Y200001- |
| 5 | | 703-08-98930 | •• Plug. | 1 | Y200001- |
| 6 | | 04064-07525 | • Ring, Snap. | 1 | Y200001- |
| 7 | | 703-08-94510 | • Ring . | 1 | Y200001- |
| 8 | | 703-08-93170 | • Cover. | 1 | Y200001- |
| 9 | | 07000-12105 | • O-ring . | 1 | Y200001- |
| 10 | | 01010-80835 | • Bolt . | 4 | Y200001- |
| 11 | | 01643-30823 | • Washer . | 4 | Y200001- |
| 12 | | 703-08-93771 | • Cover. | 1 | Y200001- |
| 13 | | 703-08-95770 | • Seal, Dust. | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. N1310-002002 Swivel Joint, Connecting Parts

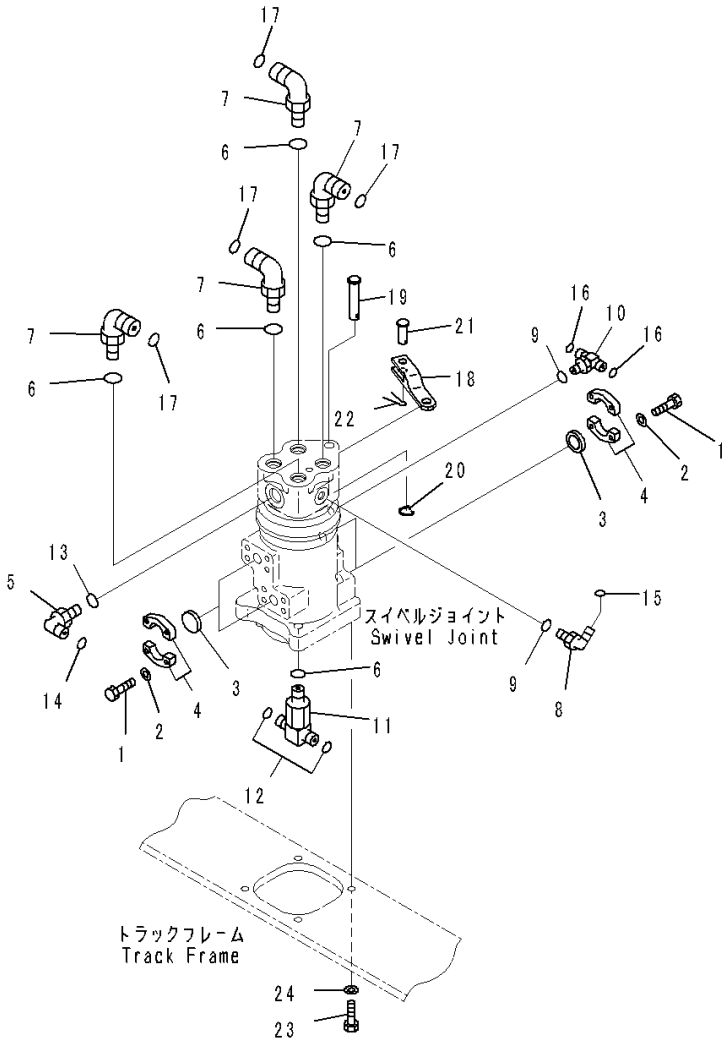



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07372-21035 | Bolt | 16 | Y200001- |
| 2 | | 01643-51032 | Washer | 16 | Y200001- |
| 3 | | 707-88-33030 | Cap | 4 | Y200001- |
| 4 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 5 | | 02782-10522 | Elbow | 1 | Y200001- |
| 6 | | 07002-12434 | O-ring | 5 | Y200001- |
| 7 | | 02782-10628 | Elbow | 4 | Y200001- |
| 8 | | 11Y-62-12160 | Elbow | 1 | Y200001- |
| 9 | | 07002-11423 | O-ring | 2 | Y200001- |
| 10 | | 11Y-62-12250 | Tee | 1 | Y200001- |
| 11 | | 20Y-62-41930 | Tee | 1 | Y200001- |
| 12 | | 02896-11012 | O-ring | 2 | Y200001- |
| 13 | | 07002-12434 | O-ring | 1 | Y200001- |
| 14 | | 02896-11015 | O-ring | 1 | Y200001- |
| 15 | | 02896-11008 | O-ring | 1 | Y200001- |
| 16 | | 02896-11008 | O-ring | 2 | Y200001- |
| 17 | | 02896-11018 | O-ring | 4 | Y200001- |
| 18 | | 22U-62-21583 | Bracket | 1 | Y200001- |
| 19 | | 22U-62-21870 | Pin | 1 | Y200001- |
| 20 | | 22U-62-24420 | Pin | 1 | Y200001- |
| 21 | | 04205-11648 | Pin | 1 | Y200001- |
| 22 | | 04050-14028 | Pin, Cotter | 1 | Y200001- |
| 23 | | 01010-81235 | Bolt | 4 | Y200001- |
| 24 | | 01643-31232 | Washer | 4 | Y200001- |

# TRAVEL SYSTEM AND ITS RELATED PARTS

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. P1120-001001 Travel Piping

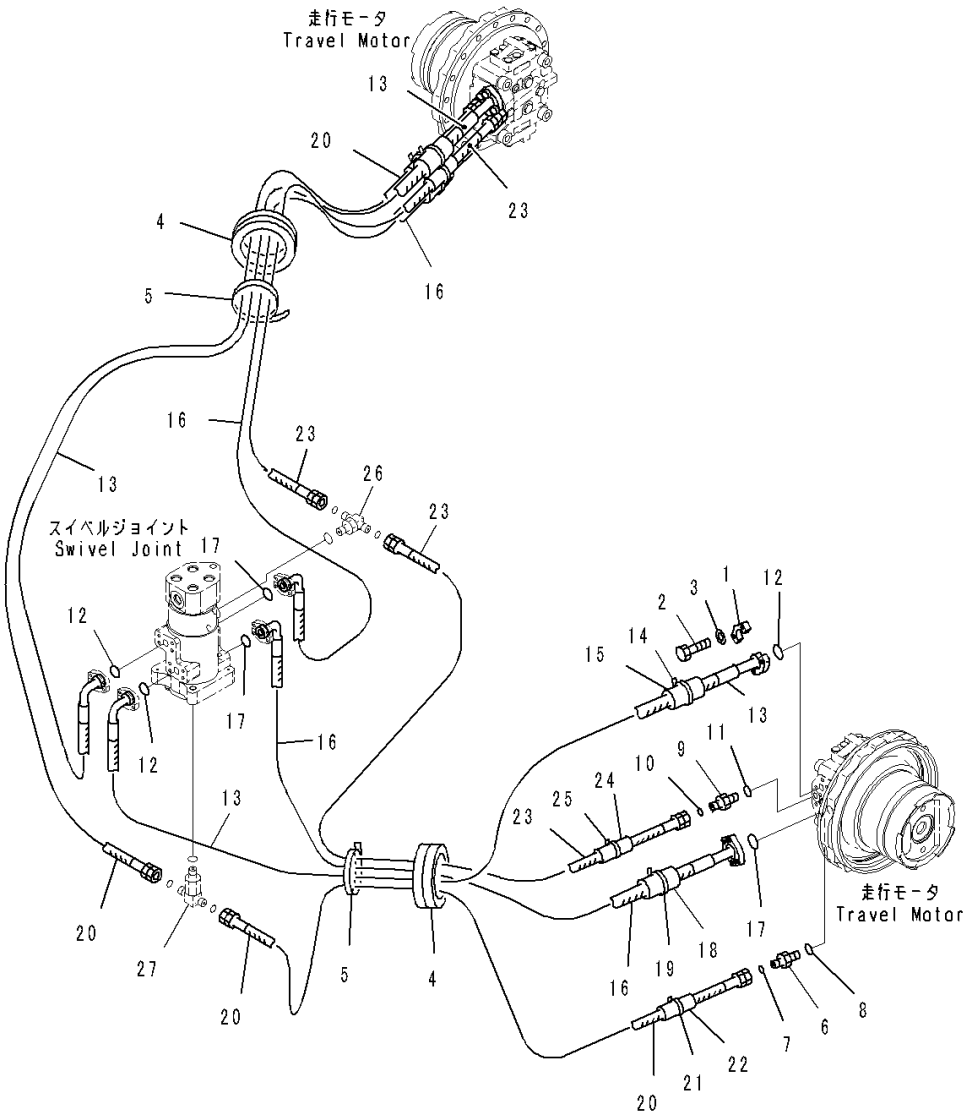


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 2 | | 07372-21035 | Bolt | 16 | Y200001- |
| 3 | | 01643-51032 | Washer | 16 | Y200001- |
| 4 | | 20Y-62-12590 | Grommet | 2 | Y200001- |
| 5 | | 08034-20834 | Band | 2 | Y200001- |
| 6 | | 02781-00422 | Union | 2 | Y200001- |
| 7 | | 02896-11012 | O-ring | 2 | Y200001- |
| 8 | | 07002-12034 | O-ring | 2 | Y200001- |
| 9 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 10 | | 02896-11008 | O-ring | 2 | Y200001- |
| 11 | | 07002-11423 | O-ring | 2 | Y200001- |
| 12 | | 07000-13025 | O-ring | 4 | Y200001- |
| 13 | | 07098-00622 | Hose | 2 | Y200001- |
| 14 | | 08034-00536 | Band | 2 | Y200001- |
| 15 | | 205-62-72240 | Cover | 2 | Y200001- |
| 16 | | 20Y-62-12540 | Hose | 2 | Y200001- |
| 17 | | 07000-13025 | O-ring | 4 | Y200001- |
| 18 | | 205-62-72240 | Cover | 2 | Y200001- |
| 19 | | 08034-00536 | Band | 2 | Y200001- |
| 20 | | 02762-00419 | Hose | 2 | Y200001- |
| 21 | | 08034-00536 | Band | 2 | Y200001- |
| 22 | | 205-62-72240 | Cover | 2 | Y200001- |
| 23 | | 02760-00220 | Hose | 2 | Y200001- |
| 24 | | 205-62-72140 | Cover | 2 | Y200001- |
| 25 | | 08034-00536 | Band | 2 | Y200001- |
| 26 | | (11Y-62-12250) | Tee(Refer to Page 792) | | - |
| 27 | | (20Y-62-41930) | Tee(Refer to Page 792) | | - |

https://truckmanualshub.com/


# FIG. P1120-003001 Travel Piping, With Webasto Heater

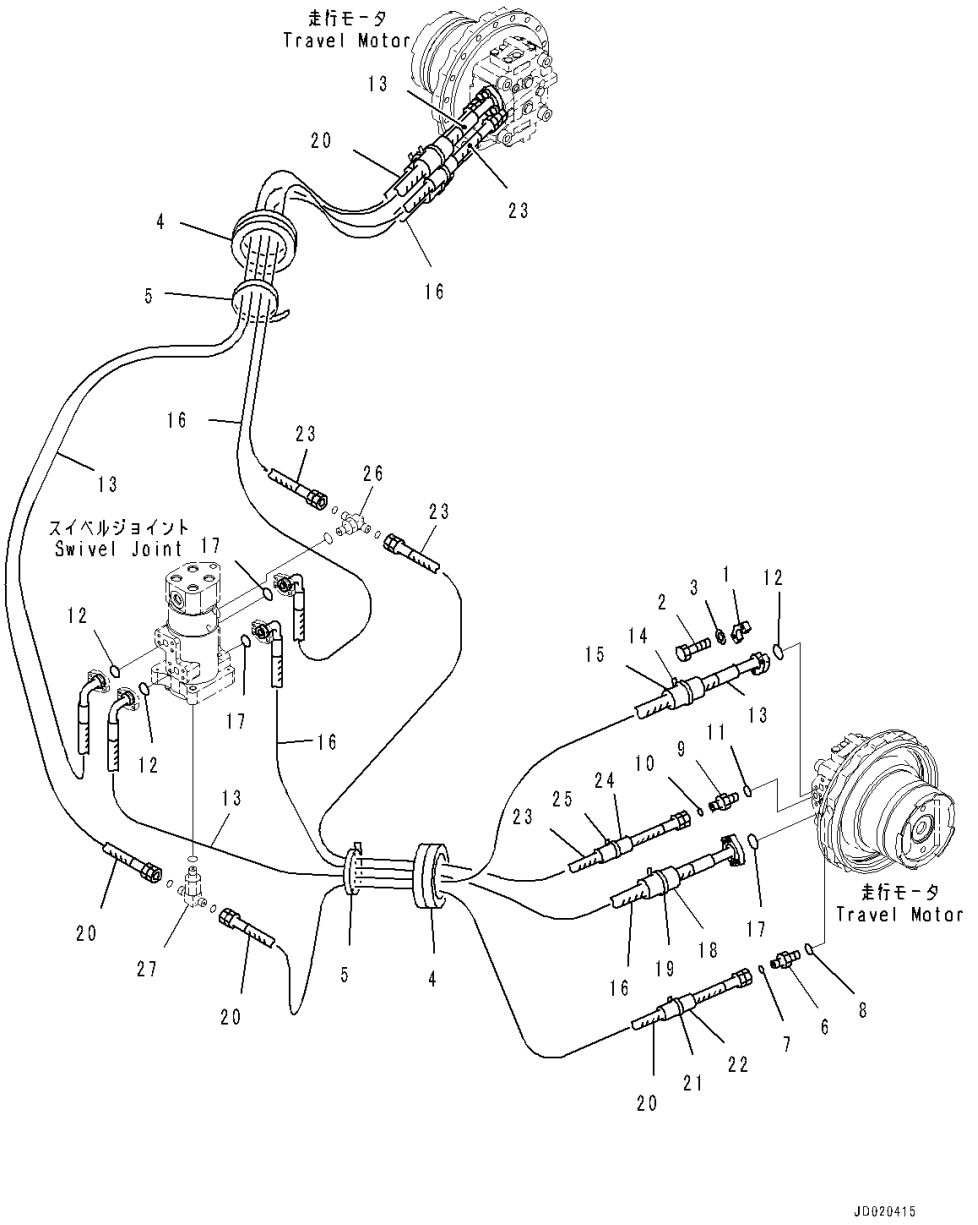


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 2 | | 07372-21035 | Bolt | 16 | Y200001- |
| 3 | | 01643-51032 | Washer | 16 | Y200001- |
| 4 | | 20Y-62-12590 | Grommet | 2 | Y200001- |
| 5 | | 08034-20834 | Band | 2 | Y200001- |
| 6 | | 02781-00422 | Union | 2 | Y200001- |
| 7 | | 02896-51012 | O-ring | 2 | Y200001- |
| 8 | | 07002-52034 | O-ring | 2 | Y200001- |
| 9 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 10 | | 02896-51008 | O-ring | 2 | Y200001- |
| 11 | | 07002-51423 | O-ring | 2 | Y200001- |
| 12 | | 07000-53025 | O-ring | 4 | Y200001- |
| 13 | | 07098-00622 | Hose | 2 | Y200001- |
| 14 | | 08034-20536 | Band | 2 | Y200001- |
| 15 | | 205-62-72240 | Cover | 2 | Y200001- |
| 16 | | 20Y-62-12540 | Hose | 2 | Y200001- |
| 17 | | 07000-53025 | O-ring | 4 | Y200001- |
| 18 | | 205-62-72240 | Cover | 2 | Y200001- |
| 19 | | 08034-20536 | Band | 2 | Y200001- |
| 20 | | 02762-00419 | Hose | 2 | Y200001- |
| 21 | | 08034-00536 | Band | 2 | Y200001- |
| 22 | | 205-62-72240 | Cover | 2 | Y200001- |
| 23 | | 02760-00220 | Hose | 2 | Y200001- |
| 24 | | 205-62-72140 | Cover | 2 | Y200001- |
| 25 | | 08034-00536 | Band | 2 | Y200001- |
| 26 | | (11Y-62-12250) | Tee(Refer to Page 792) | | - |
| 27 | | (20Y-62-41930) | Tee(Refer to Page 792) | | - |

https://truckmanualshub.com/


# FIG. P1120-002001 Travel Piping, LC

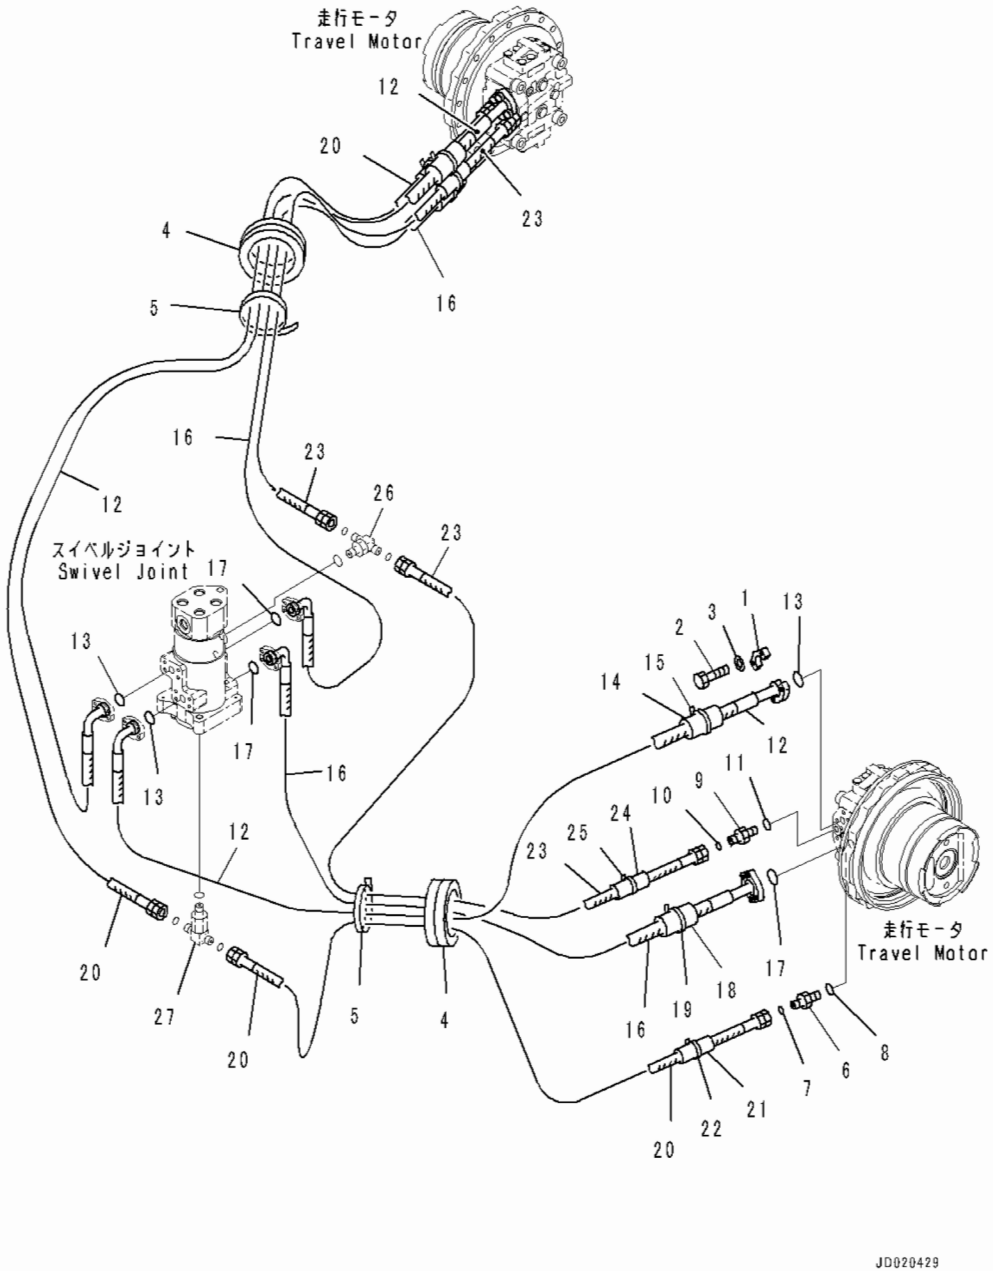


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 2 | | 07372-21035 | Bolt | 16 | Y200001- |
| 3 | | 01643-51032 | Washer | 16 | Y200001- |
| 4 | | 20Y-62-12590 | Grommet | 2 | Y200001- |
| 5 | | 08034-20834 | Band | 2 | Y200001- |
| 6 | | 02781-00422 | Union | 2 | Y200001- |
| 7 | | 02896-11012 | O-ring | 2 | Y200001- |
| 8 | | 07002-12034 | O-ring | 2 | Y200001- |
| 9 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 10 | | 02896-11008 | O-ring | 2 | Y200001- |
| 11 | | 07002-11423 | O-ring | 2 | Y200001- |
| 12 | | 07098-00624 | Hose, Flange Type | 2 | Y200001- |
| 13 | | 07000-13025 | O-ring | 4 | Y200001- |
| 14 | | 205-62-72240 | Cover | 2 | Y200001- |
| 15 | | 08034-00536 | Band | 2 | Y200001- |
| 16 | | 20Y-62-12520 | Hose | 2 | Y200001- |
| 17 | | 07000-13025 | O-ring | 4 | Y200001- |
| 18 | | 205-62-72240 | Cover | 2 | Y200001- |
| 19 | | 08034-00536 | Band | 2 | Y200001- |
| 20 | | 02762-00421 | Hose | 2 | Y200001- |
| 21 | | 205-62-72240 | Cover | 2 | Y200001- |
| 22 | | 08034-00536 | Band | 2 | Y200001- |
| 23 | | 02760-00222 | Hose, Face Seal Type | 2 | Y200001- |
| 24 | | 205-62-72140 | Cover | 2 | Y200001- |
| 25 | | 08034-00536 | Band | 2 | Y200001- |
| 26 | | (11Y-62-12250) | Tee(Refer to Page 792) | | - |
| 27 | | (20Y-62-41930) | Tee(Refer to Page 792) | | - |

https://truckmanualshub.com/


# FIG. P1120-004001 Travel Piping, With Webasto Heater, LC

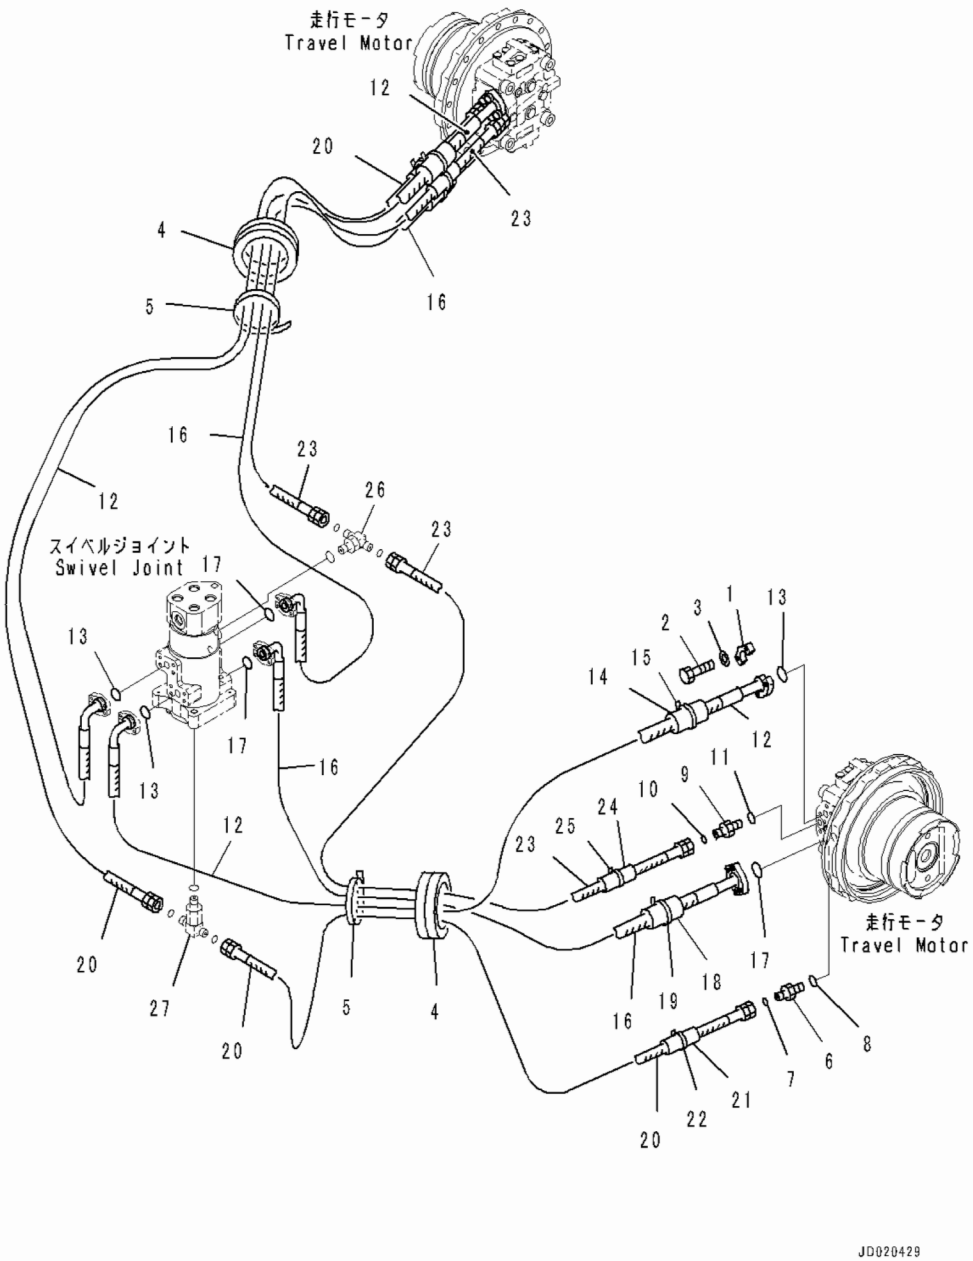


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 2 | | 07372-21035 | Bolt | 16 | Y200001- |
| 3 | | 01643-51032 | Washer | 16 | Y200001- |
| 4 | | 20Y-62-12590 | Grommet | 2 | Y200001- |
| 5 | | 08034-20834 | Band | 2 | Y200001- |
| 6 | | 02781-00422 | Union | 2 | Y200001- |
| 7 | | 02896-51012 | O-ring | 2 | Y200001- |
| 8 | | 07002-52034 | O-ring | 2 | Y200001- |
| 9 | | 11Y-62-12130 | Nipple | 2 | Y200001- |
| 10 | | 02896-51008 | O-ring | 2 | Y200001- |
| 11 | | 07002-51423 | O-ring | 2 | Y200001- |
| 12 | | 07098-00624 | Hose, Flange Type | 2 | Y200001- |
| 13 | | 07000-53025 | O-ring | 4 | Y200001- |
| 14 | | 205-62-72240 | Cover | 2 | Y200001- |
| 15 | | 08034-20536 | Band | 2 | Y200001- |
| 16 | | 20Y-62-12520 | Hose | 2 | Y200001- |
| 17 | | 07000-53025 | O-ring | 4 | Y200001- |
| 18 | | 205-62-72240 | Cover | 2 | Y200001- |
| 19 | | 08034-20536 | Band | 2 | Y200001- |
| 20 | | 02762-00421 | Hose | 2 | Y200001- |
| 21 | | 205-62-72240 | Cover | 2 | Y200001- |
| 22 | | 08034-00536 | Band | 2 | Y200001- |
| 23 | | 02760-00222 | Hose, Face Seal Type | 2 | Y200001- |
| 24 | | 205-62-72140 | Cover | 2 | Y200001- |
| 25 | | 08034-00536 | Band | 2 | Y200001- |
| 26 | | (11Y-62-12250) | Tee(Refer to Page 792) | | - |
| 27 | | (20Y-62-41930) | Tee(Refer to Page 792) | | - |

https://truckmanualshub.com/


# FIG. P1210-002001 Final Drive, Inner Parts, Travel Motor (1/2)

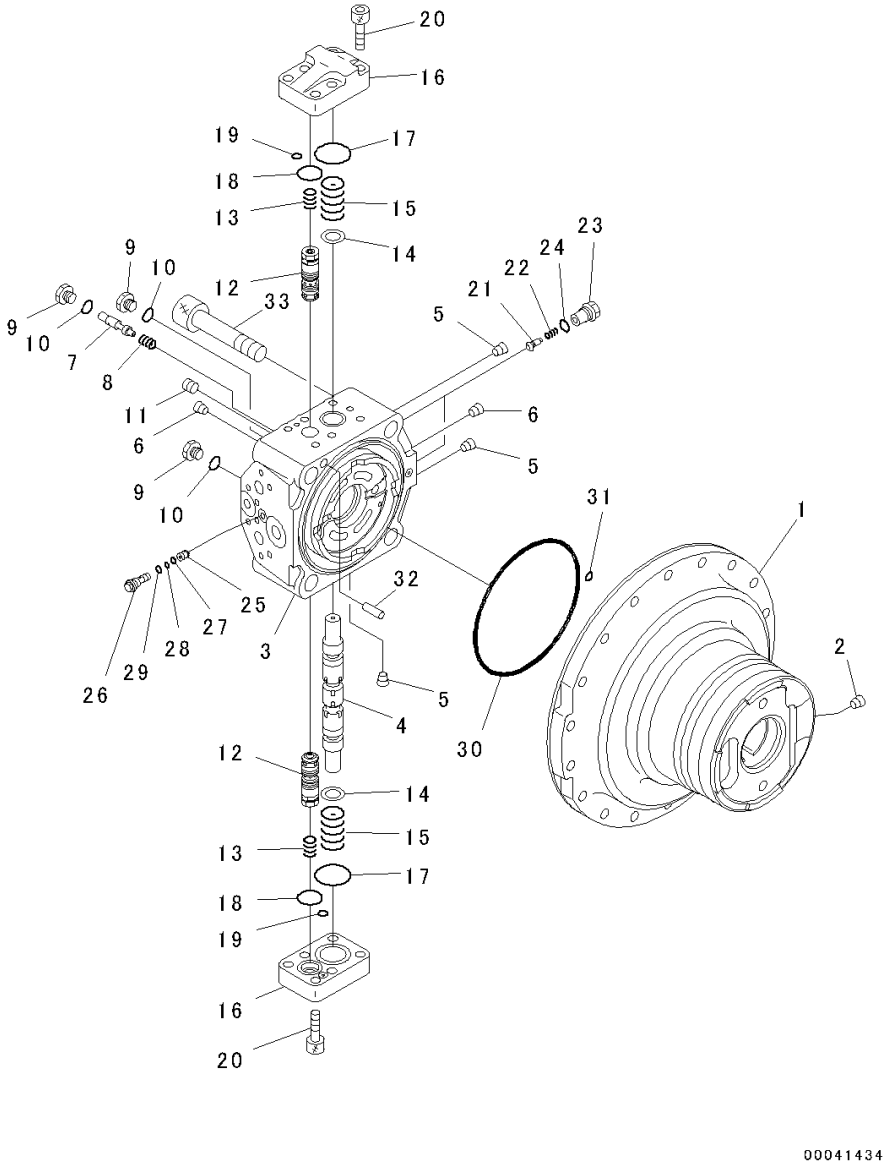


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-27-00500 | Final Drive Assembly | 2 | Y200001- |
| | | 708-8F-00250 | • Motor Assembly | 1 | Y200001- |
| C2 | | 708-8F-04681 | •• Case Subassembly | 1 | Y200001- |
| 1 | C1 | | ••• Case, Motor | 1 | Y200001- |
| 2 | C1 | | ••• Plug | 1 | Y200001- |
| C2 | | 708-8F-04270 | •• Cover Subassembly, End | 1 | Y200001- |
| 3 | C1 | | ••• Cover, End | 1 | Y200001- |
| 4 | C1 | | ••• Spool | 1 | Y200001- |
| 5 | C1 | | ••• Plug | 3 | Y200001- |
| 6 | C1 | | ••• Plug | 2 | Y200001- |
| 7 | C1 | | ••• Spool | 1 | Y200001- |
| 8 | C2 | 708-8F-34220 | ••• Spring | 1 | Y200001- |
| 9 | | 708-8H-11530 | •• Plug | 3 | Y200001- |
| 10 | | 07002-11423 | •• O-ring | 3 | Y200001- |
| 11 | | 20B-27-11210 | •• Bleeder | 1 | Y200001- |
| 12 | | 702-73-02112 | •• Valve Assembly, Relief | 2 | Y200001- |
| 13 | | 708-8F-36611 | •• Spring | 2 | Y200001- |
| 14 | C1 | | •• Ring | 2 | Y200001- |
| 15 | | 708-8H-36121 | •• Spring | 2 | Y200001- |
| 16 | | 708-8F-36311 | •• Cover | 2 | Y200001- |
| 17 | | 07000-13040 | •• O-ring | 2 | Y200001- |
| 18 | | 700-93-11320 | •• O-ring | 2 | Y200001- |
| 19 | | 07000-11009 | •• O-ring | 2 | Y200001- |
| 20 | | 01252-61235 | •• Bolt | 12 | Y200001- |
| 21 | | 708-8F-34120 | •• Valve | 2 | Y200001- |
| 22 | | 722-10-91130 | •• Spring | 2 | Y200001- |
| 23 | | 708-8F-34110 | •• Plug | 2 | Y200001- |
| 24 | | 07002-11823 | •• O-ring | 2 | Y200001- |
| 25 | | 708-8E-16180 | •• Valve | 1 | Y200001- |
| 26 | | 708-8F-31650 | •• Plug | 1 | Y200001- |
| 27 | | 07000-11006 | •• O-ring | 1 | Y200001- |
| 28 | | 07001-01006 | •• Ring, Back-up | 1 | Y200001- |
| 29 | | 07002-11223 | •• O-ring | 1 | Y200001- |
| 30 | | 708-8F-31610 | •• O-ring | 1 | Y200001- |
| 31 | | 07000-11009 | •• O-ring | 1 | Y200001- |
| 32 | C2 | 04020-01228 | •• Pin, Dowel | 1 | Y200001- |
| 33 | | 708-8F-31210 | •• Bolt | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. P1210-002002 Final Drive, Inner Parts, Travel Motor (2/2)

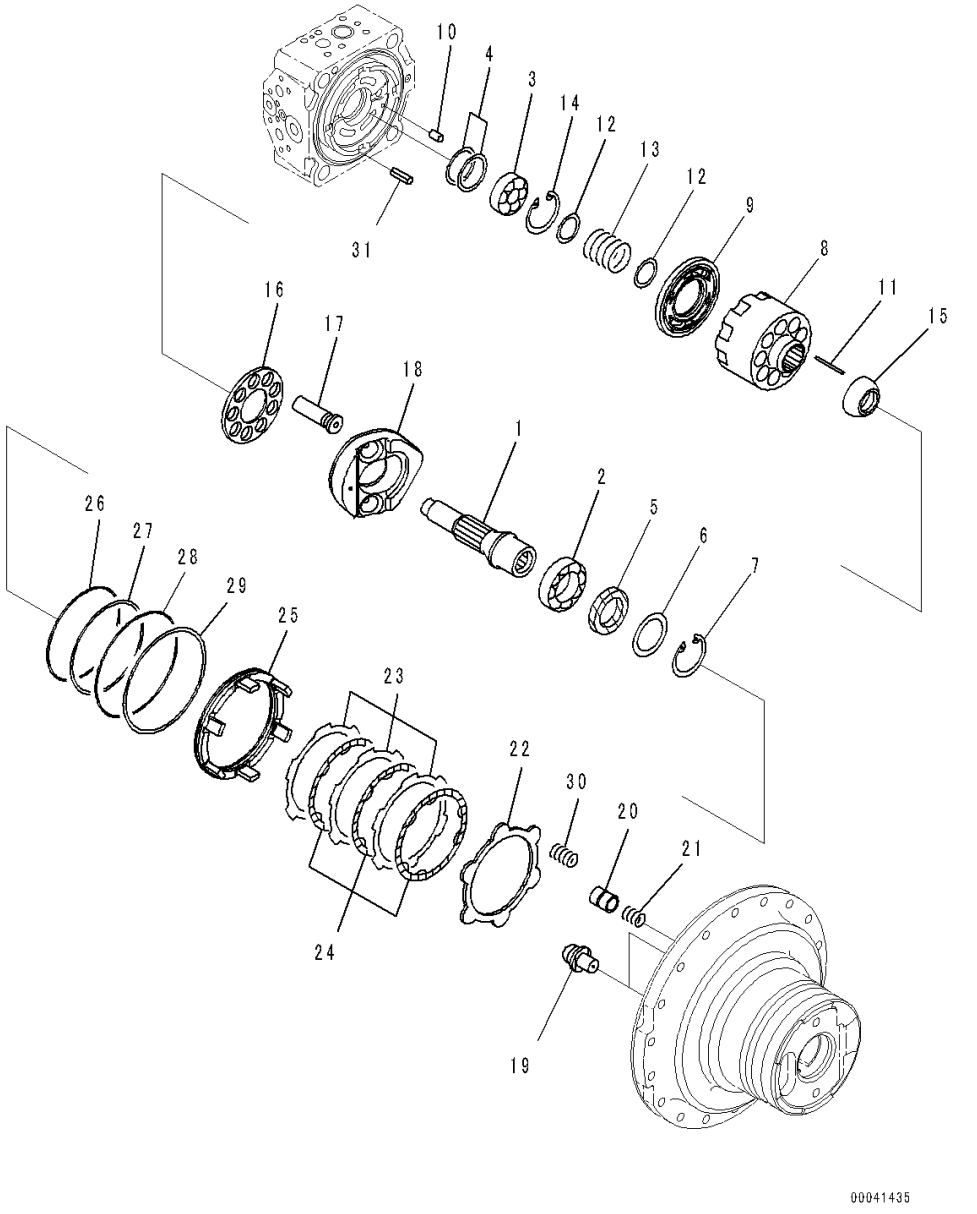


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-27-00500 | Final Drive Assembly | 2 | Y200001- |
| | | 708-8F-00250 | • Motor Assembly | 1 | Y200001- |
| 1 | C2 | 708-8F-32121 | •• Shaft | 1 | Y200001- |
| 2 | C2 | 708-8F-12151 | •• Bearing | 1 | Y200001- |
| 3 | C2 | 708-7L-12140 | •• Bearing | 1 | Y200001- |
| 4 | C2 | 708-7L-05010 | •• Spacer Kit | 1 | Y200001- |
| C1 | | | ••• Spacer, T=1.5mm | 1 | Y200001- |
| C1 | | | ••• Spacer, T=1.6mm | 1 | Y200001- |
| C1 | | | ••• Spacer, T=1.7mm | 1 | Y200001- |
| C1 | | | ••• Spacer, T=1.8mm | 1 | Y200001- |
| C1 | | | ••• Spacer, T=1.9mm | 1 | Y200001- |
| C1 | | | ••• Spacer, T=2.0mm | 1 | Y200001- |
| 5 | | 706-7G-11291 | •• Seal, Oil | 1 | Y200001- |
| 6 | | 708-8F-12230 | •• Spacer, T=3.2mm | 1 | Y200001- |
| 7 | | 04065-07225 | •• Ring, Snap | 1 | Y200001- |
| 8 | C1 | | •• Block, Cylinder | 1 | Y200001- |
| 9 | C1 | | •• Plate | 1 | Y200001- |
| 10 | C1 | | •• Pin | 1 | Y200001- |
| 11 | C2 | 708-8F-33360 | •• Pin | 3 | Y200001- |
| 12 | C2 | 708-7L-13140 | •• Seat | 2 | Y200001- |
| 13 | C2 | 708-8F-33160 | •• Spring | 1 | Y200001- |
| 14 | C2 | 04065-04818 | •• Ring, Snap | 1 | Y200001- |
| 15 | C2 | 708-8F-33350 | •• Guide, Retainer | 1 | Y200001- |
| 16 | C2 | 708-2L-33350 | •• Retainer, Shoe | 1 | Y200001- |
| 17 | C2 | 708-8F-33310 | •• Piston Subassembly | 9 | Y200001- |
| 18 | C2 | 708-8F-33481 | •• Cam, Rocker | 1 | Y200001- |
| 19 | C2 | 708-8F-33710 | •• Ball, Retainer | 2 | Y200001- |
| 20 | C2 | 708-8F-34141 | •• Piston | 1 | Y200001- |
| 21 | C2 | 708-8F-34150 | •• Spring | 1 | Y200001- |
| 22 | C2 | 708-8F-35220 | •• Plate | 1 | Y200001- |
| 23 | C2 | 708-8F-35230 | •• Plate | 3 | Y200001- |
| 24 | C2 | 708-8F-35120 | •• Disc | 3 | Y200001- |
| 25 | C2 | 708-8F-35140 | •• Piston, Brake | 1 | Y200001- |
| 26 | C2 | 708-8F-35160 | •• O-ring | 1 | Y200001- |
| 27 | C2 | 708-8F-35170 | •• Ring, Back-up | 1 | Y200001- |
| 28 | C2 | 708-8F-35180 | •• O-ring | 1 | Y200001- |
| 29 | C2 | 708-8F-35190 | •• Ring, Back-up | 1 | Y200001- |
| 30 | C2 | 708-8F-35150 | •• Spring | 6 | Y200001- |
| 31 | C2 | 04025-00324 | •• Pin, Spring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. P1210-002003 Final Drive, Final Drive

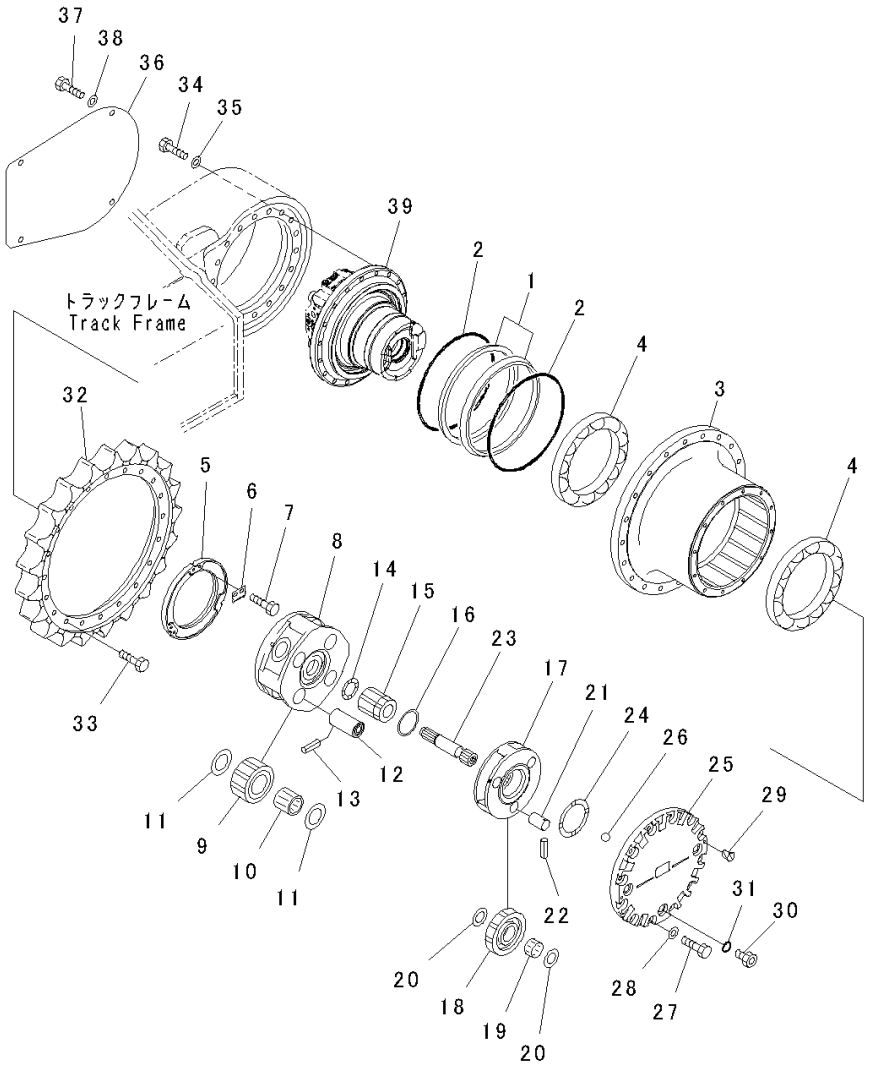


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-27-00500 | Final Drive Assembly | 2 | Y200001- |
| | | 20Y-27-00110 | • Floating Seal Assembly | 1 | Y200001- |
| 1 | C1 | | •• Seal | 2 | Y200001- |
| 2 | C1 | | •• O-ring | 2 | Y200001- |
| 3 | | 20Y-27-41140 | • Hub | 1 | Y200001- |
| 4 | | 20Y-27-41260 | • Bearing | 2 | Y200001- |
| 5 | | 20Y-27-41190 | • Nut, Lock | 1 | Y200001- |
| 6 | | 20Y-27-41180 | • Lock | 1 | Y200001- |
| 7 | | 01010-81020 | • Bolt | 2 | Y200001- |
| 8 | | 20Y-27-41150 | • Carrier | 1 | Y200001- |
| 9 | | 20Y-27-41130 | • Gear | 4 | Y200001- |
| 10 | | 20Y-27-41250 | • Bearing | 4 | Y200001- |
| 11 | | 20Y-27-41270 | • Washer, Thrust | 8 | Y200001- |
| 12 | | 20Y-27-41170 | • Pin | 4 | Y200001- |
| 13 | | 20Y-27-21290 | • Pin | 4 | Y200001- |
| 14 | | 20Y-27-13310 | • Washer, Thrust | 1 | Y200001- |
| 15 | | 20Y-27-41120 | • Gear | 1 | Y200001- |
| 16 | | 20Y-27-22240 | • Washer, Thrust | 1 | Y200001- |
| 17 | | 20Y-27-31111 | • Carrier | 1 | Y200001- |
| 18 | | 20Y-27-22120 | • Gear | 3 | Y200001- |
| 19 | | 20Y-27-22210 | • Bearing | 3 | Y200001- |
| 20 | | 20Y-27-21240 | • Washer, Thrust | 6 | Y200001- |
| 21 | | 20Y-27-21220 | • Pin | 3 | Y200001- |
| 22 | | 20Y-27-21280 | • Pin | 3 | Y200001- |
| 23 | | 20Y-27-41110 | • Shaft | 1 | Y200001- |
| 24 | | 20Y-27-21310 | • Washer | 1 | Y200001- |
| 25 | | 20Y-27-41160 | • Cover | 1 | Y200001- |
| 26 | | 04260-01587 | • Ball, Steel | 1 | Y200001- |
| 27 | | 01010-81240 | • Bolt | 12 | Y200001- |
| 28 | | 01643-31232 | • Washer | 12 | Y200001- |
| 29 | | 07049-01012 | • Plug | 2 | Y200001- |
| 30 | | 20Y-27-31190 | • Plug | 3 | Y200001- |
| 31 | | 07002-12434 | • O-ring | 3 | Y200001- |
| 32 | | 20Y-27-11582 | • Sprocket | 1 | Y200001- |
| 33 | | 20Y-27-11561 | • Bolt | 20 | Y200001- |
| 34 | | 01010-61660 | Bolt | 36 | Y200001- |
| 35 | | 01643-31645 | Washer | 36 | Y200001- |
| 36 | | 20Y-30-21191 | Cover | 2 | Y200001- |
| 37 | | 01010-81230 | Bolt | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. P1210-002003 Final Drive, Final Drive

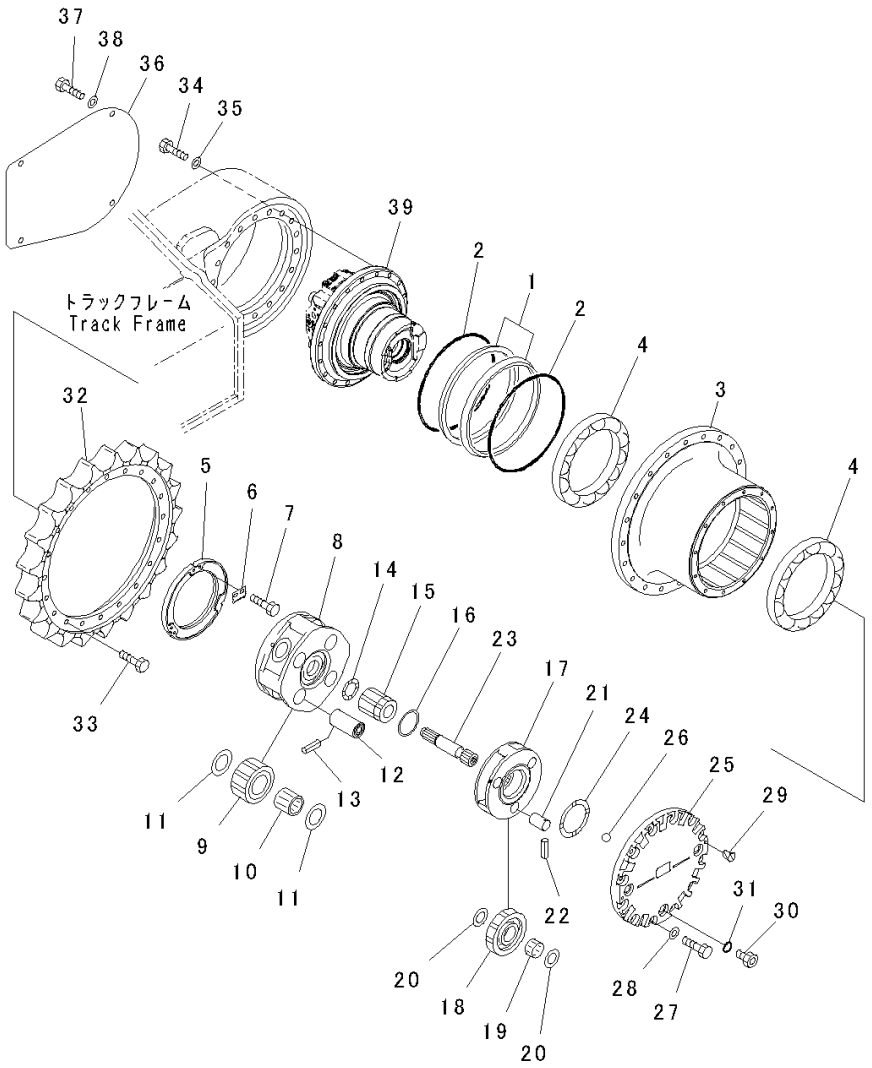


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | 01643-31232 | Washer ..... | 8 | Y200001- |
| 39 | | (708-8F-00250) | Motor Assembly(Refer to Page 796) | | - |

https://truckmanualshub.com/


# FIG. P1210-003001 Final Drive, Extreme Cold Area Arrangement (-50deg C), Inner Parts, Travel Motor (1/2)

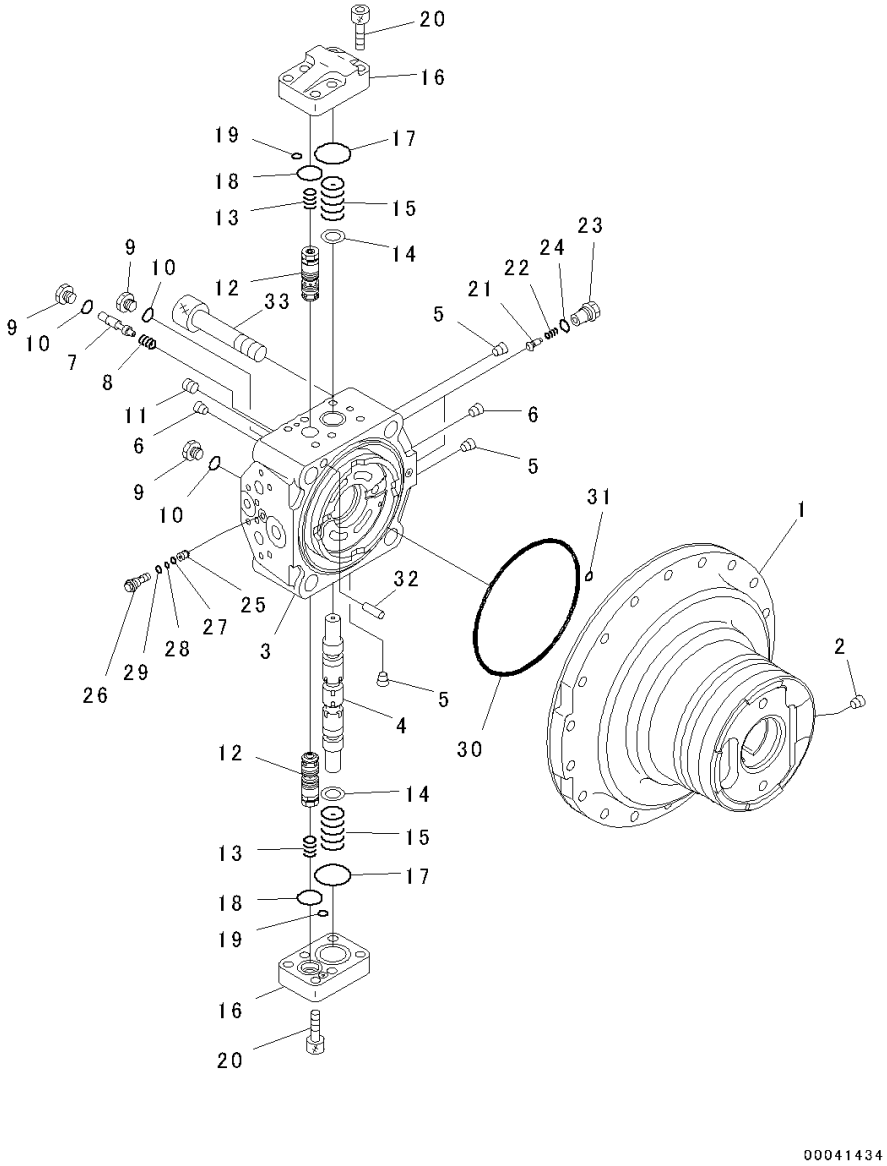


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-27-00510 | Final Drive Assembly | 2 | Y200001- |
| | | 708-8F-00250 | • Motor Assembly. | 1 | Y200001- |
| | C2 | 708-8F-04681 | •• Case Subassembly. | 1 | Y200001- |
| 1 | C1 | | ••• Case, Motor | 1 | Y200001- |
| 2 | C1 | | ••• Plug. | 1 | Y200001- |
| | C2 | 708-8F-04270 | •• Cover Subassembly, End | 1 | Y200001- |
| 3 | C1 | | ••• Cover, End. | 1 | Y200001- |
| 4 | C1 | | ••• Spool. | 1 | Y200001- |
| 5 | C1 | | ••• Plug. | 3 | Y200001- |
| 6 | C1 | | ••• Plug. | 2 | Y200001- |
| 7 | C1 | | ••• Spool. | 1 | Y200001- |
| 8 | C2 | 708-8F-34220 | ••• Spring. | 1 | Y200001- |
| 9 | | 708-8H-11530 | •• Plug. | 3 | Y200001- |
| 10 | | 07002-11423 | •• O-ring. | 3 | Y200001- |
| 11 | | 20B-27-11210 | •• Bleeder | 1 | Y200001- |
| 12 | | 702-73-02112 | •• Valve Assembly, Relief. | 2 | Y200001- |
| 13 | | 708-8F-36611 | •• Spring | 2 | Y200001- |
| 14 | C1 | | •• Ring | 2 | Y200001- |
| 15 | | 708-8H-36121 | •• Spring | 2 | Y200001- |
| 16 | | 708-8F-36311 | •• Cover | 2 | Y200001- |
| 17 | | 07000-13040 | •• O-ring. | 2 | Y200001- |
| 18 | | 700-93-11320 | •• O-ring. | 2 | Y200001- |
| 19 | | 07000-11009 | •• O-ring. | 2 | Y200001- |
| 20 | | 01252-61235 | •• Bolt. | 12 | Y200001- |
| 21 | | 708-8F-34120 | •• Valve. | 2 | Y200001- |
| 22 | | 722-10-91130 | •• Spring | 2 | Y200001- |
| 23 | | 708-8F-34110 | •• Plug. | 2 | Y200001- |
| 24 | | 07002-11823 | •• O-ring. | 2 | Y200001- |
| 25 | | 708-8E-16180 | •• Valve. | 1 | Y200001- |
| 26 | | 708-8F-31650 | •• Plug. | 1 | Y200001- |
| 27 | | 07000-11006 | •• O-ring. | 1 | Y200001- |
| 28 | | 07001-01006 | •• Ring, Back-up | 1 | Y200001- |
| 29 | | 07002-11223 | •• O-ring. | 1 | Y200001- |
| 30 | | 708-8F-31610 | •• O-ring. | 1 | Y200001- |
| 31 | | 07000-11009 | •• O-ring. | 1 | Y200001- |
| 32 | C2 | 04020-01228 | •• Pin, Dowel. | 1 | Y200001- |
| 33 | | 708-8F-31210 | •• Bolt. | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. P1210-003002 Final Drive, Extreme Cold Area Arrangement (-50deg C), Inner Parts, Travel Motor (2/2)

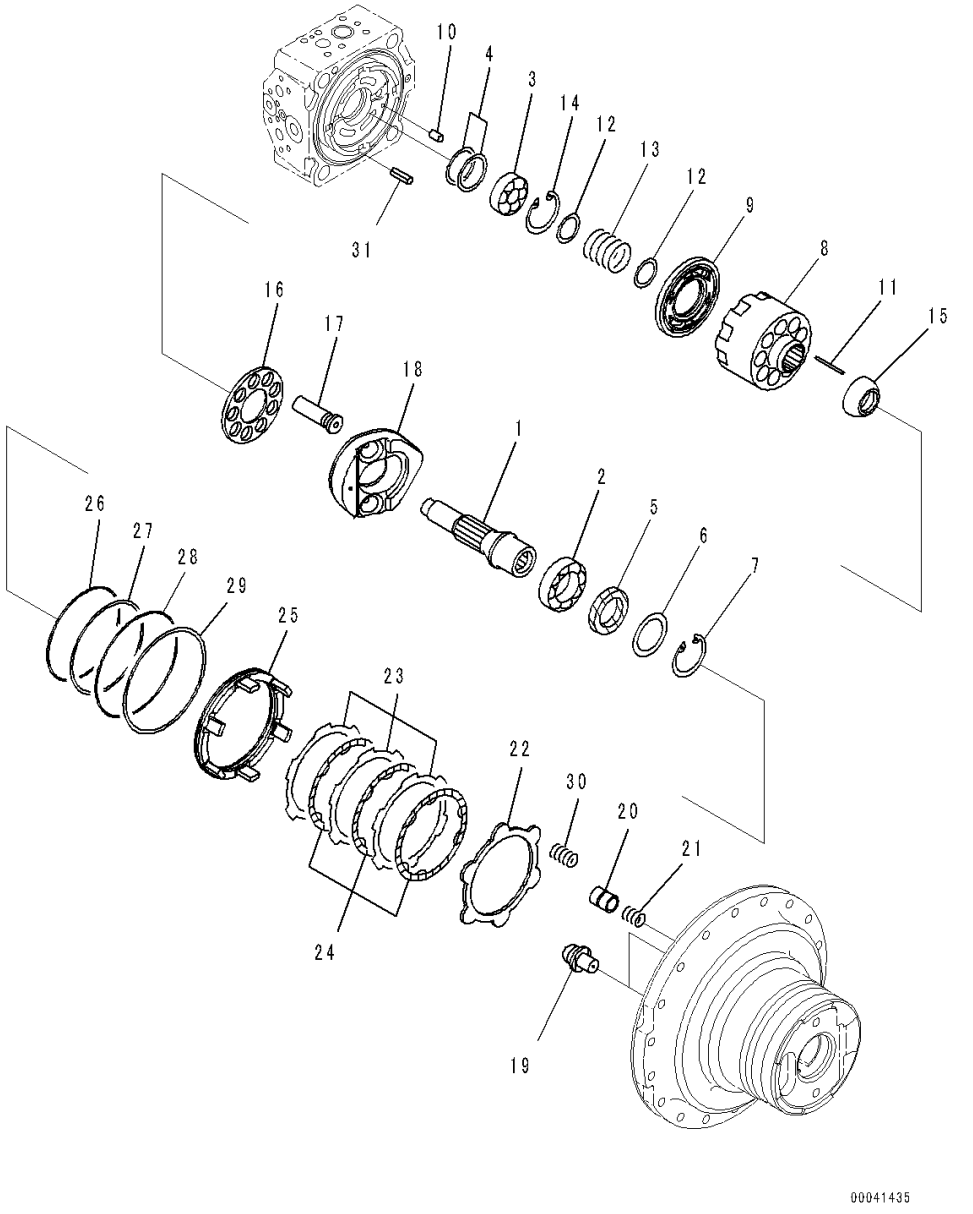


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-27-00510 | Final Drive Assembly | 2 | Y200001- |
| | | 708-8F-00250 | • Motor Assembly | 1 | Y200001- |
| 1 | C2 | 708-8F-32121 | •• Shaft | 1 | Y200001- |
| 2 | C2 | 708-8F-12151 | •• Bearing | 1 | Y200001- |
| 3 | C2 | 708-7L-12140 | •• Bearing | 1 | Y200001- |
| 4 | C2 | 708-7L-05010 | •• Spacer Kit | 1 | Y200001- |
| | C1 | | ••• Spacer, T=1.5mm | 1 | Y200001- |
| | C1 | | ••• Spacer, T=1.6mm | 1 | Y200001- |
| | C1 | | ••• Spacer, T=1.7mm | 1 | Y200001- |
| | C1 | | ••• Spacer, T=1.8mm | 1 | Y200001- |
| | C1 | | ••• Spacer, T=1.9mm | 1 | Y200001- |
| | C1 | | ••• Spacer, T=2.0mm | 1 | Y200001- |
| 5 | | 706-7G-11291 | •• Seal, Oil | 1 | Y200001- |
| 6 | | 708-8F-12230 | •• Spacer, T=3.2mm | 1 | Y200001- |
| 7 | | 04065-07225 | •• Ring, Snap | 1 | Y200001- |
| 8 | C1 | | •• Block, Cylinder | 1 | Y200001- |
| 9 | C1 | | •• Plate | 1 | Y200001- |
| 10 | C1 | | •• Pin | 1 | Y200001- |
| 11 | C2 | 708-8F-33360 | •• Pin | 3 | Y200001- |
| 12 | C2 | 708-7L-13140 | •• Seat . | 2 | Y200001- |
| 13 | C2 | 708-8F-33160 | •• Spring | 1 | Y200001- |
| 14 | C2 | 04065-04818 | •• Ring, Snap | 1 | Y200001- |
| 15 | C2 | 708-8F-33350 | •• Guide, Retainer | 1 | Y200001- |
| 16 | C2 | 708-2L-33350 | •• Retainer, Shoe | 1 | Y200001- |
| 17 | C2 | 708-8F-33310 | •• Piston Subassembly | 9 | Y200001- |
| 18 | C2 | 708-8F-33481 | •• Cam, Rocker | 1 | Y200001- |
| 19 | C2 | 708-8F-33710 | •• Ball, Retainer | 2 | Y200001- |
| 20 | C2 | 708-8F-34141 | •• Piston | 1 | Y200001- |
| 21 | C2 | 708-8F-34150 | •• Spring | 1 | Y200001- |
| 22 | C2 | 708-8F-35220 | •• Plate | 1 | Y200001- |
| 23 | C2 | 708-8F-35230 | •• Plate | 3 | Y200001- |
| 24 | C2 | 708-8F-35120 | •• Disc | 3 | Y200001- |
| 25 | C2 | 708-8F-35140 | •• Piston, Brake | 1 | Y200001- |
| 26 | C2 | 708-8F-35160 | •• O-ring | 1 | Y200001- |
| 27 | C2 | 708-8F-35170 | •• Ring, Back-up | 1 | Y200001- |
| 28 | C2 | 708-8F-35180 | •• O-ring | 1 | Y200001- |
| 29 | C2 | 708-8F-35190 | •• Ring, Back-up | 1 | Y200001- |
| 30 | C2 | 708-8F-35150 | •• Spring | 6 | Y200001- |
| 31 | C2 | 04025-00324 | •• Pin, Spring | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. P1210-003003 Final Drive, Extreme Cold Area Arrangement (-50deg C), Final Drive

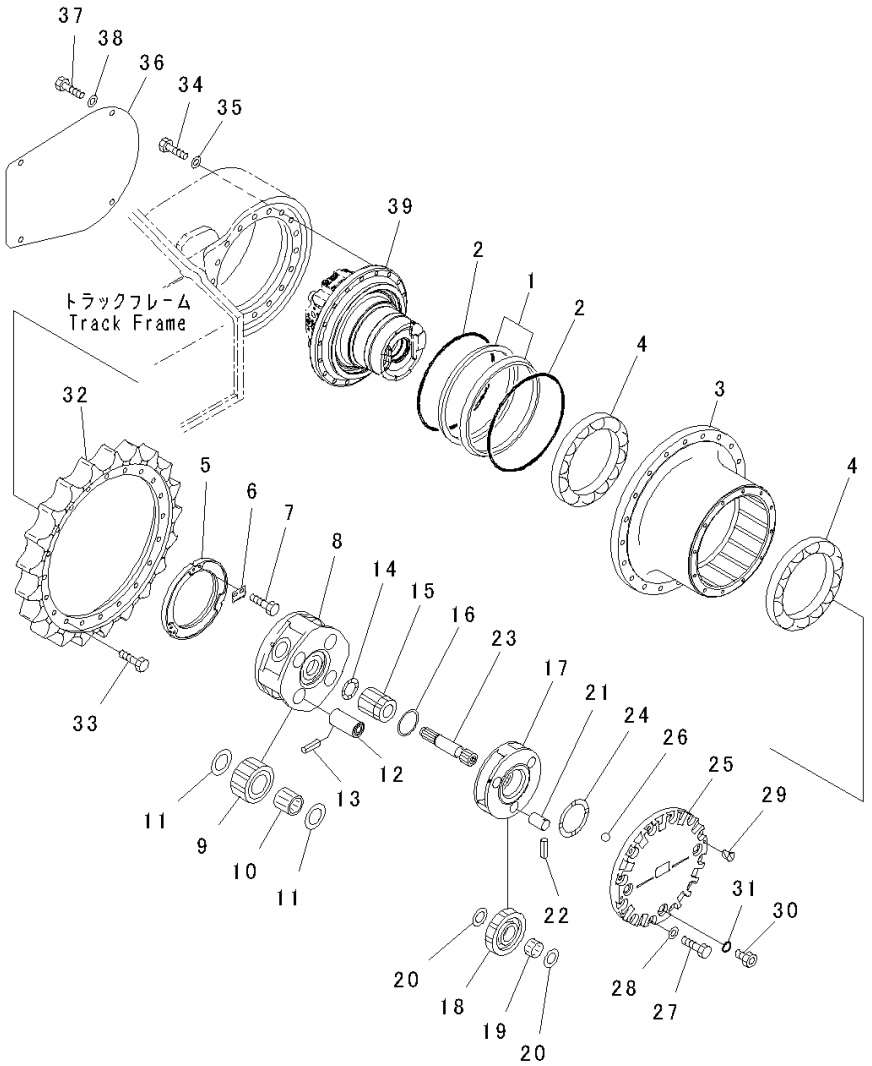


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-27-00510 | Final Drive Assembly | 2 | Y200001- |
| | | 20Y-27-00120 | • Floating Seal Assembly | 1 | Y200001- |
| 1 | C1 | | •• Seal | 2 | Y200001- |
| 2 | C1 | | •• O-ring | 2 | Y200001- |
| 3 | | 20Y-27-41140 | • Hub | 1 | Y200001- |
| 4 | | 20Y-27-41260 | • Bearing | 2 | Y200001- |
| 5 | | 20Y-27-41190 | • Nut, Lock | 1 | Y200001- |
| 6 | | 20Y-27-41180 | • Lock | 1 | Y200001- |
| 7 | | 01010-81020 | • Bolt | 2 | Y200001- |
| 8 | | 20Y-27-41150 | • Carrier | 1 | Y200001- |
| 9 | | 20Y-27-41130 | • Gear | 4 | Y200001- |
| 10 | | 20Y-27-41310 | • Bearing | 4 | Y200001- |
| 11 | | 20Y-27-41270 | • Washer, Thrust | 8 | Y200001- |
| 12 | | 20Y-27-41170 | • Pin | 4 | Y200001- |
| 13 | | 20Y-27-21290 | • Pin | 4 | Y200001- |
| 14 | | 20Y-27-13310 | • Washer, Thrust | 1 | Y200001- |
| 15 | | 20Y-27-41120 | • Gear | 1 | Y200001- |
| 16 | | 20Y-27-22240 | • Washer, Thrust | 1 | Y200001- |
| 17 | | 20Y-27-31111 | • Carrier | 1 | Y200001- |
| 18 | | 20Y-27-22120 | • Gear | 3 | Y200001- |
| 19 | | 20Y-27-21260 | • Bearing | 3 | Y200001- |
| 20 | | 20Y-27-21240 | • Washer, Thrust | 6 | Y200001- |
| 21 | | 20Y-27-21220 | • Pin | 3 | Y200001- |
| 22 | | 20Y-27-21280 | • Pin | 3 | Y200001- |
| 23 | | 20Y-27-41110 | • Shaft | 1 | Y200001- |
| 24 | | 20Y-27-21310 | • Washer | 1 | Y200001- |
| 25 | | 20Y-27-41160 | • Cover | 1 | Y200001- |
| 26 | | 04260-01587 | • Ball, Steel | 1 | Y200001- |
| 27 | | 01010-81240 | • Bolt | 12 | Y200001- |
| 28 | | 01643-31232 | • Washer | 12 | Y200001- |
| 29 | | 07049-01012 | • Plug | 2 | Y200001- |
| 30 | | 20Y-27-31190 | • Plug | 3 | Y200001- |
| 31 | | 07002-52434 | • O-ring | 3 | Y200001- |
| 32 | | 20Y-27-11582 | • Sprocket | 1 | Y200001- |
| 33 | | 20Y-27-11561 | • Bolt | 20 | Y200001- |
| 34 | | 01010-61660 | Bolt | 36 | Y200001- |
| 35 | | 01643-31645 | Washer | 36 | Y200001- |
| 36 | | 20Y-30-21191 | Cover | 2 | Y200001- |
| 37 | | 01010-81230 | Bolt | 8 | Y200001- |

https://truckmanualshub.com/

# FIG. P1210-003003 Final Drive, Extreme Cold Area Arrangement (-50deg C), Final Drive

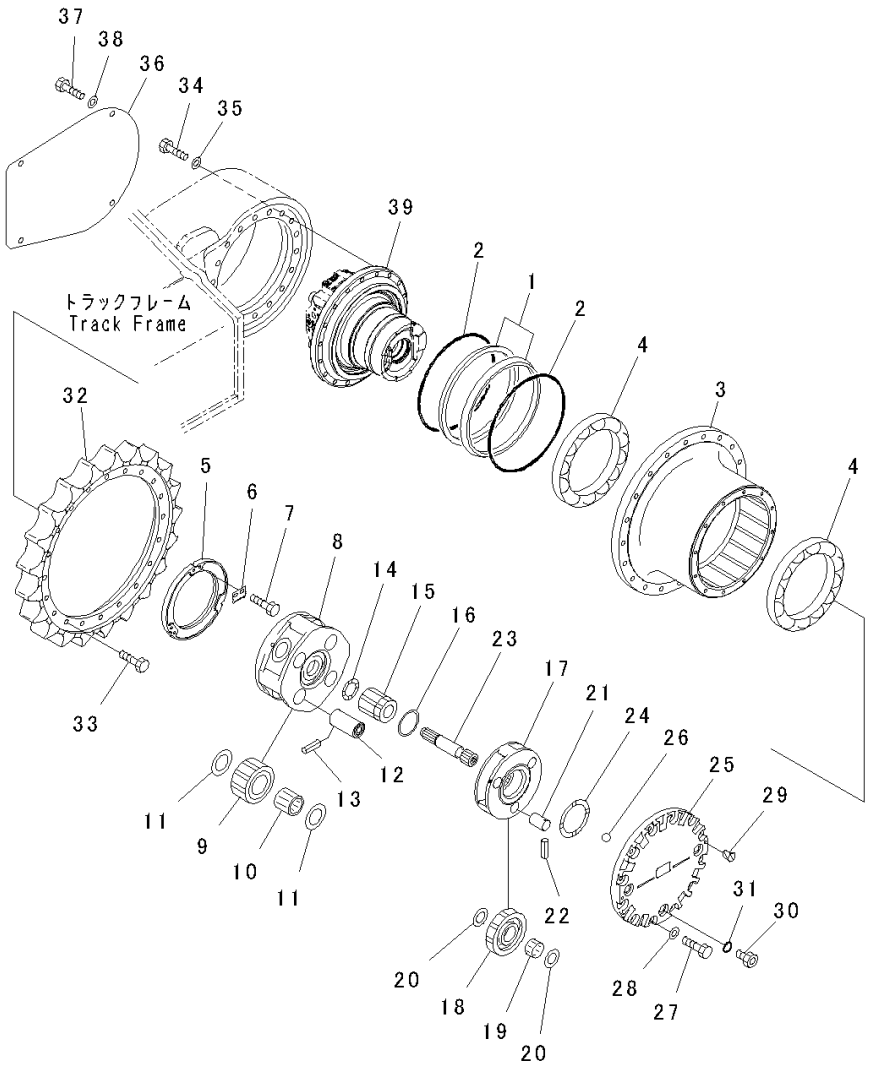



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 38 | | 01643-31232 | Washer ..... | 8 | Y200001- |
| 39 | | (708-8F-00250) | Motor Assembly(Refer to Page 800) | | - |

# UNDERCARRIAGE

https://truckmanualshub.com/

https://truckmanualshub.com/

# FIG. R0110-001001 Front Idler And Idler Cushion, Front Idler

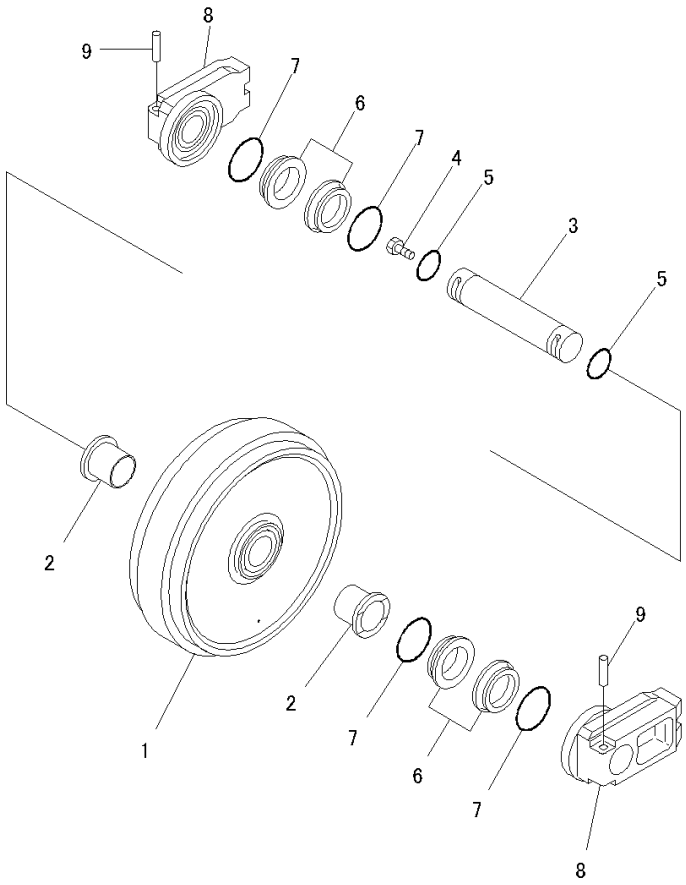



PW1B750

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-30-00322 | Idler Assembly,Front. | 2 | Y200001- |
| 1 | | 20Y-30-43310 | • Idler . | 1 | Y200001- |
| 2 | | 20Y-30-43340 | • Bushing . | 2 | Y200001- |
| 3 | | 20Y-30-13131 | • Shaft. | 1 | Y200001- |
| 4 | | 07052-31624 | • Plug . | 1 | Y200001- |
| 5 | | 07000-12060 | • O-ring . | 2 | Y200001- |
| | | 195-30-00302 | • Floating Seal Assembly. | 2 | Y200001- |
| 6 | C1 | | •• Ring . | 2 | Y200001- |
| 7 | C1 | | •• O-ring. | 2 | Y200001- |
| 8 | | 20Y-30-31750 | • Support. | 2 | Y200001- |
| 9 | | 205-30-76190 | • Pin . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. R0110-001002 Front Idler And Idler Cushion, Idler Cushion

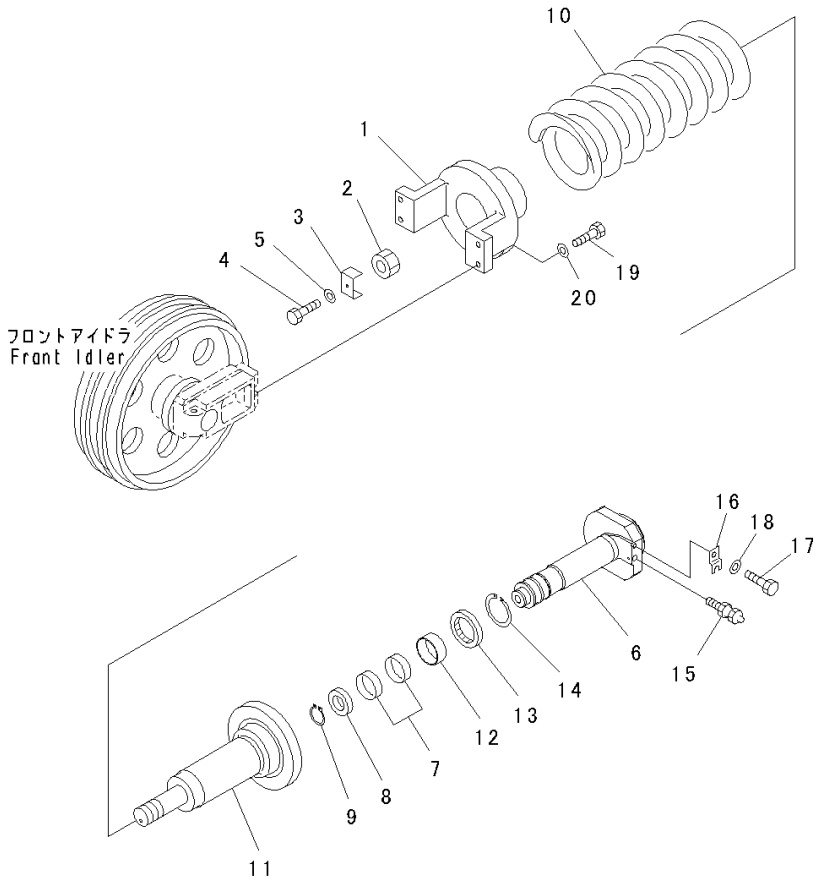


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-30-42110 | Yoke | 2 | Y200001- |
| 2 | | 206-30-45381 | Nut | 2 | Y200001- |
| 3 | | 20Y-30-42160 | Lock | 2 | Y200001- |
| 4 | | 01010-81225 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 206-30-72140 | Shaft | 2 | Y200001- |
| 7 | | 07155-00720 | Ring, Wear | 4 | Y200001- |
| 8 | | 09370-00070 | U-packing | 2 | Y200001- |
| 9 | | 04064-04518 | Ring, Snap | 2 | Y200001- |
| 10 | | 20Y-30-42130 | Spring | 2 | Y200001- |
| 11 | | 20Y-30-42120 | Cylinder | 2 | Y200001- |
| 12 | | 07177-07030 | Bushing | 2 | Y200001- |
| 13 | | 707-56-70540 | Seal, Dust | 2 | Y200001- |
| 14 | | 04077-00085 | Ring, Snap, for Hole Side | 2 | Y200001- |
| 15 | | 07959-20001 | Valve | 2 | Y200001- |
| 16 | | 205-30-72170 | Plate | 2 | Y200001- |
| 17 | | 01010-81225 | Bolt | 2 | Y200001- |
| 18 | | 01643-31232 | Washer | 2 | Y200001- |
| 19 | | 01010-61655 | Bolt | 8 | Y200001- |
| 20 | | 01643-31645 | Washer | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. R0110-002002 Front Idler And Idler Cushion, Idler Cushion, LC

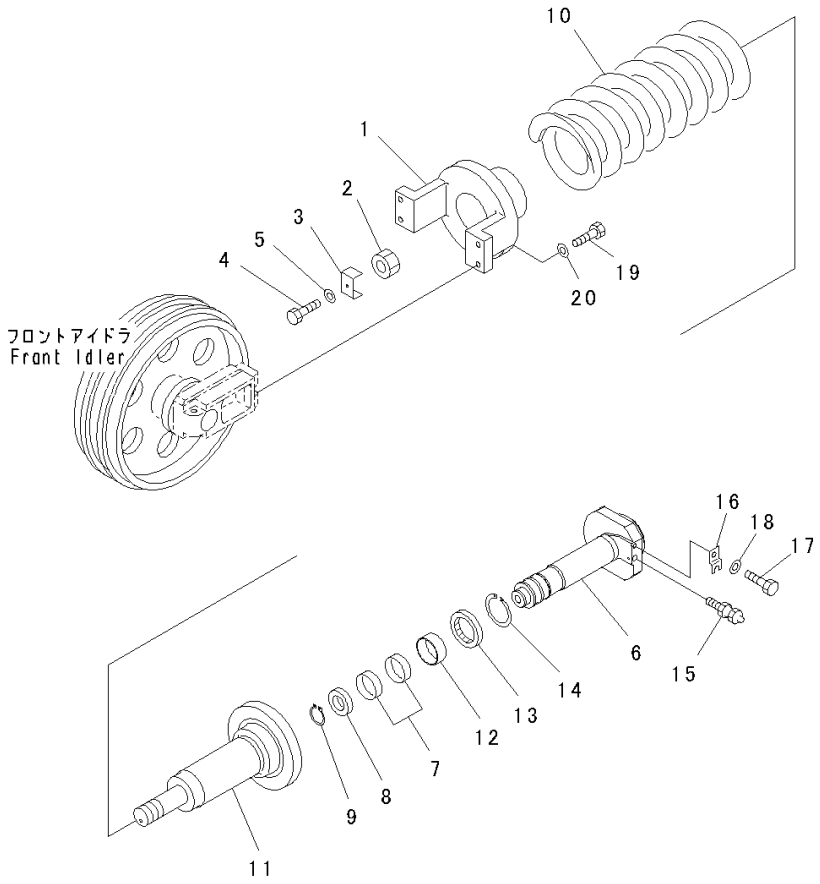


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-30-32110 | Yoke | 2 | Y200004- |
| 2 | | 206-30-45381 | Nut | 2 | Y200001- |
| 3 | | 20Y-30-45262 | Lock | 2 | Y200004- |
| 4 | | 01010-81225 | Bolt | 2 | Y200001- |
| 5 | | 01643-31232 | Washer | 2 | Y200001- |
| 6 | | 206-30-72140 | Shaft | 2 | Y200001- |
| 7 | | 07155-00720 | Ring, Wear | 4 | Y200001- |
| 8 | | 09370-00070 | U-packing | 2 | Y200001- |
| 9 | | 04064-04518 | Ring, Snap | 2 | Y200001- |
| 10 | | 206-30-55172 | Spring | 2 | Y200004- |
| 11 | | 206-30-72130 | Cylinder | 2 | Y200004- |
| 12 | | 07177-07030 | Bushing | 2 | Y200001- |
| 13 | | 707-56-70540 | Seal, Dust | 2 | Y200001- |
| 14 | | 04077-00085 | Ring, Snap, for Hole Side | 2 | Y200001- |
| 15 | | 07959-20001 | Valve | 2 | Y200001- |
| 16 | | 205-30-72170 | Plate | 2 | Y200001- |
| 17 | | 01010-81225 | Bolt | 2 | Y200001- |
| 18 | | 01643-31232 | Washer | 2 | Y200001- |
| 19 | | 01010-61655 | Bolt | 8 | Y200001- |
| 20 | | 01643-31645 | Washer | 8 | Y200001- |

https://truckmanualshub.com/

# FIG. R0110-006001 Front Idler And Idler Cushion, Extreme Cold Area Arrangement (-50deg C), Front Idler

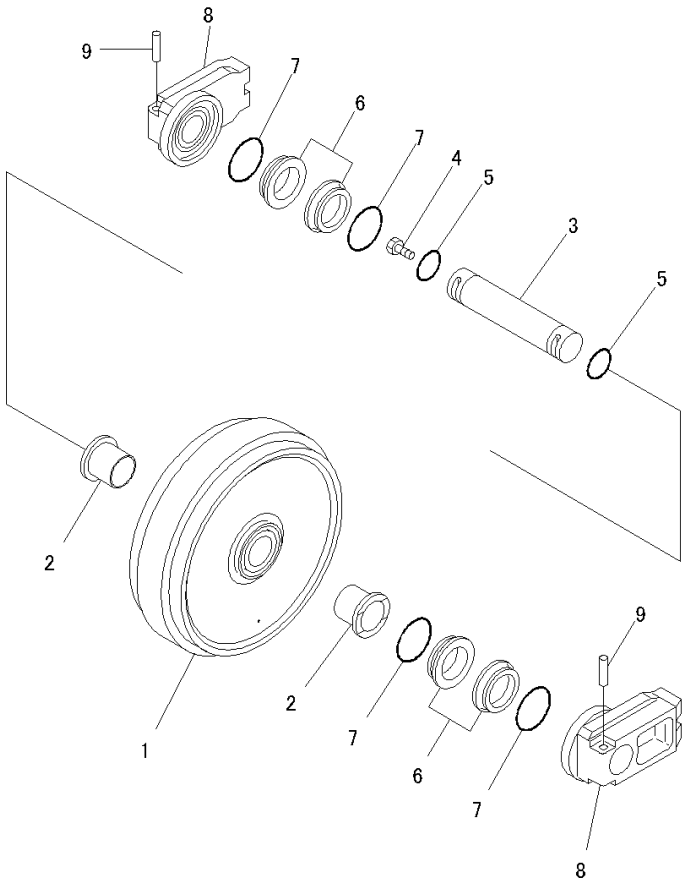



PW1B750

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-30-00442 | Idler Assembly,Front. | 2 | Y200001- |
| 1 | | 20Y-30-43310 | • Idler . | 1 | Y200001- |
| 2 | | 20Y-30-43340 | • Bushing . | 2 | Y200001- |
| 3 | | 20Y-30-13320 | • Shaft. | 1 | Y200001- |
| 4 | | 07052-31624 | • Plug . | 1 | Y200001- |
| 5 | | 07000-52060 | • O-ring . | 2 | Y200001- |
| | | 195-30-00203 | • Floating Seal Assembly. | 2 | Y200001- |
| 6 | C1 | | •• Seal. | 2 | Y200001- |
| 7 | C1 | | •• O-ring. | 2 | Y200001- |
| 8 | | 20Y-30-31750 | • Support. | 2 | Y200001- |
| 9 | | 205-30-76190 | • Pin . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. R0200-001001 Track Roller

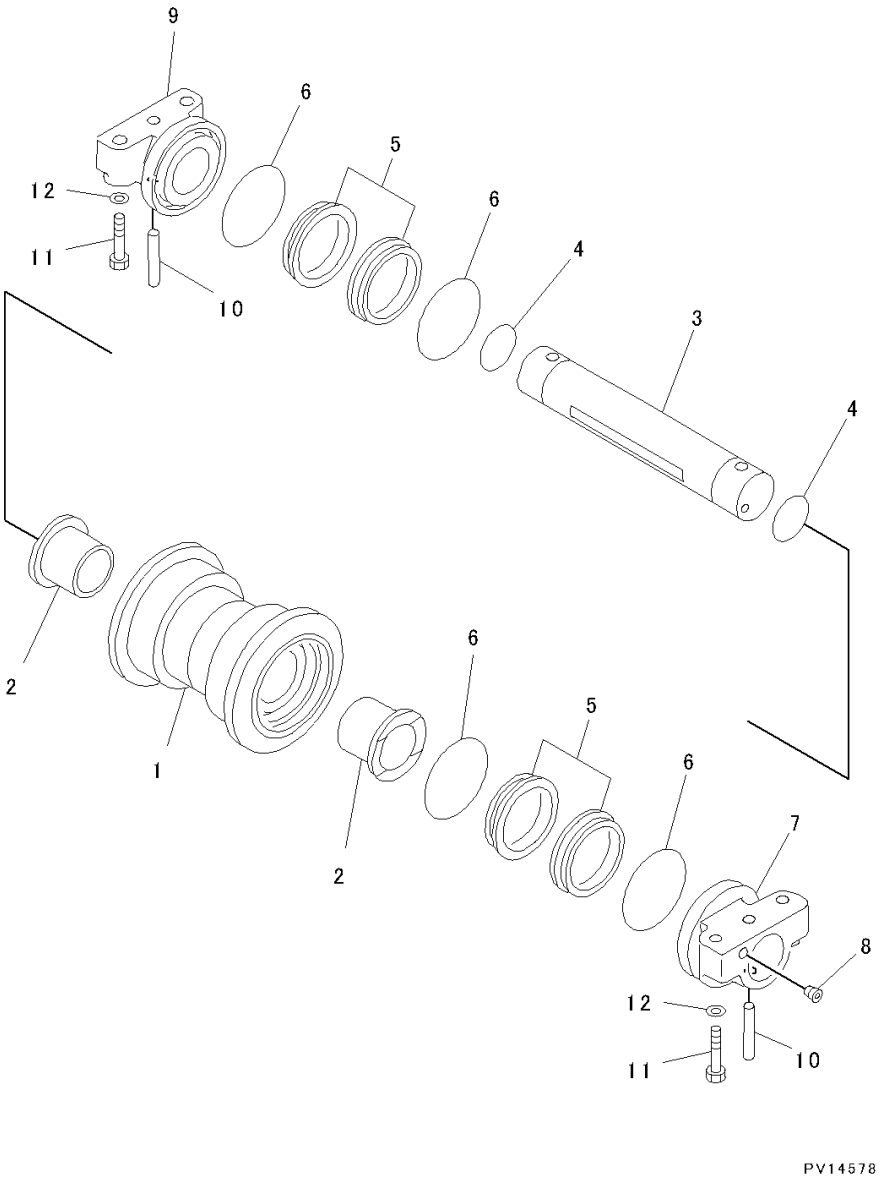


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-30-00016 | Track Roller Assembly | 14 | Y200001- |
| 1 | | 20Y-30-16411 | • Roller | 1 | Y200001- |
| 2 | | 22U-30-11450 | • Bushing | 2 | Y200001- |
| 3 | | 22U-30-11420 | • Shaft | 1 | Y200001- |
| 4 | | 205-30-76260 | • O-ring | 2 | Y200001- |
| | | 20Y-30-00430 | • Floating Seal Assembly | 2 | Y200001- |
| 5 | C1 | | •• Seal | 2 | Y200001- |
| 6 | C1 | | •• O-ring | 2 | Y200001- |
| 7 | | 22U-30-11430 | • Collar | 1 | Y200001- |
| 8 | | 20Y-30-16330 | • Plug | 1 | Y200001- |
| 9 | | 22U-30-11440 | • Collar | 1 | Y200001- |
| 10 | | 20Y-30-16170 | • Pin | 2 | Y200001- |
| 11 | | 20Y-30-11340 | Bolt | 56 | Y200001- |
| 12 | | 01643-31845 | Washer | 56 | Y200001- |

https://truckmanualshub.com/


# FIG. R0200-002001 Track Roller, Extreme Cold Area Arrangement (-50deg C)

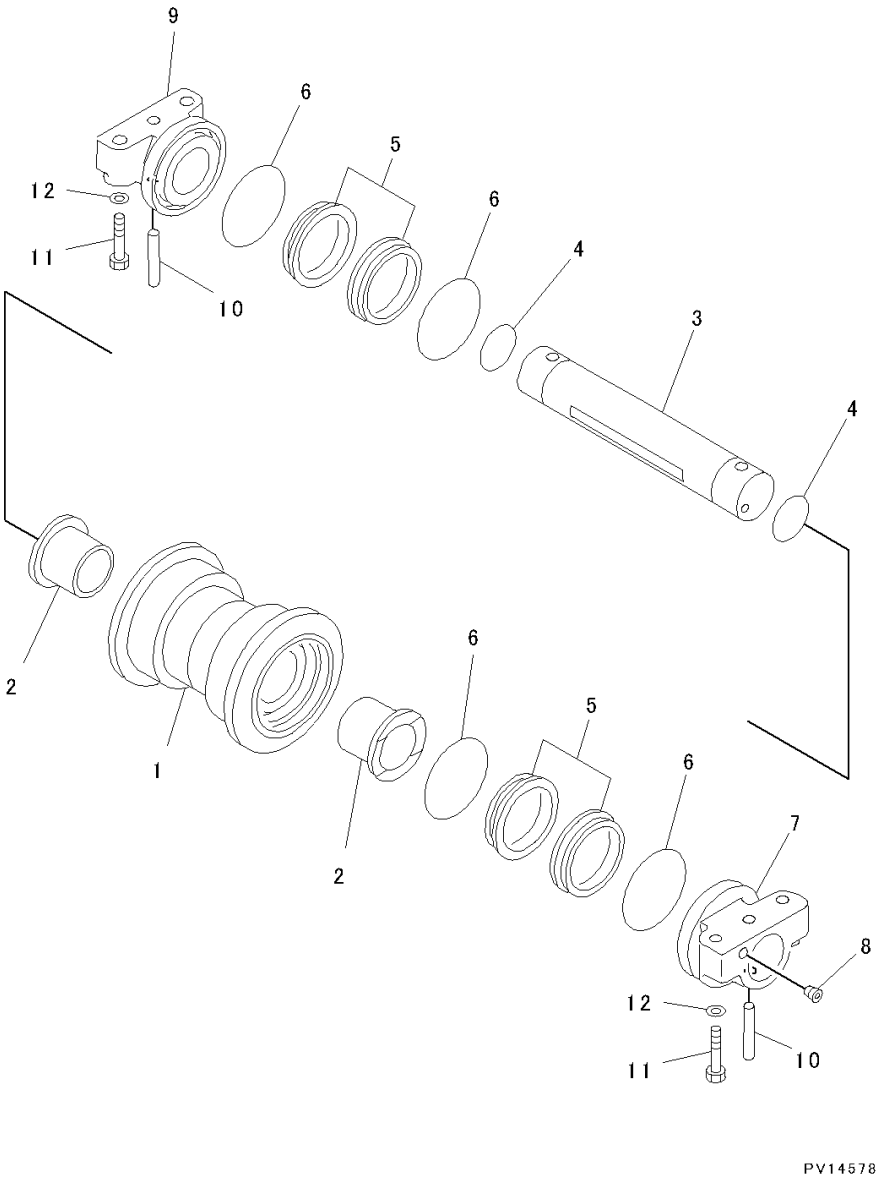


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-30-00282 | Track Roller Assembly | 14 | Y200001- |
| 1 | | 20Y-30-16411 | • Roller | 1 | Y200001- |
| 2 | | 22U-30-11450 | • Bushing | 2 | Y200001- |
| 3 | | 22U-30-11460 | • Shaft | 1 | Y200001- |
| 4 | | 20Y-30-13170 | • O-ring | 2 | Y200001- |
| | | 20Y-30-00381 | • Floating Seal Assembly | 2 | Y200001- |
| 5 | C1 | | •• Seal | 2 | Y200001- |
| 6 | C1 | | •• O-ring | 2 | Y200001- |
| 7 | | 22U-30-11430 | • Collar | 1 | Y200001- |
| 8 | | 20Y-30-16330 | • Plug | 1 | Y200001- |
| 9 | | 22U-30-11440 | • Collar | 1 | Y200001- |
| 10 | | 20Y-30-16170 | • Pin | 2 | Y200001- |
| 11 | | 20Y-30-11340 | Bolt | 56 | Y200001- |
| 12 | | 01643-31845 | Washer | 56 | Y200001- |

https://truckmanualshub.com/


# FIG. R0200-003001 Track Roller, LC

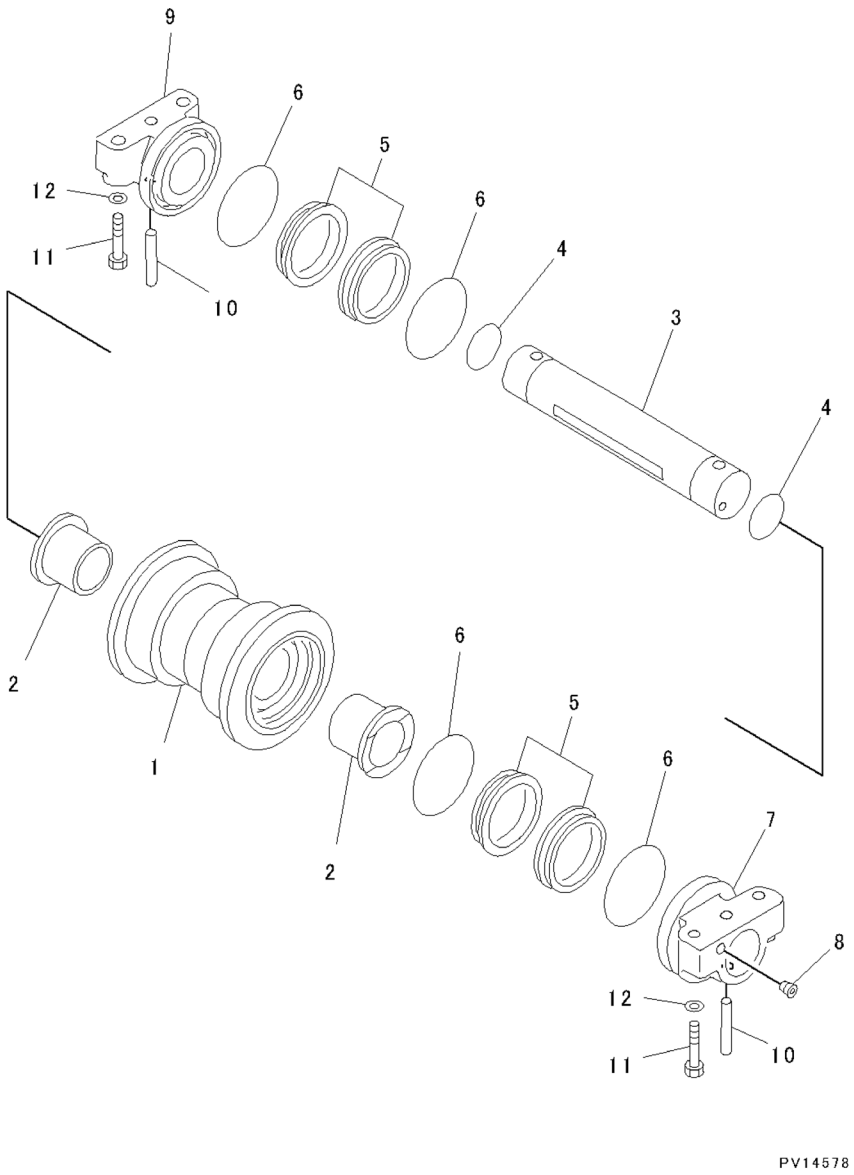


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-30-00016 | Track Roller Assembly | 18 | Y200001- |
| 1 | | 20Y-30-16411 | • Roller | 1 | Y200001- |
| 2 | | 22U-30-11450 | • Bushing | 2 | Y200001- |
| 3 | | 22U-30-11420 | • Shaft | 1 | Y200001- |
| 4 | | 205-30-76260 | • O-ring | 2 | Y200001- |
| | | 20Y-30-00430 | • Floating Seal Assembly | 2 | Y200001- |
| 5 | C1 | | •• Seal | 2 | Y200001- |
| 6 | C1 | | •• O-ring | 2 | Y200001- |
| 7 | | 22U-30-11430 | • Collar | 1 | Y200001- |
| 8 | | 20Y-30-16330 | • Plug | 1 | Y200001- |
| 9 | | 22U-30-11440 | • Collar | 1 | Y200001- |
| 10 | | 20Y-30-16170 | • Pin | 2 | Y200001- |
| 11 | | 20Y-30-11340 | Bolt | 72 | Y200001- |
| 12 | | 01643-31845 | Washer | 72 | Y200001- |

https://truckmanualshub.com/


# FIG. R0200-003001 Track Roller, Extreme Cold Area Arrangement (-50 deg.C), LC

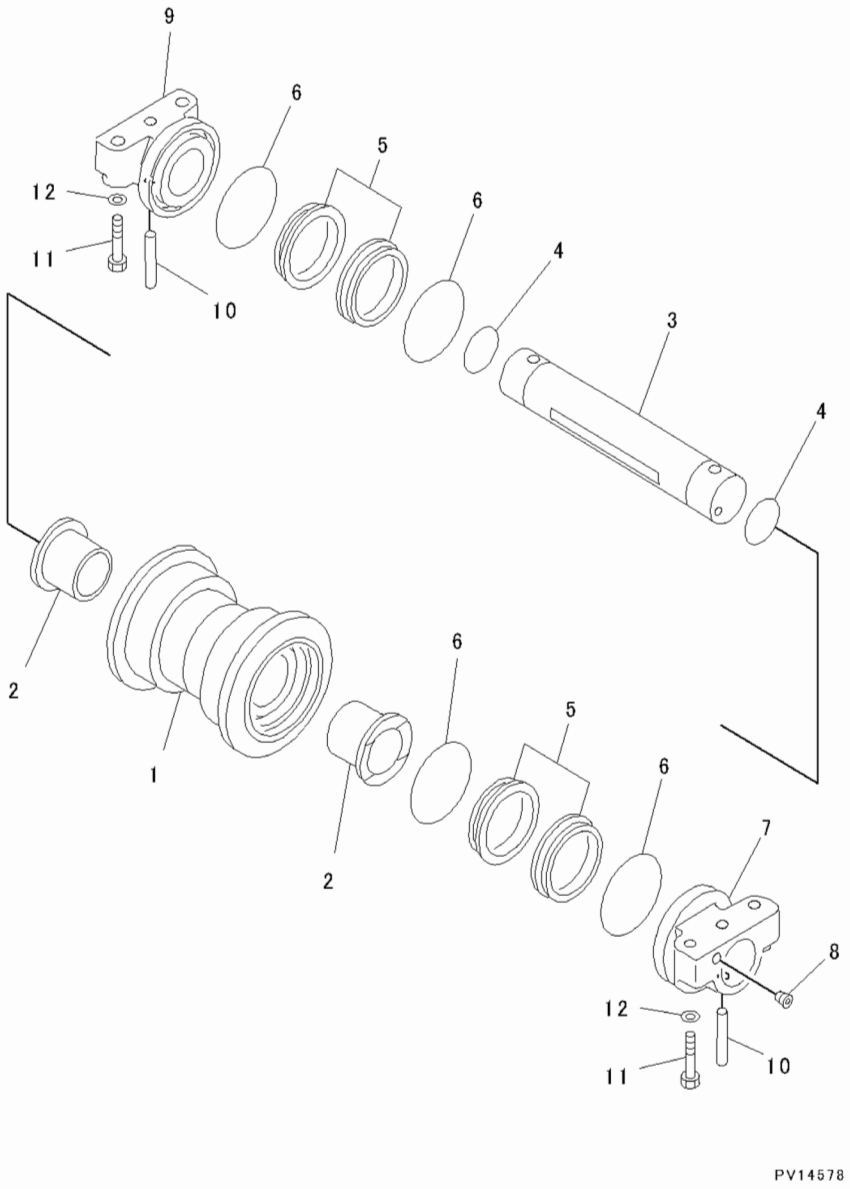


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-30-00282 | Track Roller Assembly | 18 | Y200001- |
| 1 | | 20Y-30-16411 | • Roller | 1 | Y200001- |
| 2 | | 22U-30-11450 | • Bushing | 2 | Y200001- |
| 3 | | 22U-30-11420 | • Shaft | 1 | Y200001- |
| 4 | | 205-30-76260 | • O-ring | 2 | Y200001- |
| | | 20Y-30-00381 | • Floating Seal Assembly | 2 | Y200001- |
| 5 | C1 | | •• Seal | 2 | Y200001- |
| 6 | C1 | | •• O-ring | 2 | Y200001- |
| 7 | | 22U-30-11430 | • Collar | 1 | Y200001- |
| 8 | | 20Y-30-16330 | • Plug | 1 | Y200001- |
| 9 | | 22U-30-11440 | • Collar | 1 | Y200001- |
| 10 | | 20Y-30-16170 | • Pin | 2 | Y200001- |
| 11 | | 20Y-30-11340 | Bolt | 72 | Y200001- |
| 12 | | 01643-31845 | Washer | 72 | Y200001- |

https://truckmanualshub.com/


# FIG. R0300-001001 Carrier Roller

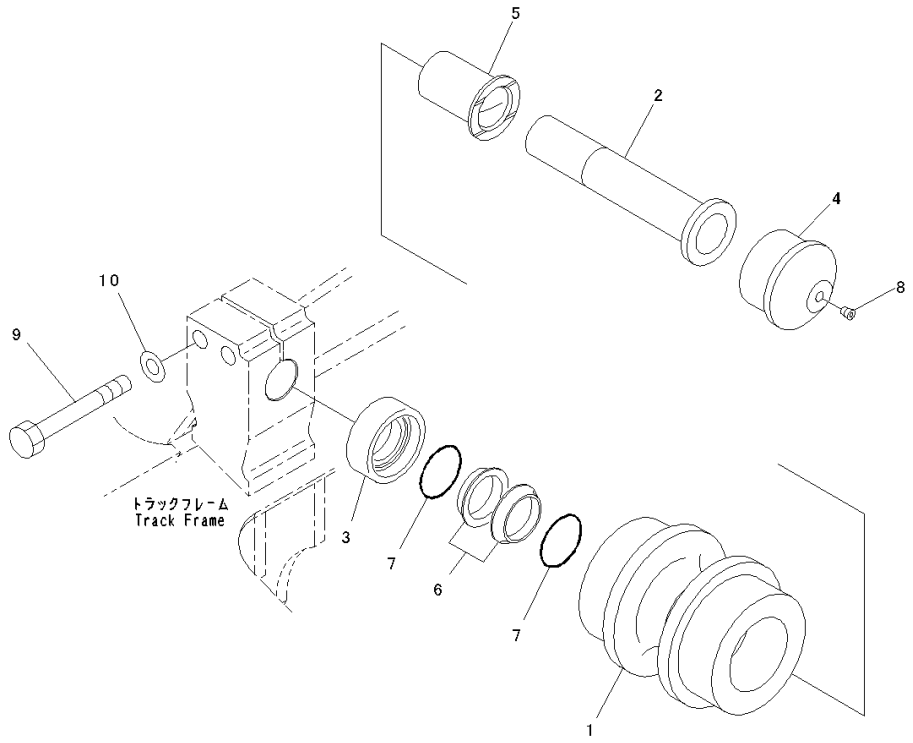


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-30-00481 | Roller Assembly, Carrier | 4 | Y200001- |
| 1 | | 20Y-30-43260 | • Roller | 1 | Y200001- |
| 2 | | 20Y-30-43221 | • Shaft | 1 | Y200001- |
| 3 | | 20Y-30-43230 | • Ring | 1 | Y200001- |
| 4 | | 20Y-30-43240 | • Cover | 1 | Y200001- |
| 5 | | 20Y-30-43250 | • Bushing | 1 | Y200001- |
| | | 110-30-00086 | • Floating Seal Assembly. | 1 | Y200001- |
| 6 | C1 | | •• Seal | 2 | Y200001- |
| 7 | C1 | | •• O-ring | 2 | Y200001- |
| 8 | | 20Y-30-16330 | • Plug | 1 | Y200001- |
| 9 | | 01010-81680 | Bolt | 8 | Y200001- |
| 10 | | 01643-31645 | Washer | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. R0300-002001 Carrier Roller, Extreme Cold Area Arrangement (-50deg C)

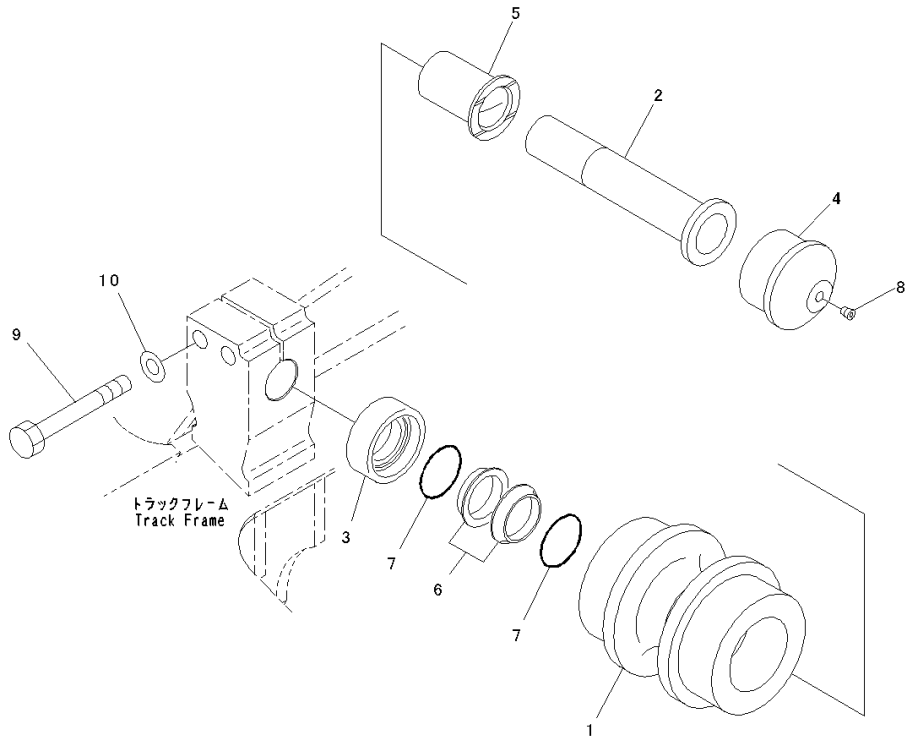


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-30-00490 | Roller Assembly, Carrier | 4 | Y200001- |
| 1 | | 20Y-30-43260 | • Roller | 1 | Y200001- |
| 2 | | 20Y-30-43221 | • Shaft | 1 | Y200001- |
| 3 | | 20Y-30-43230 | • Ring | 1 | Y200001- |
| 4 | | 20Y-30-43240 | • Cover | 1 | Y200001- |
| 5 | | 20Y-30-43250 | • Bushing | 1 | Y200001- |
| | | 20Y-30-00391 | • Floating Seal Assembly. | 1 | Y200001- |
| 6 | C1 | | •• Seal | 2 | Y200001- |
| 7 | C1 | | •• O-ring | 2 | Y200001- |
| 8 | | 20Y-30-16330 | • Plug | 1 | Y200001- |
| 9 | | 01010-81680 | Bolt | 8 | Y200001- |
| 10 | | 01643-31645 | Washer | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-001001 Track Shoe Assembly, Swamp Shoe, 860mm Width

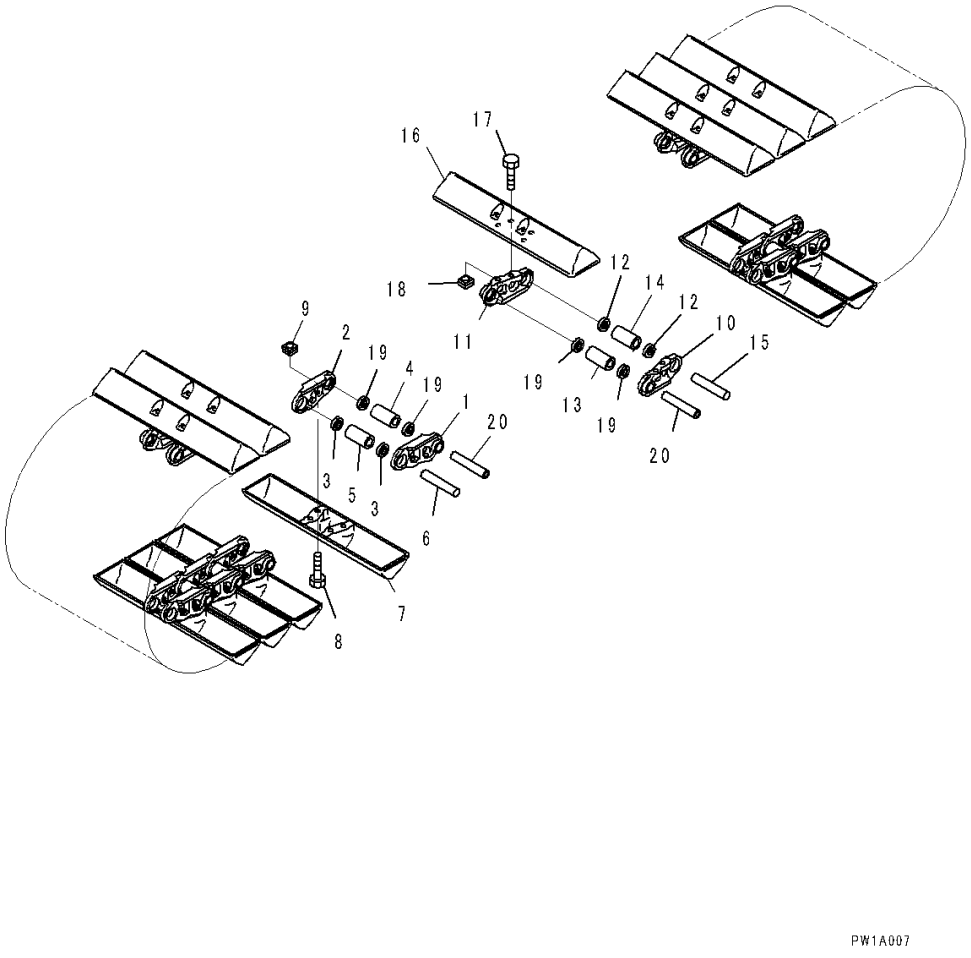


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02060 | Track Shoe Assembly. | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS. | 44 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS . | 44 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal . | 84 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master . | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular. | 42 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin . | 42 | Y200001- |
| 7 | | 20Y-32-11340 | • Shoe, W=860mm . | 44 | Y200001- |
| 8 | | 20Y-32-11230 | • Bolt, (Kit : K02) . | 176 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K02) . | 176 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS. | 46 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS . | 46 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal . | 88 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master . | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular. | 44 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin . | 44 | Y200001- |
| 16 | | 20Y-32-11340 | • Shoe, W=860mm . | 46 | Y200001- |
| 17 | | 20Y-32-11230 | • Bolt, (Kit : K02) . | 184 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K02) . | 184 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal . | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-004001 Track Shoe Assembly, Triple Shoe Grouser, 500mm Width

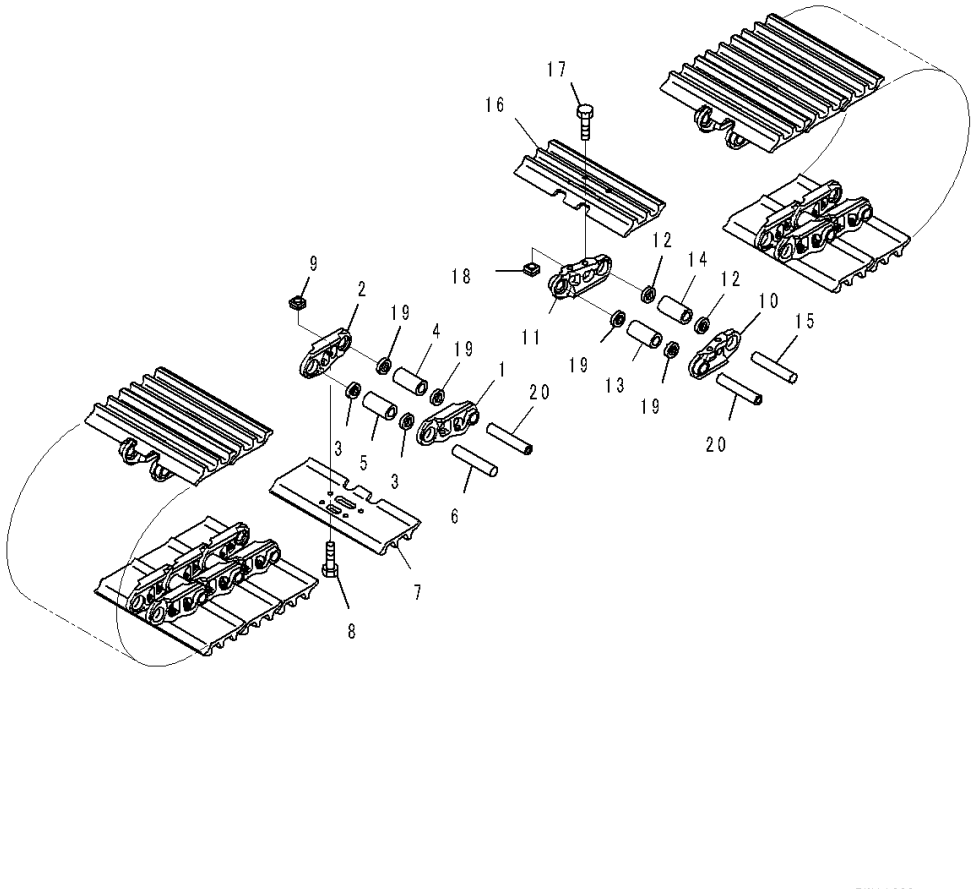


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02240 | Track Shoe Assembly | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS | 44 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS | 44 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal | 84 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular | 42 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin | 42 | Y200001- |
| 7 | | 20Y-32-31240 | • Shoe, W=500mm | 44 | Y200001- |
| 8 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 176 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 176 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS | 46 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS | 46 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal | 88 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular | 44 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin | 44 | Y200001- |
| 16 | | 20Y-32-31240 | • Shoe, W=500mm | 46 | Y200001- |
| 17 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 184 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 184 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-005001 Track Shoe Assembly, Triple Shoe Grouser, 600mm Width

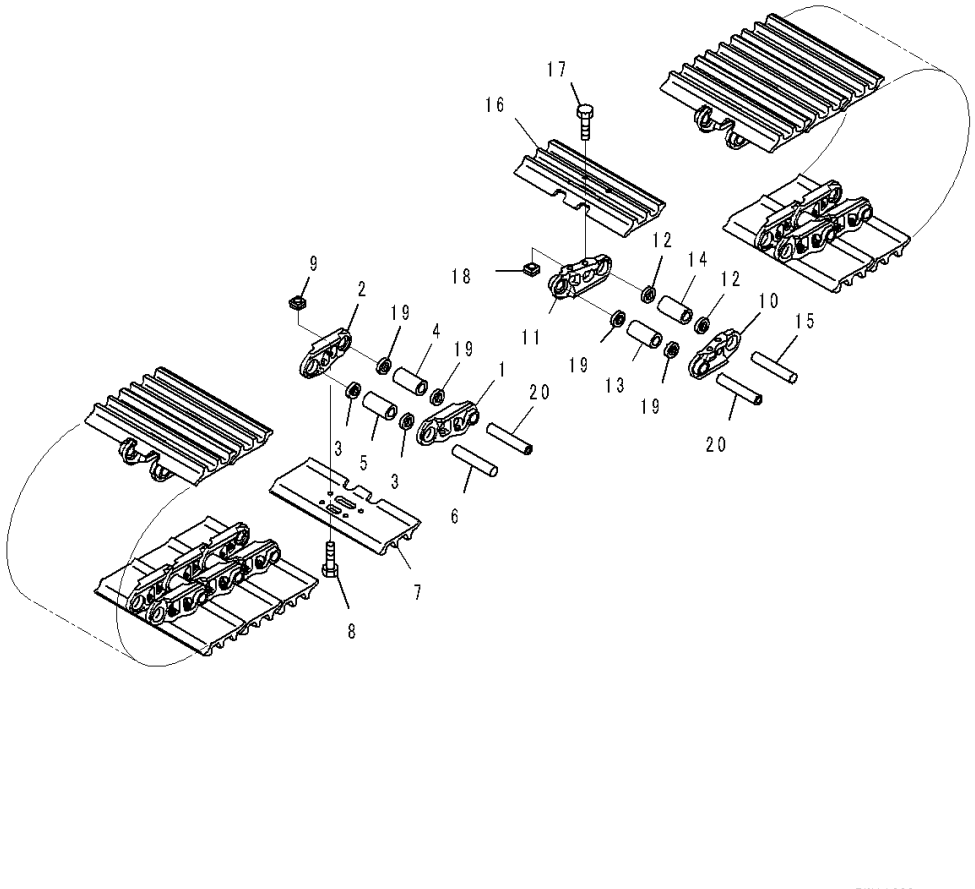


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02051 | Track Shoe Assembly | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS | 44 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS | 44 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal | 84 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular | 42 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin | 42 | Y200001- |
| 7 | | 20Y-32-21110 | • Shoe, W=600mm | 44 | Y200001- |
| 8 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 176 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 176 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS | 46 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS | 46 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal | 88 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular | 44 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin | 44 | Y200001- |
| 16 | | 20Y-32-21110 | • Shoe, W=600mm | 46 | Y200001- |
| 17 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 184 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 184 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-007001 Track Shoe Assembly, Triple Shoe Grouser, 800mm Width

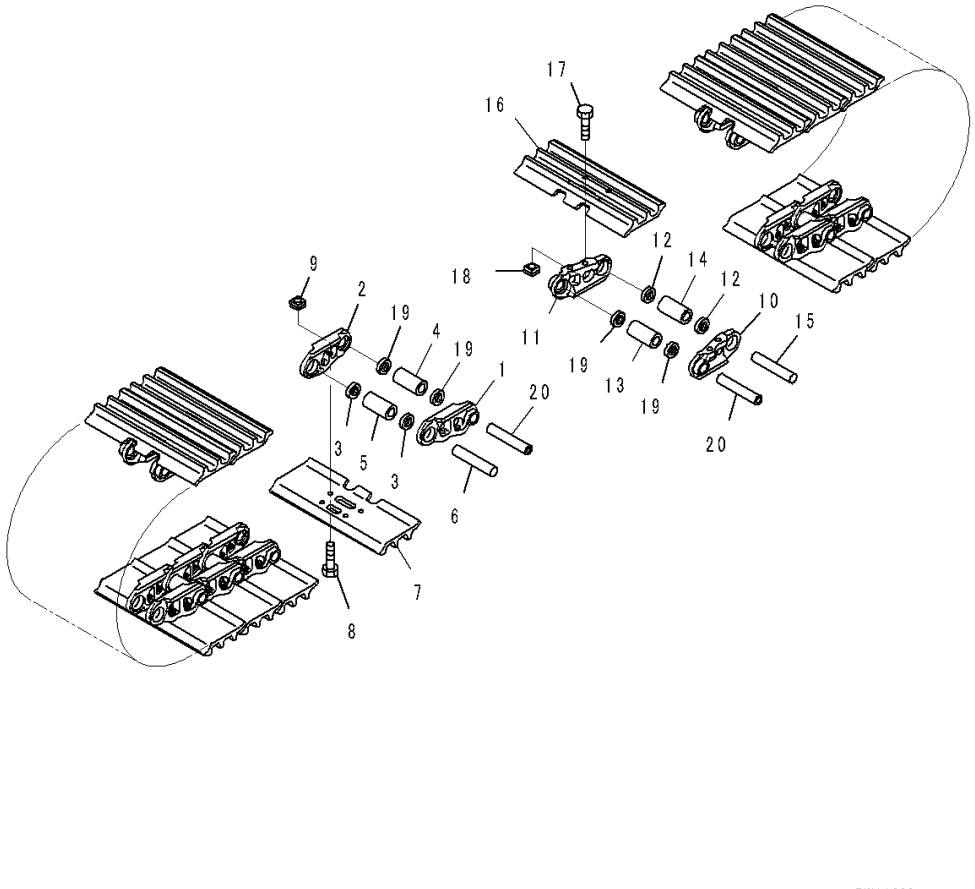


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02041 | Track Shoe Assembly. ..... | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS. ..... | 44 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS . ..... | 44 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal . ..... | 84 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master . ..... | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular. ..... | 42 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin . ..... | 42 | Y200001- |
| 7 | | 20Y-32-31320 | • Shoe, W=800mm . ..... | 44 | Y200001- |
| 8 | | 20Y-32-31210 | • Bolt, (Kit : K03) . ..... | 176 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) . ..... | 176 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS. ..... | 46 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS . ..... | 46 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal . ..... | 88 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master . ..... | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular. ..... | 44 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin . ..... | 44 | Y200001- |
| 16 | | 20Y-32-31320 | • Shoe, W=800mm . ..... | 46 | Y200001- |
| 17 | | 20Y-32-31210 | • Bolt, (Kit : K03) . ..... | 184 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) . ..... | 184 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal . ..... | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin . ..... | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-006001 Track Shoe Assembly, Triple Shoe Grouser, 700mm Width

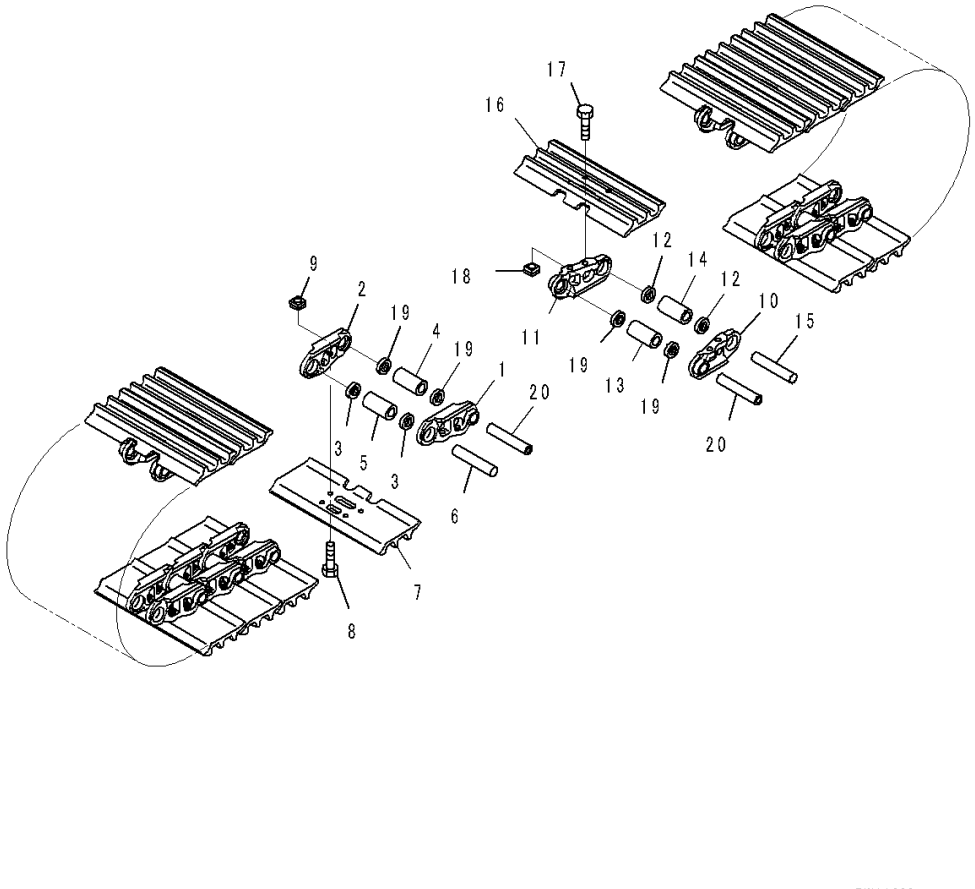


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02031 | Track Shoe Assembly. ..... | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS. ..... | 44 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS . ..... | 44 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal . ..... | 84 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master . ..... | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular. ..... | 42 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin . ..... | 42 | Y200001- |
| 7 | | 20Y-32-31310 | • Shoe, W=700mm . ..... | 44 | Y200001- |
| 8 | | 20Y-32-31210 | • Bolt, (Kit : K03) . ..... | 176 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) . ..... | 176 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS. ..... | 46 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS . ..... | 46 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal . ..... | 88 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master . ..... | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular. ..... | 44 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin . ..... | 44 | Y200001- |
| 16 | | 20Y-32-31310 | • Shoe, W=700mm . ..... | 46 | Y200001- |
| 17 | | 20Y-32-31210 | • Bolt, (Kit : K03) . ..... | 184 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) . ..... | 184 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal . ..... | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin . ..... | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-011001 Track Shoe Assembly, Swamp Shoe, 860mm Width, LC

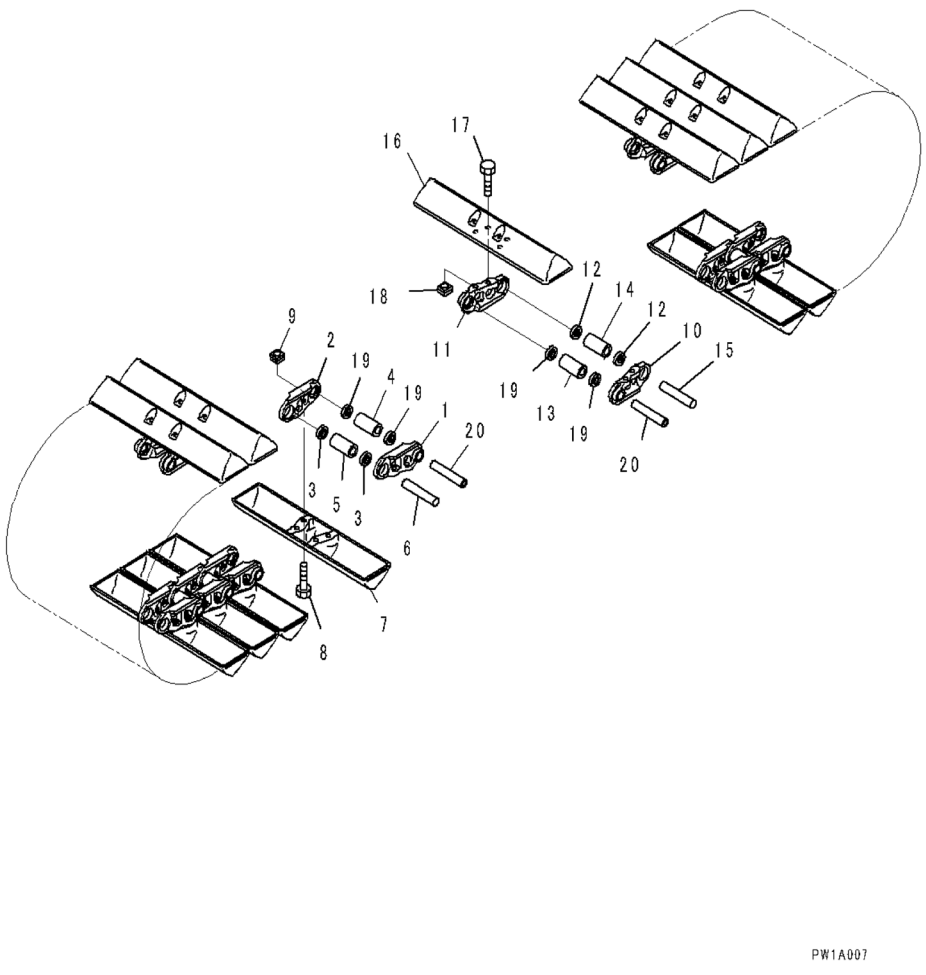


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02140 | Track Shoe Assembly | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS | 48 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS | 48 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal | 92 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular | 46 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin | 46 | Y200001- |
| 7 | | 20Y-32-11340 | • Shoe, W=860mm | 48 | Y200001- |
| 8 | | 20Y-32-11230 | • Bolt, (Kit : K02) | 192 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K02) | 192 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS | 50 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS | 50 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal | 96 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular | 48 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin | 48 | Y200001- |
| 16 | | 20Y-32-11340 | • Shoe, W=860mm | 50 | Y200001- |
| 17 | | 20Y-32-11230 | • Bolt, (Kit : K02) | 200 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K02) | 200 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-014001 Track Shoe Assembly, Triple Shoe Grouser, 600mm Width, LC

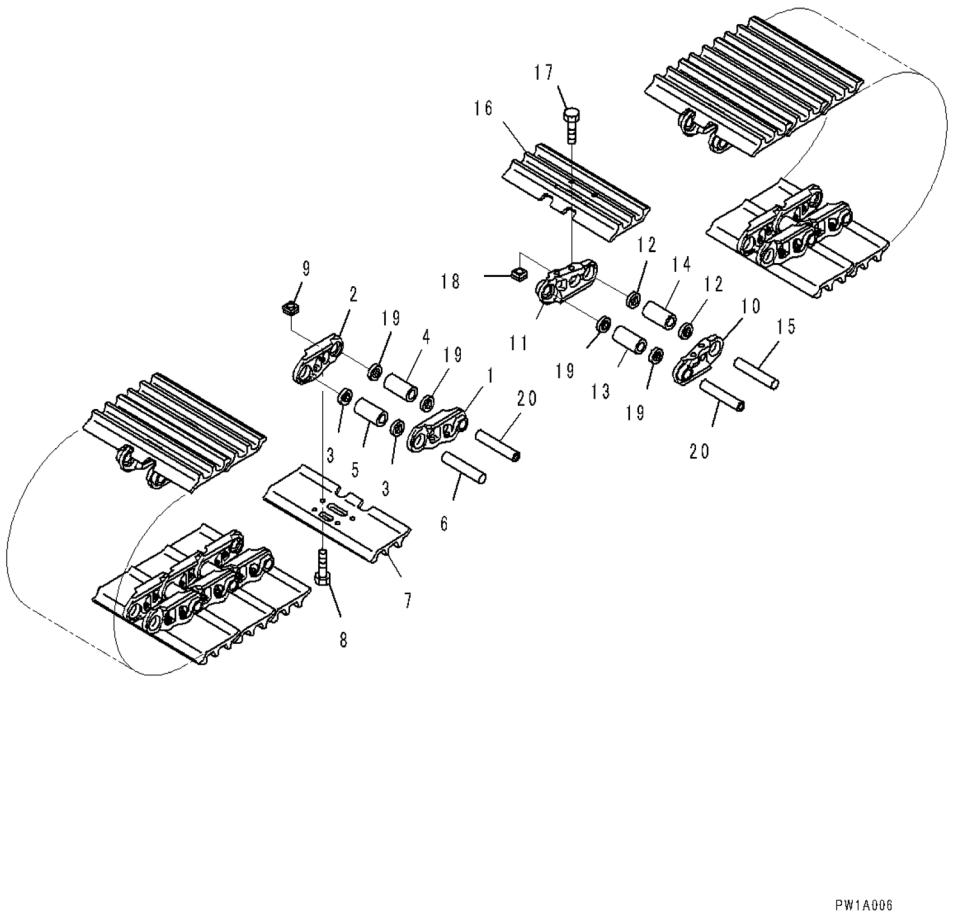


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02250 | Track Shoe Assembly | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS | 48 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS | 48 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal | 92 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular | 46 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin | 46 | Y200001- |
| 7 | | 20Y-32-21110 | • Shoe, W=600mm | 48 | Y200001- |
| 8 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 192 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 192 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS | 50 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS | 50 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal | 96 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular | 48 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin | 48 | Y200001- |
| 16 | | 20Y-32-21110 | • Shoe, W=600mm | 50 | Y200001- |
| 17 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 200 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 200 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-016001 Track Shoe Assembly, Triple Shoe Grouser, 800mm Width, LC

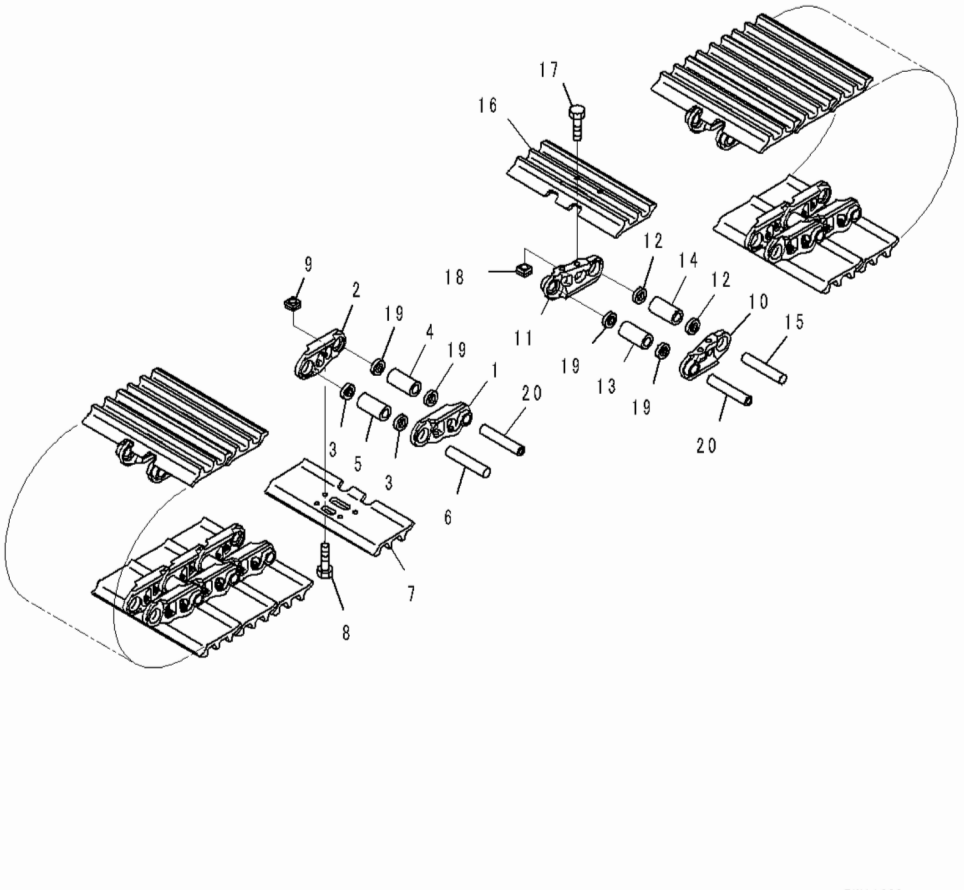


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02121 | Track Shoe Assembly | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS | 48 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS | 48 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal | 92 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular | 46 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin | 46 | Y200001- |
| 7 | | 20Y-32-31320 | • Shoe, W=800mm | 48 | Y200001- |
| 8 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 192 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 192 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS | 50 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS | 50 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal | 96 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular | 48 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin | 48 | Y200001- |
| 16 | | 20Y-32-31320 | • Shoe, W=800mm | 50 | Y200001- |
| 17 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 200 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 200 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-017001 Track Shoe Assembly, Triple Shoe Grouser, 900mm Width, LC

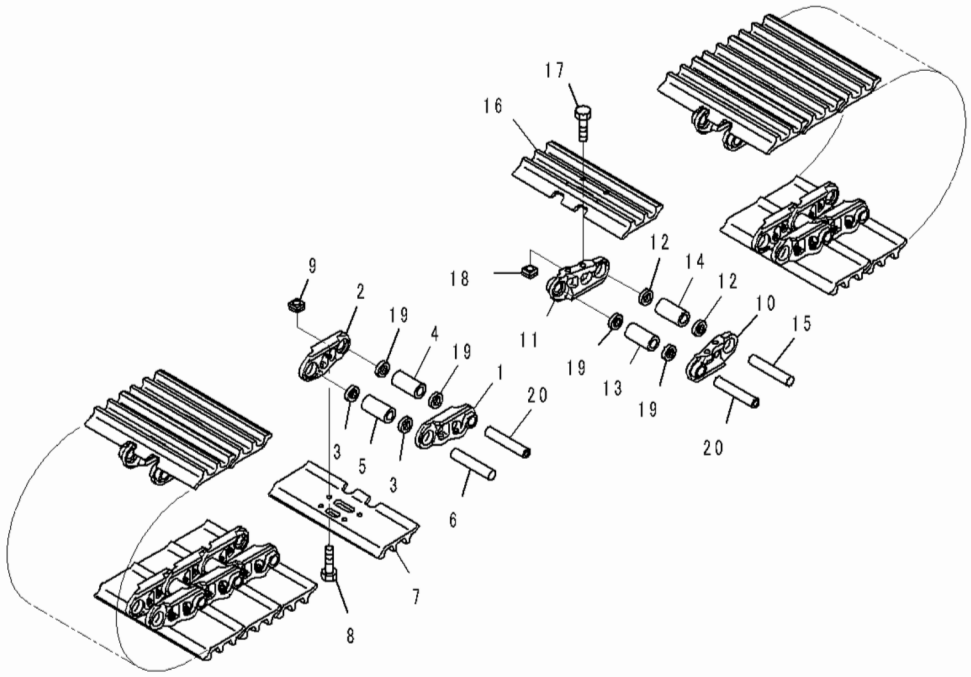


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02131 | Track Shoe Assembly | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS | 48 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS | 48 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal | 92 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular | 46 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin | 46 | Y200001- |
| 7 | | 20Y-32-31330 | • Shoe, W=900mm | 48 | Y200001- |
| 8 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 192 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 192 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS | 50 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS | 50 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal | 96 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular | 48 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin | 48 | Y200001- |
| 16 | | 20Y-32-31330 | • Shoe, W=900mm | 50 | Y200001- |
| 17 | | 20Y-32-31210 | • Bolt, (Kit : K03) | 200 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) | 200 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0500-015001 Track Shoe Assembly, Triple Shoe Grouser, 700mm Width, LC

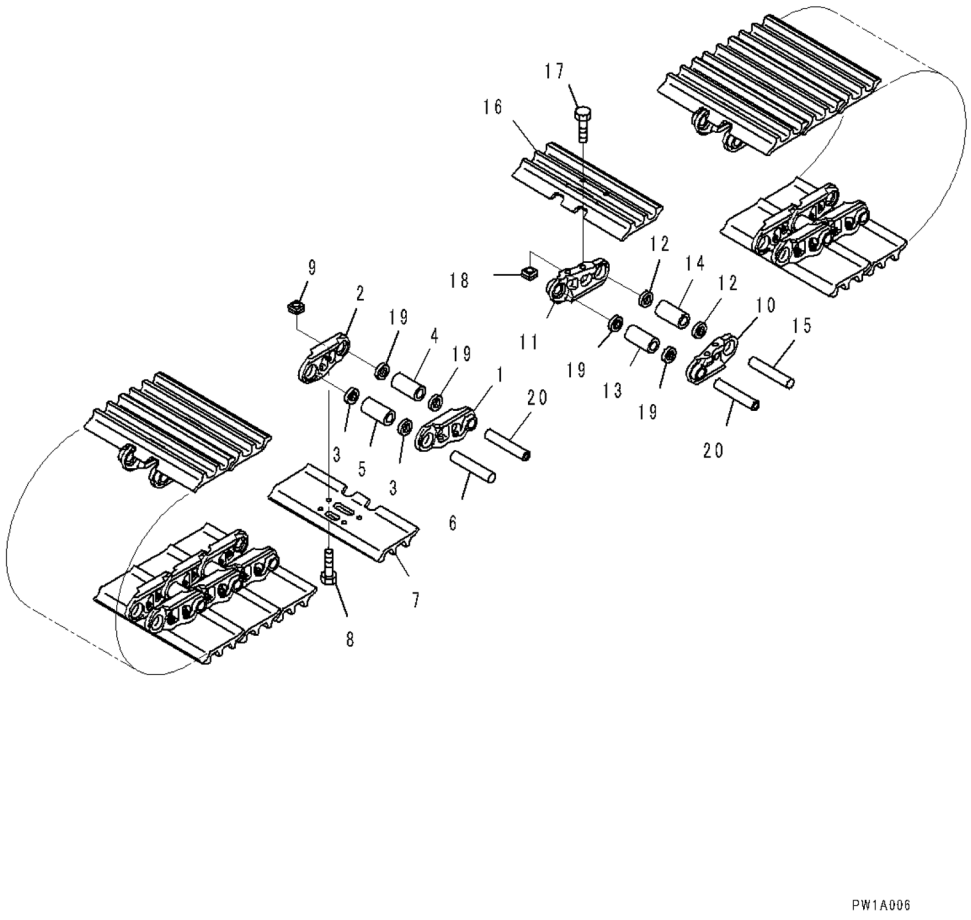


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-02111 | Track Shoe Assembly. ..... | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link,LHS. ..... | 48 | Y200001- |
| 2 | | 20Y-32-31130 | • Link,RHS . ..... | 48 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal . ..... | 92 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master . ..... | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular. ..... | 46 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin . ..... | 46 | Y200001- |
| 7 | | 20Y-32-31310 | • Shoe, W=700mm . ..... | 48 | Y200001- |
| 8 | | 20Y-32-31210 | • Bolt, (Kit : K03) . ..... | 192 | Y200001- |
| 9 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) . ..... | 192 | Y200001- |
| 10 | | 20Y-32-31120 | • Link,LHS. ..... | 50 | Y200001- |
| 11 | | 20Y-32-31130 | • Link,RHS . ..... | 50 | Y200001- |
| 12 | | 20Y-32-11240 | • Seal . ..... | 96 | Y200001- |
| 13 | | 20Y-32-11171 | • Bushing, Master . ..... | 2 | Y200001- |
| 14 | | 20Y-32-11141 | • Bushing, Regular. ..... | 48 | Y200001- |
| 15 | | 20Y-32-31150 | • Pin . ..... | 48 | Y200001- |
| 16 | | 20Y-32-31310 | • Shoe, W=700mm . ..... | 50 | Y200001- |
| 17 | | 20Y-32-31210 | • Bolt, (Kit : K03) . ..... | 200 | Y200001- |
| 18 | | 134-32-61221 | • Nut, Track Shoe, (Kit : K03) . ..... | 200 | Y200001- |
| 19 | | 20Y-32-11260 | • Seal . ..... | 8 | Y200001- |
| 20 | | 20Y-32-31190 | • Pin . ..... | 4 | Y200001- |

https://truckmanualshub.com/

# FIG. R0501-011001 Track Link Assembly, Supply Parts, LC

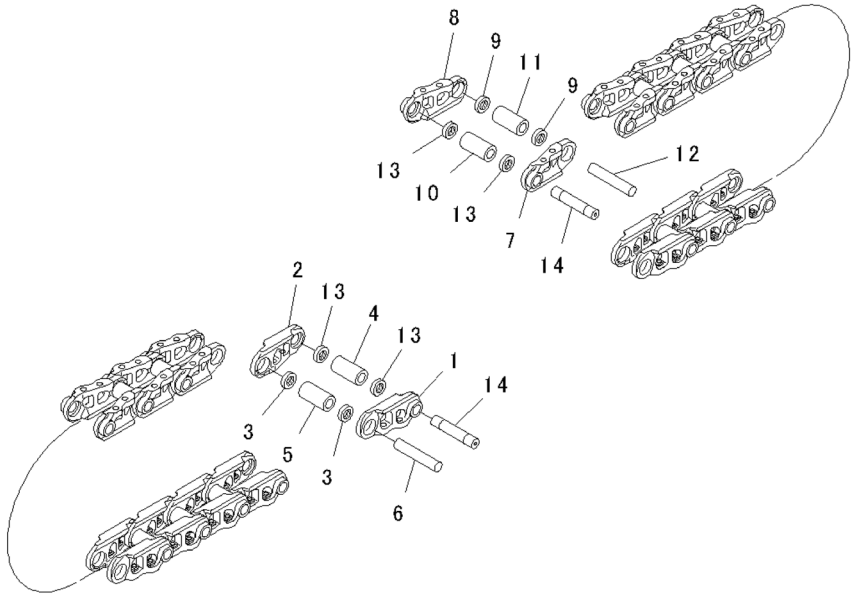



PW1A010

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-00310 | Track Link Assembly. | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link. | 48 | Y200001- |
| 2 | | 20Y-32-31130 | • Link. | 48 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal . | 92 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master . | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular. | 46 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin . | 46 | Y200001- |
| 7 | | 20Y-32-31120 | • Link. | 50 | Y200001- |
| 8 | | 20Y-32-31130 | • Link. | 50 | Y200001- |
| 9 | | 20Y-32-11240 | • Seal . | 96 | Y200001- |
| 10 | | 20Y-32-11171 | • Bushing, Master . | 2 | Y200001- |
| 11 | | 20Y-32-11141 | • Bushing, Regular. | 48 | Y200001- |
| 12 | | 20Y-32-31150 | • Pin . | 48 | Y200001- |
| 13 | | 20Y-32-11260 | • Seal . | 8 | Y200001- |
| 14 | | 20Y-32-31190 | • Pin . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R0501-001001 Track Link Assembly

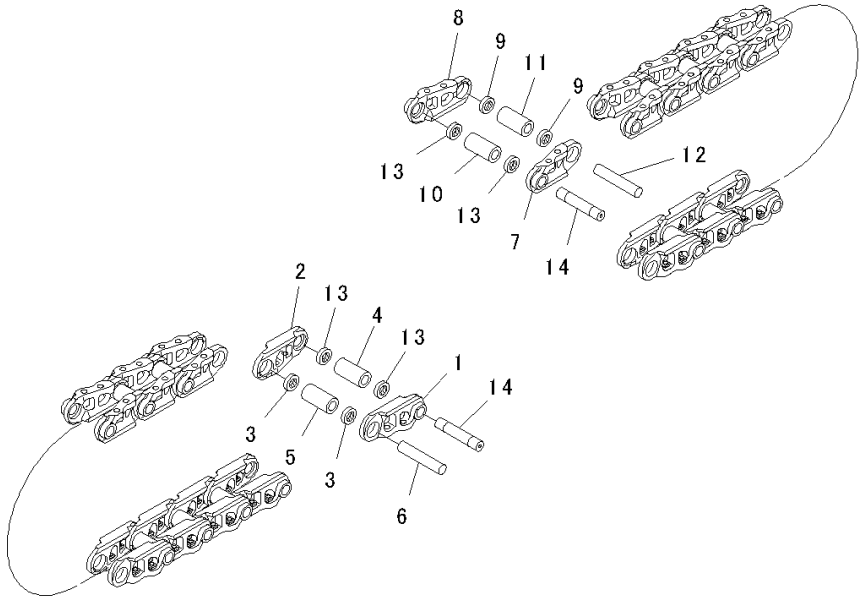


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-32-00300 | Track Link Assembly | 1 | Y200001- |
| 1 | | 20Y-32-31120 | • Link | 44 | Y200001- |
| 2 | | 20Y-32-31130 | • Link | 44 | Y200001- |
| 3 | | 20Y-32-11240 | • Seal | 84 | Y200001- |
| 4 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 5 | | 20Y-32-11141 | • Bushing, Regular | 42 | Y200001- |
| 6 | | 20Y-32-31150 | • Pin | 42 | Y200001- |
| 7 | | 20Y-32-31120 | • Link | 46 | Y200001- |
| 8 | | 20Y-32-31130 | • Link | 46 | Y200001- |
| 9 | | 20Y-32-11240 | • Seal | 88 | Y200001- |
| 10 | | 20Y-32-11171 | • Bushing, Master | 2 | Y200001- |
| 11 | | 20Y-32-11141 | • Bushing, Regular | 44 | Y200001- |
| 12 | | 20Y-32-31150 | • Pin | 44 | Y200001- |
| 13 | | 20Y-32-11260 | • Seal | 8 | Y200001- |
| 14 | | 20Y-32-31190 | • Pin | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. R1100-009001 Track Frame, With Under Cover

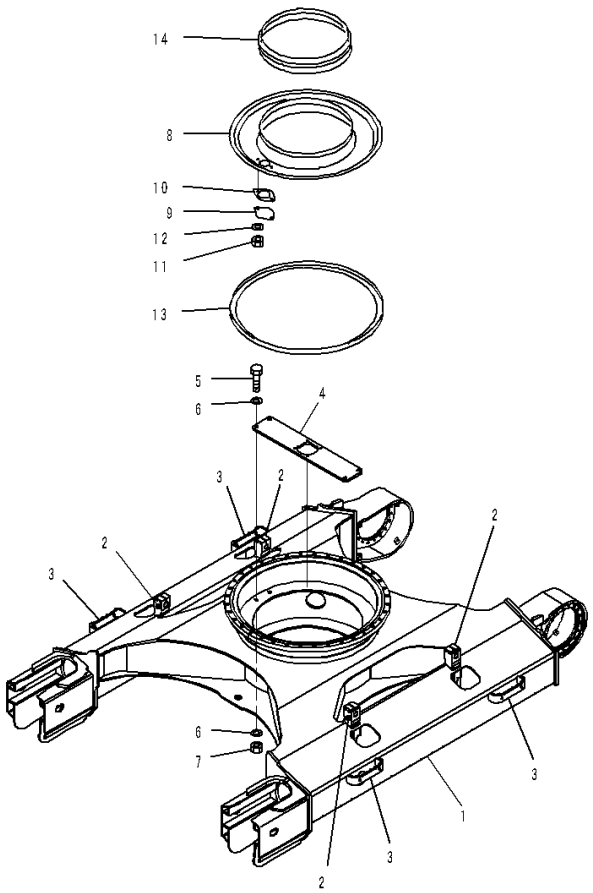


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-30-41111 | Track Frame | 1 | Y200001- |
| 2 | | 20Y-30-31D24 | • Bracket | 4 | Y200001- |
| 3 | | 20Y-30-41A10 | • Plate,Welded | 4 | Y200001- |
| 4 | | 20Y-30-31E81 | Plate | 1 | Y200001- |
| 5 | | 01010-82065 | Bolt | 4 | Y200001- |
| 6 | | 01643-32060 | Washer | 8 | Y200001- |
| 7 | | 01580-12016 | Nut | 4 | Y200001- |
| 8 | | 20Y-30-21151 | Cover | 1 | Y200001- |
| 9 | | 205-30-71181 | Cover | 1 | Y200001- |
| 10 | | 205-30-71191 | Gasket | 1 | Y200001- |
| 11 | | 01580-11008 | Nut | 2 | Y200001- |
| 12 | | 01643-31032 | Washer | 2 | Y200001- |
| 13 | | 20Y-30-11370 | Seal | 1 | Y200001- |
| 14 | | 205-30-71171 | Seal | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. R1100-008001 Track Frame, With Under Cover, LC

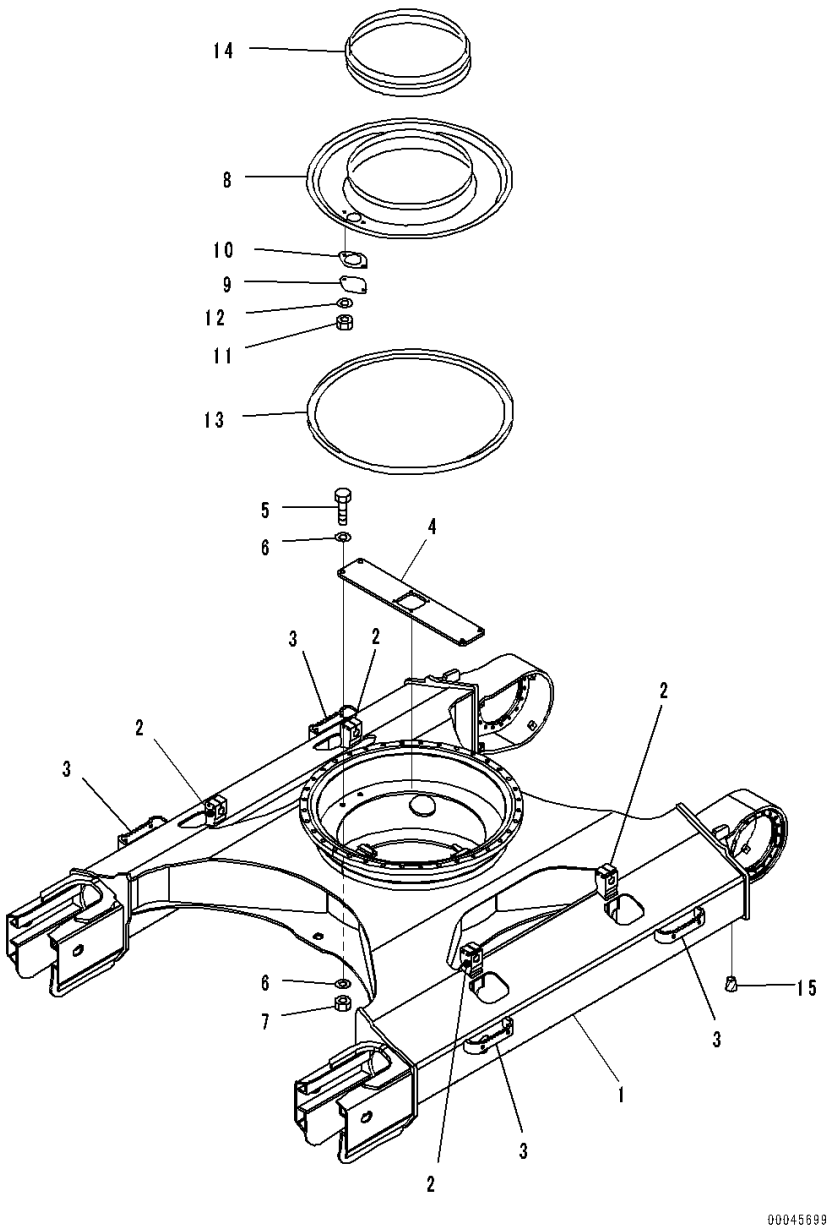


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-30-45211 | Track Frame | 1 | Y200001- |
| 2 | | 20Y-30-31D24 | • Bracket | 4 | Y200001- |
| 3 | | 20Y-30-41A10 | • Plate,Welded | 4 | Y200001- |
| 4 | | 20Y-30-31E81 | Plate | 1 | Y200001- |
| 5 | | 01010-82065 | Bolt | 4 | Y200001- |
| 6 | | 01643-32060 | Washer | 8 | Y200001- |
| 7 | | 01580-12016 | Nut | 4 | Y200001- |
| 8 | | 20Y-30-21151 | Cover | 1 | Y200001- |
| 9 | | 205-30-71181 | Cover | 1 | Y200001- |
| 10 | | 205-30-71191 | Gasket | 1 | Y200001- |
| 11 | | 01580-11008 | Nut | 2 | Y200001- |
| 12 | | 01643-31032 | Washer | 2 | Y200001- |
| 13 | | 20Y-30-11370 | Seal | 1 | Y200001- |
| 14 | | 205-30-71171 | Seal | 1 | Y200001- |
| 15 | | 07049-02025 | Plug | 32 | Y200001- |

https://truckmanualshub.com/

# FIG. R1140-001001 Track Frame Under Cover

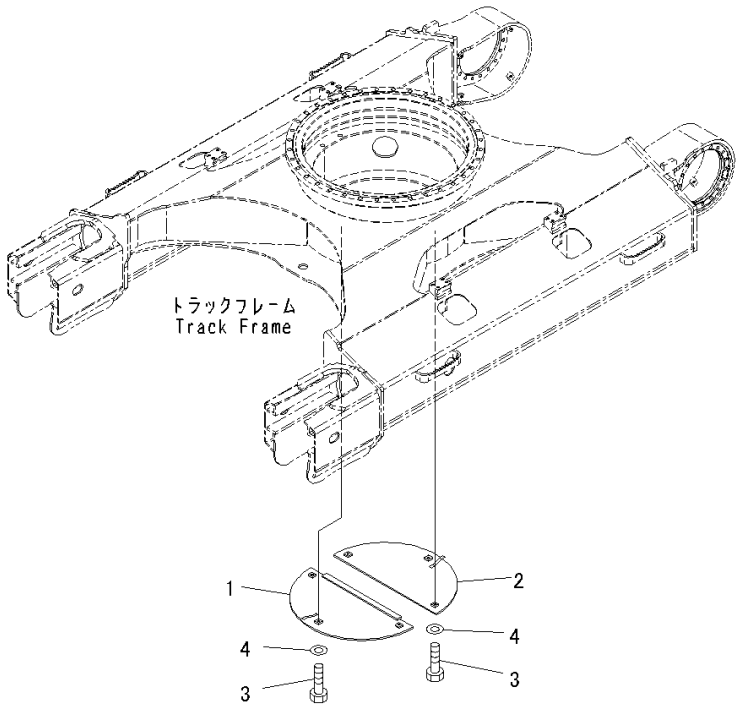



PW1F739

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-973-2220 | Cover | 1 | Y200001- |
| 2 | | 20Y-973-2230 | Cover | 1 | Y200001- |
| 3 | | 01010-81235 | Bolt | 6 | Y200001- |
| 4 | | 01643-31232 | Washer | 6 | Y200001- |

https://truckmanualshub.com/

# FIG. R1200-001001 Track Roller Guard, With Track Roller Guard

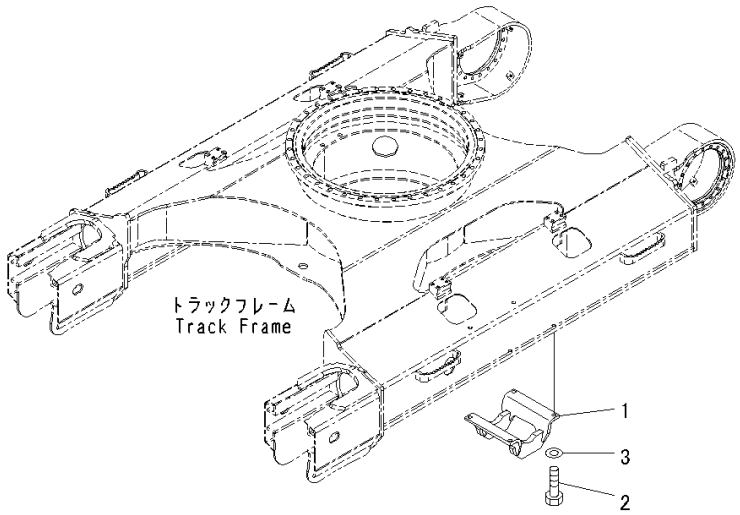



PW1F740

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-30-31160 | Guard | 2 | Y200001- |
| 2 | | 01010-62050 | Bolt | 8 | Y200001- |
| 3 | | 01643-32060 | Washer | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. R1200-002001 Track Roller Guard, With Full Length Track Roller Guard

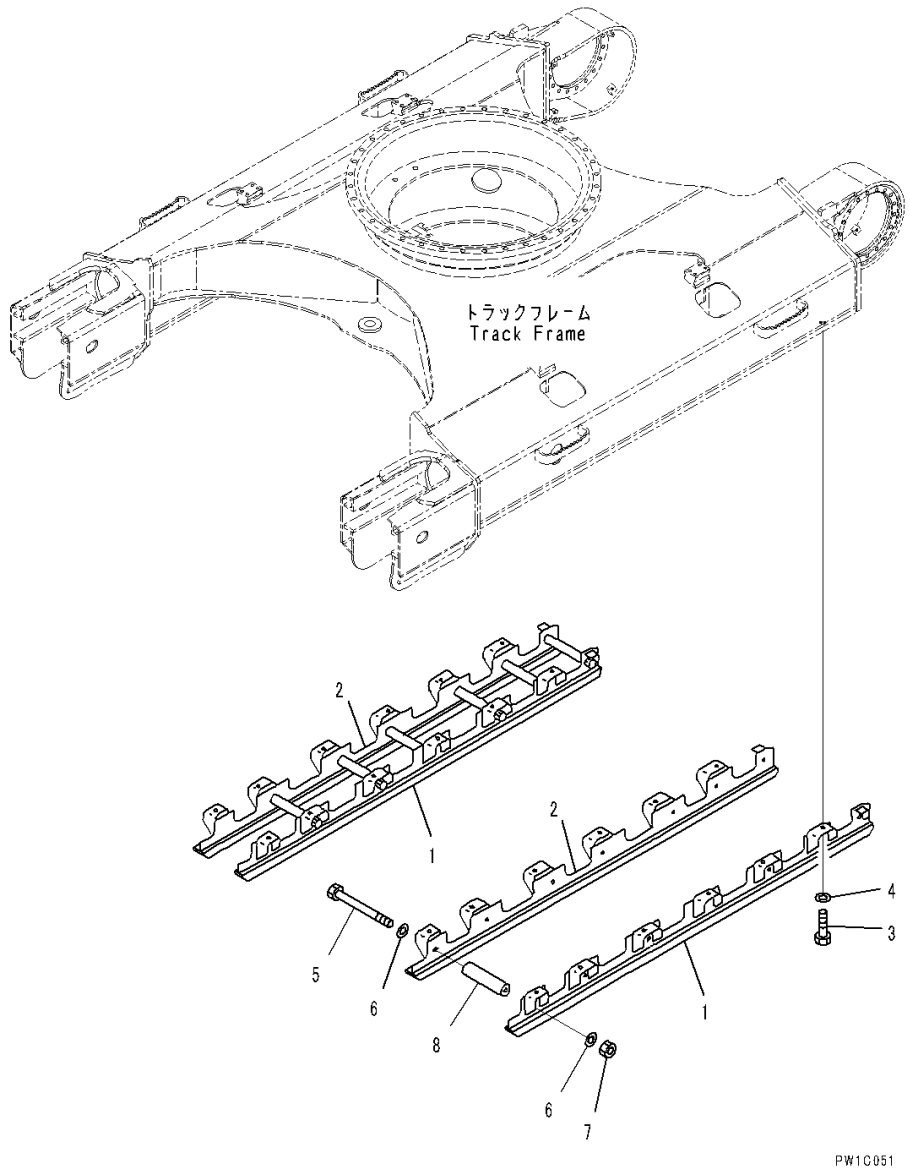


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-30-31170 | Guard,LHS | 2 | Y200001- |
| 2 | | 20Y-30-31180 | Guard,RHS | 2 | Y200001- |
| 3 | | 01010-62050 | Bolt | 24 | Y200001- |
| 4 | | 01643-32060 | Washer | 24 | Y200001- |
| 5 | | 09205-18295 | Bolt | 14 | Y200001- |
| 6 | | 01643-31845 | Washer | 28 | Y200001- |
| 7 | | 01580-11815 | Nut | 14 | Y200001- |
| 8 | | 20Y-30-23140 | Collar | 14 | Y200001- |

https://truckmanualshub.com/

# FIG. R1200-012001 Track Roller Guard, With Track Roller Guard, LC

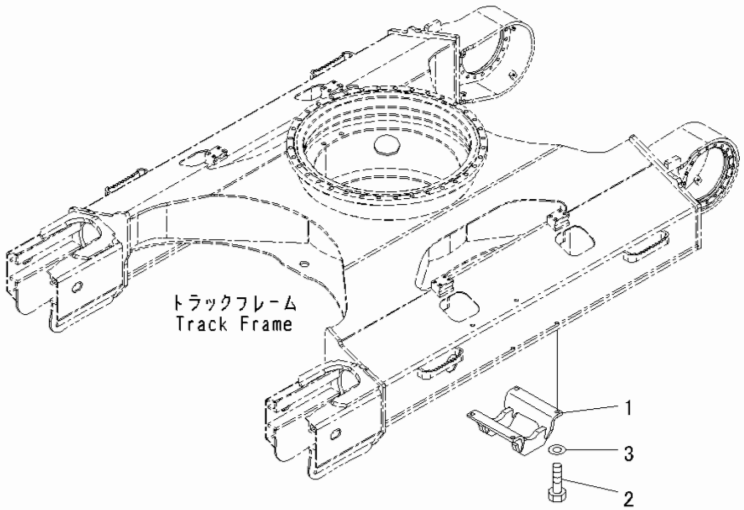



PW1F740

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-30-31160 | Guard | 4 | Y200001- |
| 2 | | 01010-62050 | Bolt | 16 | Y200001- |
| 3 | | 01643-32060 | Washer | 16 | Y200001- |

https://truckmanualshub.com/

# FIG. R1200-011001 Track Roller Guard, With Full Length Track Roller Guard, LC

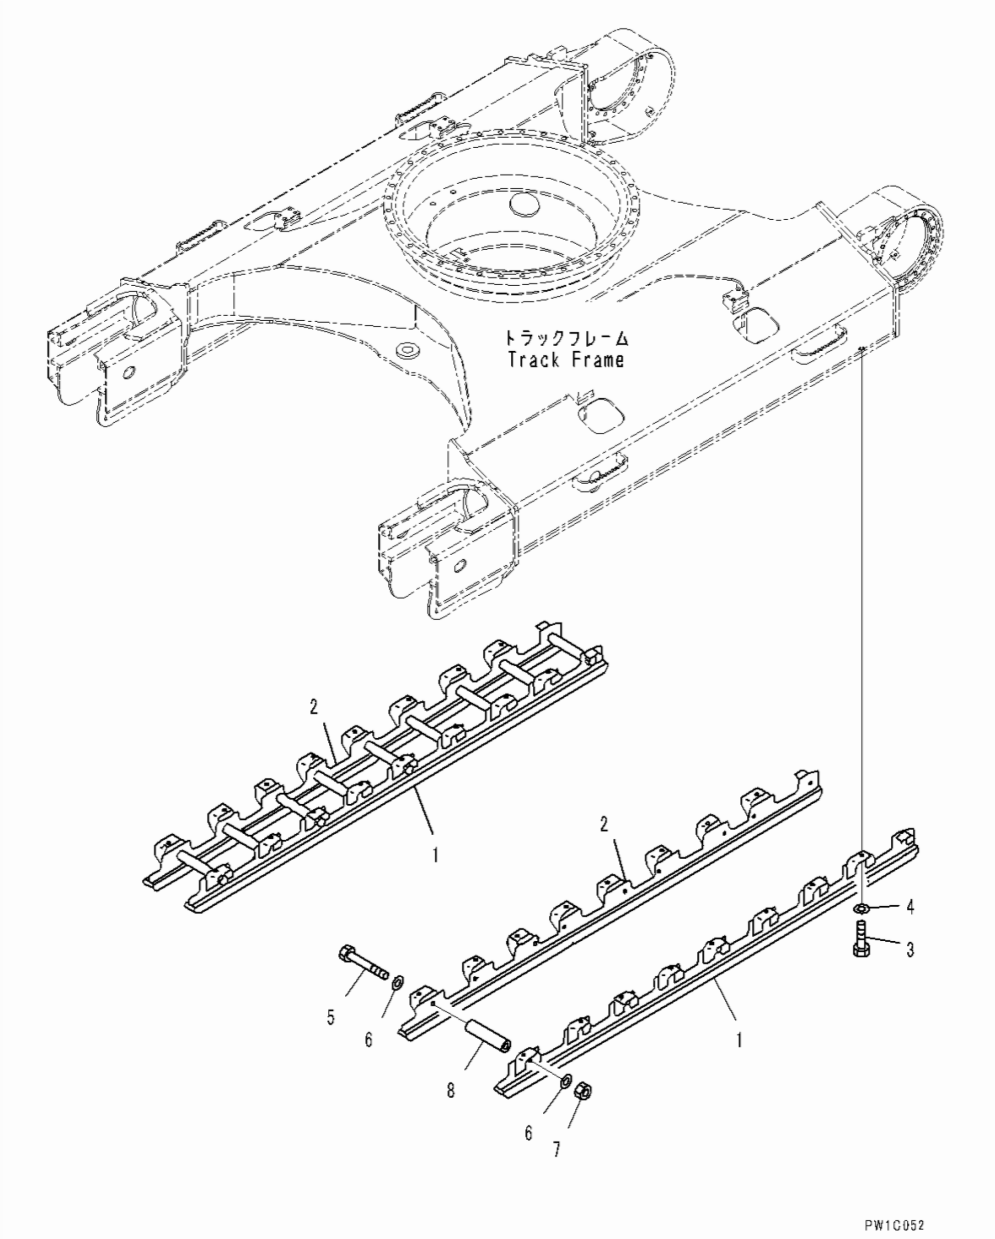



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-30-35170 | Guard,LHS | 2 | Y200001- |
| 2 | | 20Y-30-35180 | Guard,RHS | 2 | Y200001- |
| 3 | | 01010-62050 | Bolt | 32 | Y200001- |
| 4 | | 01643-32060 | Washer | 32 | Y200001- |
| 5 | | 09205-18295 | Bolt | 18 | Y200001- |
| 6 | | 01643-31845 | Washer | 36 | Y200001- |
| 7 | | 01580-11815 | Nut | 18 | Y200001- |
| 8 | | 20Y-30-23140 | Collar | 18 | Y200001- |

# WORK EQUIPMENT

https://truckmanualshub.com/


# FIG. T1110-004003 Boom, Arm and Bucket Cylinder Piping

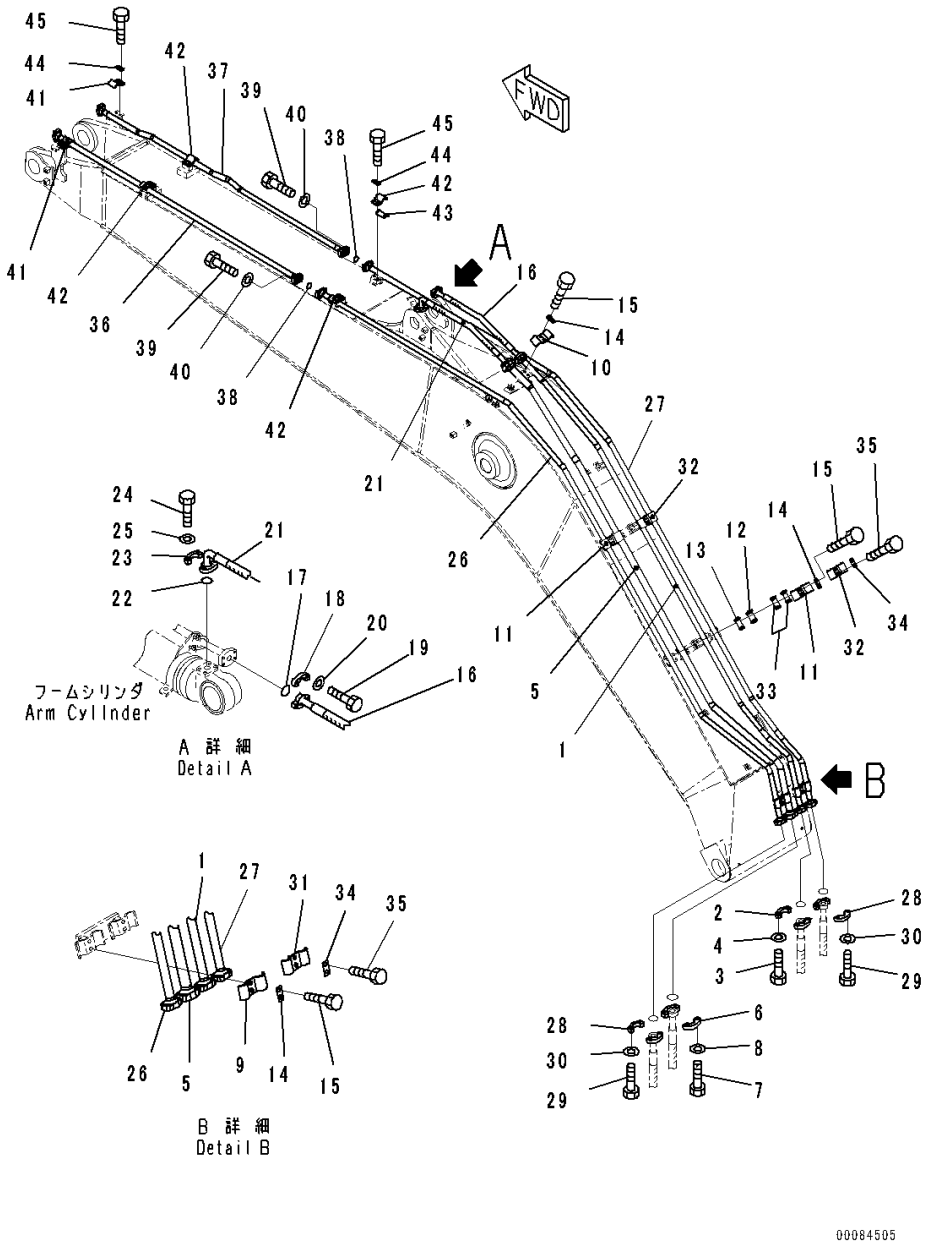


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-52621 | Tube | 1 | Y200001- |
| 2 | | 07371-30640 | Flange, Split | 2 | Y200001- |
| 3 | | 07372-21035 | Bolt | 4 | Y200001- |
| 4 | | 01643-51032 | Washer | 4 | Y200001- |
| 5 | | 20Y-62-52611 | Tube | 1 | Y200001- |
| 6 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 7 | | 07372-21035 | Bolt | 4 | Y200001- |
| 8 | | 01643-51032 | Washer | 4 | Y200001- |
| 9 | | 20Y-62-13690 | Clamp | 1 | Y200001- |
| 10 | | 20Y-62-13720 | Clamp | 1 | Y200001- |
| 11 | | 20Y-62-13730 | Clamp | 2 | Y200001- |
| 12 | | 205-62-73431 | Seat | 2 | Y200001- |
| 13 | | 20Y-62-13761 | Seat | 2 | Y200001- |
| 14 | | 20Y-62-13450 | Plate | 4 | Y200001- |
| 15 | | 01010-81230 | Bolt | 8 | Y200001- |
| 16 | | 07074-006A7 | Hose, Flange Type | 1 | Y200001- |
| 17 | | 07000-13025 | O-ring | 2 | Y200001- |
| 18 | | 07371-30640 | Flange, Split | 4 | Y200001- |
| 19 | | 07372-21035 | Bolt | 8 | Y200001- |
| 20 | | 01643-51032 | Washer | 8 | Y200001- |
| 21 | | 20Y-62-53750 | Hose | 1 | Y200001- |
| 22 | | 07000-13032 | O-ring | 2 | Y200001- |
| 23 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 24 | | 07372-21035 | Bolt | 8 | Y200001- |
| 25 | | 01643-51032 | Washer | 8 | Y200001- |
| 26 | | 20Y-62-52631 | Tube | 1 | Y200001- |
| 27 | | 20Y-62-52641 | Tube | 1 | Y200001- |
| 28 | | 07371-30640 | Flange, Split | 4 | Y200001- |
| 29 | | 07372-21035 | Bolt | 8 | Y200001- |
| 30 | | 01643-51032 | Washer | 8 | Y200001- |
| 31 | | 20Y-62-13710 | Clamp | 1 | Y200001- |
| 32 | | 20Y-62-13190 | Clamp | 2 | Y200001- |
| 33 | | 20Y-62-13761 | Seat | 4 | Y200001- |
| 34 | | 20Y-62-13450 | Plate | 3 | Y200001- |
| 35 | | 01010-81230 | Bolt | 6 | Y200001- |
| 36 | | 20Y-62-52651 | Tube | 1 | Y200001- |
| 37 | | 20Y-62-52661 | Tube | 1 | Y200001- |
| 38 | | 07000-13030 | O-ring | 2 | Y200001- |
| 39 | | 07372-21035 | Bolt | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-004003 Boom, Arm and Bucket Cylinder Piping

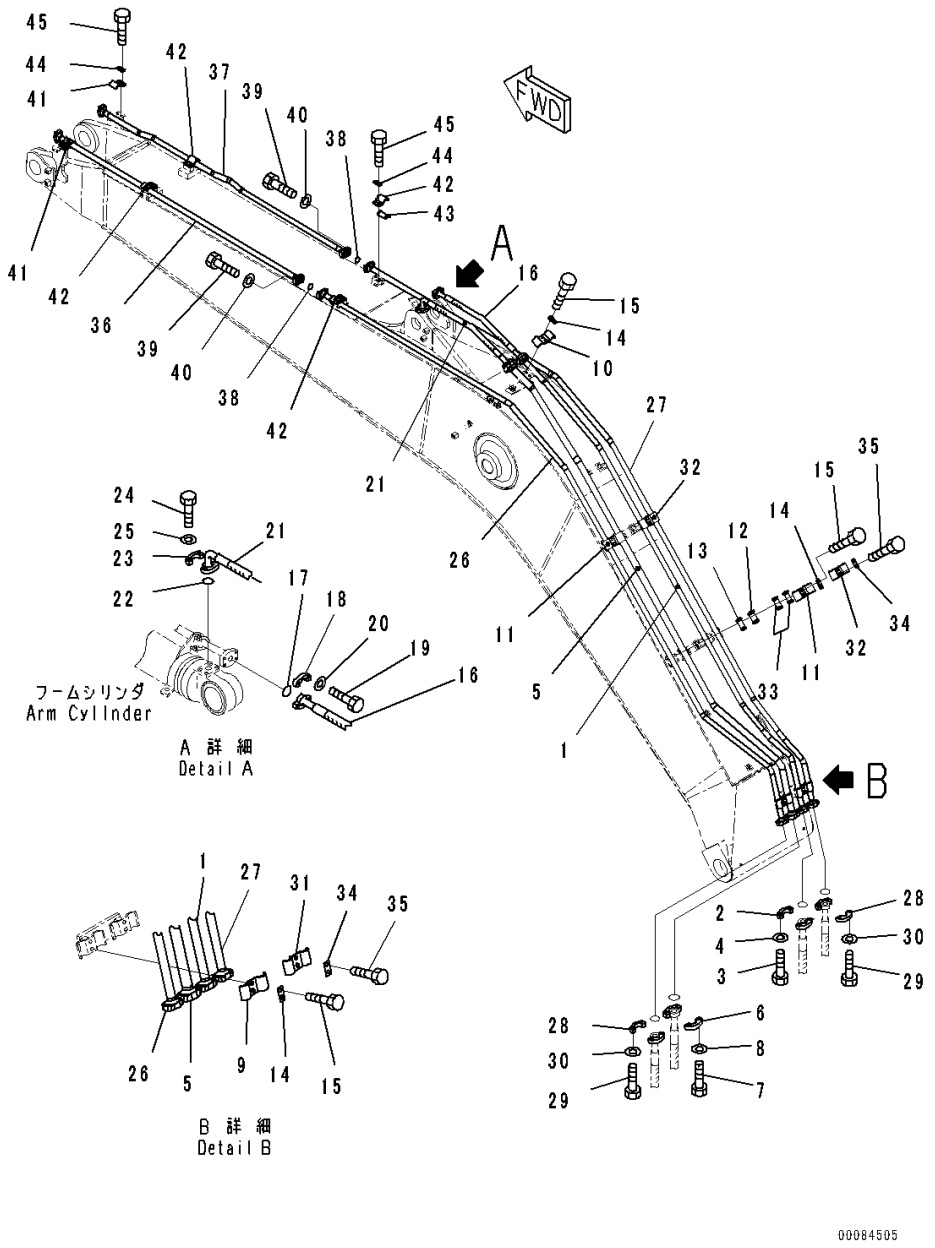


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 01643-51032 | Washer | 8 | Y200001- |
| 41 | | 20Y-62-13650 | Clamp | 2 | Y200001- |
| 42 | | 20Y-62-13180 | Clamp | 4 | Y200001- |
| 43 | | 20Y-62-13761 | Seat | 4 | Y200001- |
| 44 | | 20Y-62-13450 | Plate | 6 | Y200001- |
| 45 | | 01010-81230 | Bolt. | 12 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-004004 Boom, Lubricating Piping

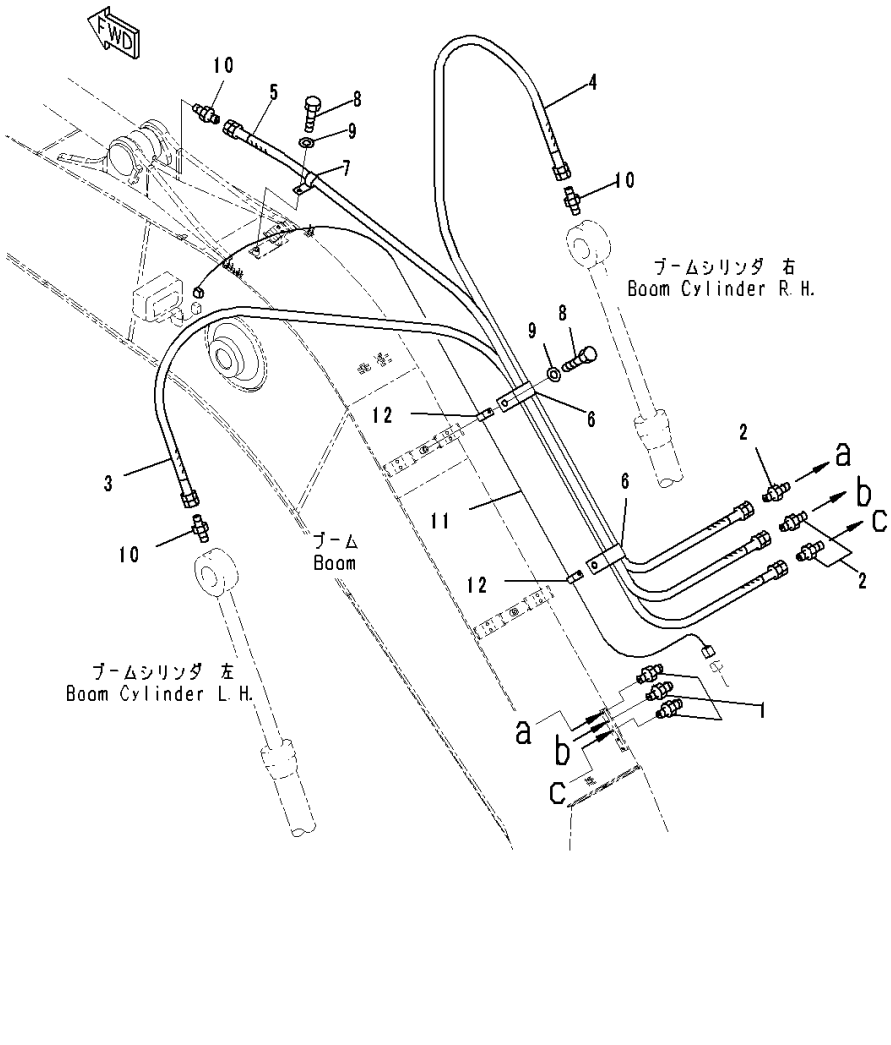


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07020-00000 | Fitting, Grease | 3 | Y200001- |
| 2 | | 205-70-51390 | Nipple | 3 | Y200001- |
| 3 | | 20Y-70-31330 | Hose | 1 | Y200001- |
| 4 | | 20Y-70-41230 | Hose | 1 | Y200001- |
| 5 | | 20Y-70-41240 | Hose | 1 | Y200001- |
| 6 | | 04434-52112 | Clip | 2 | Y200001- |
| 7 | | 04434-51012 | Clip | 1 | Y200001- |
| 8 | | 01010-81220 | Bolt | 3 | Y200001- |
| 9 | | 01643-31232 | Washer | 3 | Y200001- |
| 10 | | 205-70-51390 | Nipple | 3 | Y200001- |
| 11 | | 20Y-06-41161 | Wiring Harness | 1 | Y200001- |
| 12 | | 04434-51012 | Clip | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-004005 Boom, Attachment Plug

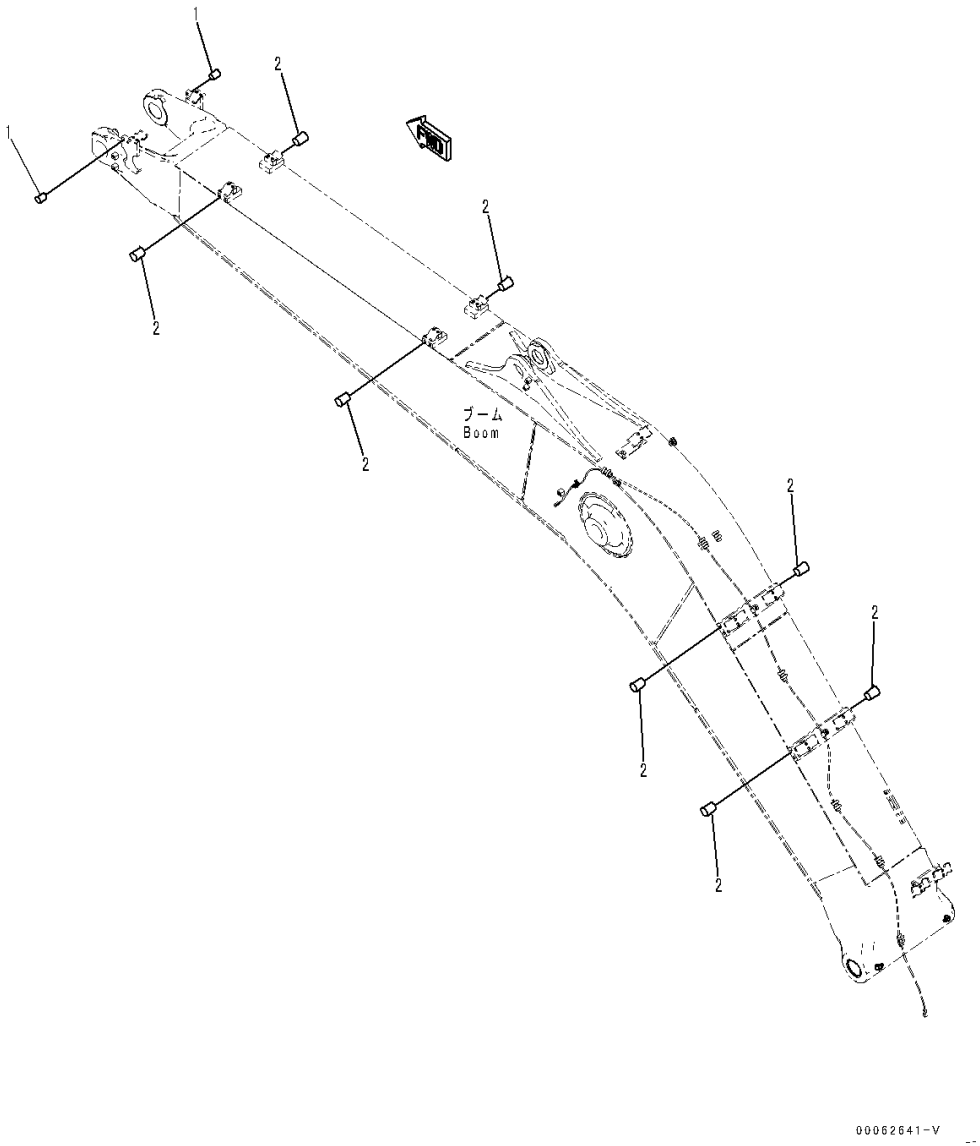


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07049-01215 | Plug | 4 | Y200001- |
| 2 | | 07049-01620 | Plug | 16 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-004006 Boom, Working Lamp

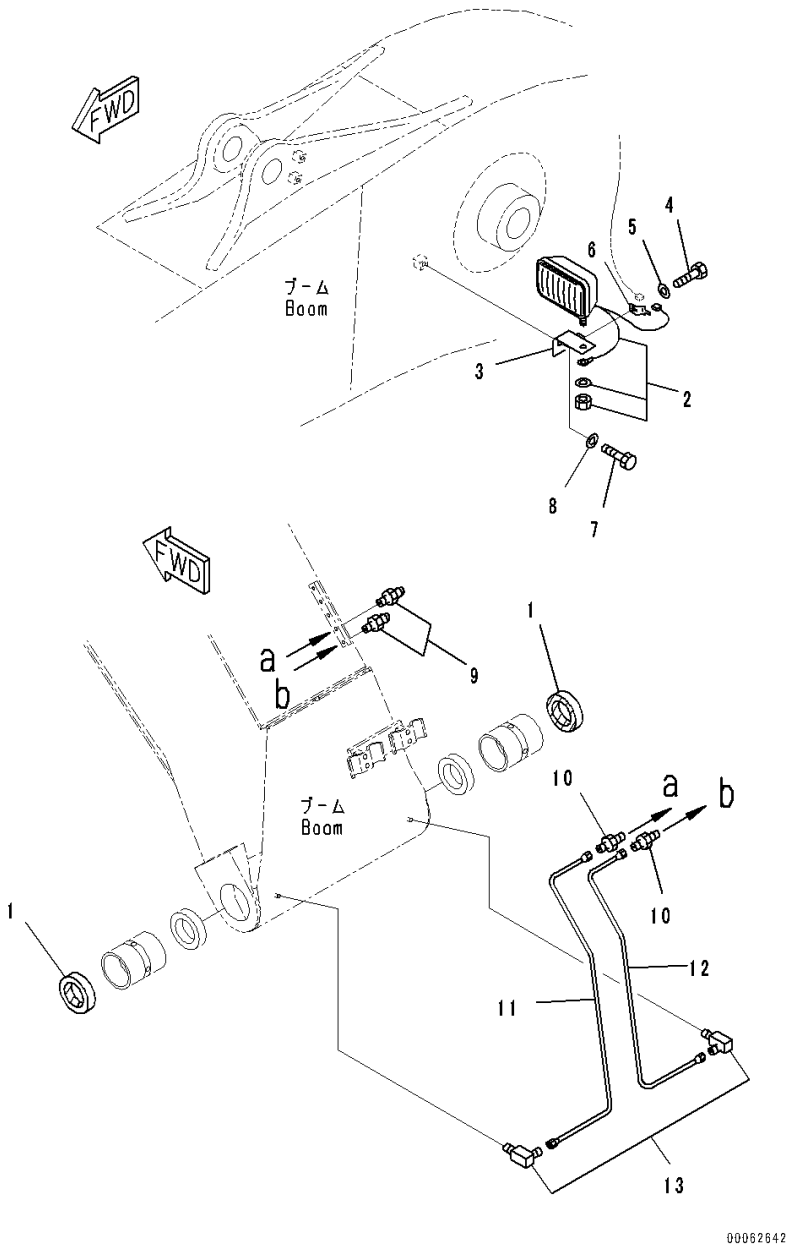


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07145-00090 | Seal, Dust | 2 | Y200001- |
| 2 | | 21T-06-32810 | Working Lamp Assembly, 24volt, 70watt | 1 | Y200001- |
| | | 421-06-23330 | • Bulb, 70watt. | 1 | Y200001- |
| 3 | | 20Y-06-21551 | Bracket | 1 | Y200001- |
| 4 | | 01010-81220 | Bolt | 1 | Y200001- |
| 5 | | 01643-31232 | Washer | 1 | Y200001- |
| 6 | | 08193-21012 | Clip | 1 | Y200001- |
| 7 | | 01010-81230 | Bolt | 1 | Y200001- |
| 8 | | 01643-31232 | Washer | 1 | Y200001- |
| 9 | | 07020-00000 | Fitting, Grease | 2 | Y200001- |
| 10 | | 20Y-70-11540 | Connector . | 2 | Y200001- |
| 11 | | 20Y-70-31310 | Tube | 1 | Y200001- |
| 12 | | 20Y-70-31320 | Tube | 1 | Y200001- |
| 13 | | 20Y-25-11270 | Elbow | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-002005 Boom, Additional Piping

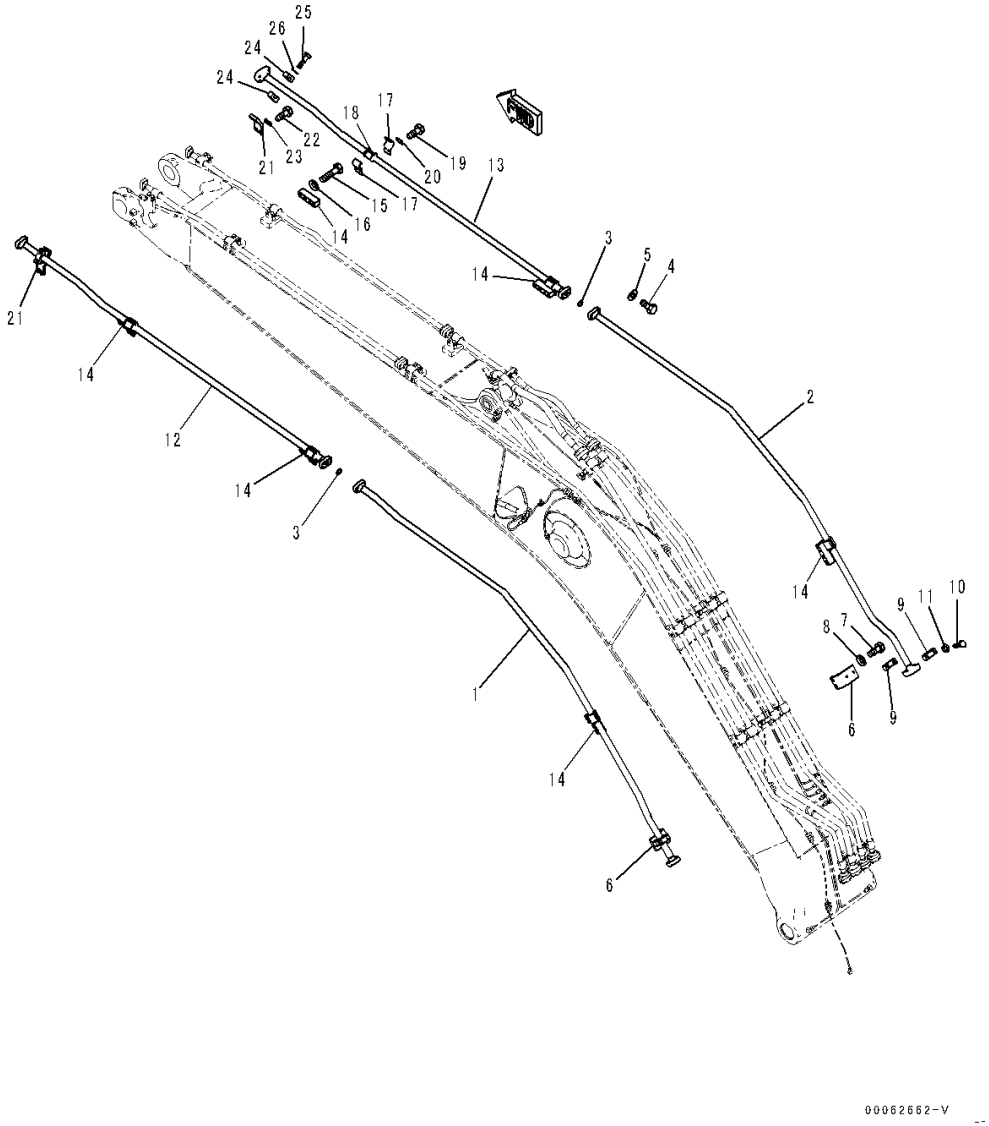


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-52751 | Tube | 1 | Y200001- |
| 2 | | 20Y-62-52761 | Tube | 1 | Y200001- |
| 3 | | 07000-13035 | O-ring | 2 | Y200001- |
| 4 | | 07372-21040 | Bolt | 8 | Y200001- |
| 5 | | 01643-51032 | Washer | 8 | Y200001- |
| 6 | | 20Y-62-52731 | Bracket | 2 | Y200001- |
| 7 | | 01010-81645 | Bolt | 4 | Y200001- |
| 8 | | 01643-31645 | Washer | 4 | Y200001- |
| 9 | | 20Y-62-52671 | Clamp | 4 | Y200001- |
| 10 | | 01010-81275 | Bolt | 4 | Y200001- |
| 11 | | 01643-31232 | Washer | 4 | Y200001- |
| 12 | | 20Y-62-52770 | Tube | 1 | Y200001- |
| 13 | | 20Y-62-52780 | Tube | 1 | Y200001- |
| 14 | | 20Y-62-52740 | Bracket | 6 | Y200001- |
| 15 | | 01010-81665 | Bolt | 12 | Y200001- |
| 16 | | 01643-31645 | Washer | 12 | Y200001- |
| 17 | | 20Y-62-52680 | Clamp | 12 | Y200001- |
| 18 | | 205-62-73431 | Seat | 6 | Y200001- |
| 19 | | 01010-81230 | Bolt | 12 | Y200001- |
| 20 | | 20Y-62-13450 | Plate | 6 | Y200001- |
| 21 | | 20Y-62-45382 | Bracket | 2 | Y200001- |
| 22 | | 01010-81235 | Bolt | 4 | Y200001- |
| 23 | | 20Y-62-13450 | Plate | 2 | Y200001- |
| 24 | | 20Y-62-52671 | Clamp | 4 | Y200001- |
| 25 | | 01010-81275 | Bolt | 4 | Y200001- |
| 26 | | 01643-31232 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-005001 Boom, Boom

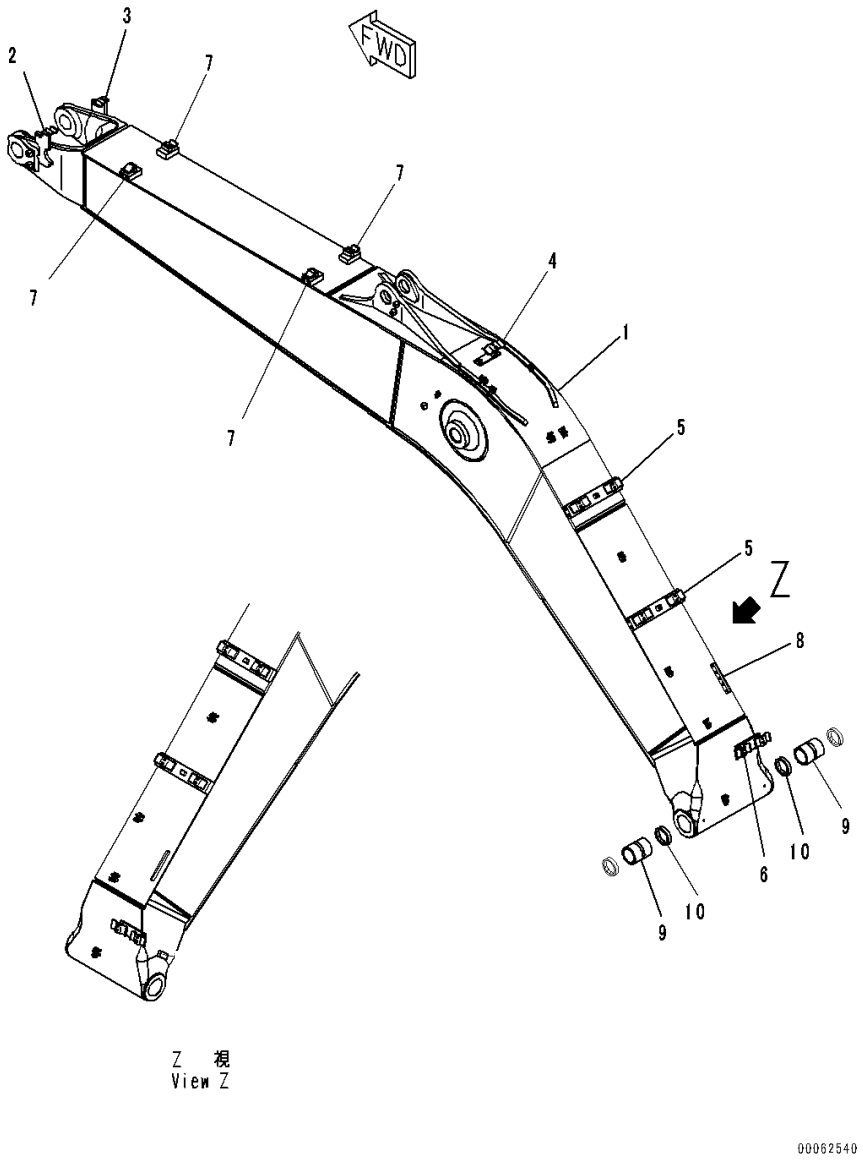


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-70-46142 | Boom . | 1 | Y200001- |
| 2 | | 20Y-62-45152 | • Bracket,Welded . | 1 | Y200001- |
| 3 | | 20Y-62-45162 | • Bracket,Welded . | 1 | Y200001- |
| 4 | | 20Y-62-45172 | • Bracket,Welded . | 1 | Y200001- |
| 5 | | 20Y-62-52710 | • Bracket,Welded . | 2 | Y200001- |
| 6 | | 20Y-62-45210 | • Bracket,Welded . | 1 | Y200001- |
| 7 | | 20Y-62-52720 | • Bracket,Welded . | 4 | Y200001- |
| 8 | | 20Y-70-11651 | • Seat,Welded. | 1 | Y200001- |
| 9 | | 20Y-70-21640 | Bushing . | 2 | Y200001- |
| 10 | | 07145-00090 | Seal, Dust . | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-005002 Boom, Top Pin and Bottom Pin

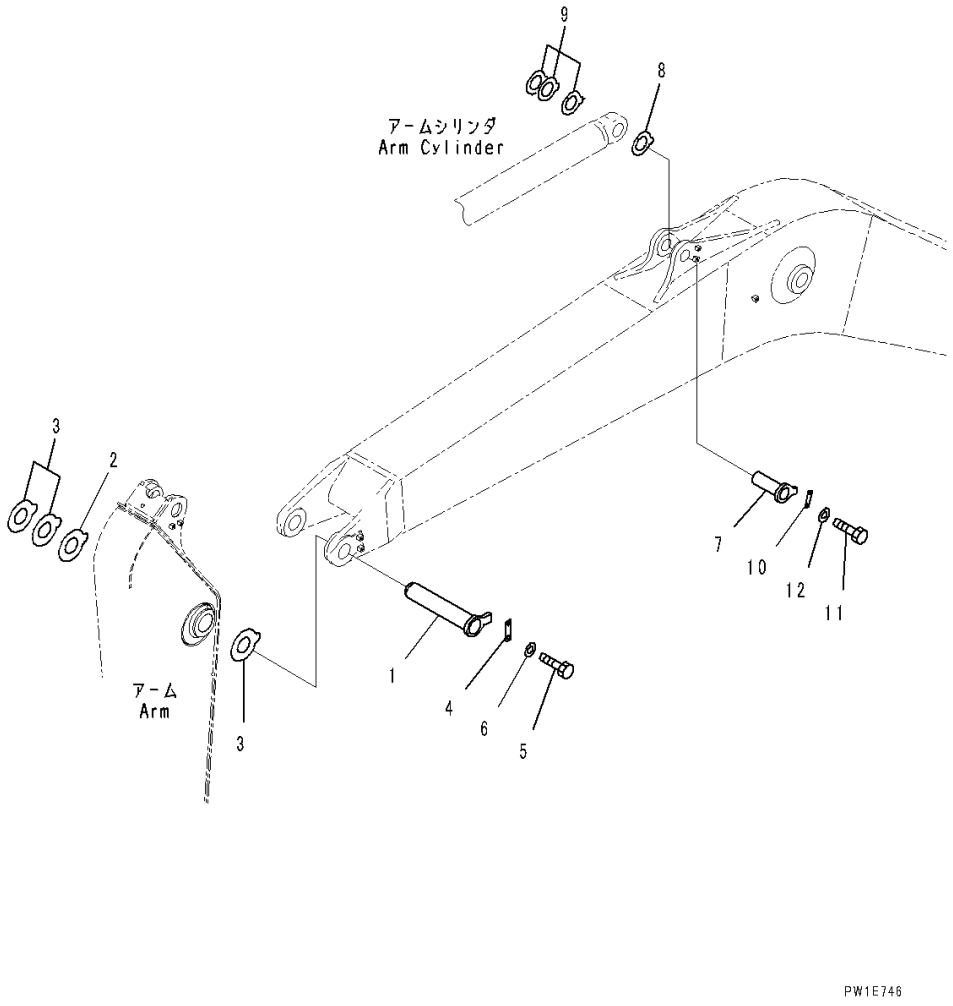


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-70-65681 | Pin | 1 | Y200001- |
| 2 | | 20Y-70-11360 | Spacer, T=0.8mm | 1 | Y200001- |
| 3 | | 206-70-45210 | Spacer, T=1.5mm | 3 | Y200001- |
| 4 | | 205-70-71312 | Plate | 1 | Y200001- |
| 5 | | 01010-81235 | Bolt | 2 | Y200001- |
| 6 | | 01643-31232 | Washer | 2 | Y200001- |
| 7 | | 20Y-70-41250 | Pin | 1 | Y200001- |
| 8 | | 20Y-70-11340 | Spacer, T=0.8mm | 1 | Y200001- |
| 9 | | 205-70-51530 | Spacer, T=1.5mm | 3 | Y200001- |
| 10 | | 205-70-66581 | Plate | 1 | Y200001- |
| 11 | | 01010-81230 | Bolt | 2 | Y200001- |
| 12 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-013001 Boom, 5.7m, Heavy Duty, 100 Hours Greasing Type, With Webasto Heater, Boom

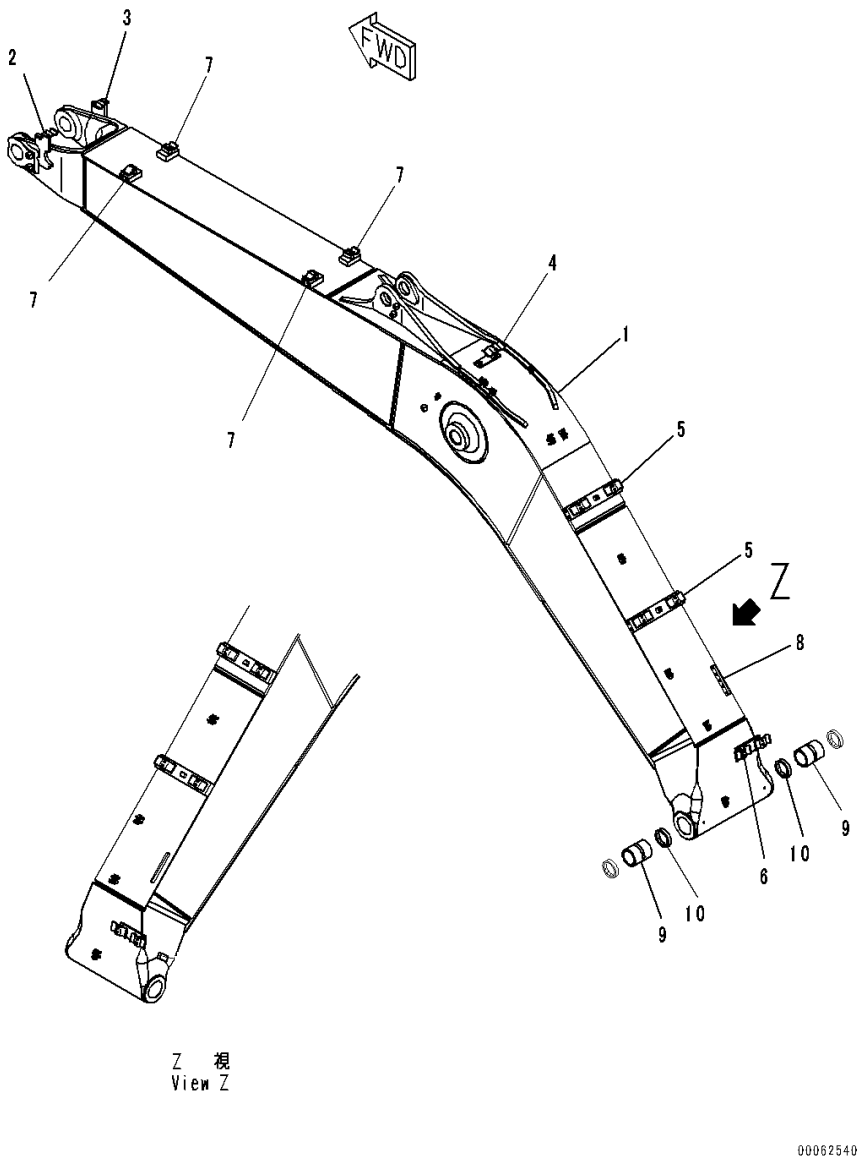


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-70-46142 | Boom | 1 | Y200001- |
| 2 | | 20Y-62-45152 | • Bracket,Welded | 1 | Y200001- |
| 3 | | 20Y-62-45162 | • Bracket,Welded | 1 | Y200001- |
| 4 | | 20Y-62-45172 | • Bracket,Welded | 1 | Y200001- |
| 5 | | 20Y-62-52710 | • Bracket,Welded | 2 | Y200001- |
| 6 | | 20Y-62-45210 | • Bracket,Welded | 1 | Y200001- |
| 7 | | 20Y-62-52720 | • Bracket,Welded | 4 | Y200001- |
| 8 | | 20Y-70-11651 | • Seat,Welded | 1 | Y200001- |
| 9 | | 20Y-70-21640 | Bushing | 2 | Y200001- |
| 10 | | 07145-10090 | Seal, Dust | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-013003 Boom, 5.7m, Heavy Duty, 100 Hours Greasing Type, With Webasto Heater, Arm and Bucket Cylinder Piping

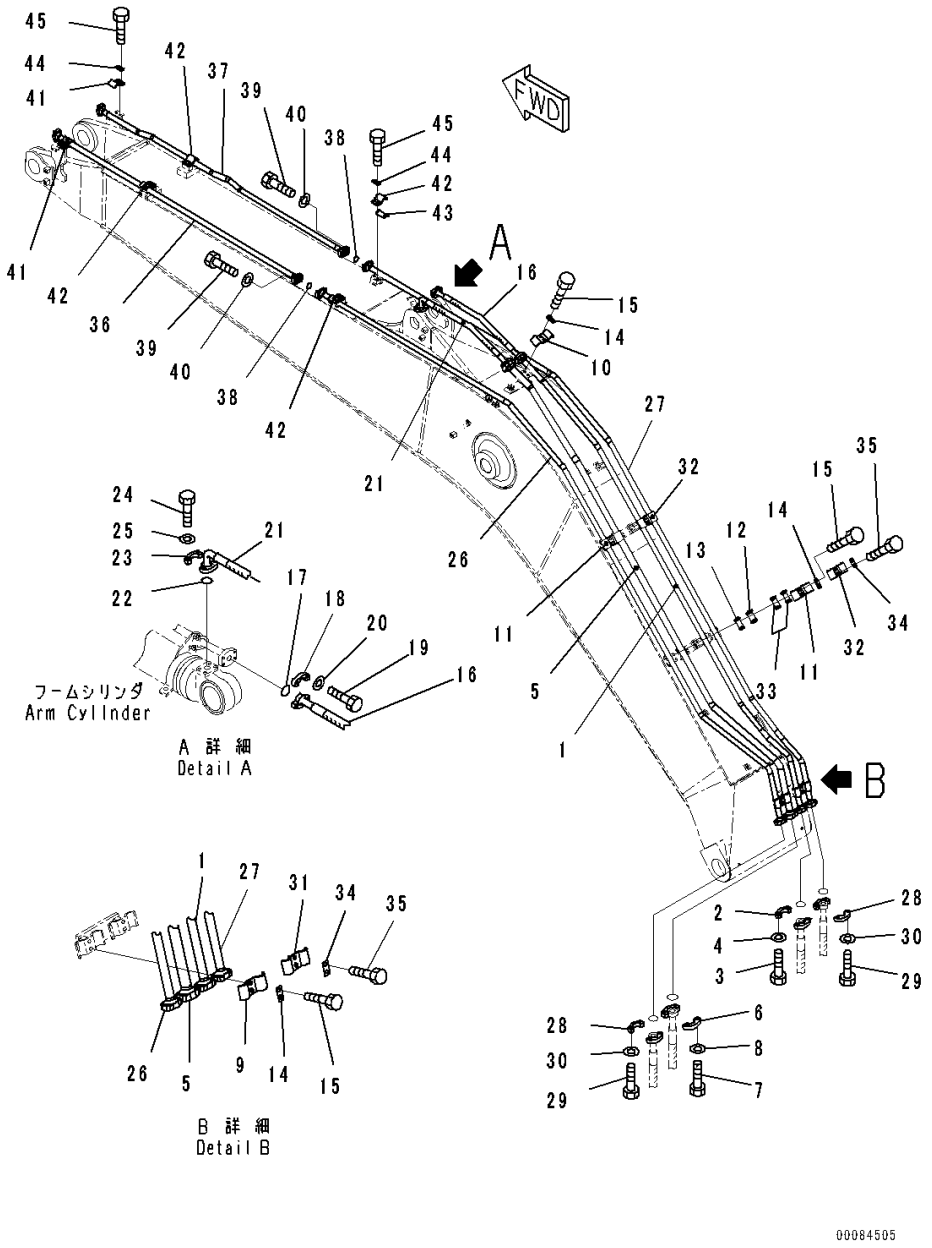


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-52621 | Tube | 1 | Y200001- |
| 2 | | 07371-30640 | Flange, Split | 2 | Y200001- |
| 3 | | 07372-21035 | Bolt | 4 | Y200001- |
| 4 | | 01643-51032 | Washer | 4 | Y200001- |
| 5 | | 20Y-62-52611 | Tube | 1 | Y200001- |
| 6 | | 07371-31049 | Flange, Split | 2 | Y200001- |
| 7 | | 07372-21035 | Bolt | 4 | Y200001- |
| 8 | | 01643-51032 | Washer | 4 | Y200001- |
| 9 | | 20Y-62-13690 | Clamp | 1 | Y200001- |
| 10 | | 20Y-62-13720 | Clamp | 1 | Y200001- |
| 11 | | 20Y-62-13730 | Clamp | 2 | Y200001- |
| 12 | | 208-62-73330 | Seat | 2 | Y200001- |
| 13 | | 20Y-62-47880 | Cushion | 2 | Y200001- |
| 14 | | 20Y-62-13450 | Plate | 4 | Y200001- |
| 15 | | 01010-81230 | Bolt | 8 | Y200001- |
| 16 | | 07074-006A7 | Hose | 1 | Y200001- |
| 17 | | 07000-53025 | O-ring | 2 | Y200001- |
| 18 | | 07371-30640 | Flange, Split | 4 | Y200001- |
| 19 | | 07372-21035 | Bolt | 8 | Y200001- |
| 20 | | 01643-51032 | Washer | 8 | Y200001- |
| 21 | | 20Y-62-53750 | Hose | 1 | Y200001- |
| 22 | | 07000-53032 | O-ring | 2 | Y200001- |
| 23 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 24 | | 07372-21035 | Bolt | 8 | Y200001- |
| 25 | | 01643-51032 | Washer | 8 | Y200001- |
| 26 | | 20Y-62-52631 | Tube | 1 | Y200001- |
| 27 | | 20Y-62-52641 | Tube | 1 | Y200001- |
| 28 | | 07371-30640 | Flange, Split | 4 | Y200001- |
| 29 | | 07372-21035 | Bolt | 8 | Y200001- |
| 30 | | 01643-51032 | Washer | 8 | Y200001- |
| 31 | | 20Y-62-13710 | Clamp | 1 | Y200001- |
| 32 | | 20Y-62-13190 | Clamp | 2 | Y200001- |
| 33 | | 20Y-62-47880 | Cushion | 4 | Y200001- |
| 34 | | 20Y-62-13450 | Plate | 3 | Y200001- |
| 35 | | 01010-81230 | Bolt | 6 | Y200001- |
| 36 | | 20Y-62-52651 | Tube | 1 | Y200001- |
| 37 | | 20Y-62-52661 | Tube | 1 | Y200001- |
| 38 | | 07000-53030 | O-ring | 2 | Y200001- |
| 39 | | 07372-21035 | Bolt | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-013003 Boom, 5.7m, Heavy Duty, 100 Hours Greasing Type, With Webasto Heater, Arm and Bucket Cylinder Piping

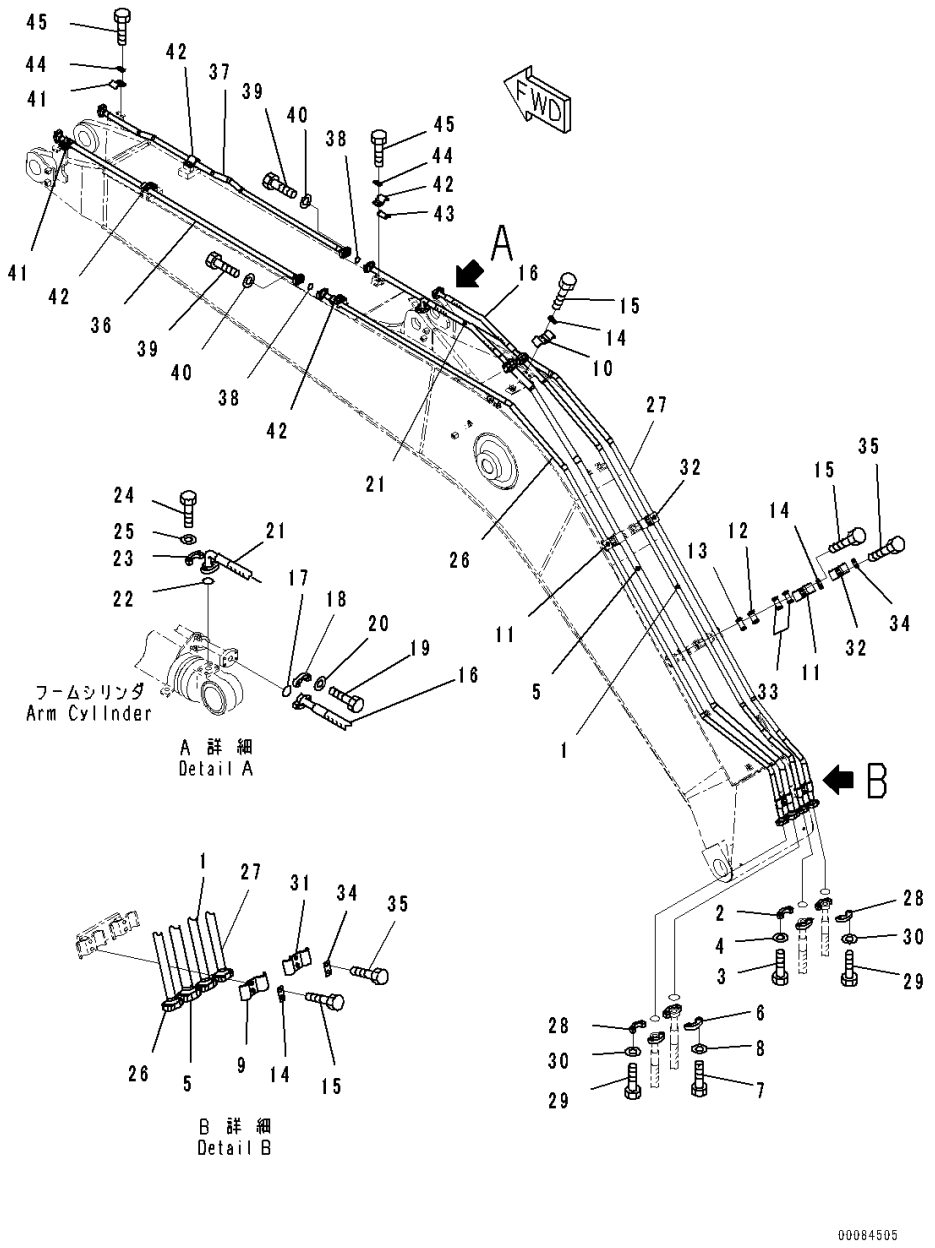


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 01643-51032 | Washer | 8 | Y200001- |
| 41 | | 20Y-62-13650 | Clamp | 2 | Y200001- |
| 42 | | 20Y-62-13180 | Clamp | 4 | Y200001- |
| 43 | | 20Y-62-47880 | Cushion | 4 | Y200001- |
| 44 | | 20Y-62-13450 | Plate | 6 | Y200001- |
| 45 | | 01010-81230 | Bolt | 12 | Y200001- |

https://truckmanualshub.com/


# FIG. T1110-013006 Boom, 5.7m, Heavy Duty, 100 Hours Greasing Type, With Webasto Heater, Working Lamp

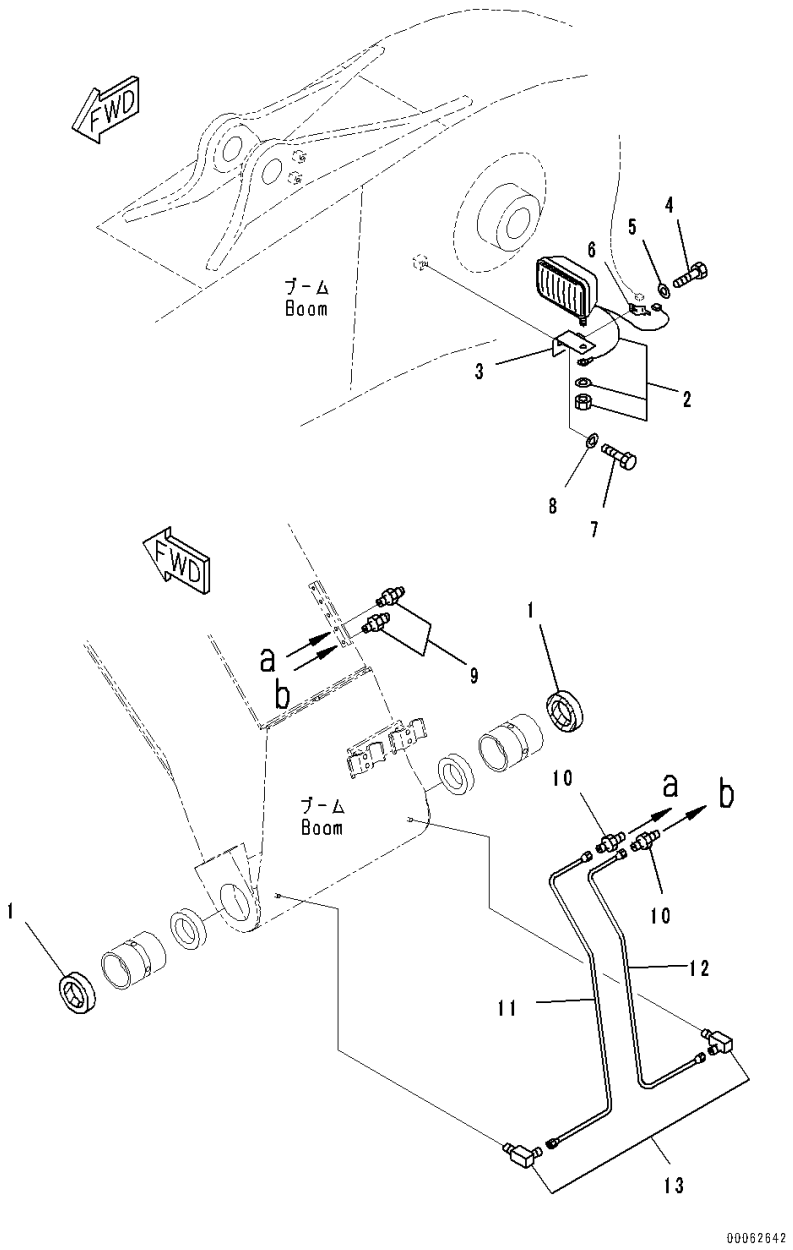


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07145-10090 | Seal, Dust | 2 | Y200001- |
| 2 | | 21T-06-32810 | Working Lamp Assembly, 24volt, 70watt | 1 | Y200001- |
| | | 421-06-23330 | • Bulb, 70watt | 1 | Y200001- |
| 3 | | 20Y-06-21551 | Bracket | 1 | Y200001- |
| 4 | | 01010-81220 | Bolt | 1 | Y200001- |
| 5 | | 01643-31232 | Washer | 1 | Y200001- |
| 6 | | 08193-21012 | Clip | 1 | Y200001- |
| 7 | | 01010-81230 | Bolt | 1 | Y200001- |
| 8 | | 01643-31232 | Washer | 1 | Y200001- |
| 9 | | 07020-00000 | Fitting, Grease | 2 | Y200001- |
| 10 | | 20Y-70-11540 | Connector | 2 | Y200001- |
| 11 | | 20Y-70-31310 | Tube | 1 | Y200001- |
| 12 | | 20Y-70-31320 | Tube | 1 | Y200001- |
| 13 | | 20Y-25-11270 | Elbow | 2 | Y200001- |


https://truckmanualshub.com/

# FIG. T1120-001003 Boom Cylinder, Fitting

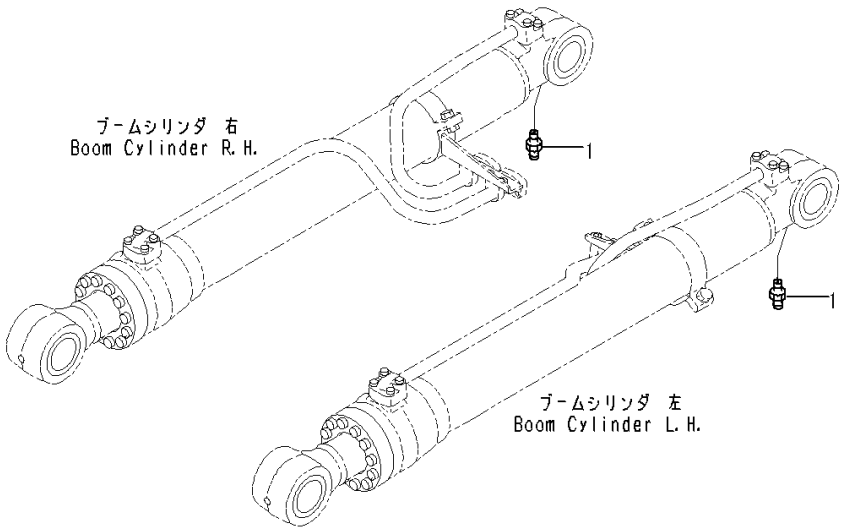


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07020-00000 | Fitting, Grease . ..... | 2 | Y200001- |


# FIG. T1120-002001 Boom Cylinder, 100 Hours Greasing Type, Inner Parts, Boom Swing Cylinder

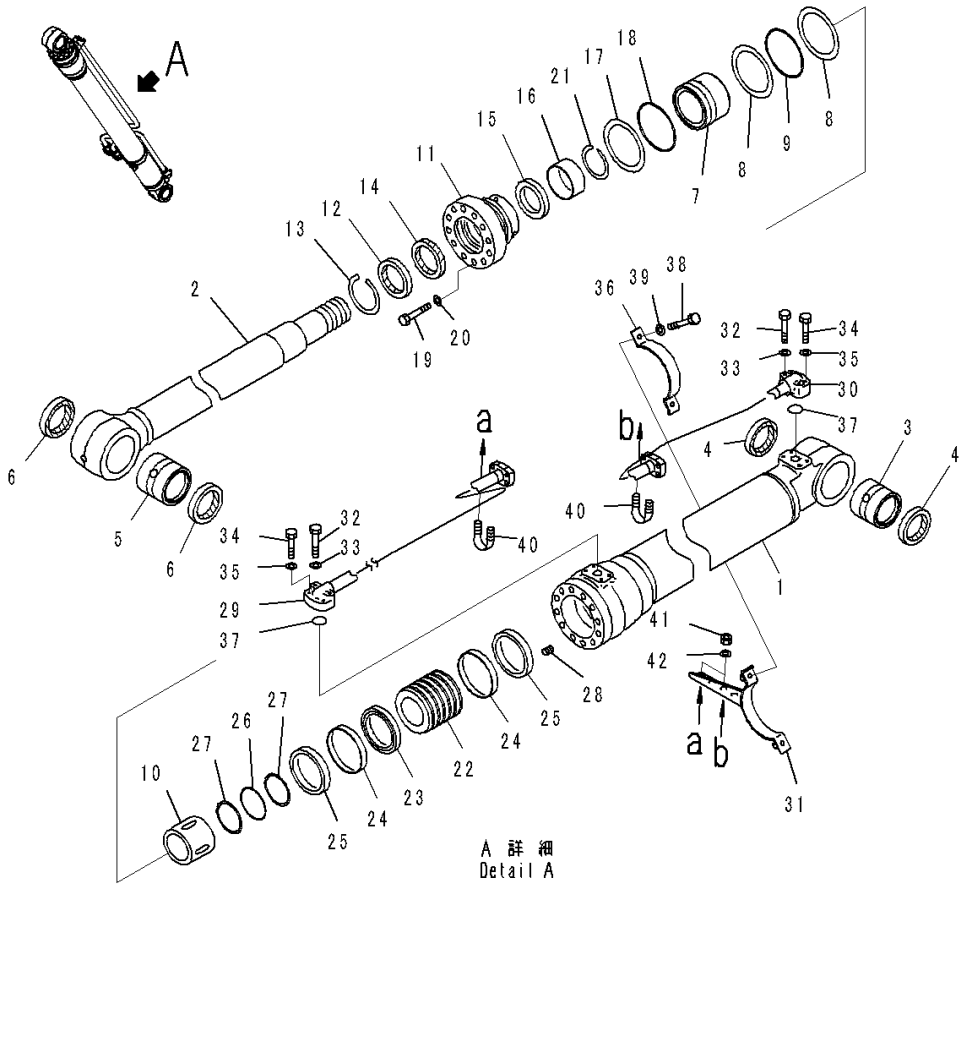


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 707-01-0J180 | Cylinder Assembly | 1 | Y200001- |
| 1 | | 707-13-12380 | Cylinder | 1 | Y200001- |
| 2 | | 707-58-85430 | Rod, Piston | 1 | Y200001- |
| 3 | | 205-70-71360 | Bushing | 1 | Y200001- |
| 4 | | 07145-00070 | Seal, Dust, (Kit : K06) | 2 | Y200001- |
| 5 | | 707-76-80010 | Bushing | 1 | Y200001- |
| 6 | | 07145-00080 | Seal, Dust, (Kit : K06) | 2 | Y200001- |
| 7 | | 707-71-34660 | Collar | 1 | Y200001- |
| 8 | | 707-35-91220 | Ring, Back-up, (Kit : K06) | 2 | Y200001- |
| 9 | | 07000-15110 | O-ring, (Kit : K06) | 1 | Y200001- |
| 10 | | 707-71-70800 | Plunger | 1 | Y200001- |
| 11 | | 707-27-12650 | Head, Cylinder | 1 | Y200001- |
| 12 | | 707-56-85510 | Seal, Dust, (Kit : K06) | 1 | Y200001- |
| 13 | | 07179-13099 | Ring, Snap | 1 | Y200001- |
| 14 | | 707-51-85030 | Packing, Rod, (Kit : K06) | 1 | Y200001- |
| 15 | | 707-51-85650 | Ring, Buffer, (Kit : K06) | 1 | Y200001- |
| 16 | | 707-52-90611 | Bushing | 1 | Y200001- |
| 17 | | 707-35-91220 | Ring, Back-up, (Kit : K06) | 1 | Y200001- |
| 18 | | 07000-15110 | O-ring, (Kit : K06) | 1 | Y200001- |
| 19 | | 01010-81670 | Bolt | 12 | Y200001- |
| 20 | | 01643-51645 | Washer | 12 | Y200001- |
| 21 | | 707-75-85110 | Ring, Snap | 1 | Y200001- |
| 22 | | 707-36-12851 | Piston | 1 | Y200001- |
| 23 | | 707-44-12150 | Ring, Piston, (Kit : K06) | 1 | Y200001- |
| 24 | | 707-39-12140 | Ring, Wear, (Kit : K06) | 2 | Y200001- |
| 25 | | 707-44-12911 | Ring | 2 | Y200001- |
| 26 | | 07000-15075 | O-ring, (Kit : K06) | 1 | Y200001- |
| 27 | | 707-35-90930 | Ring, Back-up, (Kit : K06) | 2 | Y200001- |
| 28 | | 01310-01216 | Screw | 1 | Y200001- |
| 29 | | 707-86-67720 | Tube,LHS | 1 | Y200001- |
| 30 | | 20Y-62-24580 | Tube,LHS | 1 | Y200001- |
| 31 | | 707-88-28010 | Bracket,LHS | 1 | Y200001- |
| 32 | | 07372-21060 | Bolt | 4 | Y200001- |
| 33 | | 01643-51032 | Washer | 4 | Y200001- |
| 34 | | 07372-21045 | Bolt | 4 | Y200001- |
| 35 | | 01643-51032 | Washer | 4 | Y200001- |
| 36 | | 707-88-21620 | Band | 1 | Y200001- |
| 37 | | 07000-13030 | O-ring, (Kit : K06) | 2 | Y200001- |
| 38 | | 07372-21035 | Bolt | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1120-002001 Boom Cylinder, 100 Hours Greasing Type, Inner Parts, Boom Swing Cylinder

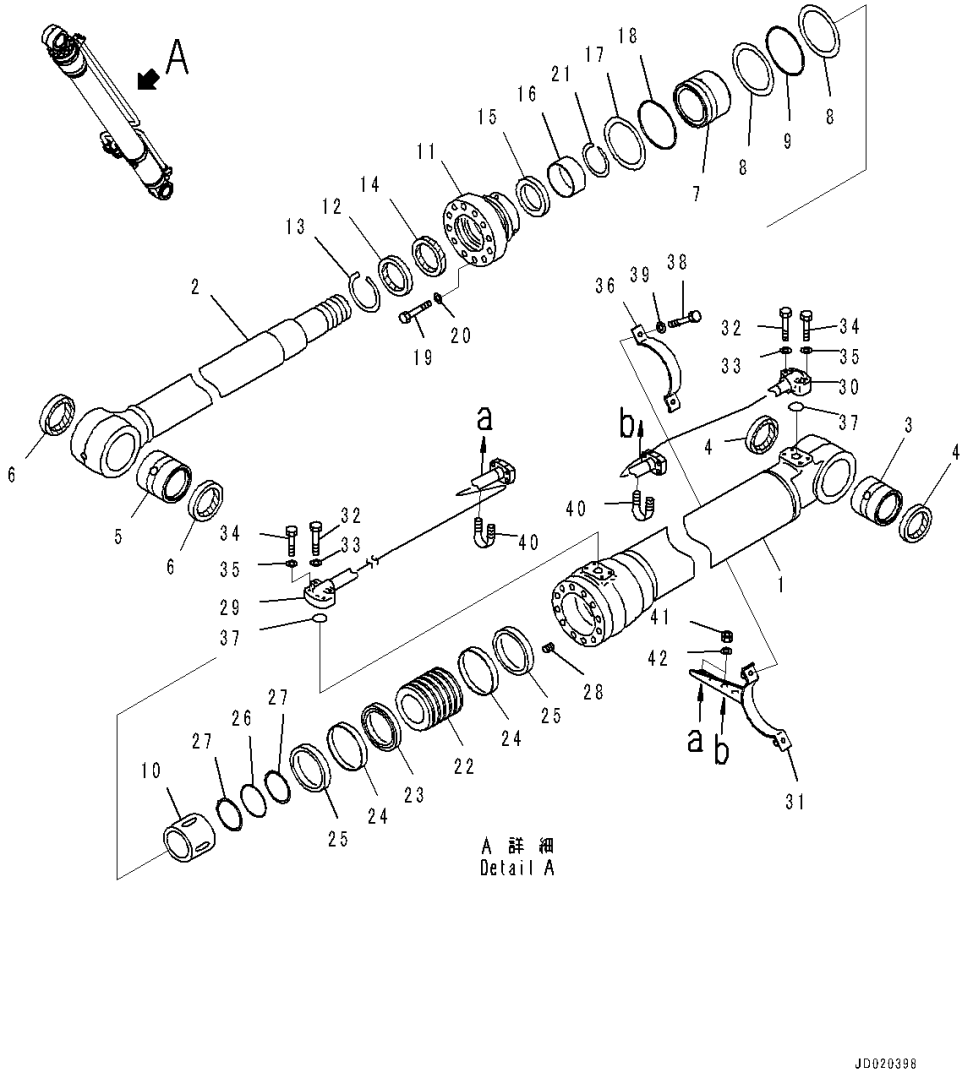


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 01643-51032 | Washer | 2 | Y200001- |
| 40 | | 07283-32738 | Clip, Pipe | 2 | Y200001- |
| 41 | | 01597-01009 | Nut | 4 | Y200001- |
| 42 | | 01643-31032 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1120-002002 Boom Cylinder, 100 Hours Greasing Type, Inner Parts, Boom Cylinder

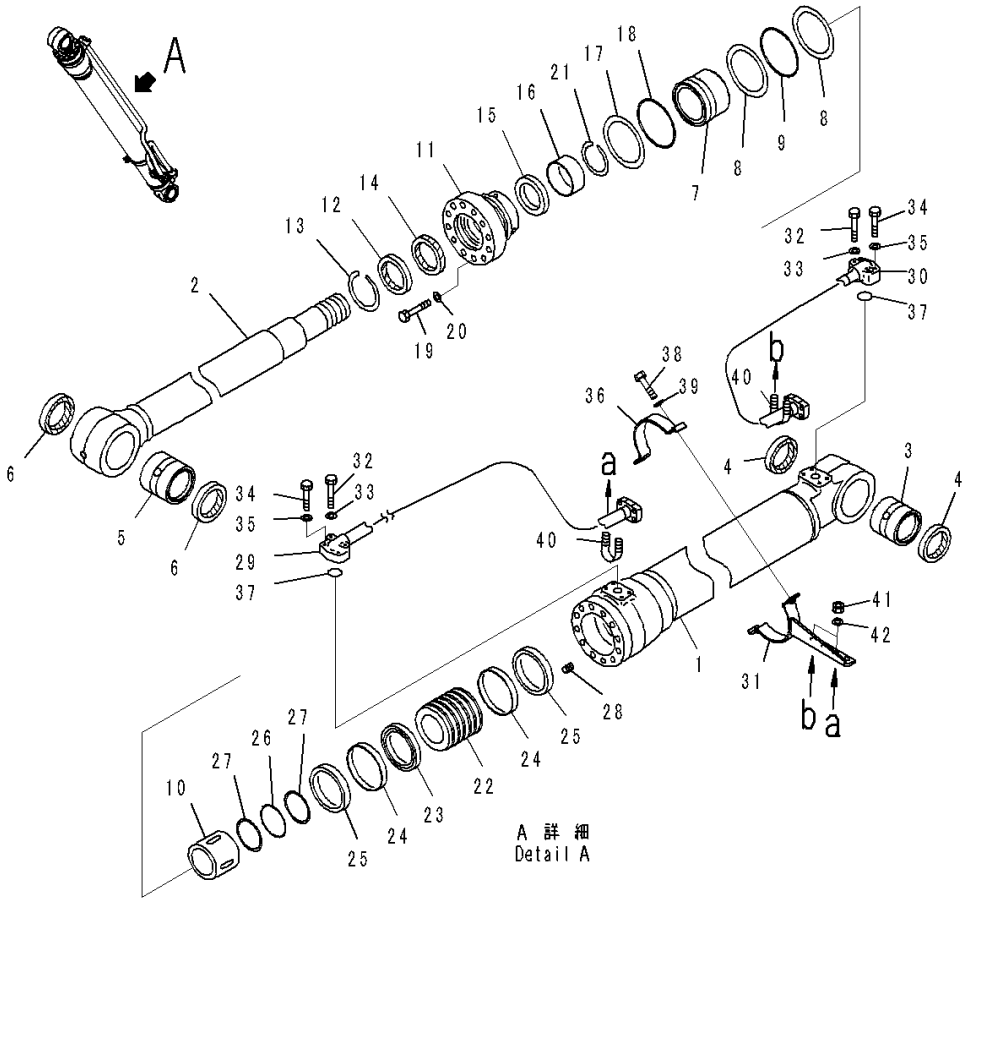


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 707-01-0J180 | Cylinder Assembly | 1 | Y200001- |
| 1 | | 707-13-12380 | Cylinder | 1 | Y200001- |
| 2 | | 707-58-85430 | Rod, Piston | 1 | Y200001- |
| 3 | | 205-70-71360 | Bushing | 1 | Y200001- |
| 4 | | 07145-00070 | Seal, Dust, (Kit : K06) | 2 | Y200001- |
| 5 | | 707-76-80010 | Bushing | 1 | Y200001- |
| 6 | | 07145-00080 | Seal, Dust, (Kit : K06) | 2 | Y200001- |
| 7 | | 707-71-34660 | Collar | 1 | Y200001- |
| 8 | | 707-35-91220 | Ring, Back-up, (Kit : K06) | 2 | Y200001- |
| 9 | | 07000-15110 | O-ring, (Kit : K06) | 1 | Y200001- |
| 10 | | 707-71-70800 | Plunger | 1 | Y200001- |
| 11 | | 707-27-12650 | Head, Cylinder | 1 | Y200001- |
| 12 | | 707-56-85510 | Seal, Dust, (Kit : K06) | 1 | Y200001- |
| 13 | | 07179-13099 | Ring, Snap | 1 | Y200001- |
| 14 | | 707-51-85030 | Packing, Rod, (Kit : K06) | 1 | Y200001- |
| 15 | | 707-51-85650 | Ring, Buffer, (Kit : K06) | 1 | Y200001- |
| 16 | | 707-52-90611 | Bushing | 1 | Y200001- |
| 17 | | 707-35-91220 | Ring, Back-up, (Kit : K06) | 1 | Y200001- |
| 18 | | 07000-15110 | O-ring, (Kit : K06) | 1 | Y200001- |
| 19 | | 01010-81670 | Bolt | 12 | Y200001- |
| 20 | | 01643-51645 | Washer | 12 | Y200001- |
| 21 | | 707-75-85110 | Ring, Snap | 1 | Y200001- |
| 22 | | 707-36-12851 | Piston | 1 | Y200001- |
| 23 | | 707-44-12150 | Ring, Piston, (Kit : K06) | 1 | Y200001- |
| 24 | | 707-39-12140 | Ring, Wear, (Kit : K06) | 2 | Y200001- |
| 25 | | 707-44-12911 | Ring | 2 | Y200001- |
| 26 | | 07000-15075 | O-ring, (Kit : K06) | 1 | Y200001- |
| 27 | | 707-35-90930 | Ring, Back-up, (Kit : K06) | 2 | Y200001- |
| 28 | | 01310-01216 | Screw | 1 | Y200001- |
| 29 | | 707-86-67730 | Tube,RHS | 1 | Y200001- |
| 30 | | 20Y-62-24610 | Tube,RHS | 1 | Y200001- |
| 31 | | 707-88-28020 | Bracket,RHS | 1 | Y200001- |
| 32 | | 07372-21060 | Bolt | 4 | Y200001- |
| 33 | | 01643-51032 | Washer | 4 | Y200001- |
| 34 | | 07372-21045 | Bolt | 4 | Y200001- |
| 35 | | 01643-51032 | Washer | 4 | Y200001- |
| 36 | | 707-88-21620 | Band | 1 | Y200001- |
| 37 | | 07000-13030 | O-ring, (Kit : K06) | 2 | Y200001- |
| 38 | | 07372-21035 | Bolt | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1120-002002 Boom Cylinder, 100 Hours Greasing Type, Inner Parts, Boom Cylinder

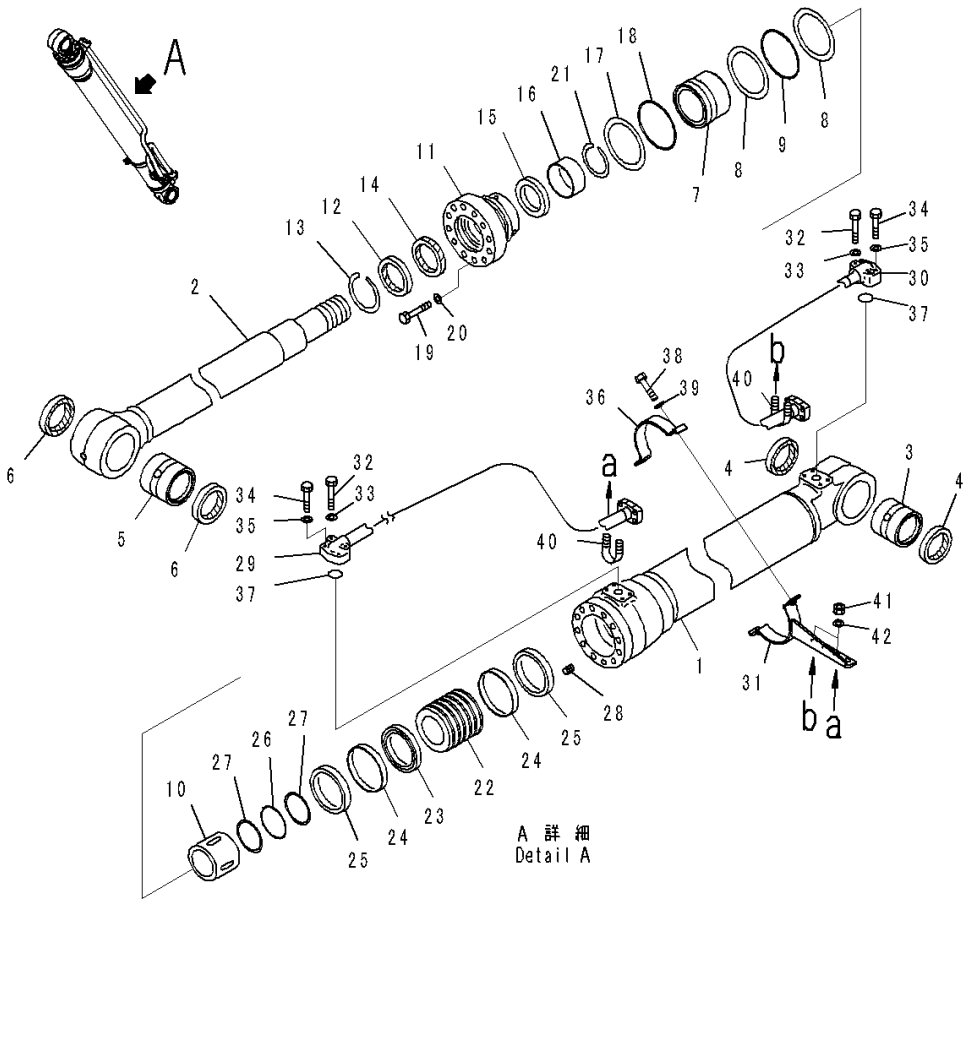


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 01643-51032 | Washer | 2 | Y200001- |
| 40 | | 07283-32738 | Clip, Pipe | 2 | Y200001- |
| 41 | | 01597-01009 | Nut | 4 | Y200001- |
| 42 | | 01643-31032 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1120-006001 Boom Cylinder, With Webasto Heater, Inner Parts, Boom Swing Cylinder

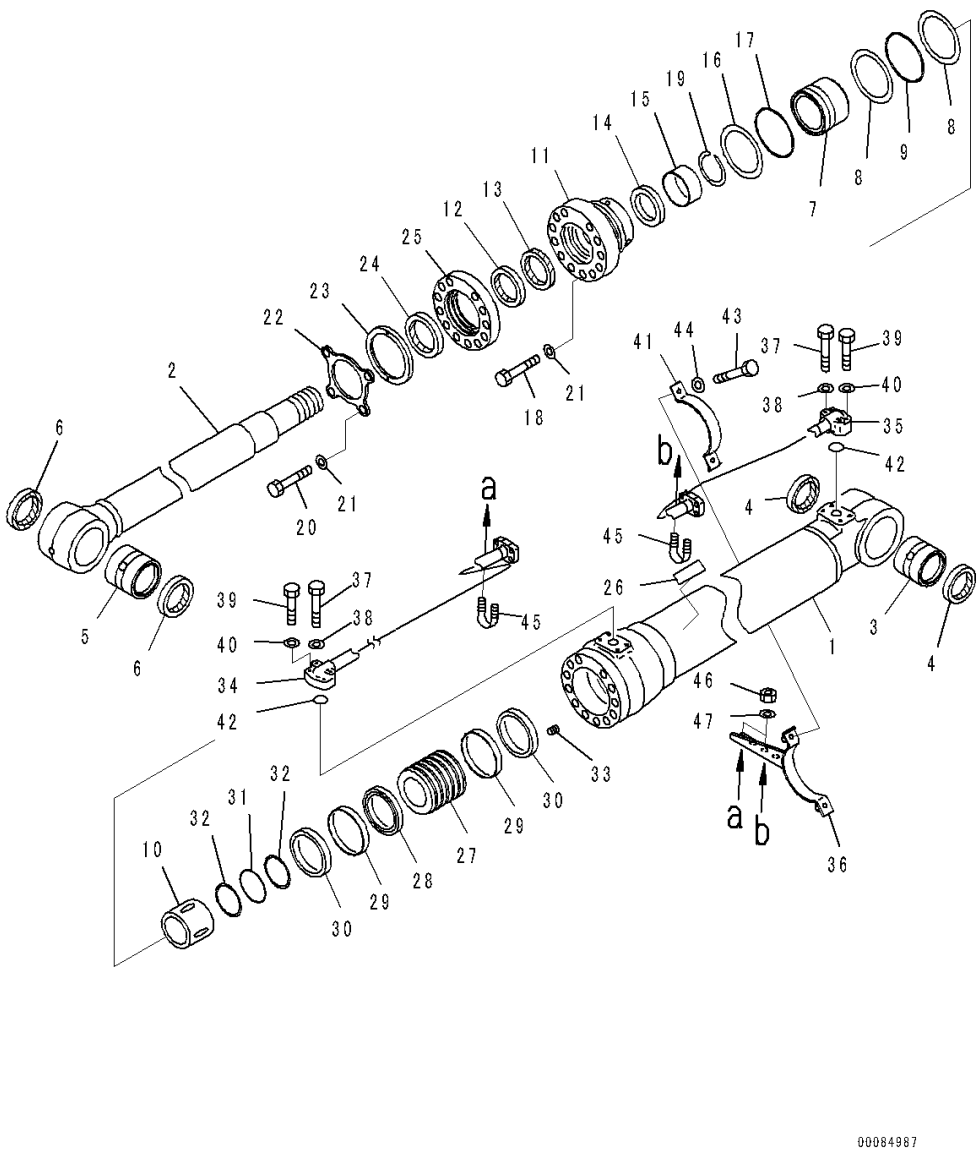


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 707-01-0K680 | Cylinder Assembly | 1 | Y200001- |
| 1 | | 707-13-12630 | Cylinder | 1 | Y200001- |
| 2 | | 707-58-85470 | Rod, Piston | 1 | Y200001- |
| 3 | | 205-70-71360 | Bushing | 1 | Y200001- |
| 4 | | 07145-10070 | Seal, Dust, (Kit : K07) | 2 | Y200001- |
| 5 | | 707-76-80010 | Bushing | 1 | Y200001- |
| 6 | | 07145-10080 | Seal, Dust, (Kit : K07) | 2 | Y200001- |
| 7 | | 707-71-34660 | Collar | 1 | Y200001- |
| 8 | | 707-35-91220 | Ring, Back-up, (Kit : K07) | 2 | Y200001- |
| 9 | | 07000-55110 | O-ring, (Kit : K07) | 1 | Y200001- |
| 10 | | 707-71-70800 | Plunger | 1 | Y200001- |
| 11 | | 707-27-12650 | Head, Cylinder | 1 | Y200001- |
| 12 | | 707-56-85510 | Seal, Dust, (Kit : K07) | 1 | Y200001- |
| 13 | | 707-51-85730 | Packing, Rod, (Kit : K07) | 1 | Y200001- |
| 14 | | 707-51-85650 | Ring, Buffer, (Kit : K07) | 1 | Y200001- |
| 15 | | 707-52-90611 | Bushing | 1 | Y200001- |
| 16 | | 707-35-91220 | Ring, Back-up, (Kit : K07) | 1 | Y200001- |
| 17 | | 07000-55110 | O-ring, (Kit : K07) | 1 | Y200001- |
| 18 | | 01010-81695 | Bolt | 8 | Y200001- |
| 19 | | 707-75-85110 | Ring, Snap | 1 | Y200001- |
| 20 | | 01011-81600 | Bolt | 4 | Y200001- |
| 21 | | 01643-51645 | Washer | 12 | Y200001- |
| 22 | | 707-88-05900 | Plate | 1 | Y200001- |
| 23 | | 707-88-04910 | Ring | 1 | Y200001- |
| 24 | | 707-56-85650 | Seal, Dust, (Kit : K07) | 1 | Y200001- |
| 25 | | 707-88-05890 | Collar | 1 | Y200001- |
| 26 | | 700-11-31980 | Plate, Name (Limited Supply) | 1 | Y200001- |
| 27 | | 707-36-12851 | Piston | 1 | Y200001- |
| 28 | | 707-44-12180 | Ring, Piston, (Kit : K07) | 1 | Y200001- |
| 29 | | 707-39-12140 | Ring, Wear, (Kit : K07) | 2 | Y200001- |
| 30 | | 707-44-12911 | Ring | 2 | Y200001- |
| 31 | | 07000-55075 | O-ring, (Kit : K07) | 1 | Y200001- |
| 32 | | 707-35-90930 | Ring, Back-up, (Kit : K07) | 2 | Y200001- |
| 33 | | 01310-01216 | Screw | 1 | Y200001- |
| 34 | | 707-86-68180 | Tube,LHS | 1 | Y200001- |
| 35 | | 20Y-62-24580 | Tube,LHS | 1 | Y200001- |
| 36 | | 707-88-28010 | Bracket,LHS | 1 | Y200001- |
| 37 | | 07372-21060 | Bolt | 4 | Y200001- |
| 38 | | 01643-51032 | Washer | 4 | Y200001- |


https://truckmanualshub.com/

# FIG. T1120-006001 Boom Cylinder, With Webasto Heater, Inner Parts, Boom Swing Cylinder

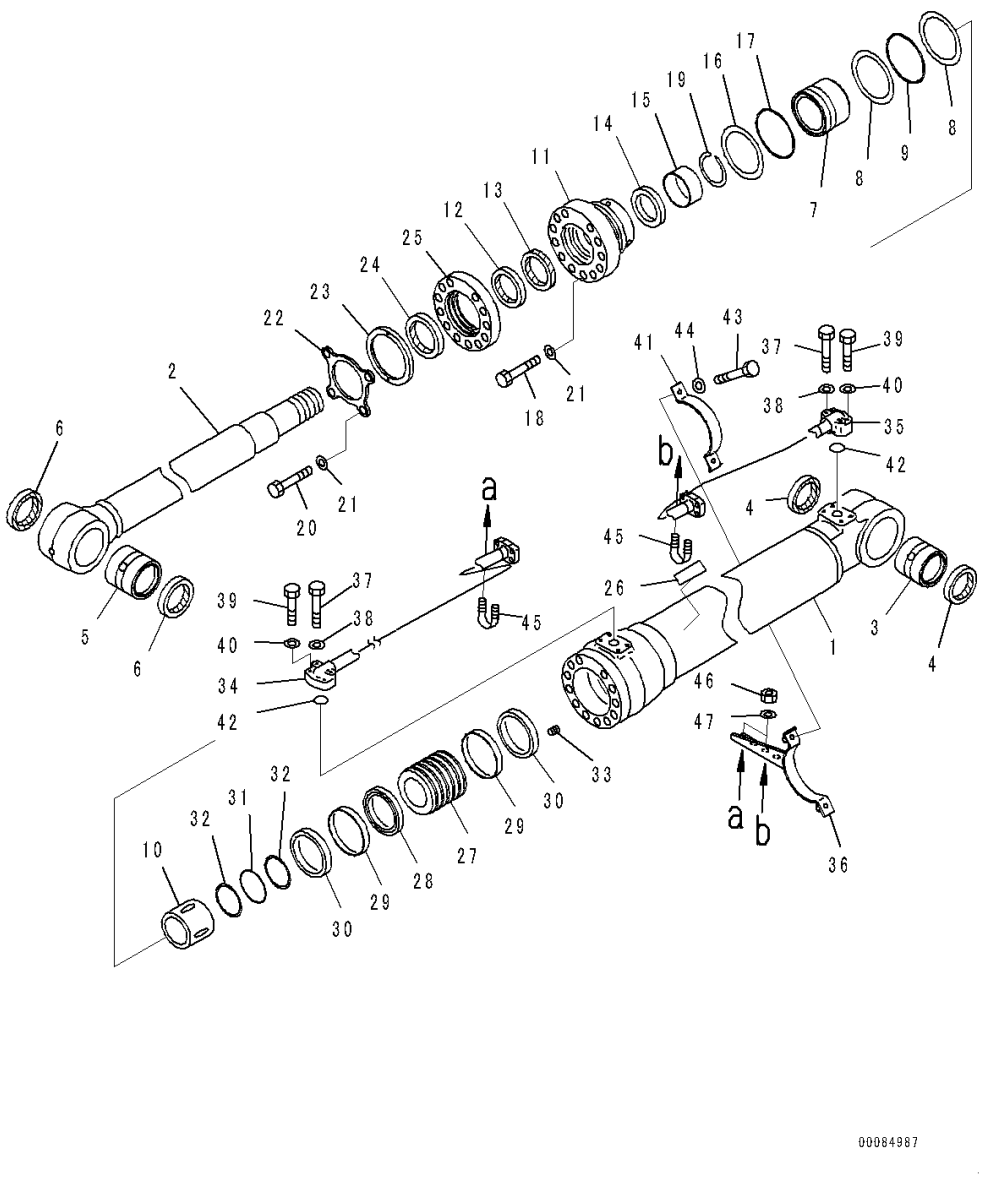


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 07372-21045 | Bolt. | 4 | Y200001- |
| 40 | | 01643-51032 | Washer . | 4 | Y200001- |
| 41 | | 707-88-21620 | Band . | 1 | Y200001- |
| 42 | | 07000-53030 | O-ring, (Kit : K07). | 2 | Y200001- |
| 43 | | 07372-21035 | Bolt. | 2 | Y200001- |
| 44 | | 01643-51032 | Washer . | 2 | Y200001- |
| 45 | | 07283-32738 | Clip, Pipe . | 2 | Y200001- |
| 46 | | 01597-01009 | Nut . | 4 | Y200001- |
| 47 | | 01643-31032 | Washer . | 4 | Y200001- |


# FIG. T1120-006002 Boom Cylinder, With Webasto Heater, Inner Parts, Boom Cylinder

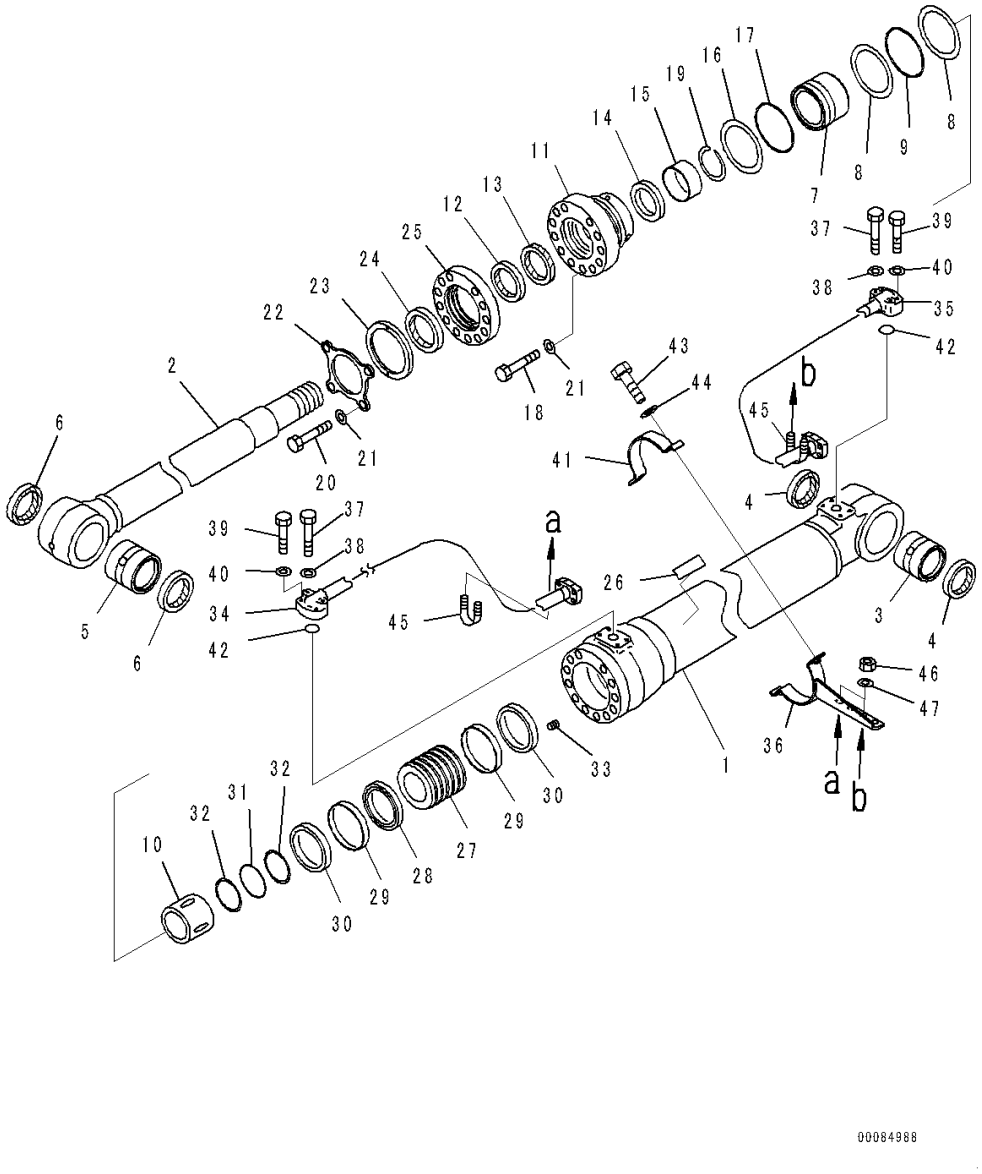


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 707-01-0K680 | Cylinder Assembly | 1 | Y200001- |
| 1 | | 707-13-12630 | Cylinder | 1 | Y200001- |
| 2 | | 707-58-85470 | Rod, Piston | 1 | Y200001- |
| 3 | | 205-70-71360 | Bushing | 1 | Y200001- |
| 4 | | 07145-10070 | Seal, Dust, (Kit : K07) | 2 | Y200001- |
| 5 | | 707-76-80010 | Bushing | 1 | Y200001- |
| 6 | | 07145-10080 | Seal, Dust, (Kit : K07) | 2 | Y200001- |
| 7 | | 707-71-34660 | Collar | 1 | Y200001- |
| 8 | | 707-35-91220 | Ring, Back-up, (Kit : K07) | 2 | Y200001- |
| 9 | | 07000-55110 | O-ring, (Kit : K07) | 1 | Y200001- |
| 10 | | 707-71-70800 | Plunger | 1 | Y200001- |
| 11 | | 707-27-12650 | Head, Cylinder | 1 | Y200001- |
| 12 | | 707-56-85510 | Seal, Dust, (Kit : K07) | 1 | Y200001- |
| 13 | | 707-51-85730 | Packing, Rod, (Kit : K07) | 1 | Y200001- |
| 14 | | 707-51-85650 | Ring, Buffer, (Kit : K07) | 1 | Y200001- |
| 15 | | 707-52-90611 | Bushing | 1 | Y200001- |
| 16 | | 707-35-91220 | Ring, Back-up, (Kit : K07) | 1 | Y200001- |
| 17 | | 07000-55110 | O-ring, (Kit : K07) | 1 | Y200001- |
| 18 | | 01010-81695 | Bolt | 8 | Y200001- |
| 19 | | 707-75-85110 | Ring, Snap | 1 | Y200001- |
| 20 | | 01011-81600 | Bolt | 4 | Y200001- |
| 21 | | 01643-51645 | Washer | 12 | Y200001- |
| 22 | | 707-88-05900 | Plate | 1 | Y200001- |
| 23 | | 707-88-04910 | Ring | 1 | Y200001- |
| 24 | | 707-56-85650 | Seal, Dust, (Kit : K07) | 1 | Y200001- |
| 25 | | 707-88-05890 | Collar | 1 | Y200001- |
| 26 | | 700-11-31980 | Plate, Name (Limited Supply) | 1 | Y200001- |
| 27 | | 707-36-12851 | Piston | 1 | Y200001- |
| 28 | | 707-44-12180 | Ring, Piston, (Kit : K07) | 1 | Y200001- |
| 29 | | 707-39-12140 | Ring, Wear, (Kit : K07) | 2 | Y200001- |
| 30 | | 707-44-12911 | Ring | 2 | Y200001- |
| 31 | | 07000-55075 | O-ring, (Kit : K07) | 1 | Y200001- |
| 32 | | 707-35-90930 | Ring, Back-up, (Kit : K07) | 2 | Y200001- |
| 33 | | 01310-01216 | Screw | 1 | Y200001- |
| 34 | | 707-86-68190 | Tube,RHS | 1 | Y200001- |
| 35 | | 20Y-62-24610 | Tube,RHS | 1 | Y200001- |
| 36 | | 707-88-28020 | Bracket,RHS | 1 | Y200001- |
| 37 | | 07372-21060 | Bolt | 4 | Y200001- |
| 38 | | 01643-51032 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1120-006002 Boom Cylinder, With Webasto Heater, Inner Parts, Boom Cylinder

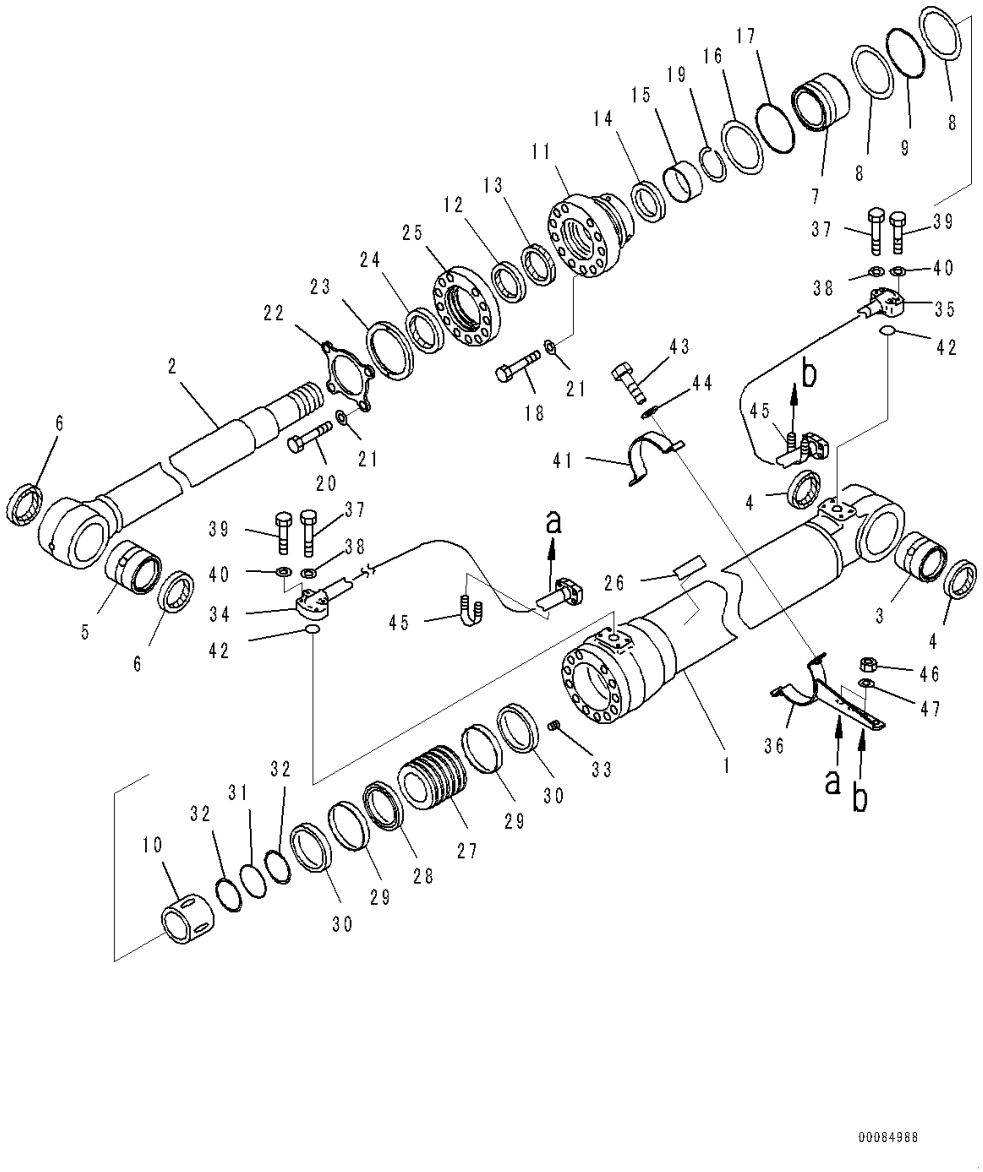


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 07372-21045 | Bolt | 4 | Y200001- |
| 40 | | 01643-51032 | Washer | 4 | Y200001- |
| 41 | | 707-88-21620 | Band | 1 | Y200001- |
| 42 | | 07000-53030 | O-ring, (Kit : K07) | 2 | Y200001- |
| 43 | | 07372-21035 | Bolt | 2 | Y200001- |
| 44 | | 01643-51032 | Washer | 2 | Y200001- |
| 45 | | 07283-32738 | Clip, Pipe | 2 | Y200001- |
| 46 | | 01597-01009 | Nut | 4 | Y200001- |
| 47 | | 01643-31032 | Washer | 4 | Y200001- |


https://truckmanualshub.com/

# FIG. T1125-002001 Boom Cylinder Head Pin, 100 Hours Greasing Type

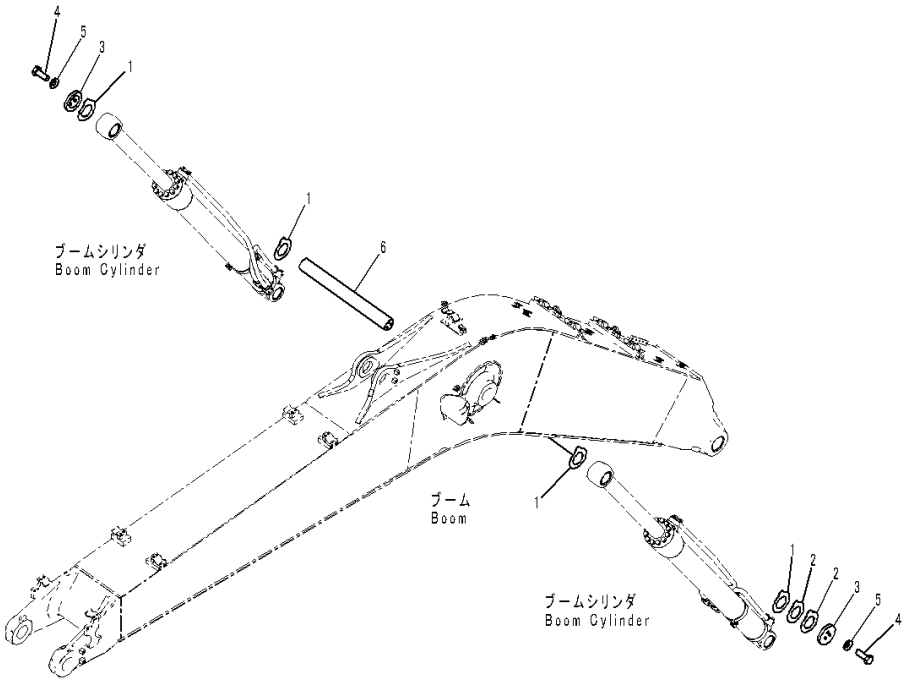


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-70-11370 | Spacer, T=1.5mm | 5 | Y200001- |
| 2 | | 20Y-70-11390 | Spacer, T=0.8mm | 1 | Y200001- |
| 3 | | 20Y-70-41221 | Plate | 2 | Y200001- |
| 4 | | 01010-81640 | Bolt | 6 | Y200001- |
| 5 | | 01643-31645 | Washer | 6 | Y200001- |
| 6 | | 20Y-70-41211 | Pin | 1 | Y200001- |


# FIG. T1140-002001 Arm Cylinder, 100 Hours Greasing Type

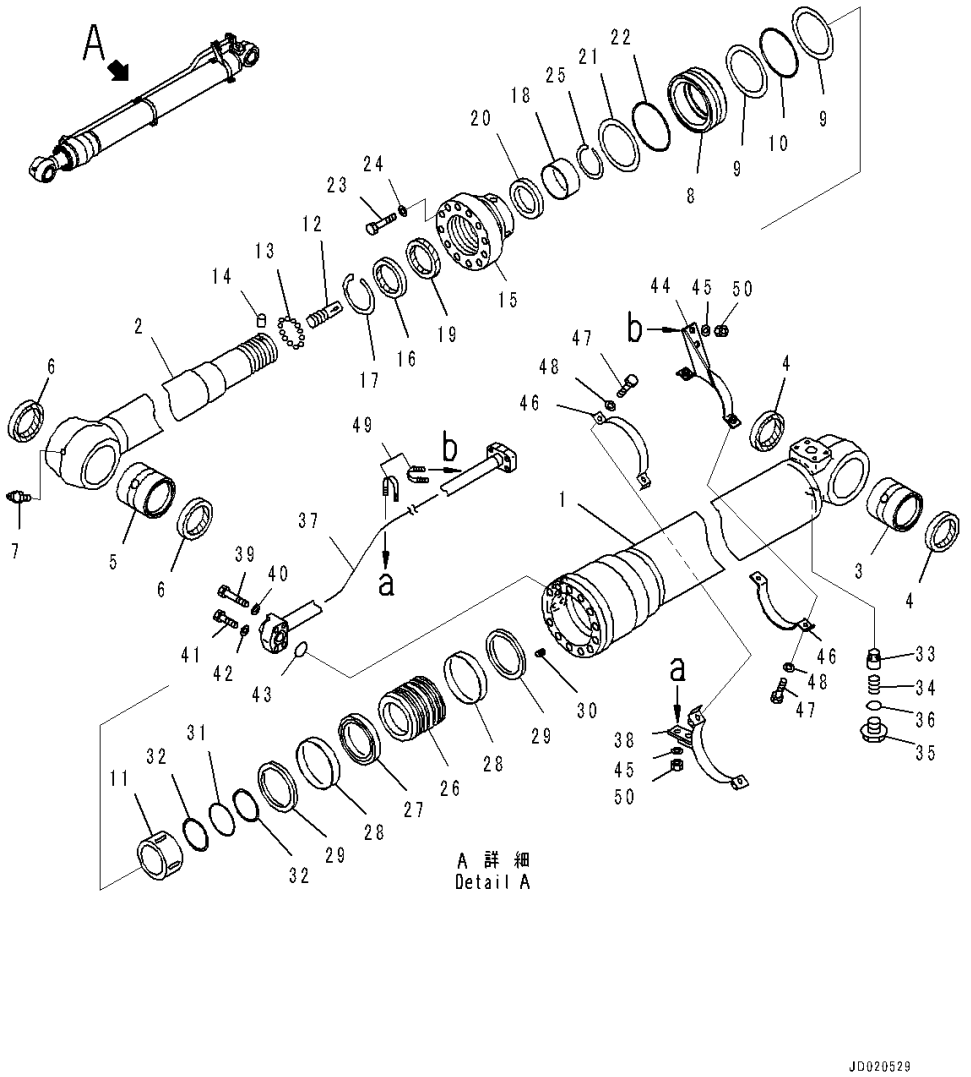


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 707-01-0J250 | Cylinder Assembly | 1 | Y200001- |
| 1 | | 707-13-13870 | Cylinder | 1 | Y200001- |
| 2 | | 707-58-95270 | Rod, Piston | 1 | Y200001- |
| 3 | | 707-76-80010 | Bushing | 1 | Y200001- |
| 4 | | 07145-00080 | Seal, Dust, (Kit : K08) | 2 | Y200001- |
| 5 | | 707-76-80010 | Bushing | 1 | Y200001- |
| 6 | | 07145-00080 | Seal, Dust, (Kit : K08) | 2 | Y200001- |
| 7 | | 07020-00000 | Fitting, Grease | 1 | Y200001- |
| 8 | | 707-71-34980 | Collar | 1 | Y200001- |
| 9 | | 707-35-91370 | Ring, Back-up, (Kit : K08) | 2 | Y200001- |
| 10 | | 07000-15125 | O-ring, (Kit : K08) | 1 | Y200001- |
| 11 | | 707-71-71010 | Plunger | 1 | Y200001- |
| 12 | | 707-71-80270 | Plunger | 1 | Y200001- |
| 13 | | 04260-00635 | Ball, Steel | 12 | Y200001- |
| 14 | | 707-71-91270 | Cap | 1 | Y200001- |
| 15 | | 707-27-13850 | Cylinder Head | 1 | Y200001- |
| 16 | | 707-56-95510 | Seal, Dust, (Kit : K08) | 1 | Y200001- |
| 17 | | 07179-13109 | Ring, Snap | 1 | Y200001- |
| 18 | | 707-52-90721 | Bushing | 1 | Y200001- |
| 19 | | 707-51-95030 | Packing, Rod, (Kit : K08) | 1 | Y200001- |
| 20 | | 707-51-95650 | Ring, Buffer, (Kit : K08) | 1 | Y200001- |
| 21 | | 707-35-91370 | Ring, Back-up, (Kit : K08) | 1 | Y200001- |
| 22 | | 07000-15125 | O-ring, (Kit : K08) | 1 | Y200001- |
| 23 | | 01010-81875 | Bolt | 12 | Y200001- |
| 24 | | 707-41-11840 | Washer | 12 | Y200001- |
| 25 | | 707-75-95030 | Ring, Snap | 1 | Y200001- |
| 26 | | 707-36-13771 | Piston | 1 | Y200001- |
| 27 | | 707-44-13250 | Ring, Piston, (Kit : K08) | 1 | Y200001- |
| 28 | | 707-39-13530 | Ring, Wear, (Kit : K08) | 2 | Y200001- |
| 29 | | 707-44-13920 | Ring | 2 | Y200001- |
| 30 | | 01310-01216 | Screw | 1 | Y200001- |
| 31 | | 07000-15085 | O-ring, (Kit : K08) | 1 | Y200001- |
| 32 | | 707-35-90960 | Ring, Back-up, (Kit : K08) | 2 | Y200001- |
| 33 | | 707-83-13010 | Valve | 1 | Y200001- |
| 34 | | 07750-01628 | Spring | 1 | Y200001- |
| 35 | | 707-87-14070 | Plug | 1 | Y200001- |
| 36 | | 07002-12034 | O-ring, (Kit : K08) | 1 | Y200001- |
| 37 | | 707-86-67740 | Tube | 1 | Y200001- |
| 38 | | 707-88-22530 | Bracket | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1140-002001 Arm Cylinder, 100 Hours Greasing Type

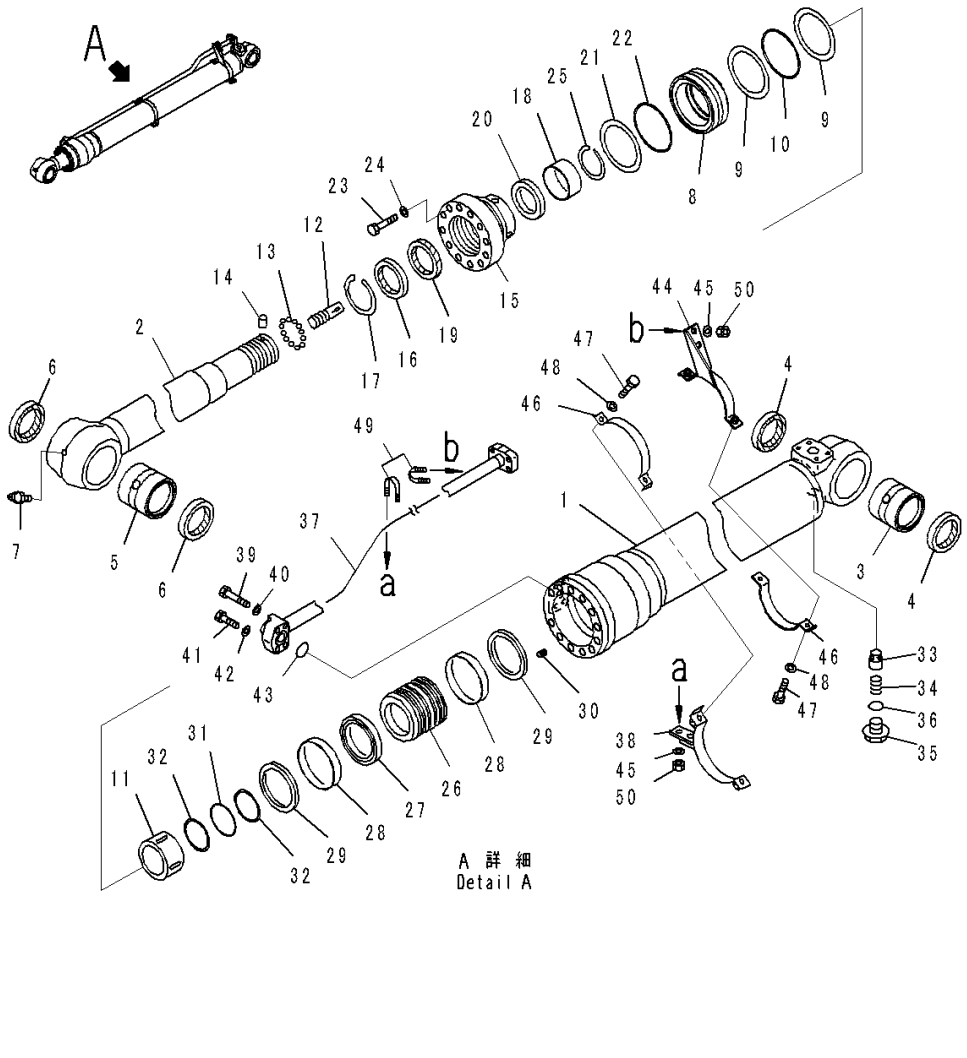


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 07372-21060 | Bolt | 2 | Y200001- |
| 40 | | 01643-51032 | Washer | 2 | Y200001- |
| 41 | | 07372-21045 | Bolt | 2 | Y200001- |
| 42 | | 01643-51032 | Washer | 2 | Y200001- |
| 43 | | 07000-13030 | O-ring, (Kit : K08) | 1 | Y200001- |
| 44 | | 707-88-28030 | Bracket | 1 | Y200001- |
| 45 | | 01643-31032 | Washer | 4 | Y200001- |
| 46 | | 707-88-21261 | Band | 2 | Y200001- |
| 47 | | 07372-21035 | Bolt | 4 | Y200001- |
| 48 | | 01643-51032 | Washer | 4 | Y200001- |
| 49 | | 07283-32738 | Clip, Pipe | 2 | Y200001- |
| 50 | | 01597-01009 | Nut | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1140-007001 Arm Cylinder, With Webasto Heater

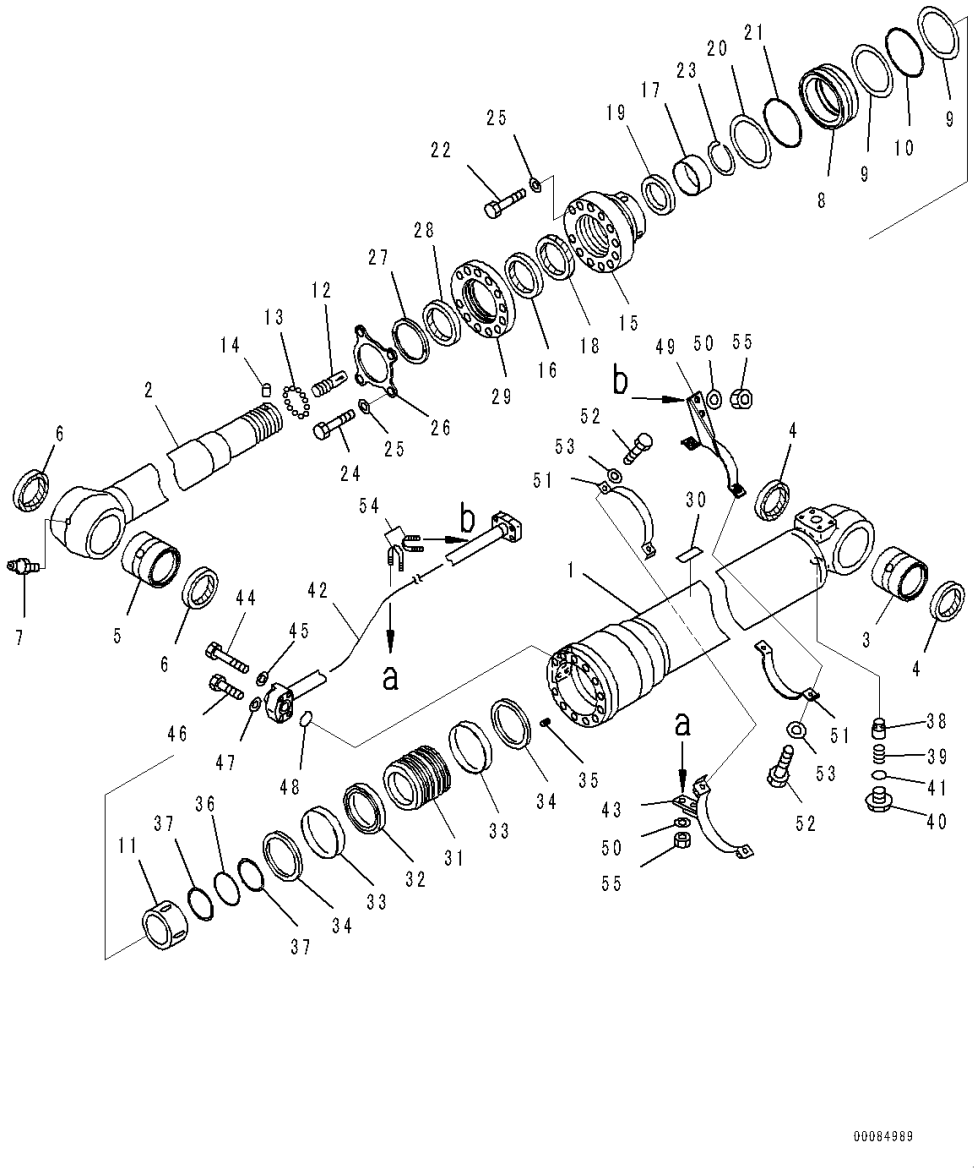


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 707-01-0K700 | Cylinder Assembly | 1 | Y200001- |
| 1 | | 707-13-13870 | Cylinder | 1 | Y200001- |
| 2 | | 707-58-95320 | Rod, Piston | 1 | Y200001- |
| 3 | | 707-76-80010 | Bushing | 1 | Y200001- |
| 4 | | 07145-10080 | Seal, Dust, (Kit : K09) | 2 | Y200001- |
| 5 | | 707-76-80010 | Bushing | 1 | Y200001- |
| 6 | | 07145-10080 | Seal, Dust, (Kit : K09) | 2 | Y200001- |
| 7 | | 07020-00000 | Fitting, Grease | 1 | Y200001- |
| 8 | | 707-71-34980 | Collar | 1 | Y200001- |
| 9 | | 707-35-91370 | Ring, Back-up, (Kit : K09) | 2 | Y200001- |
| 10 | | 07000-55125 | O-ring, (Kit : K09) | 1 | Y200001- |
| 11 | | 707-71-71010 | Plunger | 1 | Y200001- |
| 12 | | 707-71-80270 | Plunger | 1 | Y200001- |
| 13 | | 04260-00635 | Ball, Steel | 12 | Y200001- |
| 14 | | 707-71-91270 | Cap | 1 | Y200001- |
| 15 | | 707-27-13850 | Cylinder Head | 1 | Y200001- |
| 16 | | 707-56-95510 | Seal, Dust, (Kit : K09) | 1 | Y200001- |
| 17 | | 707-52-90721 | Bushing | 1 | Y200001- |
| 18 | | 707-51-95730 | Packing, Rod, (Kit : K09) | 1 | Y200001- |
| 19 | | 707-51-95650 | Ring, Buffer, (Kit : K09) | 1 | Y200001- |
| 20 | | 707-35-91370 | Ring, Back-up, (Kit : K09) | 1 | Y200001- |
| 21 | | 07000-55125 | O-ring, (Kit : K09) | 1 | Y200001- |
| 22 | | 01011-81800 | Bolt | 8 | Y200001- |
| 23 | | 707-75-95030 | Ring, Snap | 1 | Y200001- |
| 24 | | 01011-81805 | Bolt | 4 | Y200001- |
| 25 | | 707-41-11840 | Washer | 12 | Y200001- |
| 26 | | 707-88-05920 | Plate | 1 | Y200001- |
| 27 | | 707-88-04940 | Ring | 1 | Y200001- |
| 28 | | 707-56-95650 | Seal, Dust, (Kit : K09) | 1 | Y200001- |
| 29 | | 707-88-05910 | Collar | 1 | Y200001- |
| 30 | | 700-11-31980 | Plate, Name (Limited Supply) | 1 | Y200001- |
| 31 | | 707-36-13771 | Piston | 1 | Y200001- |
| 32 | | 707-44-13280 | Ring, (Kit : K09) | 1 | Y200001- |
| 33 | | 707-39-13530 | Ring, Wear, (Kit : K09) | 2 | Y200001- |
| 34 | | 707-44-13920 | Ring | 2 | Y200001- |
| 35 | | 01310-01216 | Screw | 1 | Y200001- |
| 36 | | 07000-55085 | O-ring, (Kit : K09) | 1 | Y200001- |
| 37 | | 707-35-90960 | Ring, Back-up, (Kit : K09) | 2 | Y200001- |
| 38 | | 707-83-13010 | Valve | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1140-007001 Arm Cylinder, With Webasto Heater

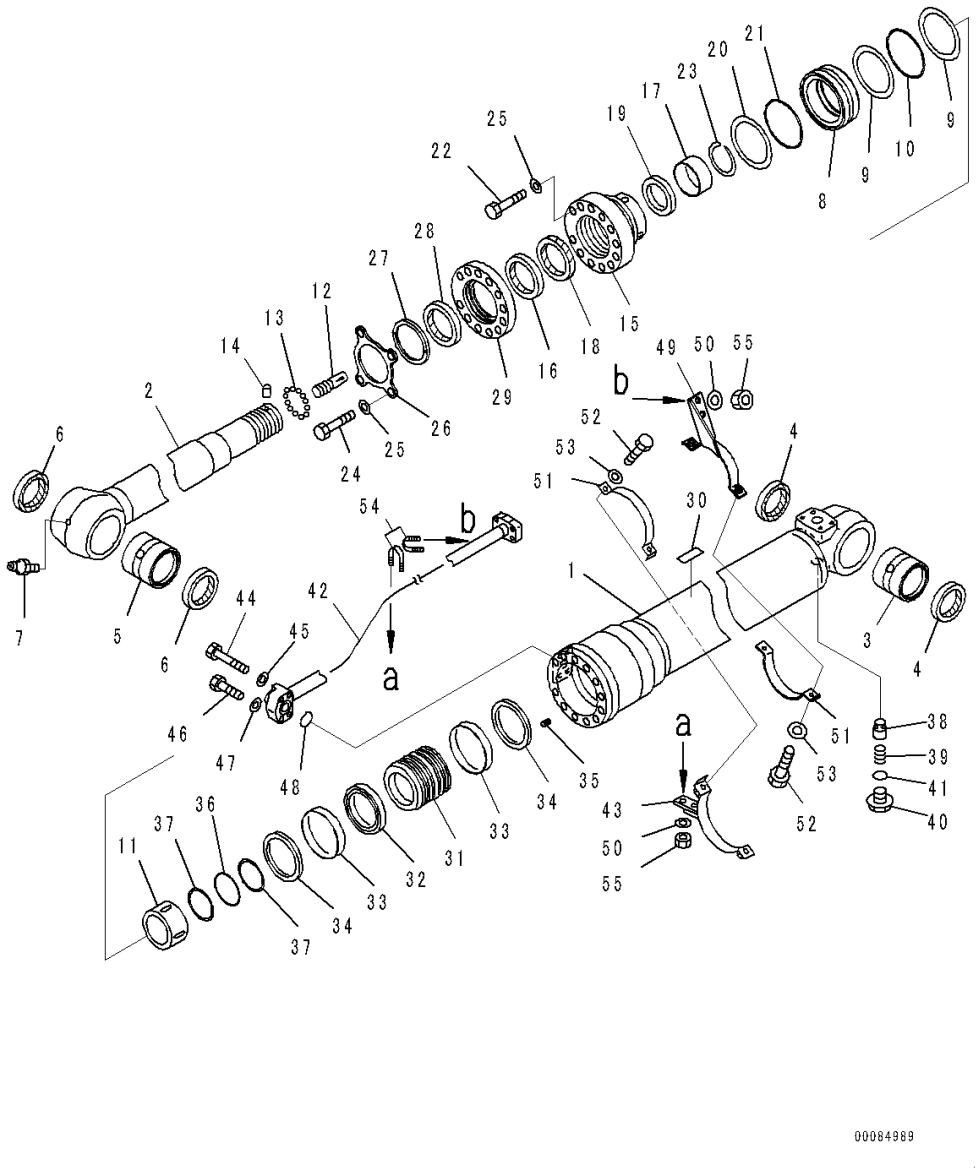


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 07750-01628 | Spring | 1 | Y200001- |
| 40 | | 707-87-14070 | Plug | 1 | Y200001- |
| 41 | | 07002-52034 | O-ring, (Kit : K09) | 1 | Y200001- |
| 42 | | 707-86-67740 | Tube | 1 | Y200001- |
| 43 | | 707-88-22530 | Bracket | 1 | Y200001- |
| 44 | | 07372-21060 | Bolt | 2 | Y200001- |
| 45 | | 01643-51032 | Washer | 2 | Y200001- |
| 46 | | 07372-21045 | Bolt | 2 | Y200001- |
| 47 | | 01643-51032 | Washer | 2 | Y200001- |
| 48 | | 07000-53030 | O-ring, (Kit : K09) | 1 | Y200001- |
| 49 | | 707-88-28030 | Bracket | 1 | Y200001- |
| 50 | | 01643-31032 | Washer | 4 | Y200001- |
| 51 | | 707-88-21261 | Band | 2 | Y200001- |
| 52 | | 07372-21035 | Bolt | 4 | Y200001- |
| 53 | | 01643-51032 | Washer | 4 | Y200001- |
| 54 | | 07283-32738 | Clip, Pipe | 2 | Y200001- |
| 55 | | 01597-01009 | Nut | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1190-002001 Parts For Less Arm

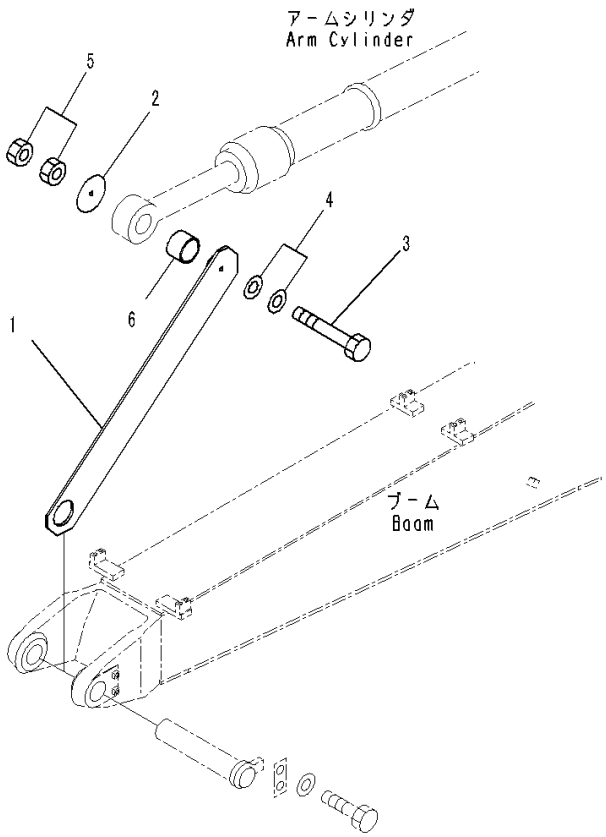


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-70-13160 | Link | 1 | Y200001- |
| 2 | | 207-70-53170 | Plate | 1 | Y200001- |
| 3 | | 01011-81250 | Bolt | 1 | Y200001- |
| 4 | | 01643-31232 | Washer | 2 | Y200001- |
| 5 | | 01580-11210 | Nut | 2 | Y200001- |
| 6 | | 20Y-70-13150 | Collar | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-003004 Arm, Bucket Cylinder Hose

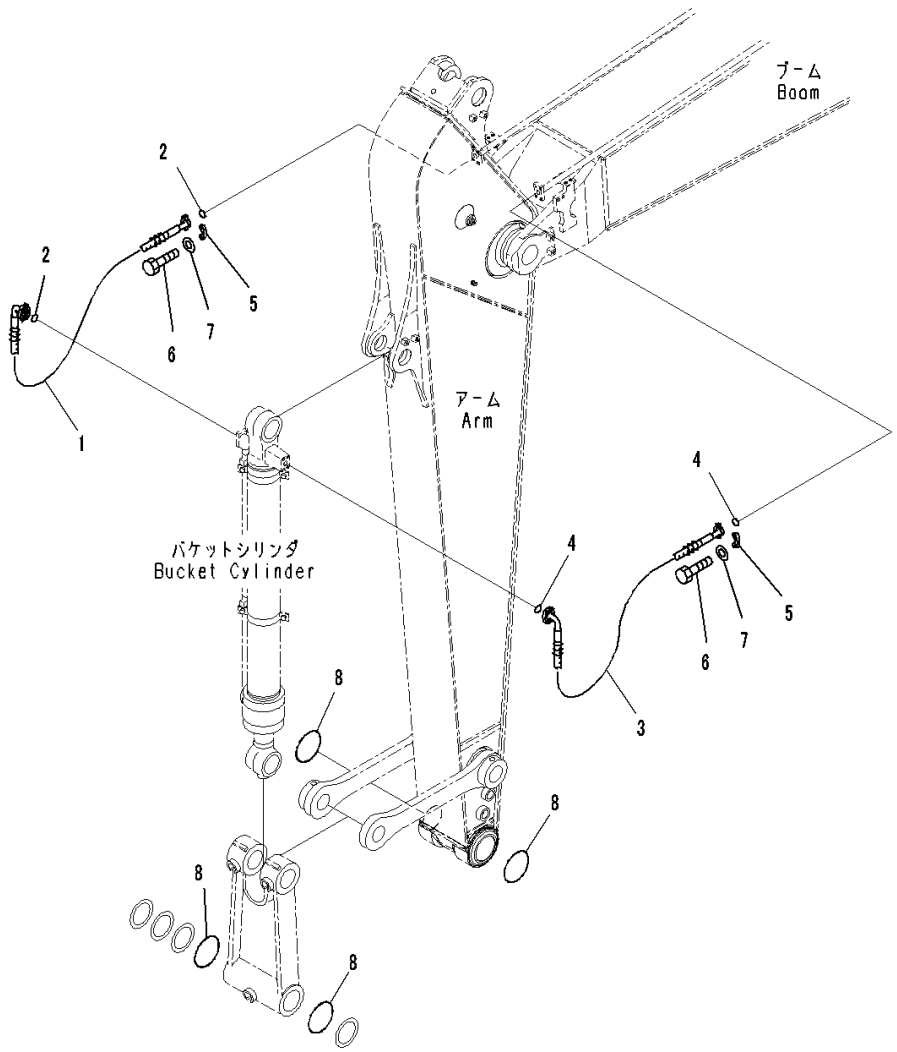


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-13412 | Hose, L=1300mm | 1 | Y200001- |
| 2 | | 07000-13025 | O-ring | 2 | Y200001- |
| 3 | | 20Y-62-51810 | Hose, L=1300mm | 1 | Y200001- |
| 4 | | 07000-13025 | O-ring | 2 | Y200001- |
| 5 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 6 | | 07372-21035 | Bolt | 16 | Y200001- |
| 7 | | 01643-51032 | Washer | 16 | Y200001- |
| 8 | | 205-70-73280 | O-ring | 4 | Y200001- |


https://truckmanualshub.com/

# FIG. T1200-013003 Arm, Bucket Link

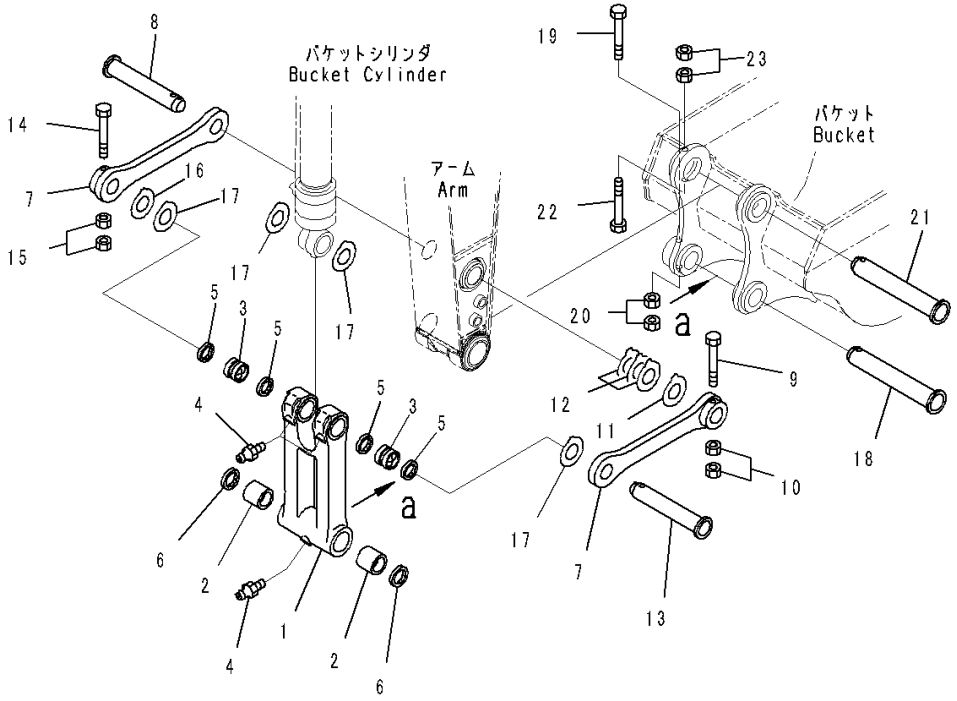


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-70-01240 | Link Assembly | 1 | Y200001- |
| 1 | C1 | | • Link | 1 | Y200001- |
| 2 | | 21K-70-12161 | • Bushing | 2 | Y200001- |
| 3 | | 205-70-73180 | • Bushing | 2 | Y200001- |
| 4 | | 07020-00000 | • Fitting, Grease | 3 | Y200001- |
| 5 | | 20Y-70-23220 | • Seal, Dust | 4 | Y200001- |
| 6 | | 20Y-70-23230 | • Seal, Dust | 2 | Y200001- |
| 7 | | 205-70-73130 | Link | 2 | Y200001- |
| 8 | | 22U-70-21191 | Pin | 1 | Y200001- |
| 9 | | 20Y-70-32450 | Bolt | 1 | Y200001- |
| 10 | | 01580-12016 | Nut | 2 | Y200001- |
| 11 | | 20Y-70-11320 | Spacer, T=0.8mm | 1 | Y200001- |
| 12 | | 20Y-70-11330 | Spacer, T=1.5mm | 3 | Y200001- |
| 13 | | 22U-70-21191 | Pin | 1 | Y200001- |
| 14 | | 20Y-70-32450 | Bolt | 1 | Y200001- |
| 15 | | 01580-12016 | Nut | 2 | Y200001- |
| 16 | | 20Y-70-11320 | Spacer, T=0.8mm | 1 | Y200001- |
| 17 | | 20Y-70-11330 | Spacer, T=1.5mm | 4 | Y200001- |
| 18 | | 205-70-73270 | Pin | 1 | Y200001- |
| 19 | | 20Y-70-32450 | Bolt | 1 | Y200001- |
| 20 | | 01580-12016 | Nut | 2 | Y200001- |
| 21 | | 205-70-73270 | Pin | 1 | Y200001- |
| 22 | | 20Y-70-32460 | Bolt | 1 | Y200001- |
| 23 | | 01580-12016 | Nut | 2 | Y200001- |


# FIG. T1200-013005 Arm, Additional Piping

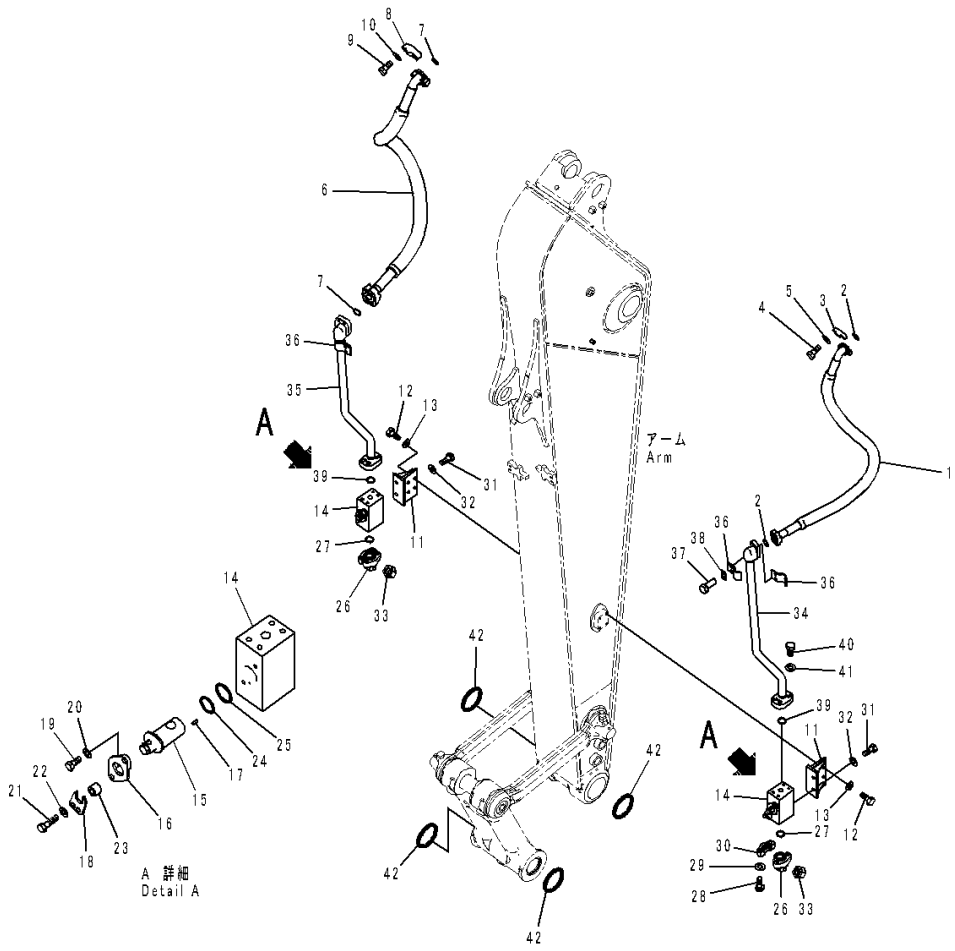


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07097-21015 | Hose, Flange Type | 1 | Y200001- |
| 2 | | 21T-09-11460 | O-ring | 2 | Y200001- |
| 3 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 4 | | 07372-21035 | Bolt | 8 | Y200001- |
| 5 | | 01643-51032 | Washer | 8 | Y200001- |
| 6 | | 07097-21218 | Hose, Flange Type, L=1800mm | 1 | Y200001- |
| 7 | | 07000-13038 | O-ring | 2 | Y200001- |
| 8 | | 07371-51260 | Flange | 4 | Y200001- |
| 9 | | 01010-81245 | Bolt | 8 | Y200001- |
| 10 | | 01643-31232 | Washer | 8 | Y200001- |
| 11 | | 20Y-970-5321 | Bracket | 2 | Y200001- |
| 12 | | 01010-81230 | Bolt | 8 | Y200001- |
| 13 | | 01643-31232 | Washer | 8 | Y200001- |
| | | 20Y-970-5300 | Valve Assembly | 2 | Y200001- |
| 14 | C1 | | • Body | 1 | Y200001- |
| 15 | | 20Y-970-5240 | • Shaft | 1 | Y200001- |
| 16 | | 20Y-970-3270 | • Cover | 1 | Y200001- |
| 17 | | 04025-00412 | • Pin, Spring | 1 | Y200001- |
| 18 | | 20Y-970-4612 | • Plate | 1 | Y200001- |
| 19 | | 01010-81025 | • Bolt | 1 | Y200001- |
| 20 | | 01643-31032 | • Washer | 1 | Y200001- |
| 21 | | 01010-81045 | • Bolt | 1 | Y200001- |
| 22 | | 01643-31032 | • Washer | 1 | Y200001- |
| 23 | | 201-03-29160 | • Spacer | 1 | Y200001- |
| 24 | | 07000-13032 | • O-ring | 1 | Y200001- |
| 25 | | 07000-13038 | • O-ring | 1 | Y200001- |
| 26 | | 207-970-2110 | Elbow | 2 | Y200001- |
| 27 | | 07000-13038 | O-ring | 2 | Y200001- |
| 28 | | 01010-81245 | Bolt | 8 | Y200001- |
| 29 | | 01643-31232 | Washer | 8 | Y200001- |
| 30 | | 07371-51260 | Flange | 4 | Y200001- |
| 31 | | 01010-81230 | Bolt | 4 | Y200001- |
| 32 | | 01643-31232 | Washer | 4 | Y200001- |
| 33 | | 205-970-5770 | Cap | 2 | Y200001- |
| 34 | | 20Y-62-55340 | Tube | 1 | Y200001- |
| 35 | | 20Y-62-55350 | Tube | 1 | Y200001- |
| 36 | | 207-62-31330 | Clamp | 4 | Y200001- |
| 37 | | 01010-81230 | Bolt | 4 | Y200001- |
| 38 | | 20Y-62-13450 | Plate | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-013005 Arm, Additional Piping

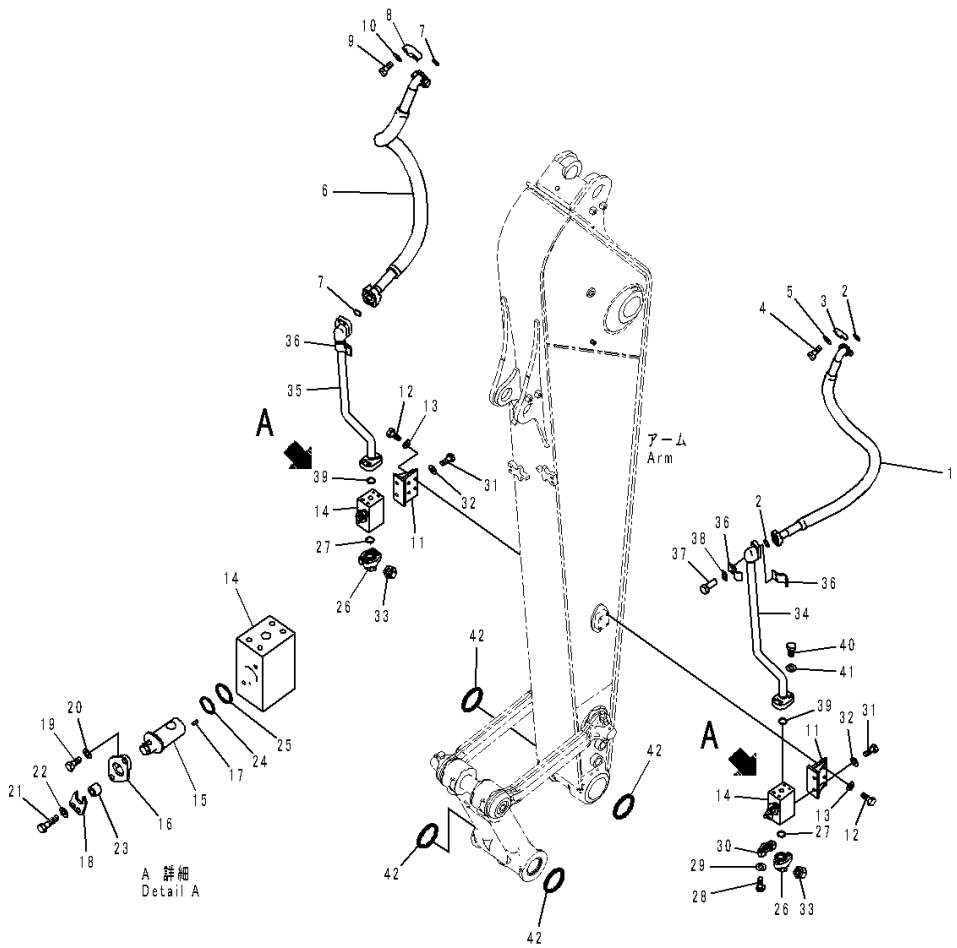


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 07000-13038 | O-ring | 2 | Y200001- |
| 40 | | 01010-81245 | Bolt | 8 | Y200001- |
| 41 | | 01643-31232 | Washer | 8 | Y200001- |
| 42 | | 205-70-73280 | O-ring | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-011001 Arm, 2.9m, 1-actuator, 100 Hours Greasing Type, Arm

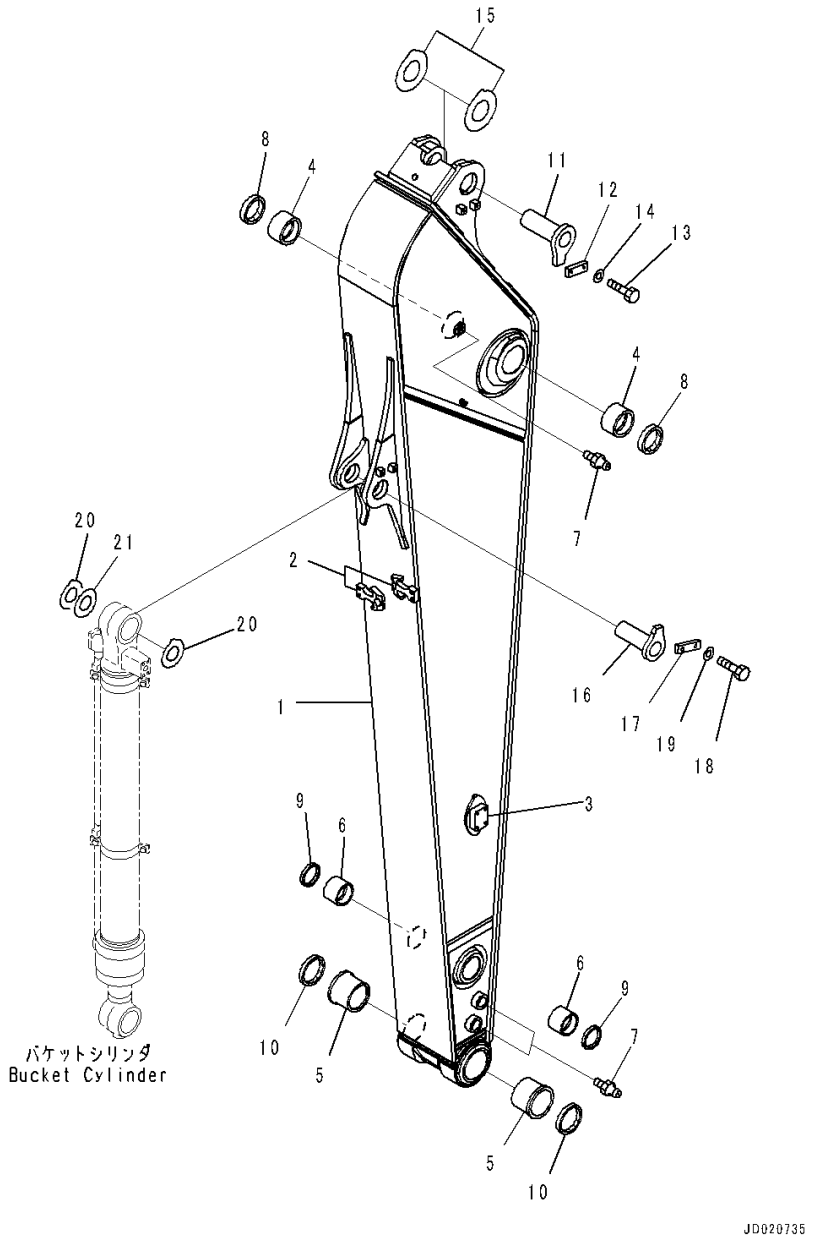


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-70-01260 | Arm Assembly | 1 | Y200001- |
| 1 | C1 | | • Arm | 1 | Y200001- |
| 2 | | 20Y-70-42E51 | •• Plate,Welded | 2 | Y200001- |
| 3 | | 20Y-970-3572 | •• Bracket,Welded | 2 | Y200001- |
| 4 | | 205-70-72180 | • Bushing | 2 | Y200001- |
| 5 | | 20Y-70-32410 | • Bushing | 2 | Y200001- |
| 6 | | 205-70-73180 | • Bushing | 2 | Y200001- |
| 7 | | 07020-00000 | Fitting, Grease | 3 | Y200001- |
| 8 | | 07145-00090 | Seal, Dust | 2 | Y200001- |
| 9 | | 20Y-70-23220 | Seal, Dust | 2 | Y200001- |
| 10 | | 20Y-70-23230 | Seal, Dust | 2 | Y200001- |
| 11 | | 20Y-70-42220 | Pin | 1 | Y200001- |
| 12 | | 205-70-66581 | Plate | 1 | Y200001- |
| 13 | | 01010-81230 | Bolt | 2 | Y200001- |
| 14 | | 01643-31232 | Washer | 2 | Y200001- |
| 15 | | 205-70-51530 | Spacer, T=1.5mm | 1 | Y200001- |
| 16 | | 205-70-71190 | Pin | 1 | Y200001- |
| 17 | | 205-70-66580 | Plate | 1 | Y200001- |
| 18 | | 01010-81230 | Bolt | 2 | Y200001- |
| 19 | | 01643-31232 | Washer | 2 | Y200001- |
| 20 | | 20Y-70-11290 | Spacer, T=0.8mm | 1 | Y200001- |
| 21 | | 20Y-70-11310 | Spacer, T=1.5mm | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-011002 Arm, Bucket Cylinder

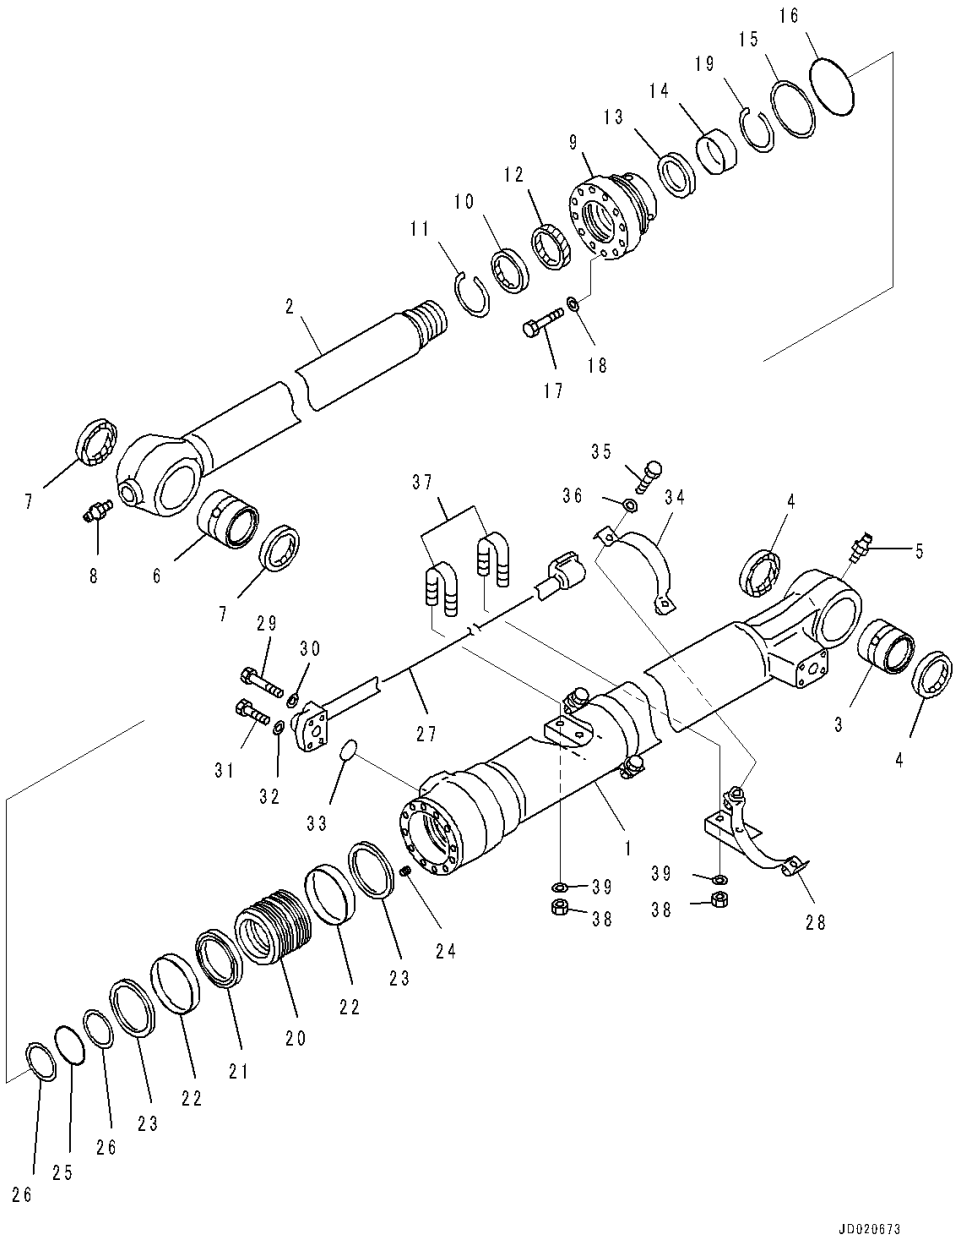


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 707-01-XJ280 | Cylinder Assembly | 1 | Y200001- |
| 1 | | 707-13-11740 | Cylinder | 1 | Y200001- |
| 2 | | 707-58-80870 | Rod, Piston | 1 | Y200001- |
| 3 | | 707-76-70110 | Bushing | 1 | Y200001- |
| 4 | | 07145-00070 | Seal, Dust, (Kit : K10) | 2 | Y200001- |
| 5 | | 07020-00000 | Fitting, Grease | 1 | Y200001- |
| 6 | | 707-76-70120 | Bushing | 1 | Y200001- |
| 7 | | 20Y-70-23220 | Seal, Dust, (Kit : K10) | 2 | Y200001- |
| 8 | | 07020-00000 | Fitting, Grease | 1 | Y200001- |
| 9 | | 707-27-11870 | Cylinder Head | 1 | Y200001- |
| 10 | | 195-63-92190 | Seal, Dust, (Kit : K10) | 1 | Y200001- |
| 11 | | 07179-13094 | Ring, Snap | 1 | Y200001- |
| 12 | | 707-51-80030 | Packing, Rod, (Kit : K10) | 1 | Y200001- |
| 13 | | 707-51-80650 | Ring, (Kit : K10) | 1 | Y200001- |
| 14 | | 707-52-90561 | Bushing | 1 | Y200001- |
| 15 | | 707-35-91150 | Ring, Back-up, (Kit : K10) | 1 | Y200001- |
| 16 | | 07000-15105 | O-ring, (Kit : K10) | 1 | Y200001- |
| 17 | | 01010-81670 | Bolt | 12 | Y200001- |
| 18 | | 01643-51645 | Washer | 12 | Y200001- |
| 19 | | 707-75-80040 | Ring, Snap | 1 | Y200001- |
| 20 | | 707-36-11880 | Piston | 1 | Y200001- |
| 21 | | 707-44-11250 | Ring, Piston, (Kit : K10) | 1 | Y200001- |
| 22 | | 707-39-11530 | Ring, Wear, (Kit : K10) | 2 | Y200001- |
| 23 | | 707-44-11920 | Ring | 2 | Y200001- |
| 24 | | 01310-01216 | Screw | 1 | Y200001- |
| 25 | | 07000-15070 | O-ring, (Kit : K10) | 1 | Y200001- |
| 26 | | 707-35-90360 | Ring, Back-up, (Kit : K10) | 2 | Y200001- |
| 27 | | 707-86-67750 | Tube | 1 | Y200001- |
| 28 | | 707-88-22570 | Bracket | 2 | Y200001- |
| 29 | | 07372-21060 | Bolt | 2 | Y200001- |
| 30 | | 01643-51032 | Washer | 2 | Y200001- |
| 31 | | 07372-21045 | Bolt | 2 | Y200001- |
| 32 | | 01643-51032 | Washer | 2 | Y200001- |
| 33 | | 07000-13030 | O-ring, (Kit : K10) | 1 | Y200001- |
| 34 | | 707-88-21271 | Band | 2 | Y200001- |
| 35 | | 07372-21035 | Bolt | 4 | Y200001- |
| 36 | | 01643-51032 | Washer | 4 | Y200001- |
| 37 | | 07283-32738 | Clip, Pipe | 2 | Y200001- |
| 38 | | 01597-01009 | Nut | 4 | Y200001- |
| 39 | | 01643-31032 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-008001 Arm, 2.9m, Heavy Duty, 100 Hours Greasing Type, Arm

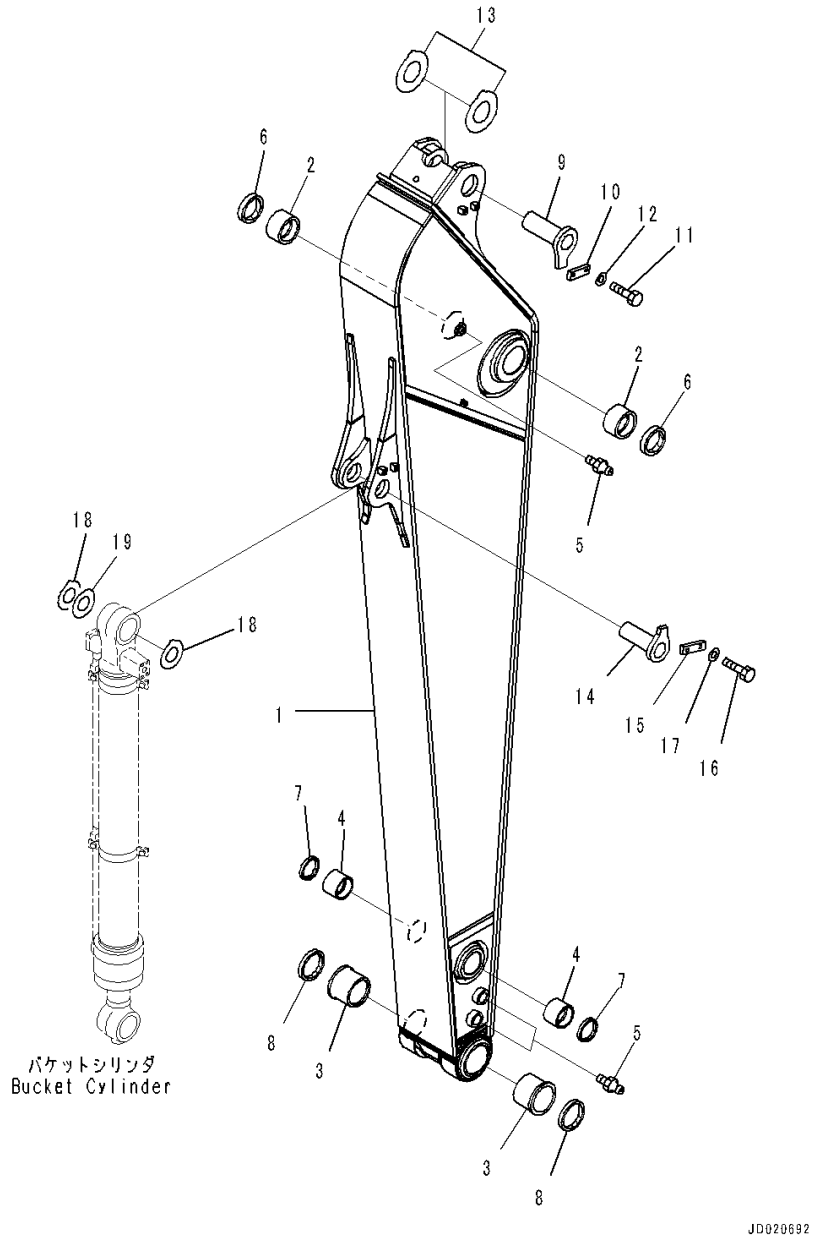


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-70-32122 | Arm . | 1 | Y200001- |
| 2 | | 205-70-72180 | Bushing. | 2 | Y200001- |
| 3 | | 20Y-70-32410 | Bushing. | 2 | Y200001- |
| 4 | | 205-70-73180 | Bushing. | 2 | Y200001- |
| 5 | | 07020-00000 | Fitting, Grease . | 3 | Y200001- |
| 6 | | 07145-00090 | Seal, Dust . | 2 | Y200001- |
| 7 | | 20Y-70-23220 | Seal, Dust . | 2 | Y200001- |
| 8 | | 20Y-70-23230 | Seal, Dust . | 2 | Y200001- |
| 9 | | 20Y-70-42220 | Pin. | 1 | Y200001- |
| 10 | | 205-70-66581 | Plate. | 1 | Y200001- |
| 11 | | 01010-81230 | Bolt. | 2 | Y200001- |
| 12 | | 01643-31232 | Washer . | 2 | Y200001- |
| 13 | | 205-70-51530 | Spacer, T=1.5mm . | 1 | Y200001- |
| 14 | | 205-70-71190 | Pin. | 1 | Y200001- |
| 15 | | 205-70-66580 | Plate. | 1 | Y200001- |
| 16 | | 01010-81230 | Bolt. | 2 | Y200001- |
| 17 | | 01643-31232 | Washer . | 2 | Y200001- |
| 18 | | 20Y-70-11290 | Spacer, T=0.8mm . | 1 | Y200001- |
| 19 | | 20Y-70-11310 | Spacer, T=1.5mm . | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-029001 Arm, 2.9m, 100 Hours Greasing Type, With Webasto Heater, Arm

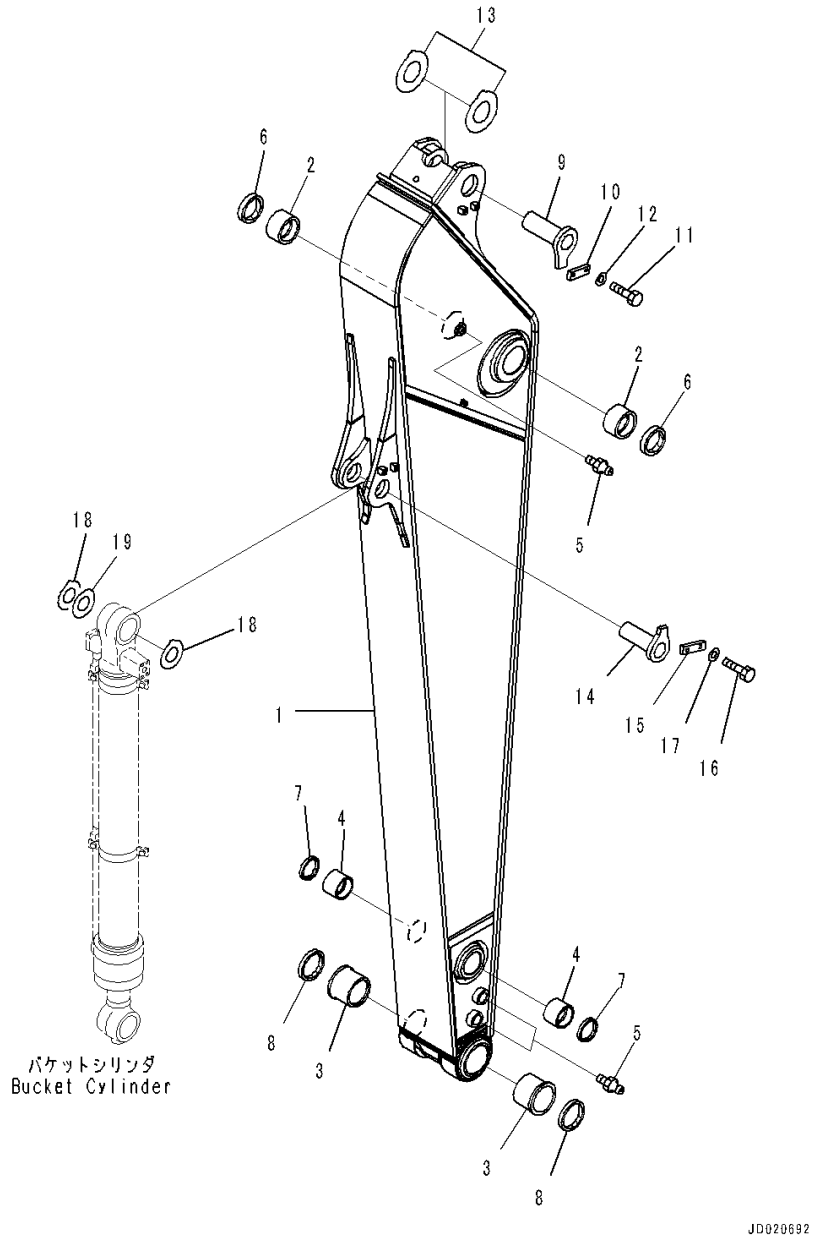


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-70-32122 | Arm . | 1 | Y200001- |
| 2 | | 205-70-72180 | Bushing. | 2 | Y200001- |
| 3 | | 20Y-70-32410 | Bushing. | 2 | Y200001- |
| 4 | | 205-70-73180 | Bushing. | 2 | Y200001- |
| 5 | | 07020-00000 | Fitting, Grease . | 3 | Y200001- |
| 6 | | 07145-10090 | Seal, Dust . | 2 | Y200001- |
| 7 | | 20Y-70-23220 | Seal, Dust . | 2 | Y200001- |
| 8 | | 20Y-70-23230 | Seal, Dust . | 2 | Y200001- |
| 9 | | 20Y-70-42220 | Pin. | 1 | Y200001- |
| 10 | | 205-70-66581 | Plate. | 1 | Y200001- |
| 11 | | 01010-81230 | Bolt. | 2 | Y200001- |
| 12 | | 01643-31232 | Washer . | 2 | Y200001- |
| 13 | | 205-70-51530 | Spacer, T=1.5mm . | 1 | Y200001- |
| 14 | | 205-70-71190 | Pin. | 1 | Y200001- |
| 15 | | 205-70-66580 | Plate. | 1 | Y200001- |
| 16 | | 01010-81230 | Bolt. | 2 | Y200001- |
| 17 | | 01643-31232 | Washer . | 2 | Y200001- |
| 18 | | 20Y-70-11290 | Spacer, T=0.8mm . | 1 | Y200001- |
| 19 | | 20Y-70-11310 | Spacer, T=1.5mm . | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-029002 Arm, 2.9m, 100 Hours Greasing Type, With Webasto Heater, Bucket Cylinder

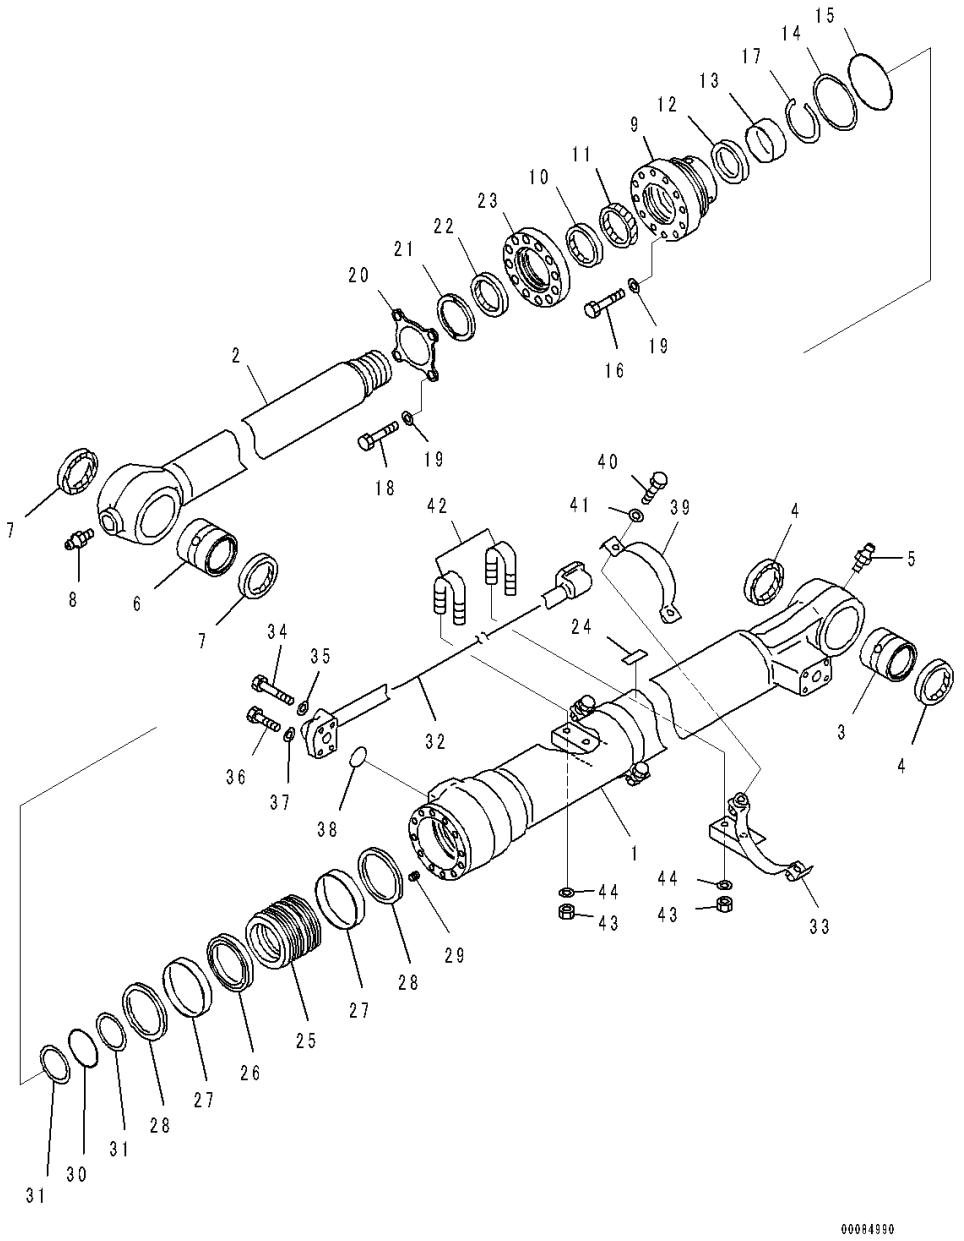


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 707-01-XK710 | Cylinder Assembly | 1 | Y200001- |
| 1 | | 707-13-11740 | Cylinder | 1 | Y200001- |
| 2 | | 707-58-80910 | Rod, Piston | 1 | Y200001- |
| 3 | | 707-76-70110 | Bushing | 1 | Y200001- |
| 4 | | 07145-10070 | Seal, Dust, (Kit : K11) | 2 | Y200001- |
| 5 | | 07020-00000 | Fitting, Grease | 1 | Y200001- |
| 6 | | 707-76-70120 | Bushing | 1 | Y200001- |
| 7 | | 20Y-70-23220 | Seal, Dust, (Kit : K11) | 2 | Y200001- |
| 8 | | 07020-00000 | Fitting, Grease | 1 | Y200001- |
| 9 | | 707-27-11870 | Cylinder Head | 1 | Y200001- |
| 10 | | 195-63-92190 | Seal, Dust, (Kit : K11) | 1 | Y200001- |
| 11 | | 707-51-80730 | Packing, (Kit : K11) | 1 | Y200001- |
| 12 | | 707-51-80650 | Ring, (Kit : K11) | 1 | Y200001- |
| 13 | | 707-52-90561 | Bushing | 1 | Y200001- |
| 14 | | 707-35-91150 | Ring, Back-up, (Kit : K11) | 1 | Y200001- |
| 15 | | 07000-55105 | O-ring, (Kit : K11) | 1 | Y200001- |
| 16 | | 01010-81695 | Bolt | 8 | Y200001- |
| 17 | | 707-75-80040 | Ring, Snap | 1 | Y200001- |
| 18 | | 01011-81600 | Bolt | 4 | Y200001- |
| 19 | | 01643-51645 | Washer | 12 | Y200001- |
| 20 | | 707-88-04980 | Plate | 1 | Y200001- |
| 21 | | 707-88-36881 | Ring | 1 | Y200001- |
| 22 | | 707-56-80651 | Seal, Dust, (Kit : K11) | 1 | Y200001- |
| 23 | | 707-88-04970 | Collar | 1 | Y200001- |
| 24 | | 700-11-31980 | Plate, Name (Limited Supply) | 1 | Y200001- |
| 25 | | 707-36-11880 | Piston | 1 | Y200001- |
| 26 | | 707-44-11280 | Ring, Piston, (Kit : K11) | 1 | Y200001- |
| 27 | | 707-39-11530 | Ring, Wear, (Kit : K11) | 2 | Y200001- |
| 28 | | 707-44-11920 | Ring | 2 | Y200001- |
| 29 | | 01310-01216 | Screw | 1 | Y200001- |
| 30 | | 07000-55070 | O-ring, (Kit : K11) | 1 | Y200001- |
| 31 | | 707-35-90360 | Ring, Back-up, (Kit : K11) | 2 | Y200001- |
| 32 | | 707-86-67750 | Tube | 1 | Y200001- |
| 33 | | 707-88-22570 | Bracket | 2 | Y200001- |
| 34 | | 07372-21060 | Bolt | 2 | Y200001- |
| 35 | | 01643-51032 | Washer | 2 | Y200001- |
| 36 | | 07372-21045 | Bolt | 2 | Y200001- |
| 37 | | 01643-51032 | Washer | 2 | Y200001- |
| 38 | | 07000-53030 | O-ring, (Kit : K11) | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-029002 Arm, 2.9m, 100 Hours Greasing Type, With Webasto Heater, Bucket Cylinder

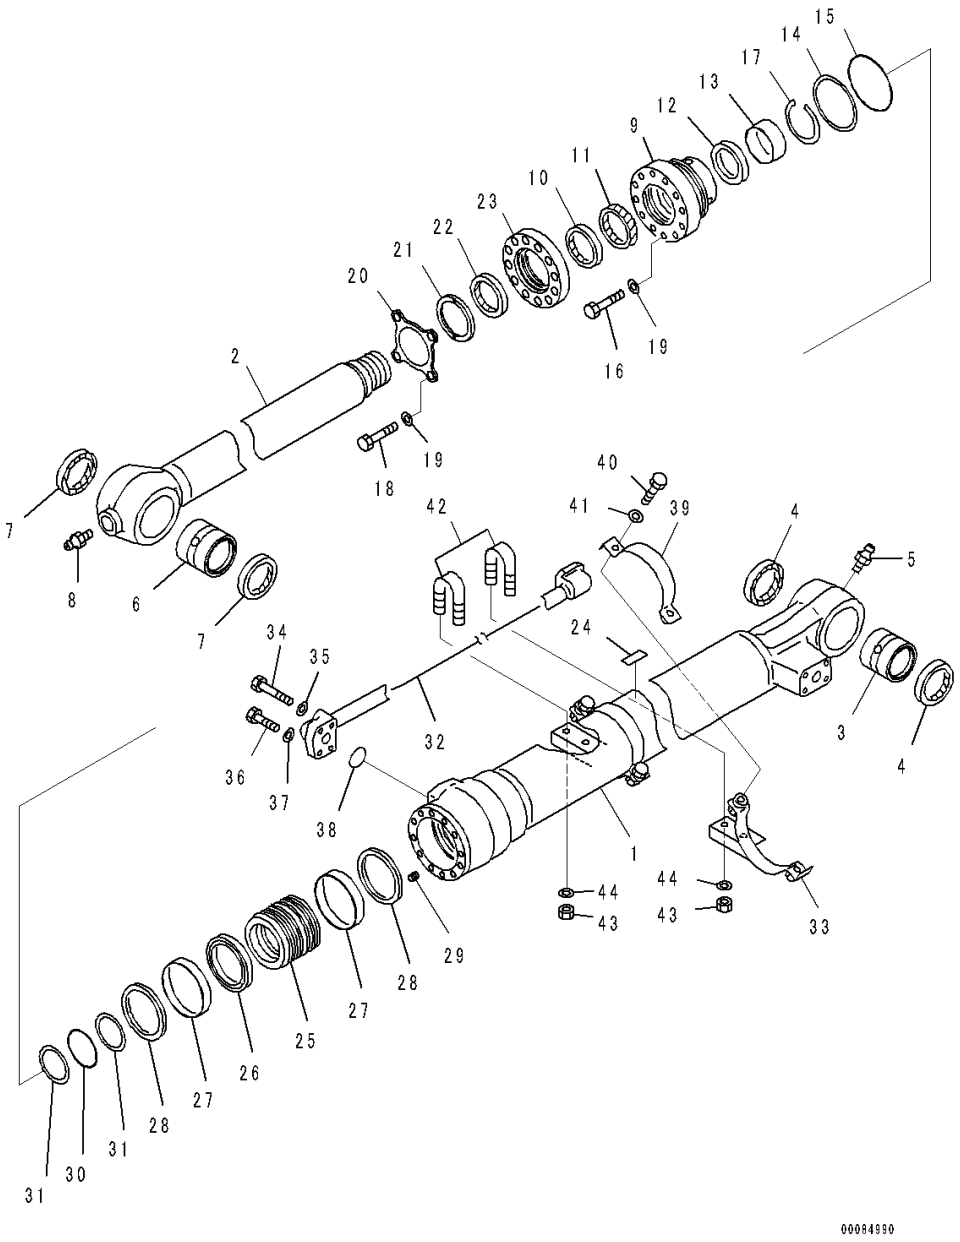


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 707-88-21271 | Band | 2 | Y200001- |
| 40 | | 07372-21035 | Bolt | 4 | Y200001- |
| 41 | | 01643-51032 | Washer | 4 | Y200001- |
| 42 | | 07283-32738 | Clip, Pipe | 2 | Y200001- |
| 43 | | 01597-01009 | Nut | 4 | Y200001- |
| 44 | | 01643-31032 | Washer | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-029004 Arm, 2.9m, 100 Hours Greasing Type, With Webasto Heater, Bucket Cylinder Hose

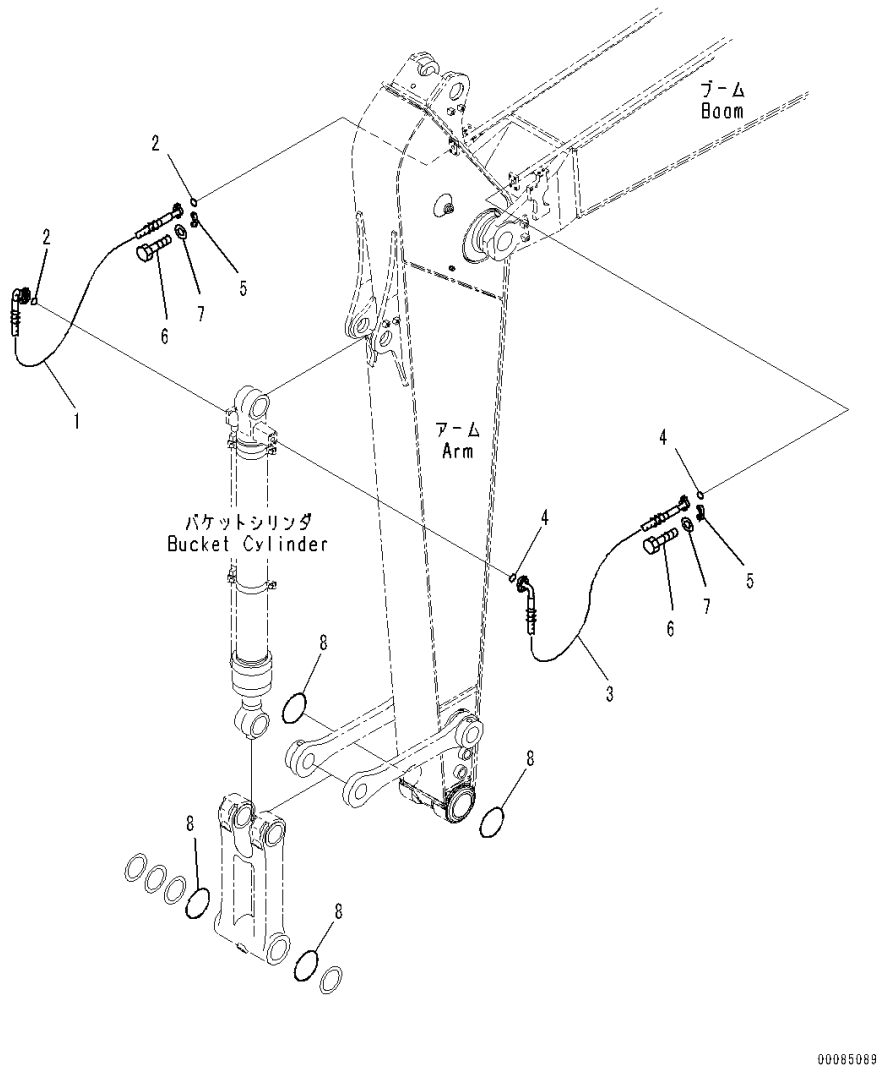


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-13412 | Hose, L=1300mm | 1 | 315646- |
| 2 | | 07000-53025 | O-ring | 2 | 315646- |
| 3 | | 20Y-62-51810 | Hose, L=1300mm | 1 | 315646- |
| 4 | | 07000-53025 | O-ring | 2 | 315646- |
| 5 | | 07371-30640 | Flange, Split | 8 | 315646- |
| 6 | | 07372-21035 | Bolt | 16 | 315646- |
| 7 | | 01643-51032 | Washer | 16 | 315646- |
| 8 | | 205-70-73280 | O-ring | 4 | 315646- |


https://truckmanualshub.com/

# FIG. T1200-014005 Arm, Additional Piping, With Webasto Heater

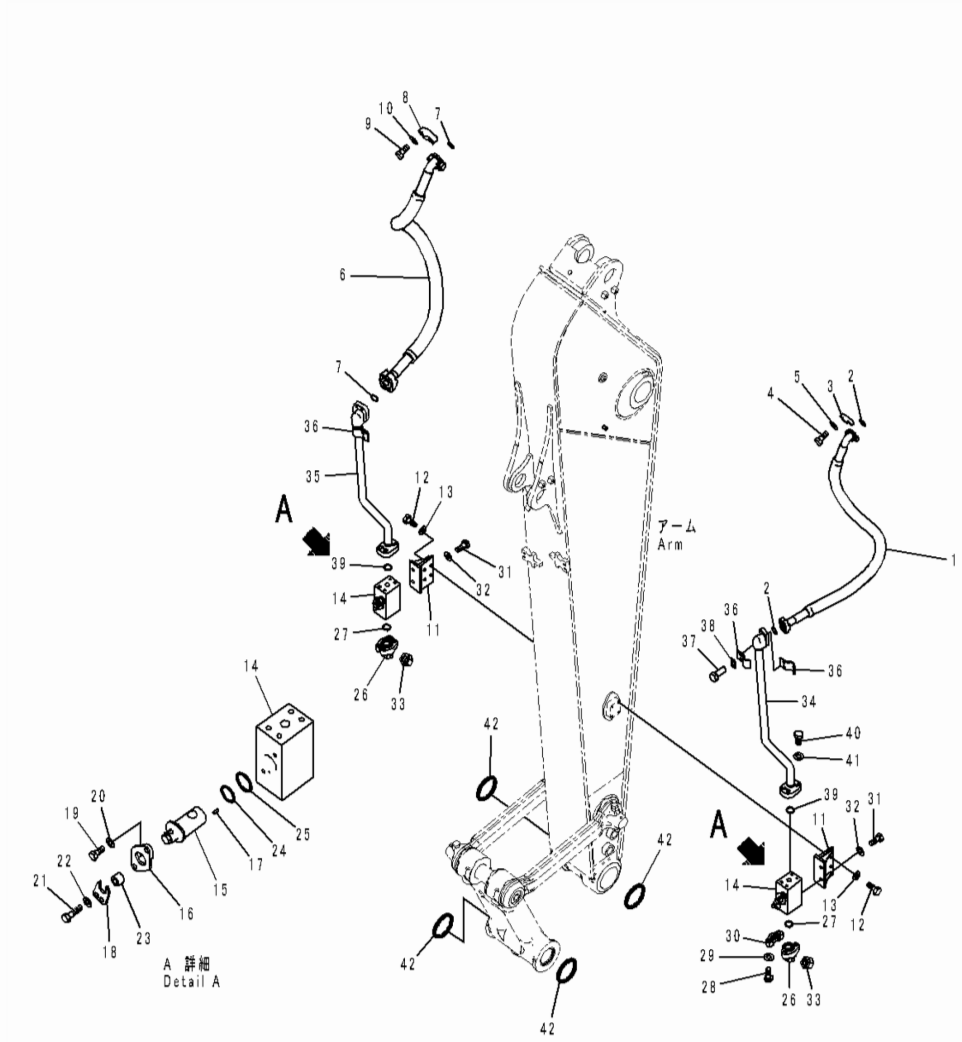


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07097-21015 | Hose, Flange Type | 1 | Y200001- |
| 2 | | 21T-09-11460 | O-ring | 2 | Y200001- |
| 3 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 4 | | 07372-21035 | Bolt | 8 | Y200001- |
| 5 | | 01643-51032 | Washer | 8 | Y200001- |
| 6 | | 07097-21218 | Hose, Flange Type, L=1800mm | 1 | Y200001- |
| 7 | | 07000-53038 | O-ring | 2 | Y200001- |
| 8 | | 07371-51260 | Flange | 4 | Y200001- |
| 9 | | 01010-81245 | Bolt | 8 | Y200001- |
| 10 | | 01643-31232 | Washer | 8 | Y200001- |
| 11 | | 20Y-970-5321 | Bracket | 2 | Y200001- |
| 12 | | 01010-81230 | Bolt | 8 | Y200001- |
| 13 | | 01643-31232 | Washer | 8 | Y200001- |
| | | 20Y-970-5400 | Valve Assembly | 2 | Y200001- |
| 14 | C1 | | • Body | 1 | Y200001- |
| 15 | | 20Y-970-5240 | • Shaft | 1 | Y200001- |
| 16 | | 20Y-970-3270 | • Cover | 1 | Y200001- |
| 17 | | 04025-00412 | • Pin, Spring | 1 | Y200001- |
| 18 | | 20Y-970-4612 | • Plate | 1 | Y200001- |
| 19 | | 01010-81025 | • Bolt | 1 | Y200001- |
| 20 | | 01643-31032 | • Washer | 1 | Y200001- |
| 21 | | 01010-81045 | • Bolt | 1 | Y200001- |
| 22 | | 01643-31032 | • Washer | 1 | Y200001- |
| 23 | | 201-03-29160 | • Spacer | 1 | Y200001- |
| 24 | | 07000-53032 | • O-ring | 1 | Y200001- |
| 25 | | 07000-53038 | • O-ring | 1 | Y200001- |
| 26 | | 207-970-2110 | Elbow | 2 | Y200001- |
| 27 | | 07000-53038 | O-ring | 2 | Y200001- |
| 28 | | 01010-81245 | Bolt | 8 | Y200001- |
| 29 | | 01643-31232 | Washer | 8 | Y200001- |
| 30 | | 07371-51260 | Flange | 4 | Y200001- |
| 31 | | 01010-81230 | Bolt | 4 | Y200001- |
| 32 | | 01643-31232 | Washer | 4 | Y200001- |
| 33 | | 205-970-5770 | Cap | 2 | Y200001- |
| 34 | | 20Y-62-55340 | Tube | 1 | Y200001- |
| 35 | | 20Y-62-55350 | Tube | 1 | Y200001- |
| 36 | | 207-62-31330 | Clamp | 4 | Y200001- |
| 37 | | 01010-81230 | Bolt | 4 | Y200001- |
| 38 | | 20Y-62-13450 | Plate | 2 | Y2000[illegible] |


# FIG. T1200-014005 Arm, Additional Piping, With Webasto Heater

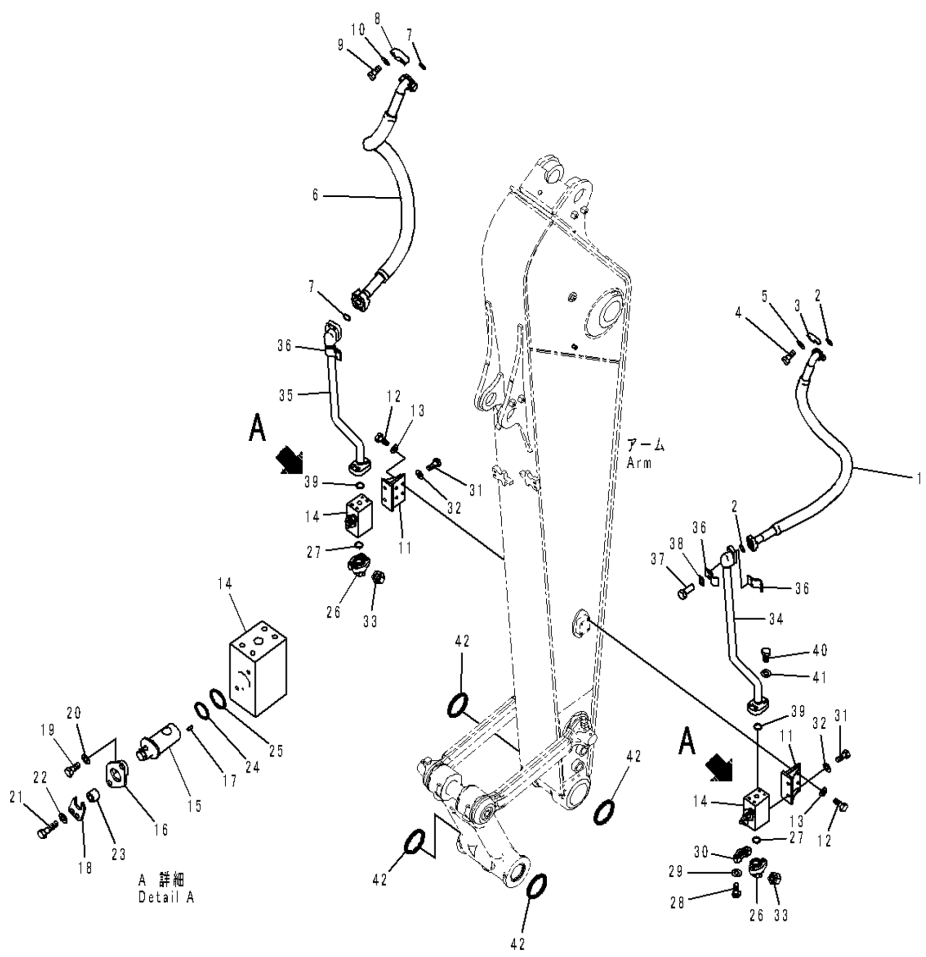


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 07000-53038 | O-ring | 2 | Y200001- |
| 40 | | 01010-81245 | Bolt | 8 | Y200001- |
| 41 | | 01643-31232 | Washer | 8 | Y200001- |
| 42 | | 205-70-73280 | O-ring | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-015003 Arm, Bucket Link

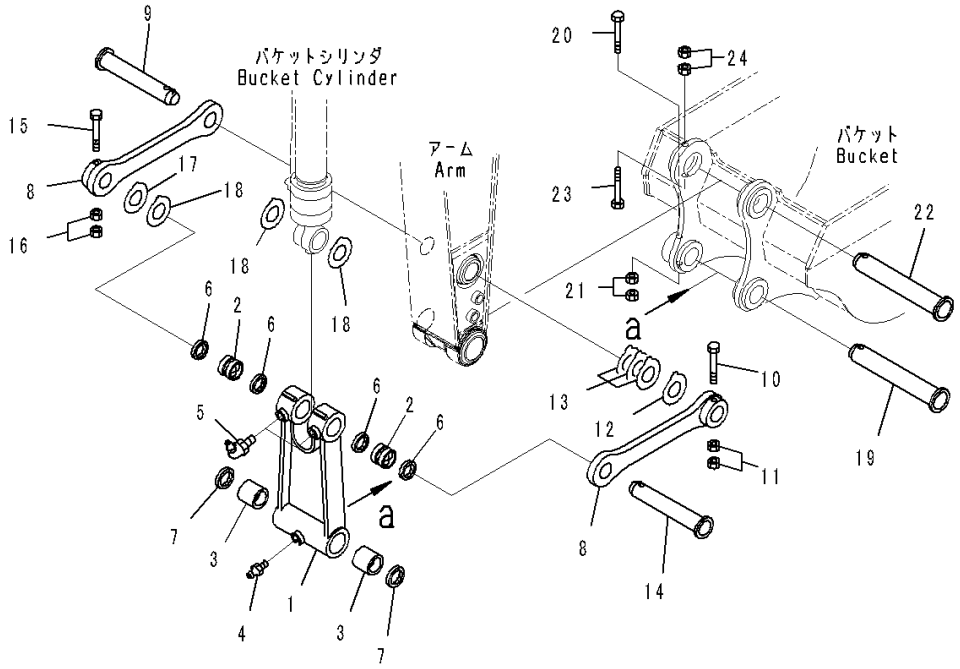


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-70-00781 | Link Assembly | 1 | Y200001- |
| 1 | C1 | | • Link | 1 | Y200001- |
| 2 | | 21K-70-12161 | • Bushing | 2 | Y200001- |
| 3 | | 205-70-73180 | • Bushing | 2 | Y200001- |
| 4 | | 07020-00000 | • Fitting, Grease | 1 | Y200001- |
| 5 | | 07020-00675 | • Fitting, Grease | 2 | Y200001- |
| 6 | | 20Y-70-23220 | • Seal, Dust | 4 | Y200001- |
| 7 | | 20Y-70-23230 | • Seal, Dust | 2 | Y200001- |
| 8 | | 205-70-73130 | Link | 2 | Y200001- |
| 9 | | 22U-70-21191 | Pin | 1 | Y200001- |
| 10 | | 20Y-70-32450 | Bolt | 1 | Y200001- |
| 11 | | 01580-12016 | Nut | 2 | Y200001- |
| 12 | | 20Y-70-11320 | Spacer, T=0.8mm | 1 | Y200001- |
| 13 | | 20Y-70-11330 | Spacer, T=1.5mm | 3 | Y200001- |
| 14 | | 22U-70-21191 | Pin | 1 | Y200001- |
| 15 | | 20Y-70-32450 | Bolt | 1 | Y200001- |
| 16 | | 01580-12016 | Nut | 2 | Y200001- |
| 17 | | 20Y-70-11320 | Spacer, T=0.8mm | 1 | Y200001- |
| 18 | | 20Y-70-11330 | Spacer, T=1.5mm | 4 | Y200001- |
| 19 | | 205-70-73270 | Pin | 1 | Y200001- |
| 20 | | 20Y-70-32450 | Bolt | 1 | Y200001- |
| 21 | | 01580-12016 | Nut | 2 | Y200001- |
| 22 | | 205-70-73270 | Pin | 1 | Y200001- |
| 23 | | 20Y-70-32460 | Bolt | 1 | Y200001- |
| 24 | | 01580-12016 | Nut | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-015004 Arm, Bucket Cylinder Hose

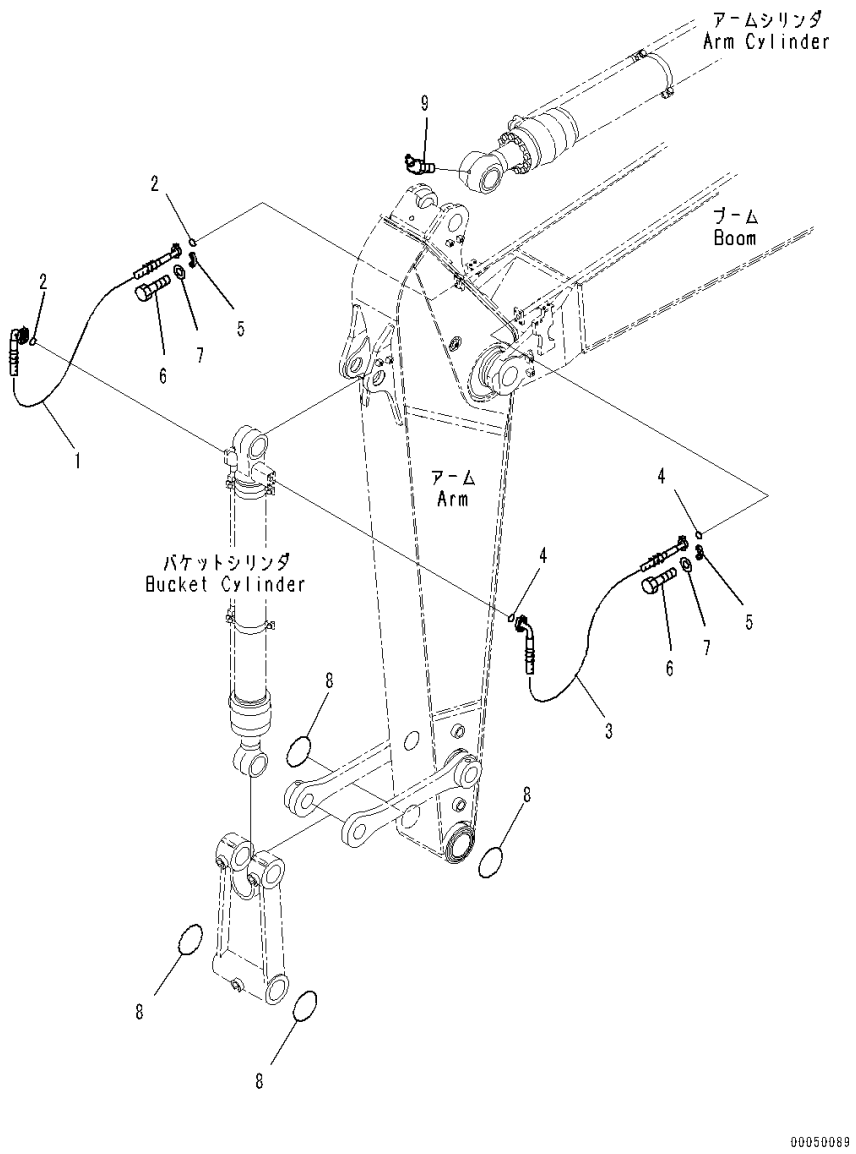


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-13412 | Hose, L=1300mm | 1 | Y200001- |
| 2 | | 07000-13025 | O-ring | 2 | Y200001- |
| 3 | | 20Y-62-51810 | Hose, L=1300mm | 1 | Y200001- |
| 4 | | 07000-13025 | O-ring | 2 | Y200001- |
| 5 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 6 | | 07372-21035 | Bolt | 16 | Y200001- |
| 7 | | 01643-51032 | Washer | 16 | Y200001- |
| 8 | | 205-70-73280 | O-ring | 4 | Y200001- |
| 9 | | 07020-00675 | Fitting, Grease | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-016001 Arm, 2.4m, 100 Hours Greasing Type, Arm

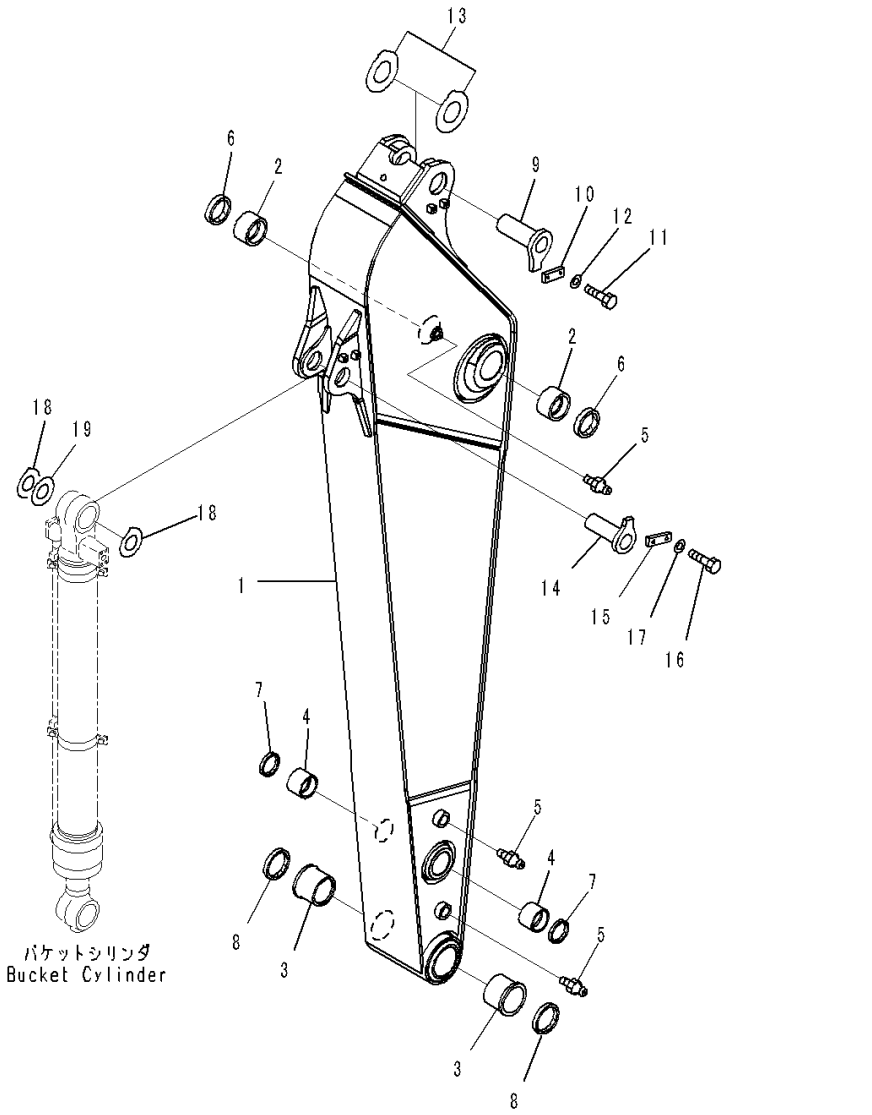


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-944-4212 | Arm | 1 | Y200001- |
| 2 | | 205-70-72180 | Bushing | 2 | Y200001- |
| 3 | | 20Y-70-32410 | Bushing | 2 | Y200001- |
| 4 | | 205-70-73180 | Bushing | 2 | Y200001- |
| 5 | | 07020-00000 | Fitting, Grease | 3 | Y200001- |
| 6 | | 07145-00090 | Seal, Dust | 2 | Y200001- |
| 7 | | 20Y-70-23220 | Seal, Dust | 2 | Y200001- |
| 8 | | 20Y-70-23230 | Seal, Dust | 2 | Y200001- |
| 9 | | 20Y-70-42220 | Pin | 1 | Y200001- |
| 10 | | 205-70-66581 | Plate | 1 | Y200001- |
| 11 | | 01010-81230 | Bolt | 2 | Y200001- |
| 12 | | 01643-31232 | Washer | 2 | Y200001- |
| 13 | | 205-70-51530 | Spacer, T=1.5mm | 1 | Y200001- |
| 14 | | 205-70-71190 | Pin | 1 | Y200001- |
| 15 | | 205-70-66580 | Plate | 1 | Y200001- |
| 16 | | 01010-81230 | Bolt | 2 | Y200001- |
| 17 | | 01643-31232 | Washer | 2 | Y200001- |
| 18 | | 20Y-70-11290 | Spacer, T=0.8mm | 1 | Y200001- |
| 19 | | 20Y-70-11310 | Spacer, T=1.5mm | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-021001 Arm, Arm

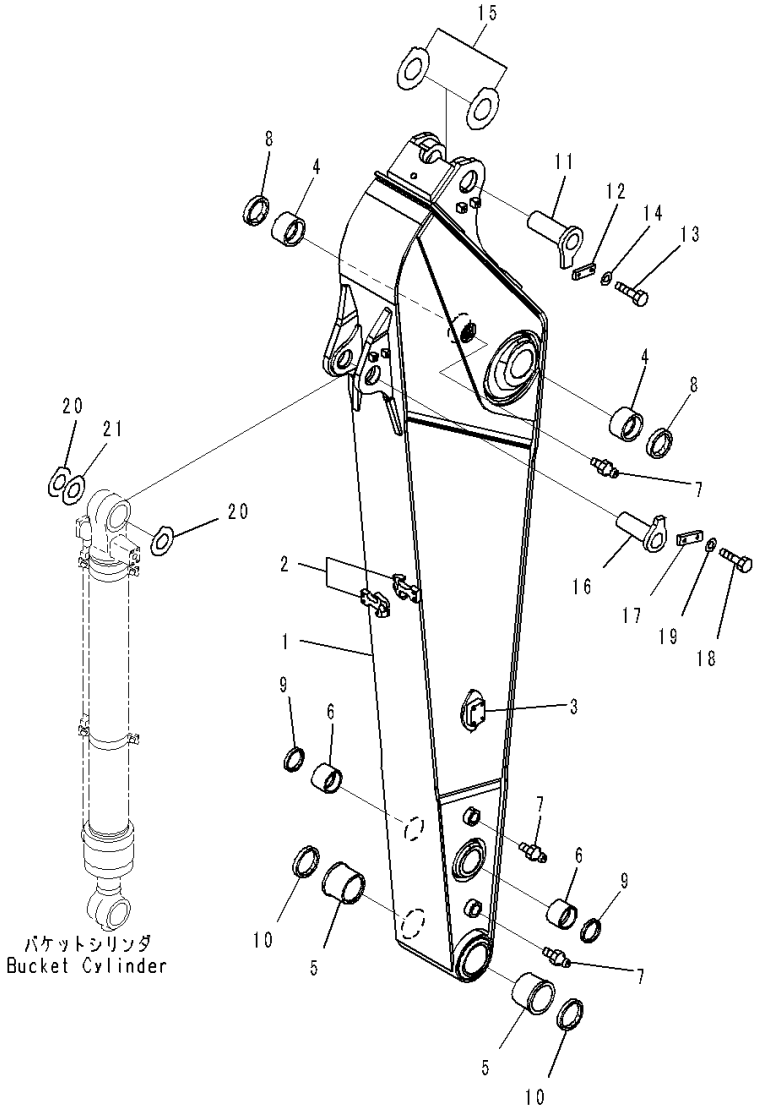


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 20Y-70-01291 | Arm Assembly | 1 | Y200001- |
| 1 | C1 | | • Arm | 1 | Y200001- |
| 2 | | 20Y-70-42E51 | •• Plate,Welded | 2 | Y200001- |
| 3 | | 20Y-970-3572 | •• Bracket,Welded | 2 | Y200001- |
| 4 | | 205-70-72180 | • Bushing | 2 | Y200001- |
| 5 | | 20Y-70-32410 | • Bushing | 2 | Y200001- |
| 6 | | 205-70-73180 | • Bushing | 2 | Y200001- |
| 7 | | 07020-00000 | Fitting, Grease | 3 | Y200001- |
| 8 | | 07145-00090 | Seal, Dust | 2 | Y200001- |
| 9 | | 20Y-70-23220 | Seal, Dust | 2 | Y200001- |
| 10 | | 20Y-70-23230 | Seal, Dust | 2 | Y200001- |
| 11 | | 20Y-70-42220 | Pin | 1 | Y200001- |
| 12 | | 205-70-66581 | Plate | 1 | Y200001- |
| 13 | | 01010-81230 | Bolt | 2 | Y200001- |
| 14 | | 01643-31232 | Washer | 2 | Y200001- |
| 15 | | 205-70-51530 | Spacer, T=1.5mm | 1 | Y200001- |
| 16 | | 205-70-71190 | Pin | 1 | Y200001- |
| 17 | | 205-70-66580 | Plate | 1 | Y200001- |
| 18 | | 01010-81230 | Bolt | 2 | Y200001- |
| 19 | | 01643-31232 | Washer | 2 | Y200001- |
| 20 | | 20Y-70-11290 | Spacer, T=0.8mm | 1 | Y200001- |
| 21 | | 20Y-70-11310 | Spacer, T=1.5mm | 3 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-019004 Arm, Bucket Cylinder Hose

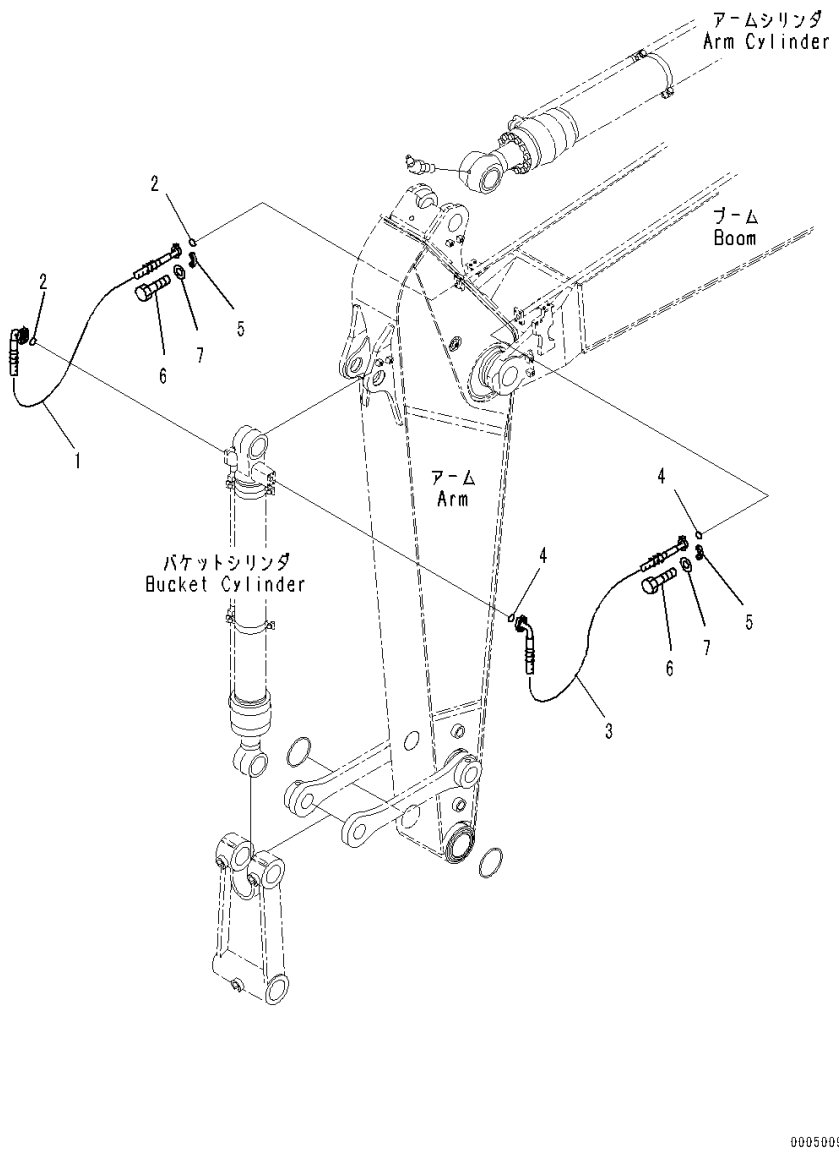


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-62-13412 | Hose, L=1300mm | 1 | Y200001- |
| 2 | | 07000-13025 | O-ring | 2 | Y200001- |
| 3 | | 20Y-62-51810 | Hose, L=1300mm | 1 | Y200001- |
| 4 | | 07000-13025 | O-ring | 2 | Y200001- |
| 5 | | 07371-30640 | Flange, Split | 8 | Y200001- |
| 6 | | 07372-21035 | Bolt | 16 | Y200001- |
| 7 | | 01643-51032 | Washer | 16 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-019005 Arm, Additional Piping

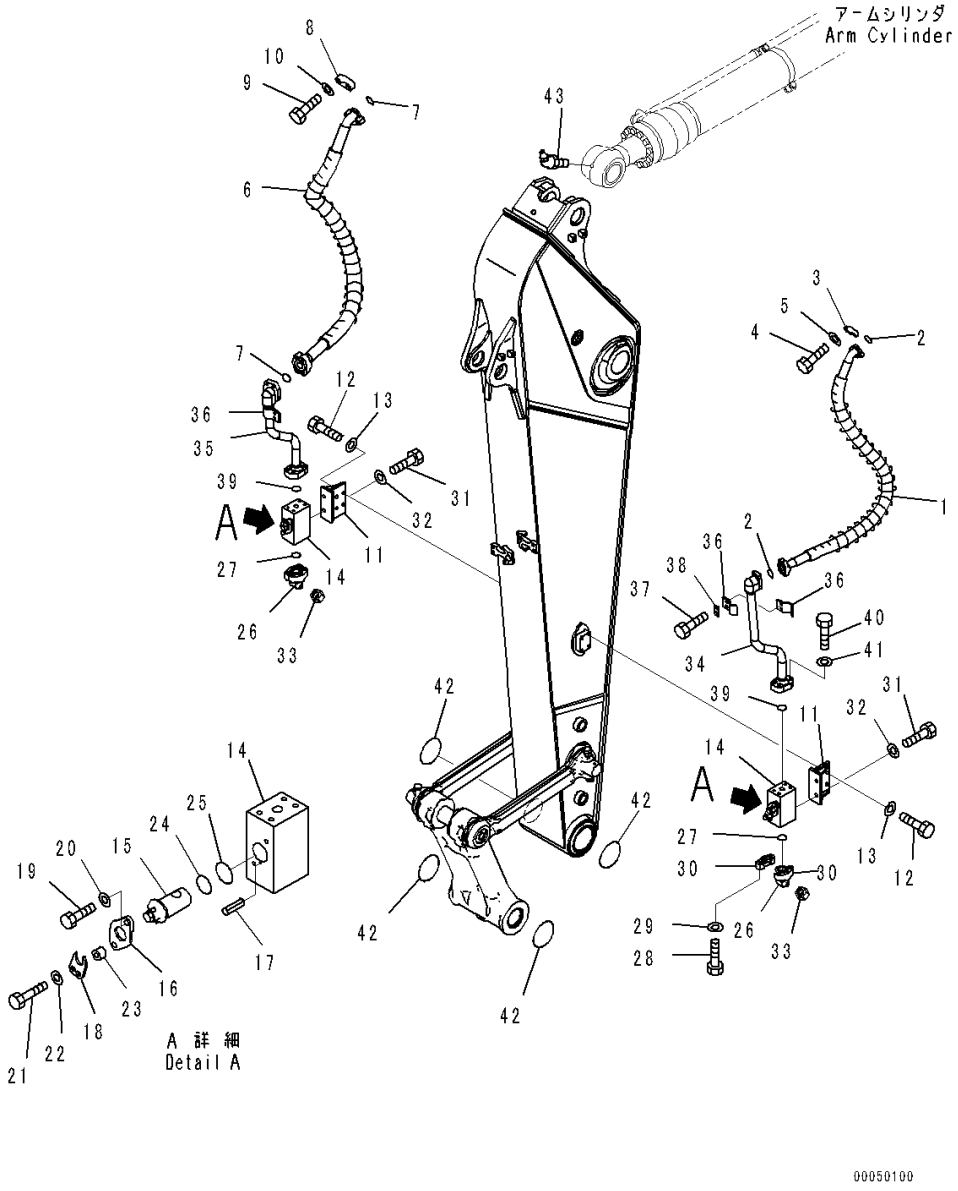


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 07097-21015 | Hose, Flange Type | 1 | Y200001- |
| 2 | | 21T-09-11460 | O-ring | 2 | Y200001- |
| 3 | | 07371-31049 | Flange, Split | 4 | Y200001- |
| 4 | | 07372-21035 | Bolt | 8 | Y200001- |
| 5 | | 01643-51032 | Washer | 8 | Y200001- |
| 6 | | 07097-21218 | Hose, Flange Type, L=1800mm | 1 | Y200001- |
| 7 | | 07000-13038 | O-ring | 2 | Y200001- |
| 8 | | 07371-51260 | Flange | 4 | Y200001- |
| 9 | | 01010-81245 | Bolt | 8 | Y200001- |
| 10 | | 01643-31232 | Washer | 8 | Y200001- |
| 11 | | 20Y-970-5321 | Bracket | 2 | Y200001- |
| 12 | | 01010-81230 | Bolt | 8 | Y200001- |
| 13 | | 01643-31232 | Washer | 8 | Y200001- |
| | | 20Y-970-5300 | Valve Assembly | 2 | Y200001- |
| 14 | | C1 | • Body | 1 | Y200001- |
| 15 | | 20Y-970-5240 | • Shaft | 1 | Y200001- |
| 16 | | 20Y-970-3270 | • Cover | 1 | Y200001- |
| 17 | | 04025-00412 | • Pin, Spring | 1 | Y200001- |
| 18 | | 20Y-970-4612 | • Plate | 1 | Y200001- |
| 19 | | 01010-81025 | • Bolt | 1 | Y200001- |
| 20 | | 01643-31032 | • Washer | 1 | Y200001- |
| 21 | | 01010-81045 | • Bolt | 1 | Y200001- |
| 22 | | 01643-31032 | • Washer | 1 | Y200001- |
| 23 | | 201-03-29160 | • Spacer | 1 | Y200001- |
| 24 | | 07000-13032 | • O-ring | 1 | Y200001- |
| 25 | | 07000-13038 | • O-ring | 1 | Y200001- |
| 26 | | 207-970-2110 | Elbow | 2 | Y200001- |
| 27 | | 07000-13038 | O-ring | 2 | Y200001- |
| 28 | | 01010-81245 | Bolt | 8 | Y200001- |
| 29 | | 01643-31232 | Washer | 8 | Y200001- |
| 30 | | 07371-51260 | Flange | 4 | Y200001- |
| 31 | | 01010-81230 | Bolt | 4 | Y200001- |
| 32 | | 01643-31232 | Washer | 4 | Y200001- |
| 33 | | 205-970-5770 | Cap | 2 | Y200001- |
| 34 | | 20Y-970-5631 | Tube | 1 | Y200001- |
| 35 | | 20Y-970-5641 | Tube | 1 | Y200001- |
| 36 | | 207-62-31330 | Clamp | 4 | Y200001- |
| 37 | | 01010-81230 | Bolt | 4 | Y200001- |
| 38 | | 20Y-62-13450 | Plate | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1200-019005 Arm, Additional Piping

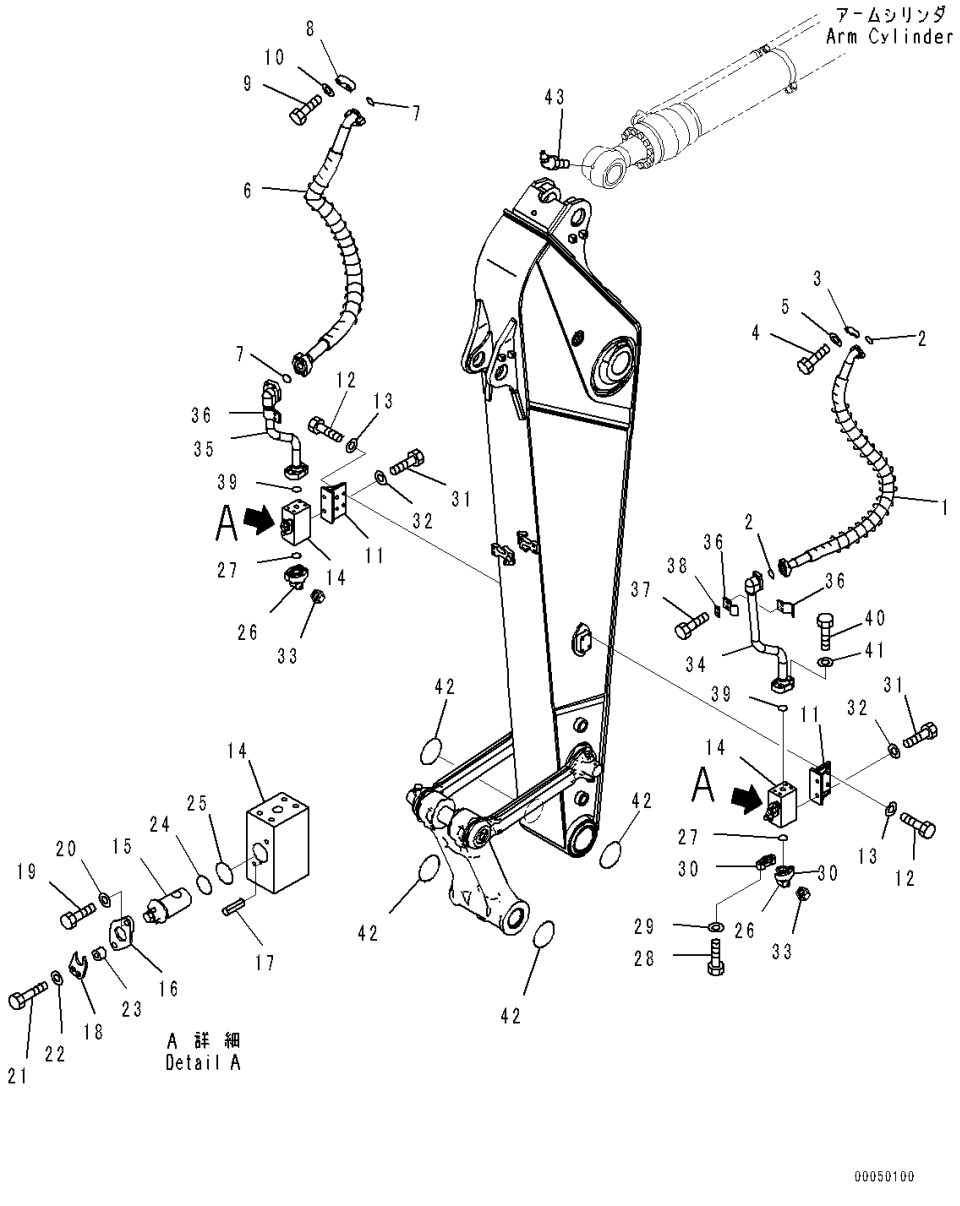


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 39 | | 07000-13038 | O-ring | 2 | Y200001- |
| 40 | | 01010-81245 | Bolt | 8 | Y200001- |
| 41 | | 01643-31232 | Washer | 8 | Y200001- |
| 42 | | 205-70-73280 | O-ring | 4 | Y200001- |
| 43 | | 07020-00675 | Fitting, Grease | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. T1290-002001 Parts For Less Bucket

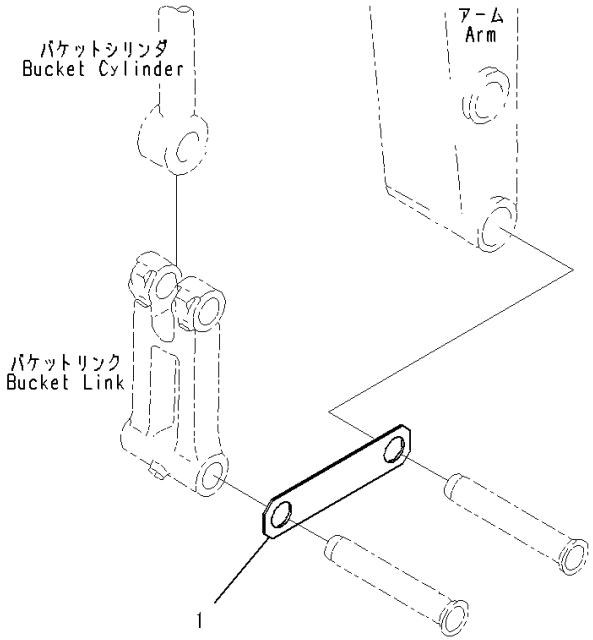



PEB3804

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 207-70-33220 | Plate. ..... | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-004001 Bucket, 0.5m3, 750mm Width, Horizontal Pin Type

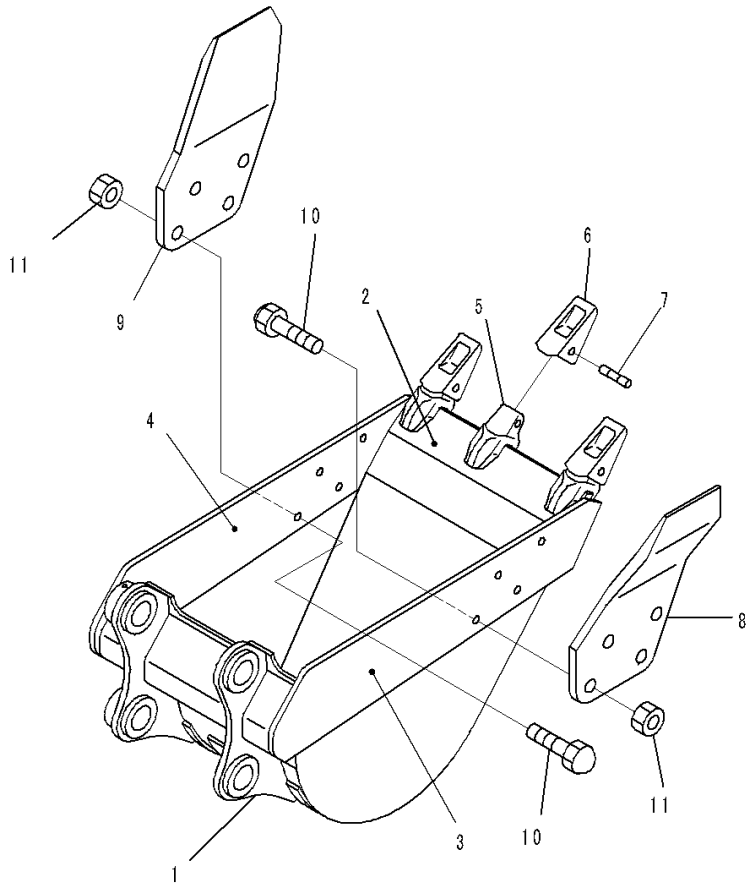


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-926-7250 | Bucket | 1 | Y200001- |
| 2 | | 205-926-7221 | • Plate,Welded | 1 | Y200001- |
| 3 | | 205-70-74162 | • Plate,LHS,Welded | 1 | Y200001- |
| 4 | | 205-70-74172 | • Plate,RHS,Welded | 1 | Y200001- |
| 5 | | 205-939-7120 | • Adapter,Welded | 3 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 3 | Y200001- |
| 7 | | 09244-02496 | Pin | 3 | Y200001- |
| 8 | | 205-70-74180 | Cutter,LHS | 1 | Y200001- |
| 9 | | 205-70-74190 | Cutter,RHS | 1 | Y200001- |
| 10 | | 176-32-11210 | Bolt | 8 | Y200001- |
| 11 | | 01803-02430 | Nut | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-004002 Bucket, Spacer

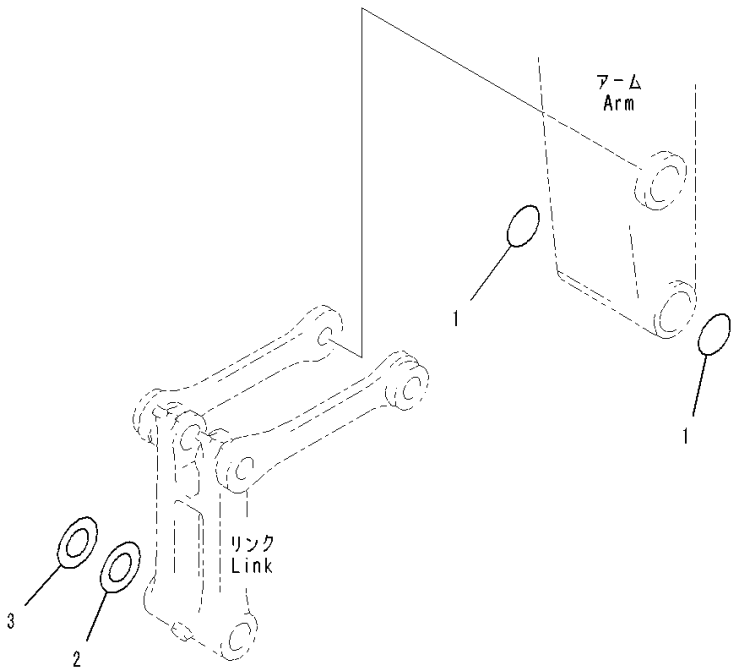


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-70-73280 | O-ring | 2 | Y200001- |
| 2 | | 20Y-70-11340 | Spacer, T=0.8mm | 1 | Y200001- |
| 3 | | 205-70-51530 | Spacer, T=1.5mm | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-021001 Bucket, 0.8m3, 1150mm Width, Horizontal Pin Type

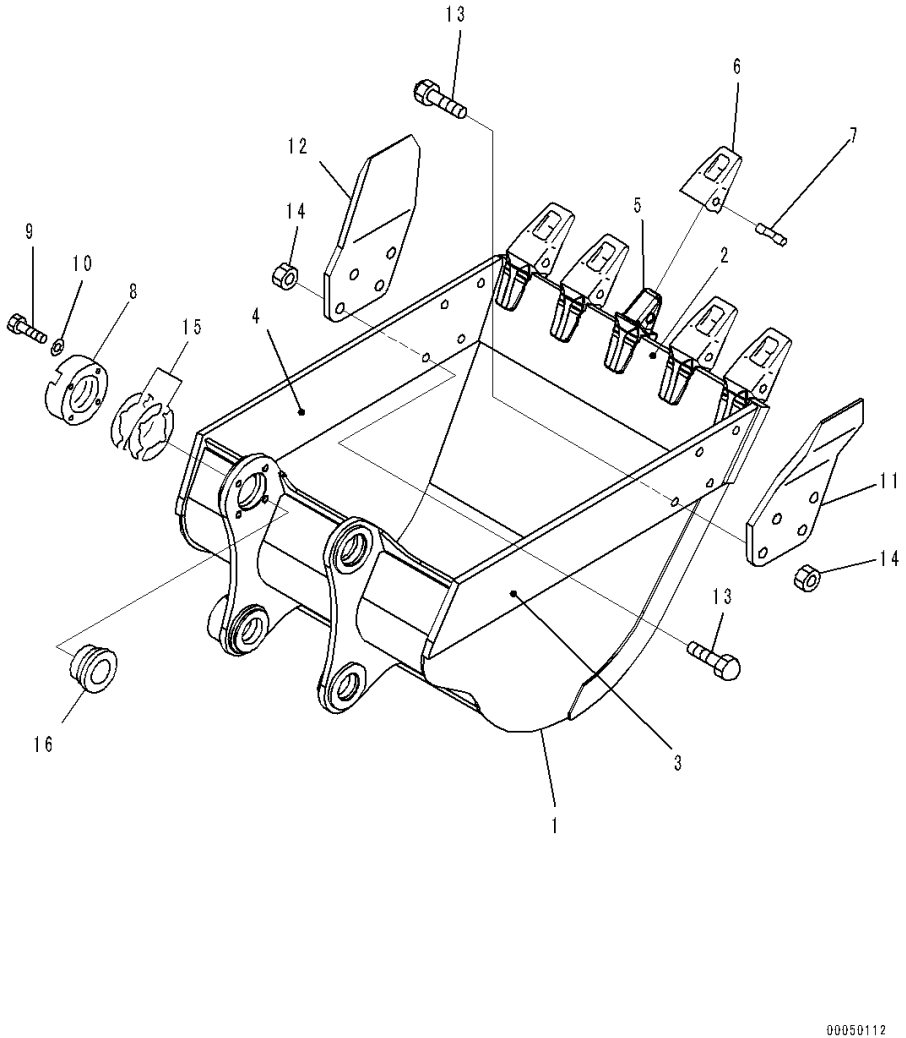


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-70-44310 | Bucket | 1 | Y200001- |
| 2 | | 20Y-70-14122 | • Plate,Welded | 1 | Y200001- |
| 3 | | 20Y-70-34121 | • Plate,LHS,Welded | 1 | Y200001- |
| 4 | | 20Y-70-34131 | • Plate,RHS,Welded | 1 | Y200001- |
| 5 | | 20Y-70-14520 | • Adapter,Welded | 5 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 5 | Y200001- |
| 7 | | 09244-02496 | Pin | 5 | Y200001- |
| 8 | | 205-70-74391 | Plate | 1 | Y200001- |
| 9 | | 01010-62055 | Bolt | 4 | Y200001- |
| 10 | | 01643-32060 | Washer | 4 | Y200001- |
| 11 | | 205-70-74180 | Cutter,LHS | 1 | Y200001- |
| 12 | | 205-70-74190 | Cutter,RHS | 1 | Y200001- |
| 13 | | 176-32-11210 | Bolt | 8 | Y200001- |
| 14 | | 01803-02430 | Nut | 8 | Y200001- |
| 15 | | 205-70-00100 | Shim Assembly | 1 | Y200001- |
| | C1 | | • Shim, T=1.0mm | 12 | Y200001- |
| | C1 | | • Shim, T=0.5mm | 4 | Y200001- |
| 16 | | 205-70-74381 | Spacer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-020001 Bucket, 0.8m3, 1150mm Width, Horizontal Pin Type, Strengthened

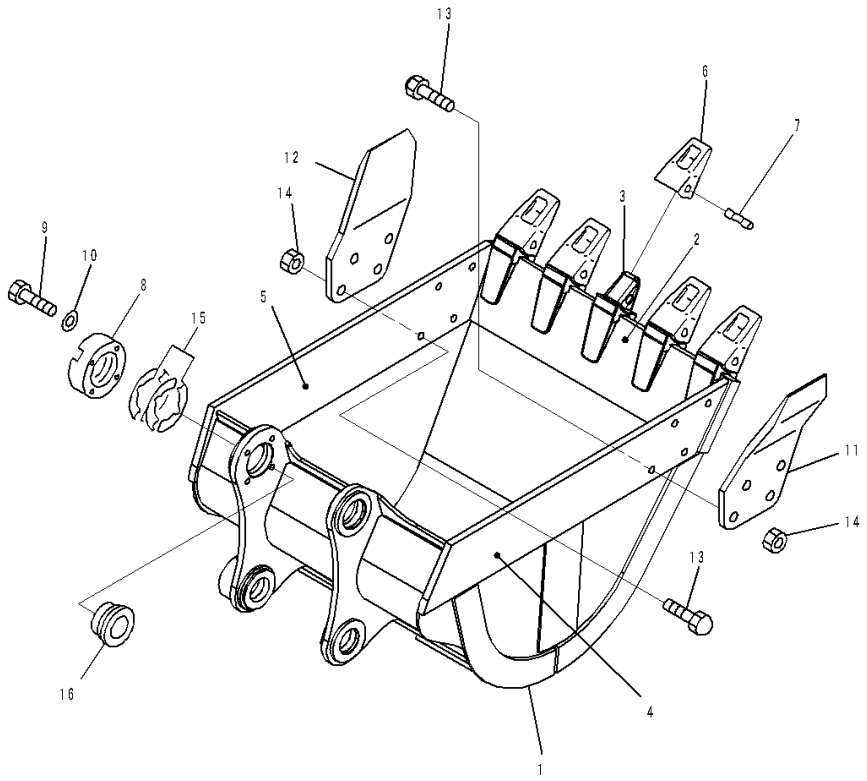


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-939-4110 | Bucket | 1 | Y200001- |
| 2 | | 20Y-939-2121 | • Plate,Welded | 1 | Y200001- |
| 3 | | 20Y-939-1180 | • Adapter,Welded | 5 | Y200001- |
| 4 | | 20Y-70-34121 | • Plate,LHS,Welded | 1 | Y200001- |
| 5 | | 20Y-70-34131 | • Plate,RHS,Welded | 1 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 5 | Y200001- |
| 7 | | 09244-02496 | Pin | 5 | Y200001- |
| 8 | | 205-70-74391 | Plate | 1 | Y200001- |
| 9 | | 01010-62055 | Bolt | 4 | Y200001- |
| 10 | | 01643-32060 | Washer | 4 | Y200001- |
| 11 | | 205-70-74180 | Cutter,LHS | 1 | Y200001- |
| 12 | | 205-70-74190 | Cutter,RHS | 1 | Y200001- |
| 13 | | 176-32-11210 | Bolt | 8 | Y200001- |
| 14 | | 01803-02430 | Nut | 8 | Y200001- |
| 15 | | 205-70-00100 | Shim Assembly | 1 | Y200001- |
| | C1 | | • Shim, T=1.0mm | 12 | Y200001- |
| | C1 | | • Shim, T=0.5mm | 4 | Y200001- |
| 16 | | 205-70-74381 | Spacer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-025001 Bucket, 0.8m3, 1150mm Width, Horizontal Pin Type, Lifting Hook

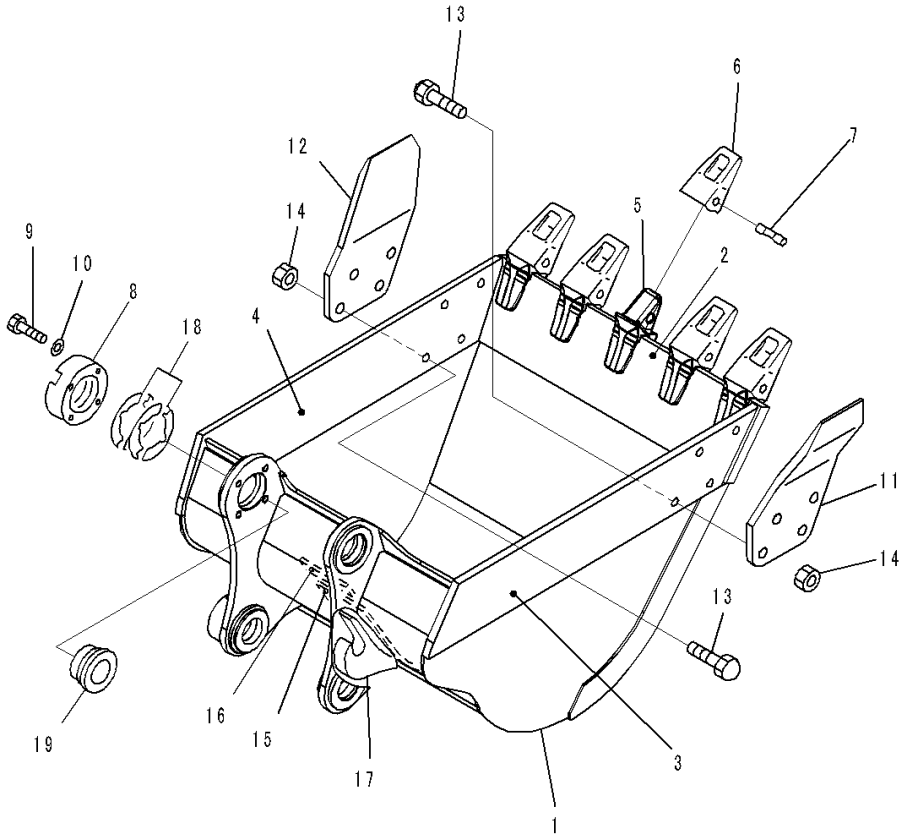


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-70-44310 | Bucket | 1 | Y200001- |
| 2 | | 20Y-70-14122 | • Plate,Welded | 1 | Y200001- |
| 3 | | 20Y-70-34121 | • Plate,LHS,Welded | 1 | Y200001- |
| 4 | | 20Y-70-34131 | • Plate,RHS,Welded | 1 | Y200001- |
| 5 | | 20Y-70-14520 | • Adapter,Welded | 5 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 5 | Y200001- |
| 7 | | 09244-02496 | Pin | 5 | Y200001- |
| 8 | | 205-70-74391 | Plate | 1 | Y200001- |
| 9 | | 01010-62055 | Bolt | 4 | Y200001- |
| 10 | | 01643-32060 | Washer | 4 | Y200001- |
| 11 | | 205-70-74180 | Cutter,LHS | 1 | Y200001- |
| 12 | | 205-70-74190 | Cutter,RHS | 1 | Y200001- |
| 13 | | 176-32-11210 | Bolt | 8 | Y200001- |
| 14 | | 01803-02430 | Nut | 8 | Y200001- |
| 15 | | 20Y-70-34240 | Plate | 1 | Y200001- |
| 16 | | 20Y-70-34250 | Plate | 1 | Y200001- |
| 17 | | 205-70-69570 | Hook | 1 | Y200001- |
| 18 | | 205-70-00100 | Shim Assembly | 1 | Y200001- |
| | C1 | | • Shim, T=1.0mm | 12 | Y200001- |
| | C1 | | • Shim, T=0.5mm | 4 | Y200001- |
| 19 | | 205-70-74381 | Spacer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-026001 Bucket, 0.8m3, 1150mm Width, Horizontal Pin Type, Lifting Hook, Strengthened

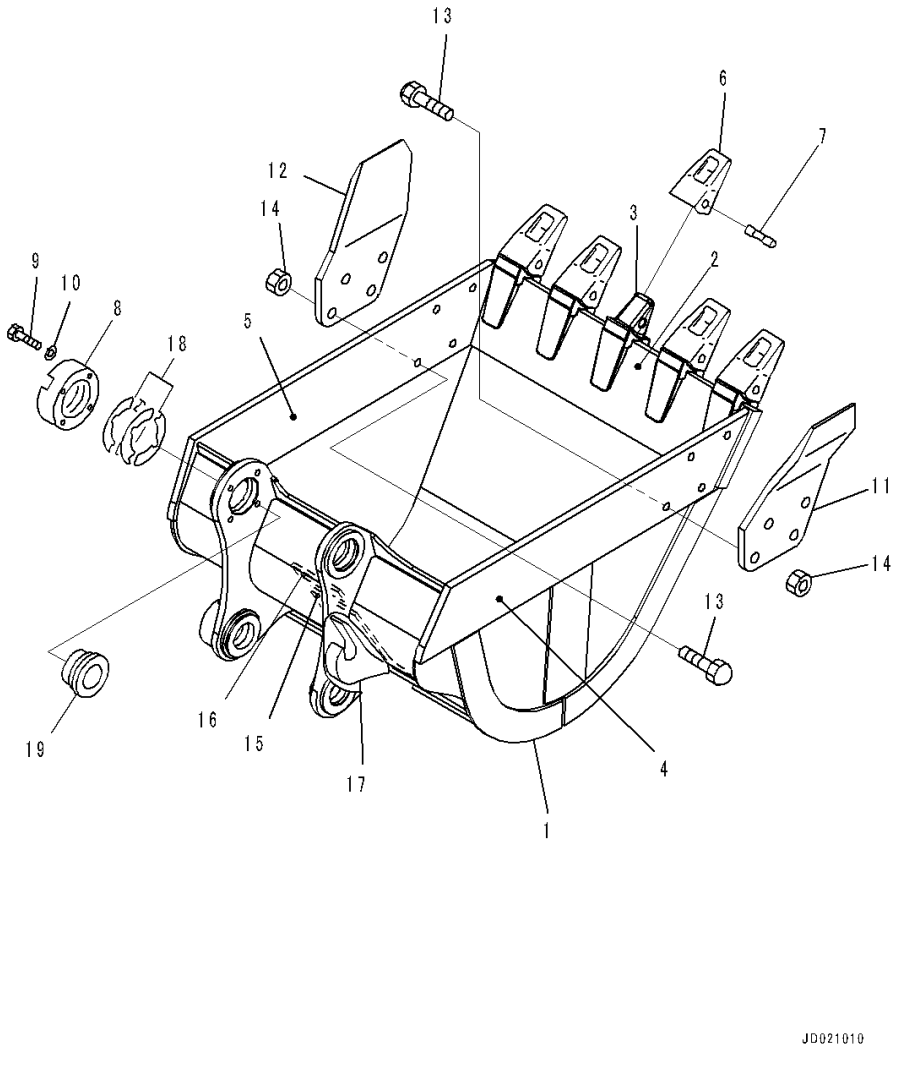


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-939-4110 | Bucket | 1 | Y200001- |
| 2 | | 20Y-939-2121 | • Plate,Welded | 1 | Y200001- |
| 3 | | 20Y-939-1180 | • Adapter,Welded | 5 | Y200001- |
| 4 | | 20Y-70-34121 | • Plate,LHS,Welded | 1 | Y200001- |
| 5 | | 20Y-70-34131 | • Plate,RHS,Welded | 1 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 5 | Y200001- |
| 7 | | 09244-02496 | Pin | 5 | Y200001- |
| 8 | | 205-70-74391 | Plate | 1 | Y200001- |
| 9 | | 01010-62055 | Bolt | 4 | Y200001- |
| 10 | | 01643-32060 | Washer | 4 | Y200001- |
| 11 | | 205-70-74180 | Cutter,LHS | 1 | Y200001- |
| 12 | | 205-70-74190 | Cutter,RHS | 1 | Y200001- |
| 13 | | 176-32-11210 | Bolt | 8 | Y200001- |
| 14 | | 01803-02430 | Nut | 8 | Y200001- |
| 15 | | 20Y-70-34240 | Plate | 1 | Y200001- |
| 16 | | 20Y-70-34250 | Plate | 1 | Y200001- |
| 17 | | 205-70-69570 | Hook | 1 | Y200001- |
| 18 | | 205-70-00100 | Shim Assembly | 1 | Y200001- |
| | C1 | | • Shim, T=1.0mm | 12 | Y200001- |
| | C1 | | • Shim, T=0.5mm | 4 | Y200001- |
| 19 | | 205-70-74381 | Spacer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-023001 Bucket, 0.9m3, 1200mm Width, Horizontal Pin Type

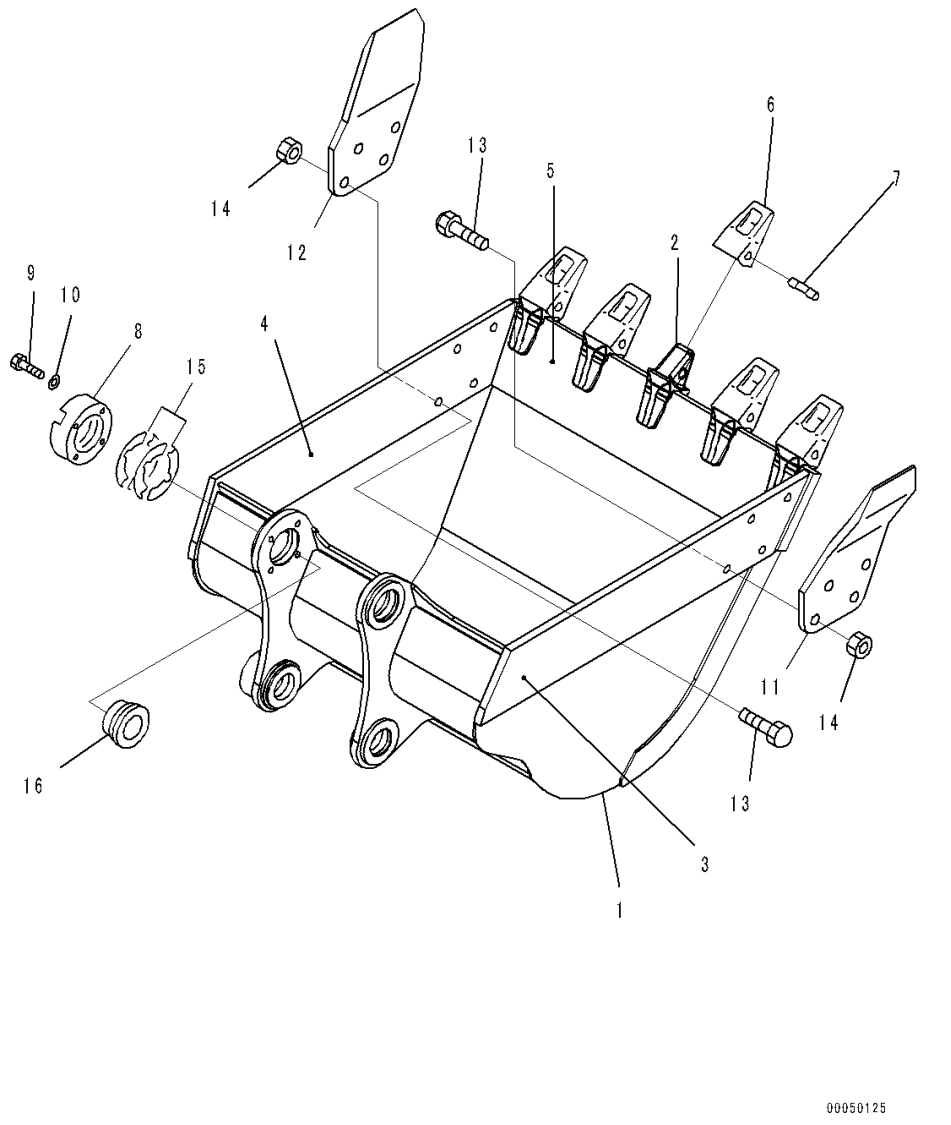


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-920-4210 | Bucket | 1 | Y200001- |
| 2 | | 20Y-70-14520 | • Adapter,Welded | 5 | Y200001- |
| 3 | | 20Y-70-34121 | • Plate,LHS,Welded | 1 | Y200001- |
| 4 | | 20Y-70-34131 | • Plate,RHS,Welded | 1 | Y200001- |
| 5 | | 20Y-920-1121 | • Plate,Welded | 1 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 5 | Y200001- |
| 7 | | 09244-02496 | Pin | 5 | Y200001- |
| 8 | | 205-70-74391 | Plate | 1 | Y200001- |
| 9 | | 01010-62055 | Bolt | 4 | Y200001- |
| 10 | | 01643-32060 | Washer | 4 | Y200001- |
| 11 | | 205-70-74180 | Cutter,LHS | 1 | Y200001- |
| 12 | | 205-70-74190 | Cutter,RHS | 1 | Y200001- |
| 13 | | 176-32-11210 | Bolt | 8 | Y200001- |
| 14 | | 01803-02430 | Nut | 8 | Y200001- |
| 15 | | 205-70-00100 | Shim Assembly | 1 | Y200001- |
| | C1 | | • Shim, T=1.0mm | 12 | Y200001- |
| | C1 | | • Shim, T=0.5mm | 4 | Y200001- |
| 16 | | 205-70-74381 | Spacer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-028001 Bucket, 0.9m3, 1200mm Width, Horizontal Pin Type, Lifting Hook

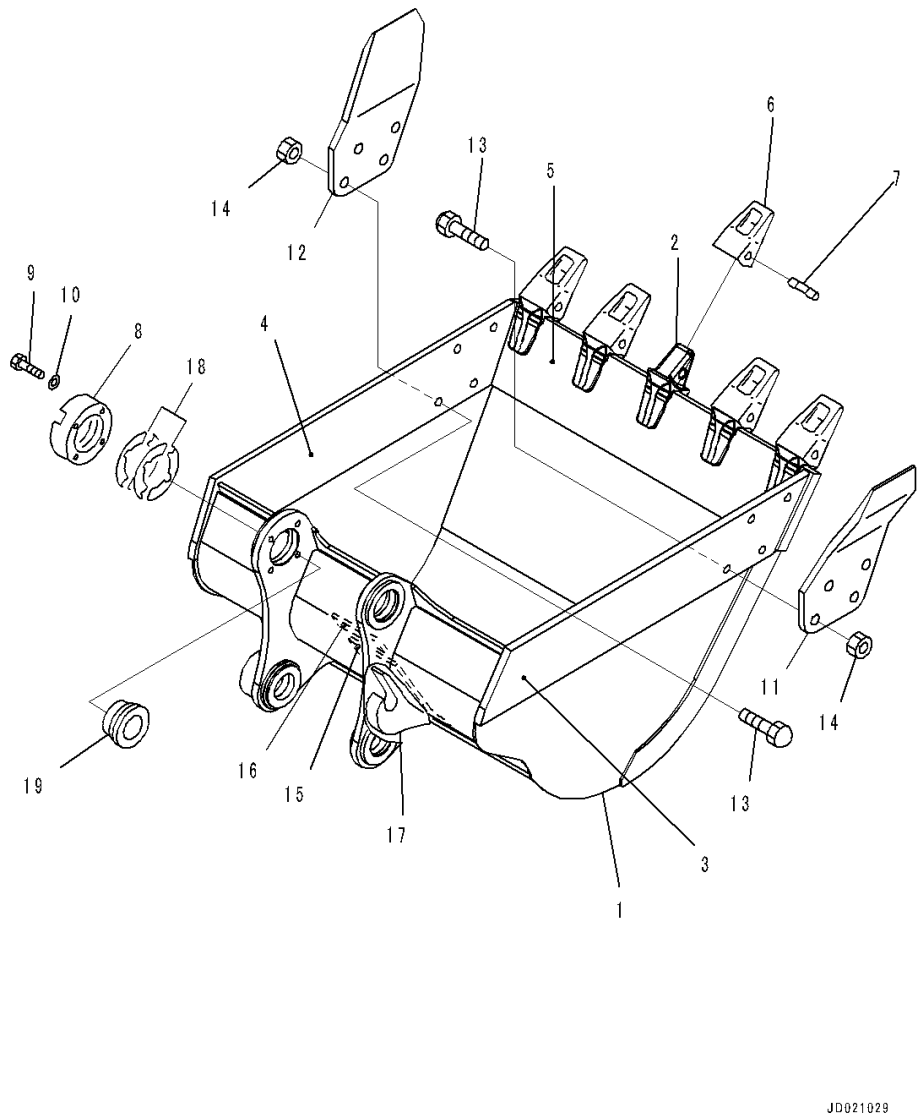


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-920-4210 | Bucket | 1 | Y200001- |
| 2 | | 20Y-70-14520 | • Adapter,Welded | 5 | Y200001- |
| 3 | | 20Y-70-34121 | • Plate,LHS,Welded | 1 | Y200001- |
| 4 | | 20Y-70-34131 | • Plate,RHS,Welded | 1 | Y200001- |
| 5 | | 20Y-920-1121 | • Plate,Welded | 1 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 5 | Y200001- |
| 7 | | 09244-02496 | Pin | 5 | Y200001- |
| 8 | | 205-70-74391 | Plate | 1 | Y200001- |
| 9 | | 01010-62055 | Bolt | 4 | Y200001- |
| 10 | | 01643-32060 | Washer | 4 | Y200001- |
| 11 | | 205-70-74180 | Cutter,LHS | 1 | Y200001- |
| 12 | | 205-70-74190 | Cutter,RHS | 1 | Y200001- |
| 13 | | 176-32-11210 | Bolt | 8 | Y200001- |
| 14 | | 01803-02430 | Nut | 8 | Y200001- |
| 15 | | 20Y-70-34240 | Plate | 1 | Y200001- |
| 16 | | 20Y-70-34250 | Plate | 1 | Y200001- |
| 17 | | 205-70-69570 | Hook | 1 | Y200001- |
| 18 | | 205-70-00100 | Shim Assembly | 1 | Y200001- |
| | C1 | | • Shim, T=1.0mm | 12 | Y200001- |
| | C1 | | • Shim, T=0.5mm | 4 | Y200001- |
| 19 | | 205-70-74381 | Spacer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-014001 Bucket, 1.0m3, 1330mm Width, Horizontal Pin Type

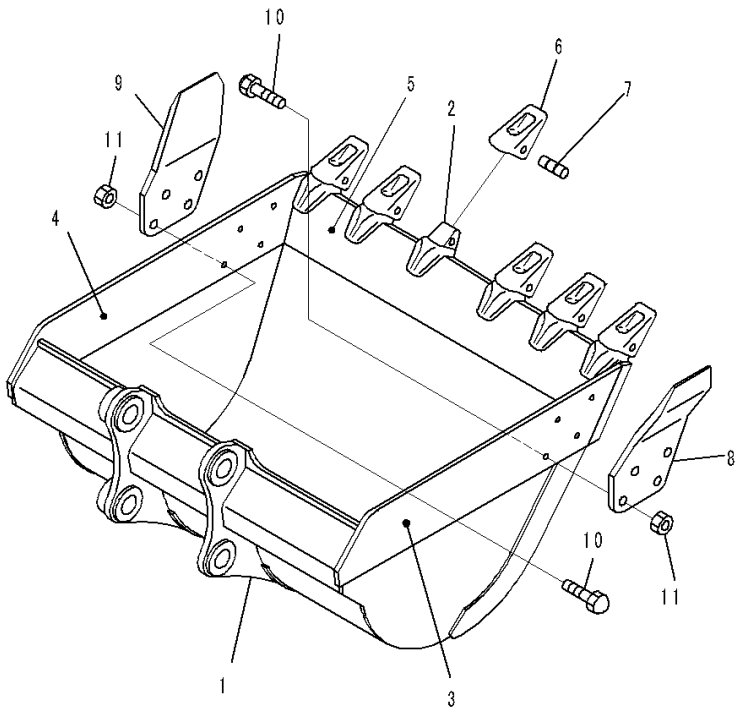


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-920-3350 | Bucket | 1 | Y200001- |
| 2 | | 20Y-70-14520 | • Adapter,Welded | 6 | Y200001- |
| 3 | | 20Y-70-34121 | • Plate,LHS,Welded | 1 | Y200001- |
| 4 | | 20Y-70-34131 | • Plate,RHS,Welded | 1 | Y200001- |
| 5 | | 20Y-920-1221 | • Plate,Welded | 1 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 6 | Y200001- |
| 7 | | 09244-02496 | Pin | 6 | Y200001- |
| 8 | | 205-70-74180 | Cutter,LHS | 1 | Y200001- |
| 9 | | 205-70-74190 | Cutter,RHS | 1 | Y200001- |
| 10 | | 176-32-11210 | Bolt | 8 | Y200001- |
| 11 | | 01803-02430 | Nut | 8 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-016001 Bucket, 1.0m3, 1330mm Width, Horizontal Pin Type, Lifting Hook

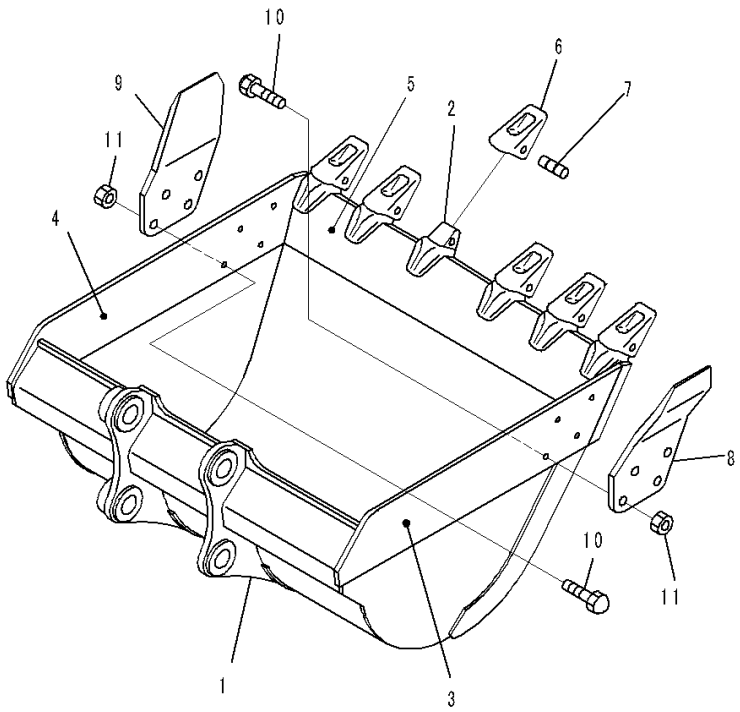


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-920-3350 | Bucket | 1 | Y200001- |
| 2 | | 20Y-70-14520 | • Adapter,Welded | 6 | Y200001- |
| 3 | | 20Y-70-34121 | • Plate,LHS,Welded | 1 | Y200001- |
| 4 | | 20Y-70-34131 | • Plate,RHS,Welded | 1 | Y200001- |
| 5 | | 20Y-920-1221 | • Plate,Welded | 1 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 6 | Y200001- |
| 7 | | 09244-02496 | Pin | 6 | Y200001- |
| 8 | | 205-70-74180 | Cutter,LHS | 1 | Y200001- |
| 9 | | 205-70-74190 | Cutter,RHS | 1 | Y200001- |
| 10 | | 176-32-11210 | Bolt | 8 | Y200001- |
| 11 | | 01803-02430 | Nut | 8 | Y200001- |

https://truckmanualshub.com/

# FIG. T1510-016002 Bucket, Hook

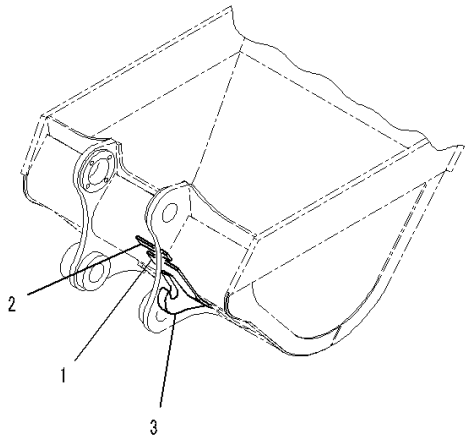



PW1E880

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-70-34240 | Plate. | 1 | Y200001- |
| 2 | | 20Y-70-34250 | Plate. | 1 | Y200001- |
| 3 | | 205-70-69570 | Hook . | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-012001 Bucket, 1.17M3, 1450mm Width, Horizontal Pin Type

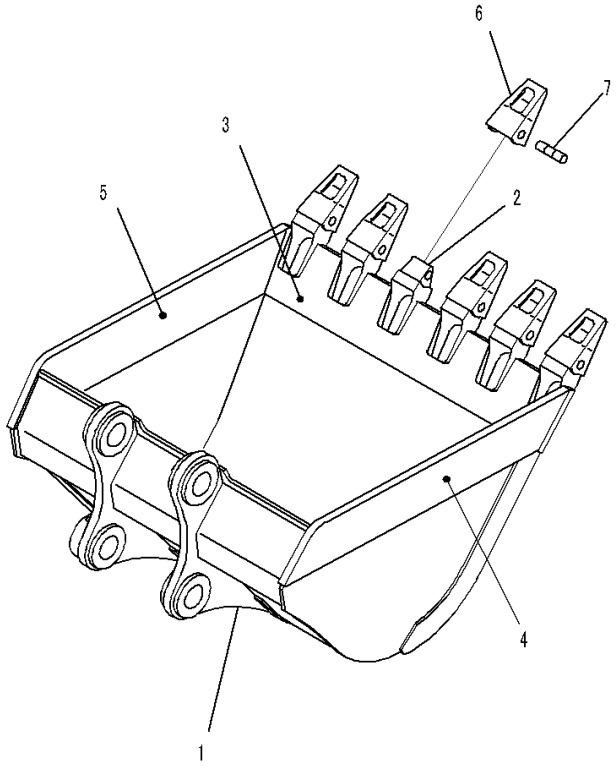


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-920-3450 | Bucket | 1 | Y200001- |
| 2 | | 20Y-70-14520 | • Adapter,Welded | 6 | Y200001- |
| 3 | | 20Y-920-3420 | • Plate,Welded | 1 | Y200001- |
| 4 | | 20Y-920-3C30 | • Plate,LHS,Welded . | 1 | Y200001- |
| 5 | | 20Y-920-3C40 | • Plate,RHS,Welded . | 1 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 6 | Y200001- |
| 7 | | 09244-02496 | Pin | 6 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-017001 Bucket, 1.17M3, 1450mm Width, Horizontal Pin Type, Lifting Hook

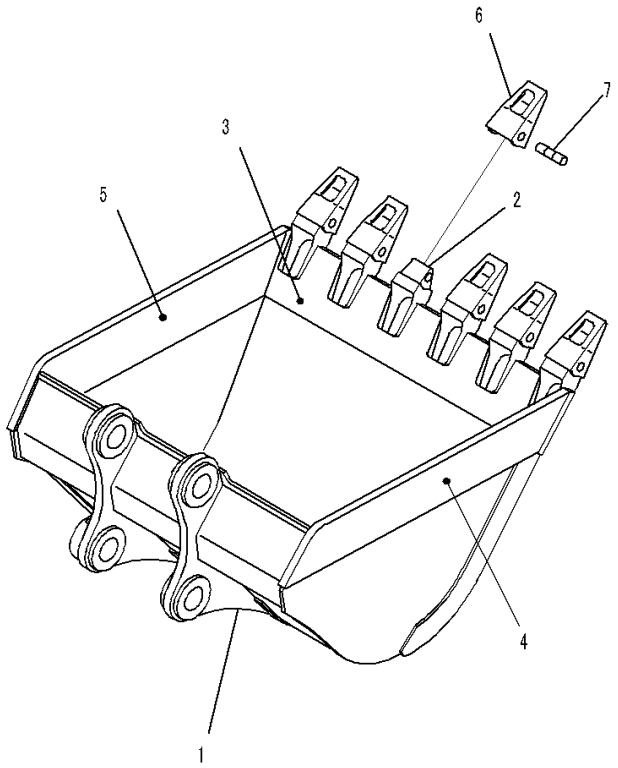


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-920-3450 | Bucket | 1 | Y200001- |
| 2 | | 20Y-70-14520 | • Adapter,Welded | 6 | Y200001- |
| 3 | | 20Y-920-3420 | • Plate,Welded | 1 | Y200001- |
| 4 | | 20Y-920-3C30 | • Plate,LHS,Welded | 1 | Y200001- |
| 5 | | 20Y-920-3C40 | • Plate,RHS,Welded | 1 | Y200001- |
| 6 | | 205-70-19570 | Tooth | 6 | Y200001- |
| 7 | | 09244-02496 | Pin | 6 | Y200001- |


https://truckmanualshub.com/

# FIG. T1510-002001 Clamshell Bucket, 0.6m3, Clamshell Type

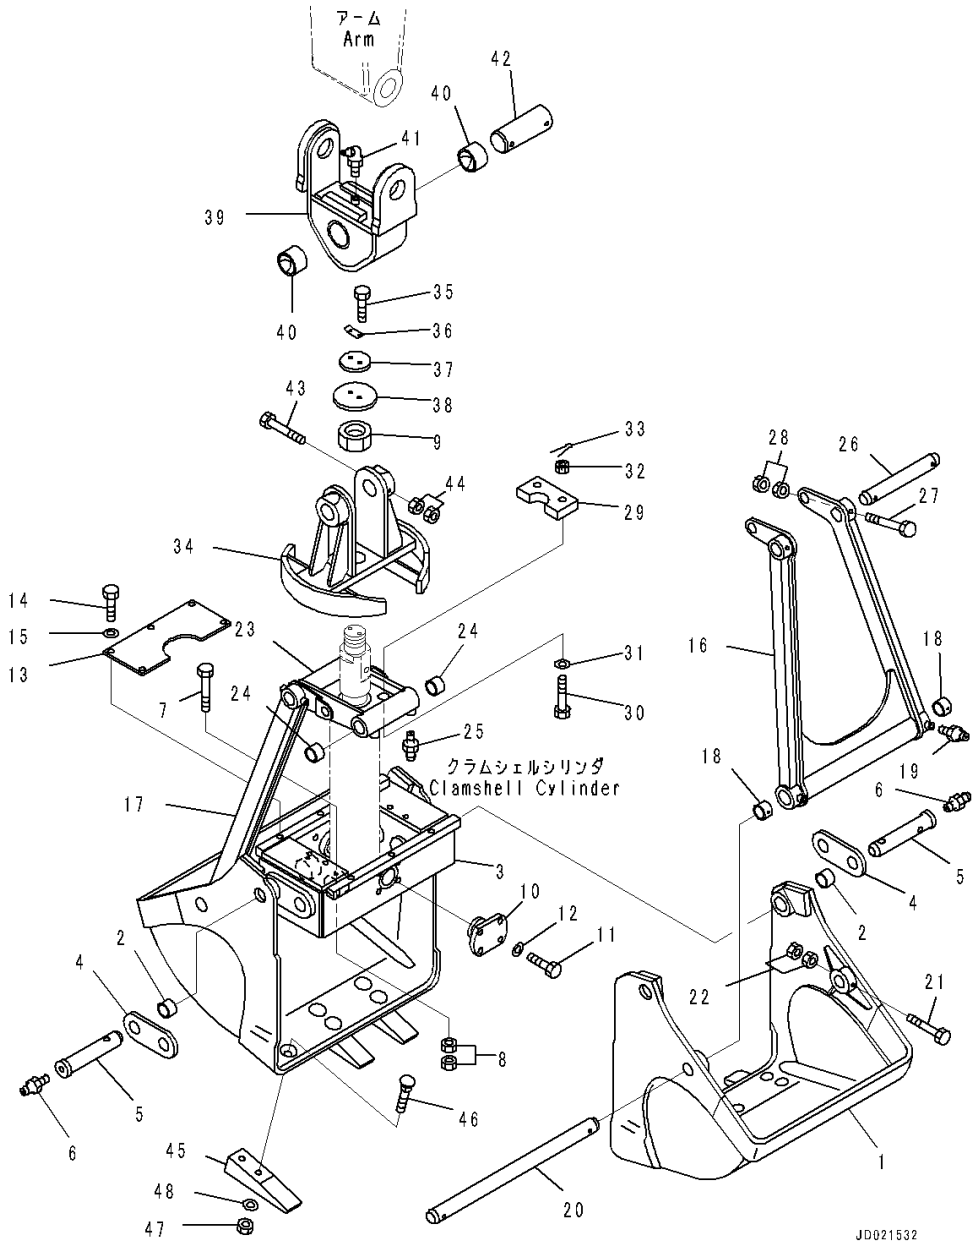


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-931-1161 | Shell | 2 | Y200001- |
| 2 | | 07143-10505 | Bushing | 4 | Y200001- |
| 3 | | 205-931-1230 | Frame | 1 | Y200001- |
| 4 | | 205-931-1240 | Plate | 2 | Y200001- |
| 5 | | 205-931-1250 | Pin | 4 | Y200001- |
| 6 | | 07020-00000 | Fitting, Grease | 4 | Y200001- |
| 7 | | 01011-81610 | Bolt | 4 | Y200001- |
| 8 | | 01580-11613 | Nut | 8 | Y200001- |
| 9 | | 205-931-2140 | Nut | 1 | Y200001- |
| 10 | | 205-931-1260 | Cap | 2 | Y200001- |
| 11 | | 01010-81450 | Bolt | 8 | Y200001- |
| 12 | | 01643-31445 | Washer | 8 | Y200001- |
| 13 | | 205-931-1270 | Cover | 2 | Y200001- |
| 14 | | 01010-81020 | Bolt | 10 | Y200001- |
| 15 | | 01643-31032 | Washer | 10 | Y200001- |
| 16 | | 205-931-1192 | Arm | 1 | Y200001- |
| 17 | | 205-931-1212 | Arm | 1 | Y200001- |
| 18 | | 07144-10505 | Bushing | 4 | Y200001- |
| 19 | | 07020-00000 | Fitting, Grease | 4 | Y200001- |
| 20 | | 205-931-1220 | Pin | 2 | Y200001- |
| 21 | | 01011-81630 | Bolt | 4 | Y200001- |
| 22 | | 01580-11613 | Nut | 8 | Y200001- |
| 23 | | 205-931-1281 | Frame | 1 | Y200001- |
| 24 | | 07144-10505 | Bushing | 4 | Y200001- |
| 25 | | 07020-00000 | Fitting, Grease | 4 | Y200001- |
| 26 | | 205-931-1290 | Pin | 2 | Y200001- |
| 27 | | 01011-81610 | Bolt | 4 | Y200001- |
| 28 | | 01580-11613 | Nut | 8 | Y200001- |
| 29 | | 205-931-1310 | Plate | 2 | Y200001- |
| 30 | | 01013-83010 | Bolt | 4 | Y200001- |
| 31 | | 01643-33080 | Washer | 4 | Y200001- |
| 32 | | 01590-33033 | Nut, Slotted | 4 | Y200001- |
| 33 | | 04050-16055 | Pin, Cotter | 4 | Y200001- |
| 34 | | 205-931-1122 | Hanger | 1 | Y200001- |
| 35 | | 01010-81230 | Bolt | 2 | Y200001- |
| 36 | | 04081-06012 | Lock | 1 | Y200001- |
| 37 | | 205-931-1330 | Holder | 1 | Y200001- |
| 38 | | 205-931-1320 | Plate | 1 | Y200001- |
| 39 | | 205-931-6110 | Bracket | 1 | Y200001- |


# FIG. T1510-002001 Clamshell Bucket, 0.6m3, Clamshell Type

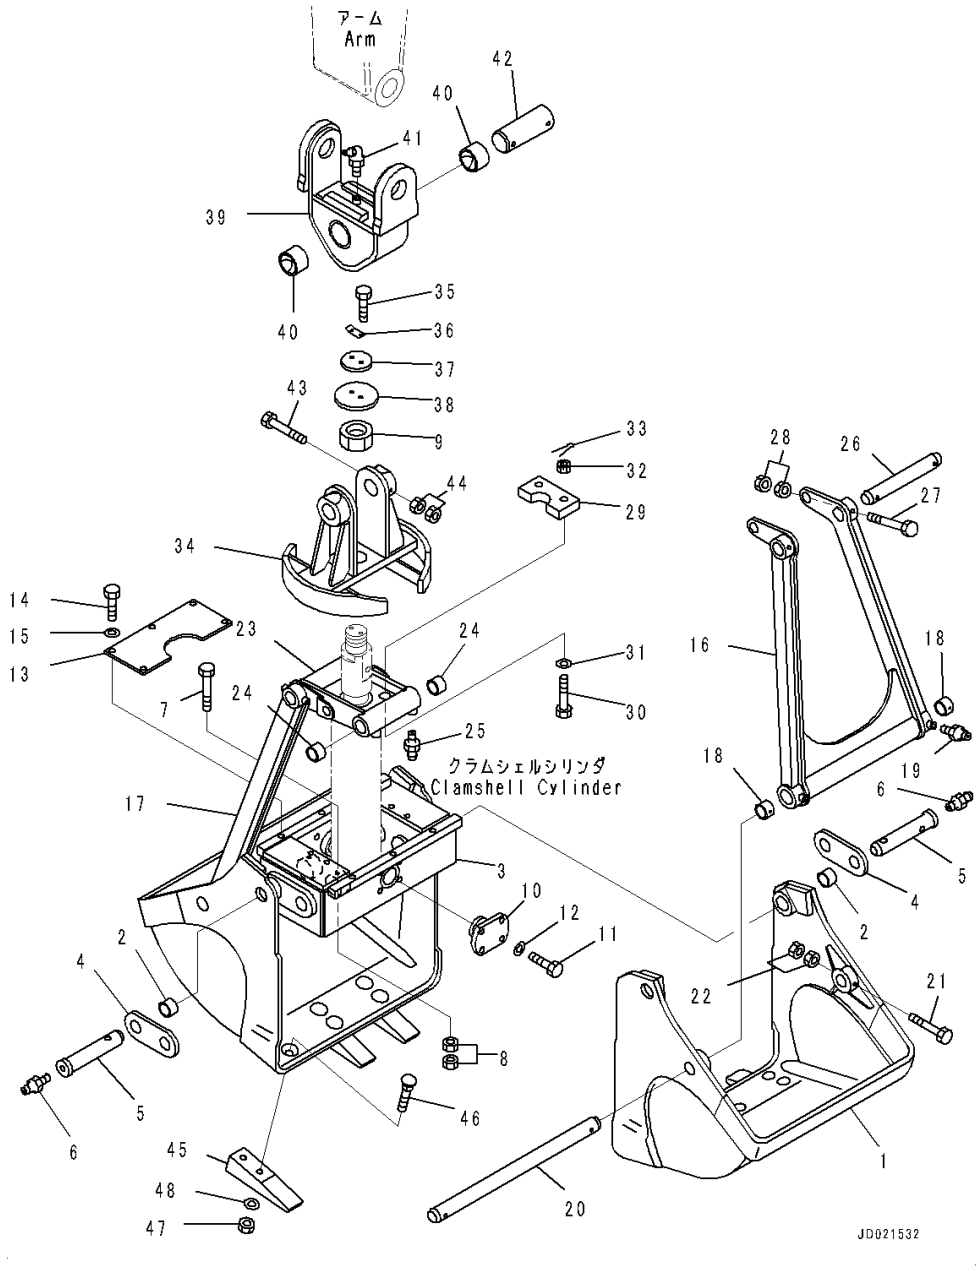


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 205-931-6150 | Bushing | 2 | Y200001- |
| 41 | | 07020-00675 | Fitting, Grease | 1 | Y200001- |
| 42 | | 205-931-1130 | Pin | 1 | Y200001- |
| 43 | | 01011-81650 | Bolt | 2 | Y200001- |
| 44 | | 01580-11613 | Nut | 4 | Y200001- |
| 45 | | 202-931-1180 | Tooth | 6 | Y200001- |
| 46 | | 02090-11285 | Bolt | 12 | Y200001- |
| 47 | | 02290-11219 | Nut | 12 | Y200001- |
| 48 | | 01643-32060 | Washer | 12 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-002002 Clamshell Bucket, 0.6m3, Clamshell Type, Inner Parts, Blade Angle Cylinder

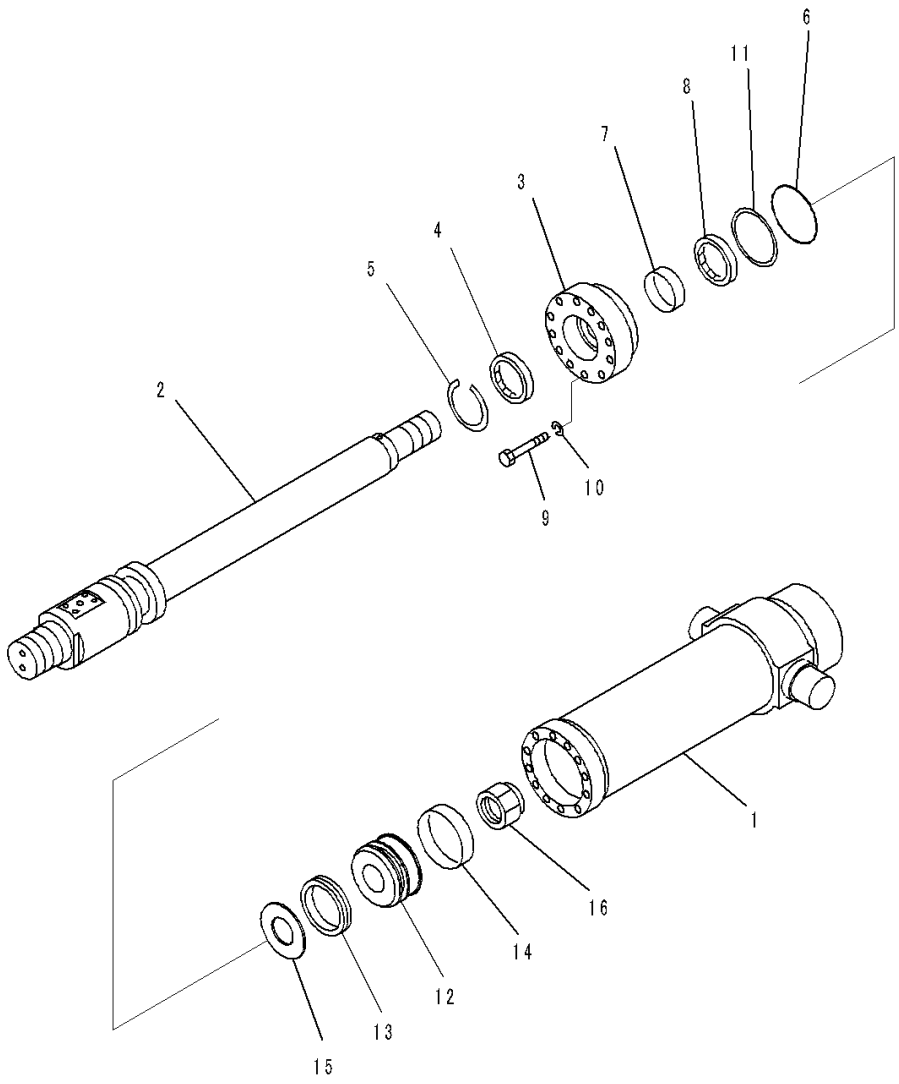


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 205-63-94100 | Cylinder Assembly | 1 | Y200001- |
| 1 | | 205-63-94140 | • Cylinder | 1 | Y200001- |
| 2 | | 205-63-94120 | • Rod | 1 | Y200001- |
| 3 | | 707-27-13010 | • Head, Cylinder | 1 | Y200001- |
| 4 | | 195-63-92190 | • Seal, Dust | 1 | Y200001- |
| 5 | | 07179-00103 | • Ring, Snap | 1 | Y200001- |
| 6 | | 07000-12125 | • O-ring | 1 | Y200001- |
| 7 | | 707-52-15530 | • Bushing | 1 | Y200001- |
| 8 | | 707-51-80211 | • Packing | 1 | Y200001- |
| 9 | | 01010-81675 | • Bolt | 12 | Y200001- |
| 10 | | 01602-21648 | • Washer, Spring | 12 | Y200001- |
| 11 | | 07146-02126 | • Ring, Back-up | 1 | Y200001- |
| 12 | | 205-63-55171 | • Piston | 1 | Y200001- |
| 13 | | 707-44-13180 | • Ring, Piston | 1 | Y200001- |
| 14 | | 07155-01330 | • Ring, Wear | 1 | Y200001- |
| 15 | | 707-41-10120 | • Washer | 1 | Y200001- |
| 16 | | 07165-15860 | • Nut, Nylon Lock | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-002003 Clamshell Bucket, 0.6m3, Clamshell Type, Bucket Cylinder Pin

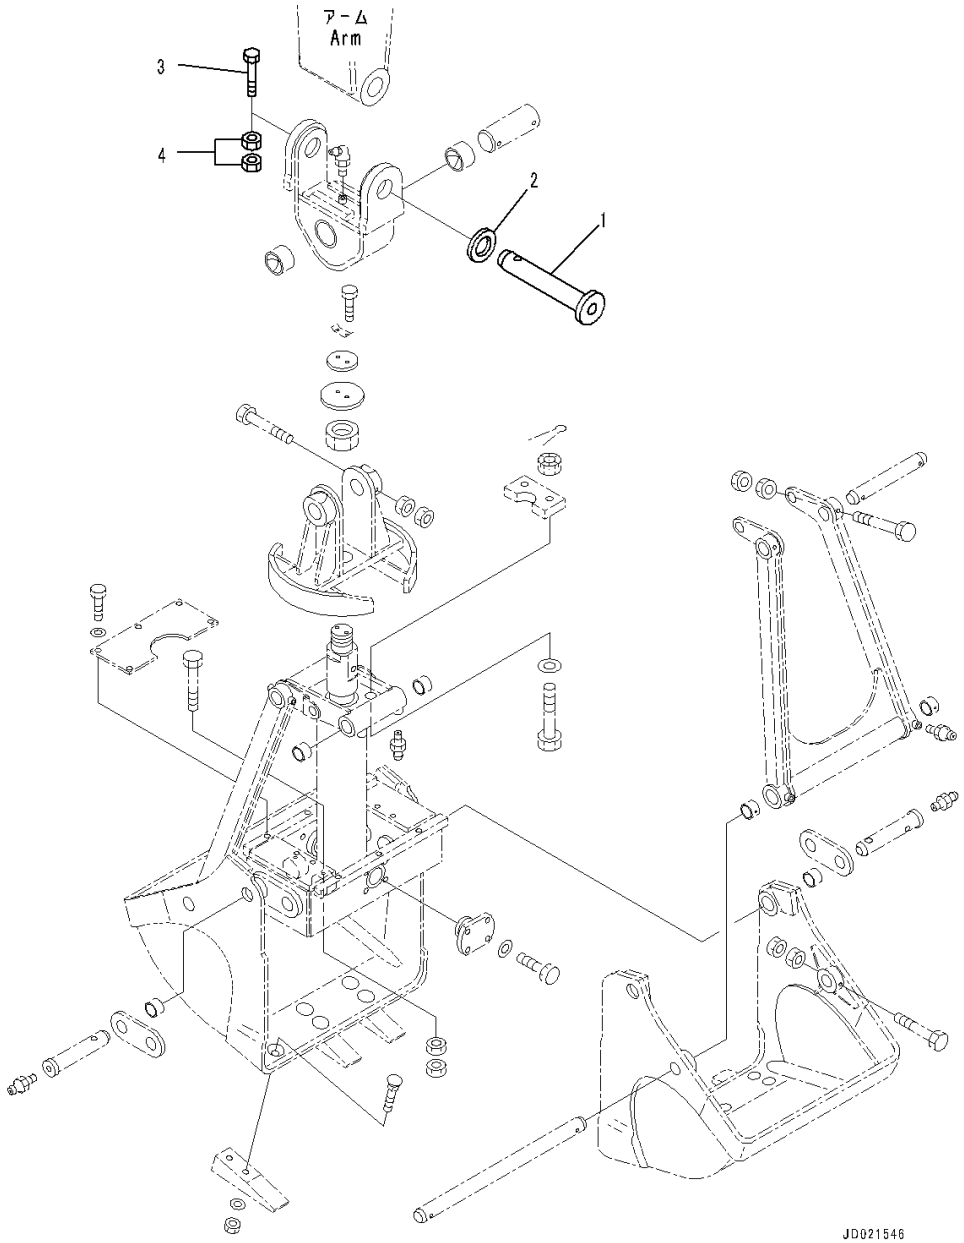


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-70-73270 | Pin | 1 | Y200001- |
| 2 | | 205-70-74410 | Collar | 1 | Y200001- |
| 3 | | 205-70-73190 | Bolt | 2 | Y200001- |
| 4 | | 01580-12016 | Nut | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-005001 Ripper Bucket, 0.61m3, 950mm Width

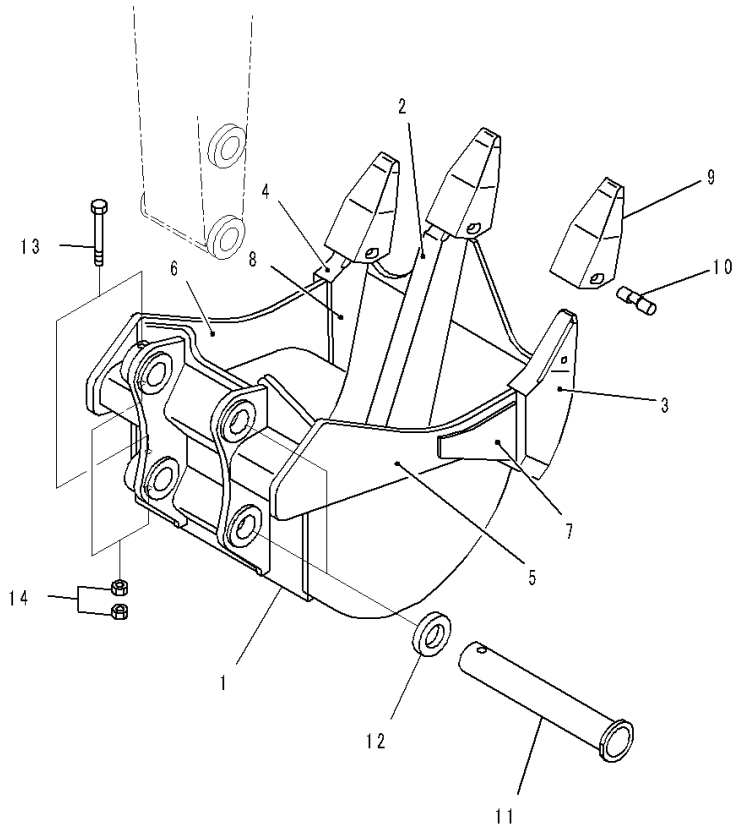


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-922-6210 | Bucket | 1 | Y200001- |
| 2 | | 205-922-1120 | • Shank,Welded | 1 | Y200001- |
| 3 | | 205-922-1130 | • Adapter,LHS,Welded | 1 | Y200001- |
| 4 | | 205-922-1140 | • Adapter,RHS,Welded | 1 | Y200001- |
| 5 | | 205-922-1150 | • Plate,LHS,Welded | 1 | Y200001- |
| 6 | | 205-922-1160 | • Plate,RHS,Welded | 1 | Y200001- |
| 7 | | 205-922-1170 | • Plate,LHS,Welded | 1 | Y200001- |
| 8 | | 205-922-1180 | • Plate,RHS,Welded | 1 | Y200001- |
| 9 | | 175-78-31230 | Point | 3 | Y200001- |
| 10 | | 09244-02508 | Pin | 3 | Y200001- |
| 11 | | 205-70-73270 | Pin | 1 | Y200001- |
| 12 | | 205-70-74410 | Collar | 1 | Y200001- |
| 13 | | 205-70-73190 | Bolt | 2 | Y200001- |
| 14 | | 01580-12016 | Nut | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-006001 Slope Finishing Bucket, Slope Finishing Type

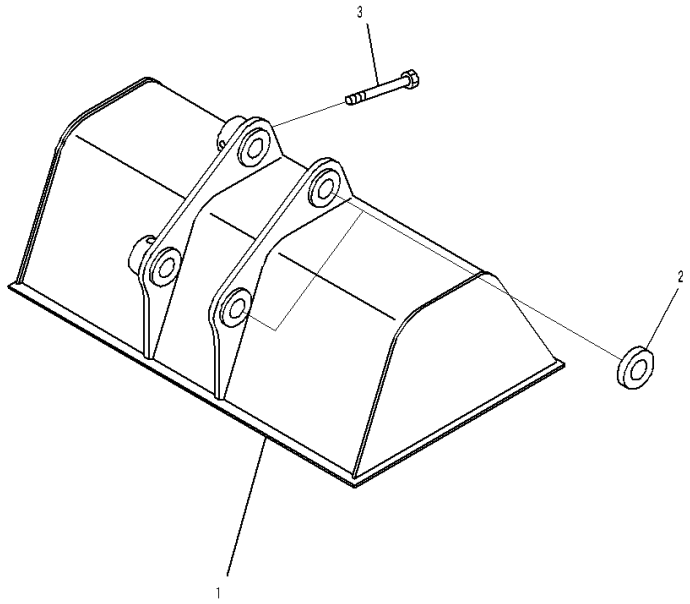


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-928-6110 | Bucket. | 1 | Y200001- |
| 2 | | 205-70-74410 | Collar . | 2 | Y200001- |
| 3 | | 205-70-73190 | Bolt. | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-008001 Ditch Cleaning Bucket, 0.8m3, 1800mm Width, Ditch Cleaning Type

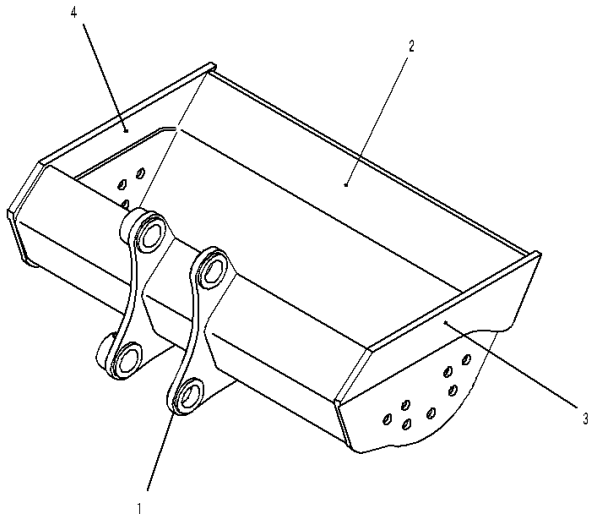


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-938-7111 | Bucket | 1 | Y200001- |
| 2 | | 205-938-6220 | • Plate | 1 | Y200001- |
| 3 | | 205-938-6230 | • Plate,LHS,Welded | 1 | Y200001- |
| 4 | | 205-938-6240 | • Plate,RHS,Welded | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-009001 Ripper, Single Shank Type

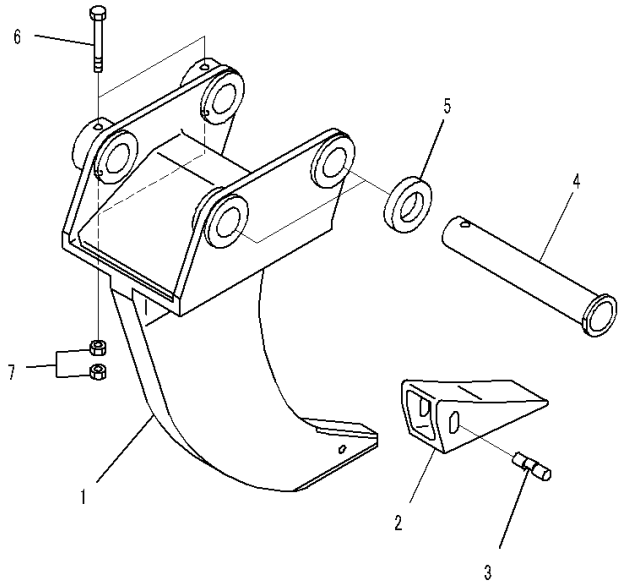


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 205-950-0012 | Ripper Assembly. | 1 | Y200001- |
| 1 | C1 | | • Ripper. | 1 | Y200001- |
| 2 | | 175-78-31230 | • Point . | 3 | Y200001- |
| 3 | | 09244-02508 | • Pin . | 3 | Y200001- |
| 4 | | 205-70-73270 | Pin. | 1 | Y200001- |
| 5 | | 205-70-74410 | Collar . | 1 | Y200001- |
| 6 | | 205-70-73190 | Bolt. | 2 | Y200001- |
| 7 | | 01580-12016 | Nut . | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-010001 Ripper, Three Shank Type

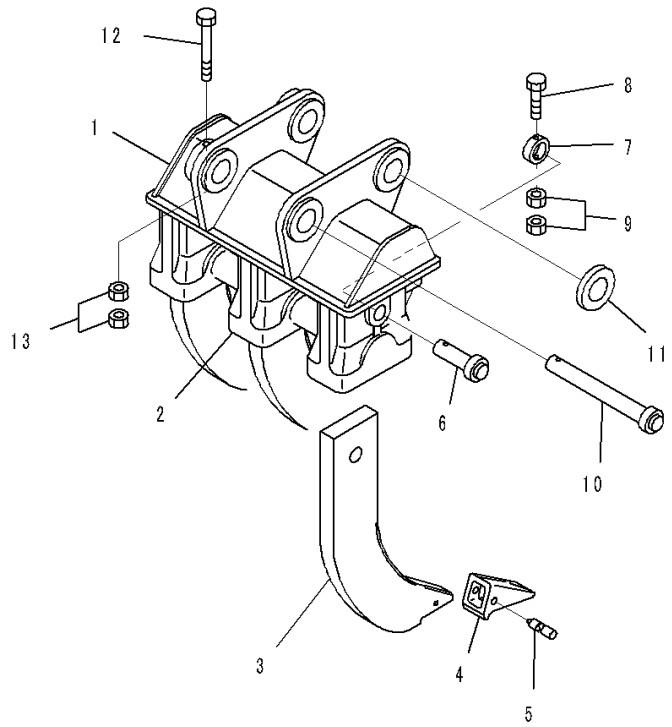


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 205-951-0013 | Ripper Assembly | 1 | Y200001- |
| 1 | C1 | | • Bracket | 1 | Y200001- |
| 2 | | 205-951-6120 | •• Holder | 3 | Y200001- |
| | | 205-951-0020 | • Shank Assembly | 3 | Y200001- |
| 3 | C1 | | •• Shank | 1 | Y200001- |
| 4 | | 131-78-31190 | •• Point | 1 | Y200001- |
| 5 | | 09244-02489 | •• Pin | 1 | Y200001- |
| 6 | | 205-951-6140 | • Pin | 3 | Y200001- |
| 7 | | 205-951-6150 | • Collar | 3 | Y200001- |
| 8 | | 01019-11205 | • Bolt | 3 | Y200001- |
| 9 | | 01580-11210 | • Nut | 6 | Y200001- |
| 10 | | 205-70-73270 | Pin | 1 | Y200001- |
| 11 | | 205-70-74410 | Collar | 1 | Y200001- |
| 12 | | 205-70-73190 | Bolt | 2 | Y200001- |
| 13 | | 01580-12016 | Nut | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1510-007001 Trapezoidal Bucket, Trapezoidal Type

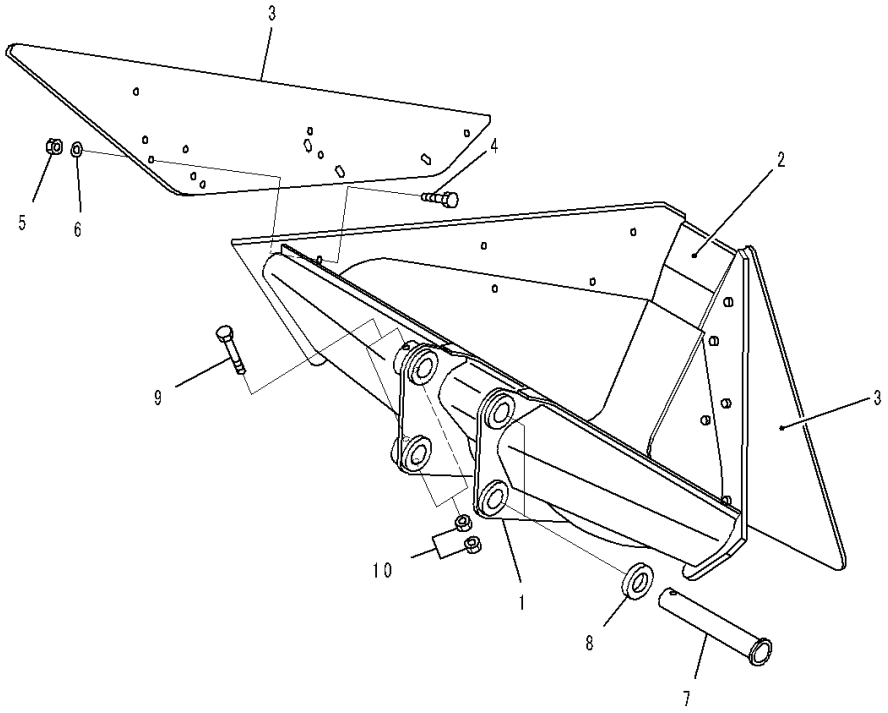


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 205-929-6210 | Bucket | 1 | Y200001- |
| 2 | | 205-929-6120 | • Plate,Welded | 1 | Y200001- |
| 3 | | 205-929-6130 | Plate | 2 | Y200001- |
| 4 | | 01010-82460 | Bolt | 12 | Y200001- |
| 5 | | 01580-12419 | Nut | 12 | Y200001- |
| 6 | | 01643-32460 | Washer | 12 | Y200001- |
| 7 | | 205-70-73270 | Pin | 1 | Y200001- |
| 8 | | 205-70-74410 | Collar | 1 | Y200001- |
| 9 | | 205-70-73190 | Bolt | 2 | Y200001- |
| 10 | | 01580-12016 | Nut | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. T1920-006001 Breaker Adapter, Accumulator Related Part

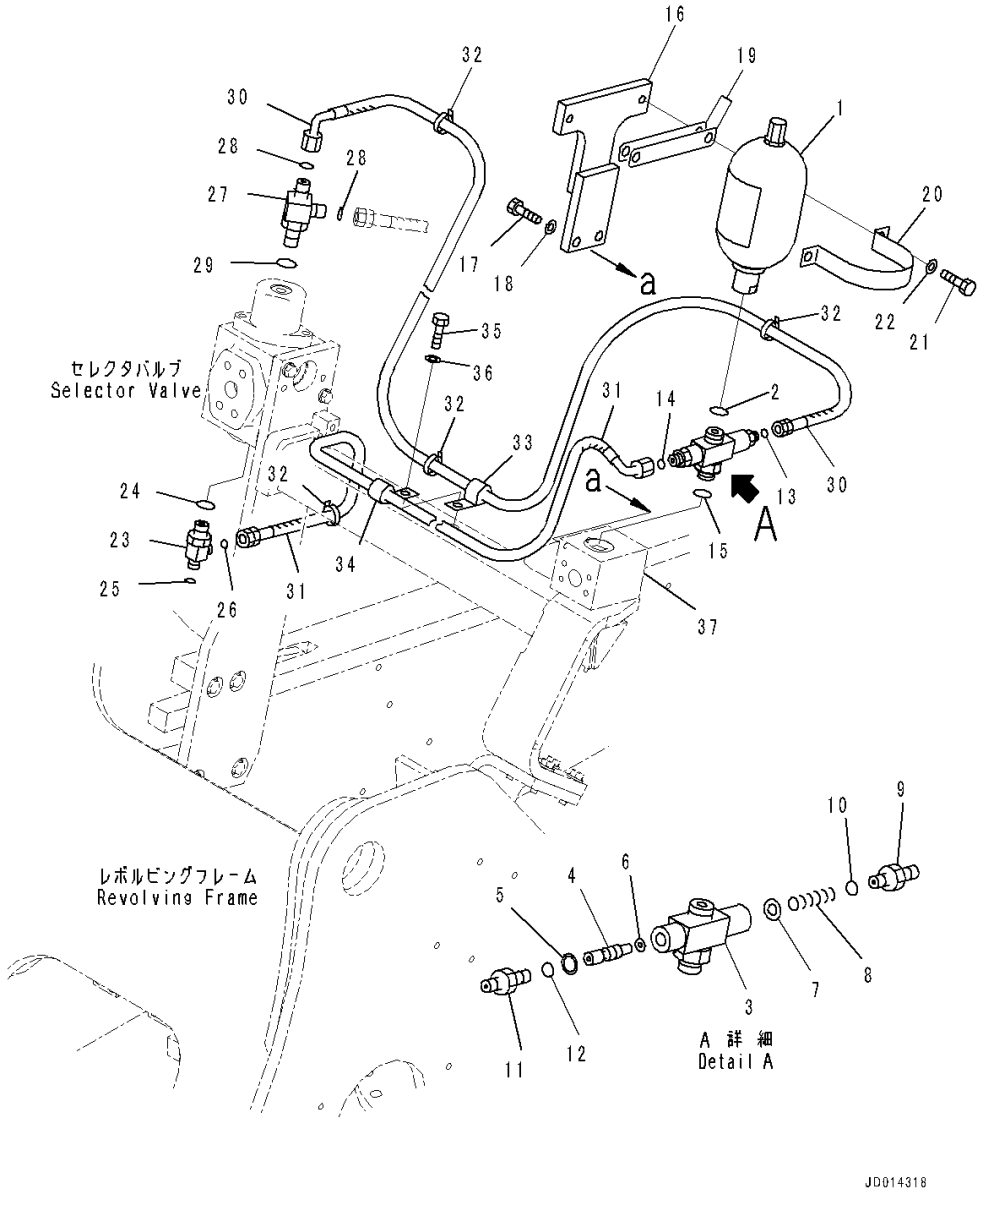


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-970-6440 | Accumulator Assembly | 1 | Y200001- |
| 2 | | 205-970-5560 | • O-ring | 1 | Y200001- |
| | | 20Y-62-31400 | Valve | 1 | Y200001- |
| 3 | C1 | | • Body | 1 | Y200001- |
| 4 | | 20Y-62-31321 | • Spool | 1 | Y200001- |
| 5 | | 22U-62-32790 | • Seal | 1 | Y200001- |
| 6 | | 708-1S-15390 | • Seal | 1 | Y200001- |
| 7 | | 01643-51032 | • Washer | 1 | Y200001- |
| 8 | | 723-26-14240 | • Spring | 1 | Y200001- |
| 9 | | 20Y-62-31331 | • Nipple | 1 | Y200001- |
| 10 | | 07002-12034 | • O-ring | 1 | Y200001- |
| 11 | | 02781-00313 | • Union | 1 | Y200001- |
| 12 | | 07002-11823 | • O-ring | 1 | Y200001- |
| 13 | | 02896-11008 | O-ring | 1 | Y200001- |
| 14 | | 02896-11009 | O-ring | 1 | Y200001- |
| 15 | | 07002-12434 | O-ring | 1 | Y200001- |
| 16 | | 20Y-62-43251 | Bracket | 1 | Y200001- |
| 17 | | 01010-81235 | Bolt | 2 | Y200001- |
| 18 | | 01643-31232 | Washer | 2 | Y200001- |
| 19 | | 20Y-62-47790 | Plate | 2 | Y200001- |
| 20 | | 175-61-51750 | Plate | 1 | Y200001- |
| 21 | | 01010-81225 | Bolt | 2 | Y200001- |
| 22 | | 01643-31232 | Washer | 2 | Y200001- |
| 23 | | 20U-Y14-7540 | Tee | 1 | Y200001- |
| 24 | | 07002-12034 | O-ring | 1 | Y200001- |
| 25 | | 02896-11008 | O-ring | 1 | Y200001- |
| 26 | | 02896-11009 | O-ring | 1 | Y200001- |
| 27 | | 11Y-62-12330 | Tee | 1 | Y200001- |
| 28 | | 02896-11008 | O-ring | 2 | Y200001- |
| 29 | | 07002-11423 | O-ring | 1 | Y200001- |
| 30 | | 02761-00210 | Hose, Face Seal Type | 1 | Y200001- |
| 31 | | 02761-00310 | Hose, Face Seal Type | 1 | Y200001- |
| 32 | | 08034-00519 | Band | 4 | Y200001- |
| 33 | | 04434-51212 | Clip | 1 | Y200001- |
| 34 | | 04434-51512 | Clip | 1 | Y200001- |
| 35 | | 01010-81225 | Bolt | 1 | Y200001- |
| 36 | | 01643-31232 | Washer | 1 | Y200001- |
| 37 | | (20Y-62-51580) | Block(Refer to Page 346) | | - |
| | | (20Y-62-51580) | Block(Refer to Page 354) | | - |

https://truckmanualshub.com/

# FIG. T1920-005002 Breaker Adapter, For KRUPP, Adapter

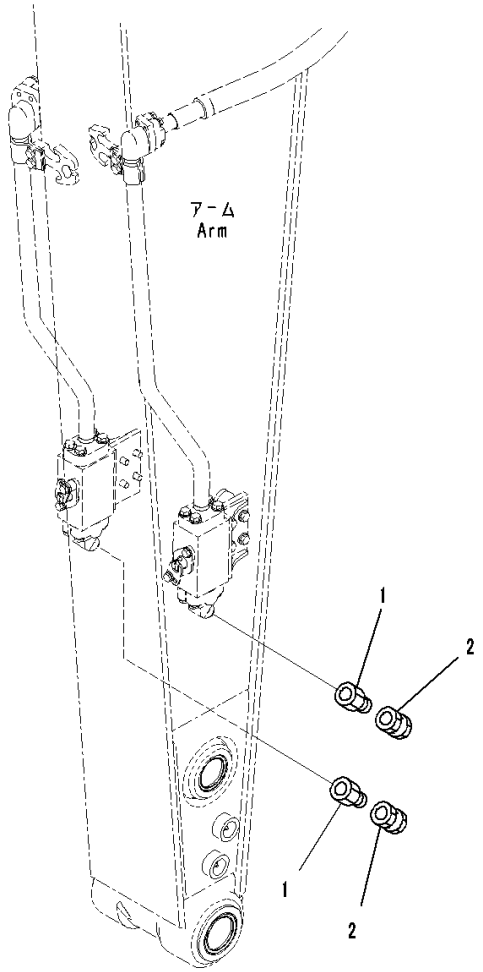



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-970-7130 | Adapter ..... | 2 | Y200001- |
| 2 | | 205-970-7680 | Cap ..... | 2 | Y200001- |

# MARKS AND PLATES

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. U0100-010001 Marks And Name Plates, Russian, Pictorial Type

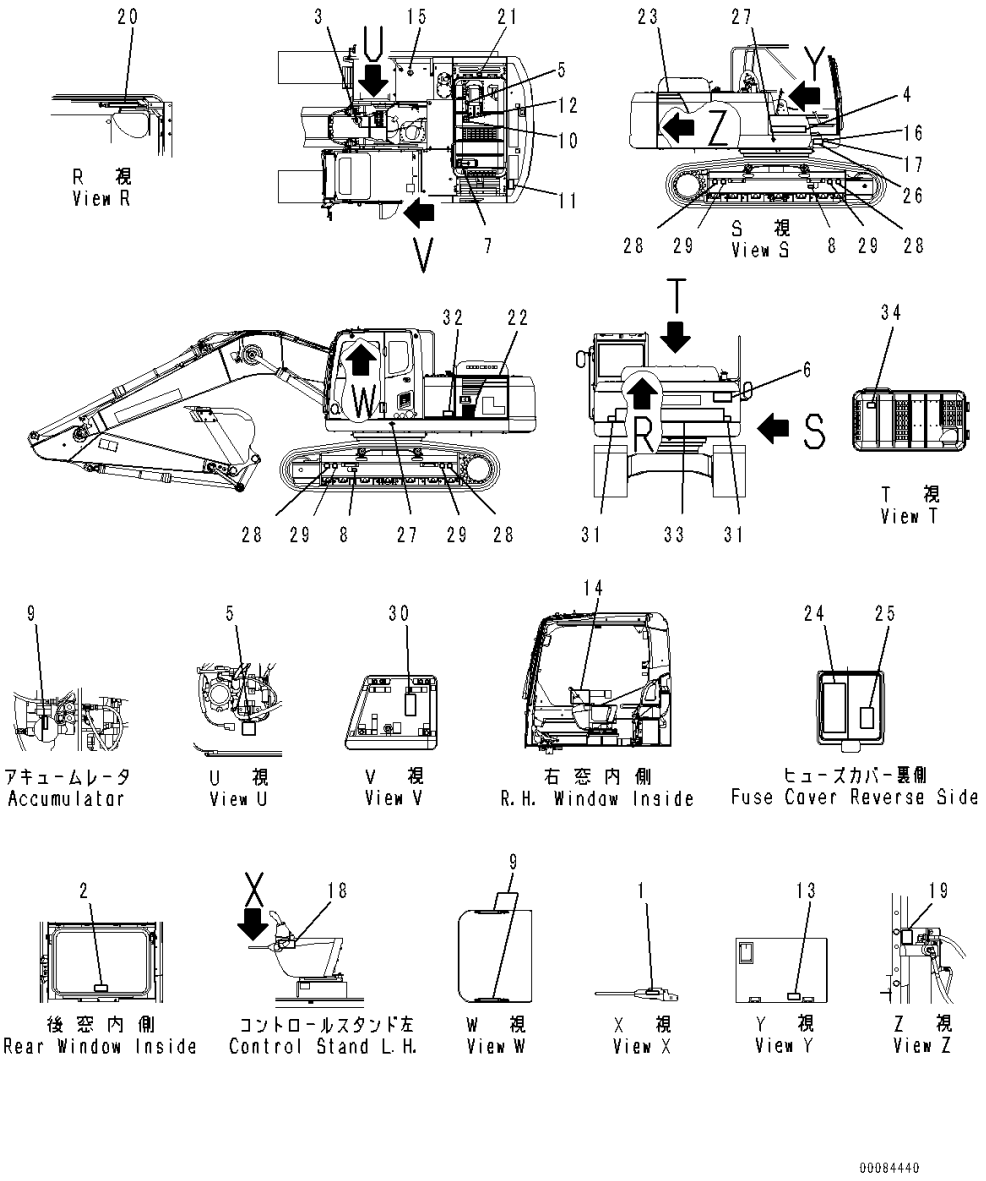


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09685-00002 | Plate, Symbol, Lock | 1 | Y200001- |
| 2 | | 09844-00050 | Plate, Safety . | 1 | Y200001- |
| 3 | | 09690-B0063 | Mark. | 1 | Y200001- |
| 4 | | 09690-P0630 | Plate, Mark. | 1 | Y200001- |
| 5 | | 09842-A0481 | Plate, Caution, No Jump Start . | 2 | Y200001- |
| 6 | | 09133-A3281 | Plate, Safety | 1 | Y200001- |
| 7 | | 09653-A0481 | Plate, Warning, High Temperature, Safety . | 2 | Y200001- |
| 8 | | 09657-A0881 | Plate, Safety | 2 | Y200001- |
| 9 | | 09659-A057B | Plate, Warning, Explosive Hazard, Safety | 3 | Y200001- |
| 10 | | 09667-A0481 | Plate, Caution, Rotating Object, Safety .. | 1 | Y200001- |
| 11 | | 09805-A0881 | Plate, Caution, Fender, Safety. | 1 | Y200001- |
| 12 | | 09805-C0481 | Plate, Safety . | 1 | Y200001- |
| 13 | | 09808-A0881 | Plate, Warning, Battery Cables, Safety... | 1 | Y200001- |
| 14 | | 22U-00-21442 | Plate. | 1 | Y200001- |
| 15 | | 09669-0000E | Plate, Symbol, Fuel Filler | 1 | Y200001- |
| 16 | C2 | 09601-30KK2 | Plate, Name (Limited Supply) | 1 | Y200001- |
| 17 | | 04418-13060 | Screw. | 4 | Y200001- |
| 18 | | 09963-A1640 | Tag, Danger, Do Not Operate. | 1 | Y200001- |
| 19 | | 20Y-00-41740 | Plate. | 1 | Y200001- |
| 20 | | 09659-A057B | Plate, Warning, Explosive Hazard, Safety | 2 | Y200001- |
| 21 | | 09805-C0481 | Plate, Safety . | 1 | Y200001- |
| 22 | | 20Y-00-41111 | Plate. | 1 | Y200001- |
| 23 | | 20Y-00-41121 | Plate. | 1 | Y200001- |
| 24 | | 20Y-00-41720 | Plate. | 1 | Y200001- |
| 25 | | 20Y-00-31970 | Plate. | 1 | Y200001- |
| 26 | | 20Y-00-31840 | Plate. | 1 | Y200001- |
| 27 | | 21U-98-31160 | Plate, Mark, Location Of Center Of Gravity | 2 | Y200001- |
| 28 | | 09960-00801 | Decal, Lift Point Mark | 4 | Y200001- |
| 29 | | 09960-00802 | Decal, Tie Down Point Mark | 4 | Y200001- |
| 30 | | 208-00-71450 | Plate | 1 | Y200001- |
| 31 | | 14X-98-35181 | Plate, Reflector | 2 | Y200001- |
| 32 | | 20Y-00-41530 | Plate, Symbol, Ecot3 | 1 | Y200001- |
| 33 | | 20Y-00-22950 | Plate, Mark | 1 | Y200001- |
| 34 | | 20Y-00-41490 | Plate | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. U0110-003001 Lubrication Chart, English, 100 Hours Greasing Type

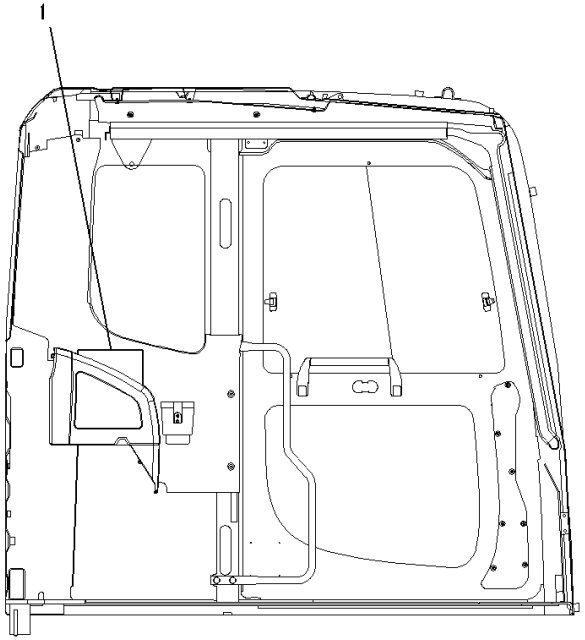



左ドアー内側
L. H. Door Inside

00045814

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-00-41540 | Plate. ..... | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. U0120-011001 Caution Plates, Russian

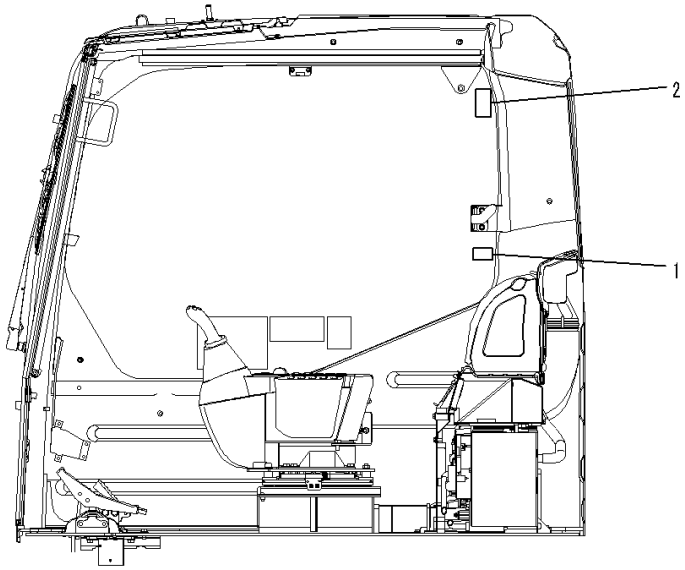


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-00-41730 | Plate | 1 | Y200001- |
| 2 | | 09803-A0481 | Plate, Safety | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. U0150-002001 Komatsu Logo, Boom And Counter Weight

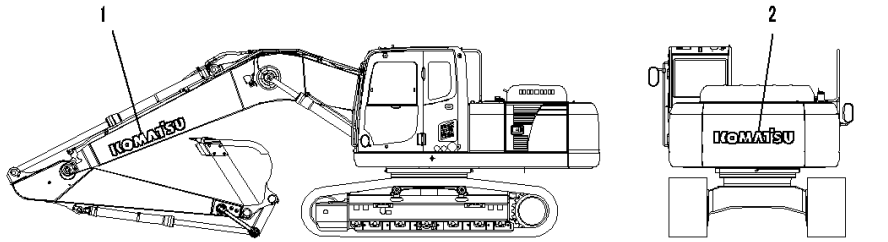


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09690-P1250 | Plate, Mark..... | 2 | Y200001- |
| 2 | | 09690-P1250 | Plate, Mark..... | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. U0202-008001 Coolant Decal, Russian

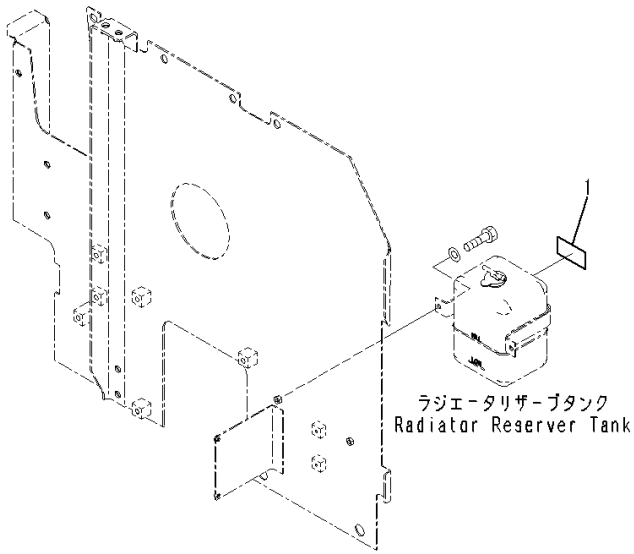


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09642-14000 | Plate. | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. U0510-002001 Caution Plates, Arm

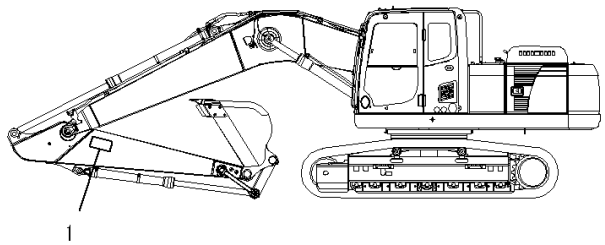



00045822

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09134-A1681 | Plate | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. U0520-010001 Caution Plates, Top Guard, Russian

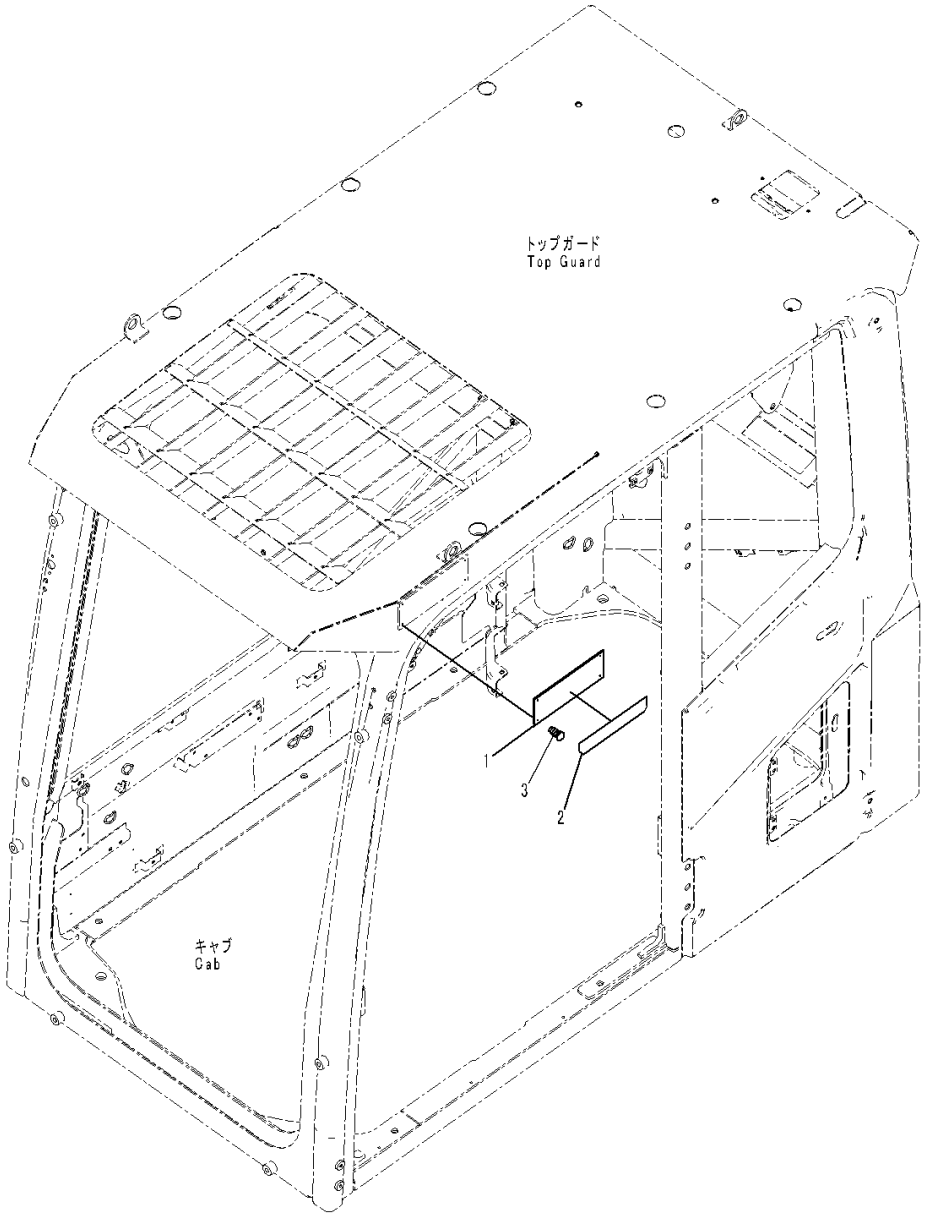


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | C2 | 09620-D2000 | Plate, Name, Top Guard (Limited Supply) | 1 | Y200001- |
| 2 | | 09620-D2090 | Plate. | 1 | Y200001- |
| 3 | | 04418-13060 | Screw. | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. U0520-028001 Caution Plates, Top And Front Guard, Russian

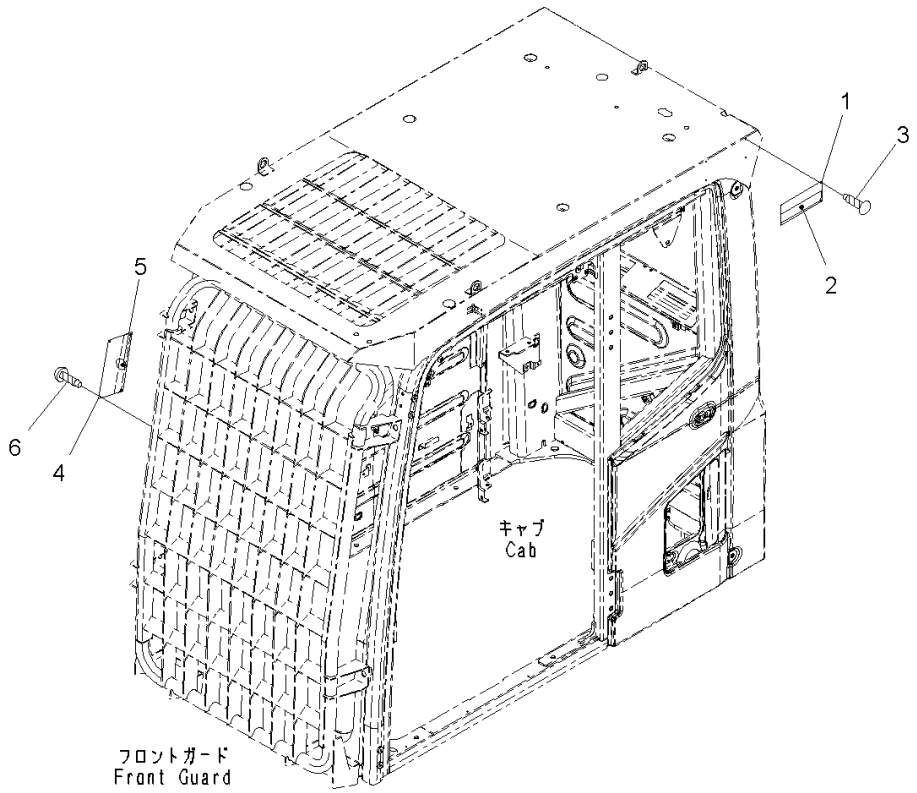


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | C2 | 09620-D2000 | Plate, Name, Top Guard (Limited Supply) | 1 | Y200001- |
| 2 | | 09620-D2090 | Plate. | 1 | Y200001- |
| 3 | | 04418-13060 | Screw. | 4 | Y200001- |
| 4 | C2 | 09620-E2000 | Plate, Name, Front Guard (Limited Supply). | 1 | Y200001- |
| 5 | | 09620-D2090 | Plate. | 1 | Y200001- |
| 6 | | 04418-13060 | Screw. | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. U0520-019001 Caution Plates, Front Guard, Russian

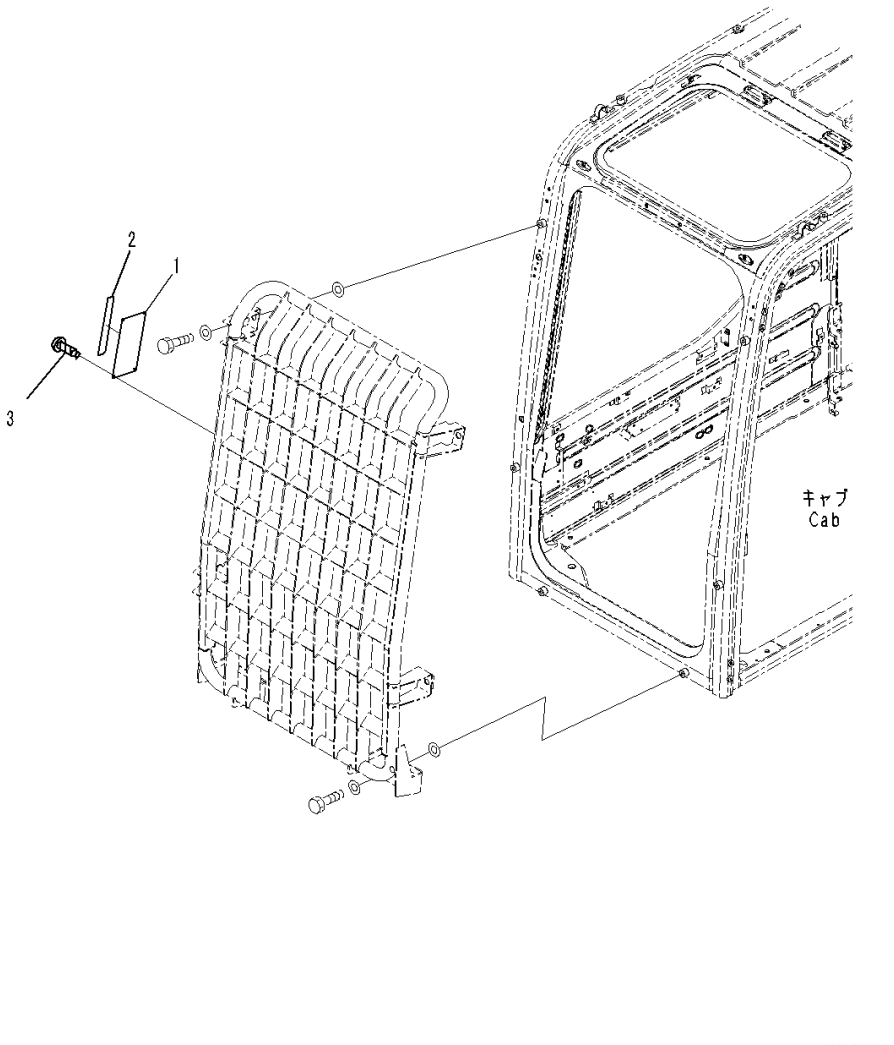


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | C2 | 09620-E2000 | Plate, Name, Front Guard (Limited Supply) | 1 | Y200001- |
| 2 | | 09620-D2090 | Plate | 1 | Y200001- |
| 3 | | 04418-13060 | Screw | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. U0550-001001 Service Instruction, Russian

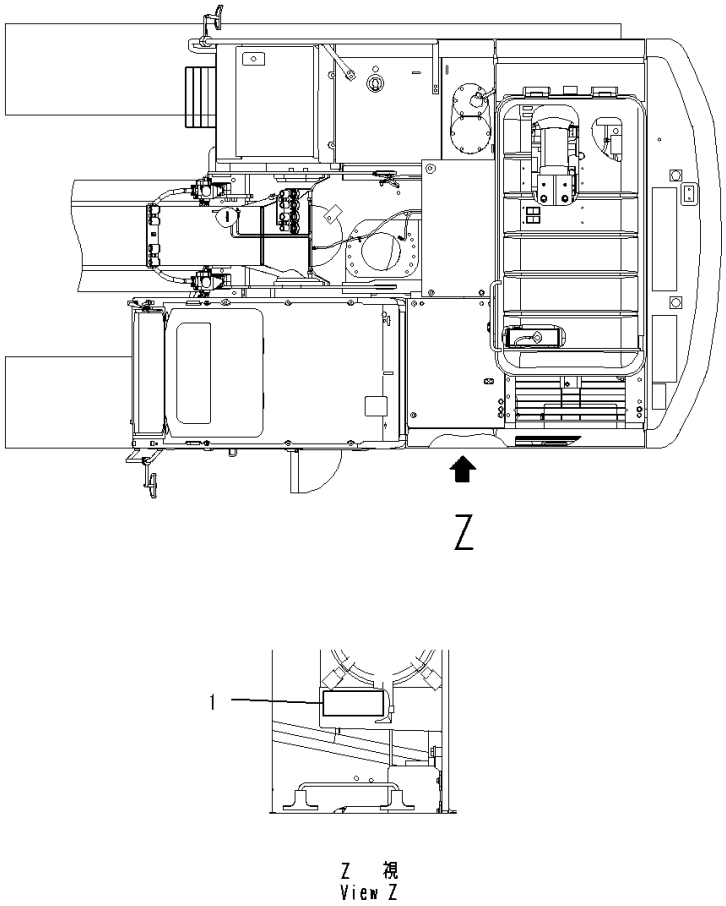


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09637-40163 | Plate..... | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. U0580-004001 Caution Plates, 2-actuator

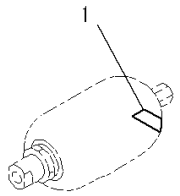



PW1B973

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09659-A057B | Plate, Warning, Explosive Hazard ..... | 2 | Y200001- |

https://truckmanualshub.com/

# FIG. U0580-003001 Caution Plates, 1-actuator

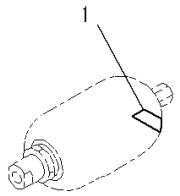



PW1B973

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09659-A057B | Plate, Warning, Explosive Hazard ..... | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. U0710-011001 Caution Plates, 12volt Power Source

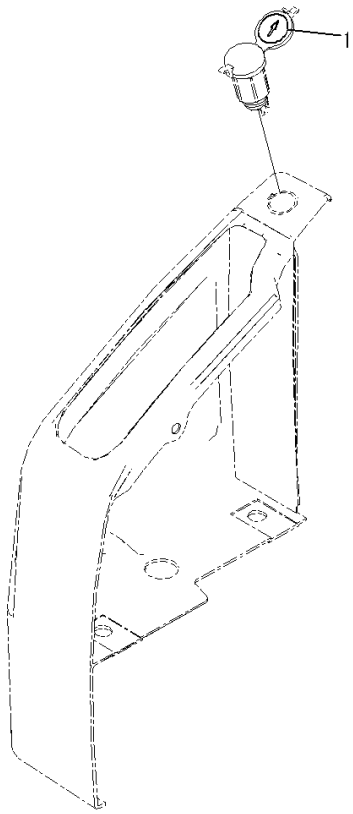



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 22U-00-21511 | Plate, Caution ..... | 1 | Y200001- |

# AUXILIARY PARTS AND TOOL

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. V0100-001001 Spare Parts

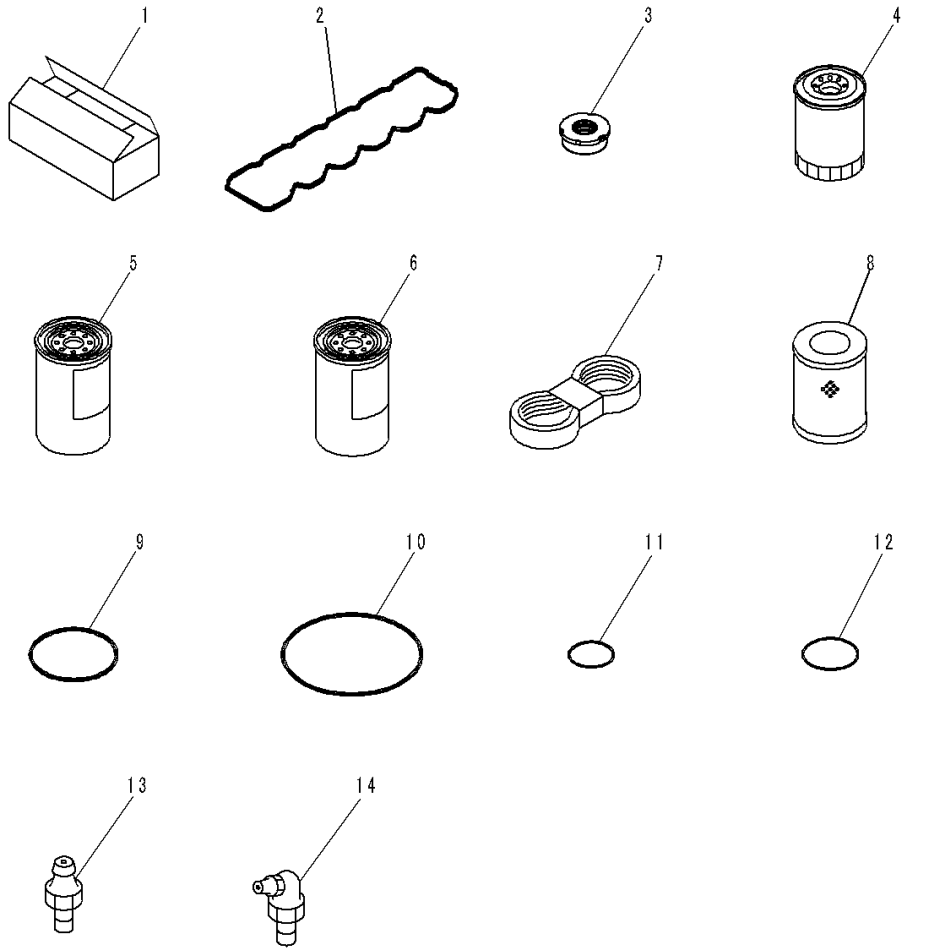


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09059-00800 | Box | 1 | Y200001- |
| 2 | | 6754-11-8180 | Packing | 1 | Y200001- |
| 3 | | 6754-11-8210 | Isolator | 6 | Y200001- |
| 4 | | 6736-51-5142 | Cartridge | 1 | Y200001- |
| 5 | | 600-319-3750 | Cartridge | 1 | Y200001- |
| 6 | | 600-319-3610 | Cartridge Assembly | 1 | Y200001- |
| 7 | | 6732-61-3871 | Belt | 1 | Y200001- |
| 8 | | 207-60-71182 | Element | 1 | Y200001- |
| 9 | | 07000-15160 | O-ring | 1 | Y200001- |
| 10 | | 07000-15195 | O-ring | 1 | Y200001- |
| 11 | | 07002-11223 | O-ring | 1 | Y200001- |
| 12 | | 07002-12434 | O-ring | 4 | Y200001- |
| 13 | | 07020-00000 | Fitting, Grease | 4 | Y200001- |
| 14 | | 07020-00675 | Fitting, Grease | 4 | Y200001- |

https://truckmanualshub.com/


# FIG. V0100-002001 Spare Parts, Shield Alternator

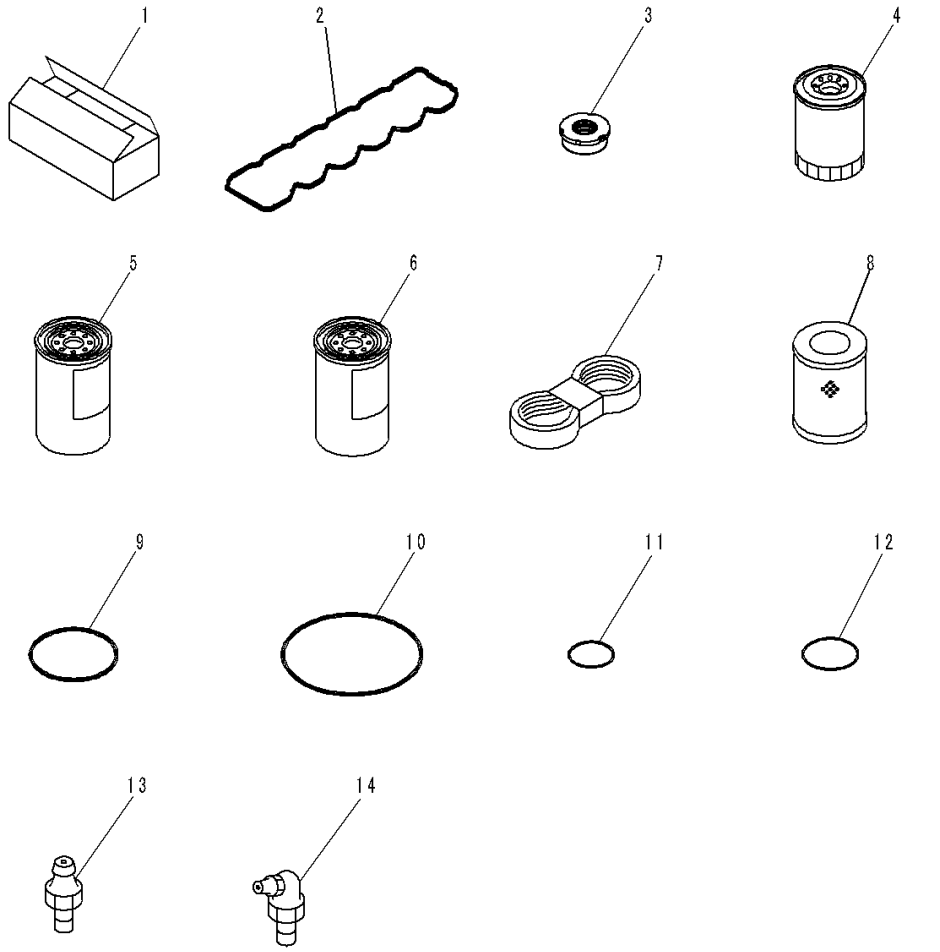


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09059-00800 | Box. | 1 | Y200001- |
| 2 | | 6754-11-8180 | Packing . | 1 | Y200001- |
| 3 | | 6754-11-8210 | Isolator . | 6 | Y200001- |
| 4 | | 6736-51-5142 | Cartridge . | 1 | Y200001- |
| 5 | | 600-319-3750 | Cartridge . | 1 | Y200001- |
| 6 | | 600-319-3610 | Cartridge Assembly. | 1 | Y200001- |
| 7 | | 6754-61-3810 | Belt, L=1742mm. | 1 | Y200001- |
| 8 | | 207-60-71182 | Element. | 1 | Y200001- |
| 9 | | 07000-15160 | O-ring . | 1 | Y200001- |
| 10 | | 07000-15195 | O-ring . | 1 | Y200001- |
| 11 | | 07002-11223 | O-ring . | 1 | Y200001- |
| 12 | | 07002-12434 | O-ring . | 4 | Y200001- |
| 13 | | 07020-00000 | Fitting, Grease . | 4 | Y200001- |
| 14 | | 07020-00675 | Fitting, Grease . | 4 | Y200001- |

https://truckmanualshub.com/

# FIG. V0200-001001 Cap And Overall

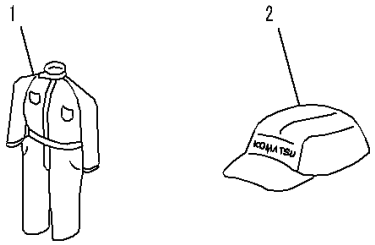



PEB0040

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 09980-92550 | Cap and Overall Kit | 1 | Y200001- |
| 1 | | 09980-10550 | • Overall | 1 | Y200001- |
| 2 | | 09982-20057 | • Cap | 1 | Y200001- |

https://truckmanualshub.com/

# FIG. V0300-001001 General Tool Set

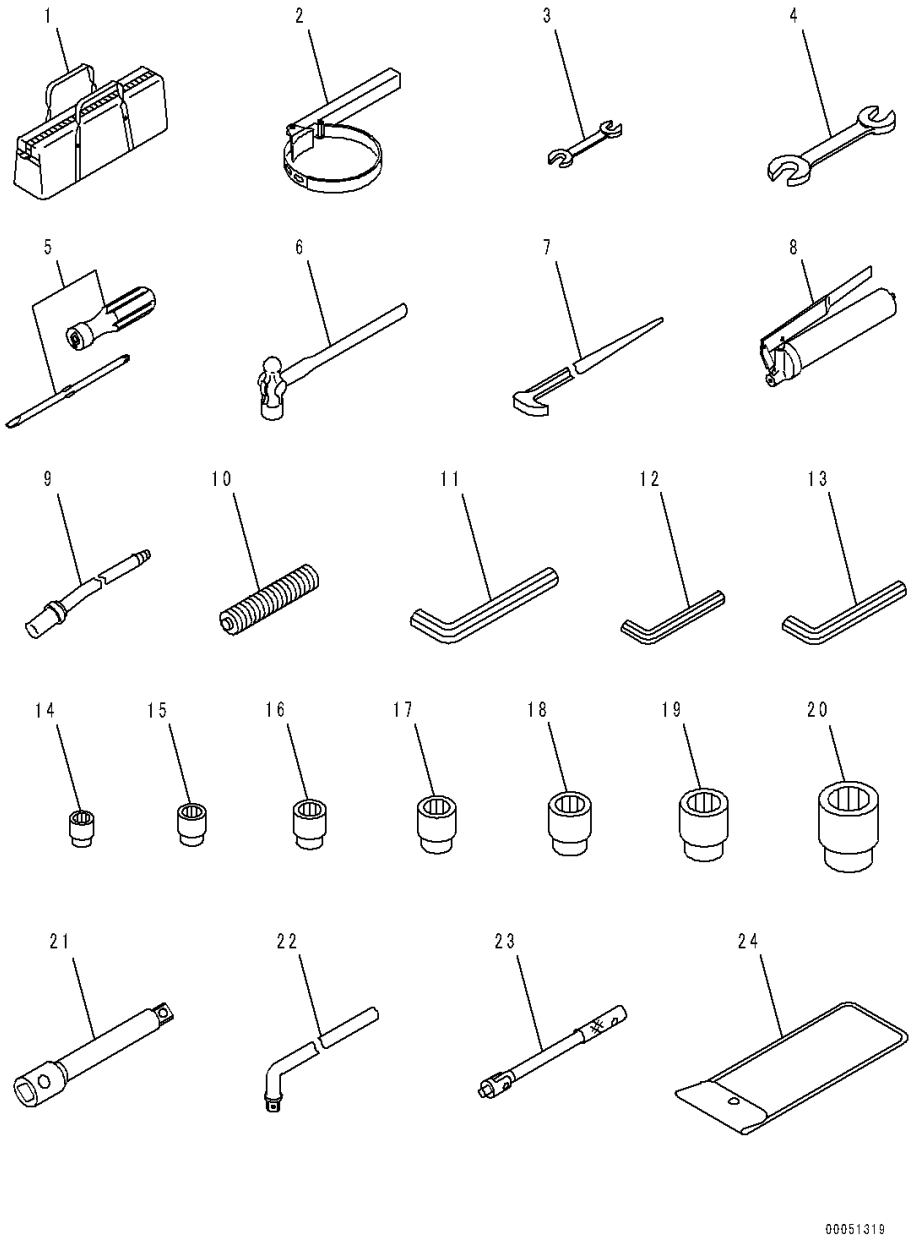



| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 09056-04613 | Bag | 1 | Y200001- |
| 2 | | 09019-28035 | Wrench | 1 | Y200001- |
| 3 | | 09002-01417 | Wrench, W=14X17mm | 1 | Y200001- |
| 4 | | 09002-03032 | Wrench, W=30X32mm | 1 | Y200001- |
| 5 | | 09033-00190 | Driver | 1 | Y200001- |
| 6 | | 09039-00150 | Hammer | 1 | Y200001- |
| 7 | | 09055-10390 | Bar | 1 | Y200001- |
| | | 07952-70004 | Pump Assembly | 1 | Y200001- |
| 8 | | 07950-10450 | • Pump | 1 | Y200001- |
| 9 | | 07951-41017 | • Nozzle | 1 | Y200001- |
| 10 | | 07950-90403 | Cartridge | 1 | Y200001- |
| 11 | | 09007-00836 | Wrench, W=8mm | 1 | Y200001- |
| 12 | | 09007-00425 | Wrench, W=4mm | 1 | Y200001- |
| 13 | | 09007-00528 | Wrench, W=5mm | 1 | Y200001- |
| | | 20Y-98-21130 | Tool Kit | 1 | Y200001- |
| 14 | | 09021-01219 | • Socket, W=12mm | 1 | Y200001- |
| 15 | | 09021-01422 | • Socket, W=14mm | 1 | Y200001- |
| 16 | | 09021-01725 | • Socket, W=17mm | 1 | Y200001- |
| 17 | | 09021-01928 | • Socket, W=19mm | 1 | Y200001- |
| 18 | | 09021-02233 | • Socket, W=22mm | 1 | Y200001- |
| 19 | | 09021-02436 | • Socket, W=24mm | 1 | Y200001- |
| 20 | | 09021-03044 | • Socket, W=30mm | 1 | Y200001- |
| 21 | | 09022-00150 | • Extension | 1 | Y200001- |
| 22 | | 09023-00300 | • Handle | 1 | Y200001- |
| 23 | | 09024-00300 | • Handle | 1 | Y200001- |
| 24 | | 20Y-98-21140 | • Tool Bag | 1 | Y200001- |

# OTHER EQUIPMENT

https://truckmanualshub.com/

https://truckmanualshub.com/


# FIG. W1111-001001 Webasto Heater, Hose

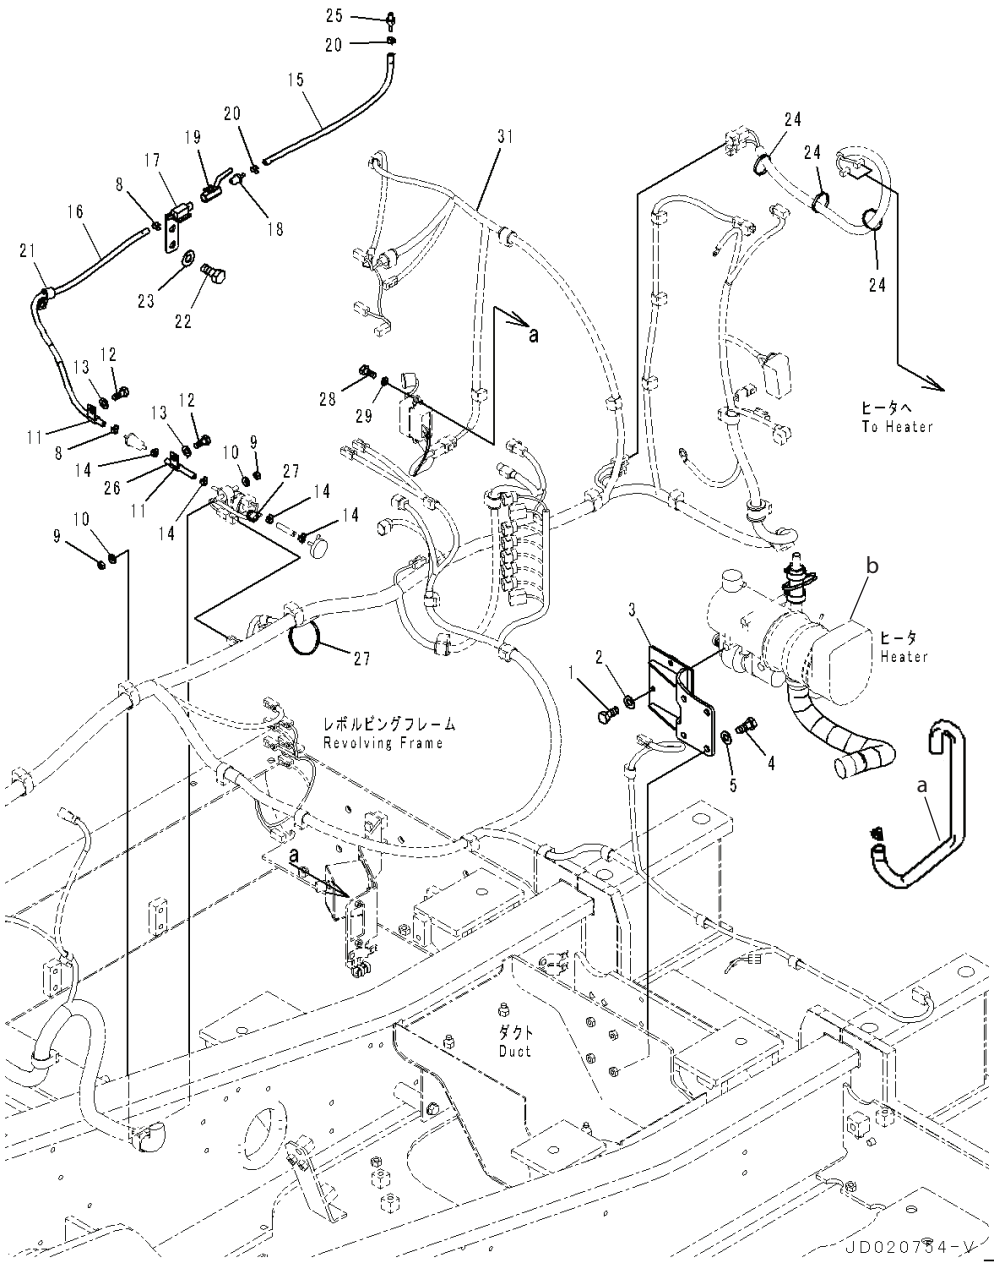


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 01010-80825 | Bolt | 3 | Y200001- |
| 2 | | 01643-30823 | Washer | 3 | Y200001- |
| 3 | | 20Y-977-7360 | Bracket | 1 | Y200001- |
| 4 | | 01010-81025 | Bolt | 4 | Y200001- |
| 5 | | 01643-31032 | Washer | 4 | Y200001- |
| 6 | | 08034-20536 | Band | 4 | Y200001- |
| 7 | | 07285-00095 | Clip, Hose | 2 | Y200001- |
| 8 | | 01580-30806 | Nut | 2 | Y200001- |
| 9 | | 01643-30823 | Washer | 2 | Y200001- |
| 10 | | 04434-50808 | Clip | 2 | Y200001- |
| 11 | | 01010-80816 | Bolt | 2 | Y200001- |
| 12 | | 01643-30823 | Washer | 2 | Y200001- |
| 13 | | 07285-00095 | Clip, Hose | 4 | Y200001- |
| 14 | | 20Y-977-7320 | Hose Assembly | 1 | Y200001- |
| 15 | | 20Y-977-7330 | Hose Assembly | 1 | Y200001- |
| 16 | | 20Y-977-7340 | Joint | 1 | Y200001- |
| 17 | | 134-977-2840 | Nipple | 1 | Y200001- |
| 18 | | 07700-40240 | Valve | 1 | Y200001- |
| 19 | | 07285-00095 | Clip, Hose | 2 | Y200001- |
| 20 | | 04434-51412 | Clip | 1 | Y200001- |
| 21 | | 01010-81225 | Bolt | 2 | Y200001- |
| 22 | | 01643-31232 | Washer | 2 | Y200001- |
| 23 | | 08034-20536 | Band | 3 | Y200001- |
| 24 | | 07209-01040 | Joint | 1 | Y200001- |
| 25 | | 207-977-2170 | Hose | 1 | Y200001- |
| 26 | | 08034-20536 | Band | 4 | Y200001- |
| 27 | | 01010-80820 | Bolt | 2 | Y200001- |
| 28 | | 01643-50823 | Washer | 2 | Y200001- |
| 29 | | 14X-977-1450 | Sheet | 1 | Y200001- |
| 30 | | (20Y-06-42721) | Wire Harness (Refer to Page 465) | | - |

https://truckmanualshub.com/


# FIG. W1111-001002 Webasto Heater, Cover

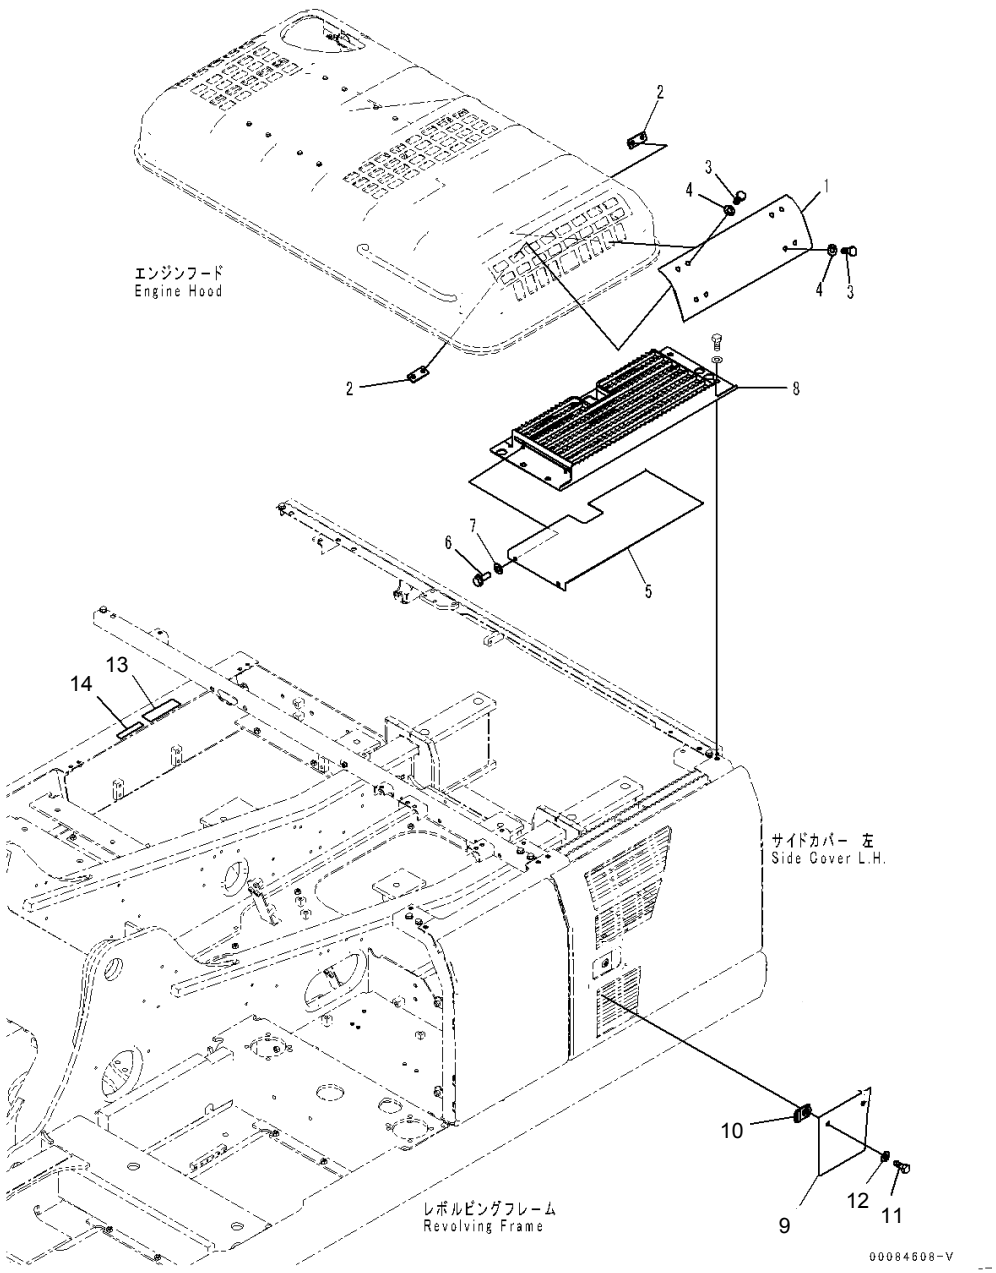


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-54-79510 | Cover | 1 | Y200001- |
| 2 | | 20Y-54-74560 | Plate | 4 | Y200001- |
| 3 | | 01010-D1230 | Bolt | 8 | Y200001- |
| 4 | | 01643-71232 | Washer | 8 | Y200001- |
| 5 | | 20Y-54-79520 | Cover | 1 | Y200001- |
| 6 | | 01010-D1030 | Bolt | 2 | Y200001- |
| 7 | | 01643-71032 | Washer | 2 | Y200001- |
| 8 | | 20Y-54-74441 | Cover | 1 | Y200001- |
| 9 | | 20Y-54-79540 | Cover | 1 | Y200001- |
| 10 | | 20Y-54-74570 | Plate | 2 | Y200001- |
| 11 | | 01010-D1230 | Bolt | 2 | Y200001- |
| 12 | | 01643-71232 | Washer | 2 | Y200001- |
| 13 | | 134-98-61650 | Plate | 1 | Y200001- |
| 14 | | 134-98-61660 | Plate | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. W1111-005003 Webasto Heater, (3/3)

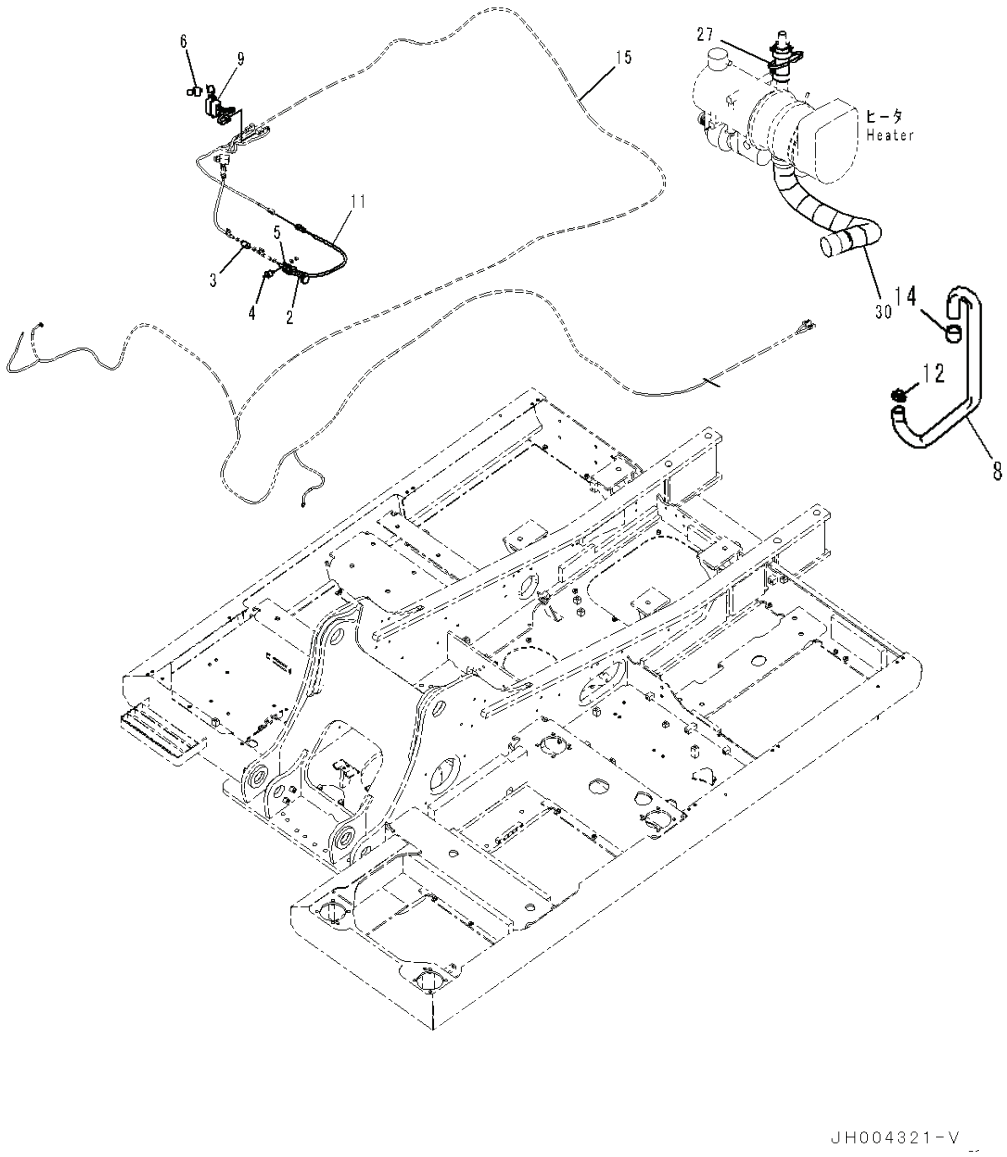


| Index | Code | Part Number | Descreption | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 207-977-2320 | Heater Assembly | 1 | Y300001- |
| 2 | | 207-977-2330 | Pump Assembly | 1 | Y300001- |
| 3 | | 207-977-2340 | Filter Assembly | 1 | Y300001- |
| 4 | | 207-977-2350 | Cushion | 1 | Y300001- |
| 5 | | 207-977-2360 | Clamp | 1 | Y300001- |
| 6 | | 207-977-2370 | Switch | 1 | Y300001- |
| 7 | | | | 1 | |
| 8 | | 207-977-2470 | Tube | 1 | Y300001- |
| 9 | | 207-977-2251 | Wiring Harness | 1 | Y300001- |
| 10 | | 207-977-2271 | Wiring Harness | 1 | Y300001- |
| 11 | | 207-977-2280 | Wiring Harness | 1 | Y300001- |
| 12 | | 207-977-2380 | Clamp | 1 | Y300001- |
| 13 | | 207-977-2390 | Clamp | 2 | Y300001- |
| 14 | | 207-977-2410 | Cap | 1 | Y300001- |
| 15 | | (207-977-2261) | Wiring Harness(Refer to Page 708) | | - |

https://truckmanualshub.com/


# FIG. W1112-001001 Webasto Heater, Hose And Bracket

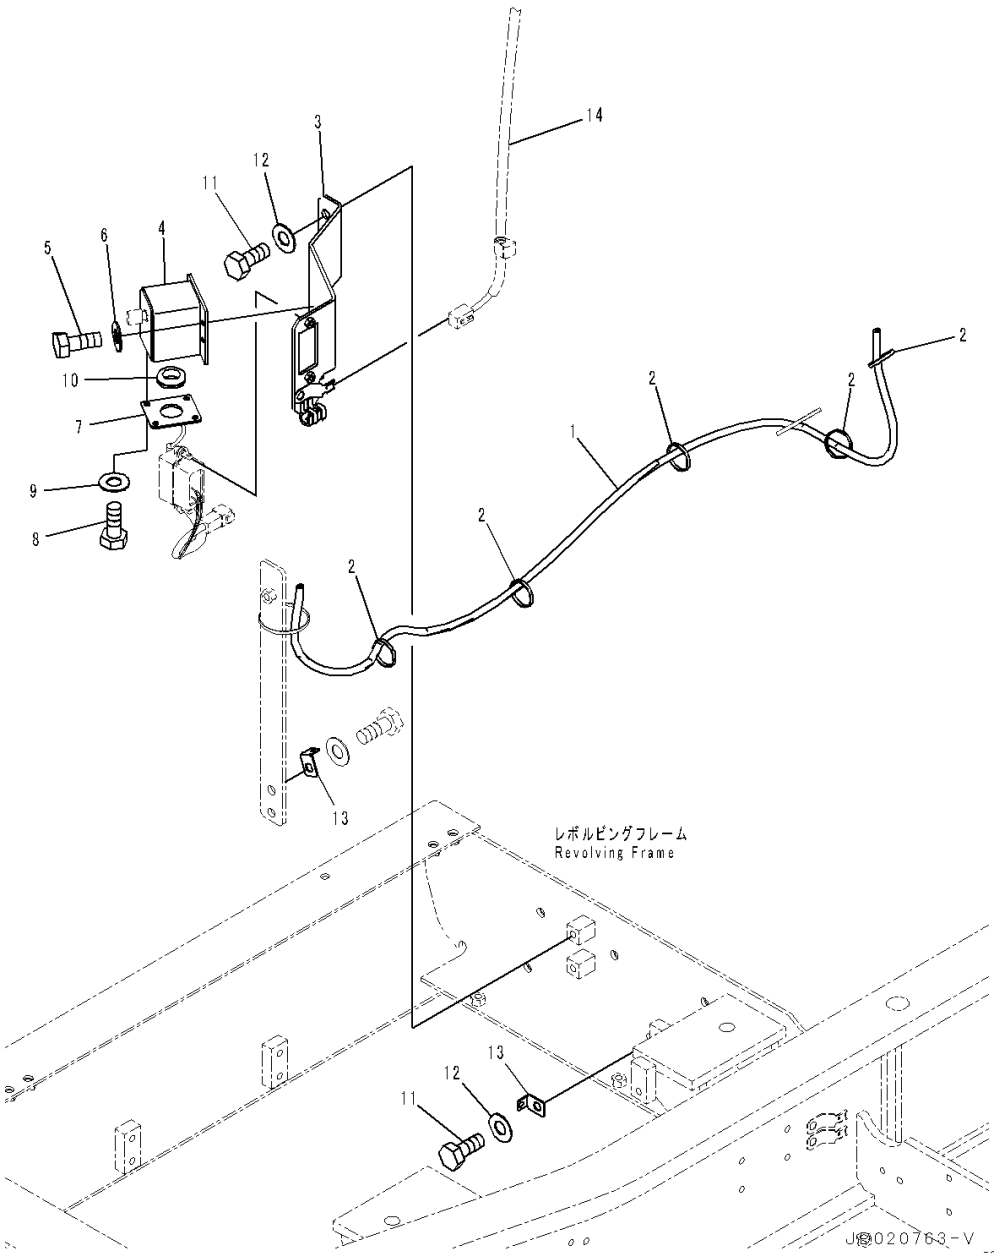


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-977-7210 | Hose Assembly | 1 | Y200001- |
| 2 | | 08034-20536 | Band | 5 | Y200001- |
| 3 | | 207-977-2440 | Bracket | 1 | Y200001- |
| 4 | | 207-977-2230 | Cover | 1 | Y200001- |
| 5 | | 01010-80616 | Bolt | 2 | Y200001- |
| 6 | | 01643-30623 | Washer | 2 | Y200001- |
| 7 | | 207-977-2240 | Cover | 1 | Y200001- |
| 8 | | 01010-80616 | Bolt | 4 | Y200001- |
| 9 | | 01643-30623 | Washer | 4 | Y200001- |
| 10 | | 08037-02512 | Grommet | 1 | Y200001- |
| 11 | | 01010-81225 | Bolt | 3 | Y200001- |
| 12 | | 01643-31232 | Washer | 3 | Y200001- |
| 13 | | 08057-12012 | Clip | 2 | Y200001- |
| 14 | | (20Y-06-42721) | Wire Harness(Refer to Page 465) | | - |

https://truckmanualshub.com/


# FIG. W1112-001002 Webasto Heater, Heater Hose

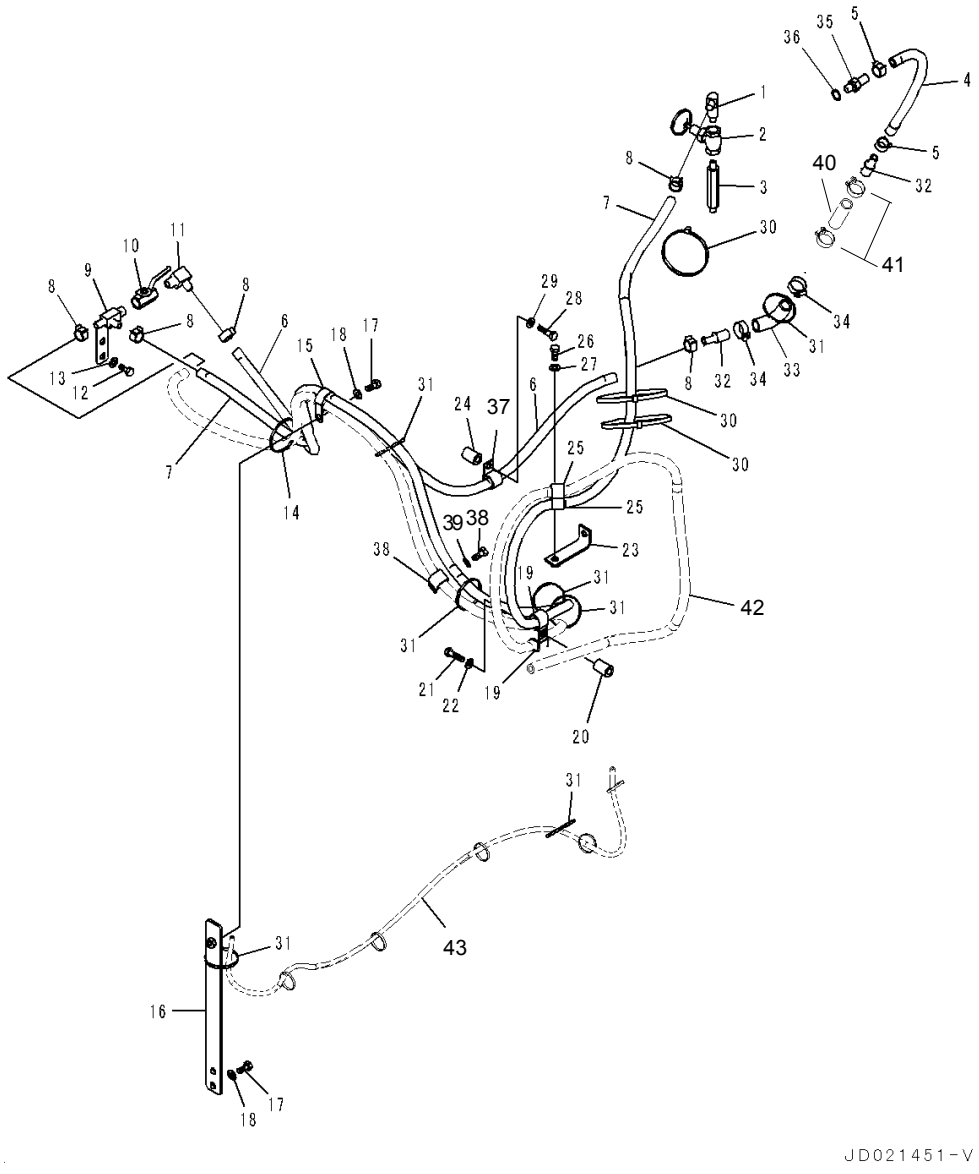


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 14X-49-31630 | Elbow | 1 | Y200001- |
| 2 | | 07700-20502 | Valve, Fuel Drain | 1 | Y200001- |
| 3 | | 20Y-977-7150 | Nipple | 1 | Y200001- |
| 4 | | 20Y-977-7251 | Hose Assembly | 1 | Y200001- |
| 5 | | 09479-02400 | Clamp | 2 | Y200001- |
| 6 | | 20Y-977-7230 | Hose Assembly | 1 | Y200001- |
| 7 | | 20Y-977-7240 | Hose Assembly | 1 | Y200001- |
| 8 | | 09479-02400 | Clamp | 6 | Y200001- |
| 9 | | 20Y-977-7120 | Tee | 1 | Y200001- |
| 10 | | 07700-40455 | Valve, Fuel Drain | 1 | Y200001- |
| 11 | | 20Y-977-7140 | Elbow | 1 | Y200001- |
| 12 | | 01010-81225 | Bolt | 2 | Y200001- |
| 13 | | 01643-31232 | Washer | 2 | Y200001- |
| 14 | | 134-03-61410 | Band | 1 | Y200001- |
| 15 | | 155-61-15350 | Clip | 1 | Y200001- |
| 16 | | 20Y-977-7160 | Bracket | 1 | Y200001- |
| 17 | | 01010-81225 | Bolt | 3 | Y200001- |
| 18 | | 01643-31232 | Washer | 3 | Y200001- |
| 19 | | 04434-52512 | Clip | 2 | Y200001- |
| 20 | | 20Y-03-11220 | Collar | 1 | Y200001- |
| 21 | | 01010-81260 | Bolt | 1 | Y200001- |
| 22 | | 01643-31232 | Washer | 1 | Y200001- |
| 23 | | 203-06-61730 | Bracket | 1 | Y200001- |
| 24 | | 20Y-03-11220 | Collar | 1 | Y200001- |
| 25 | | 04434-52512 | Clip | 2 | Y200001- |
| 26 | | 01010-81225 | Bolt | 1 | Y200001- |
| 27 | | 01643-31232 | Washer | 1 | Y200001- |
| 28 | | 01010-81260 | Bolt | 1 | Y200001- |
| 29 | | 01643-31232 | Washer | 1 | Y200001- |
| 30 | | 08034-20876 | Band | 3 | Y200001- |
| 31 | | 08034-20536 | Band | 8 | Y200001- |
| 32 | | 20Y-977-7290 | Adapter | 2 | Y200001- |
| 33 | | 207-979-7820 | Hose | 1 | Y200001- |
| 34 | | 07281-00359 | Clamp | 2 | Y200001- |
| 35 | | 20Y-977-4371 | Joint | 1 | Y200001- |
| 36 | | 6216-14-6840 | Seal | 1 | Y200001- |
| 37 | | 04434-52512 | Clip | 2 | Y200001- |
| 38 | | 01010-81225 | Bolt | 1 | Y200001- |
| 39 | | 01643-31232 | Washer | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. W1112-001002 Webasto Heater, Heater Hose

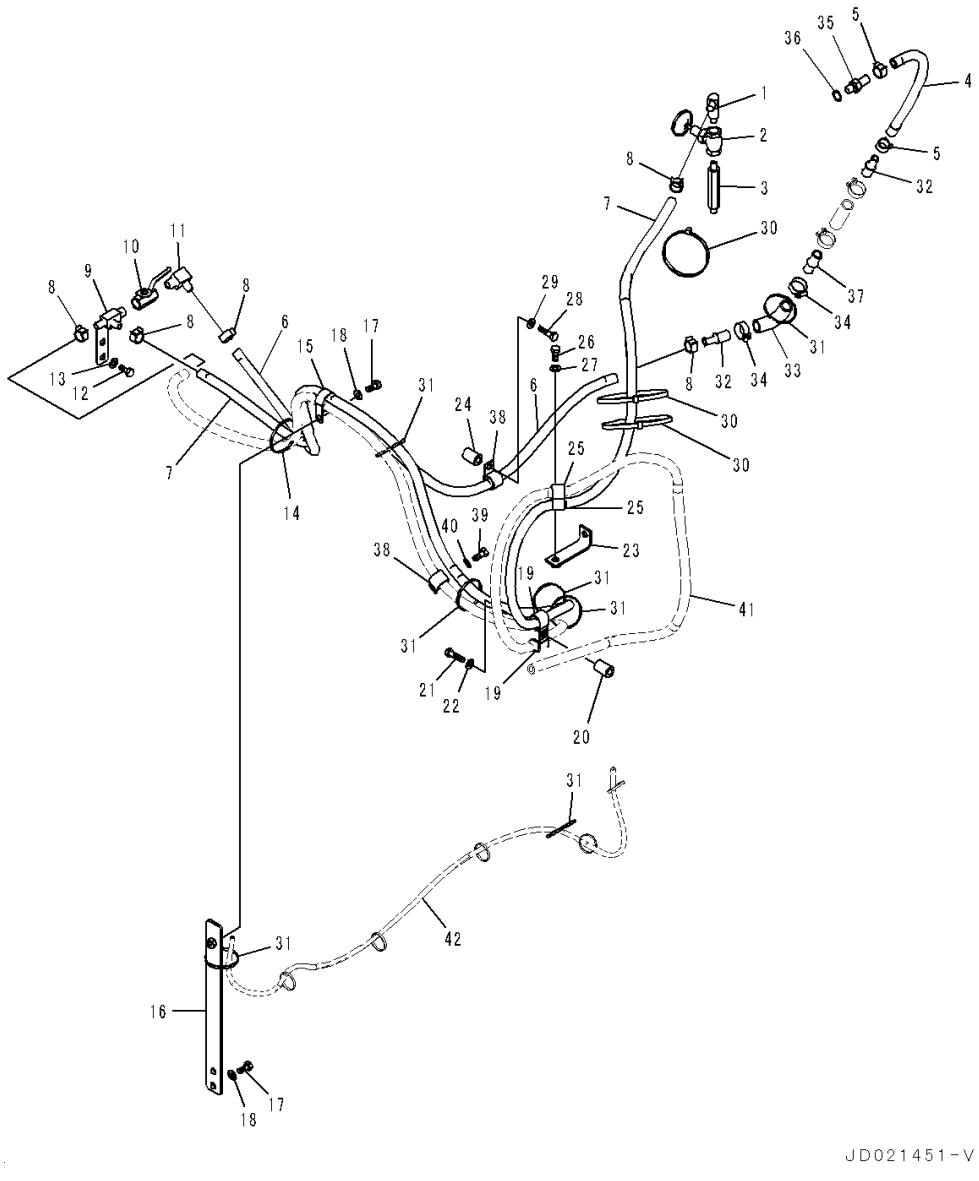


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 40 | | 20Y-977-7261 | Hose | 1 | Y200001- |
| 41 | | 07281-00359 | Clamp | 2 | Y200001- |
| 42 | | (20Y-810-1332) | Hose Assembly(Refer to Page 484) | | - |
| 43 | | (20Y-977-7210) | Hose Assembly(Refer to Page 1054) | | - |

https://truckmanualshub.com/


# FIG. W1112-001003 Webasto Heater, Duct

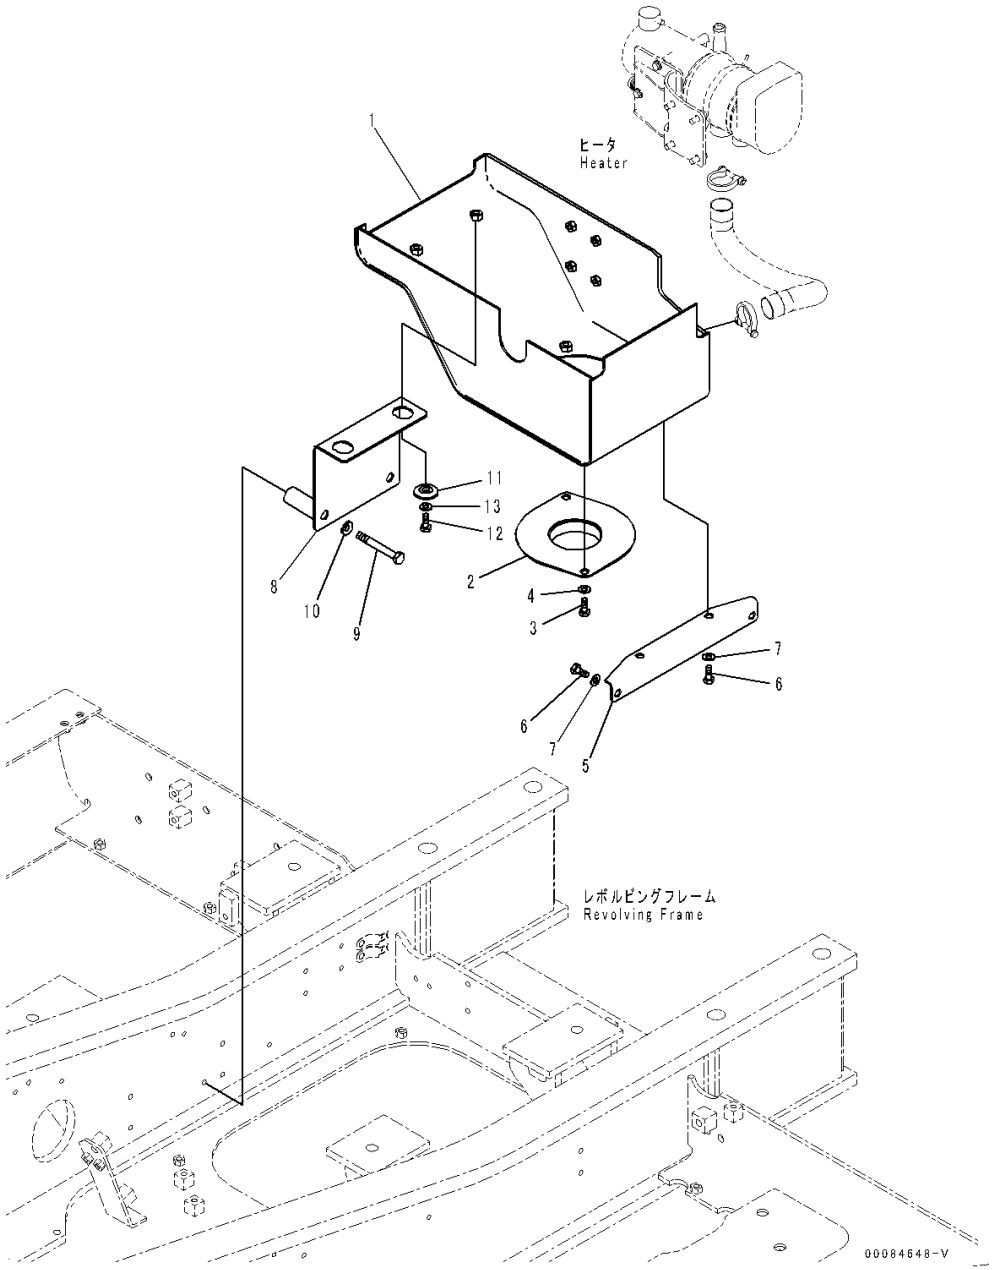


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-977-7170 | Cover | 1 | Y200001- |
| 2 | | 20Y-977-6360 | Cover | 1 | Y200001- |
| 3 | | 01010-81230 | Bolt | 2 | Y200001- |
| 4 | | 01643-31232 | Washer | 2 | Y200001- |
| 5 | | 20Y-977-4310 | Plate | 1 | Y200001- |
| 6 | | 01010-81230 | Bolt | 4 | Y200001- |
| 7 | | 01643-31232 | Washer | 4 | Y200001- |
| 8 | | 20Y-977-7220 | Bracket | 1 | Y200001- |
| 9 | | 01011-81210 | Bolt | 2 | Y200001- |
| 10 | | 01643-31232 | Washer | 2 | Y200001- |
| 11 | | 208-54-57180 | Collar | 2 | Y200001- |
| 12 | | 01010-81230 | Bolt | 2 | Y200001- |
| 13 | | 01643-31232 | Washer | 2 | Y200001- |

https://truckmanualshub.com/


# FIG. W1113-001001 Fuel Refill Pump, Inner Parts, Pump

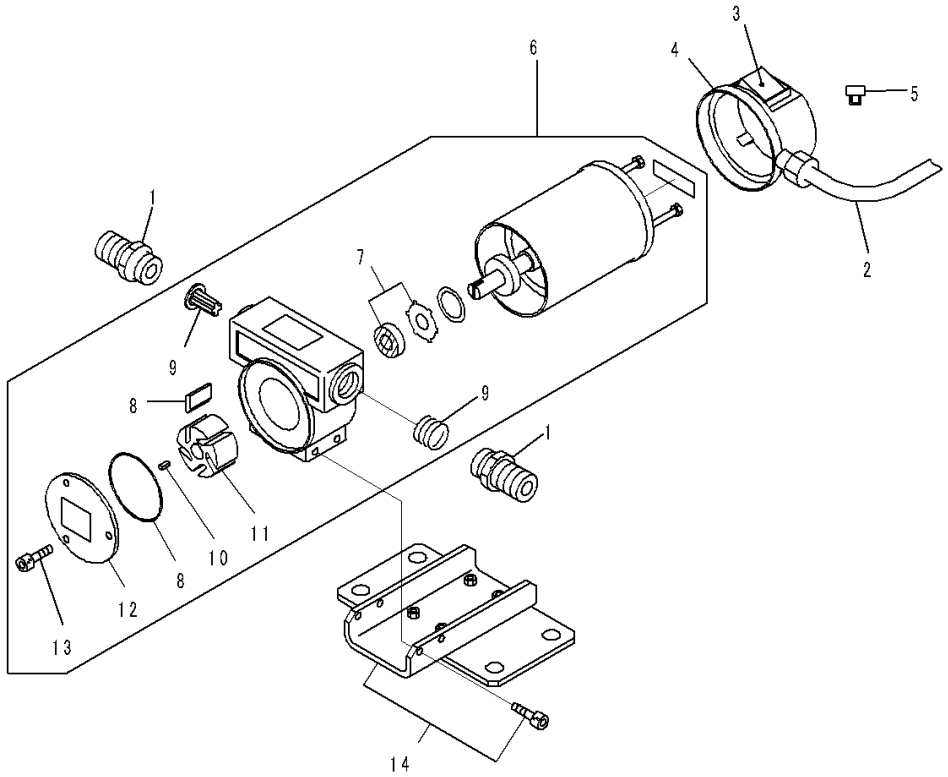


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 21K-04-K1130 | Pump, Refuelling | 1 | Y200001- |
| 1 | | 20Y-04-K2090 | • Adapter | 2 | Y200001- |
| 2 | | 20Y-04-K2130 | • Cable Kit | 1 | Y200001- |
| 3 | | 20Y-04-K2160 | •• Switch | 1 | Y200001- |
| 4 | | 20Y-04-K2170 | •• Box | 1 | Y200001- |
| 5 | | 20Y-04-K2150 | • Fuse, 15Amp. | 1 | Y200001- |
| 6 | | 20Y-04-K2180 | • Pump Assembly | 1 | Y200001- |
| 7 | | 20Y-04-K2190 | •• Seal Kit | 1 | Y200001- |
| 8 | | 20Y-04-K2210 | •• Vane Kit | 1 | Y200001- |
| 9 | | 20Y-04-K2220 | •• Valve Kit, Bypass | 1 | Y200001- |
| 10 | | 20Y-04-K2230 | •• Key | 1 | Y200001- |
| 11 | | 20Y-04-K2240 | •• Rotor | 1 | Y200001- |
| 12 | | 20Y-04-K2250 | •• Cover | 1 | Y200001- |
| 13 | | 20Y-04-K2260 | •• Screw | 3 | Y200001- |
| 14 | | 20Y-04-K2280 | • Bracket | 1 | Y200001- |

https://truckmanualshub.com/


# FIG. W1113-001002 Fuel Refill Pump, Related Parts

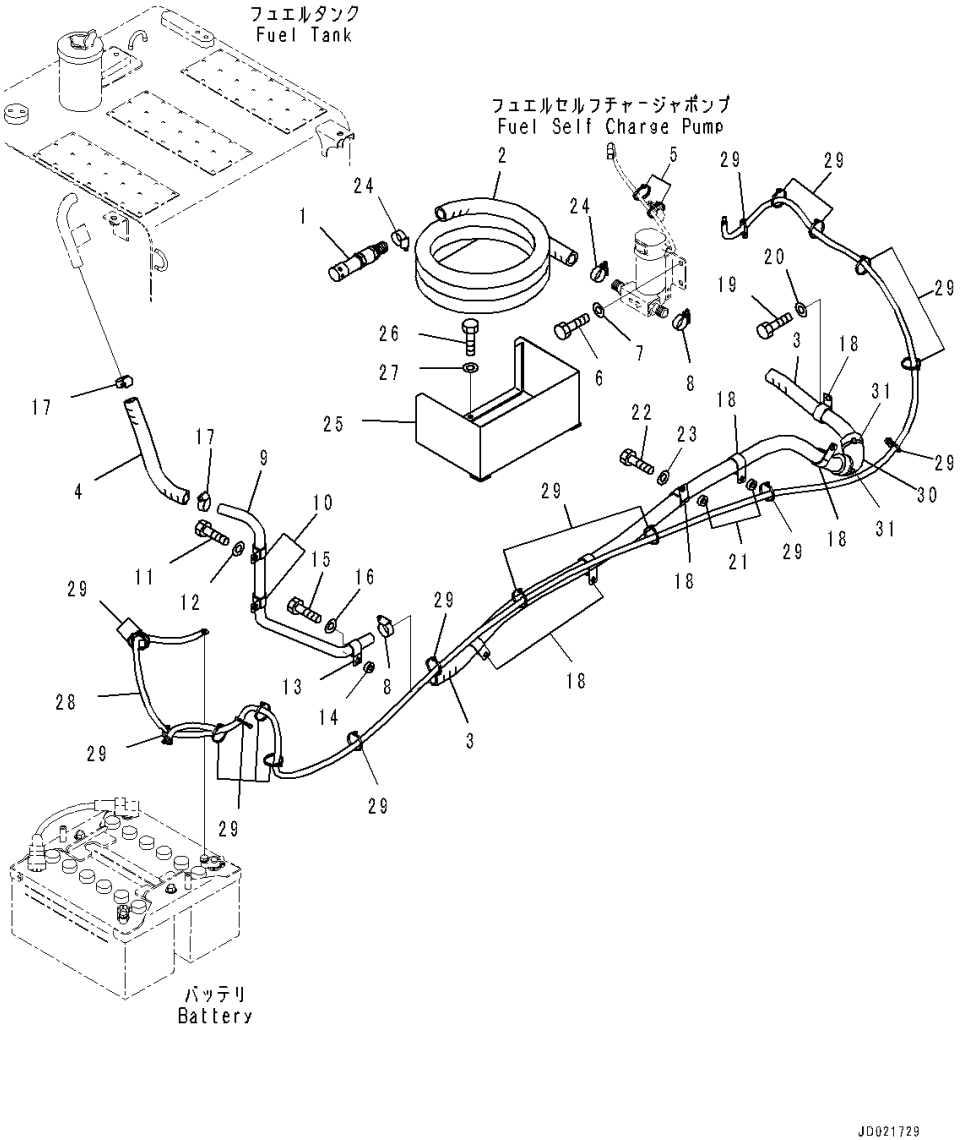


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-04-K2450 | Valve Assembly . | 1 | Y200001- |
| 2 | | 20Y-04-K2351 | Hose . | 1 | Y200001- |
| 3 | | 206-04-K1121 | Hose . | 1 | Y200001- |
| 4 | | 206-04-K1131 | Hose . | 1 | Y200001- |
| 5 | | 08034-20519 | Band . | 2 | Y200001- |
| 6 | | 01010-81225 | Bolt. | 4 | Y200001- |
| 7 | | 01643-31232 | Washer . | 4 | Y200001- |
| 8 | | 07289-00035 | Clamp . | 2 | Y200001- |
| 9 | | 206-04-71130 | Tube. | 1 | Y200001- |
| 10 | | 04434-52512 | Clip. | 2 | Y200001- |
| 11 | | 01010-81225 | Bolt. | 2 | Y200001- |
| 12 | | 01643-31232 | Washer . | 2 | Y200001- |
| 13 | | 04434-52512 | Clip. | 1 | Y200001- |
| 14 | | 198-43-15310 | Collar, T=10mm . | 1 | Y200001- |
| 15 | | 01010-81235 | Bolt. | 1 | Y200001- |
| 16 | | 01643-31232 | Washer . | 1 | Y200001- |
| 17 | | 07289-00035 | Clamp . | 2 | Y200001- |
| 18 | | 581-04-22290 | Clip. | 6 | Y200001- |
| 19 | | 01010-81225 | Bolt. | 4 | Y200001- |
| 20 | | 01643-31232 | Washer . | 4 | Y200001- |
| 21 | | 198-43-15310 | Collar, T=10mm . | 2 | Y200001- |
| 22 | | 01010-81235 | Bolt. | 2 | Y200001- |
| 23 | | 01643-31232 | Washer . | 2 | Y200001- |
| 24 | | 07289-00035 | Clamp . | 2 | Y200001- |
| 25 | | 20Y-04-38170 | Bracket. | 1 | Y200001- |
| 26 | | 01010-81020 | Bolt. | 3 | Y200001- |
| 27 | | 01643-31032 | Washer . | 3 | Y200001- |
| 28 | | 20Y-06-41950 | Wiring Harness . | 1 | Y200001- |
| 29 | | 08034-20536 | Band . | 18 | Y200001- |
| 30 | | 205-62-53780 | Cover . | 1 | Y200001- |
| 31 | | 08034-20834 | Band . | 2 | Y200001- |

https://truckmanualshub.com/

# FIG. W1114-001001 Step

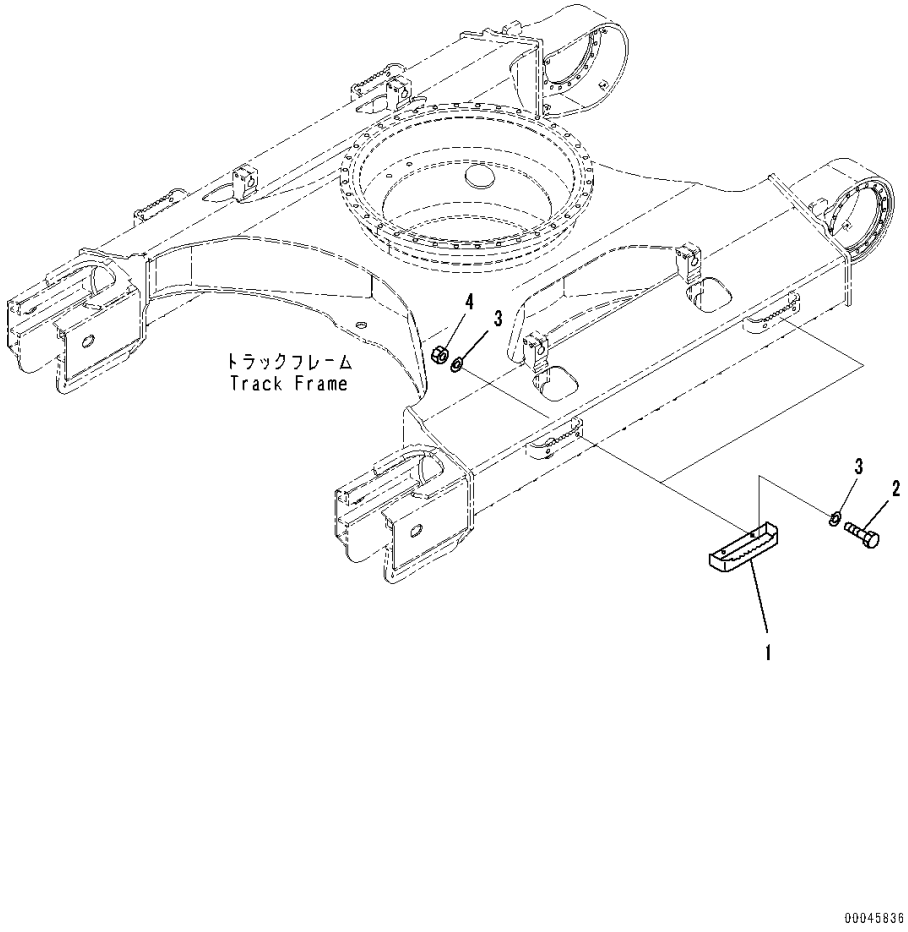


| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| 1 | | 20Y-30-41160 | Step | 4 | Y200001- |
| 2 | | 01010-81660 | Bolt | 8 | Y200001- |
| 3 | | 01643-31645 | Washer | 16 | Y200001- |
| 4 | | 01580-11613 | Nut | 8 | Y200001- |

# FIELD REPAIR SERVICE PARTS

https://truckmanualshub.com/

https://truckmanualshub.com/

# FIG. KIT Service Kit Parts (1/2)

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| K02 | | 20Y-32-05041 | Service Kit, Shoe Bolt and Nut | | Y200001- |
| | | 134-32-61221 | • Nut | 50 | - |
| | | 20Y-32-11230 | • Bolt | 50 | - |
| K03 | | 20Y-32-05070 | Service Kit, Shoe Bolt and Nut | | Y200001- |
| | | 134-32-61221 | • Nut | 50 | - |
| | | 20Y-32-31210 | • Bolt | 50 | - |
| K04 | | 20Y-32-05080 | Service Kit, Shoe Bolt and Nut | | Y200001- |
| | | 134-32-61221 | • Nut | 50 | - |
| | | 20Y-32-31231 | • Bolt | 50 | - |
| K05 | | 20Y-32-05051 | Service Kit, Shoe Bolt and Nut | | Y200001- |
| | | 134-32-61221 | • Nut | 50 | - |
| | | 20Y-32-11220 | • Bolt | 50 | - |
| K06 | | 707-98-46280 | Service Kit, Boom Cylinder | | Y200001- |
| | | 07000-13030 | • O-ring | 2 | - |
| | | 07000-15075 | • O-ring | 1 | - |
| | | 07000-15110 | • O-ring | 2 | - |
| | | 07145-00070 | • Seal, Dust | 2 | - |
| | | 07145-00080 | • Seal, Dust | 2 | - |
| | | 707-35-90930 | • Ring, Back-up | 2 | - |
| | | 707-35-91220 | • Ring, Back-up | 3 | - |
| | | 707-39-12140 | • Ring, Wear | 2 | - |
| | | 707-44-12150 | • Ring, Piston | 1 | - |
| | | 707-51-85030 | • Packing, Rod | 1 | - |
| | | 707-51-85650 | • Ring, Buffer | 1 | - |
| | | 707-56-85510 | • Seal, Dust | 1 | - |
| K07 | | 707-99-46410 | Service Kit, Boom Cylinder | | Y200001- |
| | | 07000-53030 | • O-ring | 2 | - |
| | | 07000-55075 | • O-ring | 1 | - |
| | | 07000-55110 | • O-ring | 2 | - |
| | | 07145-10070 | • Seal, Dust | 2 | - |
| | | 07145-10080 | • Seal, Dust | 2 | - |
| | | 707-35-90930 | • Ring, Back-up | 2 | - |
| | | 707-35-91220 | • Ring, Back-up | 3 | - |
| | | 707-39-12140 | • Ring, Wear | 2 | - |
| | | 707-44-12180 | • Ring, Piston | 1 | - |
| | | 707-51-85650 | • Ring, Buffer | 1 | - |
| | | 707-51-85730 | • Packing, Rod | 1 | - |
| | | 707-56-85510 | • Seal, Dust | 1 | - |
| | | 707-56-85650 | • Seal, Dust | 1 | - |

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| K08 | | 707-98-48610 | Service Kit, Arm Cylinder | | Y200001- |
| | | 07000-13030 | • O-ring | 1 | - |
| | | 07000-15085 | • O-ring | 1 | - |
| | | 07000-15125 | • O-ring | 2 | - |
| | | 07002-12034 | • O-ring | 1 | - |
| | | 07145-00080 | • Seal, Dust | 4 | - |
| | | 707-35-90960 | • Ring, Back-up | 2 | - |
| | | 707-35-91370 | • Ring, Back-up | 3 | - |
| | | 707-39-13530 | • Ring, Wear | 2 | - |
| | | 707-44-13250 | • Ring, Piston | 1 | - |
| | | 707-51-95030 | • Packing, Rod | 1 | - |
| | | 707-51-95650 | • Ring, Buffer | 1 | - |
| | | 707-56-95510 | • Seal, Dust | 1 | - |
| K09 | | 707-99-50730 | Service Kit, Arm Cylinder | | Y200001- |
| | | 07000-53030 | • O-ring | 1 | - |
| | | 07000-55085 | • O-ring | 1 | - |
| | | 07000-55125 | • O-ring | 2 | - |
| | | 07002-52034 | • O-ring | 1 | - |
| | | 07145-10080 | • Seal, Dust | 4 | - |
| | | 707-35-90960 | • Ring, Back-up | 2 | - |
| | | 707-35-91370 | • Ring, Back-up | 3 | - |
| | | 707-39-13530 | • Ring, Wear | 2 | - |
| | | 707-44-13280 | • Ring | 1 | - |
| | | 707-51-95650 | • Ring, Buffer | 1 | - |
| | | 707-51-95730 | • Packing, Rod | 1 | - |
| | | 707-56-95510 | • Seal, Dust | 1 | - |
| | | 707-56-95650 | • Seal, Dust | 1 | - |
| K10 | | 707-98-39610 | Service Kit, Bucket Cylinder | | Y200001- |
| | | 07000-13030 | • O-ring | 1 | - |
| | | 07000-15070 | • O-ring | 1 | - |
| | | 07000-15105 | • O-ring | 1 | - |
| | | 07145-00070 | • Seal, Dust | 2 | - |
| | | 195-63-92190 | • Seal, Dust | 1 | - |
| | | 20Y-70-23220 | • Seal, Dust | 2 | - |
| | | 707-35-90360 | • Ring, Back-up | 2 | - |
| | | 707-35-91150 | • Ring, Back-up | 1 | - |
| | | 707-39-11530 | • Ring, Wear | 2 | - |
| | | 707-44-11250 | • Ring, Piston | 1 | - |
| | | 707-51-80030 | • Packing, Rod | 1 | - |

https://truckmanualshub.com/

# FIG. KIT Service Kit Parts (2/2)

| Index | Code | Part Number | Description | Qty | Serial Number |
|---|---|---|---|---|---|
| | | 707-51-80650 | • Ring | 1 | - |
| K11 | | 707-99-38750 | Service Kit, Bucket Cylinder | | Y200001- |
| | | 07000-53030 | • O-ring | 1 | - |
| | | 07000-55070 | • O-ring | 1 | - |
| | | 07000-55105 | • O-ring | 1 | - |
| | | 07145-10070 | • Seal, Dust | 2 | - |
| | | 195-63-92190 | • Seal, Dust | 1 | - |
| | | 20Y-70-23220 | • Seal, Dust | 2 | - |
| | | 707-35-90360 | • Ring, Back-up | 2 | - |
| | | 707-35-91150 | • Ring, Back-up | 1 | - |
| | | 707-39-11530 | • Ring, Wear | 2 | - |
| | | 707-44-11280 | • Ring, Piston | 1 | - |
| | | 707-51-80650 | • Ring | 1 | - |
| | | 707-51-80730 | • Packing | 1 | - |
| | | 707-56-80651 | • Seal, Dust | 1 | - |
| K13 | | 707-99-47130 | Service Kit, Bucket Cylinder | | Y200001- |
| | | 07000-13030 | • O-ring | 1 | - |
| | | 07000-15075 | • O-ring | 1 | - |
| | | 07000-15115 | • O-ring | 1 | - |
| | | 07145-00070 | • Seal, Dust | 2 | - |
| | | 20Y-70-23220 | • Seal, Dust | 2 | - |
| | | 707-35-90930 | • Ring, Back-up | 2 | - |
| | | 707-35-91250 | • Ring, Back-up | 1 | - |
| | | 707-39-12560 | • Ring, Wear | 2 | - |
| | | 707-44-12250 | • Ring, Piston | 1 | - |
| | | 707-51-85030 | • Packing, Rod | 1 | - |
| | | 707-51-85650 | • Ring, Buffer | 1 | - |
| | | 707-56-85510 | • Seal, Dust | 1 | - |

# NUMERICAL INDEX

https://truckmanualshub.com/

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 01010-61450 | 418 | 16 |
| | 423 | 16 |
| 01010-61460 | 187 | 21 |
| | 209 | 21 |
| 01010-61470 | 187 | 20 |
| | 209 | 20 |
| 01010-61490 | 179 | 24 |
| | 179 | 26 |
| | 223 | 24 |
| 01010-61655 | 236 | 8 |
| | 445 | 19 |
| | 446 | 19 |
| 01010-61660 | 437 | 34 |
| | 441 | 34 |
| 01010-62050 | 469 | 2 |
| | 470 | 3 |
| 01010-62055 | 524 | 9 |
| | 525 | 9 |
| | 526 | 9 |
| | 527 | 9 |
| | 528 | 9 |
| | 529 | 9 |
| 01010-80612 | 138 | 9 |
| | 139 | 9 |
| | 385 | 24 |
| | 387 | 15 |
| 01010-80616 | 353 | 5 |
| | 353 | 14 |
| | 354 | 4 |
| | 359 | 9 |
| | 359 | 15 |
| | 385 | 30 |
| | 387 | 21 |
| | 570 | 5 |
| | 570 | 8 |
| 01010-80620 | 151 | 20 |
| | 351 | 16 |
| | 357 | 16 |
| | 388 | 23 |
| | 391 | 23 |
| 01010-80816 | 341 | 16 |
| | 370 | 30 |
| | 375 | 37 |
| | 567 | 11 |
| 01010-80820 | 151 | 16 |
| | 151 | 18 |
| | 321 | 16 |
| | 352 | 1 |
| | 358 | 1 |
| | 388 | 28 |
| | 391 | 28 |
| | 567 | 27 |
| 01010-80825 | 121 | 2 |
| | 132 | 5 |
| | 142 | 33 |
| | 145 | 27 |
| | 148 | 28 |
| | 165 | 3 |
| | 364 | 2 |
| | 567 | 1 |
| 01010-80830 | 151 | 14 |
| | 370 | 28 |
| | 375 | 35 |
| 01010-80835 | 132 | 15 |
| | 313 | 5 |
| | 428 | 10 |
| 01010-80855 | 341 | 14 |
| 01010-80875 | 310 | 9 |
| 01010-80885 | 310 | 10 |
| 01010-81016 | 348 | 2 |
| | 360 | 44 |
| | 360 | 47 |
| | 366 | 10 |
| | 369 | 14 |
| | 416 | 12 |
| | 417 | 12 |
| 01010-81020 | 120 | 3 |
| | 130 | 2 |
| | 130 | 5 |
| | 130 | 9 |
| | 130 | 13 |
| | 131 | 36 |
| | 132 | 11 |
| | 132 | 18 |
| | 132 | 21 |
| | 133 | 31 |
| | 152 | 1 |
| | 153 | 47 |
| | 56 | 27 |
| | 158 | 10 |
| | 166 | 3 |
| | 246 | 23 |
| | 246 | 26 |
| | 247 | 23 |
| | 247 | 26 |
| | 276 | 17 |
| | 279 | 18 |
| | 280 | 18 |
| | 343 | 1 |
| | 343 | 4 |
| | 344 | 5 |
| | 345 | 5 |
| | 348 | 20 |
| | 348 | 23 |
| | 348 | 27 |
| | 349 | 6 |
| | 369 | 2 |
| | 369 | 8 |
| | 401 | 6 |
| | 402 | 6 |
| | 437 | 7 |
| | 441 | 7 |
| | 535 | 14 |
| | 567 | 29 |
| | 575 | 26 |
| 01010-81025 | 129 | 7 |
| | 129 | 11 |
| | 133 | 27 |
| | 133 | 33 |
| | 135 | 27 |
| | 135 | 30 |
| | 151 | 25 |
| | 158 | 3 |
| | 344 | 3 |
| | 345 | 3 |
| | 373 | 3 |
| | 373 | 13 |
| | 394 | 23 |
| | 394 | 26 |
| | 396 | 25 |
| | 396 | 28 |
| | 399 | 24 |
| | 399 | 27 |
| | 422 | 23 |
| | 427 | 23 |
| | 503 | 19 |
| | 519 | 19 |
| | 567 | 4 |
| 01010-81030 | 129 | 18 |
| | 130 | 22 |
| | 133 | 7 |
| | 134 | 41 |
| | 135 | 7 |
| | 136 | 38 |
| | 187 | 24 |
| | 209 | 24 |
| | 270 | 15 |
| | 270 | 17 |
| | 343 | 13 |
| | 353 | 2 |
| | 422 | 21 |
| | 427 | 21 |
| 01010-81035 | 145 | 1 |
| | 148 | 1 |
| | 253 | 38 |
| | 265 | 20 |
| | 265 | 22 |
| | 265 | 33 |
| | 310 | 15 |
| | 422 | 9 |
| | 427 | 9 |
| 01010-81040 | 263 | 1 |
| | 266 | 35 |
| | 267 | 1 |
| | 348 | 10 |
| | 348 | 14 |
| | 348 | 18 |
| 01010-81045 | 128 | 13 |
| | 133 | 20 |
| | 135 | 20 |
| | 366 | 8 |
| | 370 | 2 |
| | 370 | 11 |
| | 375 | 2 |
| | 375 | 15 |
| | 377 | 8 |
| | 421 | 9 |
| | 426 | 9 |
| | 503 | 21 |
| | 519 | 21 |
| 01010-81050 | 120 | 8 |
| | 120 | 13 |
| 01010-81060 | 120 | 10 |
| 01010-81075 | 266 | 47 |
| 01010-81220 | 167 | 5 |
| | 272 | 9 |
| | 273 | 9 |
| | 407 | 13 |
| | 476 | 8 |
| | 478 | 4 |
| | 485 | 4 |
| | 567 | 14 |
| 01010-81225 | 128 | 16 |
| | 132 | 2 |
| | 134 | 47 |
| | 136 | 44 |
| | 141 | 11 |
| | 141 | 21 |
| | 141 | 24 |
| | 141 | 27 |
| | 142 | 11 |
| | 142 | 20 |
| | 142 | 31 |
| | 142 | 35 |
| | 143 | 14 |
| | 143 | 24 |
| | 143 | 27 |
| | 143 | 30 |
| | 145 | 14 |
| | 145 | 25 |
| | 145 | 29 |
| | 146 | 15 |
| | 146 | 25 |
| | 146 | 28 |
| | 146 | 31 |
| | 148 | 15 |
| | 148 | 26 |
| | 148 | 30 |
| | 150 | 10 |
| | 151 | 8 |
| | 151 | 11 |
| | 151 | 23 |
| | 152 | 4 |
| | 152 | 7 |
| | 152 | 10 |
| | 152 | 13 |
| | 152 | 16 |
| | 152 | 19 |
| | 152 | 22 |
| | 152 | 25 |
| | 152 | 28 |
| | 152 | 31 |
| | 152 | 34 |
| | 152 | 37 |
| | 153 | 41 |
| | 153 | 44 |
| | 153 | 49 |
| | 154 | 2 |
| | 154 | 5 |
| | 154 | 12 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 154 | 15 |
| | 154 | 18 |
| | 154 | 25 |
| | 154 | 28 |
| | 154 | 31 |
| | 154 | 34 |
| | 154 | 37 |
| | 155 | 40 |
| | 156 | 2 |
| | 156 | 5 |
| | 156 | 9 |
| | 156 | 12 |
| | 156 | 15 |
| | 156 | 18 |
| | 156 | 21 |
| | 156 | 24 |
| | 156 | 31 |
| | 156 | 34 |
| | 162 | 4 |
| | 162 | 6 |
| | 162 | 10 |
| | 163 | 4 |
| | 163 | 6 |
| | 163 | 10 |
| | 166 | 5 |
| | 193 | 10 |
| | 219 | 10 |
| | 246 | 16 |
| | 246 | 20 |
| | 247 | 16 |
| | 247 | 20 |
| | 250 | 22 |
| | 252 | 7 |
| | 253 | 8 |
| | 253 | 20 |
| | 253 | 34 |
| | 254 | 8 |
| | 254 | 20 |
| | 254 | 34 |
| | 255 | 4 |

| Part Number | Page | Index |
|---|---|---|
| | 255 | 8 |
| | 263 | 30 |
| | 265 | 14 |
| | 265 | 29 |
| | 266 | 39 |
| | 266 | 52 |
| | 267 | 36 |
| | 269 | 28 |
| | 276 | 20 |
| | 279 | 21 |
| | 279 | 28 |
| | 280 | 21 |
| | 280 | 28 |
| | 281 | 29 |
| | 282 | 21 |
| | 282 | 23 |
| | 285 | 36 |
| | 287 | 36 |
| | 289 | 40 |
| | 291 | 40 |
| | 293 | 35 |
| | 309 | 5 |
| | 310 | 19 |
| | 310 | 25 |
| | 311 | 42 |
| | 385 | 5 |
| | 385 | 11 |
| | 385 | 18 |
| | 385 | 21 |
| | 385 | 27 |
| | 385 | 33 |
| | 386 | 47 |
| | 387 | 4 |
| | 387 | 9 |
| | 387 | 12 |
| | 387 | 18 |
| | 388 | 17 |
| | 388 | 20 |
| | 390 | 4 |
| | 390 | 8 |

| Part Number | Page | Index |
|---|---|---|
| | 390 | 14 |
| | 391 | 17 |
| | 391 | 20 |
| | 393 | 4 |
| | 393 | 8 |
| | 393 | 14 |
| | 445 | 4 |
| | 445 | 17 |
| | 446 | 4 |
| | 446 | 17 |
| | 545 | 21 |
| | 545 | 35 |
| | 567 | 21 |
| | 567 | 26 |
| | 570 | 11 |
| | 571 | 12 |
| | 571 | 17 |
| | 571 | 26 |
| | 571 | 38 |
| | 574 | 6 |
| | 574 | 11 |
| | 574 | 19 |
| 01010-81230 | 121 | 4 |
| | 124 | 9 |
| | 125 | 9 |
| | 133 | 10 |
| | 135 | 10 |
| | 157 | 46 |
| | 157 | 53 |
| | 158 | 7 |
| | 169 | 24 |
| | 169 | 32 |
| | 171 | 28 |
| | 171 | 36 |
| | 265 | 11 |
| | 265 | 16 |
| | 269 | 7 |
| | 284 | 4 |
| | 284 | 9 |
| | 284 | 14 |

| Part Number | Page | Index |
|---|---|---|
| | 286 | 4 |
| | 286 | 9 |
| | 286 | 14 |
| | 288 | 4 |
| | 288 | 9 |
| | 288 | 13 |
| | 288 | 18 |
| | 290 | 4 |
| | 290 | 9 |
| | 290 | 13 |
| | 290 | 18 |
| | 292 | 4 |
| | 292 | 9 |
| | 292 | 14 |
| | 346 | 5 |
| | 380 | 26 |
| | 381 | 27 |
| | 383 | 5 |
| | 384 | 5 |
| | 386 | 44 |
| | 386 | 49 |
| | 386 | 51 |
| | 387 | 27 |
| | 387 | 33 |
| | 388 | 32 |
| | 388 | 35 |
| | 389 | 14 |
| | 389 | 16 |
| | 389 | 18 |
| | 389 | 21 |
| | 390 | 17 |
| | 390 | 19 |
| | 390 | 22 |
| | 390 | 29 |
| | 390 | 32 |
| | 390 | 34 |
| | 391 | 32 |
| | 391 | 35 |
| | 392 | 14 |
| | 392 | 16 |

| Part Number | Page | Index |
|---|---|---|
| | 392 | 18 |
| | 392 | 21 |
| | 393 | 17 |
| | 393 | 19 |
| | 393 | 22 |
| | 393 | 29 |
| | 393 | 32 |
| | 393 | 34 |
| | 394 | 4 |
| | 394 | 6 |
| | 394 | 30 |
| | 394 | 32 |
| | 394 | 34 |
| | 395 | 38 |
| | 395 | 40 |
| | 396 | 4 |
| | 396 | 6 |
| | 396 | 32 |
| | 396 | 34 |
| | 396 | 36 |
| | 397 | 40 |
| | 397 | 42 |
| | 397 | 45 |
| | 399 | 5 |
| | 399 | 7 |
| | 399 | 31 |
| | 399 | 33 |
| | 399 | 35 |
| | 400 | 39 |
| | 400 | 41 |
| | 401 | 15 |
| | 401 | 19 |
| | 402 | 15 |
| | 402 | 19 |
| | 405 | 7 |
| | 406 | 3 |
| | 409 | 6 |
| | 409 | 8 |
| | 409 | 10 |
| | 409 | 12 |

| Part Number | Page | Index |
|---|---|---|
| | 409 | 18 |
| | 409 | 21 |
| | 409 | 28 |
| | 409 | 31 |
| | 409 | 34 |
| | 410 | 36 |
| | 410 | 38 |
| | 410 | 40 |
| | 410 | 42 |
| | 410 | 45 |
| | 410 | 48 |
| | 411 | 6 |
| | 411 | 8 |
| | 411 | 10 |
| | 411 | 12 |
| | 411 | 18 |
| | 411 | 21 |
| | 411 | 28 |
| | 411 | 31 |
| | 411 | 34 |
| | 412 | 36 |
| | 412 | 38 |
| | 412 | 40 |
| | 412 | 42 |
| | 412 | 45 |
| | 413 | 6 |
| | 413 | 8 |
| | 413 | 10 |
| | 413 | 12 |
| | 413 | 18 |
| | 413 | 21 |
| | 413 | 28 |
| | 413 | 31 |
| | 413 | 34 |
| | 414 | 36 |
| | 414 | 38 |
| | 414 | 40 |
| | 414 | 42 |
| | 414 | 45 |
| | 414 | 48 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 437 | 37 |
| | 441 | 37 |
| | 474 | 15 |
| | 474 | 35 |
| | 475 | 45 |
| | 478 | 7 |
| | 479 | 19 |
| | 481 | 11 |
| | 483 | 15 |
| | 483 | 35 |
| | 484 | 45 |
| | 485 | 7 |
| | 503 | 12 |
| | 503 | 31 |
| | 504 | 37 |
| | 505 | 13 |
| | 505 | 18 |
| | 507 | 11 |
| | 507 | 16 |
| | 508 | 11 |
| | 508 | 16 |
| | 516 | 11 |
| | 516 | 16 |
| | 517 | 13 |
| | 517 | 18 |
| | 519 | 12 |
| | 519 | 31 |
| | 520 | 37 |
| | 535 | 35 |
| | 567 | 24 |
| | 573 | 3 |
| | 573 | 6 |
| | 573 | 12 |
| 01010-81235 | 141 | 29 |
| | 143 | 32 |
| | 146 | 33 |
| | 248 | 6 |
| | 252 | 5 |
| | 253 | 26 |
| | 254 | 26 |
| | 256 | 11 |
| | 256 | 15 |
| | 269 | 12 |
| | 269 | 21 |
| | 294 | 9 |
| | 429 | 23 |
| | 468 | 3 |
| | 479 | 22 |
| | 481 | 5 |
| | 545 | 17 |
| | 574 | 15 |
| | 574 | 22 |
| 01010-81240 | 129 | 4 |
| | 145 | 5 |
| | 148 | 6 |
| | 252 | 3 |
| | 253 | 3 |
| | 253 | 5 |
| | 253 | 24 |
| | 254 | 3 |
| | 254 | 5 |
| | 254 | 24 |
| | 261 | 2 |
| | 261 | 13 |
| | 269 | 17 |
| | 311 | 47 |
| | 387 | 35 |
| | 406 | 2 |
| | 437 | 27 |
| | 441 | 27 |
| 01010-81245 | 151 | 4 |
| | 249 | 19 |
| | 250 | 15 |
| | 251 | 24 |
| | 263 | 9 |
| | 264 | 42 |
| | 267 | 9 |
| | 268 | 48 |
| | 338 | 34 |
| | 503 | 9 |
| | 503 | 28 |
| | 504 | 40 |
| | 519 | 9 |
| | 519 | 28 |
| | 520 | 40 |
| 01010-81250 | 141 | 18 |
| | 143 | 21 |
| | 146 | 22 |
| | 261 | 30 |
| | 261 | 32 |
| | 269 | 14 |
| | 309 | 2 |
| | 310 | 28 |
| | 422 | 34 |
| | 427 | 34 |
| | 567 | 11 |
| 01010-81255 | 272 | 15 |
| | 273 | 15 |
| 01010-81260 | 156 | 38 |
| | 310 | 31 |
| | 311 | 44 |
| | 571 | 21 |
| | 571 | 28 |
| 01010-81265 | 157 | 49 |
| | 157 | 57 |
| | 281 | 20 |
| 01010-81275 | 121 | 9 |
| | 141 | 15 |
| | 142 | 23 |
| | 143 | 18 |
| | 145 | 17 |
| | 146 | 19 |
| | 148 | 18 |
| | 479 | 10 |
| | 479 | 25 |
| 01010-81280 | 265 | 26 |
| | 300 | 3 |
| 01010-81285 | 154 | 9 |
| | 154 | 22 |
| | 261 | 16 |
| | 263 | 32 |
| | 268 | 38 |
| 01010-81295 | 263 | 27 |
| | 267 | 33 |
| 01010-81440 | 310 | 4 |
| | 421 | 22 |
| | 426 | 22 |
| 01010-81450 | 535 | 11 |
| 01010-81635 | 133 | 24 |
| | 134 | 37 |
| | 135 | 24 |
| | 135 | 34 |
| | 138 | 19 |
| | 139 | 19 |
| | 170 | 43 |
| | 172 | 47 |
| | 193 | 13 |
| | 219 | 13 |
| | 281 | 26 |
| 01010-81640 | 134 | 39 |
| | 135 | 36 |
| | 193 | 2 |
| | 219 | 2 |
| | 294 | 3 |
| | 495 | 4 |
| 01010-81645 | 193 | 4 |
| | 219 | 4 |
| | 479 | 7 |
| 01010-81660 | 576 | 2 |
| 01010-81665 | 479 | 15 |
| 01010-81670 | 487 | 19 |
| | 489 | 19 |
| | 506 | 17 |
| 01010-81675 | 537 | 9 |
| 01010-81680 | 452 | 9 |
| | 453 | 9 |
| 01010-81695 | 491 | 18 |
| | 493 | 18 |
| | 509 | 16 |
| 01010-81875 | 496 | 23 |
| 01010-82060 | 422 | 32 |
| | 427 | 32 |
| 01010-82065 | 466 | 5 |
| | 467 | 5 |
| 01010-82460 | 544 | 4 |
| 01010-D0640 | 303 | 16 |
| 01010-D0820 | 303 | 26 |
| | 312 | 2 |
| | 334 | 17 |
| 01010-D0825 | 331 | 3 |
| | 331 | 7 |
| 01010-D1025 | 160 | 2 |
| | 161 | 2 |
| | 303 | 21 |
| | 327 | 8 |
| 01010-D1030 | 159 | 2 |
| | 382 | 15 |
| | 568 | 6 |
| 01010-D1035 | 161 | 7 |
| | 373 | 7 |
| 01010-D1045 | 343 | 11 |
| | 373 | 10 |
| 01010-D1060 | 160 | 5 |
| 01010-D1220 | 164 | 4 |
| | 300 | 8 |
| | 303 | 14 |
| 01010-D1225 | 301 | 3 |
| 01010-D1230 | 359 | 2 |
| | 382 | 3 |
| | 382 | 7 |
| | 382 | 11 |
| | 382 | 19 |
| | 382 | 23 |
| | 568 | 3 |
| | 568 | 11 |
| 01010-D1245 | 303 | 18 |
| 01010-D1275 | 303 | 10 |
| 01010-D1650 | 338 | 36 |
| 01011-61455 | 201 | 26 |
| 01011-81025 | 249 | 21 |
| 01011-81040 | 251 | 22 |
| 01011-81210 | 153 | 53 |
| | 573 | 9 |
| 01011-81250 | 500 | 3 |
| 01011-81600 | 491 | 20 |
| | 493 | 20 |
| | 509 | 18 |
| 01011-81610 | 535 | 7 |
| | 535 | 27 |
| 01011-81630 | 535 | 21 |
| 01011-81650 | 536 | 43 |
| 01011-81800 | 498 | 22 |
| 01011-81805 | 498 | 24 |
| 01011-B1655 | 122 | 19 |
| 01011-D1245 | 302 | 3 |
| | 303 | 4 |
| | 303 | 7 |
| 01013-83010 | 535 | 30 |
| 01018-31095 | 114 | 5 |
| 01019-11205 | 543 | 8 |
| 01023-10508 | 360 | 40 |
| 01023-10612 | 321 | 4 |
| | 321 | 6 |
| 01023-20412 | 325 | 2 |
| 01023-20416 | 325 | 8 |
| | 343 | 20 |
| 01023-20512 | 355 | 12 |
| | 355 | 16 |
| | 361 | 12 |
| | 361 | 16 |
| | 409 | 17 |
| | 411 | 17 |
| | 413 | 17 |
| 01023-20612 | 300 | 11 |
| | 307 | 6 |
| | 318 | 10 |
| 01023-20616 | 308 | 8 |
| | 318 | 16 |
| | 318 | 18 |
| | 326 | 30 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 01023-20620 | 323 | 10 |
| 01023-60410 | 354 | 10 |
| 01023-60510 | 354 | 3 |
| 01023-60512 | 327 | 2 |
| 01023-60620 | 337 | 4 |
| 01023-70412 | 325 | 12 |
| 01050-31230 | 115 | 11 |
| 01224-40616 | 394 | 29 |
| | 396 | 31 |
| | 399 | 30 |
| 01240-00616 | 321 | 7 |
| 01245-00616 | 316 | 16 |
| | 317 | 45 |
| | 319 | 9 |
| | 326 | 17 |
| | 326 | 23 |
| | 328 | 9 |
| | 329 | 17 |
| | 330 | 4 |
| | 353 | 12 |
| | 353 | 18 |
| | 353 | 23 |
| | 359 | 13 |
| | 359 | 20 |
| | 359 | 23 |
| 01245-00620 | 319 | 21 |
| | 355 | 9 |
| | 361 | 9 |
| 01245-00816 | 308 | 9 |
| | 316 | 19 |
| | 316 | 26 |
| | 316 | 29 |
| | 328 | 20 |
| 01245-00820 | 319 | 18 |
| | 364 | 5 |
| 01245-00825 | 314 | 5 |
| 01245-01016 | 328 | 7 |
| | 328 | 15 |
| 01245-01025 | 346 | 8 |
| | 346 | 10 |

| Part Number | Page | Index |
|---|---|---|
| 01252-30625 | 372 | 15 |
| 01252-41025 | 350 | 10 |
| | 356 | 10 |
| 01252-60635 | 185 | 19 |
| | 207 | 19 |
| | 245 | 4 |
| | 245 | 9 |
| | 245 | 14 |
| 01252-60816 | 185 | 12 |
| | 207 | 12 |
| 01252-60820 | 176 | 14 |
| | 197 | 14 |
| | 213 | 10 |
| | 228 | 10 |
| | 230 | 10 |
| 01252-60825 | 188 | 11 |
| | 210 | 11 |
| | 420 | 22 |
| | 425 | 22 |
| 01252-60845 | 187 | 16 |
| | 209 | 16 |
| | 214 | 5 |
| | 229 | 5 |
| | 231 | 5 |
| 01252-60855 | 185 | 18 |
| | 207 | 18 |
| 01252-61030 | 262 | 7 |
| 01252-61040 | 187 | 6 |
| | 209 | 6 |
| | 262 | 6 |
| 01252-61045 | 182 | 14 |
| | 204 | 14 |
| 01252-61070 | 190 | 6 |
| | 212 | 6 |
| | 227 | 6 |
| 01252-61075 | 189 | 26 |
| | 211 | 26 |
| | 260 | 1 |
| 01252-61080 | 188 | 17 |
| | 190 | 26 |

| Part Number | Page | Index |
|---|---|---|
| | 210 | 17 |
| | 216 | 20 |
| 01252-61230 | 237 | 22 |
| | 241 | 19 |
| 01252-61235 | 435 | 20 |
| | 439 | 20 |
| 01252-61440 | 238 | 29 |
| | 239 | 8 |
| | 242 | 29 |
| | 243 | 8 |
| 01252-70516 | 169 | 38 |
| | 172 | 42 |
| 01252-70816 | 354 | 18 |
| 01252-71030 | 404 | 4 |
| | 405 | 4 |
| 01252-80616 | 308 | 3 |
| | 316 | 23 |
| 01252-80820 | 355 | 3 |
| | 361 | 3 |
| 01252-80825 | 297 | 1 |
| 01310-01216 | 487 | 28 |
| | 489 | 28 |
| | 491 | 33 |
| | 493 | 33 |
| | 496 | 30 |
| | 498 | 35 |
| | 506 | 24 |
| | 509 | 29 |
| 01370-00508 | 407 | 12 |
| 01370-10308 | 338 | 16 |
| 01370-20308 | 338 | 19 |
| 01370-30412 | 313 | 8 |
| 01370-40510 | 355 | 14 |
| | 361 | 14 |
| 01434-10616 | 129 | 24 |
| 01435-00610 | 335 | 10 |
| | 335 | 12 |
| | 335 | 14 |
| | 335 | 16 |
| | 335 | 19 |

| Part Number | Page | Index |
|---|---|---|
| | 336 | 6 |
| | 338 | 30 |
| 01435-00612 | 316 | 35 |
| | 326 | 8 |
| | 326 | 12 |
| | 326 | 19 |
| | 326 | 25 |
| | 332 | 6 |
| | 332 | 10 |
| | 339 | 39 |
| | 353 | 20 |
| | 359 | 17 |
| 01435-00616 | 318 | 2 |
| | 323 | 2 |
| | 329 | 2 |
| | 329 | 6 |
| | 329 | 21 |
| 01435-00625 | 310 | 37 |
| | 310 | 38 |
| 01435-00630 | 310 | 34 |
| | 310 | 36 |
| 01435-00812 | 54 | 10 |
| 01435-00816 | 52 | 6 |
| | 337 | 3 |
| 01435-00820 | 37 | 12 |
| | 38 | 13 |
| | 53 | 2 |
| | 54 | 2 |
| | 56 | 2 |
| | 78 | 4 |
| | 329 | 8 |
| | 335 | 4 |
| | 335 | 6 |
| 01435-00825 | 91 | 9 |
| | 101 | 1 |
| 01435-00845 | 52 | 4 |
| 01435-00860 | 335 | 2 |
| 01435-01020 | 54 | 5 |
| | 97 | 2 |
| 01435-01025 | 37 | 10 |

| Part Number | Page | Index |
|---|---|---|
| | 38 | 10 |
| 01435-01030 | 37 | 8 |
| | 38 | 8 |
| 01435-01035 | 98 | 2 |
| 01435-01095 | 78 | 3 |
| 01435-01220 | 320 | 18 |
| | 320 | 19 |
| 01435-01235 | 37 | 6 |
| | 38 | 6 |
| 01435-40612 | 304 | 5 |
| | 305 | 5 |
| | 306 | 5 |
| 01435-40616 | 304 | 2 |
| | 305 | 2 |
| | 306 | 2 |
| | 318 | 14 |
| | 322 | 5 |
| | 333 | 12 |
| | 338 | 11 |
| | 338 | 22 |
| 01435-40620 | 307 | 9 |
| | 338 | 25 |
| | 365 | 7 |
| 01435-40812 | 316 | 11 |
| | 325 | 9 |
| | 336 | 2 |
| 01435-40816 | 355 | 6 |
| | 361 | 6 |
| 01435-40820 | 334 | 6 |
| | 334 | 11 |
| 01435-40825 | 322 | 2 |
| | 327 | 6 |
| 01580-01008 | 373 | 38 |
| | 374 | 41 |
| 01580-10403 | 338 | 8 |
| 01580-10605 | 308 | 5 |
| 01580-10806 | 238 | 26 |
| | 242 | 26 |
| 01580-11008 | 316 | 37 |
| | 322 | 12 |

| Part Number | Page | Index |
|---|---|---|
| | 385 | 36 |
| | 387 | 24 |
| | 466 | 11 |
| | 467 | 11 |
| 01580-11210 | 115 | 8 |
| | 380 | 7 |
| | 381 | 5 |
| | 500 | 5 |
| | 543 | 9 |
| 01580-11613 | 122 | 14 |
| | 535 | 8 |
| | 535 | 22 |
| | 535 | 28 |
| | 536 | 44 |
| | 576 | 4 |
| 01580-11815 | 470 | 7 |
| 01580-12016 | 466 | 7 |
| | 467 | 7 |
| | 502 | 10 |
| | 502 | 15 |
| | 502 | 20 |
| | 502 | 23 |
| | 514 | 11 |
| | 514 | 16 |
| | 514 | 21 |
| | 514 | 24 |
| | 538 | 4 |
| | 539 | 14 |
| | 542 | 7 |
| | 543 | 13 |
| | 544 | 10 |
| 01580-12419 | 544 | 5 |
| 01580-30806 | 567 | 8 |
| 01580-40605 | 355 | 10 |
| | 361 | 10 |
| 01583-11408 | 244 | 12 |
| | 374 | 34 |
| 01583-11811 | 316 | 32 |
| 01584-00605 | 54 | 8 |
| | 66 | 7 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 111 | 11 |
| 01584-30806 | 319 | 3 |
| 01584-31008 | 317 | 39 |
| 01590-33033 | 535 | 32 |
| 01594-01008 | 37 | 3 |
| | 38 | 3 |
| 01597-01009 | 133 | 14 |
| | 134 | 53 |
| | 135 | 14 |
| | 136 | 50 |
| | 422 | 19 |
| | 427 | 19 |
| | 488 | 41 |
| | 490 | 41 |
| | 492 | 46 |
| | 494 | 46 |
| | 497 | 50 |
| | 499 | 55 |
| | 506 | 38 |
| | 510 | 43 |
| 01601-20410 | 338 | 10 |
| 01601-20513 | 170 | 39 |
| | 172 | 43 |
| | 360 | 41 |
| 01602-21648 | 537 | 10 |
| 01640-20408 | 338 | 9 |
| 01640-20610 | 308 | 6 |
| 01640-20816 | 380 | 11 |
| | 380 | 14 |
| | 381 | 9 |
| | 381 | 12 |
| 01641-01016 | 114 | 6 |
| 01641-21223 | 115 | 5 |
| 01643-30623 | 129 | 25 |
| | 138 | 10 |
| | 139 | 10 |
| | 151 | 21 |
| | 325 | 1 |
| | 353 | 6 |
| | 353 | 15 |
| | 354 | 5 |
| | 359 | 10 |
| | 359 | 16 |
| | 385 | 25 |
| | 385 | 31 |
| | 387 | 16 |
| | 387 | 22 |
| | 388 | 24 |
| | 391 | 24 |
| | 401 | 11 |
| | 402 | 11 |
| | 570 | 6 |
| | 570 | 9 |
| 01643-30823 | 121 | 3 |
| | 132 | 6 |
| | 132 | 16 |
| | 142 | 34 |
| | 145 | 28 |
| | 148 | 29 |
| | 151 | 15 |
| | 151 | 17 |
| | 151 | 19 |
| | 165 | 4 |
| | 310 | 12 |
| | 313 | 6 |
| | 321 | 17 |
| | 341 | 15 |
| | 352 | 2 |
| | 358 | 2 |
| | 364 | 3 |
| | 370 | 29 |
| | 370 | 31 |
| | 375 | 36 |
| | 375 | 38 |
| | 388 | 29 |
| | 391 | 29 |
| | 428 | 11 |
| | 567 | 2 |
| | 567 | 9 |
| | 567 | 12 |
| 01643-31032 | 120 | 4 |
| | 120 | 9 |
| | 120 | 11 |
| | 120 | 14 |
| | 128 | 14 |
| | 129 | 8 |
| | 129 | 12 |
| | 129 | 19 |
| | 130 | 3 |
| | 130 | 10 |
| | 130 | 14 |
| | 130 | 23 |
| | 131 | 37 |
| | 132 | 12 |
| | 132 | 19 |
| | 132 | 22 |
| | 133 | 8 |
| | 133 | 13 |
| | 133 | 21 |
| | 133 | 28 |
| | 133 | 32 |
| | 133 | 34 |
| | 134 | 42 |
| | 134 | 52 |
| | 135 | 8 |
| | 135 | 13 |
| | 135 | 21 |
| | 135 | 28 |
| | 135 | 31 |
| | 136 | 39 |
| | 136 | 49 |
| | 145 | 2 |
| | 148 | 2 |
| | 151 | 26 |
| | 152 | 2 |
| | 153 | 48 |
| | 156 | 28 |
| | 158 | 4 |
| | 158 | 11 |
| | 166 | 4 |
| | 246 | 24 |
| | 246 | 27 |
| | 247 | 24 |
| | 247 | 27 |
| | 249 | 22 |
| | 251 | 23 |
| | 253 | 39 |
| | 263 | 2 |
| | 265 | 21 |
| | 265 | 23 |
| | 265 | 34 |
| | 266 | 36 |
| | 266 | 48 |
| | 267 | 2 |
| | 270 | 16 |
| | 270 | 18 |
| | 276 | 14 |
| | 276 | 18 |
| | 279 | 15 |
| | 279 | 19 |
| | 280 | 15 |
| | 280 | 19 |
| | 310 | 16 |
| | 322 | 13 |
| | 343 | 2 |
| | 343 | 5 |
| | 343 | 14 |
| | 344 | 4 |
| | 344 | 6 |
| | 345 | 4 |
| | 345 | 6 |
| | 348 | 3 |
| | 348 | 4 |
| | 348 | 7 |
| | 348 | 11 |
| | 348 | 15 |
| | 348 | 19 |
| | 348 | 21 |
| | 348 | 24 |
| | 348 | 28 |
| | 353 | 3 |
| | 360 | 45 |
| | 360 | 48 |
| | 366 | 9 |
| | 366 | 11 |
| | 369 | 3 |
| | 369 | 9 |
| | 369 | 15 |
| | 370 | 3 |
| | 370 | 12 |
| | 373 | 4 |
| | 373 | 5 |
| | 373 | 14 |
| | 375 | 3 |
| | 375 | 16 |
| | 377 | 9 |
| | 377 | 11 |
| | 394 | 24 |
| | 394 | 27 |
| | 396 | 26 |
| | 396 | 29 |
| | 399 | 25 |
| | 399 | 28 |
| | 401 | 7 |
| | 402 | 7 |
| | 416 | 13 |
| | 417 | 13 |
| | 421 | 10 |
| | 422 | 20 |
| | 422 | 22 |
| | 422 | 24 |
| | 426 | 10 |
| | 427 | 20 |
| | 427 | 22 |
| | 427 | 24 |
| | 466 | 12 |
| | 467 | 12 |
| | 488 | 42 |
| | 490 | 42 |
| | 492 | 47 |
| | 494 | 47 |
| | 497 | 45 |
| | 499 | 50 |
| | 503 | 20 |
| | 503 | 22 |
| | 506 | 39 |
| | 510 | 44 |
| | 519 | 20 |
| | 519 | 22 |
| | 535 | 15 |
| | 567 | 5 |
| | 567 | 30 |
| | 575 | 27 |
| 01643-31232 | 121 | 5 |
| | 122 | 10 |
| | 122 | 4 |
| | 122 | 8 |
| | 124 | 10 |
| | 125 | 10 |
| | 128 | 17 |
| | 129 | 5 |
| | 132 | 3 |
| | 133 | 11 |
| | 134 | 48 |
| | 135 | 11 |
| | 136 | 45 |
| | 141 | 12 |
| | 141 | 16 |
| | 141 | 19 |
| | 141 | 22 |
| | 141 | 25 |
| | 141 | 28 |
| | 141 | 30 |
| | 142 | 12 |
| | 142 | 21 |
| | 142 | 24 |
| | 142 | 32 |
| | 142 | 36 |
| | 143 | 15 |
| | 143 | 19 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 143 | 22 |
| | 143 | 25 |
| | 143 | 28 |
| | 143 | 31 |
| | 143 | 33 |
| | 145 | 6 |
| | 145 | 15 |
| | 145 | 18 |
| | 145 | 26 |
| | 145 | 30 |
| | 146 | 16 |
| | 146 | 20 |
| | 146 | 23 |
| | 146 | 26 |
| | 146 | 29 |
| | 146 | 32 |
| | 146 | 34 |
| | 148 | 7 |
| | 148 | 16 |
| | 148 | 19 |
| | 148 | 27 |
| | 148 | 31 |
| | 151 | 5 |
| | 151 | 9 |
| | 151 | 12 |
| | 151 | 24 |
| | 152 | 5 |
| | 152 | 8 |
| | 152 | 11 |
| | 152 | 14 |
| | 152 | 17 |
| | 152 | 20 |
| | 152 | 23 |
| | 152 | 26 |
| | 152 | 29 |
| | 152 | 32 |
| | 152 | 35 |
| | 152 | 38 |
| | 153 | 42 |
| | 153 | 45 |
| | 153 | 50 |
| | 153 | 54 |
| | 154 | 3 |
| | 154 | 6 |
| | 154 | 10 |
| | 154 | 13 |
| | 154 | 16 |
| | 154 | 19 |
| | 154 | 23 |
| | 154 | 26 |
| | 154 | 29 |
| | 154 | 32 |
| | 154 | 35 |
| | 154 | 38 |
| | 155 | 41 |
| | 156 | 3 |
| | 156 | 6 |
| | 156 | 10 |
| | 156 | 13 |
| | 156 | 16 |
| | 156 | 19 |
| | 156 | 22 |
| | 156 | 25 |
| | 156 | 32 |
| | 156 | 35 |
| | 156 | 39 |
| | 157 | 47 |
| | 157 | 50 |
| | 157 | 54 |
| | 157 | 58 |
| | 158 | 8 |
| | 162 | 5 |
| | 162 | 7 |
| | 162 | 11 |
| | 163 | 5 |
| | 163 | 7 |
| | 163 | 11 |
| | 166 | 6 |
| | 167 | 6 |
| | 169 | 25 |
| | 169 | 33 |
| | 171 | 29 |
| | 171 | 37 |
| | 193 | 11 |
| | 219 | 11 |
| | 246 | 17 |
| | 246 | 21 |
| | 247 | 17 |
| | 247 | 21 |
| | 248 | 7 |
| | 249 | 20 |
| | 250 | 16 |
| | 250 | 23 |
| | 251 | 25 |
| | 252 | 4 |
| | 252 | 6 |
| | 252 | 8 |
| | 253 | 4 |
| | 253 | 6 |
| | 253 | 9 |
| | 253 | 21 |
| | 253 | 25 |
| | 253 | 27 |
| | 253 | 35 |
| | 254 | 4 |
| | 254 | 6 |
| | 254 | 9 |
| | 254 | 21 |
| | 254 | 25 |
| | 254 | 27 |
| | 254 | 35 |
| | 255 | 5 |
| | 255 | 9 |
| | 256 | 12 |
| | 261 | 3 |
| | 261 | 14 |
| | 261 | 17 |
| | 261 | 33 |
| | 263 | 10 |
| | 263 | 28 |
| | 263 | 31 |
| | 263 | 33 |
| | 264 | 43 |
| | 265 | 12 |
| | 265 | 15 |
| | 265 | 17 |
| | 265 | 27 |
| | 265 | 30 |
| | 266 | 40 |
| | 266 | 53 |
| | 267 | 10 |
| | 267 | 34 |
| | 267 | 37 |
| | 268 | 39 |
| | 268 | 49 |
| | 269 | 8 |
| | 269 | 15 |
| | 269 | 29 |
| | 272 | 10 |
| | 272 | 16 |
| | 273 | 10 |
| | 273 | 16 |
| | 276 | 21 |
| | 279 | 22 |
| | 279 | 29 |
| | 280 | 22 |
| | 280 | 29 |
| | 281 | 21 |
| | 281 | 30 |
| | 282 | 22 |
| | 282 | 24 |
| | 284 | 5 |
| | 284 | 10 |
| | 284 | 15 |
| | 285 | 37 |
| | 286 | 5 |
| | 286 | 10 |
| | 286 | 15 |
| | 287 | 37 |
| | 288 | 5 |
| | 288 | 14 |
| | 288 | 19 |
| | 289 | 41 |
| | 290 | 5 |
| | 290 | 14 |
| | 290 | 19 |
| | 291 | 41 |
| | 292 | 5 |
| | 292 | 10 |
| | 292 | 15 |
| | 293 | 36 |
| | 294 | 10 |
| | 300 | 4 |
| | 309 | 3 |
| | 309 | 6 |
| | 310 | 20 |
| | 310 | 26 |
| | 310 | 29 |
| | 310 | 32 |
| | 311 | 43 |
| | 311 | 45 |
| | 311 | 48 |
| | 338 | 35 |
| | 346 | 6 |
| | 380 | 8 |
| | 380 | 27 |
| | 381 | 6 |
| | 381 | 28 |
| | 383 | 6 |
| | 384 | 6 |
| | 385 | 6 |
| | 385 | 12 |
| | 385 | 19 |
| | 385 | 22 |
| | 385 | 28 |
| | 385 | 34 |
| | 386 | 45 |
| | 386 | 48 |
| | 386 | 50 |
| | 386 | 52 |
| | 387 | 5 |
| | 387 | 10 |
| | 387 | 13 |
| | 387 | 19 |
| | 387 | 28 |
| | 387 | 34 |
| | 387 | 36 |
| | 388 | 18 |
| | 388 | 21 |
| | 388 | 33 |
| | 388 | 36 |
| | 389 | 15 |
| | 389 | 17 |
| | 389 | 19 |
| | 389 | 22 |
| | 390 | 5 |
| | 390 | 9 |
| | 390 | 18 |
| | 390 | 20 |
| | 390 | 23 |
| | 390 | 30 |
| | 390 | 33 |
| | 390 | 35 |
| | 391 | 18 |
| | 391 | 21 |
| | 391 | 33 |
| | 391 | 36 |
| | 392 | 15 |
| | 392 | 17 |
| | 392 | 19 |
| | 392 | 22 |
| | 393 | 5 |
| | 393 | 9 |
| | 393 | 18 |
| | 393 | 20 |
| | 393 | 23 |
| | 393 | 30 |
| | 393 | 33 |
| | 393 | 35 |
| | 394 | 7 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 394 | 31 |
| | 394 | 35 |
| | 395 | 41 |
| | 396 | 7 |
| | 396 | 33 |
| | 396 | 37 |
| | 397 | 43 |
| | 397 | 46 |
| | 399 | 8 |
| | 399 | 32 |
| | 399 | 36 |
| | 400 | 42 |
| | 401 | 16 |
| | 402 | 16 |
| | 403 | 3 |
| | 405 | 8 |
| | 406 | 4 |
| | 407 | 14 |
| | 409 | 7 |
| | 409 | 9 |
| | 409 | 13 |
| | 409 | 19 |
| | 409 | 22 |
| | 409 | 29 |
| | 409 | 32 |
| | 410 | 37 |
| | 410 | 41 |
| | 410 | 43 |
| | 410 | 46 |
| | 410 | 49 |
| | 411 | 7 |
| | 411 | 9 |
| | 411 | 13 |
| | 411 | 19 |
| | 411 | 22 |
| | 411 | 29 |
| | 411 | 32 |
| | 412 | 37 |
| | 412 | 41 |
| | 412 | 43 |
| | 412 | 46 |
| | 413 | 7 |
| | 413 | 9 |
| | 413 | 13 |
| | 413 | 19 |
| | 413 | 22 |
| | 413 | 29 |
| | 413 | 32 |
| | 414 | 37 |
| | 414 | 41 |
| | 414 | 43 |
| | 414 | 46 |
| | 414 | 49 |
| | 422 | 35 |
| | 427 | 35 |
| | 429 | 24 |
| | 437 | 28 |
| | 438 | 38 |
| | 441 | 28 |
| | 442 | 38 |
| | 445 | 5 |
| | 445 | 18 |
| | 446 | 5 |
| | 446 | 18 |
| | 468 | 4 |
| | 476 | 9 |
| | 478 | 5 |
| | 478 | 8 |
| | 479 | 11 |
| | 479 | 26 |
| | 481 | 6 |
| | 481 | 12 |
| | 484 | 5 |
| | 484 | 8 |
| | 500 | 4 |
| | 503 | 10 |
| | 503 | 13 |
| | 503 | 29 |
| | 503 | 32 |
| | 504 | 41 |
| | 505 | 14 |
| | 505 | 19 |
| | 507 | 12 |
| | 507 | 17 |
| | 508 | 12 |
| | 508 | 17 |
| | 516 | 12 |
| | 516 | 17 |
| | 517 | 14 |
| | 517 | 19 |
| | 519 | 10 |
| | 519 | 13 |
| | 519 | 29 |
| | 519 | 32 |
| | 520 | 41 |
| | 545 | 18 |
| | 545 | 22 |
| | 545 | 36 |
| | 567 | 1 |
| | 567 | 12 |
| | 567 | 15 |
| | 567 | 18 |
| | 567 | 22 |
| | 567 | 27 |
| | 570 | 12 |
| | 571 | 13 |
| | 571 | 18 |
| | 571 | 22 |
| | 571 | 27 |
| | 571 | 29 |
| | 571 | 39 |
| | 573 | 4 |
| | 573 | 7 |
| | 573 | 10 |
| | 573 | 13 |
| | 575 | 7 |
| | 575 | 12 |
| | 575 | 16 |
| | 575 | 20 |
| | 575 | 23 |
| 01643-31445 | 179 | 25 |
| | 187 | 22 |
| | 201 | 25 |
| | 209 | 22 |
| | 223 | 25 |
| | 310 | 8 |
| | 421 | 23 |
| | 426 | 23 |
| | 535 | 12 |
| 01643-31645 | 122 | 15 |
| | 122 | 20 |
| | 122 | 22 |
| | 133 | 25 |
| | 134 | 40 |
| | 135 | 25 |
| | 136 | 37 |
| | 138 | 20 |
| | 139 | 20 |
| | 170 | 44 |
| | 172 | 48 |
| | 193 | 3 |
| | 193 | 5 |
| | 193 | 14 |
| | 219 | 3 |
| | 219 | 5 |
| | 219 | 14 |
| | 236 | 9 |
| | 281 | 27 |
| | 294 | 4 |
| | 338 | 37 |
| | 437 | 35 |
| | 441 | 35 |
| | 445 | 20 |
| | 446 | 20 |
| | 452 | 10 |
| | 453 | 10 |
| | 479 | 8 |
| | 479 | 16 |
| | 495 | 5 |
| | 576 | 3 |
| 01643-31845 | 448 | 12 |
| | 449 | 12 |
| | 470 | 6 |
| 01643-32060 | 422 | 33 |
| | 427 | 33 |
| | 466 | 6 |
| | 467 | 6 |
| | 469 | 3 |
| | 470 | 4 |
| | 524 | 10 |
| | 525 | 10 |
| | 526 | 10 |
| | 527 | 10 |
| | 528 | 10 |
| | 529 | 10 |
| | 536 | 48 |
| 01643-32460 | 544 | 6 |
| 01643-33080 | 535 | 31 |
| 01643-50823 | 214 | 6 |
| | 229 | 6 |
| | 231 | 6 |
| | 242 | 20 |
| | 567 | 28 |
| 01643-51032 | 187 | 7 |
| | 209 | 7 |
| | 221 | 29 |
| | 249 | 7 |
| | 249 | 12 |
| | 249 | 16 |
| | 250 | 5 |
| | 250 | 10 |
| | 250 | 12 |
| | 250 | 19 |
| | 251 | 7 |
| | 251 | 15 |
| | 251 | 19 |
| | 253 | 32 |
| | 254 | 32 |
| | 256 | 6 |
| | 256 | 8 |
| | 256 | 21 |
| | 257 | 5 |
| | 257 | 11 |
| | 257 | 16 |
| | 257 | 21 |
| | 258 | 5 |
| | 258 | 11 |
| | 258 | 16 |
| | 258 | 21 |
| | 261 | 7 |
| | 261 | 10 |
| | 261 | 22 |
| | 261 | 27 |
| | 262 | 8 |
| | 263 | 7 |
| | 264 | 38 |
| | 267 | 7 |
| | 268 | 44 |
| | 269 | 4 |
| | 269 | 26 |
| | 269 | 33 |
| | 269 | 35 |
| | 270 | 11 |
| | 271 | 7 |
| | 350 | 11 |
| | 356 | 11 |
| | 422 | 10 |
| | 427 | 10 |
| | 429 | 2 |
| | 431 | 3 |
| | 432 | 3 |
| | 474 | 4 |
| | 474 | 8 |
| | 474 | 20 |
| | 474 | 25 |
| | 474 | 30 |
| | 475 | 40 |
| | 479 | 5 |
| | 483 | 4 |
| | 483 | 8 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 483 | 20 |
| | 483 | 25 |
| | 483 | 30 |
| | 484 | 40 |
| | 487 | 33 |
| | 487 | 35 |
| | 488 | 39 |
| | 489 | 33 |
| | 489 | 35 |
| | 490 | 39 |
| | 491 | 38 |
| | 492 | 40 |
| | 492 | 44 |
| | 493 | 38 |
| | 494 | 40 |
| | 494 | 44 |
| | 497 | 40 |
| | 497 | 42 |
| | 497 | 48 |
| | 499 | 45 |
| | 499 | 47 |
| | 499 | 53 |
| | 501 | 7 |
| | 503 | 5 |
| | 506 | 30 |
| | 506 | 32 |
| | 506 | 38 |
| | 509 | 35 |
| | 509 | 37 |
| | 510 | 41 |
| | 511 | 7 |
| | 515 | 7 |
| | 518 | 7 |
| | 519 | 5 |
| | 545 | 7 |
| 01643-51232 | 142 | 2 |
| | 144 | 2 |
| | 147 | 2 |
| | 390 | 11 |
| | 390 | 16 |
| | 393 | 11 |
| | 393 | 16 |
| 01643-51645 | 487 | 20 |
| | 489 | 20 |
| | 491 | 21 |
| | 493 | 21 |
| | 506 | 18 |
| | 509 | 19 |
| 01643-70623 | 303 | 17 |
| | 308 | 4 |
| | 316 | 17 |
| | 316 | 24 |
| | 317 | 46 |
| | 319 | 10 |
| | 319 | 22 |
| | 326 | 18 |
| | 326 | 24 |
| | 328 | 10 |
| | 329 | 18 |
| | 329 | 24 |
| | 330 | 5 |
| | 353 | 13 |
| | 353 | 24 |
| | 359 | 14 |
| | 359 | 21 |
| | 359 | 24 |
| 01643-70823 | 303 | 27 |
| | 303 | 29 |
| | 308 | 10 |
| | 312 | 3 |
| | 314 | 3 |
| | 314 | 6 |
| | 316 | 20 |
| | 316 | 27 |
| | 316 | 30 |
| | 328 | 21 |
| | 329 | 15 |
| | 331 | 4 |
| | 331 | 8 |
| | 334 | 18 |
| | 355 | 4 |
| | 361 | 4 |
| | 364 | 6 |
| 01643-71032 | 159 | 3 |
| | 160 | 3 |
| | 160 | 6 |
| | 161 | 3 |
| | 161 | 8 |
| | 303 | 22 |
| | 308 | 11 |
| | 317 | 40 |
| | 327 | 9 |
| | 328 | 8 |
| | 328 | 16 |
| | 343 | 12 |
| | 346 | 16 |
| | 373 | 8 |
| | 373 | 11 |
| | 382 | 16 |
| | 568 | 7 |
| 01643-71232 | 164 | 5 |
| | 300 | 9 |
| | 301 | 4 |
| | 302 | 4 |
| | 303 | 5 |
| | 303 | 8 |
| | 303 | 11 |
| | 303 | 15 |
| | 303 | 19 |
| | 359 | 3 |
| | 382 | 4 |
| | 382 | 8 |
| | 382 | 12 |
| | 382 | 20 |
| | 382 | 24 |
| | 568 | 4 |
| | 568 | 12 |
| 01643-72060 | 416 | 5 |
| | 417 | 5 |
| 01643-72260 | 416 | 16 |
| | 417 | 16 |
| 01803-02430 | 522 | 11 |
| | 524 | 14 |
| | 525 | 14 |
| | 526 | 14 |
| | 527 | 14 |
| | 528 | 14 |
| | 529 | 14 |
| | 530 | 11 |
| | 531 | 11 |
| 02030-70751 | 298 | 2 |
| 02030-70757 | 299 | 2 |
| 02090-11285 | 536 | 46 |
| 02290-11219 | 536 | 47 |
| 02753-00608 | 253 | 16 |
| | 254 | 16 |
| 02760-00218 | 279 | 25 |
| | 280 | 25 |
| 02760-00219 | 279 | 24 |
| | 280 | 24 |
| 02760-00220 | 431 | 23 |
| | 432 | 23 |
| 02761-00210 | 545 | 30 |
| 02761-00310 | 545 | 31 |
| 02762-00324 | 146 | 2 |
| 02762-00325 | 141 | 2 |
| 02762-00335 | 141 | 1 |
| | 143 | 1 |
| 02762-00419 | 431 | 20 |
| | 432 | 20 |
| 02762-005A5 | 422 | 5 |
| 02762-305A5 | 427 | 5 |
| 02763-00508 | 255 | 1 |
| 02781-0021D | 370 | 7 |
| | 370 | 16 |
| | 375 | 7 |
| | 375 | 2 |
| 02781-00313 | 545 | 11 |
| 02781-0031D | 370 | 4 |
| | 370 | 13 |
| | 375 | 4 |
| | 375 | 17 |
| 02781-00422 | 431 | 6 |
| | 432 | 6 |
| 02781-00628 | 169 | 6 |
| | 171 | 6 |
| 02782-10214 | 266 | 49 |
| 02782-10311 | 142 | 5 |
| | 144 | 5 |
| | 147 | 5 |
| | 169 | 15 |
| | 171 | 15 |
| | 191 | 9 |
| | 217 | 9 |
| | 220 | 9 |
| | 233 | 9 |
| 02782-10315 | 132 | 7 |
| | 132 | 8 |
| | 169 | 12 |
| | 171 | 12 |
| 02782-10522 | 169 | 9 |
| | 171 | 9 |
| | 429 | 5 |
| 02782-10628 | 120 | 15 |
| | 429 | 7 |
| 02782-10630 | 422 | 28 |
| | 427 | 28 |
| 02783-10315 | 275 | 8 |
| | 278 | 9 |
| 02783-10522 | 422 | 1 |
| | 427 | 1 |
| 02783-10628 | 253 | 13 |
| | 254 | 13 |
| 02789-00210 | 221 | 30 |
| 02896-11008 | 171 | 20 |
| | 185 | 14 |
| | 191 | 4 |
| | 191 | 6 |
| | 191 | 8 |
| | 191 | 12 |
| | 191 | 14 |
| | 191 | 26 |
| | 192 | 2 |
| | 192 | 4 |
| | 192 | 6 |
| | 192 | 9 |
| | 192 | 12 |
| | 207 | 14 |
| | 217 | 4 |
| | 217 | 6 |
| | 217 | 8 |
| | 217 | 12 |
| | 217 | 14 |
| | 217 | 26 |
| | 218 | 2 |
| | 218 | 4 |
| | 218 | 6 |
| | 218 | 9 |
| | 218 | 12 |
| | 218 | 18 |
| | 218 | 21 |
| | 218 | 24 |
| | 220 | 4 |
| | 220 | 6 |
| | 220 | 8 |
| | 220 | 12 |
| | 220 | 14 |
| | 220 | 26 |
| | 221 | 2 |
| | 221 | 4 |
| | 221 | 6 |
| | 221 | 9 |
| | 221 | 12 |
| | 221 | 18 |
| | 221 | 21 |
| | 221 | 24 |
| | 233 | 4 |
| | 233 | 6 |
| | 233 | 8 |
| | 233 | 12 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 233 | 14 |
| | 233 | 26 |
| | 234 | 2 |
| | 234 | 4 |
| | 234 | 6 |
| | 234 | 9 |
| | 234 | 12 |
| | 234 | 18 |
| | 234 | 21 |
| | 234 | 24 |
| | 246 | 6 |
| | 246 | 10 |
| | 246 | 13 |
| | 247 | 6 |
| | 247 | 10 |
| | 247 | 13 |
| | 266 | 51 |
| | 267 | 12 |
| | 267 | 15 |
| | 275 | 6 |
| | 275 | 14 |
| | 278 | 7 |
| | 278 | 15 |
| | 281 | 10 |
| | 281 | 16 |
| | 243 | 24 |
| | 352 | 8 |
| | 358 | 8 |
| | 370 | 8 |
| | 370 | 17 |
| | 373 | 19 |
| | 373 | 22 |
| | 373 | 24 |
| | 375 | 8 |
| | 375 | 11 |
| | 375 | 21 |
| | 375 | 24 |
| | 422 | 26 |
| | 429 | 15 |
| | 429 | 16 |

| Part Number | Page | Index |
|---|---|---|
| | 431 | 10 |
| | 545 | 13 |
| | 545 | 25 |
| | 545 | 28 |
| 02896-11009 | 138 | 5 |
| | 138 | 17 |
| | 139 | 5 |
| | 139 | 17 |
| | 141 | 3 |
| | 142 | 6 |
| | 143 | 3 |
| | 144 | 6 |
| | 146 | 4 |
| | 147 | 6 |
| | 169 | 13 |
| | 169 | 16 |
| | 171 | 13 |
| | 171 | 16 |
| | 171 | 19 |
| | 191 | 10 |
| | 191 | 16 |
| | 192 | 15 |
| | 217 | 10 |
| | 217 | 16 |
| | 218 | 15 |
| | 220 | 10 |
| | 220 | 16 |
| | 221 | 15 |
| | 233 | 10 |
| | 233 | 16 |
| | 234 | 15 |
| | 275 | 9 |
| | 278 | 10 |
| | 281 | 13 |
| | 358 | 10 |
| | 370 | 5 |
| | 370 | 14 |
| | 375 | 5 |
| | 375 | 18 |
| | 545 | 14 |

| Part Number | Page | Index |
|---|---|---|
| | 545 | 26 |
| 02896-11012 | 429 | 12 |
| | 431 | 7 |
| 02896-11015 | 169 | 10 |
| | 171 | 10 |
| | 422 | 3 |
| | 422 | 4 |
| | 422 | 37 |
| | 429 | 14 |
| 02896-11018 | 120 | 16 |
| | 169 | 7 |
| | 171 | 7 |
| | 253 | 15 |
| | 254 | 15 |
| | 422 | 29 |
| | 429 | 17 |
| 02896-51008 | 427 | 26 |
| | 432 | 10 |
| 02896-51012 | 432 | 7 |
| 02896-51015 | 427 | 3 |
| | 427 | 4 |
| | 427 | 37 |
| 02896-51018 | 427 | 29 |
| 04020-01228 | 122 | 10 |
| | 236 | 5 |
| | 237 | 21 |
| | 241 | 18 |
| | 435 | 32 |
| | 439 | 32 |
| 04020-01842 | 416 | 6 |
| | 417 | 6 |
| 04025-00324 | 436 | 31 |
| | 440 | 31 |
| 04025-00412 | 503 | 17 |
| | 519 | 17 |
| 04050-11612 | 401 | 12 |
| | 402 | 12 |
| 04050-13020 | 394 | 22 |
| | 396 | 24 |
| | 399 | 23 |

| Part Number | Page | Index |
|---|---|---|
| 04050-14028 | 429 | 22 |
| 04050-16055 | 535 | 33 |
| 04052-10530 | 322 | 8 |
| 04052-10833 | 303 | 28 |
| | 319 | 16 |
| 04052-20833 | 380 | 12 |
| | 380 | 15 |
| | 381 | 10 |
| | 381 | 13 |
| 04064-03515 | 421 | 30 |
| | 426 | 30 |
| 04064-04518 | 419 | 6 |
| | 424 | 6 |
| | 445 | 9 |
| | 446 | 9 |
| 04064-07525 | 428 | 6 |
| 04065-04818 | 237 | 11 |
| | 241 | 8 |
| | 436 | 14 |
| | 440 | 14 |
| 04065-06220 | 419 | 9 |
| | 424 | 9 |
| 04065-06825 | 237 | 7 |
| 04065-07225 | 436 | 7 |
| | 440 | 7 |
| 04077-00085 | 445 | 14 |
| | 446 | 14 |
| 04081-06012 | 535 | 36 |
| 04120-21747 | 311 | 52 |
| 04205-10520 | 322 | 7 |
| 04205-11038 | 394 | 21 |
| | 396 | 23 |
| | 399 | 22 |
| 04205-11648 | 429 | 21 |
| 04205-30825 | 380 | 10 |
| | 381 | 8 |
| 04205-30828 | 380 | 13 |
| | 381 | 13 |
| 04260-00635 | 496 | 13 |
| | 498 | 13 |

| Part Number | Page | Index |
|---|---|---|
| 04260-00793 | 185 | 36 |
| | 208 | 36 |
| 04260-01587 | 437 | 26 |
| | 441 | 26 |
| 04418-13060 | 548 | 17 |
| | 554 | 3 |
| | 555 | 3 |
| | 555 | 6 |
| | 556 | 3 |
| 04434-50508 | 310 | 14 |
| 04434-50510 | 68 | 8 |
| | 246 | 22 |
| | 247 | 22 |
| 04434-50610 | 374 | 40 |
| 04434-50808 | 567 | 10 |
| 04434-50812 | 246 | 19 |
| | 247 | 19 |
| 04434-51010 | 276 | 16 |
| | 279 | 17 |
| | 280 | 17 |
| 04434-51012 | 156 | 23 |
| | 157 | 44 |
| | 157 | 52 |
| | 162 | 8 |
| | 163 | 8 |
| | 279 | 31 |
| | 280 | 31 |
| | 476 | 7 |
| | 476 | 12 |
| 04434-51208 | 73 | 8 |
| 04434-51212 | 269 | 27 |
| | 279 | 27 |
| | 280 | 27 |
| | 545 | 33 |
| 04434-51308 | 112 | 19 |
| 04434-51312 | 272 | 12 |
| | 273 | 12 |
| 04434-51410 | 348 | 16 |
| | 360 | 46 |
| 04434-51412 | 146 | 14 |

| Part Number | Page | Index |
|---|---|---|
| | 157 | 43 |
| | 157 | 51 |
| | 164 | 7 |
| | 567 | 20 |
| 04434-51512 | 276 | 19 |
| | 279 | 20 |
| | 280 | 20 |
| | 310 | 23 |
| | 545 | 34 |
| 04434-51612 | 142 | 19 |
| | 145 | 13 |
| | 148 | 14 |
| | 272 | 13 |
| | 273 | 13 |
| 04434-51708 | 73 | 10 |
| | 85 | 12 |
| | 337 | 2 |
| 04434-51710 | 422 | 18 |
| | 427 | 18 |
| 04434-51812 | 141 | 33 |
| | 143 | 36 |
| | 146 | 37 |
| 04434-51910 | 348 | 12 |
| 04434-51912 | 141 | 10 |
| | 141 | 23 |
| | 143 | 13 |
| | 143 | 26 |
| | 146 | 27 |
| | 310 | 22 |
| 04434-52110 | 366 | 5 |
| | 377 | 5 |
| 04434-52112 | 142 | 29 |
| | 145 | 23 |
| | 148 | 24 |
| | 281 | 28 |
| | 310 | 21 |
| | 311 | 41 |
| | 476 | 6 |
| 04434-52212 | 279 | 30 |
| 04434-52312 | 225 | 3 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 04434-52511 | 56 | 1 |
| | 337 | 1 |
| | 366 | 6 |
| | 377 | 6 |
| 04434-52512 | 139 | 31 |
| | 141 | 32 |
| | 142 | 26 |
| | 143 | 35 |
| | 145 | 20 |
| | 146 | 36 |
| | 148 | 21 |
| | 280 | 30 |
| | 571 | 19 |
| | 571 | 25 |
| | 571 | 37 |
| | 575 | 10 |
| | 575 | 13 |
| 04434-52712 | 255 | 7 |
| 04434-53211 | 369 | 1 |
| 04434-53212 | 282 | 19 |
| 04434-53411 | 348 | 5 |
| | 348 | 8 |
| | 348 | 22 |
| | 369 | 7 |
| 04434-53412 | 121 | 7 |
| 04435-51210 | 373 | 33 |
| 04435-51512 | 193 | 9 |
| | 219 | 9 |
| 04435-51612 | 272 | 8 |
| | 272 | 11 |
| | 273 | 8 |
| | 273 | 11 |
| 04435-51812 | 139 | 12 |
| | 139 | 19 |
| | 139 | 34 |
| | 141 | 13 |
| | 141 | 20 |
| | 141 | 35 |
| | 143 | 16 |
| | 143 | 23 |
| | 143 | 38 |
| | 146 | 17 |
| | 146 | 24 |
| | 146 | 39 |
| 04435-52112 | 311 | 50 |
| 04530-11222 | 235 | 6 |
| | 240 | 6 |
| 06124-01616 | 354 | 22 |
| 07000-11006 | 435 | 27 |
| | 439 | 27 |
| 07000-11007 | 128 | 7 |
| | 179 | 14 |
| | 183 | 4 |
| | 188 | 10 |
| | 201 | 14 |
| | 205 | 4 |
| | 210 | 10 |
| | 223 | 14 |
| | 226 | 4 |
| | 342 | 17 |
| 07000-11008 | 274 | 24 |
| | 277 | 23 |
| | 372 | 21 |
| 07000-11009 | 183 | 2 |
| | 186 | 37 |
| | 205 | 2 |
| | 208 | 37 |
| | 213 | 11 |
| | 226 | 2 |
| | 228 | 11 |
| | 230 | 11 |
| | 420 | 21 |
| | 425 | 21 |
| | 435 | 19 |
| | 435 | 31 |
| | 439 | 19 |
| | 439 | 31 |
| 07000-11010 | 187 | 13 |
| | 189 | 17 |
| | 189 | 25 |
| | 190 | 19 |
| | 209 | 13 |
| | 211 | 17 |
| | 211 | 25 |
| | 216 | 13 |
| | 259 | 17 |
| | 274 | 25 |
| | 277 | 24 |
| | 342 | 16 |
| 07000-12011 | 187 | 5 |
| | 189 | 15 |
| | 190 | 17 |
| | 209 | 5 |
| | 211 | 15 |
| | 216 | 11 |
| | 259 | 15 |
| | 274 | 4 |
| | 277 | 4 |
| | 373 | 17 |
| | 373 | 20 |
| | 373 | 25 |
| 07000-12012 | 177 | 1 |
| | 177 | 10 |
| | 198 | 1 |
| | 198 | 10 |
| | 222 | 1 |
| | 222 | 10 |
| | 372 | 22 |
| 07000-12014 | 180 | 2 |
| | 202 | 2 |
| | 224 | 2 |
| | 265 | 5 |
| 07000-12015 | 342 | 15 |
| | 343 | 27 |
| | 352 | 6 |
| | 358 | 6 |
| 07000-12016 | 180 | 4 |
| | 202 | 4 |
| | 224 | 4 |
| | 274 | 3 |
| | 277 | 3 |
| 07000-12018 | 341 | 20 |
| | 343 | 22 |
| | 352 | 4 |
| | 358 | 4 |
| 07000-12020 | 182 | 16 |
| | 204 | 16 |
| | 418 | 8 |
| | 423 | 8 |
| 07000-12021 | 177 | 4 |
| | 177 | 11 |
| | 198 | 4 |
| | 198 | 11 |
| | 213 | 12 |
| | 222 | 4 |
| | 222 | 11 |
| | 228 | 12 |
| | 230 | 12 |
| | 260 | 3 |
| 07000-12035 | 187 | 17 |
| | 209 | 17 |
| | 251 | 10 |
| 07000-12055 | 262 | 9 |
| 07000-12060 | 444 | 5 |
| 07000-12100 | 248 | 2 |
| 07000-12105 | 428 | 9 |
| 07000-12115 | 265 | 6 |
| 07000-12125 | 537 | 6 |
| 07000-13024 | 174 | 6 |
| | 174 | 14 |
| | 175 | 8 |
| | 176 | 6 |
| | 176 | 11 |
| | 184 | 4 |
| | 189 | 12 |
| | 190 | 5 |
| | 195 | 6 |
| | 195 | 14 |
| | 196 | 8 |
| | 197 | 6 |
| | 197 | 11 |
| | 206 | 4 |
| | 211 | 12 |
| | 212 | 5 |
| | 215 | 9 |
| | 227 | 5 |
| | 232 | 9 |
| | 259 | 12 |
| 07000-13025 | 256 | 18 |
| | 257 | 7 |
| | 257 | 13 |
| | 257 | 18 |
| | 258 | 7 |
| | 258 | 13 |
| | 258 | 18 |
| | 271 | 2 |
| | 271 | 4 |
| | 431 | 12 |
| | 431 | 17 |
| | 474 | 17 |
| | 490 | 2 |
| | 501 | 2 |
| | 501 | 4 |
| | 515 | 2 |
| | 515 | 4 |
| | 518 | 2 |
| | 518 | 4 |
| 07000-13028 | 177 | 5 |
| | 198 | 5 |
| | 222 | 5 |
| 07000-13030 | 269 | 31 |
| | 474 | 38 |
| | 487 | 37 |
| | 489 | 37 |
| | 497 | 43 |
| | 506 | 33 |
| | 578 | |
| | 578 | |
| | 578 | |
| | 579 | |
| 07000-13032 | 177 | 6 |
| | 177 | 12 |
| | 198 | 6 |
| | 198 | 12 |
| | 213 | 14 |
| | 222 | 6 |
| | 222 | 12 |
| | 228 | 14 |
| | 230 | 14 |
| | 249 | 2 |
| | 249 | 4 |
| | 249 | 9 |
| | 249 | 18 |
| | 250 | 2 |
| | 250 | 7 |
| | 250 | 21 |
| | 251 | 2 |
| | 251 | 4 |
| | 251 | 21 |
| | 253 | 29 |
| | 254 | 29 |
| | 256 | 3 |
| | 257 | 2 |
| | 257 | 8 |
| | 258 | 2 |
| | 258 | 8 |
| | 260 | 2 |
| | 261 | 19 |
| | 261 | 24 |
| | 263 | 35 |
| | 268 | 41 |
| | 269 | 5 |
| | 269 | 24 |
| | 270 | 2 |
| | 270 | 4 |
| | 270 | 6 |
| | 270 | 8 |
| | 474 | 22 |
| | 503 | 24 |
| | 519 | 24 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 07000-13035 | 188 | 9 |
| | 210 | 9 |
| | 221 | 27 |
| | 251 | 12 |
| | 479 | 3 |
| 07000-13036 | 177 | 13 |
| | 198 | 13 |
| | 222 | 13 |
| 07000-13038 | 189 | 24 |
| | 211 | 24 |
| | 264 | 40 |
| | 265 | 19 |
| | 265 | 32 |
| | 268 | 46 |
| | 503 | 7 |
| | 503 | 25 |
| | 503 | 27 |
| | 504 | 39 |
| | 519 | 7 |
| | 519 | 25 |
| | 519 | 27 |
| | 520 | 39 |
| 07000-13040 | 253 | 37 |
| | 435 | 17 |
| | 439 | 17 |
| 07000-13042 | 420 | 20 |
| | 425 | 20 |
| 07000-13045 | 129 | 3 |
| 07000-13048 | 252 | 2 |
| | 253 | 2 |
| | 253 | 23 |
| | 254 | 2 |
| | 254 | 23 |
| 07000-13050 | 138 | 8 |
| | 139 | 8 |
| | 265 | |
| 07000-15070 | 506 | 25 |
| | 578 | |
| 07000-15075 | 487 | 26 |
| | 489 | 26 |
| | 578 | |
| | 579 | |
| 07000-15080 | 428 | 3 |
| 07000-15085 | 496 | 31 |
| | 578 | |
| 07000-15105 | 506 | 16 |
| | 578 | |
| 07000-15110 | 487 | 9 |
| | 487 | 18 |
| | 489 | 9 |
| | 489 | 18 |
| | 578 | |
| 07000-15115 | 579 | |
| 07000-15125 | 496 | 10 |
| | 496 | 22 |
| | 578 | |
| 07000-15160 | 169 | 31 |
| | 171 | 35 |
| | 562 | 9 |
| | 563 | 9 |
| 07000-15195 | 169 | 23 |
| | 171 | 27 |
| | 562 | 10 |
| | 563 | 10 |
| 07000-15240 | 422 | 31 |
| 07000-15310 | 421 | 11 |
| 07000-52060 | 447 | 5 |
| 07000-53025 | 432 | 12 |
| | 432 | 17 |
| | 483 | 17 |
| | 511 | 2 |
| | 511 | 4 |
| 07000-53030 | 483 | 38 |
| | 492 | 42 |
| | 494 | 42 |
| | 499 | 48 |
| | 509 | 38 |
| | 578 | |
| | 578 | |
| | 579 | |
| 07000-53032 | 483 | 22 |
| 07000-55070 | 509 | 30 |
| | 579 | |
| 07000-55075 | 491 | 31 |
| | 493 | 31 |
| | 578 | |
| 07000-55085 | 498 | 36 |
| | 578 | |
| 07000-55105 | 509 | 15 |
| | 579 | |
| 07000-55110 | 491 | 9 |
| | 491 | 17 |
| | 493 | 9 |
| | 493 | 17 |
| | 578 | |
| 07000-55125 | 498 | 10 |
| | 498 | 21 |
| | 578 | |
| 07000-55240 | 427 | 31 |
| 07000-55310 | 426 | 11 |
| 07000-A5165 | 236 | 4 |
| 07000-B1008 | 245 | 17 |
| 07000-B1009 | 235 | 3 |
| | 240 | 3 |
| | 244 | 10 |
| 07000-B2011 | 238 | 22 |
| | 242 | 22 |
| 07000-B2012 | 236 | 6 |
| 07000-B3034 | 238 | 18 |
| | 239 | 2 |
| | 242 | 18 |
| | 243 | 2 |
| 07000-B3045 | 238 | 23 |
| | 239 | 6 |
| | 242 | 23 |
| | 243 | 6 |
| 07000-E2065 | 133 | 6 |
| | 135 | 6 |
| 07000-F2020 | 420 | 11 |
| | 425 | 11 |
| 07001-01006 | 435 | 28 |
| | 439 | 28 |
| 07001-01007 | 179 | 15 |
| | 183 | 5 |
| | 201 | 15 |
| | 205 | 5 |
| | 223 | 15 |
| | 226 | 5 |
| 07001-01008 | 245 | 18 |
| 07001-01009 | 183 | 3 |
| | 205 | 3 |
| | 226 | 3 |
| | 244 | 11 |
| 07001-01010 | 189 | 18 |
| | 190 | 20 |
| | 211 | 18 |
| | 216 | 14 |
| | 259 | 18 |
| 07001-02011 | 189 | 16 |
| | 190 | 18 |
| | 211 | 16 |
| | 216 | 12 |
| | 259 | 16 |
| 07001-02020 | 182 | 17 |
| | 204 | 17 |
| | 420 | 12 |
| | 425 | 12 |
| 07002-01423 | 420 | 19 |
| | 425 | 19 |
| 07002-02434 | 246 | 2 |
| | 247 | 2 |
| 07002-10823 | 173 | 10 |
| | 194 | 10 |
| | 213 | 4 |
| | 228 | 4 |
| | 230 | 4 |
| 07002-11023 | 179 | 17 |
| | 179 | 23 |
| | 187 | 14 |
| | 189 | 20 |
| | 190 | 22 |
| | 201 | 17 |
| | 201 | 23 |
| | 209 | 14 |
| | 211 | 20 |
| | 216 | 16 |
| | 223 | 17 |
| | 223 | 23 |
| | 259 | 20 |
| 07002-11223 | 192 | 3 |
| | 218 | 3 |
| | 221 | 3 |
| | 234 | 3 |
| | 246 | 4 |
| | 247 | 4 |
| | 342 | 4 |
| | 435 | 29 |
| | 439 | 29 |
| | 562 | 11 |
| | 563 | 11 |
| 07002-11423 | 129 | 21 |
| | 142 | 7 |
| | 142 | 9 |
| | 144 | 7 |
| | 144 | 9 |
| | 147 | 7 |
| | 147 | 9 |
| | 169 | 17 |
| | 171 | 17 |
| | 179 | 9 |
| | 179 | 13 |
| | 182 | 5 |
| | 185 | 15 |
| | 185 | 17 |
| | 185 | 33 |
| | 187 | 9 |
| | 191 | 17 |
| | 191 | 20 |
| | 191 | 25 |
| | 191 | 27 |
| | 192 | 7 |
| | 192 | 10 |
| | 192 | 13 |
| | 192 | 16 |
| | 201 | 9 |
| | 201 | 13 |
| | 204 | 5 |
| | 207 | 15 |
| | 207 | 17 |
| | 208 | 33 |
| | 209 | 9 |
| | 217 | 17 |
| | 217 | 20 |
| | 217 | 25 |
| | 217 | 27 |
| | 218 | 7 |
| | 218 | 10 |
| | 218 | 13 |
| | 218 | 16 |
| | 218 | 19 |
| | 218 | 22 |
| | 218 | 25 |
| | 220 | 17 |
| | 220 | 20 |
| | 220 | 25 |
| | 220 | 27 |
| | 221 | 7 |
| | 221 | 10 |
| | 221 | 13 |
| | 221 | 16 |
| | 221 | 19 |
| | 221 | 22 |
| | 221 | 25 |
| | 223 | 9 |
| | 223 | 13 |
| | 233 | 17 |
| | 233 | 20 |
| | 233 | 25 |
| | 233 | 27 |
| | 234 | 7 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 234 | 10 |
| | 234 | 13 |
| | 234 | 16 |
| | 234 | 19 |
| | 234 | 22 |
| | 234 | 25 |
| | 246 | 7 |
| | 246 | 9 |
| | 246 | 14 |
| | 247 | 7 |
| | 247 | 9 |
| | 247 | 14 |
| | 267 | 16 |
| | 274 | 27 |
| | 275 | 7 |
| | 275 | 15 |
| | 278 | 8 |
| | 278 | 16 |
| | 281 | 5 |
| | 281 | 9 |
| | 281 | 11 |
| | 281 | 14 |
| | 281 | 17 |
| | 343 | 25 |
| | 343 | 29 |
| | 352 | 9 |
| | 358 | 11 |
| | 370 | 6 |
| | 370 | 9 |
| | 370 | 15 |
| | 370 | 18 |
| | 375 | 6 |
| | 375 | 9 |
| | 375 | 12 |
| | 375 | 19 |
| | 375 | 22 |
| | 375 | 25 |
| | 422 | 8 |
| | 422 | 27 |
| | 429 | 9 |
| | 431 | 11 |
| | 435 | 10 |
| | 439 | 10 |
| | 545 | 29 |
| 07002-11623 | 185 | 28 |
| | 208 | 28 |
| | 342 | 14 |
| 07002-11823 | 179 | 7 |
| | 189 | 14 |
| | 190 | 16 |
| | 193 | 7 |
| | 201 | 7 |
| | 211 | 14 |
| | 216 | 10 |
| | 219 | 7 |
| | 223 | 7 |
| | 259 | 14 |
| | 435 | 24 |
| | 439 | 24 |
| | 545 | 12 |
| 07002-12034 | 132 | 9 |
| | 138 | 16 |
| | 139 | 16 |
| | 169 | 14 |
| | 171 | 14 |
| | 171 | 21 |
| | 266 | 50 |
| | 267 | 13 |
| | 275 | 10 |
| | 275 | 12 |
| | 275 | 17 |
| | 278 | 11 |
| | 278 | 13 |
| | 278 | 18 |
| | 431 | 8 |
| | 496 | 36 |
| | 545 | 10 |
| | 545 | 24 |
| | 578 | |
| 07002-12434 | 120 | 17 |
| | 169 | 5 |
| | 169 | 8 |
| | 169 | 11 |
| | 171 | 5 |
| | 171 | 8 |
| | 171 | 11 |
| | 180 | 6 |
| | 181 | 4 |
| | 202 | 6 |
| | 203 | 4 |
| | 224 | 6 |
| | 225 | 4 |
| | 253 | 12 |
| | 253 | 14 |
| | 253 | 18 |
| | 254 | 12 |
| | 254 | 14 |
| | 254 | 18 |
| | 261 | 12 |
| | 263 | 25 |
| | 267 | 31 |
| | 422 | 2 |
| | 422 | 30 |
| | 422 | 38 |
| | 429 | 6 |
| | 429 | 13 |
| | 437 | 31 |
| | 545 | 15 |
| | 562 | 12 |
| | 563 | 12 |
| 07002-13034 | 420 | 13 |
| | 425 | 13 |
| 07002-13334 | 189 | 8 |
| | 190 | 14 |
| | 211 | 8 |
| | 216 | 8 |
| | 259 | 8 |
| | 418 | 14 |
| | 423 | 14 |
| 07002-13634 | 178 | 6 |
| | 178 | 10 |
| | 178 | 14 |
| | 178 | 18 |
| | 178 | 22 |
| | 178 | 26 |
| | 178 | 30 |
| | 178 | 34 |
| | 199 | 6 |
| | 199 | 10 |
| | 199 | 14 |
| | 199 | 18 |
| | 199 | 22 |
| | 199 | 26 |
| | 200 | 30 |
| | 200 | 34 |
| | 214 | 4 |
| | 229 | 4 |
| | 231 | 4 |
| 07002-14234 | 265 | 8 |
| | 265 | 10 |
| 07002-51423 | 427 | 8 |
| | 427 | 27 |
| | 432 | 11 |
| 07002-52034 | 432 | 8 |
| | 499 | 41 |
| | 578 | |
| 07002-52434 | 427 | 2 |
| | 427 | 30 |
| | 427 | 38 |
| | 441 | 31 |
| 07002-61023 | 235 | 8 |
| | 236 | 11 |
| | 240 | 9 |
| 07002-61423 | 245 | 19 |
| 07002-62434 | 235 | 5 |
| | 240 | 5 |
| | 240 | 11 |
| | 244 | 13 |
| 07005-00812 | 87 | 8 |
| 07005-01212 | 85 | 7 |
| | 141 | 5 |
| | 143 | 5 |
| | 146 | 6 |
| 07005-01412 | 143 | 11 |
| | 146 | 12 |
| 07005-02216 | 67 | 4 |
| 07005-03016 | 121 | 16 |
| 07020-00000 | 416 | 14 |
| | 417 | 14 |
| | 476 | 1 |
| | 478 | 9 |
| | 485 | 9 |
| | 486 | 1 |
| | 496 | 7 |
| | 498 | 7 |
| | 502 | 4 |
| | 505 | 7 |
| | 506 | 5 |
| | 506 | 8 |
| | 507 | 5 |
| | 508 | 5 |
| | 509 | 5 |
| | 509 | 8 |
| | 514 | 4 |
| | 516 | 5 |
| | 517 | 7 |
| | 535 | 6 |
| | 535 | 19 |
| | 535 | 25 |
| | 562 | 13 |
| | 563 | 13 |
| 07020-00675 | 514 | 5 |
| | 515 | 9 |
| | 520 | 43 |
| | 536 | 41 |
| | 562 | 14 |
| | 563 | 14 |
| 07030-03034 | 121 | 15 |
| 07040-11209 | 246 | 3 |
| | 247 | 3 |
| | 342 | 3 |
| 07040-11409 | 129 | 20 |
| | 142 | 8 |
| | 144 | 8 |
| | 147 | 8 |
| | 185 | 16 |
| | 207 | 16 |
| | 274 | 28 |
| | 422 | 7 |
| | 427 | 7 |
| 07040-12412 | 246 | 1 |
| | 247 | 1 |
| | 253 | 17 |
| | 254 | 17 |
| | 261 | 11 |
| 07040-12414 | 240 | 10 |
| 07042-00312 | 421 | 2 |
| | 426 | 2 |
| 07043-70108 | 43 | 2 |
| | 47 | 2 |
| 07043-A0108 | 138 | 4 |
| | 139 | 4 |
| 07044-12412 | 169 | 4 |
| | 171 | 4 |
| | 235 | 4 |
| | 240 | 4 |
| 07048-01310 | 340 | 5 |
| 07049-01012 | 191 | 1 |
| | 217 | 1 |
| | 220 | 1 |
| | 233 | 1 |
| | 437 | 29 |
| | 441 | 29 |
| 07049-01215 | 191 | 2 |
| | 217 | 2 |
| | 220 | 2 |
| | 233 | 2 |
| | 261 | 29 |
| | 263 | 4 |
| | 267 | 4 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 477 | 1 |
| 07049-01620 | 477 | 2 |
| 07049-02025 | 467 | 15 |
| 07052-31624 | 444 | 4 |
| | 447 | 4 |
| 07056-18425 | 138 | 14 |
| | 139 | 14 |
| 07084-01AA9 | 249 | 1 |
| | 250 | 1 |
| 07094-11024 | 265 | 24 |
| 07095-00628 | 270 | 14 |
| 07095-01038 | 265 | 25 |
| 07095-01241 | 266 | 37 |
| 07095-01245 | 252 | 9 |
| | 253 | 10 |
| | 254 | 10 |
| 07095-20211 | 73 | 11 |
| | 85 | 13 |
| 07097-01005 | 263 | 34 |
| | 268 | 40 |
| 07097-21015 | 503 | 1 |
| | 519 | 1 |
| 07097-21016 | 261 | 23 |
| 07097-21217 | 264 | 39 |
| | 268 | 45 |
| 07097-21218 | 503 | 6 |
| | 519 | 6 |
| 07098-00622 | 431 | 13 |
| | 432 | 13 |
| 07098-01007 | 261 | 18 |
| 07143-10505 | 535 | 2 |
| 07144-10505 | 535 | 18 |
| | 535 | 24 |
| 07145-00070 | 487 | 4 |
| | 489 | 4 |
| | 506 | 4 |
| | 578 | |
| | 578 | |
| | 579 | |
| 07145-00080 | 487 | 6 |
| | 489 | 6 |
| | 496 | 4 |
| | 496 | 6 |
| | 578 | |
| | 578 | |
| 07145-00090 | 478 | 1 |
| | 480 | 10 |
| | 505 | 8 |
| | 507 | 6 |
| | 516 | 6 |
| | 517 | 8 |
| 07145-10070 | 491 | 4 |
| | 493 | 4 |
| | 509 | 4 |
| | 578 | |
| | 579 | |
| 07145-10080 | 491 | 6 |
| | 493 | 6 |
| | 498 | 4 |
| | 498 | 6 |
| | 578 | |
| | 578 | |
| 07145-10090 | 482 | 10 |
| | 485 | 1 |
| | 508 | 6 |
| 07146-02126 | 537 | 11 |
| 07155-00720 | 445 | 7 |
| | 446 | 7 |
| 07155-01330 | 537 | 14 |
| 07165-15860 | 537 | 16 |
| 07177-07030 | 445 | 12 |
| | 446 | 12 |
| 07179-00103 | 537 | 5 |
| 07179-13094 | 506 | 11 |
| 07179-13099 | 487 | 13 |
| | 489 | 13 |
| 07179-13109 | 496 | 17 |
| 07206-30812 | 141 | 4 |
| | 143 | 4 |
| | 146 | 5 |
| 07206-31014 | 143 | 10 |
| | 146 | 11 |
| 07209-01040 | 567 | 24 |
| 07214-50813 | 416 | 8 |
| | 417 | 8 |
| 07238-10630 | 422 | 16 |
| | 427 | 16 |
| 07260-08732 | 248 | 4 |
| 07260-20950 | 120 | 6 |
| 07270-00827 | 142 | 3 |
| | 144 | 3 |
| | 147 | 3 |
| 07270-00860 | 145 | 3 |
| | 148 | 3 |
| 07270-01070 | 142 | 18 |
| | 145 | 12 |
| | 148 | 13 |
| 07270-61411 | 170 | 41 |
| | 172 | 45 |
| 07280-04726 | 340 | 4 |
| 07281-00359 | 571 | 34 |
| | 572 | 41 |
| 07283-32738 | 422 | 17 |
| | 427 | 17 |
| | 488 | 40 |
| | 490 | 40 |
| | 492 | 45 |
| | 494 | 45 |
| | 497 | 49 |
| | 499 | 54 |
| | 506 | 37 |
| | 510 | 42 |
| 07283-37060 | 133 | 12 |
| | 134 | 51 |
| | 135 | 12 |
| | 136 | 48 |
| 07285-00095 | 567 | 8 |
| | 567 | 13 |
| | 567 | 19 |
| 07285-00100 | 142 | 4 |
| | 144 | 4 |
| | 145 | 4 |
| | 147 | 4 |
| | 148 | 4 |
| 07285-00115 | 142 | 17 |
| | 145 | 11 |
| | 148 | 12 |
| 07285-00155 | 120 | 7 |
| | 170 | 40 |
| | 172 | 44 |
| 07286-03828 | 340 | 3 |
| 07289-00035 | 575 | 8 |
| | 575 | 17 |
| | 575 | 24 |
| 07289-00055 | 133 | 16 |
| | 133 | 18 |
| | 135 | 16 |
| | 135 | 18 |
| 07299-00070 | 133 | 2 |
| | 135 | 2 |
| 07299-00105 | 124 | 5 |
| | 125 | 5 |
| 07299-00130 | 124 | 6 |
| | 125 | 6 |
| 07371-30640 | 249 | 14 |
| | 250 | 17 |
| | 251 | 17 |
| | 256 | 4 |
| | 256 | 19 |
| | 257 | 14 |
| | 257 | 19 |
| | 258 | 14 |
| | 258 | 19 |
| | 271 | 5 |
| | 429 | 4 |
| | 431 | 1 |
| | 432 | 1 |
| | 474 | 2 |
| | 474 | 18 |
| | 474 | 28 |
| | 483 | 2 |
| | 483 | 18 |
| | 483 | 28 |
| | 501 | 5 |
| | 511 | 5 |
| | 515 | 5 |
| | 518 | 5 |
| 07371-31049 | 249 | 5 |
| | 249 | 10 |
| | 250 | 3 |
| | 250 | 8 |
| | 251 | 5 |
| | 251 | 13 |
| | 253 | 30 |
| | 254 | 30 |
| | 257 | 3 |
| | 257 | 9 |
| | 258 | 3 |
| | 258 | 9 |
| | 261 | 5 |
| | 261 | 8 |
| | 261 | 20 |
| | 261 | 25 |
| | 263 | 5 |
| | 263 | 36 |
| | 267 | 5 |
| | 268 | 42 |
| | 270 | 9 |
| | 474 | 6 |
| | 474 | 23 |
| | 483 | 6 |
| | 483 | 23 |
| | 503 | 3 |
| | 519 | 3 |
| 07371-51260 | 263 | 8 |
| | 264 | 41 |
| | 267 | 8 |
| | 268 | 47 |
| | 503 | 8 |
| | 503 | 30 |
| | 519 | 8 |
| | 519 | 30 |
| 07372-21035 | 249 | 6 |
| | 249 | 11 |
| | 249 | 15 |
| | 250 | 4 |
| | 250 | 9 |
| | 250 | 18 |
| | 251 | 6 |
| | 251 | 14 |
| | 251 | 18 |
| | 253 | 31 |
| | 254 | 31 |
| | 256 | 5 |
| | 256 | 20 |
| | 257 | 4 |
| | 257 | 10 |
| | 257 | 15 |
| | 257 | 20 |
| | 258 | 4 |
| | 258 | 10 |
| | 258 | 15 |
| | 258 | 20 |
| | 261 | 6 |
| | 261 | 9 |
| | 261 | 21 |
| | 261 | 26 |
| | 263 | 6 |
| | 263 | 37 |
| | 267 | 6 |
| | 268 | 43 |
| | 270 | 10 |
| | 271 | 6 |
| | 429 | 1 |
| | 431 | 2 |
| | 432 | 2 |
| | 474 | 3 |
| | 474 | 7 |
| | 474 | 19 |
| | 474 | 24 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 474 | 29 |
| | 474 | 39 |
| | 483 | 3 |
| | 483 | 7 |
| | 483 | 19 |
| | 483 | 24 |
| | 483 | 29 |
| | 483 | 39 |
| | 487 | 38 |
| | 489 | 38 |
| | 492 | 43 |
| | 494 | 43 |
| | 497 | 47 |
| | 499 | 52 |
| | 501 | 6 |
| | 503 | 4 |
| | 506 | 35 |
| | 510 | 40 |
| | 511 | 6 |
| | 515 | 6 |
| | 518 | 6 |
| | 519 | 4 |
| 07372-21040 | 221 | 28 |
| | 256 | 7 |
| | 269 | 3 |
| | 269 | 25 |
| | 479 | 4 |
| 07372-21045 | 269 | 32 |
| | 487 | 34 |
| | 489 | 34 |
| | 492 | 39 |
| | 494 | 39 |
| | 497 | 41 |
| | 499 | 46 |
| | 506 | 31 |
| | 509 | 36 |
| 07372-21060 | 269 | 34 |
| | 487 | 32 |
| | 489 | 32 |
| | 491 | 37 |
| | 493 | 37 |
| | 497 | 39 |
| | 499 | 44 |
| | 506 | 29 |
| | 509 | 34 |
| 07372-21235 | 142 | 1 |
| | 144 | 1 |
| | 147 | 1 |
| 07379-00640 | 269 | 30 |
| 07430-71380 | 176 | 12 |
| | 185 | 8 |
| | 197 | 12 |
| | 207 | 8 |
| | 213 | 9 |
| | 228 | 9 |
| | 230 | 9 |
| 07700-20502 | 571 | 2 |
| 07700-40240 | 567 | 18 |
| 07700-40455 | 571 | 10 |
| 07700-50240 | 138 | 2 |
| | 139 | 2 |
| | 142 | 16 |
| | 145 | 10 |
| | 148 | 11 |
| 07750-01628 | 496 | 34 |
| | 499 | 39 |
| 07950-10450 | 565 | 8 |
| 07950-90403 | 565 | 10 |
| 07951-41017 | 565 | 9 |
| 07952-70004 | 565 | |
| 07959-20001 | 445 | 15 |
| | 446 | 15 |
| 08000-00000 | 150 | 2 |
| 08000-00001 | 150 | 3 |
| 08000-3222Z | 150 | 1 |
| 08013-01513 | 308 | 16 |
| 08020-20000 | 347 | 2 |
| | 376 | 2 |
| 08028-43030 | 158 | 1 |
| | 158 | 9 |
| | 348 | 26 |
| 08028-63035 | 150 | 7 |
| 08028-CC065 | 347 | 24 |
| | 376 | 24 |
| 08034-00519 | 545 | 32 |
| 08034-00536 | 431 | 14 |
| | 431 | 19 |
| | 431 | 21 |
| | 431 | 25 |
| | 432 | 21 |
| | 432 | 25 |
| 08034-20414 | 165 | 6 |
| | 322 | 9 |
| | 323 | 3 |
| | 325 | 4 |
| | 325 | 15 |
| | 337 | 6 |
| | 338 | 33 |
| | 354 | 8 |
| | 359 | 39 |
| | 380 | 25 |
| | 381 | 26 |
| 08034-20519 | 141 | 8 |
| | 143 | 8 |
| | 146 | 9 |
| | 310 | 17 |
| | 310 | 33 |
| | 310 | 39 |
| | 337 | 7 |
| | 348 | 25 |
| | 359 | 31 |
| | 367 | 13 |
| | 371 | 2 |
| | 575 | 5 |
| 08034-20536 | 121 | 11 |
| | 121 | 18 |
| | 156 | 26 |
| | 162 | 13 |
| | 163 | 13 |
| | 193 | 8 |
| | 219 | 8 |
| | 272 | 17 |
| | 273 | 17 |
| | 276 | 15 |
| | 279 | 16 |
| | 280 | 16 |
| | 282 | 1 |
| | 282 | 9 |
| | 282 | 25 |
| | 350 | 12 |
| | 356 | 12 |
| | 365 | 8 |
| | 367 | 14 |
| | 369 | 4 |
| | 369 | 6 |
| | 369 | 10 |
| | 369 | 12 |
| | 369 | 16 |
| | 373 | 39 |
| | 432 | 14 |
| | 432 | 19 |
| | 567 | 4 |
| | 567 | 23 |
| | 567 | 26 |
| | 570 | 2 |
| | 571 | 31 |
| | 575 | 29 |
| 08034-20823 | 367 | 4 |
| 08034-20834 | 162 | 14 |
| | 163 | 14 |
| | 431 | 5 |
| | 432 | 5 |
| | 575 | 31 |
| 08034-20876 | 333 | 7 |
| | 333 | 17 |
| | 571 | 30 |
| 08036-00814 | 416 | 11 |
| | 417 | 11 |
| 08036-10810 | 159 | 5 |
| | 161 | 4 |
| 08037-02512 | 164 | 2 |
| | 318 | 7 |
| | 567 | 8 |
| | 570 | 10 |
| 08037-11425 | 354 | 11 |
| 08038-00035 | 347 | 15 |
| | 376 | 15 |
| 08038-00519 | 347 | 19 |
| | 347 | 22 |
| | 376 | 19 |
| | 376 | 22 |
| 08038-06031 | 347 | 17 |
| | 347 | 20 |
| | 376 | 17 |
| | 376 | 20 |
| 08038-10035 | 151 | 27 |
| 08038-12027 | 156 | 29 |
| | 157 | 41 |
| 08038-22511 | 158 | 2 |
| 08038-42511 | 150 | 6 |
| | 151 | 28 |
| 08041-00500 | 347 | 3 |
| | 376 | 3 |
| 08041-01000 | 338 | 3 |
| | 347 | 4 |
| | 376 | 4 |
| 08041-02000 | 338 | 4 |
| | 347 | 5 |
| | 376 | 5 |
| 08041-03000 | 338 | 5 |
| | 347 | 6 |
| | 376 | 6 |
| 08051-00801 | 325 | 10 |
| 08053-01510 | 310 | 13 |
| | 373 | 37 |
| 08053-01512 | 154 | 33 |
| 08057-12008 | 165 | 5 |
| 08057-12012 | 151 | 2 |
| | 151 | 3 |
| | 151 | 6 |
| | 151 | 7 |
| | 151 | 22 |
| | 152 | 3 |
| | 152 | 6 |
| | 152 | 9 |
| | 152 | 12 |
| | 152 | 15 |
| | 152 | 18 |
| | 152 | 21 |
| | 152 | 24 |
| | 152 | 27 |
| | 152 | 30 |
| | 152 | 33 |
| | 152 | 36 |
| | 152 | 39 |
| | 153 | 40 |
| | 153 | 43 |
| | 153 | 46 |
| | 153 | 51 |
| | 154 | 1 |
| | 154 | 4 |
| | 154 | 8 |
| | 154 | 11 |
| | 154 | 14 |
| | 154 | 17 |
| | 154 | 21 |
| | 154 | 24 |
| | 154 | 27 |
| | 154 | 30 |
| | 154 | 36 |
| | 156 | 1 |
| | 156 | 7 |
| | 156 | 8 |
| | 156 | 14 |
| | 156 | 17 |
| | 156 | 20 |
| | 156 | 33 |
| | 156 | 37 |
| | 570 | 13 |
| 08057-14012 | 151 | 13 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 08059-00413 | 322 | 10 |
| | 325 | 5 |
| 08059-00515 | 336 | 7 |
| | 337 | 5 |
| 08086-20000 | 360 | 26 |
| 08088-30000 | 347 | 18 |
| | 376 | 18 |
| 08160-72400 | 165 | 1 |
| 08160-72420 | 165 | 2 |
| 08191-00770 | 167 | 3 |
| 08192-14400 | 167 | 2 |
| 08192-24200 | 167 | 1 |
| 08193-20010 | 68 | 7 |
| 08193-21012 | 154 | 39 |
| | 162 | 3 |
| | 163 | 3 |
| | 166 | 7 |
| | 246 | 18 |
| | 246 | 25 |
| | 247 | 18 |
| | 247 | 25 |
| | 373 | 36 |
| | 478 | 6 |
| | 485 | 6 |
| 08912-51600 | 354 | 6 |
| 09002-01417 | 565 | 3 |
| 09002-03032 | 565 | 4 |
| 09007-00425 | 565 | 12 |
| 09007-00528 | 565 | 13 |
| 09007-00836 | 565 | 11 |
| 09019-28035 | 565 | 2 |
| 09021-01219 | 565 | 14 |
| 09021-01422 | 565 | 15 |
| 09021-01725 | 565 | 16 |
| 09021-01928 | 565 | 17 |
| 09021-02233 | 565 | 18 |
| 09021-02436 | 565 | 19 |
| 09021-03044 | 565 | 20 |
| 09022-00150 | 565 | 21 |
| 09023-00300 | 565 | 22 |
| 09024-00300 | 565 | 23 |
| 09033-00190 | 565 | 5 |
| 09039-00150 | 565 | 6 |
| 09055-10390 | 565 | 7 |
| 09056-04613 | 565 | 1 |
| 09059-00800 | 562 | 1 |
| | 563 | 1 |
| 09133-A3281 | 548 | 6 |
| 09134-A1681 | 553 | 1 |
| 09205-18295 | 470 | 5 |
| 09244-02489 | 543 | 5 |
| 09244-02496 | 522 | 7 |
| | 524 | 7 |
| | 525 | 7 |
| | 526 | 7 |
| | 527 | 7 |
| | 528 | 7 |
| | 529 | 7 |
| | 530 | 7 |
| | 531 | 7 |
| | 533 | 7 |
| | 534 | 7 |
| 09244-02508 | 539 | 10 |
| | 542 | 3 |
| 09370-00070 | 445 | 8 |
| | 446 | 8 |
| 09409-00002 | 298 | 3 |
| | 299 | 3 |
| 09415-02512 | 300 | 7 |
| | 328 | 3 |
| | 359 | 25 |
| 09416-10200 | 319 | 5 |
| | 326 | 2 |
| | 326 | 4 |
| | 326 | 11 |
| 09452-14503 | 338 | 15 |
| 09479-02400 | 366 | 2 |
| | 366 | 4 |
| | 377 | 2 |
| | 377 | 4 |
| | 571 | 5 |
| | 571 | 8 |
| 09620-D2000 | 554 | 1 |
| | 555 | 1 |
| 09620-D2090 | 554 | 2 |
| | 555 | 2 |
| | 555 | 5 |
| | 556 | 2 |
| 09620-E2000 | 555 | 4 |
| | 556 | 1 |
| 09637-40163 | 557 | 1 |
| 09642-14000 | 552 | 1 |
| 09653-A0481 | 548 | 7 |
| 09657-A0881 | 548 | 8 |
| 09659-A057B | 548 | 9 |
| | 548 | 20 |
| | 558 | 1 |
| | 559 | 1 |
| 09667-A0481 | 548 | 10 |
| 09669-0000E | 548 | 15 |
| 09685-00002 | 548 | 1 |
| 09690-M0063 | 548 | 3 |
| 09690-P0630 | 548 | 4 |
| 09690-P1250 | 551 | 1 |
| | 551 | 2 |
| 09803-A0481 | 550 | 2 |
| 09805-A0881 | 548 | 11 |
| 09805-C0481 | 548 | 12 |
| | 548 | 21 |
| 09808-A0881 | 548 | 13 |
| 09842-A0481 | 548 | 5 |
| 09844-00050 | 548 | 2 |
| 09920-00150 | 59 | 6 |
| | 64 | 18 |
| | 66 | 16 |
| | 74 | 8 |
| 09960-00801 | 548 | 28 |
| 09960-00802 | 548 | 29 |
| 09963-A1640 | 548 | 18 |
| 09980-10550 | 564 | 1 |
| 09980-92550 | 564 | |
| 09982-20057 | 564 | 2 |
| 110-30-00086 | 452 | |
| 112-32-11211 | 421 | 19 |
| | 426 | 19 |
| 11Y-09-11140 | 142 | 14 |
| | 145 | 8 |
| | 148 | 9 |
| 11Y-09-11160 | 311 | 40 |
| 11Y-62-12130 | 191 | 13 |
| | 217 | 13 |
| | 218 | 11 |
| | 218 | 17 |
| | 220 | 13 |
| | 221 | 17 |
| | 233 | 13 |
| | 234 | 11 |
| | 234 | 17 |
| | 246 | 5 |
| | 246 | 12 |
| | 247 | 12 |
| | 275 | 5 |
| | 275 | 13 |
| | 278 | 5 |
| | 278 | 14 |
| | 281 | 15 |
| | 352 | 7 |
| | 358 | 7 |
| | 431 | 9 |
| | 432 | |
| 11Y-62-12140 | 374 | 23 |
| 11Y-62-12160 | 191 | 7 |
| | 192 | 5 |
| | 192 | 8 |
| | 217 | 7 |
| | 218 | 5 |
| | 218 | 8 |
| | 218 | 23 |
| | 220 | 7 |
| | 221 | 5 |
| | 221 | 8 |
| | 221 | 23 |
| | 233 | 7 |
| | 234 | 5 |
| | 234 | 8 |
| | 234 | 23 |
| | 267 | 14 |
| | 343 | 23 |
| | 422 | 25 |
| | 427 | 25 |
| | 429 | 8 |
| 11Y-62-12240 | 246 | 8 |
| | 246 | 11 |
| | 247 | 8 |
| | 247 | 11 |
| 11Y-62-12250 | 429 | 10 |
| | 431 | 26 |
| | 432 | 26 |
| 11Y-62-12330 | 191 | 11 |
| | 192 | 11 |
| | 217 | 11 |
| | 218 | 20 |
| | 220 | 11 |
| | 221 | 11 |
| | 221 | 20 |
| | 233 | 11 |
| | 234 | 20 |
| | 247 | 5 |
| | 375 | 10 |
| | 375 | 23 |
| | 545 | 27 |
| 11Y-62-12520 | 191 | 15 |
| | 192 | 14 |
| | 217 | 15 |
| | 218 | 14 |
| | 220 | 15 |
| | 221 | 14 |
| | 233 | 15 |
| | 234 | 14 |
| | 281 | 12 |
| | 358 | 9 |
| 124-11-55H1 | 382 | 2 |
| 124-54-26540 | 390 | 10 |
| | 390 | 15 |
| | 393 | 10 |
| | 393 | 15 |
| 124-A62-1910 | 380 | 3 |
| 124-A62-1920 | 380 | 22 |
| | 381 | 23 |
| | 389 | 13 |
| | 392 | 13 |
| 12R-49-12880 | 269 | 36 |
| 12R-60-11230 | 169 | 28 |
| | 171 | 32 |
| 130-43-64260 | 300 | 5 |
| | 301 | 2 |
| 131-43-41631 | 311 | 49 |
| 131-78-31190 | 543 | 4 |
| 134-03-61410 | 311 | 51 |
| | 571 | 14 |
| 134-32-61221 | 454 | 9 |
| | 454 | 18 |
| | 455 | 9 |
| | 455 | 18 |
| | 456 | 9 |
| | 456 | 18 |
| | 457 | 9 |
| | 457 | 18 |
| | 458 | 9 |
| | 458 | 18 |
| | 578 | |
| | 578 | |
| | 578 | |
| | 578 | |
| 134-977-2840 | 567 | 18 |
| 134-98-61650 | 568 | 14 |
| 134-98-61660 | 568 | 15 |
| 141-06-11220 | 366 | 12 |
| 144-947-3490 | 151 | 1 |
| 14X-03-51621 | 128 | 10 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 14X-03-51640 | 128 | 11 |
| 14X-03-51770 | 128 | 12 |
| 14X-49-31630 | 571 | 1 |
| 14X-911-1330 | 303 | 20 |
| 14X-977-1450 | 567 | 30 |
| 14X-98-35181 | 548 | 31 |
| 154-61-16570 | 52 | 7 |
| | 54 | 11 |
| | 85 | 15 |
| 154-979-1480 | 141 | 14 |
| | 143 | 17 |
| | 146 | 18 |
| 154-Z11-1280 | 134 | 55 |
| | 136 | 52 |
| 154-Z11-1290 | 134 | 54 |
| | 136 | 51 |
| 155-61-15350 | 571 | 15 |
| 175-54-34170 | 150 | 11 |
| | 261 | 31 |
| | 288 | 10 |
| | 290 | 10 |
| | 394 | 5 |
| | 394 | 33 |
| | 395 | 39 |
| | 396 | 5 |
| | 396 | 35 |
| | 397 | 41 |
| | 399 | 6 |
| | 399 | 34 |
| | 400 | 40 |
| | 401 | 18 |
| | 402 | 18 |
| | 409 | 11 |
| | 409 | 35 |
| | 410 | 39 |
| | 411 | 11 |
| | 411 | 35 |
| | 412 | 39 |
| | 413 | 11 |
| | 413 | 35 |
| | 414 | 39 |
| | 467 | 23 |
| 175-61-17240 | 154 | 7 |
| | 154 | 20 |
| 175-61-51750 | 263 | 29 |
| | 267 | 35 |
| | 545 | 20 |
| 175-78-31230 | 539 | 9 |
| | 542 | 2 |
| 176-32-11210 | 522 | 10 |
| | 524 | 13 |
| | 525 | 13 |
| | 526 | 13 |
| | 527 | 13 |
| | 528 | 13 |
| | 529 | 13 |
| | 530 | 10 |
| | 531 | 10 |
| 17A-60-11310 | 169 | 34 |
| | 171 | 38 |
| 17A-979-3180 | 336 | 3 |
| 17M-911-3530 | 333 | 10 |
| 195-03-11570 | 138 | 21 |
| | 139 | 21 |
| 195-30-00203 | 447 | |
| 195-30-00302 | 444 | |
| 195-33-11220 | 133 | 22 |
| | 135 | 22 |
| | 141 | 17 |
| | 143 | 20 |
| | 146 | 21 |
| | 156 | 36 |
| | 272 | 14 |
| | 273 | 14 |
| | 309 | 4 |
| | 310 | 27 |
| | 348 | 9 |
| | 348 | 13 |
| | 366 | 7 |
| | 377 | 7 |
| | 567 | 9 |
| 195-57-11530 | 409 | 16 |
| | 411 | 16 |
| | 413 | 16 |
| 195-63-92190 | 506 | 10 |
| | 509 | 10 |
| | 537 | 4 |
| | 578 | |
| | 579 | |
| 195-71-32220 | 310 | 5 |
| 195-911-1330 | 314 | 2 |
| 195-911-1722 | 314 | 1 |
| 195-911-6531 | 313 | 1 |
| 195-911-6562 | 313 | 2 |
| 195-979-5190 | 121 | 8 |
| 195-Z11-2970 | 300 | 6 |
| 198-06-53560 | 141 | 31 |
| | 142 | 27 |
| | 143 | 34 |
| | 145 | 21 |
| | 146 | 35 |
| | 148 | 22 |
| 198-06-53630 | 121 | 6 |
| 198-43-15310 | 575 | 14 |
| | 575 | 21 |
| 19M-06-31720 | 347 | 7 |
| 201-03-29160 | 503 | 23 |
| | 519 | 23 |
| 201-60-11390 | 275 | 2 |
| | 278 | 2 |
| | 281 | 3 |
| 202-09-11120 | 150 | 5 |
| 202-931-1180 | 536 | 45 |
| 203-01-51120 | 120 | 2 |
| 203-03-41410 | 128 | 8 |
| 203-03-56650 | 388 | 27 |
| | 391 | 27 |
| 203-06-61730 | 571 | 23 |
| 203-43-51620 | 343 | 7 |
| 203-54-56630 | 401 | 10 |
| | 402 | 10 |
| 203-54-56970 | 130 | 6 |
| 203-54-62670 | 390 | 31 |
| | 393 | 31 |
| 203-60-31100 | 169 | 2 |
| | 171 | 2 |
| 203-60-31160 | 169 | 3 |
| | 171 | 3 |
| 203-62-61410 | 253 | 11 |
| | 254 | 11 |
| 205-00-73360 | 170 | 42 |
| | 172 | 46 |
| 205-03-62660 | 128 | 6 |
| 205-03-71440 | 388 | 7 |
| | 391 | 7 |
| 205-03-71532 | 388 | 26 |
| | 391 | 26 |
| 205-03-71540 | 388 | |
| | 391 | |
| 205-06-51380 | 150 | 4 |
| 205-25-71152 | 416 | 2 |
| 205-25-71280 | 416 | 3 |
| | 417 | 3 |
| 205-30-71171 | 466 | 14 |
| | 467 | 14 |
| 205-30-71181 | 284 | 2 |
| | 286 | 2 |
| | 288 | 2 |
| | 290 | 2 |
| | 292 | 2 |
| | 466 | 9 |
| | 467 | 9 |
| 205-30-71191 | 284 | 3 |
| | 286 | 3 |
| | 288 | 3 |
| | 290 | 3 |
| | 292 | 3 |
| | 466 | 10 |
| | 467 | 10 |
| 205-30-72170 | 445 | 16 |
| | 446 | 16 |
| 205-30-76190 | 444 | 9 |
| | 447 | 9 |
| 205-30-76260 | 448 | 4 |
| 205-54-51250 | 313 | 7 |
| 205-54-51720 | 307 | 4 |
| 205-54-51730 | 307 | 5 |
| 205-54-51970 | 385 | 29 |
| | 387 | 20 |
| 205-54-53550 | 385 | 23 |
| | 387 | 14 |
| 205-54-68440 | 394 | 28 |
| | 396 | 30 |
| | 399 | 29 |
| 205-54-75240 | 329 | 14 |
| 205-54-76411 | 388 | 34 |
| | 391 | 34 |
| 205-62-53780 | 575 | 30 |
| 205-62-72140 | 431 | 24 |
| | 432 | 24 |
| 205-62-72240 | 431 | 15 |
| | 431 | 18 |
| | 431 | 22 |
| | 432 | 15 |
| | 432 | 18 |
| | 432 | 22 |
| 205-62-73431 | 474 | 12 |
| | 479 | 18 |
| 205-63-55171 | 537 | 12 |
| 205-63-94100 | 537 | |
| 205-63-94120 | 537 | 2 |
| 205-63-94140 | 537 | 1 |
| 205-70-00100 | 524 | 15 |
| | 525 | 15 |
| | 526 | 18 |
| | 527 | 18 |
| | 528 | 15 |
| | 529 | 18 |
| 205-70-19570 | 522 | 6 |
| | 524 | 6 |
| | 525 | 6 |
| | 526 | 6 |
| | 527 | 6 |
| | 528 | 6 |
| | 529 | 6 |
| | 530 | 6 |
| | 531 | 6 |
| | 533 | 6 |
| | 534 | 6 |
| 205-70-51390 | 476 | 2 |
| | 476 | 10 |
| 205-70-51530 | 481 | 9 |
| | 505 | 15 |
| | 507 | 13 |
| | 508 | 13 |
| | 516 | 13 |
| | 517 | 15 |
| | 523 | 3 |
| 205-70-65681 | 481 | 1 |
| 205-70-66580 | 294 | 8 |
| | 505 | 17 |
| | 507 | 15 |
| | 508 | 15 |
| | 516 | 15 |
| | 517 | 17 |
| 205-70-66581 | 481 | 10 |
| | 505 | 12 |
| | 507 | 10 |
| | 508 | 10 |
| | 516 | 10 |
| | 517 | 12 |
| 205-70-69570 | 526 | 17 |
| | 527 | 17 |
| | 529 | 17 |
| | 532 | 3 |
| 205-70-71190 | 505 | 16 |
| | 507 | 14 |
| | 508 | 14 |
| | 516 | 14 |
| | 517 | 16 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 205-70-71210 | 294 | 7 |
| 205-70-71312 | 481 | 4 |
| 205-70-71360 | 487 | 3 |
| | 489 | 3 |
| | 491 | 3 |
| | 493 | 3 |
| 205-70-72180 | 505 | 4 |
| | 507 | 2 |
| | 508 | 2 |
| | 516 | 2 |
| | 517 | 4 |
| 205-70-73130 | 502 | 7 |
| | 514 | 8 |
| 205-70-73180 | 502 | 3 |
| | 505 | 6 |
| | 507 | 4 |
| | 508 | 4 |
| | 514 | 3 |
| | 516 | 4 |
| | 517 | 6 |
| 205-70-73190 | 538 | 3 |
| | 539 | 13 |
| | 540 | 3 |
| | 542 | 6 |
| | 543 | 12 |
| | 544 | 9 |
| 205-70-73270 | 502 | 18 |
| | 502 | 21 |
| | 514 | 19 |
| | 514 | 22 |
| | 538 | 1 |
| | 539 | 11 |
| | 542 | 4 |
| | 543 | 10 |
| | 544 | 7 |
| 205-70-73280 | 501 | 8 |
| | 504 | 42 |
| | 511 | 8 |
| | 515 | 8 |
| | 520 | 42 |
| | 523 | 1 |
| 205-70-74162 | 522 | 3 |
| 205-70-74172 | 522 | 4 |
| 205-70-74180 | 522 | 8 |
| | 524 | 11 |
| | 525 | 11 |
| | 526 | 11 |
| | 527 | 11 |
| | 528 | 11 |
| | 529 | 11 |
| | 530 | 8 |
| | 531 | 8 |
| 205-70-74190 | 522 | 9 |
| | 524 | 12 |
| | 525 | 12 |
| | 526 | 12 |
| | 527 | 12 |
| | 528 | 12 |
| | 529 | 12 |
| | 530 | 9 |
| | 531 | 9 |
| 205-70-74381 | 524 | 16 |
| | 525 | 16 |
| | 526 | 19 |
| | 527 | 19 |
| | 528 | 16 |
| | 529 | 19 |
| 205-70-74391 | 524 | 8 |
| | 525 | 8 |
| | 526 | 8 |
| | 527 | 8 |
| | 528 | 8 |
| | 529 | 8 |
| 205-70-74410 | 538 | 2 |
| | 539 | 12 |
| | 540 | 2 |
| | 542 | 5 |
| | 543 | 11 |
| | 544 | 8 |
| 205-922-1120 | 539 | 2 |
| 205-922-1130 | 539 | 3 |
| 205-922-1140 | 539 | 4 |
| 205-922-1150 | 539 | 5 |
| 205-922-1160 | 539 | 6 |
| 205-922-1170 | 539 | 7 |
| 205-922-1180 | 539 | 8 |
| 205-922-6210 | 539 | 1 |
| 205-926-7221 | 522 | 2 |
| 205-926-7250 | 522 | 1 |
| 205-928-6110 | 540 | 1 |
| 205-929-6120 | 544 | 2 |
| 205-929-6130 | 544 | 3 |
| 205-929-6210 | 544 | 1 |
| 205-931-1122 | 535 | 34 |
| 205-931-1130 | 536 | 42 |
| 205-931-1161 | 535 | 1 |
| 205-931-1192 | 535 | 16 |
| 205-931-1212 | 535 | 17 |
| 205-931-1220 | 535 | 20 |
| 205-931-1230 | 535 | 3 |
| 205-931-1240 | 535 | 4 |
| 205-931-1250 | 535 | 5 |
| 205-931-1260 | 535 | 10 |
| 205-931-1270 | 535 | 13 |
| 205-931-1281 | 535 | 23 |
| 205-931-1290 | 535 | 26 |
| 205-931-1310 | 535 | 29 |
| 205-931-1320 | 535 | 38 |
| 205-931-1330 | 535 | 37 |
| 205-931-2140 | 535 | 9 |
| 205-931-6110 | 535 | 39 |
| 205-931-6150 | 536 | 40 |
| 205-938-6220 | 541 | 2 |
| 205-938-6230 | 541 | 3 |
| 205-938-6240 | 541 | 4 |
| 205-938-7111 | 541 | |
| 205-939-7120 | 522 | 5 |
| 205-950-0012 | 542 | |
| 205-951-0013 | 543 | |
| 205-951-0020 | 543 | |
| 205-951-6120 | 543 | 2 |
| 205-951-6140 | 543 | 6 |
| 205-951-6150 | 543 | 7 |
| 205-970-5560 | 263 | 22 |
| | 267 | 28 |
| | 545 | 2 |
| 205-970-5770 | 503 | 33 |
| | 519 | 33 |
| 205-970-7680 | 546 | 2 |
| 205-977-7310 | 142 | 22 |
| | 145 | 16 |
| | 148 | 17 |
| 206-01-61130 | 397 | 44 |
| 206-03-21151 | 133 | 1 |
| | 135 | 1 |
| 206-03-21310 | 130 | 27 |
| | 130 | 29 |
| 206-03-21320 | 130 | 28 |
| 206-03-21371 | 132 | 23 |
| | 134 | 44 |
| | 136 | 41 |
| 206-03-21470 | 129 | 13 |
| 206-03-21520 | 129 | 14 |
| 206-03-21560 | 130 | 30 |
| 206-03-21570 | 130 | 31 |
| 206-03-21580 | 129 | 17 |
| 206-03-21651 | 133 | 9 |
| | 135 | 9 |
| 206-03-43340 | 130 | 25 |
| | 134 | 43 |
| | 136 | 40 |
| | 388 | 31 |
| | 391 | 31 |
| 206-04-21112 | 139 | 1 |
| 206-04-71130 | 575 | 9 |
| 206-04-K1121 | 575 | 3 |
| 206-04-K1131 | 575 | 4 |
| 206-06-21170 | 163 | 12 |
| 206-06-22140 | 288 | 7 |
| | 290 | 7 |
| 206-06-61130 | 281 | 18 |
| | 343 | 31 |
| | 373 | 35 |
| 206-25-00200 | 416 | 1 |
| 206-25-00220 | 417 | 1 |
| 206-25-61110 | 416 | 15 |
| | 417 | 15 |
| 206-26-69111 | 421 | 6 |
| | 426 | 6 |
| 206-30-45381 | 445 | 2 |
| | 446 | 2 |
| 206-30-72140 | 445 | 6 |
| | 446 | 6 |
| 206-54-21130 | 380 | 19 |
| | 381 | 18 |
| 206-54-21161 | 380 | 21 |
| | 381 | 21 |
| 206-54-21252 | 380 | 20 |
| | 381 | 21 |
| 206-54-71460 | 390 | 27 |
| | 393 | 27 |
| 206-62-21171 | 252 | 1 |
| 206-62-21181 | 253 | 1 |
| | 254 | 1 |
| 206-62-21230 | 250 | 13 |
| 206-62-21250 | 250 | 24 |
| 206-62-71141 | 270 | 13 |
| 206-62-87930 | 146 | 1 |
| 206-70-45210 | 481 | 3 |
| 206-70-55160 | 294 | 1 |
| 207-00-76250 | 396 | 14 |
| 207-06-51330 | 150 | 9 |
| | 288 | 8 |
| | 290 | 8 |
| 207-06-61461 | 150 | 8 |
| 207-06-76270 | 167 | 4 |
| 207-43-81240 | 373 | 15 |
| 207-46-32220 | 408 | 2 |
| 207-54-75220 | 406 | 1 |
| 207-54-75710 | 405 | 5 |
| | 406 | 1 |
| 207-60-61150 | 169 | 26 |
| | 171 | 30 |
| 207-60-71182 | 169 | 18 |
| | 171 | 22 |
| | 562 | 8 |
| | 563 | 8 |
| 207-62-31330 | 503 | 36 |
| | 519 | 36 |
| 207-62-56190 | 221 | 26 |
| | 269 | 23 |
| 207-70-33220 | 521 | 1 |
| 207-70-53170 | 500 | 2 |
| 207-970-2110 | 503 | 26 |
| | 519 | 26 |
| 207-977-2170 | 567 | 26 |
| 207-977-2230 | 570 | 4 |
| 207-977-2240 | 570 | 7 |
| 207-977-2320 | 569 | 1 |
| 207-977-2330 | 569 | 2 |
| 207-977-2340 | 569 | 3 |
| 207-977-2350 | 569 | 4 |
| 207-977-2360 | 569 | 5 |
| 207-977-2370 | 569 | 6 |
| 207-977-2440 | 570 | 3 |
| 207-977-2470 | 569 | 8 |
| 207-977-2251 | 569 | 9 |
| 207-977-2271 | 569 | 10 |
| 207-977-2280 | 569 | 11 |
| 207-977-2380 | 569 | 12 |
| 207-977-2390 | 569 | 13 |
| 207-977-2410 | 569 | 14 |
| 207-979-7790 | 571 | 37 |
| 207-979-7820 | 571 | 33 |
| 208-00-71450 | 548 | 30 |
| 208-03-71161 | 132 | 4 |
| 208-03-71290 | 132 | 10 |
| 208-43-71420 | 335 | 8 |
| 208-43-71520 | 346 | 2 |
| 208-43-71530 | 346 | 3 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 208-43-71590 | 346 | 4 |
| 208-53-11330 | 329 | 10 |
| 208-53-11780 | 312 | 4 |
| 208-53-11860 | 318 | 8 |
| 208-53-11890 | 334 | 4 |
| 208-53-11920 | 332 | 9 |
| 208-53-11941 | 332 | 5 |
| 208-53-12120 | 333 | 15 |
| 208-53-12230 | 334 | 5 |
| 208-53-12280 | 354 | 12 |
| 208-53-12290 | 338 | 7 |
| 208-53-12320 | 338 | 20 |
| 208-53-12330 | 338 | 21 |
| 208-53-12410 | 338 | 18 |
| 208-53-12432 | 333 | 16 |
| 208-53-12440 | 332 | 4 |
| 208-53-12460 | 331 | 2 |
| 208-53-12551 | 334 | 16 |
| 208-53-12680 | 333 | 9 |
| 208-53-13270 | 326 | 7 |
| 208-53-14540 | 322 | 4 |
| 208-54-57180 | 387 | 32 |
| | 567 | 20 |
| | 573 | 11 |
| 208-60-71180 | 169 | 36 |
| | 172 | 40 |
| 208-62-38370 | 133 | 19 |
| | 135 | 19 |
| 208-62-72290 | 367 | 5 |
| 208-62-72310 | 276 | 1 |
| | 279 | 1 |
| | 282 | 10 |
| | 367 | 6 |
| 208-62-72480 | 279 | 13 |
| | 280 | 13 |
| | 373 | 29 |
| 208-62-72610 | 276 | 12 |
| 208-62-72870 | 368 | 9 |
| 208-62-73330 | 483 | 12 |
| 208-979-7530 | 334 | 12 |
| 208-979-7540 | 364 | 1 |
| 208-979-7560 | 338 | 13 |
| 208-979-7620 | 334 | 13 |
| 208-979-7640 | 365 | 1 |
| 208-979-7650 | 365 | 6 |
| 209-00-41550 | 401 | 14 |
| | 402 | 14 |
| 209-64-16690 | 368 | 10 |
| 209-64-16830 | 368 | 11 |
| 209-72-12230 | 329 | 3 |
| | 329 | 7 |
| 20B-27-11210 | 240 | 7 |
| | 435 | 11 |
| | 439 | 11 |
| 20D-62-17620 | 313 | 4 |
| 20F-61-12460 | 191 | 19 |
| | 217 | 19 |
| | 220 | 19 |
| | 233 | 19 |
| 20G-26-11240 | 426 | 14 |
| 20G-26-11241 | 421 | 14 |
| 20K-22-11190 | 421 | 21 |
| 20T-910-8660 | 373 | 16 |
| 20U-Y14-7540 | 545 | 23 |
| 20X-54-21460 | 394 | 20 |
| | 396 | 22 |
| | 399 | 21 |
| 20Y-00-22950 | 548 | 33 |
| 20Y-00-31840 | 548 | 26 |
| 20Y-00-31950 | 548 | 14 |
| 20Y-00-31970 | 548 | 25 |
| 20Y-00-41111 | 548 | 22 |
| 20Y-00-41121 | 548 | 23 |
| 20Y-00-41330 | 329 | 11 |
| 20Y-00-41490 | 548 | 34 |
| 20Y-00-41530 | 548 | 32 |
| 20Y-00-41540 | 549 | 1 |
| 20Y-00-41720 | 548 | 24 |
| 20Y-00-41730 | 550 | 1 |
| 20Y-00-41740 | 548 | 19 |
| 20Y-00-42110 | 138 | 18 |
| | 139 | 18 |
| 20Y-00-42140 | 394 | 3 |
| | 394 | 12 |
| | 396 | 3 |
| | 396 | 12 |
| | 399 | 4 |
| | 399 | 13 |
| | 401 | 13 |
| | 402 | 13 |
| 20Y-00-42150 | 407 | 9 |
| 20Y-00-42160 | 407 | 10 |
| 20Y-01-11141 | 122 | 13 |
| | 122 | 18 |
| 20Y-01-12210 | 122 | 11 |
| 20Y-01-12222 | 122 | 16 |
| 20Y-01-12270 | 122 | 21 |
| 20Y-01-21260 | 122 | 5 |
| | 122 | 9 |
| 20Y-01-41110 | 124 | 4 |
| | 125 | 4 |
| 20Y-01-41161 | 122 | 1 |
| 20Y-01-41170 | 122 | 2 |
| 20Y-01-41180 | 122 | 6 |
| 20Y-01-41190 | 124 | 3 |
| | 125 | 3 |
| 20Y-01-41210 | 122 | 12 |
| | 122 | 17 |
| 20Y-01-41220 | 125 | 7 |
| 20Y-01-41230 | 122 | 3 |
| | 122 | 7 |
| 20Y-01-41250 | 122 | 17 |
| 20Y-01-41340 | 124 | 7 |
| 20Y-03-11220 | 142 | 25 |
| | 145 | 19 |
| | 148 | 20 |
| | 157 | 48 |
| | 310 | 30 |
| | 311 | 46 |
| | 571 | 20 |
| | 571 | 24 |
| 20Y-03-11330 | 128 | 9 |
| 20Y-03-22110 | 128 | 5 |
| 20Y-03-32660 | 133 | 23 |
| | 135 | 23 |
| 20Y-03-41131 | 130 | 15 |
| 20Y-03-41141 | 133 | 15 |
| | 135 | 15 |
| 20Y-03-41161 | 133 | 35 |
| | 135 | 32 |
| 20Y-03-41171 | 134 | 49 |
| | 136 | 46 |
| 20Y-03-41181 | 133 | 3 |
| | 135 | 3 |
| 20Y-03-41191 | 133 | 5 |
| | 135 | 5 |
| 20Y-03-41321 | 130 | 4 |
| 20Y-03-41371 | 132 | 17 |
| 20Y-03-41391 | 130 | 26 |
| 20Y-03-41461 | 130 | 32 |
| 20Y-03-41491 | 130 | 16 |
| 20Y-03-41521 | 130 | 33 |
| 20Y-03-41541 | 132 | 24 |
| 20Y-03-41562 | 132 | 25 |
| 20Y-03-41572 | 132 | 26 |
| 20Y-03-41580 | 128 | 19 |
| 20Y-03-41590 | 128 | 20 |
| 20Y-03-41622 | 133 | 29 |
| | 135 | 29 |
| 20Y-03-41633 | 130 | 34 |
| 20Y-03-41750 | 132 | 1 |
| 20Y-03-41811 | 133 | 30 |
| 20Y-03-41831 | 134 | 45 |
| | 136 | 42 |
| 20Y-03-41841 | 132 | 27 |
| 20Y-03-41870 | 131 | 38 |
| 20Y-03-41880 | 388 | 30 |
| | 391 | 30 |
| 20Y-03-42160 | 128 | 4 |
| | 130 | 18 |
| 20Y-03-42190 | 130 | 8 |
| 20Y-03-42210 | 130 | 7 |
| 20Y-03-42250 | 133 | 17 |
| | 135 | 17 |
| 20Y-03-42260 | 130 | 17 |
| 20Y-03-42270 | 128 | 3 |
| 20Y-03-42290 | 130 | 19 |
| 20Y-03-42340 | 130 | 24 |
| 20Y-03-42440 | 132 | 20 |
| 20Y-03-42452 | 128 | |
| 20Y-03-42471 | 130 | 1 |
| 20Y-03-42480 | 134 | 50 |
| | 136 | 47 |
| 20Y-03-42490 | 133 | 26 |
| 20Y-03-42511 | 128 | 18 |
| 20Y-03-42561 | 129 | 1 |
| 20Y-03-42571 | 129 | 2 |
| 20Y-03-42610 | 129 | 6 |
| 20Y-03-42620 | 129 | 9 |
| 20Y-03-42630 | 129 | 10 |
| 20Y-03-42640 | 129 | 15 |
| 20Y-03-42650 | 128 | 2 |
| 20Y-03-42670 | 129 | 22 |
| 20Y-03-42710 | 129 | 23 |
| 20Y-03-42721 | 131 | 35 |
| 20Y-03-42750 | 135 | 26 |
| 20Y-03-42820 | 130 | 11 |
| 20Y-03-42830 | 130 | 12 |
| 20Y-03-42840 | 128 | 15 |
| 20Y-04-11140 | 467 | |
| 20Y-04-11161 | 138 | 6 |
| | 139 | 6 |
| 20Y-04-11240 | 138 | |
| | 139 | |
| 20Y-04-21580 | 138 | 12 |
| | 139 | 12 |
| 20Y-04-31120 | 156 | 11 |
| 20Y-04-31170 | 142 | 15 |
| | 145 | 9 |
| | 148 | 10 |
| 20Y-04-38170 | 575 | 25 |
| 20Y-04-41224 | 138 | 1 |
| 20Y-04-41231 | 138 | 3 |
| | 139 | 3 |
| 20Y-04-41242 | 139 | 1 |
| 20Y-04-41281 | 142 | 13 |
| | 145 | 7 |
| | 148 | 8 |
| 20Y-04-41321 | 141 | 9 |
| | 143 | 12 |
| | 146 | 13 |
| 20Y-04-41373 | 141 | 7 |
| | 143 | 7 |
| 20Y-04-41413 | 139 | 6 |
| 20Y-04-41414 | 141 | 6 |
| | 143 | 6 |
| | 146 | 7 |
| 20Y-04-41421 | 141 | 26 |
| | 143 | 29 |
| | 146 | 30 |
| 20Y-04-41481 | 144 | 10 |
| | 147 | 10 |
| 20Y-04-41530 | 143 | 2 |
| 20Y-04-41540 | 143 | 9 |
| | 146 | 10 |
| 20Y-04-41590 | 138 | 15 |
| | 139 | 15 |
| 20Y-04-41620 | 146 | 8 |
| 20Y-04-41650 | 146 | 3 |
| 20Y-04-41660 | 148 | 5 |
| 20Y-04-48160 | 142 | 10 |
| 20Y-04-K2090 | 574 | 1 |
| 20Y-04-K2130 | 574 | 2 |
| 20Y-04-K2150 | 574 | 5 |
| 20Y-04-K2160 | 574 | 3 |
| 20Y-04-K2170 | 574 | 4 |
| 20Y-04-K2180 | 574 | 6 |
| 20Y-04-K2190 | 574 | 7 |
| 20Y-04-K2210 | 574 | 8 |
| 20Y-04-K2220 | 574 | 9 |

| Part Number | Page | Index |
|---|---|---|
| 20Y-04-K2230 | 574 | 10 |
| 20Y-04-K2240 | 574 | 11 |
| 20Y-04-K2250 | 574 | 12 |
| 20Y-04-K2260 | 574 | 13 |
| 20Y-04-K2280 | 574 | 14 |
| 20Y-04-K2351 | 575 | 2 |
| 20Y-04-K2450 | 575 | 1 |
| 20Y-06-15240 | 388 | 25 |
| | 391 | 25 |
| 20Y-06-21421 | 378 | 1 |
| 20Y-06-21551 | 162 | 2 |
| | 163 | 2 |
| | 478 | 3 |
| | 485 | 3 |
| 20Y-06-21590 | 162 | 9 |
| | 163 | 9 |
| 20Y-06-22872 | 347 | 16 |
| 20Y-06-23472 | 330 | 3 |
| 20Y-06-31660 | 347 | 8 |
| 20Y-06-31710 | 166 | 2 |
| 20Y-06-41130 | 360 | 38 |
| 20Y-06-41141 | 325 | 3 |
| 20Y-06-41150 | 335 | 7 |
| 20Y-06-41161 | 476 | 11 |
| 20Y-06-41171 | 162 | 12 |
| 20Y-06-41251 | 375 | 13 |
| 20Y-06-41283 | 347 | 14 |
| 20Y-06-41351 | 157 | 40 |
| 20Y-06-41361 | 157 | 42 |
| 20Y-06-41530 | 246 | 15 |
| | 247 | 15 |
| 20Y-06-41542 | 164 | 6 |
| 20Y-06-41630 | 153 | 52 |
| 20Y-06-41640 | 151 | 10 |
| 20Y-06-41690 | 158 | 6 |
| 20Y-06-41720 | 157 | 56 |
| 20Y-06-41770 | 157 | 55 |
| 20Y-06-41791 | 157 | 45 |
| 20Y-06-41812 | 166 | 1 |
| 20Y-06-41830 | 354 | 9 |

| Part Number | Page | Index |
|---|---|---|
| 20Y-06-41950 | 575 | 28 |
| 20Y-06-41990 | 324 | |
| 20Y-06-42110 | 360 | 35 |
| 20Y-06-42121 | 360 | 36 |
| 20Y-06-42180 | 325 | 6 |
| 20Y-06-42190 | 360 | 37 |
| 20Y-06-42320 | 371 | 1 |
| 20Y-06-42440 | 354 | 1 |
| 20Y-06-42520 | 156 | 4 |
| 20Y-06-48314 | 347 | 1 |
| 20Y-09-11170 | 416 | 4 |
| | 417 | 4 |
| 20Y-09-31110 | 426 | 21 |
| 20Y-09-31120 | 426 | 7 |
| 20Y-09-31130 | 426 | 4 |
| 20Y-09-31140 | 426 | 5 |
| 20Y-25-11270 | 416 | 10 |
| | 417 | 10 |
| | 478 | 13 |
| | 485 | 13 |
| 20Y-25-21123 | 416 | 9 |
| | 417 | 9 |
| 20Y-25-31350 | 417 | 2 |
| 20Y-26-21240 | 421 | 18 |
| | 426 | 18 |
| 20Y-26-21280 | 426 | 27 |
| 20Y-26-21281 | 421 | 27 |
| 20Y-26-22191 | 421 | 8 |
| | 426 | 8 |
| 20Y-26-22250 | 421 | 16 |
| | 426 | 16 |
| 20Y-26-22330 | 421 | 4 |
| 20Y-26-22340 | 421 | 5 |
| 20Y-26-22420 | 421 | 7 |
| 20Y-26-31120 | 421 | 3 |
| | 426 | 3 |
| 20Y-26-31211 | 422 | 6 |
| | 427 | 6 |
| 20Y-26-31421 | 422 | 12 |
| | 427 | 12 |

| Part Number | Page | Index |
|---|---|---|
| 20Y-26-31431 | 422 | 13 |
| | 427 | 13 |
| 20Y-26-31460 | 422 | 14 |
| | 427 | 14 |
| 20Y-26-31471 | 422 | 11 |
| | 427 | 11 |
| 20Y-27-00120 | 441 | |
| 20Y-27-00500 | 435 | |
| | 436 | |
| | 437 | |
| 20Y-27-00510 | 439 | |
| | 440 | |
| | 441 | |
| 20Y-27-11561 | 437 | 33 |
| | 441 | 33 |
| 20Y-27-11582 | 437 | 32 |
| | 441 | 32 |
| 20Y-27-13310 | 437 | 14 |
| | 441 | 14 |
| 20Y-27-21220 | 437 | 21 |
| | 441 | 21 |
| 20Y-27-21240 | 421 | 15 |
| | 426 | 15 |
| | 437 | 20 |
| | 441 | 20 |
| 20Y-27-21260 | 441 | 19 |
| 20Y-27-21280 | 421 | 17 |
| | 426 | 17 |
| | 437 | 22 |
| | 441 | 22 |
| 20Y-27-21290 | 441 | 13 |
| 20Y-27-21310 | 437 | 24 |
| | 441 | 24 |
| 20Y-27-22120 | 437 | 18 |
| | 441 | 18 |
| 20Y-27-22210 | 437 | 19 |
| 20Y-27-22240 | 437 | 16 |
| | 441 | 16 |
| 20Y-27-31111 | 437 | 17 |
| | 441 | 17 |

| Part Number | Page | Index |
|---|---|---|
| 20Y-27-31190 | 437 | 30 |
| | 441 | 30 |
| 20Y-27-41110 | 437 | 23 |
| | 441 | 23 |
| 20Y-27-41120 | 437 | 15 |
| | 441 | 15 |
| 20Y-27-41130 | 441 | 9 |
| 20Y-27-41140 | 441 | 3 |
| 20Y-27-41150 | 441 | 8 |
| 20Y-27-41160 | 437 | 25 |
| | 441 | 25 |
| 20Y-27-41170 | 441 | 12 |
| 20Y-27-41180 | 441 | 6 |
| 20Y-27-41190 | 437 | 5 |
| | 441 | 5 |
| 20Y-27-41260 | 441 | 4 |
| 20Y-27-41270 | 441 | 11 |
| 20Y-27-41310 | 441 | 10 |
| 20Y-30-00016 | 448 | |
| 20Y-30-00282 | 449 | |
| 20Y-30-00322 | 444 | |
| 20Y-30-00381 | 449 | |
| 20Y-30-00391 | 452 | |
| 20Y-30-00430 | 448 | |
| 20Y-30-00442 | 447 | |
| 20Y-30-00481 | 452 | |
| 20Y-30-00490 | 452 | |
| 20Y-30-11340 | 448 | 11 |
| | 449 | 11 |
| 20Y-30-11370 | 466 | 13 |
| | 467 | 13 |
| 20Y-30-13131 | 444 | 3 |
| 20Y-30-13170 | 449 | 4 |
| 20Y-30-13320 | 447 | 3 |
| 20Y-30-16170 | 448 | 10 |
| | 449 | 10 |
| 20Y-30-16330 | 448 | 8 |
| | 449 | 8 |
| | 452 | 8 |
| | 453 | 8 |

| Part Number | Page | Index |
|---|---|---|
| 20Y-30-16411 | 448 | 1 |
| | 449 | 1 |
| 20Y-30-21151 | 466 | 8 |
| | 467 | 8 |
| 20Y-30-21191 | 437 | 36 |
| | 441 | 36 |
| 20Y-30-23140 | 470 | 8 |
| 20Y-30-31160 | 469 | 1 |
| 20Y-30-31170 | 470 | 1 |
| 20Y-30-31180 | 470 | 2 |
| 20Y-30-31750 | 444 | 8 |
| | 447 | 8 |
| 20Y-30-31D24 | 466 | 2 |
| | 467 | 2 |
| 20Y-30-31E81 | 466 | 4 |
| | 467 | 4 |
| 20Y-30-41111 | 466 | 1 |
| 20Y-30-41160 | 576 | 1 |
| 20Y-30-41211 | 467 | 1 |
| 20Y-30-41A10 | 466 | 3 |
| | 467 | 3 |
| 20Y-30-42110 | 445 | 1 |
| | 446 | 1 |
| 20Y-30-42120 | 445 | 11 |
| | 446 | 11 |
| 20Y-30-42130 | 445 | 10 |
| 20Y-30-42160 | 445 | 3 |
| | 446 | 3 |
| 20Y-30-42170 | 446 | 10 |
| 20Y-30-43221 | 452 | 2 |
| | 453 | 2 |
| 20Y-30-43230 | 452 | 3 |
| | 453 | 3 |
| 20Y-30-43240 | 452 | 4 |
| | 453 | 4 |
| 20Y-30-43250 | 452 | 5 |
| | 453 | 5 |
| 20Y-30-43260 | 452 | 1 |
| | 453 | 1 |
| 20Y-30-43310 | 444 | 1 |

| Part Number | Page | Index |
|---|---|---|
| | 447 | 1 |
| 20Y-30-43340 | 444 | 2 |
| | 447 | 2 |
| 20Y-32-00300 | 465 | |
| 20Y-32-02031 | 458 | |
| 20Y-32-02041 | 457 | |
| 20Y-32-02051 | 456 | |
| 20Y-32-02060 | 454 | |
| 20Y-32-02240 | 455 | |
| 20Y-32-05041 | 578 | K02 |
| 20Y-32-05051 | 578 | K05 |
| 20Y-32-05070 | 578 | K03 |
| 20Y-32-05080 | 578 | K04 |
| 20Y-32-11141 | 454 | 5 |
| | 454 | 14 |
| | 455 | 5 |
| | 455 | 14 |
| | 456 | 5 |
| | 456 | 14 |
| | 457 | 5 |
| | 457 | 14 |
| | 458 | 5 |
| | 458 | 14 |
| | 465 | 5 |
| | 465 | 11 |
| 20Y-32-11171 | 454 | 4 |
| | 454 | 13 |
| | 455 | 4 |
| | 455 | 13 |
| | 456 | 4 |
| | 456 | 13 |
| | 457 | 4 |
| | 457 | 13 |
| | 458 | 4 |
| | 458 | 13 |
| | 465 | 4 |
| | 465 | 10 |
| 20Y-32-11220 | 578 | |
| 20Y-32-11230 | 454 | 8 |
| | 454 | 17 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 578 | |
| 20Y-32-11240 | 454 | 3 |
| | 454 | 12 |
| | 455 | 3 |
| | 455 | 12 |
| | 456 | 3 |
| | 456 | 12 |
| | 457 | 3 |
| | 457 | 12 |
| | 458 | 3 |
| | 458 | 12 |
| | 465 | 3 |
| | 465 | 9 |
| 20Y-32-11260 | 454 | 19 |
| | 455 | 19 |
| | 456 | 19 |
| | 457 | 19 |
| | 458 | 19 |
| | 465 | 13 |
| 20Y-32-11340 | 454 | 7 |
| | 454 | 16 |
| 20Y-32-21110 | 456 | 7 |
| | 456 | 16 |
| 20Y-32-31120 | 454 | 1 |
| | 454 | 10 |
| | 455 | 1 |
| | 455 | 10 |
| | 456 | 1 |
| | 456 | 10 |
| | 457 | 1 |
| | 457 | 10 |
| | 458 | 1 |
| | 458 | 10 |
| | 465 | 1 |
| | 465 | 7 |
| 20Y-32-31130 | 454 | 2 |
| | 454 | 11 |
| | 455 | 2 |
| | 455 | 11 |
| | 456 | 2 |
| | 456 | 11 |
| | 457 | 2 |
| | 457 | 11 |
| | 458 | 2 |
| | 458 | 11 |
| | 465 | 2 |
| | 465 | 8 |
| 20Y-32-31150 | 454 | 6 |
| | 454 | 15 |
| | 455 | 6 |
| | 455 | 15 |
| | 456 | 6 |
| | 456 | 15 |
| | 457 | 6 |
| | 457 | 15 |
| | 458 | 6 |
| | 458 | 15 |
| | 465 | 6 |
| | 465 | 12 |
| 20Y-32-31190 | 454 | 20 |
| | 455 | 20 |
| | 456 | 20 |
| | 457 | 20 |
| | 458 | 20 |
| | 465 | 14 |
| 20Y-32-31210 | 455 | 8 |
| | 455 | 17 |
| | 456 | 8 |
| | 456 | 17 |
| | 457 | 8 |
| | 457 | 17 |
| | 458 | 8 |
| | 458 | 17 |
| | 578 | |
| 20Y-32-31231 | 356 | 17 |
| | 578 | |
| 20Y-32-31240 | 455 | 7 |
| | 455 | 16 |
| 20Y-32-31310 | 458 | 7 |
| | 458 | 16 |
| 20Y-32-31320 | 457 | 7 |
| | 457 | 16 |
| 20Y-43-22211 | 350 | 1 |
| 20Y-43-22221 | 356 | 1 |
| 20Y-43-22250 | 350 | 6 |
| | 356 | 6 |
| 20Y-43-22261 | 350 | 7 |
| | 356 | 7 |
| 20Y-43-22370 | 350 | 8 |
| | 356 | 8 |
| 20Y-43-22381 | 350 | 3 |
| 20Y-43-22390 | 356 | 3 |
| 20Y-43-22421 | 350 | 4 |
| | 356 | 4 |
| 20Y-43-31421 | 354 | 19 |
| 20Y-43-31432 | 354 | 17 |
| 20Y-43-31440 | 354 | 20 |
| 20Y-43-31450 | 354 | 21 |
| 20Y-43-31513 | 354 | 13 |
| 20Y-43-31522 | 354 | 14 |
| 20Y-43-31611 | 354 | 15 |
| 20Y-43-31621 | 354 | 16 |
| 20Y-43-41111 | 343 | 10 |
| 20Y-43-41121 | 343 | 3 |
| 20Y-43-41143 | 355 | 1 |
| 20Y-43-41152 | 355 | 7 |
| | 361 | 7 |
| 20Y-43-41162 | 355 | 5 |
| 20Y-43-41173 | 355 | 2 |
| 20Y-43-41181 | 355 | 11 |
| | 361 | 11 |
| 20Y-43-41191 | 355 | 13 |
| | 361 | 13 |
| 20Y-43-41230 | 346 | 1 |
| 20Y-43-41240 | 364 | 4 |
| 20Y-43-41252 | 346 | 14 |
| 20Y-43-41290 | 304 | 3 |
| | 305 | 3 |
| | 306 | 3 |
| | 330 | 6 |
| | 353 | 16 |
| | 353 | 21 |
| | 353 | 25 |
| | 359 | 11 |
| | 359 | 18 |
| | 359 | 22 |
| 20Y-43-41313 | 359 | 1 |
| 20Y-43-41323 | 359 | 7 |
| 20Y-43-41332 | 359 | 12 |
| 20Y-43-41343 | 361 | 1 |
| 20Y-43-41353 | 360 | 19 |
| 20Y-43-41361 | 343 | 6 |
| 20Y-43-41415 | 353 | 1 |
| 20Y-43-41423 | 353 | 9 |
| 20Y-43-41472 | 353 | |
| 20Y-43-41533 | 361 | 2 |
| 20Y-43-41591 | 355 | 15 |
| | 361 | 15 |
| 20Y-43-41621 | 353 | 7 |
| 20Y-43-41631 | 359 | 4 |
| 20Y-43-41641 | 353 | 8 |
| 20Y-43-41651 | 353 | 10 |
| 20Y-43-41661 | 353 | 11 |
| | 359 | 8 |
| 20Y-43-41671 | 360 | 30 |
| 20Y-43-41740 | 360 | 27 |
| 20Y-43-41750 | 360 | 28 |
| 20Y-43-41760 | 373 | 2 |
| 20Y-43-41780 | 360 | 34 |
| 20Y-43-41790 | 360 | 29 |
| 20Y-43-41813 | 346 | 7 |
| 20Y-43-41823 | 346 | 9 |
| 20Y-43-41832 | 346 | 11 |
| 20Y-43-41850 | 361 | 5 |
| 20Y-43-41891 | 346 | 12 |
| 20Y-43-42130 | 354 | 2 |
| 20Y-46-11270 | 407 | 11 |
| 20Y-46-11410 | 408 | 3 |
| 20Y-46-21520 | 416 | 7 |
| | 417 | 7 |
| 20Y-46-41170 | 285 | 38 |
| | 287 | 38 |
| | 289 | 42 |
| | 291 | 42 |
| | 293 | 37 |
| 20Y-46-41280 | 284 | 6 |
| | 286 | 6 |
| | 288 | 6 |
| | 290 | 6 |
| | 292 | 6 |
| 20Y-46-51101 | 284 | 1 |
| 20Y-46-51140 | 285 | 41 |
| | 287 | 41 |
| | 289 | 45 |
| | 291 | 45 |
| | 293 | 40 |
| 20Y-46-51162 | 284 | 18 |
| | 286 | 18 |
| | 288 | 22 |
| | 290 | 22 |
| | 292 | 18 |
| 20Y-46-51180 | 285 | 39 |
| | 287 | 39 |
| | 289 | 43 |
| | 291 | 43 |
| | 293 | 38 |
| 20Y-46-51190 | 285 | 40 |
| | 287 | 40 |
| | 289 | 44 |
| | 291 | 44 |
| | 293 | 39 |
| 20Y-46-51501 | 286 | 1 |
| 20Y-46-51602 | 288 | 1 |
| 20Y-46-51702 | 290 | 1 |
| 20Y-46-52130 | 284 | 16 |
| | 286 | 16 |
| | 288 | 20 |
| | 290 | 20 |
| | 292 | 16 |
| 20Y-46-52141 | 284 | 19 |
| | 286 | 19 |
| | 288 | 23 |
| | 290 | 23 |
| | 292 | 19 |
| 20Y-46-52172 | 284 | 13 |
| | 286 | 13 |
| | 288 | 17 |
| | 290 | 17 |
| | 292 | 13 |
| 20Y-46-52180 | 284 | 12 |
| | 286 | 12 |
| | 288 | 16 |
| | 290 | 16 |
| | 292 | 12 |
| 20Y-46-52220 | 284 | 20 |
| | 286 | 20 |
| | 288 | 24 |
| | 290 | 24 |
| | 292 | 20 |
| 20Y-46-52230 | 284 | 17 |
| | 286 | 17 |
| | 288 | 21 |
| | 290 | 21 |
| | 292 | 17 |
| 20Y-46-52441 | 284 | |
| | 286 | |
| | 288 | |
| | 290 | |
| | 292 | |
| 20Y-46-54130 | 408 | 1 |
| 20Y-46-54141 | 407 | 4 |
| 20Y-46-54151 | 407 | 5 |
| 20Y-46-54160 | 407 | 6 |
| 20Y-46-54181 | 407 | 7 |
| 20Y-46-54191 | 407 | 8 |
| 20Y-46-54313 | 407 | 2 |
| 20Y-46-54323 | 407 | 3 |
| 20Y-46-54612 | 407 | |
| 20Y-46-56100 | 292 | 1 |
| 20Y-53-00031 | 316 | |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 20Y-53-00072 | 320 | |
| 20Y-53-00741 | 376 | |
| | 376 | |
| 20Y-53-11241 | 315 | 2 |
| | 377 | 2 |
| 20Y-53-11250 | 315 | 7 |
| | 377 | 7 |
| 20Y-53-11260 | 315 | 3 |
| | 377 | 3 |
| 20Y-53-11271 | 315 | 6 |
| | 377 | 6 |
| 20Y-53-11332 | 320 | 16 |
| | 320 | 17 |
| 20Y-53-11380 | 328 | 6 |
| 20Y-53-11390 | 328 | 4 |
| | 328 | 5 |
| 20Y-53-11402 | 320 | |
| 20Y-53-11451 | 320 | 12 |
| 20Y-53-11460 | 320 | 13 |
| 20Y-53-11470 | 320 | 10 |
| 20Y-53-11484 | 320 | 15 |
| 20Y-53-11511 | 316 | 1 |
| 20Y-53-11540 | 317 | 41 |
| 20Y-53-11561 | 317 | 25 |
| 20Y-53-11581 | 317 | 33 |
| 20Y-53-11591 | 318 | 1 |
| 20Y-53-11601 | 318 | |
| 20Y-53-11611 | 318 | 4 |
| 20Y-53-11641 | 317 | 34 |
| 20Y-53-11661 | 317 | 28 |
| 20Y-53-11712 | 319 | 1 |
| 20Y-53-11721 | 319 | 11 |
| 20Y-53-11741 | 319 | 6 |
| 20Y-53-11781 | 319 | 12 |
| 20Y-53-11790 | 319 | 7 |
| 20Y-53-11821 | 327 | 5 |
| 20Y-53-11831 | 327 | 7 |
| 20Y-53-11841 | 315 | 4 |
| | 377 | 4 |
| 20Y-53-11850 | 315 | 5 |

| Part Number | Page | Index |
|---|---|---|
| | 377 | 5 |
| 20Y-53-11870 | 334 | 2 |
| 20Y-53-11880 | 334 | 3 |
| 20Y-53-11921 | 319 | 4 |
| 20Y-53-11940 | 318 | 9 |
| 20Y-53-11953 | 304 | 4 |
| | 305 | 4 |
| | 306 | 4 |
| 20Y-53-11961 | 327 | 1 |
| 20Y-53-11973 | 318 | 11 |
| 20Y-53-11981 | 322 | 1 |
| 20Y-53-11990 | 322 | 6 |
| 20Y-53-11H71 | 319 | 2 |
| 20Y-53-12111 | 330 | 1 |
| 20Y-53-12122 | 329 | 13 |
| 20Y-53-12154 | 329 | 6 |
| 20Y-53-12172 | 329 | 12 |
| 20Y-53-12201 | 321 | 1 |
| 20Y-53-12221 | 325 | 7 |
| 20Y-53-12232 | 323 | 9 |
| 20Y-53-12240 | 330 | 2 |
| 20Y-53-12260 | 328 | 11 |
| 20Y-53-12280 | 322 | 3 |
| 20Y-53-12310 | 317 | 44 |
| | 326 | 16 |
| | 326 | 22 |
| | 329 | 16 |
| | 332 | 7 |
| | 332 | 11 |
| | 333 | 13 |
| | 338 | 12 |
| | 338 | 23 |
| | 338 | 26 |
| 20Y-53-12320 | 328 | 13 |
| 20Y-53-12330 | 317 | 14 |
| 20Y-53-12371 | 338 | 6 |
| 20Y-53-12381 | 338 | 14 |
| 20Y-53-12391 | 338 | 17 |
| 20Y-53-12412 | 326 | 1 |
| 20Y-53-12421 | 326 | 3 |

| Part Number | Page | Index |
|---|---|---|
| 20Y-53-12431 | 326 | 6 |
| 20Y-53-12441 | 326 | 10 |
| 20Y-53-12522 | 333 | 8 |
| 20Y-53-12531 | 317 | 43 |
| 20Y-53-12564 | 334 | 1 |
| 20Y-53-12580 | 328 | 16 |
| 20Y-53-12591 | 327 | 4 |
| 20Y-53-12710 | 326 | 9 |
| 20Y-53-12731 | 338 | 24 |
| 20Y-53-12740 | 328 | 17 |
| 20Y-53-12751 | 334 | 9 |
| 20Y-53-12760 | 334 | 10 |
| 20Y-53-12771 | 331 | 6 |
| 20Y-53-12781 | 334 | 8 |
| 20Y-53-12790 | 323 | 11 |
| 20Y-53-12810 | 329 | 5 |
| 20Y-53-12830 | 317 | 18 |
| 20Y-53-12860 | 339 | 28 |
| 20Y-53-12951 | 328 | 22 |
| 20Y-53-12960 | 328 | 1 |
| 20Y-53-12991 | 321 | 5 |
| 20Y-53-13280 | 332 | 3 |
| 20Y-53-13311 | 333 | 1 |
| 20Y-53-13321 | 333 | 4 |
| 20Y-53-13331 | 333 | 2 |
| 20Y-53-13341 | 333 | 5 |
| 20Y-53-13351 | 333 | 3 |
| 20Y-53-13361 | 333 | 6 |
| 20Y-53-13371 | 332 | 1 |
| 20Y-53-13421 | 332 | 8 |
| 20Y-53-13451 | 333 | 11 |
| 20Y-53-13461 | 333 | 14 |
| 20Y-53-13480 | 332 | 2 |
| 20Y-53-13490 | 327 | 3 |
| 20Y-53-13616 | 331 | |
| 20Y-53-13631 | 338 | |
| 20Y-53-13870 | 326 | 5 |
| 20Y-53-13880 | 320 | 14 |
| 20Y-53-13910 | 320 | 11 |
| 20Y-53-14116 | 340 | 1 |

| Part Number | Page | Index |
|---|---|---|
| 20Y-53-14121 | 349 | 1 |
| 20Y-53-14140 | 369 | 5 |
| 20Y-53-14220 | 373 | 9 |
| 20Y-53-14713 | 304 | 1 |
| 20Y-53-14723 | 305 | 1 |
| 20Y-53-14733 | 306 | 1 |
| 20Y-53-14812 | 335 | 1 |
| 20Y-53-14820 | 336 | 1 |
| 20Y-53-15121 | 164 | 3 |
| 20Y-53-15140 | 328 | 25 |
| 20Y-53-15150 | 160 | 4 |
| 20Y-53-15210 | 160 | 1 |
| 20Y-53-15220 | 159 | 1 |
| | 161 | 1 |
| 20Y-53-15710 | 307 | 1 |
| 20Y-53-15750 | 307 | 2 |
| 20Y-53-15780 | 307 | 7 |
| 20Y-53-15790 | 307 | 8 |
| 20Y-53-16741 | 308 | 1 |
| 20Y-53-16910 | 308 | 2 |
| 20Y-53-17411 | 308 | 7 |
| 20Y-53-17420 | 308 | 12 |
| 20Y-53-17811 | 314 | 4 |
| 20Y-53-18211 | 335 | 9 |
| 20Y-53-18221 | 339 | 33 |
| 20Y-53-18880 | 328 | 20 |
| 20Y-54-11611 | 316 | 36 |
| | 322 | 11 |
| | 385 | 35 |
| | 387 | 23 |
| 20Y-54-11750 | 382 | 6 |
| 20Y-54-12320 | 389 | 20 |
| | 392 | 20 |
| 20Y-54-12550 | 386 | 46 |
| | 390 | 21 |
| | 393 | 21 |
| | 409 | 20 |
| | 409 | 30 |
| | 410 | 44 |
| | 411 | 20 |

| Part Number | Page | Index |
|---|---|---|
| | 411 | 30 |
| | 412 | 44 |
| | 413 | 20 |
| | 413 | 30 |
| | 414 | 44 |
| 20Y-54-14590 | 317 | 15 |
| | 319 | 8 |
| 20Y-54-19930 | 401 | 17 |
| | 402 | 17 |
| 20Y-54-25852 | 394 | 14 |
| | 396 | 16 |
| | 399 | 15 |
| 20Y-54-27172 | 380 | 5 |
| | 381 | 5 |
| 20Y-54-27182 | 394 | 25 |
| | 396 | 27 |
| | 399 | 26 |
| 20Y-54-27330 | 380 | 6 |
| | 381 | 6 |
| 20Y-54-28170 | 385 | 26 |
| | 387 | 17 |
| 20Y-54-29232 | 385 | 37 |
| | 387 | 26 |
| 20Y-54-29660 | 401 | 9 |
| | 402 | 9 |
| 20Y-54-29680 | 401 | 8 |
| | 402 | 8 |
| 20Y-54-32760 | 382 | 5 |
| 20Y-54-35430 | 404 | 3 |
| 20Y-54-35451 | 328 | 12 |
| 20Y-54-36342 | 303 | 23 |
| 20Y-54-39450 | 323 | 5 |
| 20Y-54-39460 | 323 | 6 |
| 20Y-54-39480 | 323 | 7 |
| 20Y-54-39511 | 325 | 11 |
| 20Y-54-51420 | 317 | 42 |
| 20Y-54-51621 | 317 | 38 |
| 20Y-54-51640 | 318 | 3 |
| 20Y-54-51670 | 317 | 21 |
| 20Y-54-51680 | 317 | 22 |

| Part Number | Page | Index |
|---|---|---|
| 20Y-54-52211 | 323 | 1 |
| 20Y-54-52221 | 323 | |
| 20Y-54-52300 | 321 | 2 |
| 20Y-54-52350 | 323 | 4 |
| 20Y-54-52530 | 307 | 3 |
| 20Y-54-52621 | 317 | 12 |
| 20Y-54-52681 | 317 | 13 |
| 20Y-54-52961 | 308 | 13 |
| 20Y-54-52970 | 308 | 14 |
| 20Y-54-52980 | 308 | 15 |
| 20Y-54-53370 | 313 | 3 |
| 20Y-54-54480 | 159 | 6 |
| | 161 | 5 |
| 20Y-54-61372 | 385 | 32 |
| 20Y-54-61391 | 387 | 30 |
| 20Y-54-61470 | 385 | 20 |
| | 387 | 11 |
| 20Y-54-61630 | 405 | 3 |
| 20Y-54-61670 | 284 | 7 |
| | 286 | 7 |
| | 288 | 11 |
| | 290 | 11 |
| | 292 | 7 |
| 20Y-54-61680 | 284 | 8 |
| | 286 | 8 |
| | 288 | 12 |
| | 290 | 12 |
| | 292 | 8 |
| 20Y-54-61760 | 383 | 4 |
| | 384 | 4 |
| 20Y-54-61770 | 409 | 2 |
| | 411 | 2 |
| | 413 | 2 |
| 20Y-54-61780 | 409 | 4 |
| | 411 | 4 |
| | 413 | 4 |
| 20Y-54-61790 | 394 | 9 |
| | 396 | 9 |
| | 399 | 10 |
| 20Y-54-61870 | 409 | 33 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 411 | 33 |
| | 413 | 33 |
| 20Y-54-61890 | 409 | 24 |
| | 411 | 24 |
| | 413 | 24 |
| 20Y-54-61990 | 394 | 8 |
| | 396 | 8 |
| | 399 | 9 |
| 20Y-54-63390 | 385 | 14 |
| 20Y-54-63414 | 385 | 8 |
| | 385 | 15 |
| | 387 | 7 |
| 20Y-54-65121 | 369 | 11 |
| 20Y-54-65340 | 346 | 15 |
| 20Y-54-65690 | 334 | 15 |
| 20Y-54-65790 | 334 | 14 |
| 20Y-54-71136 | 385 | 7 |
| 20Y-54-71144 | 385 | 13 |
| 20Y-54-71153 | 387 | |
| 20Y-54-71172 | 394 | 37 |
| | 397 | 39 |
| | 400 | 38 |
| 20Y-54-71182 | 380 | 9 |
| | 381 | 9 |
| 20Y-54-71211 | 383 | 1 |
| | 384 | 1 |
| 20Y-54-71222 | 386 | 41 |
| 20Y-54-71241 | 386 | 43 |
| 20Y-54-71262 | 390 | 28 |
| | 393 | 28 |
| 20Y-54-71271 | 384 | |
| 20Y-54-71283 | 386 | |
| 20Y-54-71312 | 385 | 1 |
| 20Y-54-71323 | 385 | 2 |
| 20Y-54-71331 | 385 | 3 |
| 20Y-54-71341 | 385 | 4 |
| 20Y-54-71361 | 385 | 38 |
| 20Y-54-71372 | 385 | 9 |
| 20Y-54-71411 | 387 | 1 |
| 20Y-54-71421 | 387 | 2 |
| 20Y-54-71431 | 387 | 3 |
| 20Y-54-71440 | 387 | 25 |
| 20Y-54-71454 | 387 | 6 |
| 20Y-54-71460 | 380 | 2 |
| | 381 | 2 |
| 20Y-54-71470 | 380 | 23 |
| | 381 | 23 |
| 20Y-54-71480 | 380 | 24 |
| | 381 | 24 |
| 20Y-54-71491 | 387 | 8 |
| 20Y-54-71561 | 390 | 12 |
| | 393 | 12 |
| 20Y-54-71572 | 390 | 24 |
| | 393 | 24 |
| 20Y-54-71613 | 388 | |
| | 391 | |
| 20Y-54-71633 | 388 | 16 |
| | 391 | 16 |
| 20Y-54-71670 | 388 | 19 |
| | 391 | 19 |
| 20Y-54-71723 | 394 | 13 |
| | 396 | 15 |
| | 399 | 14 |
| 20Y-54-71731 | 394 | 36 |
| | 397 | 38 |
| | 399 | 37 |
| 20Y-54-71811 | 409 | |
| | 411 | |
| | 413 | |
| 20Y-54-71831 | 409 | 23 |
| | 411 | 23 |
| | 413 | 23 |
| 20Y-54-71851 | 409 | 25 |
| | 411 | 25 |
| | 413 | 25 |
| 20Y-54-71863 | 409 | 5 |
| | 411 | 5 |
| | 413 | 5 |
| 20Y-54-71950 | 390 | 25 |
| | 393 | 25 |
| 20Y-54-71962 | 390 | 26 |
| | 393 | 26 |
| 20Y-54-71970 | 388 | 2 |
| | 391 | 2 |
| 20Y-54-71980 | 388 | 3 |
| | 391 | 3 |
| 20Y-54-71991 | 389 | 2 |
| | 392 | 2 |
| 20Y-54-72113 | 380 | 16 |
| | 381 | 16 |
| 20Y-54-72141 | 380 | 18 |
| | 381 | 18 |
| 20Y-54-72191 | 380 | 17 |
| | 381 | 17 |
| 20Y-54-72221 | 389 | 8 |
| | 392 | 8 |
| 20Y-54-72231 | 389 | 9 |
| | 392 | 9 |
| 20Y-54-72251 | 389 | 5 |
| | 392 | 5 |
| 20Y-54-72260 | 388 | 4 |
| | 391 | 4 |
| 20Y-54-72270 | 388 | 5 |
| | 391 | 5 |
| 20Y-54-72280 | 388 | 6 |
| | 391 | 6 |
| 20Y-54-72313 | 388 | |
| 20Y-54-72322 | 389 | |
| | 392 | |
| 20Y-54-72331 | 389 | |
| 20Y-54-72351 | 389 | 10 |
| | 392 | 10 |
| 20Y-54-72361 | 284 | 21 |
| | 284 | 23 |
| | 286 | 21 |
| | 286 | 23 |
| | 288 | 25 |
| | 288 | 27 |
| | 290 | 25 |
| | 290 | 27 |
| | 292 | 22 |
| 20Y-54-72431 | 383 | 2 |
| 20Y-54-72441 | 142 | 28 |
| | 145 | 22 |
| | 148 | 24 |
| 20Y-54-72470 | 390 | 13 |
| | 393 | 13 |
| 20Y-54-72481 | 390 | 3 |
| | 393 | 3 |
| 20Y-54-72491 | 389 | 6 |
| | 392 | 6 |
| 20Y-54-72510 | 388 | 8 |
| | 391 | 8 |
| 20Y-54-72520 | 388 | 9 |
| | 391 | 9 |
| 20Y-54-72540 | 388 | 10 |
| | 391 | 10 |
| 20Y-54-72551 | 388 | 11 |
| | 391 | 11 |
| 20Y-54-72740 | 386 | 40 |
| 20Y-54-72750 | 385 | 39 |
| 20Y-54-72831 | 388 | 12 |
| | 391 | 12 |
| 20Y-54-72870 | 385 | 10 |
| 20Y-54-73190 | 394 | 15 |
| | 396 | 17 |
| | 399 | 16 |
| 20Y-54-73390 | 389 | 11 |
| | 392 | 11 |
| 20Y-54-73411 | 389 | 12 |
| | 392 | 12 |
| 20Y-54-73451 | 284 | 22 |
| | 286 | 22 |
| | 288 | 26 |
| | 290 | 26 |
| | 292 | 21 |
| 20Y-54-73711 | 388 | 13 |
| | 391 | 13 |
| 20Y-54-73730 | 394 | 11 |
| | 396 | 11 |
| | 399 | 12 |
| 20Y-54-73741 | 394 | |
| | 399 | |
| 20Y-54-73752 | 385 | 17 |
| 20Y-54-73760 | 390 | 6 |
| | 393 | 6 |
| 20Y-54-73770 | 390 | 7 |
| | 393 | 7 |
| 20Y-54-73781 | 390 | 2 |
| | 393 | 2 |
| 20Y-54-73791 | 409 | |
| | 411 | |
| | 413 | |
| 20Y-54-73810 | 409 | |
| | 411 | |
| | 413 | |
| 20Y-54-73830 | 389 | 3 |
| | 392 | 3 |
| 20Y-54-73841 | 385 | 16 |
| 20Y-54-73850 | 390 | |
| | 393 | |
| 20Y-54-73870 | 409 | 15 |
| | 411 | 15 |
| | 413 | 15 |
| 20Y-54-73960 | 402 | 1 |
| 20Y-54-74122 | 401 | 2 |
| | 402 | 2 |
| 20Y-54-74133 | 401 | 3 |
| | 402 | 3 |
| 20Y-54-74143 | 401 | 1 |
| 20Y-54-74161 | 401 | 4 |
| | 402 | 4 |
| 20Y-54-74172 | 401 | 5 |
| | 402 | 5 |
| 20Y-54-74240 | 405 | 6 |
| 20Y-54-74260 | 404 | 2 |
| 20Y-54-74270 | 405 | 2 |
| 20Y-54-74310 | 406 | 2 |
| 20Y-54-74372 | 391 | |
| 20Y-54-74410 | 382 | 1 |
| 20Y-54-74420 | 382 | 9 |
| 20Y-54-74431 | 382 | 14 |
| 20Y-54-74441 | 382 | 13 |
| | 568 | 8 |
| 20Y-54-74451 | 396 | |
| 20Y-54-74530 | 398 | 15 |
| 20Y-54-74540 | 382 | 21 |
| 20Y-54-74550 | 382 | 17 |
| 20Y-54-74560 | 382 | 2 |
| | 382 | 10 |
| | 568 | 2 |
| 20Y-54-74570 | 382 | 18 |
| | 382 | 22 |
| | 568 | 11 |
| 20Y-54-74590 | 383 | |
| 20Y-54-74760 | 409 | |
| 20Y-54-74780 | 411 | |
| 20Y-54-75590 | 388 | 14 |
| | 391 | 14 |
| 20Y-54-75910 | 394 | 16 |
| | 396 | 18 |
| | 399 | 17 |
| 20Y-54-75920 | 394 | 18 |
| | 396 | 20 |
| | 399 | 19 |
| 20Y-54-75930 | 394 | 17 |
| | 396 | 19 |
| | 399 | 18 |
| 20Y-54-75940 | 284 | |
| | 286 | |
| | 288 | |
| | 290 | |
| | 292 | |
| 20Y-54-75950 | 284 | |
| | 286 | |
| | 288 | |
| | 290 | |
| | 292 | |
| 20Y-54-75960 | 284 | |
| | 286 | |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 288 | |
| | 290 | |
| | 292 | |
| 20Y-54-75970 | 284 | |
| | 286 | |
| | 2827 | |
| | 2829 | |
| | 292 | |
| 20Y-54-76110 | 284 | 28 |
| | 284 | 31 |
| | 286 | 28 |
| | 286 | 31 |
| | 288 | 32 |
| | 288 | 35 |
| | 290 | 32 |
| | 290 | 35 |
| | 292 | 27 |
| | 292 | 30 |
| 20Y-54-76120 | 284 | 25 |
| | 284 | 34 |
| | 286 | 25 |
| | 286 | 34 |
| | 288 | 29 |
| | 289 | 38 |
| | 290 | 29 |
| | 291 | 38 |
| | 292 | 24 |
| | 292 | 33 |
| 20Y-54-76140 | 284 | 26 |
| | 286 | 26 |
| | 288 | 30 |
| | 290 | 30 |
| | 292 | 25 |
| 20Y-54-76150 | 284 | 29 |
| | 286 | 29 |
| | 288 | 33 |
| | 290 | 33 |
| | 292 | 28 |
| 20Y-54-76160 | 284 | 32 |
| | 286 | 32 |
| | 289 | 36 |
| | 291 | 36 |
| | 292 | 31 |
| 20Y-54-76170 | 285 | 35 |
| | 287 | 35 |
| | 289 | 39 |
| | 291 | 39 |
| | 292 | 34 |
| 20Y-54-76230 | 394 | 2 |
| | 396 | 2 |
| 20Y-54-76421 | 156 | 30 |
| 20Y-54-76450 | 380 | 1 |
| | 381 | 1 |
| 20Y-54-76470 | 389 | |
| | 392 | |
| 20Y-54-76490 | 394 | |
| | 396 | |
| 20Y-54-76510 | 399 | |
| 20Y-54-76520 | 399 | 2 |
| 20Y-54-76530 | 399 | |
| 20Y-54-76760 | 392 | |
| 20Y-54-76780 | 384 | 2 |
| 20Y-54-76810 | 413 | |
| 20Y-54-76910 | 387 | 31 |
| 20Y-54-79510 | 568 | 1 |
| 20Y-54-79520 | 568 | 5 |
| 20Y-54-79530 | 568 | 9 |
| 20Y-54-79540 | 568 | 10 |
| 20Y-54-K7321 | 380 | 4 |
| | 381 | 4 |
| 20Y-57-41103 | 296 | |
| 20Y-57-A1661 | 299 | 1 |
| 20Y-60-21240 | 169 | 21 |
| | 171 | 25 |
| 20Y-60-21320 | 169 | 27 |
| | 171 | 31 |
| 20Y-60-21340 | 169 | 37 |
| | 172 | 41 |
| 20Y-60-21470 | 169 | 35 |
| | 172 | 39 |
| 20Y-60-22270 | 191 | 22 |
| | 217 | 22 |
| | 220 | 22 |
| | 233 | 22 |
| 20Y-60-31131 | 169 | 20 |
| | 171 | 24 |
| 20Y-60-31140 | 169 | 19 |
| | 171 | 23 |
| 20Y-60-31171 | 169 | |
| | 171 | |
| 20Y-60-31430 | 251 | 9 |
| 20Y-60-32121 | 274 | 2 |
| | 277 | 2 |
| 20Y-60-32300 | 281 | |
| 20Y-60-41113 | 169 | 1 |
| | 171 | 1 |
| 20Y-60-41162 | 169 | 30 |
| | 171 | 34 |
| 20Y-60-41500 | 251 | 8 |
| 20Y-60-41611 | 2761 | |
| 20Y-60-41621 | 274 | |
| 20Y-62-12540 | 431 | 16 |
| | 432 | 16 |
| 20Y-62-12590 | 431 | 4 |
| | 432 | 4 |
| 20Y-62-13180 | 269 | 9 |
| | 269 | 19 |
| | 475 | 42 |
| | 484 | 42 |
| 20Y-62-13190 | 474 | 32 |
| | 483 | 32 |
| 20Y-62-13230 | 256 | 13 |
| 20Y-62-13412 | 500 | 1 |
| | 511 | 1 |
| | 515 | 1 |
| | 518 | 1 |
| 20Y-62-13450 | 256 | 16 |
| | 269 | 11 |
| | 269 | 18 |
| | 269 | 22 |
| | 474 | 14 |
| | 475 | 34 |
| | 475 | 44 |
| | 479 | 20 |
| | 479 | 23 |
| | 483 | 14 |
| | 483 | 34 |
| | 484 | 44 |
| | 503 | 38 |
| | 519 | 38 |
| 20Y-62-13650 | 475 | 41 |
| | 484 | 41 |
| 20Y-62-13690 | 474 | 9 |
| | 483 | 9 |
| 20Y-62-13710 | 474 | 31 |
| | 483 | 31 |
| 20Y-62-13720 | 474 | 10 |
| | 483 | 10 |
| 20Y-62-13730 | 474 | 11 |
| | 483 | 11 |
| 20Y-62-13760 | 256 | 10 |
| | 256 | 14 |
| 20Y-62-13761 | 269 | 10 |
| | 269 | 20 |
| | 474 | 13 |
| | 474 | 33 |
| | 475 | 43 |
| 20Y-62-15831 | 370 | 1 |
| | 370 | 10 |
| | 375 | 1 |
| | 375 | 14 |
| 20Y-62-16630 | 275 | 1 |
| | 278 | 1 |
| | 281 | 2 |
| 20Y-62-17480 | 256 | 17 |
| 20Y-62-18890 | 352 | 5 |
| | 358 | 5 |
| 20Y-62-18910 | 352 | 3 |
| | 358 | 3 |
| 20Y-62-19560 | 275 | 3 |
| | 278 | 3 |
| | 281 | 4 |
| 20Y-62-21940 | 275 | 11 |
| | 278 | 12 |
| 20Y-62-22160 | 191 | 18 |
| | 217 | 18 |
| | 220 | 18 |
| | 233 | 18 |
| 20Y-62-22790 | 187 | 18 |
| | 209 | 18 |
| | 245 | 5 |
| | 272 | 3 |
| | 273 | 3 |
| | 276 | 2 |
| | 279 | 2 |
| | 280 | 2 |
| | 282 | 14 |
| | 367 | 3 |
| | 367 | 11 |
| | 368 | 5 |
| | 368 | 14 |
| | 374 | 30 |
| 20Y-62-22810 | 245 | 15 |
| | 272 | 7 |
| | 273 | 7 |
| | 276 | 3 |
| | 276 | 11 |
| | 279 | 3 |
| | 279 | 11 |
| | 280 | 3 |
| | 280 | 11 |
| | 282 | 15 |
| | 368 | 6 |
| | 374 | 31 |
| 20Y-62-22820 | 272 | 5 |
| | 273 | 5 |
| | 279 | 23 |
| | 280 | 23 |
| | 282 | 6 |
| | 367 | 12 |
| | 368 | 7 |
| | 368 | 15 |
| | 373 | 32 |
| 20Y-62-22830 | 187 | 19 |
| | 209 | 19 |
| | 245 | 10 |
| | 282 | 7 |
| | 368 | 16 |
| 20Y-62-22840 | 282 | 16 |
| 20Y-62-22850 | 282 | 17 |
| | 367 | 13 |
| 20Y-62-22860 | 276 | 9 |
| | 279 | 9 |
| | 280 | 9 |
| | 282 | 8 |
| | 368 | 19 |
| 20Y-62-24580 | 487 | 30 |
| | 491 | 35 |
| 20Y-62-24610 | 489 | 30 |
| | 493 | 35 |
| 20Y-62-25360 | 373 | 6 |
| 20Y-62-27770 | 369 | 13 |
| 20Y-62-31321 | 545 | 4 |
| 20Y-62-31331 | 545 | 9 |
| 20Y-62-41140 | 256 | 1 |
| 20Y-62-41150 | 256 | 2 |
| 20Y-62-41181 | 257 | 12 |
| | 257 | 17 |
| | 258 | 12 |
| | 258 | 17 |
| 20Y-62-41213 | 270 | 3 |
| 20Y-62-41281 | 256 | 9 |
| 20Y-62-41292 | 270 | 12 |
| 20Y-62-41321 | 248 | 1 |
| 20Y-62-41572 | 120 | 12 |
| 20Y-62-41602 | 191 | |
| | 217 | |
| | 220 | |
| | 233 | |
| 20Y-62-41830 | 281 | 6 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 20Y-62-41860 | 258 | 6 |
| 20Y-62-41920 | 192 | 1 |
| | 218 | 1 |
| | 221 | 1 |
| | 234 | 1 |
| 20Y-62-41930 | 429 | 11 |
| | 431 | 27 |
| | 432 | 27 |
| 20Y-62-41940 | 422 | 36 |
| | 427 | 36 |
| 20Y-62-41960 | 275 | 4 |
| | 278 | 4 |
| 20Y-62-41971 | 191 | 23 |
| | 217 | 23 |
| | 220 | 23 |
| | 233 | 23 |
| 20Y-62-42251 | 368 | 8 |
| 20Y-62-42271 | 368 | 3 |
| 20Y-62-42471 | 255 | 2 |
| 20Y-62-43222 | 261 | 4 |
| 20Y-62-43251 | 545 | 16 |
| 20Y-62-43280 | 263 | 26 |
| | 267 | 32 |
| 20Y-62-43290 | 263 | 24 |
| | 267 | 30 |
| 20Y-62-43311 | 265 | 18 |
| 20Y-62-43320 | 265 | 28 |
| 20Y-62-43351 | 265 | 7 |
| 20Y-62-43361 | 265 | 9 |
| 20Y-62-43460 | 267 | 11 |
| 20Y-62-43470 | 374 | 21 |
| 20Y-62-43590 | 269 | 13 |
| 20Y-62-43870 | 255 | 6 |
| 20Y-62-43942 | 269 | 1 |
| 20Y-62-45152 | 480 | 2 |
| | 482 | 2 |
| 20Y-62-45162 | 480 | 3 |
| | 482 | 3 |
| 20Y-62-45170 | 480 | 4 |
| | 482 | 4 |
| 20Y-62-45210 | 480 | 6 |
| | 482 | 6 |
| 20Y-62-45382 | 479 | 21 |
| 20Y-62-45610 | 191 | 5 |
| | 217 | 5 |
| | 220 | 5 |
| | 233 | 5 |
| 20Y-62-45620 | 191 | 3 |
| | 217 | 3 |
| | 220 | 3 |
| | 233 | 3 |
| 20Y-62-45690 | 171 | 18 |
| 20Y-62-47790 | 545 | 19 |
| 20Y-62-47880 | 483 | 13 |
| | 483 | 3 |
| | 484 | 43 |
| 20Y-62-51112 | 193 | 1 |
| | 219 | 1 |
| 20Y-62-51151 | 270 | 7 |
| 20Y-62-51181 | 261 | 28 |
| 20Y-62-51212 | 270 | 1 |
| 20Y-62-51222 | 270 | 5 |
| 20Y-62-51230 | 257 | 6 |
| 20Y-62-51240 | 257 | 1 |
| | 258 | 1 |
| 20Y-62-51251 | 253 | 22 |
| | 254 | 22 |
| 20Y-62-51260 | 276 | 8 |
| | 279 | 8 |
| | 280 | 8 |
| 20Y-62-51280 | 265 | 13 |
| 20Y-62-51290 | 269 | 2 |
| 20Y-62-51321 | 265 | 31 |
| 20Y-62-51332 | 253 | 28 |
| | 254 | 28 |
| 20Y-62-51352 | 281 | 25 |
| 20Y-62-51371 | 281 | 22 |
| 20Y-62-51381 | 281 | 1 |
| 20Y-62-51392 | 281 | 24 |
| 20Y-62-51411 | 281 | 23 |
| 20Y-62-51433 | 121 | 1 |
| 20Y-62-51450 | 254 | 19 |
| 20Y-62-51461 | 253 | 19 |
| 20Y-62-51471 | 193 | 12 |
| | 219 | 12 |
| 20Y-62-51481 | 134 | 46 |
| | 136 | 43 |
| 20Y-62-51531 | 271 | 1 |
| 20Y-62-51541 | 271 | 3 |
| 20Y-62-51580 | 261 | 1 |
| 20Y-62-51630 | 251 | 1 |
| 20Y-62-51640 | 251 | 3 |
| 20Y-62-51671 | 248 | 5 |
| 20Y-62-51681 | 266 | |
| 20Y-62-51691 | 266 | 44 |
| 20Y-62-51760 | 261 | 15 |
| 20Y-62-51771 | 263 | 3 |
| | 267 | 3 |
| 20Y-62-51781 | 266 | 46 |
| 20Y-62-51790 | 474 | 21 |
| | 483 | 21 |
| 20Y-62-51810 | 501 | 3 |
| | 511 | 3 |
| | 515 | 3 |
| | 518 | 3 |
| 20Y-62-51910 | 276 | 7 |
| | 279 | 7 |
| | 280 | 7 |
| | 282 | 18 |
| 20Y-62-51922 | 273 | 6 |
| 20Y-62-51930 | 276 | 4 |
| | 279 | 4 |
| | 279 | 26 |
| | 280 | 4 |
| | 280 | 26 |
| 20Y-62-51940 | 276 | 5 |
| | 279 | 5 |
| | 280 | 5 |
| 20Y-62-51960 | 276 | 10 |
| | 279 | 10 |
| | 280 | 10 |
| 20Y-62-51993 | 276 | 6 |
| | 279 | 6 |
| | 280 | 6 |
| 20Y-62-52121 | 279 | 12 |
| | 280 | 12 |
| 20Y-62-52160 | 373 | 18 |
| 20Y-62-52210 | 367 | 1 |
| 20Y-62-52220 | 367 | 2 |
| 20Y-62-52230 | 367 | 7 |
| 20Y-62-52240 | 367 | 8 |
| 20Y-62-52250 | 367 | 9 |
| 20Y-62-52260 | 367 | 10 |
| 20Y-62-52280 | 368 | 4 |
| 20Y-62-52290 | 368 | 12 |
| 20Y-62-52310 | 368 | 13 |
| 20Y-62-52330 | 374 | 26 |
| 20Y-62-52340 | 374 | 27 |
| 20Y-62-52350 | 374 | 28 |
| 20Y-62-52411 | 250 | 6 |
| 20Y-62-52421 | 250 | 14 |
| 20Y-62-52461 | 249 | 17 |
| | 251 | 20 |
| 20Y-62-52474 | 249 | 13 |
| | 251 | 16 |
| 20Y-62-52480 | 250 | 20 |
| 20Y-62-52610 | 483 | 5 |
| 20Y-62-52620 | 474 | 1 |
| | 483 | 1 |
| 20Y-62-52631 | 474 | 26 |
| | 483 | 26 |
| 20Y-62-52641 | 474 | 27 |
| | 483 | 27 |
| 20Y-62-52651 | 475 | 36 |
| | 483 | 36 |
| 20Y-62-52661 | 475 | 37 |
| | 483 | 37 |
| 20Y-62-52671 | 479 | 9 |
| | 479 | 24 |
| 20Y-62-52680 | 479 | 17 |
| 20Y-62-52690 | 249 | 3 |
| 20Y-62-52710 | 480 | 5 |
| | 482 | 5 |
| 20Y-62-52720 | 480 | 7 |
| | 482 | 7 |
| 20Y-62-52731 | 479 | 6 |
| 20Y-62-52740 | 479 | 14 |
| 20Y-62-52751 | 479 | 1 |
| 20Y-62-52761 | 479 | 2 |
| 20Y-62-52770 | 479 | 12 |
| 20Y-62-52780 | 479 | 13 |
| 20Y-62-52790 | 249 | 8 |
| 20Y-62-52860 | 272 | 6 |
| 20Y-62-52890 | 269 | 6 |
| 20Y-62-53110 | 269 | 16 |
| 20Y-62-53160 | 253 | 36 |
| 20Y-62-53410 | 368 | 1 |
| 20Y-62-53420 | 368 | 2 |
| 20Y-62-53530 | 282 | 2 |
| 20Y-62-53650 | 272 | 1 |
| | 273 | 1 |
| 20Y-62-53660 | 272 | 2 |
| | 273 | 2 |
| 20Y-62-53670 | 272 | 4 |
| | 273 | 4 |
| 20Y-62-55340 | 504 | 34 |
| 20Y-62-55350 | 504 | 35 |
| 20Y-70-00752 | 59 | |
| 20Y-70-00781 | 514 | |
| 20Y-70-01240 | 502 | |
| 20Y-70-01260 | 505 | |
| 20Y-70-01291 | 517 | |
| 20Y-70-11190 | 294 | 2 |
| 20Y-70-11290 | 505 | 20 |
| | 507 | 18 |
| | 508 | 18 |
| | 516 | 18 |
| | 517 | 20 |
| 20Y-70-11310 | 505 | 21 |
| | 507 | 19 |
| | 508 | 19 |
| | 516 | 19 |
| | 517 | 21 |
| 20Y-70-11320 | 502 | 11 |
| | 502 | 16 |
| | 514 | 12 |
| | 514 | 17 |
| 20Y-70-11330 | 502 | 12 |
| | 502 | 17 |
| | 514 | 13 |
| | 514 | 18 |
| 20Y-70-11340 | 481 | 8 |
| | 523 | 2 |
| 20Y-70-11360 | 481 | 2 |
| 20Y-70-11370 | 495 | 1 |
| 20Y-70-11390 | 495 | 2 |
| 20Y-70-11410 | 294 | 5 |
| 20Y-70-11420 | 294 | 6 |
| 20Y-70-11430 | 294 | 11 |
| 20Y-70-11440 | 294 | 12 |
| 20Y-70-11540 | 478 | 10 |
| | 485 | 10 |
| 20Y-70-11651 | 480 | 8 |
| | 482 | 8 |
| 20Y-70-13150 | 500 | 6 |
| 20Y-70-13160 | 500 | 1 |
| 20Y-70-14122 | 524 | 2 |
| | 526 | 2 |
| 20Y-70-14520 | 524 | 5 |
| | 526 | 5 |
| | 528 | 2 |
| | 529 | 2 |
| | 530 | 2 |
| | 531 | 2 |
| | 533 | 2 |
| | 534 | 2 |
| 20Y-70-21640 | 480 | 9 |
| | 482 | 9 |
| 20Y-70-23220 | 502 | 5 |
| | 505 | 9 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 506 | 7 |
| | 507 | 7 |
| | 508 | 7 |
| | 509 | 7 |
| | 514 | 6 |
| | 516 | 7 |
| | 517 | 9 |
| | 578 | |
| | 579 | |
| | 579 | |
| 20Y-70-23230 | 502 | 6 |
| | 505 | 10 |
| | 507 | 8 |
| | 508 | 8 |
| | 514 | 7 |
| | 516 | 8 |
| | 517 | 10 |
| 20Y-70-31272 | 523 | 4 |
| 20Y-70-31310 | 478 | 11 |
| | 485 | 11 |
| 20Y-70-31320 | 478 | 12 |
| | 485 | 12 |
| 20Y-70-31330 | 476 | 3 |
| 20Y-70-31381 | 508 | 18 |
| | 59 | 18 |
| 20Y-70-31391 | | |
| | 508 | 19 |
| | 59 | 19 |
| 20Y-70-31431 | 508 | 13 |
| | 59 | 13 |
| 20Y-70-32122 | 507 | 1 |
| | 508 | 1 |
| 20Y-70-32410 | 505 | 5 |
| | 507 | 3 |
| | 508 | 3 |
| | 516 | 3 |
| | 517 | 5 |
| 20Y-70-32450 | 502 | 9 |
| | 502 | 14 |
| | 502 | 19 |

| Part Number | Page | Index |
|---|---|---|
| | 514 | 10 |
| | 514 | 15 |
| | 514 | 20 |
| 20Y-70-32460 | 502 | 22 |
| | 514 | 23 |
| 20Y-70-34121 | 524 | 3 |
| | 525 | 4 |
| | 526 | 3 |
| | 527 | 4 |
| | 528 | 3 |
| | 529 | 3 |
| | 530 | 3 |
| | 531 | 3 |
| 20Y-70-34131 | 524 | 4 |
| | 525 | 5 |
| | 526 | 4 |
| | 527 | 5 |
| | 528 | 4 |
| | 529 | 4 |
| | 530 | 4 |
| | 531 | 4 |
| 20Y-70-34240 | 526 | 15 |
| | 527 | 15 |
| | 529 | 15 |
| | 532 | 1 |
| 20Y-70-34250 | 526 | 16 |
| | 527 | 16 |
| | 529 | 16 |
| | 532 | 2 |
| 20Y-70-41143 | 480 | 1 |
| | 482 | 1 |
| 20Y-70-41211 | 495 | 6 |
| 20Y-70-41221 | 495 | 3 |
| 20Y-70-41230 | 476 | 4 |
| 20Y-70-41240 | 476 | 5 |
| 20Y-70-41250 | 481 | 7 |
| 20Y-70-42220 | 505 | 11 |
| | 507 | 9 |
| | 508 | 9 |
| | 516 | 9 |

| Part Number | Page | Index |
|---|---|---|
| | 517 | 11 |
| 20Y-70-42E51 | 505 | 2 |
| | 517 | 2 |
| 20Y-70-44310 | 524 | 1 |
| | 526 | 1 |
| 20Y-810-1112 | 310 | 2 |
| 20Y-810-1120 | 122 | 12 |
| 20Y-810-1130 | 310 | 18 |
| 20Y-810-1141 | 310 | 35 |
| 20Y-810-1161 | 122 | 13 |
| 20Y-810-1170 | 310 | 24 |
| 20Y-810-1180 | 310 | 7 |
| | 310 | 7 |
| 20Y-810-1190 | 310 | 6 |
| | 310 | 6 |
| 20Y-810-1211 | 362 | |
| 20Y-810-1221 | 132 | 13 |
| 20Y-810-1240 | 132 | 14 |
| 20Y-810-1250 | 132 | |
| 20Y-810-1260 | 310 | 1 |
| 20Y-810-1311 | 365 | 2 |
| 20Y-810-1321 | 365 | 4 |
| 20Y-810-1332 | 366 | 1 |
| 20Y-810-1342 | 366 | 3 |
| 20Y-810-1581 | 572 | 41 |
| 20Y-920-1121 | 528 | 5 |
| | 529 | 5 |
| 20Y-920-1221 | 530 | 5 |
| | 531 | 5 |
| 20Y-920-3350 | 530 | 1 |
| | 531 | 1 |
| 20Y-920-3420 | 533 | 3 |
| | 534 | 3 |
| 20Y-920-3450 | 533 | 1 |
| | 534 | 1 |
| 20Y-920-3C30 | 533 | 4 |
| | 534 | 4 |
| 20Y-920-3C40 | 533 | 5 |
| | 534 | 5 |
| 20Y-920-4210 | 528 | 1 |

| Part Number | Page | Index |
|---|---|---|
| | 529 | 1 |
| 20Y-939-1180 | 525 | 3 |
| | 527 | 3 |
| 20Y-939-2121 | 525 | 2 |
| | 527 | 2 |
| 20Y-939-4110 | 525 | 1 |
| | 527 | 1 |
| 20Y-944-4212 | 516 | 1 |
| 20Y-954-6111 | 301 | 1 |
| 20Y-954-6122 | 300 | 1 |
| 20Y-954-6132 | 302 | 1 |
| | 303 | 1 |
| 20Y-954-6142 | 303 | 9 |
| 20Y-954-6151 | 303 | 12 |
| 20Y-954-6161 | 303 | 13 |
| 20Y-954-6171 | 303 | 2 |
| 20Y-954-6181 | 303 | 3 |
| 20Y-954-6192 | 302 | 2 |
| | 303 | 6 |
| 20Y-954-6241 | 300 | 2 |
| 20Y-954-6250 | 300 | 10 |
| 20Y-954-6371 | 161 | 6 |
| 20Y-970-1820 | 265 | 4 |
| 20Y-970-2700 | 265 | |
| 20Y-970-3270 | 503 | 16 |
| | 519 | 16 |
| 20Y-970-3572 | 505 | 3 |
| | 517 | 3 |
| 20Y-970-4612 | 503 | 18 |
| | 519 | 18 |
| 20Y-970-5240 | 503 | 15 |
| | 519 | 15 |
| 20Y-970-5300 | 503 | |
| | 519 | |
| 20Y-970-5321 | 503 | 11 |
| | 519 | 11 |
| 20Y-970-5631 | 519 | 34 |
| 20Y-970-5641 | 519 | 35 |
| 20Y-970-6440 | 545 | 1 |
| 20Y-970-6450 | 263 | |

| Part Number | Page | Index |
|---|---|---|
| | 267 | |
| 20Y-970-7130 | 546 | 1 |
| 20Y-973-2220 | 468 | 1 |
| 20Y-973-2230 | 468 | 2 |
| 20Y-977-4310 | 573 | 5 |
| 20Y-977-4371 | 571 | 35 |
| 20Y-977-6360 | 573 | 2 |
| | 571 | 9 |
| 20Y-977-7140 | 571 | 11 |
| 20Y-977-7150 | 571 | 3 |
| 20Y-977-7160 | 571 | 16 |
| 20Y-977-7170 | 573 | 1 |
| 20Y-977-7210 | 570 | 1 |
| | 572 | 42 |
| 20Y-977-7220 | 573 | 8 |
| 20Y-977-7230 | 571 | 6 |
| 20Y-977-7240 | 571 | 7 |
| 20Y-977-7250 | 571 | 4 |
| 20Y-977-7260 | 567 | 6 |
| 20Y-977-7271 | 567 | 31 |
| | 570 | 14 |
| 20Y-977-7290 | 571 | 32 |
| 20Y-977-7320 | 567 | 14 |
| 20Y-977-7330 | 567 | 15 |
| 20Y-977-7340 | 567 | 17 |
| 20Y-977-7360 | 567 | 3 |
| 20Y-979-3130 | 365 | 5 |
| 20Y-979-3150 | 365 | 3 |
| 20Y-979-6161 | 330 | 7 |
| 20Y-979-6612 | 310 | 3 |
| 20Y-979-6771 | 336 | 5 |
| 20Y-98-21130 | 565 | |
| 20Y-98-21140 | 565 | 24 |
| 21J-06-12440 | 317 | 31 |
| 21K-04-K1130 | 574 | |
| 21K-54-26351 | 394 | 19 |
| | 396 | 21 |
| | 399 | 20 |
| 21K-62-72790 | 251 | 11 |
| 21K-62-72810 | 266 | 38 |

| Part Number | Page | Index |
|---|---|---|
| 21K-70-12161 | 502 | 2 |
| | 514 | 2 |
| 21M-06-31170 | 354 | 7 |
| 21T-06-11350 | 388 | 22 |
| | 391 | 22 |
| 21T-06-32810 | 158 | 5 |
| | 162 | 1 |
| | 163 | 1 |
| | 478 | 2 |
| | 485 | 2 |
| 21T-09-11460 | 503 | 2 |
| | 519 | 2 |
| 21T-38-12270 | 309 | 1 |
| 21T-38-71260 | 141 | 34 |
| | 143 | 37 |
| | 146 | 38 |
| 21T-54-16150 | 134 | 38 |
| | 135 | 35 |
| 21T-62-69711 | 133 | 4 |
| | 133 | 36 |
| | 135 | 4 |
| | 135 | 33 |
| 21U-98-31160 | 548 | 27 |
| 21W-62-43930 | 281 | 8 |
| 22B-26-11320 | 278 | 6 |
| 22B-54-15480 | 316 | 10 |
| 22B-54-15970 | 318 | 5 |
| 22B-54-15980 | 318 | 6 |
| 22B-54-16340 | 321 | 3 |
| 22B-54-17282 | 328 | 2 |
| 22B-54-17612 | 164 | 1 |
| 22B-54-17660 | 164 | |
| 22B-57-11911 | 298 | 1 |
| 22B-60-11160 | 169 | 29 |
| | 171 | 33 |
| 22B-954-1660 | 303 | 25 |
| 22B-954-1840 | 303 | 24 |
| 22B-98-11140 | 312 | 1 |
| 22N-957-1420 | 310 | 11 |
| 22S-62-26210 | 153 | 55 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 22U-00-21510 | 560 | 1 |
| 22U-00-28150 | 396 | 13 |
| 22U-01-21310 | 120 | 1 |
| 22U-03-22790 | 129 | 16 |
| 22U-03-22860 | 130 | 20 |
| 22U-04-21200 | 138 | |
| | 139 | |
| 22U-04-21210 | 138 | 11 |
| | 139 | 11 |
| 22U-04-21220 | 138 | 13 |
| | 139 | 13 |
| 22U-04-21241 | 138 | |
| | 139 | |
| 22U-06-11270 | 347 | 9 |
| 22U-06-22360 | 354 | 24 |
| 22U-06-22380 | 360 | 32 |
| 22U-06-22460 | 360 | 33 |
| 22U-06-22490 | 354 | 23 |
| 22U-26-21210 | 421 | 29 |
| | 426 | 29 |
| 22U-26-21230 | 421 | 28 |
| | 426 | 28 |
| 22U-26-21250 | 421 | 31 |
| | 426 | 31 |
| 22U-26-21280 | 421 | 1 |
| | 426 | 1 |
| 22U-26-21460 | 422 | 15 |
| | 427 | 15 |
| 22U-26-21510 | 421 | 32 |
| | 426 | 32 |
| 22U-26-21520 | 421 | 26 |
| | 426 | 26 |
| 22U-26-21530 | 421 | 24 |
| | 426 | 24 |
| 22U-26-21540 | 421 | 13 |
| | 426 | 13 |
| 22U-26-21551 | 421 | 20 |
| | 426 | 20 |
| 22U-26-21572 | 421 | 25 |
| | 426 | 25 |
| 22U-26-21580 | 421 | 12 |
| | 426 | 12 |
| 22U-30-11420 | 448 | 3 |
| 22U-30-11430 | 448 | 7 |
| | 449 | 7 |
| 22U-30-11440 | 448 | 9 |
| | 449 | 9 |
| 22U-30-11450 | 448 | 2 |
| | 449 | 2 |
| 22U-30-11460 | 449 | 3 |
| 22U-43-21111 | 343 | 15 |
| 22U-43-21182 | 350 | |
| 22U-43-21192 | 356 | |
| 22U-43-21211 | 350 | 5 |
| | 356 | 5 |
| 22U-43-21350 | 343 | |
| 22U-43-21360 | 343 | 9 |
| 22U-43-21390 | 346 | 13 |
| 22U-43-22340 | 338 | 2 |
| 22U-43-23251 | 359 | 5 |
| 22U-43-23260 | 354 | 25 |
| | 360 | 42 |
| 22U-43-23290 | 359 | 6 |
| 22U-54-24760 | 409 | 27 |
| | 411 | 27 |
| | 413 | 27 |
| 22U-54-25110 | 344 | 1 |
| 22U-54-25120 | 345 | 1 |
| 22U-54-25521 | 344 | 2 |
| 22U-54-25531 | 345 | 2 |
| 22U-54-25541 | 373 | 12 |
| 22U-54-25581 | 340 | 2 |
| 22U-54-25660 | 373 | 1 |
| 22U-60-21232 | 169 | 22 |
| | 171 | 26 |
| 22U-60-21330 | 275 | 16 |
| | 278 | 17 |
| 22U-62-21551 | 252 | 10 |
| | 253 | 7 |
| | 254 | 7 |
| 22U-62-21583 | 429 | 18 |
| 22U-62-21870 | 429 | 19 |
| 22U-62-24420 | 429 | 20 |
| 22U-62-26850 | 280 | 1 |
| 22U-62-32790 | 545 | 5 |
| 22U-70-21191 | 502 | 8 |
| | 502 | 13 |
| | 514 | 9 |
| | 514 | 14 |
| 22U-979-1930 | 122 | 14 |
| 23D-950-4450 | 338 | 27 |
| 281-01-13180 | 253 | 33 |
| | 254 | 33 |
| 2A5-54-13420 | 404 | 1 |
| | 405 | 1 |
| 417-875-1670 | 250 | 11 |
| 418-54-35450 | 331 | 5 |
| | 334 | 7 |
| 421-06-23330 | 158 | |
| | 159 | |
| | 160 | |
| | 161 | |
| | 162 | |
| | 163 | |
| | 478 | |
| | 485 | |
| 421-07-31270 | 336 | 4 |
| 421-U12-3140 | 398 | 3 |
| 421-U12-3160 | 398 | 5 |
| 421-U12-3170 | 398 | 6 |
| 421-U12-3180 | 398 | 7 |
| 421-U12-3190 | 398 | 8 |
| 421-U12-3210 | 398 | |
| 421-U12-3220 | 398 | 10 |
| 421-U12-3230 | 398 | 11 |
| 421-U12-3240 | 398 | 12 |
| 421-U12-3250 | 398 | 13 |
| 421-U12-3260 | 398 | 14 |
| 423-U12-3100 | 398 | |
| 423-U12-3120 | 398 | 1 |
| 423-U12-3130 | 398 | 2 |
| 423-U12-3150 | 398 | 4 |
| 437-40-26240 | 355 | 8 |
| | 361 | 8 |
| 560-43-15220 | 159 | 4 |
| 581-04-22290 | 575 | 18 |
| 600-181-1930 | 45 | 6 |
| | 46 | 7 |
| | 123 | 7 |
| 600-184-1350 | 45 | 5 |
| | 46 | 6 |
| | 123 | 6 |
| 600-184-1420 | 45 | 1 |
| | 46 | 5 |
| | 123 | 5 |
| 600-184-1470 | 45 | 4 |
| | 46 | 4 |
| | 123 | 4 |
| 600-185-4100 | 45 | |
| | 46 | |
| | 123 | |
| 600-185-4110 | 45 | 2 |
| | 46 | 2 |
| | 123 | 2 |
| 600-185-4120 | 46 | 3 |
| 600-311-3602 | 93 | |
| | 140 | |
| | 105 | |
| 600-311-3610 | 140 | |
| | 105 | |
| 600-311-3630 | 93 | 3 |
| | 140 | 3 |
| 600-311-3640 | 93 | 4 |
| | 140 | 4 |
| 600-311-3660 | 93 | |
| | 140 | |
| | 105 | |
| 600-311-3670 | 93 | 6 |
| | 140 | 6 |
| 600-311-3681 | 93 | 8 |
| 600-311-3690 | 93 | 9 |
| | 140 | 9 |
| 600-311-3711 | 93 | 5 |
| | 140 | 5 |
| 600-311-3722 | 93 | |
| | 140 | |
| | 105 | |
| 600-311-3730 | 93 | 7 |
| 600-311-9490 | 87 | 11 |
| 600-311-9732 | 87 | |
| 600-311-9760 | 87 | 6 |
| 600-311-9912 | 87 | 1 |
| 600-311-9921 | 87 | 2 |
| 600-311-9931 | 87 | 3 |
| 600-311-9941 | 87 | 4 |
| 600-311-9950 | 87 | 5 |
| 600-311-9961 | 87 | 7 |
| 600-311-9971 | 87 | 10 |
| 600-319-3610 | 60 | 6 |
| | 562 | 6 |
| | 563 | 6 |
| 600-319-3750 | 60 | 4 |
| | 562 | 5 |
| | 563 | 5 |
| 600-411-1280 | 350 | 9 |
| | 356 | 9 |
| 600-467-1100 | 83 | 1 |
| 600-625-7620 | 97 | 1 |
| 600-815-2170 | 76 | 1 |
| | 347 | 21 |
| 600-815-8941 | 113 | 1 |
| | 348 | 23 |
| 600-861-3111 | 107 | |
| 600-863-4210 | 108 | |
| 600-863-5111 | 110 | |
| 6110-73-6231 | 87 | 9 |
| 6130-12-1961 | 64 | 12 |
| 6130-12-8610 | 36 | 4 |
| 6131-12-4570 | 53 | 3 |
| | 54 | 3 |
| 6131-12-5920 | 73 | 7 |
| 6136-11-5120 | 78 | 2 |
| 6144-81-6680 | 68 | 4 |
| 6162-23-5770 | 112 | 6 |
| 6206-11-5850 | 37 | 5 |
| | 38 | 5 |
| 6207-81-6980 | 115 | 4 |
| 6210-11-5232 | 37 | 4 |
| | 38 | 4 |
| 6215-11-6330 | 68 | 5 |
| 6215-81-9510 | 69 | 18 |
| | 86 | 2 |
| 6215-81-9710 | 69 | 19 |
| | 86 | 3 |
| 6216-14-6820 | 41 | 12 |
| 6216-14-6830 | 57 | |
| 6216-14-6840 | 57 | 6 |
| | 571 | 36 |
| 6216-14-6860 | 41 | |
| 6216-14-6890 | 57 | 5 |
| 6216-24-5130 | 69 | |
| 6216-74-6180 | 111 | 10 |
| | 111 | 20 |
| 6217-71-5770 | 90 | 2 |
| 6217-71-6660 | 85 | 19 |
| 6217-71-6670 | 85 | 18 |
| 6222-81-7190 | 45 | 7 |
| | 46 | 8 |
| | 124 | 1 |
| | 125 | 1 |
| 6301-11-4630 | 64 | 13 |
| 6560-81-7110 | 69 | |
| 6560-81-7120 | 69 | 16 |
| 6560-81-7130 | 69 | 17 |
| 6643-11-4641 | 45 | 8 |
| | 46 | 9 |
| | 124 | 2 |
| | 125 | 2 |
| 6731-21-6220 | 64 | 4 |
| | 100 | 2 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 104 | 5 |
| 6731-51-5250 | 79 | 7 |
| 6731-51-5260 | 80 | 2 |
| 6731-51-5290 | 79 | 8 |
| | 79 | 10 |
| | 80 | 3 |
| | 80 | 5 |
| 6731-61-1370 | 50 | 3 |
| | 112 | 9 |
| 6731-61-2151 | 79 | 6 |
| 6731-82-6810 | 116 | 2 |
| 6732-11-1720 | 74 | 6 |
| 6732-11-1910 | 41 | 9 |
| | 104 | 6 |
| 6732-11-1920 | 41 | 10 |
| | 57 | 4 |
| | 64 | 17 |
| | 69 | 24 |
| | 104 | 7 |
| 6732-11-4160 | 42 | 5 |
| 6732-11-5860 | 48 | 4 |
| 6732-21-1411 | 69 | 6 |
| 6732-21-1611 | 69 | 7 |
| 6732-21-1812 | 69 | 10 |
| 6732-21-1820 | 41 | 5 |
| | 69 | 11 |
| 6732-21-1831 | 69 | 1 |
| | 69 | 27 |
| 6732-21-1960 | 69 | |
| | 86 | |
| 6732-21-3120 | 73 | 12 |
| | 85 | 14 |
| | 112 | 15 |
| 6732-21-4130 | 64 | 8 |
| 6732-21-4150 | 64 | 10 |
| 6732-21-4161 | 64 | 11 |
| 6732-21-4180 | 112 | 5 |
| 6732-21-5160 | 64 | 14 |
| | 66 | 3 |
| | 114 | 9 |
| 6732-21-5170 | 64 | 16 |
| | 66 | 15 |
| 6732-21-5491 | 73 | 2 |
| 6732-21-5530 | 69 | 21 |
| | 73 | 1 |
| 6732-21-6140 | 69 | 12 |
| 6732-21-6160 | 69 | 22 |
| 6732-21-6610 | 66 | 13 |
| 6732-21-6630 | 59 | 4 |
| | 73 | 9 |
| | 85 | 11 |
| | 114 | 3 |
| 6732-31-2420 | 72 | 3 |
| 6732-31-3132 | 72 | 8 |
| 6732-31-3320 | 72 | 7 |
| 6732-31-3420 | 72 | 11 |
| 6732-31-4120 | 58 | 1 |
| 6732-31-4130 | 58 | 2 |
| 6732-31-4180 | 65 | 1 |
| 6732-51-4420 | 79 | 5 |
| 6732-51-5130 | 57 | 1 |
| 6732-51-8330 | 50 | 2 |
| 6732-61-2240 | 41 | 11 |
| 6732-61-3110 | 85 | 21 |
| | 115 | 3 |
| 6732-61-3120 | 95 | |
| | 96 | |
| 6732-61-3170 | 95 | 8 |
| | 96 | 8 |
| 6732-61-3410 | 95 | 4 |
| | 96 | 4 |
| 6732-61-3420 | 95 | 3 |
| | 96 | 3 |
| 6732-61-3430 | 95 | 6 |
| | 96 | 6 |
| 6732-61-3440 | 95 | 2 |
| | 96 | 2 |
| 6732-61-3450 | 95 | 1 |
| | 96 | 1 |
| 6732-61-3610 | 98 | 1 |
| 6732-61-3750 | 96 | 7 |
| 6732-61-3871 | 562 | 7 |
| 6732-61-6131 | 104 | 3 |
| 6732-61-6140 | 85 | 2 |
| | 112 | 7 |
| 6732-61-6150 | 61 | 15 |
| 6732-71-3210 | 82 | 9 |
| 6732-71-3220 | 64 | 9 |
| | 73 | 6 |
| | 89 | 3 |
| 6732-71-6510 | 85 | 8 |
| 6732-81-6490 | 115 | 6 |
| 6732-81-6530 | 115 | 7 |
| 6732-81-6630 | 114 | 2 |
| 6732-81-8220 | 40 | 1 |
| 6732-81-8412 | 52 | 5 |
| 6732-81-8451 | 53 | 1 |
| | 54 | 1 |
| 6732-81-8810 | 49 | 1 |
| 6732-81-8820 | 49 | 3 |
| | 52 | 2 |
| 6732-81-8850 | 50 | 7 |
| 6732-81-8860 | 50 | 8 |
| 6732-82-3680 | 60 | 5 |
| 6733-11-4150 | 92 | 7 |
| 6733-71-5680 | 68 | 3 |
| | 111 | 16 |
| 6733-71-5830 | 85 | 20 |
| 6734-71-5610 | 68 | 9 |
| 6735-11-5611 | 37 | 13 |
| | 38 | 14 |
| 6735-21-1910 | 41 | |
| 6735-21-1920 | 42 | 2 |
| 6735-21-1930 | 42 | 3 |
| | 69 | 26 |
| 6735-21-5530 | 41 | 6 |
| | 50 | 9 |
| | 69 | 20 |
| 6735-21-5540 | 66 | 12 |
| 6735-41-5550 | 531 | 6 |
| | 531 | 9 |
| 6735-51-1120 | 77 | 1 |
| 6735-61-2120 | 59 | 3 |
| | 74 | 4 |
| | 79 | 14 |
| 6735-61-2140 | 79 | 2 |
| 6735-61-2160 | 79 | 3 |
| 6735-61-2190 | 79 | |
| 6735-61-3810 | 74 | 5 |
| 6735-61-6411 | 89 | 2 |
| 6735-71-3220 | 34 | 1 |
| | 62 | 2 |
| | 73 | 13 |
| | 114 | 8 |
| | 115 | 10 |
| 6735-71-3821 | 85 | 5 |
| 6735-71-5190 | 66 | 5 |
| | 103 | 2 |
| 6735-81-6170 | 116 | 3 |
| 6736-11-4460 | 114 | 4 |
| 6736-21-3210 | 61 | 14 |
| 6736-21-3230 | 79 | 15 |
| 6736-21-4221 | 64 | 1 |
| 6736-21-5310 | 91 | 7 |
| 6736-21-5320 | 64 | 15 |
| | 66 | 14 |
| 6736-21-5350 | 64 | 6 |
| 6736-29-1410 | 118 | 1 |
| 6736-29-1420 | 118 | 2 |
| 6736-39-1130 | 118 | |
| 6736-39-1160 | 118 | 3 |
| 6736-39-1170 | 118 | 4 |
| 6736-51-5142 | 60 | 3 |
| | 80 | 8 |
| | 562 | 4 |
| | 563 | 4 |
| 6736-51-8710 | 49 | 8 |
| | 50 | 6 |
| 6736-61-1520 | 102 | 2 |
| 6736-71-5811 | 89 | 1 |
| 6736-81-5110 | 111 | 13 |
| 6736-81-6170 | 116 | 4 |
| 6736-81-8730 | 85 | 3 |
| 6737-32-2110 | 104 | 2 |
| 6737-32-3121 | 72 | |
| 6737-62-6220 | 104 | |
| 6738-11-4320 | 47 | 1 |
| 6738-11-4370 | 47 | 3 |
| | 49 | 7 |
| 6738-11-4380 | 47 | 4 |
| 6738-11-4390 | 47 | 5 |
| 6738-21-5610 | 67 | |
| 6738-21-5620 | 67 | 1 |
| 6738-21-5630 | 67 | 2 |
| 6738-21-5640 | 67 | 3 |
| 6738-31-4200 | 65 | |
| 6738-51-5240 | 79 | 9 |
| 6738-51-5260 | 80 | 4 |
| 6738-51-9950 | 78 | 1 |
| 6738-61-3150 | 95 | 7 |
| 6738-61-4952 | 130 | 21 |
| 6738-81-7200 | 123 | |
| 6738-81-7210 | 123 | 1 |
| 6738-81-7500 | 46 | |
| 6738-81-7510 | 46 | 1 |
| 6738-81-8450 | 52 | 1 |
| 6738-82-8810 | 49 | 2 |
| 6738-91-1510 | 63 | 1 |
| 6741-81-9220 | 68 | 1 |
| 6742-01-1420 | 69 | 8 |
| | 69 | 23 |
| 6742-01-2441 | 115 | 2 |
| 6742-01-2630 | 84 | 5 |
| 6742-01-2690 | 66 | 6 |
| 6742-01-5504 | 62 | 6 |
| | 64 | 5 |
| 6743-12-4110 | 42 | 8 |
| 6744-11-1020 | 41 | |
| | 398 | 18 |
| 6744-11-1070 | 398 | 7 |
| 6751-81-2610 | 71 | 3 |
| 6751-81-8410 | 54 | 9 |
| 6754-01-1310 | 70 | |
| 6754-11-1150 | 41 | 4 |
| 6754-11-1160 | 41 | 8 |
| 6754-11-1211 | 41 | |
| 6754-11-1610 | 41 | 21 |
| 6754-11-1710 | 35 | 1 |
| 6754-11-1811 | 41 | 22 |
| 6754-11-1960 | 35 | 2 |
| 6754-11-3011 | 84 | |
| 6754-11-3130 | 84 | 3 |
| 6754-11-3140 | 84 | 4 |
| 6754-11-4120 | 43 | 3 |
| | 422 | 2 |
| 6754-11-4130 | 34 | 2 |
| 6754-11-4221 | 42 | 6 |
| 6754-11-4230 | 42 | 1 |
| 6754-11-4280 | 42 | 4 |
| 6754-11-4390 | 42 | 7 |
| 6754-11-4410 | 43 | 1 |
| 6754-11-5110 | 48 | 1 |
| 6754-11-5140 | 48 | 2 |
| 6754-11-5150 | 48 | 3 |
| 6754-11-5330 | 37 | 1 |
| 6754-11-5340 | 38 | 1 |
| 6754-11-5410 | 37 | 7 |
| 6754-11-5420 | 37 | 9 |
| | 38 | 9 |
| 6754-11-5440 | 51 | 1 |
| | 120 | 5 |
| 6754-11-5490 | 38 | 7 |
| 6754-11-5940 | 37 | 2 |
| | 38 | 2 |
| 6754-11-7110 | 61 | 12 |
| 6754-11-7120 | 61 | 13 |
| 6754-11-8100 | 36 | |
| 6754-11-8110 | 36 | 1 |
| 6754-11-8140 | 36 | 2 |
| 6754-11-8150 | 36 | 5 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 6754-11-8160 | 36 | 7 |
| 6754-11-8180 | 36 | 3 |
| | 60 | 1 |
| | 562 | 2 |
| | 563 | 2 |
| 6754-11-8210 | 36 | 6 |
| | 60 | 2 |
| | 562 | 3 |
| | 563 | 3 |
| 6754-21-1180 | 69 | 14 |
| 6754-21-1191 | 69 | 13 |
| 6754-21-1220 | 69 | |
| 6754-21-1240 | 69 | |
| 6754-21-1310 | 69 | |
| 6754-21-1320 | 69 | |
| 6754-21-1920 | 62 | 3 |
| 6754-21-3102 | 74 | |
| 6754-21-3120 | 74 | 2 |
| 6754-21-3140 | 74 | 7 |
| 6754-21-3150 | 74 | 3 |
| 6754-21-4111 | 64 | 2 |
| 6754-21-4210 | 64 | 3 |
| 6754-21-4220 | 64 | 7 |
| 6754-21-5120 | 66 | 8 |
| 6754-21-5130 | 66 | 10 |
| 6754-21-5140 | 66 | 11 |
| 6754-21-5150 | 62 | 1 |
| 6754-21-5170 | 62 | 5 |
| 6754-21-5510 | 66 | 1 |
| 6754-21-5520 | 66 | 4 |
| 6754-21-5530 | 66 | 2 |
| 6754-21-5610 | 73 | 3 |
| 6754-21-5810 | 73 | 4 |
| 6754-21-5820 | 73 | 5 |
| 6754-21-5830 | 66 | 9 |
| 6754-21-6100 | 39 | |
| 6754-21-6140 | 39 | |
| 6754-21-6150 | 39 | 3 |
| 6754-21-6160 | 39 | 4 |
| 6754-21-6170 | 39 | 5 |
| 6754-21-6180 | 39 | 6 |
| 6754-21-6211 | 59 | 1 |
| 6754-21-6220 | 59 | 2 |
| | 69 | 15 |
| 6754-21-6230 | 59 | 5 |
| 6754-21-6240 | 39 | 9 |
| 6754-21-6250 | 39 | 8 |
| 6754-21-6280 | 39 | 10 |
| 6754-21-9110 | 57 | 2 |
| 6754-21-9120 | 57 | 3 |
| 6754-22-8100 | 70 | |
| 6754-26-8310 | 118 | |
| 6754-26-8320 | 118 | |
| 6754-26-8410 | 118 | |
| 6754-27-8310 | 118 | |
| 6754-27-8320 | 118 | |
| 6754-28-8310 | 118 | |
| 6754-28-8320 | 118 | |
| 6754-28-8410 | 118 | |
| 6754-29-8310 | 118 | |
| 6754-29-8320 | 118 | |
| 6754-31-2010 | 72 | |
| 6754-31-2111 | 72 | 1 |
| 6754-31-2410 | 72 | 2 |
| 6754-31-3111 | 72 | 9 |
| 6754-31-3410 | 72 | 10 |
| 6754-31-8120 | 71 | 1 |
| 6754-31-8130 | 71 | 4 |
| 6754-31-8210 | 71 | 2 |
| 6754-36-3410 | 118 | 36 |
| 6754-37-3410 | 118 | 35 |
| 6754-38-3410 | 118 | 34 |
| 6754-39-2010 | 118 | |
| 6754-39-2111 | 118 | 29 |
| 6754-39-3410 | 118 | 33 |
| 6754-41-1100 | 91 | |
| 6754-41-1120 | 91 | 3 |
| 6754-41-1130 | 91 | 4 |
| 6754-41-1140 | 91 | 5 |
| 6754-41-1150 | 91 | 8 |
| 6754-41-1160 | 91 | 6 |
| 6754-41-1170 | 91 | |
| 6754-41-2110 | 62 | 4 |
| 6754-41-3110 | 61 | 1 |
| 6754-41-4100 | 41 | |
| 6754-41-4200 | 41 | |
| 6754-41-4430 | 41 | 19 |
| 6754-41-4510 | 41 | 20 |
| 6754-41-4540 | 41 | 13 |
| | 40 | 16 |
| 6754-41-5111 | 61 | |
| 6754-41-5140 | 61 | 5 |
| | 61 | 8 |
| 6754-41-5180 | 61 | 3 |
| 6754-41-5190 | 61 | 11 |
| 6754-41-5211 | 61 | |
| 6754-41-5260 | 61 | 10 |
| 6754-41-5310 | 61 | 2 |
| 6754-51-1110 | 77 | 2 |
| 6754-51-4440 | 79 | 11 |
| 6754-51-8100 | 50 | |
| 6754-51-8121 | 49 | 5 |
| | 50 | 4 |
| 6754-51-8210 | 50 | 5 |
| 6754-51-9810 | 80 | 6 |
| 6754-51-9910 | 80 | 7 |
| 6754-52-5310 | 80 | 1 |
| 6754-61-1010 | 102 | |
| 6754-61-1100 | 102 | 1 |
| 6754-61-2110 | 79 | 12 |
| 6754-61-2220 | 79 | 1 |
| 6754-61-2320 | 79 | 13 |
| 6754-61-3810 | 99 | 1 |
| | 563 | 7 |
| 6754-61-4111 | 100 | 1 |
| 6754-61-6130 | 104 | 4 |
| 6754-61-6211 | 105 | |
| 6754-61-6230 | 105 | 2 |
| 6754-61-6340 | 103 | 1 |
| 6754-71-1012 | 82 | |
| 6754-71-1210 | 92 | |
| 6754-71-1320 | 82 | 1 |
| 6754-71-1330 | 82 | 2 |
| 6754-71-1340 | 82 | 5 |
| 6754-71-1350 | 82 | 6 |
| 6754-71-1991 | 92 | 12 |
| 6754-71-3110 | 82 | 7 |
| 6754-71-3130 | 82 | 8 |
| 6754-71-5130 | 85 | 16 |
| 6754-71-5140 | 85 | 17 |
| 6754-71-5150 | 85 | 9 |
| 6754-71-5210 | 92 | 8 |
| 6754-71-5220 | 92 | 9 |
| 6754-71-5230 | 92 | 10 |
| 6754-71-5240 | 92 | 11 |
| 6754-71-5340 | 88 | 1 |
| 6754-71-5350 | 82 | 3 |
| | 88 | 2 |
| 6754-71-5410 | 85 | 1 |
| 6754-71-5420 | 85 | 4 |
| 6754-71-5430 | 85 | 6 |
| 6754-71-5450 | 85 | 10 |
| 6754-71-5510 | 92 | |
| 6754-71-5530 | 92 | 2 |
| 6754-71-5540 | 92 | 3 |
| 6754-71-6301 | 86 | |
| 6754-71-6340 | 86 | 4 |
| 6754-71-7200 | 93 | 1 |
| | 140 | 1 |
| 6754-71-7402 | 93 | |
| | 140 | |
| | 105 | |
| 6754-71-9710 | 90 | 1 |
| 6754-71-9720 | 37 | 11 |
| 6754-71-9730 | 38 | 12 |
| 6754-71-9740 | 38 | 11 |
| 6754-71-9910 | 88 | 3 |
| 6754-71-9920 | 88 | 4 |
| 6754-72-1012 | 82 | |
| 6754-72-1210 | 92 | 6 |
| 6754-72-1220 | 92 | 5 |
| 6754-81-5110 | 44 | 1 |
| 6754-81-6110 | 114 | |
| 6754-81-6120 | 114 | 1 |
| 6754-81-6130 | 114 | 7 |
| 6754-81-6140 | 115 | 1 |
| 6754-81-6150 | 115 | 9 |
| 6754-81-6810 | 116 | 1 |
| 6754-81-7300 | 45 | |
| 6754-81-8090 | 49 | |
| 6754-81-8410 | 52 | 3 |
| 6754-81-8420 | 54 | 4 |
| 6754-81-8430 | 54 | 7 |
| 6754-81-8440 | 54 | 12 |
| | 115 | 12 |
| 6754-81-8710 | 49 | 6 |
| 6754-81-9160 | 54 | 6 |
| 6754-81-9190 | 68 | 6 |
| 6754-81-9220 | 112 | 2 |
| 6754-81-9230 | 112 | 3 |
| 6754-81-9270 | 111 | 17 |
| 6754-81-9280 | 111 | 14 |
| 6754-81-9330 | 112 | 8 |
| 6754-81-9340 | 111 | 12 |
| 6754-81-9390 | 111 | 18 |
| 6754-81-9440 | 112 | 4 |
| 6754-81-9450 | 112 | 1 |
| 700-11-31980 | 491 | 26 |
| | 493 | 26 |
| | 498 | 30 |
| | 509 | 24 |
| 700-22-11410 | 181 | 2 |
| | 183 | 8 |
| | 203 | 2 |
| | 205 | 8 |
| | 225 | 2 |
| | 226 | 8 |
| | 342 | 18 |
| | 372 | 19 |
| 700-80-64220 | 181 | 3 |
| | 183 | 7 |
| | 203 | 3 |
| | 205 | 7 |
| | 225 | 3 |
| | 226 | 7 |
| 700-93-11320 | 178 | 4 |
| | 178 | 8 |
| | 178 | 12 |
| | 178 | 16 |
| | 178 | 20 |
| | 178 | 24 |
| | 178 | 28 |
| | 178 | 32 |
| | 199 | 4 |
| | 199 | 8 |
| | 199 | 12 |
| | 199 | 16 |
| | 199 | 20 |
| | 199 | 24 |
| | 199 | 28 |
| | 200 | 32 |
| | 214 | 2 |
| | 229 | 2 |
| | 231 | 2 |
| | 435 | 18 |
| | 439 | 18 |
| 701-20-61230 | 191 | 24 |
| | 217 | 24 |
| | 220 | 24 |
| | 233 | 24 |
| 702-15-71130 | 420 | 17 |
| | 425 | 17 |
| 702-15-71140 | 420 | 18 |
| | 425 | 18 |
| 702-15-77000 | 420 | |
| | 425 | |
| 702-16-03530 | 351 | |
| | 357 | |
| 702-16-04250 | 341 | |
| | 342 | |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 702-16-04290 | 372 | |
| 702-16-51140 | 341 | 3 |
| | 351 | 5 |
| | 357 | 5 |
| | 372 | 3 |
| 702-16-51240 | 351 | 17 |
| | 357 | 17 |
| 702-16-51270 | 372 | 8 |
| 702-16-53140 | 341 | 5 |
| | 351 | 7 |
| | 357 | 7 |
| 702-16-53170 | 341 | 7 |
| | 351 | 10 |
| | 357 | 10 |
| | 372 | 7 |
| 702-16-53420 | 341 | 4 |
| | 351 | 6 |
| | 357 | 6 |
| 702-16-53470 | 351 | 8 |
| | 357 | 8 |
| 702-16-53590 | 351 | 9 |
| | 357 | 9 |
| 702-16-53920 | 176 | 13 |
| | 177 | 14 |
| | 185 | 27 |
| | 197 | 13 |
| | 198 | 14 |
| | 207 | 27 |
| | 222 | 14 |
| | 260 | 4 |
| 702-16-54420 | 341 | 6 |
| 702-16-54550 | 372 | 4 |
| 702-16-54560 | 372 | 6 |
| 702-16-54571 | 372 | 5 |
| 702-16-54580 | 372 | 9 |
| 702-16-54590 | 372 | 10 |
| 702-16-54641 | 372 | 14 |
| 702-16-54650 | 372 | 17 |
| 702-16-54660 | 372 | 16 |
| 702-16-55940 | 342 | 6 |
| 702-16-55950 | 342 | 7 |
| 702-16-57440 | 342 | 11 |
| 702-16-57450 | 342 | 12 |
| 702-16-71131 | 351 | 14 |
| | 357 | 14 |
| 702-16-71141 | 351 | 15 |
| | 357 | 15 |
| 702-16-71150 | 341 | 8 |
| | 351 | 11 |
| | 357 | 11 |
| 702-16-71160 | 341 | 9 |
| | 351 | 12 |
| | 357 | 12 |
| 702-16-71280 | 351 | 13 |
| | 357 | 13 |
| 702-16-71361 | 351 | 18 |
| | 357 | 18 |
| 702-16-73630 | 341 | 10 |
| 702-21-01910 | 262 | |
| 702-21-11930 | 262 | 3 |
| 702-21-11940 | 262 | 4 |
| 702-21-53120 | 187 | 4 |
| | 209 | 4 |
| 702-21-54910 | 185 | 6 |
| | 207 | 6 |
| | 245 | 3 |
| | 245 | 8 |
| | 245 | 13 |
| 702-21-55420 | 187 | 1 |
| | 209 | 1 |
| 702-21-55440 | 187 | 3 |
| | 209 | 3 |
| 702-21-55460 | 187 | 12 |
| | 209 | 12 |
| 702-21-55520 | 187 | 2 |
| | 209 | 2 |
| 702-21-55620 | 185 | 32 |
| | 187 | 8 |
| | 208 | 32 |
| | 209 | 8 |
| 702-21-55710 | 185 | 34 |
| | 208 | 34 |
| 702-21-55720 | 185 | 35 |
| | 208 | 35 |
| 702-21-55760 | 179 | 12 |
| | 201 | 12 |
| | 223 | 12 |
| 702-21-57400 | 245 | 1 |
| | 245 | 6 |
| | 245 | 11 |
| 702-21-60500 | 185 | 4 |
| | 207 | 4 |
| 702-73-02112 | 435 | 12 |
| | 439 | 12 |
| 702-75-01310 | 420 | |
| | 425 | |
| 703-08-33631 | 428 | |
| 703-08-93170 | 428 | 8 |
| 703-08-93771 | 428 | 12 |
| 703-08-94510 | 428 | 7 |
| 703-08-95620 | 428 | 2 |
| 703-08-95770 | 428 | 13 |
| 703-08-98930 | 428 | 5 |
| 706-75-42370 | 418 | 15 |
| | 423 | 15 |
| 706-75-42880 | 419 | 2 |
| | 424 | 2 |
| 706-75-43750 | 419 | 12 |
| | 424 | 12 |
| 706-75-92310 | 419 | 22 |
| | 424 | 22 |
| 706-76-40890 | 419 | 4 |
| | 424 | 4 |
| 706-76-71390 | 266 | 45 |
| 706-7E-11280 | 419 | 7 |
| | 424 | 7 |
| 706-7G-01140 | 423 | |
| 706-7G-01170 | 418 | |
| | 419 | |
| | 420 | |
| | 423 | |
| | 424 | |
| | 425 | |
| 706-7G-03110 | 423 | |
| 706-7G-03130 | 418 | |
| | 419 | |
| | 423 | |
| | 424 | |
| 706-7G-05010 | 419 | |
| | 424 | |
| 706-7G-11291 | 436 | 5 |
| | 440 | 5 |
| 706-7G-40110 | 418 | 3 |
| | 423 | 3 |
| 706-7G-41130 | 419 | 14 |
| | 424 | 14 |
| 706-7G-41140 | 419 | 15 |
| | 424 | 15 |
| 706-7G-41240 | 418 | 1 |
| | 423 | 1 |
| 706-7G-41310 | 419 | 10 |
| | 424 | 10 |
| 706-7G-41320 | 419 | 13 |
| | 424 | 13 |
| 706-7G-41410 | 419 | 18 |
| | 424 | 18 |
| 706-7G-41510 | 419 | 5 |
| | 424 | 5 |
| 706-7G-41630 | 419 | 1 |
| | 424 | 1 |
| 706-7G-41660 | 419 | 3 |
| | 424 | 3 |
| 706-7G-41720 | 419 | 11 |
| | 424 | 11 |
| 706-7G-41910 | 419 | 8 |
| | 424 | 8 |
| 706-7G-71160 | 418 | 2 |
| | 423 | 2 |
| 706-7G-71560 | 418 | 12 |
| | 423 | 12 |
| 706-7G-71630 | 418 | 13 |
| | 423 | 13 |
| 706-7G-71710 | 418 | 11 |
| | 423 | 11 |
| 706-7G-91120 | 419 | 21 |
| | 424 | 21 |
| 706-7G-91360 | 419 | 24 |
| | 424 | 24 |
| 706-7G-91441 | 419 | 19 |
| | 424 | 19 |
| 706-7G-91450 | 419 | 20 |
| | 424 | 20 |
| 707-01-0J180 | 487 | 2 |
| | 489 | 4 |
| 707-01-0J250 | 496 | |
| 707-01-0J280 | 506 | |
| 707-01-0K680 | 491 | |
| | 493 | |
| 707-01-0K700 | 498 | |
| 707-01-0K710 | 509 | |
| 707-13-11740 | 506 | 1 |
| | 509 | 1 |
| 707-13-12380 | 487 | 1 |
| | 489 | 1 |
| 707-13-12630 | 491 | 1 |
| | 493 | 1 |
| 707-13-13870 | 496 | 1 |
| | 498 | 1 |
| 707-27-11870 | 506 | 9 |
| | 509 | 9 |
| 707-27-12650 | 487 | 11 |
| | 489 | 11 |
| | 491 | 11 |
| | 493 | 11 |
| 707-27-13010 | 537 | 3 |
| 707-27-13850 | 496 | 15 |
| | 498 | 15 |
| 707-35-90360 | 506 | 26 |
| | 509 | 31 |
| | 578 | |
| | 579 | |
| 707-35-90930 | 487 | 27 |
| | 489 | 27 |
| | 491 | 32 |
| | 493 | 32 |
| | 578 | |
| | 578 | |
| | 579 | |
| 707-35-90960 | 496 | 32 |
| | 498 | 37 |
| | 578 | |
| | 578 | |
| 707-35-91150 | 506 | 15 |
| | 509 | 14 |
| | 578 | |
| | 579 | |
| 707-35-91220 | 487 | 8 |
| | 487 | 17 |
| | 489 | 8 |
| | 489 | 17 |
| | 491 | 8 |
| | 491 | 16 |
| | 493 | 8 |
| | 493 | 16 |
| | 578 | |
| | 578 | |
| 707-35-91250 | 579 | |
| 707-35-91370 | 496 | 9 |
| | 496 | 21 |
| | 498 | 9 |
| | 498 | 20 |
| | 578 | |
| | 578 | |
| 707-36-11880 | 506 | 20 |
| | 509 | 25 |
| 707-36-12851 | 487 | 22 |
| | 489 | 22 |
| | 491 | 27 |
| | 493 | 27 |
| 707-36-13771 | 496 | 26 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 498 | 31 |
| 707-39-11530 | 506 | 22 |
| | 509 | 27 |
| | 578 | |
| | 579 | |
| 707-39-12140 | 487 | 24 |
| | 489 | 24 |
| | 491 | 29 |
| | 493 | 29 |
| | 578 | |
| | 578 | |
| 707-39-12560 | 579 | |
| 707-39-13530 | 496 | 28 |
| | 498 | 33 |
| | 578 | |
| | 578 | |
| 707-41-10120 | 537 | 15 |
| 707-41-11840 | 496 | 24 |
| | 498 | 25 |
| 707-44-11250 | 506 | 21 |
| | 578 | |
| 707-44-11280 | 509 | 26 |
| | 579 | |
| 707-44-11920 | 506 | 23 |
| | 509 | 28 |
| 707-44-12150 | 487 | 23 |
| | 489 | 23 |
| | 578 | |
| 707-44-12180 | 491 | 28 |
| | 493 | 28 |
| | 578 | |
| 707-44-12250 | 579 | |
| 707-44-12911 | 487 | 25 |
| | 489 | 25 |
| | 491 | 30 |
| | 493 | 30 |
| 707-44-13180 | 537 | 13 |
| 707-44-13250 | 496 | 27 |
| | 578 | |
| 707-44-13280 | 498 | 32 |

| Part Number | Page | Index |
|---|---|---|
| | 578 | |
| 707-44-13920 | 496 | 29 |
| | 498 | 34 |
| 707-51-80030 | 506 | 12 |
| | 578 | |
| 707-51-80211 | 537 | 8 |
| 707-51-80650 | 506 | 13 |
| | 509 | 12 |
| | 579 | |
| | 579 | |
| 707-51-80730 | 509 | 11 |
| | 579 | |
| 707-51-85030 | 487 | 14 |
| | 489 | 14 |
| | 578 | |
| | 579 | |
| 707-51-85650 | 487 | 15 |
| | 489 | 15 |
| | 491 | 14 |
| | 493 | 14 |
| | 578 | |
| | 578 | |
| | 578 | |
| 707-51-85730 | 491 | 13 |
| | 493 | 13 |
| | 578 | |
| 707-51-95030 | 496 | 19 |
| | 578 | |
| 707-51-95650 | 496 | 20 |
| | 498 | 19 |
| | 578 | |
| | 578 | |
| | 578 | |
| 707-51-95730 | 498 | 18 |
| | 578 | |
| 707-52-15530 | 537 | 7 |
| 707-52-90561 | 506 | 14 |
| | 509 | 13 |
| 707-52-90611 | 487 | 16 |
| | 489 | 16 |
| | 491 | 15 |

| Part Number | Page | Index |
|---|---|---|
| | 493 | 15 |
| 707-52-90721 | 496 | 18 |
| | 498 | 17 |
| 707-56-70540 | 445 | 13 |
| | 446 | 13 |
| 707-56-80651 | 509 | 22 |
| | 579 | |
| 707-56-85510 | 487 | 12 |
| | 489 | 12 |
| | 491 | 12 |
| | 493 | 12 |
| | 578 | |
| | 578 | |
| | 578 | |
| 707-56-85650 | 491 | 24 |
| | 493 | 24 |
| | 578 | |
| 707-56-95510 | 496 | 16 |
| | 498 | 16 |
| | 578 | |
| | 578 | |
| 707-56-95650 | 498 | 28 |
| | 578 | |
| 707-58-80870 | 506 | 2 |
| 707-58-80910 | 509 | 2 |
| 707-58-85430 | 487 | 2 |
| | 489 | 2 |
| 707-58-85470 | 491 | 2 |
| | 493 | 2 |
| 707-58-95270 | 496 | 2 |
| 707-58-95320 | 498 | 2 |
| 707-71-34660 | 487 | 7 |
| | 489 | 7 |
| | 491 | 7 |
| | 493 | 7 |
| 707-71-34980 | 496 | 8 |
| | 498 | 8 |
| 707-71-70800 | 487 | 10 |
| | 489 | 10 |
| | 491 | 10 |

| Part Number | Page | Index |
|---|---|---|
| | 493 | 10 |
| 707-71-71010 | 496 | 11 |
| | 498 | 11 |
| 707-71-80270 | 496 | 12 |
| | 498 | 12 |
| 707-71-91270 | 496 | 14 |
| | 498 | 14 |
| 707-75-80040 | 506 | 19 |
| | 509 | 17 |
| 707-75-85110 | 487 | 21 |
| | 489 | 21 |
| | 491 | 19 |
| | 493 | 19 |
| 707-75-95030 | 496 | 25 |
| | 498 | 23 |
| 707-76-70110 | 506 | 3 |
| | 509 | 3 |
| 707-76-70120 | 506 | 6 |
| | 509 | 6 |
| 707-76-80010 | 487 | 5 |
| | 489 | 5 |
| | 491 | 5 |
| | 493 | 5 |
| | 496 | 3 |
| | 496 | 5 |
| | 498 | 3 |
| | 498 | 5 |
| 707-83-13010 | 496 | 33 |
| | 498 | 38 |
| 707-86-67720 | 487 | 29 |
| 707-86-67730 | 489 | 29 |
| 707-86-67740 | 496 | 37 |
| | 499 | 42 |
| 707-86-67750 | 506 | 27 |
| | 509 | 32 |
| 707-86-68180 | 491 | 34 |
| 707-86-68190 | 493 | 34 |
| 707-87-14070 | 496 | 35 |
| | 499 | 40 |
| 707-88-04910 | 491 | 23 |

| Part Number | Page | Index |
|---|---|---|
| | 493 | 23 |
| 707-88-04940 | 498 | 27 |
| 707-88-04970 | 509 | 23 |
| 707-88-04980 | 509 | 20 |
| 707-88-05890 | 491 | 25 |
| | 493 | 25 |
| 707-88-05900 | 491 | 22 |
| | 493 | 22 |
| 707-88-05910 | 498 | 29 |
| 707-88-05920 | 498 | 26 |
| 707-88-21261 | 497 | 46 |
| | 499 | 51 |
| 707-88-21271 | 510 | 39 |
| 707-88-21620 | 487 | 36 |
| | 489 | 36 |
| | 492 | 41 |
| | 494 | 41 |
| 707-88-22530 | 496 | 38 |
| | 499 | 43 |
| 707-88-22570 | 506 | 28 |
| | 509 | 33 |
| 707-88-28010 | 487 | 31 |
| | 491 | 36 |
| 707-88-28020 | 489 | 31 |
| | 493 | 36 |
| 707-88-28030 | 497 | 44 |
| | 499 | 49 |
| 707-88-33030 | 429 | 3 |
| 707-88-36881 | 509 | 21 |
| 707-98-39610 | 578 | K10 |
| 707-98-46280 | 578 | K06 |
| 707-98-48610 | 578 | K08 |
| 707-99-38750 | 579 | K11 |
| 707-99-46410 | 578 | K07 |
| 707-99-47130 | 579 | K13 |
| 707-99-50730 | 578 | K09 |
| 708-1L-29340 | 236 | 12 |
| 708-1S-15390 | 545 | 6 |
| 708-21-12541 | 418 | 9 |
| | 423 | 9 |

| Part Number | Page | Index |
|---|---|---|
| 708-25-12790 | 237 | 4 |
| | 241 | 4 |
| 708-25-52861 | 237 | 5 |
| 708-2E-05040 | 237 | 3 |
| | 241 | 3 |
| 708-2L-01500 | 235 | |
| | 236 | |
| | 237 | |
| | 238 | |
| | 239 | |
| | 240 | |
| | 241 | |
| | 242 | |
| | 243 | |
| 708-2L-06440 | 235 | |
| 708-2L-06450 | 236 | |
| 708-2L-06460 | 240 | |
| 708-2L-06470 | 237 | |
| 708-2L-06480 | 241 | |
| 708-2L-06630 | 237 | |
| | 241 | |
| 708-2L-06650 | 238 | |
| | 242 | |
| 708-2L-06660 | 238 | |
| | 242 | |
| 708-2L-06670 | 239 | |
| | 243 | |
| 708-2L-06780 | 244 | |
| 708-2L-22160 | 237 | 6 |
| 708-2L-23131 | 237 | 12 |
| | 241 | 9 |
| 708-2L-23351 | 237 | 15 |
| | 241 | 12 |
| 708-2L-23360 | 237 | 16 |
| | 241 | 13 |
| 708-2L-24680 | 244 | 2 |
| 708-2L-25480 | 236 | 7 |
| 708-2L-28540 | 244 | 4 |
| 708-2L-32150 | 237 | 2 |
| | 241 | 2 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 708-2L-32160 | 237 | 1 |
| 708-2L-32170 | 241 | 1 |
| 708-2L-32180 | 243 | 9 |
| 708-2L-32190 | 243 | 10 |
| 708-2L-32260 | 236 | 3 |
| 708-2L-33160 | 237 | 13 |
| | 241 | 10 |
| 708-2L-33350 | 237 | 17 |
| | 241 | 14 |
| | 436 | 16 |
| | 440 | 16 |
| 708-2L-33430 | 237 | 18 |
| | 241 | 15 |
| 708-2L-34180 | 238 | 1 |
| | 241 | 1 |
| 708-2L-34310 | 238 | 25 |
| | 242 | 25 |
| 708-2L-34320 | 239 | 5 |
| | 243 | 5 |
| 708-2L-34330 | 238 | 17 |
| | 242 | |
| 708-2L-34340 | 239 | 1 |
| | 243 | 1 |
| 708-2L-35210 | 238 | 19 |
| | 239 | 3 |
| | 242 | 19 |
| | 243 | 3 |
| 708-2L-35240 | 238 | 13 |
| | 242 | 13 |
| 708-2L-35250 | 238 | 16 |
| | 242 | 16 |
| 708-2L-35260 | 238 | 5 |
| | 241 | 5 |
| 708-2L-35270 | 238 | 21 |
| | 242 | 21 |
| 708-2L-35280 | 238 | 9 |
| | 241 | 9 |
| 708-2L-35290 | 238 | 27 |
| | 239 | 4 |
| | 242 | 27 |
| | 243 | 4 |
| 708-2L-35311 | 244 | 1 |
| 708-2L-35331 | 244 | 6 |
| 708-2L-35341 | 244 | 8 |
| 708-2L-35351 | 244 | 9 |
| 708-2L-35360 | 244 | 5 |
| 708-2L-35430 | 244 | 3 |
| 708-2L-35560 | 244 | 7 |
| 708-2L-35630 | 238 | 11 |
| | 242 | 11 |
| 708-2L-35641 | 238 | 12 |
| | 242 | |
| 708-2L-35650 | 238 | 15 |
| | 242 | 15 |
| 708-2L-35670 | 238 | 28 |
| | 242 | 28 |
| 708-2L-35680 | 238 | 4 |
| | 241 | 4 |
| 708-2L-35690 | 238 | 8 |
| | 241 | 8 |
| 708-2L-35710 | 238 | 20 |
| | 242 | 20 |
| 708-2L-35730 | 238 | 14 |
| | 242 | 14 |
| 708-2L-35750 | 238 | 24 |
| | 239 | 7 |
| | 242 | 24 |
| | 243 | 7 |
| 708-2L-35760 | 238 | 6 |
| | 241 | 6 |
| 708-2L-35770 | 238 | 7 |
| | 241 | 7 |
| 708-2L-35860 | 238 | 10 |
| | 242 | 10 |
| 708-2L-35941 | 245 | 16 |
| 708-7L-05010 | 436 | 4 |
| | 440 | 4 |
| 708-7L-12140 | 436 | 3 |
| | 440 | 3 |
| 708-7L-13140 | 237 | 14 |
| | 241 | 11 |
| | 436 | 12 |
| | 440 | 12 |
| 708-7T-16460 | 173 | 11 |
| | 194 | 11 |
| | 213 | 5 |
| | 228 | 5 |
| | 230 | 5 |
| 708-8E-16150 | 235 | 7 |
| | 236 | 10 |
| | 240 | 8 |
| 708-8E-16160 | 179 | 16 |
| | 179 | 22 |
| | 187 | 10 |
| | 201 | 16 |
| | 201 | 22 |
| | 209 | 10 |
| | 223 | 16 |
| | 223 | 22 |
| 708-8E-16180 | 435 | 25 |
| | 439 | 25 |
| 708-8E-16250 | 179 | 6 |
| | 201 | 6 |
| | 2230 | 6 |
| 708-8F-00250 | 435 | |
| | 436 | |
| | 438 | 39 |
| | 439 | |
| | 440 | |
| | 442 | 39 |
| 708-8F-04270 | 435 | |
| | 439 | |
| 708-8F-04681 | 435 | |
| | 439 | |
| 708-8F-12151 | 436 | 2 |
| | 440 | 2 |
| 708-8F-12230 | 436 | 6 |
| | 440 | 6 |
| 708-8F-31210 | 435 | 33 |
| | 439 | 33 |
| 708-8F-31610 | 419 | 23 |
| | 424 | 23 |
| | 435 | 30 |
| | 439 | 30 |
| 708-8F-31620 | 418 | 10 |
| | 423 | 10 |
| 708-8F-31650 | 435 | 26 |
| | 439 | 26 |
| 708-8F-32121 | 436 | 1 |
| | 440 | 1 |
| 708-8F-33160 | 436 | 13 |
| | 440 | 13 |
| 708-8F-33310 | 436 | 17 |
| | 440 | 17 |
| 708-8F-33350 | 436 | 15 |
| | 440 | 15 |
| 708-8F-33360 | 436 | 11 |
| | 440 | 11 |
| 708-8F-33481 | 436 | 18 |
| | 440 | 18 |
| 708-8F-33710 | 436 | 19 |
| | 440 | 19 |
| 708-8F-34110 | 435 | 23 |
| | 439 | 23 |
| 708-8F-34120 | 435 | 21 |
| | 439 | 21 |
| 708-8F-34141 | 436 | 20 |
| | 440 | 20 |
| 708-8F-34150 | 436 | 21 |
| | 440 | 21 |
| 708-8F-34220 | 7 9 6 | 8 |
| | 439 | 8 |
| 708-8F-35120 | 436 | 24 |
| | 440 | 24 |
| 708-8F-35140 | 436 | 25 |
| | 440 | 25 |
| 708-8F-35150 | 436 | 30 |
| | 440 | 30 |
| 708-8F-35160 | 436 | 26 |
| | 440 | 26 |
| 708-8F-35170 | 436 | 27 |
| | 440 | 27 |
| 708-8F-35180 | 436 | 28 |
| | 440 | 28 |
| 708-8F-35190 | 436 | 29 |
| | 440 | 29 |
| 708-8F-35220 | 436 | 22 |
| | 440 | 22 |
| 708-8F-35230 | 436 | 23 |
| | 440 | 23 |
| 708-8F-36311 | 435 | 16 |
| | 439 | 16 |
| 708-8F-36611 | 435 | 13 |
| | 439 | 13 |
| 708-8H-11530 | 179 | 8 |
| | 182 | 4 |
| | 201 | 8 |
| | 204 | 4 |
| | 223 | 8 |
| | 435 | 9 |
| | 439 | 9 |
| 708-8H-36121 | 435 | 15 |
| | 439 | 15 |
| 708-8K-15190 | 418 | 4 |
| | 423 | 4 |
| 709-10-91240 | 262 | 5 |
| 709-25-11361 | 418 | 6 |
| | 423 | 6 |
| 709-25-11390 | 182 | 18 |
| | 183 | 9 |
| | 184 | 2 |
| | 184 | 6 |
| | 204 | 18 |
| | 205 | 9 |
| | 206 | 2 |
| | 206 | 6 |
| | 215 | 7 |
| | 226 | 9 |
| | 232 | 7 |
| 709-25-11640 | 418 | 7 |
| | 423 | 7 |
| 709-25-11650 | 418 | 5 |
| | 423 | 5 |
| 709-70-71610 | 420 | 16 |
| | 425 | 16 |
| 720-68-19610 | 237 | 10 |
| | 241 | 7 |
| 722-10-91130 | 435 | 22 |
| | 439 | 22 |
| 723-11-15110 | 342 | 13 |
| 723-11-18150 | 177 | 9 |
| | 198 | 9 |
| | 222 | 9 |
| 723-11-18190 | 189 | 19 |
| | 190 | 21 |
| | 211 | 19 |
| | 216 | 15 |
| | 259 | 19 |
| 723-11-19130 | 177 | 2 |
| | 198 | 2 |
| | 213 | 13 |
| | 222 | 2 |
| | 228 | 13 |
| | 230 | 13 |
| 723-11-19960 | 185 | 5 |
| | 207 | 5 |
| | 245 | 2 |
| | 245 | 7 |
| | 245 | 12 |
| 723-26-14240 | 545 | 8 |
| 723-40-56350 | 180 | 3 |
| | 202 | 3 |
| | 224 | 3 |
| 723-40-57200 | 180 | 1 |
| | 202 | 1 |
| | 224 | 1 |
| 723-40-60101 | 182 | 15 |
| | 204 | 15 |
| 723-40-66300 | 215 | |
| | 232 | |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| 723-40-66601 | 182 | |
| | 204 | |
| 723-40-66701 | 182 | |
| | 204 | |
| 723-40-71330 | 185 | 9 |
| | 207 | 9 |
| 723-40-71340 | 185 | 10 |
| | 207 | 10 |
| 723-40-71350 | 185 | 11 |
| | 207 | 11 |
| 723-40-71390 | 185 | 24 |
| | 207 | 24 |
| 723-40-71430 | 187 | 11 |
| | 209 | 11 |
| 723-40-71850 | 185 | 21 |
| | 207 | 21 |
| 723-40-71870 | 185 | 13 |
| | 207 | 13 |
| 723-40-71900 | 185 | |
| | 2 | 478 |
| 723-40-72100 | 185 | |
| | 187 | |
| | 207 | |
| | 209 | |
| 723-40-72800 | 185 | 3 |
| | 207 | 3 |
| 723-40-82140 | 189 | 6 |
| | 211 | 6 |
| 723-40-82150 | 189 | 7 |
| | 211 | 7 |
| 723-40-82210 | 189 | 4 |
| | 211 | 4 |
| 723-40-82220 | 179 | 18 |
| | 189 | 5 |
| | 190 | 11 |
| | 201 | 18 |
| | 211 | 5 |
| | 216 | 5 |
| | 223 | 18 |
| 723-40-82290 | 189 | 22 |
| | 211 | 22 |
| 723-40-82501 | 189 | |
| | 211 | |
| 723-40-82601 | 259 | |
| 723-40-84330 | 190 | 10 |
| | 216 | 4 |
| 723-40-84340 | 190 | 12 |
| | 216 | 6 |
| 723-40-84350 | 190 | 13 |
| | 216 | 7 |
| 723-40-84382 | 190 | 24 |
| | 216 | 18 |
| 723-40-84410 | 190 | 1 |
| | 212 | 1 |
| | 227 | 1 |
| 723-40-84420 | 189 | 9 |
| | 190 | 2 |
| | 211 | 9 |
| | 212 | 2 |
| | 227 | 2 |
| | 259 | 9 |
| 723-40-84430 | 189 | 10 |
| | 190 | 3 |
| | 211 | 10 |
| | 212 | 3 |
| | 227 | 3 |
| | 259 | 10 |
| 723-40-84440 | 189 | 11 |
| | 190 | 4 |
| | 211 | 11 |
| | 212 | 4 |
| | 227 | 4 |
| 723-40-84501 | 190 | |
| | 216 | |
| 723-40-84601 | 190 | |
| | 212 | |
| | 227 | |
| 723-40-85100 | 184 | 5 |
| | 206 | 5 |
| 723-40-87170 | 188 | 8 |
| | 188 | 16 |
| | 210 | 8 |
| | 210 | 16 |
| 723-40-87240 | 188 | 2 |
| | 210 | 2 |
| 723-40-87250 | 188 | 7 |
| | 210 | 7 |
| 723-40-87260 | 188 | 3 |
| | 210 | 3 |
| 723-40-87510 | 188 | 1 |
| | 210 | 1 |
| 723-40-87520 | 188 | 12 |
| | 210 | 12 |
| 723-40-87540 | 188 | 13 |
| | 210 | 13 |
| 723-40-87601 | 188 | |
| | 210 | |
| 723-40-91200 | 184 | 1 |
| | 206 | 1 |
| 723-40-91300 | 215 | 6 |
| | 232 | 6 |
| 723-40-91500 | 183 | 6 |
| | 205 | 6 |
| | 226 | 6 |
| 723-40-93600 | 181 | 1 |
| | 203 | 1 |
| | 225 | 1 |
| 723-46-00750 | 179 | |
| | 201 | |
| | 223 | |
| 723-46-00790 | 179 | |
| | 201 | |
| | 223 | |
| 723-46-14110 | 173 | 16 |
| | 194 | 16 |
| | 213 | 7 |
| | 228 | 7 |
| | 230 | 7 |
| 723-46-14131 | 173 | 19 |
| | 194 | 19 |
| 723-46-14140 | 179 | 21 |
| | 201 | 21 |
| | 223 | 21 |
| 723-46-14150 | 177 | 18 |
| | 198 | 18 |
| | 222 | 18 |
| 723-46-14280 | 173 | 17 |
| | 194 | 17 |
| 723-46-14290 | 173 | 18 |
| | 194 | 18 |
| 723-46-15111 | 174 | 16 |
| | 175 | 10 |
| | 176 | 1 |
| | 185 | 7 |
| | 195 | 16 |
| | 196 | 10 |
| | 197 | 1 |
| | 207 | 7 |
| | 213 | 8 |
| | 228 | 8 |
| | 230 | 8 |
| 723-46-15120 | 173 | 12 |
| | 194 | 12 |
| | 213 | 6 |
| | 228 | 6 |
| | 230 | 6 |
| 723-46-15130 | 173 | 7 |
| | 194 | 7 |
| | 213 | 3 |
| | 228 | 3 |
| | 230 | 3 |
| 723-46-15140 | 173 | 8 |
| | 194 | 8 |
| 723-46-15150 | 177 | 17 |
| | 198 | 17 |
| | 222 | 17 |
| 723-46-15190 | 179 | 20 |
| | 201 | 20 |
| | 223 | 20 |
| 723-46-15220 | 223 | 26 |
| 723-46-15630 | 174 | 4 |
| | 174 | 13 |
| | 175 | 6 |
| | 176 | 5 |
| | 176 | 10 |
| | 195 | 4 |
| | 195 | 13 |
| | 196 | 6 |
| | 197 | 5 |
| | 197 | 10 |
| 723-46-15650 | 173 | 9 |
| | 194 | 9 |
| 723-46-15690 | 173 | 13 |
| | 194 | 13 |
| 723-46-15880 | 173 | 15 |
| | 194 | 15 |
| 723-46-15950 | 173 | 14 |
| | 194 | 14 |
| 723-46-17320 | 174 | 8 |
| | 175 | 4 |
| | 195 | 8 |
| | 196 | 4 |
| 723-46-17330 | 174 | 9 |
| | 175 | 5 |
| | 195 | 9 |
| | 196 | 5 |
| 723-46-17340 | 174 | 5 |
| | 175 | 7 |
| | 195 | 5 |
| | 196 | 7 |
| 723-46-17350 | 176 | 15 |
| | 197 | 15 |
| 723-46-17510 | 177 | 7 |
| | 198 | 7 |
| | 213 | 15 |
| | 222 | 7 |
| | 228 | 15 |
| | 230 | 15 |
| 723-46-17520 | 177 | 3 |
| | 198 | 3 |
| | 213 | 16 |
| | 222 | 3 |
| | 228 | 16 |
| | 230 | 16 |
| 723-46-17530 | 177 | 8 |
| | 198 | 8 |
| | 213 | 17 |
| | 222 | 8 |
| | 228 | 17 |
| | 230 | 17 |
| 723-46-17550 | 179 | 19 |
| | 201 | 19 |
| | 223 | 19 |
| 723-46-17600 | 179 | |
| | 201 | |
| | 223 | |
| 723-46-17610 | 179 | 10 |
| | 201 | 10 |
| | 223 | 10 |
| 723-46-17640 | 179 | 11 |
| | 201 | 11 |
| | 223 | 11 |
| 723-46-17650 | 177 | 16 |
| | 198 | 16 |
| | 222 | 16 |
| 723-46-17680 | 187 | 23 |
| | 209 | 23 |
| 723-46-17701 | 183 | |
| | 205 | |
| | 226 | |
| 723-46-17711 | 183 | 1 |
| | 205 | 1 |
| | 226 | 1 |
| 723-46-18300 | 174 | |
| | 195 | |
| 723-46-18500 | 176 | |
| | 197 | |
| 723-46-18600 | 176 | |
| | 197 | |
| 723-46-18720 | 185 | 22 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| | 185 | 25 |
| | 207 | 22 |
| | 207 | 25 |
| 723-46-19100 | 174 | |
| | 195 | |
| 723-46-19200 | 175 | |
| | 196 | |
| 723-46-23103 | 173 | |
| | 174 | |
| | 175 | |
| | 176 | |
| | 177 | |
| | 178 | |
| | 179 | |
| | 180 | |
| | 181 | |
| | 182 | |
| | 183 | |
| | 184 | |
| | 185 | |
| | 187 | |
| | 188 | |
| | 189 | |
| | 190 | |
| 723-46-40100 | 178 | 3 |
| | 199 | 3 |
| 723-46-41100 | 178 | 11 |
| | 199 | 11 |
| 723-46-41190 | 178 | 2 |
| | 199 | 2 |
| 723-46-41210 | 178 | 1 |
| | 199 | 1 |
| 723-46-41950 | 178 | 5 |
| | 178 | 9 |
| | 178 | 13 |
| | 178 | 17 |
| | 178 | 21 |
| | 178 | 25 |
| | 178 | 29 |
| | 178 | 33 |
| | 199 | 5 |
| | 199 | 9 |
| | 199 | 13 |
| | 199 | 17 |
| | 199 | 21 |
| | 199 | 25 |
| | 200 | 29 |
| | 200 | 33 |
| | 214 | 3 |
| | 229 | 3 |
| | 231 | 3 |
| 723-46-42700 | 178 | 7 |
| | 199 | 7 |
| 723-46-43100 | 178 | 27 |
| | 199 | 27 |
| 723-46-43400 | 178 | 23 |
| | 199 | 23 |
| 723-46-45100 | 178 | 15 |
| | 199 | 15 |
| 723-46-45700 | 214 | 1 |
| | 229 | 1 |
| | 231 | 1 |
| 723-46-46101 | 178 | 31 |
| | 200 | 31 |
| 723-46-46300 | 178 | 19 |
| | 199 | 19 |
| 723-47-23103 | 194 | |
| | 194 | |
| | 195 | |
| | 195 | |
| | 196 | |
| | 196 | |
| | 197 | |
| | 197 | |
| | 198 | |
| | 199 | |
| | 199 | |
| | 201 | |
| | 202 | |
| | 203 | |
| | 204 | |
| | 204 | |
| | 205 | |
| | 206 | |
| | 206 | |
| | 207 | |
| | 207 | |
| | 209 | |
| | 209 | |
| | 210 | |
| | 210 | |
| | 211 | |
| | 211 | |
| | 212 | |
| | 213 | |
| | 214 | |
| | 215 | |
| | 216 | |
| | 216 | |
| 723-48-23102 | 194 | |
| | 195 | |
| | 196 | |
| | 197 | |
| | 199 | |
| | 204 | |
| | 206 | |
| | 207 | |
| | 209 | |
| | 210 | |
| | 211 | |
| | 216 | |
| | 222 | |
| | 223 | |
| | 224 | |
| | 225 | |
| | 226 | |
| | 227 | |
| | 228 | |
| | 229 | |
| | 230 | |
| | 231 | |
| | 232 | |
| 723-60-22230 | 180 | 5 |
| | 202 | 5 |
| | 224 | 5 |
| 723-90-61600 | 184 | 3 |
| | 206 | 3 |
| 723-90-76101 | 215 | 8 |
| | 232 | 8 |
| 7826-23-3011 | 336 | 8 |
| 7835-31-1009 | 329 | 1 |
| 7835-46-1007 | 335 | 3 |
| 7861-74-5100 | 335 | 11 |
| | 335 | 13 |
| | 335 | 15 |
| 7861-91-4220 | 68 | 2 |
| 7861-92-5810 | 138 | 7 |
| | 139 | 7 |
| 7861-93-1421 | 124 | 8 |
| | 125 | 8 |
| 7861-93-1811 | 193 | 6 |
| | 219 | 6 |
| 7861-93-1840 | 281 | 19 |
| 7861-93-3320 | 248 | 3 |
| 7861-94-2000 | 335 | 5 |
| 8A13-10-2100 | 328 | 23 |
| 8A13-10-2200 | 328 | 24 |
| 8A13-10-4300 | 328 | 21 |
| AS160122 | 296 | 9 |
| AS164899 | 296 | 13 |
| AS165989 | 296 | 19 |
| AS166011 | 296 | 14 |
| AS186833 | 296 | 8 |
| AS192161 | 296 | 7 |
| AS195367 | 296 | 1 |
| AS195369 | 296 | 2 |
| AS195370 | 296 | 3 |
| AS195372 | 296 | 4 |
| AS195373 | 296 | 5 |
| AS195374 | 296 | 6 |
| AS195376 | 296 | 10 |
| AS195377 | 296 | 11 |
| AS195381 | 296 | |
| AS195388 | 296 | 12 |
| AS195389 | 296 | 15 |
| AS195390 | 296 | 16 |
| AS195391 | 296 | 17 |
| AS195392 | 296 | 18 |
| AS195393 | 296 | 20 |
| DUMMY-KIP3058 | 263 | 15 |
| HM6400-0012 | 347 | 10 |
| HM6400-0013 | 347 | 11 |
| HM6400-0016 | 347 | 13 |
| HM6409-0071 | 347 | |
| HM6409-0072 | 347 | |
| HM6409-0075 | 347 | |
| HM6440-0128 | 347 | |
| HM6440-0129 | 347 | 12 |
| KD0-0275-06802 | 107 | 11 |
| KD0-0280-16022 | 107 | 15 |
| KD0-09201-0870 | 107 | 3 |
| KD0-09201-0880 | 107 | 8 |
| KD0-35100-0280 | 107 | 1 |
| KD0-35120-0450 | 107 | 16 |
| KD0-35200-0400 | 107 | 10 |
| KD0-35300-0160 | 107 | 4 |
| KD0-35411-0640 | 107 | 12 |
| KD0-35421-0140 | 107 | 13 |
| KD0-35700-0701 | 107 | |
| KD0-35710-0810 | 107 | 17 |
| KD0-35719-1850 | 107 | 24 |
| KD0-35730-0510 | 107 | 18 |
| KD0-35761-0200 | 107 | 25 |
| KD0-35923-0130 | 107 | 19 |
| KD0-35926-0070 | 107 | 5 |
| KD0-35926-0090 | 107 | 7 |
| KD0-35943-0140 | 107 | 20 |
| KD0-35943-0150 | 107 | 21 |
| KD0-35943-0160 | 107 | 22 |
| KD0-35943-0170 | 107 | 23 |
| KD0-35951-0060 | 107 | 6 |
| KD1-0335-16001 | 107 | 14 |
| KD1-33923-0790 | 107 | 2 |
| KD1-33926-0730 | 107 | 9 |
| ND017231-0700 | 363 | 28 |
| ND028062-0130 | 108 | 2 |
| | 110 | 29 |
| ND028062-5790 | 109 | 40 |
| | 111 | 43 |
| ND028063-0030 | 108 | 29 |
| | 110 | 28 |
| ND028065-0250 | 108 | 21 |
| | 110 | 20 |
| ND028099-3160 | 108 | 16 |
| ND028099-3270 | 108 | 7 |
| | 110 | 5 |
| ND028099-3570 | 108 | 3 |
| ND028099-5100 | 110 | 14 |
| ND028099-5620 | 108 | 15 |
| ND028100-2882 | 108 | 1 |
| ND028100-5410 | 110 | 1 |
| ND028200-1590 | 108 | 4 |
| ND028200-5250 | 110 | 2 |
| ND028300-6551 | 108 | |
| | 110 | |
| ND028300-6751 | 108 | 8 |
| | 110 | 6 |
| ND028306-0070 | 108 | 28 |
| | 110 | 27 |
| ND028327-0171 | 108 | 30 |
| | 110 | 35 |
| ND028371-1500 | 108 | 27 |
| ND028371-3200 | 111 | 38 |
| ND028371-3210 | 110 | 26 |
| ND028381-0071 | 108 | 12 |
| | 110 | 10 |
| ND028501-7711 | 110 | 23 |
| ND028501-8091 | 108 | 24 |
| ND028510-0880 | 110 | 21 |
| ND028510-5390 | 108 | 22 |

https://truckmanualshub.com/


| Part Number | Page | Index |
|---|---|---|
| ND028520-0011 | 110 | 22 |
| ND028530-1090 | 111 | 40 |
| ND028530-1100 | 111 | 41 |
| ND028901-0361 | 111 | 37 |
| ND028901-5190 | 109 | 42 |
| | 111 | 45 |
| ND053404-0240 | 108 | 18 |
| | 110 | 16 |
| ND053480-7560 | 108 | 20 |
| | 110 | 18 |
| ND053505-0290 | 108 | 19 |
| | 110 | 17 |
| ND053660-0443 | 110 | 15 |
| ND053660-7170 | 108 | 17 |
| ND063600-4580 | 363 | 35 |
| ND063800-0300 | 363 | 27 |
| ND077500-5650 | 363 | 36 |
| ND077500-5890 | 363 | 29 |
| ND077800-0750 | 363 | 33 |
| ND116140-0050 | 362 | 14 |
| ND116340-7350 | 363 | 38 |
| ND116576-3810 | 362 | 3 |
| ND116576-3820 | 362 | 4 |
| ND116576-3852 | 363 | 25 |
| ND116576-3862 | 363 | 26 |
| ND116650-6850 | 362 | 16 |
| ND116660-7570 | 362 | 15 |
| ND116662-7670 | 363 | 23 |
| ND116662-7681 | 363 | 24 |
| ND116662-8320 | 363 | 44 |
| ND116780-2481 | 363 | 17 |
| ND116780-2491 | 363 | 18 |
| ND116780-2501 | 363 | 19 |
| ND116780-2510 | 363 | 20 |
| ND116780-3130 | 363 | 22 |
| ND116780-3920 | 363 | 31 |
| ND116781-3000 | 363 | 21 |
| ND128099-5770 | 110 | 13 |
| ND128401-5621 | 110 | 11 |
| ND128950-0520 | 108 | |
| ND128961-0010 | 108 | 25 |
| | 110 | 24 |
| ND146340-0560 | 363 | 34 |
| ND146657-8841 | 362 | 10 |
| ND146657-8850 | 362 | 12 |
| ND146657-8860 | 363 | 37 |
| ND146657-9811 | 362 | 11 |
| ND146667-0440 | 363 | 32 |
| ND153400-6740 | 110 | 12 |
| ND153400-8530 | 108 | 14 |
| ND228401-0633 | 108 | 13 |
| ND245450-5831 | 362 | 1 |
| ND245450-5840 | 362 | 2 |
| ND246470-4311 | 363 | 42 |
| ND246790-2060 | 363 | 30 |
| ND445021-3941 | 362 | 13 |
| ND446010-3132 | 362 | |
| ND446600-0991 | 362 | 5 |
| ND447500-2750 | 362 | 8 |
| ND90170-10061 | 108 | 35 |
| | 111 | 44 |
| ND90200-06241 | 109 | 39 |
| | 111 | 46 |
| ND90258-10001 | 108 | 37 |
| | 110 | 36 |
| ND90801-10050 | 108 | 33 |
| | 110 | 31 |
| ND93950-05003 | 363 | 43 |
| ND949001-1730 | 363 | 41 |
| ND949006-4720 | 109 | 38 |
| | 110 | 33 |
| ND949007-2350 | 323 | 8 |
| ND949007-6530 | 108 | 34 |
| | 111 | 39 |
| ND949007-6850 | 109 | 41 |
| | 111 | 42 |
| ND949008-0330 | 363 | 40 |
| ND949008-0460 | 363 | 39 |
| ND949020-0600 | 108 | 32 |
| ND949042-3680 | 110 | 30 |
| ND949042-3690 | 110 | 32 |
| ND949046-3100 | 362 | 9 |
| ND949047-4440 | 110 | 19 |
| ND949056-4480 | 108 | 36 |
| | 110 | 34 |
| ND949100-1750 | 108 | 6 |
| ND949100-1920 | 108 | 10 |
| | 108 | 10 |
| ND949100-1930 | 108 | 5 |
| ND949100-3161 | 110 | 3 |
| ND949100-3540 | 110 | 4 |
| ND949100-4500 | 108 | 9 |
| | 110 | 7 |
| ND949100-5290 | 110 | |
| ND949142-0020 | 362 | 6 |
| ND949142-0030 | 362 | 7 |
| ND949170-4040 | 108 | 11 |
| | 110 | 9 |
| ND949170-4070 | 108 | 26 |
| | 110 | 25 |
| ND949173-0571 | 108 | 23 |
| NFEB0427 Z0 | 263 | 16 |
| | 267 | 22 |
| NFEB3026 A1 | 263 | 12 |
| | 267 | 18 |
| NFEB3401 | A1 | 263 |
| | 267 | |
| NFEB4475 Z0 | 263 | 13 |
| | 267 | 19 |
| NFEB4477 Z0 | 263 | 17 |
| | 267 | 23 |
| NY01720-10600 | 274 | 5 |
| NY05062-1170A | 274 | 6 |
| | 277 | 5 |
| NY05062-11800 | 274 | 7 |
| | 277 | 6 |
| NY06277-1320A | 274 | 8 |
| | 277 | 7 |
| NY06339-10200 | 274 | 9 |
| | 277 | 8 |
| NY07207-11700 | 274 | 10 |
| | 277 | 9 |
| NY07493-10200 | 274 | 11 |
| | 277 | 10 |
| NY07529-10200 | 274 | 12 |
| | 277 | 11 |
| NY07529-10300 | 274 | 13 |
| | 277 | 12 |
| NY07529-10400 | 274 | 14 |
| | 277 | 13 |
| NY07529-10500 | 274 | 15 |
| | 277 | 14 |
| NY07529-10600 | 277 | 15 |
| NY07926-10100 | 274 | 16 |
| NY09000-11400 | 274 | 17 |
| | 277 | 16 |
| NY16207-10200 | 274 | 18 |
| | 277 | 17 |
| NY16207-10300 | 274 | 19 |
| | 277 | 18 |
| NY80000-02100 | 274 | 20 |
| | 277 | 19 |
| NY80000-02200 | 274 | 21 |
| | 277 | 20 |
| NY81416-05012 | 274 | 22 |
| | 277 | 21 |
| NY84110-00248 | 274 | 23 |
| | 277 | 22 |
| NY89103-00090 | 274 | 26 |
| | 277 | 25 |
| RFU419B-418-A | 324 | 1 |
| RFU419B-418-B | 324 | 6 |
| RFU419B-418-C | 324 | 7 |
| RFU419B-418-D | 324 | 3 |
| RFU419B-418-E | 324 | 4 |
| WRMS2179E2 | 329 | 2 |

https://truckmanualshub.com/

https://truckmanualshub.com/

PC200-8N1 Hydraulic Excavator (Track Type)
Form No. FEN01155-00

©2010 KOMATSU
All Rights Reserved
Printed in Japan 04-10