

SUPPLEMENT No. 1
to
PARTS CATALOG FORM 0662680-8 (5-67)
HD-16D, DC CRAWLER TRACTOR

NOTE: This supplement includes replacement pages providing additional data required to service tractors serial No. 24L09572 and up equipped with "Donaldson" air cleaner.

ATTENTION: Insert this sheet into the front of HD16D, DC Parts Catalog 0662680-8 (5-67) to indicate receipt of this supplement. Original pages in the catalog must be removed and replaced with like-numbered pages included in this supplement.

Additional copies of this supplement are available. Please direct your request to Technical Publications Department, Construction Machinery Division, Springfield Plant.



**CONSTRUCTION MACHINERY DIVISION
SPRINGFIELD, ILLINOIS 62708, U.S.A.**

SUMMARY

Make following changes: (All changes are underlined)

PAGE	ITEM	PART NO.	QTY.	DESCRIPTION
67	4	650394	1	ROD (<u>Tractors prior to unit #09572</u>)
	4 Add	668147	1	ROD, intermediate (Tractors unit #09572 and up)
	15 Add	630745	1	SPRING, intermediate rod (Tractors unit #09572 and up)
72	-	-----		Add: USAGE: Tractors serial No. 5901 thru 9550; also No. 24L09551 thru No. 24L09571
79	-	-----	-	USAGE: Tractors serial No. 7437 and up; <u>also No. 24L09551 thru No. 24L09571</u>
187	8 {	629262	1	BRACKET
		651431	1	BRACKET
	9	070469	2	CAPSCREW
	10	035018	4	CAPSCREW
	11	064531	4	WASHER
		904208	6	LOCKWASHER
		911043	6	NUT
	12	631421	1	PLATE
264	1	649131	1	PLATE (<u>Tractors prior to unit #09572</u>)
	1 Add	671456	1	PLATE, front section, right (Tractors unit #09572 and up)
	3	630629	1	PLATE (<u>Tractors prior to unit #09572</u>)
	3 Add	668101	1	PLATE, front section, left (Tractors unit #09572 and up)
273	1	654479	1 -	FENDER (<u>Tractors prior to unit #09572</u>)
	1 Add	669027	1 -	FENDER, left (Tractors unit #09572 and up)
	5	657636	1 -	FENDER (Tractors #8145 <u>thru unit #09571</u>)
	5 Add	668998	1 -	FENDER, right (Tractors unit #09572 and up)
286	--	-----	-	Add: USAGE: Tractors serial No. 5901 and up; also No. 24L09551 thru 24L09571
289	--	-----	-	Add: USAGE: Tractors serial No. 5901 and up; also No. 24L09551 thru 24L09571

Following are replacement and added pages:

3 (Revised)	74C (Added)	281 (Revised)	287B (Added)
4 (No Change)	74D (Added)	281A (Added)	288 (Revised)
72A (Added)	261 (Revised)	281B (Added)	288A (Added)
	262 (Revised)	282 (No Change)	288B (Added)
74A (Added)	279 (Revised)	287 (Revised)	
74B (Added)	280 (Revised)	287A (Added)	

ADDITIONAL PUBLICATIONS AVAILABLE
FOR
MODEL HD16D - HD16DC TRACTORS SERIAL NUMBER 5901 - UP
(See NOTE below)

(Available In Foreign Language As Indicated)

<u>DESCRIPTION</u>	<u>SERIAL NO.</u>	<u>FORM NO.</u>			
		ENGLISH	ESPAÑOL (Spanish)	FRANÇAIS (French)	PORTUGUÊS (Portuguese)
<u>Parts Catalogs</u>					
Cable Control Unit (75) - - - - -All	626048	—	—	—	
Cable Control Unit (F100)- - - - -All	626163	—	—	—	
Dozer - - - - -All	650368	—	—	—	
Glass - - - - -All	626019	—	—	—	
Independent Hyd. Sys. - - - - -All	650367	—	—	—	
Injection - - - - -All	645322	—	—	—	
Ripper - - - - -All	650366	—	—	—	
<u>Operating Instructions and Field Maintenance Manual</u>					
HD16D - - - - -All	640495	645397	645399	645398	
HD16DC - - - - -All	639965	645397	645399	645398	
Dozer - - - - -All	626100	—	—	—	
<u>Service Manuals</u>					
Dozer and 75 Cable Control Unit - - - - -All	644308	647070	647495	647071	
Engine (16000H, 19000, 21000H, 25000) - - - - -All	643980	645885	645887	645886	
Engine Clutch (HD16D) - - - - -All	649237	651601	651603	651602	
Engine Clutch and Torque Converter (HD16DC) - - - - -All	644309	647064	647066	647065	
Final Drive - - - - -All	644980	645281	645283	645282	
Service Tools - - - - -All	650850	—	—	—	
Steering Clutches and Brakes - -All	645549	649443	649445	649444	
Track Frames and Tracks - - -All	645550	650413	650415	650414	
Transmission, Bevel Gear, Drive Shaft U-Joint - - - - -All	646998	650401	650403	650402	

NOTE: Order from Local ALLIS-CHALMERS Dealer

IMPORTANT

The terms "right" and "left" used throughout this parts list are determined by facing the direction of forward travel.

Attaching parts such as bolts, nuts, rivets, screws, washers, etc., are indented immediately following the parts which they attach.

Parts indicated with a square (□) are also available in packaged sets. Refer to section titled "PACKAGED PARTS."

INSTRUCTIONS FOR ORDERING PARTS

ALWAYS GIVE THE MODEL AND ENGINE SERIAL NUMBER.

To obtain parts promptly, give part name and part number.

Give post office address, town, county and state where parts are to be shipped. Also specify whether material is to be shipped by freight, express or parcel post.

Order parts from the dealer covering the local territory.

Confirm all telephone or telegraph orders in writing.

Parts for standard motor accessories such as generators and starting motors should be ordered from authorized Service Stations maintained by manufacturers of these units throughout the country.

No credit will be allowed on parts unless they are returned to the dealer from whom they were purchased; from there they will be returned, at the customer's expense, to the factory for inspection.

Unless claims for shortages or errors are made immediately upon receipt of goods, they will not be considered.

When broken goods are received, a full description of the damage should be made by the carrier agent on the freight bill. If this description is insisted upon, full damage can always be collected from the transportation company.

No responsibility is assumed for delay or damage to merchandise while in transit. Our responsibility ceases upon delivery of shipment to the transportation company from whom a receipt is received showing that shipment was in good condition when delivered to them; therefore, claims (if any) should be filed with the transportation company and not with Allis-Chalmers.

The right is reserved to change the construction or material of any parts where it seems desirable to do so without incurring the obligation of installing such changes on units already delivered.

MODEL IDENTIFICATION

The models listed in this Parts List and their identifying symbols are indicated below. This symbol is stamped in front of the tractor serial number on each model.

MODEL SYMBOL	ENGINE MODEL	DESCRIPTION
HD16D	16000H	34, 500 pound, 6-speed standard transmission, mechanical drive, track-type tractor, powered with a 174 rated horsepower naturally aspirated diesel engine.
HD16DC	16000H	34, 700 pound, 3-speed standard transmission, hydraulic torque converter drive, track-type tractor, powered with a 194 rated horsepower naturally aspirated diesel engine.

RECORD YOUR SERIAL NUMBERS BELOW

TRACTOR SERIAL NO. _____

ENGINE SERIAL NO. _____

SERIAL NUMBER LOCATIONS

TRACTOR SERIAL NO. On the steering clutch housing at the upper right hand corner of the rear face and vertically on right side of the rear edge. Also on small plate attached to the cowl.


ENGINE SERIAL NO. On plate attached to the left hand side of the cylinder block near the rear end and stamped directly on the upper right hand corner of the cylinder block. Also on small plate attached to the cowl.

ALPHABETICAL INDEX

Accessory Drive - - - - -	33	Exhaust Extension - - - - -	73
Air Cleaner - - - - -	75, 79	Exhaust Pipe - - - - -	72
Air Heater - - - - -	83	Fan - - - - -	97
Air Intake Extension - - - - -	80	Fan Guard - - - - -	105
Batteries and Cables - - - - -	295	Filters	
Battery Box - - - - -	297	Coolant - - - - -	103
Battery Box Lock - - - - -	297, 299	Engine Clutch Oil - - - - -	133
Belt, Drive - - - - -	89, 97	Engine Oil - - - - -	45, 47, 49
Belt, Safety - - - - -	267	Fuel - - - - -	52, 54
Bevel Gear and Shaft - - - - -	178	Heavy-Duty Fuel - - - - -	52
Bottom Guards - - - - -	221, 223, 224, 226	Heavy-Duty Oil - - - - -	49
Brake Control - - - - -	215	Steering Oil - - - - -	193, 196
Brake Drum - - - - -	183	Torque Converter Oil - - - - -	143
Brakes - - - - -	211	Final Drive	
Camshaft - - - - -	31	Housing - - - - -	173
Connecting Rod - - - - -	19	Intermediate Gears - - - - -	179
Conversion Tables - - - - -	12	Outboard Bearing and Seal - - - - -	185
Cowl - - - - -	261	Pinion Shaft - - - - -	183
Crankcase Guard - - - - -	221, 223, 226	Sprocket, Shaft and Gear - - - - -	181
Crankshaft - - - - -	22	Floor - - - - -	264
Cylinder Block - - - - -	16	Flywheel - - - - -	25
Cylinder Head - - - - -	27	Flywheel Housing - - - - -	24
Cylinder Sleeve - - - - -	16	Forward High-Low Gear Shift - - - - -	159
Drawbar - - - - -	274, 276	Front Fenders - - - - -	258, 260
Elements		Front Pusher - - - - -	309
Air Cleaner - - - - -	75, 79	Fuel Lines - - - - -	59
Coolant Filter - - - - -	103	Fuel Tank - - - - -	56
Engine Clutch Oil Filter - - - - -	133	Fuel Tank and Seat Guard - - - - -	316
Engine Oil Filter - - - - -	45, 47	Gauges	
Fuel Filter - - - - -	54	Air Restriction Indicator - - - - -	75, 79
Heavy-Duty Fuel Filter - - - - -	50	Ammeter - - - - -	286
Heavy-Duty Oil Filter - - - - -	50	Bevel Gear Comp. Oil Level - - - - -	173
Steering Oil Filter - - - - -	194, 195	Engine Clutch Oil Level - - - - -	133
Torque Converter Oil Filter - - - - -	143	Engine Oil Level - - - - -	16
Engine Breather - - - - -	29	Engine Oil Pressure - - - - -	289
Engine Clutch - - - - -	123	Engine Temperature - - - - -	286
Engine Clutch Brake - - - - -	129	Fuel Level - - - - -	56
Engine Clutch Control - - - - -	125, 127	Fuel Pressure - - - - -	288
Engine Clutch and Housing - - - - -	117	Hour Meter - - - - -	290
Engine Clutch Oiling System - - - - -	133	Torque Converter Oil Level - - - - -	143
Engine Decelerator - - - - -	69	Gear Shift - - - - -	159, 163, 167
Engine and Mounting - - - - -	14	Generator - - - - -	293
Engine Primer - - - - -	86	Generator Regulator - - - - -	293
Engine Side Screens - - - - -	301	Grille Screen - - - - -	306, 307, 308
Engine Shut-off Control - - - - -	67	Heat Exchanger - - - - -	93, 95
Equalizing Beam - - - - -	227	Hood - - - - -	262, 263
Equalizing Spring - - - - -	229	Hood Side Plates - - - - -	303, 305

ALPHABETICAL INDEX

Hose Parts - - - - -	6	Speed Selection Gear Shift - - - - -	163
Hour Meter - - - - -	290	Starter - - - - -	291
Hydraulic Steering Control - - - - -	189	Steering Clutch & Final Drive Housing - - - - -	173
Hydraulic Track Adjuster - - - - -	241	Steering Clutches - - - - -	177
Injection Nozzles and Lines - - - - -	63	Steering Control - - - - -	189
Injection Pump - - - - -	61	Steering Control Valve and Lines - - - - -	206
Instruments - - - - -	286	Steering Levers and Linkage - - - - -	187
Lights		Steering Pump and Filters - - - - -	193, 196
Dash - - - - -	286	Tail Light - - - - -	284
Head - - - - -	281	Thermostat - - - - -	100
Rear Flood - - - - -	283	Throttle Control - - - - -	69
Tail - - - - -	284	Timing Gear Housing - - - - -	20
Lights and Wiring - - - - -	281	Timing Gears - - - - -	22, 31, 33
Main Frame - - - - -	219	Tool Box - - - - -	315
Manifolds		Tools - - - - -	315
Exhaust - - - - -	71	Torque Converter - - - - -	137
Intake - - - - -	74	Torque Converter Oil Supply - - - - -	143
Water Inlet - - - - -	93, 95	Track - - - - -	243
Water Outlet - - - - -	100	Track Frame - - - - -	231
Numerical Index - - - - -	317	Track Idler - - - - -	245
Oil Cooler - - - - -	43	Track Release - - - - -	241
Oil Pan - - - - -	37	Track Roller - - - - -	237
Oil Pumps - - - - -	41	Track Roller Guards - - - - -	233, 235
Packaged Parts - - - - -	8	Track Supporting Roller - - - - -	239
Painting and Marking - - - - -	278	Transmission	
Piston - - - - -	19	Assembly - - - - -	148, 149
Power Pulley - - - - -	311	Case and Covers - - - - -	148, 149
Power Take-off - - - - -	313	Intermediate Shaft - - - - -	152
Pull Hook - - - - -	219	Pinion Shaft - - - - -	155, 157
Pumps		Reverse Shaft - - - - -	153
Air Heater - - - - -	83	Top Shaft - - - - -	150, 151
Engine Clutch - - - - -	133	Transmission Guards - - - - -	221, 223, 224
Engine Oil - - - - -	41	Transmission Oil Lines - - - - -	170, 171
Engine Primer - - - - -	86	Universal Joint - - - - -	146, 147
Fuel Injection - - - - -	61	Valve Operating Mechanism - - - - -	31
Torque Converter - - - - -	143	Valves	
Steering - - - - -	193, 196	Air Heater Check - - - - -	83
Water - - - - -	89	Brake - - - - -	211
Pusher - - - - -	309	Exhaust - - - - -	27
Radiator Curtain - - - - -	111	Fuel Injection Pressure Relief - - - - -	61
Radiator Guard - - - - -	249, 251, 253, 257	Hyd. Track Relief - - - - -	241
Radiator and Mounting - - - - -	105, 109	Intake - - - - -	27
Radiator Shell - - - - -	257	Pressure Oil Pump Relief - - - - -	41
Raincap - - - - -	75, 79, 80	Steering Control - - - - -	206
Rear Fenders - - - - -	272, 273	Water Inlet Manifold & Heat Exchanger - - - - -	93, 95
Rear Flood Light - - - - -	283	Water Outlet Manifold - - - - -	100
Seat - - - - -	267	Water Pump - - - - -	89

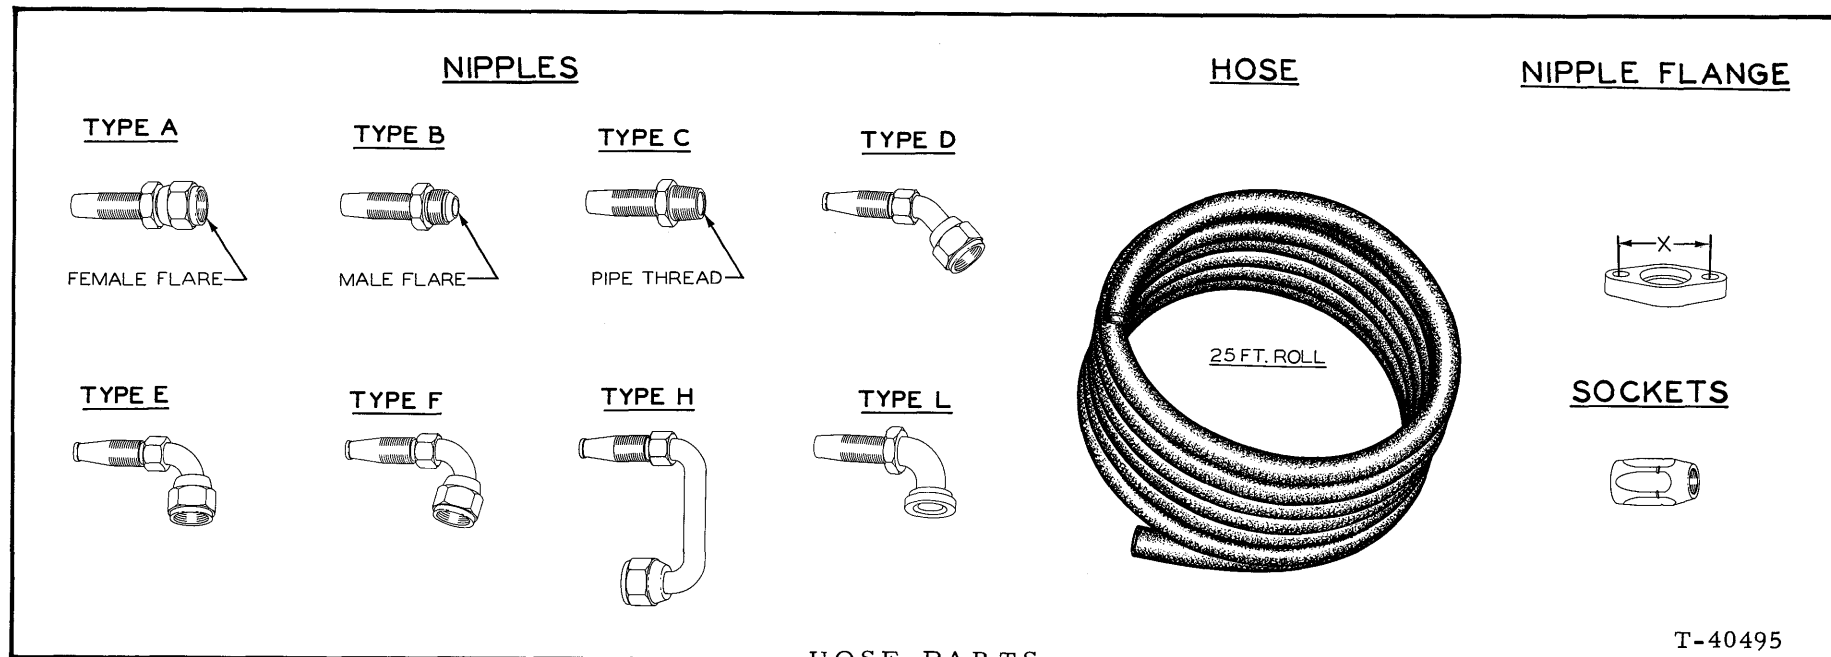

HOSE PARTS

T-40495

NOTE: Refer to right hand column for identity of interchangeable crimped-type hose (fittings not re-usable). Assembly number shown in left hand column indicates available replacement hose assembly with re-usable components; where no assembly number is listed, hose assembly is not available from factory but may be constructed in the field from data indicated.

HOSE ASSEMBLY NO. (See NOTE)	BULK HOSE (25' roll)	HOSE LENGTH (inches)	NIPPLE (#1 end)			NIPPLE (#2 end)			SOCKET (both ends)	NIPPLE FLANGE		CRIMPED- TYPE HOSE (See NOTE)
			Including SOCKET	NIPPLE only	Type	Including SOCKET	NIPPLE only	Type		Part No.	X Dim	
632950	919196	38	920855	919144	B	920862	919194	E	919143			646357
633458	919156	46-5/8	920858	919080	B	920872	919158	E	919076			646839
633473	919156	30	920850	920303	A	920872	919158	E	919076			646838
634449	920221	82-1/2	920852	920344	A		922963	L	919281	920412	2-1/2"	646308
634673	920221	25-1/2	920882	919278	D		922963	L	919281	920412	2-1/2"	646307
4386199	920721	25-1/2			A			A	None			
4386200	920388	39-7/8			A			A	None			
4386770	920736	18		922406	C		920514	E	920509			
4386771	922365	22-1/8		920512	E		922207	H	920509			

4386772	919821	23-1/4		920513	E		922208	H	919820			
4386773	922364	11-3/4		922044	E		922044	E	922042			
4386774	922366	14-7/8		922221	E		922372	F	919820			
	919196	48-1/8	920847	920301	A	920862	919194	E	919143			643723
	919156	9	920865	919081	E		919175	F	919076			644603
	919156	9	920865	919081	E		919175	F	919076			644604
	919196	14	920847	920301	A	920877	919207	D	919143			645075
	920221	123-3/4	920852	920344	A	920867	919277	E	919281			645082
	919218	12	920850	920303	A	920865	919081	E	919076			645236
	920221	16-1/8	920867	919277	E short	920874	921042	E long	919281			645237
	920221	113-1/2	920852	920344	A	920867	919277	E	919281			645239
	919155	29-1/4	920849	920302	A	920864	919082	E	919075			645240
	919196	46-1/4	920855	919144	B	920869	919253	E	919143			646230
	919155	28-1/4	920849	920302	A	920857	919079	B	919075			646299
	919156	23-7/8	920850	920303	A	920858	919080	B	919076			646300
	919155	106-3/4	920849	920302	A	920864	919082	E	919075			646303
	920221	48-5/8	920867	919277	E	920867	919277	E	919281			646311
	919155	93-1/4	920849	920302	A	920864	919082	E	919075			646322
	920732	16-7/8		922141	L short		922151	L long	920569			646328
	920732	33		922141	L short		922142	L long	920569			646329
	920222	58-3/4	920868	920144	E		922143	H	919282			646330
	920221	40-3/4	920852	920344	A	920867	919277	E	919281			646331
	919155	18	920857	919079	B	920836	919073	C	919075			646352
	919156	14-5/8	920850	920303	A	920858	919080	B	919076			646353
	920221	23	920882	919278	D	920867	919277	E	919281			647414
	919155	16	920857	919079	B	920879	919159	D	919075			648231

PACKAGED PARTS

PACKAGED NUMBER

DESCRIPTION

-----	BLOCK KIT, clutch camshaft (See page 119)		
654544	BRACKET KIT, rear fender mounting (Required to adapt late type Final Drive Housing on tractors prior to #7753. See page 273)		
	2	651963	BRACKET, angle (Requires welding to fender)
	6	023618	CAPSCREW, 5/8"NF x 2-1/2"
	12	064810	WASHER, plain
	6	904209	LOCKWASHER, 5/8"
	6	911044	NUT, 5/8"NF
	1	S-4417	INSTRUCTIONS
-----	CLUTCH KIT, over-running (See page 139)		
4390276	CONVERSION KIT, crankshaft damper (For engines prior to #16-07405)		
	1	4388217	DAMPER, crankshaft pulley
	1	4388240	PULLEY, water pump
	1	4388253	PULLEY, water pump idler
	1	4388254	CAPSCREW, crankshaft pulley
	1	4388324	PULLEY, crankshaft
	1	4388326	BELT, water pump
	1	4388339	BRACKET, water pump idler pulley
	1	4390887	BRACKET, water pump lube hose
	4	4751643	BOLT, water pump pulley
	6	4752075	BOLT, crankshaft damper
	1	919134	PLUG, pipe, idler pulley bracket
4390115	GASKET KIT, cylinder head		
	8	917806	SLEEVE, fuel line
	8	4254873	WASHER, rocker cover capscREW
	1	4361551	GASKET, air inlet elbow
	1	4362458	GASKET, water manifold cover
	6	4375865	GASKET, exhaust manifold
	6	4376483	GASKET, water manifold
	1	4376520	GASKET, thermostat cover
	1	4376527	GASKET, water manifold connecting
	6	4378031	GASKET, injection nozzle
	2	4379167	GASKET (Discard. Not for HD16)
	1	4386137	GASKET, water by-pass tube
	6	4387697	GASKET, intake manifold
	2	4389960	GASKET, cylinder head lower cover
	2	4389961	GASKET, rocker cover
	2	4390170	GASKET ASSEMBLY, cylinder head
4388265	GASKET KIT, intermediate, engine cylinder block (Does not include cylinder head or oil pan gaskets)		
	2	035249	GASKET, oil drain plug
	12	923576	O-RING, water inlet manifold
	1	923586	O-RING, flywheel to crankshaft
	8	923645	O-RING, injection pump connectors
	1	923935	O-RING, water pump body
	1	923936	O-RING, flywheel housing
	2	4113897	GASKET, regulating valve nut
	4	4119937	GASKET, plugging capscREWS
	2	4251974	O-RING, flywheel housing dowel
	8	4251984	O-RING, water tubes
	2	4254806	O-RING, bonnet tube
	5	4255511	O-RING, heat exchanger and oil filter
	2	4255513	O-RING, (Discard. Not for HD16)
	2	4255631	O-RING, oil cooler to manifold
	4	4255665	O-RING, injection pump bracket

(Continued)

PACKAGED PARTS

PACKAGED NUMBER

DESCRIPTION

4388265

GASKET KIT, intermediate, engine cylinder block (Does not include cylinder head or oil pan gaskets)(Continued)

1	4310257	GASKET, oil filler pipe
1	4336897	RING, sealing, flywheel housing
1	4361740	GASKET, water pump idler support
1	4367090	GASKET, tachometer hole nut
1	4371027	GASKET, gear housing hole cover
2	4371160	GASKET, heat exchanger (Discard 1 on HD16DC)
1	4371289	GASKET, oil pan cover
4	4371345	GASKET, oil lines
1	4371742	GASKET, (Discard. Not for HD16)
1	4376398	GASKET, water pump
1	4376603	GASKET, accessory pump
1	4376609	GASKET, timing gear housing cover
7	4376749	WASHER, push rod cover capscrew
2	4377120	GASKET, push rod cover
2	4378112	GASKET, lower water by-pass elbow
1	4379070	SEAL, oil pan
1	4386223	GASKET, heat exchanger bonnet (Discard on HD16D)
1	4386495	GASKET, water and oil manifold, lower
1	4386856	GASKET, heat exchanger (Discard on HD16D)
1	4387943	GASKET, timing hole cover
1	4389291	GASKET, water and oil manifold, upper
1	4389676	GASKET, heat exchanger bonnet
1	4389678	GASKET, heat exchanger adaptor
8	4389910	WASHER, flywheel bolt
1	4660423	GASKET, oil pump discharge tube
1	4660492	GASKET, timing gear housing

4390598

PISTON AND SLEEVE KIT

2	4253749	RETAINER, piston pin
1	4379178	O-RING, cylinder sleeve (black)
2	4385485	O-RING, cylinder sleeve (red)
1	4388375	PISTON
1	4390175	*PIN, piston
1	4390462	SLEEVE, cylinder
1	4390599	RING SET, piston
1	4385633	INSTRUCTION SHEET


*When making single replacement, original pin 4376792 must be substituted to maintain dynamic balance.

RING SET (See PISTON AND CONNECTING ROD)

SEAL KITS (See FINAL DRIVE, TRACK IDLER, TRACK ROLLER and TRACK SUPPORTING ROLLER)

TRANSFER KIT (See PAINTING AND MARKING)

MEMO

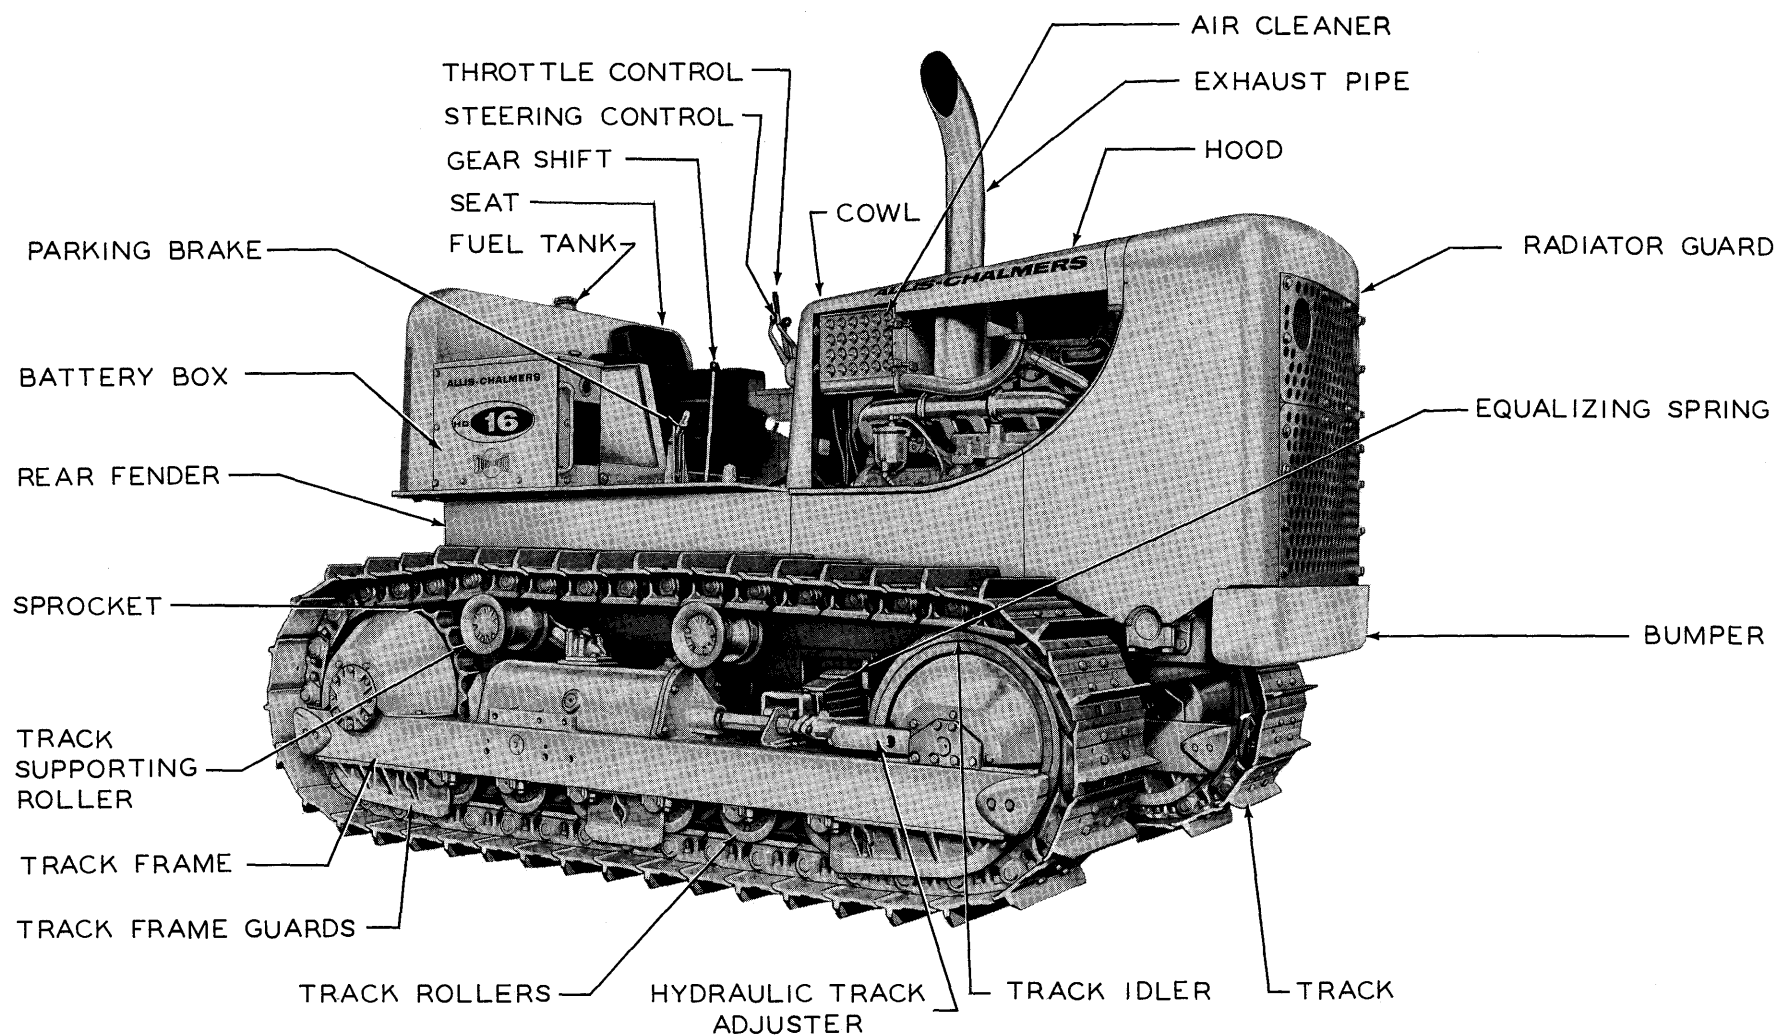

MODEL HD-16DC CRAWLER TRACTOR

T-71243

CONVERSION TABLES

DECIMAL AND METRIC EQUIVALENTS OF FRACTIONS OF AN INCH

Inches			Inches		
Fractions	Decimals	Milli-meters	Fractions	Decimals	Milli-meters
1/64	.015625	.397	33/64	.515625	13.097
1/32	.03125	.794	17/32	.53125	13.494
3/64	.046875	1.191	35/64	.546875	13.891
1/16	.0625	1.588	9/16	.5625	14.288
5/64	.078125	1.984	37/64	.578125	14.684
3/32	.09375	2.381	19/32	.59375	15.081
7/64	.109375	2.778	39/64	.609375	15.478
1/8	.125	3.175	5/8	.625	15.875
9/64	.140625	3.572	41/64	.640625	16.272
5/32	.15625	3.969	21/32	.65625	16.669
11/64	.171875	4.366	43/64	.671875	17.066
3/16	.1875	4.763	11/16	.6875	17.463
13/64	.203125	5.159	45/64	.703125	17.859
7/32	.21875	5.556	23/32	.71875	18.256
15/64	.234375	5.953	47/64	.734375	18.653
1/4	.250	6.350	3/4	.750	19.050
17/64	.265625	6.747	49/64	.765625	19.447
9/32	.28125	7.144	25/32	.78125	19.844
19/64	.296875	7.541	51/64	.796875	20.241
5/16	.3125	7.938	13/16	.8125	20.638
21/64	.328125	8.334	53/64	.828125	21.034
11/32	.34375	8.731	27/32	.84375	21.431
23/64	.359375	9.128	55/64	.859375	21.828
3/8	.375	9.525	7/8	.875	22.225
25/64	.390625	9.922	57/64	.890625	22.622
13/32	.40625	10.319	29/32	.90625	23.019
27/64	.421875	10.716	59/64	.921875	23.416
7/16	.4375	11.113	15/16	.9375	23.813
29/64	.453125	11.509	61/64	.953125	24.209
15/32	.46875	11.906	31/32	.96875	24.606
31/64	.484375	12.303	63/64	.984375	25.003
1/2	.500	12.700	1	1.000	25.400

VOLUME AND WEIGHT CONVERSION CONSTANTS — U.S. TO METRIC

Pints x .4732 = Liters
 Quarts x .9463 = Liters
 Gallons x 3.7853 = Liters
 Pounds x .4536 = Kilograms

AVOID ACCIDENTS

MOST ACCIDENTS, WHETHER THEY OCCUR IN INDUSTRY, ON THE FARM, AT HOME OR ON THE HIGHWAY, ARE CAUSED BY THE FAILURE OF SOME INDIVIDUAL TO FOLLOW SIMPLE AND FUNDAMENTAL SAFETY RULES OR PRECAUTIONS. FOR THIS REASON MOST ACCIDENTS CAN BE PREVENTED BY RECOGNIZING THE REAL CAUSE AND DOING SOMETHING ABOUT IT BEFORE THE ACCIDENT OCCURS.


REGARDLESS OF THE CARE USED IN THE DESIGN AND CONSTRUCTION OF ANY TYPE OF EQUIPMENT THERE ARE MANY CONDITIONS THAT CANNOT BE COMPLETELY SAFEGUARDED AGAINST WITHOUT INTERFERING WITH REASONABLE ACCESSIBILITY AND EFFICIENT OPERATION.

A careful operator is the best insurance against an accident. The complete observance of one simple rule would prevent many thousand serious injuries each year. That rule is:
Never attempt to clean, oil or adjust a machine while it is in motion.

NATIONAL SAFETY COUNCIL

WARNING

ON MACHINES HAVING HYDRAULICALLY, MECHANICALLY, AND/OR CABLE CONTROLLED EQUIPMENT (SUCH AS SHOVELS, LOADERS, DOZERS, SCRAPERS, etc.) BE CERTAIN THE EQUIPMENT IS LOWERED TO THE GROUND BEFORE SERVICING, ADJUSTING AND/OR REPAIRING. IF IT IS NECESSARY TO HAVE THE HYDRAULICALLY, MECHANICALLY, AND/OR CABLE CONTROLLED EQUIPMENT PARTIALLY OR FULLY RAISED TO GAIN ACCESS TO CERTAIN ITEMS, BE SURE THE EQUIPMENT IS SUITABLY SUPPORTED BY MEANS OTHER THAN THE HYDRAULIC LIFT CYLINDERS, CABLE, AND/OR MECHANICAL DEVICES USED FOR CONTROLLING THE EQUIPMENT.

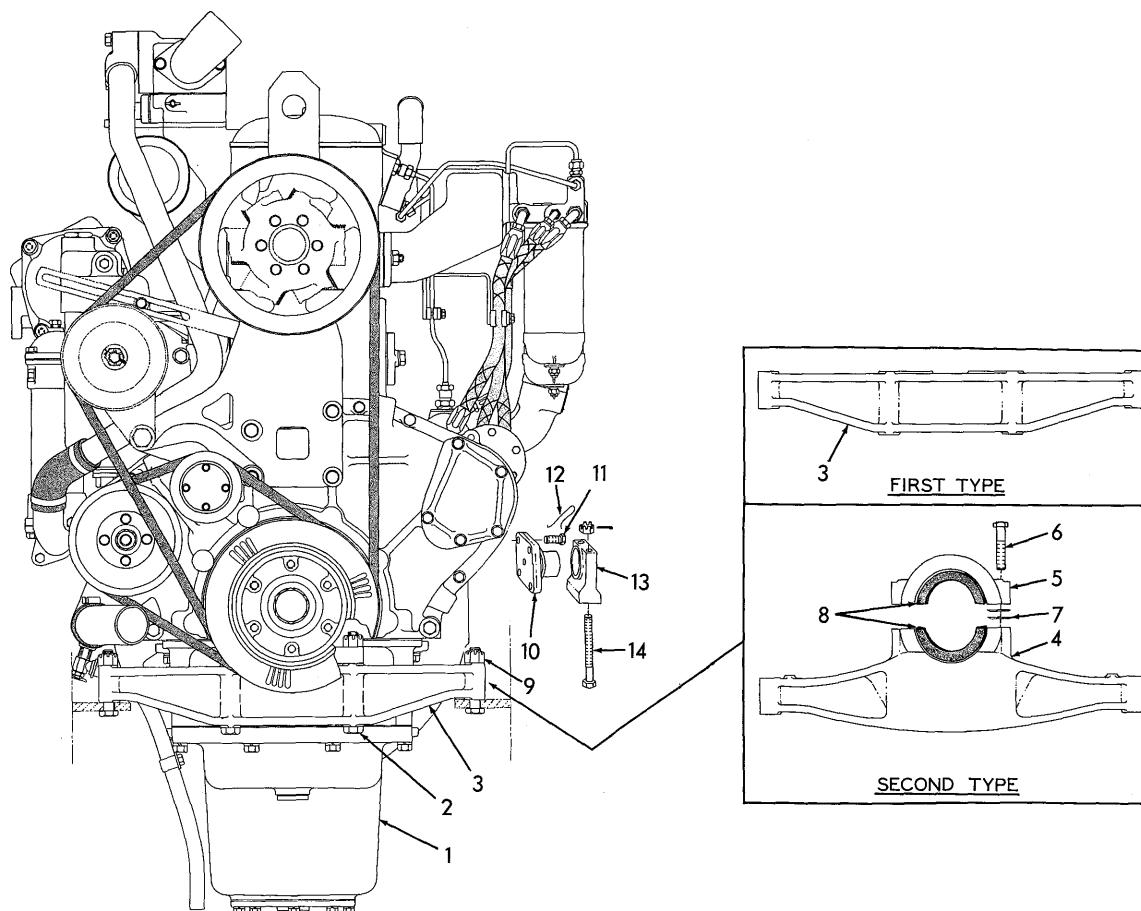

T-70531

ENGINE AND MOUNTING

* Tractors prior to No. 7928 excluding No. 7926
 ** Tractors serial No. 7928 and up including No. 7926

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	4386320	1	1	ENGINE ASSEMBLY (Model HD16D)
	4386319	1	1	ENGINE ASSEMBLY (Model HD16DC)


NOTE: Each Engine Assembly includes oil filter, oil cooler, water filter and fuel filter but does not include air cleaner, fan generator or starter.

2	099061	2	-	CAPSCREW, engine mounting, front (5/8"NF x 5-3/4")
	913280	2	-	NUT, high, slotted, 5/8"NF
	900806	2	-	PIN, cotter, 1/8" x 1"
3	083778	1	-	HANGER, engine supporting, front end
4	655510	-	1	HANGER, engine supporting, front end (Includes item 5)
5	-----	-	1	CAP, engine hanger (Not serviced separately)
6	924694	-	2	SCREW, flanged, hex-hd., 1/2"NC x 3"
7	916009	-	14	WASHER, shimming (1/32" thick. Use as req'd)

(Continued)

ENGINE AND MOUNTING (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
8	4336491	-	2	LINER, engine supporting hanger
9	099062	2	2	CAPSCREW, engine hanger (drilled-end, 5/8"NF x 4")
	913280	2	2	NUT, high, slotted, 5/8"NF
	900806	2	2	PIN, cotter, 1/8" x 1"
10	631774	2	2	TRUNNION, rear mounting
11	631570	8	8	CAPSCREW, drilled-hd., 5/8"NC x 1-1/2"
12	023633	4	4	WIRE, locking 1/16" x 12"
13	631773	2	2	BRACKET, engine supporting, rear
14	099435	4	4	CAPSCREW, drilled-end, 3/4"NF x 6-3/4"
	910879	4	4	NUT, high, slotted, 3/4"NF
	900808	4	4	PIN, cotter, 1/8" x 1-1/2"

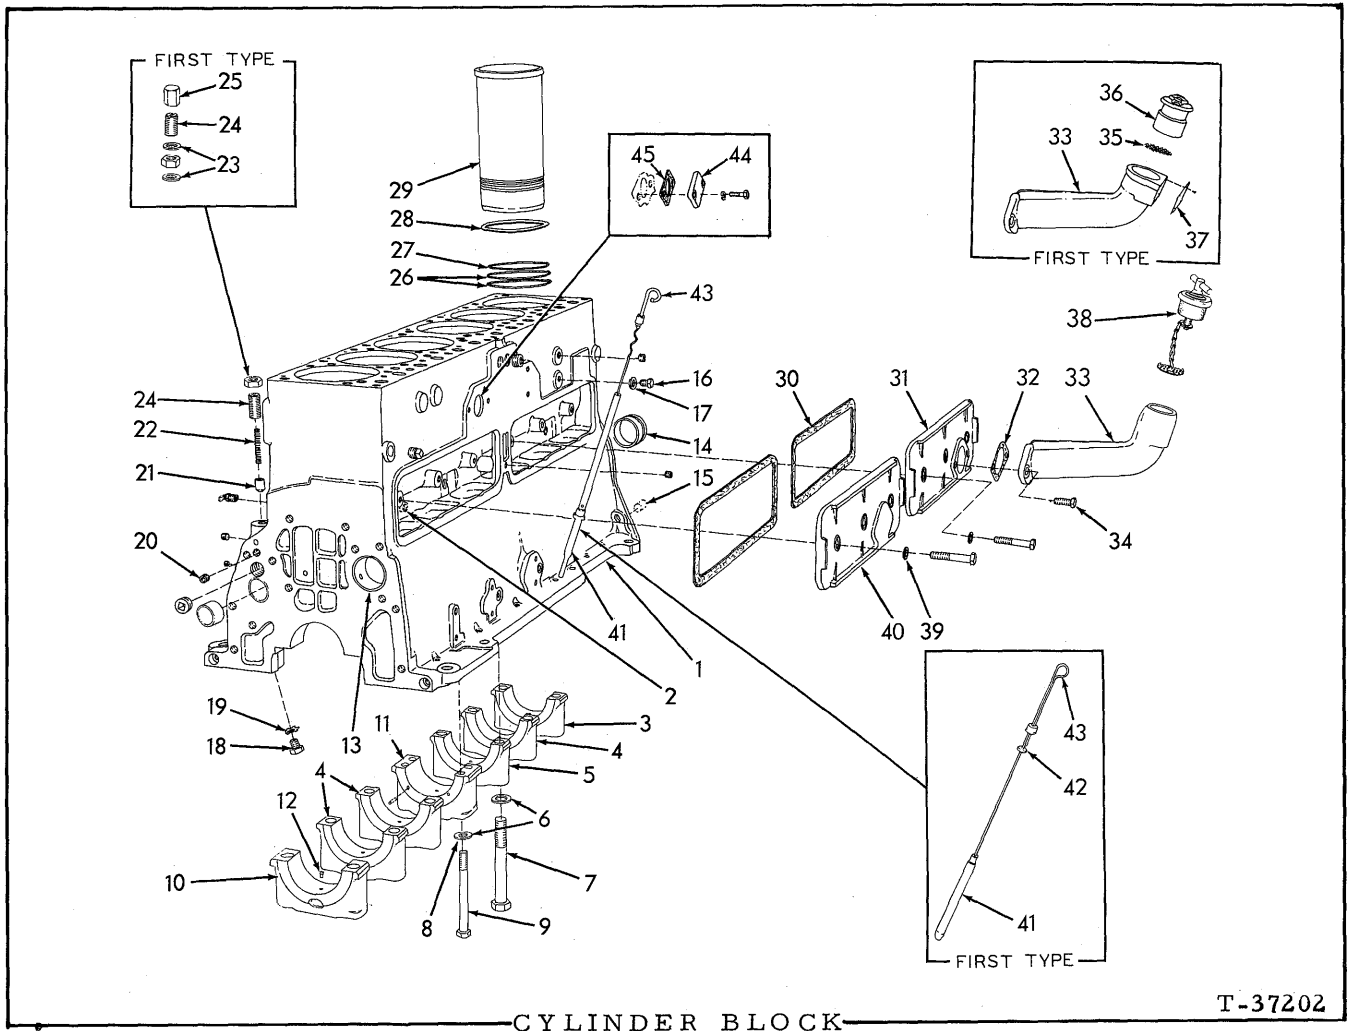

ITEM	PART NO.	QTY.	DESCRIPTION
1	4389992	1	BLOCK ASSEMBLY, cylinder (Includes items 2 thru 20 also hardware indented below)
	919134	1	PLUG, pipe, hex-hd., 1/8"NPT
	919840	4	PLUG, pipe, hex-hd., 1/4"NPT
	920333	1	PLUG, pipe, hex-hd., 3/8"NPT
	920416	1	PLUG, pipe, hex-hd., 1/2"NPT
	917673	2	PLUG, pipe, hex-socket, 1/8"NPT
	918850	3	PLUG, pipe, hex-socket, 1/4"NPT
	918851	2	PLUG, pipe, hex-socket, 3/4"NPT
	904224	2	PLUG, pipe, hex-socket, 3/4"NPT
	912415	1	COCK, drain, 1/4"NPT
2	-----	4	DOWEL, valve lifter bracket (See VALVE OPERATING MECHANISM)
3	4386512	1	* CAP, main bearing, rear (Used prior to engine #16-06272)
	4389235	1	* CAP, main bearing, rear (Effective with engine #16-06272)
4	4386511	3	* CAP, main bearing, intermediate (Used prior to engine #16-06272)
	4389232	3	* CAP, main bearing, intermediate (Effective with engine #16-06272)
* Replacement bearing caps are semi-finished and must be line-bored after installing			

(Continued)

CYLINDER BLOCK (Continued)


ITEM	PART NO.	QTY.	DESCRIPTION
5	4386513	1	*CAP, main bearing, intermediate (No. 5)(Used prior to engine #16-06272)
	4389234	1	*CAP, main bearing, intermediate (No. 5)(Effective with engine #16-06272)
6	4389911	12	WASHER, plain, main bearing capscrew
7	4389924	12	CAPSCREW, main bearing cap (7/8" diam.)
8	4389910	4	WASHER, plain, center main bearing capscrew
9	4389923	4	CAPSCREW, center main bearing cap (5/8" diam.)
10	4386509	1	*CAP, main bearing, front (Used prior to engine #16-06272)
	4389231	1	*CAP, main bearing, front (Effective with engine #16-06272)
11	4386516	1	*CAP, main bearing, center (Used prior to engine #16-06272)
	4389233	1	*CAP, main bearing, center (Effective with engine #16-06272)
	-----	4	PIN, dowel, thrust flange (See CRANKSHAFT)
12	917554	7	PIN, dowel, main bearing (straight type)(Used prior to engine #16-06272)
	4389292	7	PIN, dowel, main bearing (step type)(Effective with engine #16-06272)
13	4660389	1	BEARING, camshaft, front
	4660440	2	BEARING, camshaft, intermediate
14	4660389	1	BEARING, camshaft, rear
15	-----	2	PIN, dowel, flywheel housing (See FLYWHEEL HOUSING)
16	919229	3	CAPSCREW, hole plugging (1/2"NC x 1/2")
17	4119937	3	□GASKET, plugging capscrew
18	924822	6	CAPSCREW, plugging, oil gallery (5/8"NC x 1/2")(Not original equipment. Furnished with replacement cylinder block only)
19	4373619	6	LOCKWASHER
20	4389943	1	RESTRICTOR, oil by-pass
21	4500230	1	PISTON, oil pressure regulating valve
22	4660358	1	SPRING, oil pressure regulating valve
23	4113897	2	□GASKET, regulating valve nut (Used prior to engine #16-05422)
24	4389058	1	SCREW, oil pressure regulating valve
	910847	1	NUT, jam, 3/4"NF

* Replacement bearing caps are semi-finished and must be line-bored after installing


(Continued)

CYLINDER BLOCK (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION	
25	-----	1	NUT, cap, oil pressure regulating valve (Used prior to engine #16-05422. Order SCREW 4389058)	
26	4385485	12	□O-RING, cylinder sleeve, lower groove (red)	
27	4379178	6	□O-RING, cylinder sleeve, upper groove (black)	
28	4368204	-	SHIM, cylinder sleeve (.005" thick)	Use as required when remachining block
	4368205	-	SHIM, cylinder sleeve (.010" thick)	
	4368206	-	SHIM, cylinder sleeve (.015" thick)	
	4369002	-	SHIM, cylinder sleeve (.020" thick)	
29	4390462	6	□SLEEVE, cylinder	
30	4377120	2	□GASKET, push rod cover	
31	4389810	1	COVER, push rod, rear	
	916316	3	CAPSCREW, 1/2"NC x 2-1/2"	
32	4310257	1	□GASKET, oil filler pipe	
33	-----	1	ELBOW ASSEMBLY, oil filler (Includes items 35 thru 37)(Used prior to engine #16-05369. Order ELBOW 4389040 and item 38)	
	4389040	1	ELBOW, oil filler (Effective with engine #16-05369)	
34	4379198	2	CAPSCREW, Nylok, 1/2"NC x 1-3/8"	
35	4335022	1	STRAINER, oil filler	Used prior to engine #16-05369
36	4366461	1	CAP ASSEMBLY, oil filler (Serviced only as a unit)	
37	4379141	1	PLATE, oil data	
	904516	4	SCREW, drive, #6 x 1/4"	
38	4354449	1	CLOSURE ASSEMBLY, oil filler (Serviced only as a unit)(Effective with engine #16-05369)	
39	4376749	7	□WASHER, push rod cover capscREW	
40	4389809	1	COVER, push rod, front	
	916316	2	CAPSCREW, 1/2"NC x 2-1/2"	
	916317	1	CAPSCREW, 1/2"NC x 2-3/4"	
41	4371359	1	ADAPTER, oil level gauge (Used prior to engine #16-07912)	
	4388454	1	ADAPTER, oil level gauge (Effective with engine #16-07912)	
42	4506607	1	SEAL, oil level gauge (Used prior to engine #16-07912)	
43	4389547	1	GAUGE ASSEMBLY, oil level (Includes item 42)(Used prior to engine #16-07912)	
	4388448	1	GAUGE ASSEMBLY, oil level (Effective with engine #16-07912)	
44	4331522	1	PLATE, cover, cylinder block	
	919230	2	CAPSCREW, 1/2"NC x 1-3/8"	
	904208	2	LOCKWASHER, 1/2"	
45	4310257	1	GASKET, cover plate	

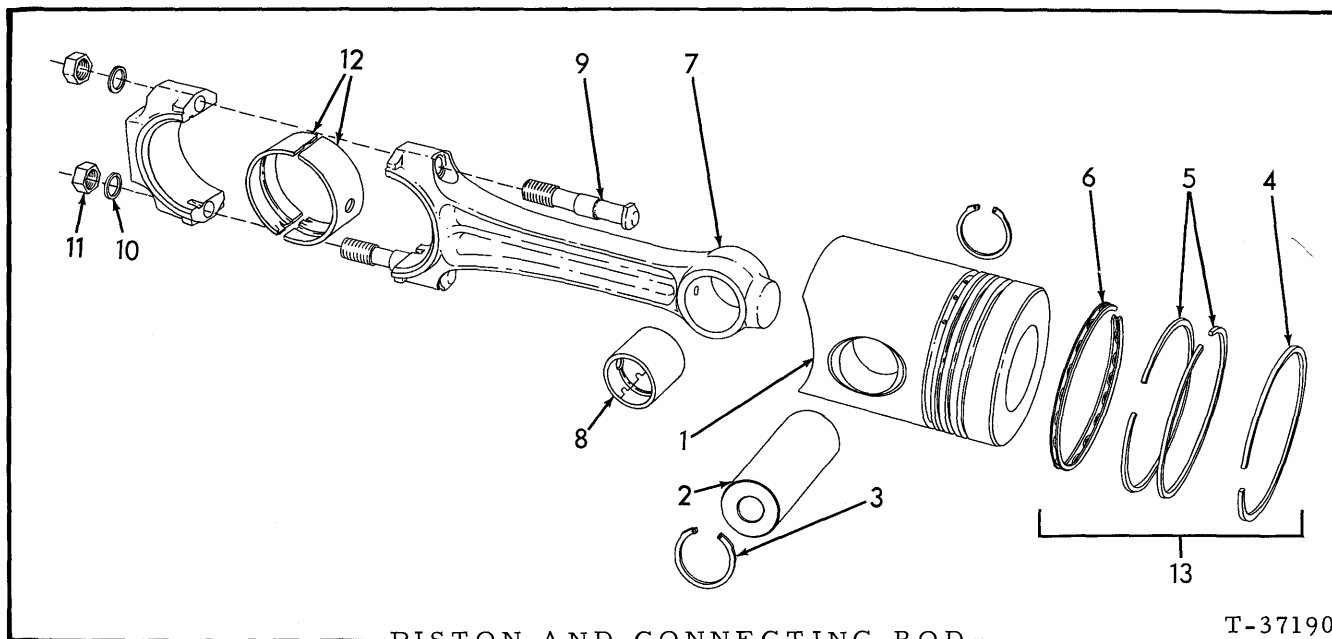

ITEM	PART NO.	QTY.	DESCRIPTION
1	4386419	6	PISTON (Used prior to engine #16-07347. Order PISTON 4388375 and RING SET 4390599)
	4388375	6	□PISTON (Effective with engine #16-07347)
2	4376792	6	PIN, piston (1" hole)(Original equipment)
	4390175	6	□PIN, piston (3/4" hole)(Service replacement only)
3	4253749	12	□RETAINER, piston pin
4	-----	6	RING, compression (top groove)
5	-----	12	RING, compression (2nd and 3rd grooves)
6	-----	6	RING, oil control (4th groove)
} Order item 13			
7	4390068	6	ROD ASSEMBLY, connecting (Includes items 8 thru 11)
8	4376986	6	BUSHING, connecting rod
9	4376804	12	BOLT, connecting rod (4-1/8" long)(Used prior to engine #16-07432)
	4388142	12	BOLT, connecting rod (4-1/4" long)(Effective with engine #16-07432)
10	4388146	12	WASHER, connecting rod bolt (Effective with engine #16-07432)
11	4390011	12	NUT, connecting rod bolt
12	4386372	12	BEARING, connecting rod (standard size)
	4386373	12	BEARING, connecting rod (.010" undersize)
	4386374	12	BEARING, connecting rod (.020" undersize)
	4386375	12	BEARING, connecting rod (.030" undersize)
	4386376	12	BEARING, connecting rod (.040" undersize)
13	4388359	6	RING SET (Consists of items 4 thru 6)(For PISTON 4386419)
	4390599	6	□RING SET (Consists of items 4 thru 6)(For PISTON 4388375)

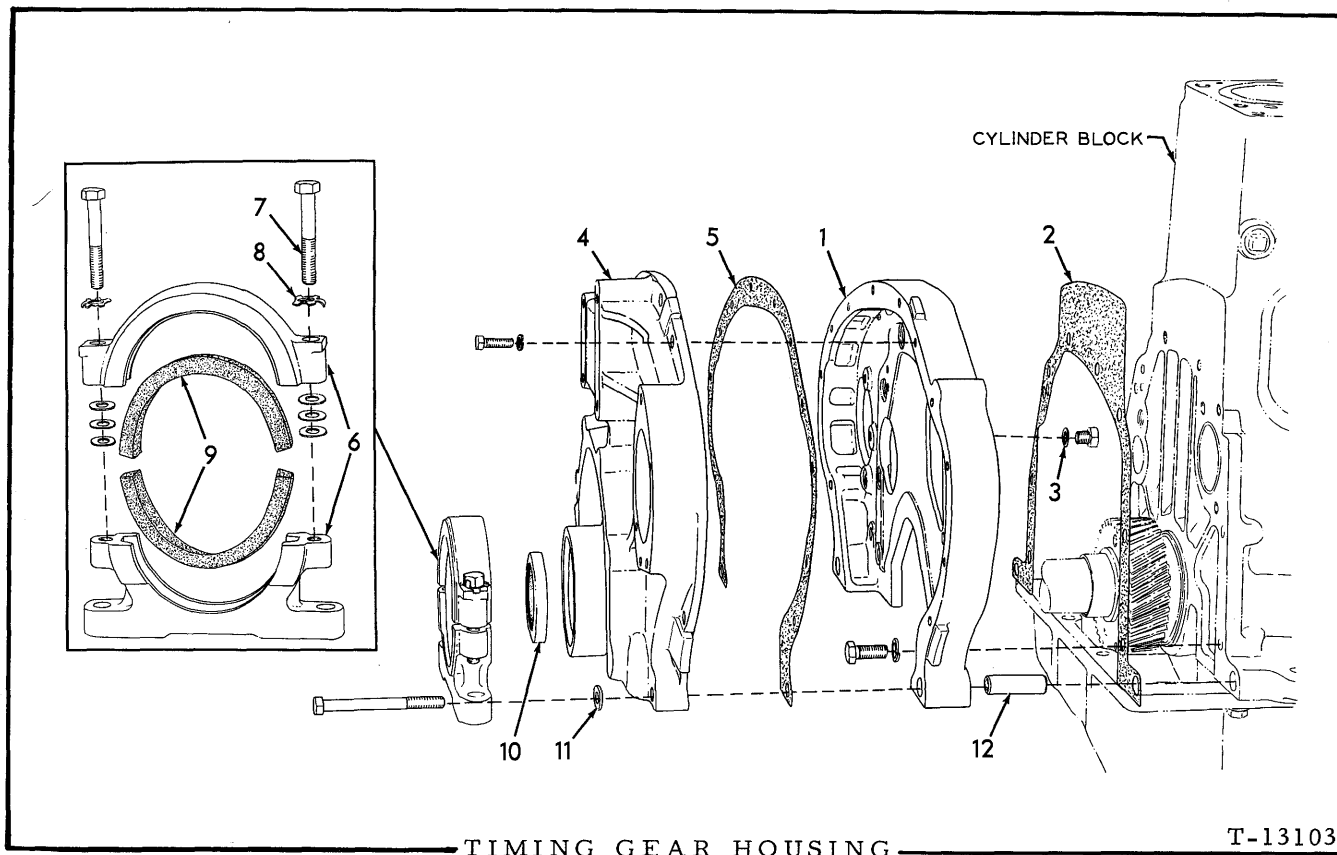


ITEM PART NO. QTY. DESCRIPTION

1	4389784	1	HOUSING
	916311	8	CAPSCREW, 1/2"NC x 1-1/4"
	904208	8	LOCKWASHER, 1/2"
2	4660492	1	□GASKET, gear housing
3	4119937	1	□GASKET, plugging capscrow
	919229	1	CAPSCREW, 1/2"NC x 1/2"
4	4387723	1	COVER, timing gear housing
	916321	2	CAPSCREW, 1/2"NC x 4-1/2"
	919224	7	CAPSCREW, 3/8"NC x 1-1/8"
	904206	7	LOCKWASHER, 3/8"
5	4376609	1	□GASKET, gear housing cover
6	4390503	1	BRACKET, engine mounting (Includes cap)
	916009	10	WASHER, plain (1/32" thick. Use as req'd)
	4254891	2	CAPSCREW, 1/2"NC x 2-1/2"
7	922510	2	(Original equipment)
			(Service replacement)
8	4252682	2	LOCKWASHER
9	4336491	2	LINER, engine mounting bracket
10	4026447	1	SEAL, oil, crankshaft
11	4371445	2	WASHER, plain, housing cover capscrow (1/2" hole)
12	4371444	2	DOWEL, hollow, gear housing

Used prior to
tractor #7928,
excluding #7926

MEMO

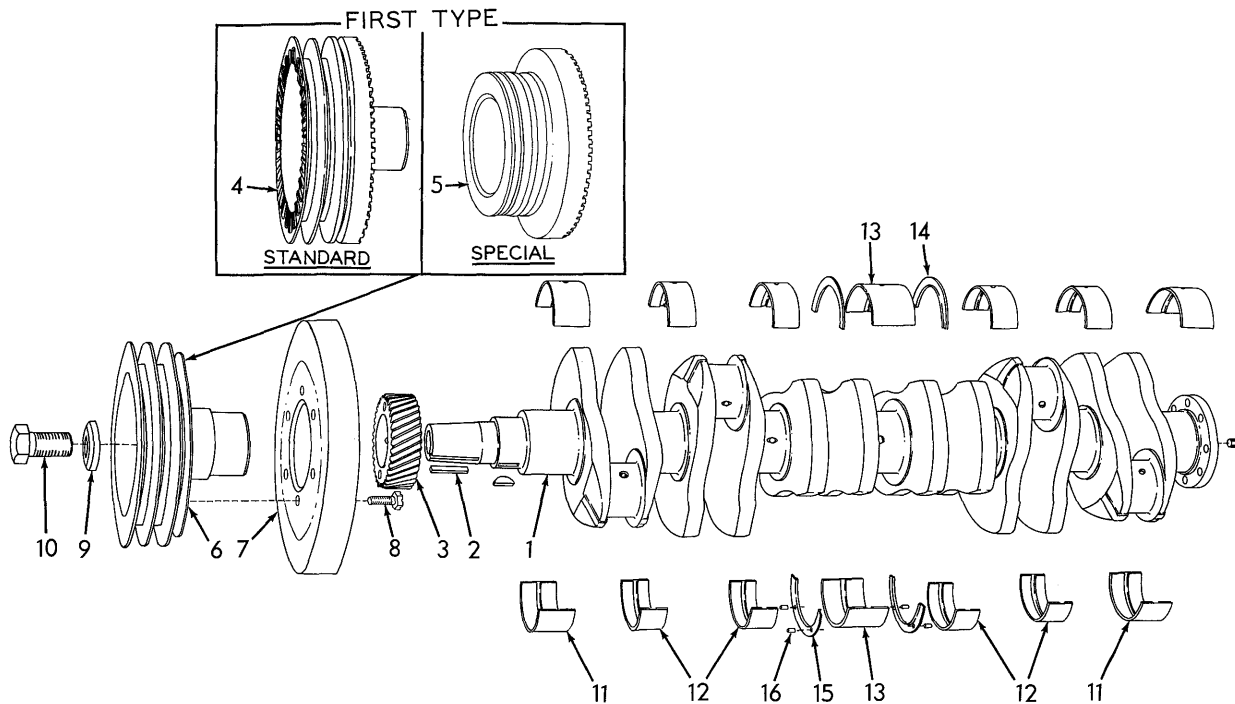

CRANKSHAFT

T-37191

ITEM	PART NO.	QTY.	DESCRIPTION
1	4391186	1	CRANKSHAFT ASSEMBLY (Includes PLUGS indented below)
	917673	6	PLUG, pipe, hex-socket, 1/8"NPT(Early units)
	907859	1	PLUG, pipe, hex-socket, 1/4"NPT
2	4362310	1	KEY, crankshaft pulley
3	4389052	1	GEAR, crankshaft
	911021	1	KEY, #25 woodruff, 5/16" x 1-1/2" (Used prior to engine #16-4089)
	905129	1	KEY, #D woodruff, 5/16" x 1-1/4" (Effective with engine #16-4089)
4	-----	1	PULLEY, crankshaft (Includes integral damper with groove for 11/16" water pump drive belt)(Used prior to engine #16-07405. Order crankshaft damper CONVERSION KIT 4390276)
5	-----	1	PULLEY, crankshaft (Includes integral damper with groove for 11/16" water pump drive belt)(Special. Used only on HD16D tractors prior to June 1965 when equipped with optional Light-duty Radiator Shell. Order PULLEY 4388244 and 1 each DAMPER 4388217, PULLEY 4388240, PULLEY 4388253, CAPSCREW 4388254, BELT 4388326, BRACKET 4388339, BRACKET 4388342, PLUG 919134; 4 BOLTS 4751643 and 6 BOLTS 4752075)
6	4388324	1	□PULLEY, crankshaft (10-3/4" diam. with groove for 1/2" water pump drive belt)(Standard on engines #16-07405 and up)
	4388244	1	PULLEY, crankshaft (9-3/4" diam. with groove for 1/2" water pump drive belt)(Special. Used only on Model HD16D tractors effective June 1965 when equipped with optional Light-duty Radiator Shell)
7	4388217	1	□DAMPER, crankshaft
8	4752075	6	□BOLT, attaching
9	4371503	1	WASHER, crankshaft pulley capscREW
10	4347897	1	CAPSCREW, crankshaft pulley (2" long)(Engines prior to #16-07405)
	4388254	1	□CAPSCREW, crankshaft pulley (2-1/2" long)(Engines #16-07405 and up)

(Continued)


CRANKSHAFT (Continued)

ITEM PART NO. QTY. DESCRIPTION

11	4387031	4	BEARING, front and rear main (standard size)
	4386480	4	BEARING, front and rear main (.010" undersize)
	4386481	4	BEARING, front and rear main (.020" undersize)
	4386482	4	BEARING, front and rear main (.030" undersize)
	4386483	4	BEARING, front and rear main (.040" undersize)
12	4387032	8	BEARING, intermediate main (standard size)
	4386473	8	BEARING, intermediate main (.010" undersize)
	4386474	8	BEARING, intermediate main (.020" undersize)
	4386475	8	BEARING, intermediate main (.030" undersize)
	4386476	8	BEARING, intermediate main (.040" undersize)
13	4386874	1	BEARING KIT, center main (standard size)
	4386875	1	BEARING KIT, center main (.010" undersize)
	4386876	1	BEARING KIT, center main (.020" undersize)
	4386877	1	BEARING KIT, center main (.030" undersize)
	4386878	1	BEARING KIT, center main (.040" undersize)

NOTE: Each Bearing Kit listed above includes upper and lower bearings, set of standard thrust flanges and dowel pins.

14	4386360	2	FLANGE, thrust, center main, upper (standard size)
	4386456	2	FLANGE, thrust, center main, upper (.005" oversize)
	4386457	2	FLANGE, thrust, center main, upper (.010" oversize)
	4386458	2	FLANGE, thrust, center main, upper (.015" oversize)
15	4386359	2	FLANGE, thrust, center main, lower (standard size)
	4386453	2	FLANGE, thrust, center main, lower (.005" oversize)
	4386454	2	FLANGE, thrust, center main, lower (.010" oversize)
	4386455	2	FLANGE, thrust, center main, lower (.015" oversize)
16	4250898	4	PIN, dowel, thrust flange

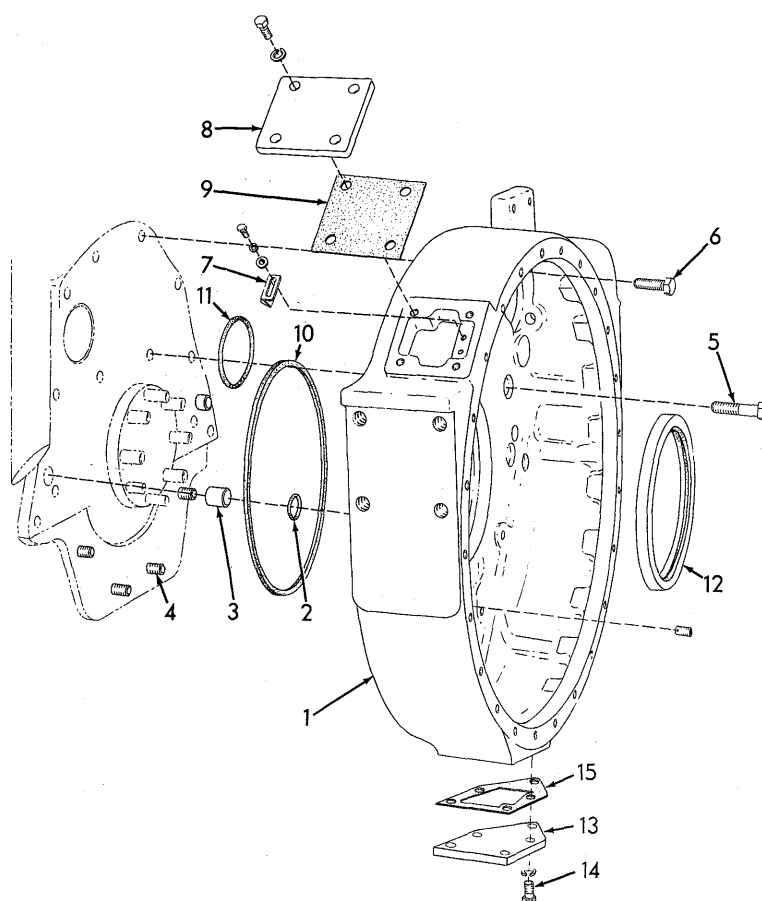

FLYWHEEL HOUSING

T-39365


ITEM	PART NO.	QTY.	DESCRIPTION
1	4386149	1	HOUSING, flywheel (Used prior to tractor #6308 on Model HD16D and prior to #6062 on Model HD16DC)
	920132	1	PLUG, pipe, 1/2"NPT
	4388551	1	HOUSING, flywheel (Model HD16D tractors #6308 and up; also Model HD16DC tractors #6062 and up)
	922884	1	SETSCREW, hex-socket, cup-point, Nylok, 7/16"NC x 1/2"
2	4251974	2	□ O-RING, housing dowel
3	4373716	2	DOWEL, housing to crankcase
4	4379198	4	CAPSCREW, oil pan to housing (Nylok, 1/2"NC x 1-3/8")
5	4255335	2	BOLT, housing to crankcase (self-locking, 1/2"NC x 2")
6	4255334	8	BOLT, housing to crankcase (self-locking, 1/2"NC x 1-3/8")
7	4386651	1	POINTER, timing
	916284	2	CAPSCREW, 1/4"NC x 1/2"
	904204	2	LOCKWASHER, 1/4"
	911114	2	WASHER, plain, SAE std., 1/4"

(Continued)

FLYWHEEL HOUSING (Continued)


ITEM	PART NO.	QTY.	DESCRIPTION
8	4386650	1	COVER, timing hole
	915813	4	CAPSCREW, 5/16"NC x 7/8"
	904205	4	LOCKWASHER, 5/16"
9	4387943	1	□GASKET, timing hole cover
10	4336897	1	□RING, sealing, housing to crankcase (large)
11	923936	1	□O-RING, housing to crankcase (small)
12	4387509	1	SEAL, oil, crankshaft flange
13	641631	1	COVER, bottom
14	035061	5	CAPSCREW, 1/2"NC x 1-1/4"
	904208	5	LOCKWASHER, 1/2"
15	640636	1	GASKET, bottom cover

Used on HD16DC tractors
#6062 thru #6175; also
on HD16D tractors #6308
thru #6447

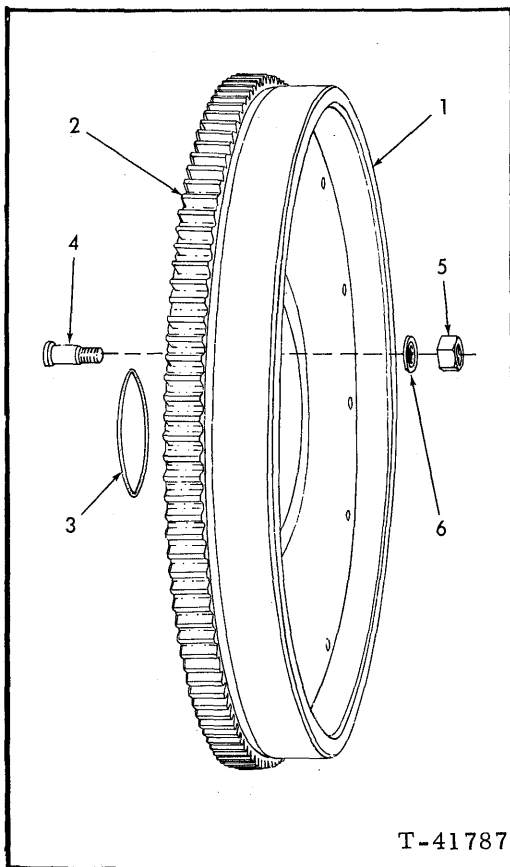

FLYWHEEL

ITEM	PART NO.	QTY.	DESCRIPTION
1	4387181	1	FLYWHEEL ASSEMBLY (Includes item 2)(Model HD16D)
	4387180	1	FLYWHEEL ASSEMBLY (Includes item 2)(Model HD16DC)
2	4303694	1	GEAR, ring
3	923586	1	□O-RING, flywheel to crankshaft
4	4389201	8	BOLT, flywheel
5	4387026	8	NUT, flywheel bolt
6	4389910	8	□WASHER, sealing

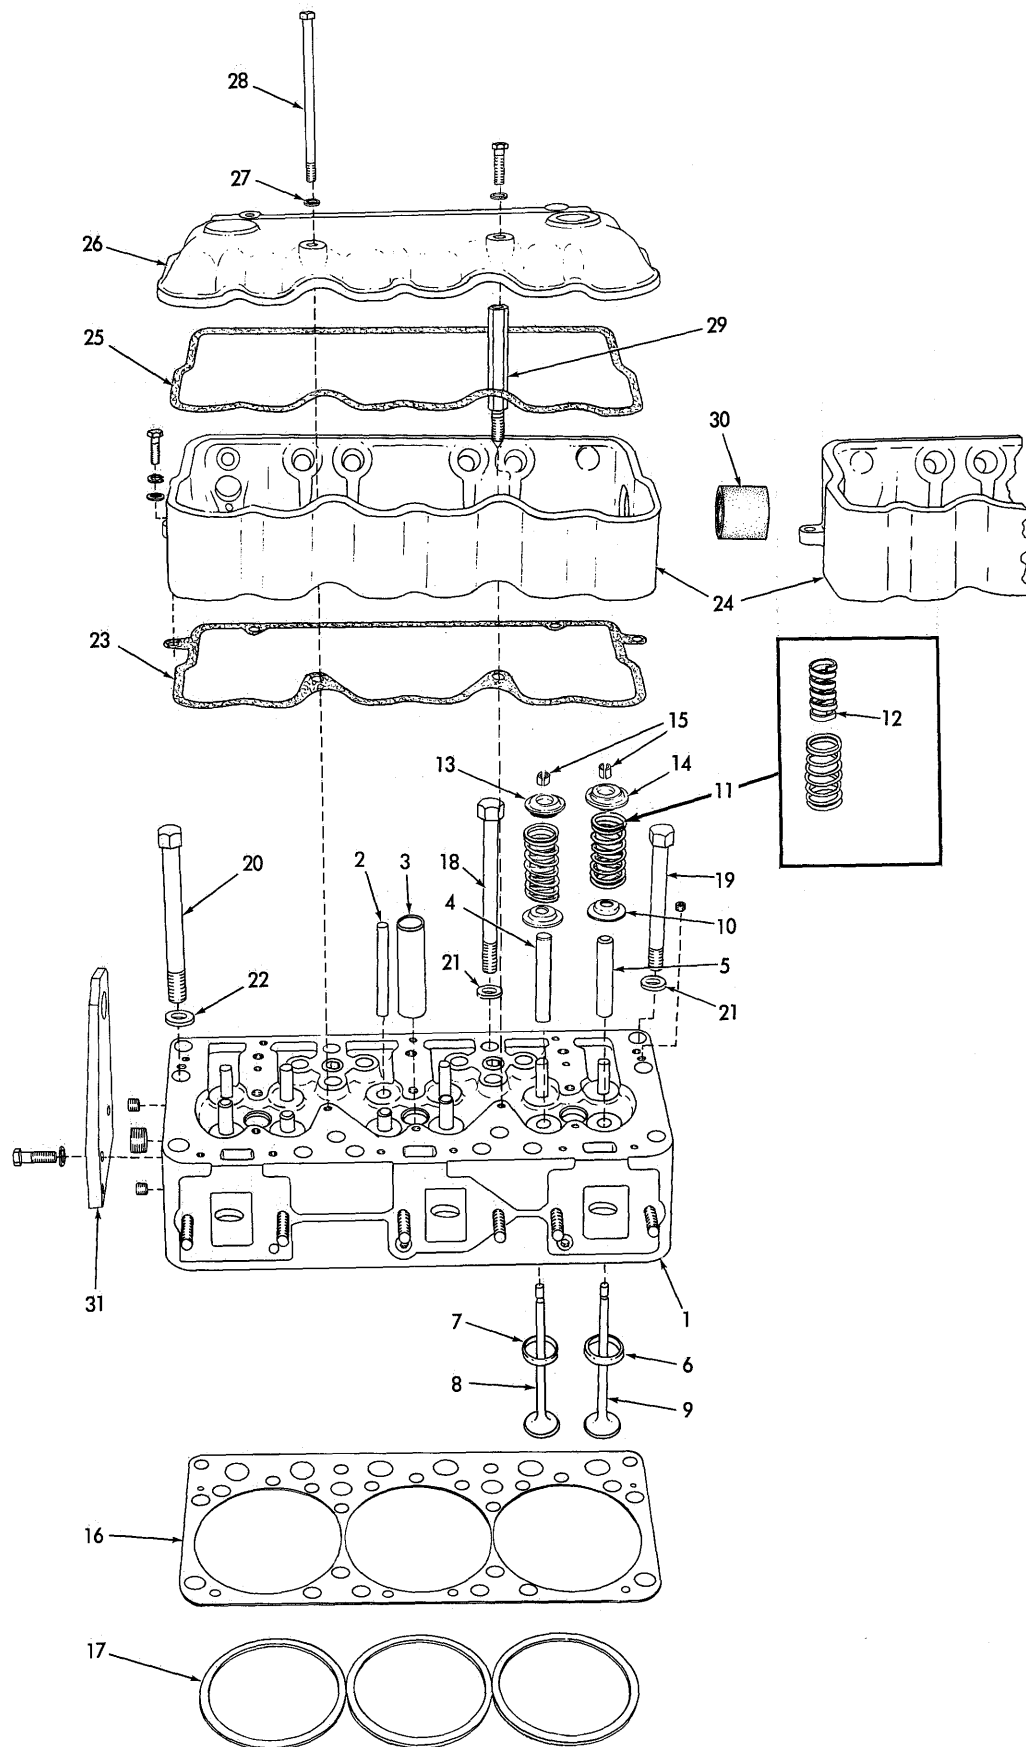

— CYLINDER HEAD —

T-37183

CYLINDER HEAD


* Original equipment
 ** Service replacement

ITEM	PART NO.	QTY. * **	DESCRIPTION
1	-----	2 -	HEAD ASSEMBLY, cylinder (Order HEAD ASSEMBLY 4390675, 6 VALVE 4390677 and 6 RETAINER 4390678)
	4390675	- 2	HEAD ASSEMBLY, cylinder (Includes items 2 thru 7 and plugs indented below)
	917673	8 8	PLUG, pipe, hex-socket, 1/8"NPT
	907070	4 -	PLUG, pipe, ctsk-hd., 1/4"NPT (Early units only)
	918851	8 8	PLUG, pipe, hex-socket, 3/4"NPT
2	4386413	12 12	PIN, guide, valve bridge
3	4376484	6 6	SLEEVE, injection nozzle
4	4385301	12 12	GUIDE, intake valve
5	4386624	12 12	GUIDE, exhaust valve
6	4386625	12 -	INSERT, exhaust valve seat (standard size)
	4390679	- 12	INSERT, exhaust valve seat (standard size)
	4386654	12 -	INSERT, exhaust valve seat (.005" oversize)
	4390734	- 12	INSERT, exhaust valve seat (.005" oversize)
7	4386628	12 12	INSERT, intake valve seat (standard size)
	4386653	12 12	INSERT, intake valve seat (.005" oversize)
8	4386790	12 12	VALVE, intake
9	4386791	12 -	VALVE, exhaust (45°)
	4390677	- 12	VALVE, exhaust (30°)
10	4389685	24 24	SEAT, valve spring
11	4389294	24 24	SPRING ASSEMBLY, valve (Includes item 12)(If for engines prior to #16-05316 also replace item 10)
12	4389293	24 24	DAMPER, valve spring
13	4389397	12 12	ROTOCOIL ASSEMBLY, intake valve (Serviced only as a unit)
14	4389397	12 -	ROTOCOIL ASSEMBLY, exhaust valve (Serviced only as a unit)
	4390678	- 12	RETAINER, exhaust valve spring
15	4376497	48 48	LOCK, valve stem
16	4390170	2 2	□GASKET ASSEMBLY, cylinder head (Includes item 17)
17	4390043	6 6	□GASKET, cylinder sealing
18	4388520	30 30	CAPSCREW, cylinder head (5/8"NC x 7")
19	4388521	2 2	CAPSCREW, cylinder head (5/8"NC x 6")
20	4389821	8 8	CAPSCREW, cylinder head (3/4"NC x 7-1/4")

(Continued)

CYLINDER HEAD (Continued)


ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
21	4391160	32	32	WASHER, cylinder head capscrew (5/8" hole)
22	4391161	8	8	WASHER, cylinder head capscrew (3/4" hole)
23	4389960	2	2	□GASKET, lower cover
24	4386597	1	1	COVER, lower section, front
	4386598	1	1	COVER, lower section, rear
	916272	4	4	CAPSCREW, 3/8"NC x 1-1/4"
	904206	4	4	LOCKWASHER, 3/8"
	913544	4	4	WASHER, plain
25	4389961	2	2	□GASKET, rocker cover
26	4386901	2	2	COVER, rocker
	914847	1	1	CAPSCREW, 3/8"NC x 1-1/2" (rear cover only)
27	4254873	8	8	□WASHER, sealing, rocker cover capscrew
28	4386421	7	7	CAPSCREW, rocker cover
29	4389965	1	1	BOLT, extension, rear lower cover
30	4386941	1	1	COUPLING, breather, cylinder head cover
31	4387976	2	2	EYE, engine lifting
	916311	6	6	CAPSCREW, 1/2"NC x 1-1/4"
	904208	6	6	LOCKWASHER, 1/2"

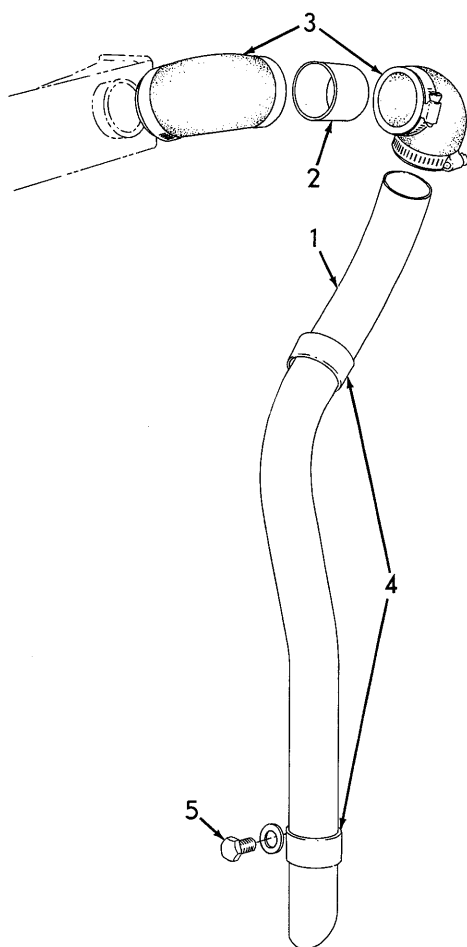

ENGINE BREATHER

T-37182

ITEM	PART NO.	QTY.	DESCRIPTION
1	4387675	1	TUBE, breather
2	4387560	1	TUBE, elbow connecting
3	4255351	2	ELBOW, rubber
	4255011	4	CLAMP, hose
4	4255361	2	CLAMP, tube supporting
5	921865	1	CAPSCREW, Nylok, 1/2"NC x 1"
	910244	1	WASHER, plain, SAE std., 1/2"

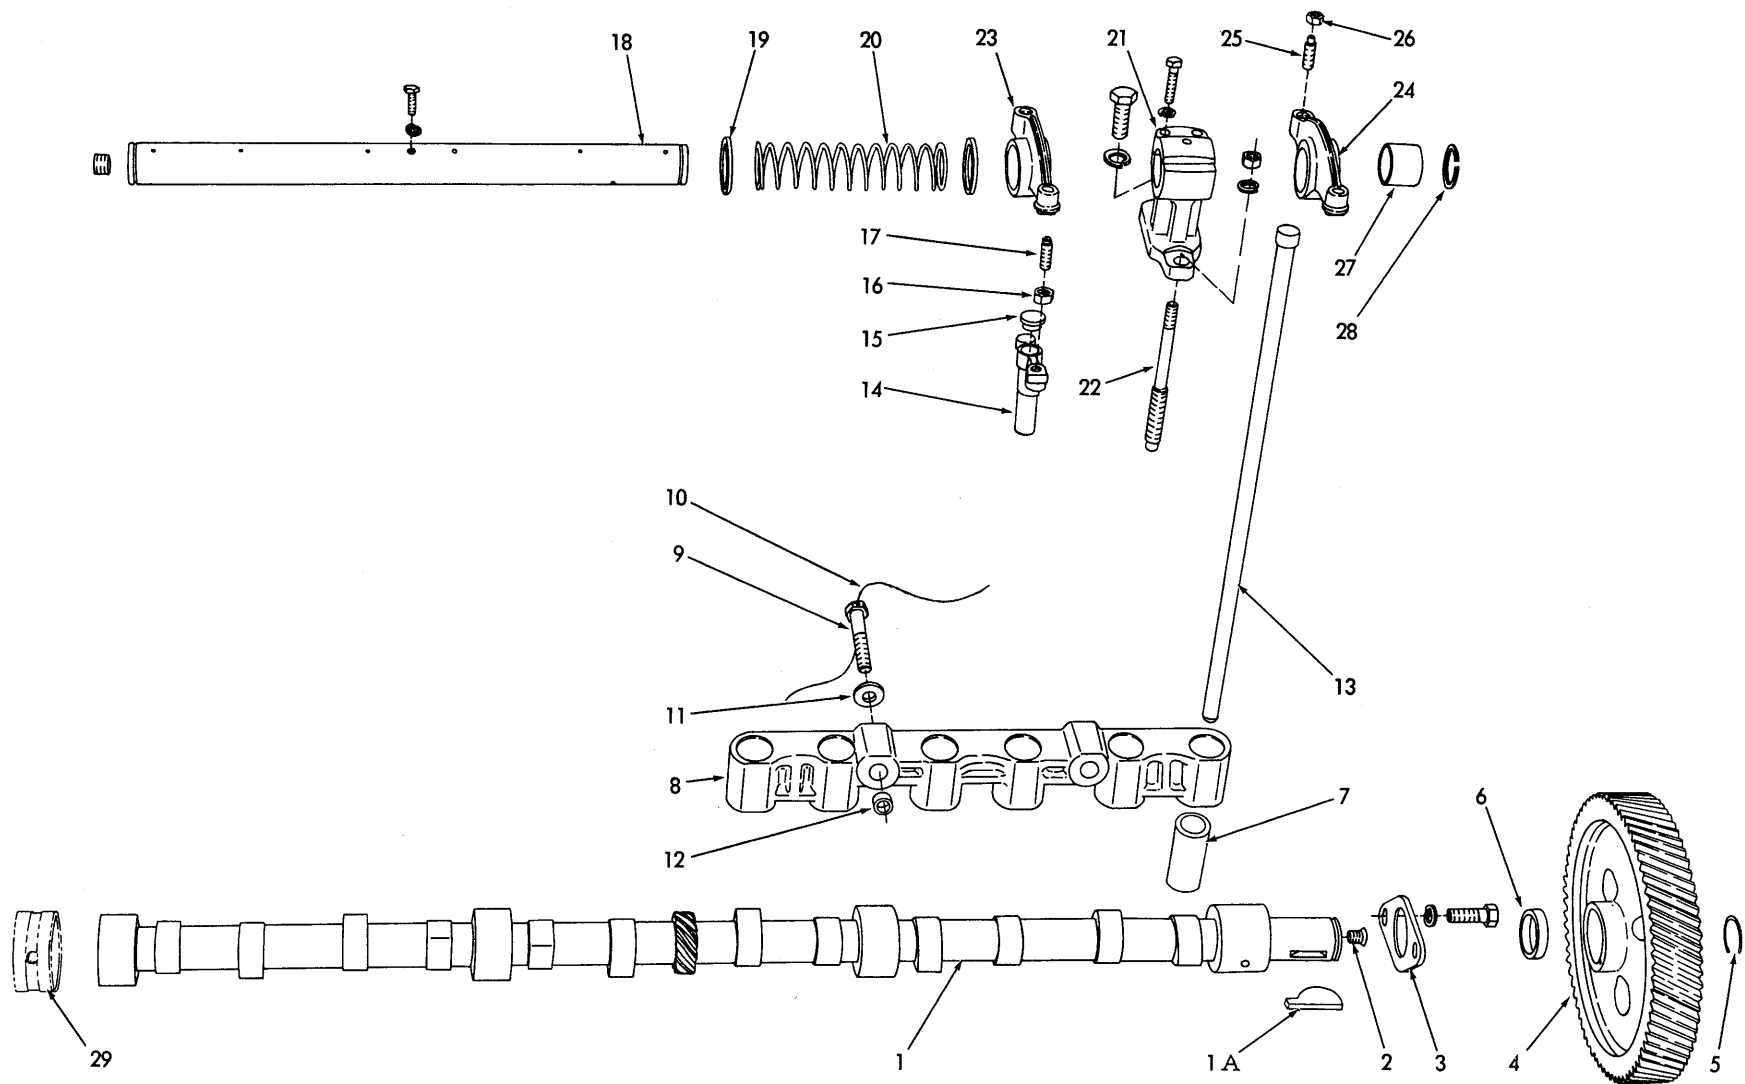

VALVE OPERATING MECHANISM

T-37184

VALVE OPERATING MECHANISM

ITEM	PART NO.	QTY.	DESCRIPTION
1	4390217	1	CAMSHAFT
1A	923738	1	KEY, camshaft gear
2	4001318	1	PLUG, camshaft oil hole
3	4386776	1	PLATE, thrust
	916311	2	CAPSCREW, 1/2"NC x 1-1/4"
	904208	2	LOCKWASHER, 1/2"
4	4390661	1	GEAR, camshaft
5	4254295	1	RING, snap, gear retaining
6	4387469	1	SPACER, camshaft gear (Used prior to engine #16-06899)
7	4389645	12	LIFTER, valve
8	4386787	1	BRACKET, valve lifter, front
	4386788	1	BRACKET, valve lifter, rear
9	4376278	4	CAPSCREW, drilled-hd., 1/2"NC x 3"
10	4374018	2	WIRE, locking, 1/16" x 20"
11	4376277	4	WASHER, valve lifter bracket capscrow
12	4303038	4	DOWEL, valve lifter bracket
13	4386414	12	ROD, push
14	4390270	12	BRIDGE ASSEMBLY, valve (Includes items 15 thru 17)
15	4376538	12	INSERT, valve bridge
16	4348440	12	NUT, valve bridge adjustment screw
17	4390254	12	SCREW, valve bridge adjustment
18	4390117	2	SHAFT ASSEMBLY, rocker arm (Includes PLUGS indented below)
	918887	4	PLUG, pipe, hex-socket, 3/8"NPT
	915406	2	CAPSCREW, 1/4"NC x 3/4"
	904204	2	LOCKWASHER, 1/4"
19	4386406	8	RETAINER, rocker arm
20	4386405	4	SPRING, rocker shaft
21	4389317	6	BRACKET, rocker shaft
	916311	6	CAPSCREW, 1/2"NC x 1-1/4" (attaching)
	904208	6	LOCKWASHER, 1/2"
	915807	12	CAPSCREW, 5/16"NC x 1-1/4" (clamping)
	904205	12	LOCKWASHER, 5/16"
22	4377541	6	STUD, rocker shaft bracket (Also retains injection nozzle holder)
	910325	6	NUT, 1/2"NC
	904208	6	LOCKWASHER, 1/2"

(Continued)

VALVE OPERATING MECHANISM (Continued)




ITEM	PART NUMBER	QTY.	DESCRIPTION
23	4386398	4	ARM ASSEMBLY, rocker, intake valve Nos. 1, 2, 4, 5
	4386401	2	ARM ASSEMBLY, rocker, exhaust valve Nos. 3, 6
24	4386392	4	ARM ASSEMBLY, rocker, exhaust valve Nos. 1, 2, 4, 5,
	4386395	2	ARM ASSEMBLY, rocker, intake valve Nos. 3, 6
<u>NOTE:</u> Each Arm Assembly listed above includes items 25 thru 27			
25	4336646	12	SCREW, valve lash adjustment
26	4348440	12	NUT, adjustment screw
27	4388428	12	BUSHING, rocker arm
28	4253190	4	RING, snap, rocker arm shaft
29	-----	--	BEARING, camshaft (See CYLINDER BLOCK)

ACCESSORY DRIVE

* Model HD16D
** Model HD16DC

ITEM	PART NO.	QTY. * **		DESCRIPTION
1	4389108	1	-	DRIVE ASSEMBLY (Used prior to engine #16-05532)
	-----	1	-	DRIVE ASSEMBLY (Effective with engine #16-05532. Order DRIVE ASSEMBLY 4388259, 3 STUDS 4389141 and 2 SETSCREWS 922741)
	-----	-	1	DRIVE ASSEMBLY (Used prior to engine #16-05531. Order DRIVE ASSEMBLY 4388259 and item 43)
	4388259	-	1	DRIVE ASSEMBLY (Effective with engine #16-05531)
	921520	8	8	CAPSCREW, Nylok, 3/8"NC x 7/8"
<u>NOTE:</u> Each DRIVE ASSEMBLY consists of items 7 thru 39)				
2	4376603	1	1	□ GASKET, accessory drive to gear housing
3	4376605	1	-	GASKET, housing cover plate
	4386826	-	1	GASKET, housing cover plate
4	-----	1	-	PLATE, housing cover
	904205	3	-	LOCKWASHER, 5/16"
	910323	3	-	NUT, 5/16"NC
	-----	-	1	PLATE, housing cover
	904206	-	5	LOCKWASHER, 3/8"
	910123	-	5	NUT, 3/8"NF
For shipping only				
5	4367090	1	1	□ GASKET, tachometer hole nut
6	4371118	1	1	NUT, cover, tachometer hole
7	4371740	1	1	SHAFT, upper (slotted end)(Used prior to engine #16-05531)
	4388889	1	1	SHAFT, upper (splined end)(Effective with engine #16-05531)
	917409	2	2	KEY, #9 woodruff, 3/16" x 3/4"
	923280	1	1	KEY, hi-pro, 3/16" x 15/16"
8	4389055	1	1	GEAR, accessory drive
9	4368154	1	1	WASHER, thrust, upper shaft, front
	917014	2	2	PIN, dowel, 1/8" x 3/8"
10	4376671	1	1	NUT, auxiliary drive gear shaft
11	4389986	1	1	WASHER, auxiliary drive gear shaft
12	923574	1	1	O-RING, auxiliary drive gear shaft
13	4376598	1	1	WASHER, thrust, auxiliary drive gear
	917014	2	2	PIN, dowel, 1/8" x 3/8"
14	4362726	2	2	SHIM, upper shaft, end-play adjustment (laminated)
15	4388154	1	1	WASHER, thrust, rear
16	4364404	1	1	GEAR, upper shaft (14 teeth)
17	4376596	1	1	BUSHING, auxiliary drive gear
18	4377122	1	1	GEAR ASSEMBLY, auxiliary drive (Includes item 17)

(Continued)

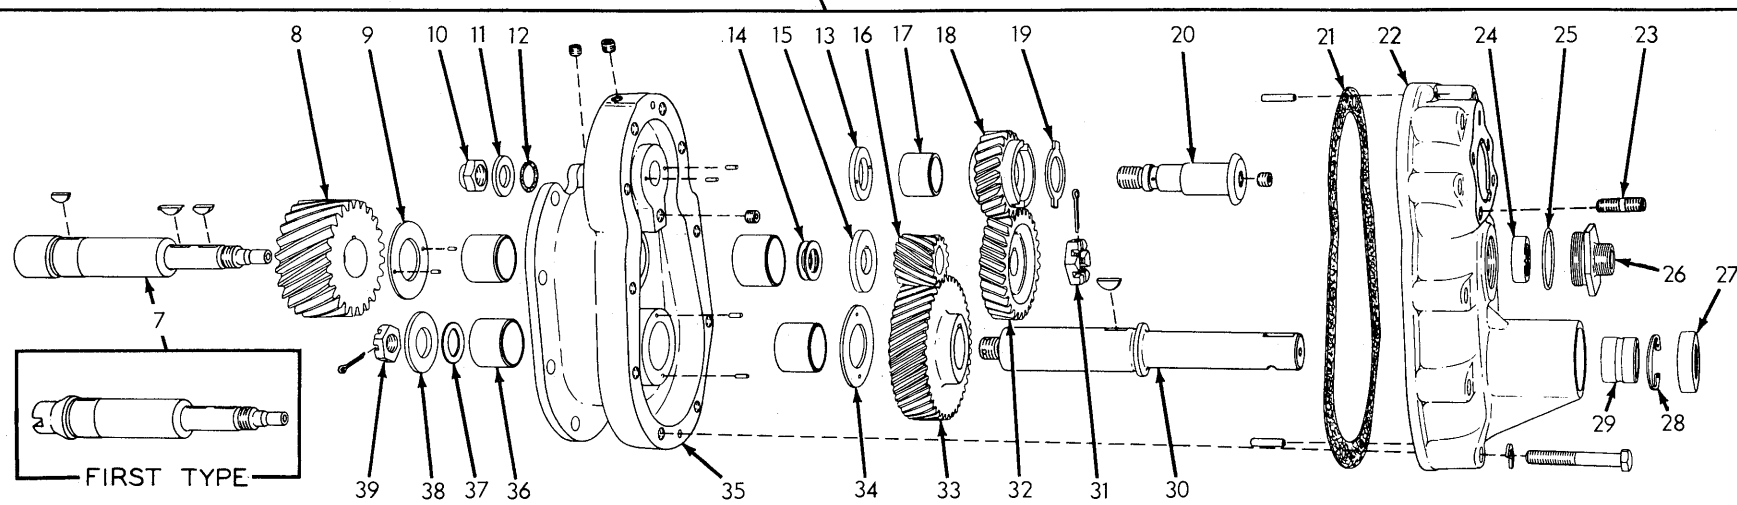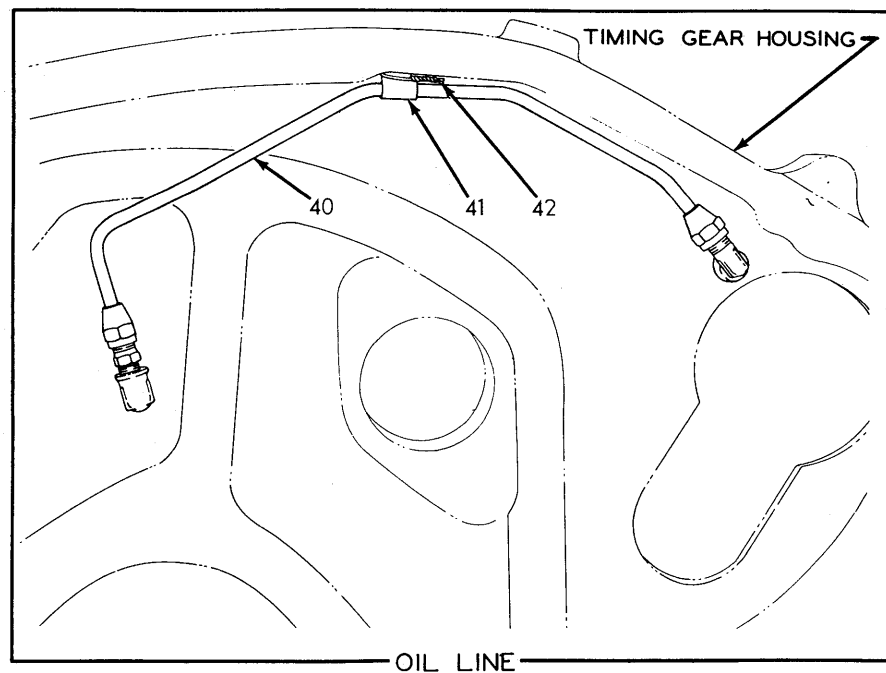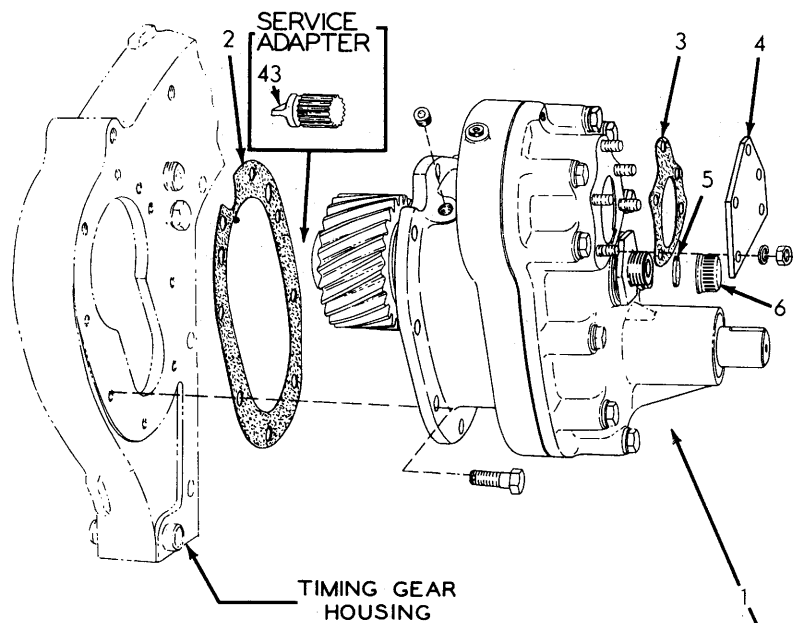

ACCESSORY DRIVE

T-39416

ACCESSORY DRIVE (Continued)


ITEM	PART NO.	QTY. * **		DESCRIPTION
19	4376599	1	1	PLATE, thrust, auxiliary drive gear
20	4376591	1	1	SHAFT ASSEMBLY, auxiliary drive (Includes PLUG indented below)
	917673	1	1	PLUG, pipe, hex-socket, 1/8"NPT
21	4376604	1	1	GASKET, cover
22	4377276	1	-	COVER ASSEMBLY, housing (Includes item 29)
	4386711	-	1	COVER ASSEMBLY, housing (Includes item 29)
	912069	10	10	CAPSCREW, 3/8"NC x 2-1/2"
	904206	10	10	LOCKWASHER, 3/8"
	917023	2	2	PIN, dowel, 1/4" x 1"
23	4376667	3	-	STUD, pump attachment (5/16"NC x 1-1/4") (Original equipment)
	4389141	3	-	STUD, pump attachment (5/16"NC x 3/8"NC x 1-1/4")
	922741	2	-	SETSCREW, hex-socket, cup-pt., Nylok, 3/8"NC x 1/2" (For plugging unused stud holes)
	4389599	-	5	STUD, pump attachment (3/8"NC x 3/8"NF x 1-3/8")
24	4368323	1	1	SEAL, oil, upper shaft
25	4251601	1	1	GASKET, tachometer drive adapter
26	4365627	1	1	ADAPTER, tachometer drive
27	4386879	1	1	SEAL, oil, lower shaft
28	4254742	1	1	RING, snap, bushing retaining
29	4377278	1	1	BUSHING, housing cover
30	4376702	1	1	SHAFT, lower
	917409	1	1	KEY, #9 woodruff, 3/16" x 3/4"
31	4369751	1	1	NUT, upper shaft
	900808	1	1	PIN, cotter, 1/8" x 1-1/2"
32	4376590	1	1	GEAR, driving, fuel transfer pump
33	4369712	1	1	GEAR, lower shaft (42 teeth)
34	4368154	1	1	WASHER, thrust, lower shaft, rear
	917014	2	2	PIN, dowel, 1/8" x 3/8"
35	4376602	1	1	HOUSING ASSEMBLY, (Includes item 36)
	917673	4	4	PLUG, pipe, hex-socket, 1/8"NPT
36	4369746	4	4	BUSHING, accessory drive housing
37	4362726	1	1	SHIM, lower shaft end-play adjustment (laminated)
38	4364166	1	1	WASHER, thrust, lower shaft, front
39	4371119	1	1	NUT, lower shaft
	900808	1	1	PIN, cotter, 1/8" x 1-1/2"

Used for
service
adaptations
only

(Continued)

ACCESSORY DRIVE (Continued)


ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
40	4376627	1	1	TUBE, ASSEMBLY, lubricating oil (Includes nuts)
	910141	1	1	CONNECTOR, flare type, 1/4" tube, 1/8"NPT male
	913475	1	1	ELBOW, flare type, 1/4" tube, 1/8"NPT female
	917841	1	1	NIPPLE, pipe, 1/8"NPT x 7/8"
	907013	1	1	ELBOW, street, brass, 90°, 1/8"NPT
41	4361829	1	1	CLIP, tube supporting
42	4335669	1	1	CAPSCREW, drilled-hd., 1/4"NC x 1/2"
	904204	1	1	LOCKWASHER, 1/4"
	4348691	1	1	WIRE, locking, #18 x 6"
43	4389393	1	1	ADAPTER, pump drive (Used to adapt SHAFT 4388889 as service substitute for SHAFT 4371740)

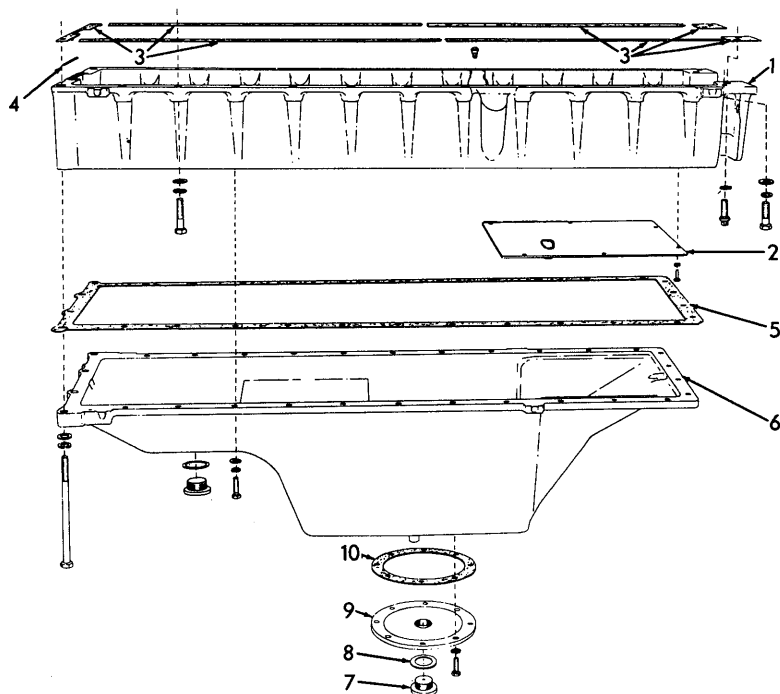

I-39379

OIL PAN

ITEM	PART NO.	QTY.	DESCRIPTION
1	4385778	1	PAN, oil, upper section
	919840	1	PLUG, pipe, hex-hd., 1/4"NPT
	916314	23	CAPSCREW, 1/2"NC x 2"
	915987	1	CAPSCREW, 1/2"NC x 1-1/2"
	912476	24	WASHER, plain
	904208	24	LOCKWASHER, 1/2"
	922065	2	SCREW, 12-pt. head, 1/2"NC x 1-1/4"
2	4385796	1	PLATE, oil baffle
	915343	6	CAPSCREW, 1/4"NC x 5/8"
	904204	6	LOCKWASHER, 1/4"
3	4365129	1	GASKET SET, upper oil pan
4	4379070	1	SEAL, oil
5	4385781	1	GASKET SET, lower oil pan
6	4389849	1	PAN, oil, lower section
	914847	26	CAPSCREW, 3/8"NC x 1-1/2"
	904206	26	LOCKWASHER, 3/8"
	911115	26	WASHER, plain, SAE std., 3/8"
	916326	4	CAPSCREW, 1/2"NC x 7-1/2"
	904208	4	LOCKWASHER, 1/2"
	912476	4	WASHER, plain
7	035250	2	PLUG, oil drain
8	035249	2	GASKET, drain plug
9	4371255	1	PLATE, clean-out hole
	919224	8	CAPSCREW, 3/8"NC x 1-1/8"
	904206	8	LOCKWASHER, 3/8"
10	4371289	1	GASKET, clean-out hole plate

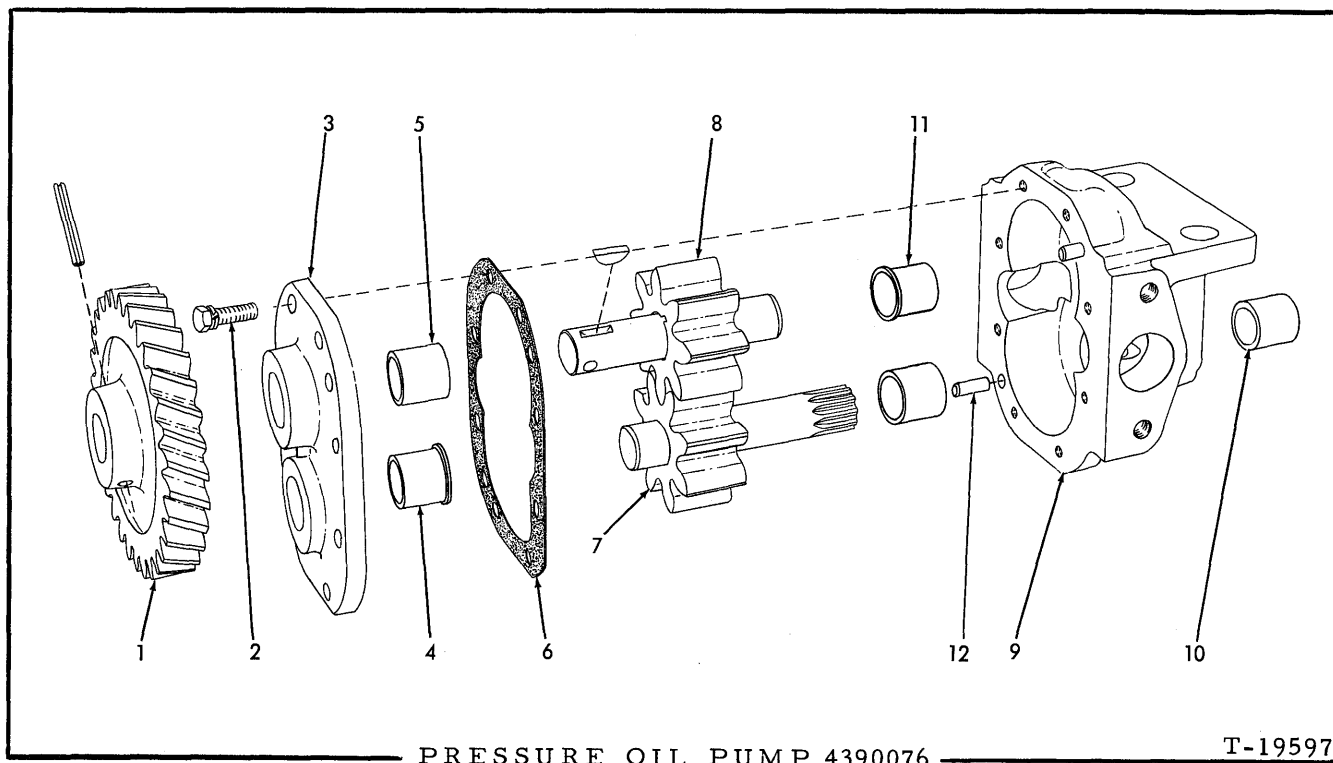


PRESSURE OIL PUMP 4390076

T-19597


USAGE: See page 41

ITEM	PART NO.	QTY.	DESCRIPTION
1	4389054	1	GEAR, driving
	915989	1	PIN, spring, 3/16" x 1-3/8"
	910224	1	KEY, #6 woodruff, 5/32" x 5/8"
2	923408	8	CAPSCREW, pump cover (Includes lockwasher)
3	4377037	1	COVER ASSEMBLY (Includes items 4 and 5)
4	4377038	1	BUSHING, pump cover (flanged)
5	4371270	1	BUSHING, pump cover (plain)
6	4371300	1	GASKET, cover
7	4379415	1	SHAFT AND GEAR ASSEMBLY, lower
8	4390078	1	SHAFT AND GEAR ASSEMBLY, upper
9	4390075	1	BODY ASSEMBLY (Includes items 10 thru 12)
10	4371270	2	BUSHING, pump body (plain)
11	4377039	1	BUSHING, pump body (flanged)
12	917555	2	PIN, dowel, pump body

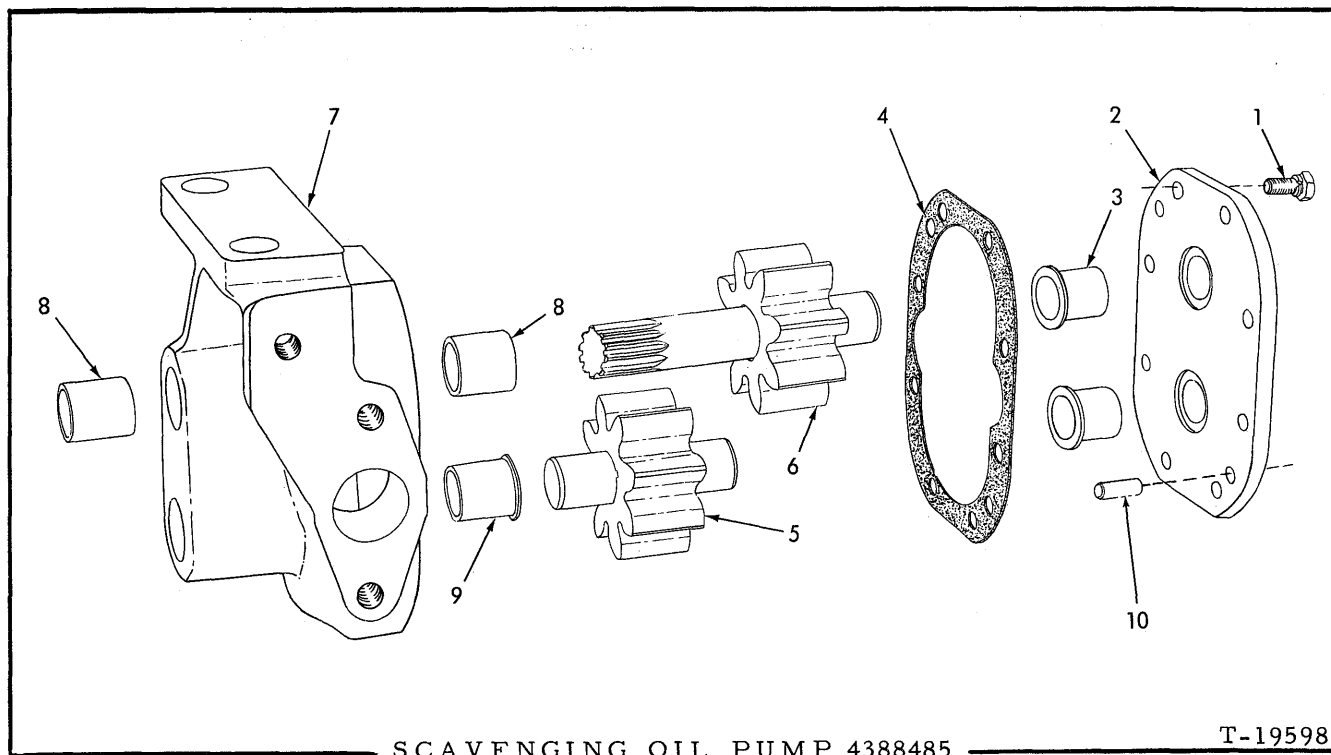

USAGE: See page 41

ITEM	PART NO.	QTY.	DESCRIPTION
1	923408	8	CAPSCREW, pump cover (Includes lockwasher)
2	4377050	1	COVER ASSEMBLY (Includes item 3)
3	4377039	2	BUSHING, pump cover
4	4371300	1	GASKET, pump cover
5	4377054	1	SHAFT AND GEAR ASSEMBLY, lower
6	4379610	1	SHAFT AND GEAR ASSEMBLY, upper
7	4388486	1	BODY ASSEMBLY (Includes items 8 thru 10)
8	4371270	2	BUSHING, pump body (plain)
9	4377039	1	BUSHING, pump body (flanged)
10	917555	2	PIN, dowel, pump body

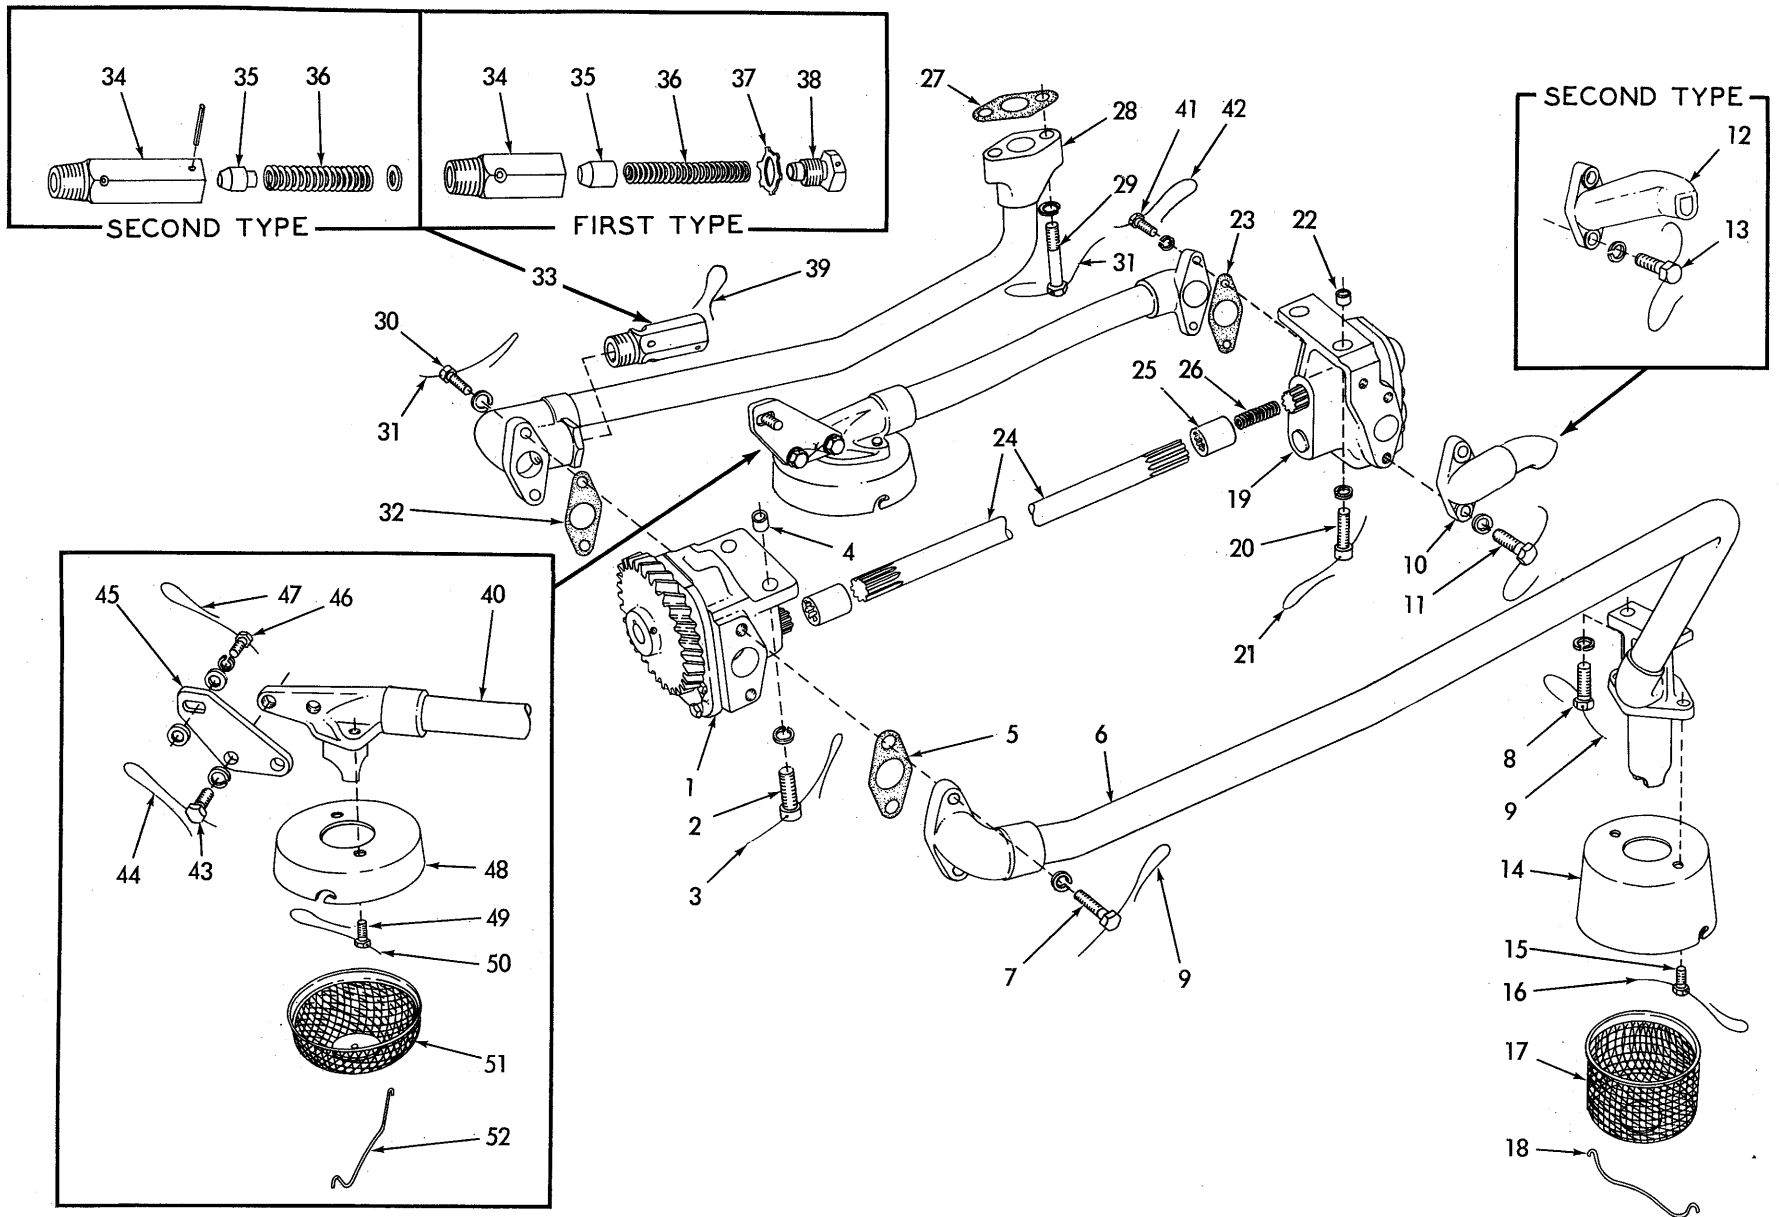


OIL PUMPS

ITEM	PART NO.	QTY.	DESCRIPTION
1	4390076	1	PUMP ASSEMBLY, pressure (See page 38 for parts)
2	4374547	2	CAPSCREW, drilled-hd., 7/16"NC x 1-1/2"
	904207	2	LOCKWASHER, 7/16"
3	4509035	1	WIRE, locking, #18 x 10"
4	4371253	2	DOWEL, hollow, pressure pump
5	4371345	1	□GASKET, pressure pump suction line
6	4385955	1	TUBE, suction, pressure pump
7	4378558	2	CAPSCREW, drilled-hd., 3/8"NC x 1-1/8"
	904206	2	LOCKWASHER, 3/8"
8	4377201	2	CAPSCREW, drilled-hd., 7/16"NC x 1-1/4"
	904207	2	LOCKWASHER, 7/16"
9	4509035	2	WIRE, locking, #18 x 10"
10	4390195	1	TUBE, discharge, scavenging pump (Engines prior to #16-08037)
11	4378558	2	CAPSCREW, drilled-hd., 3/8"NC x 1-1/8"
	904206	2	LOCKWASHER, 3/8"
	4509035	1	WIRE, locking, #18 x 10"
12	4388488	1	TUBE, discharge, scavenging pump (Engines #16-08037 and up)
13	4335610	2	CAPSCREW, drilled-hd., 3/8"NC x 1"
	904206	2	LOCKWASHER, 3/8"
	4509035	1	WIRE, locking, #18 x 10"
14	4389732	1	COVER, pressure pump oil screen
15	4374129	2	CAPSCREW, drilled-hd., 5/16"NC x 3/4"
16	4509035	1	WIRE, locking, #18 x 10"
17	4374127	1	SCREEN, pressure oil pump
18	4376294	1	RETAINER, pressure oil pump screen
19	4388485	1	PUMP ASSEMBLY, scavenging (See page 39 for parts)(If for engines prior to #16-08037 also order TUBE 4388488 and 2 CAPSCREWS 4335610)
20	4374547	2	CAPSCREW, drilled socket-hd., 7/16"NC x 1-1/2"
	904207	2	LOCKWASHER, 7/16"
21	4509035	1	WIRE, locking, #18 x 10"
22	4371253	2	DOWEL, hollow, scavenging pump
23	4371345	1	□GASKET, scavenging pump suction line
24	4385537	1	SHAFT, scavenging pump drive
25	4385536	2	COUPLING, splined, scavenging pump drive
26	4385715	1	SPRING, pump drive shaft
27	4660423	1	□GASKET, discharge line to block
28	4388133	1	TUBE, pressure pump discharge
29	4364556	2	CAPSCREW, drilled-hd., 1/2"NC x 2"
	904208	2	LOCKWASHER, 1/2"
30	4378558	2	CAPSCREW, drilled-hd., 3/8"NC x 1-1/8"
	904206	2	LOCKWASHER, 3/8"
31	4509035	2	WIRE, locking, #18 x 10"
32	4371345	1	□GASKET, discharge line to pump



(Continued)

OIL PUMPS (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION	
33	4354573	1	VALVE ASSEMBLY, pressure relief (Consists of items 34 thru 36)	
34	-----	1	BODY, pressure relief valve	} Not serviced separately
35	-----	1	PISTON, pressure relief valve	
36	-----	1	SPRING, pressure relief valve (Used prior to engine #16-07422. Order item 33)	
	4354568	1	SPRING, pressure relief valve (Effective with engine #16-07422)	
	913168	1	WASHER, plain	
	916001	1	PIN, spring, 3/16" x 1"	
37	-----	1	WASHER, locking, relief valve cap	} Used prior to engine #16-07422. Order item 33
38	-----	1	CAP, relief valve	
39	4509035	1	WIRE, locking, pressure relief valve	
40	4385961	1	TUBE, suction, scavenging pump	
41	4378558	2	CAPSCREW, drilled-hd., 3/8"NC x 1-1/8"	
42	4509035	1	WIRE, locking, #18 x 10"	
43	4335610	2	CAPSCREW, drilled-hd., 3/8"NC x 1"	
44	4348691	1	WIRE, locking, #18 x 6"	
	904206	4	LOCKWASHER, 3/8"	
45	4385976	1	BRACKET, supporting, scavenging pump suction tube	
46	4335600	1	CAPSCREW, drilled-hd., 5/16"NC x 7/8"	
	910335	2	WASHER, plain, SAE std., 5/16"	
	904205	1	LOCKWASHER, 5/16"	
47	4348691	1	WIRE, locking, #18 x 6"	
48	4348684	1	COVER, scavenging pump screen	
49	4374129	2	CAPSCREW, drilled-hd., 5/16"NC x 3/4"	
50	4509035	1	WIRE, locking, #18 x 10"	
51	4348683	1	SCREEN, scavenging oil pump	
52	4348682	1	RETAINER, scavenging oil pump screen	

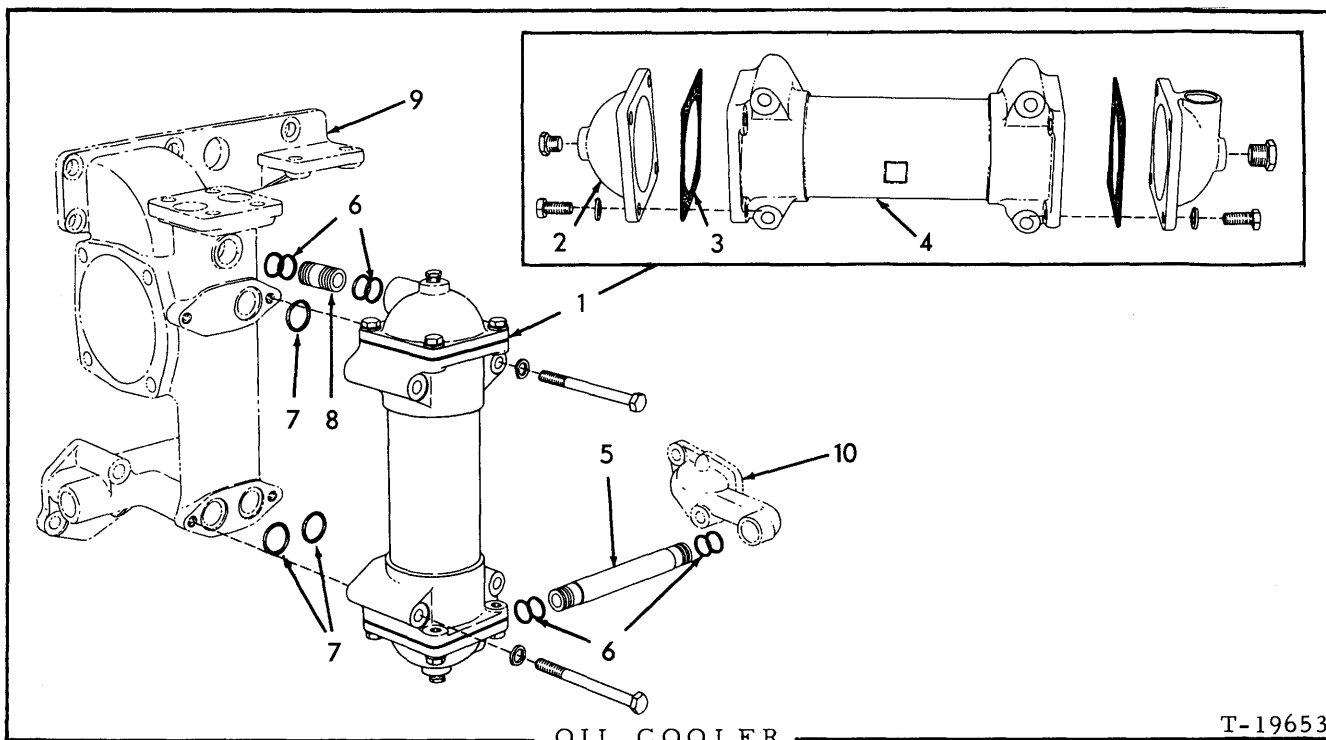

ITEM	PART NO.	QTY.	DESCRIPTION
1	4389839	1	EXCHANGER ASSEMBLY, heat, lubricating oil (Consists of items 2 thru 4)(If for engines prior to #16-07164 also order TUBE 4389841)
	919801	4	CAPSCREW, 3/8"NC x 4"
	904206	4	LOCKWASHER, 3/8"
2	4386642	1	BONNET, heat exchanger core, lower
	4386642	1	BONNET, heat exchanger core, upper (Engines prior to #16-07164)
	4389840	1	BONNET, heat exchanger core, upper (Engines #16-07164 and up)
	919840	2	PLUG, pipe, hex-hd., 1/4"NPT
	903629	8	CAPSCREW, 3/8"NC x 3/4"
	904206	8	LOCKWASHER, 3/8"
3	4349984	2	GASKE T, heat exchanger core
4	4376991	1	CORE, heat exchanger
5	4386864	1	TUBE, water, heat exchanger to by-pass tube
6	4251984	8	□O-RING, heat exchanger water tubes
7	4255511	3	□O-RING, heat exchanger to manifold (1-3/16"O. D.)(Used prior to engine #16-05686)
	4255631	2	□O-RING, heat exchanger to manifold (1-1/2"O. D.)(Effective with engine #16-05686)
8	4376813	1	TUBE, water, heat exchanger to manifold (1-5/8" long)(Used prior to engine #16-05686)
	4389129	1	TUBE, water, heat exchanger to manifold (1-7/16" long)(Effective with engine #16-05686)
	4389841	1	TUBE, water, heat exchanger to manifold (1-11/16" long)(Used for special service only. See item 1)
9	-----	-	MANIFOLD, water and oil (See WATER INLET MANIFOLD AND HEAT EXCHANGER)
10	-----	-	FLANGE, water pump (See WATER OUTLET MANIFOLD)

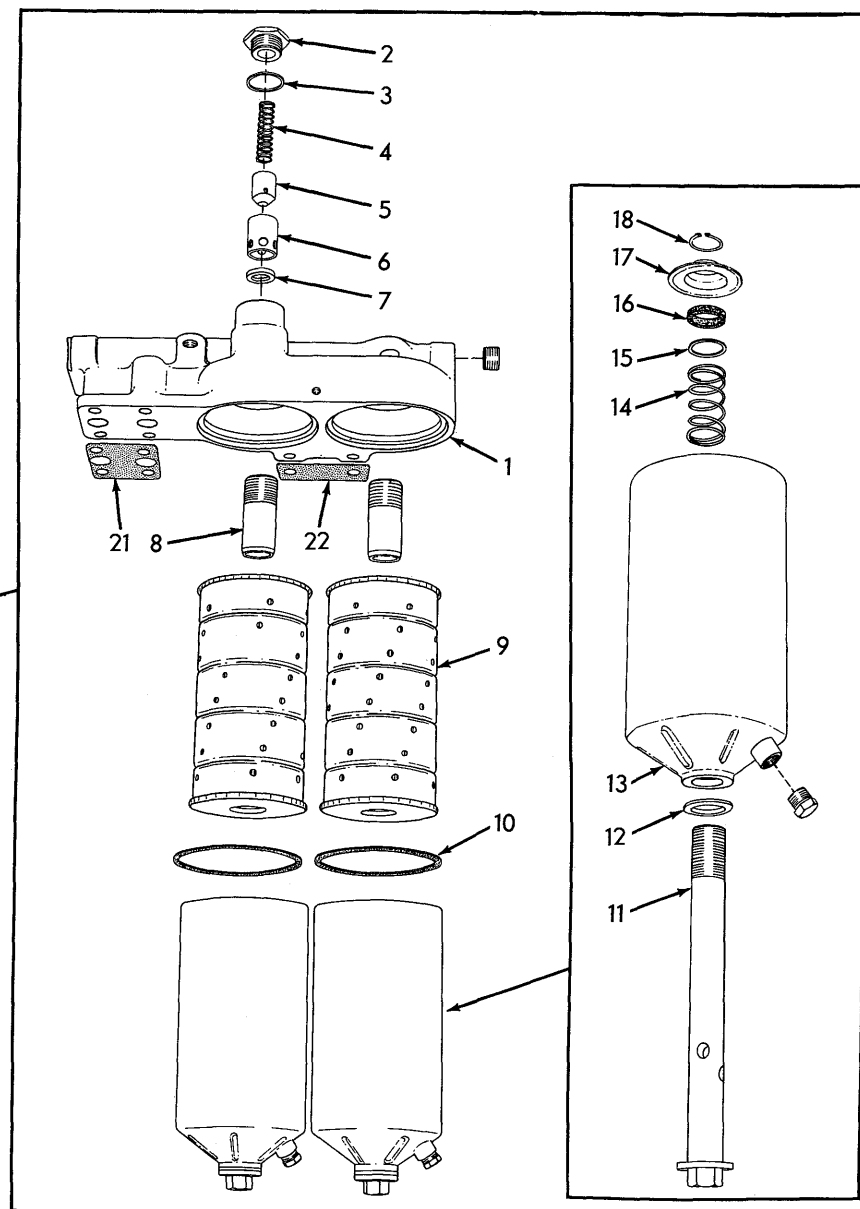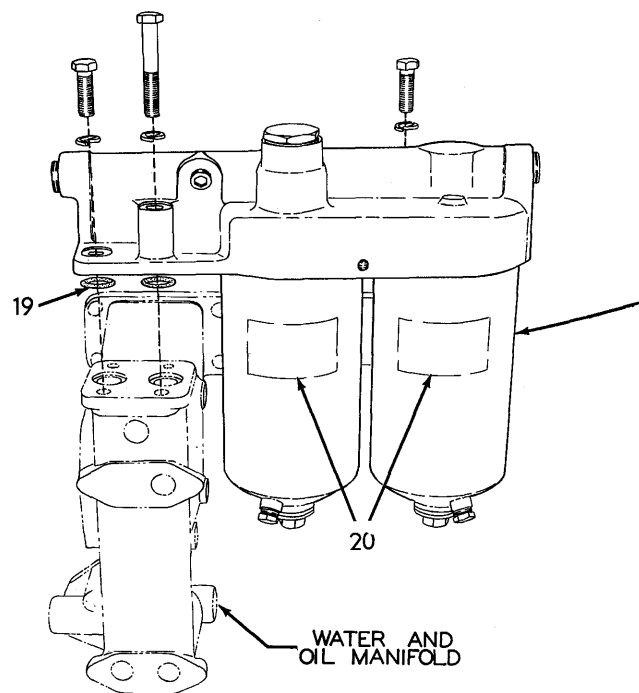


OIL FILTER (First type)

T-19652

OIL FILTER

USAGE: Engines prior to serial No. 16-05788

ITEM	PART NO.	QTY.	DESCRIPTION
1	4385543	1	HEAD ASSEMBLY (Includes items 2 thru 8)
	918851	2	PLUG, pipe, hex-socket, 3/4"NPT
	918887	1	PLUG, pipe, hex-socket, 3/8"NPT
	915987	4	CAPSCREW, 1/2"NC x 1-1/2"
	915969	2	CAPSCREW, 1/2"NC x 3"
	904208	6	LOCKWASHER, 1/2"
2	4373610	1	CAP, by-pass valve
3	4253751	1	GASKET, by-pass valve cap
4	4335666	1	SPRING, by-pass valve
5	4373613	1	PISTON, by-pass valve
6	4373612	1	SLEEVE, by-pass valve piston
7	4373614	1	SEAT, by-pass valve
8	4378307	2	ADAPTER, center bolt
9	4371021	2	ELEMENT KIT (Includes item 10)
10	4372325	2	GASKET, filter body
11	4374735	2	BOLT, center
12	4041103	2	GASKET, center bolt
13	4335352	2	BODY
	918951	2	PLUG, pipe, hex-hd., 3/8"NPT
14	4371036	2	SPRING, element
15	4348268	2	WASHER, element seal
16	4348270	2	SEAL, element
17	4348269	2	ADAPTER, element
18	4253195	2	RING, snap, center bolt
19	4255511	2	O-RING, filter to manifold
20	-----	-	TRANSFERS (See PAINTING AND MARKING)
<u>NOTE:</u> Following gaskets are used only when late type oil filter head is installed on older units. Not original equipment.			
21	4388974	1	GASKET, filter head to water and oil manifold
22	4388975	1	GASKET, shimming, filter head to water and oil manifold

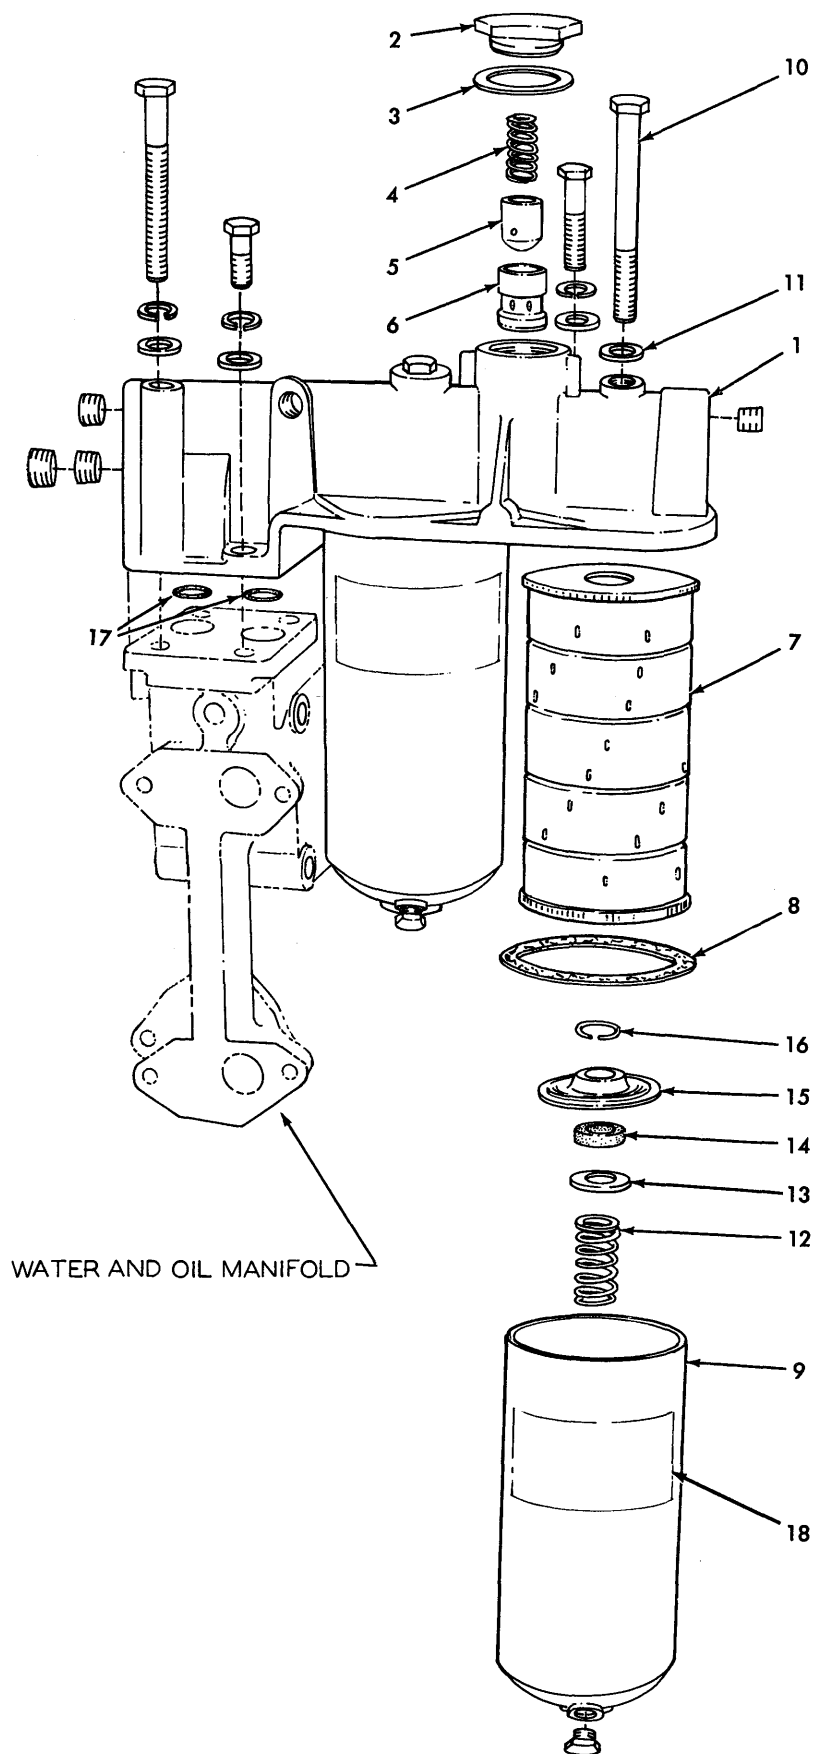


OIL FILTER (Second type)

T-70444

OIL FILTER

USAGE: Engines serial No. 16-05788 and up

ITEM	PART NO.	QTY.	DESCRIPTION
1	4388940	1	HEAD ASSEMBLY (Includes items 2 thru 6; also PLUGS indented below)
	918888	3	PLUG, pipe, hex-socket, 1"
	918697	1	PLUG, pipe, hex-socket, 1-1/4"
	915987	2	CAPSCREW, 1/2"NC x 1-1/2"
	916317	2	CAPSCREW, 1/2"NC x 2-3/4"
	916323	2	CAPSCREW, 1/2"NC x 5-1/2"
	912333	6	WASHER, plain
	904208	6	LOCKWASHER, 1/2"
2	4388810	1	CAP, by-pass valve
3	4388848	1	GASKET, by-pass valve cap
4	4335666	1	SPRING, by-pass valve
5	4373613	1	PISTON, by-pass valve
6	4388809	1	SLEEVE, by-pass valve piston
7	4371021	2	ELEMENT KIT, (Includes item 8)
8	4372325	2	GASKET, filter body
9	4339021	2	BODY
	918951	2	PLUG, pipe, hex-hd., 3/8"NPT
10	4388836	2	CAPSCREW, body retaining
11	4376749	2	WASHER, sealing, body retaining capscREW
12	4379268	2	SPRING, element
13	4053410	2	WASHER, element seal
14	4053409	2	SEAL, element
15	4055971	2	ADAPTOR, element
16	4379269	2	RING, snap
17	4253106	2	O-RING, filter to manifold
18	-----	-	TRANSFER (See PAINTING AND MARKING)

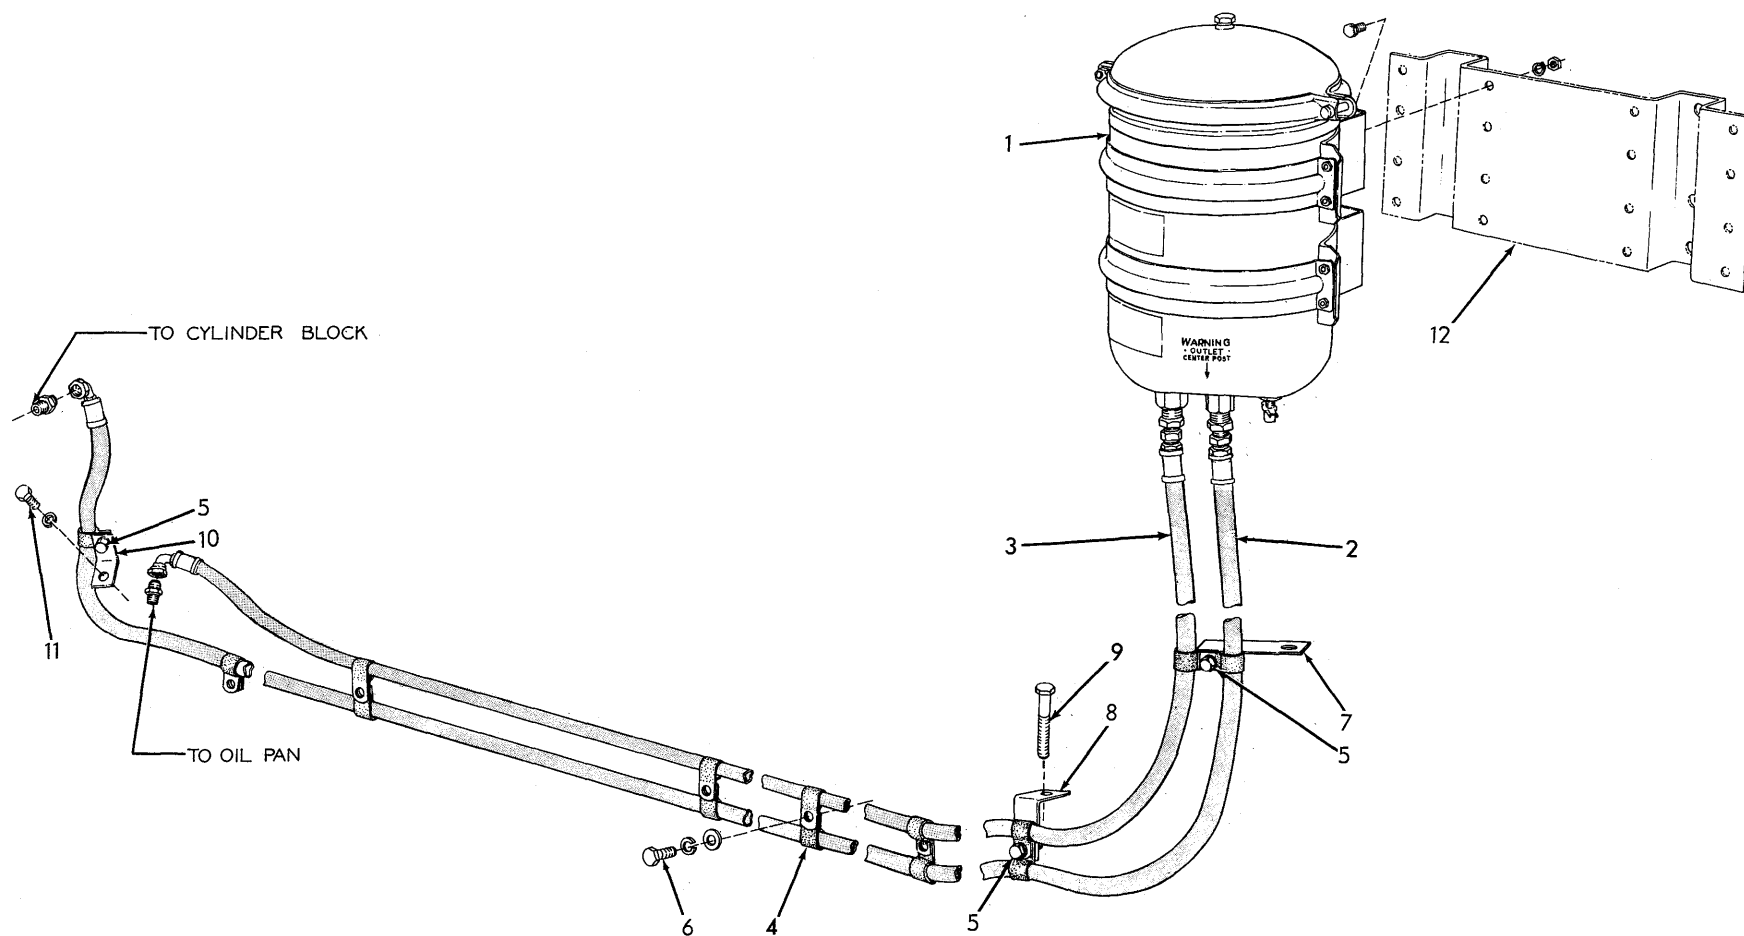


HEAVY-DUTY OIL FILTER

HEAVY-DUTY OIL FILTER

USAGE: Special equipment. Supplements standard oil filter.

ITEM	PART NO.	QTY.	DESCRIPTION
1	082442	1	FILTER ASSEMBLY, lubricating oil (See page 50 for parts)
	911168	8	CAPSCREW, 5/16"NF x 7/8"
	904205	8	LOCKWASHER, 5/16"
	913636	8	NUT, 5/16"NF
2	646303	1	HOSE, filter supply (See HOSE PARTS)
	919062	1	CONNECTOR, flare type, 3/8" tube, 1/4"NPT male
	919127	1	CONNECTOR, flare type, 3/8" tube, 1/2"NPT male
3	646322	1	HOSE, filter return (See HOSE PARTS)
	919062	1	CONNECTOR, flare type, 3/8" tube, 1/4"NPT male
	919127	1	CONNECTOR, flare type, 3/8" tube, 1/2"NPT male
4	{ 094422	14	CLIP, hose supporting (5/8" diam.)(Used prior to tractor #6965)
	{ 621304	14	CLIP, hose supporting (3/4" diam.)(Effective with tractor #6965)
5	036034	3	CAPSCREW, 3/8"NF x 1"
	904206	3	LOCKWASHER, 3/8"
	911041	3	NUT, 3/8"NF
6	035439	5	CAPSCREW, 3/8"NC x 1"
	904206	5	LOCKWASHER, 3/8"
	911115	5	WASHER, plain, SAE std., 3/8"
7	633010	1	ANGLE, hose supporting, rear
8	633453	1	ANGLE, hose supporting, intermediate
9	035892	1	CAPSCREW, 1/2"NF x 2-1/2"(Also attaches brake lever bracket)
10	096935	1	ANGLE, hose supporting, front
11	035221	1	CAPSCREW, 1/2"NC x 1"
	904208	1	LOCKWASHER, 1/2"
12	-----	-	BRACKET, filter mounting (See HEAVY-DUTY FUEL FILTER)

NOTE: See PAINTING AND MARKING for transfers

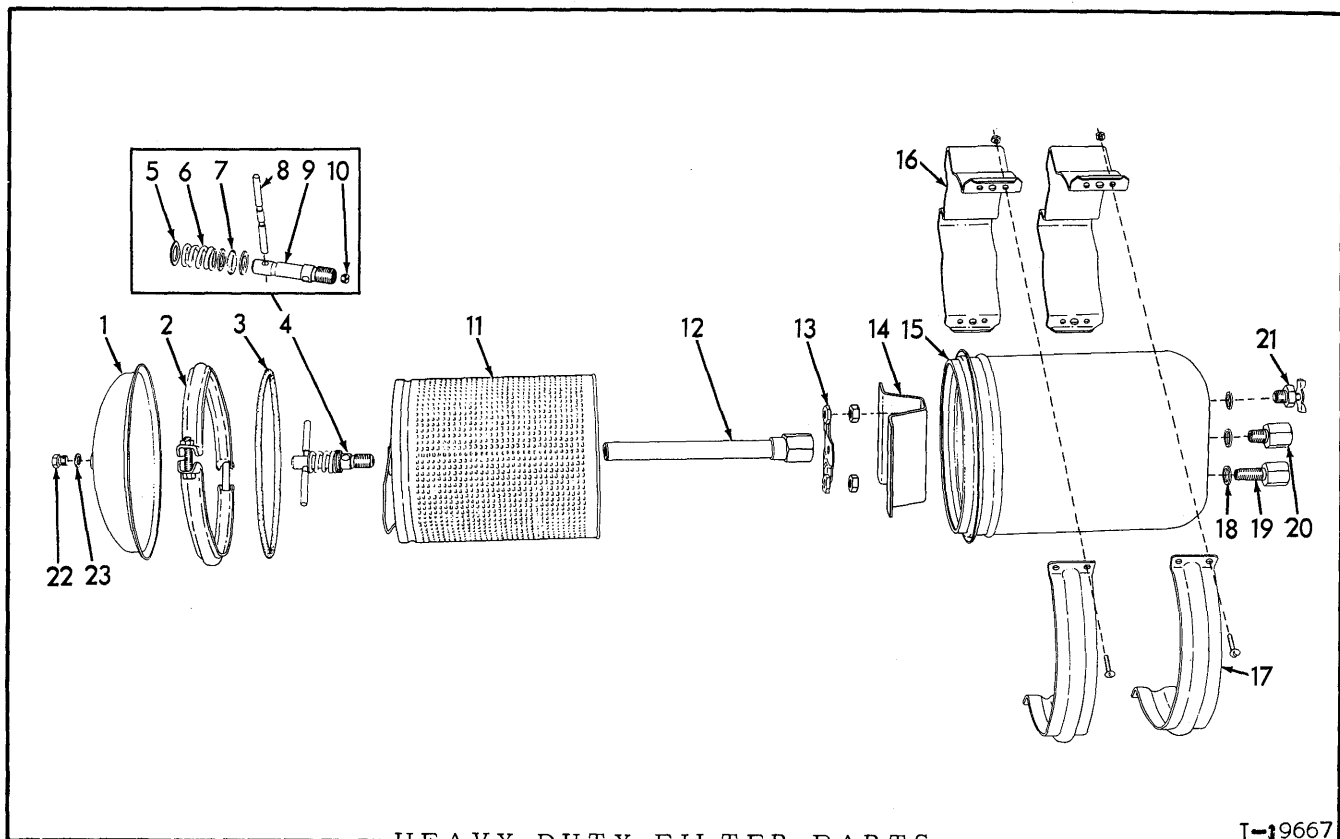

HEAVY-DUTY FILTER PARTS

T-19667

* 082441 FILTER ASSEMBLY, fuel (See page 52)


** 082442 FILTER ASSEMBLY, oil (See page 49)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	082505	1	1	COVER
2	630540	1	1	RING ASSEMBLY, cover retaining (Includes nut and bolt)
3	082449	1	1	GASKET, cover
4	082492	1	-	HOLD-DOWN ASSEMBLY, filter element (Includes items 5 thru 9)
	082493	-	1	HOLD-DOWN ASSEMBLY, filter element (Includes items 5 thru 10)
5	082489	3	3	WASHER, element hold-down
6	082490	1	1	SPRING, element hold-down
7	082487	1	1	SEAL, element hold-down
8	082488	1	1	HANDLE, element hold-down
9	-----	1	1	STUD, element hold-down (Not serviced separately)
10	082491	-	1	PLUG, orifice, element hold-down
11	091540	1	1	ELEMENT, filtering (Original equipment)
	4059373	1	1	ELEMENT, filtering (Optional)

(Continued)

HEAVY -DUTY FILTER PARTS (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
12	076668	1	1	TUBE ASSEMBLY, outlet (Includes nut)
13	096816	1	1	SUPPORT, filter element
	911049	2	2	NUT, jam, 5/8"NF
14	096815	1	1	RETAINER, element support nut
15	-----	1	1	HOUSING (Not serviced separately)
16	082444	2	2	BRACKET, mounting
17	082443	2	2	BAND, mounting bracket
	900576	8	8	SCREW, machine, 1/4"NC x 3/4"
	911024	8	8	NUT, 1/4"NC
18	063891	3	3	GASKET
19	{ 063890	-	1	VALVE ASSEMBLY, inlet check (Includes 1 spring, 1 ring, 1 cup. Serviced only as a unit)
	{ 063889	1	-	BOLT, hollow
20	{ 080758	-	1	VALVE ASSEMBLY, outlet check (Includes 1 spring, 1 ring, 1 cup. Serviced only as a unit)
	{ 063889	1	-	BOLT, hollow
21	094167	1	1	COCK, drain
22	084897	1	1	PLUG, venting
23	084899	1	1	WASHER, venting plug

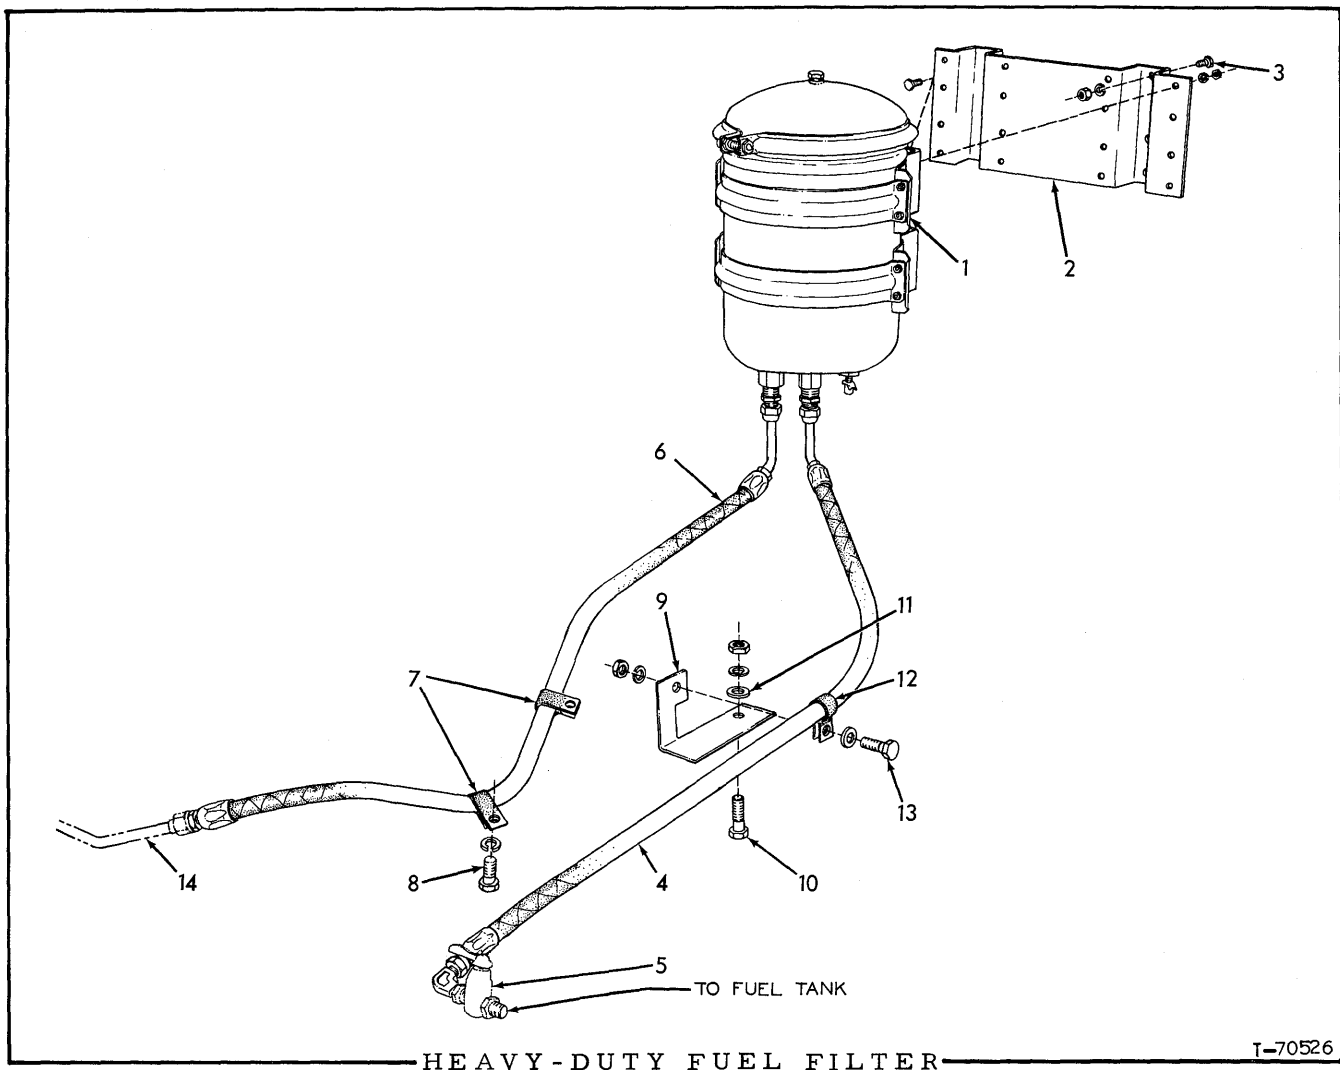


USAGE: Special equipment. Requires removal of standard first stage fuel filter element.

ITEM	PART NO.	QTY.	DESCRIPTION
1	082441	1	FILTER ASSEMBLY, fuel (See page 50 for parts)
	911168	8	CAPSCREW, 5/16"NF x 7/8"
	904205	8	LOCKWASHER, 5/16"
	913636	8	NUT, 5/16"NF
2	080459	1	BRACKET, mounting (Also mounts Heavy-duty Oil Filter)
3	070469	4	CAPSCREW, 1/2"NF x 1-1/4"
	904208	4	LOCKWASHER, 1/2"
	911043	4	NUT, 1/2"NF
4	633473	1	HOSE ASSEMBLY, filter inlet (See HOSE PARTS)
	919206	1	ELBOW, flare type, 1/2" tube, 3/8"NPT
	919128	1	CONNECTOR, flare type, 1/2" tube, 1/2"NPT male
5	-----	-	COCK (See FUEL SUPPLY LINES)
6	633458	1	HOSE ASSEMBLY, filter outlet (See HOSE PARTS)
	919128	1	CONNECTOR, flare type, 1/2" tube, 1/2"NPT male

(Continued)

HEAVY-DUTY FUEL FILTER (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
7	621304	2	CLIP, outlet hose
8	070467	1	CAPSCREW, 1/2"NF x 1"
	904208	1	LOCKWASHER, 1/2"
9	632122	1	BRACKET, hose supporting
10	035248	1	CAPSCREW, 5/8"NF x 2-1/4"
	904209	1	LOCKWASHER, 5/8"
	911044	1	NUT, 5/8"
11	064810	1	WASHER, plain
12	{ 094467	1	CLIP, inlet hose (3/4" diam.)(Used prior to tractor #6965)
	{ 644713	1	CLIP, inlet hose (7/8" diam.)(Effective with tractor #6965)
13	036034	1	CAPSCREW, 3/8"NF x 1"
	911115	1	WASHER, plain, SAE std., 3/8"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
14	-----	1	TUBE ASSEMBLY (See FUEL SUPPLY LINE)

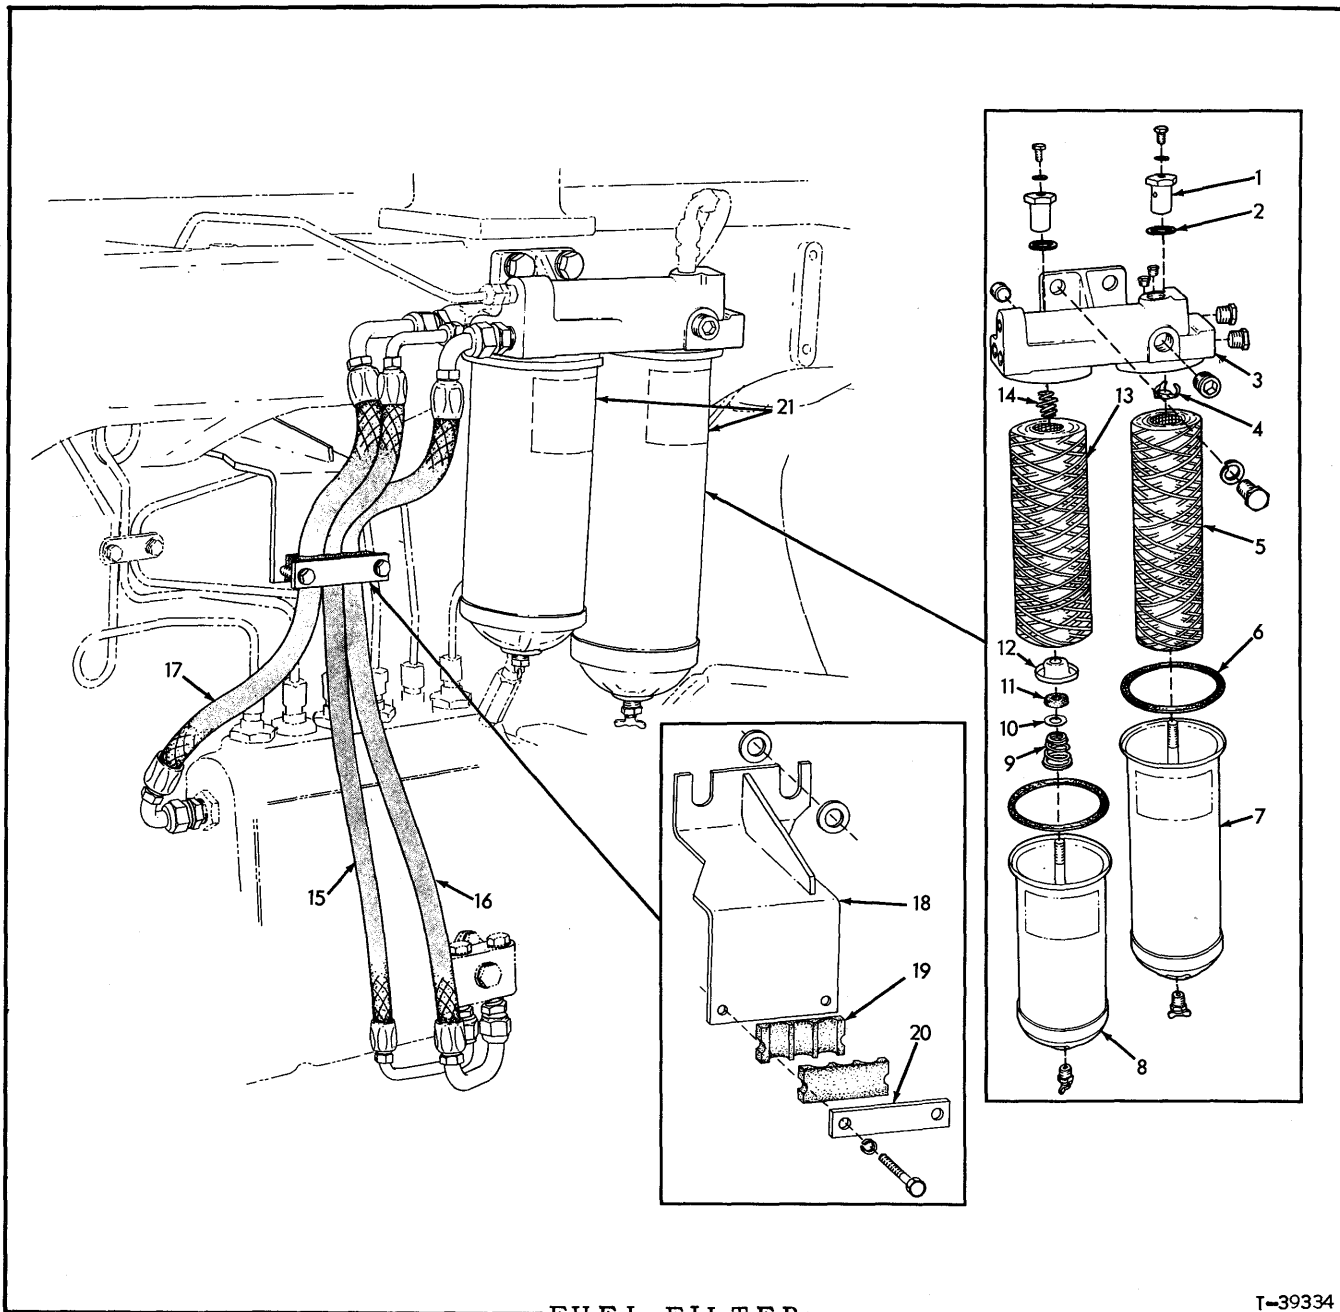

FUEL FILTER

T-39334


ITEM PART NO. QTY. DESCRIPTION

1	{	4051483	2	NUT, shell retaining (1-3/16" long) (Used prior to approx. engine #16-06228)
		4389113	2	NUT, shell retaining (1-9/16" long) (Effective with approx. engine #16-06228)
		919288	2	CAPSCREW, 1/4"NC x 3/8" } Air bleed
		914686	2	
2		4051484	2	GASKET, shell retaining nut

(Continued)

FUEL FILTER (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
3	4389051	1	HEAD ASSEMBLY (Includes PLUGS indented below)(If for engines prior to approx. #16-06228 also order 2 NUT 4389113 and 1 BUSHING 901826)
	919840	1	PLUG, pipe, hex-hd., 1/4"NPT (Used prior to approx. engine #16-06228)
	919134	2	PLUG, pipe, hex-hd., 1/8"NPT
	920333	2	PLUG, pipe, hex-hd., 3/8"NPT (1 less used prior to approx. engine #16-06228)
	918887	2	PLUG, pipe, hex-socket, 3/8"NPT
	916311	2	CAPSCREW, 1/2"NC x 1-1/4"
	904208	2	LOCKWASHER, 1/2"
4	4051485	1	GUIDE, centering, first stage filter element
5	4055565	1	ELEMENT KIT, first stage filter (Includes item 6)(Not used when Heavy-Duty Filter is installed)
6	4040013	2	GASKET, filter shell
7	4389172	1	SHELL ASSEMBLY, first stage filter (Includes items 1,2,4,5,6 and COCK 912415)
	912415	1	COCK, drain, 1/4"NPT
8	4388109	1	SHELL ASSEMBLY, second stage filter (Includes items 1,2,6,9 thru 14 and COCK 912415)
	912415	1	COCK, drain, 1/4"NPT
9	4052174	1	SPRING, second stage filter
10	-----	1	WASHER, element plate gasket (Not serviced separately)
11	-----	1	GASKET, element plate (Not serviced separately)
12	4052173	1	PLATE, element seating, second stage filter
13	4056632	1	ELEMENT KIT, second stage filter (Includes items 6,10 and 11)
14	4055913	1	GUIDE, element centering, second stage filter
15	4386771	1	HOSE ASSEMBLY, transfer pump to second stage filter (See HOSE PARTS)
	919062	1	CONNECTOR, flare type, 3/8" tube, 1/4"NPT male (1 additional used on filter end on engines prior to approx. #16-06228)
	919172	1	CONNECTOR, flare type, 3/8" tube, 3/8"NPT male (At filter end. Effective with approx. engine #16-06228)
16	4386772	1	HOSE ASSEMBLY, first stage filter to transfer pump (See HOSE PARTS)
	919205	1	CONNECTOR, flare type, 1/2" tube, 1/4"NPT male
	919063	1	CONNECTOR, flare type, 1/2" tube, 3/8"NPT male
17	4386774	1	HOSE ASSEMBLY, second stage filter to injection pump (See HOSE PARTS)
	919063	2	CONNECTOR, flare type, 1/2" tube, 3/8"NPT male
18	4387129	1	BRACKET, hose supporting
	910244	4	WASHER, plain, SAE std., 1/2"
19	4377253	2	INSERT, hose clamping (rubber)
20	4387196	1	CLAMP, hose supporting
	916286	2	CAPSCREW, 1/4"NC x 1-1/2"
	904204	2	LOCKWASHER, 1/4"
21	-----	-	TRANSFER (See PAINTING AND MARKING)

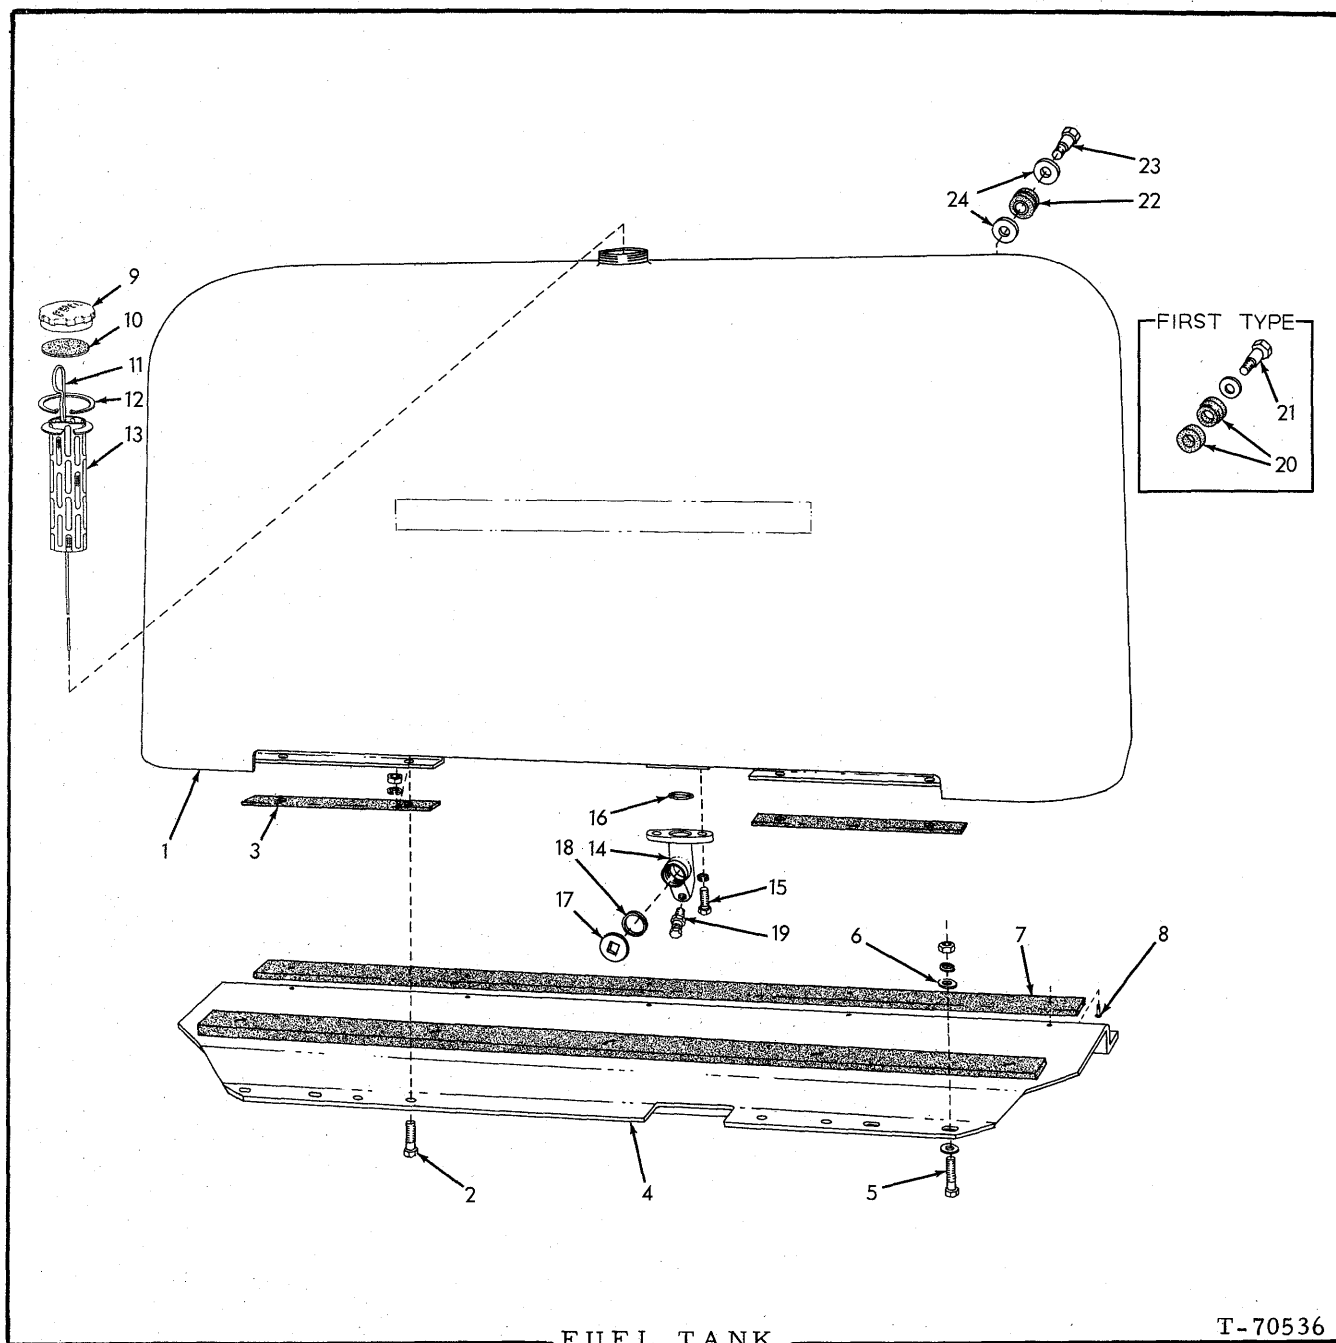


ITEM	PART NO.	QTY.	DESCRIPTION
1	643244	1	TANK, fuel (Used prior to tractor #7381)
	650228	1	TANK, fuel (Effective with tractor #7381)
2	035014	8	CAPSCREW, 5/8"NF x 1-1/2"
	904209	8	LOCKWASHER, 5/8"
	911044	8	NUT, 5/8"NF
3	083917	4	PAD, tank mounting

(Continued)

FUEL TANK (Continued)


ITEM	PART NO.	QTY.	DESCRIPTION
4	632099	1	CHANNEL ASSEMBLY, tank supporting (Includes items 7 and 8)
5	{ 035248	10	CAPSCREW, 5/8"NF x 2-1/4" (Early units)
	023755	10	CAPSCREW, 5/8"NC x 2-1/4" (Late units)
6	064810	20	WASHER, plain (10 less used with heavy-duty fenders)
	904209	10	LOCKWASHER, 5/8"
	911044	10	NUT, 5/8"NF (Early units)
	911029	10	NUT, 5/8"NC (Late units) } Not used with heavy-duty fenders
7	632097	2	PAD, tank mounting
8	083915	8	RIVET, split, 3/16" x 3/4" (Not original equipment)
9	642744	1	CAP, fuel tank
10	065613	1	GASKET, fuel tank cap
11	053100	1	GAUGE, fuel level
12	621775	1	RING, snap, fuel strainer
13	642749	1	STRAINER, fuel
			} Effective with tractor #7381
14	083955	1	ELBOW, fuel tank drain
15	070469	2	CAPSCREW, 1/2"NF x 1-1/4"
	904208	2	LOCKWASHER, 1/2"
16	923813	1	O-RING, fuel tank drain elbow
17	050594	1	PLUG, drain elbow clean-out
18	050595	1	GASKET, drain elbow clean-out plug
19	633519	1	COCK, drain
20	-----	8	SNUBBER, vibration (Order items 22 thru 24)
21	639699	4	CAPSCREW, vibration snubber
	900819	4	WASHER, plain U.S. std., 5/8"
			} Used prior to tractor #6039 excluding #6033
22	642441	4	SNUBBER, vibration (Effective with tractor #6039, including #6033)
23	035068	4	CAPSCREW, 1/2"NF x 2-1/4"
24	092163	8	WASHER, plain

NOTE: See PAINTING AND MARKING for transfers

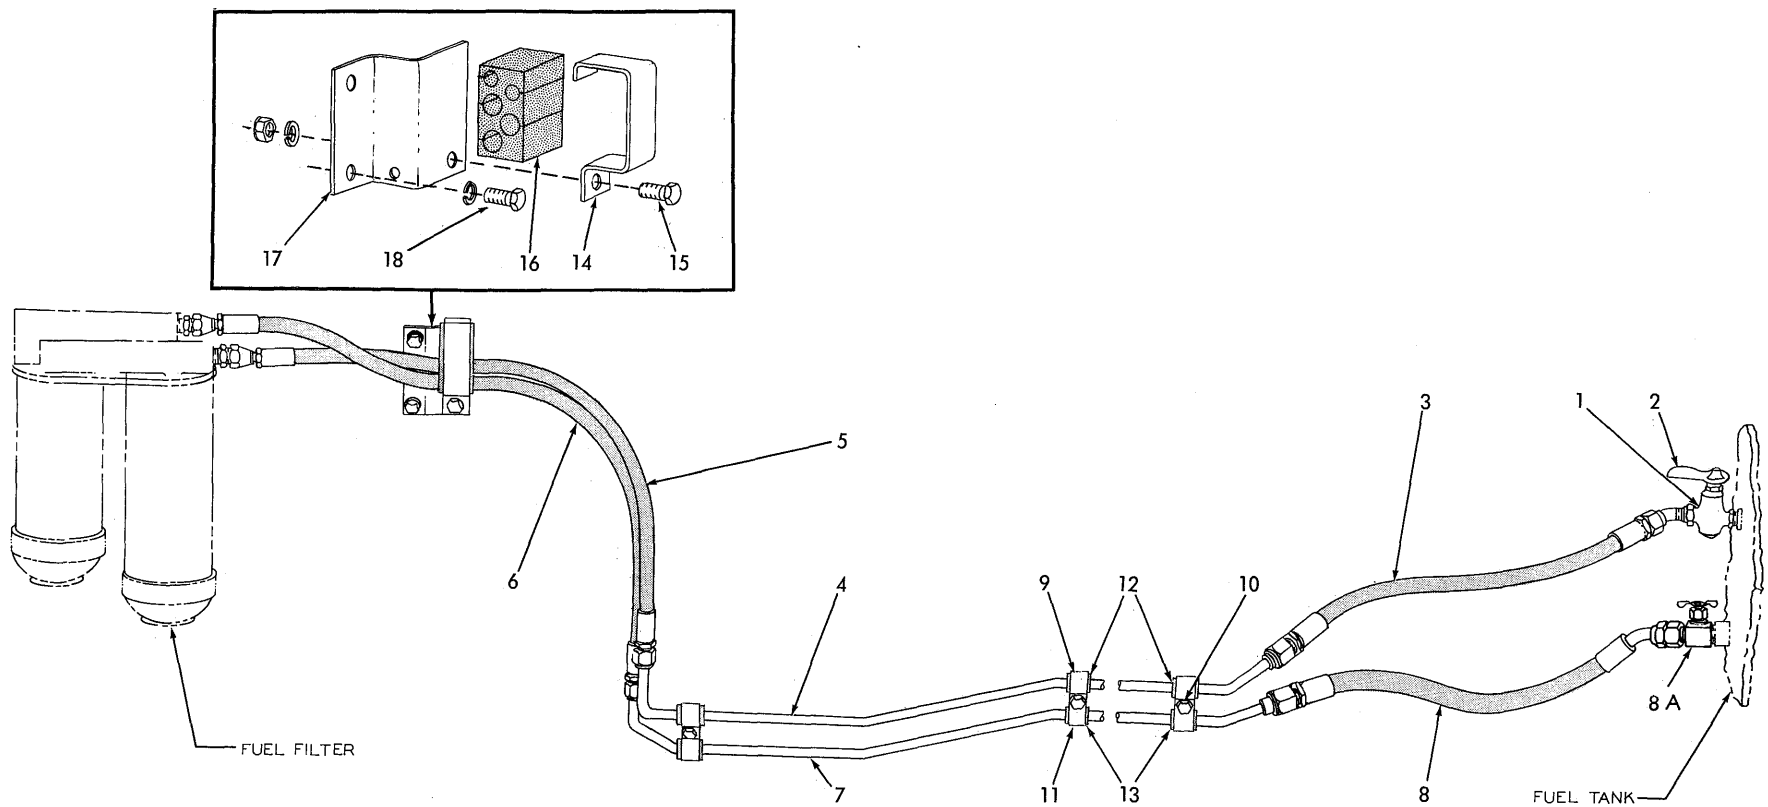

FUEL LINES

ITEM	PART NO.	QTY.	DESCRIPTION
1	092727	1	COCK, fuel shut-off (Includes item 2)
2	082189	1	HANDLE, fuel shut-off cock
3	646353	1	HOSE, fuel supply, rear (See HOSE PARTS)(Not used with heavy-duty fuel filter)
	920690	1	ELBOW, flare type, 45°, 1/2" tube, 3/8"NPT male
4	643350	1	TUBE ASSEMBLY, fuel supply (Includes nuts)
5	646299	1	HOSE, fuel supply, front (See HOSE PARTS)
	919063	1	CONNECTOR, flare type, 1/2" tube, 3/8"NPT male
6	646300	1	HOSE, fuel return, front (See HOSE PARTS)
	919062	1	CONNECTOR, flare type, 3/8" tube, 1/4"NPT male
7	632927	1	TUBE ASSEMBLY, fuel return (Includes nuts)(Used prior to tractor #6310)
	643349	1	TUBE ASSEMBLY, fuel return (Includes nuts)(Effective with tractor #6310)
8	646352	1	HOSE, fuel return, rear (See HOSE PARTS)(Used prior to tractor #7111)
	648231	1	HOSE, fuel return, rear (See HOSE PARTS)(Effective with tractor #7111)
	923178	1	CONNECTOR, flare type, 3/8" tube, 1/4"NPT female
8A	914378	1	VALVE, shut-off, fuel return line (1/4"NPT ends)(Effective with tractor #7111)
9	097534	3	CLIP, fuel supply tube
10	035167	3	CAPSCREW, 3/8"NF x 7/8" (Early units)
	903775	3	CAPSCREW, 3/8"NC x 7/8" (Late units)
	904206	3	LOCKWASHER, 3/8"
	911115	3	WASHER, plain, SAE std., 3/8"
11	055234	3	CLIP, fuel return tube
12	093752	3	BOOT, tube protecting (1/2" tube)
13	093751	3	BOOT, tube protecting (3/8" tube)
14	095980	1	CLAMP, hose attaching
15	036034	1	CAPSCREW, 3/8"NF x 1"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
16	096328	1	BLOCK, hose clamp (rubber)(Used prior to tractor #6965)
	644530	1	BLOCK, hose clamp (rubber)(Effective with tractor #6965)
17	096310	1	BRACKET, hose supporting
18	035244	2	CAPSCREW, 3/8"NC x 3/4"
	904206	2	LOCKWASHER, 3/8"





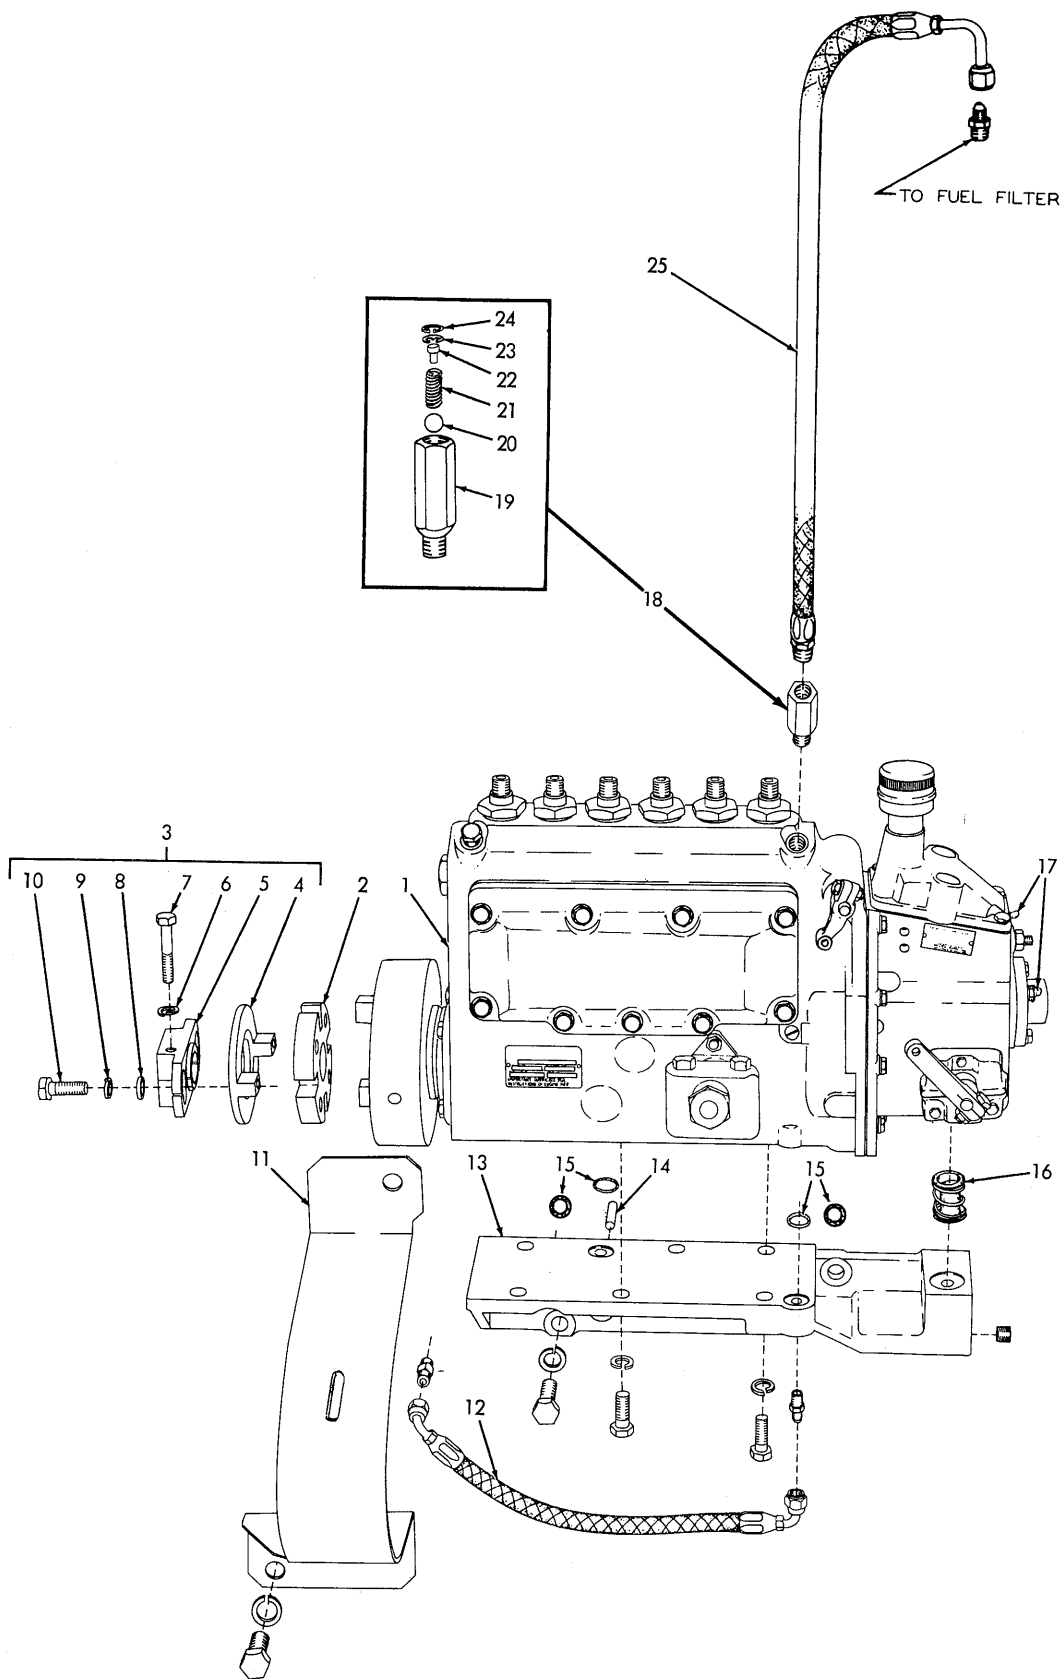


FUEL INJECTION PUMP

T-37181

FUEL INJECTION PUMP

ITEM	PART NO.	QTY.	DESCRIPTION
1	4389485	1	PUMP ASSEMBLY (Includes items 2 and 3)(Model HD16D)
	4389467	1	PUMP ASSEMBLY (Includes items 2 and 3)(Model HD16DC)
	919228	4	CAPSCREW, 7/16"NC x 1-1/8"
	918801	2	CAPSCREW, 7/16"NC x 1-5/8"
	904207	6	LOCKWASHER, 7/16"
2	4379813	1	DISC, injection pump coupling
3	4371714	1	COUPLING ASSEMBLY, injection pump drive (Consists of items 4 thru 10)
4	4371716	1	FLANGE, injection pump drive coupling
5	4371715	1	HUB, injection pump drive coupling
	905845	1	KEY, #A woodruff, 1/4" x 7/8"
6	4371720	1	LOCKWASHER, hub clamping screw
7	4371719	1	SCREW, clamping, coupling hub
8	4371718	2	WASHER, serrated, coupling capscrew
9	4371721	2	LOCKWASHER, coupling capscrew
10	4371717	2	CAPSCREW, injection pump drive coupling
11	4379076	1	GUARD, pump flywheel
	916310	1	CAPSCREW, 1/2"NC x 1"
	904208	1	LOCKWASHER, 1/2"
12	4386773	1	HOSE ASSEMBLY, oil supply (See HOSE PARTS)
	919778	1	CONNECTOR, flare type, 5/16" tube, 1/4"NPT male
	919766	1	CONNECTOR, flare type, 5/16" tube, 1/8"NPT male
13	4376529	1	BRACKET, pump mounting
	918850	1	PLUG, pipe, hex-socket, 1/4"NPT
	916311	4	CAPSCREW, 1/2"NC x 1-1/4"
	904208	4	LOCKWASHER, 1/2"
14	4253286	2	PIN, dowel, mounting bracket
15	4255665	4	□ O-RING, mounting bracket
16	4379038	1	COUPLING, oil drain, pump to bracket
17	4355843	3	SEAL, anti-tampering
18	4337015	1	VALVE ASSEMBLY, fuel return (Consists of items 19 thru 24)
19	-----	1	BODY, relief valve (Not serviced separately)
20	4337022	1	BALL, relief valve
21	4337023	1	SPRING, relief valve
22	4337019	1	STOP, relief valve
23	4255017	1	E-RING, relief valve stop
24	4255020	1	RING, snap, relief valve
25	4386770	1	HOSE ASSEMBLY, fuel return (See HOSE PARTS)
	919062	1	CONNECTOR, flare type, 3/8" tube, 1/4"NPT male

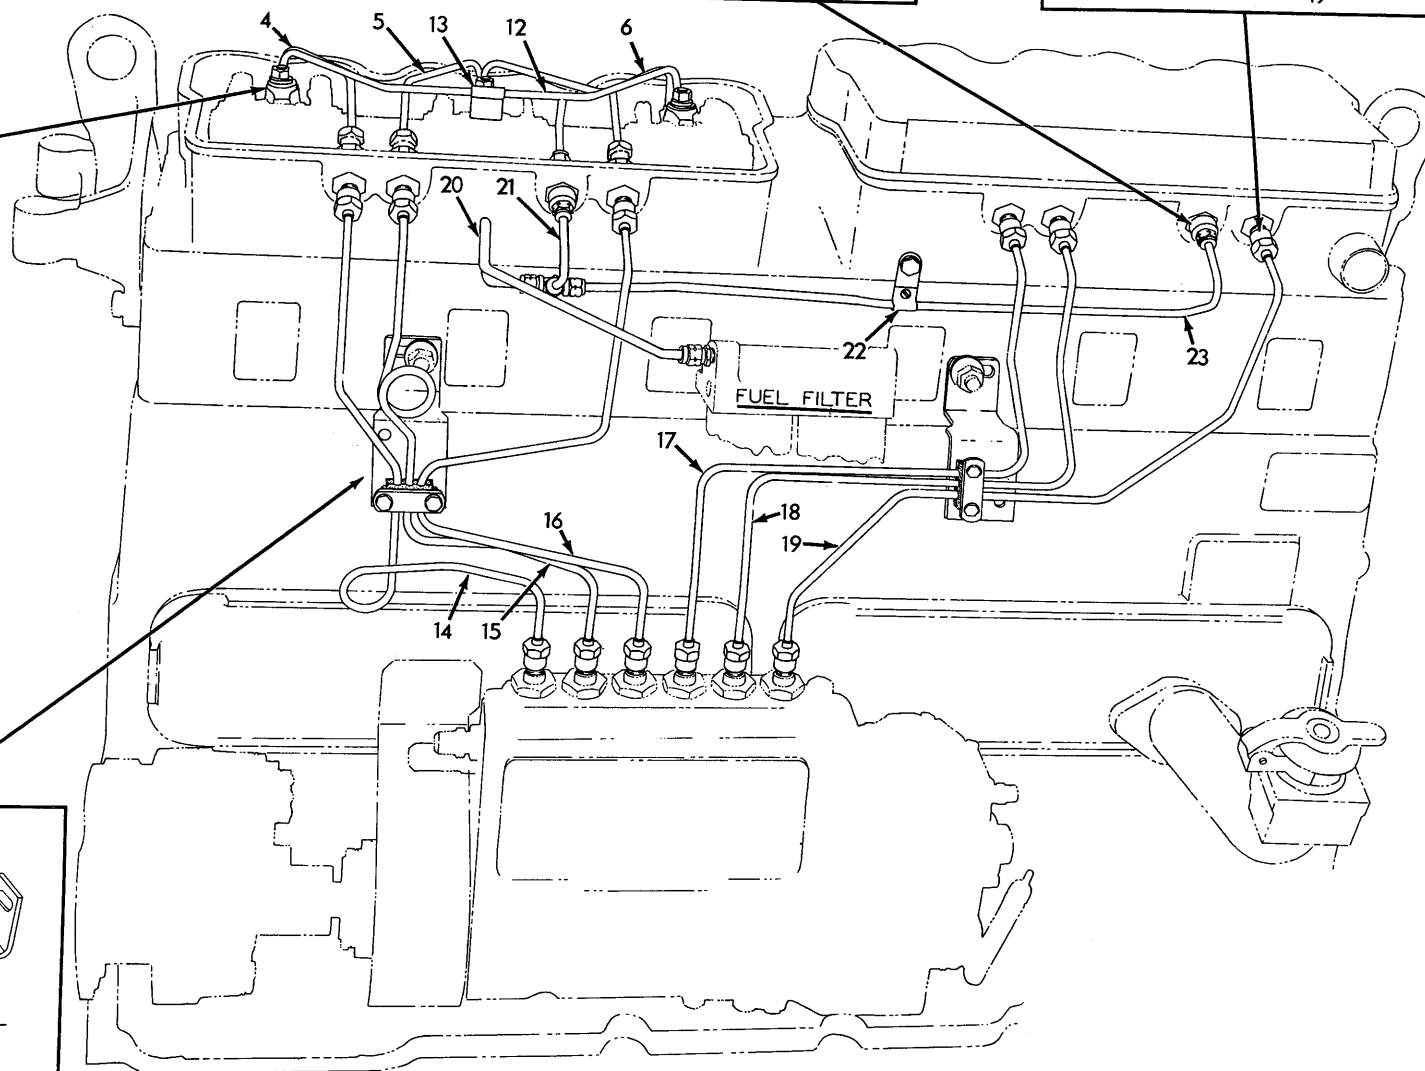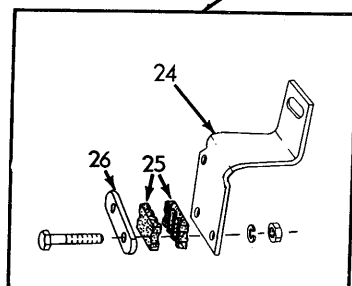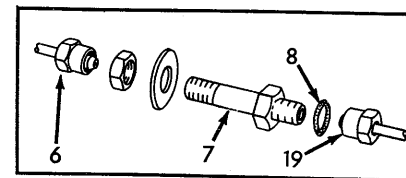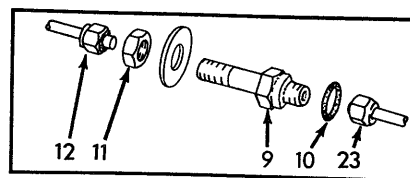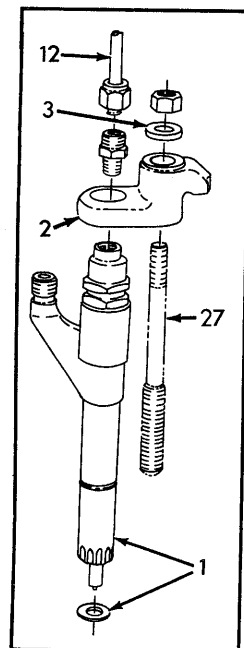

INJECTION NOZZLES AND LINES

T-39341


INJECTION NOZZLES AND LINES

ITEM	PART NO.	QTY.	DESCRIPTION
1	4378027	6	HOLDER ASSEMBLY, nozzle (Engines prior to #16-05069)
	4390625	6	HOLDER ASSEMBLY, nozzle (Engines #16-05069 and up)
} See page 65 for parts			
2	4387385	6	CLAMP, nozzle holder
	4115287	6	NUT, 3/8"NF
3	4020145	6	WASHER, nozzle holder clamp
4	4386434	2	TUBE ASSEMBLY, fuel injection, internal (#1 and #4 cylinders. Includes nuts)
5	4386435	2	TUBE ASSEMBLY, fuel injection, internal (#2 and #5 cylinders. Includes nuts)
6	4386436	2	TUBE ASSEMBLY, fuel injection, internal (#3 and #6 cylinders. Includes nuts)
7	4386601	6	CONNECTOR, injection line
	919303	6	NUT, jam, 9/16"NF
	914659	6	WASHER, plain, SAE std., 9/16"
8	923645	6	□ O-RING, injection line connector
9	4386602	2	CONNECTOR, fuel return line
10	923645	2	□ O-RING, return line connector
11	4377267	2	NUT, return line connector, (1/2" -24)
	914659	2	WASHER, plain, SAE std., 9/16"
12	4386433	2	MANIFOLD ASSEMBLY, fuel return (Includes NUTS and SLEEVES indented below)
	917809	8	NUT, imperial, 1/4" tube
	917806	8	□ SLEEVE, Imperial, 1/4" tube (rubber)
	919800	6	CONNECTOR, Imperial, 1/4" tube, 1/8"NPT male (Used prior to engine #16-07854)
13	4255179	2	CLIP, manifold supporting
14	4386546	1	TUBE ASSEMBLY, fuel injection, external (#1 cylinder. Includes nuts)
15	4386547	1	TUBE ASSEMBLY, fuel injection, external (#2 cylinder. Includes nuts)
16	4387647	1	TUBE ASSEMBLY, fuel injection, external (#3 cylinder. Includes nuts)
17	4386549	1	TUBE ASSEMBLY, fuel injection, external (#4 cylinder. Includes nuts)
18	4386550	1	TUBE ASSEMBLY, fuel injection, external (#5 cylinder. Includes nuts)
19	4386551	1	TUBE ASSEMBLY, fuel injection, external (#6 cylinder. Includes nuts)
20	4387301	1	TUBE ASSEMBLY, fuel return (Includes NUTS and SLEEVES indented below)
	917809	2	NUT, Imperial, 1/4" tube
	917806	2	SLEEVE, Imperial, 1/4" tube (rubber)
	919797	1	TEE, Imperial, 1/4" tube
	920242	1	CONNECTOR, Imperial, 1/4" tube, 1/4"NPT male

(Continued)


INJECTION NOZZLES AND LINES (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
21	4377266	1	TUBE ASSEMBLY, fuel return, front (Includes NUTS and SLEEVES indented below)
	917809	2	NUT, Imperial, 1/4" tube
	917806	2	SLEEVE, Imperial, 1/4" tube (rubber)
22	4386617	1	CLIP, fuel return tube
	901171	1	SCREW, machine, #10-24NC x 3/8"
	904203	1	LOCKWASHER, #10
	901310	1	NUT, #10-24NC
	915408	1	CAPSCREW, 3/8"NC x 3/4"
	904206	1	LOCKWASHER, 3/8"
	911115	1	WASHER, plain, SAE std., 3/8"
23	4379737	1	TUBE ASSEMBLY, fuel return, rear (Includes NUTS and SLEEVES indented below)
	917809	2	NUT, Imperial, 1/4" tube
	917806	2	SLEEVE, Imperial, 1/4" tube (rubber)
24	4388148	1	BRACKET, supporting, injection lines
25	4507359	4	SPACER, injection lines (rubber)
26	4507415	2	PLATE, clamping, injection lines
	918794	4	CAPSCREW, 1/4"NC x 1-3/8"
	904204	4	LOCKWASHER, 1/4"
	910880	4	NUT, 1/4"NC
27	-----	-	STUD, nozzle holder clamp (See VALVE OPERATING MECHANISM)

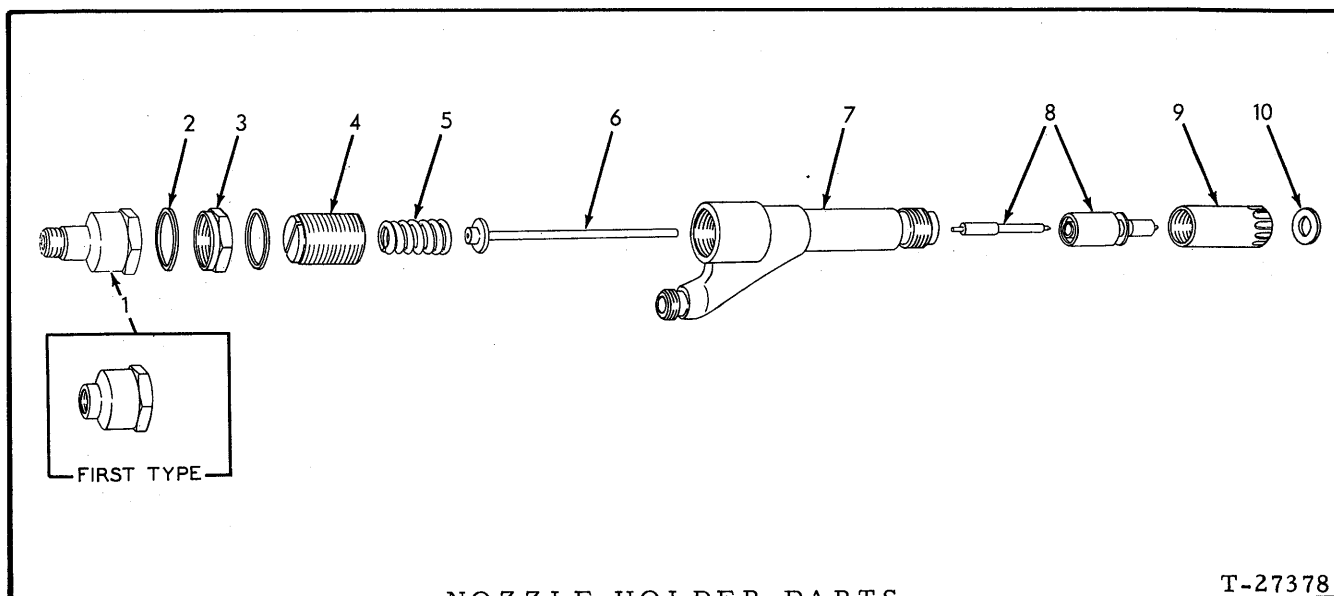

* 4378027 HOLDER ASSEMBLY } See page 63
 ** 4390625 HOLDER ASSEMBLY }

ITEM	PART NO.	QTY. * **	DESCRIPTION
<u>NOTE:</u> Quantities are for one (1) Holder Assembly only			
1	4378032	1 1	CAP (Engines prior to #16-07854)
	4021227	- 1	CAP (Engines #16-07854 and up)
2	4511243	2 2	GASKET, cap nut
3	4511213	1 1	NUT, locking
4	4378033	1 1	SCREW, adjusting
5	4380652	1 1	SPRING
6	4380198	1 1	SPINDLE
7	-----	1 1	BODY (Not serviced separately)
8	4378020	1 -	NOZZLE ASSEMBLY (Includes item 10)
	4386837	- 1	NOZZLE ASSEMBLY (Includes item 10)
9	4390619	1 1	NUT, nozzle retaining
10	4378031	1 1	□GASKET, nozzle


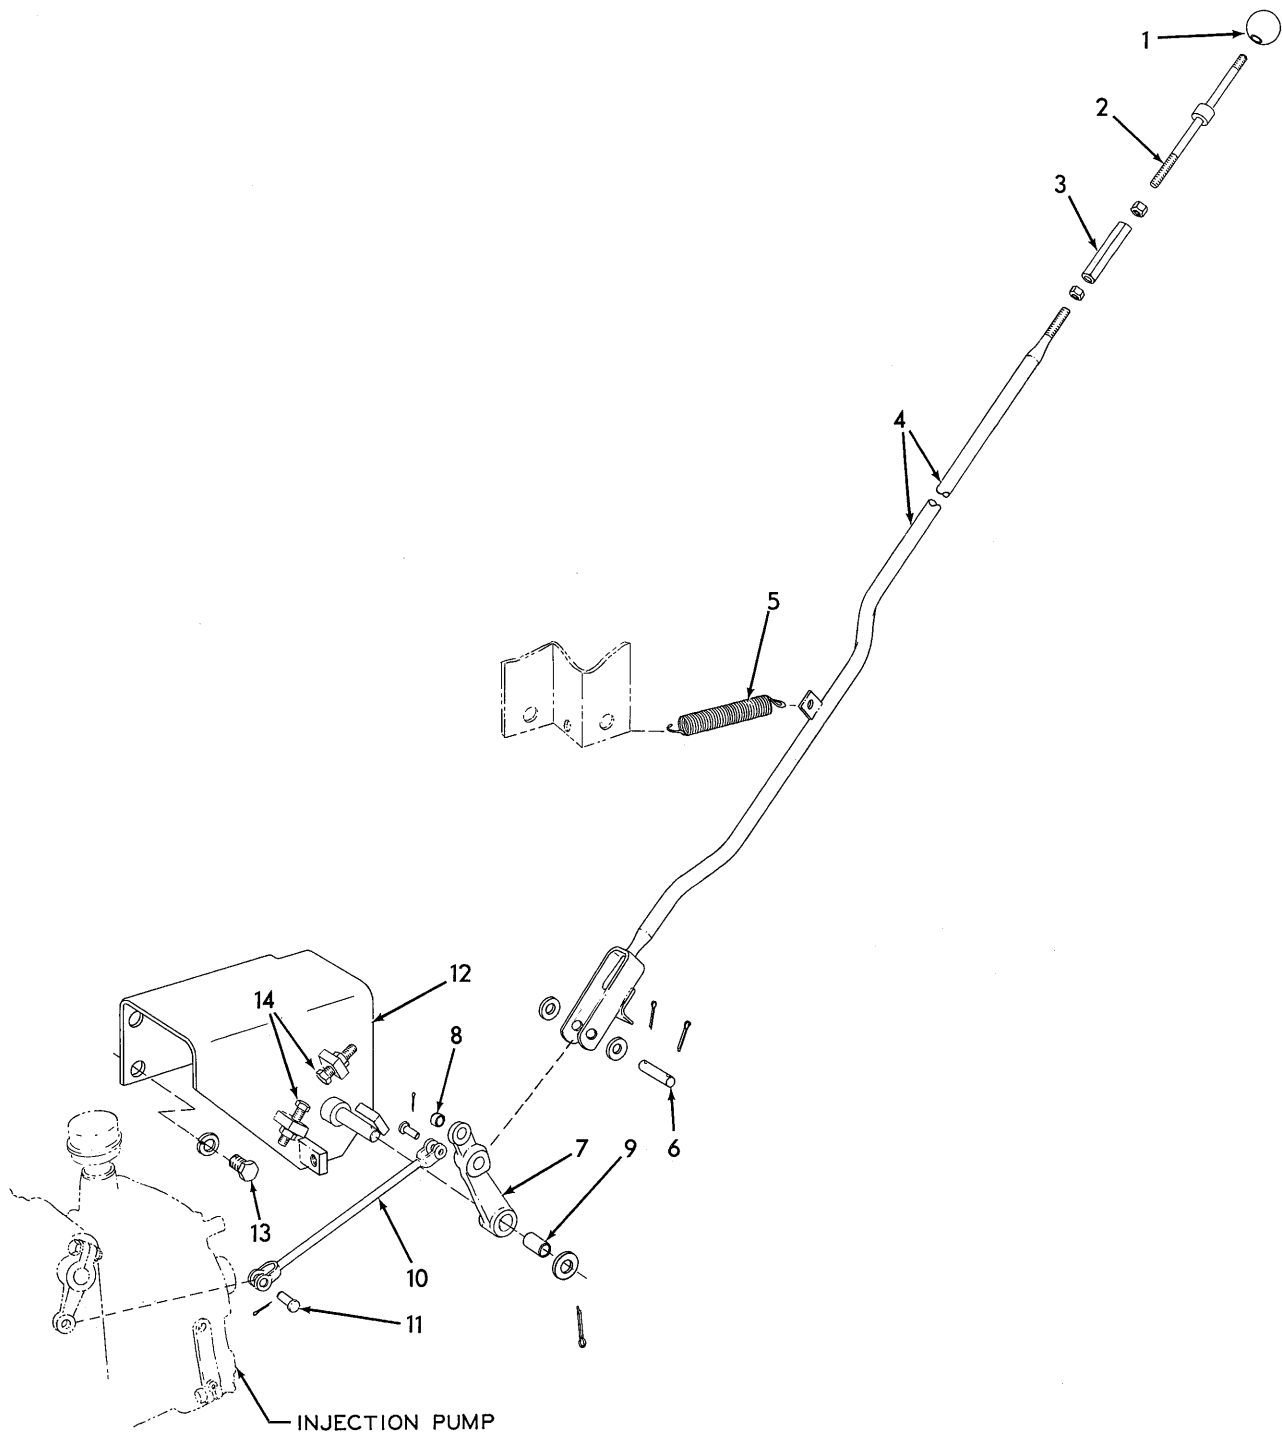


ENGINE SHUT-OFF CONTROL

T-40613


ENGINE SHUT-OFF CONTROL

ITEM	PART NO.	QTY.	DESCRIPTION
1	659075	1	KNOB, shut-off rod
2	631555	1	ROD, upper
	919763	1	NUT, 3/8"NF (left-hand thread)
3	095421	1	NUT, control adjustment
4	650394	1	ROD, intermediate
	911048	1	NUT, jam, 3/8"NF
5	072438	1	SPRING, retracting
6	631477	1	PIN, yoke, intermediate rod
	911115	2	WASHER, plain, SAE std., 3/8"
	900942	2	PIN, cotter, 3/32" x 5/8"
7	631492	1	LEVER ASSEMBLY, intermediate rod (Includes items 8 and 9)
8	624585	1	BUSHING, intermediate rod lever (small)
9	631476	1	BUSHING, intermediate rod lever (large)
10	630311	1	ROD, lower
11	628738	2	PIN, yoke, lower rod
	900970	2	PIN, cotter, 1/16" x 1/2"
12	631425	1	BRACKET, supporting, control linkage
13	910244	1	WASHER, plain, SAE std., 1/2"
	900806	1	PIN, cotter, 1/8" x 1"
	097494	3	CAPSCREW, Nylok, 1/2"NC x 1"
	904208	3	LOCKWASHER, 1/2"
14	634650	2	CAPSCREW, lever stop (3/8"NC x 1-1/2")
	911034	2	NUT, jam, 3/8"NC

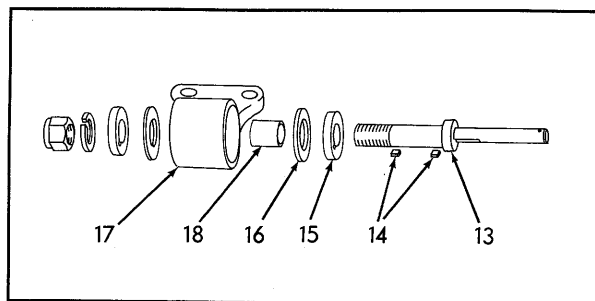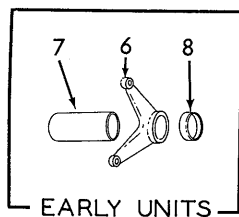

SEE ENGINE
SHUT-OFF CONTROL

INJECTION PUMP

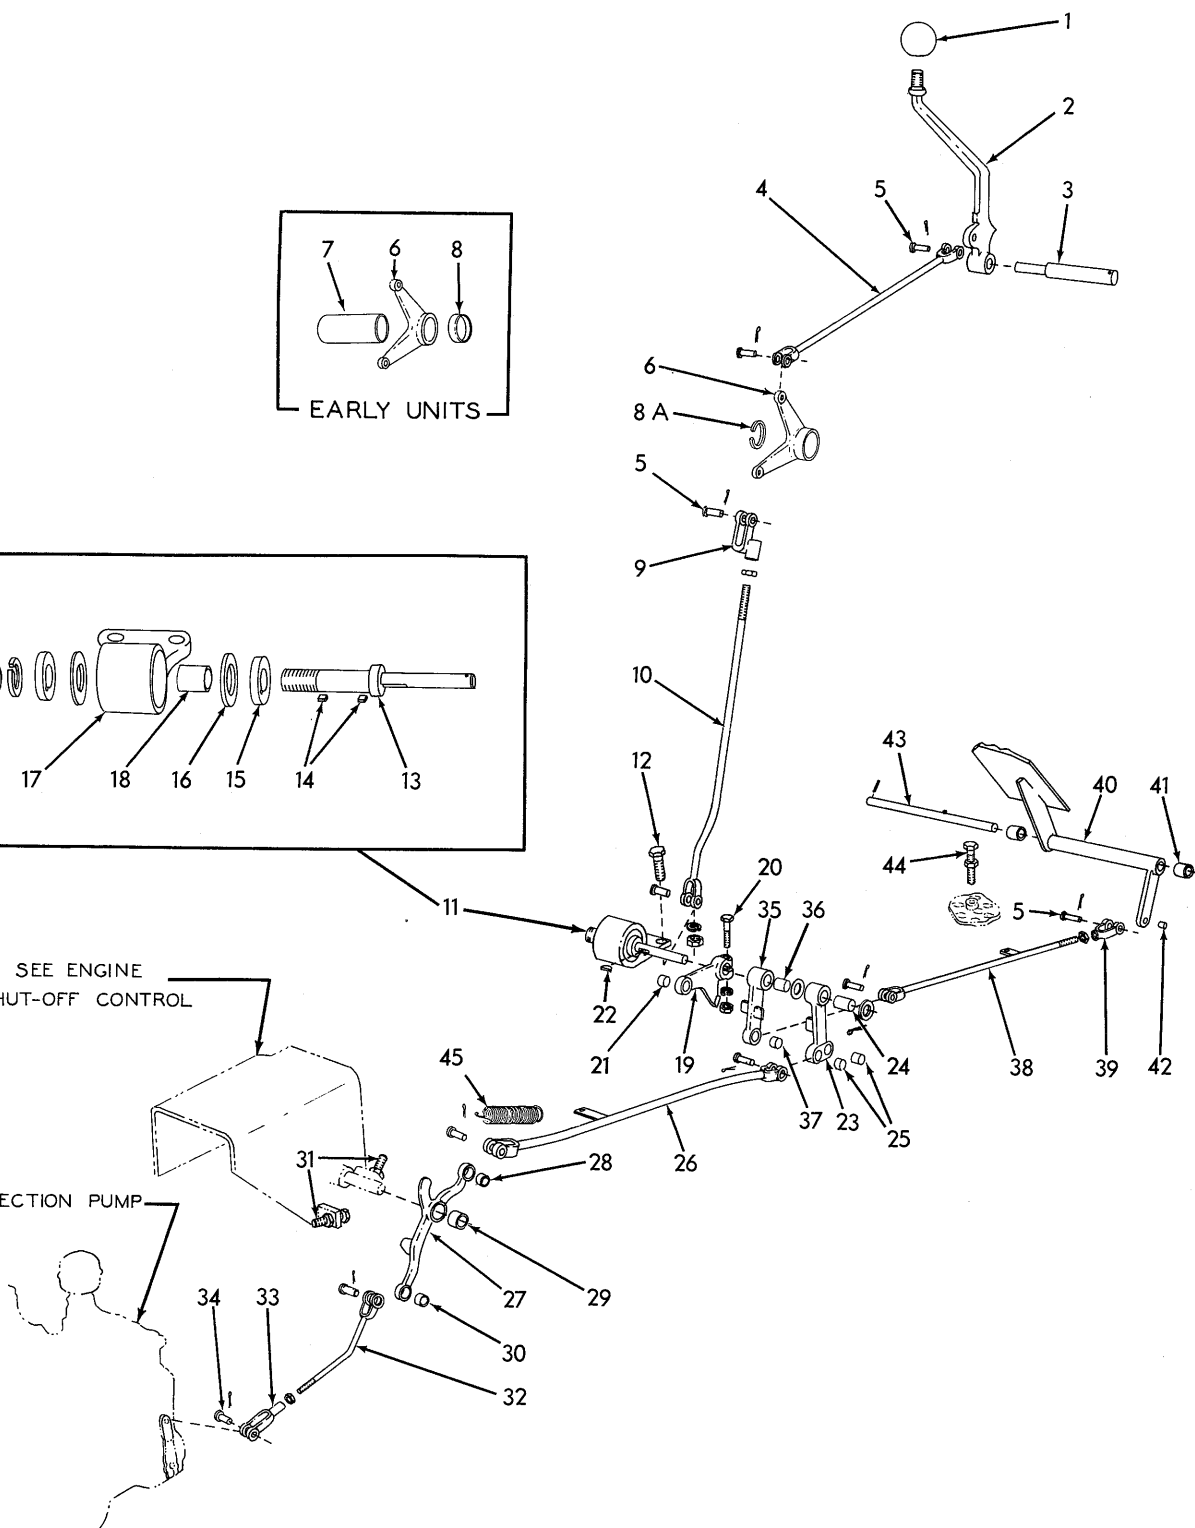

THROTTLE CONTROL

T-70538


THROTTLE CONTROL

ITEM	PART NO.	QTY.	DESCRIPTION
1	090020	1	KNOB, operating lever
2	631975	1	LEVER, operating
3	-----	1	SHAFT, operating lever (See STEERING LEVERS AND LINKAGE)
4	632059	1	ROD, upper (15-1/8" long)(Used prior to tractor #6799)
	631987	1	ROD, upper (14-5/8" long)(Effective with tractor #6799)
5	078810	8	PIN, yoke, control rod
	900942	8	PIN, cotter, 3/32" x 5/8"
6	081094	1	BELLCRANK, upper rod
7	096409	1	SPACER, bellcrank (4-3/16" long) (Used prior to tractor #7536)
8	081132	1	SPACER, bellcrank (5/16" thick) (Used prior to tractor #7514)
8A	052225	1	RING, snap, bellcrank retaining (Effective with tractor #7536)
9	634074	1	YOKE, upper rod
10	641733	1	ROD, intermediate, upper (14-1/8" long)(Used prior to tractor #6799)
	645045	1	ROD, intermediate, upper (14-3/4" long)(Effective with tractor #6799)
	911048	1	NUT, jam, 3/8"NF
11	631683	1	FRICITION ASSEMBLY (Includes items 13 thru 18)
12	614478	2	CAPSCREW, 1/2"NF x 1-3/8"
	904208	2	LOCKWASHER, 1/2"
	911043	2	NUT, 1/2"NF
	910244	2	WASHER, plain, SAE std., 1/2"
	900806	1	PIN, cotter, 1/8" x 1"
13	631682	1	SHAFT, friction
	904369	1	LOCKWASHER, 3/4"
	916591	1	NUT, elastic stop, 3/4"NF
14	632716	2	KEY, friction washer
15	632710	2	WASHER, friction
16	632747	2	DISC, friction
17	632766	1	HOUSING ASSEMBLY, friction (Includes item 18)
18	632752	1	BUSHING, friction housing
19	631494	1	LEVER ASSEMBLY, friction shaft (Includes item 21)
20	041981	1	CAPSCREW, 5/16"NF x 1-1/2"
	904205	1	LOCKWASHER, 5/16"
	913636	1	NUT, 5/16"NF
21	624584	1	BUSHING, friction shaft lever
22	632756	1	KEY, friction shaft lever
23	631496	1	LEVER ASSEMBLY, intermediate lower rod (Includes items 24 and 25)


(Continued)

THROTTLE CONTROL (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
24	631476	1	BUSHING, intermediate lower rod lever (large)
25	624584	2	BUSHING, intermediate lower rod lever (small)
26	631649	1	ROD, intermediate, lower
27	642165	1	BELLCRANK ASSEMBLY, lower rod (Includes items 28, 29 and 30)
28	624584	1	BUSHING, bellcrank (3/8" long)
29	631476	1	BUSHING, bellcrank (7/8" long)
30	624585	1	BUSHING, bellcrank (1/4" long)
31	634650	2	CAPSCREW, lever stop (3/8"NC x 1-1/2")
	911034	2	NUT, jam, 3/8"NC
32	644633	1	ROD, lower
	910267	1	NUT, jam, 1/4"NF
33	628737	1	YOKE, lower rod
34	628738	2	PIN, yoke, lower rod
	900970	2	PIN, cotter, 1/16" x 1/2"
35	631498	1	LEVER ASSEMBLY, decelerator rod (Includes items 36 and 37)
36	631476	1	BUSHING, decelerator lever (large)
37	624584	1	BUSHING, decelerator lever (small)
38	631652	1	ROD, decelerator
	911048	1	NUT, jam, 3/8"NF
39	628736	1	YOKE, decelerator rod
40	631643	1	PEDAL ASSEMBLY, decelerator (Includes items 41 and 42)
41	063222	2	BUSHING, decelerator pedal (large)
42	624584	1	BUSHING, decelerator pedal (small)
43	631646	1	SHAFT, decelerator pedal
	918111	1	PIN, spring, 1/8" x 1"
44	916424	1	CAPSCREW, pedal stop (1/2"NF)(Early units)
	913830	1	NUT, jam, 1/2"NF
	916319	1	CAPSCREW, pedal stop (1/2"NC)(Late units)
	911035	1	NUT, jam, 1/2"NC
45	043881	1	SPRING, retracting, intermediate rod

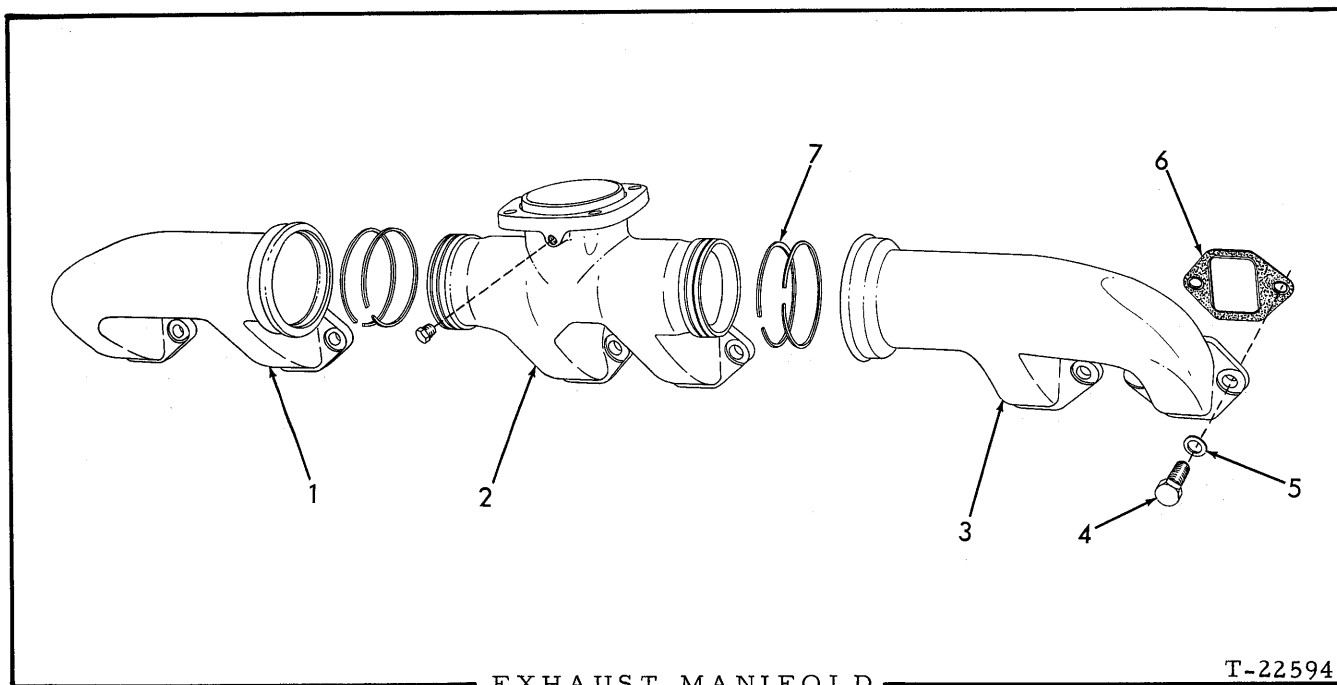

ITEM	PART NO.	QTY.	DESCRIPTION
1	4376892	1	MANIFOLD, rear section
2	4385469	1	MANIFOLD, center section
	917425	1	PLUG, pipe, hex-hd., brass, 1/4"NPT
3	4376891	1	MANIFOLD, front section
4	4346208	12	STUD, exhaust manifold (2-1/8" long)(Used prior to engine #16-05386)
	4253270	12	NUT, 1/2"NC
	915987	12	CAPSCREW, exhaust manifold (1/2"NC x 1-1/2")(Effective with engine #16-05386)
5	4371107	12	WASHER, manifold capscREW and stud nut
6	4375865	6	GASKET, exhaust manifold
7	4366243	4	RING, sealing

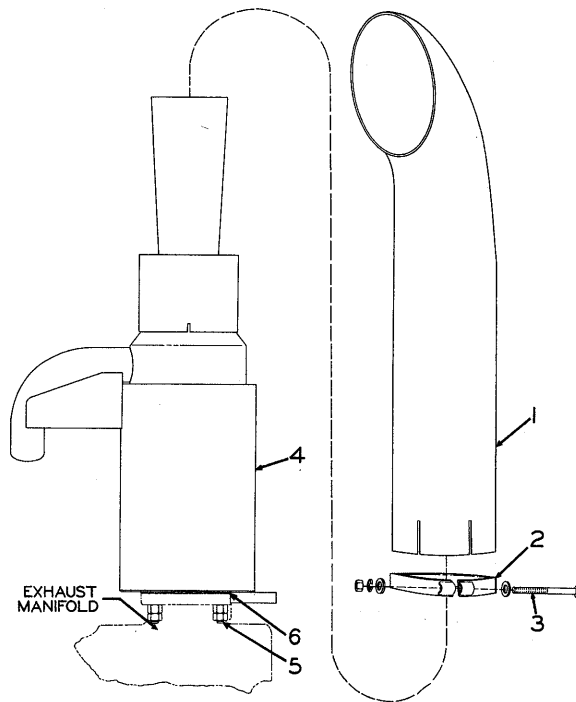


EXHAUST PIPE

T-40496

ITEM PART NO. QTY. DESCRIPTION

NOTE: Also see page 73 for special EXHAUST EXTENSION

1	630158	1	PIPE, exhaust
2	629755	1	CLAMP, exhaust pipe
3	053619	1	CAPSCREW
	044973	2	WASHER, plain
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
4	630159	1	ASPIRATOR, air cleaner
5	4339378	4	STUD, attaching
	917260	8	NUT, brass, 1/2"NC
6	4366244	1	GASKET, exhaust flange

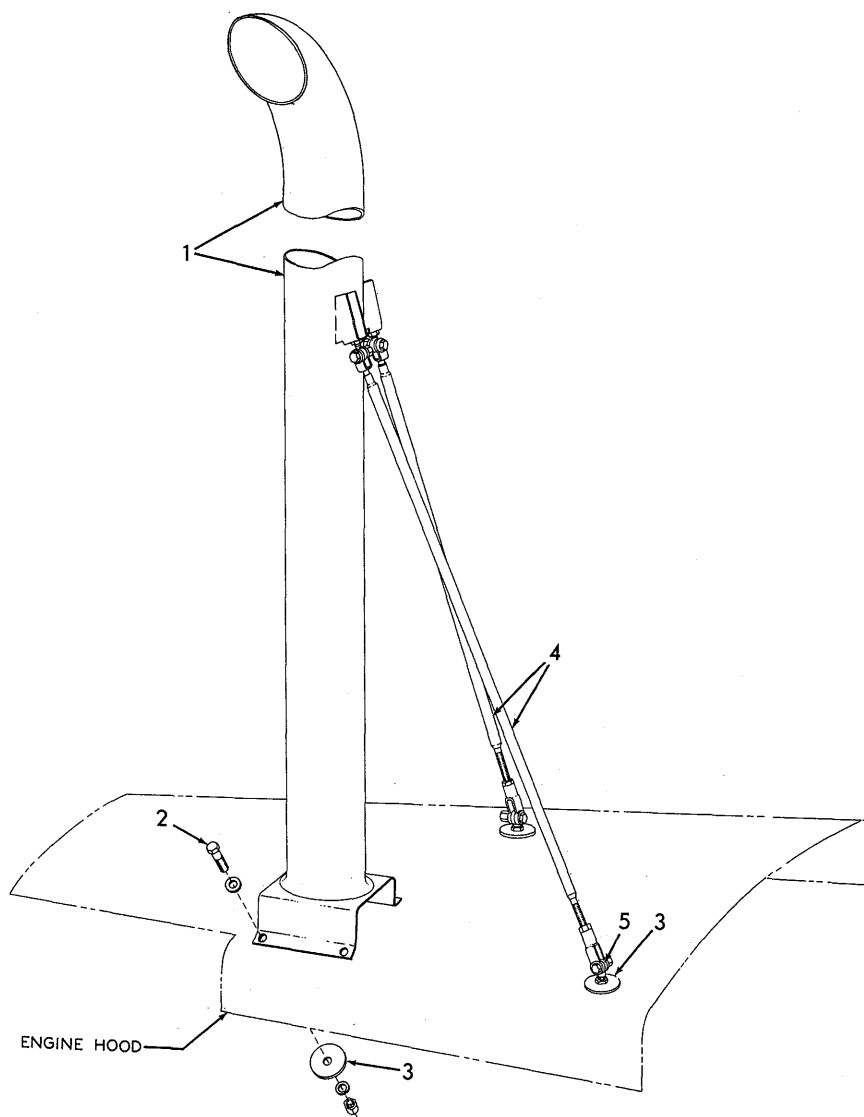


EXHAUST EXTENSION

T-73608

USAGE: Special equipment

ITEM	PART NO.	QTY.	DESCRIPTION
1	655108	1	TUBE, extension
2	035236	4	CAPSCREW, 1/2"NC x 1-3/4"
	064531	4	WASHER, plain
	904208	4	LOCKWASHER, 1/2"
	911028	4	NUT, 1/2"NC
3	085453	8	WASHER, hood reinforcing
4	655102	2	ROD, bracing
	911043	2	NUT, 1/2"NF
	917666	2	YOKE, rod end, adjustable, 1/2"NF
	912192	4	CAPSCREW, 1/2"NF x 1-3/4"
	038234	4	NUT, high, 1/2"NF
5	067902	4	BOLT, eye
	911043	8	NUT, 1/2"NF

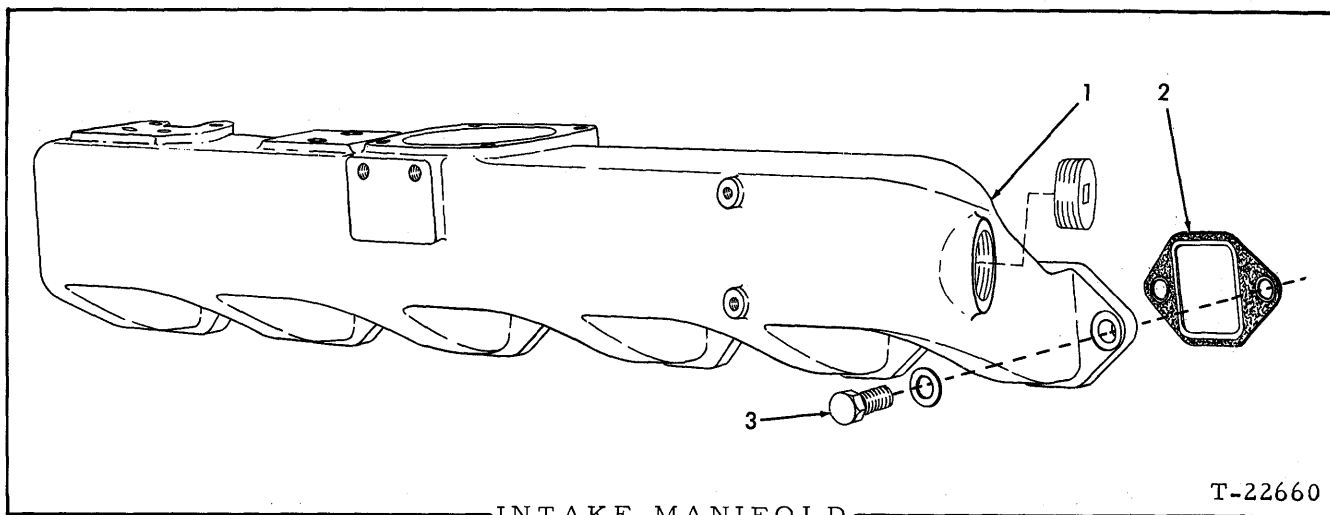




ITEM	PART NO.	QTY.	DESCRIPTION	
1	4386948	1	MANIFOLD, air intake	
	901668	1	PLUG, pipe, ctsk-hd., 1-1/4"NPT	
2	4387697	6	□ GASKET, intake manifold	
3	4367187	2	STUD (2" long)	} Used prior to engine #16-05386
	4386041	10	STUD (2-5/16" long)	
	904208	12	LOCKWASHER, 1/2"	
	910195	12	NUT, 1/2"NF	} Effective with engine #16-05386
	920541	12	CAPSCREW, manifold attaching (1/2"NC x 1-1/2" Nylok)	
	910244	12	WASHER, plain SAE std., 1/2"	
□ Also see PACKAGED PARTS				

AIR CLEANER

USAGE: Tractors prior to serial No. 7437

ITEM	PART NO.	QTY.	DESCRIPTION
1	630160	1	CLEANER ASSEMBLY, air (Consists of items 6 thru 13A)
2	035061	1	CAPSCREW, 1/2"NC x 1-1/4"
3	036203	1	CAPSCREW, 1/2"NC x 1-3/4"
	910244	1	WASHER, plain, SAE std., 1/2"
4	035018	2	CAPSCREW, 1/2"NF x 1-1/2"
	904208	3	LOCKWASHER, 1/2"
	911043	2	NUT, 1/2"NF
5	064531	5	WASHER, plain (heavy)
6	634446	1	CARTRIDGE, air cleaner
7	634443	1	PANEL, pre-cleaner
8	634442	1	HOUSING ASSEMBLY, air cleaner (Includes items 9 thru 13)
9	650959	1	ADAPTER KIT, restriction indicator (Includes filter and items listed below)(Used prior to tractor #7296)
	911048	1	NUT, jam, 3/8"NF
	904206	1	LOCKWASHER, 3/8"
	900817	1	WASHER, plain, U.S. std., 3/8"
	638727	1	GASKET, adapter
	650302	1	ADAPTER, restriction indicator (1/8"NPT nipple. Includes filter) (Effective with tractor #7296)
10	196663	4	T-BOLT, pre-cleaner panel
11	650301	4	SPRING, pre-cleaner panel T-bolt
12	196662	4	HOOK, pre-cleaner panel
13	056863	4	NUT, wing, pre-cleaner panel bolt
13A	659195	24	WASHER, spring, pre-cleaner panel bolt
14	630154	1	BRACKET, supporting, air cleaner
15	632673	1	SHIELD, heat
	911035	1	NUT, jam, 1/2"NC
	904208	1	LOCKWASHER, 1/2"
16	064531	1	WASHER, plain
17	081214	1	HOSE, air cleaner to inlet elbow
	921916	4	CLAMP, hose, 3-13/16" to 4-3/4" diam.
18	097486	1	ELBOW, air inlet
19	035061	4	CAPSCREW, 1/2"NC x 1-1/4"
	904208	4	LOCKWASHER, 1/2"
20	4361551	1	□GASKET, air inlet elbow
21	630157	1	HOSE, aspirator
22	185502	2	CLAMP ASSEMBLY, aspirator hose
23	645075	1	HOSE, restriction indicator (See HOSE PARTS)
	919174	2	CONNECTOR, flare type, 1/4" tube, 1/8"NPT female
	904273	1	NIPPLE, pipe, 1/8"NPT x 1"

(Continued)

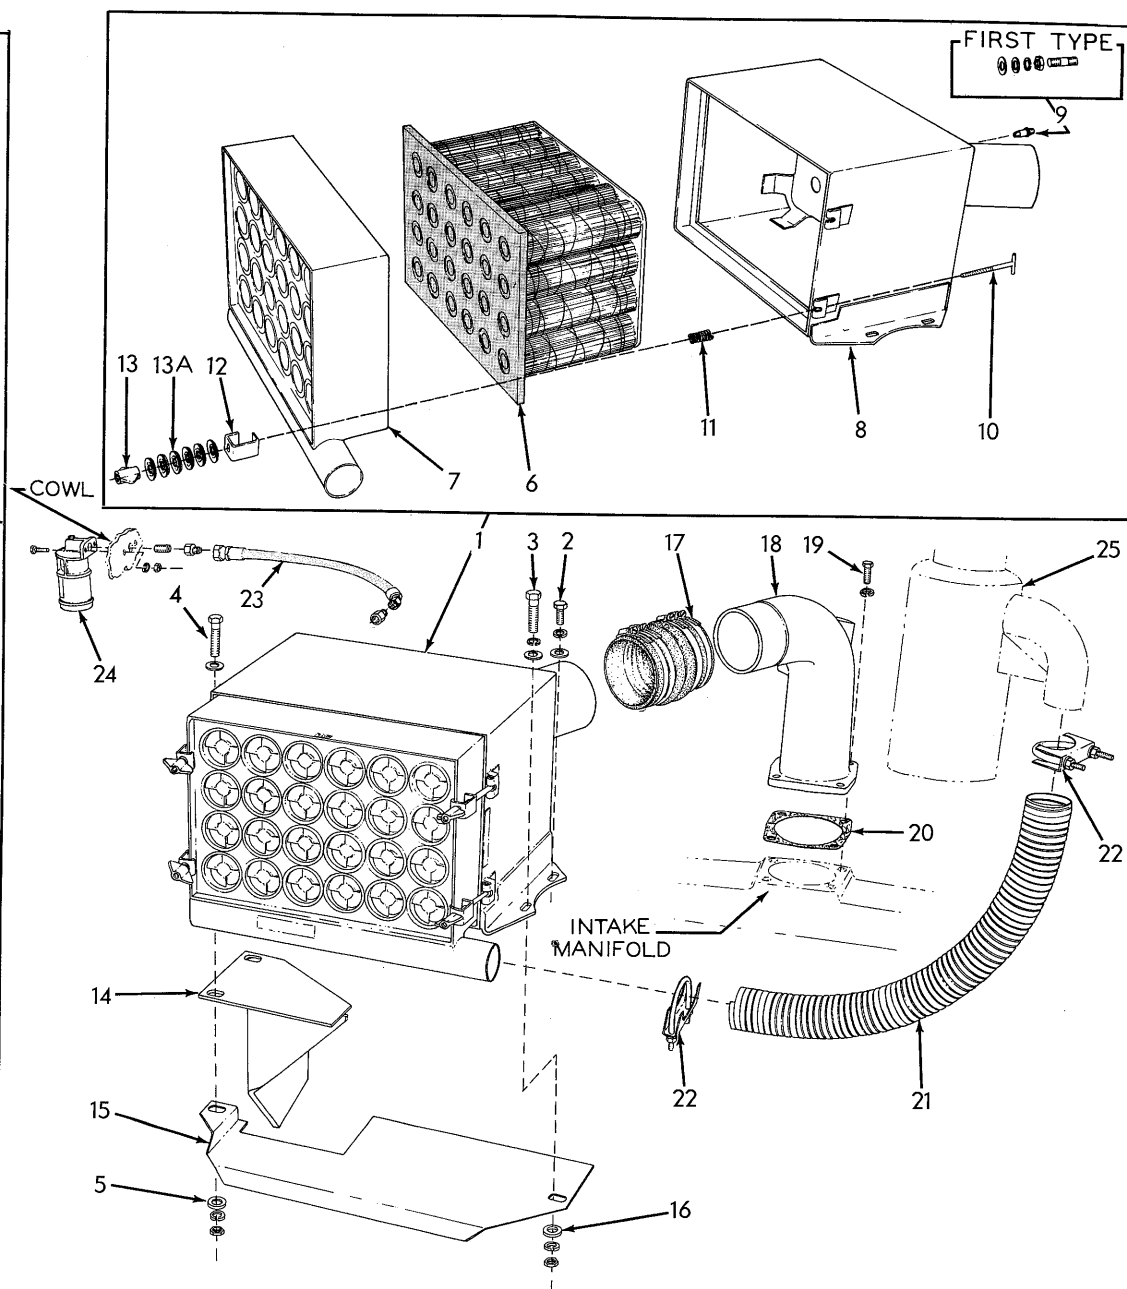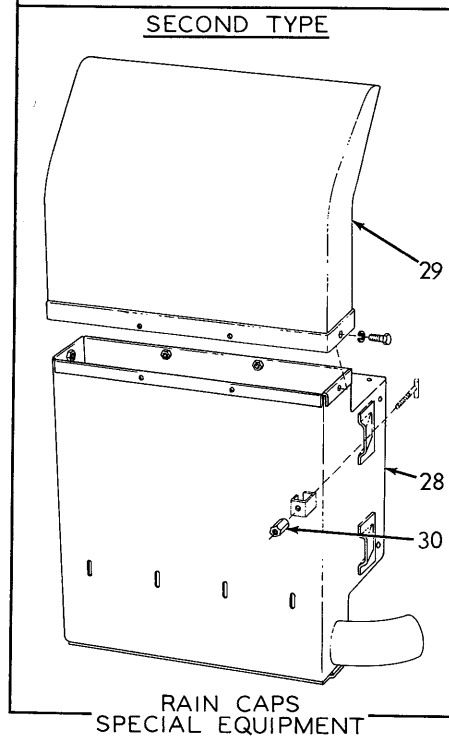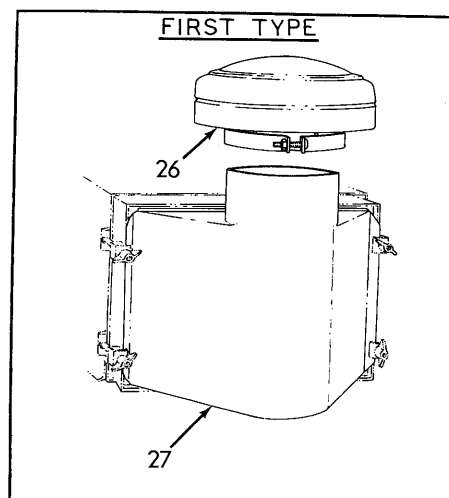

- AIR CLEANER (First type)

T-70517

AIR CLEANER (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
24	631564	1	INDICATOR, air restriction (Serviced only as a unit)
	912789	2	CAPSCREW, 1/4"NF x 3/4"
	904204	2	LOCKWASHER, 1/4"
	911040	2	NUT, 1/4"NF
25	-----	1	ASPIRATOR (See EXHAUST PIPE)
			<u>NOTE:</u> Items listed below are special equipment
26	645028	1	RAINCAP (Includes mounting clamp)
27	645033	1	ADAPTOR, rain cap
28	651042	1	PANEL, air intake (Replaces standard PANEL 634443)
29	650886	1	ADAPTER, air intake
	916284	6	CAPSCREW, 1/4"NC x 1/2"
	904204	6	LOCKWASHER, 1/4"
30	655140	4	NUT, air intake panel

FIRST TYPE

SECOND
TYPE


AIR CLEANER

USAGE: Tractors serial No. 7437 and up

ITEM PART NO. QTY. DESCRIPTION

NOTE: Also see page 80 for special AIR INTAKE EXTENSION

1	650911	1	CLEANER ASSEMBLY, air (Consists of items 6 thru 13A)
2	035061	1	CAPSCREW, 1/2"NC x 1-1/4"
3	036203	1	CAPSCREW, 1/2"NC x 1-3/4"
	910244	1	WASHER, plain, SAE std., 1/2"
4	035018	2	CAPSCREW, 1/2"NF x 1-1/2"
	904208	3	LOCKWASHER, 1/2"
	911043	2	NUT, 1/2"NF
5	064531	5	WASHER, plain (heavy)
6	650892	1	PRE-CLEANER
7	634446	1	CARTRIDGE, air cleaner
8	634442	1	HOUSING ASSEMBLY, air cleaner (Includes items 9 thru 13)
9	650302	1	ADAPTER, restriction indicator (Includes filter)
10	196663	4	T-BOLT, pre-cleaner
11	650301	4	SPRING, pre-cleaner bolt
12	196662	4	HOOK, pre-cleaner
13	056863	4	NUT, wing, pre-cleaner bolt
13A	659195	24	WASHER, spring, pre-cleaner bolt
14	630154	1	BRACKET, supporting, air cleaner
15	632673	1	SHIELD, heat
	911035	1	NUT, jam, 1/2"NC
	904208	1	LOCKWASHER, 1/2"
16	064531	1	WASHER, plain
17	081214	1	HOSE, air cleaner to inlet elbow
	921916	4	CLAMP, hose, 3-13/16" to 4-3/4" diam.
18	097486	1	ELBOW, air inlet
19	035061	4	CAPSCREW, 1/2"NC x 1-1/4"
	904208	4	LOCKWASHER, 1/2"
20	4361551	1	□GASKET, air inlet elbow
21	630157	1	HOSE, aspirator
22	185502	2	CLAMP ASSEMBLY, aspirator hose
23	645075	1	HOSE, restriction indicator (See HOSE PARTS)
	919174	2	CONNECTOR, flare type, 1/4" tube, 1/8"NPT female
	904273	1	NIPPLE, pipe, 1/8"NPT x 1"
24	631564	1	INDICATOR, air restriction (Serviced only as a unit)
	924956	2	CAPSCREW, 1/4"NF x 3/4"
	904204	2	LOCKWASHER, 1/4"
	911040	2	NUT, 1/4"NF
25	650886	1	ADAPTER, air intake
	047478	6	CAPSCREW, 1/4"NC x 5/8"
	904204	6	LOCKWASHER, 1/4"
	911114	6	WASHER, plain, SAE std., 1/4"
26	-----	1	ASPIRATOR (See EXHAUST PIPE)

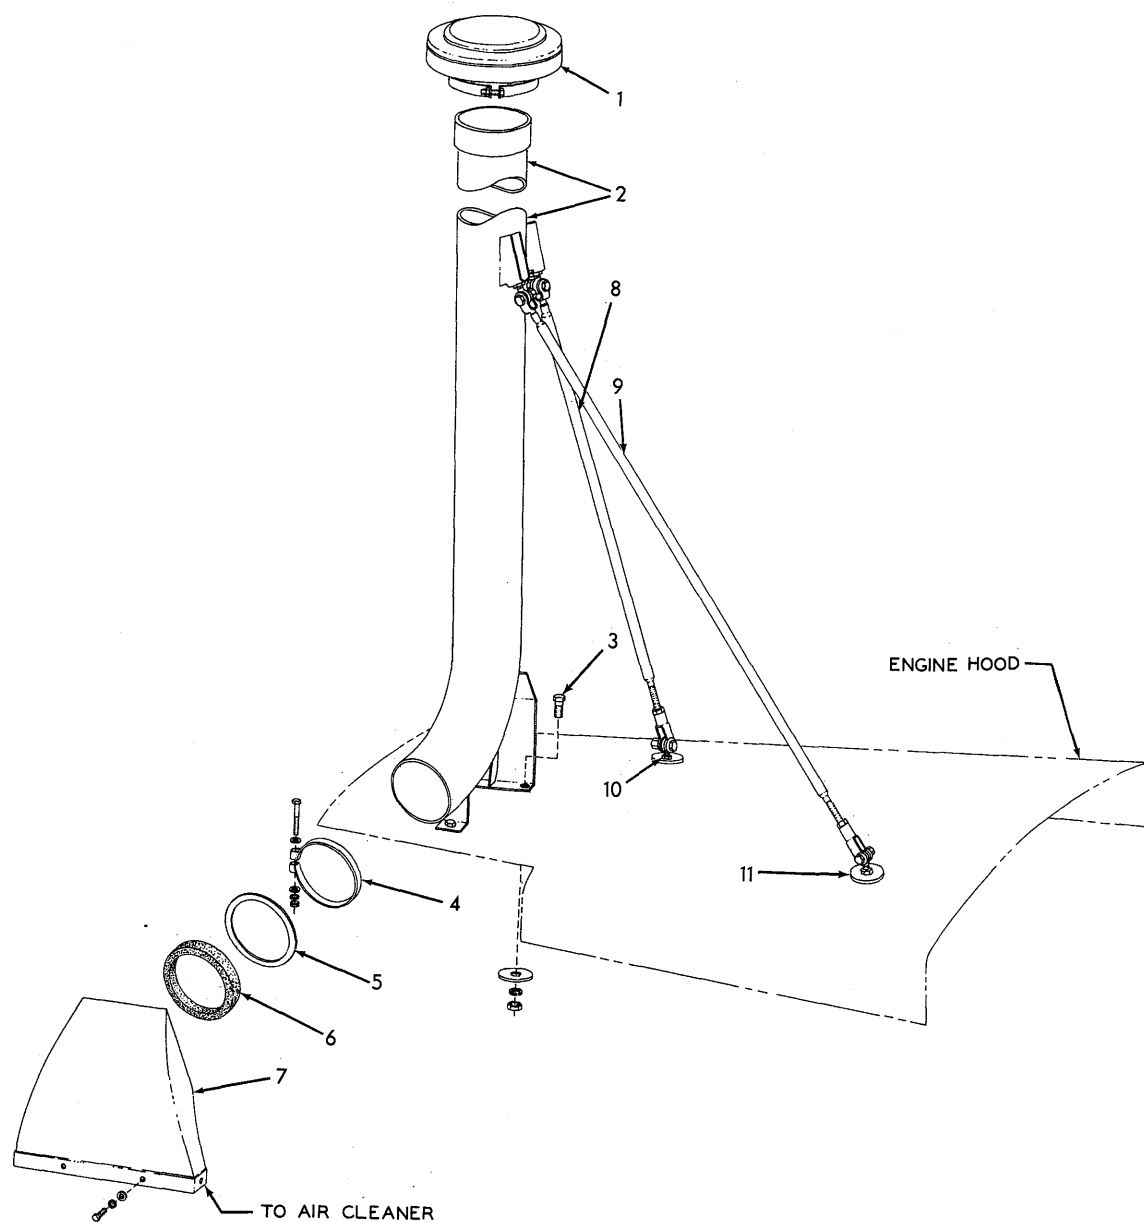

AIR INTAKE EXTENSION

T-73609




USAGE: Special equipment. For units with dry-type AIR CLEANER 650911.

ITEM	PART NO.	QTY.	DESCRIPTION
1	645028	1	RAINCAP (Includes clamp)
2	655258	1	TUBE, extension
3	035061	3	CAPSCREW, 1/2"NC x 1-1/4"
	085453	3	WASHER, plain
	904208	3	LOCKWASHER, 1/2"
	911028	3	NUT, 1/2"NC
4	655064	1	CLAMP, gasket
	920613	1	CAPSCREW, 3/8"NF x 3"
	900817	2	WASHER, plain, U.S. std., 3/8"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF

(Continued)

AIR INTAKE EXTENSION (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
5	655044	1	WASHER, extension pipe gasket
6	655045	1	GASKET, extension pipe
7	655139	1	ADAPTER, air intake (Replaces std. ADAPTER 650886)
	047478	6	CAPSCREW, 1/4"NC x 5/8"
	904204	6	LOCKWASHER, 1/4"
	911114	6	WASHER, plain, SAE std., 1/4"
8	655253	1	ROD, bracing, right side
	911043	1	NUT, 1/2"NF
	917666	1	YOKE, rod end, adjustable, 1/2"NF
	912192	2	CAPSCREW, 1/2"NF x 1-3/4"
	038234	2	NUT, high, 1/2"NF
9	655096	1	ROD, bracing, left side
	911043	1	NUT, 1/2"NF
	917666	1	YOKE, rod end, adjustable, 1/2"NF
	912192	2	CAPSCREW, 1/2"NF x 1-3/4"
	038234	2	NUT, high, 1/2"NF
10	067902	4	BOLT, eye
	911043	8	NUT, 1/2"NF
11	085453	4	WASHER, hood reinforcing

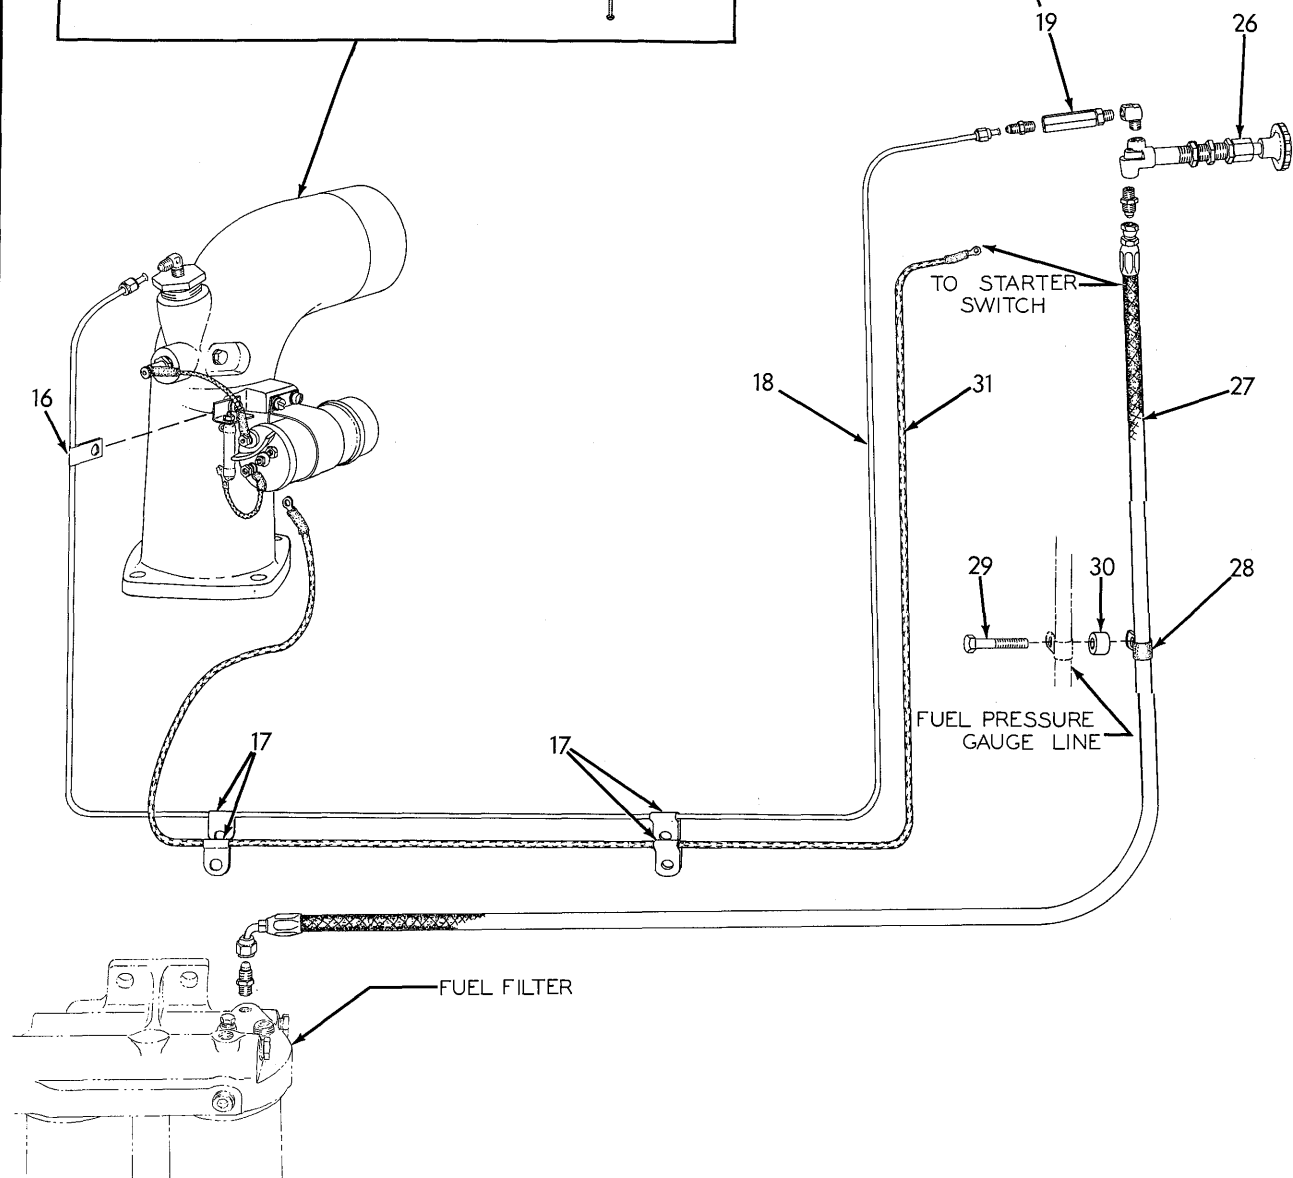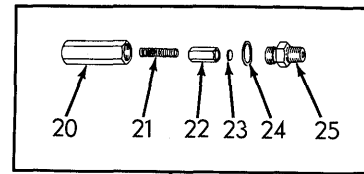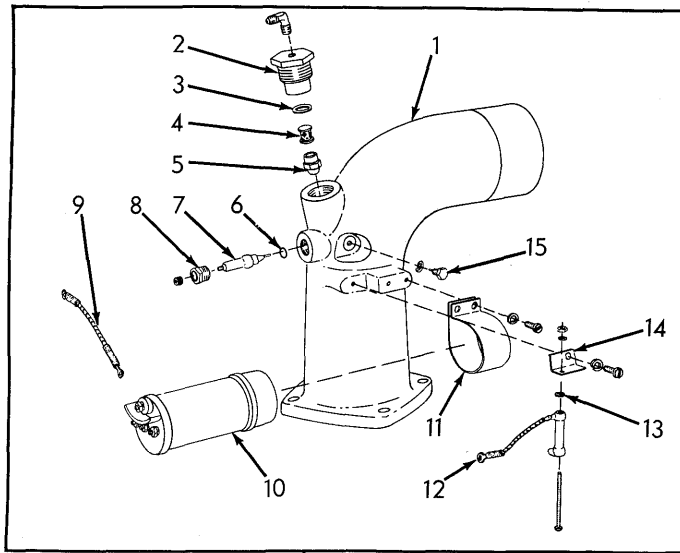

ENGINE AIR HEATER


USAGE: Special equipment. For all units except those equipped with Engine Primer.

ITEM	PART NO.	QTY.	DESCRIPTION
1	097512	1	ELBOW, air intake (Replaces standard ELBOW 097486)
2	088038	1	BUSHING, spray nozzle
3	630787	1	WASHER, spray nozzle
4	631225	1	STRAINER ASSEMBLY, spray nozzle (1 body and 1 screen)
5	631224	1	NOZZLE ASSEMBLY, spray (Includes item 4)
6	631566	1	GASKET, insulator
7	631226	1	INSULATOR PACKAGE (Includes terminal nut and item 6)
8	630828	1	NUT, insulator retaining
9	051006	1	CABLE, coil to insulator
10	097026	1	COIL, ignition (Serviced only as a unit)
11	631199	1	BRACKET, ignition coil mounting
	912226	2	SCREW, machine, fil-hd., 1/4"NC x 5/8"
	904204	2	LOCKWASHER, 1/4"
12	630830	1	RESISTOR
	915922	1	SCREW, machine #8-32 x 2-1/4"
	915923	1	LOCKWASHER, external teeth, #8
	907154	1	NUT, #8-32
13	631198	1	WASHER, insulating
14	644133	1	BRACKET, resistor mounting
	912226	1	SCREW, machine, fil-hd., 1/4"NC x 5/8"
	904204	1	LOCKWASHER, 1/4"
15	630827	1	SCREW ASSEMBLY, electrode (1 screw and 1 electrode)
	904204	1	LOCKWASHER, 1/4"
16	200479	1	CLIP, tube supporting (3/16" diam., 13/32" bolt-hole)
17	223502	4	CLIP, supporting, tube and cable (3/16" diam., 17/32" bolt-hole)
18	094665	1	TUBE ASSEMBLY, pump to nozzle (Includes nuts)
	919204	1	ELBOW, flare type, 3/16" tube, 1/8"NPT male
	919244	1	CONNECTOR, flare type, 3/16" tube, 1/8"NPT male
19	094642	1	VALVE ASSEMBLY, check (Consists of items 20 thru 25)
20	094890	1	BODY, check valve
21	048603	1	SPRING, check valve
22	048608	1	PLUNGER, check valve
23	048606	1	DISC, check valve
24	630713	1	WASHER, check valve

(Continued)


ENGINE AIR HEATER (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
25	092793	1	CONNECTOR, check valve
26	092160	1	PUMP ASSEMBLY (See page 85 for parts)
	915399	1	ELBOW, street, 90°, brass, 1/8"NPT
27	643723	1	HOSE, fuel filter to pump (See HOSE PARTS)
	919171	2	CONNECTOR, flare type, 1/4" tube, 1/8"NPT male
28	644006	1	CLIP, hose supporting
29	046419	1	CAPSCREW, 3/8"NF x 2"
30	073106	1	SPACER, hose clip
31	067177	1	CABLE, switch to coil

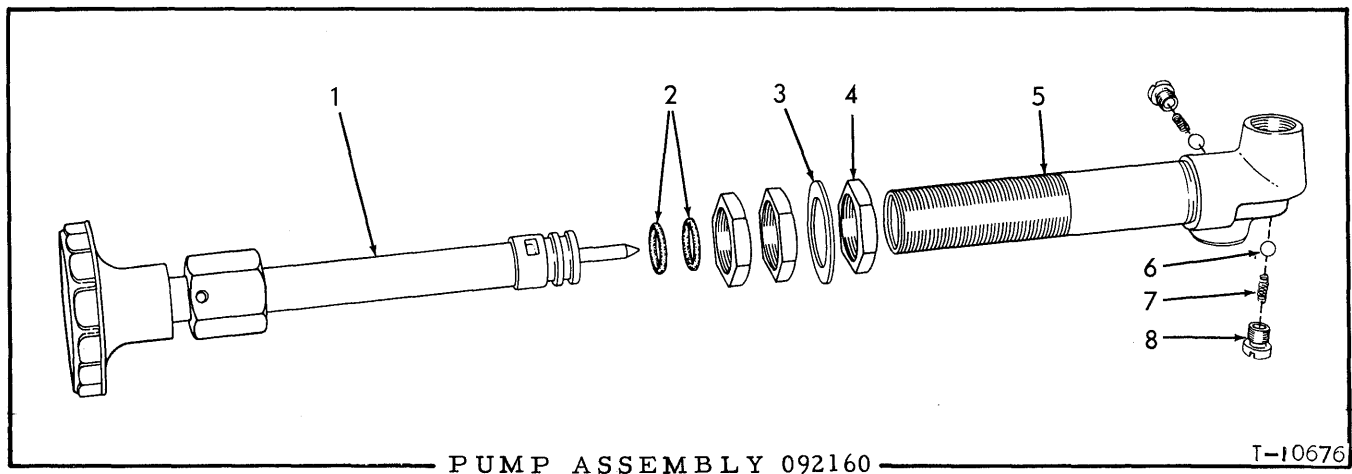

USAGE: See pages 83 and 86


ITEM	PART NO.	QTY.	DESCRIPTION
1	-----	1	PISTON ASSEMBLY (Not serviced separately)
2	923560	2	O-RING, plunger
3	066873	1	WASHER, mounting
4	066872	3	NUT, mounting
5	-----	1	BARREL ASSEMBLY (Not serviced separately)
6	066876	2	BALL, check valve (5/32" diam.)
7	066875	2	SPRING, check valve
8	066874	2	RETAINER, check valve

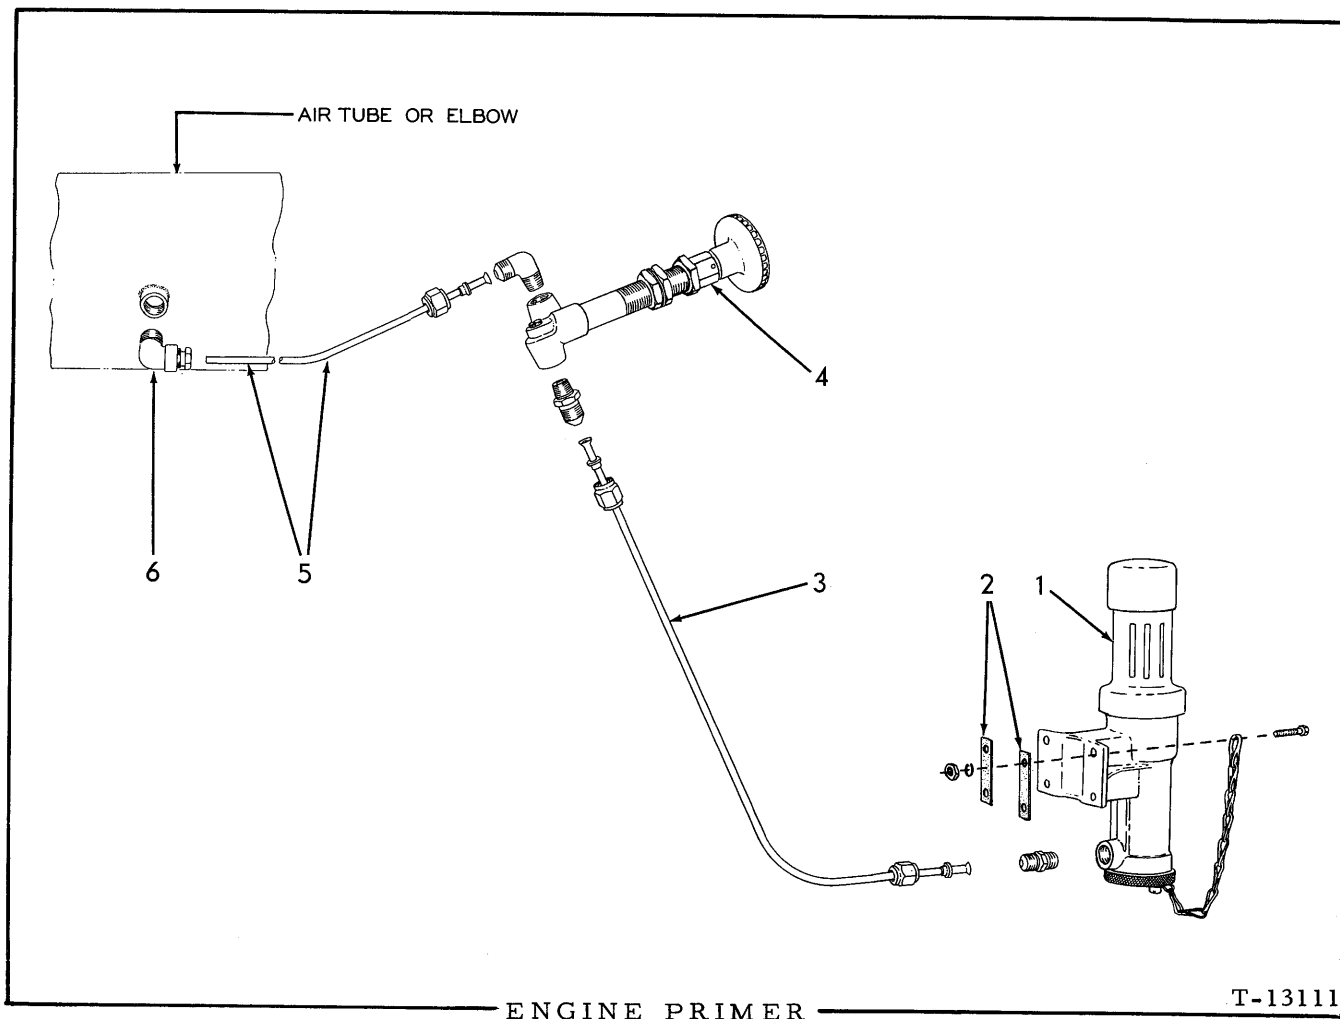

USAGE: Special equipment. For all units except those equipped with Air Heater

ITEM	PART NO.	QTY.	DESCRIPTION
------	----------	------	-------------

1	075771	1	DISPENSER ASSEMBLY, priming fuel (See page 87 for parts)
	913706	4	CAPSCREW, #10-24NC x 1"
	904203	4	LOCKWASHER, #10
	901310	4	NUT, #10-24NC
2	066261	6	GASKET, dispenser mounting
3	-----	1	TUBE, dispenser to pump (Order item 7)
	915488	2	NUT, Sealastic, 1/8" tube
	915486	2	RING, Sealastic, 1/8" tube (Includes ferrule)
	915556	2	CONNECTOR, Sealastic, 1/8" tube, 1/8"NPT male
4	092160	1	PUMP ASSEMBLY (See page.85 for parts)
5	-----	1	TUBE, pump discharge (Order item 7)
	915488	1	NUT, Sealastic, 1/8" tube
	915486	1	RING, Sealastic, 1/8" tube (Includes ferrule)
	915557	1	ELBOW, Sealastic, 1/8" tube, 1/8"NPT male
6	066517	1	ELBOW ASSEMBLY, fuel spray (Includes nozzle, nut and sleeve. Serviced only as a unit)
7	066253	-	TUBING, copper, 1/8"O.D., 10ft. roll (Use as req'd)(Not Illustrated)

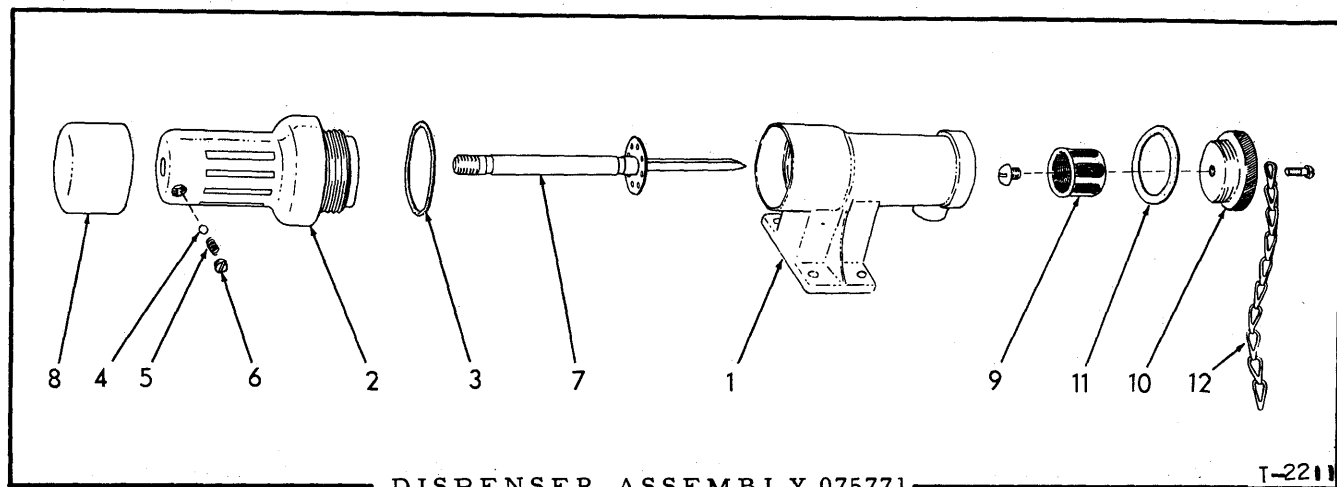


DISPENSER ASSEMBLY 075771

T-2211

USAGE: See page 86

ITEM	PART NO.	QTY.	DESCRIPTION
1	068878	1	BODY, fuel dispenser
2	068879	1	CHAMBER, fuel dispenser
3	069164	1	GASKET, fuel dispenser chamber
4	905357	1	BALL, steel, 3/16" diam.
5	066251	1	SPRING, plunger locking ball
6	066252	1	PLUG, retaining, locking ball spring
7	066255	1	PLUNGER, fuel dispenser
8	068881	1	KNOB, fuel dispenser plunger
9	068875	1	STRAINER, fuel dispenser
	915432	1	SCREW, machine, 1/4"NC x 5/16"
10	075770	1	PLUG, fuel dispenser strainer
11	068876	1	GASKET, fuel dispenser strainer plug
12	075769	1	CHAIN, strainer plug retaining
	901781	1	SCREW, machine, fil-hd., #10-32NF x 1/2"

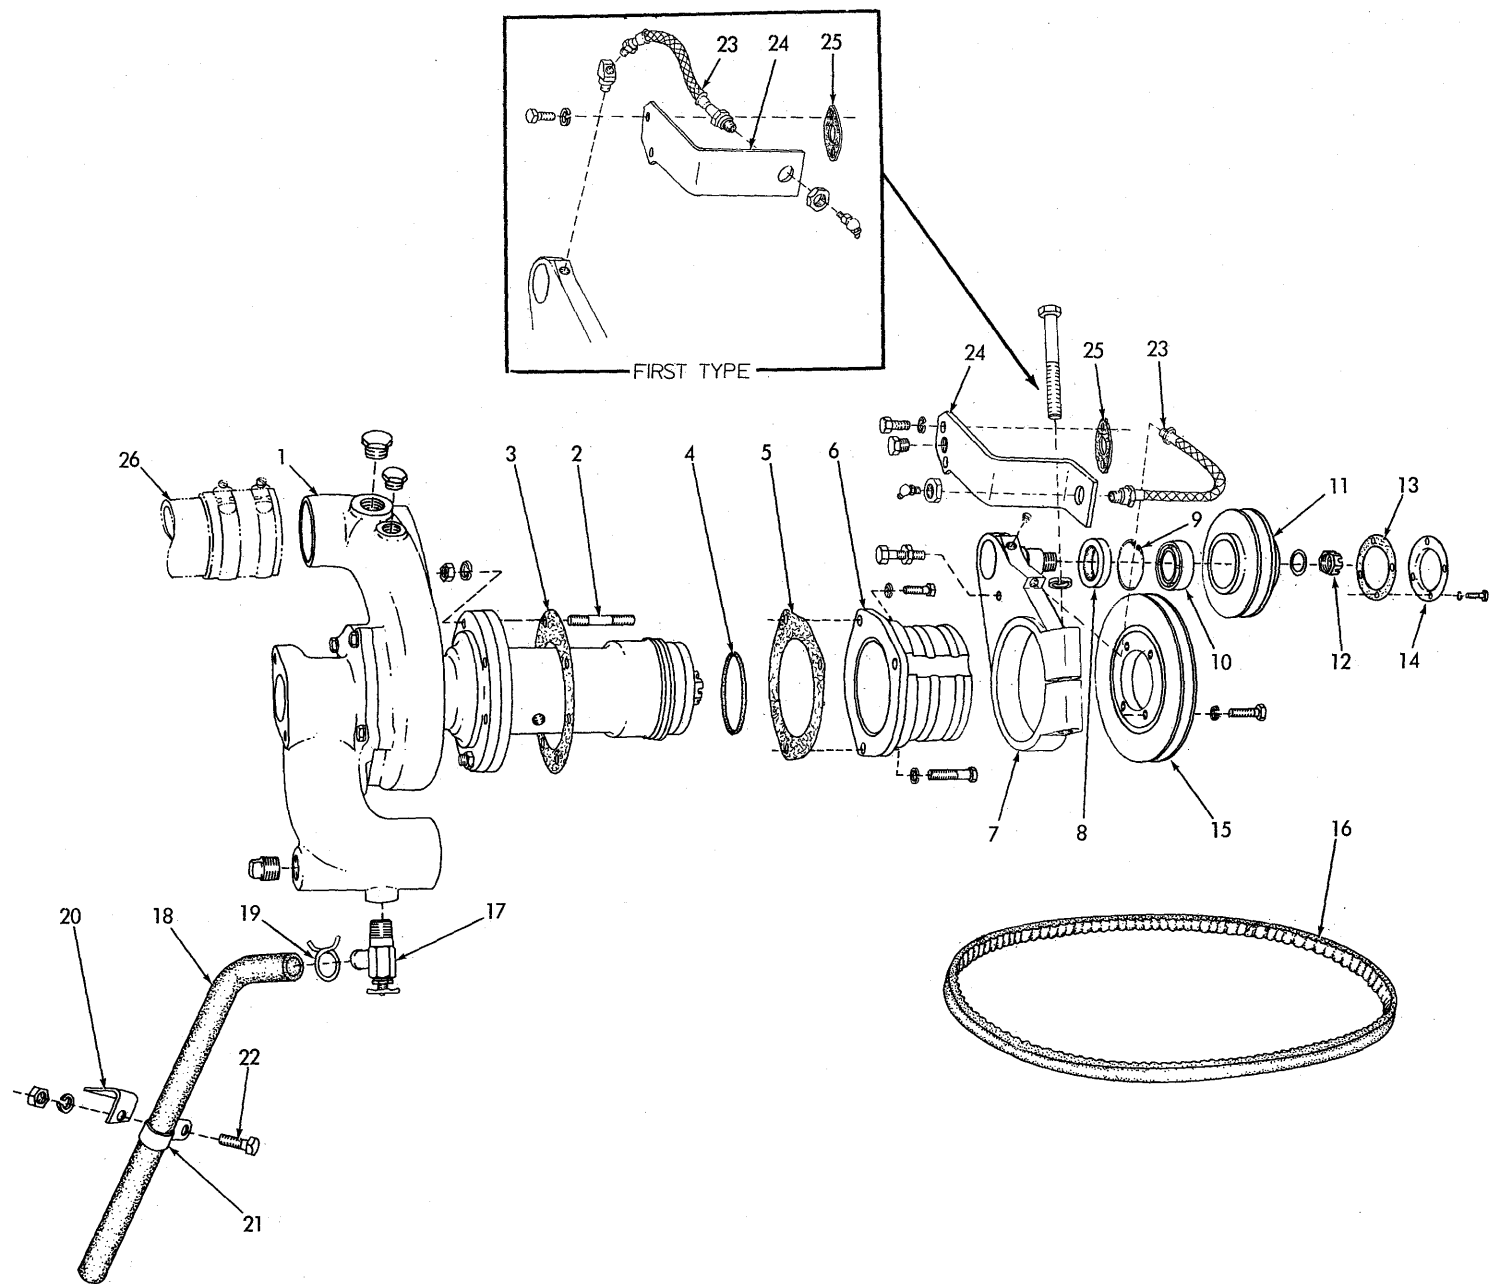

WATER PUMP

T-37186

WATER PUMP

* Engines prior to serial No. 16-07405 (11/16" belt)


** Engines serial No. 16-07405 and up (1/2" belt)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	4387607	1	1	PUMP ASSEMBLY (See page 91 for parts)
	918887	1	1	PLUG, pipe, hex-socket, 3/8"NPT
	920333	1	1	PLUG, pipe, hex-hd., 3/8"NPT
	921073	1	1	PLUG, pipe, hex-hd., 1"NPT (Used prior to engine #16-07836)
2	4513810	5	5	STUD, attaching
	904206	5	5	LOCKWASHER, 3/8"
	910123	5	5	NUT, 3/8"NF
3	4376398	1	1	□GASKET, pump mounting
4	923935	1	1	□O-RING, pump body
5	4361740	1	1	□GASKET, idler support
6	4386855	1	1	SUPPORT, belt tightening idler
	919224	1	1	CAPSCREW, 3/8"NC x 1-1/8"
	912069	2	2	CAPSCREW, 3/8"NC x 2-1/2"
	904206	3	3	LOCKWASHER, 3/8"
7	4388518	1	-	BRACKET, idler pulley
	915275	1	-	FITTING, lubricating, 65°, 1/8"NPT (Engines prior to #16-05014)
	4388339	-	1	□BRACKET, idler pulley
	919134	-	1	□PLUG, pipe, hex-hd., 1/8"NPT
	916320	1	1	CAPSCREW, 1/2"NC x 4" (clamp)
	904208	1	1	LOCKWASHER, 1/2"
	916314	1	1	CAPSCREW, 1/2"NC x 2" (adjustment)
	910510	1	1	NUT, jam, 1/2"NC
	4254670	1	1	SEAL, oil, idler pulley
	4254100	1	1	RING, snap, idler pulley
10	4255031	1	1	BEARING, ball, idler pulley
11	4387294	1	-	PULLEY, idler
	4388253	-	1	□PULLEY, idler
12	917626	1	1	NUT, self-locking, 3/4"NF
	910819	1	1	WASHER, plain
13	4347752	1	1	GASKET, idler pulley cover
14	4347751	1	1	COVER, idler pulley
	915343	4	4	CAPSCREW, 1/4"NC x 5/8"
	904204	4	4	LOCKWASHER, 1/4"
15	4386824	1	-	PULLEY
	916225	4	-	CAPSCREW, 3/8"NF x 1"
	904206	4	-	LOCKWASHER, 3/8"
	4388240	-	1	□PULLEY
	4751643	-	4	□BOLT (self-locking, 3/8"NF x 1")

(Continued)

WATER PUMP (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
16	4388434	1	-	BELT, pump driving
	645829	1	-	BELT, pump driving (Special. Used only on Model HD16D tractors prior to June 1965 when equipped with optional Light-duty Radiator Shell)
	4388326	-	1	□BELT, pump driving
17	089894	1	1	COCK, water drain
18	643744	1	1	HOSE, water drain
19	089107	1	1	CLAMP, hose, spring type, 15/16" diam.
20	096208	1	1	ANGLE, supporting, water drain hose
21	069657	1	1	CLIP, drain hose
22	035167	1	1	CAPSCREW, 3/8"NF x 7/8"
	904206	1	1	LOCKWASHER, 3/8"
	911041	1	1	NUT, 3/8"NF
23	605782	1	1	HOSE, lubricating (Effective with engine #16-05014)
	922194	1	1	ELBOW, adapting, 60°, 1/8"NPT male and female (Used prior to engine #16-07405)
	915275	1	1	FITTING, lubricating, 65°, 1/8"NPT
	903574	1	1	NUT, jam, 5/8"NC
24	4387993	1	-	BRACKET, lubricating hose (Engines #16-05014 and up)
	4390887	-	1	□BRACKET, lubricating hose
	920333	-	1	PLUG, pipe, hex-hd., 3/8"NPT
	915408	2	2	CAPSCREW, 3/8"NC x 3/4"
	904206	2	2	LOCKWASHER, 3/8"
25	4371027	1	1	□GASKET, lubricating hose bracket (Effective with engine #16-05014)
26	-----	1	1	HOSE (See WATER INLET MANIFOLD AND HEAT EXCHANGER)

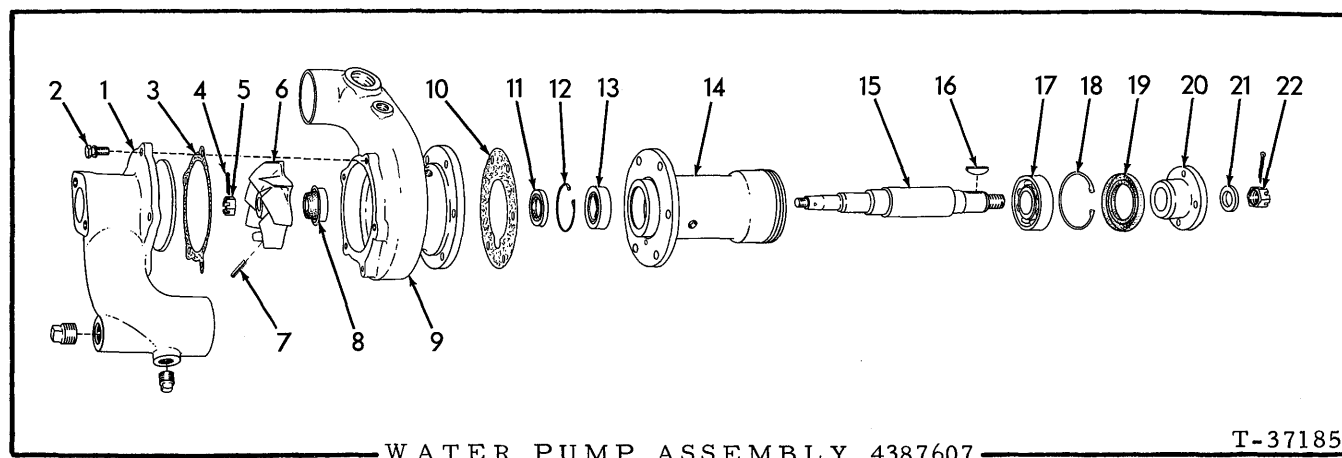


WATER PUMP ASSEMBLY 4387607

T-37185

USAGE: See page 89

ITEM	PART NO.	QTY.	DESCRIPTION
1	4375682	1	COVER, pump inlet
	-----	1	PLUG, pipe, 3/8"NPT (bottom)
	-----	1	PLUG, pipe, 1/2"NPT (rear)
2	4041092	4	CAPSCREW ASSEMBLY (Includes lockwasher)
3	4372421	1	GASKET, pump inlet cover
4	4041097	1	PIN, cotter, impeller retaining nut
5	4375686	1	NUT, impeller retaining
6	4389359	1	IMPELLER ASSEMBLY (Includes ceramic insert)
7	4375694	1	PIN, impeller retaining
8	4386862	1	SEAL ASSEMBLY (Serviced only as a unit)
9	4387609	1	BODY, pump
10	4387051	1	GASKET, pump body
11	4386927	1	SEAL, oil, rear end (1" shaft diam.)(Used prior to engine #16-05010)
	4387605	1	SEAL, oil, rear end (31/32" shaft diam.)(Effective with engine #16-05010)
12	4254100	1	RING, snap, rear bearing
13	4255338	1	BEARING, roller (rear)
14	4387050	1	SLEEVE, extension
15	4387606	1	SHAFT (If for engines prior to #16-05010 also order SEAL 4387605)
16	4660677	1	KEY, pump shaft
17	4253871	1	BEARING, ball (front)
18	4253318	1	RING, snap, front bearing
19	4254948	1	SEAL, oil, front end
20	4386924	1	HUB, drive
21	4375691	1	WASHER, hub retaining
22	4052167	1	NUT, hub retaining
	900808	1	PIN, cotter, 1/8" x 1-1/2"

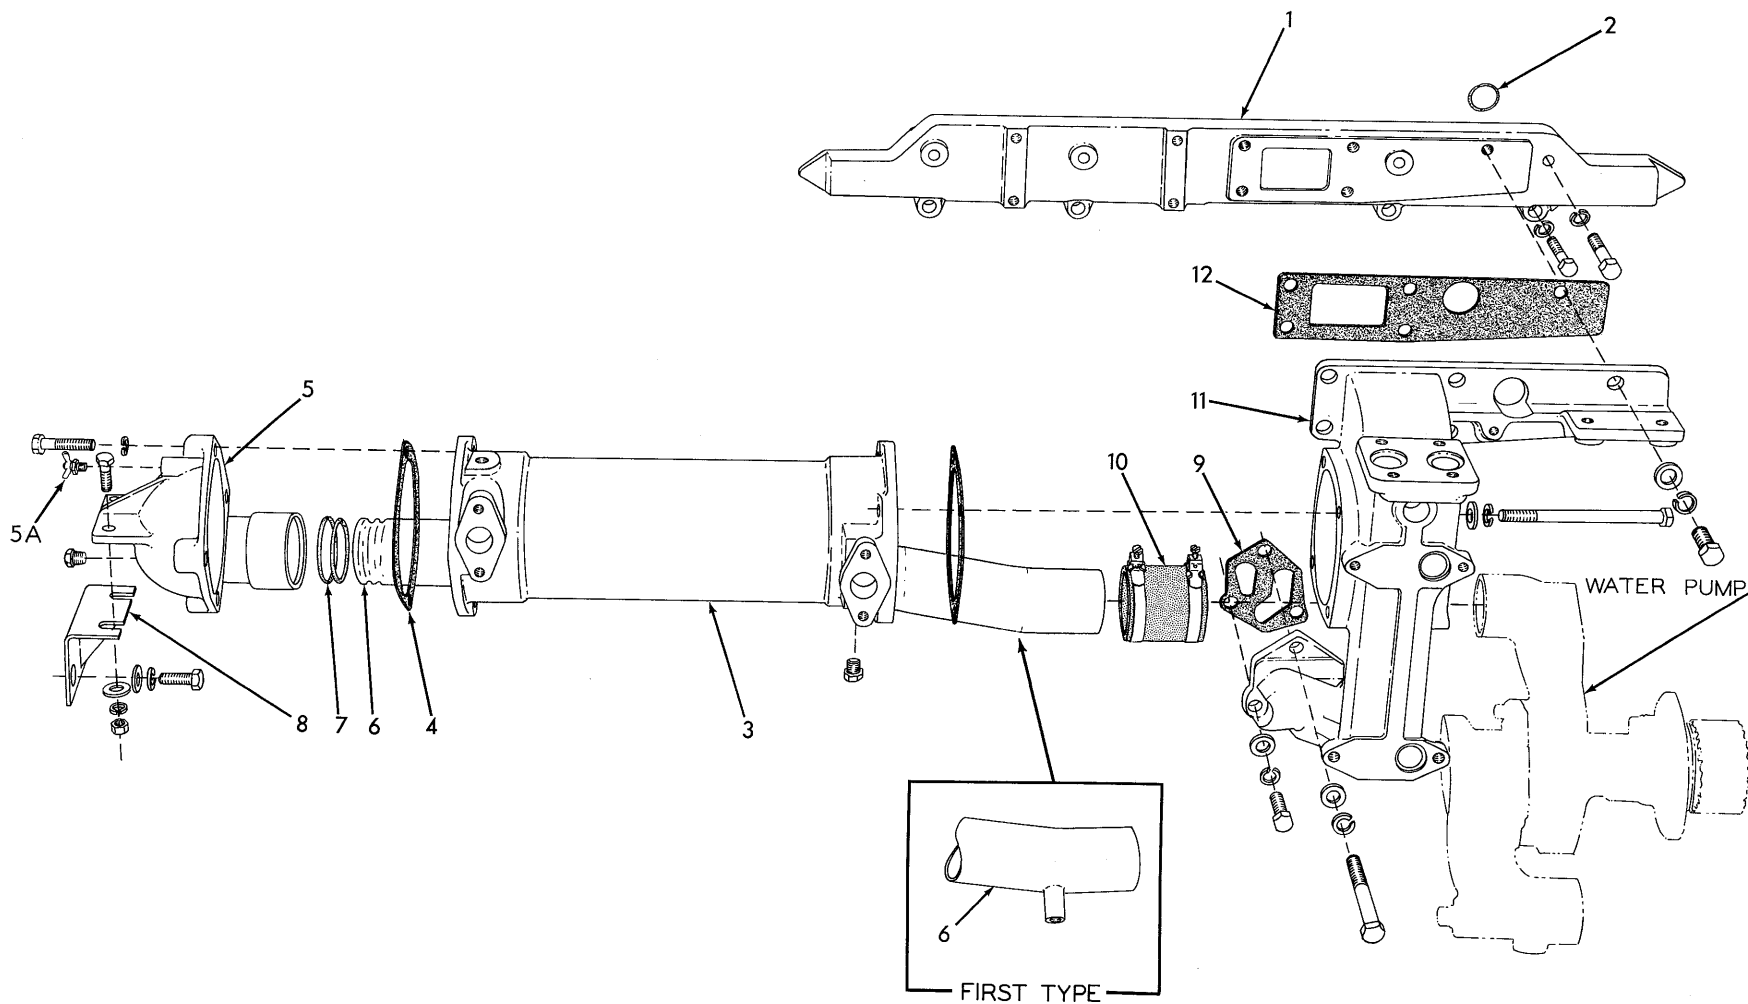


WATER INLET MANIFOLD AND HEAT EXCHANGER (HD16D)

WATER INLET MANIFOLD AND HEAT EXCHANGER

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	4389289	1	MANIFOLD, water inlet
	919231	4	CAPSCREW, 1/2"NC x 1-7/8"
	916317	4	CAPSCREW, 1/2"NC x 2-3/4"
	904208	8	LOCKWASHER, 1/2"
2	923576	12	□O-RING, water inlet manifold
3	4377645	1	EXCHANGER, heat, engine clutch oil
	919840	1	PLUG, pipe, hex-hd., 1/4"NPT
	916322	4	CAPSCREW, 1/2"NC x 5"
	904208	4	LOCKWASHER, 1/2"
	916009	4	WASHER, plain
4	4371160	2	□GASKET, heat exchanger
5	4388463	1	BONNET, heat exchanger (If for engines prior to #16-07612 also order item 5A)
	919840	1	PLUG, pipe, hex-hd., 1/4"NPT
	914847	2	CAPSCREW, 3/8"NC x 1-1/2"
	911115	2	WASHER, plain, SAE std., 3/8"
	904206	2	LOCKWASHER, 3/8"
	910324	2	NUT, 3/8"NC
	919231	4	CAPSCREW, 1/2"NC x 1-7/8"
	904208	4	LOCKWASHER, 1/2"
5A	4255363	1	COCK, vent, heat exchanger bonnet (Effective with engine #16-07612)
6	4386957	1	TUBE, pump to bonnet (Used prior to engine #16-07836)
	4388501	1	TUBE, pump to bonnet (Effective with engine #16-07836)
7	4254806	2	□O-RING, bonnet tube
8	4377248	1	BRACKET, supporting, heat exchanger
	922290	2	CAPSCREW, 1/2"NC x 2"
	904208	2	LOCKWASHER, 1/2"
	910244	2	WASHER, plain, SAE std., 1/2"
9	4386495	1	□GASKET, manifold to block
10	4378843	1	HOSE, heat exchanger to water pump
	4253464	2	CLAMP, hose
11	4377455	1	MANIFOLD ASSEMBLY, water and oil (Includes PLUGS 904224) (Used prior to engine #16-05686)
	904224	2	PLUG, pipe, ctsk-hd., 3/4"NPT
	-----	1	MANIFOLD, water and oil (Used on engines #16-05686 thru #16-07163. Order MANIFOLD 4388147 and BONNET 4389840)
	4388147	1	MANIFOLD, water and oil (Effective with engine #16-07164)
	916311	5	CAPSCREW, 1/2"NC x 1-1/4"
	915987	2	CAPSCREW, 1/2"NC x 1-1/2"
	914399	1	CAPSCREW, 1/2"NC x 3-3/4" (Used prior to engine #16-05686)
	916320	1	CAPSCREW, 1/2"NC x 4" (Effective with engine #16-05686)
	904208	8	LOCKWASHER, 1/2"
	912333	8	WASHER, plain
12	4389291	1	□GASKET, water and oil manifold

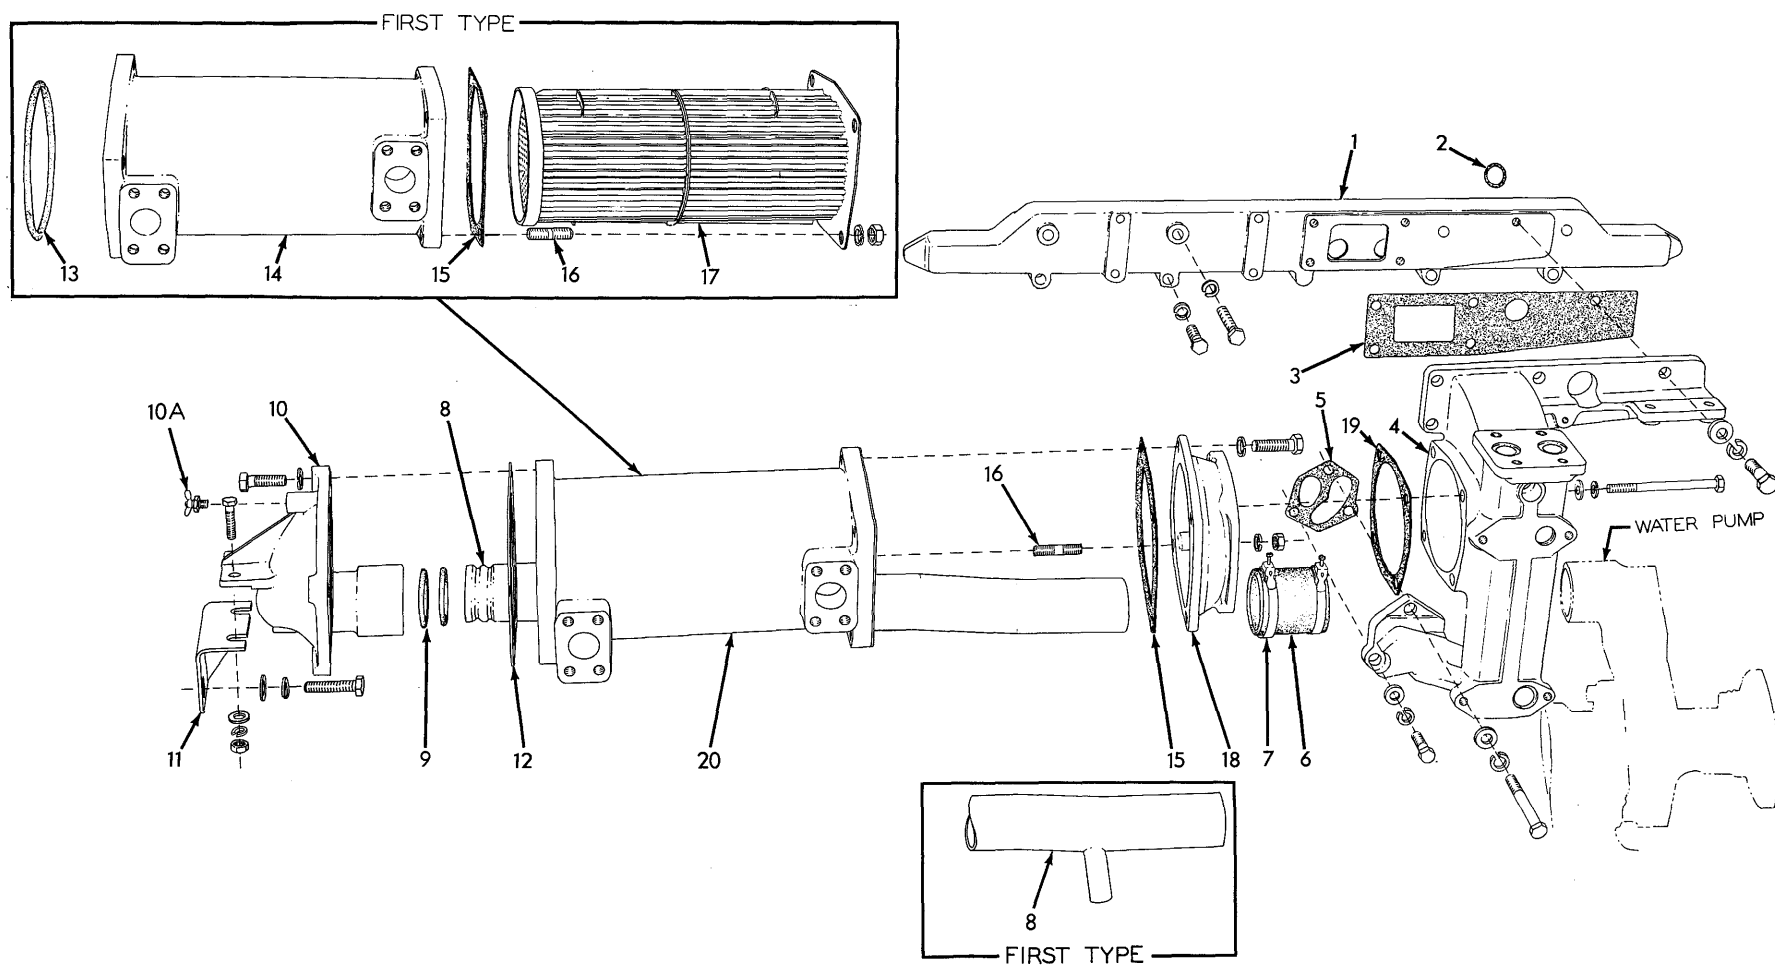

WATER INLET MANIFOLD AND HEAT EXCHANGER (Model HD16DC)

T-39342

WATER INLET MANIFOLD AND HEAT EXCHANGER

USAGE: Model HD16DC

* Engines prior to serial No. 16-07560

** Engines serial No. 16-07560 and up

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	4389289	1	1	MANIFOLD, water inlet
	919231	4	4	CAPSCREW, 1/2"NC x 1-7/8"
	916317	4	4	CAPSCREW, 1/2"NC x 2-3/4"
	904208	8	8	LOCKWASHER, 1/2"
2	923576	12	12	O-RING, water inlet manifold
3	4389291	1	1	GASKET, water and oil manifold
4	4377455	1	-	MANIFOLD ASSEMBLY, water and oil (Includes PLUGS 904224) (Used prior to engine #16-05686)
	904224	2	-	PLUG, pipe, ctsk-hd., 3/4"NPT
	-----	1	1	MANIFOLD, water and oil (Engines #16-05686 thru #16-07163. Order MANIFOLD 4388147 and BONNET 4389840)
	4388147	-	1	MANIFOLD, water and oil (Engines #16-07164 and up)
	916311	5	5	CAPSCREW, 1/2"NC x 1-1/4"
	915987	2	2	CAPSCREW, 1/2"NC x 1-1/2"
	914399	1	-	CAPSCREW, 1/2"NC x 3-3/4" (Used prior to engine #16-05686)
	916320	1	1	CAPSCREW, 1/2"NC x 4" (Effective with engine #16-05686)
	904208	8	8	LOCKWASHER, 1/2"
	912333	8	8	WASHER, plain
5	4386495	1	1	GASKET, manifold to block
6	4378843	1	1	HOSE, heat exchanger to water pump
7	4253464	2	2	CLAMP, hose
8	4386957	1	1	TUBE, pump to bonnet (Used prior to engine #16-07836)
	4388501	-	1	TUBE, pump to bonnet (Effective with engine #16-07836)
9	4254806	2	2	O-RING, bonnet tube
10	4388464	1	1	BONNET, heat exchanger (If for engines prior to #16-08163 also order item 10A)
	915987	4	4	CAPSCREW, 1/2"NC x 1-1/2"
	904208	4	4	LOCKWASHER, 1/2"
	914847	2	2	CAPSCREW, 3/8"NC x 1-1/2"
	911115	2	2	WASHER, plain, SAE std., 3/8"
	904206	2	2	LOCKWASHER, 3/8"
	910324	2	2	NUT, 3/8"NC
	920333	1	1	PLUG, pipe, hex-hd., 3/8"NPT (Early units)
10A	4255363	-	1	COCK, vent, heat exchanger bonnet (Effective with engine #16-08163)
11	4377248	1	1	BRACKET, supporting, heat exchanger
	922290	2	2	CAPSCREW, 1/2"NC x 2"
	910244	2	2	WASHER, plain, SAE std., 1/2"
	904208	2	2	LOCKWASHER, 1/2"
12	4386223	1	1	GASKET, heat exchanger bonnet
13	923605	1	-	O-RING, heat exchanger
14	4387259	1	-	HOUSING, heat exchanger

(Continued)

WATER INLET MANIFOLD AND HEAT EXCHANGER (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
15	4386856	2	1	□GASKET, heat exchanger to adaptor
16	4367187	4	1	STUD, heat exchanger housing
	910195	4	1	NUT, 1/2"NF
	904208	4	1	LOCKWASHER, 1/2"
17	-----	1	-	TUBE-BUNDLE, heat exchanger (Order item 20)
18	4386196	1	1	ADAPTOR, heat exchanger
	916322	4	4	CAPSCREW, 1/2"NC x 5"
	904208	4	4	LOCKWASHER, 1/2"
	916009	4	4	WASHER, plain
19	4371160	1	1	□GASKET, adaptor to manifold
20	4389045	-	1	EXCHANGER, heat
	915987	-	3	CAPSCREW, 1/2"NC x 1-1/2"
	904208	-	3	LOCKWASHER, 1/2"



FAN

* All units except HD16D equipped with optional Light-duty Radiator Shell

** Model HD16D equipped with optional Light-duty Radiator Shell

ITEM	PART NO.	QTY. * **	DESCRIPTION
<u>NOTE:</u> See RADIATOR AND MOUNTING for listing of Fan Guard			
1	083658	1 -	FAN (Suction type, 6-blade)
	645825	- 1	FAN (Suction type, 8-blade)(Used prior to tractor #7475)
	648754	- 1	FAN (Suction type, 6-blade)(Effective with tractor #7475)
	083524	1 -	FAN (Push type, 3-1/4" deep)(Model HD16DC)
	084222	1 -	FAN (Push type, 2-1/2" deep)(Model HD16D)
	649904	1 -	FAN ASSEMBLY, reversible (Optional)
2	058793	6 -	CAPSCREW, 3/8"NC x 2-1/4" (For FAN 083658 only)
	013058	6 -	CAPSCREW, 3/8"NC x 1-1/4" (For FAN 083524 only)
	053616	6 6	CAPSCREW, 3/8"NC x 1-3/4" (For FANS 645825, 648754 and 084222 only)
	013059	6 -	CAPSCREW, 3/8"NC x 2" (For FAN 649904 only)
	904206	6 6	LOCKWASHER, 3/8"
3	083676	1 -	SPACER, fan (1" thick)(For use with suction and reversible fans)
	089019	- 1	SPACER, fan (7/8" thick)(For use with FAN 645825 only)
	088526	- 1	SPACER, fan (3/4" thick)(For use with FAN 648754 only)
	083708	1 -	SPACER, fan (9/16" thick)(For use with FAN 084222 only)
4	639238	1 -	PULLEY ASSEMBLY, fan (Consists of items 5 thru 17)
	642301	- 1	PULLEY ASSEMBLY, fan (Consists of items 5 thru 17)
	913798	1 1	NUT, jam, slotted, 1-1/4"NF
	915692	1 1	PIN, spring, 1/4" x 1-7/8"
	905122	1 1	KEY, #7 woodruff, 1/8" x 3/4"
5	082829	1 -	SPINDLE
	648741	- 1	SPINDLE
	910230	1 -	PLUG, pipe, slotted-hd., 1/8"NPT
	915943	1 -	NUT, jam, slotted, 3/4"NF
	4348502	- 1	NUT, jam, slotted, 7/8"NF
	900808	1 1	PIN, cotter, 1/8" x 1-1/2"
6	4371707	1 1	RING, snap, fan pulley
7	4640973	1 -	RETAINER, spindle sealing washer
	4040386	- 1	RETAINER, spindle sealing washer
8	052106	1 -	WASHER, spindle sealing
	4040385	- 1	WASHER, spindle sealing

(Continued)

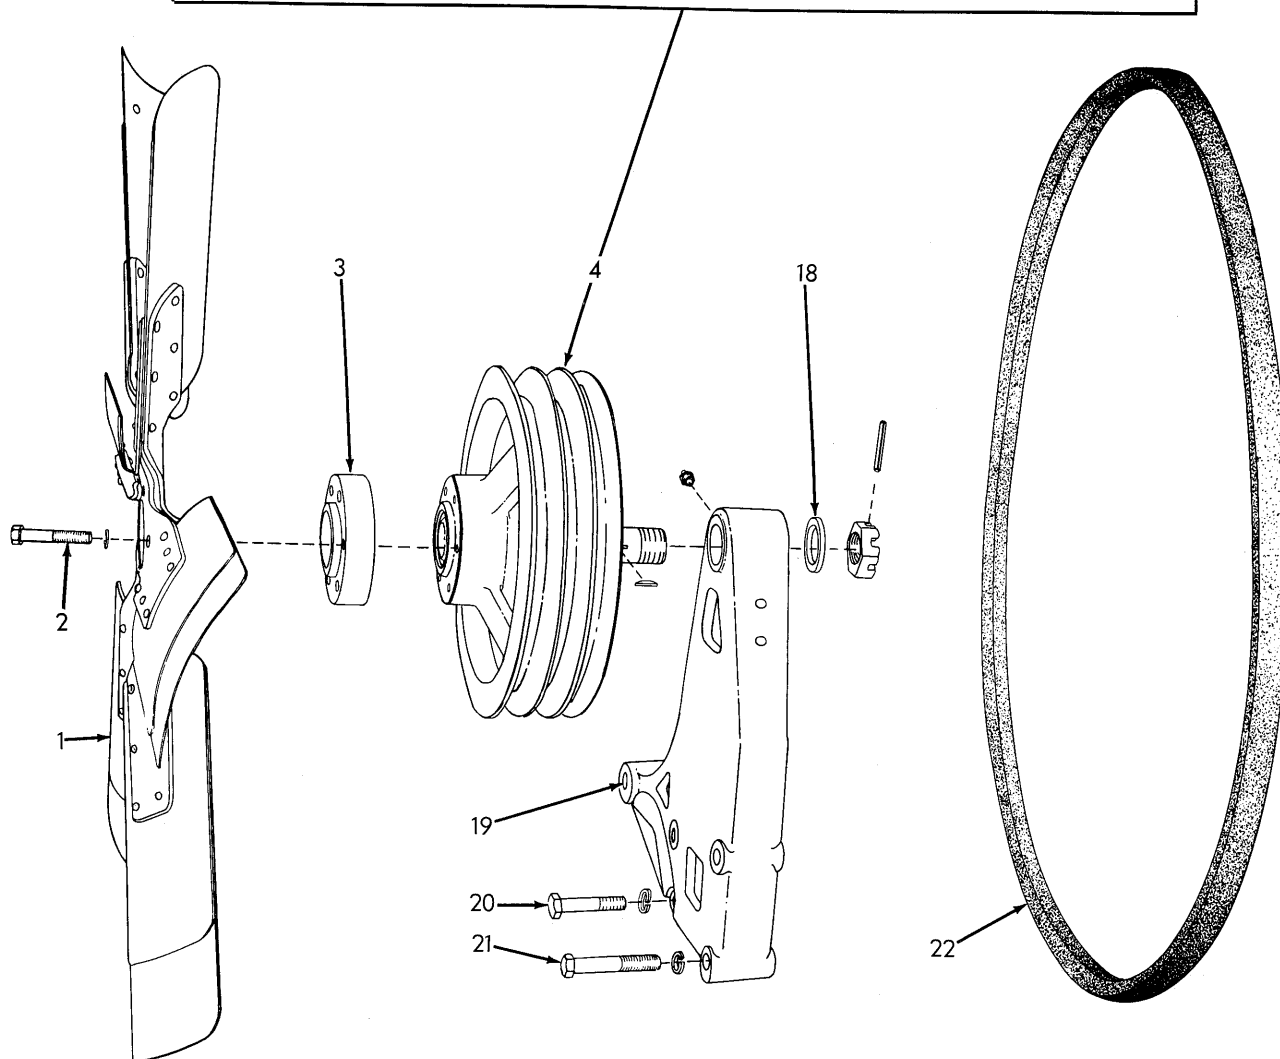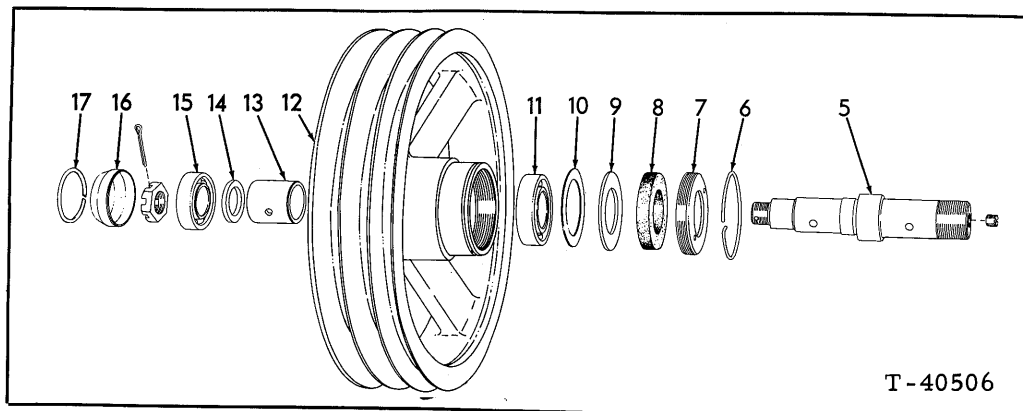


FAN

T-40497

FAN (Continued)

ITEM	PART NO.	QTY. * **		DESCRIPTION
9	4640975	1	-	WASHER, retaining, rear bearing
	4040384	-	1	WASHER, retaining, rear bearing
10	4640976	1	1	GASKET, bearing retaining washer
11	4253863	1	1	BEARING, ball, rear
12	639237	1	-	PULLEY
	4337729	-	1	PULLEY
13	051715	1	-	SPACER, spindle bearings
	4040383	-	1	SPACER, spindle bearings
14	4640978	1	1	WASHER, spacing, front bearing
15	4253862	1	1	BEARING, ball, front
16	088561	1	1	CAP, pulley
17	4042081	1	1	RING, snap, cap retaining
18	067962	1	1	WASHER, plain
19	633625	1	1	BRACKET, fan mounting
	915274	1	1	FITTING, lubricating, 45°, 1/8"NPT
20	035712	1	1	CAPSCREW, 1/2"NC x 2-1/4"
21	041917	3	3	CAPSCREW, 1/2"NC x 3-1/4"
	904208	4	4	LOCKWASHER, 1/2"
22	086979	2	-	BELT, fan
	642296	-	2	BELT, fan

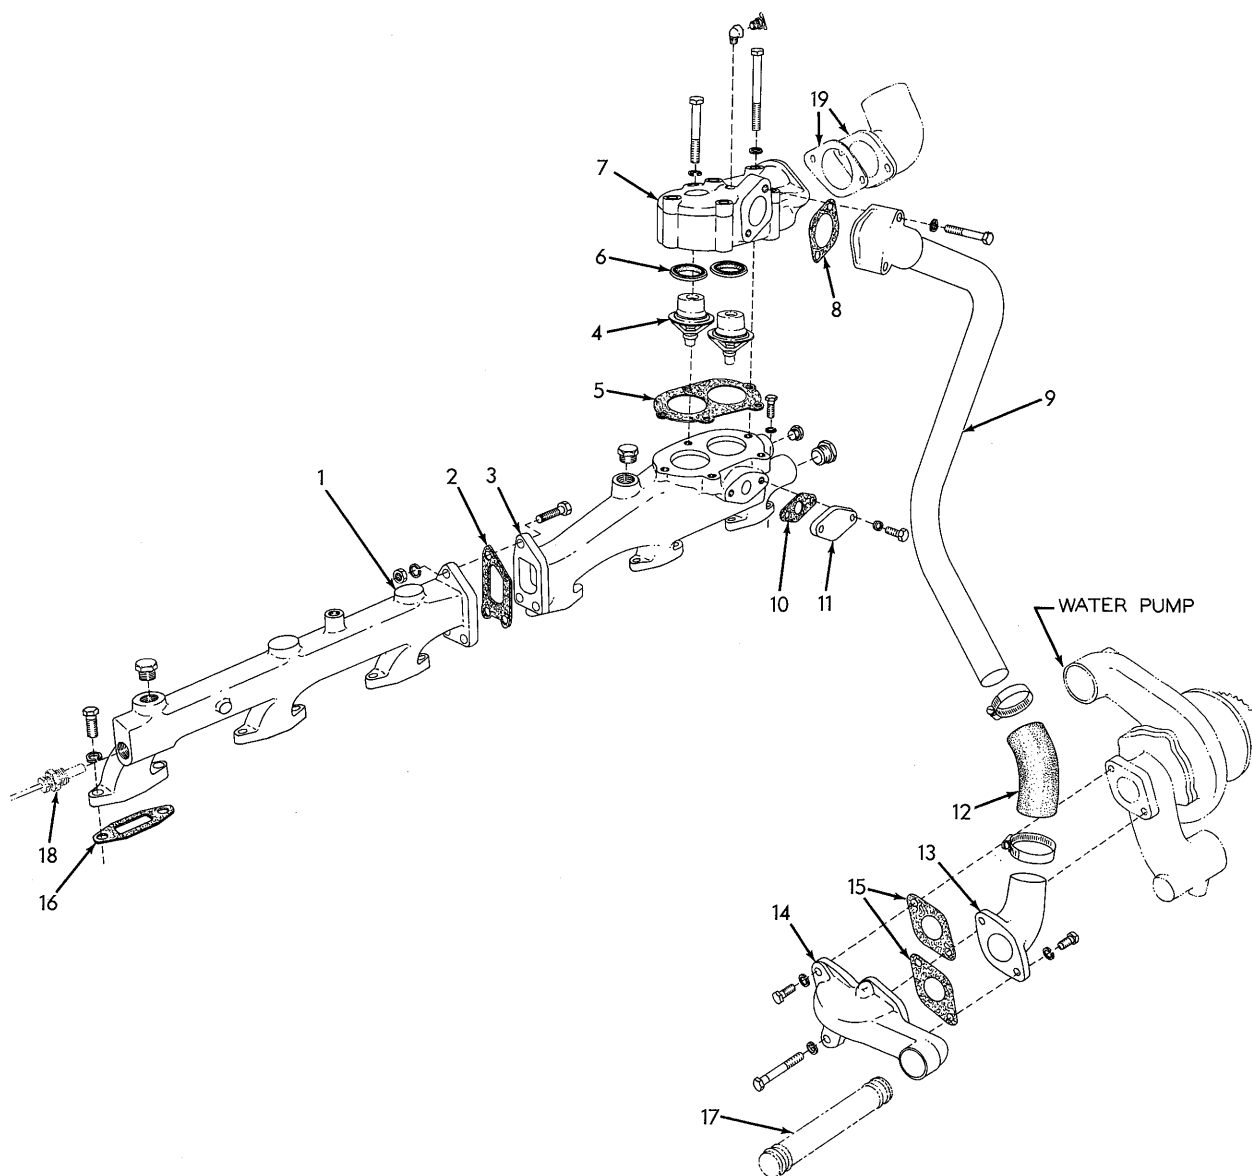

WATER OUTLET MANIFOLD

T-37209




ITEM	PART NO.	QTY.	DESCRIPTION
1	4386827	1	MANIFOLD, rear
	920416	1	PLUG, pipe, hex-hd., 1/2"NPT
	919224	6	CAPSCREW, 3/8"NC x 1-1/8"
	919226	3	CAPSCREW, 3/8"NC x 1-5/8"
	904206	9	LOCKWASHER, 3/8"
	910324	3	NUT, 3/8"NC
2	4376527	1	□GASKET, manifold connecting

(Continued)

WATER OUTLET MANIFOLD (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
3	4388563	1	MANIFOLD, front (If for engines #16-07832 and up also order items 10 and 11)
	919840	1	PLUG, pipe, hex-hd., 1/4"NPT
	920416	1	PLUG, pipe, hex-hd., 1/2"NPT
	920525	1	PLUG, pipe, hex-hd., 3/4"NPT
	919224	6	CAPSCREW, 3/8"NC x 1-1/8"
	904206	6	LOCKWASHER, 3/8"
4	4354537	2	THERMOSTAT
5	4376520	1	□GASKET, thermostat cover
6	4317554	2	SEAL, thermostat
7	4389036	1	COVER ASSEMBLY, thermostat (Includes item 6)
	914588	1	ELBOW, street, brass, 90°, 1/4"NPT
	912415	1	COCK, T-handle, 1/4"NPT (For venting air)
	918395	4	CAPSCREW, 7/16"NC x 3-1/4"
	918740	1	CAPSCREW, 7/16"NC x 4"
	904207	5	LOCKWASHER, 7/16"
8	4386137	1	□GASKET, water by-pass tube
9	4386891	1	TUBE, water by-pass
	916274	2	CAPSCREW, 3/8"NC x 2-1/4"
	904206	2	LOCKWASHER, 3/8"
10	4362458	1	□GASKET, manifold cover
11	4313015	1	COVER, front manifold
	915408	2	CAPSCREW, 3/8"NC x 3/4"
	904206	2	LOCKWASHER, 3/8"
12	4386894	1	ELBOW, water by-pass tube (rubber)
	4255011	2	CLAMP, hose
13	4386881	1	ELBOW, water by-pass line
	916271	2	CAPSCREW, 3/8"NC x 1"
	904206	2	LOCKWASHER, 3/8"
14	4386779	1	FLANGE, water pump
	916172	1	CAPSCREW, 3/8"NC x 1-1/4"
	920275	1	CAPSCREW, 3/8"NC x 3"
	904206	2	LOCKWASHER, 3/8"
15	4378112	2	□GASKET, water pump flange
16	4376483	6	□GASKET, manifold to head
17	-----	-	TUBE, water (See OIL COOLER)
18	-----	-	GAUGE, temperature (See INSTRUMENTS)
19	-----	-	ELBOW AND GASKET (See RADIATOR AND MOUNTING)

Used prior to engine
#16-07832

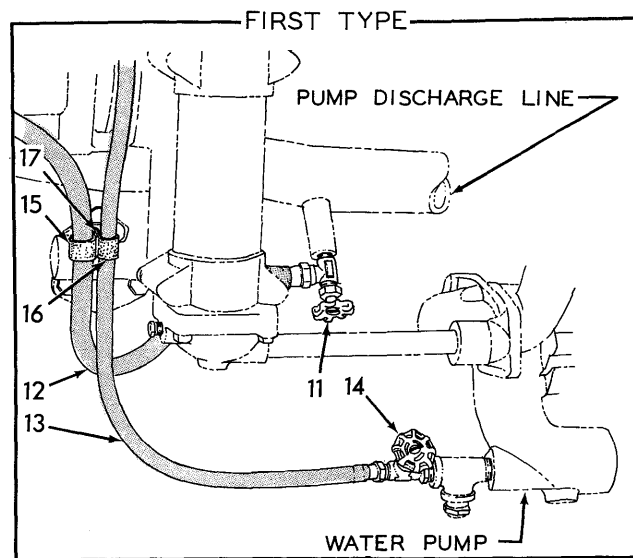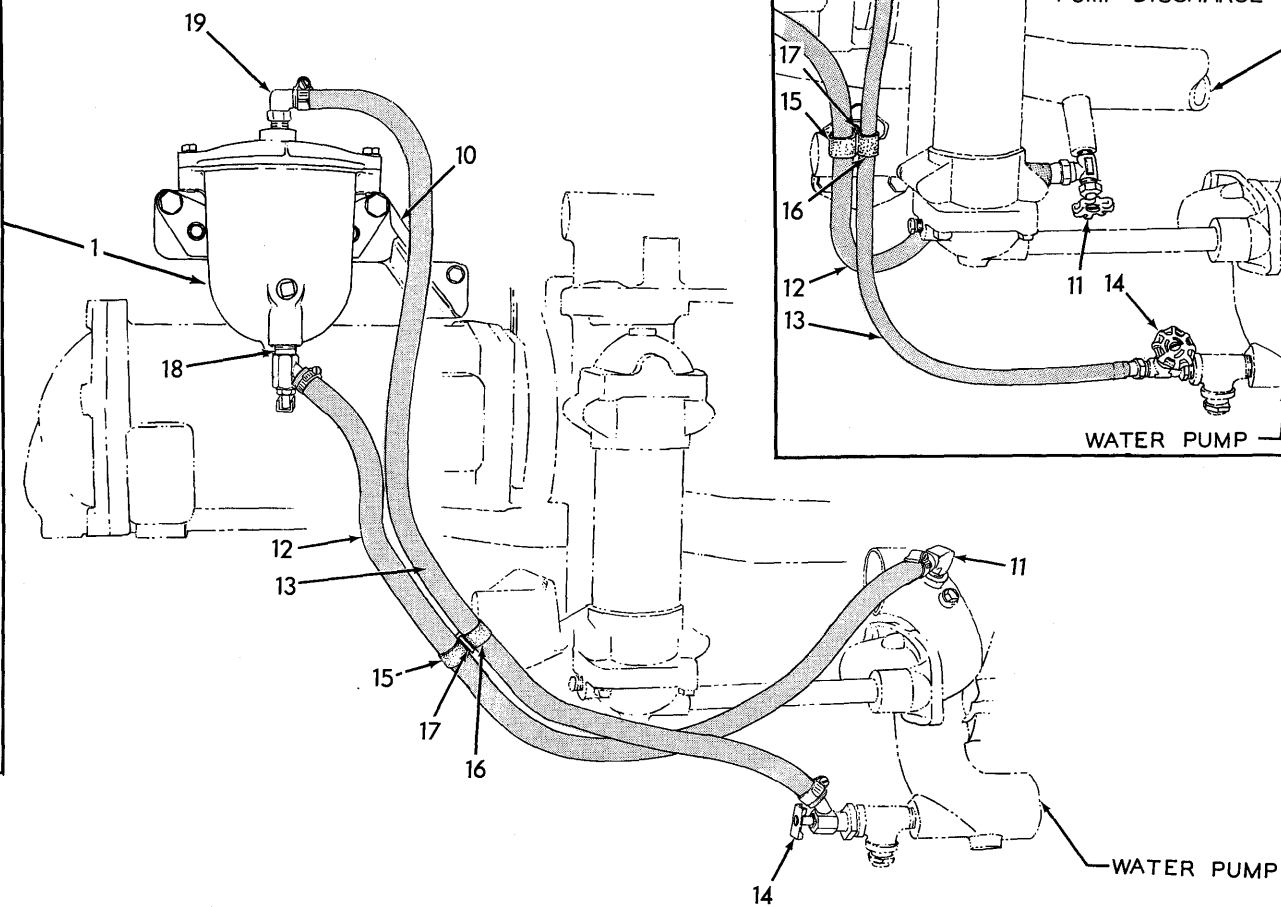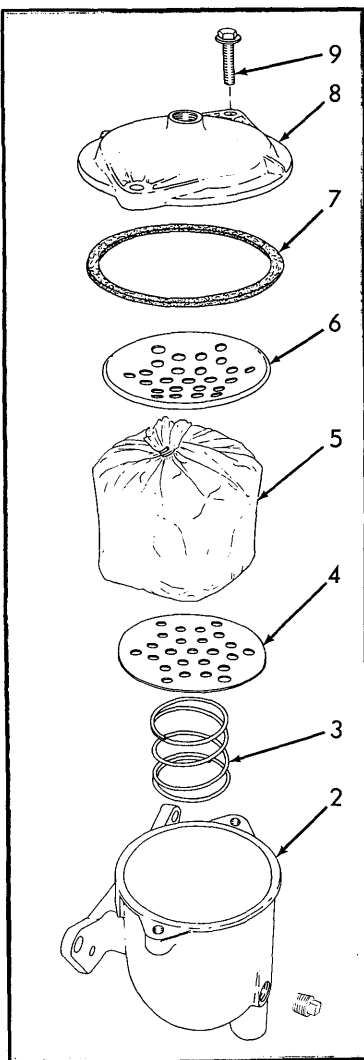

COOLANT FILTER

T-40510

COOLANT FILTER

* Engines prior to serial No. 16-07836

** Engines serial No. 16-07836 and up

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	4387474	1	1	FILTER ASSEMBLY, water (Consists of items 2 thru 9. Has element for use with permanent anti-freeze)
	918683	2	2	CAPSCREW, 1/2"NC x 1-1/8"
	900818	2	2	WASHER, plain, U.S. std., 1/2"
	904208	2	2	LOCKWASHER, 1/2"
	914392	2	2	CAPSCREW, 5/16"NC x 1"
	901165	2	2	WASHER, plain, U.S. std., 5/16"
	904205	2	2	LOCKWASHER, 5/16"
2	4055031	1	1	BODY, filter
	920131	2	2	PLUG, pipe, 3/8"NPT
3	4054569	1	1	SPRING, filter element
4	4054568	1	1	PLATE, filter element
5	4058830	1	1	ELEMENT KIT, filter (Includes item 7)(Cannot be used with permanent anti-freeze)
	4058831	1	1	ELEMENT KIT, filter (Includes item 7)(Can be used with permanent anti-freeze)
6	4055034	1	1	PLATE, filter element, upper
7	4054566	1	1	GASKET, filter cover
8	4055032	1	1	COVER, filter
9	4055033	2	2	BOLT ASSEMBLY, filter cover (Includes washer)
10	4386198	1	1	BRACKET, filter mounting
	919224	3	3	CAPSCREW, 3/8"NC x 1-1/8"
	904206	3	3	LOCKWASHER, 3/8"
11	4255171	1	-	VALVE, water shut-off (1/2" tube, 3/8"NPT male)
	4255286	-	1	ELBOW, water hose (90°, 5/8" nipple, 3/8"NPT)
	4142263	-	1	BUSHING, pipe reducing, 1"NPT to 3/8"NPT
12	4386199	1	-	HOSE ASSEMBLY, water line to filter
	-----	-	1	HOSE, water pump to filter (34" long. Order item 20)
	921911	-	2	CLAMP, hose, 11/16" to 1-1/4" diam.
13	4386200	1	-	HOSE ASSEMBLY, filter to water pump
	-----	-	1	HOSE, filter to water pump (42-1/2" long. Order item 20)
	921911	-	2	CLAMP, hose, 11/16" to 1-1/4" diam.
14	4255170	1	-	VALVE, water shut-off (3/8" tube, 3/8"NPT male)
	4255287	-	1	VALVE, water shut-off (45°, 5/8" nipple, 3/8"NPT)
	904271	-	1	BUSHING, pipe reducing, 1/2"NPT to 3/8"NPT

(Continued)

COOLANT FILTER (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
15	4254580	1	-	CLAMP, water inlet hose (3/4" diam.)
	4254951	-	1	CLAMP, water inlet hose (7/8" diam.)
16	4255010	1	-	CLAMP, water outlet hose (9/16" diam.)
	4254951	-	1	CLAMP, water outlet hose (7/8" diam.)
	916268	1	1	CAPSCREW, 3/8"NC x 5/8"
	904206	1	1	LOCKWASHER, 3/8"
	910324	1	1	NUT, 3/8"NC
17	4387807	1	1	BRACKET, clamp supporting
18	920690	1	-	ELBOW, inlet hose (45°, flare type, 1/2" tube, 3/8"NPT male)
	4255287	-	1	VALVE, water shut-off (45°, 5/8" nipple, 3/8"NPT)
19	919136	1	-	ELBOW, outlet hose (90°, flare type, 3/8" tube, 3/8"NPT male)
	4255286	-	1	ELBOW, outlet hose (90°, 5/8" nipple, 3/8"NPT male)
20	920722	-	-	HOSE, rubber, 5/8" I. D., 25 ft. roll (Use as required)(Not Illustrated)

RADIATOR AND MOUNTING

USAGE: Tractors with wrap-around Radiator Guards. See page 109 for units with optional light-duty Radiator Shell.


ITEM	PART NO.	QTY.	DESCRIPTION
1	083542	1	RADIATOR ASSEMBLY (Model HD16D tractors prior to #6370 including #6436, 6442, 6529, 6544)
	643421	1	RADIATOR ASSEMBLY (Model HD16D tractors #6370 thru #8153 excluding #6436, 6442, 6529, 6544. Standard)
	643558	1	*RADIATOR ASSEMBLY (Model HD16D tractors #6370 thru #8129 excluding #6436, 6442, 6529, 6544. Special)
	639216	1	*RADIATOR ASSEMBLY (Model HD16DC tractors prior to #6383 including #6384 and #6387)
	643397	1	RADIATOR ASSEMBLY (Model HD16DC tractors #6383 and up excluding #6384 and #6387; also Model HD16D tractors #8154 and up. Standard)
	643473	1	*RADIATOR ASSEMBLY (Model HD16DC tractors #6383 and up excluding #6384 and #6387; also Model HD16D tractors #8130 and up. Special)
	645539	1	RADIATOR ASSEMBLY (Models HD16D, DC. Special equipment. Has in-line tubes to minimize clogging)

NOTE: See page 113 for radiator parts.

2	081614	1	GASKET, radiator inlet
3	082608	1	INLET, radiator
4	035439	4	CAPSCREW, 3/8"NC x 1"
	904206	4	LOCKWASHER, 3/8"
5	067884	1	HOSE, inlet tube to radiator
	912915	2	CLAMP, hose, 2-13/16" to 3-3/4" diam.
6	083540	1	TUBE, radiator inlet
7	055604	1	HOSE, engine to inlet tube
	921915	2	CLAMP, hose, 2-13/16" to 3-3/4" diam.
8	083380	1	ELBOW, engine water outlet
9	043886	2	CAPSCREW, 7/16"NC x 1"
	904207	2	LOCKWASHER, 7/16"
10	4310257	1	GASKET, water outlet elbow
11	083539	2	BAFFLE, air, upper and lower
	092665	8	WASHER, plain
12	083538	2	BAFFLE, air, side
	911168	8	CAPSCREW, 5/16"NF x 7/8"
	904205	8	LOCKWASHER, 5/16"
	092665	8	WASHER, plain
13	073539	2	HOSE, radiator, lower
	921915	4	CLAMP, hose, 2-13/16" to 3-3/4" diam.
14	633626	1	TUBE, engine water inlet
15	633509	1	ELBOW, radiator outlet
16	041250	2	CAPSCREW, 7/16"NC x 1-1/4"
	904207	2	LOCKWASHER, 7/16"

* Have armored tubes at rear of core to resist abrasion when used with push-type fan

(Continued)

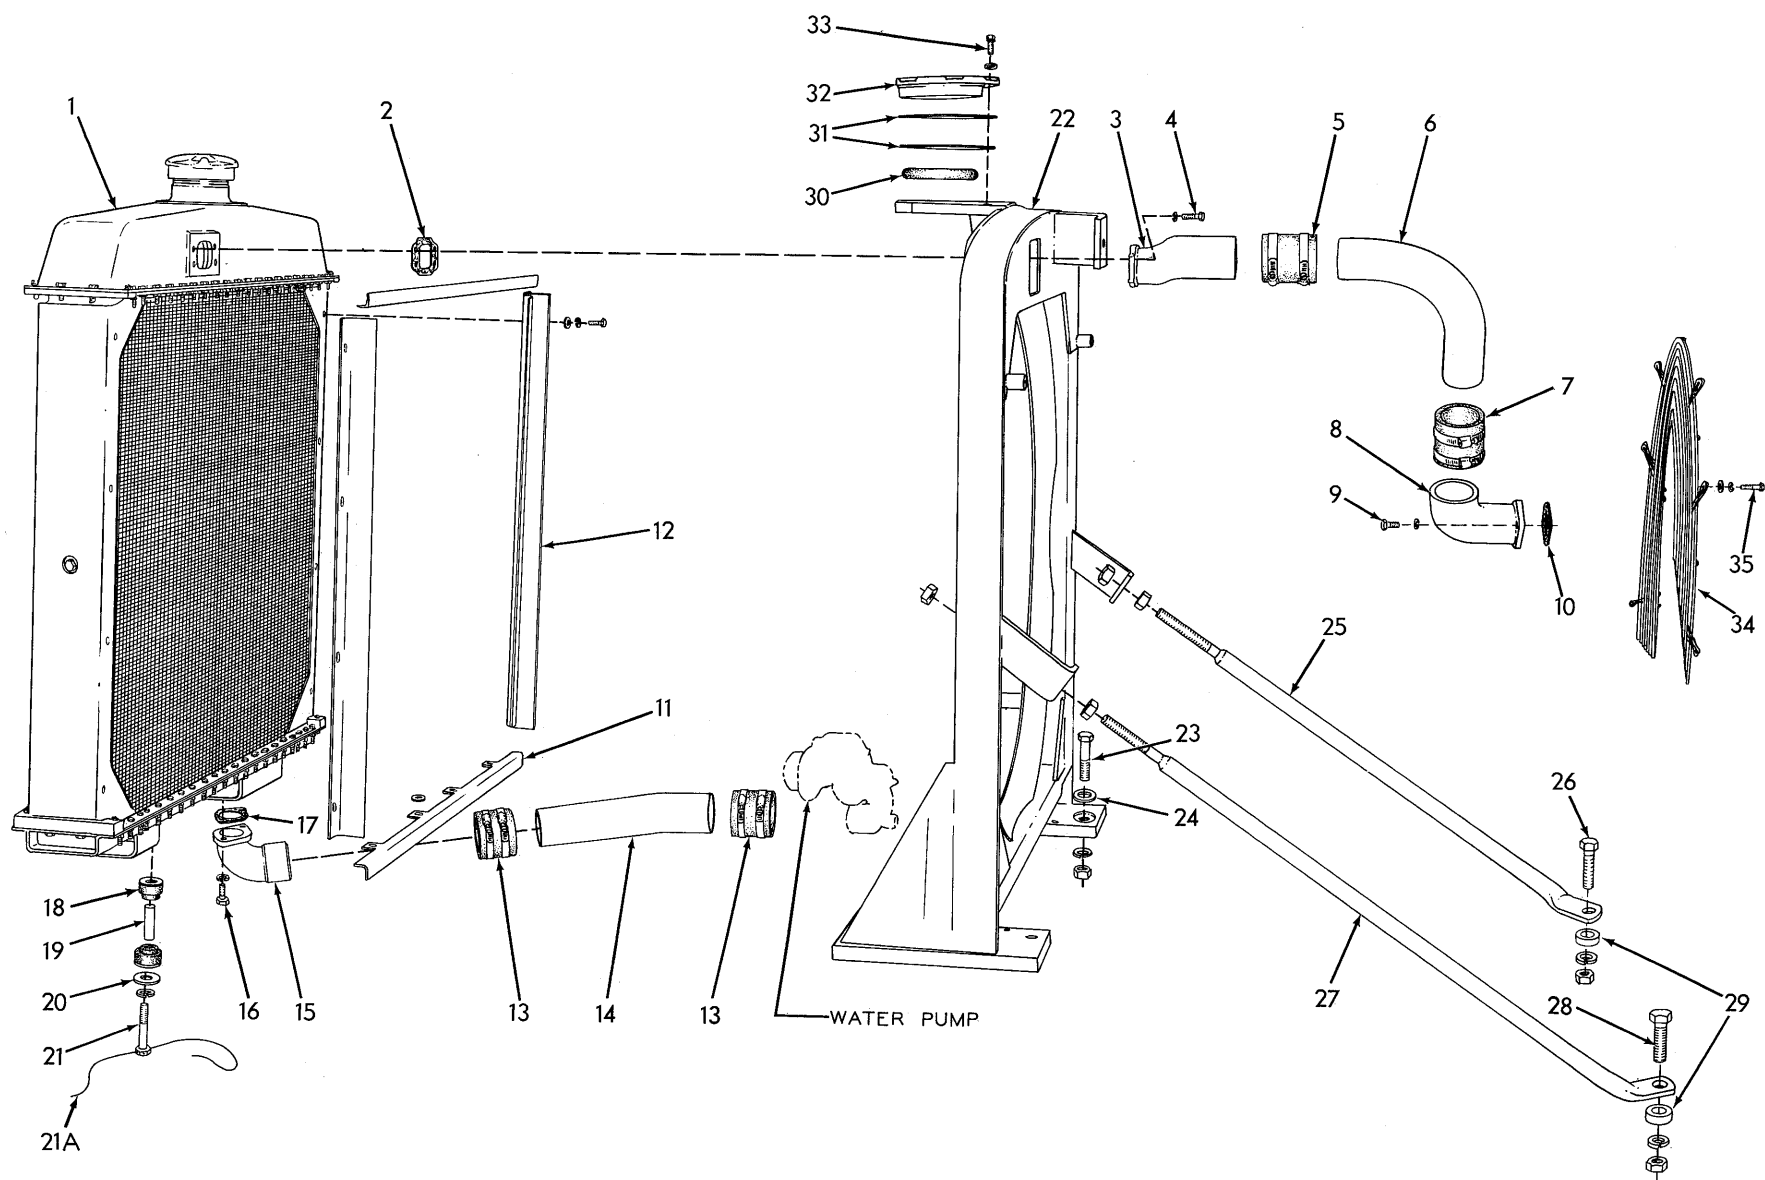


RADIATOR AND MOUNTING (Standard)

T-70528

RADIATOR AND MOUNTING (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
17	052021	1	GASKET, radiator outlet elbow
18	061671	12	SNUBBER, vibration, radiator mounting
19	082014	6	TUBE, spacing, vibration snubber
20	061656	6	WASHER, radiator mounting
21	656333	6	CAPSCREW, radiator mounting
	904206	6	LOCKWASHER, 3/8"
21A	023633	2	WIRE, locking, 1/16" x 12"
22	639152	1	SUPPORT, radiator, (Used prior to tractor #6390 excluding #6370, 76, 80, 83, 85, 86, 88, 89 but including #6436, 6442, 6529, 6544)
	643225	1	SUPPORT, radiator, (Effective with tractor #6390 including #6370, 76, 80, 83, 85, 86, 88, 89 but excluding #6436, 6442, 6529, 6544)
23	012526	4	CAPSCREW, 3/4"NF x 3-1/4"
	904369	4	LOCKWASHER, 3/4"
	911045	4	NUT, 3/4"NF
24	061689	4	WASHER, radiator support capscrew
25	630364	1	BRACE, radiator support, right side
	911046	2	NUT, 7/8"NF
26	070285	1	CAPSCREW, 3/4"NF x 3"
	904369	1	LOCKWASHER, 3/4"
	911045	1	NUT, 3/4"NF
27	630363	1	BRACE, radiator support, left side
	911046	2	NUT, 7/8"NF
28	070285	1	CAPSCREW, 3/4"NF x 3"
	904369	1	LOCKWASHER, 3/4"
	911045	1	NUT, 3/4"NF
29	060689	2	BOSS, spacing, radiator brace
30	095575	1	RING, cushion, radiator neck
31	076684	1	SHIM, radiator neck supporting ring (1/16" thick. Use as req'd.)
	076685	2	SHIM, radiator neck supporting ring (1/32" thick. Use as req'd.)
32	099137	1	RING, supporting, radiator neck
33	036034	6	CAPSCREW, 3/8"NF x 1"
	904206	6	LOCKWASHER, 3/8"
34	630632	1	GUARD, fan (Used prior to tractor #6390 excluding #6370, 76, 80, 83, 85, 86, 88, 90 but including #6436, 6442, 6529, 6544)
	642921	1	GUARD, fan (Effective with tractor #6390 including #6370, 76, 80, 83, 85, 86, 88, 89 but excluding #6436, 6442, 6529, 6544)
35	036034	6	CAPSCREW, 3/8"NF x 1" (Early units)
	035439	6	CAPSCREW, 3/8"NC x 1" (Late units)
	904206	6	LOCKWASHER, 3/8"
	044973	6	WASHER, plain
36	083665	1	SCREEN, radiator (Special equipment. Used with suction fan only) (Not illustrated)
	037450	10	CAPSCREW, 5/16"NC x 1-1/4"
	092665	10	WASHER, plain

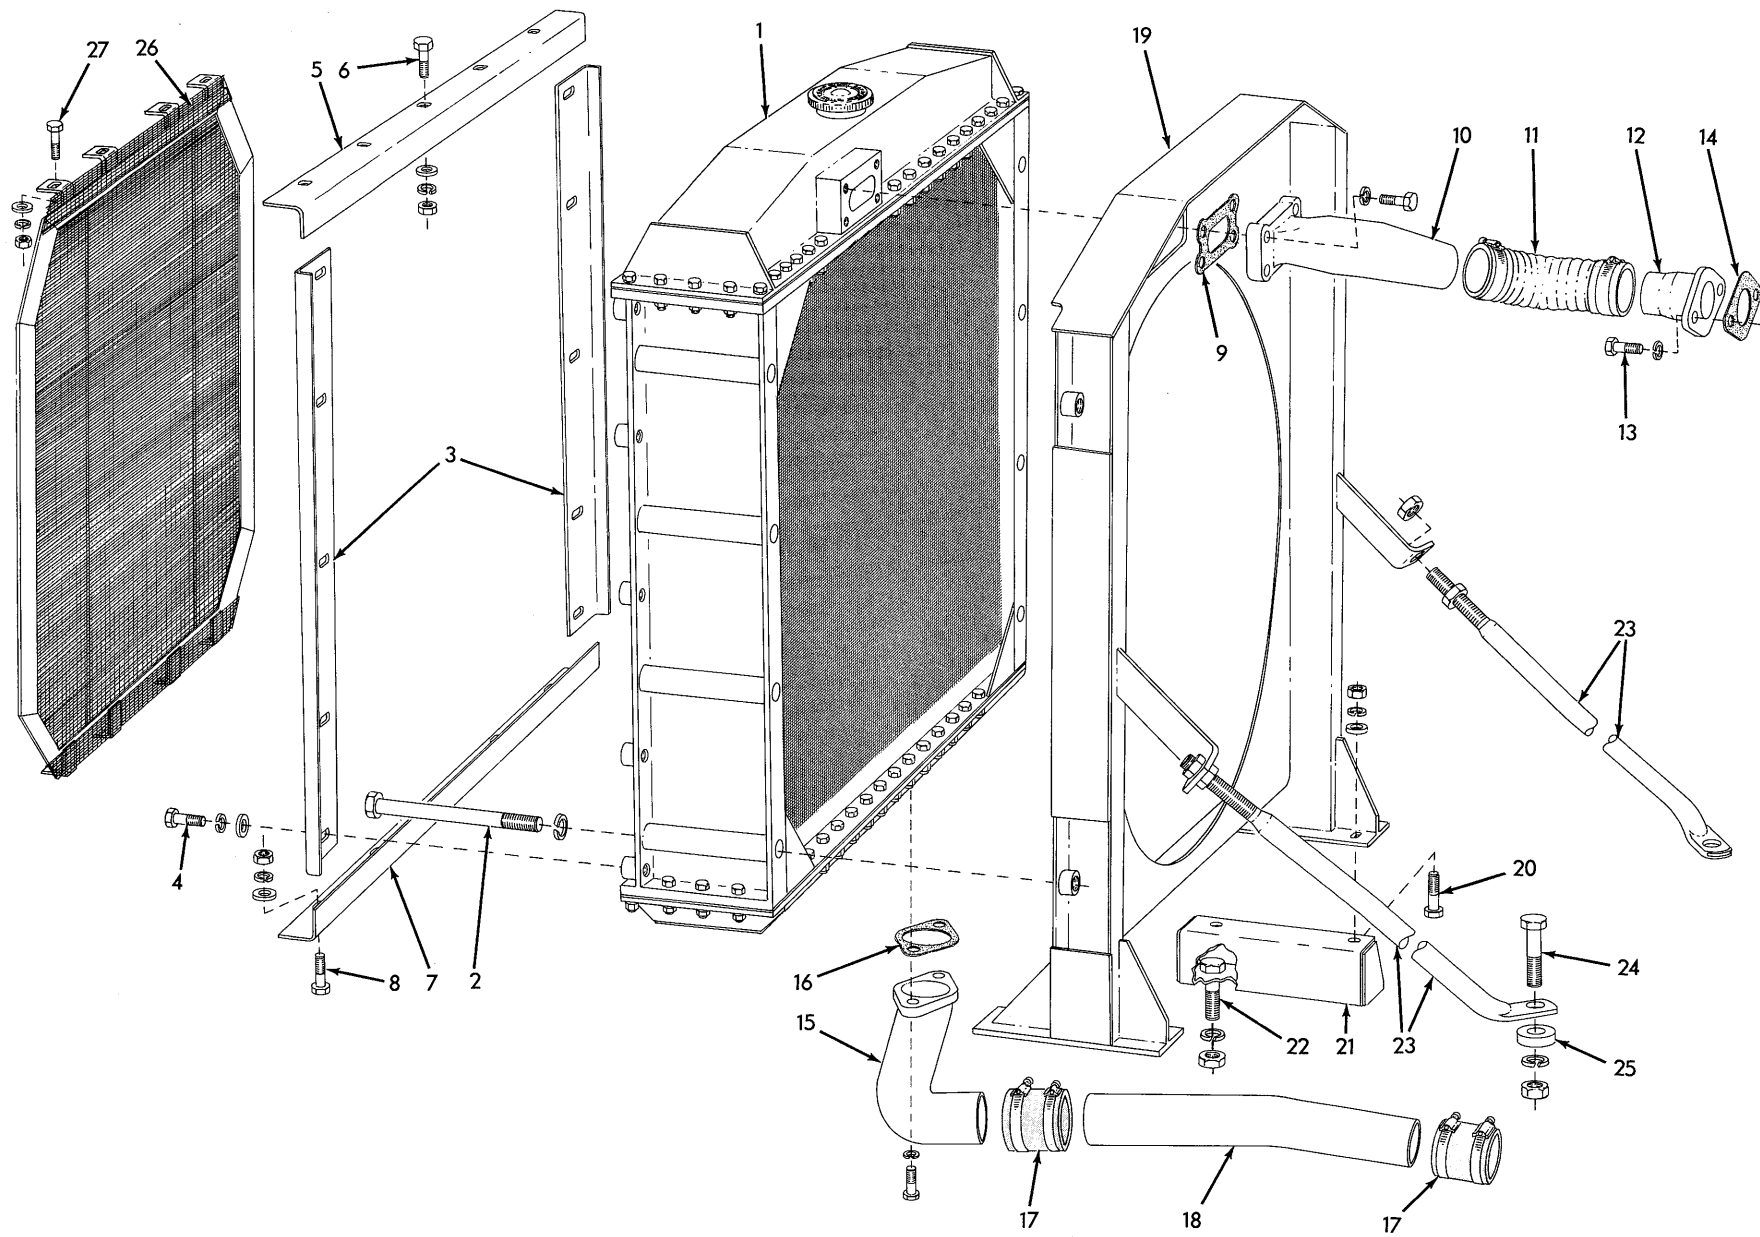

RADIATOR AND MOUNTING (Special)

T-73611

RADIATOR AND MOUNTING


USAGE: Model HD16D with optional Light-duty Radiator Shell

ITEM	PART NO.	QTY.	DESCRIPTION
1	645482	1	RADIATOR ASSEMBLY (See page 113 for parts)
2	065468	8	CAPSCREW, 5/8"NF x 8-1/4"
	904209	8	LOCKWASHER, 5/8"
3	646892	2	BAFFLE, air, side
4	012992	10	CAPSCREW, 3/8"NF x 1-1/4"
	904206	10	LOCKWASHER, 3/8"
	044973	10	WASHER, plain
5	642339	1	BAFFLE, air, upper
6	012992	5	CAPSCREW, 3/8"NF x 1-1/4"
	044973	5	WASHER, plain
	904206	5	LOCKWASHER, 3/8"
	911041	5	NUT, 3/8"NF
7	642352	1	BAFFLE, air, lower
8	012992	5	CAPSCREW, 3/8"NF x 1-1/4"
	044973	5	WASHER, plain
	904206	5	LOCKWASHER, 3/8"
	911041	5	NUT, 3/8"NF
9	084888	1	GASKET, radiator inlet elbow
10	084042	1	ELBOW, radiator inlet
	904706	4	CAPSCREW, 7/16"NC x 1-1/4"
	904207	4	LOCKWASHER, 7/16"
11	642057	1	HOSE, radiator inlet
	921913	2	CLAMP, hose, 1-13/16" to 2-3/4" diam.
12	642298	1	ADAPTER, engine water outlet
13	043886	2	CAPSCREW, 7/16"NC x 1"
	904207	2	LOCKWASHER, 7/16"
14	4310257	1	GASKET, engine water outlet adapter
15	641951	1	ELBOW, radiator outlet
	904706	2	CAPSCREW, 7/16"NC x 1-1/4"
	904207	2	LOCKWASHER, 7/16"
16	4310257	1	GASKET, radiator outlet elbow
17	073539	2	HOSE, radiator, lower
	921915	4	CLAMP, hose, 2-13/16" to 3-3/4" diam.
18	633626	1	TUBE, engine water inlet
19	649807	1	SUPPORT, radiator
20	035073	4	CAPSCREW, 1/2"NF x 1-3/4"
	064531	4	WASHER, plain
	904208	4	LOCKWASHER, 1/2"
	911043	4	NUT, 1/2"NF
21	653763	1	ADAPTER, radiator support, left side
	653764	1	ADAPTER, radiator support, right side
22	012742	4	CAPSCREW, 3/4"NF x 2-1/4"
	904369	4	LOCKWASHER, 3/4"
	911045	4	NUT, 3/4"NF

(Continued)

RADIATOR AND MOUNTING (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
23	{ 630363	1	BRACE, radiator support, left side
	{ 630364	1	BRACE, radiator support, right side
24	911046	1	NUT, 7/8"NF
	070285	2	CAPSCREW, 3/4"NF x 3"
	904369	2	LOCKWASHER, 3/4"
	911045	2	NUT, 3/4"NF
25	060689	2	BOSS, spacing, radiator brace
26	645913	1	SCREEN, radiator (Special equipment)
27	046321	8	CAPSCREW, 5/16"NC x 1-1/2"
	092665	8	WASHER, plain
	904205	8	LOCKWASHER, 5/16"
	911025	8	NUT, 5/16"NC

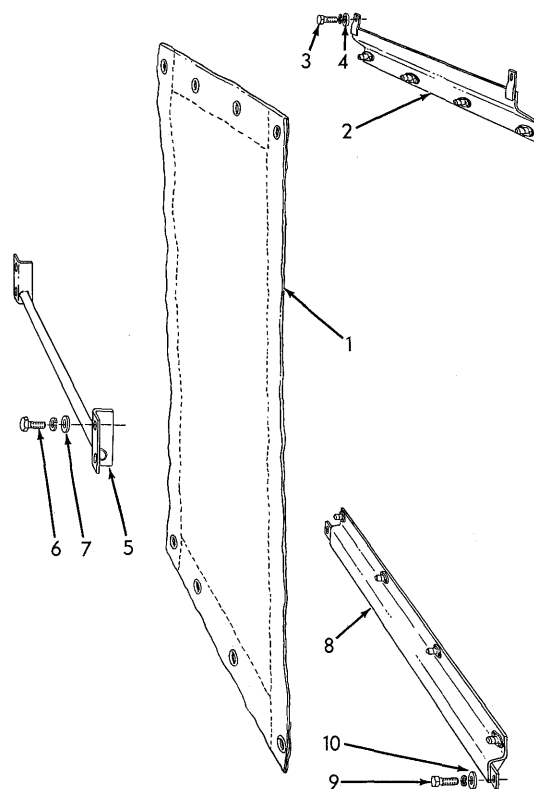


RADIATOR CURTAIN

T-5137A

USAGE: Special equipment. Cannot be used on tractors with push-type fan.

ITEM	PART NO.	QTY.	DESCRIPTION
1	084177	1	CURTAIN
2	651155	1	BRACKET ASSEMBLY, curtain attaching, upper (Includes fasteners)
3	012992	2	CAPSCREW, 3/8"NF x 1-1/4"
	904206	2	LOCKWASHER, 3/8"
4	044973	2	WASHER, plain
5	085275	1	ROD, curtain supporting
6	012992	2	CAPSCREW, 3/8"NF x 1-1/4"
	904206	2	LOCKWASHER, 3/8"
7	044973	2	WASHER, plain
8	651158	1	BRACKET ASSEMBLY, curtain attaching, lower (Includes fasteners)
9	012992	2	CAPSCREW, 3/8"NF x 1-1/4"
	904206	2	LOCKWASHER, 3/8"
10	044973	2	WASHER, plain

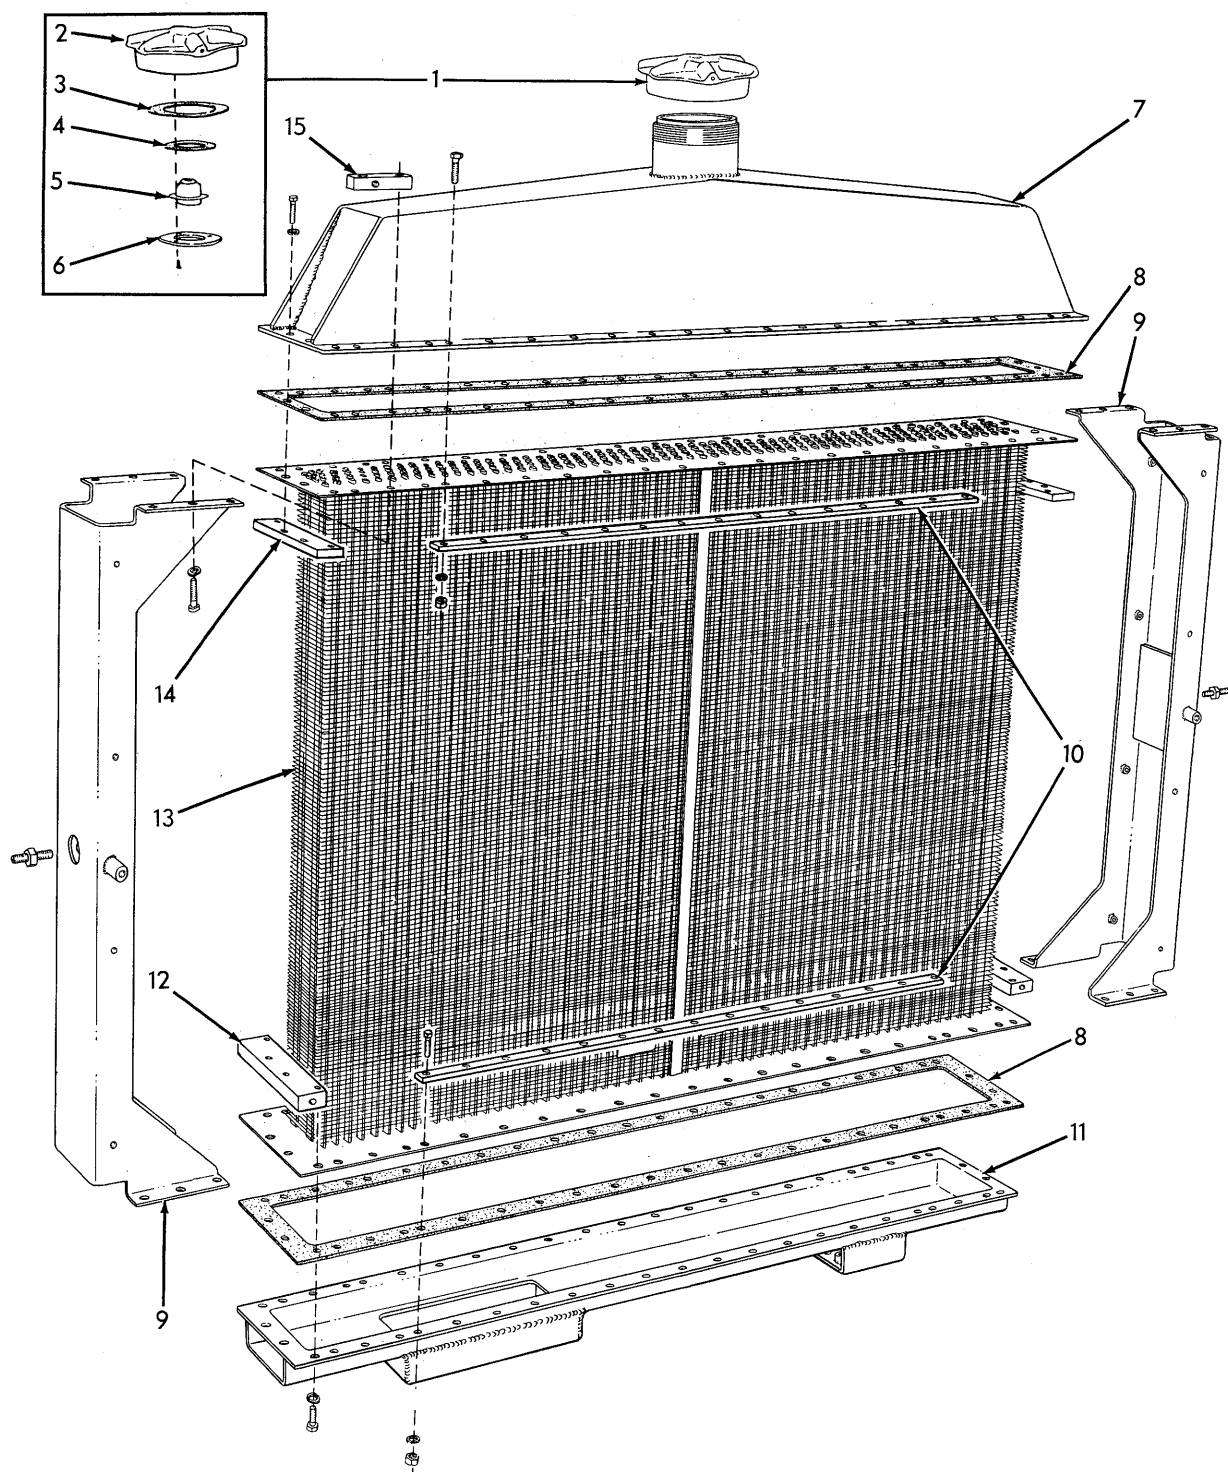


RADIATOR PARTS

* 083542 RADIATOR ASSY. (Has standard type core)
 ** 643421 RADIATOR ASSY. (Has standard type core)
 ** 643558 RADIATOR ASSY. (Has armored type core)
 Δ 639216 RADIATOR ASSY. (Has armored type core)
 ΔΔ 643397 RADIATOR ASSY. (Has standard type core)
 ΔΔ 643473 RADIATOR ASSY. (Has armored type core)
 ΔΔ 645539 RADIATOR ASSY. (Has in-line type core)

See
 page
 105

NOTE: See page 115 for Radiator used with optional light-duty Radiator Shell

ITEM	PART NO.	QUANTITY				DESCRIPTION
		*	**	Δ	ΔΔ	
1	058730	1	1	1	1	CAP ASSEMBLY, water cooling radiator (Consists of items 2 thru 6)
2	-----	1	1	1	1	CAP, radiator (Furnished only as part of item 1)
3	059242	1	1	1	1	GASKET, radiator cap
4	059244	1	1	1	1	GASKET, pressure valve
5	059245	1	1	1	1	VALVE, pressure
6	059243	1	1	1	1	RING, pressure valve retaining
	914782	3	3	3	3	SCREW, machine, rd-hd., brass, #5-40 x 3/8"
7	085065	1	1	1	1	TANK, top
	903772	42	42	42	42	CAPSCREW, 5/16"NC x 1"
	903773	4	4	4	4	CAPSCREW, 5/16"NC x 1-1/4"
	904205	46	46	46	46	LOCKWASHER, 5/16"
	911025	38	38	38	38	NUT, 5/16"NC
8	079763	2	2	2	2	GASKET, core
9	085616	2	2	-	-	SIDE
	641547	-	-	2	2	SIDE
	915888	2	2	2	2	SETSCREW, slotted-hd., cup-pt., 3/8"NC x 1-3/4"
	903584	2	2	2	2	NUT, jam, 3/8"NC
10	074679	4	4	4	4	CLAMP, core flange, center
11	085015	1	-	1	-	TANK, bottom
	643404	-	1	-	1	TANK, bottom
	903772	38	38	38	38	CAPSCREW, 5/16"NC x 1"
	903773	4	4	4	4	CAPSCREW, 5/16"NC x 1-1/4"
	904205	42	42	42	42	LOCKWASHER, 5/16"
	911025	42	42	42	42	NUT, 5/16"NC
12	079678	2	2	2	2	CLAMP, core bottom flange, end
	903772	8	8	8	8	CAPSCREW, 5/16"NC x 1"
	904205	8	8	8	8	LOCKWASHER, 5/16"
13	085086	1	1	-	-	CORE (Standard type)
	632478	-	1	-	-	CORE (Armored type)
	642881	-	-	-	1	CORE (Standard type)
	641548	-	-	1	1	CORE (Armored type)
	645541	-	-	-	1	CORE (In-line type)
14	079489	2	2	2	2	CLAMP, core top flange, end
15	079762	2	2	2	2	BLOCK, tapped
	903772	4	4	4	4	CAPSCREW, 5/16"NC x 1"
	904205	4	4	4	4	LOCKWASHER, 5/16"

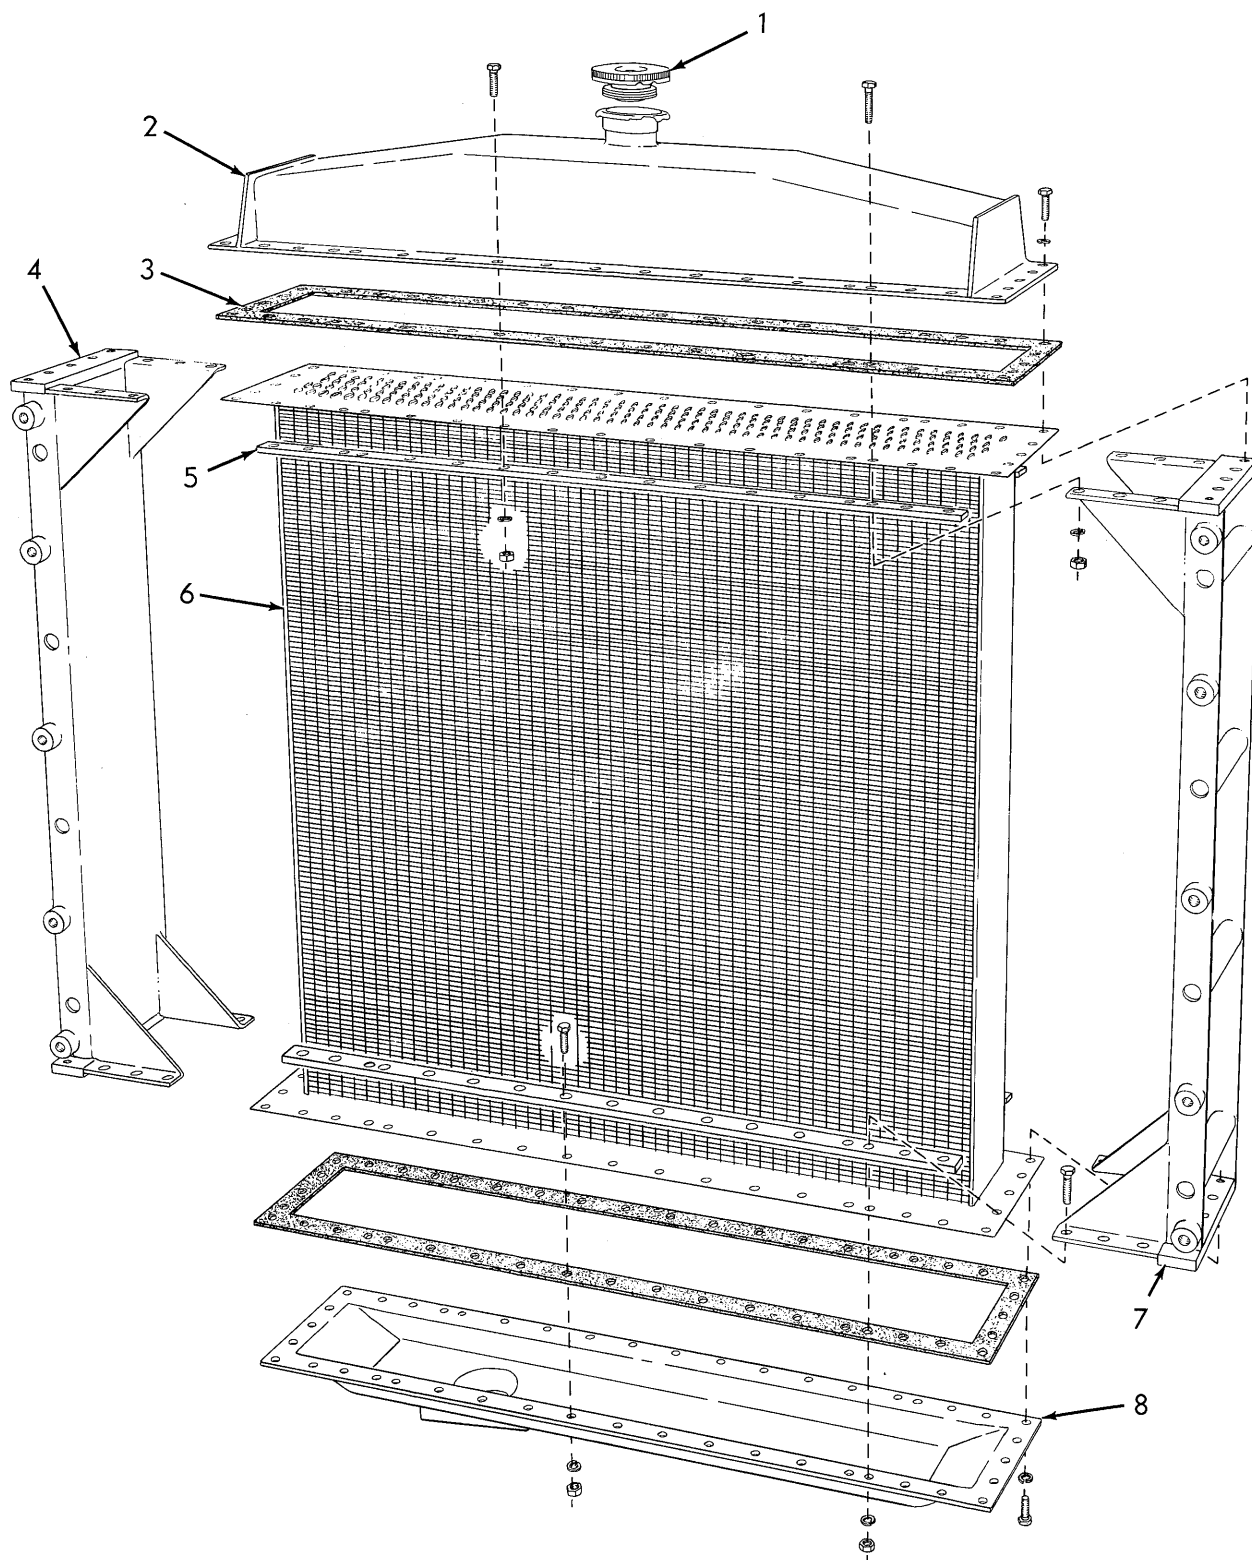


RADIATOR ASSEMBLY 645482

T-13169

RADIATOR ASSEMBLY 645482

USAGE: Model HD16D with optional light-duty Radiator Shell. See page 109.

ITEM	PART NO.	QTY.	DESCRIPTION
1	087528	1	CAP, pressure (7 lb.)
2	645948	1	TANK, top
	903772	26	CAPSCREW, 5/16"NC x 1"
	903773	18	CAPSCREW, 5/16"NC x 1-1/4"
	904205	44	LOCKWASHER, 5/16"
	911025	38	NUT, 5/16"NC
3	645951	2	GASKET, core
4	638792	1	SIDE, radiator core, right
5	645950	4	CLAMP, radiator core flange
6	645952	1	CORE
7	638791	1	SIDE, radiator core, left
8	645949	1	TANK, bottom
	903772	26	CAPSCREW, 5/16"NC x 1"
	903773	18	CAPSCREW, 5/16"NC x 1-1/4"
	904205	44	LOCKWASHER, 5/16"
	911025	40	NUT, 5/16"NC

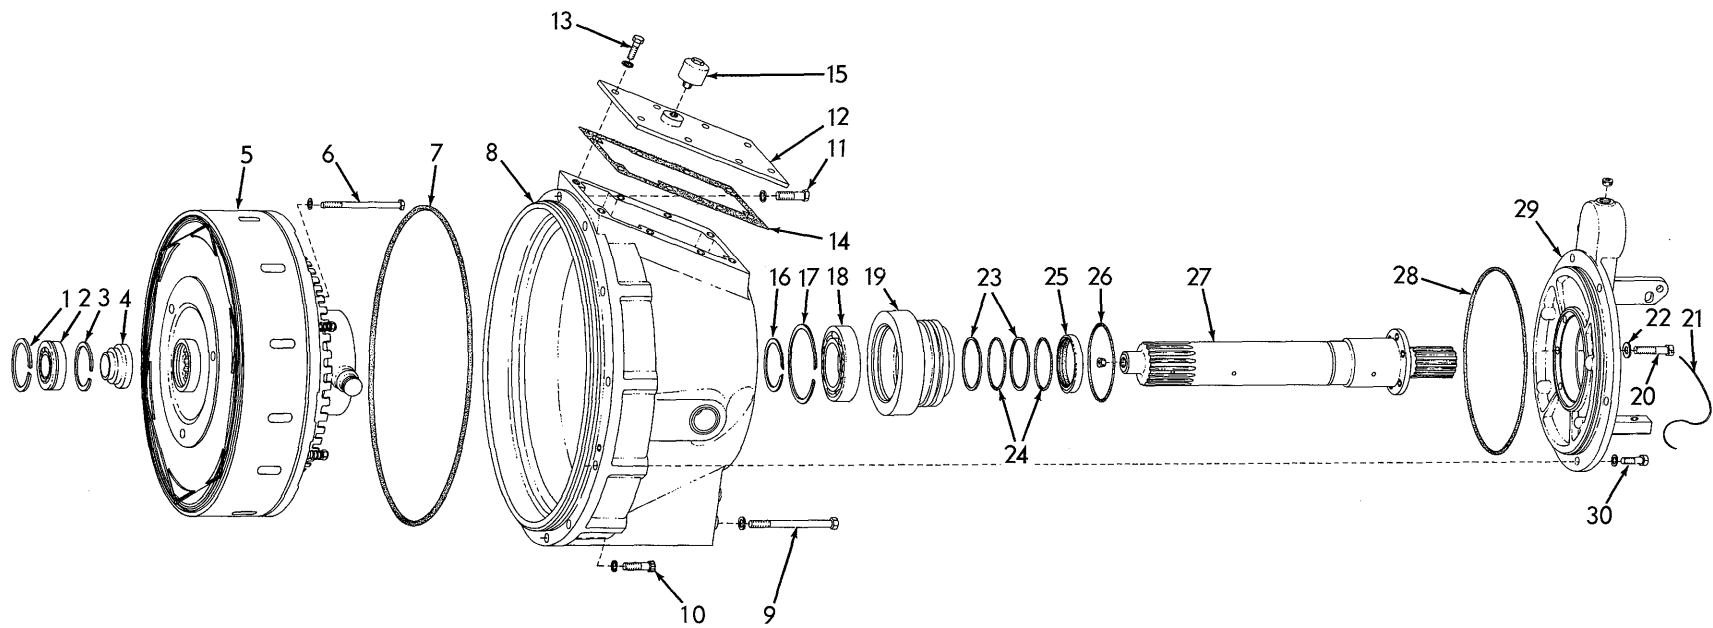


ENGINE CLUTCH AND HOUSING (HD16D)

T-73628

ENGINE CLUTCH AND HOUSING

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	4253317	1	RING, snap, bearing retaining
2	097088	1	BEARING, ball, clutch shaft, front
3	644300	1	RING, snap, clutch thrust
4	644299	1	SPACER, clutch thrust
} Effective with tractor #6520			
5	644258	1	CLUTCH ASSEMBLY (See page 119 for parts)
6	052191	8	CAPSCREW, 1/2"NC x 5-1/2"
	904208	8	LOCKWASHER, 1/2"
7	621186	1	O-RING, clutch housing
8	632516	1	HOUSING, engine clutch
9	056498	8	CAPSCREW, 7/16"NC x 4-1/8"
10	923268	2	SCREW, 12-point, 7/16"NC x 1-1/2"
11	040013	2	CAPSCREW, 7/16"NC x 1-3/4"
	904207	12	LOCKWASHER, 7/16"
12	633964	1	COVER, clutch access
13	035439	8	CAPSCREW, 3/8"NC x 1"
	904206	8	LOCKWASHER, 3/8"
14	633965	1	GASKET, access cover
15	050748	1	BREATHER, clutch housing
16	065512	1	RING, snap, clutch shaft
17	054220	1	RING, snap, oil seal retainer
18	058694	1	BEARING, ball, clutch shaft, rear
19	633866	1	RETAINER, clutch shaft oil seal
20	099963	6	CAPSCREW, drilled-hd., 3/8"NC x 2"
21	023756	1	WIRE, locking, 1/16" x 26"
22	4254873	6	WASHER, sealing
23	638279	2	RING, seal, clutch shaft
24	638278	2	O-RING, clutch shaft seal ring
25	634703	1	SEAL, oil, clutch shaft
26	923821	1	O-RING, oil seal retainer
27	644275	1	SHAFT, clutch
	904260	1	PLUG, pipe, sq-socket, 3/8"NPT
28	633956	1	O-RING, rear bearing retainer
29	633996	1	RETAINER, clutch shaft rear bearing
	915739	1	PLUG, pipe, sq-socket, 3/8"NPT
30	013058	5	CAPSCREW, 3/8"NC x 1-1/4"
	904206	5	LOCKWASHER, 3/8"

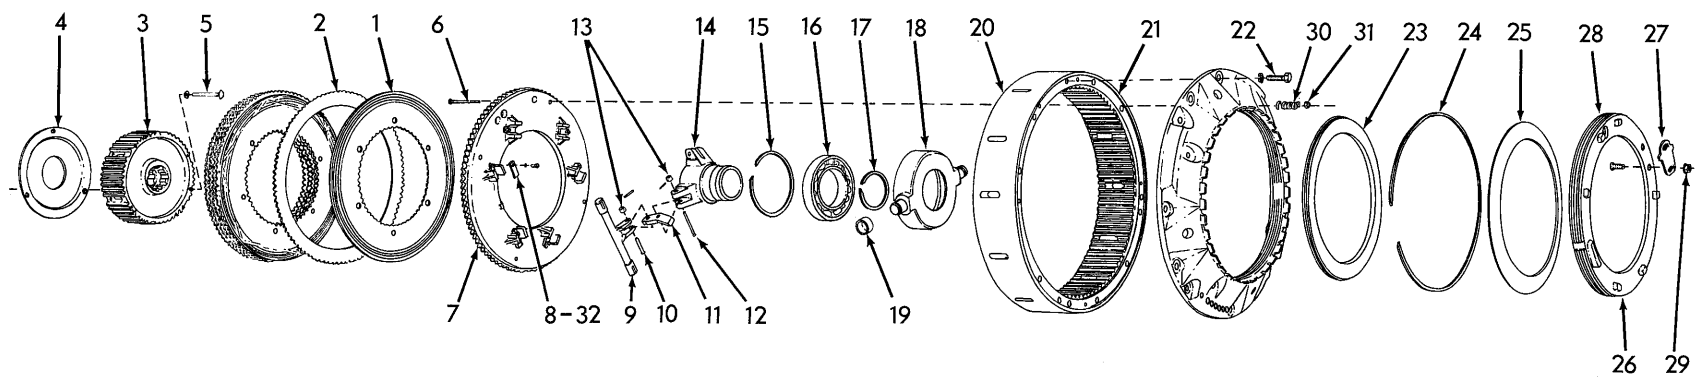

ENGINE CLUTCH PARTS (HD16D)

I-70436

ENGINE CLUTCH PARTS

USAGE: Model HD16D. See page 117

ITEM	PART NO.	QTY.	DESCRIPTION
1	639998	6	DISC, friction, inner
2	644652	5	DISC, friction, outer
3	639914	1	CENTER, splined (Tractors prior to #6520)
	644296	1	CENTER, splined (Tractors #6520 and up)
4	639945	1	COVER, splined center (Tractors prior to #6520)
	644297	1	COVER, splined center (Tractors #6520 and up)
5	639941	3	SCREW, cover retaining (Tractors prior to #6520)
	910243	3	WASHER, plain, SAE std., 3/16"
	623466	3	LOCKNUT
	644298	3	RIVET, cover retaining (Tractors #6520 and up)
	911114	3	WASHER, plain, SAE std., 1/4"
6	074245	4	CAPSCREW, retracting spring
7	638622	1	PLATE ASSEMBLY, pressure (Includes item 8)(Tractors prior to #6520)
	644292	1	PLATE ASSEMBLY, pressure (Includes item 8)(Tractors #6520 and up)
8	223585	6	□ BLOCK, cam (Recommend replacement in sets.)
	901226	6	□ SCREW, machine, fil-hd., 1/4"NC x 1/2"
	914593	6	□ LOCKWASHER, external teeth, 1/4"
9	639640	3	CAMSHAFT ASSEMBLY (Recommend replacement in sets. Includes 6 roller which are not serviced separately and PIN indented below)
	917466	3	PIN, spring, 3/16" x 1-1/8"
10	638649	3	PIN, connecting link, short
	919180	3	PIN, spring, 1/8" x 5/8"
11	641557	3	LINK, connecting
12	638648	3	PIN, connecting link, long
	919180	3	PIN, spring, 1/8" x 5/8"
13	638650	6	COLLAR, connecting link pin
14	639997	1	SLEEVE ASSEMBLY, shifting (Includes 2 bushings which are not serviced separately)
15	639934	1	RING, snap, bearing carrier
16	042975	1	BEARING, ball, shifting sleeve
17	041809	1	RING, snap, shifting sleeve
18	639925	1	CARRIER ASSEMBLY, bearing (Includes item 19)
19	639926	2	RACE, inner, shifting yoke needle bearing


□ Indicates component of item 32

(Continued)

ENGINE CLUTCH PARTS (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
20	639996	1	RING, driven
21	638623	1	PLATE, back
22	037450	4	CAPSCREW, 5/16"NC x 1-1/4"
	904205	4	LOCKWASHER, 5/16"
23	639936	1	PLATE, adjusting ring
24	623452	1	RING, washer retaining
25	624670	1	WASHER, pressure
26	624669	1	RING, adjusting
27	646825	1	LOCK, adjustment
28	639752	2	SCREW (fl-hd., 3/8"NF x 7/8")
29	639750	2	NUT, flanged (3/8"NF)
30	639751	4	SPRING, pressure plate retracting
31	073927	4	NUT, retracting spring screw (self-locking)
32	043397	1	BLOCK KIT, clutch camshaft (Full set of blocks and attaching parts listed under item 8 above)

MEMO

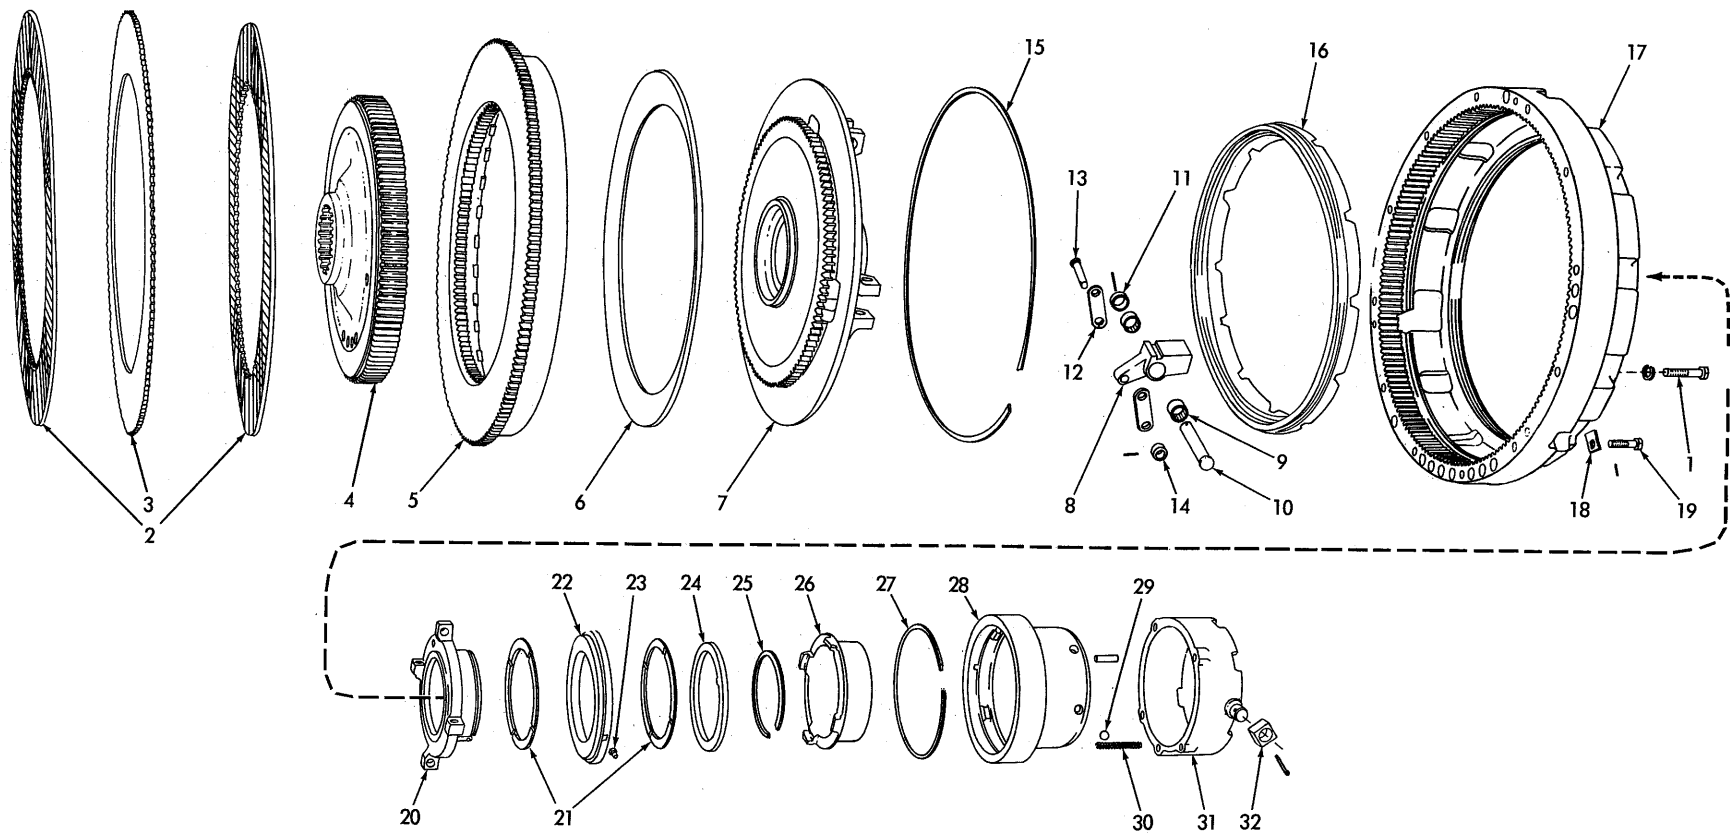


ENGINE CLUTCH (HD16DC)

T-39343

ENGINE CLUTCH

USAGE: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
-	630797	1	CLUTCH ASSEMBLY, engine (Consists of items 2 thru 32)
1	058793	12	CAPSCREW, 3/8"NC x 2-1/4"
	904206	12	LOCKWASHER, 3/8"
2	646940	2	PLATE, friction (bi-metallic)
3	634346	1	PLATE, friction (steel)
4	634343	1	HUB, clutch
5	634348	1	PLATE, pressure
6	634350	1	SPRING, belleville, pressure plate
7	634349	1	CARRIER, shifting sleeve
8	628227	4	LEVER, actuating
9	628228	8	BEARING, needle, actuating lever
10	628226	4	PIN, actuating lever
11	628233	4	COLLAR, actuating lever pin
	916202	4	PIN, spring, 1/8" x 7/8"
12	628225	8	LINK, connecting
13	628224	8	PIN, connecting link
14	094483	8	COLLAR, connecting link pin
	919180	8	PIN, spring, 1/8" x 5/8"
15	634351	1	RING, snap, pressure plate
16	634354	1	RING, adjusting
17	638878	1	COVER, clutch
18	628230	1	LOCK, adjusting ring
19	628229	1	CAPSCREW, drilled-end, 3/8"NC x 1-1/2"
	917735	1	PIN, spring, 3/32" x 9/16"
20	634356	1	SLEEVE, shifting
21	634339	2	BEARING, thrust, shifting ring
22	634355	1	RING, shifting
23	634342	1	PIN, shifting ring
24	634344	1	PLATE, thrust, shifting sleeve
25	641643	1	RING, snap, shifting sleeve
26	634347	1	PISTON, booster
27	634352	1	RING, snap, lock-out collar
28	634340	1	COLLAR, lock-out
	918390	1	PIN, spring, 3/8" x 1-1/4"
29	905362	6	BALL, steel, 1/2" diam.
30	638887	4	SPRING, lock-out collar
31	646941	1	COLLAR, shifting
	900938	2	PIN, cotter, 3/16" x 1"
32	054459	2	BLOCK, shifting collar

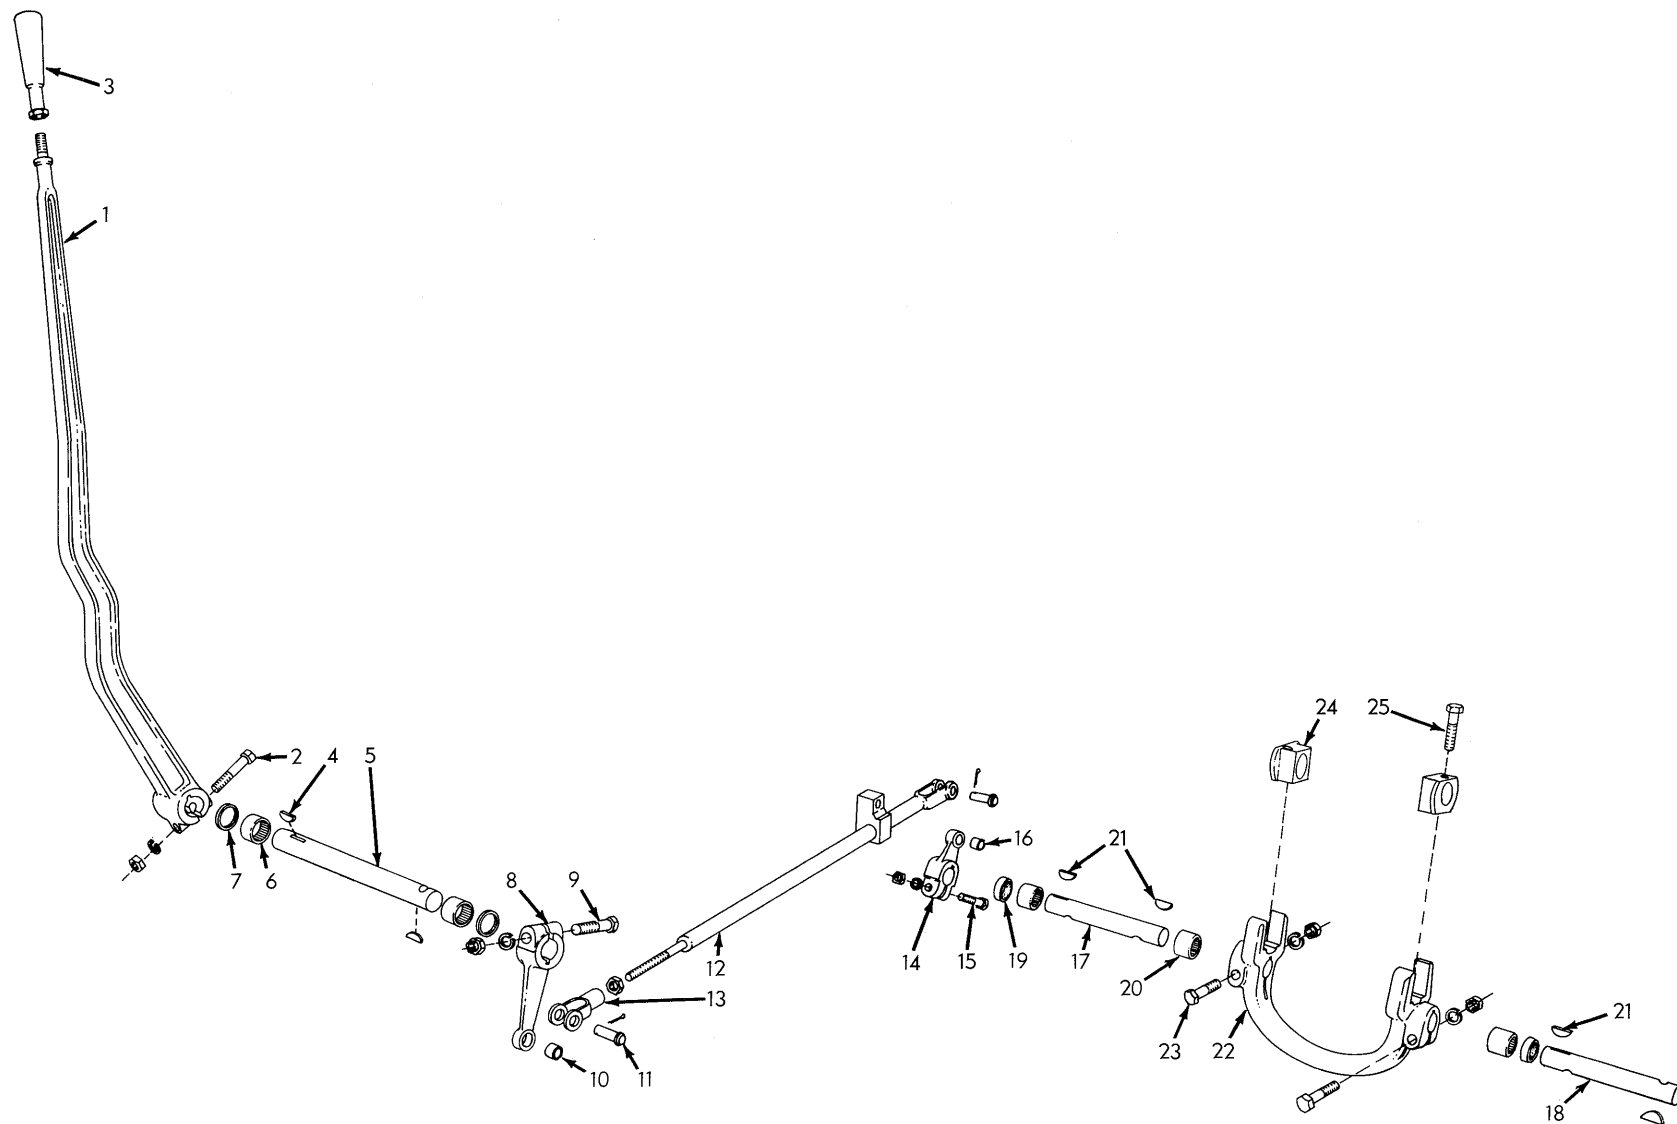


-ENGINE CLUTCH CONTROL (Model HD16D).

T-39402

ENGINE CLUTCH CONTROL

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	632452	1	LEVER, operating
2	035892	1	CAPSCREW, 1/2"NF x 2-1/2"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
3	078620	1	GRIP, operating lever
4	036997	2	KEY, #13 woodruff, hardened, 3/16" x 1"
5	641046	1	SHAFT, operating lever
6	051513	2	BEARING, needle, operating lever shaft
7	053926	2	SEAL, dust, operating lever shaft bearing
8	058313	1	LEVER ASSEMBLY, operating lever shaft (Includes item 10)
9	035068	1	CAPSCREW, 1/2"NF x 2-1/4"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
10	049988	1	BUSHING, shaft lever
11	049993	2	PIN, control rod yoke
	900805	2	PIN, cotter, 1/8" x 3/4"
12	641045	1	ROD, control
	913830	1	NUT, jam, 1/2"NF
13	068389	1	YOKE, control rod
14	641048	1	LEVER ASSEMBLY, shifting yoke shaft (Includes item 16)
15	046419	1	CAPSCREW, 3/8"NF x 2"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
16	049988	1	BUSHING, yoke shaft lever
17	634013	1	SHAFT, shifting yoke, left
18	633953	1	SHAFT, shifting yoke, right
19	603010	2	SEAL, oil, shifting yoke shafts
20	604925	3	BEARING, needle, shifting yoke shaft
21	036997	4	KEY, shifting yoke shafts
22	634018	1	YOKE, shifting
23	035068	2	CAPSCREW, 1/2"NF x 2-1/4"
	904208	2	LOCKWASHER, 1/2"
	911043	2	NUT, 1/2"NF
24	634016	2	BLOCK, sliding
25	634015	2	CAPSCREW, 3/8"NF x 1-3/4"

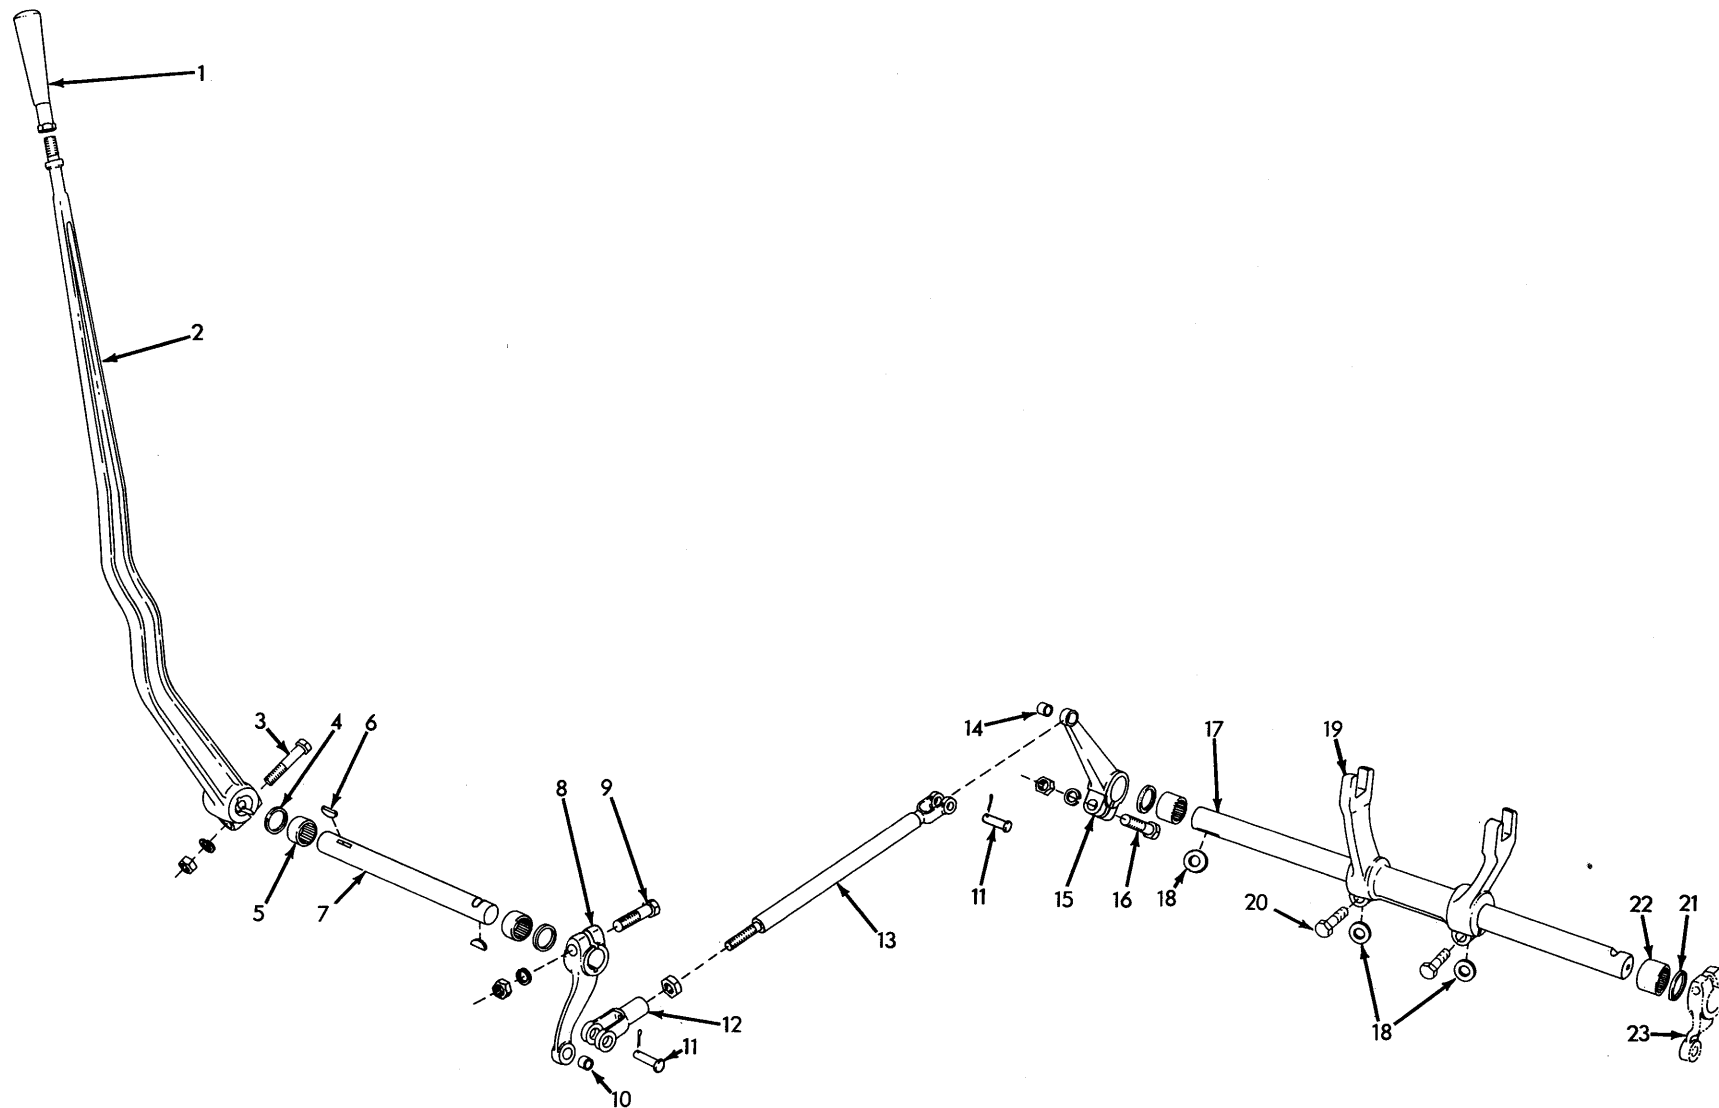


ENGINE CLUTCH CONTROL (Model HD16DC)

T-39409

ENGINE CLUTCH CONTROL

USAGE: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
1	078620	1	GRIP, operating lever
2	632452	1	LEVER, operating
3	035278	1	CAPSCREW, 1/2"NF x 2-3/4"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
4	053926	2	SEAL, dust, operating lever shaft bearing
5	051513	2	BEARING, needle, operating lever shaft
6	036997	2	KEY, #13 woodruff, hardened, 3/16" x 1"
7	649412	1	SHAFT, operating lever
8	075756	1	LEVER ASSEMBLY, operating lever shaft (Includes item 10)
9	035068	1	CAPSCREW, 1/2"NF x 2-1/4"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
10	049988	1	BUSHING, shaft lever
11	049993	2	PIN, control rod yoke
	900805	2	PIN, cotter, 1/8" x 3/4"
12	068389	1	YOKE, control rod
13	631275	1	ROD, control
	911043	1	NUT, 1/2"NF
14	049988	1	BUSHING, fork shaft lever
15	631347	1	LEVER ASSEMBLY, shifting fork shaft, left (Includes item 14)
16	035278	1	CAPSCREW, 1/2"NF x 2-3/4"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
17	632617	1	SHAFT, shifting fork
18	052747	3	KEY, yoke shaft lever
19	632628	1	FORK, shifting
20	035236	2	CAPSCREW, 1/2"NC x 1-3/4"
21	632608	2	SEAL, dust, shifting fork shaft bearing
22	604435	2	BEARING, needle, shifting fork shaft
23	-----	1	LEVER, shifting lock (See GEAR SHIFT)

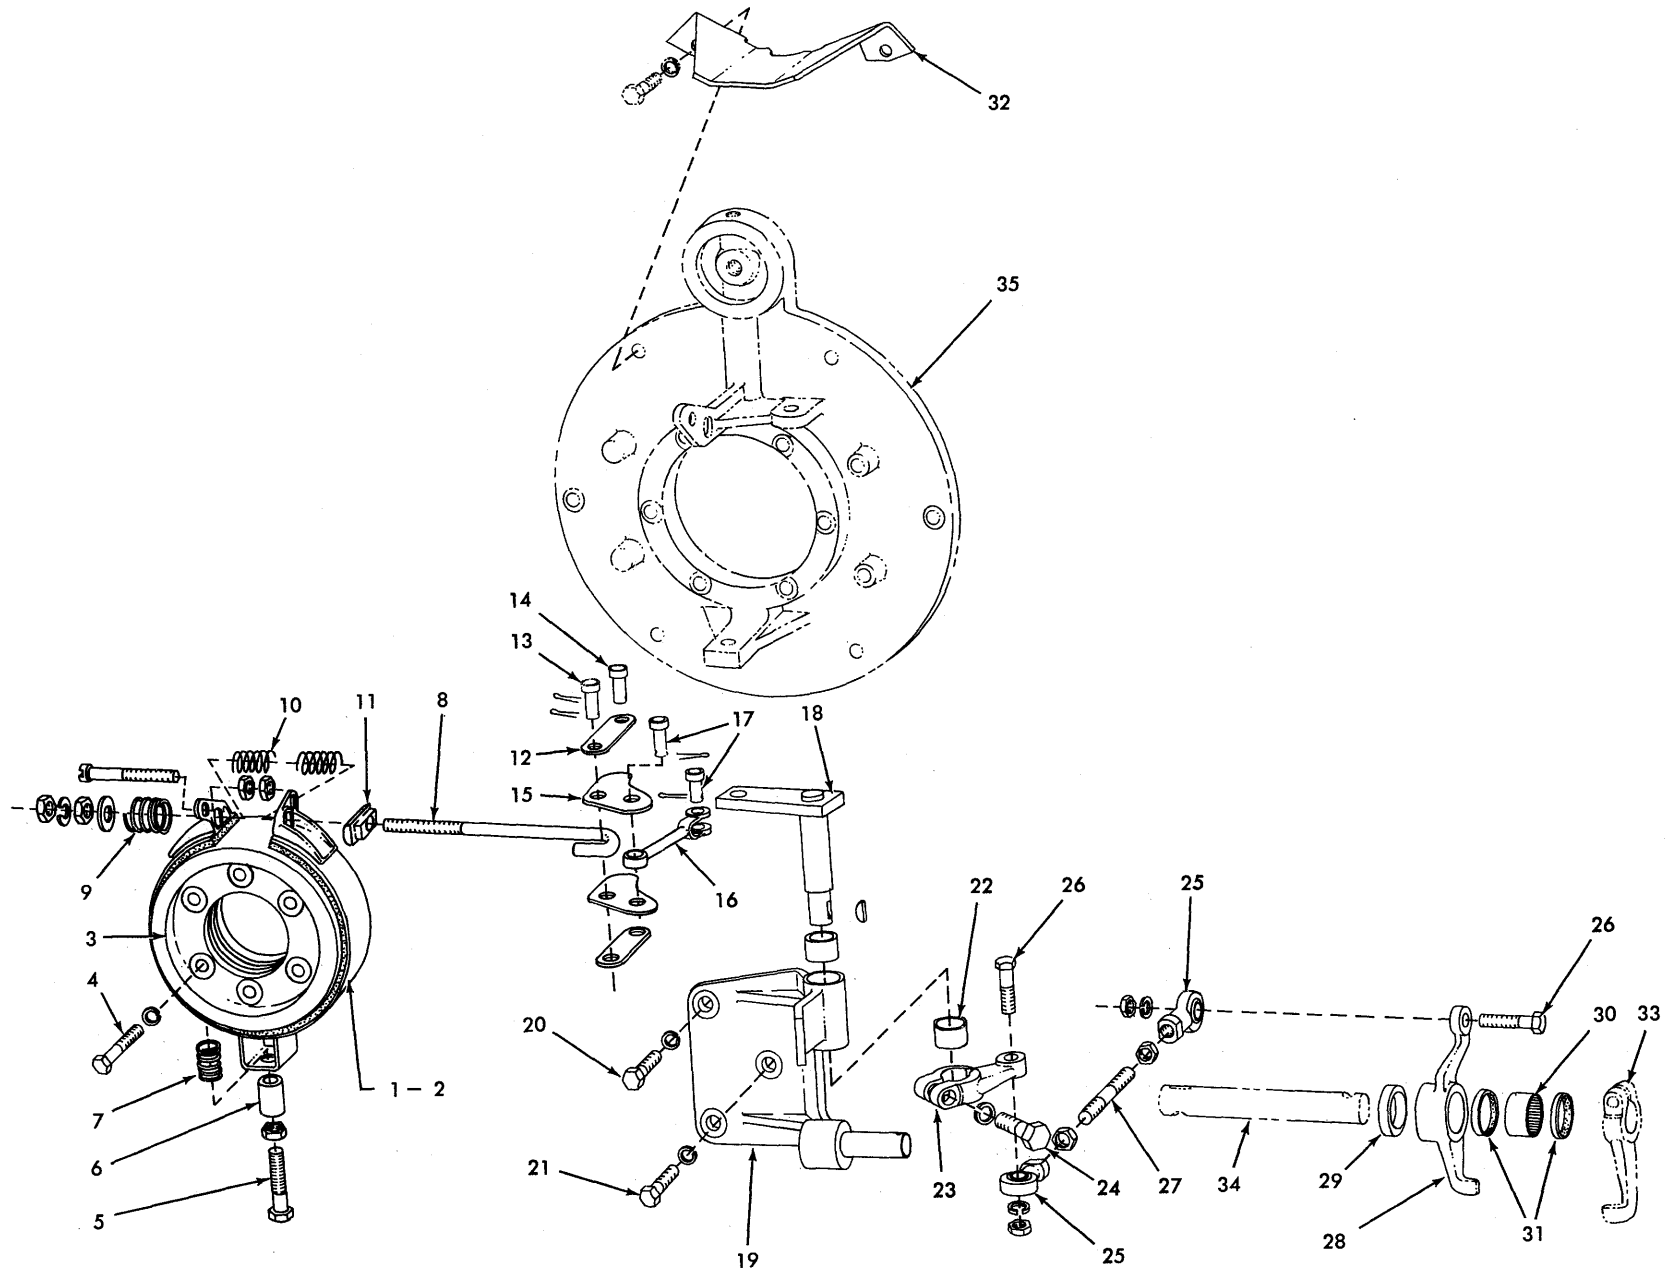

ENGINE CLUTCH BRAKE (HD16D)

T-73629

ENGINE CLUTCH BRAKE

USAGE: Model HD16D only


ITEM	PART NO.	QTY.	DESCRIPTION
1	630169	1	BAND ASSEMBLY, brake (Includes item 2)
	907620	1	SCREW, machine, fil-hd., 1/4"NC x 2-3/4"
	911024	2	NUT, 1/4"NC
2	-----	4	LINING, brake band (Not serviced separately)
3	634071	1	DRUM, brake
4	046419	6	CAPSCREW, 3/8"NF x 2"
	904206	6	LOCKWASHER, 3/8"
5	630493	1	CAPSCREW, band supporting
	911025	1	NUT, 5/16"NC
6	630498	1	SPACER, band supporting screw
7	059981	1	SPRING, band supporting
8	630510	1	BOLT, band adjusting
	912298	1	WASHER, plain, SAE std., 7/16"
	904207	1	LOCKWASHER, 7/16"
	914879	2	NUT, jam, 7/16"NC
9	050972	1	SPRING, band adjusting bolt
10	619260	2	SPRING, band expanding
11	059973	1	SHOE, cam lever
12	059971	2	LINK, cam lever
13	094317	1	PIN, cam lever link, front
	900805	1	PIN, cotter, 1/8" x 3/4"
14	049993	1	PIN, cam lever link, rear
	900805	1	PIN, cotter, 1/8" x 3/4"
15	639974	2	LEVER, cam
16	633958	1	LINK, connecting
17	078810	2	PIN, connecting link
	900802	2	PIN, cotter, 3/32" x 1"
18	640493	1	LEVER, brake control, upper
19	633917	1	BRACKET ASSEMBLY, lever supporting (Includes item 22)
20	044249	2	CAPSCREW, 3/8"NC x 1-1/8"
21	070960	1	CAPSCREW, 3/8"NC x 1-1/2"
	904206	3	LOCKWASHER, 3/8"
22	052669	2	BUSHING, lever supporting bracket
23	055416	1	LEVER, brake control, intermediate
	905121	1	KEY, #5 woodruff, 1/8" x 5/8"
24	037450	1	CAPSCREW, 5/16"NC x 1-1/4"
	904205	1	LOCKWASHER, 5/16"
25	617932	2	END, control rod
26	036039	2	CAPSCREW, 3/8"NF x 1-3/8"
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF

(Continued)

ENGINE CLUTCH BRAKE (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
27	633955	1	ROD, control
	911048	2	NUT, jam, 3/8"NF
28	630437	1	LEVER, brake control, lower
29	634017	1	SPACER, brake control lever
30	051513	1	BEARING, needle, brake control lever
31	053926	2	SEAL, dust, needle bearing
32	634002	1	GUARD, dirt
33	-----	-	LEVER (See SPEED SELECTION GEAR SHIFT)
34	-----	-	SHAFT, shifting yoke (See ENGINE CLUTCH CONTROL)
35	-----	-	RETAINER, rear bearing (See ENGINE CLUTCH AND HOUSING)

MEMO

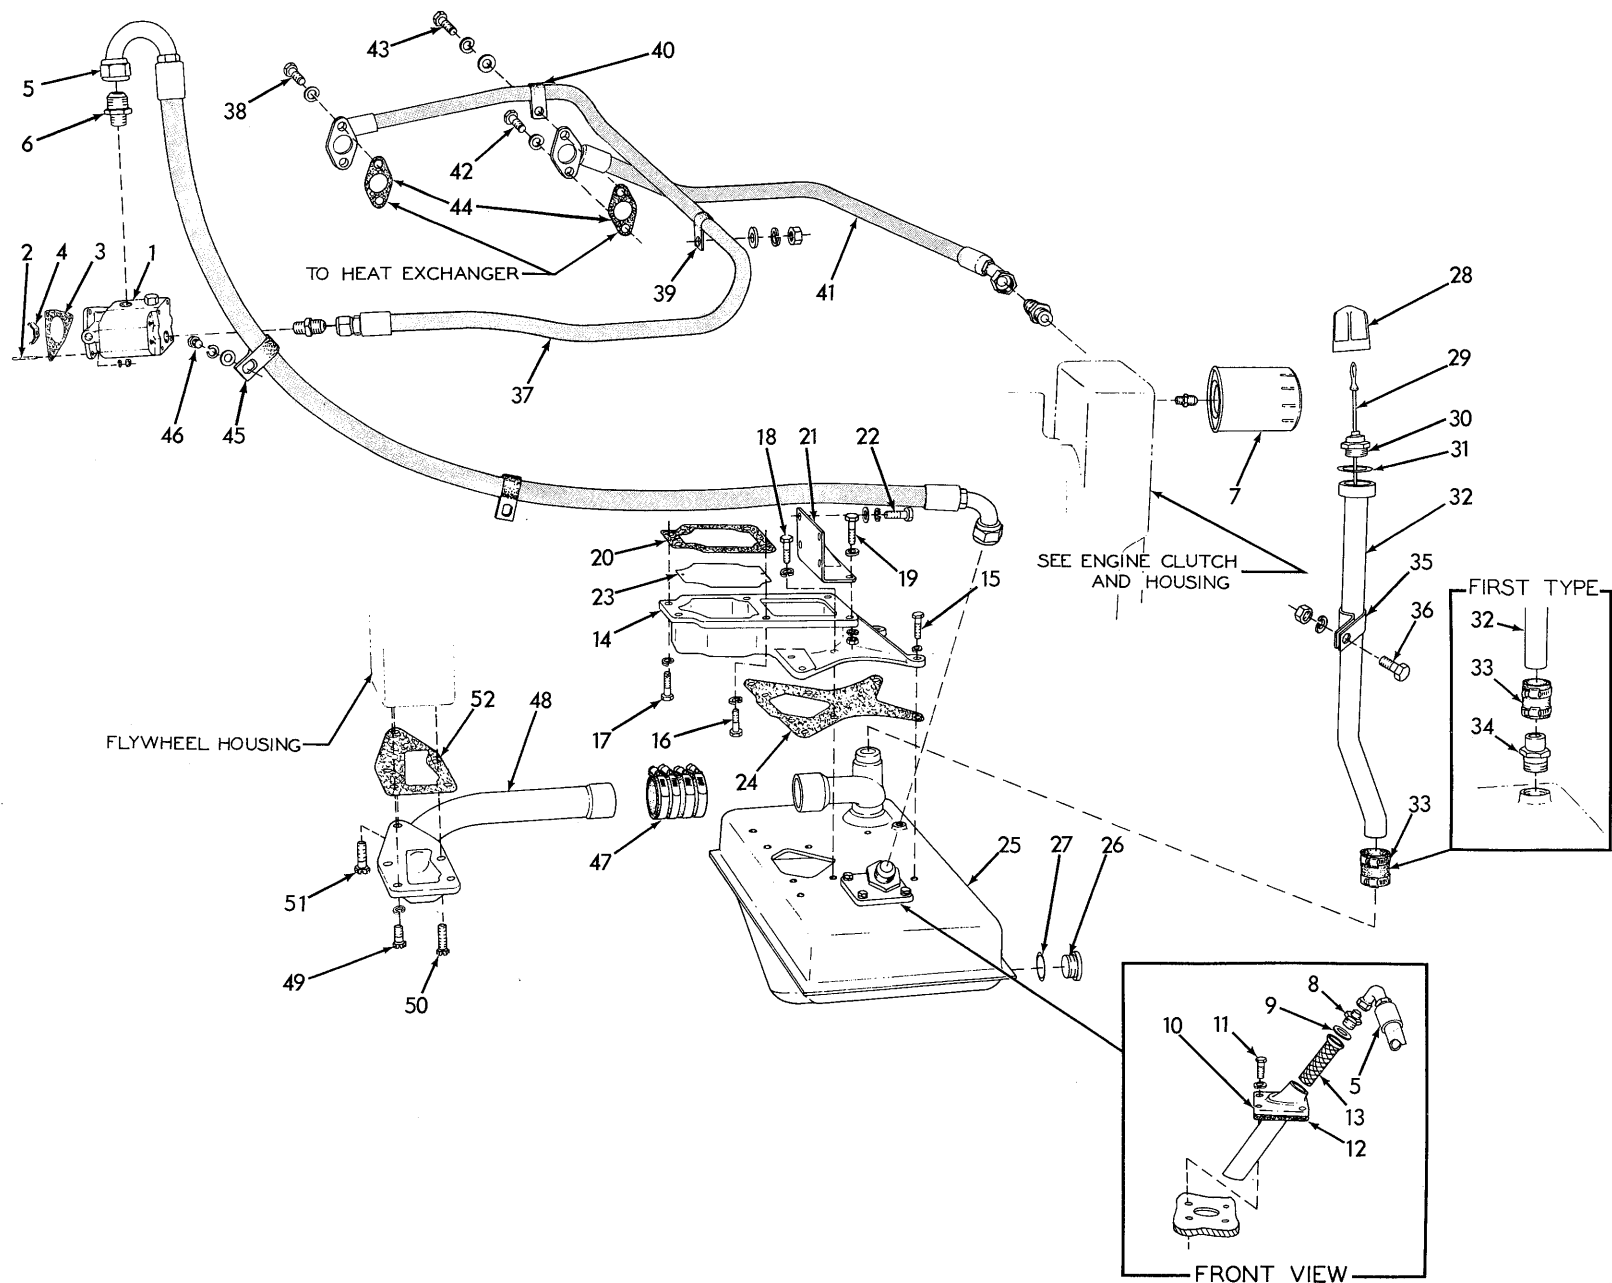

ENGINE CLUTCH OILING SYSTEM (Model HD16D)

T-70438

ENGINE CLUTCH OILING SYSTEM


USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	633978	1	PUMP ASSEMBLY, oil (See page 135 for parts)
2	-----	3	STUD (See ACCESSORY DRIVE)
	904205	3	LOCKWASHER, 5/16"
	911025	3	NUT, 5/16"NC
3	4376605	1	GASKET, oil pump
4	4377121	1	FORK, pump coupling
5	646330	1	HOSE, tank to pump (See HOSE PARTS)
6	633980	1	ADAPTER, oil pump
7	4513411	1	FILTER ASSEMBLY, oil (Serviced only as a unit)
	919063	1	CONNECTOR, flare type, 1/2" tube, 3/8"NPT male
8	631283	1	ADAPTER, oil tank cover
9	035249	1	GASKET, oil tank adapter
10	631271	1	COVER, oil tank
11	070960	4	CAPSCREW, 3/8"NC x 1-1/2"
	904206	4	LOCKWASHER, 3/8"
12	631287	1	GASKET, oil tank cover
13	621039	1	SCREEN, oil
14	631264	1	ELBOW, oil tank to clutch housing
15	070960	4	CAPSCREW, 3/8"NC x 1-1/2"
	904206	4	LOCKWASHER, 3/8"
16	035190	2	CAPSCREW, 1/2"NC x 1-1/2"
17	920541	2	CAPSCREW, Nylok, 1/2"NC x 1-1/2"
18	035236	4	CAPSCREW, 1/2"NC x 1-3/4"
	904208	8	LOCKWASHER, 1/2"
19	035073	2	CAPSCREW, 1/2"NF x 1-3/4"
	064531	2	WASHER, plain
	904208	2	LOCKWASHER, 1/2"
	911043	2	NUT, 1/2"NF
20	633986	1	GASKET, elbow to clutch housing
21	633991	1	BRACKET, elbow supporting
22	013058	4	CAPSCREW, 3/8"NC x 1-1/4"
	904206	4	LOCKWASHER, 3/8"
	044973	4	WASHER, plain
23	642686	1	BAFFLE, oil tank (Effective with tractor #6448)
24	631267	1	GASKET, elbow to oil tank
25	634133	1	TANK, oil (Used prior to tractor #6448)
	641485	1	TANK, oil (Effective with tractor #6448)
	915739	1	PLUG, pipe, sq.-socket, 3/8"NPT
26	035250	1	PLUG, oil drain
27	035249	1	GASKET, oil drain plug

(Continued)


ENGINE CLUTCH OILING SYSTEM (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
28	034265	1	CAP, oil level gauge
29	631280	1	GAUGE, oil level
30	089814	1	PLUG, oil filler
31	034269	1	GASKET, oil filler plug
32	633952	1	TUBE, oil filler (Used prior to tractor #6448)
	643595	1	TUBE, oil filler (Effective with tractor #6448)
33	631285	1	HOSE, oil filler tube
	921912	2	CLAMP, 1-1/16" to 2" diam.
34	631286	1	ADAPTER, oil tank (Used prior to tractor #6448)
35	633910	1	CLIP, tube supporting
36	070469	1	CAPSCREW, 1/2"NF x 1-1/4"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
37	634449	1	HOSE ASSEMBLY, pump to heat exchanger (See HOSE PARTS)
	919615	1	CONNECTOR, flare type, 3/4" tube, 1/2"NPT male
38	044249	2	CAPSCREW, 3/8"NC x 1-1/8"
	904206	2	LOCKWASHER, 3/8"
39	622916	1	CLIP, pump discharge hose (1-1/16" diam., 17/32" bolt-hole) (Used prior to tractor #6971)
	644612	1	CLIP, pump discharge hose (1-3/16" diam., 17/32" bolt-hole) (Effective with tractor #6971)
	911035	1	NUT, jam, 1/2"NC
	904208	1	LOCKWASHER, 1/2"
	910244	1	WASHER, plain, SAE std., 1/2"
40	621451	1	CLIP, pump discharge hose (1-1/16" diam., 13/32" bolt-hole) (Used prior to tractor #6971)
	644612	1	CLIP, pump discharge hose (1-3/16" diam., 17/32" bolt-hole) (Effective with tractor #6971)
41	634673	1	HOSE ASSEMBLY, heat exchanger to filter (See HOSE PARTS)
42	919342	1	CONNECTOR, flare type, 3/4" tube 3/4"NPT male
	044249	1	CAPSCREW, 3/8"NC x 1-1/8"
43	013058	1	CAPSCREW, 3/8"NC x 1-1/4"
	911115	1	WASHER, plain, SAE std., 3/8"
	904206	2	LOCKWASHER, 3/8"
44	634661	2	GASKET, hose flange
45	095869	2	CLIP, hose supporting (1-1/4" diam.)(Used prior to tractor #6971)
	632547	2	CLIP, hose supporting (1-1/2" diam.)(Effective with tractor #6971)
46	035525	1	CAPSCREW, 1/2"NF x 1-3/8"
	904208	1	LOCKWASHER, 1/2"
	910244	1	WASHER, plain, SAE std., 1/2"
47	609264	1	HOSE, oil return elbow (Effective with tractor #6448)
	921914	4	CLAMP, hose, 2-5/16" to 3-1/4" diam.
48	642685	1	ELBOW, oil tank to flywheel housing (Effective with tractor #6448)
49	035733	3	CAPSCREW, 1/2"NC x 1-3/8"
50	4255335	1	BOLT, self-locking, 1/2"NC x 2"
51	659465	1	BOLT, self-locking, 1/2"NC x 1-7/8"
	904208	3	LOCKWASHER, 1/2"
52	640636	1	GASKET, oil return elbow (Effective with tractor #6448)

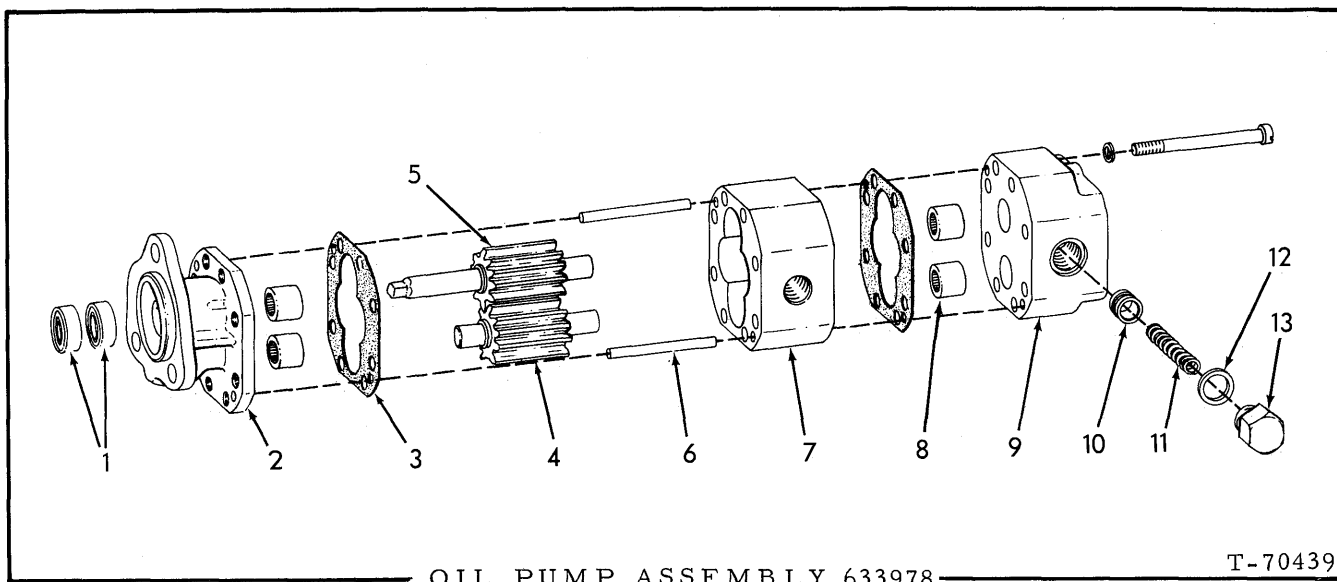

USAGE: Model HD16D. See page 133

ITEM	PART NO.	QTY.	DESCRIPTION
1	4047783	2	SEAL, oil
2	-----	1	STATOR (Not serviced separately)
3	637709	2	GASKET, pump housing
4	638321	1	SHAFT ASSEMBLY, idler (Includes gear. Serviced only as a unit)
5	638320	1	SHAFT ASSEMBLY, driving (Includes gear. Serviced only as a unit)
6	4048000	4	PIN, dowel, pump housing
7	-----	1	HOUSING, gear (Not serviced separately)
8	077241	4	BEARING, needle
9	-----	1	CAP, end (Not serviced separately)
	907620	8	SCREW, machine, fil-hd., 1/4"NC x 2-3/4"
	904204	8	LOCKWASHER, 1/4"
10	623835	1	PLUNGER, pressure relief valve
11	623838	1	SPRING, pressure relief valve
12	623837	1	GASKET, pressure relief valve cap
13	623836	1	CAP, pressure relief valve

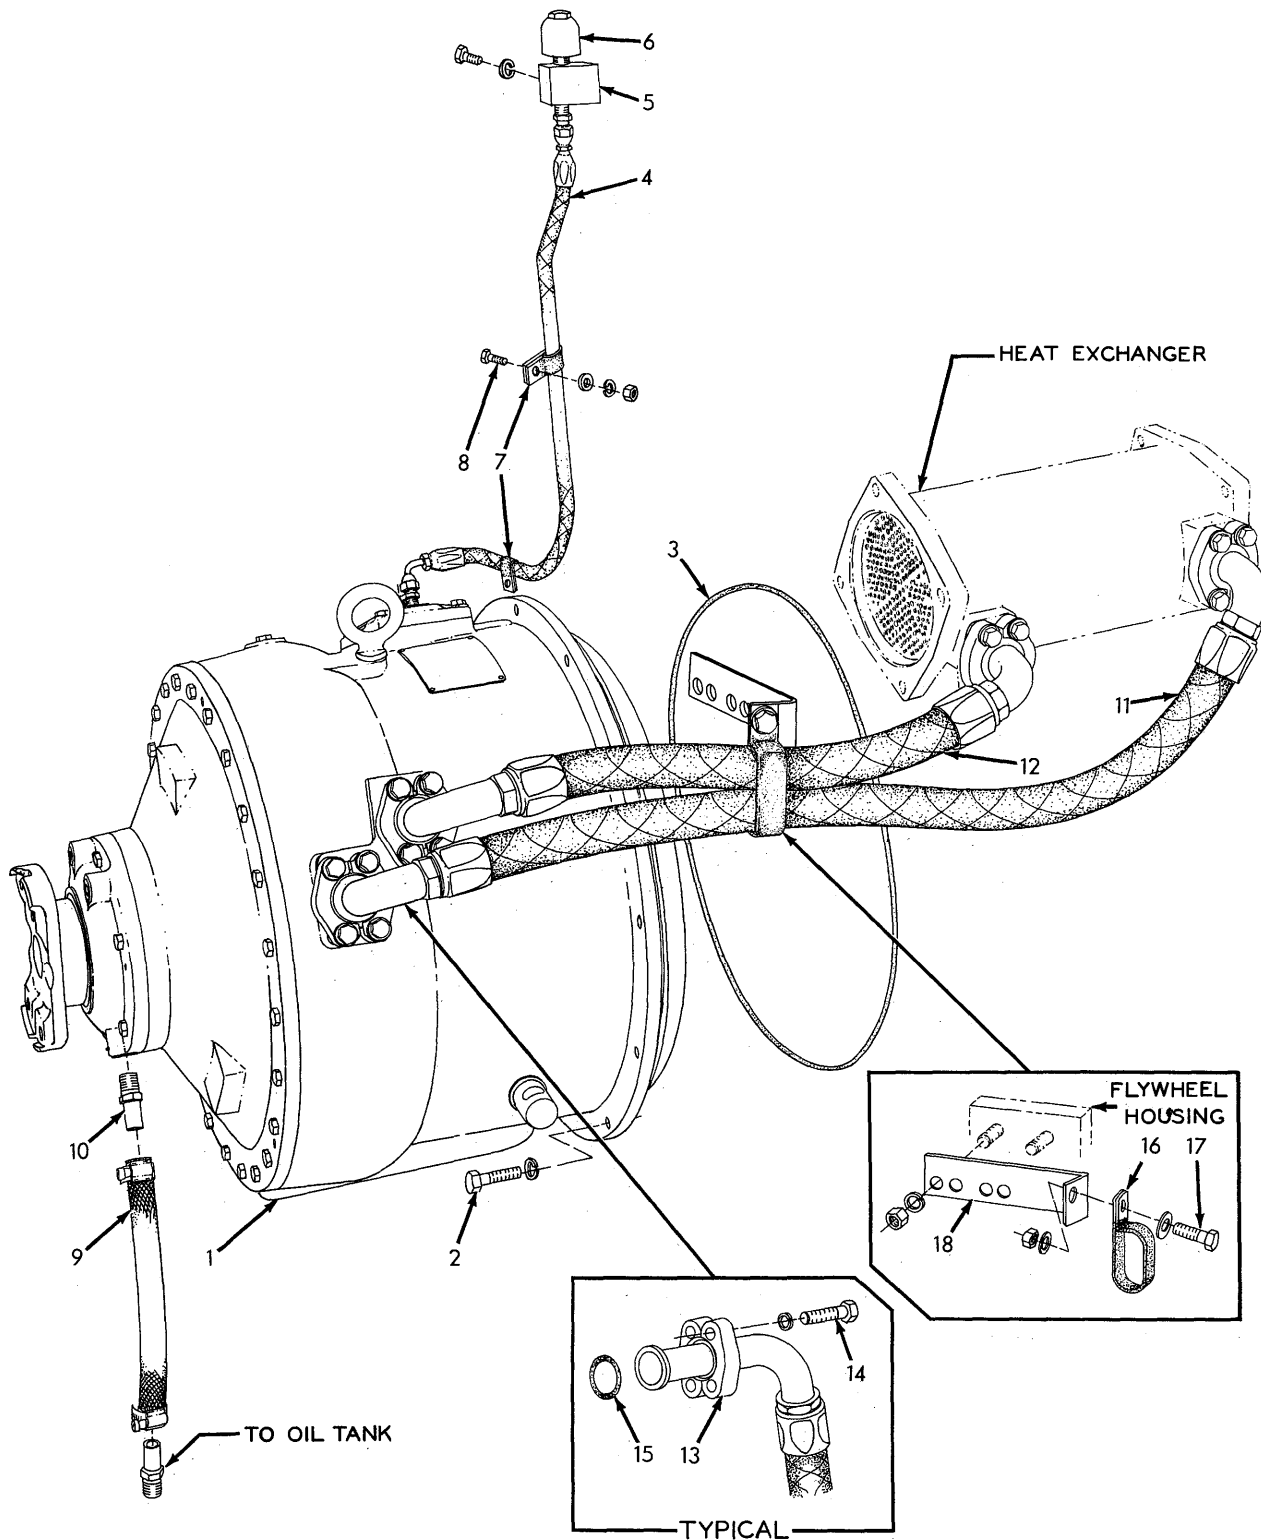


TORQUE CONVERTER (Model HD16DC)

T-38147


TORQUE CONVERTER

USAGE: Model HD16DC


ITEM	PART NO.	QTY.	DESCRIPTION
1	630796	1	CONVERTER ASSEMBLY, torque (See page 139 for parts. Also includes engine clutch throwout mechanism)
	040011	11	CAPSCREW, 7/16"NC x 1-1/2"
2	921510	1	CAPSCREW, Nylok, 7/16"NC x 1-1/4"
	904207	12	LOCKWASHER, 7/16"
3	621186	1	O-RING, torque converter to flywheel housing
4	645240	1	HOSE, breather (See HOSE PARTS)
	919062	2	CONNECTOR, flare type, 3/8" tube, 1/4"NPT male
5	629721	1	BLOCK, breather
	070467	1	CAPSCREW, 1/2"NF x 1"
	904208	1	LOCKWASHER, 1/2"
6	050748	1	BREATHER, engine clutch compartment
7	094422	2	CLIP, supporting, breather hose (5/8" diam.)(Used prior to tractor #6967)
	621304	2	CLIP, supporting, breather hose (3/4" diam.)(Effective with tractor #6967)
8	035167	1	CAPSCREW, 3/8"NF x 7/8"
	911115	1	WASHER, plain, SAE std., 3/8"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
9	631284	1	HOSE, seal drain
	921911	2	CLAMP, hose, 11/16" to 1-1/4" diam.
10	631288	2	ADAPTER, drain hose
11	646329	1	HOSE, oil discharge (See HOSE PARTS)
12	646328	1	HOSE, oil return (See HOSE PARTS)
13	921117	8	FLANGE, hose attaching (half only)
14	041250	16	CAPSCREW, 7/16"NC x 1-1/4"
	904207	16	LOCKWASHER, 7/16"
15	923664	4	O-RING, hose flange
16	631289	1	CLIP, hose supporting (For two 1-1/2" diam. lines)(Used prior to tractor #6967)
	645093	1	CLIP, hose supporting (For two 1-3/4" diam. lines)(Effective with tractor #6967)
17	070467	1	CAPSCREW, 1/2"NF x 1"
	910244	1	WASHER, plain, SAE std., 1/2"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
18	631274	1	ANGLE, hose supporting
	904208	2	LOCKWASHER, 1/2"
	911035	2	NUT, jam, 1/2"NC

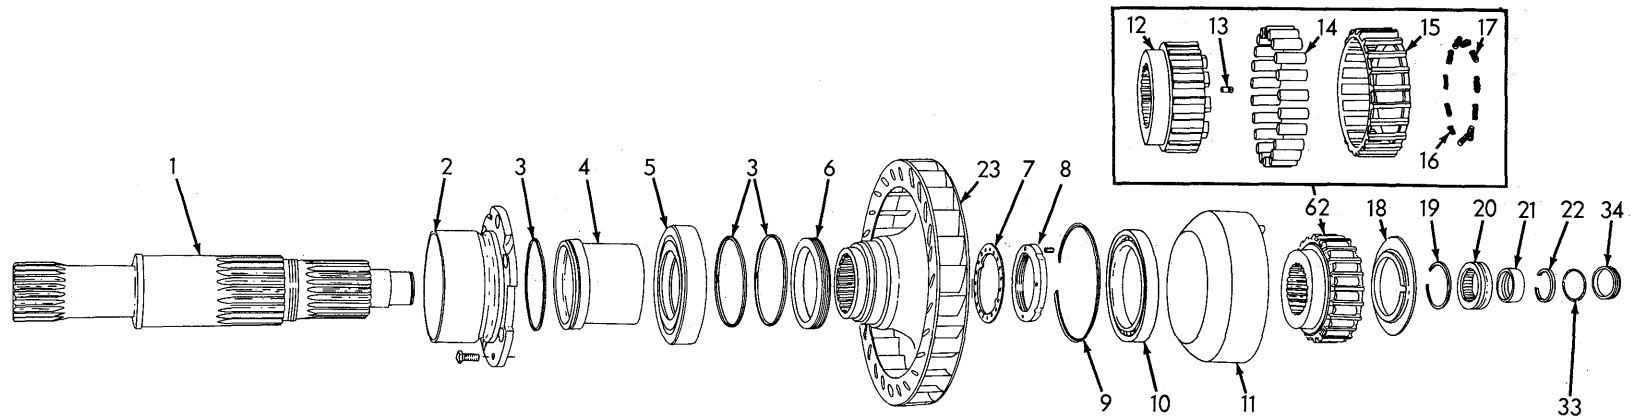

INPUT SHAFT AND IMPELLER WHEEL

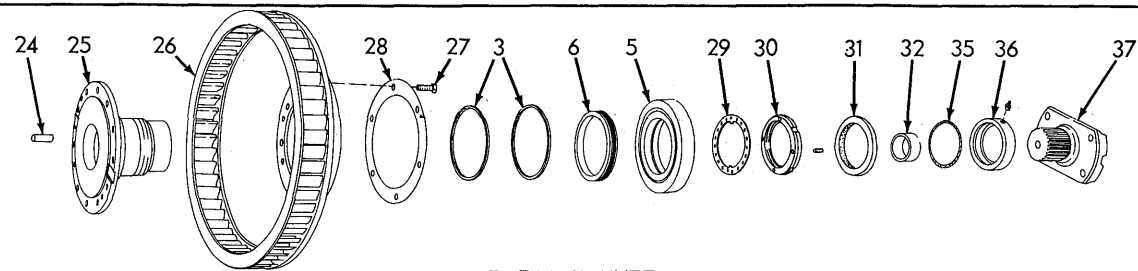

TURBINE WHEEL

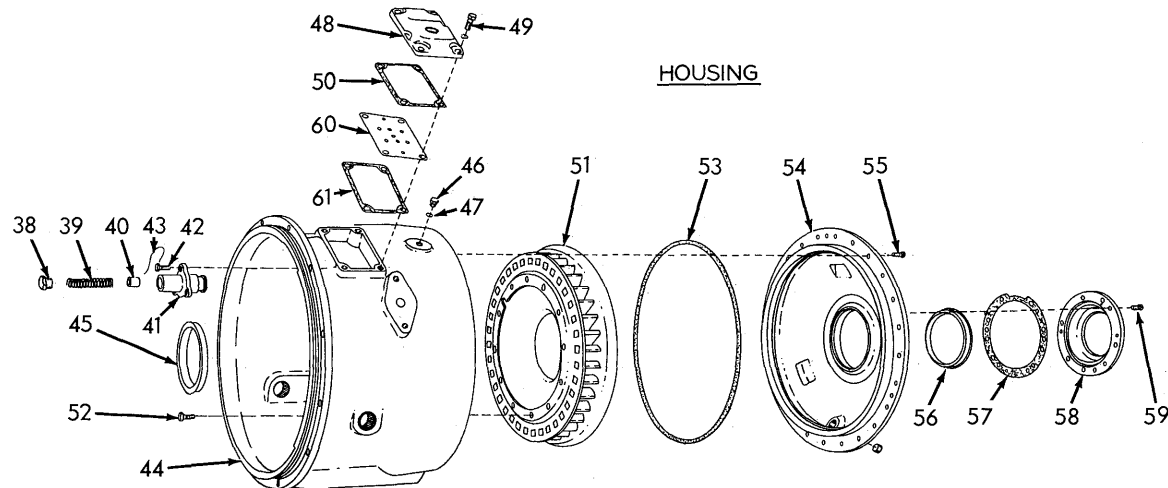

HOUSING

TORQUE CONVERTER ASSEMBLY 630796 (Model HD16DC)

T-39344

TORQUE CONVERTER ASSEMBLY 630796

USAGE: Model HD16DC. See page 137

ITEM	PART NO.	QTY.	DESCRIPTION
1	632634	1	SHAFT, input
2	632625	1	SUPPORT, clutch shifting collar
	903775	7	CAPSCREW, 3/8"NC x 7/8"
3	{ 632610	5	RING, sealing (3/32" wide)(Used prior to converter #206320)
	{ 640722	5	RING, sealing (1/8" wide)(Effective with converter #206320)
4	{ 632622	1	CARRIER, front seal ring (3/32" groove)(Used prior to converter #206320)
	{ 644403	1	CARRIER, front seal ring (1/8" groove)(Effective with converter #206320)
5	632583	2	BEARING, ball, input shaft and turbine wheel flange
6	{ 632586	2	CARRIER, seal ring (3/32" grooves)(Used prior to converter #206320)
	{ 640096	2	CARRIER, seal ring (1/8" grooves)(Effective with converter #206320)
7	632581	1	WASHER, locking, impeller retaining nut
8	632582	1	NUT, impeller retaining
	921401	1	SETSCREW, hex socket, half-dog-pt., 5/16"NC x 3/4"
9	632590	1	RING, snap, bearing retaining
10	632584	1	BEARING, ball, over-running clutch cam
11	632652	1	RACE, over-running clutch
12	-----	1	□CAM, over-running clutch
13	634342	1	□PIN, driving, thrust washer
14	-----	22	□ROLLER, over-running clutch
15	-----	1	□CAGE, clutch rollers
16	-----	2	□SPRING, cage return
17	-----	9	□SPRING, bumper
18	632606	1	WASHER, thrust
19	632588	1	RING, snap, bearing retaining
20	632591	1	ROLLER ASSEMBLY, input shaft rear bearing
21	632585	1	RACE, inner, input shaft rear bearing
22	632601	1	RING, snap, input shaft
23	638849	1	WHEEL, impeller
24	632600	6	PIN, dowel, over-running clutch race

□Indicates component of item 62
(Continued)

TORQUE CONVERTER ASSEMBLY 630796 (Continued)


ITEM	PART NO.	QTY.	DESCRIPTION
25	632635	1	FLANGE, turbine wheel
26	632632	1	WHEEL, turbine
27	012992	6	CAPSCREW, 3/8"NF x 1-1/4"
28	632595	1	WASHER, dowel pin retaining
29	624816	1	WASHER, locking, bearing retaining nut
30	624815	1	NUT, bearing retaining
	921401	1	SETSCREW, hex-socket, half-dog-pt., 5/16"NC x 3/4"
31	632611	1	SEAL, oil, rear
32	632589	1	SLEEVE, wear, turbine wheel flange
33	923814	1	O-RING, turbine wheel flange
34	632620	1	CARRIER, o-ring
35	923585	1	O-RING, drive shaft yoke
36	632621	1	SLEEVE, drive shaft yoke
	914465	1	FITTING, lubricating, straight, 1/8"NPT
37	638848	1	YOKE ASSEMBLY, drive shaft (Includes item 36)
38	632605	1	PLUG, relief valve
39	632619	1	SPRING, relief valve
40	632609	1	PISTON, relief valve
41	632618	1	BODY, relief valve
42	069010	3	CAPSCREW, drilled-hd., 3/8"NC x 1"
43	023633	1	WIRE, locking, 1/16" x 12"
44	632607	1	HOUSING ASSEMBLY (Includes item 45)
45	632592	1	SLEEVE, wear, torque converter housing
46	632615	1	PLUG, hole
47	921884	1	O-RING, hole plug
			} Early units only
48	628572	1	COVER, housing
49	035439	4	CAPSCREW, 3/8"NC x 1"
	904206	4	LOCKWASHER, 3/8"
50	628571	1	GASKET, housing cover
51	632624	1	WHEEL ASSEMBLY, guide (stationary)(Serviced only as a unit)
52	650399	11	CAPSCREW, self-locking, 3/8"NF x 7/8"
53	632587	1	GASKET, end plate
54	632623	1	PLATE ASSEMBLY, rear end (Includes item 56)
	909091	1	PLUG, pipe, hex-socket, 3/4"NPT
55	013058	24	CAPSCREW, 3/8"NC x 1-1/4"
56	632592	1	SLEEVE, wear, rear end plate

(Continued)

TORQUE CONVERTER ASSEMBLY 630796 (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
57	052168	1	GASKET, rear bearing retainer
58	632638	1	RETAINER, rear bearing
59	013058	6	CAPSCREW, 3/8"NC x 1-1/4"
60	630175	1	BAFFLE, oil
61	628571	1	GASKET, oil baffle
62	638352	1	CLUTCH KIT, over-running, torque converter (Consists of items 12 thru 17)

Not included in Complete Assembly

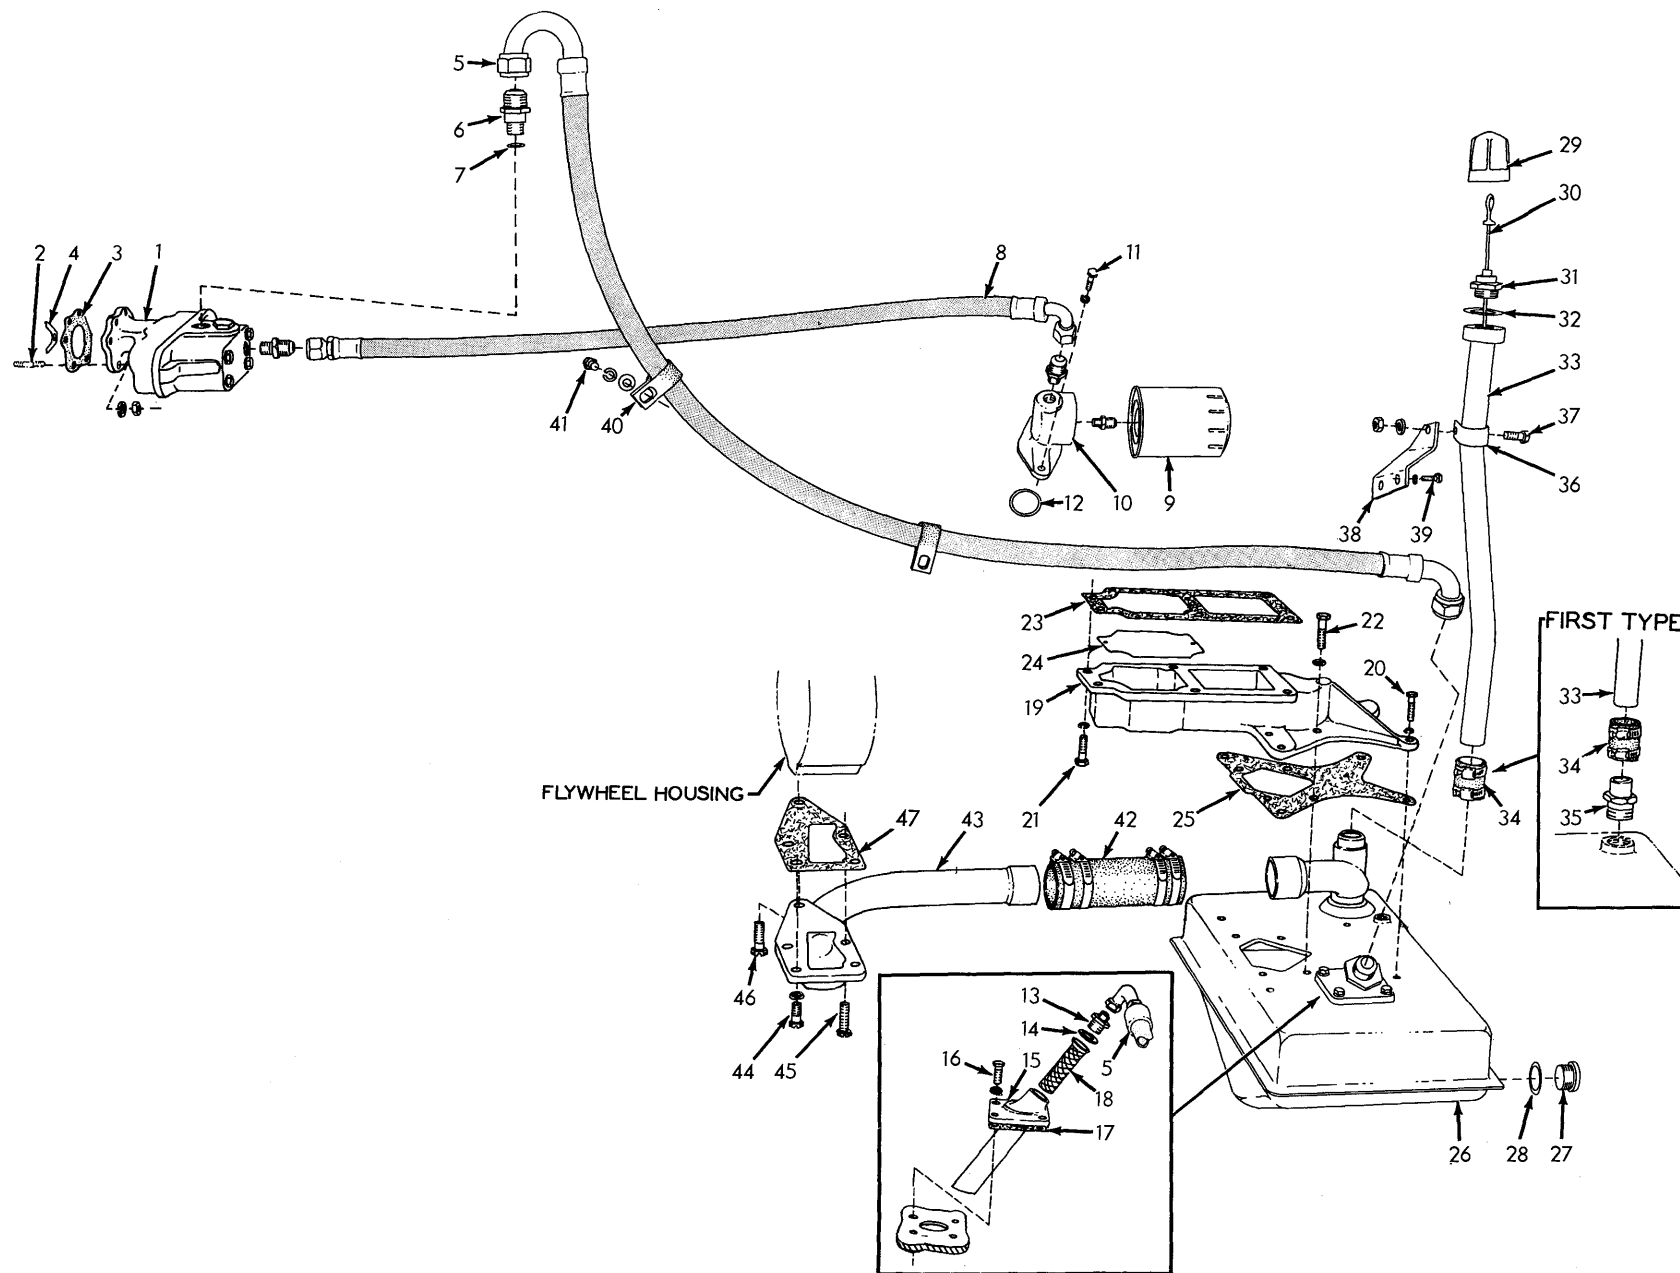

T-38149

TORQUE CONVERTER OIL SUPPLY


USAGE: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
1	631155	1	PUMP ASSEMBLY, oil (See page 145 for parts)
2	-----	5	STUD (See ACCESSORY DRIVE)
	904206	5	LOCKWASHER, 3/8"
	911041	5	NUT, 3/8"NF
3	4386826	1	GASKET, oil pump
4	4377121	1	FORK, pump coupling
5	646330	1	HOSE, tank to pump (See HOSE PARTS)
6	631375	1	ADAPTER, oil pump
7	923379	1	O-RING, hose adapter
8	646331	1	HOSE, pump to filter (See HOSE PARTS)
	919615	1	CONNECTOR, flare type, 3/4" tube, 1/2"NPT male
	919342	1	CONNECTOR, flare type, 3/4" tube, 3/4"NPT male
9	4513411	1	FILTER ASSEMBLY, oil (Serviced only as a unit)
	919063	1	CONNECTOR, flare type, 1/2" tube, 3/8"NPT male
10	631268	1	HEAD, oil filter
11	041250	2	CAPSCREW, 7/16"NC x 1-1/8"
	904207	2	LOCKWASHER, 7/16"
12	619801	1	RING, sealing, filter head
13	631283	1	ADAPTER, oil tank cover
14	035249	1	GASKET, oil tank adapter
15	631271	1	COVER, oil tank
16	070960	4	CAPSCREW, 3/8"NC x 1-1/2"
	904206	4	LOCKWASHER, 3/8"
17	631287	1	GASKET, oil tank cover
18	621039	1	SCREEN, oil
19	631524	1	ELBOW, converter to oil tank
20	070960	4	CAPSCREW, 3/8"NC x 1-1/2"
	904206	4	LOCKWASHER, 3/8"
21	035190	6	CAPSCREW, 1/2"NC x 1-1/2"
22	035236	4	CAPSCREW, 1/2"NC x 1-3/4"
	904208	10	LOCKWASHER, 1/2"
23	642687	1	GASKET, converter to elbow
24	642686	1	BAFFLE, oil tank (Effective with tractor #6176)
25	631267	1	GASKET, elbow to oil tank
26	{ 634133	1	TANK, oil (Used prior to tractor #6176)
	{ 641485	1	TANK, oil (Effective with tractor #6176)
27	035250	1	PLUG, oil drain

(Continued)

TORQUE CONVERTER OIL SUPPLY (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
28	035249	1	GASKET, oil drain plug
29	034265	1	CAP, oil level gauge
30	631280	1	GAUGE, oil level
31	089814	1	PLUG, oil filler
32	034269	1	GASKET, oil filler plug
33	631277	1	TUBE, oil filler (Used prior to tractor #6176)
	642680	1	TUBE, oil filler (Effective with tractor #6176)
34	631285	1	HOSE, oil filler tube
	921912	2	CLAMP, 1-1/16" to 2" diam.
35	631286	1	ADAPTER, oil tank (Used prior to tractor #6176)
36	053096	1	CLIP, tube supporting
37	070469	1	CAPSCREW, 1/2"NF x 1-1/4"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
38	631278	1	ANGLE, tube supporting
39	070960	2	CAPSCREW, 3/8"NC x 1-1/2"
	904206	2	LOCKWASHER, 3/8"
40	095869	2	CLIP, hose supporting (1-1/4" diam.)(Used prior to tractor #6967)
	632547	2	CLIP, hose supporting (1-1/2" diam.)(Effective with tractor #6967)
41	035525	1	CAPSCREW, 1/2"NF x 1-1/8"
	904208	1	LOCKWASHER, 1/2"
	910244	1	WASHER, plain, SAE std., 1/2"
42	609264	1	HOSE, oil return elbow (Effective with tractor #6176)
	921914	4	CLAMP, hose
43	642685	1	ELBOW, oil tank to flywheel housing (Effective with tractor #6176)
44	035733	3	CAPSCREW, 1/2"NC x 1-3/8"
45	4255335	1	BOLT, self-locking, 1/2"NC x 2"
46	659465	1	BOLT, self-locking, 1/2"NC x 1-7/8"
	904208	3	LOCKWASHER, 1/2"
47	640636	1	GASKET, oil return elbow (Effective with tractor #6176)

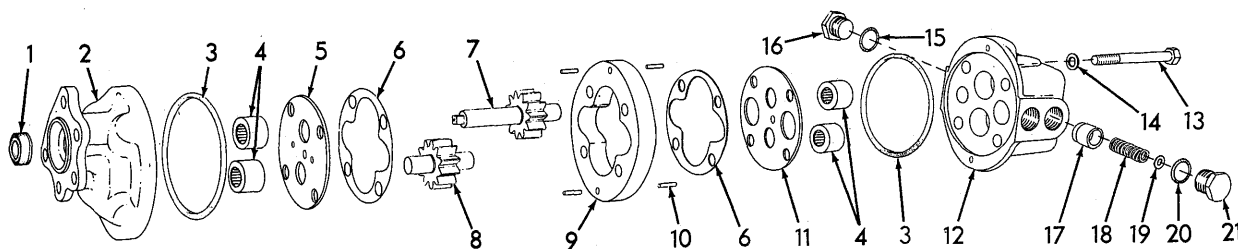


T-38150

OIL PUMP ASSEMBLY 631155

USAGE: Model HD16DC. See page 143

ITEM	PART NO.	QTY.	DESCRIPTION
1	646851	1	SEAL, pump shaft
2	-----	1	ADAPTER (Not serviced separately)
3	923587	2	O-RING, adapter
4	3015654	4	BEARING, needle
5	3015656	1	PLATE, wear, front
6	3015666	-	GASKET, shimming (.001" thick. Use as req'd)
	3015667	-	GASKET, shimming (.002" thick. Use as req'd)
7	634646	1	SHAFT ASSEMBLY, drive (Includes gear and snap rings. Serviced only as a unit)
8	634425	1	SHAFT ASSEMBLY, driven (Includes gear and rings. Serviced only as a unit)
9	-----	1	HOUSING, pump (Not serviced separately)
10	3015658	4	PIN, dowel, pump housing (hollow)
11	3015657	1	PLATE, wear, rear
12	-----	1	COVER, rear (Not serviced separately)
13	638868	4	CAPSCREW, 7/16"NF x 4"
14	078206	4	WASHER, plain (copper)
15	923574	1	O-RING, rear cover cap
16	634424	1	CAP, rear cover
17	3018397	1	PLUNGER, pressure relief valve
18	641567	1	SPRING, pressure relief valve plunger
19	634421	-	WASHER, shimming (Use as req'd)
20	923379	1	O-RING, pressure relief valve cap
21	634426	1	CAP, pressure relief valve

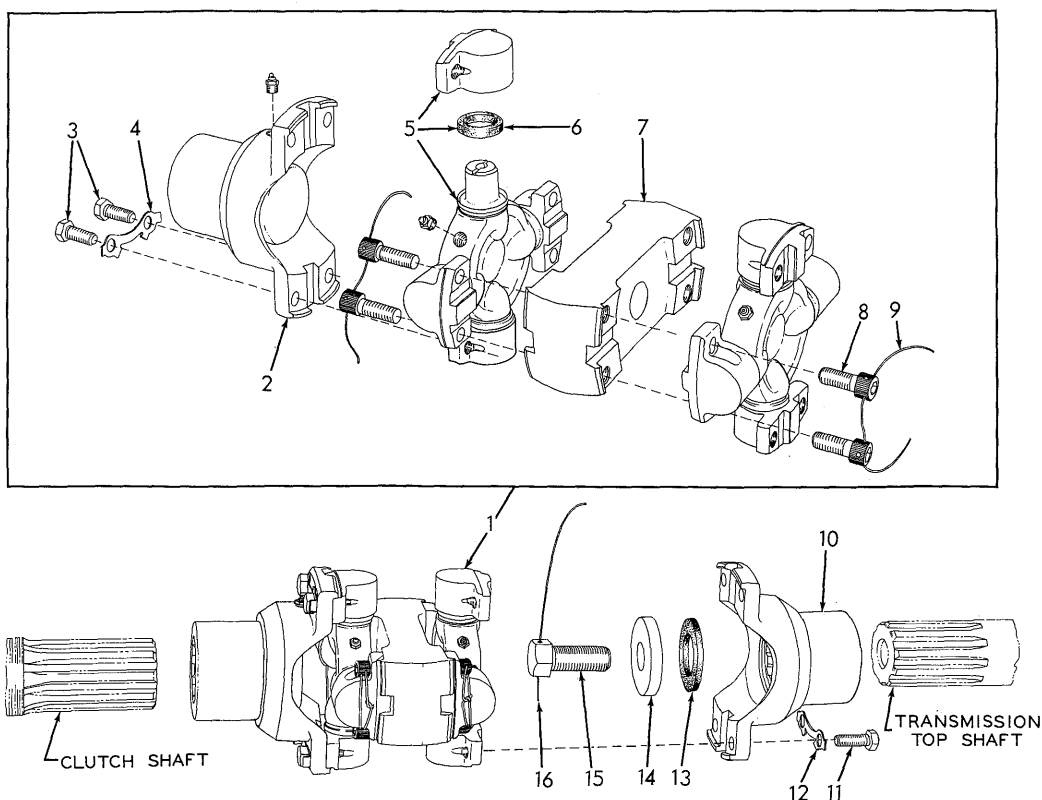


UNIVERSAL JOINT

T-73630

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	632556	1	JOINT ASSEMBLY, universal (Consists of items 2 thru 9)
2	634287	1	YOKE ASSEMBLY, front (Includes FITTING 914687)
	914687	1	FITTING, lubricating, straight, 1/4"NF
3	058739	4	CAPSCREW, 7/16"NF x 1-1/16"
4	058741	2	LOCK, capscREW
5	629943	2	SPIDER ASSEMBLY (Includes bearings, item 6 and FITTING indented below)(Serviced only as a unit)
	914687	2	FITTING, lubricating, straight, 1/4"NF
6	084351	8	WASHER, sealing (cork)
7	634276	1	COUPLING, center
8	634277	8	CAPSCREW, coupling
9	023756	4	WIRE, locking, 1/16" x 26"
10	632559	1	YOKE, rear
11	058739	4	CAPSCREW, 7/16"NF x 1-1/16"
12	058741	2	LOCK, capscREW
13	059813	1	SEAL, rear yoke (rubber)
14	078314	1	WASHER, rear yoke retaining
15	075950	1	CAPSCREW, rear yoke retaining
16	023633	1	WIRE, locking, 1/16" x 12"

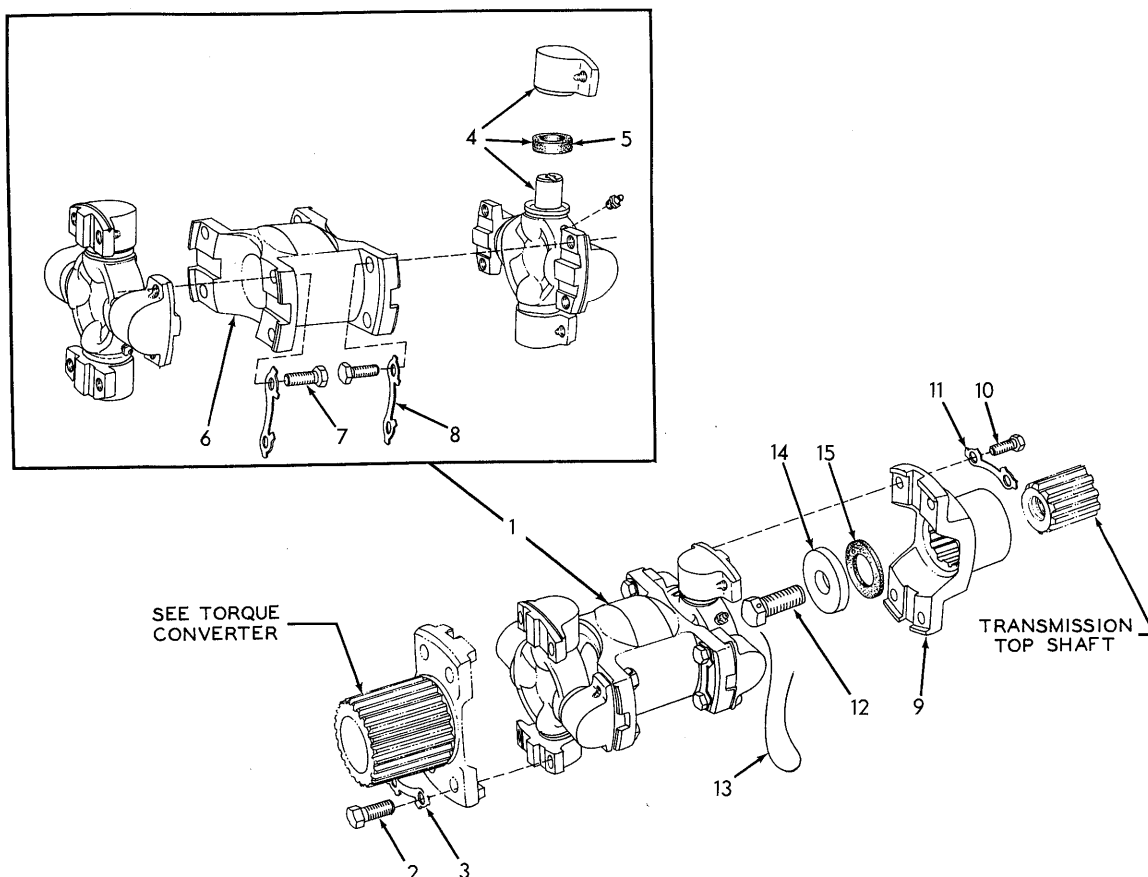


T-73631

UNIVERSAL JOINT

USAGE: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
1	631047	1	JOINT ASSEMBLY, universal (Consists of items 4 thru 8)
2	630862	4	CAPSCREW, drilled-hd., 7/16"NF x 1-3/8"
3	058741	2	LOCK, capscREW
4	083616	2	SPIDER ASSEMBLY (Includes bearings, item 5 and FITTING indented below) (Serviced only as a unit)
	914687	2	FITTING, lubricating, straight, 1/4"NF
5	084351	8	WASHER, sealing, spider bearing (cork)
6	631046	1	YOKE, center
7	058739	8	CAPSCREW, 7/16"NF x 1-1/16"
8	058741	4	LOCK, capscREW
9	075905	1	YOKE, rear
10	058739	4	CAPSCREW, 7/16"NF x 1-1/16"
11	058741	2	LOCK, capscREW
12	075950	1	CAPSCREW, rear yoke retaining
13	023633	1	WIRE, locking, 1/16" x 12"
14	078314	1	WASHER, rear yoke retaining
15	059813	1	SEAL, rear yoke (rubber)

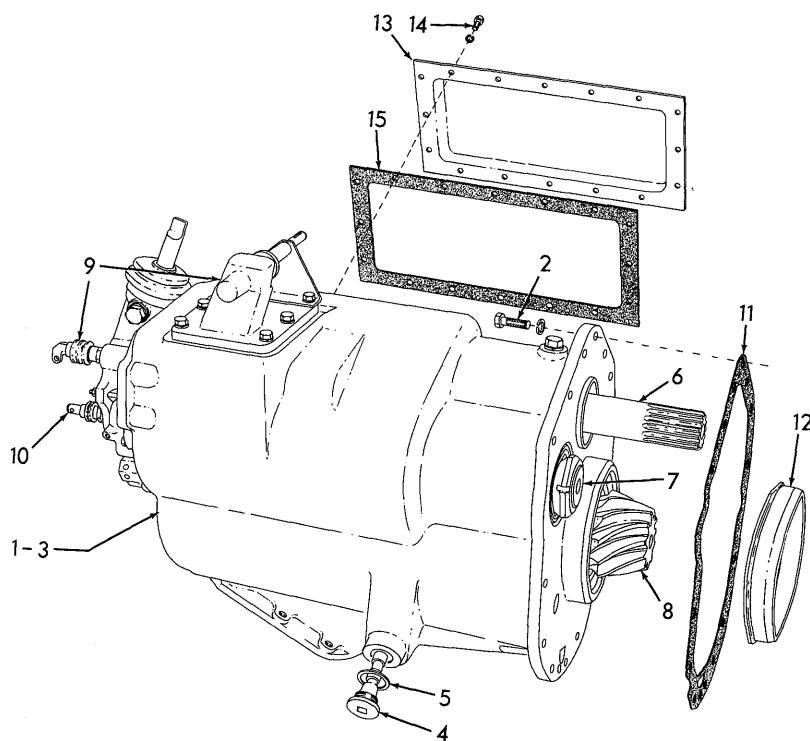


TRANSMISSION

T-73632

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	631530	1	TRANSMISSION ASSEMBLY (Includes items 3 thru 10)
2	035018	14	CAPSCREW, 1/2"NF x 1-1/2"
	904208	14	LOCKWASHER, 1/2"
3	630939	1	CASE, transmission
4	067543	1	PLUG, drain
5	035249	1	GASKET, drain plug
6	-----	-	See TRANSMISSION TOP SHAFT
7	-----	-	See TRANSMISSION INTERMEDIATE SHAFT
8	-----	-	See TRANSMISSION PINION SHAFT
9	-----	-	See FORWARD HIGH-LOW GEAR SHIFT
10	-----	-	See SPEED SELECTION GEAR SHIFT
11	623618	1	GASKET, case to steering clutch housing
12	630290	1	RING, adapting
13	631419	1	COVER, side
14	035439	16	CAPSCREW, 3/8"NC x 1"
	904206	16	LOCKWASHER, 3/8"
15	069679	1	GASKET, side cover

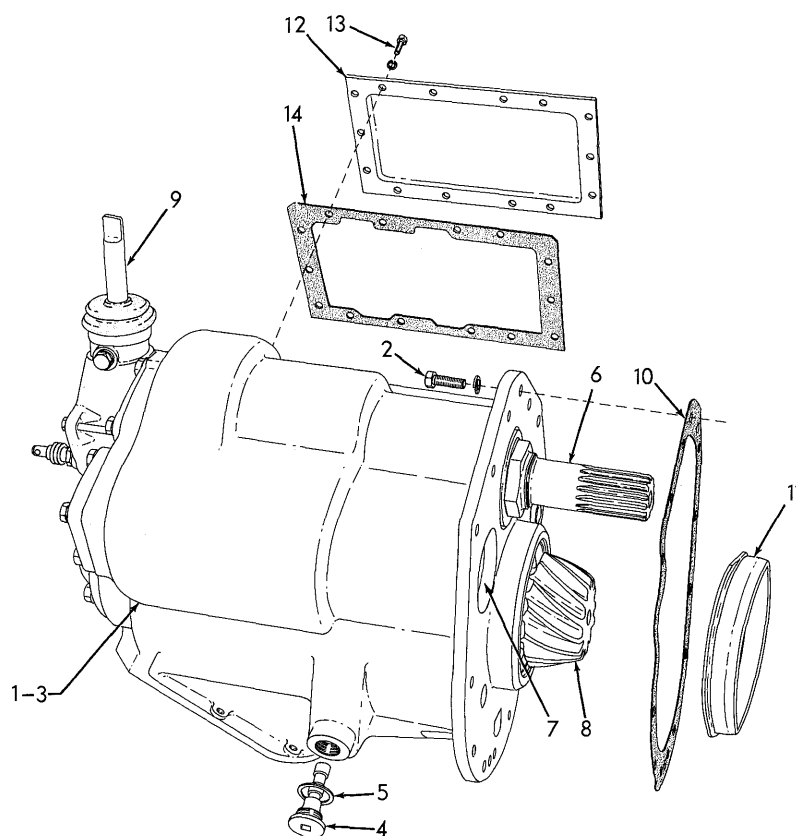


TRANSMISSION

T-73633


USAGF: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
1	633700	1	TRANSMISSION ASSEMBLY (Includes items 3 thru 9)
2	035018	14	CAPSCREW, 1/2"NF x 1-1/2"
	904208	14	LOCKWASHER, 1/2"
3	630938	1	CASE, transmission
4	067543	1	PLUG, drain
5	035249	1	GASKET, drain plug
6	-----	-	See TRANSMISSION TOP SHAFT
7	-----	-	See TRANSMISSION REVERSE SHAFT
8	-----	-	See TRANSMISSION PINION SHAFT
9	-----	-	See GEAR SHIFT
10	623618	1	GASKET, case to steering clutch housing
11	630290	1	RING, adapting
12	631418	1	COVER, side
13	035439	14	CAPSCREW, 3/8"NC x 1"
	904206	14	LOCKWASHER, 3/8"
14	075391	1	GASKET, side cover

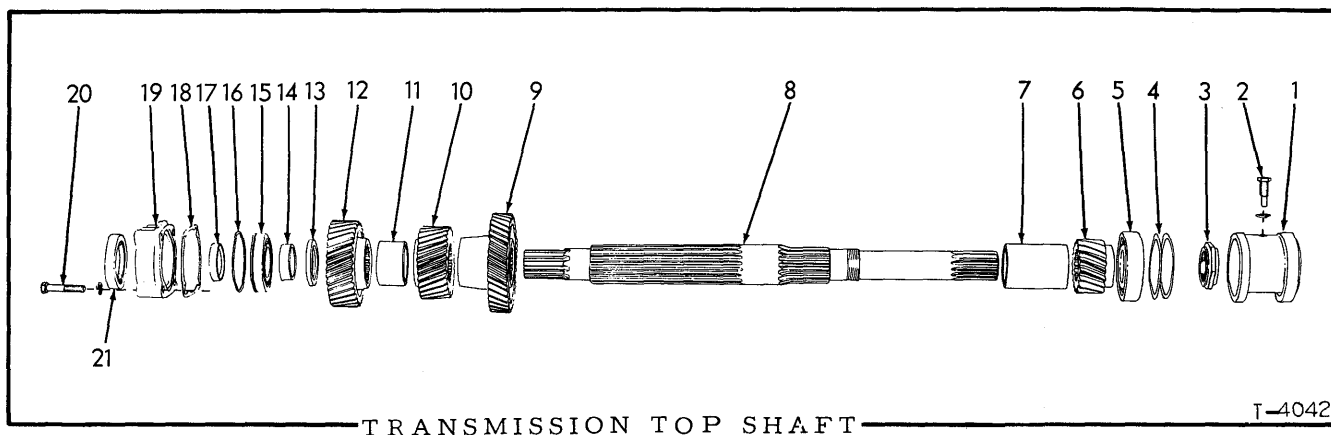


USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	069369	1	SLEEVE, rear bearing
2	621330	1	SCREW, sleeve locking
	904209	1	LOCKWASHER, 5/8"
3	078864	1	NUT, top shaft
4	069452	4	SHIM, bearing adjusting (.005" thick. Use as req'd)
5	069428	1	BEARING, ball, rear
6	073771	1	GEAR, 1st reverse (18 teeth)
7	069442	1	SLEEVE, spacing (4-1/8" long)
8	621680	1	SHAFT, top
9	069370	1	GEAR, 3rd reverse (40 teeth)
10	643059	1	GEAR, low range (30 teeth)
11	069443	1	SLEEVE, spacing (1-3/4" long)
12	069359	1	GEAR, high range and 2nd reverse (36 teeth)
13	069434	1	SPACER, high range and 2nd reverse gear (5/16" long)
14	069436	1	SLEEVE, spacing, front bearing
15	057281	1	BEARING, roller, front
16	042121	1	RING, snap, front bearing
17	069435	1	SPACER, front bearing (1/2" long)
18	069451	1	GASKET, front bearing retainer
19	098922	1	RETAINER, front bearing
20	028979	4	CAPSCREW, 1/2"NC x 2-1/2"
	904208	4	LOCKWASHER, 1/2"
21	629040	1	SEAL, oil, front bearing retainer

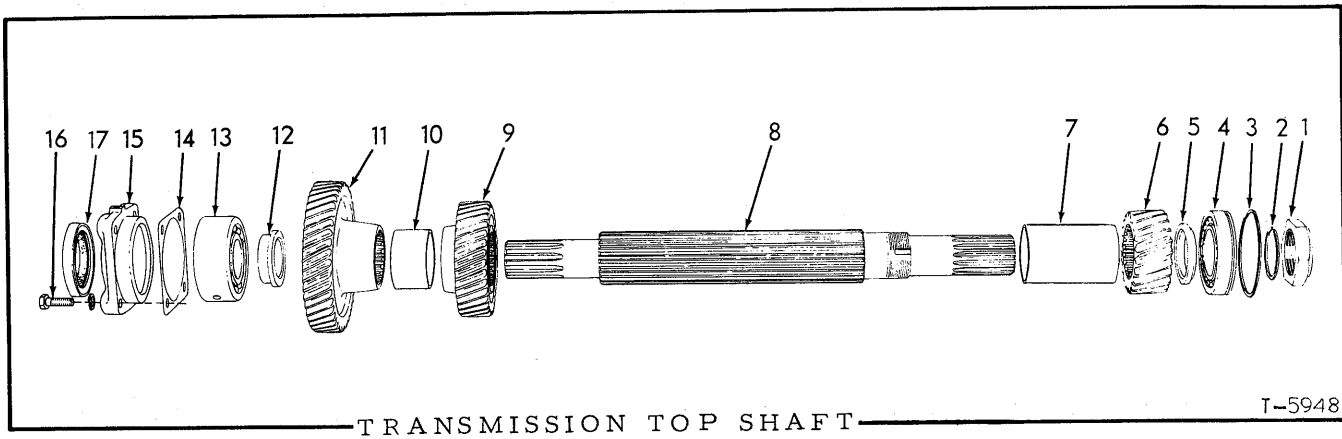

USAGE: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
1	078862	1	NUT
2	065512	1	RING, spacing, rear bearing
3	040831	1	RING, snap, rear bearing
4	058135	1	BEARING, roller, rear
5	074818	1	SPACER, rear bearing
6	073808	1	GEAR, 1st speed (22 teeth)
7	069444	1	SLEEVE, spacing (4-9/16" long)
8	621683	1	SHAFT
9	073733	1	GEAR, 2nd speed and reverse (36 teeth)
10	069443	1	SLEEVE, spacing (1-3/4" long)
11	074838	1	GEAR, 3rd speed (46 teeth)
12	093713	1	SPACER, front bearing
13	074822	1	BEARING, ball, front
14	074842	7	SHIM, front bearing retainer (.003" thick. Use as req'd)
15	629041	1	RETAINER, front bearing
16	035236	4	CAPSCREW, 1/2"NC x 1-3/4"
	904208	4	LOCKWASHER, 1/2"
17	629040	1	SEAL, oil, front bearing retainer

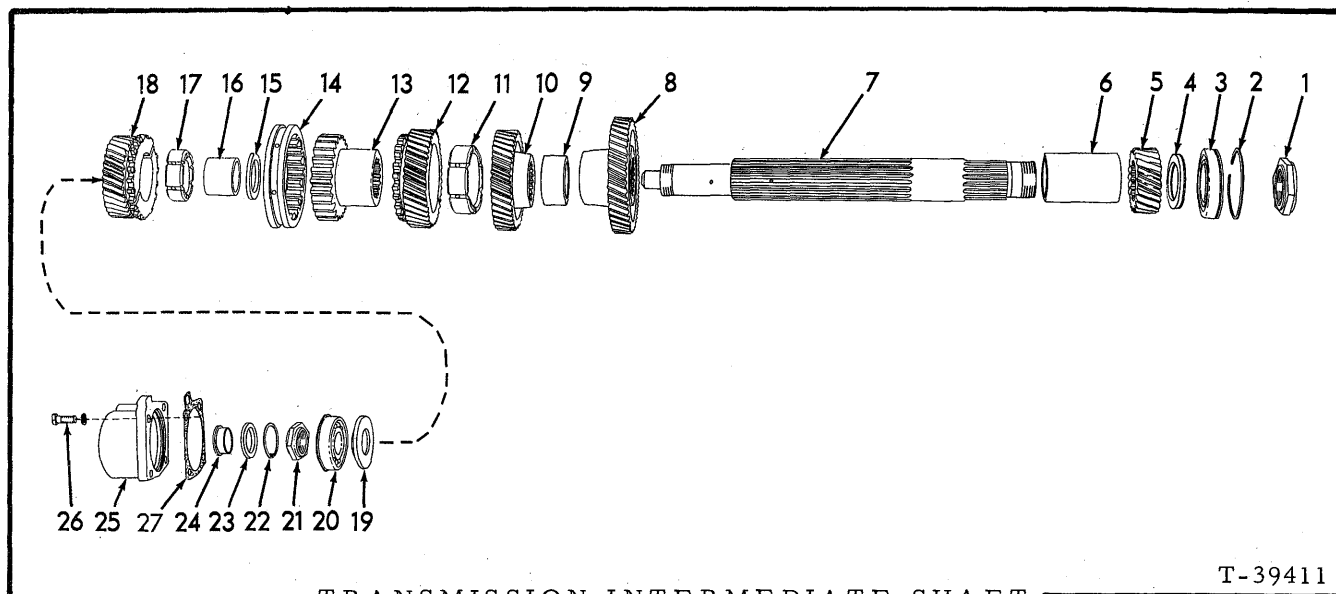


TRANSMISSION INTERMEDIATE SHAFT

T-39411

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	083478	1	NUT, rear
2	042121	1	RING, snap, rear bearing
3	083476	1	BEARING, roller, rear
4	083477	1	SPACER, rear bearing
5	083479	1	GEAR, 1st and 2nd speeds (19 teeth)
6	069442	1	SLEEVE, gear spacing (4-1/8" long)
7	099066	1	SHAFT, intermediate
8	069370	1	GEAR, 4th and 6th speeds (40 teeth)
9	069443	1	SLEEVE, gear spacing (1-3/4" long)
10	069378	1	GEAR, 3rd and 5th speeds (36 teeth)
11	623667	1	BUSHING, low range gear
12	069358	1	GEAR, low range (35 teeth)
13	069423	1	HUB, low range gear
14	099899	1	COLLAR, shifting (7/16" groove)(Used prior to tractor #7380)
	647321	1	COLLAR, shifting (5/8" groove)(Effective with tractor #7380)
15	069449	1	SPACER, high range gear bearing
16	069390	1	RACE, high range gear bearing
17	623335	1	BUSHING, high range gear
18	069357	1	GEAR, high range (28 teeth)
19	041017	1	WASHER, spacing, front bearing
20	042852	1	BEARING, ball, front (Includes snap ring)
21	078861	1	NUT, front
22	621446	1	RING, snap
23	621332	1	RING, oil sealing, outer
24	621333	1	RING, oil sealing, inner
25	623703	1	RETAINER, front bearing
26	035190	4	CAPSCREW, 1/2"NC x 1-1/2"
	904208	4	LOCKWASHER, 1/2"
27	629734	1	GASKET, bearing retainer

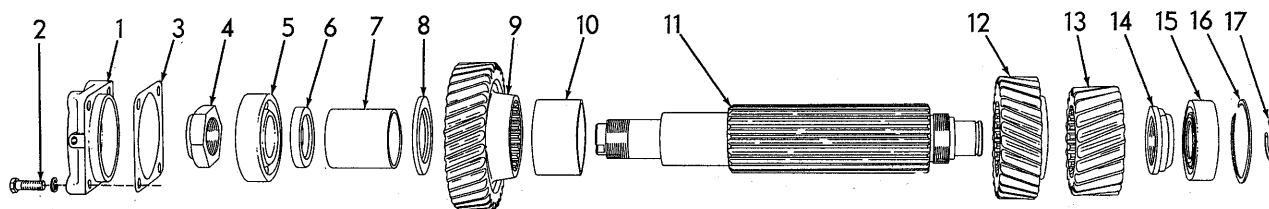


T-32076

TRANSMISSION REVERSE SHAFT

USAGE: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
1	623729	1	RETAINER, front bearing
2	035712	4	CAPSCREW, 1/2"NC x 2-1/4"
	904208	4	LOCKWASHER, 1/2"
3	074841	7	SHIM, adjusting (.003" thick. Use as required)
4	079234	1	NUT, front
5	090645	1	BEARING, ball, front
6	074817	1	SPACER, front bearing
7	074814	1	SLEEVE, gear retaining (2-1/2" long)
8	074815	1	WASHER, gear retaining
9	073733	1	GEAR, 2nd reverse (36 teeth)
10	069443	1	SLEEVE, gear spacing (1-3/4" long)
11	098958	1	SHAFT, reverse
12	073738	1	GEAR, reverse (28 teeth)
13	073808	1	GEAR, 1st reverse (22 teeth)
14	079256	1	NUT, rear
15	052049	1	BEARING, roller, rear
16	052374	1	RING, snap, rear bearing
17	052225	1	RING, snap, reverse shaft

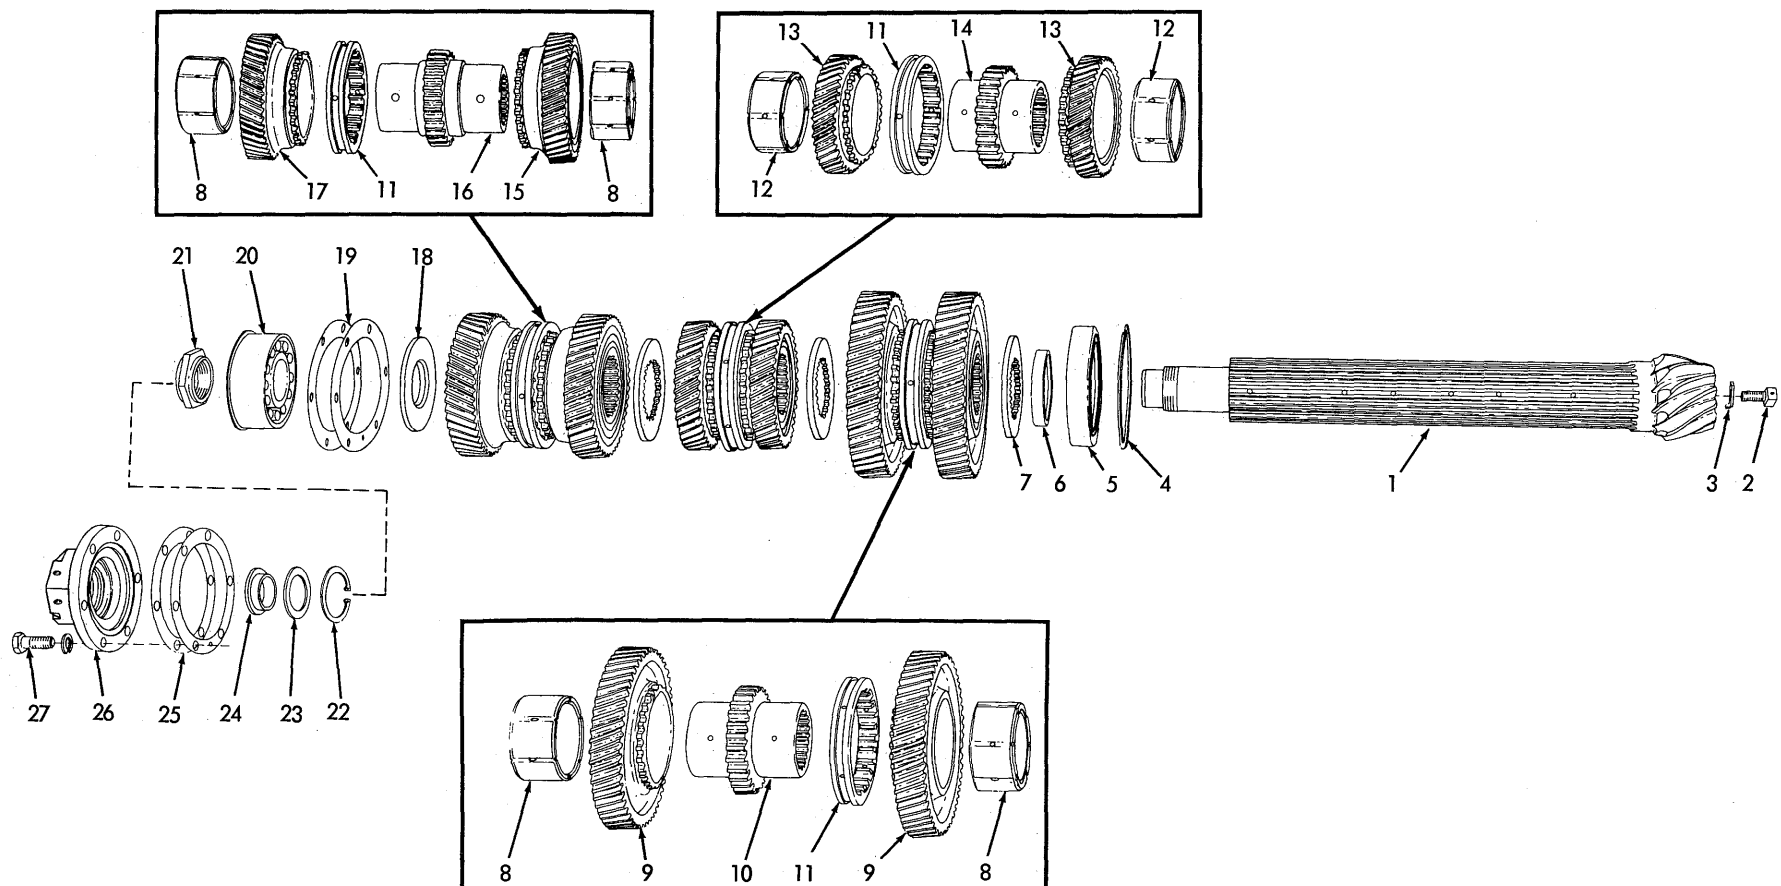


TRANSMISSION PINION SHAFT (Model HD16D)

T-30868

TRANSMISSION PINION SHAFT

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	099074	1	PINION, bevel (11 teeth)
2	098996	1	PLUG, pinion oil hole
3	098997	1	LOCK, pinion plug
			} Used prior to tractor #6553 excluding #6535 and #6547
4	059589	1	RING, snap, rear bearing
5	059328	1	BEARING, roller, rear
6	069427	1	SPACER, rear bearing
7	069386	3	WASHER, gear spacing
8	623334	4	BUSHING, pinion shaft gears (2-7/16" wide)
9	073777	2	GEAR, 1st reverse and 1st and 2nd speed (54 teeth)
10	098957	1	HUB, 1st reverse and 1st and 2nd speed gears
11	099898	3	COLLAR, shifting (7/16" groove)(Used prior to tractor #7496)
	650745	3	COLLAR, shifting (5/8" groove)(Effective with tractor #7469)
12	623337	2	BUSHING, pinion shaft gears (1-13/16" wide)
13	069377	2	GEAR, 3rd reverse and 4th and 6th speeds (41 teeth)
14	099073	1	HUB, 3rd reverse and 4th and 6th speed gears
15	069374	1	GEAR, 3rd and 5th speed (48 teeth)
16	099060	1	HUB, 2nd reverse and 3rd and 5th speed gears
17	649661	1	GEAR, 2nd reverse (48 teeth)
18	069425	1	WASHER, spacing, front bearing (5-1/8" O. D.)(Used prior to tractor #7527)
	649660	1	WASHER, spacing, front bearing (5-1/2" O. D.)(Effective with tractor #7527)
19	069447	4	SHIM, adjusting, pinion depth (.005" thick)
	069448	6	SHIM, adjusting, pinion depth (.010" thick)
			} Use as req'd.
20	048698	1	BEARING, ball, front (Includes snap ring)
21	078862	1	NUT, bevel pinion (Also see ODOMETER for special nut.)
22	621445	1	RING, snap
23	621334	1	RING, oil sealing, outer
24	621335	1	RING, oil sealing, inner
25	069445	7	SHIM, cover adjusting (.007" thick)
	069446	3	SHIM, cover adjusting (.005" thick)
			} Use as req'd.
26	623704	1	COVER, bearing
27	035190	6	CAPSCREW, 1/2" NC x 1-1/2"
	904208	6	LOCKWASHER, 1/2"

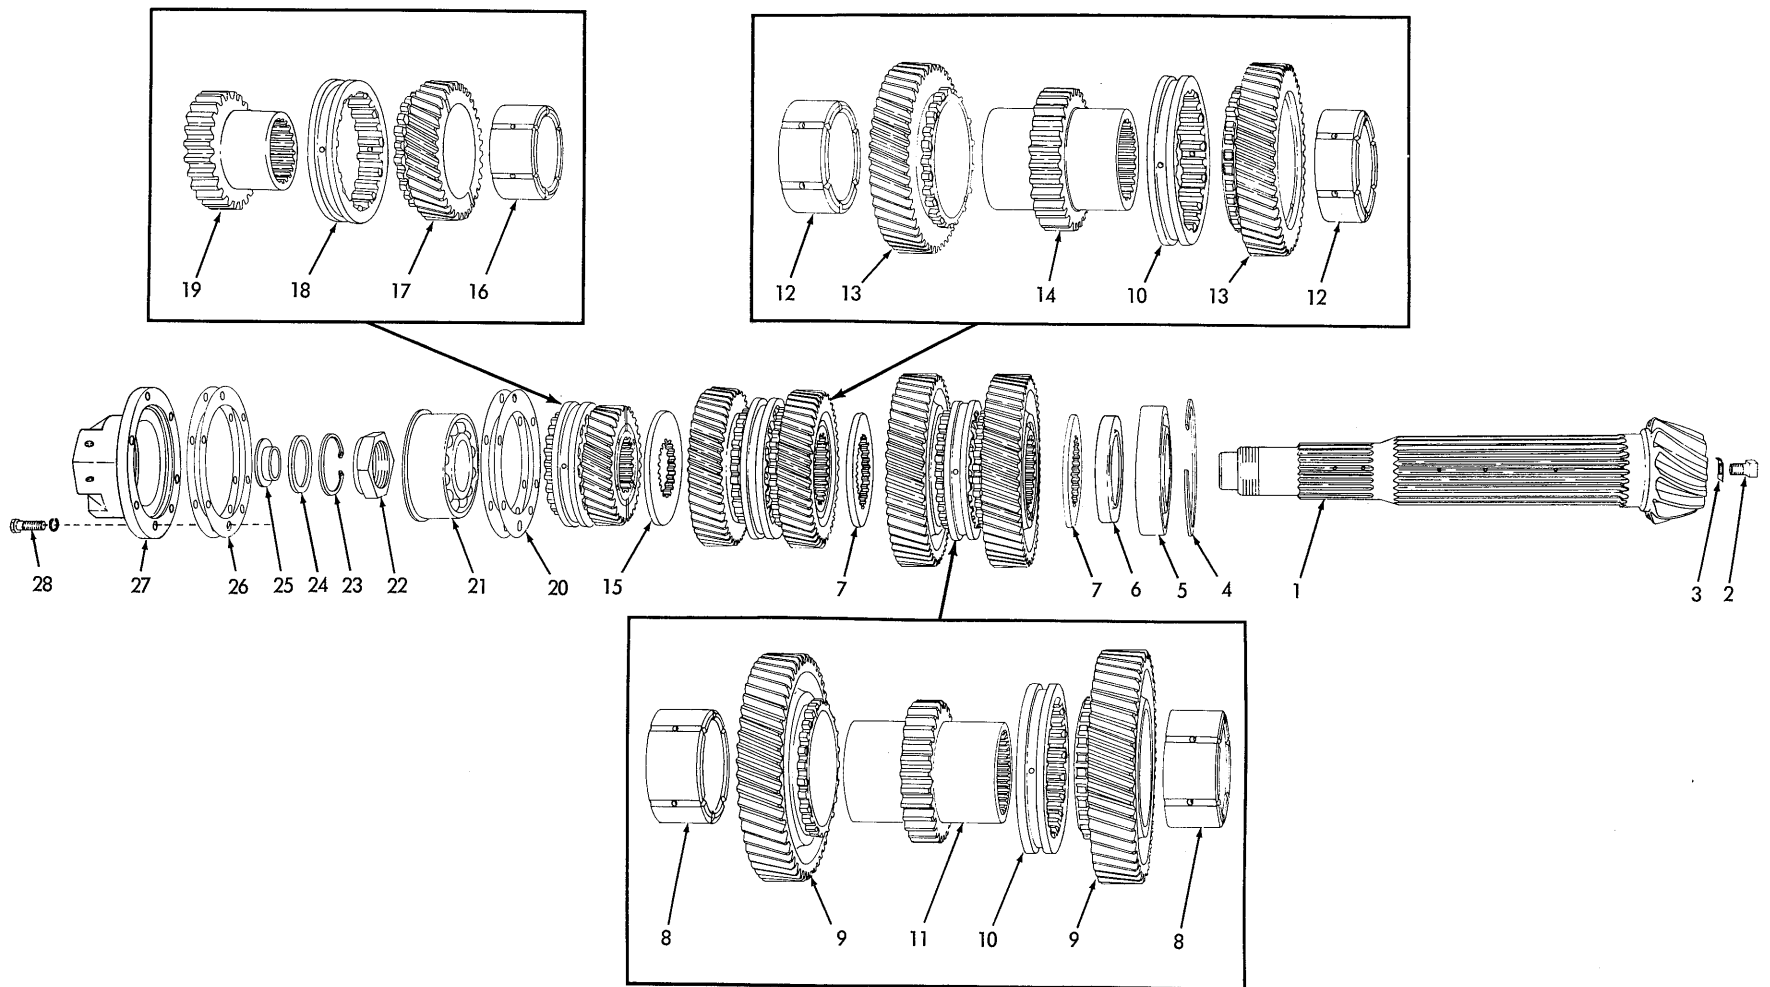


TRANSMISSION PINION SHAFT (Model HD16DC)

T-30867

TRANSMISSION PINION SHAFT

USAGE: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
1	098961	1	PINION, bevel (12 teeth)
2	098996	1	PLUG, pinion oil hole
3	098997	1	LOCK, pinion plug
4	059589	1	RING, snap, rear bearing
5	059328	1	BEARING, roller, rear
6	069427	1	SPACER, rear bearing
7	069386	2	WASHER, gear retaining
8	623334	2	BUSHING, 1st speed gear
9	081202	2	GEAR, 1st reverse and 1st speed (51 teeth)
10	099898	2	COLLAR, shifting (7/16" groove)(Used prior to tractor #7617)
	650745	2	COLLAR, shifting (5/8" groove)(Effective with tractor #7617)
11	098957	1	HUB, 1st reverse and 1st speed gears
12	623338	2	BUSHING, 2nd speed gear
13	081200	2	GEAR, 2nd reverse and 2nd speed (48 teeth)
14	098956	1	HUB, 2nd reverse and 2nd speed gears
15	074824	1	WASHER, gear retaining
16	623667	1	BUSHING, 3rd speed gear
17	081201	1	GEAR, 3rd speed (35 teeth)
18	099899	1	COLLAR, shifting, 3rd speed (7/16" groove)(Used prior to tractor #7617)
	647321	1	COLLAR, shifting, 3rd speed (5/8" groove)(Eff. with tractor #7617)
19	098955	1	HUB, 3rd speed gear
20	069447	4	SHIM, adjusting, pinion depth (.005" thick. Use as req'd)
	069448	6	SHIM, adjusting, pinion depth (.010" thick. Use as req'd)
21	048698	1	BEARING, ball, front (Includes snap ring)
22	078862	1	NUT, bevel pinion
23	621445	1	RING, snap
24	621334	1	RING, oil sealing, outer
25	621335	1	RING, oil sealing, inner
26	069445	7	SHIM, cover adjusting (.007" thick. Use as req'd)
	069446	7	SHIM, cover adjusting (.005" thick. Use as req'd)
27	623704	1	COVER, bearing
28	035190	6	CAPSCREW, 1/2"NC x 1-1/2"
	904208	6	LOCKWASHER, 1/2"

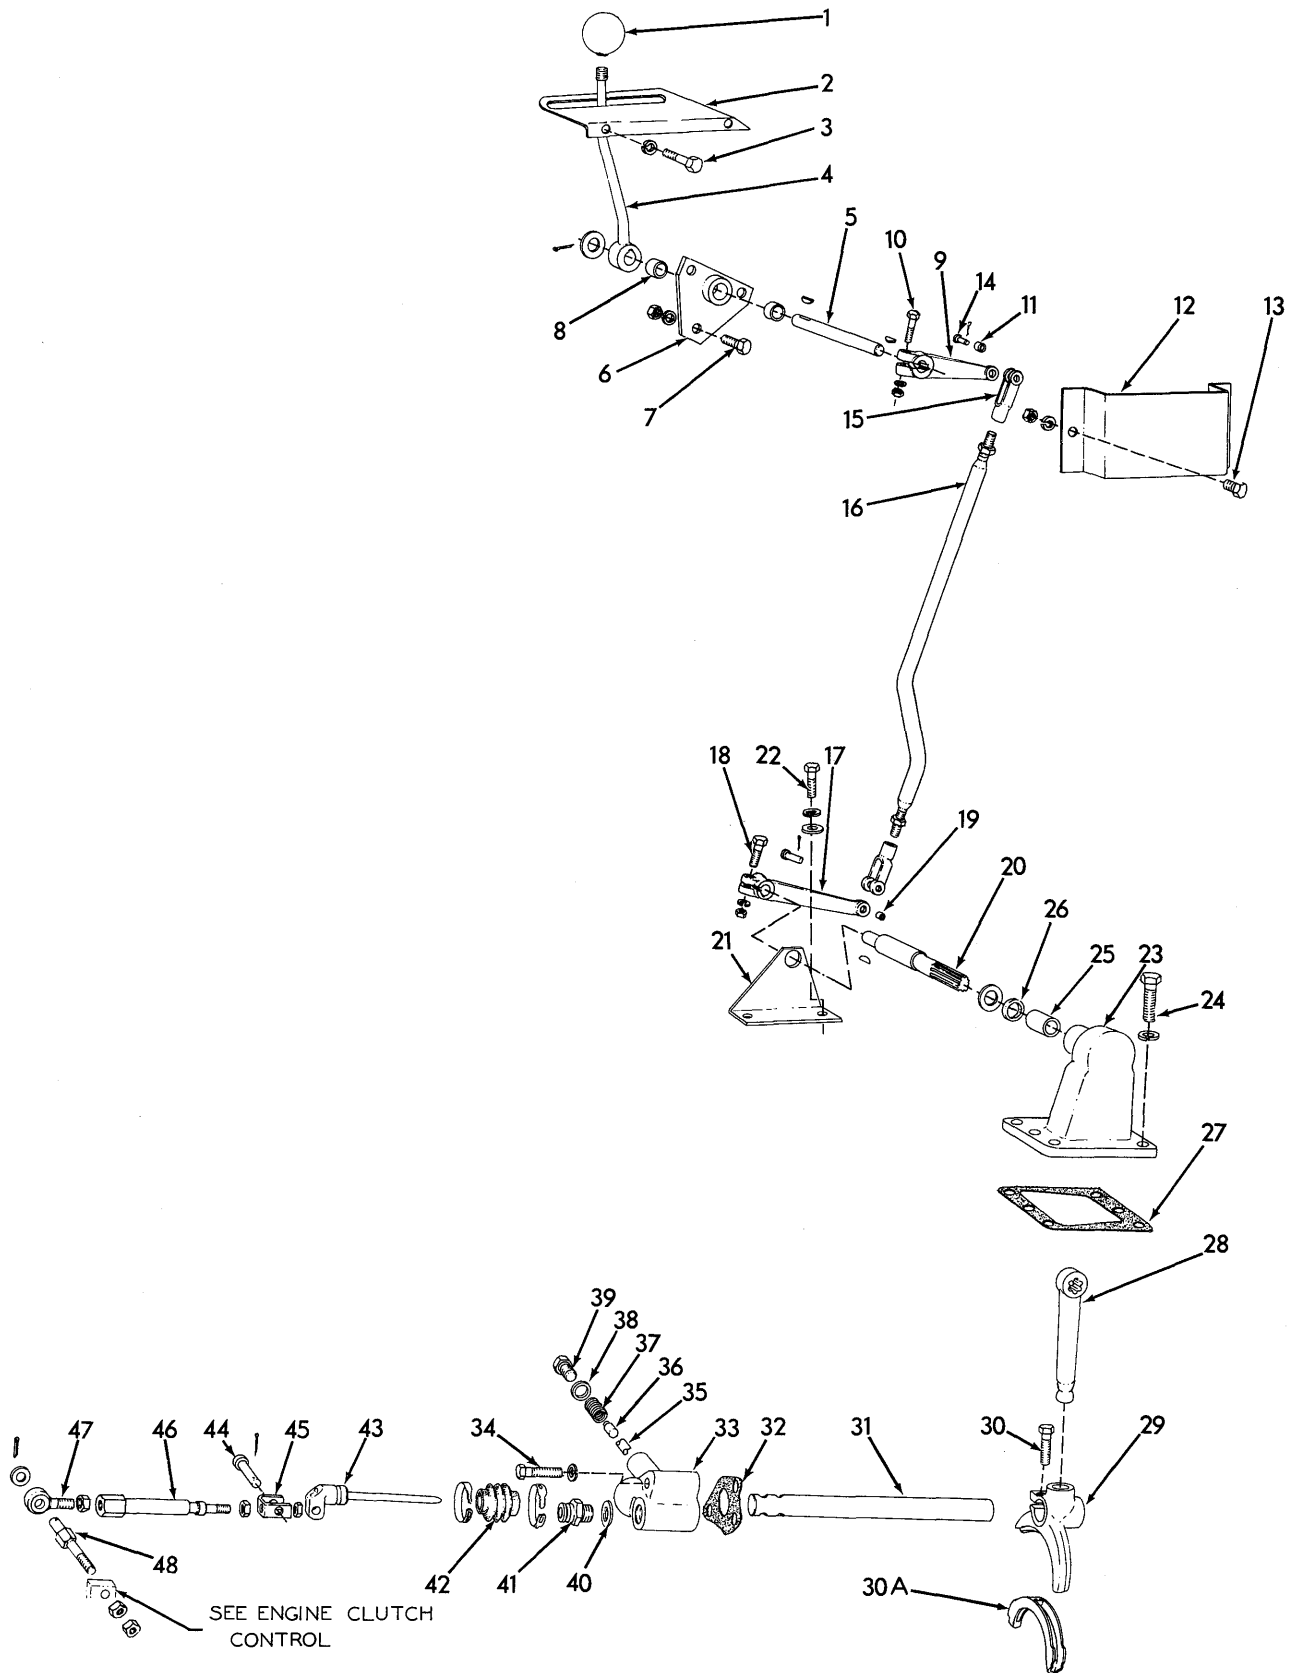

FORWARD HIGH-LOW GEAR SHIFT (HD16D)

T-70441

FORWARD HIGH-LOW GEAR SHIFT

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	090020	1	KNOB, shift lever
2	634080	1	GUIDE, gear shift lever
3	035979	2	CAPSCREW, 3/8"NF x 5/8"
	904206	2	LOCKWASHER, 3/8"
4	633216	1	LEVER, gear shift
5	633888	1	SHAFT, gear shift lever
	905123	2	KEY, #9 woodruff, 3/16" x 3/4"
	910255	1	WASHER, plain, SAE std., 3/4"
	900807	1	PIN, cotter, 1/8" x 1-1/4"
6	633889	1	BRACKET ASSEMBLY, gear shift lever (Includes item 8)
7	035167	3	CAPSCREW, 3/8"NF x 7/8"
	904206	3	LOCKWASHER, 3/8"
	911041	3	NUT, 3/8"NF
8	630795	2	BUSHING, gear shift lever bracket
9	632282	1	LEVER ASSEMBLY, intermediate (Includes item 11)
10	041981	1	CAPSCREW, 5/16"NF x 1-1/2"
	904205	1	LOCKWASHER, 5/16"
	913636	1	NUT, 5/16"NF
11	624584	1	BUSHING, intermediate lever
12	632175	1	SHIELD, intermediate lever
13	035979	2	CAPSCREW, 3/8"NF x 5/8"
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
14	078810	2	PIN, control rod yoke
	900942	2	PIN, cotter, 3/32" x 5/8"
15	628736	2	YOKE, control rod
16	633887	1	ROD, control
	911041	2	NUT, 3/8"NF
17	634758	1	LEVER ASSEMBLY, lower (Includes item 19)
18	041981	1	CAPSCREW, 5/16"NF x 1-1/2"
	904205	1	LOCKWASHER, 5/16"
	913636	1	NUT, 5/16"NF
19	624584	1	BUSHING, lower lever
20	639037	1	SHAFT, shifting lever
	905123	1	KEY, #9 woodruff, 3/16" x 3/4"
	910255	1	WASHER, plain, SAE std., 3/4"
21	639138	1	ANGLE, supporting, shifting lever shaft
22	070960	2	CAPSCREW, 3/8"NC x 1-1/2"
	904206	2	LOCKWASHER, 3/8"
	044973	2	WASHER, plain
23	634980	1	HOUSING ASSEMBLY, shifting lever (Includes items 25 and 26)
24	044249	4	CAPSCREW, 3/8"NC x 1-1/8"
	904206	4	LOCKWASHER, 3/8"

(Continued)



FORWARD HIGH-LOW GEAR SHIFT (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
25	606009	1	BUSHING, shifting lever housing
26	052662	1	SEAL, oil, shifting lever shaft
27	057407	1	GASKET, shifting lever housing
28	633207	1	LEVER, shifting
29	080943	1	FORK, shifting (Used prior to tractor #7380)
	646256	1	FORK, shifting (Effective with tractor #7380)
30	035018	2	CAPSCREW, 1/2"NF x 1-1/2"
30A	647908	1	COLLAR, wear, shifting fork (Effective with tractor #7380)
31	-----	1	SHAFT, shifting fork (Used prior to tractor #6397. Order SHAFT 643045, GEAR 643059 and GEAR 649661)
	643045	1	SHAFT, shifting fork (Effective with tractor #6397)
32	069468	1	GASKET, interlock housing
33	643046	1	HOUSING, gear shift interlock
34	053616	2	CAPSCREW, 3/8"NC x 1-3/4"
	904206	2	LOCKWASHER, 3/8"
35	-----	1	PIN, interlock (Used prior to tractor #6397. Order PIN 643040 and PLUNGER 643042)
	643040	1	PIN, interlock (Effective with tractor #6397)
36	641356	1	PLUNGER, shaft locating
37	096922	1	SPRING, shifting shaft interlock
38	049918	1	WASHER, interlock spring capscrew (copper)
39	035159	1	CAPSCREW, interlock spring (5/8"NF x 1")
40	050267	1	WASHER, plunger sleeve (copper)
41	620975	1	SLEEVE, shifting lock plunger (13/32" hole)
42	080166	1	BOOT, locking plunger
	916897	2	CLAMP, hose, 1" diam.
43	-----	1	PLUNGER, shifting lock (Used prior to tractor #6397. Order PLUNGER 643042 and PIN 643040)
	643042	1	PLUNGER, shifting lock (Effective with tractor #6397)
44	082875	1	PIN, locking plunger
	900942	1	PIN, cotter, 3/32" x 5/8"
45	633830	1	YOKE, locking plunger
46	633893	1	OVERTRAVEL ASSEMBLY (Serviced only as a unit)
	911048	2	NUT, jam, 3/8"NF
47	082240	1	EYE-BOLT, shift interlock
	911048	1	NUT, jam, 3/8"NF

(Continued)

FORWARD HIGH-LOW GEAR SHIFT (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
48	633971	1	STUD, shift interlock
	911048	2	NUT, jam, 3/8"NF
	911115	1	WASHER, plain, SAE std., 3/8"
	900942	1	PIN, cotter, 3/32" x 5/8"

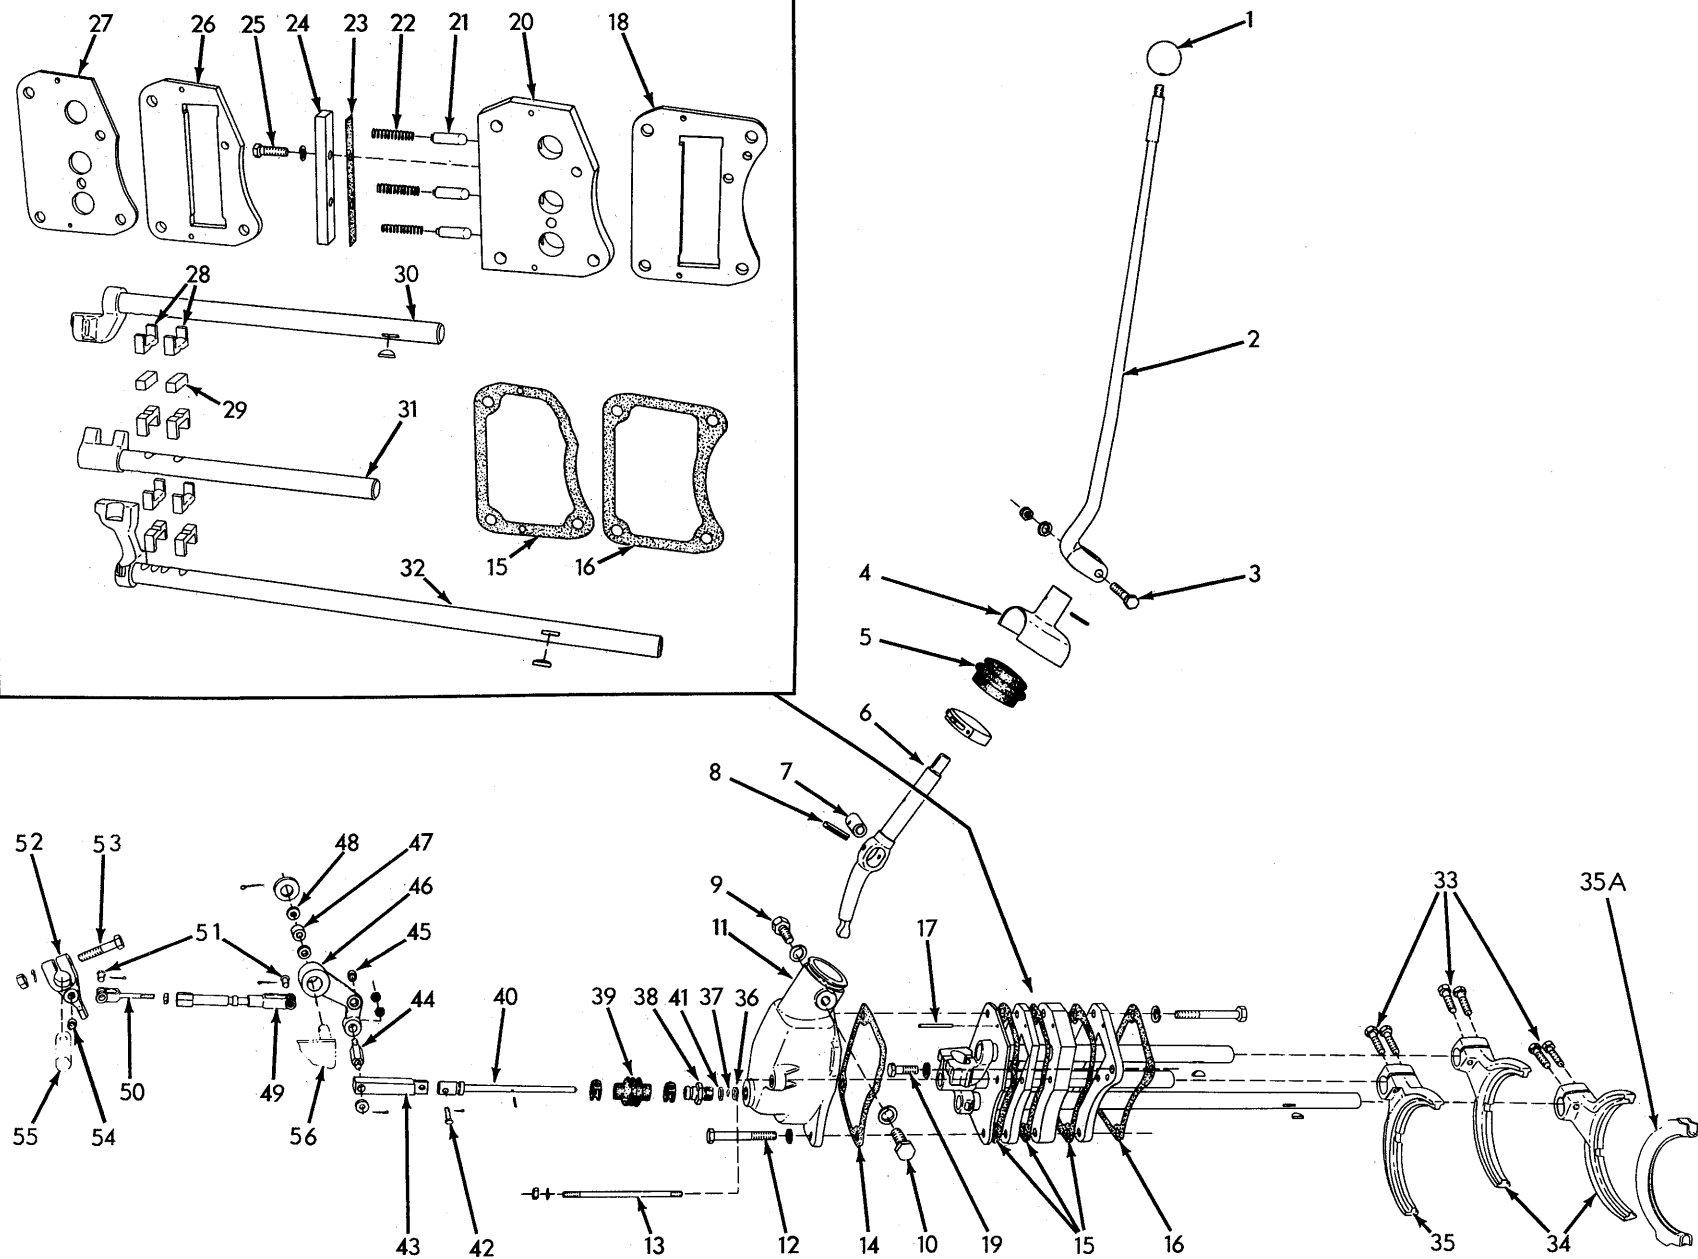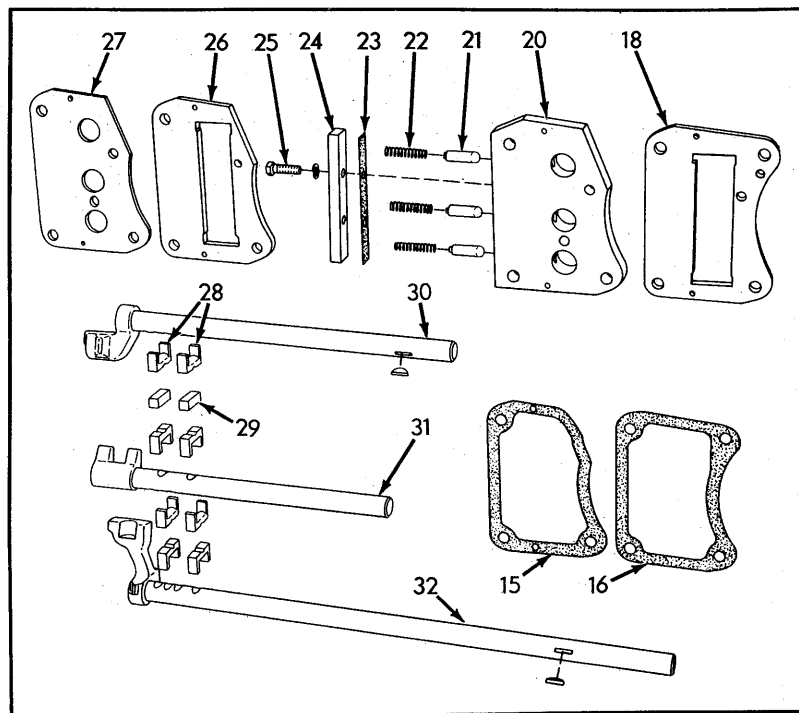

SPEED SELECTION GEAR SHIFT (Model HD16D)

T-40498

SPEED SELECTION GEAR SHIFT

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
------	----------	------	-------------

NOTE: See FLOOR for shift lever guide plate

1	091862	1	KNOB, extension lever
2	632517	1	LEVER, extension
3	035892	1	CAPSCREW, 1/2"NF x 2-1/2"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
4	082067	1	GUARD, shift lever boot
	915989	1	PIN, spring, 3/16" x 1-3/8"
5	078742	1	BOOT, shift lever
	916995	1	CLAMP, hose, 3"I. D.
6	620284	1	LEVER, shift
7	622080	1	SHAFT, shift lever pivot
8	915500	1	PIN, spring, 3/8" x 1-3/4"
9	620313	1	SCREW, shift lever pivot, right
	904209	1	LOCKWASHER, 5/8"
10	621330	1	SCREW, shift lever pivot, left
	904209	1	LOCKWASHER, 5/8"
11	620274	1	HOUSING, shift lever
	910257	1	CAPSCREW, 1/2"NC x 4-3/4"
	904208	3	LOCKWASHER, 1/2"
12	045253	2	CAPSCREW, 1/2"NC x 3-3/4"
13	621262	1	STUD, shift lever housing
	911041	1	NUT, 3/8"NF
	904206	1	LOCKWASHER, 3/8"
14	085877	1	GASKET, shift lever housing
15	620980	3	GASKET, shaft locking plates
16	085878	1	GASKET, shaft rear locking plate
17	620981	2	PIN, dowel, shaft locking plates
18	623902	1	PLATE, shaft locking, rear
19	035190	1	CAPSCREW, 1/2"NC x 1-1/2"
	904208	1	LOCKWASHER, 1/2"
20	623903	1	PLATE, shifting shaft plunger
21	641356	3	PLUNGER, shifting shaft
22	096922	3	SPRING, shifting shaft interlock
23	620974	1	GASKET, plunger retaining bar
24	620982	1	BAR, plunger retaining
25	013058	2	CAPSCREW, 3/8"NC x 1-1/4"
	904206	2	LOCKWASHER, 3/8"

(Continued)


SPEED SELECTION GEAR SHIFT (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
26	623904	1	PLATE, shaft locking, front
27	623905	1	PLATE, shaft guiding
28	638953	8	DETENT, shifting shaft interlock
29	620964	2	BLOCK, spacing, interlock detent
30	620957	1	SHAFT, shifting fork, upper
	911233	1	KEY, #11 woodruff, 3/16" x 7/8"
31	620961	1	SHAFT, shifting fork, center
32	620959	1	SHAFT, shifting fork, lower
	911233	1	KEY, #11 woodruff, 3/16" x 7/8"
33	035018	6	CAPSCREW, shifting forks (1/2"NF x 1-1/2")
34	{ 080867	2	FORK, center and rear (Used prior to tractor #7496)
	{ 650743	2	FORK, center and rear (Effective with tractor #7496)
35	{ 080882	1	FORK, front (Used prior to tractor #7496)
	{ 650742	1	FORK, front (Effective with tractor #7496)
35A	650744	3	COLLAR, wear, shifting fork (Effective with tractor #7496)
36	050267	1	WASHER, plunger sleeve (copper)
37	078402	1	WASHER, shifting lock plunger
38	{ -----	1	SLEEVE, shifting lock plunger (Used prior to tractor #7640. Order SLEEVE 651580 and SEAL 651725)
	{ 651580	1	SLEEVE, shifting lock plunger (Effective with tractor #7640)
39	635082	1	BOOT, locking plunger
	916897	2	CLAMP, hose, 1" diam.
40	644324	1	PLUNGER, shifting lock
	916146	1	PIN, spring, 3/32" x 1/2"
41	{ 923560	1	O-RING, shifting lock plunger (Used prior to tractor #7640)
	{ 651725	1	SEAL, shifting lock plunger (Effective with tractor #7640)
42	627451	1	PIN, shifting lock plunger
	900942	1	PIN, cotter, 3/32" x 5/8"
43	633979	1	LINK, shifting lock plunger
44	633970	1	STUD, plunger rod
	911048	2	NUT, jam, 3/8"NF
	911115	1	WASHER, plain, SAE std., 3/8"
	900942	1	PIN, cotter, 3/32" x 5/8"
45	624584	1	BUSHING, intermediate lever
46	632774	1	LEVER ASSEMBLY, intermediate (Includes item 45)
	910255	1	WASHER, plain, SAE std., 3/4"
	910302	1	PIN, cotter, 5/32" x 1-1/4"

(Continued)

SPEED SELECTION GEAR SHIFT (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
47	052643	2	BEARING, needle, intermediate lever
48	052662	2	SEAL, dirt, intermediate lever bearing
49	630486	1	OVER-TRAVEL ASSEMBLY (Serviced only as a unit)
50	628748	1	END, yoke
	911048	1	NUT, jam, 3/8"NF
51	078810	2	PIN, yoke end
	900802	2	PIN, cotter, 3/32" x 1"
52	632765	1	LEVER ASSEMBLY, plunger rod operating (Includes item 54)
53	035068	1	CAPSCREW, 1/2"NF x 2-1/4"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
54	624584	1	BUSHING, operating lever
55	-----	1	SHAFT, operating (See ENGINE CLUTCH CONTROL)
56	-----	1	BRACKET (See ENGINE CLUTCH BRAKE)

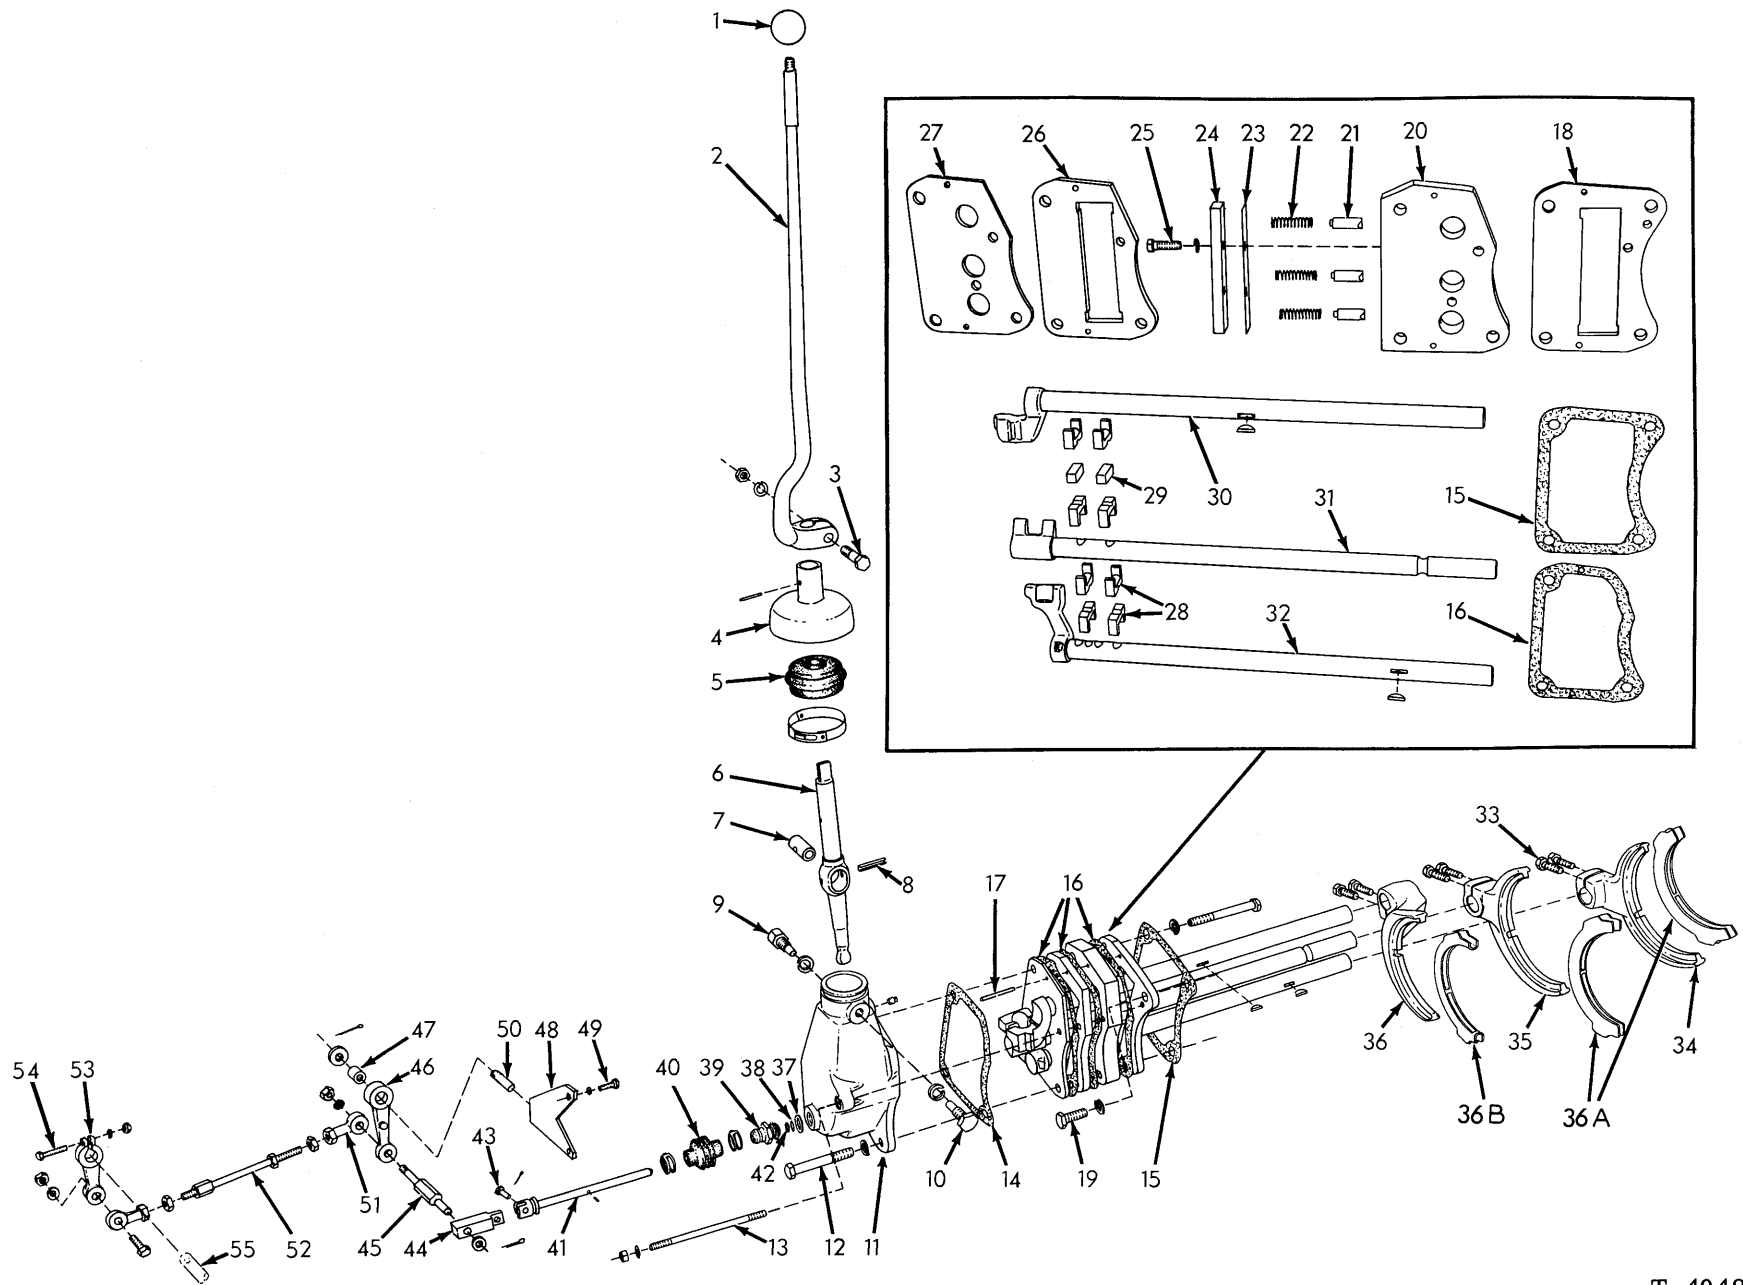

GEAR SHIFT (Model HD16DC)

T-40499

GEAR SHIFT

USAGE: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
------	----------	------	-------------

NOTE: See FLOOR for shift lever guide plate

1	091862	1	KNOB, extension lever
2	629849	1	LEVER, extension
3	035892	1	CAPSCREW, 1/2"NF x 2-1/2"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
4	081343	1	GUARD, shift lever boot
	915989	1	PIN, spring, 3/16" x 1-3/8"
5	078742	1	BOOT, shift lever
	916995	1	CLAMP, hose, 3"I.D.
6	083615	1	LEVER, shift
7	622080	1	SHAFT, shift lever pivot
8	915500	1	PIN, spring (3/8" x 1-3/4")
9	620313	1	SCREW, shift lever pivot shaft, outer
	904209	1	LOCKWASHER, 5/8"
10	621330	1	SCREW, shift lever pivot shaft, inner
	904209	1	LOCKWASHER, 5/8"
11	089829	1	HOUSING, shift lever
	901651	1	PLUG, pipe, 1/8"NPT
	910257	1	CAPSCREW, 1/2"NC x 4-3/4"
12	045253	2	CAPSCREW, 1/2"NC x 3-3/4"
	904208	3	LOCKWASHER, 1/2"
13	621262	1	STUD, shift lever housing
	911041	1	NUT, 3/8"NF
	904206	1	LOCKWASHER, 3/8"
14	085877	1	GASKET, shift lever housing
15	085878	1	GASKET, shaft rear locking plate
16	620980	3	GASKET, shaft locking plates
17	620981	2	PIN, dowel, shaft locking plates
18	623902	1	PLATE, shaft locking, rear
19	035190	1	CAPSCREW, 1/2"NC x 1-1/2"
	904208	1	LOCKWASHER, 1/2"
20	623903	1	PLATE, shifting shaft plunger
21	641356	3	PLUNGER, shifting shaft interlock
22	096922	3	SPRING, shifting shaft interlock
23	620974	1	GASKET, plunger retaining bar

(Continued)


GEAR SHIFT (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
24	620982	1	BAR, plunger retaining
25	013058	2	CAPSCREW, 3/8"NC x 1-1/4"
	904206	2	LOCKWASHER, 3/8"
26	623904	1	PLATE, shaft locking, front
27	623905	1	PLATE, shaft guiding
28	638953	8	DETENT, shifting shaft interlock
29	620964	2	BLOCK, spacing, interlock detent
30	620240	1	SHAFT, shifting fork, upper
	911233	1	KEY, #11 woodruff, 3/16" x 7/8"
31	620238	1	SHAFT, shifting fork, center
32	620242	1	SHAFT, shifting fork, lower
	911233	1	KEY, #11 woodruff, 3/16" x 7/8"
33	035018	6	CAPSCREW, shifting fork (1/2"NF x 1-1/2")
34	{ 080867	1	FORK, gear shifting, rear (Used prior to tractor #7617)
	{ 650743	1	FORK, gear shifting, rear (Effective with tractor #7617)
35	{ 080882	1	FORK, gear shifting, center (Used prior to tractor #7617)
	{ 650742	1	FORK, gear shifting, center (Effective with tractor #7617)
36	{ 080939	1	FORK, gear shifting, front (Used prior to tractor #7617)
	{ 650741	1	FORK, gear shifting, front (Effective with tractor #7617)
36A	650744	2	COLLAR, wear, rear and center shifting forks
36B	647908	1	COLLAR, wear, front shifting fork
			} Effective with tractor #7617
37	050267	1	WASHER, plunger sleeve (copper)
38	078402	1	WASHER, shifting lock plunger
39	{ -----	1	SLEEVE, shifting lock plunger (Used prior to tractor #7640. Order SLEEVE 651580 and SEAL 651725)
	{ 651580	1	SLEEVE, shifting lock plunger (Effective with tractor #7640)
40	635082	1	BOOT, locking plunger
	916897	2	CLAMP, hose, 1" diam.
41	635084	1	PLUNGER, shifting lock
	916146	1	PIN, spring, 3/32" x 1/2"
42	{ 923560	1	O-RING, shifting lock plunger (Used prior to tractor #7640)
	{ 651725	1	SEAL, shifting lock plunger (Effective with tractor #7640)
43	627451	1	PIN, shifting lock plunger
	900942	1	PIN, cotter, 3/32" x 5/8"
44	631064	1	LINK, shifting lock plunger

(Continued)

GEAR SHIFT (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
45	631065	1	STUD, plunger rod
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
	911115	1	WASHER, plain, SAE std., 3/8"
	900942	1	PIN, cotter, 3/32" x 5/8"
46	631056	1	LEVER ASSEMBLY, intermediate (Includes item 47)
47	628157	1	BUSHING, intermediate lever
48	631058	1	BRACKET ASSEMBLY, supporting, intermediate lever (Includes item 50)
49	070960	2	CAPSCREW, 3/8"NC x 1-1/2"
	904206	2	LOCKWASHER, 3/8"
	910255	1	WASHER, plain, SAE std., 3/4"
	910302	1	PIN, cotter, 5/32" x 1-1/4"
50	631060	1	SHAFT, intermediate lever bracket
51	617932	2	END, control rod (female)
	917125	1	CAPSCREW, 3/8"NF x 1-3/8"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
52	631066	1	OVER-TRAVEL ASSEMBLY (Serviced only as a unit)
	911041	2	NUT, 3/8"NF
53	631270	1	LEVER, shifting lock
54	035278	1	CAPSCREW, 1/2"NF x 2-3/4"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
55	-----	1	SHAFT, operating (See ENGINE CLUTCH CONTROL)

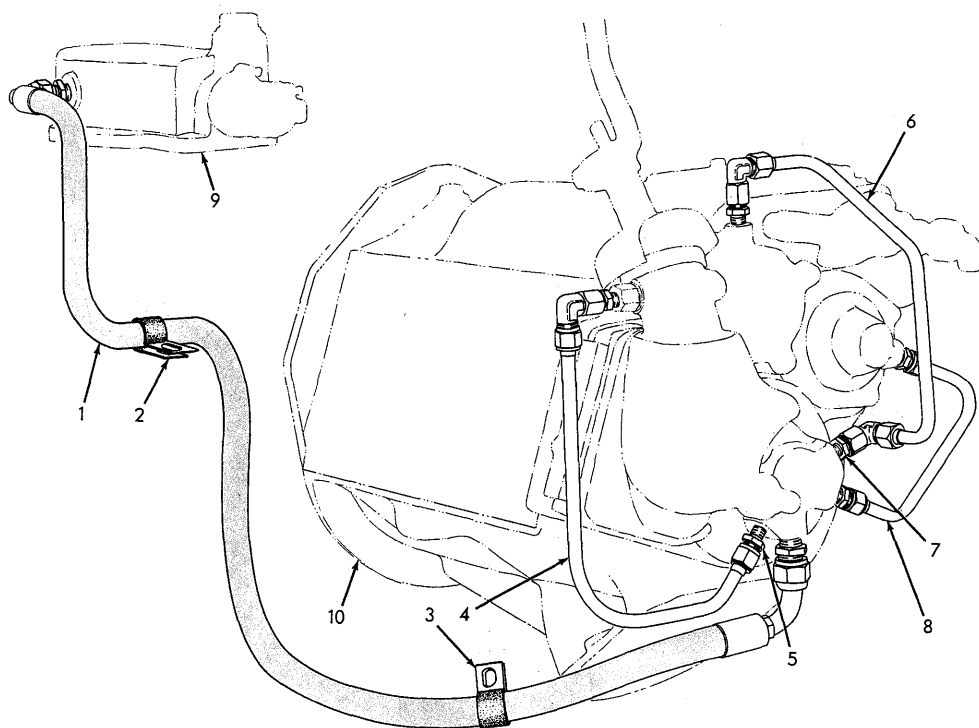


TRANSMISSION OIL LINES

T-33455

USAGE: Model HD16D

ITEM	PART NO.	QTY.	DESCRIPTION
1	646311	1	HOSE, brake valve to pinion shaft cover (See HOSE PARTS)
	919615	2	CONNECTOR, flare type, 3/4" tube, 1/2"NPT male
2	622916	1	CLIP, hose supporting (1-1/16" diam., 17/32" bolt-hole)(Used prior to tractor #6971)
	644612	1	CLIP, hose supporting (1-3/16" diam., 17/32" bolt-hole)(Effective with tractor #6971)
3	621451	1	CLIP, hose supporting (1-1/16" diam., 13/32" bolt-hole)(Used prior to tractor #6971)
	644612	1	CLIP, hose supporting (1-3/16" diam., 17/32" bolt-hole)(Effective with tractor #6971)
4	623832	1	TUBE ASSEMBLY, pinion shaft cover to shift housing (Includes nuts)
	921279	1	ELBOW, flare type, swivel nut, 1/2" tube
5	623188	1	CONNECTOR, flare type, restricted, 1/2" tube, 1/4"NPT male
	919205	1	CONNECTOR, flare type, 1/2" tube, 1/4"NPT male
6	623706	1	TUBE ASSEMBLY, pinion shaft cover to top shaft (Includes nuts)
	921279	2	ELBOW, flare type, swivel nut, 1/2" tube
7	623188	1	CONNECTOR, flare type, restricted, 1/2" tube, 1/4"NPT male
	919205	1	CONNECTOR, flare type, 1/2" tube, 1/4"NPT male
8	623707	1	TUBE ASSEMBLY, pinion shaft cover to intermediate shaft (Includes nuts)
	919205	2	CONNECTOR, flare type, 1/2" tube, 1/4"NPT male
9	-----	1	VALVE ASSEMBLY, right brake (See BRAKES)
10	-----	1	TRANSMISSION (See TRANSMISSION ASSEMBLY)

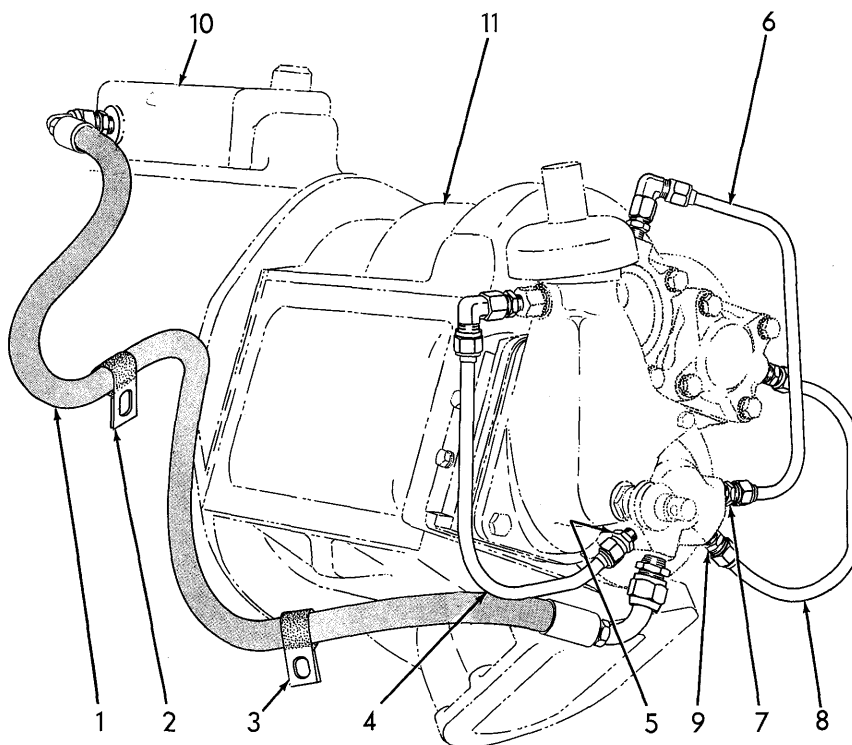


TRANSMISSION OIL LINES

T-33454

USAGE: Model HD16DC

ITEM	PART NO.	QTY.	DESCRIPTION
1	646311	1	HOSE, brake valve to pinion shaft cover (See HOSE PARTS)
	919615	2	CONNECTOR, flare type, 3/4" tube, 1/2"NPT male
2	622916	1	CLIP, hose supporting (1-1/16" diam. 17/32" bolt-hole)(Used prior to tractor #6967)
	644612	1	CLIP, hose supporting (1-3/16" diam., 17/32" bolt-hole)(Effective with tractor #6967)
3	621451	1	CLIP, hose supporting (1-1/16" diam., 13/32" bolt-hole)(Used prior to tractor #6967)
	644612	1	CLIP, hose supporting (1-3/16" diam., 17/32" bolt-hole)(Effective with tractor #6967)
4	623831	1	TUBE ASSEMBLY, pinion shaft cover to shift housing (Includes nuts)
	921279	1	ELBOW, flare type, swivel nut, 1/2"nut
5	623188	1	CONNECTOR, flare type, restricted, 1/2" tube, 1/4"NPT male
	919205	1	CONNECTOR, flare type, 1/2" tube, 1/4"NPT male
6	623830	1	TUBE ASSEMBLY, pinion shaft cover to top shaft (Includes nuts)
	921279	1	ELBOW, flare type, swivel nut, 1/2" tube
7	623188	1	CONNECTOR, flare type, restricted, 1/2" tube, 1/4"NPT male
	919205	1	CONNECTOR, flare type, 1/2" tube, 1/4"NPT male
8	623705	1	TUBE ASSEMBLY, pinion shaft cover to reverse shaft (Includes nuts)
9	623188	1	CONNECTOR, flare type, restricted, 1/2" tube, 1/4"NPT male
	919205	1	CONNECTOR, flare type, 1/2" tube, 1/4"NPT male
10	-----	1	VALVE ASSEMBLY, right brake (See BRAKES)
11	-----	1	TRANSMISSION (See TRANSMISSION ASSEMBLY)

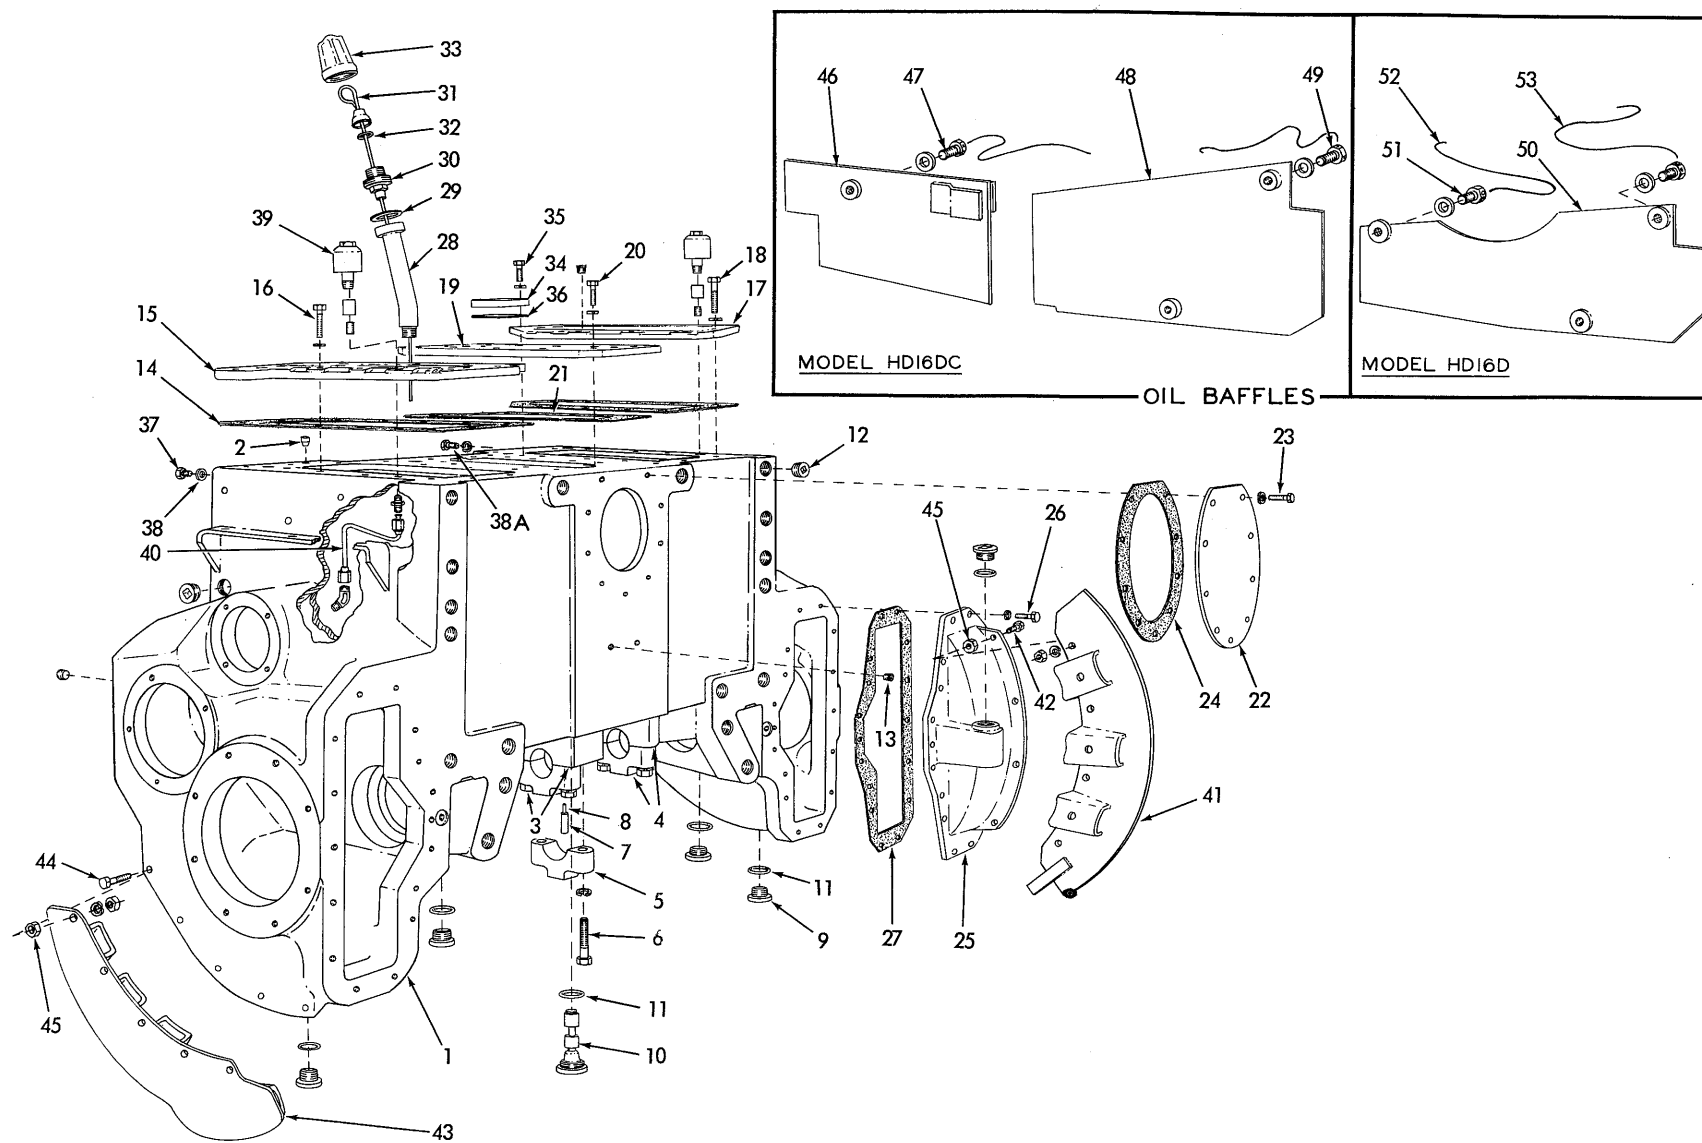

STEERING CLUTCH AND FINAL DRIVE HOUSING

T-73634

STEERING CLUTCH AND FINAL DRIVE HOUSING

ITEM	PART NO.	QTY.	DESCRIPTION
1	642586	1	HOUSING ASSEMBLY (Used prior to tractor #7753)
	654435	1	HOUSING ASSEMBLY (Effective with tractor #7753)
	904223	2	PLUG, pipe, ctsk-hd., 1/2"NPT
2	643740	2	PIN, dowel, clutch compartment covers
3	096211	1	CAP ASSEMBLY, track frame pivot shaft, inner
4	096212	2	CAP ASSEMBLY, track frame pivot shaft, outer
NOTE: Each cap assembly listed above includes items 5 and 6; also upper block which requires welding to housing			
5	059783	4	CAP, track frame pivot shaft
6	012762	8	CAPSCREW, 7/8"NF x 3/4"
	905347	8	LOCKWASHER, 7/8"
7	076726	2	WICK ASSEMBLY, pivot shaft lubricating (Consists of 1 pin and 1 WICK 050357)(Also serves as dowel pin for pivot shaft)
8	050357	2	WICK, pivot shaft lubricating
9	035250	6	PLUG, filling and drain
10	067543	1	PLUG, drain (magnetic)
11	035249	7	GASKET, filling and drain plugs
12	052979	10	PLUG, thread protecting (socket-hd., 1-1/4"NF)
13	051496	2	PLUG, thread protecting (5/8"NC)
14	623636	2	GASKET, clutch compartment covers
15	623547	1	COVER, clutch compartment, left
16	035068	9	CAPSCREW, 1/2"NF x 2-1/4"
	904208	9	LOCKWASHER, 1/2"
17	623548	1	COVER, clutch compartment, right
	647332	1	PLUG, pipe, hex-socket, 1/2"NPT (drilled thru)
18	035068	9	CAPSCREW, 1/2"NF x 2-1/4"
	904208	9	LOCKWASHER, 1/2"
19	622901	1	COVER, bevel gear compartment, top (Used prior to tractor #7550 excluding #7548)
	651409	1	COVER, bevel gear compartment, top (Effective with tractor #7550 including #7548)
20	035018	12	CAPSCREW, 1/2"NF x 1-1/2"
	904208	12	LOCKWASHER, 1/2"
21	622902	1	GASKET, top cover, bevel gear compartment
22	052977	1	COVER, bevel gear compartment, rear (Removed when Power Take-Off is installed)
23	921731	9	CAPSCREW, Nylok, 5/8"NC x 1-1/4"
	904209	9	LOCKWASHER, 5/8"
24	052976	1	GASKET, rear bevel gear compartment cover

(Continued)



STEERING CLUTCH AND FINAL DRIVE HOUSING (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION	
25	059314	2	COVER, final drive compartment	
26	035018	32	CAPSCREW, 1/2"NF x 1-1/2"	
	904208	32	LOCKWASHER, 1/2"	
27	059315	2	GASKET, final drive compartment covers	
28	630102	1	PIPE, oil filler	
29	034269	1	GASKET, oil filler pipe plug	
30	034268	1	PLUG, oil filler pipe	
31	629664	1	GAUGE ASSEMBLY, oil level, steering clutch housing (Includes item 32)	
32	4506607	1	SEAL, oil level gauge	
33	034265	1	CAP, oil level gauge	
34	630947	1	COVER, steering clutch housing, top (small)	
35	036034	2	CAPSCREW, 3/8"NF x 1"	
	904206	2	LOCKWASHER, 3/8"	
36	628951	1	GASKET, cover	
37	067480	4	CAPSCREW, hole plugging (1/2"NF x 3/4")	
38	630951	4	WASHER, hole plugging capscrew (copper)	
38A	035979	1	CAPSCREW, hole plugging (3/8"NF x 5/8")	
	904206	1	LOCKWASHER, 3/8"	
39	050748	2	BREATHER, final drive	
	901765	2	COUPLING, pipe, 3/8"NPT	
	901489	2	NIPPLE, pipe, 3/8"NPT x 1"	
40	623787	2	TUBE ASSEMBLY, final drive breather (Includes nuts)	
	919464	2	ELBOW, flare type, 45°, 1/4" tube x 1/8"NPT male	
	911171	2	CONNECTOR, flare type, 1/4" tube x 1/8"NPT male	
<u>NOTE:</u> Items 41 thru 45 are special equipment				
41	621501	1	GUARD, track sprocket, upper left	} Light duty
	621502	1	GUARD, track sprocket, upper right	
	646091	1	GUARD, track, sprocket, upper left	} Heavy duty
	646092	1	GUARD, track sprocket, upper right	
42	035068	8	CAPSCREW, 1/2"NF x 2-1/4"	
	904208	8	LOCKWASHER, 1/2"	
	911043	8	NUT, 1/2"NF	

(Continued)

STEERING CLUTCH AND FINAL DRIVE HOUSING (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION	
43	639087	1	GUARD, track sprocket, lower left	Light duty
	639088	1	GUARD, track sprocket, lower right	
	646093	1	GUARD, track sprocket, lower left	Heavy duty
	646094	1	GUARD, track sprocket, lower right	
44	035892	10	CAPSCREW, 1/2"NF x 2-1/2"	
	904208	10	LOCKWASHER, 1/2"	
	911043	10	NUT, 1/2"NF	
45	643070	18	SPACER, track sprocket guards	
46	640083	1	BAFFLE, oil, front section	Model HD16DC only
47	099963	1	CAPSCREW, drilled-hd., 3/8"NC x 2")	
	023633	1	WIRE, locking, 1/16" x 12"	
	044973	1	WASHER, plain	
48	642305	1	BAFFLE, oil, rear section	Model HD16DC only
49	099963	2	CAPSCREW, drilled-hd., 3/8"NC x 2"	
	023633	1	WIRE, locking, 1/16" x 12"	
	044973	2	WASHER, plain	
50	654940	1	BAFFLE, oil (Model HD16D only. Effective with tractor #7708)	
51	021527	3	CAPSCREW, drilled-hd., 3/8"NC x 1-5/8"	
52	023633	1	WIRE, locking, 1/16" x 12"	
53	037000	1	WIRE, locking, 1/16" x 16"	
	044973	3	WASHER, plain	

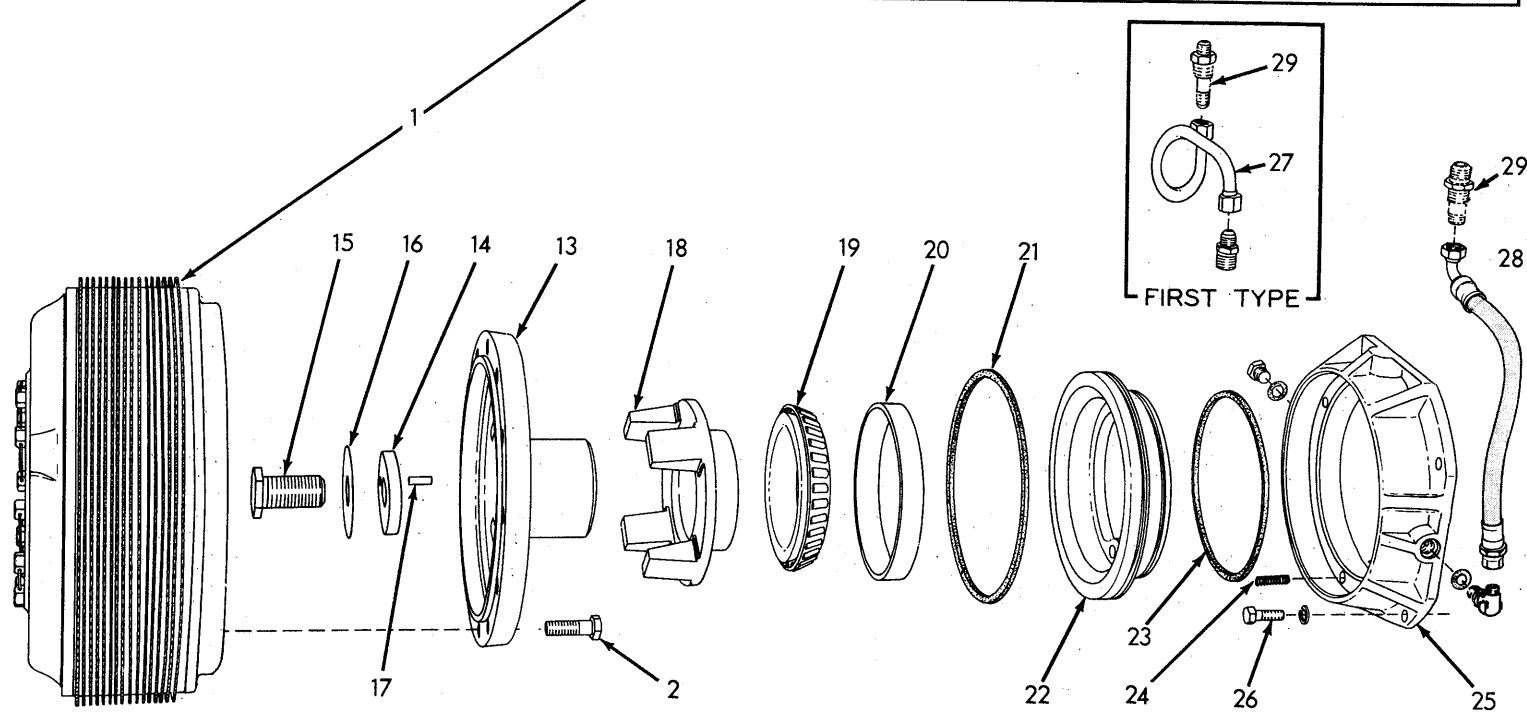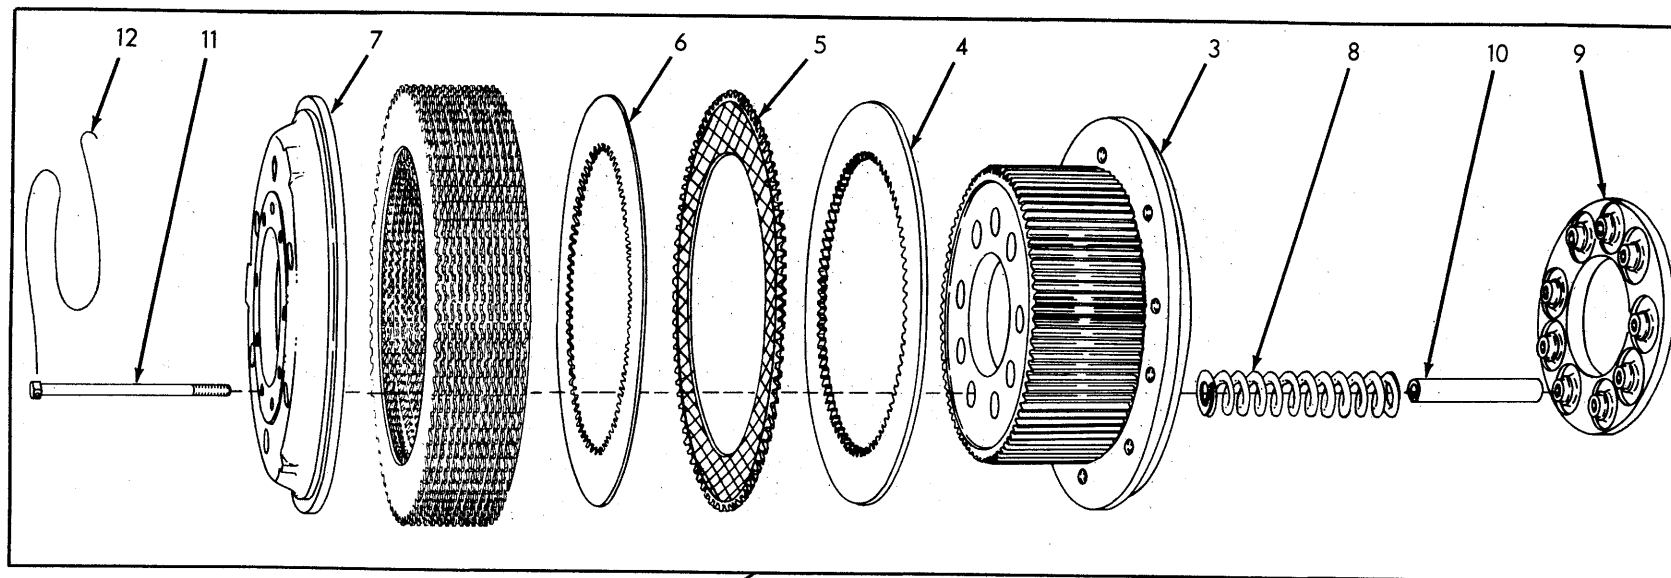


STEERING CLUTCHES

T-33464

STEERING CLUTCHES


ITEM	PART NO.	QTY.	DESCRIPTION
1	623927	2	CLUTCH ASSEMBLY (Consists of items 3 thru 12)
2	650813	20	BOLT, self-locking, 5/8"NC x 1-7/8"
3	-----	2	HUB, steering clutch (Used prior to tractor #7912. Order HUB 650622 and discard item 4)
	650622	2	HUB, steering clutch (Effective with tractor #7912)
4	048209	2	PLATE, back (Used prior to tractor #7912)
5	623877	30	DISC, friction (bimetallic)
6	623876	30	DISC, friction (steel)(Use as req'd)
7	059048	2	PLATE, pressure
8	623878	18	SPRING, pressure
9	059035	2	PLATE, throwout
10	623879	18	SPACER, throwout plate
11	052119	18	CAPSCREW, plate (drilled-hd., 1/2"NF x 6-1/2")
12	023756	4	WIRE, locking, 1/16" x 26"
13	623516	2	HUB, driving
14	623783	2	WASHER ASSEMBLY, hub retaining (Includes item 17)
15	630045	2	CAPSCREW, thin-hd., 1"NF x 1-3/4"
16	630052	2	LOCK, capscrew
17	035793	2	PIN, hub retaining washer
18	623932	2	SLEEVE, throwout
19	623007	2	CONE ASSEMBLY, clutch throwout bearing
20	623008	2	CUP, clutch throwout bearing
21	623003	2	RING, sealing, actuating piston, outer
22	623929	2	PISTON, actuating
23	623004	2	RING, sealing, actuating piston, inner
24	040475	6	SPRING, throwout bearing ring
25	-----	2	RING, collector (Used prior to tractor #6081 including #6082. Order 1 each RING 642448, HOSE 645236, PLUG 921573, ELBOW 921402)
	642448	2	RING, collector (Effective with tractor #6081, excluding #6082)
	921573	2	PLUG, hex-hd., 3/4"NF (Includes O-RING 921349)
26	035733	6	CAPSCREW, 1/2"NC x 1-3/8"
	904208	6	LOCKWASHER, 1/2"
27	623662	2	TUBE ASSEMBLY, oil pressure (Includes nuts)(Used prior to tractor #6081, including #6082)
	919128	2	CONNECTOR, flare type, 1/2" tube, 1/2"NPT male
28	645236	2	HOSE, oil pressure (See HOSE PARTS)(Effective with tractor #6081, excluding #6082)
	921402	2	ELBOW, adjustable, 90°, flare type, 1/2" tube, 3/4"NF (Includes washer, nut and O-RING 921349)
29	-----	2	UNION, bulkhead (See STEERING CONTROL VALVE AND LINES)

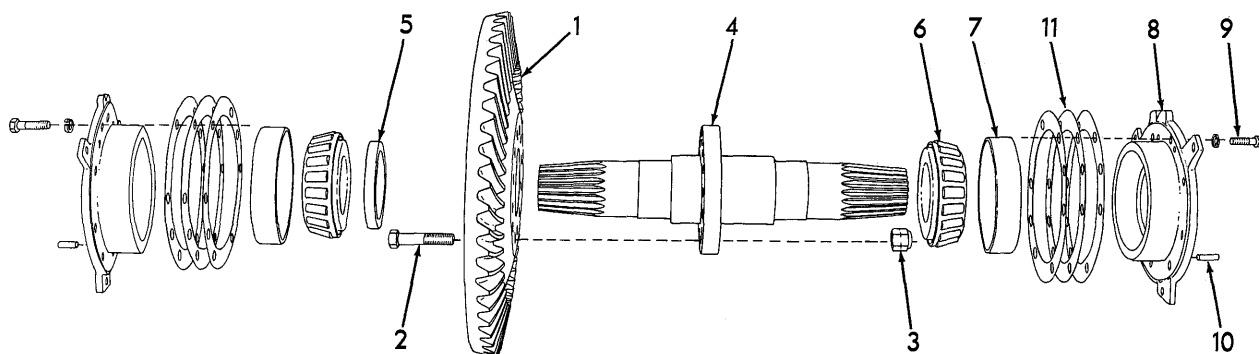

BEVEL GEAR AND SHAFT

T-39417


ITEM	PART NO.	QTY.	DESCRIPTION
1	059064	1	GEAR, bevel (50 teeth, right hand spiral)(Model HD16D)
	095543	1	GEAR, bevel (43 teeth, left hand spiral)(Model HD16DC)
2	067680	12	BOLT, 5/8"NF x 2-3/4"
3	645320	12	NUT, elastic stop, 5/8"NF
4	058916	1	SHAFT, bevel gear
5	067578	1	RING, locking, bevel gear bolts
6	069579	2	CONE ASSEMBLY, shaft bearing
7	050276	2	CUP, shaft bearing
8	623930	2	CAGE ASSEMBLY, bearing (Includes item 10)
9	035073	12	CAPSCREW, 1/2"NF x 1-3/4"
	904208	12	LOCKWASHER, 1/2"
10	623933	4	PIN, bearing cage
11	059026	12	SHIM, bearing adjustment (.005" thick. Use as req'd)
	059025	10	SHIM, bearing adjustment (.007" thick. Use as req'd)
	059024	10	SHIM, bearing adjustment (.010" thick. Use as req'd)

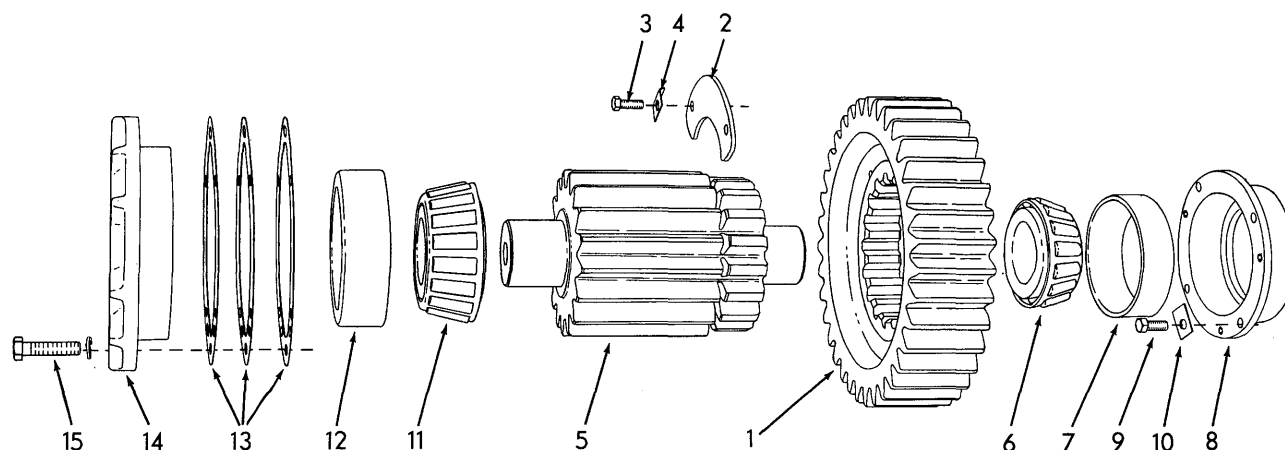

FINAL DRIVE INTERMEDIATE GEARS

T-4038

ITEM	PART NO.	QTY.	DESCRIPTION
1	058572	2	GEAR (35 teeth)
2	058825	4	LOCK, gear
3	035439	8	CAPSCREW, 3/8"NC x 1"
4	052444	8	LOCK, cap screw
5	622806	2	PINION (17 teeth)
6	052071	2	CONE ASSEMBLY, inner bearing
7	052070	2	CUP, inner bearing
8	067535	2	CAGE, inner bearing cup
9	035439	8	CAPSCREW, 3/8"NC x 1"
10	049936	8	LOCK, cap screw
11	069327	2	CONE ASSEMBLY, outer bearing
12	604398	2	CUP, outer bearing
13	094116	4	SHIM, bearing adjustment (.005" thick. Use as req'd)
	094117	4	SHIM, bearing adjustment (.007" thick. Use as req'd)
	094118	30	SHIM, bearing adjustment (.010" thick. Use as req'd)
14	094115	2	CAGE, outer bearing cup
15	035229	10	CAPSCREW, 5/8"NF x 2"
	904209	10	LOCKWASHER, 5/8"

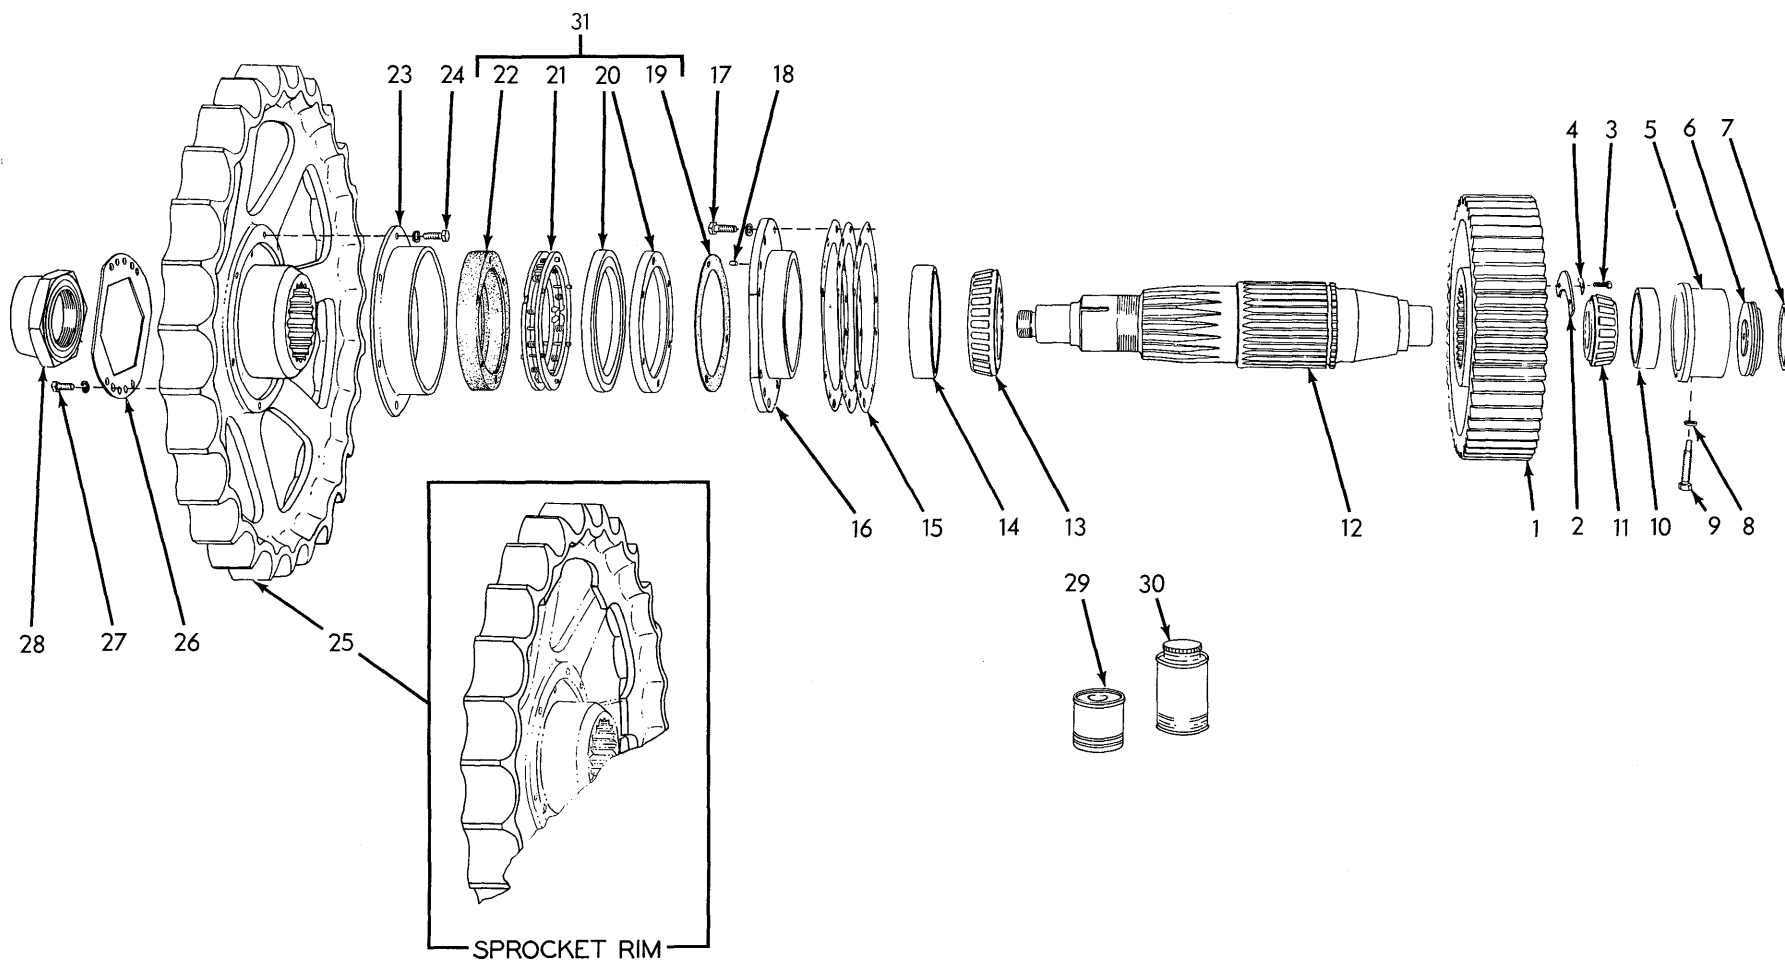

FINAL DRIVE SPROCKET, SHAFT AND GEAR

T-12573

FINAL DRIVE SPROCKET, SHAFT AND GEAR

ITEM	PART NO.	QTY.	DESCRIPTION
1	622807	2	GEAR (52 teeth)
2	052161	4	LOCK, gear
3	035439	8	CAPSCREW, 3/8"NC x 1"
4	052444	8	LOCK, capscREW
5	067534	2	CAGE, inner bearing
6	091572	2	COVER, inner bearing
7	923821	2	O-RING, inner bearing cover
8	049918	2	WASHER, bearing cage setscrew (copper)
9	067348	2	SETSCREW, bearing cage (hex-hd., dog-pt., 5/8"NF x 3")
10	069328	2	CUP, inner bearing
11	069441	2	CONE ASSEMBLY, inner bearing
12	622136	2	SHAFT, sprocket
13	051998	2	CONE ASSEMBLY, intermediate bearing
14	049487	2	CUP, intermediate bearing
15	067518	4	SHIM, bearing adjustment (.005" thick. Use as req'd)
	067519	4	SHIM, bearing adjustment (.007" thick. Use as req'd)
	067520	26	SHIM, bearing adjustment (.010" thick. Use as req'd)
16	083509	2	CAGE ASSEMBLY, intermediate bearing cup (Includes item 18)
17	023465	16	CAPSCREW, 5/8"NF x 1-3/4"
	904209	16	LOCKWASHER, 5/8"
18	084432	6	PIN, locating, seal ring
19	052408	2	□GASKET, inner seal ring
20	080488	4	□RING, inner seal
21	052611	2	□FOLLOWER ASSEMBLY, inner seal (Serviced only as a unit)
22	052612	2	□BOOT, inner seal
23	052426	2	GUARD, seal
24	035440	8	CAPSCREW, 5/8"NC x 1-1/2"
	904209	8	LOCKWASHER, 5/8"
25	633323	2	SPROCKET, track driving (Standard)
	633486	2	SPROCKET, track driving (Special. Has skeleton-tooth base to minimize packing of track)
	633487	2	SPROCKET RIM (Standard type. Requires welding to install)
26	083518	2	LOCK, sprocket retaining nut
27	035221	4	CAPSCREW, 1/2"NC x 1"
	904208	4	LOCKWASHER, 1/2"


□Indicates component of item 31

(Continued)

FINAL DRIVE SPROCKET, SHAFT AND GEAR (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
28	083507	2	NUT, sprocket retaining
29	033288	-	CEMENT, neoprene, 1/2 pint can
30	054890	-	SOLVENT, neoprene cement, 1/2 pint can
31	073764	2	SEAL KIT, final drive (Includes items 19 thru 22)


} For cementing
boots and gaskets

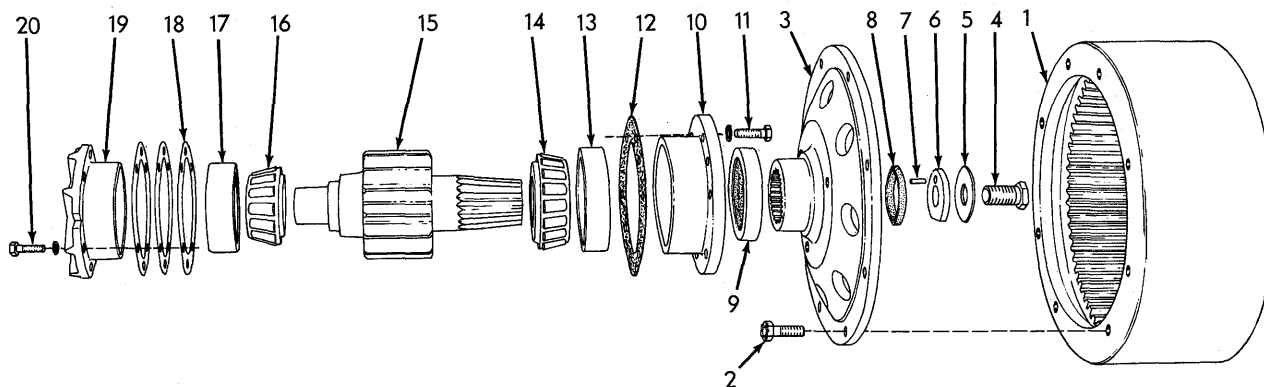

FINAL DRIVE PINION SHAFT

T-73635

ITEM	PART NO.	QTY.	DESCRIPTION
1	623928	2	DRUM, brake
2	650811	16	BOLT, self-locking, 5/8"NC x 1-1/2"
3	623781	2	HUB, brake drum
4	630045	2	CAPSCREW, hub retaining (thin-hd., 1"NF x 1-3/4")
5	630052	2	LOCK, hub retaining capscrew
6	623783	2	WASHER ASSEMBLY, hub retaining (Includes item 7)
7	035793	2	PIN, hub retaining washer
8	623786	2	SEAL, oil, pinion shaft (rubber)
9	623784	2	SEAL, oil, brake drum hub
10	623782	2	CAGE, inner bearing cup
11	035018	12	CAPSCREW, 1/2"NF x 1-1/2"
	904208	12	LOCKWASHER, 1/2"
12	058875	2	GASKET, bearing cage
13	069328	2	CUP, inner bearing
14	069441	2	CONE ASSEMBLY, inner bearing
15	058707	2	PINION (14 teeth)
16	643276	2	CONE ASSEMBLY, outer bearing
17	643275	2	CUP, outer bearing
18	058843	4	SHIM, bearing adjustment (.005" thick. Use as req'd)
	058842	4	SHIM, bearing adjustment (.007" thick. Use as req'd)
	058841	14	SHIM, bearing adjustment (.010" thick. Use as req'd)
19	083792	2	CAGE, outer bearing cup
20	035018	8	CAPSCREW, 1/2"NF x 1-1/2"
	904208	8	LOCKWASHER, 1/2"

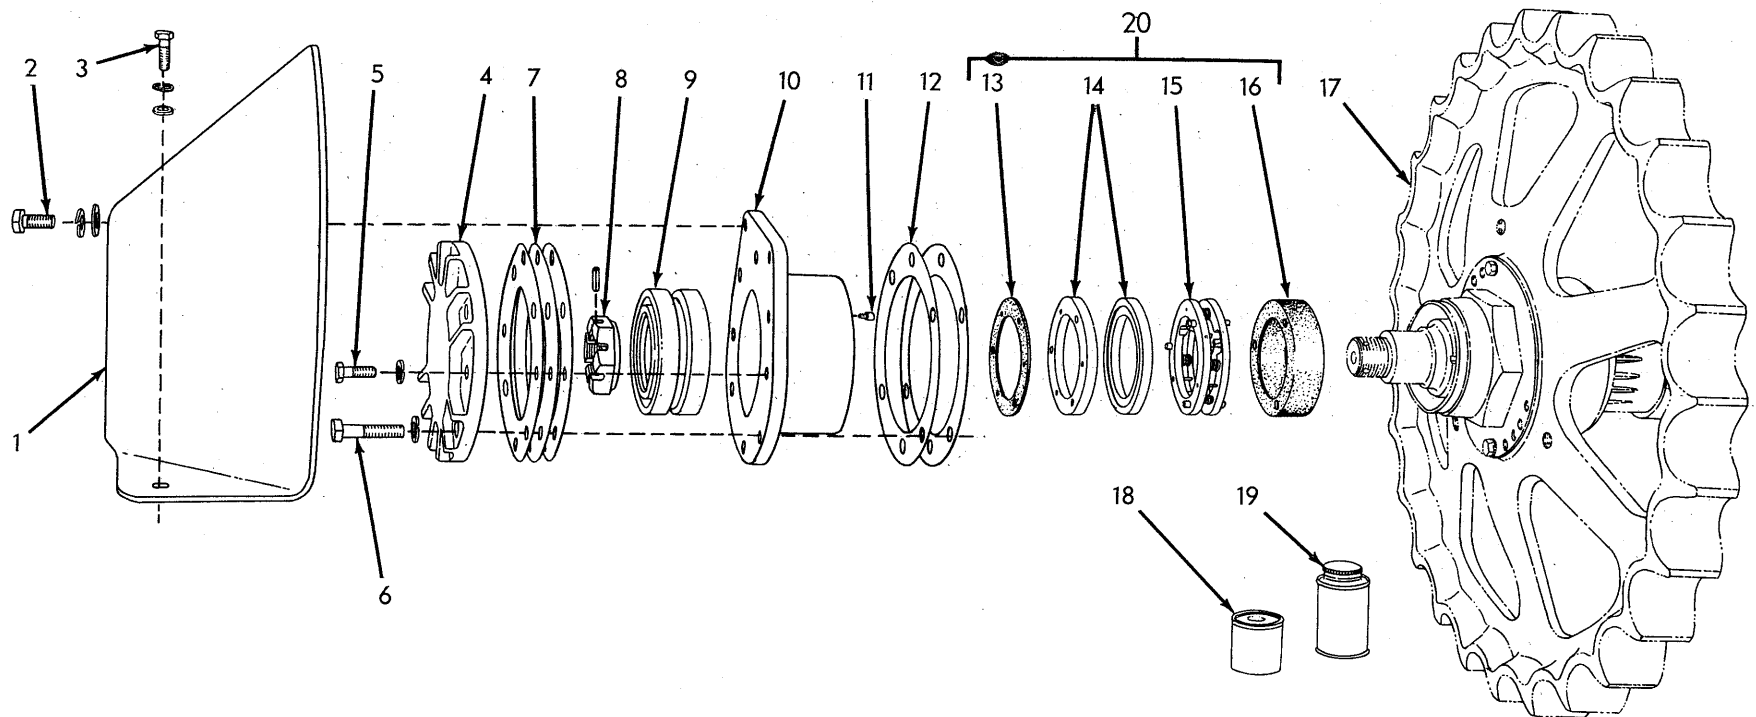

FINAL DRIVE OUTBOARD BEARING AND SEAL





T-4045A

FINAL DRIVE OUTBOARD BEARING AND SEAL

ITEM	PART NO.	QTY.	DESCRIPTION
1	639027	2	GUARD, track sprocket (Special equipment)
2	035440	4	CAPSCREW, 5/8"NC x 1-1/4"
	904209	4	LOCKWASHER, 5/8"
	911100	4	WASHER, plain, SAE std., 5/8"
3	035018	4	CAPSCREW, 1/2"NF x 1-1/2"
	064531	4	WASHER, plain
	904208	4	LOCKWASHER, 1/2"
4	083505	2	COVER, outboard bearing
5	035018	4	CAPSCREW, 1/2"NF x 1-1/2"
	904208	4	LOCKWASHER, 1/2"
6	070161	12	CAPSCREW, 5/8"NF x 2-3/4"
	904209	12	LOCKWASHER, 5/8"
7	083517	4	SHIM, bearing adjustment (.005" thick. Use as req'd)
	083516	4	SHIM, bearing adjustment (.007" thick. Use as req'd)
	083515	8	SHIM, bearing adjustment (.010" thick. Use as req'd)
8	083501	2	NUT, retaining, outboard bearing
	916227	2	PIN, spring, 1/4" x 1"
9	083503	2	BEARING, roller, outboard (Each consists of 1 roller assembly and 2 cups. Serviced only as a unit)
10	083511	2	CAGE, outboard bearing
11	084432	6	PIN, locating, seal ring
12	069072	12	SHIM, bearing cage spacing (.015" thick. Use as req'd)
13	062098	2	□GASKET, outer seal ring
14	080487	4	□RING, outer seal
15	052543	2	□FOLLOWER ASSEMBLY, outer seal (Serviced only as a unit)
16	052545	2	□BOOT, outer seal
17	-----	2	SPROCKET (See page 181)
18	033288	-	CEMENT, neoprene, 1/2 pint can
19	054890	-	SOLVENT, neoprene cement, 1/2 pint can
20	073765	2	SEAL KIT, final drive (Includes items 13 thru 16)

For cementing
boots and gaskets

□Indicates component of item 20

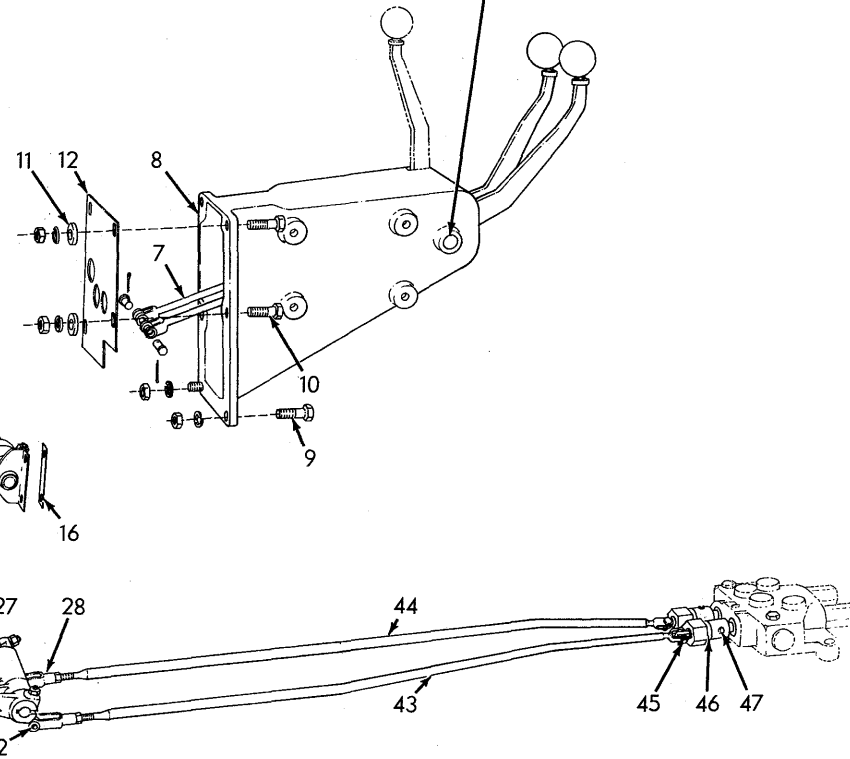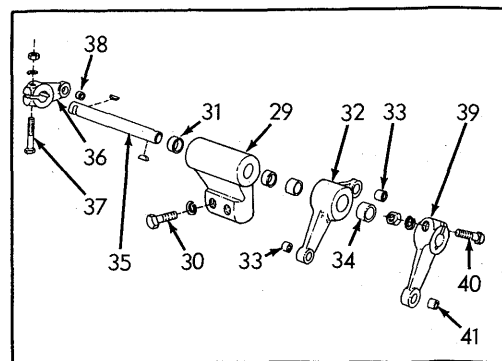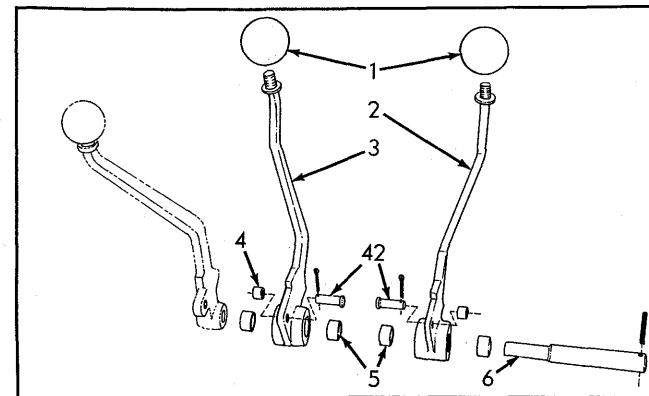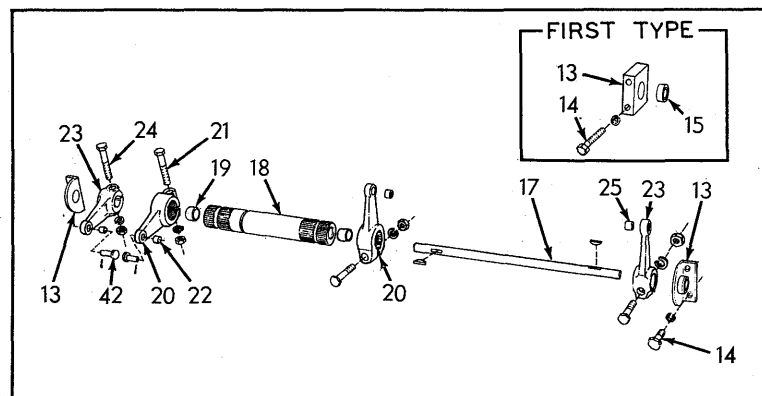

STEERING LEVERS AND LINKAGE

STEERING LEVERS AND LINKAGE

ITEM	PART NO.	QTY.	DESCRIPTION
1	090020	2	KNOB, steering lever
2	630811	1	LEVER ASSEMBLY, steering, left (Includes items 4 and 5)
3	630812	1	LEVER ASSEMBLY, steering, right (Includes items 4 and 5)
4	624584	2	BUSHING, steering lever (small)
5	630795	4	BUSHING, steering lever (large)
6	629716	1	SHAFT, steering lever
	915989	1	PIN, spring, 3/16" x 1-3/8"
7	630838	2	ROD, control, upper
8	629262	1	BRACKET, steering lever (Used prior to tractor #7550 excluding #7548)
	651431	1	BRACKET, steering lever (Effective with tractor #7550 including #7548)
9	070469	2	CAPSCREW, 1/2"NF x 1-1/4"
10	035018	4	CAPSCREW, 1/2"NF x 1-1/2"
11	064531	4	WASHER, plain
	904208	6	LOCKWASHER, 1/2"
	911043	6	NUT, 1/2"NF
12	631421	1	PLATE, air baffle (For units with suction-type or reversible cooling fans)
13	630849	2	BLOCK ASSEMBLY, pillow, cross shaft (Includes item 15)(Used prior to tractor #6287)
	643302	2	BLOCK ASSEMBLY, pillow, cross shaft (Includes item 15)(Used on tractors #6287 thru #8068)
	654656	2	BEARING ASSEMBLY, cross shaft (Includes bushing)(Effective with tractor #8069)
14	036034	4	CAPSCREW, 3/8"NF x 1" (Used prior to tractor #6287)
	045174	4	CAPSCREW, 3/8"NF x 2-1/2" (Used on tractors #6287 thru #8068)
	036032	4	CAPSCREW, 3/8"NF x 3/4"(Effective with tractor #8069)
	904206	4	LOCKWASHER, 3/8"
15	628157	2	BUSHING, pillow block (Used prior to tractor #6287)
	643257	2	BUSHING, pillow block (Used on tractors #6287 thru #8068)
16	061554	4	SHIM, aligning, upper cross shaft (Use as required)
17	629717	1	SHAFT, cross, upper
	905123	2	KEY, #9 woodruff, 3/16" x 3/4"
18	630851	1	TUBE ASSEMBLY, upper cross shaft levers (Includes item 19)(Used prior to tractor #7536)
	648956	1	TUBE ASSEMBLY, upper cross shaft levers (Includes item 19) (Effective with tractor #7536)
19	630795	2	BUSHING, upper cross shaft lever tube
20	630841	2	LEVER ASSEMBLY, upper cross shaft tube (Includes item 22)
21	046419	2	CAPSCREW, 3/8"NF x 2"
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF

(Continued)


STEERING LEVERS AND LINKAGE (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
22	624584	2	BUSHING, upper cross shaft tube lever
23	630837	2	LEVER ASSEMBLY, upper cross shaft (Includes item 25)
24	046419	2	CAPSCREW, 3/8"NF x 2"
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
25	624584	2	BUSHING, upper cross shaft lever
26	072438	2	SPRING, control rod retracting
27	630856	2	ROD, control, vertical
	911041	2	NUT, 3/8"NF
28	628736	4	YOKE, control rods
29	630850	1	BRACKET ASSEMBLY, lower cross shaft (Includes item 31)
30	035018	2	CAPSCREW, 1/2"NF x 1-1/2" (Early units)
	035190	2	CAPSCREW, 1/2"NC x 1-1/2" (Late units)
	904208	2	LOCKWASHER, 1/2"
31	630795	2	BUSHING, lower cross shaft bracket
32	630852	1	BELLCRANK ASSEMBLY, lower cross shaft (Includes items 33 and 34)
33	624584	2	BUSHING, lower cross shaft bellcrank (small)
34	630795	2	BUSHING, lower cross shaft bellcrank (large)
35	629454	1	SHAFT, cross, lower
	905123	2	KEY, #9 woodruff, 3/16" x 3/4"
36	630836	1	LEVER ASSEMBLY, lower cross shaft, right (Includes item 38)
37	046419	1	CAPSCREW, 3/8"NF x 2"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
38	624584	1	BUSHING, right lower cross shaft lever
39	630837	1	LEVER ASSEMBLY, lower cross shaft, left (Includes item 41)
40	046419	1	CAPSCREW, 3/8"NF x 2"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
41	624584	1	BUSHING, left lower cross shaft lever
42	078810	10	PIN, control linkage yokes
	900801	10	PIN, cotter, 3/32" x 3/4"
43	639061	1	ROD, control, lower left
	911041	1	NUT, 3/8"NF
44	639062	1	ROD, control, lower right
	911041	1	NUT, 3/8"NF
45	627451	2	PIN, yoke, lower control rods, rear section
	900801	2	PIN, cotter, 3/32" x 3/4"
46	656151	2	OVERTRAVEL ASSEMBLY (Serviced only as a unit)
47	630833	2	PIN, overtravel
	900801	2	PIN, cotter, 3/32" x 3/4"

HYDRAULIC STEERING CONTROL

ITEM	PART NO.	QTY.	DESCRIPTION
1	-----	-	STEERING PUMP AND FILTERS (See page 193 and 196 for details)
2	623234	3	HOSE, suction line
	921913	12	CLAMP, hose, 1-13/16" to 2-3/4" diam.
3	641776	1	TUBE, suction line, front section
4	632986	1	TUBE, suction line, rear section (Model HD16D)
	632489	1	TUBE, suction line, rear section (Model HD16DC)
5	623235	3	CLIP, suction tube supporting
6	035221	1	CAPSCREW, 1/2"NC x 1"
7	035525	2	CAPSCREW, 1/2"NF x 1-1/8"
	904208	3	LOCKWASHER, 1/2"
	910244	3	WASHER, plain, SAE std., 1/2"
8	623612	1	ELBOW, suction tube
9	092013	3	CAPSCREW, 3/8"NC x 1-1/8", Nylok
	904206	3	LOCKWASHER, 3/8"
10	623616	1	GASKET, suction tube elbow
11	641669	1	COVER, transmission sump
12	095779	9	CAPSCREW, Nylok, 1/2"NC x 1-1/2"
	904208	9	LOCKWASHER, 1/2"
13	623617	1	GASKET, transmission sump cover
14	641754	1	PIPE, suction line
	917463	1	CAPSCREW, socket-hd., 1/4"NC x 1-1/2"
15	645239	1	HOSE, filter to valve, top (See HOSE PARTS)
	919342	1	CONNECTOR, flare type, 3/4" tube, 3/4"NPT male
	919615	1	CONNECTOR, flare type, 3/4" tube, 1/2"NPT male (Used prior to tractor #7550 excluding #7548)
	922935	1	CONNECTOR, flare type, 3/4" tube, 3/4"NF male end (Includes O-RING 921349)(Effective with tractor #7550 including #7548)
16	645082	1	HOSE, filter to valve, bottom (See HOSE PARTS)
	919342	1	CONNECTOR, flare type, 3/4" tube, 3/4"NPT male
	919615	1	CONNECTOR, flare type, 3/4" tube, 1/2"NPT male (Used prior to tractor #7550 excluding #7548)
	922935	1	CONNECTOR, flare type, 3/4" tube, 3/4"NF male end (Includes O-RING 921349)(Effective with tractor #7550 including #7548)
17	621451	6	CLIP, hose supporting (1-1/16" diam.)(Used prior to tractor #6965)
	644612	6	CLIP, hose supporting (1-3/16" diam.)(Effective with tractor #6965)
18	035439	2	CAPSCREW, 3/8"NC x 1"
19	036034	1	CAPSCREW, 3/8"NF x 1"
	904206	3	LOCKWASHER, 3/8"
	911115	3	WASHER, plain, SAE std., 3/8"
	911041	1	NUT, 3/8"NF
20	630280	1	ANGLE, hose supporting, rear

(Continued)

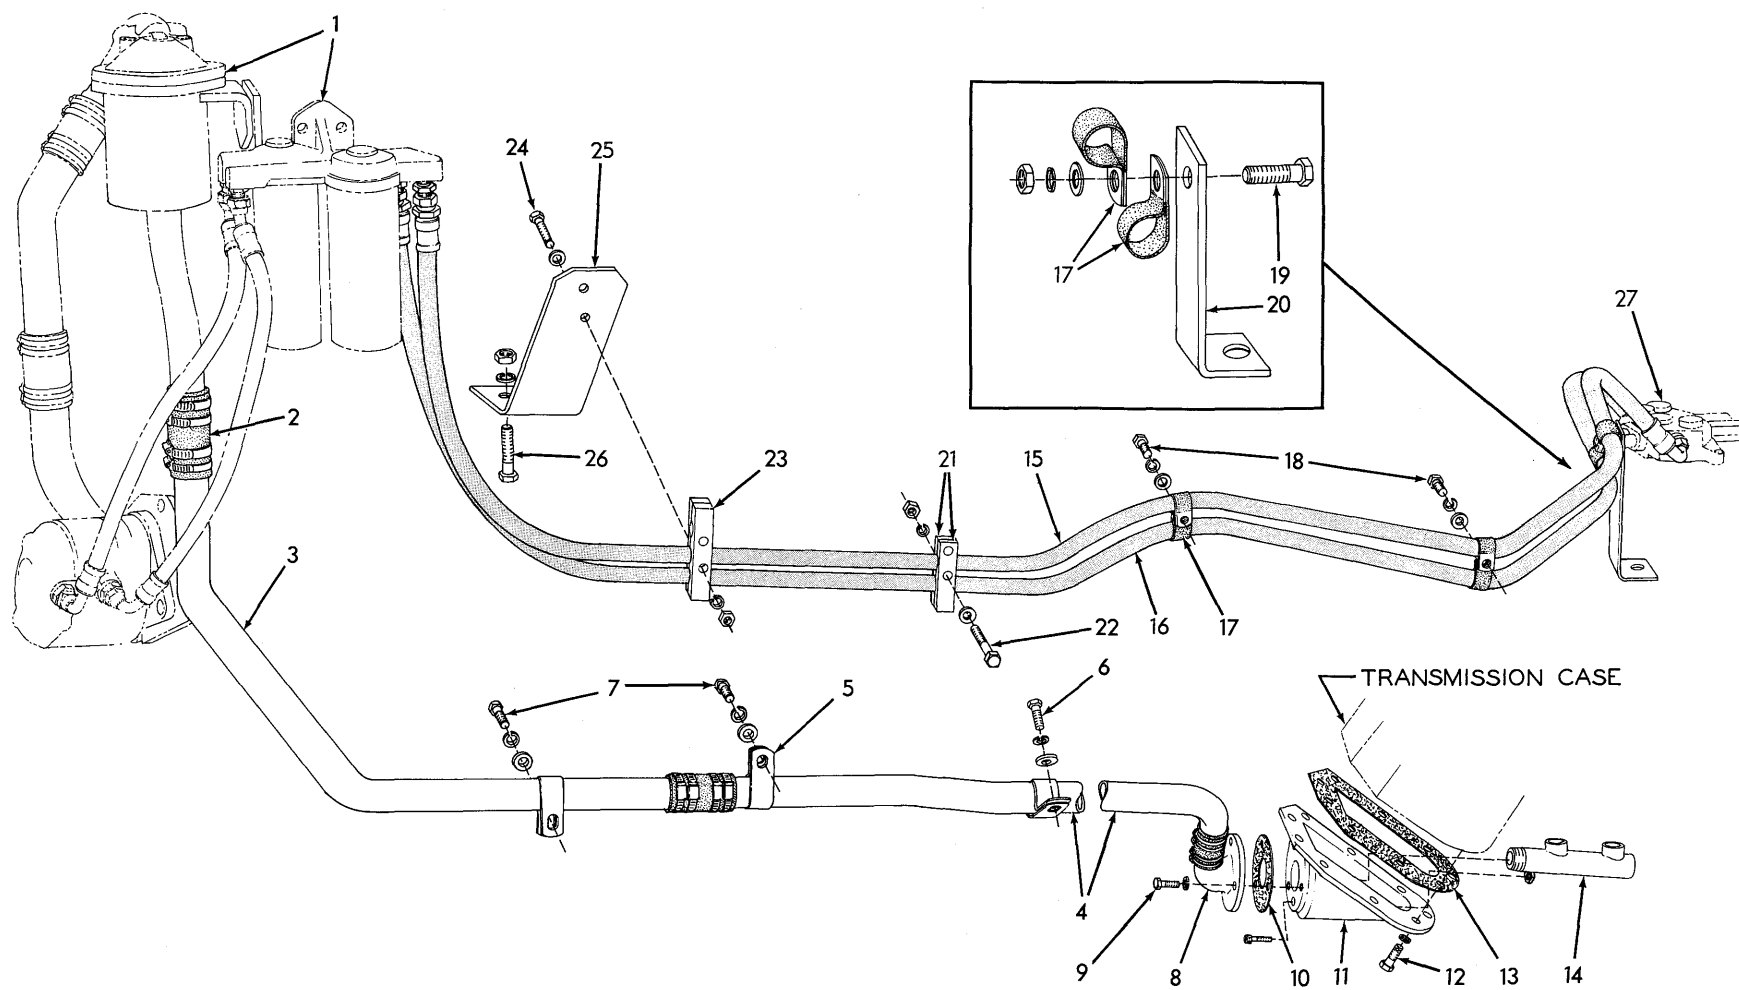


HYDRAULIC STEERING CONTROL

T-73637

HYDRAULIC STEERING CONTROL (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
21	623281	2	CLAMP, hose supporting, short (half-only)(Used prior to tractor #6965)
	644611	2	CLAMP, hose supporting, short (half-only)(Effective with tractor #6965)
22	620253	2	CAPSCREW, 3/8"NF x 2-3/4"
	044973	2	WASHER, plain
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
23	630298	2	CLAMP, hose supporting, long (half-only)(Used prior to tractor #6965)
	646345	2	CLAMP, hose supporting, long (half-only)(Effective with tractor #6965)
24	620253	2	CAPSCREW, 3/8"NF x 2-3/4"
	044973	2	WASHER, plain
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
25	642204	1	ANGLE, hose supporting, front (Used prior to tractor #6965)
	646127	1	ANGLE, hose supporting, front (Effective with tractor #6965)
26	035712	2	CAPSCREW, 1/2"NC x 2-1/4"
	904208	2	LOCKWASHER, 1/2"
	911028	2	NUT, 1/2"NC
27	-----	-	VALVE (See CONTROL VALVE AND LINES)

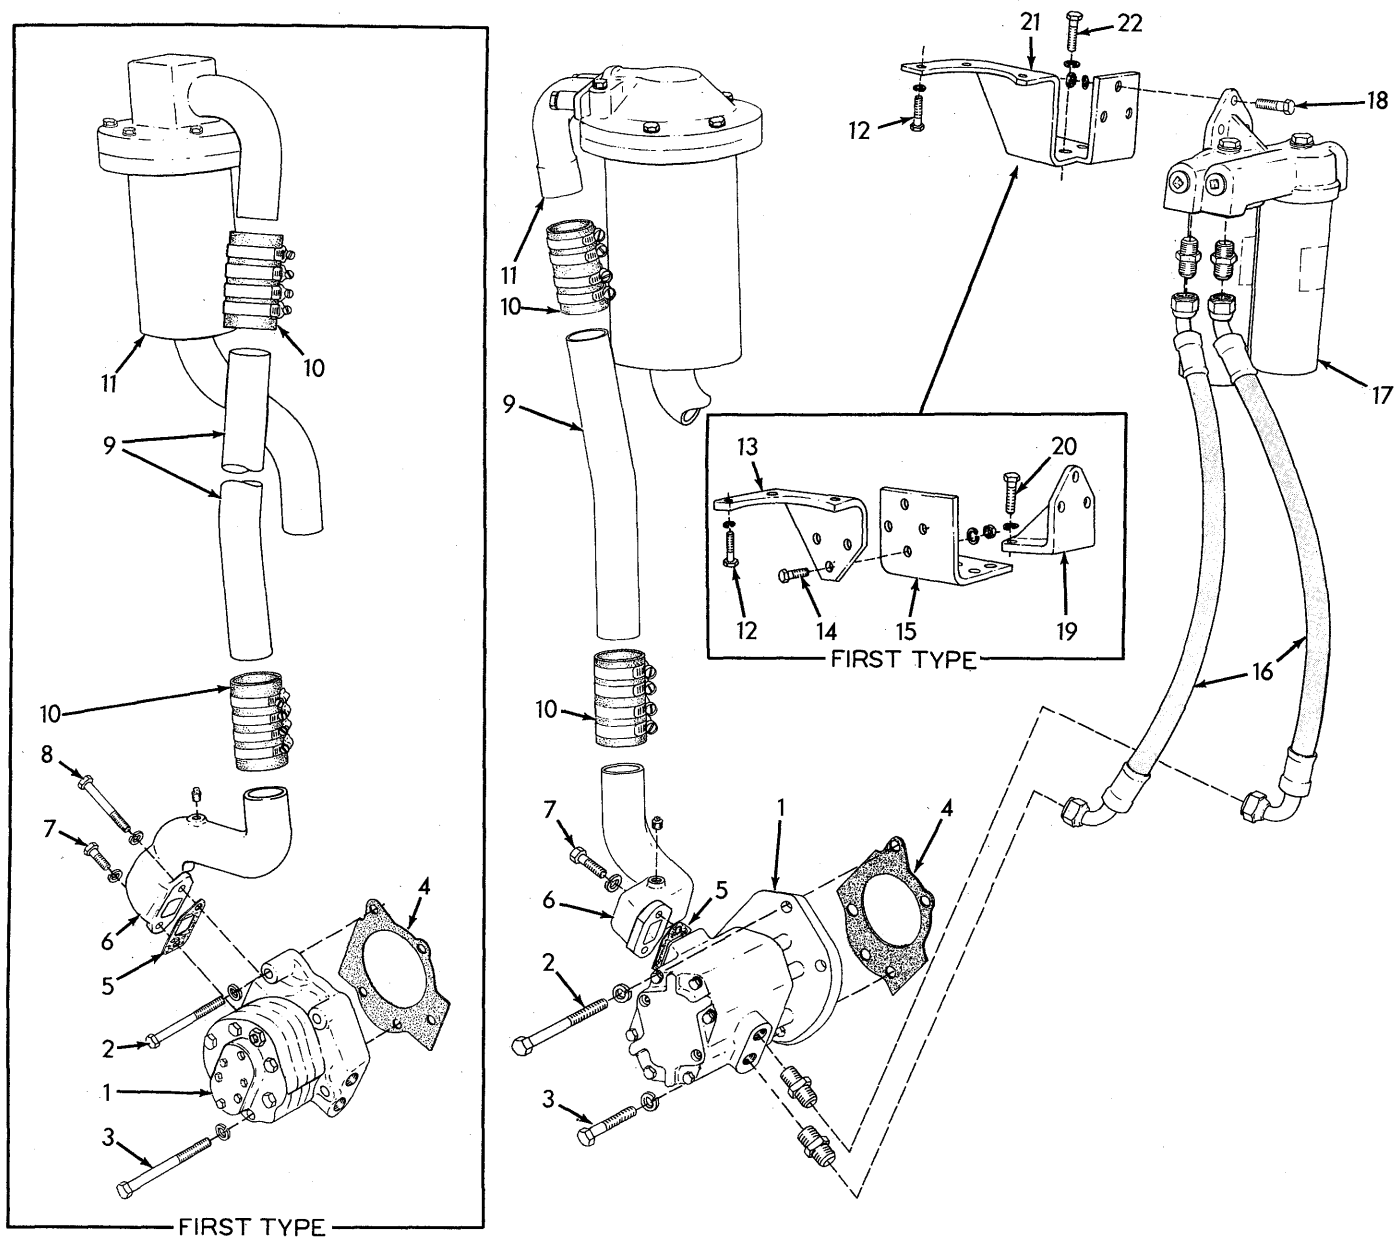

STEERING PUMP AND FILTERS (First type)-

T-70456

STEERING PUMP AND FILTERS

USAGE: Tractors prior to serial No. 7722

*Used prior to engine serial No. 16-05531
 **Effective with engine serial No. 16-05531

ITEM	PART NO.	QTY. * **	DESCRIPTION
1	099915	1 -	PUMP ASSEMBLY ("Roper." See page 198 for parts)(Can be replaced by PUMP ASSEMBLY 638911 or PUMP ASSEMBLY 654180, 3 CAPSCREW 082013, 2 CAPSCREW 041250 and 1 TUBE 641877)
	641625	- 1	PUMP ASSEMBLY ("Webster." See page 199 for parts)(Order PUMP ASSEMBLY 655782, ELBOW 655998, GASKET 655999, 2 CAPSCREW 044249, 2 LOCKWASHER 904206 and 2 CONNECTOR 922981)
	638911	1 -	PUMP ASSEMBLY ("Webster." See 199 for parts)(Used as service replacement for PUMP ASSEMBLY 099915)
	654180	1 -	PUMP ASSEMBLY ("Cessna." See page 201 for parts)(Used as service replacement for PUMP ASSEMBLY 099915)
2	082937	3 -	CAPSCREW, 3/8"NC x 4-1/2"
	082013	- 3	CAPSCREW, 3/8"NC x 3-1/4"
3	904206	3 3	LOCKWASHER, 3/8"
	622781	2 -	CAPSCREW, 7/16"NC x 4-7/8"
	041250	- 2	CAPSCREW, 7/16"NC x 1-1/4"
	904207	2 2	LOCKWASHER, 7/16"
4	4371742	1 1	GASKET, pump mounting
5	082811	1 1	GASKET, inlet elbow
6	639850	1 1	ELBOW, pump inlet (Used prior to tractor #6906)
	643570	- 1	ELBOW, pump inlet (Effective with tractor #6906)
7	901651	1 1	PLUG, pipe, 1/8"NPT
	041250	1 2	CAPSCREW, 7/16"NC x 1-1/4" (One (1) less used with ELBOW 639850)
8	082905	1 1	CAPSCREW, 7/16"NC x 3-1/4" (Used prior to tractor #6906)
	904207	2 2	LOCKWASHER, 7/16"
9	641771	1 -	TUBE, pump inlet
	641877	- 1	TUBE, pump inlet (Tractors prior to #6906)
	643573	- 1	TUBE, pump inlet (Tractors #6906 and up)
10	623234	2 2	HOSE, suction line
	921913	8 8	CLAMP, hose, 1-13/16" to 2-3/4" diam.
11	641722	1 1	FILTER ASSEMBLY, suction line (See page 195 for parts)(Used prior to tractor #6906)
	643606	- 1	FILTER ASSEMBLY, suction line (See page 195 for parts)(Effective with tractor #6906)
12	070469	3 3	CAPSCREW, 1/2"NF x 1-1/4"
	904208	3 3	LOCKWASHER, 1/2"

(Continued)


STEERING PUMP AND FILTERS (Continued)

ITEM	PART NO.	QTY. * **		DESCRIPTION
13	641689	1	1	BRACKET, suction line filter, front (Used prior to tractor #6847)
14	035073	3	3	CAPSCREW, 1/2" x 1-1/4"
	904208	3	3	LOCKWASHER, 1/2"
	911043	3	3	NUT, 1/2"NF
15	641760	1	1	BRACKET, suction line filter, rear (Used prior to tractor #6847)
16	647414	2	2	HOSE, pump to filter (See HOSE PARTS)
	919615	2	2	CONNECTOR, flare type, 3/4" tube, 1/2"NPT male
	919342	2	2	CONNECTOR, flare type, 3/4" tube, 3/4"NPT male
17	633797	1	1	FILTER ASSEMBLY, pressure line (See page 194 for parts)
18	035073	3	3	CAPSCREW, 1/2"NF x 1-3/4"
	904208	3	3	LOCKWASHER, 1/2"
	911043	3	3	NUT, 1/2"NF
19	633385	1	1	BRACKET, filter mounting (Used prior to tractor #6847)
20	035236	4	4	CAPSCREW, 1/2"NC x 1-3/4"
	904208	4	4	LOCKWASHER, 1/2"
21	645101	-	1	BRACKET, filter mounting (Effective with tractor #6847)
22	035061	-	4	CAPSCREW, 1/2"NC x 1-1/4"
	904208	-	4	LOCKWASHER, 1/2"


NOTE: See PAINTING AND MARKING for transfers

FILTER ASSEMBLY 633797

USAGE: See pages 193 and 197

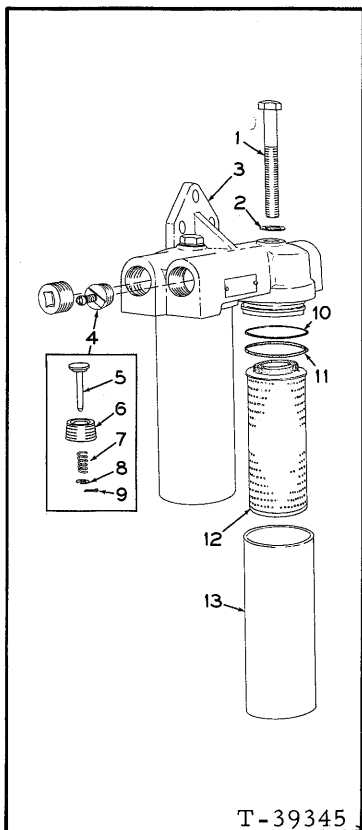


ITEM	PART NO.	QTY.	DESCRIPTION
1	638796	2	CAPSCREW, tank retaining (5/8"NF x 5")
2	631869	2	WASHER, tank retaining capscREW
3	633310	1	HEAD
	901661	2	PLUG, pipe, ctsk-hd., 1"NPT
4	633995	2	VALVE ASSEMBLY, by-pass (Consists of items 5 thru 9)
5	-----	2	VALVE, by-pass (Order item 4)
6	-----	2	HOUSING, by-pass valve (Order item 4)
7	631870	2	SPRING, by-pass valve
8	632060	2	WASHER, by-pass valve spring
9	{ 632061	2	RING, snap, by-pass valve (Early units)
	900970	2	PIN, cotter, 1/16" x 1/2" (Late units)
10	632062	2	RING, back-up, filter head o-ring
11	632063	2	O-RING, filter head
12	631828	2	ELEMENT KIT (Includes items 2, 10 and 11)
13	631872	2	TANK

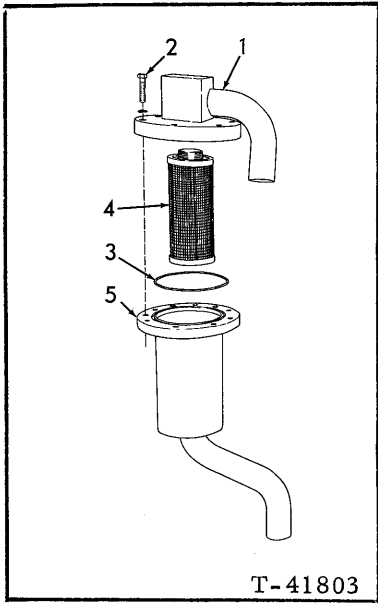

FILTER ASSEMBLY 641722

USAGE: Tractors prior to serial No. 6906. See page 193


ITEM	PART NO.	QTY.	DESCRIPTION
1	641700	1	COVER
2	035336	6	CAPSCREW, 3/8"NF x 1-3/4"
	904206	6	LOCKWASHER, 3/8"
3	923824	1	O-RING
4	623268	1	SCREEN
5	641758	1	HOUSING

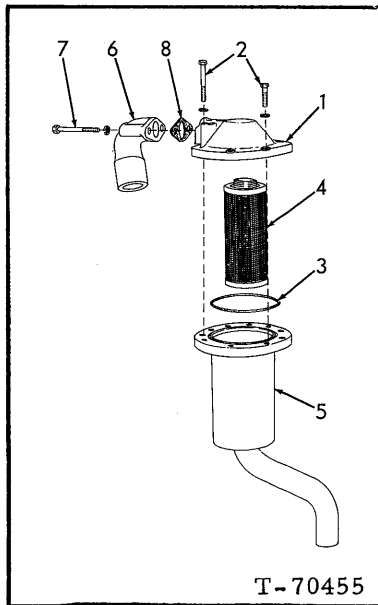

FILTER ASSEMBLY 643606

USAGE: Tractors serial No. 6906 and up. See pages 193 and 197

ITEM	PART NO.	QTY.	DESCRIPTION
1	644827	1	COVER
2	012992	4	CAPSCREW, 3/8"NF x 1-1/4"
	914339	2	CAPSCREW, 3/8"NF x 2-3/4"
	904206	6	LOCKWASHER, 3/8"
3	923824	1	O-RING
4	623268	1	SCREEN
5	641758	1	HOUSING
6	644828	1	ELBOW, outlet
7	058936	2	CAPSCREW, 3/8"NC x 2-3/4"
	904206	2	LOCKWASHER, 3/8"
8	644816	1	GASKET, outlet elbow

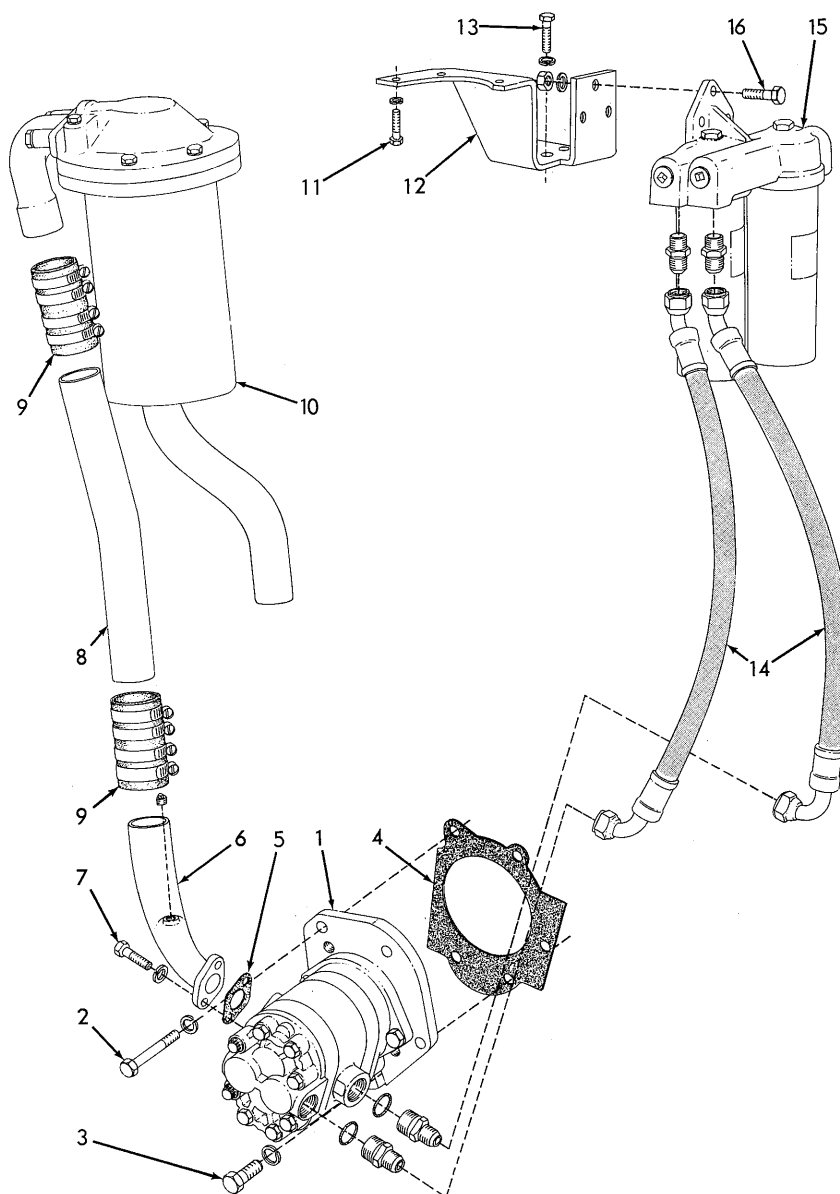

STEERING PUMP AND FILTERS

T-72813

USAGE: Tractors serial No. 7722 and up

ITEM	PART NO.	QTY.	DESCRIPTION
1	655782	1	PUMP ASSEMBLY ("Cessna." See page 202 for parts)
2	082013	3	CAPSCREW, 3/8"NC x 3-1/4"
	904206	3	LOCKWASHER, 3/8"
3	041250	2	CAPSCREW, 7/16"NC x 1-1/4"
	904207	2	LOCKWASHER, 7/16"

4 4371742 1 GASKET, pump mounting


5 655999 1 GASKET, inlet elbow

(Continued)

STEERING PUMP AND FILTERS (Continued)


ITEM	PART NO.	QTY.	DESCRIPTION
6	655998	1	ELBOW, pump inlet
	901651	1	PLUG, pipe, 1/8"NPT
7	044249	2	CAPSCREW, 3/8"NC x 1-1/8"
	904206	2	LOCKWASHER, 3/8"
8	643573	1	TUBE, pump inlet
9	623234	2	HOSE, suction line
	921913	8	CLAMP, hose, 1-13/16" to 2-3/4" diam.
10	643606	1	FILTER ASSEMBLY, suction line (See page 195 for parts)
11	070469	3	CAPSCREW, 1/2"NF x 1-1/4"
	904208	3	LOCKWASHER, 1/2"
12	645101	1	BRACKET, filter mounting
13	035061	4	CAPSCREW, 1/2"NC x 1-1/4"
	904208	4	LOCKWASHER, 1/2"
14	647414	2	HOSE, pump to filter (See HOSE PARTS)
	919342	2	CONNECTOR, flare type, 3/4" tube, 3/4"NPT male
	922981	2	CONNECTOR, flare type, 3/4" tube, 1-1/16" straight male thread (Includes O-RING 921207)
15	633797	1	FILTER ASSEMBLY, pressure line (See page 194 for parts)
16	035073	3	CAPSCREW, 1/2"NF x 1-3/4"
	904208	3	LOCKWASHER, 1/2"
	911043	3	NUT, 1/2"NF

NOTE: See PAINTING AND MARKING for transfers

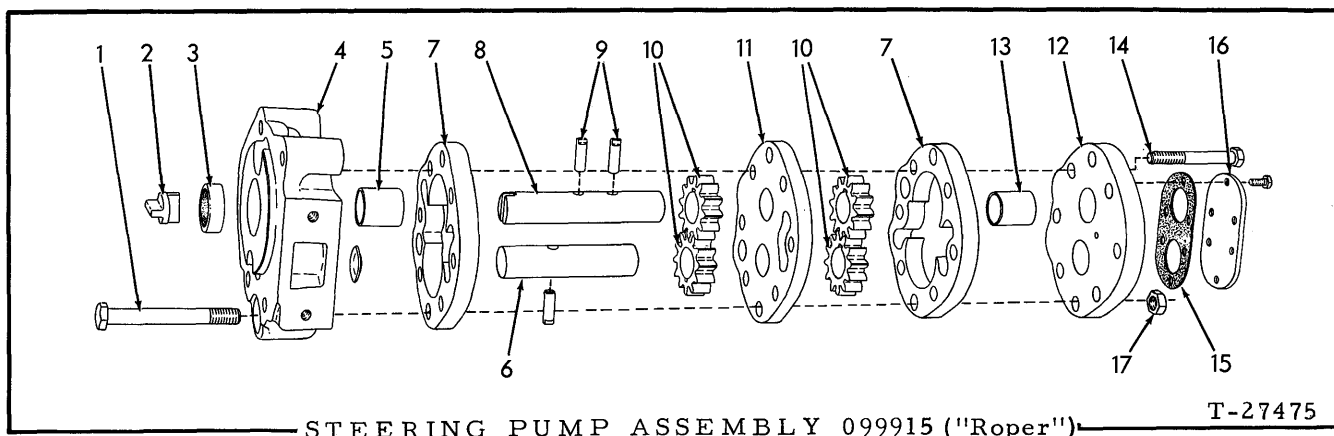



USAGE: See page 193

ITEM	PART NO.	QTY.	DESCRIPTION
1	622789	2	CAPSCREW, 1/2"NC x 4-1/2"
2	645109	1	COUPLING, driving shaft
3	090655	1	SEAL, oil, driving shaft
4	099914 910005	1 1	PLATE ASSEMBLY, back (Includes item 5 and PLUG indented below) PLUG, expansion, 1-1/8" diam.
5	059776	2	BEARING, back plate
6	099912	1	SHAFT, idling gears
7	099910	2	CASE
8	099913	1	SHAFT, driving
9	059782	3	PIN, gear driving
10	099916	4	GEAR
11	099911	1	SPACER
12	099917	1	PLATE ASSEMBLY, front (Includes item 13)
13	059776	2	BEARING, front plate
14	088736	4	CAPSCREW (7/16"NC x 3")
15	059778	1	GASKET, cover plate
16	632112 903625	1 6	PLATE, cover CAPSCREW, 1/4"NC x 3/4"
17	622790	2	NUT, doweling cap screw (1/2"NC)

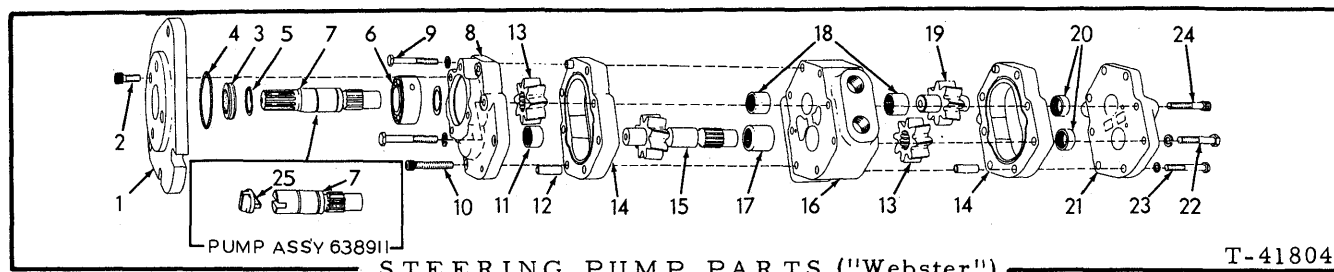

* PUMP ASSEMBLY 638911 (tang-drive)
 ** PUMP ASSEMBLY 641625 (spline-drive) } See page 193

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	643449	1	1	PLATE ASSEMBLY, adapting (Includes item 3)
2	643551	4	4	CAPSCREW, socket-hd., 5/16"NC x 3/4"
3	643438	1	1	SEAL, oil
4	3039053	1	1	O-RING, adapting plate
5	628161	2	2	RING, snap, drive shaft
6	4255031	1	1	BEARING, ball
7	644354	1	-	SHAFT, drive (slotted end)
	644913	-	1	SHAFT, drive (splined end)
8	643496	1	1	BODY ASSEMBLY (Includes item 11)
	921160	4	4	CAPSCREW, 5/16"NC x 2-1/4"
	904205	4	4	LOCKWASHER, 5/16"
9	054305	2	2	CAPSCREW, 1/4"NC x 2"
	904204	2	2	LOCKWASHER, 1/4"
10	643553	2	2	CAPSCREW, socket-hd., 5/16"NC x 1-1/2"
11	208253	1	1	BEARING, needle, driven shaft (short)
12	643544	4	4	PIN, dowel (hollow)
13	643545	2	2	GEAR (splined)
14	643534	2	2	PLATE, gear housing
15	644898	1	1	SHAFT ASSEMBLY, driven (Includes gear. Serviced only as a unit)
16	643492	1	1	PLATE ASSEMBLY, center (Includes items 17 and 18)
17	643494	1	1	BEARING, needle, driven shaft (long)
18	208253	2	2	BEARING, needle
19	644897	1	1	SHAFT ASSEMBLY, idler (Includes gear. Serviced only as a unit)
20	4254654	2	2	BEARING, needle, pump cover
21	643491	1	1	COVER ASSEMBLY (Includes item 20)
22	051473	4	4	CAPSCREW, 5/16"NC x 1-3/4"
	904205	4	4	LOCKWASHER, 5/16"
23	054305	2	2	CAPSCREW, 1/4"NC x 2"
	904204	2	2	LOCKWASHER, 1/4"
24	643552	2	2	CAPSCREW, socket-hd., 5/16"NC x 1-3/4"
25	645109	1	-	COUPLING, drive

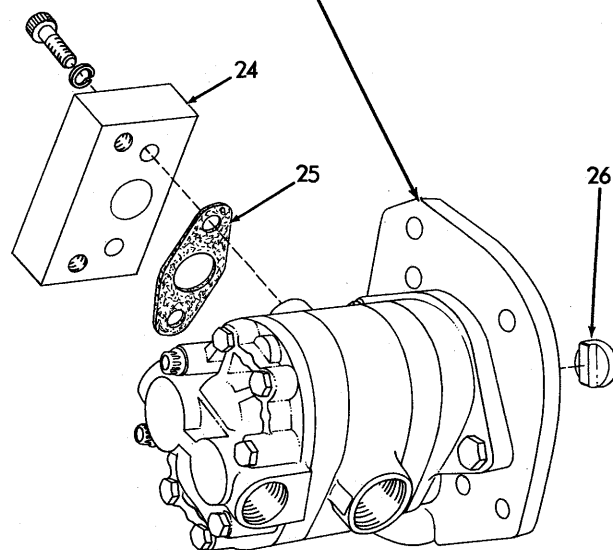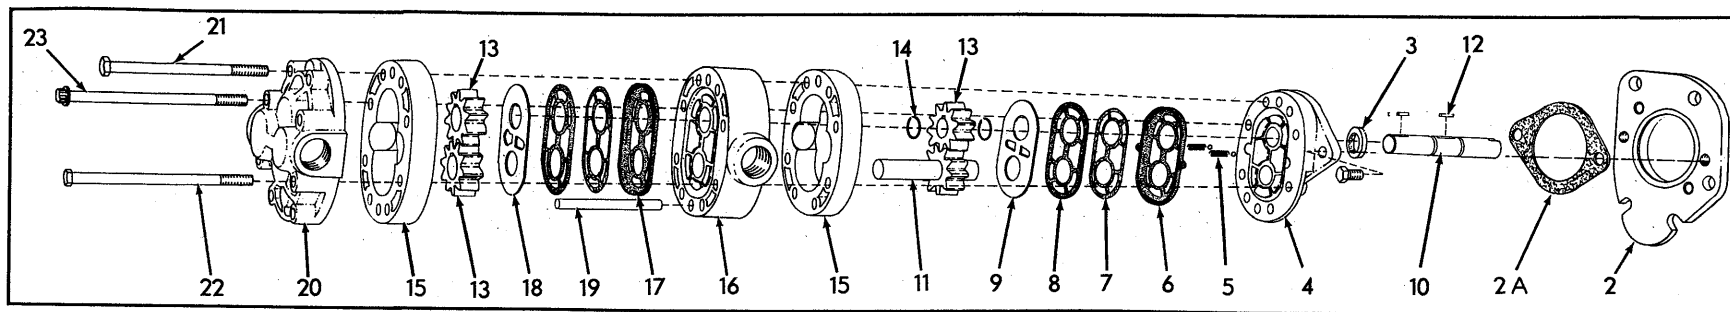


STEERING PUMP ASSEMBLY 654180 ("Cessna")

T-72496

STEERING PUMP ASSEMBLY 654180 ("Cessna")


USAGE: See page 193

ITEM	PART NO.	QTY.	DESCRIPTION
-	654180	1	PUMP ASSEMBLY (Items 1 thru 26)
1	654074	1	PUMP ASSEMBLY (Items 2 thru 23)
2	653932	1	PLATE, adapting
	916222	2	CAPSCREW, 7/16"NC x 7/8"
2A	656179	1	GASKET, front plate
3	650677	1	SEAL, oil
4	653929	1	PLATE ASSEMBLY, front (Includes bushings)
5	650679	2	SPRING, check valve
	915903	2	BALL, steel, 7/32" diam.
6	650673	1	SEAL, front diaphragm
7	650676	2	GASKET, diaphragm (thin)
8	650675	2	GASKET, diaphragm (thick)
9	650674	1	DIAPHRAGM, sealing, front
10	655564	1	SHAFT, drive
11	653931	1	GEAR ASSEMBLY, idler (Includes shaft)
12	650672	2	KEY, pump gear
13	650189	3	GEAR, pump
14	653936	2	RING, snap, pump gear
15	650193	2	BODY, outer
16	653934	1	BODY, center (Includes bushings)
17	650678	1	SEAL, rear diaphragm
18	827650	1	DAIPHRAGM, sealing, rear
19	653937	2	PIN, dowel
20	653930	1	PLATE, rear
21	919223	4	CAPSCREW, 5/16"NC x 4-1/2"
22	924226	2	CAPSCREW, 5/16"NC x 5"
23	924227	2	SCREW, 12 pt-hd., 5/16"NC x 5"
24	654089	1	ADAPTER, inlet
	912267	2	CAPSCREW, hex-socket-hd., 3/8"NC x 1"
	904206	2	LOCKWASHER, 3/8"
25	655999	1	GASKET, inlet adapter
26	645109	1	COUPLING

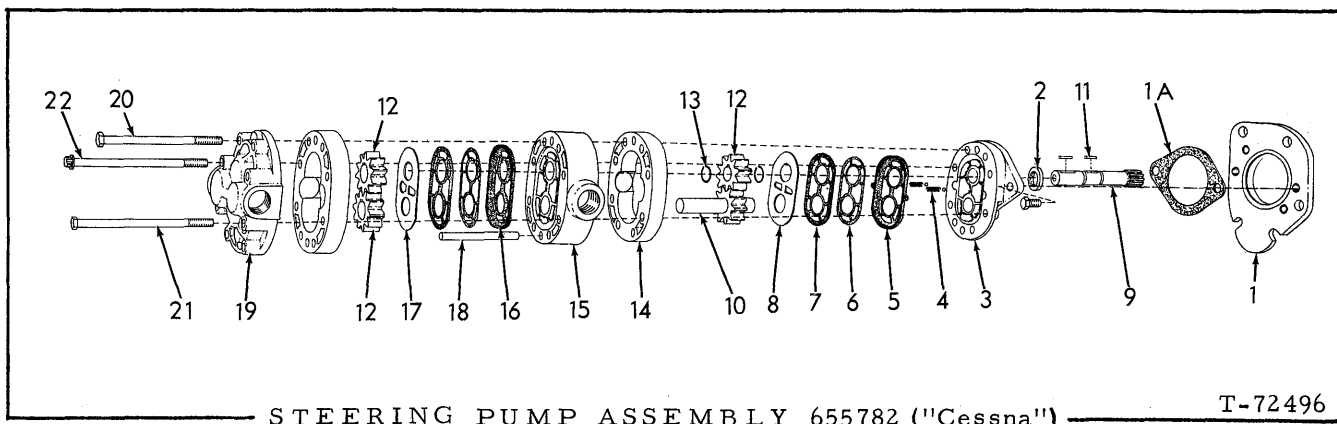

USAGE: See page 196

ITEM	PART NO.	QTY.	DESCRIPTION
1	653932	1	PLATE, adapting
	916222	2	CAPSCREW, 7/16"NC x 7/8"
1A	656179	1	GASKET, front plate
2	650677	1	SEAL, oil
3	653929	1	PLATE ASSEMBLY, front (Includes bushings)
4	650679	2	SPRING, check valve
	915903	2	BALL, steel, 7/32" diam.
5	650673	1	SEAL, front diaphragm
6	650676	2	GASKET, diaphragm (thin)
7	650675	2	GASKET, diaphragm (thick)
8	650674	1	DIAPHRAGM, sealing, front
9	653933	1	SHAFT, drive
10	653931	1	GEAR ASSEMBLY, idler (Includes shaft)
11	650672	2	KEY, pump gear
12	650189	3	GEAR, pump
13	653936	2	RING, snap, pump gear
14	650193	2	BODY, outer
15	653934	1	BODY, center (Includes bushings)
16	650678	1	SEAL, rear diaphragm
17	827650	1	DIAPHRAGM, sealing, rear
18	653937	2	PIN, dowel
19	653930	1	PLATE, rear
20	919223	4	CAPSCREW, 5/16"NC x 4-1/2"
21	924226	2	CAPSCREW, 5/16"NC x 5"
22	924227	2	SCREW, 12 pt-hd., 5/16"NC x 5"

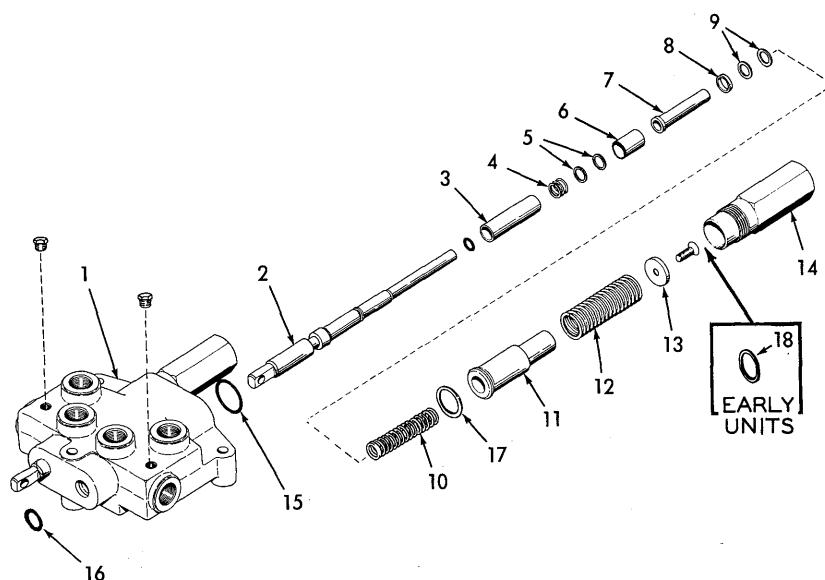


CONTROL VALVE ASSEMBLY 651432 ("Cessna")

T-72040

USAGE: See page 206

ITEM	PART NO.	QTY.	DESCRIPTION
1	-----	1	BODY (Not serviced separately)
	919134	2	PLUG, pipe, hex-hd., 1/8"NPT
2	-----	2	PLUNGER (Not serviced separately)
3	651564	2	PISTON, pressure regulating
4	651569	2	SPRING, pressure regulating (short)
5	{ 651576	-	SHIM, pressure adjustment (.015" thick)
	{ 651577	-	SHIM, pressure adjustment (.005" thick)
6	651571	2	SLEEVE, valve plunger (outer)
7	651572	2	SLEEVE, valve plunger (inner)
8	651573	2	WASHER, valve plunger
9	{ 651574	-	SHIM, pressure adjustment (.015" thick)
	{ 651575	-	SHIM, pressure adjustment (.005" thick)
10	661676	2	SPRING, pressure regulating (long)
11	651565	2	SLEEVE, plunger return spring
12	651570	2	SPRING, plunger return
13	651567	2	WASHER, end, valve plunger
	924989	2	SCREW, machine, flat-hd., 1/4"NF x 7/8"
14	651566	2	CAP, valve plunger
15	924416	2	O-RING, valve body (large)
16	923645	2	O-RING, valve body (small)
17	663123	2	SHIM, plunger clearance (Late units)
18	663124	2	SHIM, plunger clearance (Early units)

Use as req'd

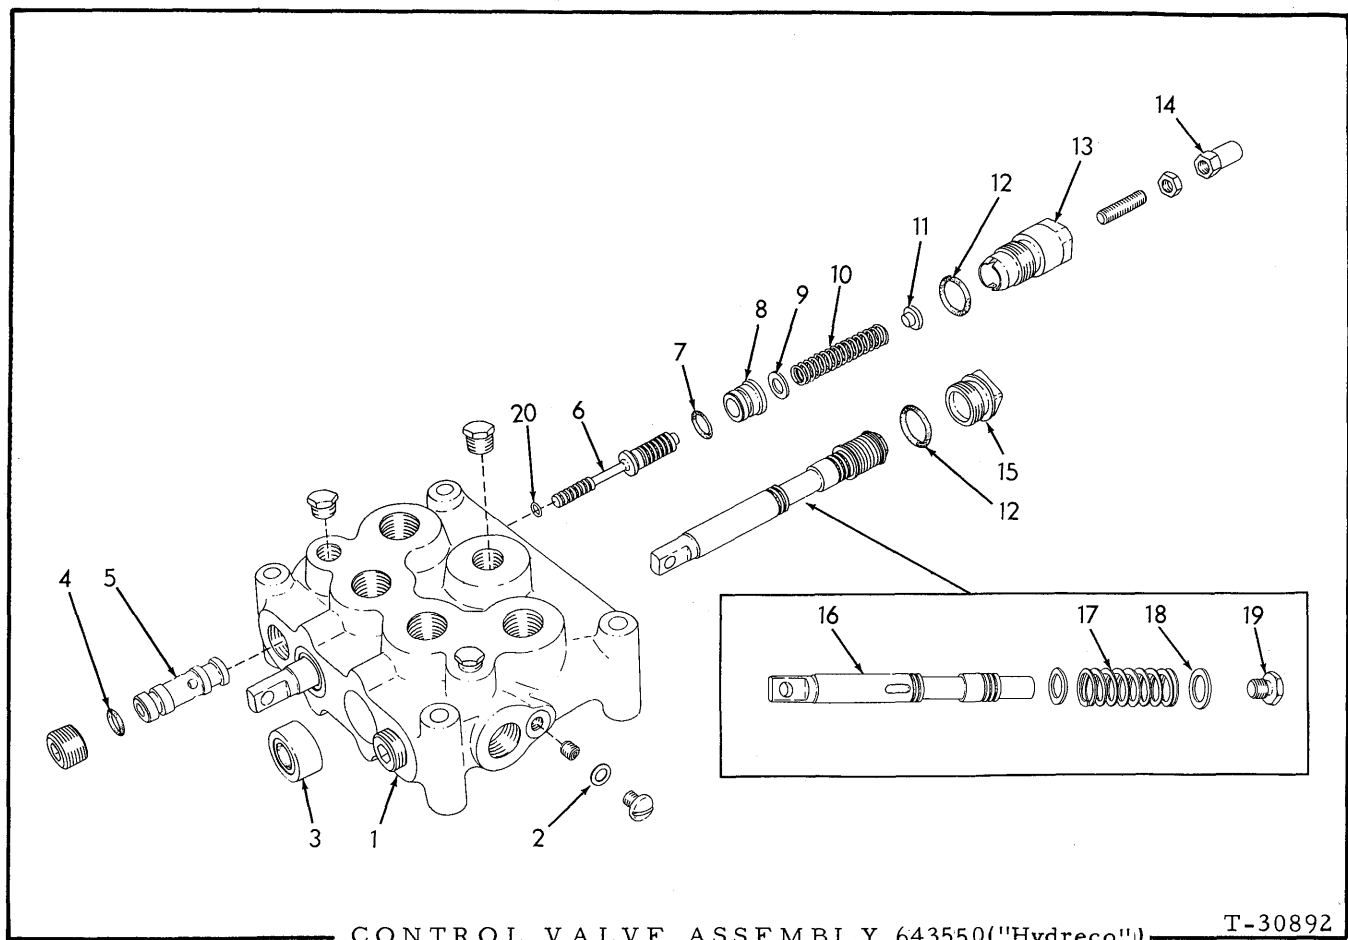

CONTROL VALVE ASSEMBLY 643550("Hydreco") T-30892


USAGE: See page 206

ITEM	PART NO.	QTY.	DESCRIPTION
1	-----	1	HOUSING (Not serviced separately)
	919840	2	PLUG, pipe, hex-hd., 1/4"NPT
	920333	1	PLUG, pipe, hex-hd., 3/8"NPT
	908944	2	PLUG, pipe, hex-socket, 1/2"NPT
	900585	2	SCREW, machine, 5/16"NC x 5/8"
2	3001737	2	GASKET, plugging screw
3	623420	2	SEAL, oil, operating plunger
4	923548	2	O-RING, relief valve front seat
5	3014007	2	SEAT, relief valve, front
	905564	2	SETSCREW, hex-socket, cup-pt., 5/16"NC x 5/8"
6	623431	2	PLUNGER, relief valve
7	923376	2	O-RING, relief valve rear seat
8	623430	2	SEAT, relief valve, rear
9	631935	2	WASHER, relief valve plunger
10	630528	2	SPRING, relief valve

(Continued)

CONTROL VALVE ASSEMBLY 643550 ("Hydreco") (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
11	623427	2	GUIDE, relief valve spring
12	923574	4	O-RING, rear caps
13	623428	2	CAP, relief valve adjustment
	921303	2	SETSCREW, oval-pt., 3/8"NF x 1-1/2"
	911048	2	NUT, jam, 3/8"NF
14	3002757	2	NUT, acorn, relief valve
15	623429	2	CAP, operating plunger
16	-----	2	PLUNGER, operating (Not serviced separately)
17	627378	2	SPRING, operating plunger
18	627377	4	WASHER, operating plunger
19	627380	2	CAP, operating plunger
20	655743	2	O-RING, relief valve plunger

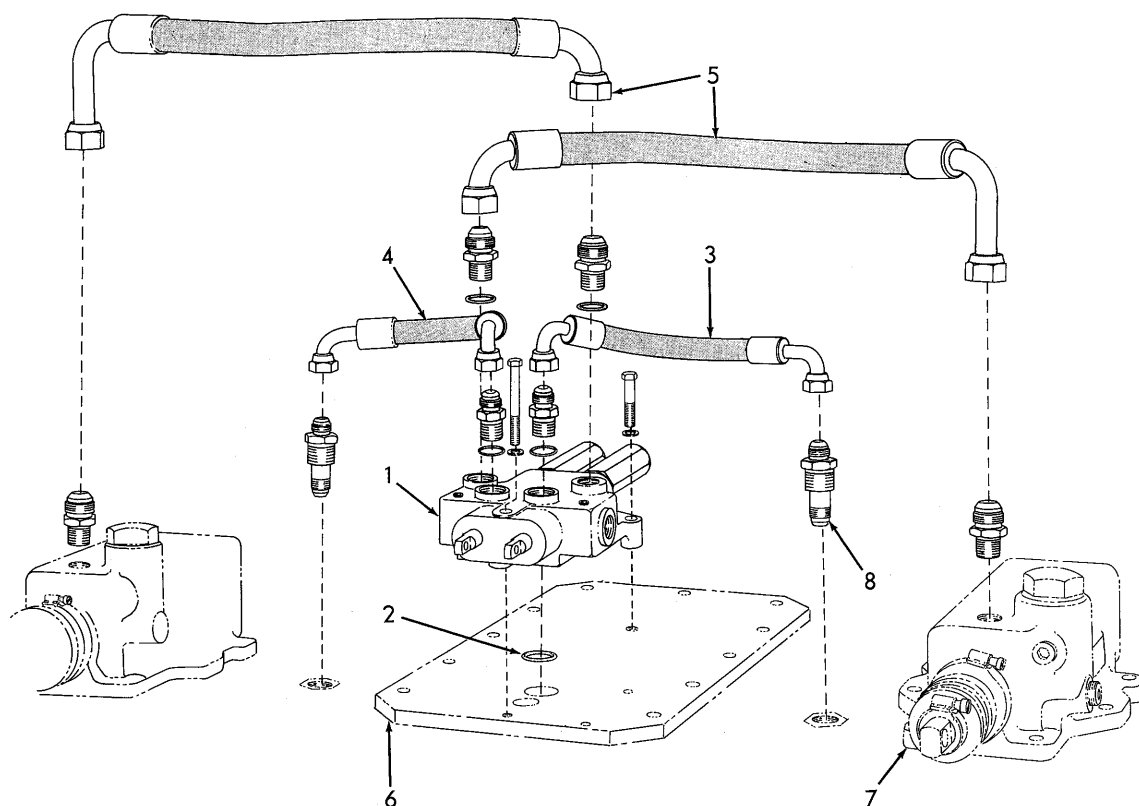

STEERING CONTROL VALVE AND LINES

T-72372

* Tractors prior to serial No. 7550, excluding No. 7548


** Tractors serial No. 7550 and up, including No. 7548

ITEM	PART NO.	QTY.	DESCRIPTION
		* **	
1	643550	1 -	VALVE ASSEMBLY ("Hydrec." See page 204 for parts)(Order VALVE ASSEMBLY 651432, 1 CAPSCREW 620253, 2 CAPSCREW 035336, 2 CONNECTOR 921409, 4 CONNECTOR 922935 and print of S-4430)
	917151	4 -	CAPSCREW, 3/8"NF x 3-1/4"
	904206	4 -	LOCKWASHER, 3/8"
	651432	- 1	VALVE ASSEMBLY ("Cessna." See page 203 for parts)
	620253	- 1	CAPSCREW, 3/8"NF x 2-3/4"
	035336	- 2	CAPSCREW, 3/8"NF x 1-3/4"
	904206	- 3	LOCKWASHER, 3/8"
2	923575	1 -	O-RING, valve to compartment cover
	923947	- 1	O-RING, valve to compartment cover
3	644604	1 1	HOSE, clutch control, left (See HOSE PARTS)
	919128	1 -	CONNECTOR, flare type, 1/2" tube, 1/2"NPT male
	921409	- 1	CONNECTOR, flare type, 1/2" tube, 3/4"NF male end (Includes O-RING 921349)
4	644603	1 1	HOSE, clutch control, right (See HOSE PARTS)
	919128	1 -	CONNECTOR, flare type, 1/2" tube, 1/2"NPT male
	921409	- 1	CONNECTOR, flare type, 1/2" tube, 3/4"NF male end (Includes O-RING 921349)

(Continued)

STEERING CONTROL VALVE AND LINES (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
5	645237	2	2	HOSE, brake control (See HOSE PARTS)
	919615	4	2	CONNECTOR, flare type, 3/4" tube, 1/2"NPT male
	922935	-	2	CONNECTOR, flare type, 3/4" tube, 3/4"NF male end (Includes O-RING 921349)
6	-----	1	1	COVER, bevel gear compartment (See STEERING CLUTCH AND FINAL DRIVE HOUSING)
7	-----	2	2	VALVE ASSEMBLY (See BRAKES)
8	628458	2	2	UNION, bulkhead

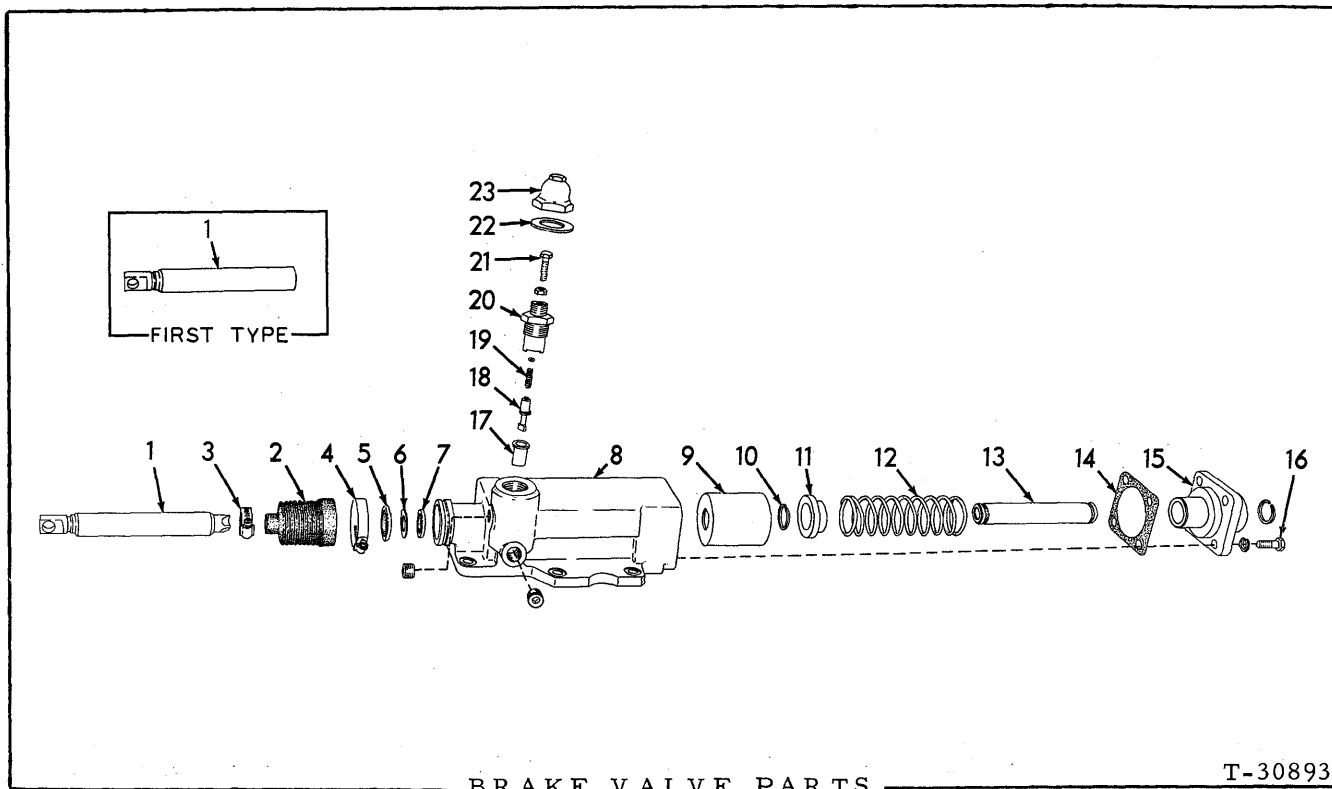

* 638600 VALVE ASSEMBLY
 ** 644136 VALVE ASSEMBLY
 *** 651467 VALVE ASSEMBLY } See page 211

ITEM	PART NO.	QUANTITY			DESCRIPTION
		*	**	***	
<u>NOTE:</u> All quantities are for one (1) Valve Assembly only					
1	623194	1	1	-	SPOOL, valve
	651451	-	-	1	SPOOL, valve
2	623195	1	1	1	BOOT, valve spool
3	921912	1	1	1	CLAMP, hose, 1-1/16" to 2" diam.
4	921913	1	1	1	CLAMP, hose, 1-13/16" to 2-3/4" diam.
5	623197	1	1	1	SEAL, outer
6	623489	1	1	1	WASHER, back-up, inner seal (vellumoid)
7	623198	1	1	1	SEAL, inner
8	623202	1	1	1	HOUSING
	908944	2	2	2	PLUG, pipe, hex-socket-hd., 1/2"NPT
9	623201	1	1	-	PISTON ASSEMBLY (Includes fulcrum pin)
	651464	-	-	1	PISTON ASSEMBLY (Includes fulcrum pin)
10	623206	2	2	2	RING, snap, actuating rod
11	623203	1	1	1	RETAINER, actuating rod spring
12	623204	1	1	1	SPRING, actuating rod

(Continued)

BRAKE VALVE PARTS (Continued)

ITEM	PART NO.	QUANTITY			DESCRIPTION
		*	**	***	
13	623207	1	1	1	ROD, actuating
14	623196	1	1	1	GASKET, actuating rod retainer
15	623205	1	1	1	RETAINER, actuating rod
16	614478	4	4	4	CAPSCREW, 1/2"NF x 1-3/8"
	904208	4	4	4	LOCKWASHER, 1/2"
17	623211	1	1	1	SEAT, relief valve
18	628019	1	1	1	VALVE, relief
19	623210	1	-	-	SPRING, relief valve
	068911	-	1	1	SPRING, relief valve
	911982	1	1	1	WASHER, plain
20	638563	1	1	1	CAP, relief valve spring
21	638561	1	1	1	CAPSCREW, pressure adjustment
	911048	1	1	1	NUT, jam, 3/8"NF
22	641148	1	1	1	GASKET, cap
23	638562	1	1	1	CAP, pressure adjustment screw


BRAKES

ITEM	PART NO.	QTY.	DESCRIPTION
1	638026	2	BAND ASSEMBLY, top section (Includes bonded lining)
2	638028	2	BAND ASSEMBLY, bottom section (Includes bonded lining)
3	638027	2	BAND ASSEMBLY, rear section (Includes bonded lining)
4	623130	2	PIN, band hinge
	912900	4	WASHER, plain
	900806	4	PIN, cotter, 1/8" x 1"
5	623168	2	SCREW, band adjusting (Tractors prior to #7820)
	650276	2	SCREW, band adjusting (Tractors #7820 and up)
6	623181	2	PIN, adjusting screw, upper band (Tractors prior to #7820)
	650275	2	PIN, adjusting screw, upper band (Tractors #7820 and up)
7	623180	2	SPRING, band adjusting screw
8	623179	2	NUT, band adjusting screw
9	623153	2	PIN, adjusting screw, bottom band
10	623560	2	DRIVE ASSEMBLY, universal, band adjustment (Serviced only as a unit)(Tractors prior to #7820)
	921330	2	PIN, spring, 7/32" x 1-1/8" (lower)
	920335	2	PIN, spring, 5/32" x 1-1/8" (upper)
	624076	2	WASHER, plain
	650273	2	DRIVE ASSEMBLY, universal, band adjustment (Serviced only as a unit)(Tractors #7820 and up)
	921330	2	PIN, spring, 7/32" x 1-1/8" (lower)
	921469	2	PIN, spring, 7/32" x 1" (upper)
10A	624193	2	SPRING, band adjustment
10B	650274	2	SLEEVE, band adjustment
10C	656679	2	SPACER, band adjustment sleeve
11	623144	2	GASKET, brake adjustment hole plug
12	653773	2	PLUG, brake adjustment hole
13	623132	2	PIN, top band
	900808	4	PIN, cotter, 1/8" x 1-1/2"
14	623133	2	YOKE, brake band, upper
15	623131	4	PIN, band yoke
16	623157	2	YOKE, brake band, lower (Used prior to tractor #6244)
	623158	2	YOKE, brake band, lower (Effective with tractor #6244)

(Continued)

B R A K E S (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
17	623637	2	BRACKET ASSEMBLY, band lever (Includes item 19)(Used prior to tractor #6244)
	642880	2	BRACKET ASSEMBLY, band lever (Includes item 19)(Effective with tractor #6244)
18	023465	12	CAPSCREW, 5/8"NF x 1-3/4"
	904209	12	LOCKWASHER, 5/8"
19	643740	2	PIN, dowel, band lever bracket
20	623774	2	LEVER ASSEMBLY, band operating (Includes item 21)(Used prior to tractor #6244)
	643138	2	LEVER ASSEMBLY, band operating (Includes item 21)(Effective with tractor #6244)
21	623164	2	BUSHING, band operating lever
22	623139	2	PIN, connecting rod, rear
	910302	2	PIN, cotter, 5/32" x 1-1/4"
23	623140	2	ROD, connecting
24	637729	2	PIN, connecting rod, front
	904003	2	PIN, cotter, 1/8" x 2-1/4"
25	637730	4	WASHER, plain
26	638818	2	EYE, connecting
	910847	2	NUT, jam, 3/4"NF
27	638600	2	VALVE ASSEMBLY, brake operating (See page 208 for parts)(Used prior to tractor #6244)
	644136	2	VALVE ASSEMBLY, brake operating (See page 208 for parts)(Used on tractor #6244 thru #7549 excluding #7548)
	651467	2	VALVE ASSEMBLY, brake operating (See page 208 for parts)(Effective with tractor #7550, including #7548)
28	908944	1	PLUG, pipe, hex-socket, 1/2"NPT
	614478	4	CAPSCREW, 1/2"NF x 1-3/8"
29	035073	3	CAPSCREW, 1/2"NF x 1-3/4"
30	035067	1	CAPSCREW, 1/2"NF x 2" (left valve only)
31	070403	4	CAPSCREW, 1/2"NF x 3"
	904208	12	LOCKWASHER, 1/2"
32	923575	2	O-RING, valve discharge port
33	623138	2	BOOT, connecting
	921914	4	CLAMP, hose, 2-5/16" to 3-1/4" diam.
34	623137	2	COVER, band linkage
35	035278	4	CAPSCREW, 1/2"NF x 2-3/4"
36	070469	8	CAPSCREW, 1/2"NF x 1-1/4"
	904208	12	LOCKWASHER, 1/2"
37	622207	2	BREATHER, clutch compartment
38	623136	2	GASKET, band linkage cover

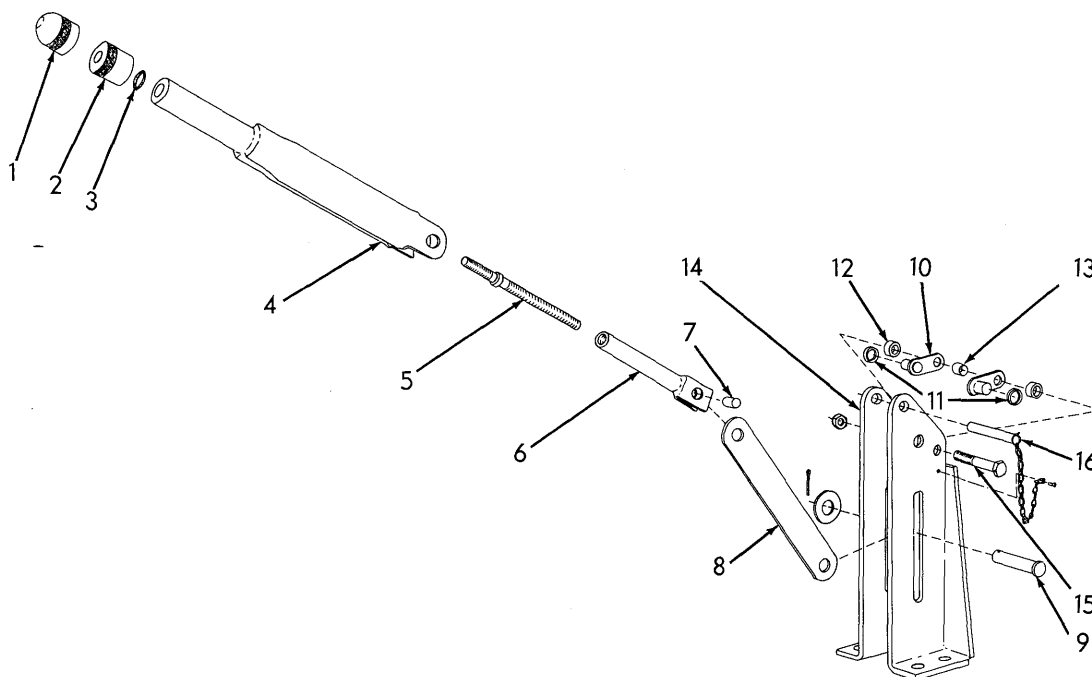


PARKING BRAKE LEVER ASSEMBLY 631981

T-37196

USAGE: See page 215

ITEM	PART NO.	QTY.	DESCRIPTION
1	637801	1	CAP, adjusting stud
2	637802	1	NUT, cap locking
3	923548	1	O-RING, adjusting stud knob
4	637803	1	LEVER, operating
5	637818	1	STUD, lever adjusting
6	637804	1	TUBE, adjusting stud
7	637819	1	PIN, connecting link
8	637805	1	LINK, connecting
9	637811	1	PIN, clevis
	900818	1	WASHER, plain, U.S. std., 1/2"
	900806	1	PIN, cotter, 1/8" x 1"
10	637808	2	BRACKET, pivot
11	637806	2	SPACER, pivot bracket (3/4" O. D.)
12	637809	2	SPACER, pivot bracket (5/8" O. D.)
13	637810	1	SPACER, pivot bracket (1/2" O. D.)
14	-----	1	BRACKET, supporting (Not serviced separately)
15	637817	1	BOLT, pivot bracket (drilled-hd.)(Early units)
	099575	1	CAPSCREW, pivot bracket (Late units)
	919219	1	NUT, elastic stop, thin, 3/8"NF
16	637820	1	PIN, lever locking (Includes chain)
	913533	1	SCREW, thread-cutting, #4 x 1/4" (Early units)
	648406	1	PIN, drive (Late units)

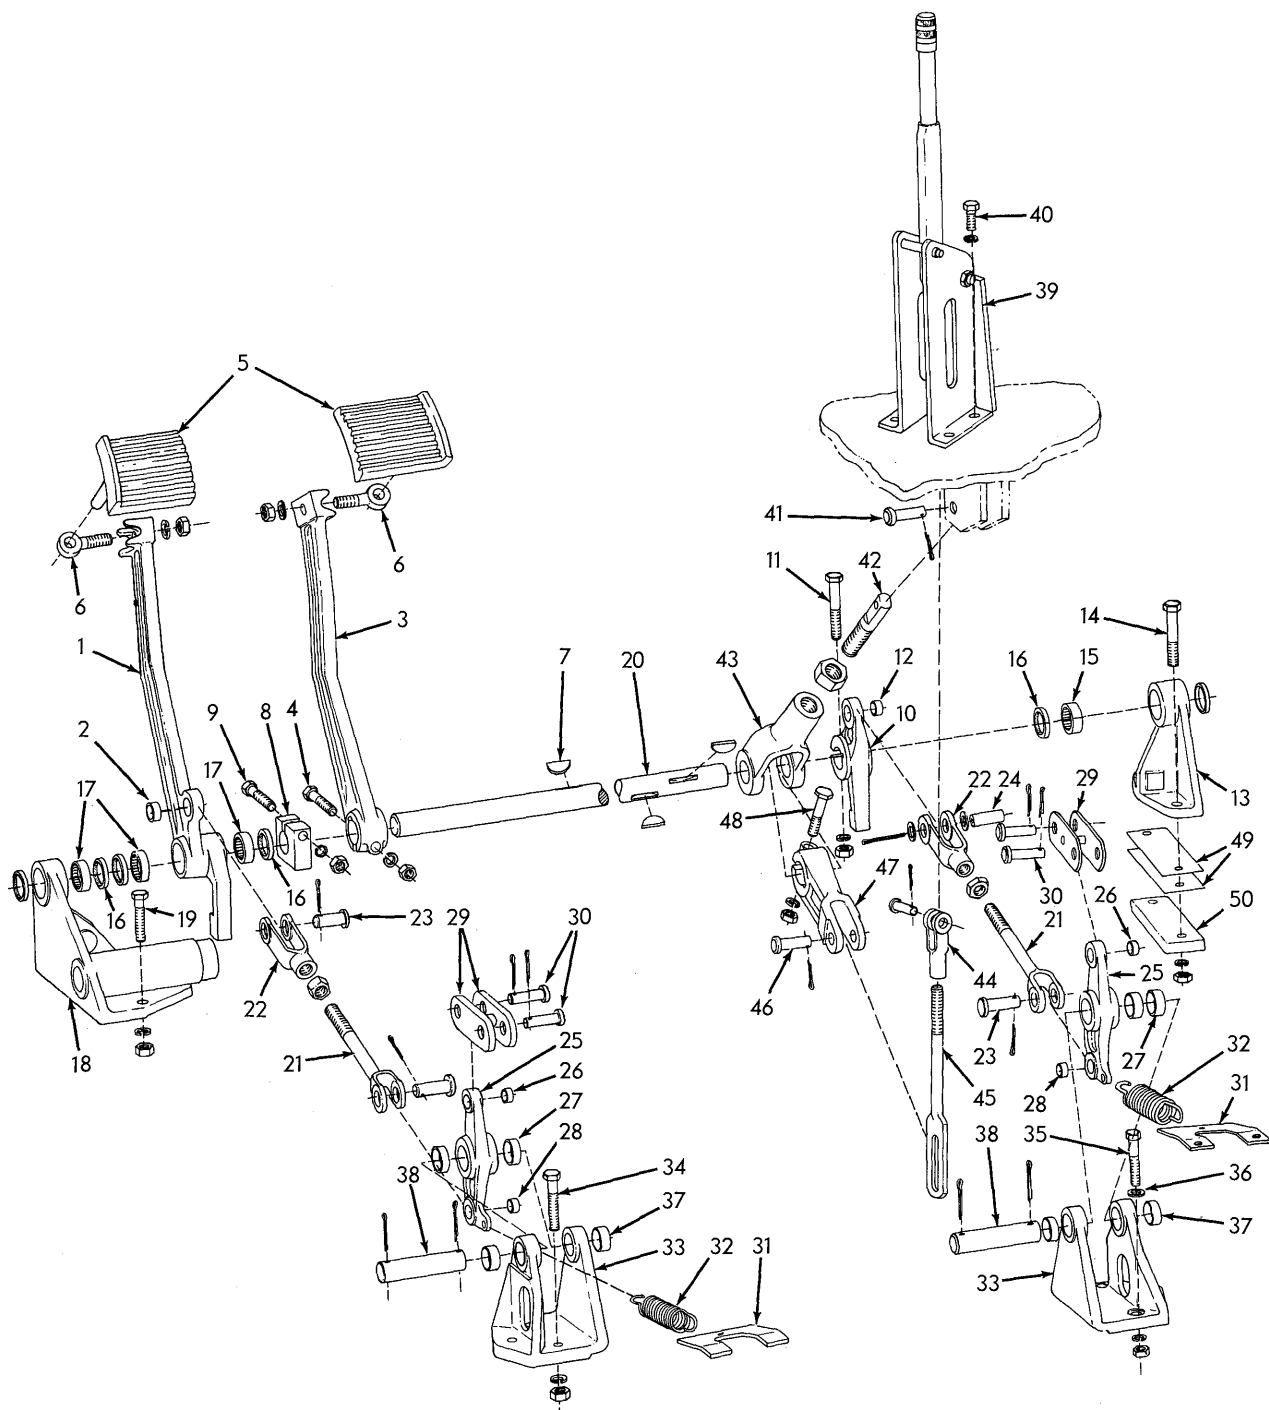

BRAKE CONTROL

* Tractors prior to serial No. 6244
 ** Tractor serial No. 6244 and up

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	629542	1	-	LEVER ASSEMBLY, pedal, left (Includes item 2)
	643053	-	1	LEVER ASSEMBLY, pedal, left (Includes item 2)
2	623164	1	1	BUSHING, left pedal lever
3	638958	1	-	LEVER, pedal, right
	643032	-	1	LEVER, pedal, right
4	035278	1	1	CAPSCREW, 1/2"NF x 2-3/4"
	904208	1	1	LOCKWASHER, 1/2"
	911043	1	1	NUT, 1/2"NF
5	623151	2	2	PAD, pedal lever
6	050433	2	2	BOLT, eye, pedal lever pad
	904209	2	2	LOCKWASHER, 5/8"
	911044	2	2	NUT, 5/8"NF
7	631883	3	3	KEY, pedal lever shaft
8	052639	1	1	COLLAR, retaining, left pedal lever
9	035278	1	1	CAPSCREW, 1/2"NF x 2-3/4"
	904208	1	1	LOCKWASHER, 1/2"
	911043	1	1	NUT, 1/2"NF
10	629510	1	-	LEVER ASSEMBLY, pedal shaft, right end (Includes item 12)
	643019	-	1	LEVER ASSEMBLY, pedal shaft, right end (Includes item 12)
11	042430	1	1	CAPSCREW, 1/2"NF x 3-1/4"
	904208	1	1	LOCKWASHER, 1/2"
	911043	1	1	NUT, 1/2"NF
12	623164	1	1	BUSHING, shaft lever
13	629253	1	1	BRACKET, pedal shaft, right
14	070403	2	2	CAPSCREW, 1/2"NF x 3"
	904208	2	2	LOCKWASHER, 1/2"
	911043	2	2	NUT, 1/2"NF
15	052642	1	1	BEARING, needle, pedal shaft (3/4" wide)
16	053243	6	6	SEAL, pedal shaft, dust
17	053244	3	3	BEARING, needle, pedal shaft (1/2" wide)
18	649038	1	1	BRACKET, pedal shaft, left
19	035068	3	3	CAPSCREW, 1/2"NF x 2-1/4"
	904208	3	3	LOCKWASHER, 1/2"
	911043	3	3	NUT, 1/2"NF
20	629548	1	1	SHAFT, pedal

(Continued)


BRAKE CONTROL (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
21	628536	2	-	ROD, front
	643007	-	2	ROD, front
	910847	2	2	NUT, jam, 3/4"NF
22	628535	2	2	YOKE, front rod
23	623139	3	3	PIN, front rod
	910302	3	3	PIN, cotter, 5/32" x 1-1/4"
24	623139	1	-	PIN, front rod, right side
	910302	1	-	PIN, cotter, 5/32" x 1-1/4"
	637729	-	1	PIN, front rod yoke, right side
	637730	-	2	WASHER, plain
	904003	-	1	PIN, cotter, 1/8" x 2-1/4"
25	629544	2	-	LEVER ASSEMBLY, rocker (Includes items 26 thru 28)
	643024	-	2	LEVER ASSEMBLY, rocker (Includes items 26 thru 28)
26	052669	2	2	BUSHING, lever, upper end (3/4"O.D.)
27	631882	4	4	BUSHING, lever, center (1-1/8"O.D.)
28	623164	2	2	BUSHING, lever, lower end (7/8"O.D.)
29	623758	2	-	ROD, rear
	643274	-	2	YOKE, rear
30	052671	4	4	PIN, rear rods
	900806	4	4	PIN, cotter, 1/8" x 1"
31	629543	2	2	CLIP, attaching, rod spring
32	658737	2	2	SPRING, retracting
33	629545	2	2	BRACKET ASSEMBLY, rocker lever (Includes item 37)(Used prior to tractor #6247)
	644463	-	2	BRACKET ASSEMBLY, rocker lever (Includes item 37)(Effective with tractor #6247)
34	035068	5	5	CAPSCREW, 1/2"NF x 2-1/4"
35	035892	1	1	CAPSCREW, 1/2"NF x 2-1/2" (Right side only)
36	058614	1	1	WASHER, plain
	904208	6	6	LOCKWASHER, 1/2"
	911043	6	6	NUT, 1/2"NF
37	631882	4	4	BUSHING, rocker lever bracket
38	639459	2	2	PIN, rocker lever bracket
	910320	4	4	PIN, cotter, 5/32" x 1-1/2"
39	631981	1	1	LEVER ASSEMBLY, operating, parking brake (See page 213 for parts)
40	070467	4	4	CAPSCREW, 1/2"NF x 1"
	904208	4	4	LOCKWASHER, 1/2"

(Continued)

BRAKE CONTROL (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
41	052671	1	1	PIN, bracing yoke eye
	900806	1	1	PIN, cotter, 1/8" x 1"
42	638338	1	1	EYE, shaft bracing yoke
	911051	1	1	NUT, jam, 1"NF
43	633610	1	1	YOKE, shaft bracing
44	068389	1	1	YOKE, parking brake rod
45	632159	1	1	ROD, connecting, parking brake lever
46	052671	1	1	PIN, parking brake lever
	900806	1	1	PIN, cotter, 1/8" x 1"
47	632451	1	1	LEVER, parking brake
48	035278	1	1	CAPSCREW, 1/2"NF x 2-3/4"
	904208	1	1	LOCKWASHER, 1/2"
	911043	1	1	NUT, 1/2"NF
49	629515	2	2	SHIM, pedal shaft bracket, right (Use as required)
50	629616	1	1	PLATE, bracket spacing

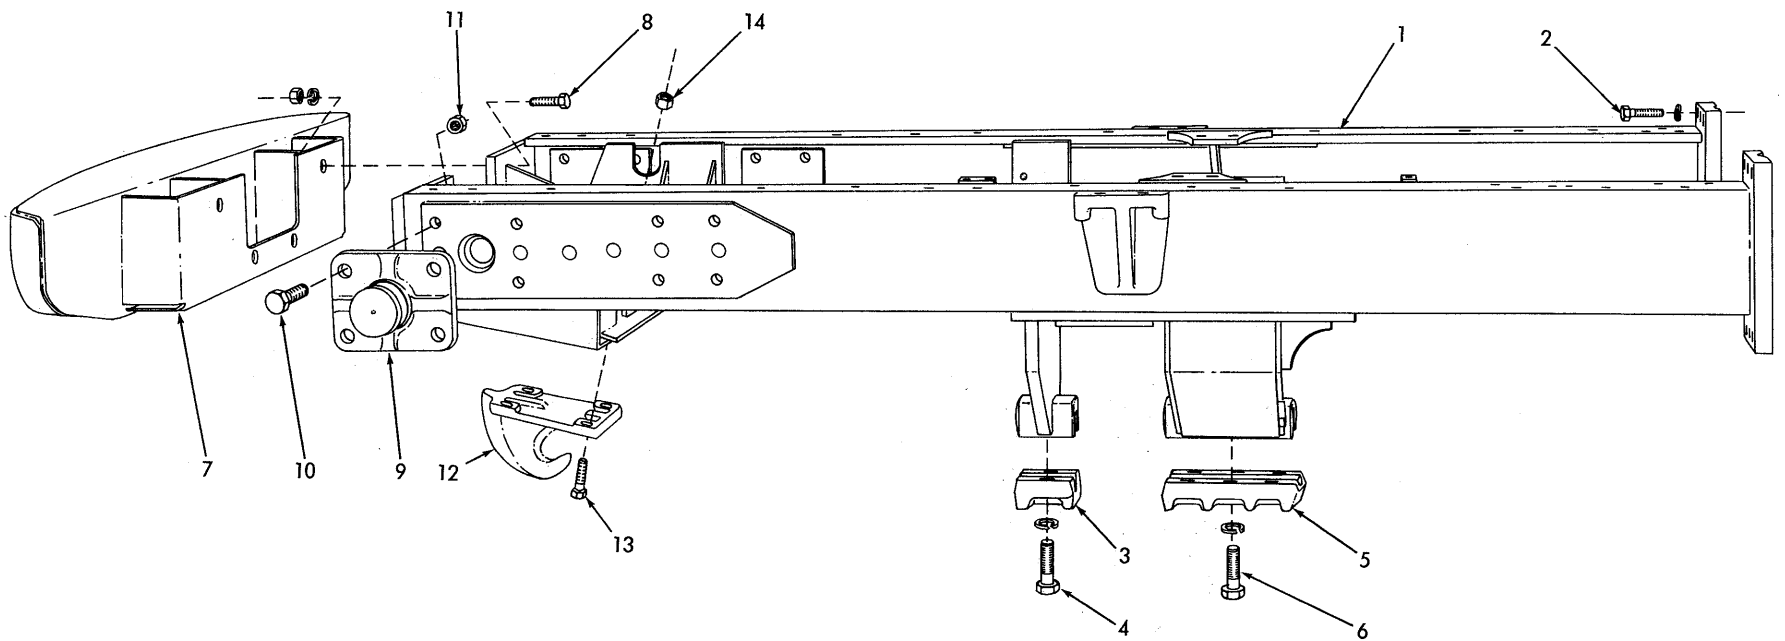


MAIN FRAME

MAIN FRAME

ITEM	PART NO.	QTY.	DESCRIPTION
1	649155	1	FRAME ASSEMBLY, main (Includes items 3 thru 6)
2	070272	12	CAPSCREW, 1"NF x 3"
	910916	12	LOCKWASHER, 1"
3	638968	1	CAP, spring pivot, front
4	012586	2	CAPSCREW, 1"NF x 3-1/2"
	910916	2	LOCKWASHER, 1"
5	642767	1	CAP, spring pivot, rear
6	012586	6	CAPSCREW, 1"NF x 3-1/2"
	910916	6	LOCKWASHER, 1"
7	641427	1	BUMPER, front (36" long)(Standard)
	097964	1	BUMPER, front (67" long)(Special)
	085617	1	BUMPER, front (60" long)(For Model HD16D with optional light-duty Radiator Shell)
8	073468	4	CAPSCREW, 1"NF x 2-1/2"(For BUMPERS 641427 and 085617)
	070272	4	CAPSCREW, 1"NF x 3" (For BUMPER 097964)
	910916	4	LOCKWASHER, 1"
	911047	4	NUT, 1"NF
9	084643	2	TRUNNION, radiator guard mounting (Not used on Model HD16D with optional light-duty Radiator Shell)
10	073424	8	CAPSCREW, 1"NF x 4"
11	600236	8	NUT, high, 1"NF
12	040503	1	HOOK, front pull (Special equipment)
13	012762	4	CAPSCREW, 7/8"NF x 3-1/4"
14	070400	4	NUT, high, 7/8"NF

Not used with front-mounted allied equipment

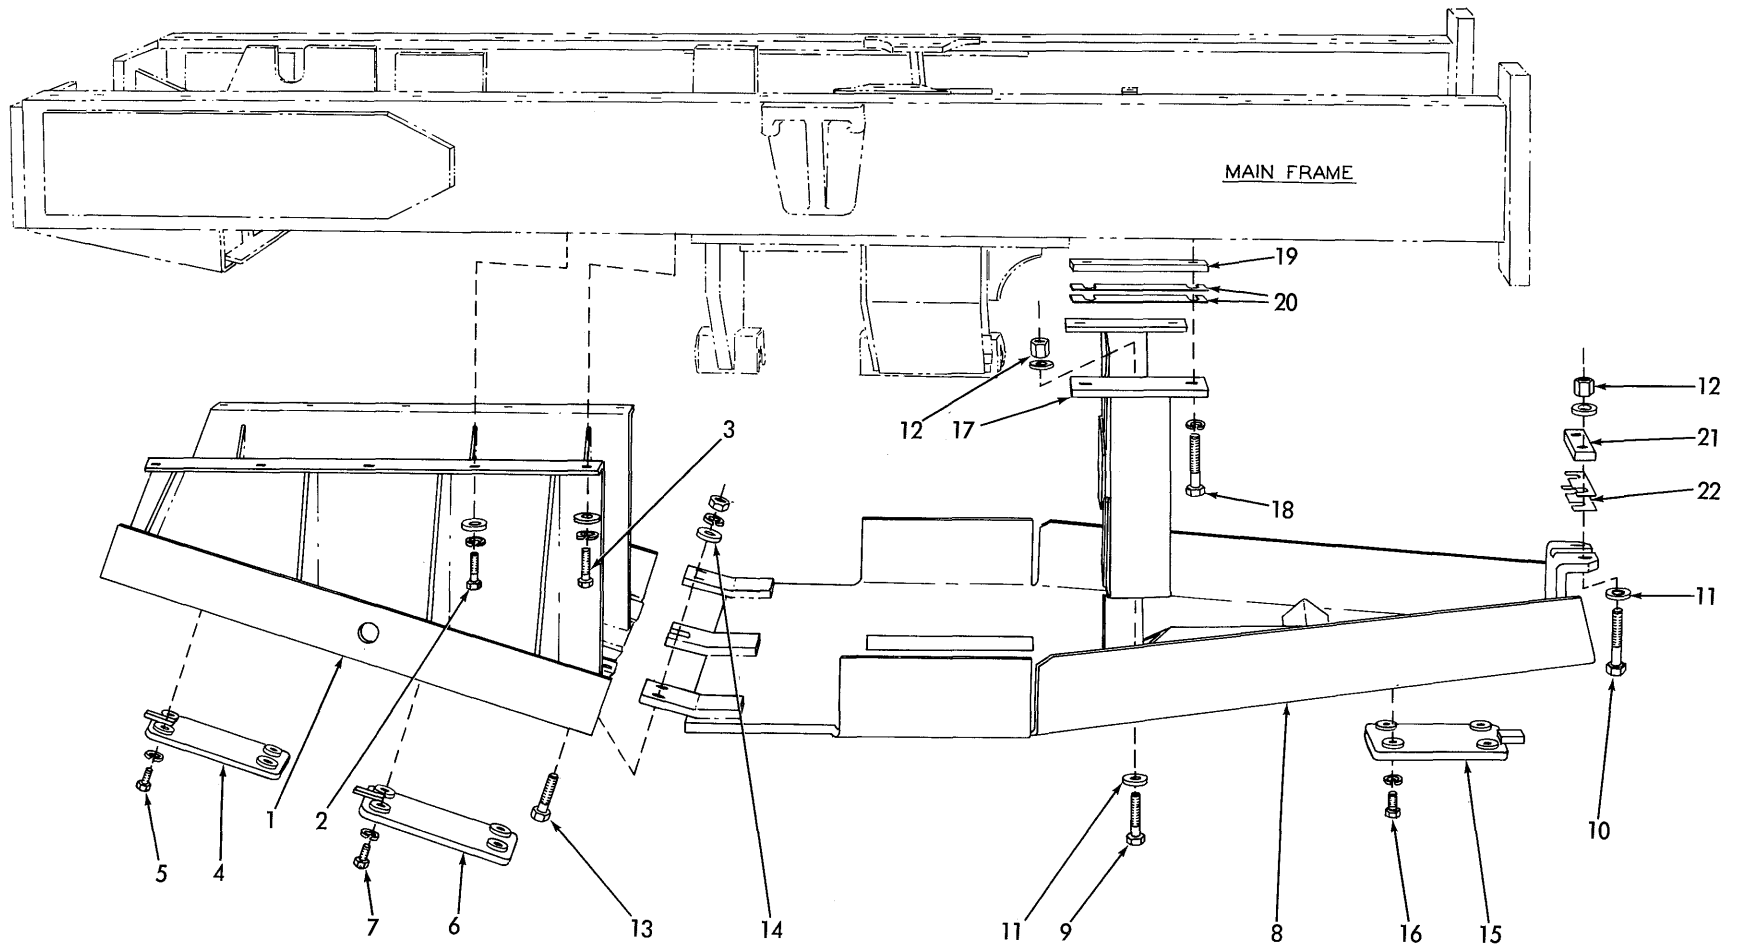


BOTTOM GUARDS (First type)

T-70516

BOTTOM GUARDS

USAGE: Special equipment. For tractors engaged in logging operations. Used prior to

ITEM	PART NO.	QTY.	DESCRIPTION
1	632208	1	GUARD ASSEMBLY, front section (Includes items 4 thru 7)
2	035229	8	CAPSCREW, 5/8"NF x 2"
3	013467	2	CAPSCREW, 5/8"NF x 3"
	064810	10	WASHER, plain
	904209	10	LOCKWASHER, 5/8"
4	091765	1	COVER, water drain hole (10-1/4" long)
5	035221	4	CAPSCREW, 1/2"NC x 1"
	904208	4	LOCKWASHER, 1/2"
6	091759	1	COVER, crankcase oil drain hole (12" long)
7	035221	4	CAPSCREW, 1/2"NC x 1"
	904208	4	LOCKWASHER, 1/2"
8	632201	1	GUARD ASSEMBLY, rear section (Includes items 15 and 16)
9	070285	2	CAPSCREW, 3/4"NF x 3"
10	035422	2	CAPSCREW, 3/4"NF x 4"
11	061689	8	WASHER, plain
12	012767	4	NUT, high, 3/4"NF
13	035248	5	CAPSCREW, 5/8"NF x 2-1/4"
14	064810	5	WASHER, plain
	904209	5	LOCKWASHER, 5/8"
	911044	5	NUT, 5/8"NF
15	091765	1	COVER, transmission oil drain
16	035221	4	CAPSCREW, 1/2"NC x 1"
	904208	4	LOCKWASHER, 1/2"
17	645534	1	CHANNEL, supporting, rear guard
18	035541	4	CAPSCREW, 5/8"NF x 3-3/4"
	904209	4	LOCKWASHER, 5/8"
19	632209	2	PLATE, spacing, guard supporting channel (Used prior to April 1964)
20	{ 632190	4	SHIM, channel spacing (1/16" thick. Use as required)
	{ 632191	4	SHIM, channel spacing (1/8" thick. Use as required)
21	641481	1	PLATE, spacing, rear guard (Used prior to April 1964)
22	{ 631959	1	SHIM, rear guard (1/16" thick. Use as required)
	{ 631960	2	SHIM, rear guard (1/8" thick. Use as required)

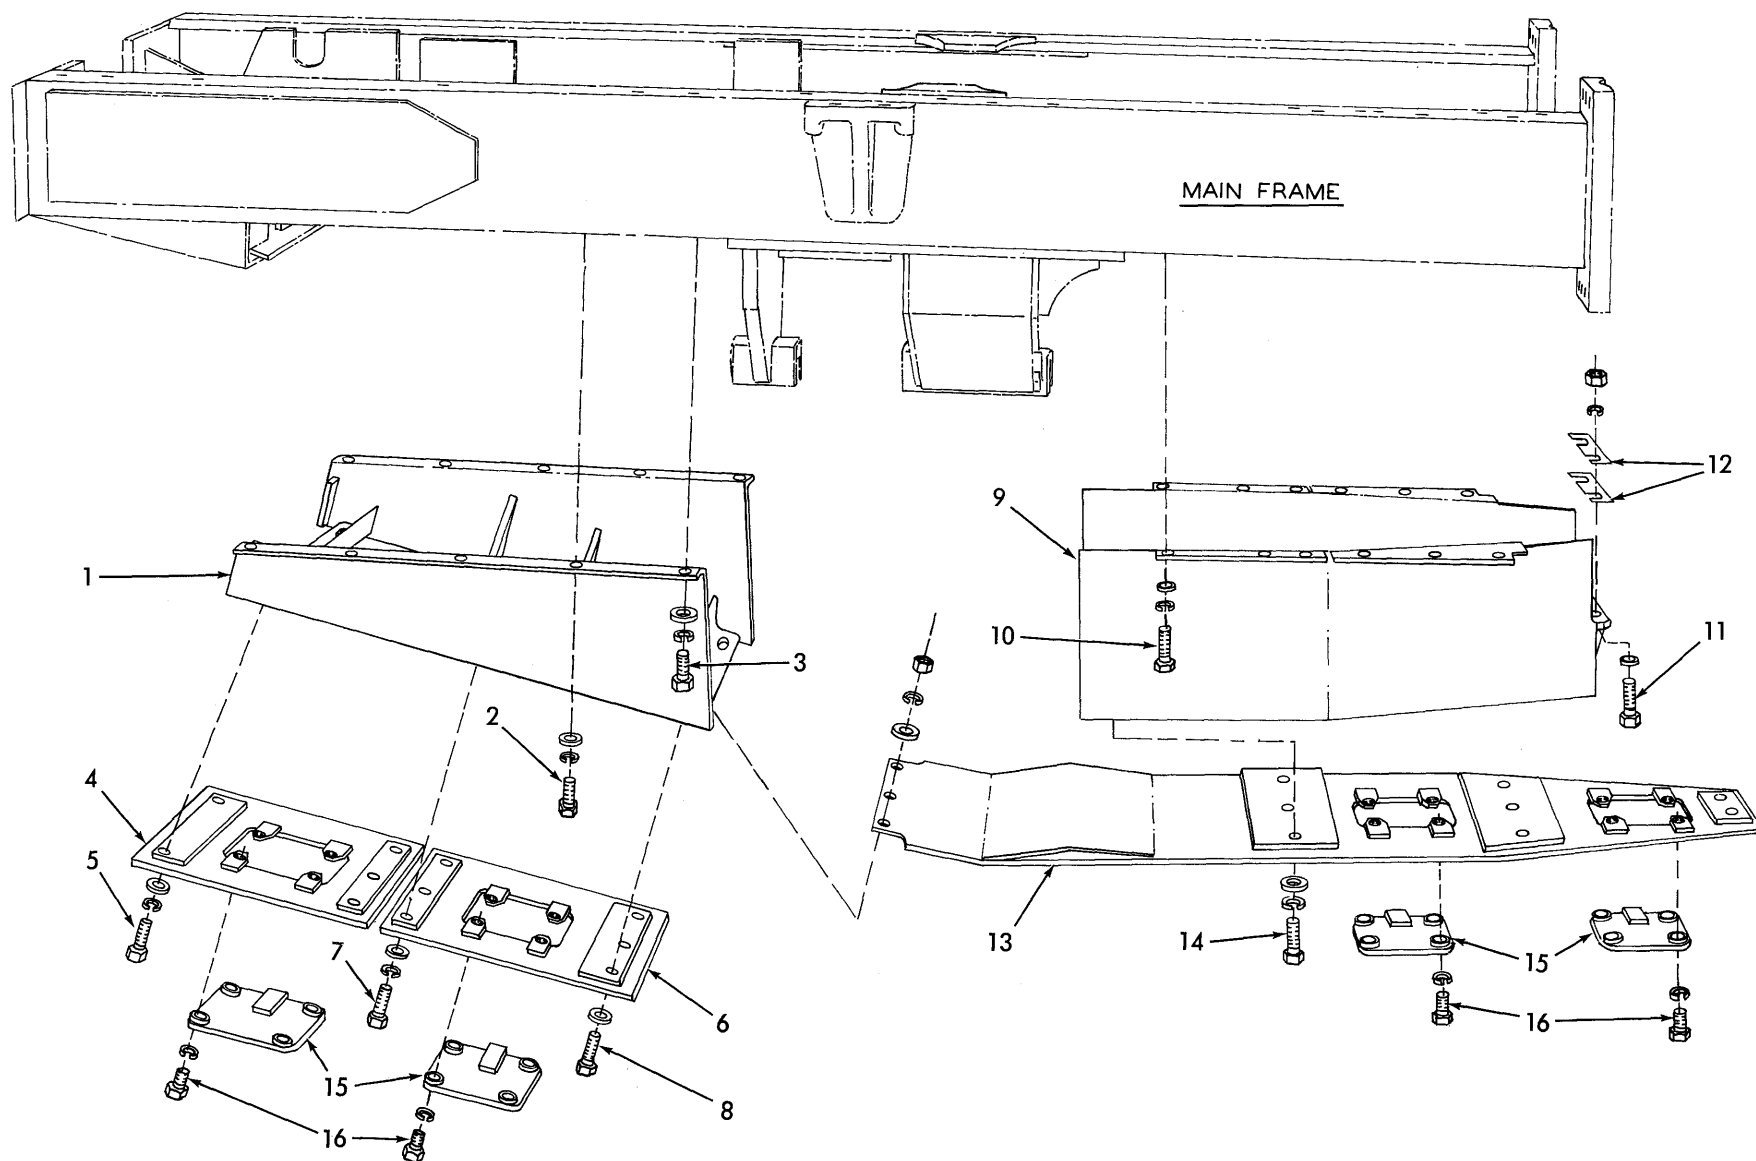


BOTTOM GUARDS (Second type)

T-73640

BOTTOM GUARDS

USAGE: Special equipment. For tractors engaged in logging operations. Effective

ITEM	PART NO.	QTY.	DESCRIPTION
1	646192	1	FRAME, front
2	035229	8	CAPSCREW, 5/8"NF x 2-1/2"
3	013467	2	CAPSCREW, 5/8"NF x 3"
	904209	10	LOCKWASHER, 5/8"
	064810	10	WASHER, plain
4	646162	1	PLATE ASSEMBLY, bottom, front section (Includes items 15 and 16)
5	012742	6	CAPSCREW, 3/4"NF x 2-1/4"
	904369	6	LOCKWASHER, 3/4"
	900820	6	WASHER, plain, USS std., 3/4"
6	646155	1	PLATE ASSEMBLY, bottom, center section (Includes items 15 and 16)
7	012742	3	CAPSCREW, 3/4"NF x 2-1/4"
	904369	3	LOCKWASHER, 3/4"
	900820	3	WASHER, plain, USS std., 3/4"
8	012526	3	CAPSCREW, 3/4"NF x 3-1/4"
	061689	3	WASHER, plain (heavy)
	900820	3	WASHER, plain, USS std., 3/4"
	904369	3	LOCKWASHER, 3/4"
	911045	3	NUT, 3/4"NF
9	646157	1	FRAME, rear
10	035306	12	CAPSCREW, 5/8"NF x 3-1/4"
	904209	12	LOCKWASHER, 5/8"
	064810	12	WASHER, plain
11	070285	2	CAPSCREW, 3/4"NF x 3"
	061689	2	WASHER, plain
	904369	2	LOCKWASHER, 3/4"
	911045	2	NUT, 3/4"NF
12	{ 631959	3	SHIM, rear frame (1/16" thick)
	{ 631960	2	SHIM, rear frame (1/8" thick)
			} Use as req'd
13	646140	1	PLATE ASSEMBLY, bottom, rear section (Includes items 15 and 16)
14	012742	8	CAPSCREW, 3/4"NF x 2-1/4"
	904369	8	LOCKWASHER, 3/4"
	900820	8	WASHER, plain, U.S. std., 3/4"
15	646108	4	COVER, access holes
16	035221	16	CAPSCREW, 1/2"NC x 1"
	904208	16	LOCKWASHER, 1/2"

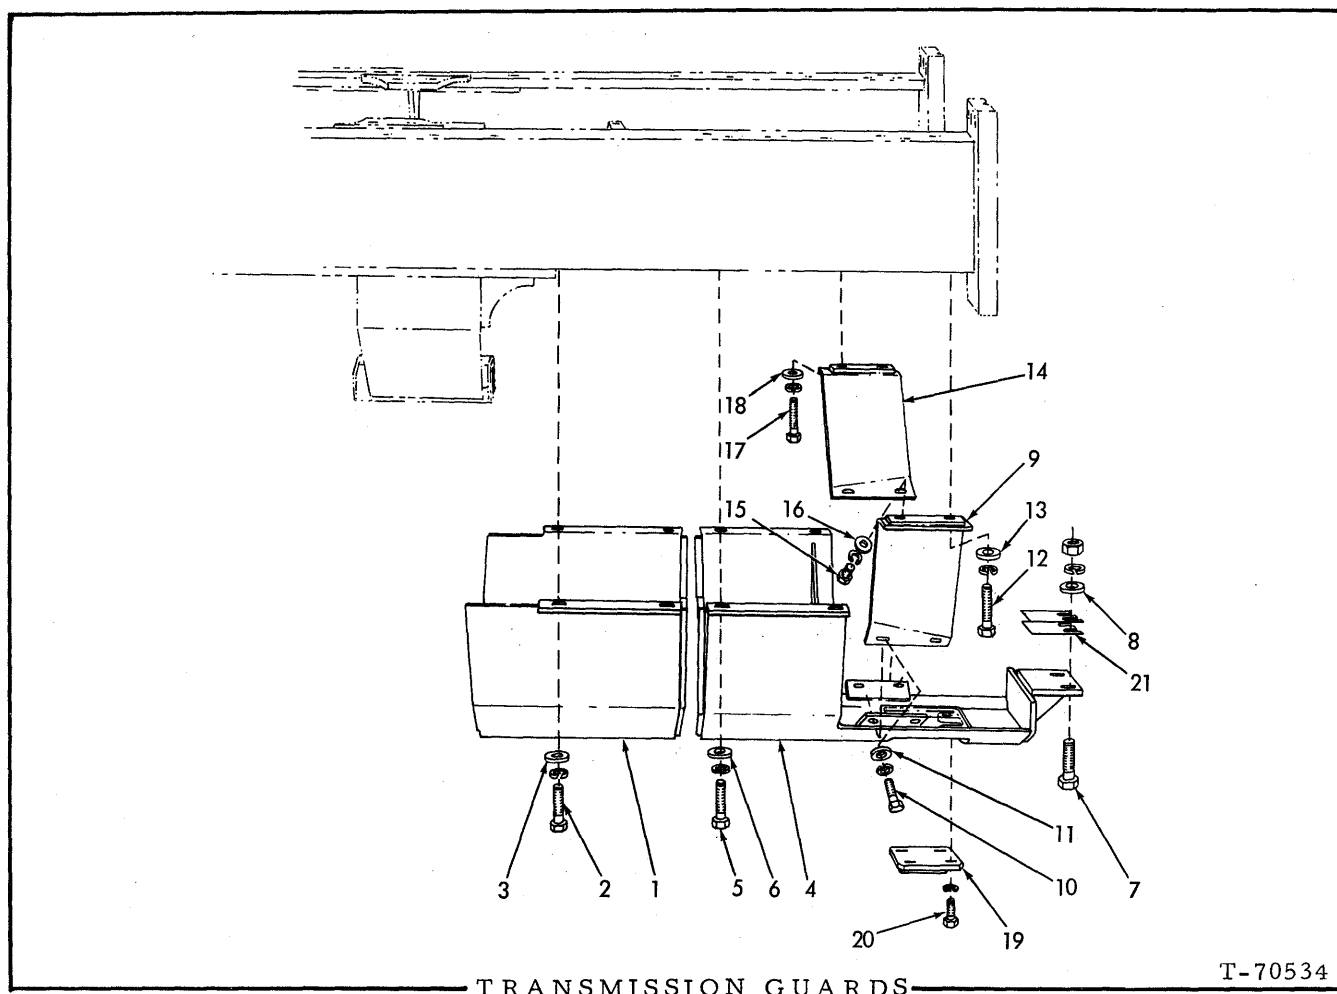

TRANSMISSION GUARDS

T-70534

USAGE: Special equipment. For tractors prior to

* Medium-duty. Used prior to May 1964


** Heavy-duty. Effective May 1964

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	-----	1	-	GUARD, transmission, front section (Order GUARD 642709)
	642709	-	1	GUARD, transmission, front section
2	013467	4	-	CAPSCREW, 5/8"NF x 3"
	035306	-	4	CAPSCREW, 5/8"NF x 3-1/4"
	904209	4	4	LOCKWASHER, 5/8"
3	064810	4	4	WASHER, plain
4	-----	1	-	GUARD, transmission, rear section (Order 1 each GUARD 642705, GUARD 642719, GUARD 642720)
	642705	-	1	GUARD, transmission, rear section
5	034440	4	-	CAPSCREW, 5/8"NF x 3-1/2"
	035306	-	4	CAPSCREW, 5/8"NF x 3-1/4"
	904209	4	4	LOCKWASHER, 5/8"
6	064810	4	4	WASHER, plain
7	070285	2	-	CAPSCREW, 3/4"NF x 3"
	013465	-	2	CAPSCREW, 3/4"NF x 2-1/2"
8	061689	2	2	WASHER, plain
	904369	2	2	LOCKWASHER, 3/4"
	911045	2	2	NUT, 3/4"NF

(Continued)

TRANSMISSION GUARDS (Continued)


ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
9	642589	1	-	GUARD, transmission, left side
	642719	-	1	GUARD, transmission, left side
10	614478	2	2	CAPSCREW, 1/2"NF x 1-3/8"
11	064531	2	2	WASHER, plain
	904208	2	2	LOCKWASHER, 1/2"
12	034440	2	-	CAPSCREW, 5/8"NF x 3-1/2"
	035306	-	2	CAPSCREW, 5/8"NF x 3-1/4"
	904209	2	2	LOCKWASHER, 5/8"
13	064810	2	2	WASHER, plain
14	642590	1	-	GUARD, transmission, right side
	642720	-	1	GUARD, transmission, right side
15	614478	2	2	CAPSCREW, 1/2"NF x 1-3/8"
16	064531	2	2	WASHER, plain
	904208	2	2	LOCKWASHER, 1/2"
17	034440	2	-	CAPSCREW, 5/8"NF x 3-1/2"
	035306	-	2	CAPSCREW, 5/8"NF x 3-1/4"
	904209	2	2	LOCKWASHER, 5/8"
18	064810	2	2	WASHER, plain
19	633717	1	1	COVER, transmission oil drain
20	035061	4	4	CAPSCREW, 1/2"NC x 1-1/4"
	904208	4	4	LOCKWASHER, 1/2"
21	631959	2	1	SHIM, rear guard (1/16" thick. Use as required)
	631960	4	2	SHIM, rear guard (1/8" thick. Use as required)

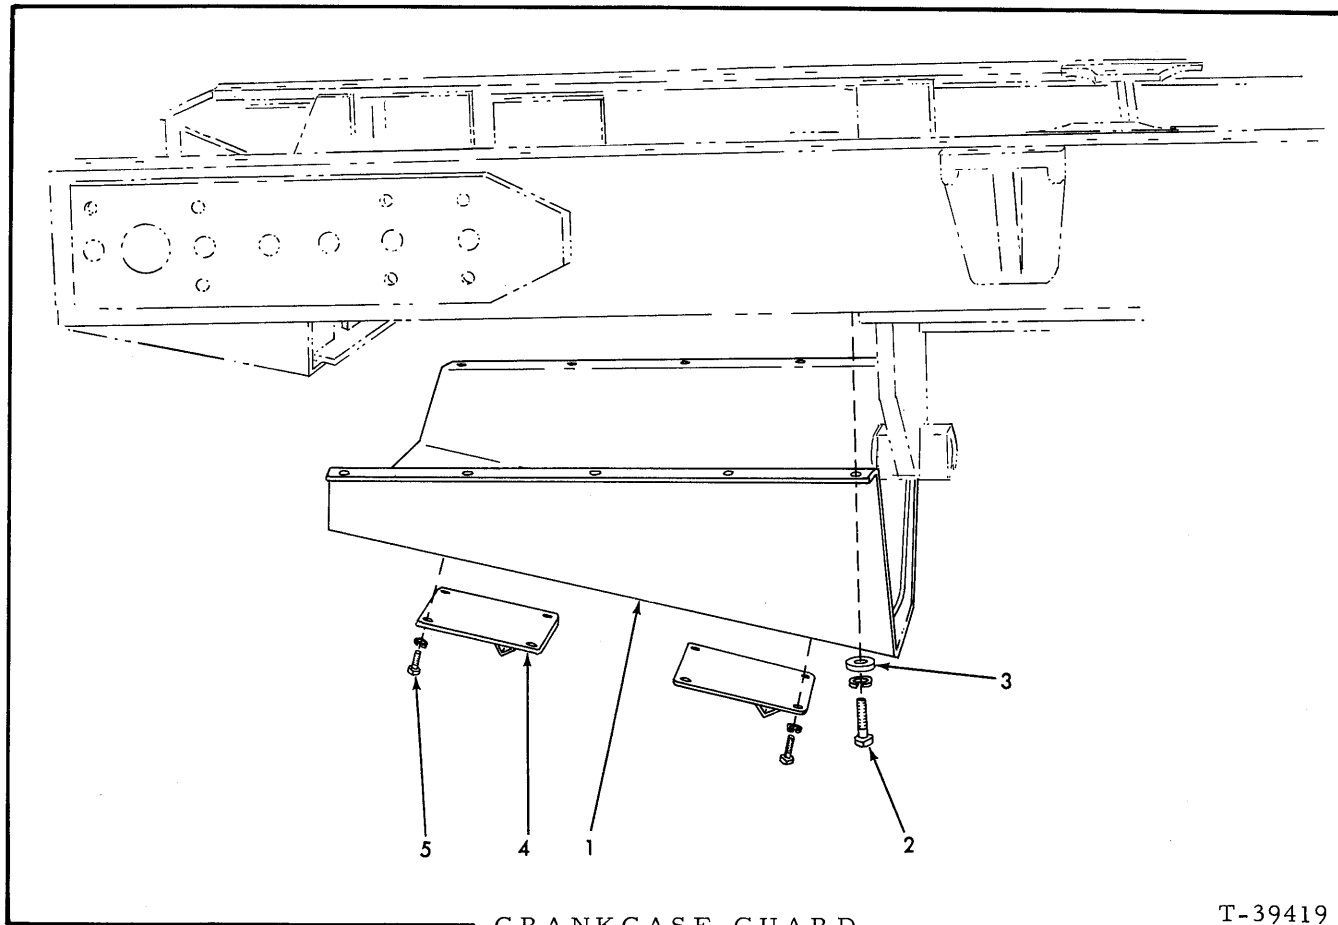

USAGE: Special equipment. For tractors prior to

ITEM PART NO. QTY. DESCRIPTION

1	642713	1	GUARD ASSEMBLY, crankcase (Includes items 4 and 5)
2	035248	8	CAPSCREW, 5/8"NF x 2-1/4"
	035306	2	CAPSCREW, 5/8"NF x 3-1/4" (rear position)
3	064810	10	WASHER, plain
	904209	10	LOCKWASHER, 5/8"
4	091662	2	COVER, drain hole
5	070469	8	CAPSCREW, 1/2"NF x 1-1/4"
	904208	8	LOCKWASHER, 1/2"

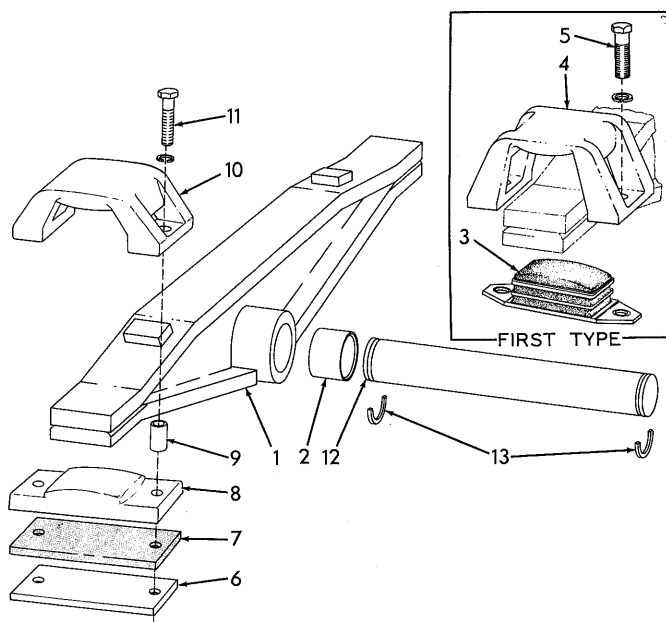

T-41835


EQUALIZING BEAM

USAGE: Tractors serial No. 6331 and up, including No. 6329

* Tractors prior to serial No. 7759

** Tractors serial No. 7759 and up

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	642938	1	1	BEAM ASSEMBLY (Includes item 2)
2	056166	2	2	BUSHING, beam pivot
3	-----	2	-	PAD, shock (rubber sandwich)(Used prior to tractor #7437. Order items 6 thru 11)
	651342	2	-	PAD, shock (solid steel)(Effective with tractor #7437)
4	-----	2	-	BRACKET, shock pad (Order items 6 thru 11)
5	013006	4	-	CAPSCREW, 7/8"NF x 3-3/4"
	905347	4	-	LOCKWASHER, 7/8"
6	650754	-	2	PLATE, shock pad (steel)
7	650755	-	2	PAD, shock (rubber)
8	650758	-	2	PAD, beam seating
9	650756	-	4	BUSHING, bracket spacing
10	650757	-	2	BRACKET, shock pad
11	650759	-	4	CAPSCREW, 7/8"NF x 6"
	905347	-	4	LOCKWASHER, 7/8"
12	630502	1	1	PIN, beam pivot
13	630503	2	1	RING, retaining, pivot pin

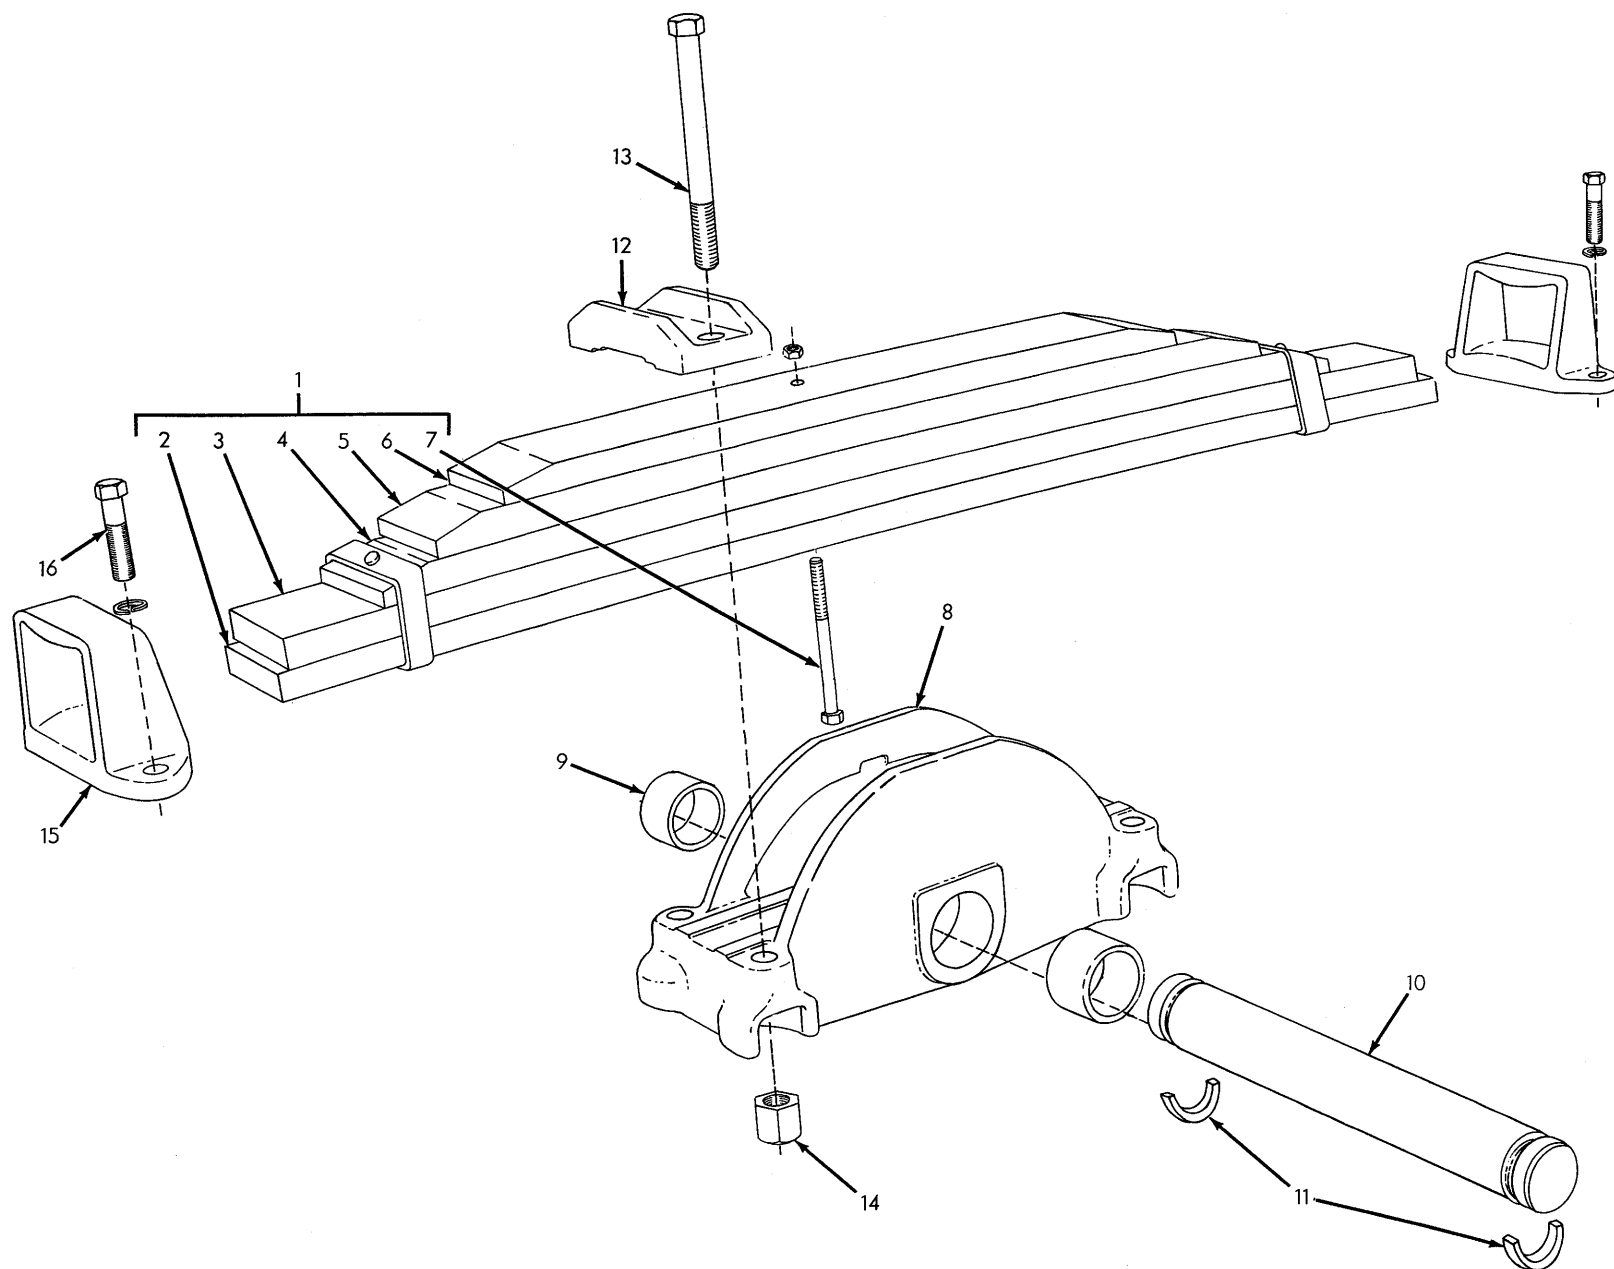



-EQUALIZING SPRING (First type)

T-4286

EQUALIZING SPRING

USAGE: Tractors prior to serial No. 6331 excluding No. 6329

ITEM	PART NO.	QTY.	DESCRIPTION
1	099303	1	SPRING ASSEMBLY (Consists of items 2 thru 7)
2	099298	1	LEAF, main (65-1/2" long)
3	099299	1	LEAF, second (64-1/2" long)
4	099300	1	LEAF ASSEMBLY, third (55-1/2" long) (Includes riveted rebound bands. Serviced only as a unit)
5	099301	1	LEAF, fourth (45-1/2" long)
6	099302	1	LEAF, fifth (35-1/2" long)
7	052253 911044	1 1	BOLT, center (5/8"NF x 7-3/4". Includes NUT 911044) NUT, 5/8"NF
8	083408	1	SADDLE ASSEMBLY (Includes item 9)
9	056166	2	BUSHING, saddle
10	630502	1	PIN, spring pivot
11	630503	2	RING, retaining, pivot pin
12	059403	2	SADDLE, spring
13	065878	4	CAPSCREW, spring saddle (1-1/4"NF x 12")
14	083390	4	NUT, high, 1-1/4"NF
15	630546	2	SEAT, spring
16	012762 905347	4 4	CAPSCREW, 7/8"NF x 3-1/4" LOCKWASHER, 7/8"

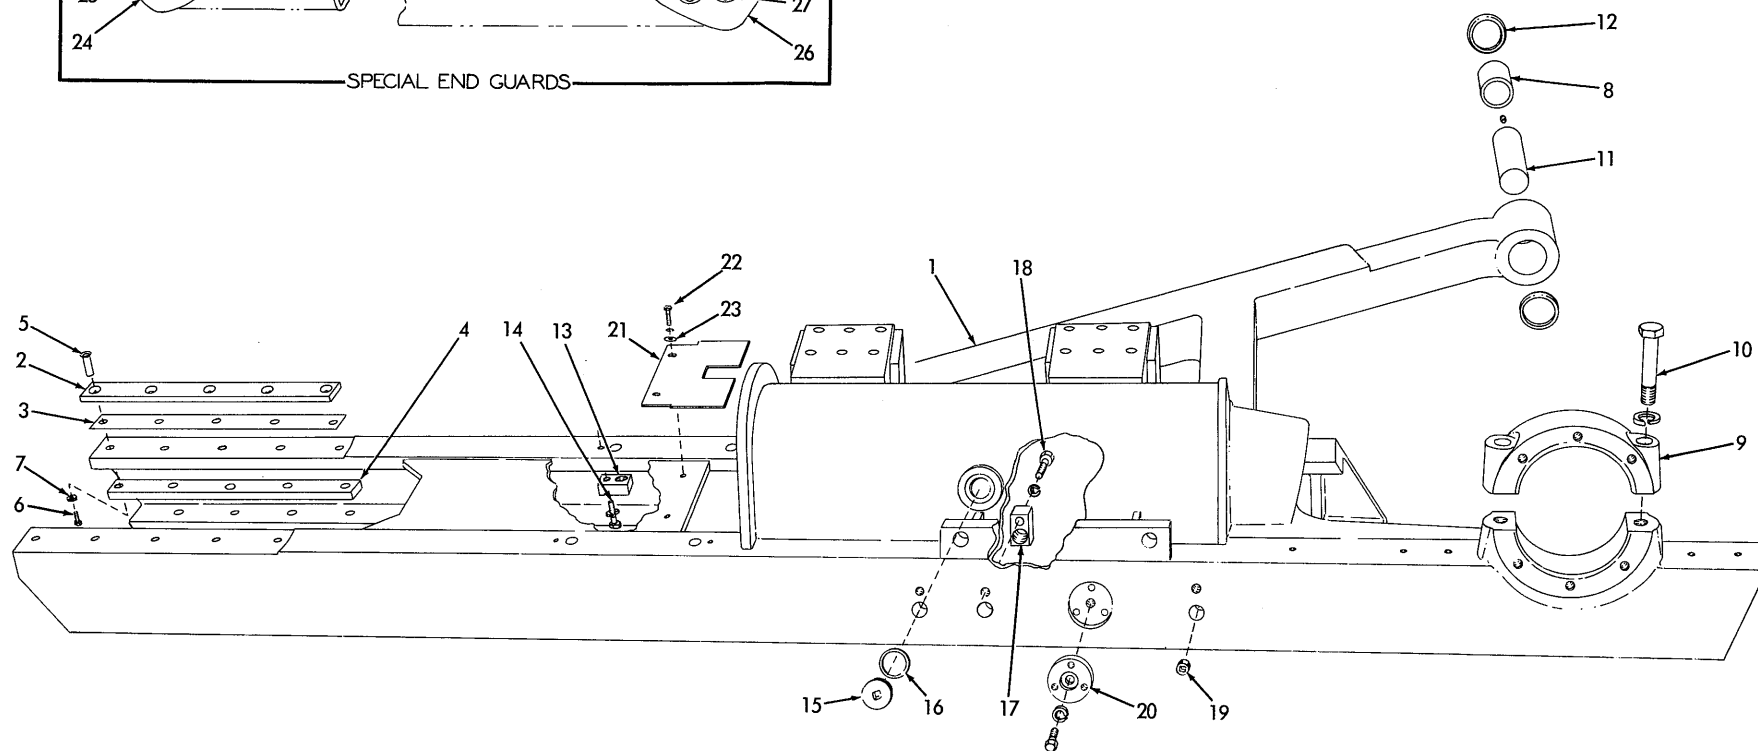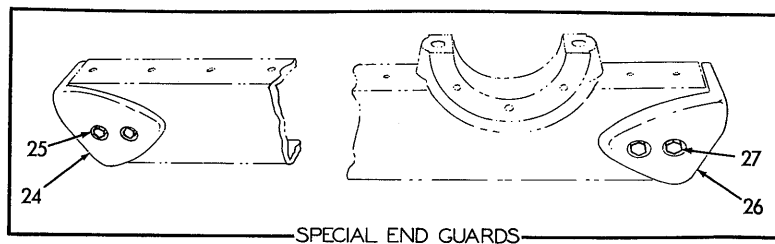


TRACK FRAME

T-38183

TRACK FRAME

ITEM	PART NO.	QTY.	DESCRIPTION
1	658055	1	FRAME ASSEMBLY, left side (Includes items 8, 9 and 10)
	658056	1	FRAME ASSEMBLY, right side (Includes items 8, 9 and 10)
2	639021	4	BAR, slide, track idler, upper
3	637701	4	SHIM, slide bar (.014" thick. Use as required)
	632580	8	SHIM, slide bar (.028" thick. Use as required)
4	631031	4	BAR, slide, track idler, lower
5	631034	20	DOWEL, tapped, slide bar retaining
6	646045	20	CAPSCREW, Nylok, 3/8"NF x 1"
7	647080	20	WASHER, plain
8	059699	2	BUSHING, pivot shaft
9	059587	2	CAP, sprocket shaft bearing
10	012561	4	CAPSCREW, 1"NF x 5-1/4"
	910916	4	LOCKWASHER, 1"
11	059701	2	SHAFT, pivot
	907070	2	PLUG, pipe, ctsk-hd., 1/4"NPT
12	623643	4	SEAL, dirt, pivot shaft
13	631033	4	BLOCK, equalizing beam seat (7/8" tapped hole)
14	035068	4	CAPSCREW, 1/2"NF x 2-1/4"
	904208	4	LOCKWASHER, 1/2"
15	035250	2	PLUG, filling hole
16	035249	2	GASKET, filling hole plug
17	066941	6	BLOCK, tapped (For mounting dozing equipment)
18	035073	6	CAPSCREW, 1/2"NF x 1-3/4"
	904208	6	LOCKWASHER, 1/2"
19	053421	6	PLUG, thread protecting (3/4"NPT)(For protecting dozer mounting holes)
20	059705	2	COVER (Special. Not used when mounting dozing equipment)
	903630	2	CAPSCREW, 3/8"NC x 1"
	904206	2	LOCKWASHER, 3/8"
21	097507	2	PLATE, closure
22	012992	4	CAPSCREW, 3/8"NF x 1-1/4"
	904206	4	LOCKWASHER, 3/8"
23	044973	4	WASHER, plain
NOTE: Items listed below are Special Equipment			
24	632055	3	GUARD, end, left hand
25	035229	6	CAPSCREW, 5/8"NF x 2"
	904209	6	LOCKWASHER, 5/8"
	911044	6	NUT, 5/8"NF
26	632056	3	GUARD, end, right hand
27	035229	6	CAPSCREW, 5/8"NF x 2"
	904209	6	LOCKWASHER, 5/8"
	911044	6	NUT, 5/8"NF

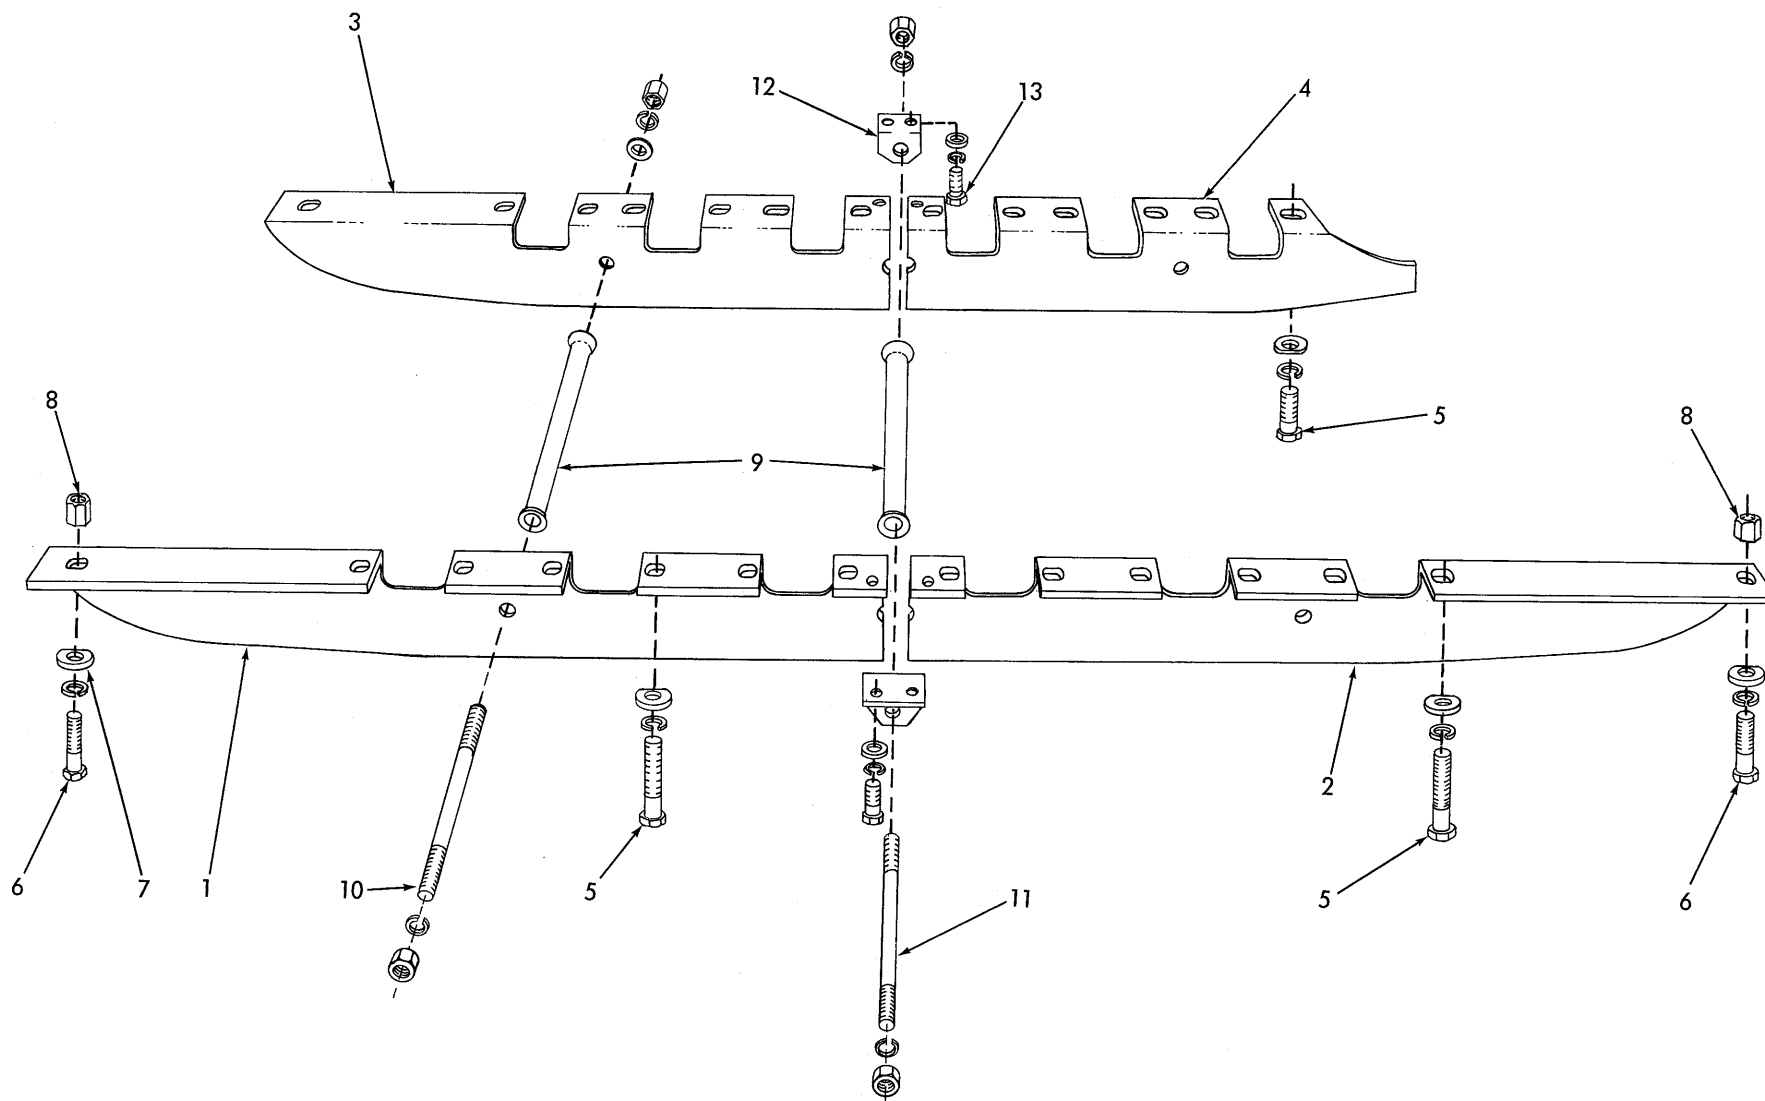


TRACK ROLLER GUARDS (Medium-duty)

T-70505

TRACK ROLLER GUARDS (Medium-duty)

USAGE: Special equipment

ITEM	PART NO.	QTY.	DESCRIPTION
1	642031	1	GUARD, outer, front section, left side
	642032	1	GUARD, outer, front section, right side
2	642032	1	GUARD, outer, rear section, left side
	642031	1	GUARD, outer, rear section, right side
3	642032	1	GUARD, inner, front section, left side
	642031	1	GUARD, inner, front section, right side
4	642033	1	GUARD, inner, rear section, left side
	642034	1	GUARD, inner, rear section, right side
5	052527	48	CAPSCREW, guard attaching (3/4"NF x 3-1/2")
	904369	48	LOCKWASHER, 3/4"
6	012984	6	CAPSCREW, guard attaching (3/4"NF x 2-3/4")
	904369	6	LOCKWASHER, 3/4"
7	641133	54	WASHER, guard attaching capscREW
8	012767	6	NUT, guard attaching capscREW (3/4"NF)
9	082915	6	SPACER, guard bracing
10	-----	4	CAPSCREW, guard bracing, end (7/8"NF x 13-1/2")(Used prior to September 1966. Order ROD 650848, LOCKWASHER 905347 and NUT 911046)
	900821	8	WASHER, plain, U.S. std., 7/8"
	905347	4	LOCKWASHER, 7/8"
	070400	4	NUT, high, 7/8"NF
	650848	4	ROD, guard bracing, end (7/8"NF x 14-1/4")(Effective September 1966)
	900821	8	WASHER, plain, U.S. std., 7/8"
	905347	8	LOCKWASHER, 7/8"
	911046	8	NUT, 7/8"NF
	-----	2	CAPSCREW, guard bracing, center (7/8"NF x 13-7/8")(Used prior to September 1966. Order ROD 650841, LOCKWASHER 905347 and NUT 911046)
	905347	2	LOCKWASHER, 7/8"
11	070400	2	NUT, high, 7/8"NF
	650841	2	ROD, guard bracing, center (7/8"NF x 14-3/4")(Effective Sept. 1966)
	905347	4	LOCKWASHER, 7/8"
	911046	4	NUT, 7/8"NF
12	642035	4	BRACKET, guard bracing
13	035018	8	CAPSCREW, 1/2"NF x 1-1/2 (Early units)
	035190	8	CAPSCREW, 1/2"NC x 1-1/2" (Late units)
	904208	8	LOCKWASHER, 1/2"
	064531	8	WASHER, plain

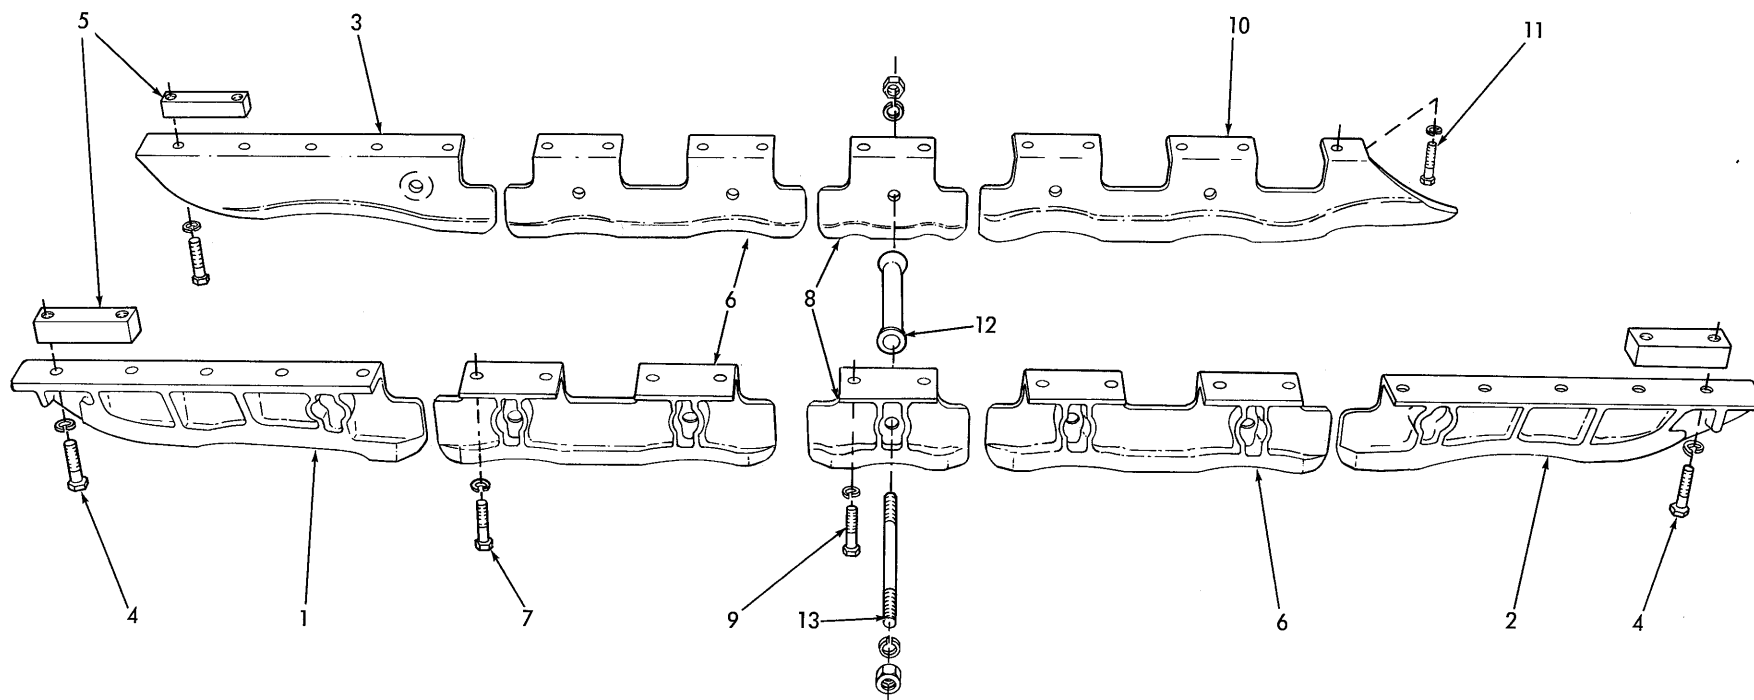

TRACK ROLLER GUARDS (Heavy-duty)




T-39420

TRACK ROLLER GUARDS (Heavy-duty)

USAGE: Special equipment

* Partial guarding
** Full guarding

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	649107	1	1	GUARD, outer, front section, left side
	632482	1	1	GUARD, outer, front section, right side
2	632482	1	1	GUARD, outer, rear section, left side
	649107	1	1	GUARD, outer, rear section, right side
3	632482	1	1	GUARD, inner, front section left side
	649107	1	1	GUARD, inner, front section, right side
4	012526	30	30	CAPSCREW, guard attaching (3/4"NF x 3-1/4")
	904369	30	30	LOCKWASHER, 3/4"
5	632323	12	12	BLOCK, tapped, end guard attachment
6	647900	-	6	GUARD, intermediate section
7	012526	-	24	CAPSCREW, 3/4"NF x 3-1/4"
	904369	-	24	LOCKWASHER, 3/4"
8	647899	4	4	GUARD, center section
9	012526	8	8	CAPSCREW, 3/4"NF x 3-1/4"
	904369	8	8	LOCKWASHER, 3/4"
10	647893	-	1	GUARD, rear inner section, left side
	647894	-	1	GUARD, rear inner section, right side
11	012526	-	10	CAPSCREW, 3/4"NF x 3-1/4"
	904369	-	10	LOCKWASHER, 3/4"
12	082915	4	12	SPACER, guard bracing
13	-----	4	12	CAPSCREW, guard bracing (7/8"NF x 13-1/2")(Used prior to September 1966. Order ROD 655193, LOCKWASHER 905347 and NUT 911046)
	905347	4	12	LOCKWASHER, 7/8"
	070400	4	12	NUT, high, 7/8"NF
	655193	4	12	ROD, guard bracing (7/8"NF x 14-3/8")(Effective September 1966)
	905347	8	24	LOCKWASHER, 7/8"
	911046	8	24	NUT, 7/8"NF

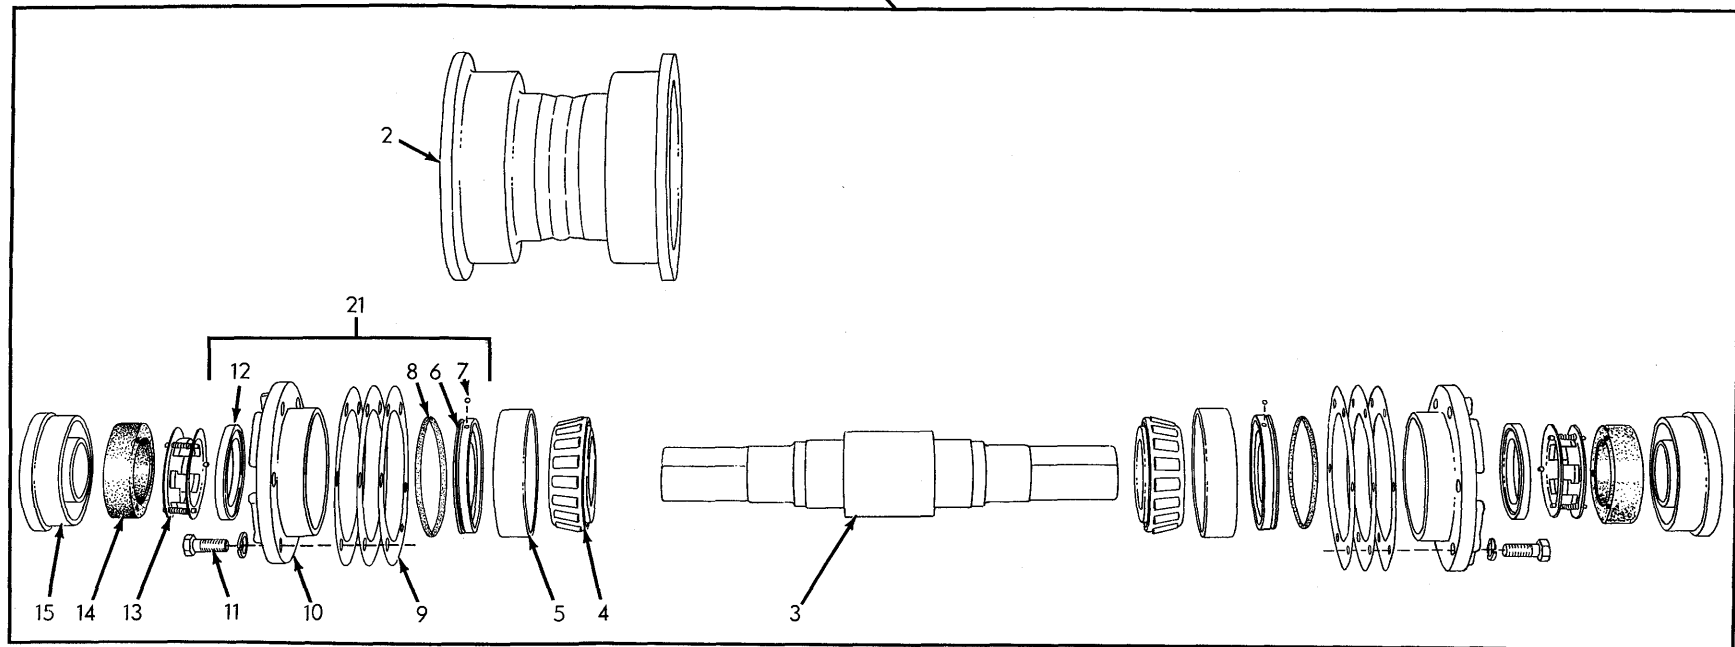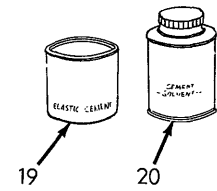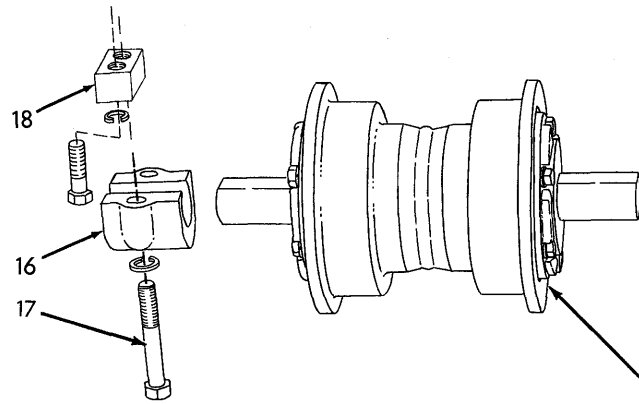

TRACK ROLLER




T-5149

TRACK ROLLER

ITEM	PART NO.	QTY.	DESCRIPTION
1	632983	1	ROLLER ASSEMBLY, single flange (Consists of items 2 thru 15)
2	632982	1	ROLLER, single flange
3	622002	1	SHAFT
4	087027	2	CONE ASSEMBLY, bearing
5	087026	2	CUP, bearing
6	645976	2	□RING, seal, inner
7	905357	2	□BALL, steel, 3/16" diam.
8	923818	2	□O-RING, seal packing
9	655464	4	SHIM, bearing adjustment (.003" thick)
	077287	4	SHIM, bearing adjustment (.007" thick)
	077286	4	SHIM, bearing adjustment (.010" thick)
	077285	2	SHIM, bearing adjustment (.032" thick)
Use as req'd			
10	074489	2	RETAINER, bearing
11	070469	12	CAPSCREW, 1/2"NF x 1-1/4"
	904208	12	LOCKWASHER, 1/2"
12	051124	2	□RING, seal, outer
13	051121	2	SPRING ASSEMBLY, seal (Serviced only as a unit)
14	051112	2	BOOT, seal spring
15	074487	2	RETAINER, seal
16	066692	2	BRACKET, attaching
17	035423	4	CAPSCREW, 3/4"NF x 4-1/4"
	904369	4	LOCKWASHER, 3/4"
18	631290	4	BLOCK, attaching capscrews
	917157	4	CAPSCREW, 3/4"NF x 2-3/4"
	904369	4	LOCKWASHER, 3/4"
Not used when Track Roller Guards are installed			
19	033288	-	CEMENT, neoprene, 1/2 pint can
20	054890	-	SOLVENT, neoprene cement, 1/2 pint can
For cementing seal boots			
21	083212	1	SEAL KIT (Includes parts for one (1) roller only; items 6, 7, 8 and 12)

□Indicates component of item 21

NOTE: All quantities indicated above are for one (1) roller only.
The number of rollers used is 12.

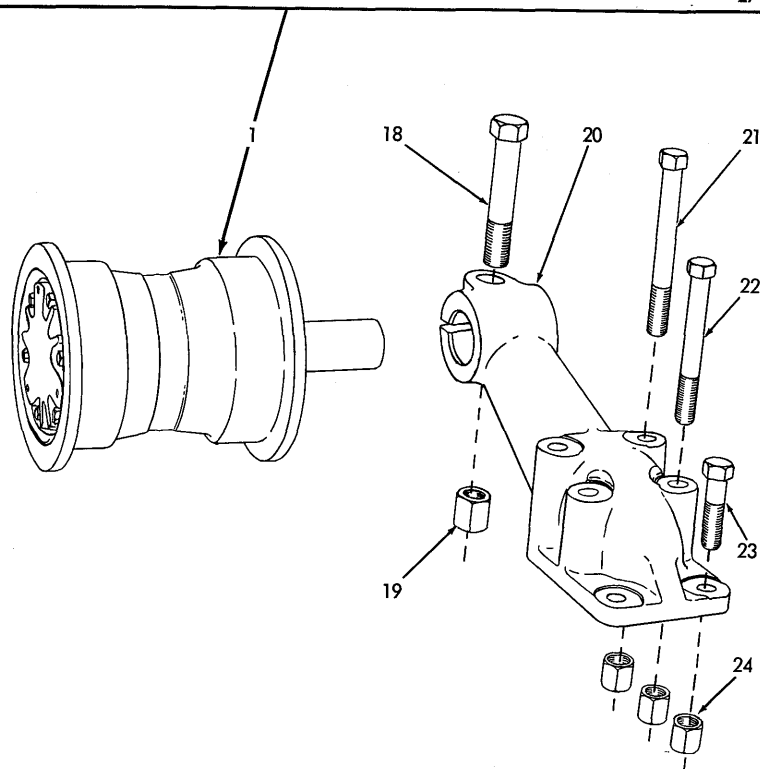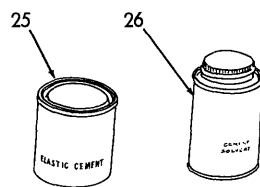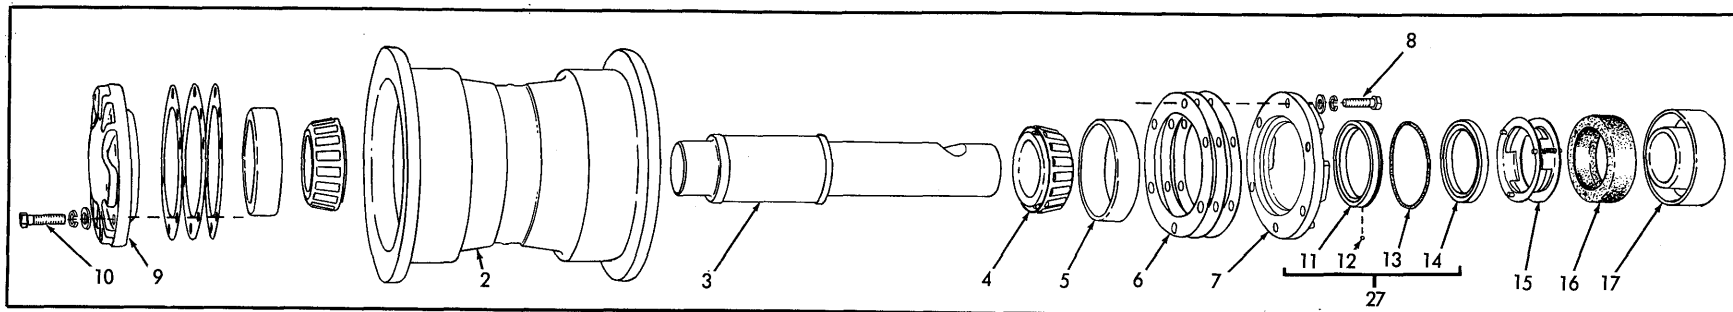




TRACK SUPPORTING ROLLER

T-4288

TRACK SUPPORTING ROLLER

ITEM	PART NO.	QTY.	DESCRIPTION	
1	633269	4	ROLLER ASSEMBLY, track supporting (Consists of items 2 thru 17)	
2	633268	4	ROLLER	
3	640070	4	SHAFT	
4	043491	8	CONE ASSEMBLY, bearing	
5	074740	8	CUP, bearing	
6	655497	16	SHIM, bearing adjustment (.003" thick)	} Use as req'd
	059618	24	SHIM, bearing adjustment (.007" thick)	
	059619	20	SHIM, bearing adjustment (.010" thick)	
	059617	8	SHIM, bearing adjustment (.032" thick)	
7	622753	4	RETAINER, inner bearing	
8	012992	24	CAPSCREW, 3/8"NF x 1-1/4"	
	904206	24	LOCKWASHER, 3/8"	
	911115	24	WASHER, plain, SAE std., 3/8"	
9	622195	4	RETAINER, outer bearing	
10	012992	24	CAPSCREW, 3/8"NF x 1-1/4"	
	904206	24	LOCKWASHER, 3/8"	
	911115	24	WASHER, plain, SAE std., 3/8"	
11	067253	4	□RING, seal, inner	
12	905357	4	□BALL, steel, 3/16" diam.	
13	923585	4	□O-RING, seal ring	
14	067251	4	□RING, seal, outer	
15	048681	4	SPRING ASSEMBLY, seal (Serviced only as a unit)	
16	048679	4	BOOT, seal spring	
17	622751	4	RETAINER, seal	
18	012561	4	CAPSCREW, bracket clamping (1"NF x 5-1/4")	
19	600236	4	NUT, high, 5/8"NF	
20	084593	4	BRACKET	
21	075567	8	CAPSCREW, 3/4"NF x 6-1/2"	
22	051634	8	CAPSCREW, 3/4"NF x 5-3/4"	
23	012984	8	CAPSCREW, 3/4"NF x 2-3/4"	
24	012767	24	NUT, high, 3/4"NF	
25	033288	-	CEMENT, neoprene, 1/2 pint can	} For cementing seal boots
26	054890	-	SOLVENT, neoprene cement, 1/2 pint can	
27	073169	4	SEAL KIT (Includes parts for one (1) roller assembly only; items 11 thru 14)	

□Indicates component of item 27

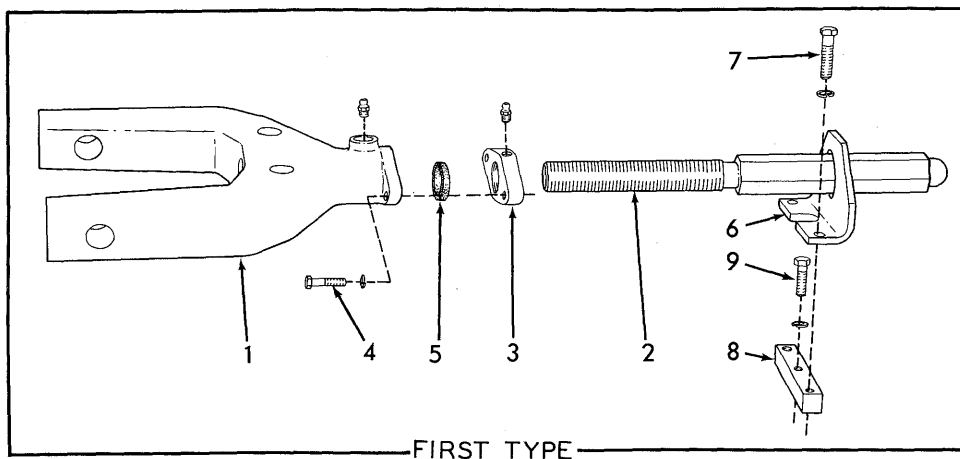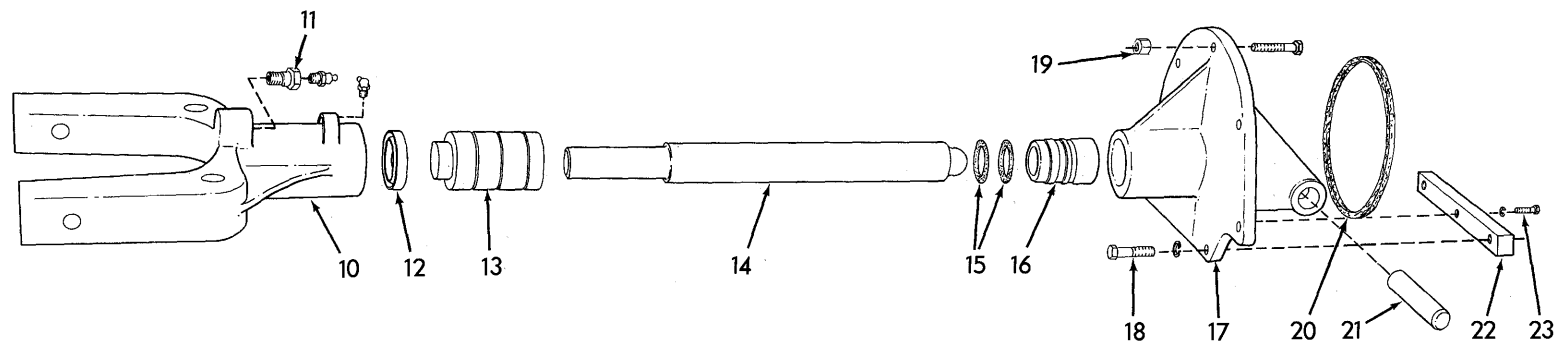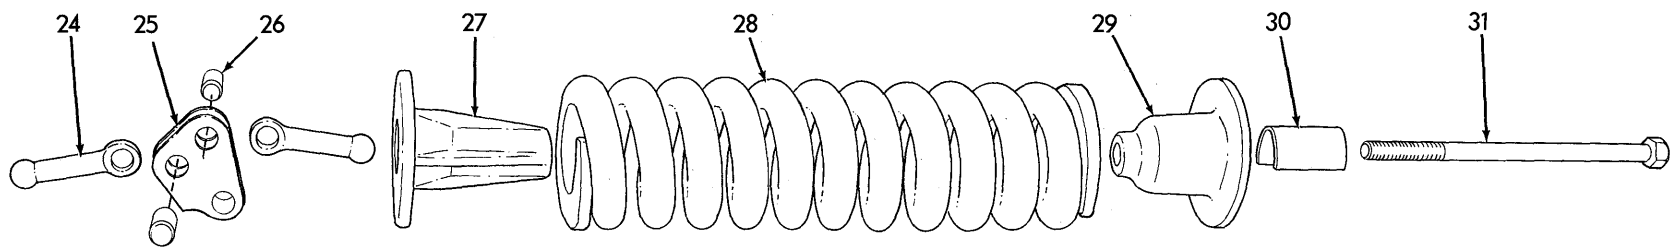

FIRST TYPE

TRACK RELEASE


T-72957

TRACK RELEASE

* Standard on tractors prior to serial No. 7983

** Standard on units effective with serial No. 7983; optional on prior units

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	059735	2	-	YOKE
	914465	2	-	FITTING, lubricating, straight, 1/8"NPT
2	079660	2	-	SCREW, adjustment
3	056614	2	-	LOCK, adjustment screw
	914465	2	-	FITTING, lubricating, straight, 1/8"NPT
4	035067	4	-	CAPSCREW, 1/2"NF x 2"
	904208	4	-	LOCKWASHER, 1/2"
5	066068	2	-	SEAL, protecting, adjustment screw threads (rubber)
6	096630	2	-	BRACKET, supporting, adjustment screw
7	023618	4	-	CAPSCREW, 5/8"NF x 2-1/2"
	904209	4	-	LOCKWASHER, 5/8"
8	093431	2	-	BLOCK, mounting, adjustment screw bracket
9	035229	2	-	CAPSCREW, 5/8"NF x 2"
	904209	2	-	LOCKWASHER, 5/8"
10	624207	-	2	YOKE ASSEMBLY (Includes items 11 thru 13 and FITTING indented below)
	915275	-	2	FITTING, lubricating, 65°, 1/8"NPT
11	628915	-	2	VALVE ASSEMBLY, relief (Serviced only as a unit)
	912808	-	2	FITTING, straight, 1/4" tapered thread (pressurizing)
12	628937	-	2	SEAL, piston
13	628936	-	2	PISTON, adjusting
14	644382	-	2	BAR, push
15	923827	4	4	O-RING, crosshead
16	621299	2	2	CROSSHEAD
17	-----	2	-	GUIDE, crosshead (Used prior to tractor #7336 including #7338. Order GUIDE 649679 and BELLCRANK 649678)
	649679	2	2	GUIDE, crosshead (Effective with tractor #7336 excluding #7338)
18	023618	14	14	CAPSCREW, 5/8"NF x 2-1/2"
	904209	4	4	LOCKWASHER, 5/8"
19	072366	10	10	NUT, high, 5/8"NF
20	059742	2	2	GASKET, crosshead guide
21	059737	2	2	PIN, bellcrank pivot
22	059599	2	2	BLOCK, mounting, crosshead guide
23	035073	2	2	CAPSCREW, 1/2"NF x 1-3/4"
	904208	2	2	LOCKWASHER, 1/2"
24	059731	4	4	ROD, push
25	649678	2	2	BELLCRANK
26	051798	4	4	PIN, push rod
27	059740	2	2	PLUNGER, spring
28	059713	2	2	SPRING
29	059741	2	2	SEAT, spring
30	059738	2	2	LOCK, spring adjustment capscREW
31	059739	2	2	CAPSCREW, spring adjustment

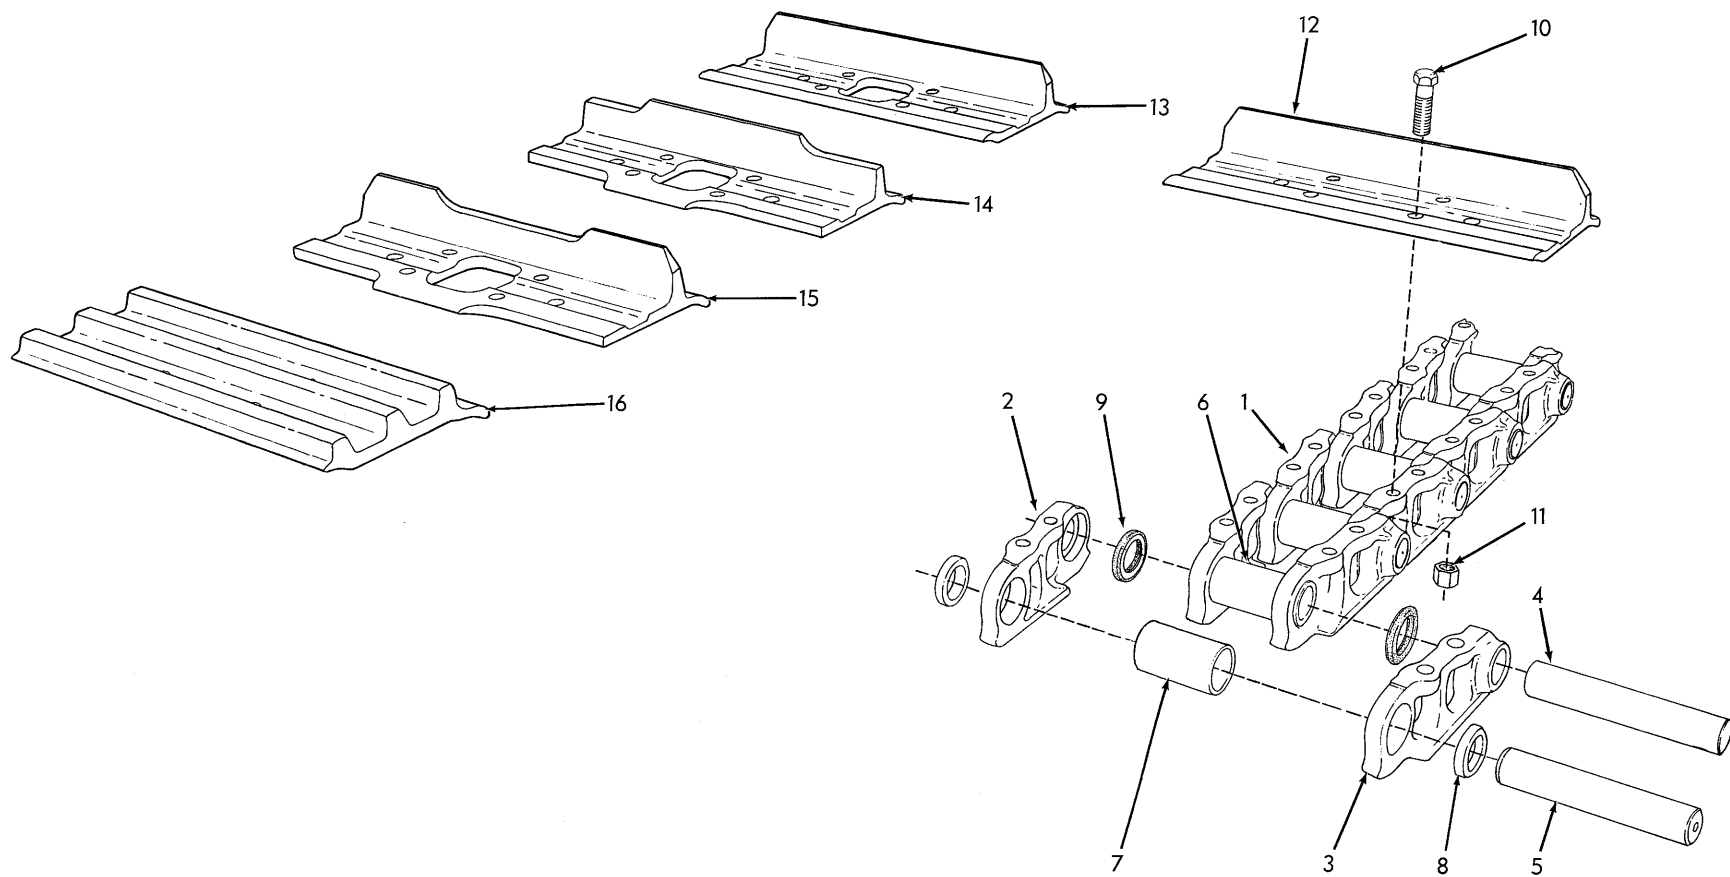

TRACK

T-10684

TRACK

* Tractors prior to serial No. 7172
 ** Tractors serial No. 7172 and up (Sealed-type)

ITEM	PART NO.	QTY. * **	DESCRIPTION
1	-----	2 -	RAIL ASSEMBLY (41 links)(Consists of items 2 thru 8)(Order RAIL ASSEMBLY 645942)
	645942	- 2	RAIL ASSEMBLY (41 links)(Consists of items 2 thru 7 and 9)
2	632975	82 80	BAR, left
	645933	- 2	BAR, master, left
3	632976	82 80	BAR, right
	645934	- 2	BAR, master, right
4	633365	80 80	PIN (10-1/4" long)
5	633236	2 2	PIN, master (10-1/4" long)
6	-----	80 -	BUSHING (7-3/4" long)(Order BUSHING 645920 and 2 SEALS 645784)
	645920	- 80	BUSHING (6-15/16" long)
7	645947	2 2	BUSHING, master (6-3/4" long)
8	633266	4 -	SPACER, master bushing
9	645784	- 164	SEAL
10	097324	328 328	BOLT, track shoe (3/4" x 2-1/2")
	655820	- 328	BOLT, track shoe (3/4"NF x 2-5/8")(For severe-service shoes only)
11	083617	328 328	NUT, high, 3/4"NF
11A	651370	- -	LUBRICANT, track pin, 1 gal. can (Not illustrated)

TRACK SHOES

COMPLETE TRACK ASSEMBLIES WITH SHOES (2 Required)

				*	**
12	633380	82 82	SHOE, grouser, 18"	-----	647206
	633270	82 82	SHOE, grouser, 20"	-----	645984
	655822	- 82	SHOE, grouser, 20" (Severe service) . .	-----	655826
	633355	82 82	SHOE, grouser, 22"	-----	647215
	659763	- 82	SHOE, grouser, 22" (Severe service) . .	-----	659770
	633390	82 82	SHOE, grouser, 24"	-----	647209
	650155	- 41	SHOE, grouser, left side, 26" (offset) . .	-----	650171
	650156	- 41	SHOE, grouser, right side, 26" (offset) .	-----	650172
	633454	82 82	SHOE, grouser, 28"	-----	647212

(Continued)

TRACK (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION		
		*	**		TRACK SHOES	COMPLETE TRACK ASSEMBLIES WITH SHOES (2 Required)
						* **
13	633337	82	82	SHOE, grouser, cut-out, 18"		----- ... 651538
	633356	82	82	SHOE, grouser, cut-out, 22"		
	633375	82	82	SHOE, grouser, cut-out, 24"		
14	633345	40	40	SHOE, grouser, snow and ice, single calk, cut-out, 20"		
15	633346	42	42	SHOE, grouser, snow and ice, double calk, cut-out, 20"		
16	650154	82	82	SHOE, semi-grouser, 24"		----- ... 650170
	633446	82	82	SHOE, semi-grouser, cut-out, 22"	...	----- ... 647203

NOTE: Complete TRACK ASSEMBLIES with SHOES are furnished only in sizes and types as listed. Assemblies other than those listed, may be made up in the field by ordering the various components.

TRACK IDLER



* Tractors prior to serial No. 8019 excluding Nos. 8003, 8008, 8011, 8017

** Tractors serial No. 8019 and up, including Nos. 8003, 8008, 8011, 8017

ITEM	PART NO.	QTY. * **		DESCRIPTION	
1	{ 639018	2	-	IDLER ASSEMBLY, track	Each consists of items 2 thru 15
	655988	-	2	IDLER ASSEMBLY, track	
2	{ 639017	2	-	IDLER	
	655987	-	2	IDLER	
3	622001	2	2	SHAFT	
4	042873	4	4	CONE ASSEMBLY, bearing	
5	042898	4	4	CUP, bearing	
6	067139	4	4	□RING, seal, inner	
7	905357	4	4	□BALL, steel, 3/16" diam.	
8	067137	4	4	□O-RING, seal ring	
9	051623	4	4	□RING, seal, outer	
10	{ 655528	8	8	SHIM, bearing adjustment (.003" thick)	Use as req'd
	059387	8	8	SHIM, bearing adjustment (.007" thick)	
	059386	12	12	SHIM, bearing adjustment (.010" thick)	
	059385	4	4	SHIM, bearing adjustment (.032" thick)	
11	067141	4	4	RETAINER, bearing	
12	035018	24	24	CAPSCREW, 1/2"NF x 1-1/2"	
	904208	24	24	LOCKWASHER, 1/2"	
13	051959	4	4	SPRING ASSEMBLY, seal (Serviced only as a unit)	
14	051629	4	4	BOOT, seal	
15	099506	4	4	RETAINER, seal	
16	{ 639025	2	-	BRACKET ASSEMBLY, left (Includes item 22)	
	655993	-	2	BRACKET ASSEMBLY, left (Includes item 22)	
17	638796	4	4	CAPSCREW, 5/8"NF x 5"	
18	072366	4	4	NUT, high, 5/8"NF	
19	{ 639026	2	-	BRACKET ASSEMBLY, right (Includes item 22)	
	655994	-	2	BRACKET ASSEMBLY, right (Includes item 22)	
20	638796	4	4	CAPSCREW, 5/8"NF x 5"	
21	072366	4	4	NUT, high, 5/8"NF	
22	056585	4	4	PIN, dowel, idler bracket to release yoke	

□Indicates component of item 32


(Continued)

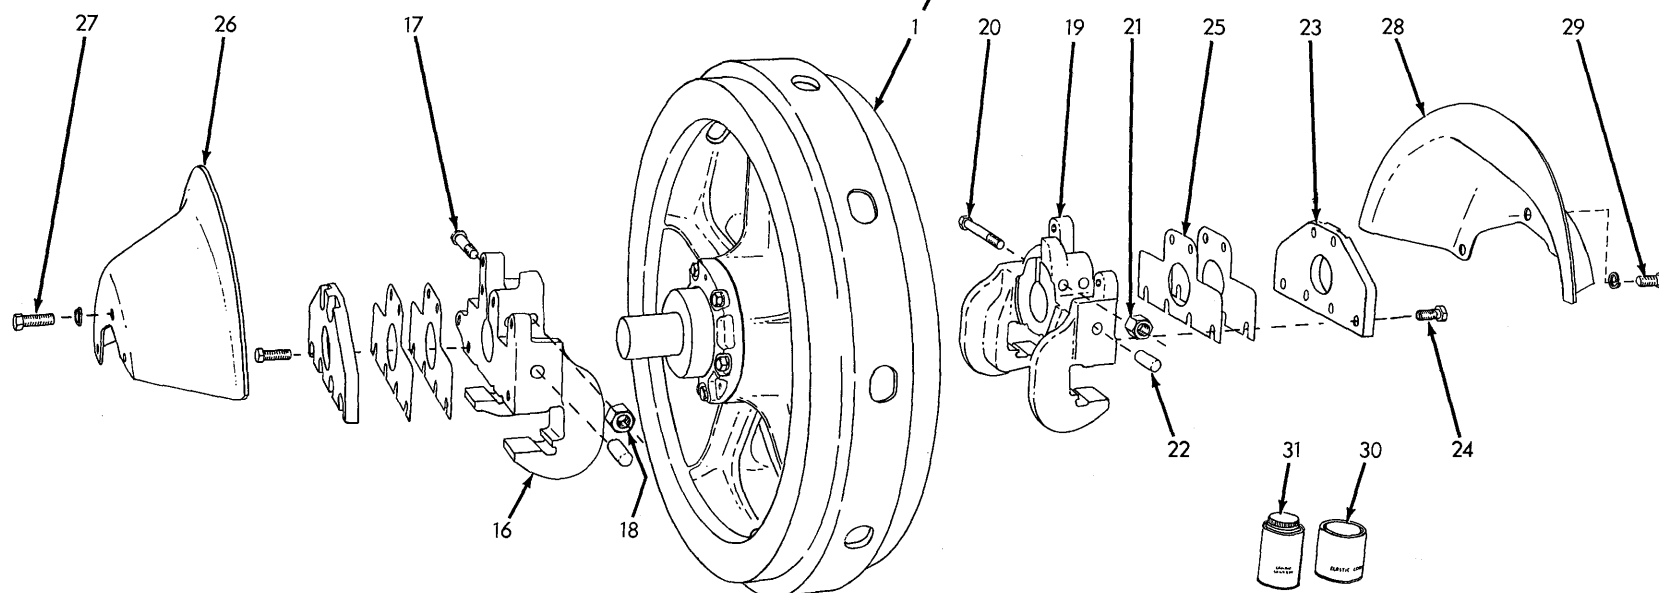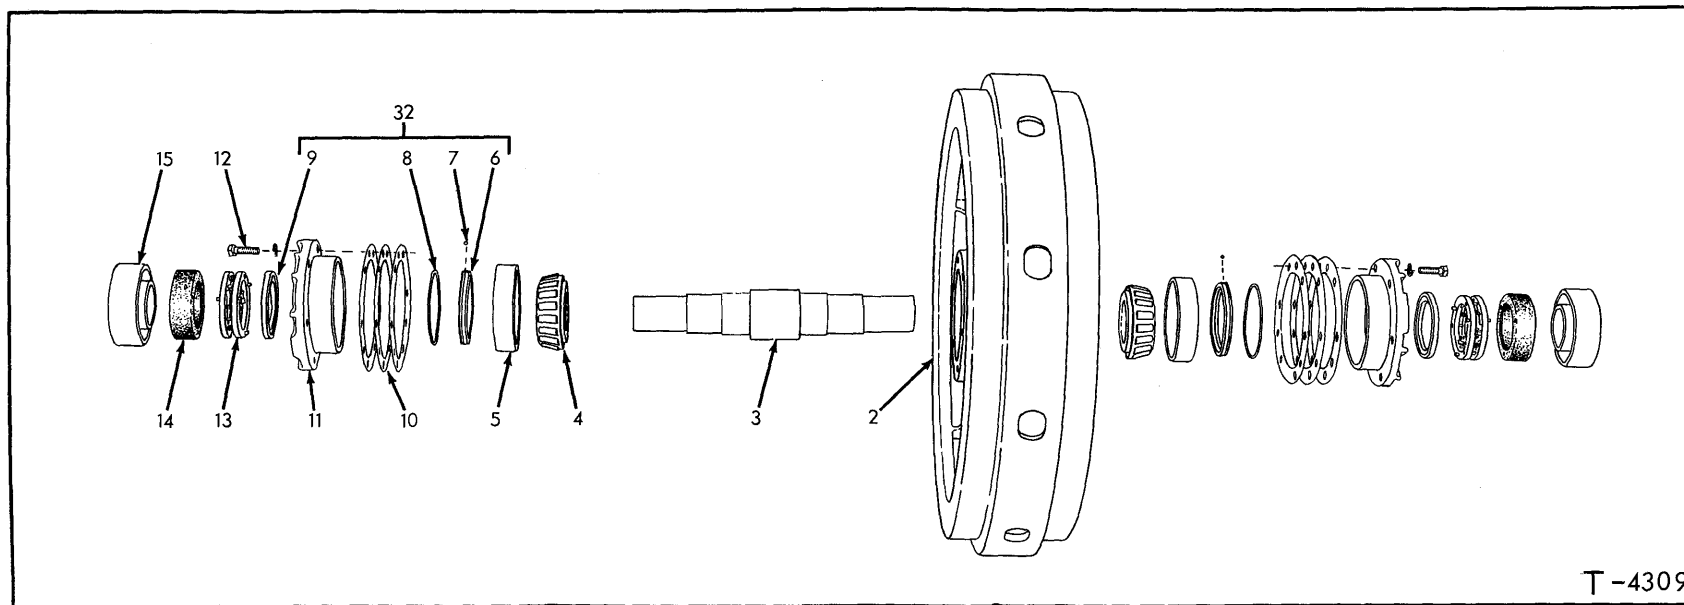

TRACK IDLER

TRACK IDLER (Continued)

ITEM	PART NO.	QTY. * **		DESCRIPTION	
23	638957	4	-	PLATE, guide	
	655995	-	4	PLATE, guide	
24	035014	24	24	CAPSCREW, 5/8"NF x 1-1/2"	
25	639058	8	-	SHIM, guide plate (1/32" thick)	Use as req'd
	655990	-	8	SHIM, guide plate (1/32" thick)	
	638956	4	-	SHIM, guide plate (1/16" thick)	
	655989	-	4	SHIM, guide plate (1/16" thick)	
26	638997	2	-	GUARD, left	Special equipment
	081405	-	2	GUARD, left	
27	035014	6	6	CAPSCREW, 5/8"NF x 1-1/2"	
	904209	6	6	LOCKWASHER, 5/8"	
28	638998	2	-	GUARD, right	
	081406	-	2	GUARD, right	
29	035014	6	6	CAPSCREW, 5/8"NF x 1-1/2"	
	904209	6	6	LOCKWASHER, 5/8"	
30	033288	-	-	CEMENT, neoprene, 1/2 pint can	For cementing seal boots
31	054890	-	-	SOLVENT, neoprene cement, 1/2 pint can	
32	083209	2	2	SEAL KIT (Includes parts for one (1) idler only; items 6 thru 9)	

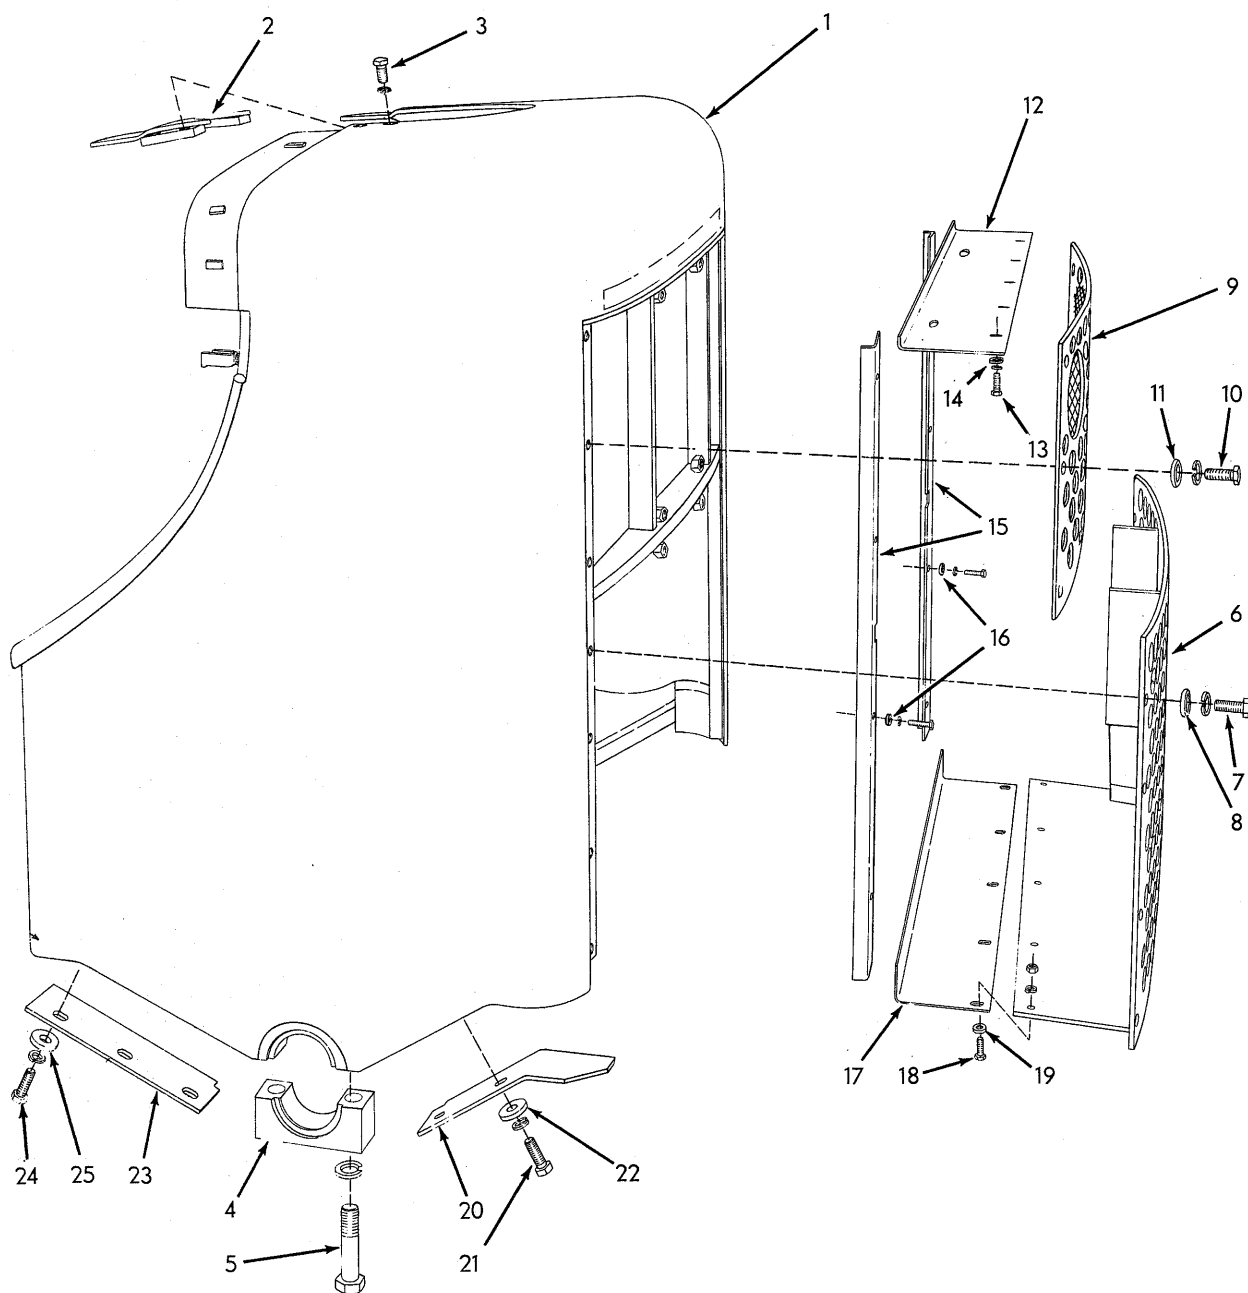

RADIATOR GUARD (Standard)

T-16267


RADIATOR GUARD

USAGE: Standard equipment. See following pages for optional designs

ITEM	PART NO.	QTY.	DESCRIPTION
1	093198	1	GUARD ASSEMBLY, radiator (Includes items 2 thru 5)
2	084413	1	PLATE, top closure
3	070590	4	CAPSCREW, 5/8"NF x 1-1/8"
	904209	4	LOCKWASHER, 5/8"
4	649455	2	CAP, guard pivot
5	038203	4	CAPSCREW, 1"NF x 4-1/2"
	910916	4	LOCKWASHER, 1"
6	093178	1	PLATE, front closure, lower
7	036707	10	CAPSCREW, 5/8"NC x 1-3/4"
	904209	10	LOCKWASHER, 5/8"
8	064810	10	WASHER, plain
9	093183	1	PLATE, front closure, upper
10	036707	10	CAPSCREW, 5/8"NC x 1-3/4"
	904209	10	LOCKWASHER, 5/8"
11	064810	10	WASHER, plain
12	093224	1	BAFFLE, air, upper
13	012992	5	CAPSCREW, 3/8"NF x 1-1/4"
	904206	5	LOCKWASHER, 3/8"
14	044973	5	WASHER, plain
15	084655	2	BAFFLE, air, side (Attached to radiator)
	911168	8	CAPSCREW, 5/16"NF x 7/8"
	904205	8	LOCKWASHER, 5/16"
16	092665	8	WASHER, plain
17	088044	1	BAFFLE, air, lower
18	012992	5	CAPSCREW, 3/8"NF x 1-1/4"
19	044973	5	WASHER, plain
	904206	5	LOCKWASHER, 3/8"
	911041	5	NUT, 3/8"NF
20	{ 098097	1	PLATE, bottom closure, left front
	{ 098098	1	PLATE, bottom closure, right front
21	035229	4	CAPSCREW, 5/8"NF x 2"
	904209	4	LOCKWASHER, 5/8"
22	064810	4	WASHER, plain
23	084979	2	PLATE, bottom closure, rear
24	035229	6	CAPSCREW, 5/8"NF x 2"
	904209	6	LOCKWASHER, 5/8"
25	064810	6	WASHER, plain

Used prior to tractor #7801

NOTE: See PAINTING AND MARKING for transfer

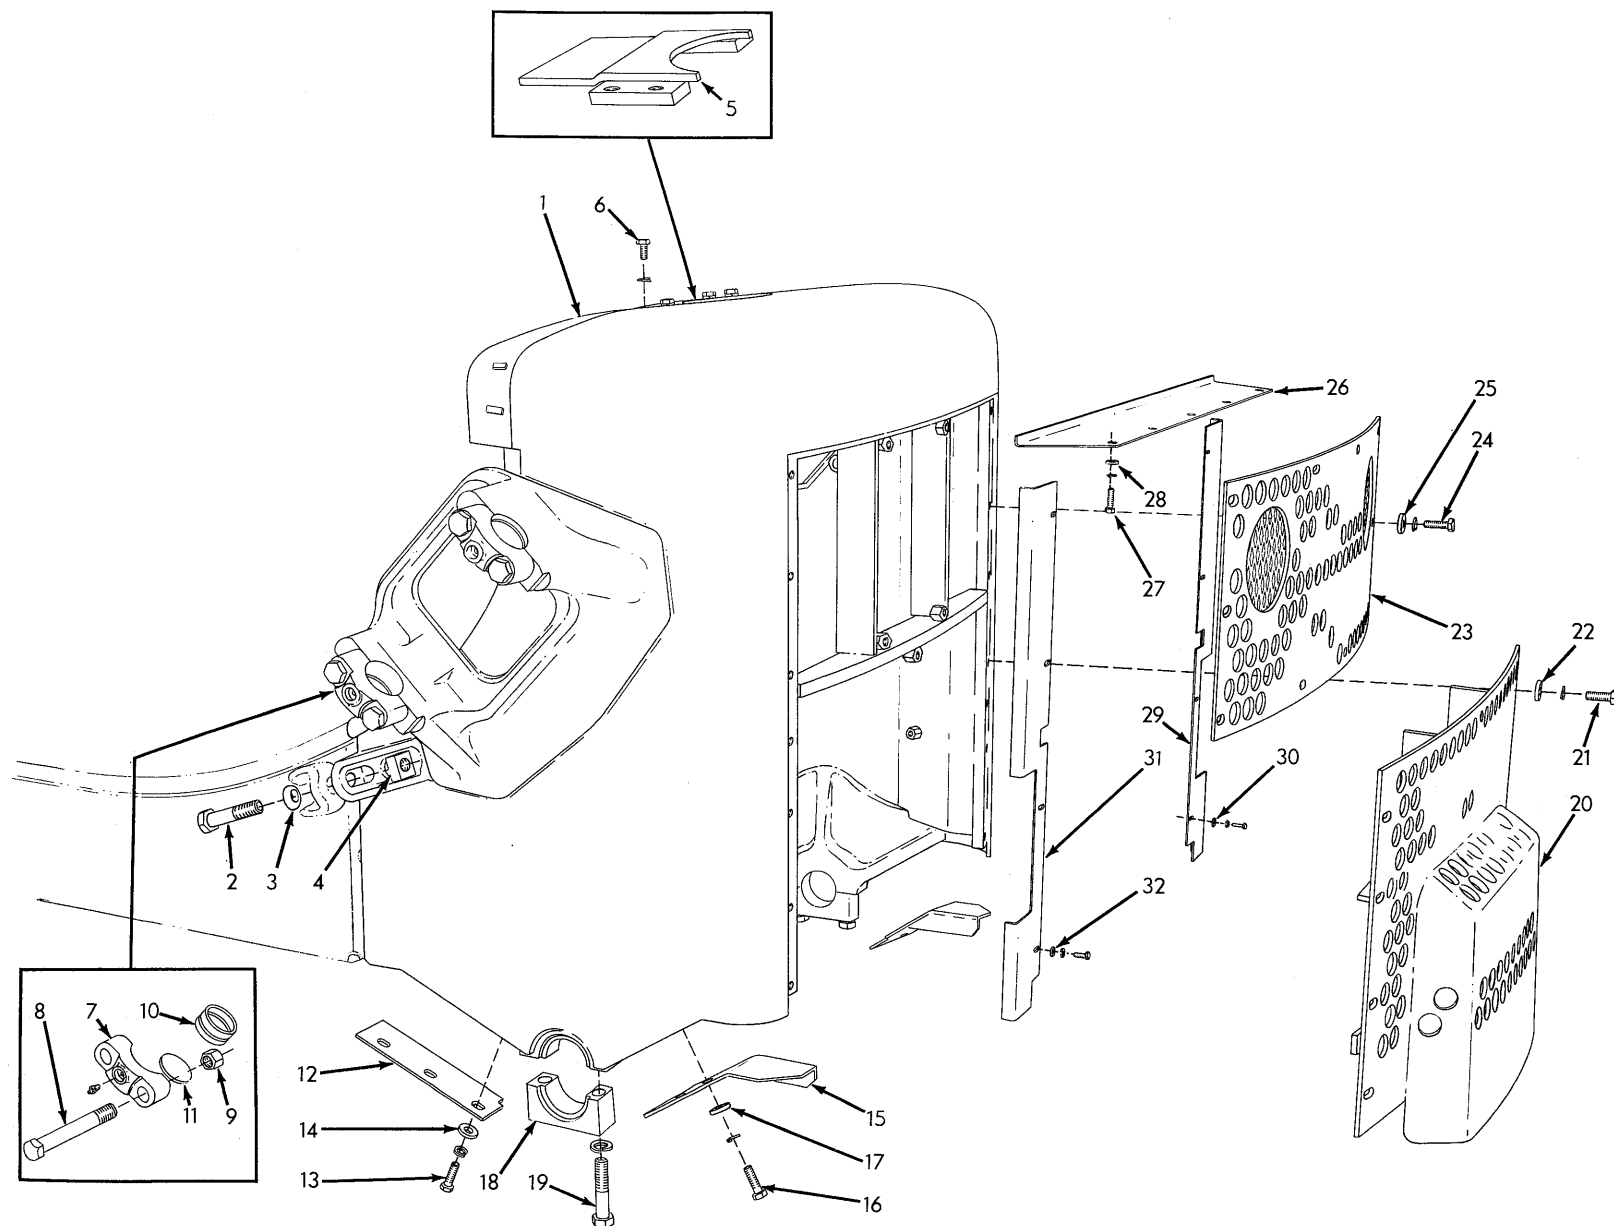

RADIATOR GUARD (Hydraulic)

T-24033


RADIATOR GUARD (Hydraulic)

USAGE: Tractors equipped with hydraulic dozer

ITEM	PART NO.	QTY.	DESCRIPTION
1	092908	1	GUARD ASSEMBLY, radiator (Includes items 5 thru 9, 18, 19, 21 and 24)(Used prior to June 15, 1965. For dozer cylinders with 37-1/2" stroke)
	650380	1	GUARD ASSEMBLY, radiator (Includes 5 thru 9, 18 and 19)(Effective June 15, 1965. For dozer cylinders with 43" stroke)
2	089231	2	CAPSCREW, guard supporting
3	089229	2	WASHER, spherical
4	089230	2	NUT, spherical
5	084413	1	PLATE, top closure
6	070590	4	CAPSCREW, 5/8"NF x 1-1/8"
	904209	4	LOCKWASHER, 5/8"
7	085140	4	CAP, trunnion
	914465	4	FITTING, lubricating, straight, 1/8"NPT
8	070861	8	CAPSCREW, 1"NF x 10-1/2"
9	600236	8	NUT, high, 1"NF
10	084581	4	BUSHING, trunnion
11	084612	4	PLATE, retaining, trunnion bushing
12	084979	2	PLATE, bottom closure, rear
13	035229	6	CAPSCREW, 5/8"NF x 2"
	904209	6	LOCKWASHER, 5/8"
14	064810	6	WASHER, plain
15	098095	1	PLATE, bottom closure, left front
	098096	1	PLATE, bottom closure, right front
16	035229	4	CAPSCREW, 5/8"NF x 2"
	904209	4	LOCKWASHER, 5/8"
17	064810	4	WASHER, plain
18	649455	2	CAP, guard pivot
19	038203	4	CAPSCREW, 1"NF x 4-1/2"
	910916	4	LOCKWASHER, 1"
20	631664	1	PLATE, front closure, lower
	093178	1	PLATE, front closure, lower (Permits use of front bumper when hydraulic pump is not installed)
21	036707	9	CAPSCREW, 5/8"NC x 1-3/4"
	904209	9	LOCKWASHER, 5/8"
22	064810	9	WASHER, plain
23	093183	1	PLATE, front closure, upper
24	036707	10	CAPSCREW, 5/8"NC x 1-3/4"
	904209	10	LOCKWASHER, 5/8"
25	064810	10	WASHER, plain
26	093225	1	BAFFLE, air, upper
27	012992	5	CAPSCREW, 3/8"NF x 1-1/4"
	904206	5	LOCKWASHER, 3/8"
28	044973	5	WASHER, plain
29	093191	1	BAFFLE, air, left side
	911168	4	CAPSCREW, 5/16"NF x 7/8"
	904205	4	LOCKWASHER, 5/16"
30	092665	4	WASHER, plain

Used prior to September 1966

(Continued)

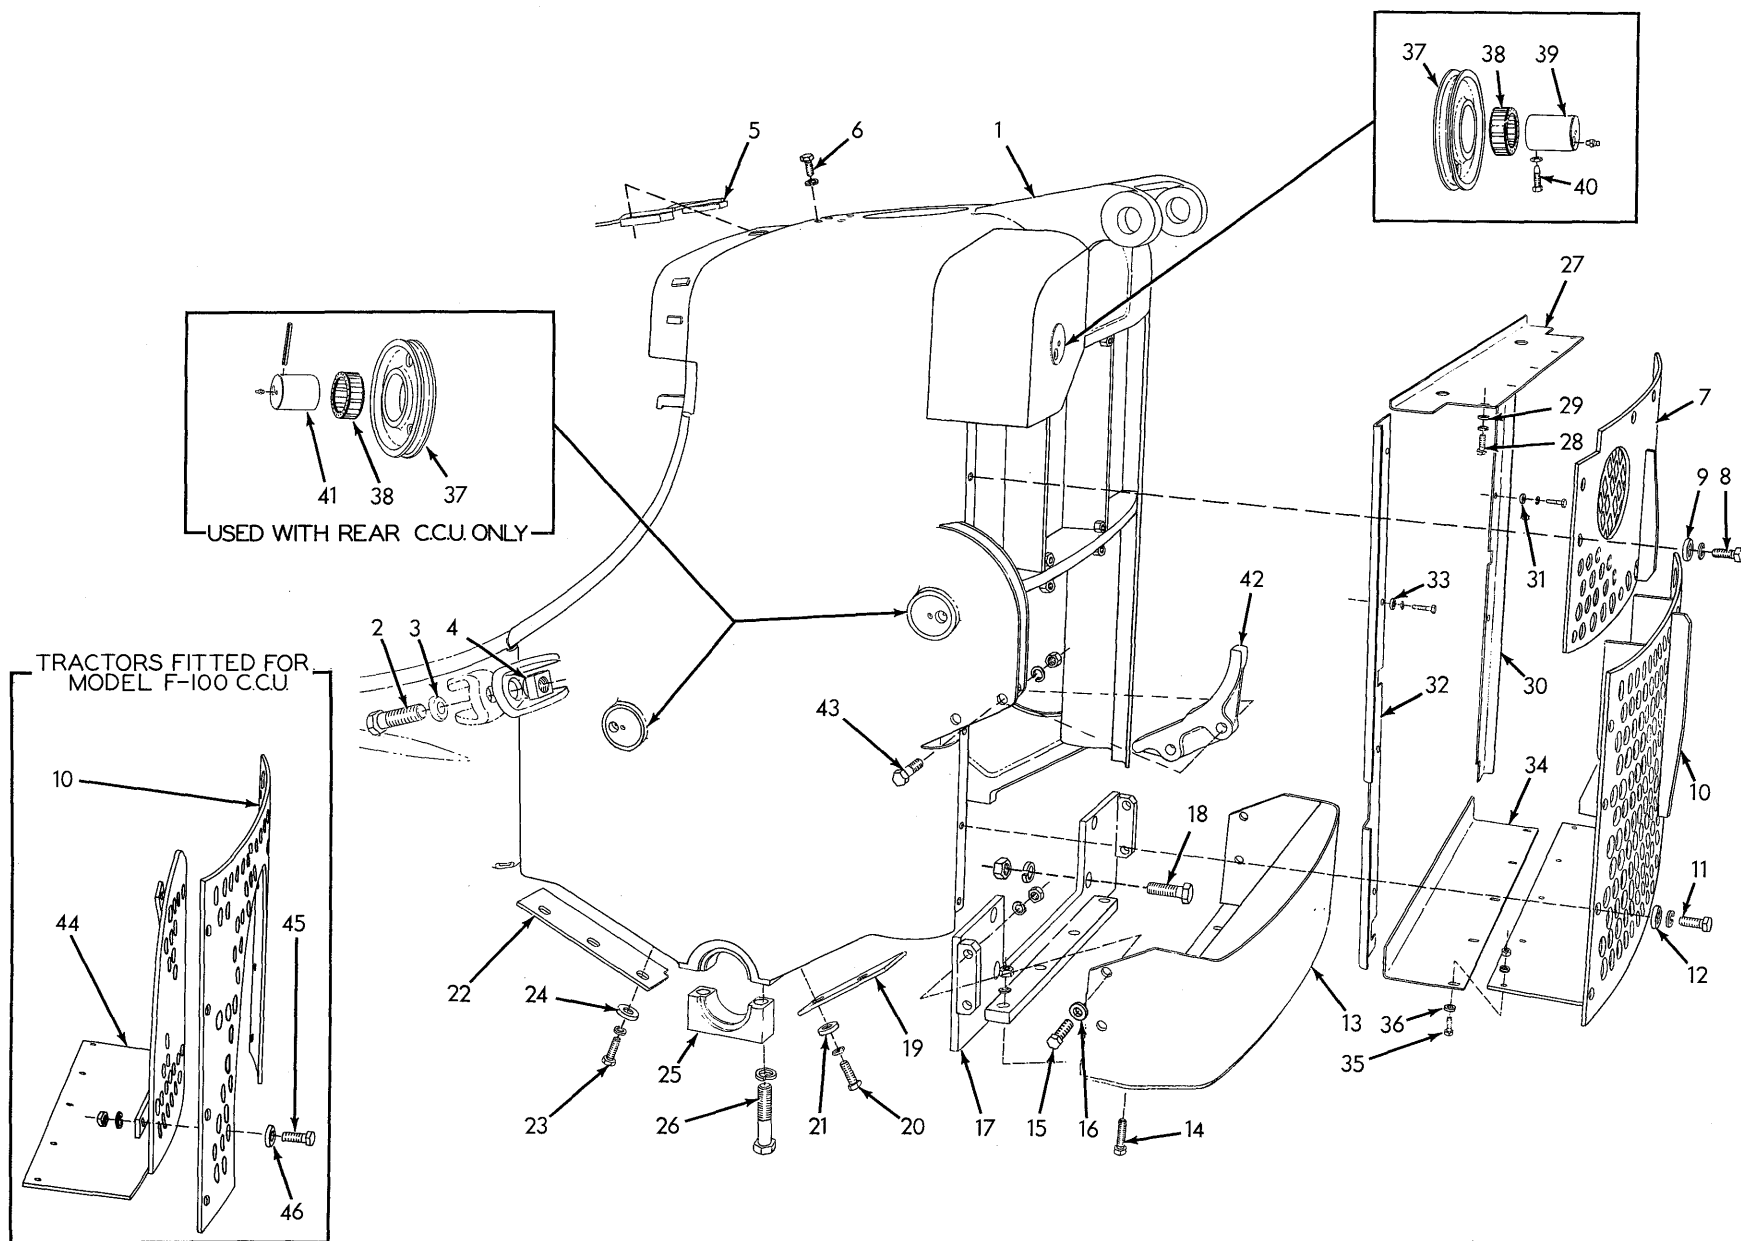

RADIATOR GUARD (Cable)

T-16265

RADIATOR GUARD (Hydraulic)(Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
31	{ 093192	1	BAFFLE, air, right side
	{ 626497	1	BAFFLE, air, right side (For tractors with Ripper)
32	911168	4	CAPSCREW, 5/16"NF x 7/8"
	904205	4	LOCKWASHER, 5/16"
	092665	4	WASHER, plain

NOTE: See PAINTING AND MARKING for transfer

RADIATOR GUARD (Cable)

USAGE: Tractors equipped with cable dozer

		* Used with rear-mounted cable control	
		** Used with front-mounted cable control	
ITEM	PART NO.	QTY. * **	DESCRIPTION
1	093273	1 1	GUARD ASSEMBLY, radiator (Includes items 5, 6, 25 and 26)
2	089231	2 2	CAPSCREW, guard supporting
3	089229	2 2	WASHER, spherical
4	089230	2 2	NUT, spherical
5	084413	1 1	PLATE, top closure
6	070590	4 4	CAPSCREW, 5/8"NF x 1-1/8"
	904209	4 4	LOCKWASHER, 5/8"
7	093260	1 1	PLATE, front closure, upper
8	036707	10 10	CAPSCREW, 5/8"NC x 1-3/4"
	904209	10 10	LOCKWASHER, 5/8"
9	064810	10 10	WASHER, plain
10	{ 093098	1 -	PLATE, front closure, lower
	{ 099803	- 1	PLATE, front closure, lower
11	036707	10 6	CAPSCREW, 5/8"NC x 1-3/4"
	904209	10 6	LOCKWASHER, 5/8"
12	064810	10 6	WASHER, plain
13	609674	1 -	GUARD, lower section
14	023755	4 -	CAPSCREW, 5/8"NC x 2-1/4"
15	037573	4 -	CAPSCREW, 5/8"NC x 2-3/4"
16	064810	4 -	WASHER, plain
	904209	8 -	LOCKWASHER, 5/8"
	911029	8 -	NUT, 5/8"NC
17	609470	1 -	BRACKET, lower section guard
18	070272	4 -	CAPSCREW, 1"NF x 3"
	910916	4 -	LOCKWASHER, 1"
	911047	4 -	NUT, 1"NF

(Continued)


RADIATOR GUARD (Cable)(Continued)

ITEM	PART NO.	QTY. * **		DESCRIPTION	
19	098097	1	-	PLATE, bottom closure, left front	Used prior to September 1966
	098098	1	-	PLATE, bottom closure, right front	
	098095	-	1	PLATE, bottom closure, left front	
	098096	-	1	PLATE, bottom closure, right front	
20	035229	4	4	CAPSCREW, 5/8"NF x 2"	
	904209	4	4	LOCKWASHER, 5/8"	
21	064810	4	4	WASHER, plain	
22	084979	2	2	PLATE, bottom closure, rear	
23	035229	6	6	CAPSCREW, 5/8"NF x 2"	
	904209	6	6	LOCKWASHER, 5/8"	
24	064810	6	6	WASHER, plain	
25	649455	2	2	CAP, guard pivot	
26	038203	4	4	CAPSCREW, 1"NF x 4-1/2"	
	910916	4	4	LOCKWASHER, 1"	
27	093241	1	1	BAFFLE, air, upper	
28	012992	5	5	CAPSCREW, 3/8"NF x 1-1/4"	
	904206	5	5	LOCKWASHER, 3/8"	
29	044973	5	5	WASHER, plain	
30	084655	1	1	BAFFLE, air, left side	
	911168	4	4	CAPSCREW, 5/16"NF x 7/8"	
	904205	4	4	LOCKWASHER, 5/16"	
31	092665	4	4	WASHER, plain	
32	085087	1	1	BAFFLE, air, right side	
	911168	4	4	CAPSCREW, 5/16"NF x 7/8"	
	904205	4	4	LOCKWASHER, 5/16"	
33	092665	4	4	WASHER, plain	
34	088044	1	-	BAFFLE, air, lower	
35	012992	5	-	CAPSCREW, 3/8"NF x 1-1/4"	
36	044973	5	-	WASHER, plain	
	904206	5	-	LOCKWASHER, 3/8"	
	911041	5	-	NUT, 3/8"NF	
37	084758	3	1	SHEAVE, control cable	
38	044875	3	1	BEARING, roller, cable sheave	
39	084757	1	1	SHAFT, front sheave	
	914465	1	1	FITTING, lubricating, straight, 1/8"NPT	
40	035188	1	1	SETSCREW, shaft retaining	
	911035	1	1	NUT, jam, 1/2"NC	
41	084384	2	-	SHAFT, side sheaves	
	914465	2	-	FITTING, lubricating, straight, 1/8"NPT	
	917936	2	-	PIN, spring, 3/8" x 3-1/2"	
	093043	-	2	CUP, hole closure	
	917936	-	2	PIN, spring, 3/8" x 3-1/2"	

(Continued)

RADIATOR GUARD (Cable)(Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
42	084694	1	-	GUIDE, cable
	085058	-	1	GUIDE, false (Serves as sheave compartment dirt closure)
43	035306	2	2	CAPSCREW, 5/8"NF x 3-1/4"
	904209	2	2	LOCKWASHER, 5/8"
	911044	2	-	NUT, 5/8"NF
	094455	-	1	BLOCK, tapped
44	620859	-	1	PLATE, closure (For use only when F-100 Cable Control Unit is re-moved)
45	036707	-	4	CAPSCREW, 5/8"NC x 1-3/4"
46	086961	-	4	WASHER, plain
	904209	-	4	LOCKWASHER, 5/8"
	911029	-	4	NUT, 5/8"NC

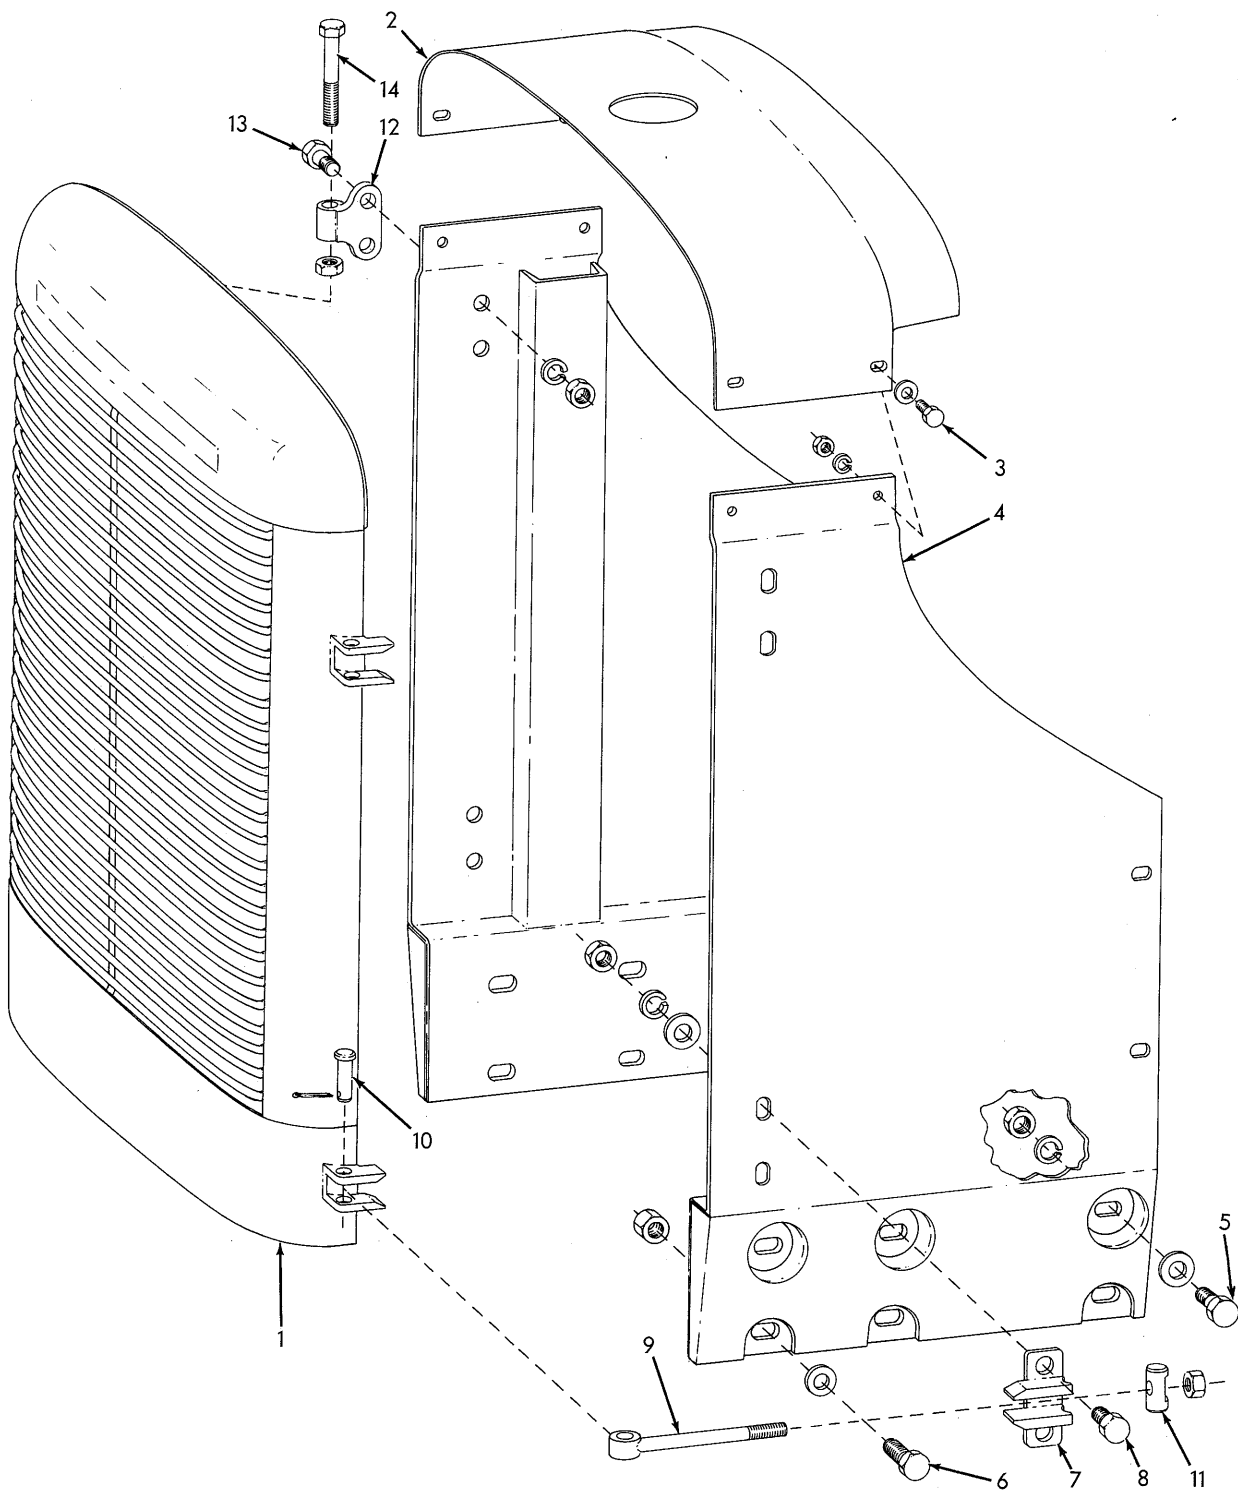

RADIATOR SHELL


T-73641

RADIATOR SHELL

USAGE: Optional on Model HD16D for light-duty applications

ITEM	PART NO.	QTY.	DESCRIPTION
1	641800	1	GRILL, radiator protecting
2	641976	1	TOP, shell
3	035018	4	CAPSCREW, 1/2"NF x 1-1/2"
	064531	4	WASHER, plain
	904208	4	LOCKWASHER, 1/2"
	911043	4	NUT, 1/2"NF
4	642052	1	PLATE, shell side, left
	641994	1	PLATE, shell side, right
5	070285	4	CAPSCREW, 3/4"NF x 3"
	061689	4	WASHER, plain
	904369	4	LOCKWASHER, 3/4"
	911045	4	NUT, 3/4"NF
6	012586	8	CAPSCREW, 1"NF x 3-1/2"
	095951	8	WASHER, plain
	600236	8	NUT, high, 1"NF
7	641914	2	BRACKET, grill latching rod
8	012453	4	CAPSCREW, 3/4"NF x 2"
	061689	4	WASHER, plain
	904369	4	LOCKWASHER, 3/4"
	911045	4	NUT, 3/4"NF
9	642224	2	ROD, grill latching
	911045	2	NUT, 3/4"NF
10	642222	2	PIN, grill latching rod
	910302	2	PIN, cotter, 5/32" x 1-1/4"
11	642221	2	PIN, grill latching rod (plain hole)
12	641913	2	BRACKET, hinge, radiator grill
13	012453	4	CAPSCREW, 3/4"NF x 2"
	904369	4	LOCKWASHER, 3/4"
	911045	4	NUT, 3/4"NF
14	642392	2	CAPSCREW, 7/8"NF x 5"
	911046	2	NUT, 7/8"NF

NOTE: See PAINTING AND MARKING for transfer

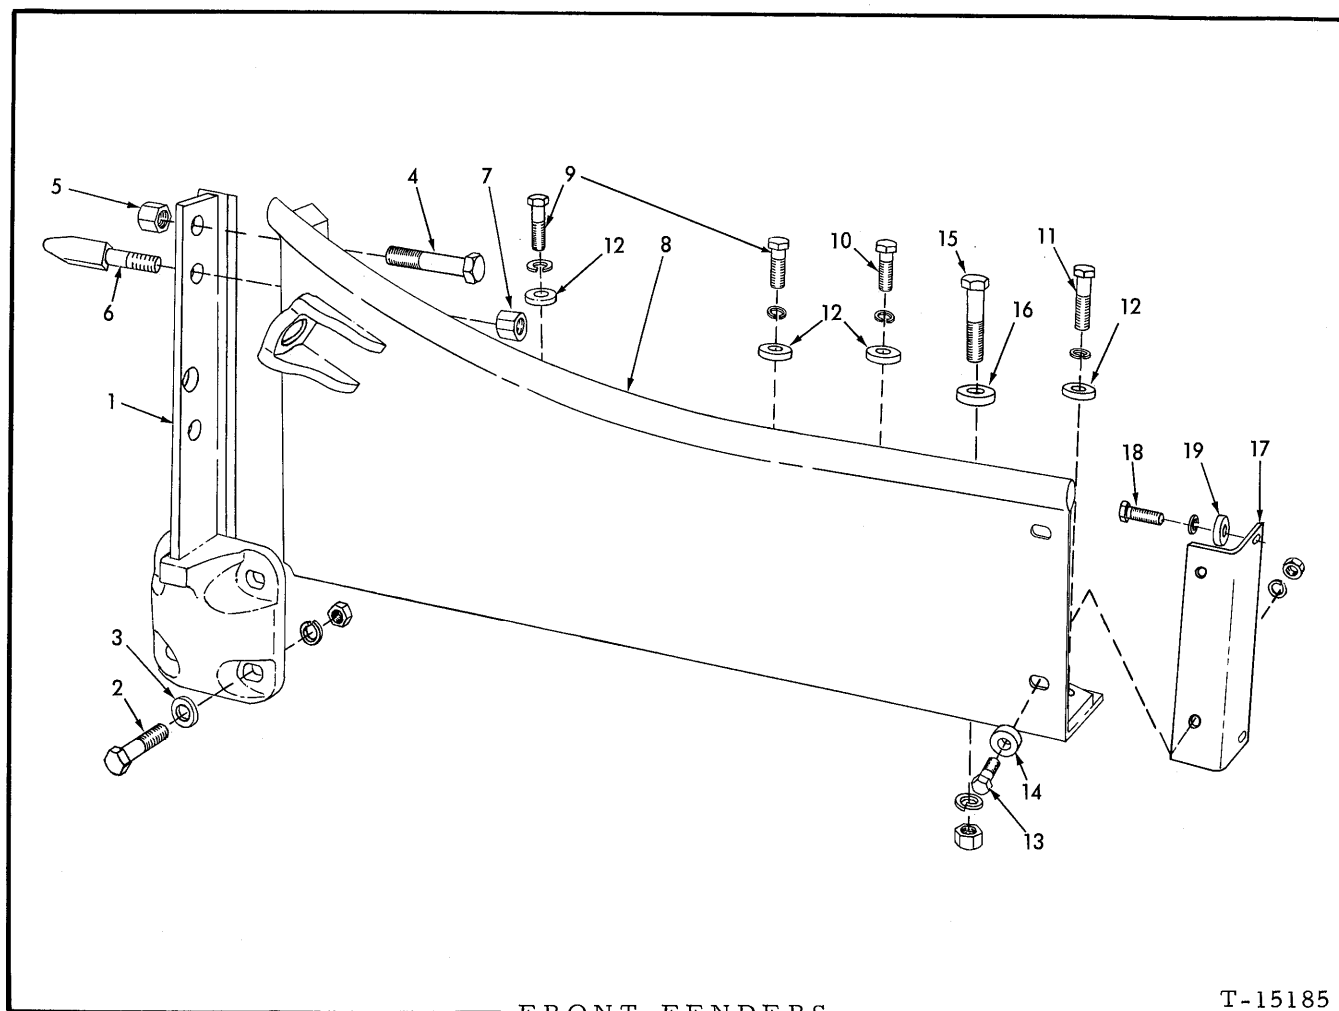

USAGE: Tractors equipped with Wrap-around Radiator Guards

* Units with Standard Radiator Guard


** Units with Hydraulic or Cable Radiator Guards

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	084773	2	2	BRACKET, fender attachment
2	052527	8	8	CAPSCREW, 3/4"NF x 3-1/2"
3	085957	8	8	WASHER, plain
	904369	8	8	LOCKWASHER, 3/4"
	911045	8	8	NUT, 3/4"NF
4	085026	4	4	CAPSCREW, fender attachment (7/8"NF x 4-1/2")
5	070400	4	4	NUT, high, 7/8"NF
6	-----	2	2	PIN, guide, radiator guard (Discontinued. Not needed)
7	012757	2	2	NUT, high, 3/4"NF

(Continued)


FRONT FENDERS (Continued)

ITEM	PART NO.	QTY. * **		DESCRIPTION
8	630115	1	-	FENDER, left side
	630116	1	-	FENDER, right side
	630117	-	1	FENDER, left side
	630118	-	1	FENDER, right side (For all tractors except those equipped with cable dozer using rear-mounted cable control unit)
	630119	-	1	FENDER, right side (For tractors equipped with cable dozer using rear-mounted cable control unit)
9	631795	6	6	CAPSCREW, Nylok, 5/8"NF x 1-3/4"
10	658574	2	2	CAPSCREW, Nylok, 5/8"NF x 2-3/4"
11	658573	2	2	CAPSCREW, Nylok, 5/8"NF x 3-1/2"
12	064810	10	10	WASHER, plain
	904209	10	10	LOCKWASHER, 5/8"
13	035073	4	4	CAPSCREW, 1/2"NF x 1-3/4"
14	064531	4	4	WASHER, plain
	904208	4	4	LOCKWASHER, 1/2"
	911043	4	4	NUT, 1/2"NF
15	658572	4	4	CAPSCREW, Nylok, 3/4"NF x 3-1/4"
16	061689	4	4	WASHER, plain
	904369	4	4	LOCKWASHER, 3/4"
	911045	4	4	NUT, 3/4"NF
17	632257	1	1	ANGLE, attachment, left fender
	632258	1	1	ANGLE, attachment, right fender
18	035067	4	4	CAPSCREW, 1/2"NF x 2" (Early units)
	921556	4	4	CAPSCREW, 1/2"NC x 2" (Late units)
	904208	4	4	LOCKWASHER, 1/2"
19	064531	4	4	WASHER, plain

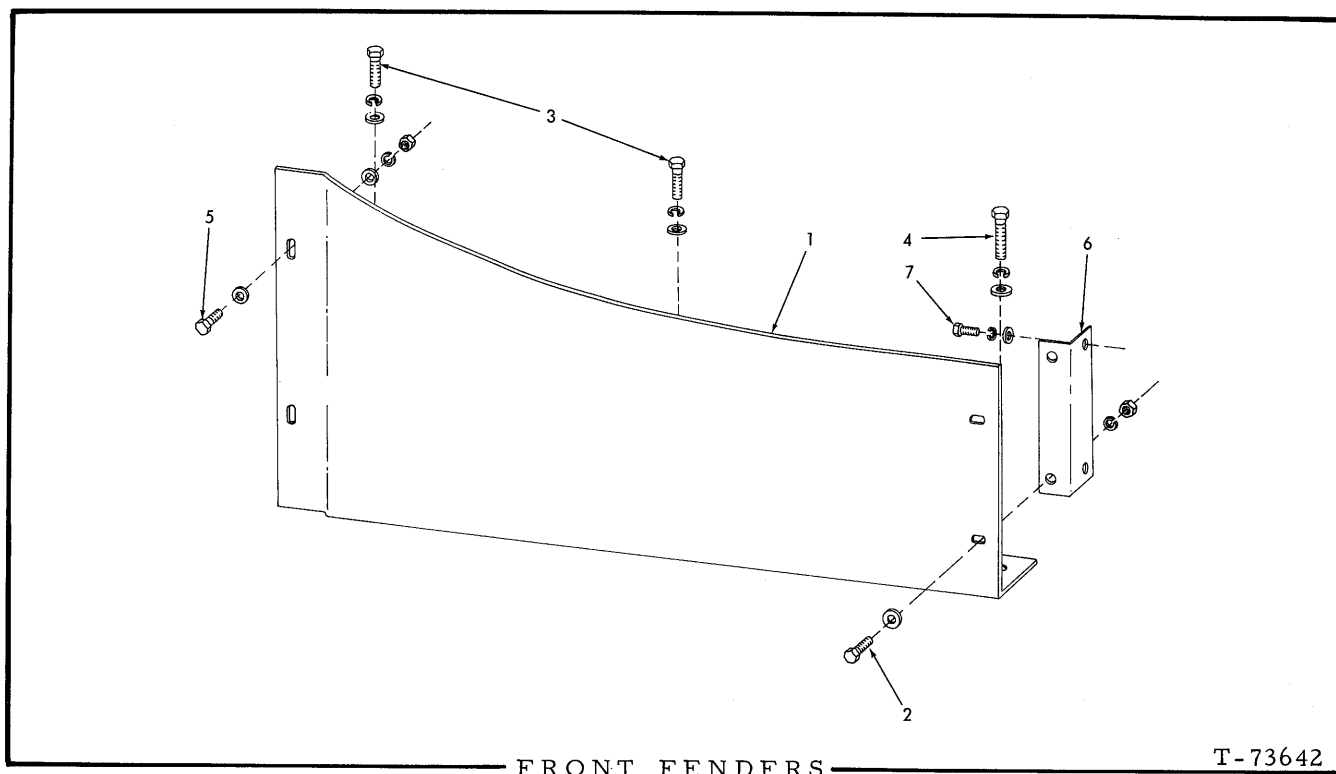

USAGE: Model HD16D with optional Light-duty Radiator Shell


ITEM	PART NO.	QTY.	DESCRIPTION
1	641925	1	FENDER, left side
	641926	1	FENDER, right side
2	035073	4	CAPSCREW, 1/2"NF x 1-3/4"
	064531	4	WASHER, plain
	904208	4	LOCKWASHER, 1/2"
	911043	4	NUT, 1/2"NF
3	023465	4	CAPSCREW, 5/8"NF x 1-3/4"
4	070161	2	CAPSCREW, 5/8"NF x 2-3/4"
	904209	6	LOCKWASHER, 5/8"
	064810	6	WASHER, plain
	012742	4	CAPSCREW, 3/4"NF x 2-1/4"
5	061689	8	WASHER, plain
	904369	4	LOCKWASHER, 3/4"
	911045	4	NUT, 3/4"NF
6	648630	2	ANGLE, fender attachment
7	035067	4	CAPSCREW, 1/2"NF x 2"
	904208	4	LOCKWASHER, 1/2"
	064531	4	WASHER, plain

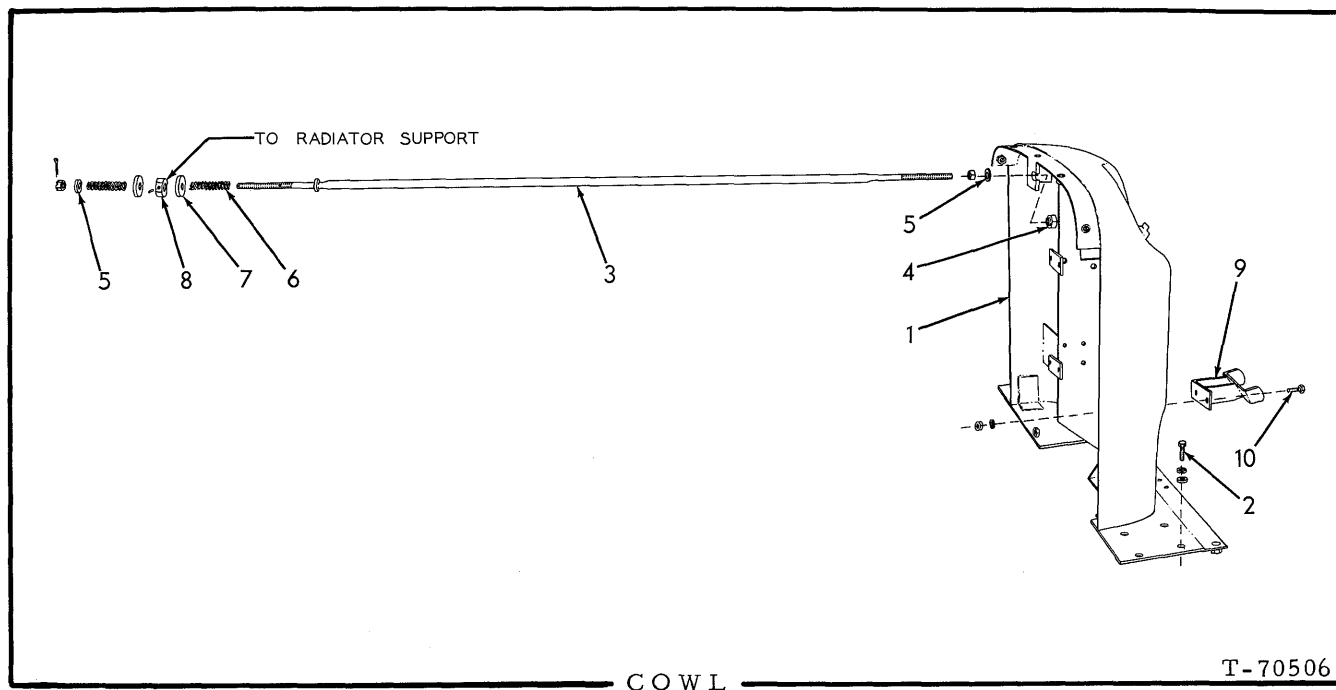

ITEM PART NO. QTY. DESCRIPTION

1	{	648970	1	COWL (Used prior to tractor #7437)	} Not used on Model HD16D with optional light-duty Radiator Shell
		650956	1	COWL (Effective with tractor #7437)	
2	{	035018	8	CAPSCREW, 1/2"NF x 1-1/2" (Early units)	
		035190	8	CAPSCREW, 1/2"NC x 1-1/2" (Late units)	
		904208	8	LOCKWASHER, 1/2"	
		064531	8	WASHER, plain	
3	{	083838	1	ROD, cowl bracing	
		911043	1	NUT, regular, 1/2"NF (rear end)	
		910867	1	NUT, slotted, 1/2"NF (front end)	
		900806	1	PIN, cotter, 1/8" x 1"	
4		082884	1	NUT, shoulder, cowl bracing rod	
5		064531	2	WASHER, cowl bracing rod (1-1/8"O. D.)	
6		074960	2	SPRING, cowl bracing rod	
7		092163	2	WASHER, cowl bracing rod (1-3/4"O. D.)	
8		082885	1	NUT, cowl bracing rod	
		915797	1	PIN, spring, 3/16" x 1-1/4"	
9		633787	1	REST, right foot	
10	{	070467	2	CAPSCREW, 1/2"NF x 1"	
		904208	2	LOCKWASHER, 1/2"	
		911043	2	NUT, 1/2"NF	

NOTE: See PAINTING AND MARKING for instruction plates and transfers

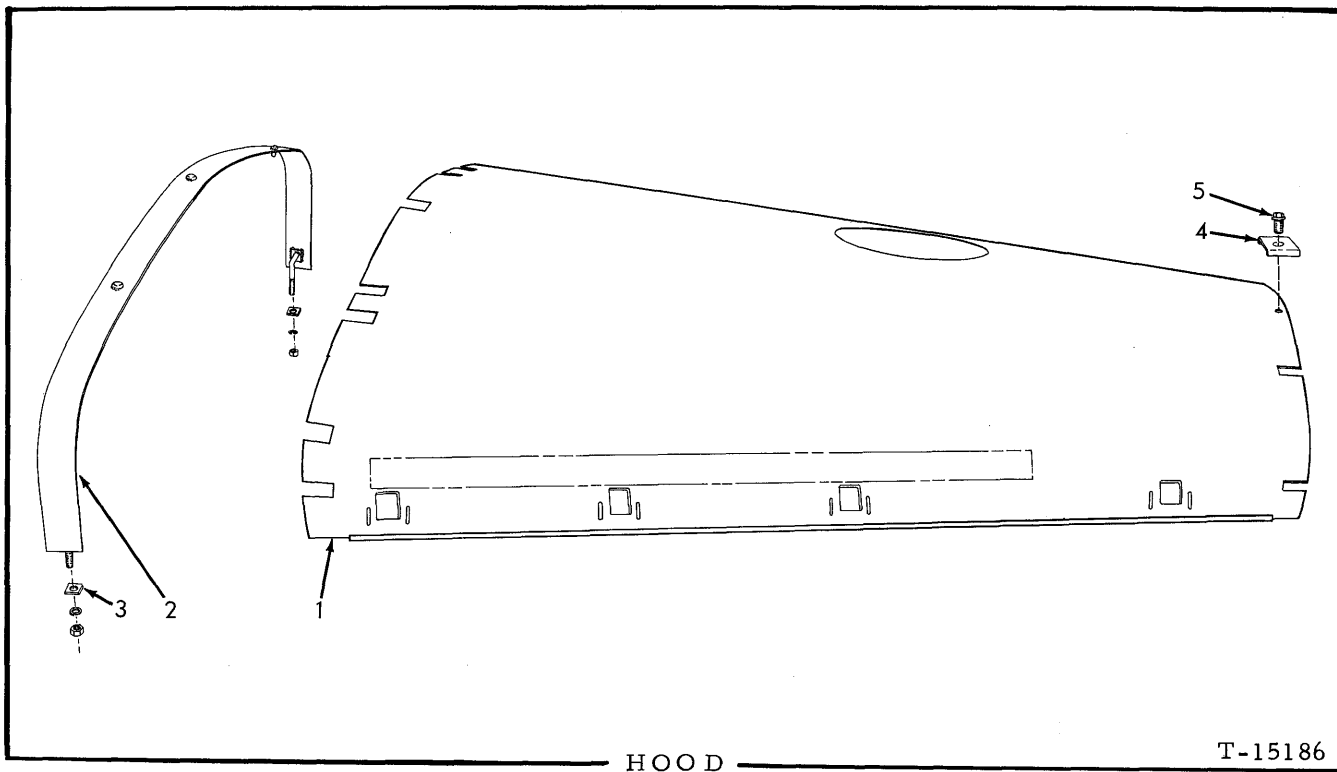


USAGE: Standard equipment. Not used with optional light-duty Radiator Shell

* Tractors prior to serial No. 7437

** Tractors serial No. 7437 and up

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	630151	1	-	HOOD, engine
	650982	-	1	HOOD, engine (Standard)
	655189	-	1	HOOD, engine (Units with special air and exhaust extension stacks)
2	090870	1	1	STRAP, hold-down, front
	904206	2	2	LOCKWASHER, 3/8"
	911026	2	2	NUT, 3/8"NC
3	052505	2	2	BLOCK, front strap
4	624416	5	4	CLIP, hood retaining
5	623820	5	-	CAPSCREW, Nylok, 1/2"NF x 1" (Early units)
	648294	5	4	CAPSCREW, Nylok, 1/2"NC x 1" (Late units)

NOTE: See PAINTING AND MARKING for transfers

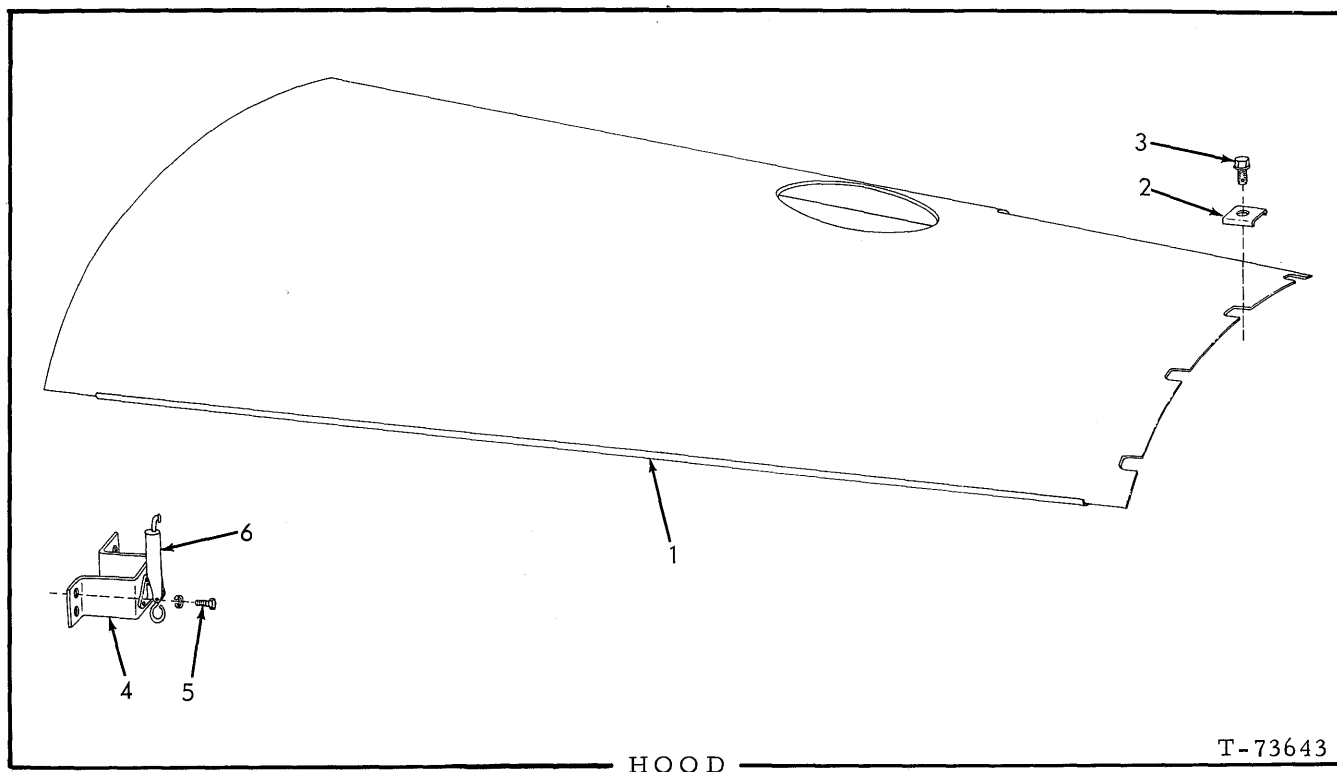


USAGE: Model HD16D with optional Light-duty Radiator Shell

* Tractors prior to serial No. 7437

** Tractors serial No. 7437 and up

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	642159	1	-	HOOD, engine
	651079	-	1	HOOD, engine
2	624416	5	4	CLIP, hood retaining
3	623820	5	-	CAPSCREW, Nylok, 1/2"NF x 1" (Early units)
	648294	5	4	CAPSCREW, Nylok, 1/2"NC x 1" (Late units)
4	624426	2	2	FASTENER ASSEMBLY, hold-down (Includes item 6)
5	013058	8	8	CAPSCREW, 3/8"NC x 1-1/4"
	904206	8	8	LOCKWASHER, 3/8"
6	033060	2	2	FASTENER
	900764	6	6	RIVET, fl-hd., 3/16" x 1/2"

NOTE: See PAINTING AND MARKING for transfers

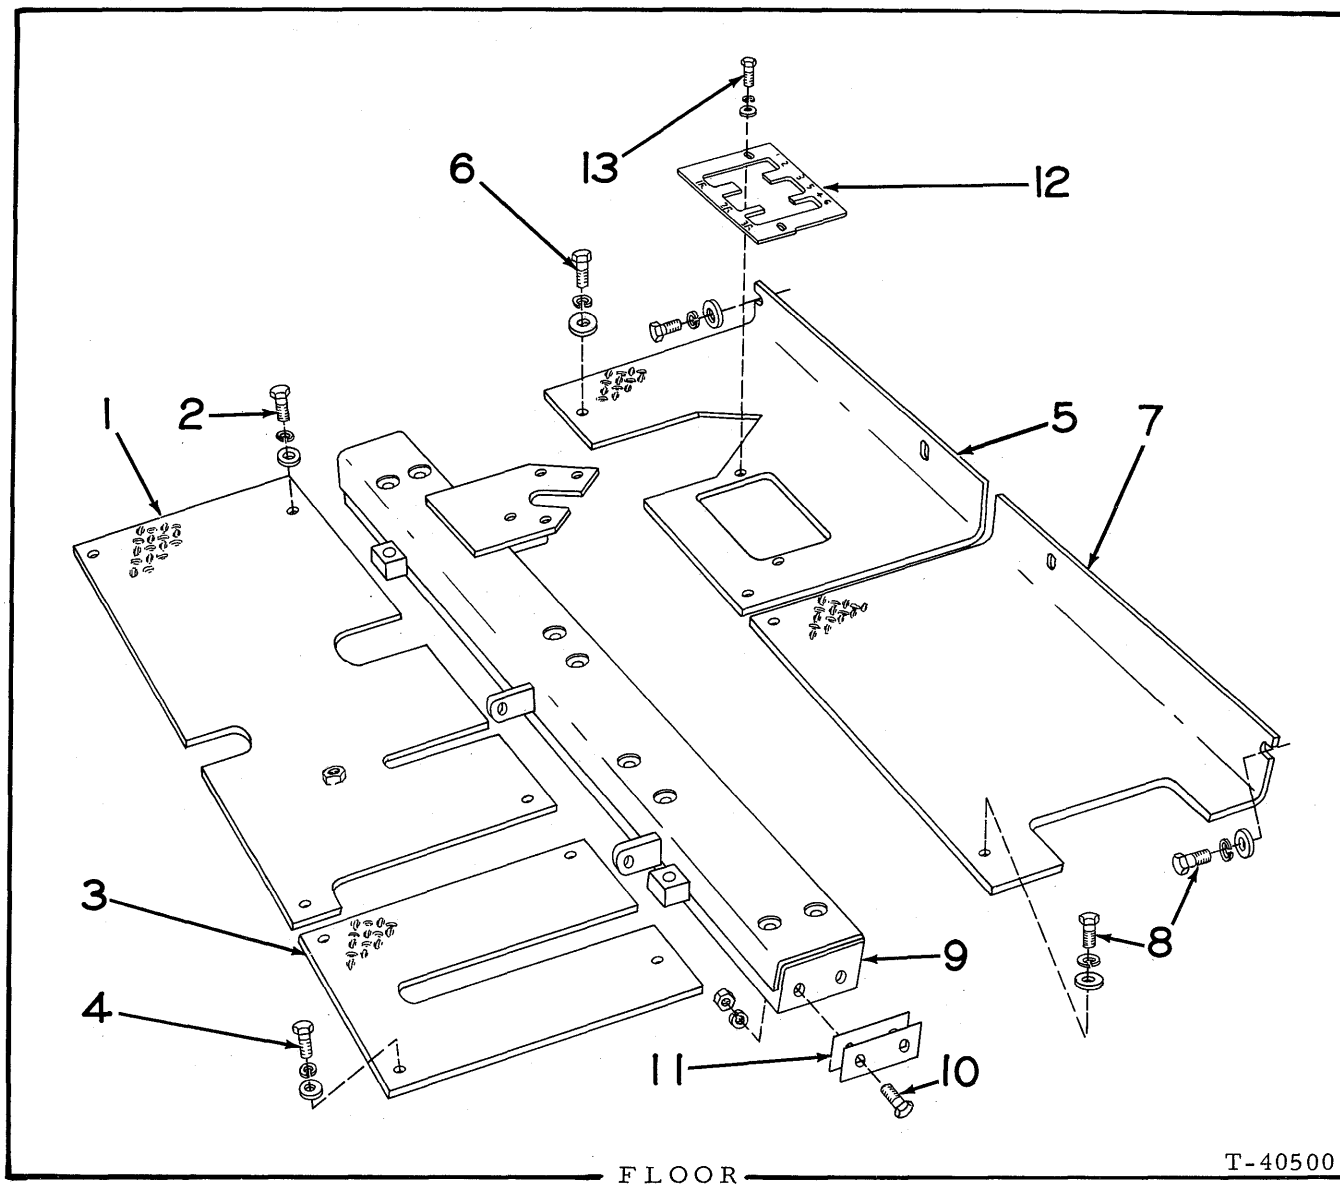

T-40500


ITEM PART NO. QTY. DESCRIPTION

1	649131	1	PLATE, front section, right
2	035190	4	CAPSCREW, 1/2"NC x 1-1/2"
	904208	4	LOCKWASHER, 1/2"
	064531	4	WASHER, plain
3	630629	1	PLATE, front section, left
4	035190	4	CAPSCREW, 1/2"NC x 1-1/2"
	904208	4	LOCKWASHER, 1/2"
	064531	4	WASHER, plain
5	631142	1	PLATE, rear section, right (Model HD16D)
	631139	1	PLATE, rear section, right (Model HD16DC)
6	035190	4	CAPSCREW, 1/2"NC x 1-1/2"
	904208	4	LOCKWASHER, 1/2"
	092163	4	WASHER, plain

(Continued)



FLOOR (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
7	632502	1	PLATE, rear section, left
8	035190	4	CAPSCREW, 1/2"NC x 1-1/2"
	904208	4	LOCKWASHER, 1/2"
	092163	4	WASHER, plain
9	{ 633262	1	CHANNEL, floor supporting (Not for tractors with Ripper)
	{ 649226	1	CHANNEL, floor supporting (For tractors with TR16 Ripper)
	{ 657639	1	CHANNEL, floor supporting (For tractors with 16R Ripper)
10	{ 614478	4	CAPSCREW, 1/2"NF x 1-3/8"
	{ 035190	4	CAPSCREW, 1/2"NC x 1-1/2" (Units with heavy-duty fenders)
	{ 904208	4	LOCKWASHER, 1/2"
	{ 911043	4	NUT, 1/2"NF (Not used with heavy-duty fenders)
11	{ 087741	1	SHIM, channel spacing (1/32" thick. Use as req'd)
	{ 087742	1	SHIM, channel spacing (1/8" thick. Use as req'd)
12	{ 631147	1	PLATE, guide, gear shift lever (Model HD16D)
	{ 632503	1	PLATE, guide, gear shift lever (Model HD16DC)
13	040382	2	CAPSCREW, 3/8"NC x 1-3/8"
	904206	2	LOCKWASHER, 3/8"
	044973	2	WASHER, plain

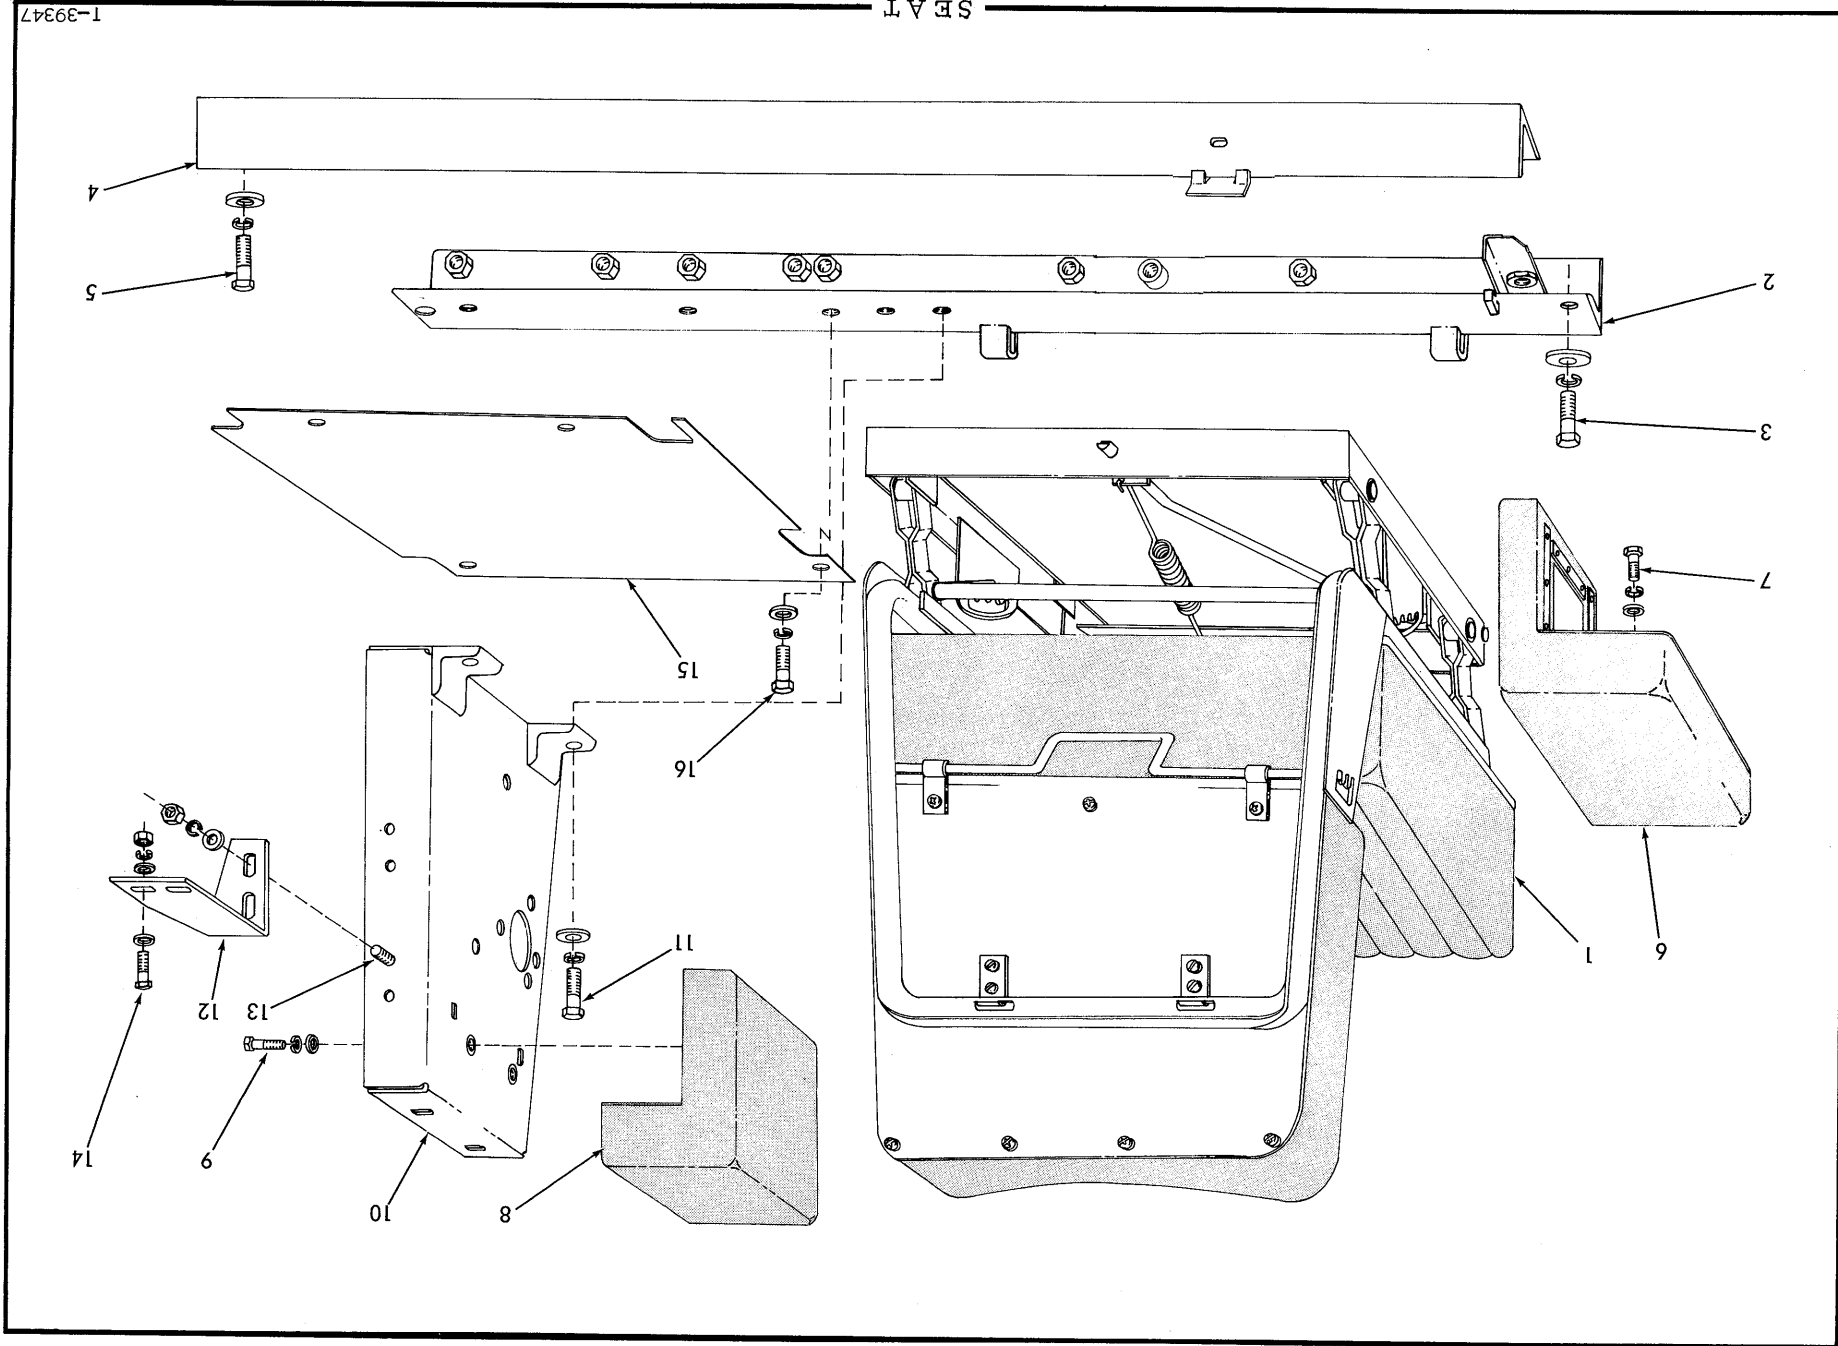

SEAT




ITEM	PART NO.	QTY.	DESCRIPTION
1	632053	1	SEAT ASSEMBLY (See page 269 for parts)(Used prior to September 1965. Order SEAT ASSEMBLY 649859)
	649859	1	SEAT ASSEMBLY (See page 271 for parts)(Effective September 1965)
2	649130	1	ANGLE, seat supporting, front
3	035073	2	CAPSCREW, 1/2"NF x 1-3/4"
	064531	2	WASHER, plain
	904208	2	LOCKWASHER, 1/2"
4	639818	1	ANGLE, seat supporting, rear
5	035073	2	CAPSCREW, 1/2"NF x 1-3/4"
	064531	2	WASHER, plain
	904208	2	LOCKWASHER, 1/2"
6	632179	1	CUSHION, arm rest, left side
7	919331	4	CAPSCREW, 3/8"NF x 1"
	916965	4	LOCKWASHER, 3/8"
	920743	4	WASHER, plain
			} Plated
8	632188	1	CUSHION, arm rest, right side
9	919331	4	CAPSCREW, 3/8"NF x 1"
	916965	4	LOCKWASHER, 3/8"
	920743	4	WASHER, plain
			} Plated
10	649115	1	SUPPORT, right arm rest cushion
11	035190	4	CAPSCREW, 1/2"NC x 1-1/2"
	904208	4	LOCKWASHER, 1/2"
	064531	4	WASHER, plain
12	632274	1	ANGLE, bracing, right arm rest support
13	036034	2	CAPSCREW, 3/8"NF x 1"
14	036039	2	CAPSCREW, 3/8"NF x 1-3/8"
	044973	6	WASHER, plain
	904206	4	LOCKWASHER, 3/8"
	911041	4	NUT, 3/8"NF
15	631404	1	PLATE, floor (Not used with special heavy-duty filters)
	633481	1	PLATE, floor (Used with special heavy-duty filters only)
16	035190	4	CAPSCREW, 1/2"NC x 1-1/2"
	904208	4	LOCKWASHER, 1/2"
	064531	4	WASHER, plain
17	657564	1	BELT, safety (Special equipment. Not illustrated)

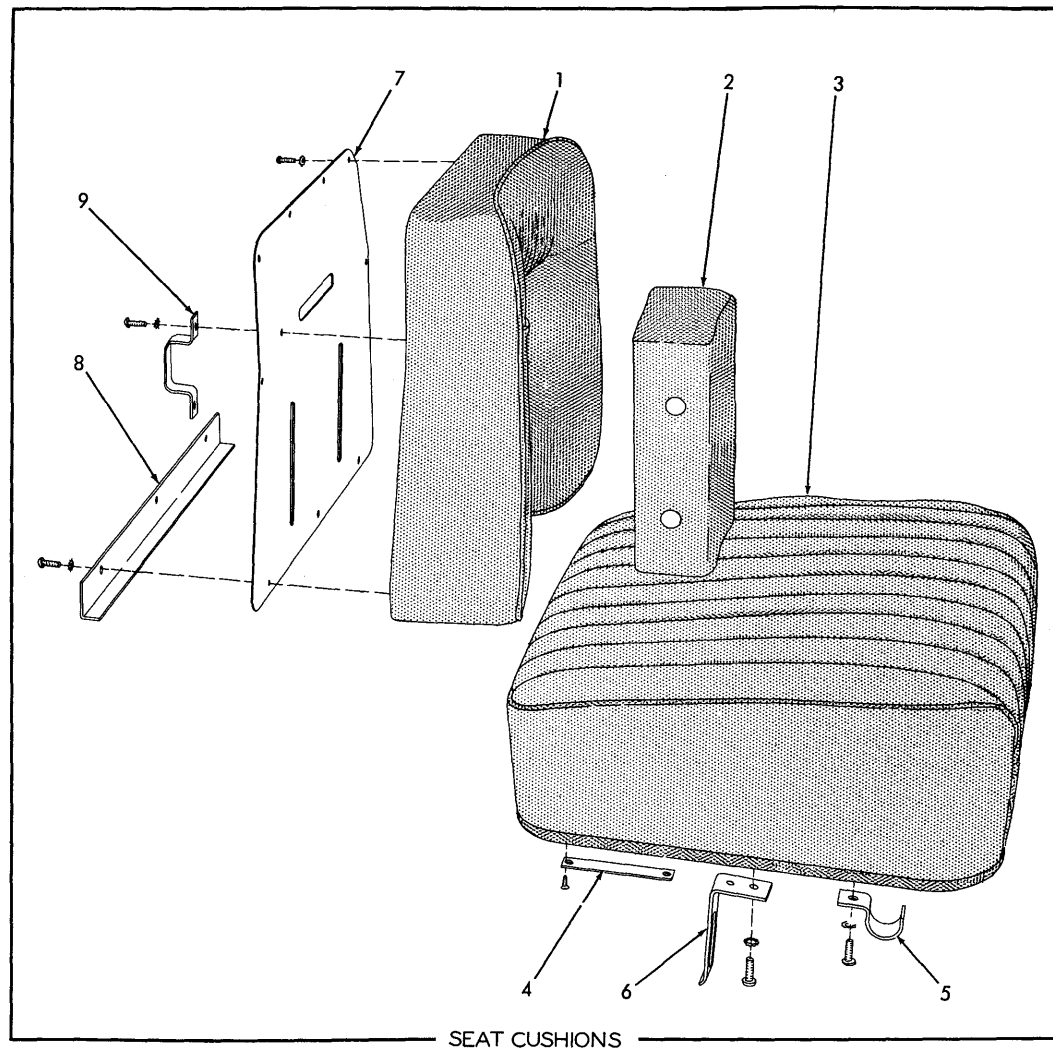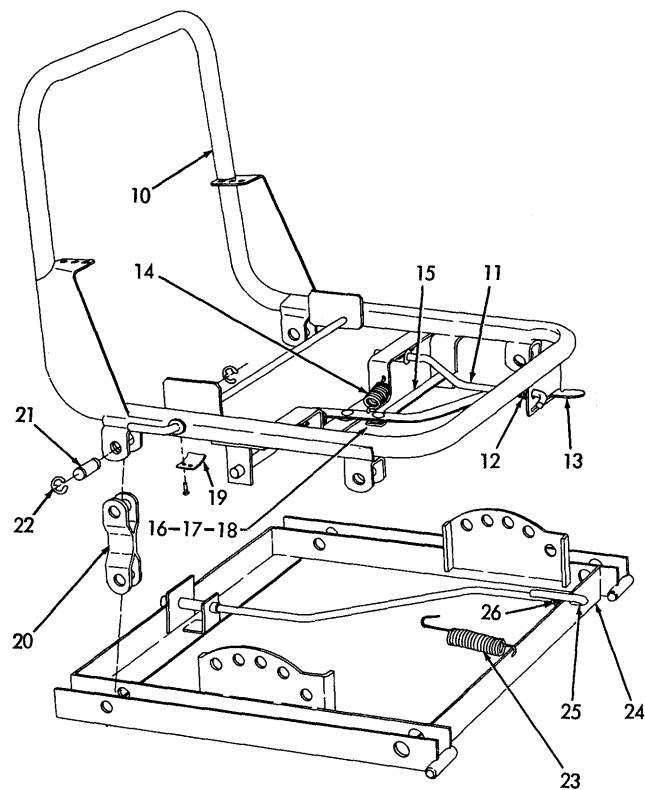

SEAT ASSEMBLY 632053

USAGE: See page 267

ITEM	PART NO.	QTY.	DESCRIPTION
1	{ 638422	1	CUSHION, back (outside section)
	{ 642499	1	COVER, slip, back cushion (Includes fastenings) (Not original equipment)
2	{ 638421	1	CUSHION, back (center section)
	{ 642498	1	COVER, slip, back cushion (Includes fastenings) (Not original equipment)
3	{ 638420	1	CUSHION ASSEMBLY, seat (Includes item 4)
	{ 642500	1	COVER, slip, seat cushion (Includes fastenings) (Not original equipment)
4	638431	2	PLATE, bearing, seat cushion
	-----	4	SCREW, wood, fl-hd., #8 x 1/2" (Procure locally)
5	638432	2	BRACKET, pivot, seat cushion
	916532	2	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	2	LOCKWASHER, ext-tooth, 1/4"
6	638369	1	STOP, seat cushion locking rod
	916532	2	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	2	LOCKWASHER, ext-tooth, 1/4"
7	638370	1	PLATE, reinforcing, back cushion
	916532	7	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	7	LOCKWASHER, ext-tooth, 1/4"
8	638427	1	SUPPORT, back cushion
	916532	3	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	3	LOCKWASHER, ext-tooth, 1/4"
9	638435	2	BRACKET, retaining, back cushion
	916532	4	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	4	LOCKWASHER, ext-tooth, 1/4"
10	638468	1	FRAME ASSEMBLY, seat (Includes items 11 thru 19)
11	638425	1	ROD, locking, seat cushion
	911115	2	WASHER, plain, SAE std., 3/8"
	900801	2	PIN, cotter, 3/32" x 3/4"
12	638429	1	SPRING, seat cushion locking rod
13	638363	1	STRAP, operating, seat position
14	638428	2	SPRING, seat position operating strap
15	638426	2	ROD, locking, seat position
16	638430	3	PIN, seat position locking rod
17	628001	3	WASHER, spacing, seat position rod
18	638354	3	WASHER, retaining, seat position rod pin
19	638433	1	SPRING, cushion height adjuster
	914197	2	SCREW, thd-cutting, rd-hd., #6 x 3/8"
20	638423	4	LINK, suspension, seat frame
21	638434	8	PIN, seat frame suspension link
22	638351	16	RING, locking, suspension link pin
23	638424	1	SPRING, retracting, seat frame
24	638371	1	FRAME ASSEMBLY, base (Includes items 25 and 26)
25	639975	1	ROD, seat release
	910335	1	WASHER, plain, SAE std., 5/16"
	900801	2	PIN, cotter, 3/32" x 3/4"
26	638429	1	SPRING, seat release rod

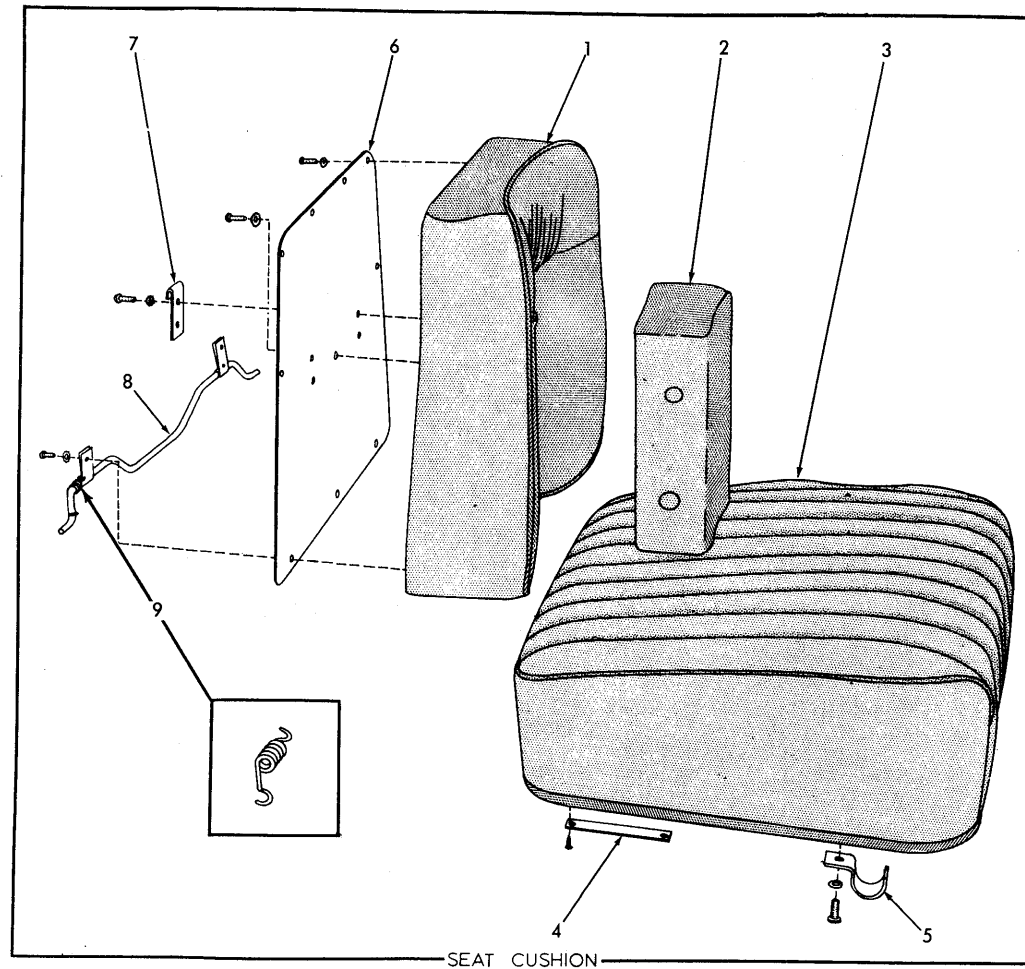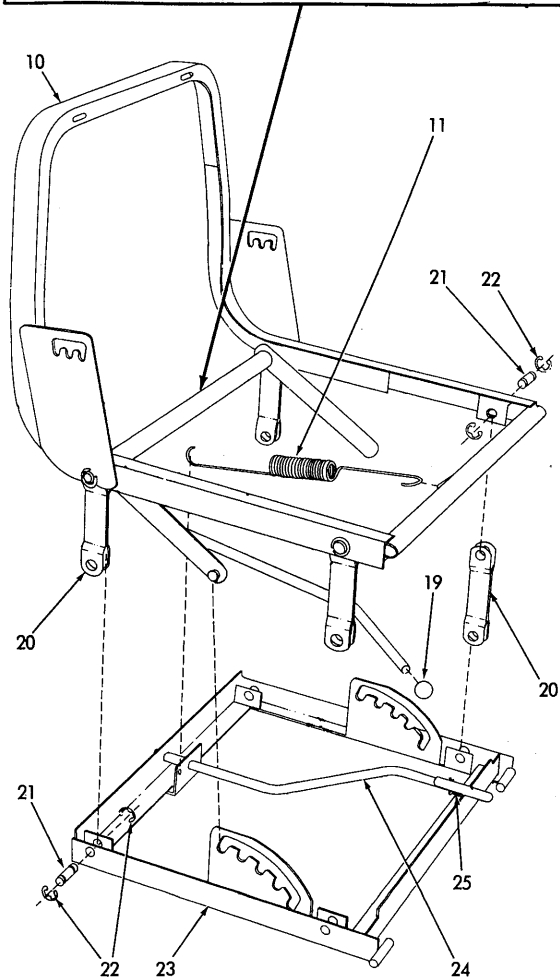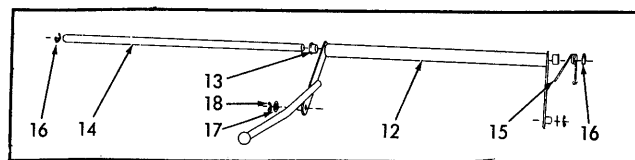


SEAT ASSEMBLY 649859

T-71877

SEAT ASSEMBLY 649859

USAGE: See page 267

ITEM	PART NO.	QTY.	DESCRIPTION
1	638422	1	CUSHION, back (outside section)
	642499	1	COVER, slip, back cushion(Includes fastenings)(Not original equipment)
2	638421	1	CUSHION, back (center section)
	916532	2	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	2	LOCKWASHER, ext-tooth, 1/4"
	642498	1	COVER, slip, back cushion(Includes fastenings)(Not original equipment)
3	638420	1	CUSHION ASSEMBLY, seat (Includes item 4)
	642500	1	COVER, slip, seat cushion(Includes fastenings)(Not original equipment)
4	638431	2	PLATE, bearing, seat cushion
	-----	4	SCREW, wood, fl-hd., #8 x 1/2" (Procure locally)
5	638432	2	BRACKET, pivot, seat cushion
	916532	2	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	2	LOCKWASHER, ext-tooth, 1/4"
6	650143	1	PLATE, reinforcing, back cushion
	916532	8	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	8	LOCKWASHER, ext-tooth, 1/4"
7	650132	2	BRACKET, retaining, back cushion
	916532	4	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	4	LOCKWASHER, ext-tooth, 1/4"
8	650141	1	ROD ASSEMBLY, back cushion adjustment (Includes mounting clips)
	916532	2	SCREW, machine, rd-hd., 1/4"NC x 3/4"
	914105	2	LOCKWASHER, ext-tooth, 1/4"
9	650137	1	SPRING, back cushion adjustment rod
10	650144	1	FRAME, seat
11	650138	1	SPRING, retracting, seat frame
12	650142	1	LATCH, seat adjustment
13	650146	2	BEARING, seat adjustment latch
14	650136	1	SHAFT, seat adjustment latch
15	650135	1	SPRING, seat adjustment latch
16	638351	2	RING, snap, seat adjustment latch shaft
17	188436	2	WASHER, seat adjustment latch
18	650147	2	RING, snap, seat adjustment latch
19	650133	1	KNOB, seat adjustment latch
20	650139	4	LINK, suspension, seat frame
21	650131	6	PIN, seat frame suspension link
22	638351	12	RING, snap, suspension link pin
23	650145	1	FRAME ASSEMBLY, base (Includes items 24 and 25)
24	650140	1	ROD, seat release
	188436	1	WASHER, plain
	924169	2	PIN, groove, 1/8" x 1"
25	650134	1	SPRING, seat release rod

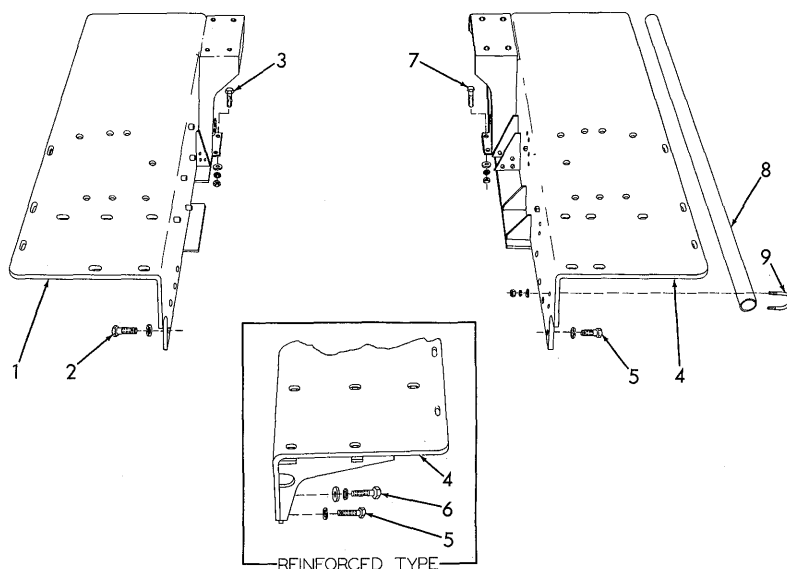

REAR FENDERS


T-70507

USAGE: Tractors prior to serial No. 7753

* Standard equipment

** Special equipment. Reinforced type for logging tractors

ITEM	PART NO.	QTY. * **		DESCRIPTION
1	629531	1	-	FENDER, left
	632391	-	1	FENDER, left
2	648716	4	2	CAPSCREW, Nylok, 3/4"NF x 1-3/4"
	012742	-	2	CAPSCREW, 3/4"NF x 2-1/4"
	904369	4	4	LOCKWASHER, 3/4"
	064810	-	2	WASHER, plain
3	042430	2	2	CAPSCREW, 1/2"NF x 3-1/2"
	064531	2	2	WASHER, plain
	904208	2	2	LOCKWASHER, 1/2"
	911043	2	2	NUT, 1/2"NF
4	649120	1	-	FENDER, right
	632414	-	1	FENDER, right
5	648716	4	2	CAPSCREW, Nylok, 3/4"NF x 1-3/4"
6	012742	-	2	CAPSCREW, 3/4"NF x 2-1/4"
	904369	4	4	LOCKWASHER, 3/4"
7	064810	-	2	WASHER, plain
	042430	2	2	CAPSCREW, 1/2"NF x 3-1/2"
	064531	2	2	WASHER, plain
	904208	2	2	LOCKWASHER, 1/2"
8	911043	2	2	NUT, 1/2"NF
8	638981	1	-	PIPE, cable conducting (For tractors equipped with cable dozer using rear-mounted control unit)
9	641474	4	-	U-BOLT, supporting, cable conducting pipe
	911041	8	-	NUT, 3/8"NF
	904206	8	-	LOCKWASHER, 3/8"
	911115	8	-	WASHER, plain, SAE std., 3/8"

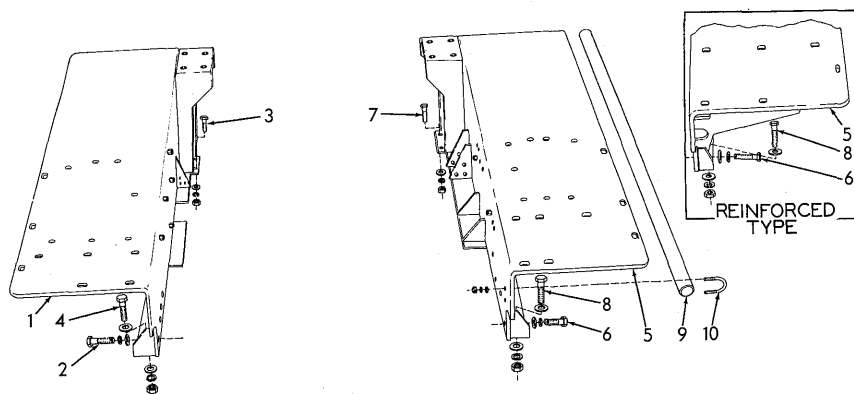

REAR FENDERS


T-72492

USAGE: Tractors serial No. 7753 and up

* Standard equipment

** Special equipment. Reinforced type for logging tractors.

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	654479	1	-	FENDER, left
	654483	-	1	FENDER, left
2	648717	2	2	CAPSCREW, Nylok, 3/4"NF x 2-1/4"
	904369	2	2	LOCKWASHER, 3/4"
	061689	2	2	WASHER, plain
3	042430	2	2	CAPSCREW, 1/2"NF x 3-1/2"
	064531	2	2	WASHER, plain
	904208	2	2	LOCKWASHER, 1/2"
	911043	2	2	NUT, 1/2"NF
4	023618	3	3	CAPSCREW, 5/8"NF x 2-1/2"
	064810	6	6	WASHER, plain
	904209	3	3	LOCKWASHER, 5/8"
	911044	3	3	NUT, 5/8"NF
5	654480	1	-	FENDER, right (Tractors prior to #8145)
	657636	1	-	FENDER, right (Tractors #8145 and up. Required to install Model 16R Ripper)
	654484	-	1	FENDER, right
6	648717	2	2	CAPSCREW, Nylok, 3/4"NF x 2-1/4"
	904369	2	2	LOCKWASHER, 3/4"
	061689	2	2	WASHER, plain
7	042430	2	2	CAPSCREW, 1/2"NF x 3-1/2"
	064531	2	2	WASHER, plain
	904208	2	2	LOCKWASHER, 1/2"
	911043	2	2	NUT, 1/2"NF
8	023618	3	3	CAPSCREW, 5/8"NF x 2-1/2"
	064810	6	6	WASHER, plain
	904209	3	3	LOCKWASHER, 5/8"
	911044	3	3	NUT, 5/8"NF
9	638981	1	-	PIPE, cable conducting (For tractors equipped with cable dozer using rear-mounted control unit)
10	641474	4	-	U-BOLT, supporting, cable conducting pipe
	911041	8	-	NUT, 3/8"NF
	904206	8	-	LOCKWASHER, 3/8"
	911115	8	-	WASHER, plain, SAE std., 3/8"

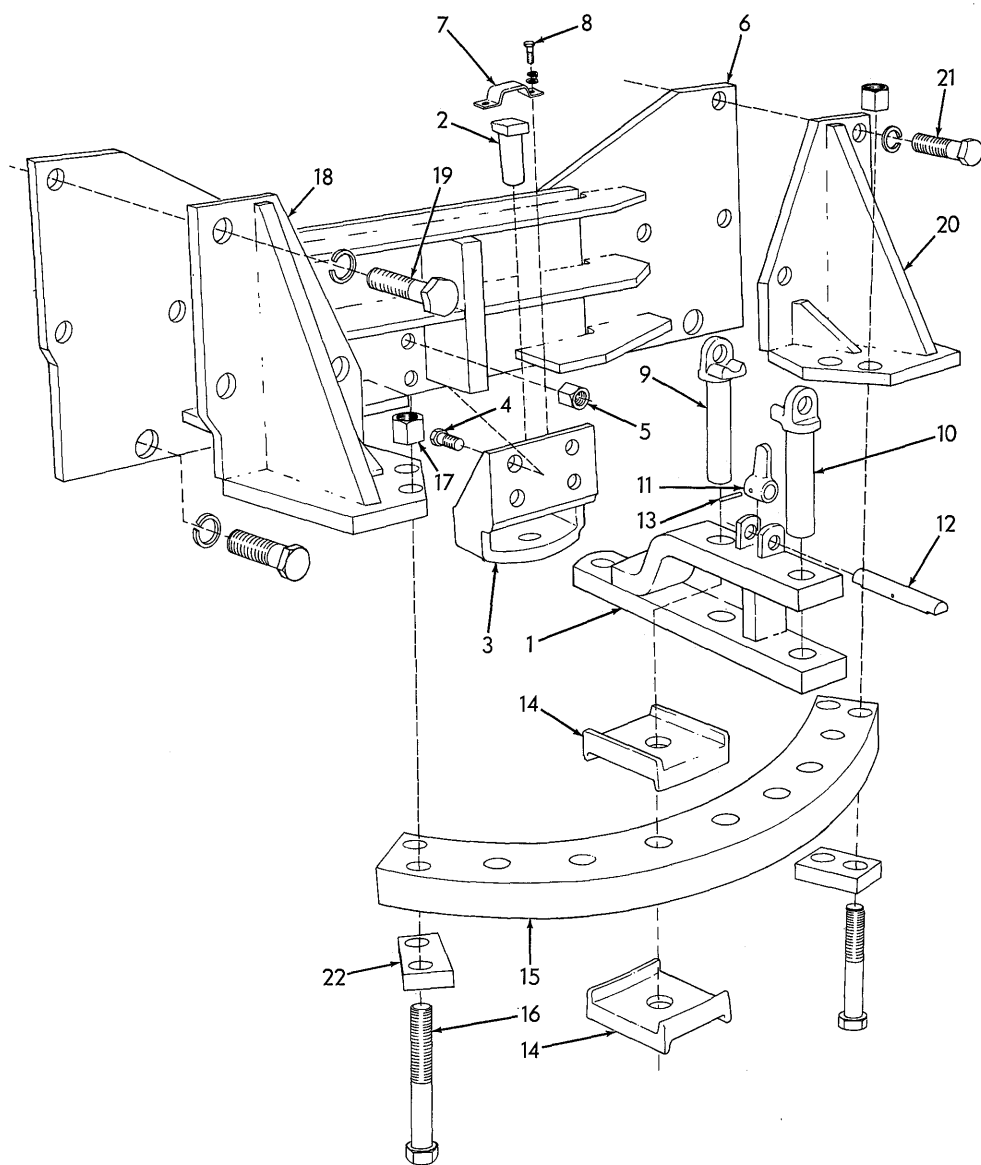

DRAWBAR (Swing-type)

T-70514

USAGE: Special equipment

* Used prior to June 15, 1965


** Effective June 15, 1965

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	643844	1	1	DRAWBAR
2	080669	1	1	PIN, hinge
3	059017	1	1	BRACKET, hinge pin (Requires welding to install on later units)
4	012586	4	-	CAPSCREW, 1"NF x 3-1/2"
5	600236	4	-	NUT, high, 1"NF

(Continued)

DRAWBAR (Swing-type)(Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
6	643868	1	1	BRACKET, rear (Includes item 3)
	625383	2	2	CAPSCREW, 1-1/2"NF x 4"
	913077	2	2	LOCKWASHER, 1-1/2"
7	050447	1	1	PLATE, hinge pin retaining
8	070469	2	2	CAPSCREW, 1/2"NF x 1-1/4"
	904208	2	2	LOCKWASHER, 1/2"
	910244	2	2	WASHER, plain, SAE std., 1/2"
9	059010	1	1	PIN, drawbar locking
10	059007	1	1	PIN, drawbar coupling
11	051352	1	1	ARM, locking, drawbar pins
12	078866	1	1	SHAFT, drawbar pin locking arm
13	915504	1	1	PIN, spring, 5/16" x 1-3/4"
14	643832	2	2	SHOE, wear
15	643882	1	-	PLATE, supporting
	648996	-	1	PLATE, supporting
16	625970	4	-	CAPSCREW, 1"NF x 6"
	648954	-	4	CAPSCREW, 1-1/4"NF x 7-1/2"
17	600236	4	-	NUT, high, 1"NF
	028847	-	4	NUT, high, 1-1/4"NF
18	644415	1	-	BRACKET, supporting plate, left
	648997	-	1	BRACKET, supporting plate, left
19	053251	3	3	CAPSCREW, 1-1/4"NF x 4-1/2"
	904210	3	3	LOCKWASHER, 1-1/4"
20	644416	1	-	BRACKET, supporting plate, right
	648998	-	1	BRACKET, supporting plate, right
21	053251	3	3	CAPSCREW, 1-1/4"NF x 4-1/2"
	904210	3	3	LOCKWASHER, 1-1/4"
22	648943	-	2	BLOCK, drawbar stop

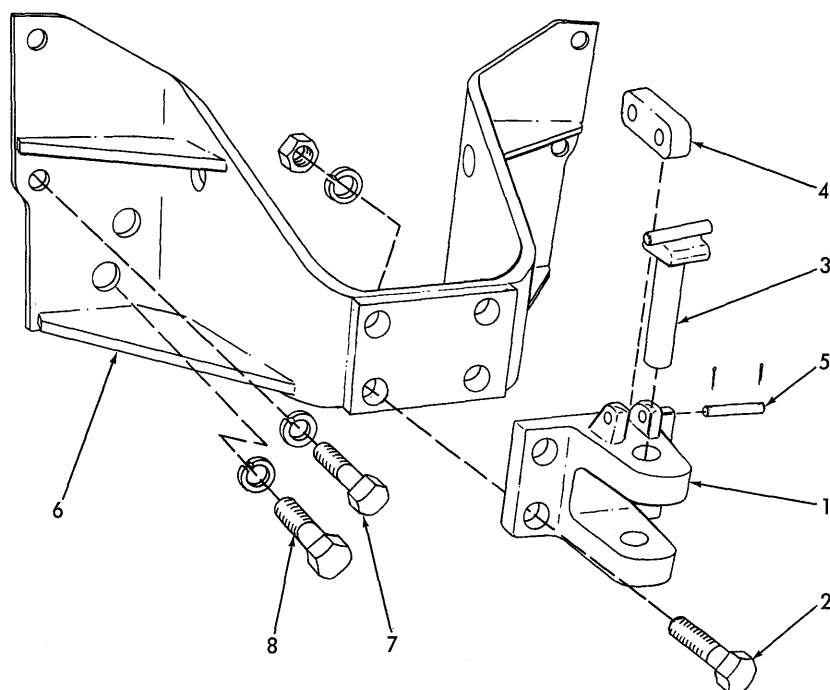

DRAWBAR (Fixed-type)

T-70520

USAGE: Standard equipment

ITEM PART NO. QTY. DESCRIPTION

NOTE: Cannot be used with special Rear Pusher or Ripper

1	633729	1	BRACKET, coupling
2	633733	4	CAPSCREW, 1-1/2"NF x 5-1/2" (Tractors prior to #7135)
	098970	4	CAPSCREW, 1-1/2"NF x 6" (Tractors #7135 and up)
	913077	4	LOCKWASHER, 1-1/2"
	916555	4	NUT, 1-1/2"NF
3	633730	1	PIN, drawbar
4	629697	1	BLOCK, retaining, drawbar pin
5	629698	1	PIN, retaining block
	900806	2	PIN, cotter, 1/8" x 1"
6	633720	1	BRACKET, supporting
7	648338	4	CAPSCREW, 1-1/4"NF x 3-1/2"
	904210	4	LOCKWASHER, 1-1/4"
8	625383	4	CAPSCREW, 1-1/2"NF x 4"
	913077	4	LOCKWASHER, 1-1/2"

MEMO

PAINTING AND MARKING
(Not Illustrated)

ITEM PART NO. QTY. DESCRIPTION

NOTE: Approximately 5 gallons paint required for spraying

1	925105	-	ENAMEL, A-C yellow, quart can
2	925106	-	ENAMEL, A-C yellow, gallon can
3	925107	-	ENAMEL, A-C yellow, 5 gallon can
4	925104	-	ENAMEL, A-C yellow, 12 oz. pressurized spray-type can


NOTE: All plates and transfers listed below are English language printings unless otherwise indicated

5	{	633992	1	PLATE, lubrication and service guide (7" x 10", attached to front of right battery box)(Model HD16D only)
		634023	1	PLATE, lubrication and service guide (multi-language, 7" x 12-7/8". Attached to front of right battery box)(Model HD16D only)
		633747	1	PLATE, lubrication and service guide (7" x 10", attached to front of right battery box)(Model HD16DC only)
		634022	1	PLATE, lubrication and service guide (multi-language, 7" x 12-7/8". Attached to front of right battery box)(Model HD16DC only)
		034076	4	SCREW, thd.-cutting, cross-recessed-hd., #8 x 1/2" (2 additional required for multi-language plates)
6	621357	1	TRANSFER, lubrication certification (3-7/8" x 6-3/4")(Applied to left battery box)	
7	{	059698	1	PLATE, gear shift position (2-5/8" x 3-1/2". Attached to dash) (Model HD16D only)
		077888	1	PLATE, gear shift position (2-5/8" x 3-1/2". Attached to dash) (Model HD16DC only)
		034076	4	SCREW, thd-cutting, cross-recessed-hd., #8 x 1/2"
8	631293	1	TRANSFER, instruction, engine operation (2-1/4" x 4-1/2") (Applied to dash)	
9	629205	1	TRANSFER, warning, power steering and brakes (1-3/4" x 3-1/2") (Applied to dash)	
10	{	645660	1	TRANSFER, instruction, engine clutch adjustment (2-3/4" x 4". Applied to clutch inspection cover)(Model HD16D only)
		639967	1	TRANSFER, instruction, engine clutch adjustment (2-3/4" x 4". Applied to dash)(Model HD16DC only)
11	644616	1	TRANSFER, instruction, 1st stage fuel filter (1-3/4" x 2-1/4") (Applied to filter)	
12	644619	1	TRANSFER, instruction, 2nd stage fuel filter (1-3/4" x 2-1/4") (Applied to filter)	
13	621343	2	TRANSFER, instruction, oil filter (2-5/16" x 3-1/4")(Applied to engine oil filter)	

(Continued)

PAINTING AND MARKING (Continued)


ITEM	PART NO.	QTY.	DESCRIPTION
14	621399	1	TRANSFER, warning, special heavy-duty oil filter (Includes Portuguese translation, 2" x 10")(Applied to filter)
	621400	1	TRANSFER, warning, special heavy-duty oil filter (French and Spanish translations, 2" x 10")(Applied to filter)
15	632226	2	TRANSFER, instruction, steering pressure line oil filter(1-3/4" 2-1/4")(Applied to filters)
16	621342	1	TRANSFER, instruction, engine primer (1-3/4" x 6")(Applied to dash)
17	633384	1	TRANSFER, instruction, air heater operation (2" x 6")(Applied to dash)
18	641128	1	TRANSFER, instruction, air cleaner (4" x 4")(Applied to dash)
19	651894	1	TRANSFER, instruction, air cleaner cartridge replacement (1-5/16" x 2-7/16")(Applied to air restriction indicator)
20	924550	2	TRANSFER, "ALLIS-CHALMERS" (1-7/8" x 30")(Applied to sides of hood)
21	924548	2	TRANSFER, "ALLIS-CHALMERS" (1-1/4" x 20")(Applied to sides of battery boxes)
22	924551	1	TRANSFER, "ALLIS-CHALMERS" (2-3/16" x 36")(Applied to front of radiator guards)
23	924554	1	TRANSFER, "ALLIS-CHALMERS" (3-1/16" x 50")(Applied to rear of fuel tank)
24	924320	1	TRANSFER, trademark (6-3/4", black and orange)
	924541	1	TRANSFER, trademark (6-3/4", white)(Optional)
25	924306	2	TRANSFER, trademark (7-3/4", black and orange)
	924463	2	TRANSFER, trademark (7-3/4", white)(Optional)
26	623501	3	TRANSFER, "HD16" (elliptical)(Applied to sides of battery boxes and rear of fuel tank)
27	651923	1	TRANSFER KIT (Includes one each TRANSFERS 924320, 924551, 924554, 621342, 621357, 629205, 631293, 633384, 639967 (DC only), 641128, 644616, 644619, 645660 (D only); 2 each TRANSFERS 924306, 924548, 924550, 621343, 632226 and 3 TRANSFERS 623501)

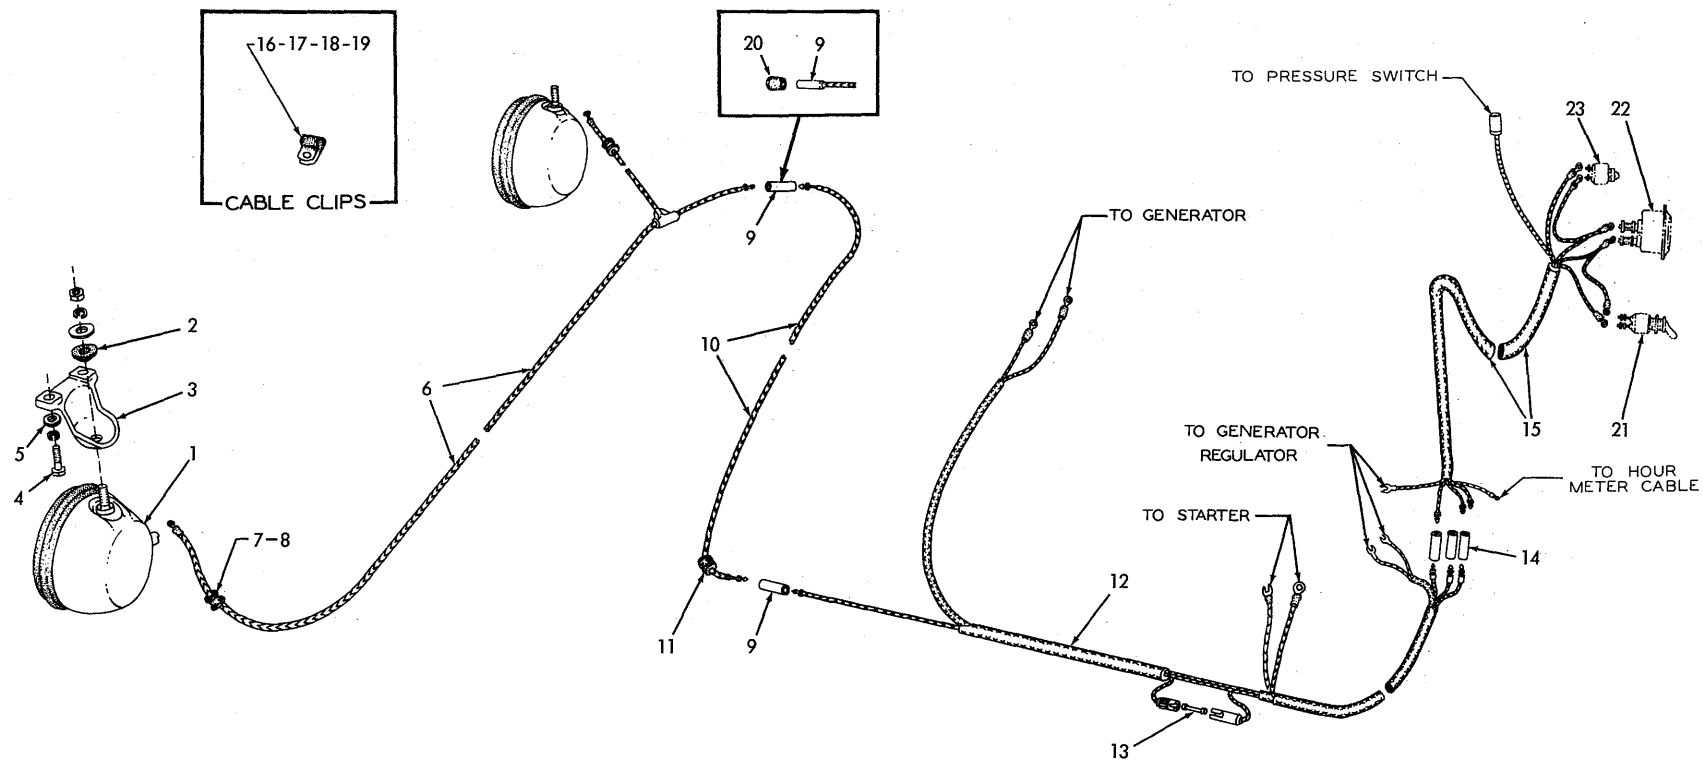

LIGHTS AND WIRING

ITEM	PART NO.	QTY.	DESCRIPTION
1	638283	2	*LIGHT ASSEMBLY, head (See page 282 for parts)
	900818	2	*WASHER, plain, U.S. std., 1/2"
	904208	2	*LOCKWASHER, 1/2"
	911043	2	*NUT, 1/2"NF
2	075535	2	*WASHER, head light mounting
3	093195	2	*BRACKET, head light mounting
4	035336	4	*CAPSCREW, 3/8"NF x 1-3/4"
	904206	4	*LOCKWASHER, 3/8"
5	044973	4	*WASHER, plain
6	093196	1	*CABLE, head light, upper section
7	083683	2	*GROMMET, head light cables (1/2" hole)
8	044810	2	*GROMMET, head light cable (3/8" hole)
<u>NOTE:</u> Items 7 and 8 are required only when headlights are optionally mounted on top of the radiator guard			
9	048142	2	CONNECTOR, head light cables
10	639067	1	CABLE, head light, lower section
11	044810	1	GROMMET, head light cable (Early units only)
12	097744	1	HARNESS, wiring, front section
13	208960	1	FUSE, cartridge type, 1/4" x 1-1/4", 20 amperes
14	048142	3	CONNECTOR, wiring harness (1-line)
15	640710	1	HARNESS, wiring, rear section
16	640677	6	CLIP, head light cables (1/4" diam., 13/32" bolt-hole)(4 additional used with headlights)
	903628	2	CAPSCREW, 3/8"NC x 5/8"
	904206	2	LOCKWASHER, 3/8"
17	640675	2	CLIP, front wiring harness (3/8" diam., 17/32" bolt-hole)
	035221	2	CAPSCREW, 1/2"NC x 1"
	904208	2	LOCKWASHER, 1/2"
18	640676	1	CLIP, wiring harness (5/16" diam., 13/32" bolt-hole)
19	639314	4	CLIP, front wiring harness (3/8" diam., 13/32" bolt-hole)
	035167	1	CAPSCREW, 3/8"NF x 7/8"
	903775	1	CAPSCREW, 3/8"NC x 7/8"
	904206	2	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
20	638243	1	TIP, cable socket (rubber)(Used only on units without headlights)
21	-----	-	SWITCH, lights (See INSTRUMENTS)
22	-----	-	AMMETER (See INSTRUMENTS)
23	-----	-	SWITCH, starter (See INSTRUMENTS)

* Special equipment

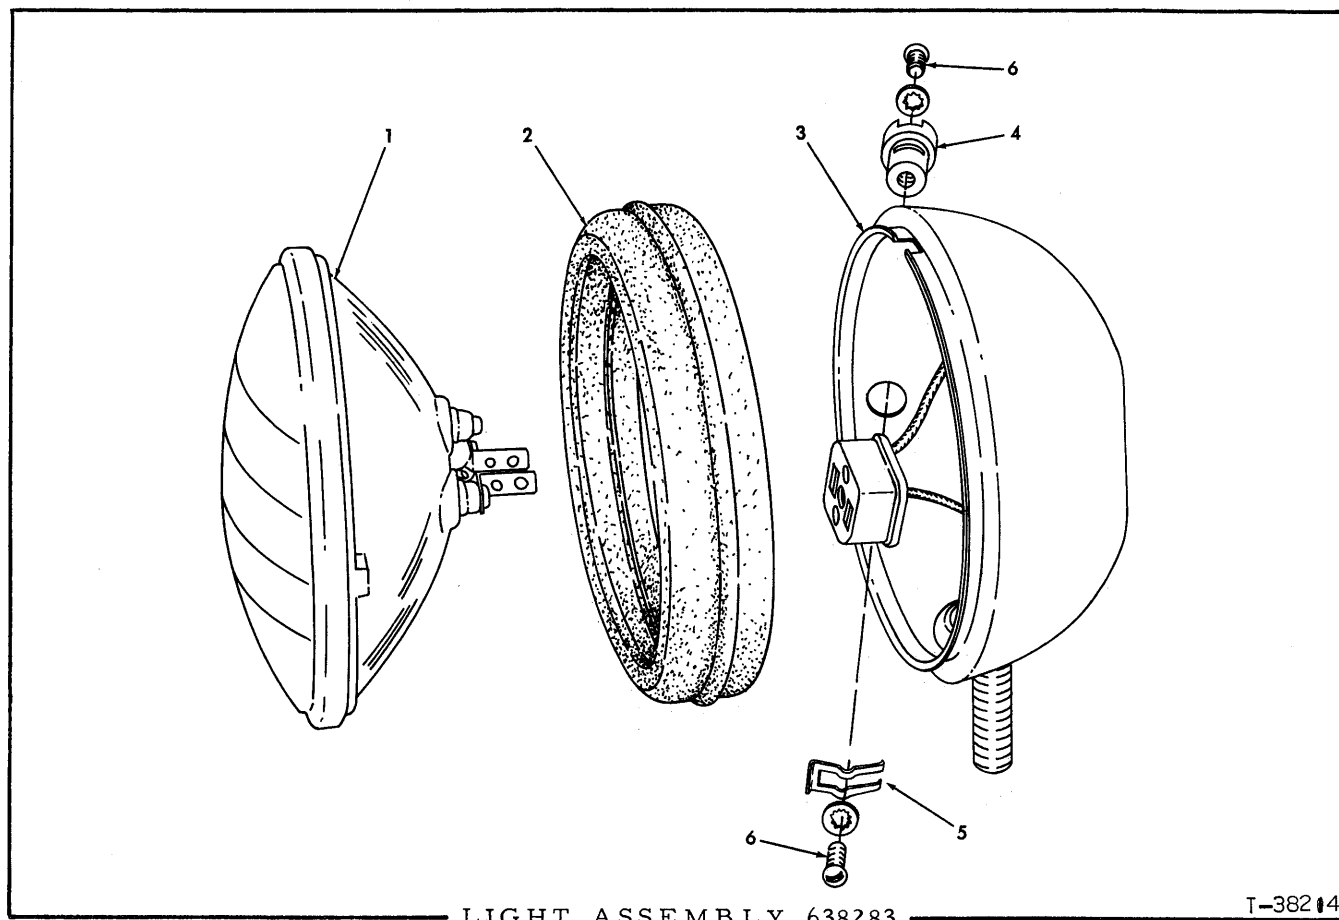

LIGHT ASSEMBLY 638283


T-38214

USAGE: See pages 281 and 283

ITEM PART NO. QTY. DESCRIPTION


NOTE: Quantities indicated below are for one (1) light only

1	182763	1	SEALED BEAM (24 volt)
2	638282	1	RING, retaining (rubber)
3	-----	1	BODY ASSEMBLY (Includes wiring. Not serviced separately)
4	055589	1	TERMINAL KIT (Includes items 5 and 6)
5	048922	1	SPRING, retaining, terminal bushing
6	912731	2	SCREW, terminal (#8-32 NC x 5/16")
	912739	2	LOCKWASHER, internal teeth, #8

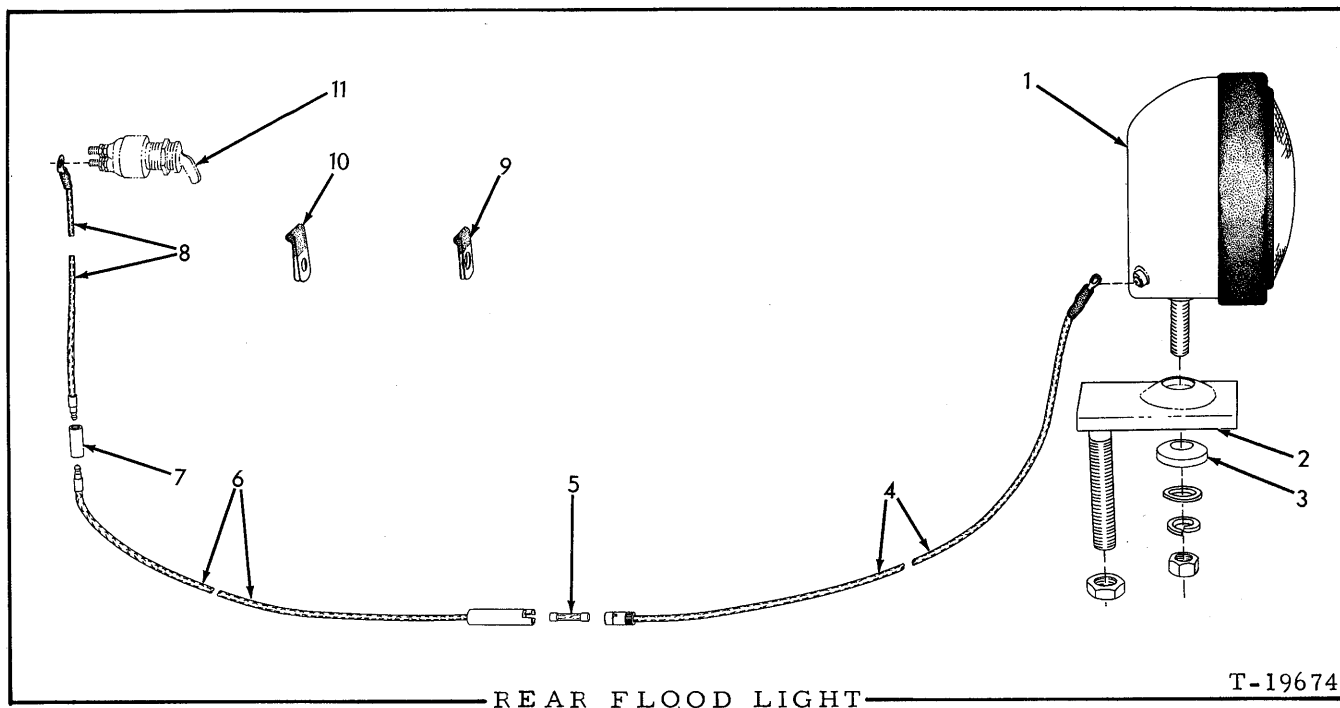

USAGE: Special equipment.

ITEM	PART NO.	QTY.	DESCRIPTION
1	638283	1	LIGHT ASSEMBLY (See page 282 for parts)
	900818	1	WASHER, plain, U.S. std., 1/2"
	904208	1	LOCKWASHER, 1/2"
	911043	1	NUT, 1/2"NF
2	094630	1	BRACKET, mounting
	911044	1	NUT, 5/8"NF
3	075535	1	WASHER, mounting
4	084238	1	CABLE, rear section (57" long)
5	208960	1	FUSE, cartridge type (1/4" x 1-1/4", 20 amperes)
6	640703	1	CABLE, intermediate section (62" long)
7	048142	1	CONNECTOR, cable
8	640702	1	CABLE, front section (44" long)
9	640704	3	CLIP, cable (1/8" diam., 17/32" bolt-hole)
10	639388	3	CLIP, cable (1/8" diam., 13/32" bolt-hole)
	903628	4	CAPSCREW, 3/8"NC x 5/8"
	904206	4	LOCKWASHER, 3/8"
11	-----	1	SWITCH, lights (See INSTRUMENTS)

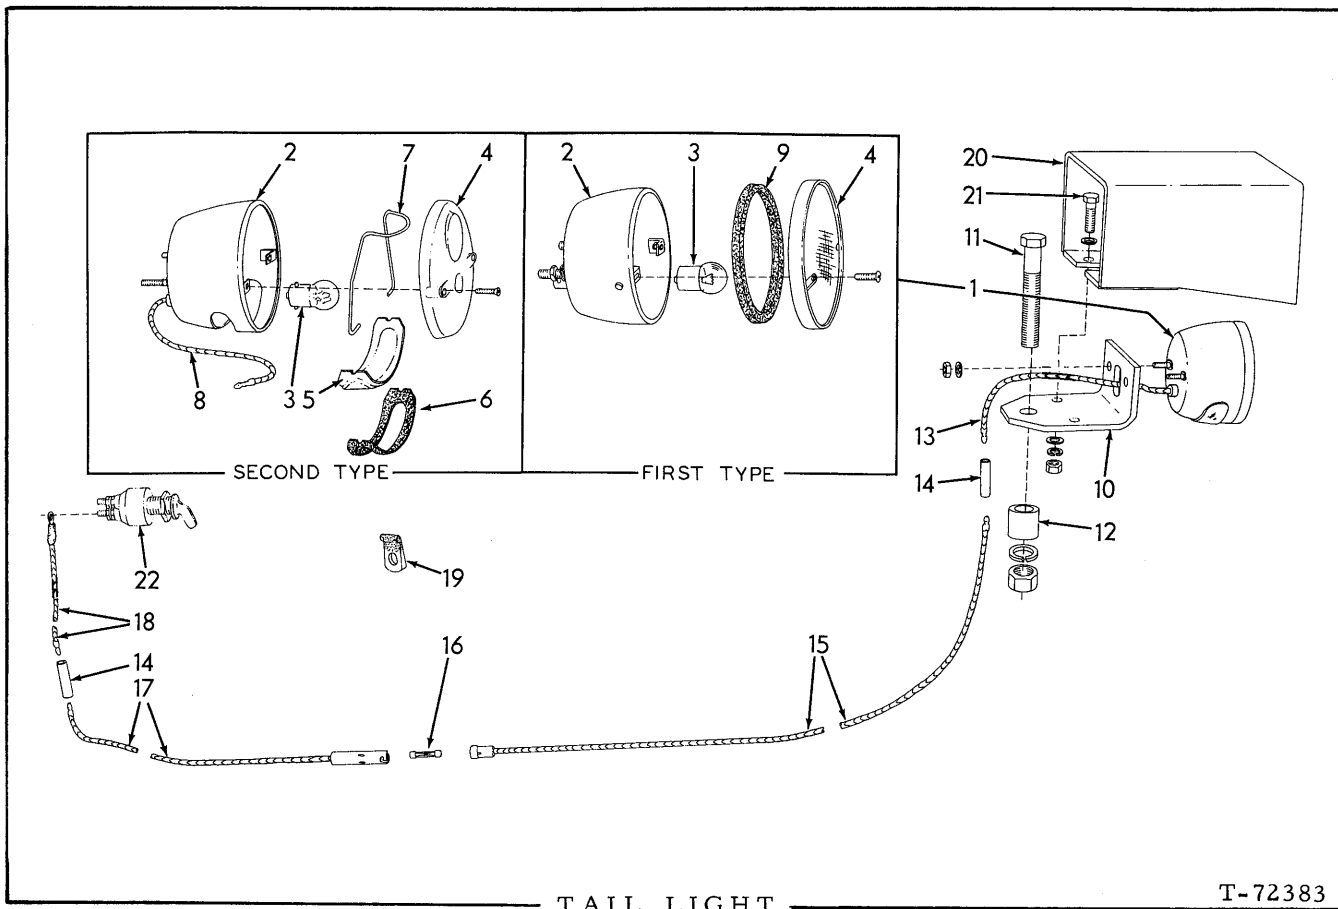

USAGE: Special equipment


* Used prior to January 1967
 ** Effective January 1967

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	-----	1	-	LIGHT ASSEMBLY, tail (Order LIGHT ASSEMBLY 654652)
	654652	-	1	LIGHT ASSEMBLY, tail (Consists of items 2 thru 8)
	904204	2	2	LOCKWASHER, 1/4"
	911024	2	2	NUT, 1/4"NC
2	-----	1	1	BODY ASSEMBLY (Not serviced separately)
3	074452	1	1	BULB, incandescent, single contact, 6 c. p., 24 volt
4	629188	1	-	LENS, tail light
	917883	2	-	SCREW, thread-cutting, rd-hd., #8 x 5/8"
	654991	-	1	LENS, tail light (red)
	654990	-	2	SCREW, retaining
5	654988	-	1	LENS-SEGMENT, tail light (clear)
6	654989	-	1	GASKET, lens-segment
7	654987	-	1	CLIP, lens-segment retaining

(Continued)

TAIL LIGHT (Continued)

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
8	654986	-	1	WIRE ASSEMBLY, tail light (Includes insulating bushing)
9	629189	1	-	GASKET, tail light lens
10	067110	1	1	BRACKET, tail light mounting
11	066862	1	1	CAPSCREW, 5/8"NF x 4"
	904209	1	1	LOCKWASHER, 5/8"
	911044	1	1	NUT, 5/8"NF
12	067112	1	1	BLOCK, spacing, mounting bracket
13	630148	1	-	CABLE ASSEMBLY, rear section (Includes plug)
14	048142	2	2	CONNECTOR, cable
15	089292	1	1	CABLE, rear intermediate section (50" long)
16	208960	1	1	FUSE, cartridge type (1/4" x 1-1/4", 20 amperes)
17	640703	1	1	CABLE, front intermediate section (62" long)
18	640702	1	1	CABLE, front section (44" long)
19	640704	3	3	CLIP, cable (1/8" diam., 17/32" bolt-hole)
	639388	4	4	CLIP, cable (1/8" diam., 13/32" bolt-hole)
	916268	4	4	CAPSCREW, 3/8"NC x 5/8"
	904206	4	4	LOCKWASHER, 3/8"
20	647139	1	1	GUARD, tail light
21	012992	2	2	CAPSCREW, 3/8"NF x 1-1/4"
	044973	4	4	WASHER, plain
	904206	2	2	LOCKWASHER, 3/8"
	911041	2	2	NUT, 3/8"NF
22	-----	1	1	SWITCH, lights (See INSTRUMENTS)

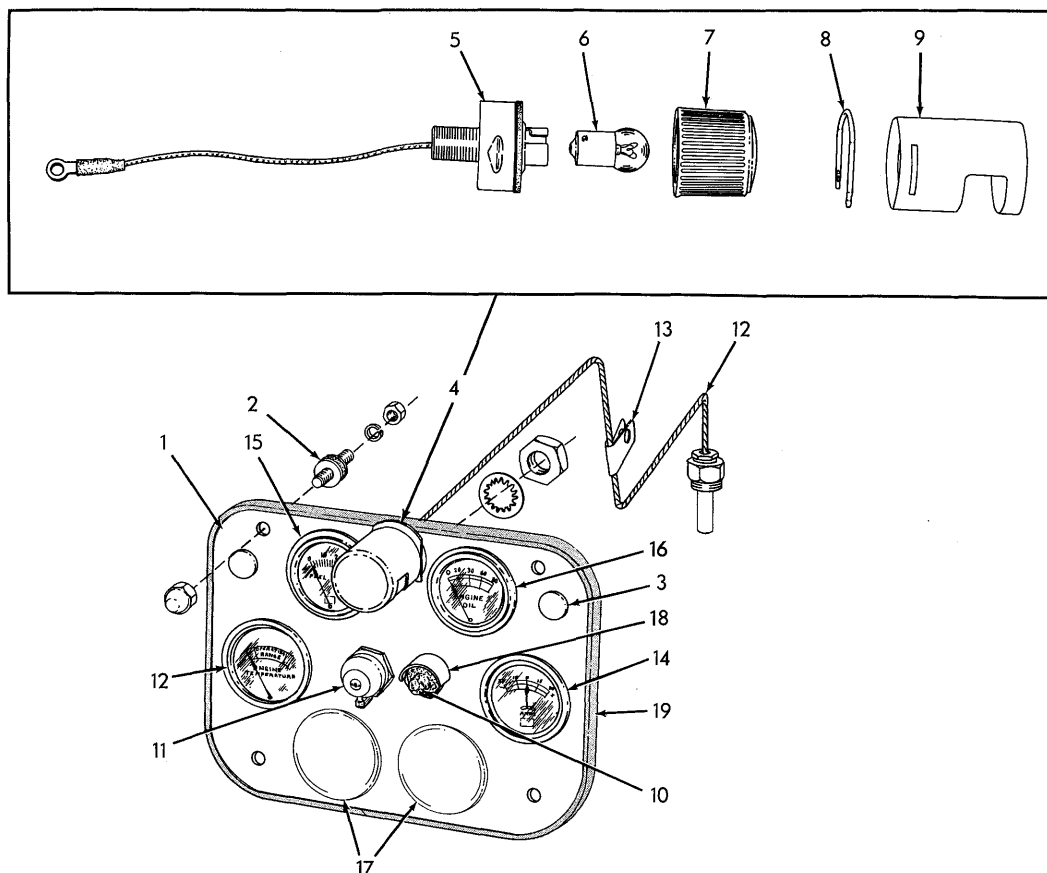


T-39351

ITEM	PART NO.	QTY.	DESCRIPTION
1	630207	1	PLATE, instrument mounting
2	036032	4	CAPSCREW, 3/8"NF x 3/4" (Used prior to tractor #7539)
	642746	4	CUSHION, resilient
	924950	4	NUT, cap, 3/8"NF
	904206	4	LOCKWASHER, 3/8"
	911041	4	NUT, 3/8"NF
3	921113	2	PLUG, instrument plate (11/16" switch holes)
4	659003	1	LIGHT ASSEMBLY, instrument panel (Consists of items 5 thru 9)
	911049	1	NUT, jam, 5/8"NF
	910334	1	LOCKWASHER, int-tooth, 5/8"
	924959	1	WASHER, spacing
5	-----	1	BASE ASSEMBLY (Not serviced separately)
6	074452	1	BULB, instrument light (single contact, 6 c. p., 24 volts)
7	095267	1	LENS, instrument light
8	095265	1	SPRING, retaining, instrument light cover
9	659002	1	COVER, instrument light

INSTRUMENTS (Continued)


ITEM	PART NO.	QTY.	DESCRIPTION
10	240962	1	SWITCH ASSEMBLY, starter (Includes mounting nut)
11	651630	1	SWITCH ASSEMBLY, lights (Includes mounting nuts)
12	658423	1	GAUGE, engine temperature (Includes mounting clamp)
13	073809	1	CLIP, temperature gauge tube (3/16" diam., 13/32" bolt-hole)
14	658348	1	AMMETER (Includes mounting clamp)
15	-----	1	GAUGE, fuel pressure (See page 288)
16	-----	1	GAUGE, engine oil pressure (See page 289)
17	921193	2	PLUG, instrument holes, 2-3/32" hole-diam.
18	634677	1	GUARD, starter switch
19	642972	1	SEAL, weather, instrument panel (Effective with tractor #7539)

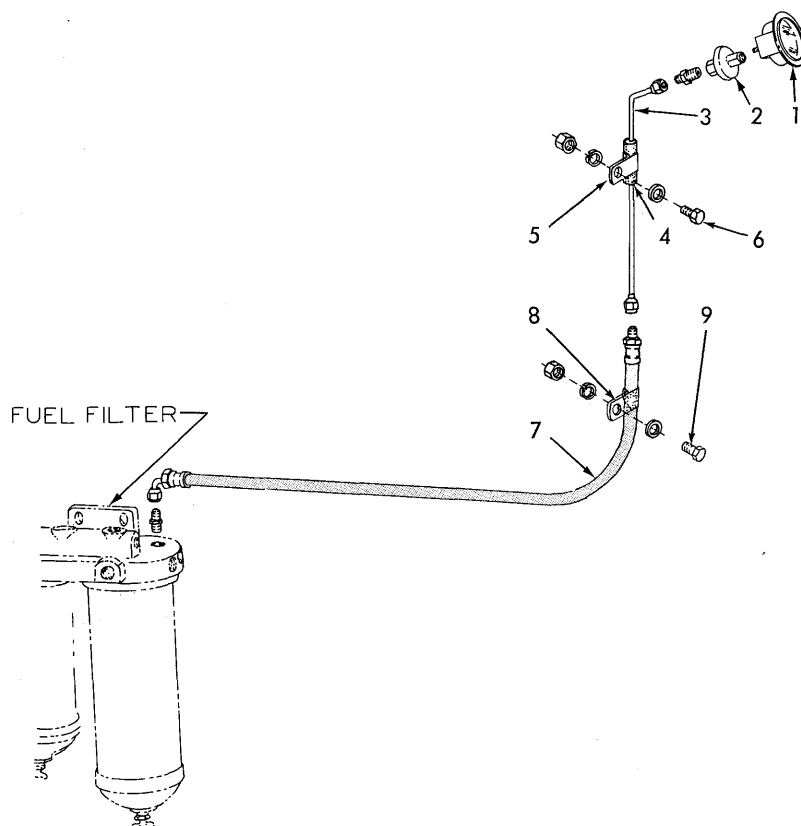

FUEL PRESSURE GAUGE

T-40502


ITEM	PART NO.	QTY.	DESCRIPTION
1	658349	1	GAUGE (Includes mounting clamp)
2	069674	1	RESTRICTOR
3	630453	1	TUBE ASSEMBLY (Includes nuts)
	919140	1	CONNECTOR, flare type, 1/4" tube, 1/4"NPT male
4	093972	1	BOOT, tube protecting (rubber)
5	047381	1	CLIP, tube supporting
6	036034	1	CAPSCREW, 3/8"NF x 1"
	911115	1	WASHER, plain, SAE std., 3/8"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
7	632950	1	HOSE ASSEMBLY (See HOSE PARTS)
	919171	1	CONNECTOR, flare type, 1/4" tube, 1/8"NPT male
8	094527	1	CLIP, hose supporting (1/2" diam.)(Used prior to tractor #6965)
	644006	1	CLIP, hose supporting (9/16" diam.)(Effective with tractor #6965)
9	036034	1	CAPSCREW, 3/8"NF x 1"
	911115	1	WASHER, plain, SAE std., 3/8"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF

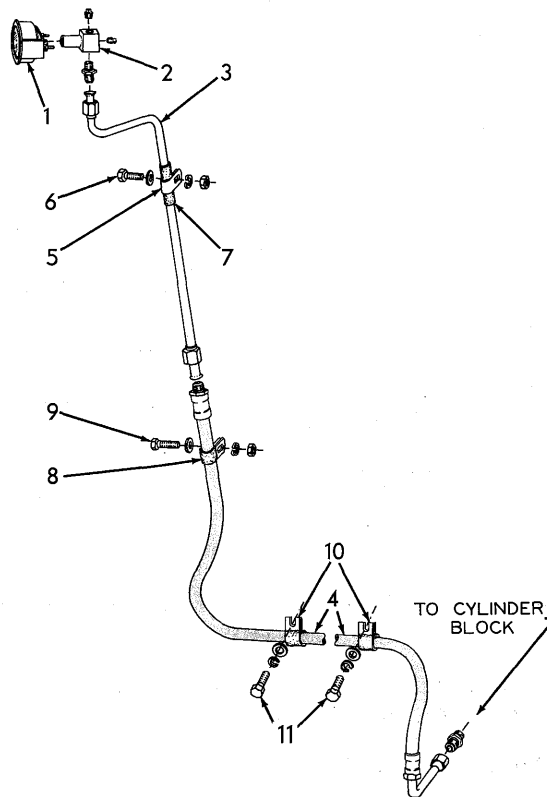

T-40503

ENGINE OIL PRESSURE GAUGE

ITEM	PART NO.	QTY.	DESCRIPTION
1	658293	1	GAUGE, oil pressure (Includes mounting clamp)
2	094450	1	TEE, gauge connection
	901651	1	PLUG, pipe, 1/8"NPT
	901652	1	PLUG, pipe, 1/4"NPT (Not used when Hour Meter is installed)
3	630452	1	TUBE ASSEMBLY (Includes nuts)
	919171	1	CONNECTOR, flare type, 1/4" tube, 1/8"NPT male
4	646230	1	HOSE (See HOSE PARTS)
	919140	1	CONNECTOR, flare type, 1/4" tube, 1/4"NPT male
5	047381	1	CLIP, tube supporting, (5/8" diam., 13/32" bolt-hole)
6	036034	1	CAPSCREW, 3/8"NF x 1"
	911115	1	WASHER, plain, SAE std., 3/8"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
7	093972	1	BOOT, tube protecting (rubber)
8	094527	1	CLIP, hose supporting (1/2" diam., 13/32" bolt-hole)(Used prior to tractor #6965)
	644006	1	CLIP, hose supporting (9/16" diam., 17/32" bolt-hole)(Effective with tractor #6965)
9	036034	1	CAPSCREW, 3/8"NF x 1"
	911115	1	WASHER, plain, SAE std., 3/8"
	904206	1	LOCKWASHER, 3/8"
	911041	1	NUT, 3/8"NF
10	620035	2	CLIP, hose supporting (1/2" diam., 13/32" bolt-slot)
11	035244	2	CAPSCREW, 3/8"NC x 3/4"
	911115	2	WASHER, plain, SAE std., 3/8"
	904206	2	LOCKWASHER, 3/8"

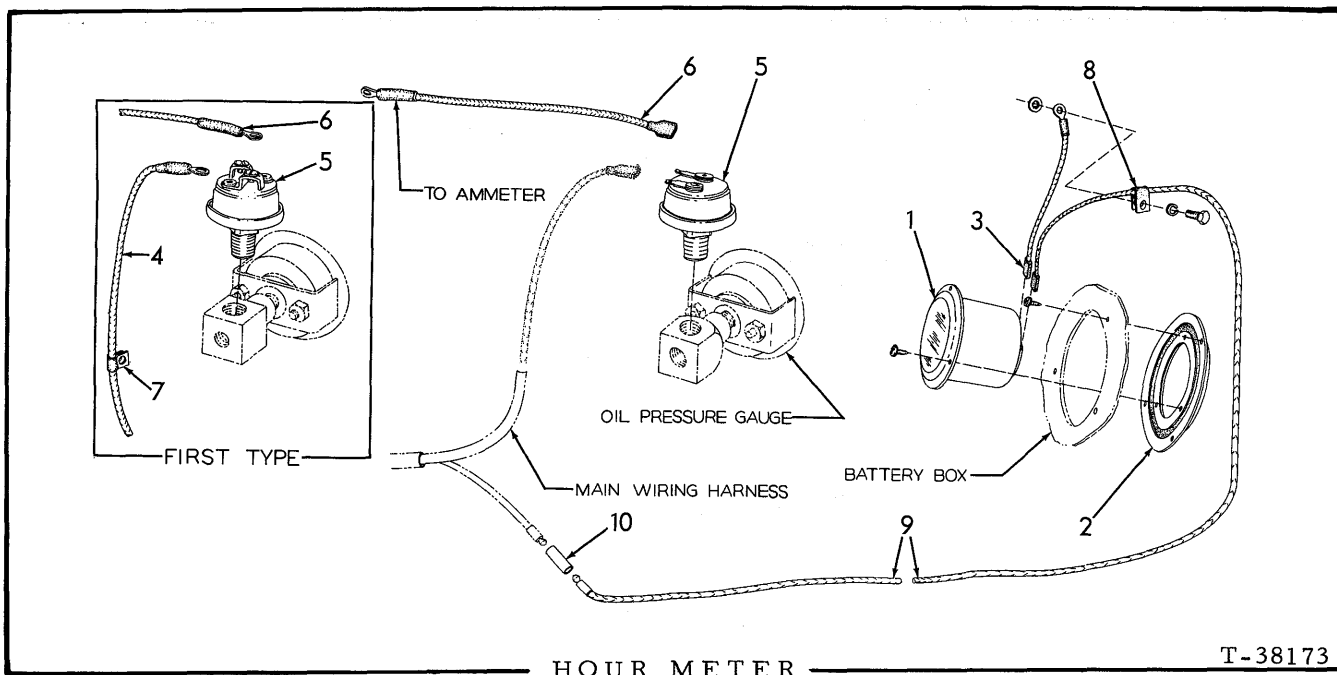

USAGE: Special equipment


* Tractors prior to serial No. 6184

** Tractors serial No. 6184 and up

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	650299	1	1	METER, hour (24 volt)
	918210	3	3	SCREW, thread-cutting, #6 x 1/2" (Includes lockwasher)

NOTE: Meter carries manufacturer's warranty and in case of failure should not be returned to Allis-Chalmers. Return "Hobbs" meter to nearest "Stewart-Warner" agency. Return "Hamilton" meter to Hamilton Watch Company, Industrial Products Division, Lancaster, Penna.



2	066467	1	1	DAMPER, vibration
	918210	3	3	SCREW, thread-cutting, #6 x 1/2" (Includes lockwasher)
3	630917	1	1	CABLE, meter to ground (8" long)
4	633629	1	-	CABLE, meter to pressure switch (160" long)
5	{ 050288	1	-	SWITCH, pressure (screw terminals)
	640727	-	1	SWITCH, pressure (spade terminals)
6	{ 605808	1	-	CABLE, pressure switch to ammeter (10" long, screw terminal)
	630917	-	1	CABLE, pressure switch to ammeter (8" long, spade terminal)
7	639388	4	1	CLIP, cable supporting (13/32" bolt-hole)
	036034	-	1	CAPSCREW, 3/8"NF x 1"
	904206	-	1	LOCKWASHER, 3/8"
	911041	-	1	NUT, 3/8"NF
8	640707	2	2	CLIP, cable supporting (9/32" bolt-hole)
	905655	2	2	CAPSCREW, 1/4"NC x 2"
	904204	2	2	LOCKWASHER, regular, 1/4"
	909367	1	1	LOCKWASHER, internal teeth, 1/4" (grounding)
9	640706	-	1	CABLE, meter to main harness (115" long)
10	048142	-	1	CONNECTOR, cable

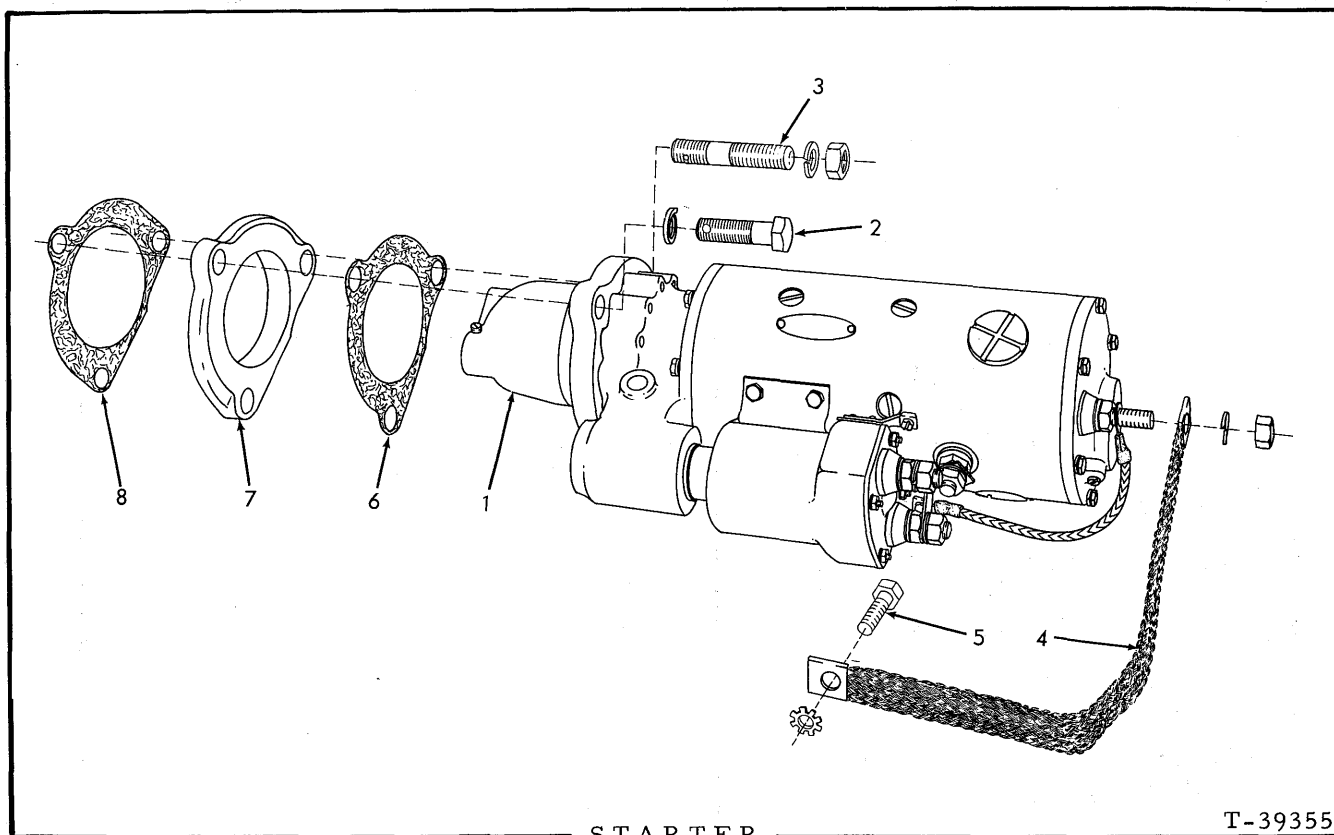

STARTER

T-39355

ITEM	PART NO.	QTY.	DESCRIPTION
1	620350	1	MOTOR, starting ("Delco-Remy" #1109986. Order parts from local "United Motors" Service agency)
2	631571	2	CAPSCREW, Nylok, 5/8"NC x 2-1/4"
3	648262	1	STUD, Nylok, 5/8"NF x 3-1/8"
	911044	1	NUT, 5/8"NF
	904209	3	LOCKWASHER, 5/8"
4	630199	1	STRAP, starter to ground
5	013058	1	CAPSCREW, 3/8"NC x 1-1/4"
	912301	1	LOCKWASHER, ext-tooth, 3/8"
6	631573	1	GASKET, starting motor
7	631574	1	ADAPTER, starting motor
8	631572	1	GASKET, starting motor adapter

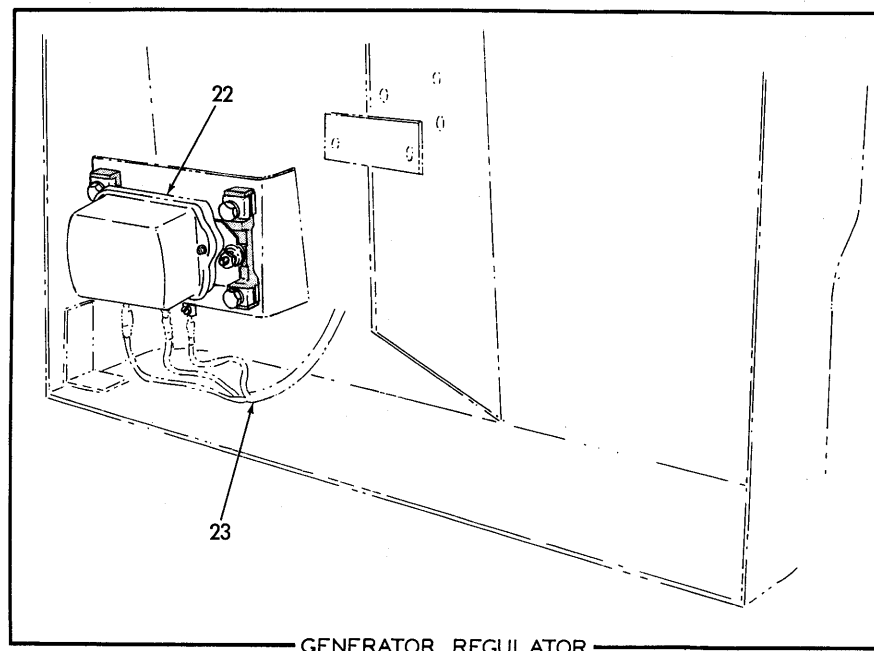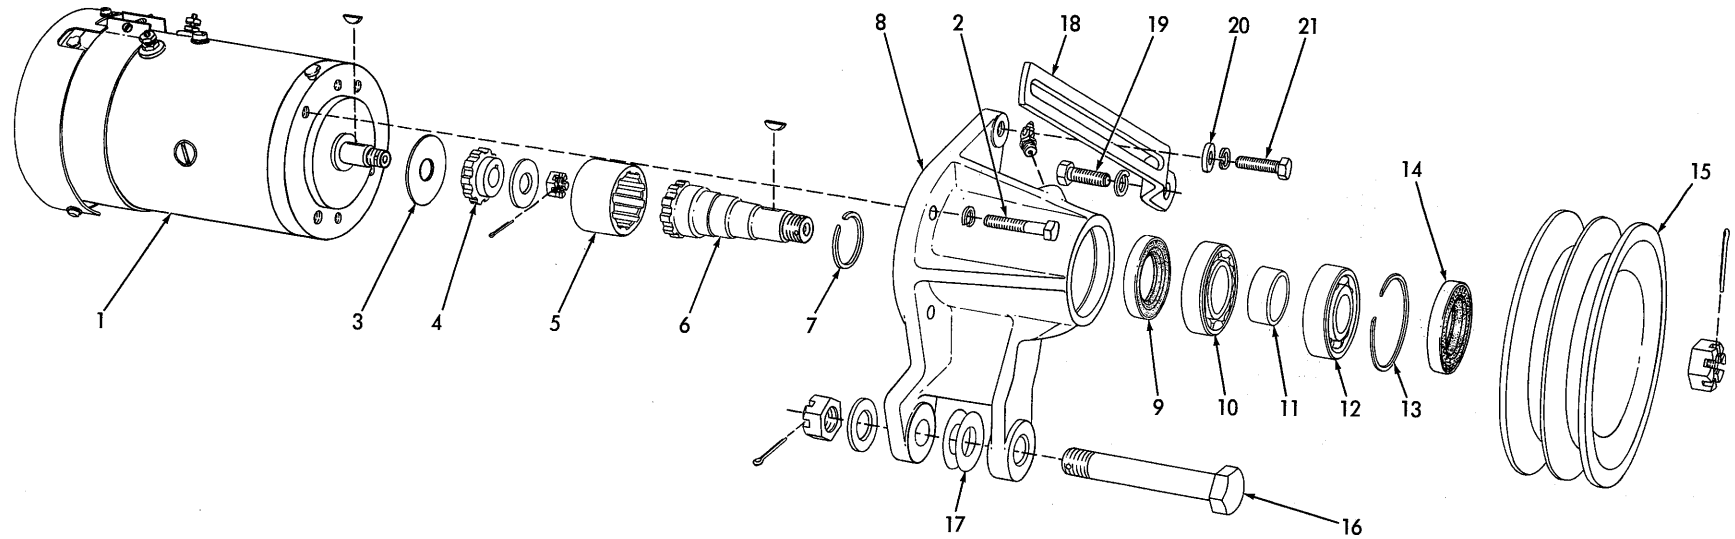



GENERATOR REGULATOR

GENERATOR

T-19679


GENERATOR

ITEM	PART NO.	QTY.	DESCRIPTION
			<u>NOTE:</u> See FAN for driving belts
1	094625	1	GENERATOR (Includes KEY 905121)("Delco-Remy" #1105997. Order parts from local "United Motors" Service agency)
	905121	1	KEY, #5 woodruff, 1/8" x 5/8"
2	013058	4	CAPSCREW, 3/8"NC x 1-1/4"
	904206	4	LOCKWASHER, 3/8"
3	067924	1	WASHER, generator shaft
4	067923	1	PINION, generator shaft
	910244	1	WASHER, plain, SAE std., 1/2"
	913471	1	NUT, jam, slotted, 1/2"NF
	900801	1	PIN, cotter, 3/32" x 3/4"
5	096056	1	SLEEVE, coupling
6	096092	1	SHAFT, generator drive
	913472	1	NUT, jam, slotted, 3/4"NF
	900807	1	PIN, cotter, 1/8" x 1-1/4"
	905121	1	KEY, #5 woodruff, 1/8" x 5/8"
7	052225	1	RING, snap, generator drive shaft
8	096071	1	HOUSING, generator drive
	915274	1	FITTING, lubricating, 45°, 1/8"NPT
9	067914	1	SEAL, grease, rear
10	4253863	1	BEARING, ball, rear
11	096046	1	SLEEVE, bearing spacing
12	067916	1	BEARING, ball, front
13	050291	1	RING, snap, bearing retaining
14	067913	1	SEAL, grease, front
15	096093	1	PULLEY
16	076522	1	CAPSCREW, generator drive housing
	912331	1	NUT, slotted, 3/4"NF
	900808	1	PIN, cotter, 1/8" x 1-1/2"
	910255	1	WASHER, plain, SAE std., 3/4"
17	083710	4	SHIM, housing mounting (Use as req'd)
18	083399	1	STRAP, generator adjustment
19	041250	1	CAPSCREW, generator strap (7/16"NC x 1-1/4")
	904207	1	LOCKWASHER, 7/16"
20	044973	1	WASHER, plain, generator strap
21	013058	1	CAPSCREW, generator strap (3/8"NC x 1-1/4")
	904206	1	LOCKWASHER, 3/8"
22	185984	1	REGULATOR, voltage and current (Order parts from local "United Motors" Service agency)
	041981	4	CAPSCREW, 5/16"NF x 1-1/2" } Used prior to tractor #6166
	904205	4	LOCKWASHER, 5/16" }
	912178	4	CAPSCREW, 1/4"NF x 1-1/2" } Effective with tractor #6166
	904204	4	LOCKWASHER, 1/4" }
	911040	4	NUT, 1/4"NF }
23	-----	-	HARNESS, wiring (See LIGHTS AND WIRING)

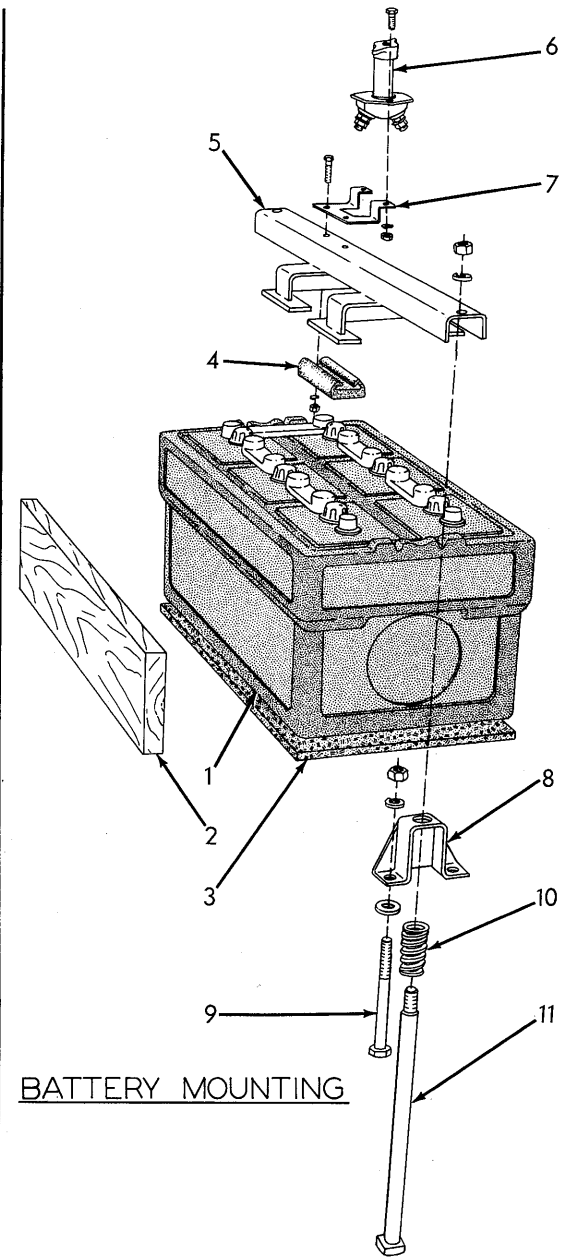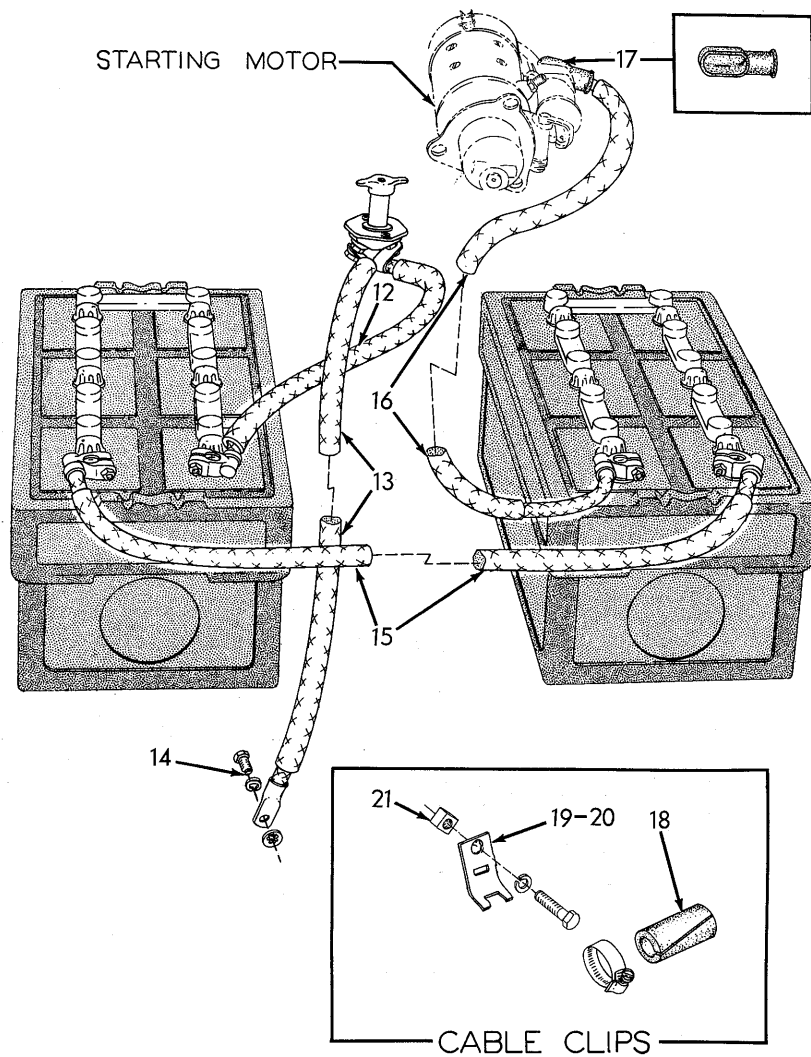

BATTERIES AND CABLES

ITEM	PART NO.	QTY.	DESCRIPTION
1	-----	2	BATTERY, storage, 12 volts, 25 plates("Prestolite" type D-6. Order from local dealer)
2	-----	-	BOARD, battery spacing (Procure locally as req'd)
3	085680	2	PAD, battery bottom
4	052791	8	BLOCK, hold-down (rubber)
5	052782	2	HOLD-DOWN, battery
6	096908	1	SWITCH ASSEMBLY, master, (Serviced only as a unit)
	912789	2	CAPSCREW, 1/4"NF x 3/4"
	904204	2	LOCKWASHER, 1/4"
	911040	2	NUT, 1/4"NF
7	637580	1	BRACKET, master switch
	912789	2	CAPSCREW, 1/4"NF x 3/4"
	904204	2	LOCKWASHER, 1/4"
	911040	2	NUT, 1/4"NF
8	081867	4	BRACKET, hold-down bolt
	052191	4	CAPSCREW, 1/2"NC x 5-1/2" (Left side)
	041877	4	CAPSCREW, 1/2"NC x 3" (Right side)
9	064531	8	WASHER, plain
	904208	8	LOCKWASHER, 1/2"
	911028	8	NUT, 1/2"NC
10	081404	4	SPRING, hold-down bolt
11	087313	4	BOLT, hold-down
	904208	4	LOCKWASHER, 1/2"
	911043	4	NUT, 1/2"NF
12	096918	1	CABLE, battery to master switch (15-1/2" long)
13	627428	1	CABLE, master switch to ground (58" long)
14	035167	1	CAPSCREW, 3/8"NF x 7/8"
	904206	1	LOCKWASHER, 3/8"
	906960	1	LOCKWASHER, internal teeth, 3/8"
15	632971	1	CABLE, battery connecting (72"long)
16	623880	1	CABLE, battery to starter (102" long)
17	076572	1	BOOT, protecting, starter terminal
18	076469	11	BOOT, cable protecting
	921912	12	CLAMP, hose, 1-1/16" to 2" diam.
19	633653	4	CLIP, cable supporting (7/16" bolt-hole)
	035167	1	CAPSCREW, 3/8"NF x 7/8"
	903775	3	CAPSCREW, 3/8"NC x 7/8"
	904206	4	LOCKWASHER, 3/8"
20	084895	3	CLIP, cable supporting (9/16" bolt-hole)
	035221	2	CAPSCREW, 1/2"NC x 1"
	904208	2	LOCKWASHER, 1/2"
21	055235	1	BLOCK, cable supporting clip (Early units only)

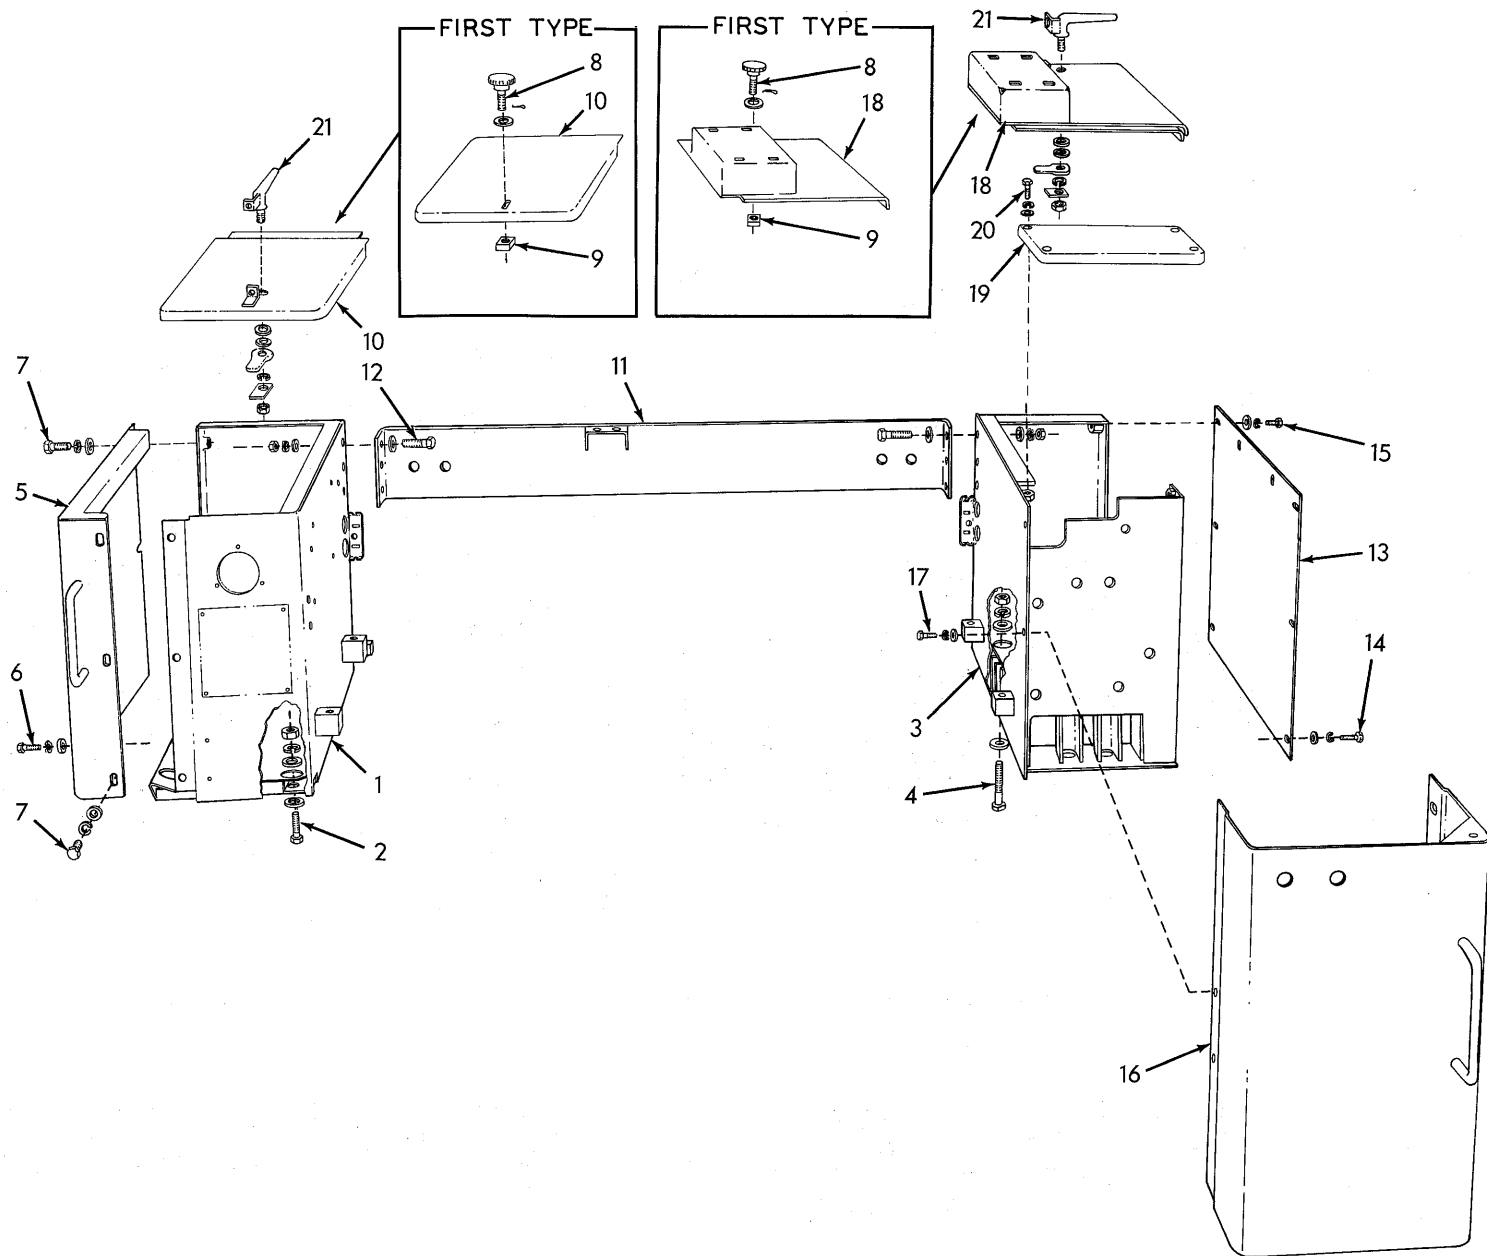

BATTERY BOXES

* Tractors prior to serial No. 7906 excluding 7892

** Tractors serial No. 7906 and up including 7892


ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	649125	1	-	BOX, right battery
	650916	-	1	BOX, right battery
2	035067	3	-	CAPSCREW, 1/2"NF x 2" (Early units)
	921556	3	3	CAPSCREW, 1/2"NC x 2" (Late units)
	064531	6	6	WASHER, plain
	904208	3	3	LOCKWASHER, 1/2"
	911043	3	-	NUT, 1/2"NF (Early units)
	911028	3	3	NUT, 1/2"NC (Late units)
				} Not used with heavy-duty fenders
3	649126	1	-	BOX, left battery
	650914	-	1	BOX, left battery
4	031671	2	-	CAPSCREW, 1/2"NF x 4-1/2" (Early units)
	045252	2	2	CAPSCREW, 1/2"NC x 4-1/2" (Late units)
	064531	4	4	WASHER, plain
	904208	2	2	LOCKWASHER, 1/2"
	911043	2	-	NUT, 1/2"NF (Early units)
	911028	2	2	NUT, 1/2"NC (Late units)
				} Not used with heavy-duty fenders
5	639905	1	1	COVER, side, right battery box
6	614478	2	2	CAPSCREW, 1/2"NF x 1-3/8"
7	614478	6	-	CAPSCREW, 1/2"NF x 1-3/8" (Early units)
	035733	6	6	CAPSCREW, 1/2"NC x 1-3/8" (Late units)
	904208	8	8	LOCKWASHER, 1/2"
	064531	8	8	WASHER, plain
8	091976	2	-	KNOB, retaining, battery box cover
	910244	2	-	WASHER, plain, SAE std., 1/2"
	900802	2	-	PIN, cotter, 3/32" x 1"
9	624488	2	-	BLOCK, tapped
10	641499	1	-	COVER, top, right battery box
	650918	-	1	COVER, top, right battery box
11	639828	1	1	SUPPORT, battery box
12	035073	6	6	CAPSCREW, 1/2"NF x 1-3/4"
	047063	12	12	WASHER, plain
	904208	6	6	LOCKWASHER, 1/2"
	911043	6	6	NUT, 1/2"NF
13	637532	1	1	COVER, side, left battery box
14	070467	1	-	CAPSCREW, 1/2"NF x 1" (Early units)
	035221	1	1	CAPSCREW, 1/2"NC x 1" (Late units)
15	614478	7	-	CAPSCREW, 1/2"NF x 1-3/8" (Early units)
	035733	7	7	CAPSCREW, 1/2"NC x 1-3/8" (Late units)
	904208	8	8	LOCKWASHER, 1/2"
	064531	8	8	WASHER, plain

(Continued)

BATTERY BOXES (Continued)


ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
16	649123	1	1	COVER, end, left battery box
17	{ 035525	2	-	CAPSCREW, 1/2"NF x 1-1/8" (Early units)
	{ 035220	2	2	CAPSCREW, 1/2"NC x 1-1/8" (Late units)
	{ 904208	2	2	LOCKWASHER, 1/2"
	{ 064531	2	2	WASHER, plain
18	{ 639862	1	-	COVER, top, left battery box, rear section
	{ 654930	-	1	COVER, top, left battery box, rear section
19	{ 639859	1	-	COVER, top, left battery box, front section
	{ 639858	-	1	COVER, top, left battery box, front section
20	{ 036034	3	-	CAPSCREW, 3/8"NF x 1" (Early units)
	{ 035439	3	3	CAPSCREW, 3/8"NC x 1" (Late units)
	{ 904206	3	3	LOCKWASHER, 3/8"
	{ 044973	3	3	WASHER, plain
21	650901	-	2	LOCK ASSEMBLY, battery box cover (Serviced only as a unit)
	911115	-	4	WASHER, plain, SAE std., 3/8"

NOTE: See PAINTING AND MARKING for instruction plates and transfers

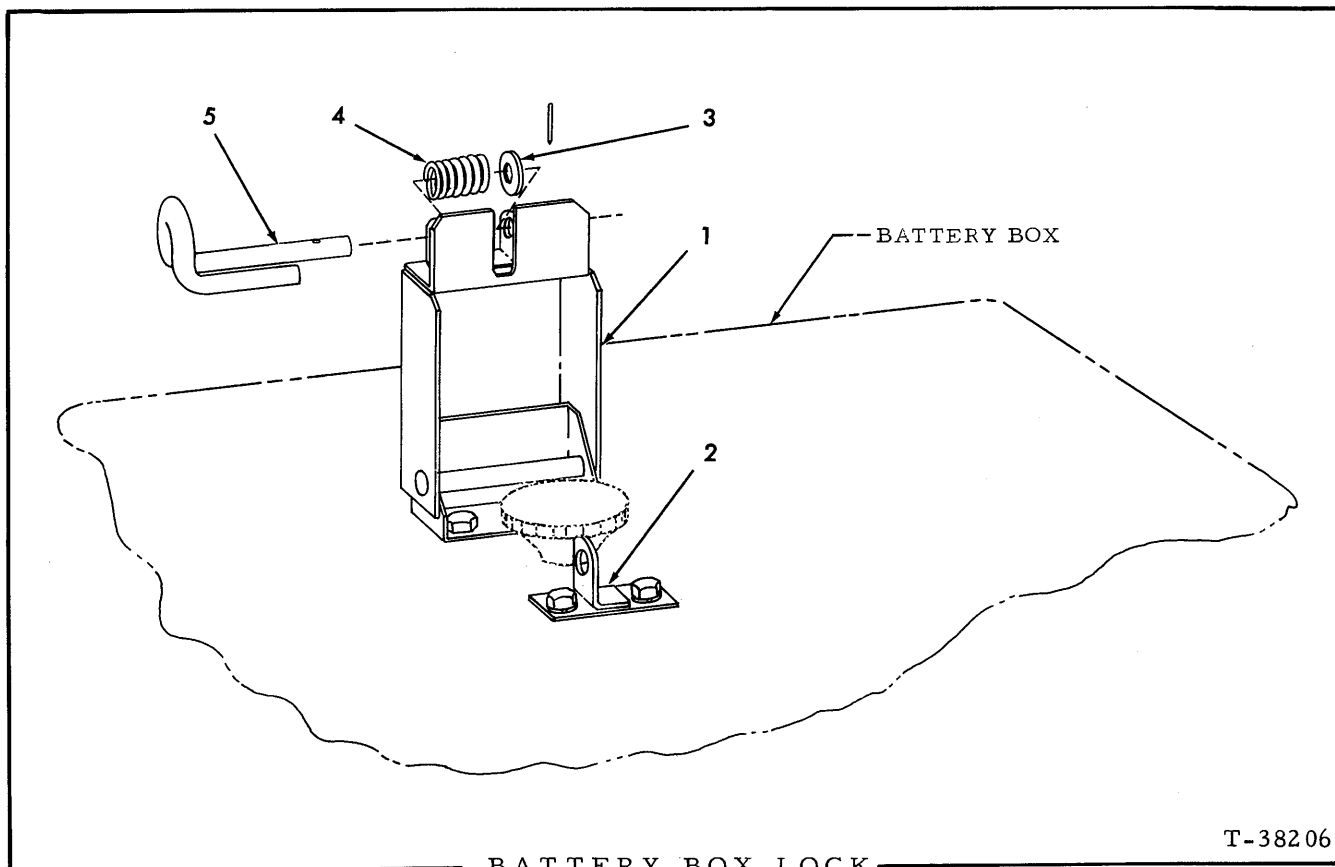

USAGE: Special equipment for tractors prior to serial No. 7906 excluding No. 7892. Padlock is required to complete the installation

ITEM	PART NO.	QTY.	DESCRIPTION
1	620474	1	COVER, retaining knob
	914330	2	CAPSCREW, 1/4"NF x 5/8"
	904204	2	LOCKWASHER, 1/4"
	911040	2	NUT, 1/4"NF
2	620472	1	PLATE, latching, retaining knob cover
	914330	2	CAPSCREW, 1/4"NF x 5/8"
	904204	2	LOCKWASHER, 1/4"
	911040	2	NUT, 1/4"NF
3	607414	1	WASHER, latching spring
4	035916	1	SPRING, latching rod
5	621201	1	ROD, latching
	916146	1	PIN, spring, 3/32" x 1/2"

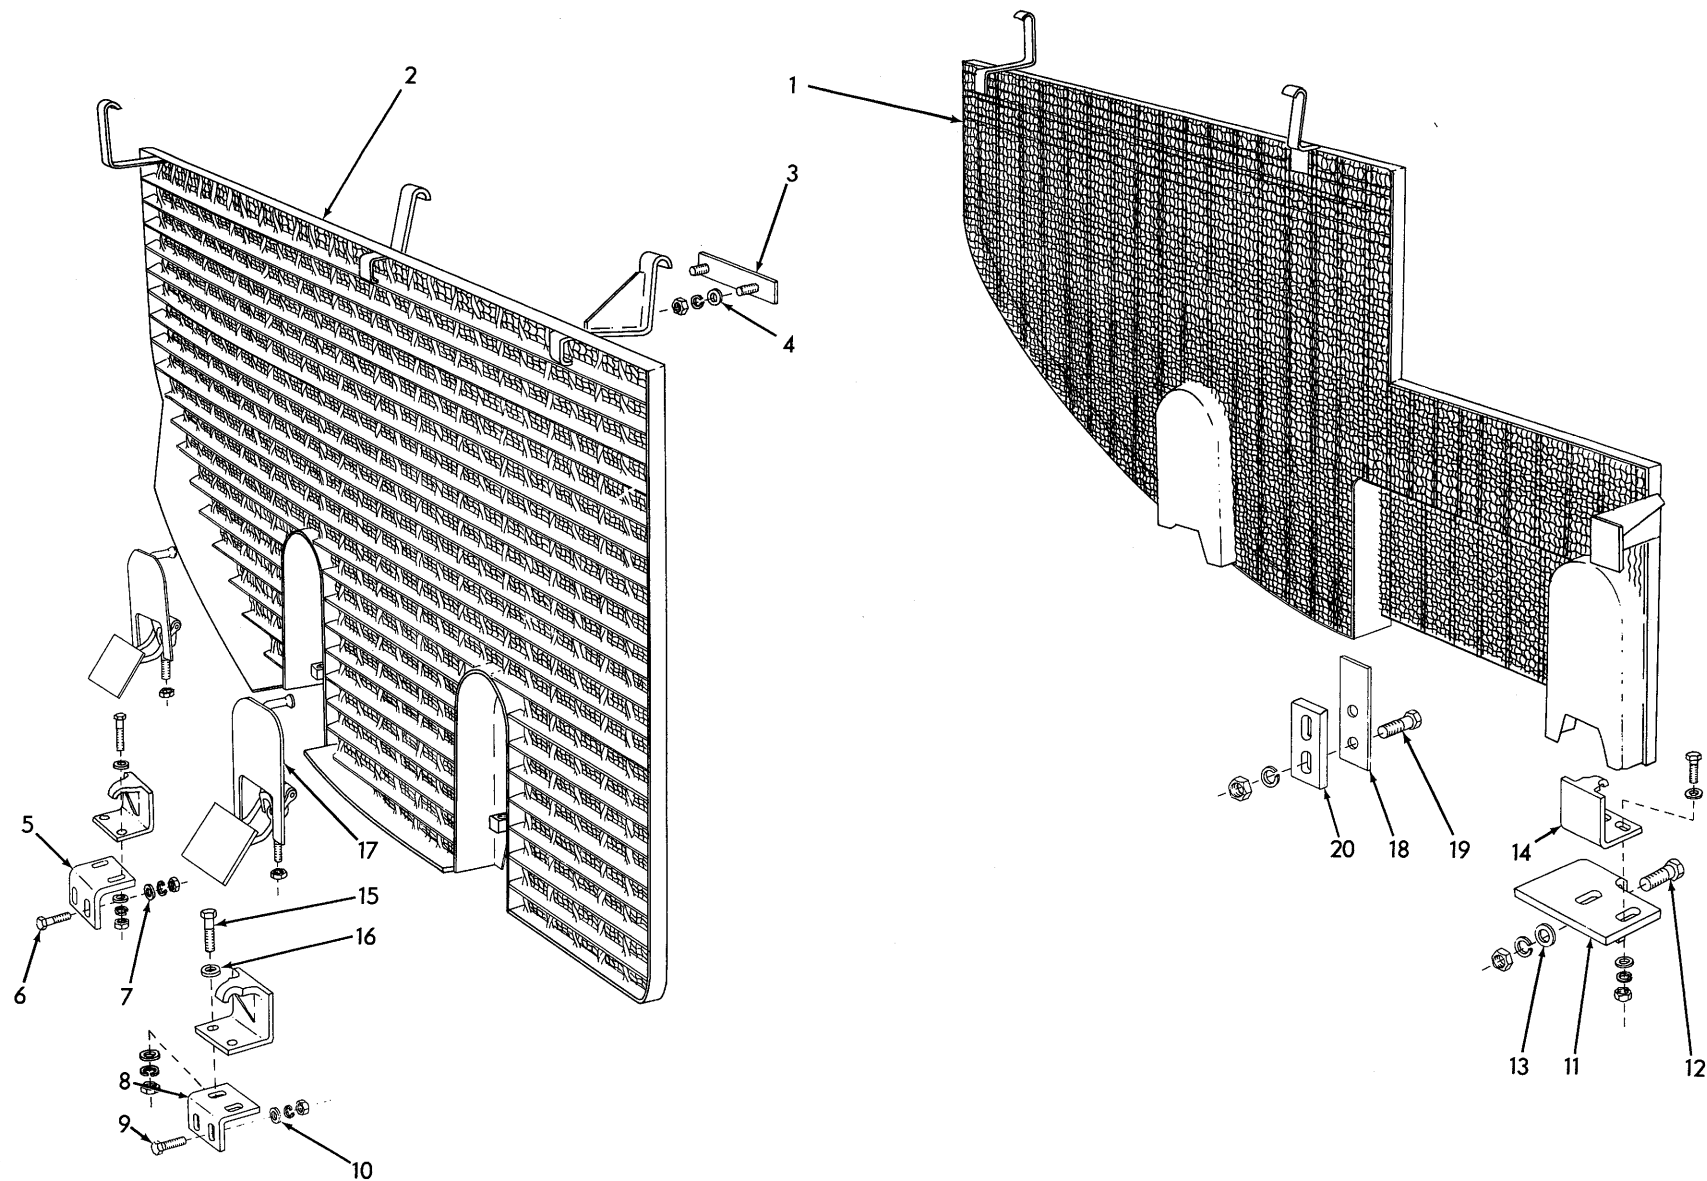


ENGINE SIDE SCREENS

ENGINE SIDE SCREENS

USAGE: Special equipment

ITEM	PART NO.	QTY.	DESCRIPTION
1	-----	1	SCREEN, right side (Used prior to tractor #5937. Order SCREEN 642234 and ANGLE 642240)
	642234	1	SCREEN, right side (Effective with tractor #5937)
	644023	1	SCREEN, right side (Includes fine-mesh screen)
2	634905	1	SCREEN, left side
	644022	1	SCREEN, left side (Includes fine-mesh screen)
3	631426	5	PLATE, suspension
4	044973	10	WASHER, plain
	904206	10	LOCKWASHER, 3/8"
	911041	10	NUT, 3/8"NF
5	634928	2	ANGLE, front latch supporting
6	035073	4	CAPSCREW, 1/2"NF x 1-3/4"
7	064531	4	WASHER, plain
	904208	4	LOCKWASHER, 1/2"
	911043	4	NUT, 1/2"NF
8	634929	1	ANGLE, rear latch supporting, left side
9	035073	2	CAPSCREW, 1/2"NF x 1-3/4"
10	064531	2	WASHER, plain
	904208	2	LOCKWASHER, 1/2"
	911043	2	NUT, 1/2"NF
11	634929	1	ANGLE, rear latch supporting, right side (Used prior to tractor #5937)
	642240	1	ANGLE, rear latch supporting, right side (Effective with tractor #5937)
12	035073	2	CAPSCREW, 1/2"NF x 1-3/4"
13	064531	2	WASHER, plain
	904208	2	LOCKWASHER, 1/2"
	911043	2	NUT, 1/2"NF
14	091063	4	BRACKET, latching
15	203188	8	CAPSCREW, 3/8"NF x 1-1/2"
16	044973	16	WASHER, plain
	904206	8	LOCKWASHER, 3/8"
	911041	8	NUT, 3/8"NF
17	093401	4	LATCH ASSEMBLY (Serviced only as a unit)
	911041	8	NUT, 3/8"NF
18	634256	1	PLATE, retaining (right side only)
19	012992	2	CAPSCREW, 3/8"NF x 1-1/4"
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
20	634257	1	PLATE, spacing (right side only)


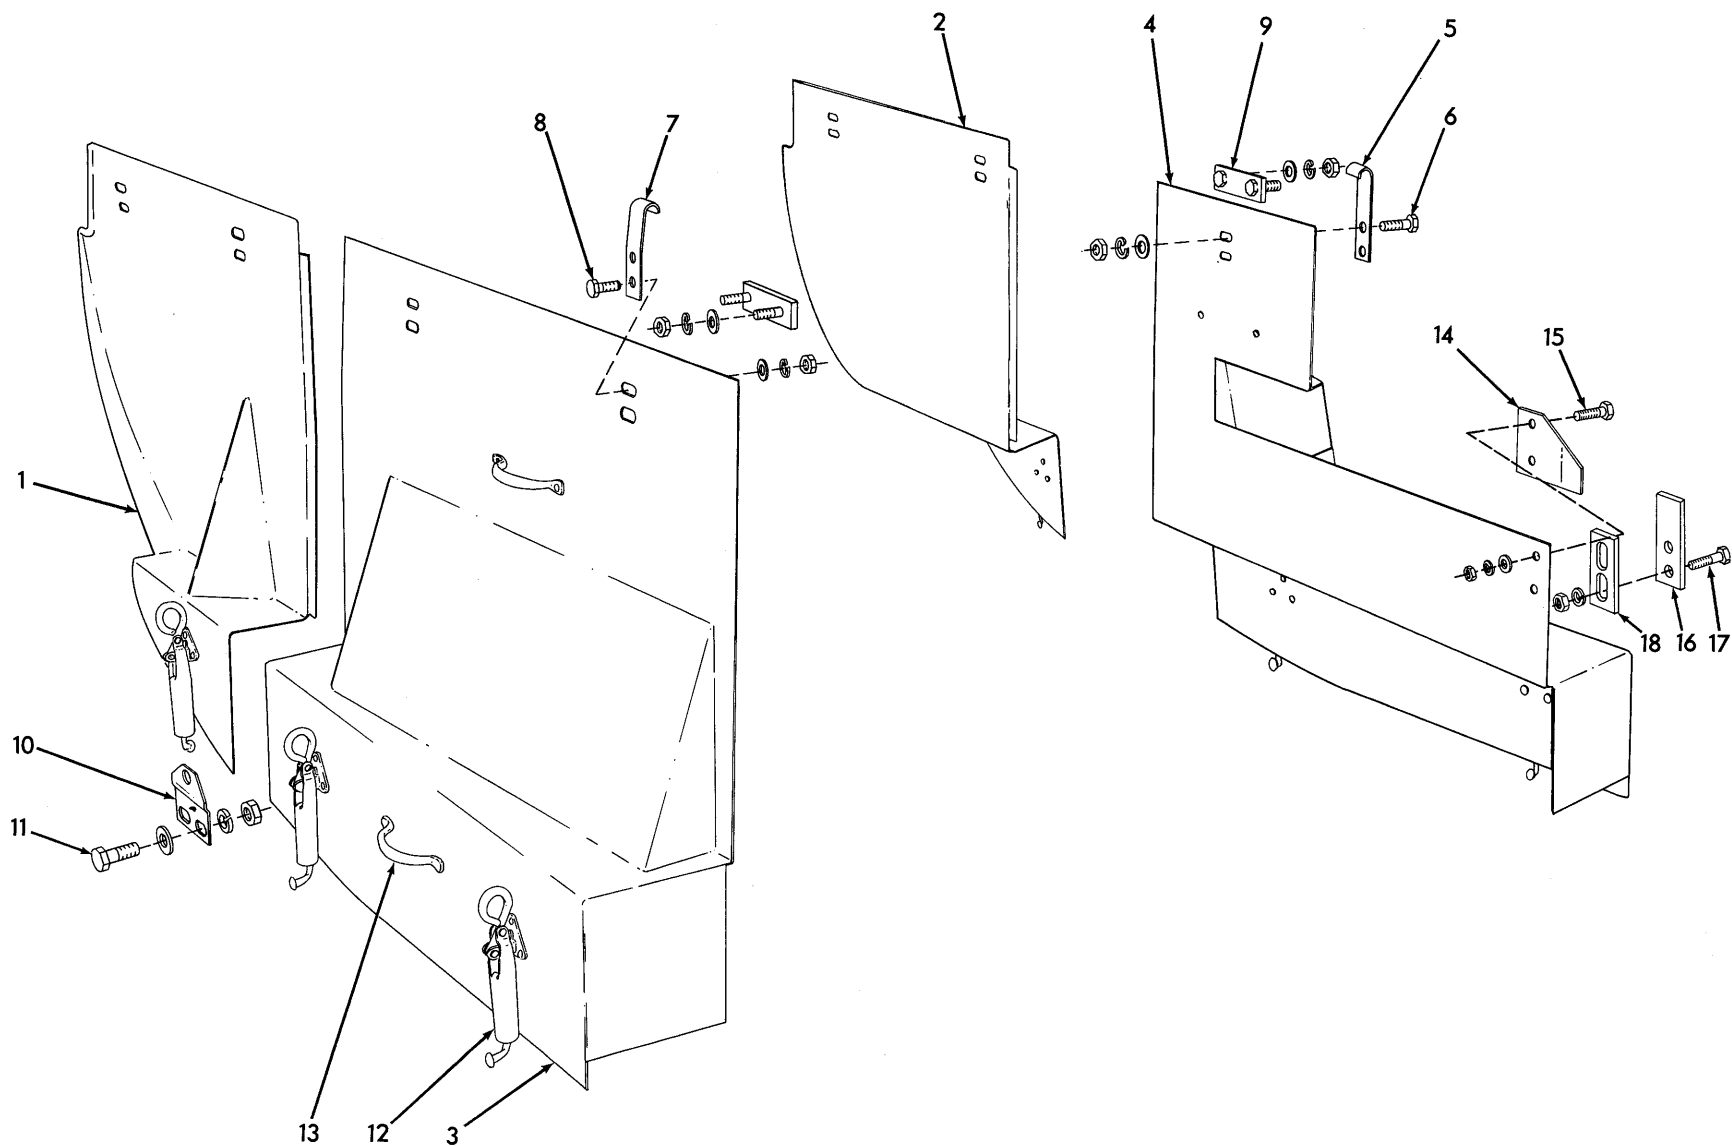


HOOD SIDE PLATES (Tractors with standard or cable radiator guard)

HOOD SIDE PLATES

USAGE: Special equipment. For tractors with standard or cable radiator guards.

ITEM	PART NO.	QTY.	DESCRIPTION
1	633013	1	PLATE ASSEMBLY, front, left side (Includes item 12)
2	633014	1	PLATE ASSEMBLY, front, right side (Includes item 12)
3	634262	1	PLATE ASSEMBLY, rear, left side (Includes items 12 and 13)
4	642289	1	PLATE ASSEMBLY, rear, right side (Includes items 12 and 13)
5	631514	6	STRAP, suspension
6	035167	12	CAPSCREW, 3/8"NF x 7/8"
	044973	12	WASHER, plain
	904206	12	LOCKWASHER, 3/8"
	911041	12	NUT, 3/8"NF
7	631513	1	STRAP, suspension, left rear
8	035167	2	CAPSCREW, 3/8"NF x 7/8"
	044973	2	WASHER, plain
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
9	631426	7	PLATE, suspension strap
	044973	14	WASHER, plain
	904206	14	LOCKWASHER, 3/8"
	911041	14	NUT, 3/8"NF
10	091805	6	BRACKET, latching
11	614478	12	CAPSCREW, 1/2"NF x 1-3/8"
	064531	12	WASHER, plain
	904208	12	LOCKWASHER, 1/2"
	911043	12	NUT, 1/2"NF
12	033060	6	FASTENER
	900764	18	RIVET, fl-hd., 3/16" x 1/2"
13	032834	4	HANDLE, lifting
	900764	8	RIVET, fl-hd., 3/16" x 1/2"
14	634255	1	PLATE, latching
15	035167	2	CAPSCREW, 3/8"NF x 7/8"
	044973	2	WASHER, plain
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
16	634256	1	PLATE, retaining
17	012992	2	CAPSCREW, 3/8"NF x 1-1/4"
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
18	634257	1	PLATE, spacing

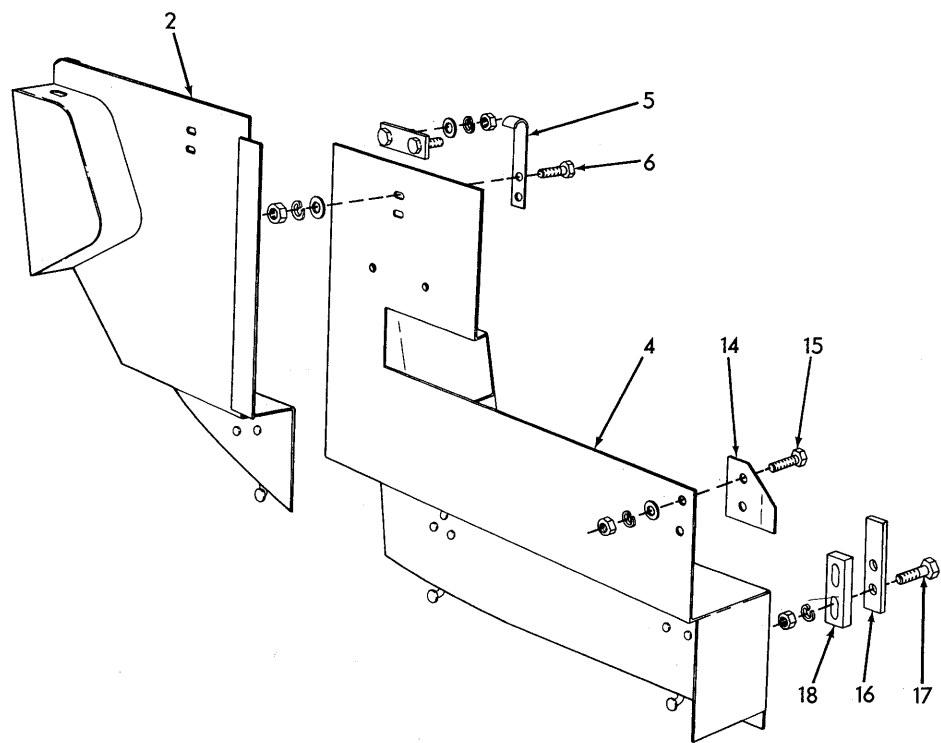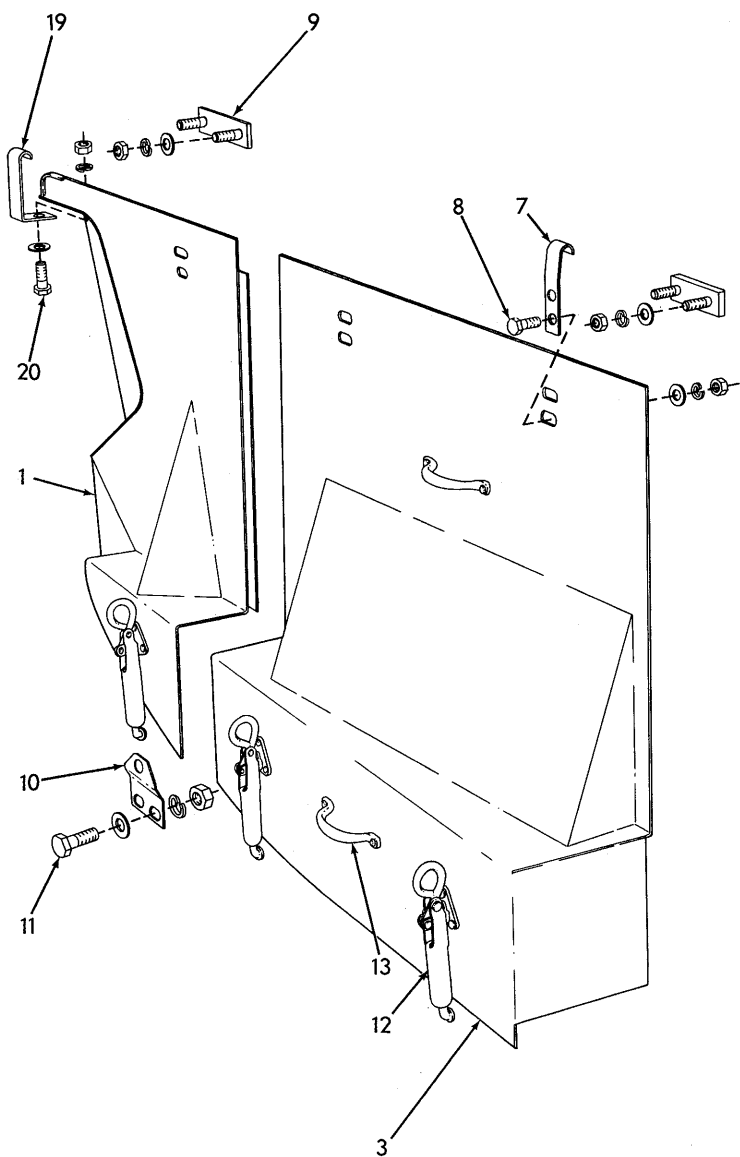


HOOD SIDE PLATES (Tractors with hydraulic radiator guard)

I-70510

HOOD SIDE PLATES

USAGE: Special equipment. For tractors with hydraulic radiator guard

ITEM	PART NO.	QTY.	DESCRIPTION
1	633023	1	PLATE ASSEMBLY, front, left side (Includes item 12)
2	633024	1	PLATE ASSEMBLY, front, right side (Includes item 12)
3	634262	1	PLATE ASSEMBLY, rear, left side (Includes items 12 and 13)
4	642289	1	PLATE ASSEMBLY, rear, right side (Includes items 12 and 13)
5	631514	4	STRAP, suspension, intermediate
6	035167	8	CAPSCREW, 3/8"NF x 7/8"
	044973	8	WASHER, plain
	904206	8	LOCKWASHER, 3/8"
	911041	8	NUT, 3/8"NF
7	631513	1	STRAP, suspension, left rear
8	035167	2	CAPSCREW, 3/8"NF x 7/8"
	044973	2	WASHER, plain
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
9	631426	7	PLATE, suspension strap
	044973	14	WASHER, plain
	904206	14	LOCKWASHER, 3/8"
	911041	14	NUT, 3/8"NF
10	091805	6	BRACKET, latching
11	614478	12	CAPSCREW, 1/2"NF x 1-3/8"
	064531	12	WASHER, plain
	904208	12	LOCKWASHER, 1/2"
	911043	12	NUT, 1/2"NF
12	033060	6	FASTENER
	900764	18	RIVET, fl-hd., 3/16" x 1/2"
13	032834	4	HANDLE, lifting
	900764	8	RIVET, fl-hd., 3/16" x 1/2"
14	634255	1	PLATE, latching, right rear
15	035167	2	CAPSCREW, 3/8"NF x 7/8"
	044973	2	WASHER, plain
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
16	634256	1	PLATE, retaining
17	012992	2	CAPSCREW, 3/8"NF x 1-1/4"
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
18	634257	1	PLATE, spacing, right rear latching plate
19	633025	2	STRAP, suspension, front
20	035167	2	CAPSCREW, 3/8"NF x 7/8"
	044973	2	WASHER, plain
	904206	2	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF

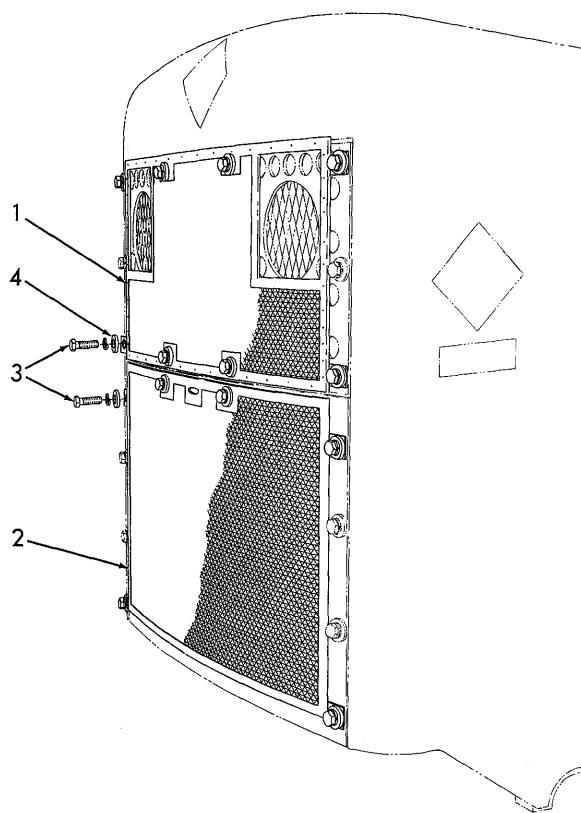


GRILLE SCREEN (For Standard Guard)

T-22571

USAGE: Special equipment. Applicable to tractors equipped with Standard Wrap-around Radiator Guard. See pages 307 and 308 for other units.

ITEM	PART NO.	QTY.	DESCRIPTION
1	093414	1	SCREEN, upper section
2	087897	1	SCREEN, lower section
3	071113	14	CAPSCREW, screen attaching (5/8"NC x 2")
	904209	14	LOCKWASHER, 5/8"
4	064810	14	WASHER, plain

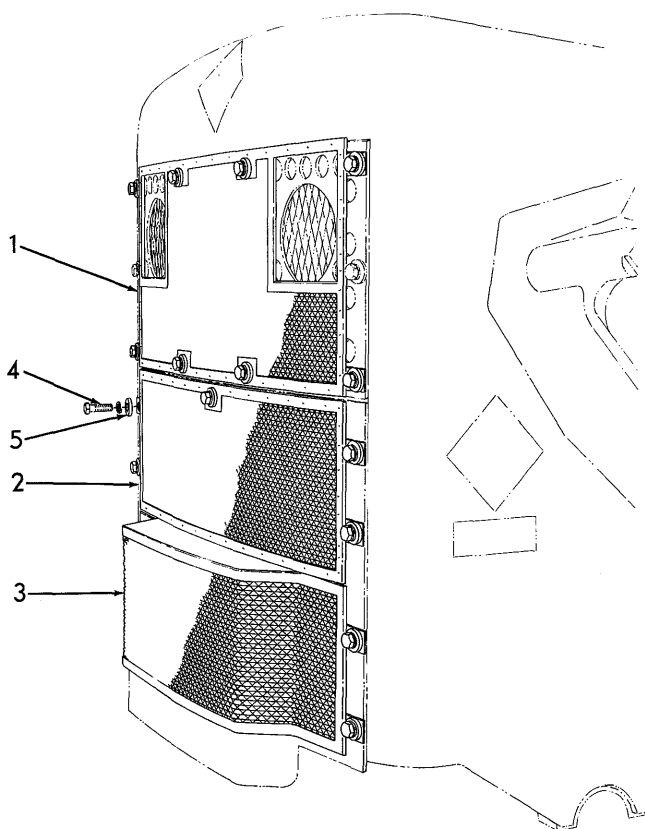


GRILLE SCREEN (For Hydraulic Guard)

T-22574

USAGE: Special equipment. Applicable to tractors equipped with Hydraulic Wrap-around Radiator Guard. Production discontinued. See pages 306 and 308 for other units.

ITEM	PART NO.	QTY.	DESCRIPTION
1	093414	1	SCREEN, upper section
2	095105	1	SCREEN, lower section, upper half
3	095100	1	SCREEN, lower section, lower half
4	071113	17	CAPSCREW, screen attaching (5/8"NC x 2")
	904209	17	LOCKWASHER, 5/8"
5	064810	17	WASHER, plain

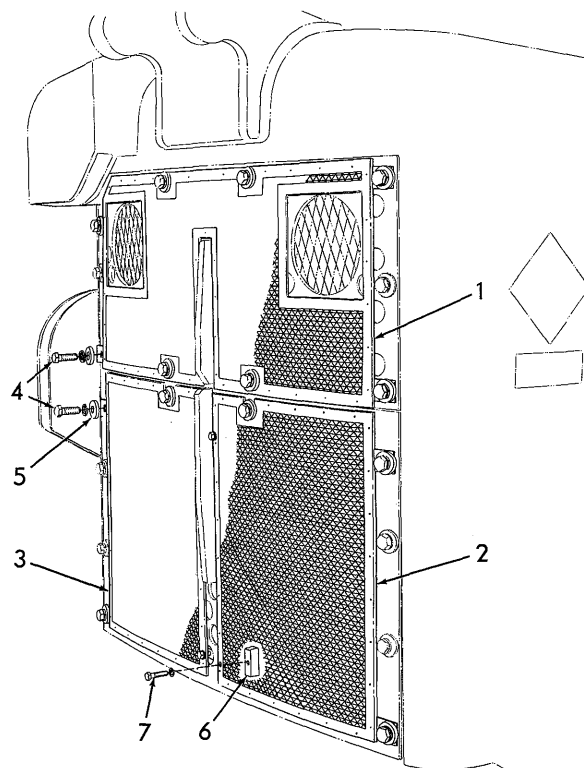


GRILLE SCREEN (For Cable Guard)

T-22576


USAGE: Special equipment. Applicable to tractors equipped with Cable Wrap-around Radiator Guard and rear-mounted Cable Control Unit. See pages 306 and 307 for other units.

ITEM	PART NO.	QTY.	DESCRIPTION
1	093616	1	SCREEN, upper section
2	088115	1	SCREEN, lower section, left
3	088116	1	SCREEN, lower section, right
4	071113	14	CAPSCREW, screen attaching (5/8"NC x 2")
	904209	14	LOCKWASHER, 5/8"
5	064810	14	WASHER, plain
6	087849	4	BLOCK, screen attaching capscREW (3/8"NF thread)
7	203188	4	CAPSCREW, screen attaching (3/8"NF x 1-1/2")
	904206	4	LOCKWASHER, 3/8"

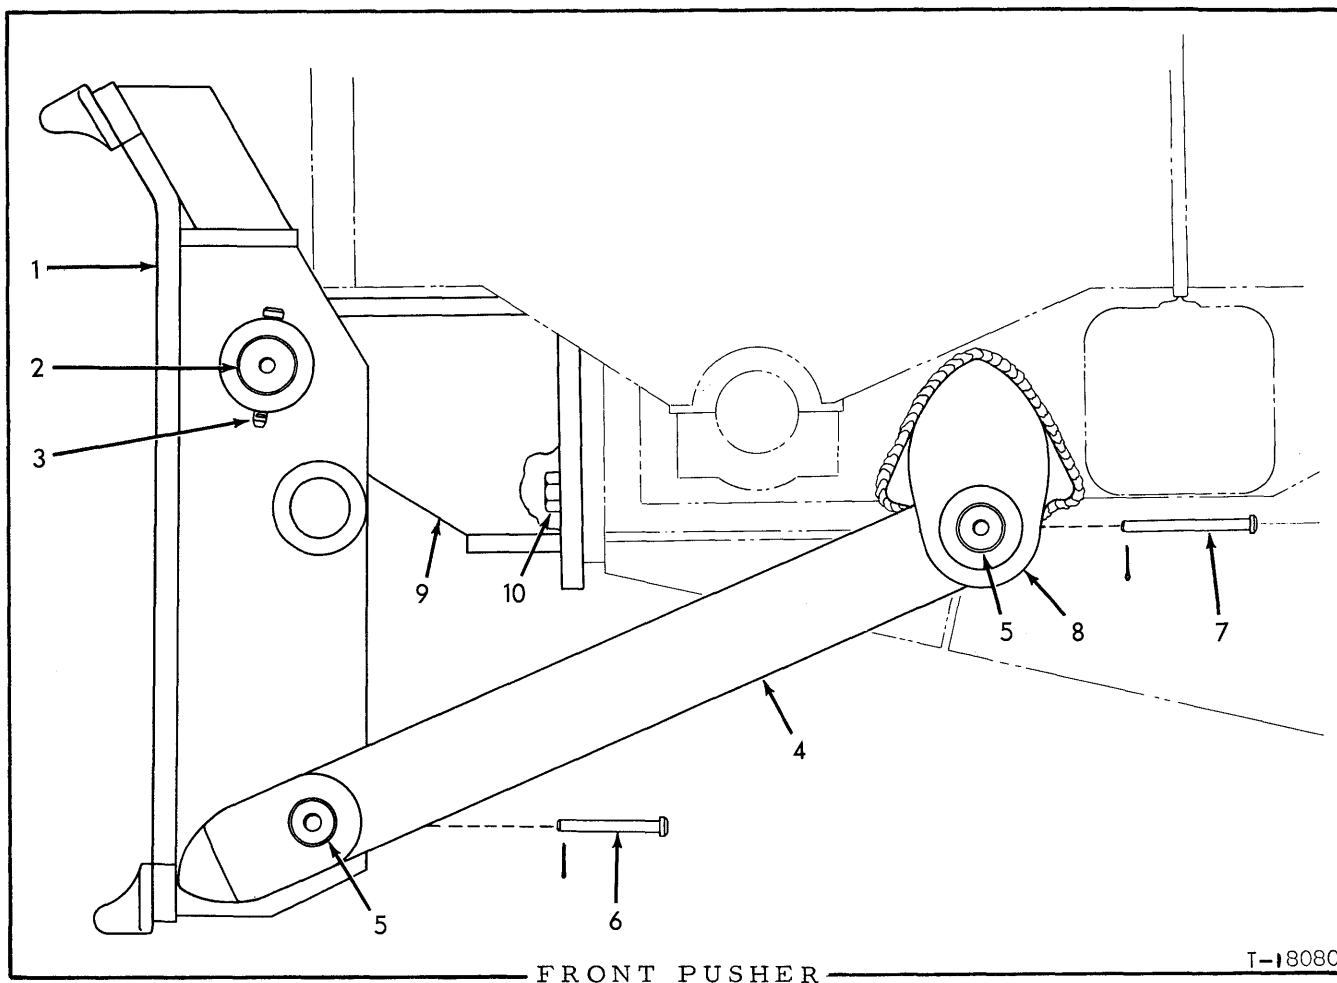

USAGE: Special Equipment.

ITEM	PART NO.	QTY.	DESCRIPTION
1	080052	1	PUSHER
2	078497	2	PIN, pusher mounting
3	078508	2	PIN, retaining, pusher mounting pin
	900806	2	PIN, cotter, 1/8" x 1"
4	085658	2	STRUT, pusher bracing
5	080043	4	PIN, bracing strut
6	080952	2	PIN, retaining, bracing strut pin, front
	900806	2	PIN, cotter, 1/8" x 1"
7	085657	2	PIN, retaining, bracing strut pin, rear
	900806	2	PIN, cotter, 1/8" x 1"
8	085659	2	LUG, strut attachment (Requires welding to main frame)
9	084142	1	BRACKET, mounting
10	031055	6	CAPSCREW, 1"NF x 3-3/4"
	910916	6	LOCKWASHER, 1"
	911047	6	NUT, 1"NF

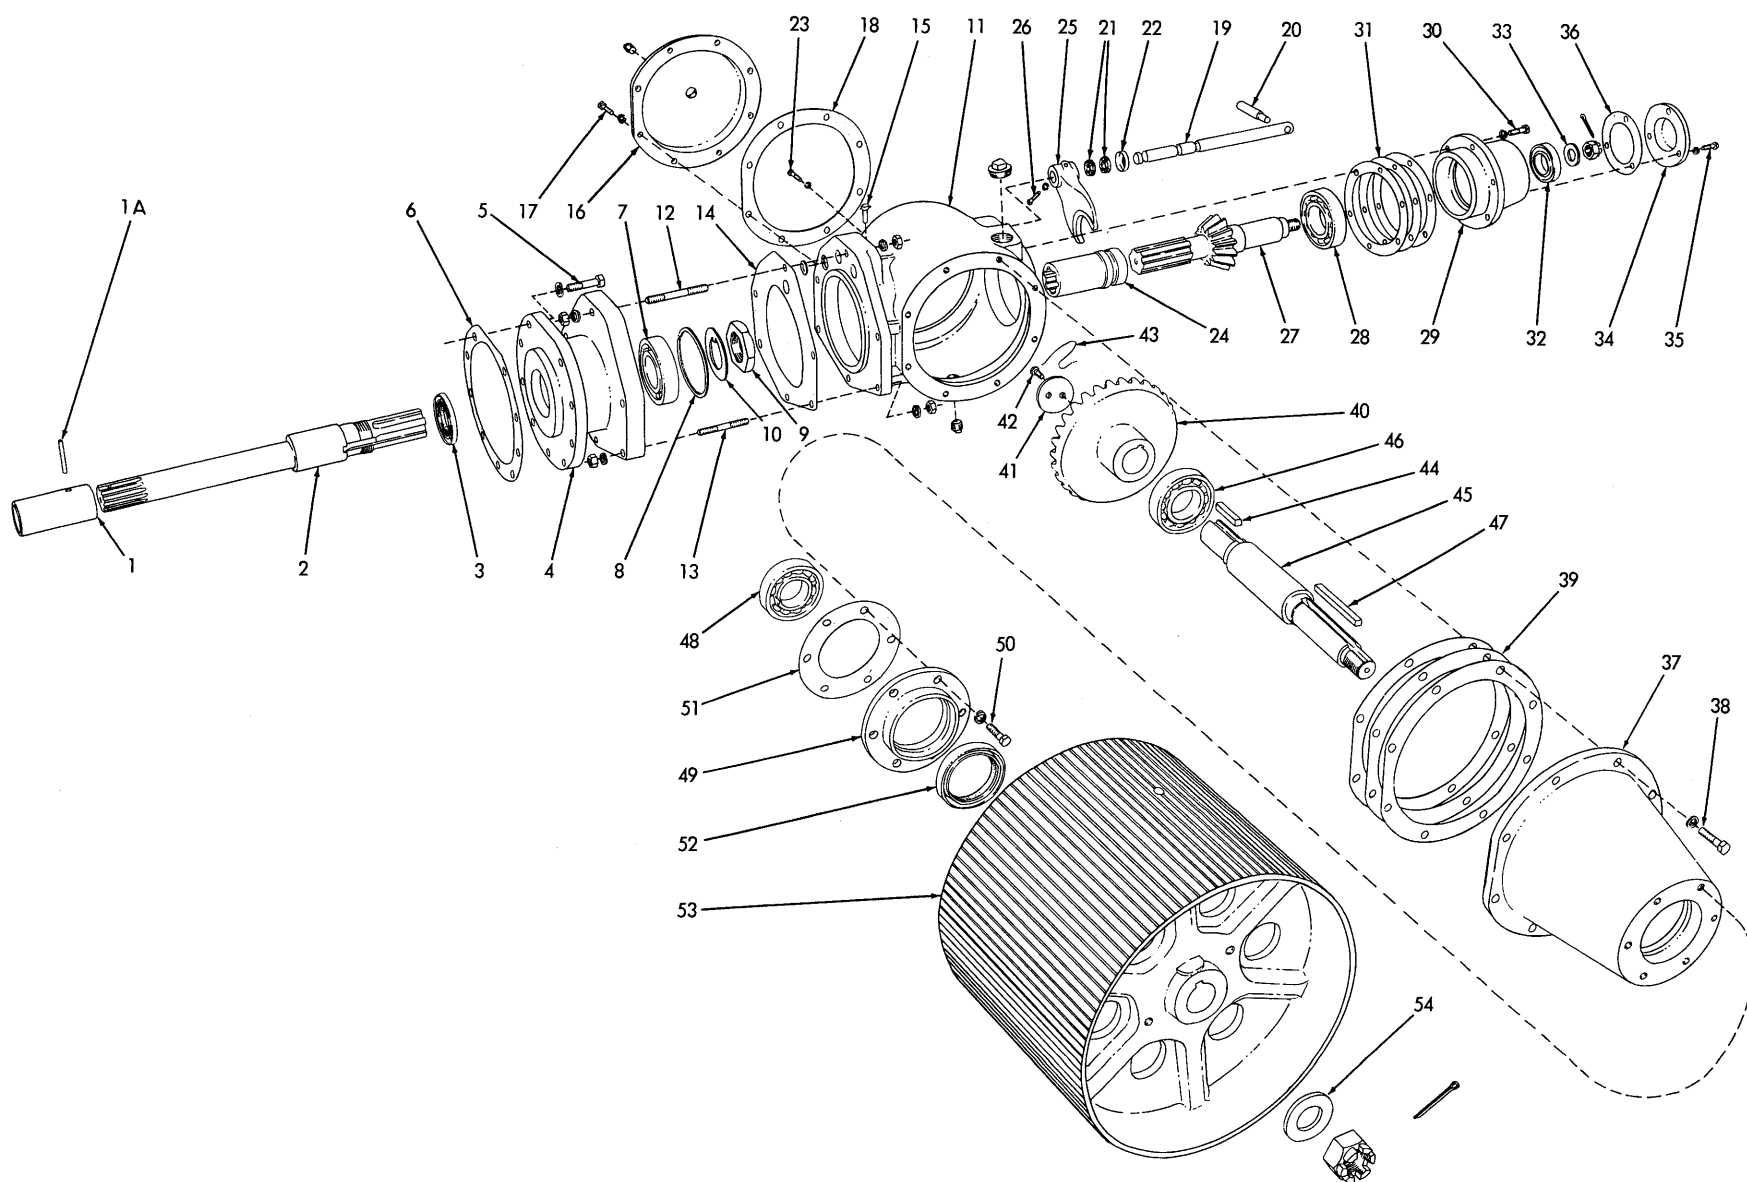

POWER PULLEY

POWER PULLEY


USAGE: Special equipment

ITEM	PART NO.	QTY.	DESCRIPTION
1	068388	1	COUPLING, front
1A	621171	1	PIN, rivet, coupling retaining
2	075865	1	SHAFT, input
3	053670	1	SEAL, oil, input shaft
4	058058	1	SPACER
5	023755	9	CAPSCREW, 5/8"NC x 2-1/4"
	904209	9	LOCKWASHER, 5/8"
6	052976	1	GASKET, spacer to transmission case
7	3021048	1	BEARING, ball, input shaft
8	048704	1	RING, snap, input shaft bearing
9	070176	1	NUT, bearing retaining
10	070114	1	WASHER, locking, bearing retaining nut
11	071229	1	CASE, gear
	910006	1	PLUG, expansion, 1-1/4"
	912726	1	PLUG, pipe, sq-hd., 3/4"NPT
	912770	1	PLUG, pipe, sq-hd., 1-1/2"NPT
12	058052	1	STUD, 5/8"NF x 5-1/8"
13	058053	5	STUD, 5/8"NF x 4-1/8"
	904209	12	LOCKWASHER, 5/8"
	911044	12	NUT, 5/8"NF
14	058054	1	GASKET, case to spacer
15	051447	1	BREATHER ASSEMBLY, gear case (Serviced only as a unit)
16	071218	1	COVER, gear case, side
17	035236	8	CAPSCREW, 1/2"NC x 1-3/4"
	904208	8	LOCKWASHER, 1/2"
	912726	1	PLUG, pipe, sq-hd., 3/4"NPT
18	071219	1	GASKET, gear case side cover
19	071213	1	SHAFT, shifting fork
20	021711	1	HANDLE, shifting fork shaft
21	034674	2	PACKING, shifting fork shaft
22	035405	1	RETAINER, shaft packing
23	013059	1	CAPSCREW, retaining, shifting fork shaft (3/8"NC x 2")
	904206	1	LOCKWASHER, 3/8"
24	041882	1	SLEEVE, coupling
25	071217	1	FORK, sleeve shifting
26	013059	1	CAPSCREW, 3/8"NC x 2"
	904206	1	LOCKWASHER, 3/8"

(Continued)

POWER PULLEY (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
27	041881	1	PINION AND SHAFT
28	042890	1	BEARING, ball, pinion shaft, front
29	-----	1	HOUSING, pinion shaft bearings (Discontinued)
30	035236	6	CAPSCREW, 1/2"NC x 1-3/4"
	904208	6	LOCKWASHER, 1/2"
31	071452	3	SHIM, pinion mesh adjustment (.005" thick. Use as req'd)
32	042847	1	BEARING, ball, pinion shaft, rear
33	071210	1	WASHER, retaining, pinion shaft rear bearing
	911057	1	NUT, castle, 1"NF
	904002	1	PIN, cotter, 1/8" x 2"
34	071205	1	CAP, pinion shaft bearing housing
35	035061	3	CAPSCREW, 1/2"NC x 1-1/4"
	904208	3	LOCKWASHER, 1/2"
36	071206	1	GASKET, bearing housing cap
37	-----	1	HOUSING, pulley shaft bearings (Discontinued)
38	035236	8	CAPSCREW, 1/2"NC x 1-3/4"
	904208	8	LOCKWASHER, 1/2"
39	071225	3	SHIM, gear mesh adjustment (.005" thick. Use as req'd)
	071226	3	SHIM, gear mesh adjustment (.010" thick. Use as req'd)
	071227	4	SHIM, gear mesh adjustment (.020" thick. Use as req'd)
40	041883	1	GEAR, bevel, pulley shaft (30 teeth)
41	071212	1	WASHER, bevel gear retaining
42	011259	2	CAPSCREW, drilled-hd., 1/2"NC x 1"
43	023633	1	WIRE, locking, 1/16" x 12"
44	071211	1	KEY, pulley shaft bevel gear
45	071221	1	SHAFT, pulley
46	638620	1	BEARING, ball, pulley shaft, inner
47	071215	1	KEY, belt pulley
48	204751	1	BEARING, ball, pulley shaft, outer
49	034696	1	RETAINER, pulley shaft outer bearing
50	035061	6	CAPSCREW, 1/2"NC x 1-1/4"
	904208	6	LOCKWASHER, 1/2"
51	071207	1	GASKET, pulley shaft bearing retainer
52	029563	1	SEAL, oil, pulley shaft
53	077174	1	PULLEY, belt (18" diam.)
54	071209	1	WASHER, belt pulley retaining
	911058	1	NUT, castle, 1-1/2"NF
	904006	1	PIN, cotter, 3/16" x 2-3/4"

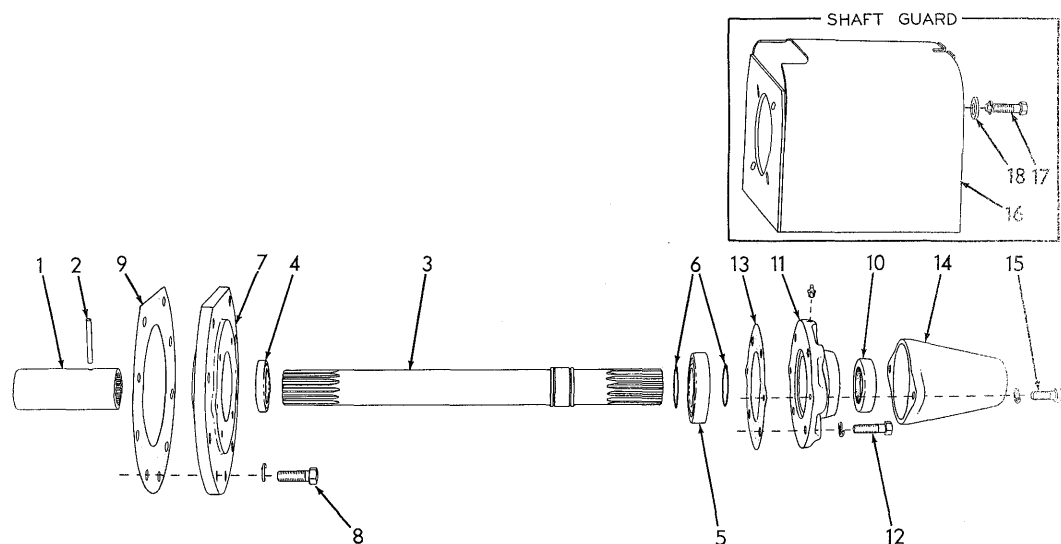


POWER TAKE-OFF

T-4330

USAGE: Special equipment. Runs at engine speed.

ITEM PART NO. QTY. DESCRIPTION

1	068388	1	COUPLING, front
2	621171	1	PIN, rivet, coupling retaining
3	068480	1	SHAFT, coupling
4	037676	1	SEAL, oil, inner
5	067566	1	BEARING, ball
6	058274	2	RING, snap
7	068488	1	CAGE, coupling shaft bearing
8	036707	9	CAPSCREW, 5/8"NC x 1-3/4"
	904209	9	LOCKWASHER, 5/8"
9	068487	1	GASKET, coupling shaft bearing cage
10	068491	1	SEAL, oil, outer
11	068490	1	RETAINER, oil seal
	914465	1	FITTING, lubricating, straight, 1/8"NPT
12	035236	4	CAPSCREW, 1/2"NC x 1-3/4" (Replaced by 921556 CAPSCREW
			when coupling shaft guard is used. See item 16)
	904208	4	LOCKWASHER, 1/2"
13	068489	1	GASKET, oil seal retainer
14	055529	1	COVER, shaft protecting
15	035061	2	CAPSCREW, 1/2"NC x 1-1/4"
	904208	2	LOCKWASHER, 1/2"
16	078482	1	GUARD, coupling shaft (When installed, item 14 is discarded)
17	921556	4	CAPSCREW, 1/2"NC x 2"
	904208	4	LOCKWASHER, 1/2"
18	064531	4	WASHER, plain

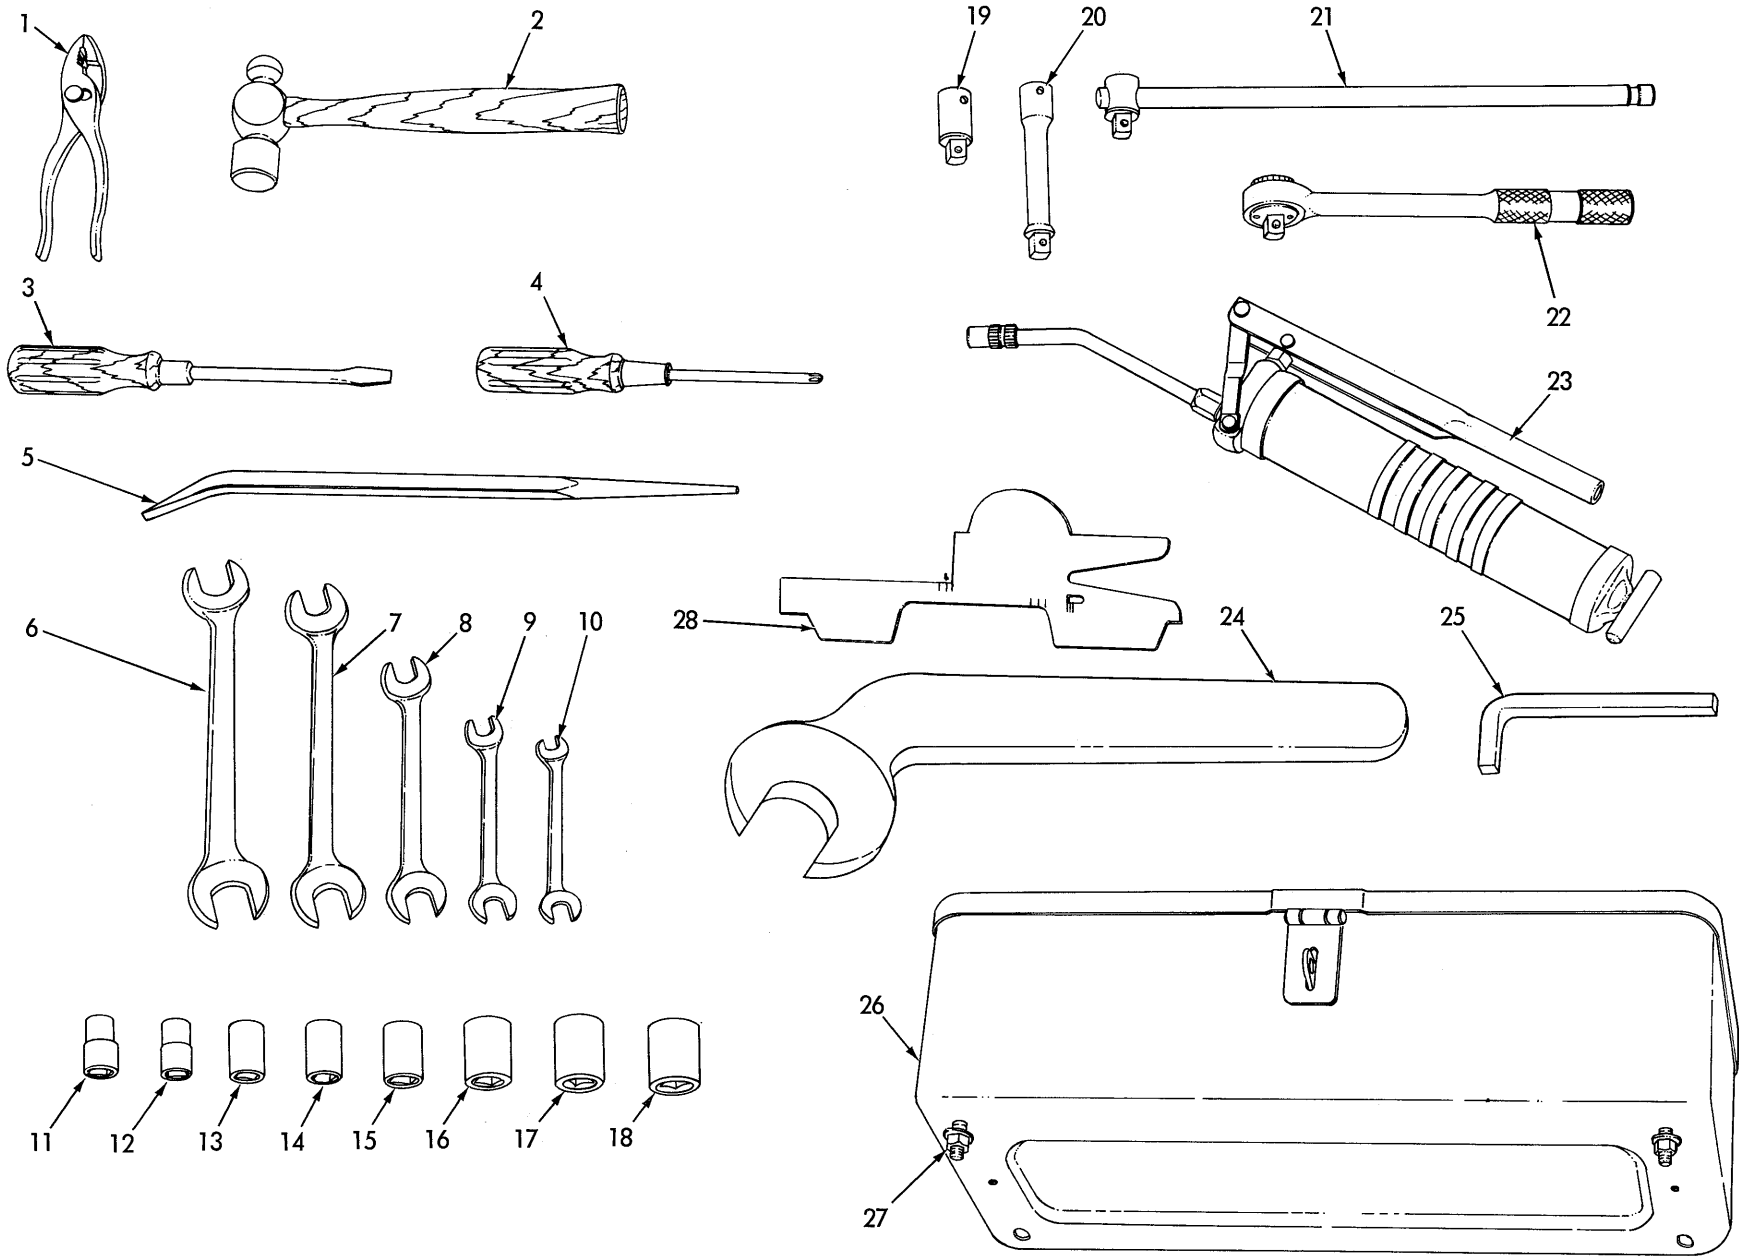


TOOLS

ITEM PART NO. QTY. DESCRIPTION

NOTE: For other recommended service tools, see Service Tool Manual Form 650850

1	012389	1	PLIERS, slip joint, 6"
2	012387	1	HAMMER, ball peen, 1 lb.
3	036268	1	SCREWDRIVER, 9-3/4" long
4	914732	1	SCREWDRIVER, Phillips #2
5	052371	1	BAR, pinch, 16" long
6	050611	1	WRENCH, open end, double head, 15 ⁰ , 15/16" and 1-1/16"
7	050610	1	WRENCH, open end, double head, 15 ⁰ , 3/4" and 7/8"
8	050609	1	WRENCH, open end, double head, 15 ⁰ , 5/8" and 3/4"
9	050608	1	WRENCH, open end, double head, 15 ⁰ , 1/2" and 9/16"
10	050607	1	WRENCH, open end, double head, 15 ⁰ , 3/8" and 1/2"
11	914709	1	SOCKET, 1/2" square drive, 1/2" hex
12	914710	1	SOCKET, 1/2" square drive, 9/16" hex
13	914711	1	SOCKET, 1/2" square drive, 5/8" hex
14	914712	1	SOCKET, 1/2" square drive, 11/16" hex
15	914713	1	SOCKET, 1/2" square drive, 3/4" hex
16	914714	1	SOCKET, 1/2" square drive, 7/8" hex
17	914715	1	SOCKET, 1/2" square drive, 15/16" hex
18	914716	1	SOCKET, 1/2" square drive, 1" hex
19	914717	1	BAR, extension, socket, 1/2" drive, 2" long
20	914718	1	BAR, extension, socket, 1/2" drive, 5" long
21	050612	1	HANDLE, socket, sliding T, 1/2" square drive, 15" long
22	914719	1	HANDLE, socket, ratchet, 1/2" square drive
23	073735	1	GUN, grease (Serviced only as a unit)
24	095120	1	WRENCH, track release adjustment (2-1/8" opening)
25	043769	1	WRENCH, drain and filling plugs (90 ⁰ , 1/2" square)
26	604943	1	BOX, tool
27	012992	4	CAPSCREW, 3/8"NF x 1-1/4"
	630753	4	WASHER, plain (heavy)
	911115	4	WASHER, plain SAE std., 3/8"
	904206	4	LOCKWASHER, 3/8"
	911041	4	NUT, 3/8"NF
28	644381	1	GAUGE, wear (Provides maximum wear tolerances for track, grouser shoes, sprockets, idlers and track rollers)

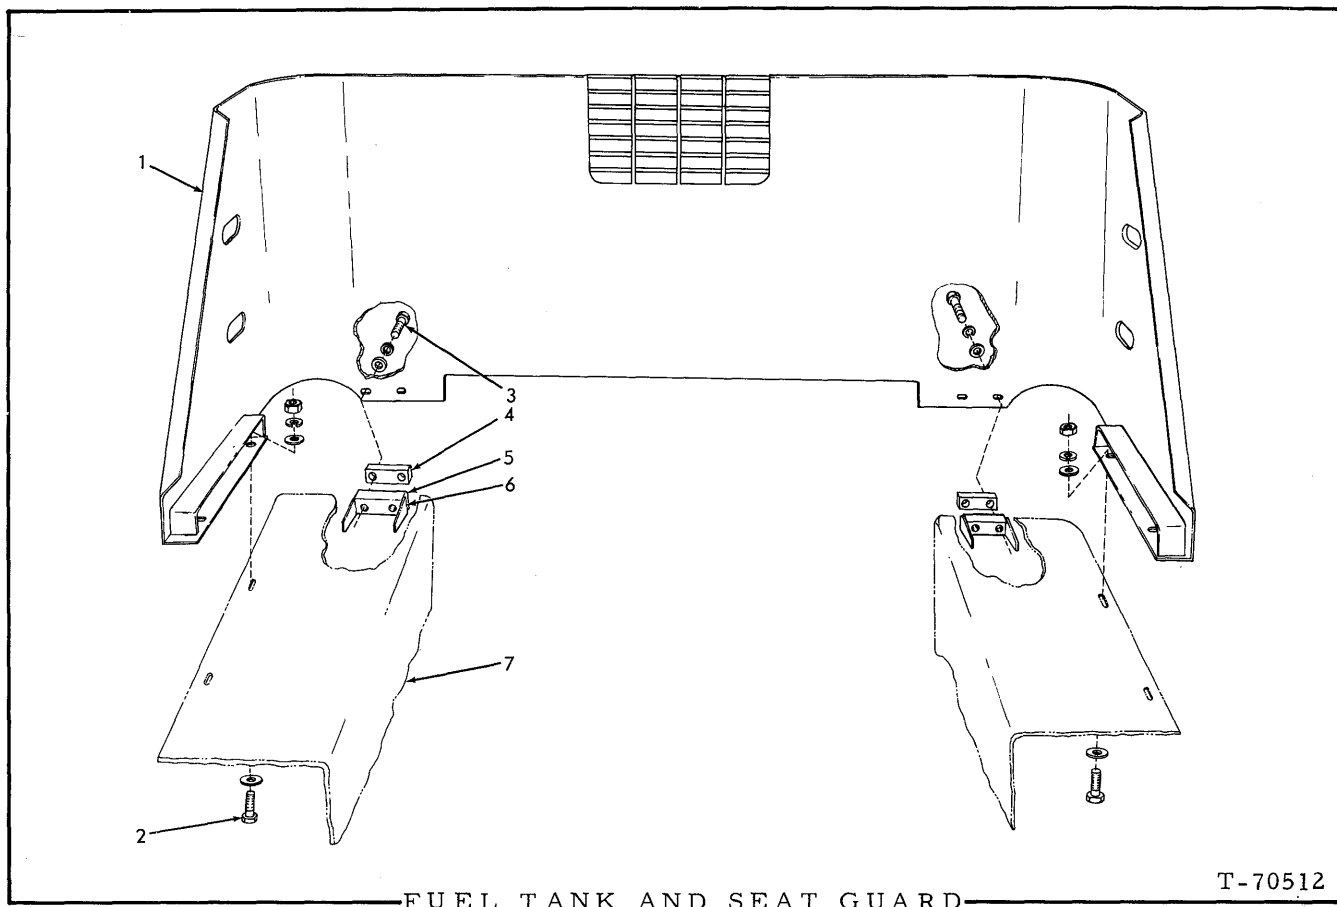

USAGE: Special equipment.

* Use prior to tractor serial No. 6310 excluding #6298
 ** Effective with tractor serial No. 6310 including #6298

ITEM	PART NO.	QTY.		DESCRIPTION
		*	**	
1	632412	1	-	GUARD
	643586	-	1	GUARD
2	035248	6	4	CAPSCREW, 5/8"NF x 2-1/4"
3	023465	-	4	CAPSCREW, 5/8"
	064810	12	12	WASHER, plain
	904209	6	8	LOCKWASHER, 5/8"
	911044	6	4	NUT, 5/8"NF
4	651185	-	2	SPACER
5	651184	-	2	BLOCK, tapped (Requires welding to fender)
6	085315	-	4	GUSSET, bracing, tapped block (Requires welding to tapped block) (Not required on units equipped with special Heavy-duty Fenders)
7	-----	-	-	FENDER (See REAR FENDERS)

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
011259...312		036203...75, 77		050610...315		056585...245	
012387...315		036268...315		050611...315		056614...241	
012389...315		036707...249 thru 313		050612...315		056863...75, 79	
012453...257		036997...125, 127		050748...117, 137, 174		057281...150	
012526...107, 223, 235		037000...175		050972...129		057407...160	
012561...231, 239		037450...107, 120, 129		051006...83		058052...311	
012586...219, 257, 274		037573...253		051112...237		058053...311	
012742...109 thru 272		037676...313		051121...237		058054...311	
012757...258		038203...249, 251, 254		051124...237		058058...311	
012762...173, 219, 229		038234...73, 81		051352...275		058135...151	
012767...221, 233, 239		040011...137		051447...311		058274...313	
012984...233, 239		040013...117		051473...199		058313...125	
012992...109 thru 315		040382...265		051496...173		058572...179	
013006...227		040475...177		051513...125, 127, 130		058614...216	
013058...97 thru 293		040503...219		051623...245		058694...117	
013059...97, 311		040831...151		051629...245		058707...183	
013465...224		041017...152		051634...239		058730...113	
013467...221, 223, 224		041250...105 thru 293		051715...99		058739...146, 147	
021527...175		041809...119		051798...241		058741...146, 147	
021711...311		041877...295		051959...245		058793...97, 123	
023465...181 thru 316		041881...312		051998...181		058825...179	
023618...241, 273		041882...311		052021...107		058841...183	
023633...15 thru 312		041883...312		052049...153		058842...183	
023755...57, 253, 311		041917...99		052070...179		058843...183	
023756...117, 146, 177		041981...69, 159, 293		052071...179		058875...183	
028847...275		042121...150		052106...97		058916...178	
028979...150		042121...152		052119...177		058936...195	
029563...312		042430...215, 272, 273		052161...181		059007...275	
031055...309		042847...312		052168...141		059010...275	
031671...297		042852...152		052191...117, 295		059017...274	
032834...303, 305		042873...245		052225...69, 153, 293		059024...178	
033060...263, 303, 305		042890...312		052253...229		059025...178	
033288...182 thru 247		042898...245		052371...315		059026...178	
034076...278		042975...119		052374...153		059035...177	
034265...134, 144, 174		043397...120		052408...181		059048...177	
034268...174		043491...239		052426...181		059064...178	
034269...134, 144, 174		043769...315		052444...179, 181		059242...113	
034440...224, 225		043881...70		052505...262		059243...113	
034674...311		043886...105, 109		052527...233, 258		059244...113	
034696...312		044249...129 thru 197		052543...185		059245...113	
035014...56, 247		044810...281		052545...185		059314...174	
035018...75 thru 261		044875...254		052611...181		059315...174	
035061...25 thru 313		044973...72 thru 305		052612...181		059328...155, 157	
035067...212 thru 297		045174...187		052639...215		059385...245	
035068...57 thru 231		045252...297		052642...215		059386...245	
035073...109 thru 301		045253...163, 167		052643...165		059387...245	
035159...160		046321...110		052662...160, 165		059403...229	
035167...59 thru 305		046419...84 thru 188		052669...129, 216		059587...231	
035188...254		047063...297		052671...216, 217		059589...155, 157	
035190...133 thru 267		047381...288, 289		052747...127		059599...241	
035220...298		047478...79, 81		052782...295		059617...239	
035221...49 thru 297		048142...281 thru 290		052791...295		059618...239	
035229...179 thru 254		048209...177		052976...173, 311		059619...239	
035236...73 thru 313		048603...83		052977...173		059698...278	
035244...59, 289		048606...83		052979...173		059699...231	
035248...53 thru 316		048608...83		053096...144		059701...231	
035249...37 thru 231		048679...239		053100...57		059705...231	
035250...37 thru 231		048681...239		053243...215		059713...241	
035278...127 thru 215		048698...155, 157		053244...215		059731...241	
035306...223 thru 226		048704...311		053251...275		059735...241	
035336...195, 206, 281		048922...282		053421...231		059737...241	
035405...311		049487...181		053616...97, 160		059738...241	
035422...221		049918...160, 181		053619...72		059739...241	
035423...237		049936...179		053670...311		059740...241	
035439...49 thru 298		049988...125, 127		053926...125, 127, 130		059741...241	
035440...181, 185		049993...125, 127, 129		054220...117		059742...241	
035525...134 thru 298		050276...160 thru 178		054305...199		059776...198	
035541...221		050288...290		054459...123		059778...198	
035712...99, 153, 191		050291...293		054890...182 thru 247		059782...198	
035733...134 thru 297		050357...173		055234...59		059783...173	
035793...177, 183		050433...215		055235...295		059813...146, 147	
035892...49 thru 216		050447...275		055416...129		059971...129	
035916...299		050594...57		055529...313		059973...129	
035979...159, 174		050595...57		055589...282		059981...129	
036032...187, 286		050607...315		055604...105		060689...107, 110	
036034...49 thru 298		050608...315		056166...227, 229		061554...187	
036039...129, 267		050609...315		056498...117		061656...107	

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
061671...107		069374...155		074245...119		081214...75, 79	
061689...107 thru 273		069377...155		074452...284, 286		081343...167	
062098...185		069378...152		074487...237		081404...295	
063222...70		069386...155, 157		074489...237		081405...247	
063889...51		069390...152		074679...113		081406...247	
063890...51		069423...152		074740...239		081614...105	
063891...51		069425...155		074814...153		081867...295	
064531...73 thru 305		069427...155, 157		074815...153		082013...193, 196	
064810...53 thru 316		069428...150		074817...153		082014...107	
065468...109		069434...150		074818...151		082067...163	
065512...117, 151		069435...150		074822...151		082189...59	
065613...57		069436...150		074838...151		082240...160	
065878...229		069441...181, 183		074841...153		082441...52	
066068...241		069442...150, 152		074842...151		082442...49	
066253...86		069443...150 thru 153		074960...261		082443...51	
066255...87		069444...151		075391...149		082444...51	
066261...86		069445...155, 157		075535...281, 283		082449...50	
066467...290		069446...155, 157		075567...239		082487...50	
066517...86		069447...155, 157		075756...127		082488...50	
066692...237		069448...155, 157		075769...87		082489...50	
066862...285		069449...152		075770...87		082490...50	
066872...85		069451...150		075771...86		082491...50	
066873...85		069452...150		075824...157		082492...50	
066874...85		069468...160		075865...311		082493...50	
066875...85		069579...178		075905...147		082505...50	
066876...85		069657...90		075950...146, 147		082608...105	
066941...231		069661...155		076469...295		082811...193	
067110...285		069674...288		076522...293		082829...97	
067112...285		069679...148		076572...295		082875...160	
067137...245		070114...311		076668...51		082884...261	
067139...245		070161...260		076684...107		082885...261	
067141...245		070176...311		076685...107		082905...193	
067177...84		070272...219, 253		076726...173		082915...233, 235	
067251...239		070285...107 thru 257		077174...312		082937...193	
067253...239		070400...219 thru 258		077241...135		083209...247	
067348...181		070403...212, 215		077285...237		083212...237	
067480...174		070467...53 thru 297		077286...237		083380...105	
067518...181		070469...52 thru 275		077287...237		083390...229	
067519...181		070590...249, 251, 253		077888...278		083399...293	
067520...181		070861...251		078206...145		083408...229	
067534...181		070960...129 thru 169		078314...146, 147		083476...152	
067535...179		071113...306, 307, 308		078402...164, 168		083477...152	
067543...148, 149, 173		071205...312		078482...313		083478...152	
067566...313		071206...312		078497...309		083479...152	
067578...178		071207...312		078508...309		083501...185	
067680...178		071209...312		078620...125, 127		083503...185	
067884...105		071210...312		078742...163, 167		083505...185	
067902...73, 81		071211...312		078810...69 thru 188		083507...182	
067913...293		071212...312		078861...152		083509...181	
067914...293		071213...311		078862...151, 155, 157		083511...185	
067916...293		071215...312		078864...150		083515...185	
067923...293		071217...311		078866...275		083516...185	
067924...293		071218...311		079234...153		083517...185	
067962...99		071219...311		079256...153		083518...181	
068388...311, 313		071221...312		079489...113		083524...97	
068389...125, 127, 217		071225...312		079660...241		083538...105	
068480...313		071226...312		079678...113		083539...105	
068487...313		071227...312		079762...113		083540...105	
068488...313		071229...311		079763...113		083542...105	
068489...313		071452...312		080043...308		083615...167	
068490...313		072366...241, 245		080052...309		083616...147	
068491...313		072438...67, 188		080166...160		083617...243	
068875...87		073106...84		080459...52		083658...97	
068876...87		073169...239		080487...185		083665...107	
068878...87		073424...219		080488...181		083676...97	
068879...87		073468...219		080669...274		083683...281	
068881...87		073539...105, 109		080758...51		083708...97	
068911...209		073733...151, 153		080867...164, 168		083710...293	
069010...140		073735...315		080882...164, 168		083778...14	
069072...185		073738...153		080939...168		083792...183	
069327...179		073764...182		080943...160		083838...261	
069328...181, 183		073765...185		080952...309		083915...57	
069357...152		073771...150		081094...69		083917...56	
069358...152		073777...155		081132...69		083955...57	
069359...150		073808...151, 153		081200...157		084042...109	
069369...150		073809...287		081201...157		084142...309	
069370...150, 152		073927...120		081202...157		084177...111	

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
084177...111		091862...163, 167		097026...83		614478...69 thru 305	
084222...97		091976...297		097088...117		617932...129, 169	
084238...283		092013...189		097324...243		619260...129	
084351...146, 147		092160...84, 86		097486...75, 79		619801...143	
084384...254		092163...57 thru 265		097494...67		620035...289	
084413...249, 251, 253		092665...105 thru 254		097507...231		620238...168	
084432...181, 185		092727...59		097512...83		620240...168	
084581...251		092793...84		097534...59		620242...168	
084593...239		092908...251		097744...281		620253...191, 206	
084612...251		093043...254		097964...219		620274...163	
084643...219		093098...253		098095...251, 254		620284...163	
084655...249, 254		093178...249, 251		098096...251, 254		620313...163, 167	
084694...255		093183...249, 251		098097...249, 254		620350...291	
084757...254		093191...251		098098...249, 254		620472...299	
084758...254		093192...253		098922...150		620474...299	
084773...258		093195...281		098955...157		620859...255	
084888...109		093196...281		098956...157		620957...164	
084895...295		093198...249		098957...155, 157		620959...164	
084897...51		093224...249		098958...153		620961...164	
084899...51		093225...251		098961...157		620964...164, 168	
084979...249, 251, 254		093241...254		098970...276		620974...163, 167	
085015...113		093260...253		098996...155, 157		620975...160	
085026...258		093273...253		098997...155, 157		620980...163, 167	
085058...255		093414...306, 307		099060...155		620981...163, 167	
085065...113		093431...241		099061...14		620982...163, 168	
085086...113		093616...308		099062...15		621039...133, 143	
085087...254		093713...151		099066...152		621171...311, 313	
085140...251		093751...59		099073...155		621186...117, 137	
085275...111		093752...59		099074...155		621201...299	
085315...316		093972...288, 289		099137...107		621262...163, 167	
085453...73, 80, 81		094115...179		099299...229		621299...241	
085616...113		094116...179		099300...229		621304...49, 53, 137	
085617...219		094117...179		099301...229		621330...150, 163, 167	
085657...309		094118...179		099302...229		621332...152	
085658...309		094167...51		099303...229		621333...152	
085659...309		094317...129		099435...15		621334...155, 157	
085680...295		094422...49, 137		099506...245		621335...155, 157	
085877...163, 167		094450...289		099575...213		621342...279	
085878...163, 167		094455...255		099803...253		621343...278	
085957...258		094467...53		099898...155, 157		621357...278	
086961...255		094483...123		099899...152, 157		621400...279	
086979...99		094527...288, 289		099910...198		621445...155, 157	
087026...237		094625...293		099911...198		621446...152	
087027...237		094630...283		099912...198		621451...134 thru 189	
087313...295		094642...83		099913...198		621501...174	
087528...115		094665...83		099914...198		621502...174	
087741...265		094890...83		099915...193		621680...150	
087742...265		095100...307		099916...198		621683...151	
087849...308		095105...307		099917...198		621775...57	
087897...306		095120...315		099963...117, 175		622001...245	
088038...83		095265...286		182763...282		622002...237	
088044...249, 254		095267...286		185502...75, 79		622080...163, 167	
088115...308		095421...67		185984...293		622136...181	
088116...308		095543...178		188436...271		622195...239	
088526...97		095575...107		196662...75, 79		622207...212	
088561...99		095779...189		196663...75, 79		622751...239	
088736...198		095869...134, 144		200479...83		622753...239	
089019...97		095951...257		203188...301, 308		622781...193	
089107...90		095980...59		204751...312		622789...198	
089229...251, 253		096046...293		208253...199		622790...198	
089230...251, 253		096056...293		208960...281, 283, 285		622806...178	
089231...251, 253		096071...293		223502...83		622807...181	
089292...285		096092...293		223585...119		622901...173	
089814...134, 144		096093...293		240962...287		622902...173	
089829...167		096208...90		600236...219 thru 275		622916...134, 170, 171	
089894...90		096211...173		603010...125		623003...177	
090020...69, 159, 187		096212...173		604398...179		623004...177	
090645...153		096310...59		604435...127		623007...177	
090655...198		096328...59		604925...125		623008...177	
090870...262		096409...69		604943...315		623130...211	
091063...301		096630...241		605782...90		623131...211	
091540...50		096815...51		605808...290		623132...211	
091572...181		096816...51		606009...160		623133...211	
091662...226		096908...295		607414...299		623136...212	
091759...221		096918...295		609264...134, 144		623137...212	
091765...221		096922...160, 163, 167		609470...253		623138...212	
091805...303, 305		096935...49		609674...253		623139...212, 216	

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
623140...212		623836...135		629542...215		630938...149	
623144...211		623837...135		629543...216		630939...148	
623151...215		623838...135		629544...216		630947...174	
623153...211		623876...177		629545...216		630951...174	
623157...211		623877...177		629548...215		631031...231	
623158...211		623878...177		629616...217		631033...231	
623164...212, 215, 216		623879...177		629664...174		631034...231	
623168...211		623880...295		629697...276		631046...147	
623179...211		623902...163, 167		629698...276		631047...147	
623180...211		623903...163, 167		629716...187		631056...169	
623181...211		623904...164, 168		629717...187		631058...169	
623188...170, 171		623905...164, 168		629721...137		631060...169	
623194...208		623927...177		629734...152		631064...168	
623195...208		623928...183		629755...72		631065...169	
623196...209		623929...177		629849...167		631066...169	
623197...208		623930...178		629943...146		631139...264	
623198...208		623932...177		630052...177, 183		631142...264	
623201...208		623933...178		630045...177, 183		631147...265	
623202...208		623983...237		630102...174		631155...143	
623203...208		624076...211		630115...259		631198...83	
623204...208		624193...211		630116...259		631199...83	
623205...209		624207...241		630117...259		631224...83	
623206...208		624416...262, 263		630118...259		631225...83	
623207...209		624426...263		630119...259		631226...83	
623210...209		624488...297		630148...285		631264...133	
623211...209		624584...69 thru 188		630151...262		631267...133, 143	
623234...189, 193, 197		624585...67, 70		630154...75, 79		631268...143	
623235...189		624669...120		630157...75, 79		631270...169	
623268...195		624670...120		630158...72		631271...133, 143	
623281...191		624815...140		630159...72		631274...137	
623335...152		624816...140		630160...75		631275...127	
623337...155		625383...275, 276		630169...129		631277...144	
623337...155		625970...275		630175...141		631277...144	
623338...157		626497...253		630207...286		631278...144	
623334...155, 157		627377...205		630280...189		631280...134, 144	
623420...204		627378...205		630290...148, 149		631283...133, 143	
623427...205		627380...205		630298...191		631284...137	
623428...205		627399...279		630311...67		631285...134, 144	
623429...205		627428...295		630363...107, 110		631286...134, 144	
623430...204		627451...164, 158, 188		630364...107, 110		631287...133, 143	
623431...204		627817...213		630437...130		631288...137	
623452...120		628001...269		630452...289		631289...137	
623466...119		628019...209		630453...288		631290...237	
623489...208		628157...169, 187		630486...165		631293...278	
623501...279		628161...199		630493...129		631347...127	
623516...177		628224...123		630498...129		631375...143	
623547...173		628225...123		630502...227, 229		631404...267	
623548...173		628226...123		630503...227, 229		631418...149	
623560...211		628227...123		630510...129		631419...148	
623612...189		628228...123		630528...204		631421...187	
623616...189		628229...123		630540...50		631425...67	
623617...189		628230...123		630546...229		631426...301, 303, 305	
623618...148, 149		628233...123		630629...264		631476...67, 70	
623636...173		628458...207		630632...107		631477...67	
623637...212		628535...216		630713...83		631492...67	
623643...231		628536...216		630753...315		631494...69	
623662...177		628571...140, 141		630787...83		631496...69	
623667...152, 157		628572...140		630795...159, 187		631498...70	
623703...152		628736...70, 159, 188		630796...137		631513...303, 305	
623704...155, 157		628737...70		630797...123		631514...303, 305	
623705...171		628738...67, 70		630811...187		631524...143	
623706...170		628748...165		630812...187		631530...148	
623707...170		628915...241		630827...83		631555...67	
623729...153		628936...241		630828...83		631564...77, 79	
623758...216		628937...241		630830...83		631566...83	
623774...212		628951...174		630833...188		631570...15	
623781...183		629040...150, 151		630836...188		631571...291	
623782...183		629041...151		630837...188		631572...291	
623783...177, 183		629188...284		630838...187		631573...291	
623784...183		629189...285		630841...187		631574...291	
623786...183		629205...278		630849...187		631643...70	
623787...174		629253...215		630850...188		631646...70	
623820...262, 263		629262...187		630851...187		631649...70	
623830...171		629454...188		630852...188		631652...70	
623831...171		629510...215		630856...188		631664...251	
623832...170		629515...217		630862...147		631682...69	
623835...135		629531...272		630917...290		631683...69	

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
631773...15		632609...140		633700...149		634650...67, 70	
631774...15		632610...139		633717...225		634661...134	
631795...259		632611...140		633720...276		634673...134	
631828...194		632615...140		633729...276		634677...287	
631869...194		632617...127		633730...276		634703...117	
631870...194		632618...140		633733...276		634758...159	
631872...194		632619...140		633747...278		634905...301	
631882...216		632620...140		633787...261		634928...301	
631883...215		632621...140		633797...194, 197		634929...301	
631935...204		632622...139		633830...160		634980...159	
631959...221, 223, 225		632623...140		633866...117		635082...164, 168	
631960...221, 223, 225		632624...140		633887...159		635084...168	
631975...69		632625...139		633888...159		637532...297	
631981...216		632628...127		633889...159		637580...295	
631987...69		632632...140		633893...160		637701...231	
632053...267		632634...139		633910...134		637709...135	
632055...231		632635...140		633917...129		637729...212, 216	
632056...231		632638...141		633952...134		637730...212, 216	
632059...69		632652...139		633953...125		637801...213	
632060...194		632673...75, 79		633955...130		637802...213	
632061...194		632710...69		633956...117		637803...213	
632062...194		632716...69		633958...129		637804...213	
632063...194		632747...69		633964...117		637805...213	
632097...57		632752...69		633965...117		637806...213	
632099...57		632756...69		633970...164		637808...213	
632112...198		632765...165		633971...161		637809...213	
632122...53		632766...69		633978...133		637810...213	
632159...217		632774...164		633979...164		637811...213	
632175...159		632927...59		633980...133		637818...213	
632179...267		632950...288		633986...133		637819...213	
632188...267		632971...295		633991...133		637820...213	
632190...221		632975...243		633992...278		638026...211	
632191...221		632976...243		633995...194		638027...211	
632201...221		632982...237		633996...117		638028...211	
632208...221		632986...189		634002...130		638243...281	
632209...221		633010...49		634013...125		638278...117	
632226...279		633013...303		634015...125		638279...117	
632257...259		633014...303		634016...125		638282...282	
632258...259		633023...305		634017...130		638283...281, 283	
632274...267		633024...305		634018...125		638320...135	
632282...159		633025...305		634022...278		638321...135	
632323...235		633207...160		634023...278		638338...217	
632391...272		633216...159		634071...129		638351...269, 271	
632412...316		633236...243		634074...69		638352...141	
632414...272		633262...265		634080...159		638354...269	
632451...217		633266...243		634133...133, 143		638363...269	
632452...125, 127		633268...239		634255...303, 305		638369...269	
632478...113		633269...239		634256...301, 303, 305		638370...269	
632482...235		633270...243		634257...301, 303, 305		638371...269	
632489...189		633310...194		634262...303, 305		638420...269, 271	
632502...265		633323...181		634276...146		638421...269, 271	
632503...265		633337...244		634277...146		638422...269, 271	
632516...117		633345...244		634287...146		638423...269	
632517...163		633346...244		634339...123		638424...269	
632547...134, 144		633355...243		634340...123		638425...269	
632556...146		633356...244		634342...123, 139		638426...269	
632559...146		633365...243		634343...123		638427...269	
632580...231		633375...244		634344...123		638428...269	
632581...139		633380...243		634346...123		638429...269	
632582...139		633384...279		634347...123		638430...269	
632583...139		633385...194		634348...123		638431...269, 271	
632584...139		633390...243		634349...123		638432...269, 271	
632585...139		633446...244		634350...123		638433...269	
632586...139		633453...49		634351...123		638434...269	
632587...140		633454...243		634352...123		638435...269	
632588...139		633458...52		634354...123		638468...269	
632589...140		633473...52		634355...123		638561...209	
632590...139		633481...267		634356...123		638562...209	
632591...139		633486...181		634421...145		638563...209	
632592...140		633487...181		634424...145		638600...212	
632595...140		633509...105		634425...145		638622...119	
632600...139		633519...57		634426...145		638623...120	
632601...139		633610...217		634442...75, 79		638648...119	
632605...140		633625...99		634443...75		638649...119	
632606...139		633626...105, 109		634446...75, 79		638650...119	
632607...140		633629...290		634449...134		638727...75	
632608...127		633653...295		634646...145		638791...115	

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
638792...115		640722...139		642713...226		644354...199	
638796...194, 245		640727...290		642719...225		644381...315	
638818...212		641045...125		642720...225		644382...241	
638848...140		641046...125		642744...57		644403...139	
638849...139		641048...125		642746...286		644415...275	
638868...145		641128...279		642749...57		644416...275	
638878...123		641133...233		642767...219		644463...216	
638887...123		641148...209		642880...212		644530...59	
638911...193		641356...160, 163, 167		642881...113		644603...206	
638953...164, 168		641427...219		642921...107		644604...206	
638956...247		641474...272, 273		642938...227		644611...191	
638957...247		641481...221		642972...287		644612...134, 170, 171	
638958...215		641485...133, 143		643007...216		644616...278	
638968...219		641499...297		643019...215		644619...278	
638981...272, 273		641547...113		643024...216		644633...70	
638997...247		641548...113		643032...215		644652...119	
638998...247		641557...119		643040...160		644713...53	
639017...245		641567...145		643042...160		644816...195	
639018...245		641625...193		643045...160		644827...195	
639021...231		641631...25		643046...160		644828...195	
639025...245		641631...25		643053...215		644897...199	
639026...245		641643...123		643059...150		644898...199	
639027...185		641669...189		643070...175		644913...199	
639037...159		641689...194		643138...212		645028...77, 80	
639058...247		641700...195		643225...107		645033...77	
639061...188		641722...193		643244...56		645045...69	
639062...188		641733...69		643257...187		645075...75, 79	
639067...281		641754...189		643274...216		645082...189	
639087...175		641758...195		643275...183		645093...137	
639088...175		641760...194		643276...183		645101...194, 197	
639138...159		641771...193		643302...187		645109j...198, 199, 201	
639152...107		641776...189		643349...59		645236...177	
639216...105		641800...257		643350...59		645237...207	
639237...99		641877...193		643397...105		645239...189	
639238...97		641913...257		643404...113		645240...137	
639314...281		641914...257		643421...105		645320...178	
639388...283, 285, 290		641925...260		643438...199		645482...109	
639459...216		641926...260		643449...199		645534...221	
639640...119		641951...109		643473...105		645539...105	
639699...57		641976...257		643491...199		645541...113	
639750...120		641994...257		643492...199		645660...278	
639751...120		642031...233		643494...199		645784...243	
639752...120		642032...233		643496...199		645825...97	
639818...267		642033...233		643534...199		645829...90	
639828...297		642034...233		643544...199		645913...110	
639850...193		642035...233		643545...199		645920...243	
639858...289		642052...257		643550...206		645933...243	
639859...298		642057...109		643551...199		645934...243	
639862...298		642159...263		643552...199		645942...243	
639905...297		642165...70		643553...199		645947...243	
639914...119		642204...191		643558...105		645948...115	
639925...119		642221...257		643570...193		645949...115	
639926...119		642222...257		643573...193, 197		645950...115	
639934...119		642224...257		643586...316		645951...115	
639936...120		642240...301		643595...134		645952...115	
639941...119		642289...303, 305		643606...193, 197		645976...237	
639945...119		642296...99		643723...84		645984...243	
639967...278		642298...109		643740...173, 212		646045...231	
639974...129		642301...97		643744...90		646091...174	
639975...269		642305...175		643832...275		646092...174	
639996...120		642339...109		643844...274		646093...175	
639997...119		642352...109		643868...275		646094...175	
639998...119		642392...257		643882...275		646108...223	
640070...239		642441...57		644006...84, 288, 289		646127...191	
640083...175		642448...177		644022...301		646140...223	
640096...139		642498...269, 271		644023...301		646155...223	
640493...129		642499...269, 271		644133...83		646157...223	
640636...25, 134, 144		642500...269, 271		644136...212		646162...223	
640675...281		642586...173		644258...117		646192...223	
640676...281		642589...225		644275...117		646230...289	
640677...281		642590...225		644292...119		646256...160	
640702...283, 285		642680...144		644296...119		646299...59	
640703...283, 285		642685...134, 144		644297...119		646300...59	
640704...283, 285		642686...133, 143		644298...119		646303...49	
640706...290		642687...143		644299...117		646311...170, 171	
640707...290		642705...224		644300...117		646322...49	
640710...281		642709...224		644324...164		646328...137	

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
646328...137		650144...271		651570...203		657564...267	
646329...137		650145...271		651571...203		657636...273	
646330...133, 143		650146...271		651572...203		657639...265	
646331...143		650147...271		651573...203		658055...231	
646345...191		650154...244		651574...203		658056...231	
646352...59		650155...243		651575...203		658293...289	
646353...59		650156...243		651576...203		658348...287	
646825...120		650170...244		651577...203		658349...288	
646851...145		650171...243		651580...164, 168		658423...287	
646892...109		650172...243		651630...287		658572...259	
646940...123		650189...201, 202		651725...164, 168		658573...259	
646941...123		650193...201, 202		651725...164, 168		658574...259	
647080...231		650228...56		651894...279		658737...216	
647139...285		650273...211		651923...279		659002...286	
647203...244		650274...211		653763...109		659003...286	
647206...243		650275...211		653764...109		659075...67	
647209...243		650276...211		653773...211		659195...75, 796	
647212...243		650299...290		653929...201, 202		659465...134, 144	
647215...243		650301...75, 79		653930...201, 202		659763...243	
647321...152, 157		650302...75, 79		653931...201, 202		659770...243	
647332...173		650380...251		*653932...201, 202		661676...203	
647414...194, 197		650394...67		*653934...201, 202		661676...203	
647893...235		650399...140		653936...201, 202		*827650...201, 202	
647894...235		650622...177		653937...201, 202		900576...51	
647899...235		650672...201, 202		654074...201		900585...204	
647900...235		650673...201, 202		654089...201		900764...263, 303, 305	
647908...160, 168		650674...201, 202		654180...193, 201		900801...188, 269, 293	
648231...59		650675...201, 202		654435...173		900802...129, 165, 297	
648262...291		650676...201, 202		654479...273		900805...125, 127, 129	
648294...262, 263		650677...201, 202		654480...273		900806...14 thru 309	
648338...276		650678...201, 202		654483...273		900807...159, 293	
648406...213		650679...201, 202		654484...273		900808...15 thru 293	
648630...260		650741...168		654544...8		900817...75, 80	
648716...272		650742...164, 168		654652...284		900818...103 thru 283	
648717...273		650743...164, 168		654656...187		900819...57	
648741...97		650744...164, 168		654930...298		900820...223	
648754...97		650745...155, 157		654940...175		900821...233	
648943...275		650754...227		654986...285		900938...123	
648954...275		650755...227		654987...284		900942...67 thru 169	
648956...187		650756...227		654988...284		900970...67, 70, 194	
648970...261		650757...227		654989...284		901165...103	
648996...275		650758...227		654990...284		901171...64	
648997...275		650759...227		654991...284		901226...119	
648998...275		650811...183		655044...81		901310...64, 86	
648998...275		650813...177		655045...81		901489...174	
649038...215		650841...233		655064...80		901651...167 thru 289	
649107...235		650848...233		655096...81		901652...289	
649115...267		650886...77, 79		655102...73		901661...194	
649120...272		650892...79		655108...73		901668...74	
649123...298		650901...298		655139...81		901765...174	
649125...297		650911...79		655140...77		901781...87	
649126...297		650914...297		655189...262		903574...90	
649130...267		650916...297		655193...235		903584...113	
649131...264		650918...297		655253...81		903625...198	
649155...219		650956...261		655258...80		903628...281, 283	
649226...265		650959...75		655464...237		903629...43	
649412...127		650982...262		655497...239		903630...231	
649455...249, 251, 254		651042...77		655510...14		903772...113, 115	
649660...155		651079...263		655528...245		903773...113, 115	
649678...241		651155...111		655564...201		903775...59 thru 295	
649679...241		651158...111		655743...205		904002...312	
649807...109		651184...316		655782...196		904003...212, 216	
649859...267		651185...316		655820...243		904006...312	
649904...97		651342...227		655822...243		904024...64	
650131...271		651370...243		655826...243		904203...64, 86	
650132...271		651409...173		655987...245		904204...24 thru 299	
650133...271		651431...187		655988...245		904205...25 thru 293	
650134...271		651432...206		655989...247		904206...20 thru 315	
650135...271		651451...208		655990...247		904207...41 thru 293	
650136...271		651464...208		655993...245		904208...18 thru 313	
650137...271		651467...212		655994...245		904209...53 thru 316	
650138...271		651538...244		655995...247		904210...275, 276	
650139...271		651564...203		655998...197		904224...16, 93, 95	
650140...271		651565...203		655999...196, 201		904260...117	
650141...271		651566...203		656151...188		904271...103	
650142...271		651567...203		656333...107		904273...75, 79	
650143...271		651569...203		656679...202, 211		904369...107 thru 273	
				*653933...202		*663123...203	
						663124...203	

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
904516...18		912267...201		915923...83		919079...7	
904564...204		912298...129		915943...97		919080...6,7	
904706...109		912301...291		915969...45		919081...7	
905121...129, 293		912331...293		915987...37 thru 96		919082...7	
905122...97		912333...47, 93, 95		915989...38 thru 187		919127...49	
905123...159, 187, 188		912415...16, 55, 101		915990...101		919128...52, 177, 206	
905129...22		912476...37		916001...42		919134...16 thru 203	
905347...173 thru 235		912726...311		916009...14 thru 96		919136...104	
905357...237, 239, 245		912731...282		916146...164, 168, 299		919140...288, 289	
905362...123		912739...282		916202...123		919143...6,7	
905655...290		912770...311		916222...201, 202		919144...6,7	
905845...61		912789...77, 295		916225...89		919155...7	
906960...295		912808...241		916227...185		919156...6,7	
907013...36		912900...211		916268...104, 285		919158...6	
907070...27, 231		912915...105		916271...101		919171...84, 288, 289	
907154...83		913077...275, 276		916272...28		919172...55	
907620...129, 135		913168...42		916274...101		919174...75, 79	
907859...22		913280...14, 15		916284...24, 77		919175...7	
908944...204, 208, 212		913471...293		916286...55		919180...119, 123	
909091...140		913472...293		916310...61		919194...6,7	
909367...290		913475...36		916311...20 thru 95		919196...6,7	
910005...198		913533...213		916314...37, 89		919204...83	
910006...311		913544...28		916316...18		919205...55, 170, 171	
910123...33, 89		913636...52 thru 159		916317...18 thru 95		919206...52	
910141...36		913706...36		916319...70		919207...7	
910195...74, 96		913789...295		916320...89, 93, 95		919223...201, 202	
910230...97		913798...97		916321...20		919224...20 thru 103	
910243...119		913830...70, 125		916322...93, 96		919218...7	
910244...29 thru 297		914105...269, 271		916323...47		919219...213	
910255...159 thru 293		914197...269		916326...37		919226...100	
910257...163, 167		914339...195		916424...70		919228...61	
910267...70		914378...59		916532...269, 271		919229...17, 20	
910302...164 thru 257		914392...103		916555...276		919230...18	
910320...216		914399...93, 95		916591...69		919231...93, 95	
910323...33		914465...140 thru 313		916897...160, 164, 168		919244...83	
910324...93 thru 104		914588...101		916965...267		919253...7	
910325...31		914593...119		916995...163, 167		919277...7	
910334...286		914659...63		917014...33, 35		919278...6,7	
910335...42, 269		914686...54		917023...35		919281...6,7	
910510...89		914687...146, 147		917125...169		919282...7	
910819...89		914709...315		917151...206		919288...54	
910847...17, 212, 216		914710...315		917157...237		919303...63	
910867...261		914711...315		917260...72		919331...267	
910879...15		914712...315		917409...33, 35		919342...134 thru 197	
910880...64		914713...315		917425...71		919464...174	
910916...219 thru 309		914714...315		917463...189		919615...134 thru 207	
911021...22		914715...315		917466...119		919763...67	
911024...51, 129, 284		914716...315		917554...17		919766...61	
911025...110 thru 133		914717...315		917555...38, 39		919778...61	
911026...262		914718...315		917626...89		919797...63	
911028...73 thru 297		914719...315		917666...81		919800...63	
911029...57, 253, 255		914732...315		917673...16 thru 35		919801...43	
911034...67		914782...113		917735...123		919820...7	
911035...70 thru 254		914847...28 thru 95		917806...63, 64		919821...7	
911040...77 thru 299		914879...129		917809...63, 64		919840...16 thru 204	
911041...49 thru 315		915274...293		917841...36		919840...16 thru 204	
911043...52 thru 305		915275...90, 241		917883...284		920131...103	
911044...53 thru 316		915343...37, 89		917936...254		920132...24	
911045...109 thru 260		915399...84		918111...70		920221...6,7	
911046...107 thru 257		915406...31		918210...290		920222...7	
911047...219, 253, 309		915408...64, 90, 101		918390...123		920242...63	
911048...67 thru 209		915432...87		918395...101		920301...7	
911049...51, 286		915486...86		918683...103		920302...7	
911051...217		915488...86		918697...47		920303...6,7	
911057...312		915500...163, 167		918740...101		920333...16 thru 204	
911058...312		915504...275		918794...64		920333...16 thru 204	
911100...185		915556...86		918801...61		920335...211	
911114...24 thru 119		915557...86		918850...16, 61		920344...6,7	
911115...37 thru 315		915625...99		918851...16, 27, 45		920388...6	
911168...49 thru 254		915692...97		918887...31 thru 89		920412...6	
911171...174		915739...117, 133		918888...47		920416...16, 100, 101	
911233...164, 168		915797...261		918951...45, 47		920509...6	
911982...209		915807...31		919062...49 thru 137		920512...6	
912069...35		915813...25		919063...55 thru 143		920513...7	
912178...293		915888...113		919073...7		920514...6	
912192...73		915903...201, 202		919075...7		920525...101	
912226...83		915922...83		919076...6,7		920541...74, 133	

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
920541...74, 133		923268...117		4051485...55		4331522...18	
920569...7		923280...33		4052167...91		4335022...18	
920613...80		923376...204		4052173...55		4335352...45	
920690...59, 104		923379...143, 145		4052174...55		4335600...42	
920721...6		923408...38, 39		4053409...47		4335610...41, 42	
920722...104		923548...204, 213		4053410...47		4335666...45, 47	
920732...7		923560...85, 164, 168		4054566...103		4335669...36	
920736...6		923574...33, 145, 205		4054568...103		4336491...15, 20	
920743...267		923575...206, 212		4054569...103		4336646...32	
920836...7		923576...93, 95		4055031...103		4336897...25	
920847...7		923585...140, 239		4055032...103		4337015...61	
920849...7		923586...25		4055033...103		4337019...61	
920850...6, 7		923587...145		4055034...103		4337022...61	
920852...6, 7		923605...95		4055565...55		4337023...61	
920855...6, 7		923645...63, 203		4055913...55		4337729...99	
920857...7		923664...137		4055971...47		4339021...47	
920858...6, 7		923738...31		4056632...55		4339378...72	
920862...6, 7		923813...57		4058830...103		4346208...71	
920864...7		923814...140		4058831...103		4347751...89	
920865...7		923818...237		4059373...50		4347752...89	
920867...7		923821...117, 181		4113897...17		4347897...22	
920868...7		923824...195		4115287...63		4348268...45	
920869...7		923827...241		4119937...17, 20		4348269...45	
920872...6		923935...89		4142263...103		4348270...45	
920874...7		923936...25		4250898...23		4348440...31, 32	
920877...7		923947...206		4251601...35		4348502...97	
920879...7		924169...271		4251974...24		4348502...97	
920882...6, 7		924226...201, 202		4251984...43		4348682...42	
921042...7		924227...201, 202		4252682...20		4348683...42	
921073...89		924306...279		4253106...47		4348684...42	
921113...286		924320...279		4253190...32		4348691...36, 42	
921117...137		924416...203		4253195...45		4349984...43	
921160...199		924463...279		4253270...71		4349984...43	
921193...287		924541...279		4253286...61		4354449...18	
921279...170, 171		924548...279		4253317...117		4354537...101	
921303...205		924550...279		4253318...91		4354568...42	
921330...211		924551...279		4253464...93, 95		4354573...42	
921401...139, 140		924554...279		4253749...19		4355843...61	
921402...177		924694...14		4253751...45		4361551...75, 79	
921409...206		924822...17		4253862...99		4361740...89	
921469...211		924950...286		4253863...99, 293		4361829...36	
921510...137		924956...79		4253871...91		4362310...22	
921520...33		924959...286		4254100...89, 91		4362458...101	
921556...259, 297, 313		924989...203		4254295...31		4362726...33, 35	
921573...177		925104...278		4254580...104		4364166...35	
921731...173		925105...278		4254654...199		4364404...33	
921865...29		925106...278		4254670...89		4364556...41	
921884...140		925107...278		4254742...35		4365129...37	
921911...103, 137		3001737...204		4254806...93, 95		4365627...35	
921912...134 thru 295		3002757...205		4254873...28, 117		4366243...71	
921913...109 thru 208		3014007...204		4254891...20		4366244...72	
921914...134, 144, 212		3015654...145		4254948...91		4366461...18	
921915...105, 109		3015656...145		4254951...104		4367090...33	
921916...75, 79		3015658...145		4255010...104		4367187...74, 96	
922042...7		3015657...145		4255011...29, 101		4368154...33, 35	
922044...7		3015666...145		4255017...61		4368204...18	
922065...37		3015667...145		4255020...61		4368205...18	
*922141...7		3018397...145		4255031...89, 199		4368206...18	
922143...7		3021048...311		4255170...103		4368323...35	
922151...7		3039053...199		4255171...103		4369002...18	
922194...90		4001318...31		4255179...63		4369712...35	
922207...6		4020145...63		4255286...103, 104		4369746...35	
922208...7		4021227...65		4255287...103, 104		4369751...35	
922221...7		4026447...20		4255334...24		4371021...45, 47	
922290...93, 95		4040013...55		4255335...24, 134, 144		4371027...90	
922364...7		4040383...99		4255338...91		4371036...45	
922365...6		4040384...99		4255351...29		4371107...71	
922366...7		4040385...97		4255361...29		4371118...33	
922372...7		4040386...97		4255363...93, 95		4371119...35	
922406...6		4041092...91		4255511...43, 45		4371160...93, 96	
922510...20		4041097...91		4255631...43		4371253...41	
922741...35		4041103...45		4255665...61		4371255...37	
922884...24		4042081...99		4303038...31		4371270...38, 39	
922935...189, 207		4047783...135		4303694...25		4371289...37	
922963...6		4048000...135		4310257...18, 105, 109		4371300...38, 39	
922981...197		4051483...54		4313015...101		4371345...41	
923178...59		4051484...54		4317554...101		4371359...18	

*922142...7

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
4371444...20		4377267...63		4386457...23		4387196...55	
4371445...20		4377276...35		4386458...23		4387259...95	
4371503...22		4377278...35		4386473...23		4387294...89	
4371707...97		4377455...93, 95		4386474...23		4387301...63	
4371714...61		4377541...31		4386475...23		4387385...63	
4371715...61		4377645...93		4386476...23		4387469...31	
4371716...61		4378020...65		4386480...23		4387474...103	
4371717...61		4378027...63		4386481...23		4387509...25	
4371718...61		4378031...65		4386482...23		4387560...29	
4371719...61		4378032...65		4386483...23		4387605...91	
4371720...61		4378033...65		4386495...93, 95		4387606...91	
4371721...61							
4371740...33		4378112...101		4386509...17		4387607...89	
4371742...193, 196		4378307...45		4386511...16		4387609...91	
4372325...45, 47		4378558...41, 42		4386512...16		4387647...63	
4372421...91		4378843...93, 95		4386513...17		4387675...29	
4373610...45		4379038...61		4386516...17		4387697...74	
4373612...45		4379070...37		4386546...63		4387723...20	
4373613...45, 47		4379076...61		4386547...63		4387807...104	
4373614...45		4379141...18		4386549...63		4387943...25	
4373619...17		4379178...18		4386550...63		4387976...28	
4373716...24		4379198...18, 24		4386551...63		4387993...90	
		4379268...47		4386597...28		4388109...55	
4374018...31		4379269...47		4386598...28		4388133...41	
4374127...41		4379415...38		4386601...63		4388154...33	
4374129...41, 42		4379610...39		4386602...63		4388142...19	
4374547...41		4379737...64		4386617...64		4388146...19	
4374735...45		4379813...61		4386624...27		4388147...93	
4375682...91		4380198...65		4386625...27		4388148...64	
4375686...91		4380652...65		4386628...27		4388217...22	
4375691...91		4385301...27		4386642...43		4388240...89	
4375694...91		4385469...71		4386650...25		4388244...22	
4375865...71		4385485...18		4386651...24		4388253...89	
4376277...31		4385536...41		4386653...27		4388254...22	
4376278...31		4385537...41		4386654...27		4388259...33	
4376294...41		4385543...45		4386711...35		4388265...8	
4376398...89		4385715...41		4386770...61		4388324...22	
4376483...101		4385778...37		4386771...55		4388326...90	
4376484...27		4385781...37		4386772...55		4388339...89	
4376497...27		4385796...37		4386773...61		4388359...19	
4376520...101		4385955...41		4386774...55		4388375...19	
4376527...100		4385961...42		4386776...31		4388428...32	
4376529...61		4385976...42		4386779...101		4388434...90	
4376538...31		4386041...74		4386787...31		4388448...18	
4376590...35		4386137...101		4386788...31		4388454...18	
4376591...35		4386149...24		4386790...27		4388463...93	
4376596...33		4386196...96		4386791...27		4388464...95	
4376598...33		4386198...103		4386824...89		4388485...41	
4376599...35		4386199...103		4386826...33, 143		4388486...39	
4376602...35		4386200...103		4386827...100		4388488...41	
4376603...33		4386223...95		4386837...65		4388501...93, 95	
4376604...35		4386319...14		4386855...89		4388520...27	
4376605...33, 133		4386320...14		4386856...96		4388521...27	
4376609...20		4386359...23		4386862...91		4388551...24	
4376627...36		4386360...23		4386864...43		4388563...101	
4376667...35		4386372...19		4386874...23		4388774...45	
4376671...33		4386373...19		4386875...23		4388809...47	
4376702...35		4386374...19		4386876...23		4388810...47	
4376749...18, 47		4386375...19		4386877...23		4388836...47	
4376792...19		4386376...19		4386878...23		4388848...47	
4376804...19		4386392...32		4386879...35		4388889...33	
4376813...43		4386395...32		4386881...101		4388940...47	
4376891...71		4386398...32		4386891...101		4388975...45	
4376892...71		4386401...32		4386894...101		4389036...101	
4376991...43		4386405...31		4386901...28		4389040...18	
4376986...19		4386406...31		4386924...91		4389045...96	
4377037...38		4386413...27		4386927...91		4389051...55	
4377038...38		4386414...31		4386941...28		4389052...22	
4377039...38, 39		4386419...19		4386948...74		4389054...38	
4377050...39		4386421...28		4386957...93, 95		4389055...33	
4377054...39		4386433...63		4387026...25		4389058...17	
4377120...18		4386434...63		4387031...23		4389108...33	
4377121...133, 143		4386435...63		4387032...23		4389113...54	
4377122...33		4386436...63		4387050...91		4389129...43	
4377201...41		4386453...23		4387051...91		4389141...35	
4377248...93, 95		4386454...23		4387129...55		4389172...55	
4377253...55		4386455...23		4387180...25		4389201...25	
4377266...64		4386456...23		4387181...25		4389231...17	

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
4389232...16		4389821...27		4390117...31		4391186...22	
4389233...17		4389839...43		4390170...27		4500230...17	
4389234...17		4389840...43		4390175...19		4506607...18, 174	
4389235...16		4389841...43		4390195...41		4507359...64	
4389289...93, 95		4389849...37		4390217...31		4507415...64	
4389291...93, 95		4389910...17, 25		4390254...31		4509035...41, 42	
4389292...17		4389911...17		4390270...31		4511213...65	
4389293...27		4389923...17		4390276...8		4511243...65	
4389294...27		4389924...17		4390462...18		4513411...133, 143	
4389317...31		4389943...17		4390503...20		4513810...89	
4389359...91		4389943...17		4390598...9		4513810...89	
4389393...36		4389960...28		4390599...19		4640973...97	
4389397...27		4389961...28		4390619...65		4640975...99	
4389467...61		4389965...28		4390625...63		4640976...99	
4389485...61		4389986...33		4390661...31		4640978...99	
4389547...18		4389992...16		4390675...27		4660358...17	
4389599...35		4390011...19		4390677...27		4660389...17	
4389645...31		4390043...27		4390678...27		4660423...41	
4389685...27		4390068...19		4390679...27		4660440...17	
4389732...41		4390075...38		4390734...27		4660492...20	
4389784...20		4390076...41		4390887...90		4660677...91	
4389809...18		4390078...38		4391160...28		4751643...89	
4389810...18		4390115...8		4391161...28		4752075...22	